


Cigar Lighter Housing Replacement


Tools Required

[J 42059](#) Cigar Lighter housing Remover


Removal Procedure

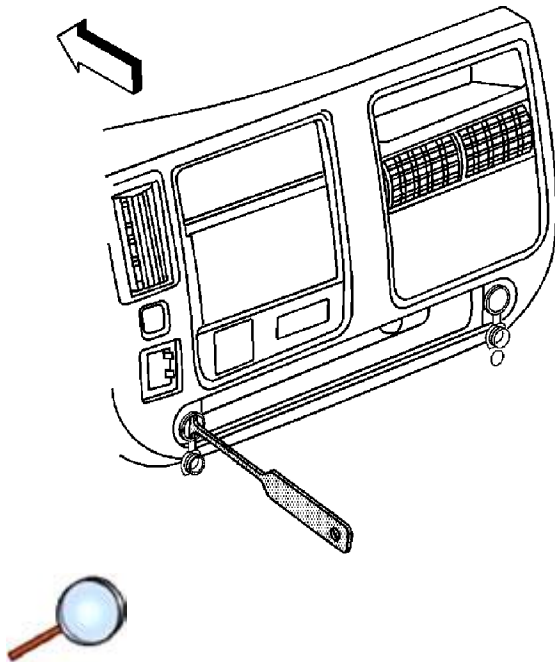

1. Remove the cigar lighter fuse.
2. Remove the cigar lighter element.
3. Using [J 42059](#) , perform the following procedure to remove the cigar lighter housing:
 - 3.1. Place one side of the T-portion of [J 42059](#) into the tab window in the lighter housing.
 - 3.2. Rotate the tool into the opposite tab window in the lighter housing.
 - 3.3. Once [J 42059](#) is engaged in both tabs, pull the lighter housing straight out.

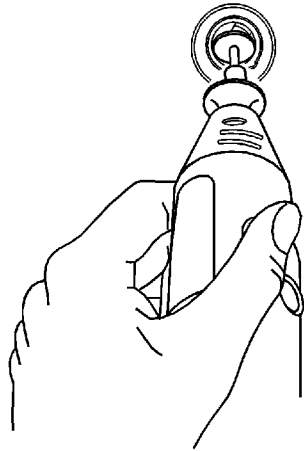


4. If J 42059 tool fails to release the lighter socket from the retainer, perform the following alternate method:
 - 4.1. Insert a small grinding tool with a cutoff wheel into the socket.
 - 4.2. Remove the plastic latches in the 3 mm (0.11 in) square windows.
 - 4.3. Use the [J 42059](#) as directed above to remove the socket.
5. Remove the tool from the lighter housing.

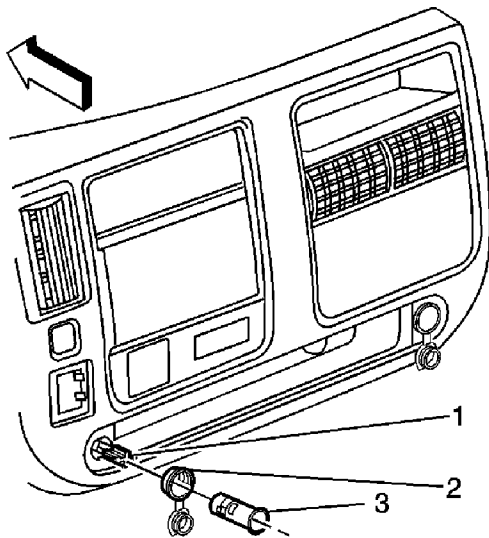

6. Pull the cigar lighter housing (3) and the cigar lighter retainer (2) out of the trim plate.
7. Disconnect the electrical connector (1) from the housing.
8. Remove the retainer from the housing.

Installation Procedure

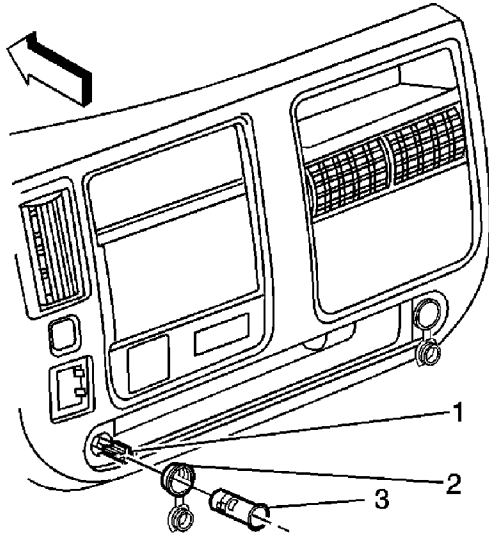

1. Install the cigar lighter retainer (2) to the trim plate by pressing the retainer into place until fully seated.
2. Connect the electrical connector (1) to the housing.
3. Align the housing key to the slot in the retainer ring (2).
4. Press the housing into place until the housing is fully seated.
5. Install the cigar lighter fuse.

cardiagn.com