FRAME AND BUMPERS

CONTENTS

page

FRAME **1**

FRAME

INDEX

page

REMOVAL AND INSTALLATION
FRONT TOW HOOK BRACKET 1
REAR TOW HOOK BRACKET 1

REMOVAL AND INSTALLATION

FRONT TOW HOOK BRACKET

REMOVAL

(1) Hoist and support vehicle. Refer to Group 0, Lubrication and Maintenance, for proper lifting procedures.

(2) Remove bolts holding front tow hook bracket to lower radiator crossmember.

(3) Separate front tow hook bracket from vehicle.

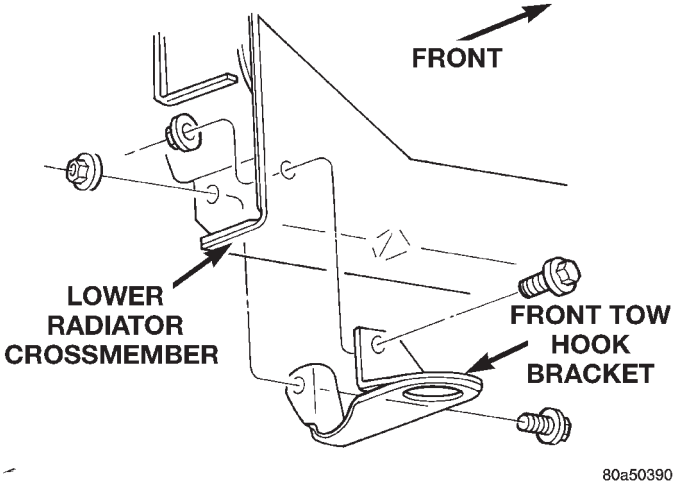

Fig. 1 Front Tow Hook Bracket

INSTALLATION

(1) Position front tow hook bracket to vehicle.

(2) Install bolts to hold front tow hook bracket to lower radiator crossmember.

(3) Lower vehicle.

REAR TOW HOOK BRACKET

REMOVAL

(1) Hoist and support vehicle. Refer to Group 0, Lubrication and Maintenance, for proper lifting procedure.

(2) Remove bolts holding rear tow hook bracket to rear frame rail (Fig. 2).

(3) Separate rear tow hook bracket from vehicle.

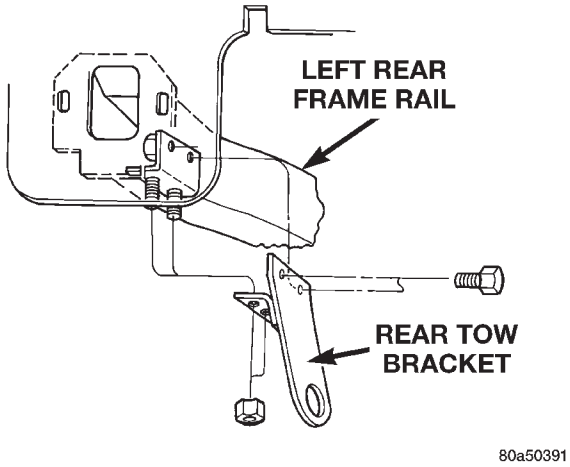

Fig. 2 Rear Tow Hook Bracket

INSTALLATION

(1) Position rear tow hook bracket on vehicle.

(2) Install bolts to hold rear tow hook bracket to rear frame rail.

(3) Lower vehicle.