VEHICLE SPEED CONTROL SYSTEM

CONTENTS

page

REMOVAL AND INSTALLATION
SPEED CONTROL SERVO 1

REMOVAL AND INSTALLATION

SPEED CONTROL SERVO

REMOVAL

(1) Disconnect battery.
(2) Remove battery Thermoguard.
(3) Remove battery hold down and battery.
(4) Remove power distribution center from back of battery tray.
(5) Disconnect speed control cable from throttle body.
(6) Remove screw holding support strut to the front of battery tray.
(7) Remove top two battery tray fasteners. Loosen bottom two battery tray fasteners.
(8) Slide battery tray up, disconnect speed control servo wiring and vacuum harness from servo (Fig. 1).
(9) Remove attaching nuts and remove speed control assembly from bottom of battery tray.

INSTALLATION

(1) For installation reverse above procedures. The servo wiring connector should point towards the left front corner of the vehicle with battery tray installed. Tighten nuts to 7 N·m (60 in. lbs.) torque.

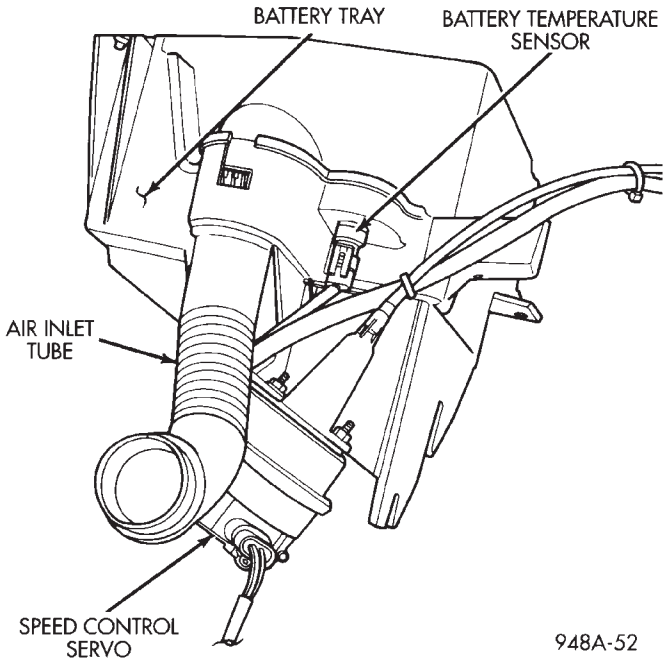

Fig. 1 Battery Tray and Speed Control Servo