Mazda3 F/L

Wiring Diagram

FOREWORD

This wiring diagram incorporates the wiring schematics of the Mazda3 Face-Lift and available optional equipment. Actual vehicle wiring may vary slightly depending on optional equipment or local specifications, or both.

For proper repair and maintenance, a thorough familiarization with this manual is important, and it should always be kept in a handy place for quick and easy reference.

All the contents of this manual, including drawings and specifications, are the latest available at the time of printing.
As modifications affecting repair or maintenance occur, relevant information supplementary to this volume will be made available at Mazda dealers. This manual should be kept up-to-date.

Mazda Motor Corporation reserves the right to alter the specifications and contents of this manual without obligation or advance notice.

All rights reserved. No part of this book may be reproduced or used in any form or by any means, electronic or mechanical-including photocopying and recording and the use of any kind of information storage and retrieval system-without permission in writing.

Mazda Motor Corporation
HIROSHIMA, JAPAN

APPLICATION:
This manual is applicable to vehicles beginning with the Vehicle Identification Numbers (VIN) shown on the following page.

CONTENTS

TITLE	SECTION		
		PREVIOUS	NEW
GENERAL INFORMATION	SYSTEM CIRCUIT DIAGRAM/CONNECTOR LOCATIONS	GI (GENERAL INFORMATION)	00
		W (ELECTRICAL WIRING SCHEMATIC)	
		FB (FUSE BLOCK)	
		JB (JOINT BOX)	
		Y (GROUND POINT)	
		U (DATA LINK CONNECTOR)	
ENGINE		A (CHARGING SYSTEM/ STARTING SYSTEM)	01
		B (ENGINE CONTROL SYSTEM)	
		Q (CRUISE CONTROL SYSTEM)	
SUSPENSION		—	02
DRIVELINE/AXLE		—	03
BRAKES		O (ANTI-LOCK BRAKE SYSTEM)	04
TRANSMISSION/ TRANSAXLE		H (EC-AT CONTROL SYSTEM)	05
STEERING		N (ELECTRIC POWER STEERING SYSTEM)	06
HEATER, VENTILATION & AIR CONDITIONING (HVAC)		G (AIR CONDITIONING SYSTEM)	07
RESTRAINTS		S (SEAT BELT/AIR BAG SYSTEM)	08
BODY & ACCESSORIES		C (GAUGE CONTROL SYSTEM)	09
		D (WIPER SYSTEM)	
		E (EXTERIOR LIGHTING SYSTEM)	
		F (SIGNAL SYSTEM)	
		I (INTERIOR LIGHTING SYSTEM)	
		J (AUDIO SYSTEM)	
		K (DOOR/WINDOW SYSTEM)	
		L (MIRROR SYSTEM)	
		M (SUNROOF SYSTEM)	
		P (POWER SEAT SYSTEM)	
		T (SECURITY AND LOCKS SYSTEM/OPTION)	

There are explanation given only for the sections marked with shadow (■).


©2006 Mazda Motor Corporation

VEHICLE IDENTIFICATION NUMBER (VIN)


European (L.H.D.) specs.

JMZ	BK12F5*#	500001—
JMZ	BK12F6*#	500001—
JMZ	BK12R6*#	500001—
JMZ	BK12Y2*#	500001—
JMZ	BK12Z2*#	500001—
JMZ	BK12Z5*#	500001—
JMZ	BK1462*#	500001—
JMZ	BK14F5*#	500001—
JMZ	BK14F6*#	500001—
JMZ	BK14J2*#	500001—
JMZ	BK14L6*#	500001—
JMZ	BK14R6*#	500001—
JMZ	BK14Y2*#	500001—
JMZ	BK14Z2*#	500001—
JMZ	BK14Z5*#	500001—


ELECTRICAL WIRING SCHEMATIC (Z6,ZJ,LF,L3 Turbo)

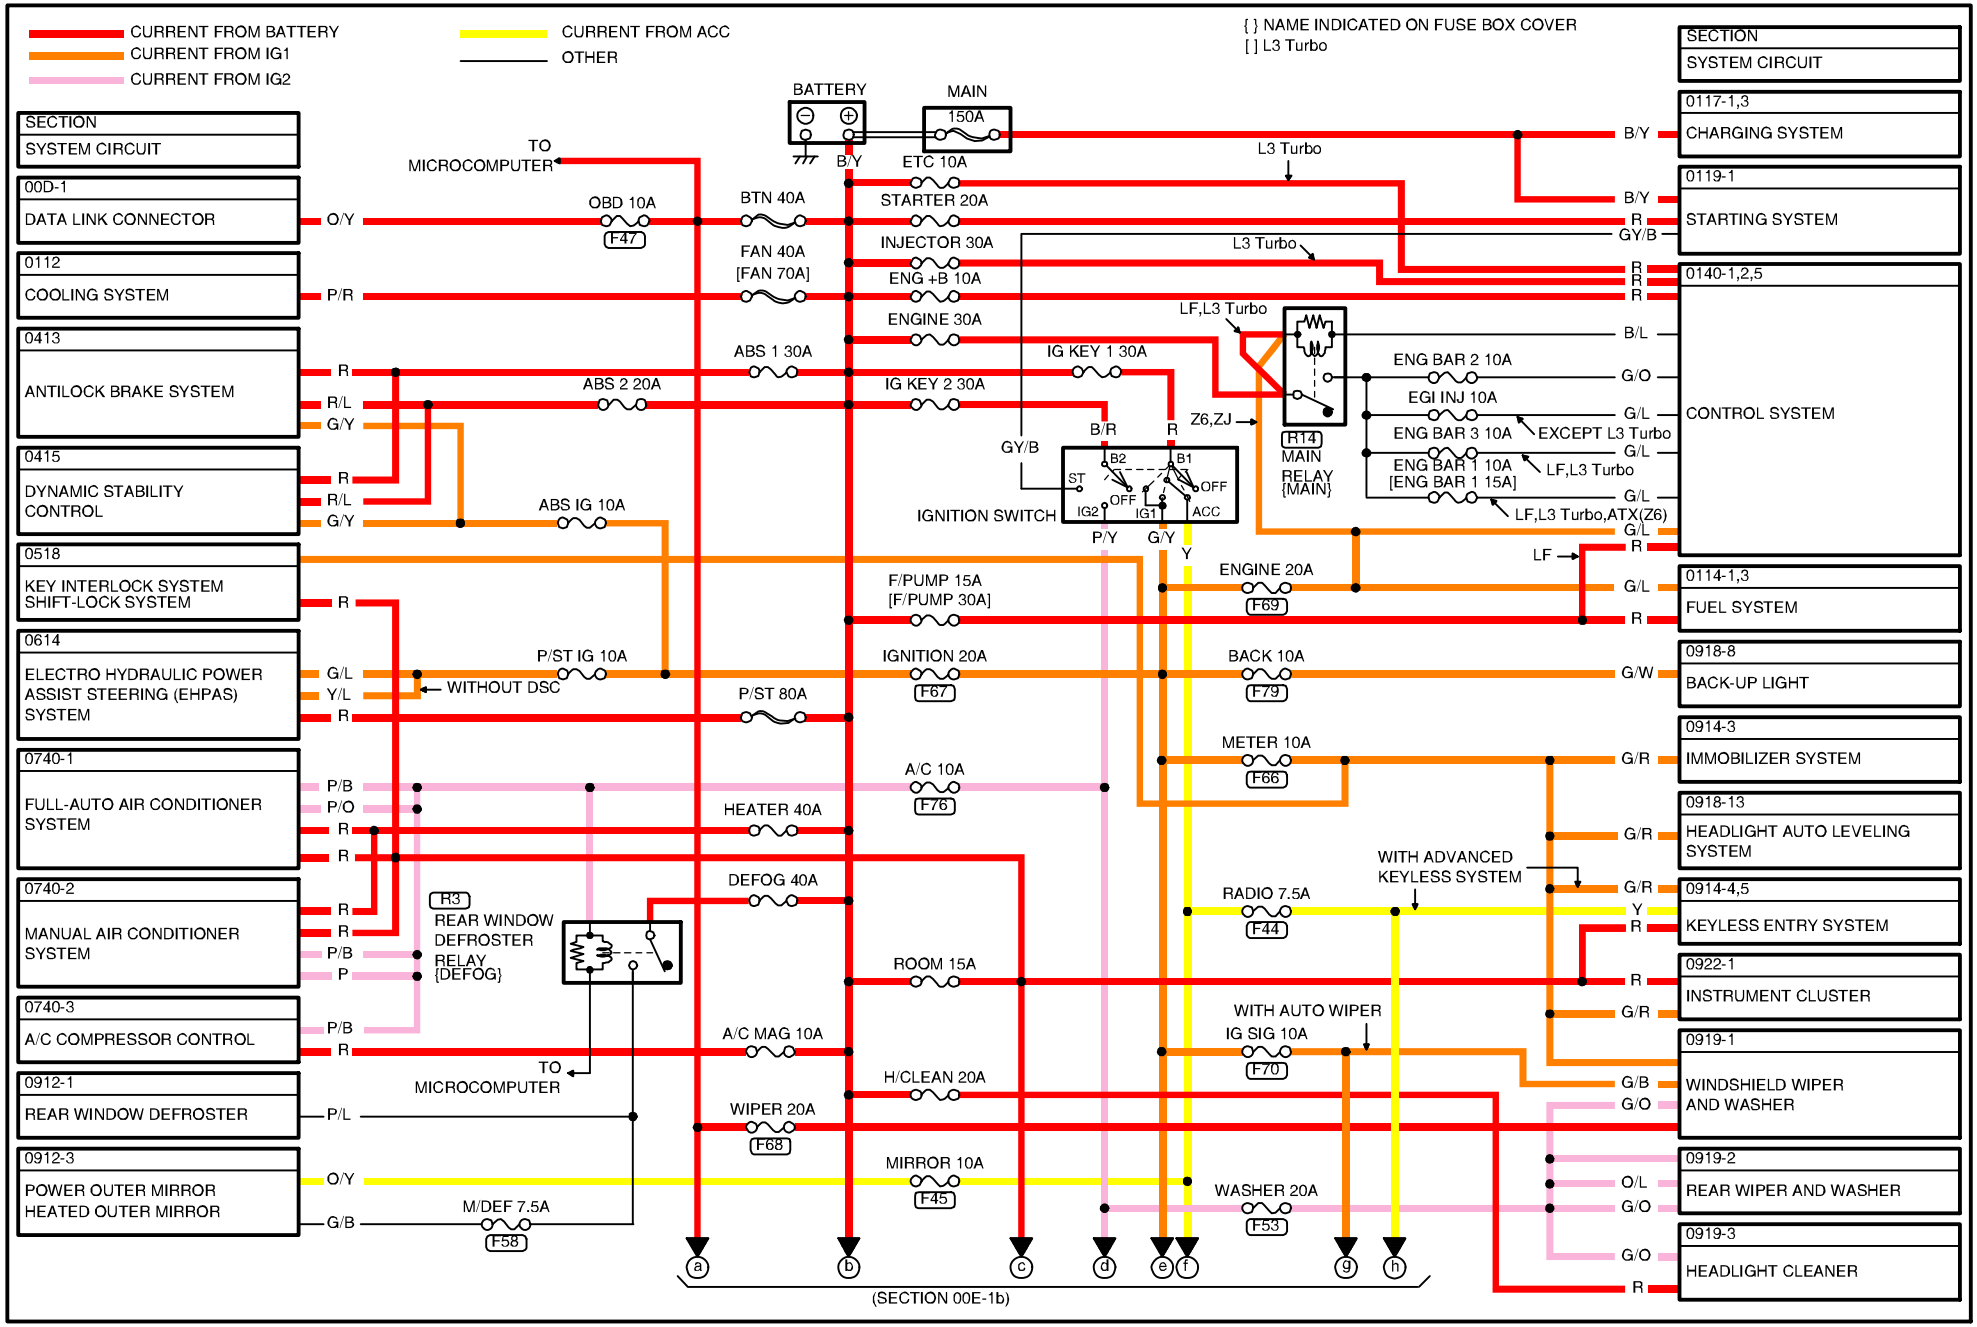


ELECTRICAL WIRING SCHEMATIC (Z6,ZJ,LF,L3 Turbo)

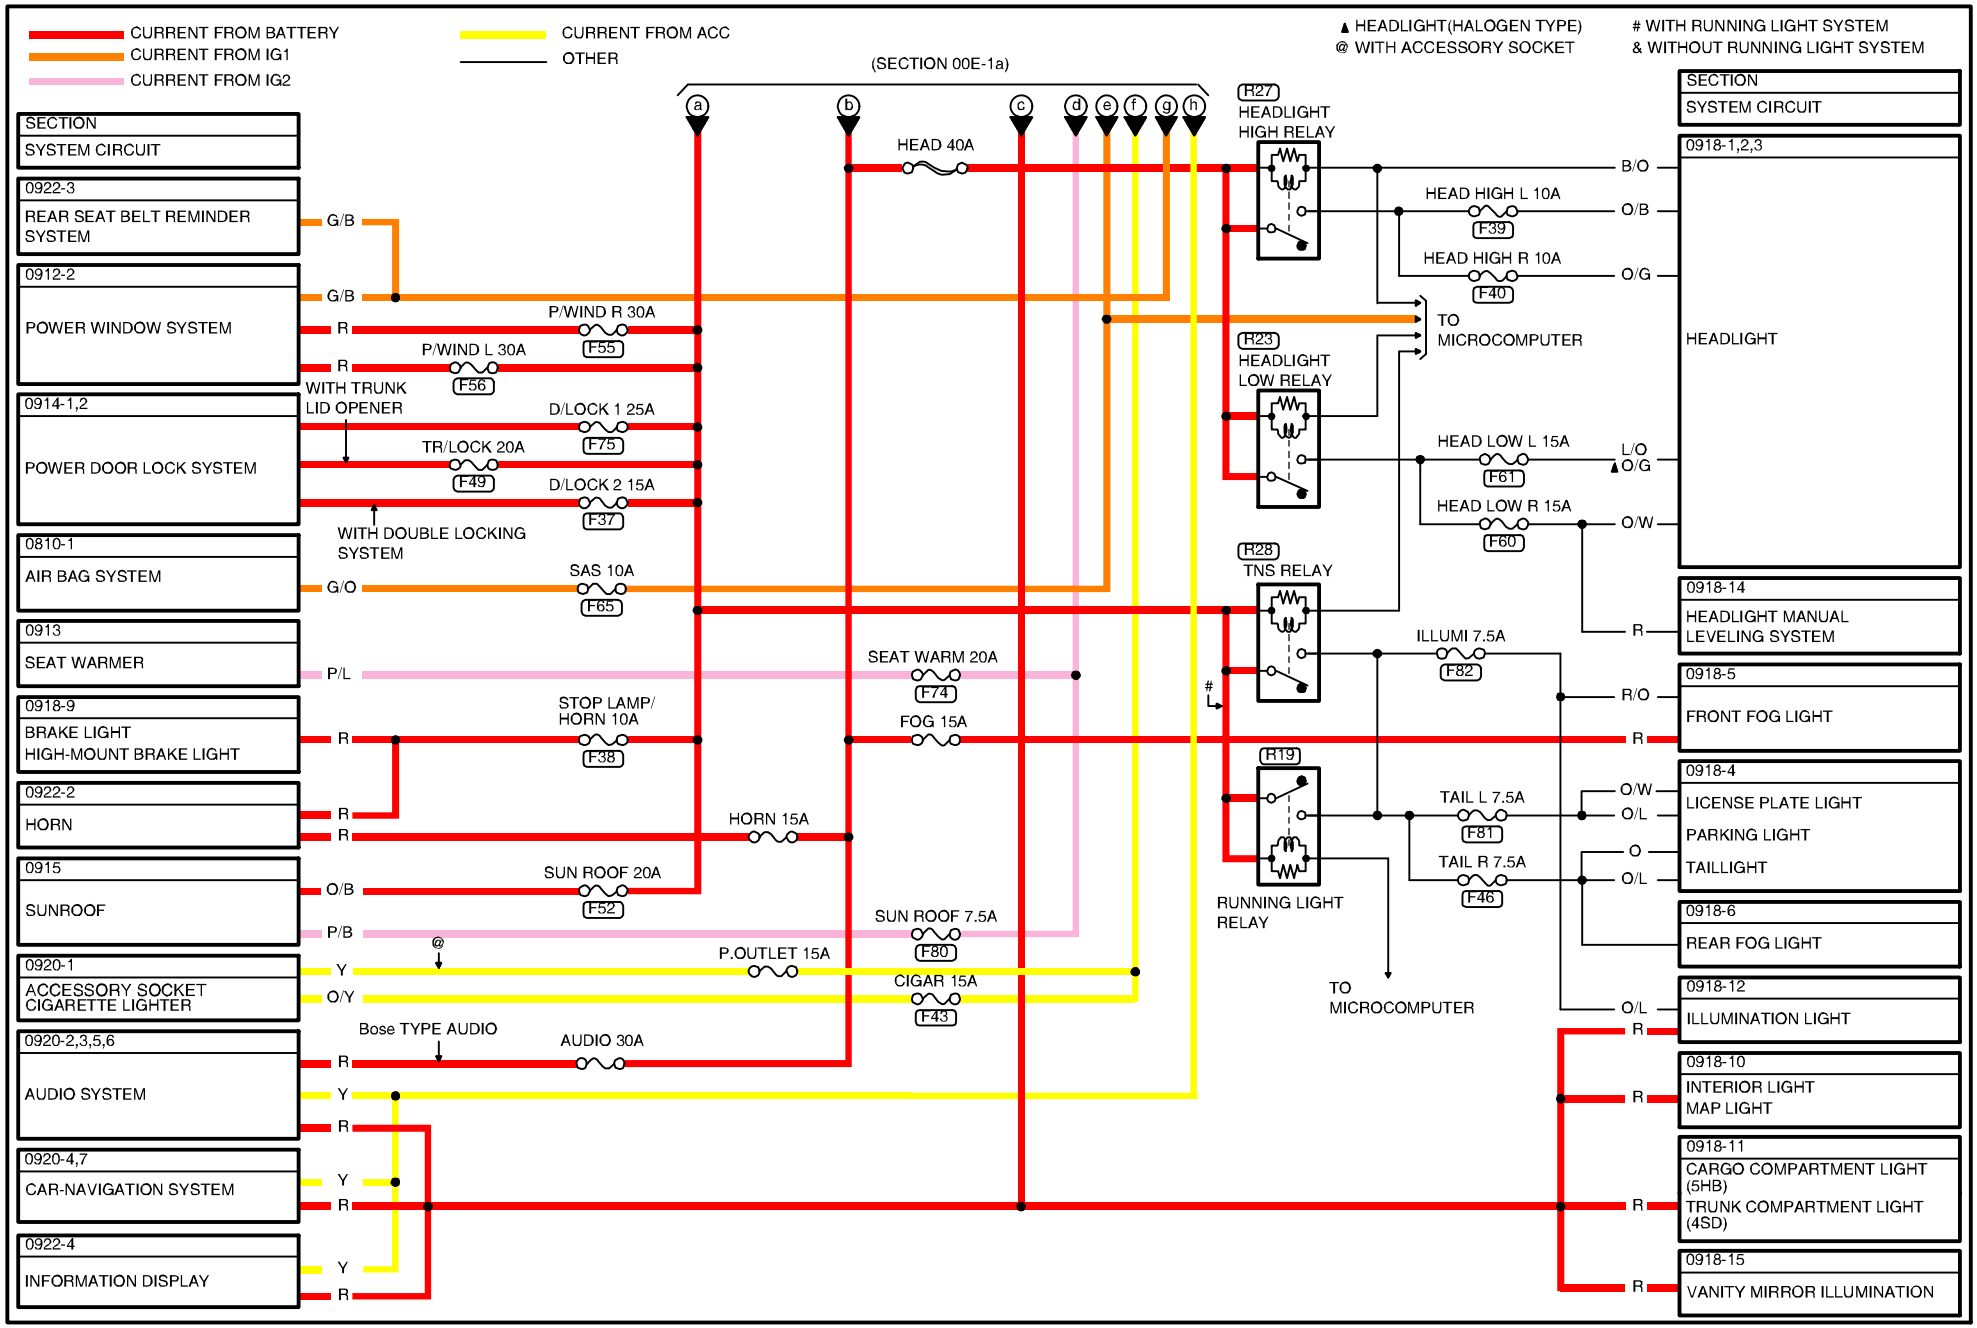

ELECTRICAL WIRING SCHEMATIC (MZ-CD 1.6,MZR-CD (RF Turbo))

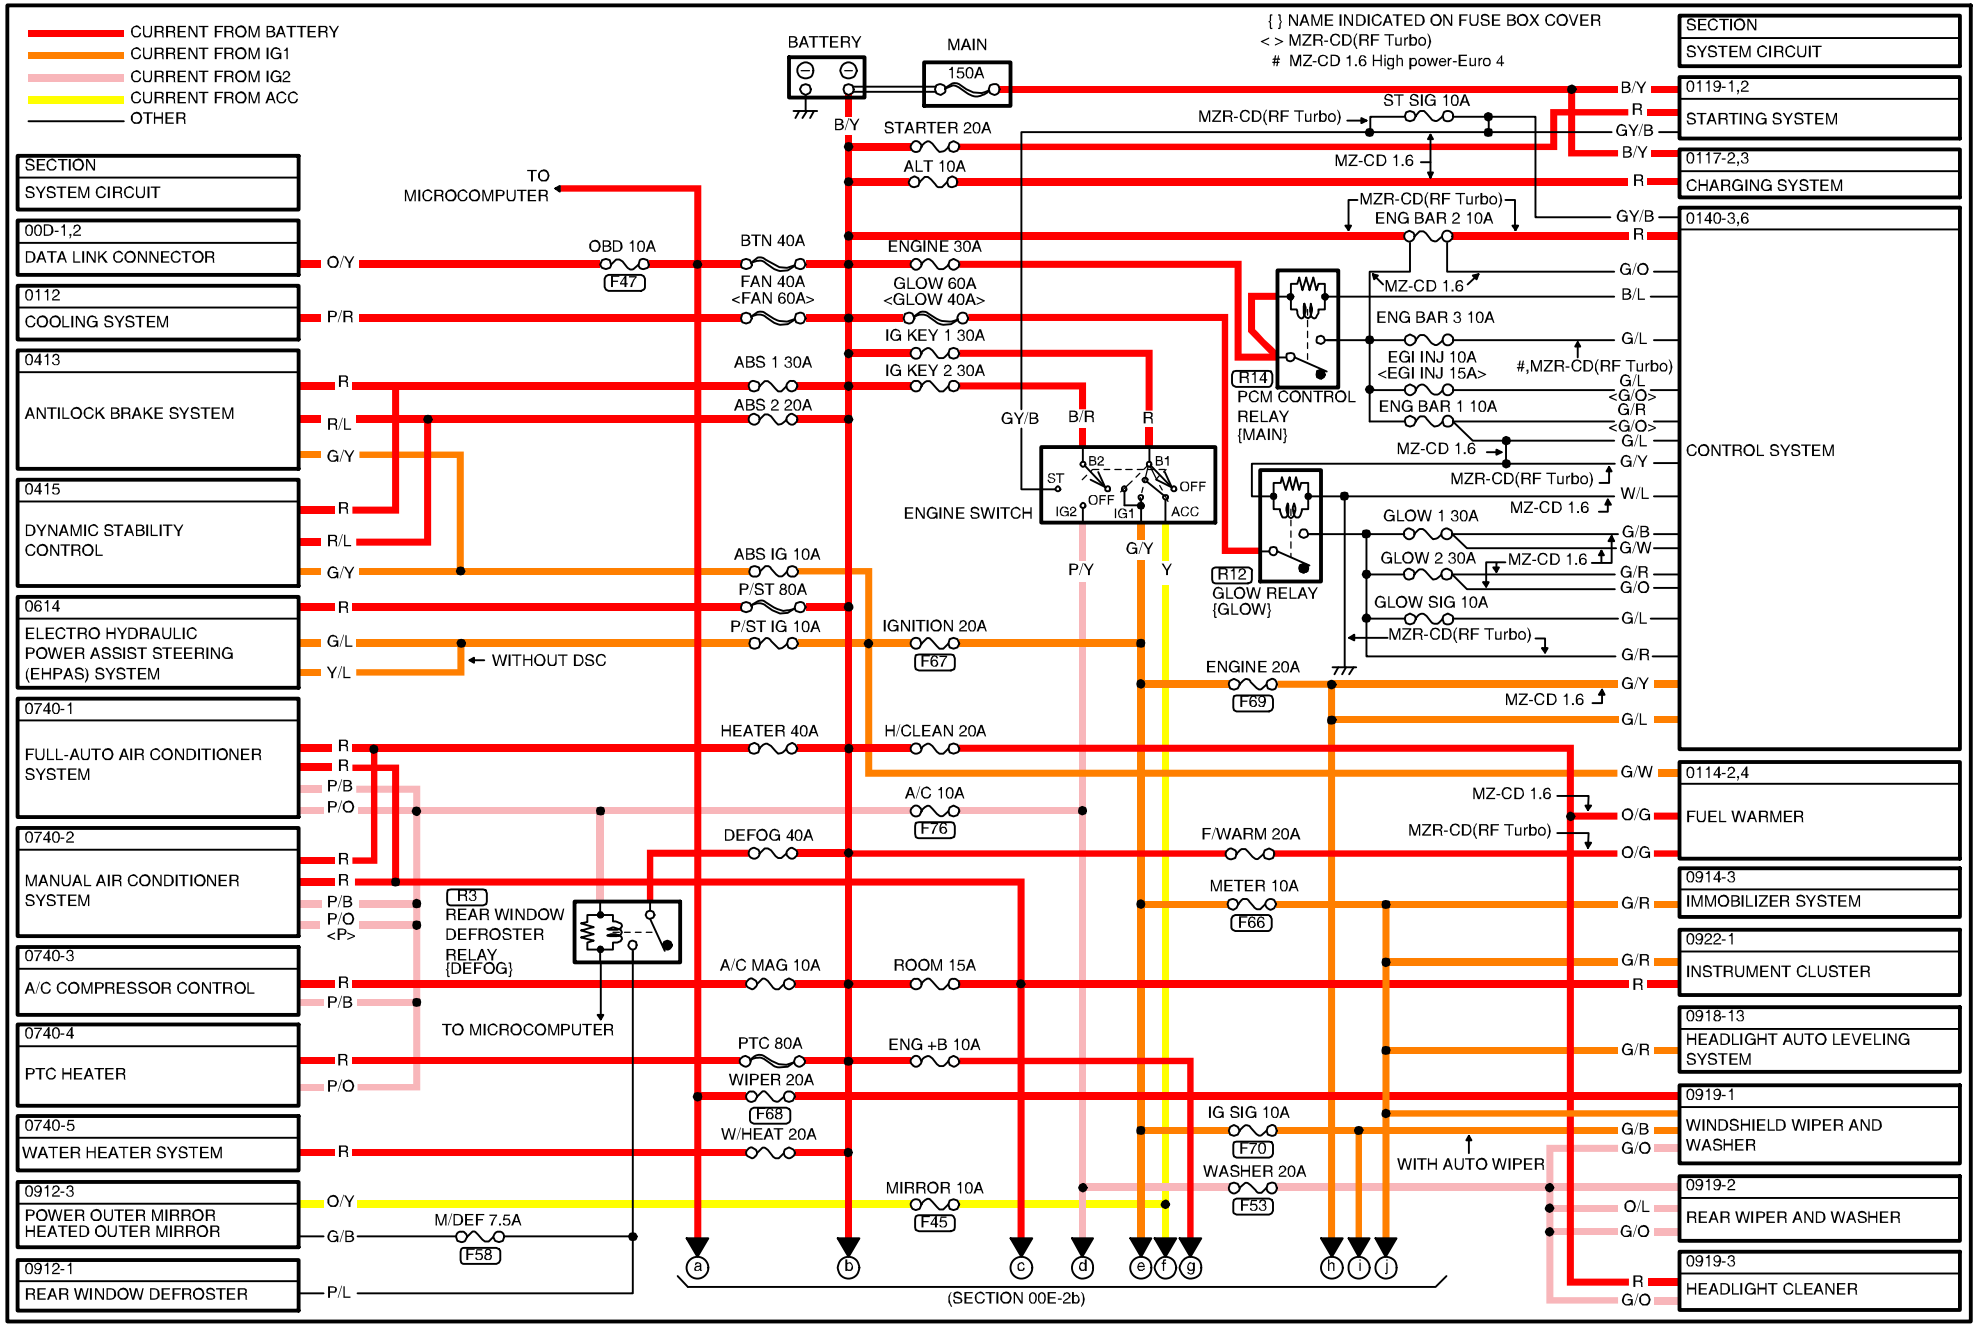


ELECTRICAL WIRING SCHEMATIC (MZ-CD 1.6,MZR-CD (RF Turbo))

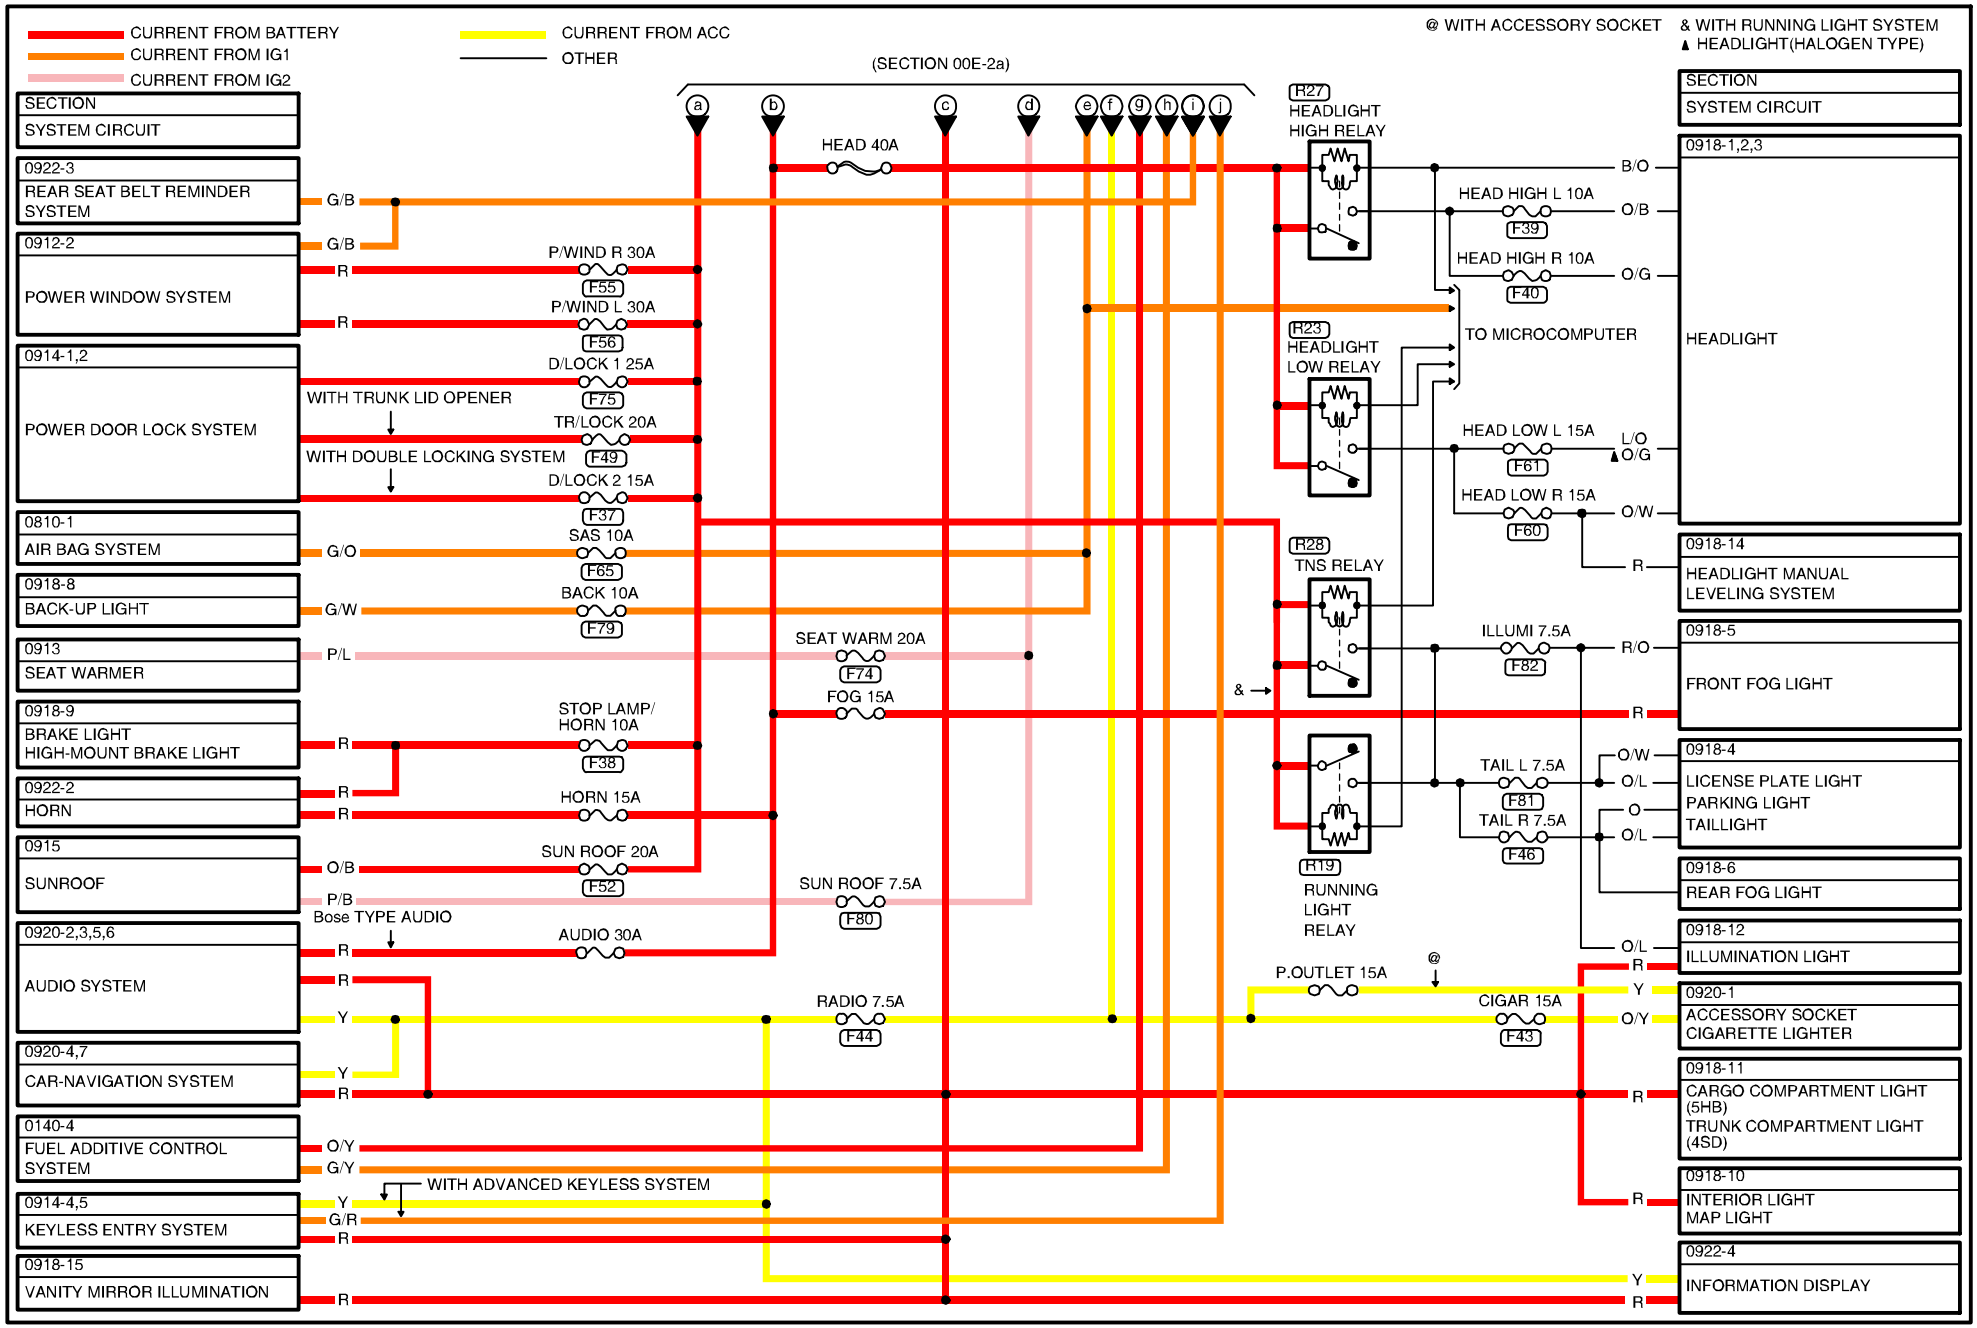

FUSE BOX (Z6,ZJ,LF,MZ-CD 1.6)

F-01 MAIN FUSE BLOCK

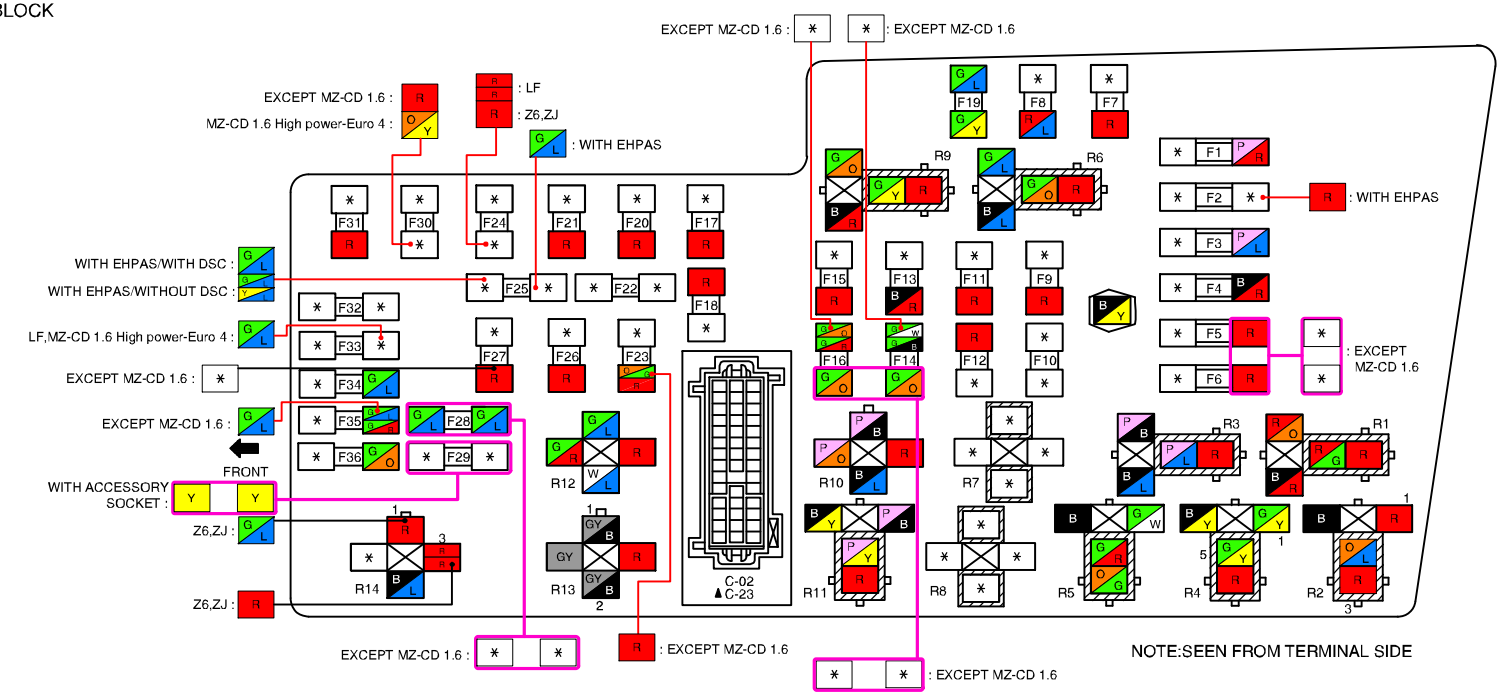


[ ] IF EQUIPPED
{ } NAME INDICATED ON FUSE BOX COVER
▲ MZ-CD 1.6
* VACANT

NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
F1	FAN	40A	F19	ABS IG	10A
F2	[P/ST]	[80A]	F20	FOG	15A
F3	BTN	40A	F21	HORN	15A
F4	HEAD	40A	F22	*	*
F5	[PTC]	[80A]	F23	[H/CLEAN]	[20A]
F6	[GLOW]	[60A]	F24	[F/PUMP]	[15A]
F7	ABS 1	30A	F25	[P/ST IG]	[10A]
F8	ABS 2	20A	F26	A/C MAG	10A
F9	ENGINE	30A	F27	[ALT]	[10A]
F10	*	*	F28	[GLOW SIG]	[10A]
F11	IG KEY 1	30A	F29	[P.OUTLET]	[15A]
F12	STARTER	20A	F30	[ENG +B]	[10A]
F13	IG KEY 2	30A	F31	ROOM	15A
F14	[GLOW 1]	[30A]	F32	*	*
F15	HEATER	40A	F33	[ENG BAR 3]	[10A]
F16	[GLOW 2]	[30A]	F34	EGI INJ	10A
F17	DEFOG	40A	F35	ENG BAR 1	10A
F18	[AUDIO]	[30A]	F36	ENG BAR 2	10A

NO.	RELAY NAME	NO.	RELAY NAME
R1	FRONT FOG LIGHT RELAY {FOG}	R8	*
R2	HORN RELAY {HORN}	R9	HEADLIGHT CLEANER RELAY {H/CLEAN}
R3	REAR WINDOW DEFROSTER RELAY {DEFOG}	R10	BLOWER RELAY {HEATER}
R4	[DRIVE-BY-WIRE RELAY {ETV}]	R11	A/C RELAY {A/C}
R5	[FUEL WARMER RELAY {F/WARM}]	R12	[GLOW RELAY {GLOW}]
R6	[FUEL PUMP RELAY {CIRCUIT}]	R13	STARTER RELAY {STARTER}
R7	* {R.WASH}	R14	MAIN RELAY ▲PCM CONTROL RELAY {MAIN}

F-01 MAIN FUSE BLOCK

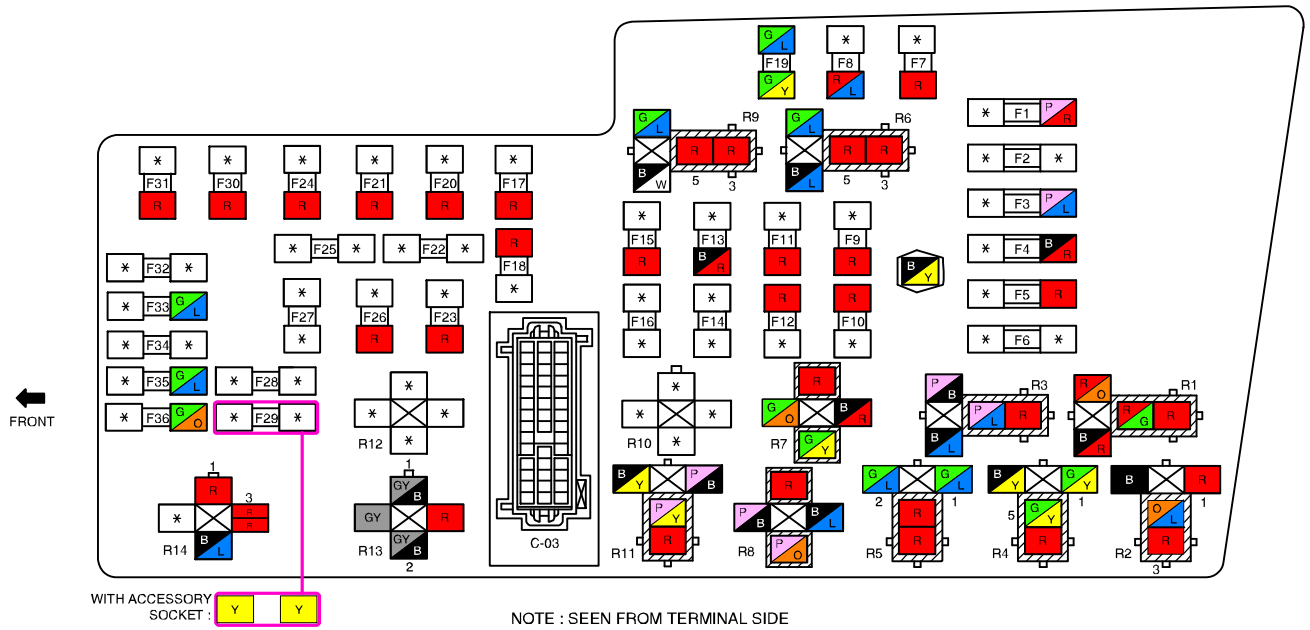

NOTE : SEEN FROM TERMINAL SIDE

[ ] IF EQUIPPED

{ } NAME INDICATED ON FUSE BOX COVER

< > NOT USED

* VACANT


NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
F1	FAN	70A	F19	ABS IG	10A
F2	*	*	F20	FOG	15A
F3	BTN	40A	F21	HORN	15A
F4	HEAD	40A	F22	<DRL>	<10A>
F5	F/PUMP	30A	F23	H/CLEAN	20A
F6	*	*	F24	ETC	10A
F7	ABS 1	30A	F25	*	*
F8	ABS 2	20A	F26	A/C MAG	10A
F9	ENGINE	30A	F27	*	*
F10	INJECTOR	30A	F28	*	*
F11	IG KEY 1	30A	F29	[P.OUTLET]	[15A]
F12	STARTER	20A	F30	ENG +B	10A
F13	IG KEY 2	30A	F31	ROOM	15A
F14	*	*	F32	*	*
F15	HEATER	40A	F33	ENG BAR 3	10A
F16	*	*	F34	*	*
F17	DEFOG	40A	F35	ENG BAR 1	15A
F18	[AUDIO]	[30A]	F36	ENG BAR 2	10A

NO.	RELAY NAME	NO.	RELAY NAME
R1	FRONT FOG LIGHT RELAY {FOG}	R8	BLOWER RELAY {HEATER}
R2	HORN RELAY {HORN}	R9	FUEL PUMP SPEED CONTROL RELAY {F/PUMP 2}
R3	REAR WINDOW DEFROSTER RELAY {DEFOG}	R10	* {DRL}
R4	DRIVE-BY-WIRE RELAY {ETV}	R11	A/C RELAY {A/C}
R5	FUEL INJECTOR RELAY {INJECTOR}	R12	* {R.WASH}
R6	FUEL PUMP RELAY {CIRCUIT}	R13	STARTER RELAY {STARTER}
R7	HEADLIGHT CLEANER RELAY {H/CLEAN}	R14	MAIN RELAY {MAIN}

FUSE BOX (MZR-CD (RF Turbo))

F-01 MAIN FUSE BLOCK

[ ] IF EQUIPPED
{ } NAME INDICATED ON FUSE BOX COVER
* VACANT

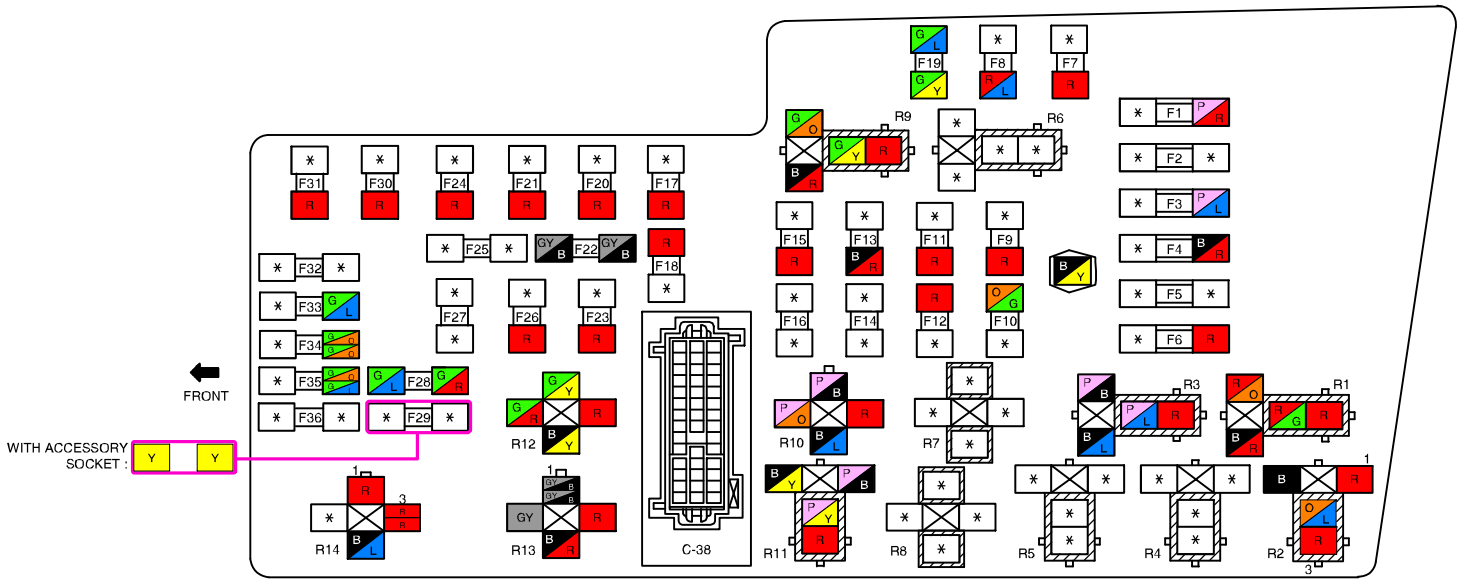



NOTE:SEEN FROM TERMINAL SIDE

NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
F1	FAN	60A	F19	ABS IG	10A
F2	*	*	F20	FOG	15A
F3	BTN	40A	F21	HORN	15A
F4	HEAD	40A	F22	ST SIG	10A
F5	*	*	F23	H/CLEAN	20A
F6	GLOW	40A	F24	W/HEAT	20A
F7	ABS 1	30A	F25	*	*
F8	ABS 2	20A	F26	A/C MAG	10A
F9	ENGINE	30A	F27	*	*
F10	F/WARM	20A	F28	GLOW SIG	10A
F11	IG KEY 1	30A	F29	[P.OUTLET]	[15A]
F12	STARTER	20A	F30	ENG BAR 2	10A
F13	IG KEY 2	30A	F31	ROOM	15A
F14	*	*	F32	*	*
F15	HEATER	40A	F33	ENG BAR 3	10A
F16	*	*	F34	EGI INJ	15A
F17	DEFOG	40A	F35	ENG BAR 1	10A
F18	[AUDIO]	[30A]	F36	*	*

NO.	RELAY NAME	NO.	RELAY NAME
R1	FRONT FOG LIGHT RELAY {FOG}	R8	*
R2	HORN RELAY {HORN}	R9	HEADLIGHT CLEANER RELAY {H/CLEAN}
R3	REAR WINDOW DEFROSTER RELAY {DEFOG}	R10	BLOWER RELAY {HEATER}
R4	*	R11	A/C RELAY {A/C}
R5	*	R12	GLOW RELAY {GLOW}
R6	*	R13	STARTER RELAY {STARTER}
R7	*	R14	PCM CONTROL RELAY {MAIN}

INTERCONNECTING DIAGRAM OF PASSENGER JUNCTION BOX (PJB)

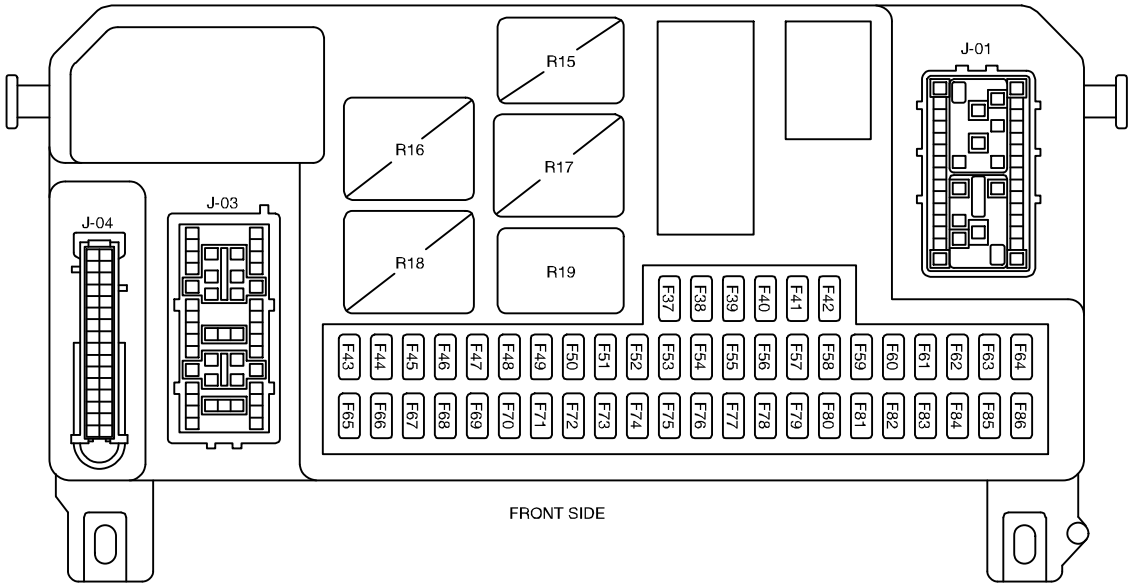

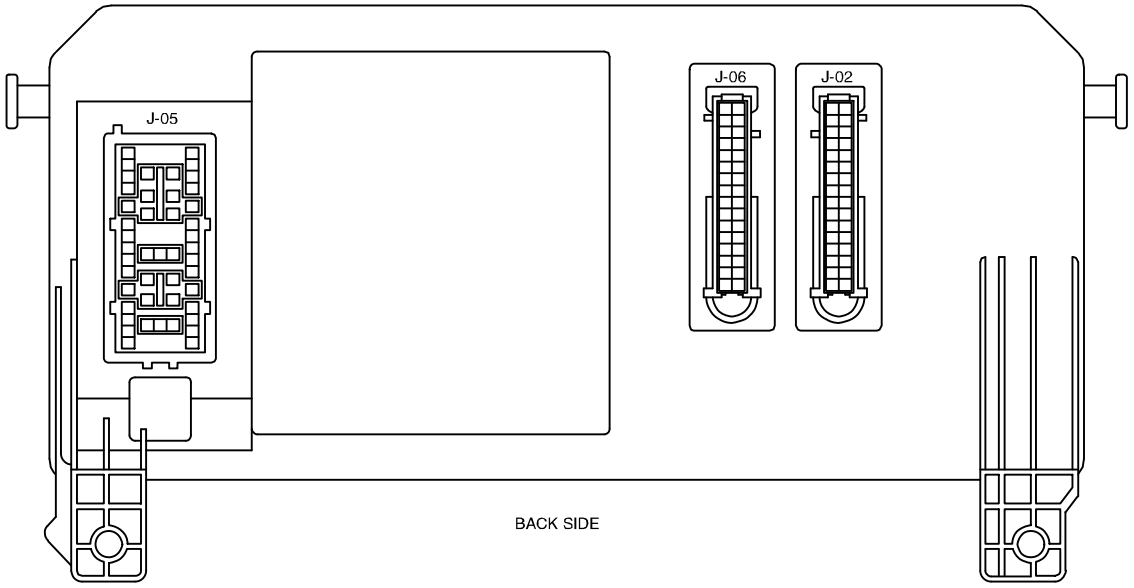


[ ] IF EQUIPPED < > NOT USED
RELAY BUILT INTO PJB * VACANT

NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
F37	[D/LOCK 2]	[15A]	F62	*	*
F38	STOP LAMP/HORN	10A	F63	*	*
F39	HEAD HIGH L	10A	F64	*	*
F40	HEAD HIGH R	10A	F65	SAS	10A
F41	*	*	F66	METER	10A
F42	*	*	F67	IGNITION	20A
F43	CIGAR	15A	F68	WIPER	20A
F44	RADIO	7.5A	F69	ENGINE	20A
F45	[MIRROR]	[10A]	F70	[IG SIG]	[10A]
F46	TAIL R	7.5A	F71	<SAS 2>	<7.5A>
F47	OBD	10A	F72	*	*
F48	*	*	F73	*	*
F49	[TR/LOCK]	[20A]	F74	[SEAT WARM]	[20A]
F50	*	*	F75	D/LOCK 1	25A
F51	*	*	F76	A/C	10A
F52	[SUN ROOF]	[20A]	F77	<P/WIND L>	<30A>
F53	WASHER	20A	F78	<P/WIND R>	<30A>
F54	*	*	F79	BACK	10A
F55	[P/WIND R]	[30A]	F80	[SUN ROOF]	[7.5A]
F56	[P/WIND L]	[30A]	F81	TAIL L	7.5A
F57	<ALARM>	<7.5A>	F82	ILLUMI	7.5A
F58	[M/DEF]	[7.5A]	F83	*	*
F59	*	*	F84	*	*
F60	HEAD LOW R	15A	F85	*	*
F61	HEAD LOW L	15A	F86	*	*


NO.	RELAY NAME	NO.	RELAY NAME
R15	*	#R25	FRONT WIPER LOW RELAY
R16	*	#R26	FRONT WIPER HIGH RELAY
R17	*	#R27	HEADLIGHT HIGH RELAY
R18	*	#R28	TNS RELAY
R19	[RUNNING LIGHT RELAY]	#R29	<DRIVER-SIDE UNLOCK RELAY>
R20	*	#R30	[DOUBLE LOCK RELAY]
R21	*	#R31	DOOR UNLOCK RELAY
#R22	[TRUNK LID OPENER RELAY]	#R32	DOOR LOCK RELAY
#R23	HEADLIGHT LOW RELAY	#R33	[REAR WIPER RELAY]
#R24	[SHIFT-LOCK RELAY]	#R34	[REAR FOG LIGHT RELAY]

INTERCONNECTING DIAGRAM OF PASSENGER JUNCTION BOX (PJB)


J-01 FRONT HARNESS

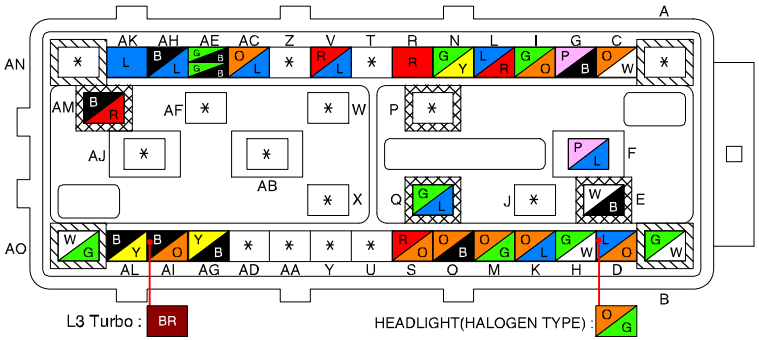


J-02 FRONT HARNESS

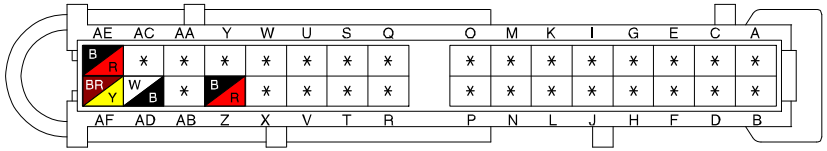


J-03 INSTRUMENT PANEL HARNESS

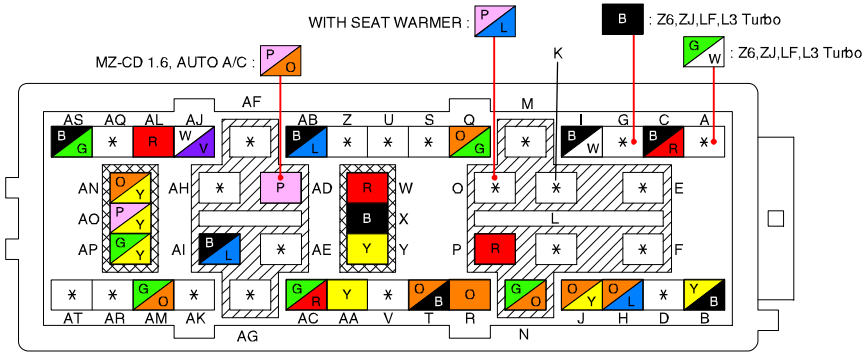


J-04 INSTRUMENT PANEL HARNESS

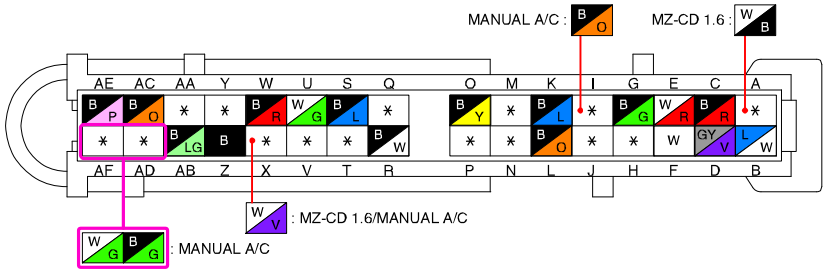


J-05 REAR HARNESS

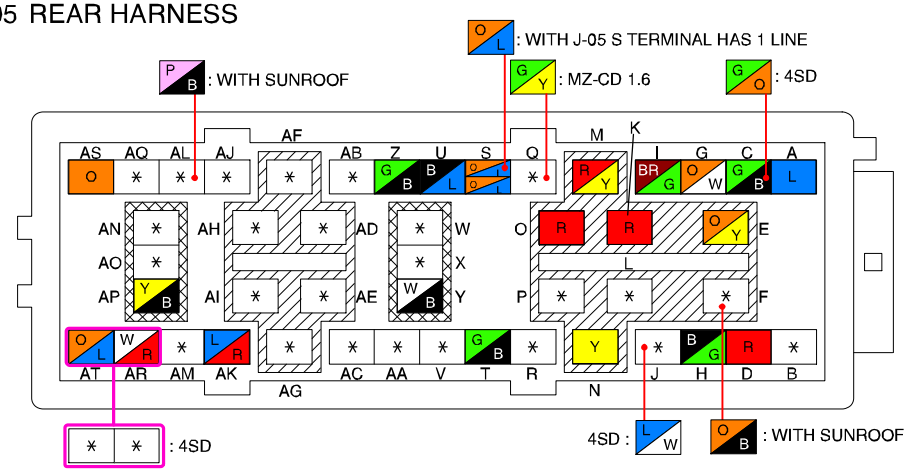


J-06 REAR HARNESS

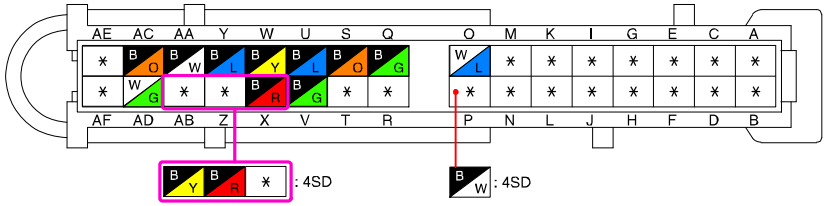

INTERCONNECTING DIAGRAM OF PASSENGER JUNCTION BOX (PJB)

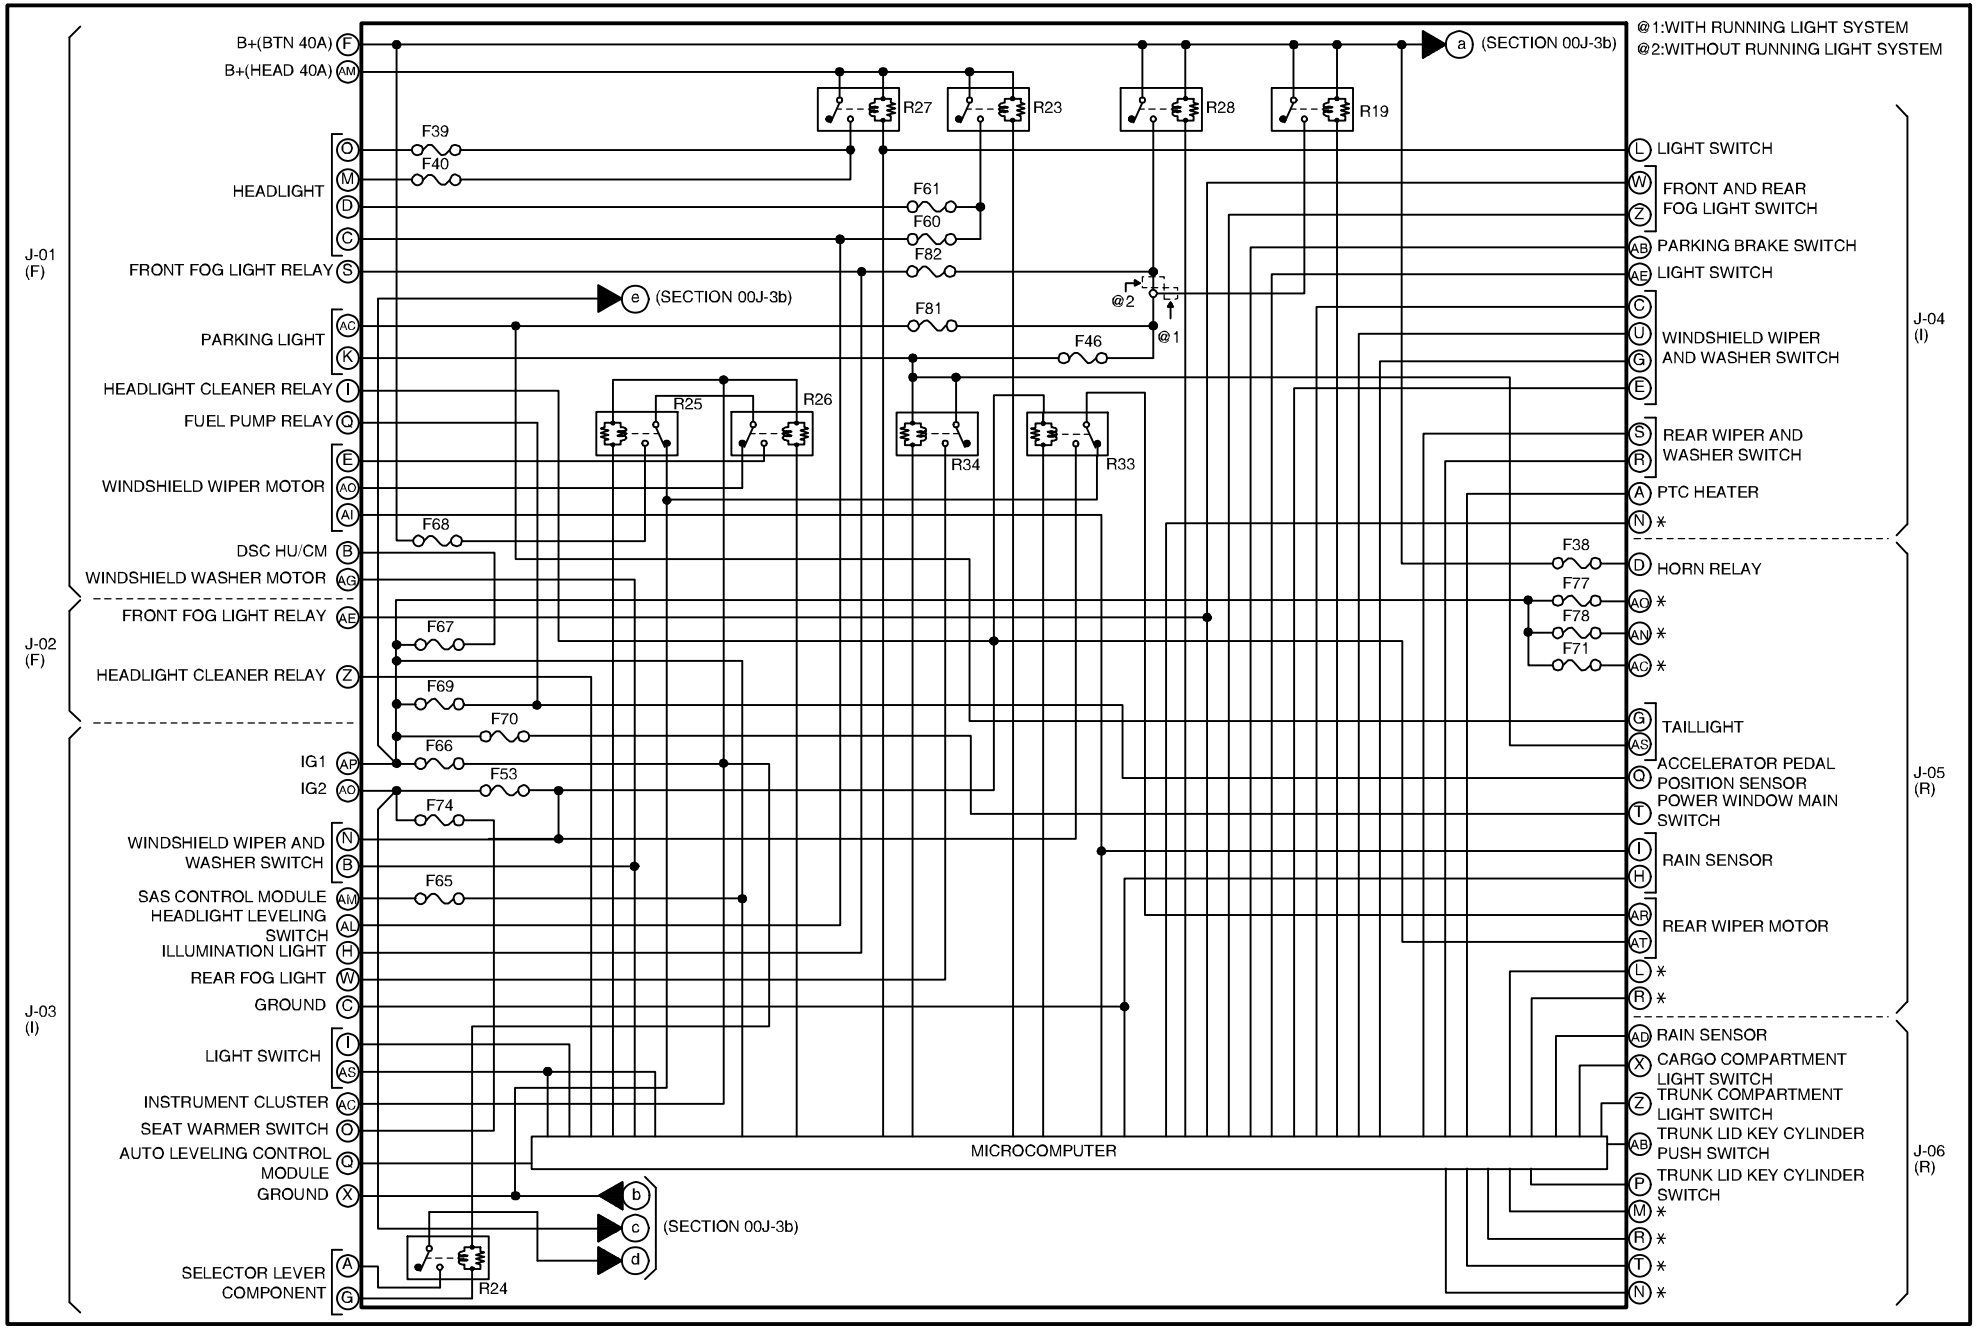



INTERCONNECTING DIAGRAM OF PASSENGER JUNCTION BOX (PJB)

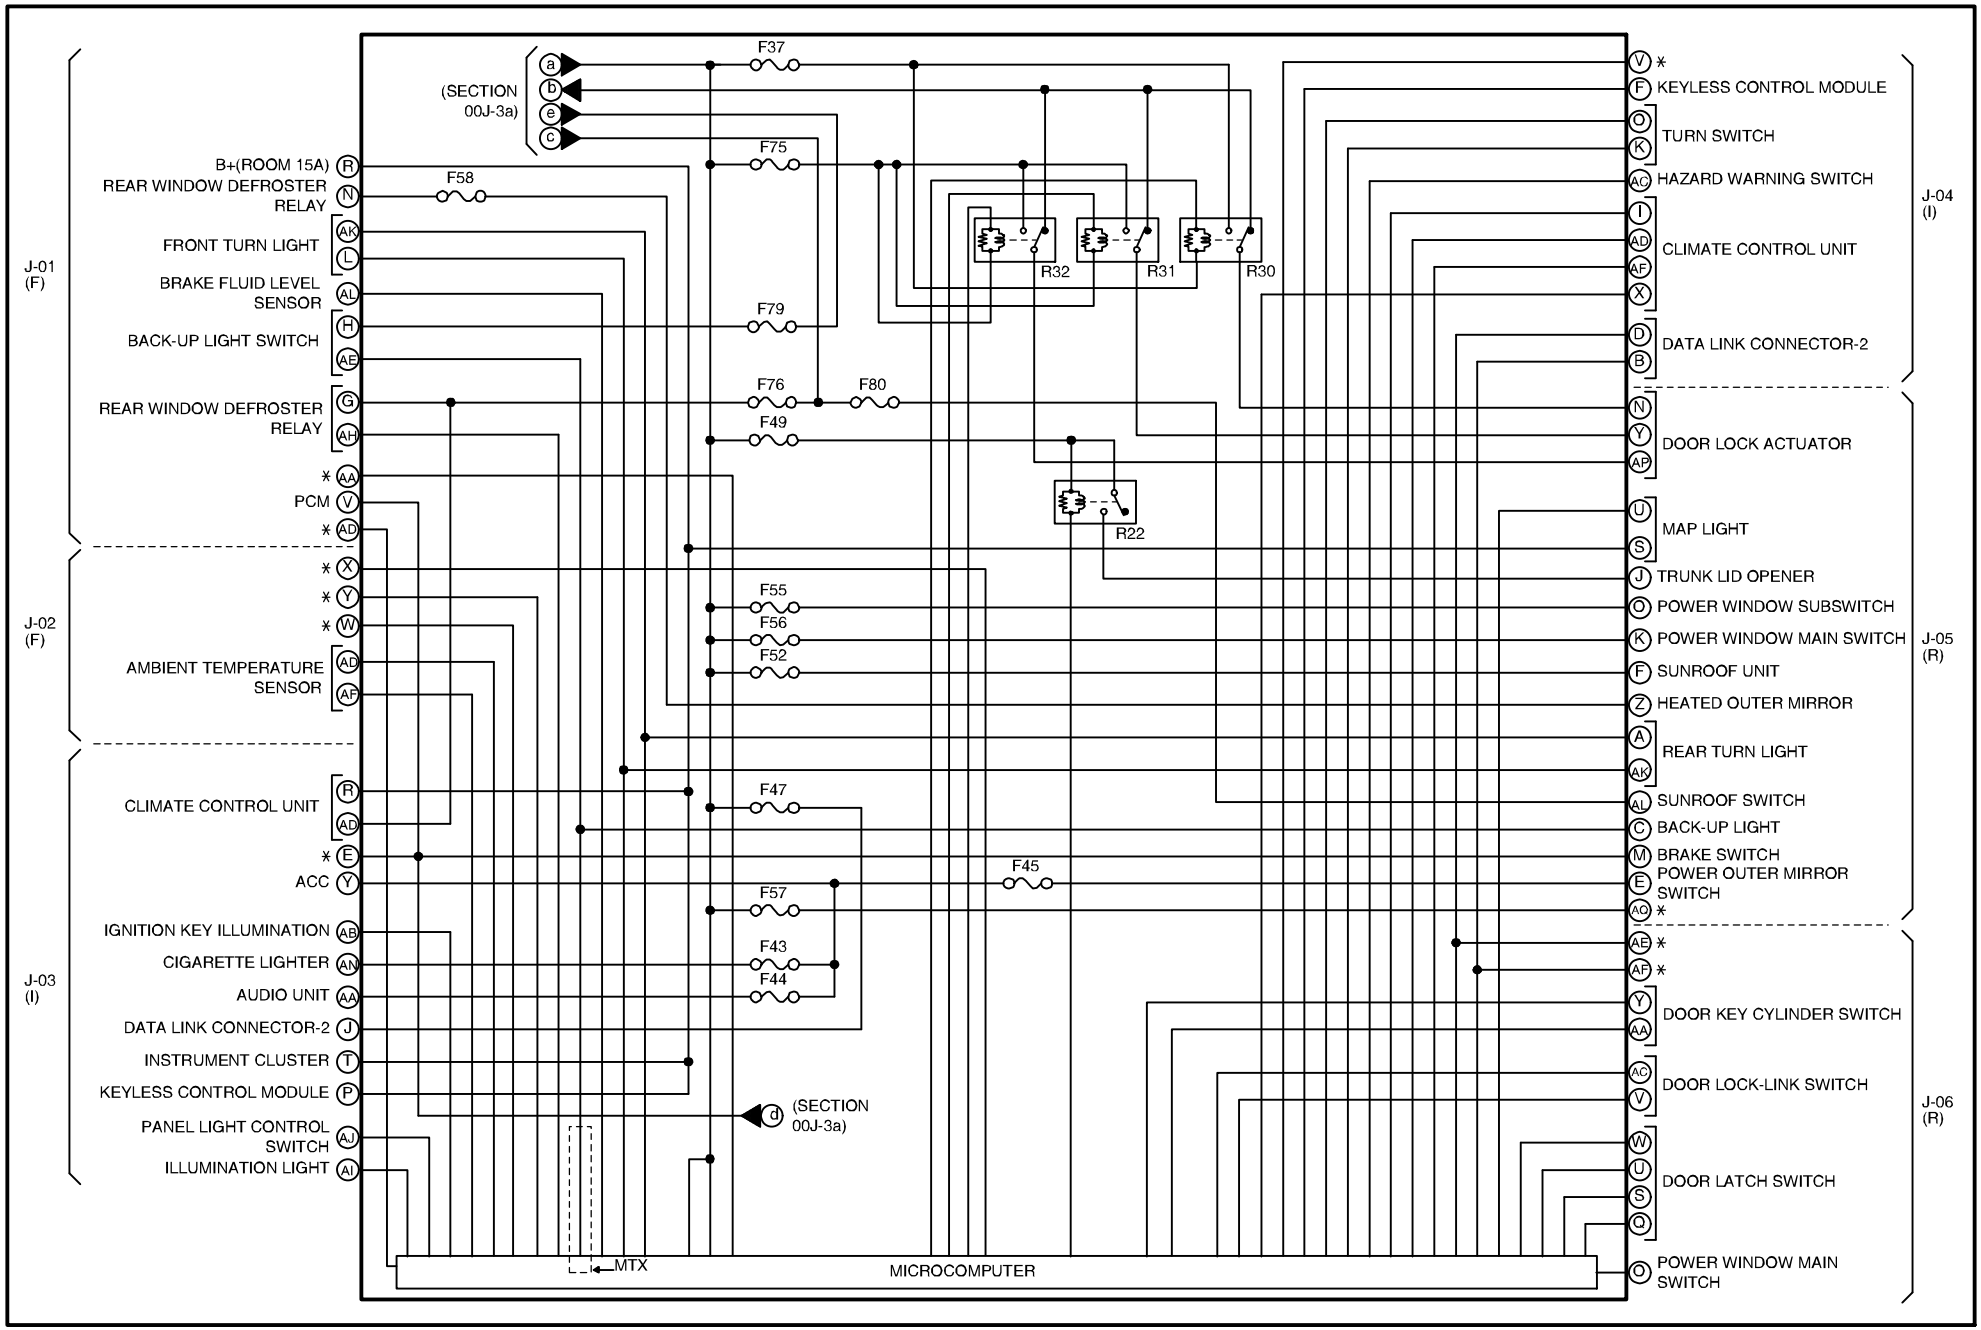


GROUND POINT

①②④⑤⑰	B	①	B B/ O	②	B/ O B/ O	①③⑲	B B
⑯	L G L	⑥	B/ L B/ L (LF) B (Z6,ZJ) B/ L B B B (MZ-CD 1.6) B/ L B/ R (L3 Turbo)	⑱	B/ L	⑲	B/ Y

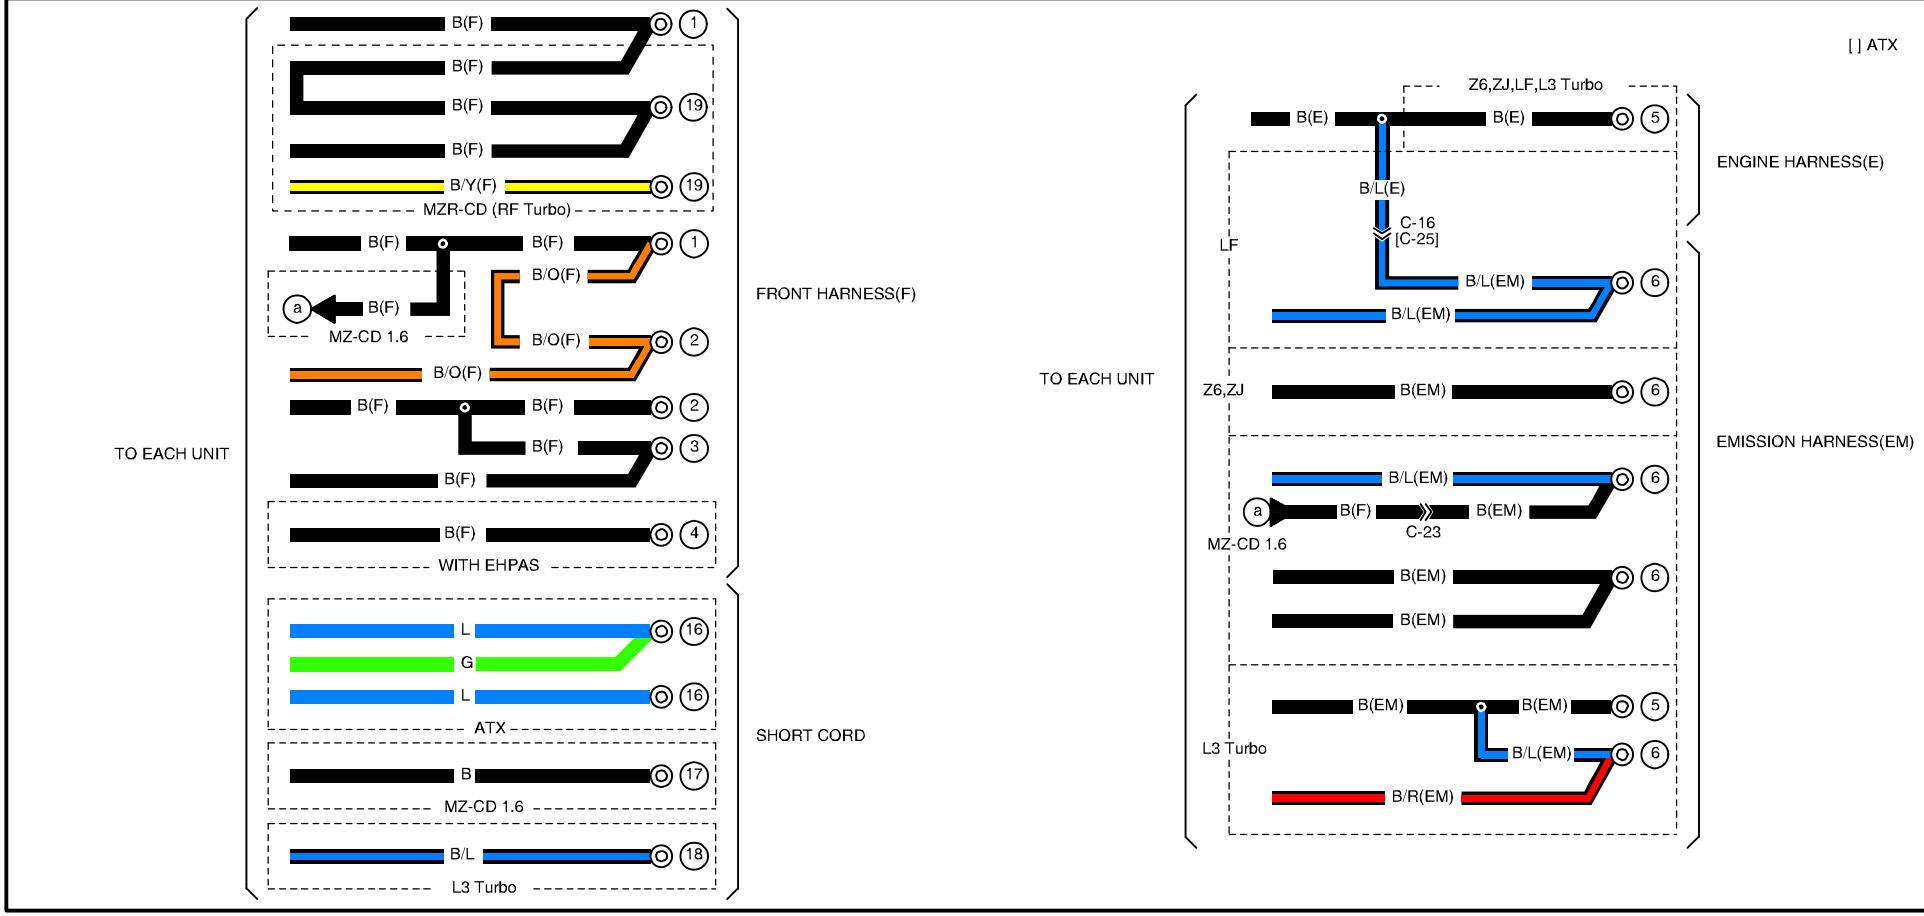


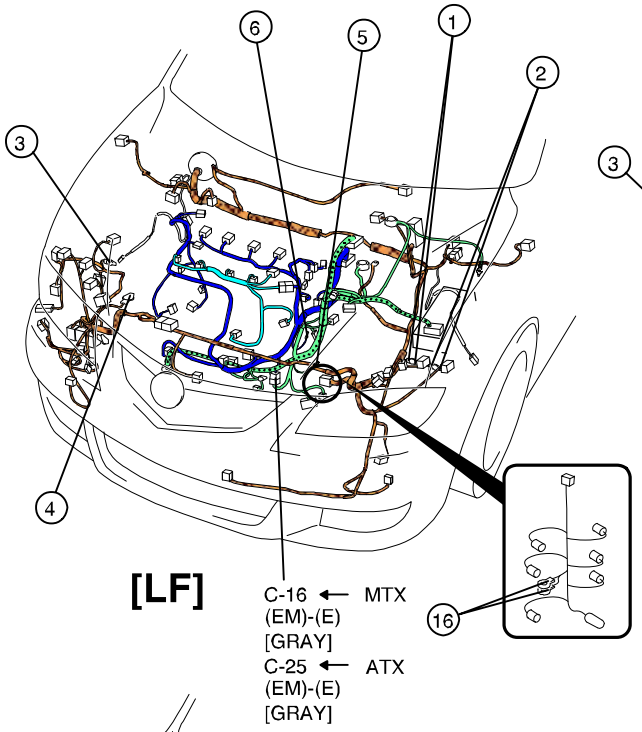


[LF]

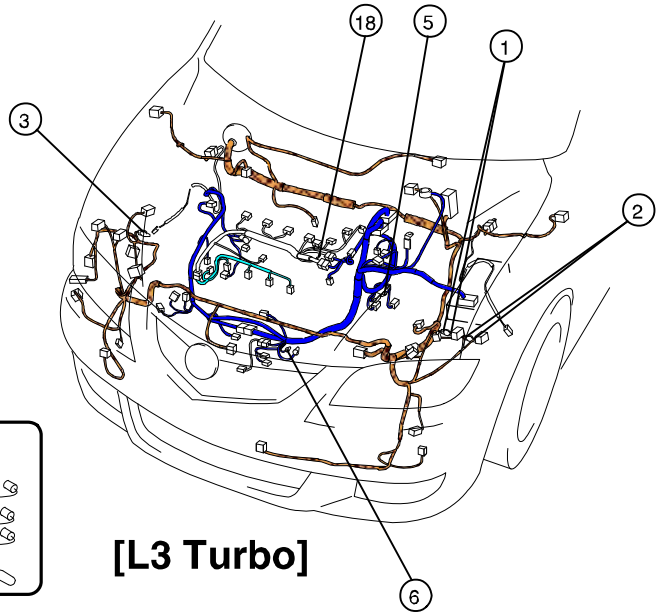


[L3 Turbo]

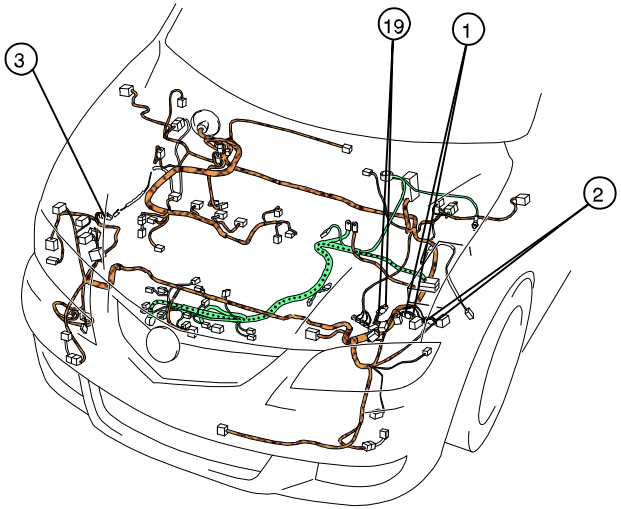


[MZR-CD(RF Turbo)]

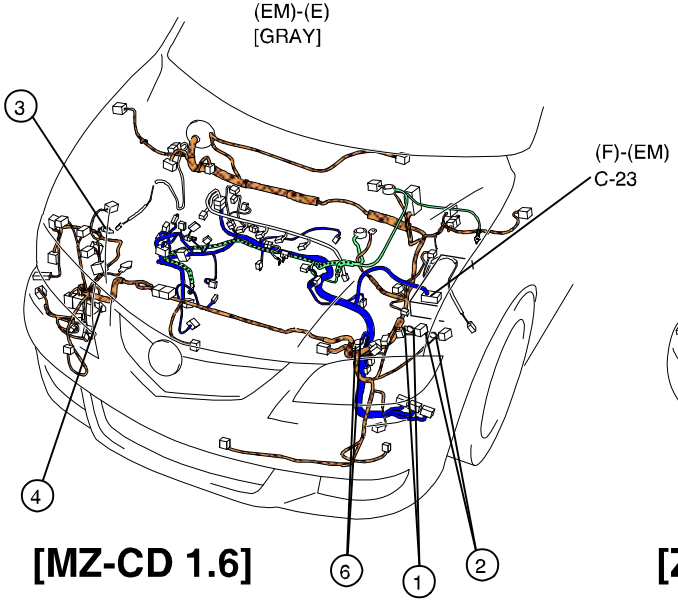

[MZ-CD 1.6]

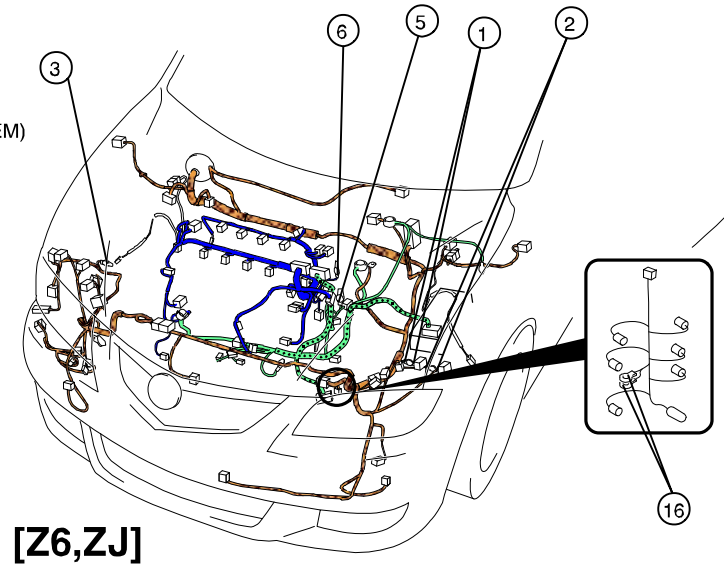


[Z6,ZJ]

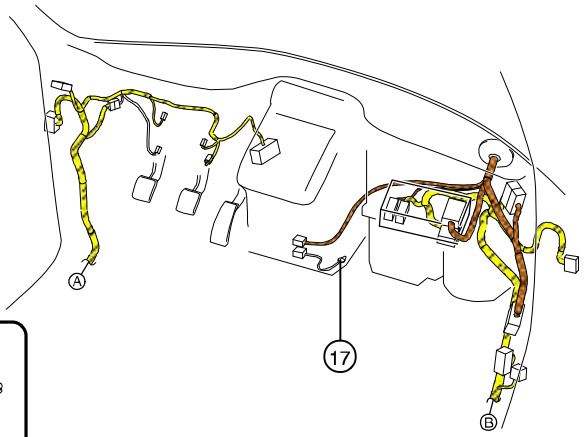


:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-16
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

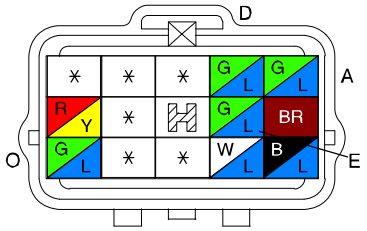


ENGINE HARNESS

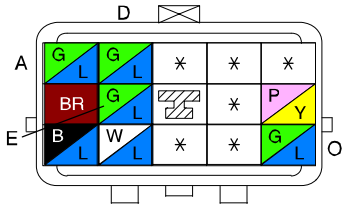


C-25
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

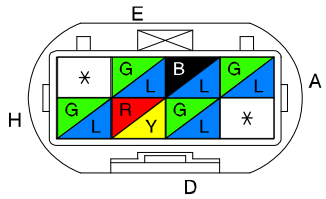


ENGINE HARNESS

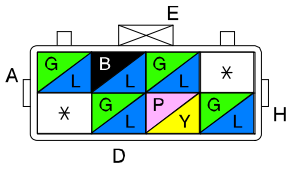


C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

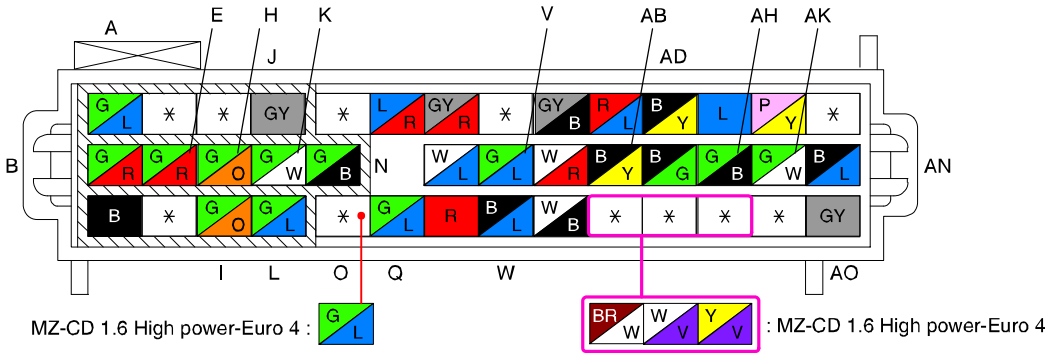



EMISSION HARNESS

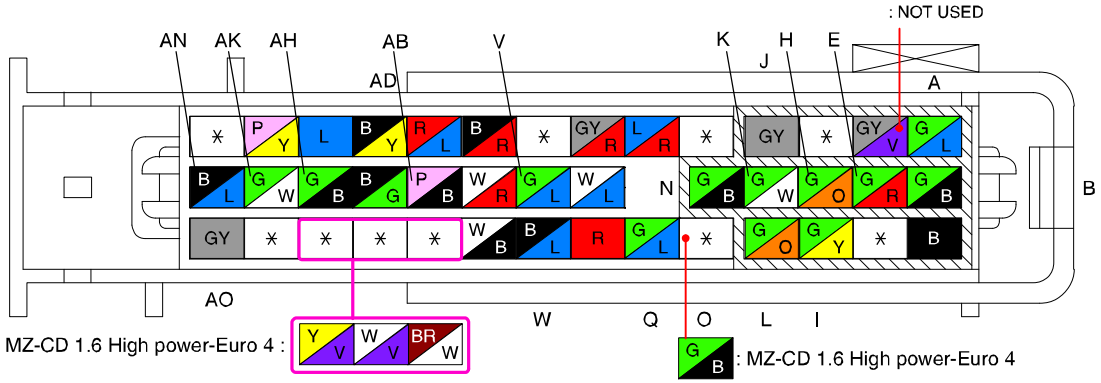


GROUND POINT

⑦ ⑧ ⑫ ⑬ ⑭ ⑮	B	⑧	B/ L	⑨ ⑩	B/ Y	⑩	B/ G	⑪	B/ O
⑪ ⑫ ⑬ ⑭	B B								

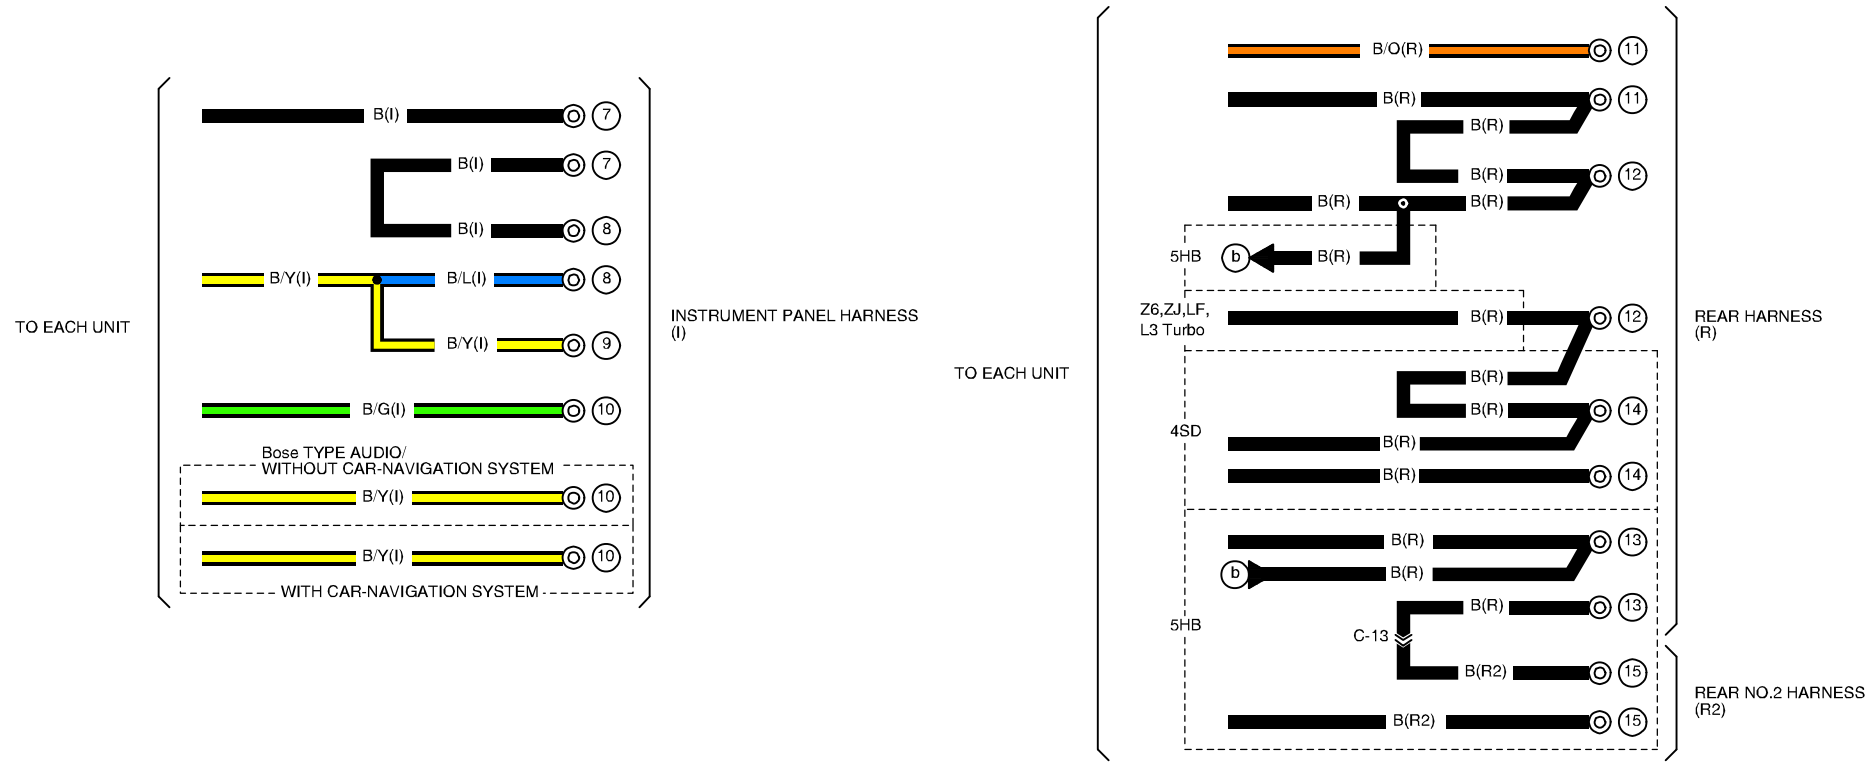


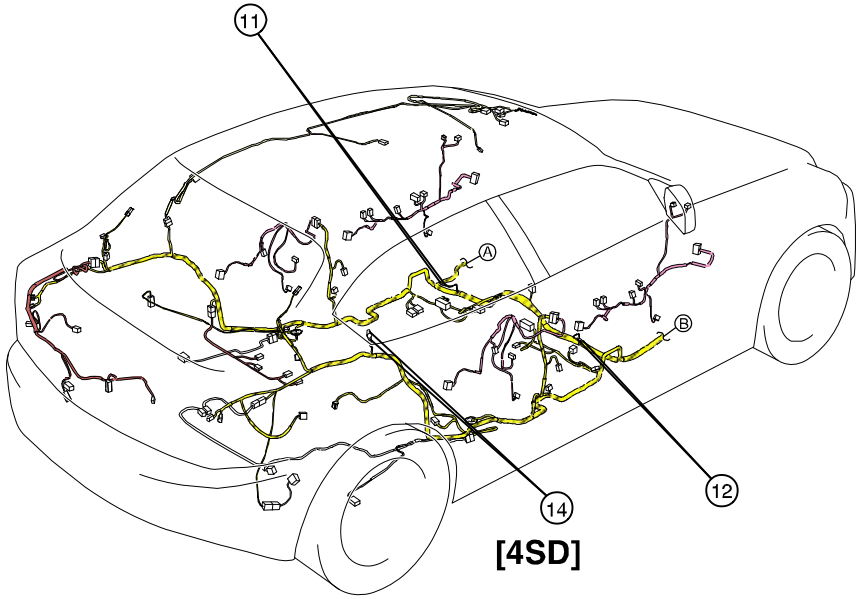

[4SD]

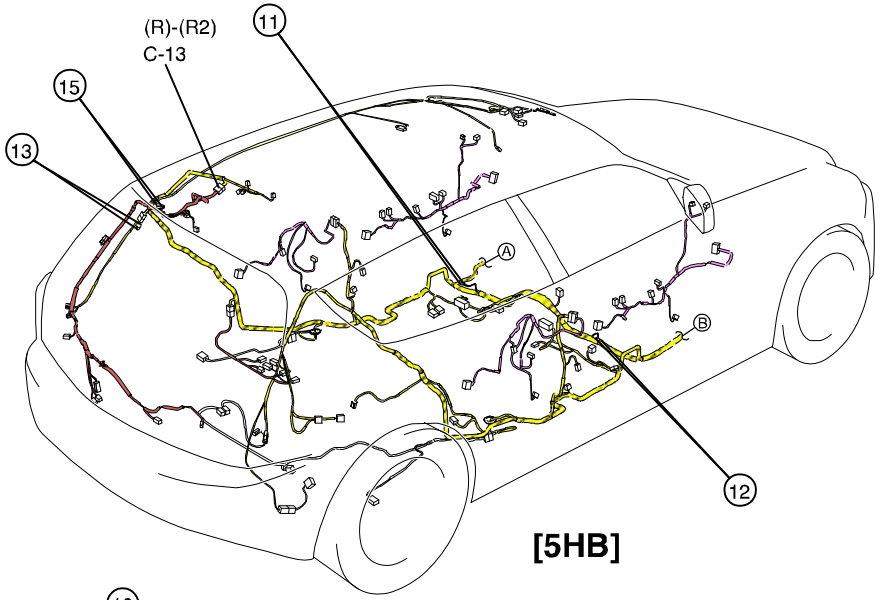


[5HB]

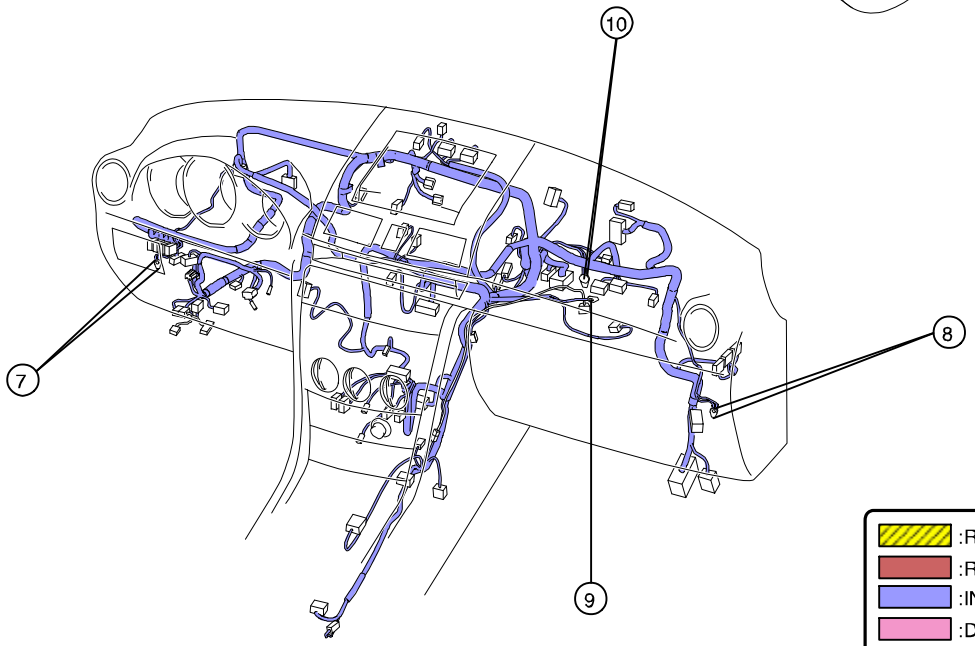


:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS


C-12
REAR HARNESS-INTERIOR LIGHT NO.2 HARNESS

REAR HARNESS

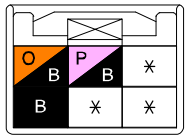



INTERIOR LIGHT NO.2 HARNESS

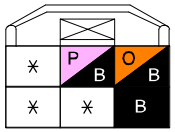

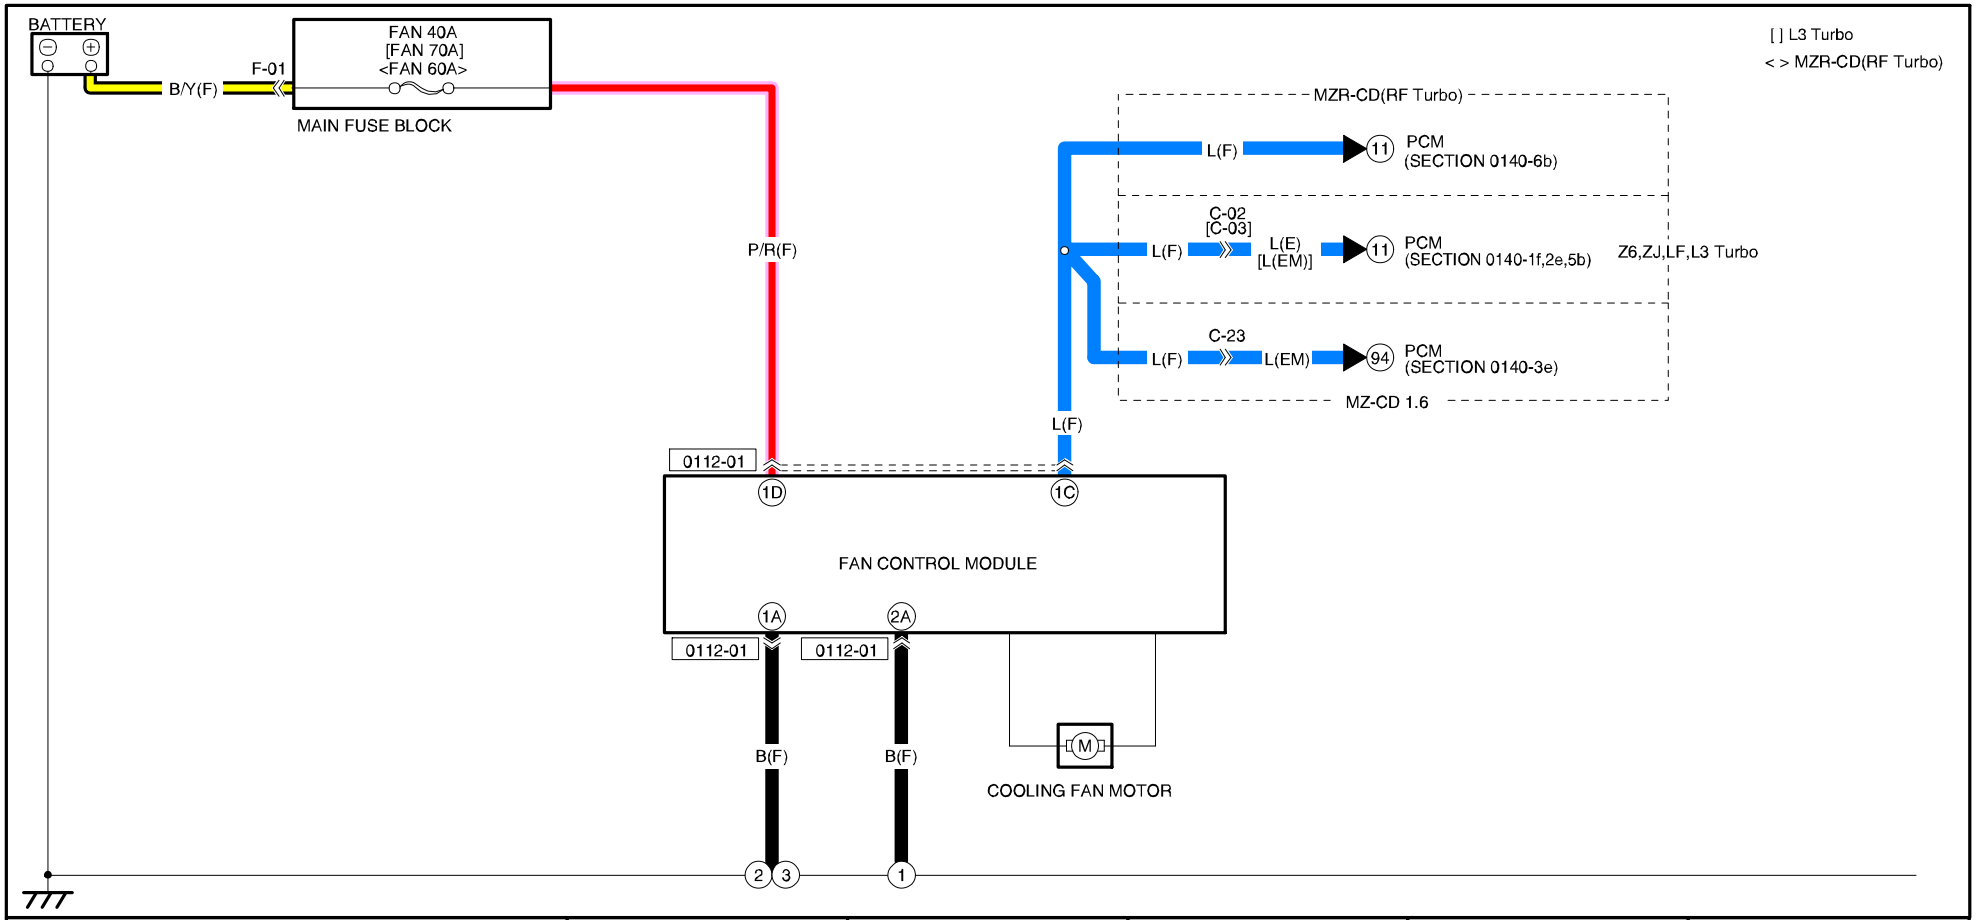


0112-01
FAN CONTROL MODULE

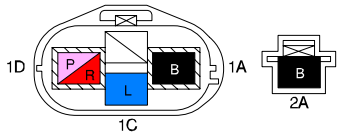

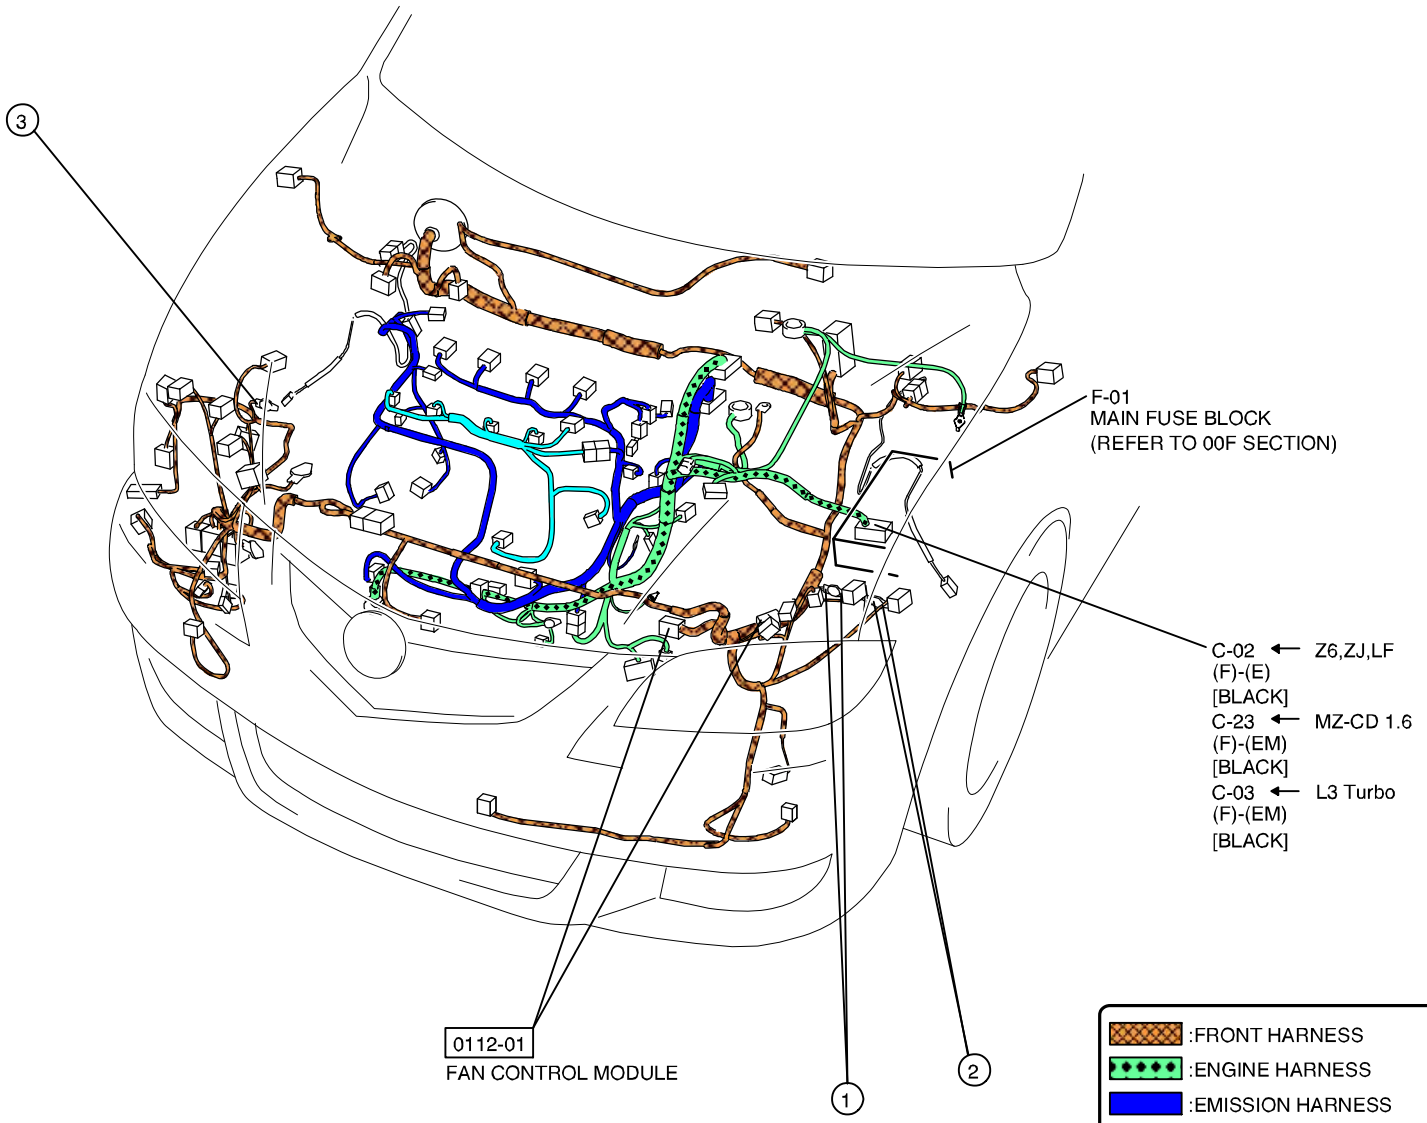

3
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-02 ← Z6,ZJ,LF
(F)-(E)
[BLACK]
C-23 ← MZ-CD 1.6
(F)-(EM)
[BLACK]
C-03 ← L3 Turbo
(F)-(EM)
[BLACK]
0112-01
FAN CONTROL MODULE
1
2
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

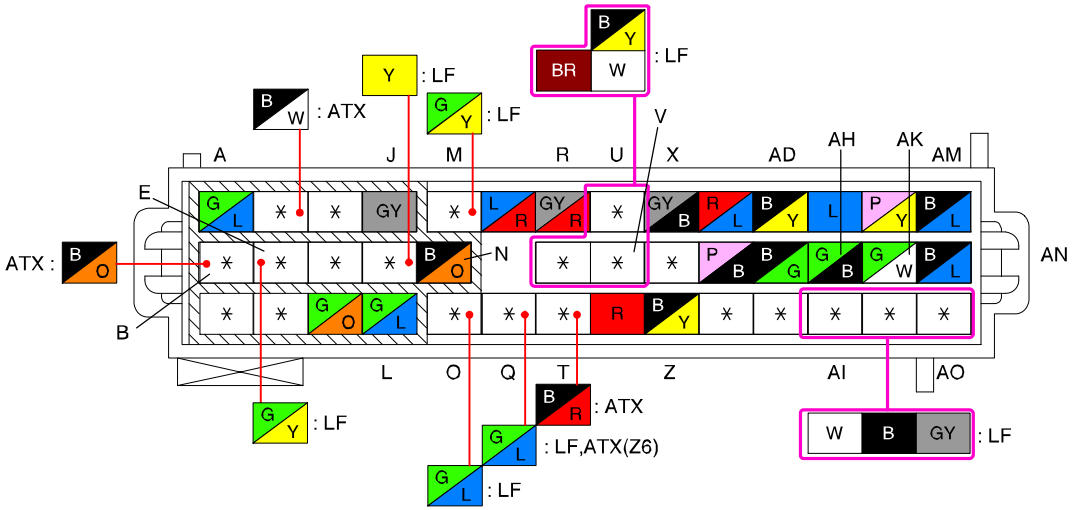


ENGINE HARNESS

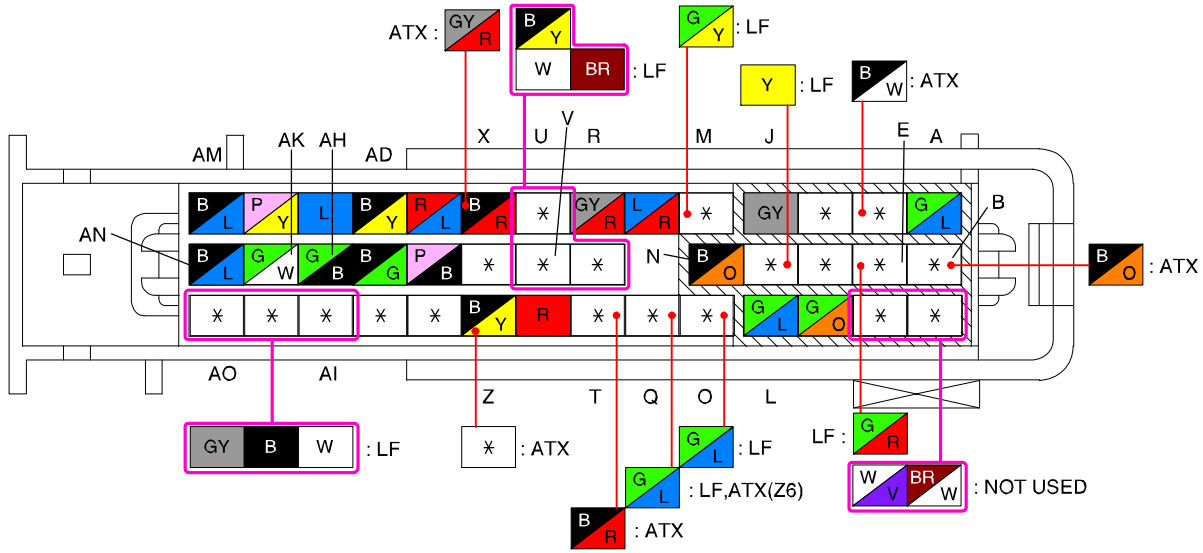


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

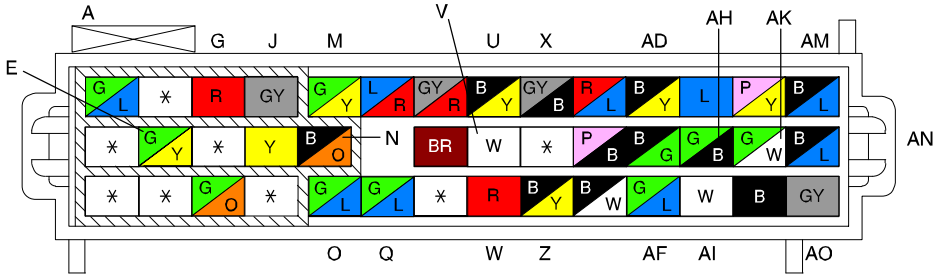


EMISSION HARNESS

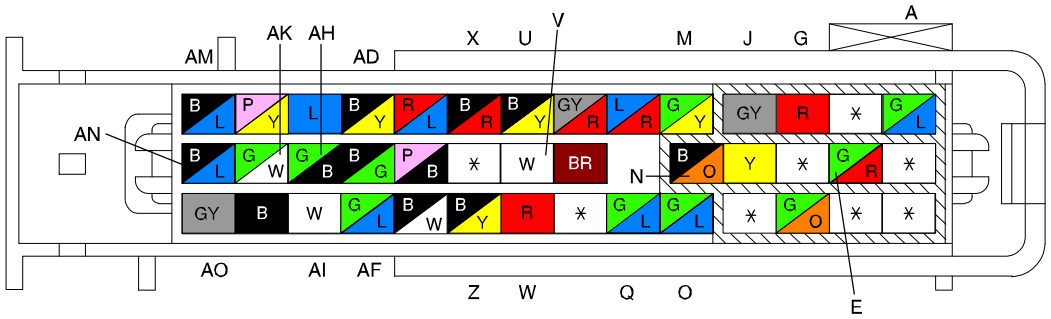



C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

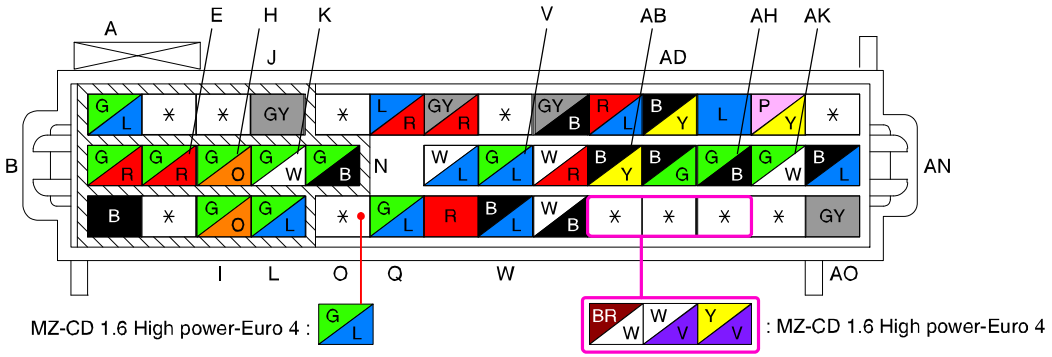



EMISSION HARNESS

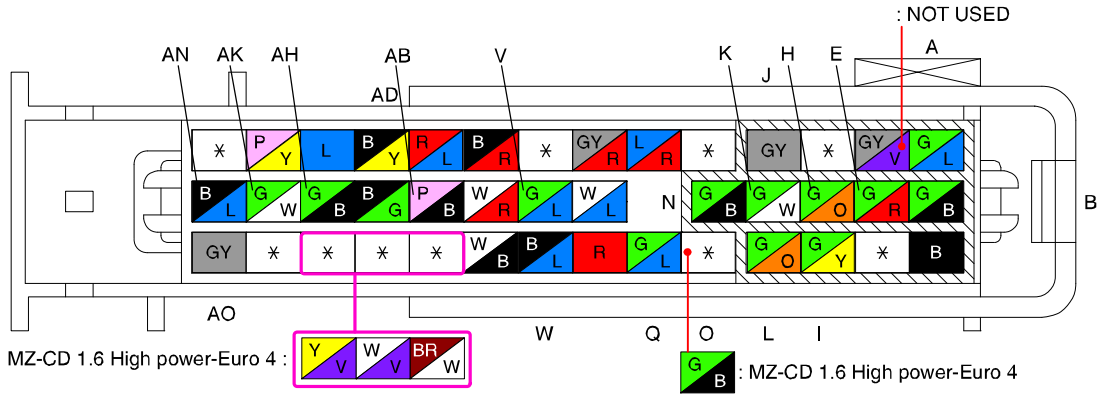

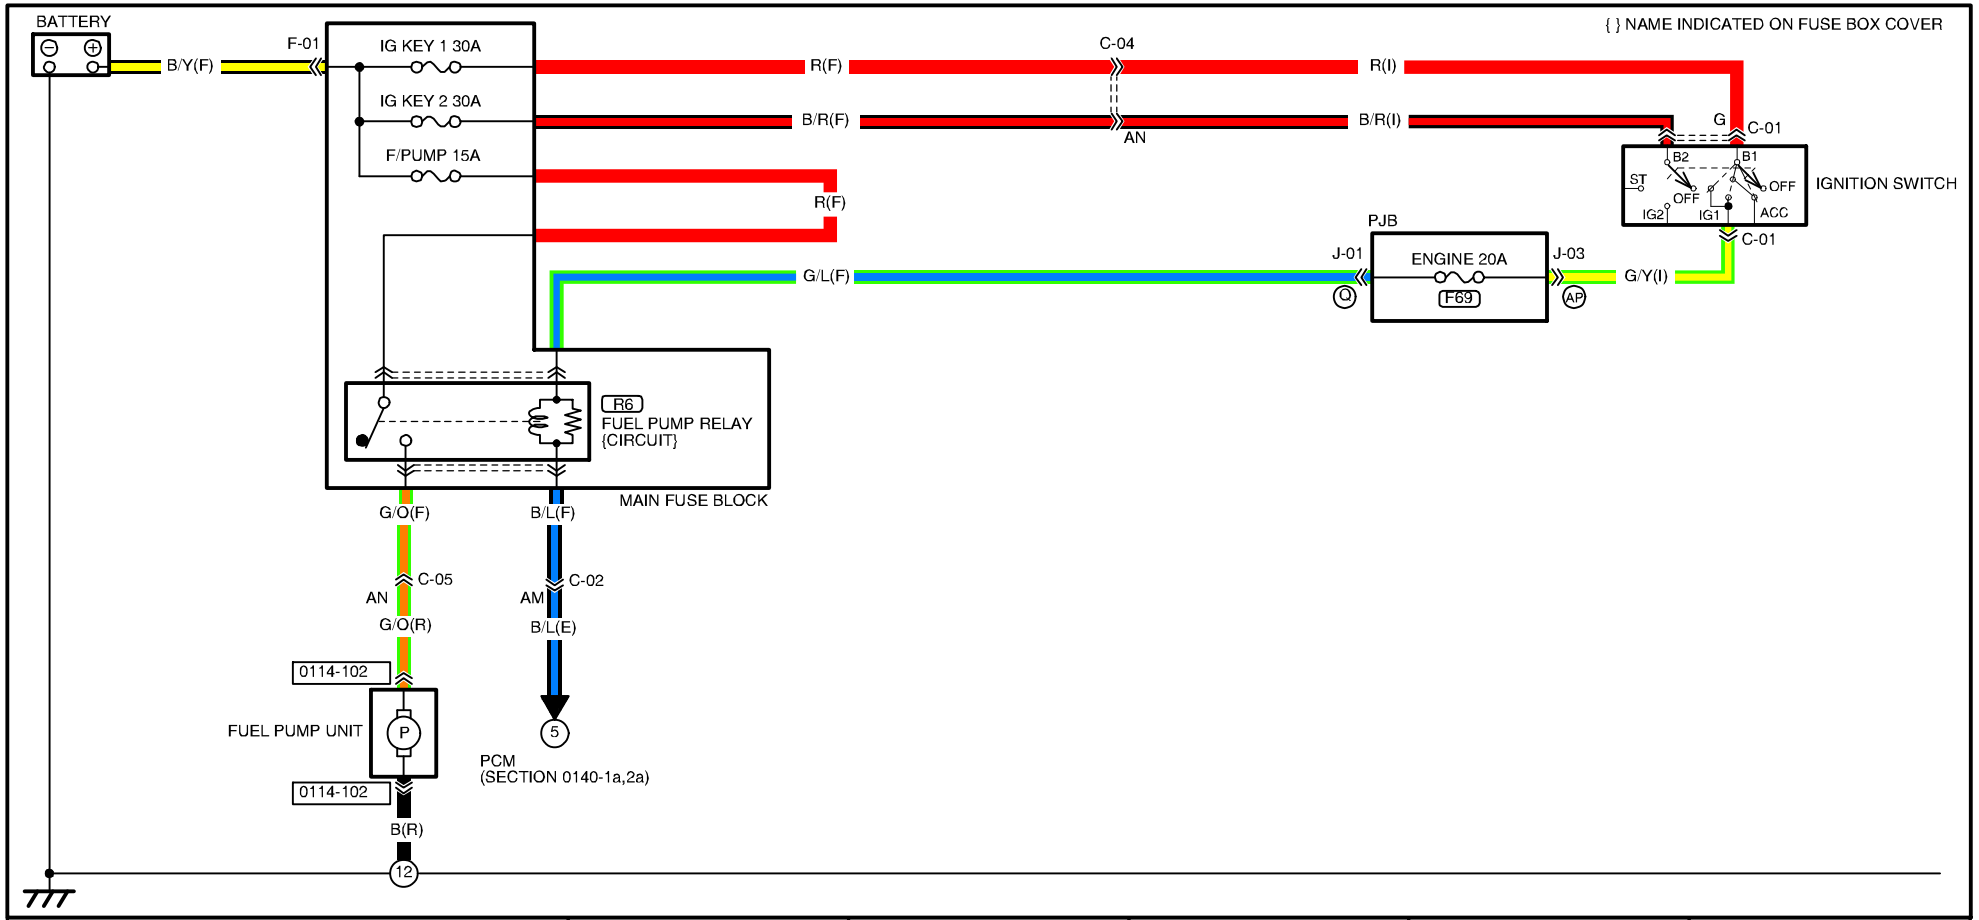


0114-102
FUEL PUMP UNIT



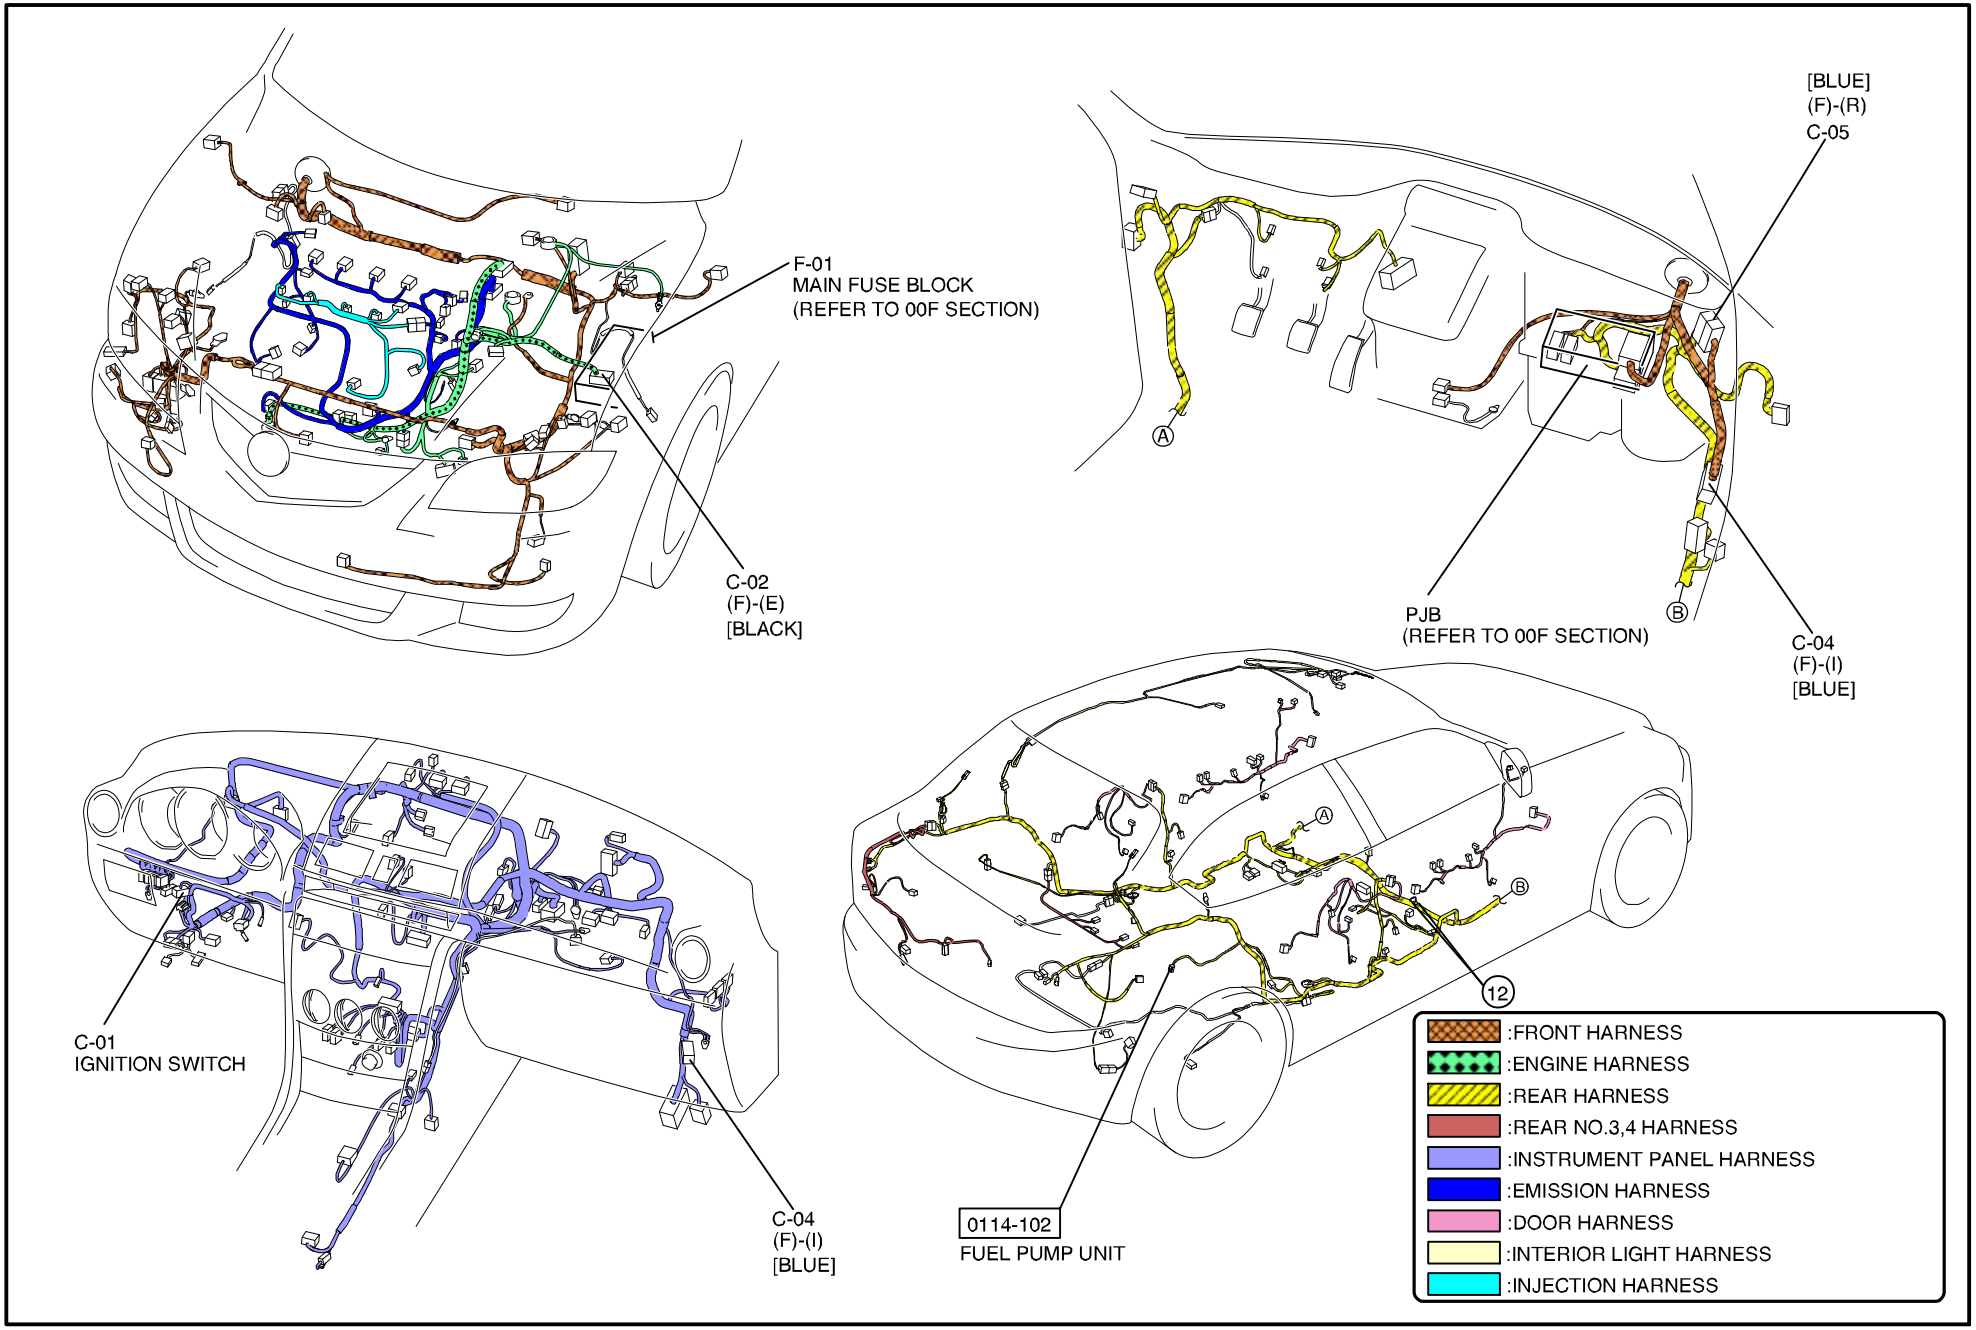

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-02
(F)-(E)
[BLACK]
[BLUE]
(F)-(R)
C-05
PJB
(REFER TO 00F SECTION)
C-04
(F)-(I)
[BLUE]
C-01
IGNITION SWITCH
C-04
(F)-(I)
[BLUE]
0114-102
FUEL PUMP UNIT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/←— Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ←— MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

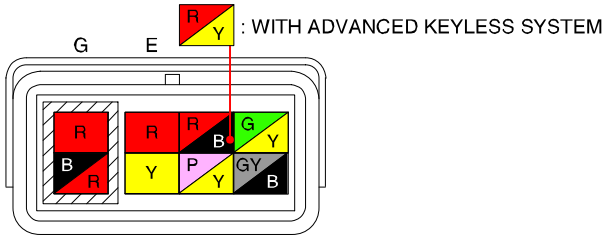


C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

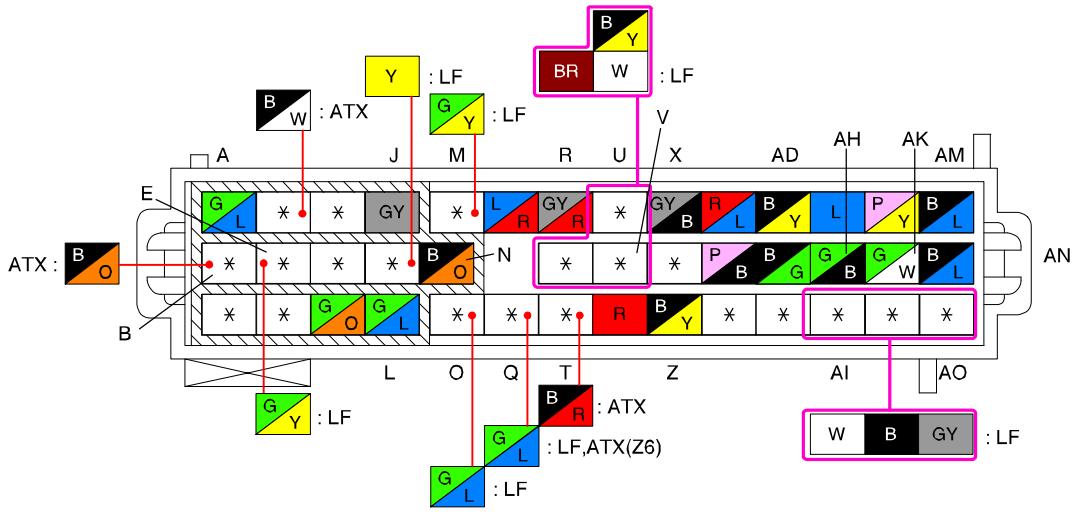


ENGINE HARNESS

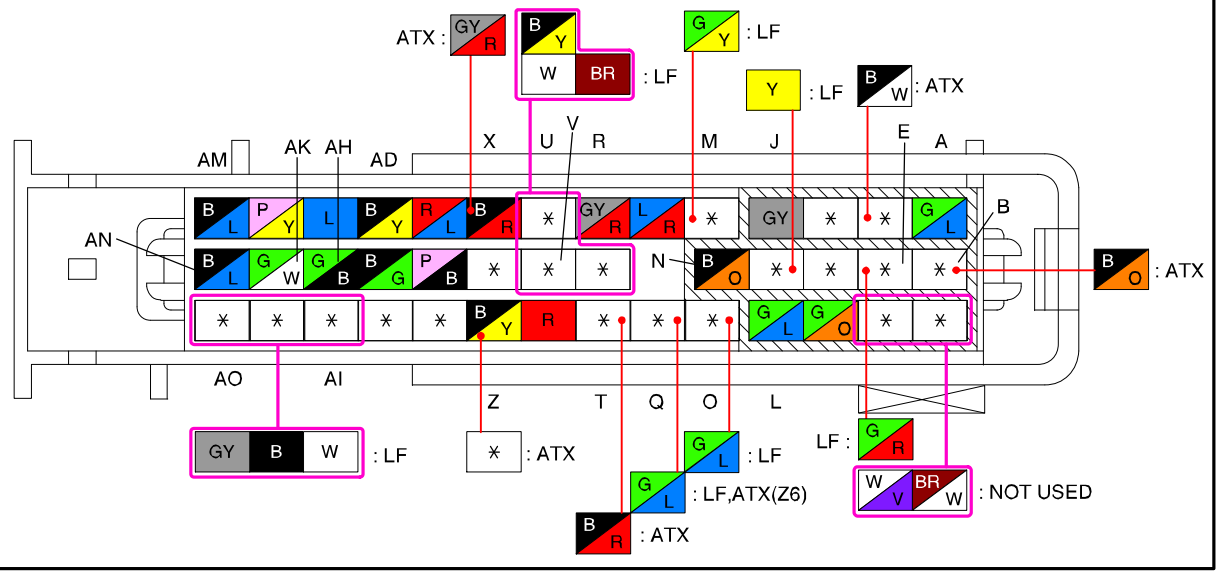


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

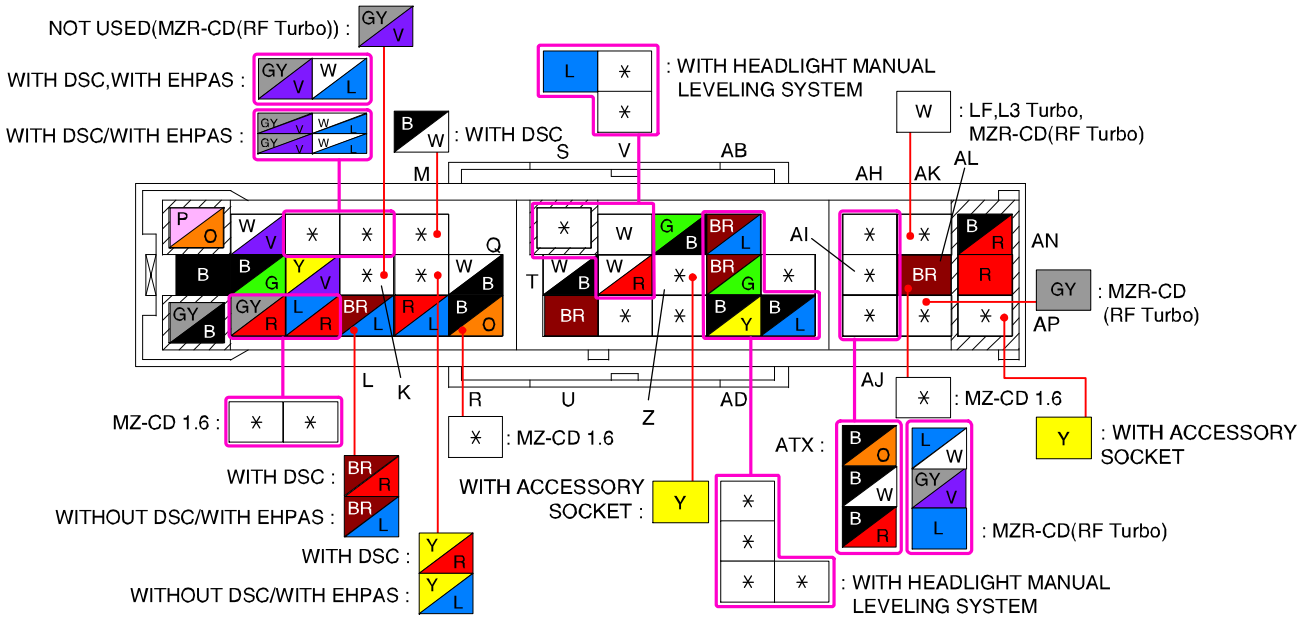


INSTRUMENT PANEL HARNESS

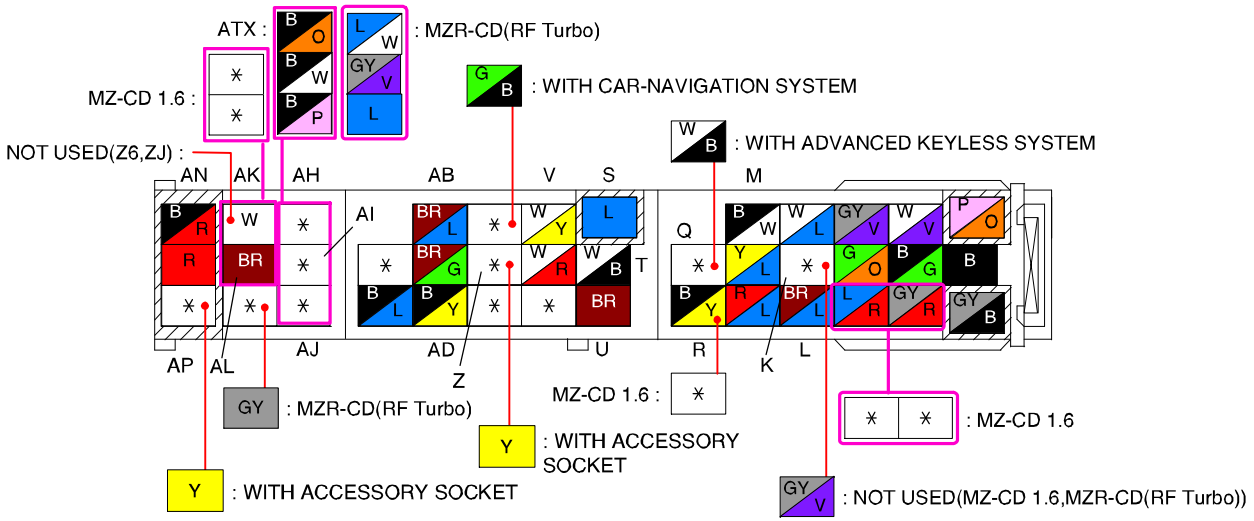


C-05
FRONT HARNESS-REAR HARNESS


FRONT HARNESS

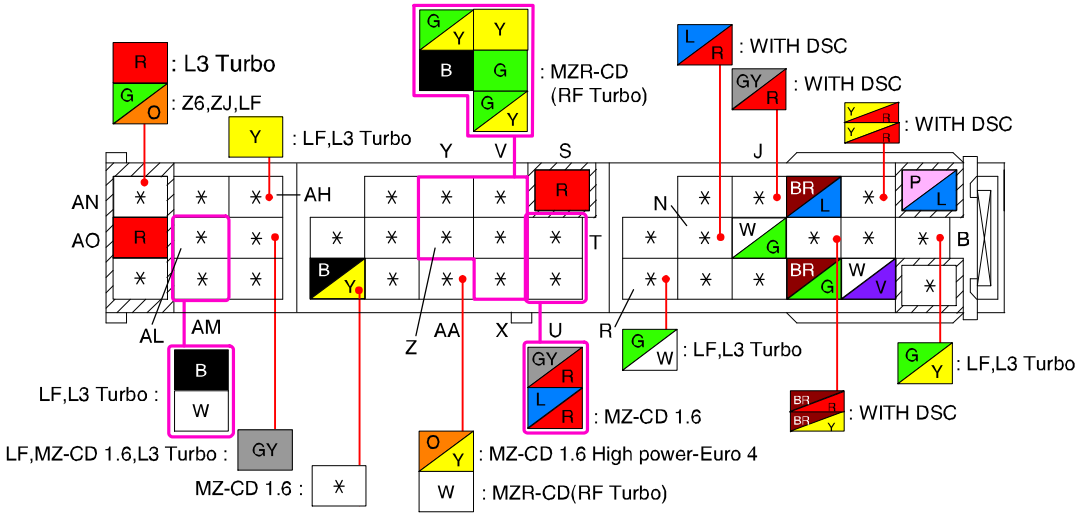

REAR HARNESS

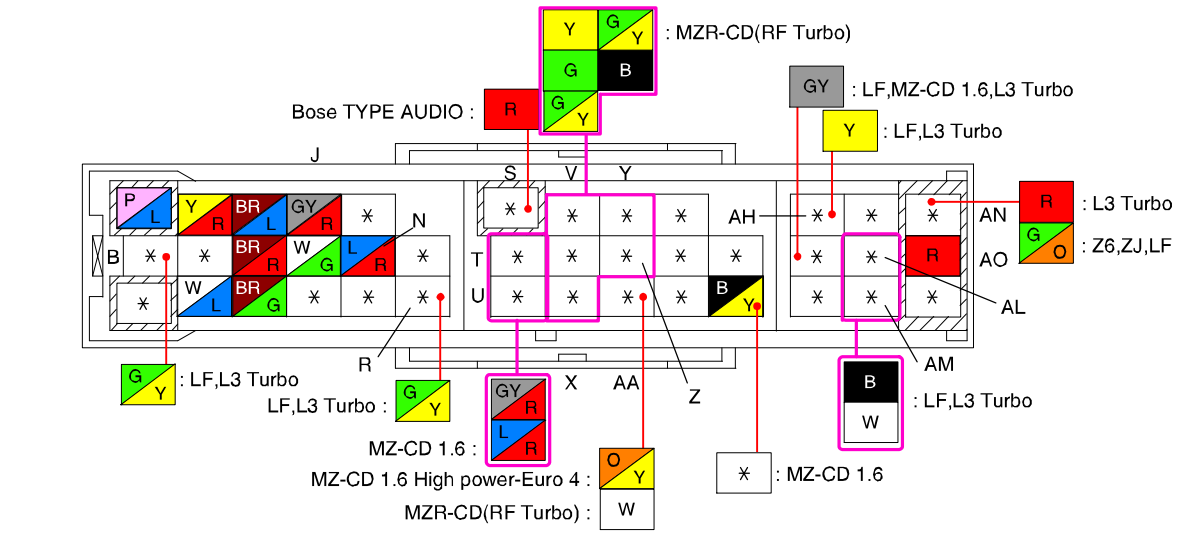


FUEL WARMER (MZ-CD 1.6)

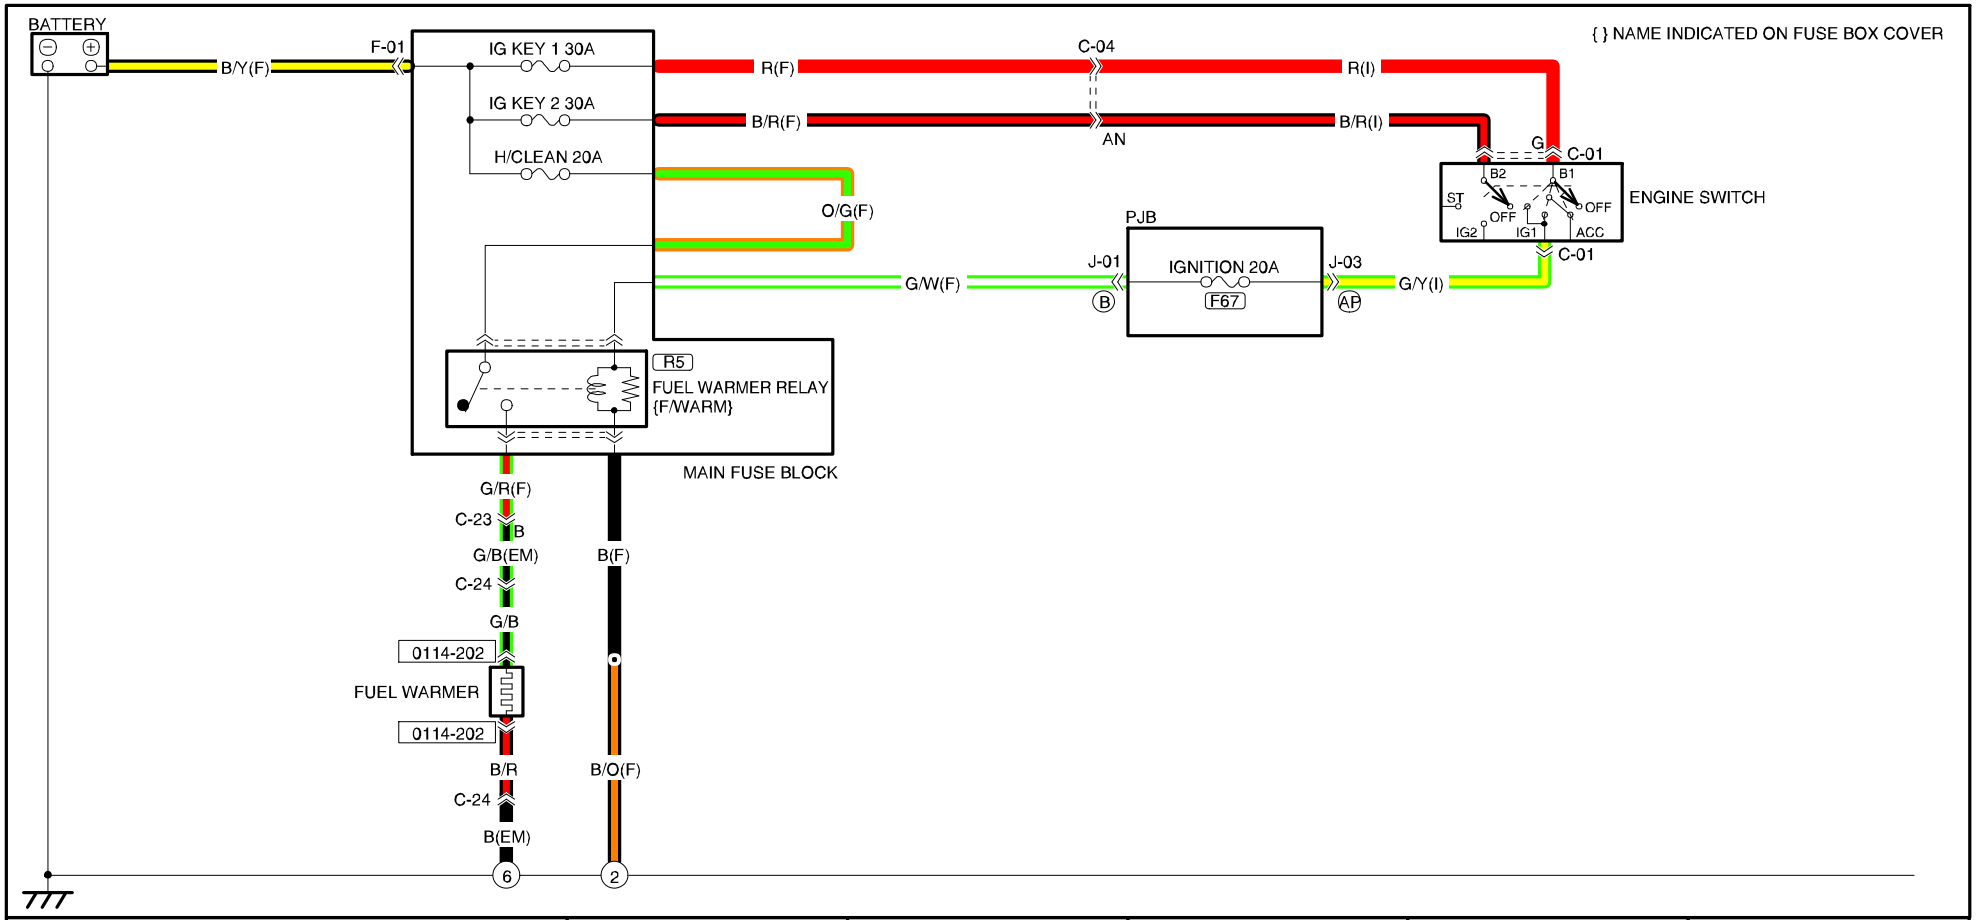


0114-202
FUEL WARMER

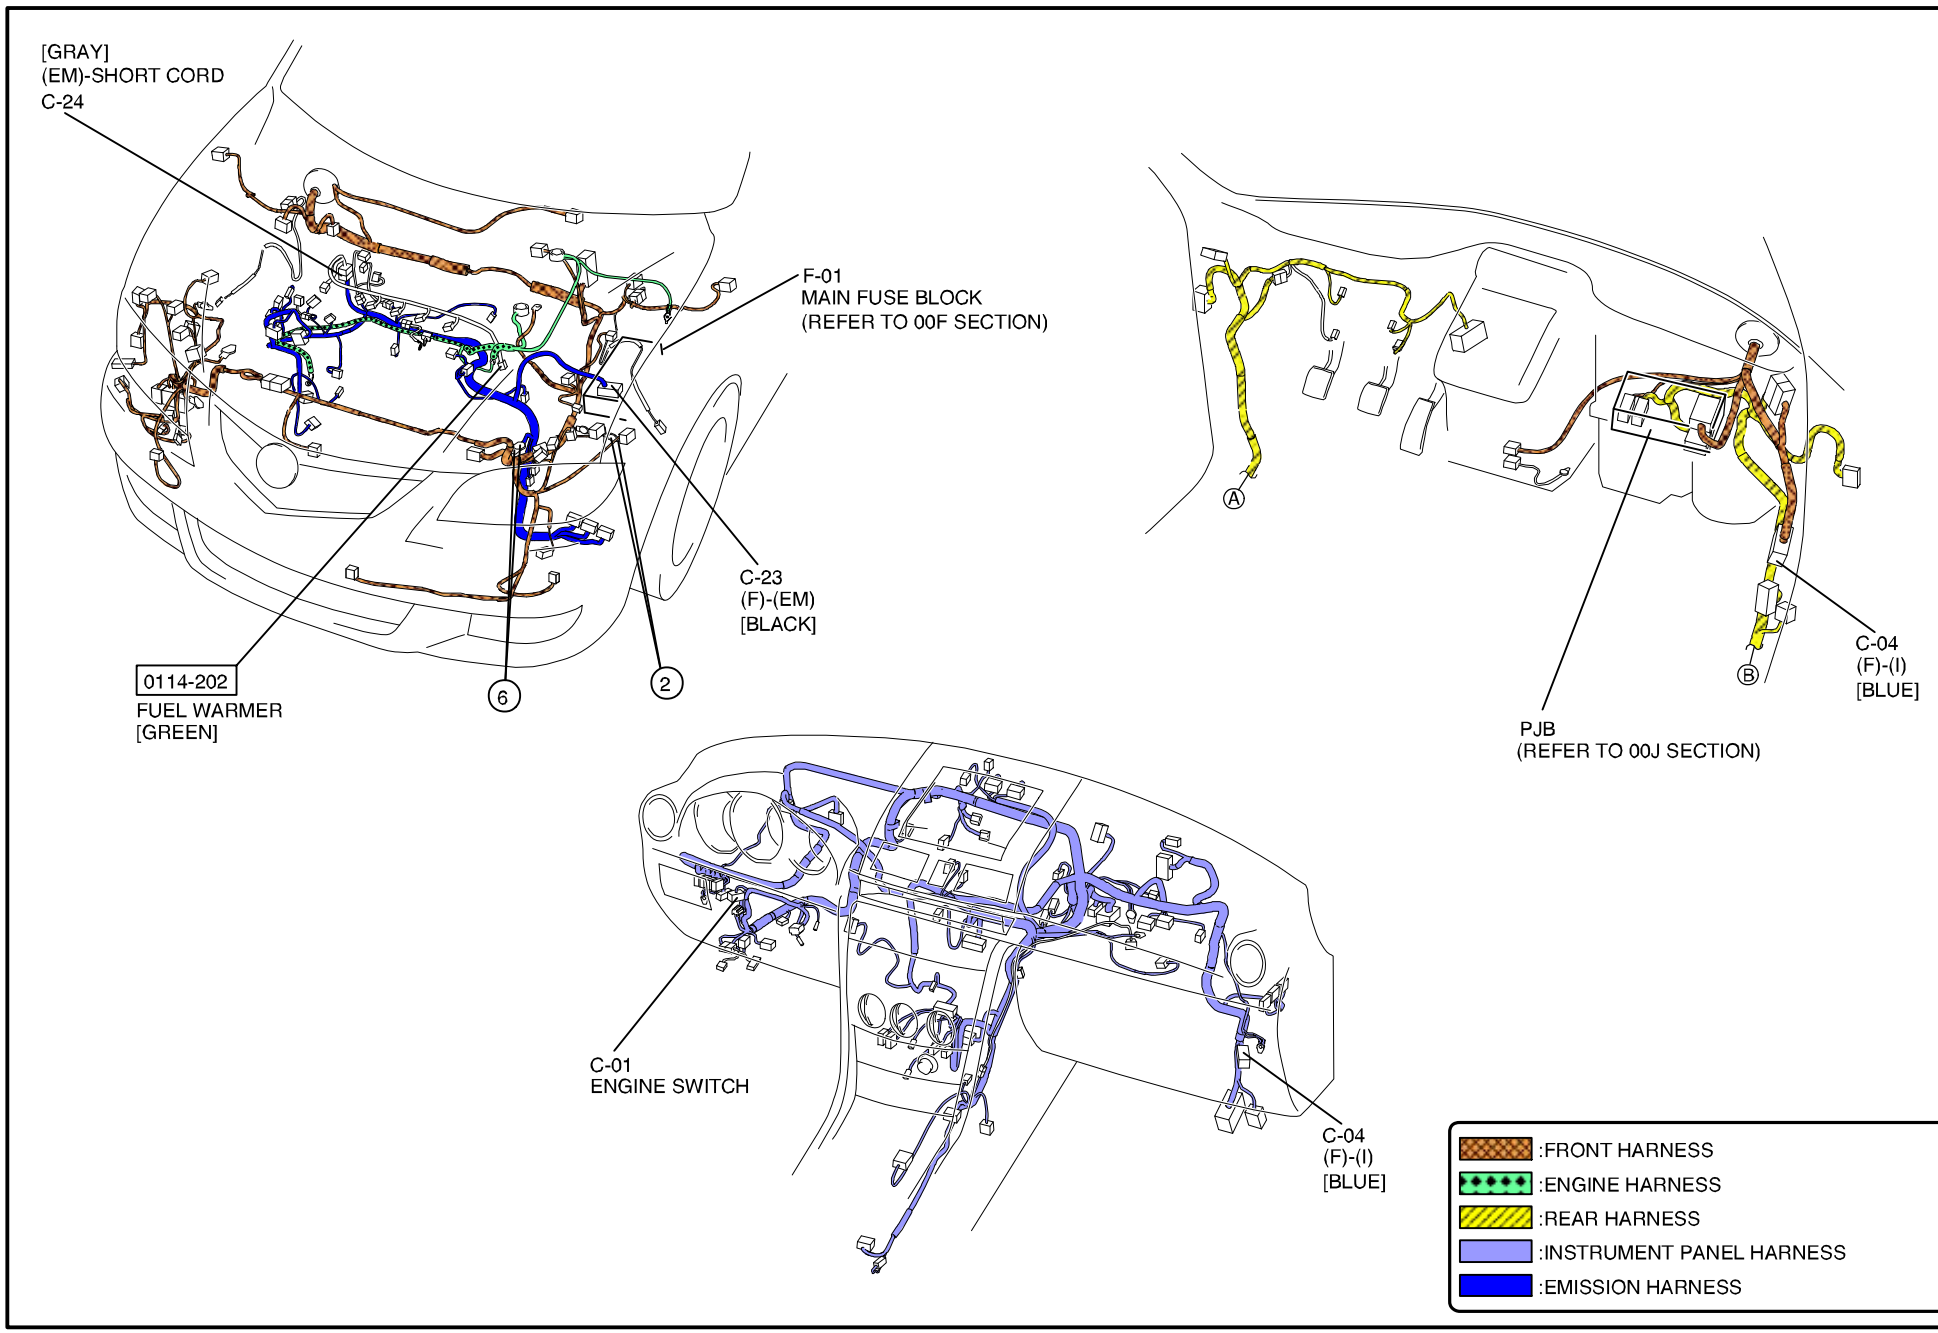



[GRAY]
(EM)-SHORT CORD
C-24
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-23
(F)-(EM)
[BLACK]
0114-202
FUEL WARMER
[GREEN]
6
2
A
B
C-04
(F)-(I)
[BLUE]
PJB
(REFER TO 00J SECTION)
C-01
ENGINE SWITCH
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS

C-01
IGNITION SWITCH/← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ← MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

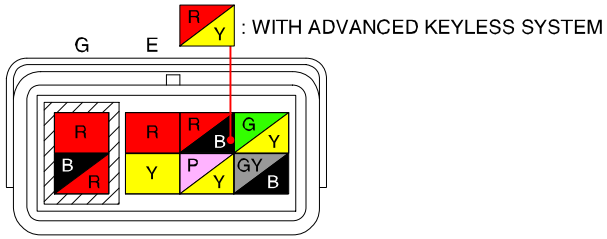


C-24
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

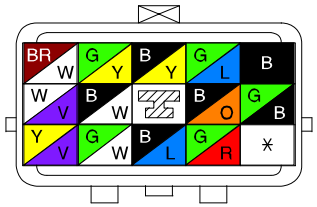


SHORT CORD

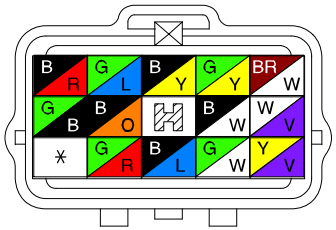


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

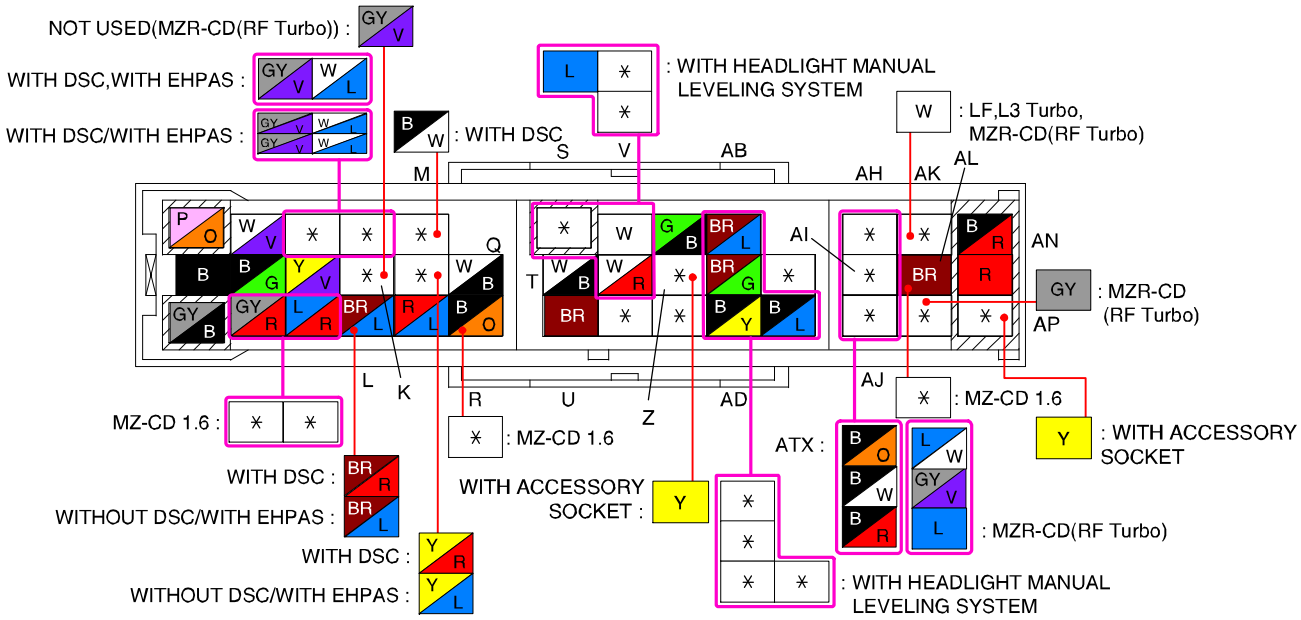


INSTRUMENT PANEL HARNESS

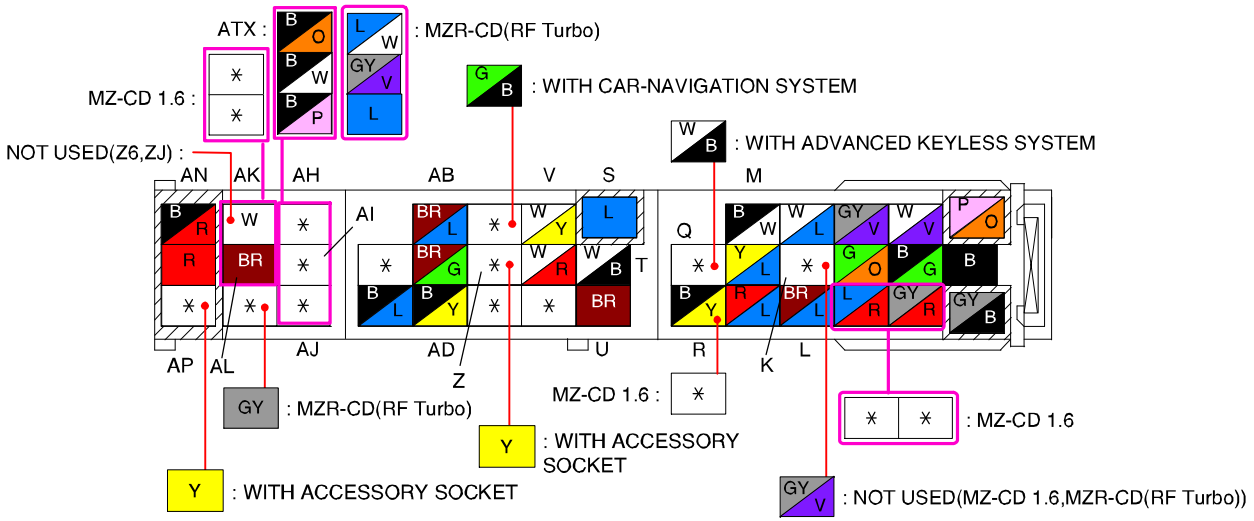



C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

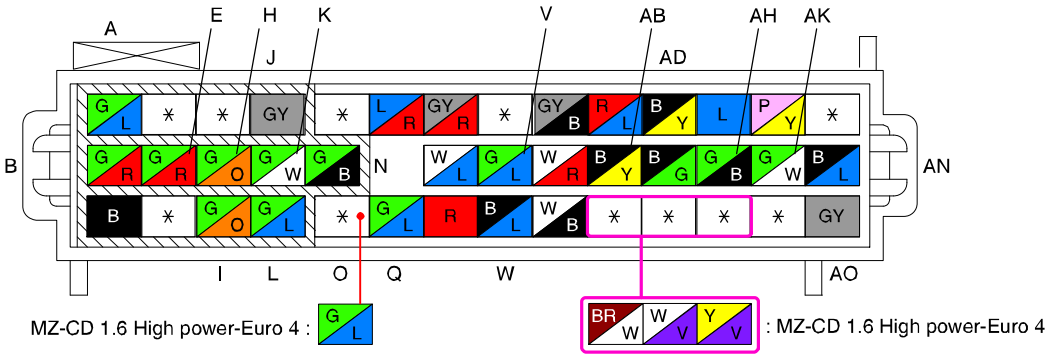


EMISSION HARNESS

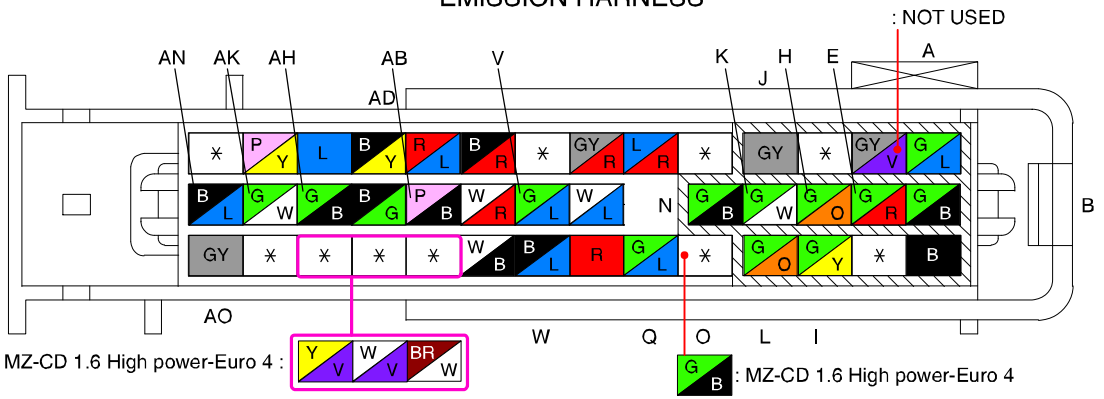


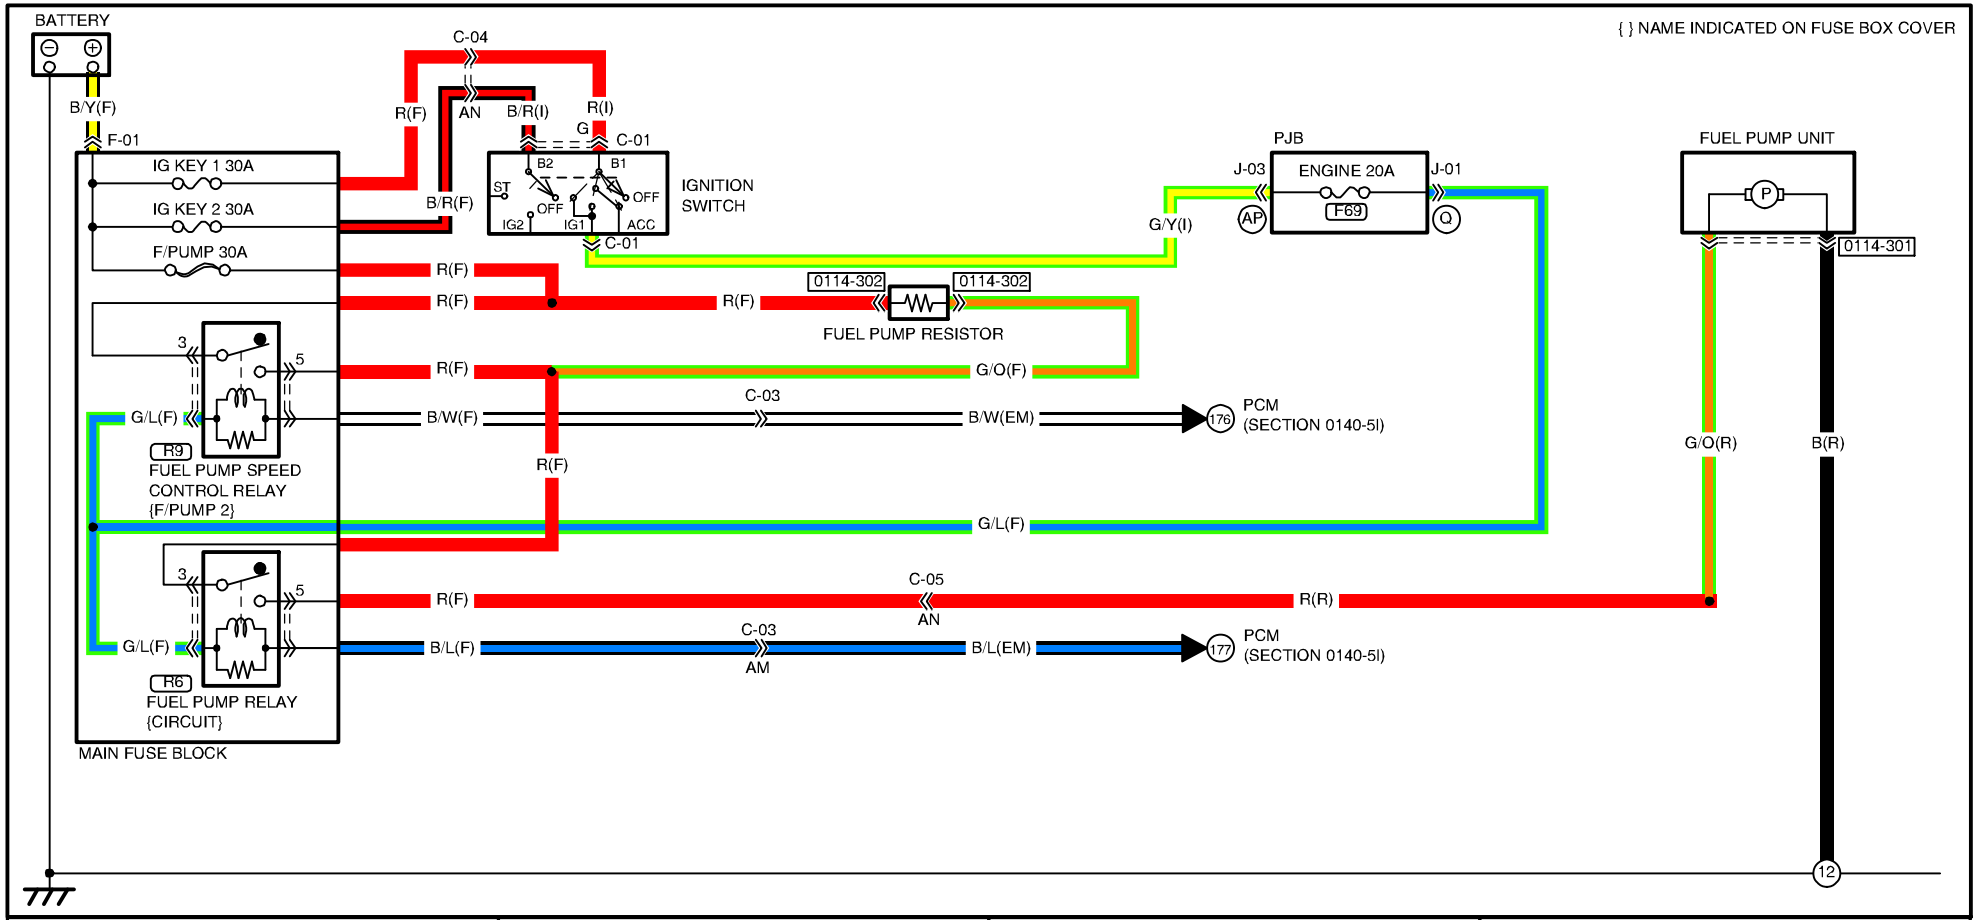


0114-301
FUEL PUMP UNIT




0114-302
FUEL PUMP RESISTOR



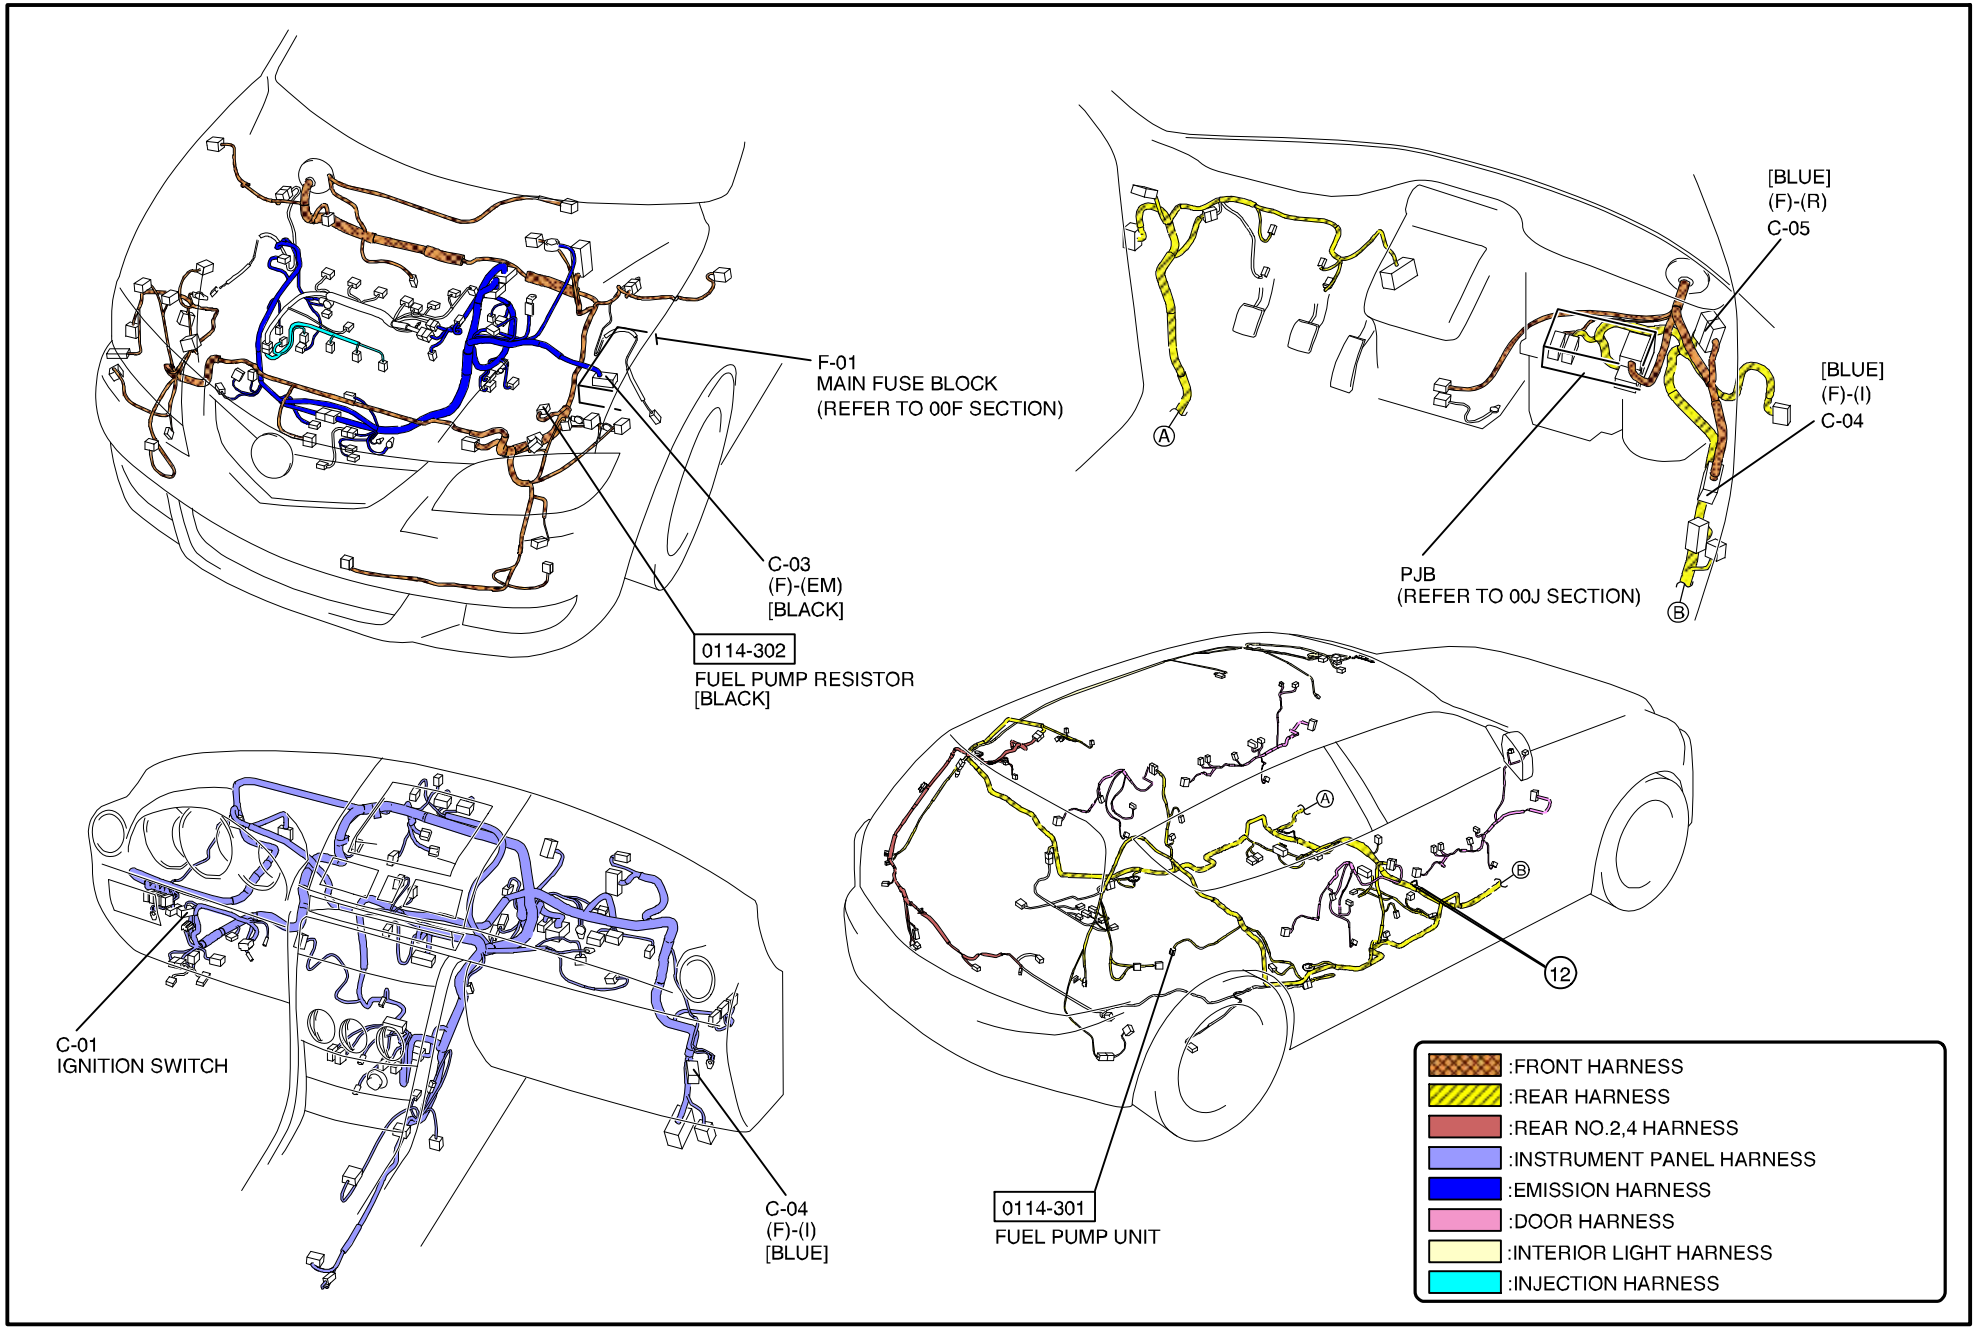

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-03
(F)-(EM)
[BLACK]
0114-302
FUEL PUMP RESISTOR
[BLACK]
[BLUE]
(F)-(R)
C-05
[BLUE]
(F)-(I)
C-04
PJB
(REFER TO 00J SECTION)
A
B
C-01
IGNITION SWITCH
C-04
(F)-(I)
[BLUE]
0114-301
FUEL PUMP UNIT
12
:FRONT HARNESS
:REAR HARNESS
:REAR NO.2,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

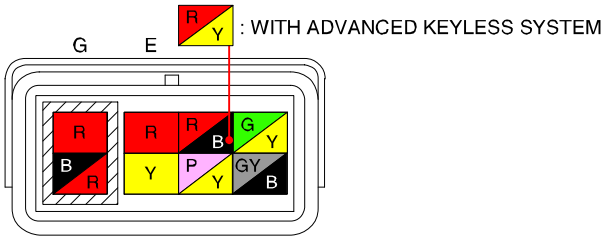


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

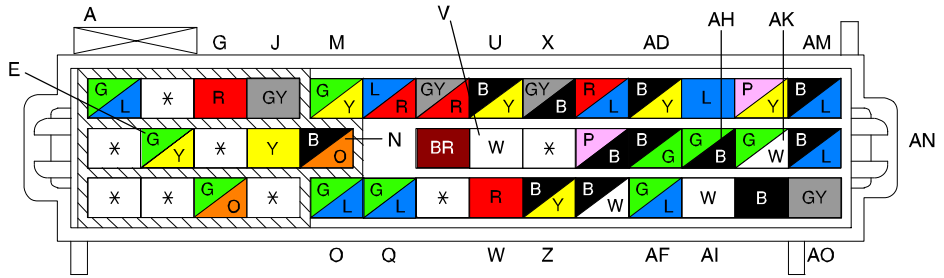


EMISSION HARNESS

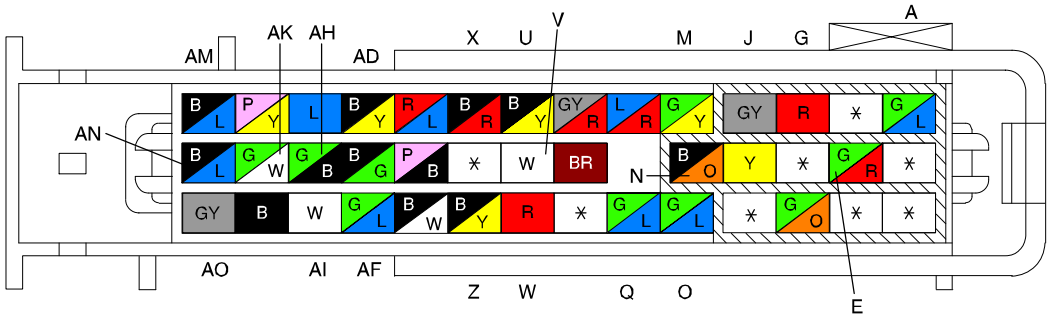


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

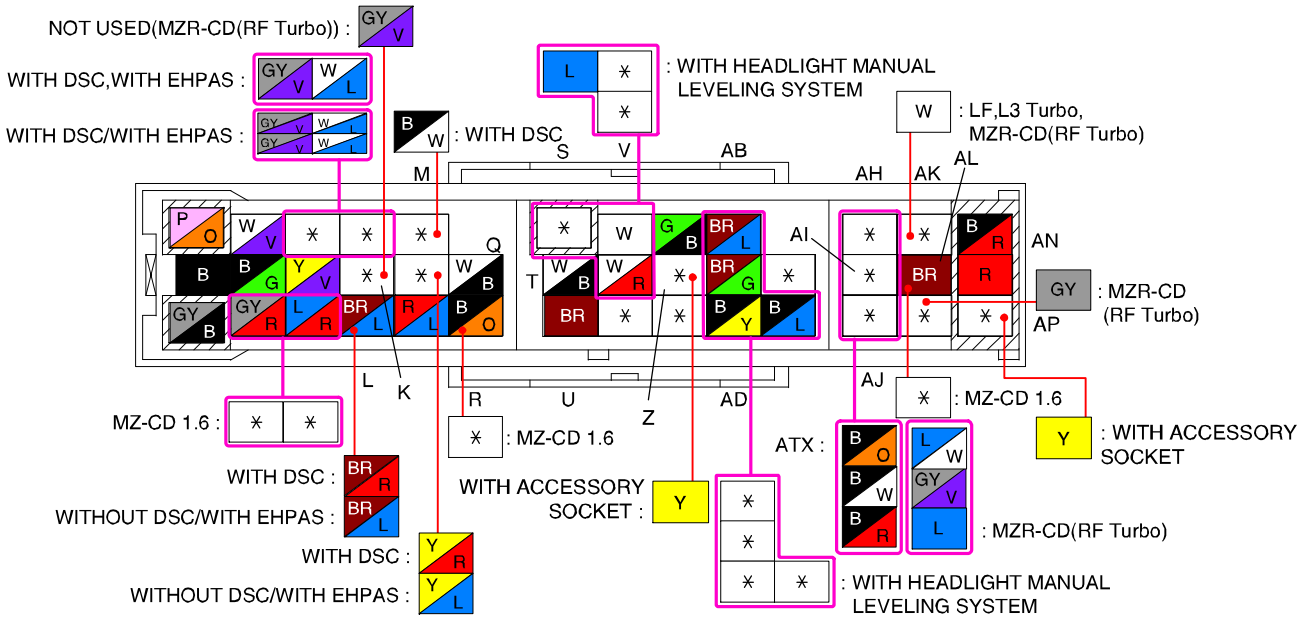


INSTRUMENT PANEL HARNESS

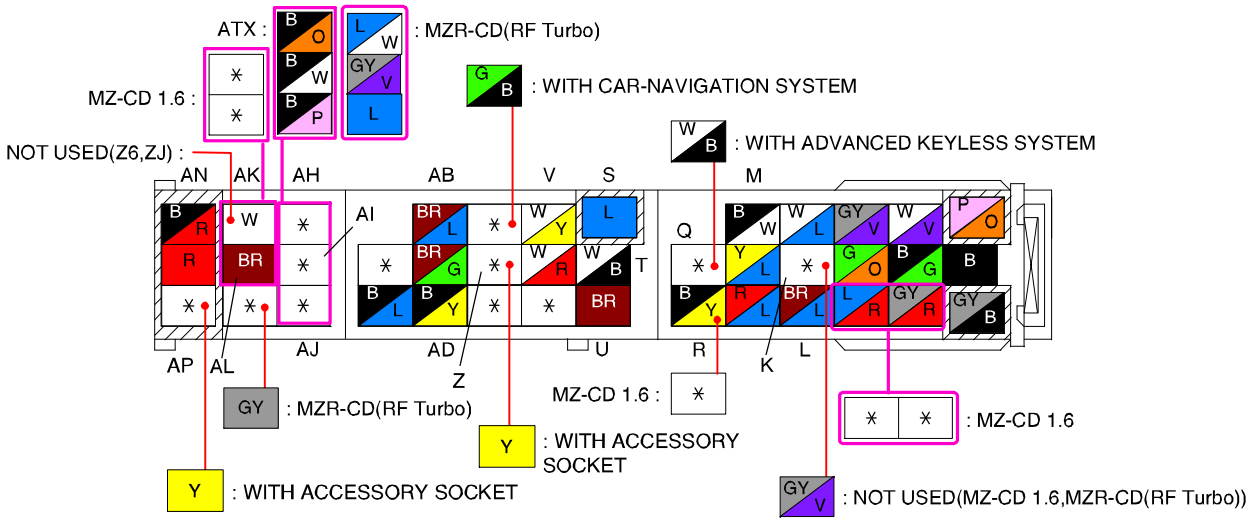


C-05
FRONT HARNESS-REAR HARNESS


FRONT HARNESS

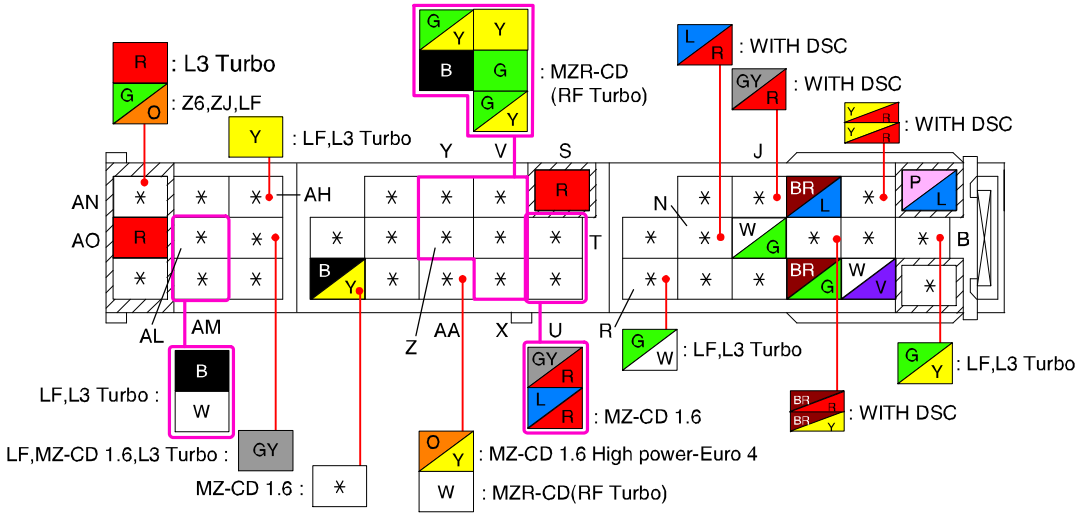


REAR HARNESS

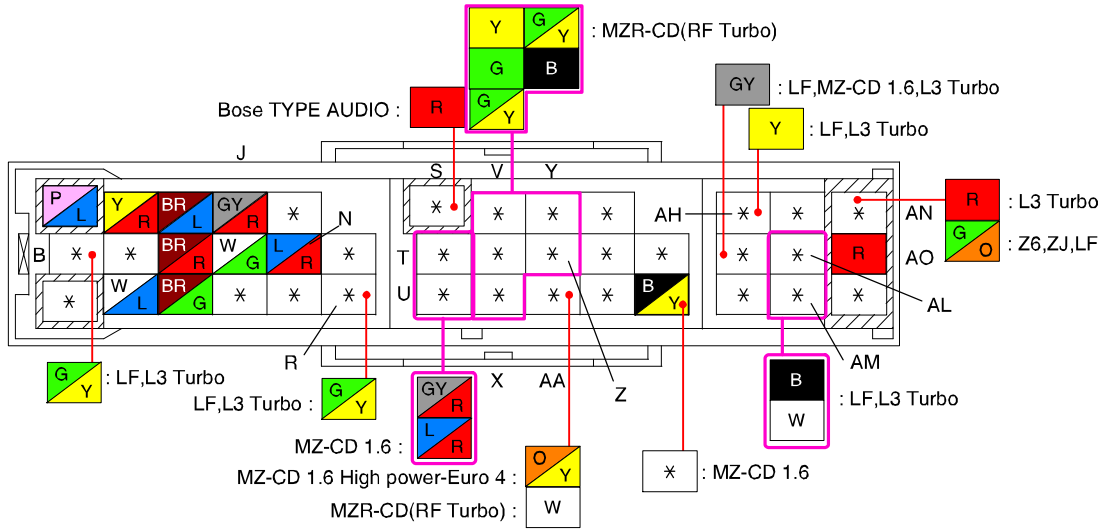


FUEL WARMER (MZR-CD (RF Turbo))

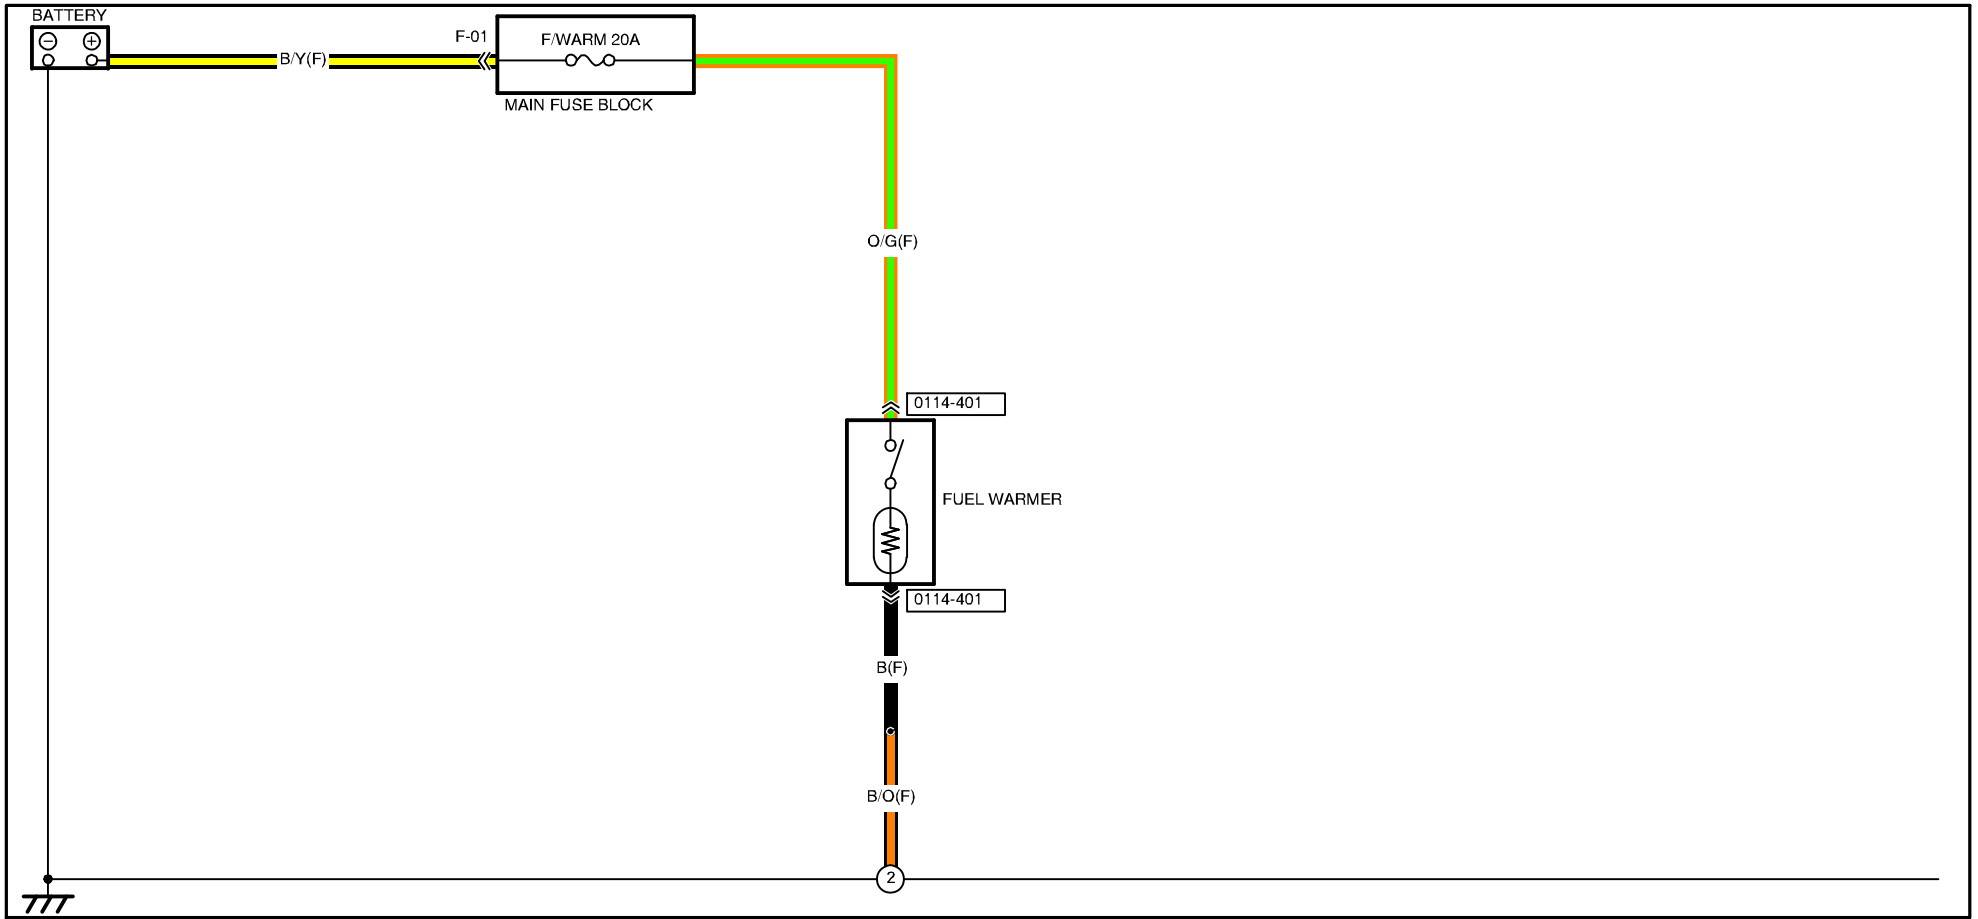


0114-401
FUEL WARMER



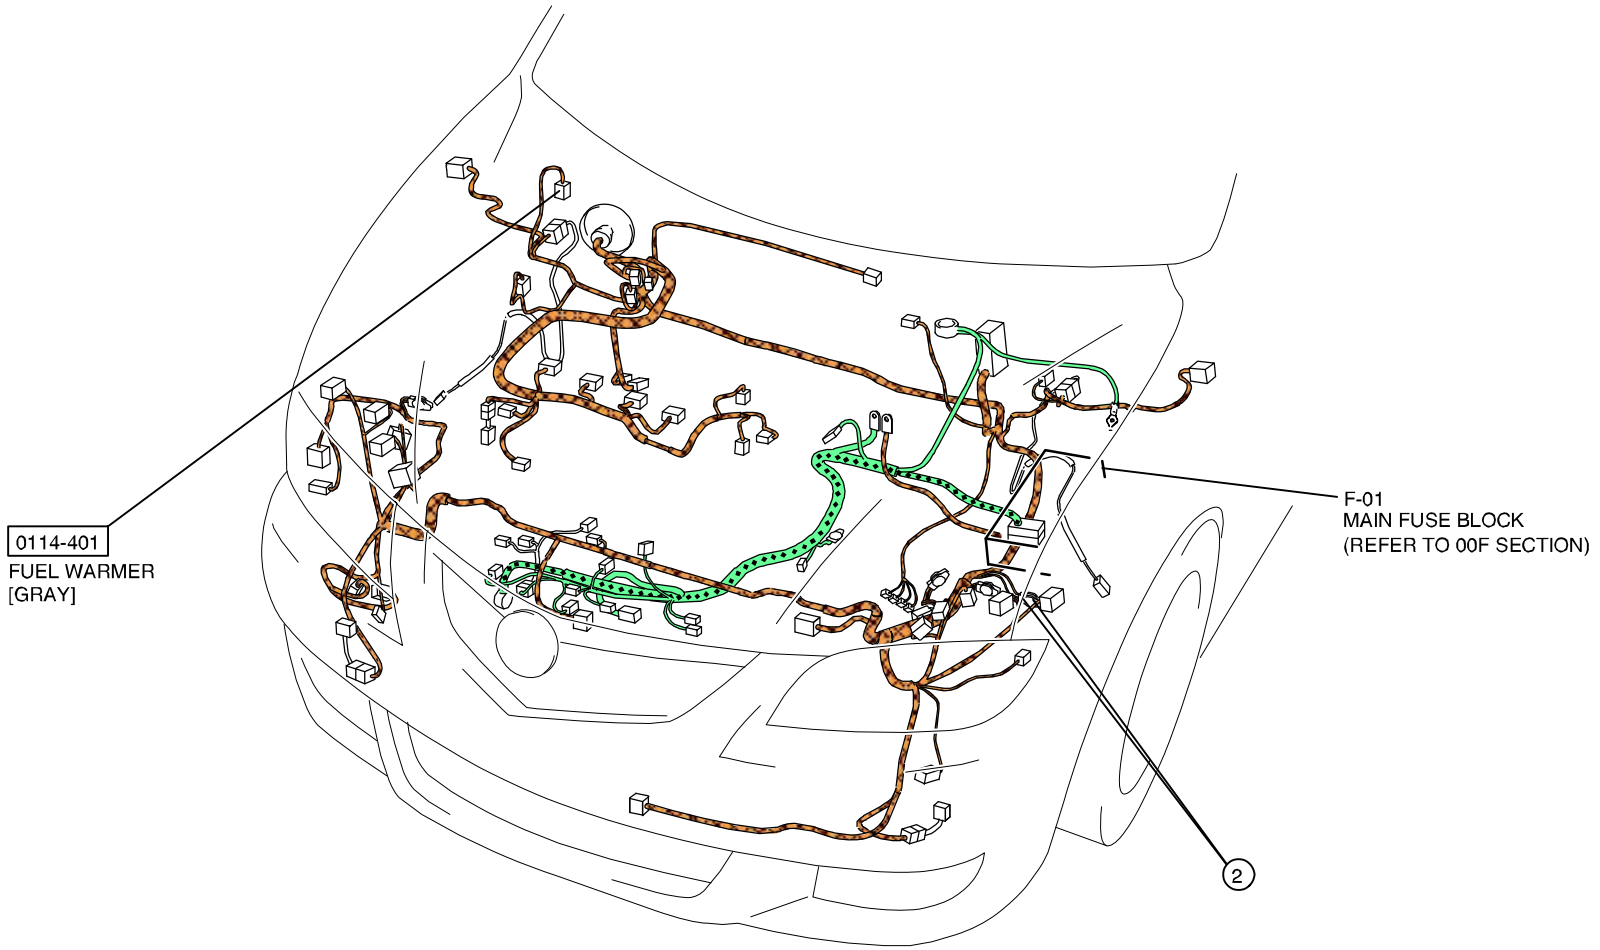
0114-401
FUEL WARMER
[GRAY]
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
1
2
:FRONT HARNESS
:ENGINE HARNESS

CHARGING SYSTEM (Z6,ZJ,LF)

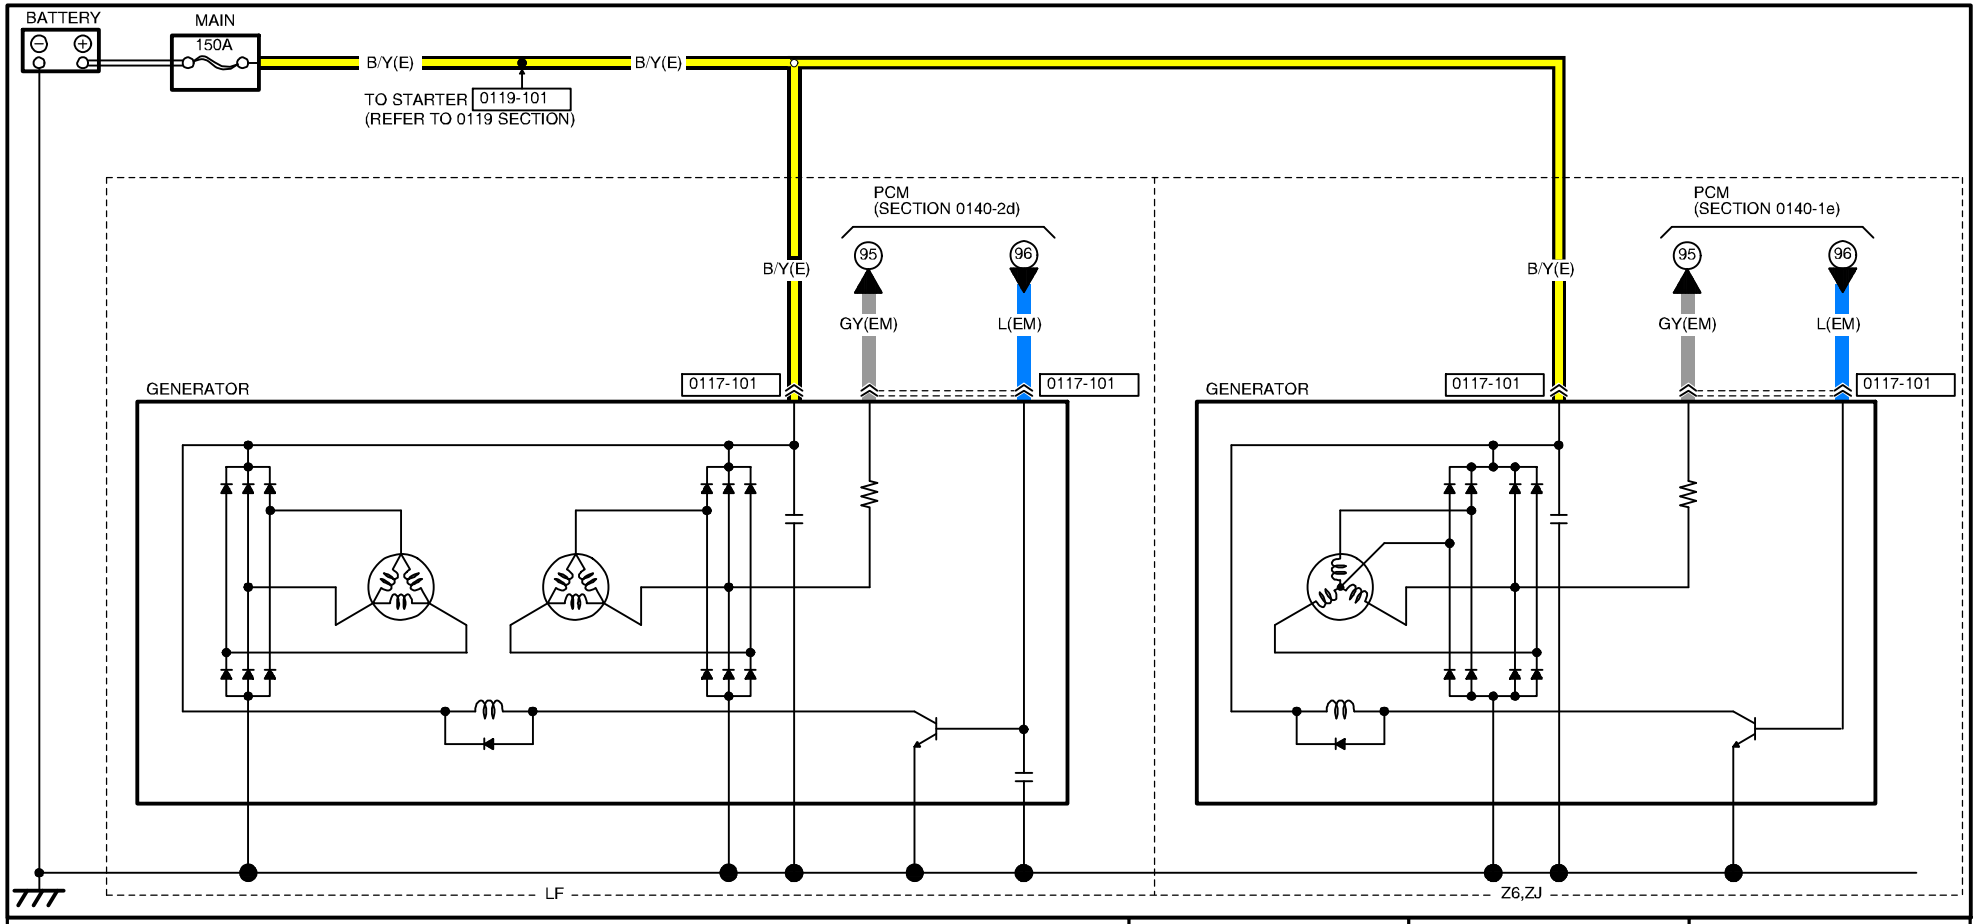


0117-101
GENERATOR

ENGINE HARNESS



EMISSION HARNESS




(Z6,ZJ)


ENGINE HARNESS




EMISSION HARNESS



(LF)

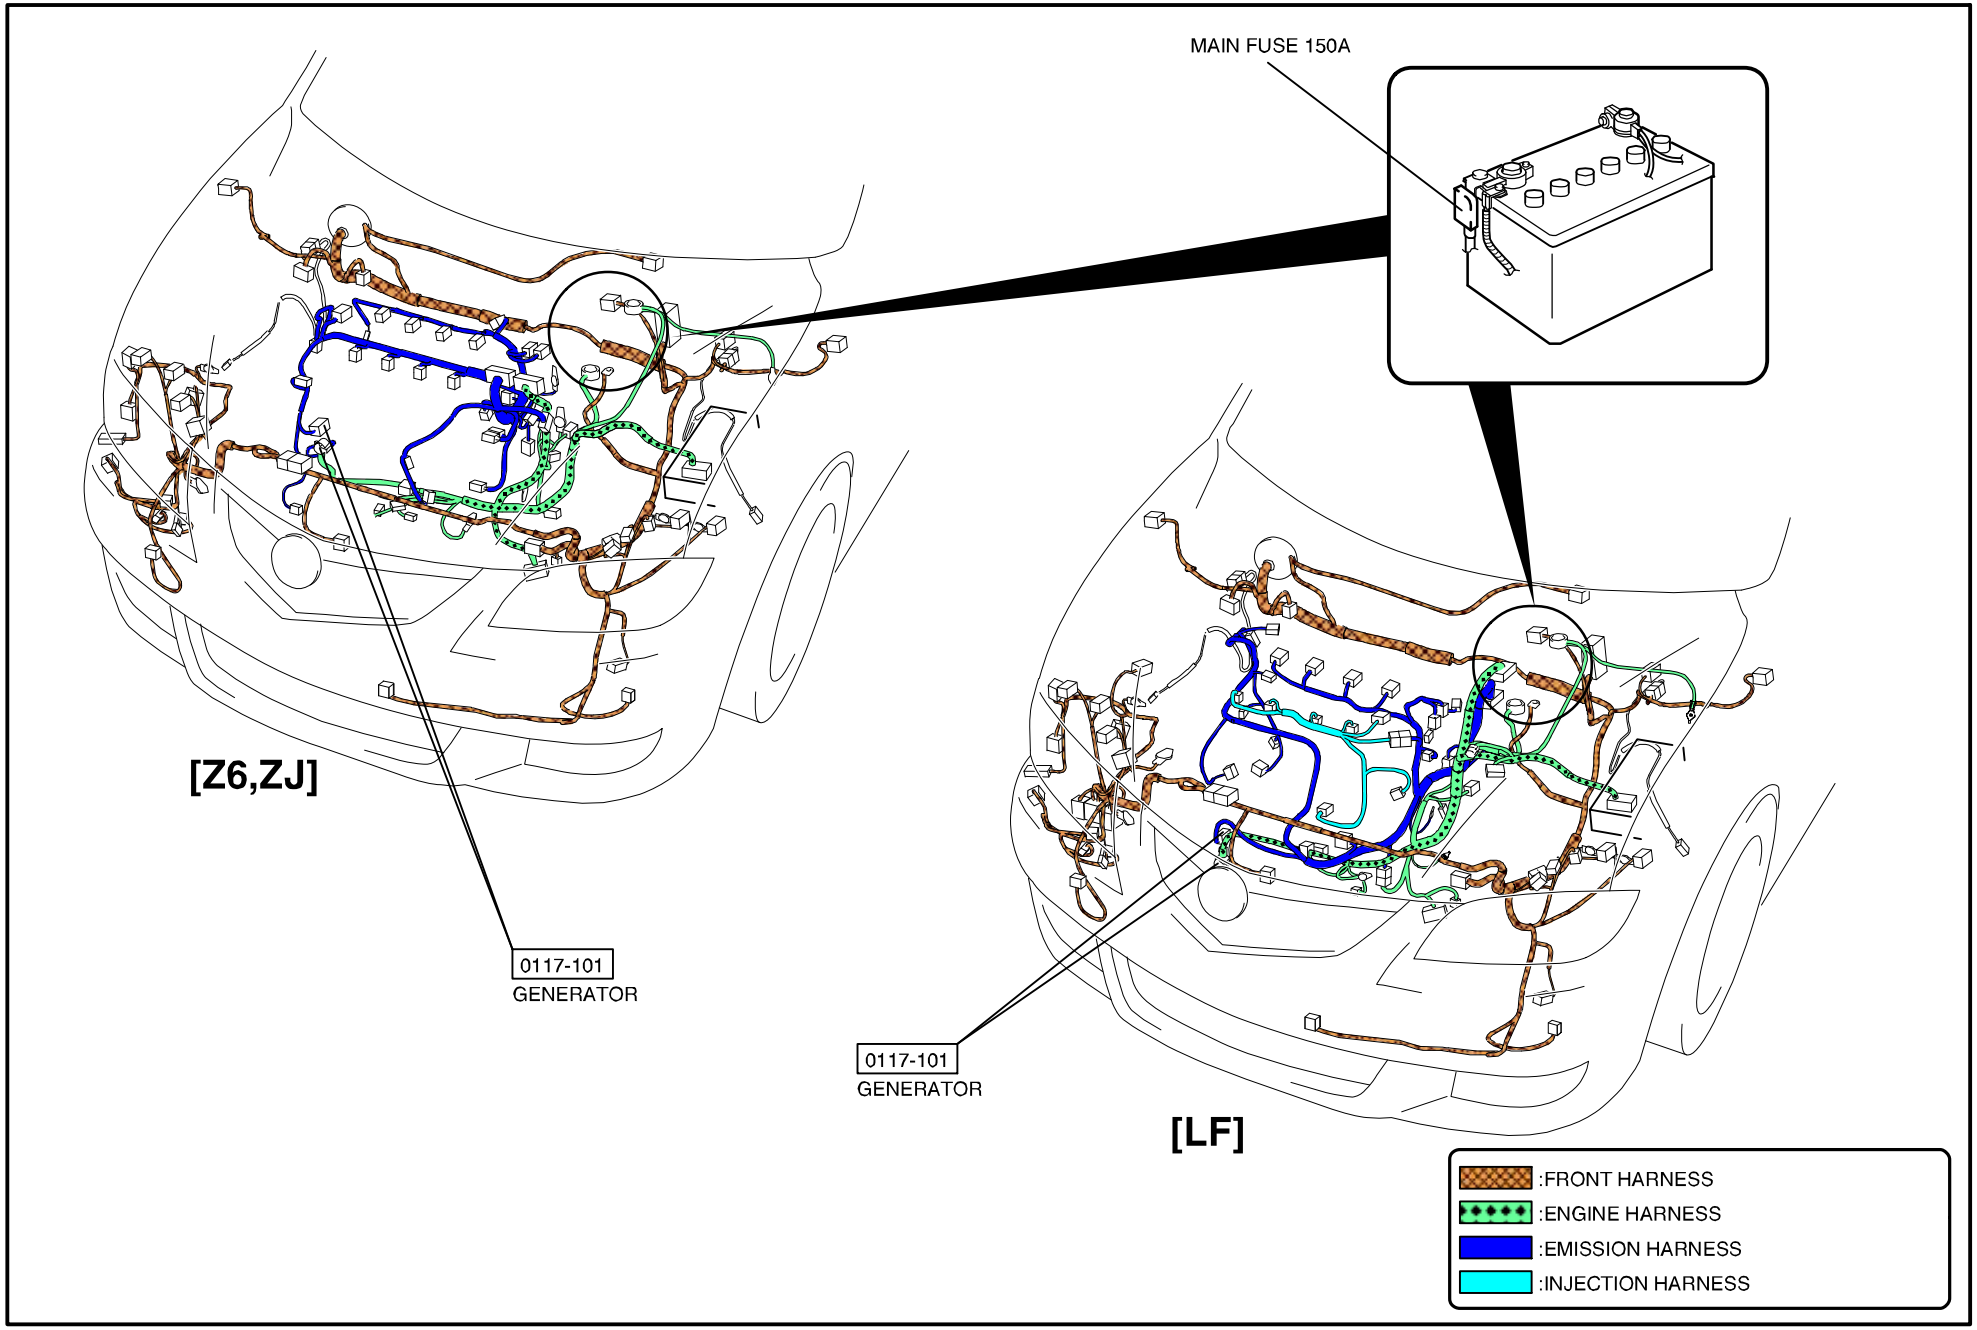
MAIN FUSE 150A
[Z6,ZJ]
0117-101
GENERATOR
0117-101
GENERATOR
[LF]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

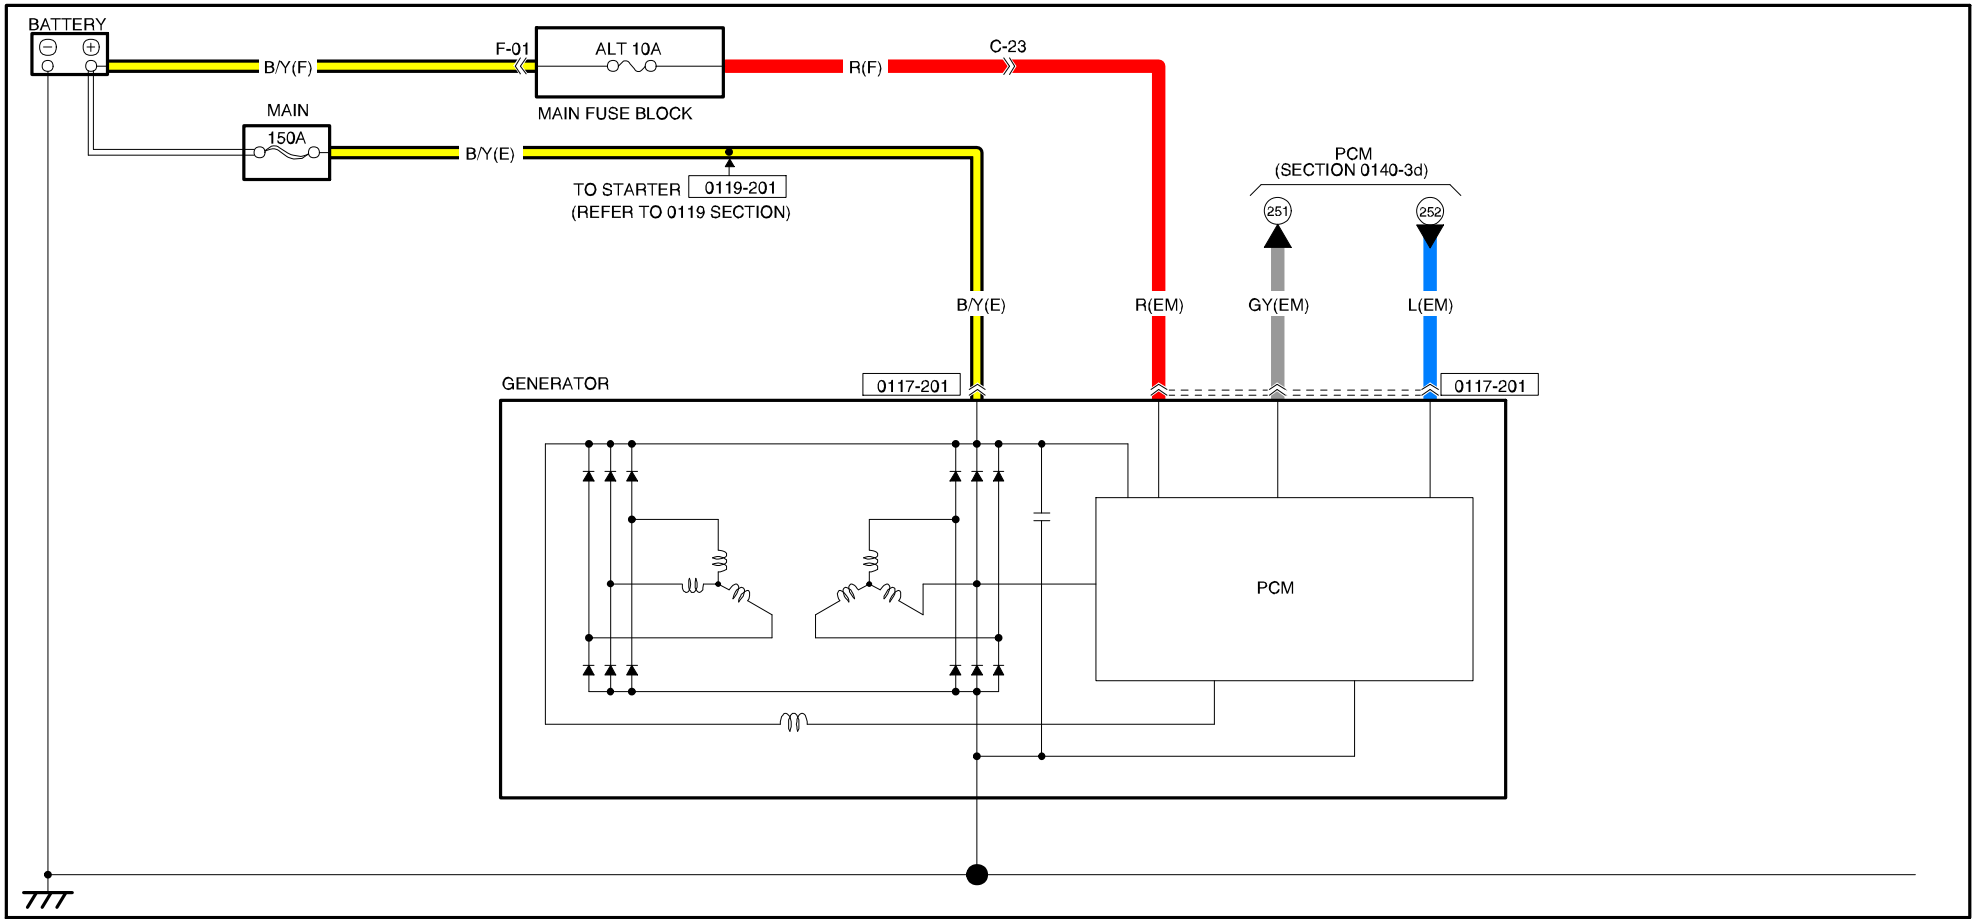



0117-201
GENERATOR

ENGINE HARNESS




EMISSION HARNESS

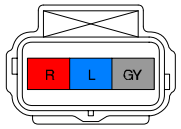

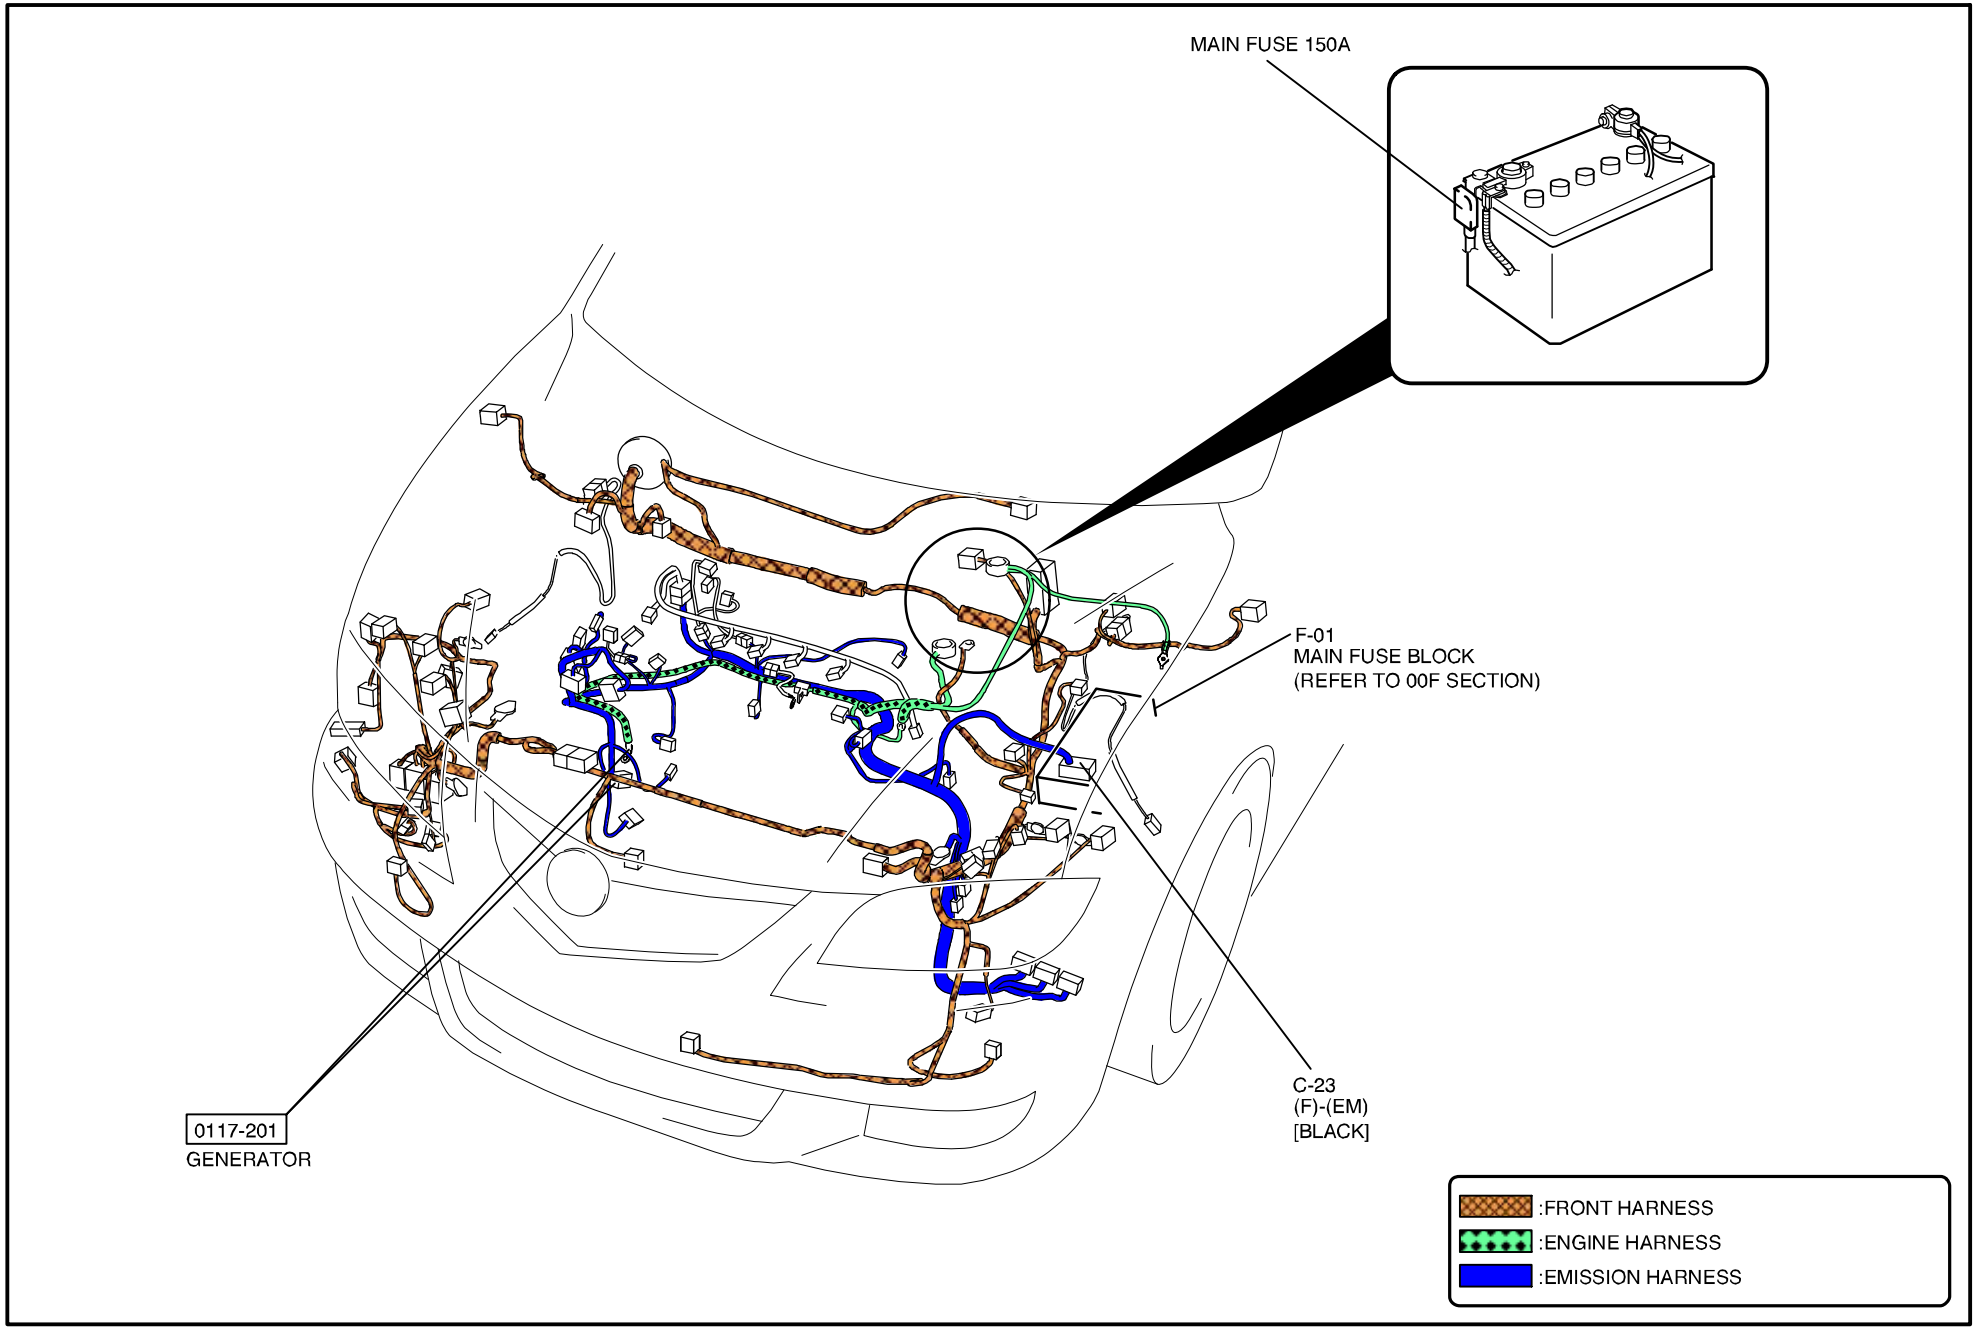

MAIN FUSE 150A
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-23
(F)-(EM)
[BLACK]
0117-201
GENERATOR
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS

C-23
FRONT HARNESS-EMISSION HARNESS


FRONT HARNESS

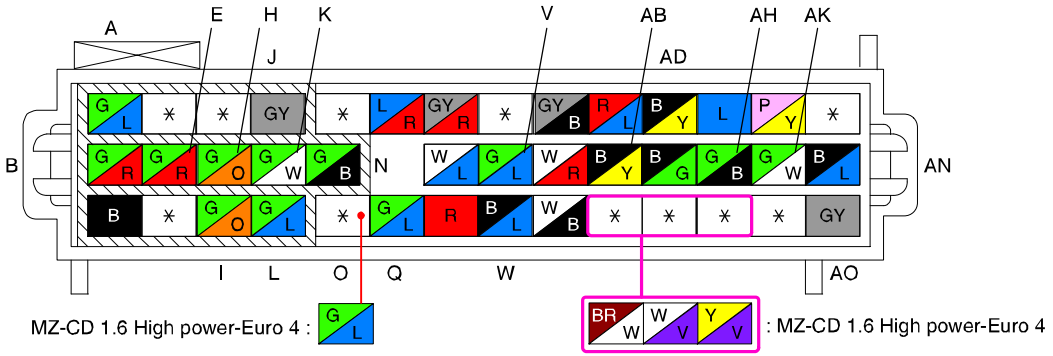


EMISSION HARNESS

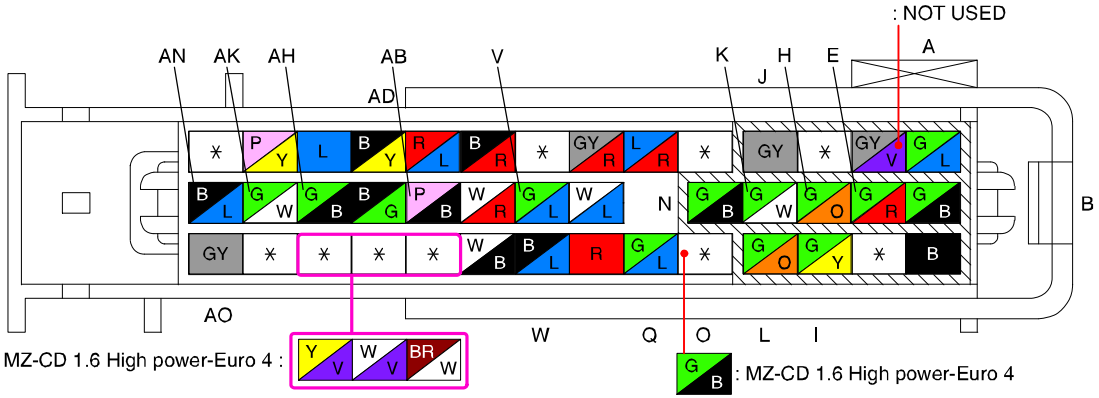


CHARGING SYSTEM (L3 Turbo,MZR-CD (RF Turbo))

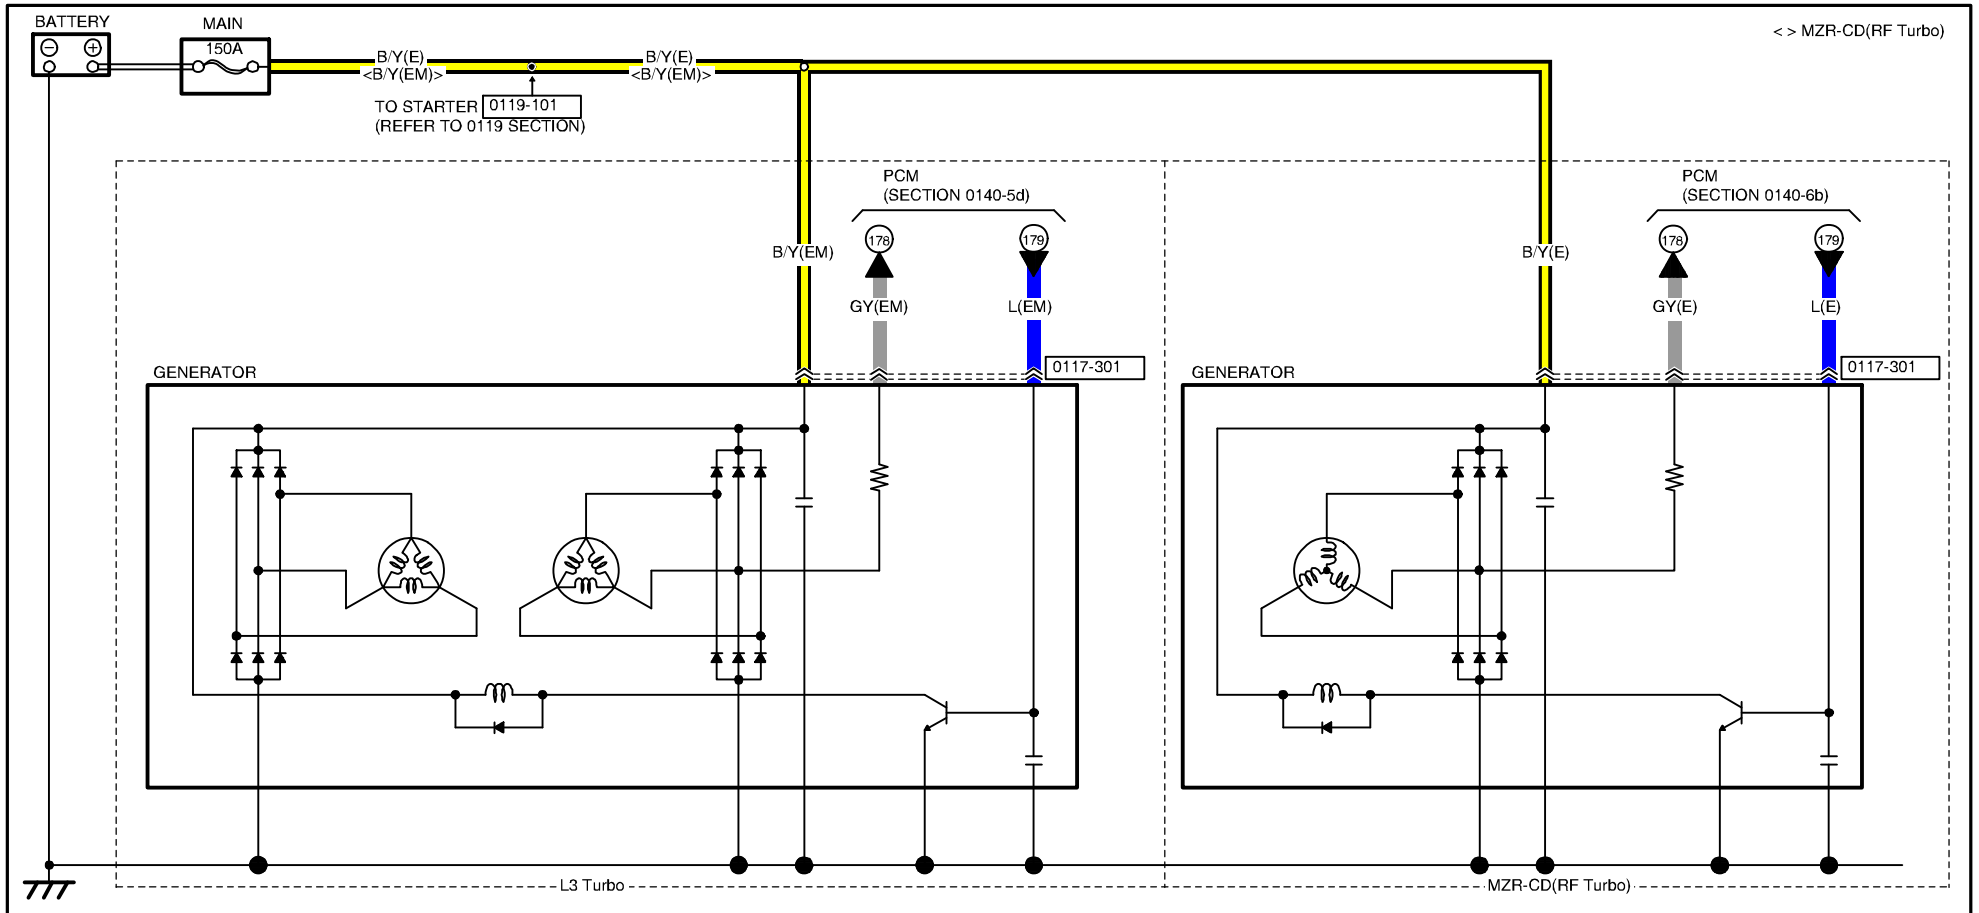


0117-301
GENERATOR




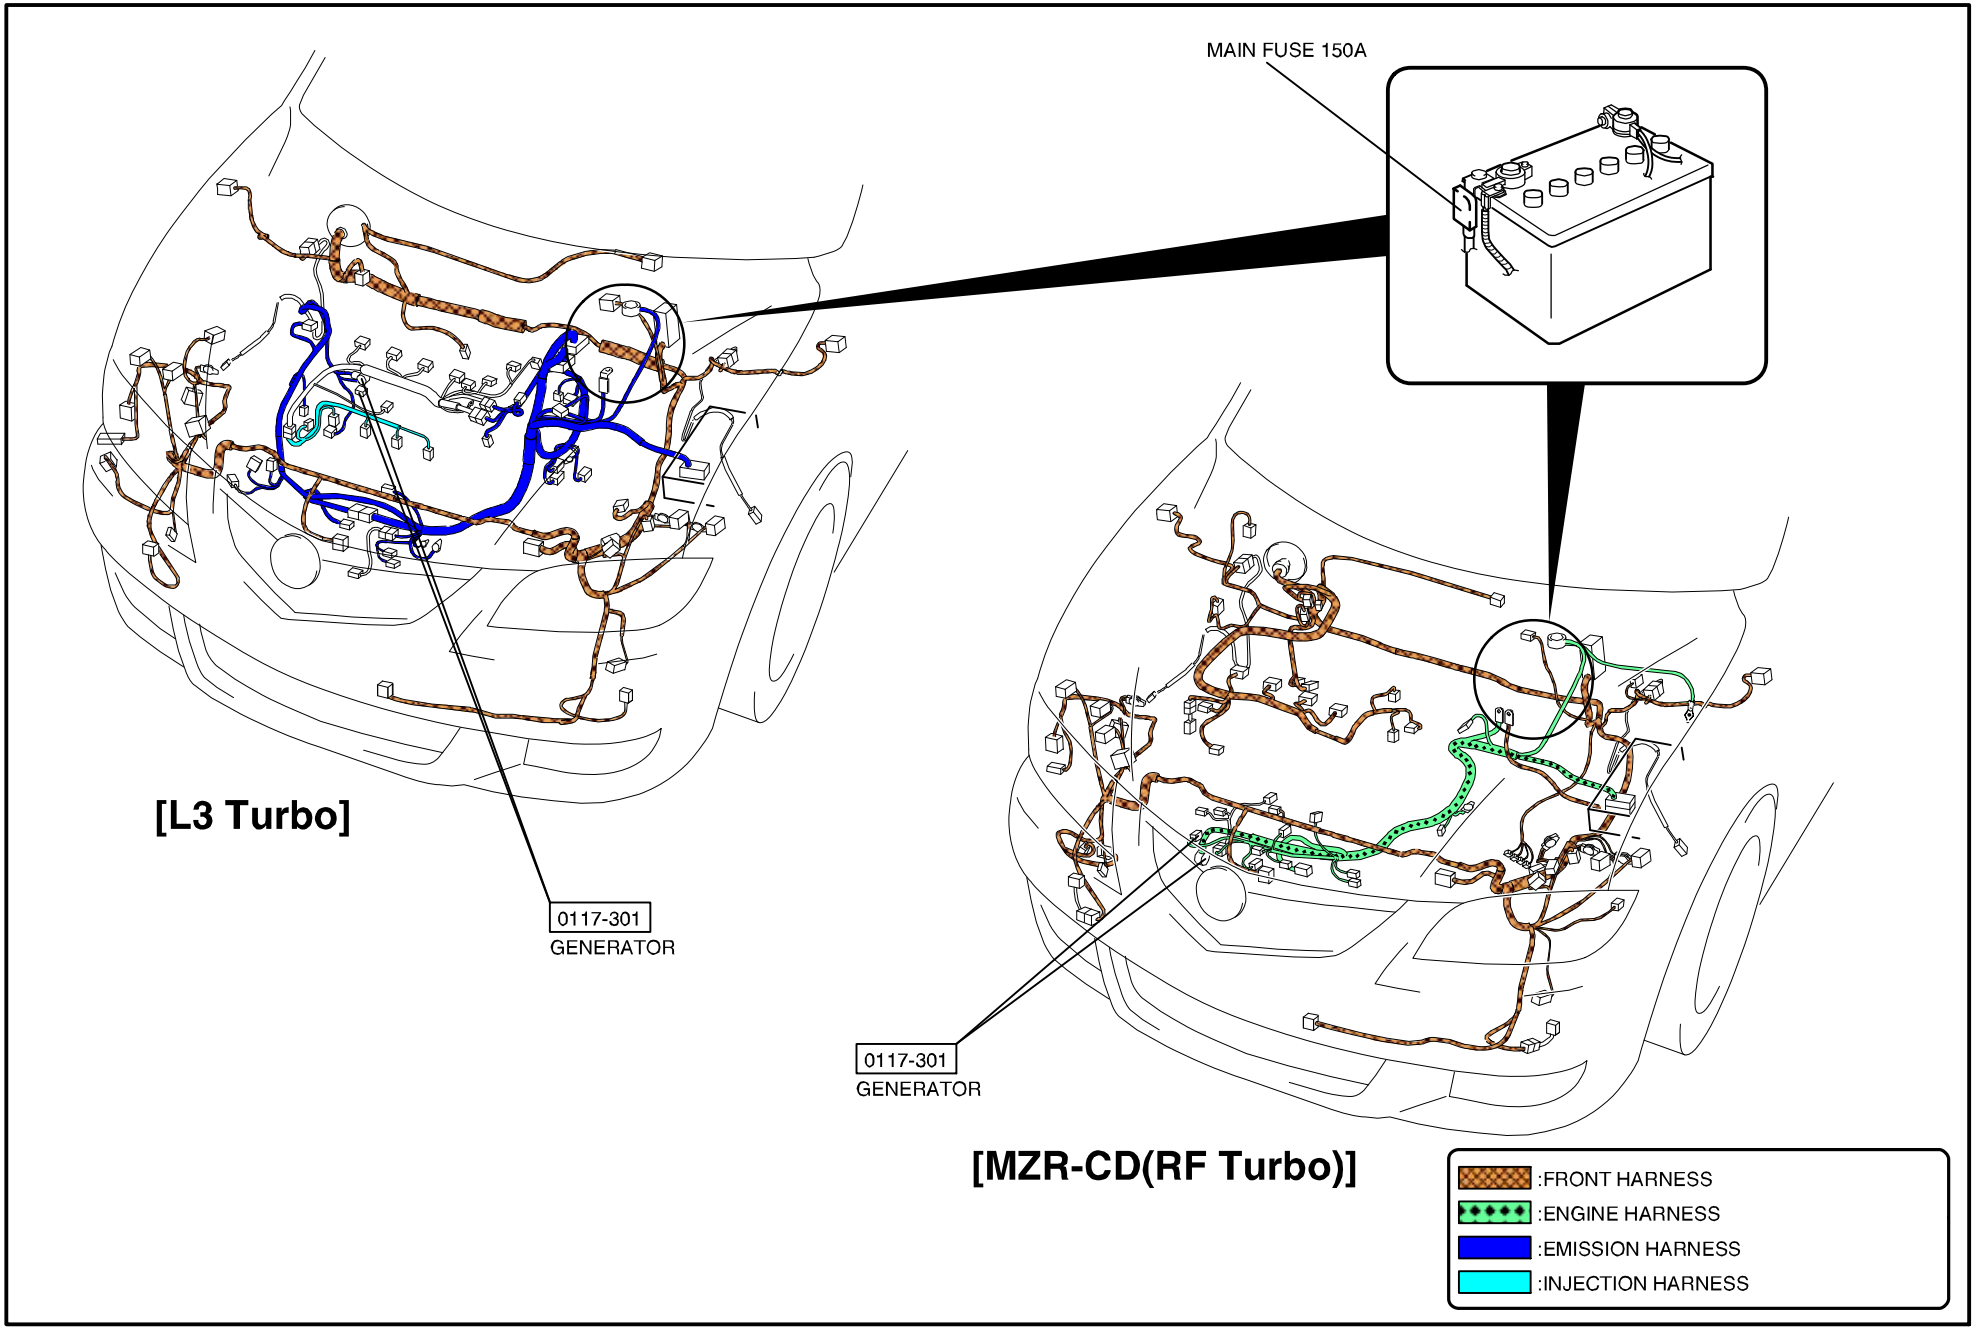
MAIN FUSE 150A
[L3 Turbo]
0117-301
GENERATOR
0117-301
GENERATOR
[MZR-CD(RF Turbo)]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS


STARTING SYSTEM (EXCEPT MZ-CD 1.6)

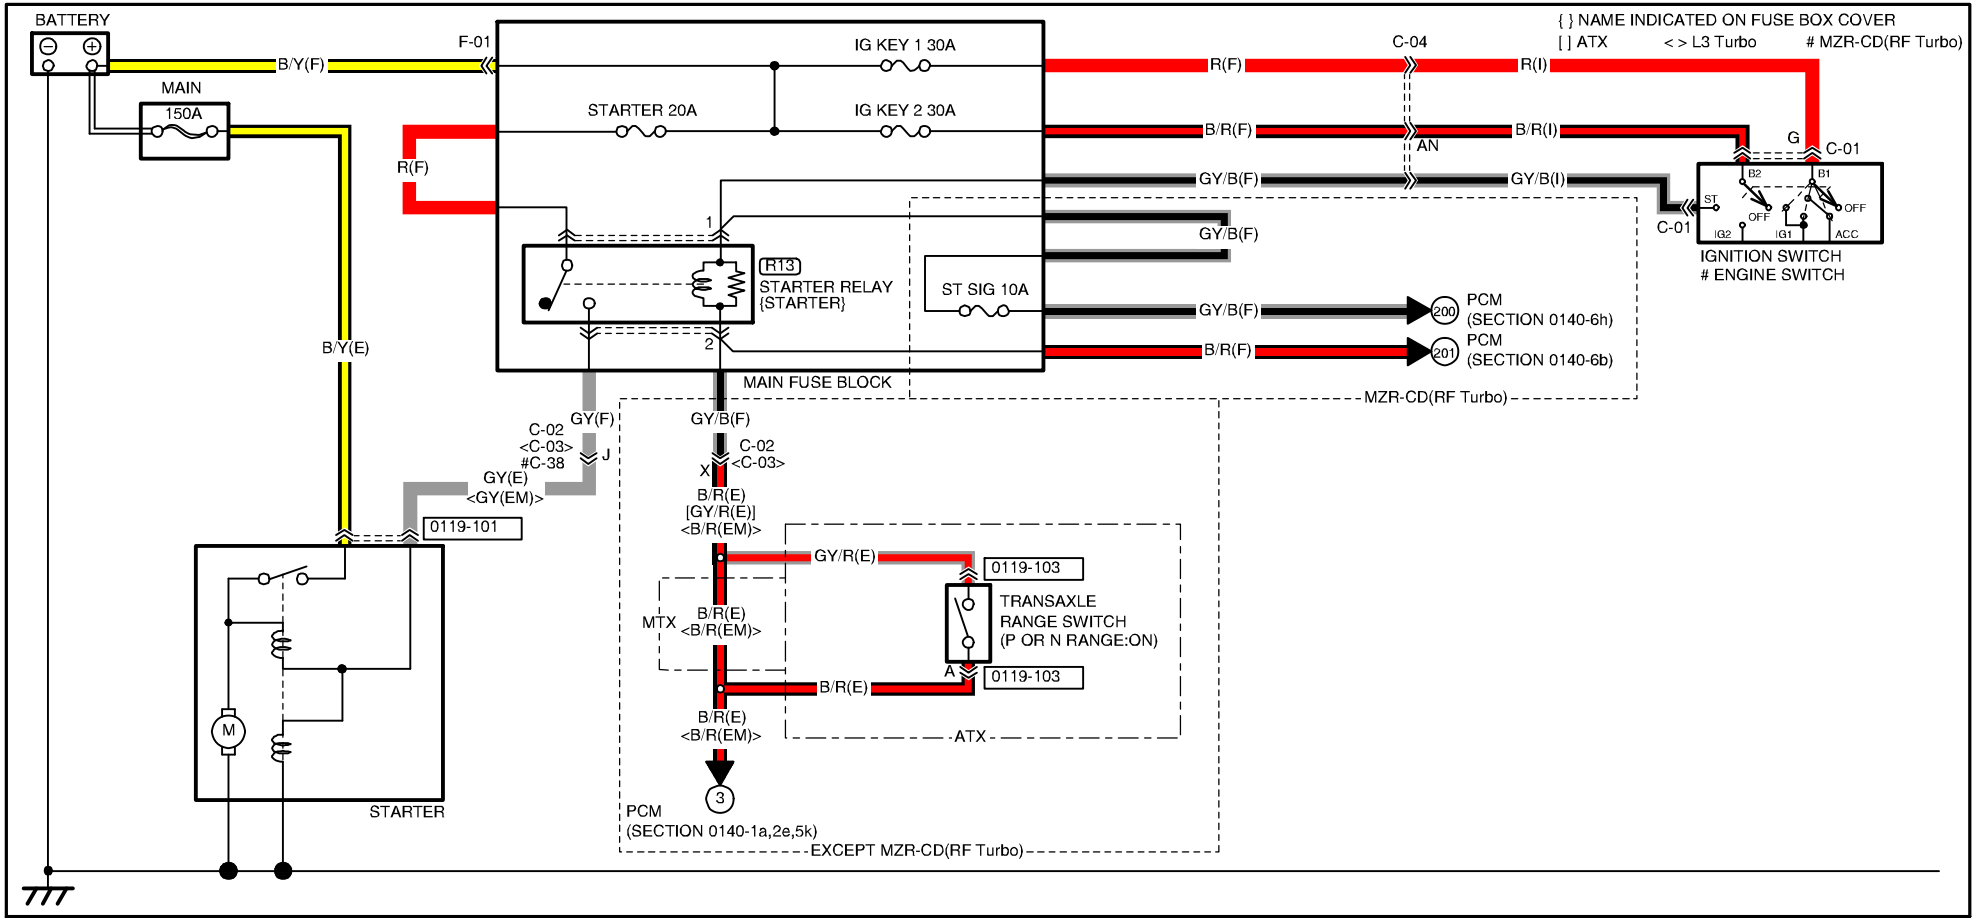


0119-101
STARTER




0119-103
TRANSAXLE RANGE SWITCH



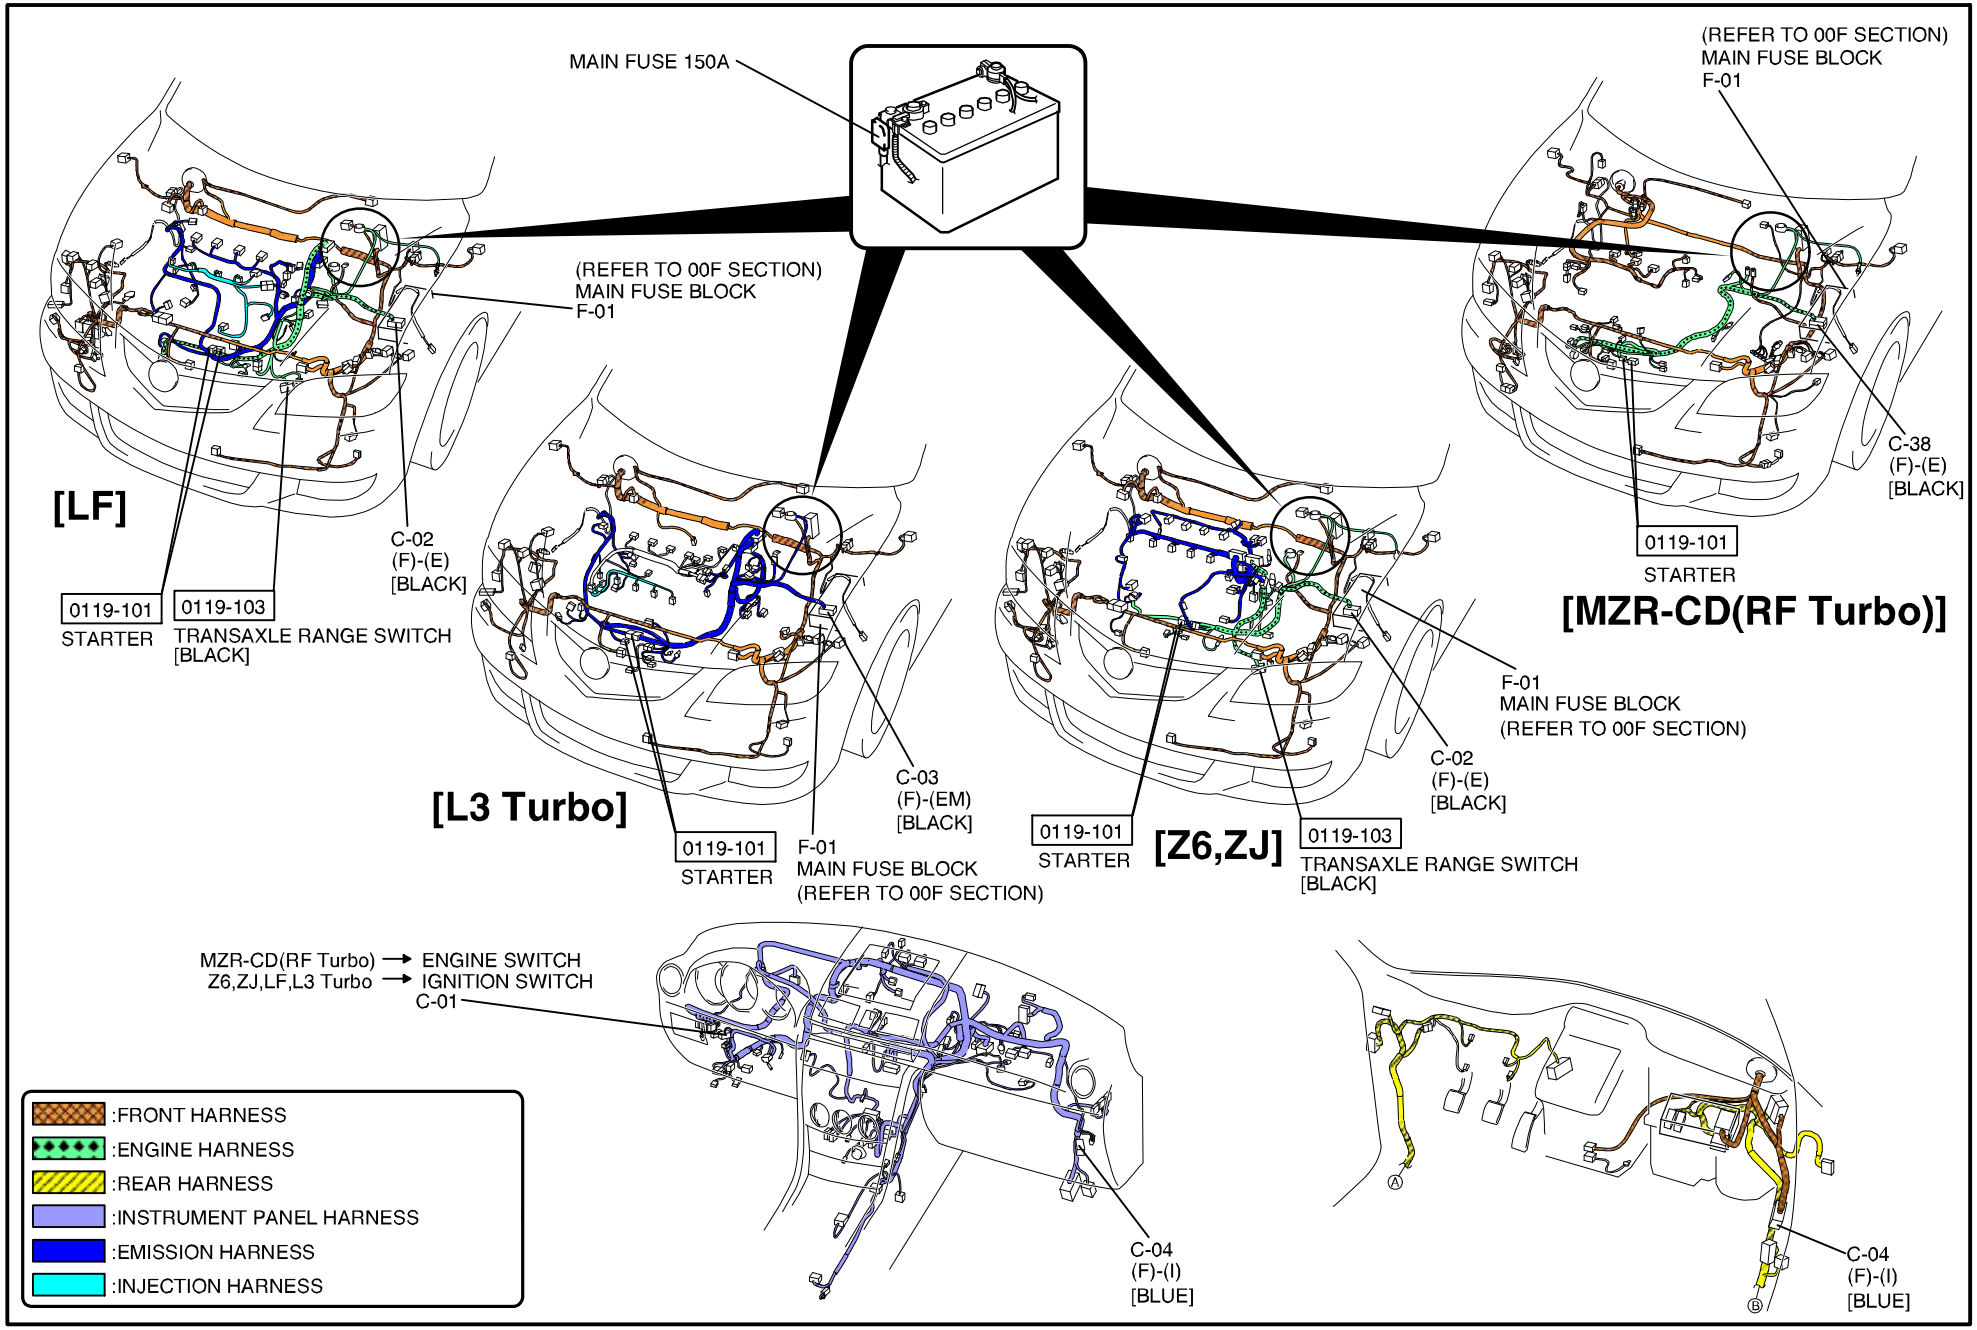

MAIN FUSE 150A
(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
[LF]
C-02
(F)-(E)
[BLACK]
0119-101
STARTER
0119-103
TRANSAXLE RANGE SWITCH
[BLACK]
[L3 Turbo]
C-03
(F)-(EM)
[BLACK]
0119-101
STARTER
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
[Z6,ZJ]
0119-101
STARTER
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-02
(F)-(E)
[BLACK]
0119-103
TRANSAXLE RANGE SWITCH
[BLACK]
[MZR-CD(RF Turbo)]
C-38
(F)-(E)
[BLACK]
0119-101
STARTER
MZR-CD(RF Turbo) → ENGINE SWITCH
Z6,ZJ,LF,L3 Turbo → IGNITION SWITCH
C-01
C-04
(F)-(I)
[BLUE]
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ← MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

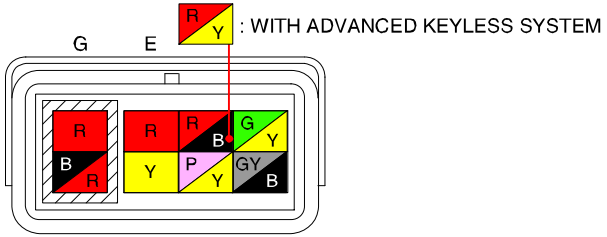


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

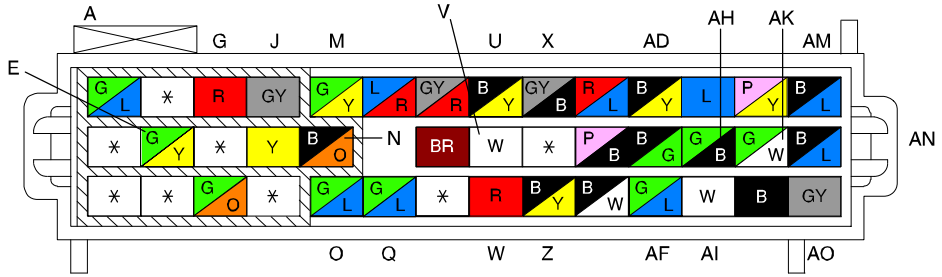


EMISSION HARNESS

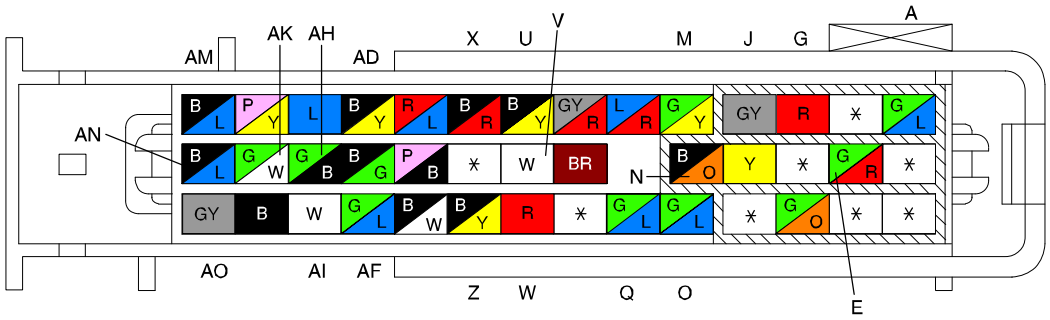


C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

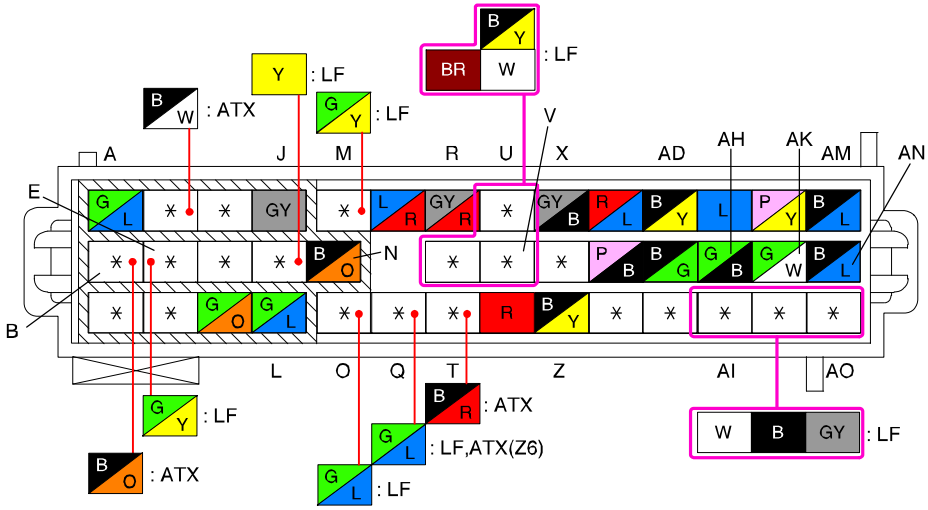


ENGINE HARNESS

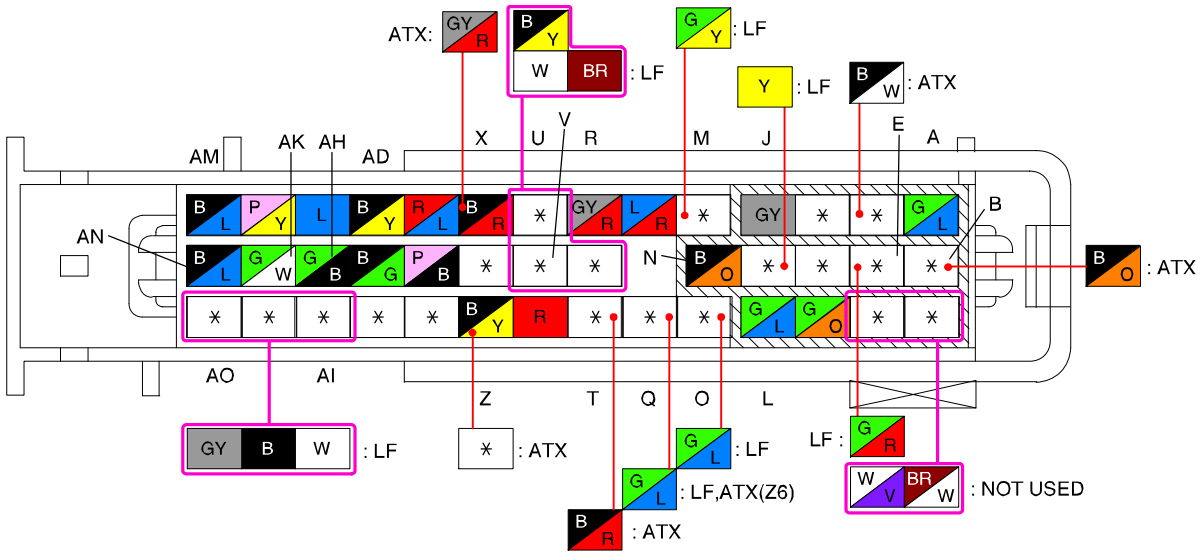


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

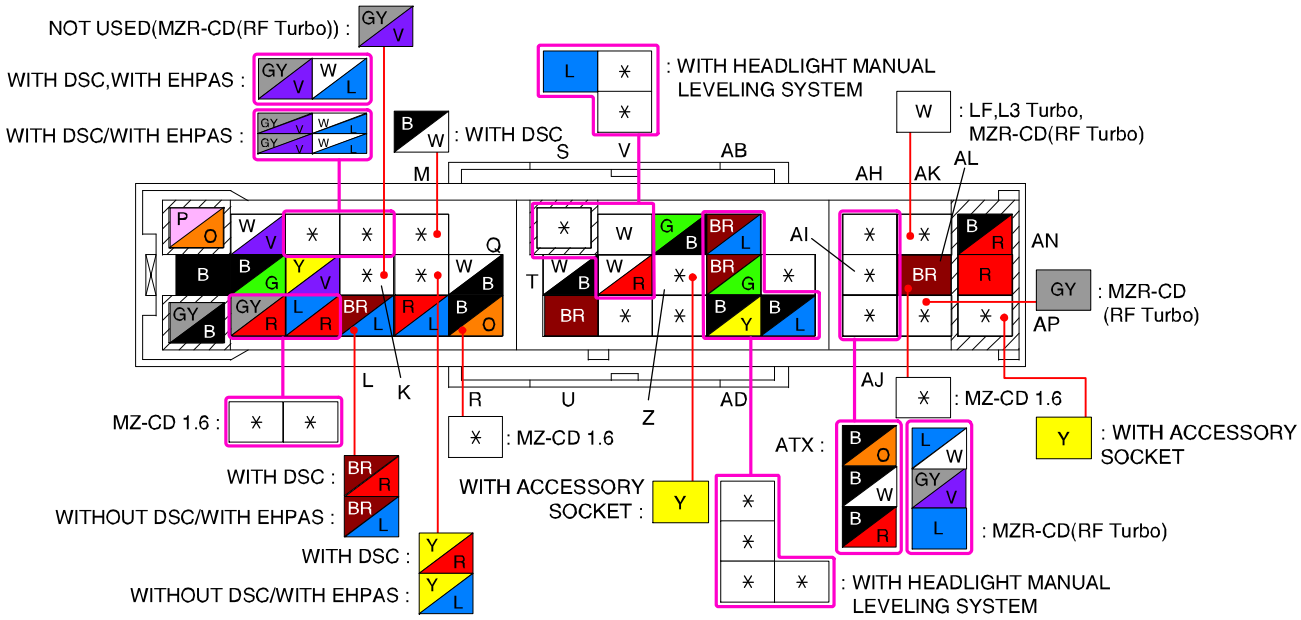


INSTRUMENT PANEL HARNESS

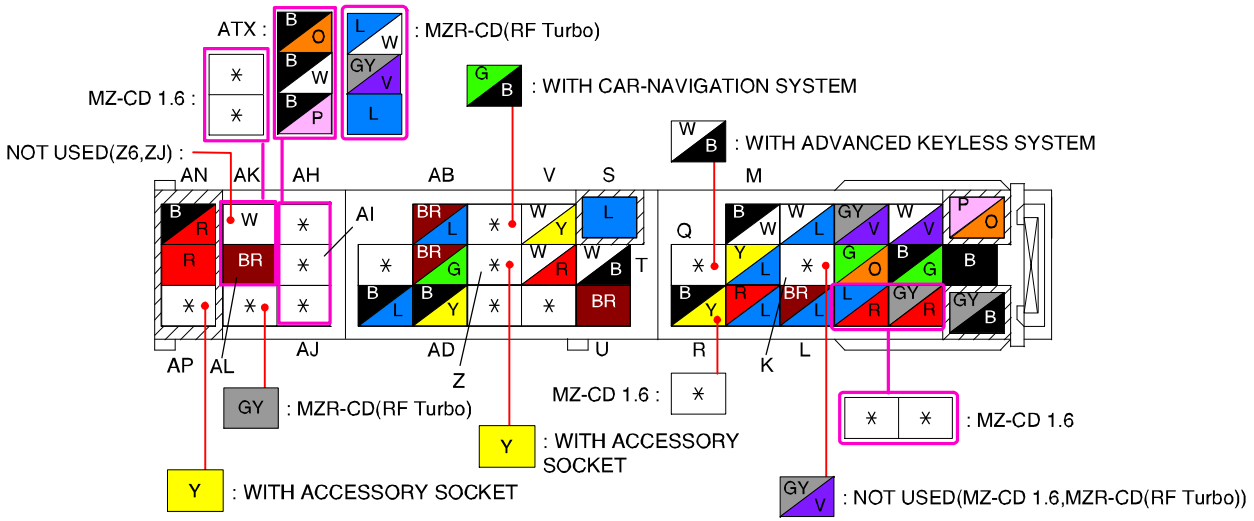



C-38
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

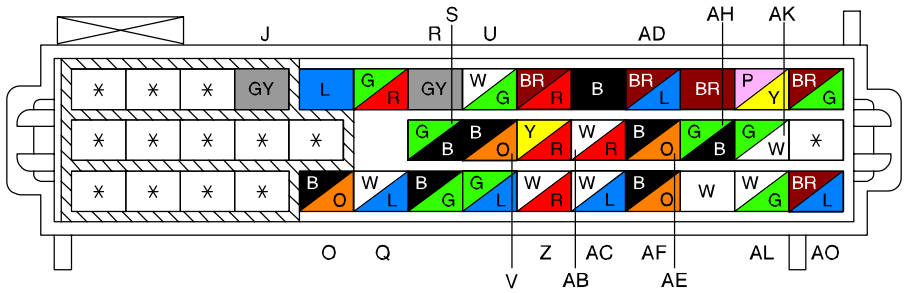


ENGINE HARNESS

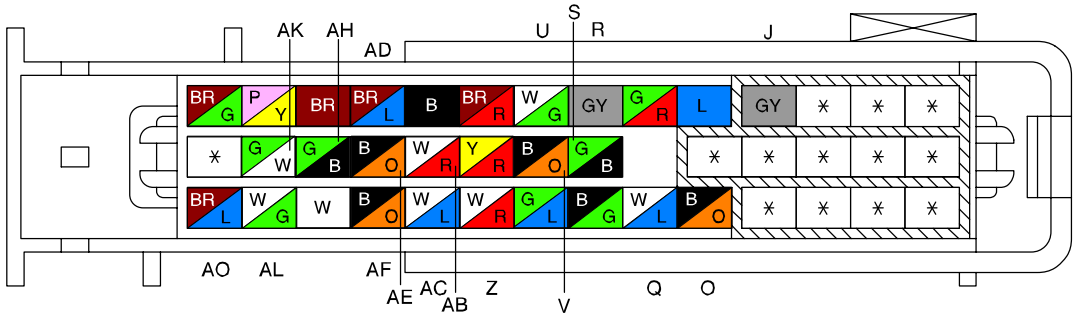

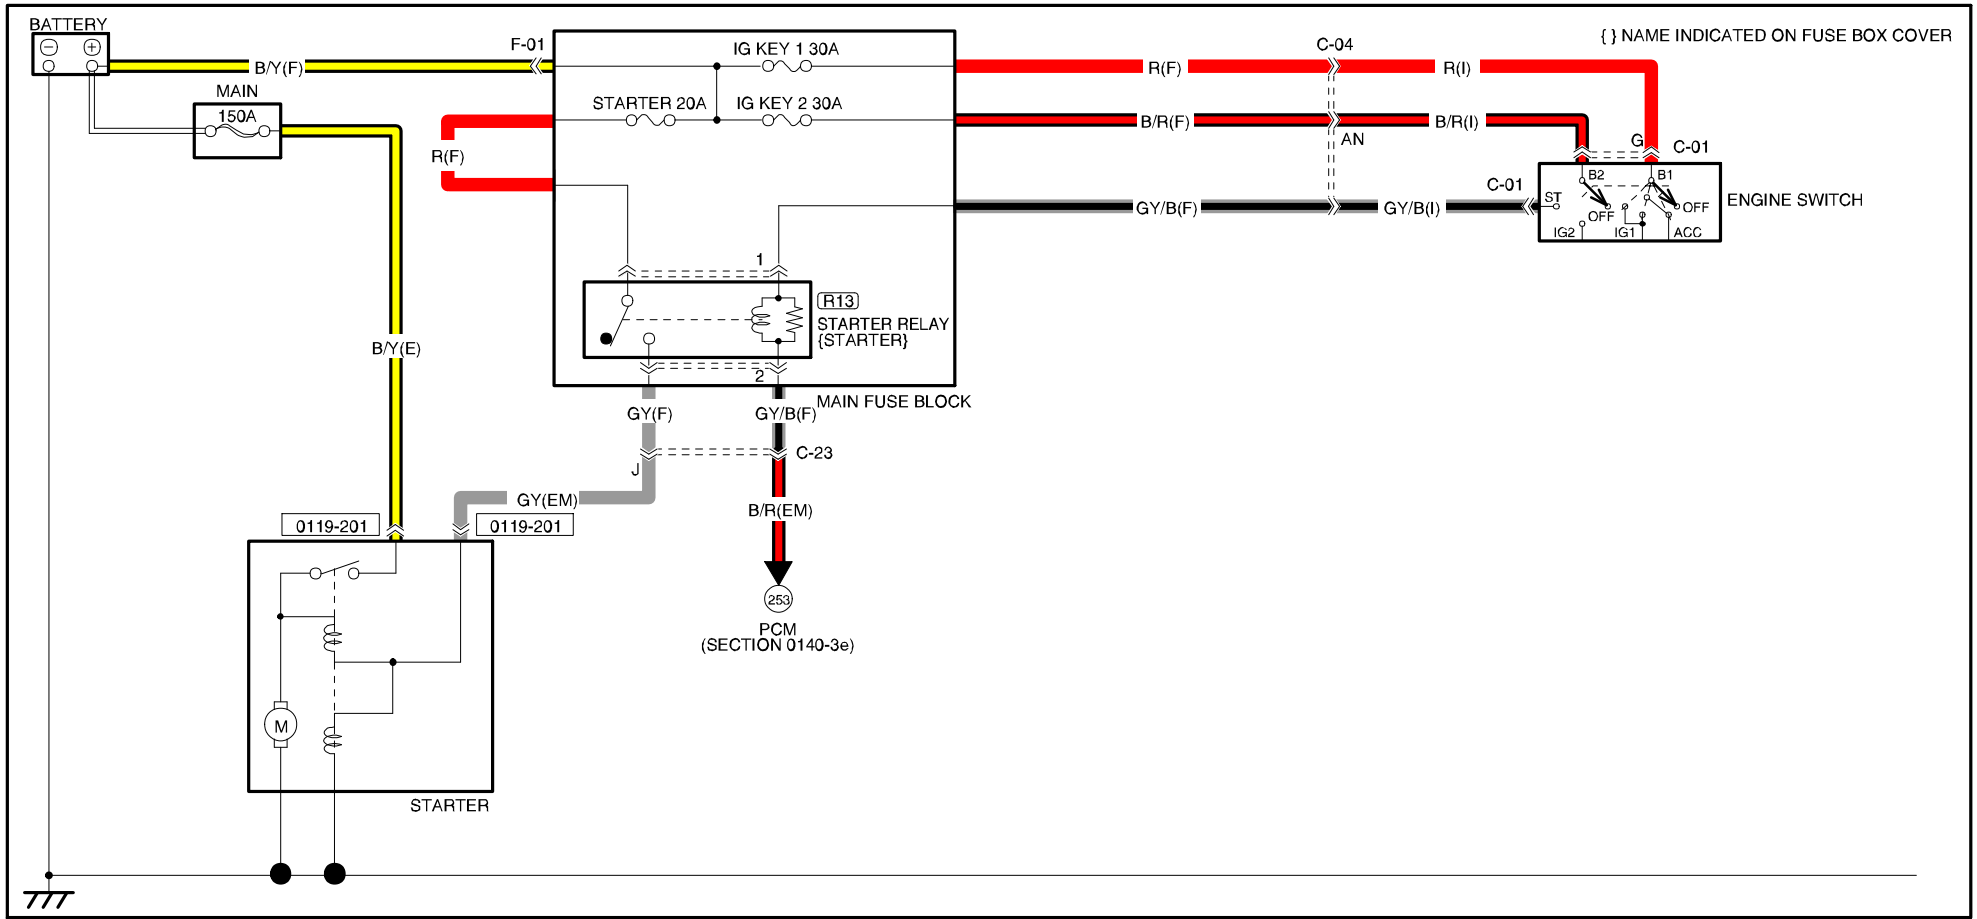


0119-201
STARTER

ENGINE HARNESS	EMISSION HARNESS
B Y	GY

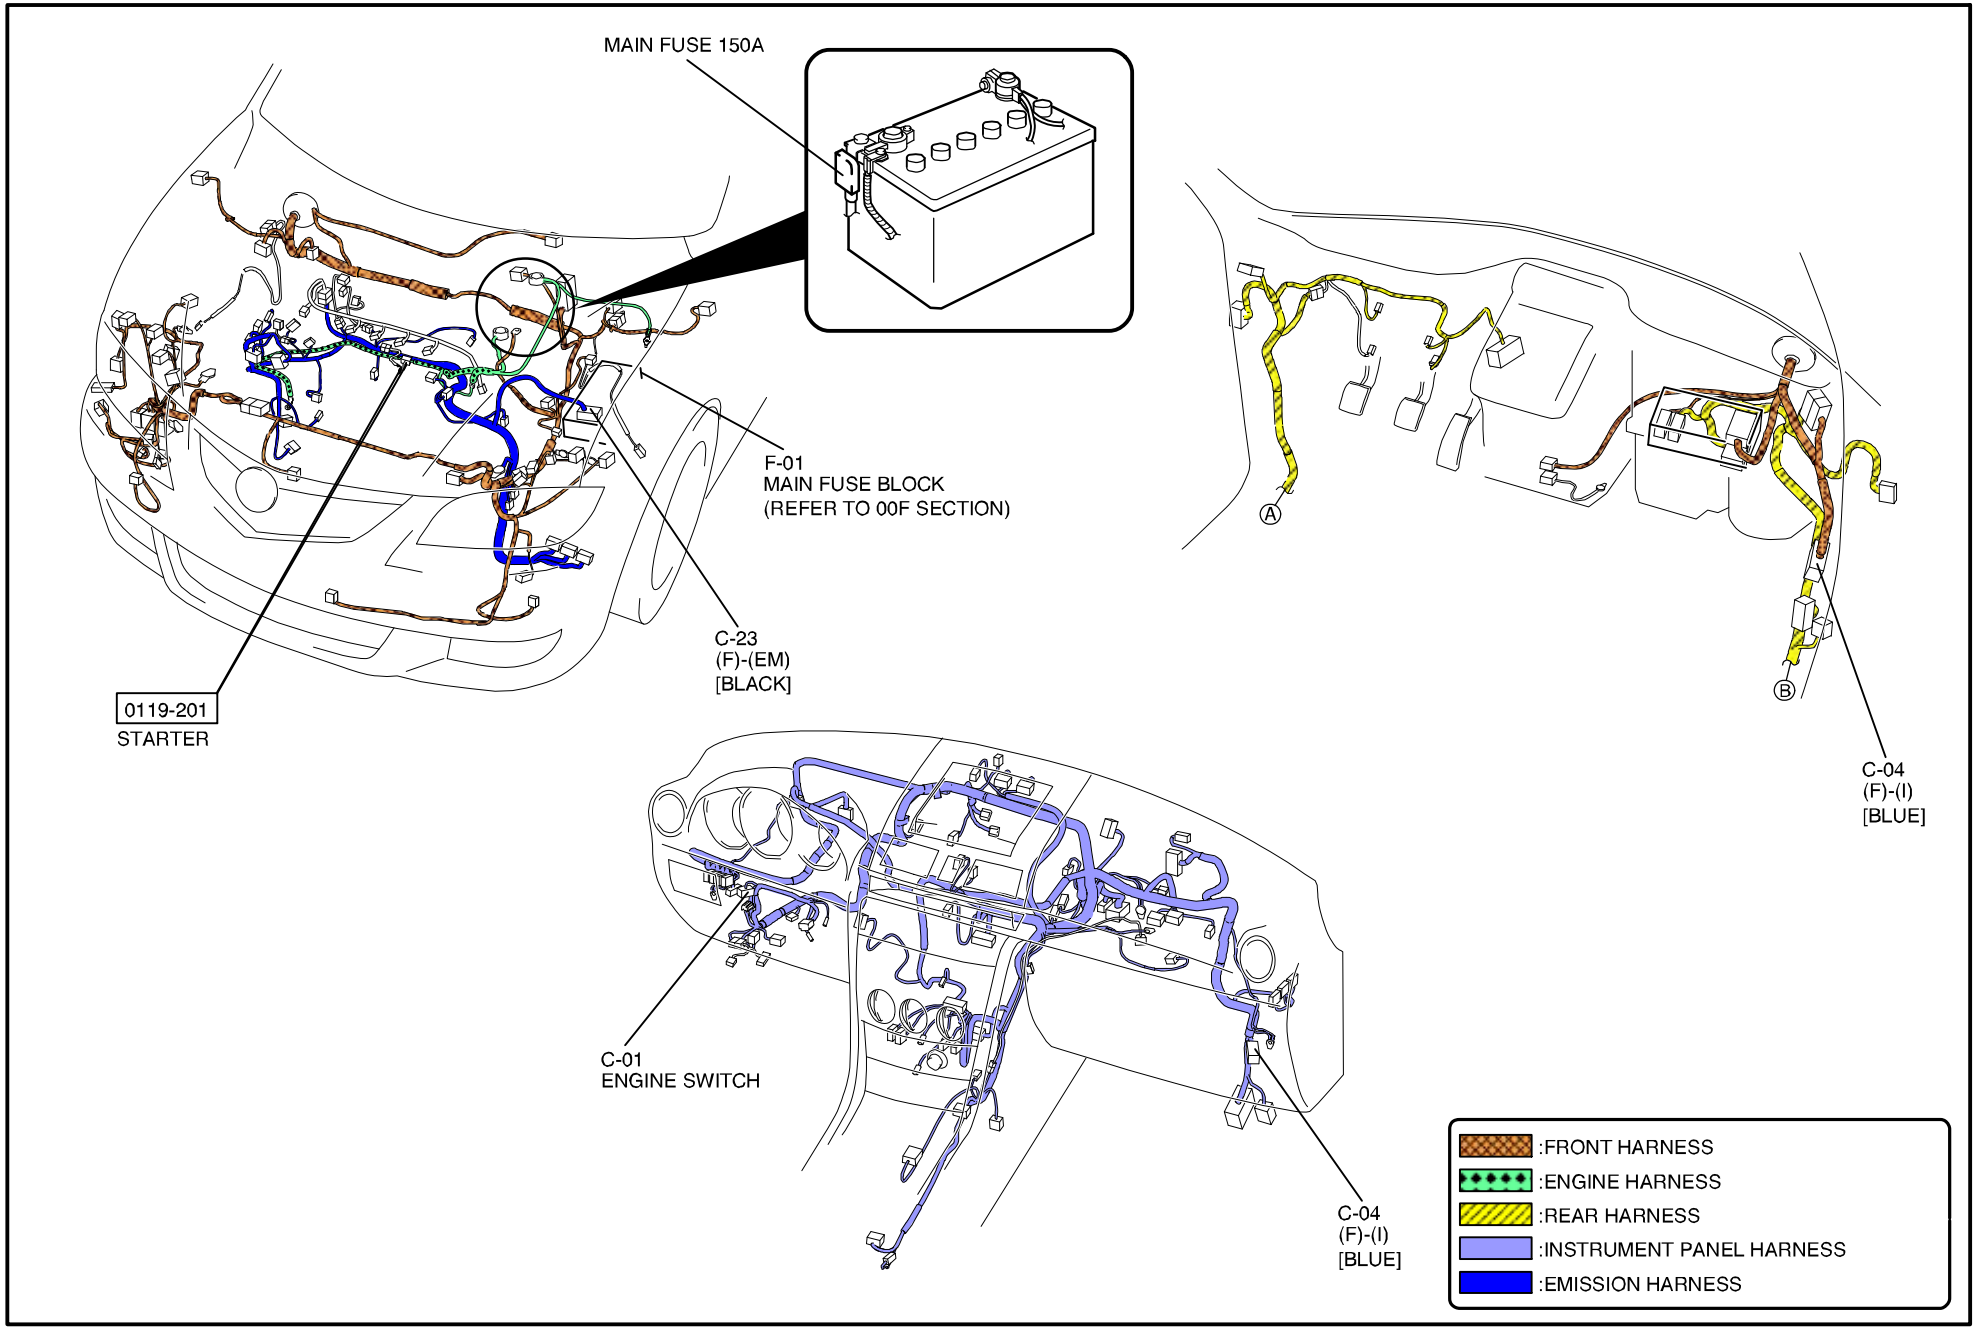

MAIN FUSE 150A
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-23
(F)-(EM)
[BLACK]
0119-201
STARTER
A
B
C-04
(F)-(I)
[BLUE]
C-01
ENGINE SWITCH
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS

C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

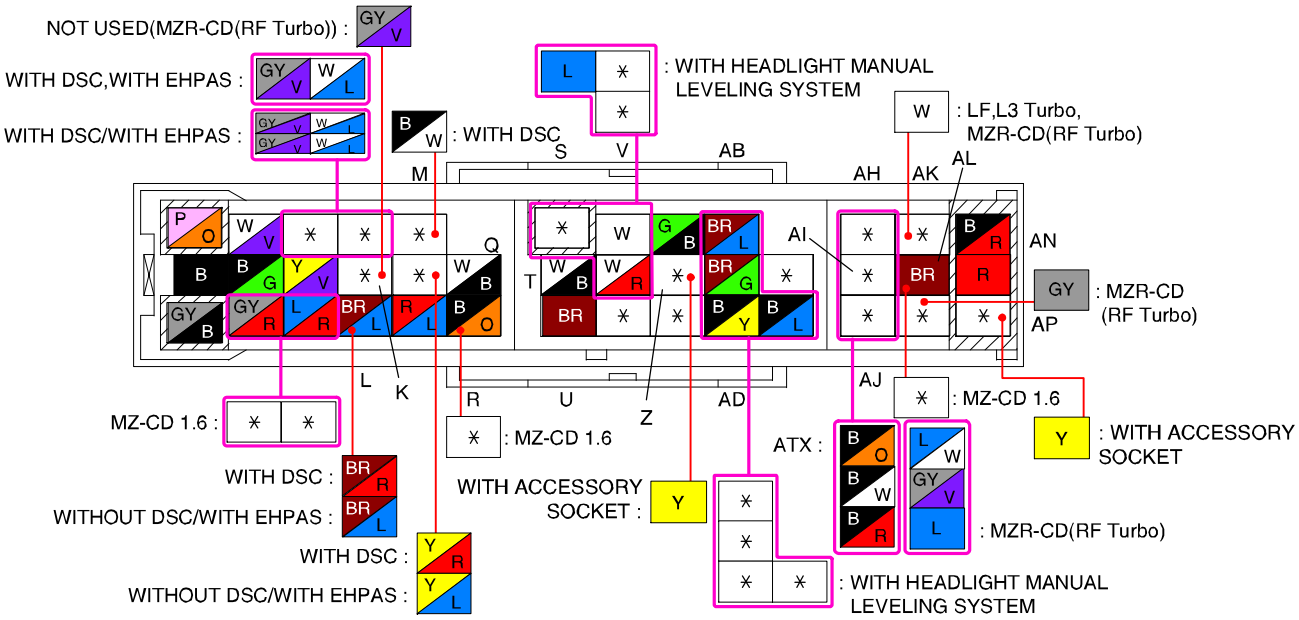

INSTRUMENT PANEL HARNESS

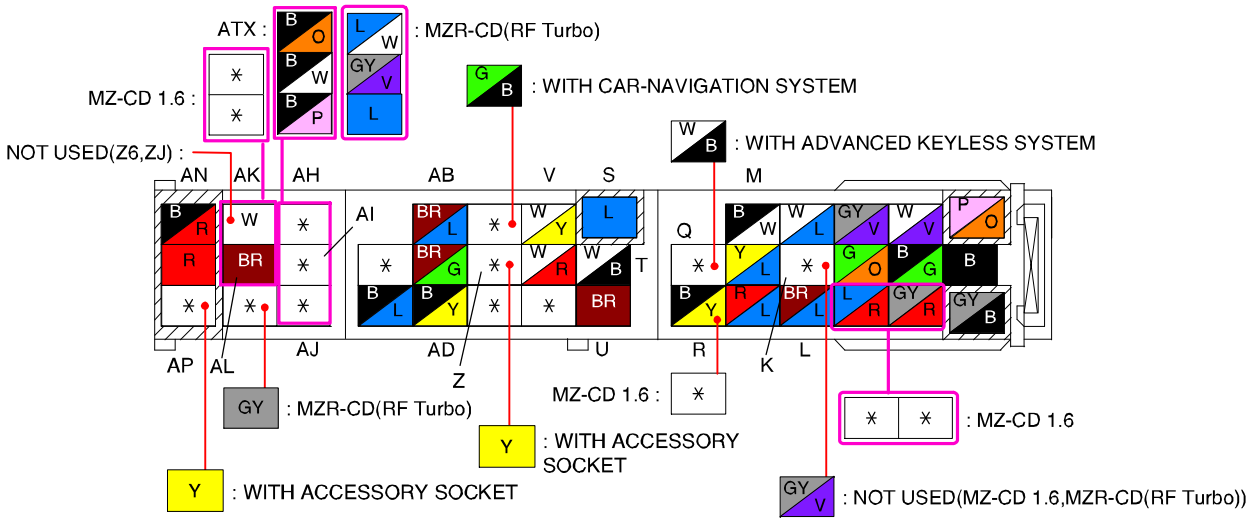


C-01
IGNITION SWITCH/←— Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ←— MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

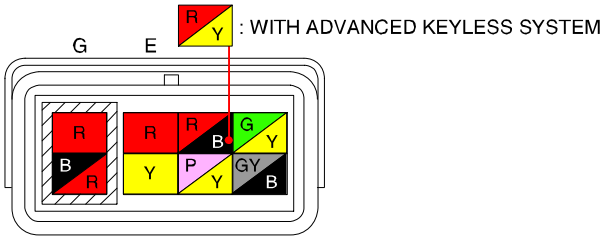


C-23
FRONT HARNESS-EMISSION HARNESS


FRONT HARNESS

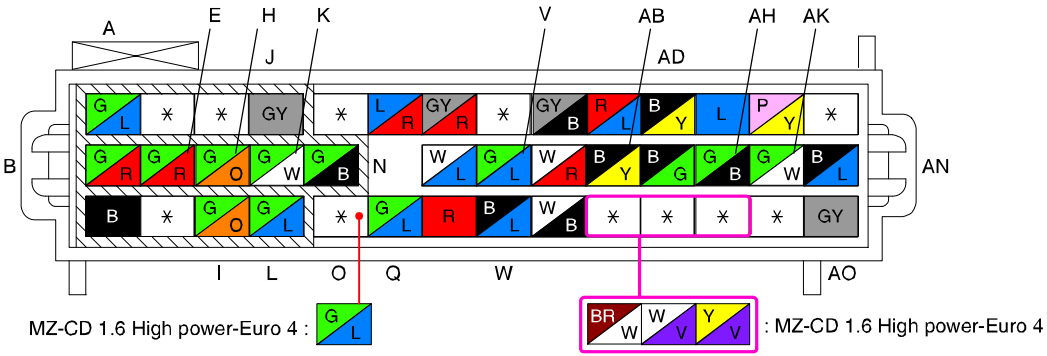


EMISSION HARNESS

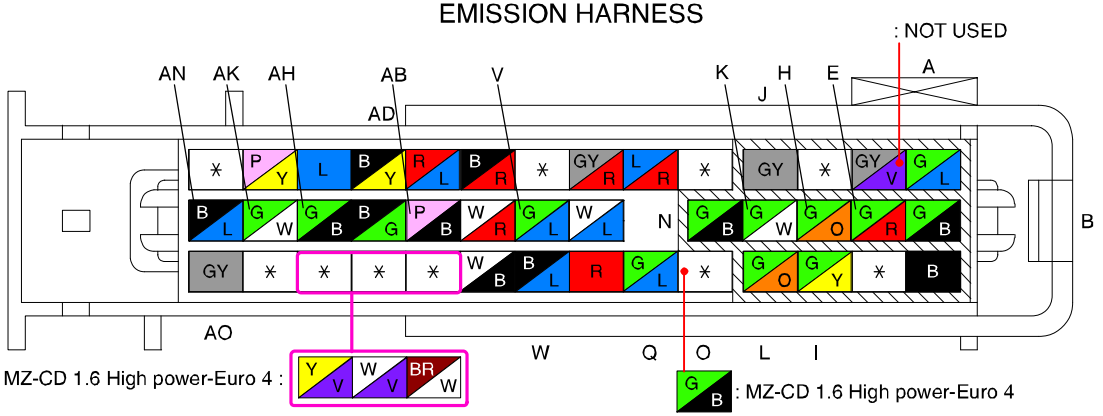


[ ] L3 Turbo
< > MZR-CD(RF Turbo)

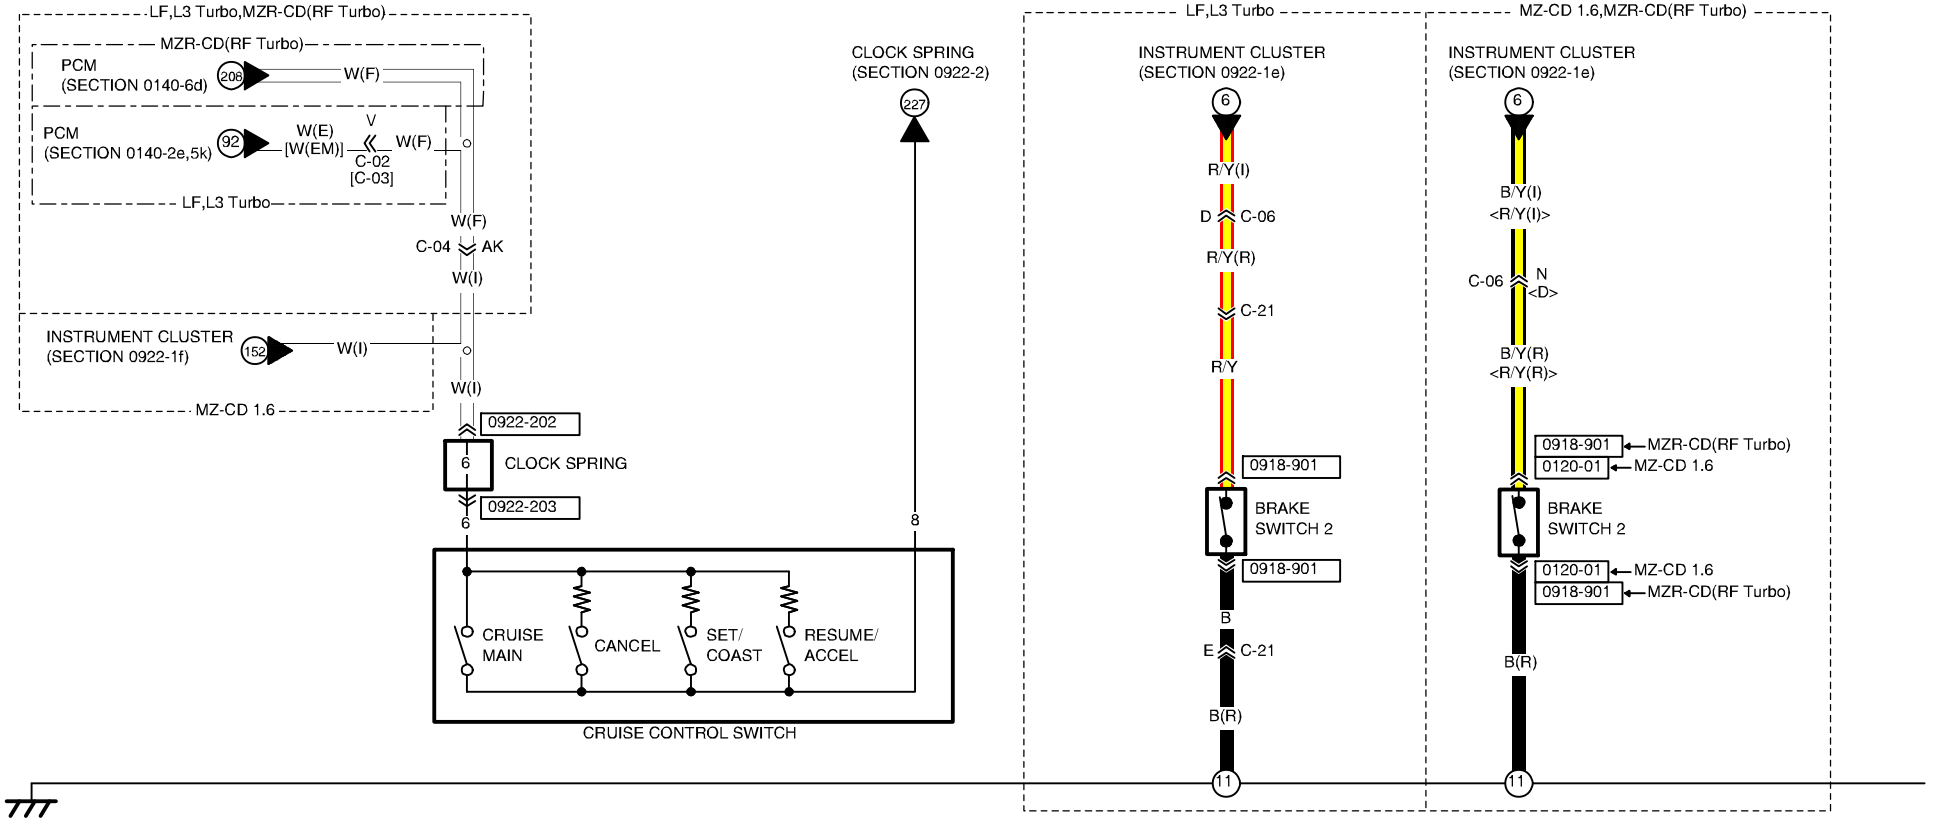

0120-01
BRAKE SWITCH 2




0918-901
BRAKE SWITCH 2




: NOT USED(Z6,ZJ)

0922-202
INSTRUMENT PANEL HARNESS-CLOCK SPRING

INSTRUMENT PANEL HARNESS

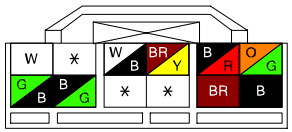


CLOCK SPRING




TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.

0922-203
CRUISE CONTROL SWITCH




TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.

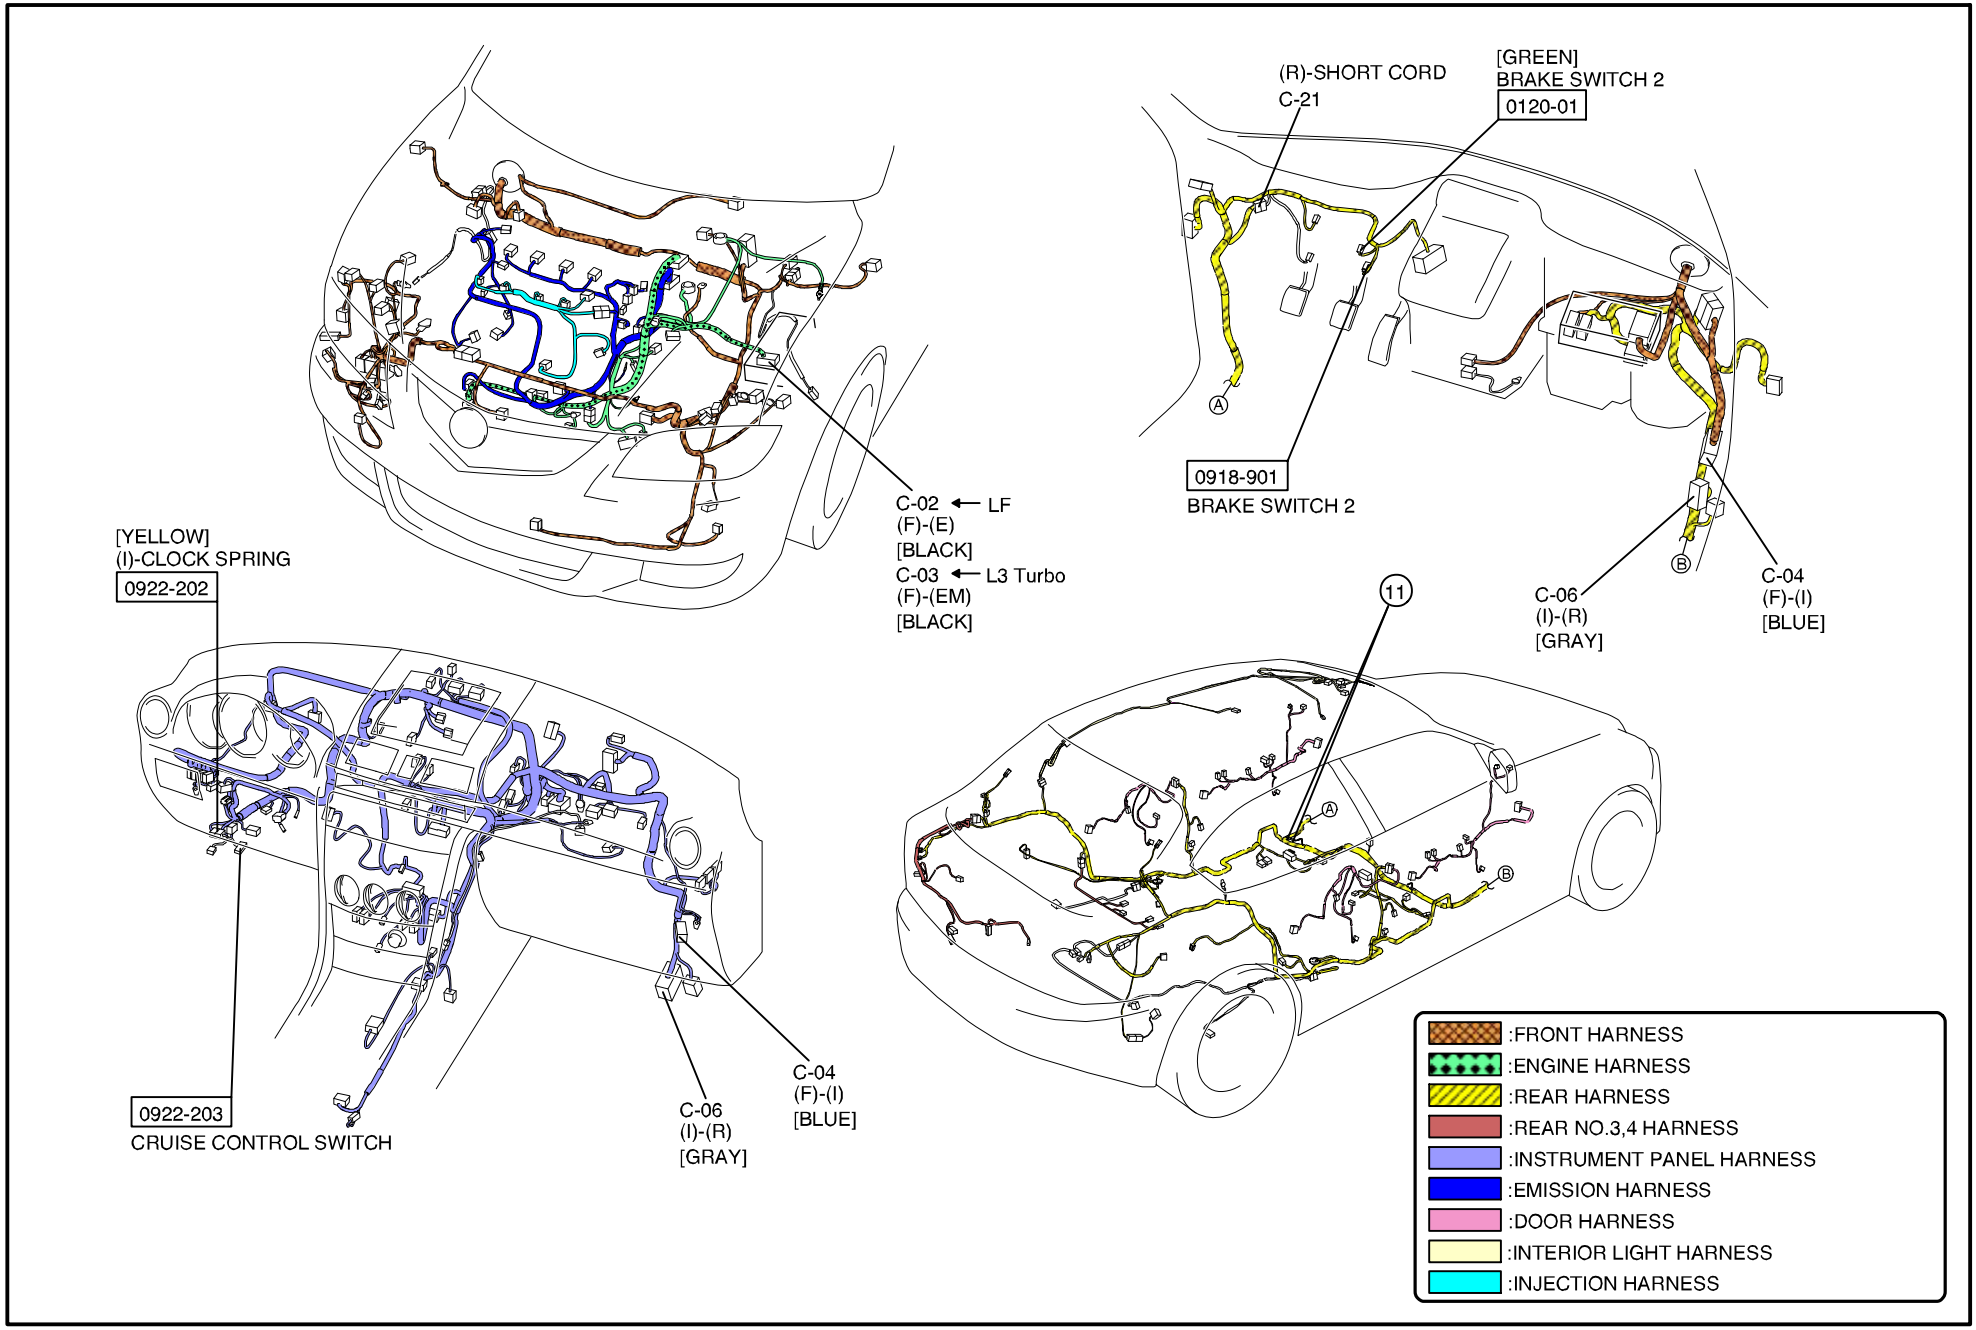

(R)-SHORT CORD
C-21
[GREEN]
BRAKE SWITCH 2
0120-01
0918-901
BRAKE SWITCH 2
C-02 ← LF
(F)-(E)
[BLACK]
C-03 ← L3 Turbo
(F)-(EM)
[BLACK]
C-06
(I)-(R)
[GRAY]
C-04
(F)-(I)
[BLUE]
[YELLOW]
(I)-CLOCK SPRING
0922-202
0922-203
CRUISE CONTROL SWITCH
C-06
(I)-(R)
[GRAY]
C-04
(F)-(I)
[BLUE]
11
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

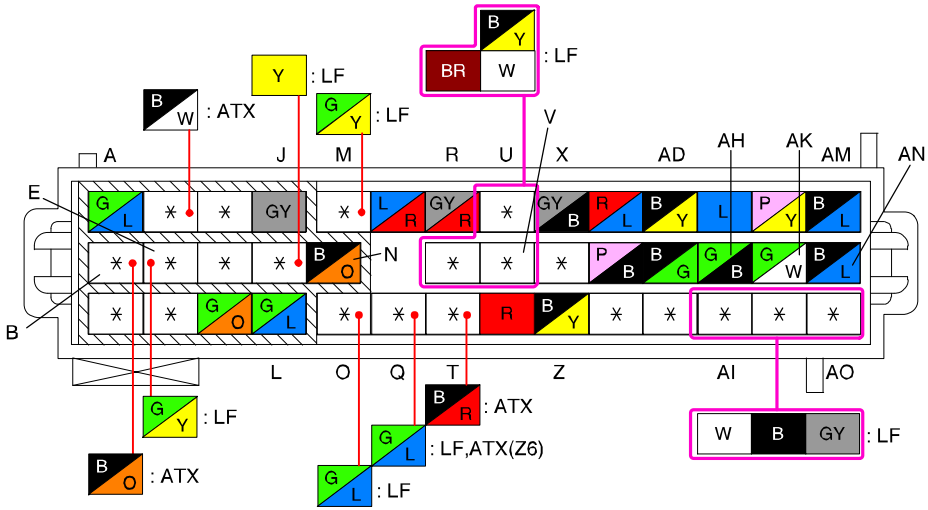


ENGINE HARNESS

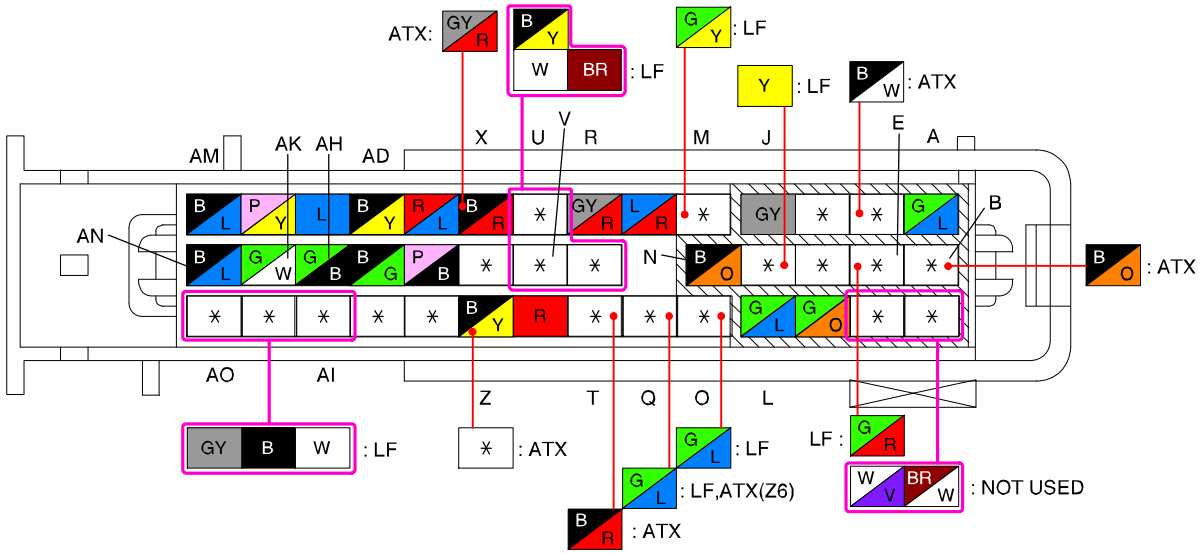


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

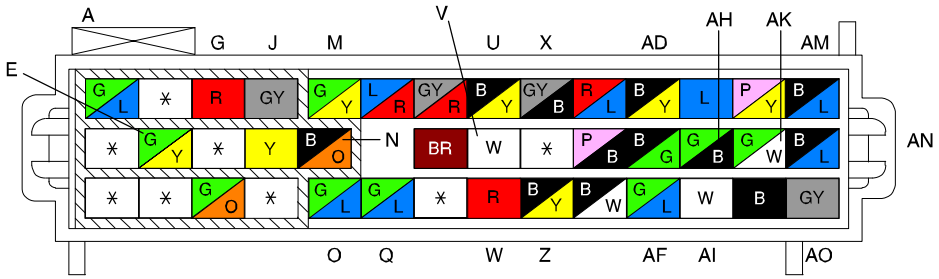


EMISSION HARNESS

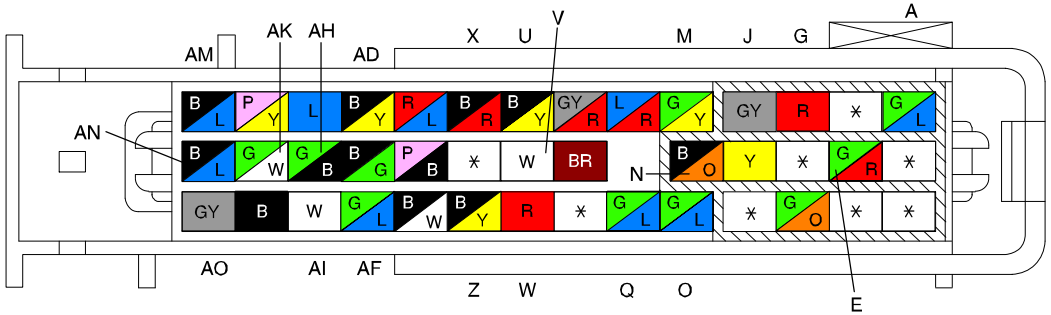


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

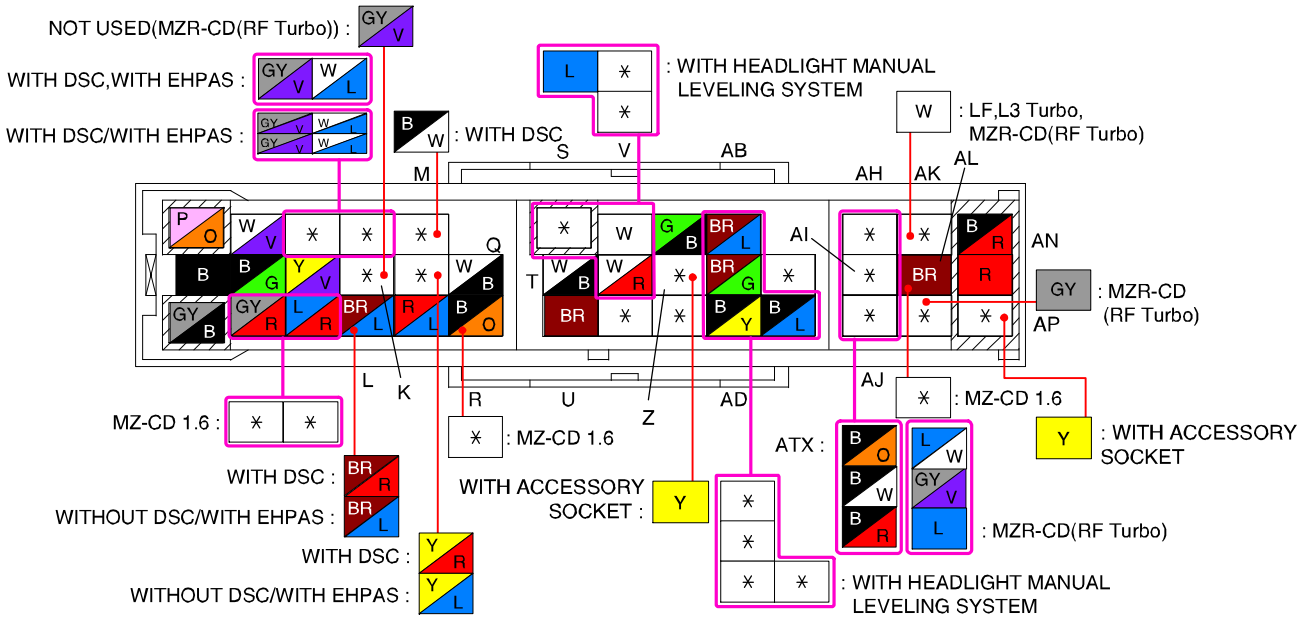


INSTRUMENT PANEL HARNESS

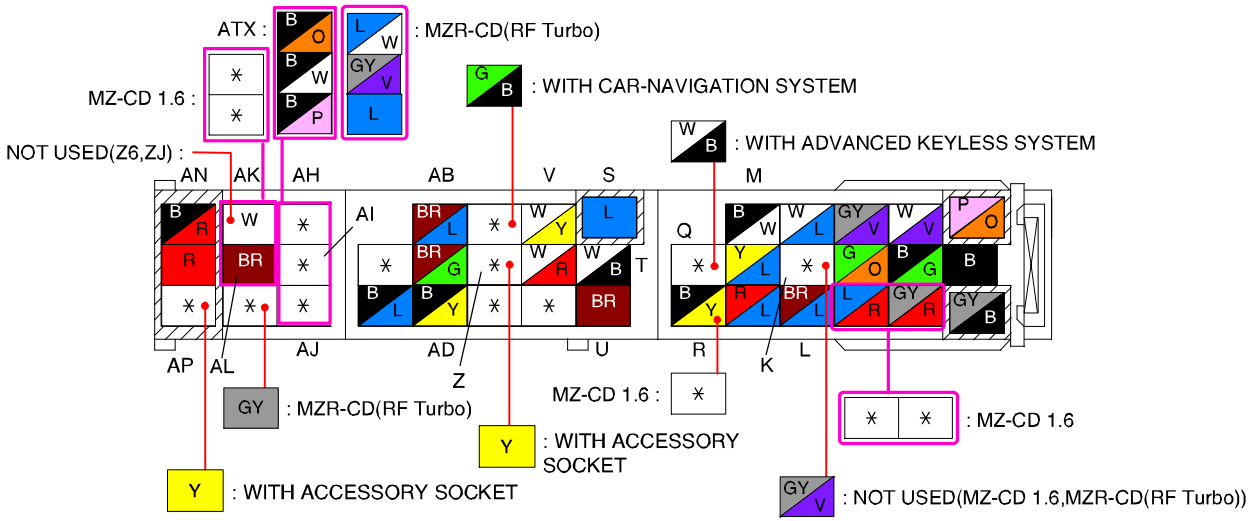


C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

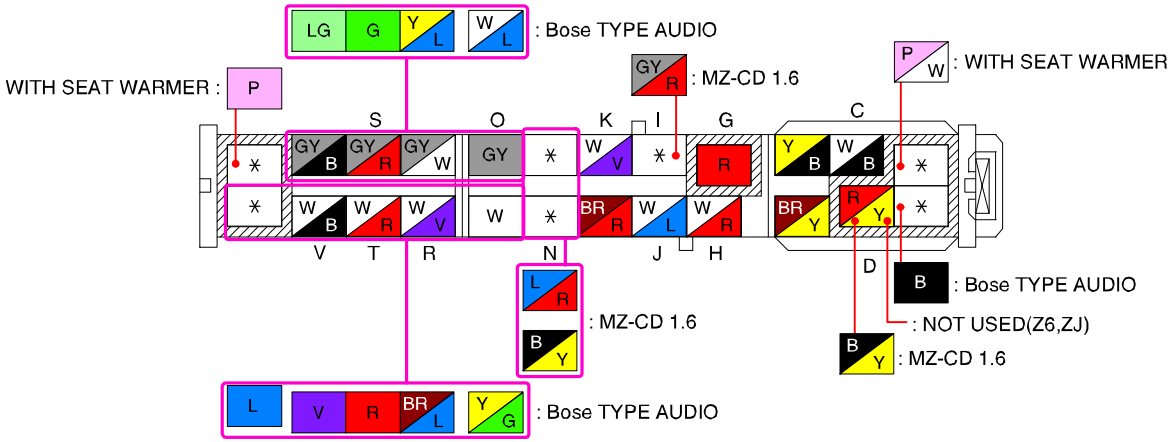


REAR HARNESS

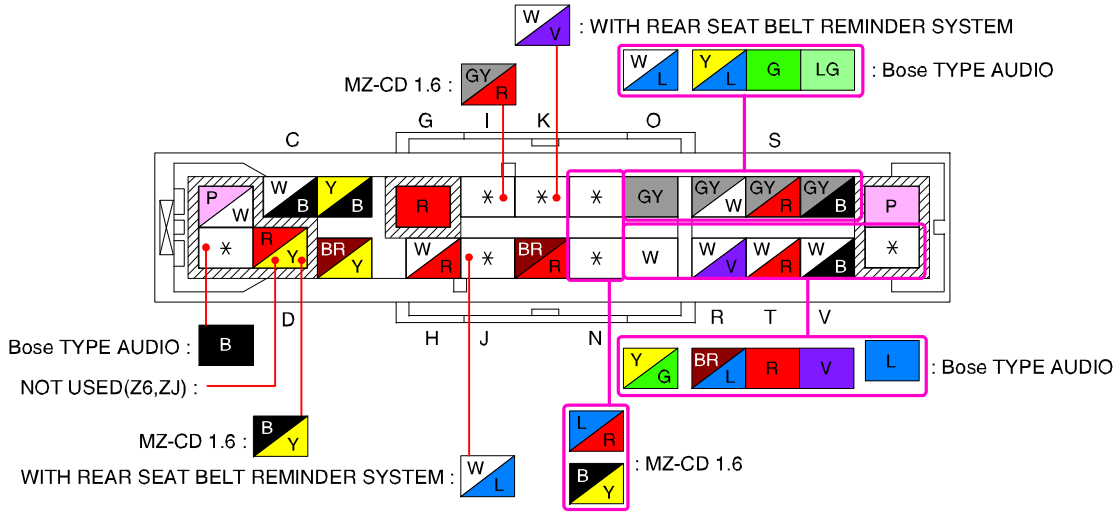


C-21
REAR HARNESS-SHORT CORD


REAR HARNESS

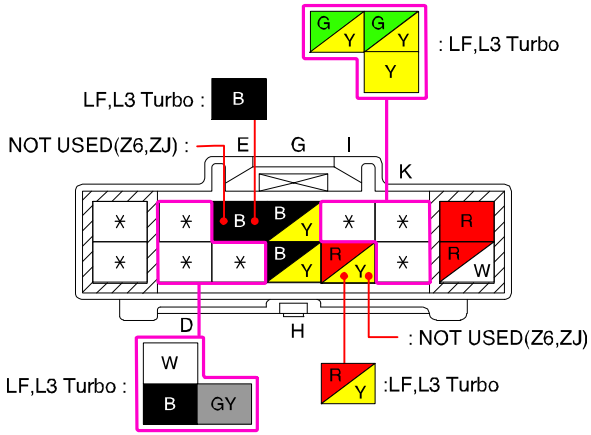


SHORT CORD

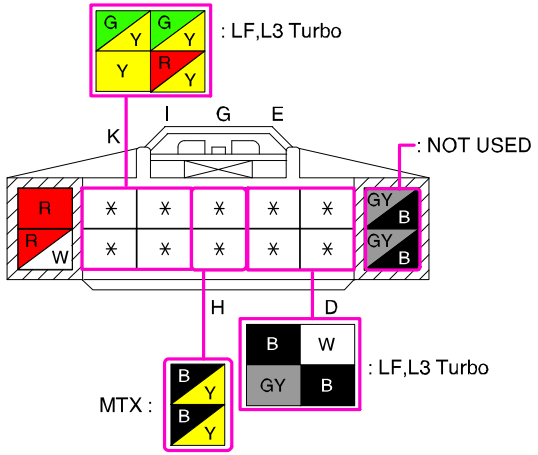


CONTROL SYSTEM (Z6,ZJ:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

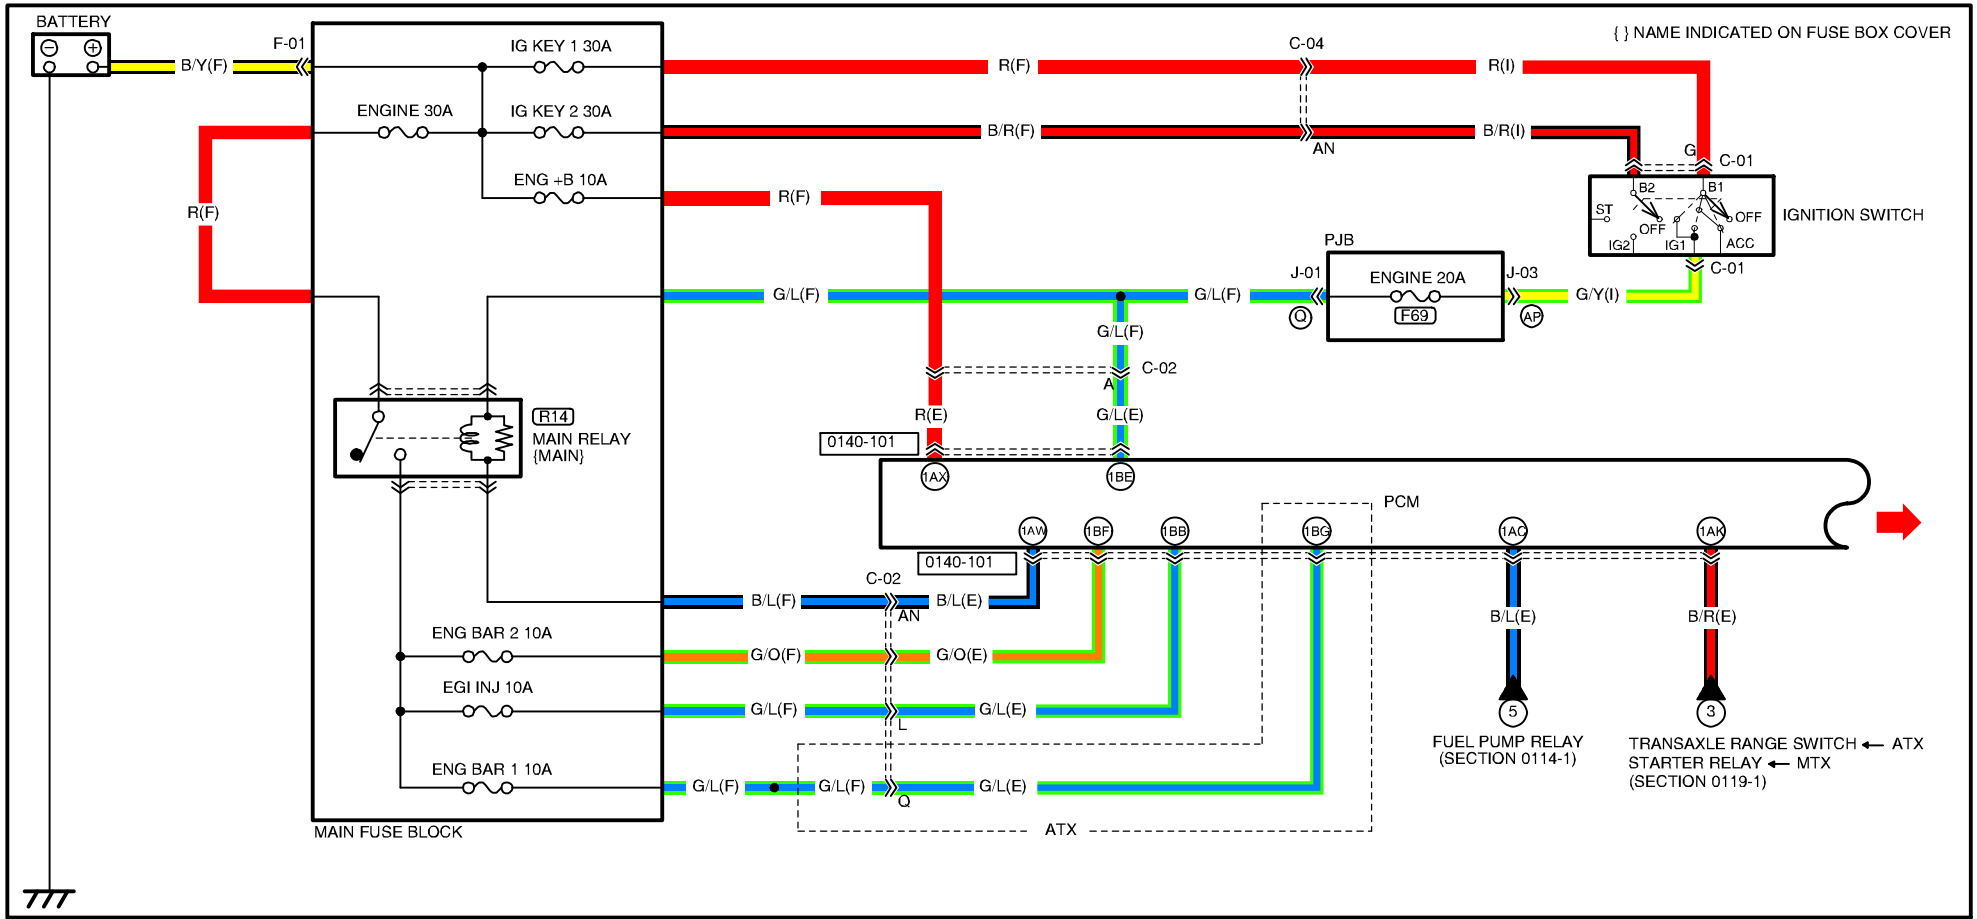


0140-101
PCM

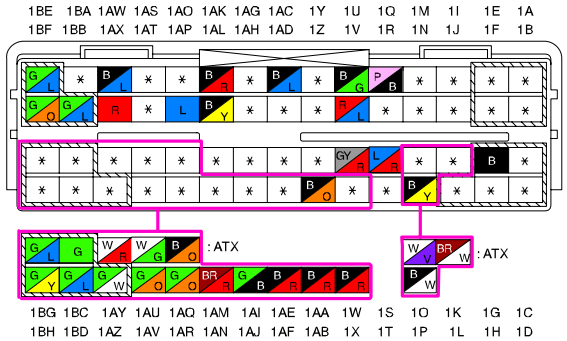

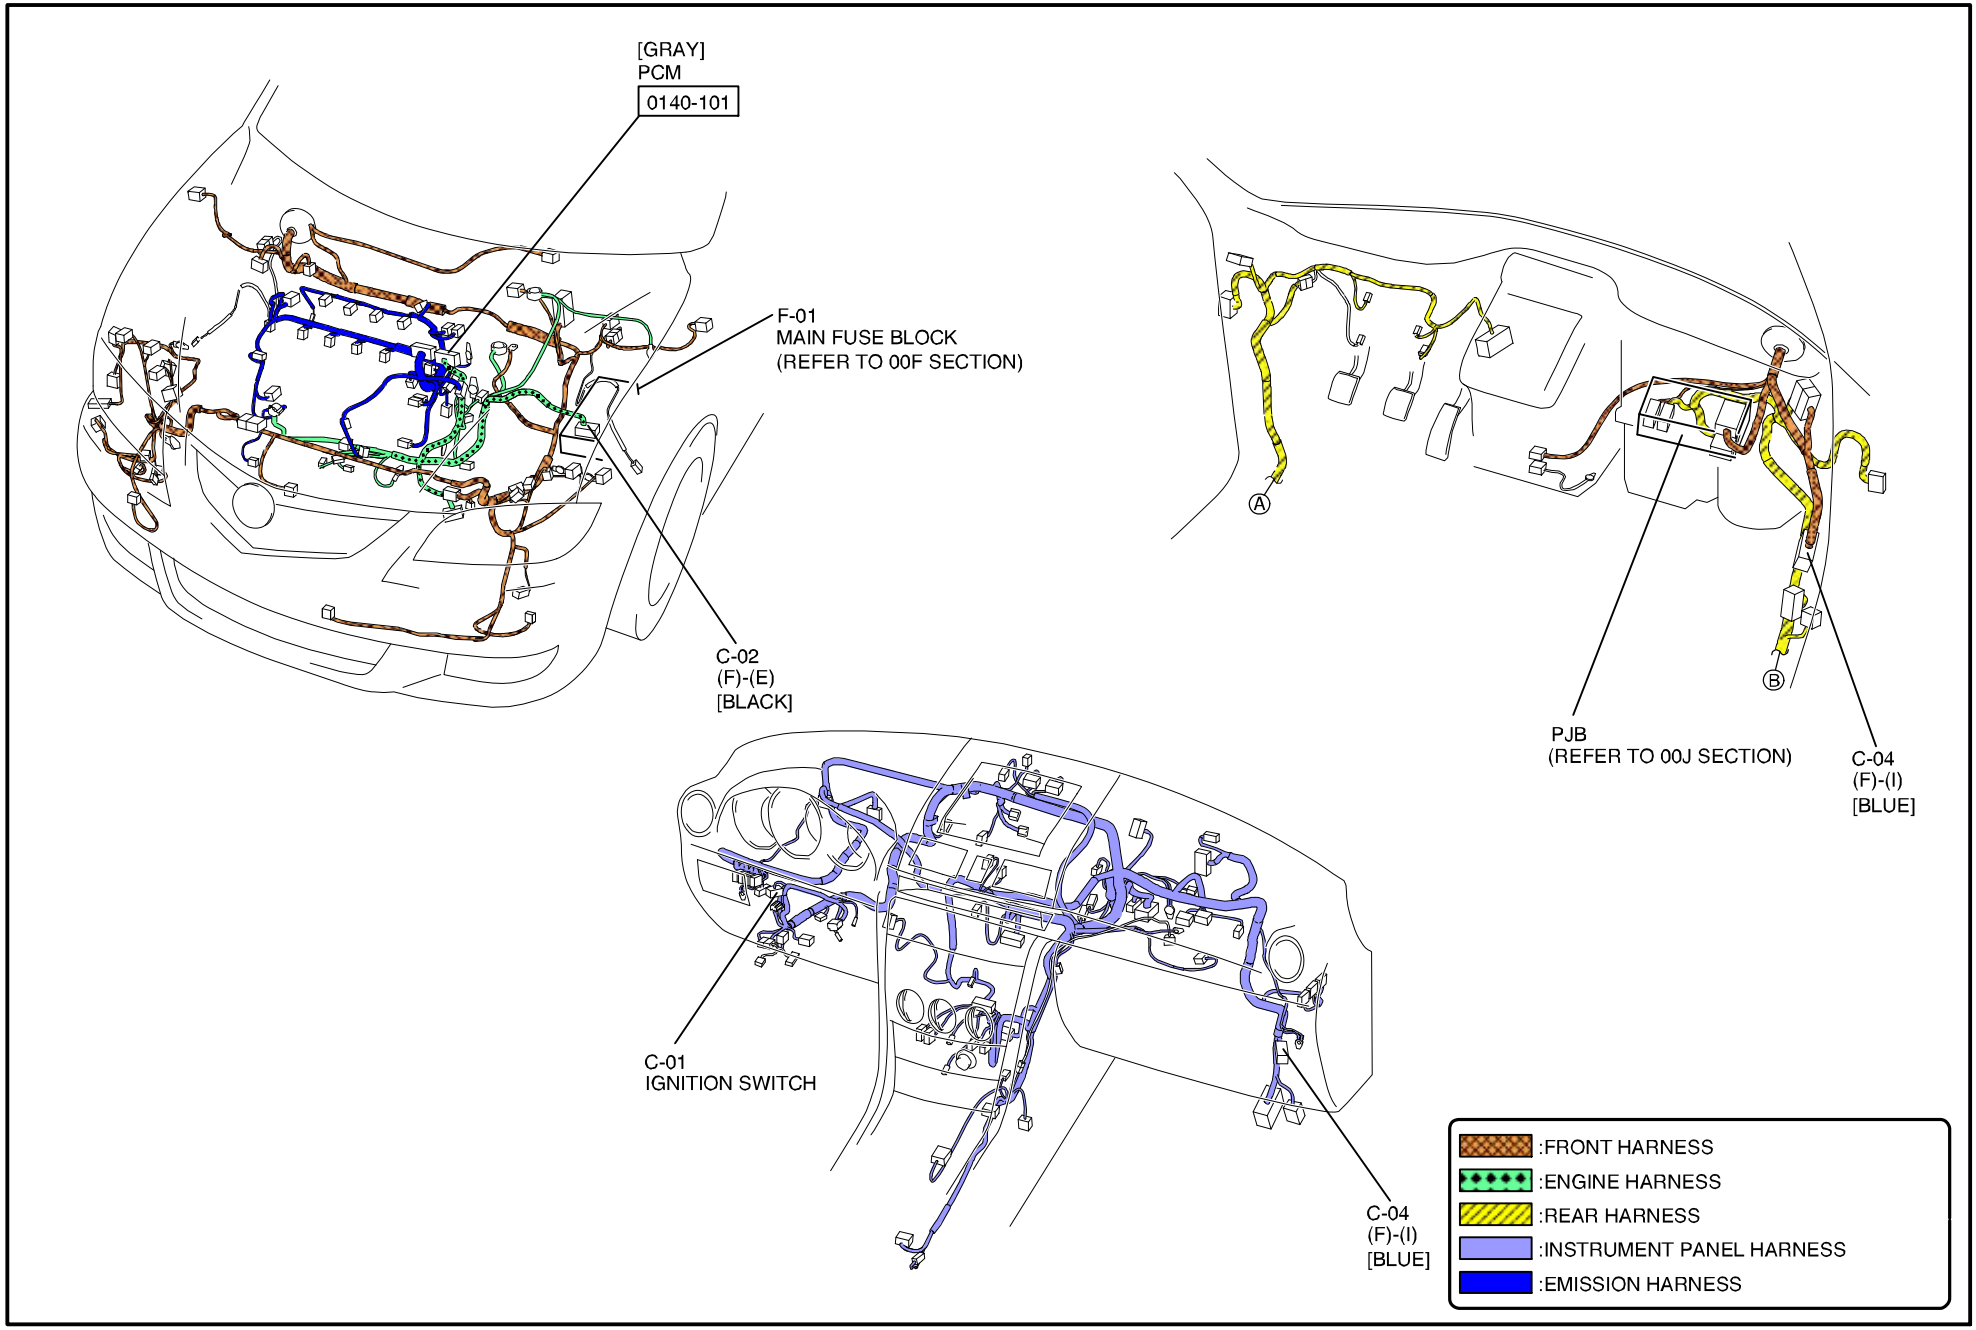

[GRAY]
PCM
0140-101
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-02
(F)-(E)
[BLACK]
Ⓐ
Ⓑ
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
C-01
IGNITION SWITCH
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS


FRONT HARNESS

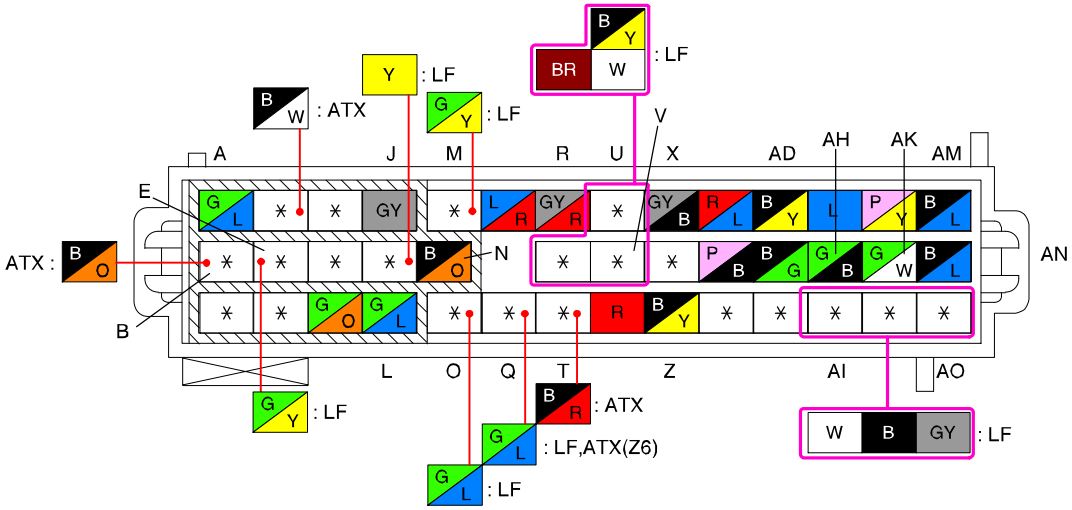

ENGINE HARNESS

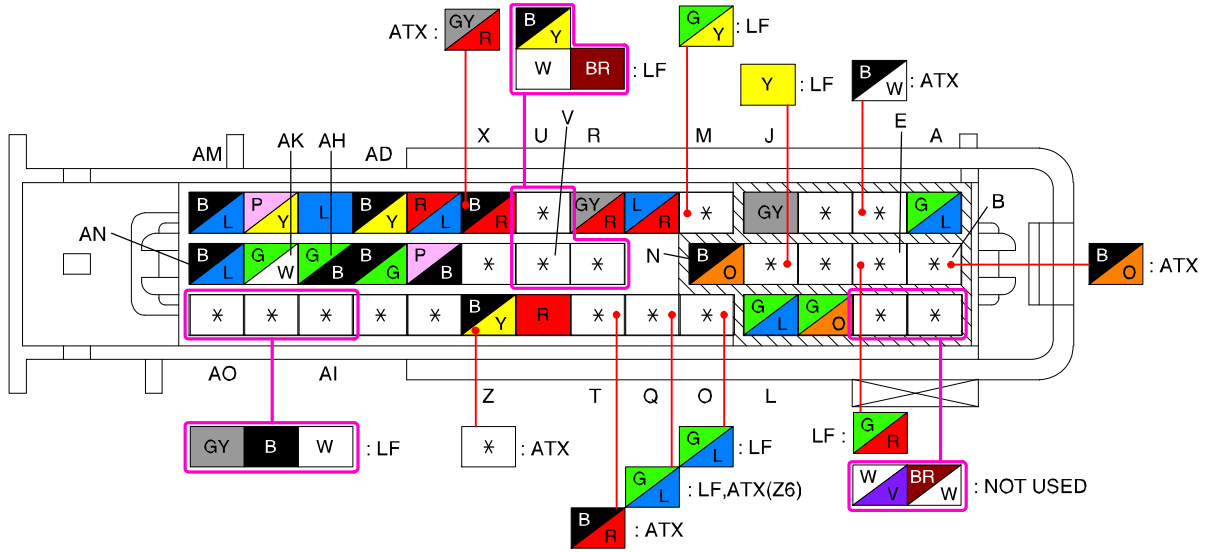


C-01
IGNITION SWITCH/ ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ← MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

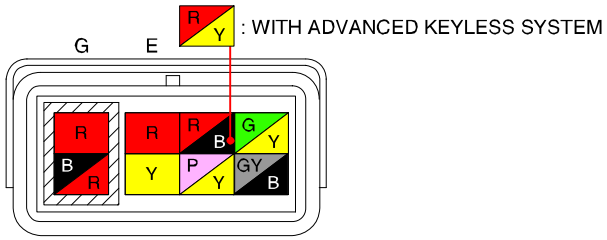


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

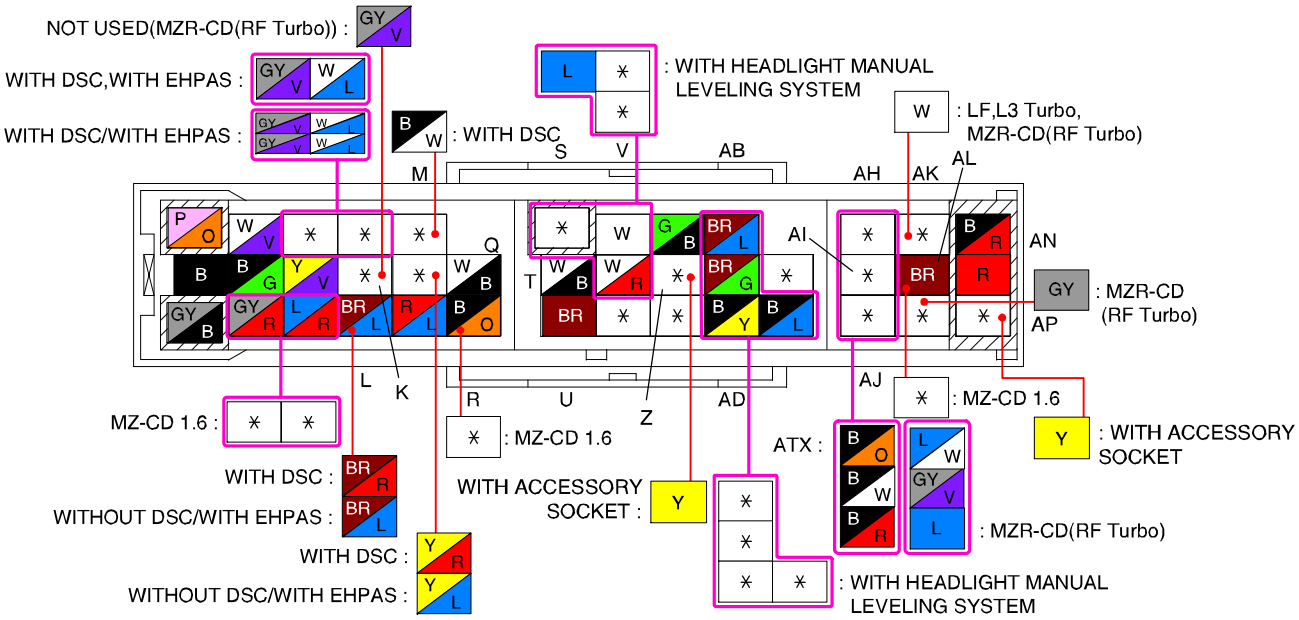


INSTRUMENT PANEL HARNESS

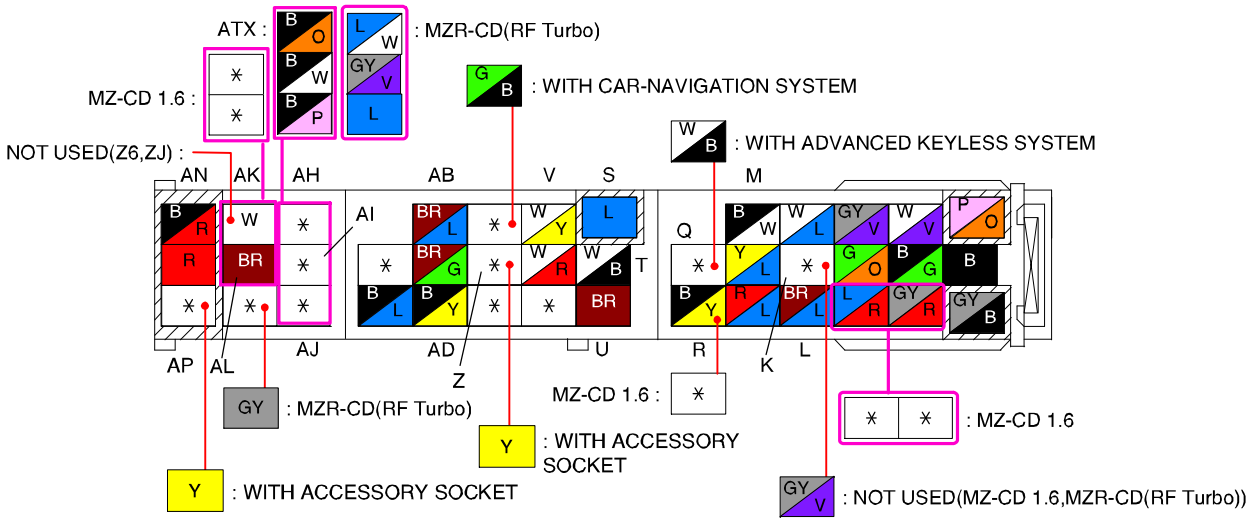


CONTROL SYSTEM (Z6,ZJ:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

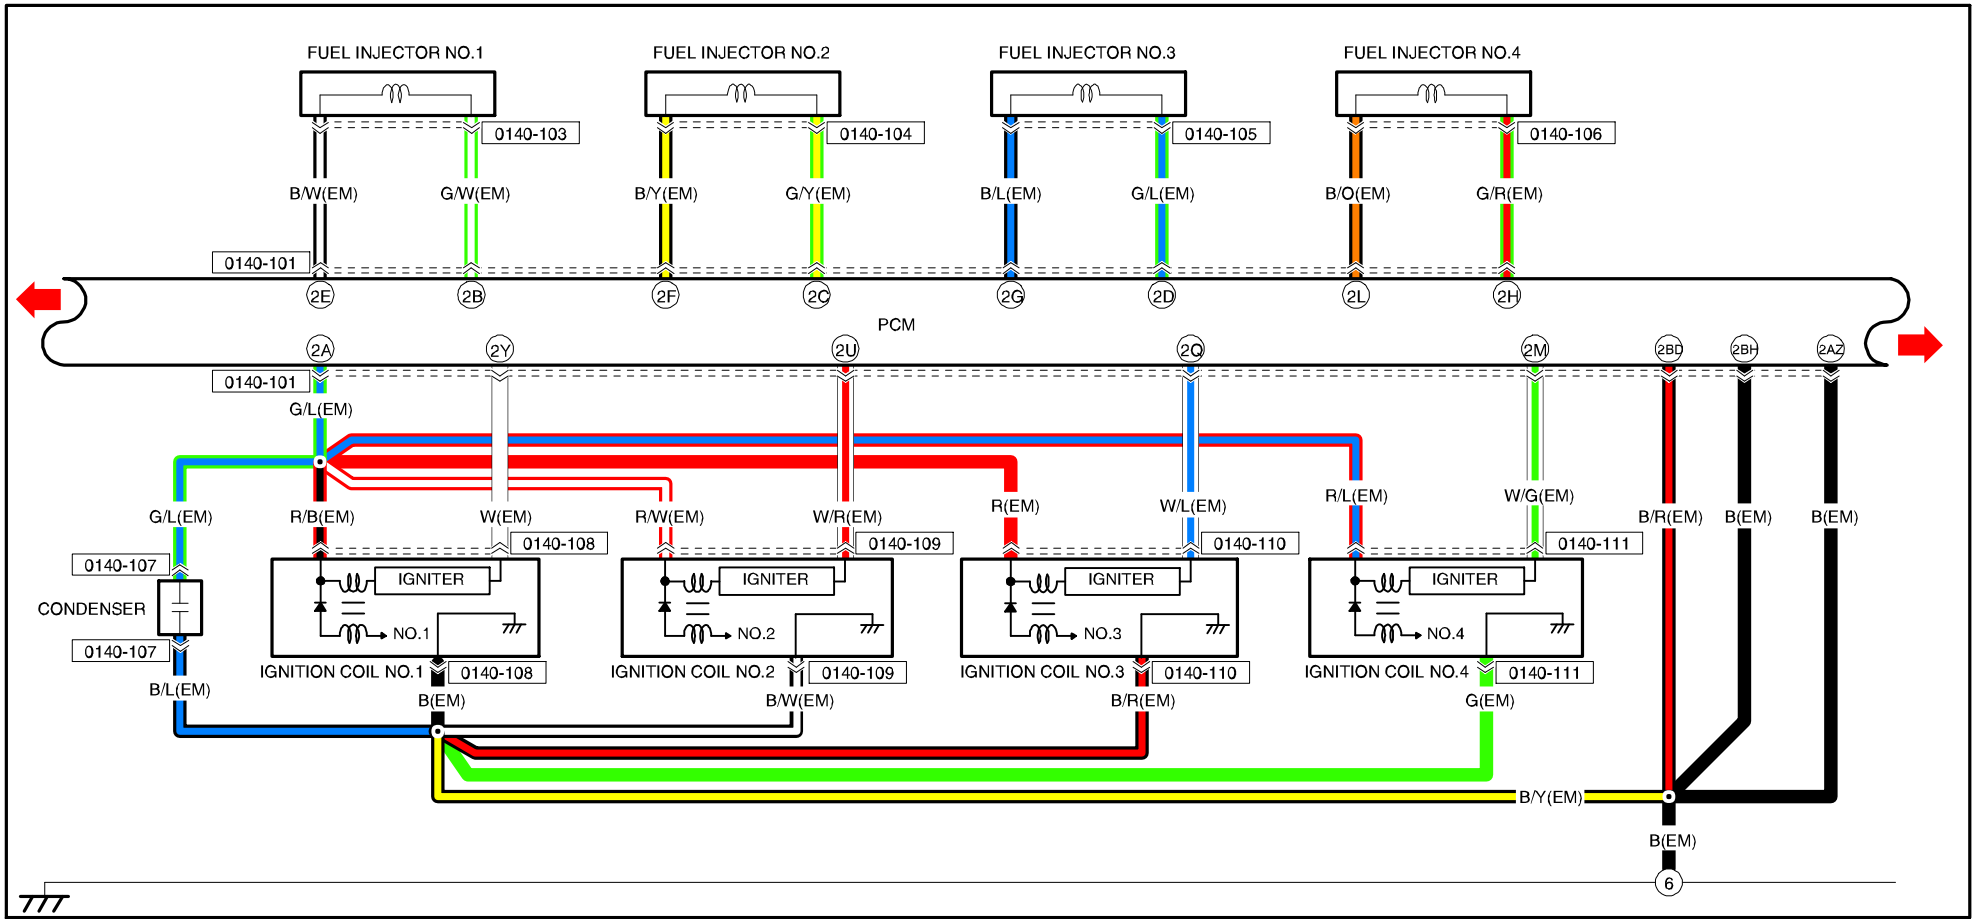


0140-101
PCM

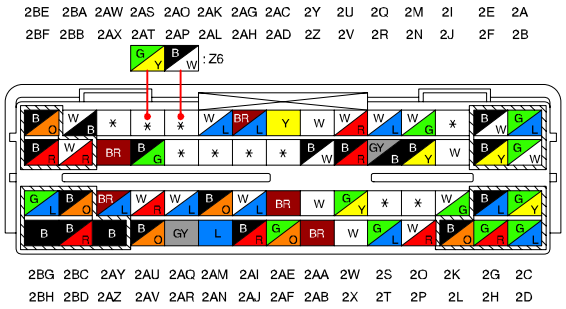


0140-103
FUEL INJECTOR NO.1



0140-104
FUEL INJECTOR NO.2



0140-105
FUEL INJECTOR NO.3




0140-106
FUEL INJECTOR NO.4




0140-107
CONDENSER




0140-108
IGNITION COIL NO.1




0140-109
IGNITION COIL NO.2




0140-110
IGNITION COIL NO.3




0140-111
IGNITION COIL NO.4




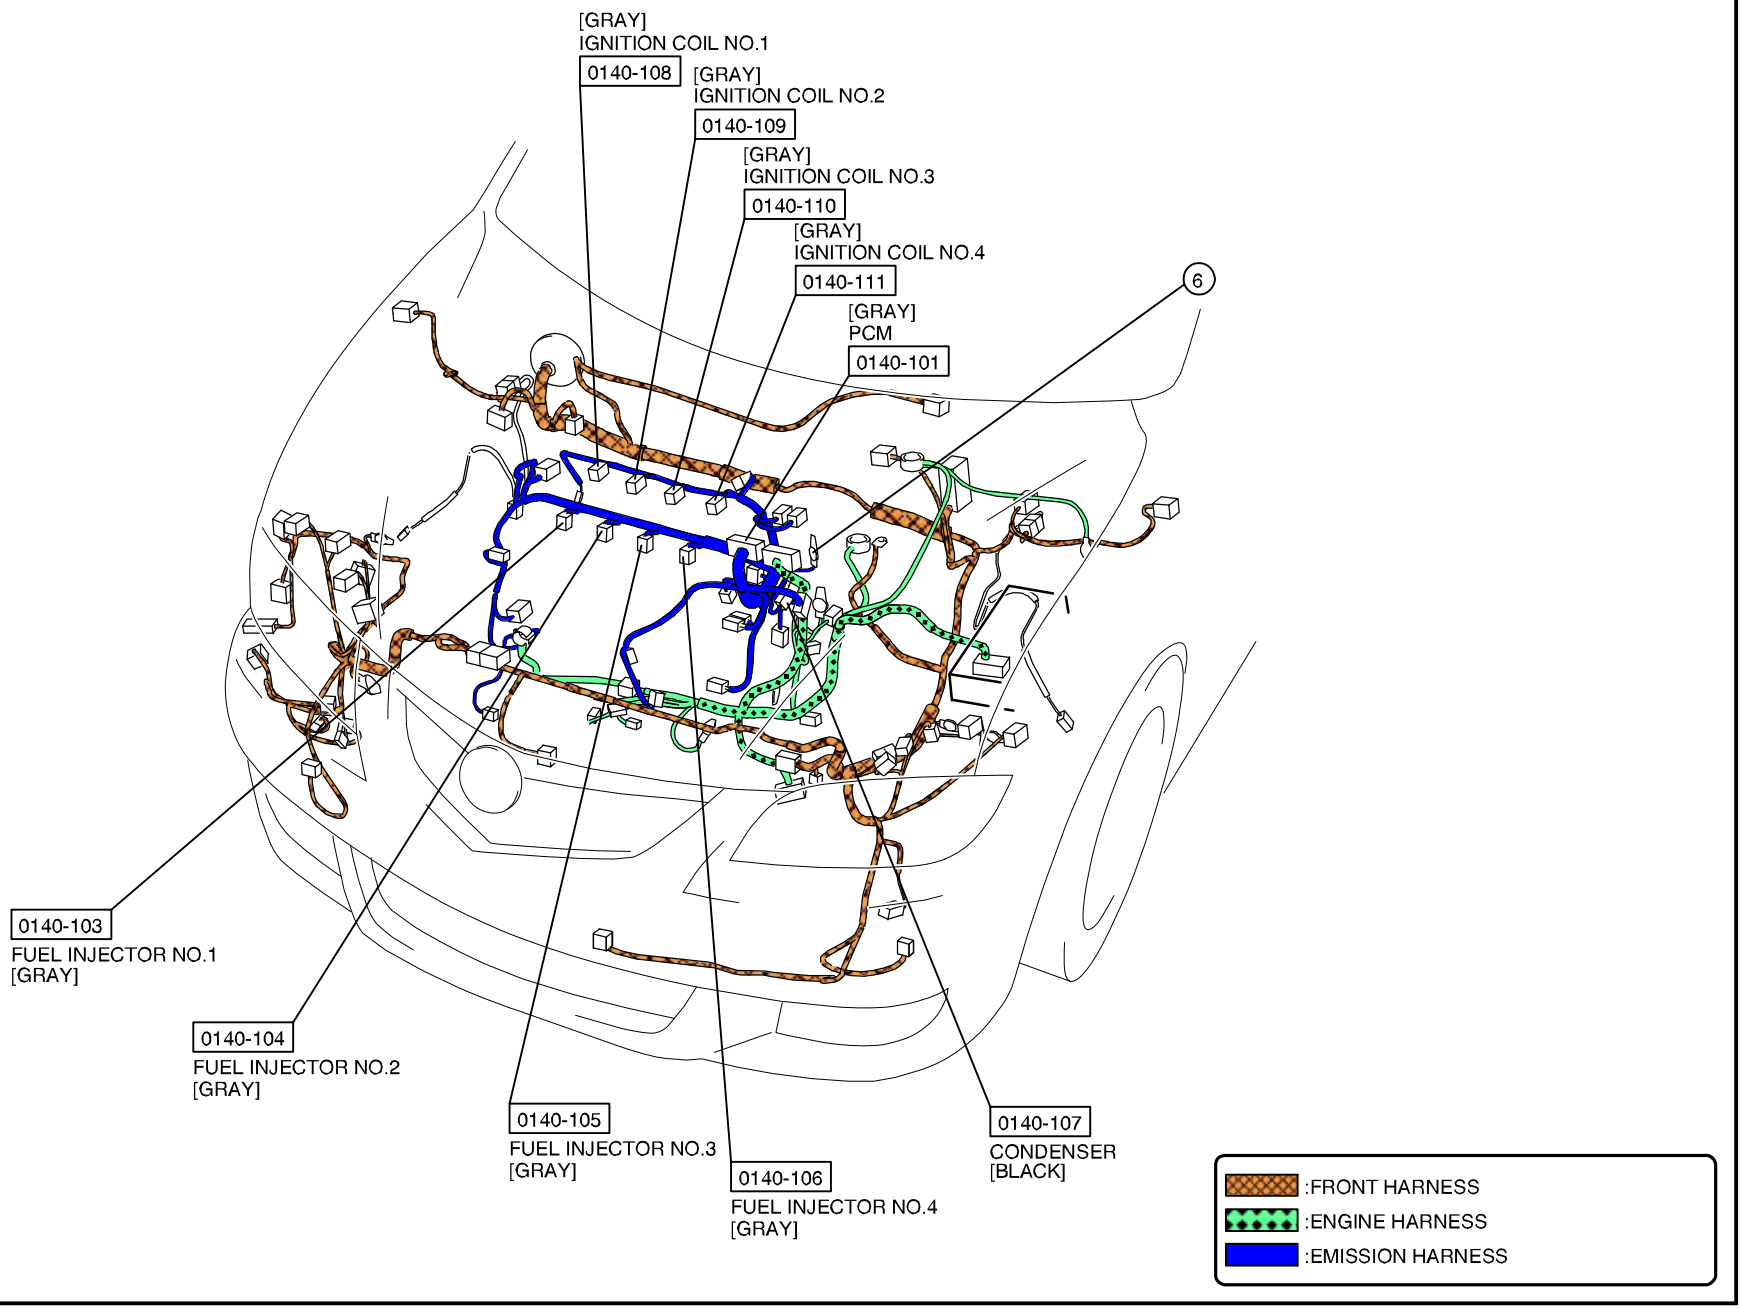
[GRAY]
IGNITION COIL NO.1
0140-108
[GRAY]
IGNITION COIL NO.2
0140-109
[GRAY]
IGNITION COIL NO.3
0140-110
[GRAY]
IGNITION COIL NO.4
0140-111
[GRAY]
PCM
0140-101
6
0140-103
FUEL INJECTOR NO.1
[GRAY]
0140-104
FUEL INJECTOR NO.2
[GRAY]
0140-105
FUEL INJECTOR NO.3
[GRAY]
0140-106
FUEL INJECTOR NO.4
[GRAY]
0140-107
CONDENSER
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS


CONTROL SYSTEM (Z6,ZJ:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

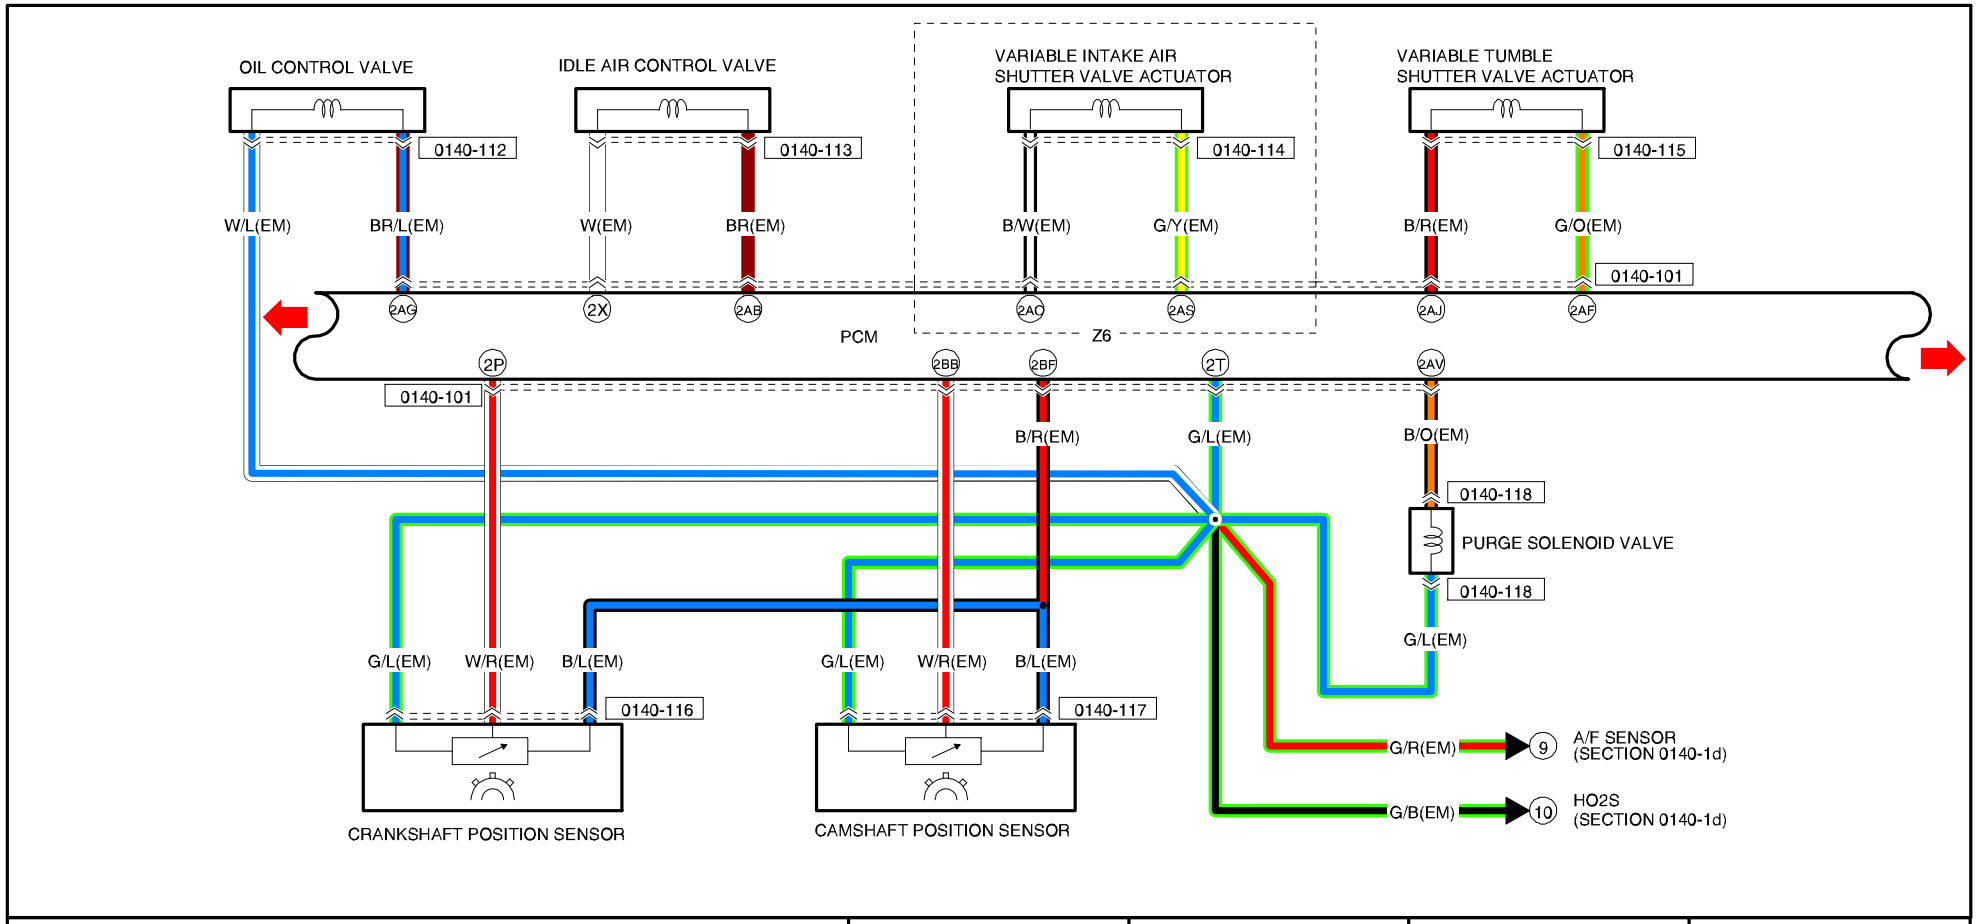

0140-101
PCM

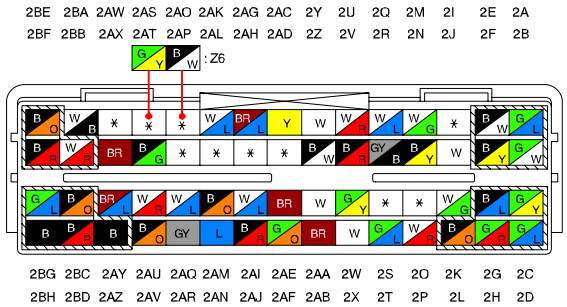


0140-112
OIL CONTROL VALVE




0140-113
IDLE AIR CONTROL VALVE




0140-114
VARIABLE INTAKE AIR SHUTTER VALVE ACTUATOR




0140-115
VARIABLE TUMBLE SHUTTER VALVE ACTUATOR




0140-116
CRANKSHAFT POSITION SENSOR





0140-117
CAMSHAFT POSITION SENSOR




0140-118
PURGE SOLENOID VALVE



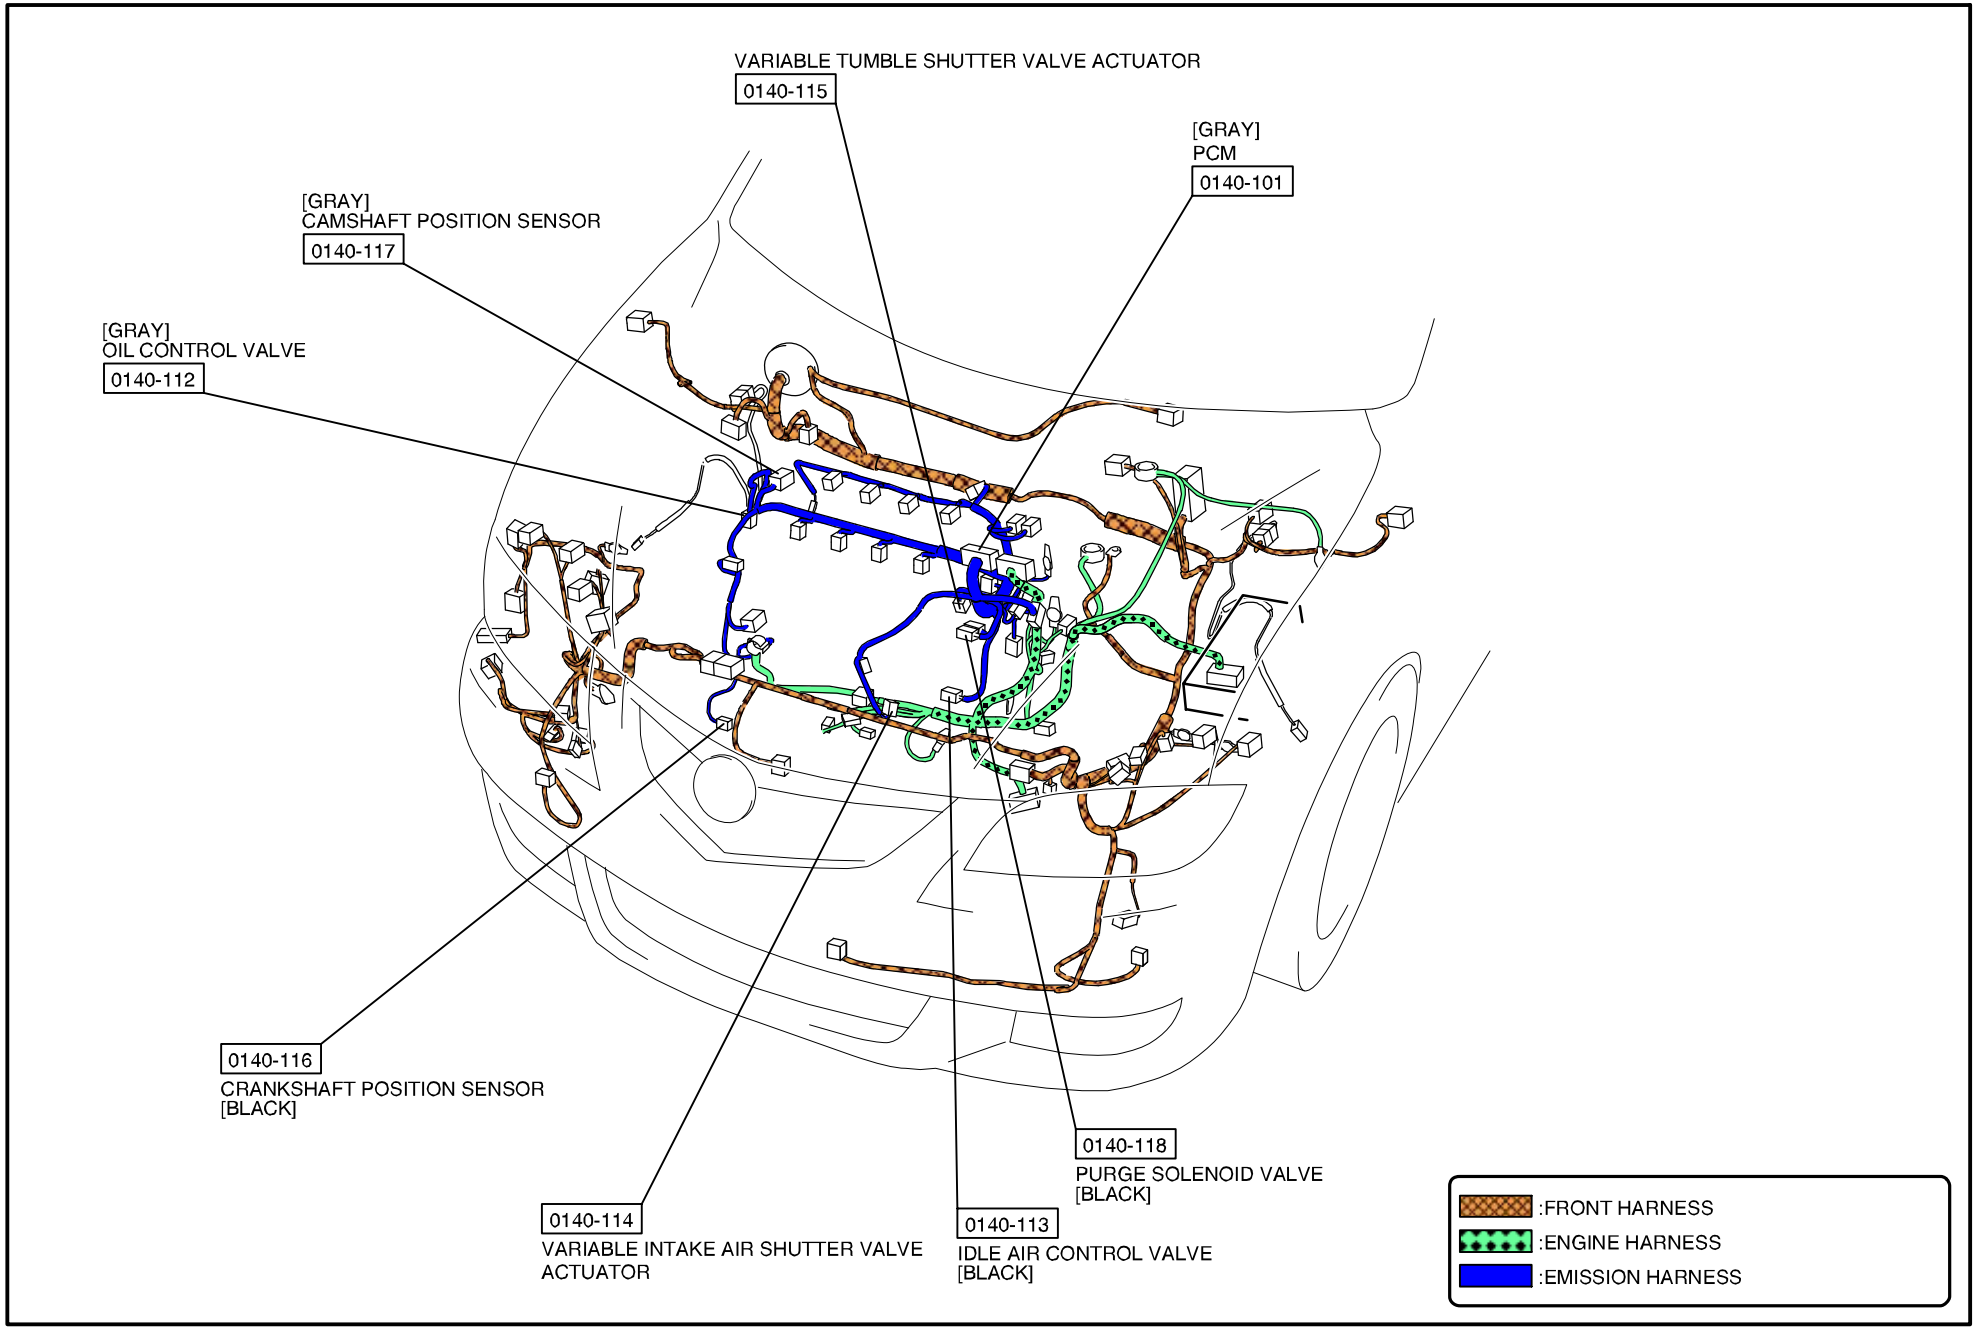

VARIABLE TUMBLE SHUTTER VALVE ACTUATOR
0140-115
[GRAY]
PCM
0140-101
[GRAY]
CAMSHAFT POSITION SENSOR
0140-117
[GRAY]
OIL CONTROL VALVE
0140-112
0140-116
CRANKSHAFT POSITION SENSOR
[BLACK]
0140-118
PURGE SOLENOID VALVE
[BLACK]
0140-114
VARIABLE INTAKE AIR SHUTTER VALVE
ACTUATOR
0140-113
IDLE AIR CONTROL VALVE
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS

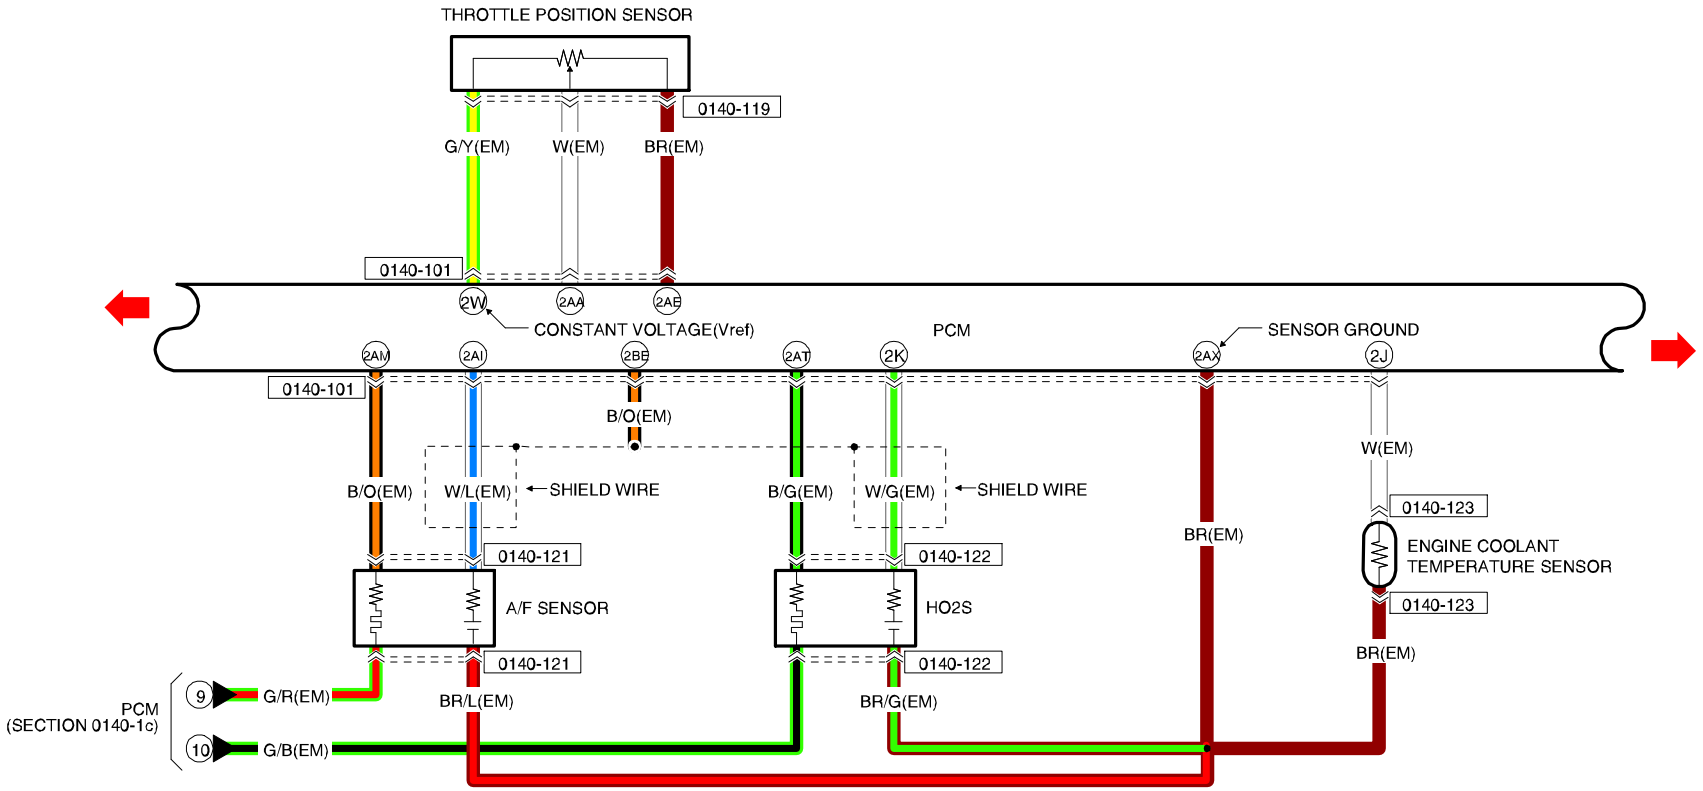


0140-101
PCM

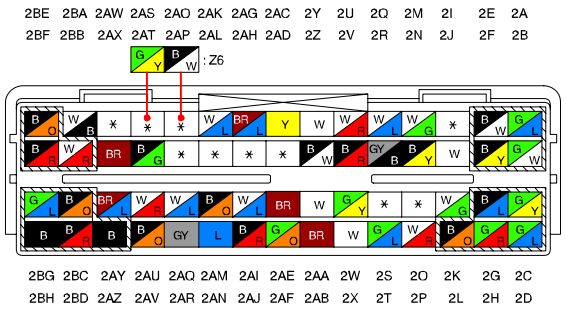


0140-119
THROTTLE POSITION SENSOR



0140-121
A/F SENSOR





0140-122
HO2S

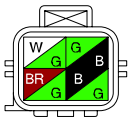


0140-123
ENGINE COOLANT TEMPERATURE SENSOR

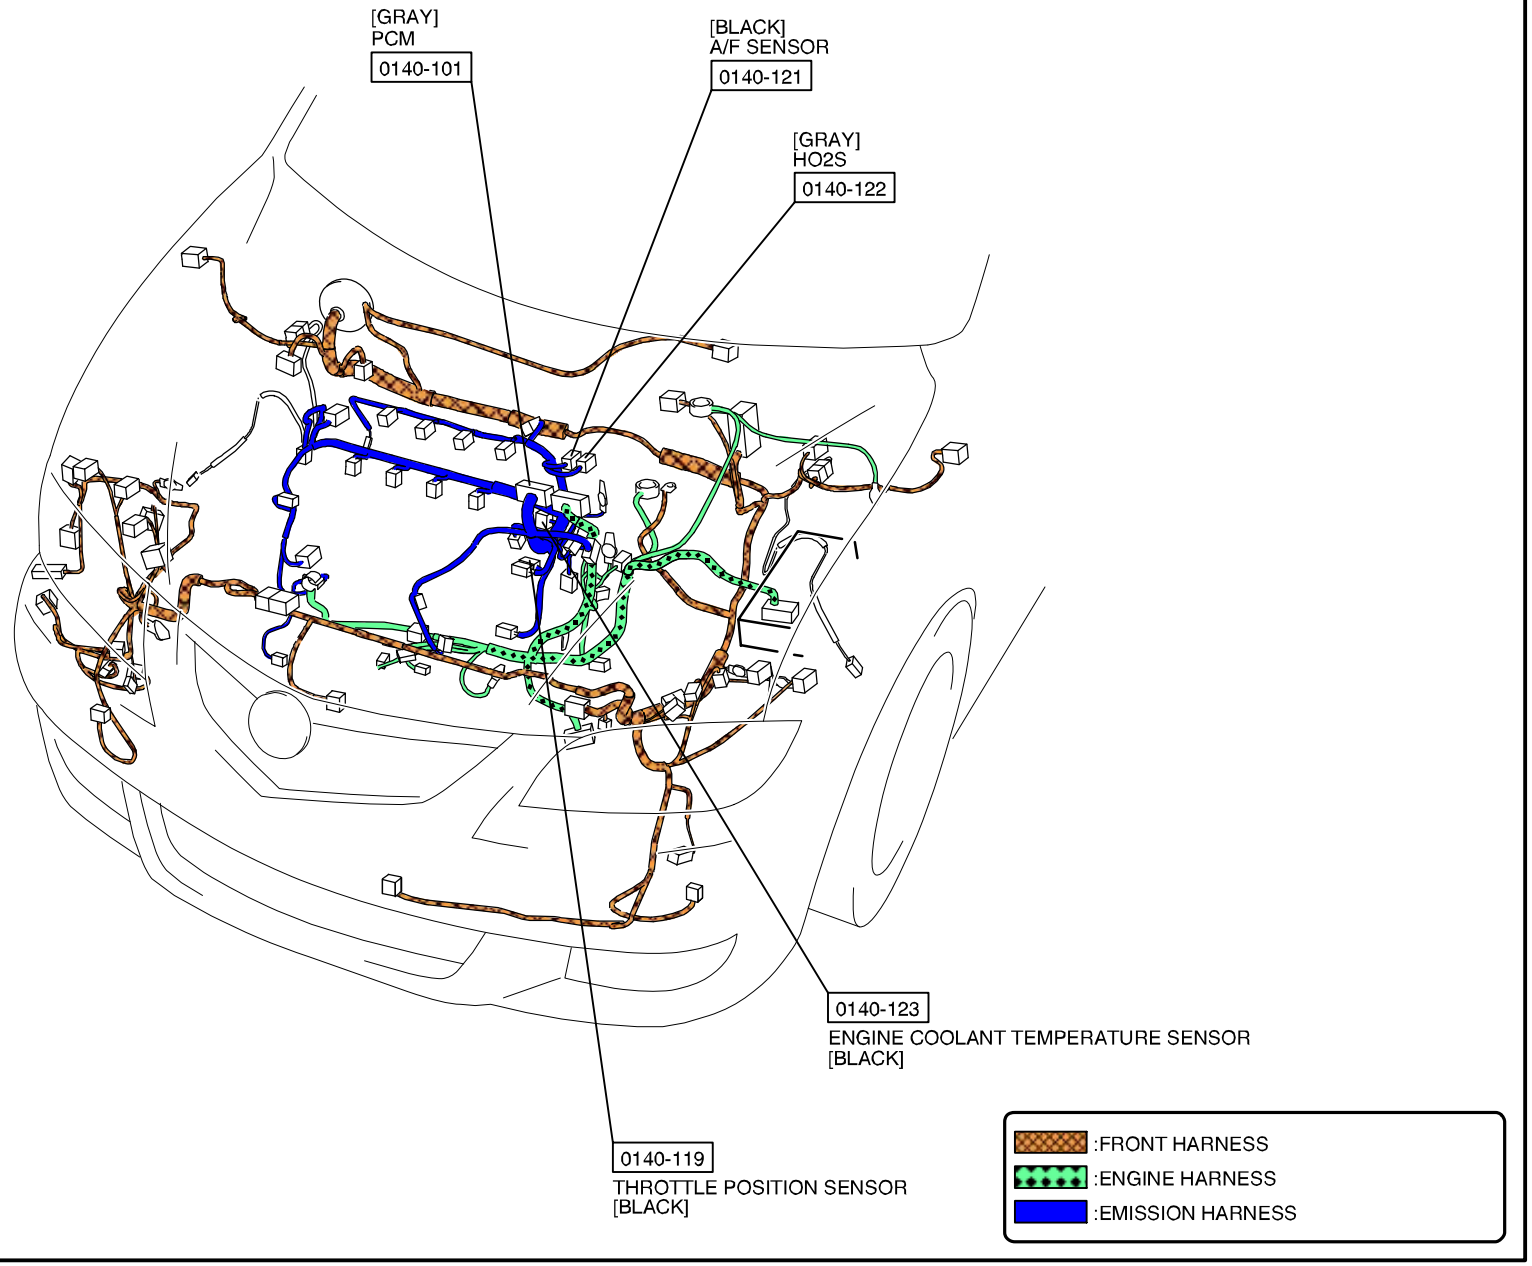



[GRAY]
PCM
0140-101
[BLACK]
A/F SENSOR
0140-121
[GRAY]
HO2S
0140-122
0140-123
ENGINE COOLANT TEMPERATURE SENSOR
[BLACK]
0140-119
THROTTLE POSITION SENSOR
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS

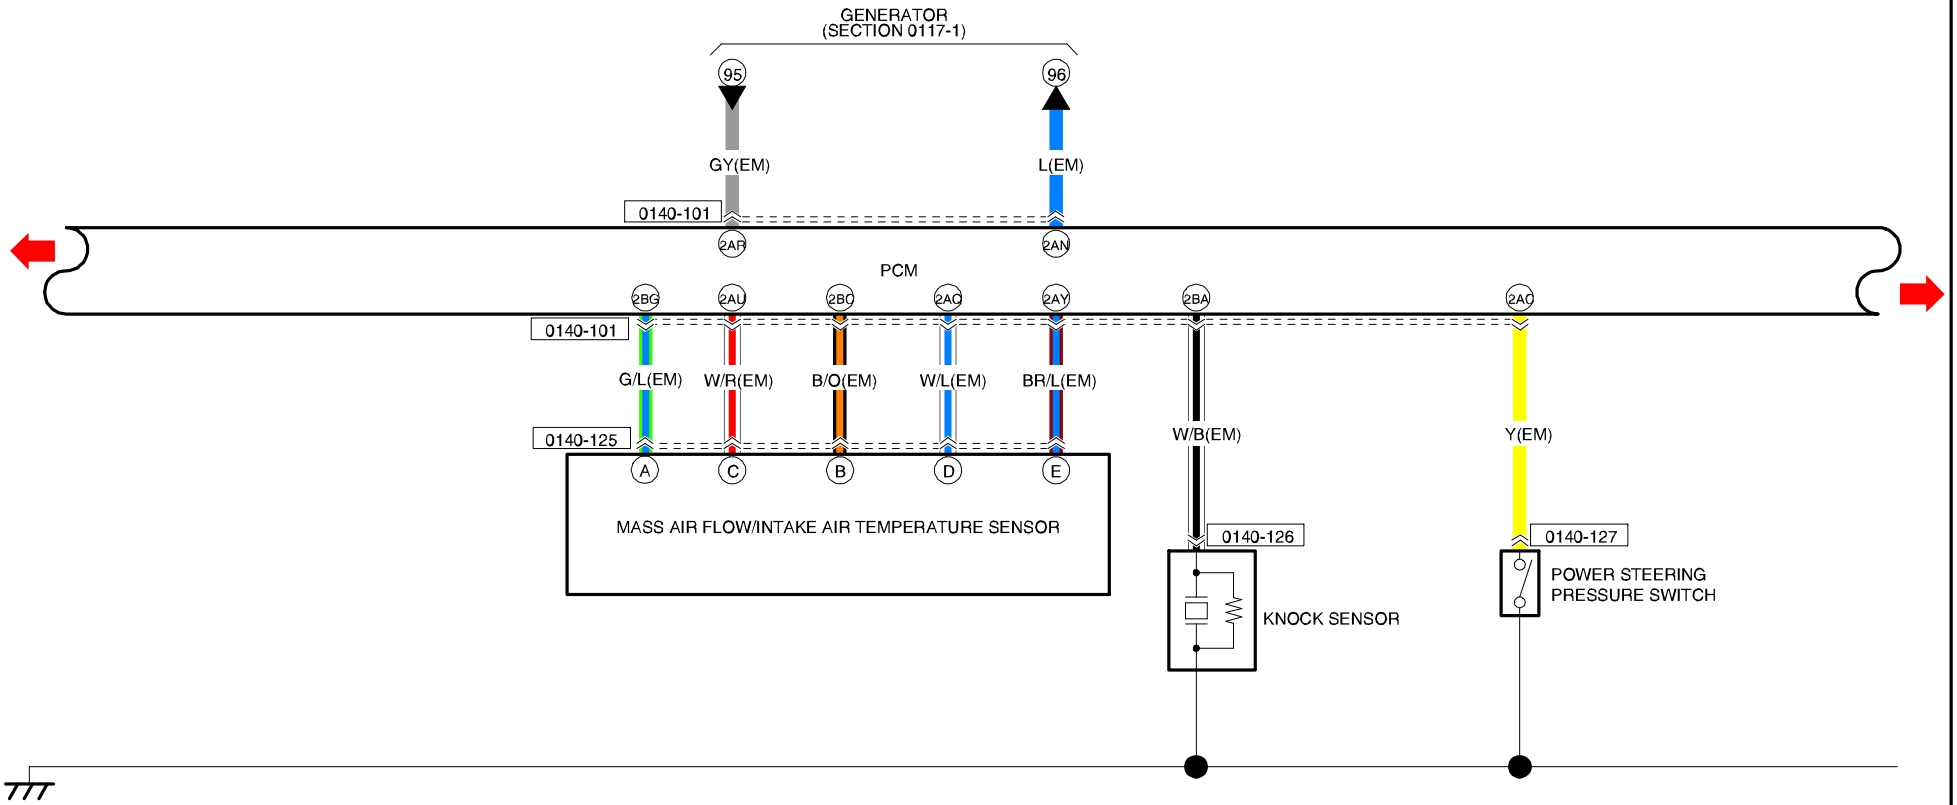

0140-101
PCM

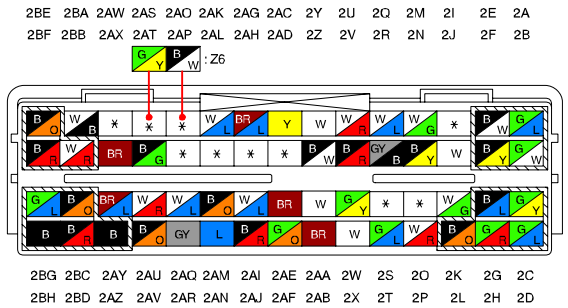

0140-125
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR




0140-126
KNOCK SENSOR




0140-127
POWER STEERING PRESSURE SWITCH

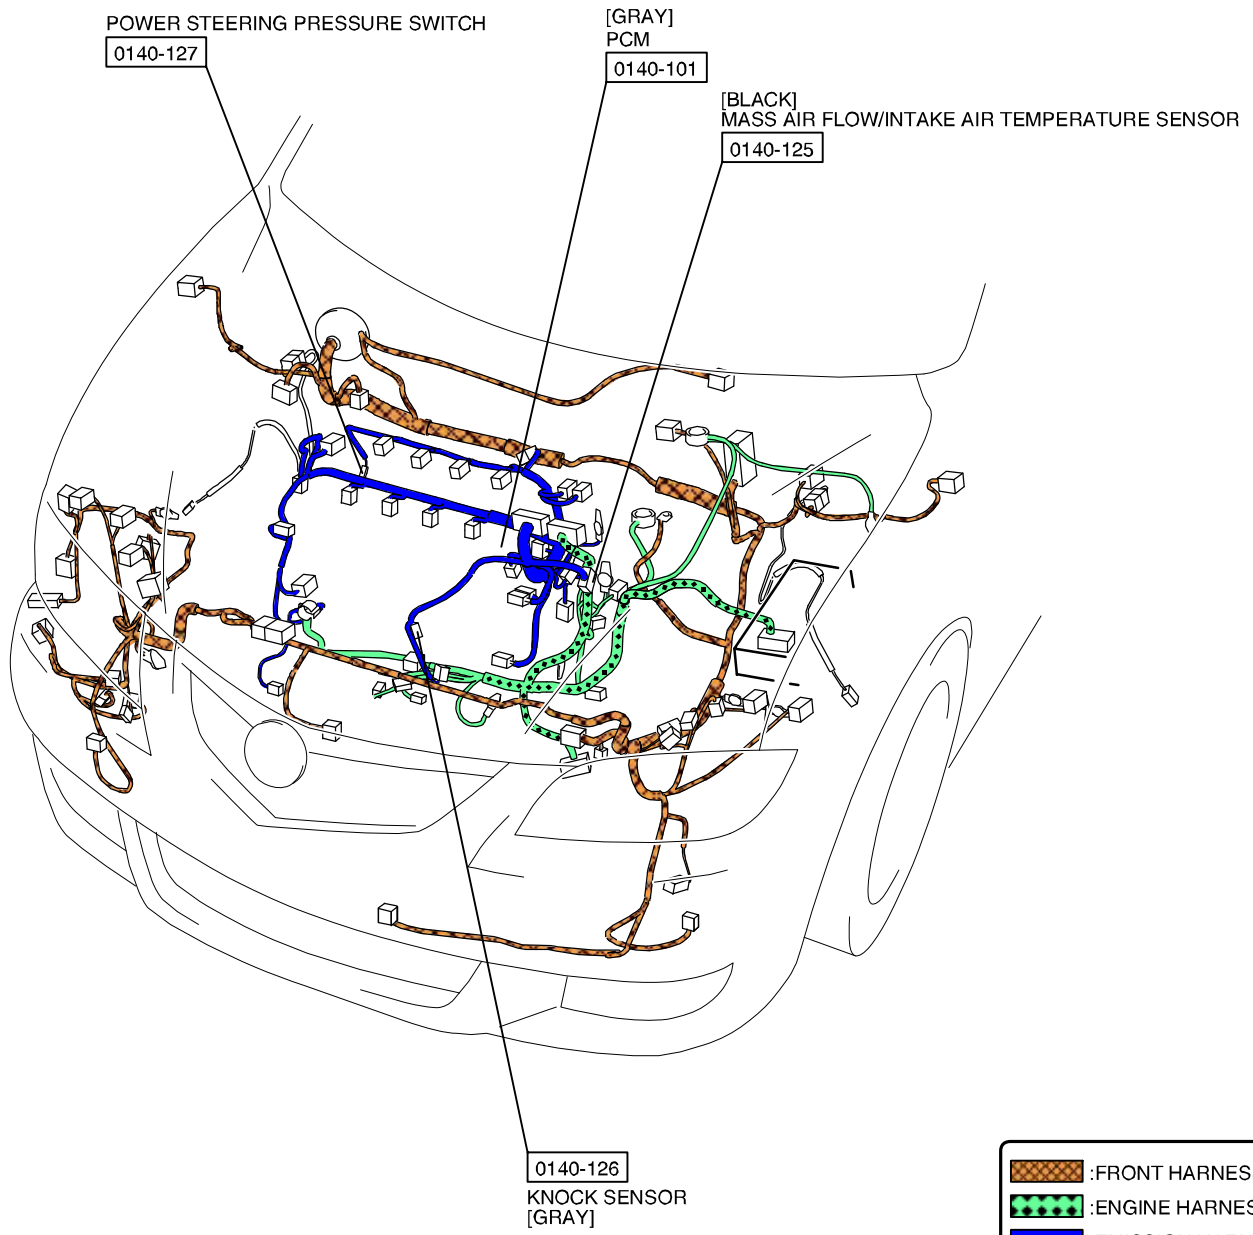



POWER STEERING PRESSURE SWITCH
0140-127
[GRAY]
PCM
0140-101
[BLACK]
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR
0140-125
0140-126
KNOCK SENSOR
[GRAY]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS


CONTROL SYSTEM (Z6,ZJ:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

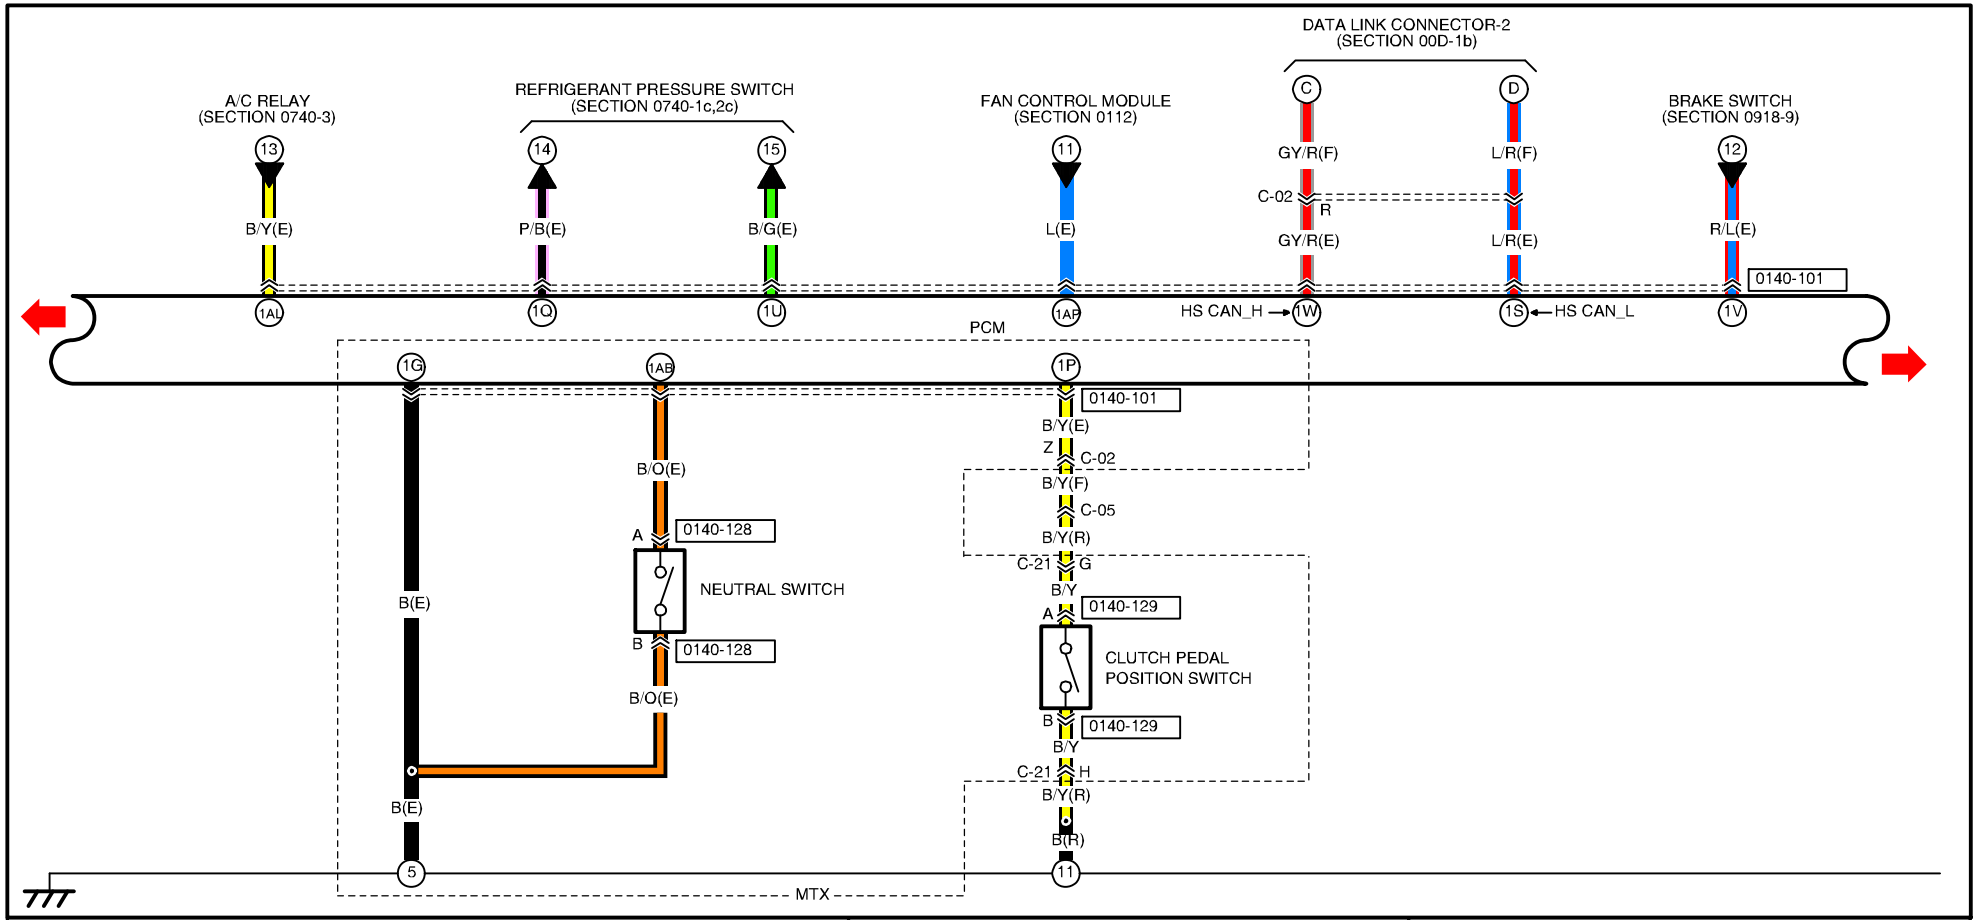


0140-101
PCM

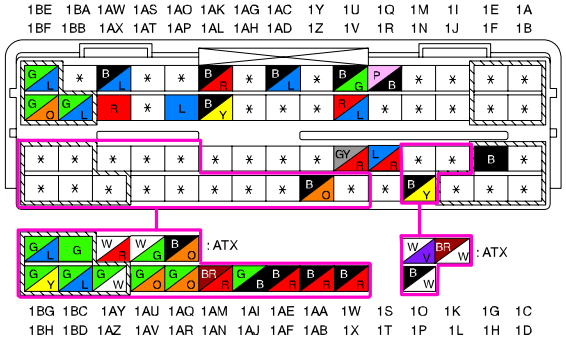


0140-128
NEUTRAL SWITCH




0140-129
CLUTCH PEDAL POSITION SWITCH



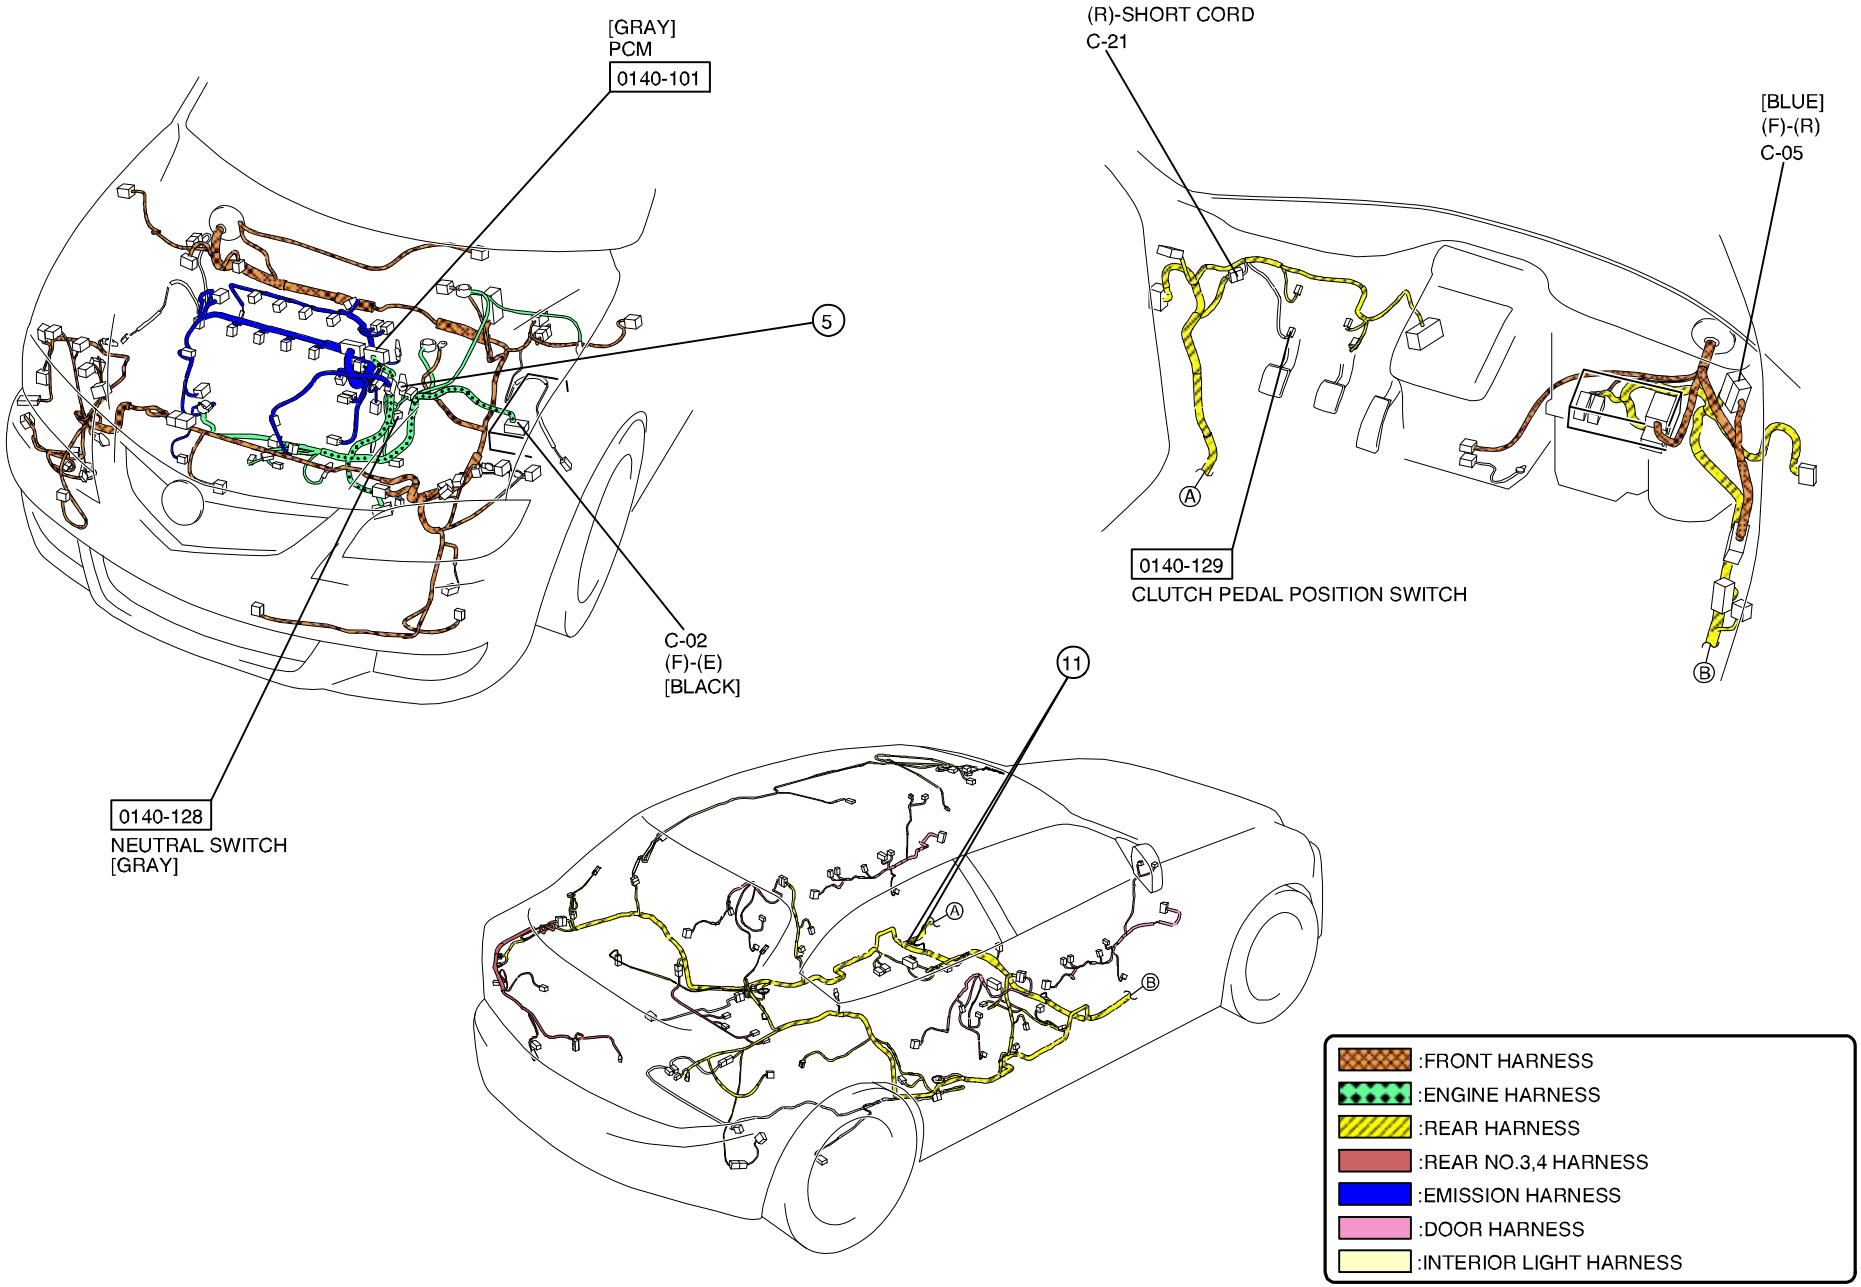

[GRAY]
PCM
0140-101
5
C-02
(F)-(E)
[BLACK]
0140-128
NEUTRAL SWITCH
[GRAY]
(R)-SHORT CORD
C-21
[BLUE]
(F)-(R)
C-05
A
B
0140-129
CLUTCH PEDAL POSITION SWITCH
11
A
B
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

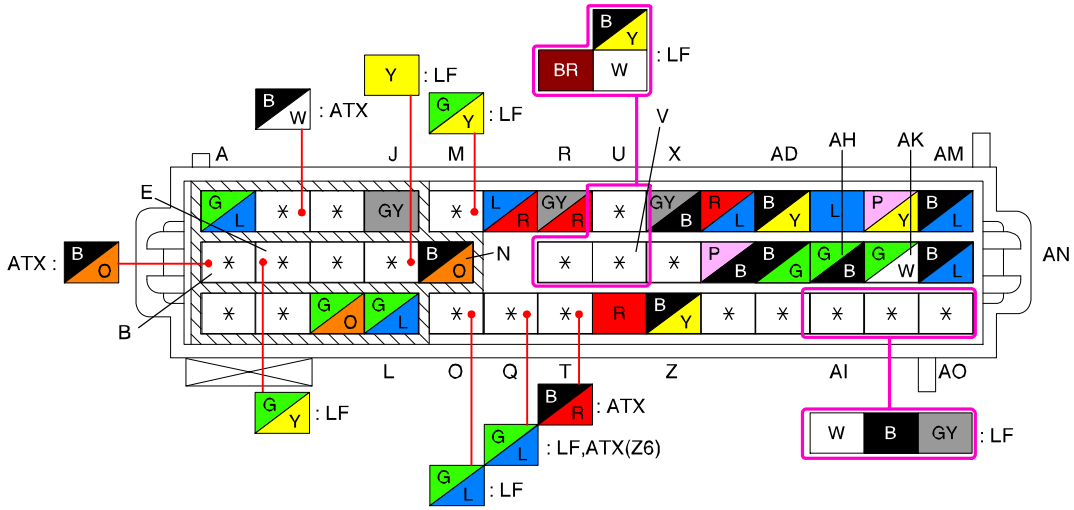


ENGINE HARNESS

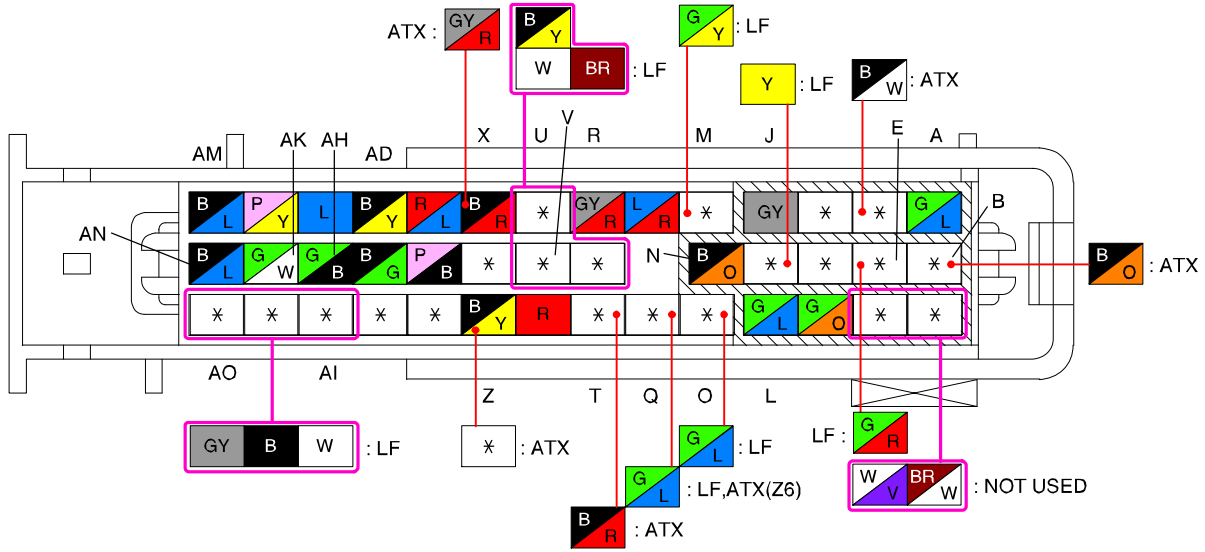


C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

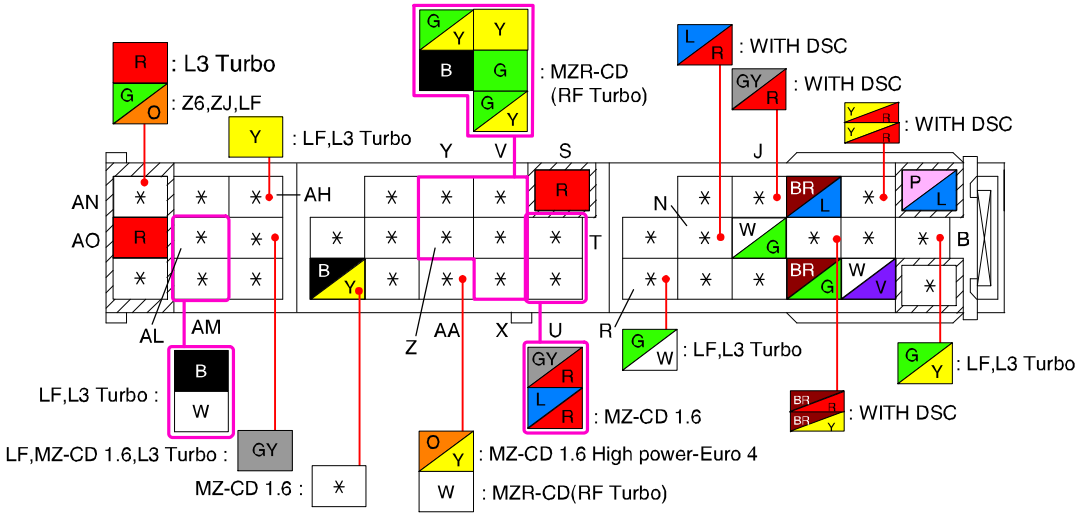


REAR HARNESS

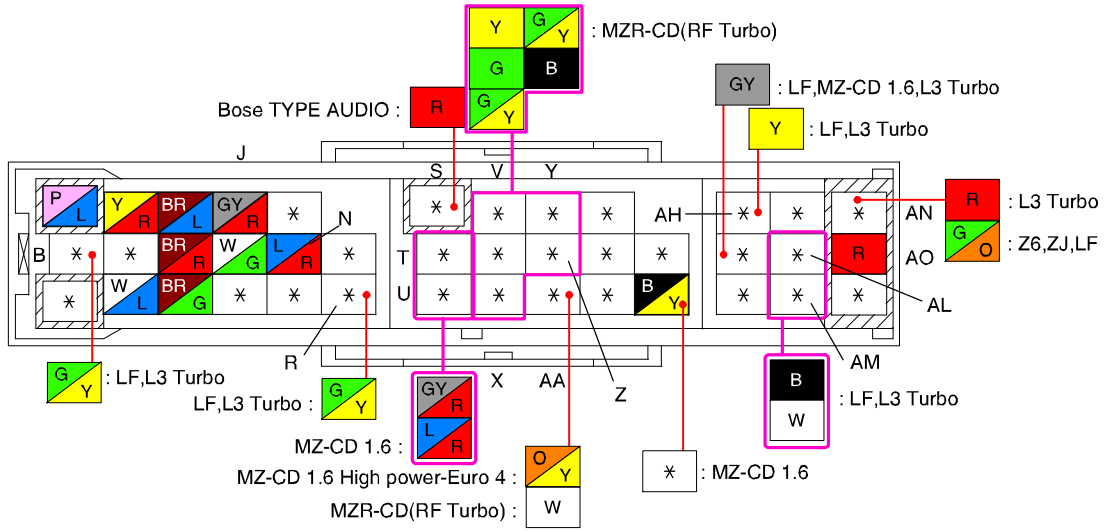



C-21
REAR HARNESS-SHORT CORD

REAR HARNESS

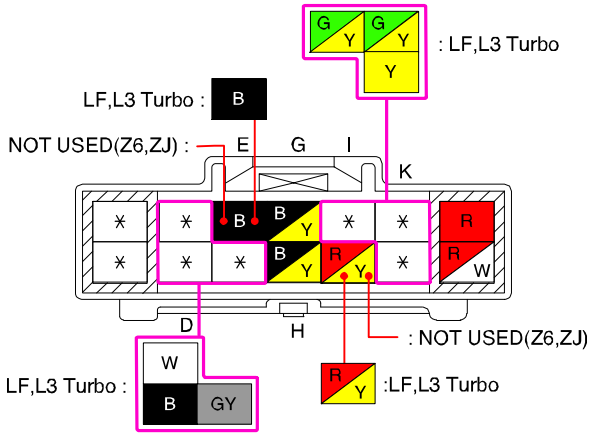


SHORT CORD

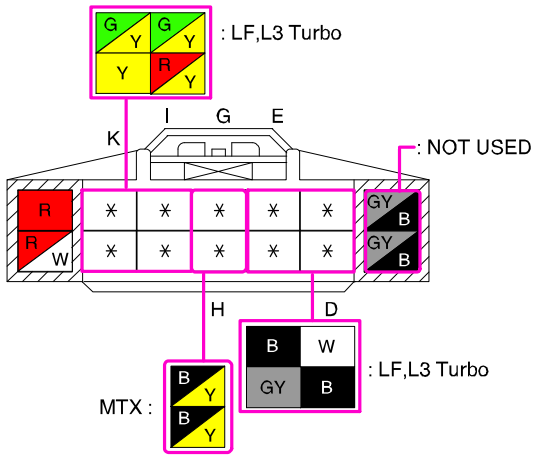

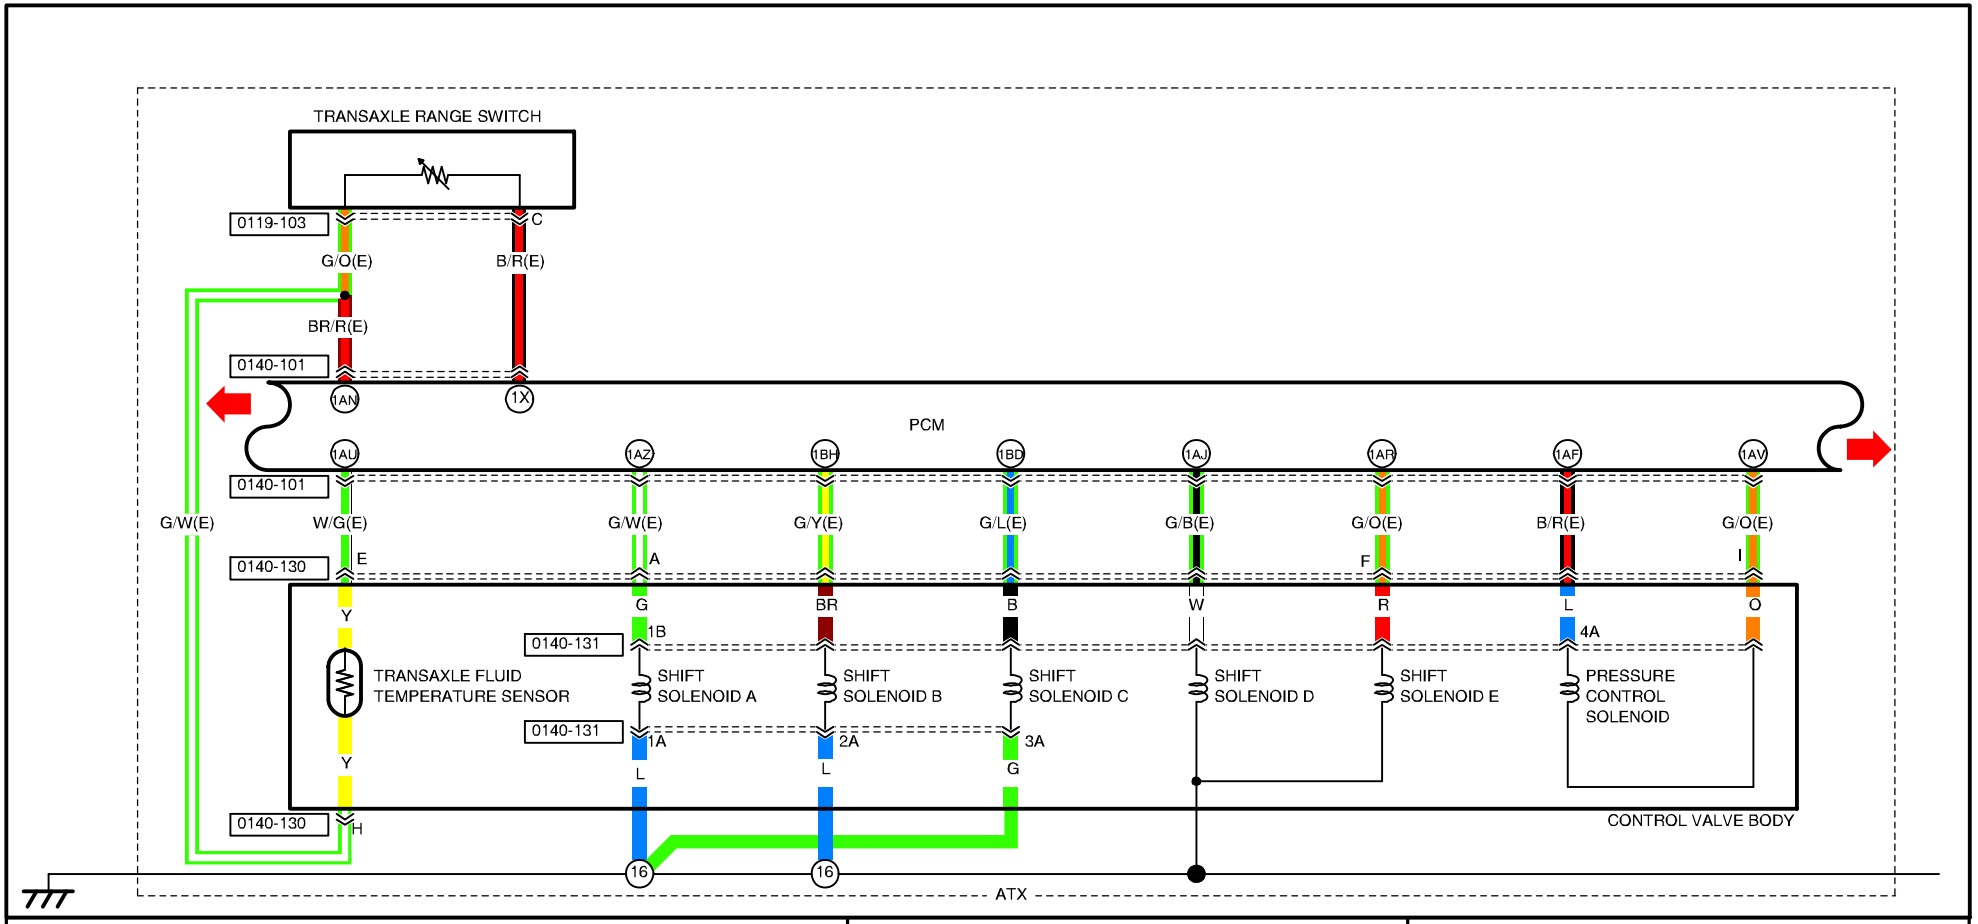


0140-101
PCM

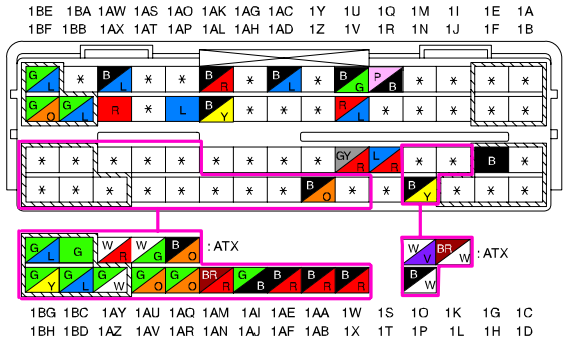


0140-130
ENGINE HARNESS-TRANSAXLE SHORT CORD


ENGINE HARNESS

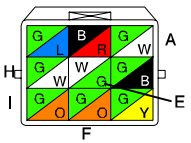


TRANSAXLE SHORT CORD

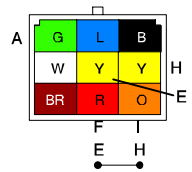



0140-131
SOLENOID VALVE

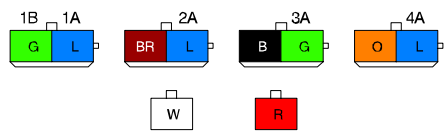


0119-103
TRANSAXLE RANGE SWITCH

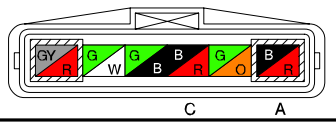

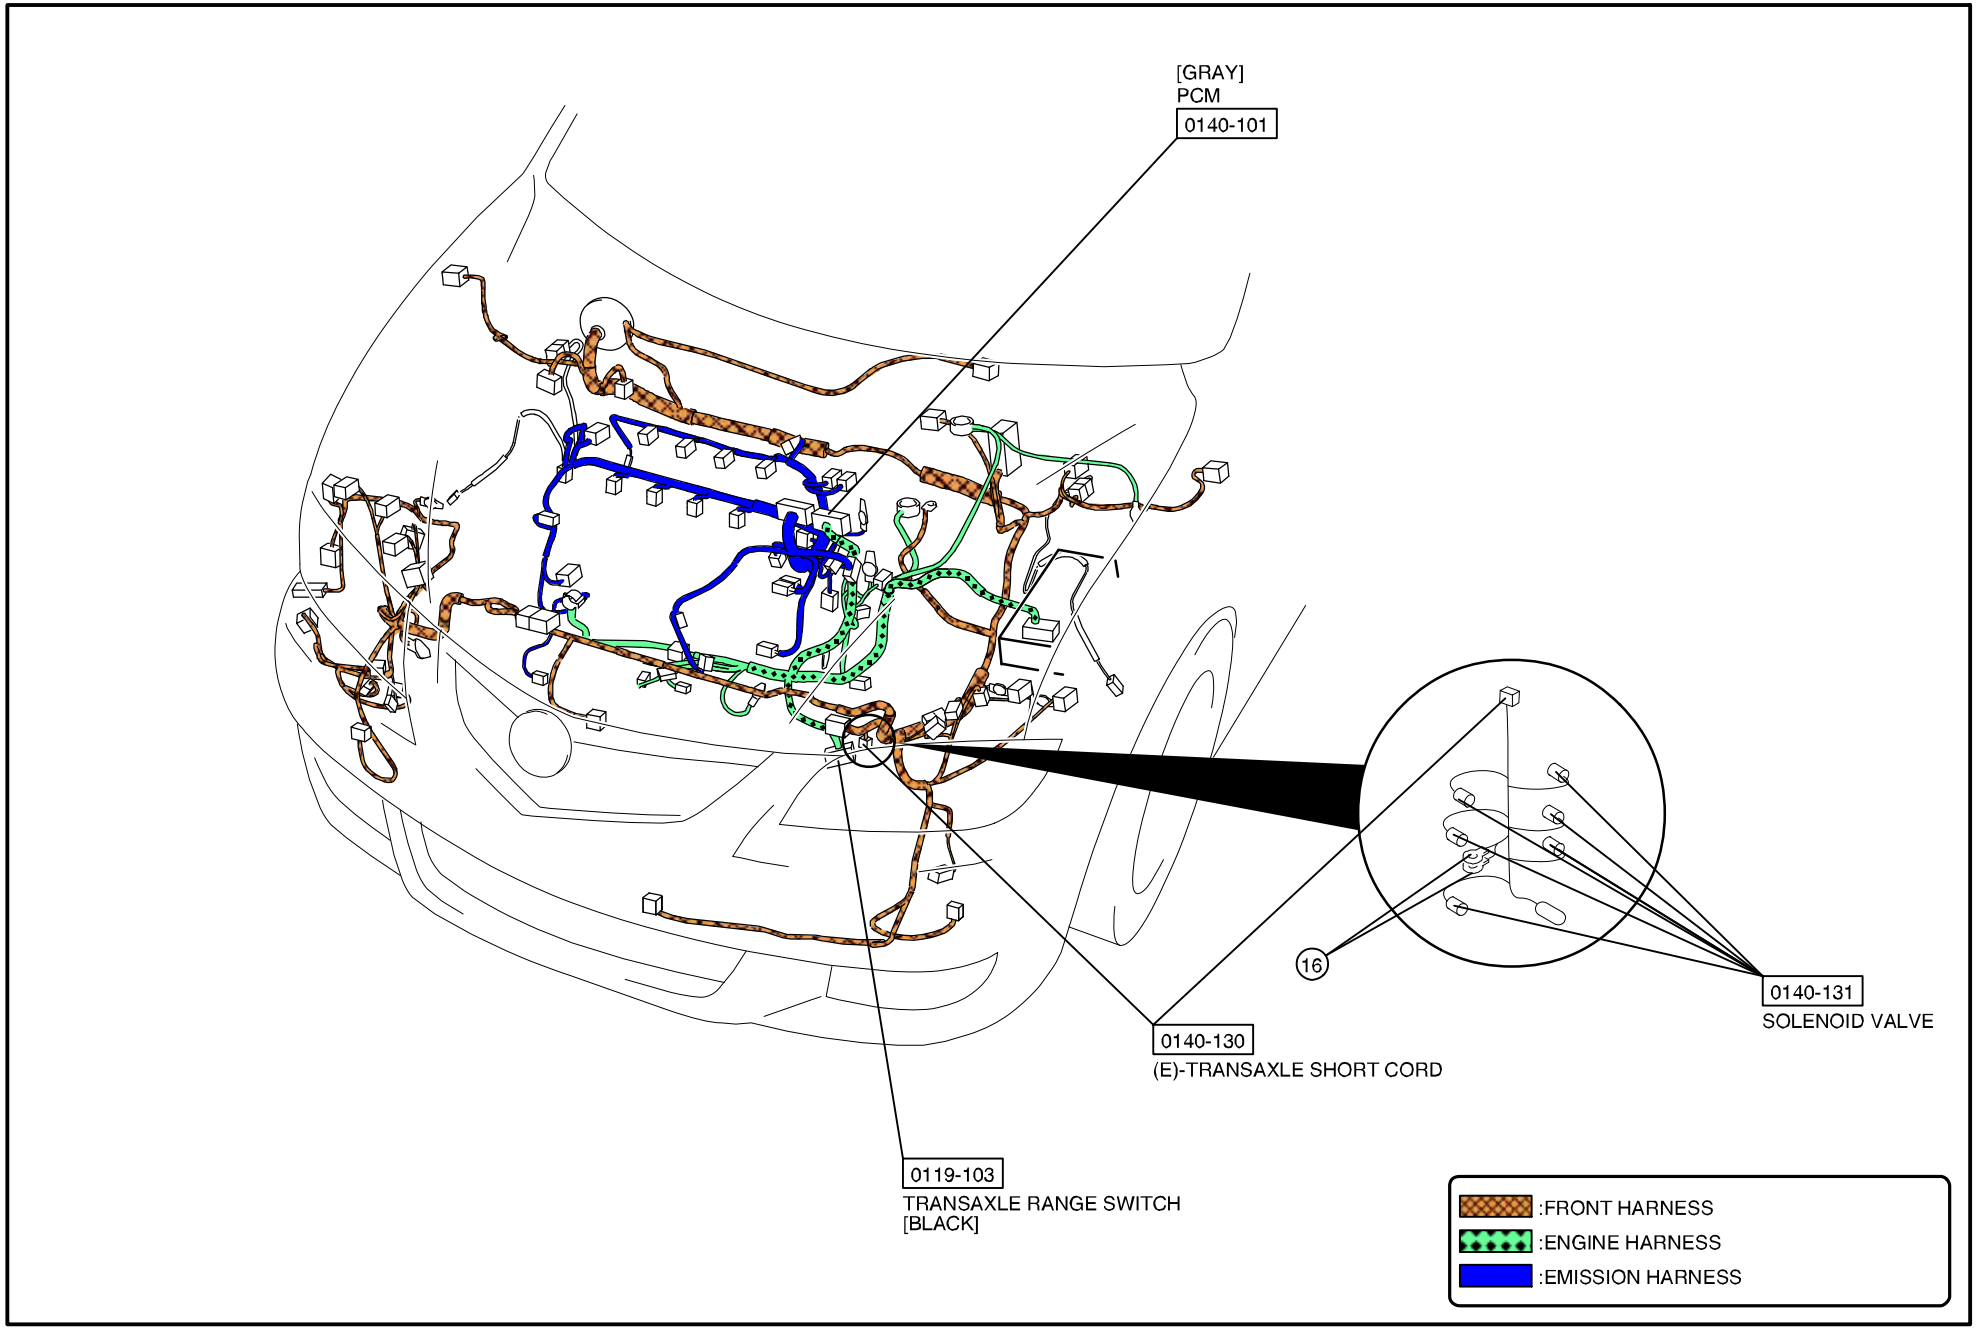

[GRAY]
PCM
0140-101
16
0140-131
SOLENOID VALVE
0140-130
(E)-TRANSAXLE SHORT CORD
0119-103
TRANSAXLE RANGE SWITCH
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS

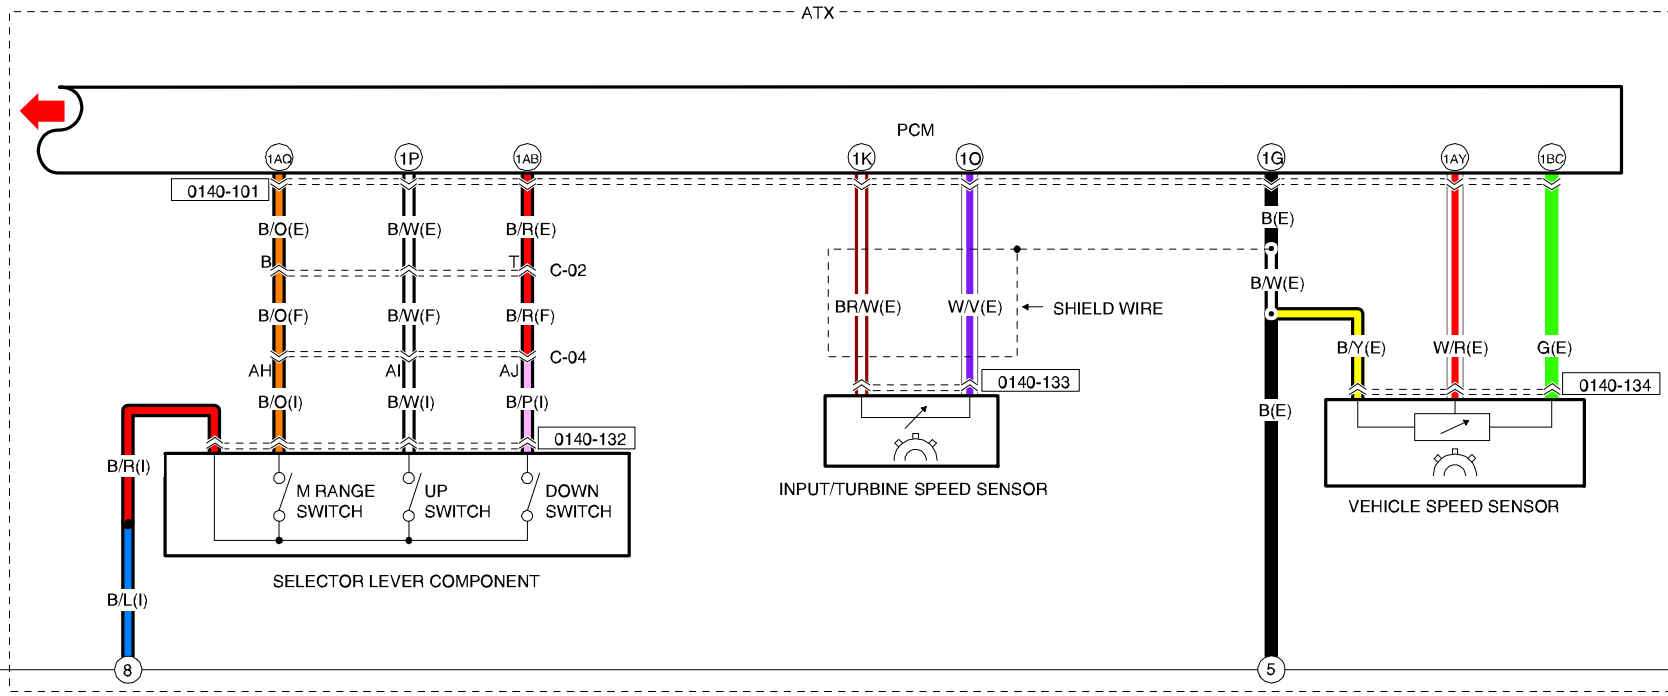


0140-101
PCM

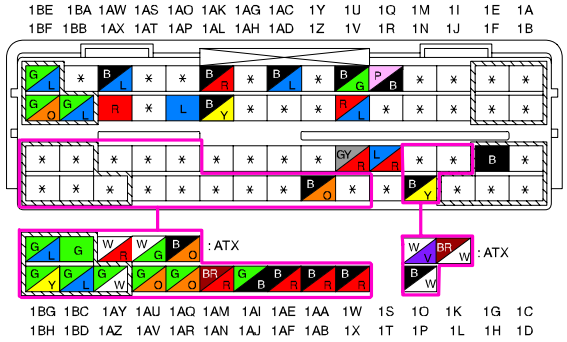

0140-132
SELECTOR LEVER COMPONENT

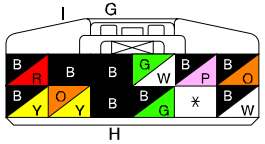


0140-133
INPUT/TURBINE SPEED SENSOR




0140-134
VEHICLE SPEED SENSOR

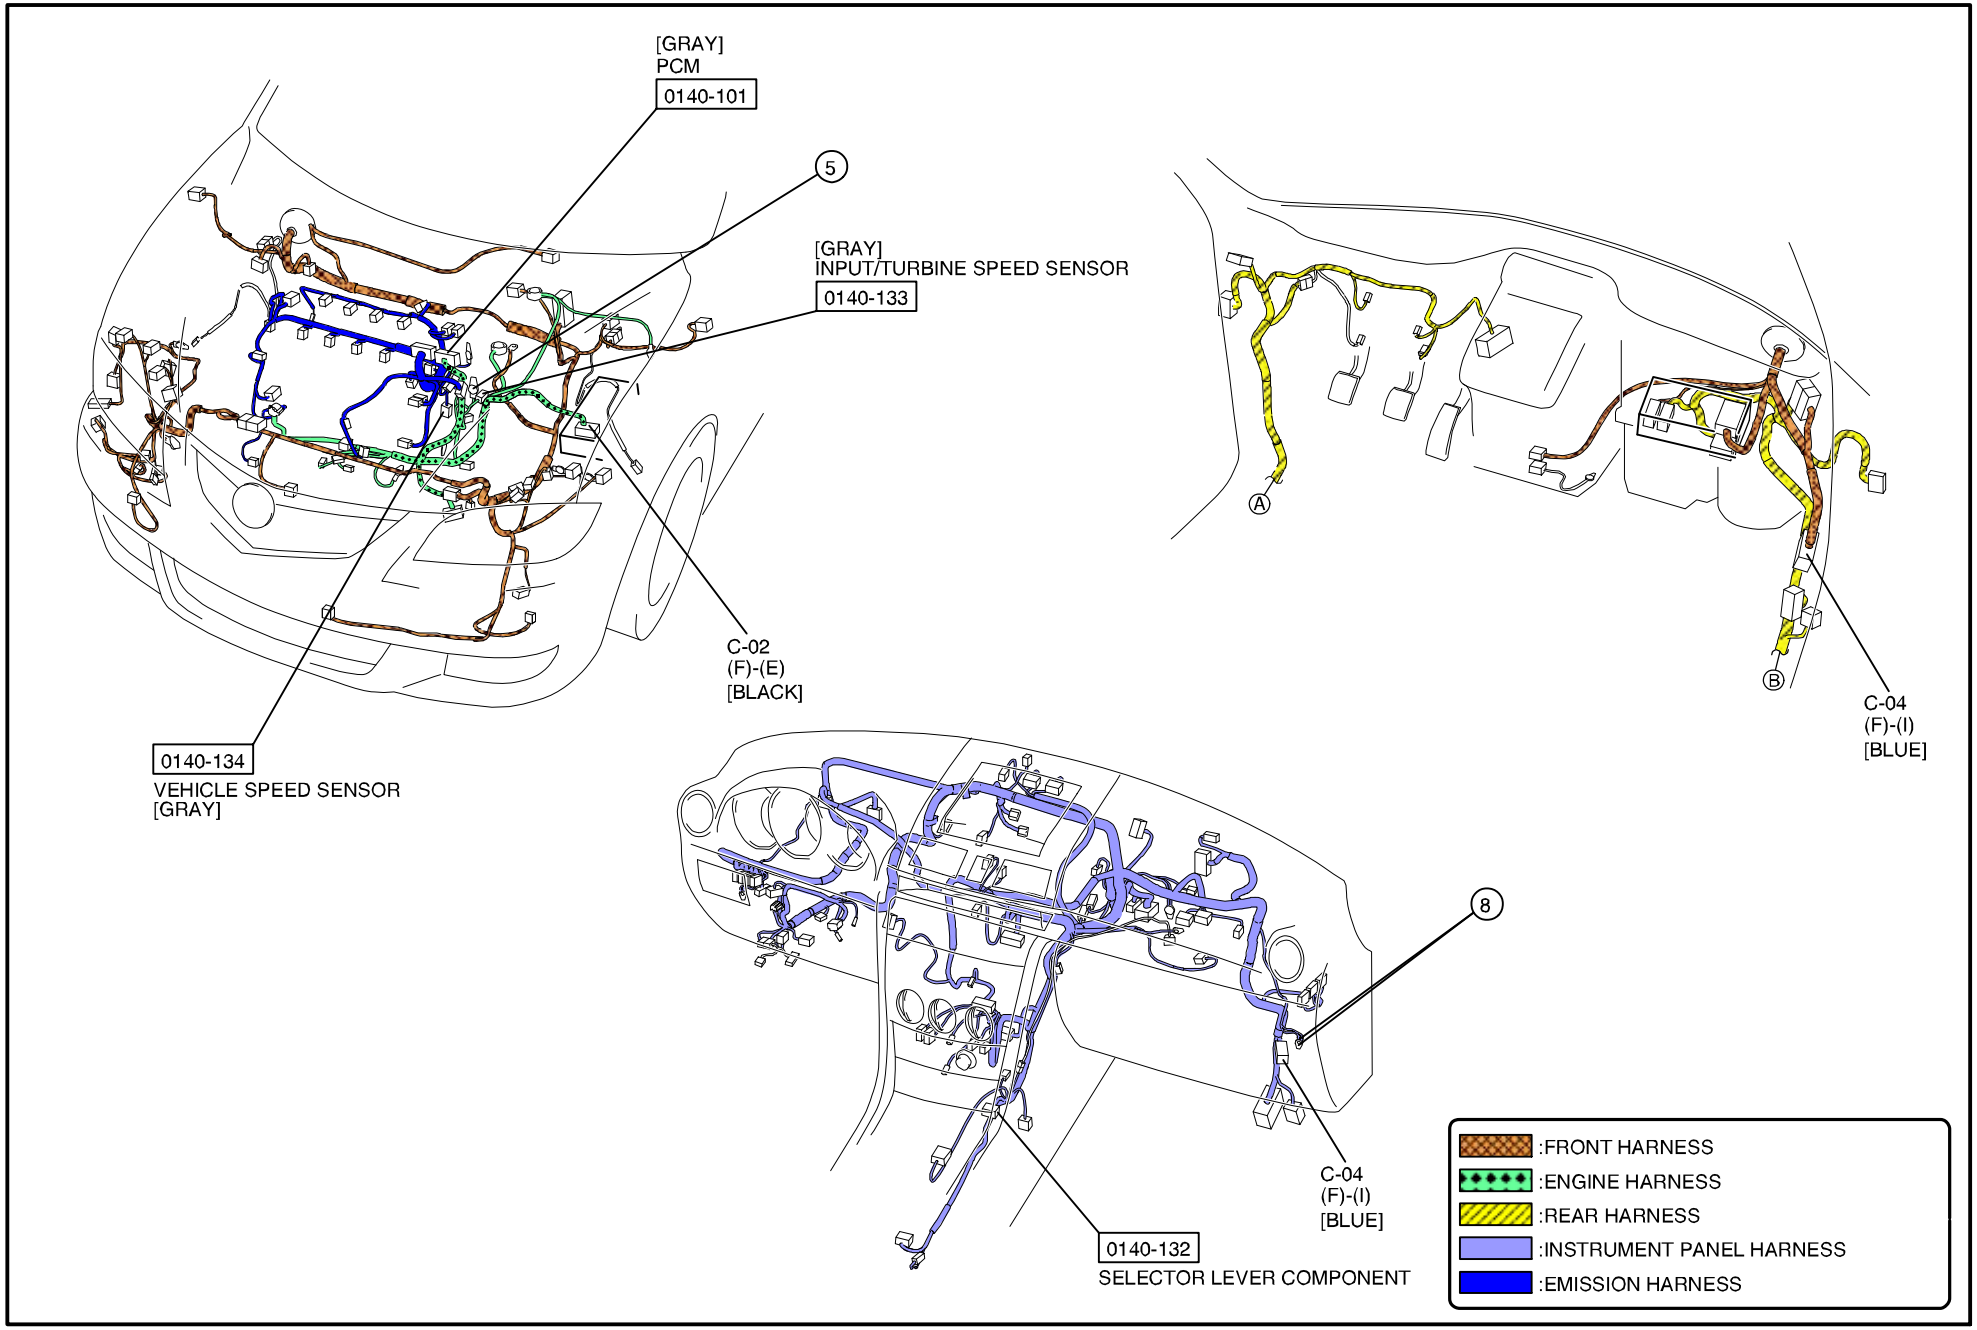



[GRAY]
PCM
0140-101
5
[GRAY]
INPUT/TURBINE SPEED SENSOR
0140-133
C-02
(F)-(E)
[BLACK]
0140-134
VEHICLE SPEED SENSOR
[GRAY]
A
B
C-04
(F)-(I)
[BLUE]
8
C-04
(F)-(I)
[BLUE]
0140-132
SELECTOR LEVER COMPONENT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

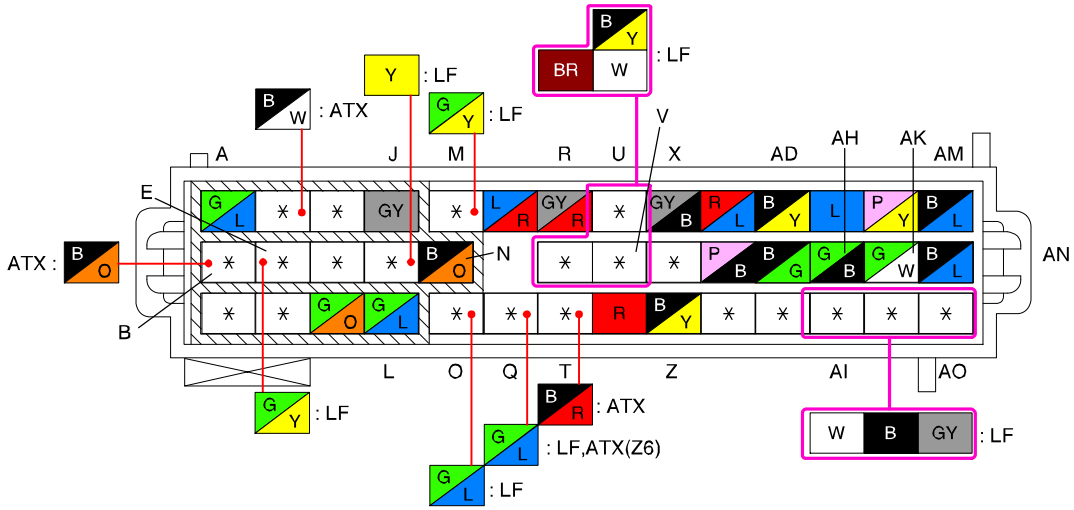


ENGINE HARNESS

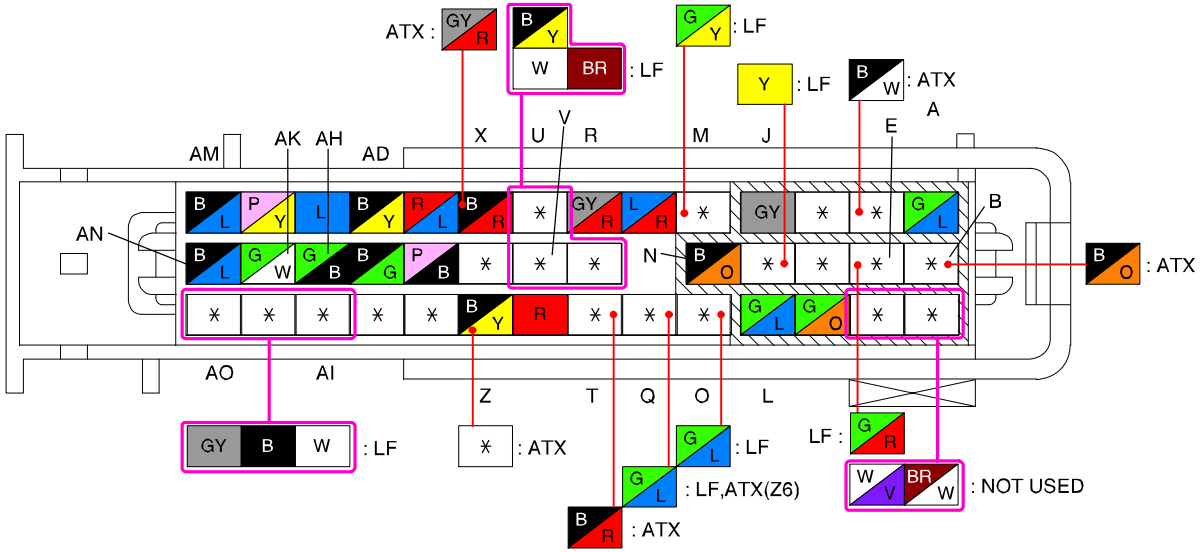


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

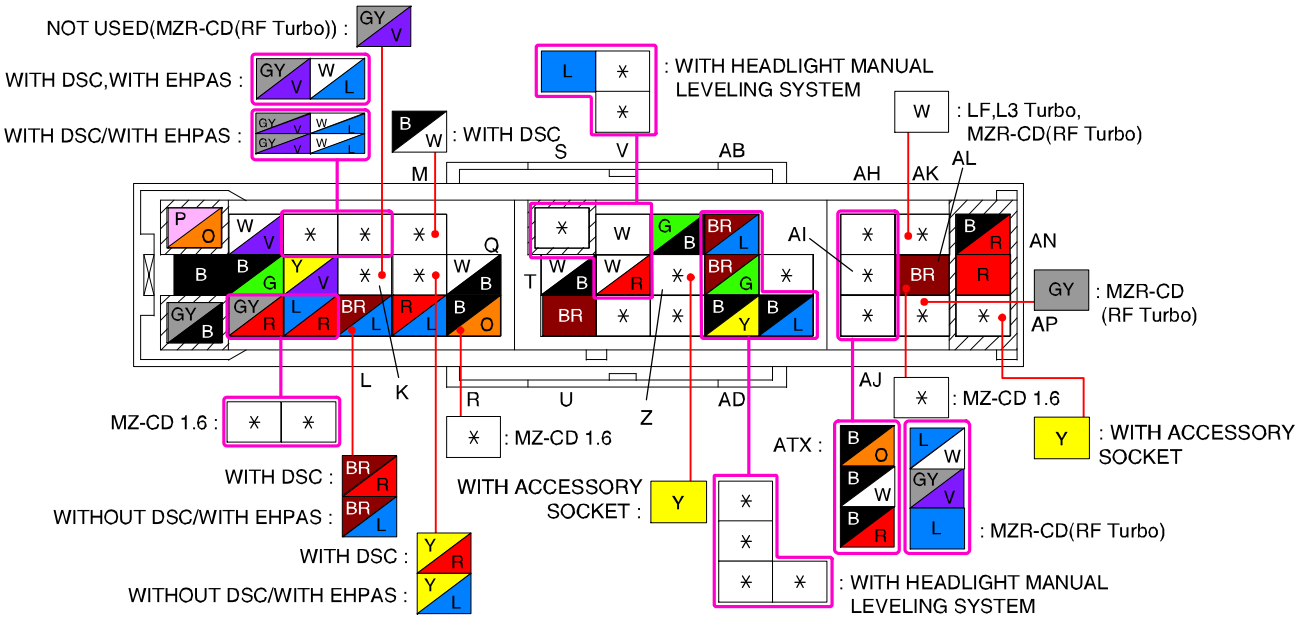


INSTRUMENT PANEL HARNESS

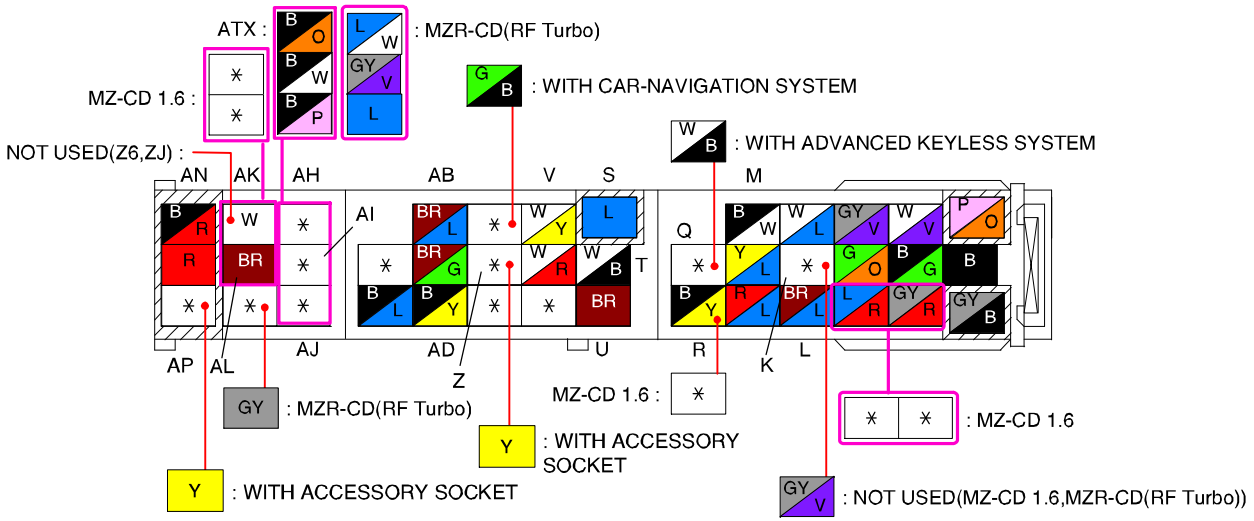


CONTROL SYSTEM (LF:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

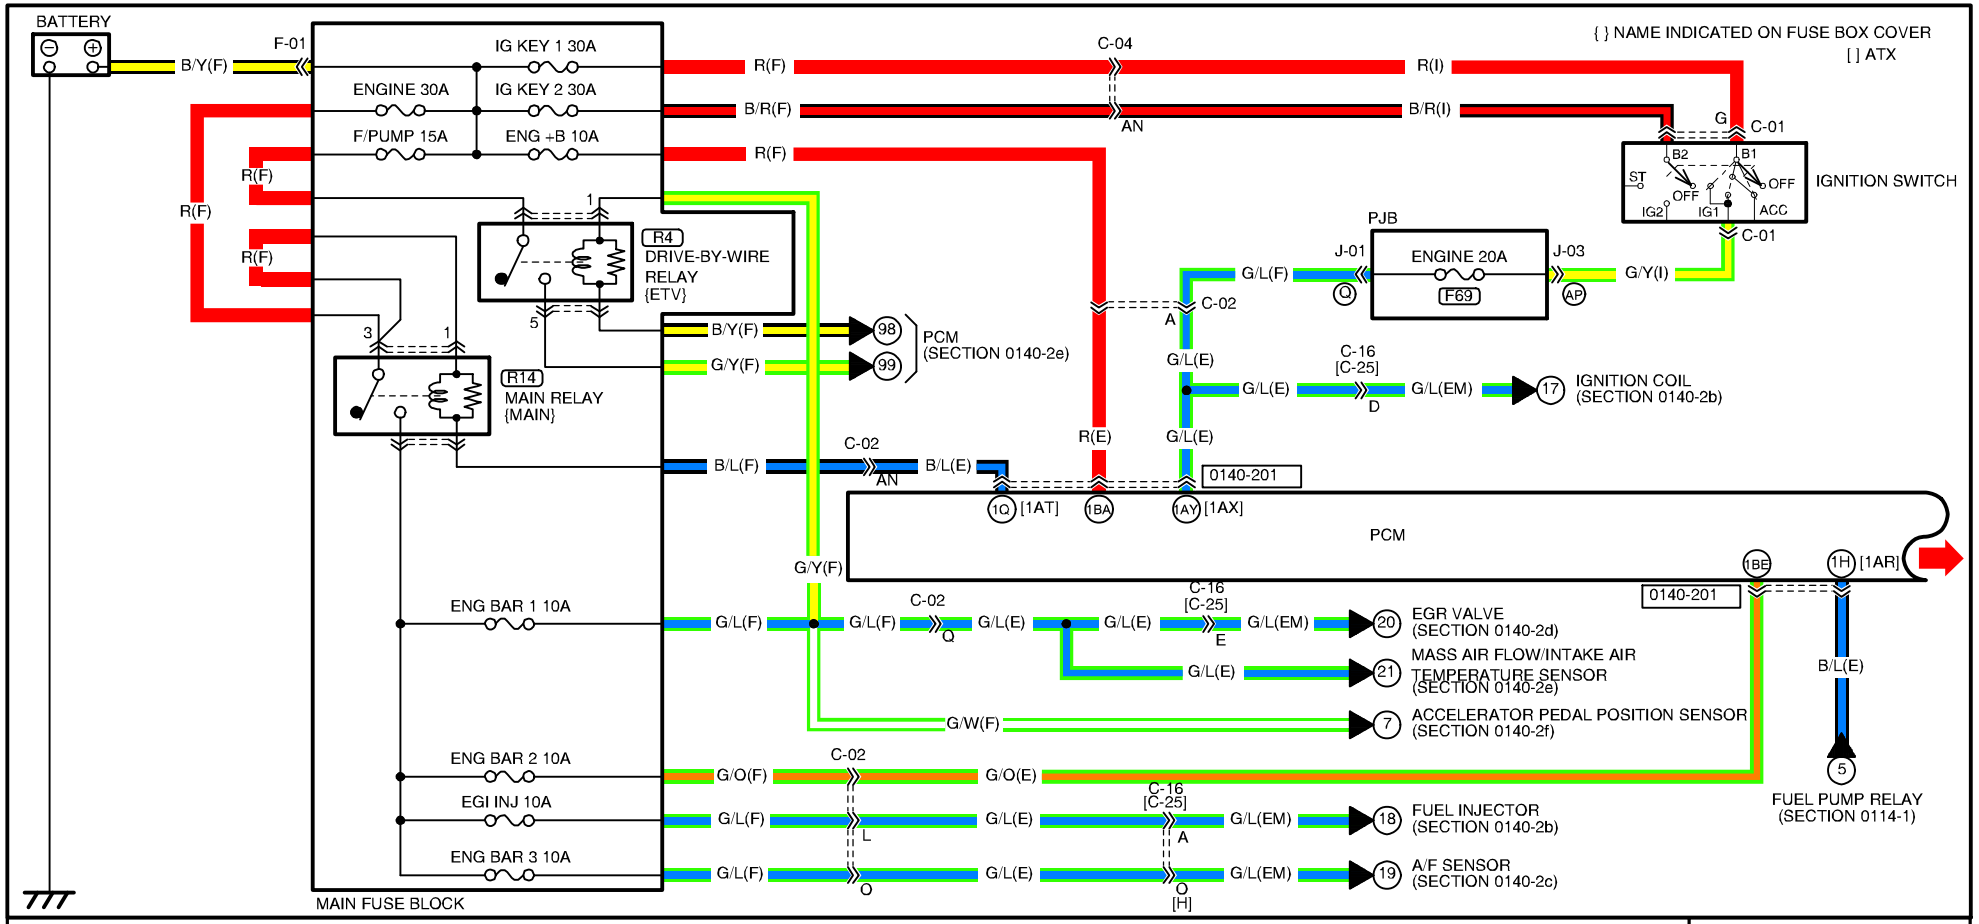


0140-201
PCM

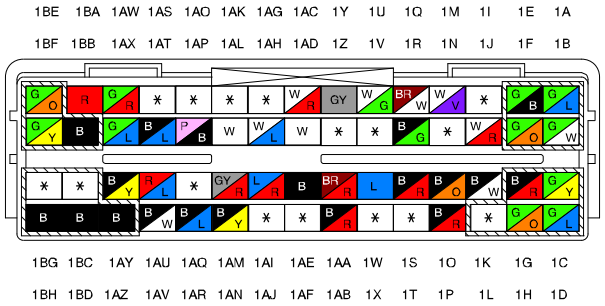

(ATX)

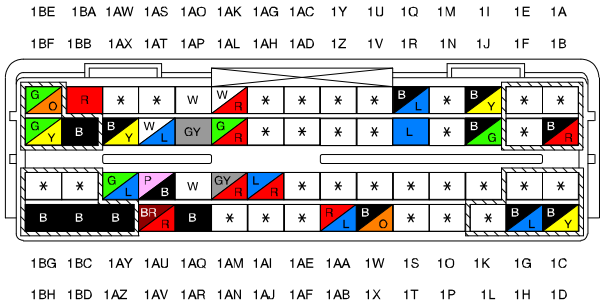


(MTX)

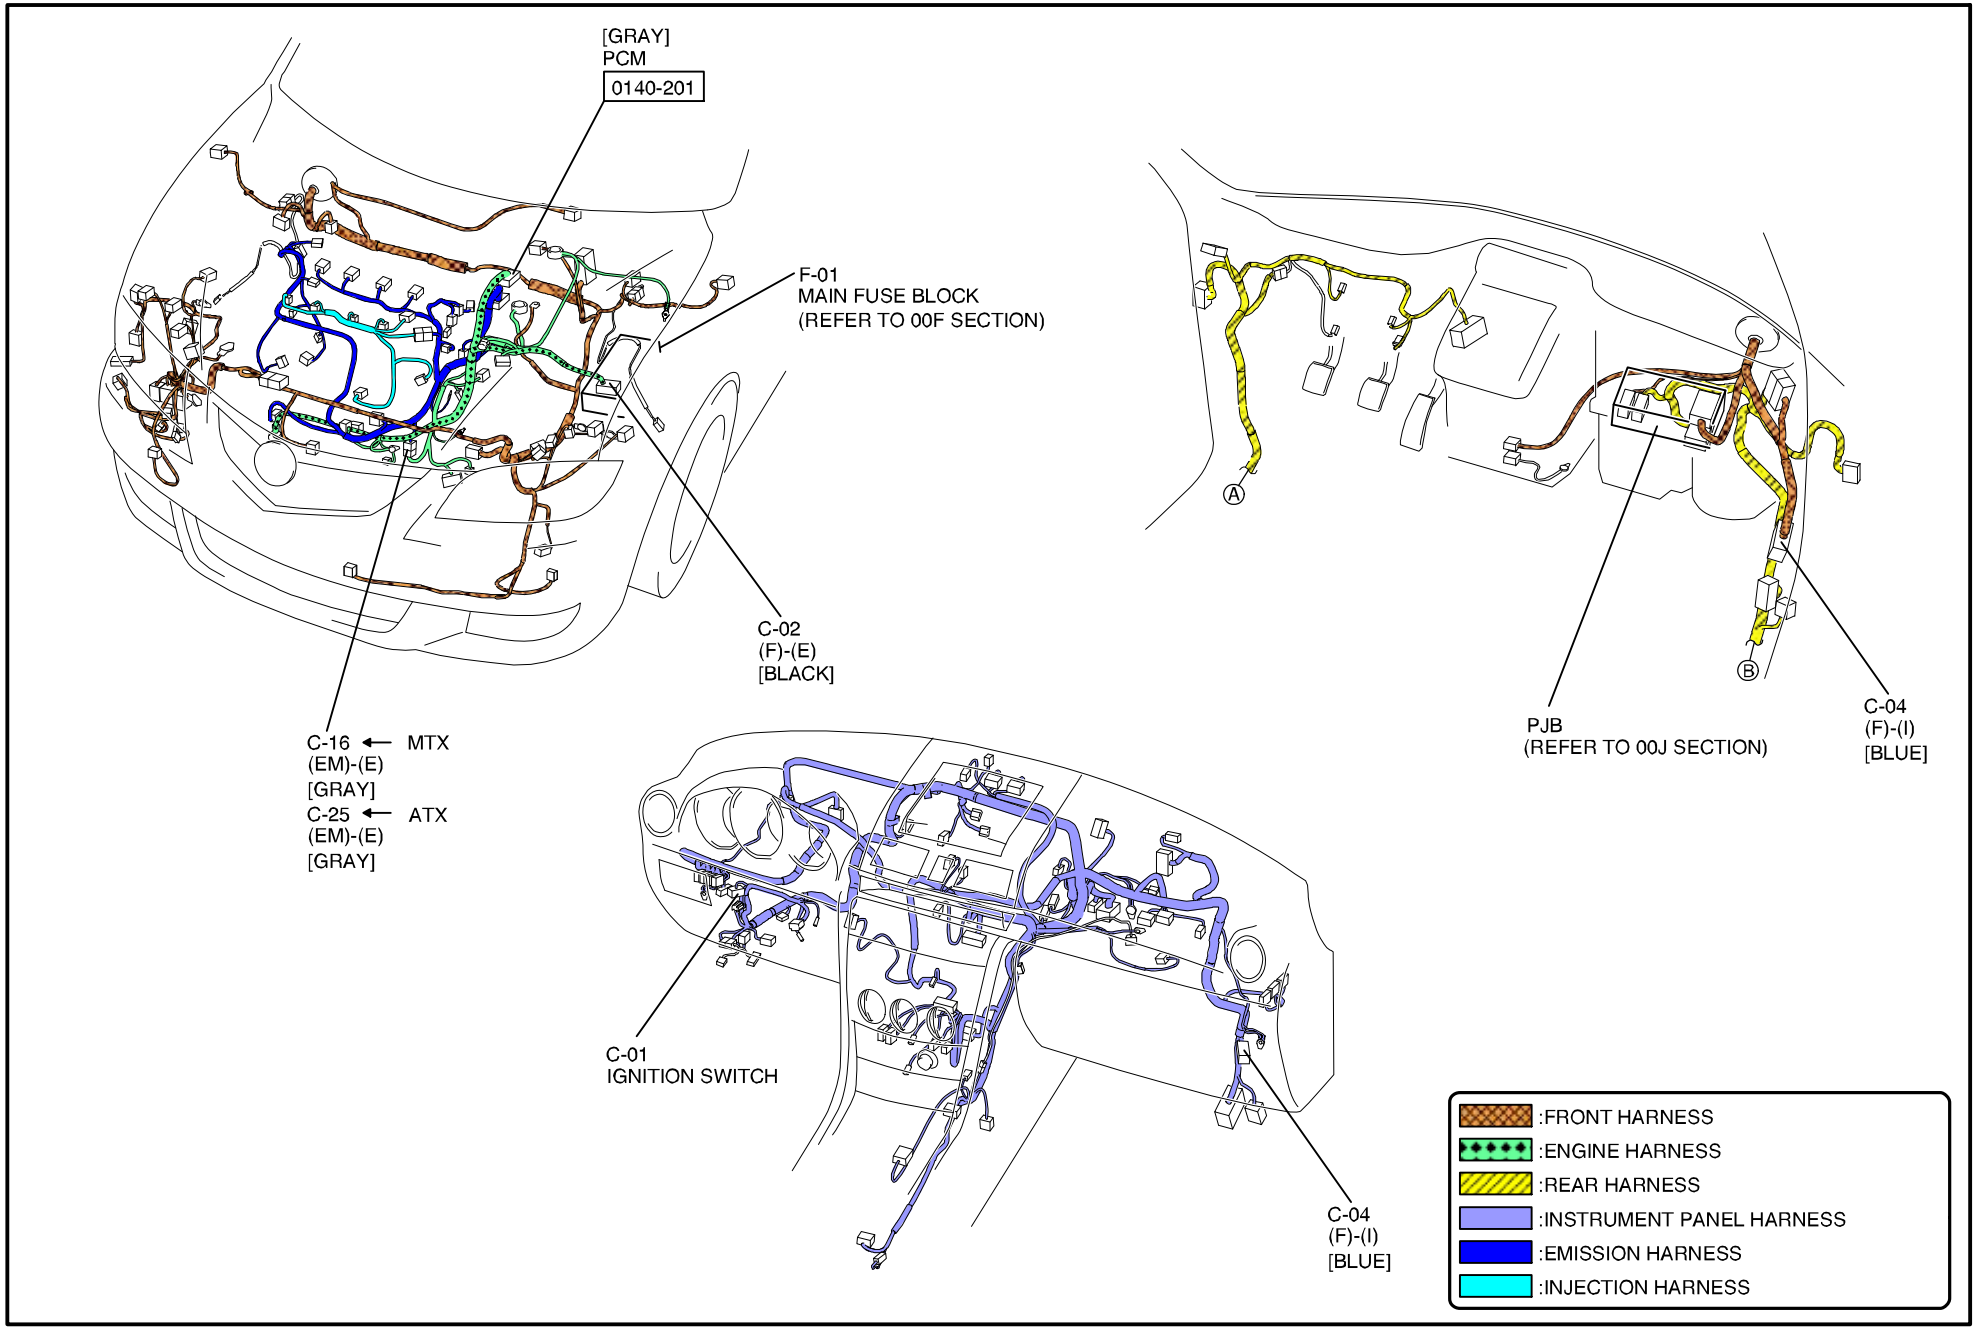

[GRAY]
PCM
0140-201
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-02
(F)-(E)
[BLACK]
C-16 ← MTX
(EM)-(E)
[GRAY]
C-25 ← ATX
(EM)-(E)
[GRAY]
Ⓐ
Ⓑ
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
C-01
IGNITION SWITCH
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS


FRONT HARNESS

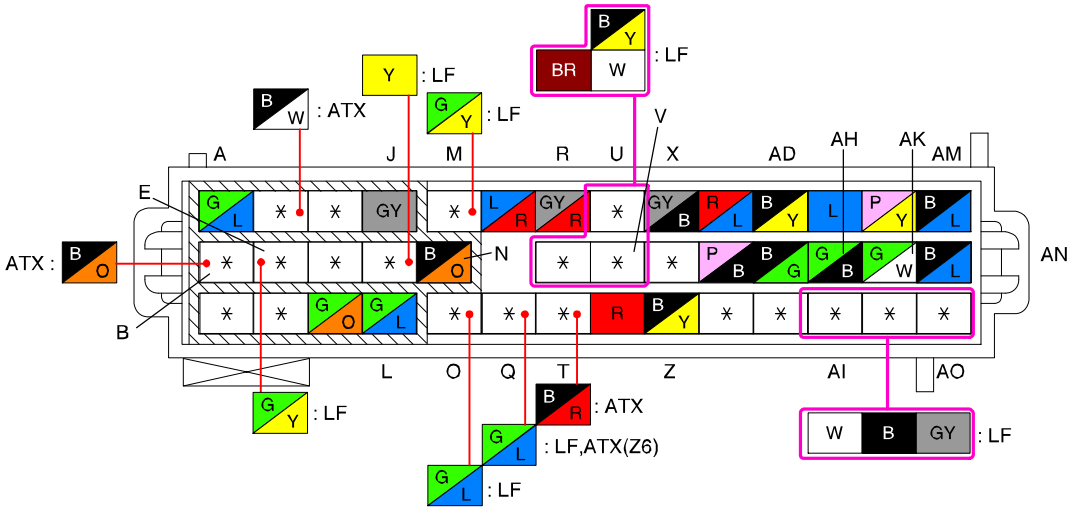

ENGINE HARNESS

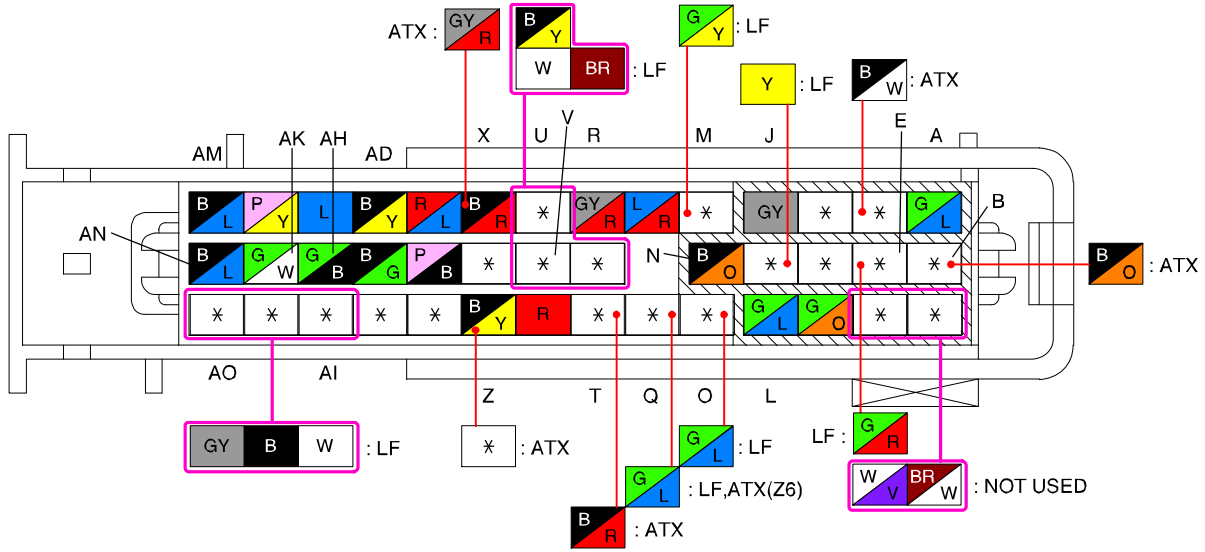


C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

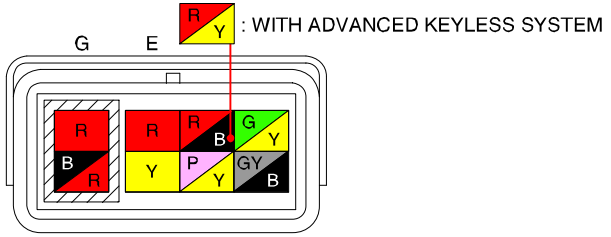


C-16
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

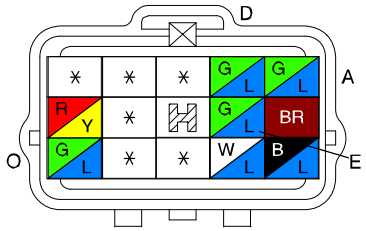


ENGINE HARNESS

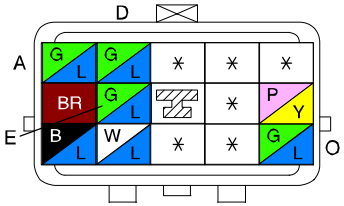


C-25
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

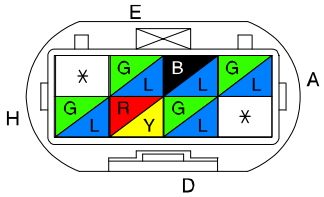


ENGINE HARNESS

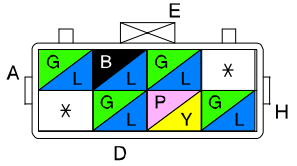


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

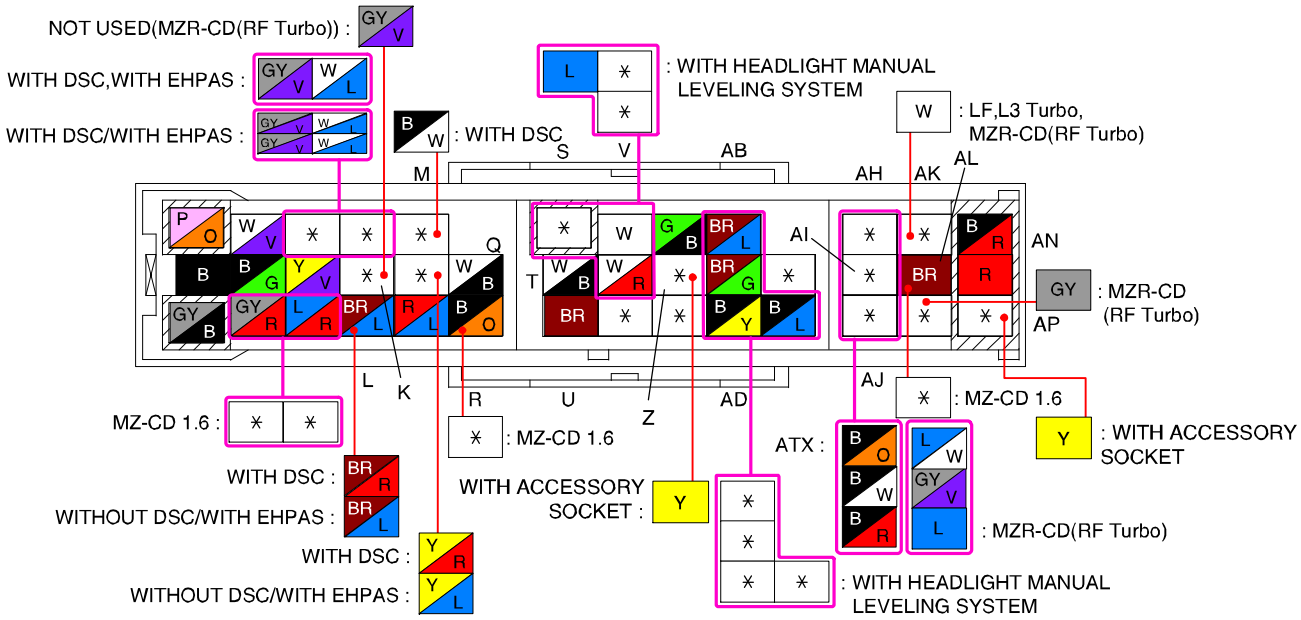



INSTRUMENT PANEL HARNESS

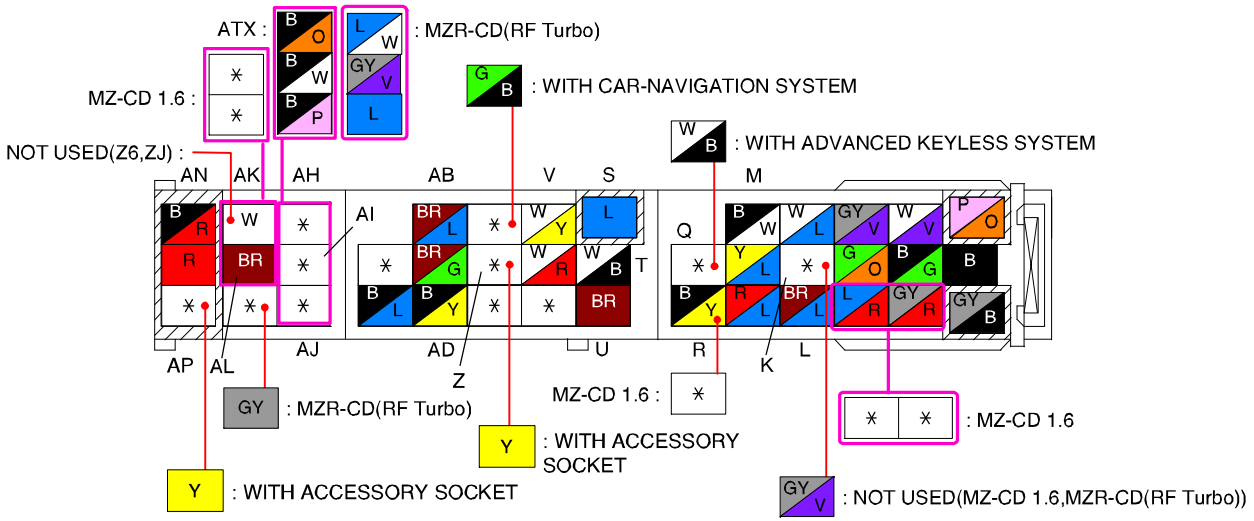

CONTROL SYSTEM (LF:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

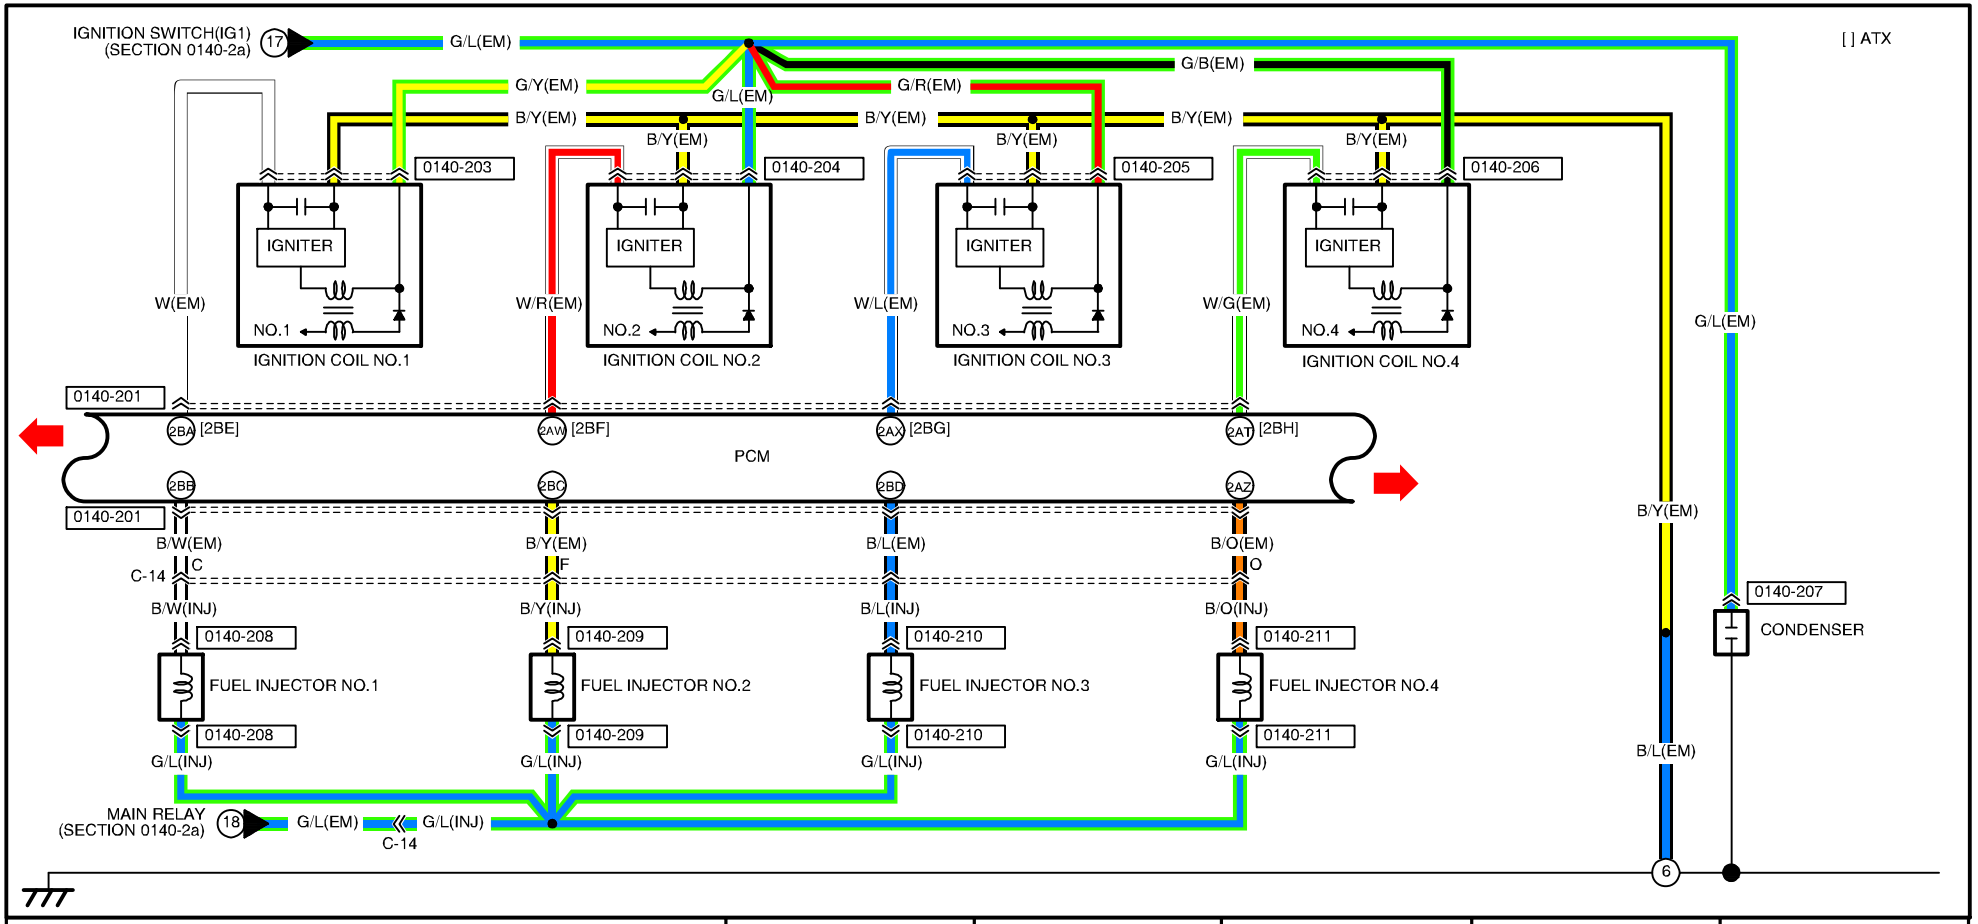


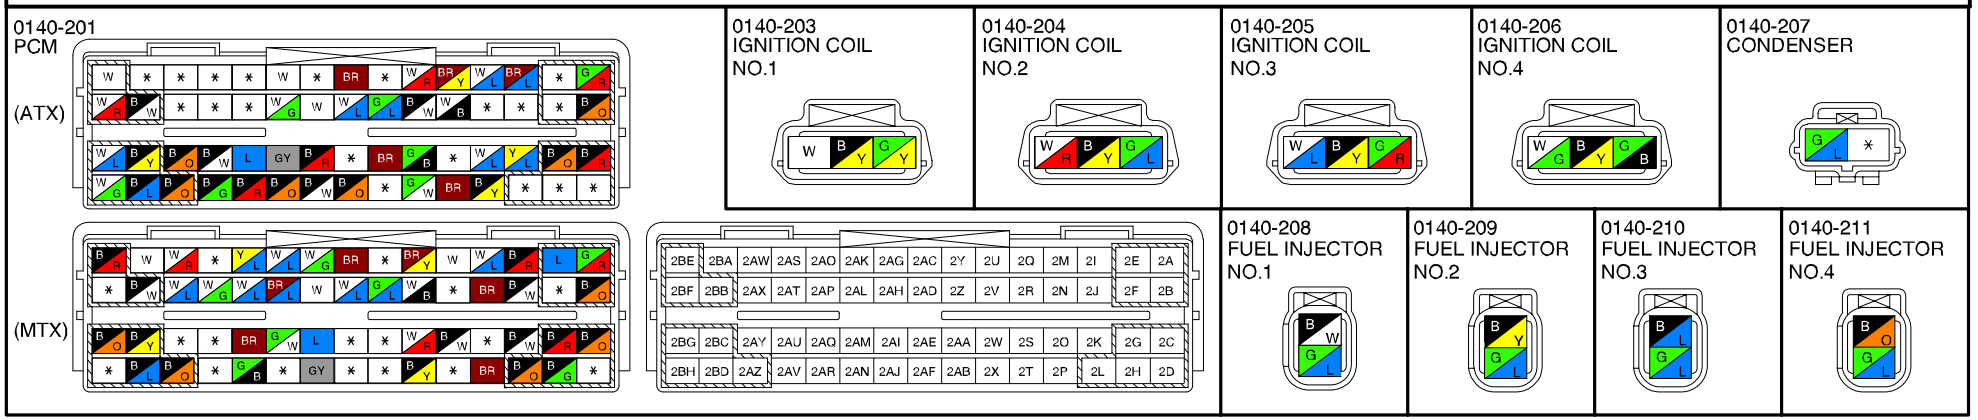

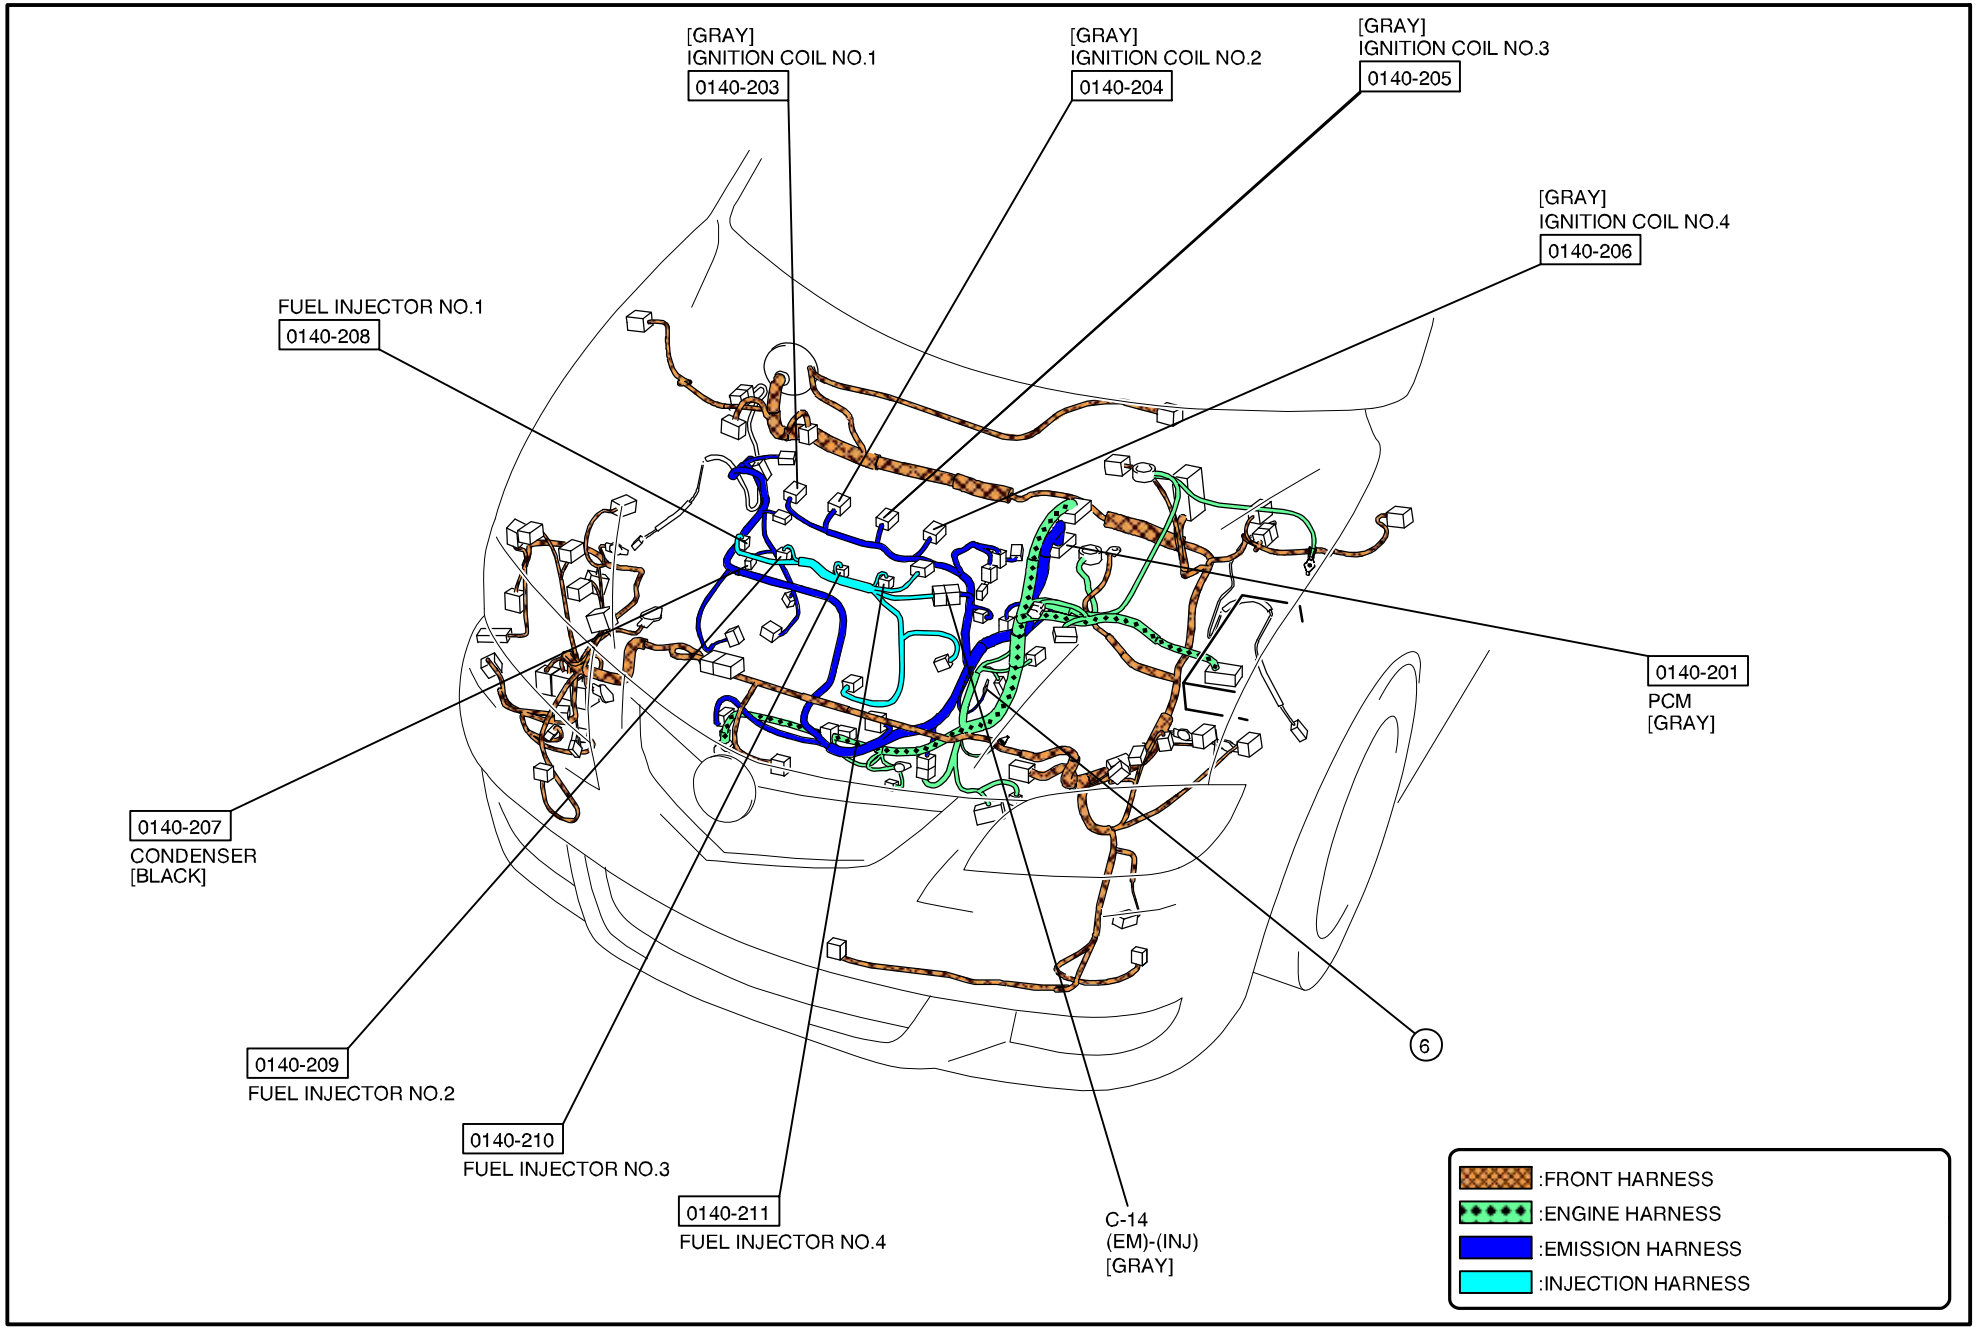

[GRAY]
IGNITION COIL NO.1
0140-203
[GRAY]
IGNITION COIL NO.2
0140-204
[GRAY]
IGNITION COIL NO.3
0140-205
[GRAY]
IGNITION COIL NO.4
0140-206
FUEL INJECTOR NO.1
0140-208
0140-201
PCM
[GRAY]
0140-207
CONDENSER
[BLACK]
0140-209
FUEL INJECTOR NO.2
0140-210
FUEL INJECTOR NO.3
0140-211
FUEL INJECTOR NO.4
6
C-14
(EM)-(INJ)
[GRAY]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-14
EMISSION HARNESS-INJECTION HARNESS

EMISSION HARNESS

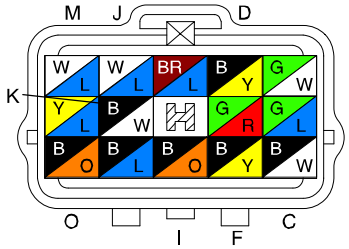


INJECTION HARNESS

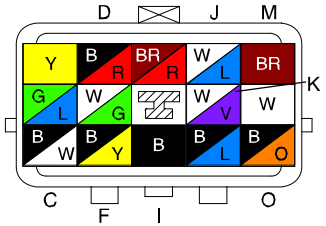


CONTROL SYSTEM (LF:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

[ ] ATX

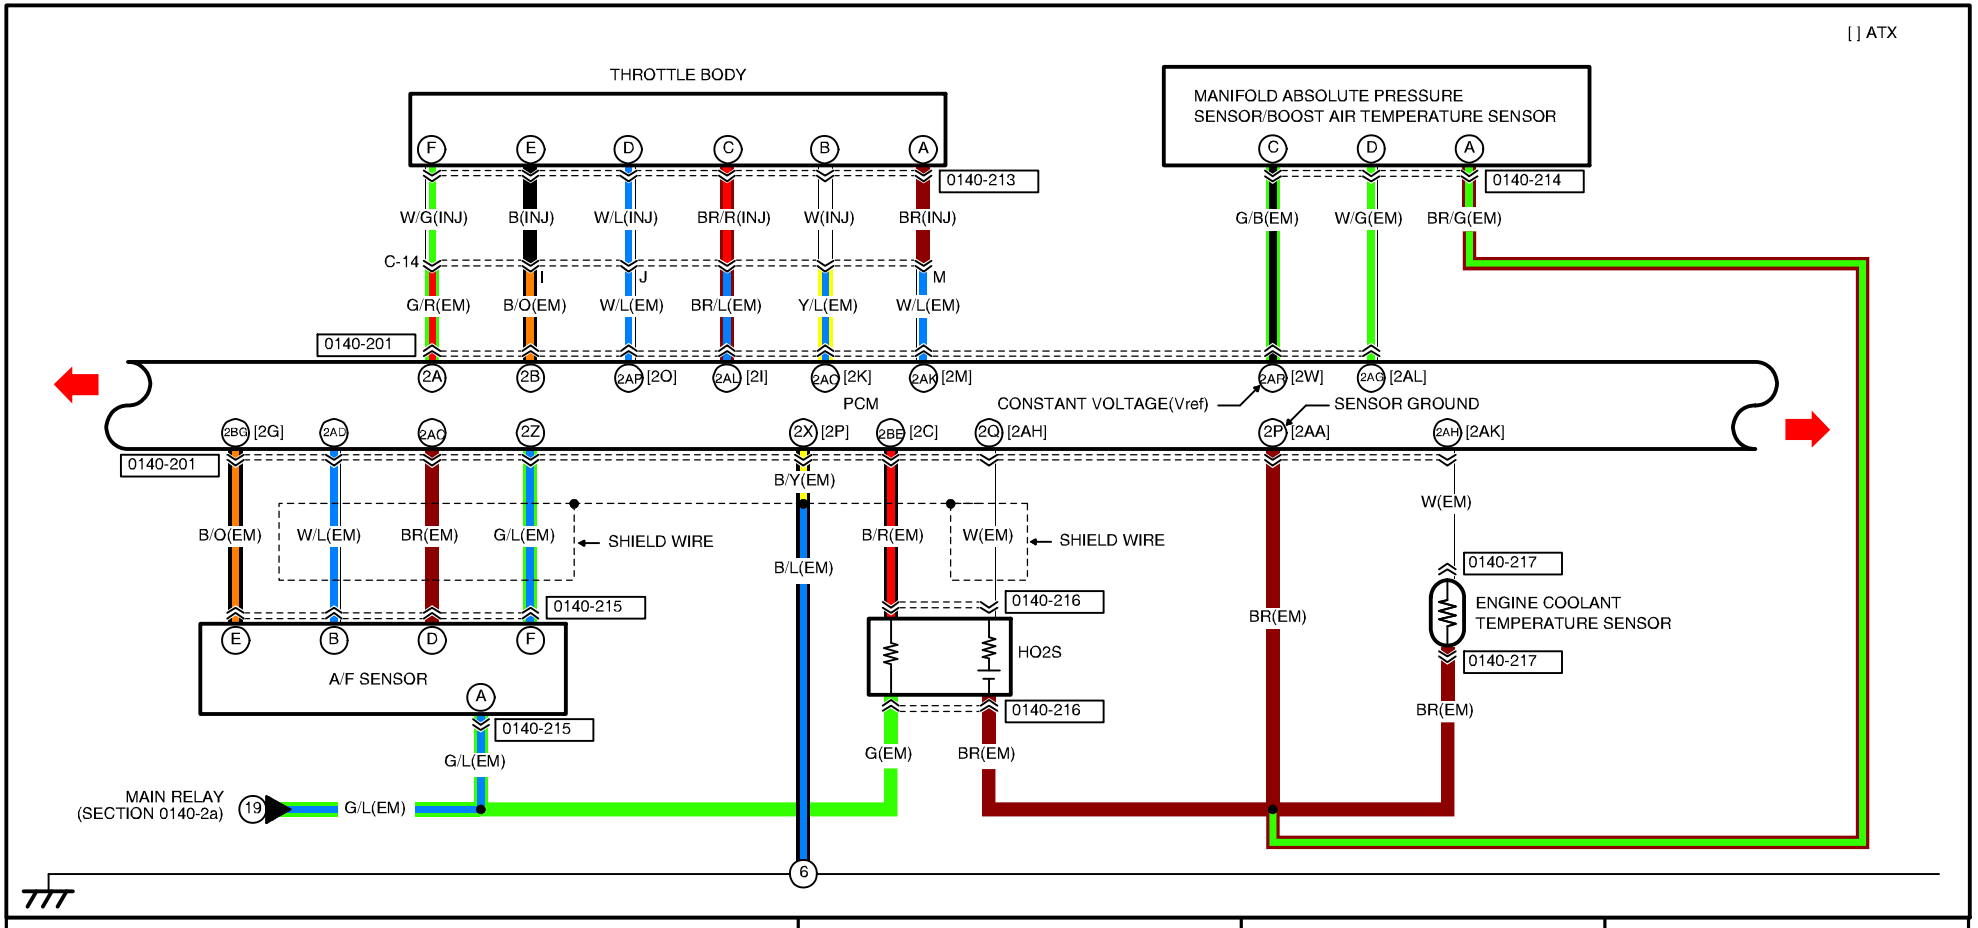



0140-201
PCM

(ATX)

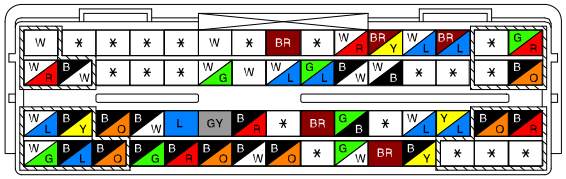


(MTX)

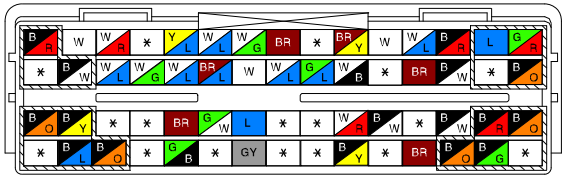


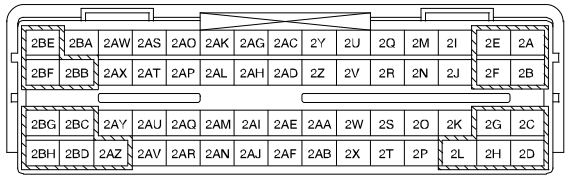


0140-215
A/F SENSOR

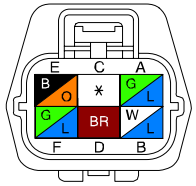


0140-213
THROTTLE BODY




0140-214
MANIFOLD ABSOLUTE PRESSURE SENSOR/BOOST AIR TEMPERATURE SENSOR




0140-216
HO2S




0140-217
ENGINE COOLANT TEMPERATURE SENSOR



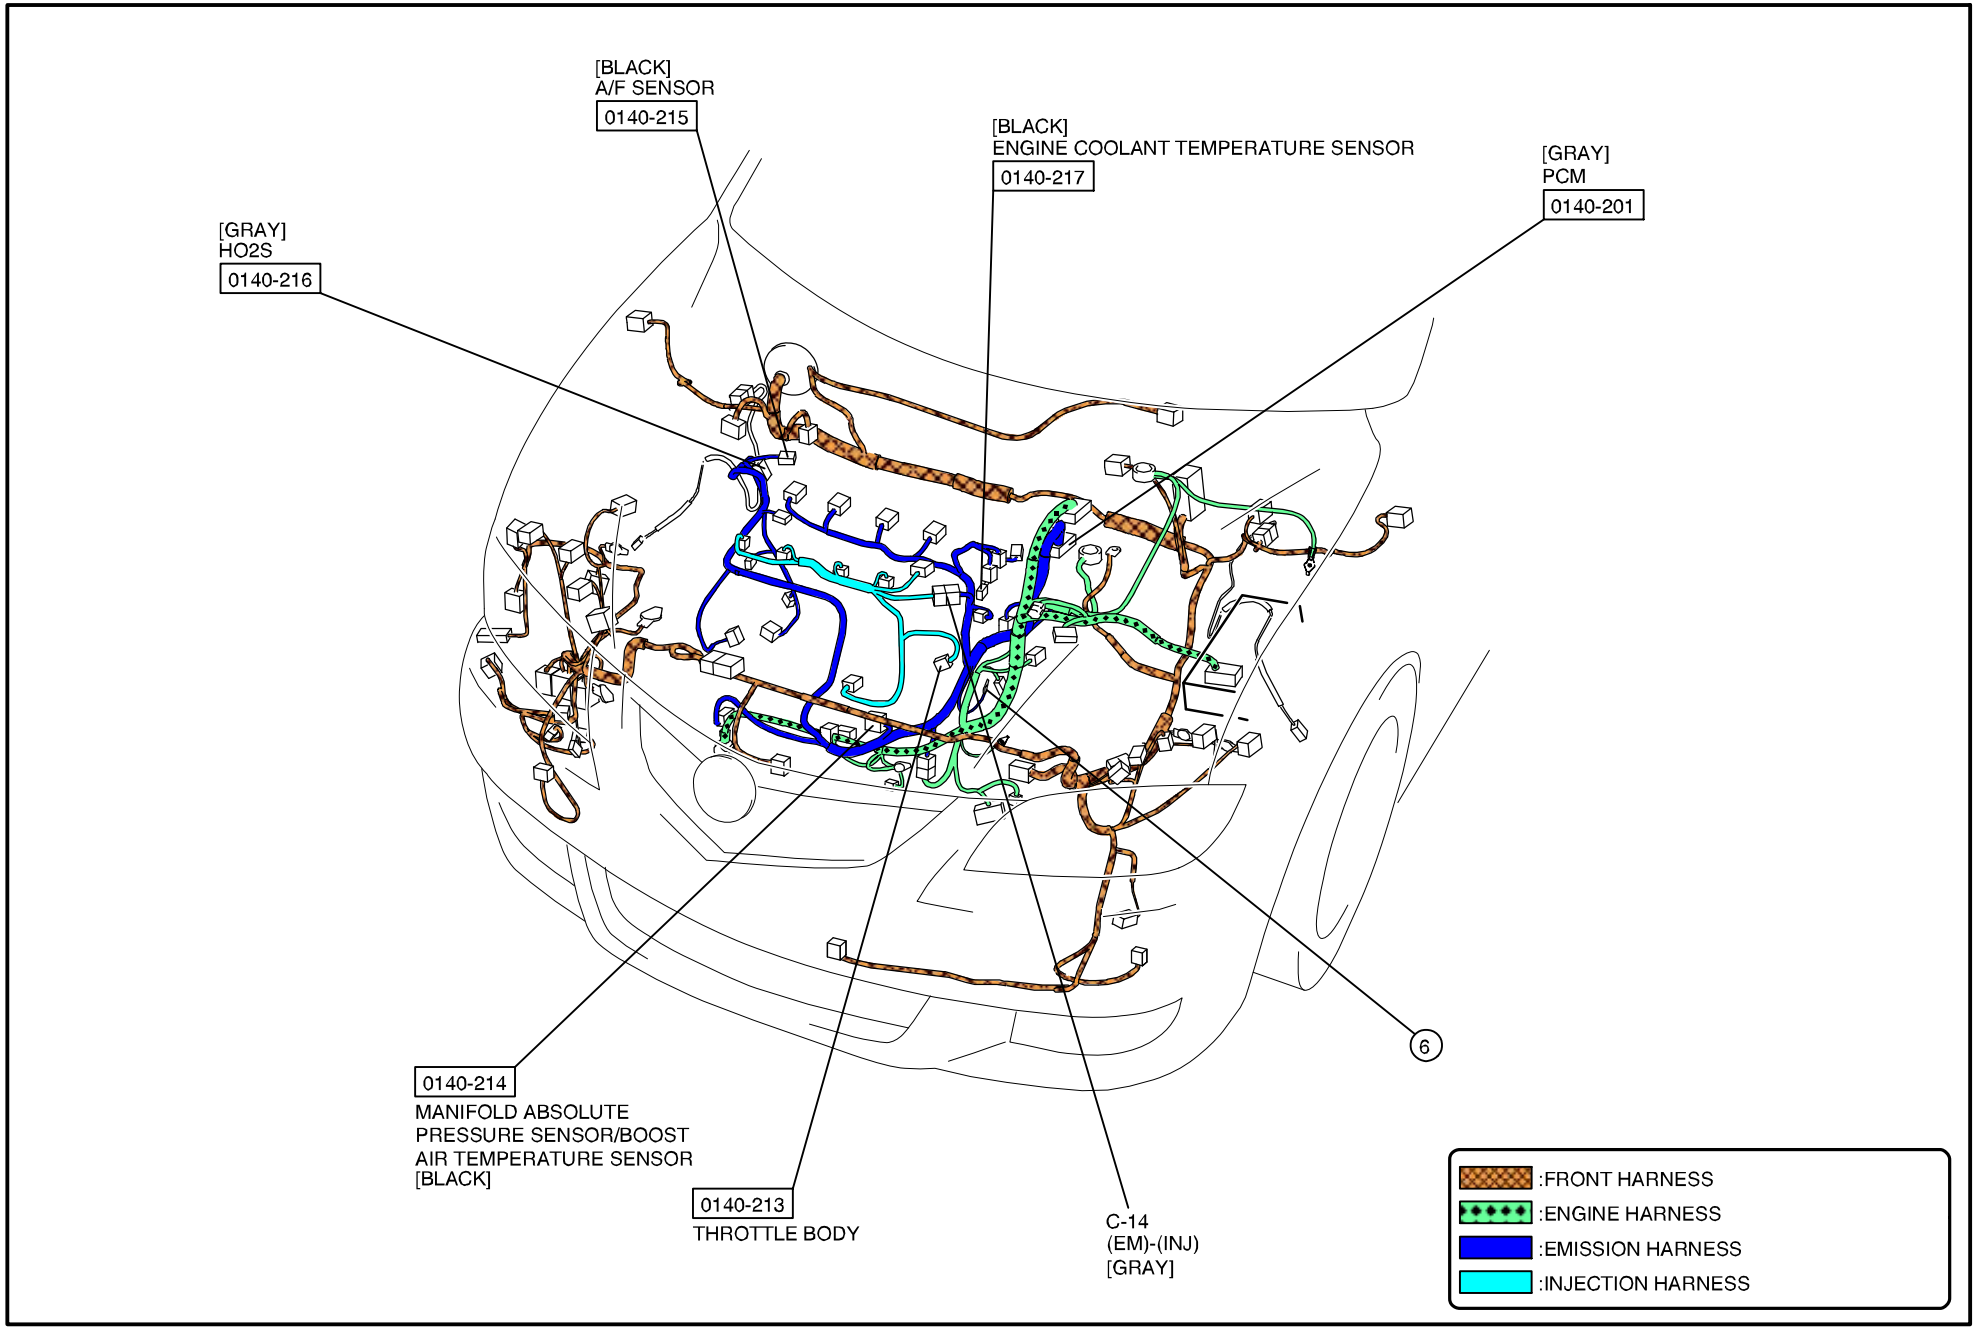

[BLACK]
A/F SENSOR
0140-215
[BLACK]
ENGINE COOLANT TEMPERATURE SENSOR
0140-217
[GRAY]
PCM
0140-201
[GRAY]
HO2S
0140-216
6
0140-214
MANIFOLD ABSOLUTE
PRESSURE SENSOR/BOOST
AIR TEMPERATURE SENSOR
[BLACK]
0140-213
THROTTLE BODY
C-14
(EM)-(INJ)
[GRAY]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-14
EMISSION HARNESS-INJECTION HARNESS


EMISSION HARNESS

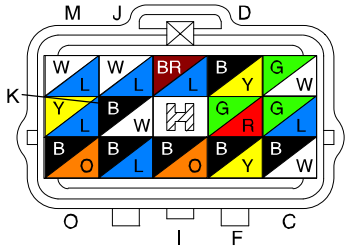



INJECTION HARNESS

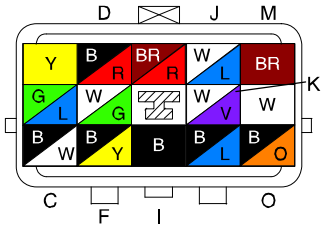

CONTROL SYSTEM (LF:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

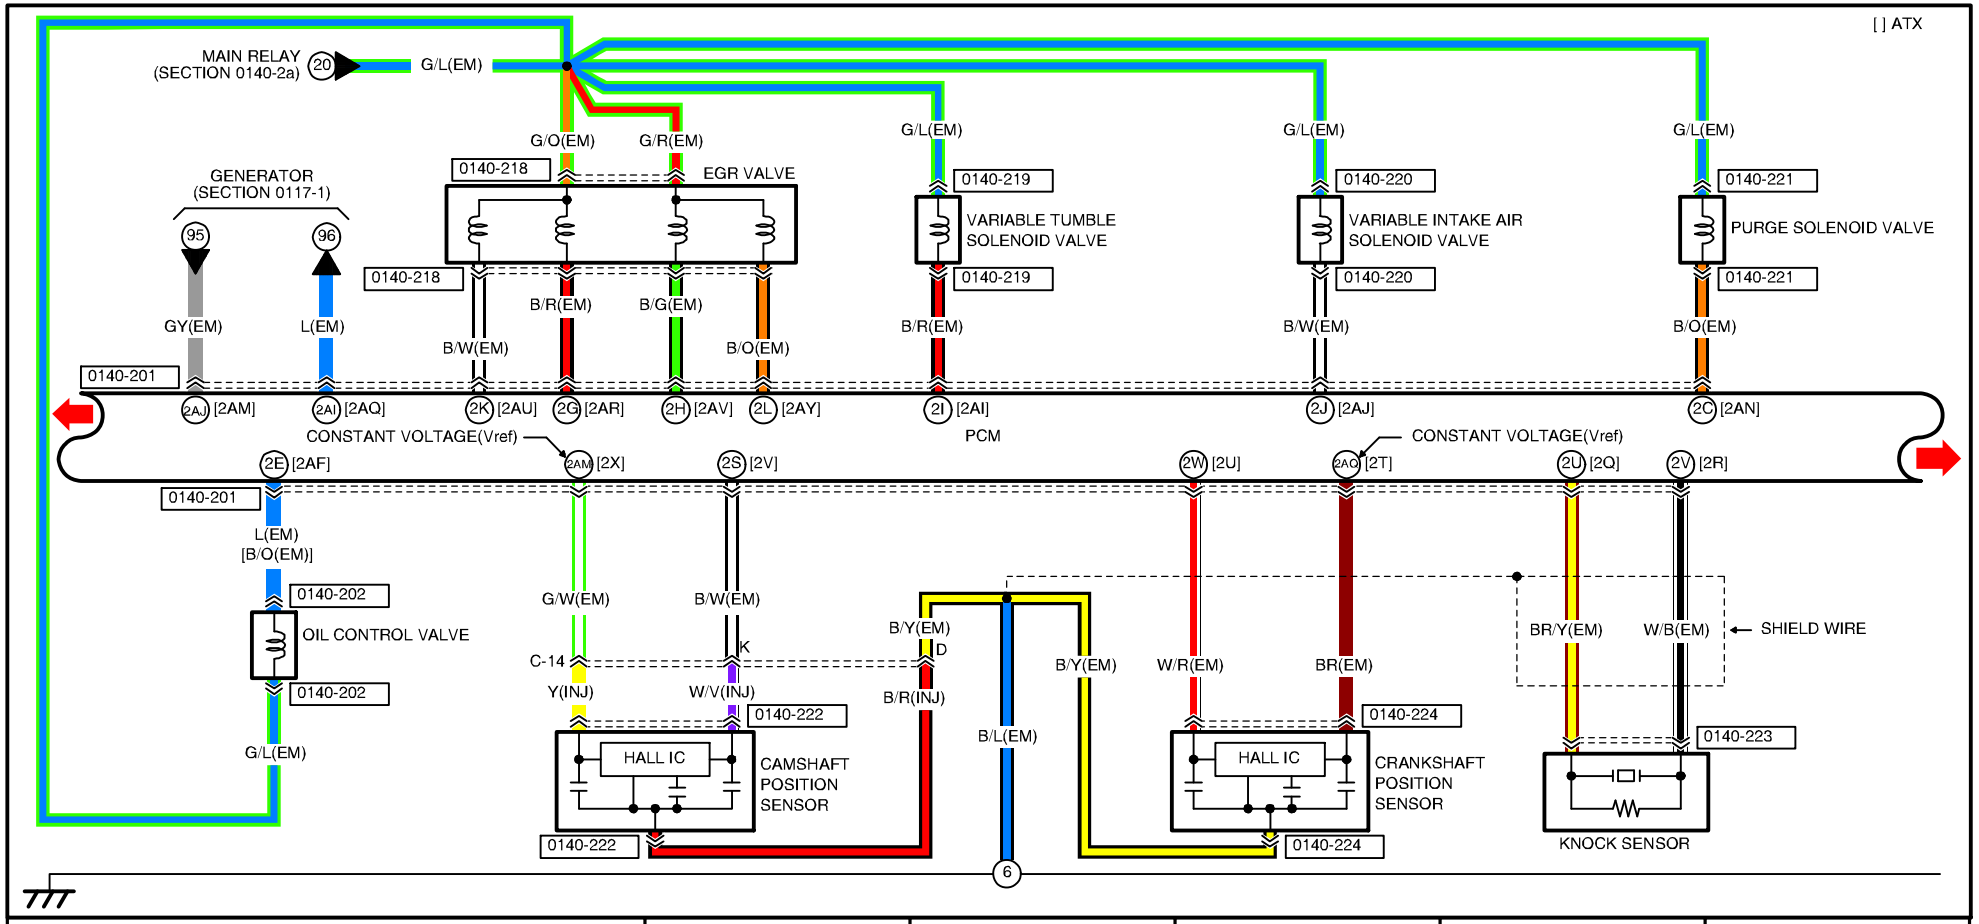


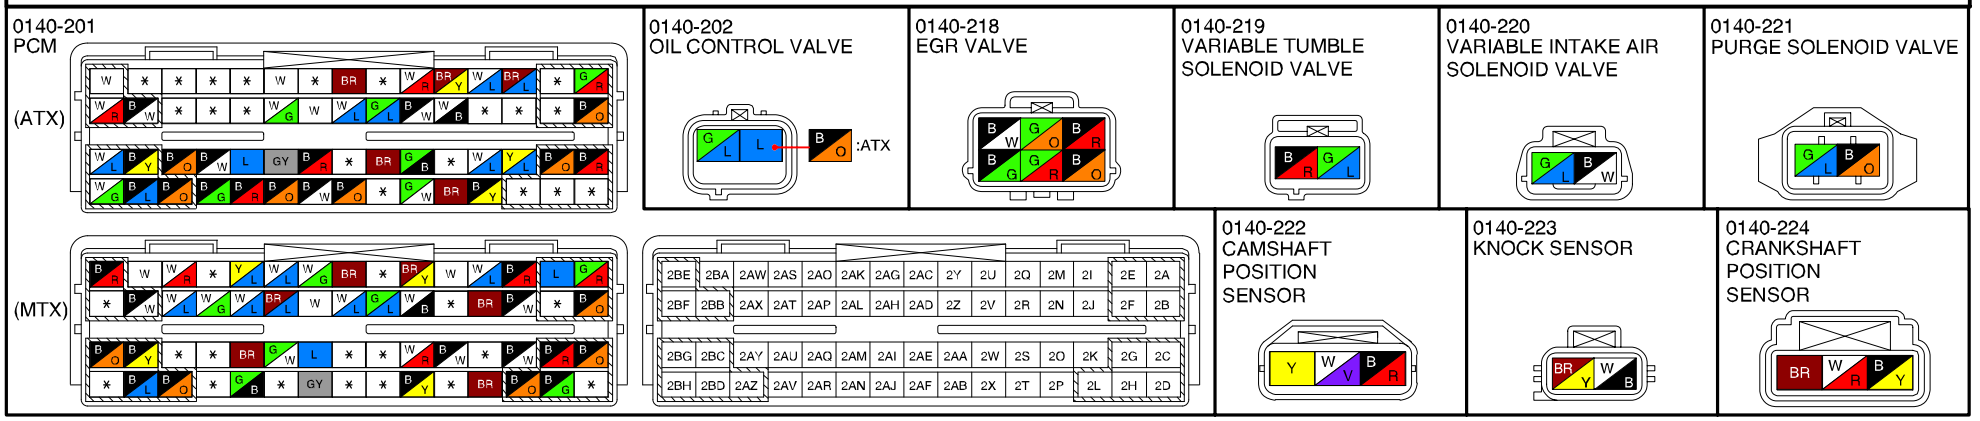

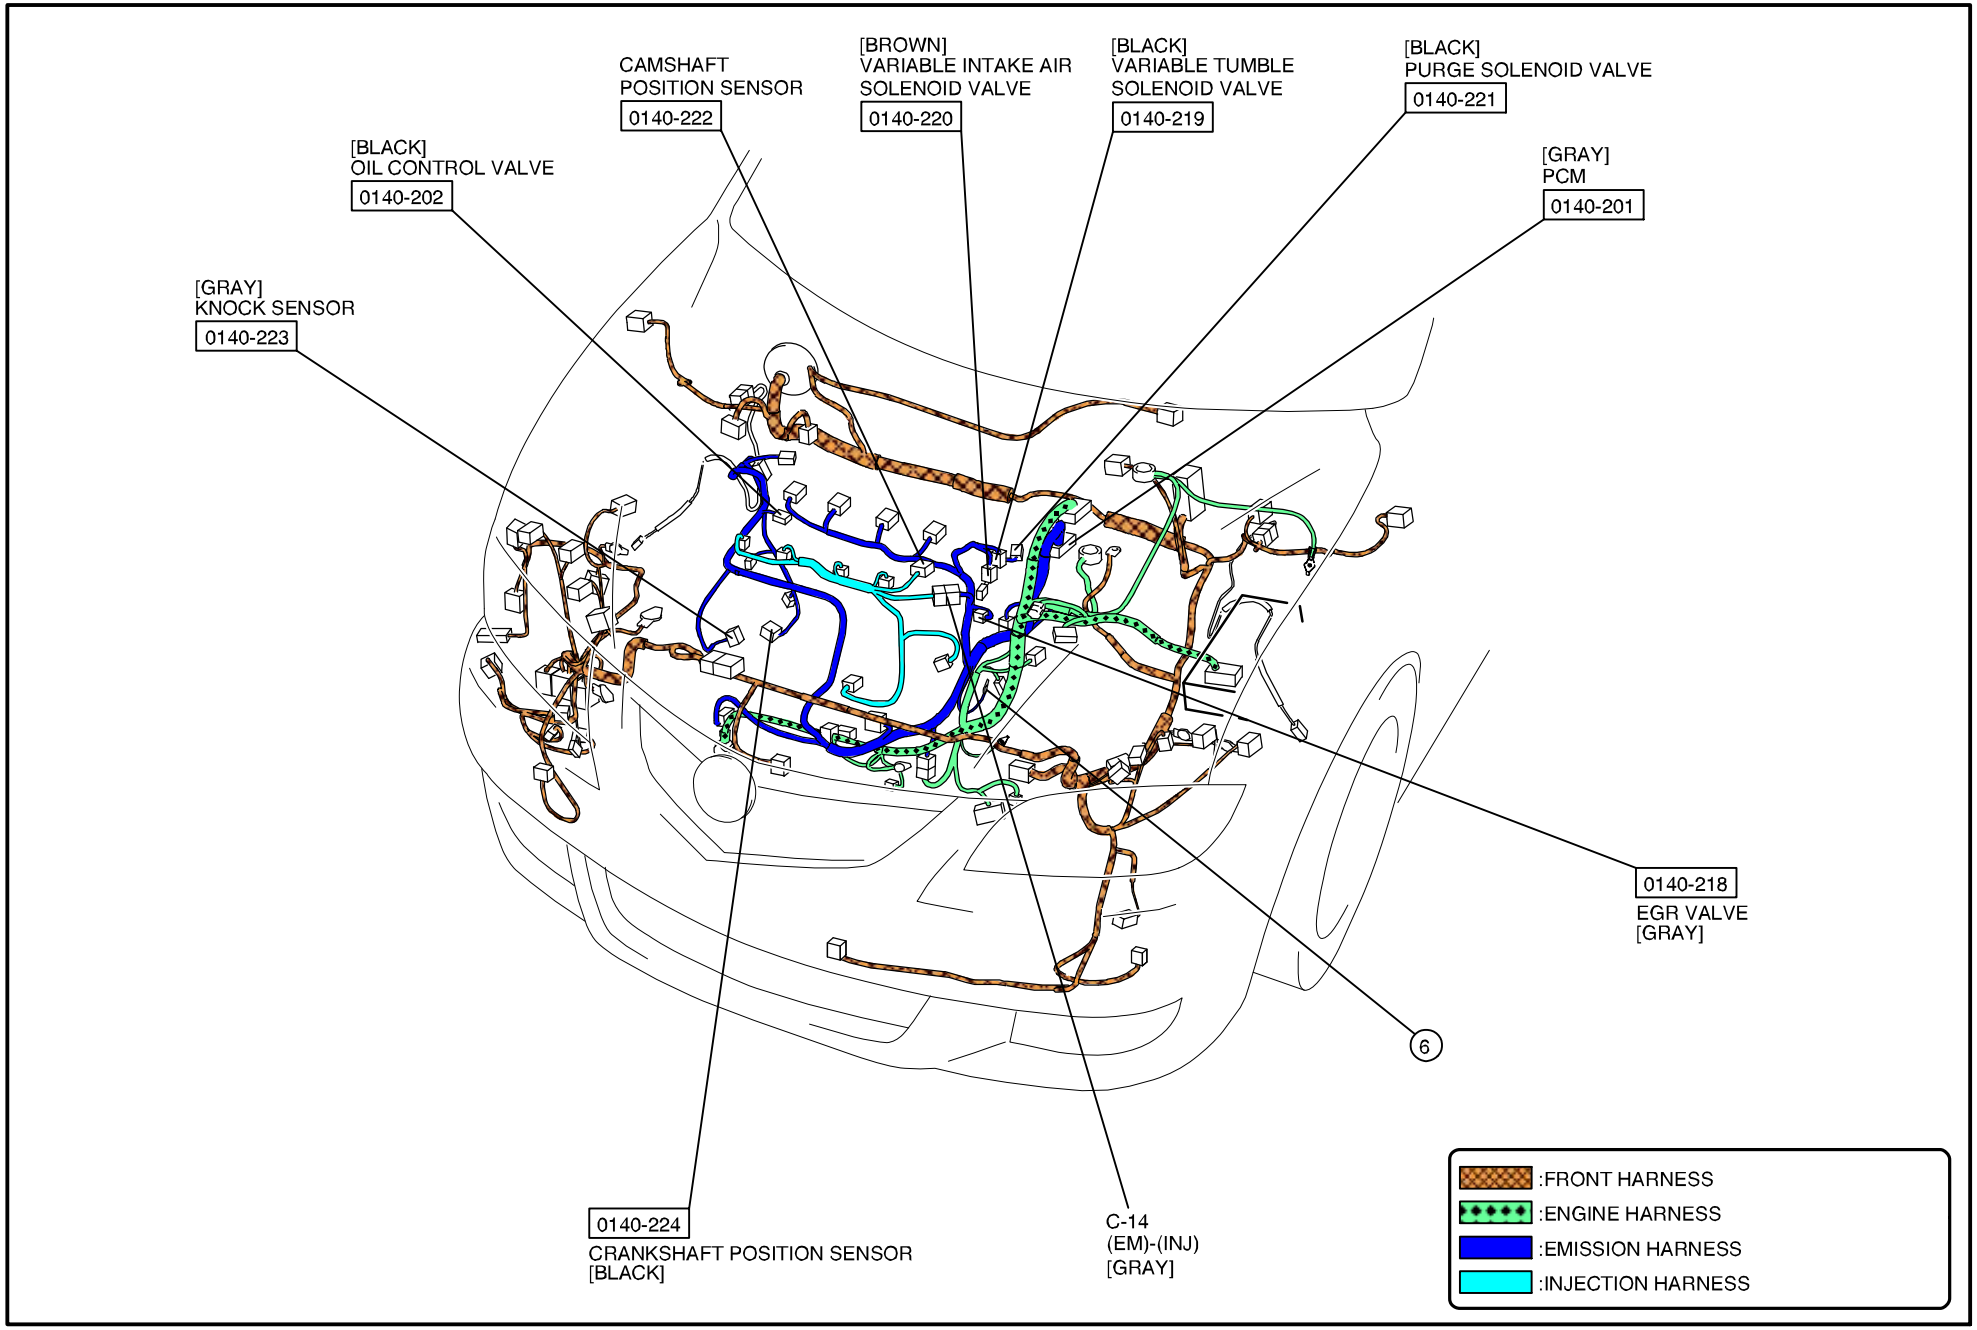

CAMSHAFT
POSITION SENSOR
0140-222
[BROWN]
VARIABLE INTAKE AIR
SOLENOID VALVE
0140-220
[BLACK]
VARIABLE TUMBLE
SOLENOID VALVE
0140-219
[BLACK]
PURGE SOLENOID VALVE
0140-221
[BLACK]
OIL CONTROL VALVE
0140-202
[GRAY]
PCM
0140-201
[GRAY]
KNOCK SENSOR
0140-223
0140-218
EGR VALVE
[GRAY]
6
0140-224
CRANKSHAFT POSITION SENSOR
[BLACK]
C-14
(EM)-(INJ)
[GRAY]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-14
EMISSION HARNESS-INJECTION HARNESS


EMISSION HARNESS

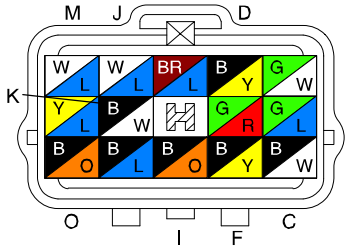


INJECTION HARNESS

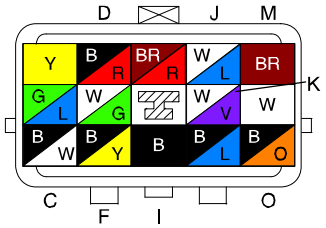


CONTROL SYSTEM (LF:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

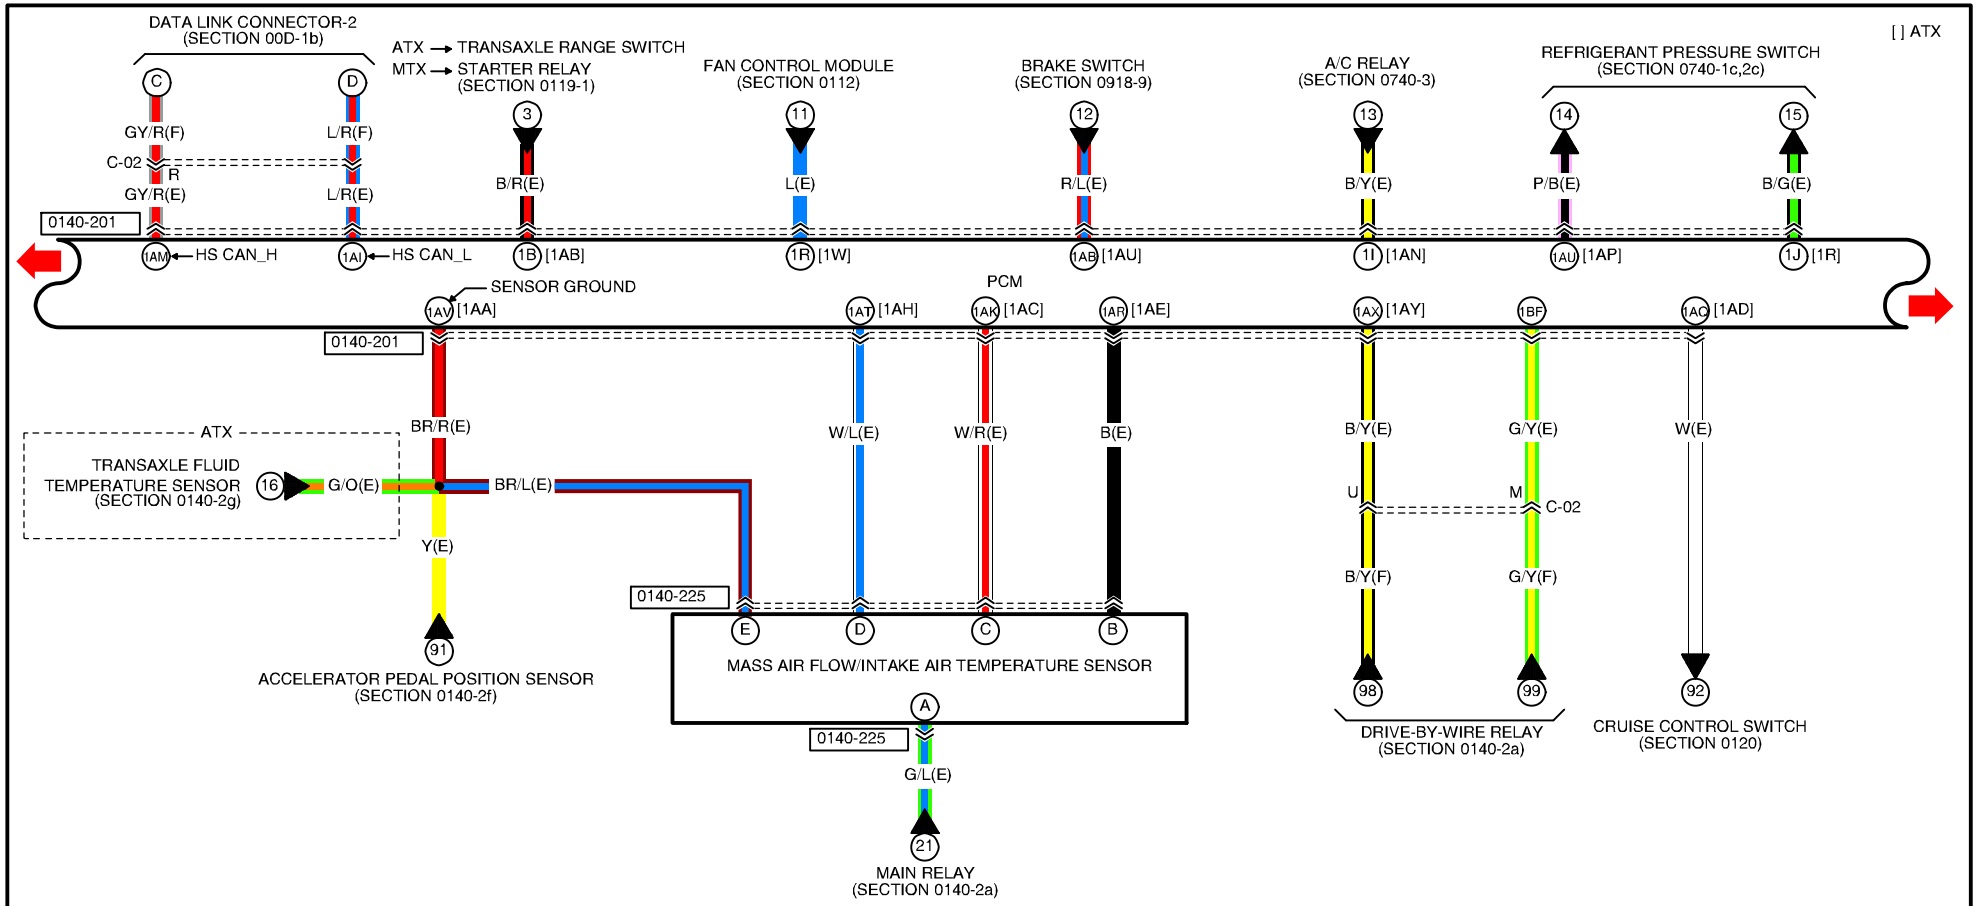

0140-201
PCM

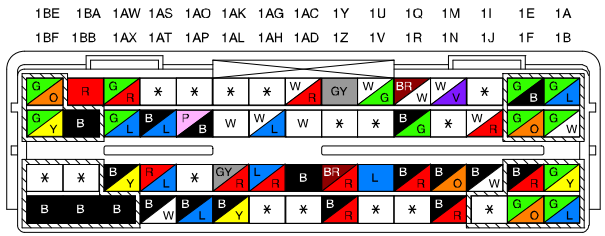



(ATX)

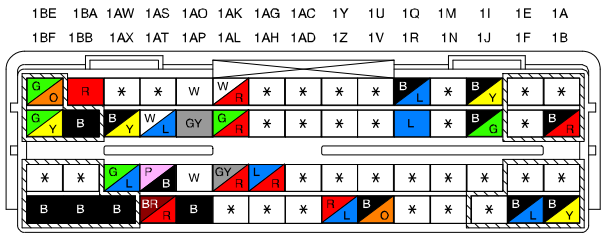

(MTX)


0140-225
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR



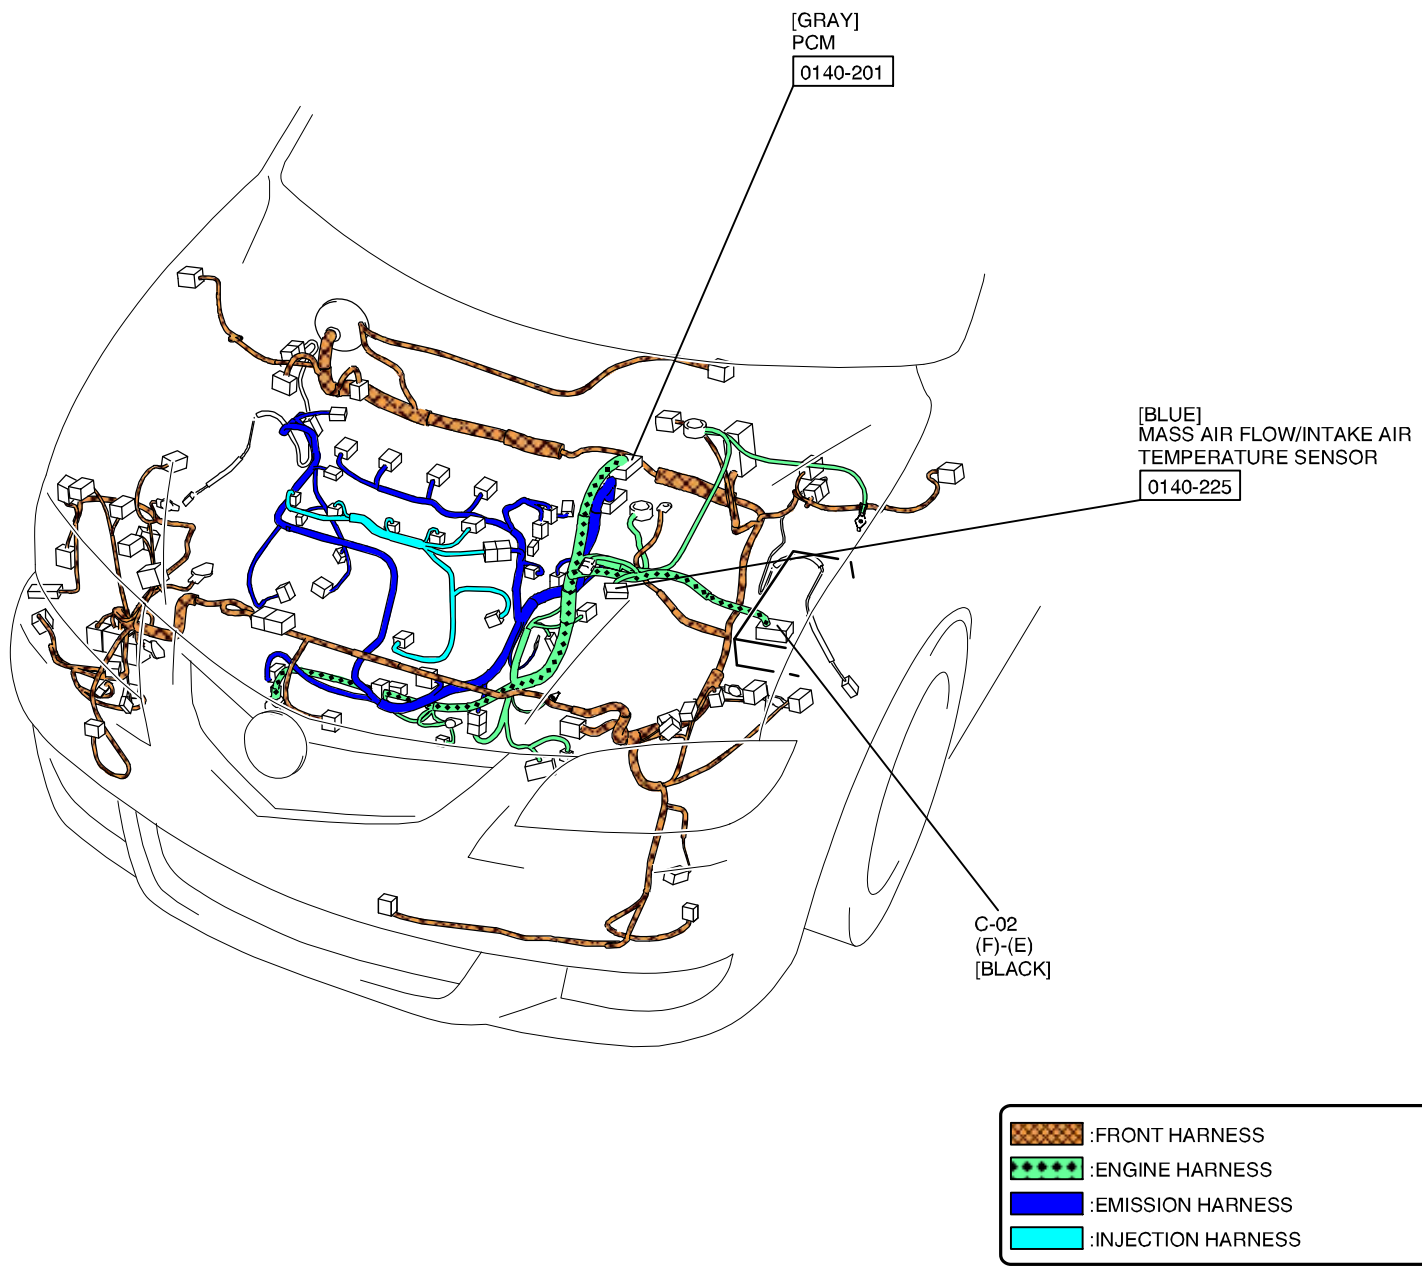

[GRAY]
PCM
0140-201
[BLUE]
MASS AIR FLOW/INTAKE AIR
TEMPERATURE SENSOR
0140-225
C-02
(F)-(E)
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS


FRONT HARNESS

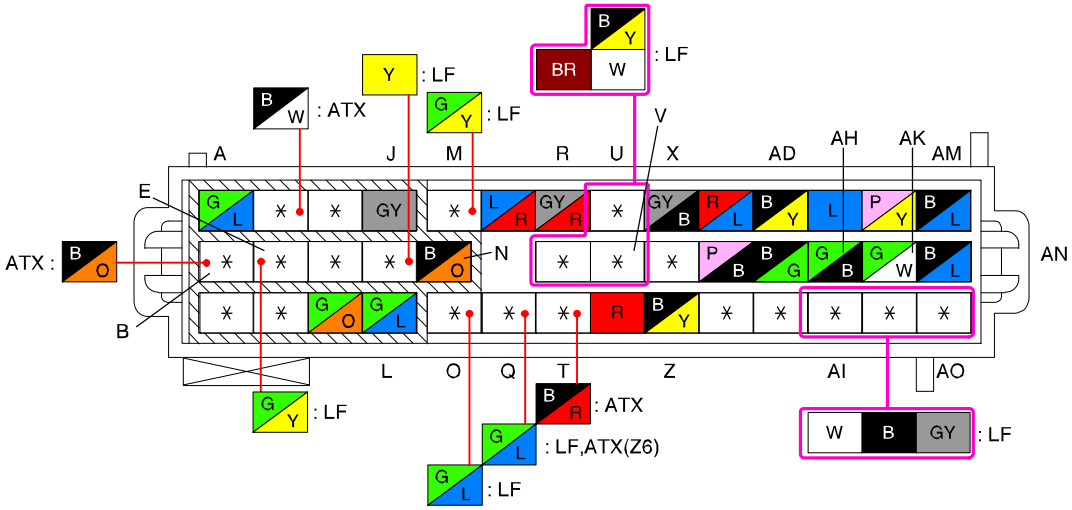


ENGINE HARNESS

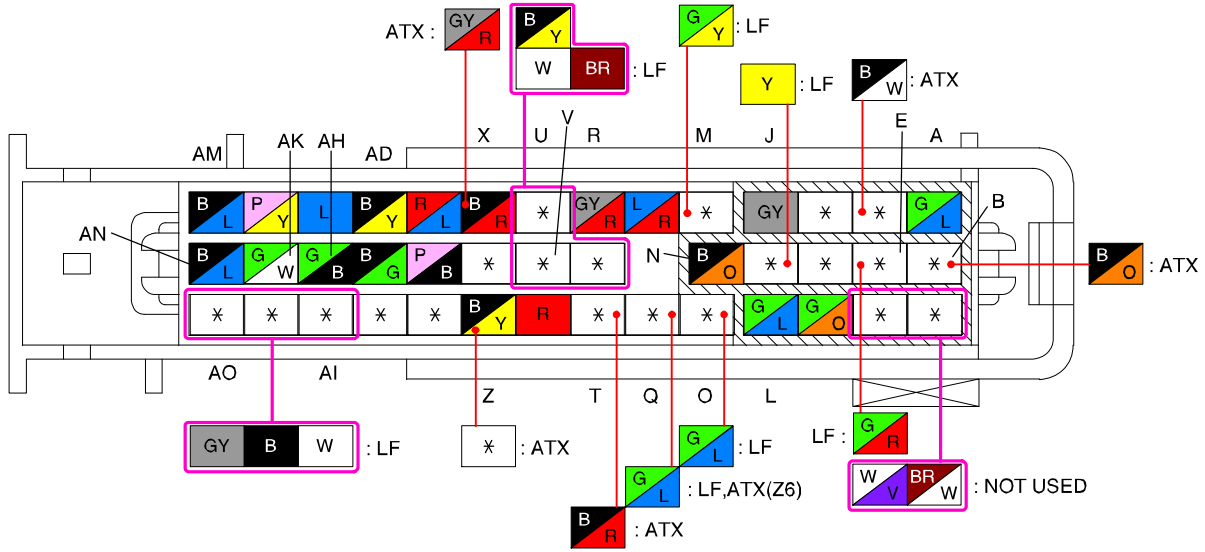


CONTROL SYSTEM (LF:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION)

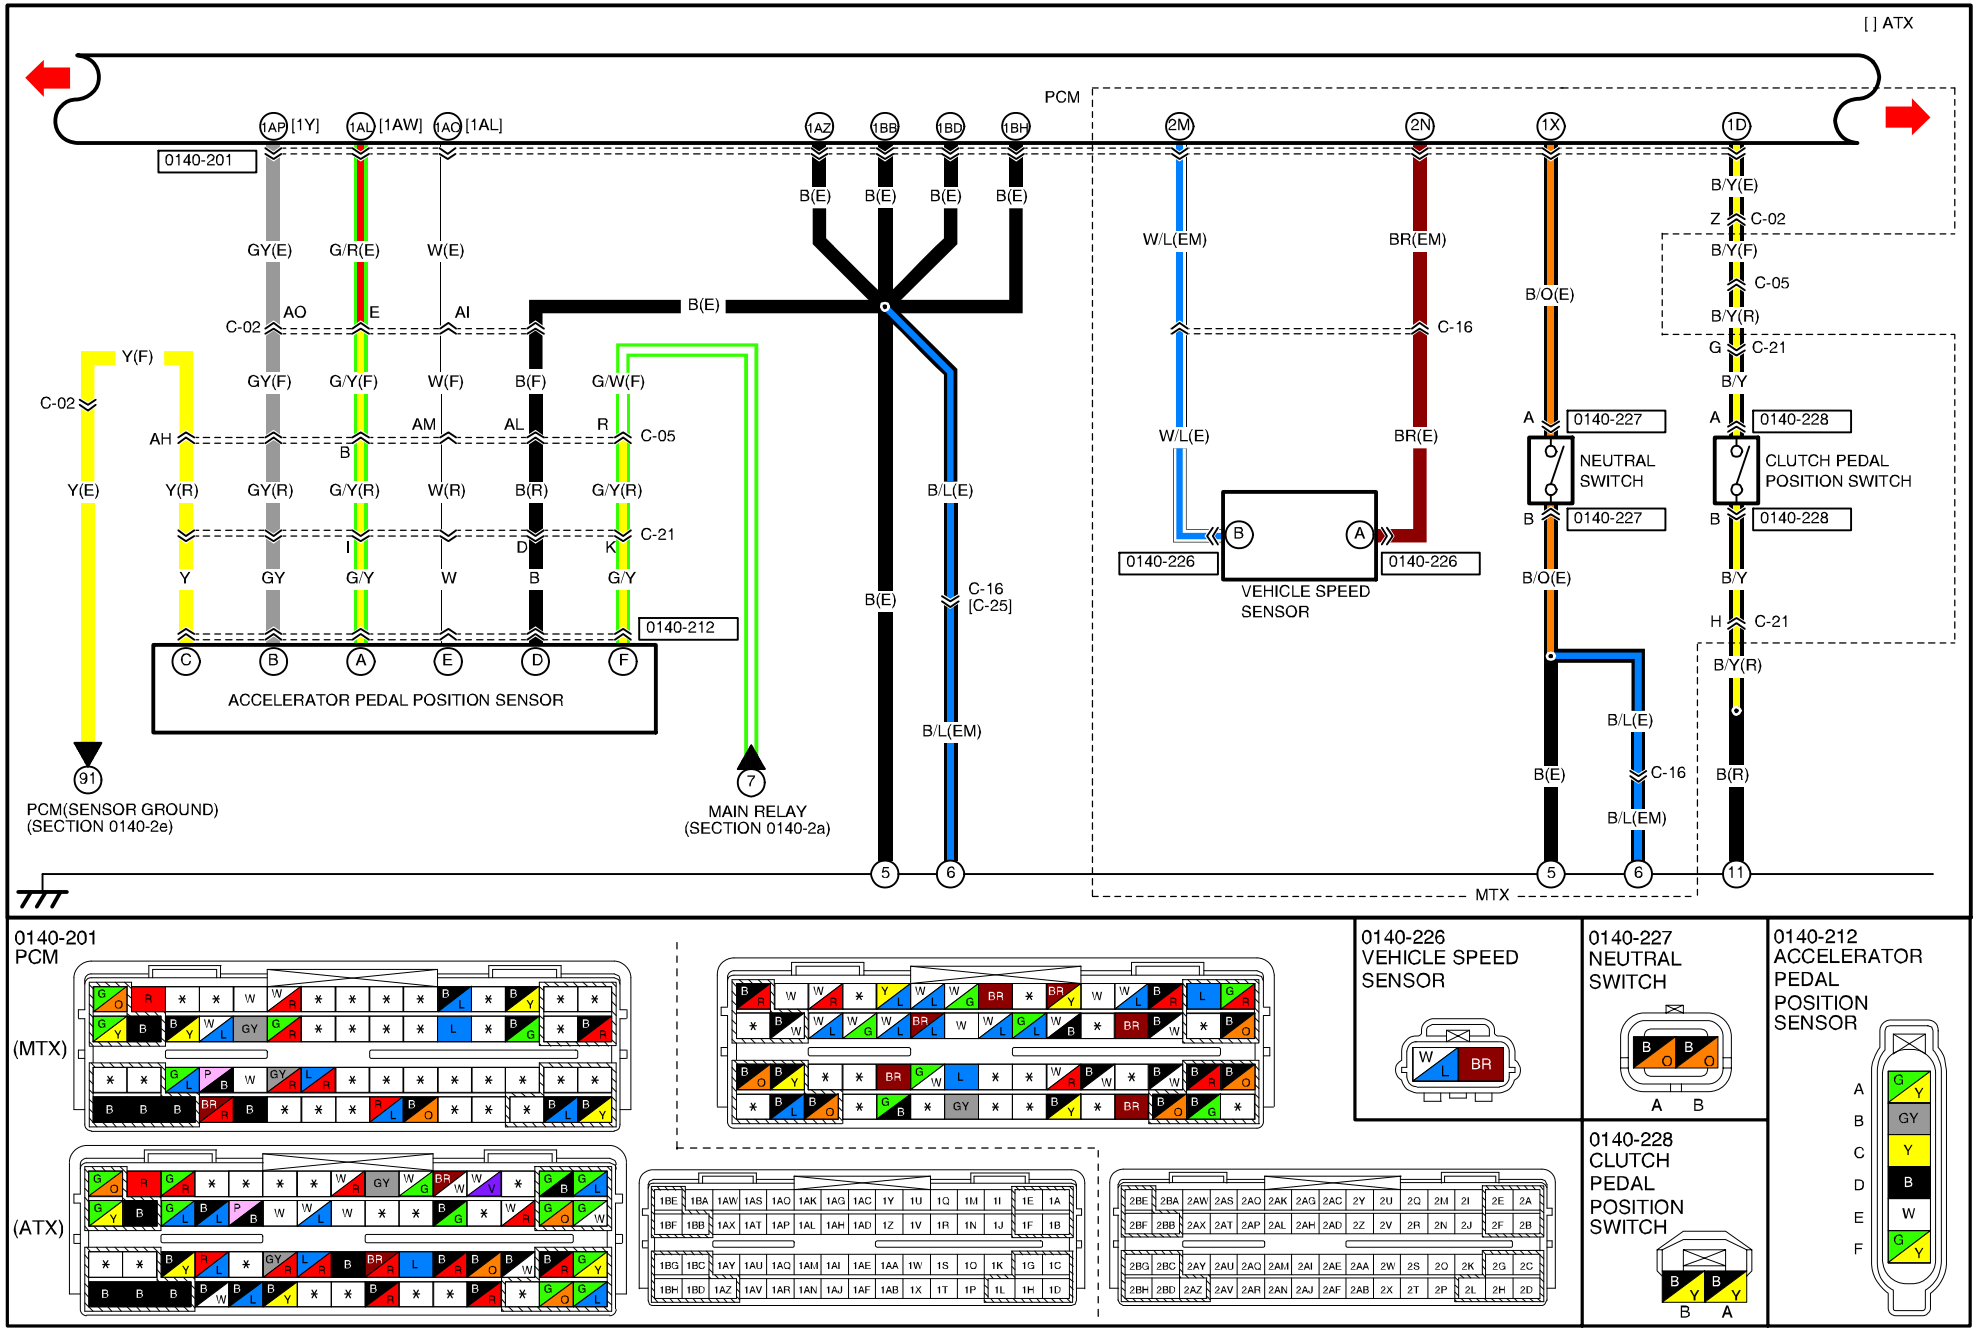

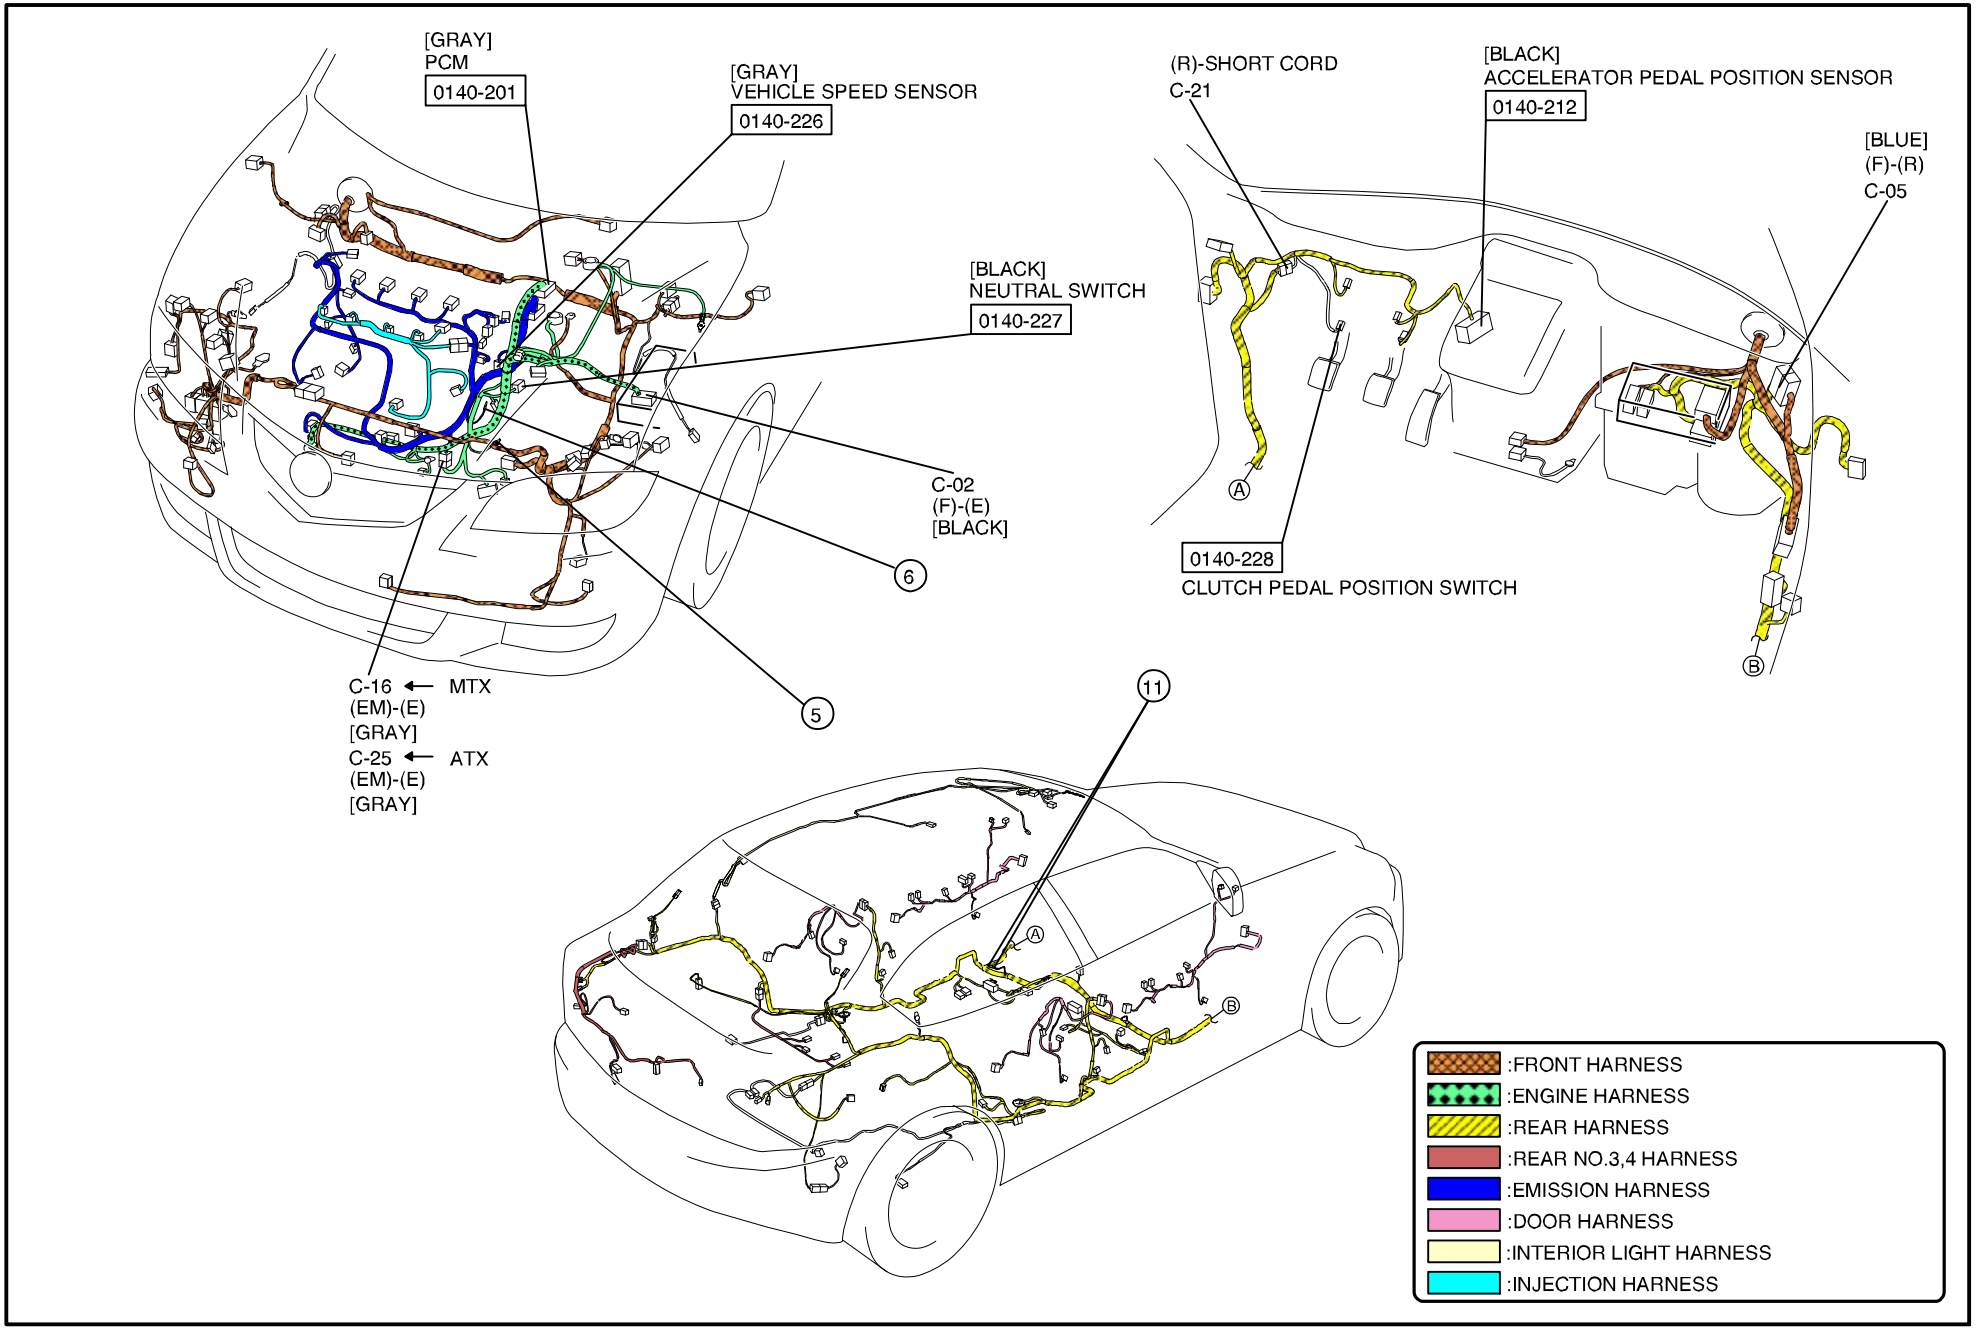

[GRAY]
PCM
0140-201
[GRAY]
VEHICLE SPEED SENSOR
0140-226
[BLACK]
NEUTRAL SWITCH
0140-227
C-02
(F)-(E)
[BLACK]
6
5
C-16 ← MTX
(EM)-(E)
[GRAY]
C-25 ← ATX
(EM)-(E)
[GRAY]
(R)-SHORT CORD
C-21
[BLACK]
ACCELERATOR PEDAL POSITION SENSOR
0140-212
[BLUE]
(F)-(R)
C-05
A
B
0140-228
CLUTCH PEDAL POSITION SWITCH
11
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

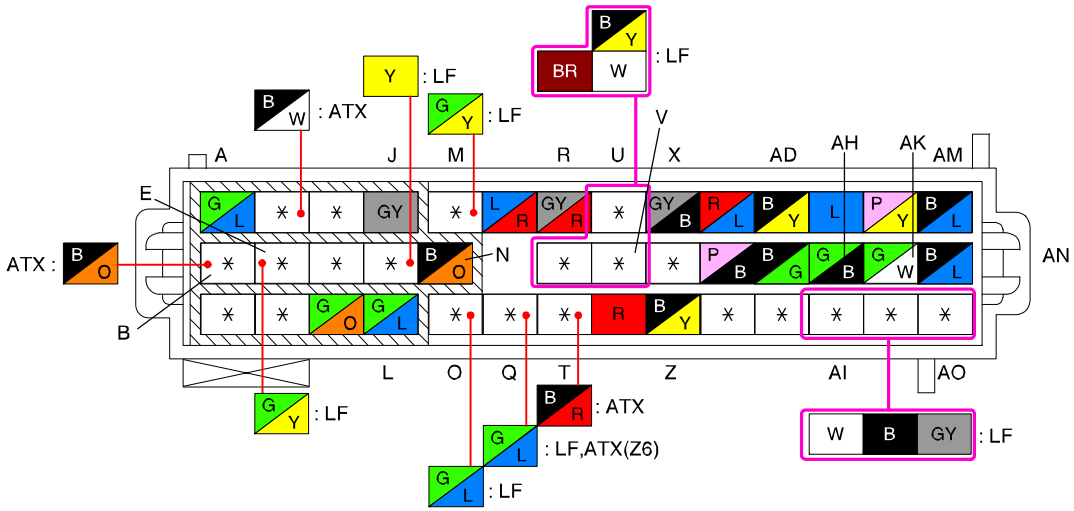


ENGINE HARNESS

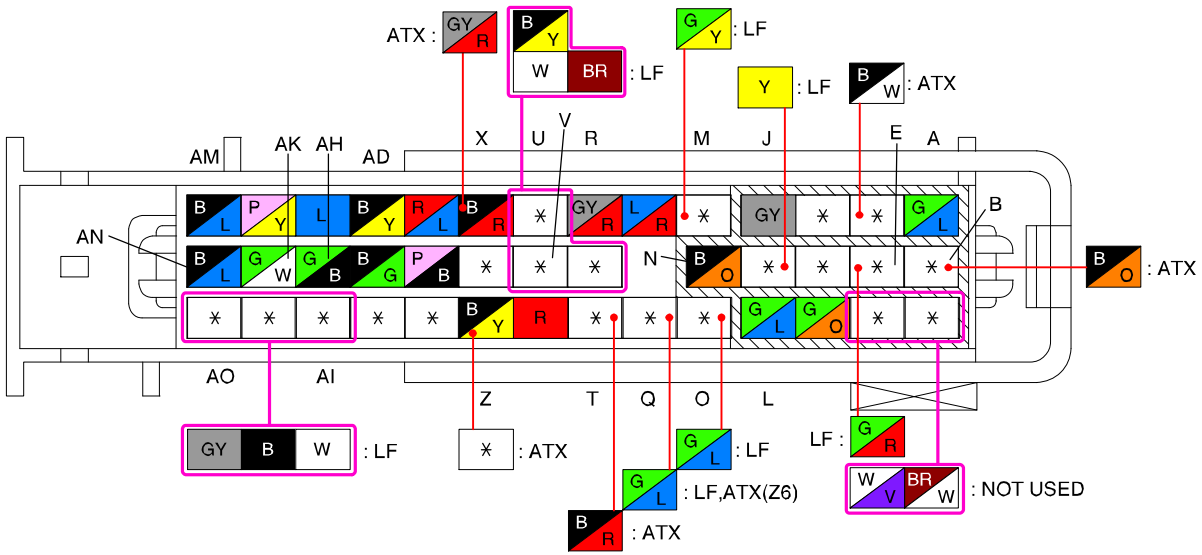


C-16
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

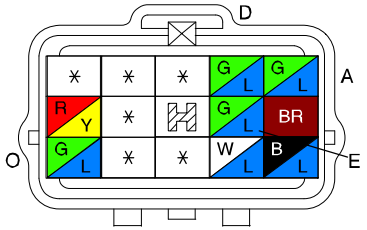


ENGINE HARNESS

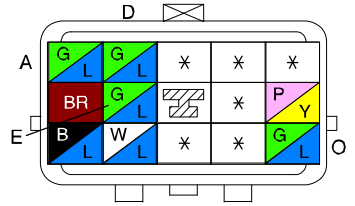


C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

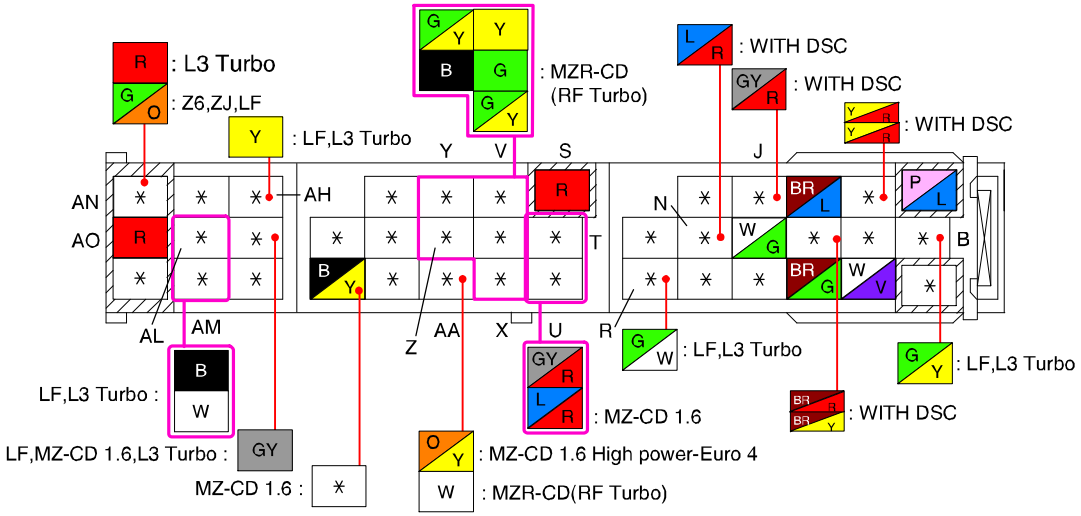


REAR HARNESS

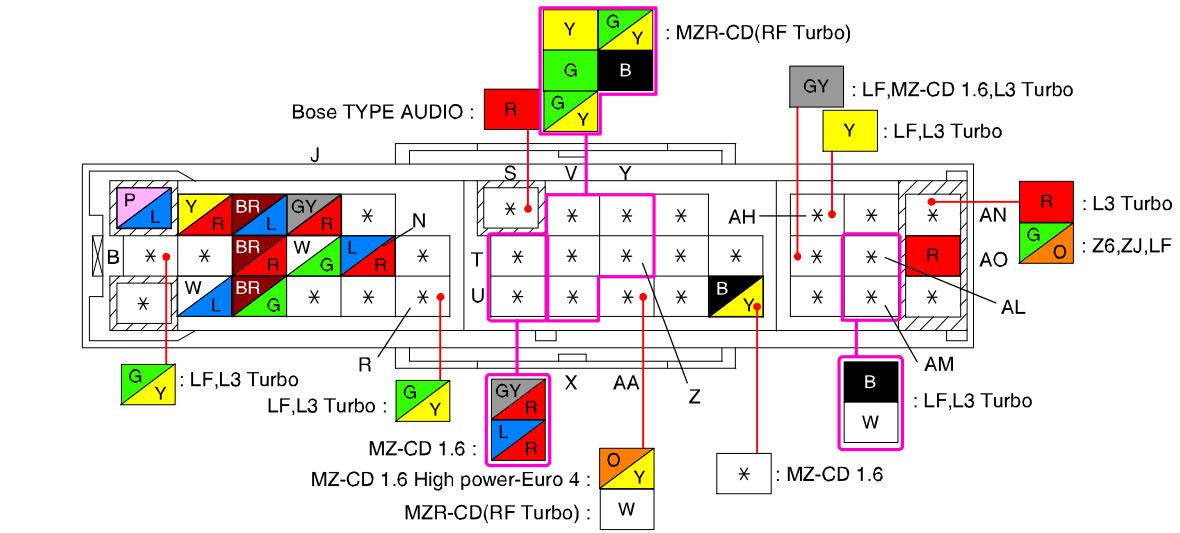


C-21
REAR HARNESS-SHORT CORD

REAR HARNESS

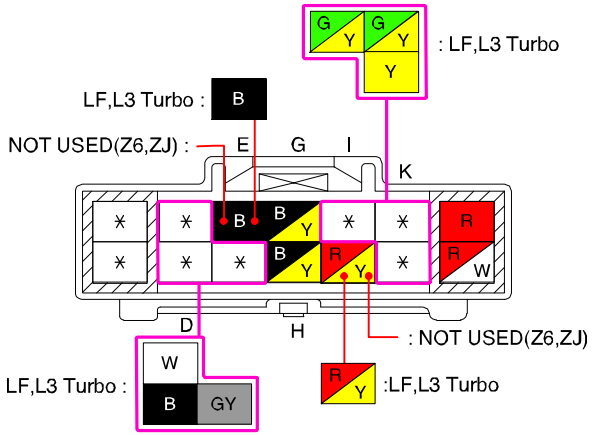


SHORT CORD

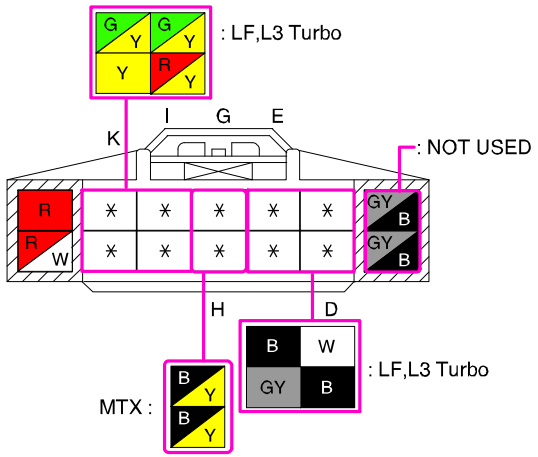



C-25
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

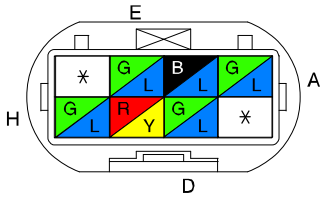


ENGINE HARNESS

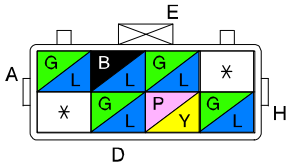


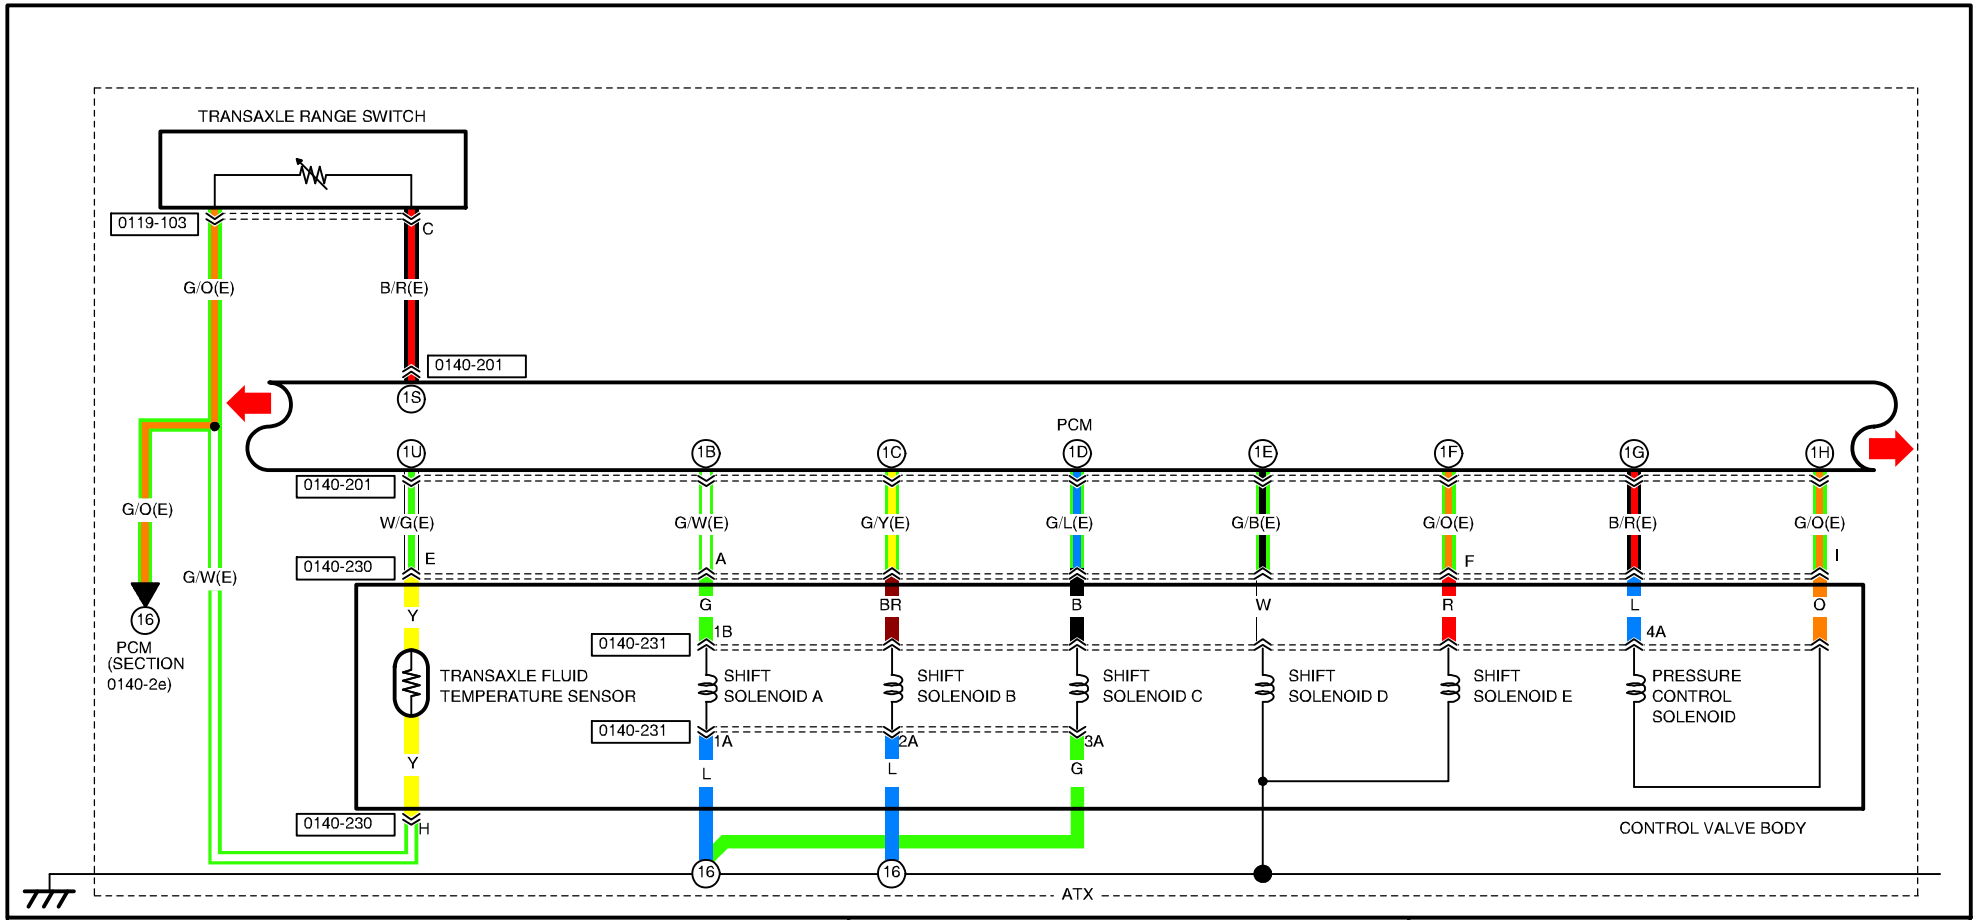


0140-201
PCM

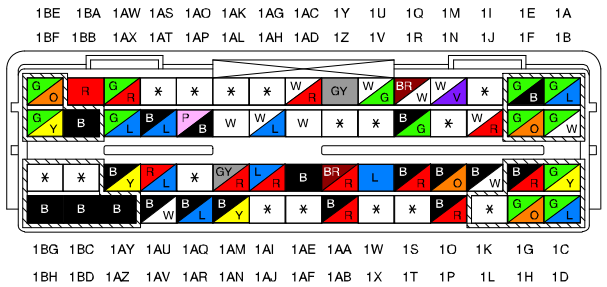

0140-230
ENGINE HARNESS-TRANSAXLE
SHORT CORD

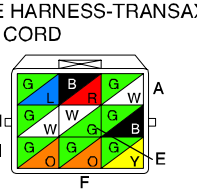


ENGINE HARNESS

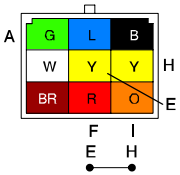



TRANSAXLE SHORT CORD


0140-231
SOLENOID VALVE

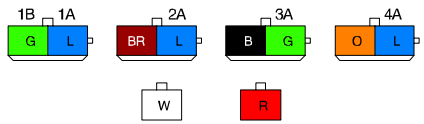


0119-103
TRANSAXLE RANGE SWITCH



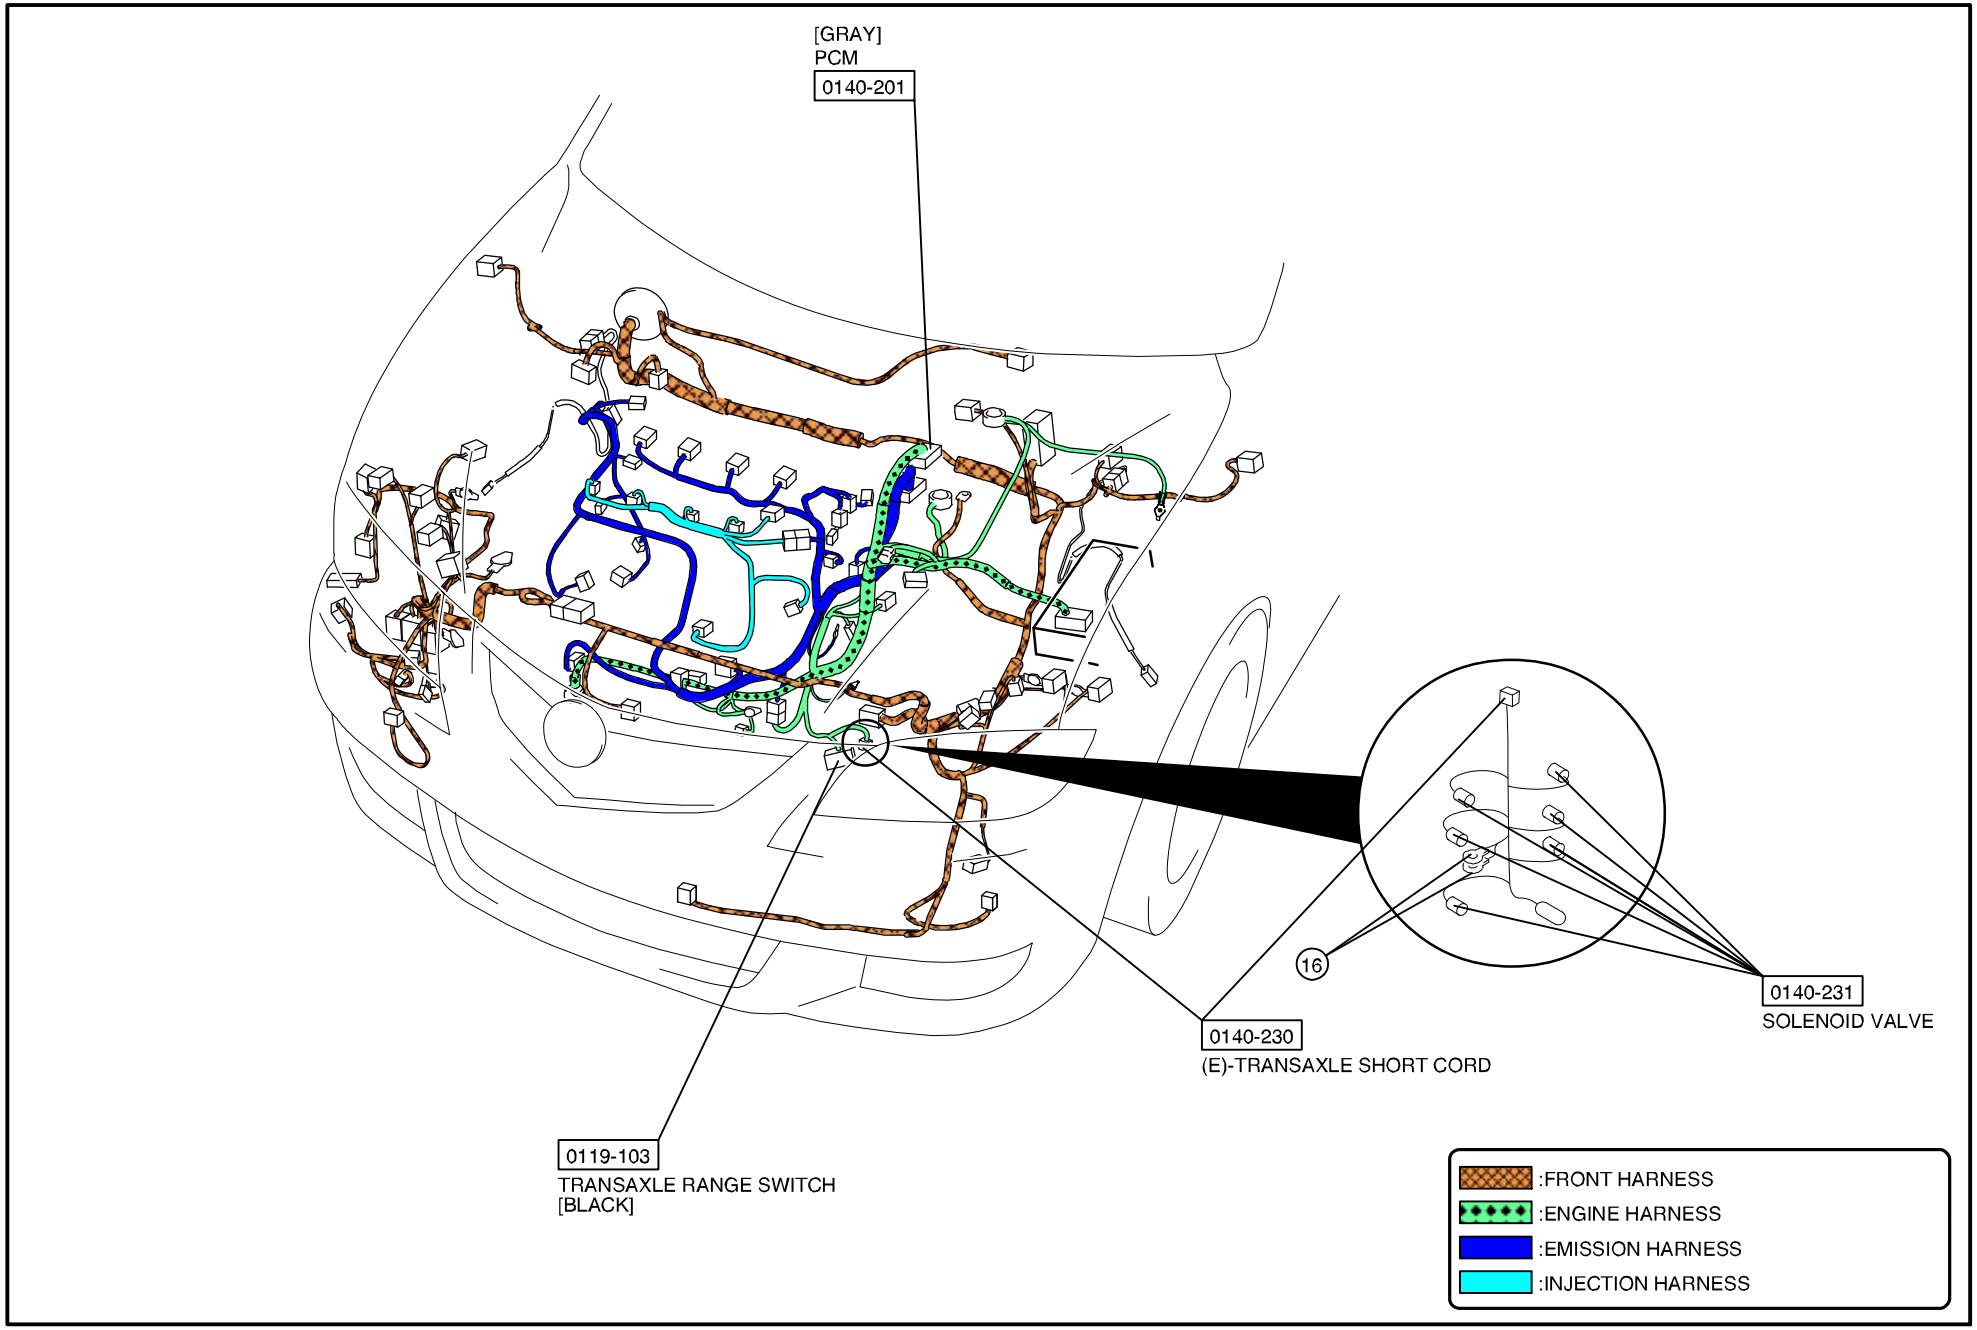
[GRAY]
PCM
0140-201
16
0140-231
SOLENOID VALVE
0140-230
(E)-TRANSAXLE SHORT CORD
0119-103
TRANSAXLE RANGE SWITCH
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

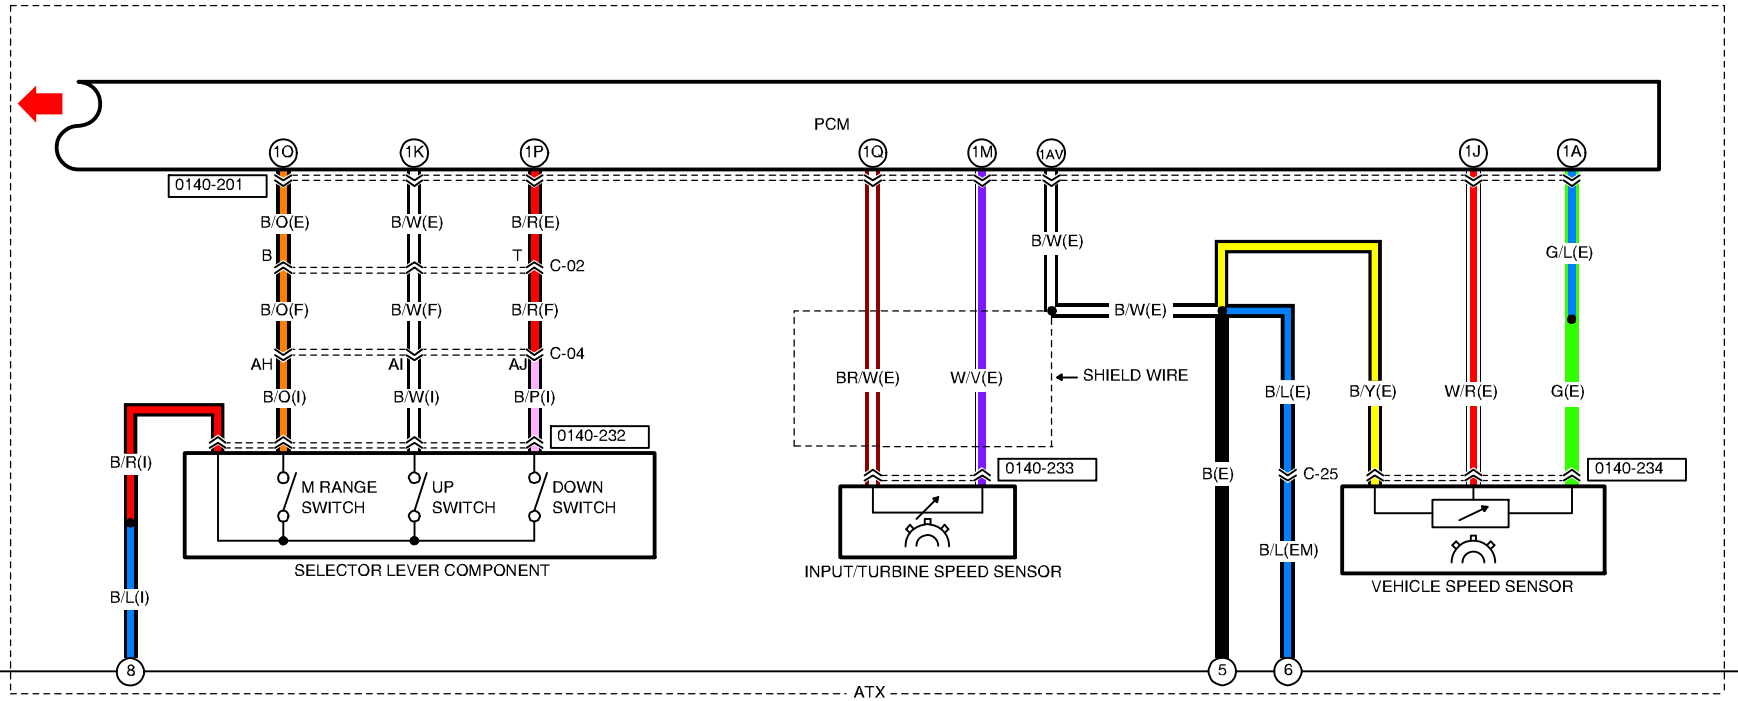


0140-201
PCM

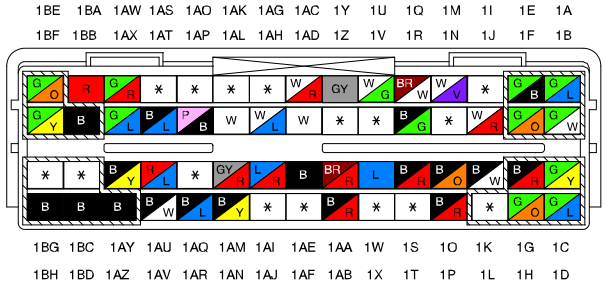


(ATX)

0140-232
SELECTOR LEVER COMPONENT

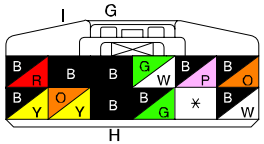


0140-233
INPUT/TURBINE SPEED SENSOR




0140-234
VEHICLE SPEED SENSOR

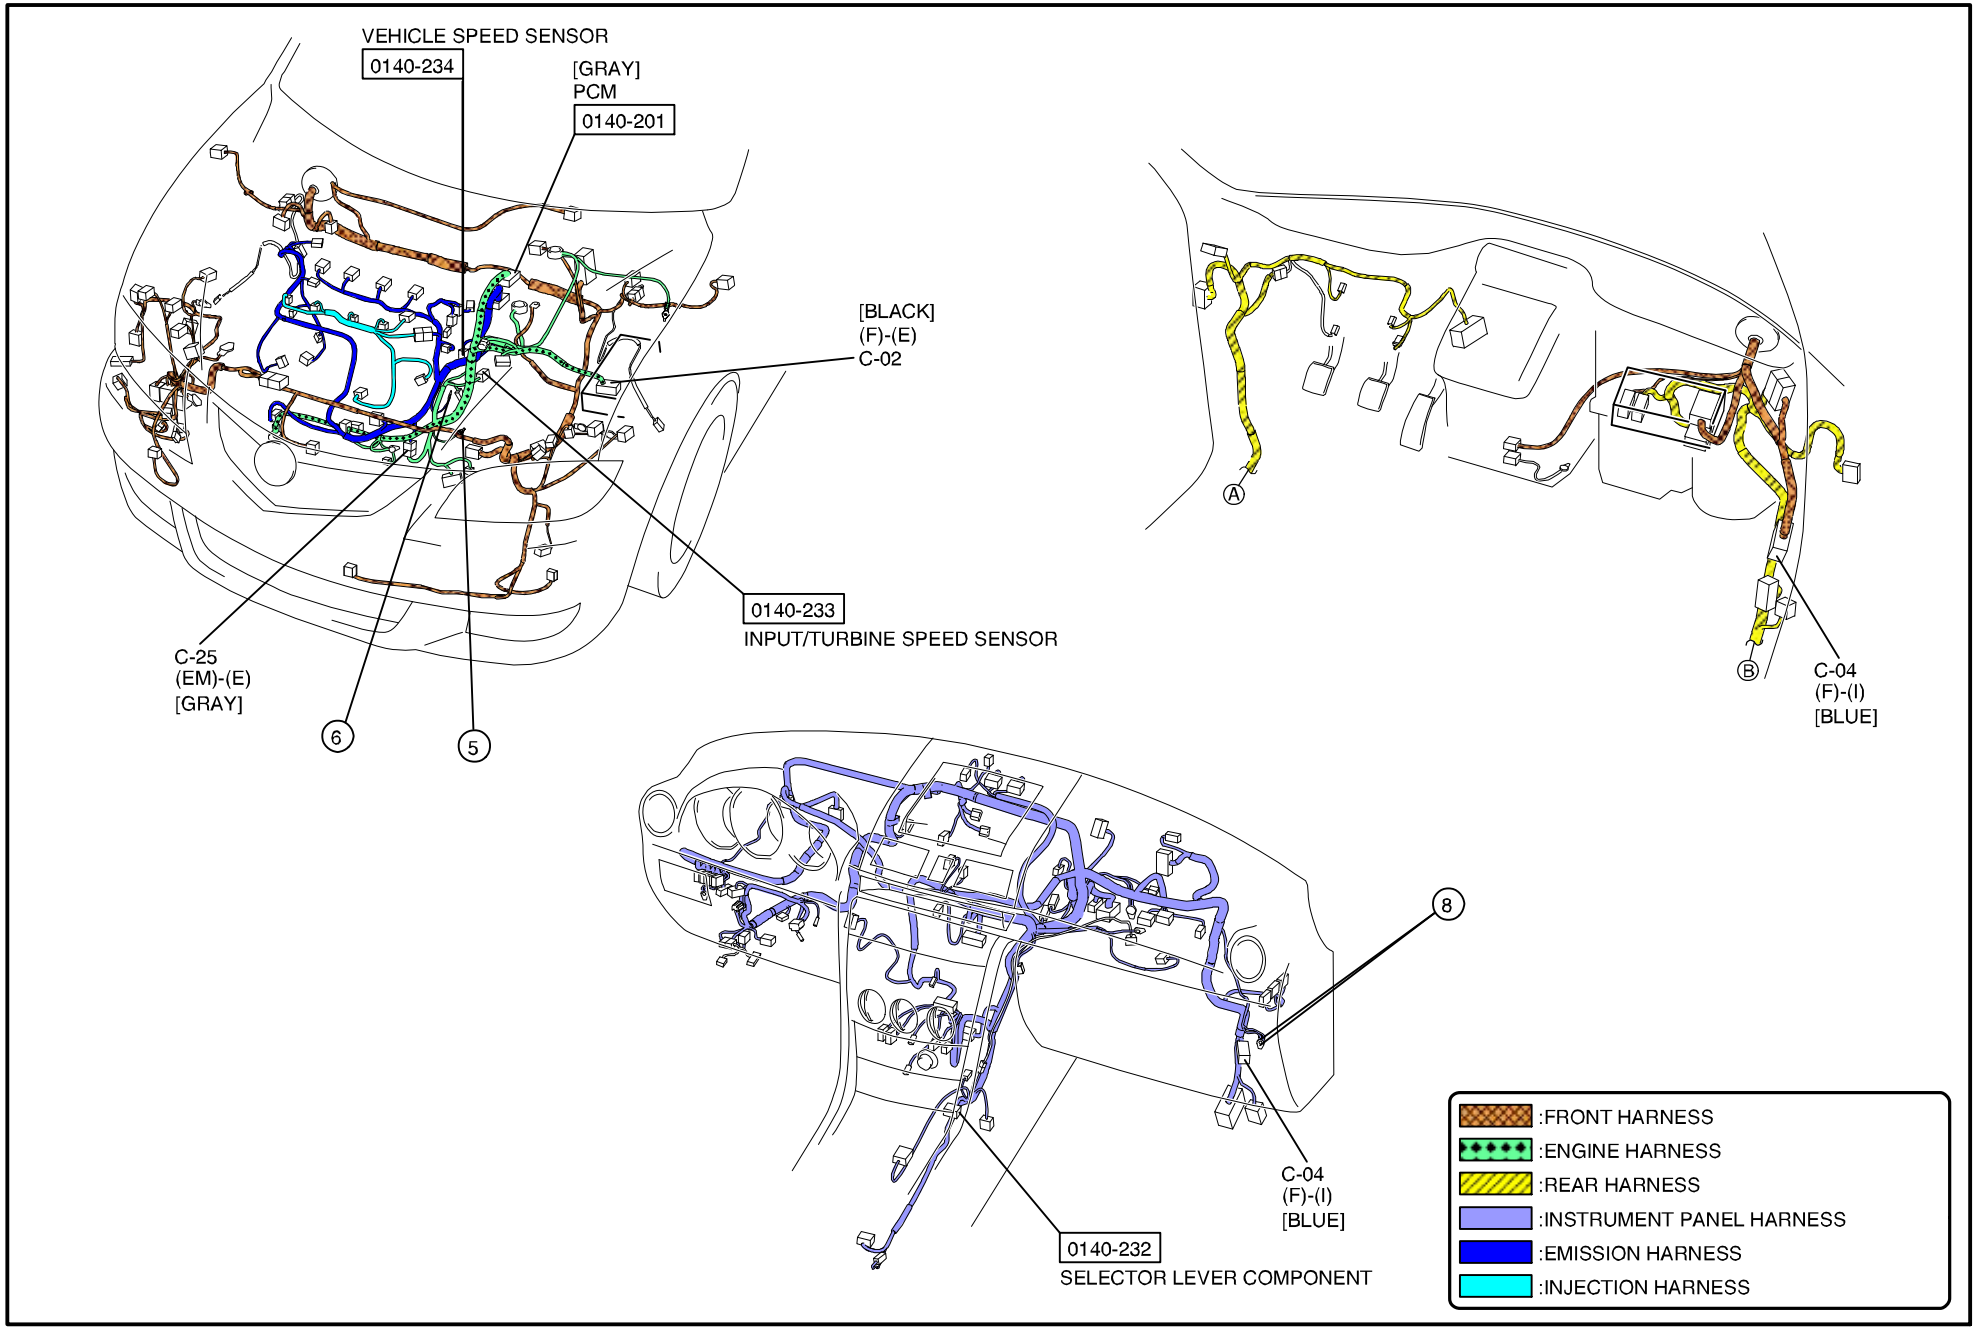



VEHICLE SPEED SENSOR
0140-234
[GRAY]
PCM
0140-201
[BLACK]
(F)-(E)
C-02
0140-233
INPUT/TURBINE SPEED SENSOR
C-25
(EM)-(E)
[GRAY]
6
5
A
B
C-04
(F)-(I)
[BLUE]
8
C-04
(F)-(I)
[BLUE]
0140-232
SELECTOR LEVER COMPONENT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

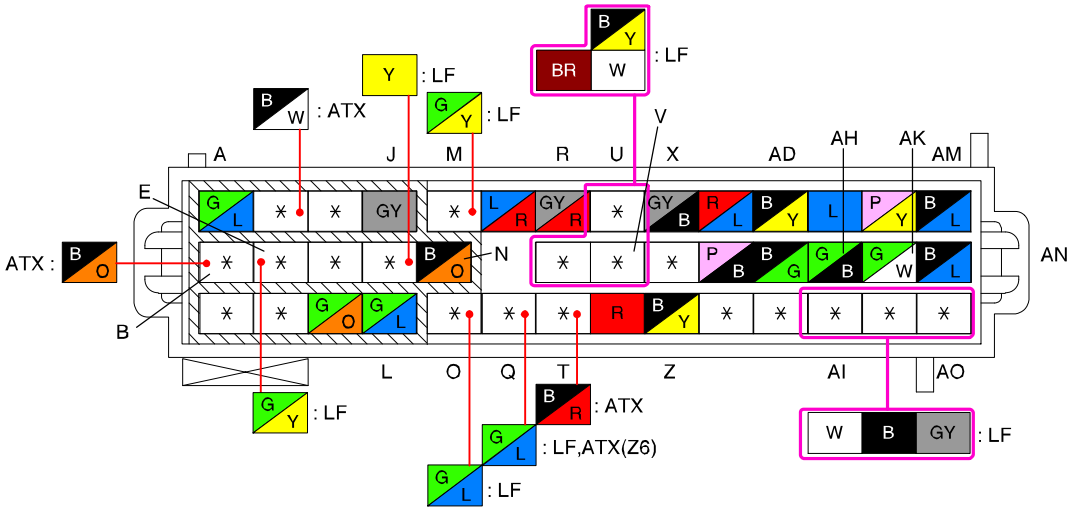


ENGINE HARNESS

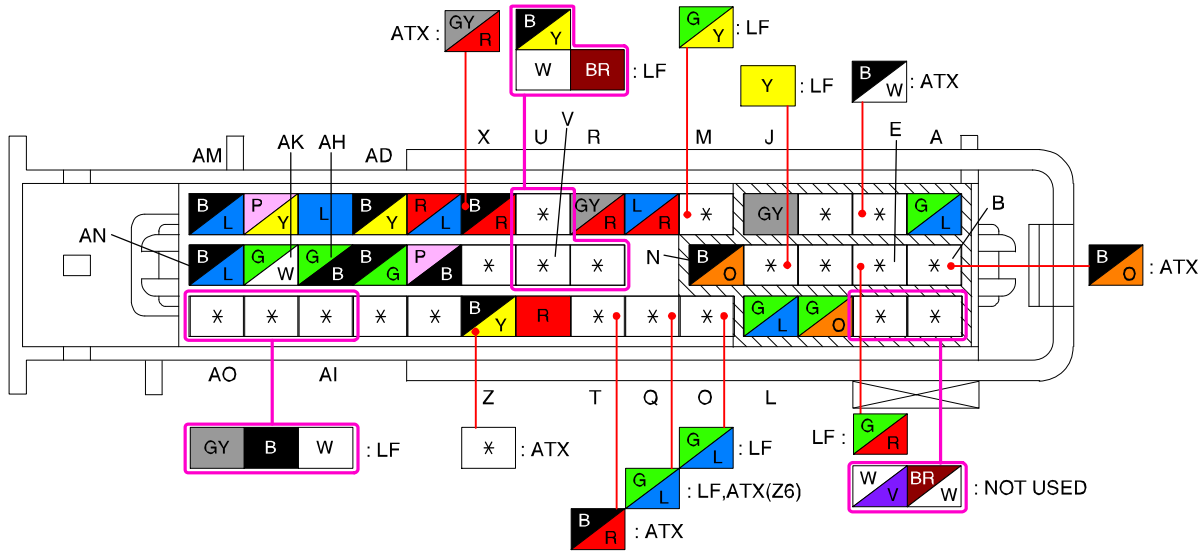


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

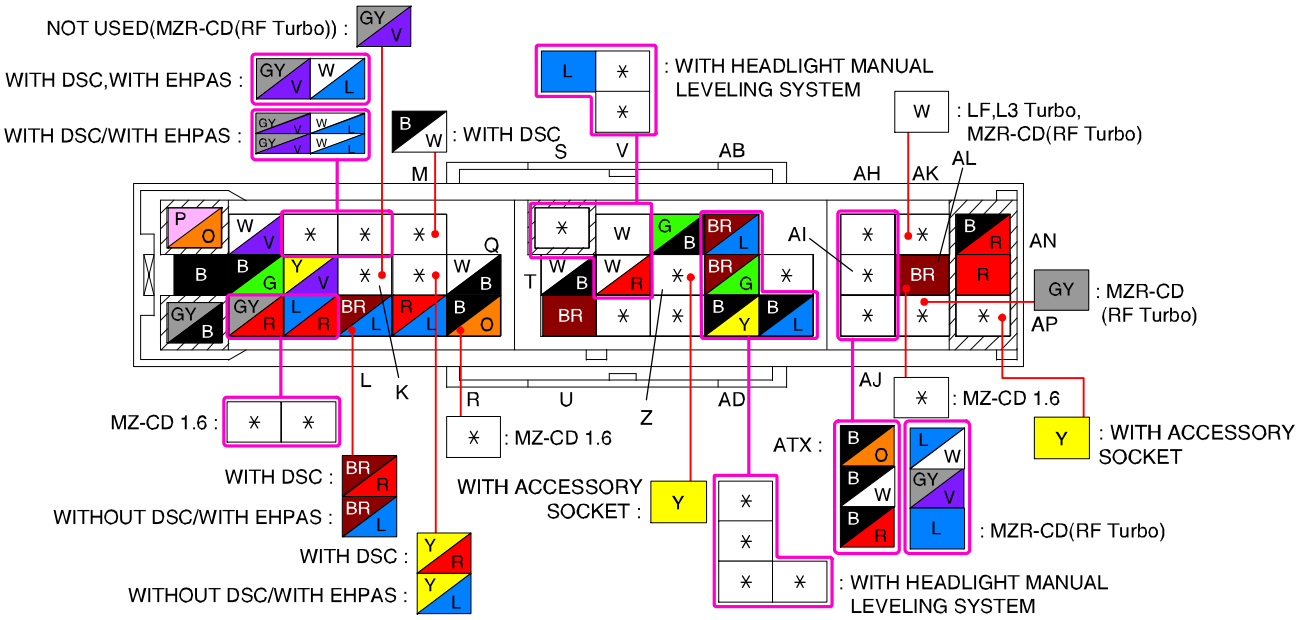


INSTRUMENT PANEL HARNESS

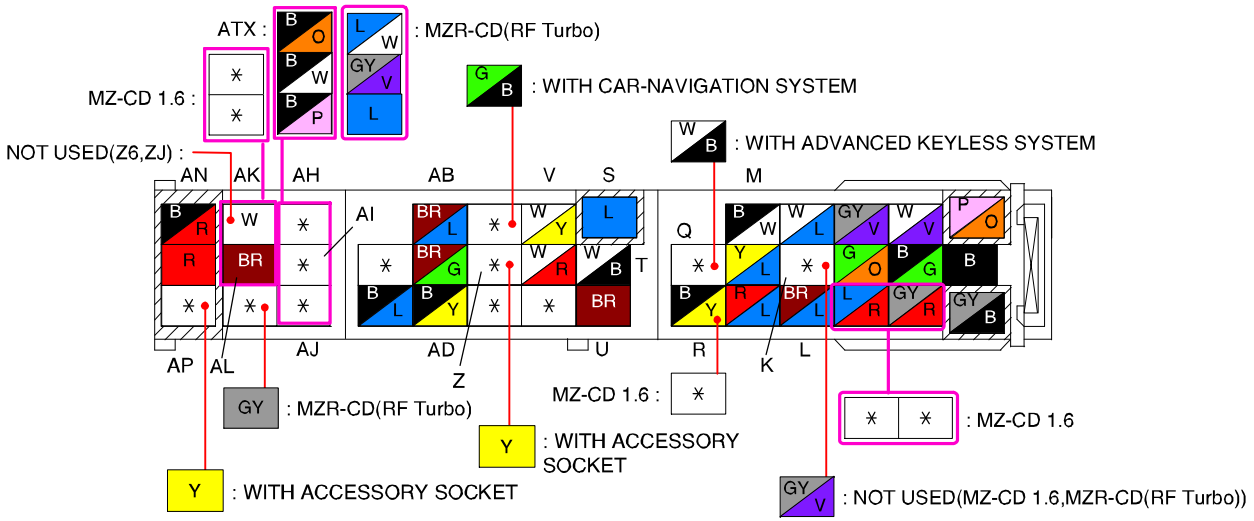



C-25
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

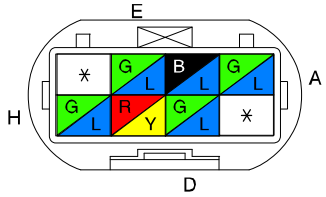



ENGINE HARNESS

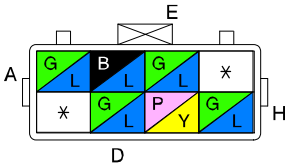


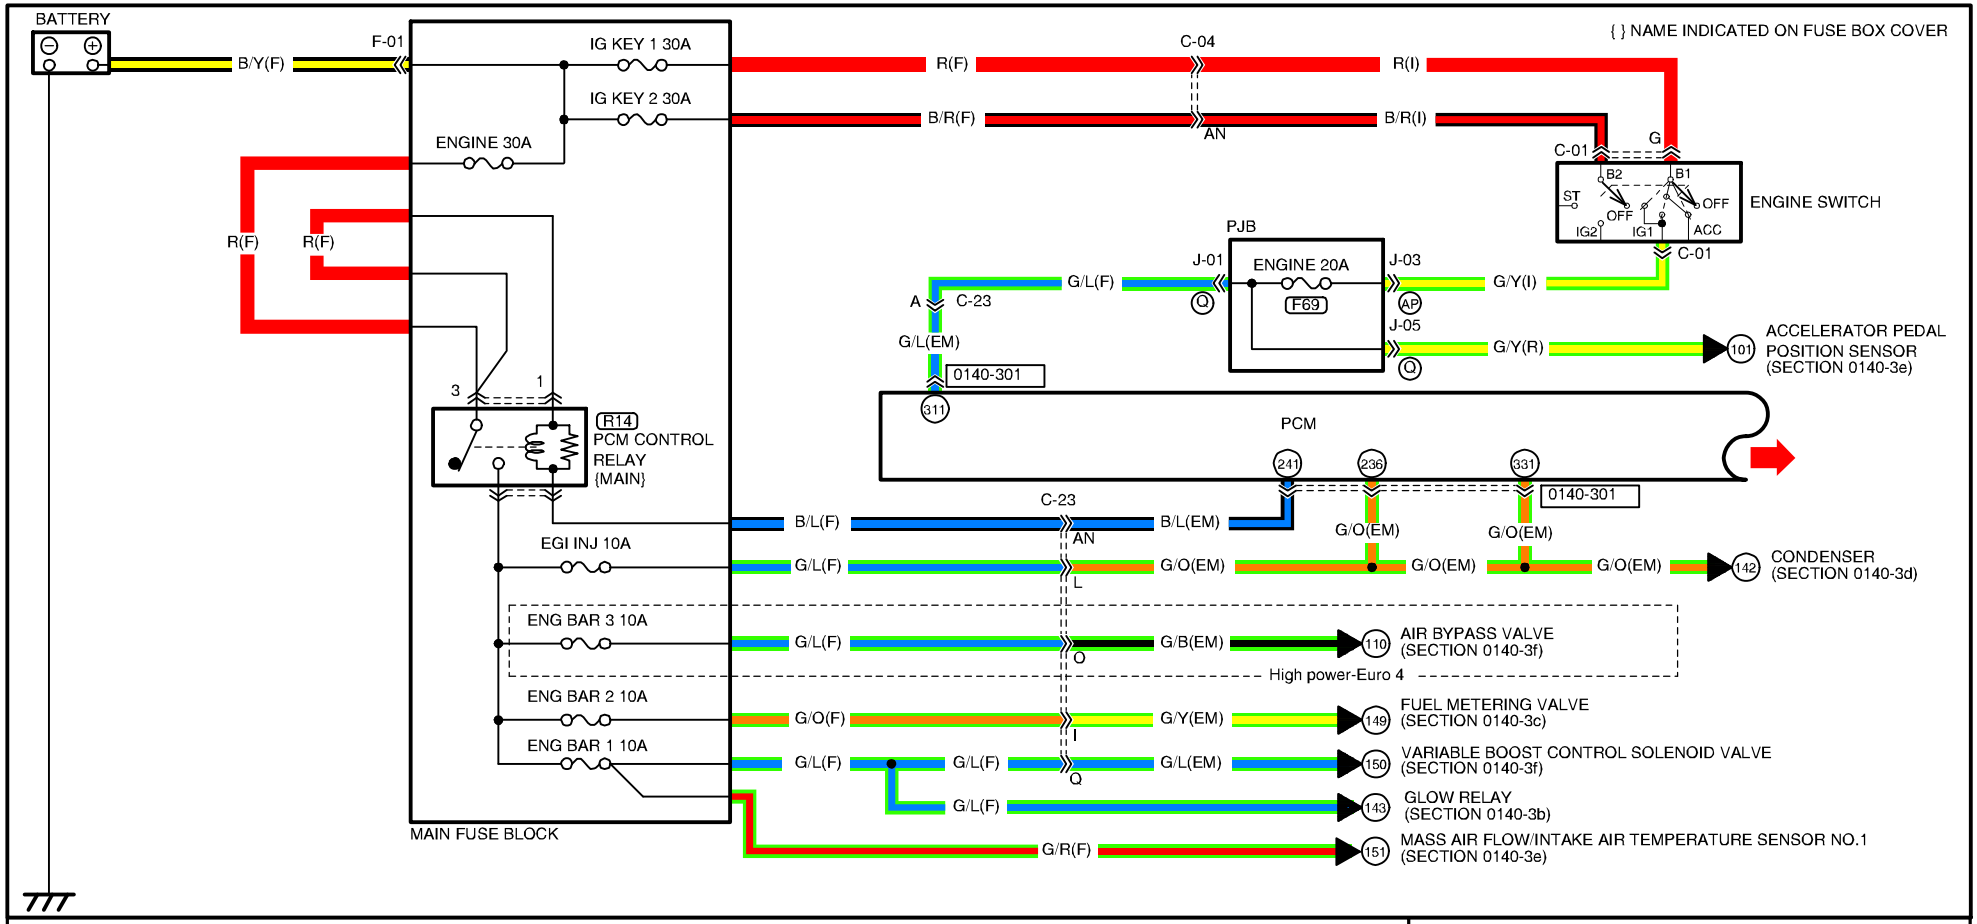
{ } NAME INDICATED ON FUSE BOX COVER
BATTERY
B/Y(F)
F-01
IG KEY 1 30A
IG KEY 2 30A
ENGINE 30A
R(F)
R(F)
R(F)
C-04
R(I)
B/R(F)
B/R(I)
AN
C-01
G
B2
B1
ST
OFF
OFF
IG2
IG1
ACC
ENGINE SWITCH
C-01
PJB
J-01
ENGINE 20A
F69
J-03
AP
G/Y(I)
J-05
Q
G/Y(R)
101
ACCELERATOR PEDAL POSITION SENSOR (SECTION 0140-3e)
A
C-23
G/L(F)
G/L(EM)
0140-301
311
3
1
R14
PCM CONTROL RELAY {MAIN}
PCM
241
236
331
0140-301
C-23
B/L(F)
B/L(EM)
AN
G/O(EM)
G/O(EM)
EGI INJ 10A
G/L(F)
G/O(EM)
G/O(EM)
G/O(EM)
142
CONDENSER (SECTION 0140-3d)
L
ENG BAR 3 10A
G/L(F)
G/B(EM)
110
AIR BYPASS VALVE (SECTION 0140-3f)
O
High power-Euro 4
ENG BAR 2 10A
G/O(F)
G/Y(EM)
149
FUEL METERING VALVE (SECTION 0140-3c)
I
ENG BAR 1 10A
G/L(F)
G/L(F)
G/L(EM)
150
VARIABLE BOOST CONTROL SOLENOID VALVE (SECTION 0140-3f)
Q
G/L(F)
143
GLOW RELAY (SECTION 0140-3b)
G/R(F)
151
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR NO.1 (SECTION 0140-3e)
MAIN FUSE BLOCK


0140-301
PCM

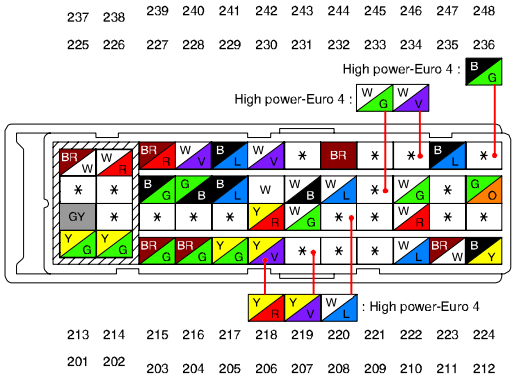
237 238 239 240 241 242 243 244 245 246 247 248
225 226 227 228 229 230 231 232 233 234 235 236
High power-Euro 4 :
High power-Euro 4 :
: High power-Euro 4
213 214 215 216 217 218 219 220 221 222 223 224
201 202 203 204 205 206 207 208 209 210 211 212

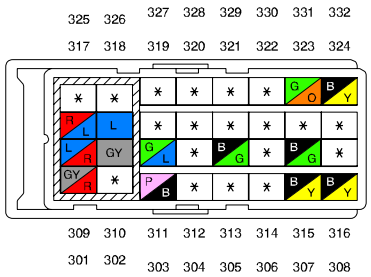
325 326 327 328 329 330 331 332
317 318 319 320 321 322 323 324
309 310 311 312 313 314 315 316
301 302 303 304 305 306 307 308

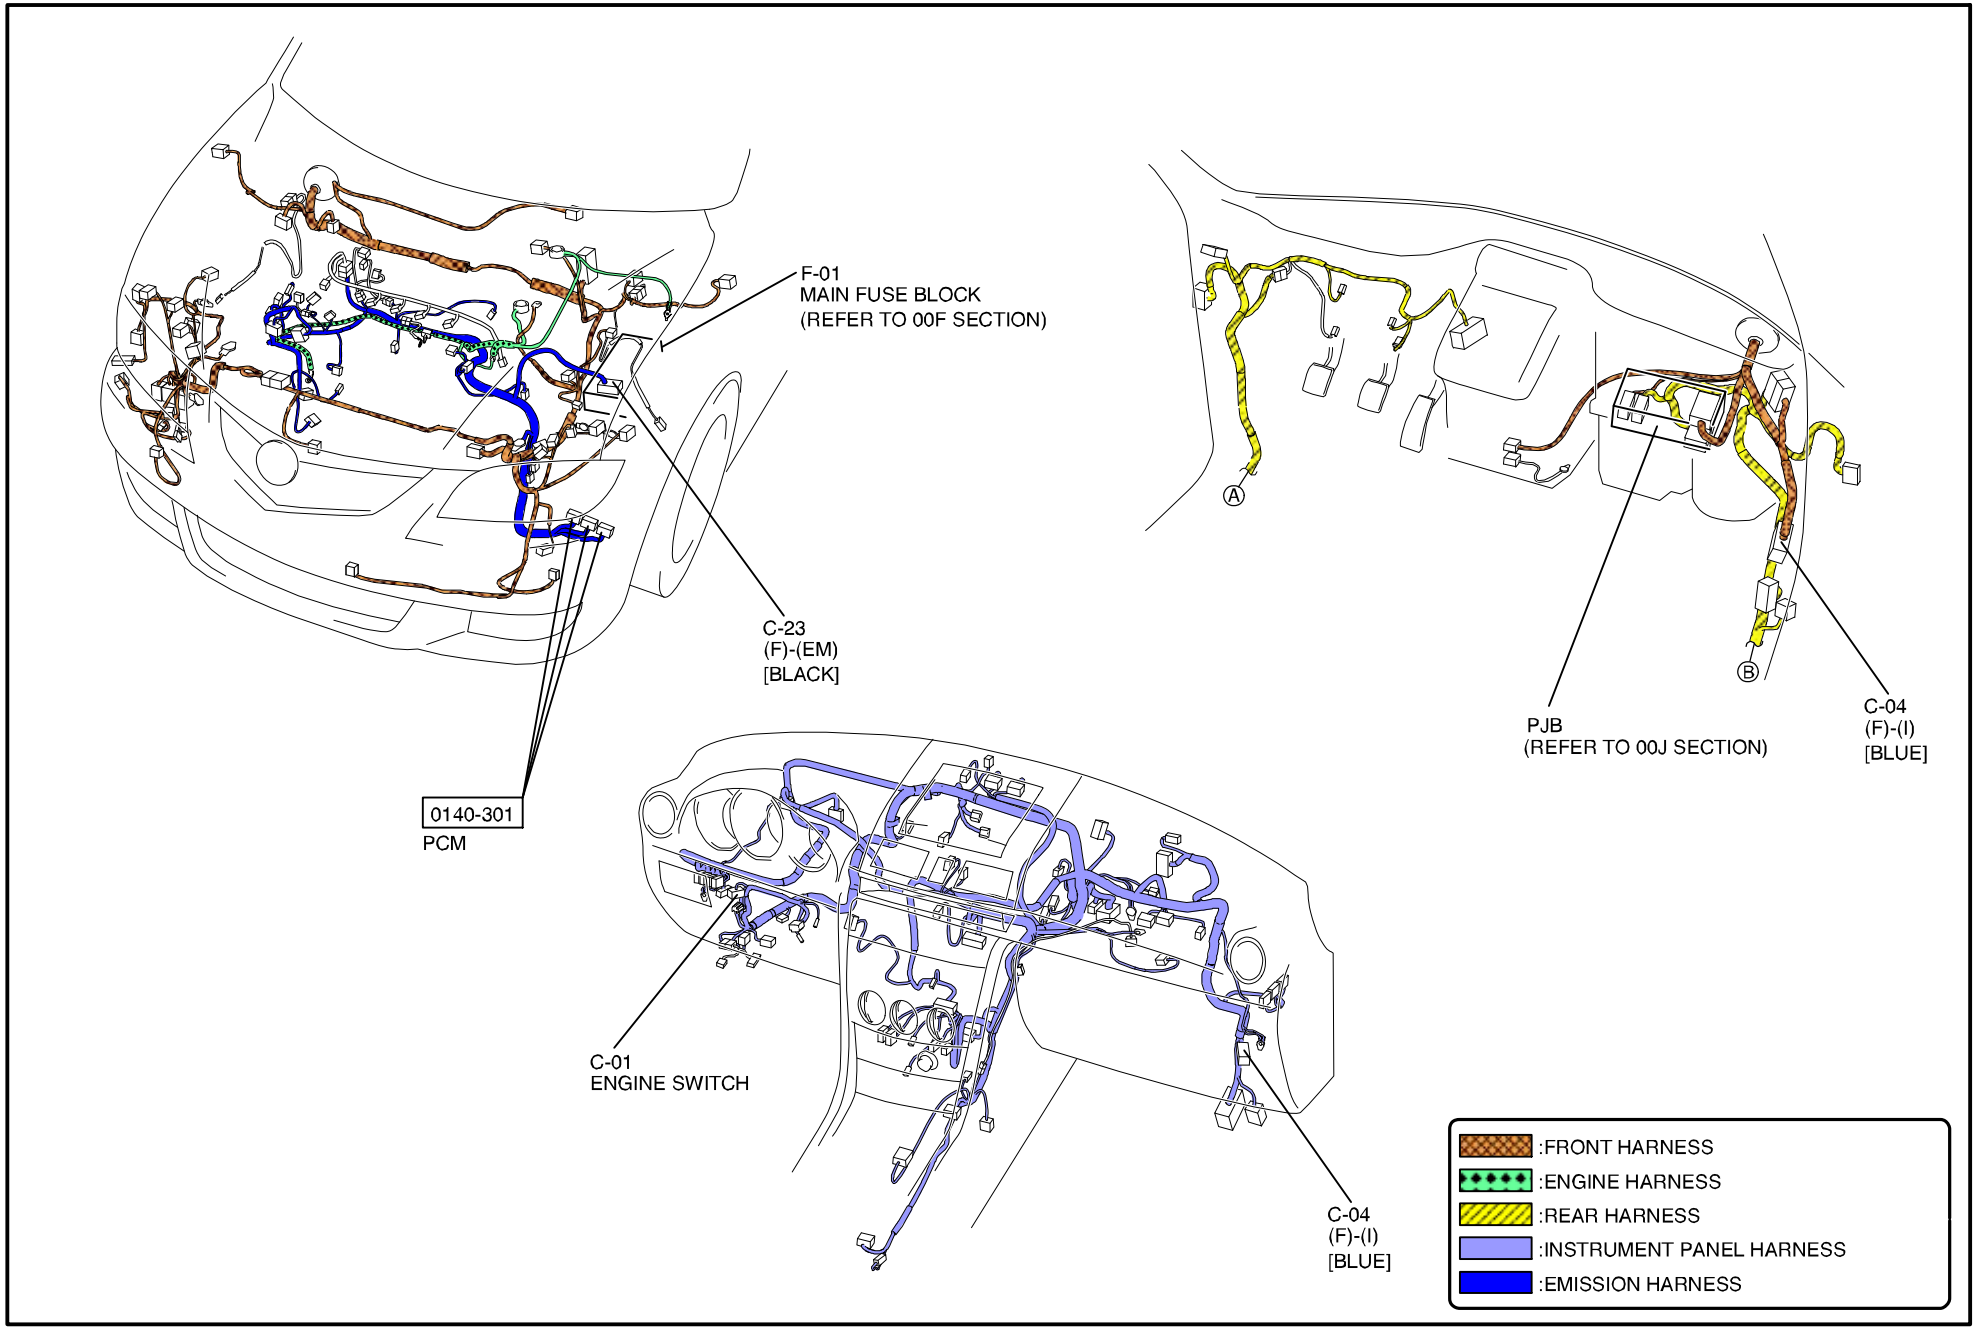

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-23
(F)-(EM)
[BLACK]
0140-301
PCM
Ⓐ
Ⓑ
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
C-01
ENGINE SWITCH
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

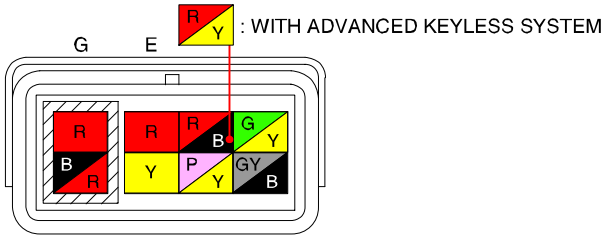


C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

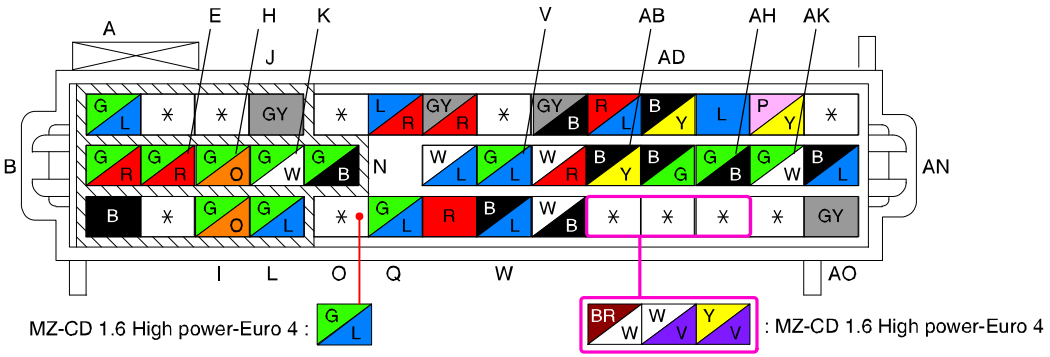


EMISSION HARNESS

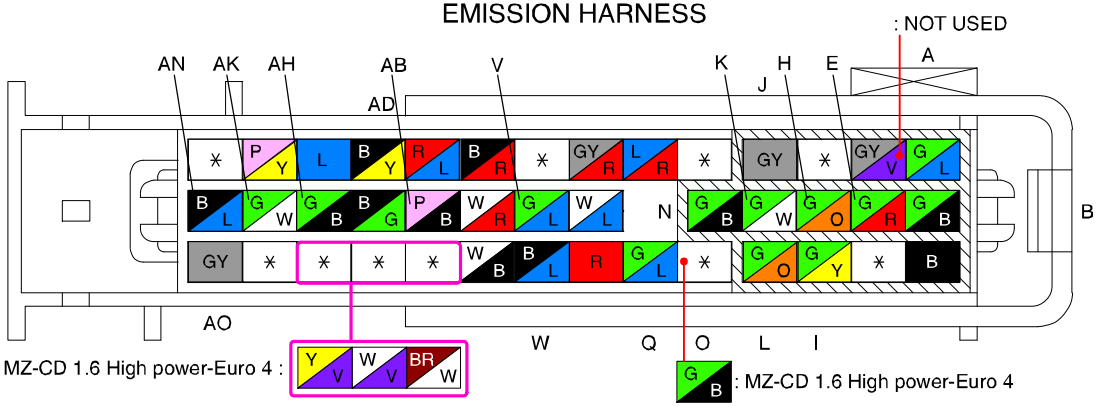



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

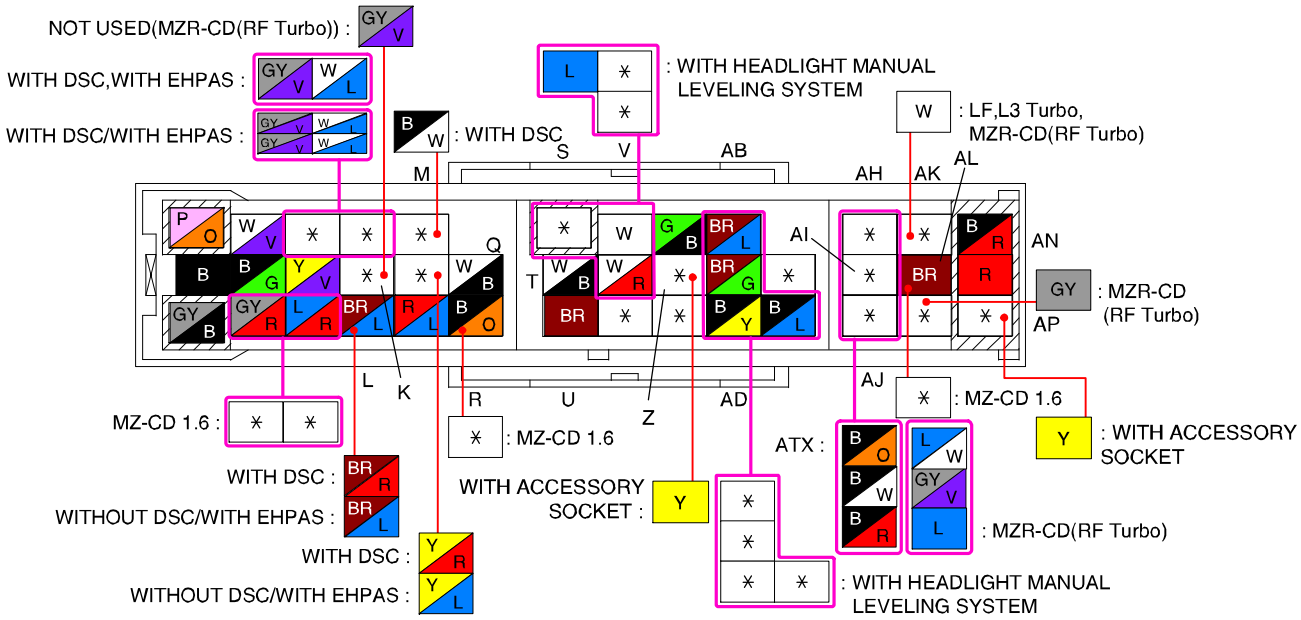


INSTRUMENT PANEL HARNESS

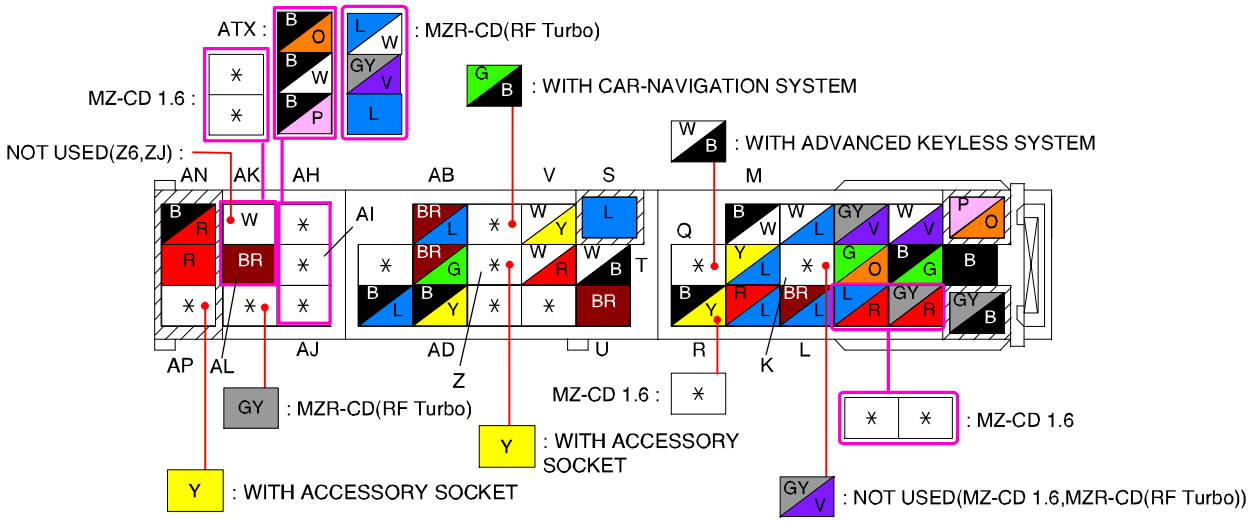


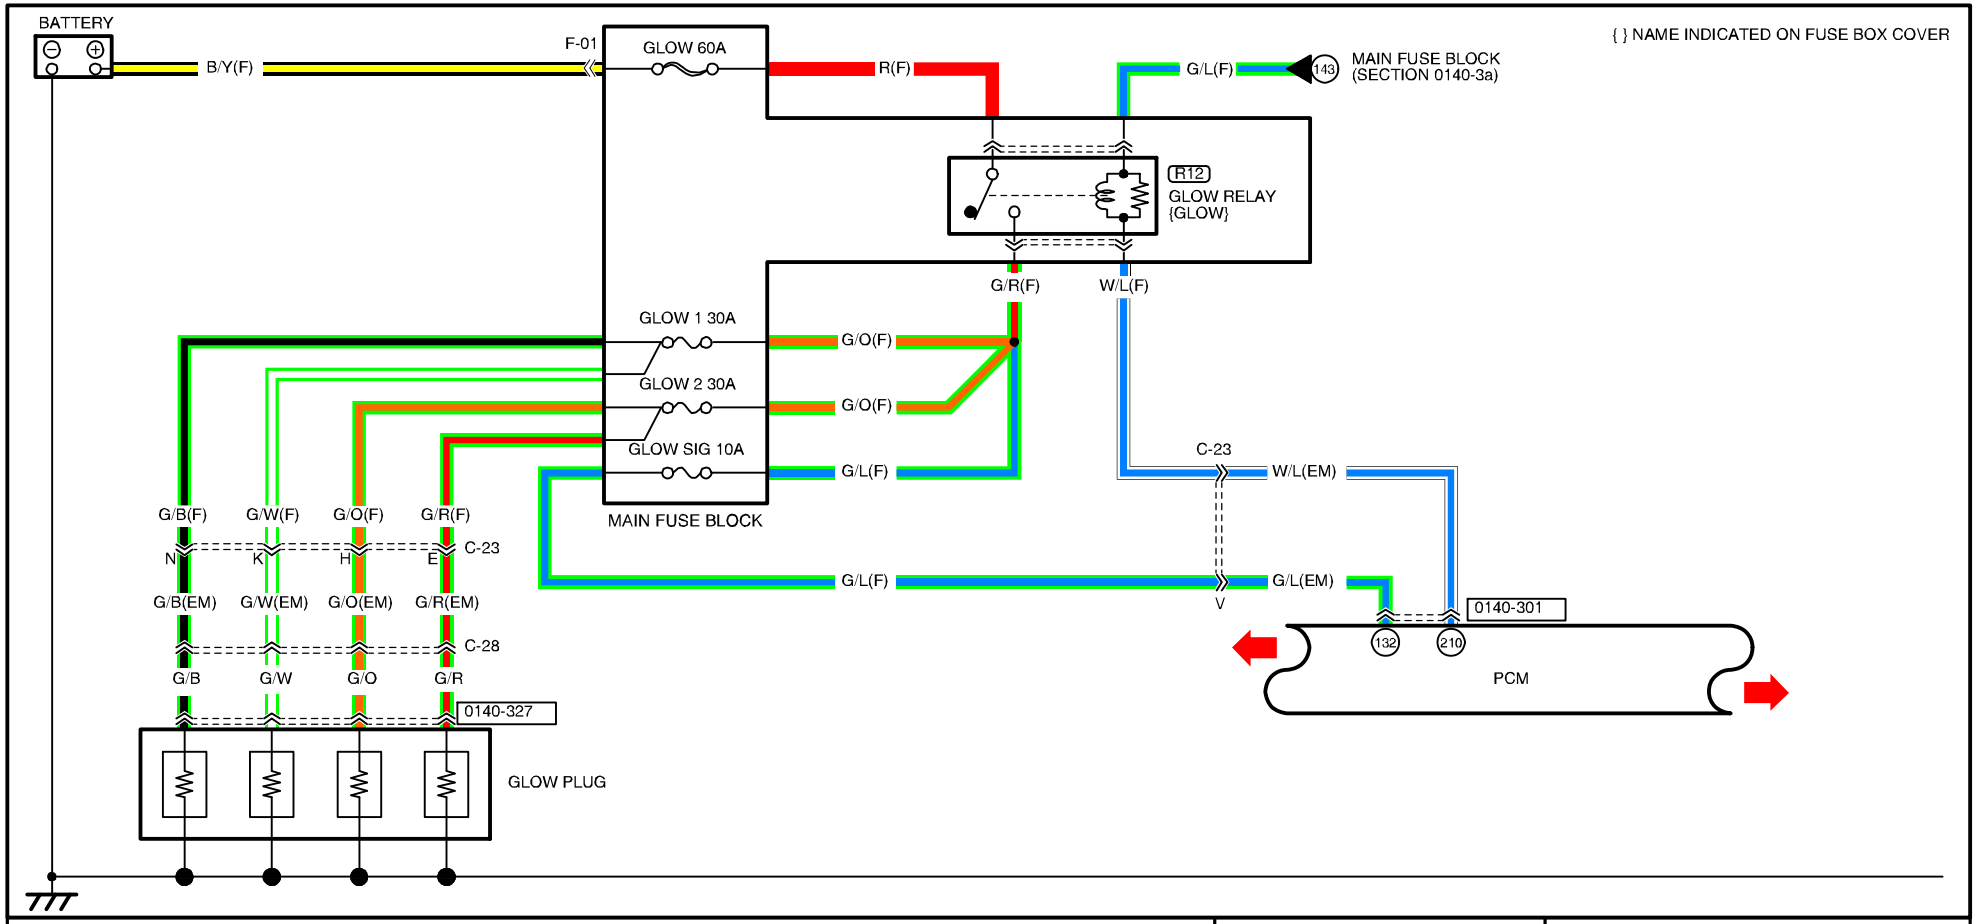


0140-301
PCM

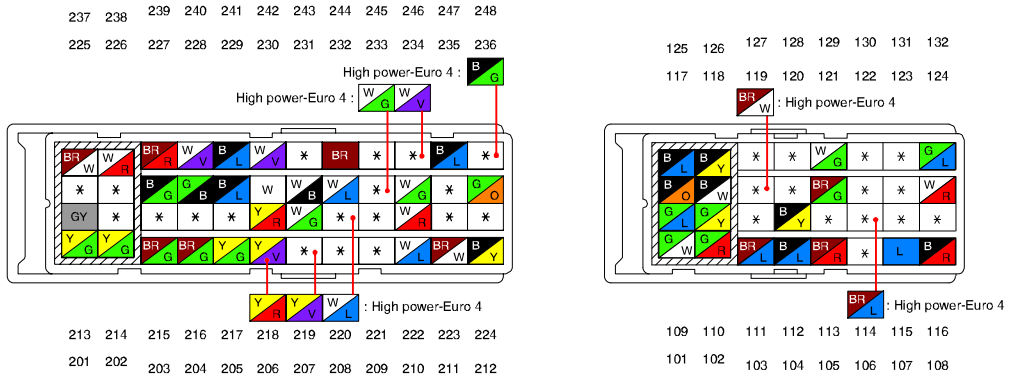


0140-327
GLOW PLUG



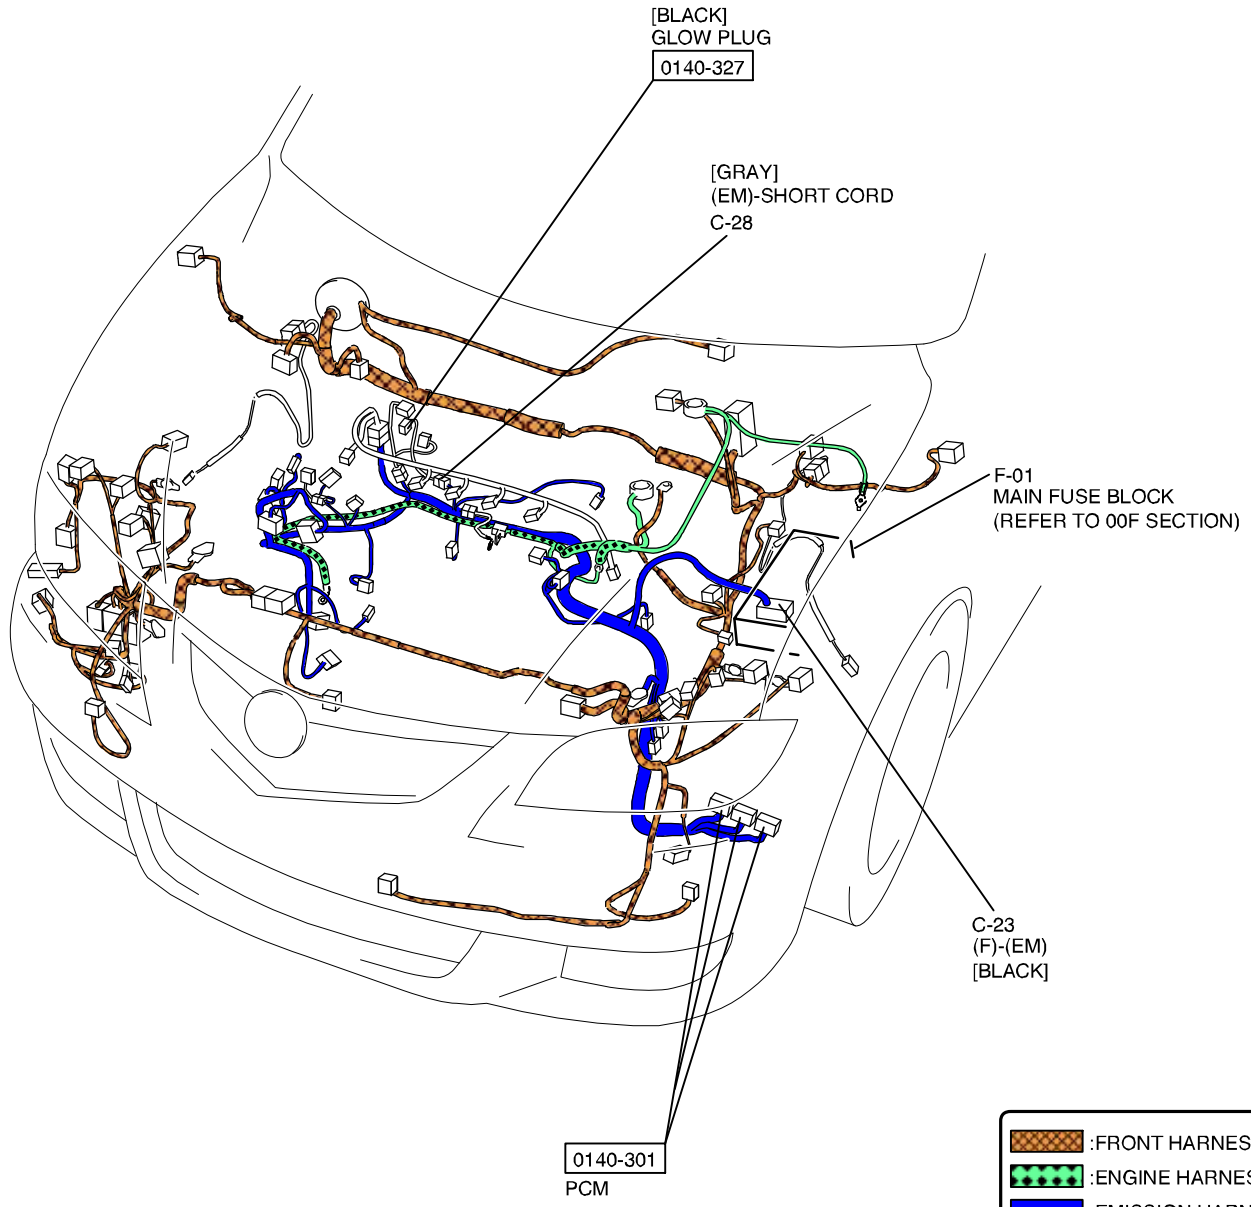

[BLACK]
GLOW PLUG
0140-327
[GRAY]
(EM)-SHORT CORD
C-28
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-23
(F)-(EM)
[BLACK]
0140-301
PCM
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS

C-28
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

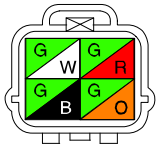


SHORT CORD





C-23
FRONT HARNESS-EMISSION HARNESS


FRONT HARNESS

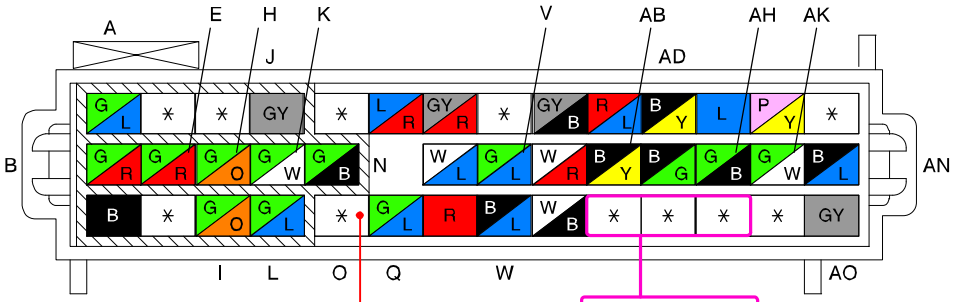


EMISSION HARNESS

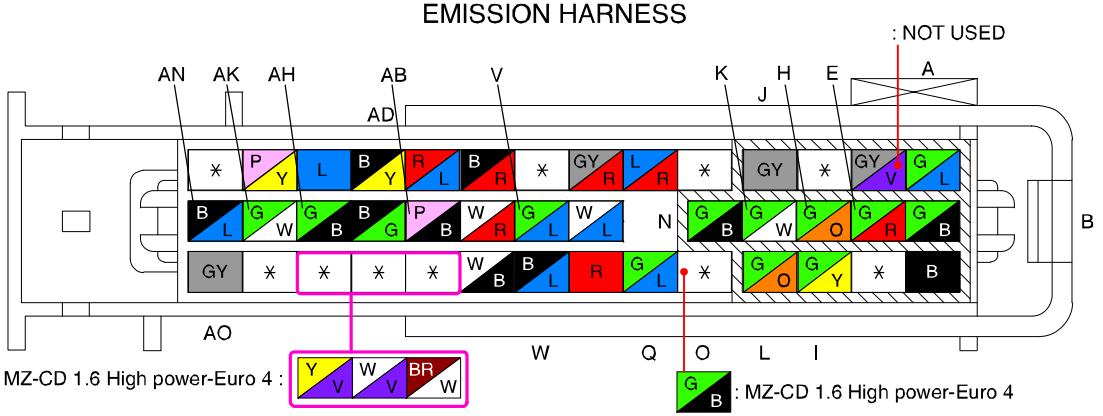

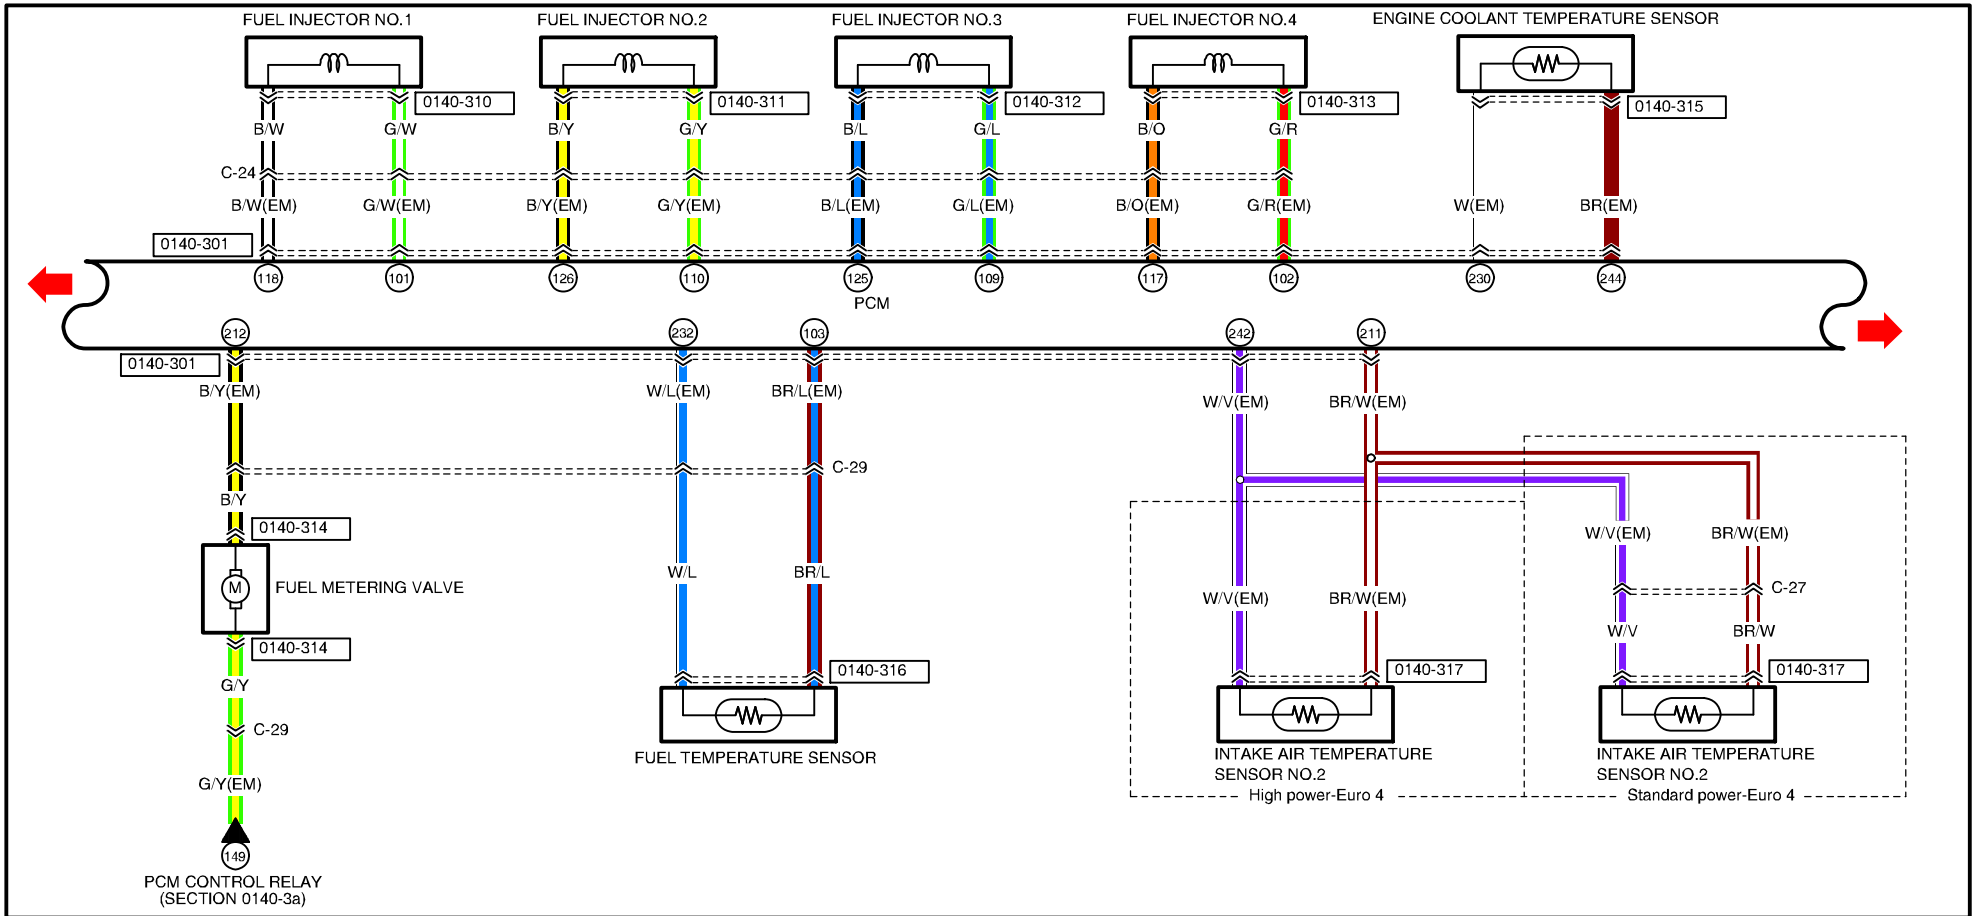


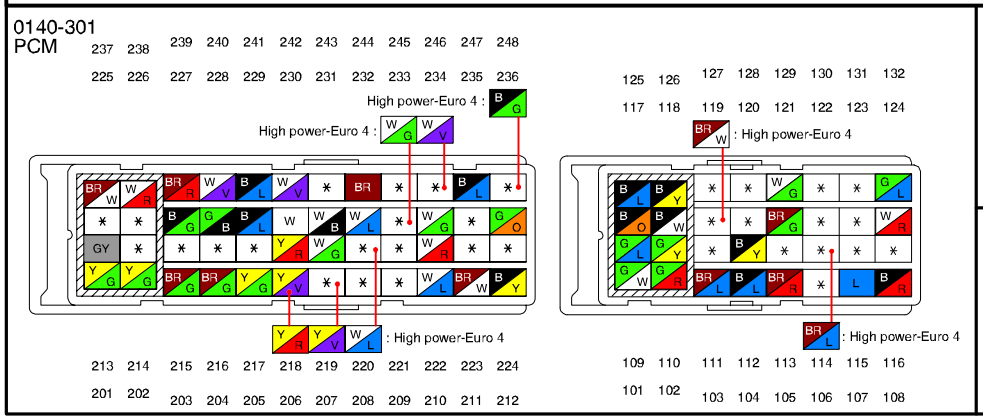


0140-310
FUEL INJECTOR NO.1




0140-311
FUEL INJECTOR NO.2




0140-312
FUEL INJECTOR NO.3



0140-313
FUEL INJECTOR NO.4




0140-314
FUEL METERING VALVE




0140-315
ENGINE COOLANT TEMPERATURE SENSOR




0140-316
FUEL TEMPERATURE SENSOR




0140-317
INTAKE AIR TEMPERATURE SENSOR NO.2



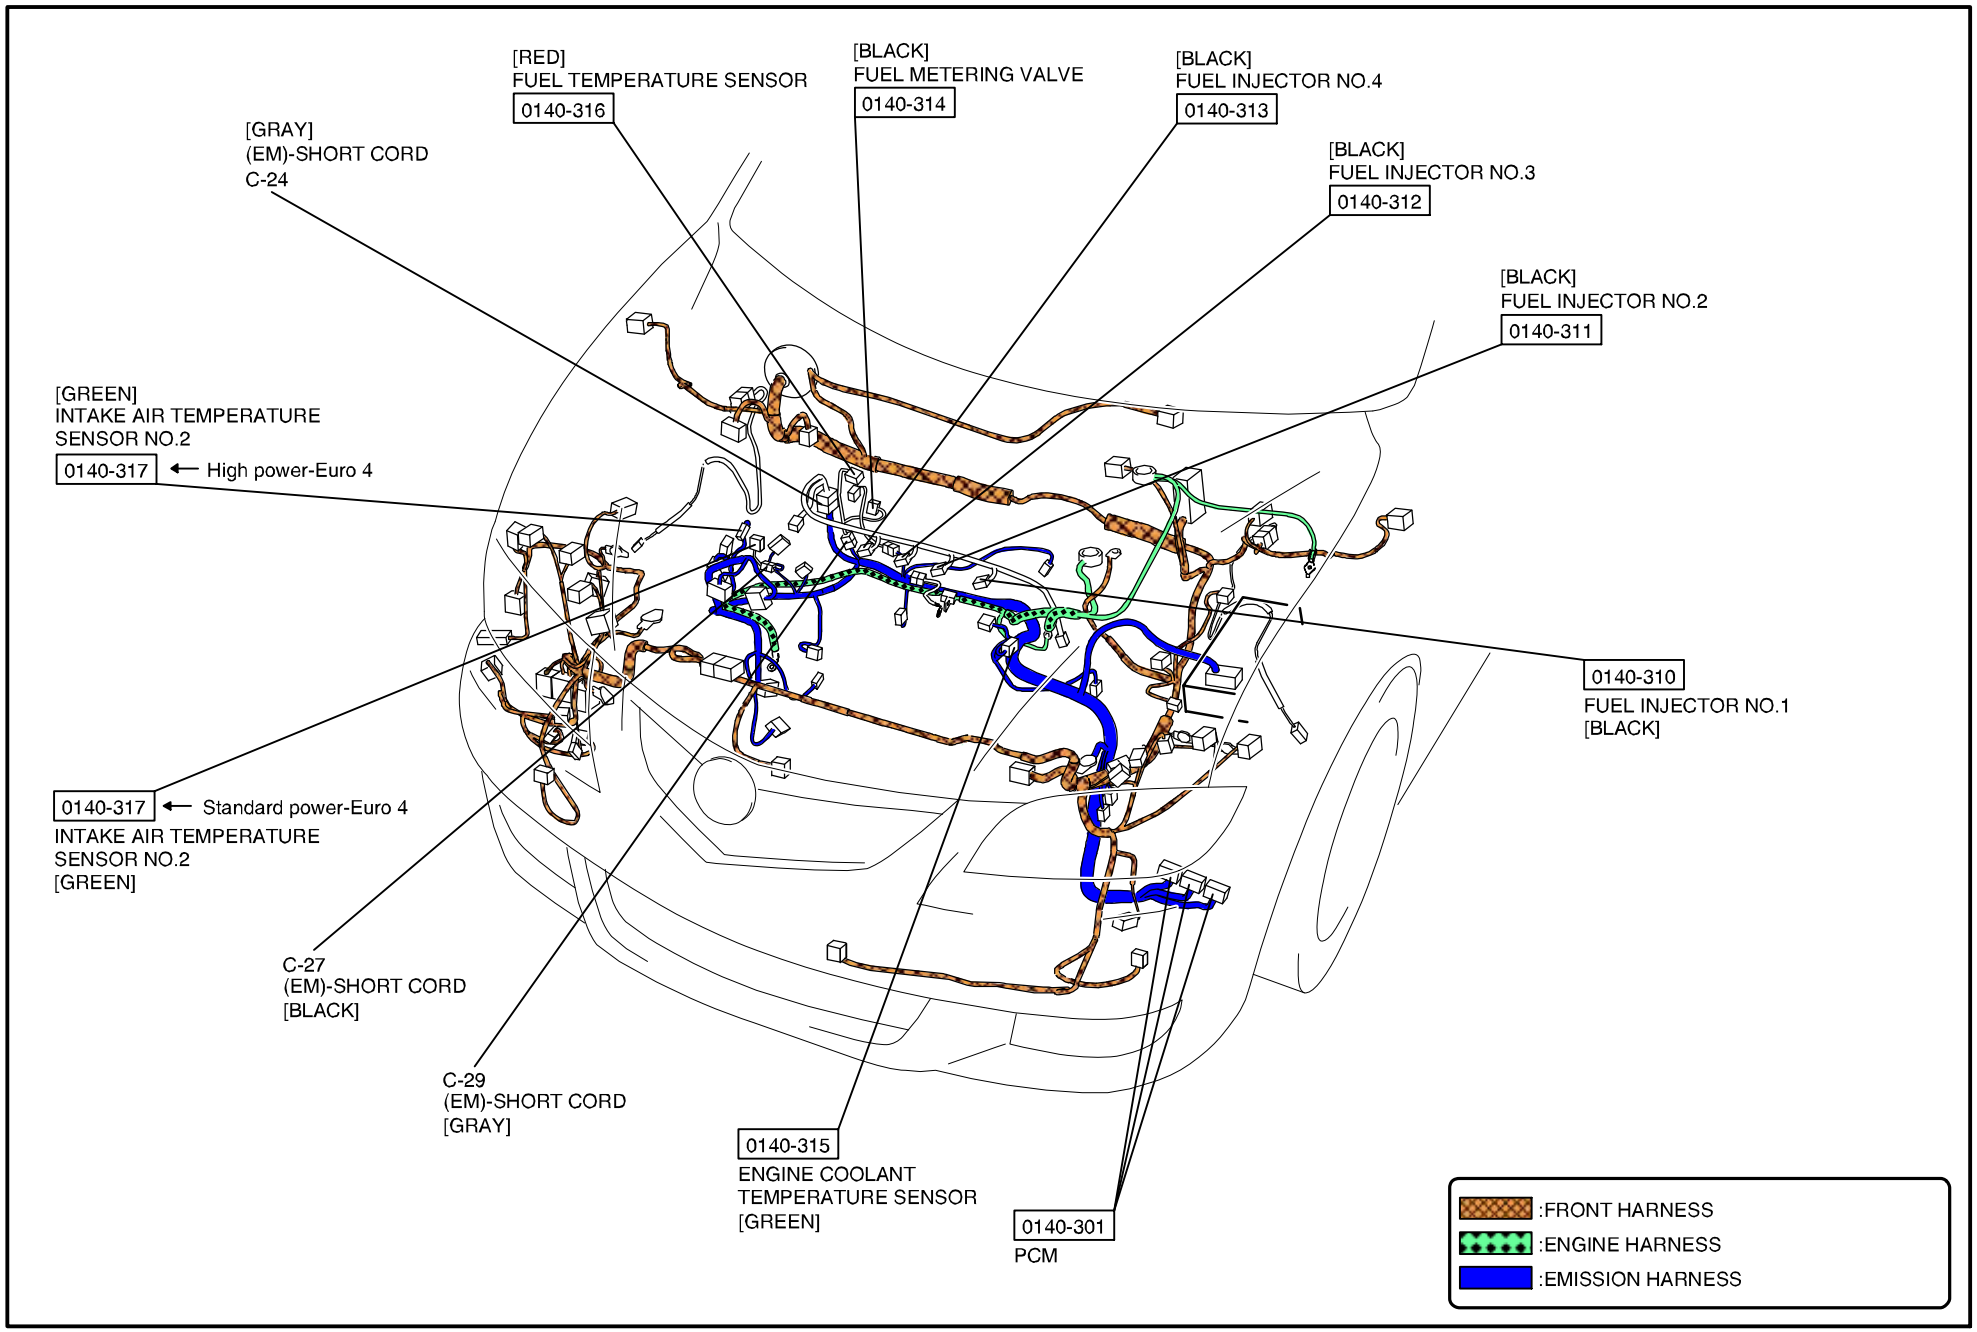

[RED]
FUEL TEMPERATURE SENSOR
0140-316
[BLACK]
FUEL METERING VALVE
0140-314
[BLACK]
FUEL INJECTOR NO.4
0140-313
[GRAY]
(EM)-SHORT CORD
C-24
[BLACK]
FUEL INJECTOR NO.3
0140-312
[BLACK]
FUEL INJECTOR NO.2
0140-311
[GREEN]
INTAKE AIR TEMPERATURE
SENSOR NO.2
0140-317
← High power-Euro 4
0140-310
FUEL INJECTOR NO.1
[BLACK]
0140-317
← Standard power-Euro 4
INTAKE AIR TEMPERATURE
SENSOR NO.2
[GREEN]
C-27
(EM)-SHORT CORD
[BLACK]
C-29
(EM)-SHORT CORD
[GRAY]
0140-315
ENGINE COOLANT
TEMPERATURE SENSOR
[GREEN]
0140-301
PCM
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS

C-24
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

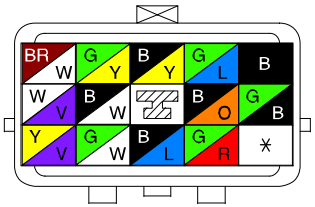


SHORT CORD

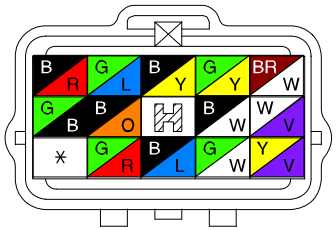


C-27
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

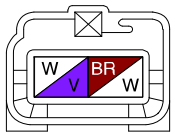


SHORT CORD





C-29
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

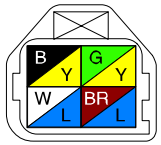


SHORT CORD

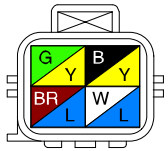


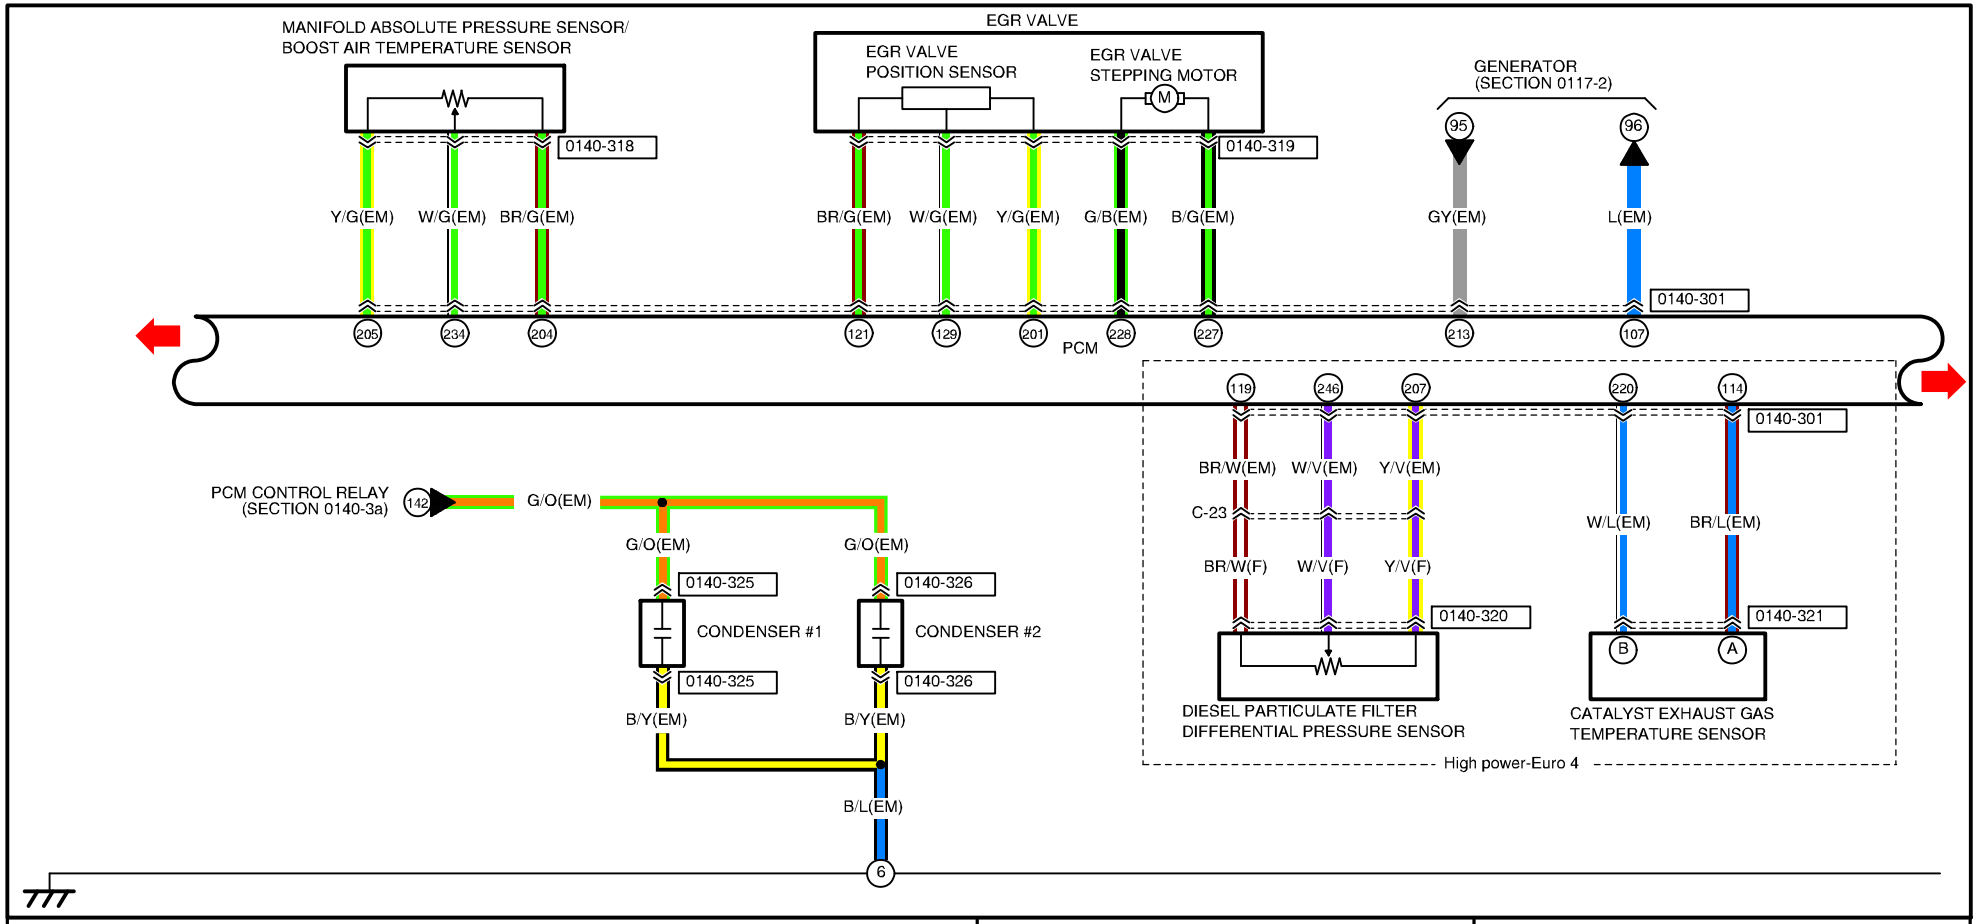


0140-301
PCM

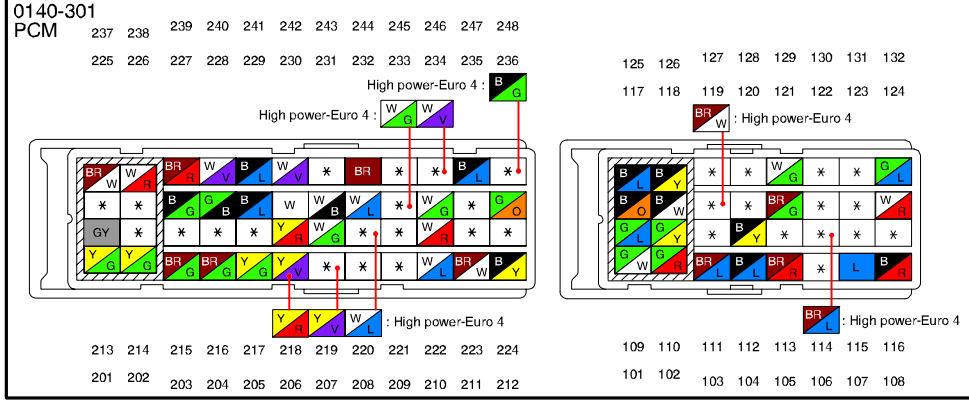


0140-318
MANIFOLD ABSOLUTE PRESSURE SENSOR/BOOST AIR TEMPERATURE SENSOR




0140-319
EGR VALVE



0140-320
DIESEL PARTICULATE FILTER DIFFERENTIAL PRESSURE SENSOR



0140-321
CATALYST EXHAUST GAS TEMPERATURE SENSOR




0140-325
CONDENSER #1




0140-326
CONDENSER #2

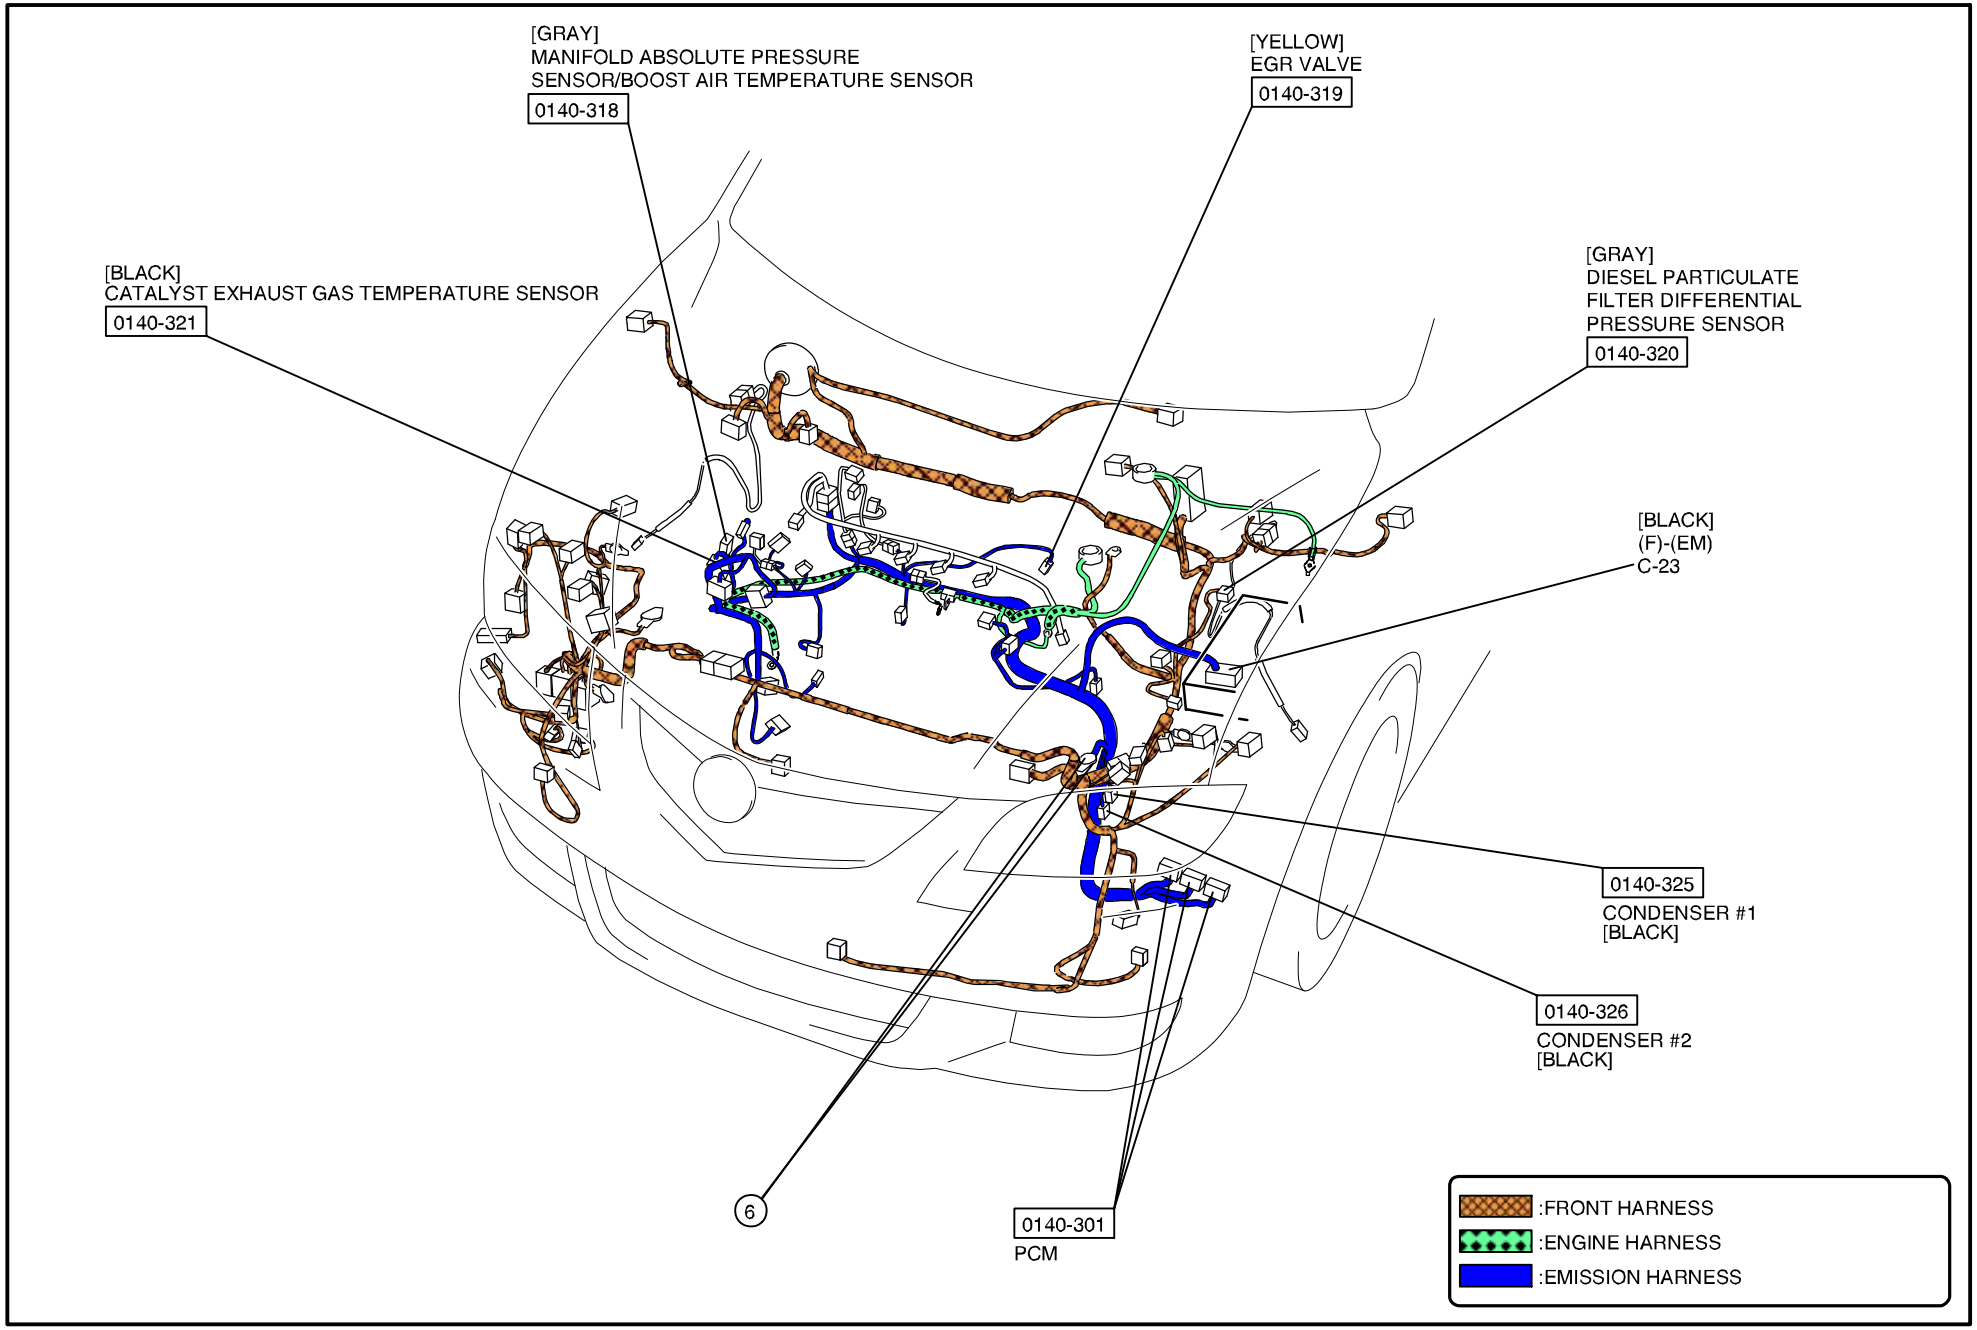



[GRAY]
MANIFOLD ABSOLUTE PRESSURE
SENSOR/BOOST AIR TEMPERATURE SENSOR
0140-318
[YELLOW]
EGR VALVE
0140-319
[BLACK]
CATALYST EXHAUST GAS TEMPERATURE SENSOR
0140-321
[GRAY]
DIESEL PARTICULATE
FILTER DIFFERENTIAL
PRESSURE SENSOR
0140-320
[BLACK]
(F)-(EM)
C-23
0140-325
CONDENSER #1
[BLACK]
0140-326
CONDENSER #2
[BLACK]
6
0140-301
PCM
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS


C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

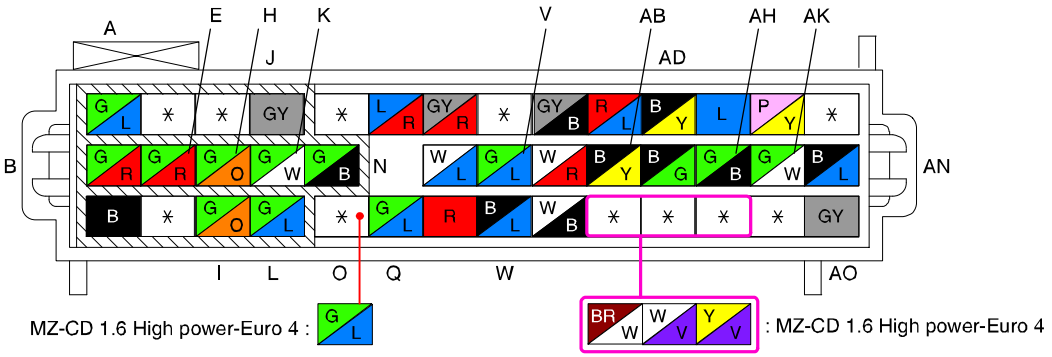

EMISSION HARNESS

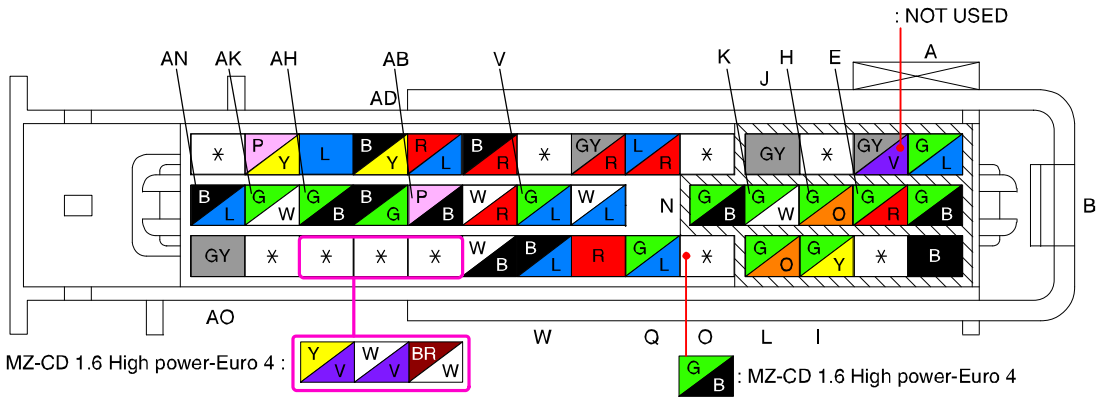

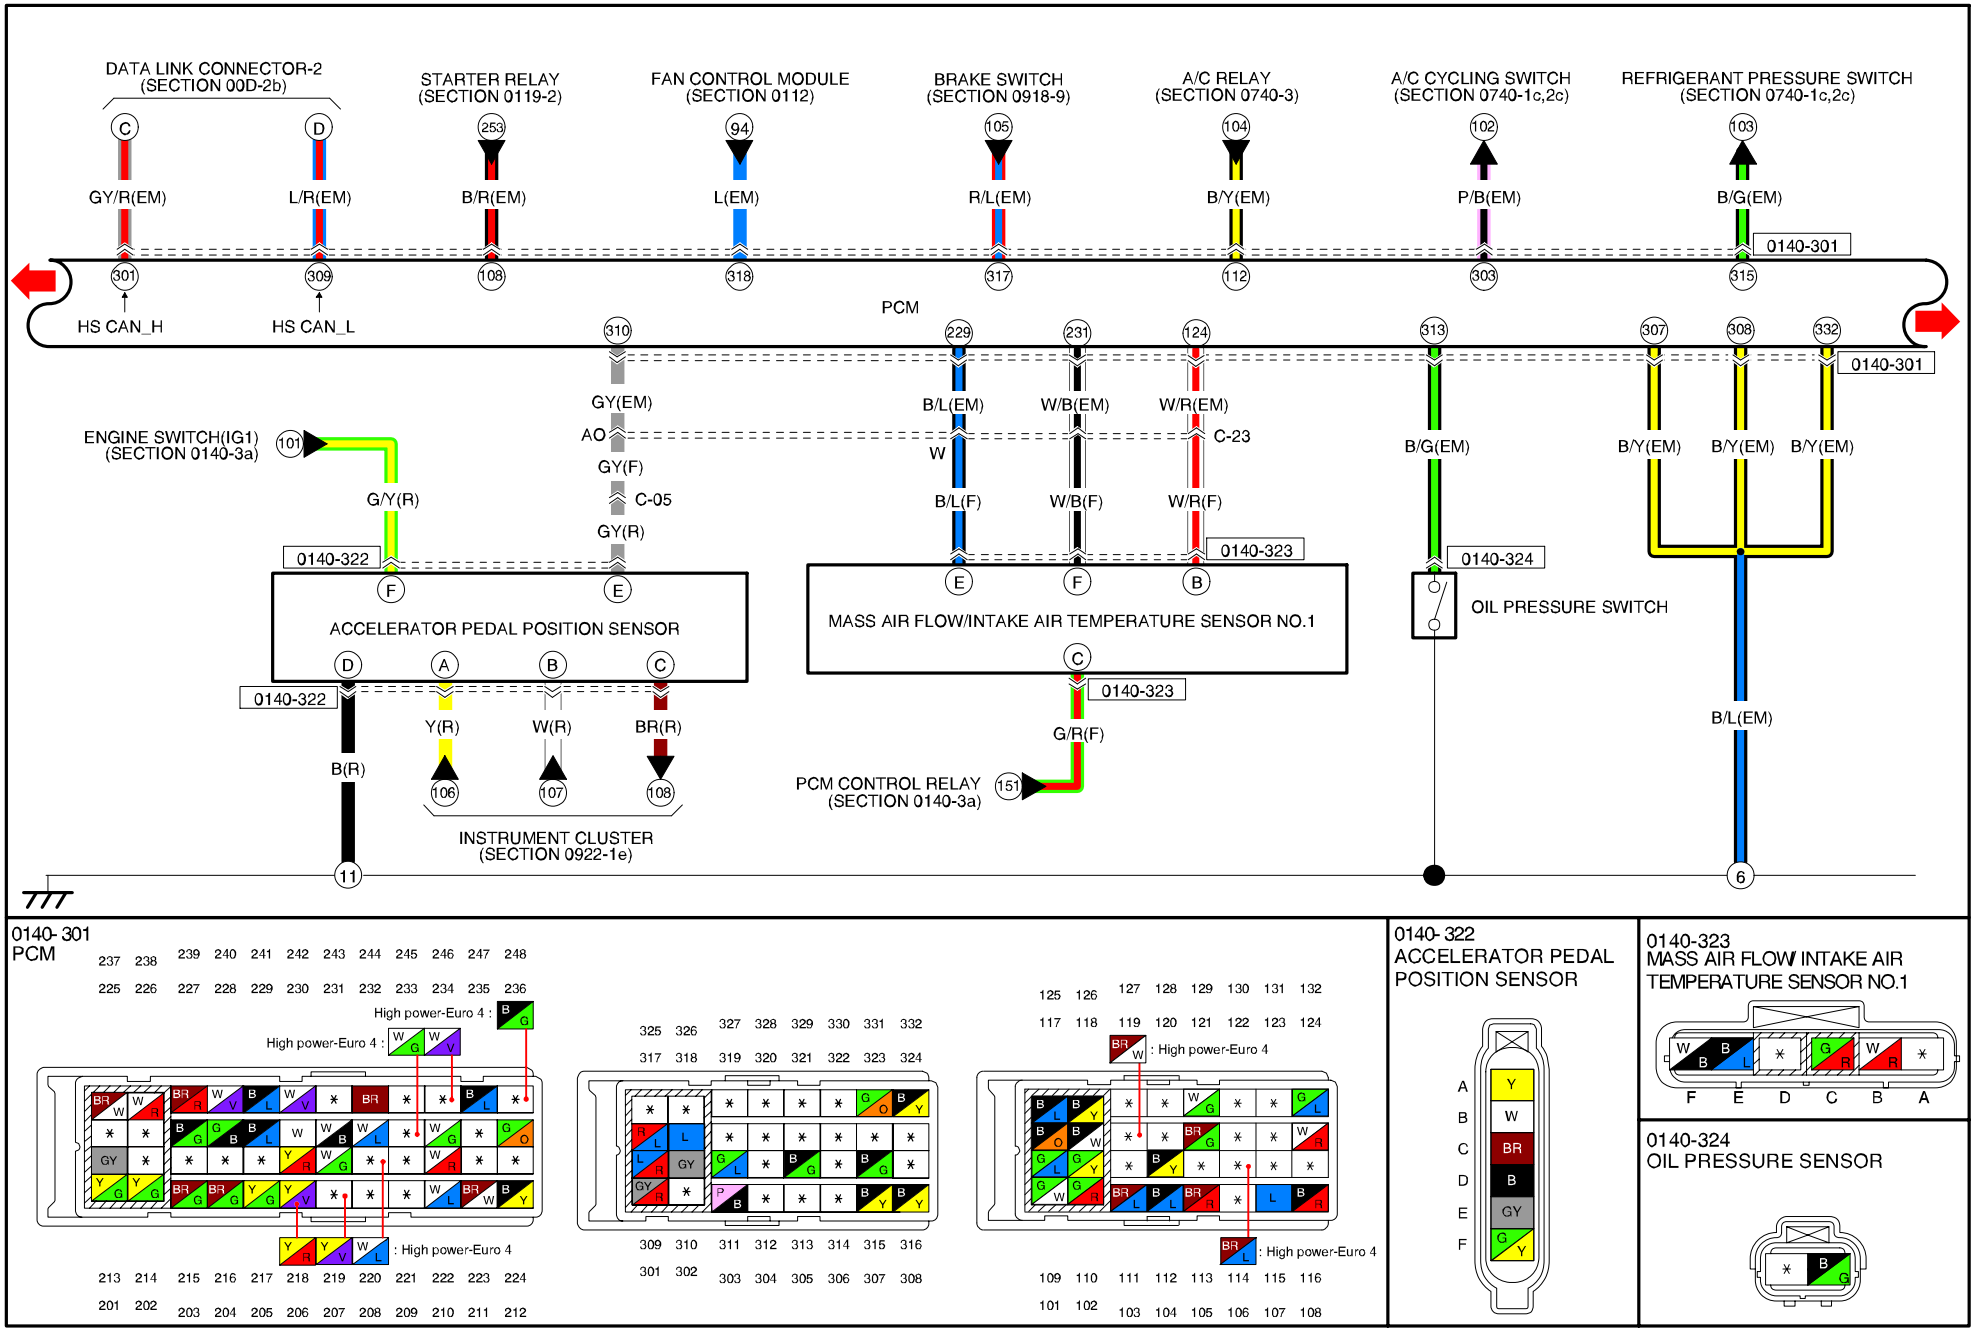


0140- 301
PCM

0140- 322
ACCELERATOR PEDAL
POSITION SENSOR


0140-323
MASS AIR FLOW INTAKE AIR
TEMPERATURE SENSOR NO.1

0140-324
OIL PRESSURE SENSOR

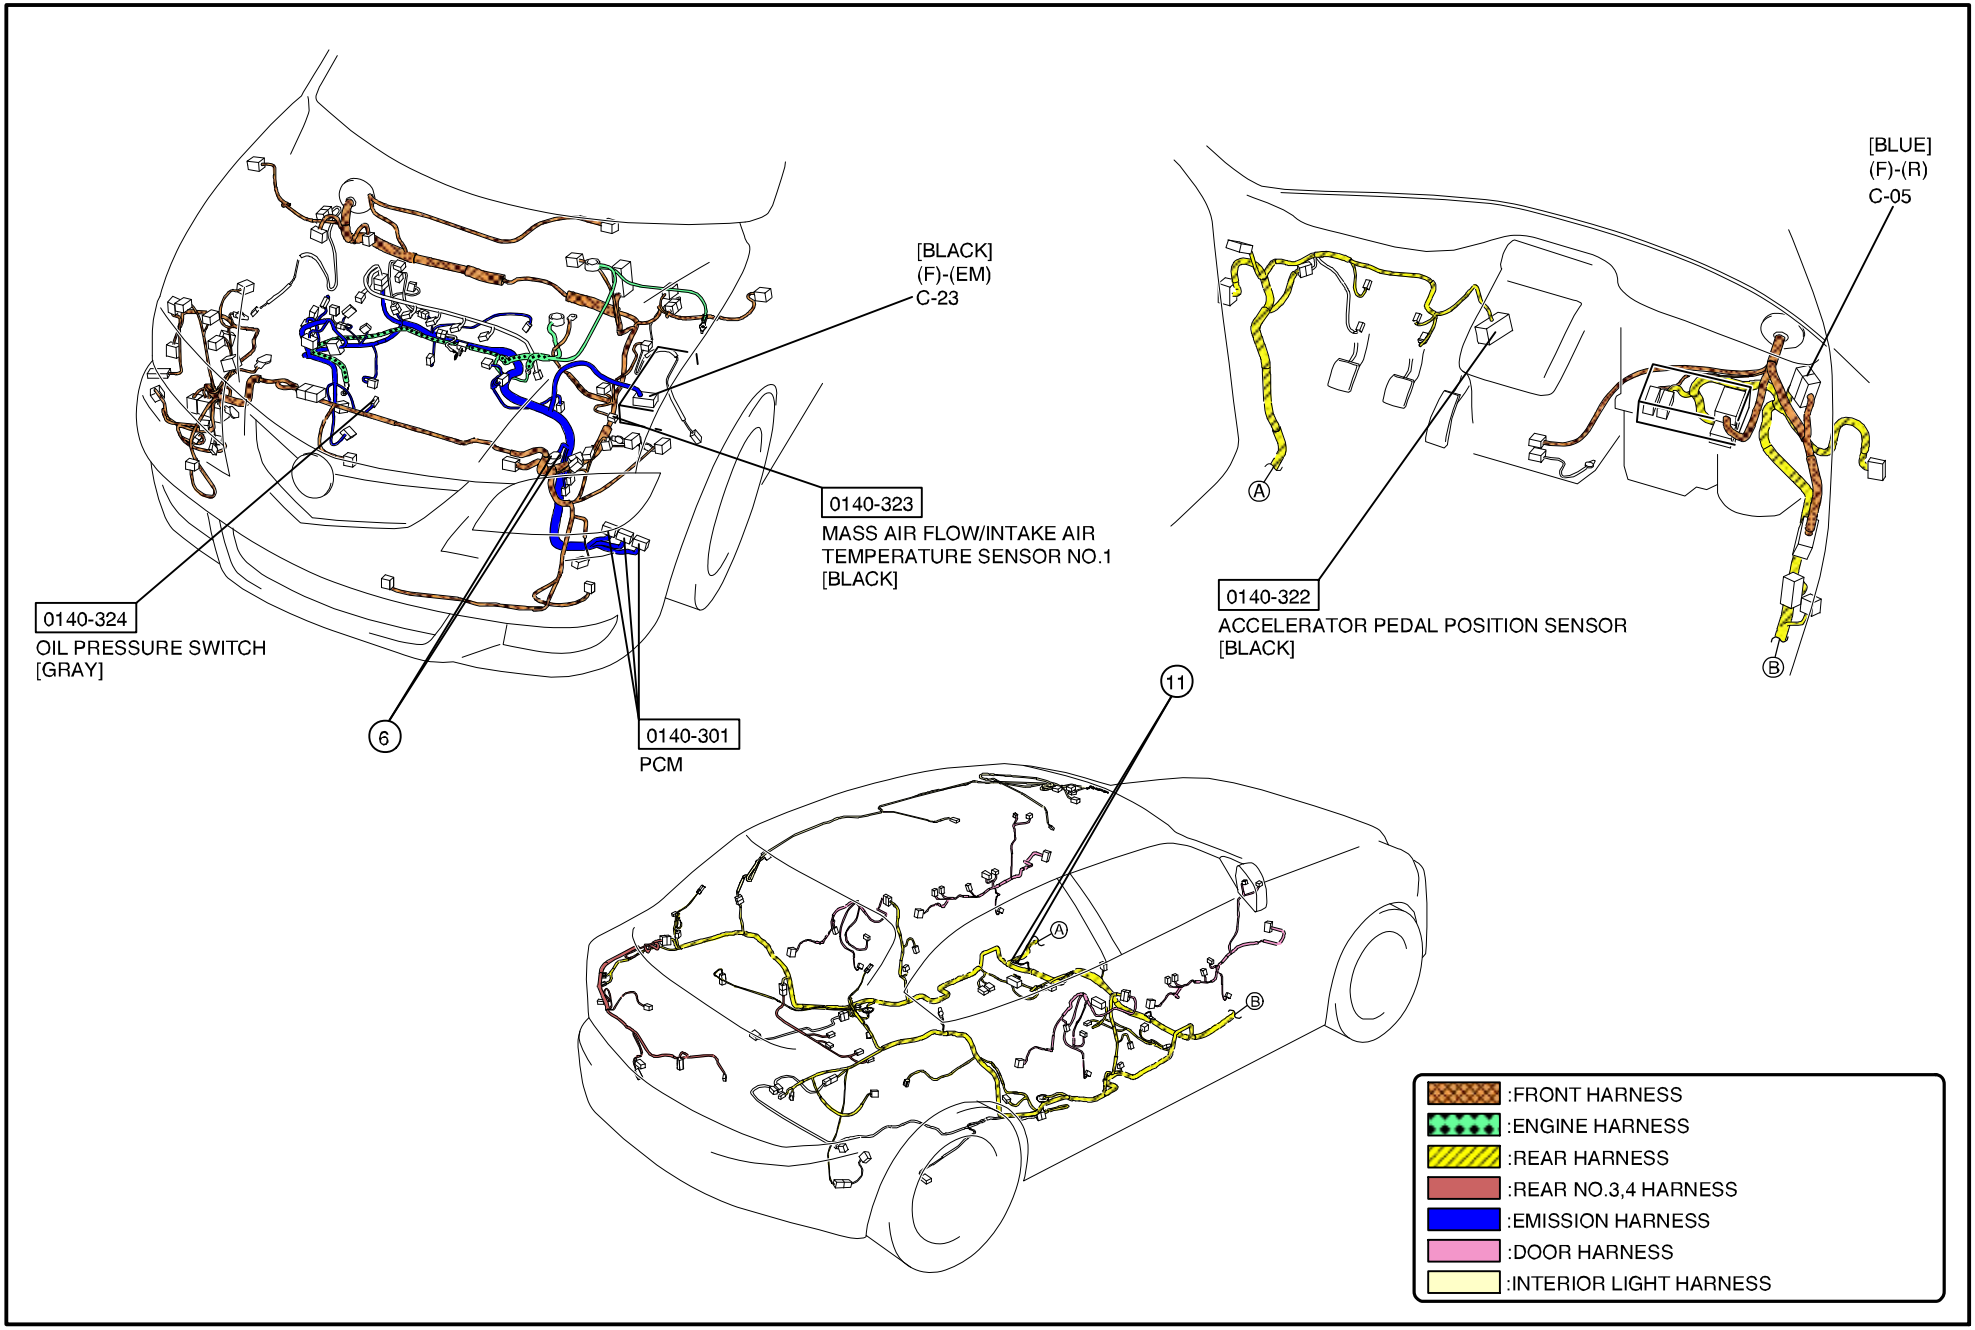

[BLACK]
(F)-(EM)
C-23
0140-323
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR NO.1
[BLACK]
0140-324
OIL PRESSURE SWITCH
[GRAY]
6
0140-301
PCM
[BLUE]
(F)-(R)
C-05
A
0140-322
ACCELERATOR PEDAL POSITION SENSOR
[BLACK]
B
11
A
B
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

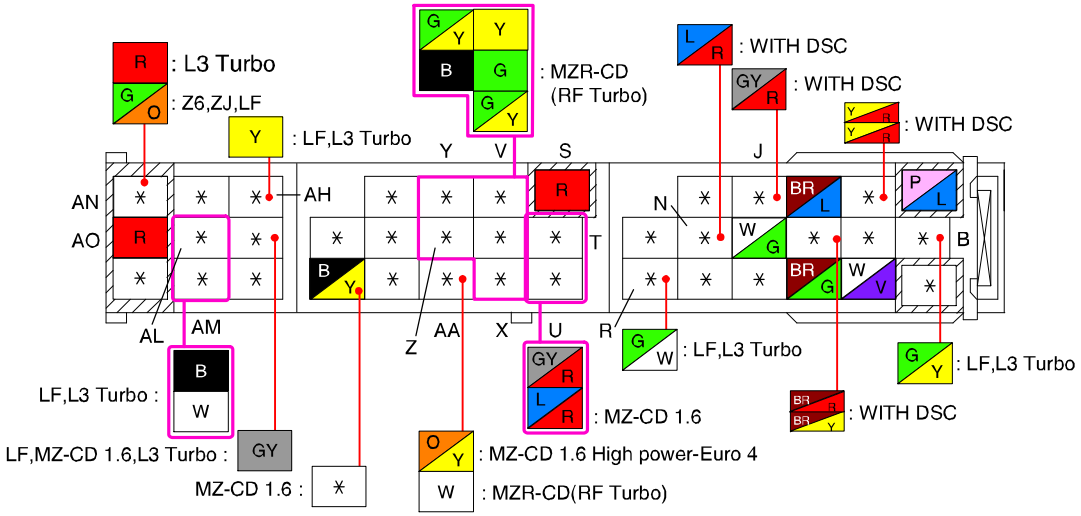


REAR HARNESS

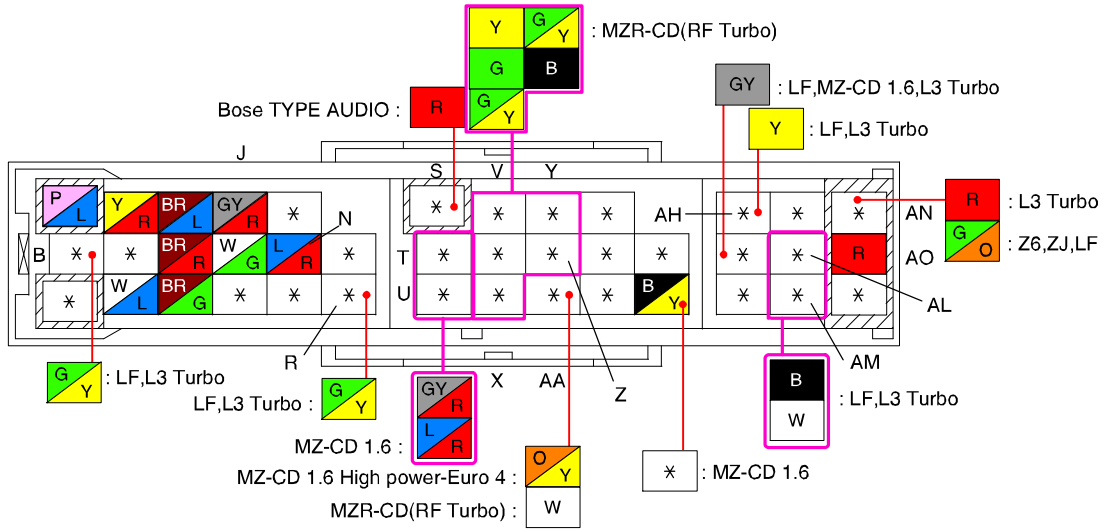



C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

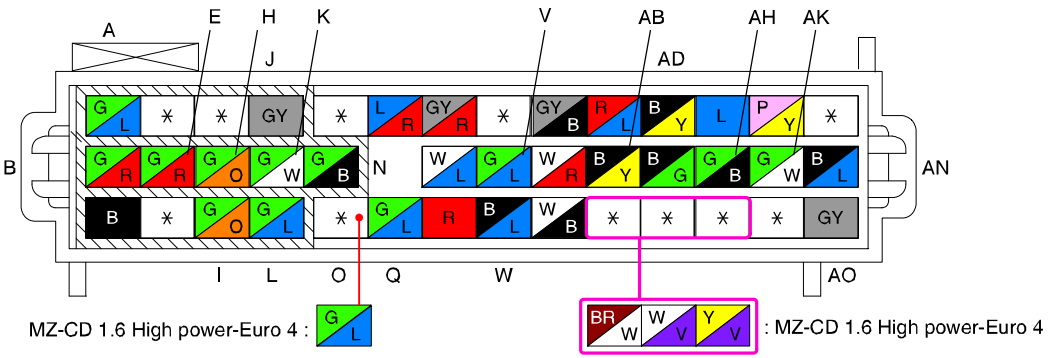

EMISSION HARNESS

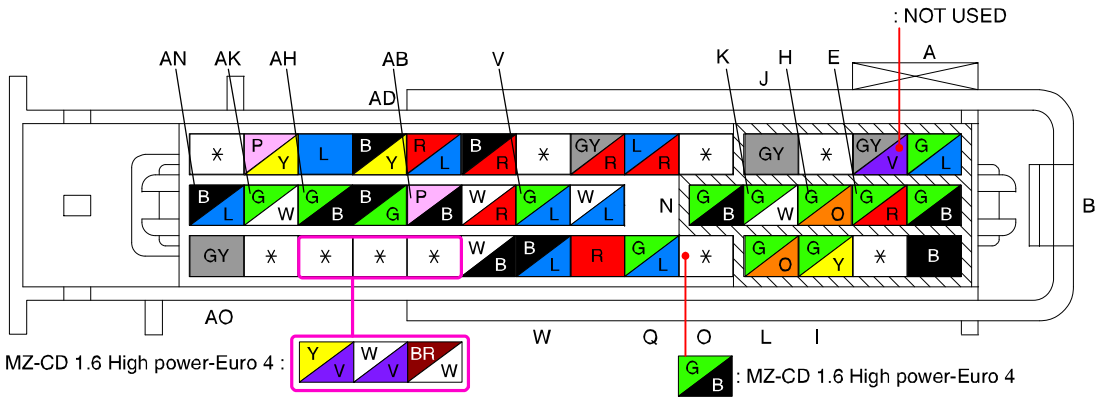

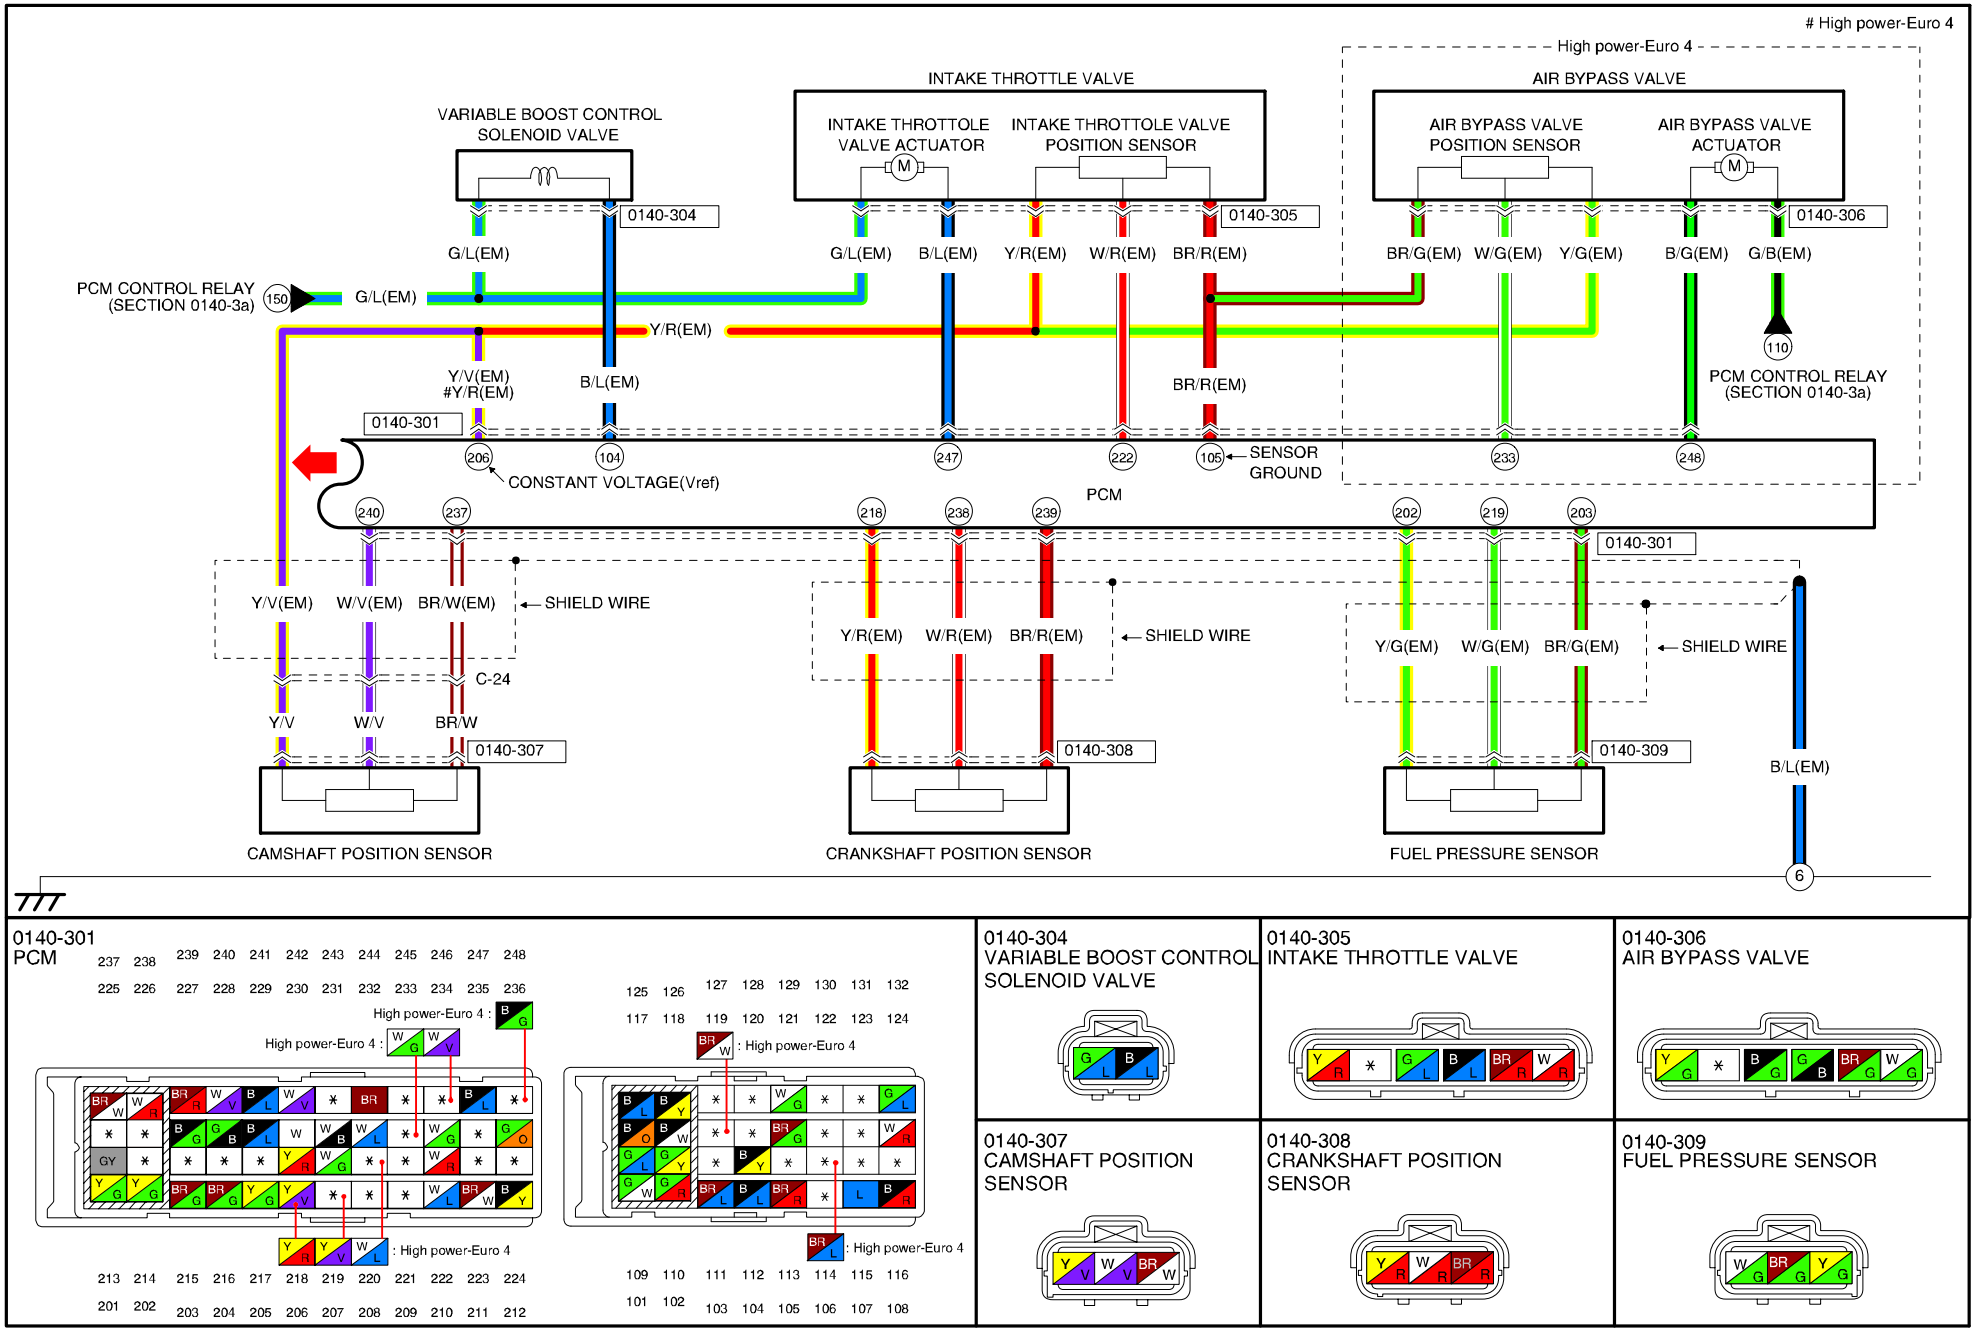

0140-301
PCM

0140-304
VARIABLE BOOST CONTROL SOLENOID VALVE


0140-305
INTAKE THROTTLE VALVE

0140-306
AIR BYPASS VALVE

0140-307
CAMSHAFT POSITION SENSOR


0140-308
CRANKSHAFT POSITION SENSOR

0140-309
FUEL PRESSURE SENSOR

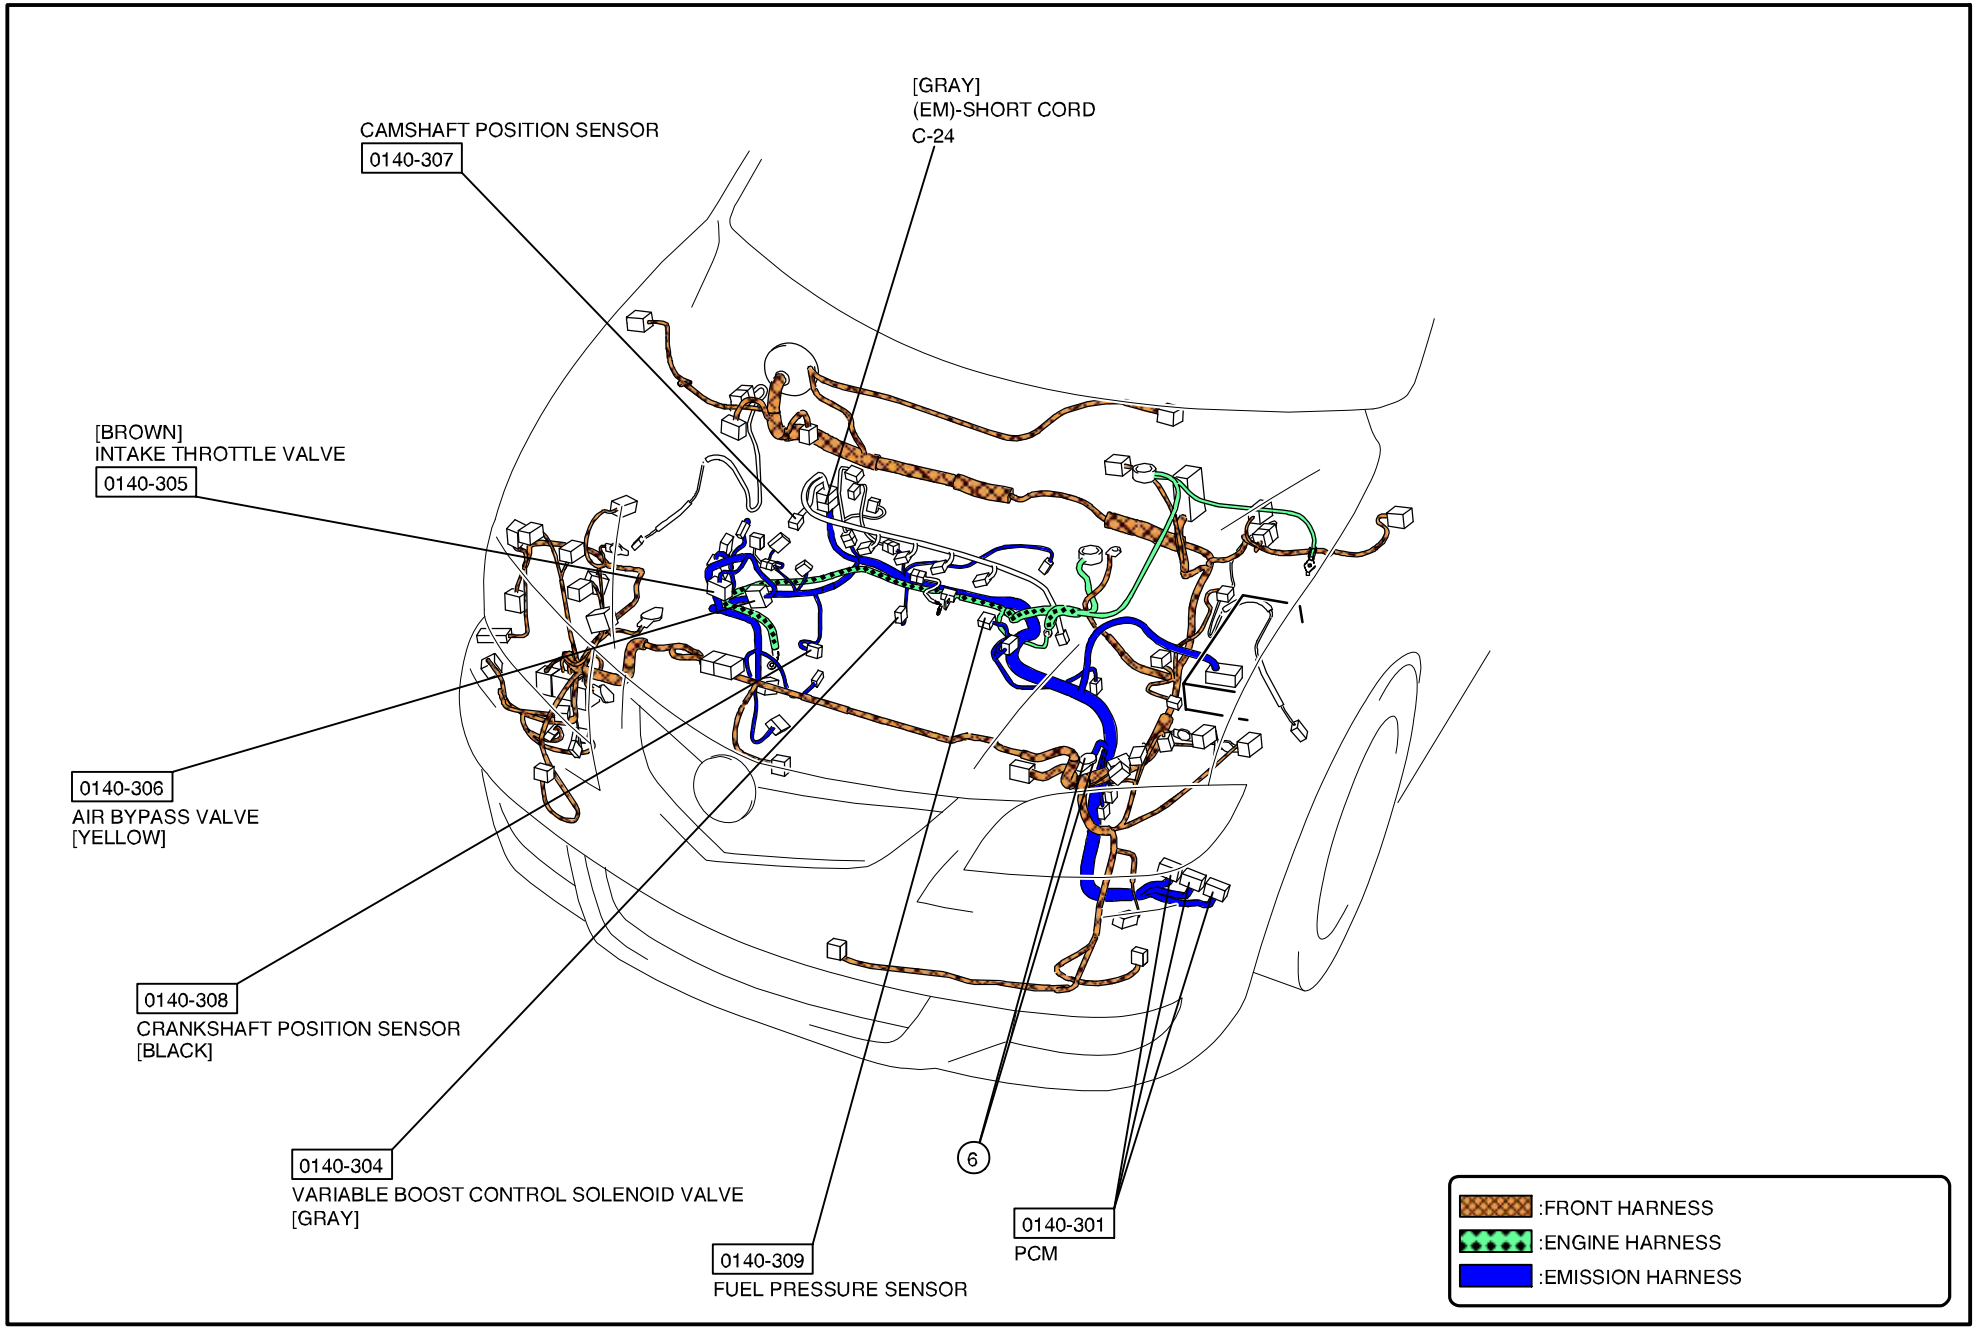

CAMSHAFT POSITION SENSOR
0140-307
[GRAY]
(EM)-SHORT CORD
C-24
[BROWN]
INTAKE THROTTLE VALVE
0140-305
0140-306
AIR BYPASS VALVE
[YELLOW]
0140-308
CRANKSHAFT POSITION SENSOR
[BLACK]
0140-304
VARIABLE BOOST CONTROL SOLENOID VALVE
[GRAY]
0140-309
FUEL PRESSURE SENSOR
6
0140-301
PCM
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS

C-24
EMISSION HARNESS-SHORT CORD


EMISSION HARNESS

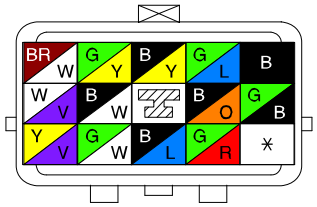


SHORT CORD

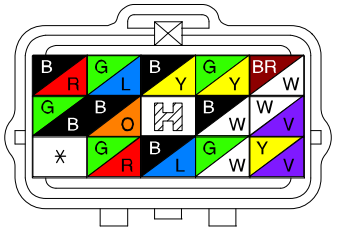


FUEL ADDITIVE CONTROL SYSTEM (MZ-CD 1.6 High power-Euro 4)

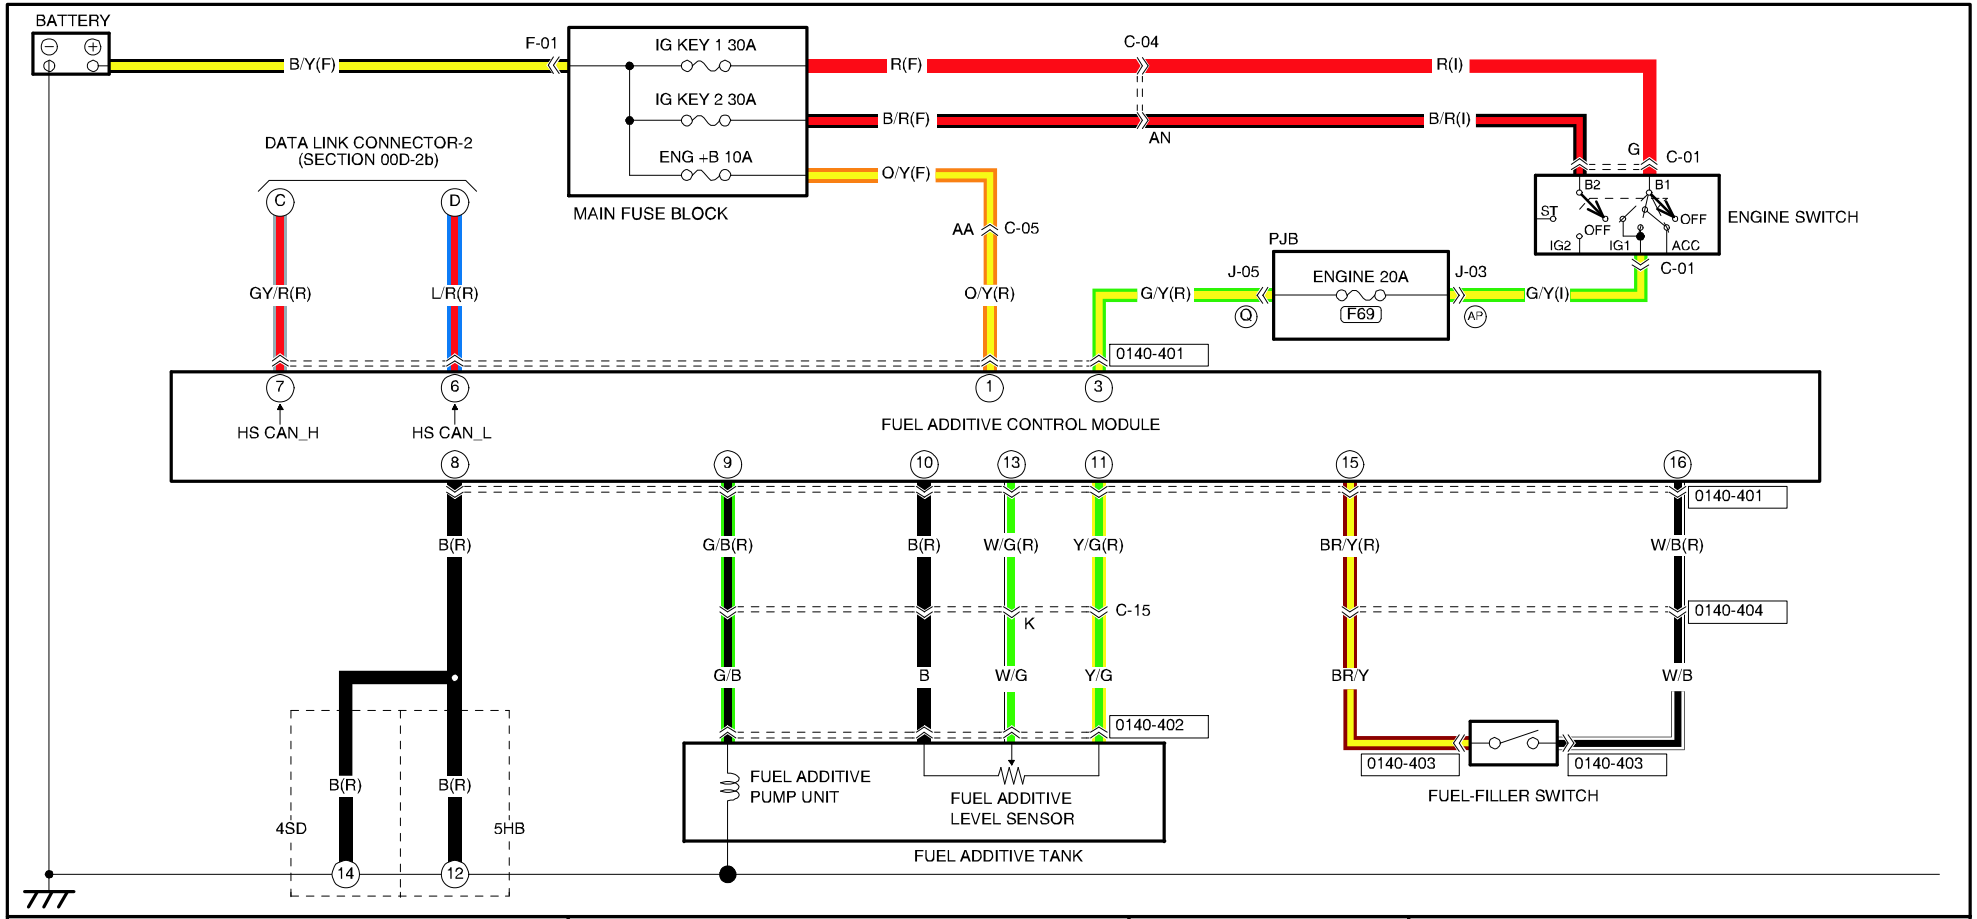


0140-401
FUEL ADDITIVE CONTROL MODULE

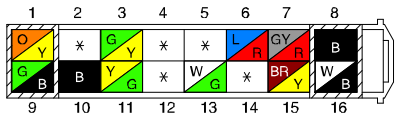

0140-402
FUEL ADDITIVE TANK




0140-403
FUEL-FILLER SWITCH




0140-404
REAR HARNESS-SHORT CORD

REAR HARNESS




SHORT CORD

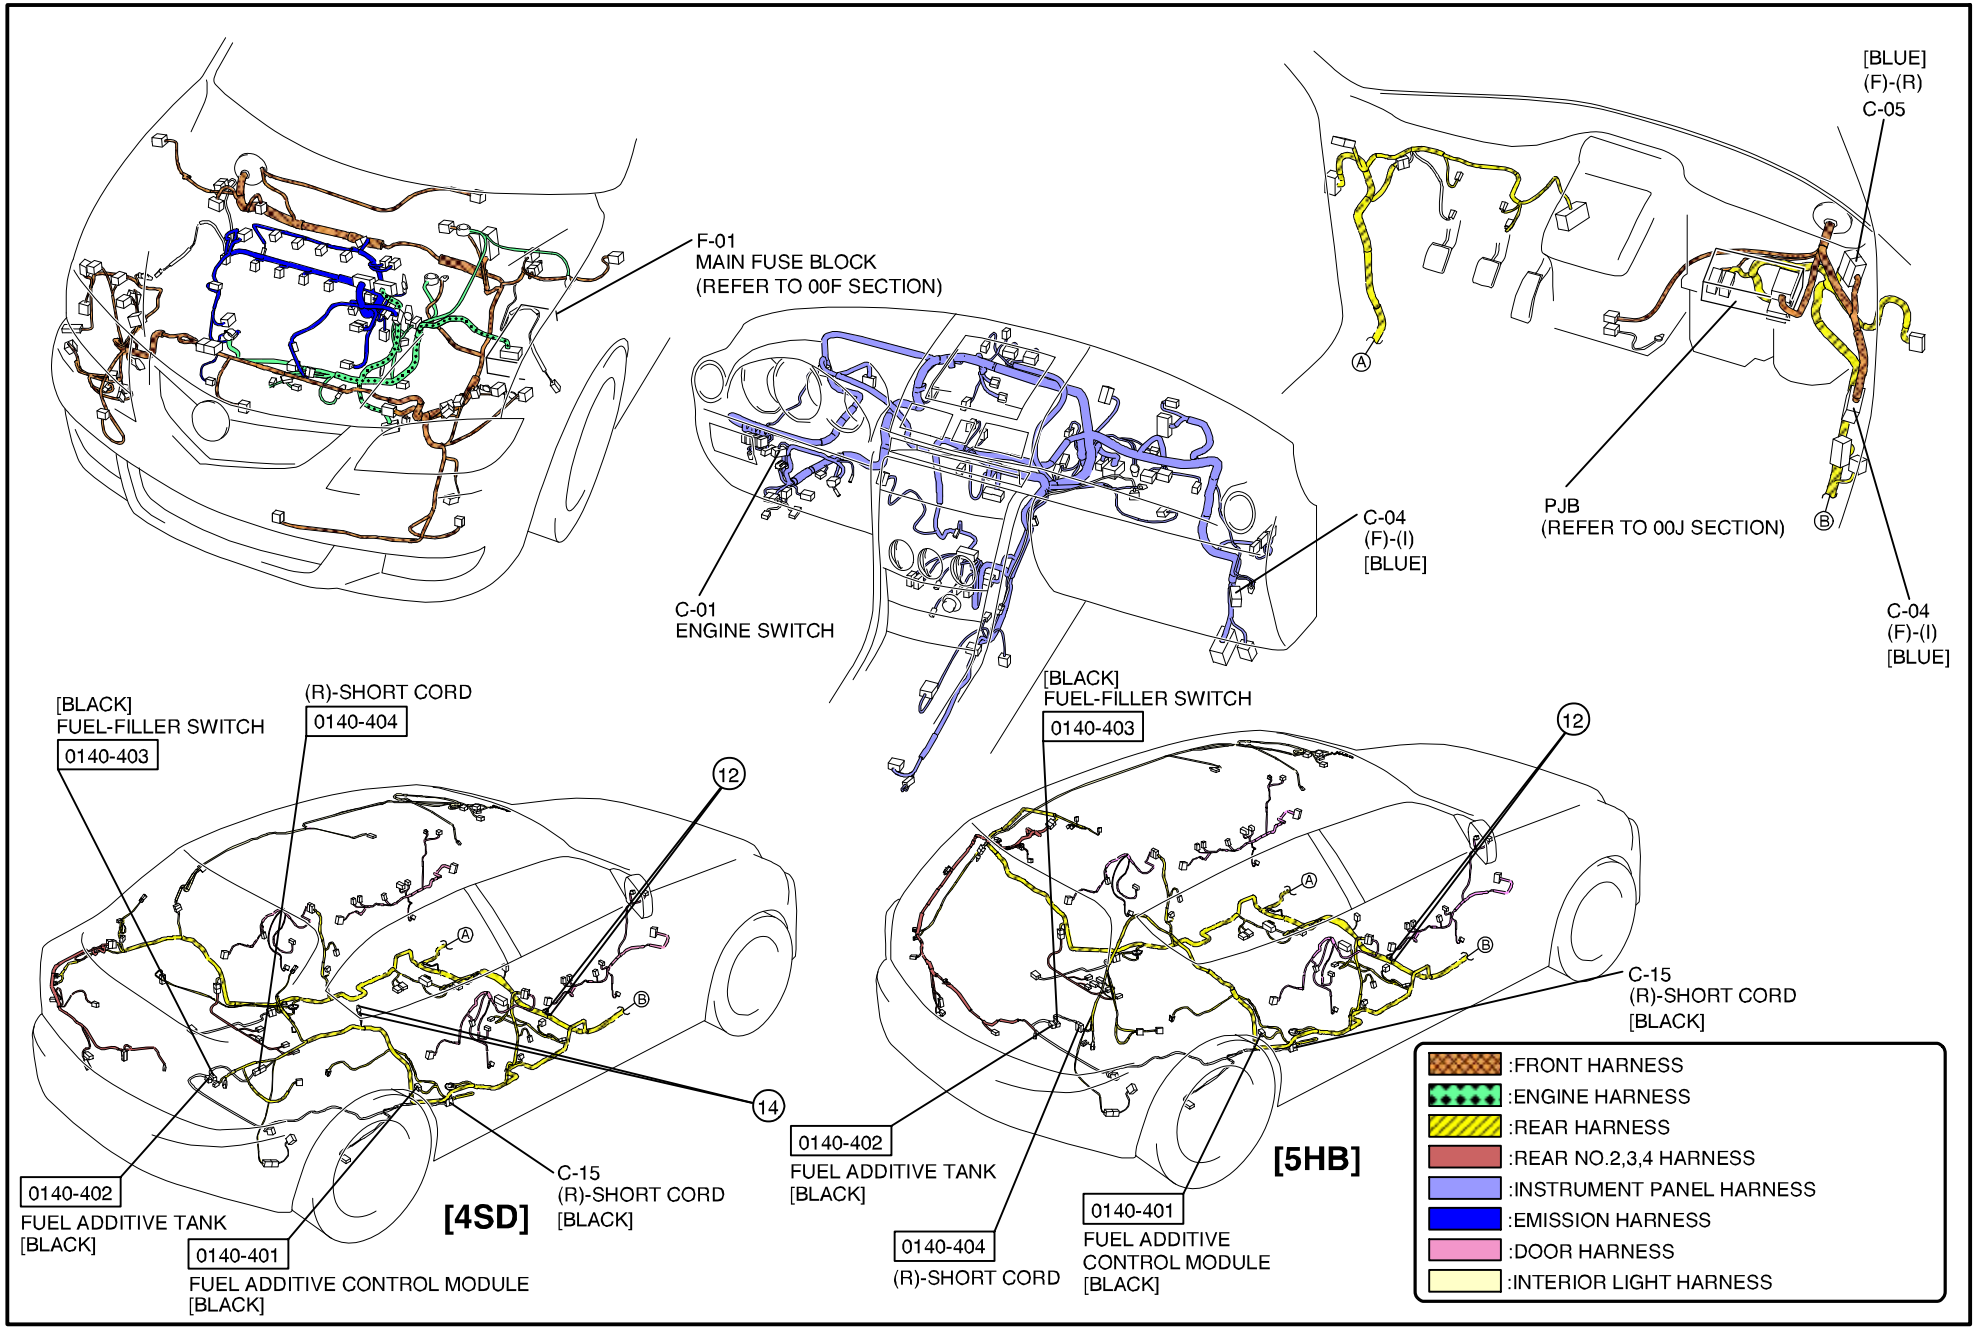



F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-01
ENGINE SWITCH
C-04
(F)-(I)
[BLUE]
[BLUE]
(F)-(R)
C-05
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
[BLACK]
FUEL-FILLER SWITCH
0140-403
(R)-SHORT CORD
0140-404
12
14
0140-402
FUEL ADDITIVE TANK
[BLACK]
0140-401
FUEL ADDITIVE CONTROL MODULE
[BLACK]
[4SD]
C-15
(R)-SHORT CORD
[BLACK]
[BLACK]
FUEL-FILLER SWITCH
0140-403
12
0140-402
FUEL ADDITIVE TANK
[BLACK]
0140-404
(R)-SHORT CORD
0140-401
FUEL ADDITIVE
CONTROL MODULE
[BLACK]
[5HB]
C-15
(R)-SHORT CORD
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-01
IGNITION SWITCH/←— Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ←— MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

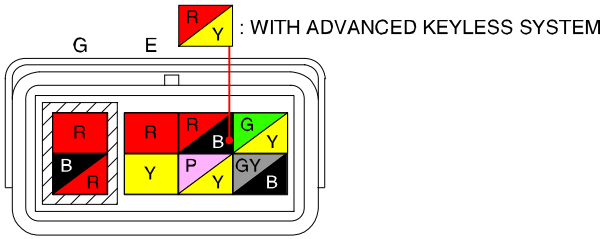


C-15
REAR HARNESS-SHORT CORD

REAR HARNESS

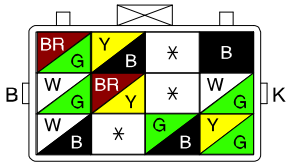


SHORT CORD

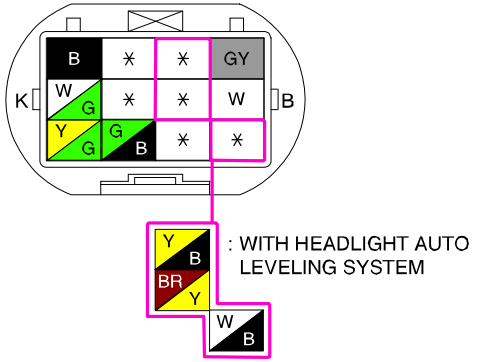


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

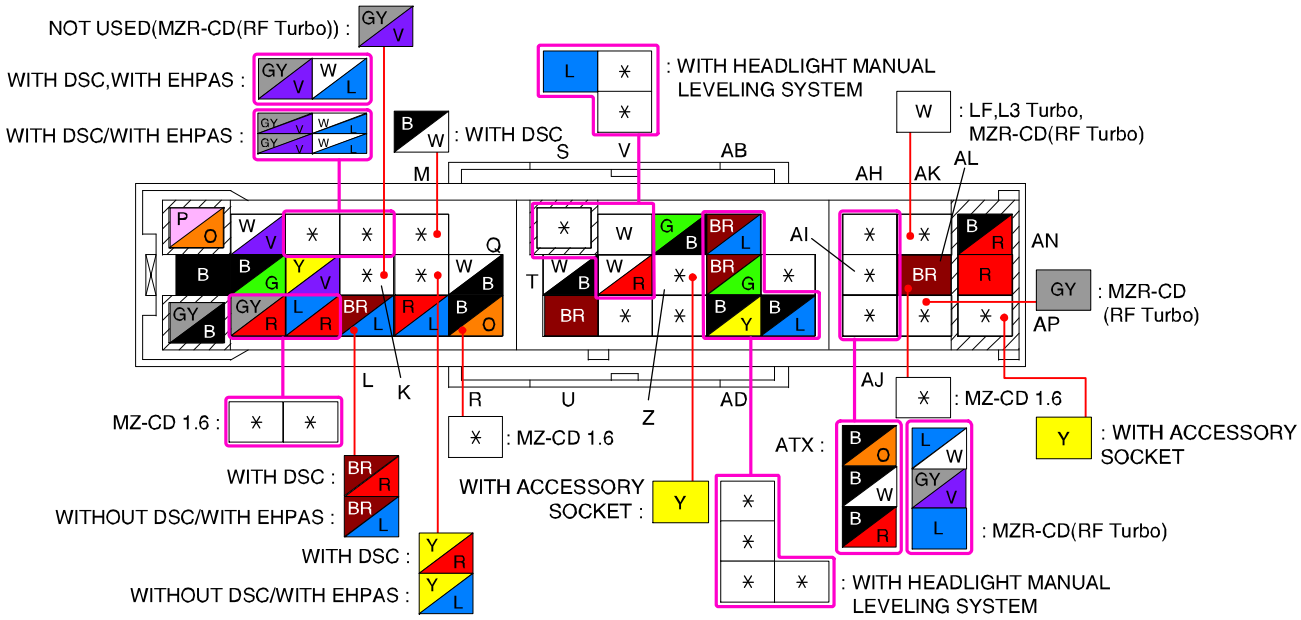


INSTRUMENT PANEL HARNESS

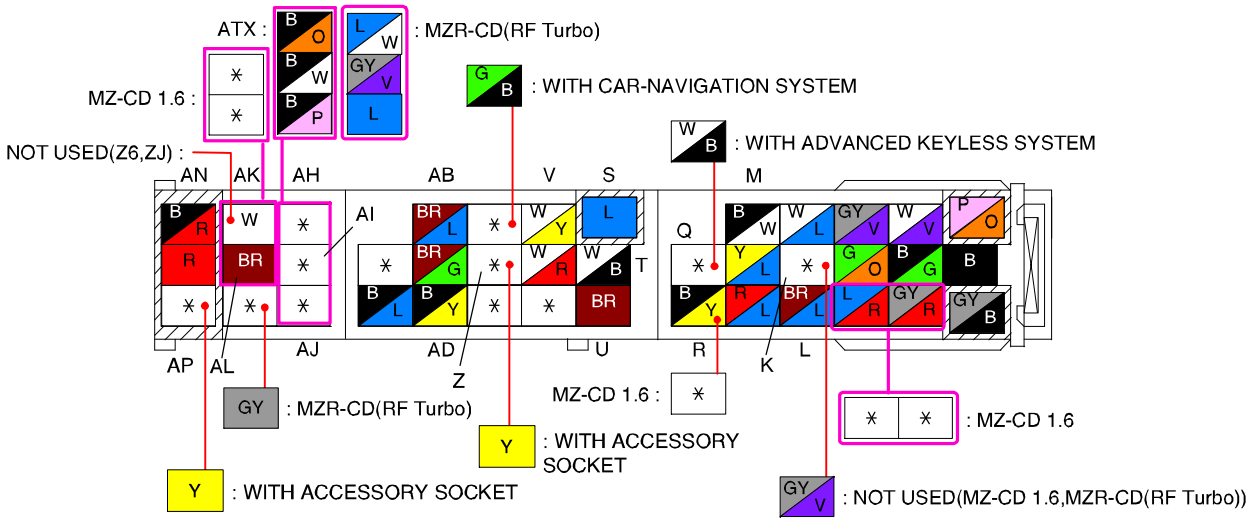



C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

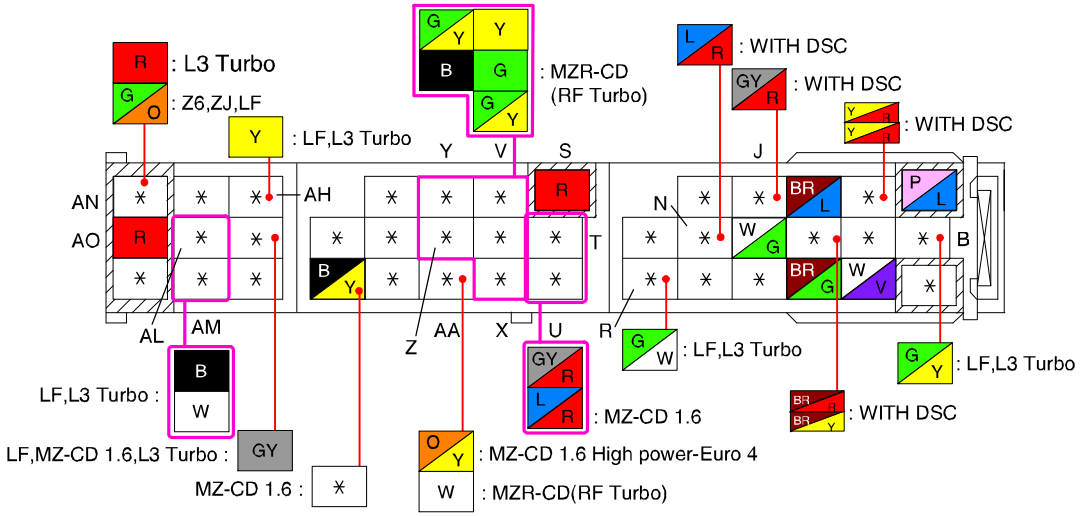



REAR HARNESS

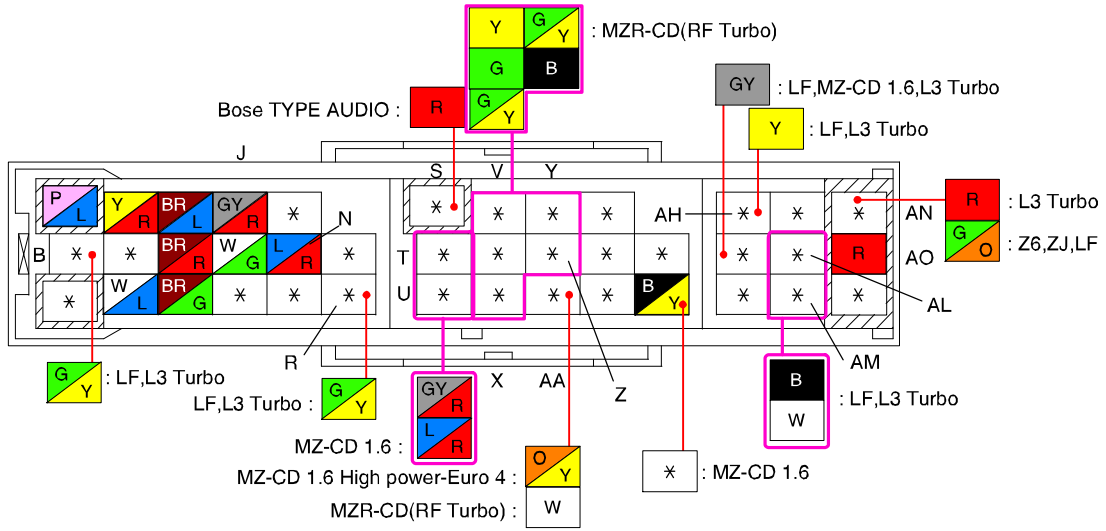

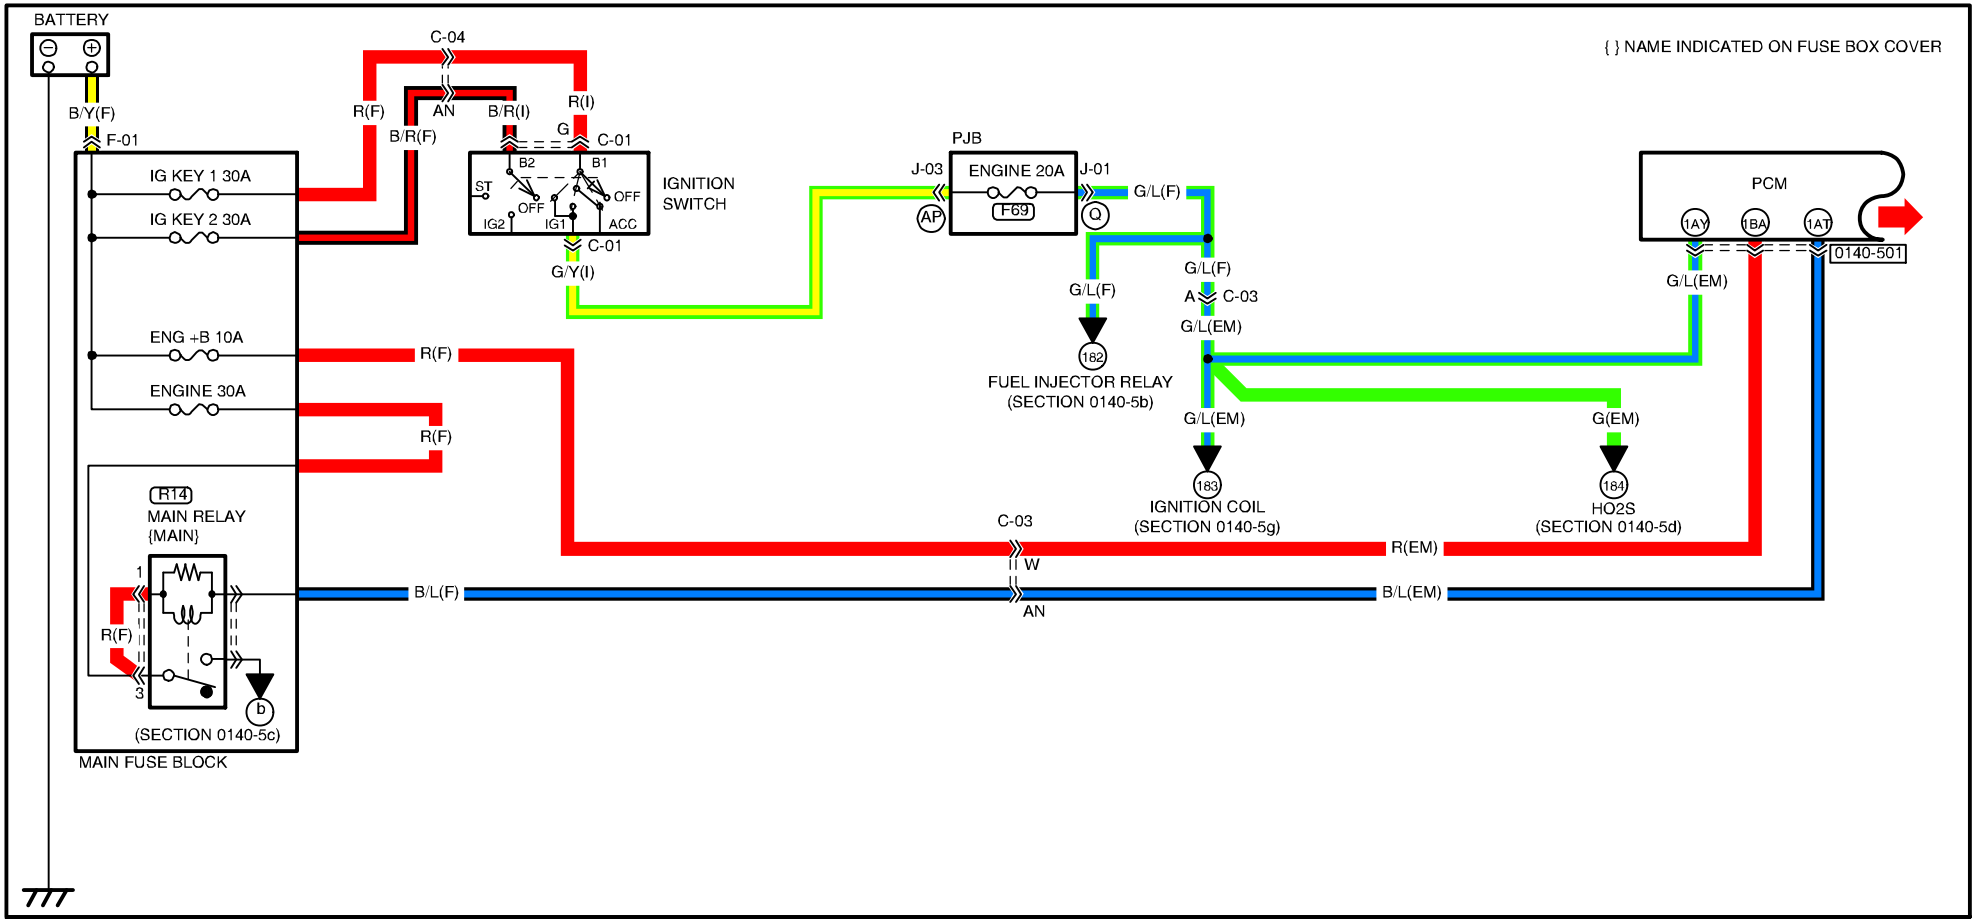

BATTERY
B/Y(F)
F-01
C-04
R(F)
AN
B/R(I)
R(I)
B/R(F)
G
C-01
B2
B1
ST
OFF
OFF
IG2
IG1
ACC
IGNITION SWITCH
C-01
G/Y(I)
PJB
J-03
ENGINE 20A
J-01
F69
AP
Q
G/L(F)
G/L(F)
A
C-03
G/L(EM)
182
FUEL INJECTOR RELAY
(SECTION 0140-5b)
G/L(EM)
183
IGNITION COIL
(SECTION 0140-5g)
G(EM)
184
HO2S
(SECTION 0140-5d)
PCM
1AY
1BA
1AT
0140-501
G/L(EM)
{ } NAME INDICATED ON FUSE BOX COVER
IG KEY 1 30A
IG KEY 2 30A
ENG +B 10A
ENGINE 30A
R(F)
R(F)
R14
MAIN RELAY
{MAIN}
1
R(F)
3
b
(SECTION 0140-5c)
MAIN FUSE BLOCK
C-03
W
AN
R(EM)
B/L(F)
B/L(EM)

0140-501
PCM

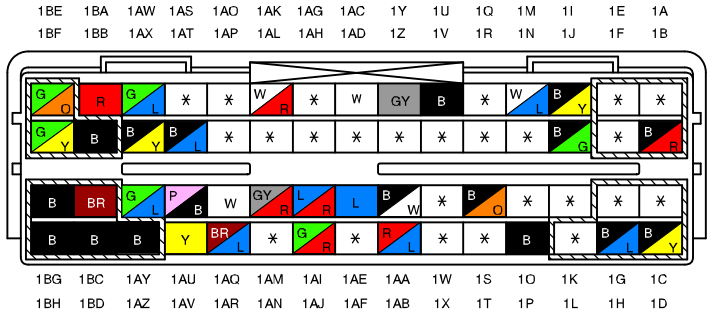
1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A
1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B
1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C
1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D

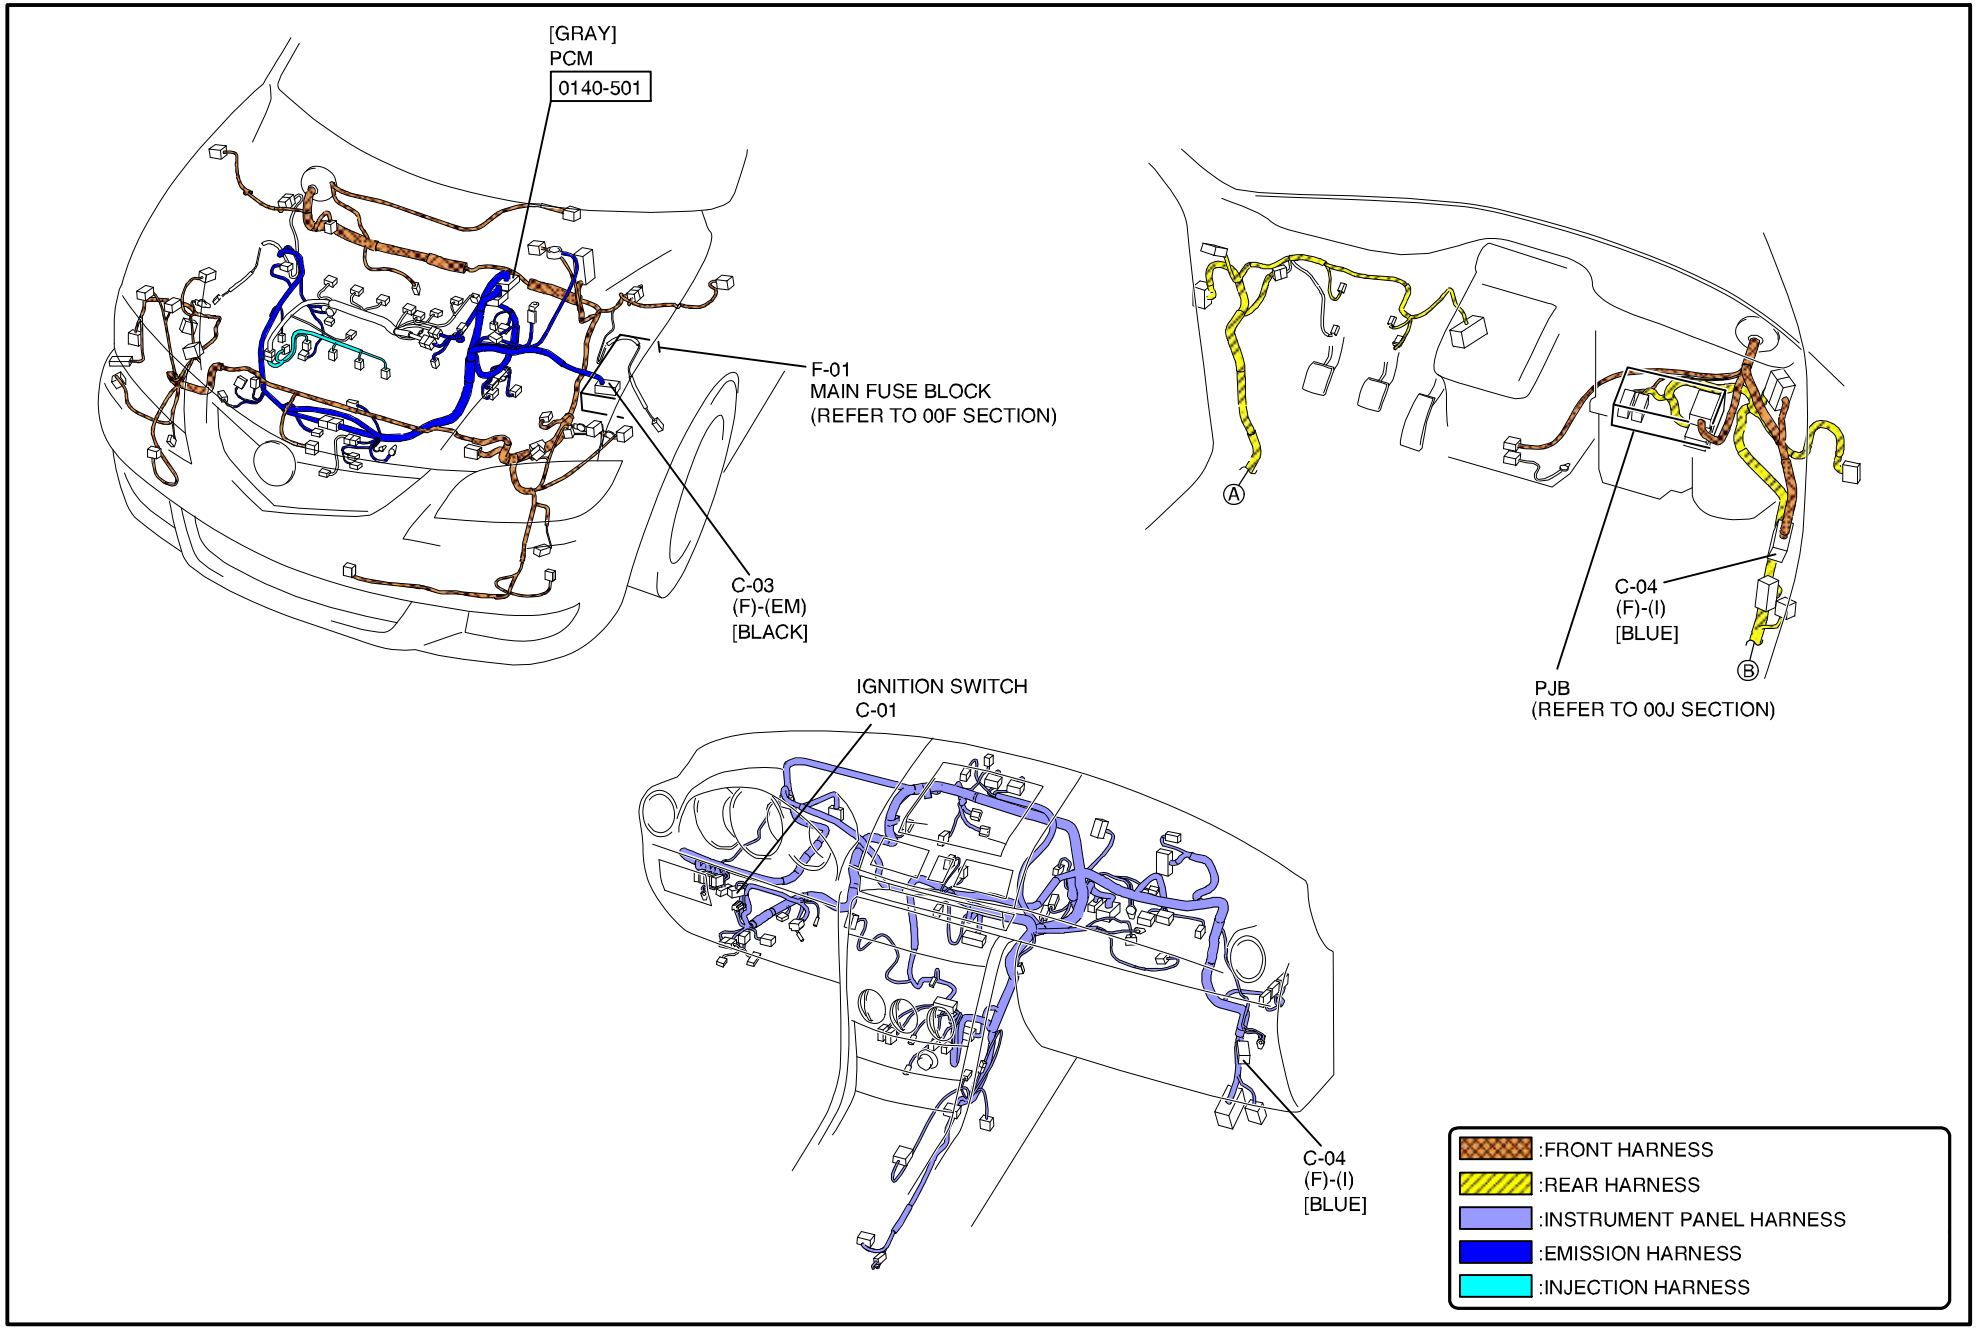

[GRAY]
PCM
0140-501
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-03
(F)-(EM)
[BLACK]
Ⓐ
C-04
(F)-(I)
[BLUE]
Ⓑ
PJB
(REFER TO 00J SECTION)
IGNITION SWITCH
C-01
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

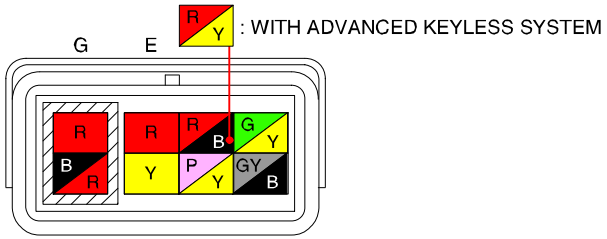


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

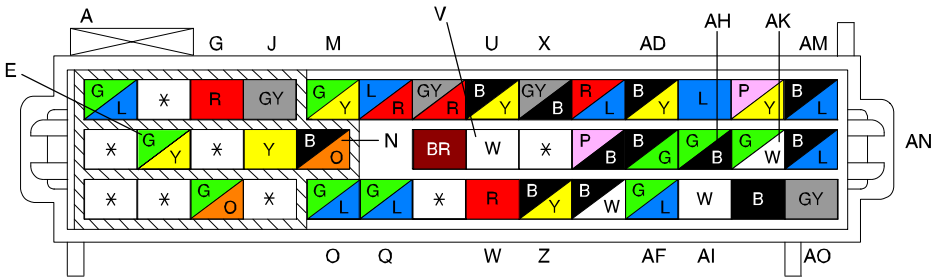


EMISSION HARNESS

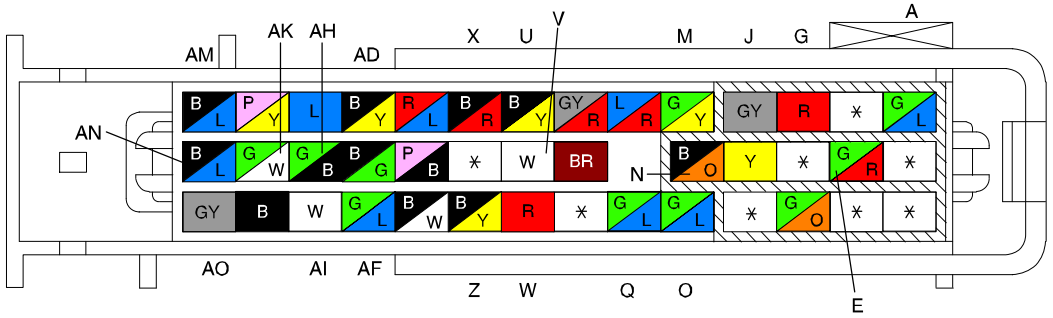



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

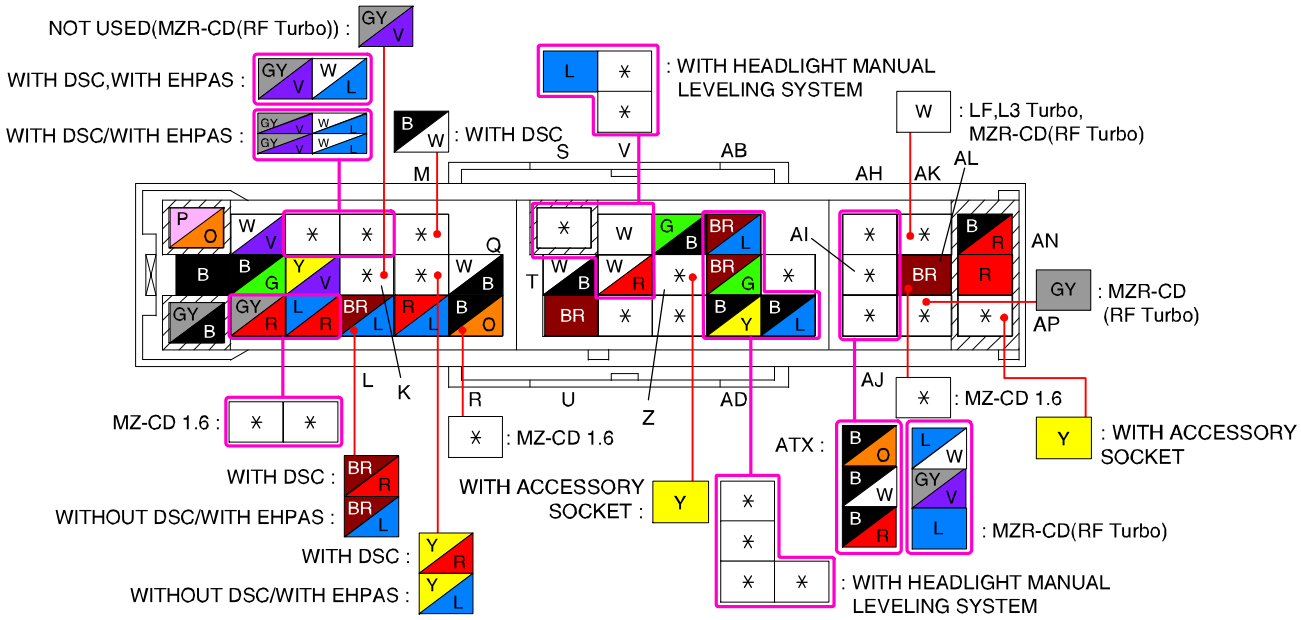



INSTRUMENT PANEL HARNESS

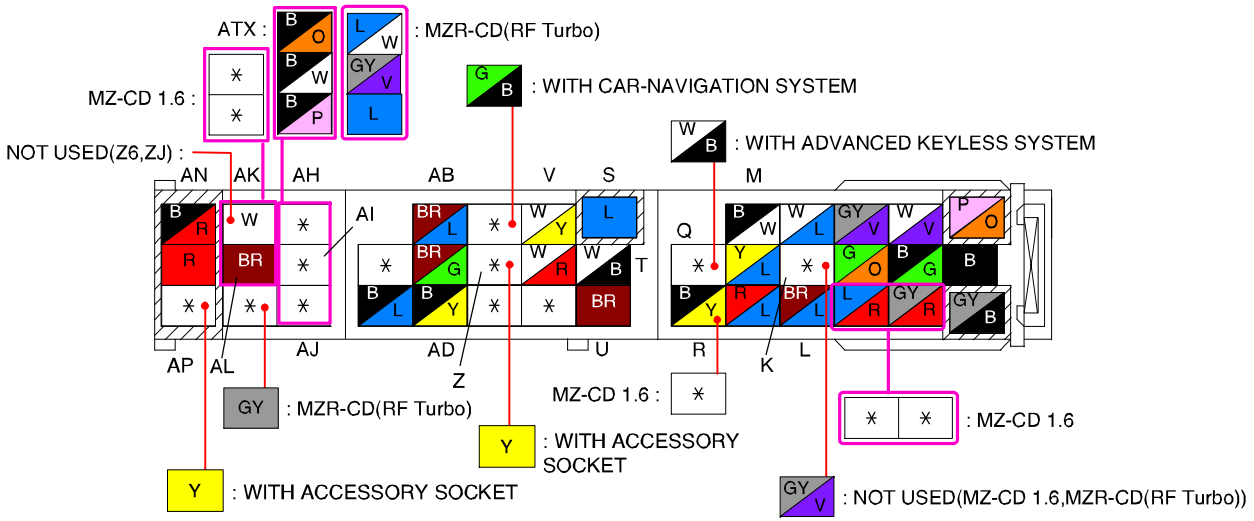


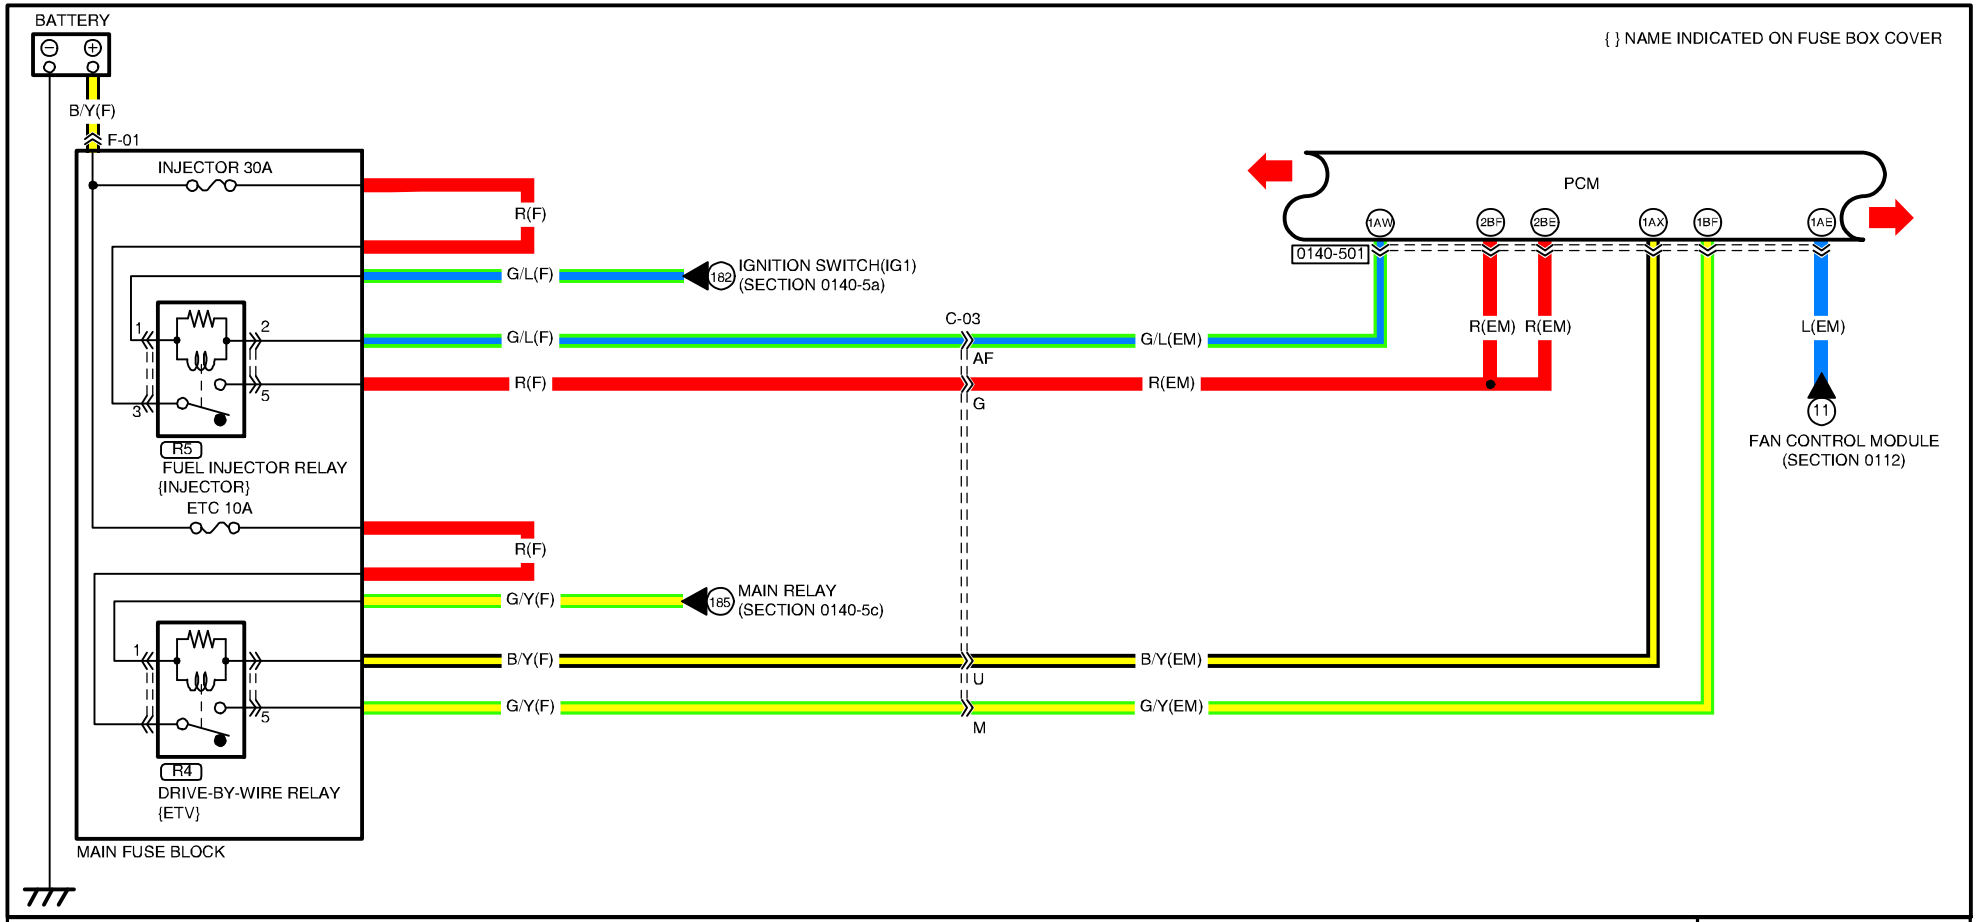
BATTERY
B/Y(F)
F-01
INJECTOR 30A
R(F)
G/L(F)
182
IGNITION SWITCH(IG1)
(SECTION 0140-5a)
G/L(F)
C-03
AF
G/L(EM)
R(F)
G
R(EM)
R5
FUEL INJECTOR RELAY
{INJECTOR}
ETC 10A
R(F)
G/Y(F)
185
MAIN RELAY
(SECTION 0140-5c)
B/Y(F)
U
B/Y(EM)
G/Y(F)
M
G/Y(EM)
R4
DRIVE-BY-WIRE RELAY
{ETV}
MAIN FUSE BLOCK
{ } NAME INDICATED ON FUSE BOX COVER
PCM
0140-501
1AW
2BF
2BE
1AX
1BF
1AB
R(EM)
R(EM)
L(EM)
11
FAN CONTROL MODULE
(SECTION 0112)

0140-501
PCM

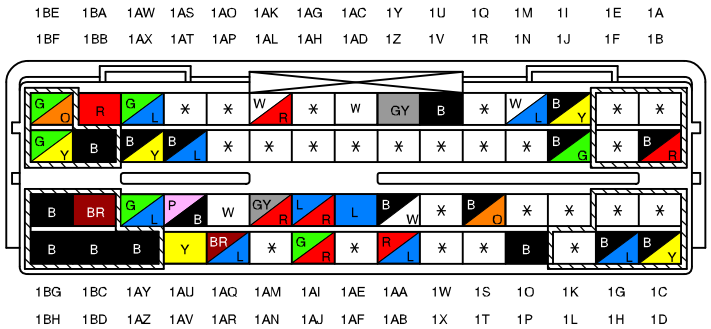

1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A
1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B
1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C
1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D

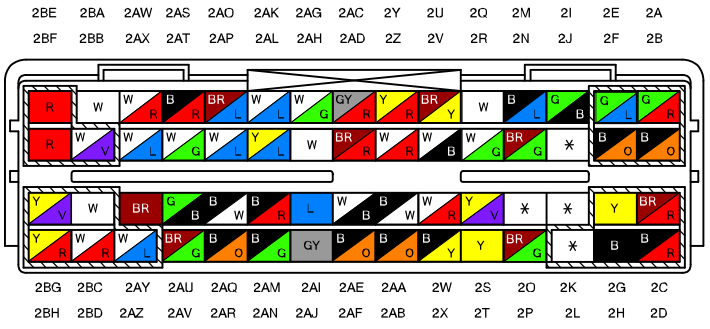
2BE 2BA 2AW 2AS 2AO 2AK 2AG 2AC 2Y 2U 2Q 2M 2I 2E 2A
2BF 2BB 2AX 2AT 2AP 2AL 2AH 2AD 2Z 2V 2R 2N 2J 2F 2B
2BG 2BC 2AY 2AU 2AQ 2AM 2AI 2AE 2AA 2W 2S 2O 2K 2G 2C
2BH 2BD 2AZ 2AV 2AR 2AN 2AJ 2AF 2AB 2X 2T 2P 2L 2H 2D

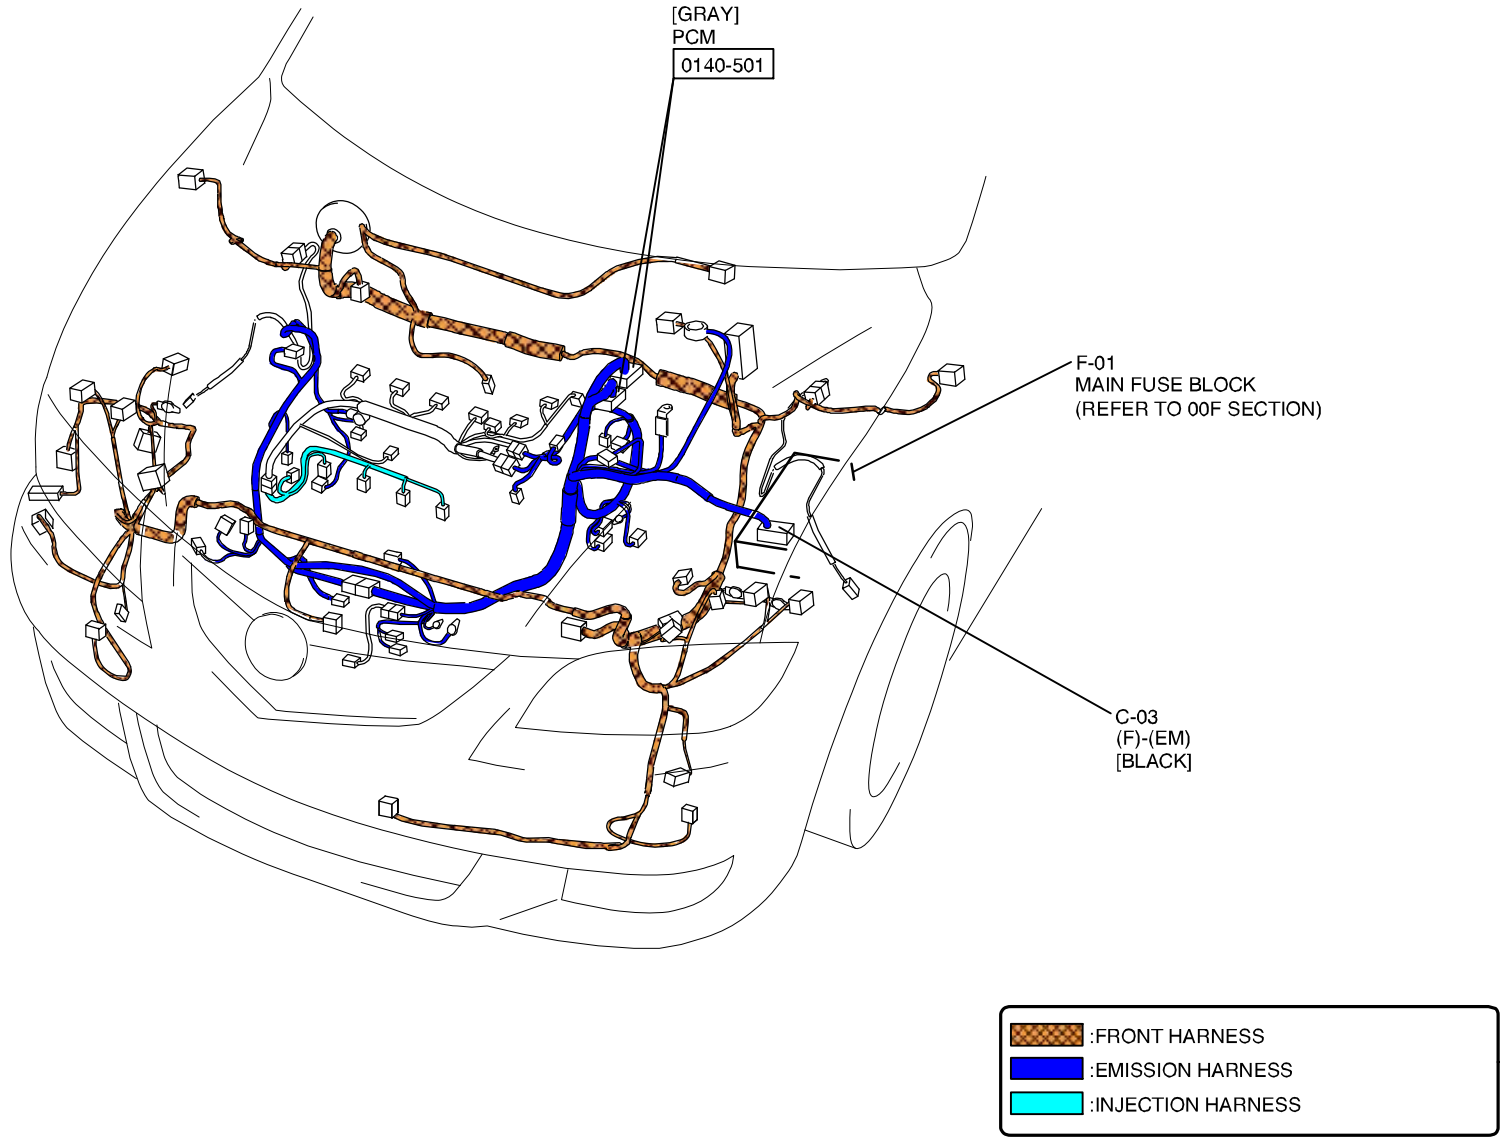

[GRAY]
PCM
0140-501
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-03
(F)-(EM)
[BLACK]
:FRONT HARNESS
:EMISSION HARNESS
:INJECTION HARNESS


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

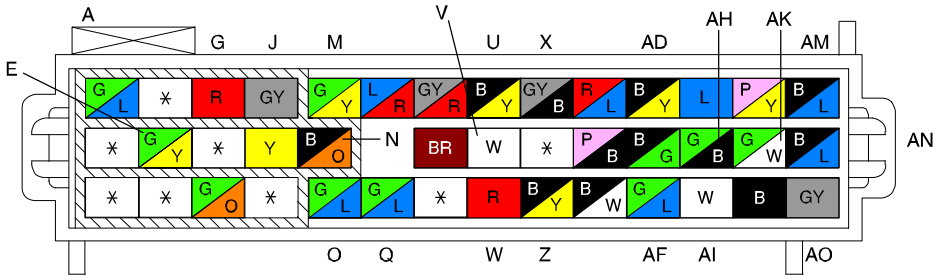


EMISSION HARNESS

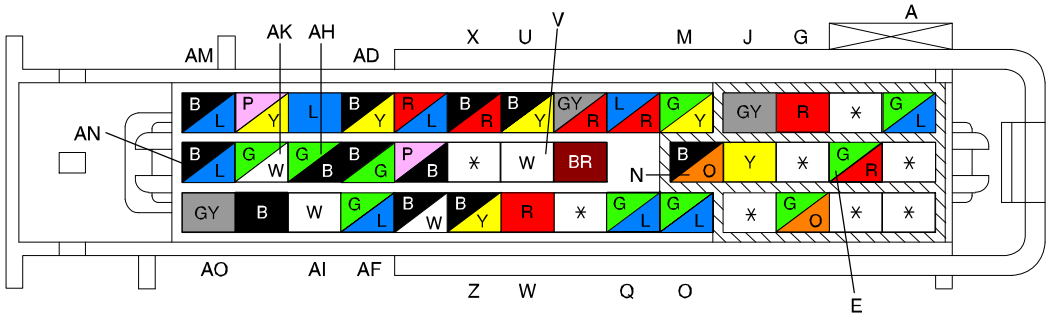


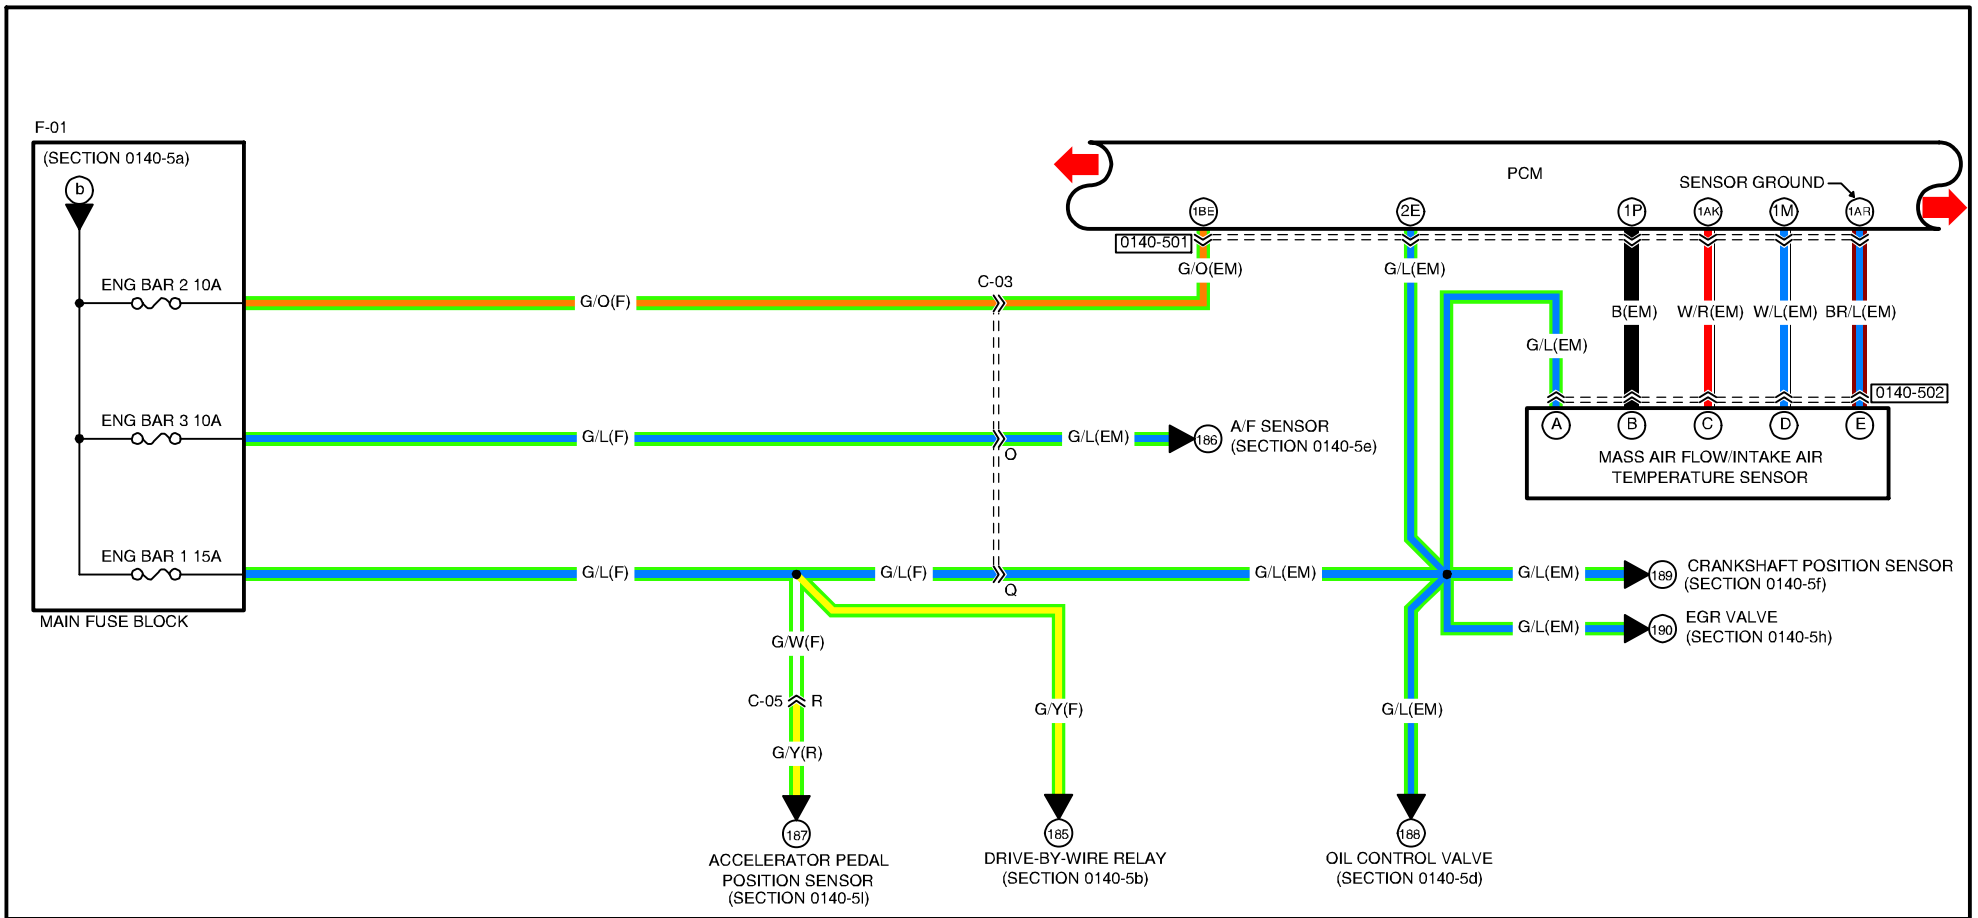


0140-501
PCM

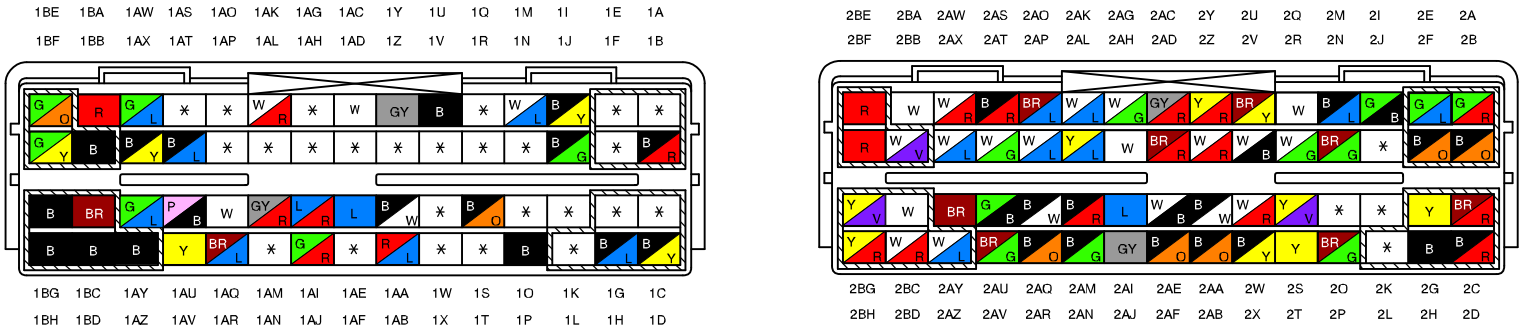


0140-502
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR



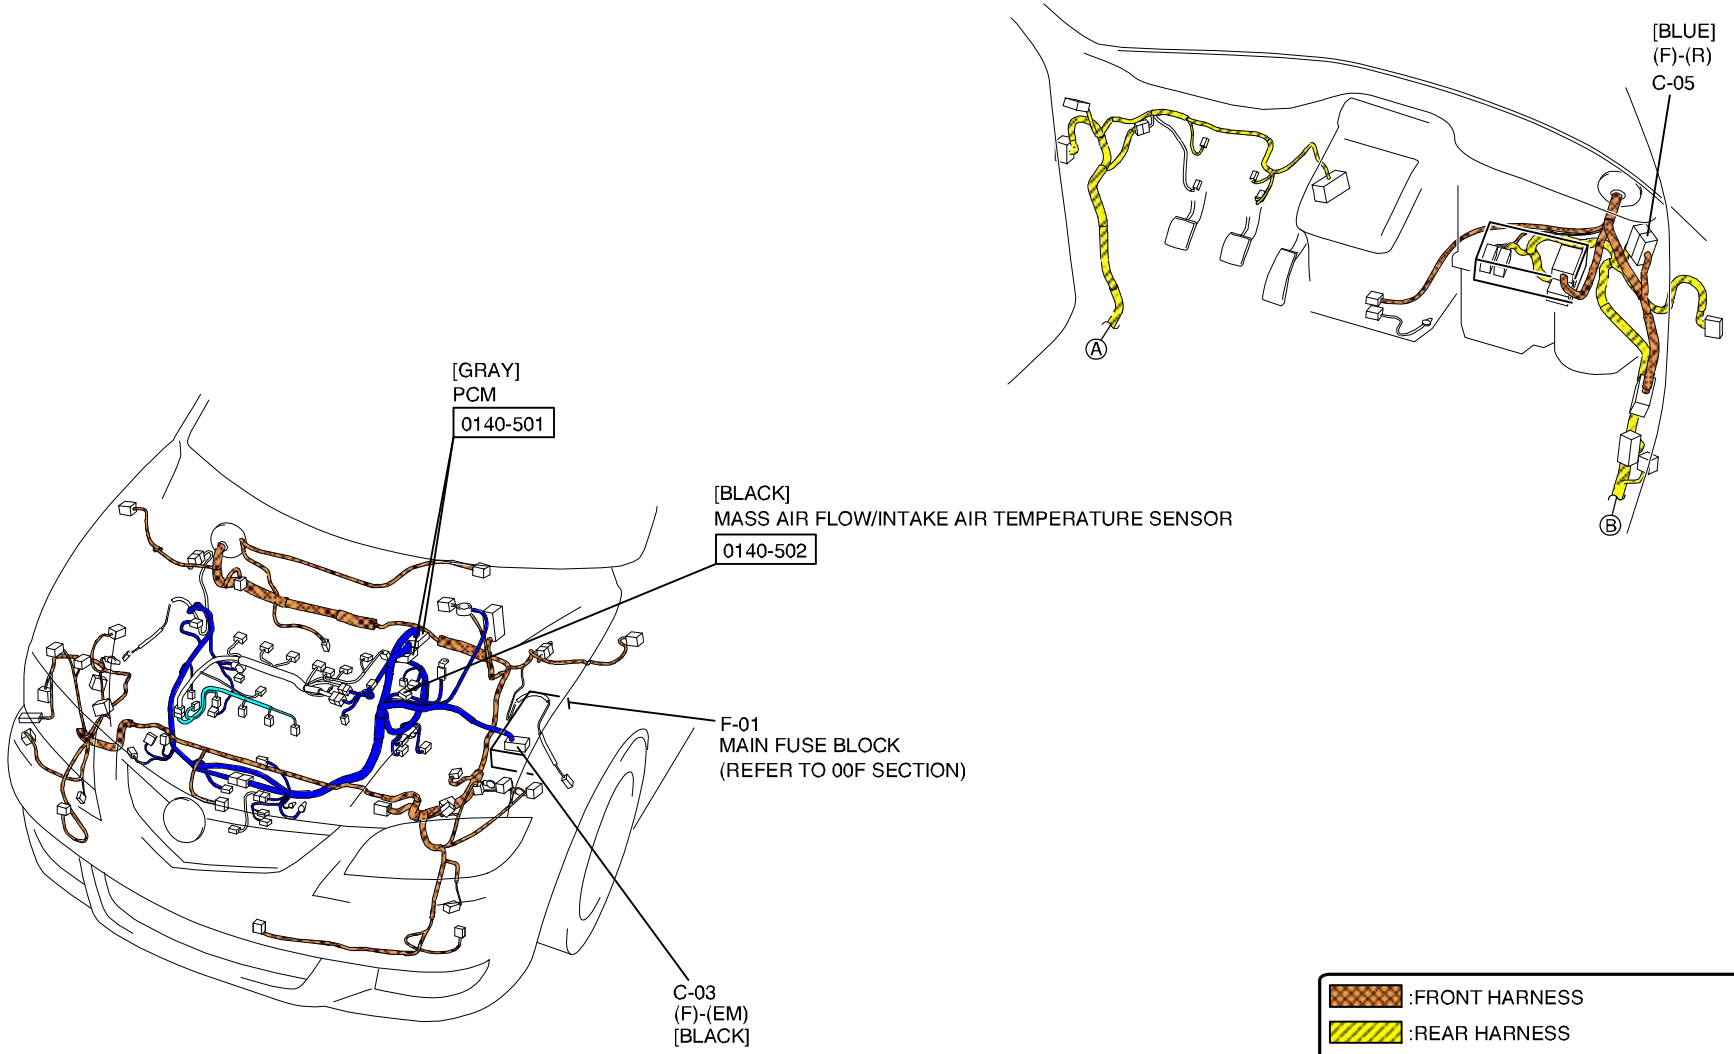

[BLUE]
(F)-(R)
C-05
Ⓐ
Ⓑ
[GRAY]
PCM
0140-501
[BLACK]
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR
0140-502
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-03
(F)-(EM)
[BLACK]
:FRONT HARNESS
:REAR HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

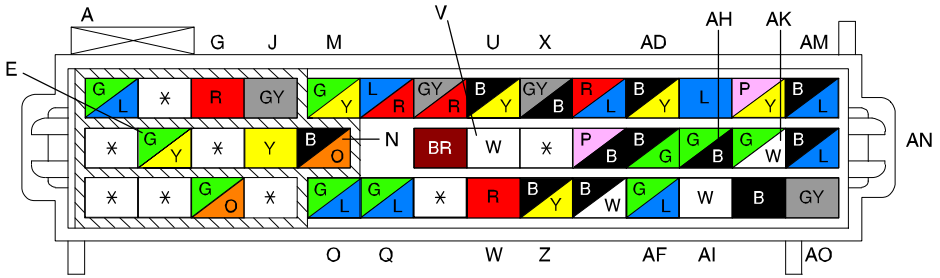


EMISSION HARNESS

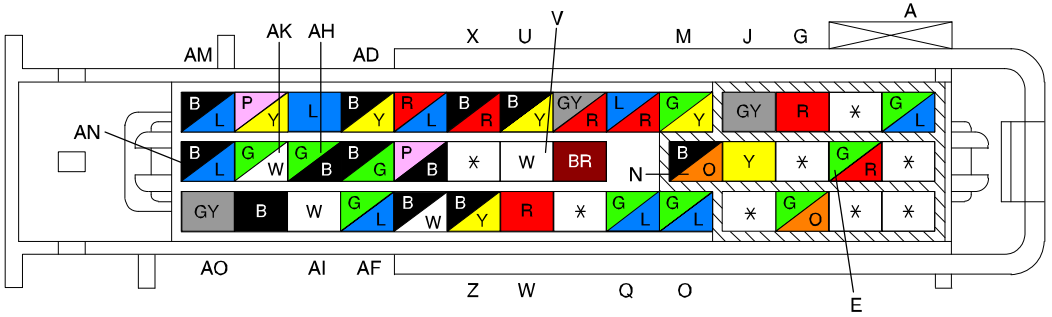



C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

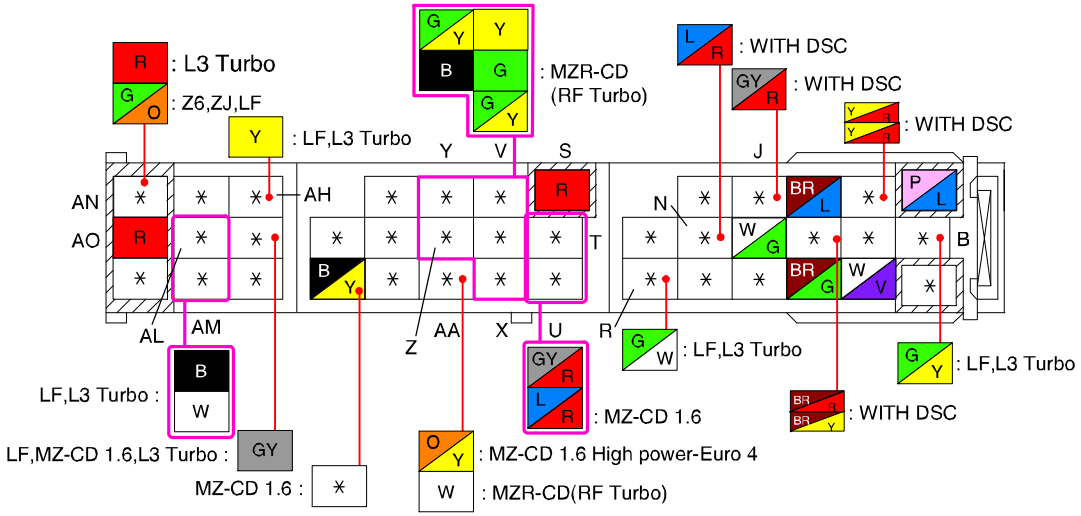


REAR HARNESS

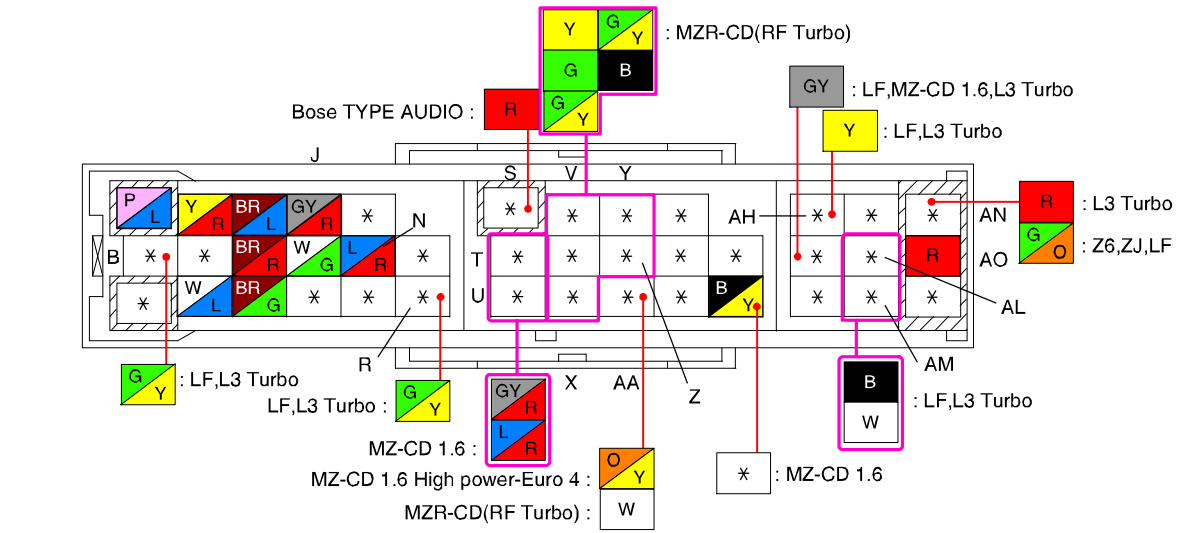

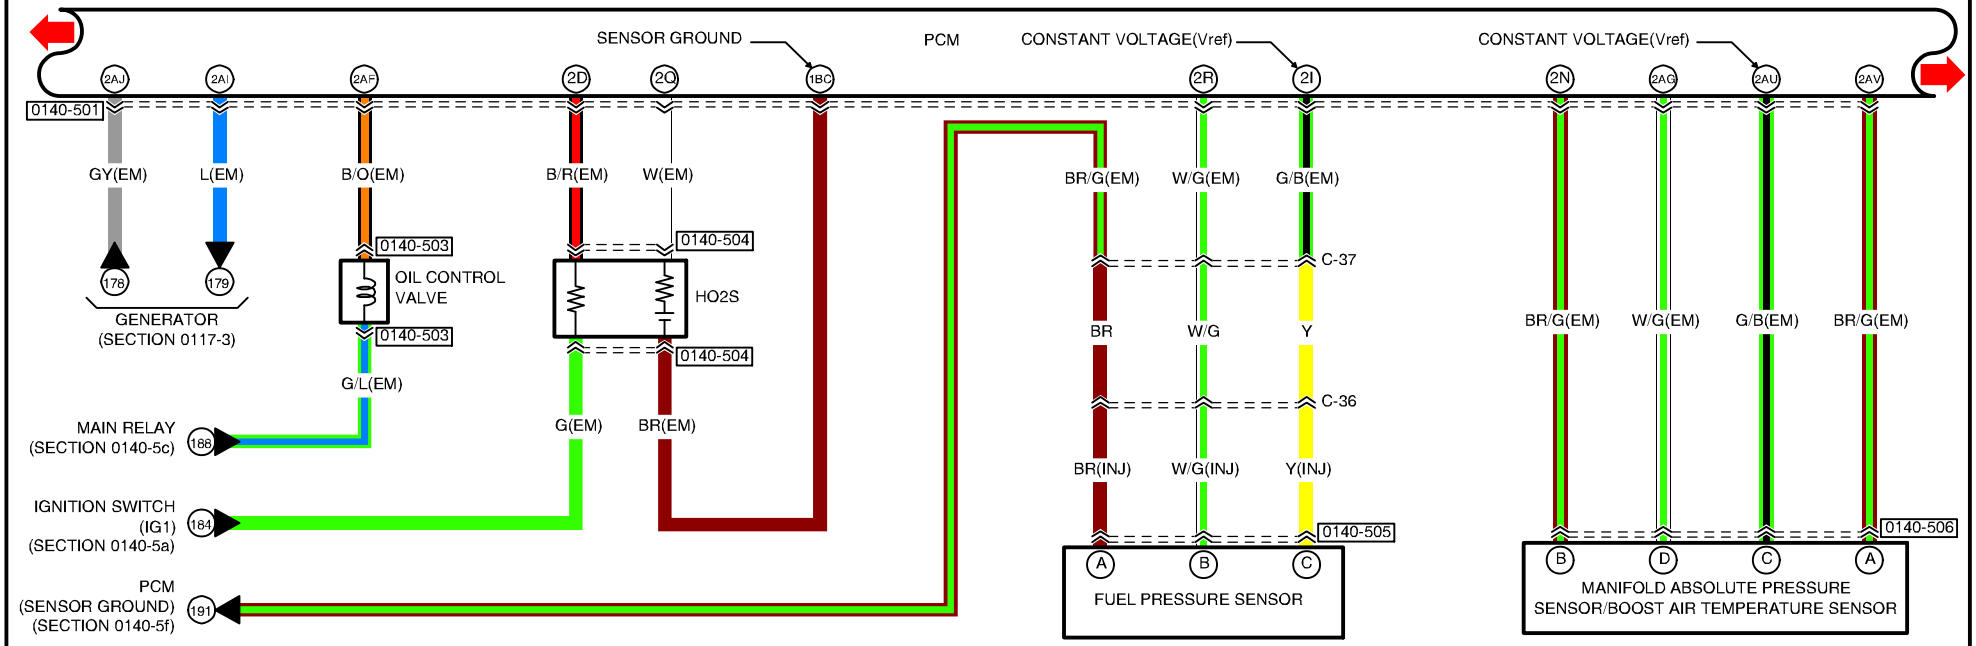


0140-501
PCM

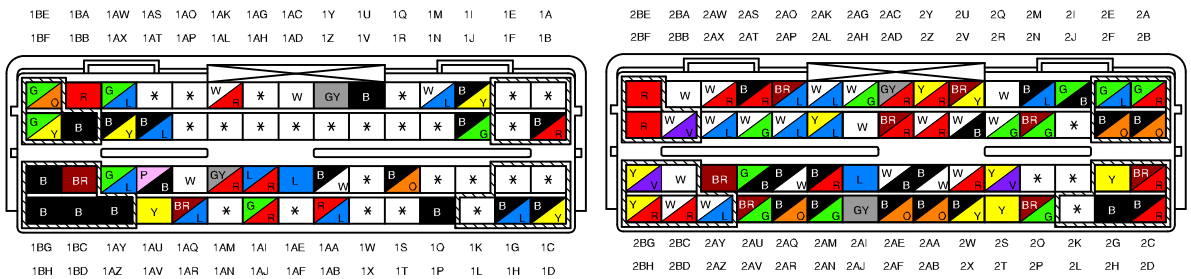


0140-503
OIL CONTROL VALVE




0140-504
HO2S

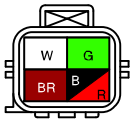


0140-505
FUEL PRESSURE SENSOR

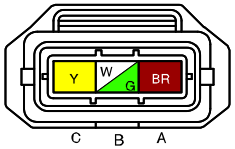


0140-506
MANIFOLD ABSOLUTE PRESSURE
SENSOR/BOOST AIR
TEMPERATURE SENSOR



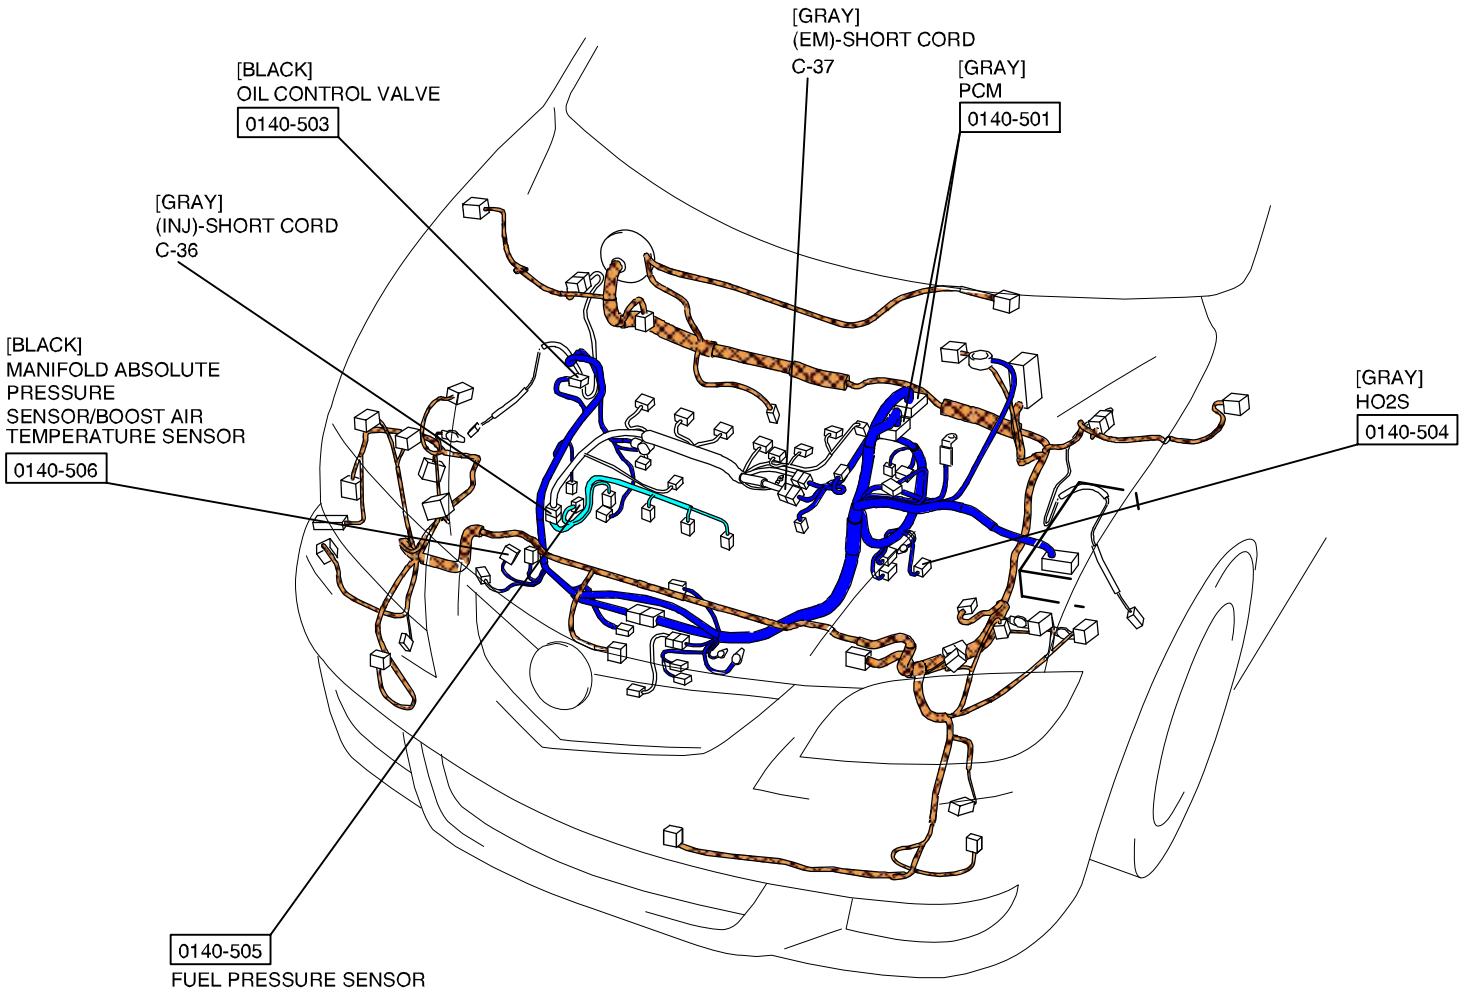

[BLACK]
OIL CONTROL VALVE
0140-503
[GRAY]
(EM)-SHORT CORD
C-37
[GRAY]
PCM
0140-501
[GRAY]
(INJ)-SHORT CORD
C-36
[BLACK]
MANIFOLD ABSOLUTE
PRESSURE
SENSOR/BOOST AIR
TEMPERATURE SENSOR
0140-506
[GRAY]
HO2S
0140-504
0140-505
FUEL PRESSURE SENSOR
:FRONT HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-36
INJECTION HARNESS-SHORT CORD

INJECTION HARNESS

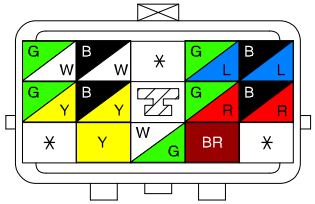


SHORT CORD

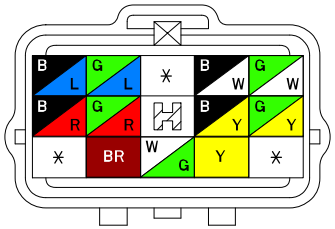



C-37
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

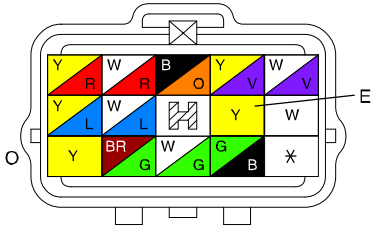


SHORT CORD

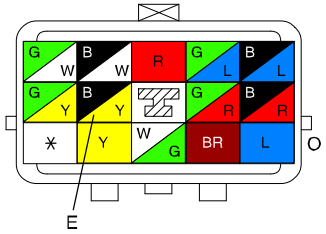


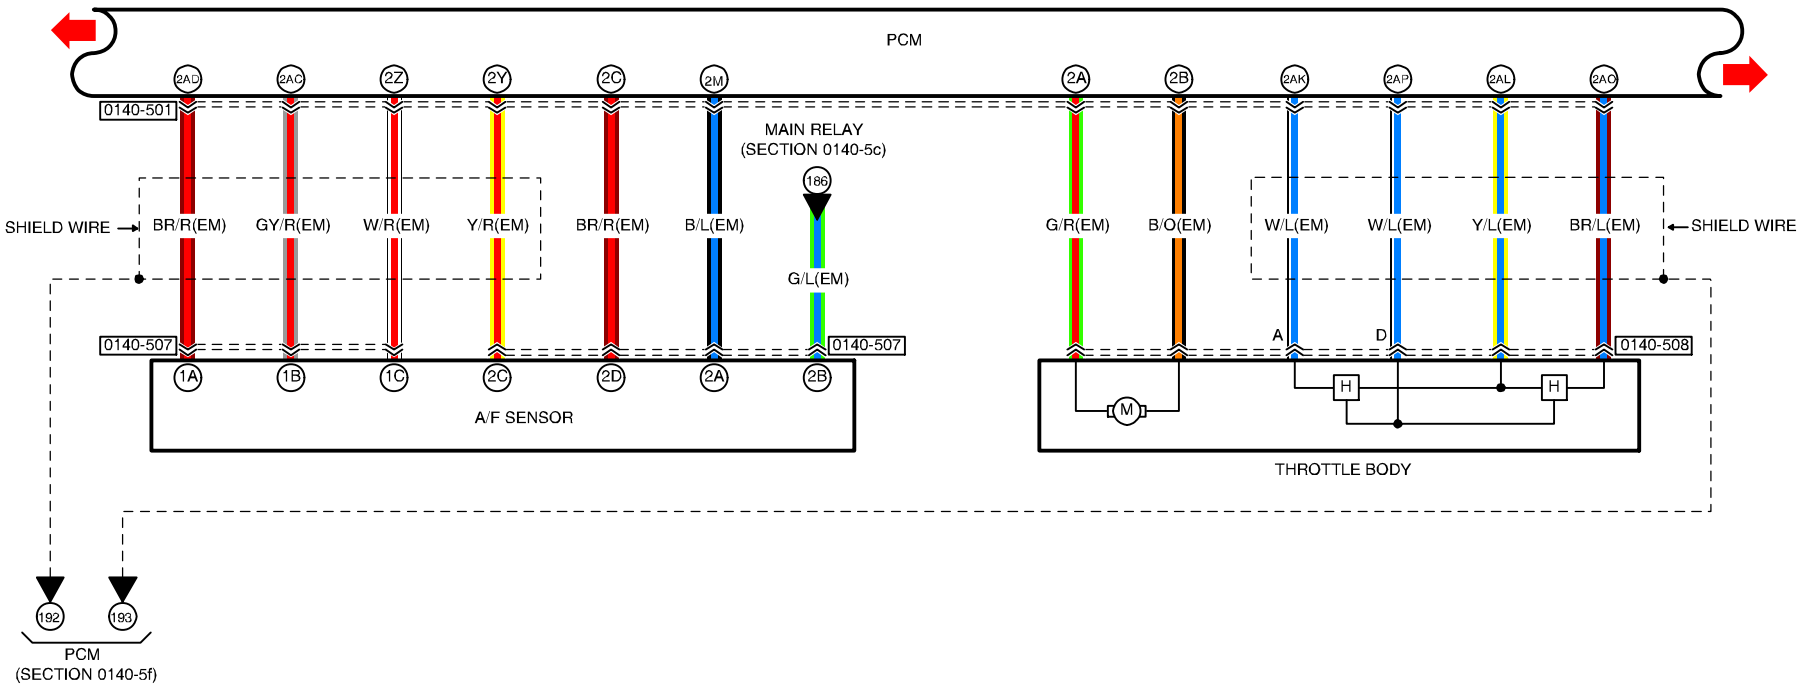


0140-501
PCM

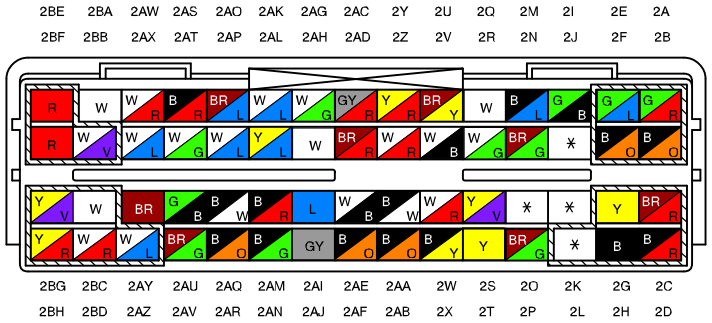



0140-507
A/F SENSOR

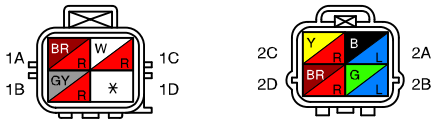


0140-508
THROTTLE BODY

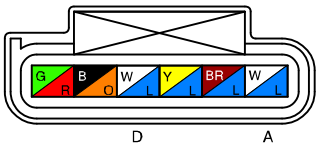

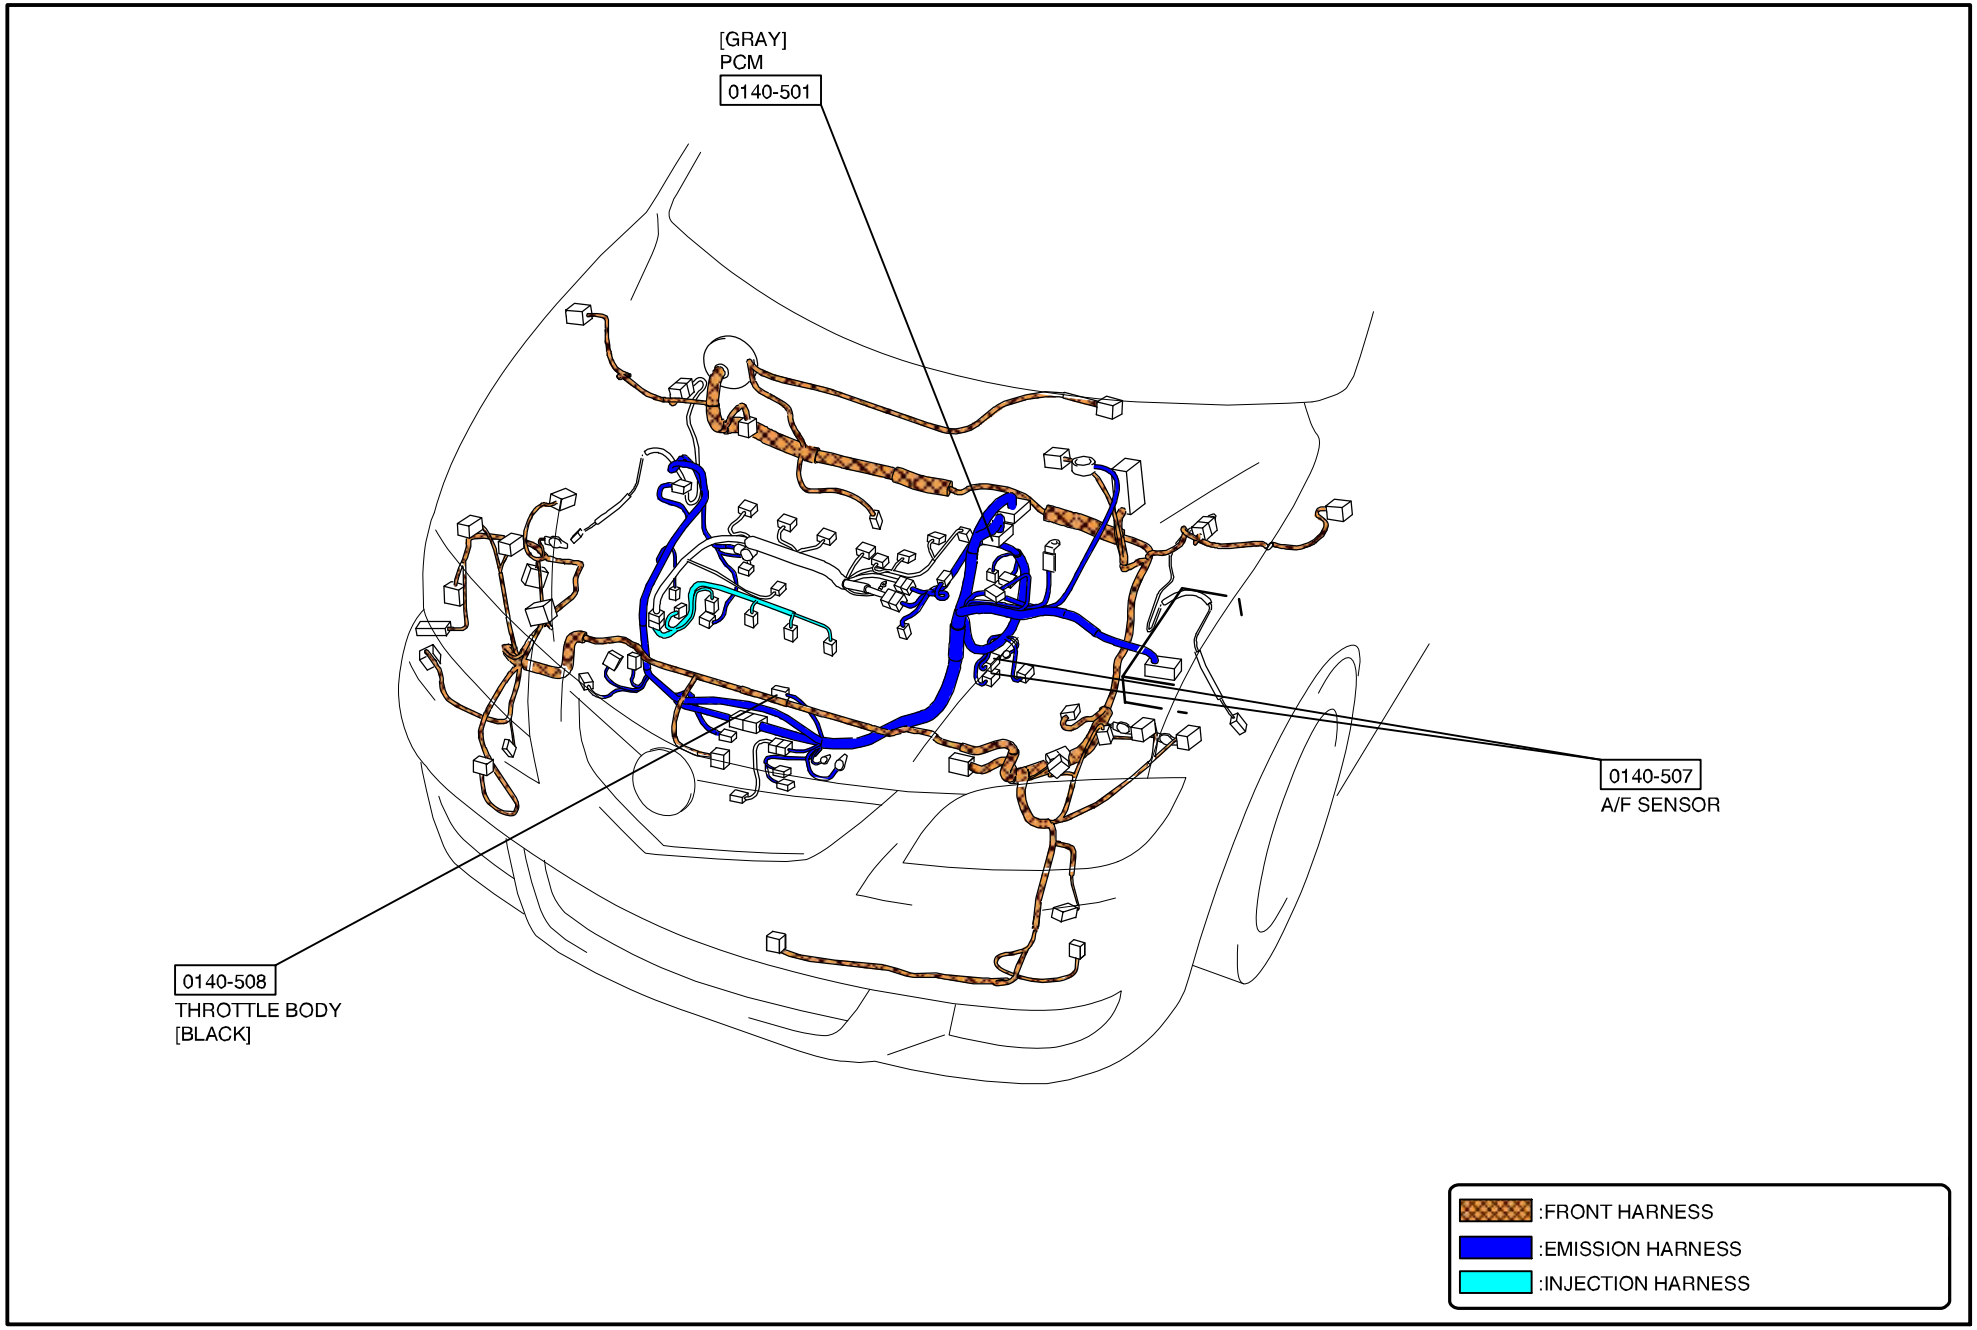

[GRAY]
PCM
0140-501
0140-507
A/F SENSOR
0140-508
THROTTLE BODY
[BLACK]
:FRONT HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

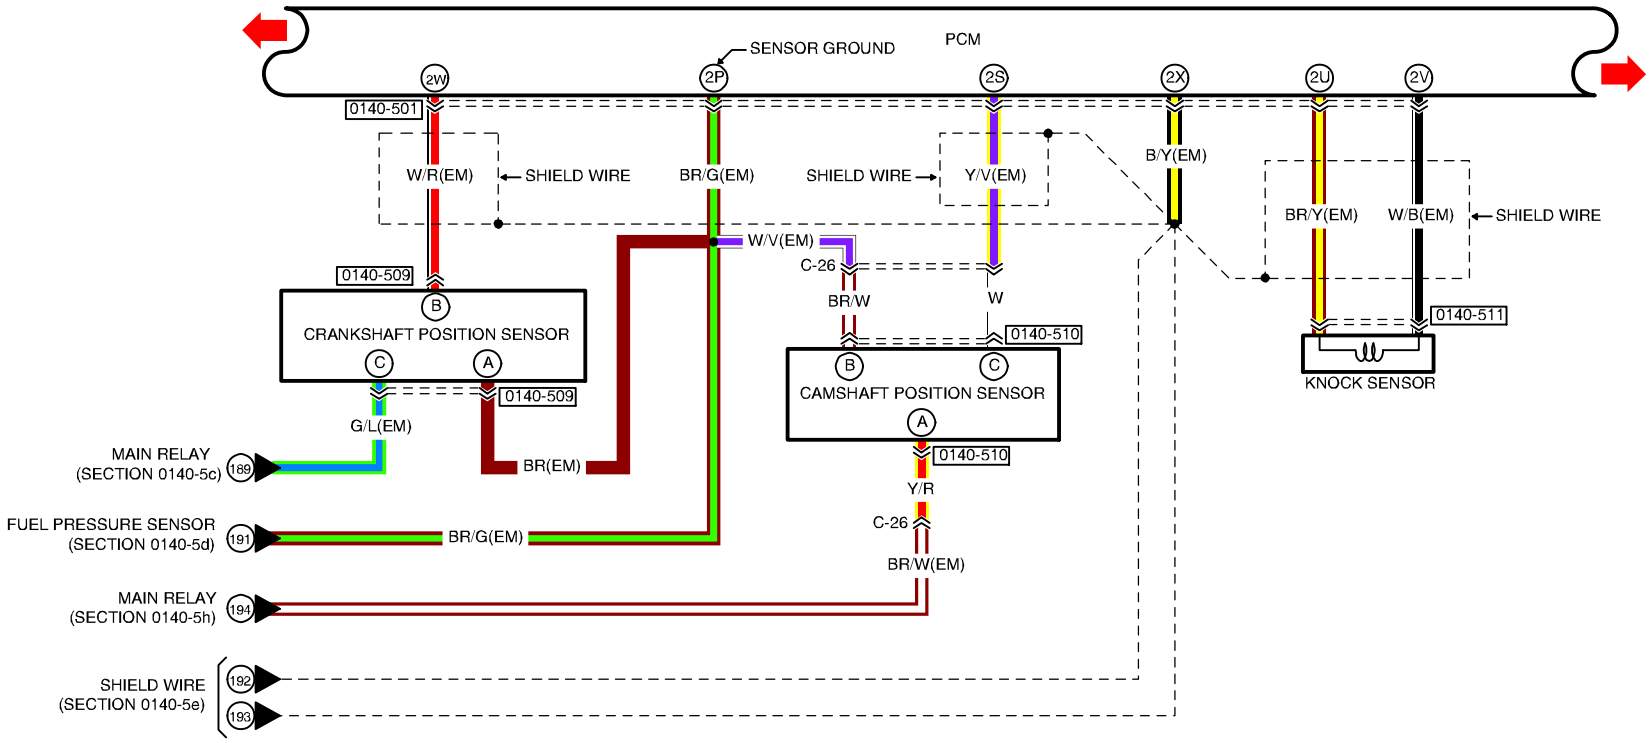


0140-501
PCM

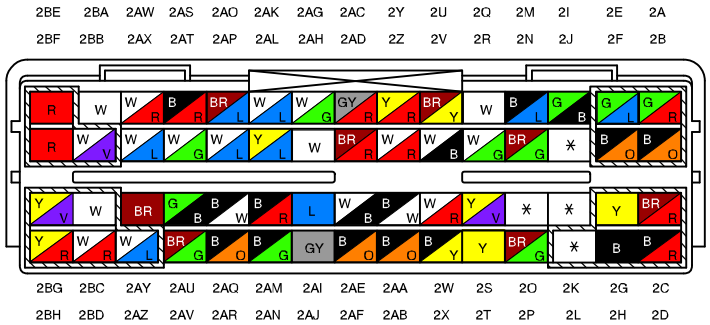

0140-509
CRANKSHAFT POSITION SENSOR




0140-510
CAMSHAFT POSITION SENSOR




0140-511
KNOCK SENSOR

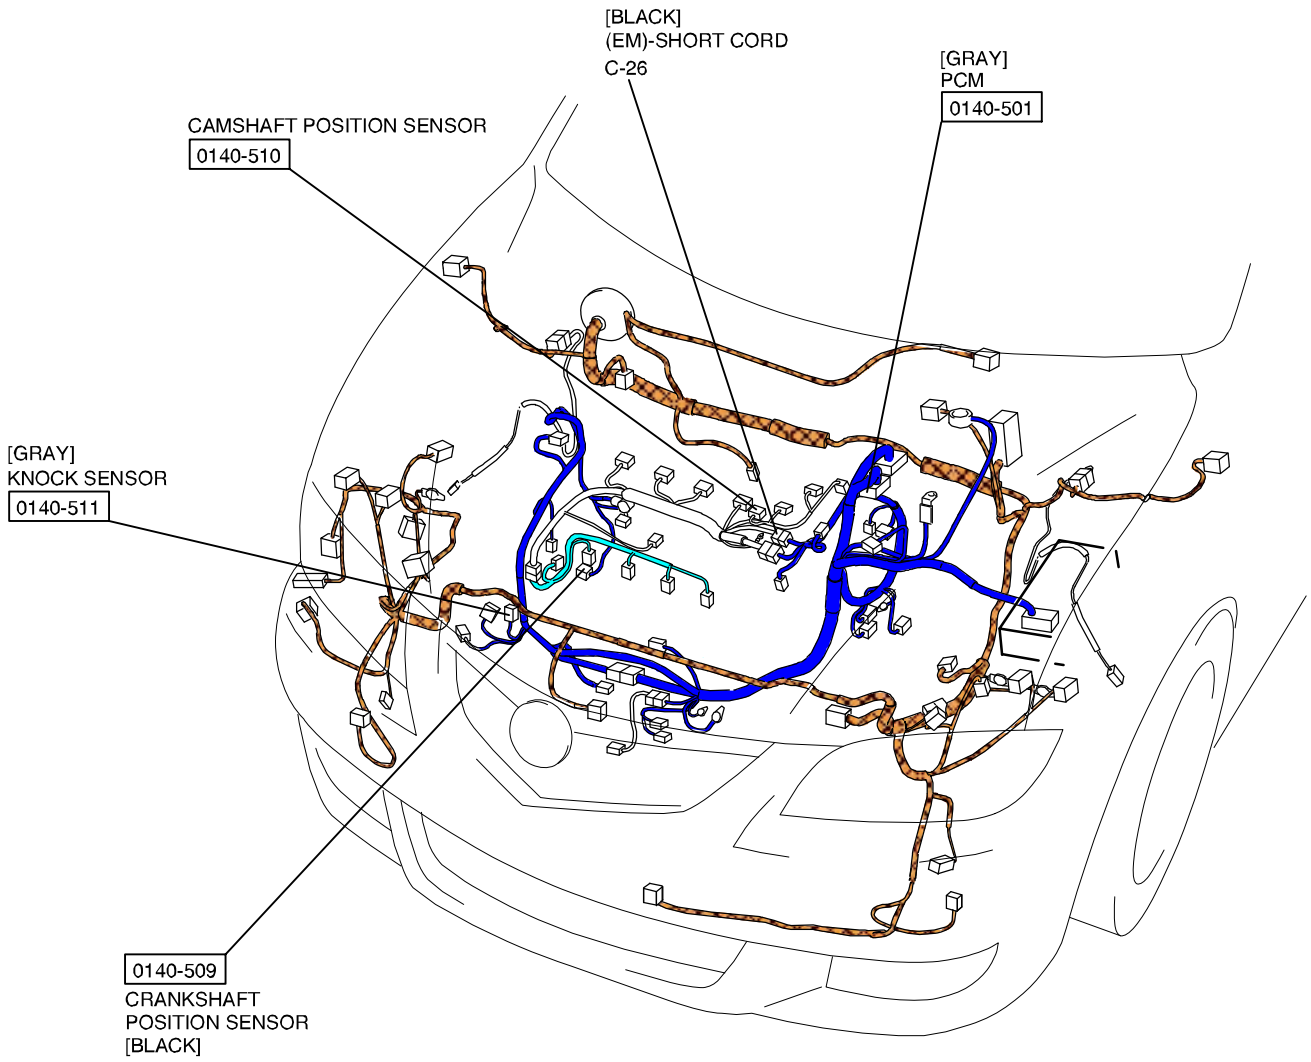



[BLACK]
(EM)-SHORT CORD
C-26
[GRAY]
PCM
0140-501
CAMSHAFT POSITION SENSOR
0140-510
[GRAY]
KNOCK SENSOR
0140-511
0140-509
CRANKSHAFT
POSITION SENSOR
[BLACK]
:FRONT HARNESS
:EMISSION HARNESS
:INJECTION HARNESS


C-26
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

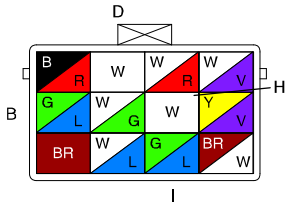


SHORT CORD

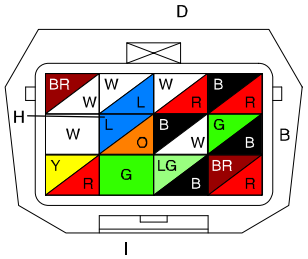


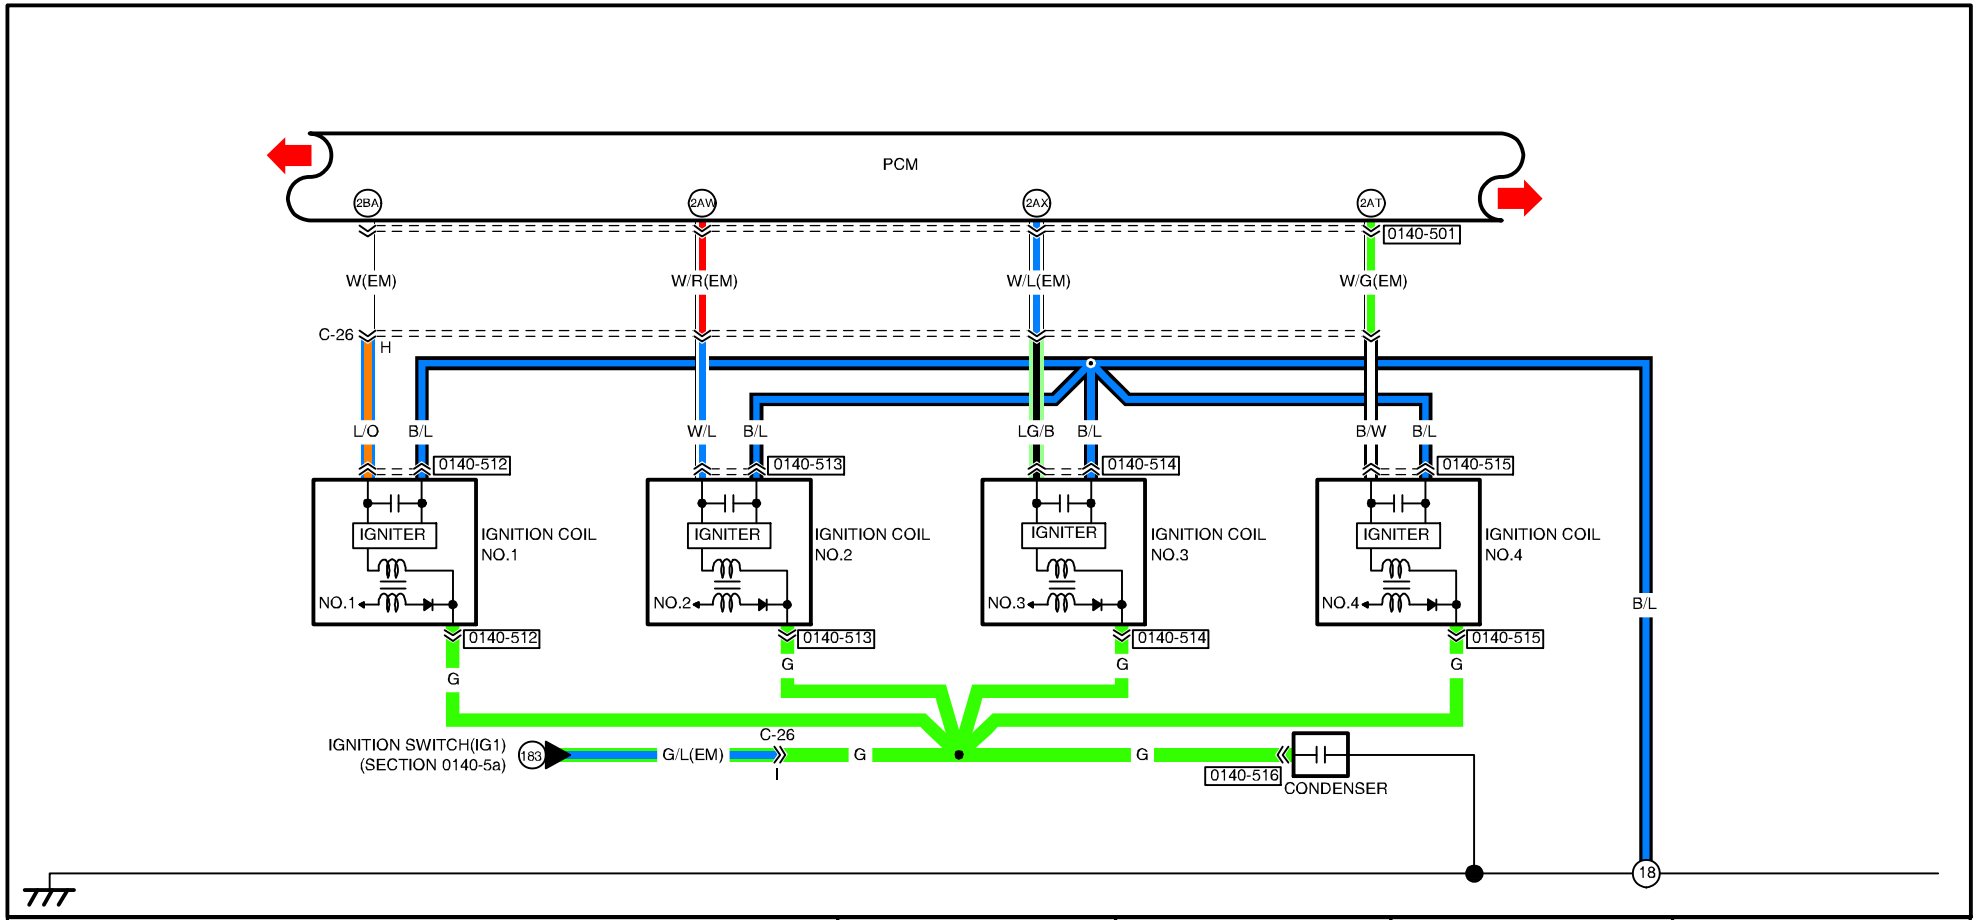


0140-501
PCM

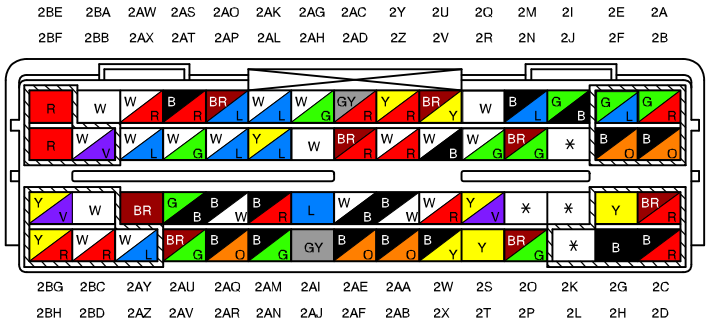


0140-512
IGNITION COIL NO.1




0140-513
IGNITION COIL NO.2




0140-514
IGNITION COIL NO.3




0140-515
IGNITION COIL NO.4




0140-516
CONDENSER



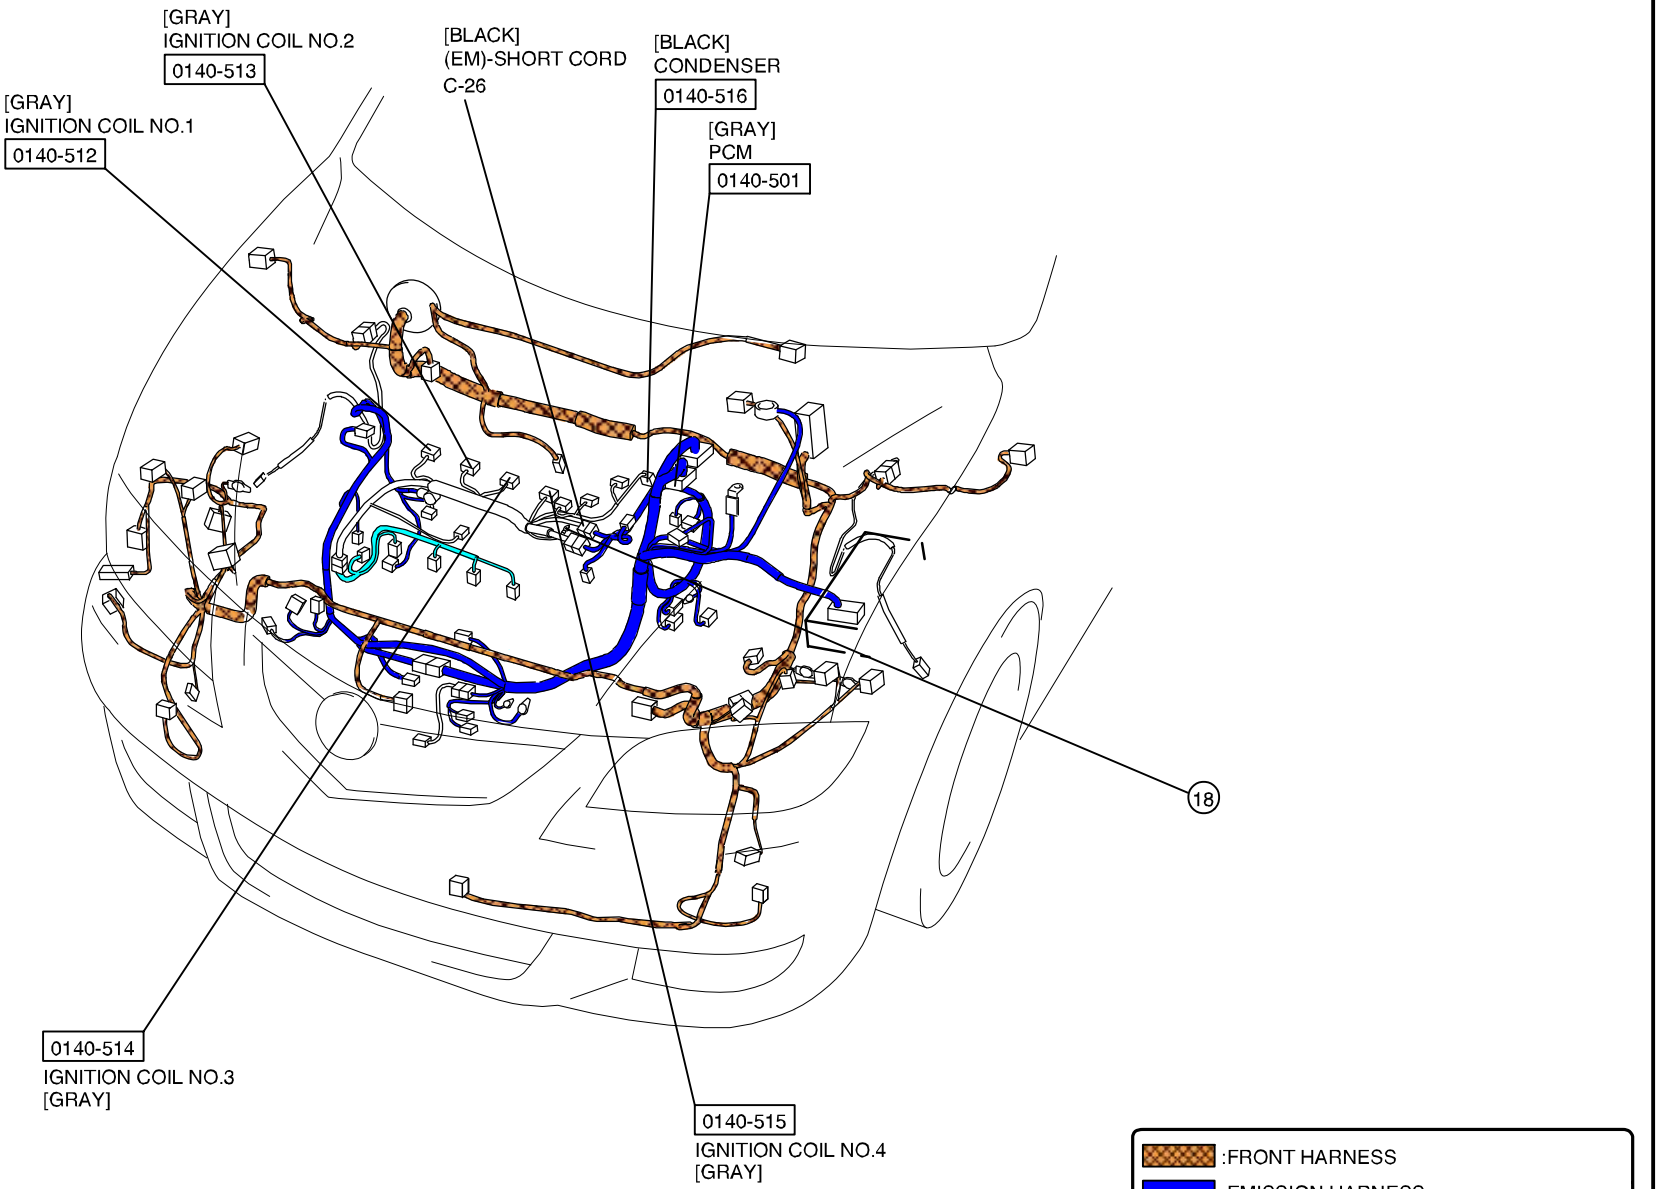

[GRAY]
IGNITION COIL NO.2
0140-513
[BLACK]
(EM)-SHORT CORD
C-26
[BLACK]
CONDENSER
0140-516
[GRAY]
IGNITION COIL NO.1
0140-512
[GRAY]
PCM
0140-501
18
0140-514
IGNITION COIL NO.3
[GRAY]
0140-515
IGNITION COIL NO.4
[GRAY]
:FRONT HARNESS
:EMISSION HARNESS
:INJECTION HARNESS


C-26
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

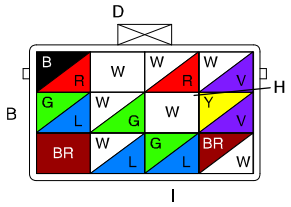


SHORT CORD

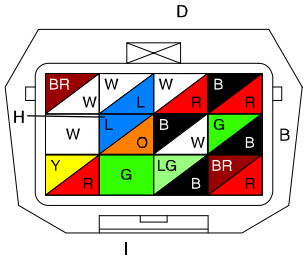


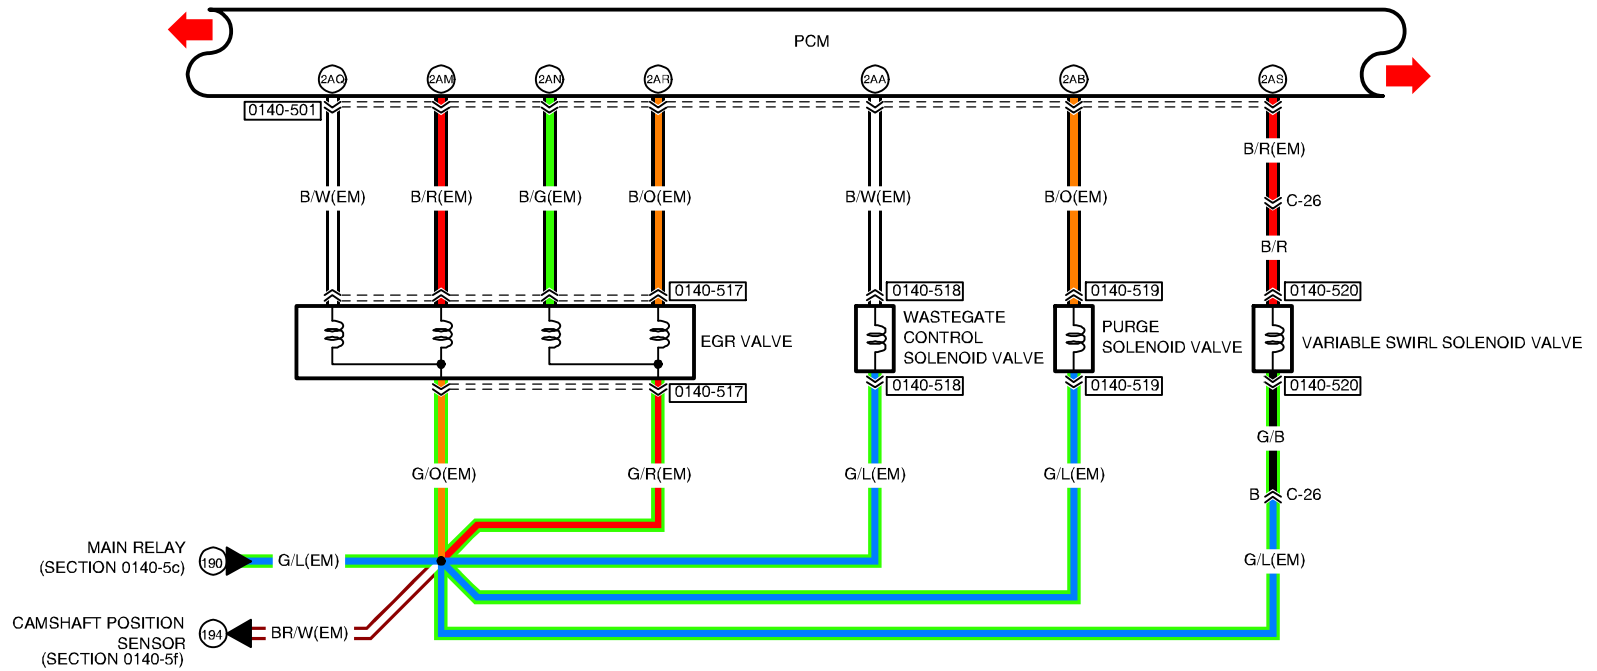

0140-501
PCM

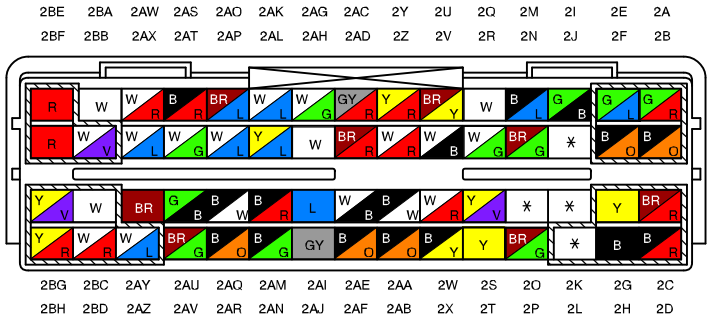


0140-517
EGR VALVE




0140-518
WASTEGATE CONTROL SOLENOID VALVE




0140-519
PURGE SOLENOID VALVE

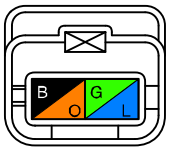


0140-520
VARIABLE SWIRL SOLENOID VALVE



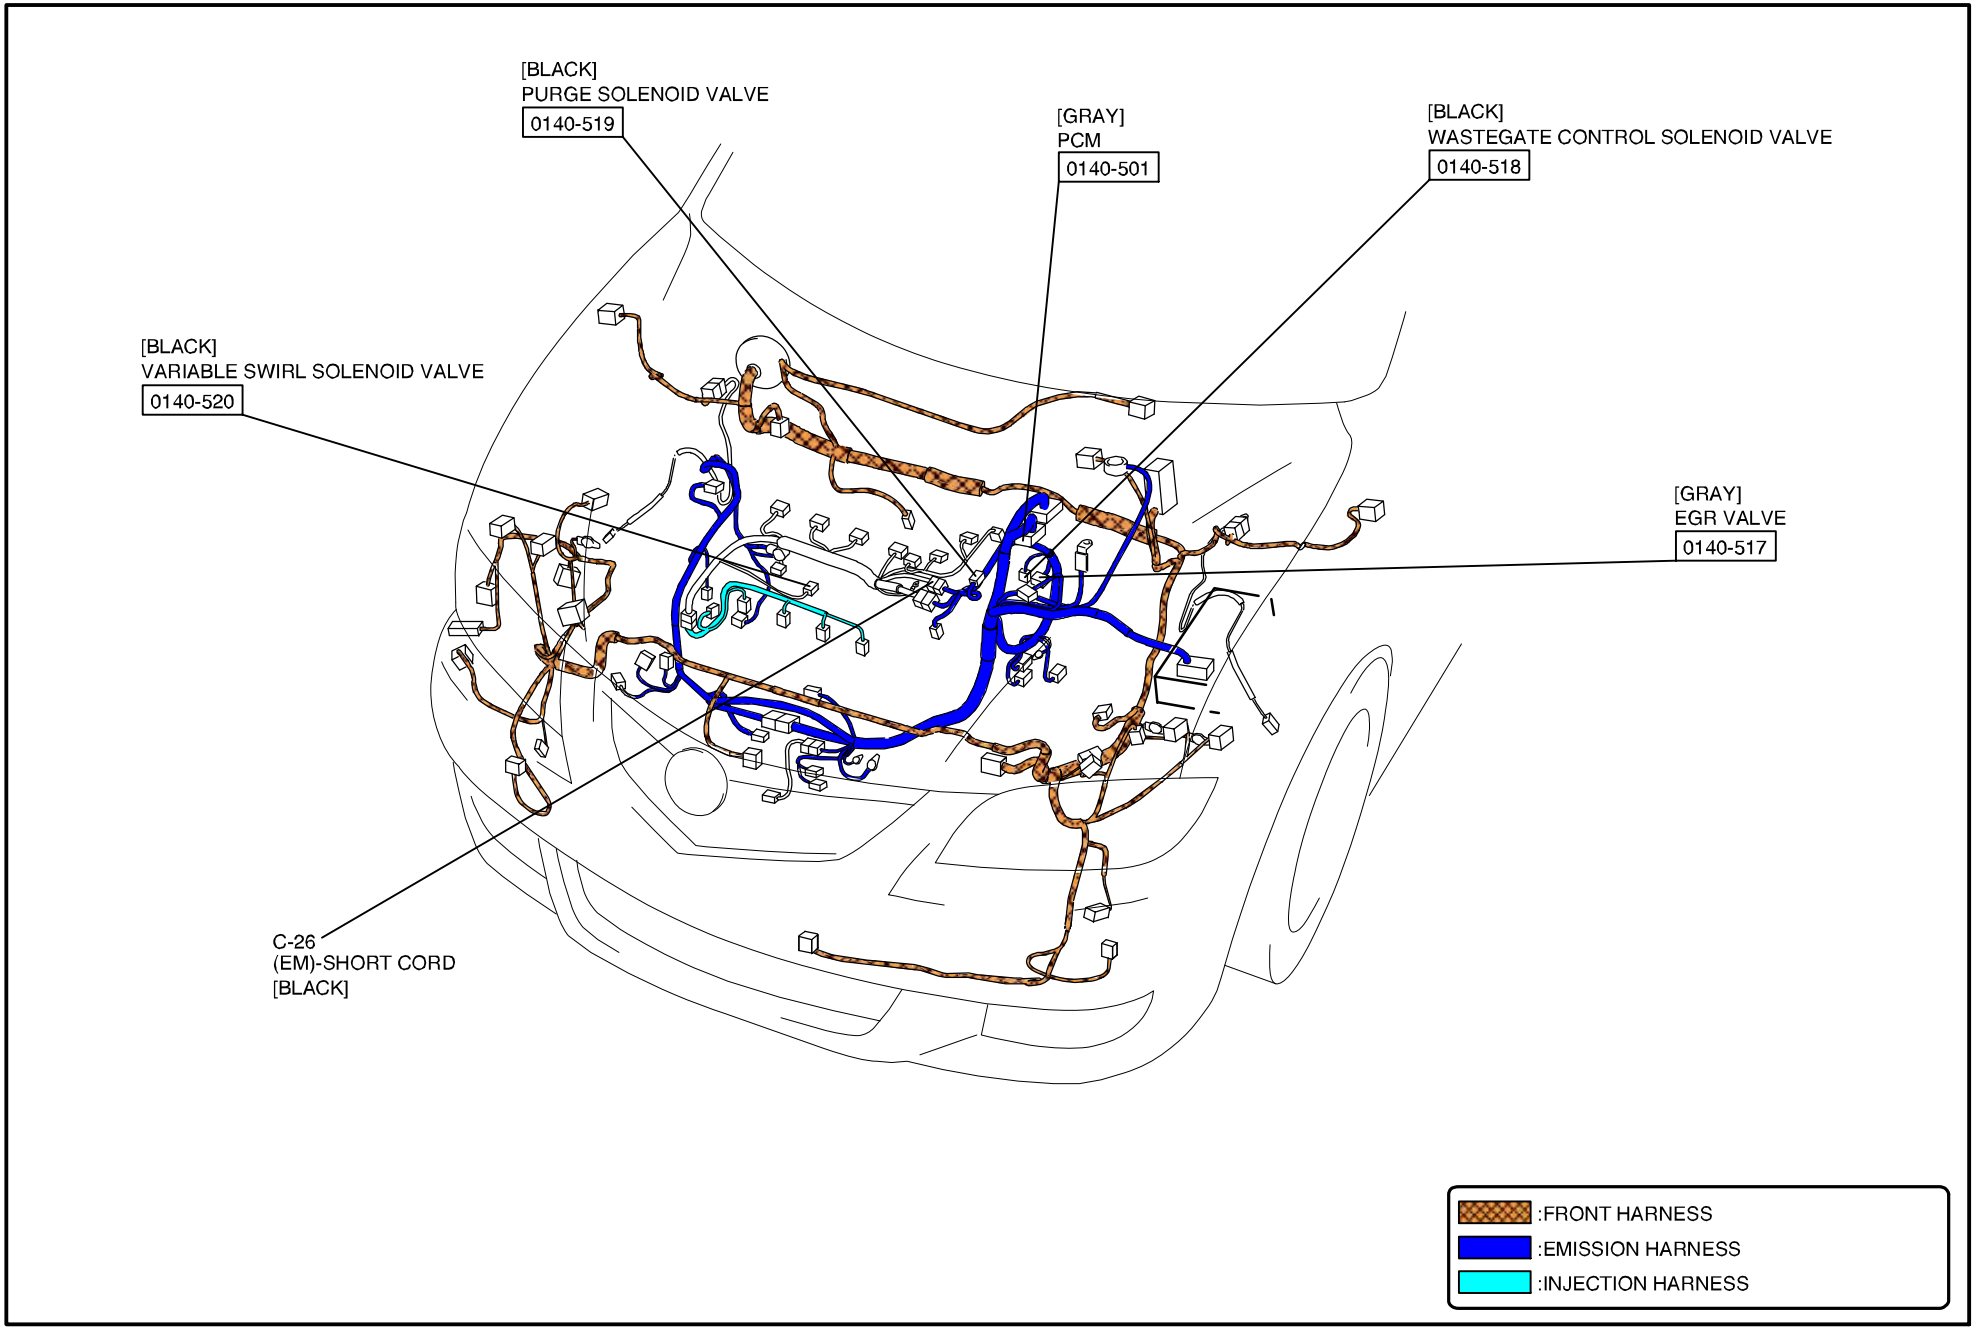

[BLACK]
PURGE SOLENOID VALVE
0140-519
[GRAY]
PCM
0140-501
[BLACK]
WASTEGATE CONTROL SOLENOID VALVE
0140-518
[BLACK]
VARIABLE SWIRL SOLENOID VALVE
0140-520
[GRAY]
EGR VALVE
0140-517
C-26
(EM)-SHORT CORD
[BLACK]
:FRONT HARNESS
:EMISSION HARNESS
:INJECTION HARNESS


C-26
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

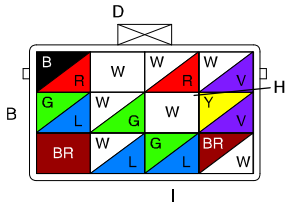


SHORT CORD

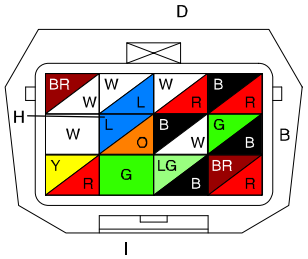


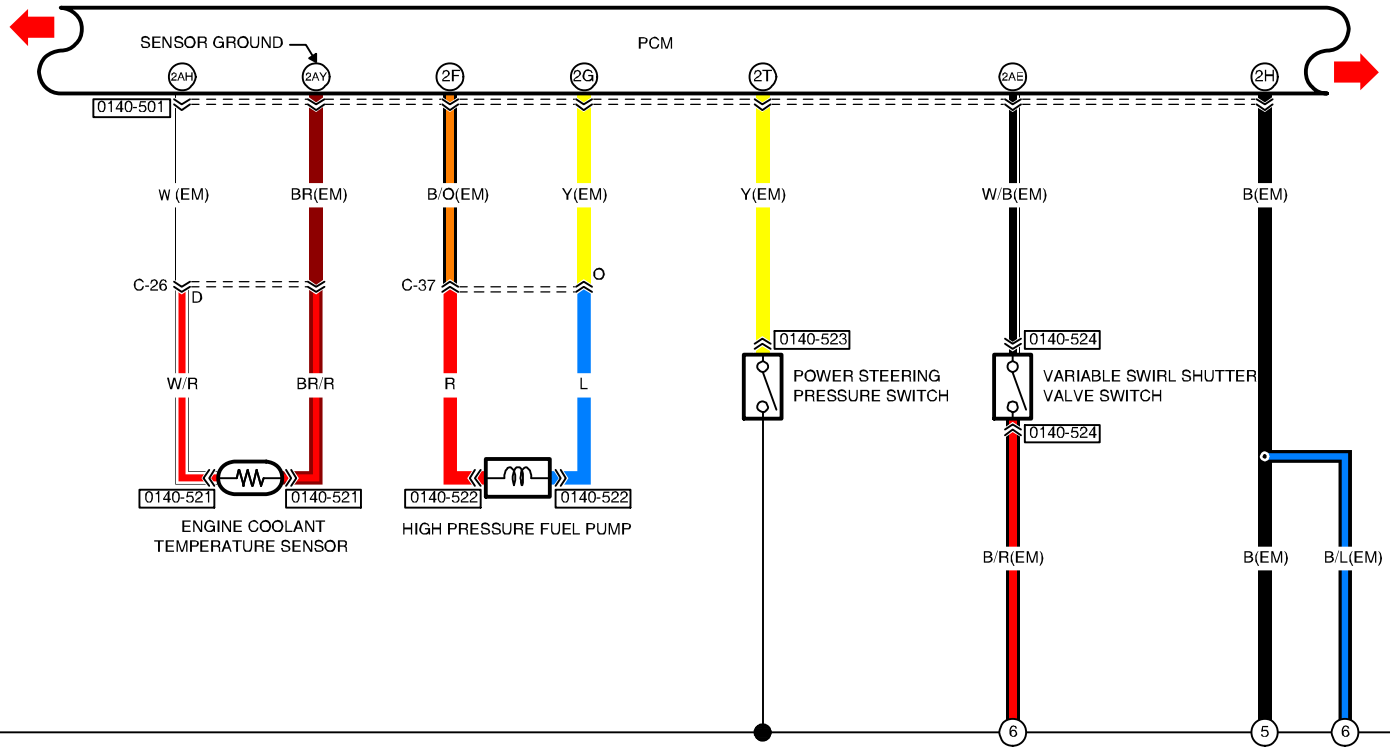


0140-501
PCM

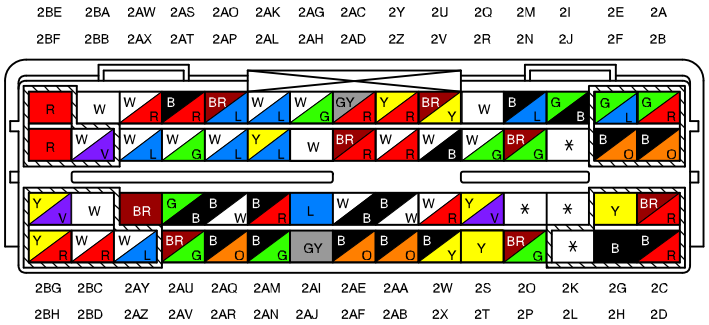

0140-521
ENGINE COOLANT TEMPERATURE SENSOR




0140-522
HIGH PRESSURE FUEL PUMP




0140-523
POWER STEERING PRESSURE SWITCH




0140-524
VARIABLE SWIRL SHUTTER VALVE SWITCH



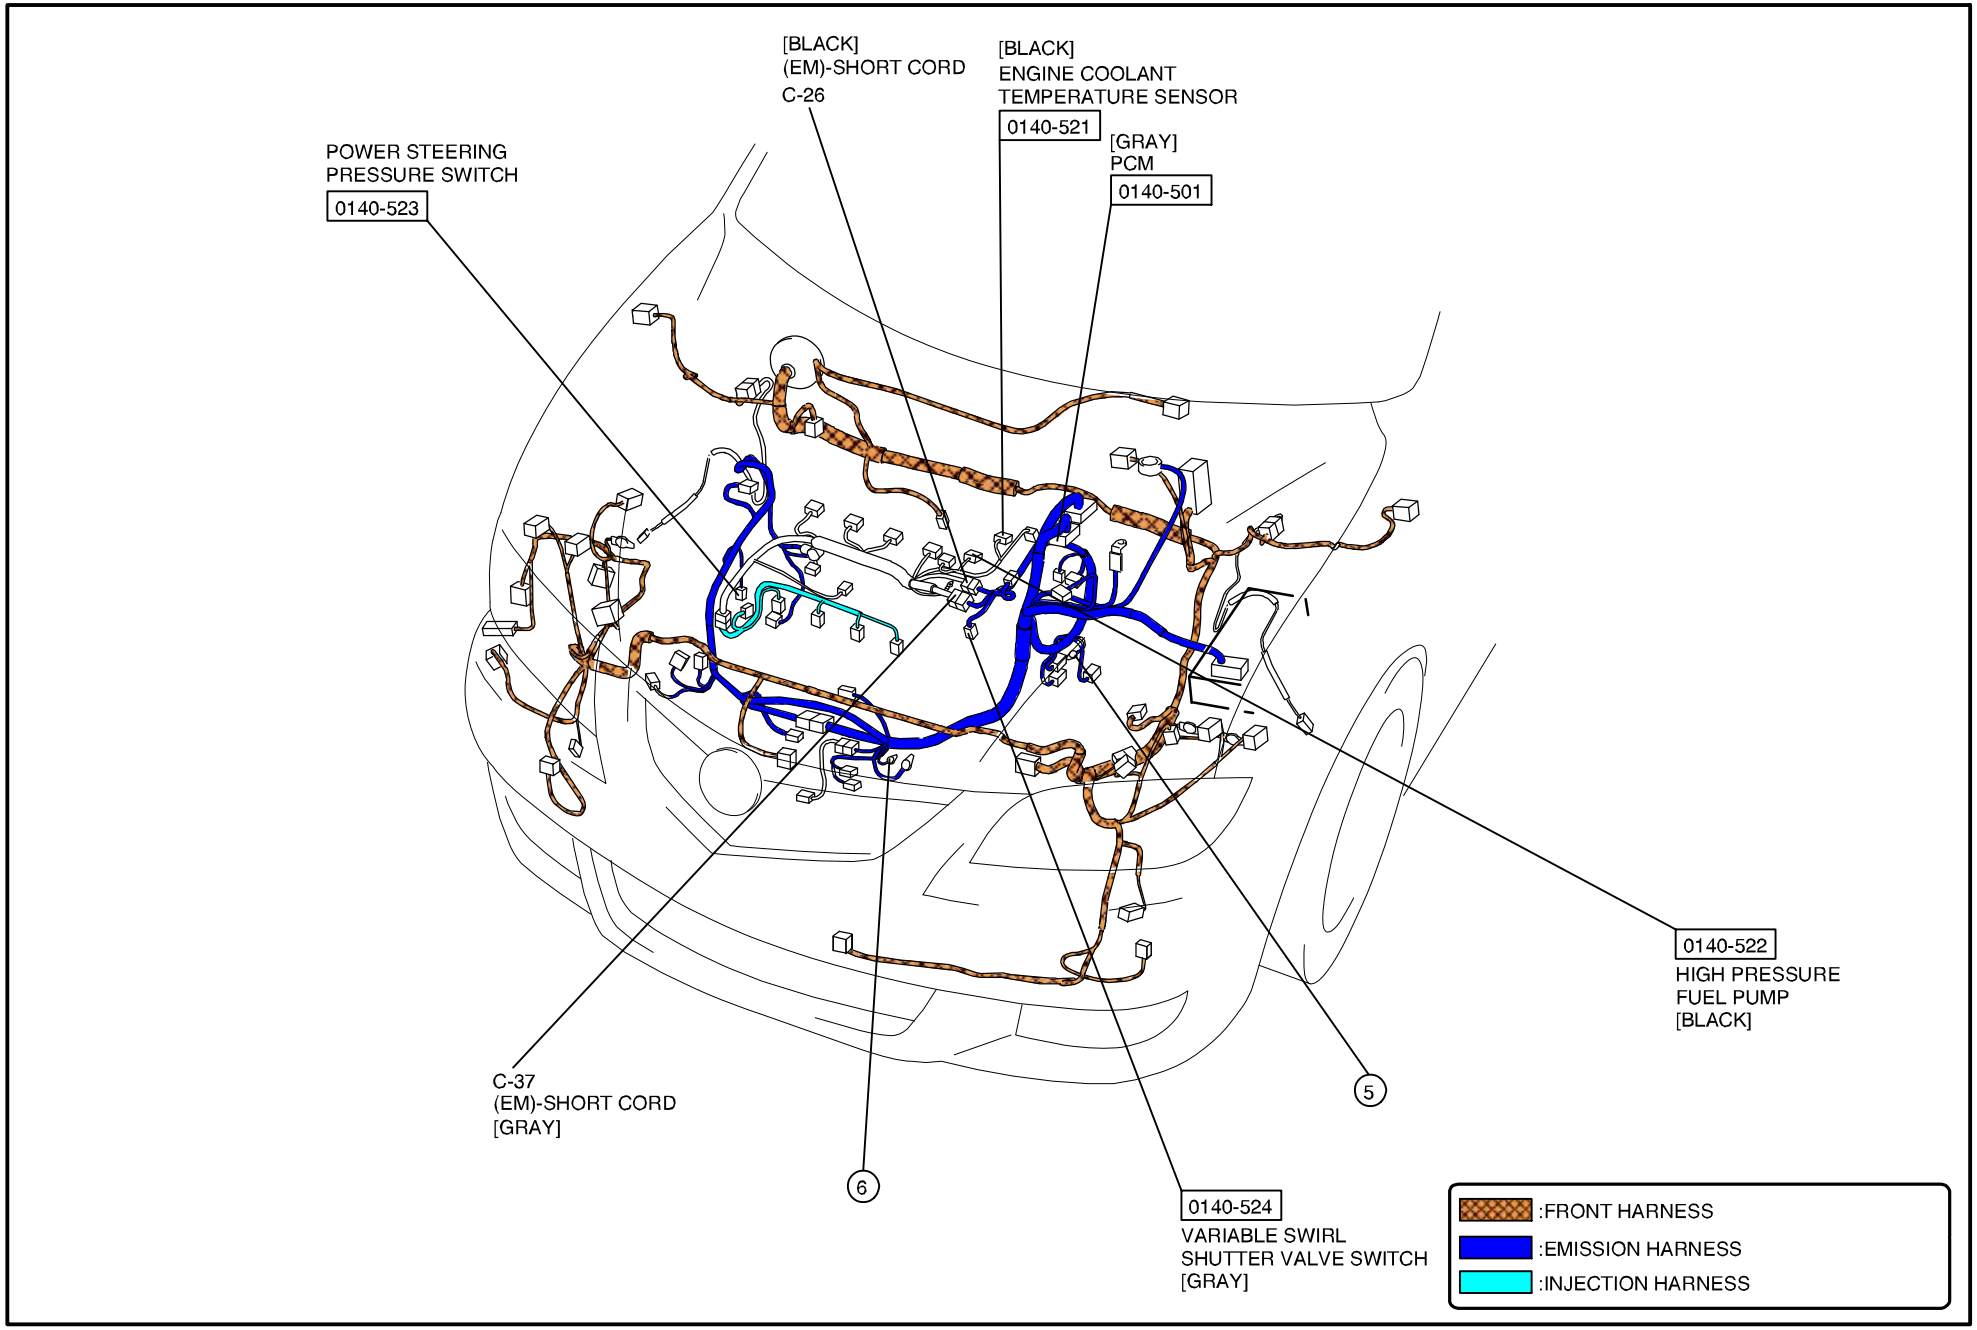

[BLACK]
(EM)-SHORT CORD
C-26
[BLACK]
ENGINE COOLANT
TEMPERATURE SENSOR
0140-521
[GRAY]
PCM
0140-501
POWER STEERING
PRESSURE SWITCH
0140-523
0140-522
HIGH PRESSURE
FUEL PUMP
[BLACK]
C-37
(EM)-SHORT CORD
[GRAY]
5
6
0140-524
VARIABLE SWIRL
SHUTTER VALVE SWITCH
[GRAY]
:FRONT HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-26
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

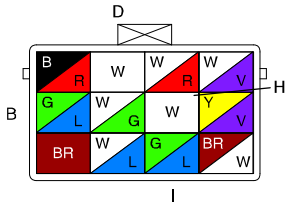


SHORT CORD

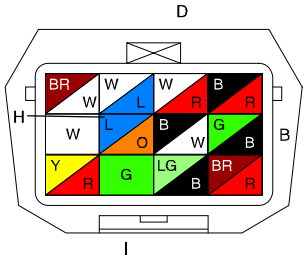



C-37
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

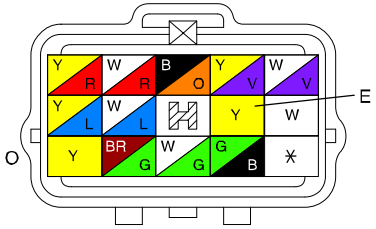


SHORT CORD

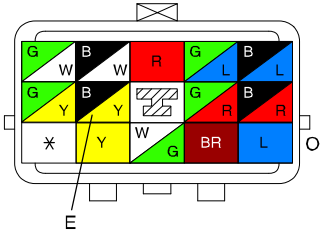


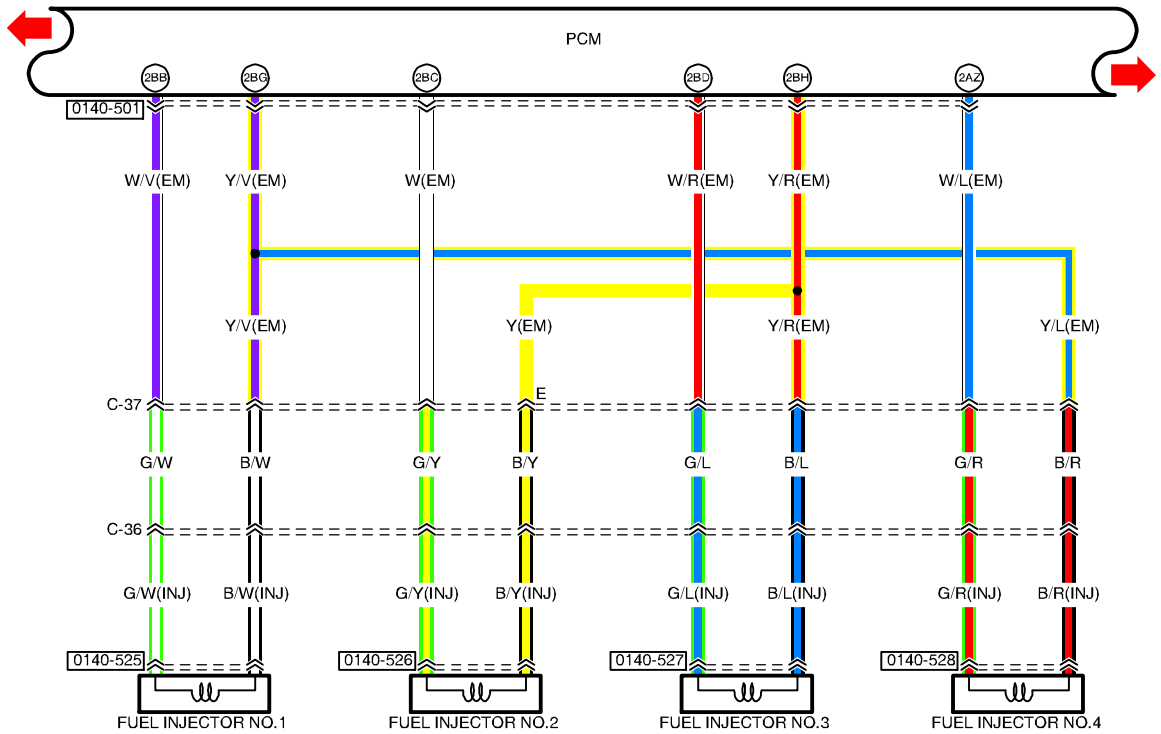


0140-501
PCM

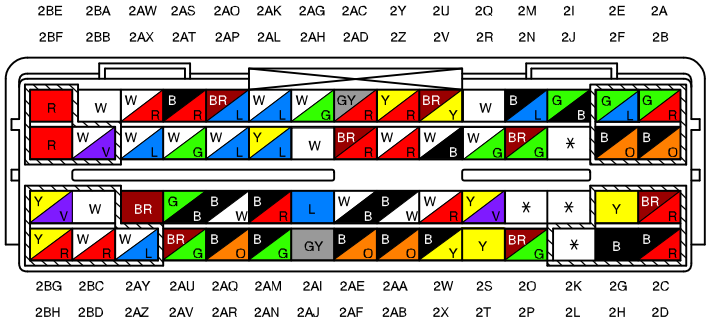


0140-525
FUEL INJECTOR NO.1




0140-526
FUEL INJECTOR NO.2




0140-527
FUEL INJECTOR NO.3




0140-528
FUEL INJECTOR NO.4



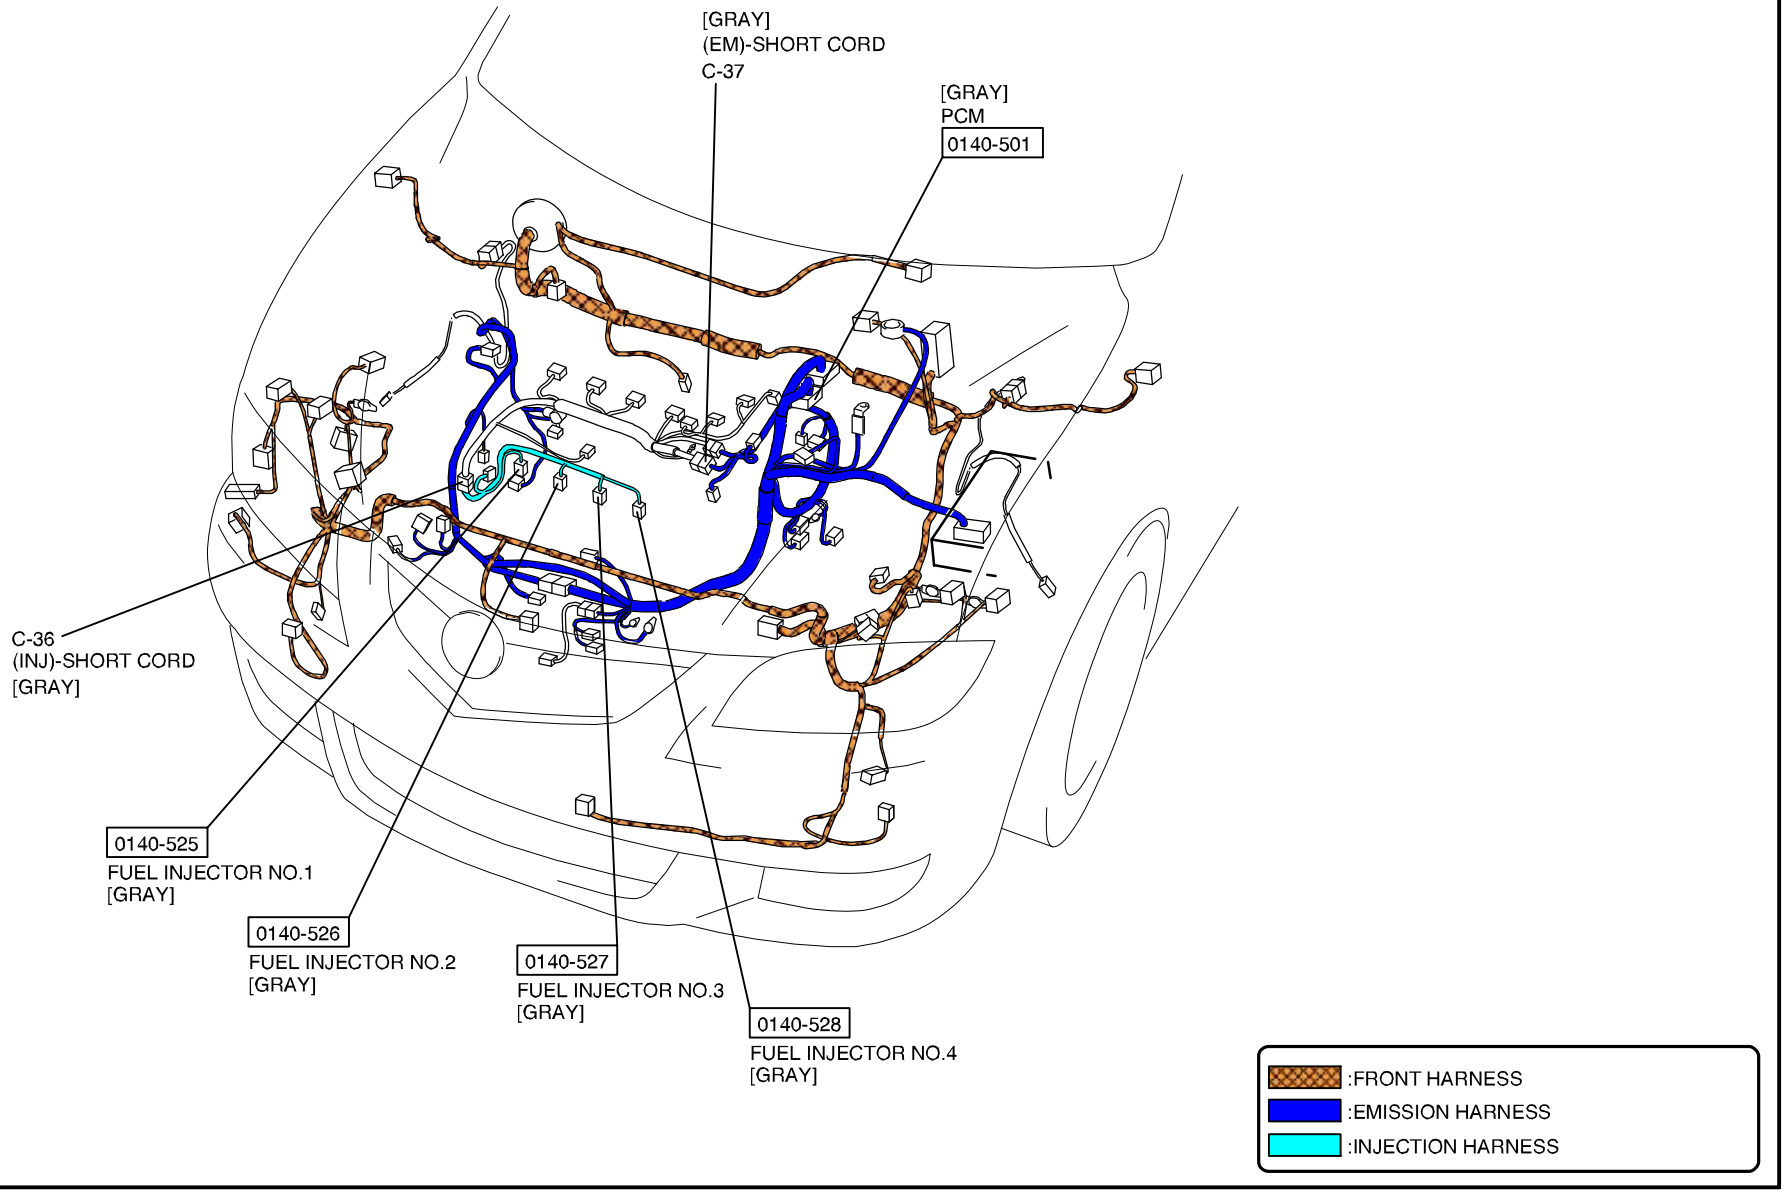

[GRAY]
(EM)-SHORT CORD
C-37
[GRAY]
PCM
0140-501
C-36
(INJ)-SHORT CORD
[GRAY]
0140-525
FUEL INJECTOR NO.1
[GRAY]
0140-526
FUEL INJECTOR NO.2
[GRAY]
0140-527
FUEL INJECTOR NO.3
[GRAY]
0140-528
FUEL INJECTOR NO.4
[GRAY]
:FRONT HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-36
INJECTION HARNESS-SHORT CORD

INJECTION HARNESS

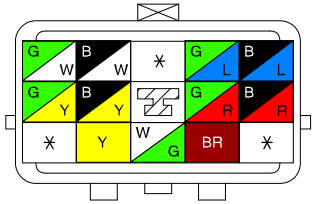


SHORT CORD

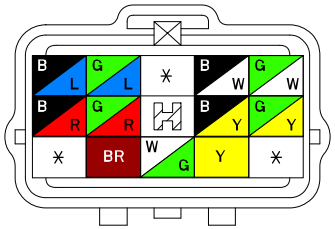



C-37
EMISSION HARNESS-SHORT CORD

EMISSION HARNESS

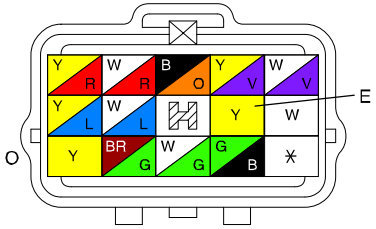



SHORT CORD

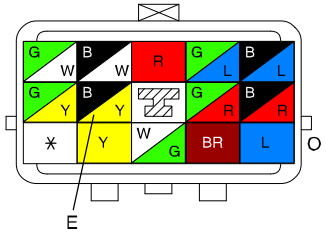


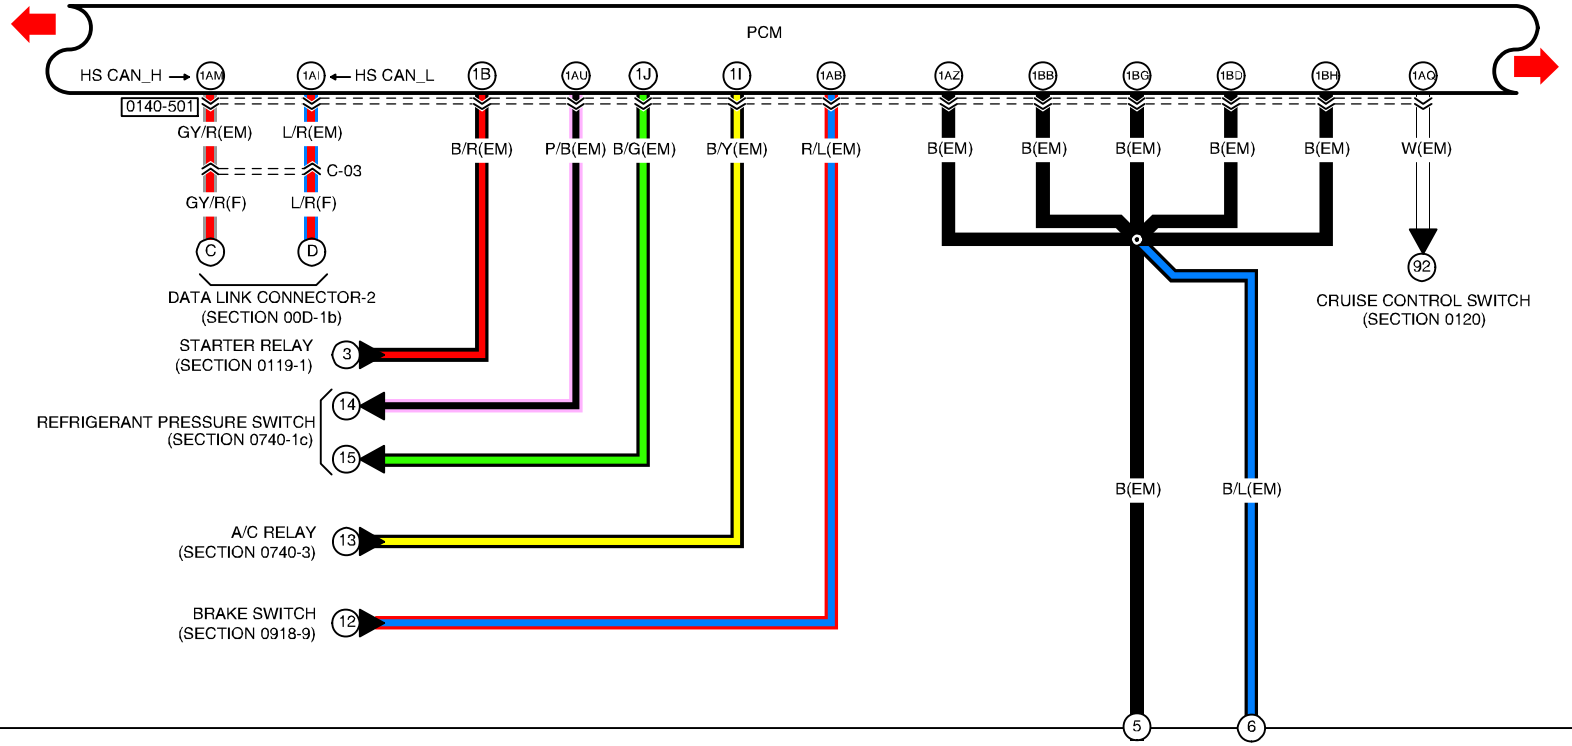
PCM
HS CAN_H
1AM
1AI
HS CAN_L
1B
1AU
1J
1I
1AB
1AZ
1BB
1BG
1BD
1BH
1AC
0140-501
GY/R(EM)
L/R(EM)
C-03
GY/R(F)
L/R(F)
C
D
DATA LINK CONNECTOR-2
(SECTION 00D-1b)
B/R(EM)
P/B(EM)
B/G(EM)
B/Y(EM)
R/L(EM)
B(EM)
B(EM)
B(EM)
B(EM)
B(EM)
W(EM)
92
CRUISE CONTROL SWITCH
(SECTION 0120)
STARTER RELAY
(SECTION 0119-1)
3
REFRIGERANT PRESSURE SWITCH
(SECTION 0740-1c)
14
15
A/C RELAY
(SECTION 0740-3)
13
BRAKE SWITCH
(SECTION 0918-9)
12
B(EM)
B/L(EM)
5
6


0140-501
PCM

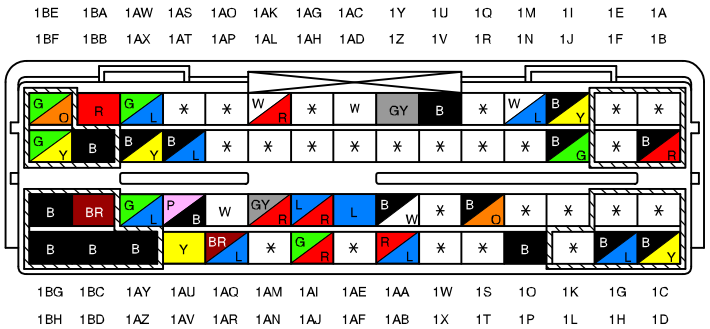
1BE 1BA 1AW 1AS 1AO 1AK 1AG 1AC 1Y 1U 1Q 1M 1I 1E 1A
1BF 1BB 1AX 1AT 1AP 1AL 1AH 1AD 1Z 1V 1R 1N 1J 1F 1B
1BG 1BC 1AY 1AU 1AQ 1AM 1AI 1AE 1AA 1W 1S 1O 1K 1G 1C
1BH 1BD 1AZ 1AV 1AR 1AN 1AJ 1AF 1AB 1X 1T 1P 1L 1H 1D

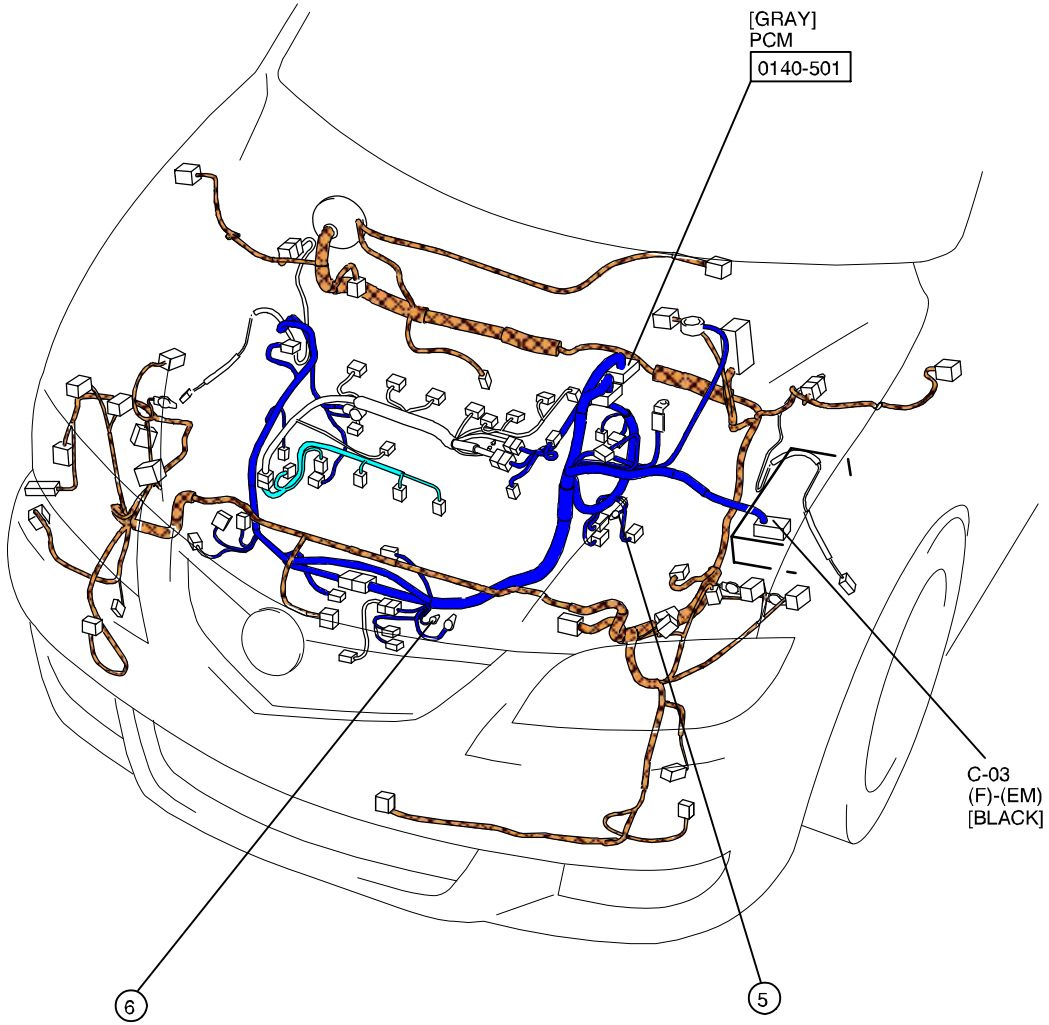

[GRAY]
PCM
0140-501
C-03
(F)-(EM)
[BLACK]
6
5
:FRONT HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

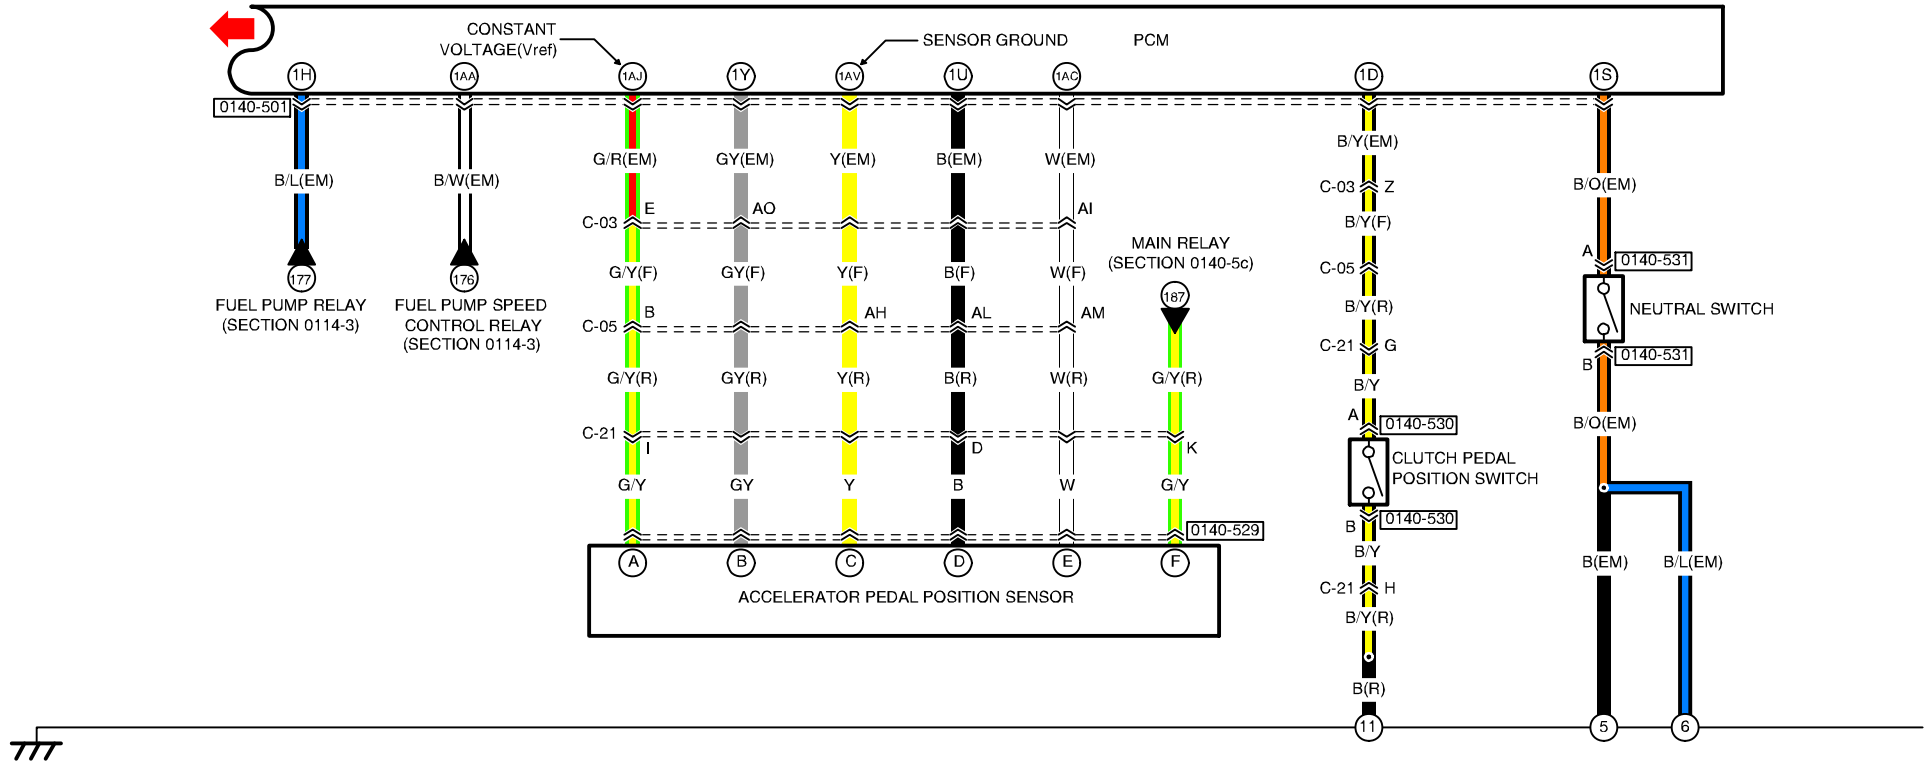


0140-501
PCM

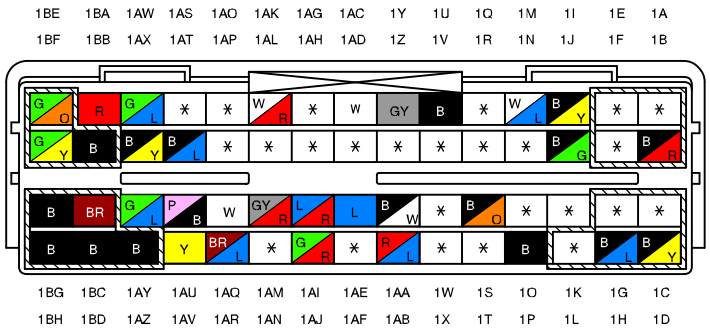


0140-529
ACCELERATOR PEDAL POSITION SENSOR




0140-530
CLUTCH PEDAL POSITION SWITCH




0140-531
NEUTRAL SWITCH



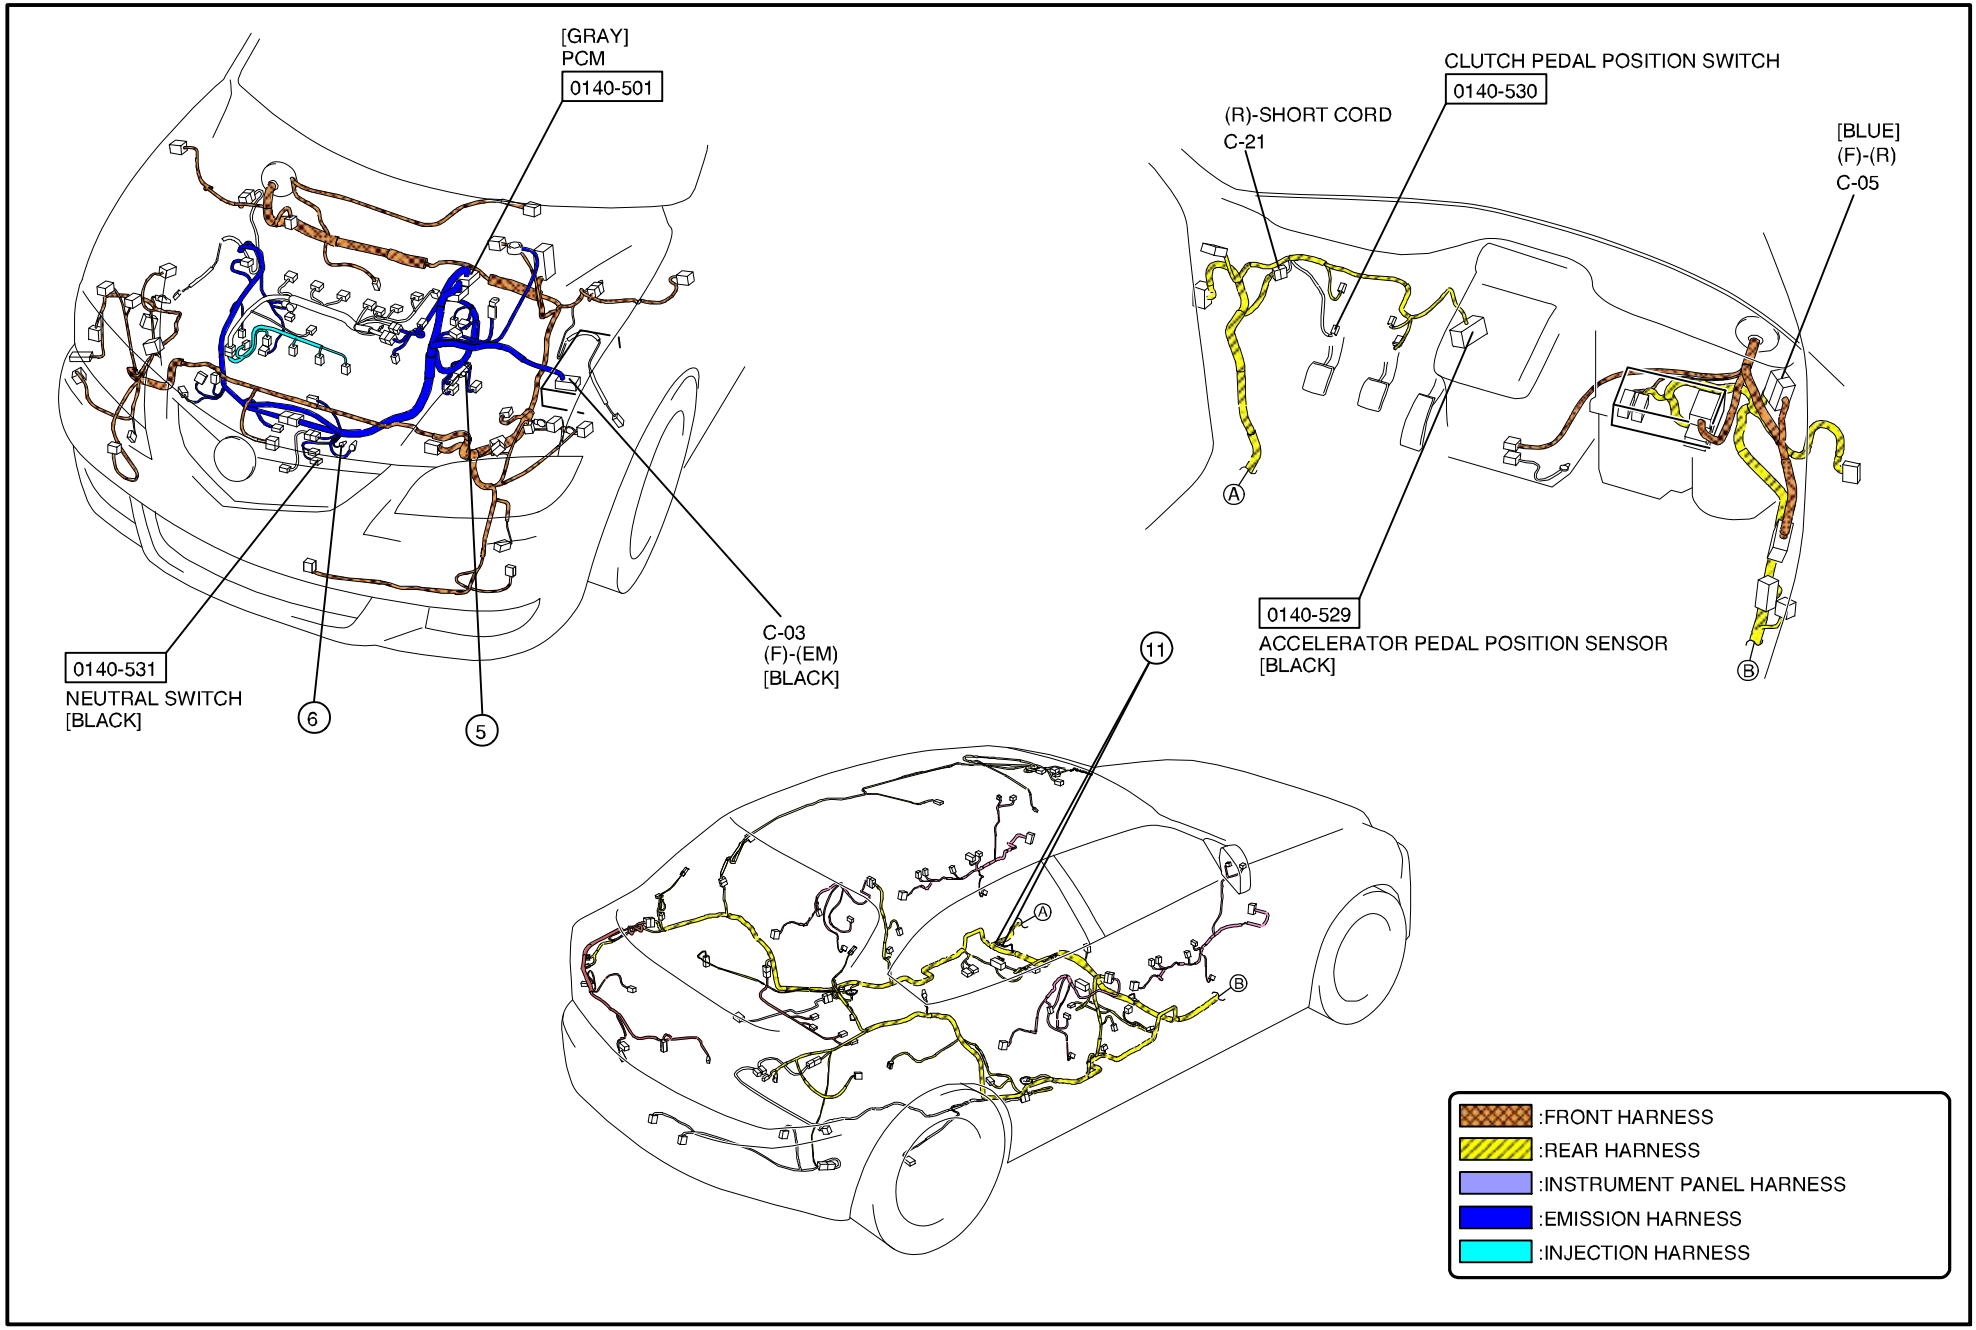

[GRAY]
PCM
0140-501
0140-531
NEUTRAL SWITCH
[BLACK]
6
5
C-03
(F)-(EM)
[BLACK]
CLUTCH PEDAL POSITION SWITCH
0140-530
(R)-SHORT CORD
C-21
[BLUE]
(F)-(R)
C-05
A
0140-529
ACCELERATOR PEDAL POSITION SENSOR
[BLACK]
B
11
A
B
:FRONT HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

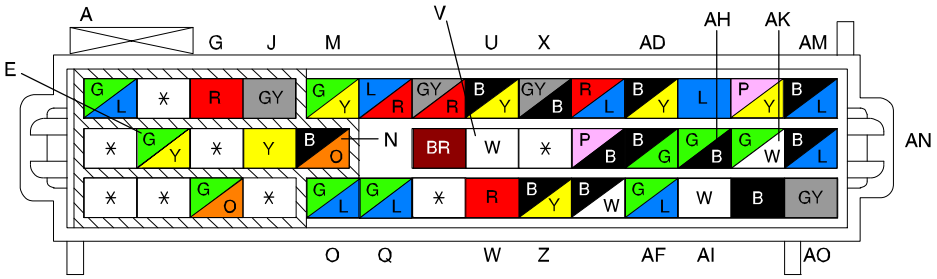


EMISSION HARNESS

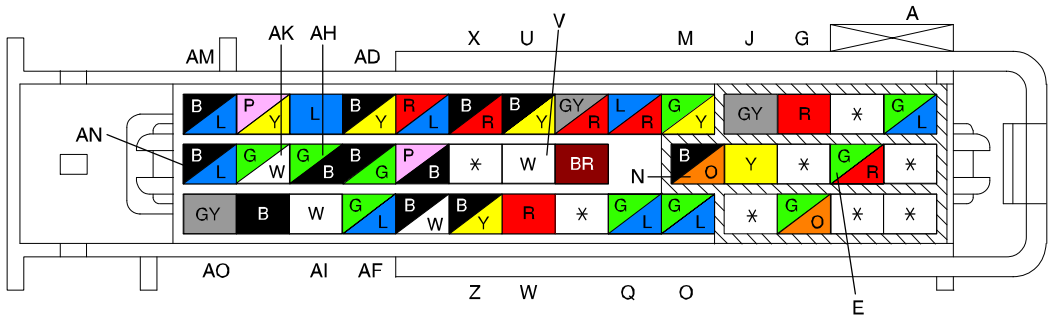


C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

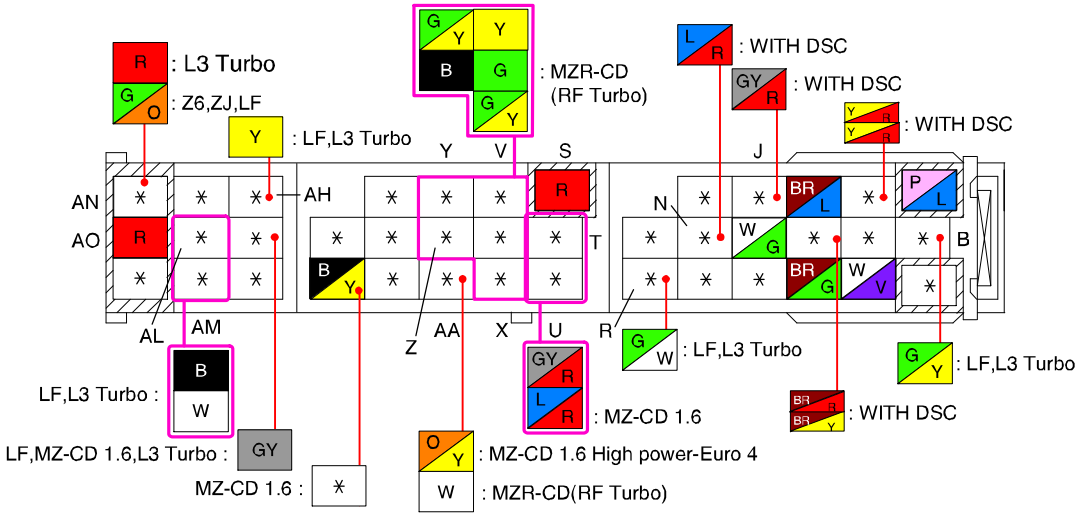


REAR HARNESS

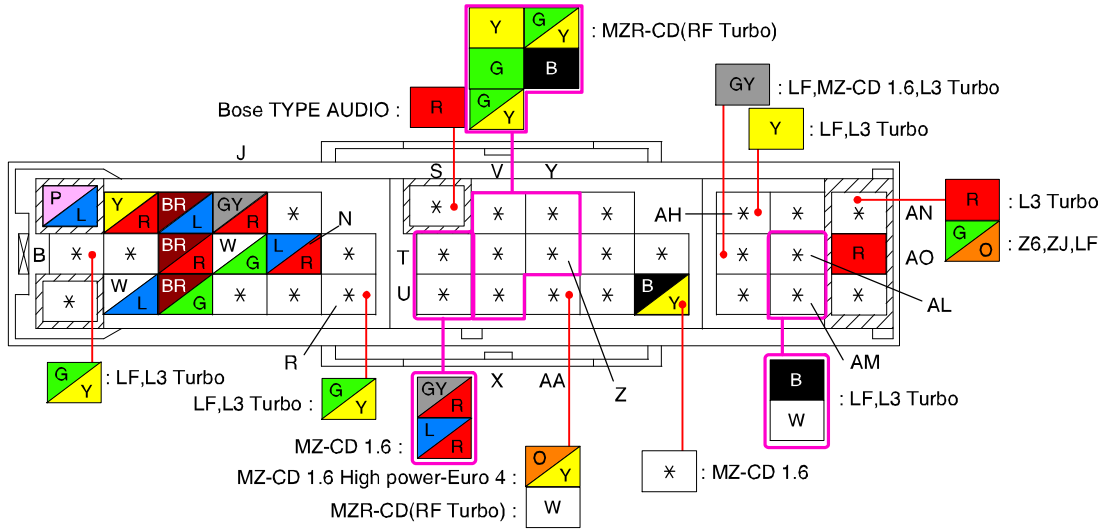



C-21
REAR HARNESS-SHORT CORD

REAR HARNESS

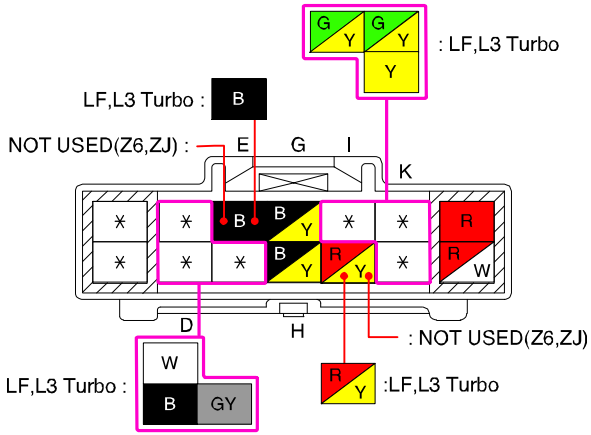


SHORT CORD

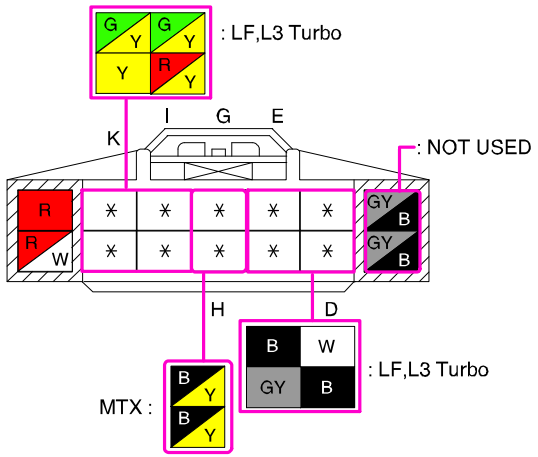

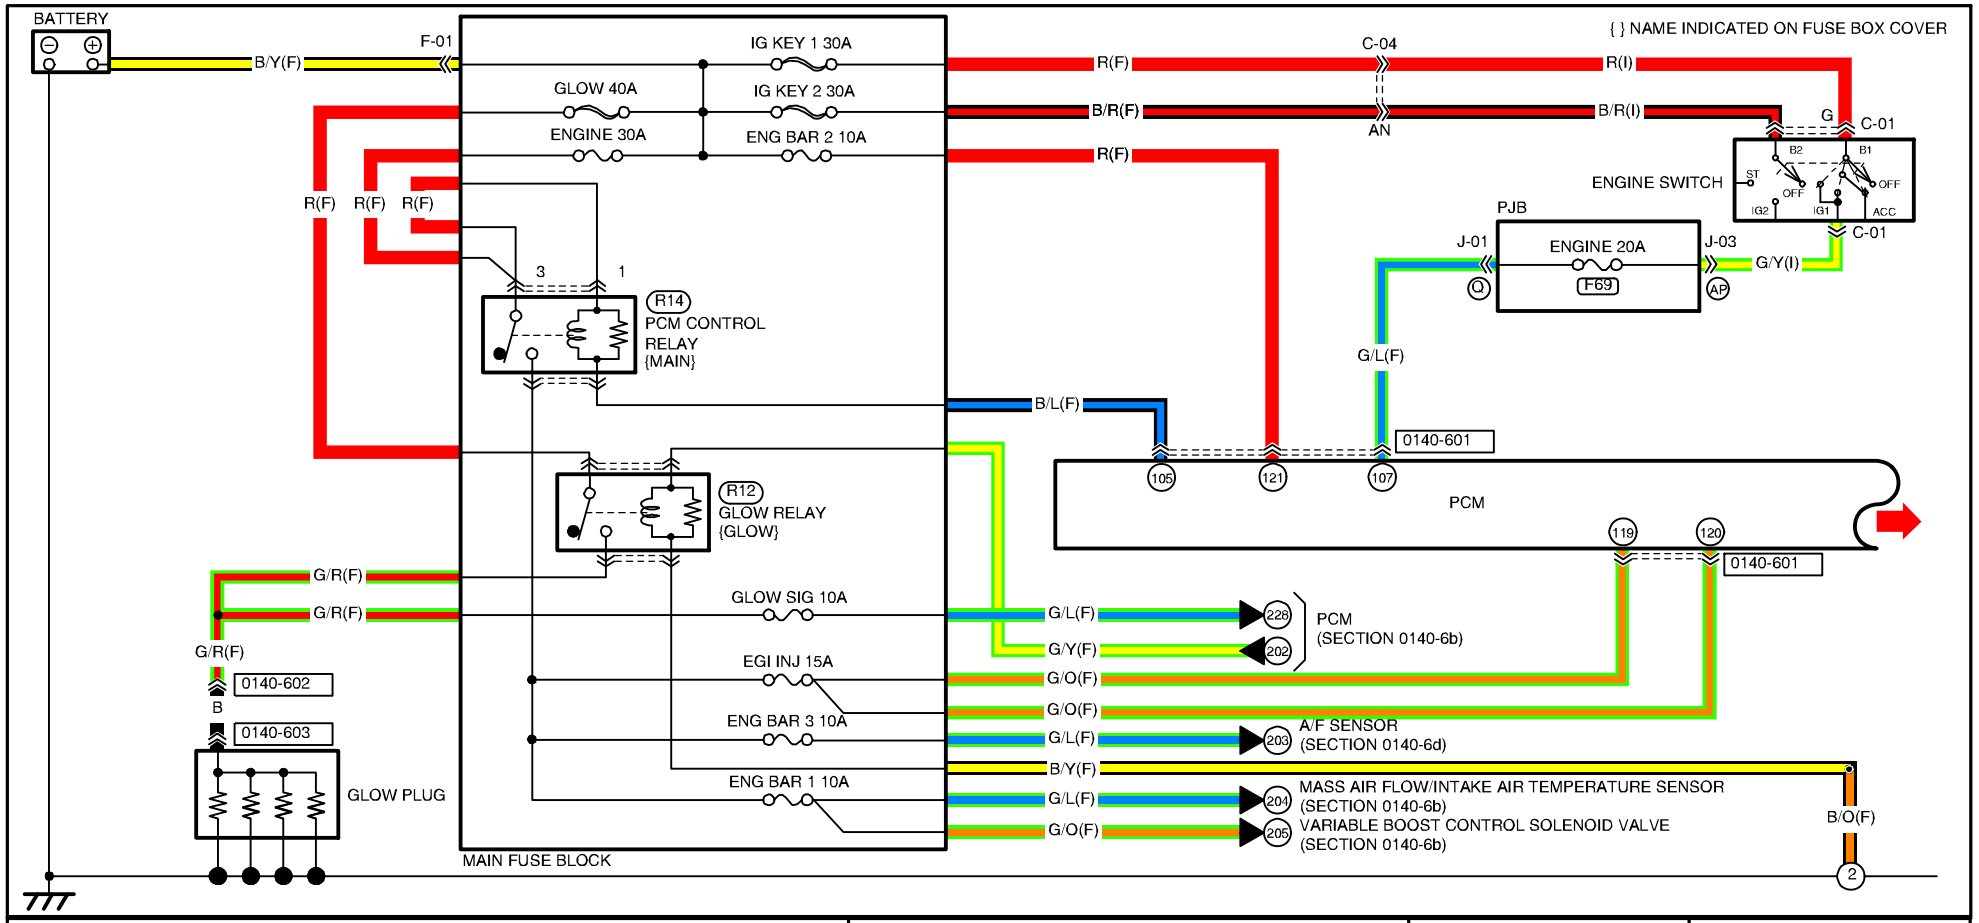

0140-601
PCM

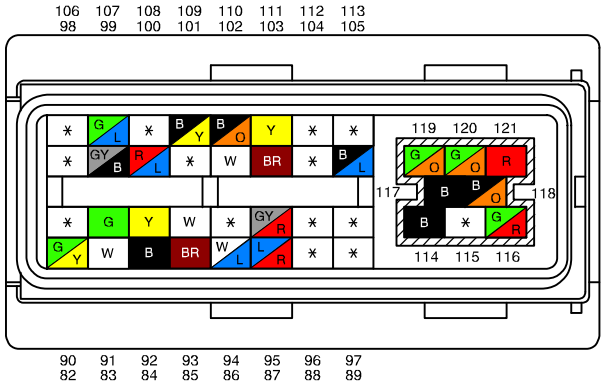

0140-602
FRONT HARNESS-SHORT CORD

FRONT HARNESS




SHORT CORD




0140-603
GLOW PLUG

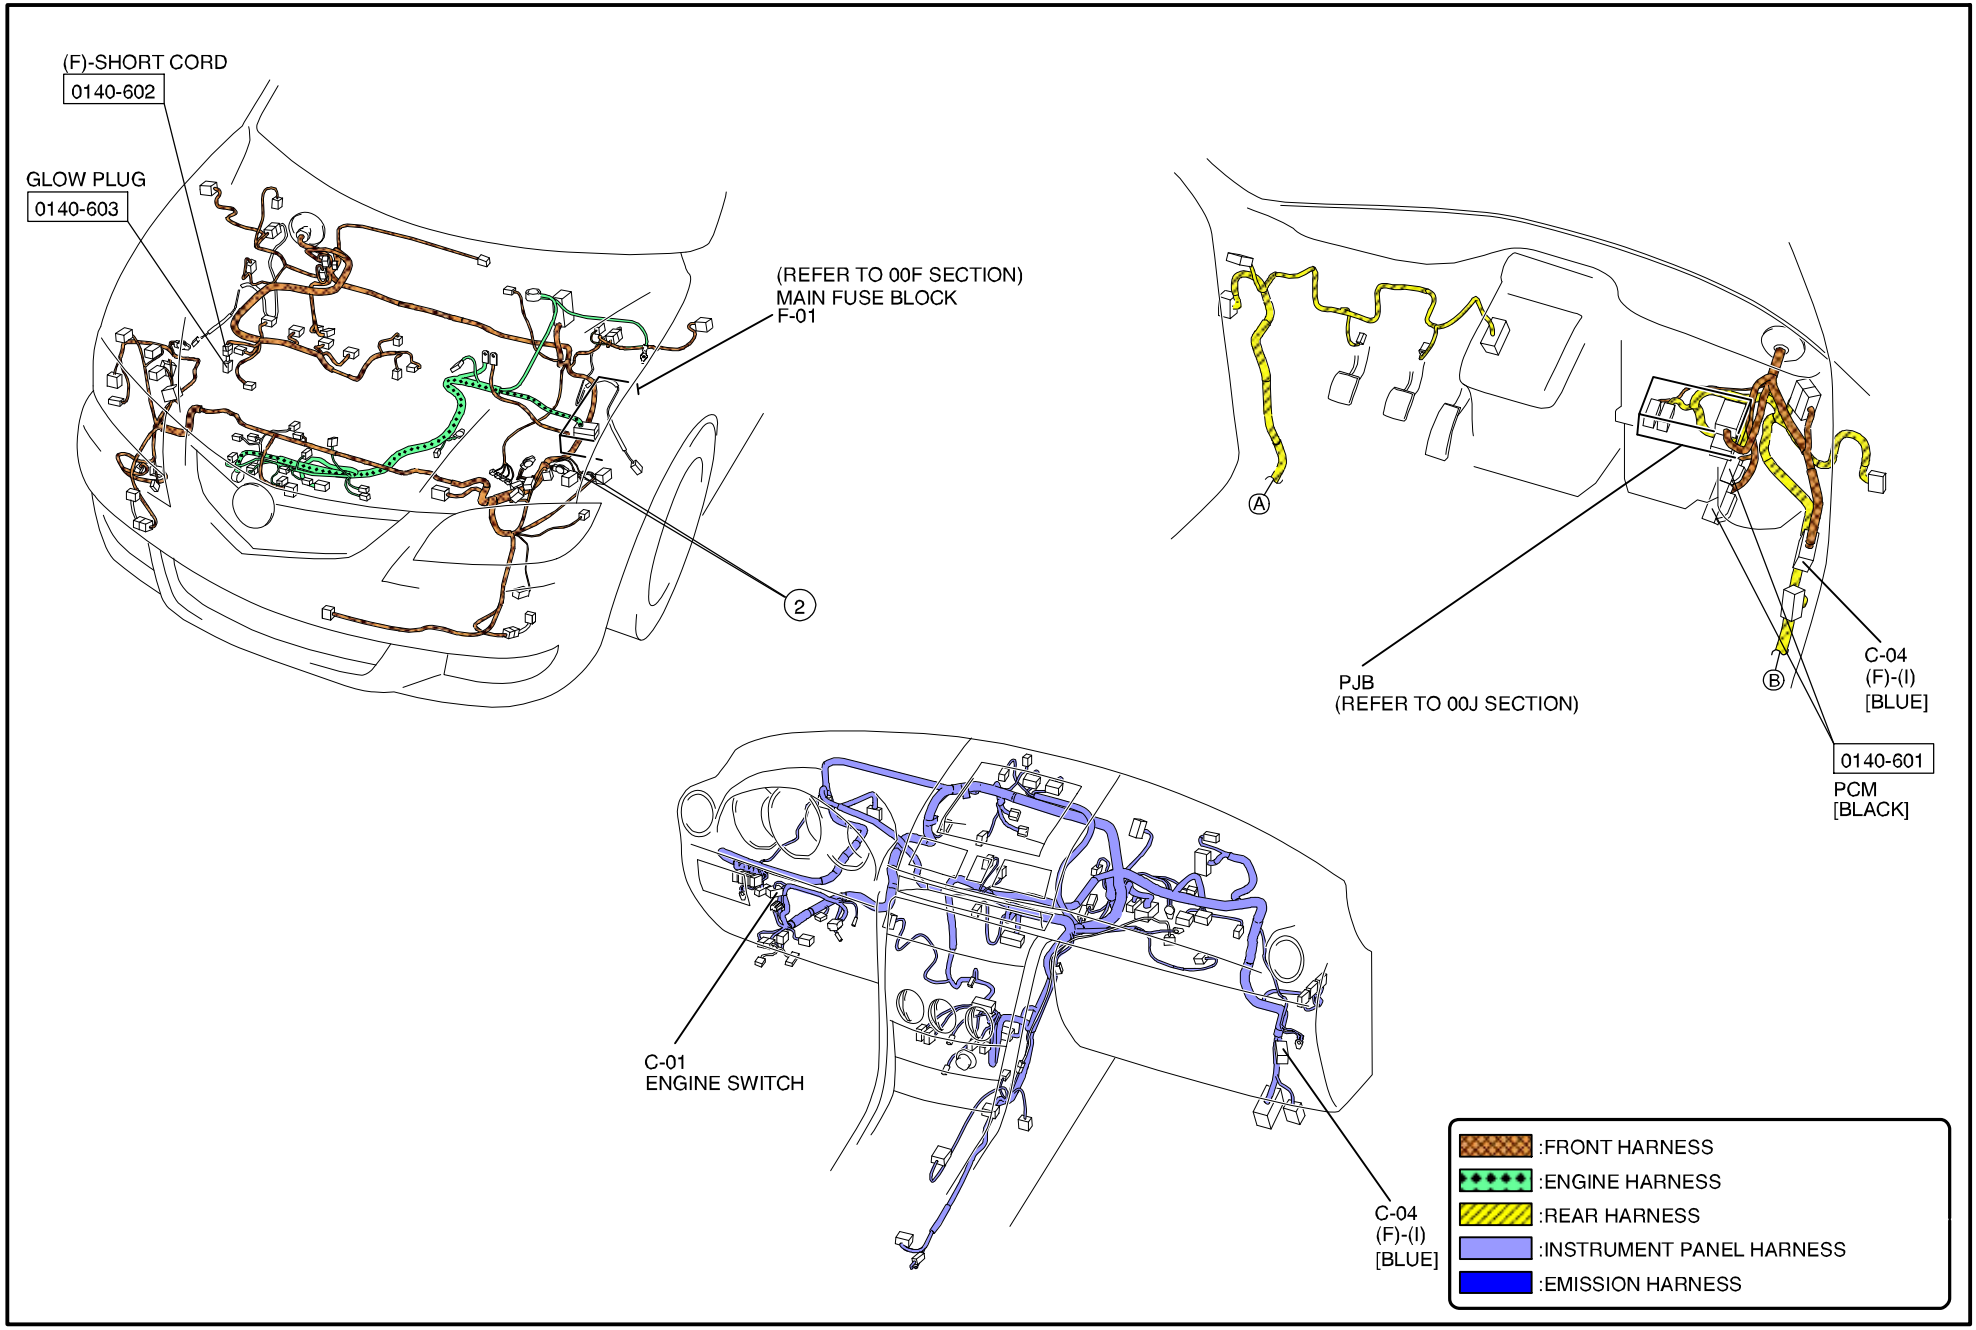



(F)-SHORT CORD
0140-602
GLOW PLUG
0140-603
(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
2
A
B
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
0140-601
PCM
[BLACK]
C-01
ENGINE SWITCH
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

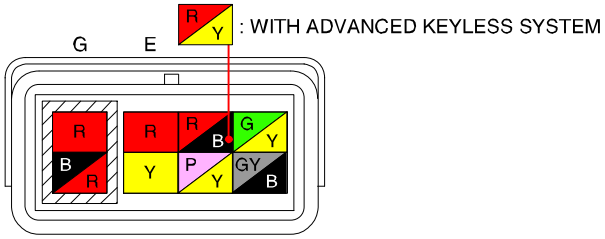



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

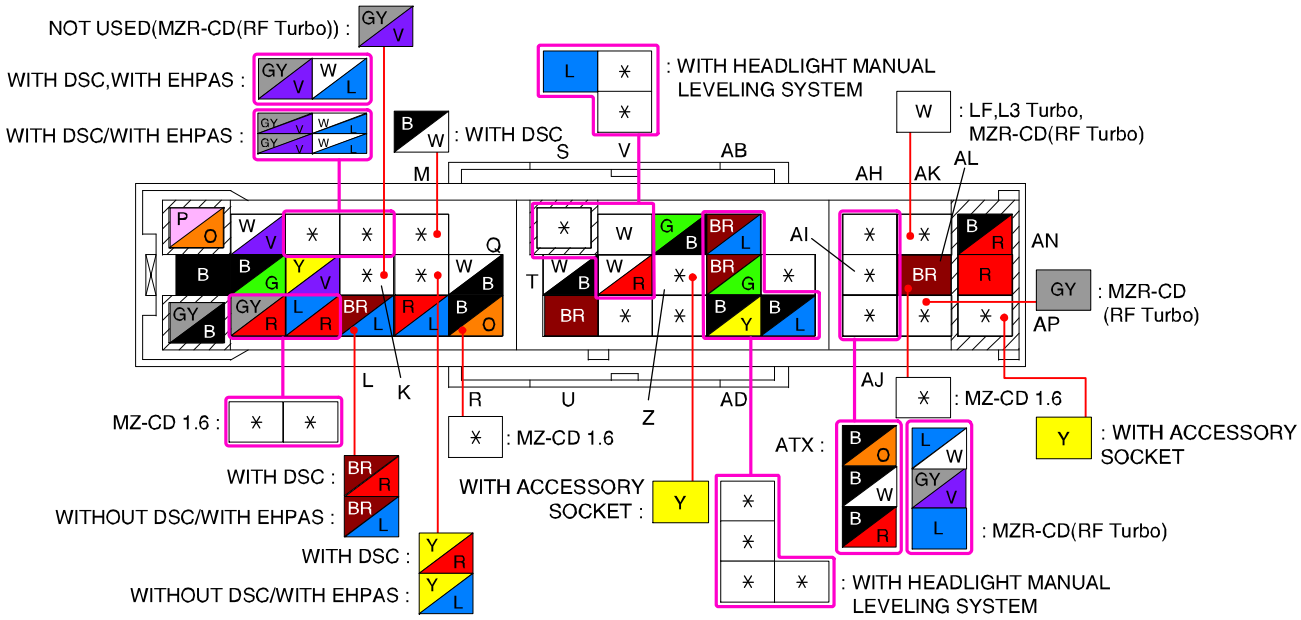

INSTRUMENT PANEL HARNESS

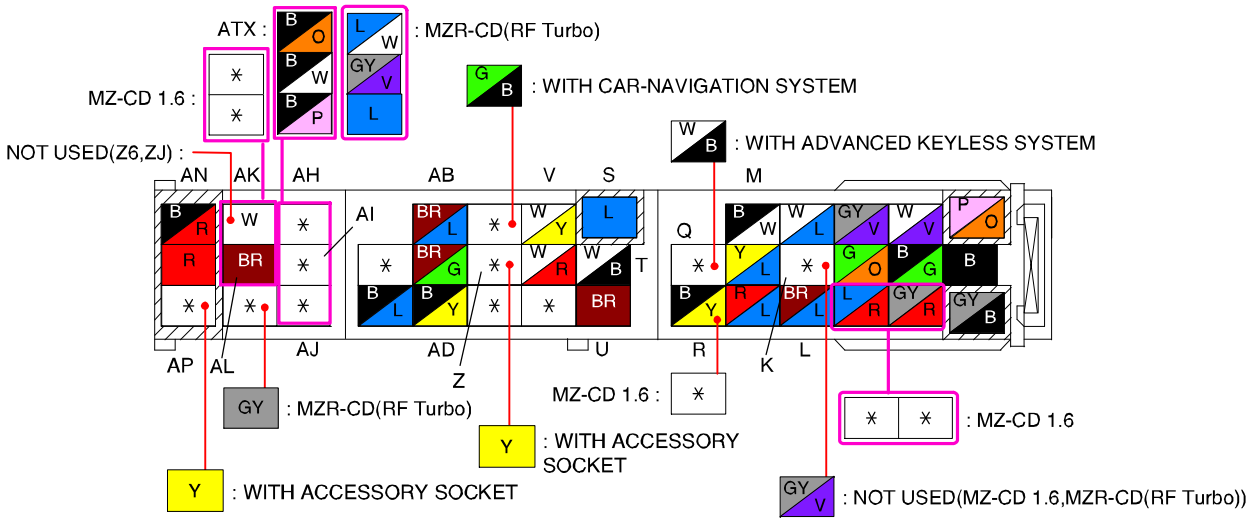

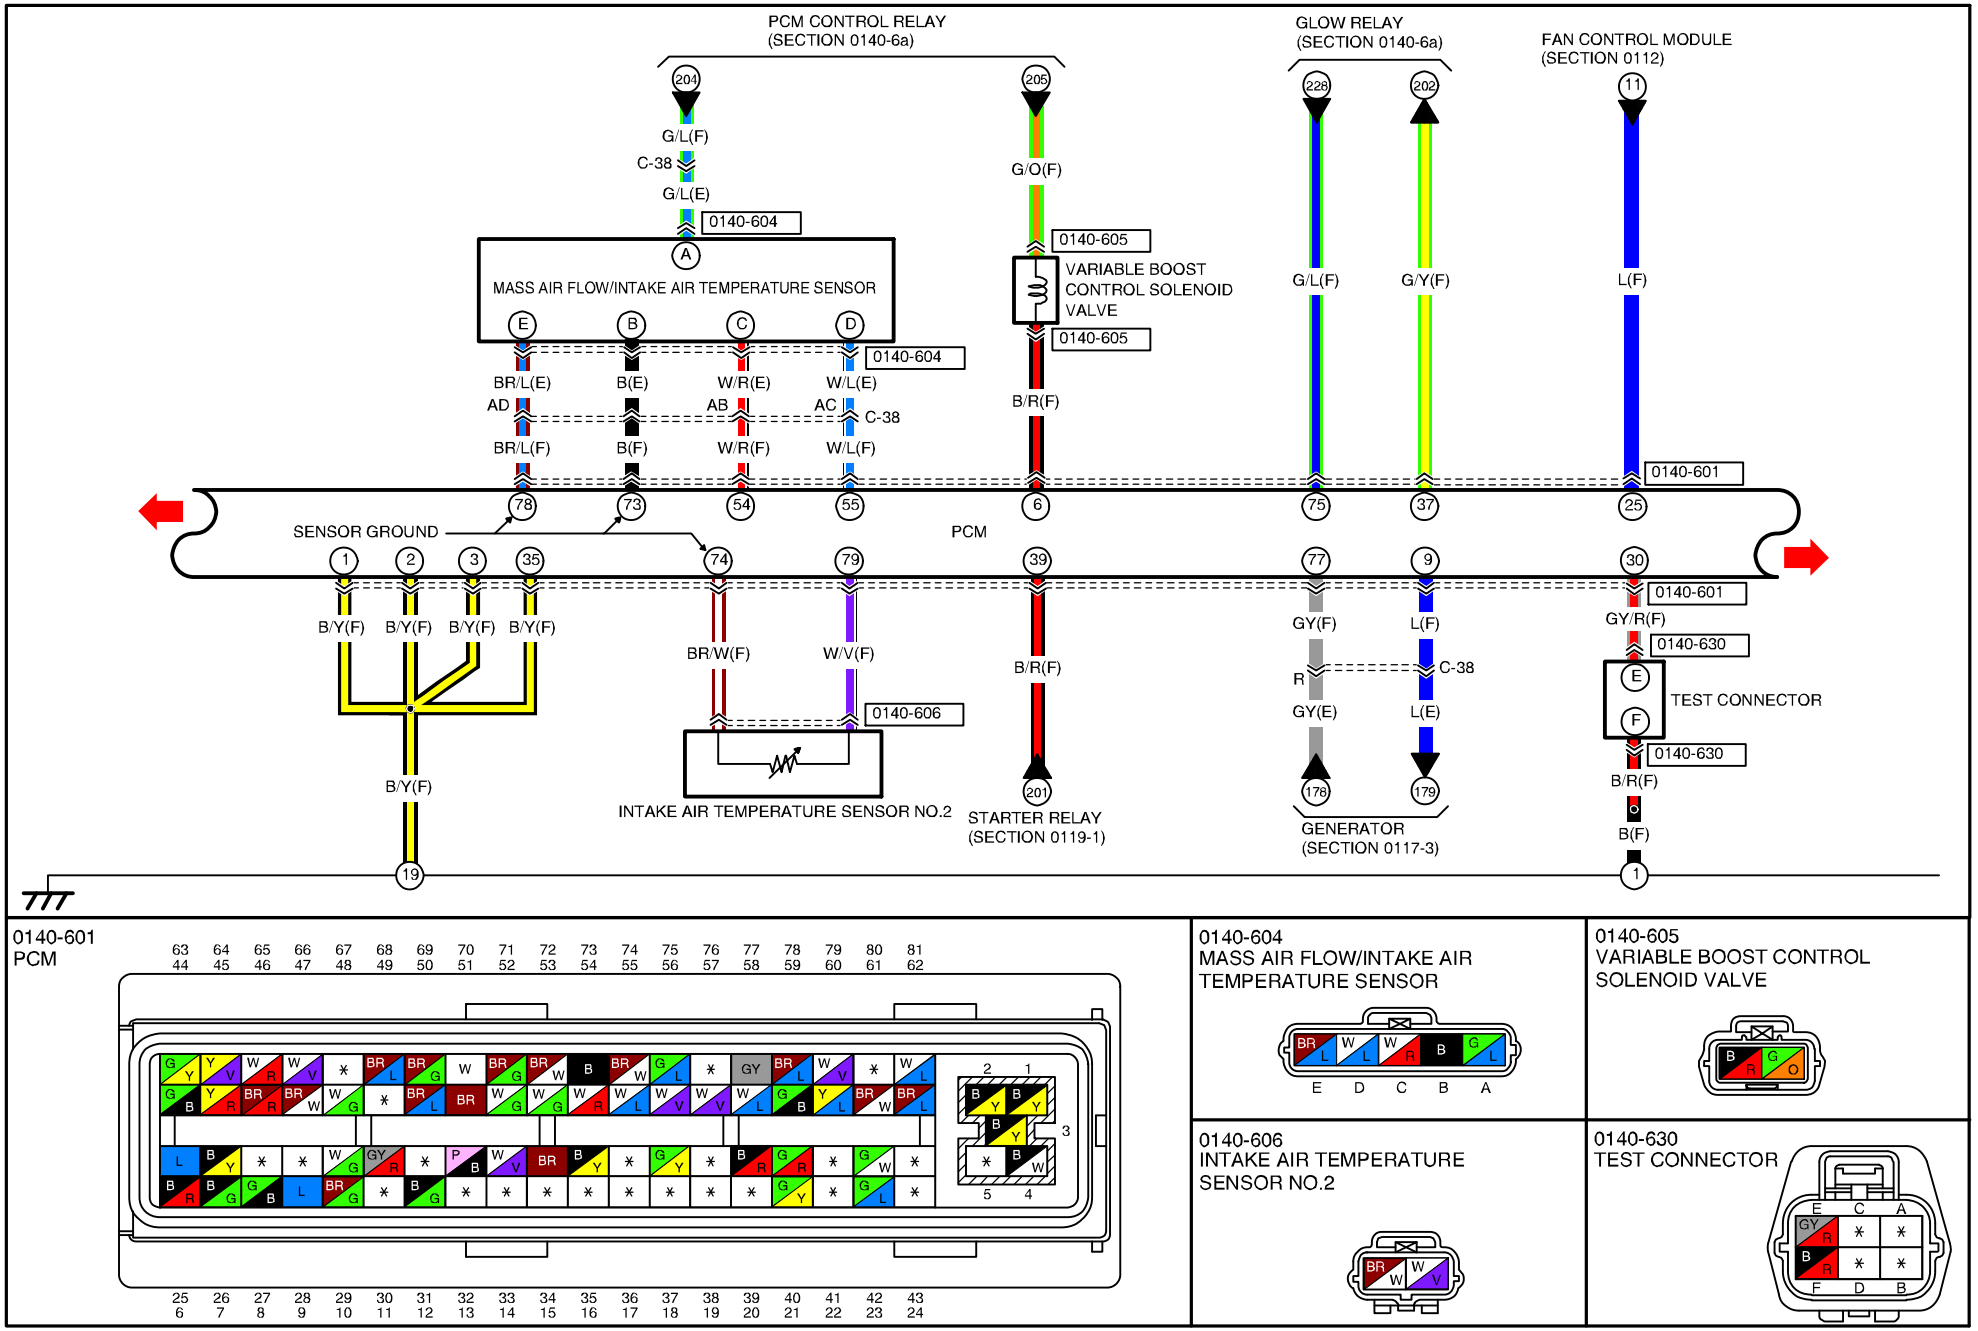


0140-601
PCM

0140-604
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR

0140-605
VARIABLE BOOST CONTROL SOLENOID VALVE


0140-606
INTAKE AIR TEMPERATURE SENSOR NO.2

0140-630
TEST CONNECTOR

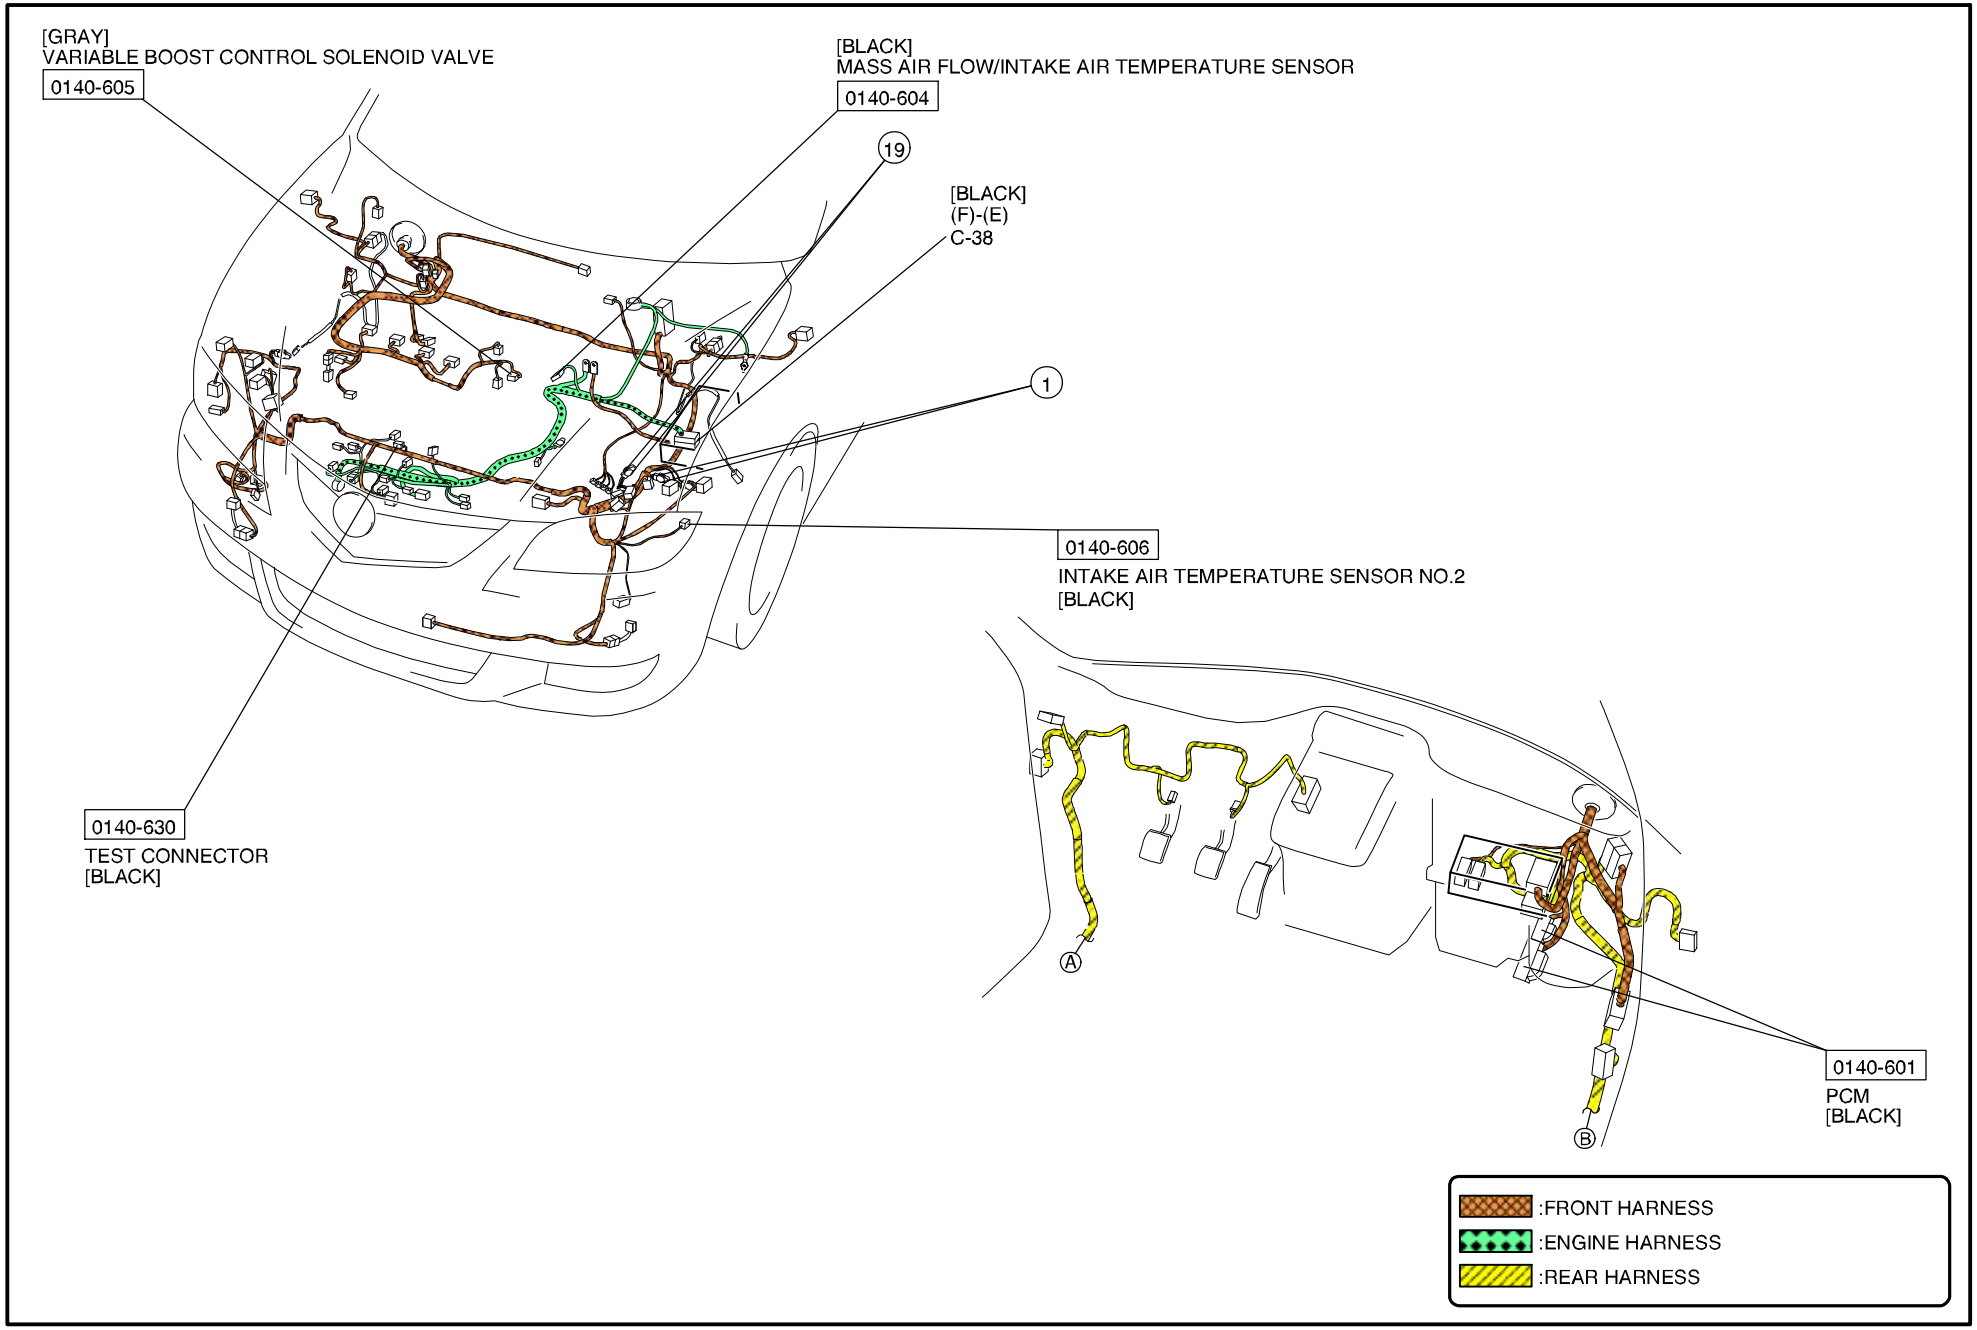

[GRAY]
VARIABLE BOOST CONTROL SOLENOID VALVE
0140-605
[BLACK]
MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSOR
0140-604
19
[BLACK]
(F)-(E)
C-38
1
0140-606
INTAKE AIR TEMPERATURE SENSOR NO.2
[BLACK]
0140-630
TEST CONNECTOR
[BLACK]
A
B
0140-601
PCM
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS


C-38
FRONT HARNESS-ENGINE HARNESS


FRONT HARNESS

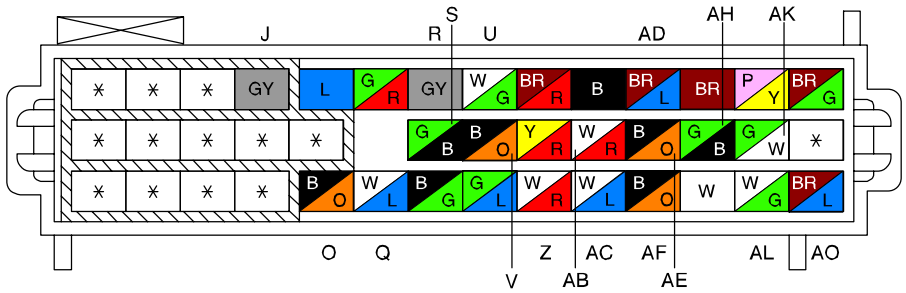


ENGINE HARNESS

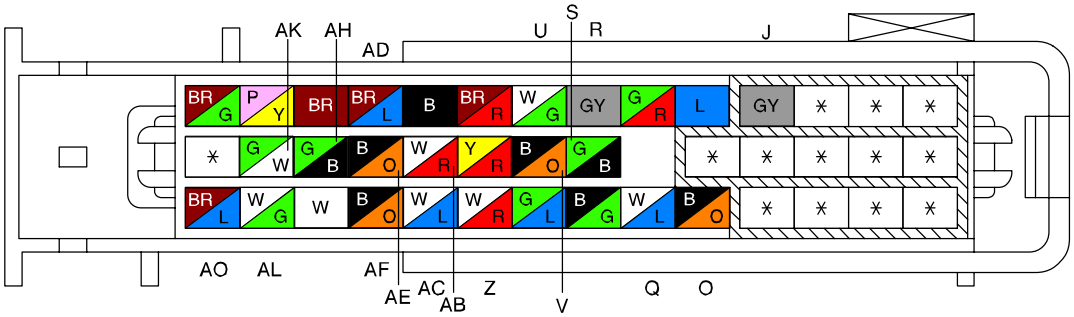


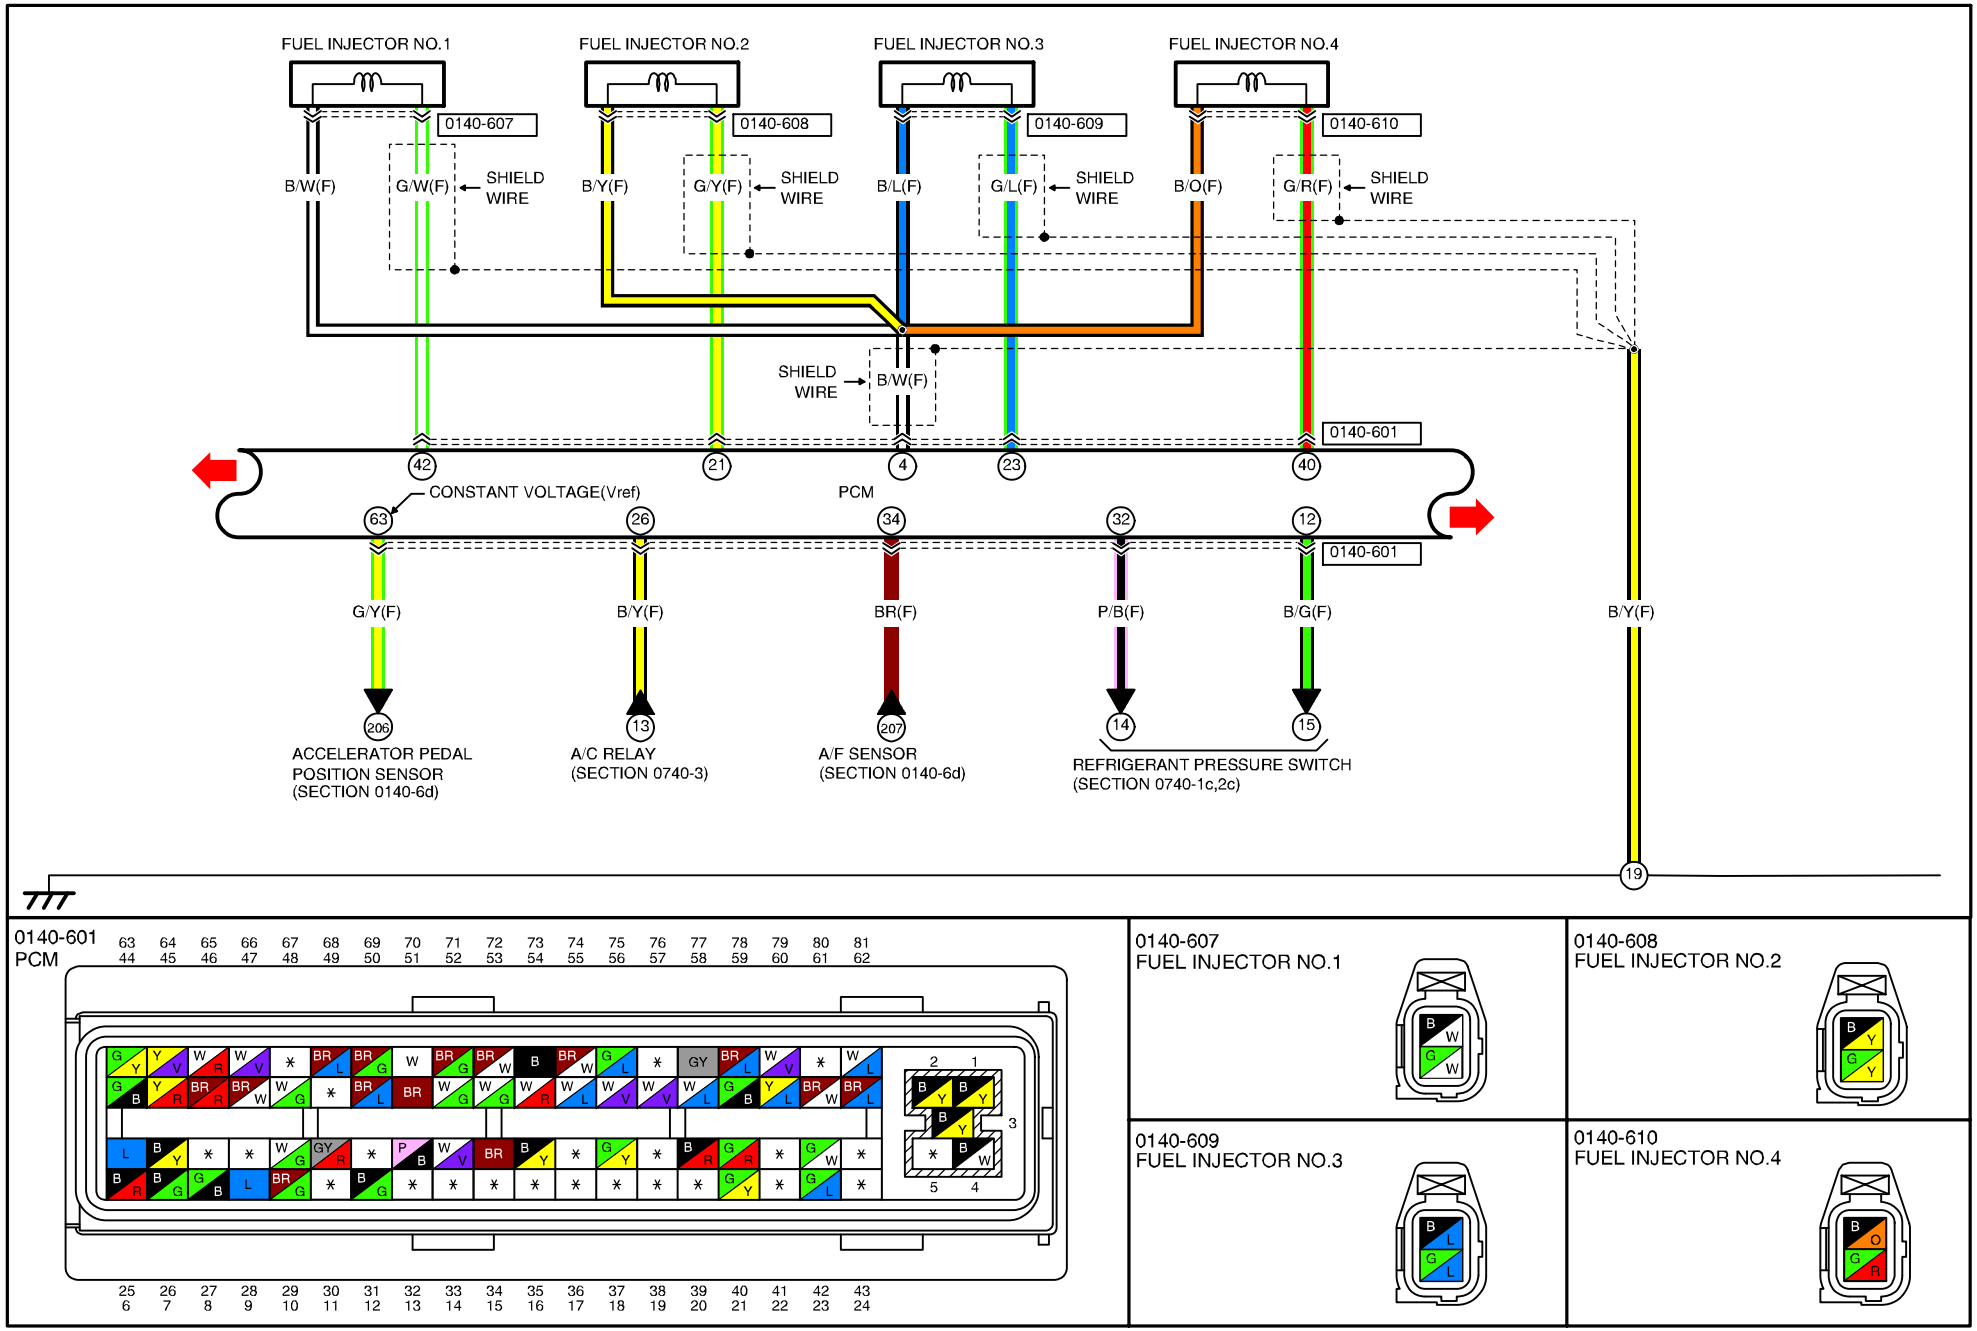
FUEL INJECTOR NO.1
FUEL INJECTOR NO.2
FUEL INJECTOR NO.3
FUEL INJECTOR NO.4
0140-607
0140-608
0140-609
0140-610
B/W(F)
G/W(F)
SHIELD WIRE
B/Y(F)
G/Y(F)
B/L(F)
G/L(F)
B/O(F)
G/R(F)
0140-601
42
21
4
23
40
CONSTANT VOLTAGE(Vref)
PCM
63
26
34
32
12
G/Y(F)
B/Y(F)
BR(F)
P/B(F)
B/G(F)
206
13
207
14
15
19
ACCELERATOR PEDAL POSITION SENSOR (SECTION 0140-6d)
A/C RELAY (SECTION 0740-3)
A/F SENSOR (SECTION 0140-6d)
REFRIGERANT PRESSURE SWITCH (SECTION 0740-1c,2c)
0140-601
PCM
0140-607
FUEL INJECTOR NO.1
0140-608
FUEL INJECTOR NO.2
0140-609
FUEL INJECTOR NO.3
0140-610
FUEL INJECTOR NO.4

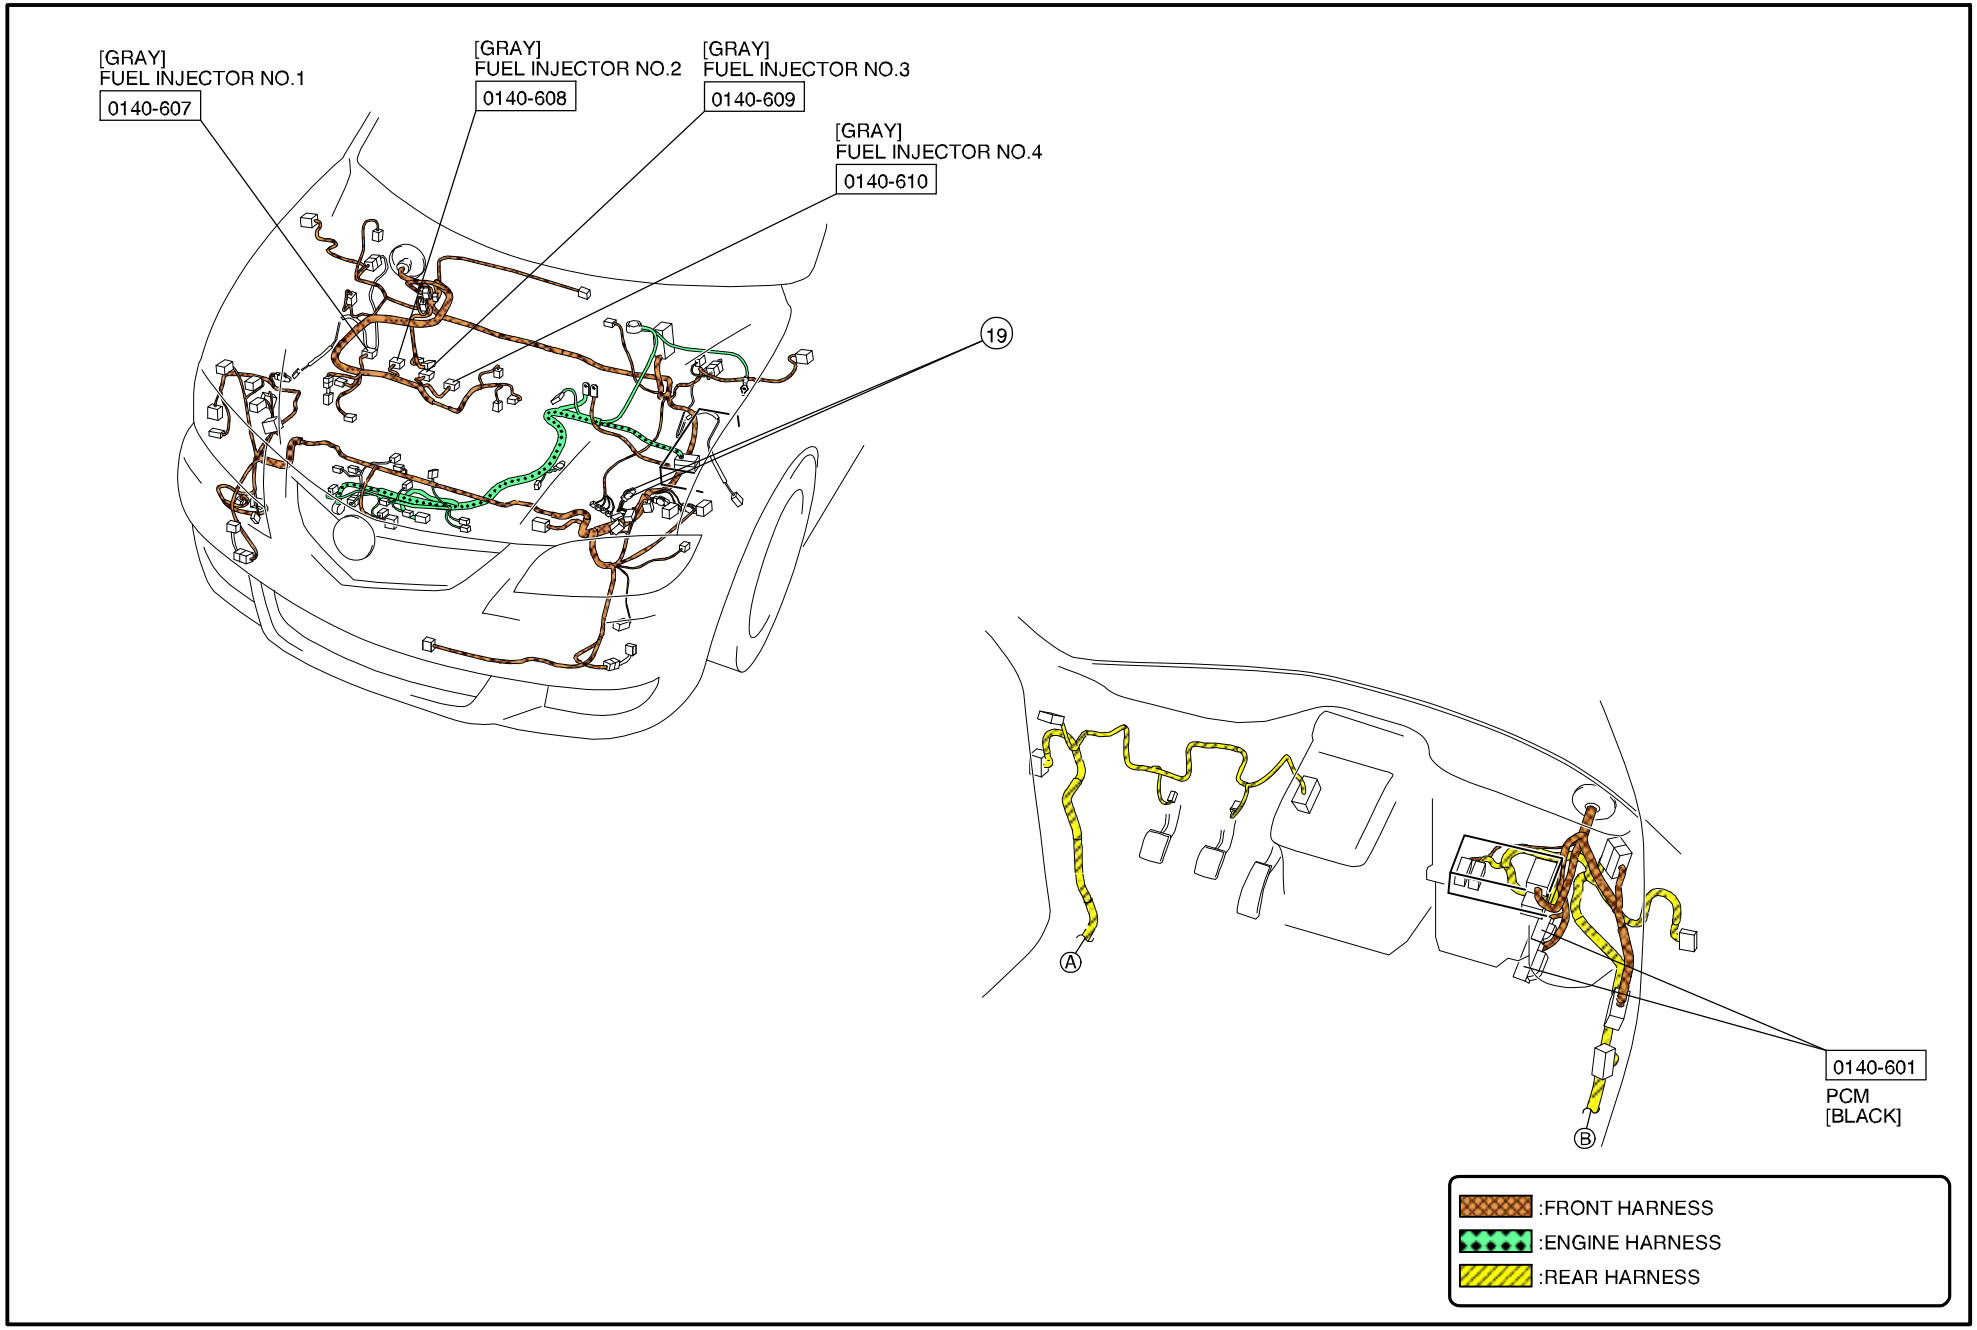

[GRAY]
FUEL INJECTOR NO.1
0140-607
[GRAY]
FUEL INJECTOR NO.2
0140-608
[GRAY]
FUEL INJECTOR NO.3
0140-609
[GRAY]
FUEL INJECTOR NO.4
0140-610
19
A
B
0140-601
PCM
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS

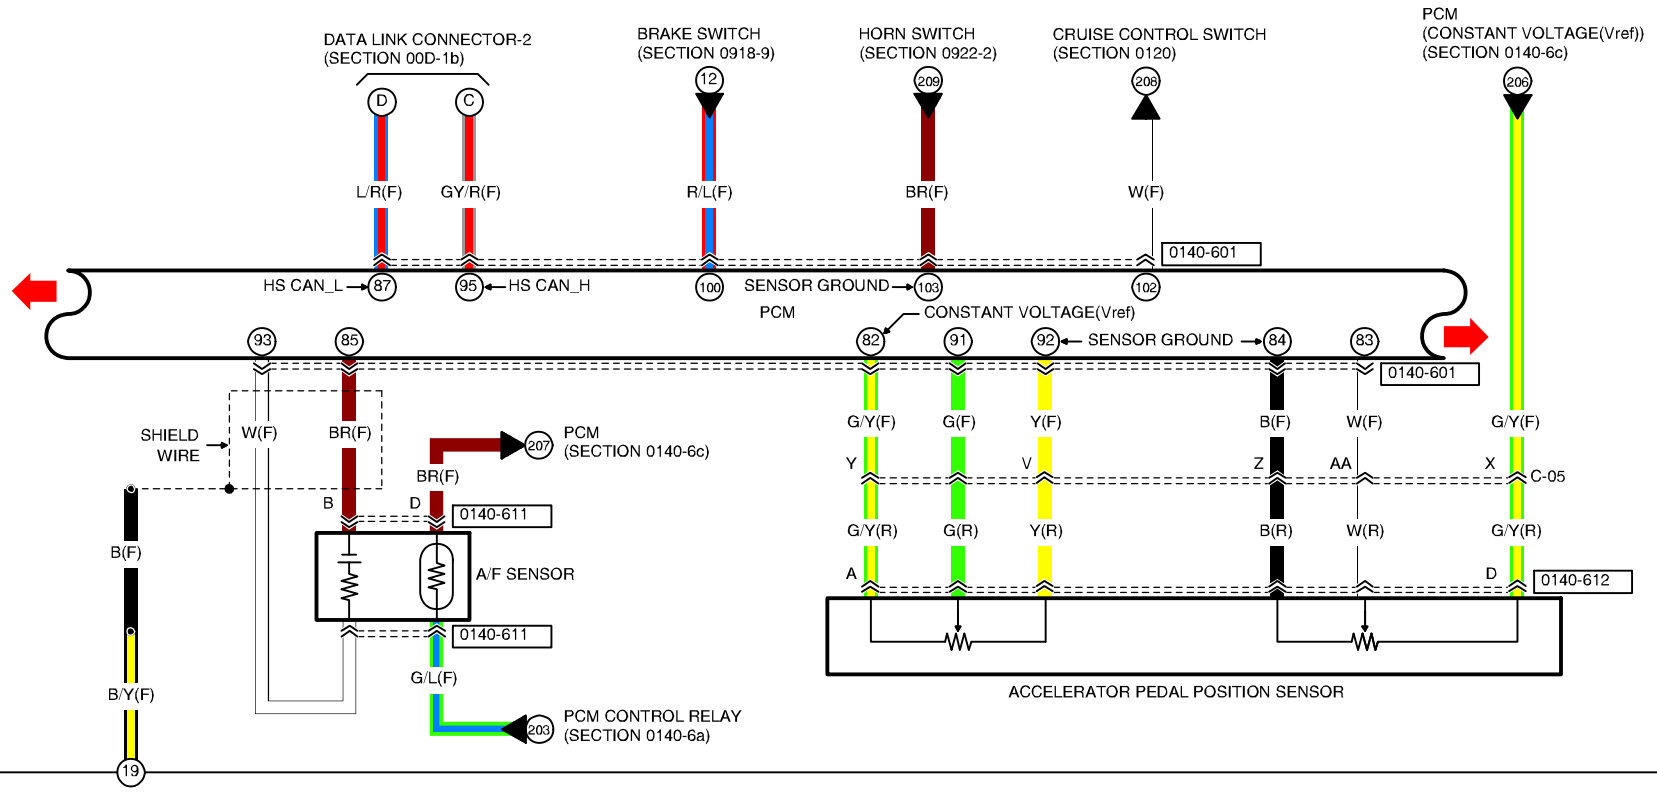


0140-601
PCM

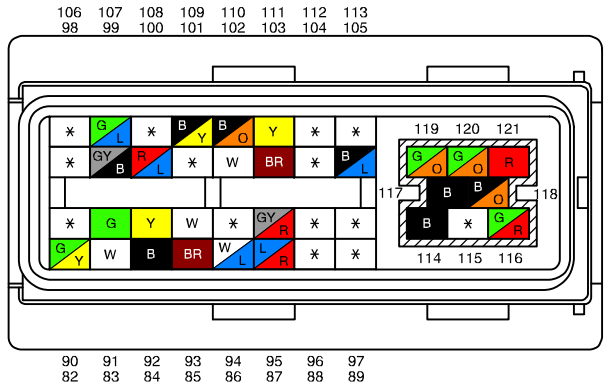


0140-611
A/F SENSOR

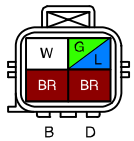


0140-612
ACCELERATOR PEDAL POSITION SENSOR

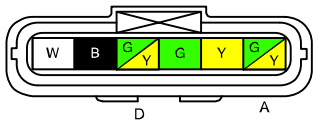

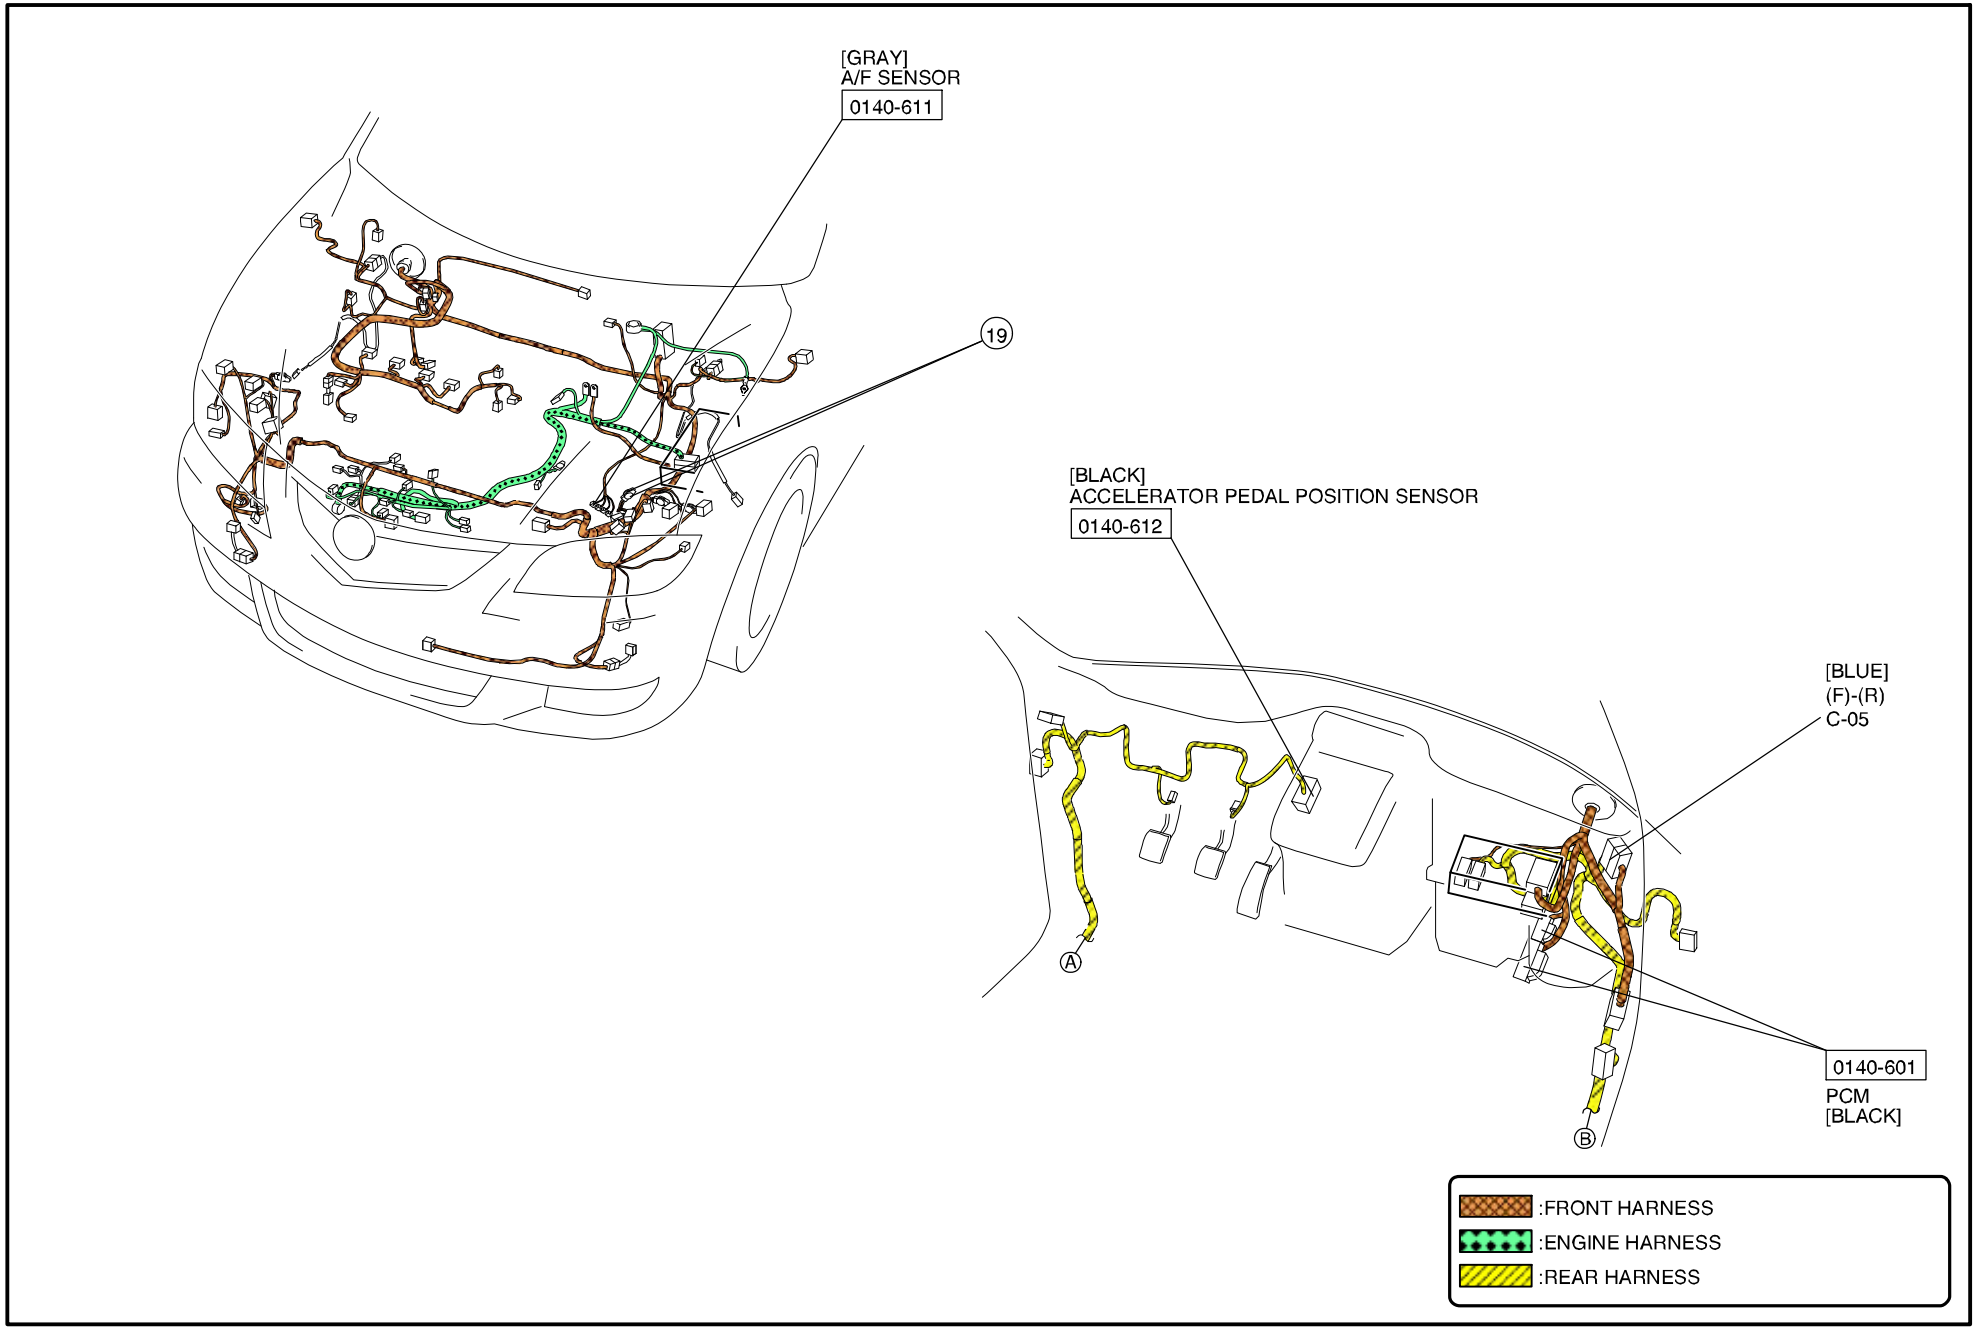

[GRAY]
A/F SENSOR
0140-611
19
[BLACK]
ACCELERATOR PEDAL POSITION SENSOR
0140-612
[BLUE]
(F)-(R)
C-05
A
B
0140-601
PCM
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS


C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

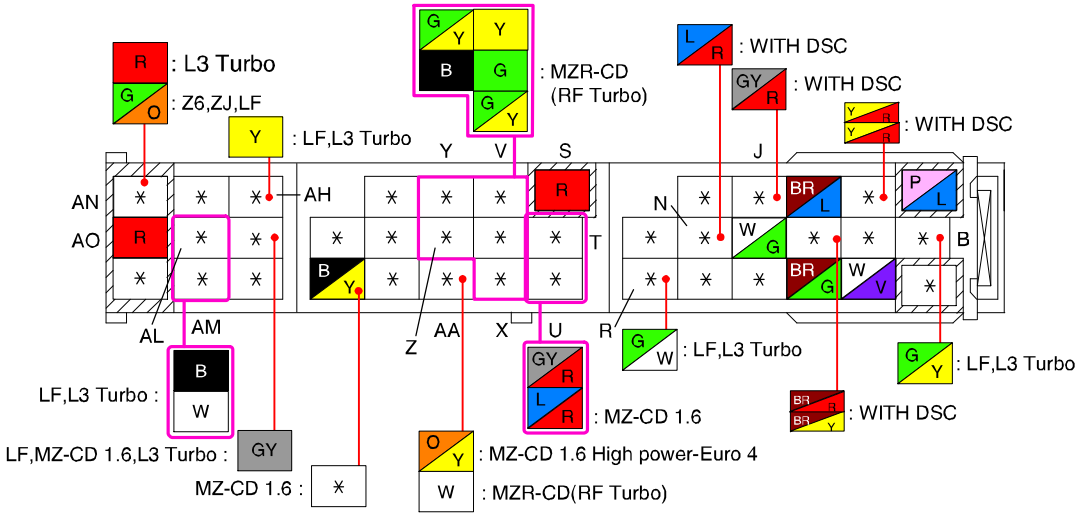


REAR HARNESS

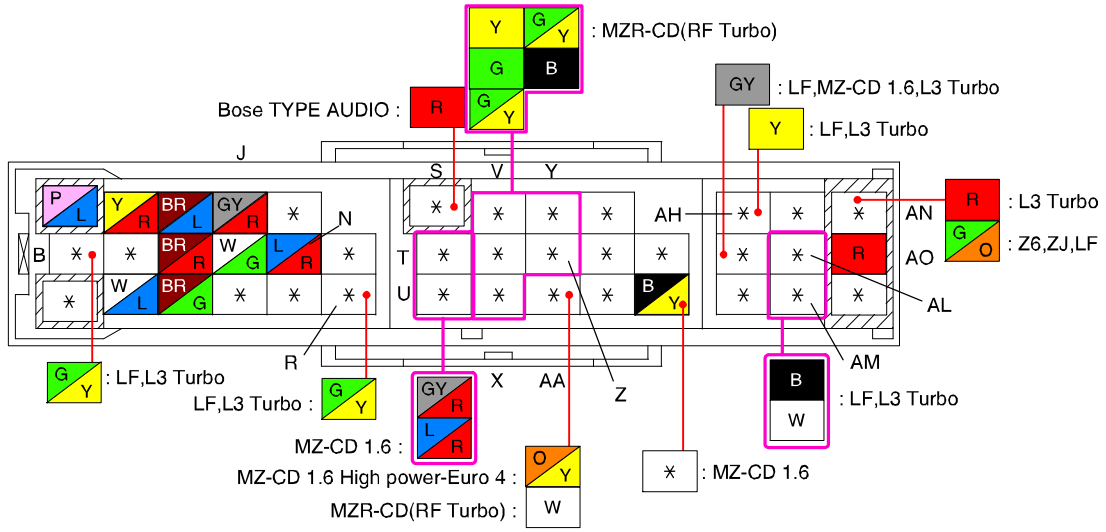


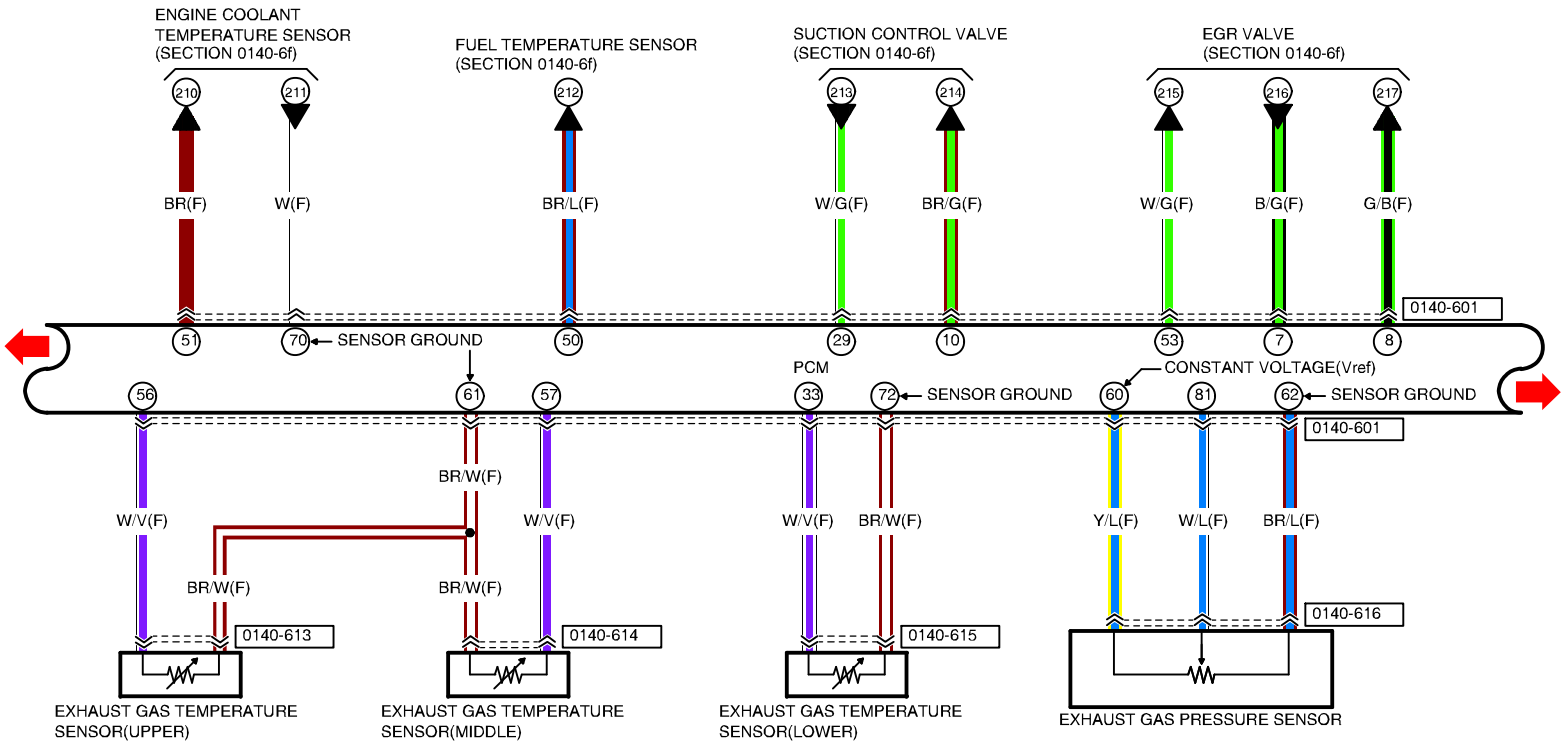


0140-601
PCM

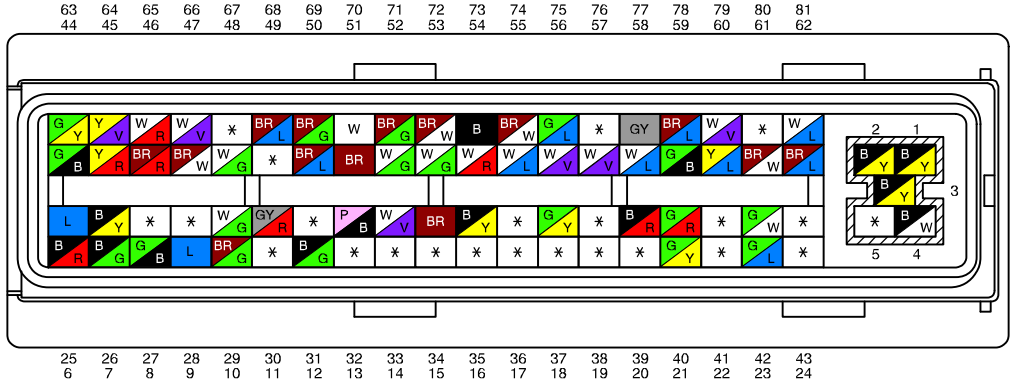


0140-613
EXHAUST GAS TEMPERATURE SENSOR(UPPER)




0140-614
EXHAUST GAS TEMPERATURE SENSOR(MIDDLE)





0140-615
EXHAUST GAS TEMPERATURE SENSOR(LOWER)



0140-616
EXHAUST GAS PRESSURE SENSOR



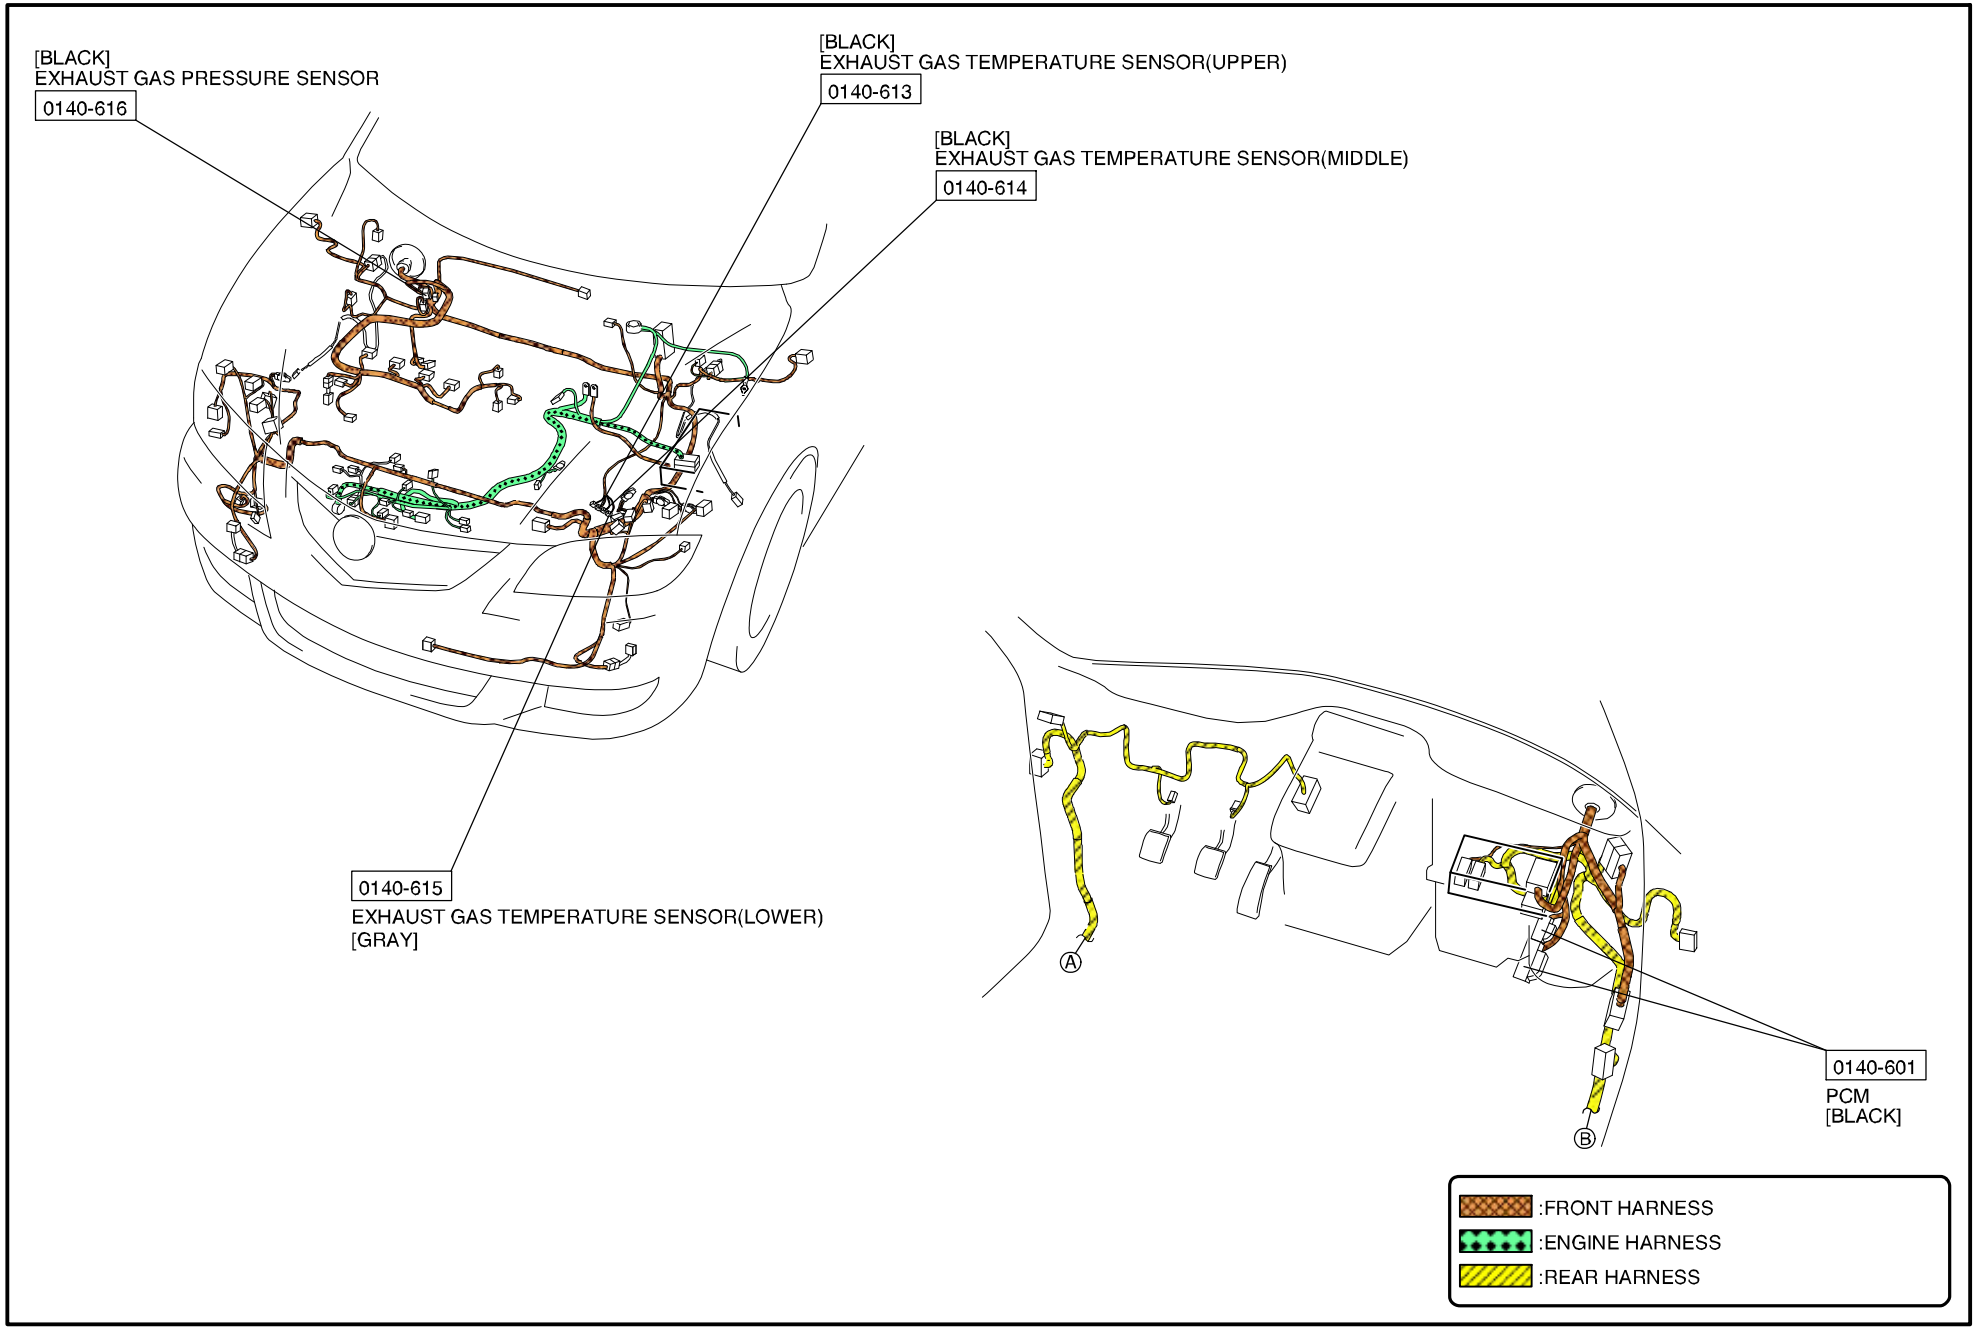
[BLACK]
EXHAUST GAS PRESSURE SENSOR
0140-616
[BLACK]
EXHAUST GAS TEMPERATURE SENSOR(UPPER)
0140-613
[BLACK]
EXHAUST GAS TEMPERATURE SENSOR(MIDDLE)
0140-614
0140-615
EXHAUST GAS TEMPERATURE SENSOR(LOWER)
[GRAY]
A
B
0140-601
PCM
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS

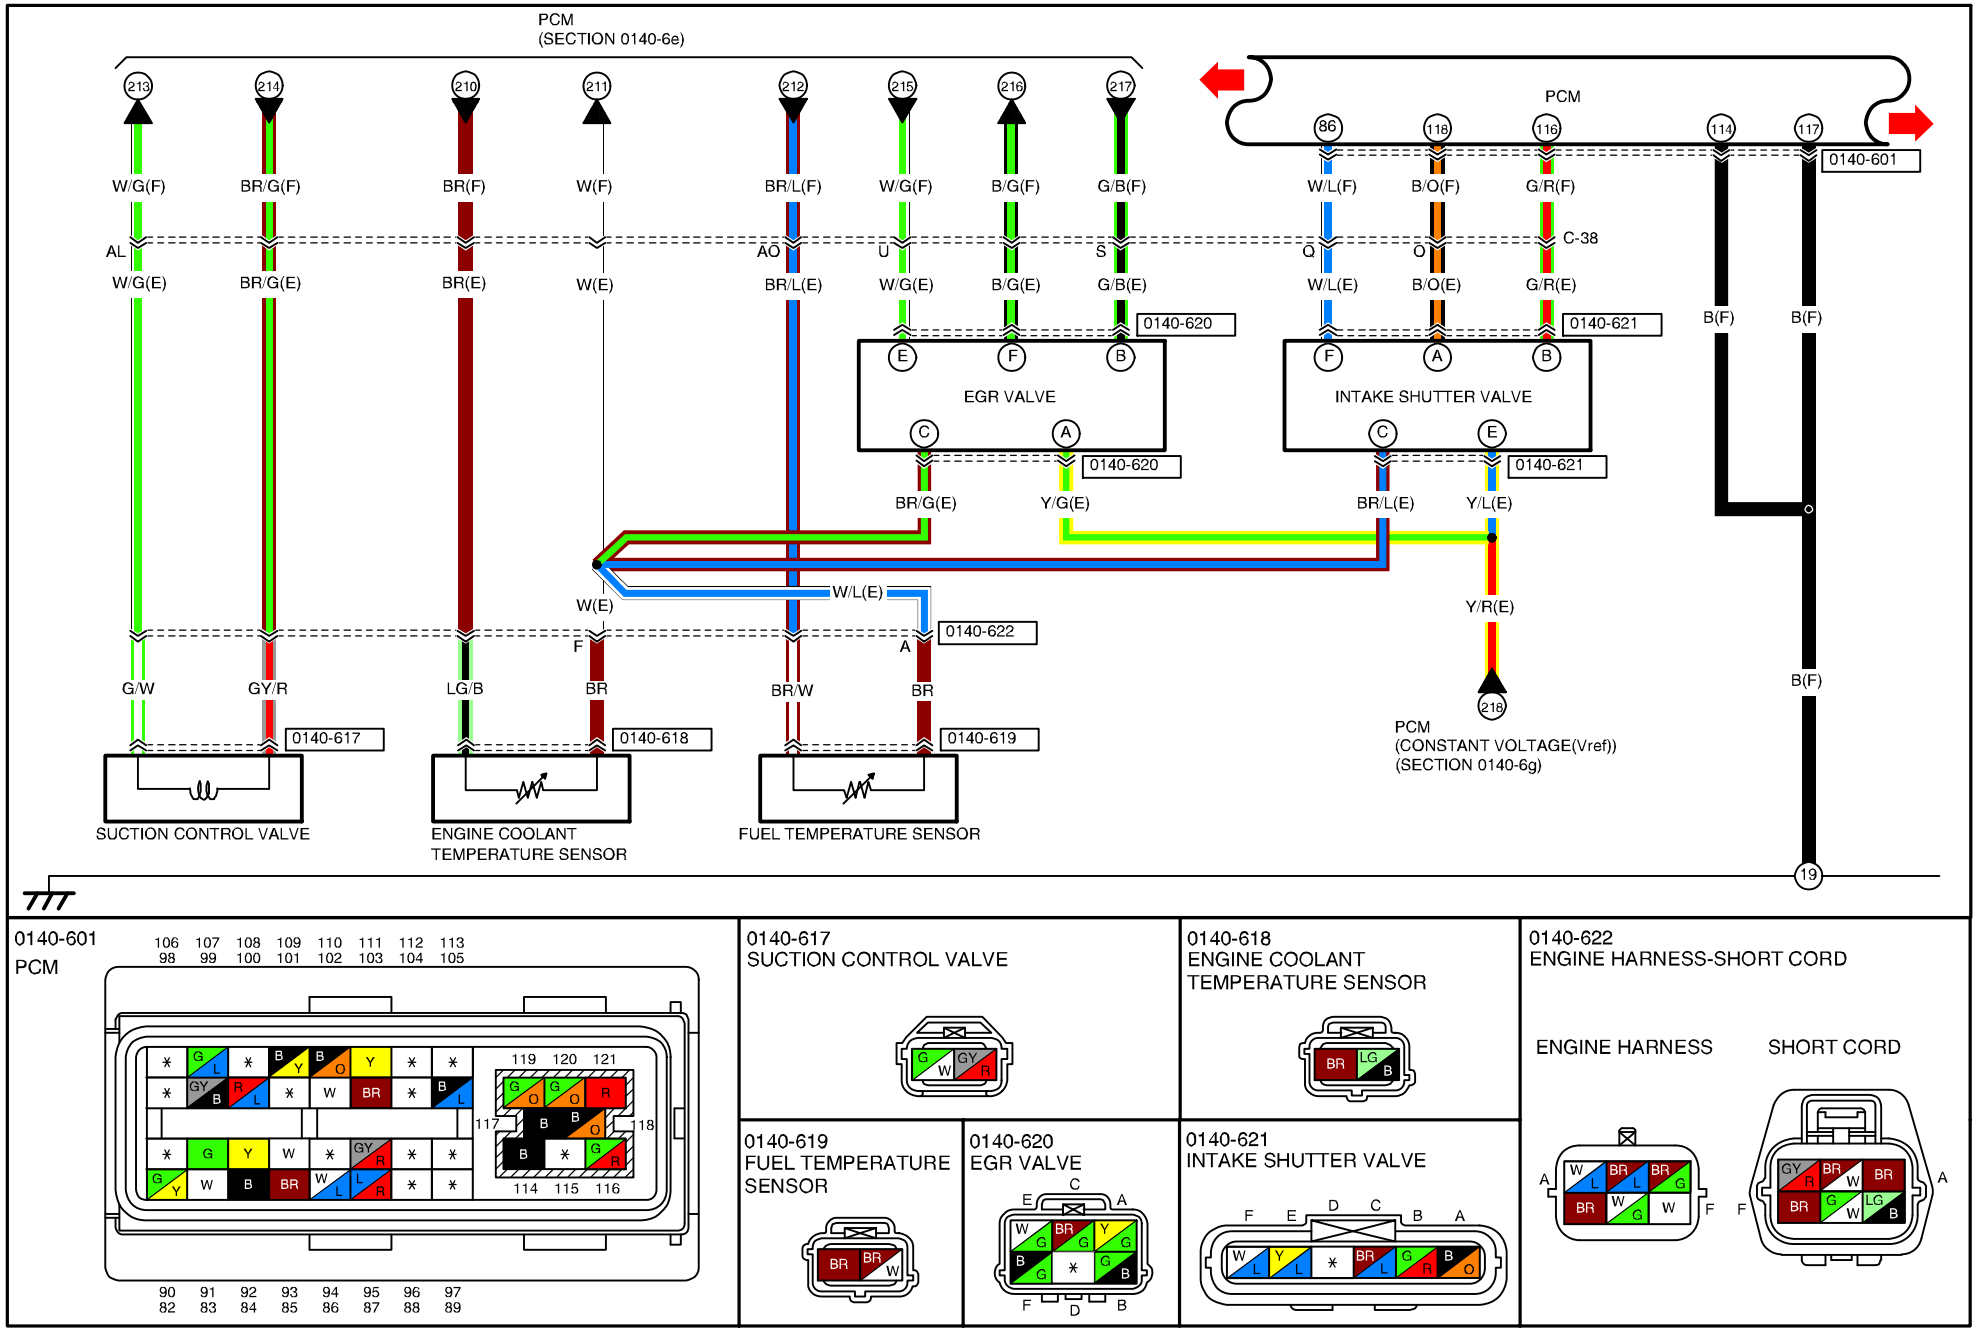

0140-601
PCM

0140-617
SUCTION CONTROL VALVE

0140-618
ENGINE COOLANT
TEMPERATURE SENSOR

0140-619
FUEL TEMPERATURE
SENSOR


0140-620
EGR VALVE

0140-621
INTAKE SHUTTER VALVE

0140-622
ENGINE HARNESS-SHORT CORD


ENGINE HARNESS

SHORT CORD

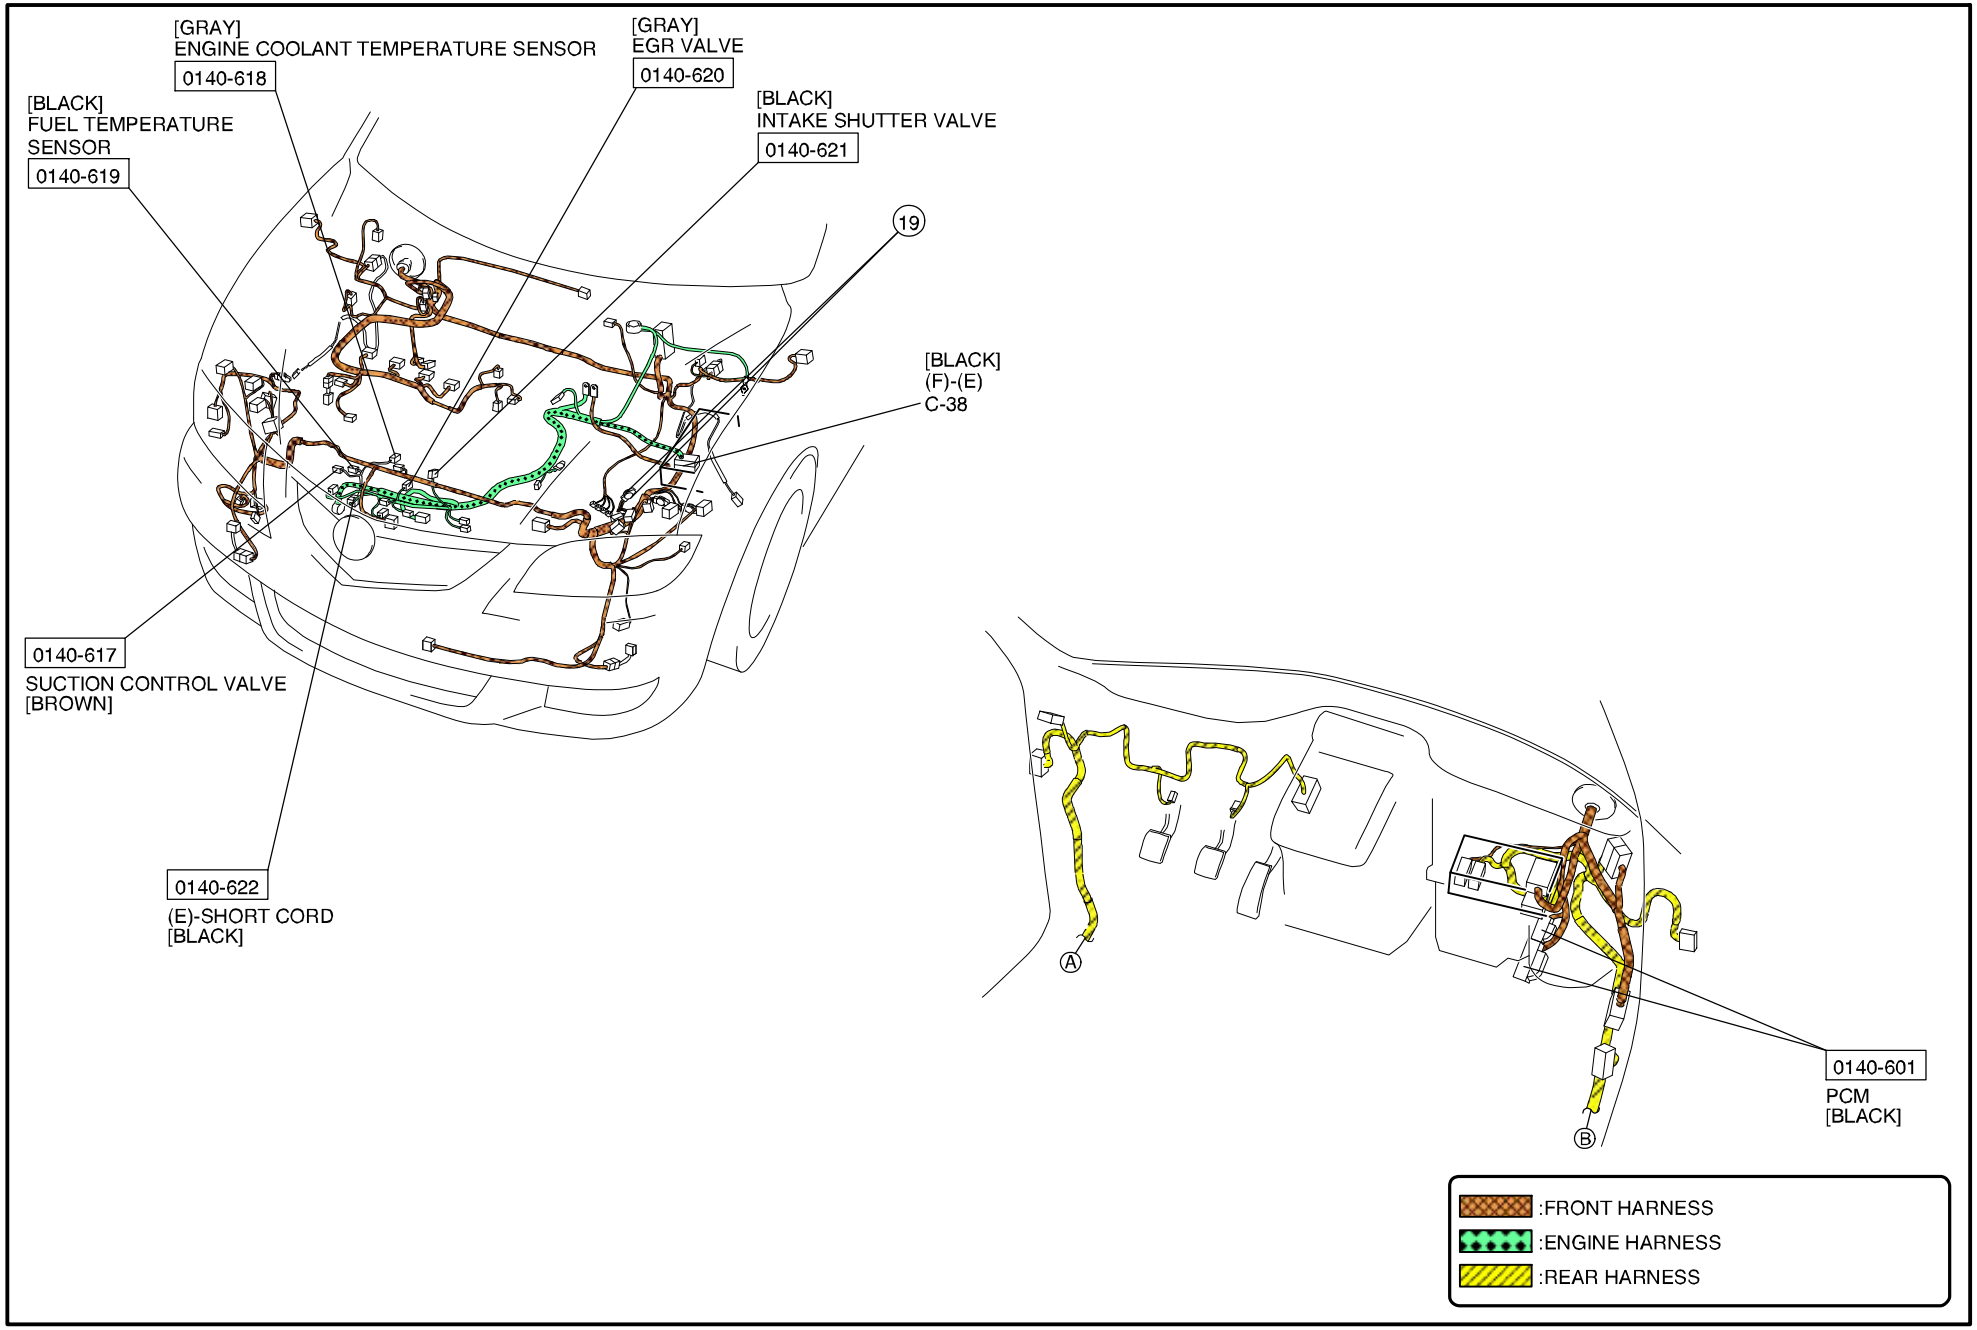

[GRAY]
ENGINE COOLANT TEMPERATURE SENSOR
0140-618
[GRAY]
EGR VALVE
0140-620
[BLACK]
FUEL TEMPERATURE
SENSOR
0140-619
[BLACK]
INTAKE SHUTTER VALVE
0140-621
19
[BLACK]
(F)-(E)
C-38
0140-617
SUCTION CONTROL VALVE
[BROWN]
0140-622
(E)-SHORT CORD
[BLACK]
A
B
0140-601
PCM
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS


C-38
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

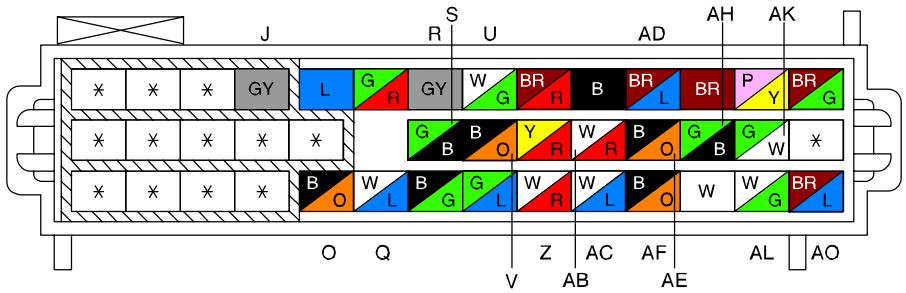


ENGINE HARNESS

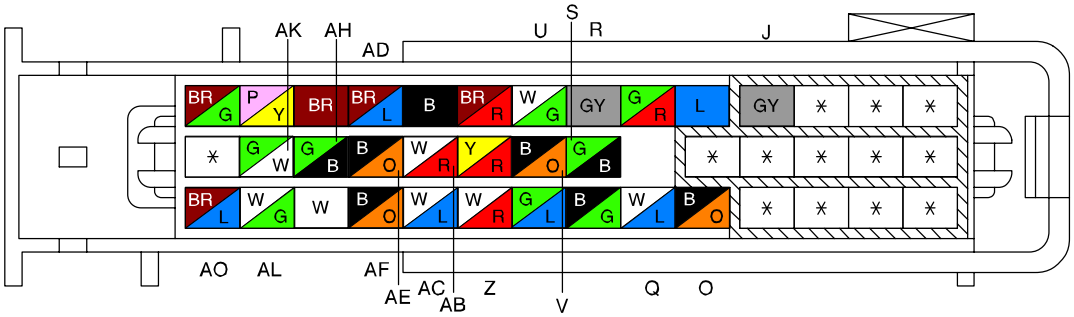


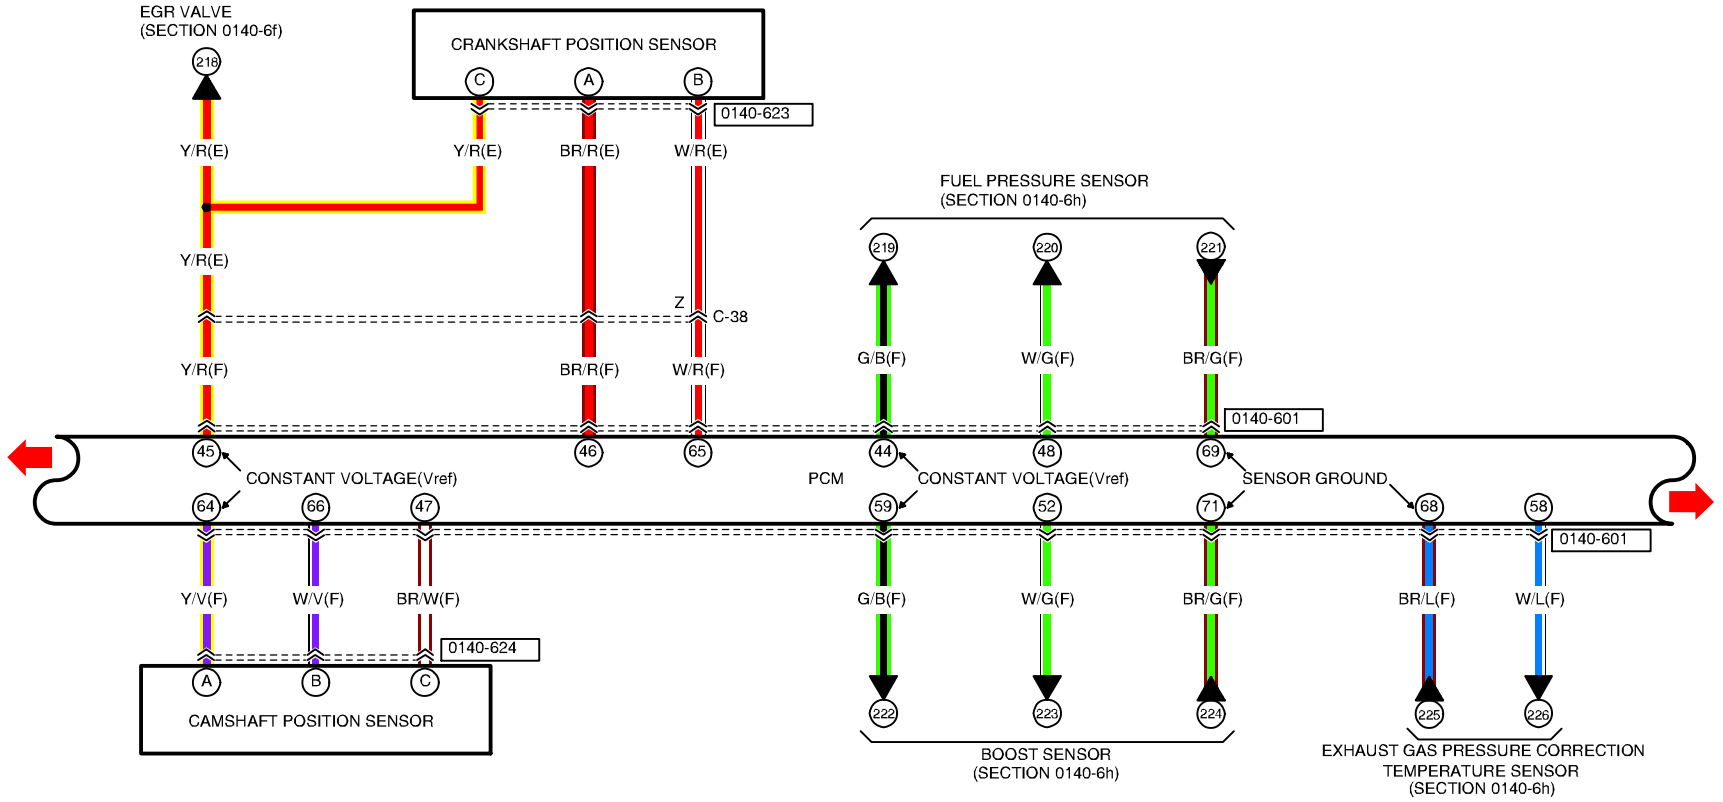


0140-601
PCM

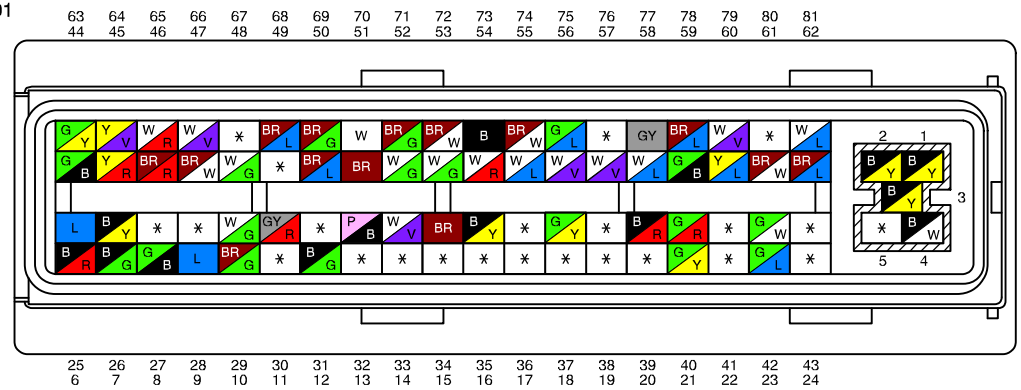


0140-623
CRANKSHAFT POSITION SENSOR




0140-624
CAMSHAFT POSITION SENSOR



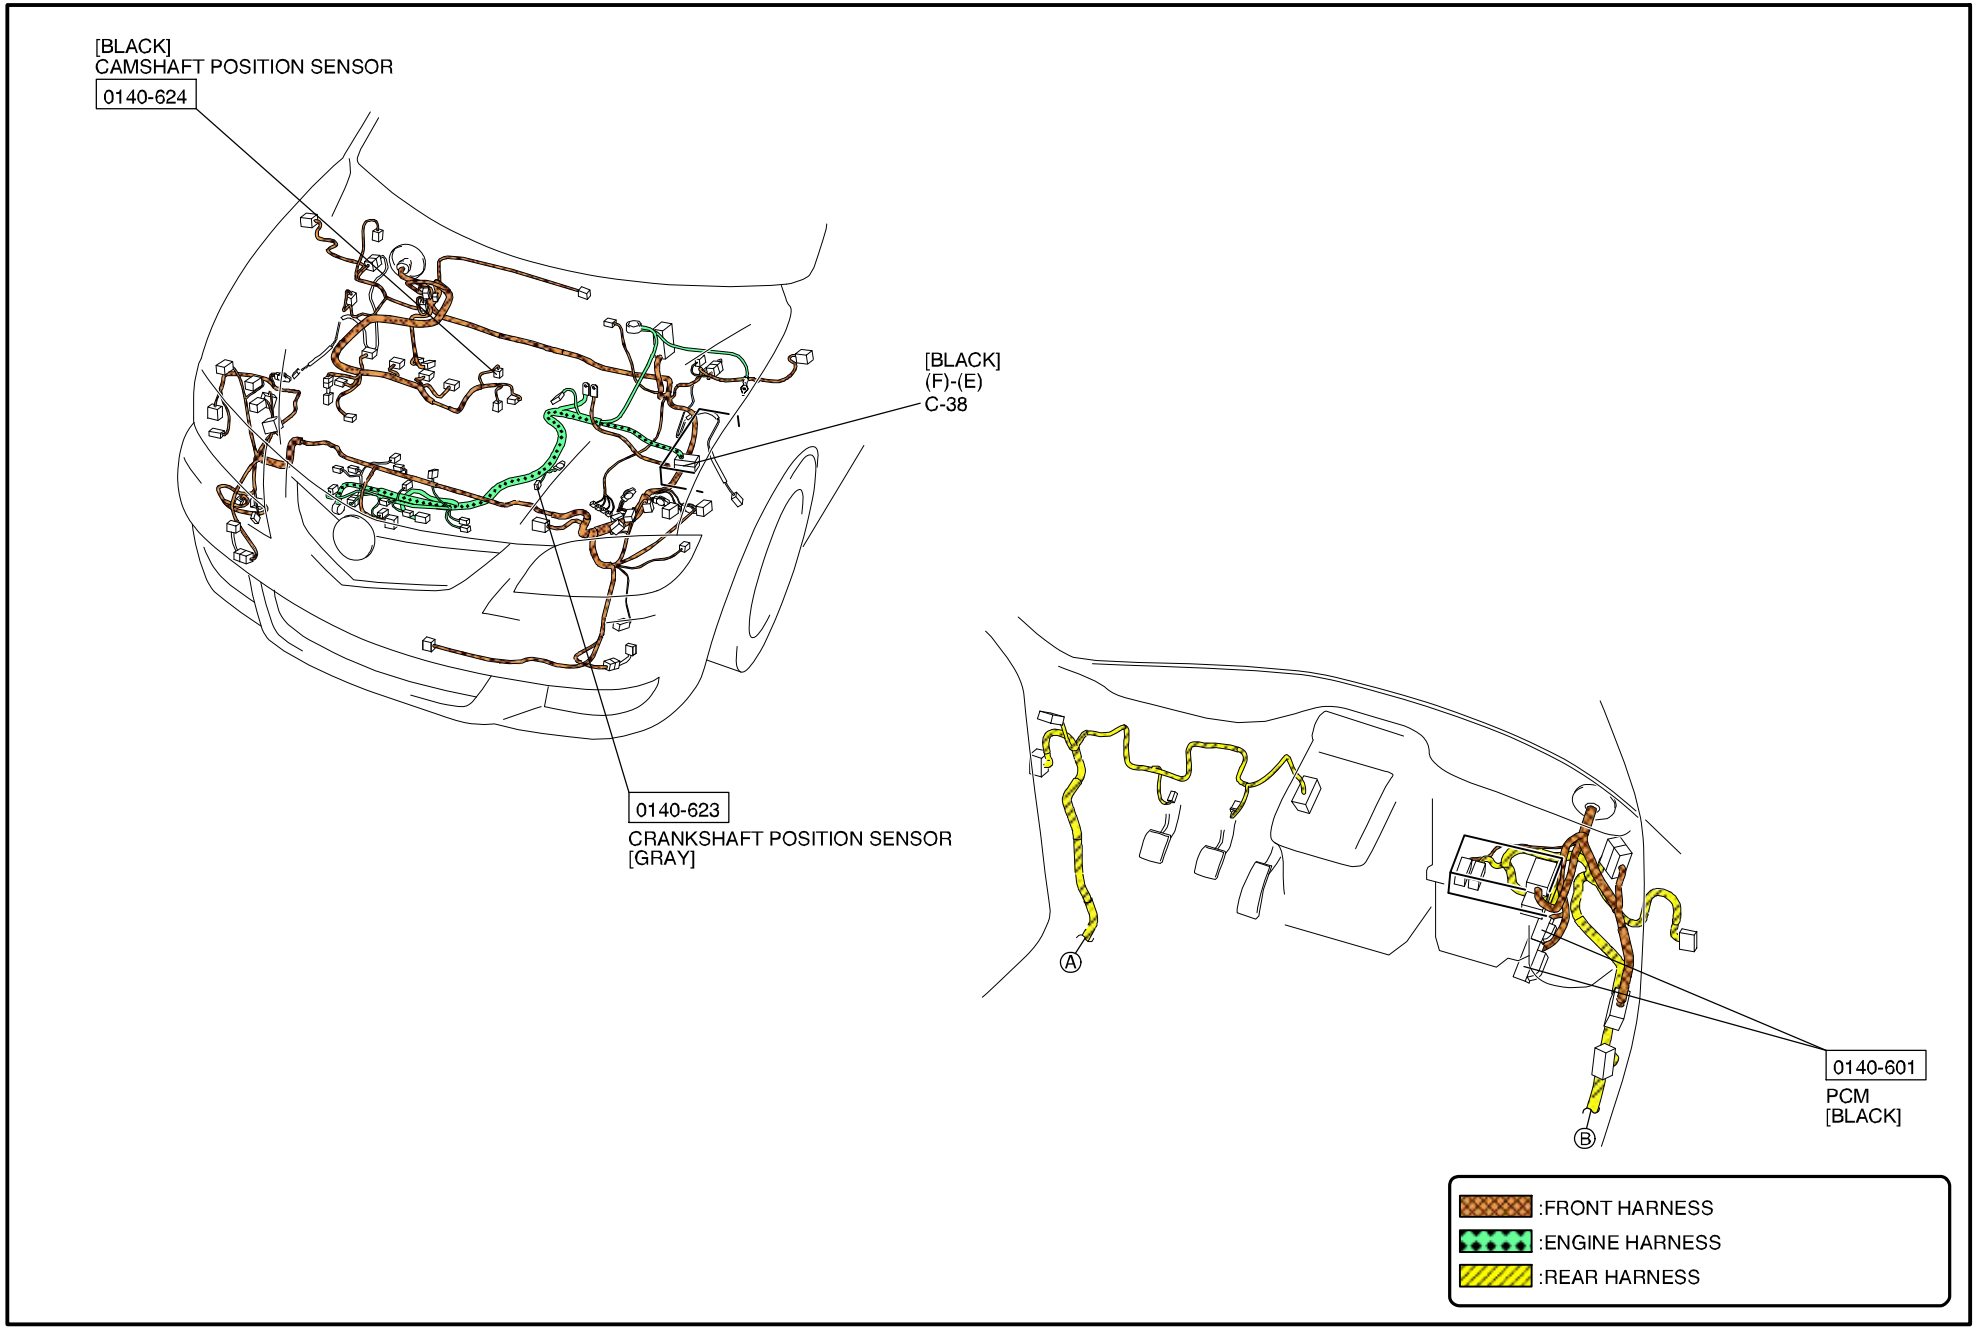

[BLACK]
CAMSHAFT POSITION SENSOR
0140-624
[BLACK]
(F)-(E)
C-38
0140-623
CRANKSHAFT POSITION SENSOR
[GRAY]
A
B
0140-601
PCM
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS


C-38
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

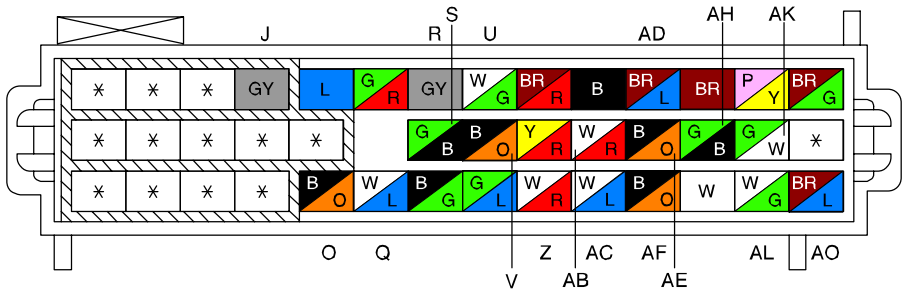

ENGINE HARNESS

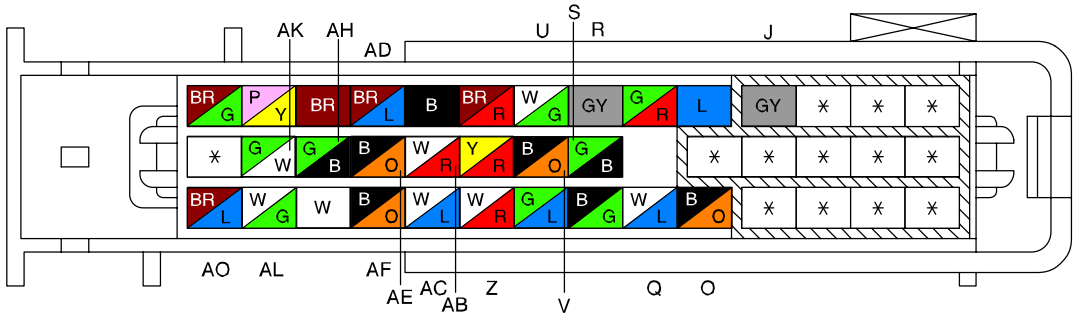

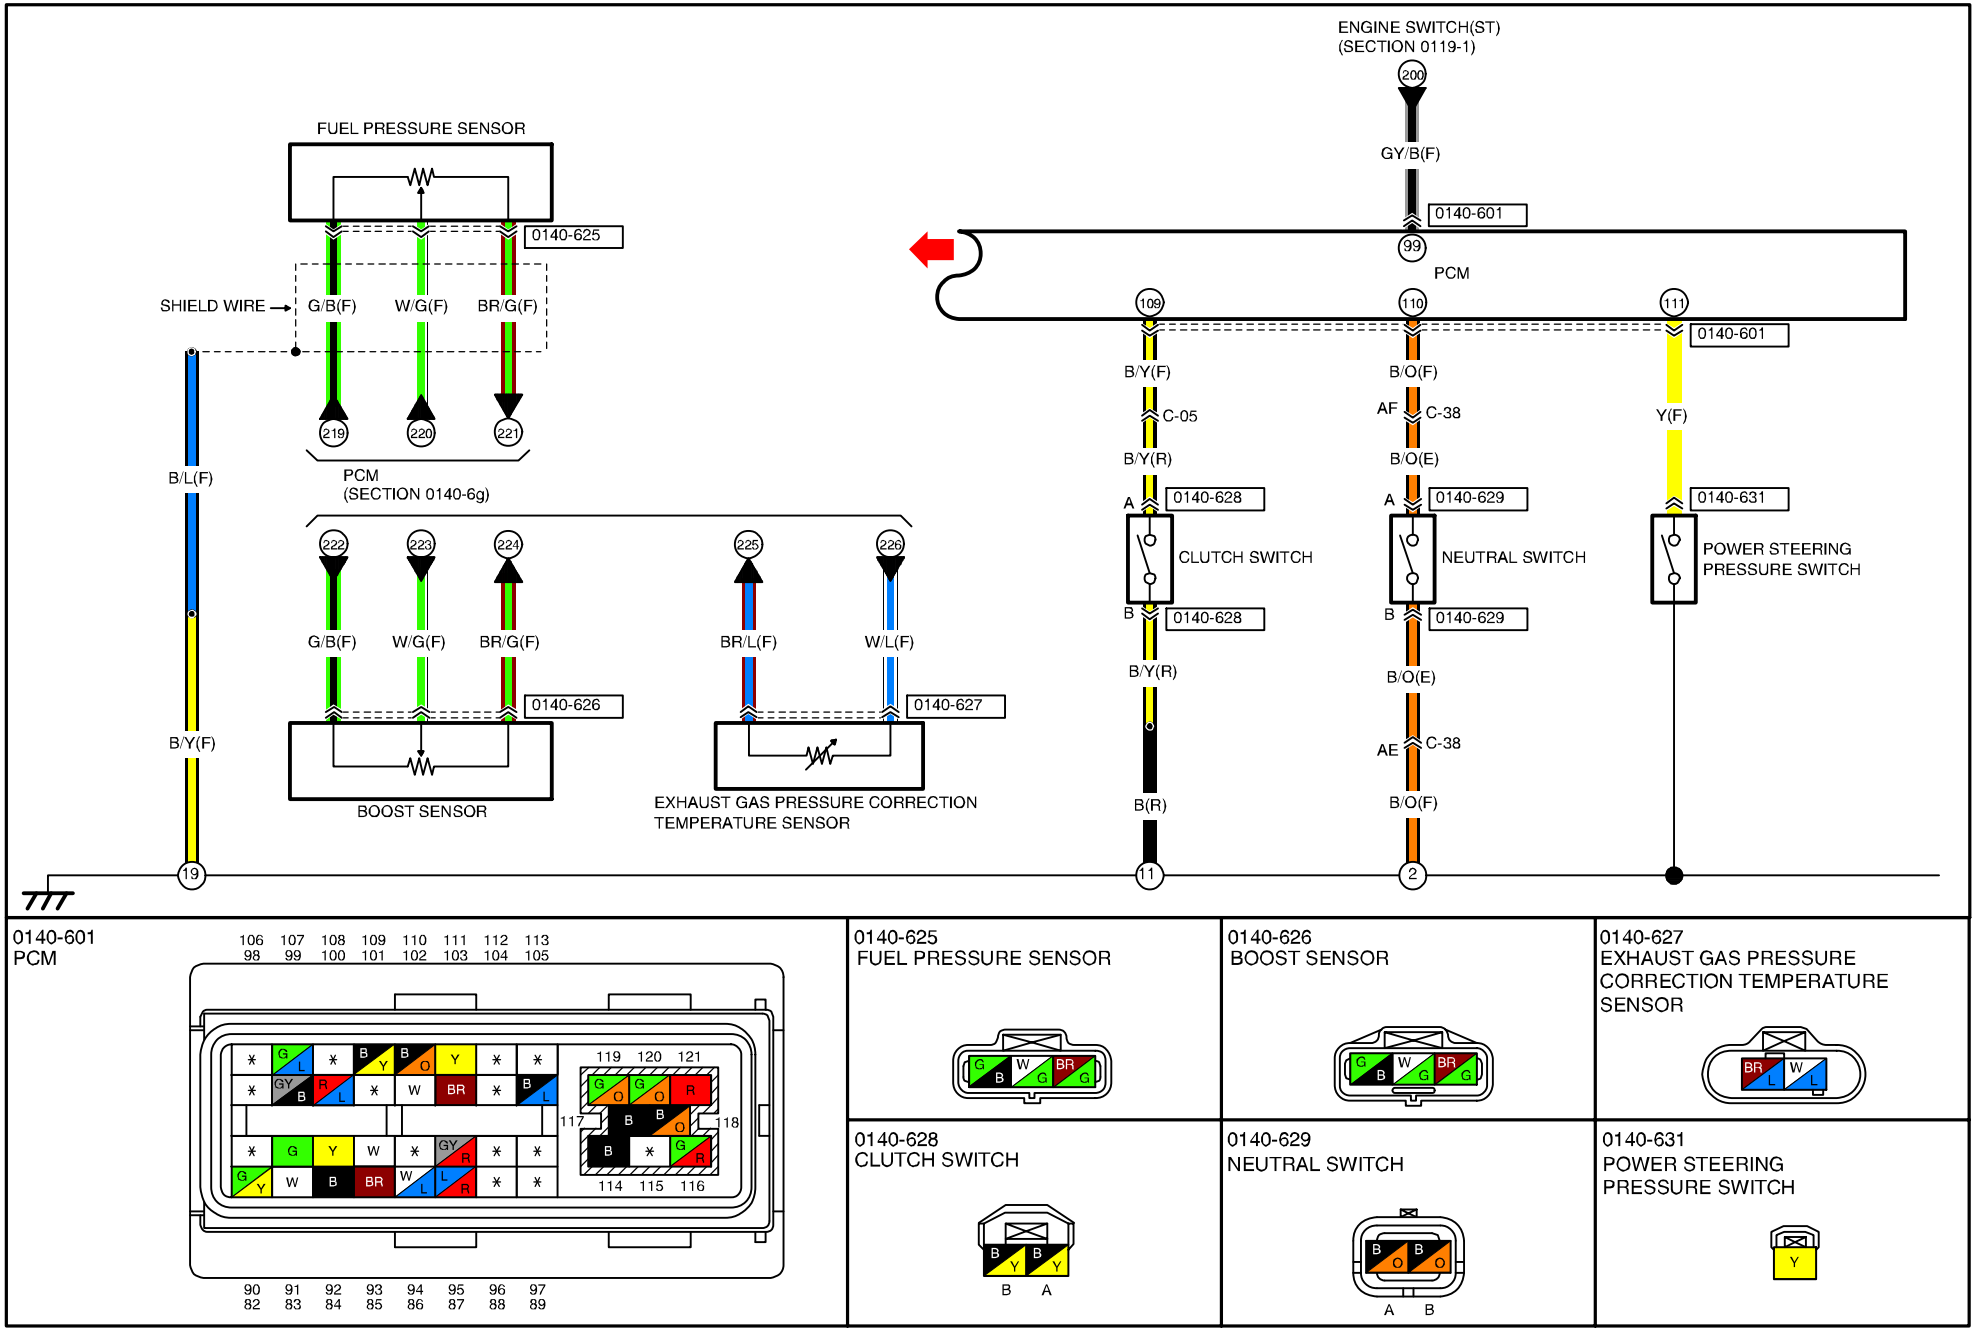

0140-601
PCM

0140-625
FUEL PRESSURE SENSOR


0140-626
BOOST SENSOR

0140-627
EXHAUST GAS PRESSURE CORRECTION TEMPERATURE SENSOR

0140-628
CLUTCH SWITCH


0140-629
NEUTRAL SWITCH

0140-631
POWER STEERING
PRESSURE SWITCH

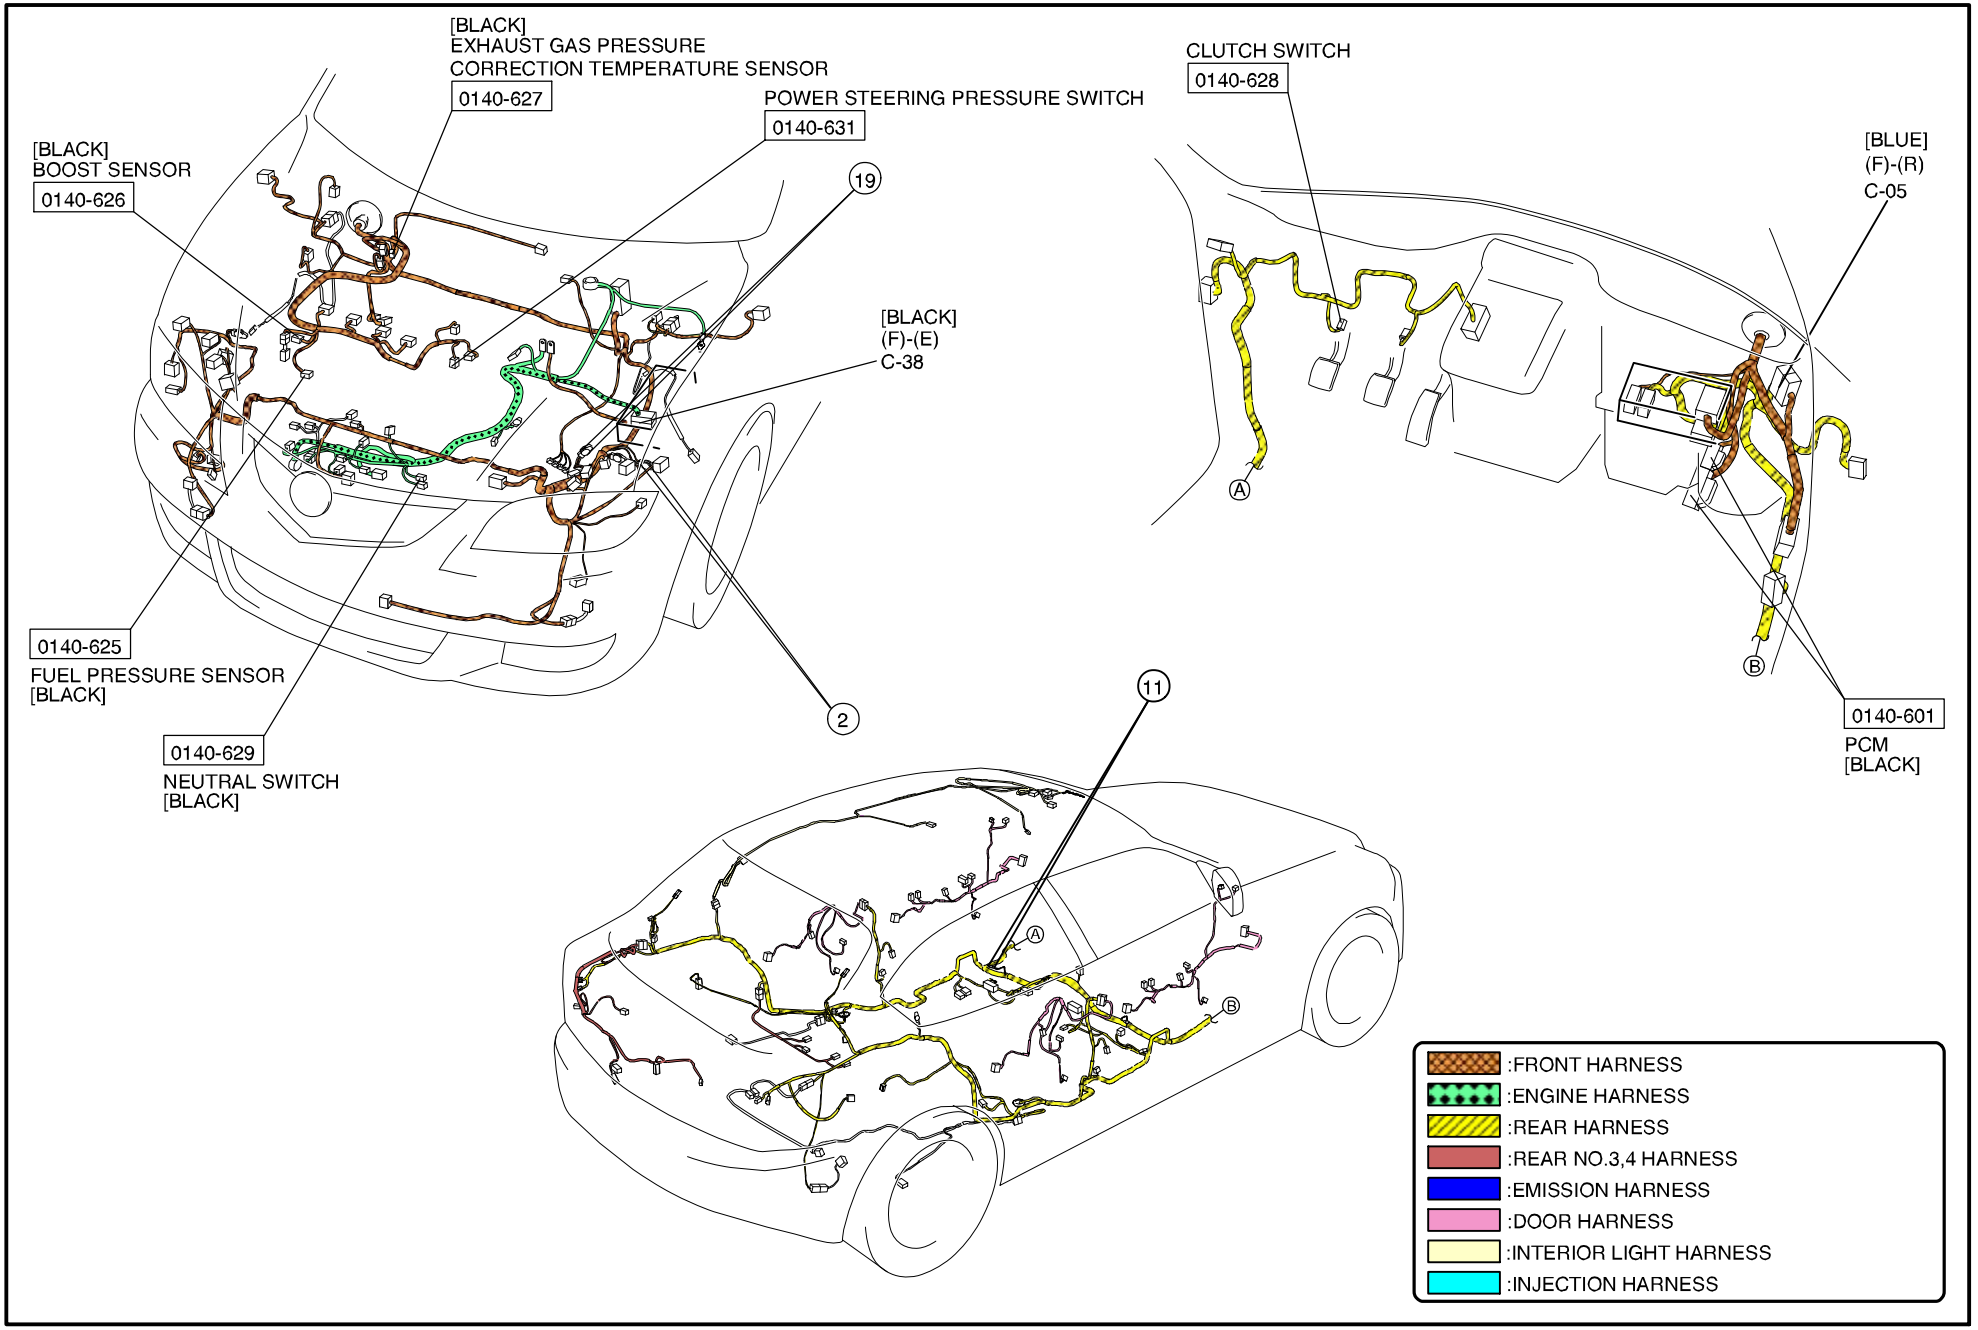

[BLACK]
EXHAUST GAS PRESSURE
CORRECTION TEMPERATURE SENSOR
0140-627
POWER STEERING PRESSURE SWITCH
0140-631
[BLACK]
BOOST SENSOR
0140-626
19
[BLACK]
(F)-(E)
C-38
2
0140-625
FUEL PRESSURE SENSOR
[BLACK]
0140-629
NEUTRAL SWITCH
[BLACK]
CLUTCH SWITCH
0140-628
[BLUE]
(F)-(R)
C-05
A
B
0140-601
PCM
[BLACK]
11
A
B
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

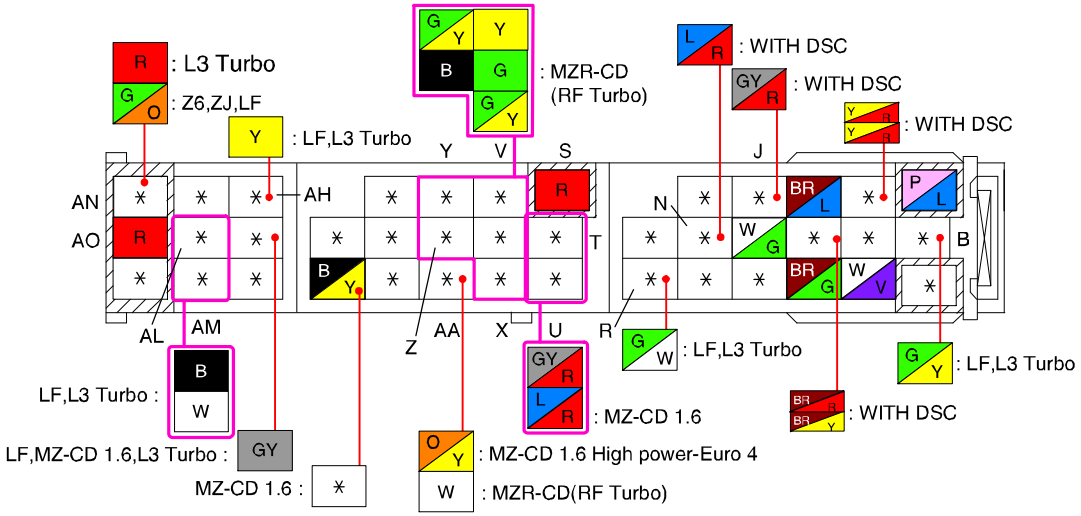


REAR HARNESS

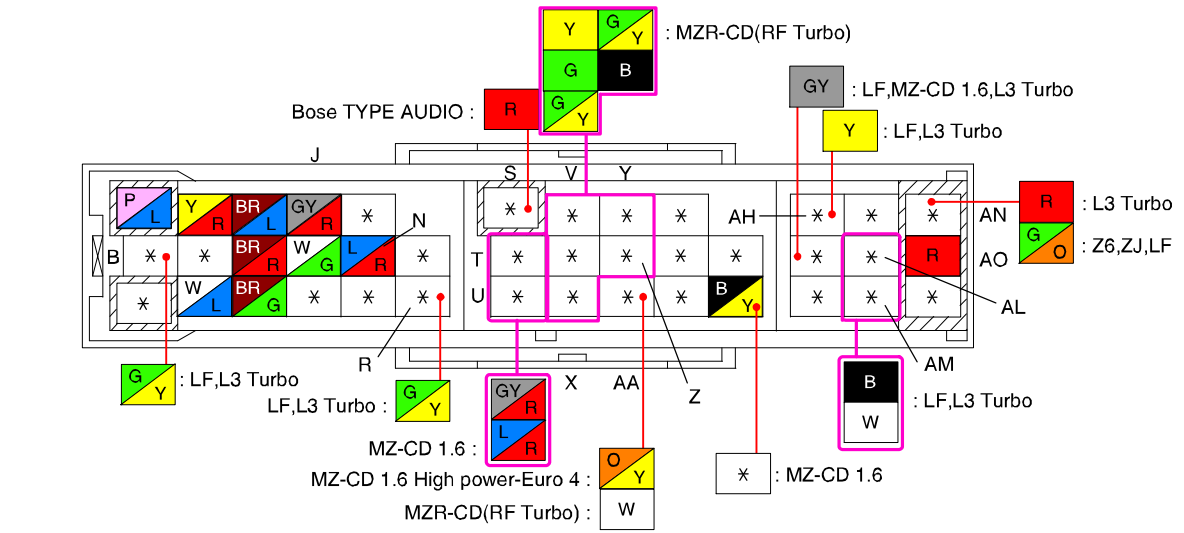



C-38
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

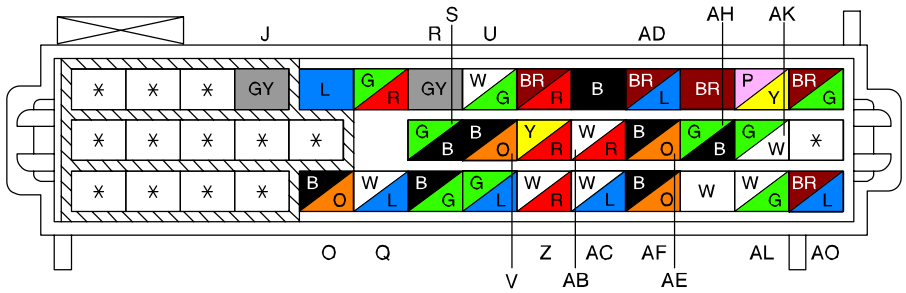


ENGINE HARNESS

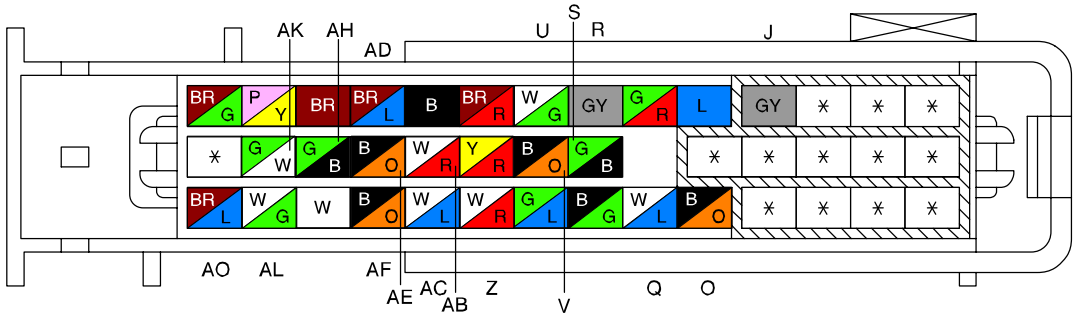


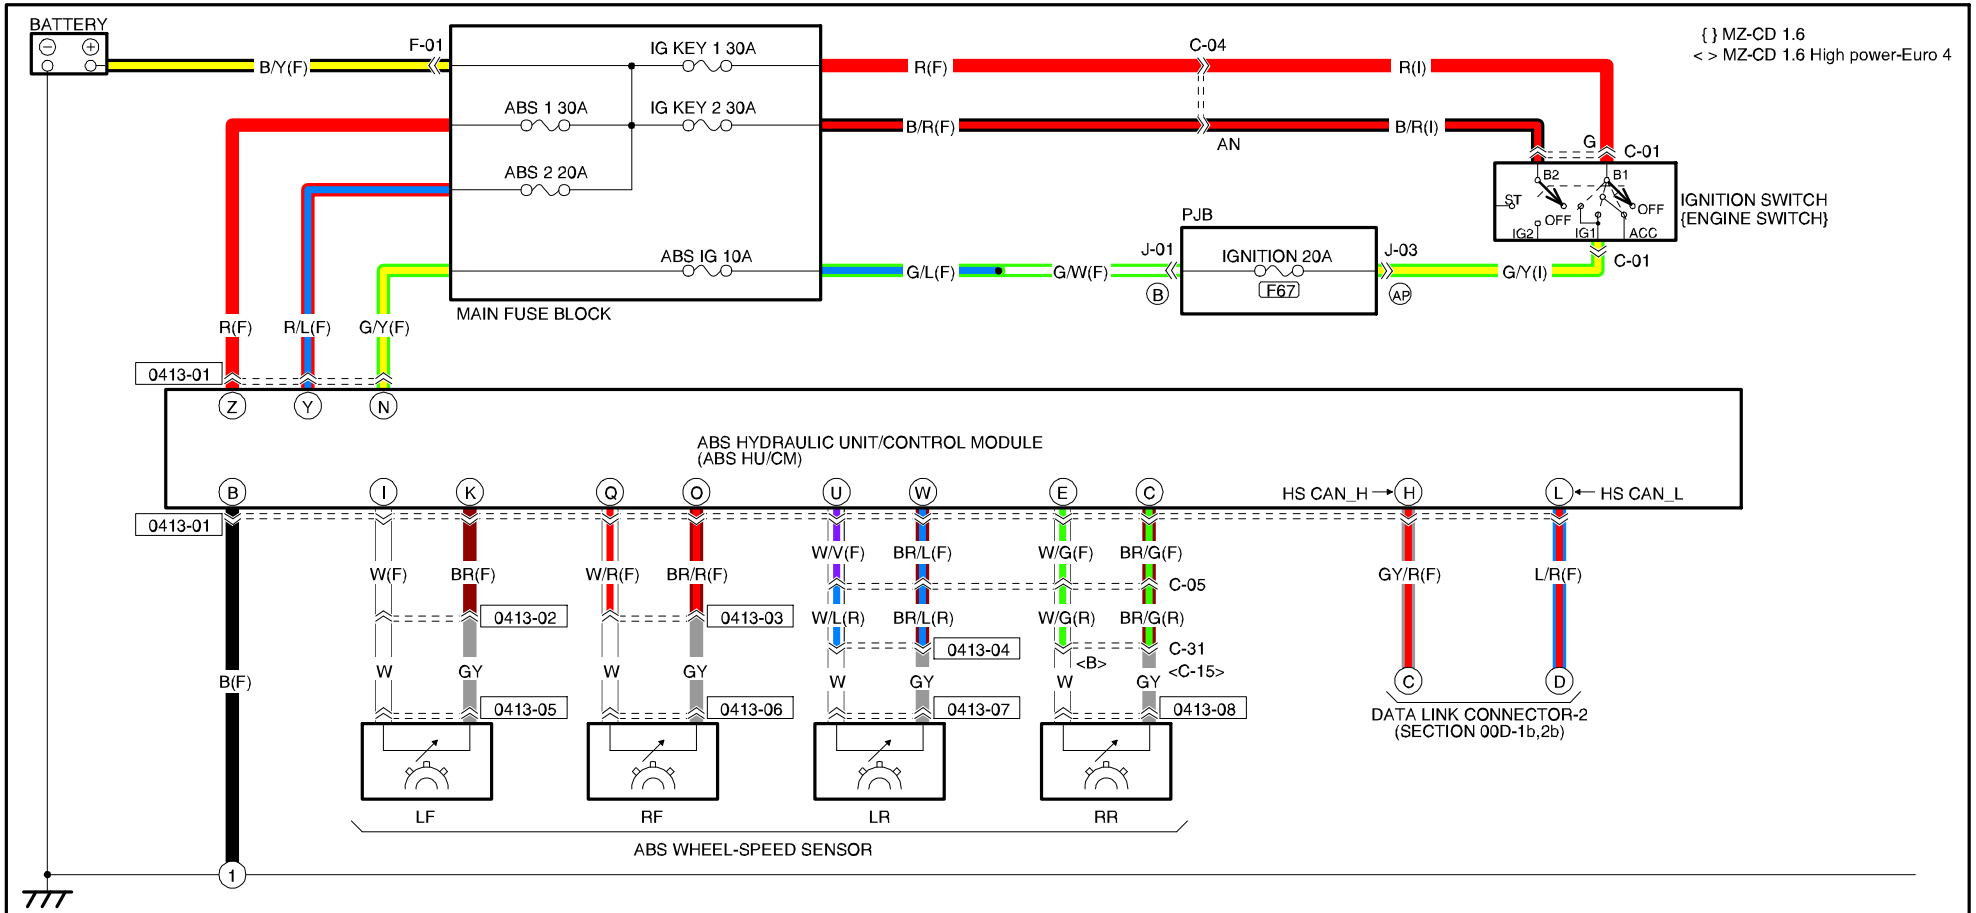


0413-01
ABS HU/CM

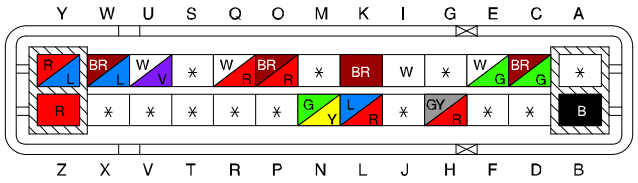

0413-02
FRONT HARNESS-SHORT CORD




0413-03
FRONT HARNESS-SHORT CORD



0413-04
REAR HARNESS-SHORT CORD




0413-05
ABS WHEEL-SPEED SENSOR LF




0413-06
ABS WHEEL-SPEED SENSOR RF




0413-07
ABS WHEEL-SPEED SENSOR LR




0413-08
ABS WHEEL-SPEED SENSOR RR



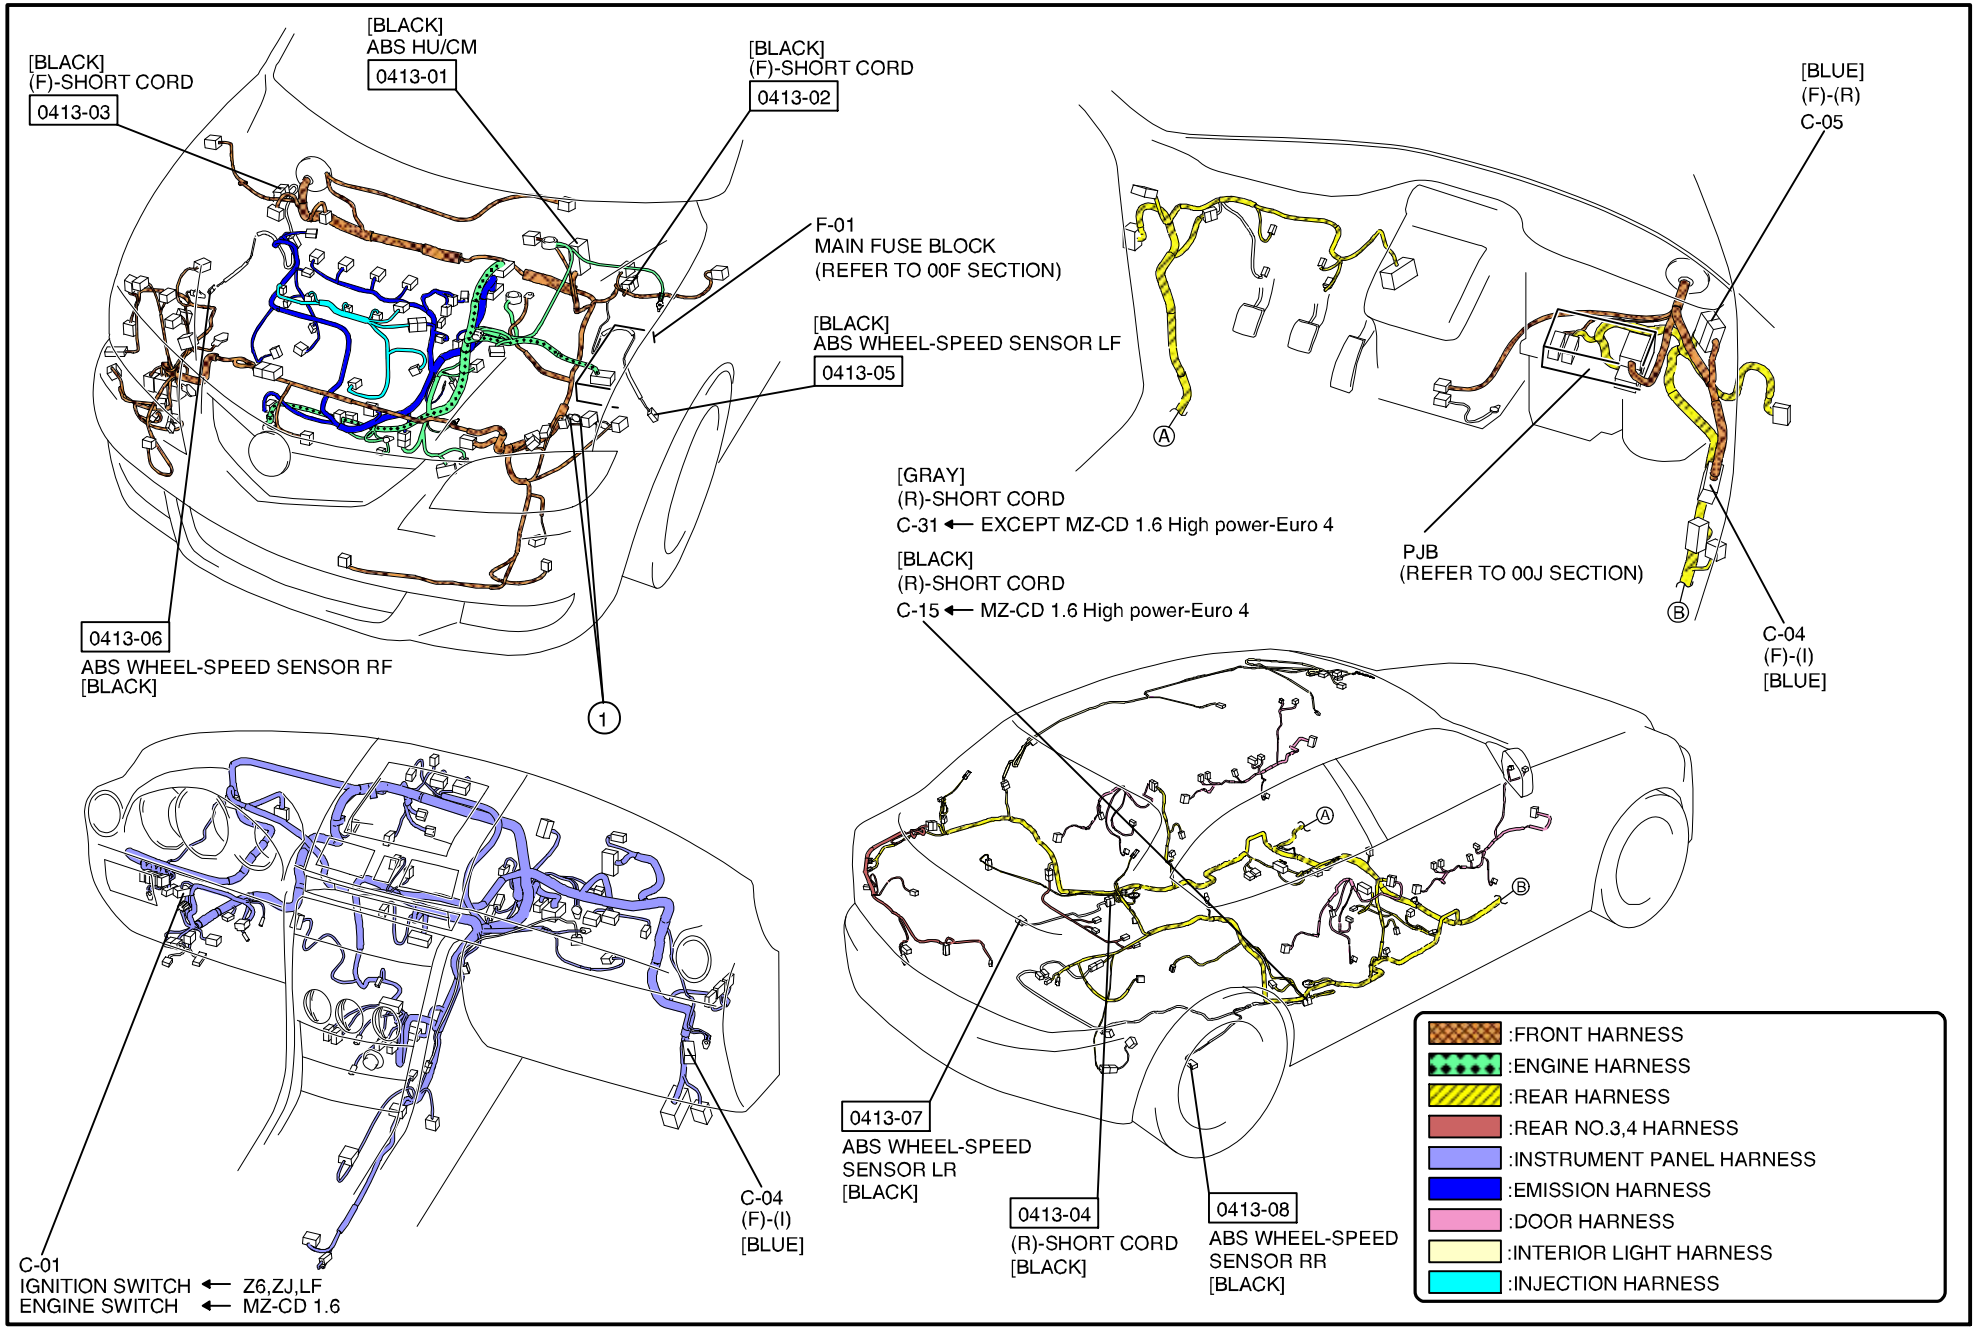

[BLACK]
(F)-SHORT CORD
0413-03
[BLACK]
ABS HU/CM
0413-01
[BLACK]
(F)-SHORT CORD
0413-02
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
[BLACK]
ABS WHEEL-SPEED SENSOR LF
0413-05
[BLUE]
(F)-(R)
C-05
[GRAY]
(R)-SHORT CORD
C-31 ← EXCEPT MZ-CD 1.6 High power-Euro 4
[BLACK]
(R)-SHORT CORD
C-15 ← MZ-CD 1.6 High power-Euro 4
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
0413-06
ABS WHEEL-SPEED SENSOR RF
[BLACK]
1
A
B
C-01
IGNITION SWITCH ← Z6,ZJ,LF
ENGINE SWITCH ← MZ-CD 1.6
C-04
(F)-(I)
[BLUE]
0413-07
ABS WHEEL-SPEED
SENSOR LR
[BLACK]
0413-04
(R)-SHORT CORD
[BLACK]
0413-08
ABS WHEEL-SPEED
SENSOR RR
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

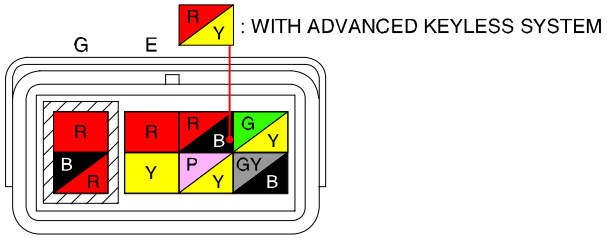


C-31
REAR HARNESS-SHORT CORD

REAR HARNESS

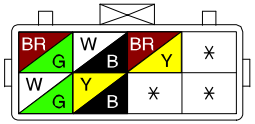


SHORT CORD

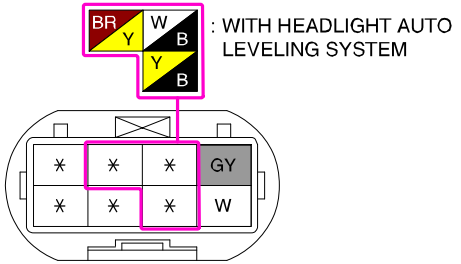


C-15
REAR HARNESS-SHORT CORD

REAR HARNESS

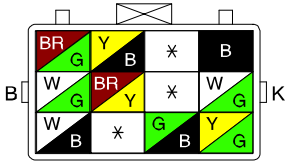


SHORT CORD

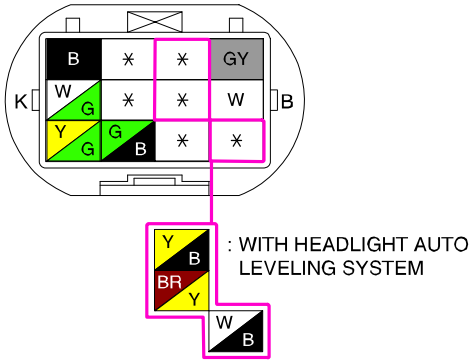


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

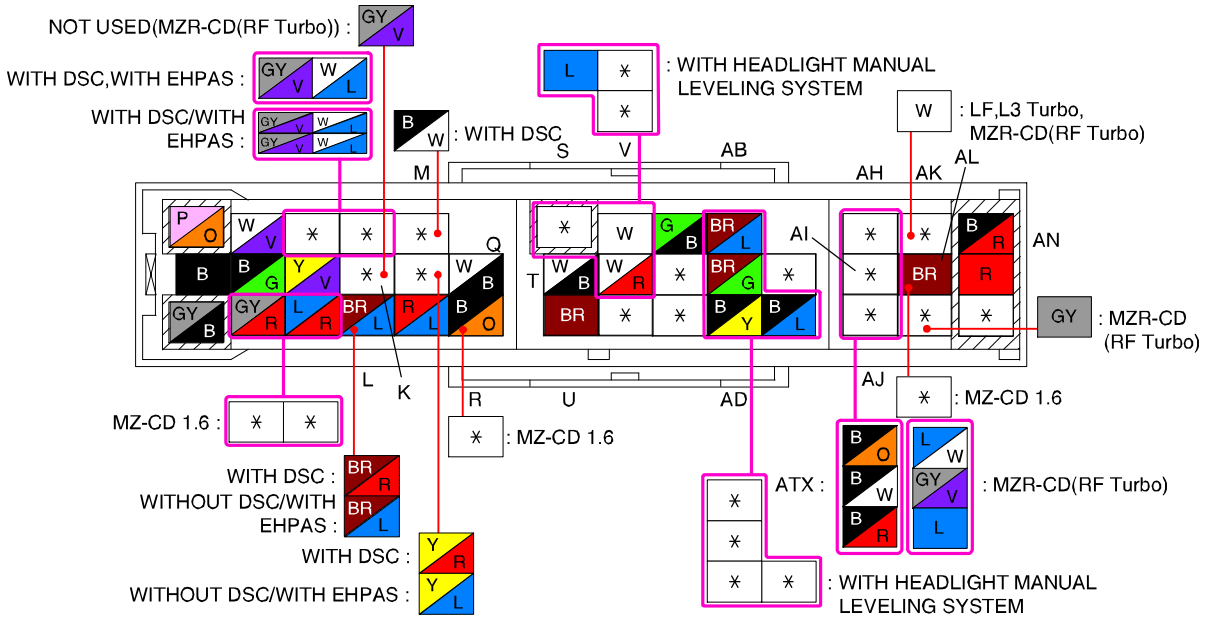


INSTRUMENT PANEL HARNESS

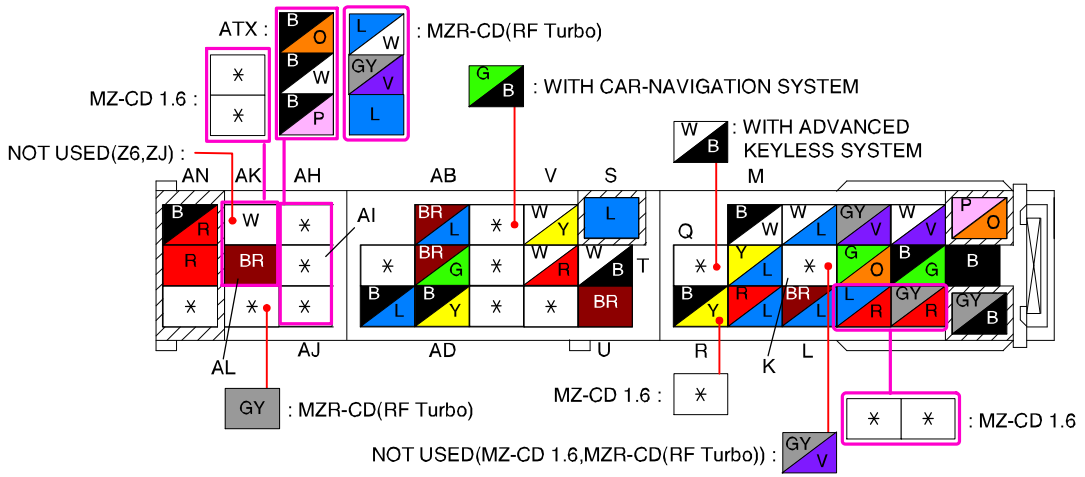


C-05
FRONT HARNESS-REAR HARNESS


FRONT HARNESS

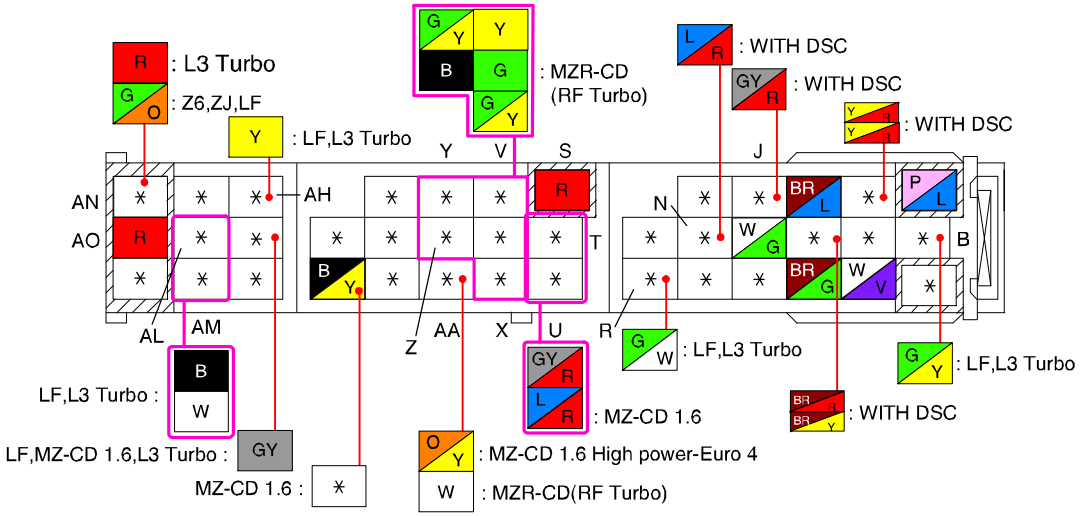


REAR HARNESS

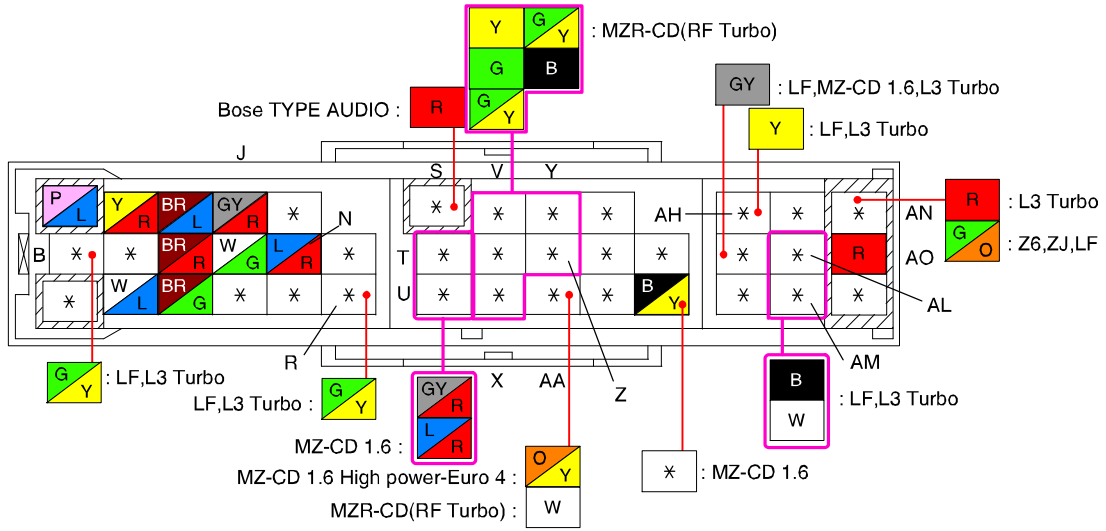


DYNAMIC STABILITY CONTROL

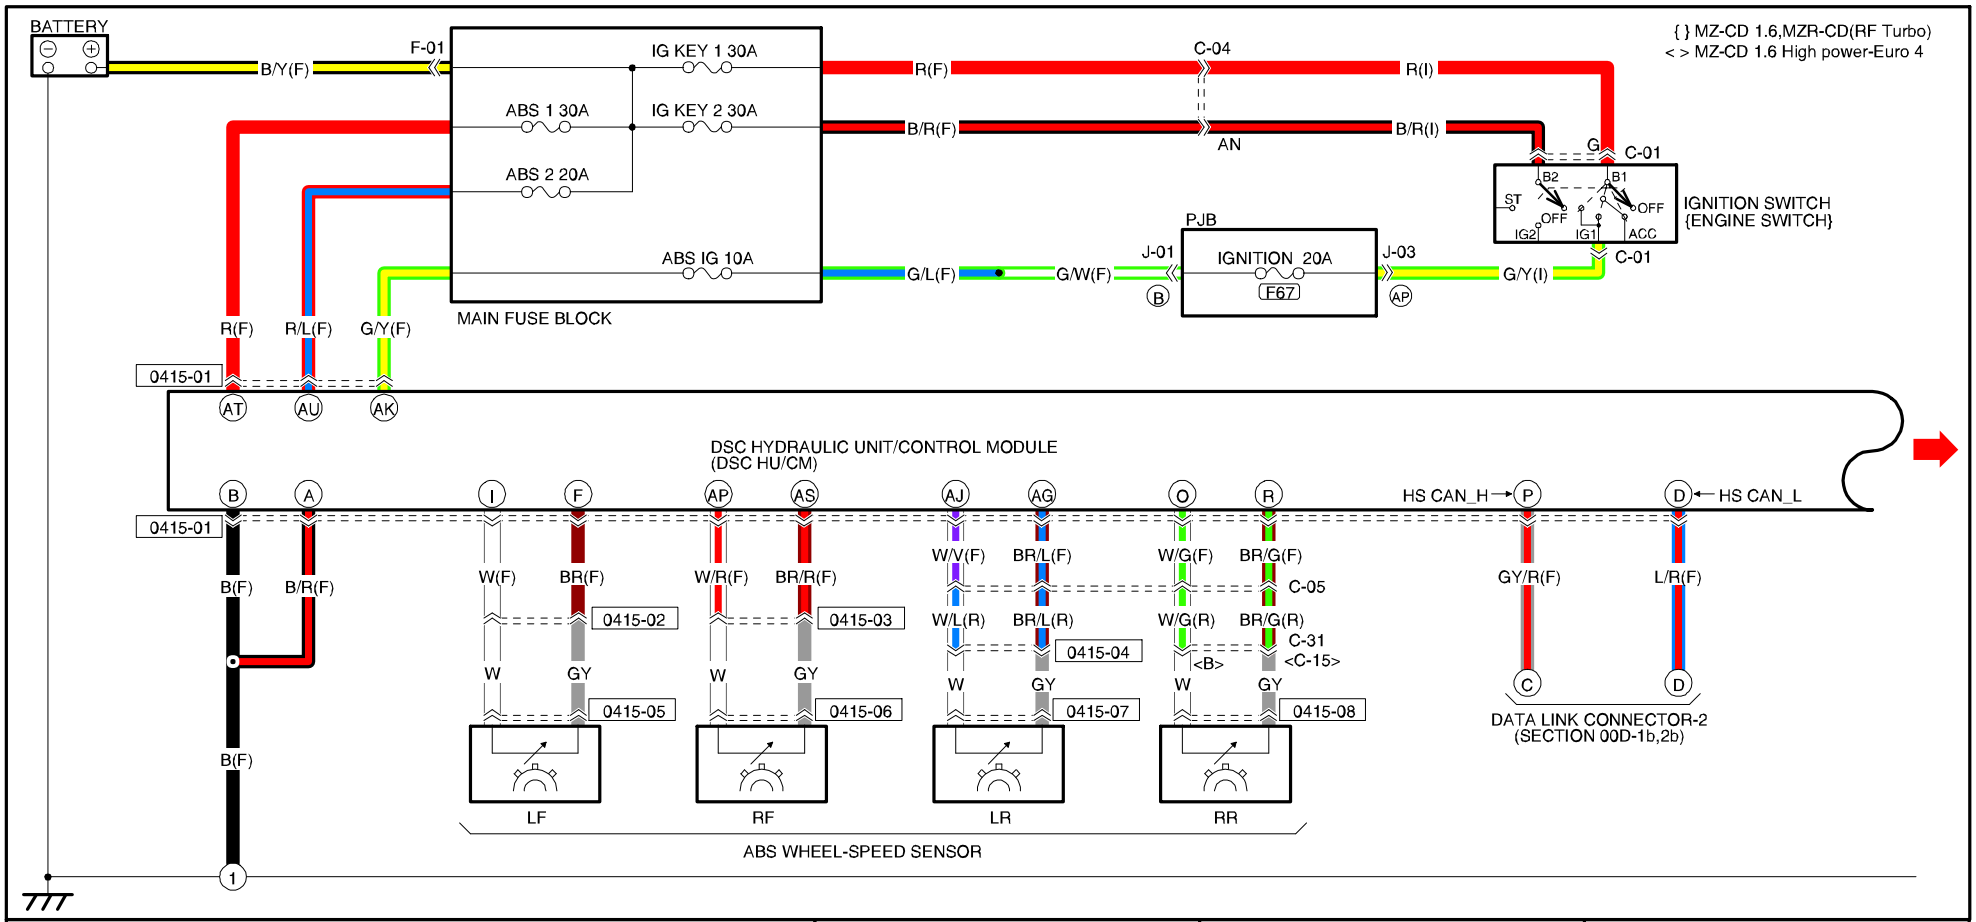


0415-01
DSC HU/CM

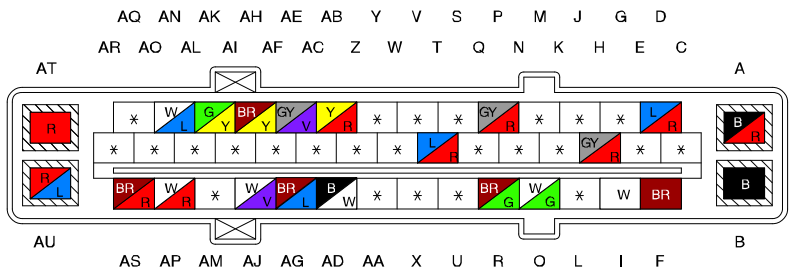

0415-02
FRONT HARNESS-SHORT CORD




0415-03
FRONT HARNESS-SHORT CORD




0415-04
REAR HARNESS-SHORT CORD




0415-05
ABS WHEEL-SPEED SENSOR LF




0415-06
ABS WHEEL-SPEED SENSOR RF




0415-07
ABS WHEEL-SPEED SENSOR LR




0415-08
ABS WHEEL-SPEED SENSOR RR



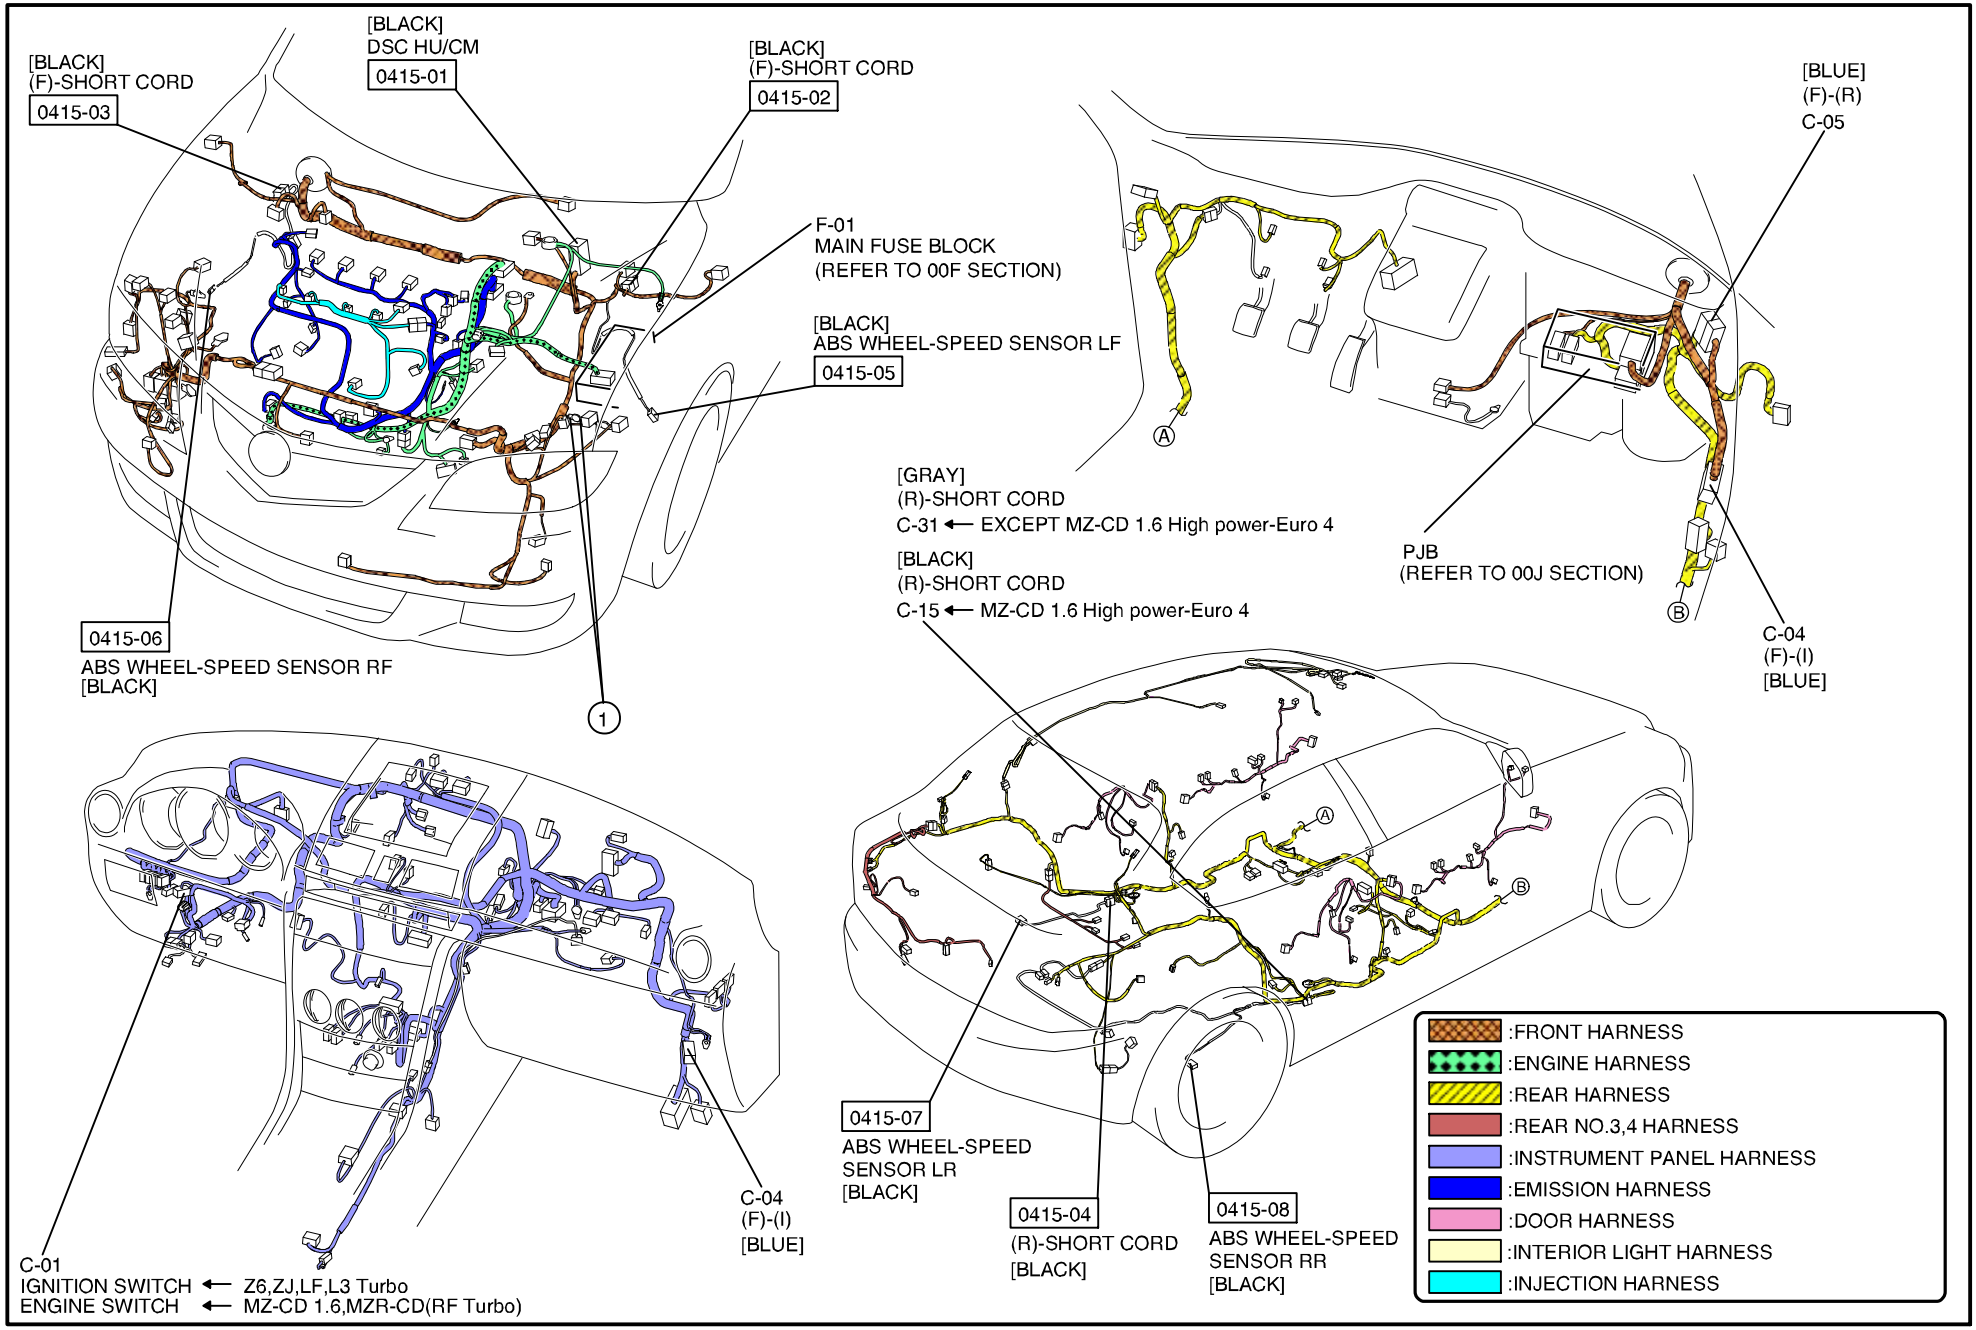

[BLACK]
(F)-SHORT CORD
0415-03
[BLACK]
DSC HU/CM
0415-01
[BLACK]
(F)-SHORT CORD
0415-02
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
[BLACK]
ABS WHEEL-SPEED SENSOR LF
0415-05
[BLUE]
(F)-(R)
C-05
[GRAY]
(R)-SHORT CORD
C-31 ← EXCEPT MZ-CD 1.6 High power-Euro 4
[BLACK]
(R)-SHORT CORD
C-15 ← MZ-CD 1.6 High power-Euro 4
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
0415-06
ABS WHEEL-SPEED SENSOR RF
[BLACK]
1
A
B
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-04
(F)-(I)
[BLUE]
0415-07
ABS WHEEL-SPEED
SENSOR LR
[BLACK]
0415-04
(R)-SHORT CORD
[BLACK]
0415-08
ABS WHEEL-SPEED
SENSOR RR
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

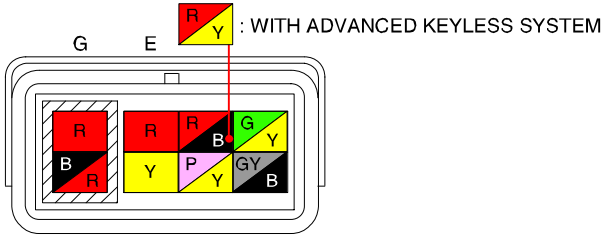


C-31
REAR HARNESS-SHORT CORD

REAR HARNESS

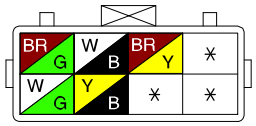


SHORT CORD

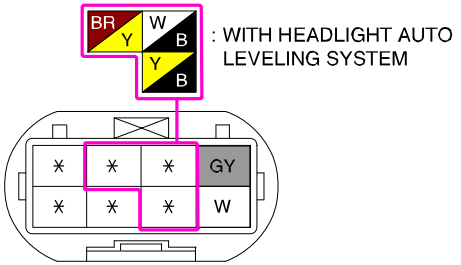


C-15
REAR HARNESS-SHORT CORD

REAR HARNESS

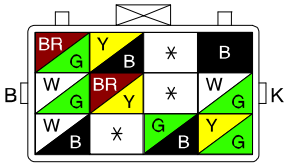


SHORT CORD

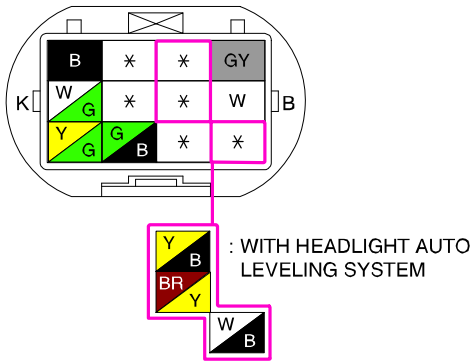


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

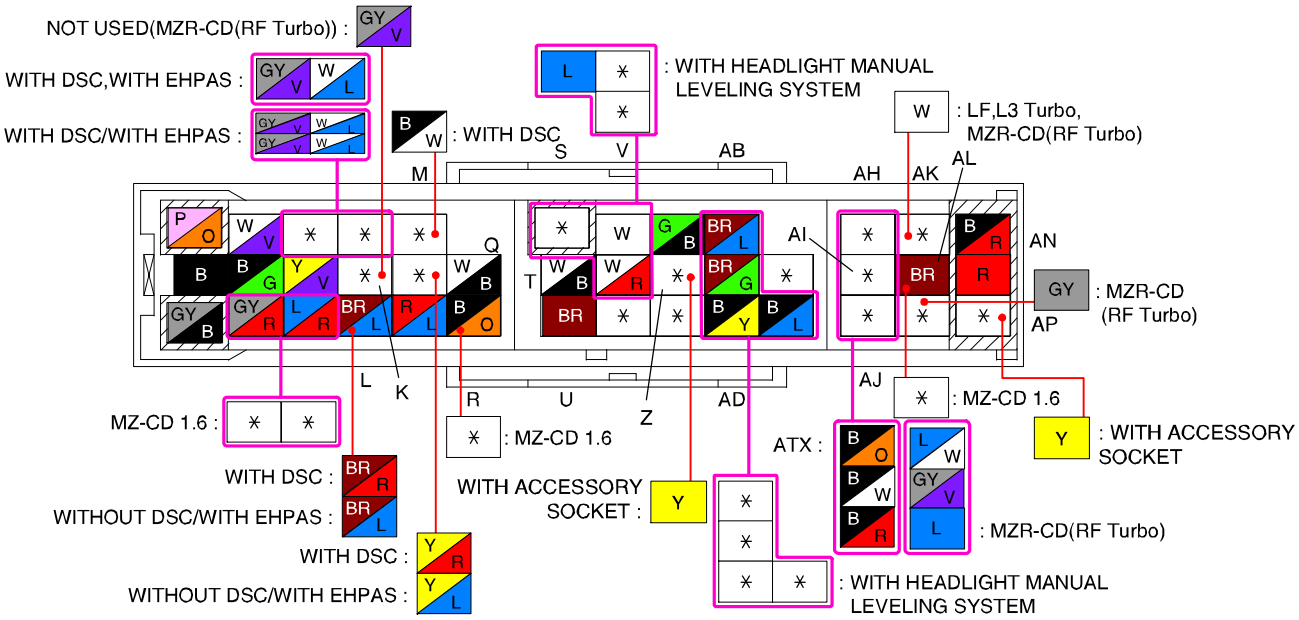


INSTRUMENT PANEL HARNESS

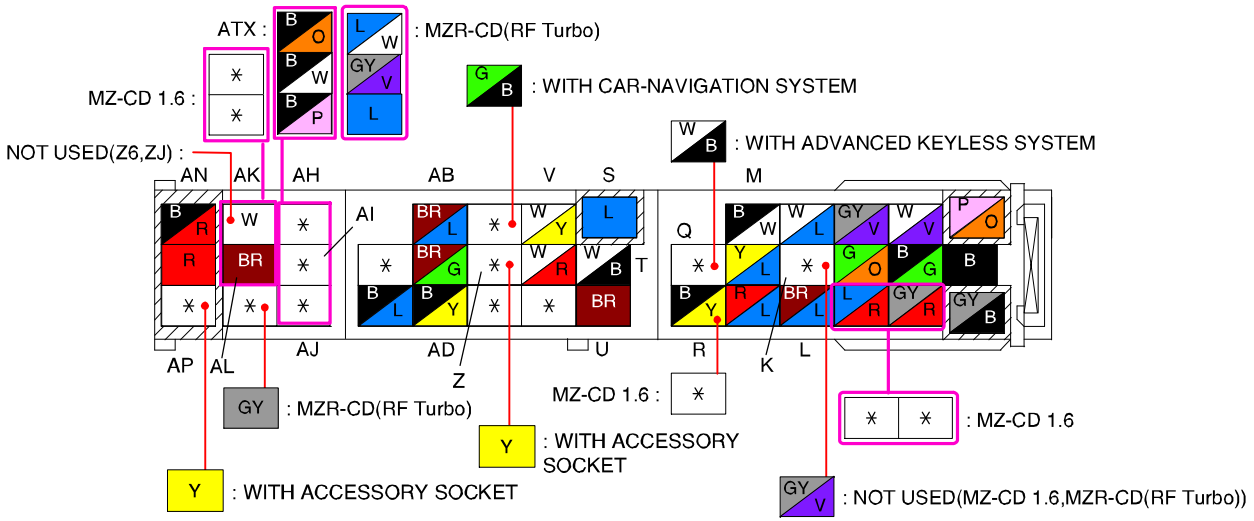



C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

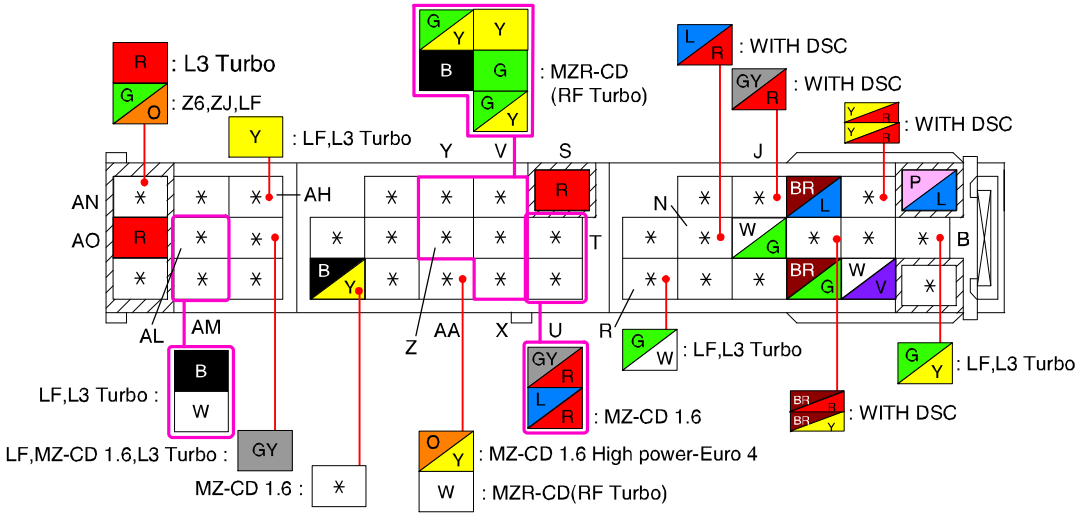


REAR HARNESS

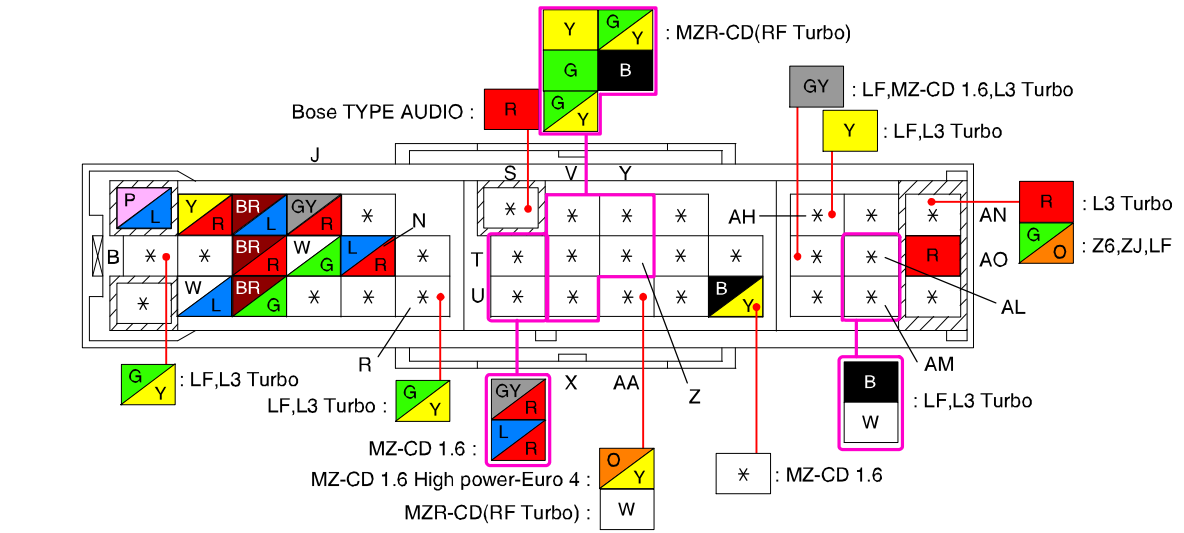


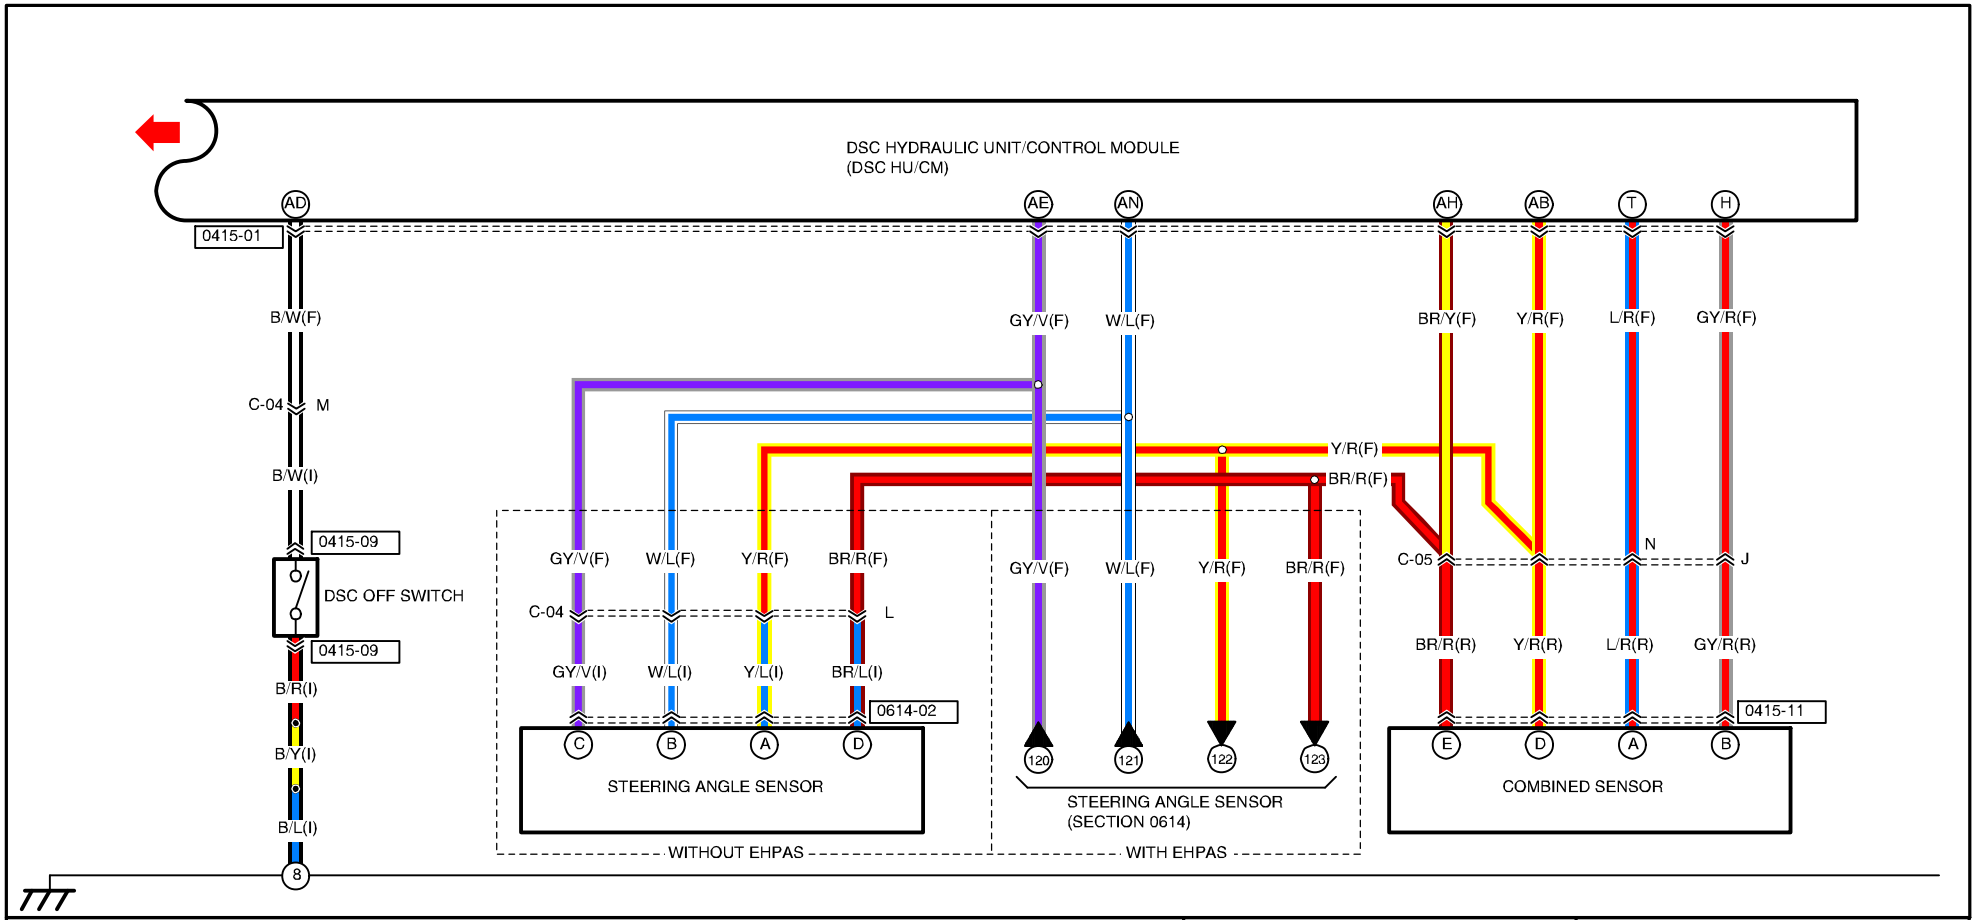


0415-01
DSC HU/CM

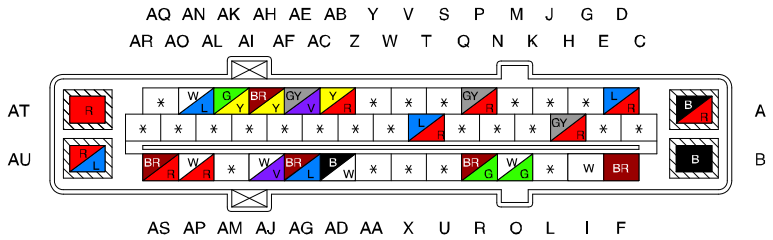


0415-09
DSC OFF SWITCH




0415-11
COMBINED SENSOR

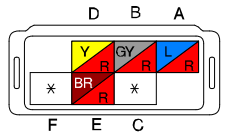


0614-02
STEERING ANGLE SENSOR



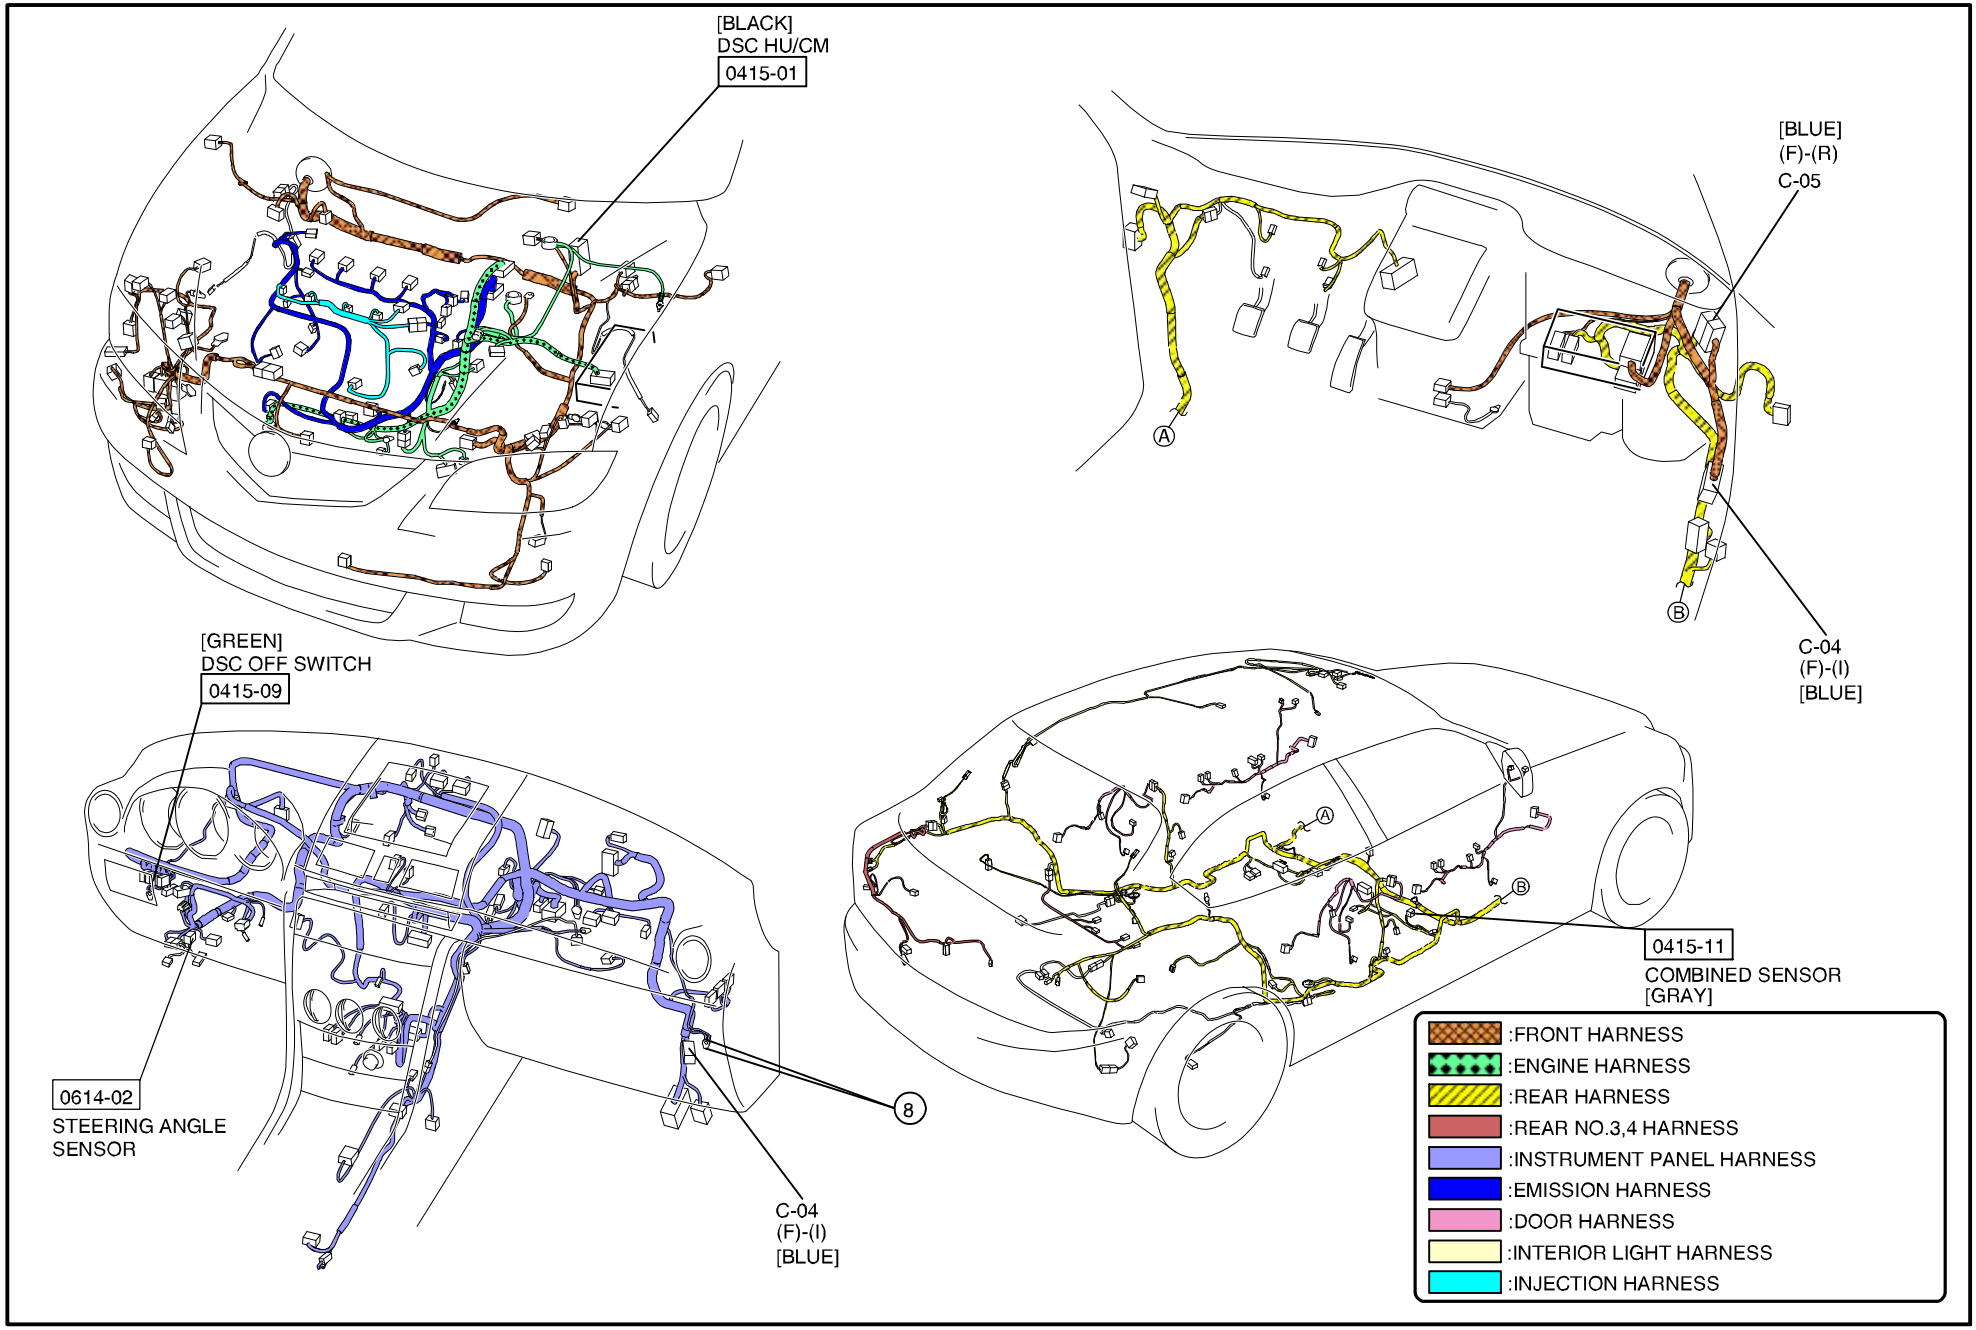

[BLACK]
DSC HU/CM
0415-01
[BLUE]
(F)-(R)
C-05
Ⓐ
Ⓑ
C-04
(F)-(I)
[BLUE]
[GREEN]
DSC OFF SWITCH
0415-09
0614-02
STEERING ANGLE
SENSOR
8
C-04
(F)-(I)
[BLUE]
0415-11
COMBINED SENSOR
[GRAY]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

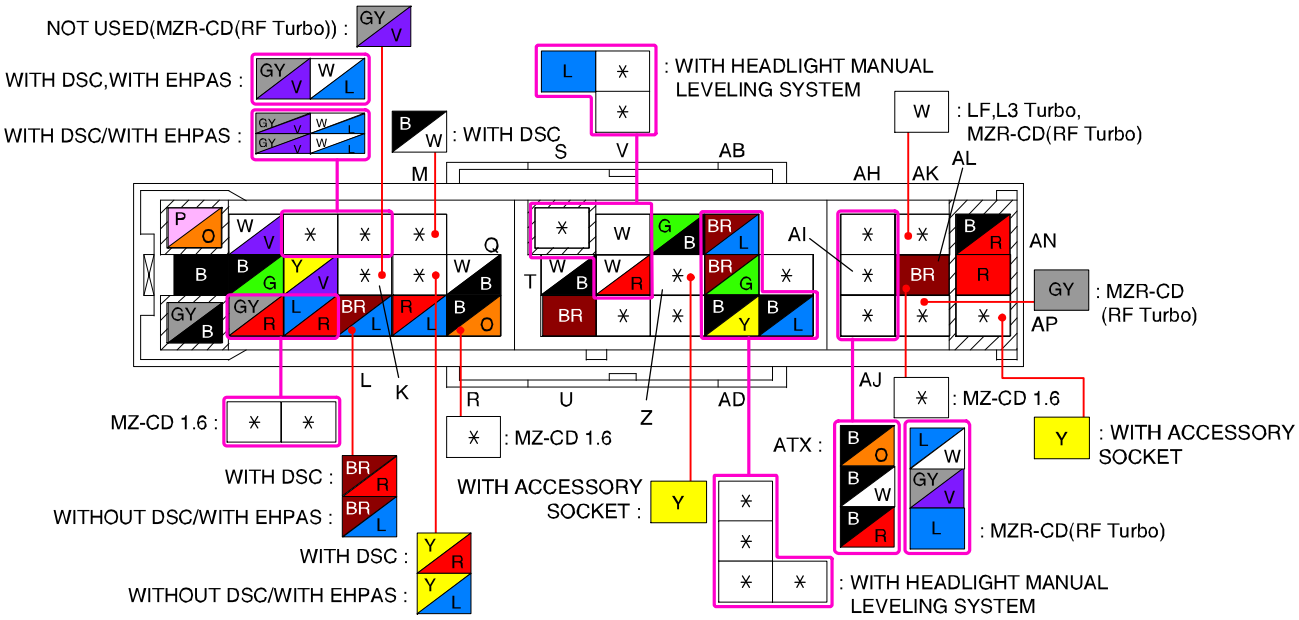


INSTRUMENT PANEL HARNESS

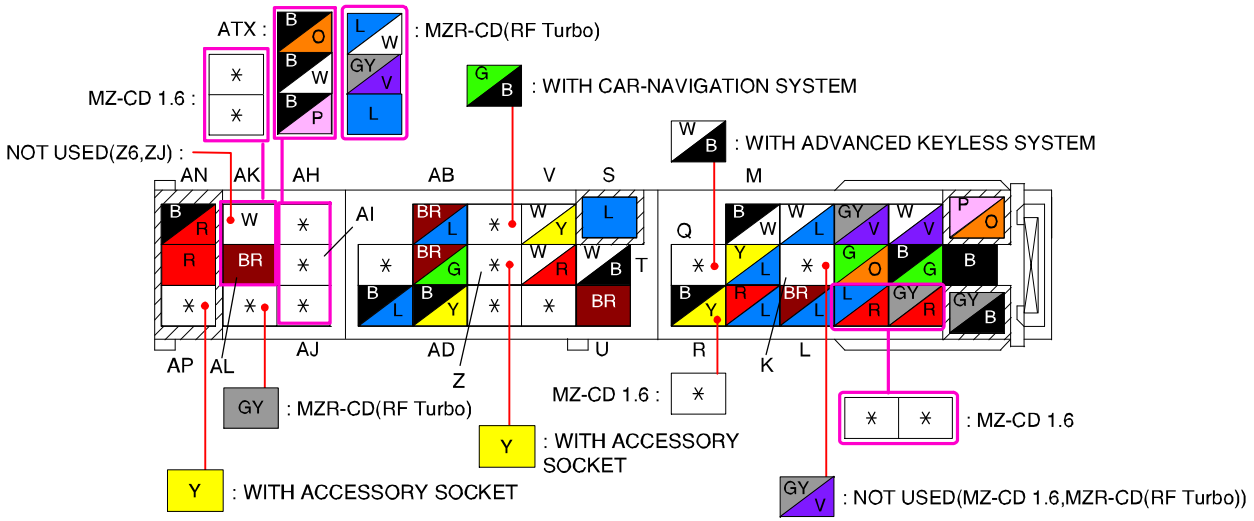


C-05
FRONT HARNESS-REAR HARNESS


FRONT HARNESS



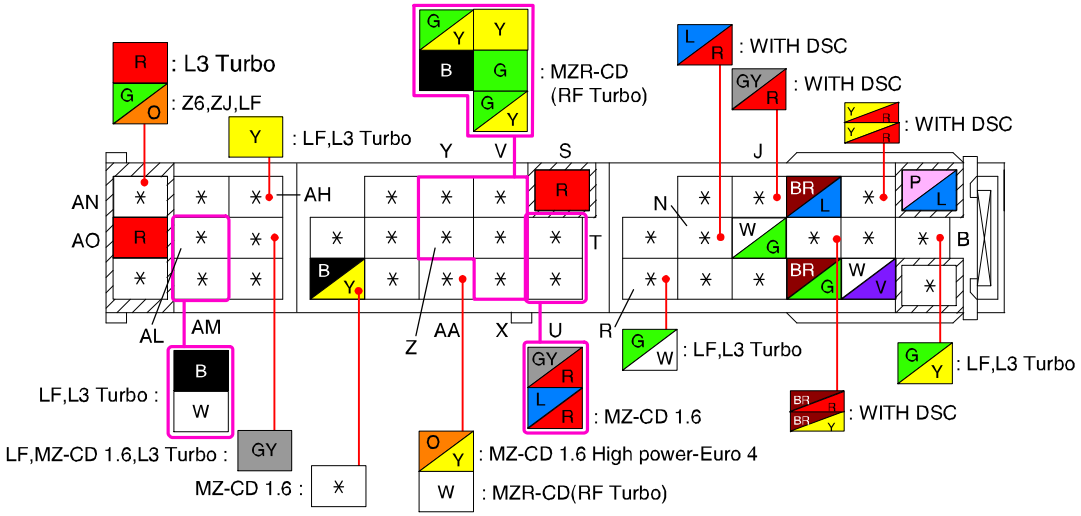



REAR HARNESS

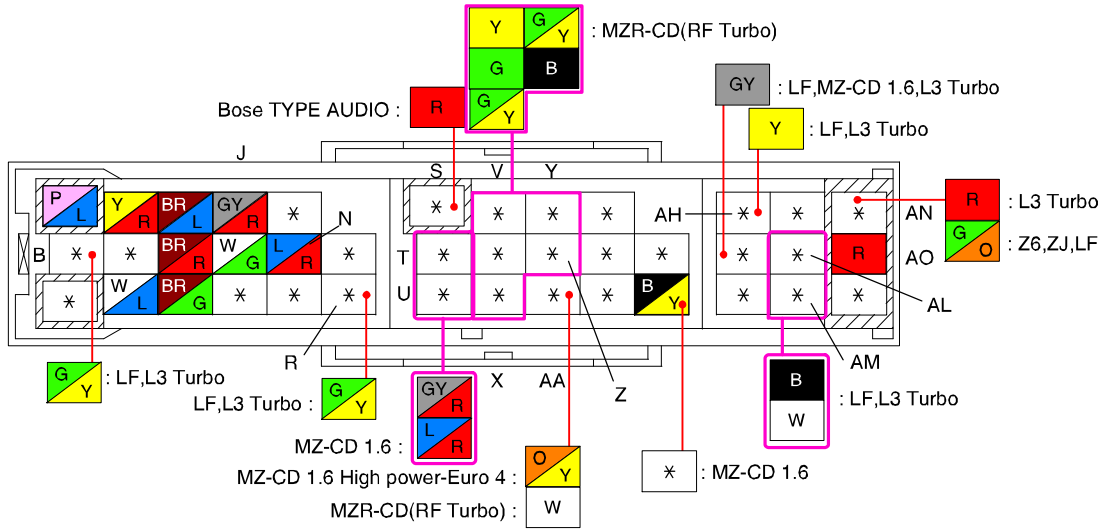


KEY INTERLOCK SYSTEM/SHIFT-LOCK SYSTEM

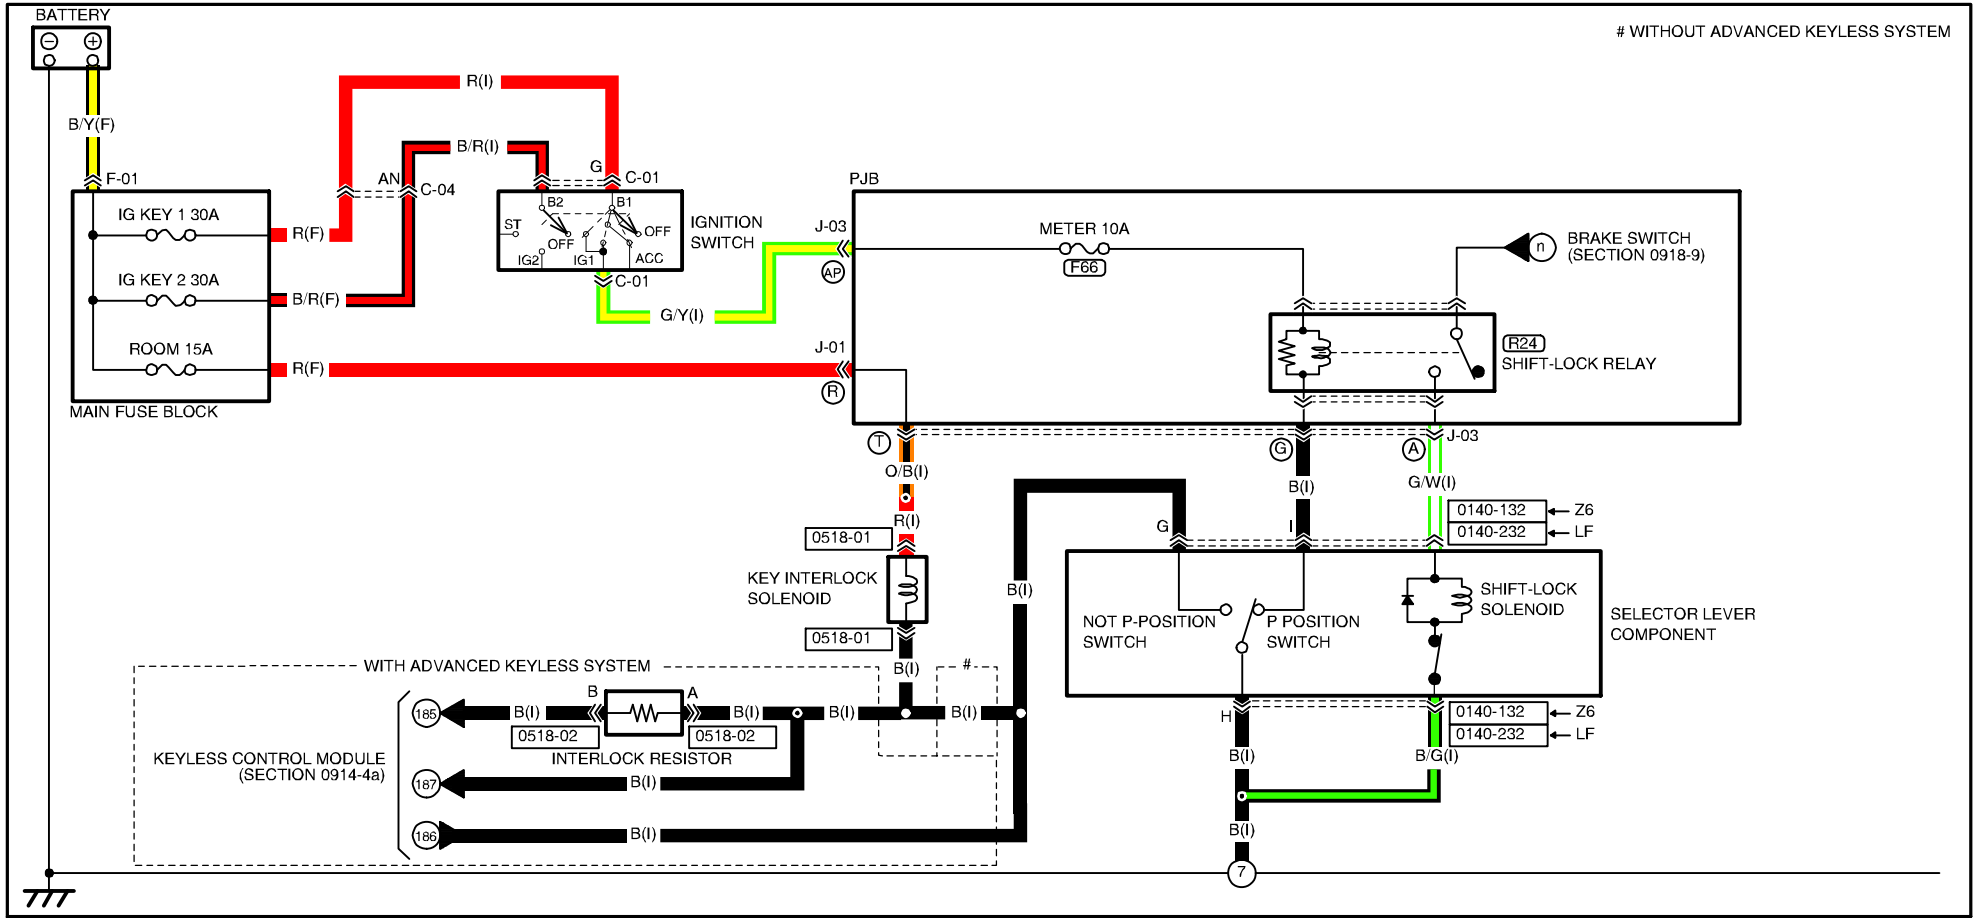

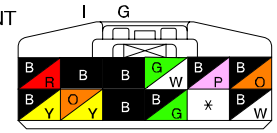0518-01 KEY INTERLOCK SOLENOID	0518-02 INTERLOCK RESISTOR	0140-132 ← Z6 0140-232 ← LF SELECTOR LEVER COMPONENT			
					

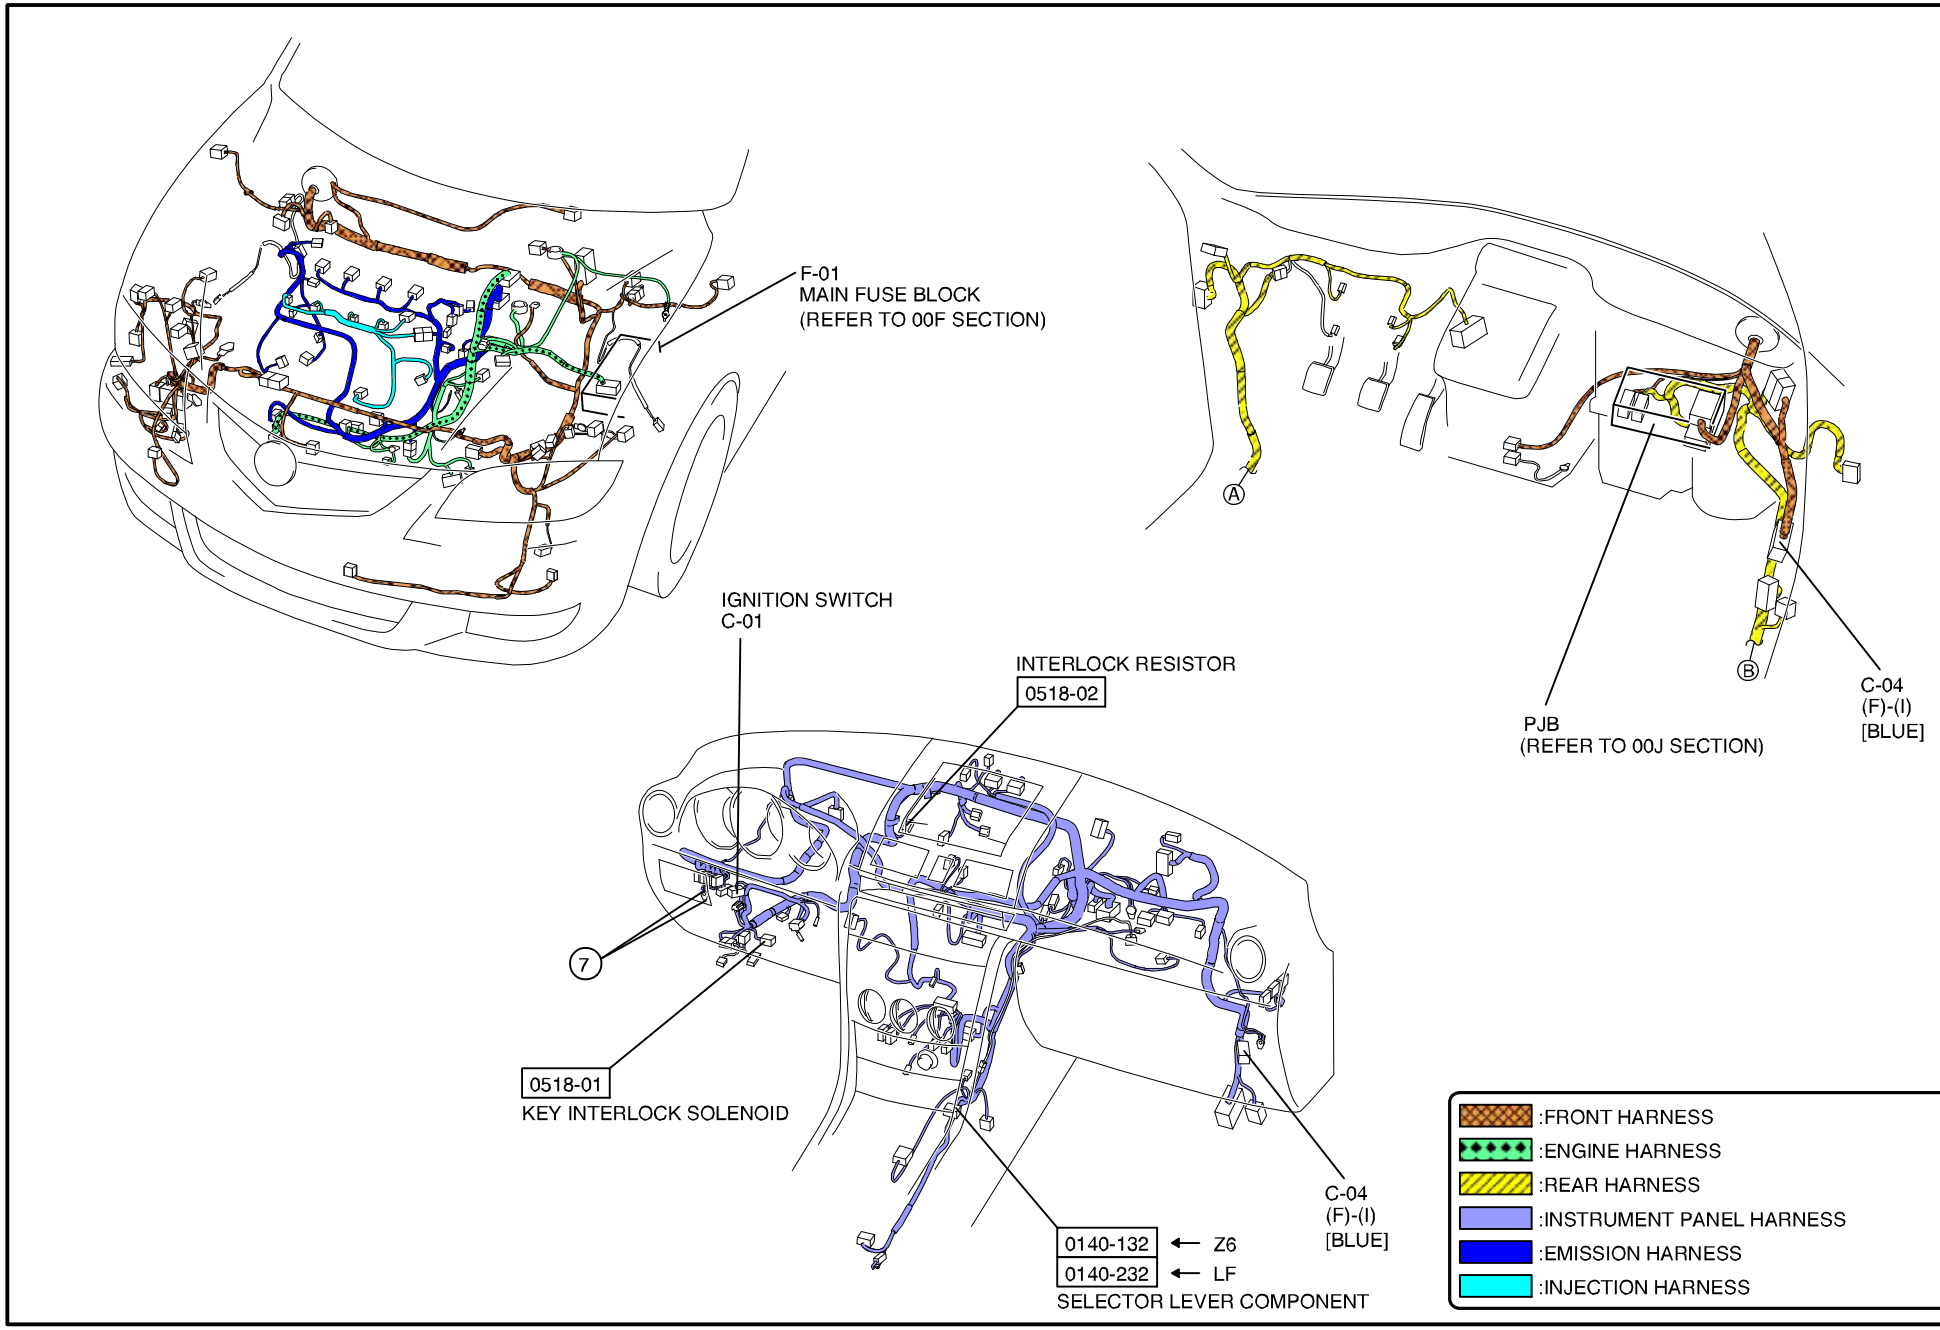

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
Ⓑ
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
IGNITION SWITCH
C-01
INTERLOCK RESISTOR
0518-02
7
0518-01
KEY INTERLOCK SOLENOID
C-04
(F)-(I)
[BLUE]
0140-132
0140-232
Z6
LF
SELECTOR LEVER COMPONENT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ← MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

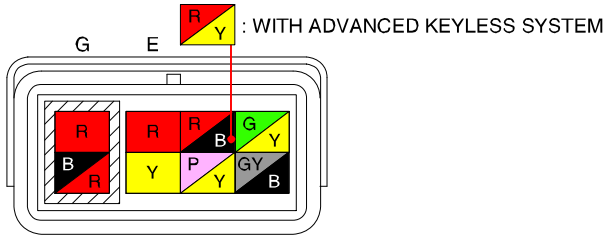


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

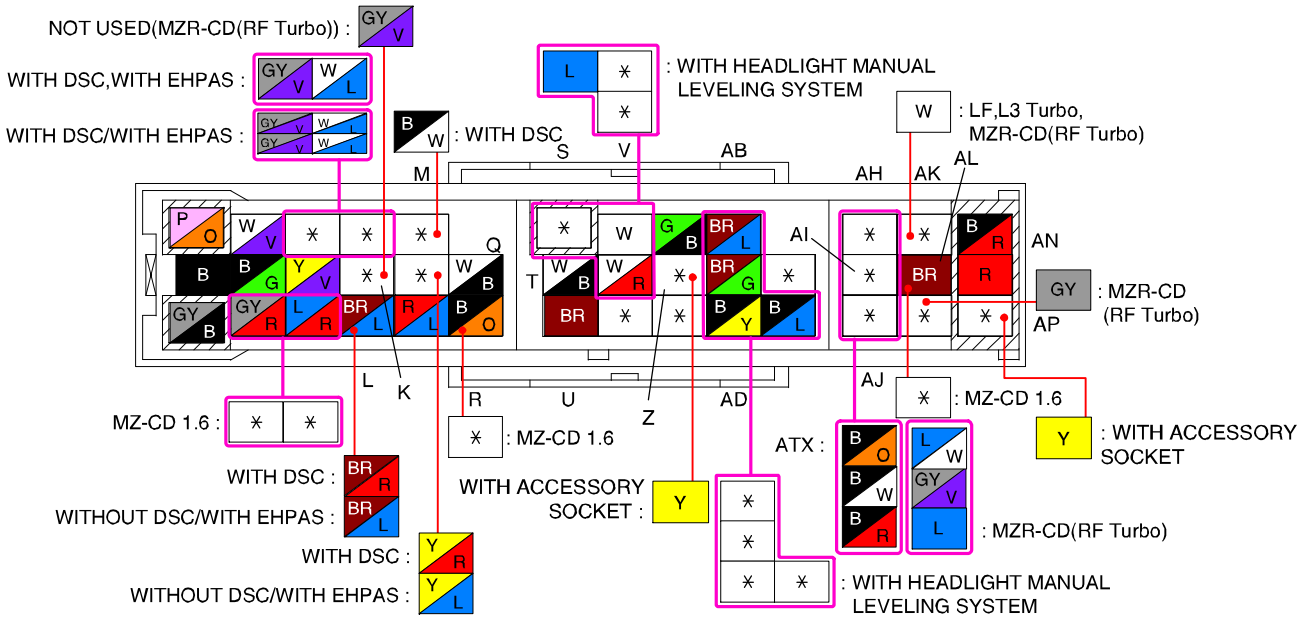


INSTRUMENT PANEL HARNESS

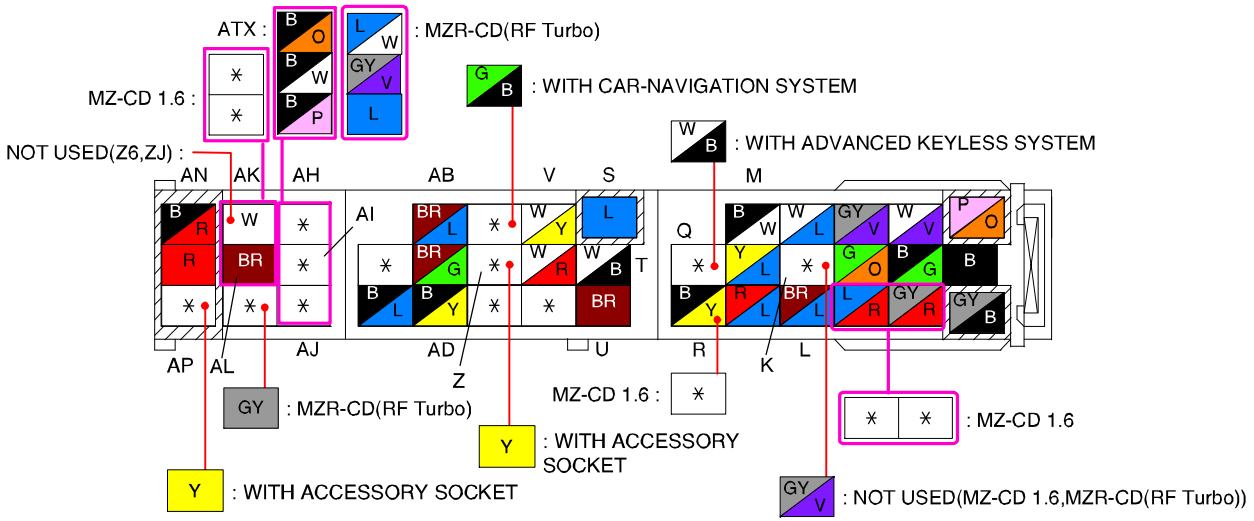


ELECTRO HYDRAULIC POWER ASSIST STEERING (EHPAS) SYSTEM

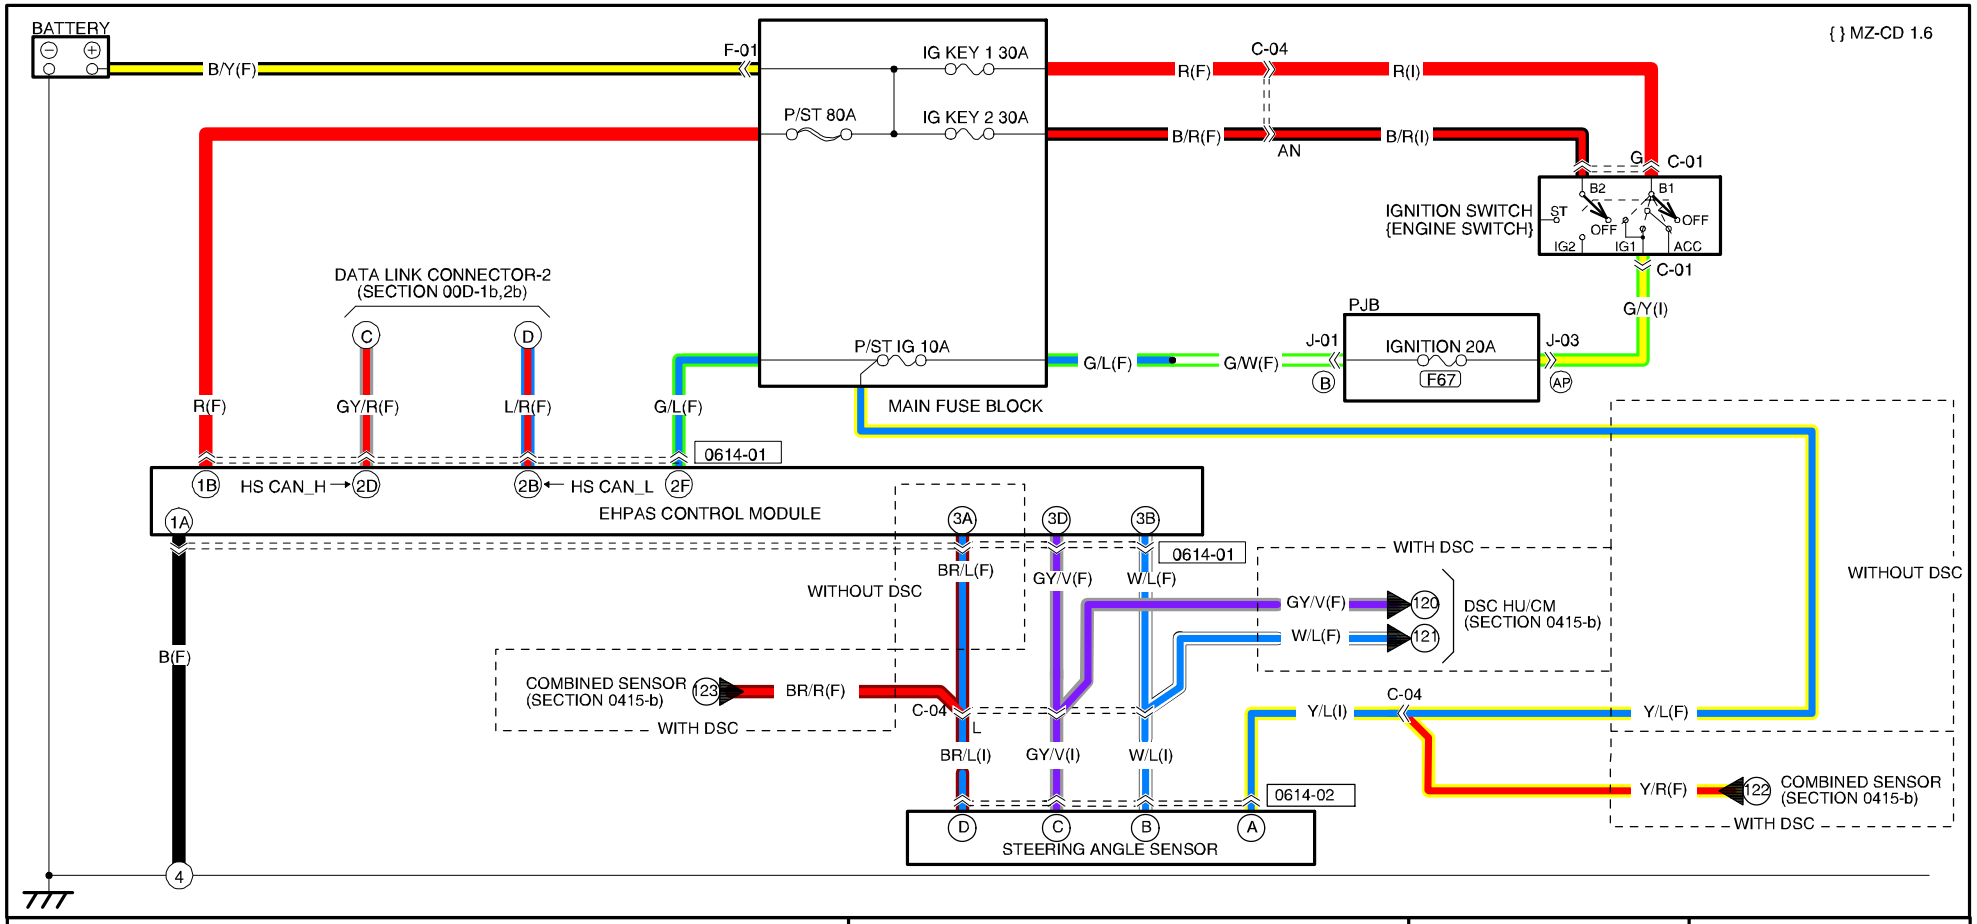


0614-01
EHPAS CONTROL MODULE

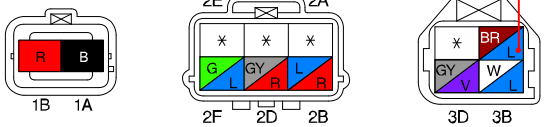


0614-02
STEERING ANGLE SENSOR

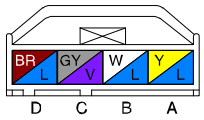

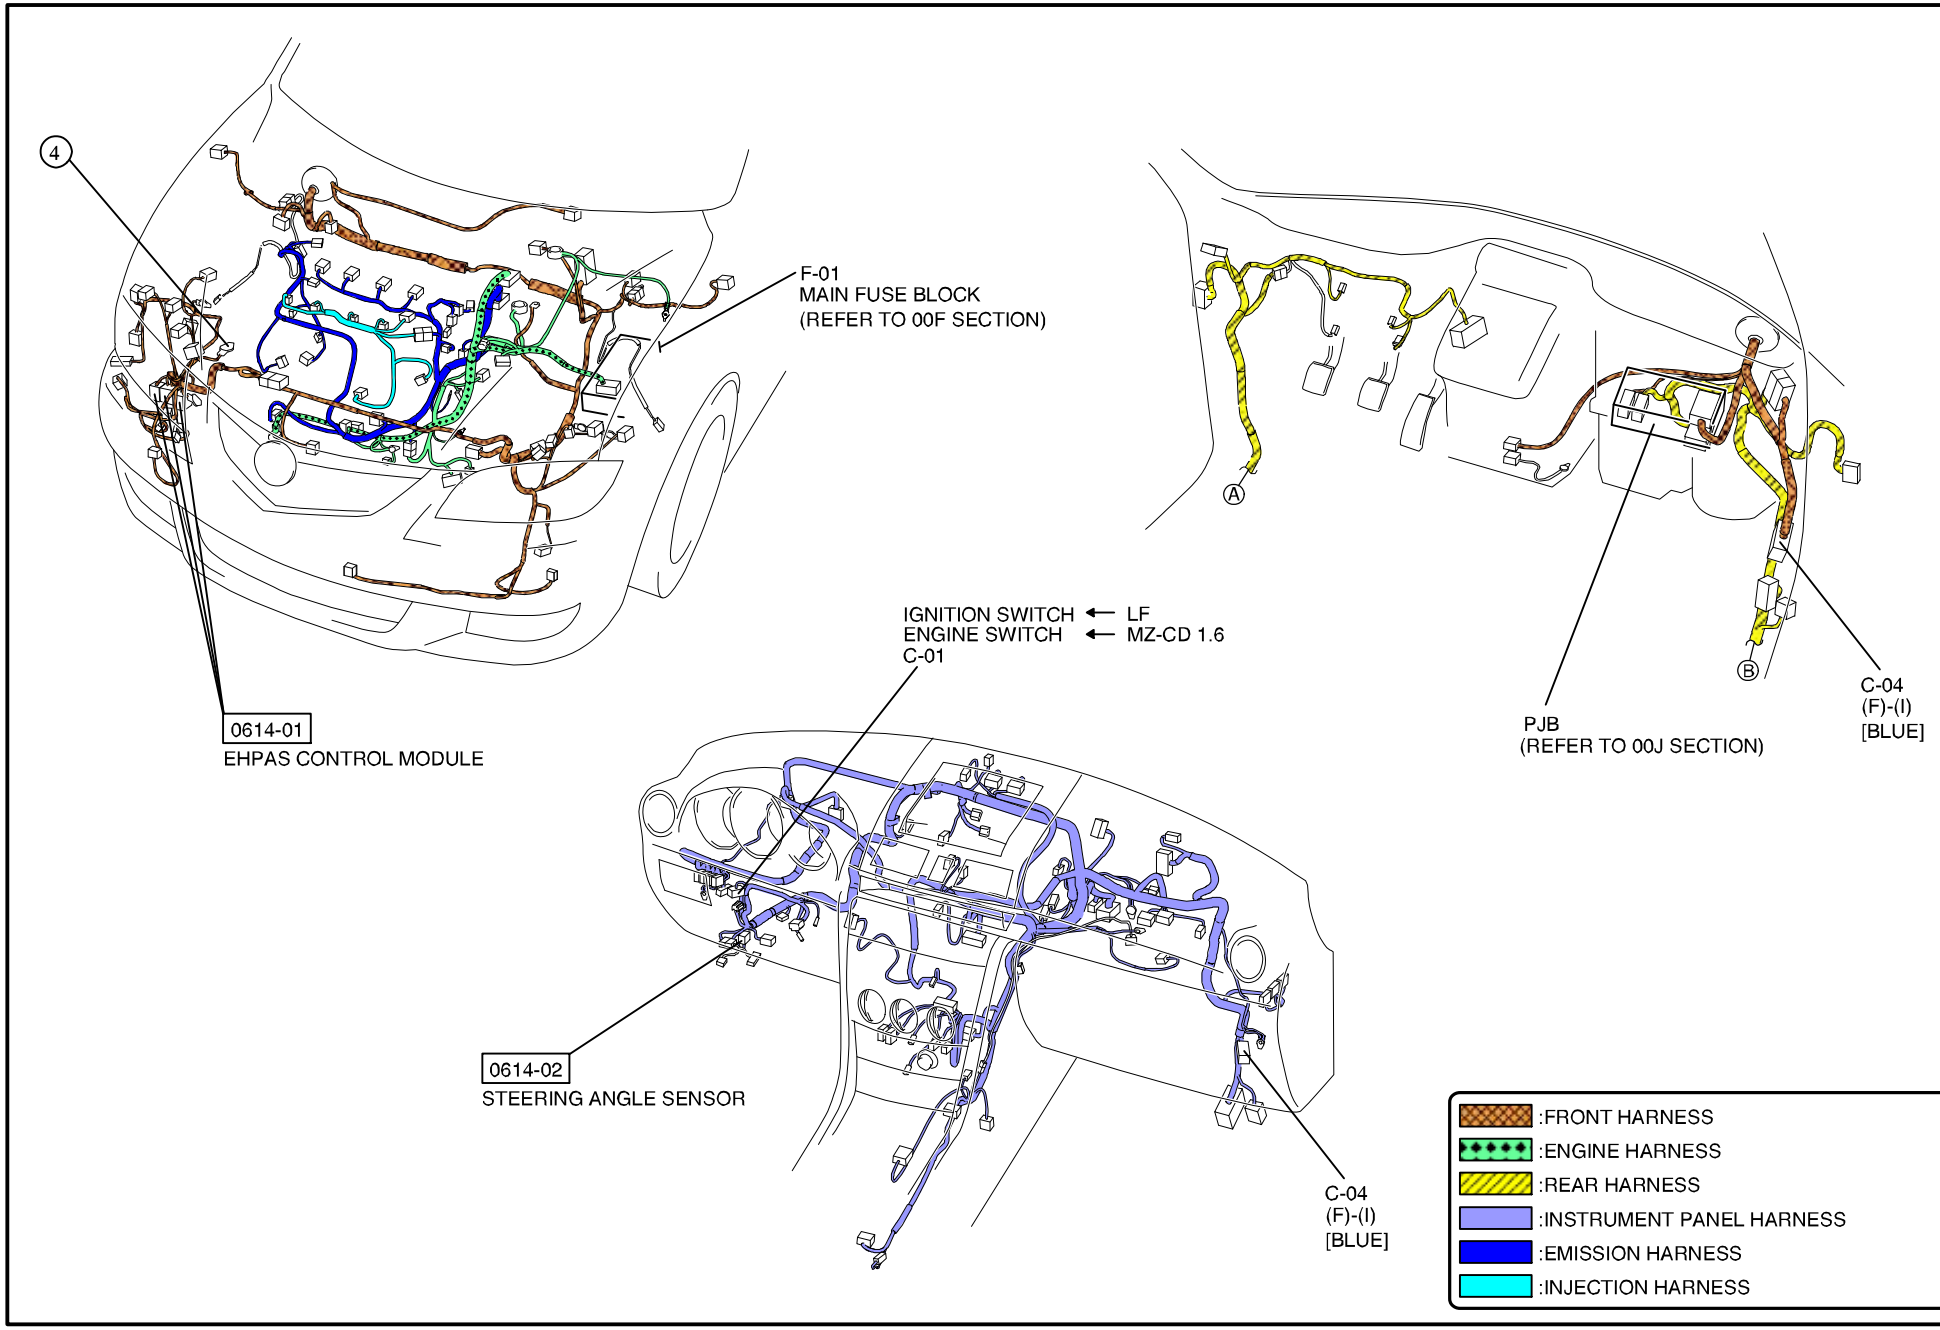

4
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
A
B
C-04
(F)-(I)
[BLUE]
PJB
(REFER TO 00J SECTION)
0614-01
EHPAS CONTROL MODULE
IGNITION SWITCH ← LF
ENGINE SWITCH ← MZ-CD 1.6
C-01
0614-02
STEERING ANGLE SENSOR
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

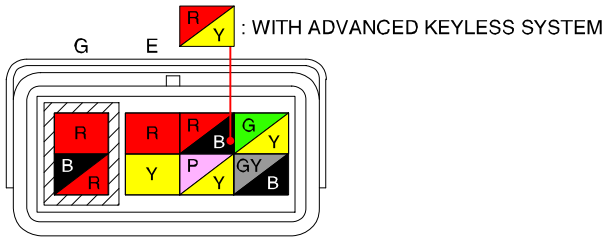


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

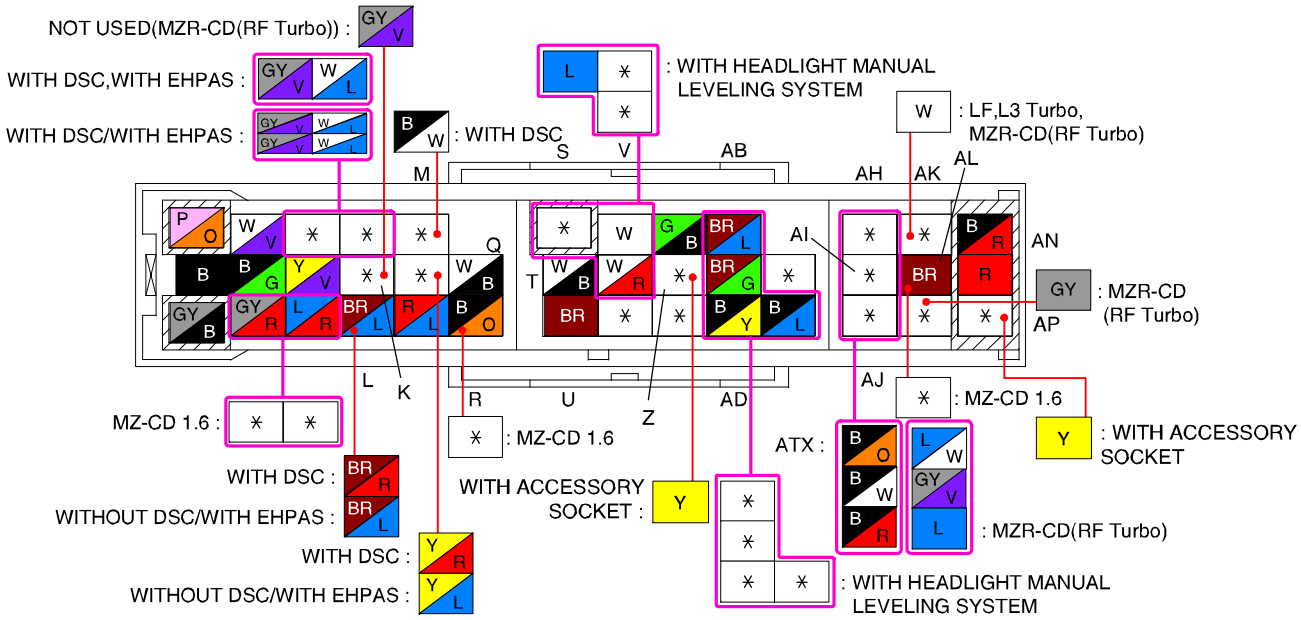


INSTRUMENT PANEL HARNESS

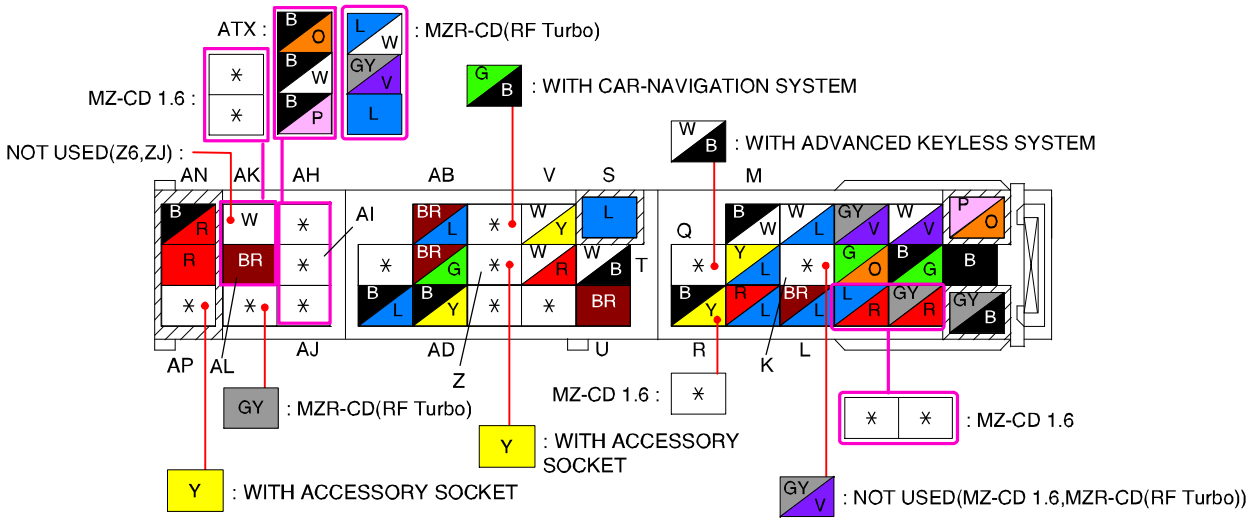


FULL-AUTO AIR CONDITIONER SYSTEM

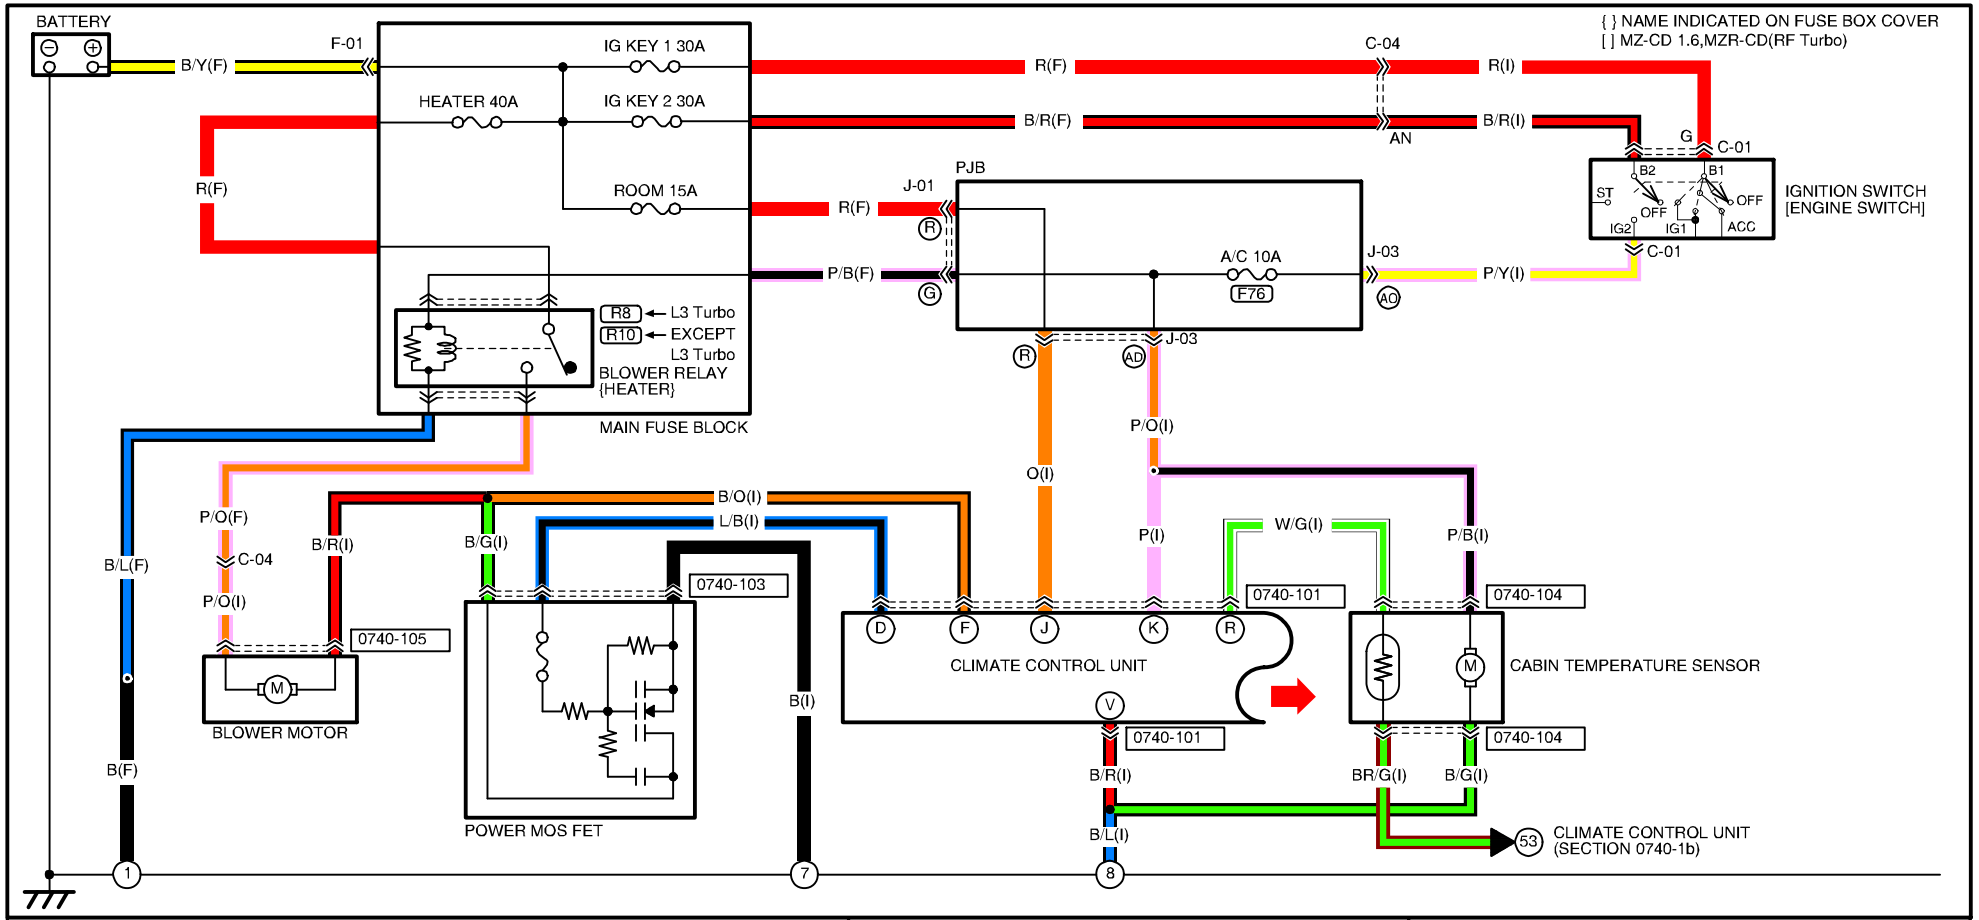


0740-101
CLIMATE CONTROL UNIT

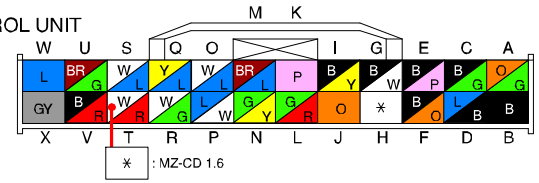

0740-103
POWER MOS FET




0740-104
CABIN TEMPERATURE SENSOR




0740-105
BLOWER MOTOR

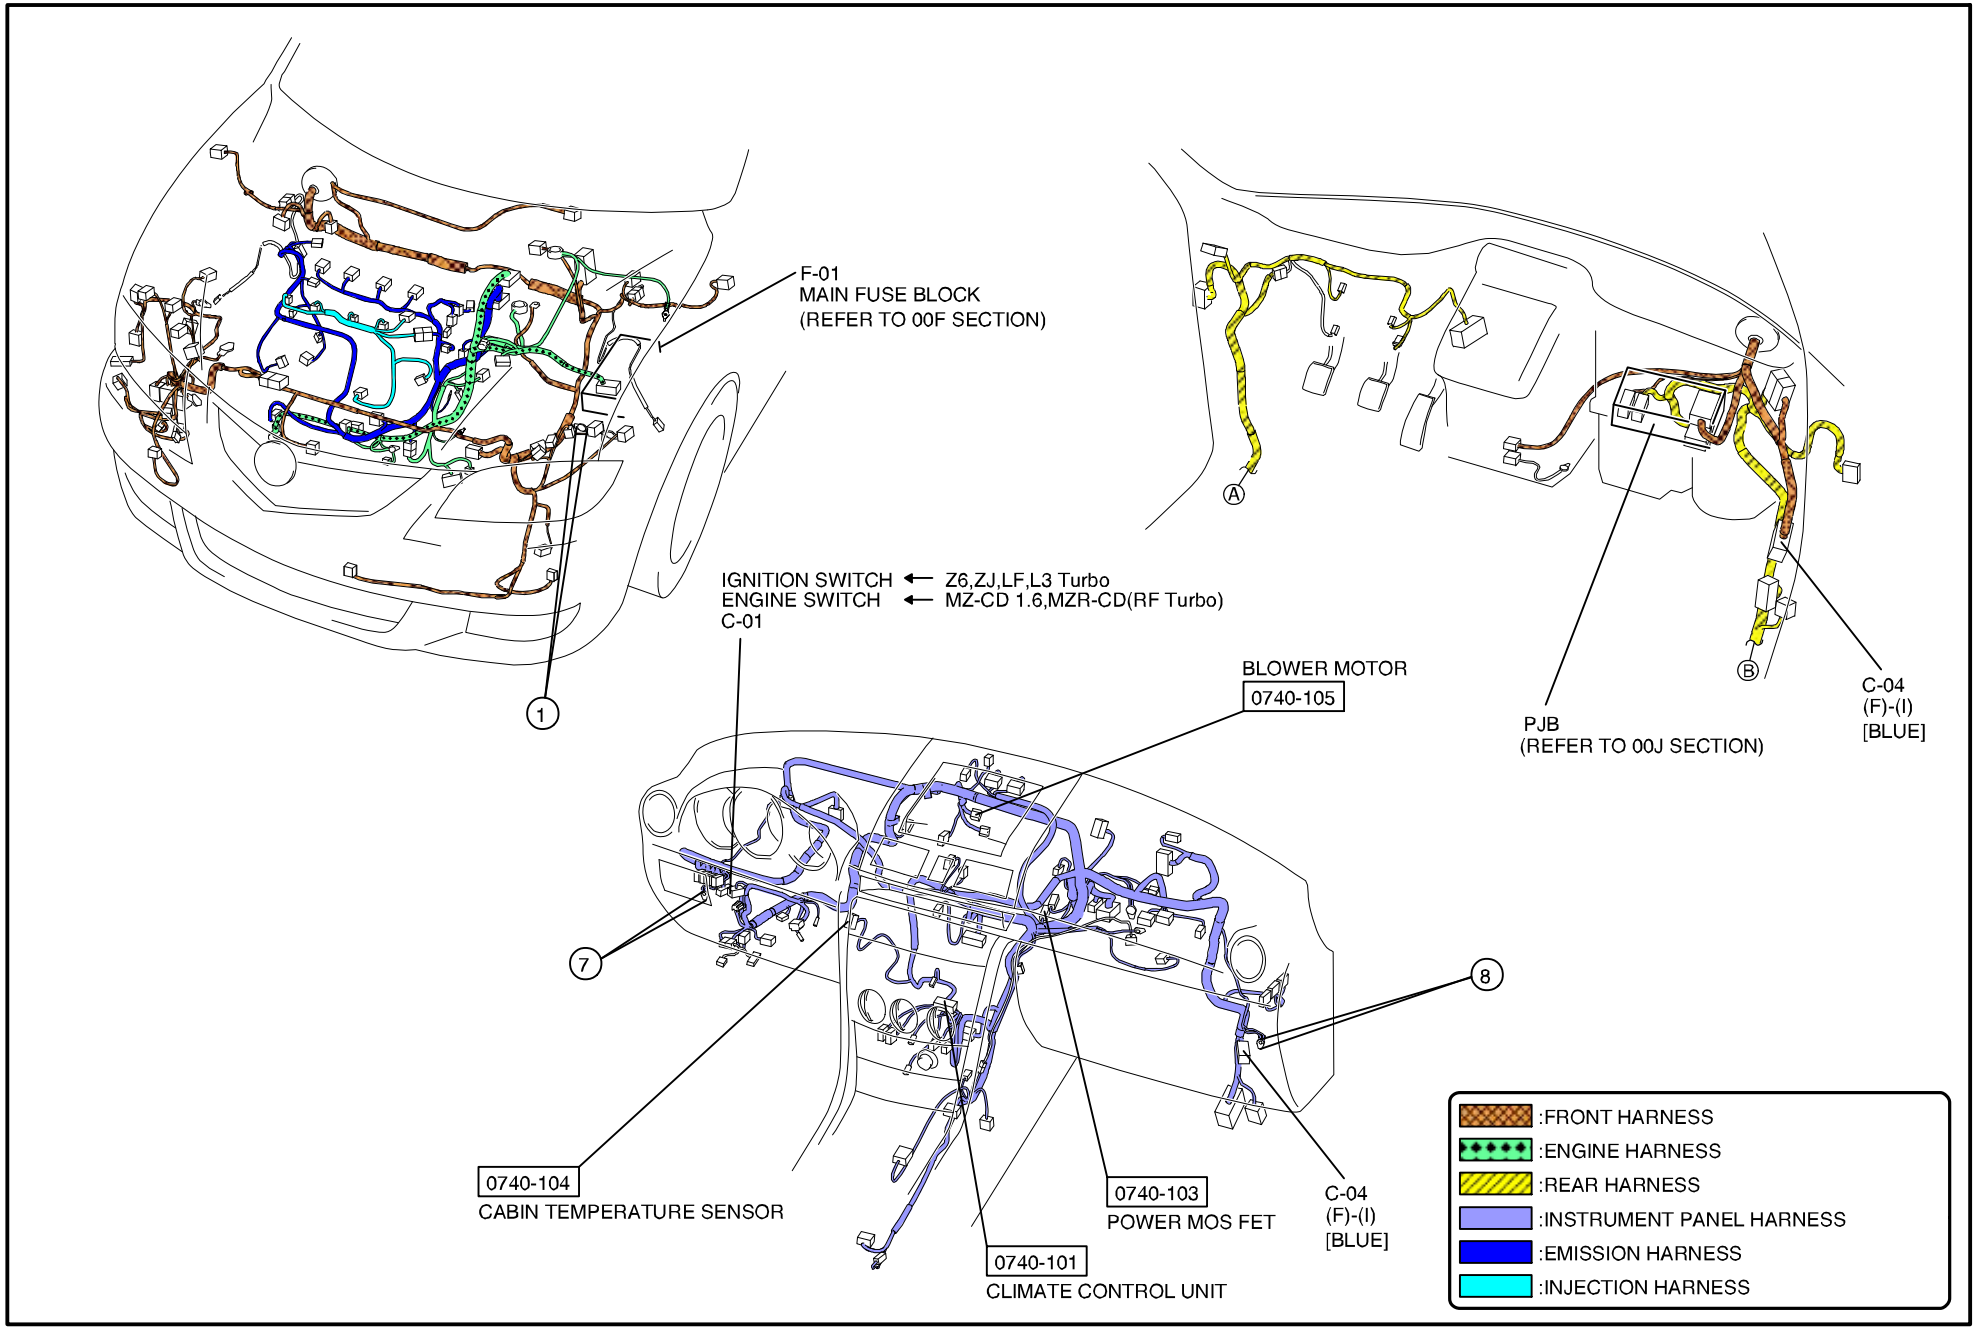



F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
1
A
B
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-01
BLOWER MOTOR
0740-105
7
8
0740-104
CABIN TEMPERATURE SENSOR
0740-103
POWER MOS FET
C-04
(F)-(I)
[BLUE]
0740-101
CLIMATE CONTROL UNIT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

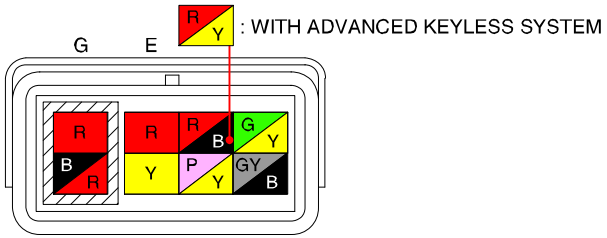



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

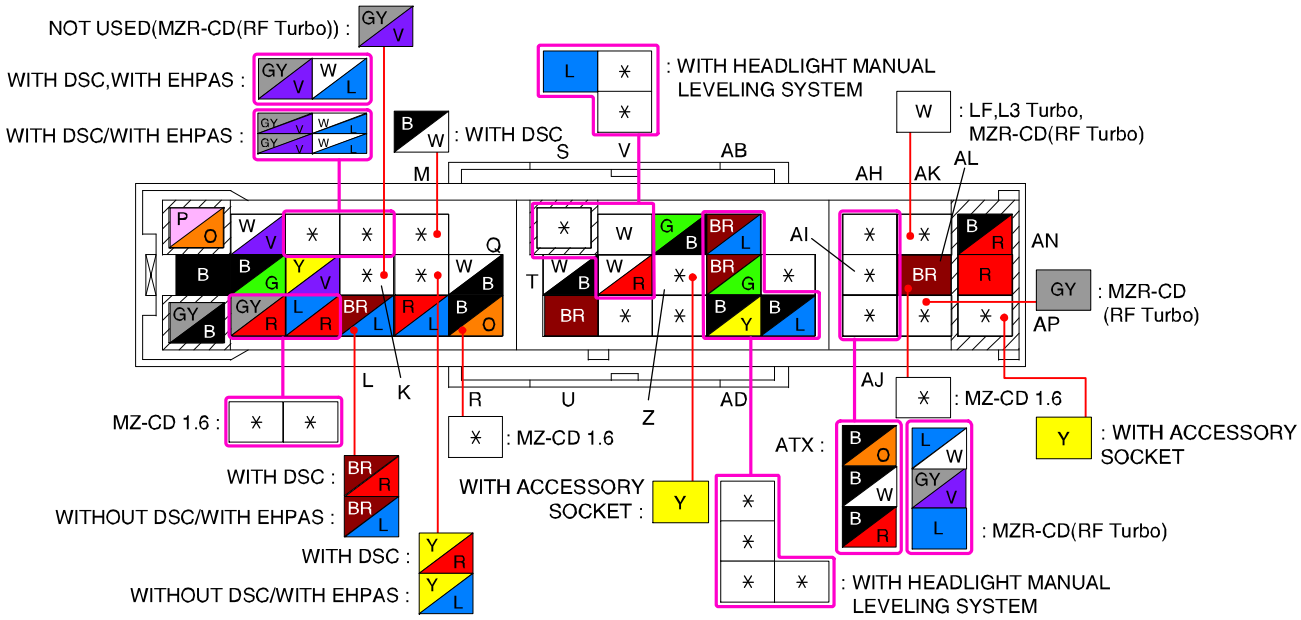


INSTRUMENT PANEL HARNESS

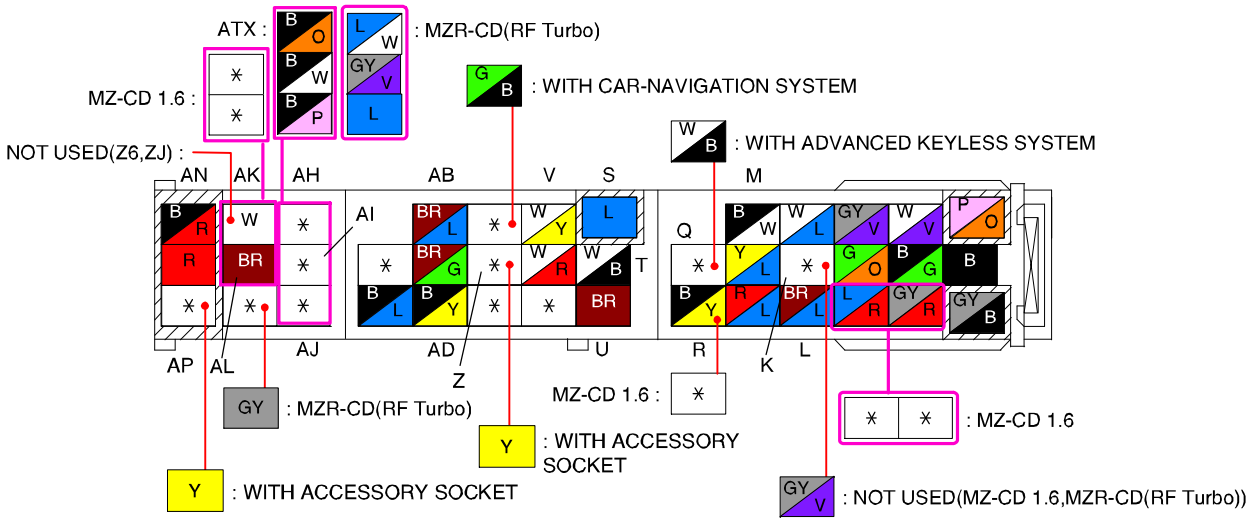


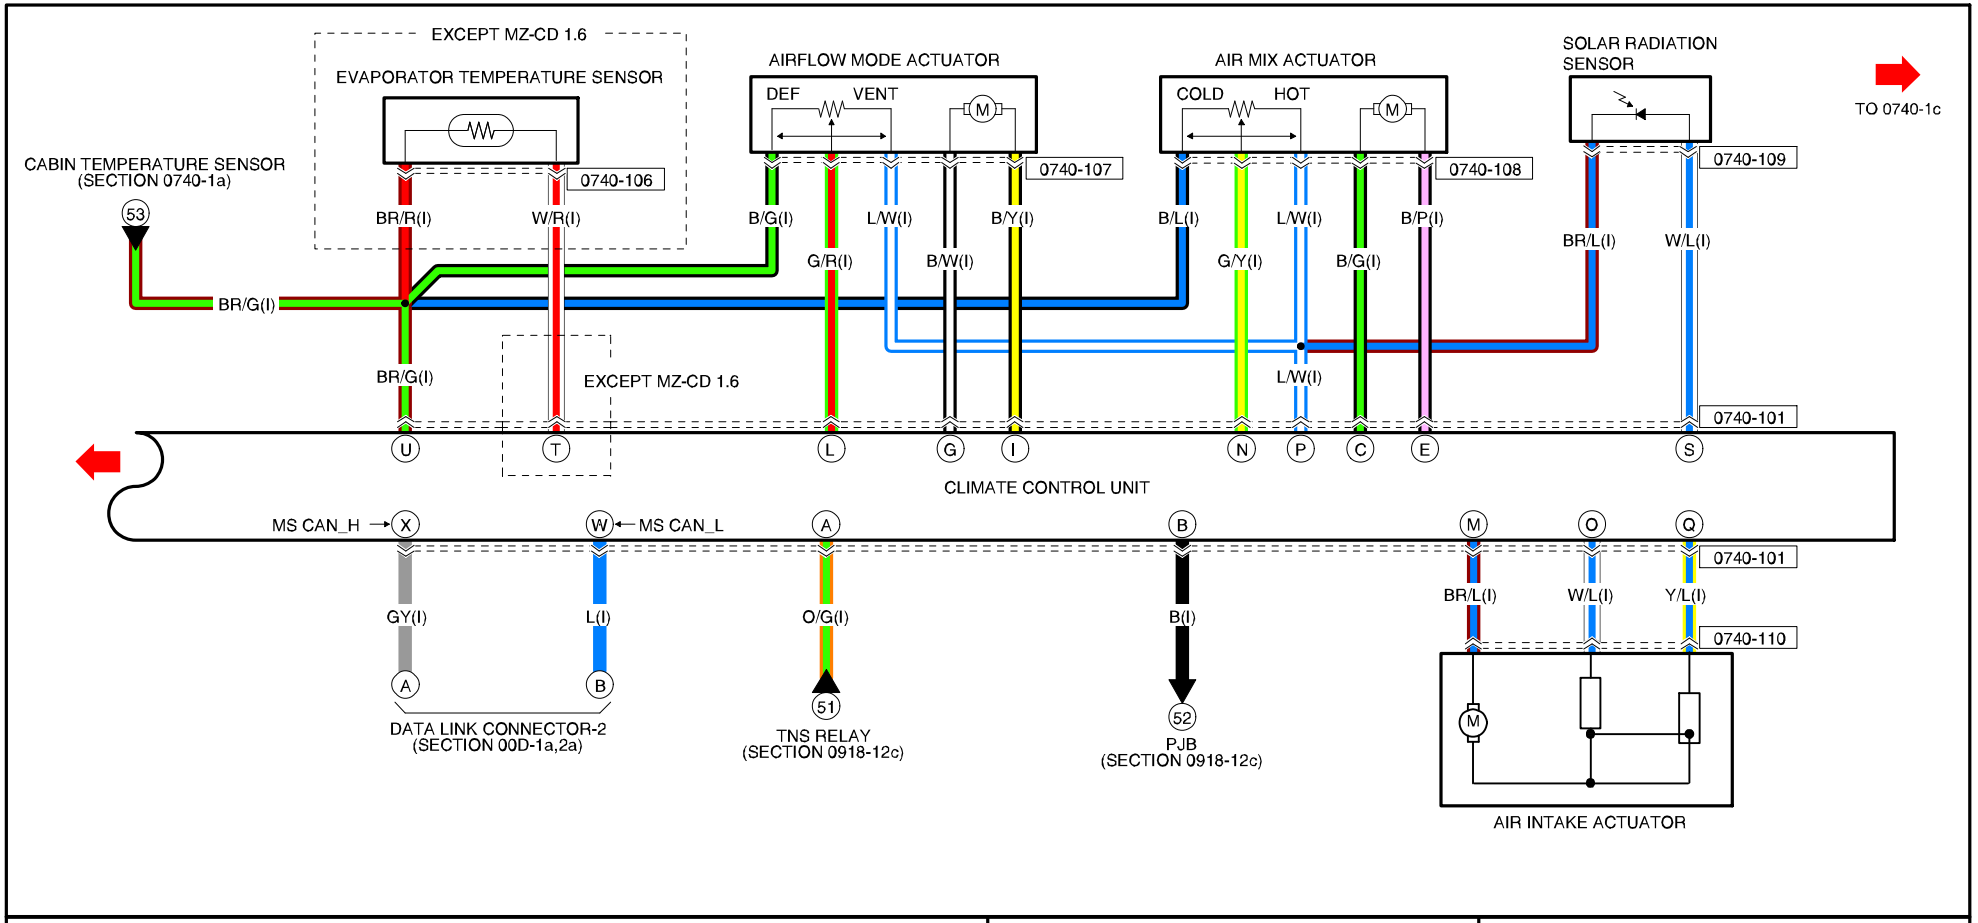


0740-101
CLIMATE CONTROL UNIT

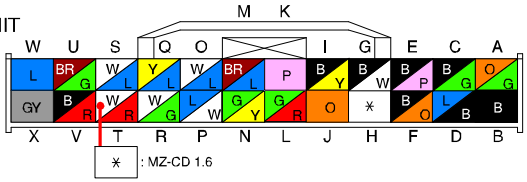


0740-106
EVAPORATOR TEMPERATURE SENSOR




0740-107
AIRFLOW MODE ACTUATOR




0740-108
AIR MIX ACTUATOR





0740-109
SOLAR RADIATION SENSOR




0740-110
AIR INTAKE ACTUATOR



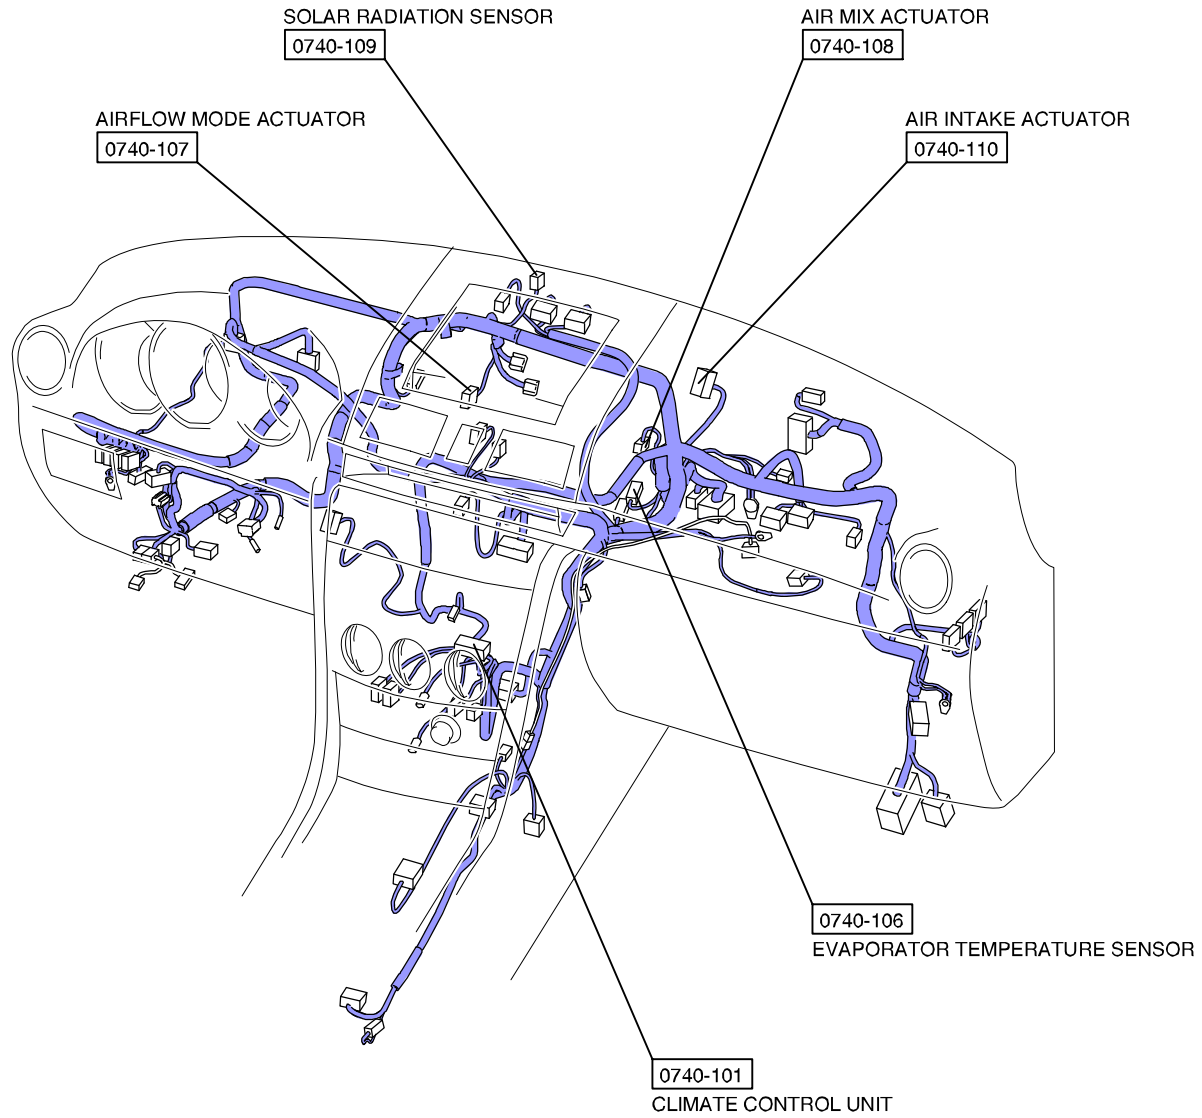
SOLAR RADIATION SENSOR
0740-109
AIR MIX ACTUATOR
0740-108
AIRFLOW MODE ACTUATOR
0740-107
AIR INTAKE ACTUATOR
0740-110
0740-106
EVAPORATOR TEMPERATURE SENSOR
0740-101
CLIMATE CONTROL UNIT
:INSTRUMENT PANEL HARNESS

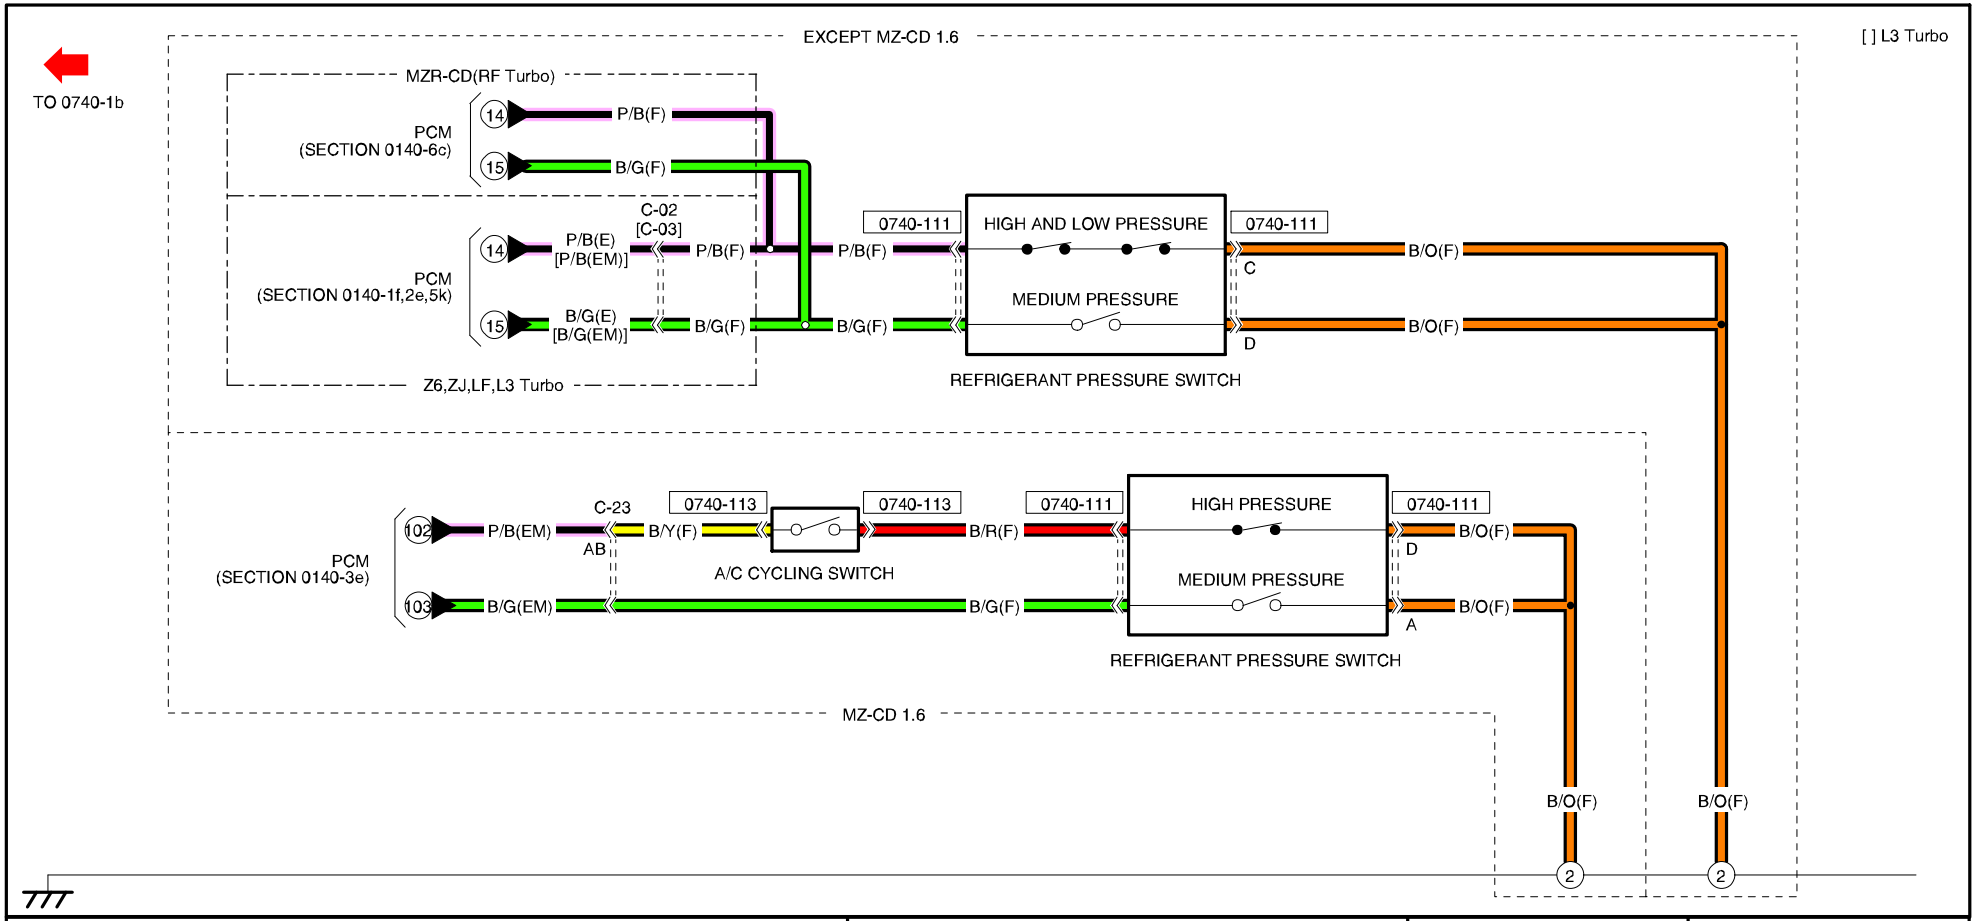

0740-111
REFRIGERANT PRESSURE SWITCH

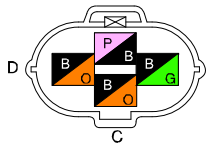



(EXCEPT MZ-CD 1.6)




(MZ-CD 1.6)

0740-113
A/C CYCLING SWITCH

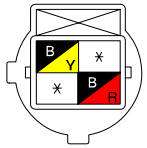

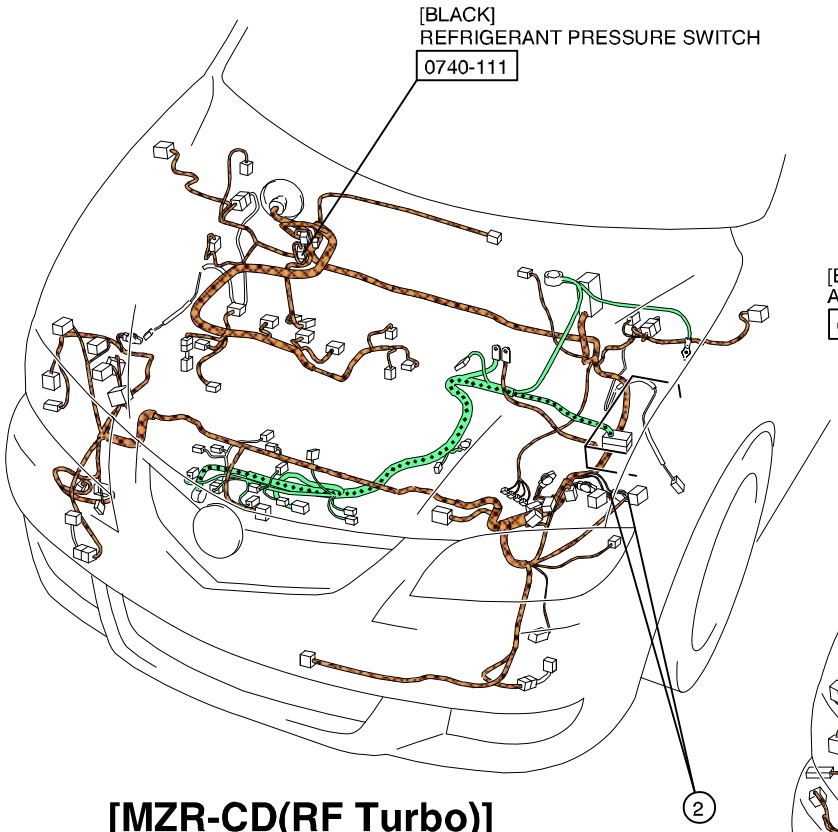


[MZR-CD(RF Turbo)]

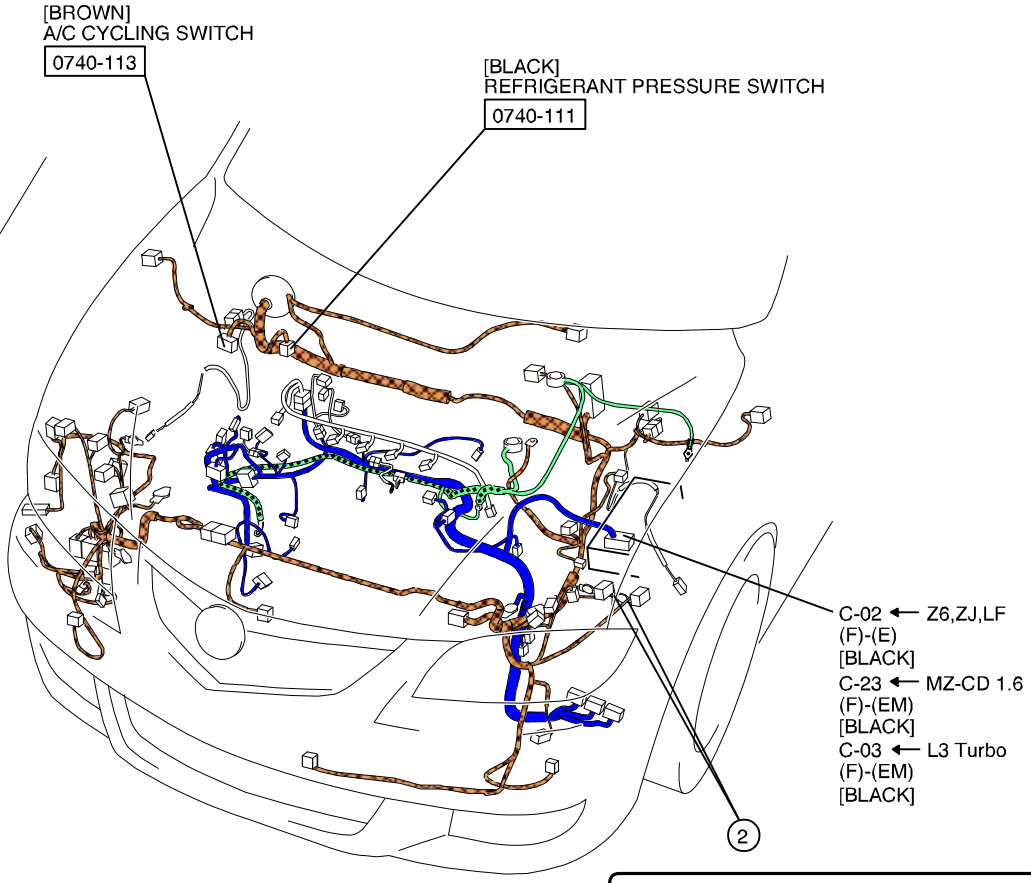


[EXCEPT MZR-CD(RF Turbo)]

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

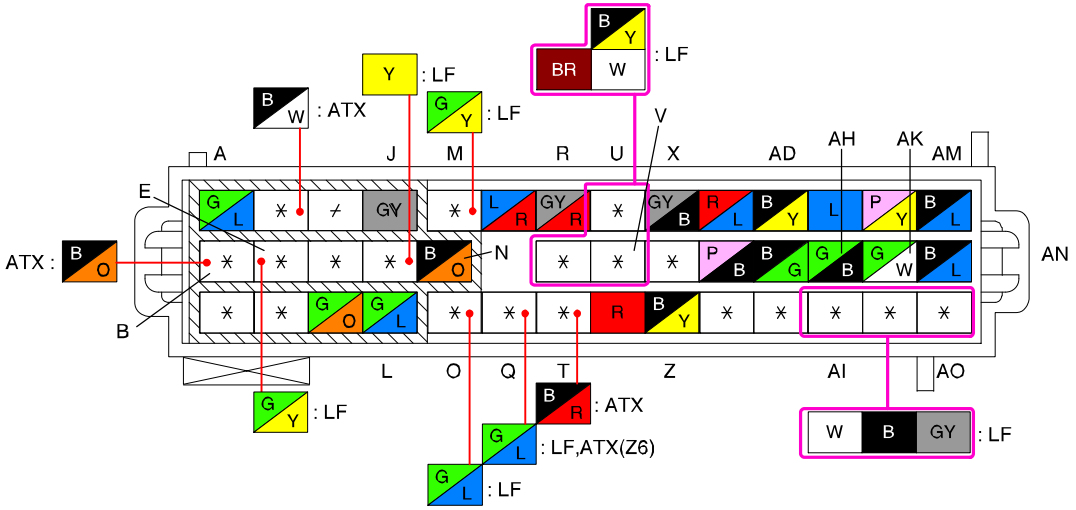


ENGINE HARNESS

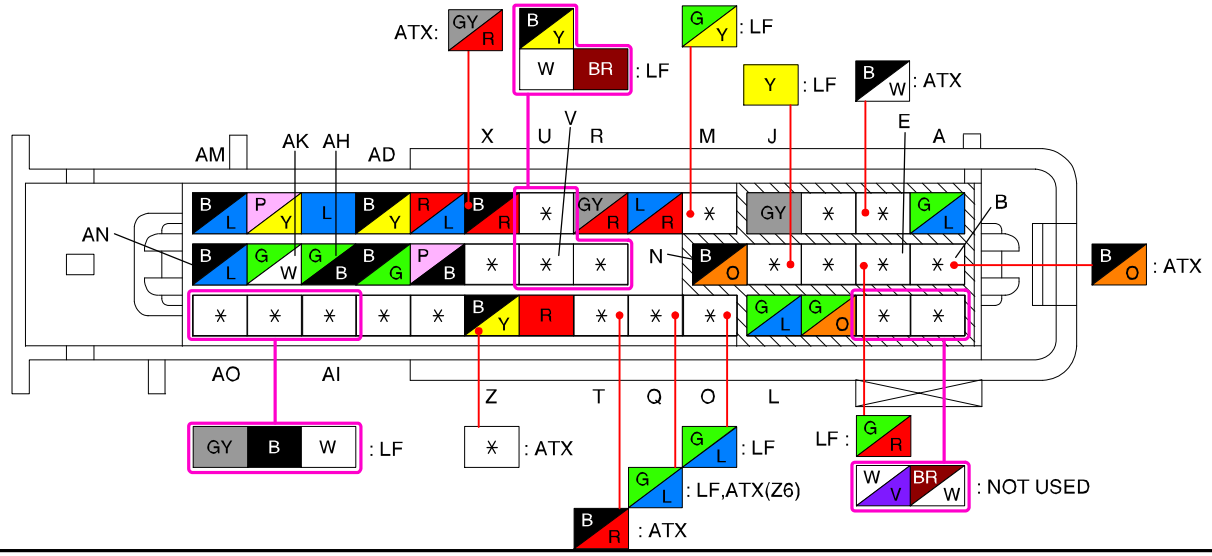


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

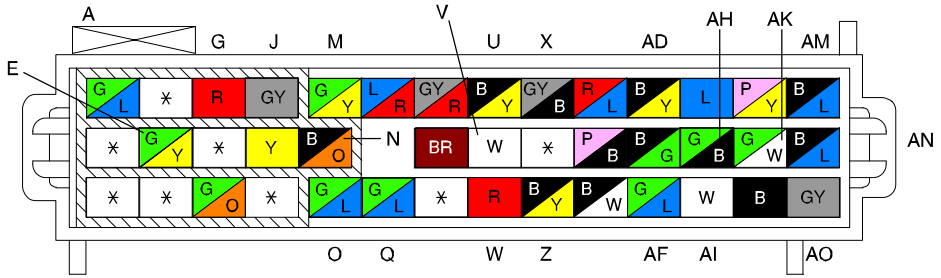


EMISSION HARNESS

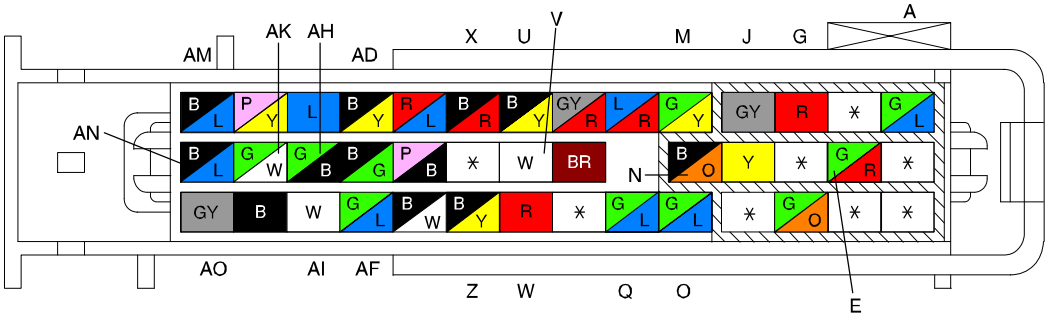


C-23
FRONT HARNESS-EMISSION HARNESS


FRONT HARNESS

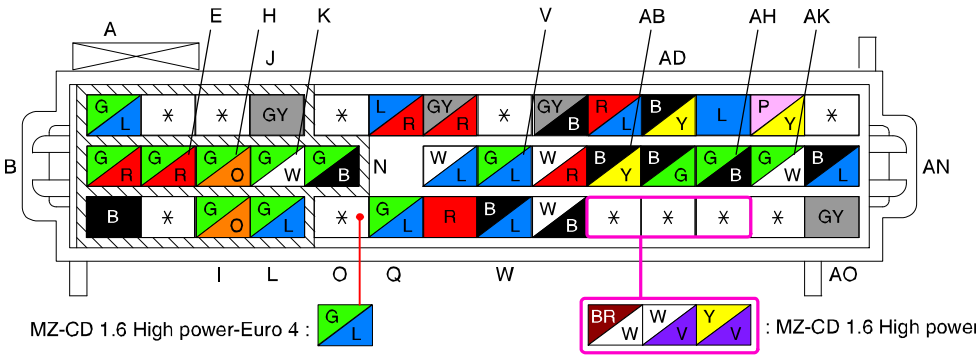


EMISSION HARNESS

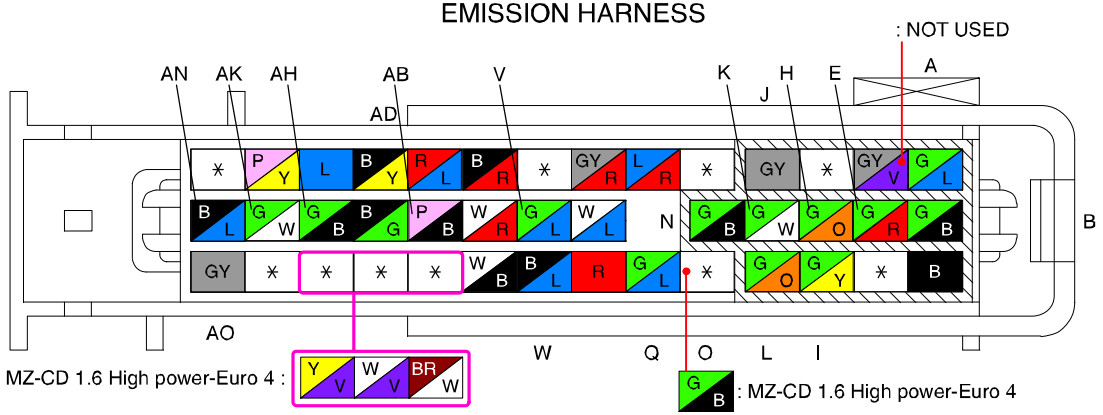


MANUAL AIR CONDITIONER SYSTEM

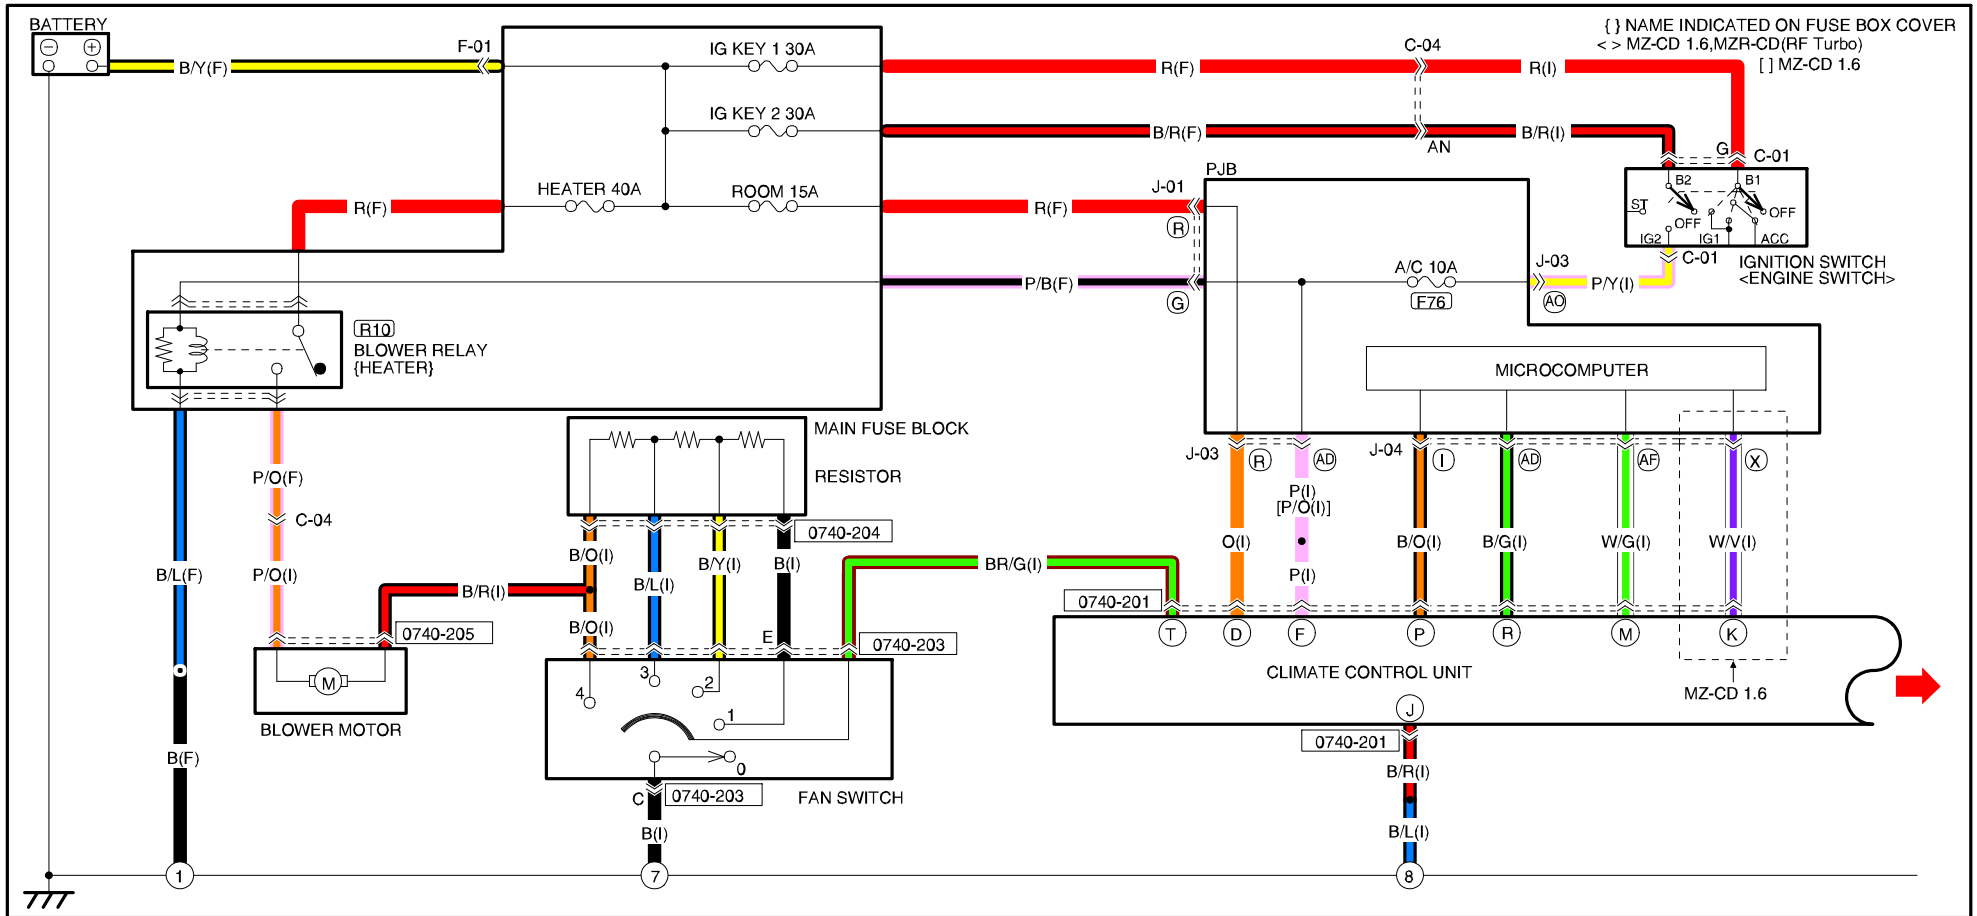


0740-201 CLIMATE CONTROL UNIT

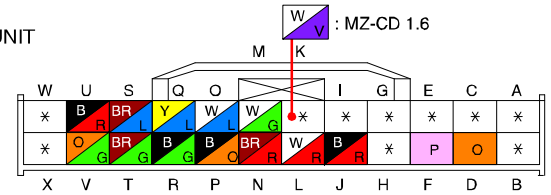

0740-203 FAN SWITCH

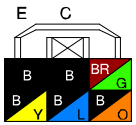


0740-204 RESISTOR




0740-205 BLOWER MOTOR

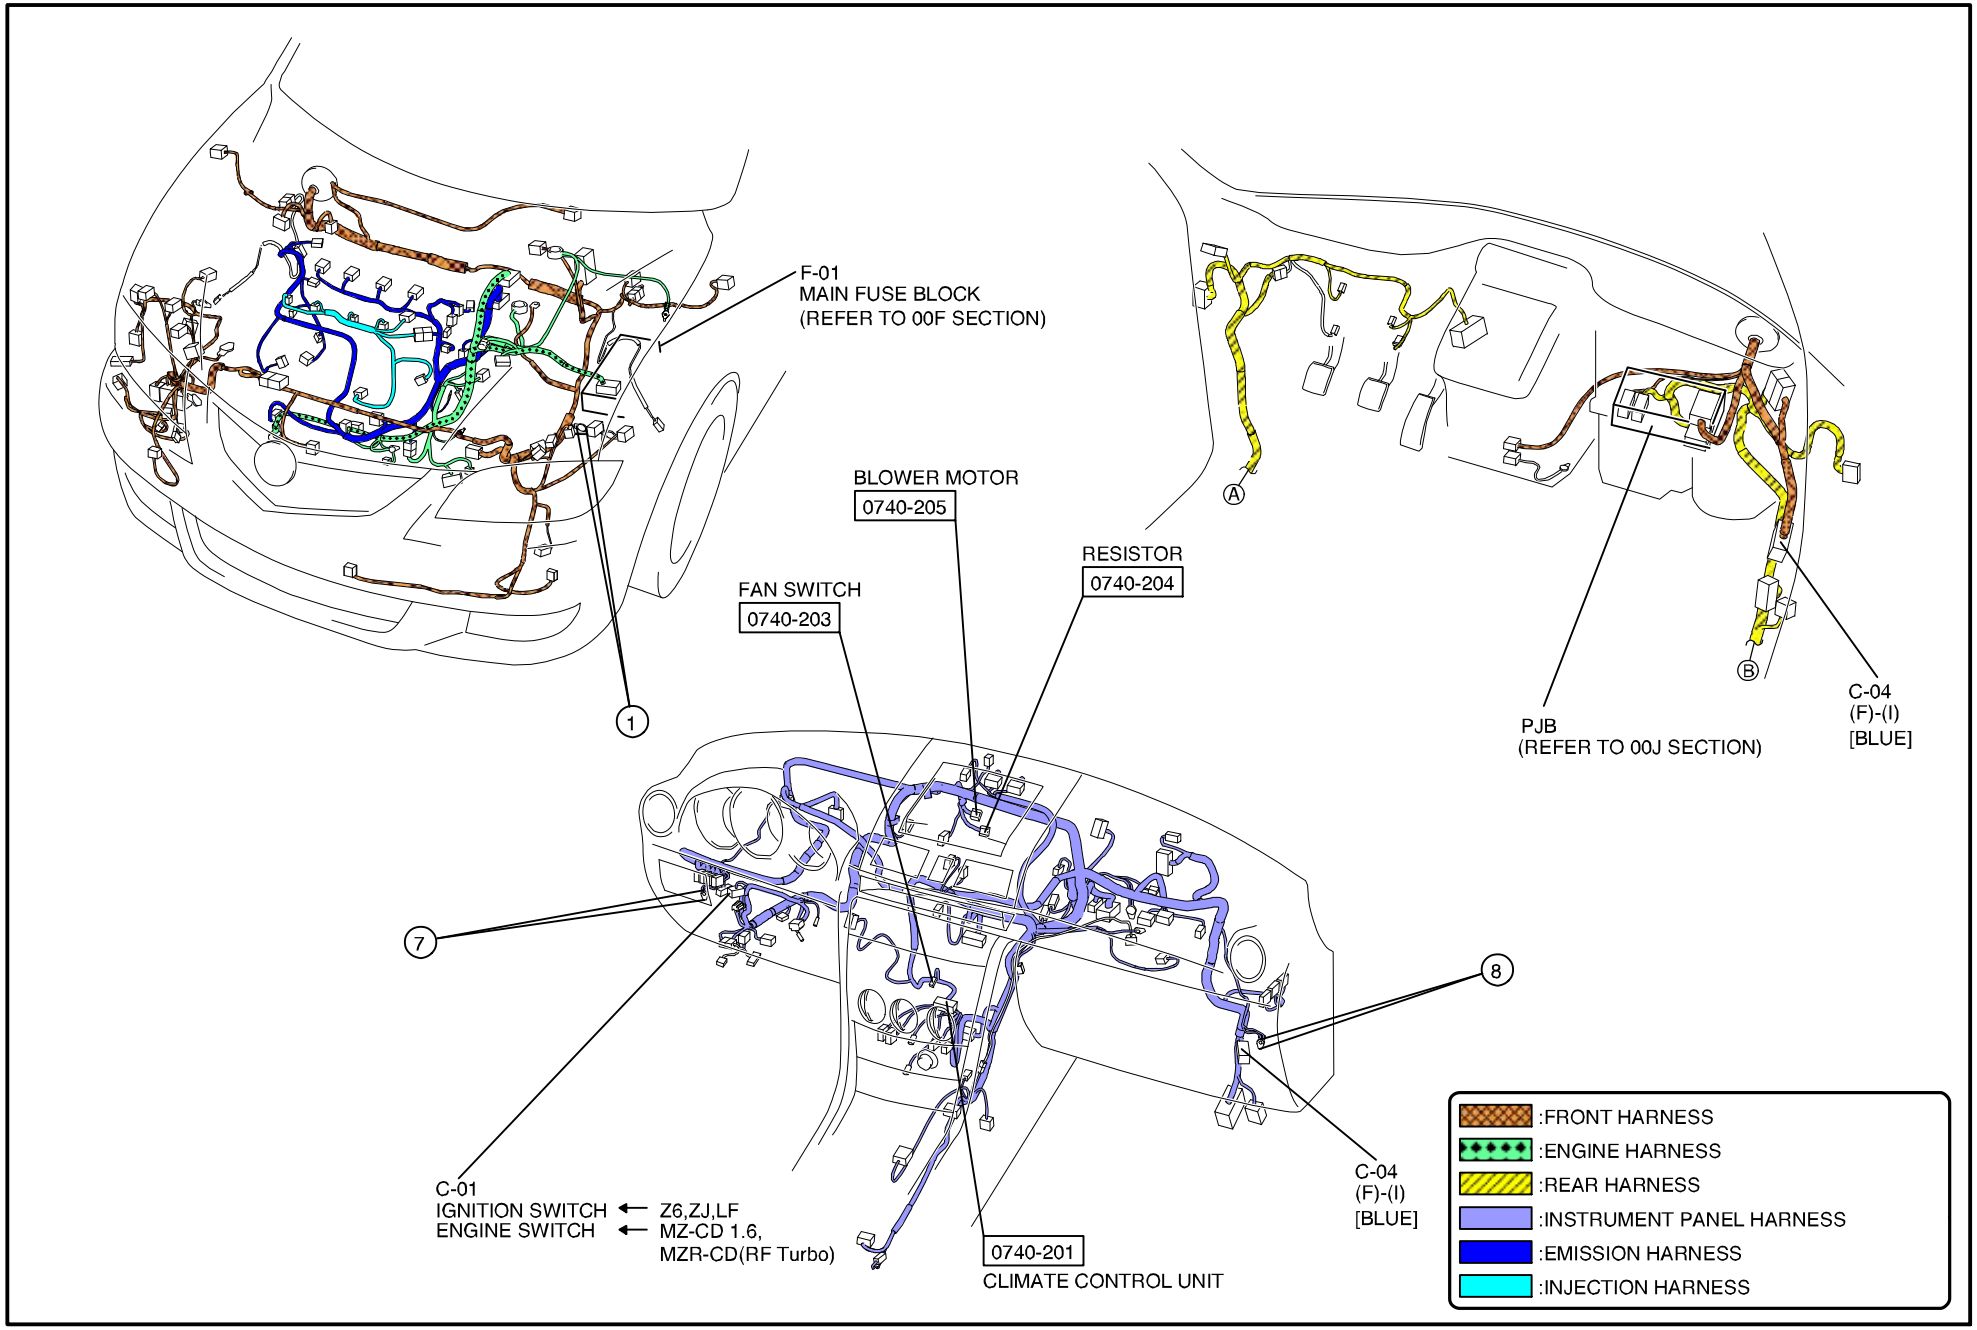



F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
1
BLOWER MOTOR
0740-205
FAN SWITCH
0740-203
RESISTOR
0740-204
A
B
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
7
8
C-01
IGNITION SWITCH ← Z6,ZJ,LF
ENGINE SWITCH ← MZ-CD 1.6,
MZR-CD(RF Turbo)
0740-201
CLIMATE CONTROL UNIT
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

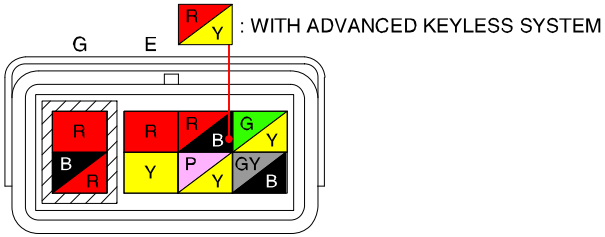



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

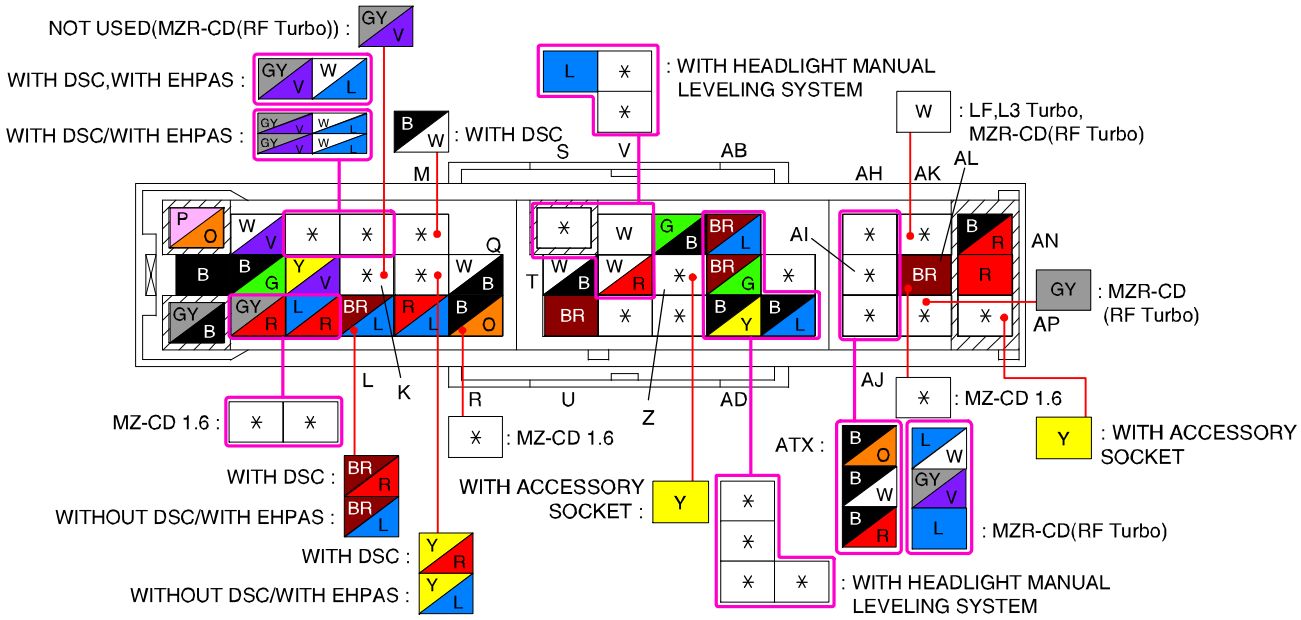


INSTRUMENT PANEL HARNESS

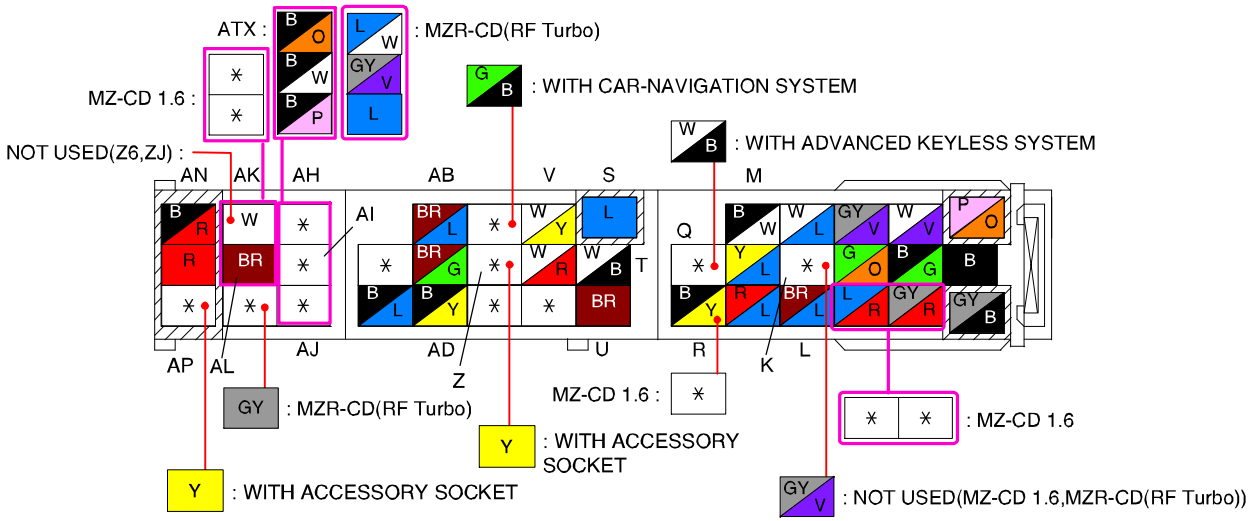


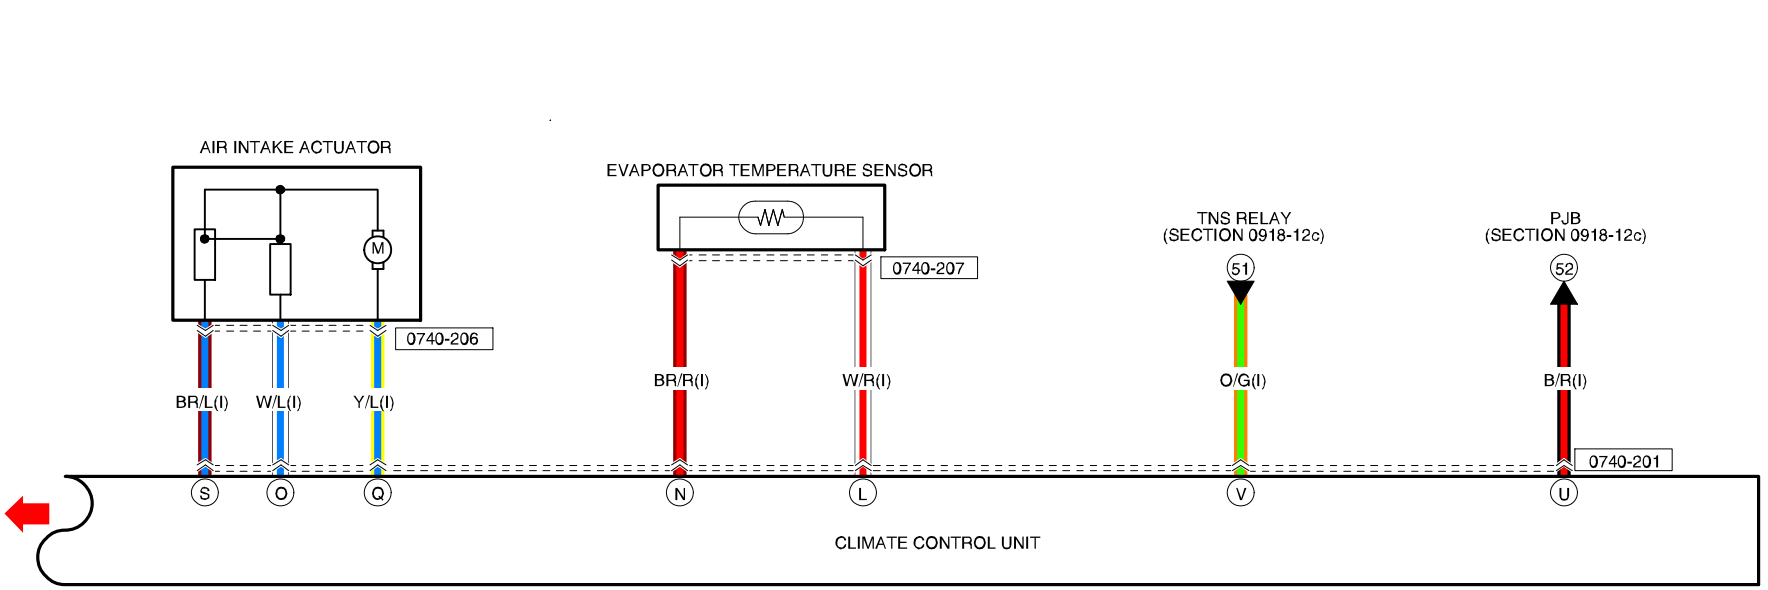


0740-201
CLIMATE CONTROL UNIT

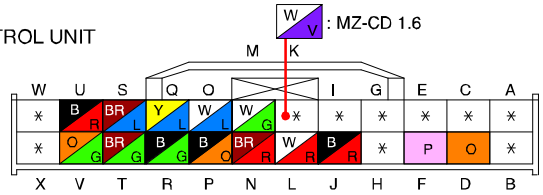



0740-206
AIR INTAKE ACTUATOR




0740-207
EVAPORATOR TEMPERATURE SENSOR



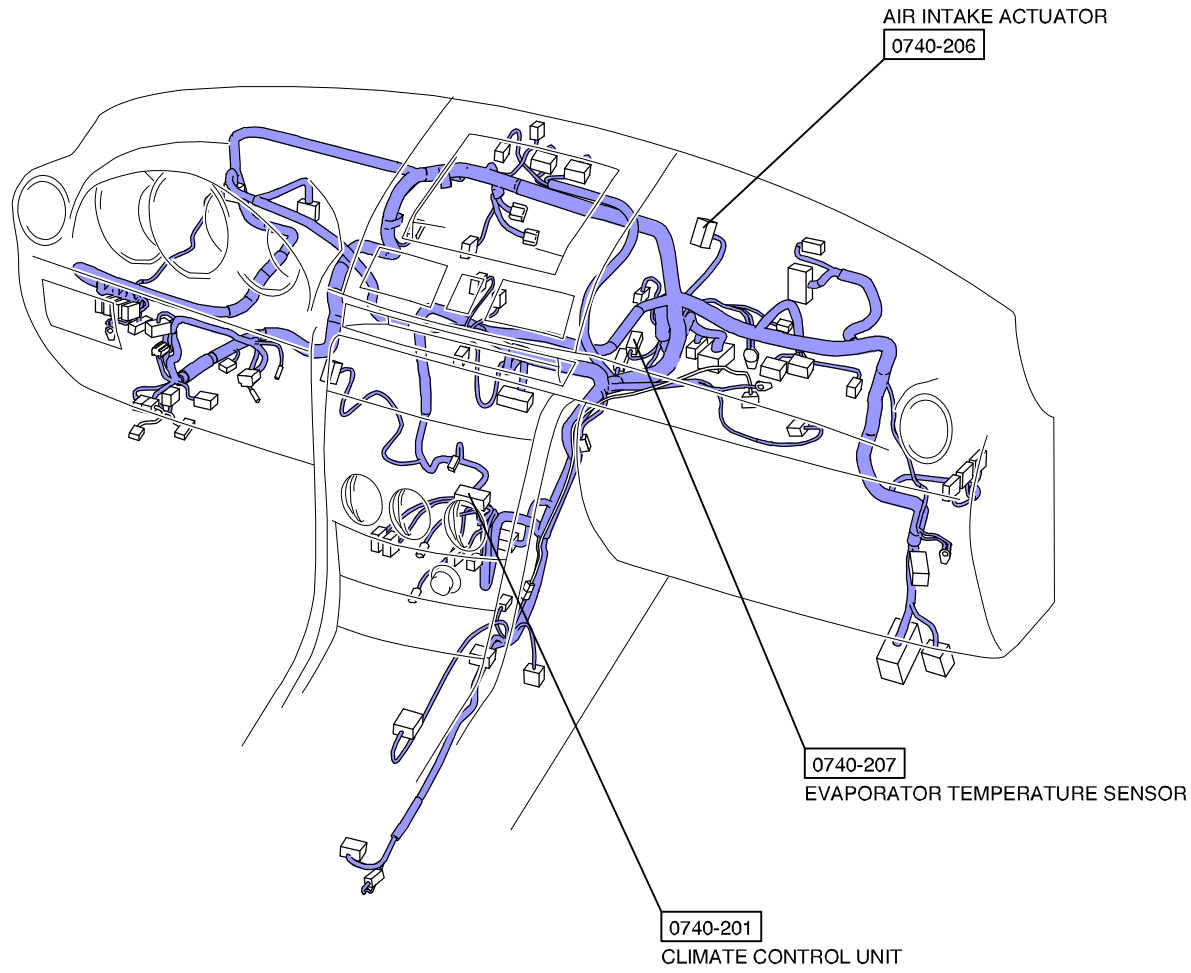
AIR INTAKE ACTUATOR
0740-206
0740-207
EVAPORATOR TEMPERATURE SENSOR
0740-201
CLIMATE CONTROL UNIT
:INSTRUMENT PANEL HARNESS

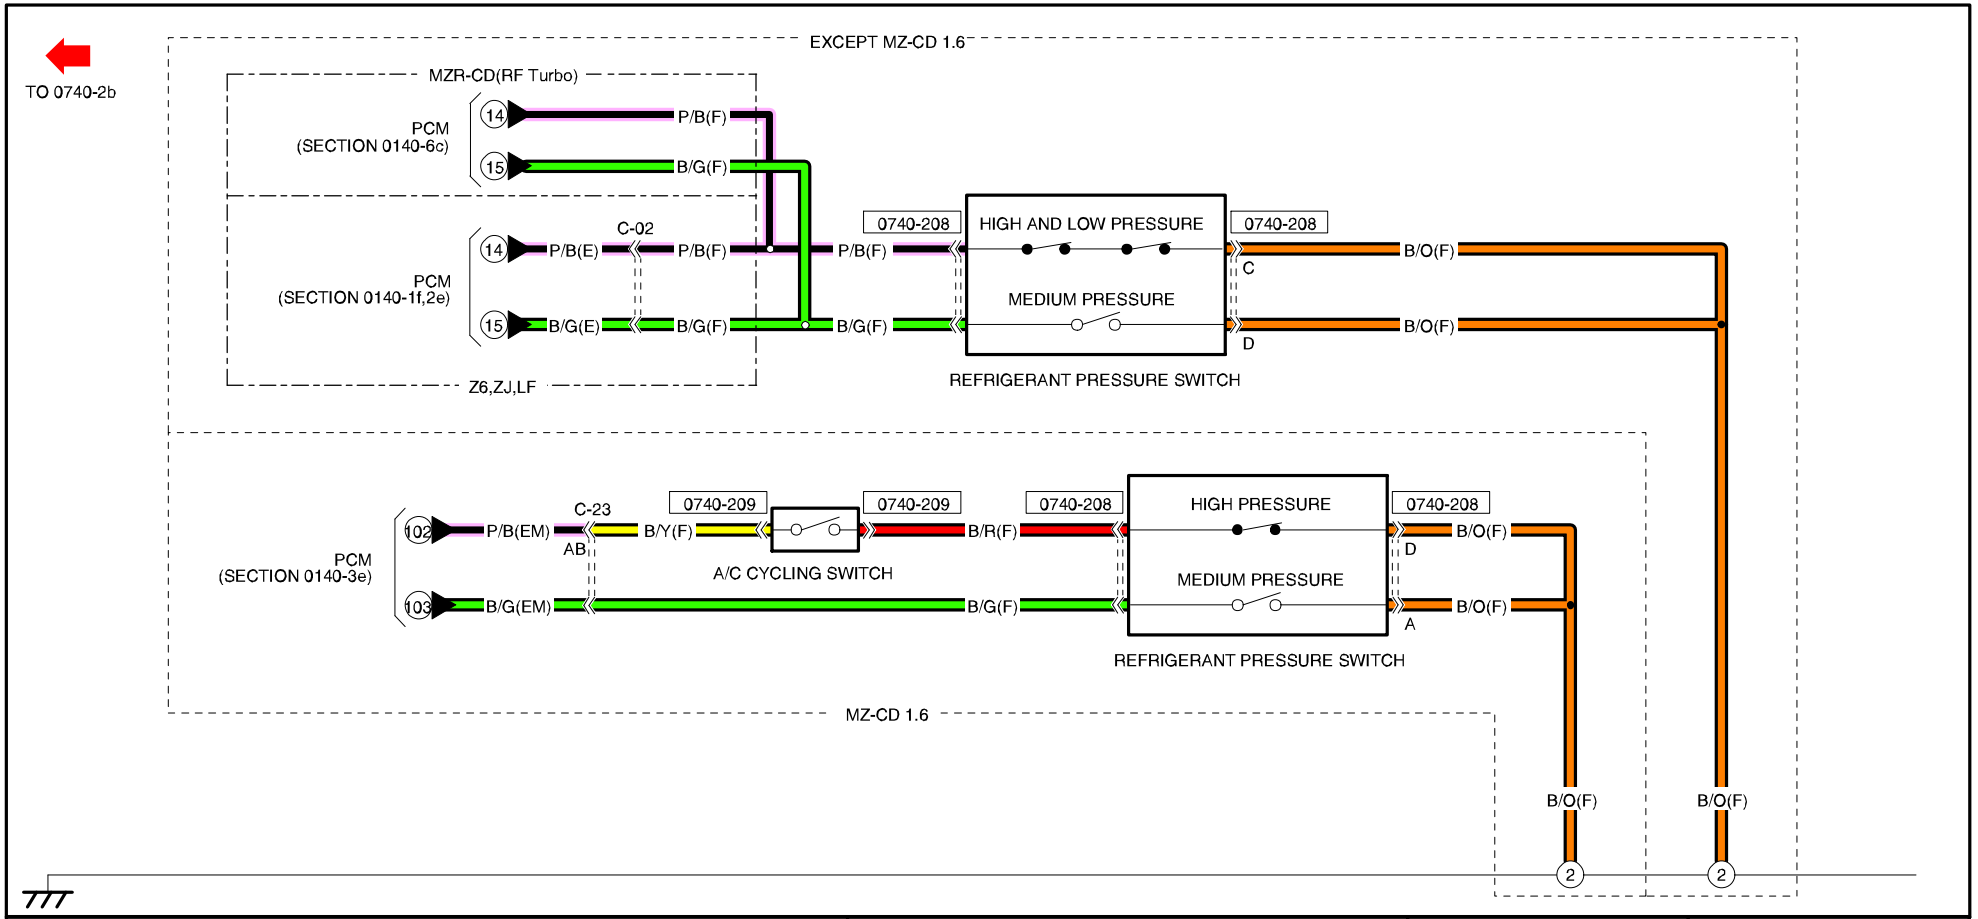

0740-208
REFRIGERANT PRESSURE SWITCH

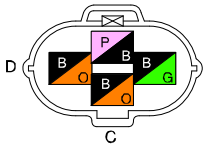



(EXCEPT MZ-CD 1.6)




(MZ-CD 1.6)

0740-209
A/C CYCLING SWITCH

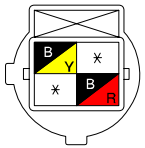

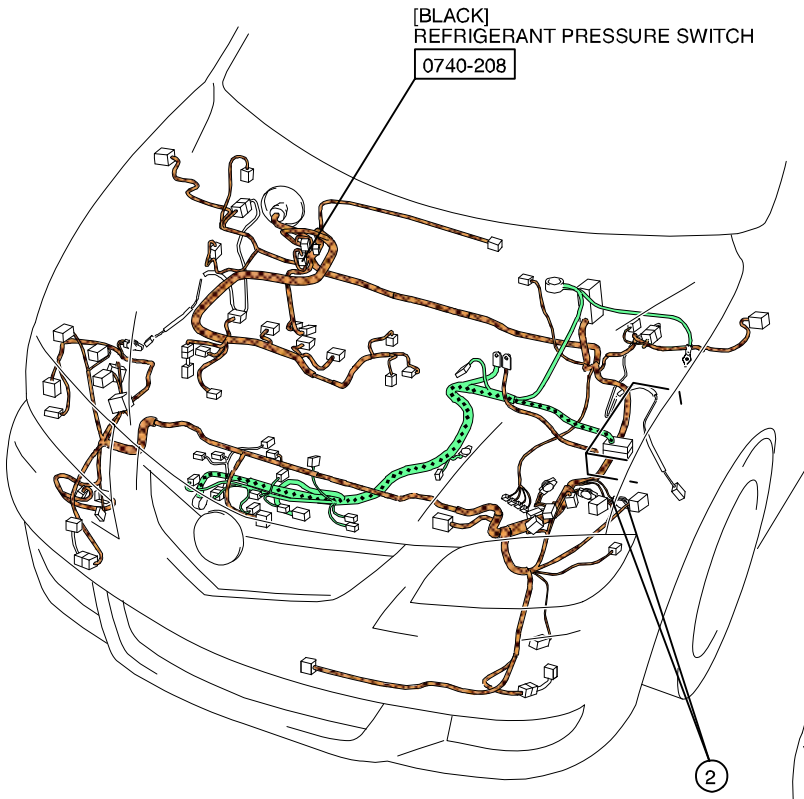


[MZR-CD(RF Turbo)]

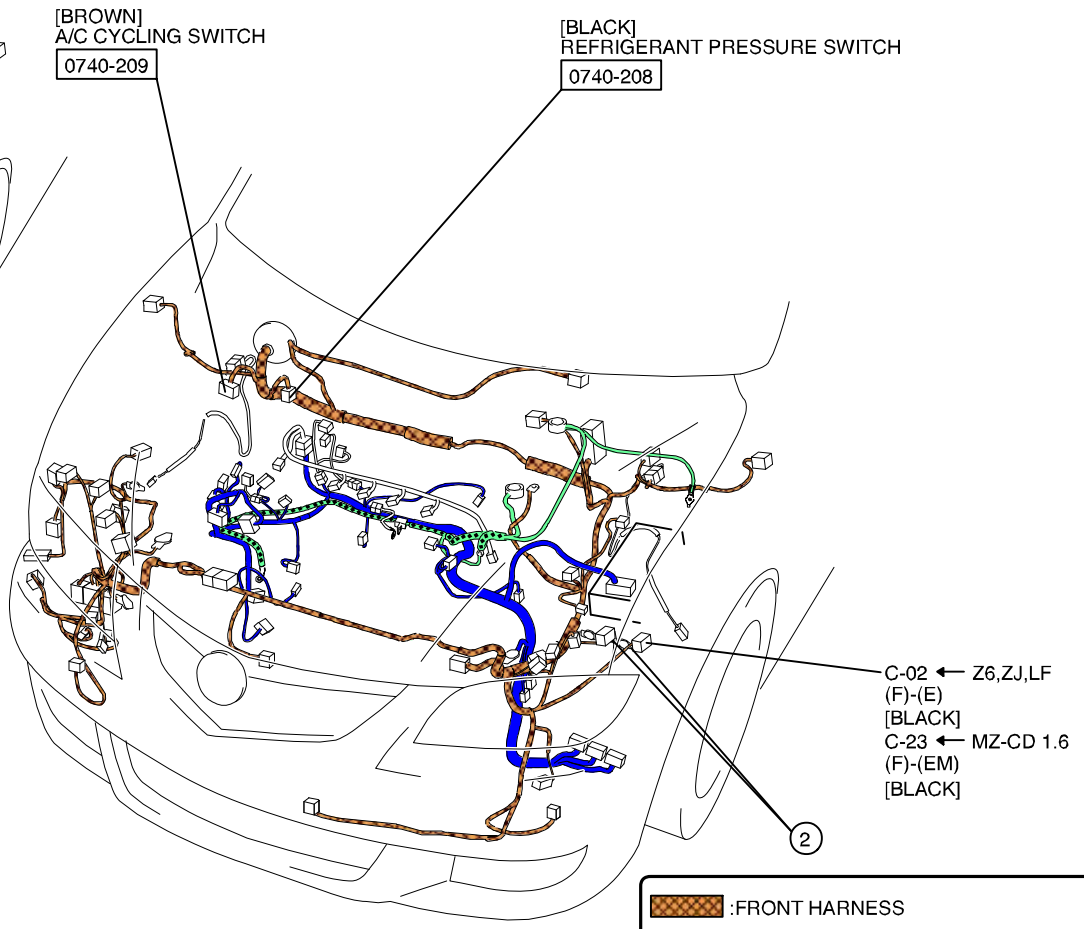


[EXCEPT MZR-CD(RF Turbo)]

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

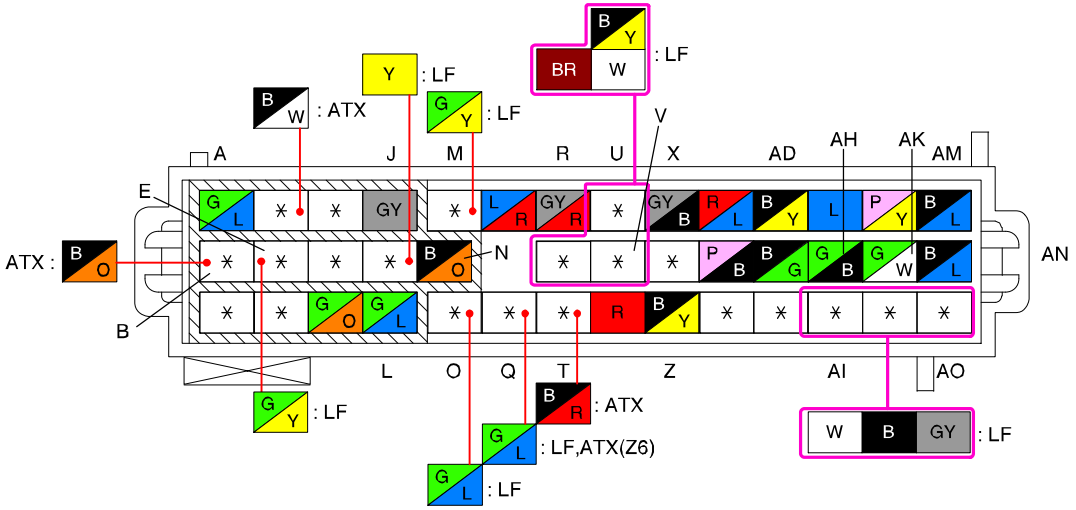


ENGINE HARNESS

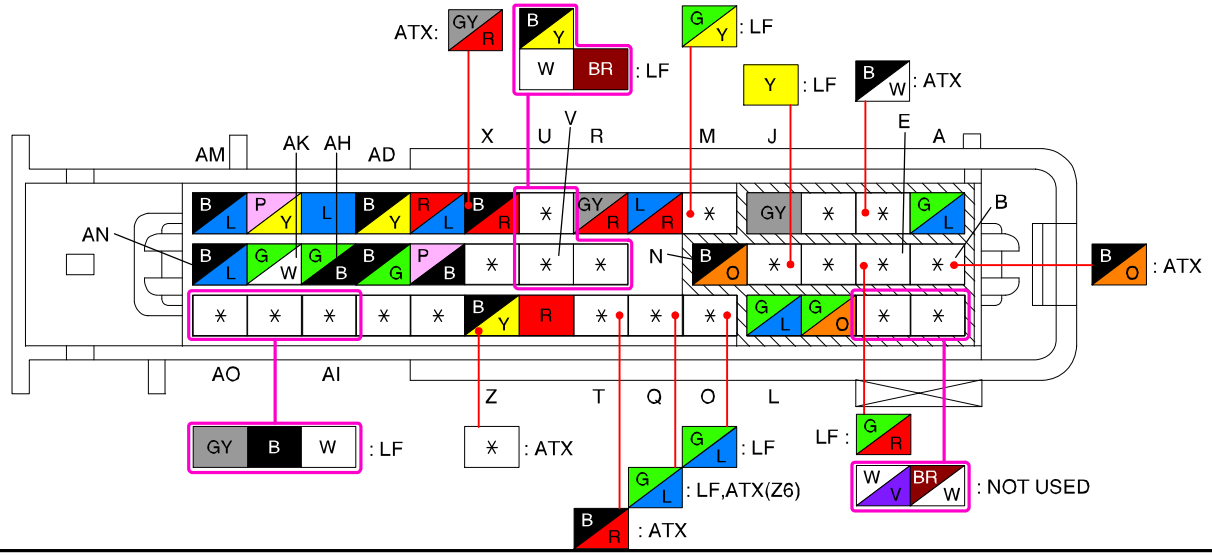


C-23
FRONT HARNESS-EMISSION HARNESS


FRONT HARNESS

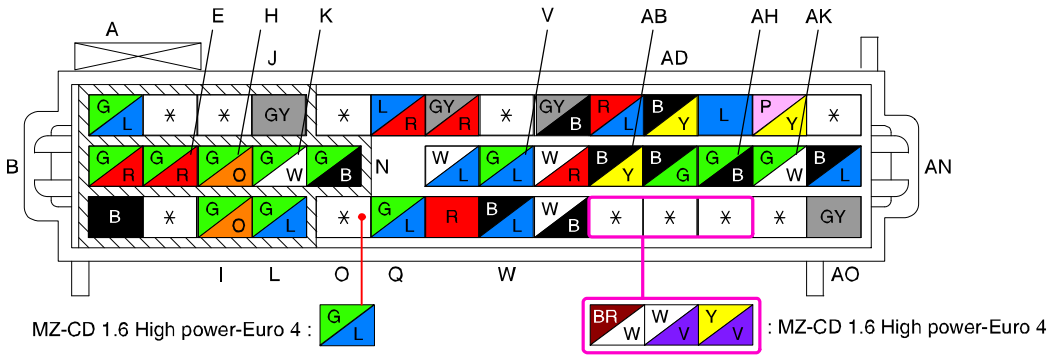



EMISSION HARNESS

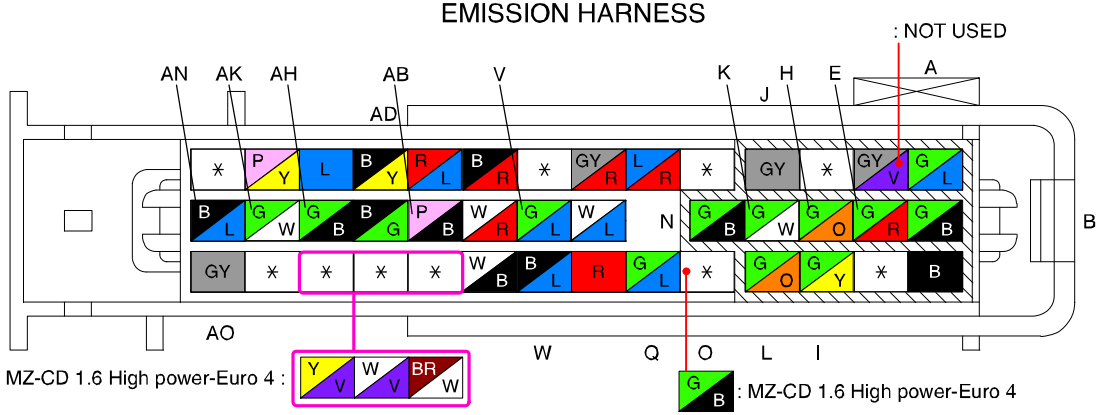


A/C COMPRESSOR CONTROL

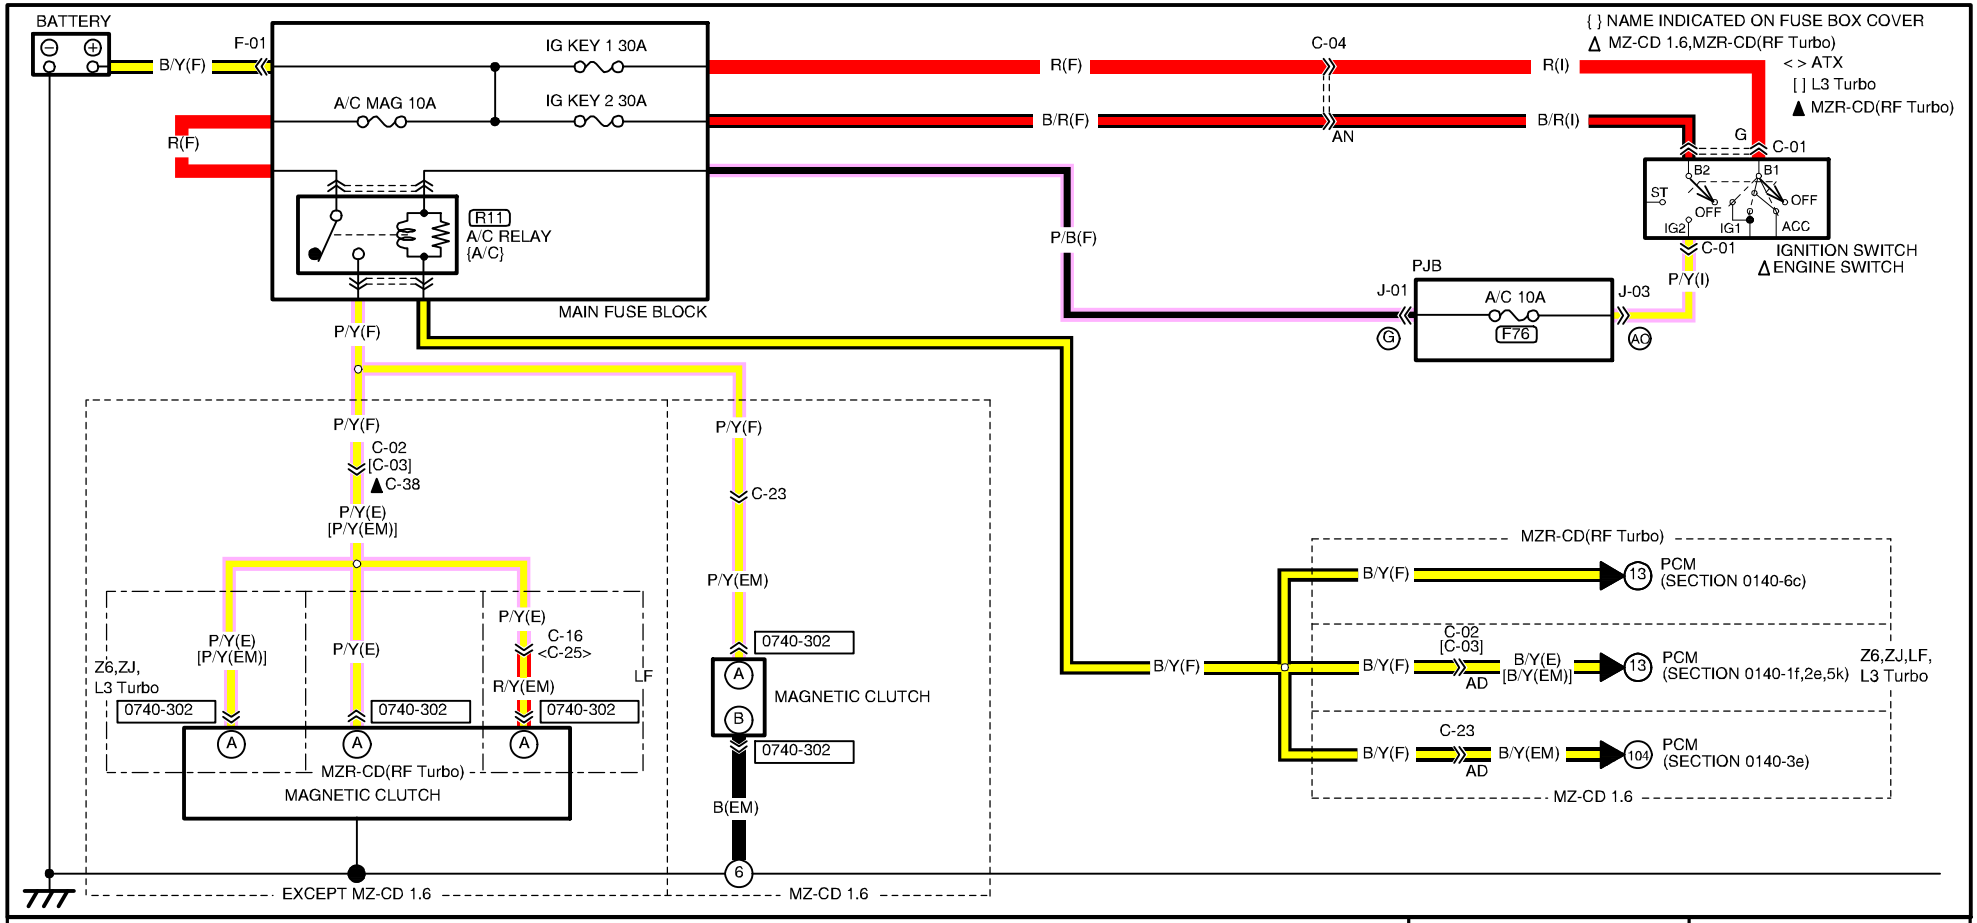


0740-302
MAGNETIC CLUTCH

ENGINE HARNESS	EMISSION HARNESS	EMISSION HARNESS	EMISSION HARNESS	ENGINE HARNESS
				
(Z6,ZJ)	(LF)	(MZ-CD 1.6)	(L3 Turbo)	(MZR-CD(RF Turbo))

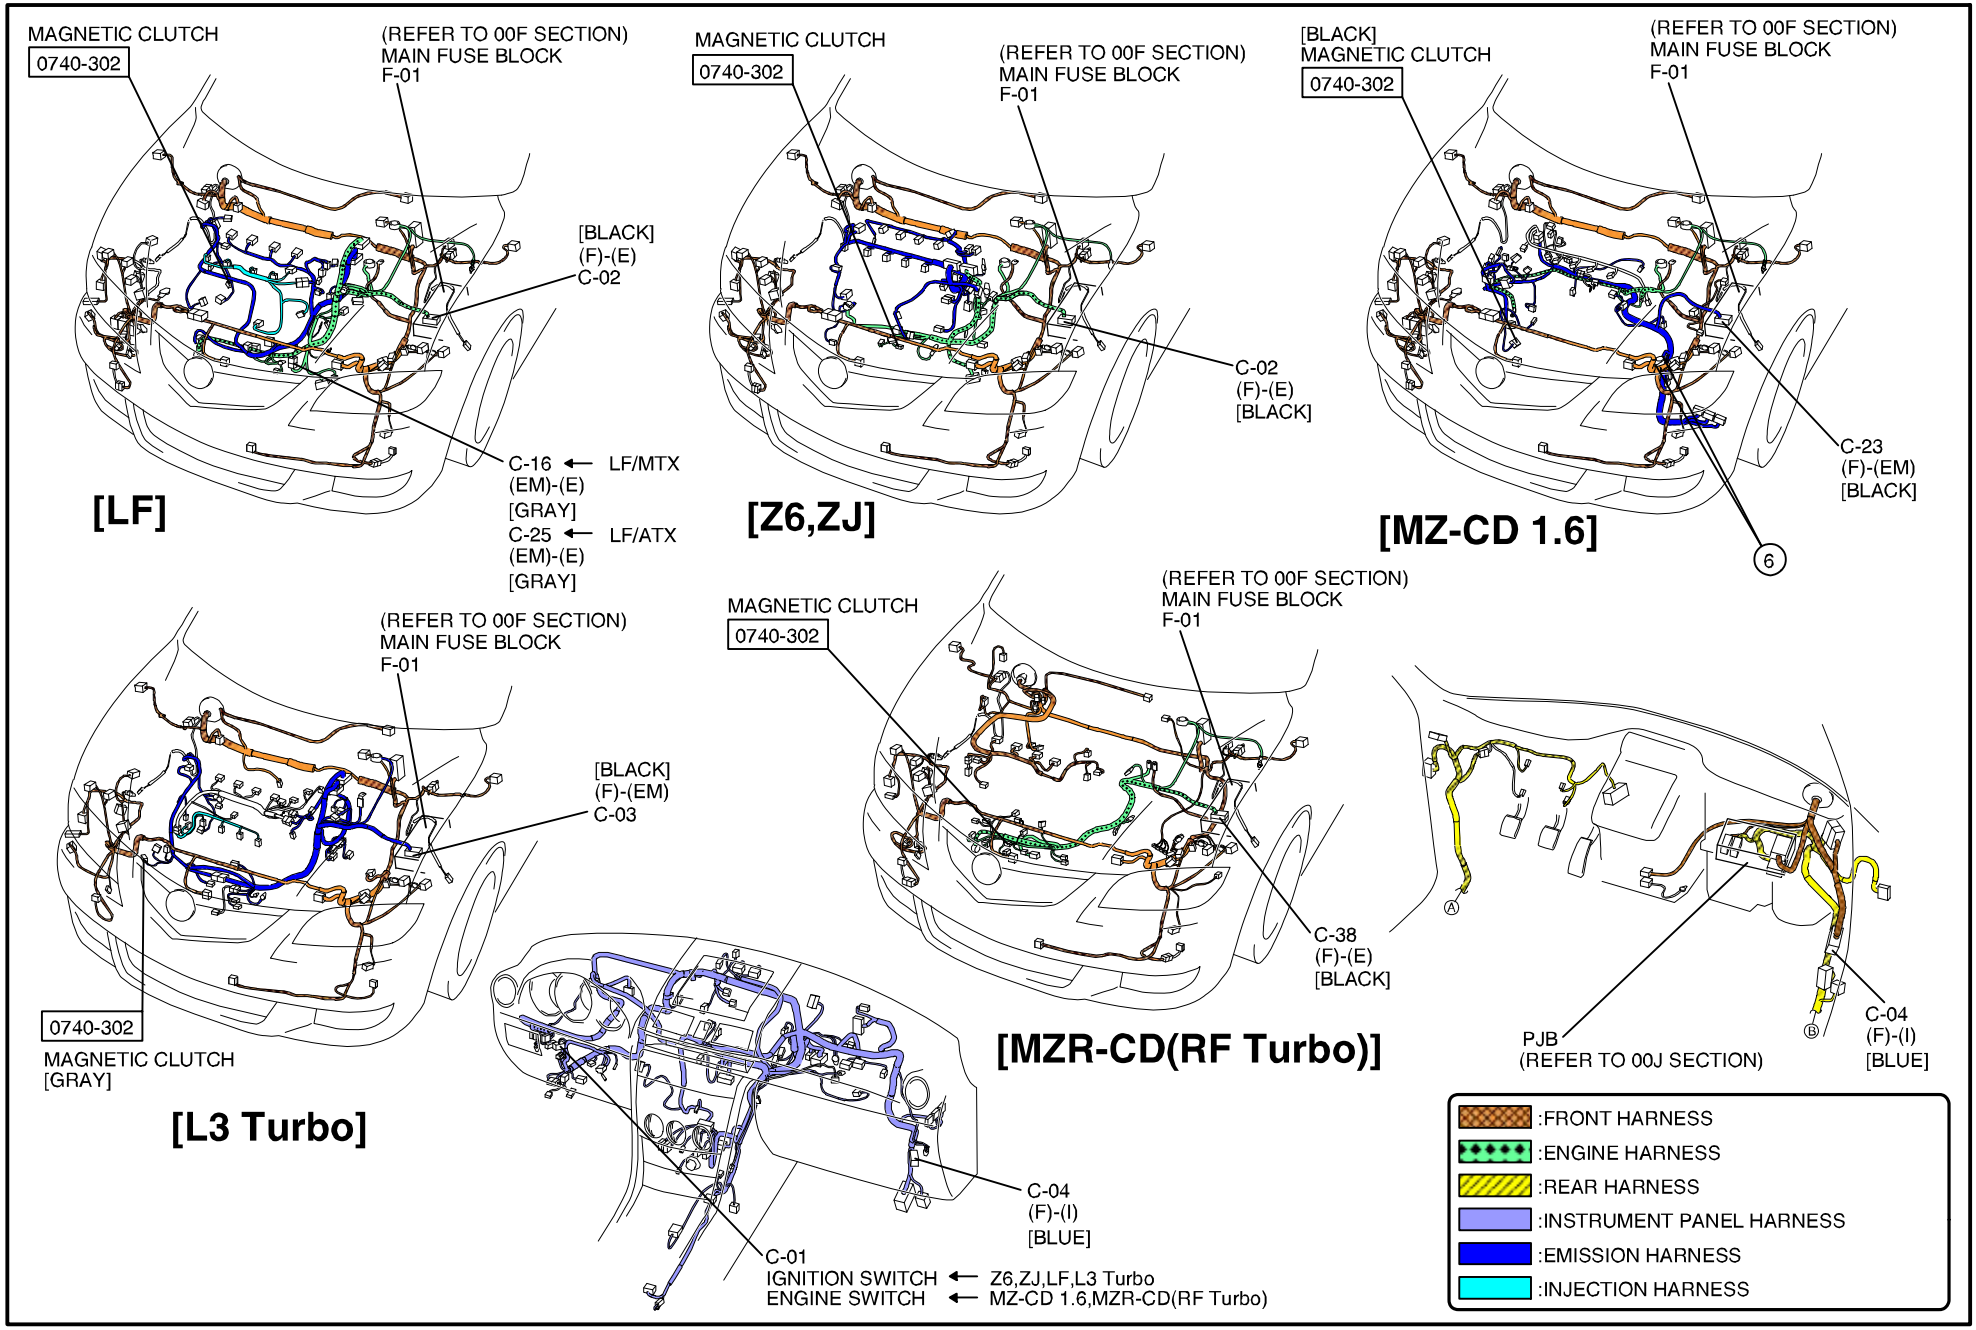

MAGNETIC CLUTCH
0740-302
(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
[BLACK]
(F)-(E)
C-02
C-16 ← LF/MTX
(EM)-(E)
[GRAY]
C-25 ← LF/ATX
(EM)-(E)
[GRAY]
[LF]
MAGNETIC CLUTCH
0740-302
(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
C-02
(F)-(E)
[BLACK]
[Z6,ZJ]
[BLACK]
MAGNETIC CLUTCH
0740-302
(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
C-23
(F)-(EM)
[BLACK]
6
[MZ-CD 1.6]
(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
[BLACK]
(F)-(EM)
C-03
0740-302
MAGNETIC CLUTCH
[GRAY]
[L3 Turbo]
MAGNETIC CLUTCH
0740-302
(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
C-38
(F)-(E)
[BLACK]
[MZR-CD(RF Turbo)]
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
C-04
(F)-(I)
[BLUE]
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ← MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

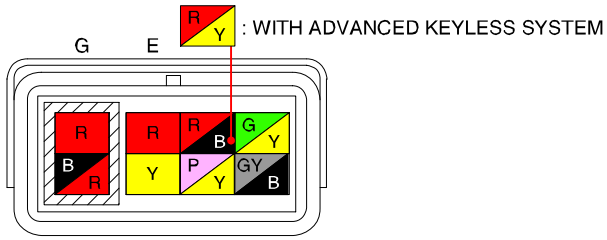


C-16
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

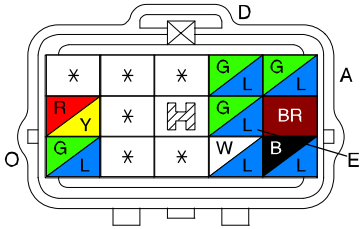


ENGINE HARNESS

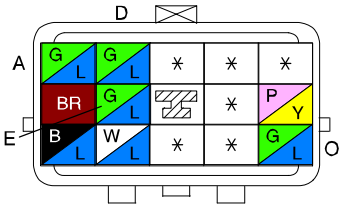


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

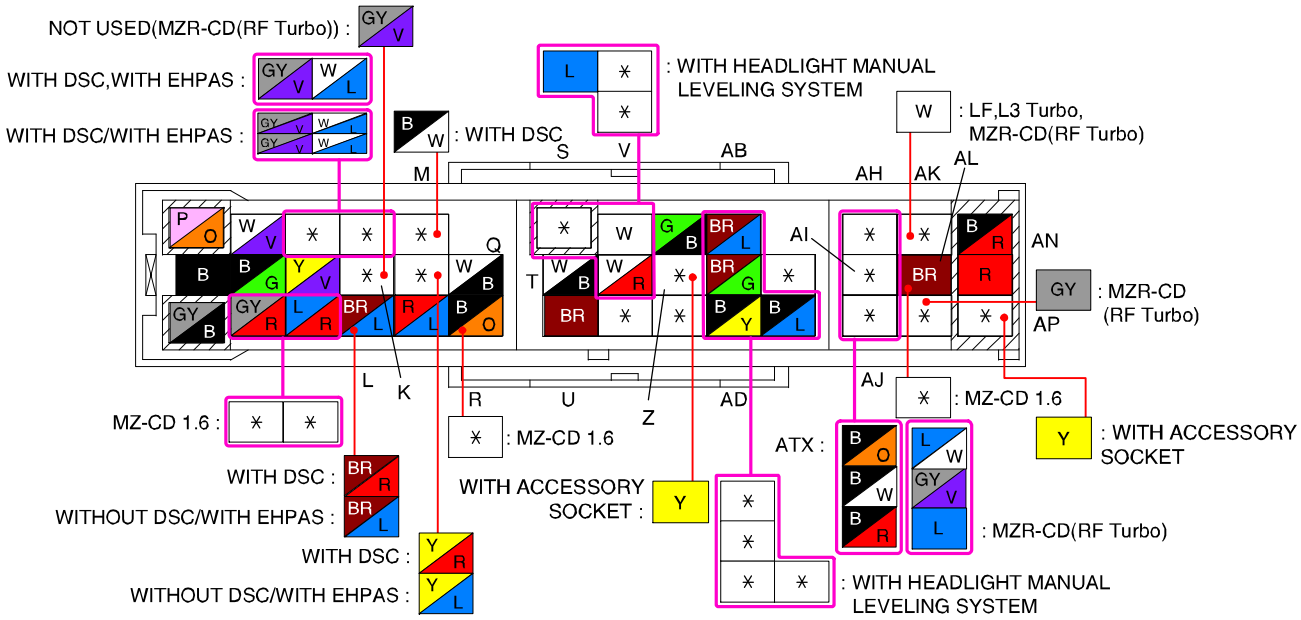


INSTRUMENT PANEL HARNESS

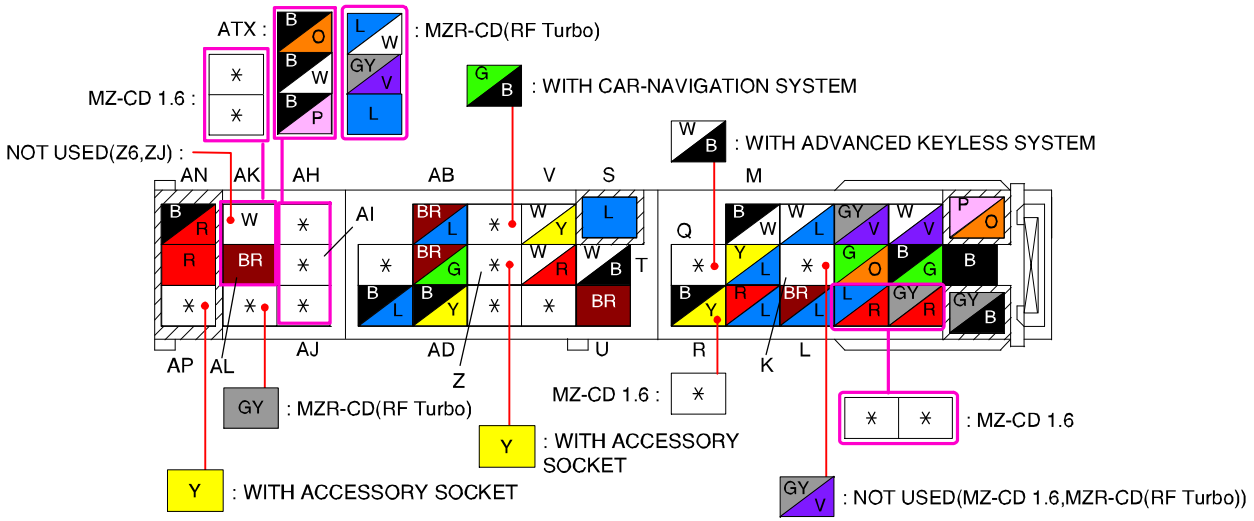


C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

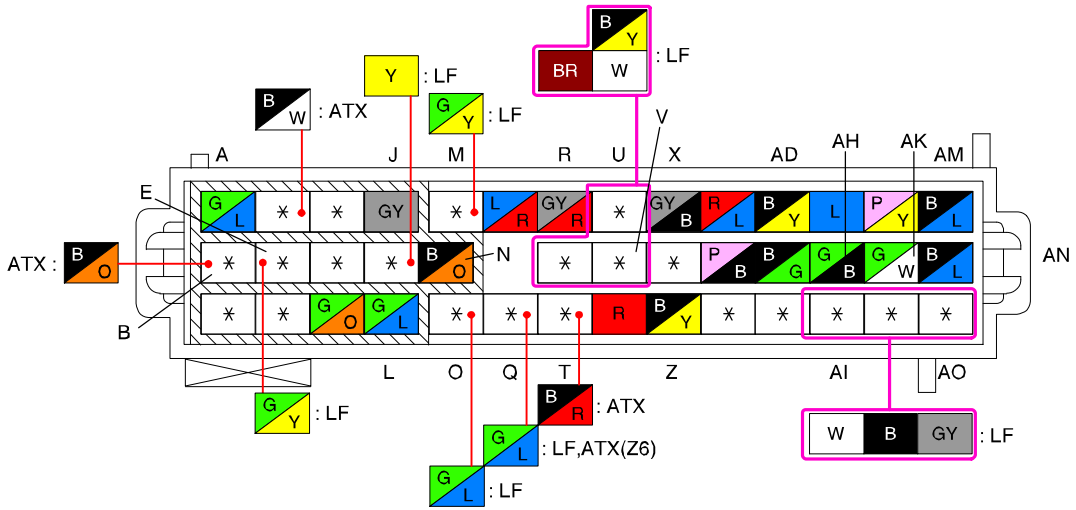


ENGINE HARNESS

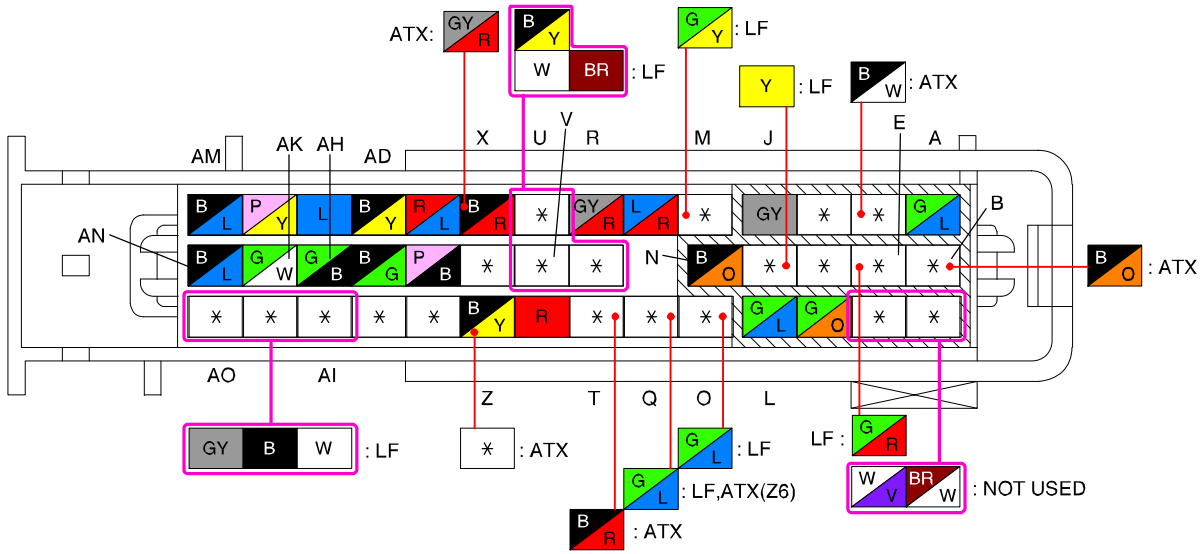


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

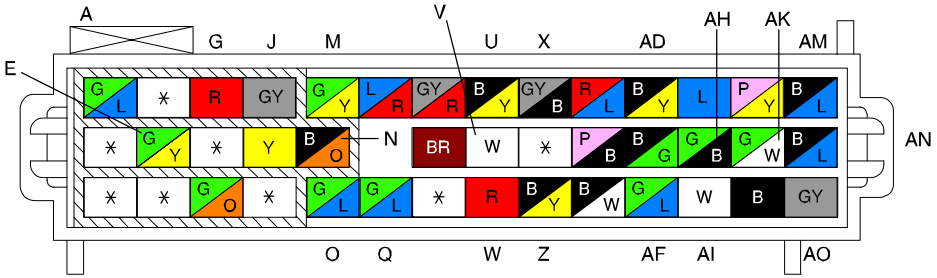


EMISSION HARNESS

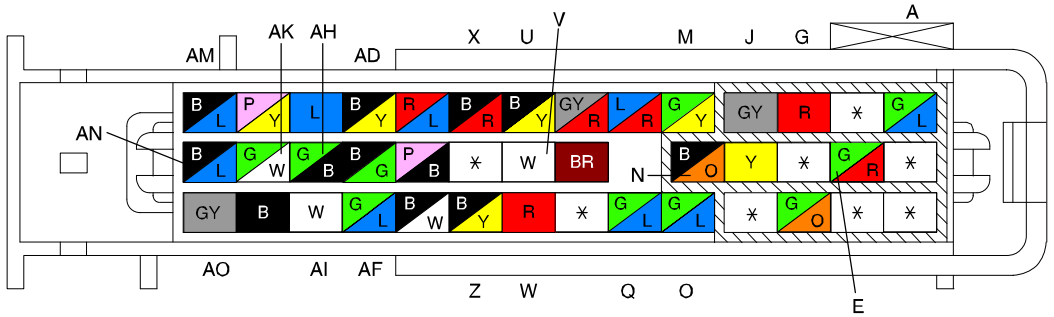


C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

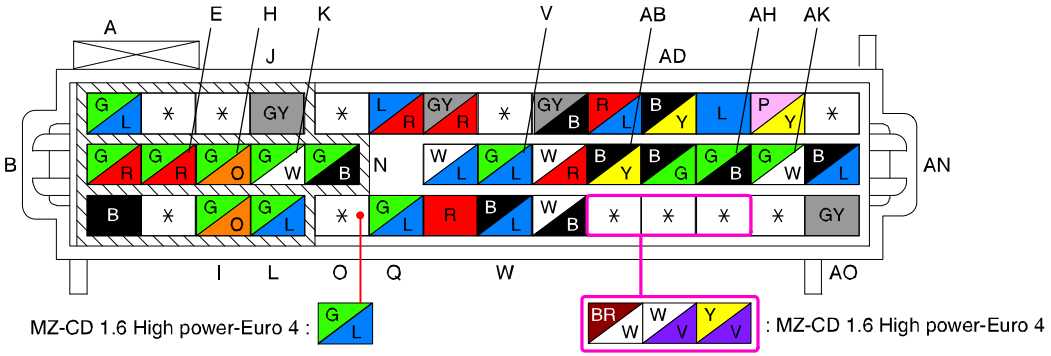


EMISSION HARNESS

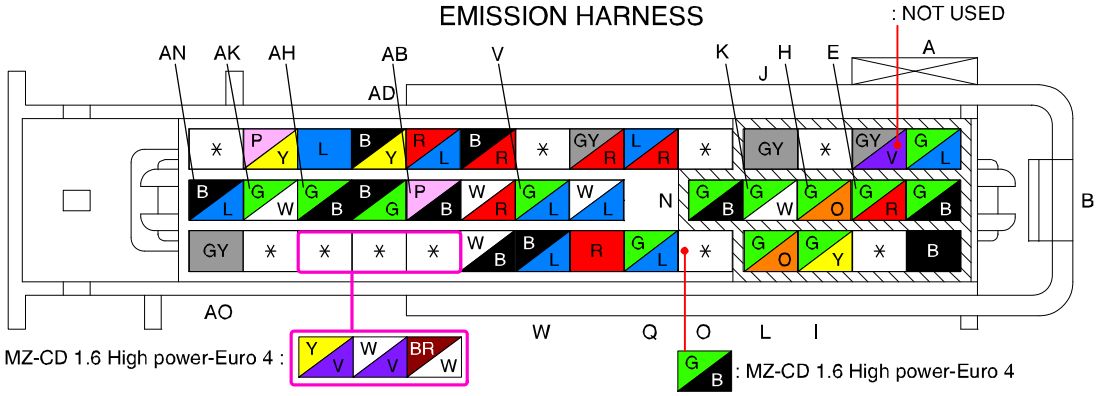


C-25
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

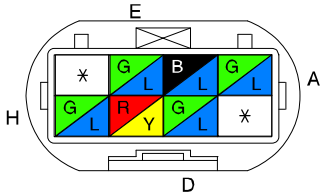


ENGINE HARNESS

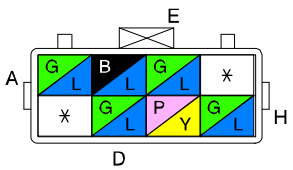



C-38
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

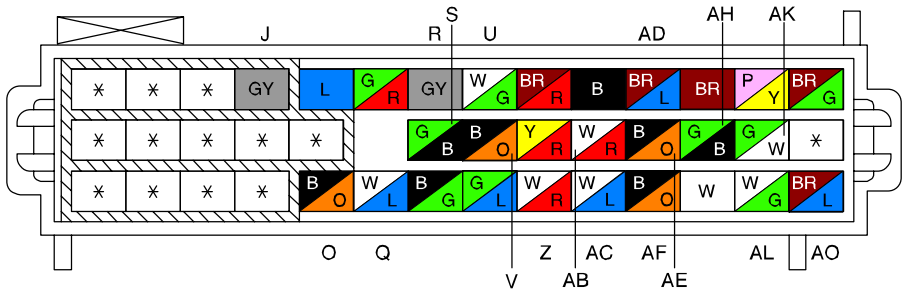

ENGINE HARNESS

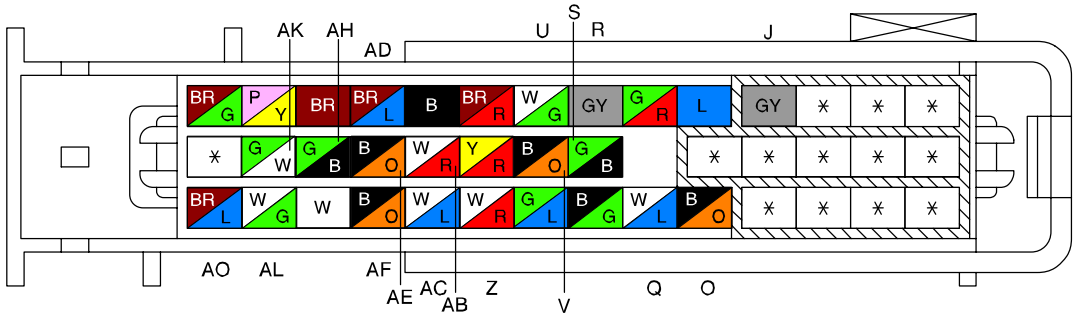

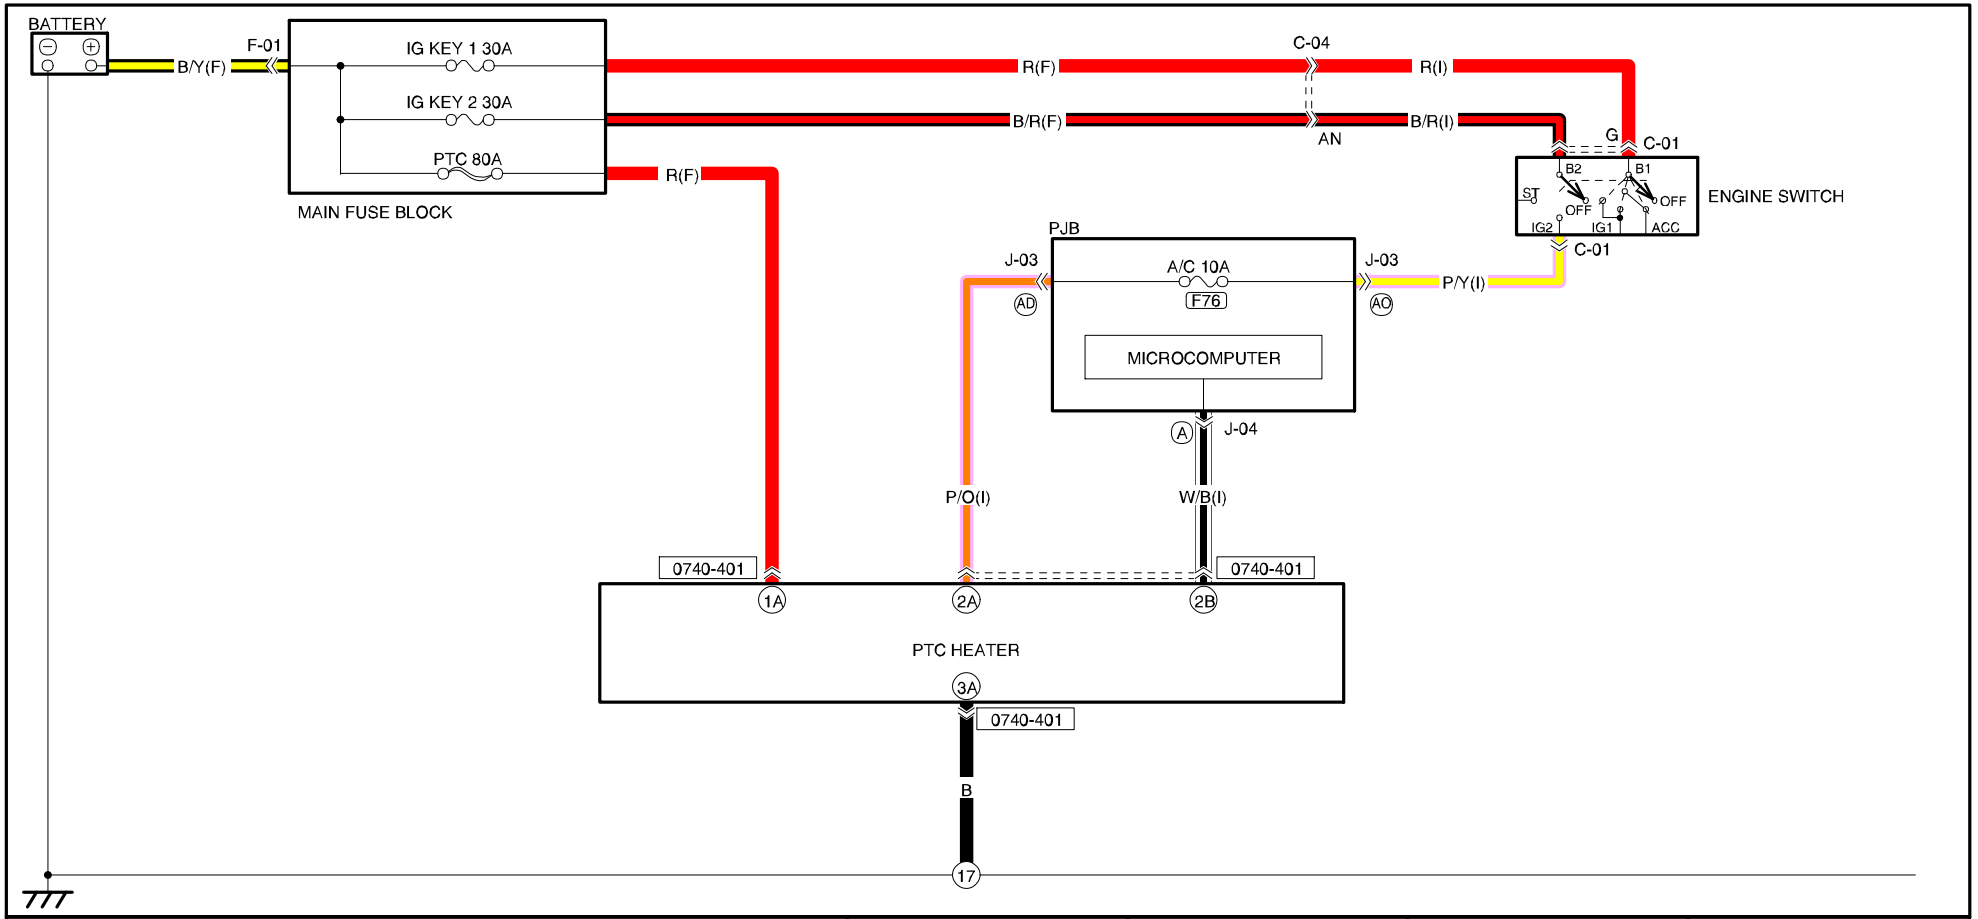


0740-401
PTC HEATER

FRONT HARNESS




INSTRUMENT PANEL HARNESS




SHORT CORD

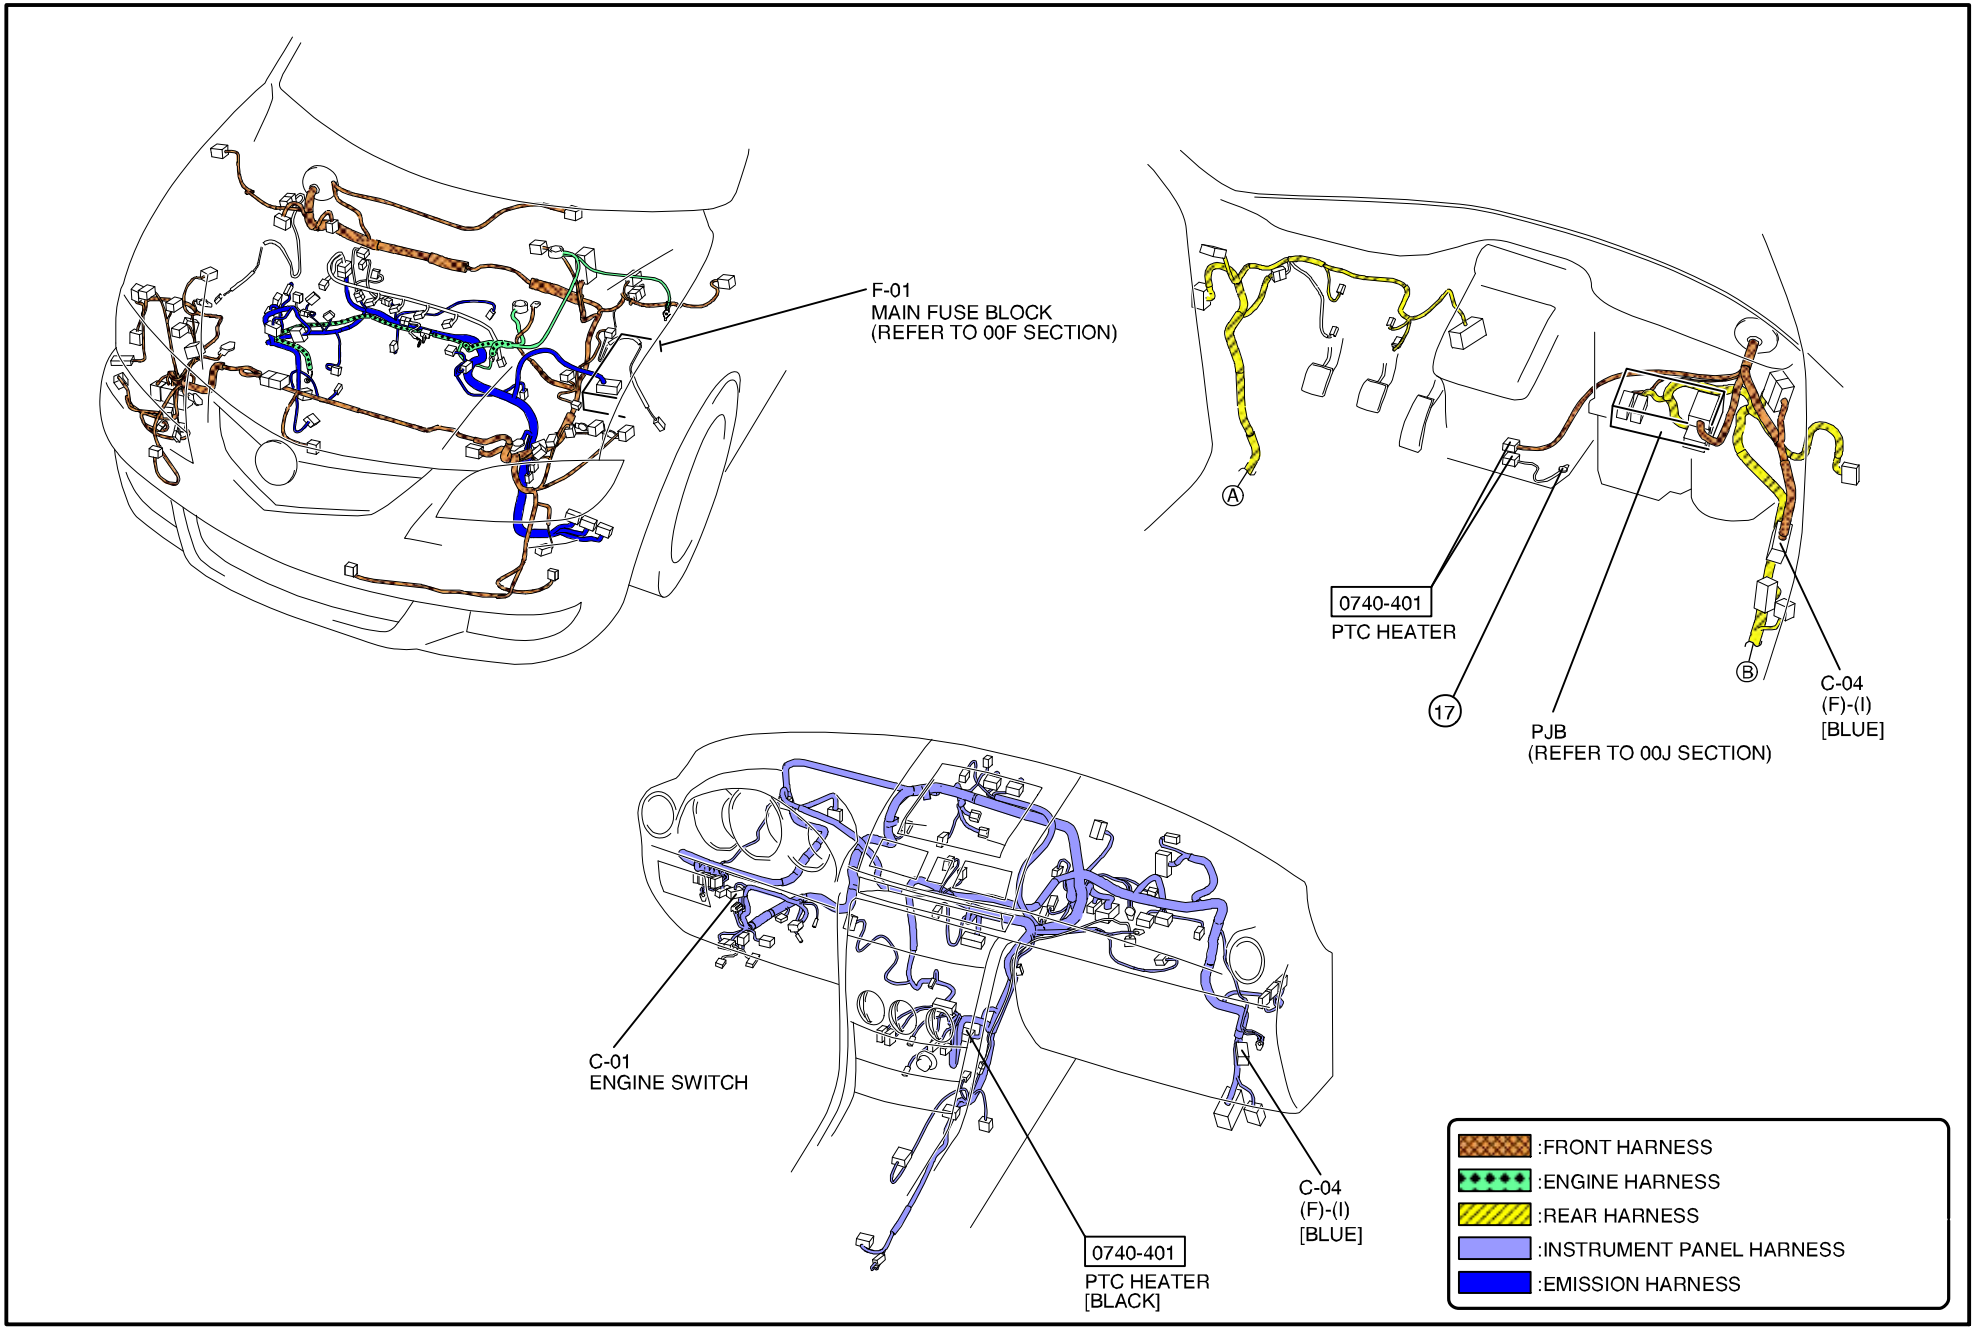



F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
0740-401
PTC HEATER
17
PJB
(REFER TO 00J SECTION)
Ⓑ
C-04
(F)-(I)
[BLUE]
C-01
ENGINE SWITCH
0740-401
PTC HEATER
[BLACK]
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

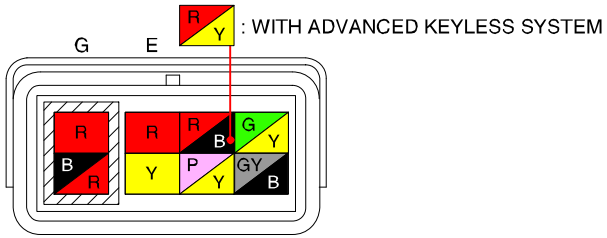


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

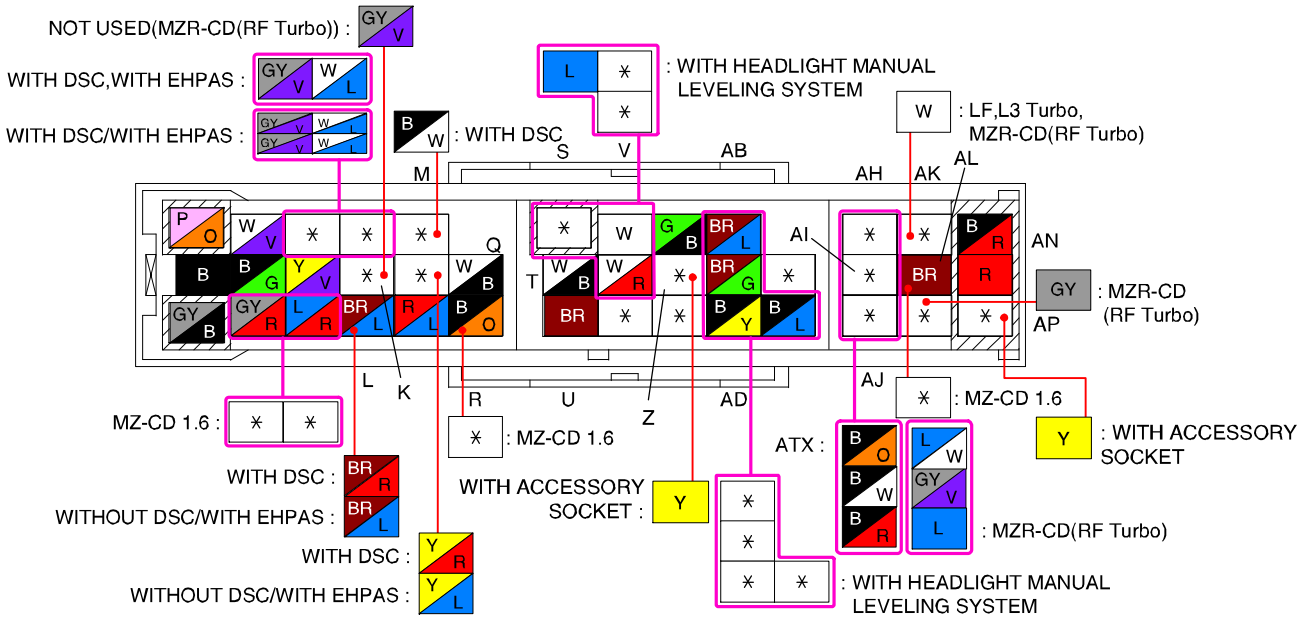


INSTRUMENT PANEL HARNESS

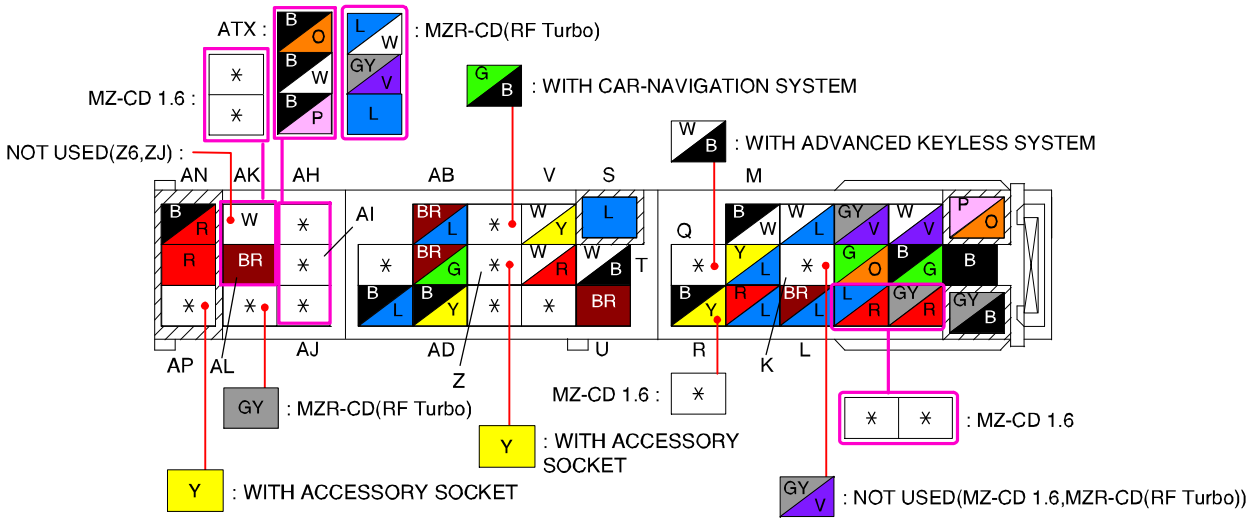


WATER HEATER SYSTEM

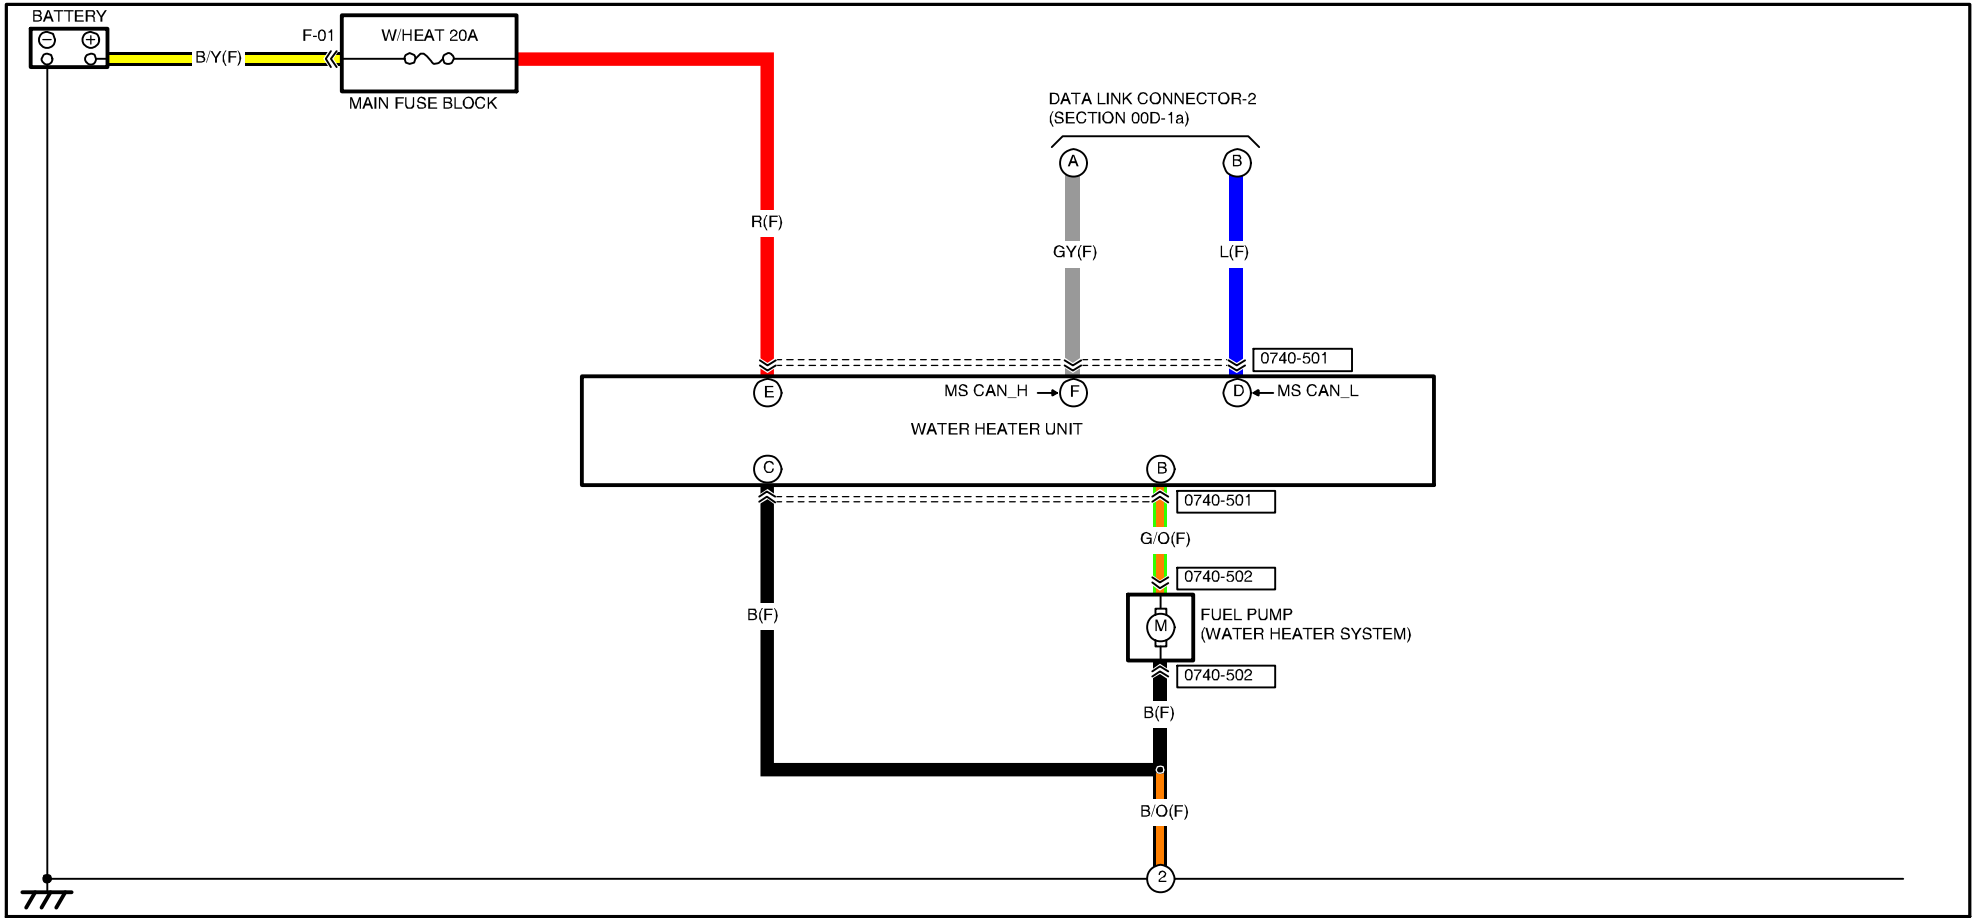


0740-501
WATER HEATER UNIT

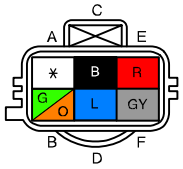


0740-502
FUEL PUMP(WATER HEATER SYSTEM)



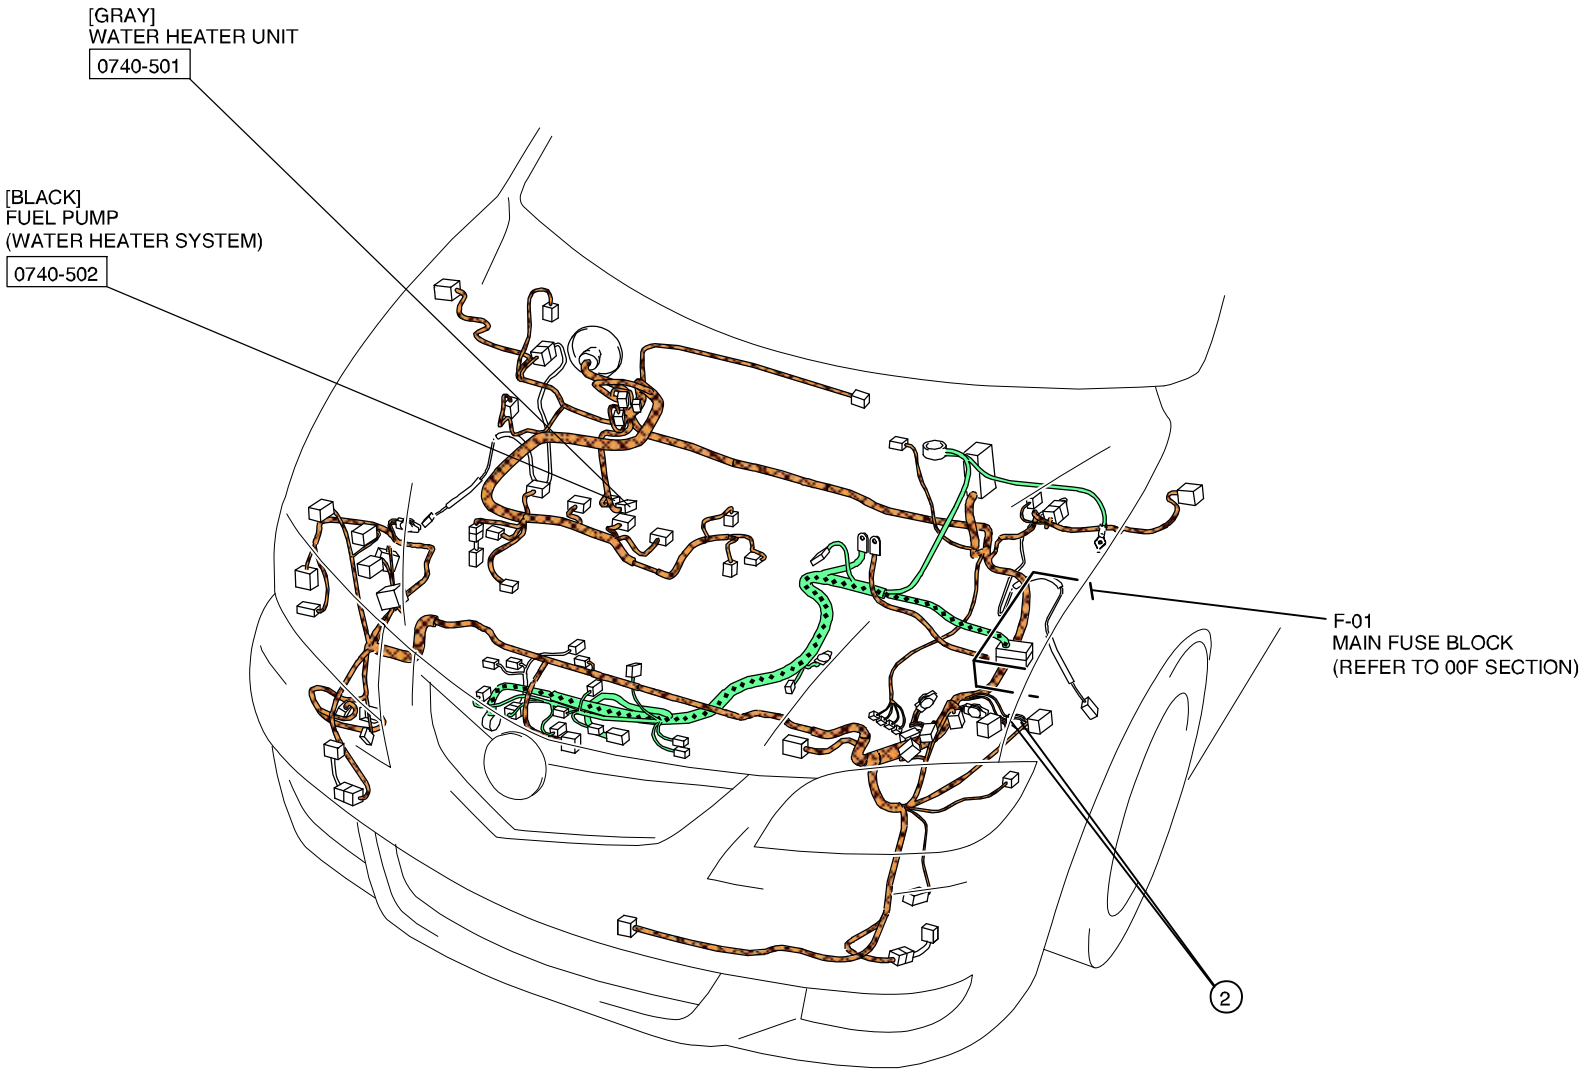

[GRAY]
WATER HEATER UNIT
0740-501
[BLACK]
FUEL PUMP
(WATER HEATER SYSTEM)
0740-502
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
1
2
:FRONT HARNESS
:ENGINE HARNESS

AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)

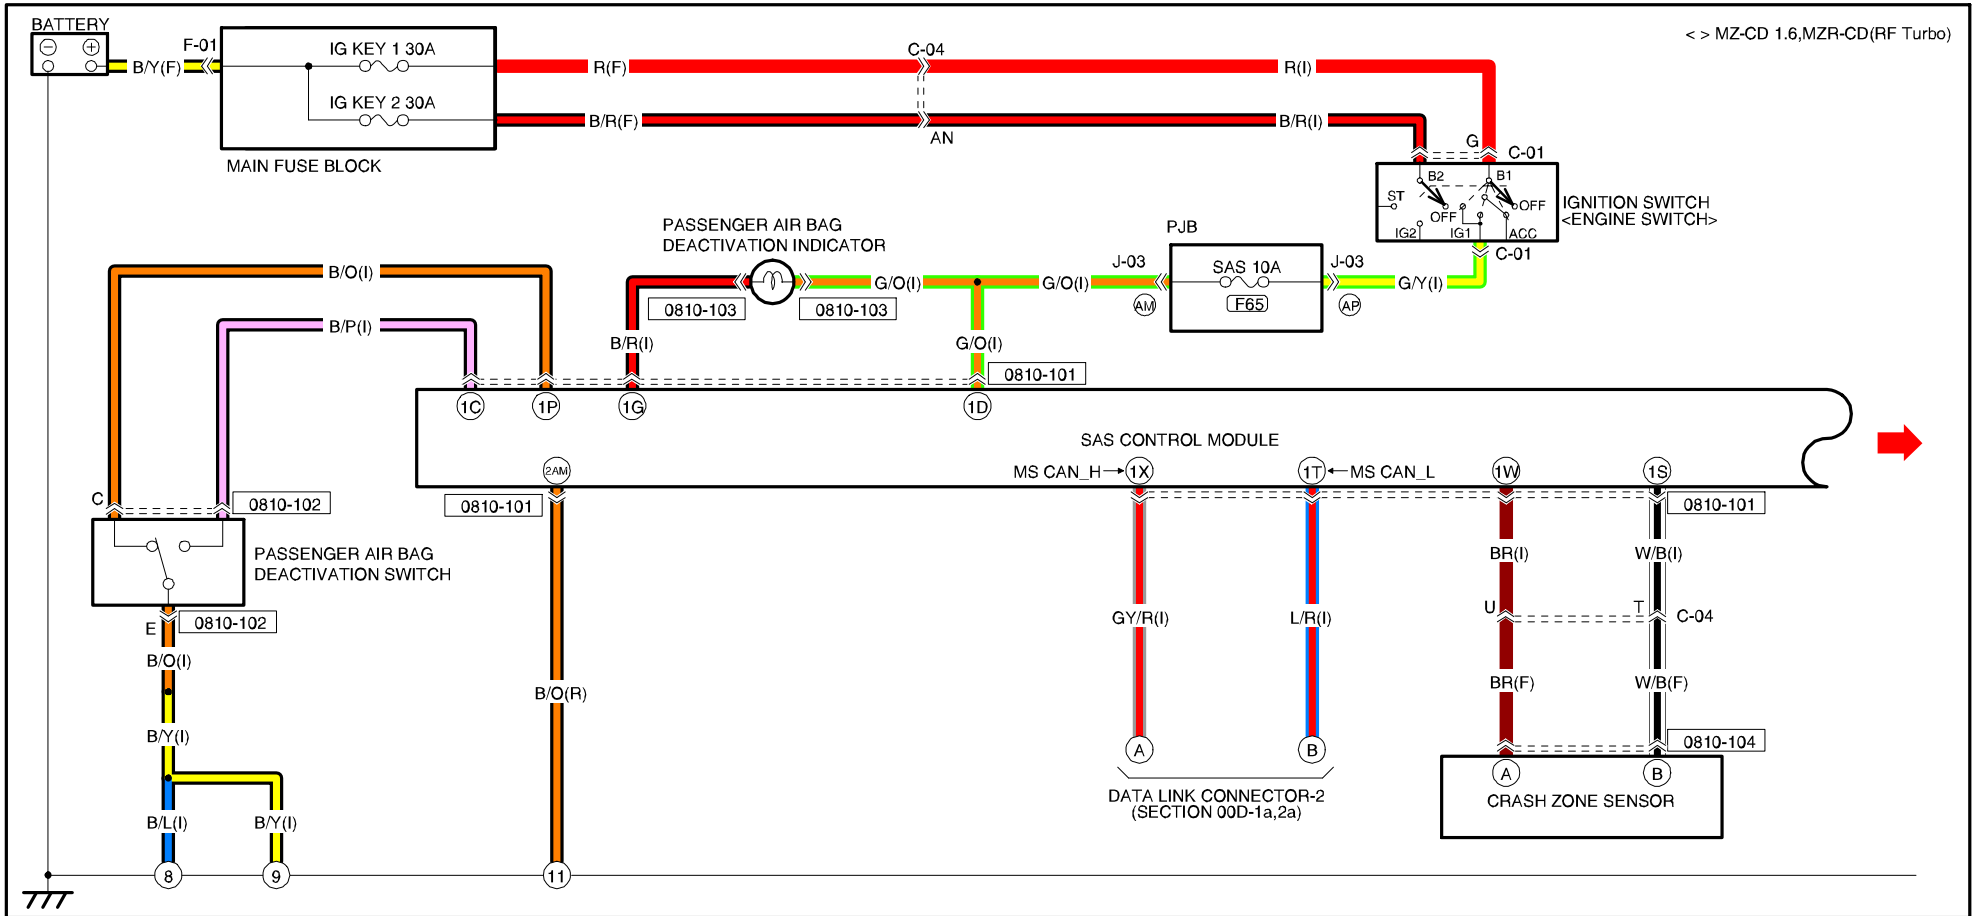


0810-101
SAS CONTROL MODULE


INSTRUMENT PANEL HARNESS

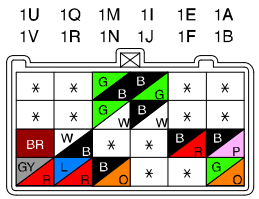


REAR HARNESS

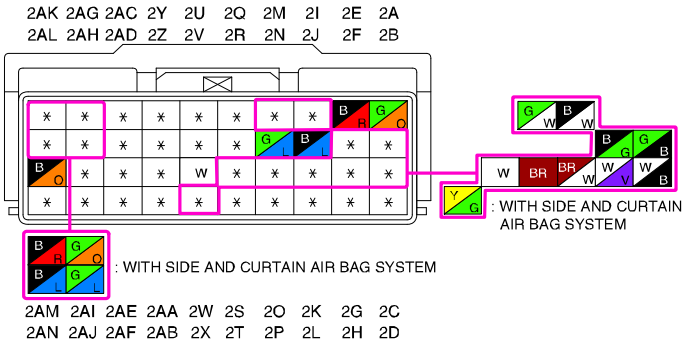


0810-102
PASSENGER AIR BAG
DEACTIVATION SWITCH




0810-103
PASSENGER AIR BAG DEACTIVATION INDICATOR




0810-104
CRASH ZONE SENSOR



AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)

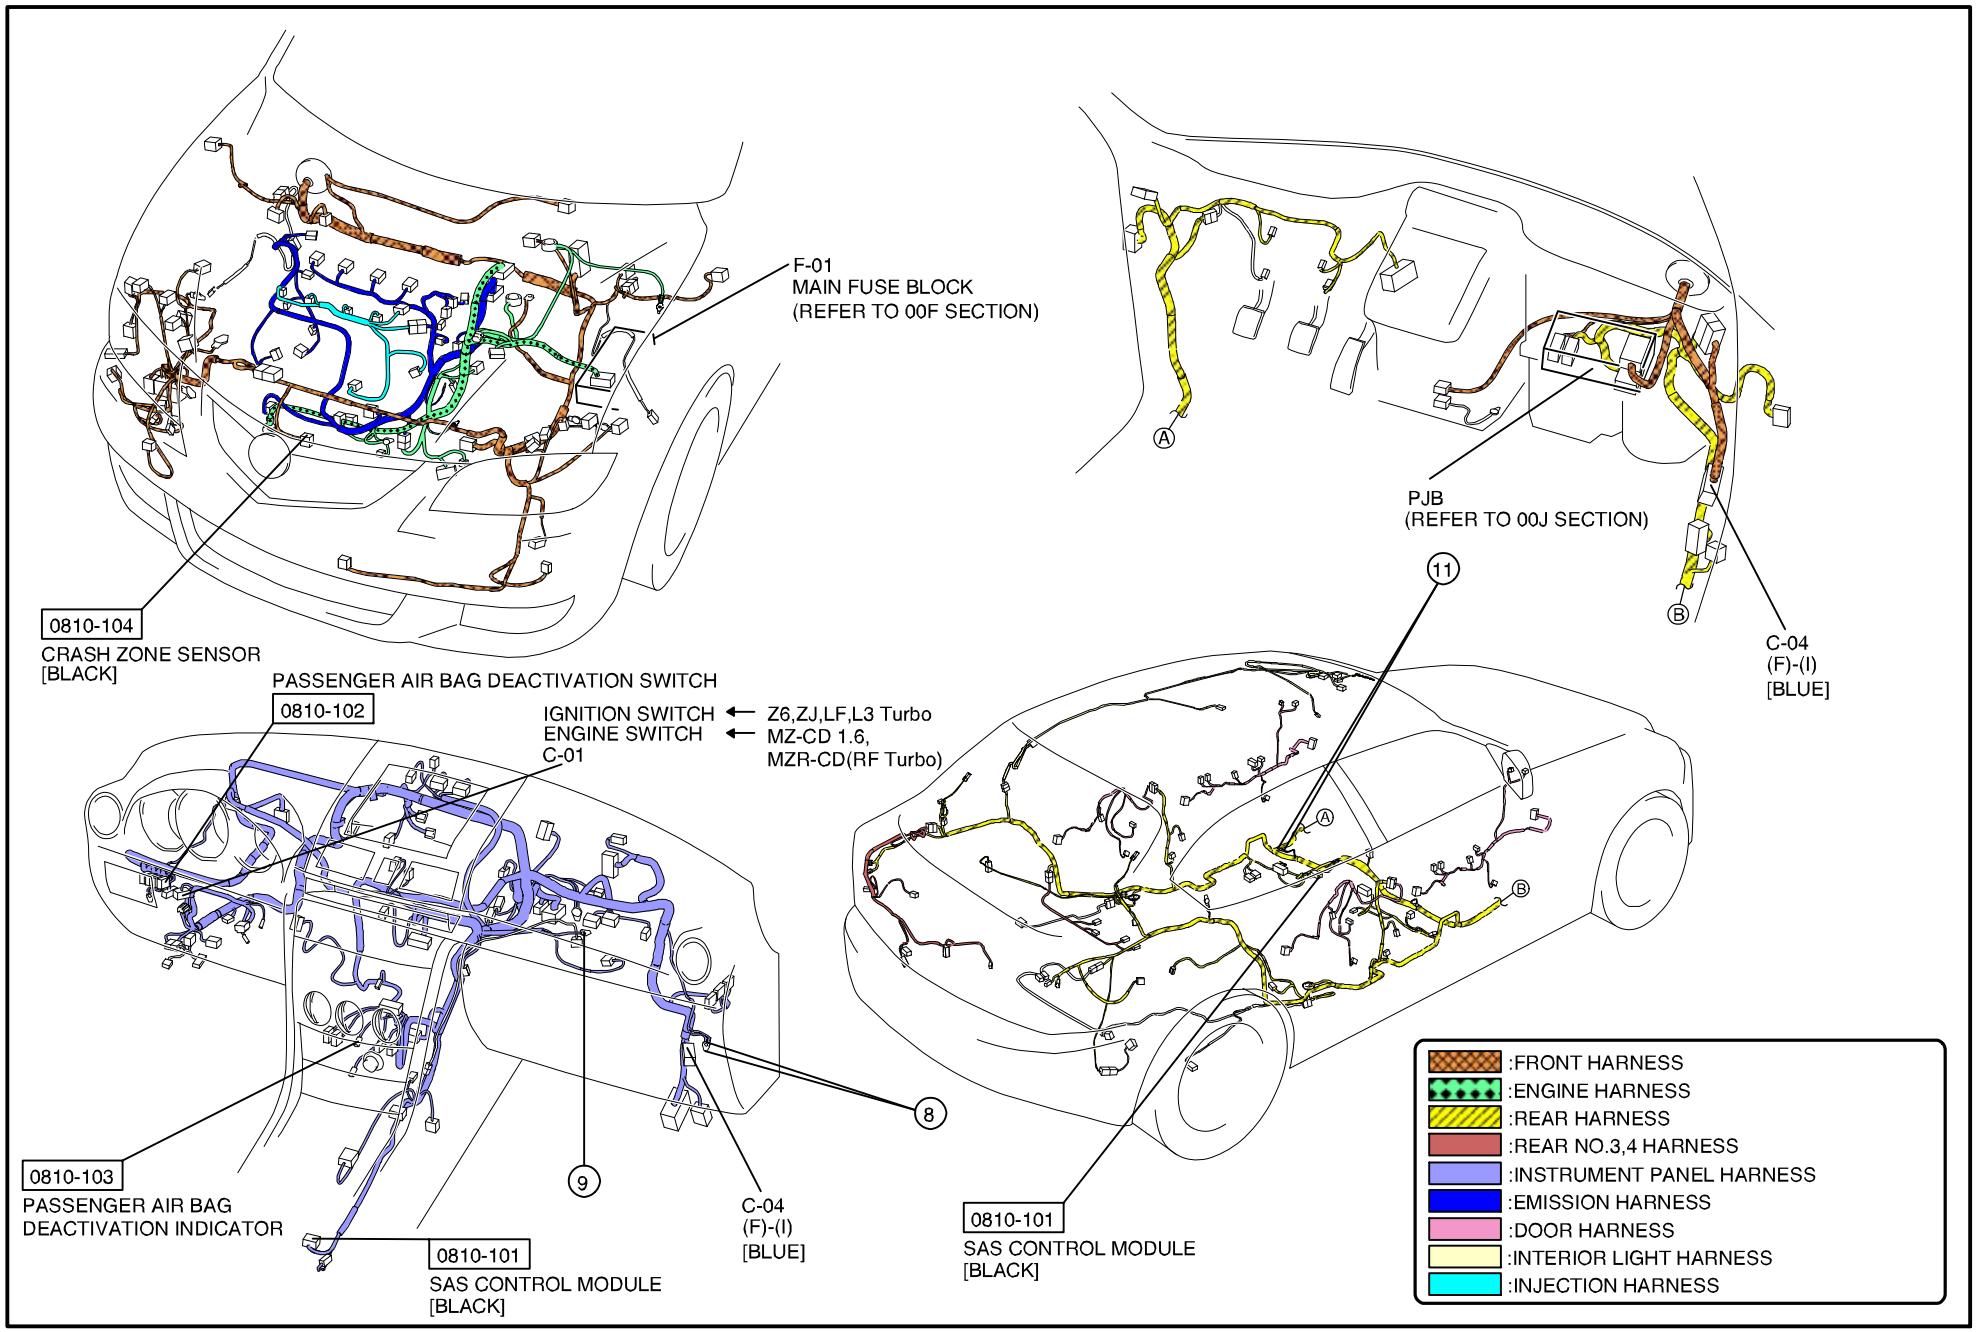


C-01
IGNITION SWITCH/⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

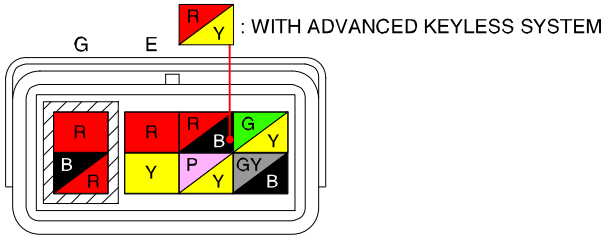


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

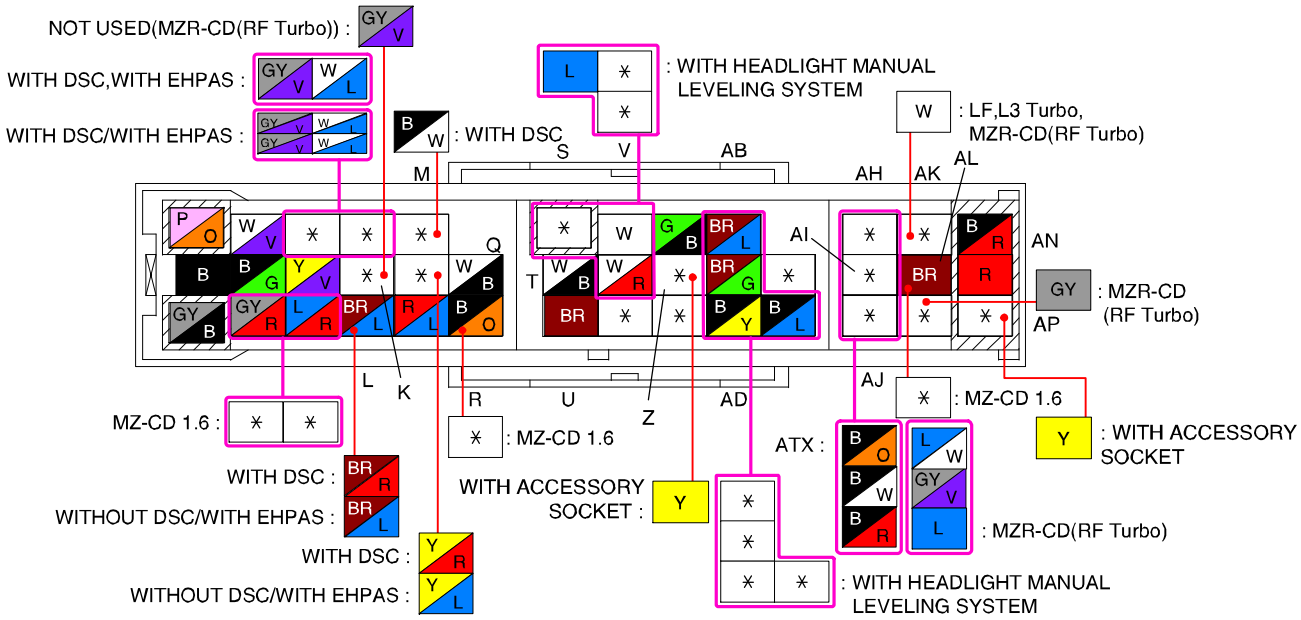

INSTRUMENT PANEL HARNESS

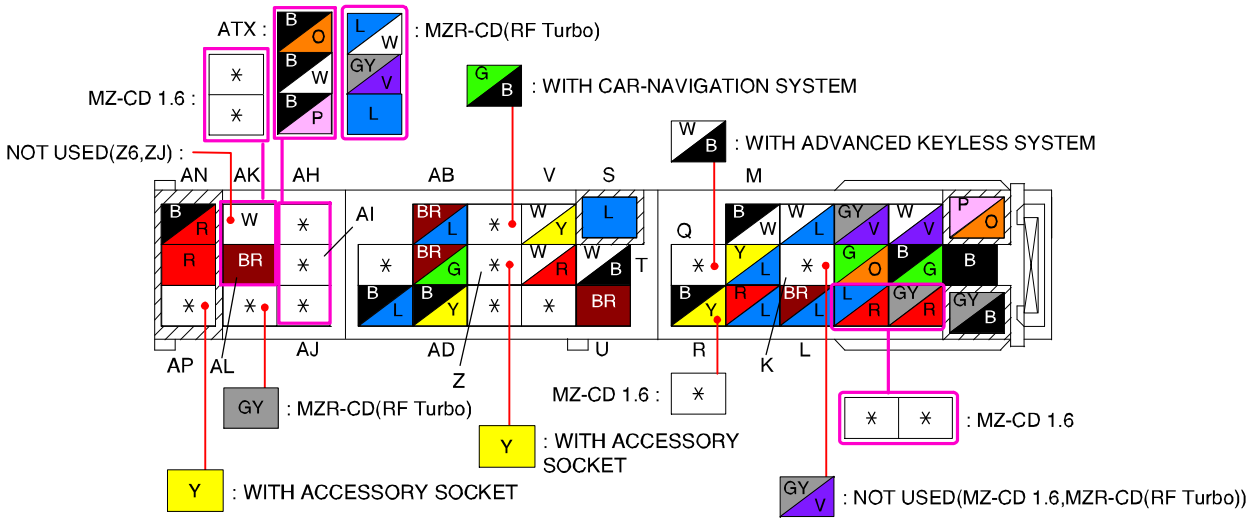


AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)

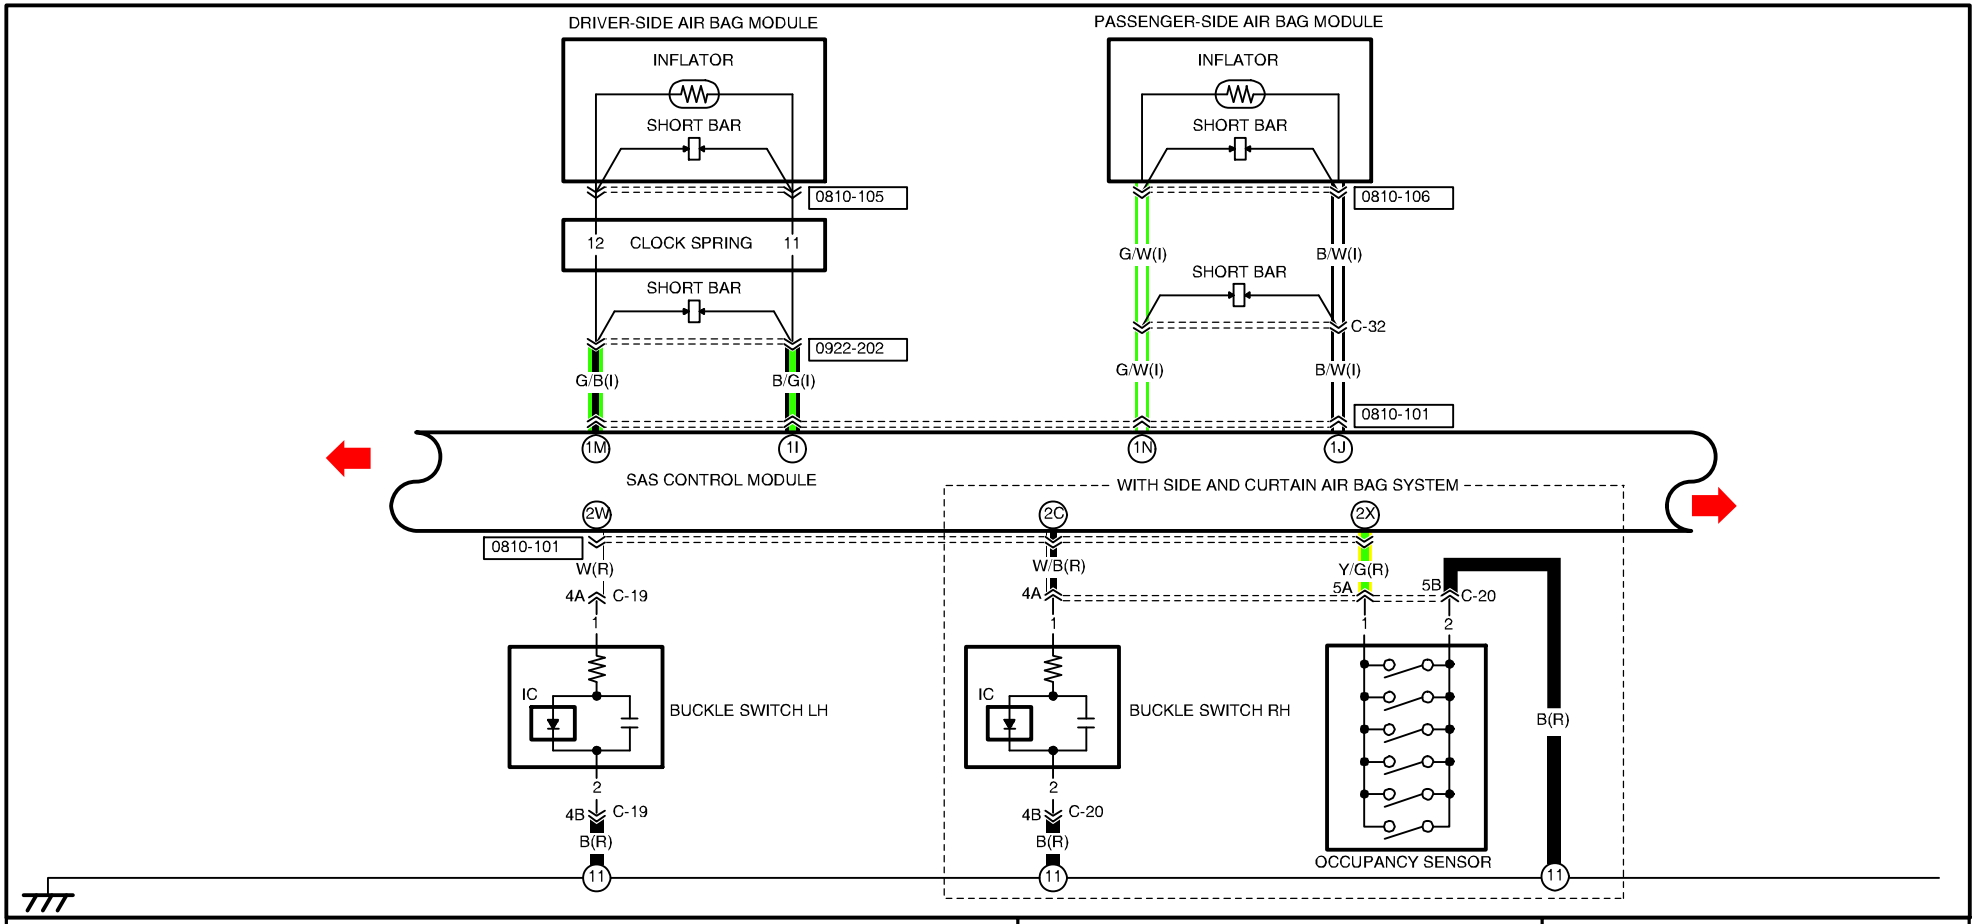


0810-101
SAS CONTROL MODULE


INSTRUMENT PANEL HARNESS

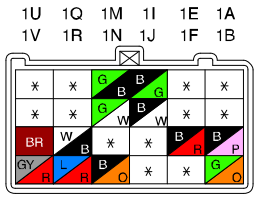

REAR HARNESS

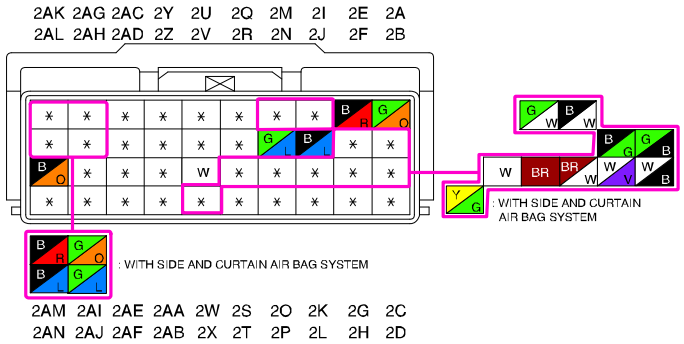


0810-105
DRIVER-SIDE AIR BAG MODULE




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-106
PASSENGER-SIDE AIR BAG MODULE




0922-202
INSTRUMENT PANEL HARNESS-CLOCK SPRING


INSTRUMENT PANEL HARNESS

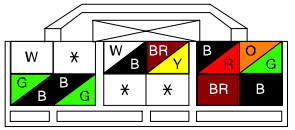

CLOCK SPRING

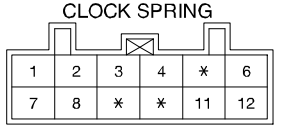


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

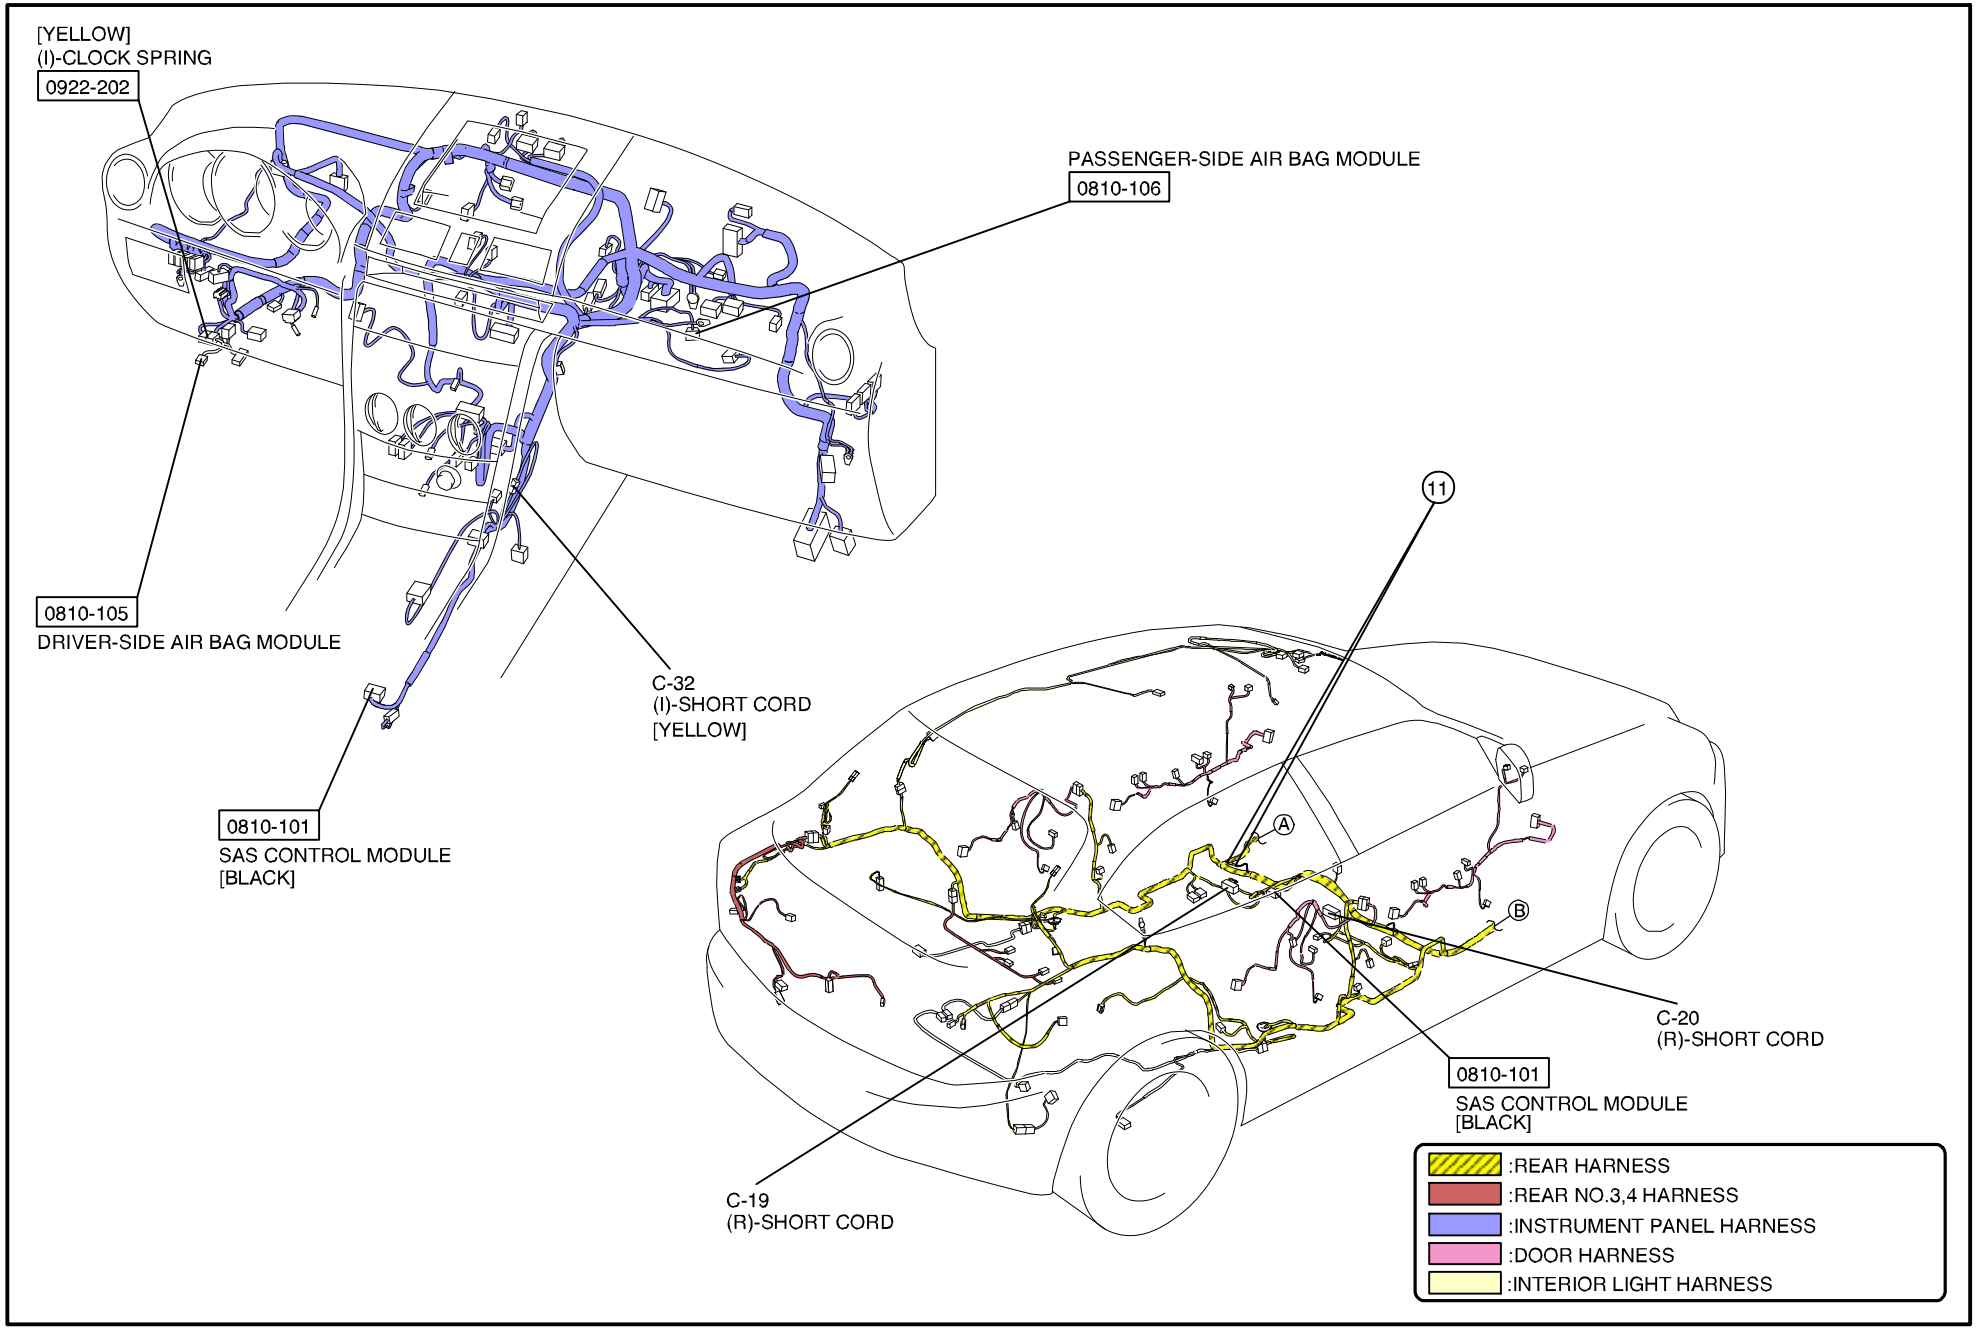

[YELLOW]
(I)-CLOCK SPRING
0922-202
PASSENGER-SIDE AIR BAG MODULE
0810-106
0810-105
DRIVER-SIDE AIR BAG MODULE
C-32
(I)-SHORT CORD
[YELLOW]
0810-101
SAS CONTROL MODULE
[BLACK]
11
A
B
C-20
(R)-SHORT CORD
0810-101
SAS CONTROL MODULE
[BLACK]
C-19
(R)-SHORT CORD
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-19
REAR HARNESS-SHORT CORD

REAR HARNESS

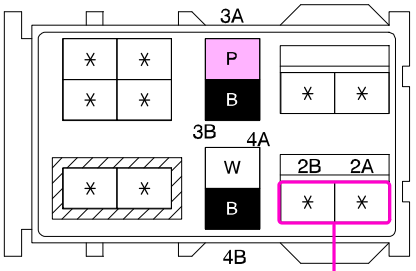

SHORT CORD

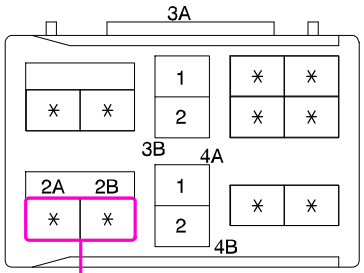



WITH SIDE AND CURTAIN AIR BAG SYSTEM : B G G B

1 2 : WITH SIDE AND CURTAIN AIR BAG SYSTEM

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

C-32
SHORT CONNECTOR

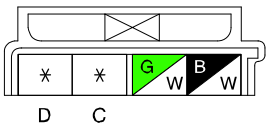

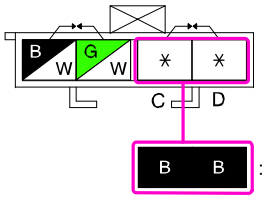


: NOT USED

C-20
REAR HARNESS-SHORT CORD

REAR HARNESS

WITH SIDE AND CURTAIN AIR BAG SYSTEM : Y G B

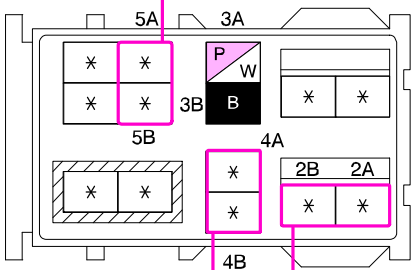

WITH SIDE AND CURTAIN AIR BAG SYSTEM : W B B

B G W W : WITH SIDE AND CURTAIN AIR BAG SYSTEM

SHORT CORD


1 2 : WITH SIDE AND CURTAIN AIR BAG SYSTEM




WITH SIDE AND CURTAIN AIR BAG SYSTEM : 1 2

1 2 : WITH SIDE AND CURTAIN AIR BAG SYSTEM


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

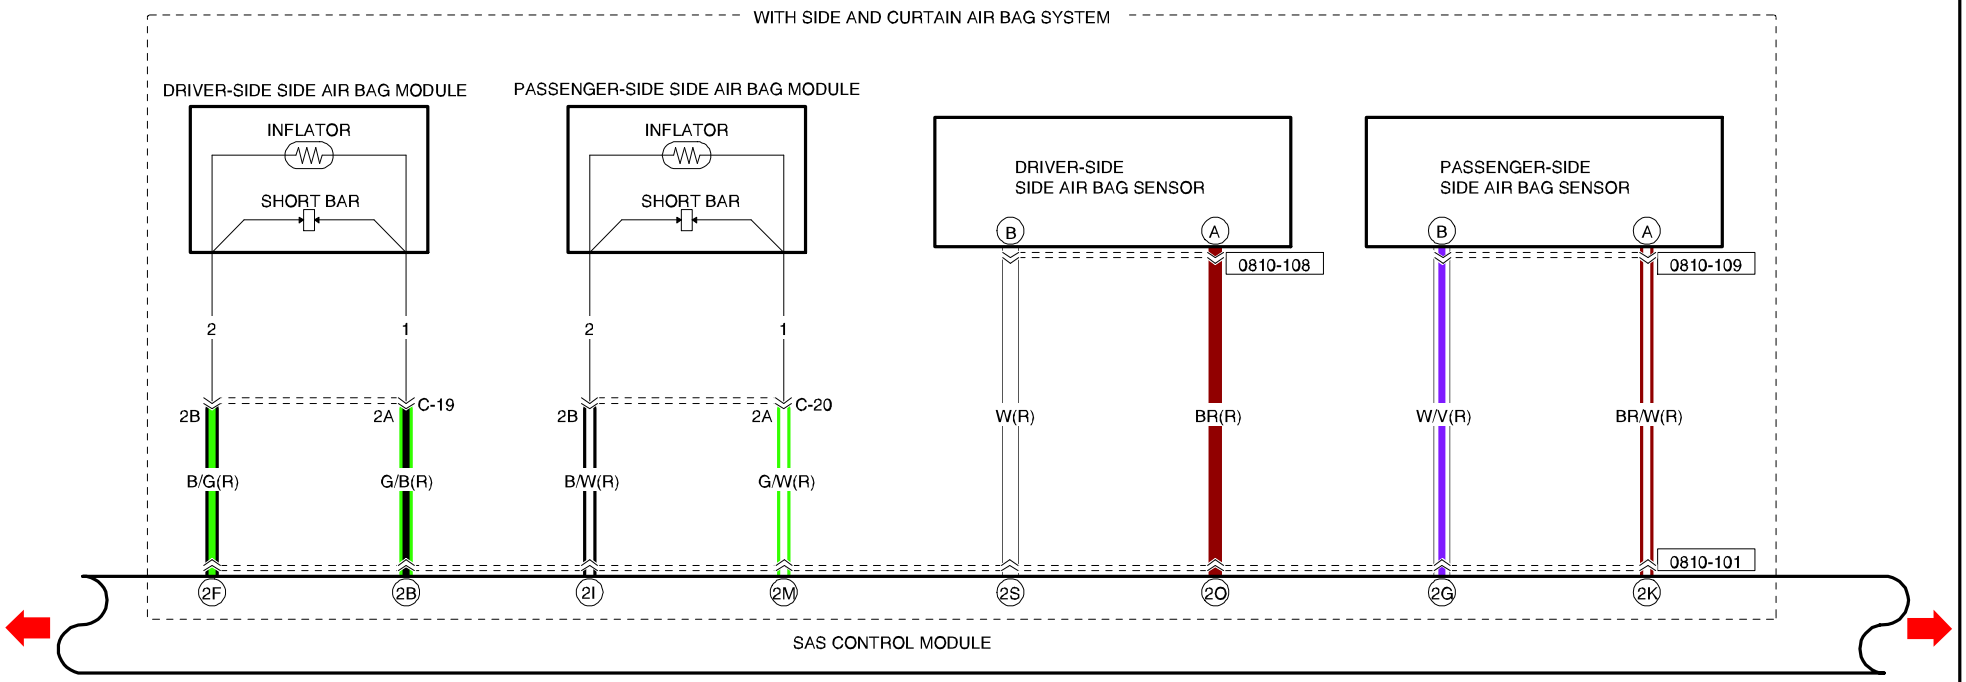


0810-101
SAS CONTROL MODULE REAR HARNESS

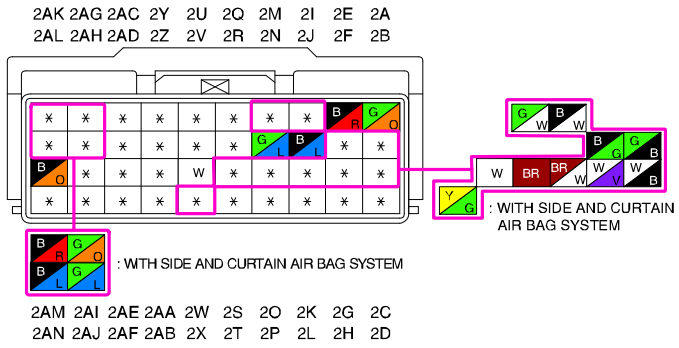


0810-108
DRIVER-SIDE SIDE AIR BAG SENSOR




0810-109
PASSENGER-SIDE SIDE AIR BAG SENSOR



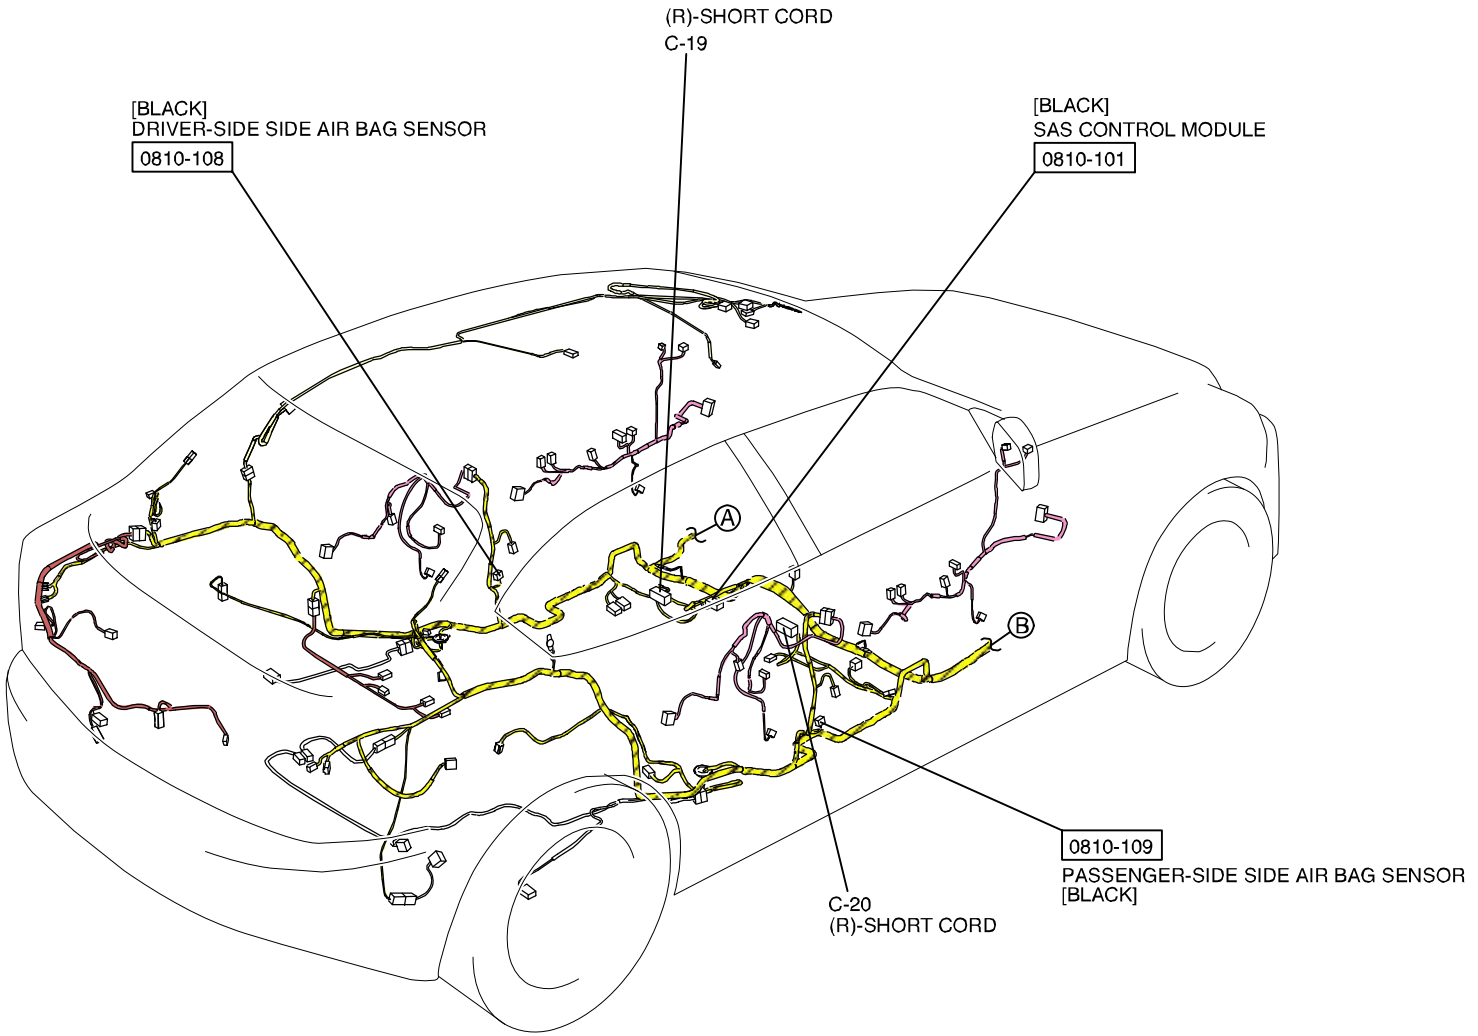

(R)-SHORT CORD
C-19
[BLACK]
DRIVER-SIDE SIDE AIR BAG SENSOR
0810-108
[BLACK]
SAS CONTROL MODULE
0810-101
Ⓐ
Ⓑ
0810-109
PASSENGER-SIDE SIDE AIR BAG SENSOR
[BLACK]
C-20
(R)-SHORT CORD
:REAR HARNESS
:REAR NO.3,4 HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-19
REAR HARNESS-SHORT CORD

REAR HARNESS

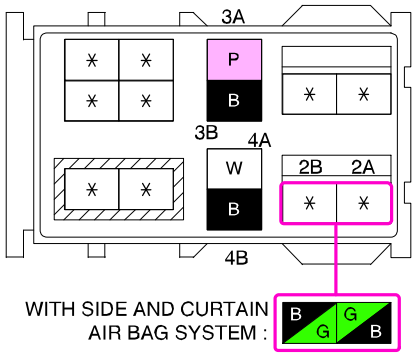


SHORT CORD

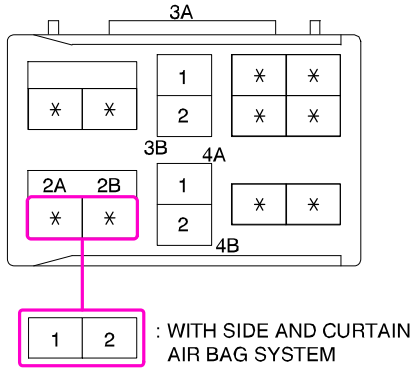


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

C-20
REAR HARNESS-SHORT CORD


REAR HARNESS

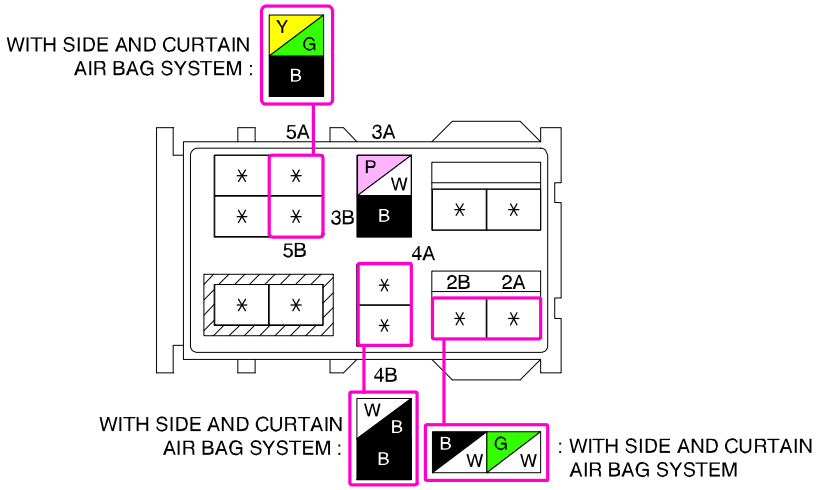

SHORT CORD

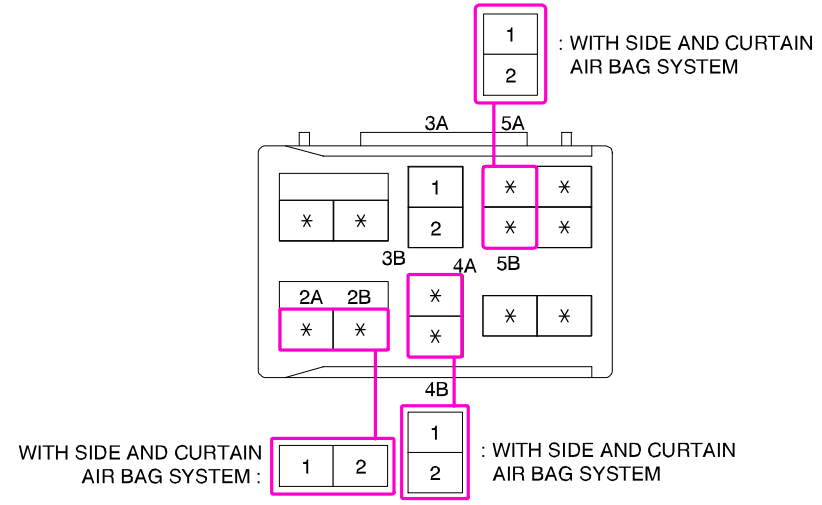


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

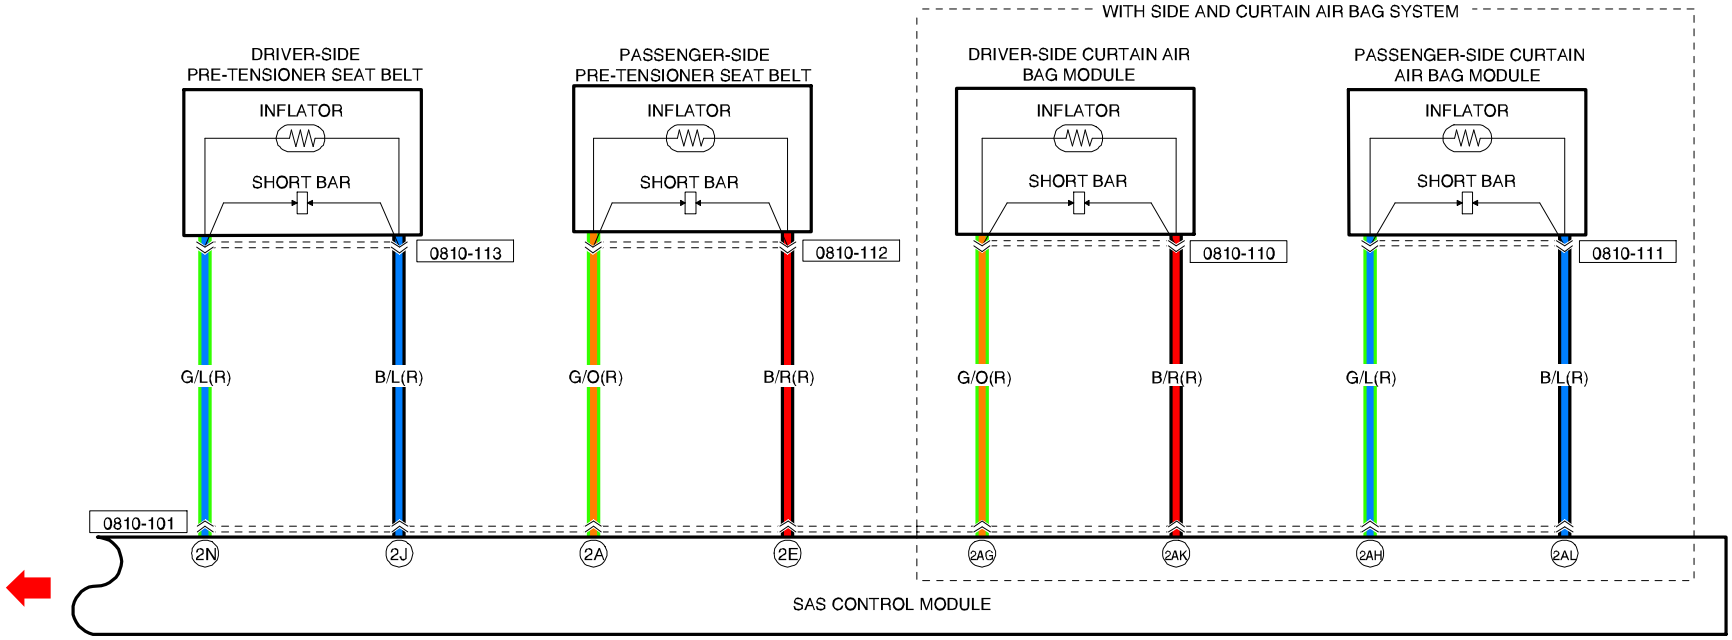


0810-101
SAS CONTROL MODULE


REAR HARNESS

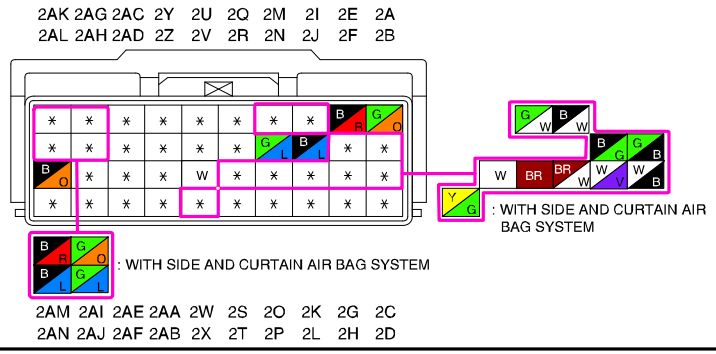


0810-110
DRIVER-SIDE CURTAIN AIR BAG MODULE




0810-111
PASSENGER-SIDE CURTAIN AIR BAG MODULE




0810-112
PASSENGER-SIDE PRE-TENSIONER SEAT BELT




0810-113
DRIVER-SIDE PRE-TENSIONER SEAT BELT



AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION)

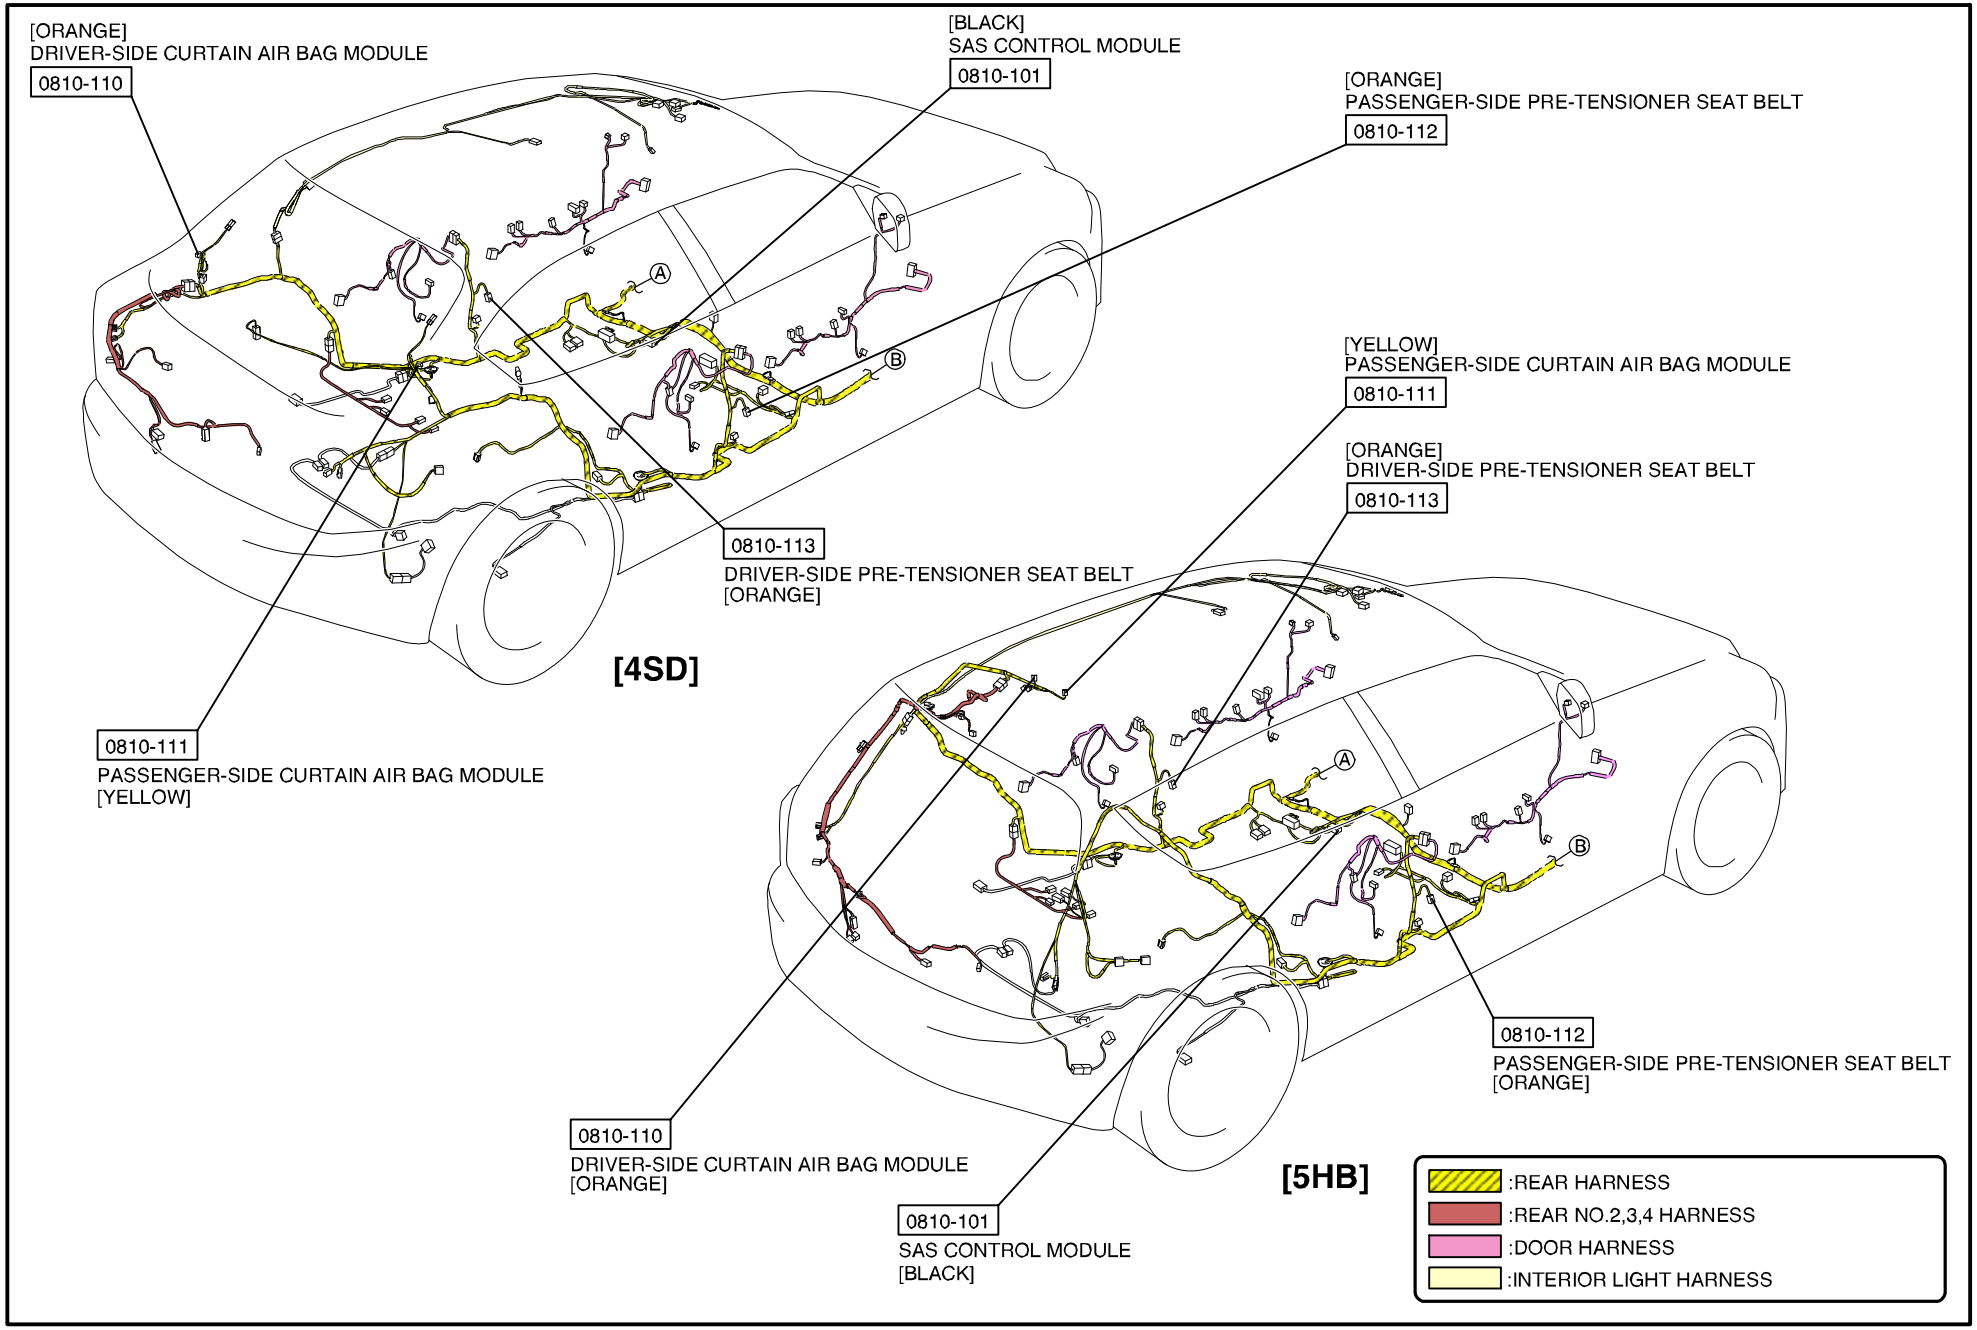

REAR WINDOW DEFROSTER

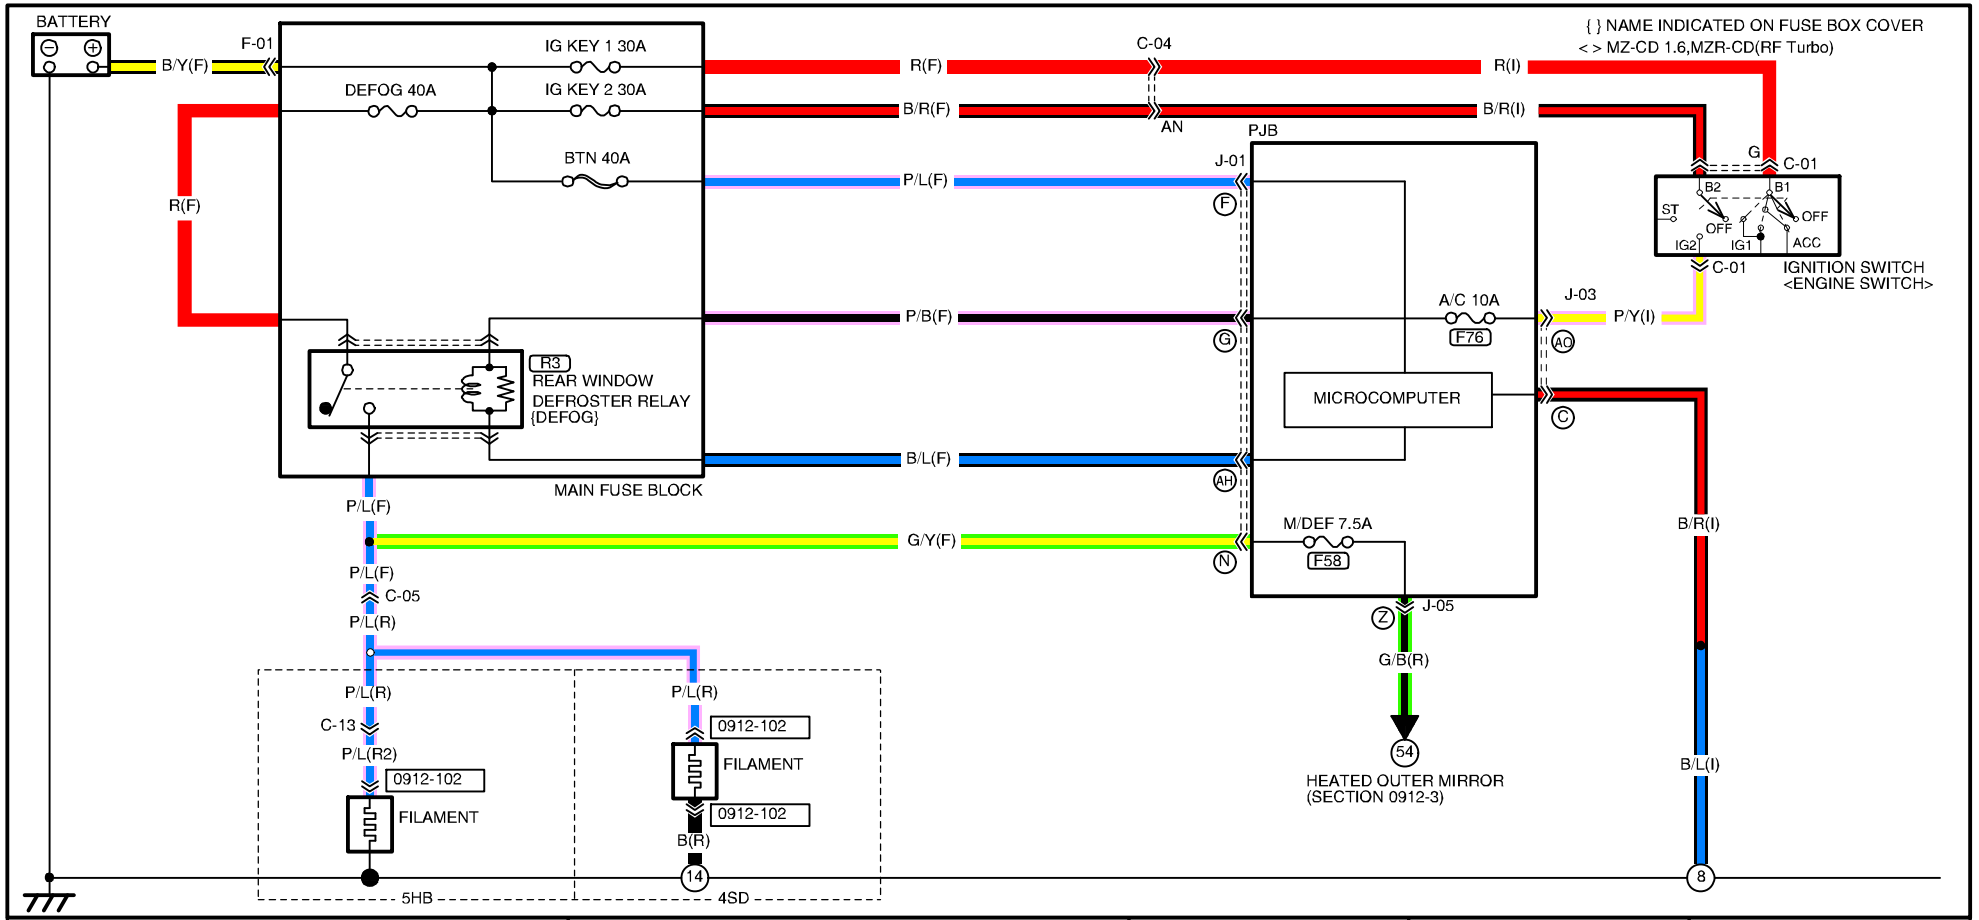


0912-102
FILAMENT

REAR HARNESS


(4SD)

REAR NO.2 HARNESS

(5HB)

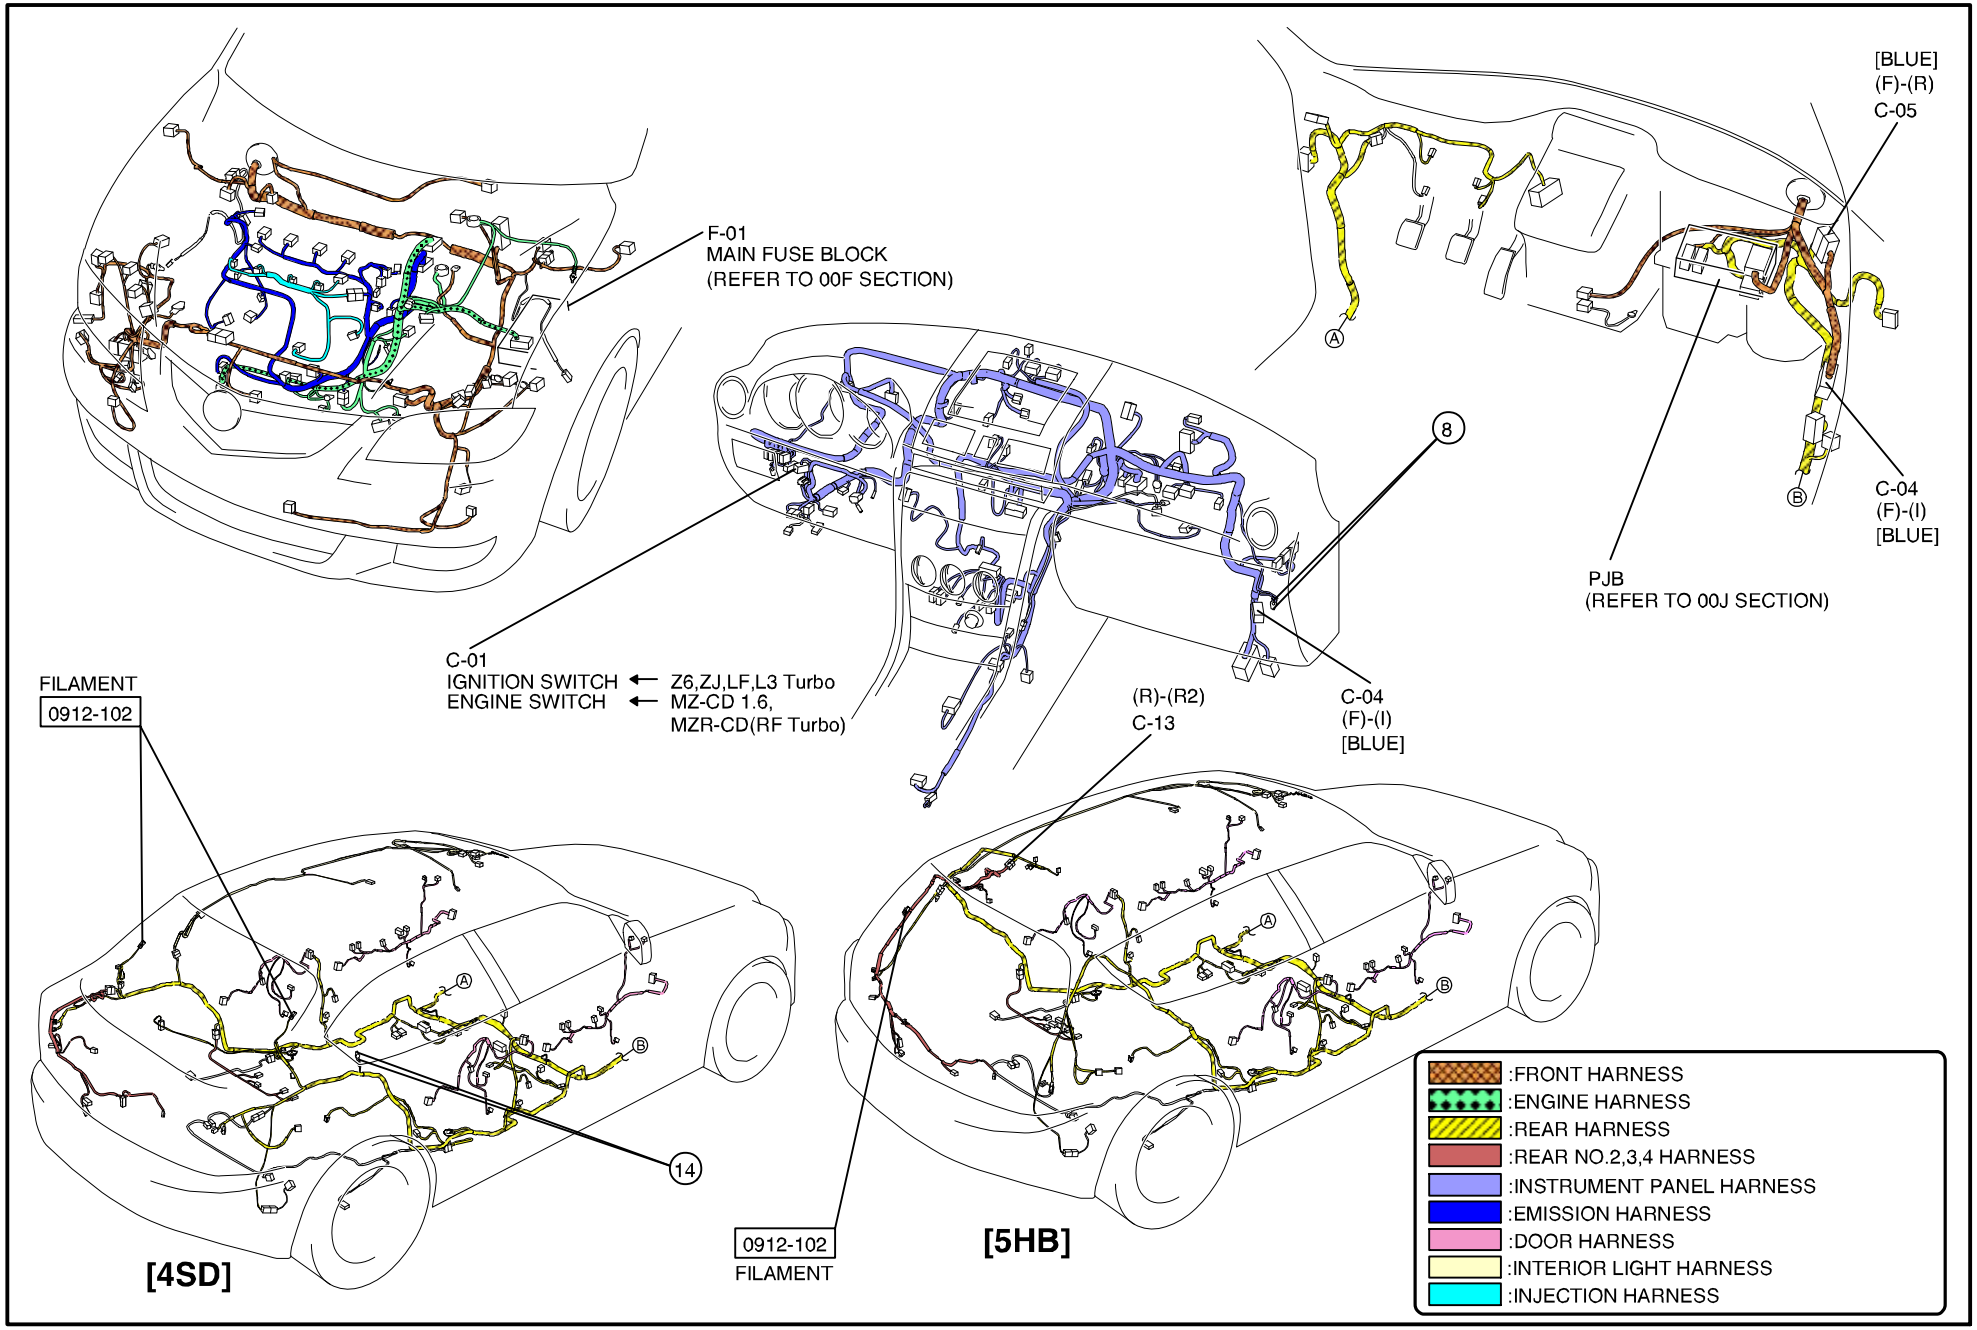

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
[BLUE]
(F)-(R)
C-05
C-04
(F)-(I)
[BLUE]
PJB
(REFER TO 00J SECTION)
8
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,
MZR-CD(RF Turbo)
C-04
(F)-(I)
[BLUE]
FILAMENT
0912-102
14
[4SD]
(R)-(R2)
C-13
0912-102
FILAMENT
[5HB]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

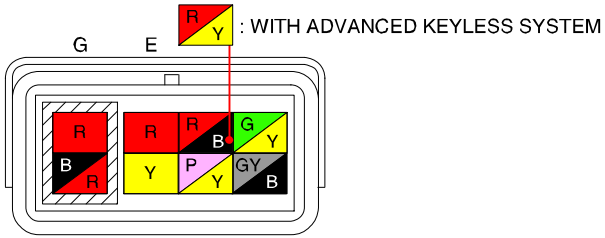


C-13
REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

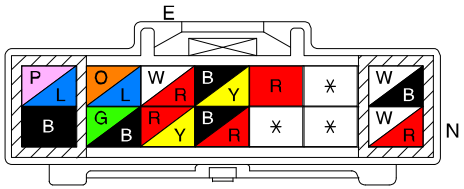


REAR NO.2 HARNESS

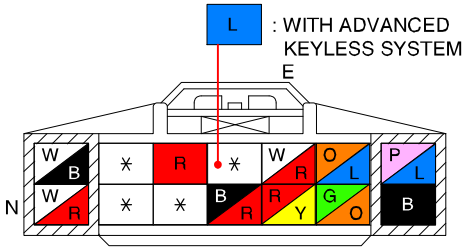


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

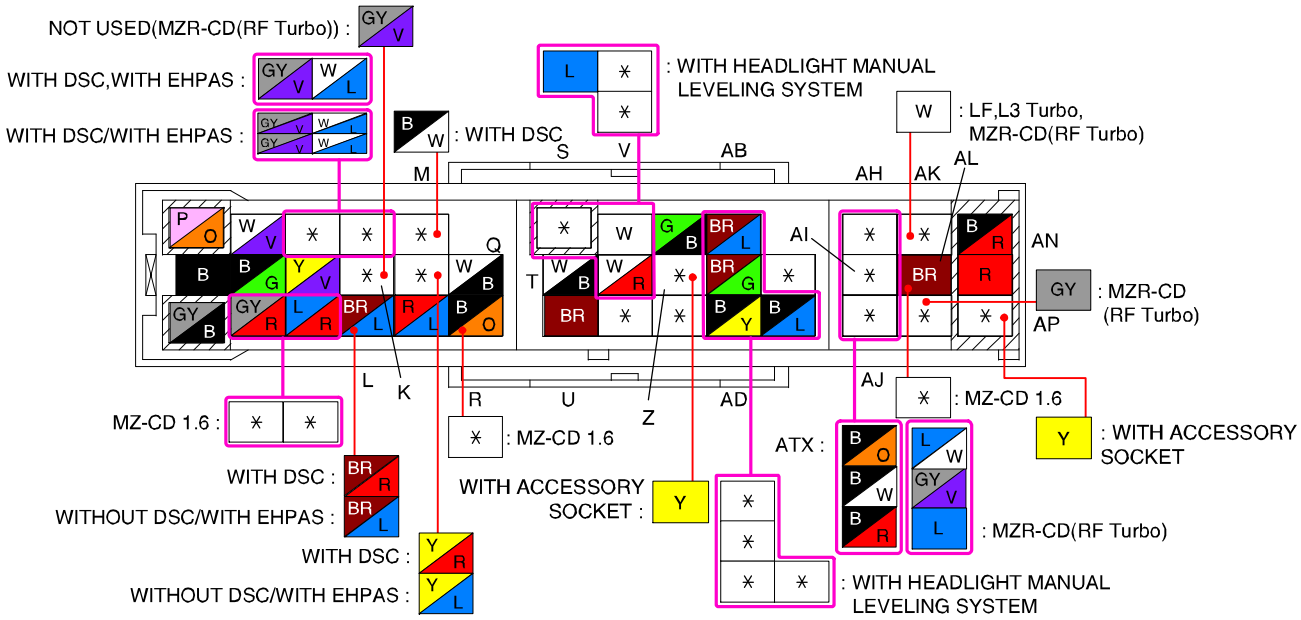


INSTRUMENT PANEL HARNESS

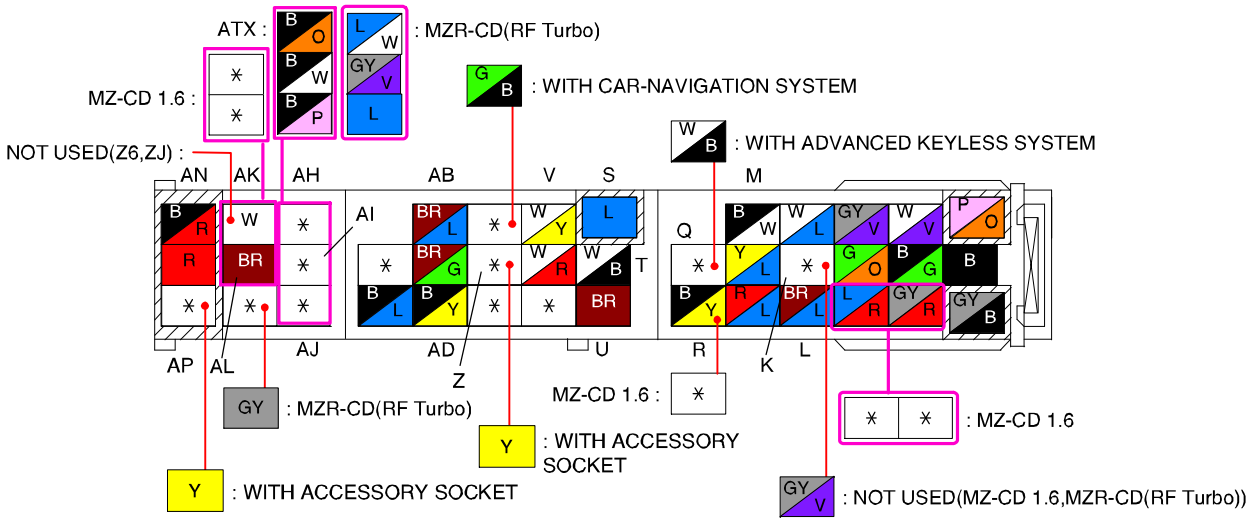


C-05
FRONT HARNESS-REAR HARNESS


FRONT HARNESS

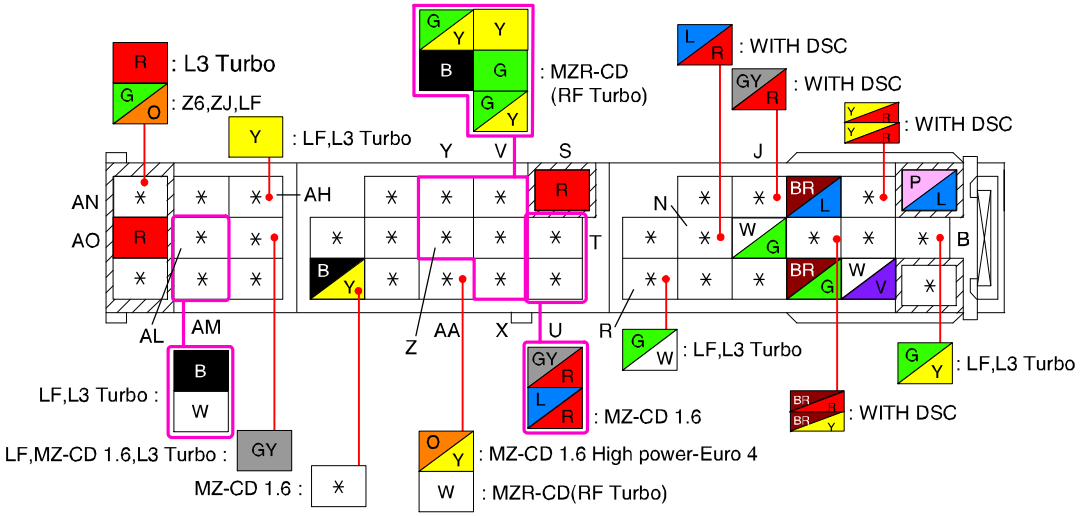


REAR HARNESS

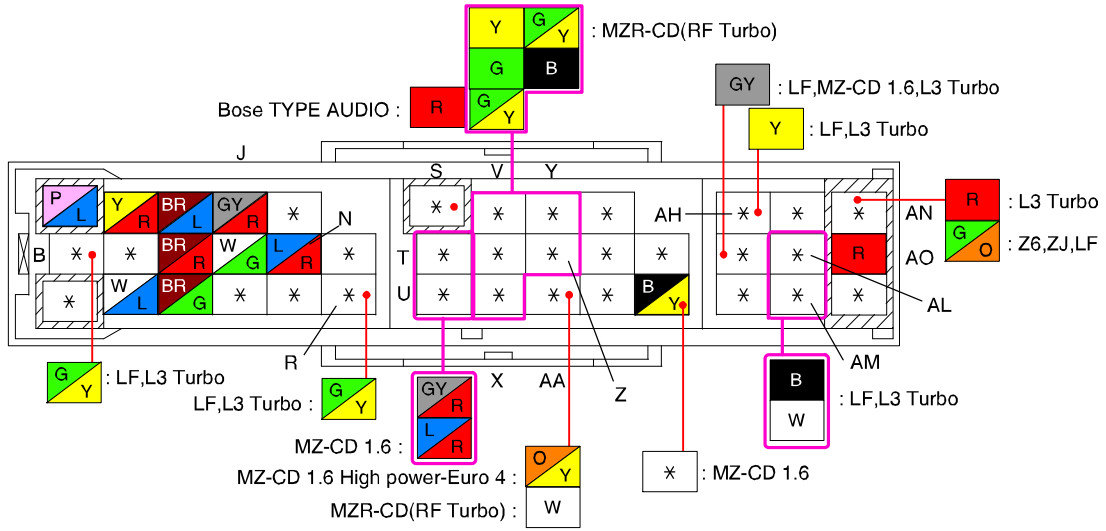


POWER WINDOW SYSTEM

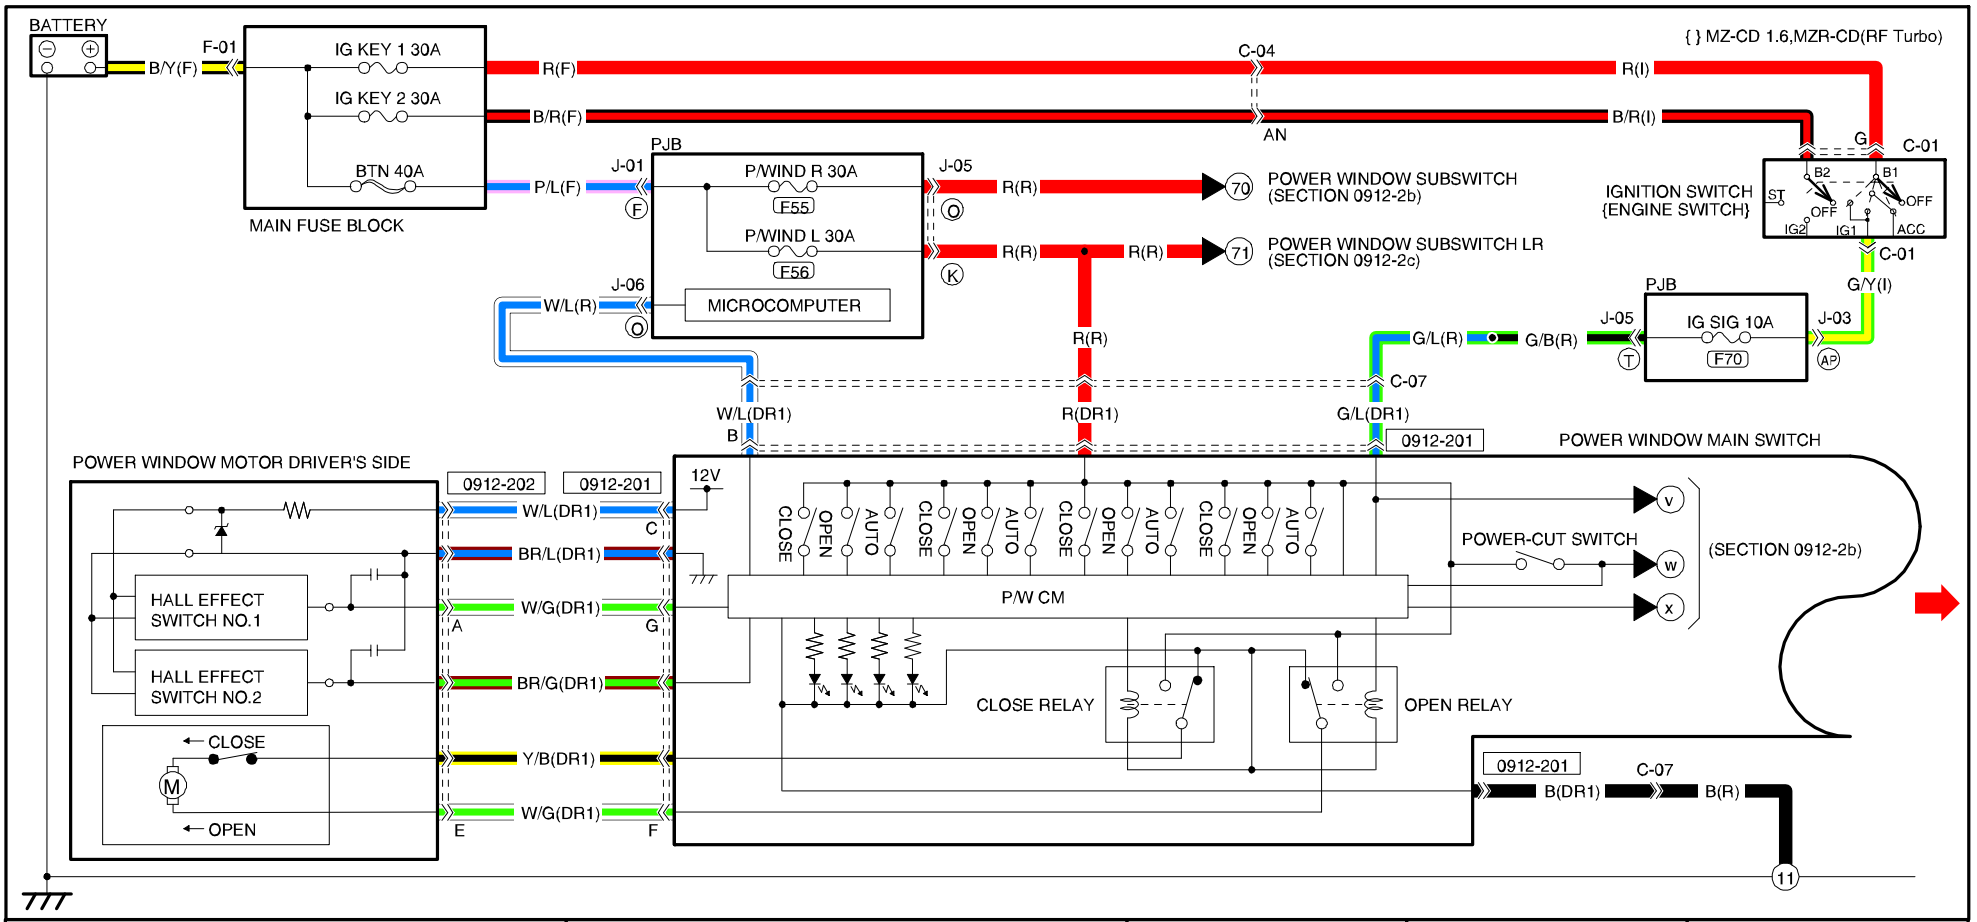


0912-201
POWER WINDOW MAIN SWITCH

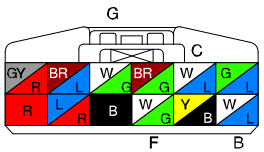


0912-202
POWER WINDOW MOTOR DRIVER'S SIDE



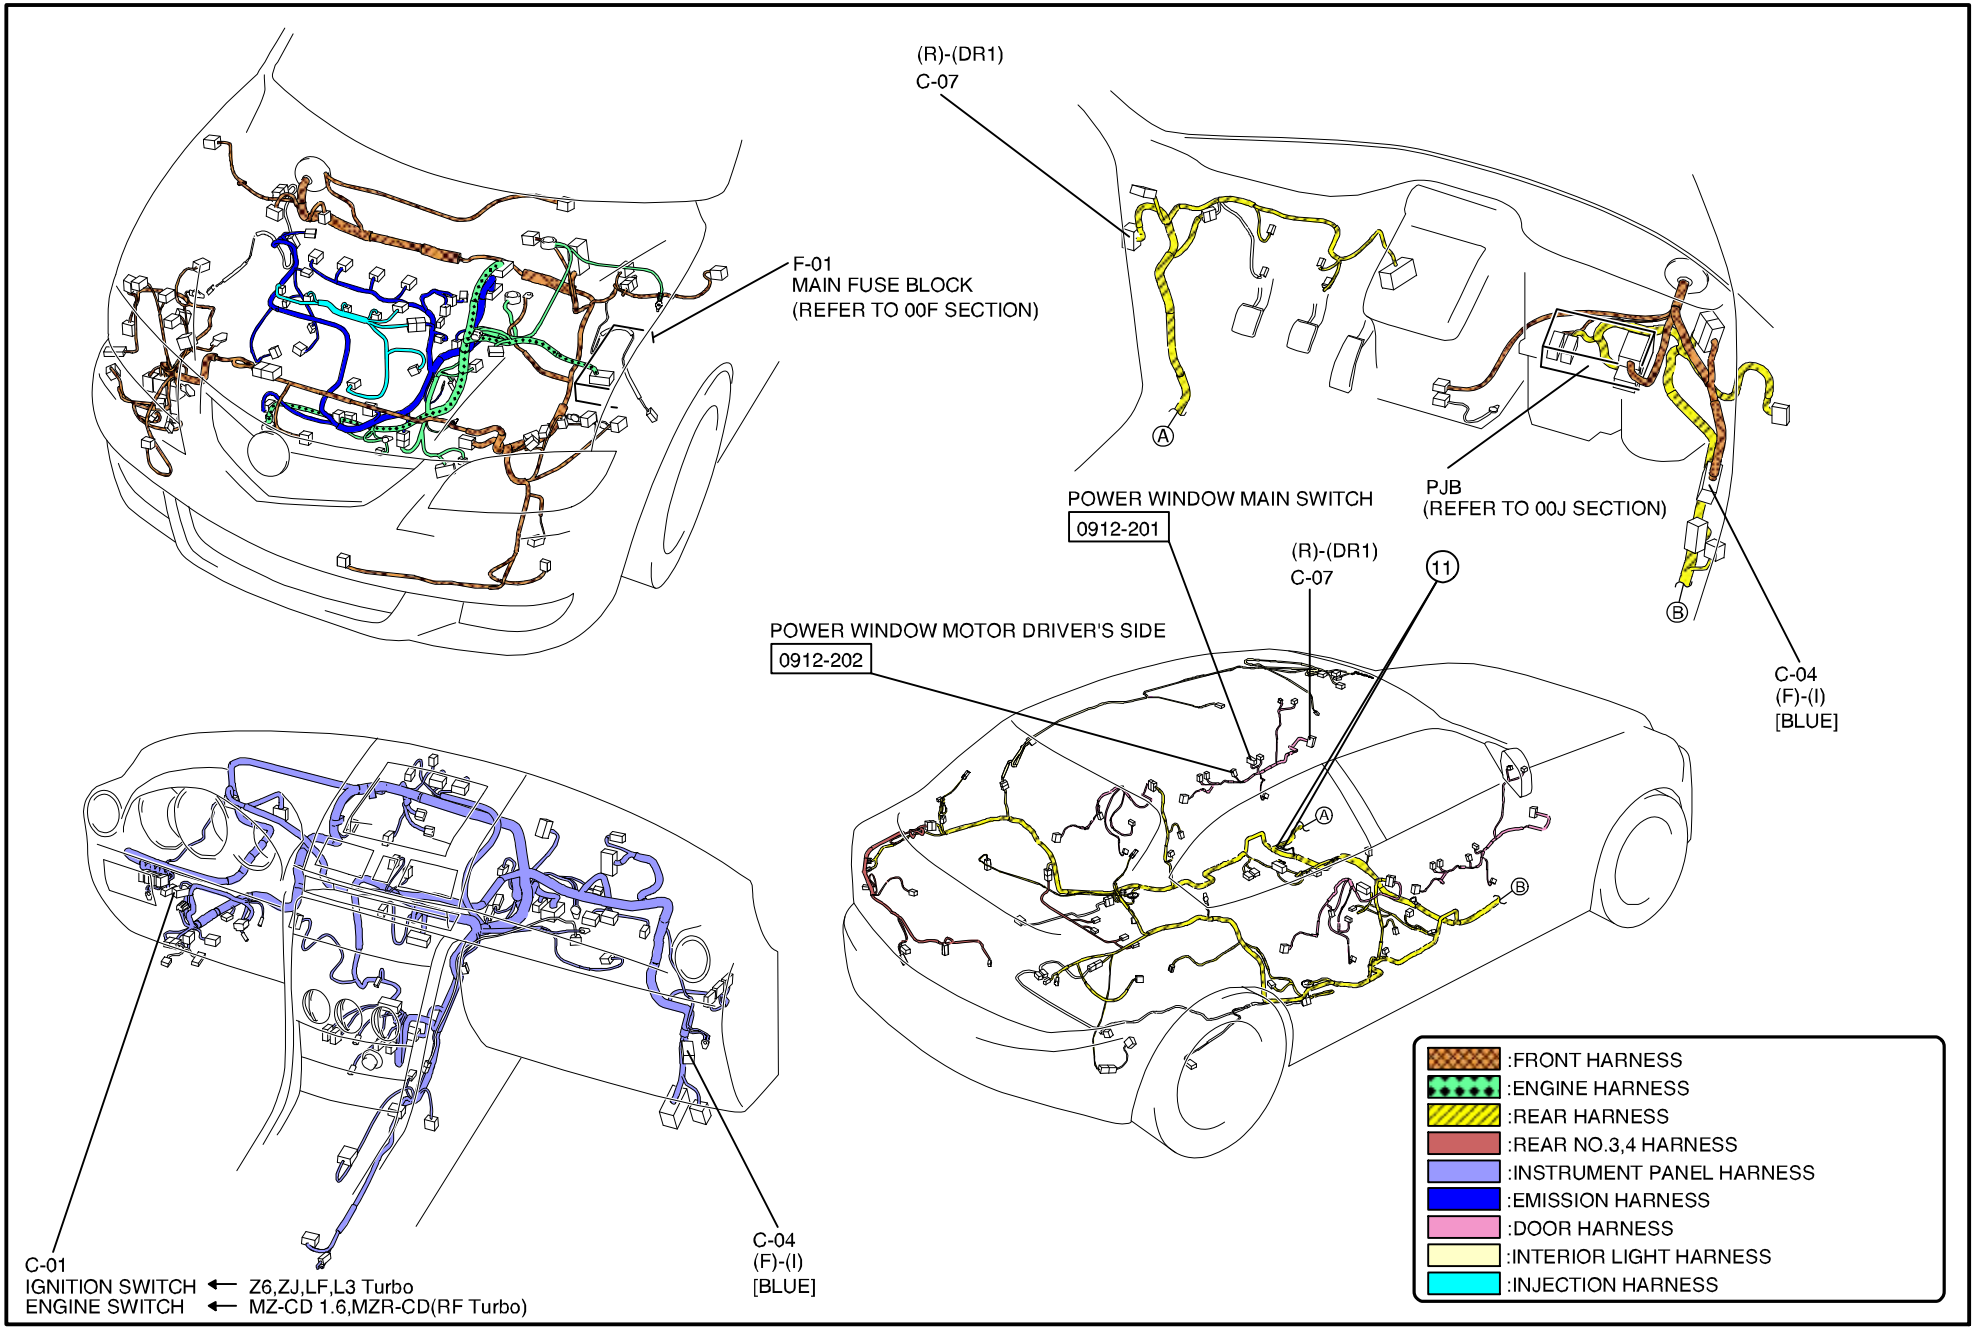

(R)-(DR1)
C-07
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
POWER WINDOW MAIN SWITCH
0912-201
PJB
(REFER TO 00J SECTION)
(R)-(DR1)
C-07
11
POWER WINDOW MOTOR DRIVER'S SIDE
0912-202
C-04
(F)-(I)
[BLUE]
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

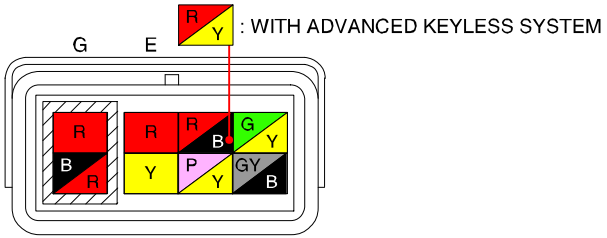


C-07
REAR HARNESS-DOOR NO.1 HARNESS

REAR HARNESS

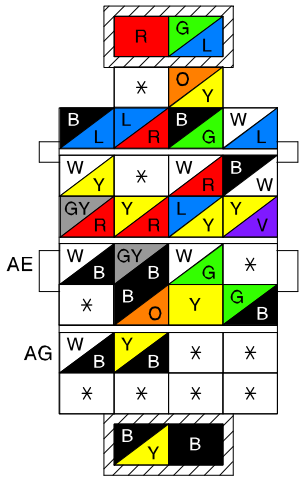


DOOR NO.1 HARNESS

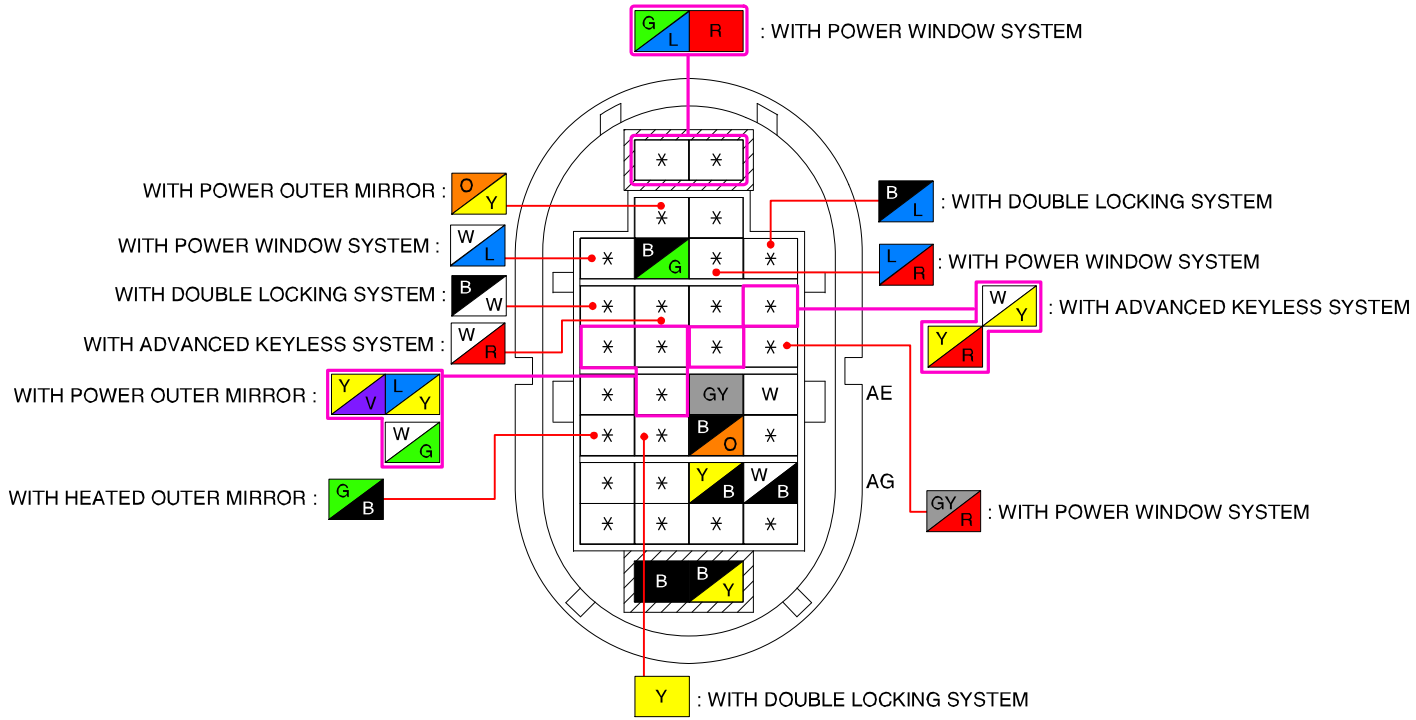



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

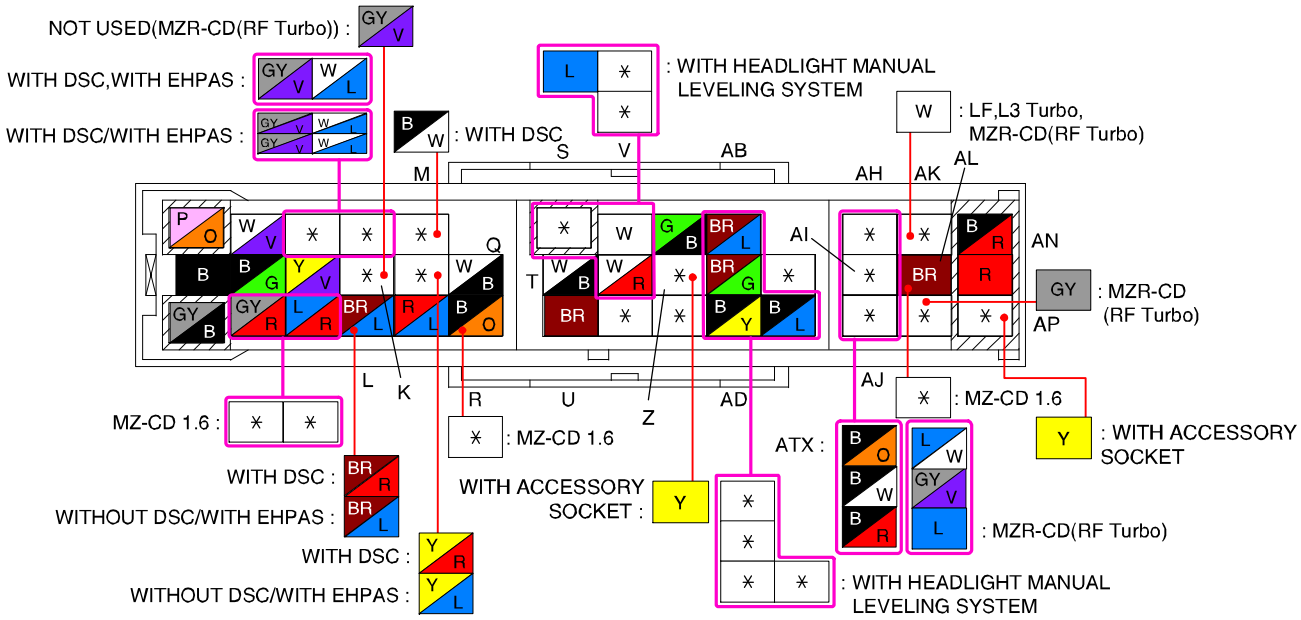


INSTRUMENT PANEL HARNESS

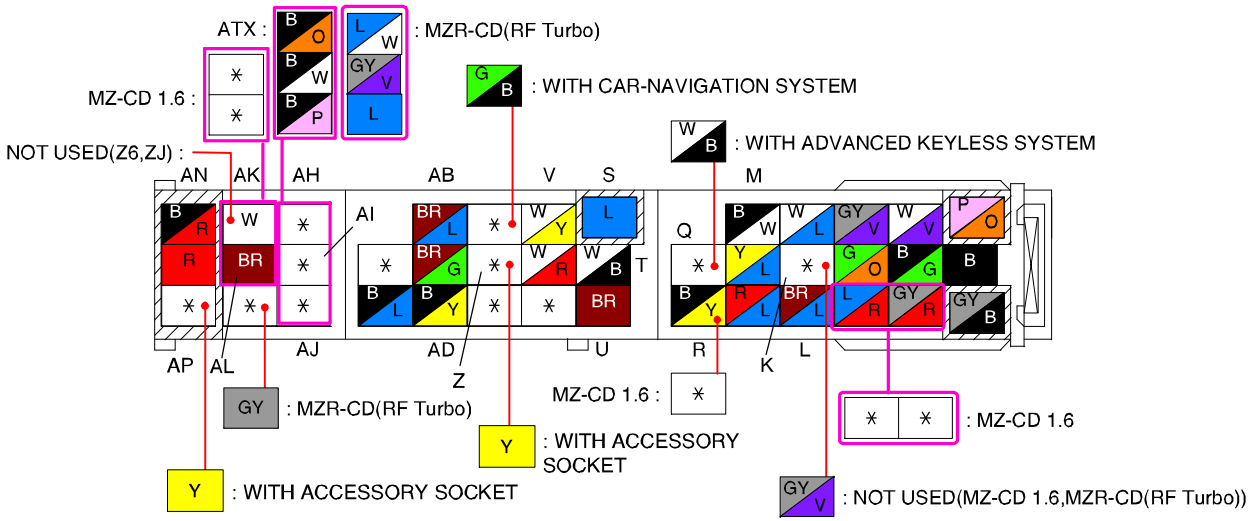


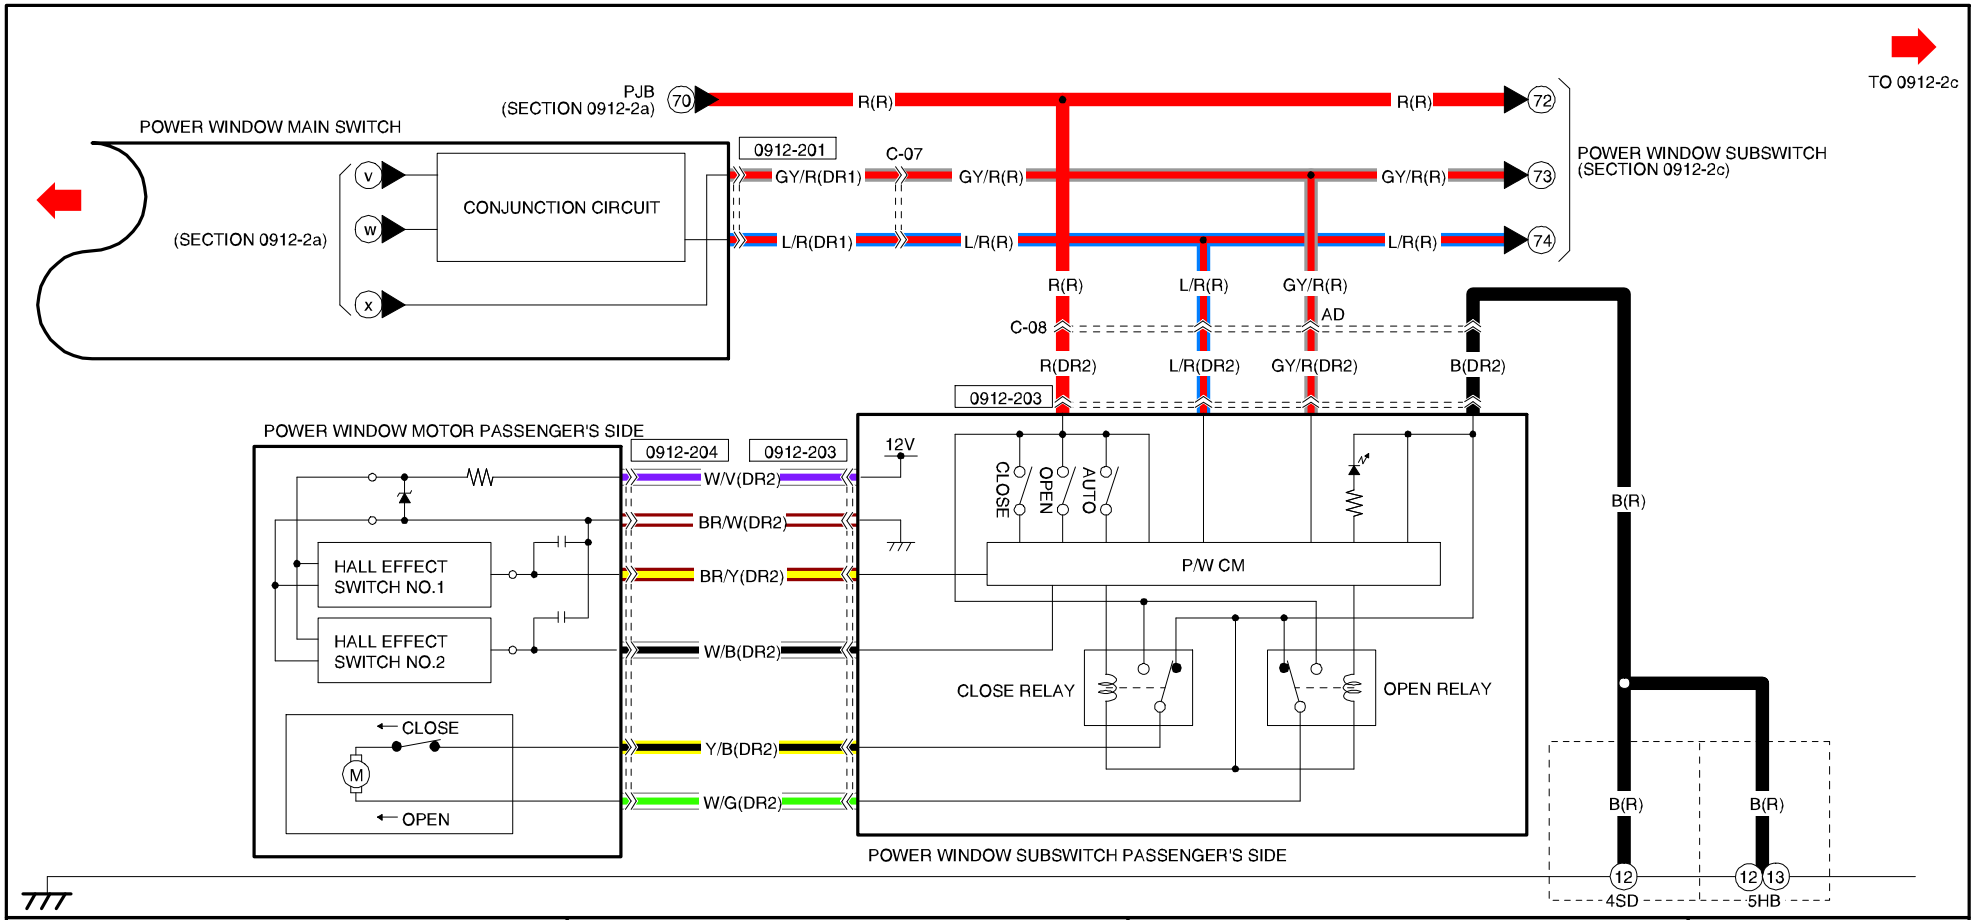


0912-201
POWER WINDOW MAIN SWITCH

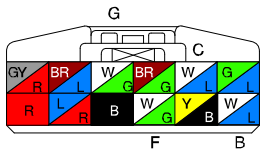


0912-203
POWER WINDOW SUBSWITCH PASSENGER'S SIDE




0912-204
POWER WINDOW MOTOR PASSENGER'S SIDE




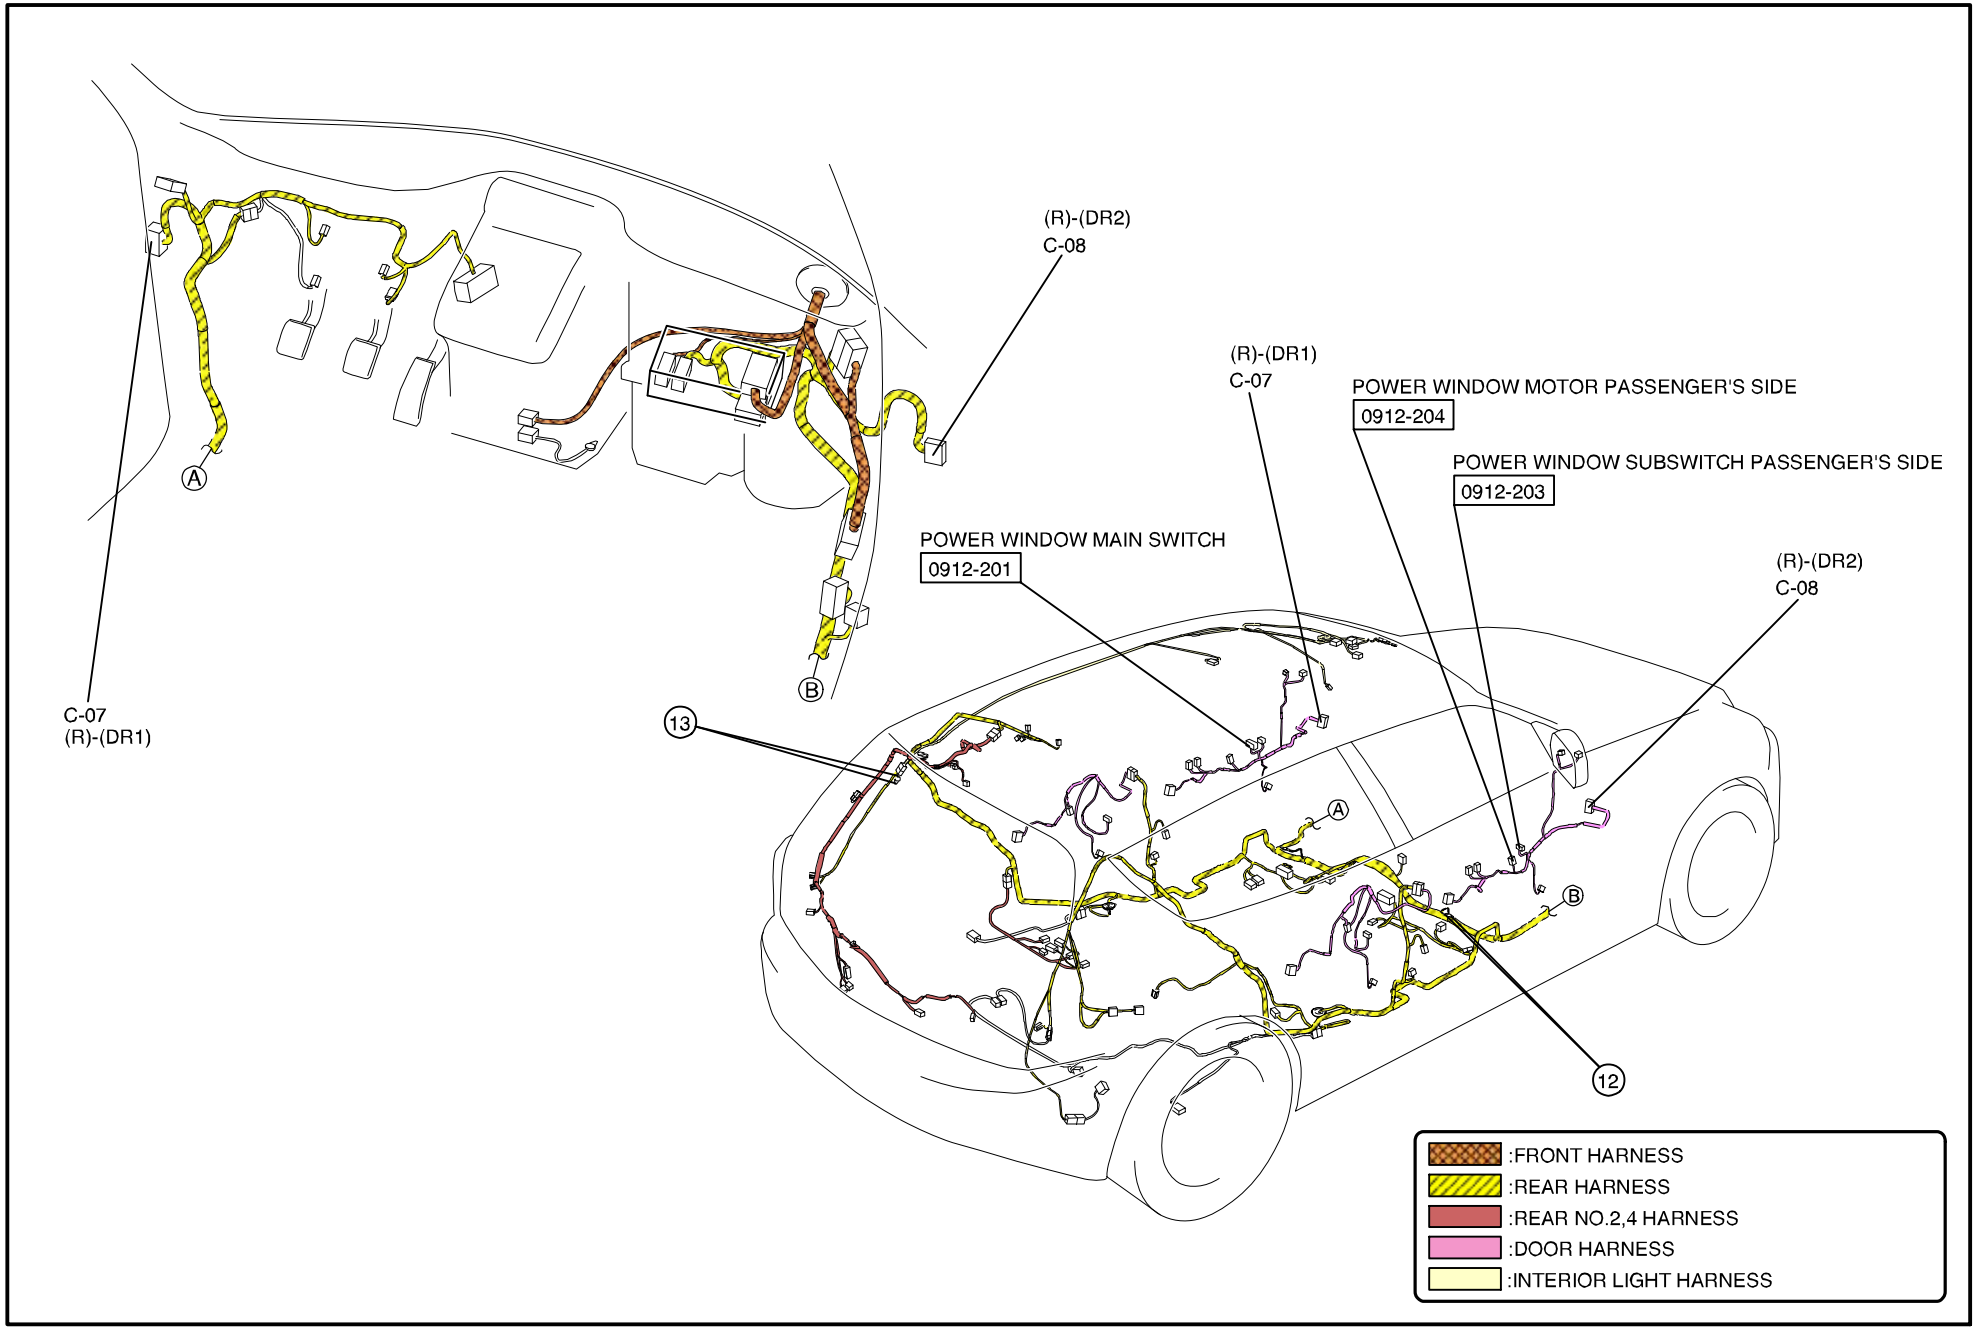

(R)-(DR2)
C-08
(R)-(DR1)
C-07
POWER WINDOW MOTOR PASSENGER'S SIDE
0912-204
POWER WINDOW SUBSWITCH PASSENGER'S SIDE
0912-203
POWER WINDOW MAIN SWITCH
0912-201
(R)-(DR2)
C-08
C-07
(R)-(DR1)
A
B
13
12
:FRONT HARNESS
:REAR HARNESS
:REAR NO.2,4 HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-07
REAR HARNESS-DOOR NO.1 HARNESS

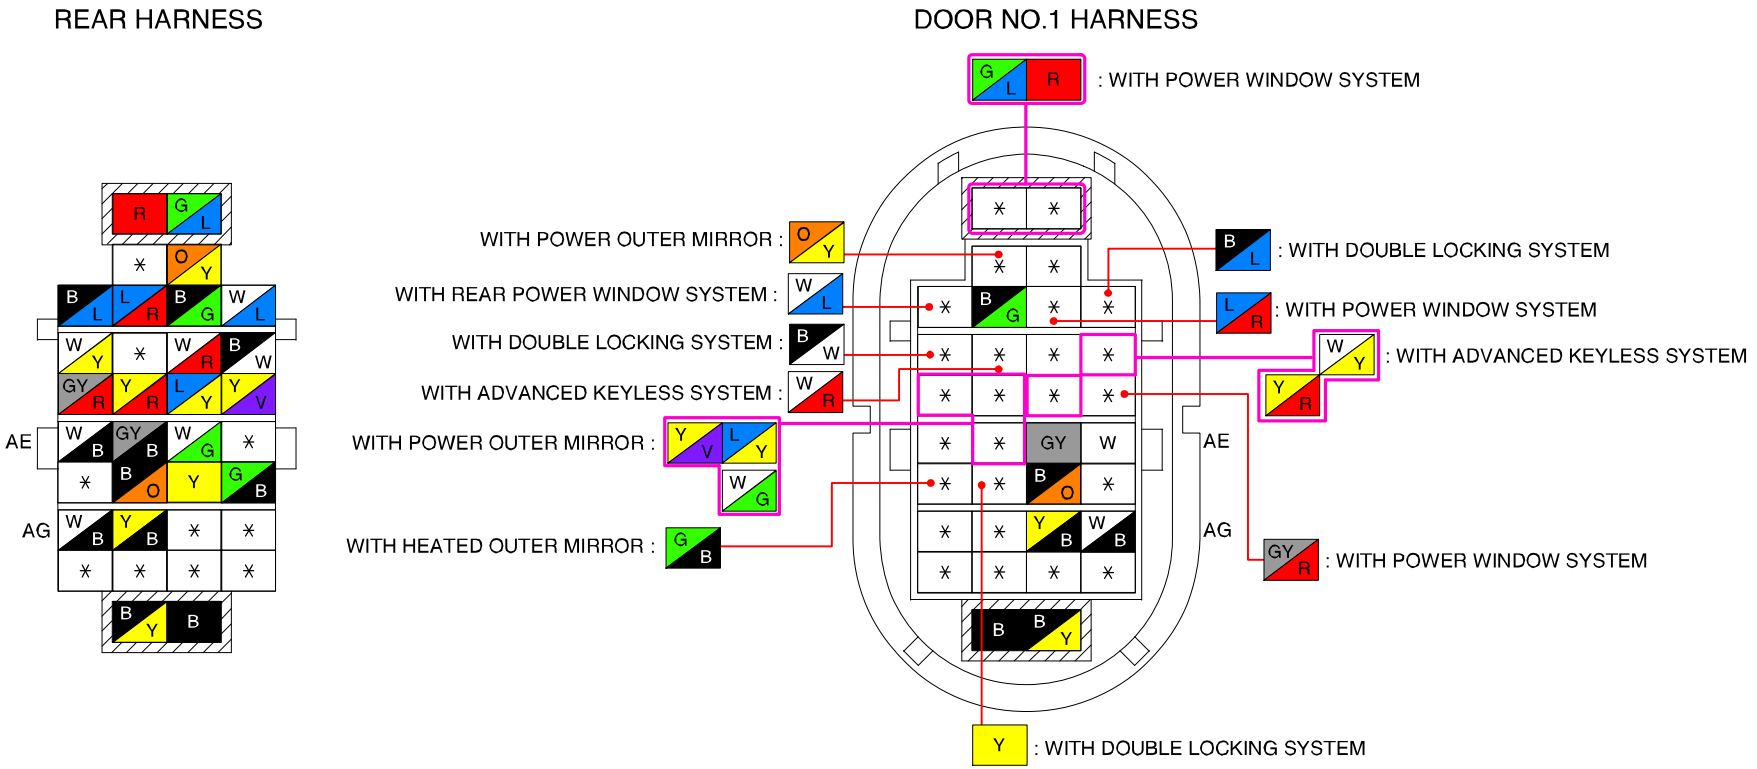


C-08
REAR HARNESS-DOOR NO.2 HARNESS

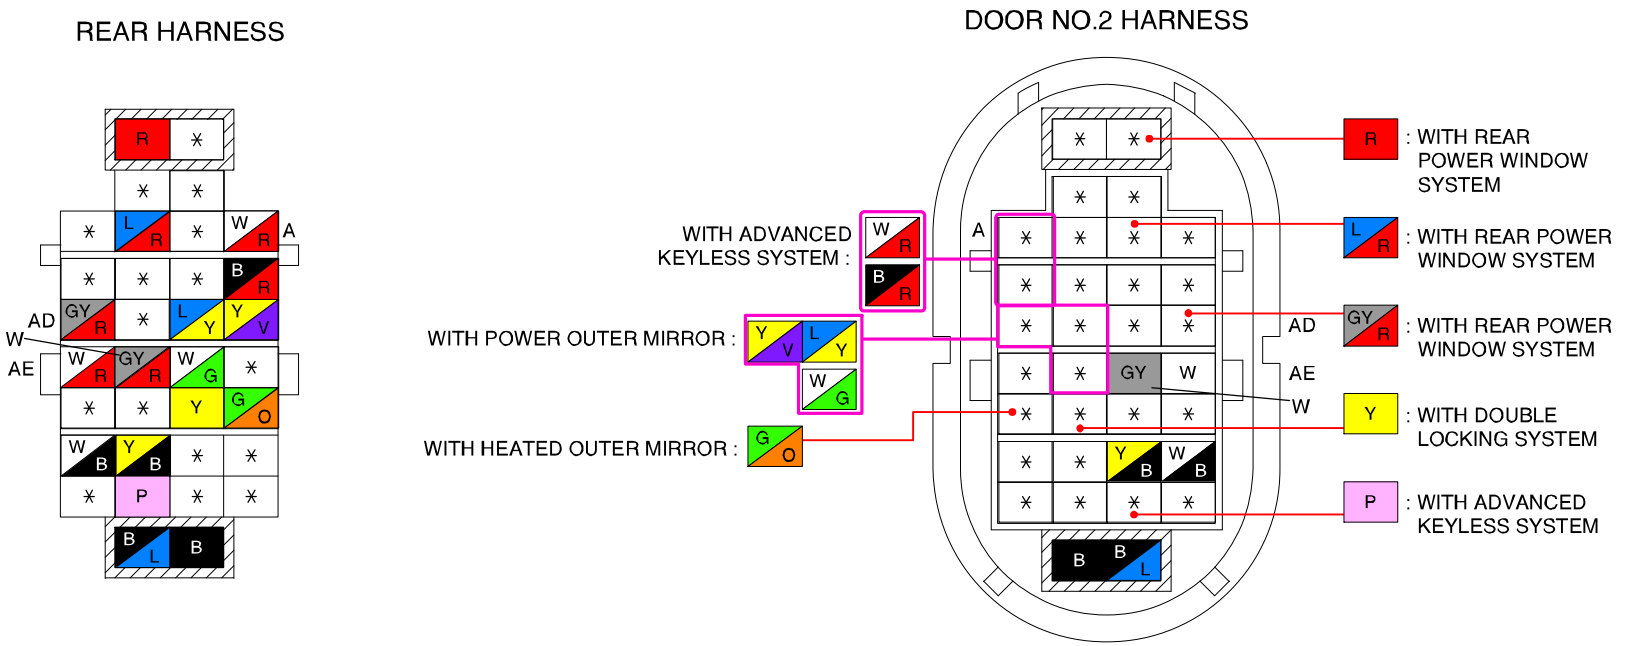


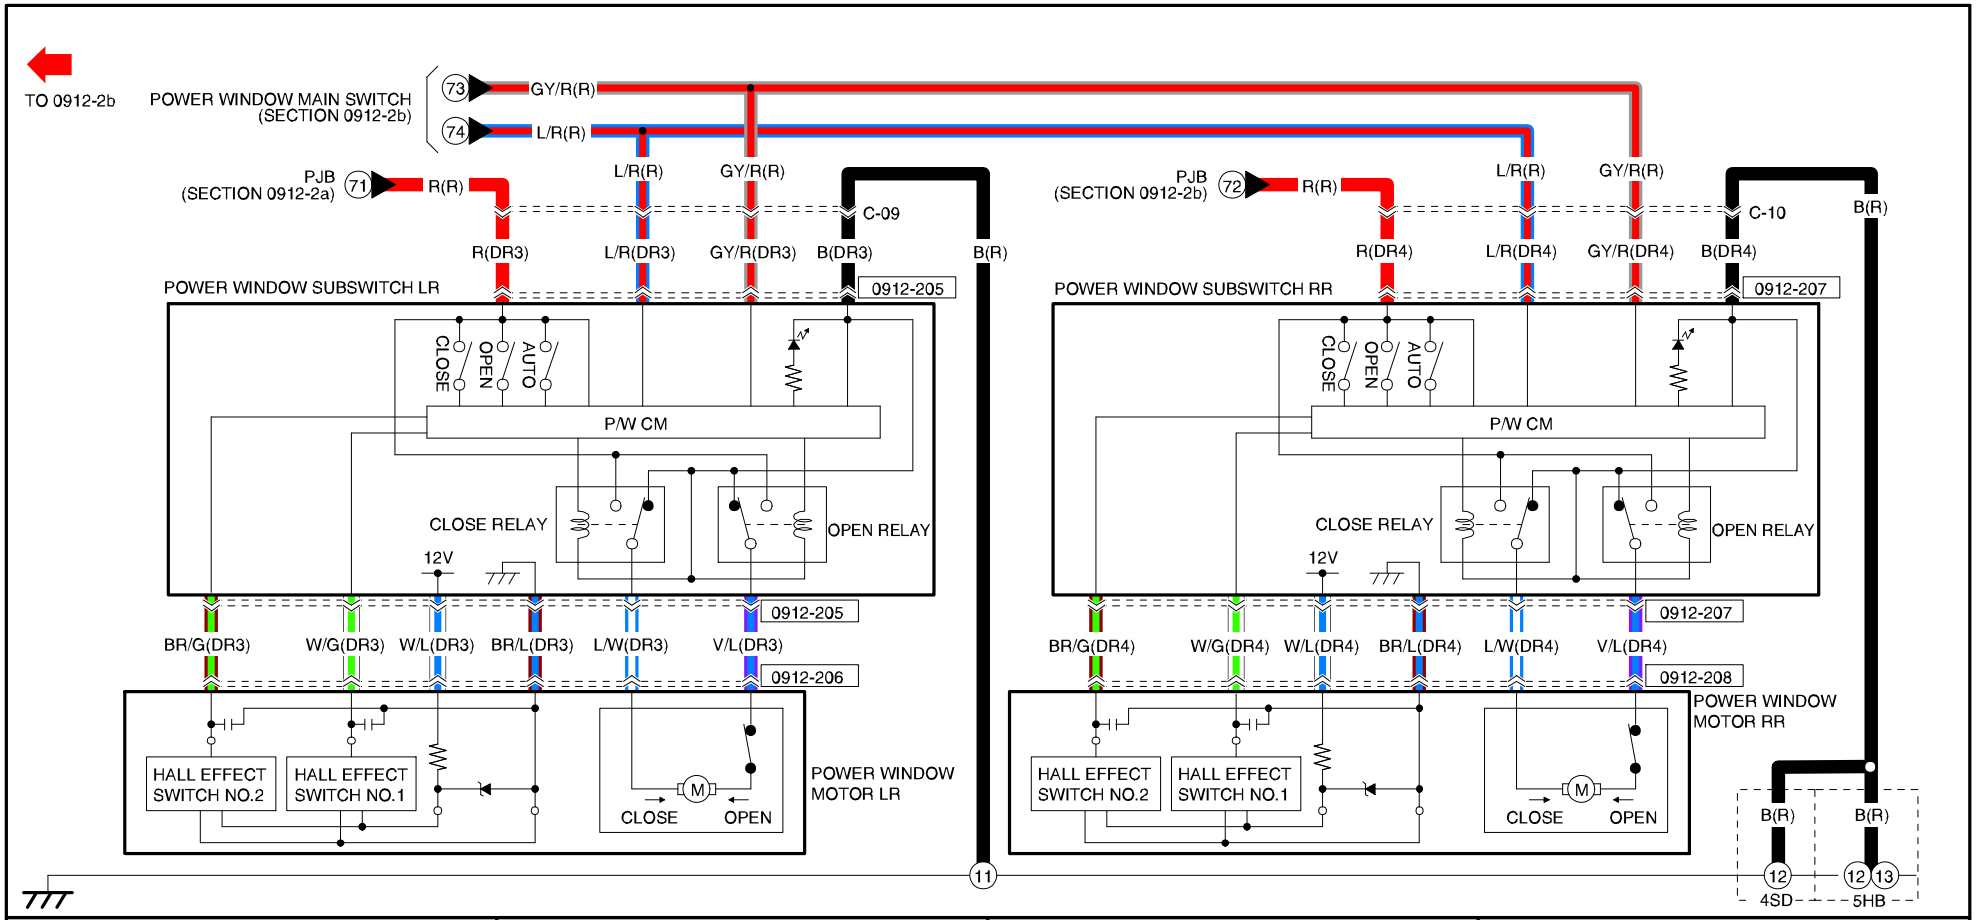


0912-205
POWER WINDOW SUBSWITCH LR




0912-206
POWER WINDOW MOTOR LR




0912-207
POWER WINDOW SUBSWITCH RR




0912-208
POWER WINDOW MOTOR RR



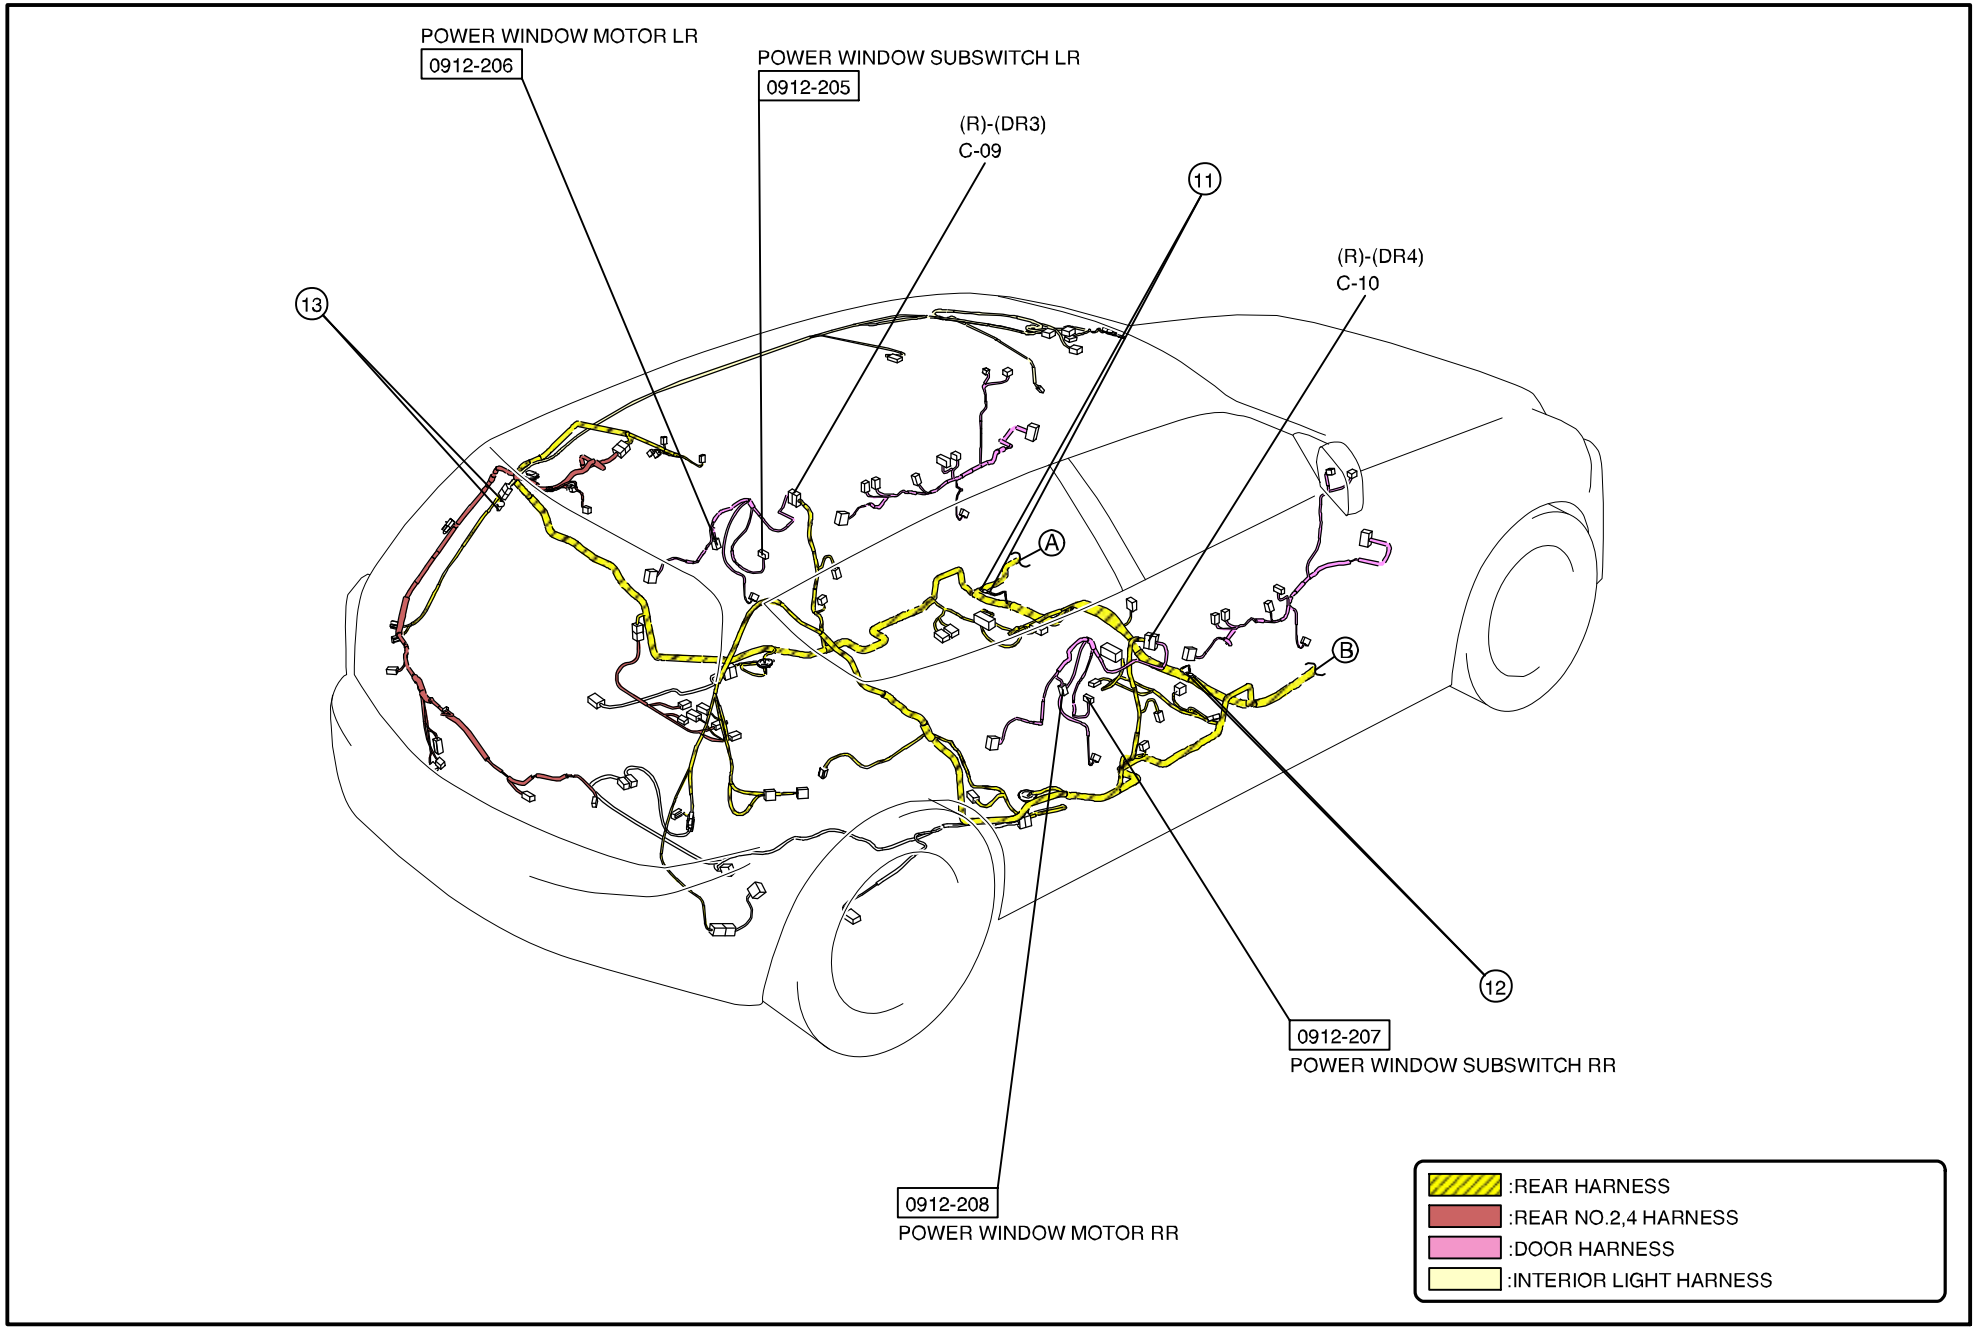

POWER WINDOW MOTOR LR
0912-206
POWER WINDOW SUBSWITCH LR
0912-205
(R)-(DR3)
C-09
11
(R)-(DR4)
C-10
13
A
B
12
0912-207
POWER WINDOW SUBSWITCH RR
0912-208
POWER WINDOW MOTOR RR
:REAR HARNESS
:REAR NO.2,4 HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-09
REAR HARNESS-DOOR NO.3 HARNESS

REAR HARNESS

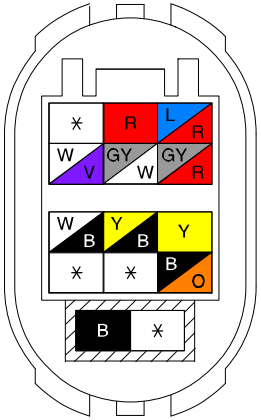


DOOR NO.3 HARNESS

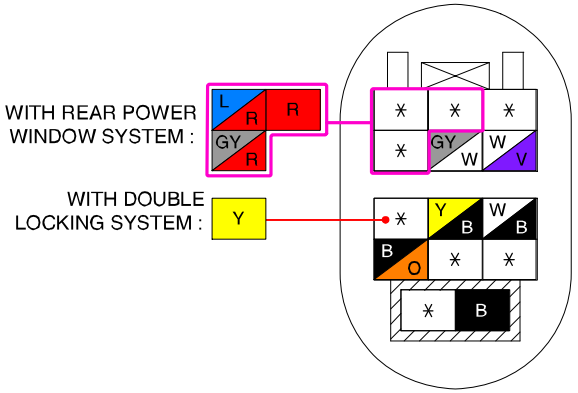


C-10
REAR HARNESS-DOOR NO.4 HARNESS


REAR HARNESS

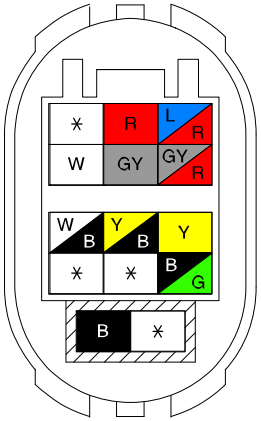


DOOR NO.4 HARNESS

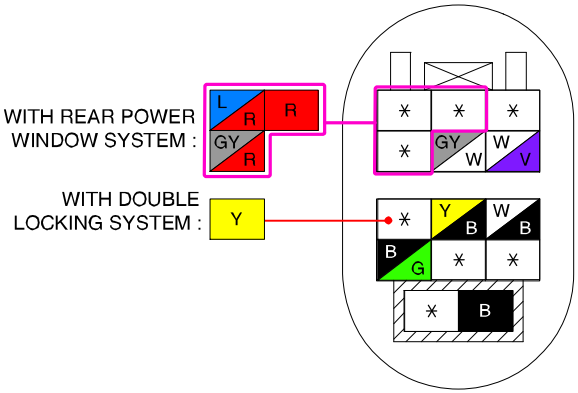


POWER OUTER MIRROR/HEATED OUTER MIRROR

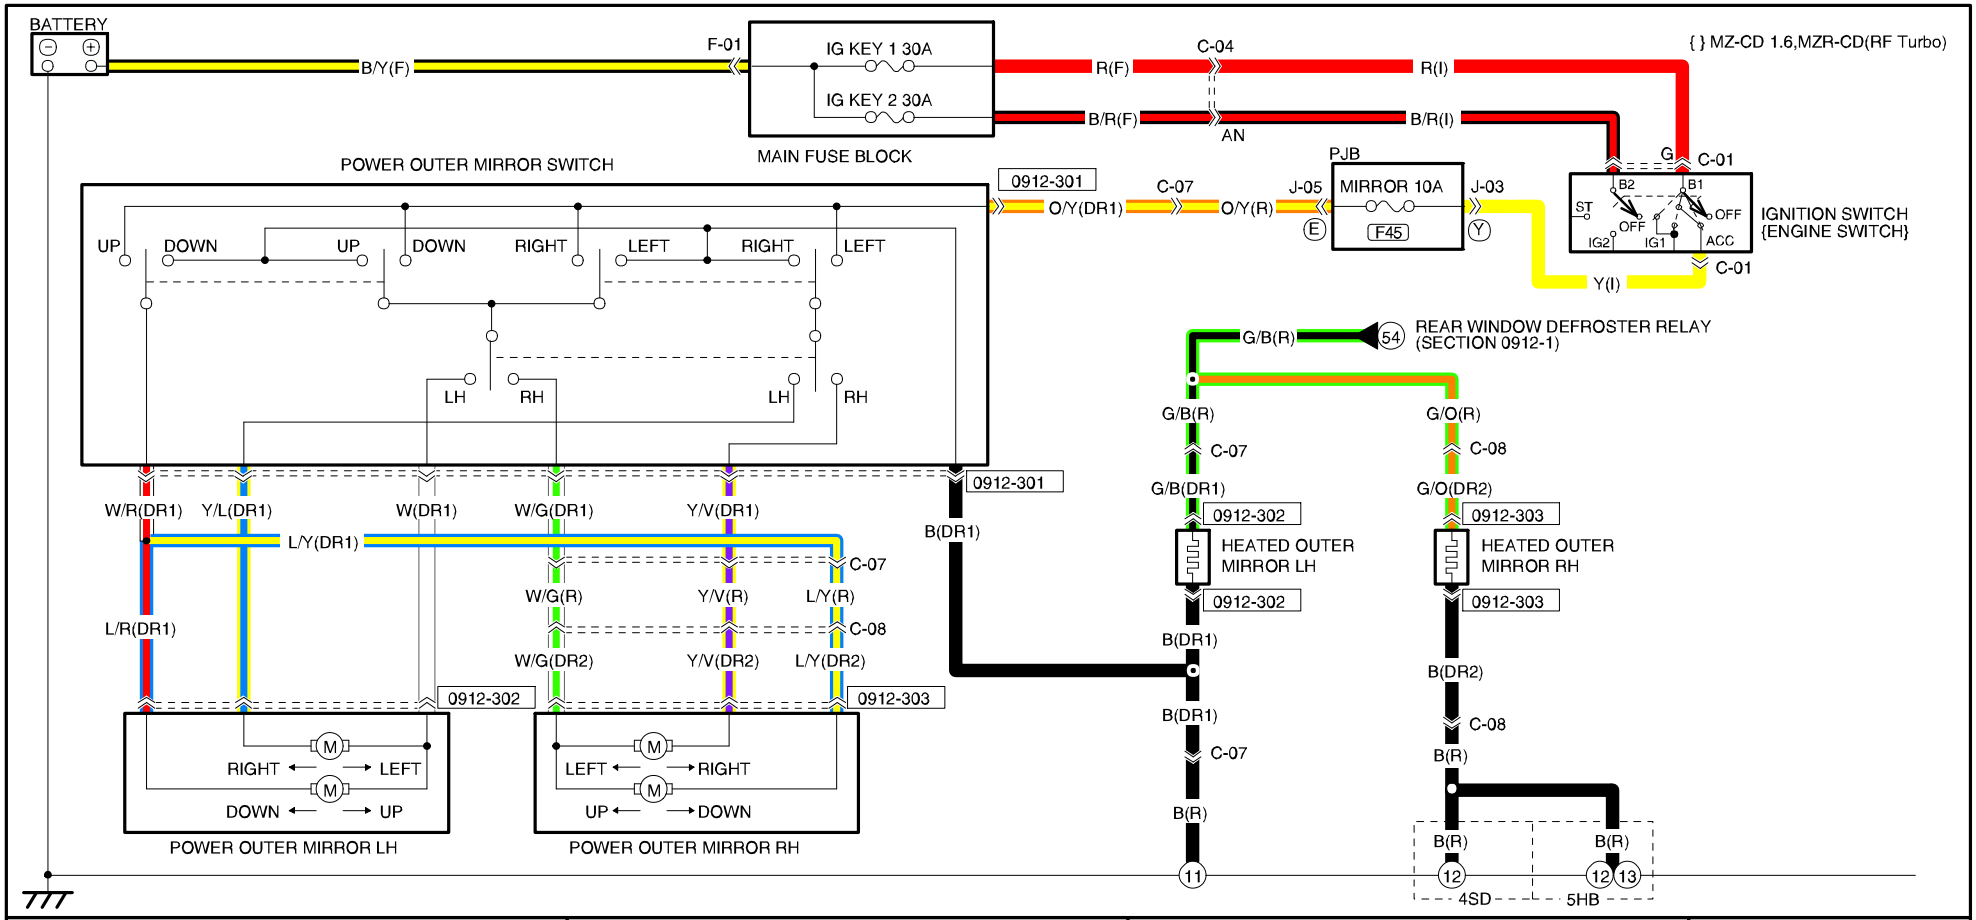


0912-301
POWER OUTER MIRROR SWITCH




0912-302
POWER OUTER MIRROR LH/
HEATED OUTER MIRROR LH




0912-303
POWER OUTER MIRROR RH/
HEATED OUTER MIRROR RH



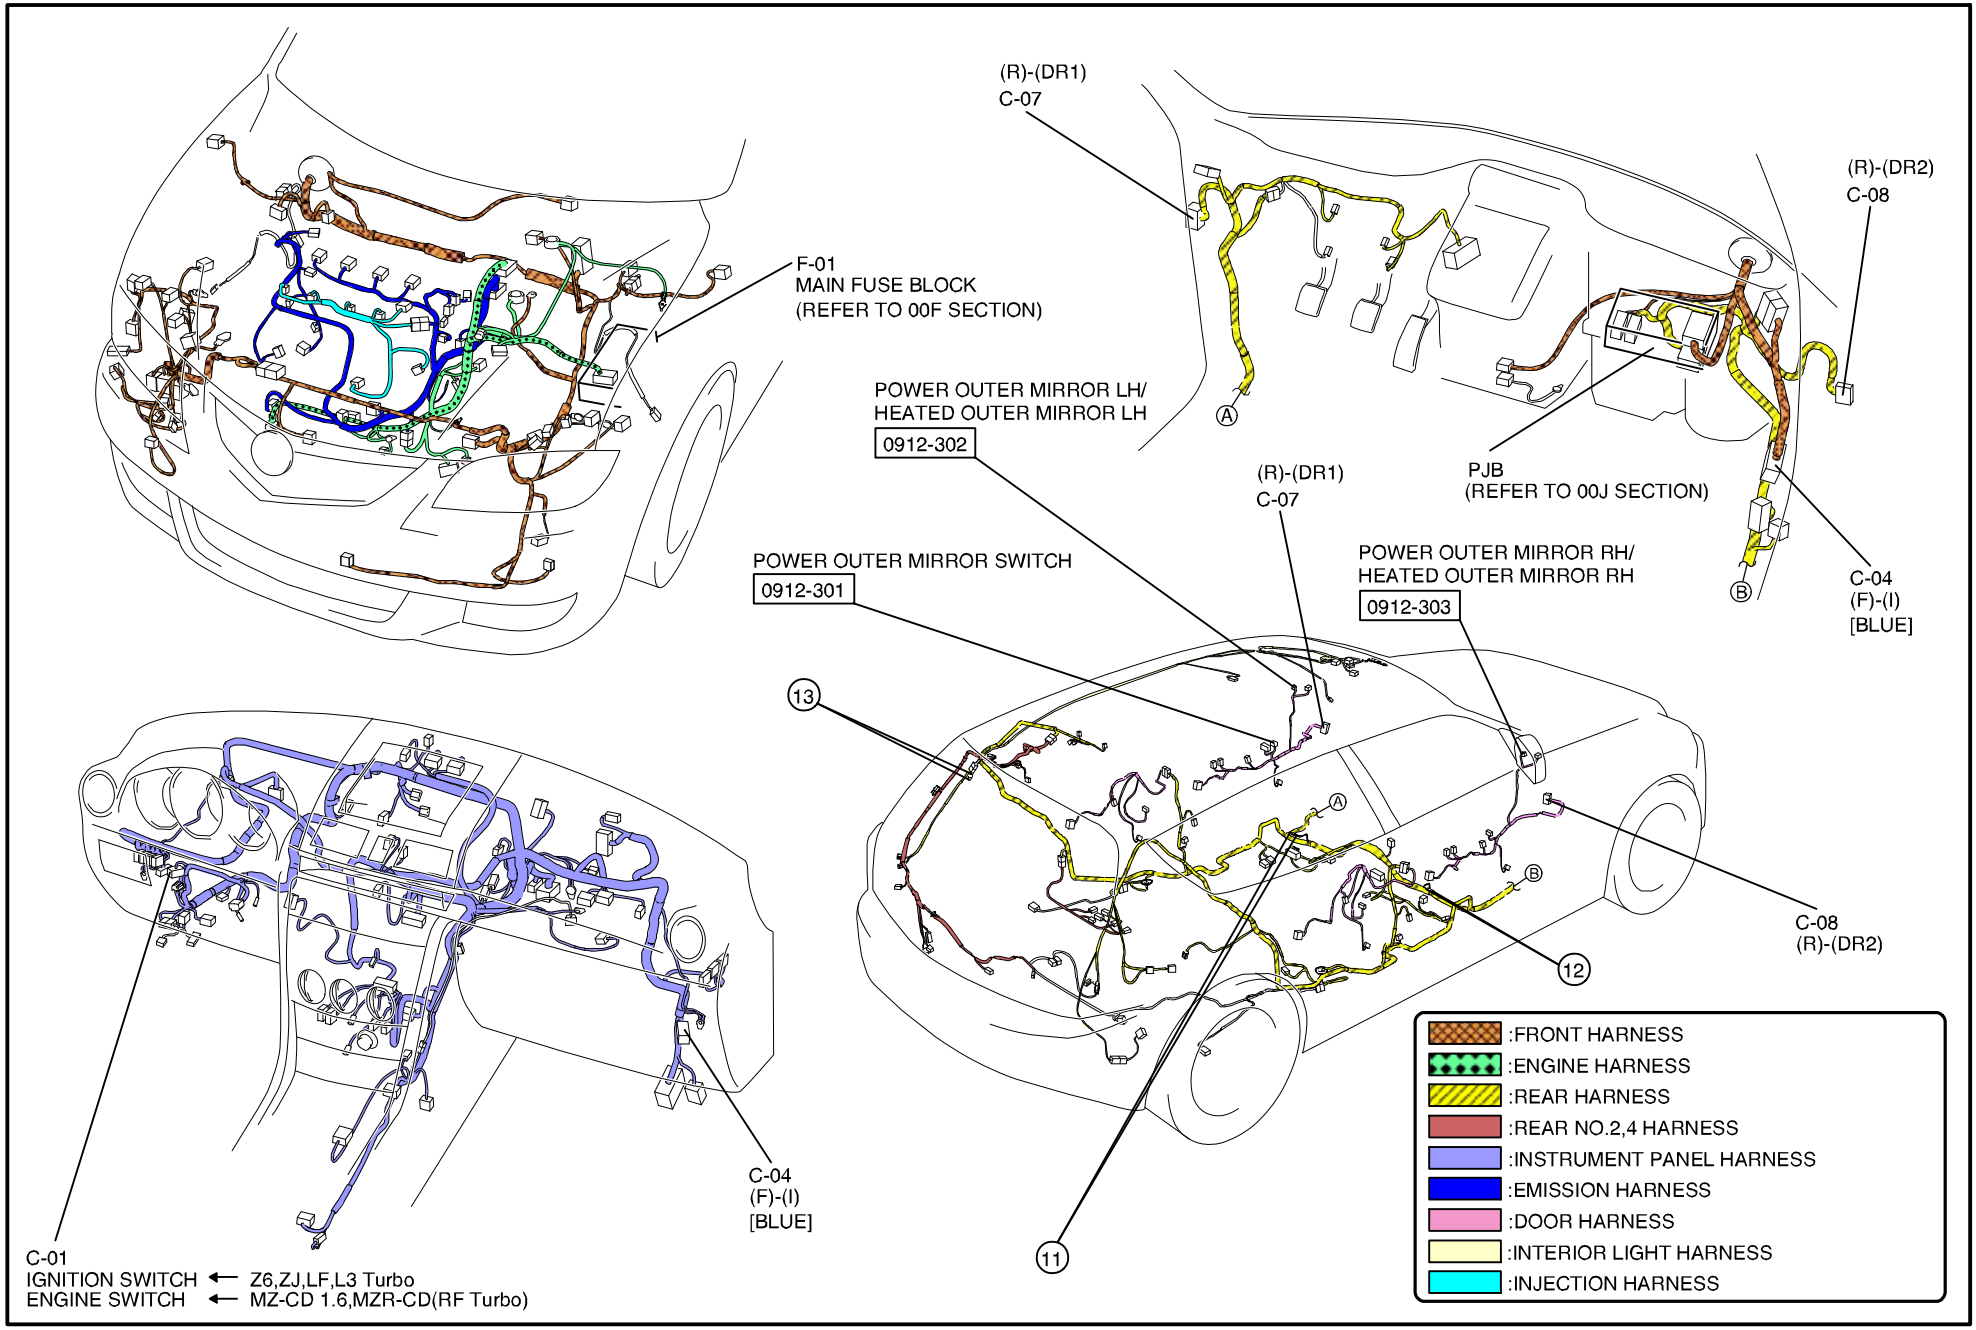

(R)-(DR1)
C-07
(R)-(DR2)
C-08
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
POWER OUTER MIRROR LH/
HEATED OUTER MIRROR LH
0912-302
(R)-(DR1)
C-07
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
POWER OUTER MIRROR SWITCH
0912-301
POWER OUTER MIRROR RH/
HEATED OUTER MIRROR RH
0912-303
13
C-08
(R)-(DR2)
12
11
C-04
(F)-(I)
[BLUE]
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

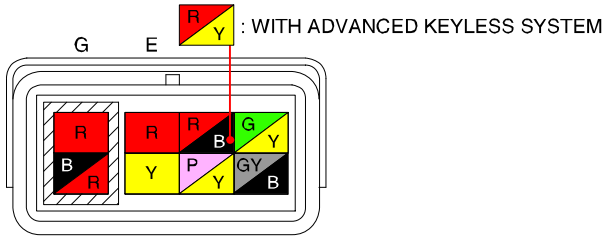


C-07
REAR HARNESS-DOOR NO.1 HARNESS

REAR HARNESS

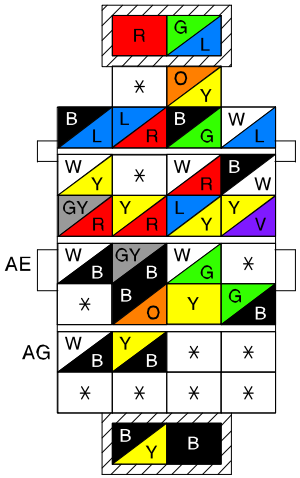


DOOR NO.1 HARNESS

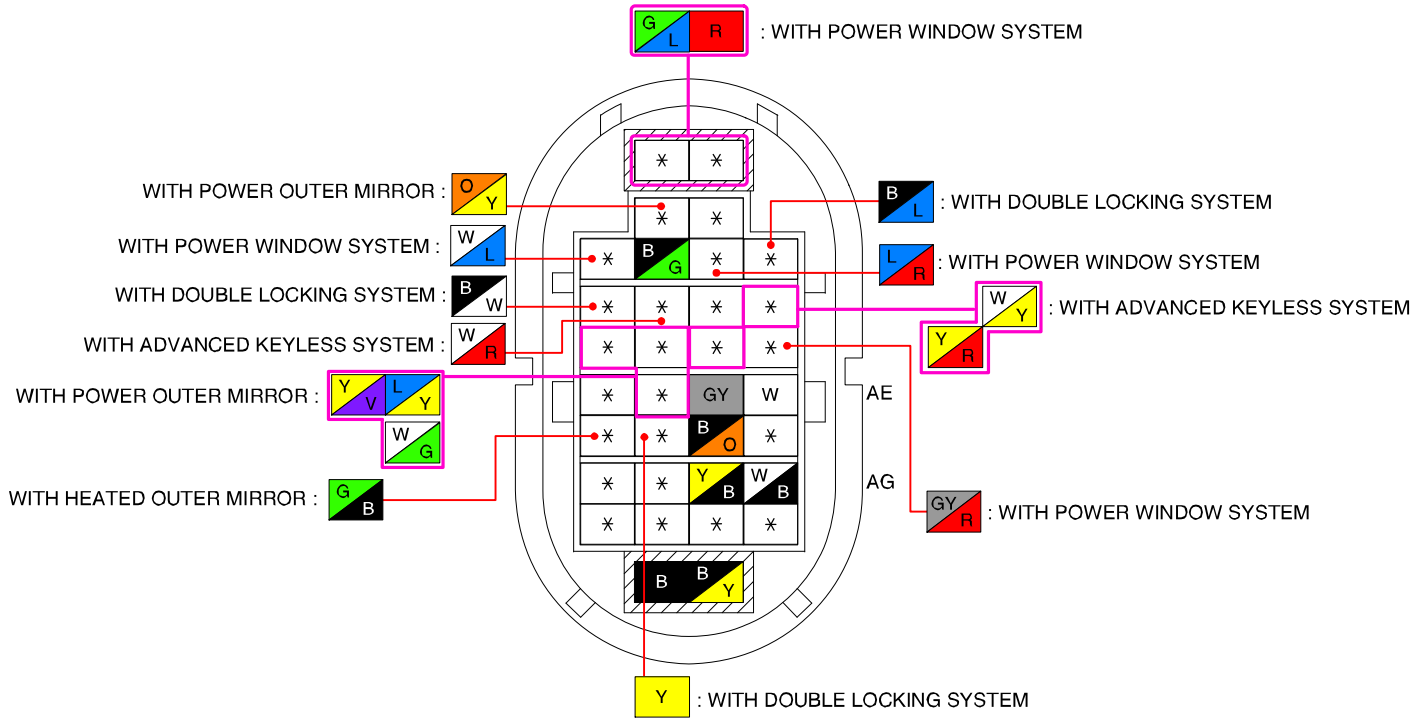


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

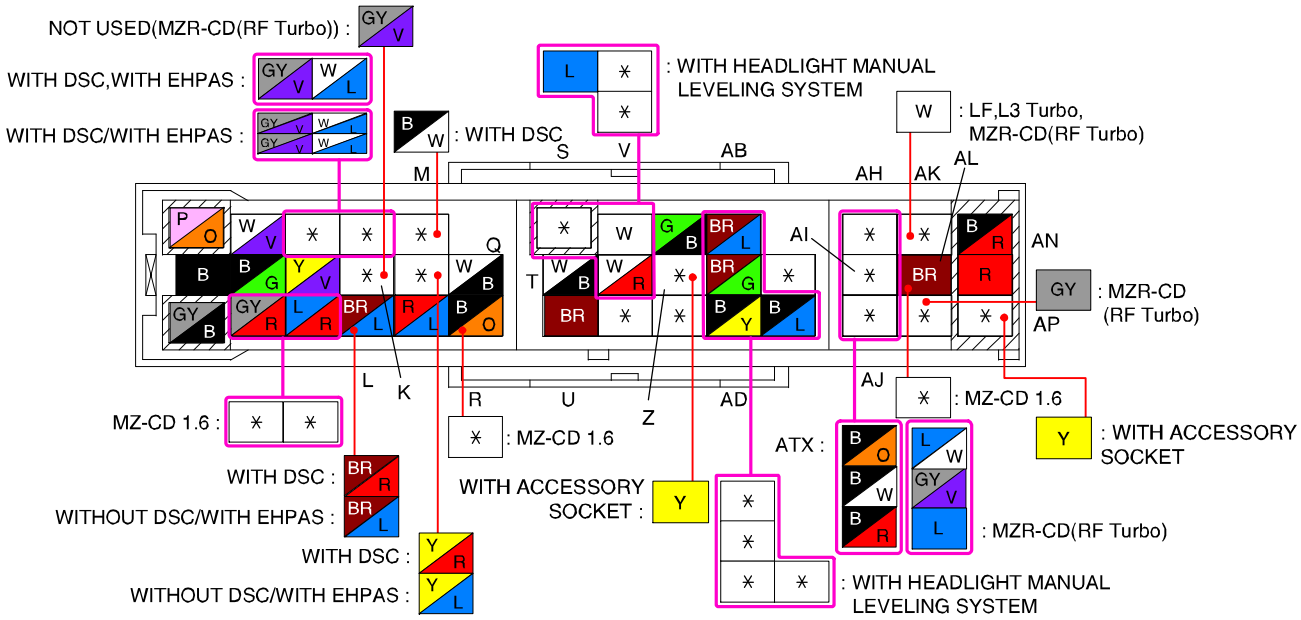


INSTRUMENT PANEL HARNESS

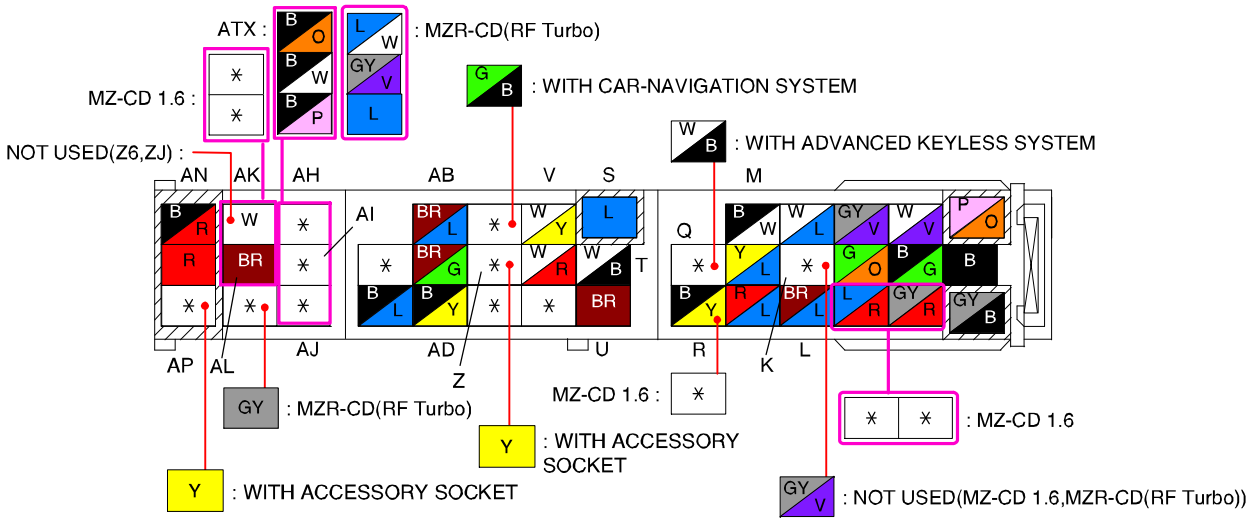



C-08
REAR HARNESS-DOOR NO.2 HARNESS

REAR HARNESS

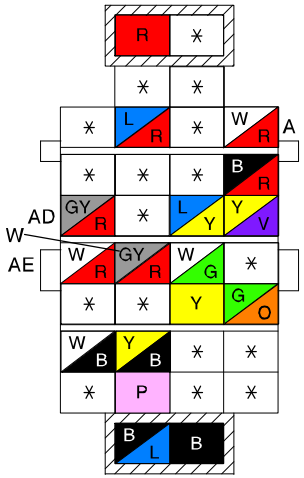


DOOR NO.2 HARNESS

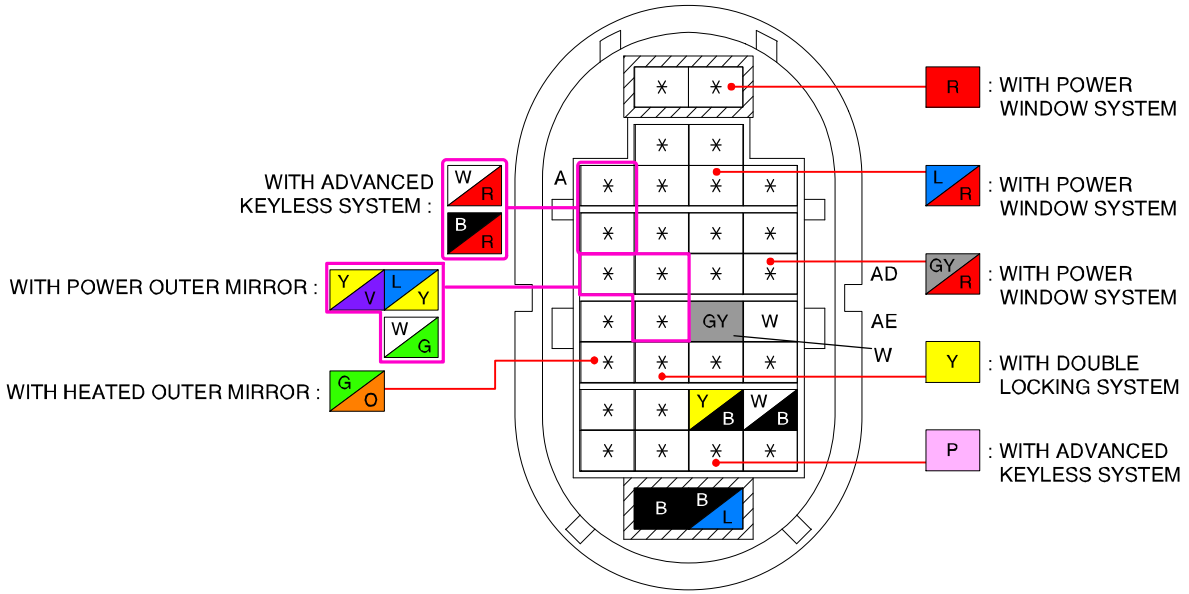


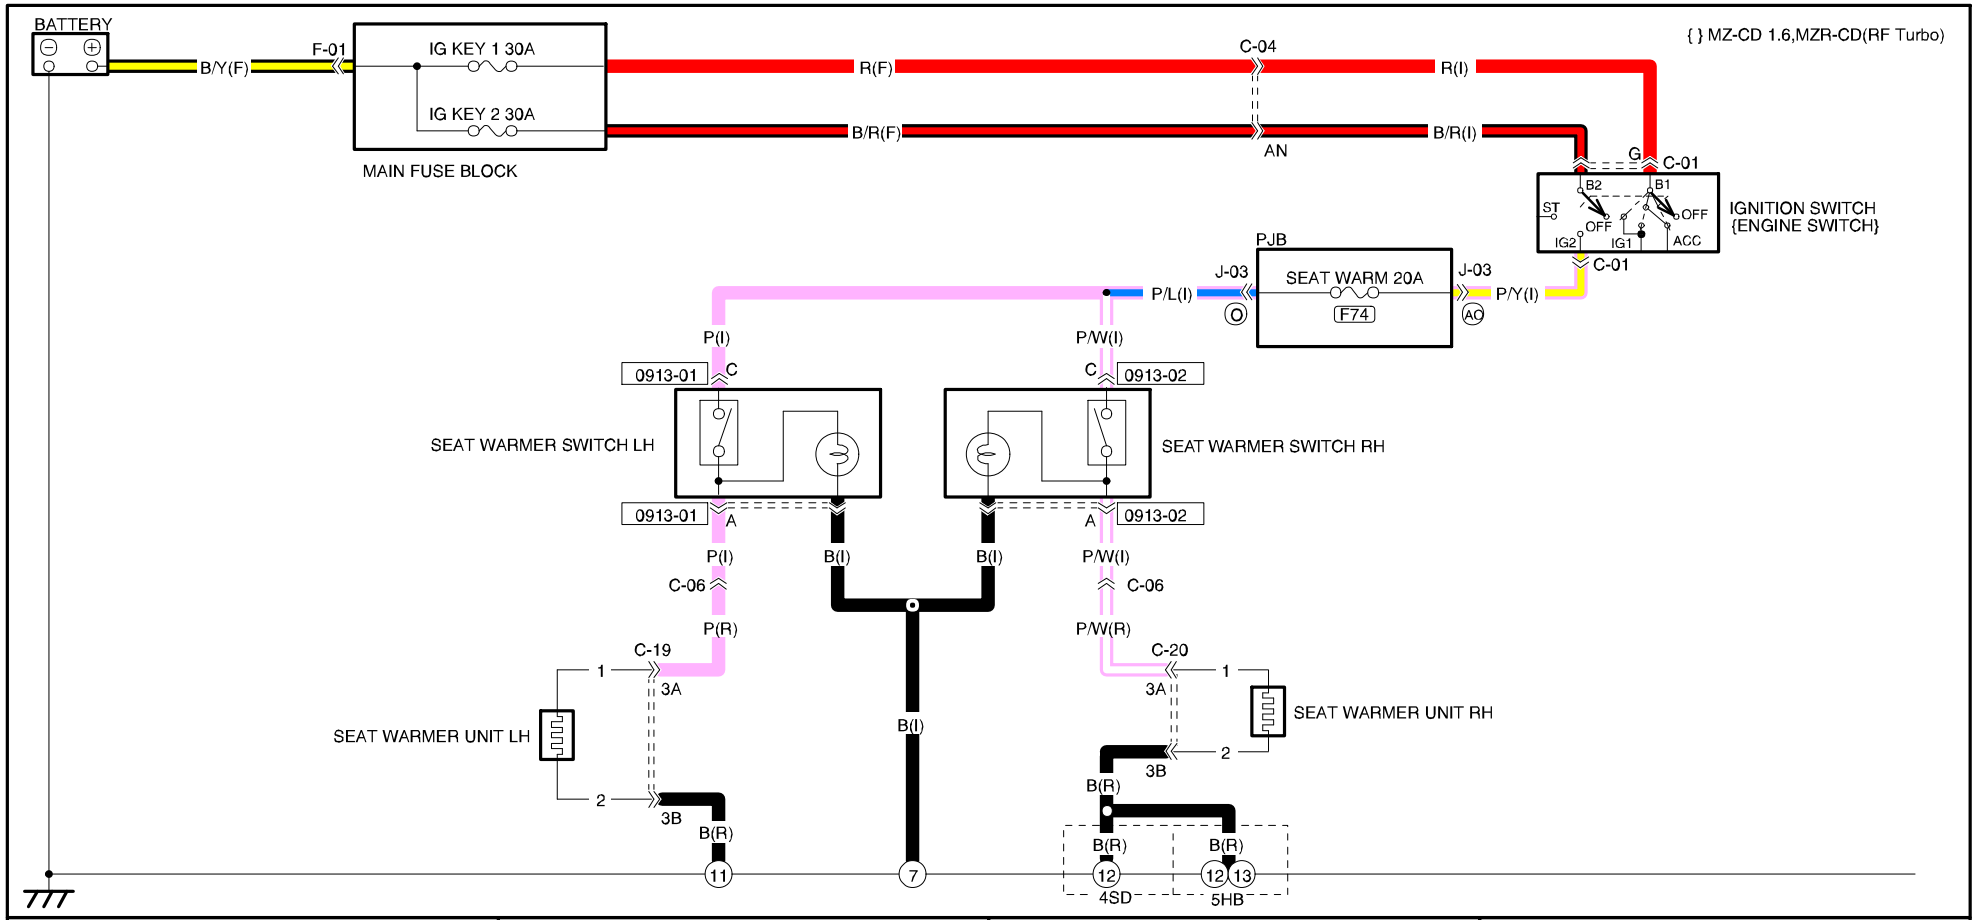


0913-01
SEAT WARMER SWITCH LH




0913-02
SEAT WARMER SWITCH RH



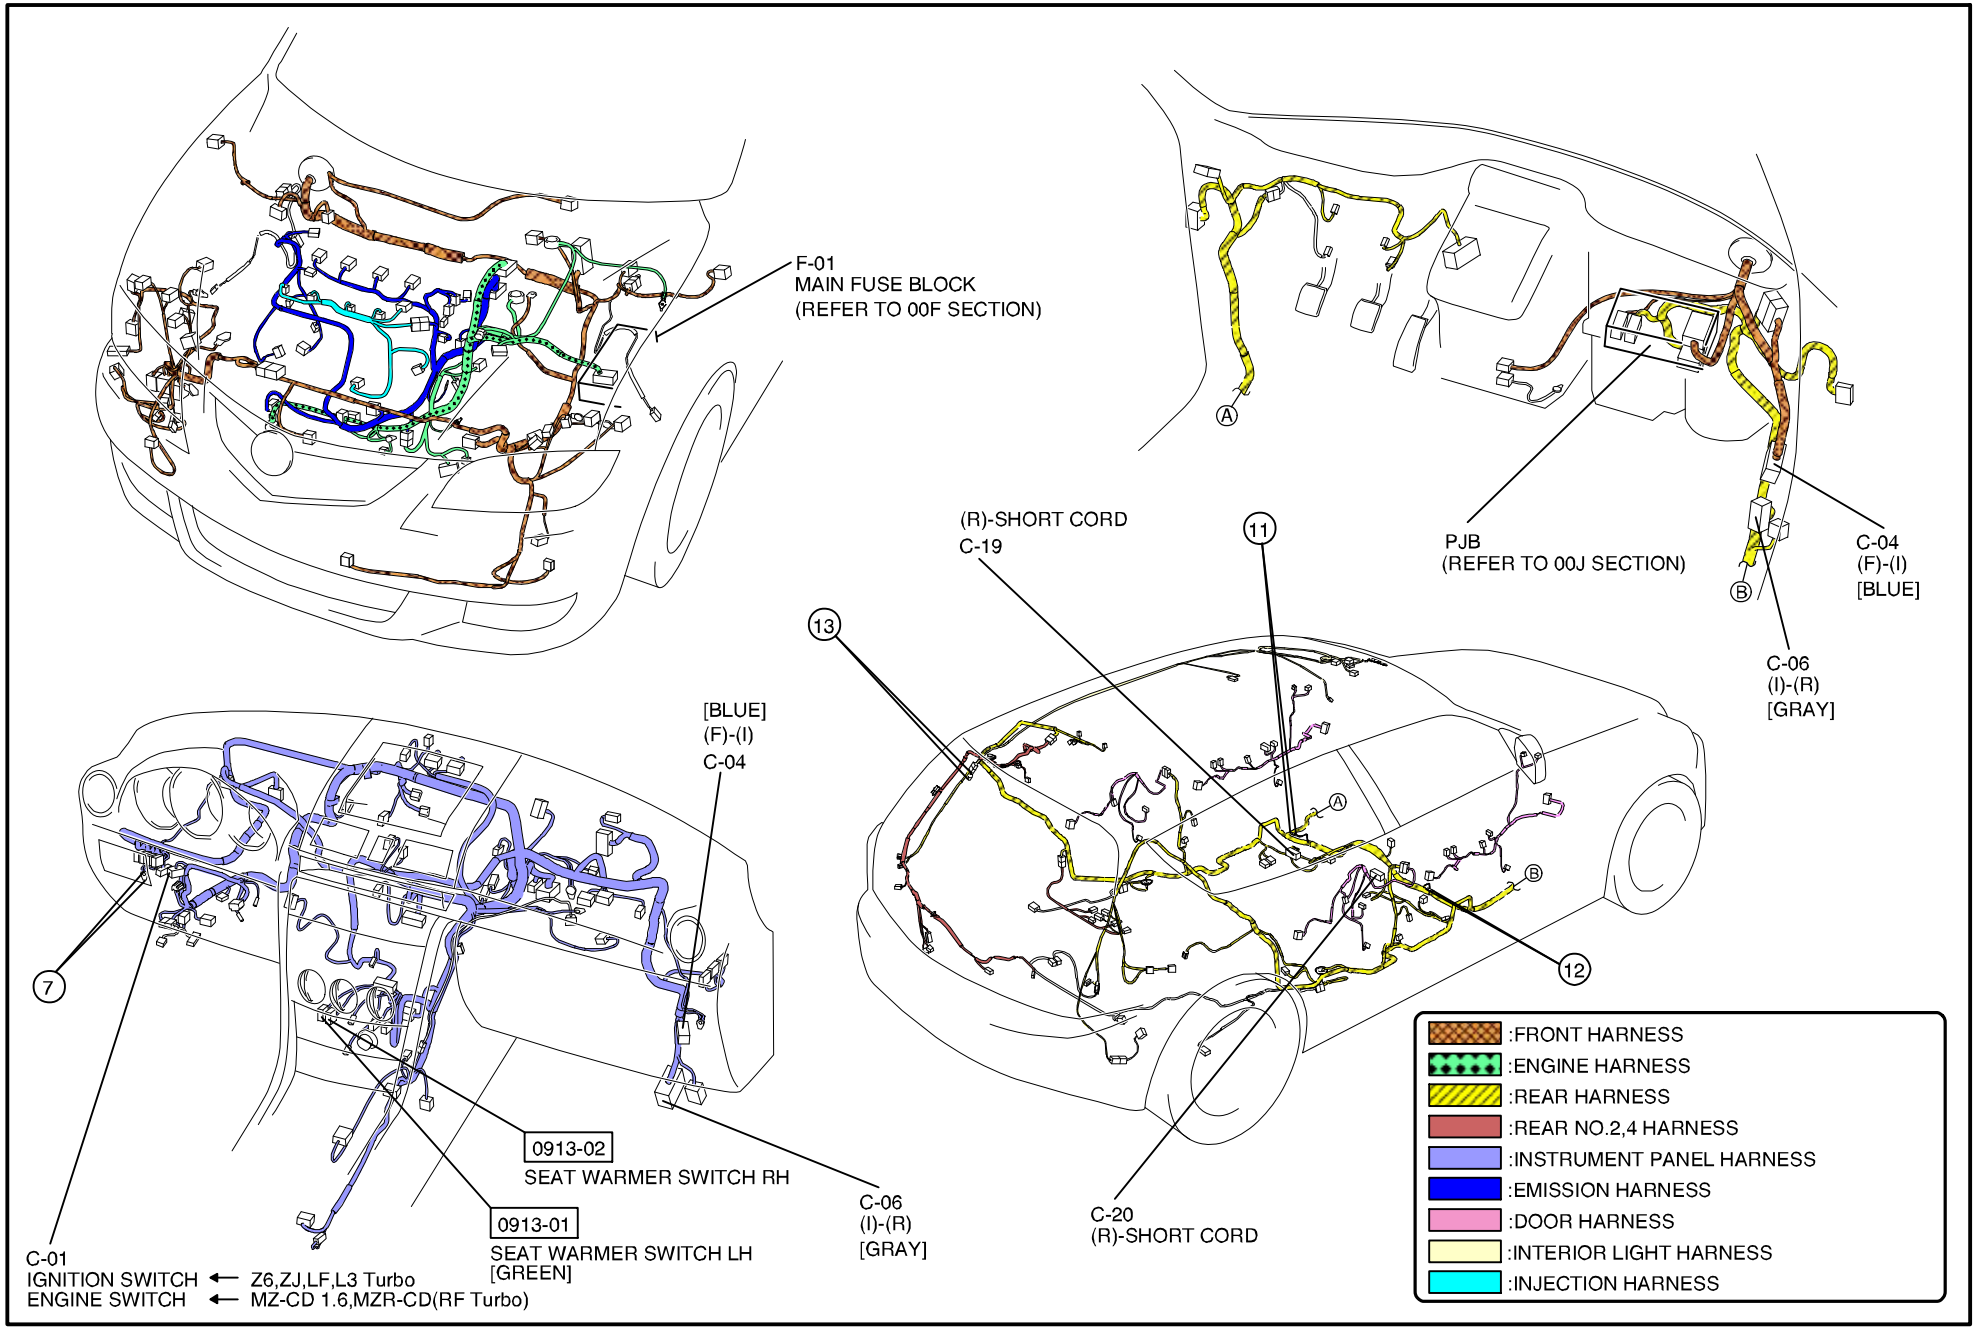

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
(R)-SHORT CORD
C-19
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
C-06
(I)-(R)
[GRAY]
[BLUE]
(F)-(I)
C-04
0913-02
SEAT WARMER SWITCH RH
0913-01
SEAT WARMER SWITCH LH
[GREEN]
C-06
(I)-(R)
[GRAY]
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-20
(R)-SHORT CORD
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

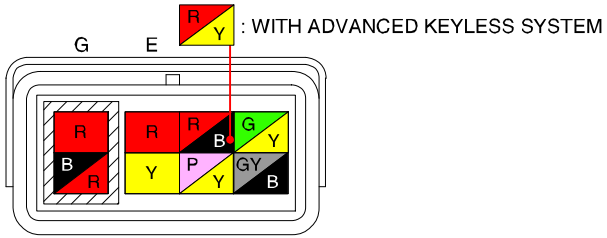


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

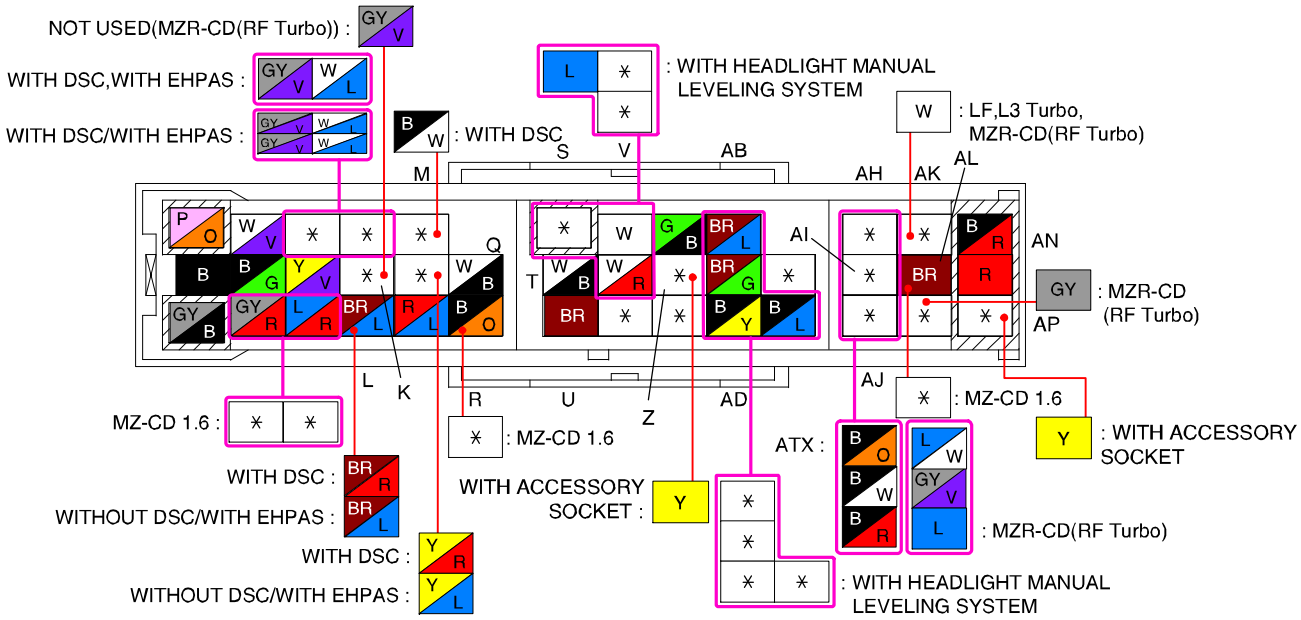


INSTRUMENT PANEL HARNESS

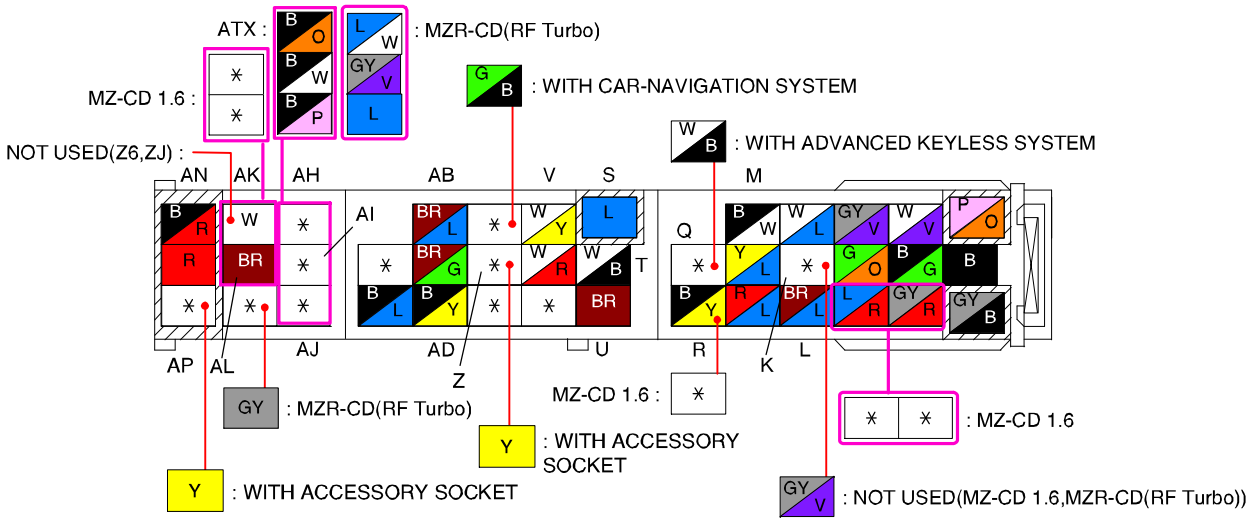


C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

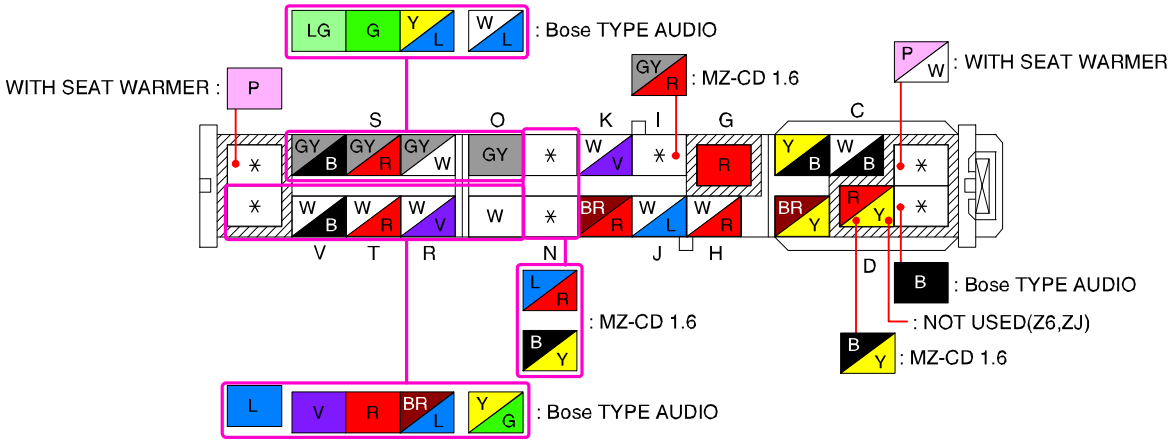


REAR HARNESS

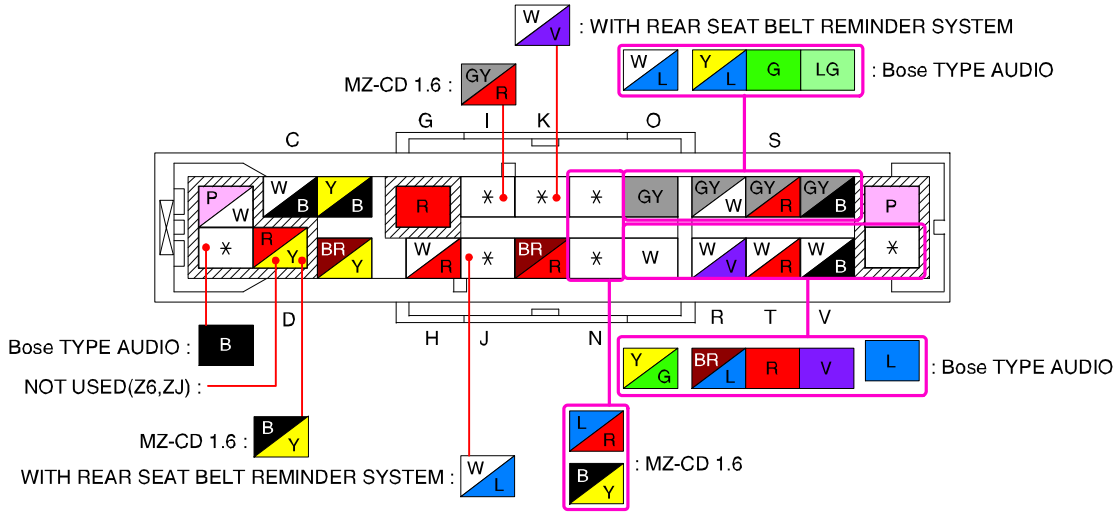


C-19
REAR HARNESS-SHORT CORD

REAR HARNESS

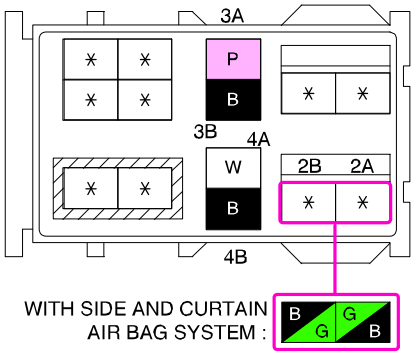


SHORT CORD

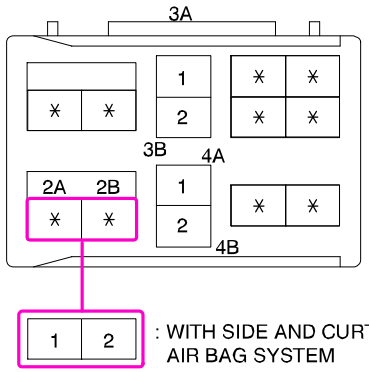


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

C-20
REAR HARNESS-SHORT CORD

REAR HARNESS

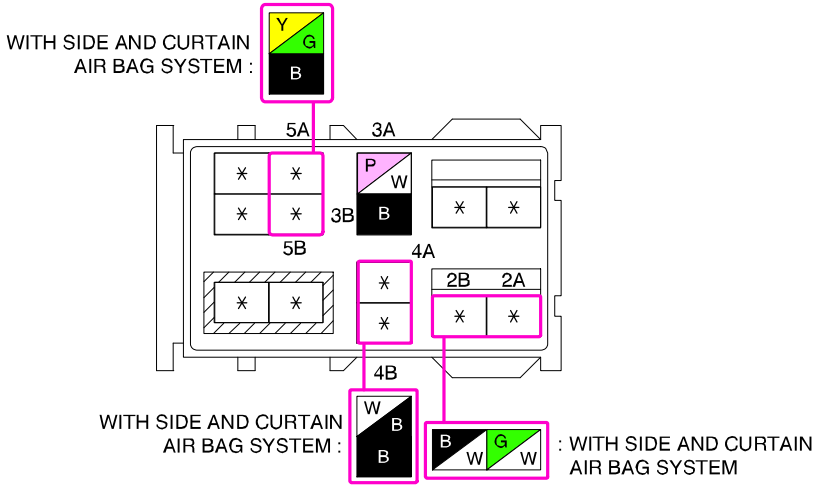


SHORT CORD

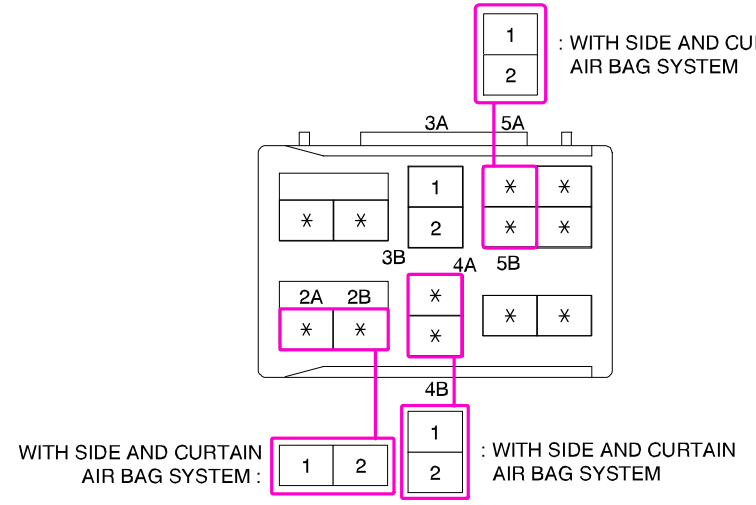


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


POWER DOOR LOCK SYSTEM (WITHOUT DOUBLE LOCKING SYSTEM)

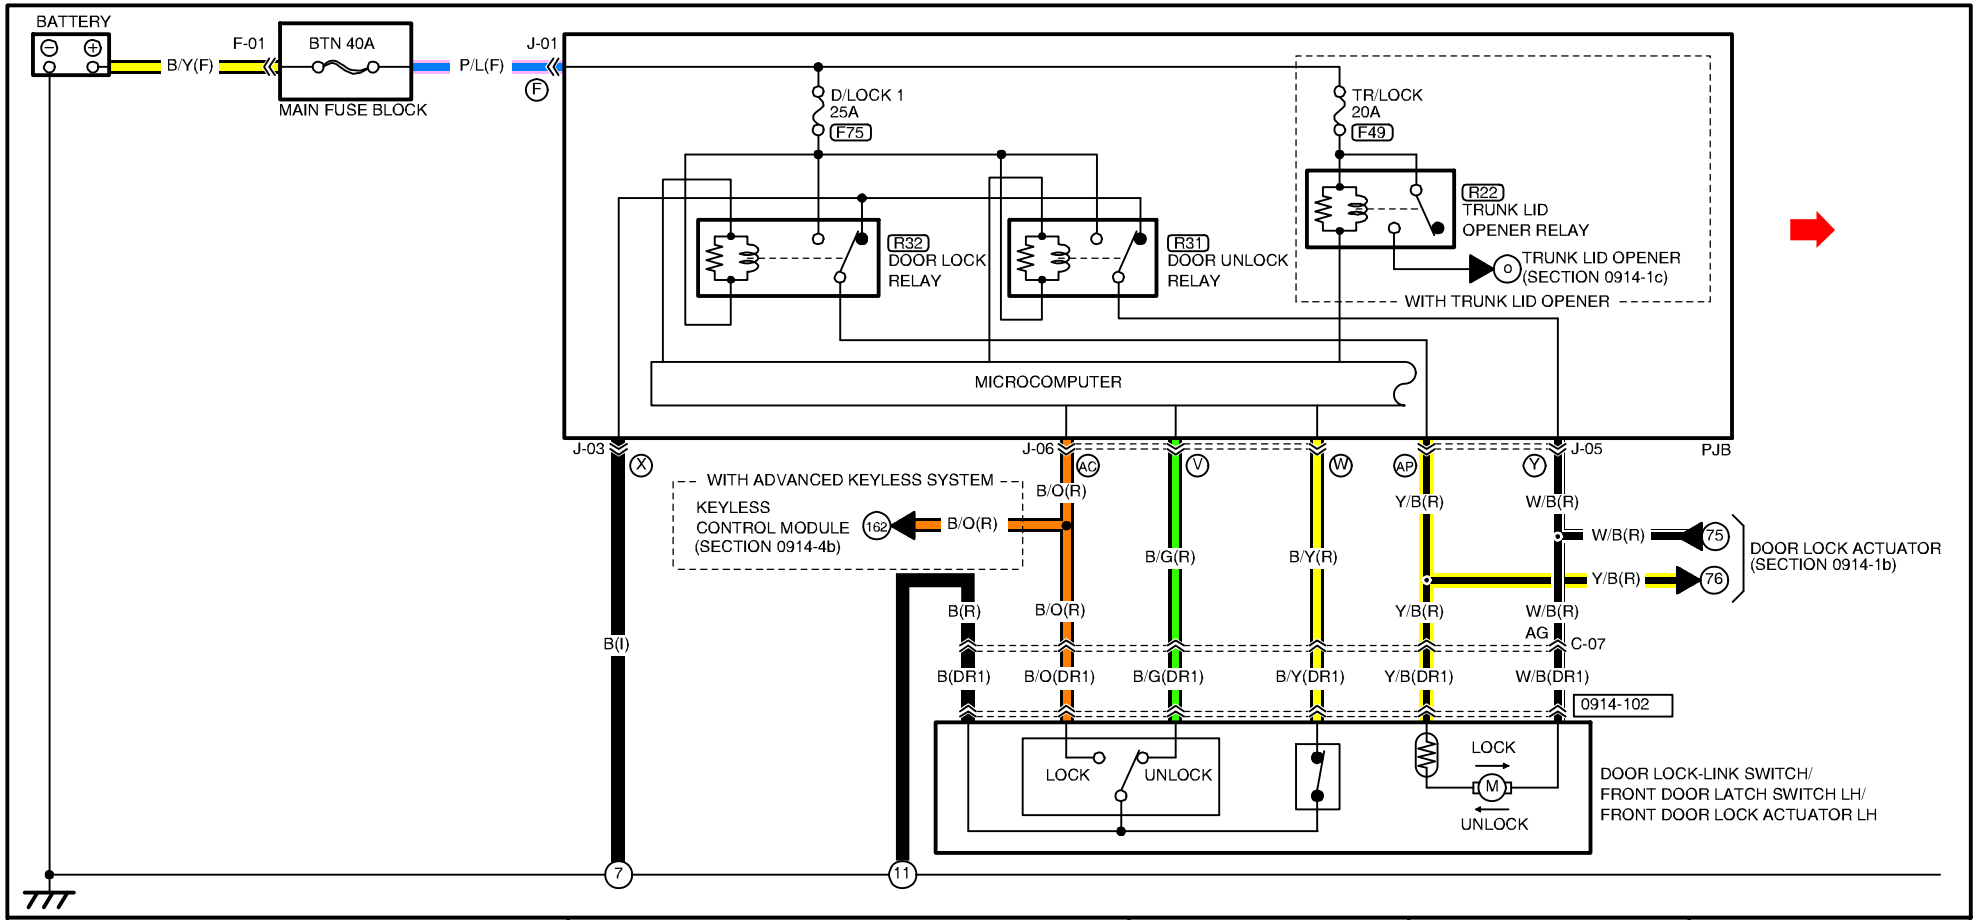

0914-102
DOOR LOCK-LINK SWITCH/
FRONT DOOR LATCH SWITCH LH/
FRONT DOOR LOCK ACTUATOR LH

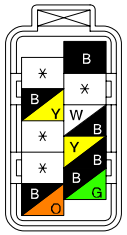


POWER DOOR LOCK SYSTEM (WITHOUT DOUBLE LOCKING SYSTEM)

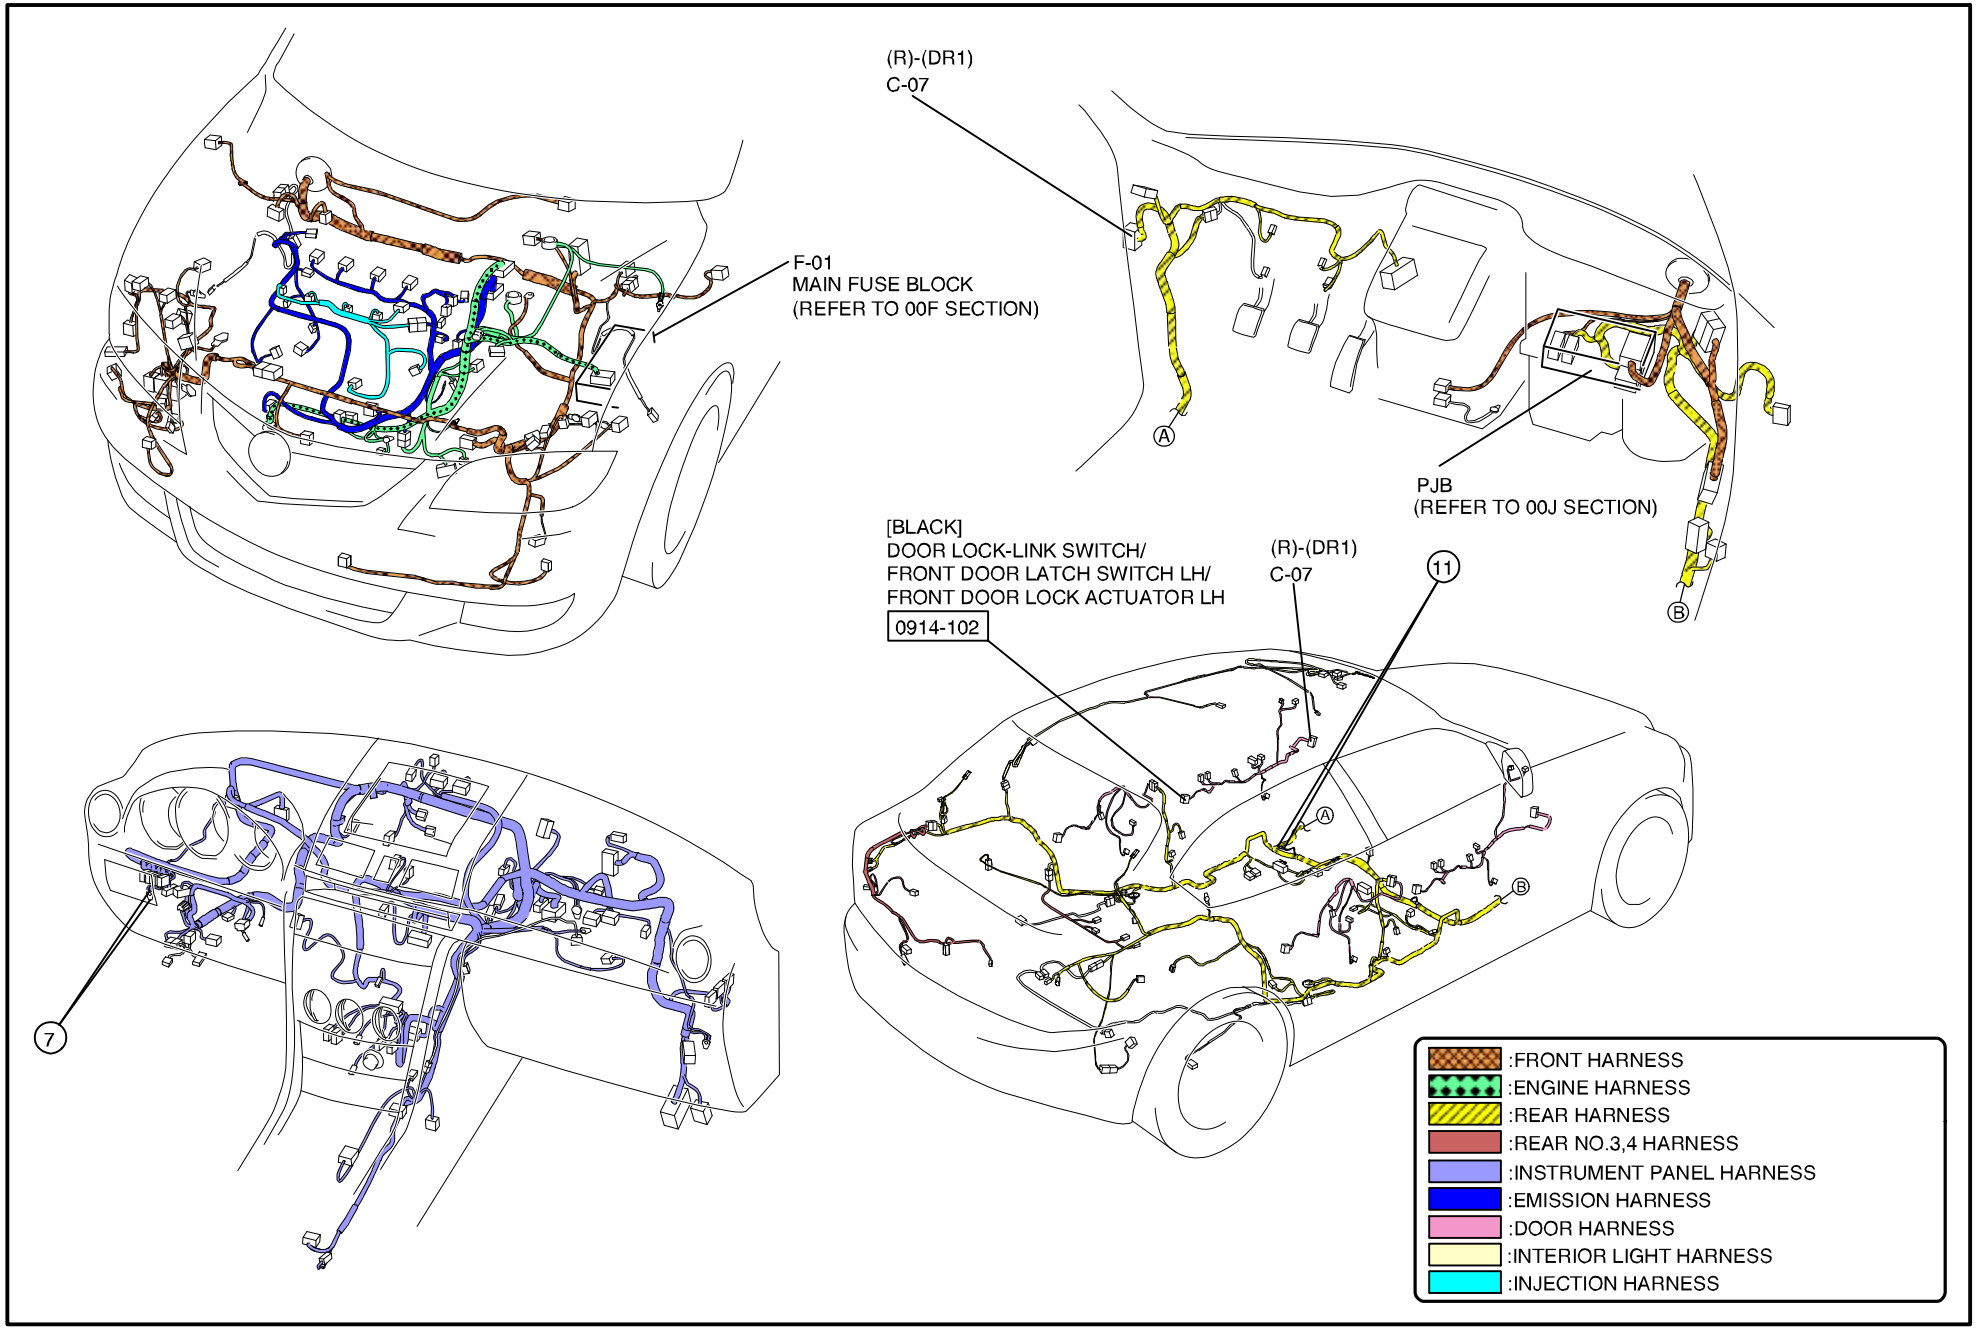


C-07
REAR HARNESS-DOOR NO.1 HARNESS


REAR HARNESS

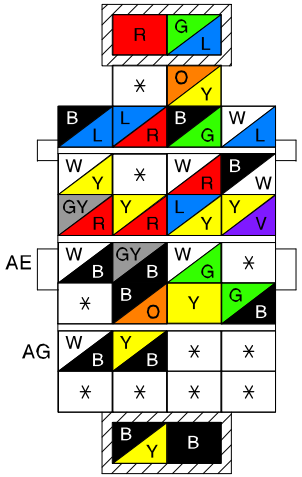


DOOR NO.1 HARNESS

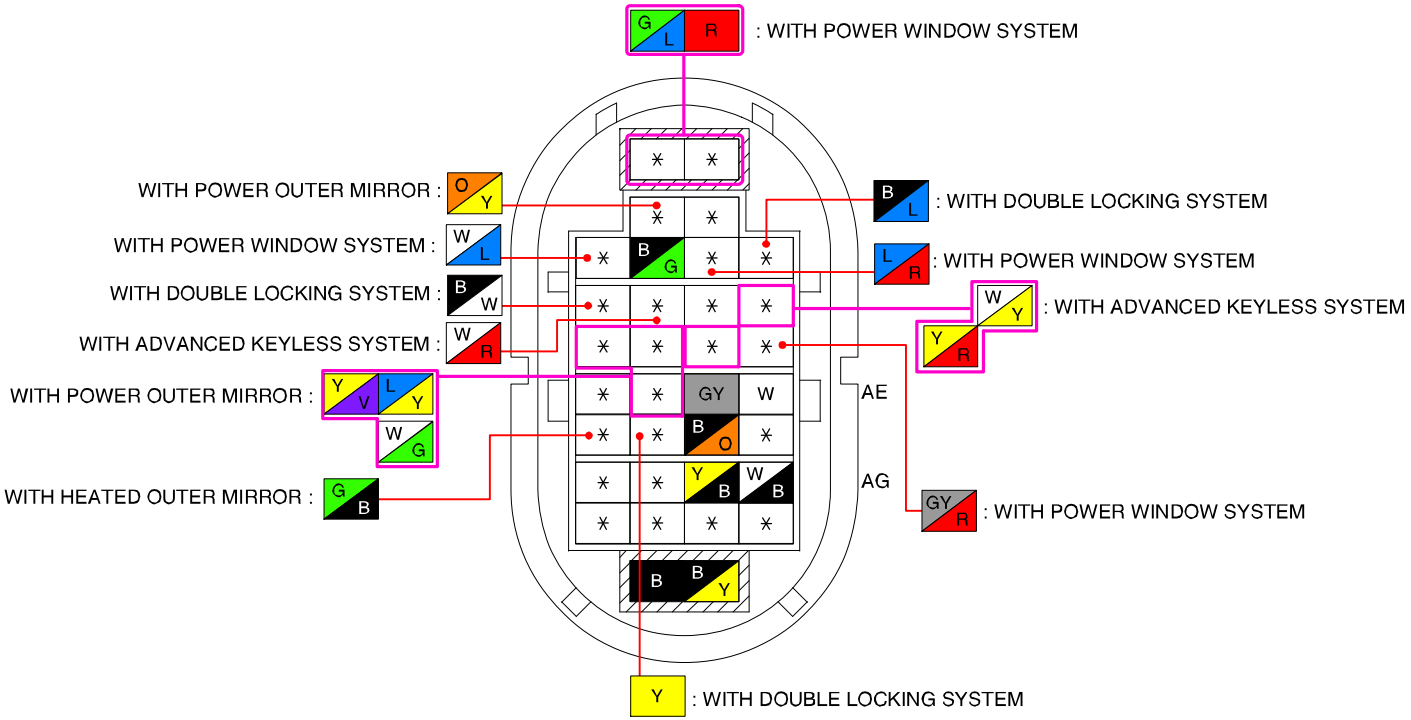


POWER DOOR LOCK SYSTEM (WITHOUT DOUBLE LOCKING SYSTEM)

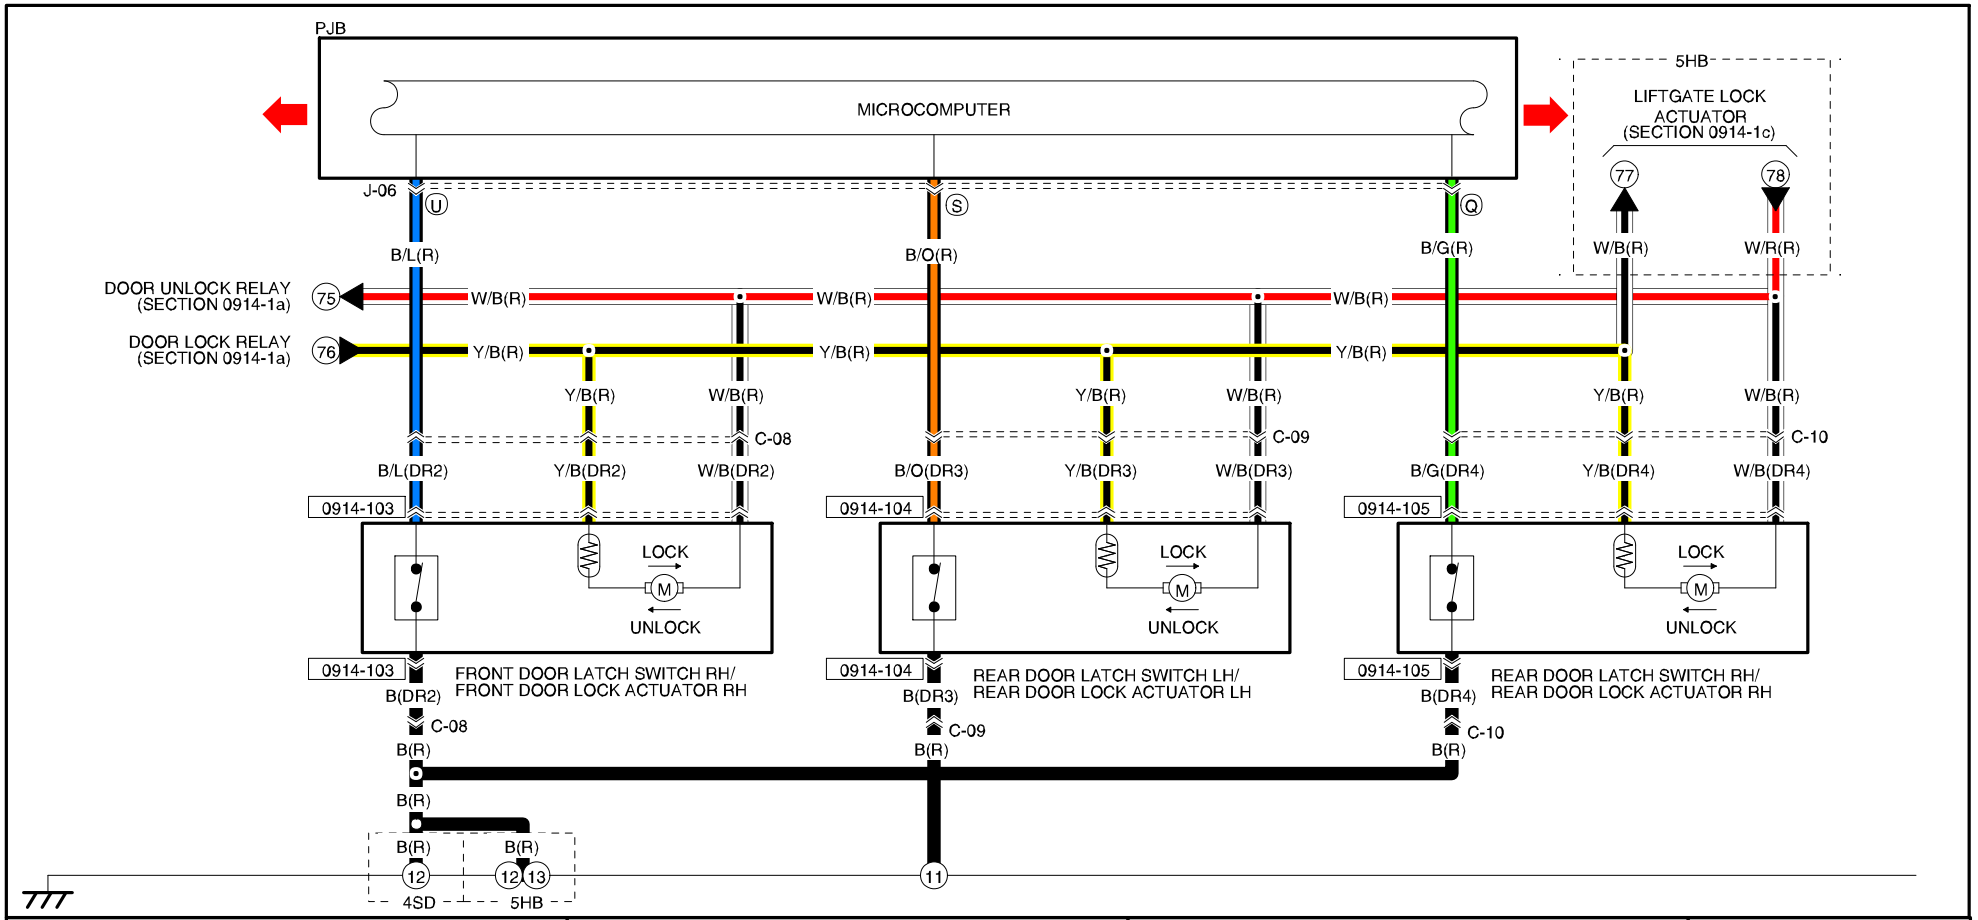


0914-103
FRONT DOOR LATCH SWITCH RH/
FRONT DOOR LOCK ACTUATOR RH

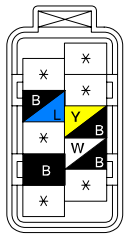


0914-104
REAR DOOR LATCH SWITCH LH/
REAR DOOR LOCK ACTUATOR LH

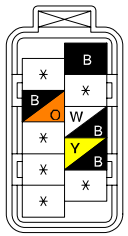


0914-105
REAR DOOR LATCH SWITCH RH/
REAR DOOR LOCK ACTUATOR RH

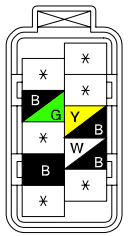

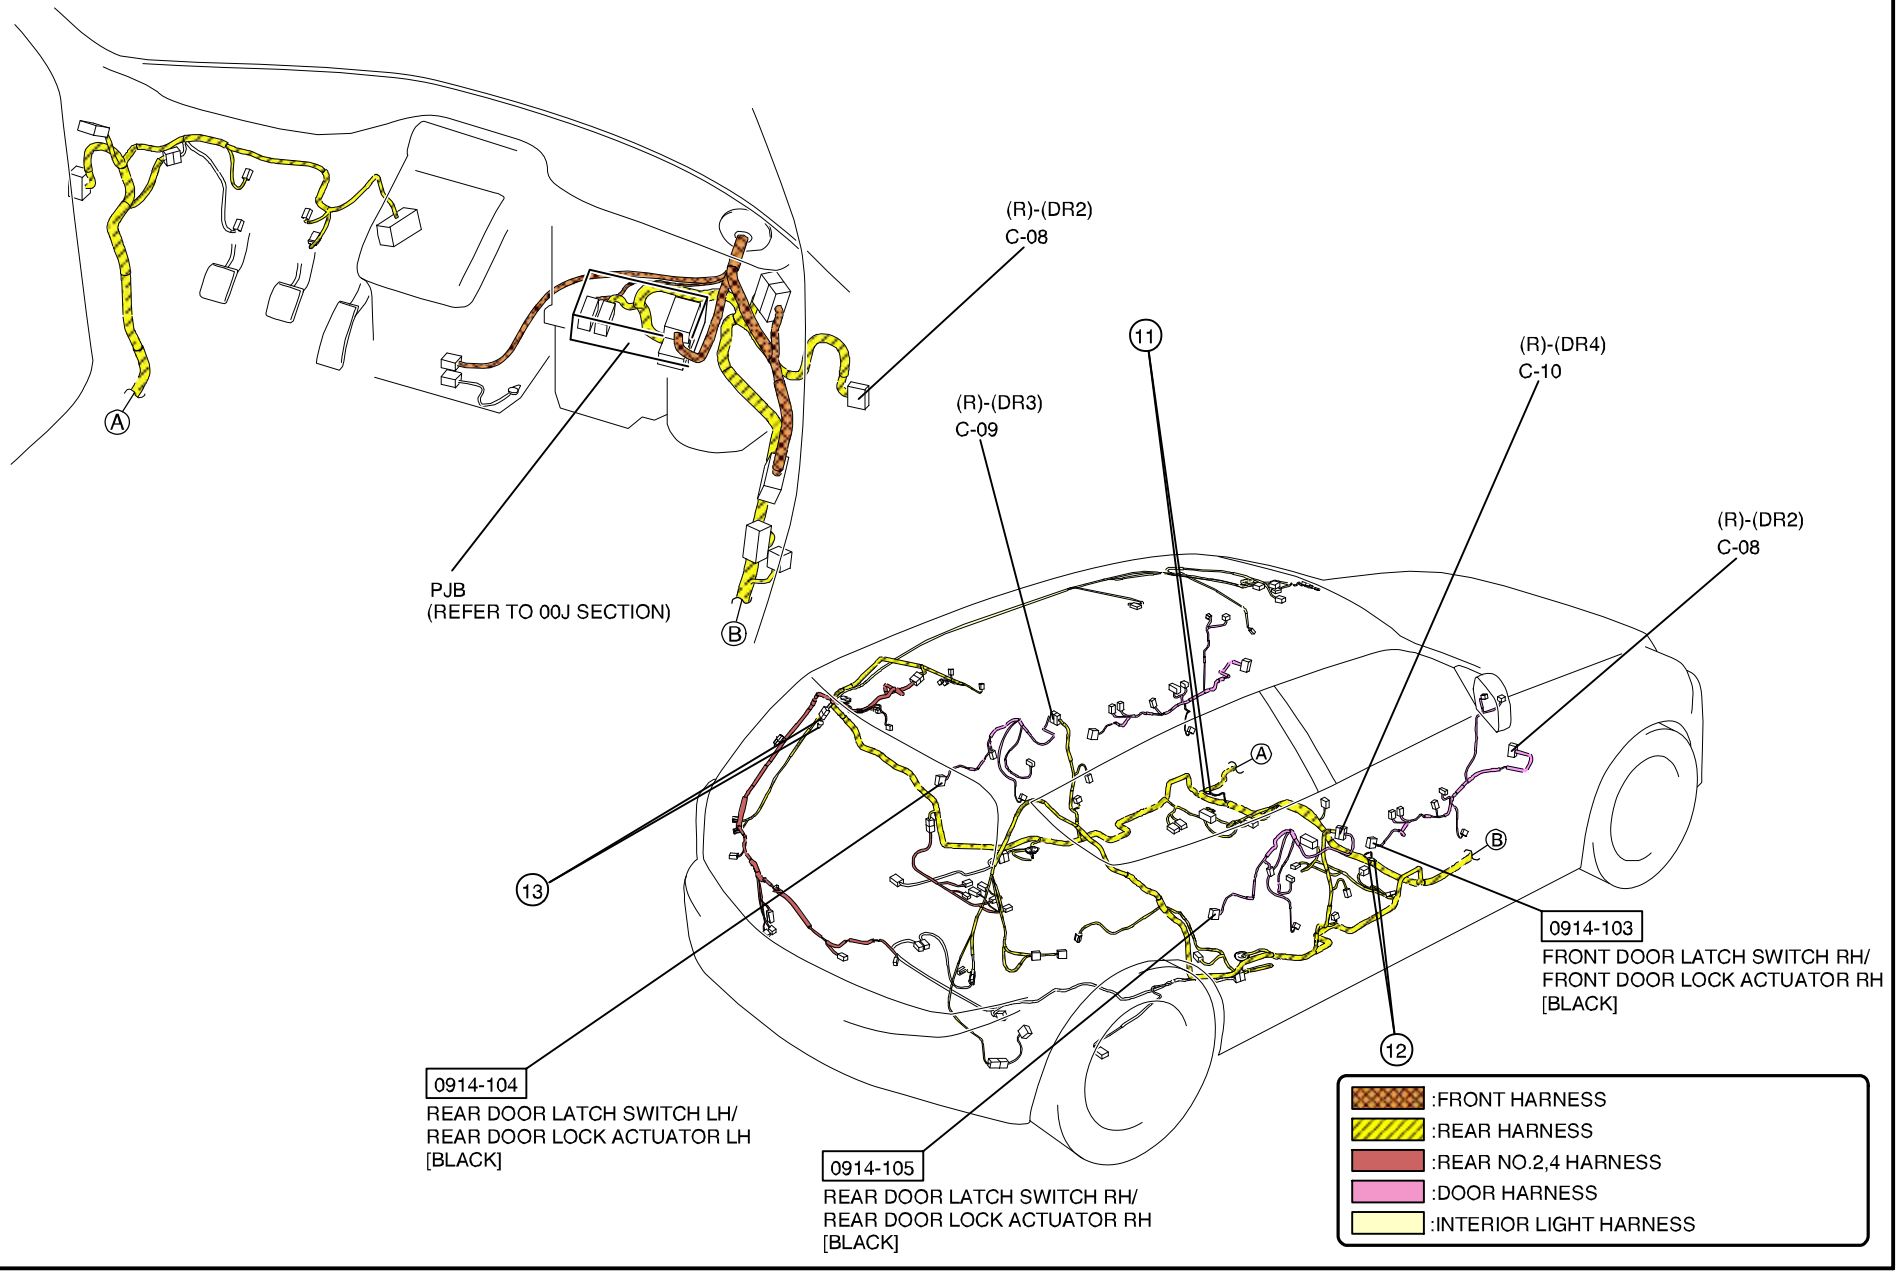

(R)-(DR2)
C-08
(R)-(DR3)
C-09
11
(R)-(DR4)
C-10
(R)-(DR2)
C-08
A
B
PJB
(REFER TO 00J SECTION)
13
0914-103
FRONT DOOR LATCH SWITCH RH/
FRONT DOOR LOCK ACTUATOR RH
[BLACK]
12
0914-104
REAR DOOR LATCH SWITCH LH/
REAR DOOR LOCK ACTUATOR LH
[BLACK]
0914-105
REAR DOOR LATCH SWITCH RH/
REAR DOOR LOCK ACTUATOR RH
[BLACK]
:FRONT HARNESS
:REAR HARNESS
:REAR NO.2,4 HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-08
REAR HARNESS-DOOR NO.2 HARNESS

REAR HARNESS

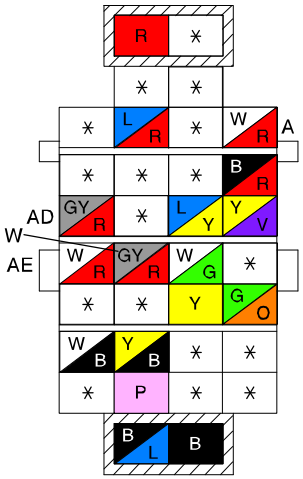


DOOR NO.2 HARNESS

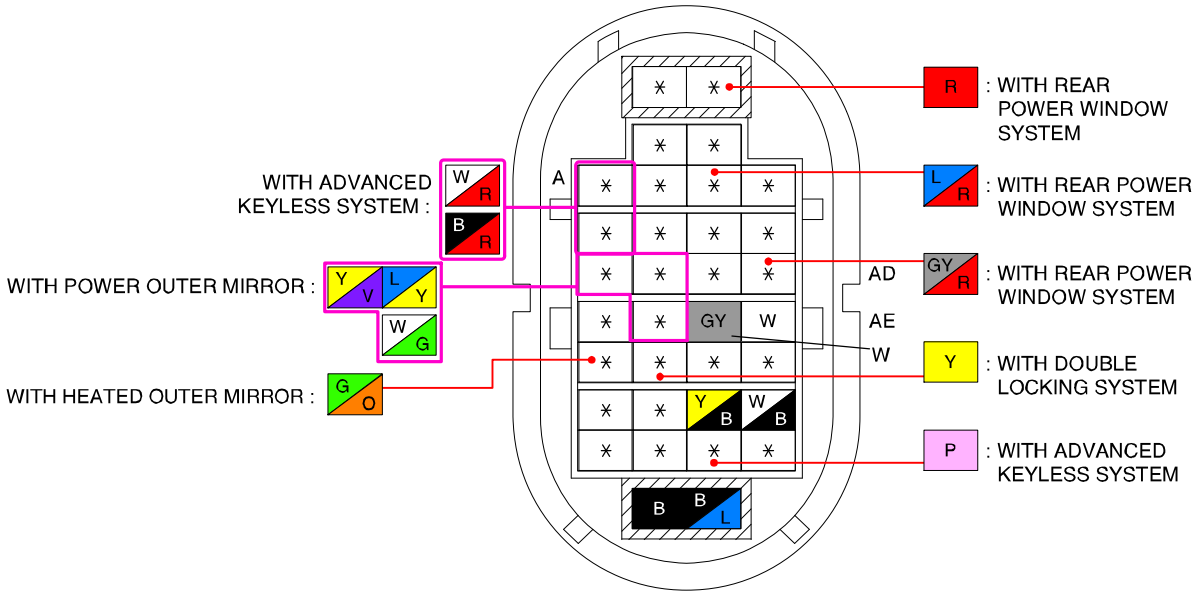


C-09
REAR HARNESS-DOOR NO.3 HARNESS

REAR HARNESS

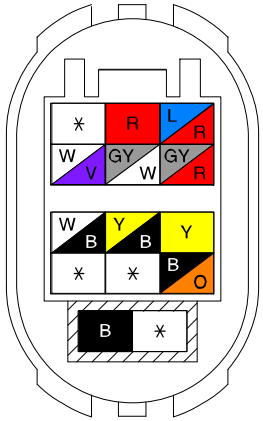


DOOR NO.3 HARNESS

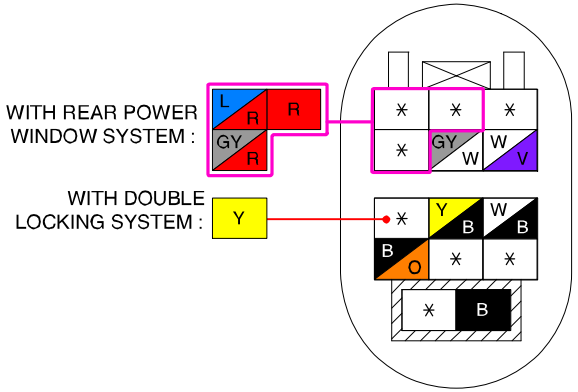


C-10
REAR HARNESS-DOOR NO.4 HARNESS


REAR HARNESS

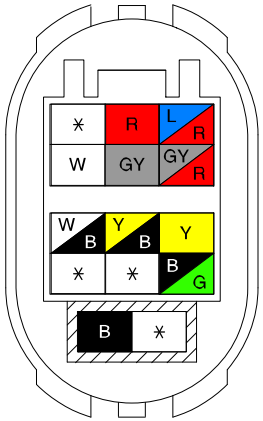

DOOR NO.4 HARNESS

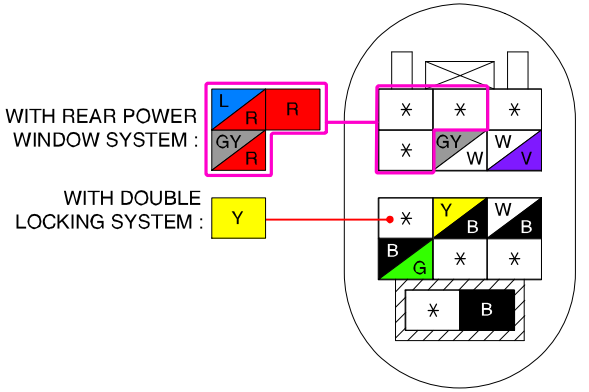


POWER DOOR LOCK SYSTEM (WITHOUT DOUBLE LOCKING SYSTEM)

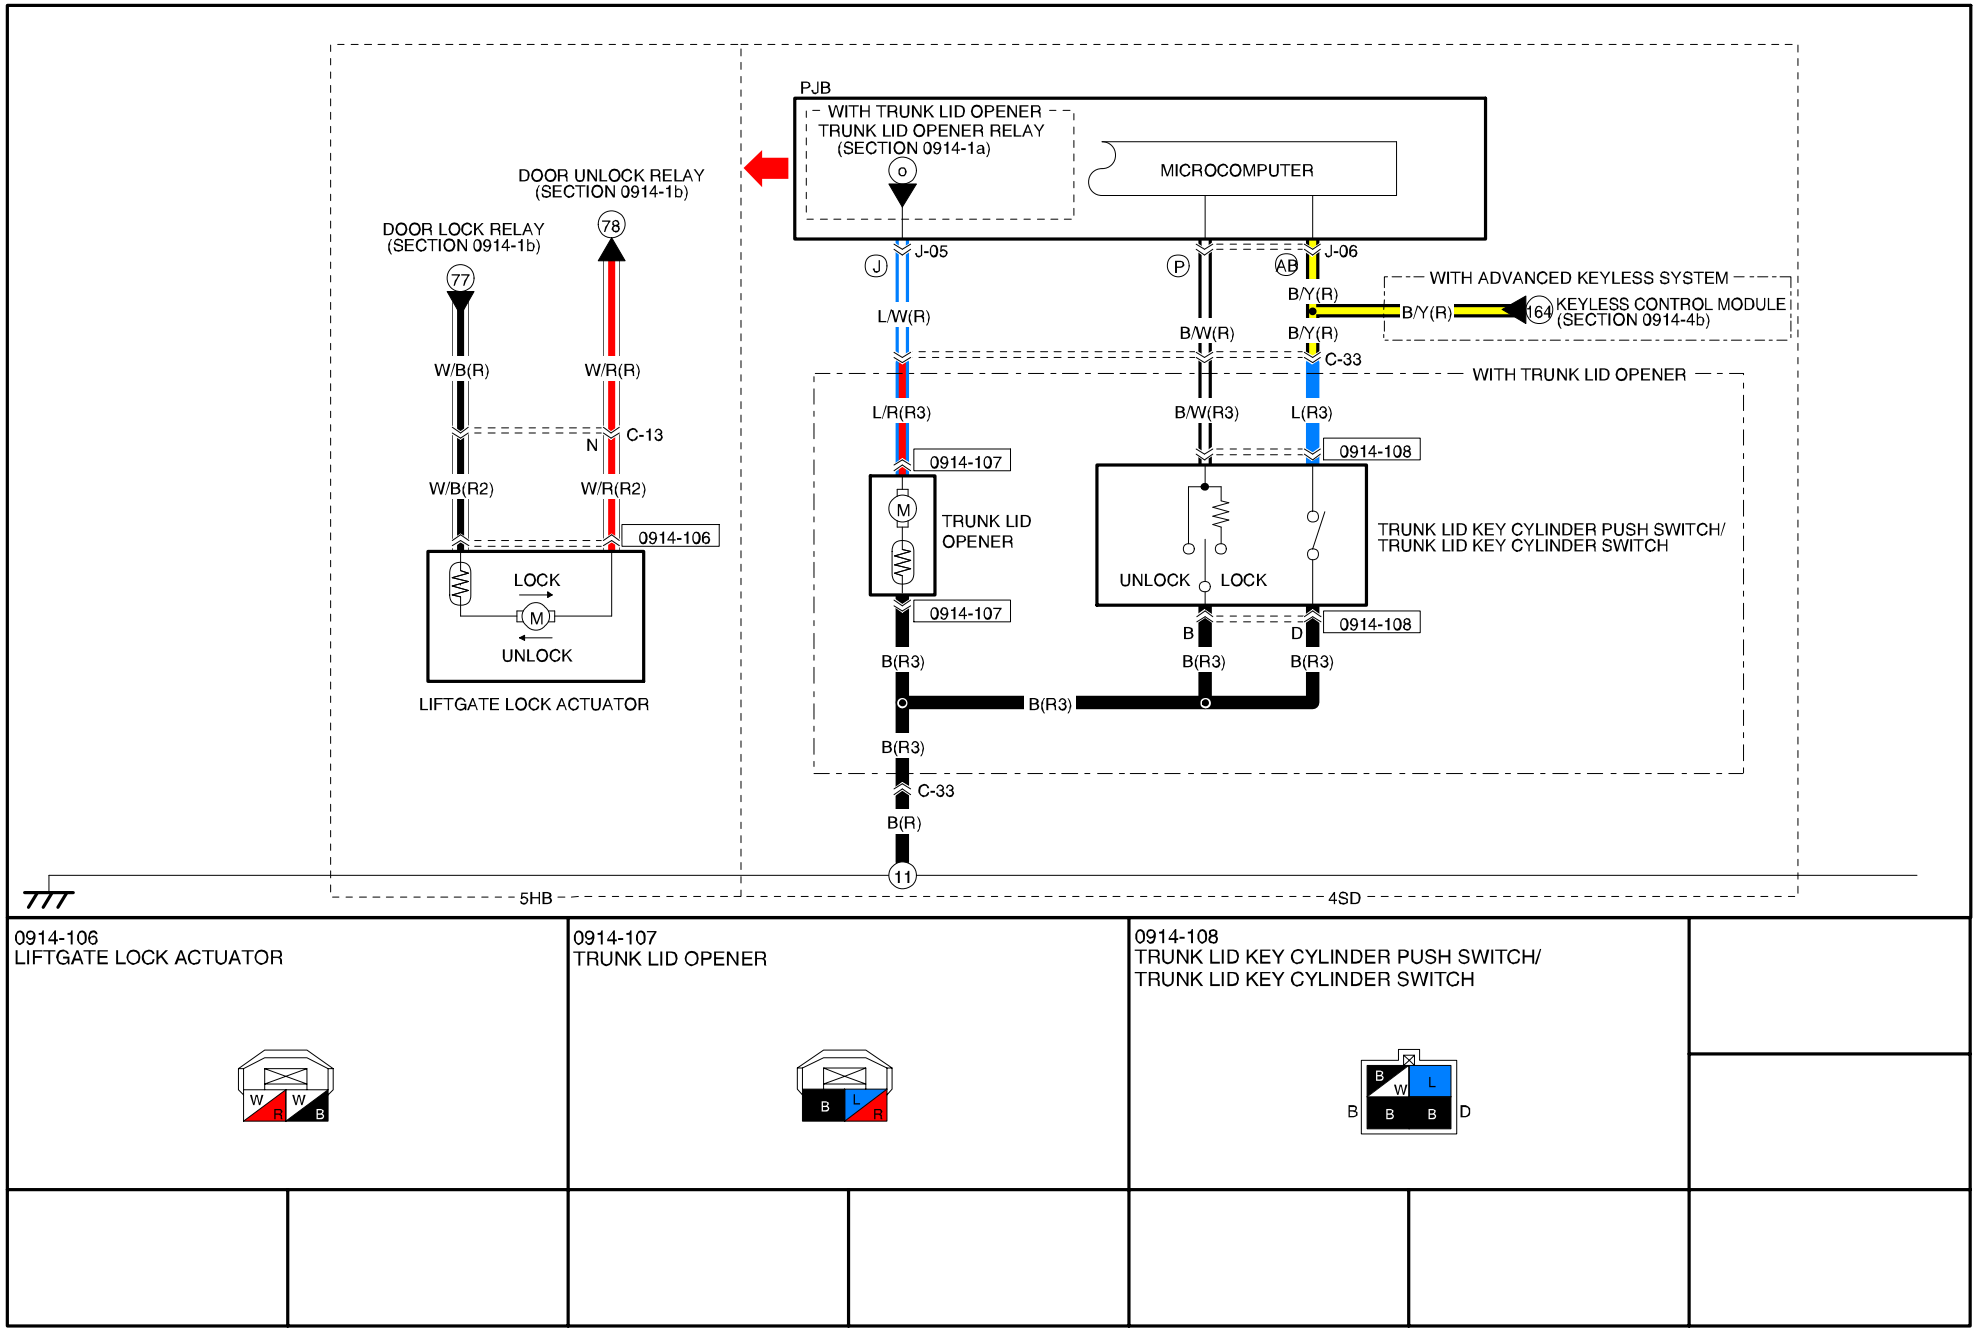

0914-106
LIFTGATE LOCK ACTUATOR


0914-107
TRUNK LID OPENER

0914-108
TRUNK LID KEY CYLINDER PUSH SWITCH/
TRUNK LID KEY CYLINDER SWITCH

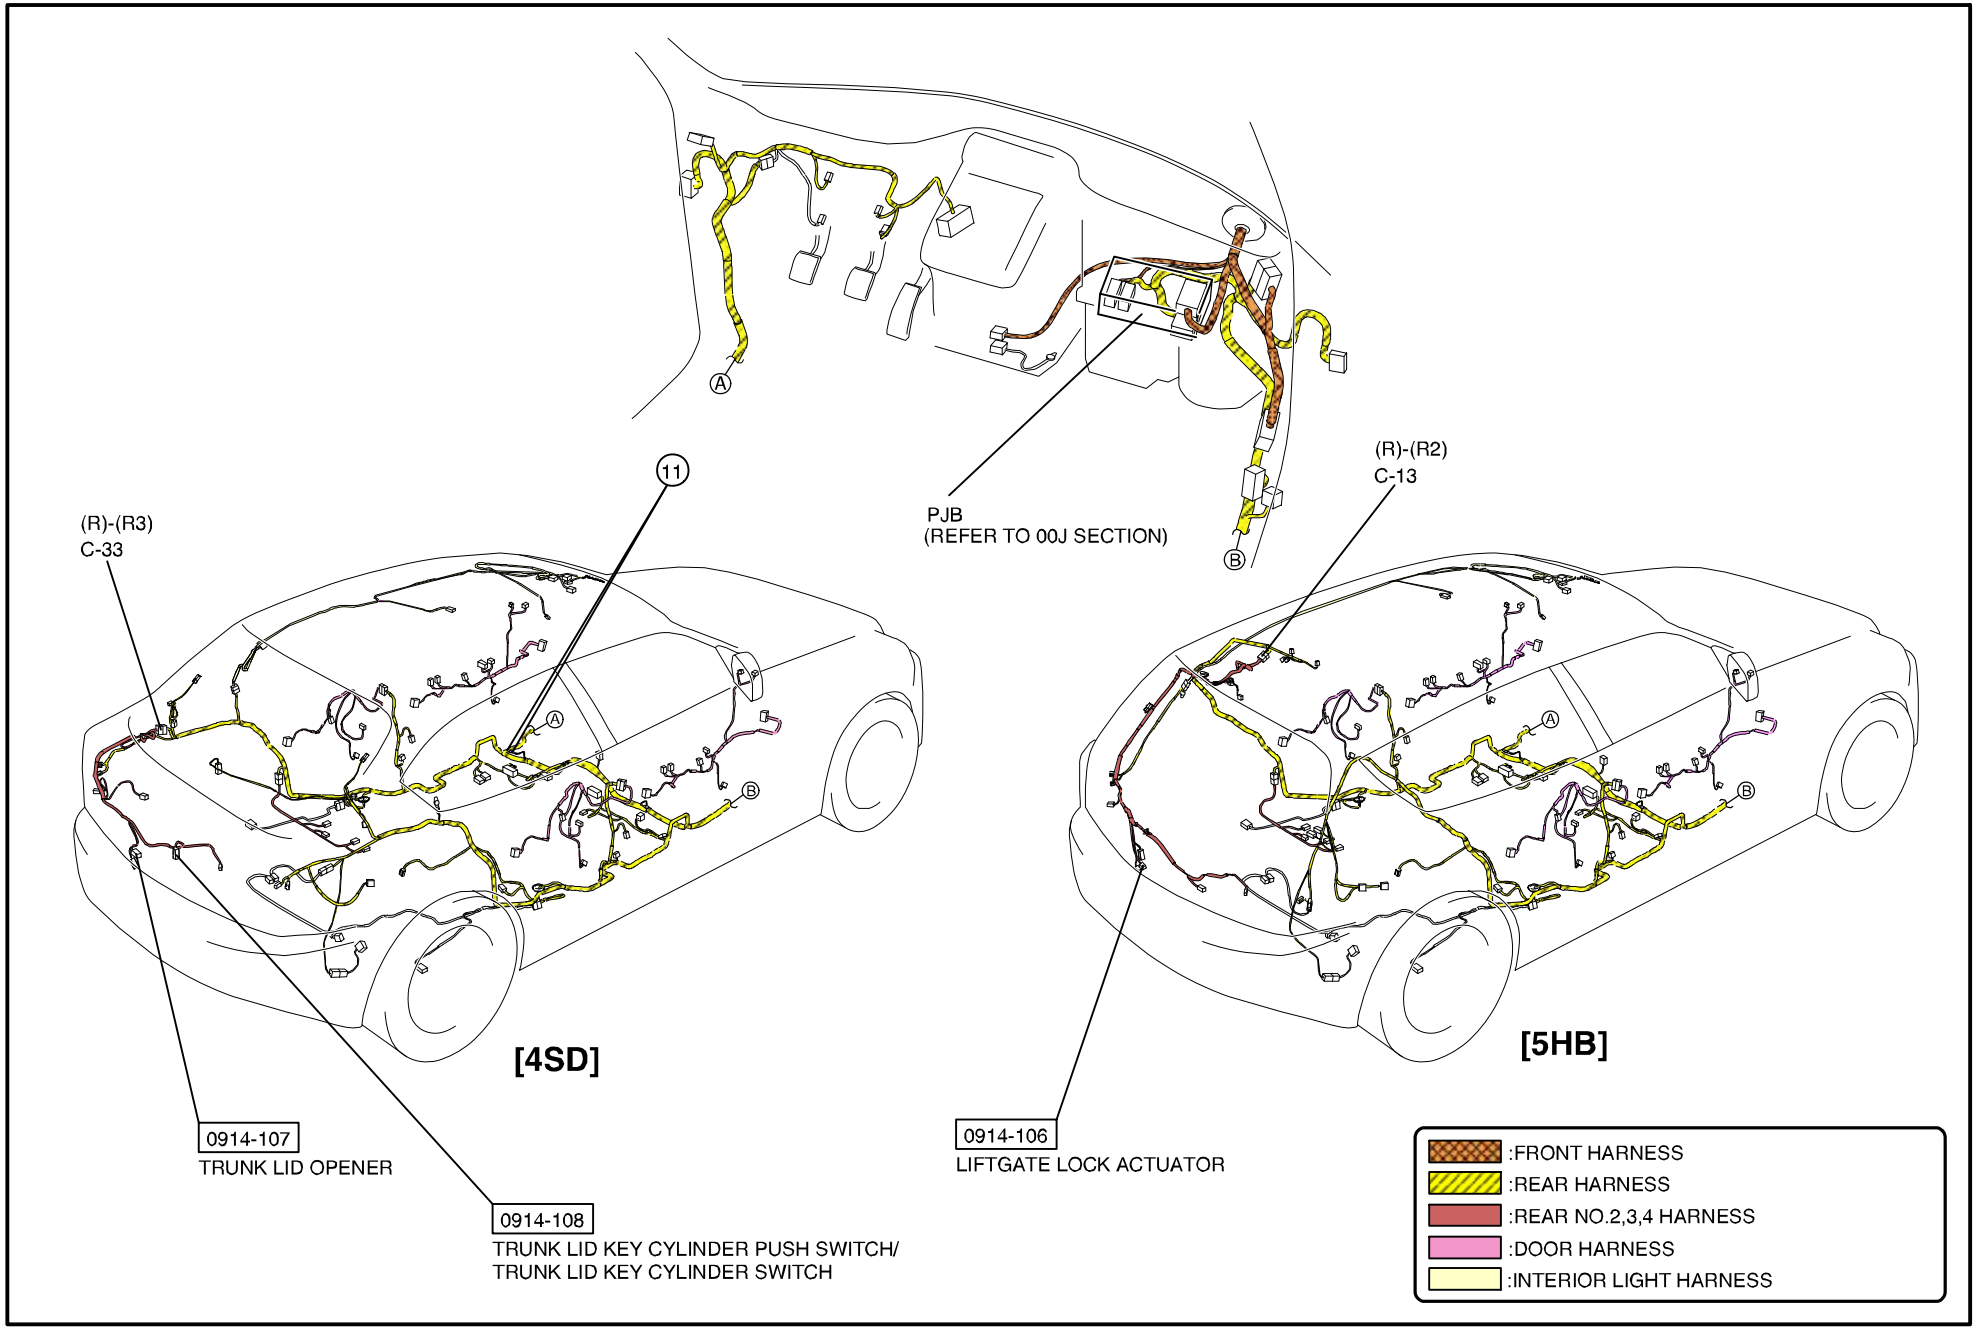

(R)-(R3)
C-33
11
PJB
(REFER TO 00J SECTION)
(R)-(R2)
C-13
[4SD]
[5HB]
0914-107
TRUNK LID OPENER
0914-108
TRUNK LID KEY CYLINDER PUSH SWITCH/
TRUNK LID KEY CYLINDER SWITCH
0914-106
LIFTGATE LOCK ACTUATOR
:FRONT HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-13
REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

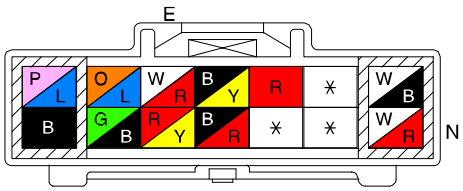


REAR NO.2 HARNESS

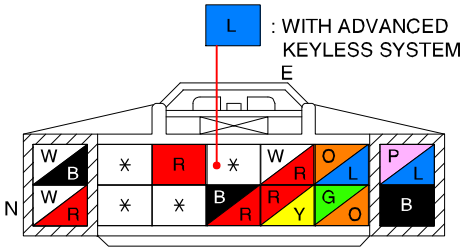


C-33
REAR HARNESS-REAR NO.3 HARNESS


REAR HARNESS

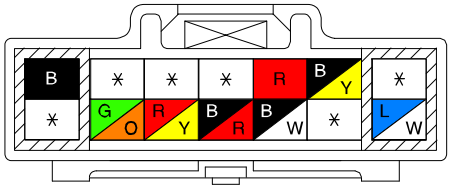


REAR NO.3 HARNESS

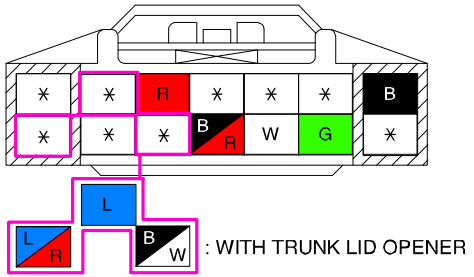


POWER DOOR LOCK SYSTEM (WITH DOUBLE LOCKING SYSTEM)

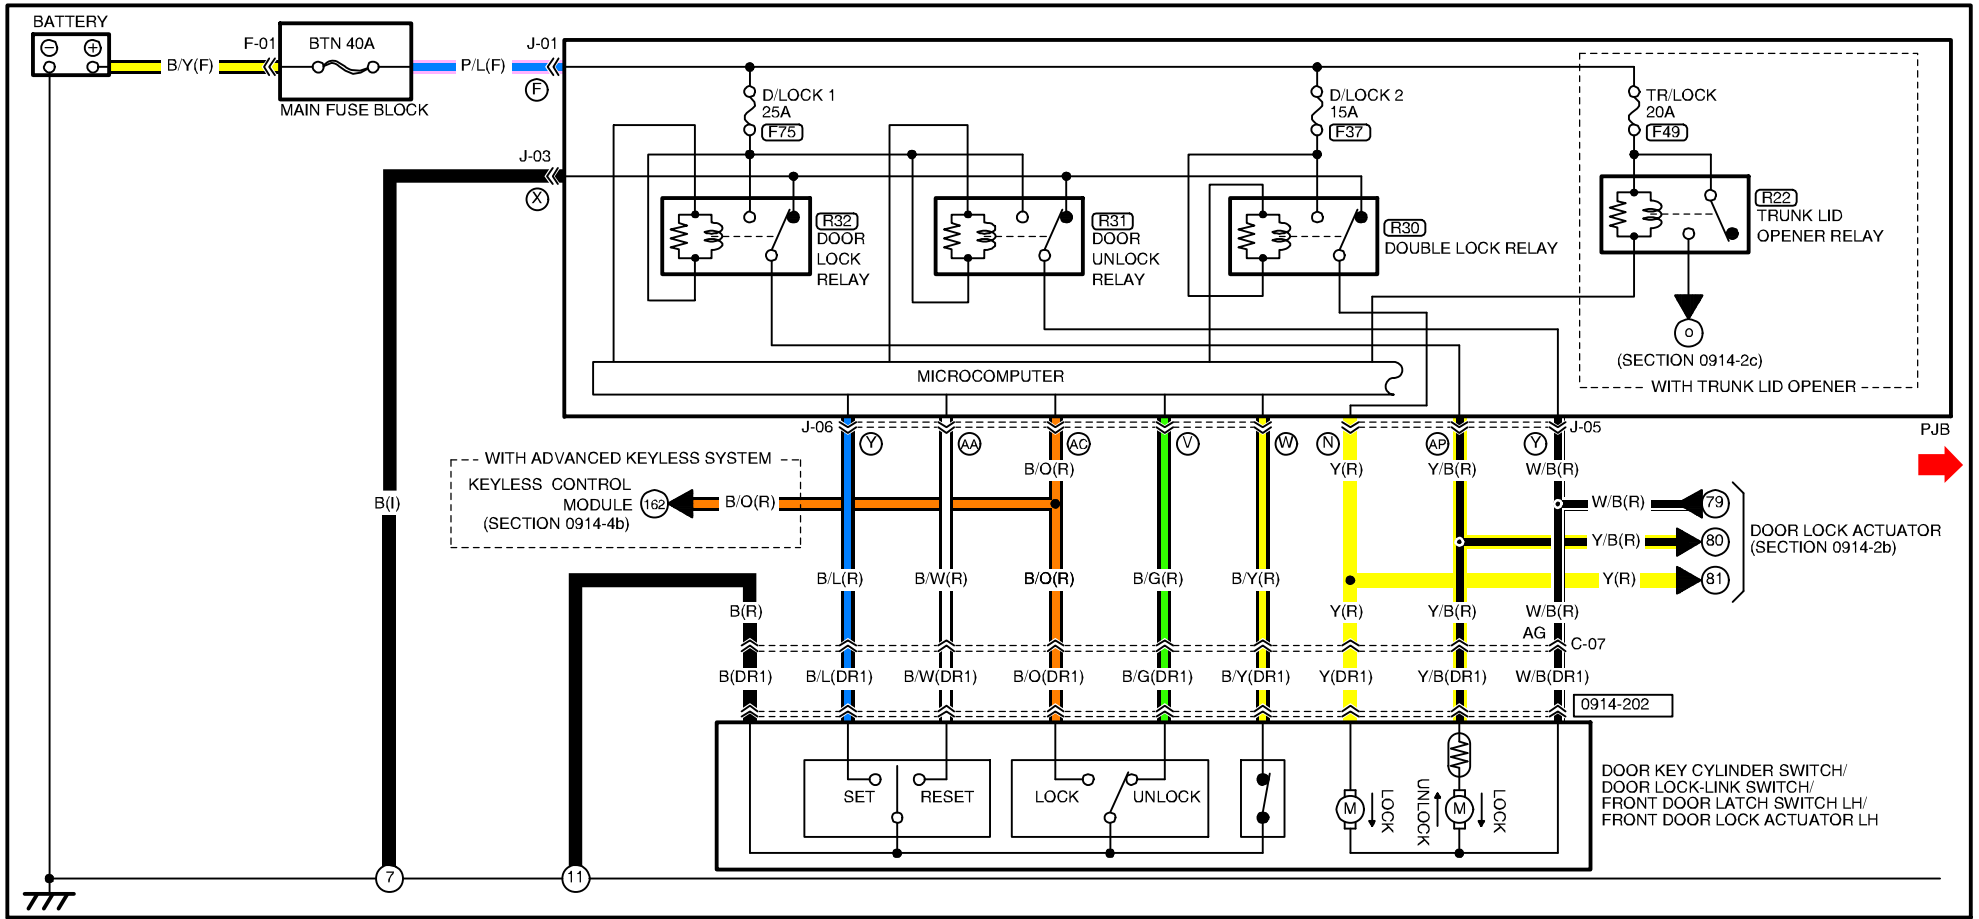


0914-202
DOOR KEY CYLINDER SWITCH/
DOOR LOCK-LINK SWITCH/
FRONT DOOR LATCH SWITCH LH/
FRONT DOOR LOCK ACTUATOR LH

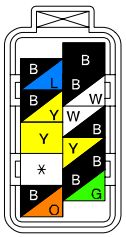


POWER DOOR LOCK SYSTEM (WITH DOUBLE LOCKING SYSTEM)

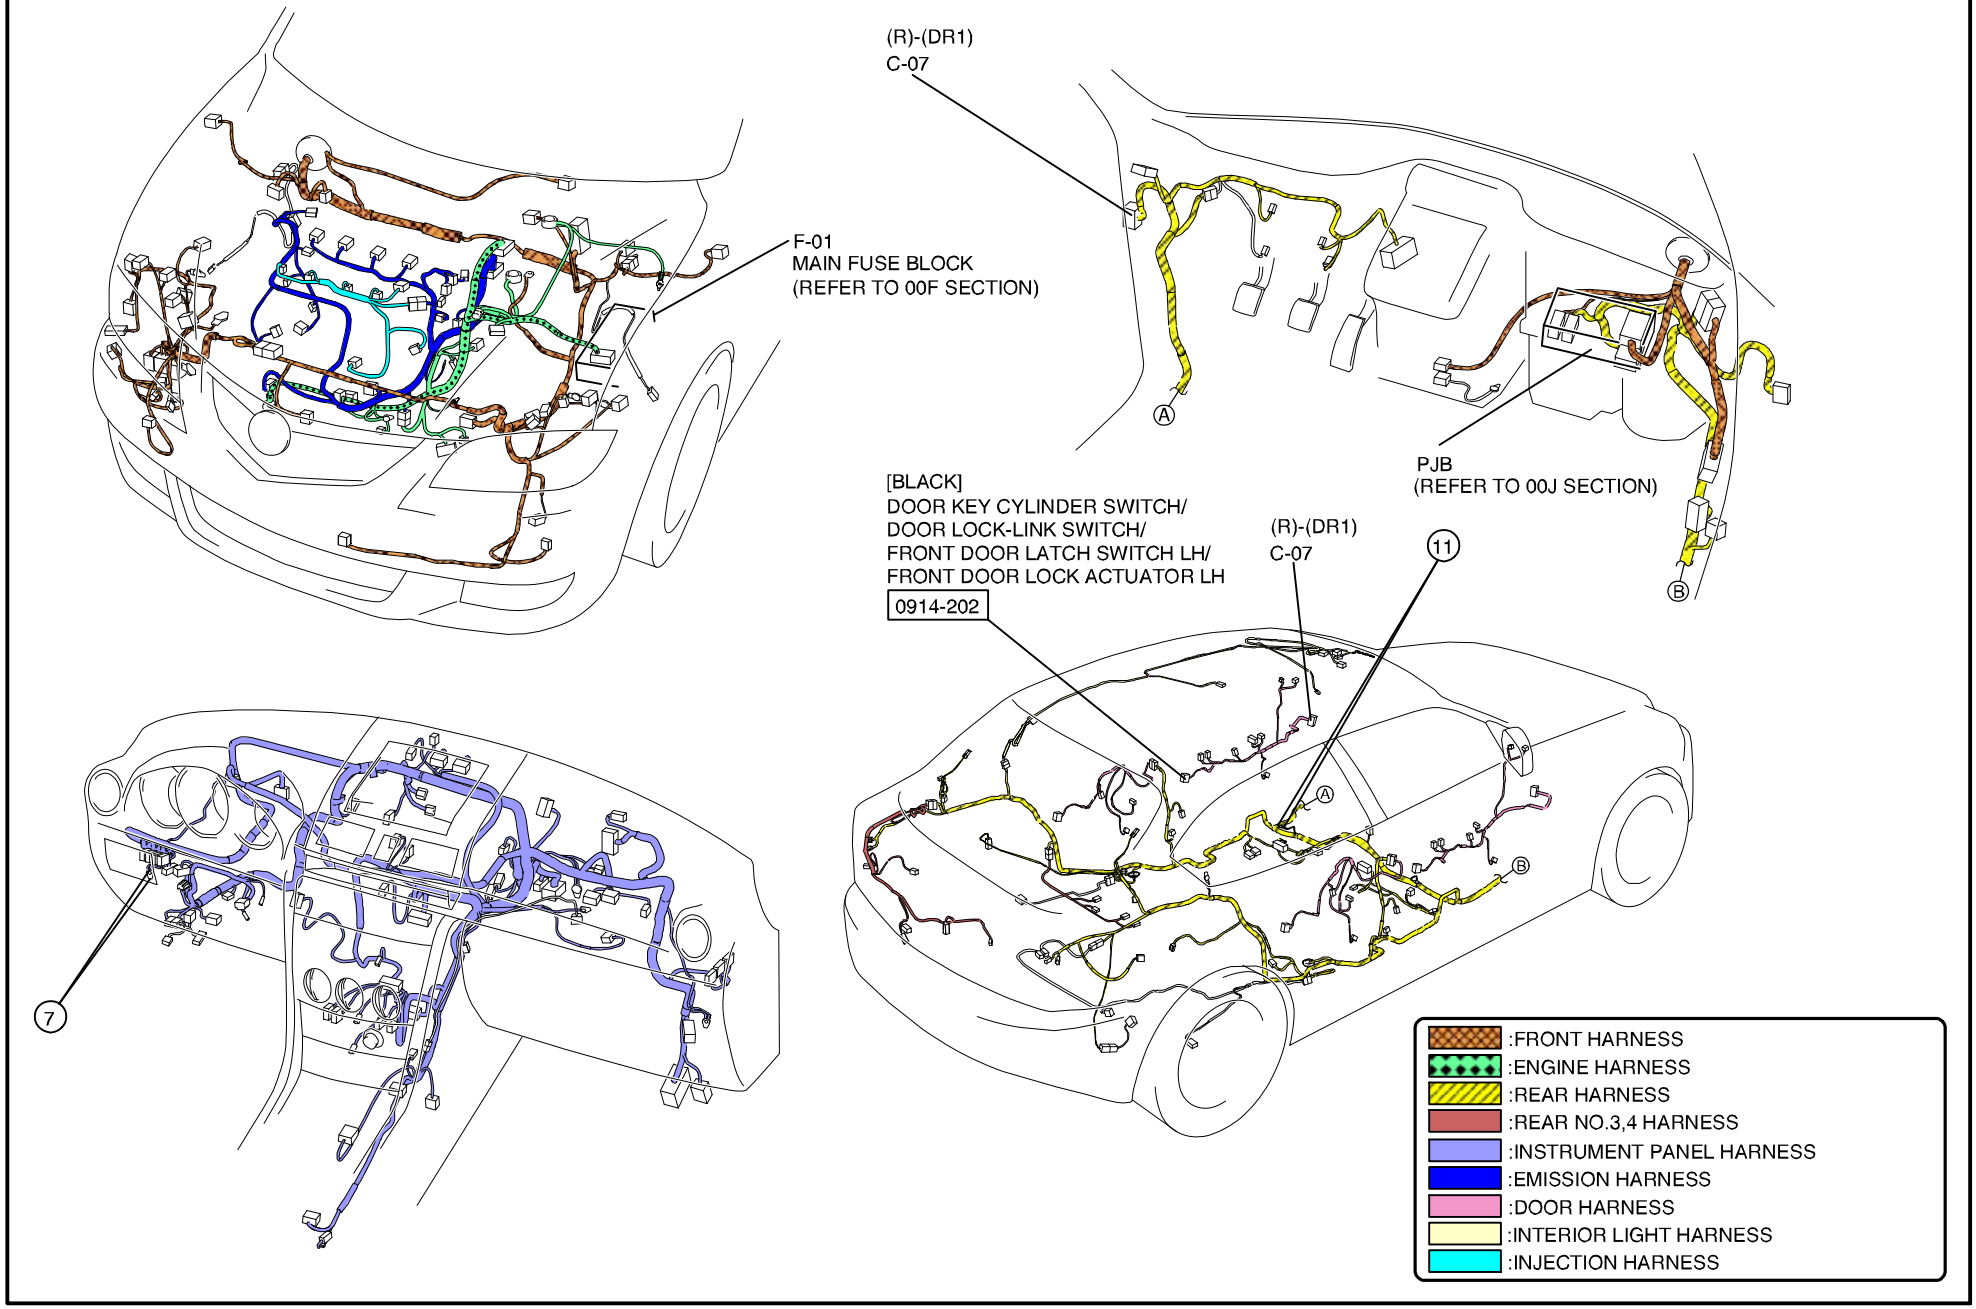


C-07
REAR HARNESS-DOOR NO.1 HARNESS

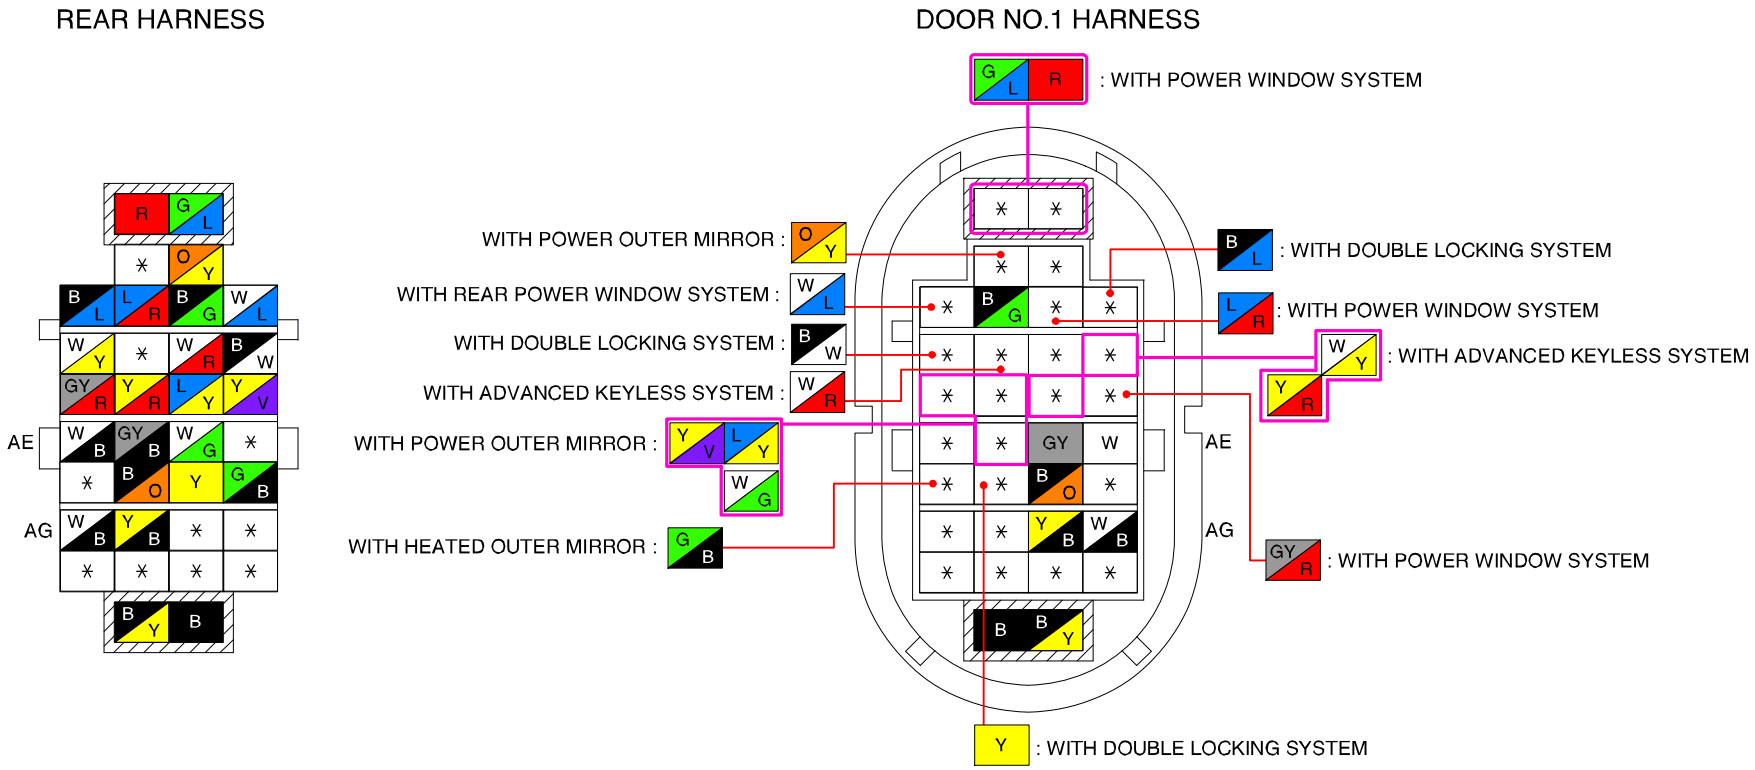


POWER DOOR LOCK SYSTEM (WITH DOUBLE LOCKING SYSTEM)

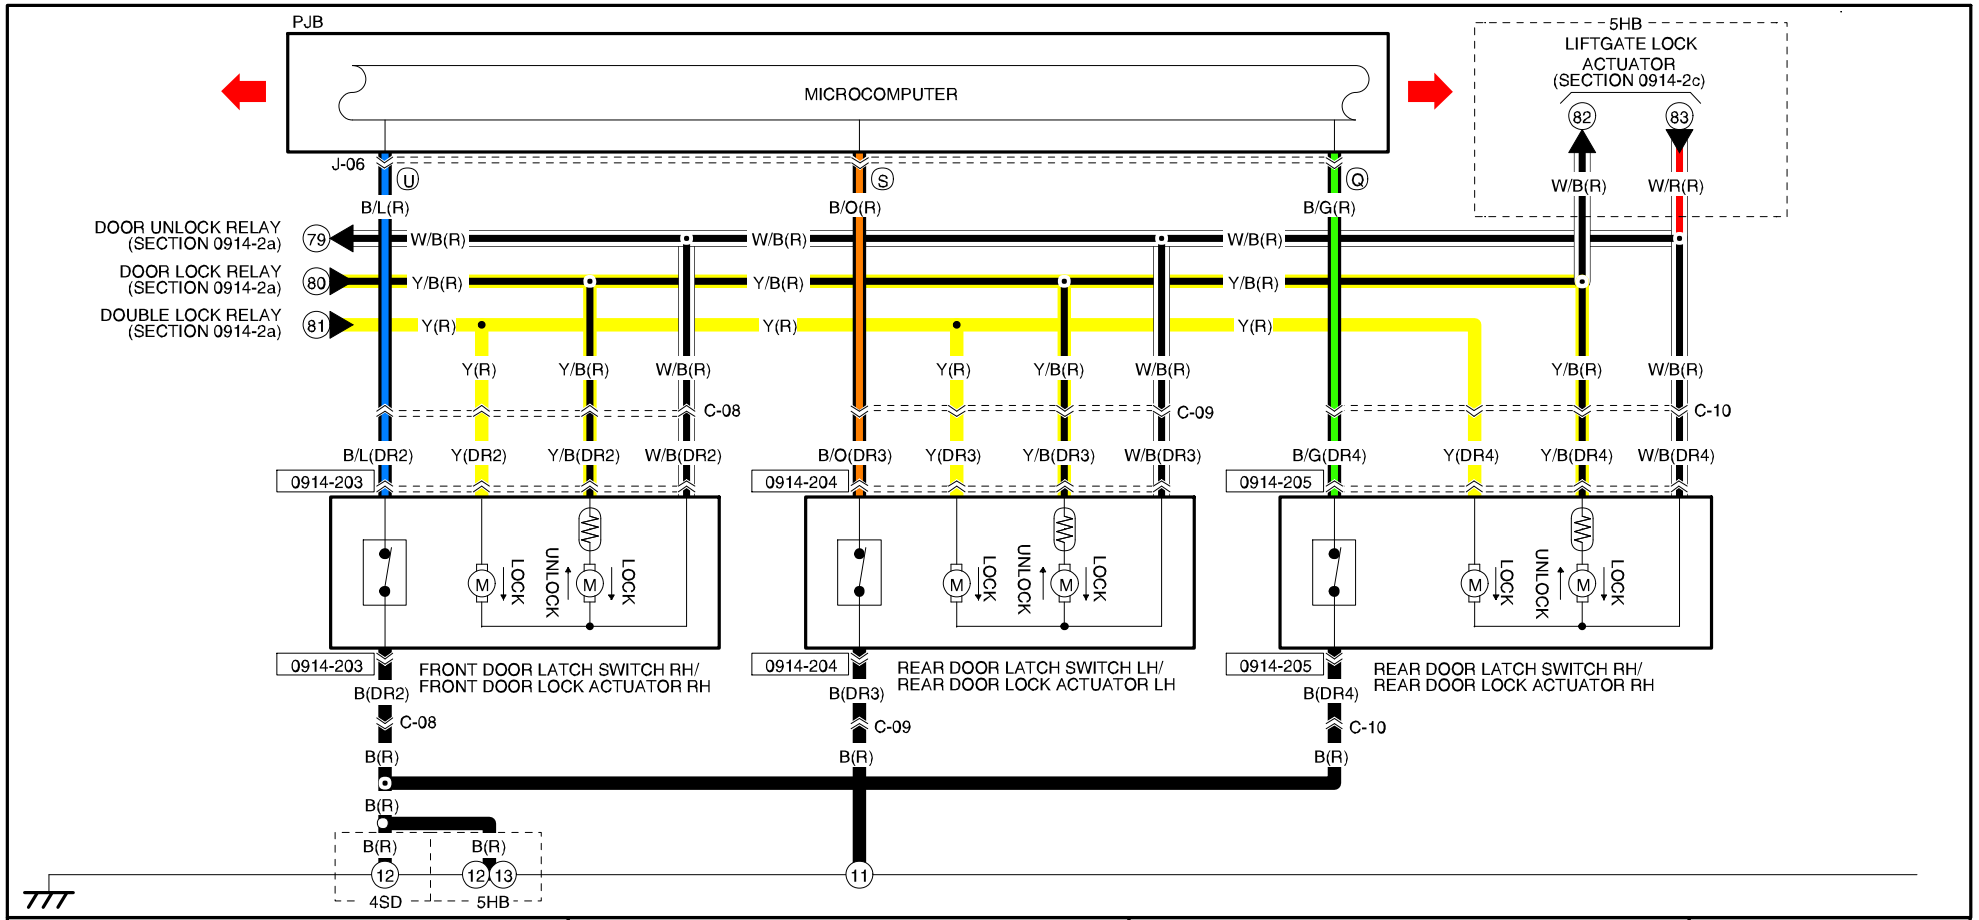


0914-203
FRONT DOOR LATCH SWITCH RH/
FRONT DOOR LOCK ACTUATOR RH

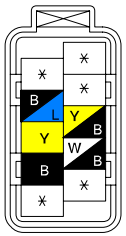


0914-204
REAR DOOR LATCH SWITCH LH/
REAR DOOR LOCK ACTUATOR LH

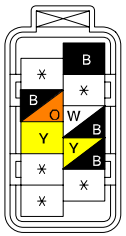


0914-205
REAR DOOR LATCH SWITCH RH/
REAR DOOR LOCK ACTUATOR RH

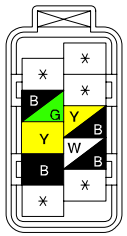


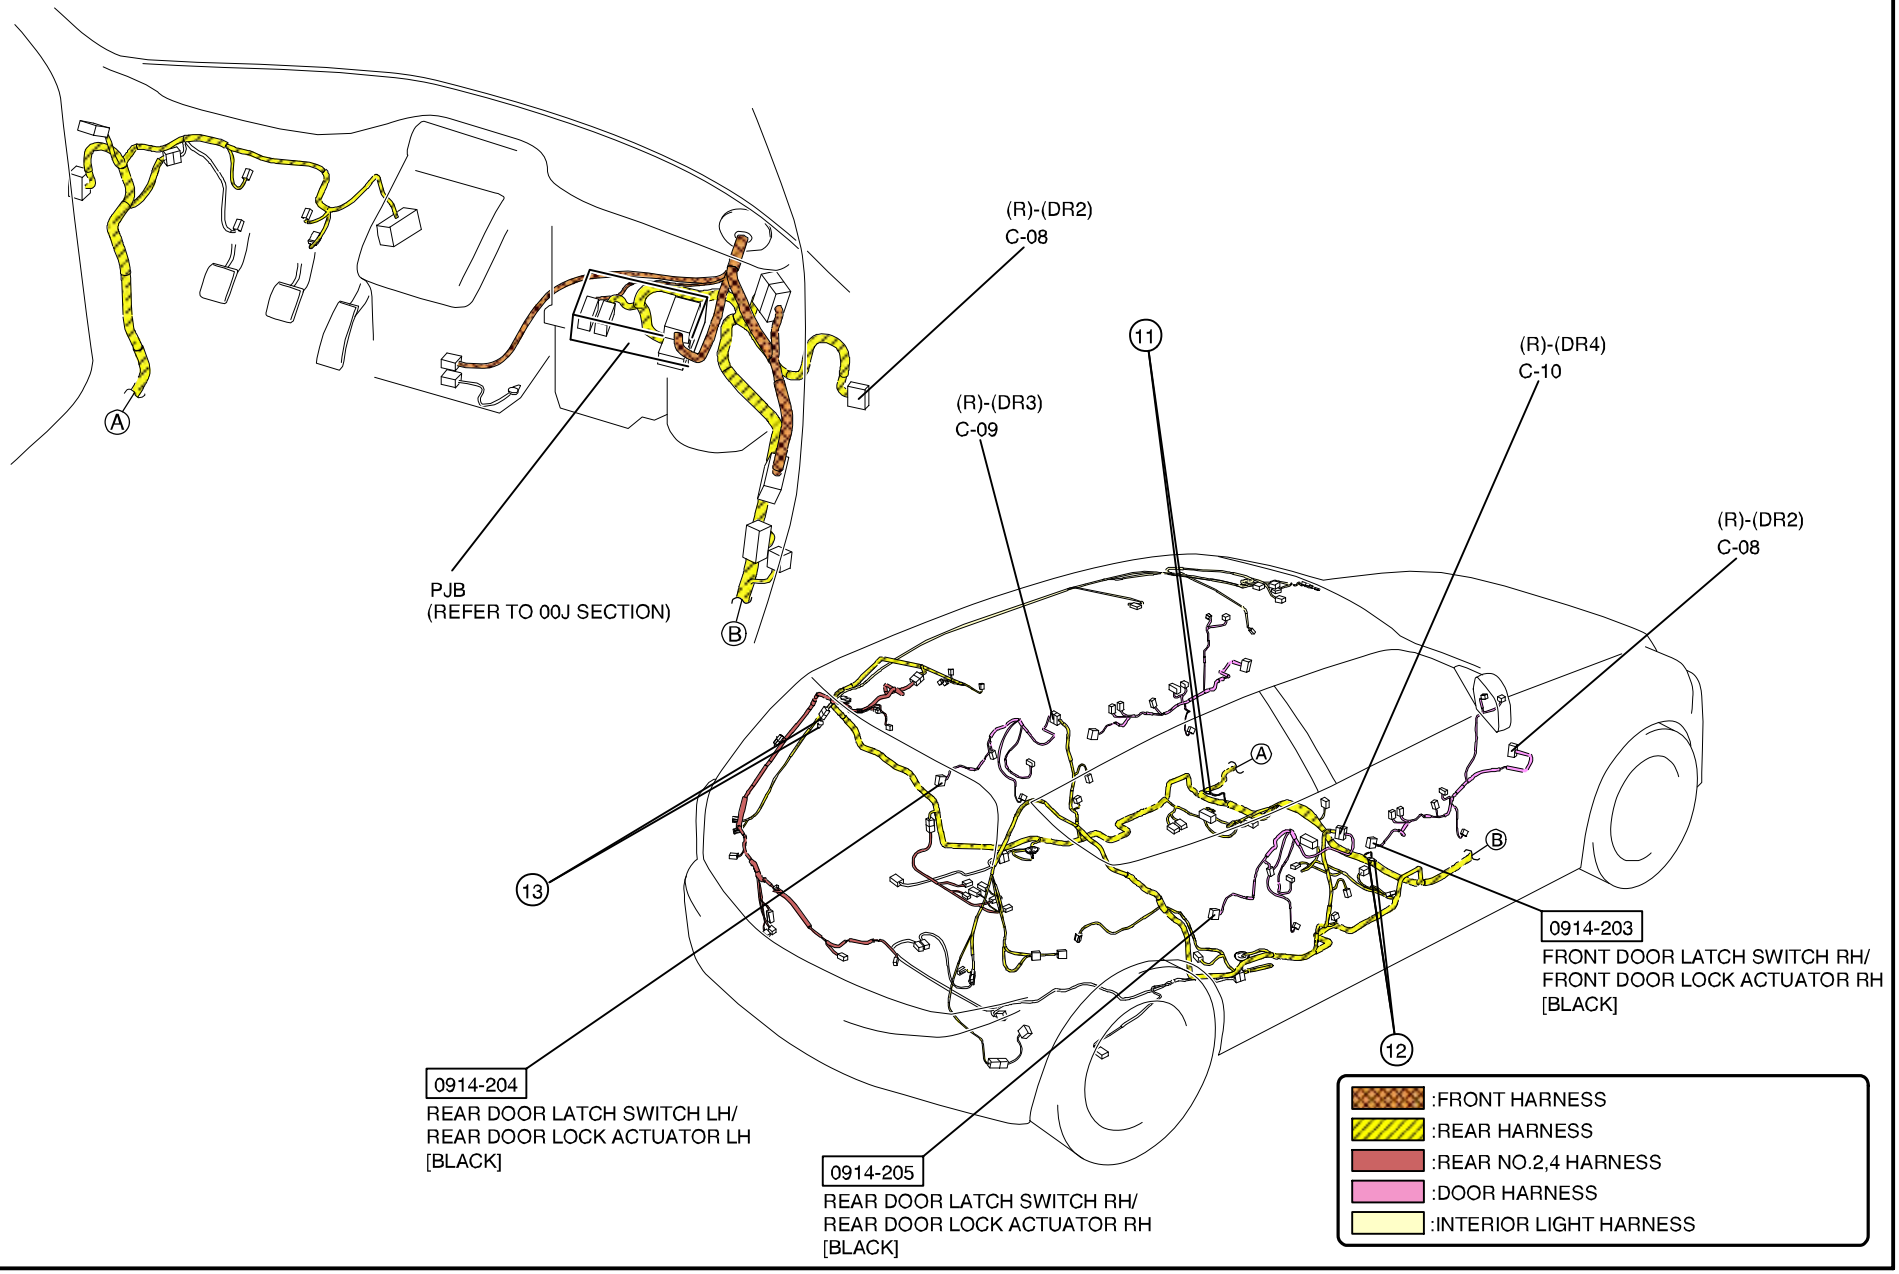
(R)-(DR2)
C-08
(R)-(DR3)
C-09
(R)-(DR4)
C-10
(R)-(DR2)
C-08
PJB
(REFER TO 00J SECTION)
A
B
11
12
13
0914-203
FRONT DOOR LATCH SWITCH RH/
FRONT DOOR LOCK ACTUATOR RH
[BLACK]
0914-204
REAR DOOR LATCH SWITCH LH/
REAR DOOR LOCK ACTUATOR LH
[BLACK]
0914-205
REAR DOOR LATCH SWITCH RH/
REAR DOOR LOCK ACTUATOR RH
[BLACK]
:FRONT HARNESS
:REAR HARNESS
:REAR NO.2,4 HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS


C-08
REAR HARNESS-DOOR NO.2 HARNESS

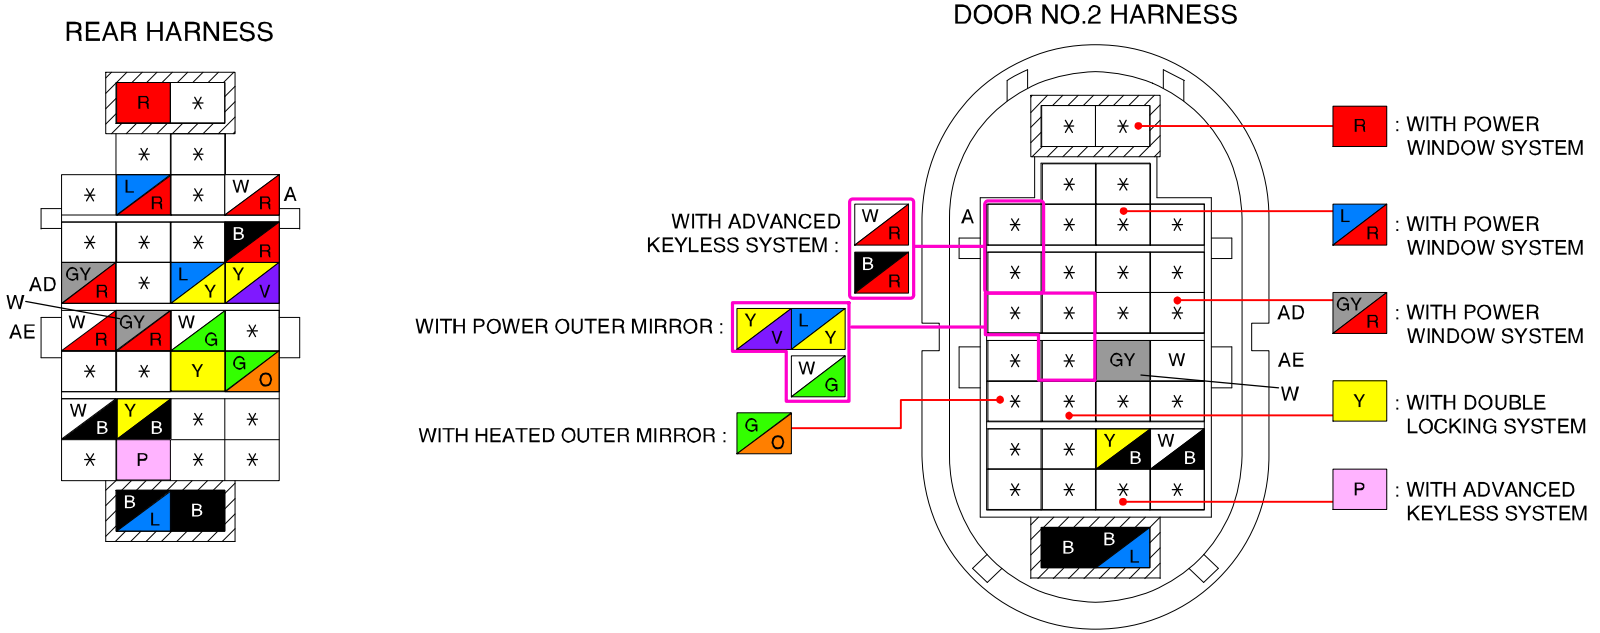


C-09
REAR HARNESS-DOOR NO.3 HARNESS

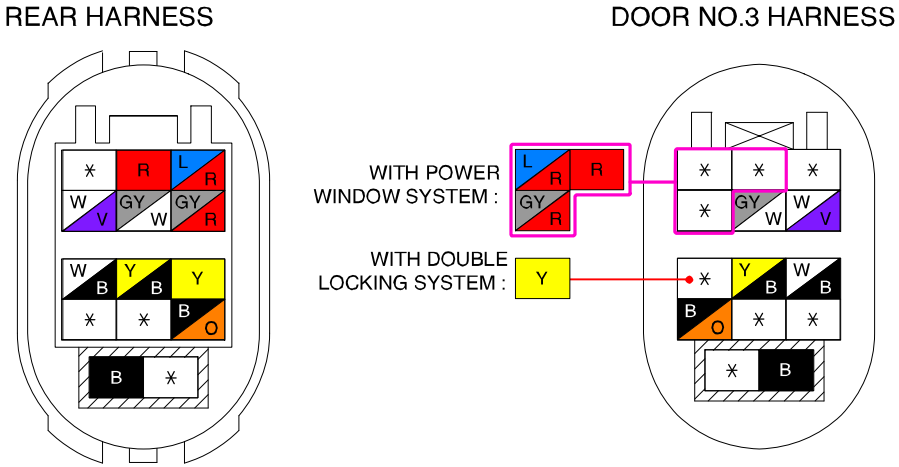


C-10
REAR HARNESS-DOOR NO.4 HARNESS

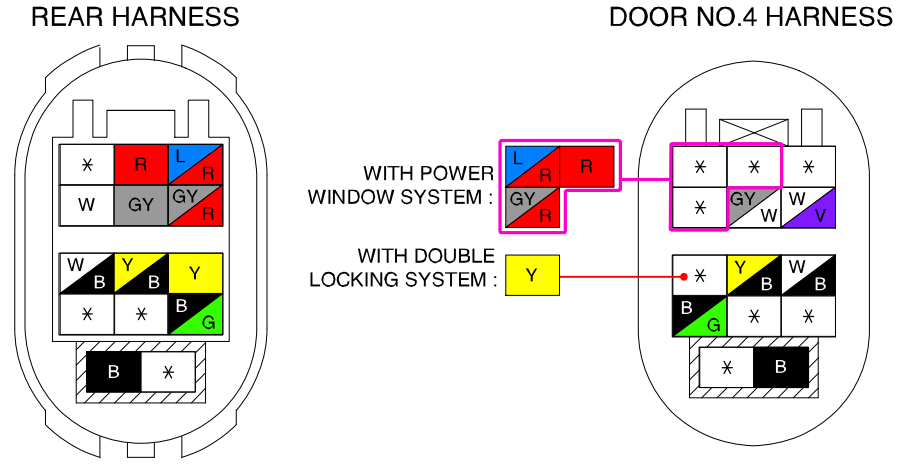


POWER DOOR LOCK SYSTEM (WITH DOUBLE LOCKING SYSTEM)

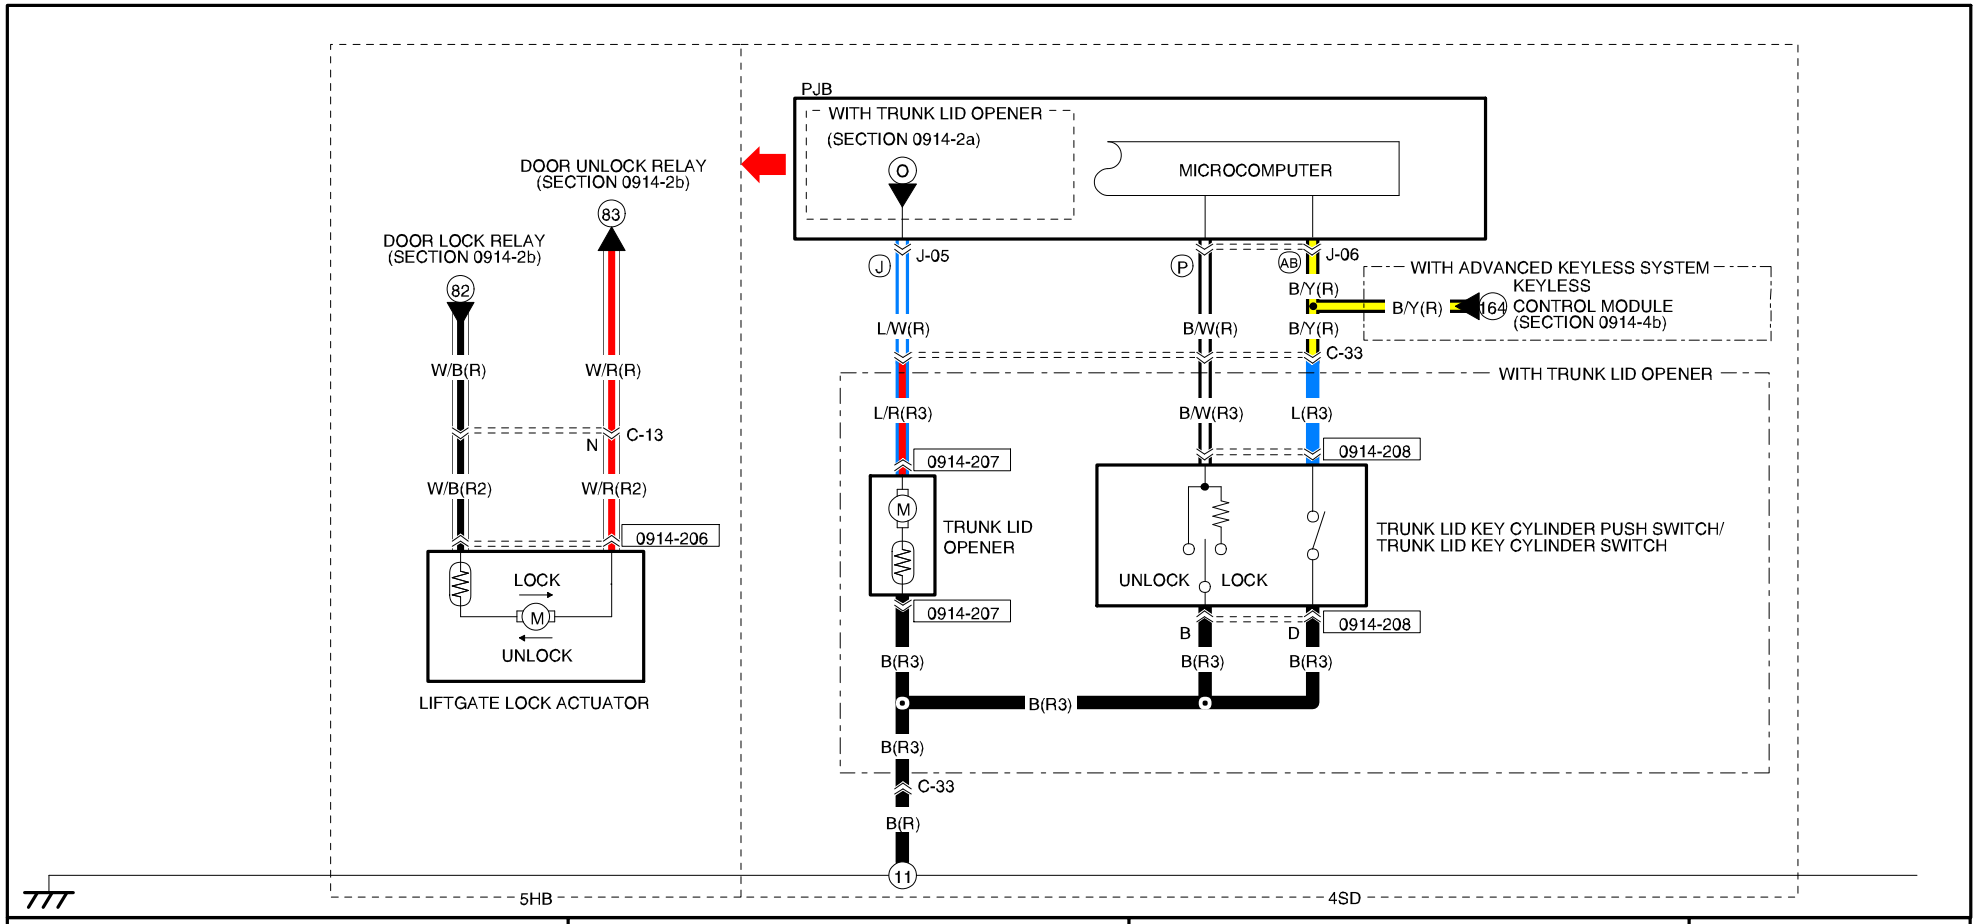


0914-206
LIFTGATE LOCK ACTUATOR




0914-207
TRUNK LID OPENER




0914-208
TRUNK LID KEY CYLINDER PUSH SWITCH/
TRUNK LID KEY CYLINDER SWITCH



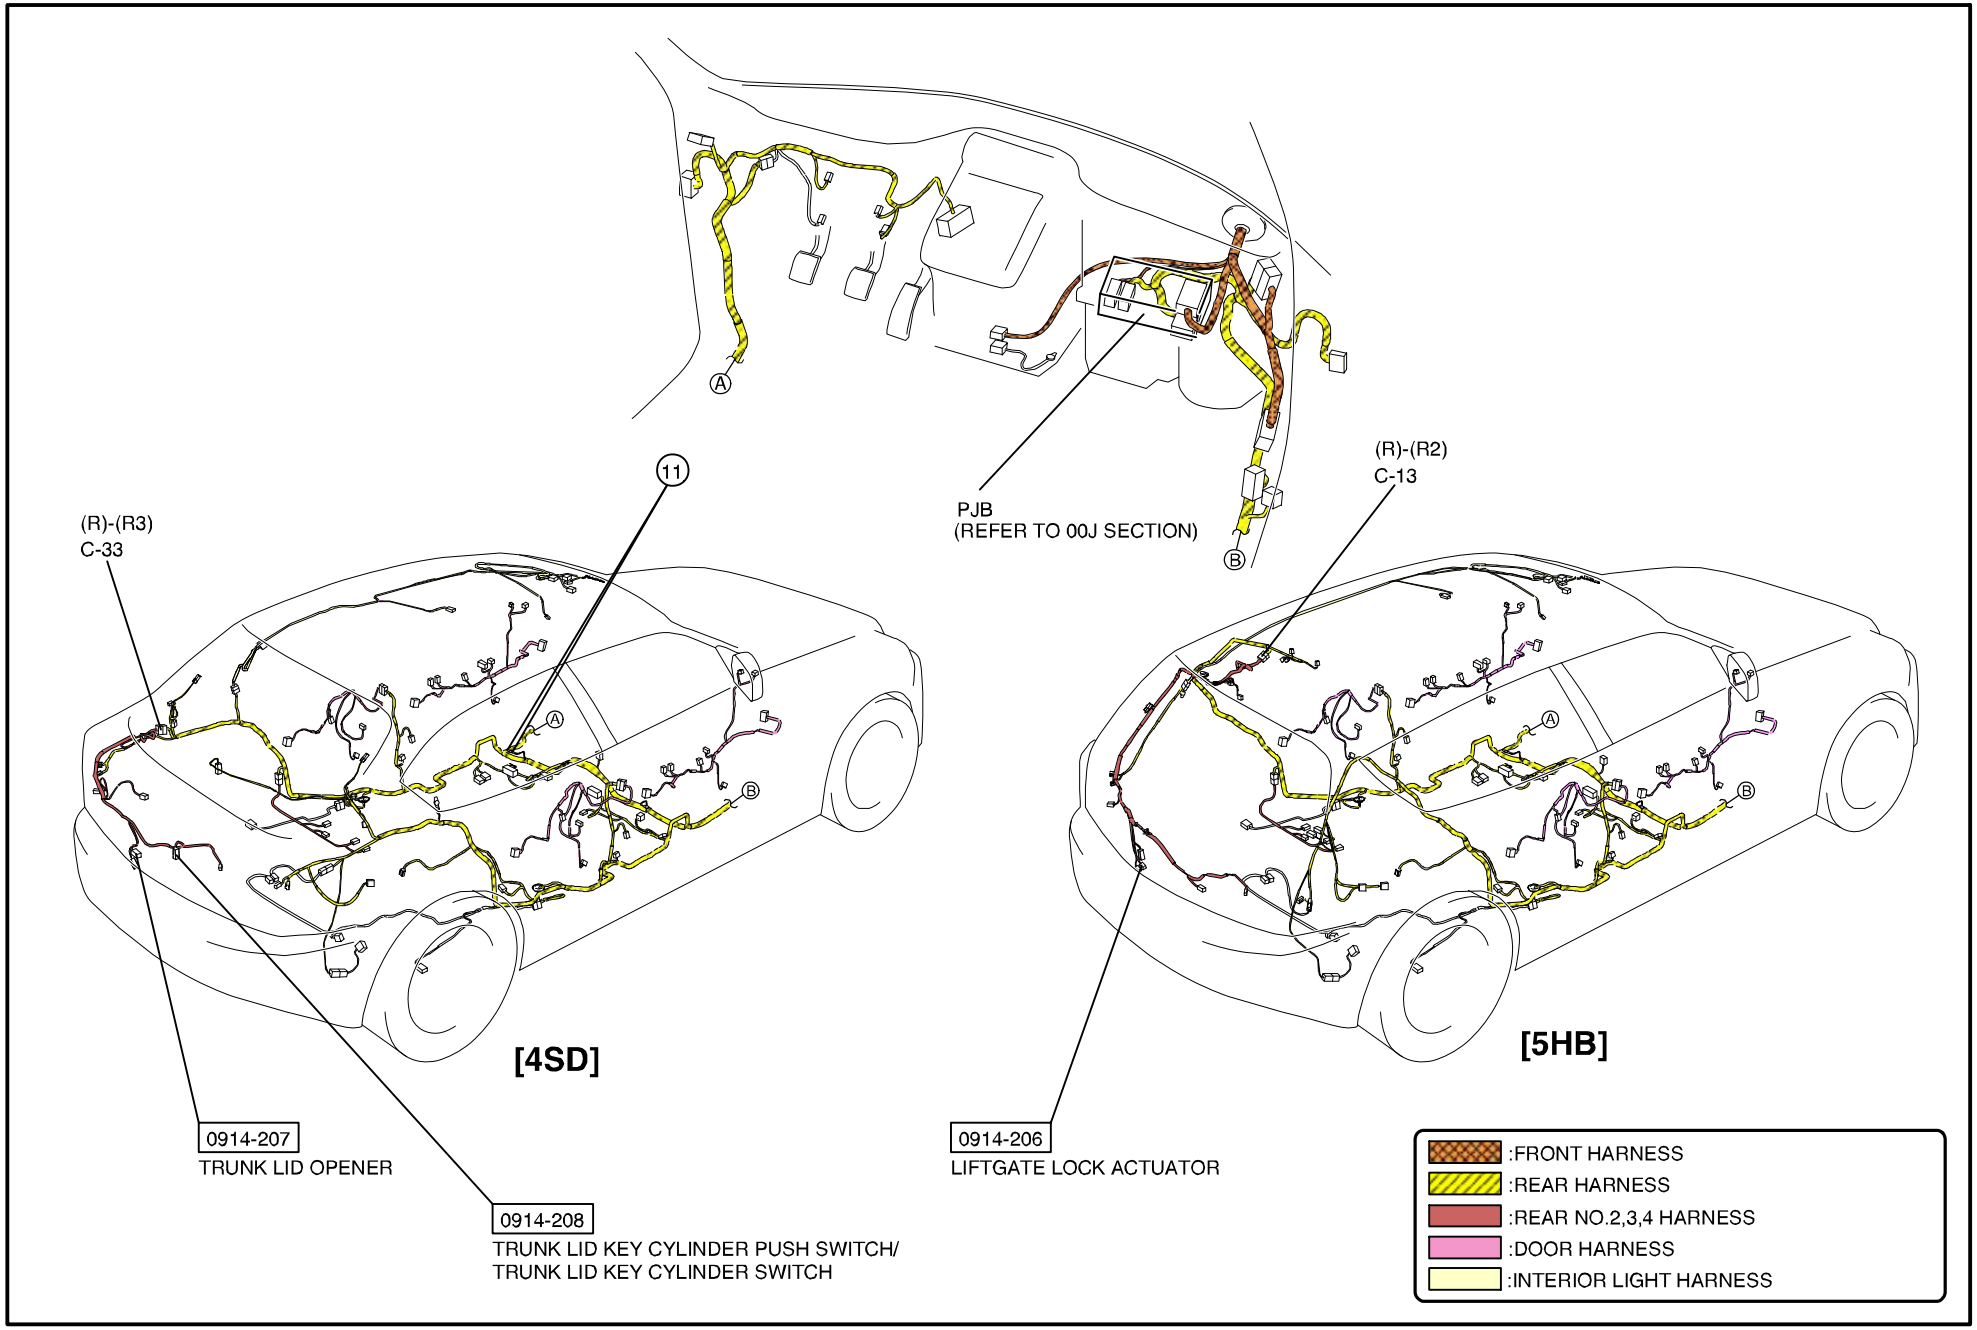

(R)-(R3)
C-33
11
PJB
(REFER TO 00J SECTION)
(R)-(R2)
C-13
[4SD]
[5HB]
0914-207
TRUNK LID OPENER
0914-208
TRUNK LID KEY CYLINDER PUSH SWITCH/
TRUNK LID KEY CYLINDER SWITCH
0914-206
LIFTGATE LOCK ACTUATOR
:FRONT HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-13
REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

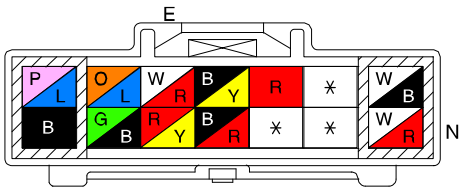


REAR NO.2 HARNESS

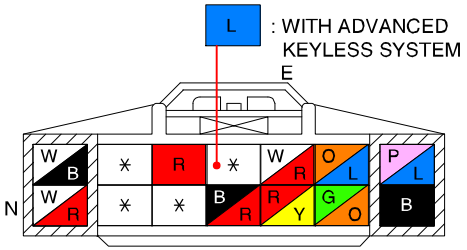



C-33
REAR HARNESS-REAR NO.3 HARNESS

REAR HARNESS

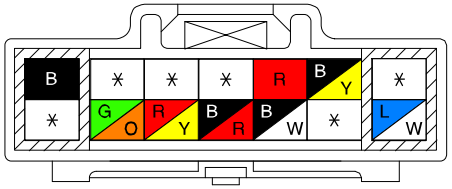



REAR NO.3 HARNESS

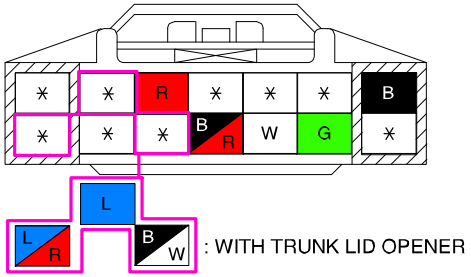

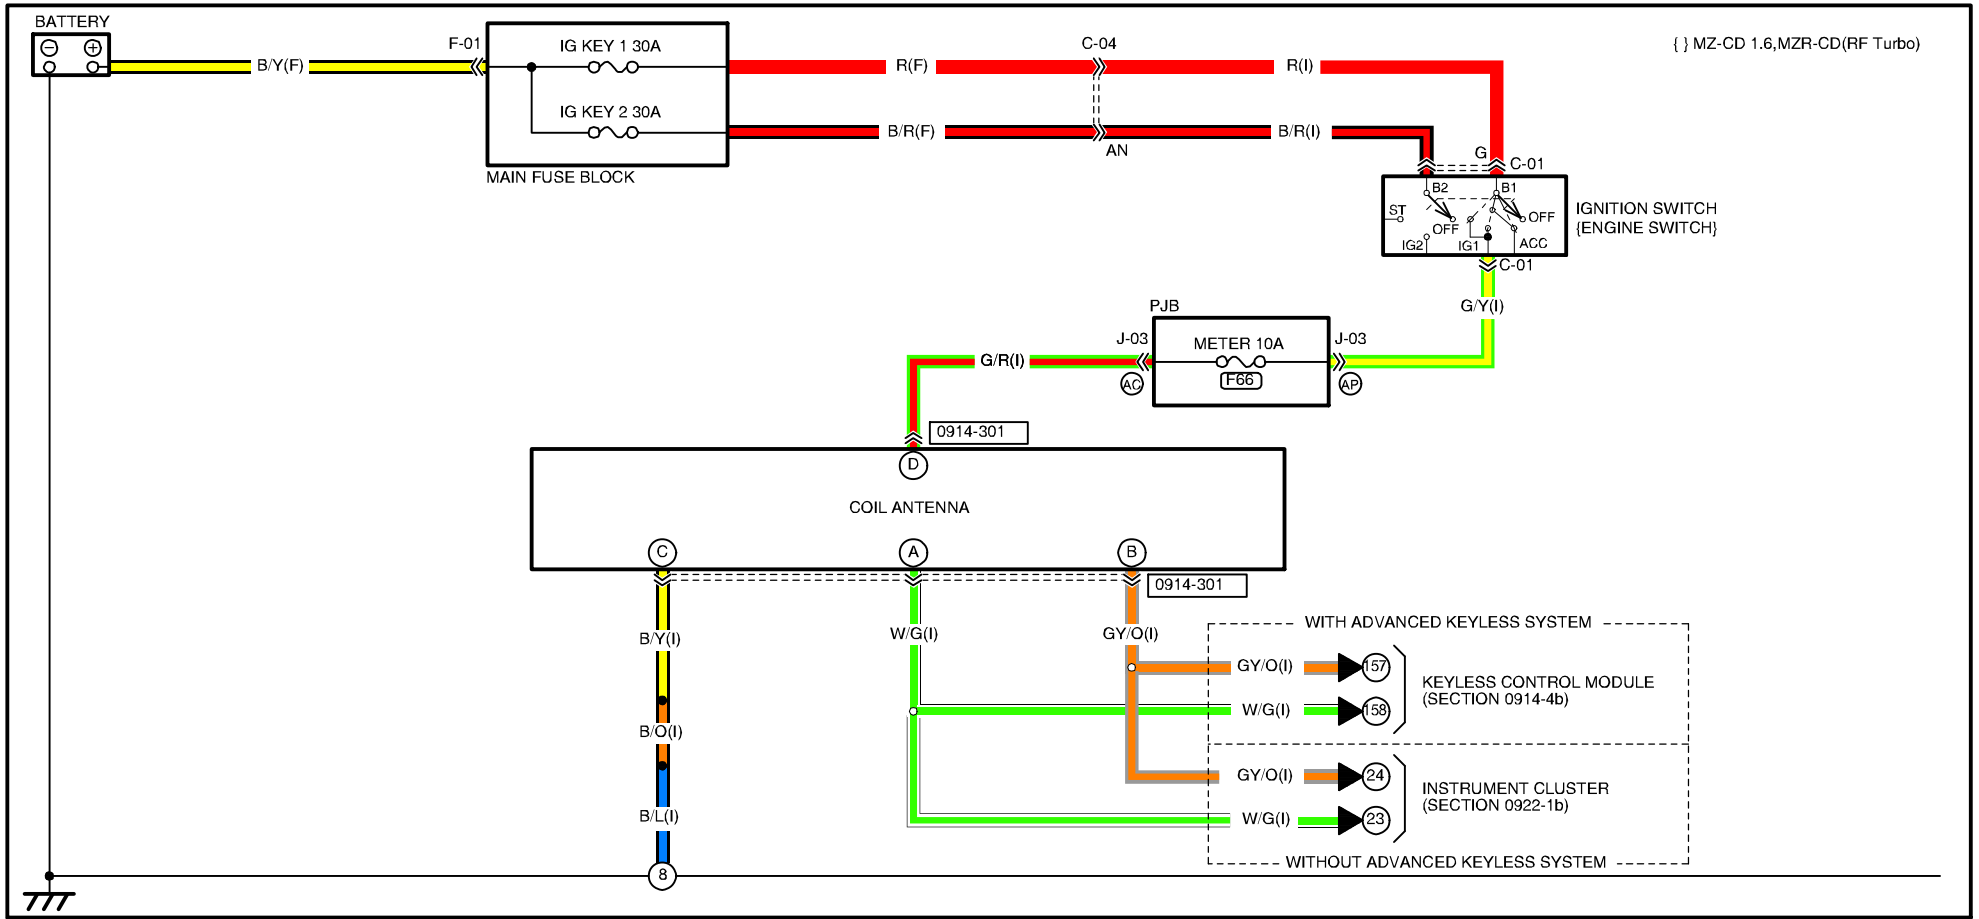


0914-301
COIL ANTENNA



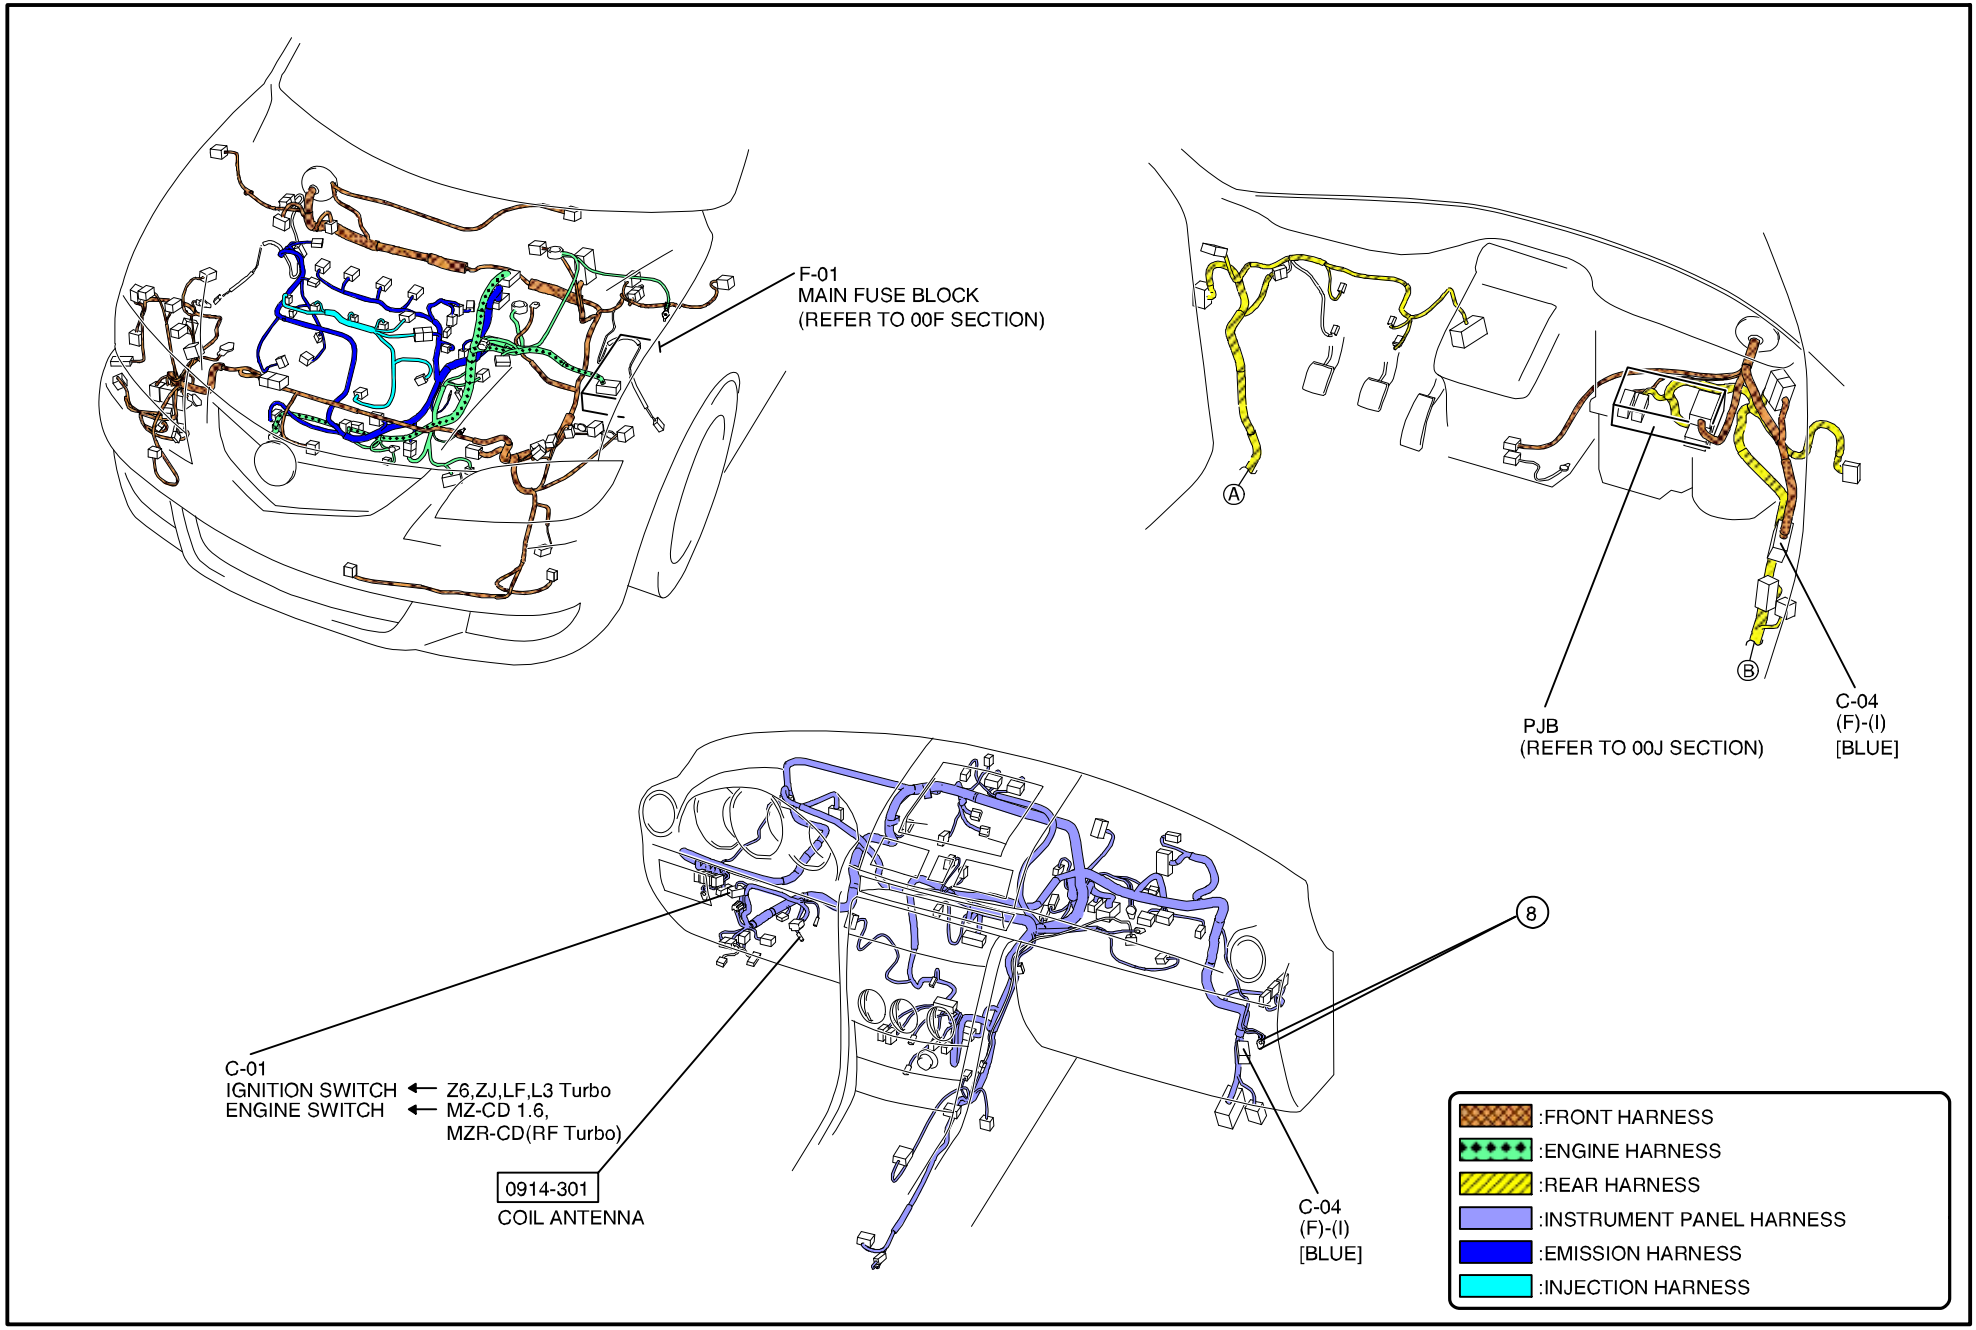

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
Ⓑ
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
8
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,
MZR-CD(RF Turbo)
0914-301
COIL ANTENNA
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

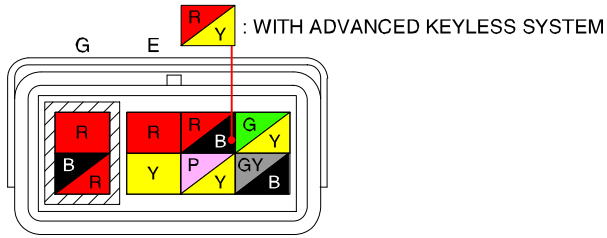


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

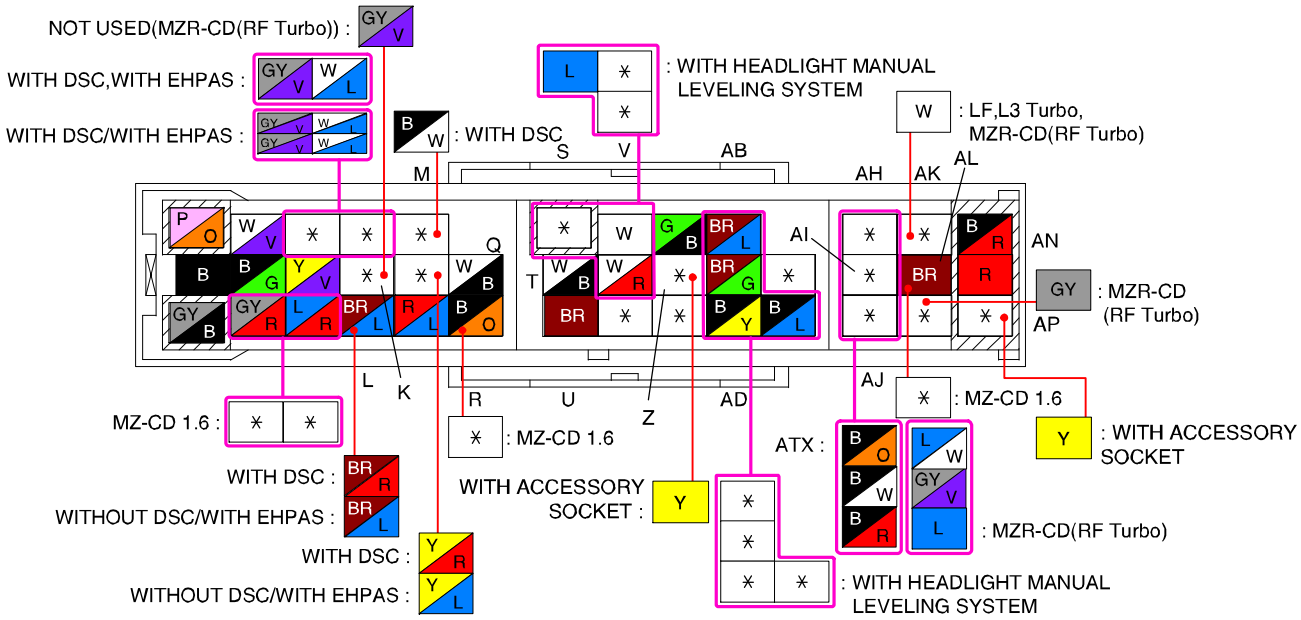


INSTRUMENT PANEL HARNESS

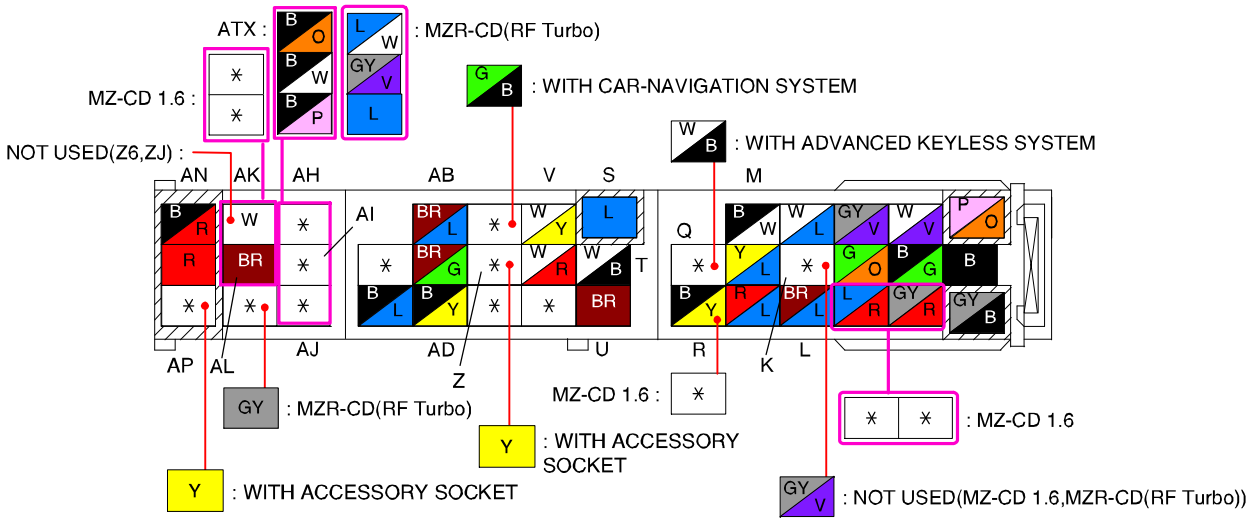


KEYLESS ENTRY SYSTEM (WITH ADVANCED KEYLESS SYSTEM)

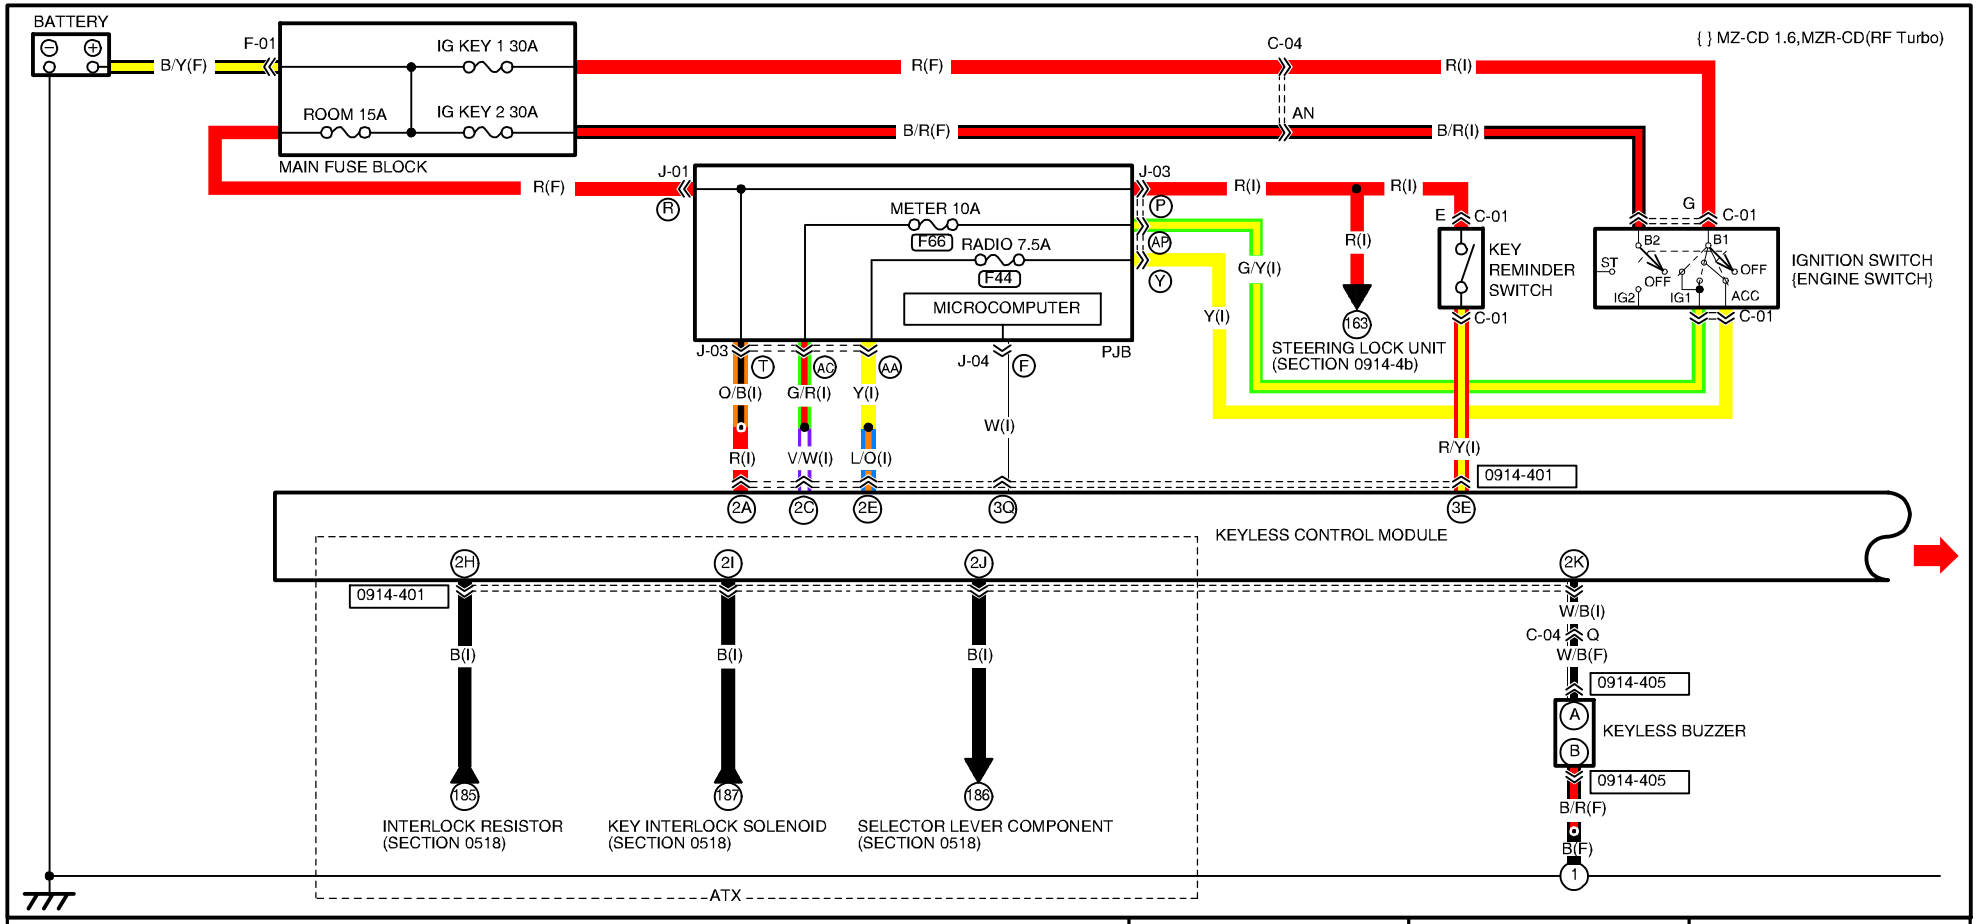


0914-401
KEYLESS CONTROL MODULE

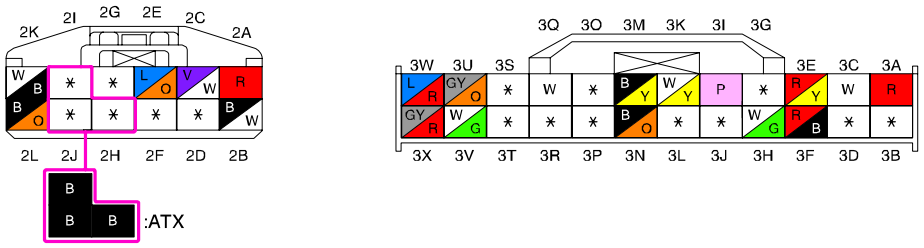


0914-405
KEYLESS BUZZER



KEYLESS ENTRY SYSTEM (WITH ADVANCED KEYLESS SYSTEM)

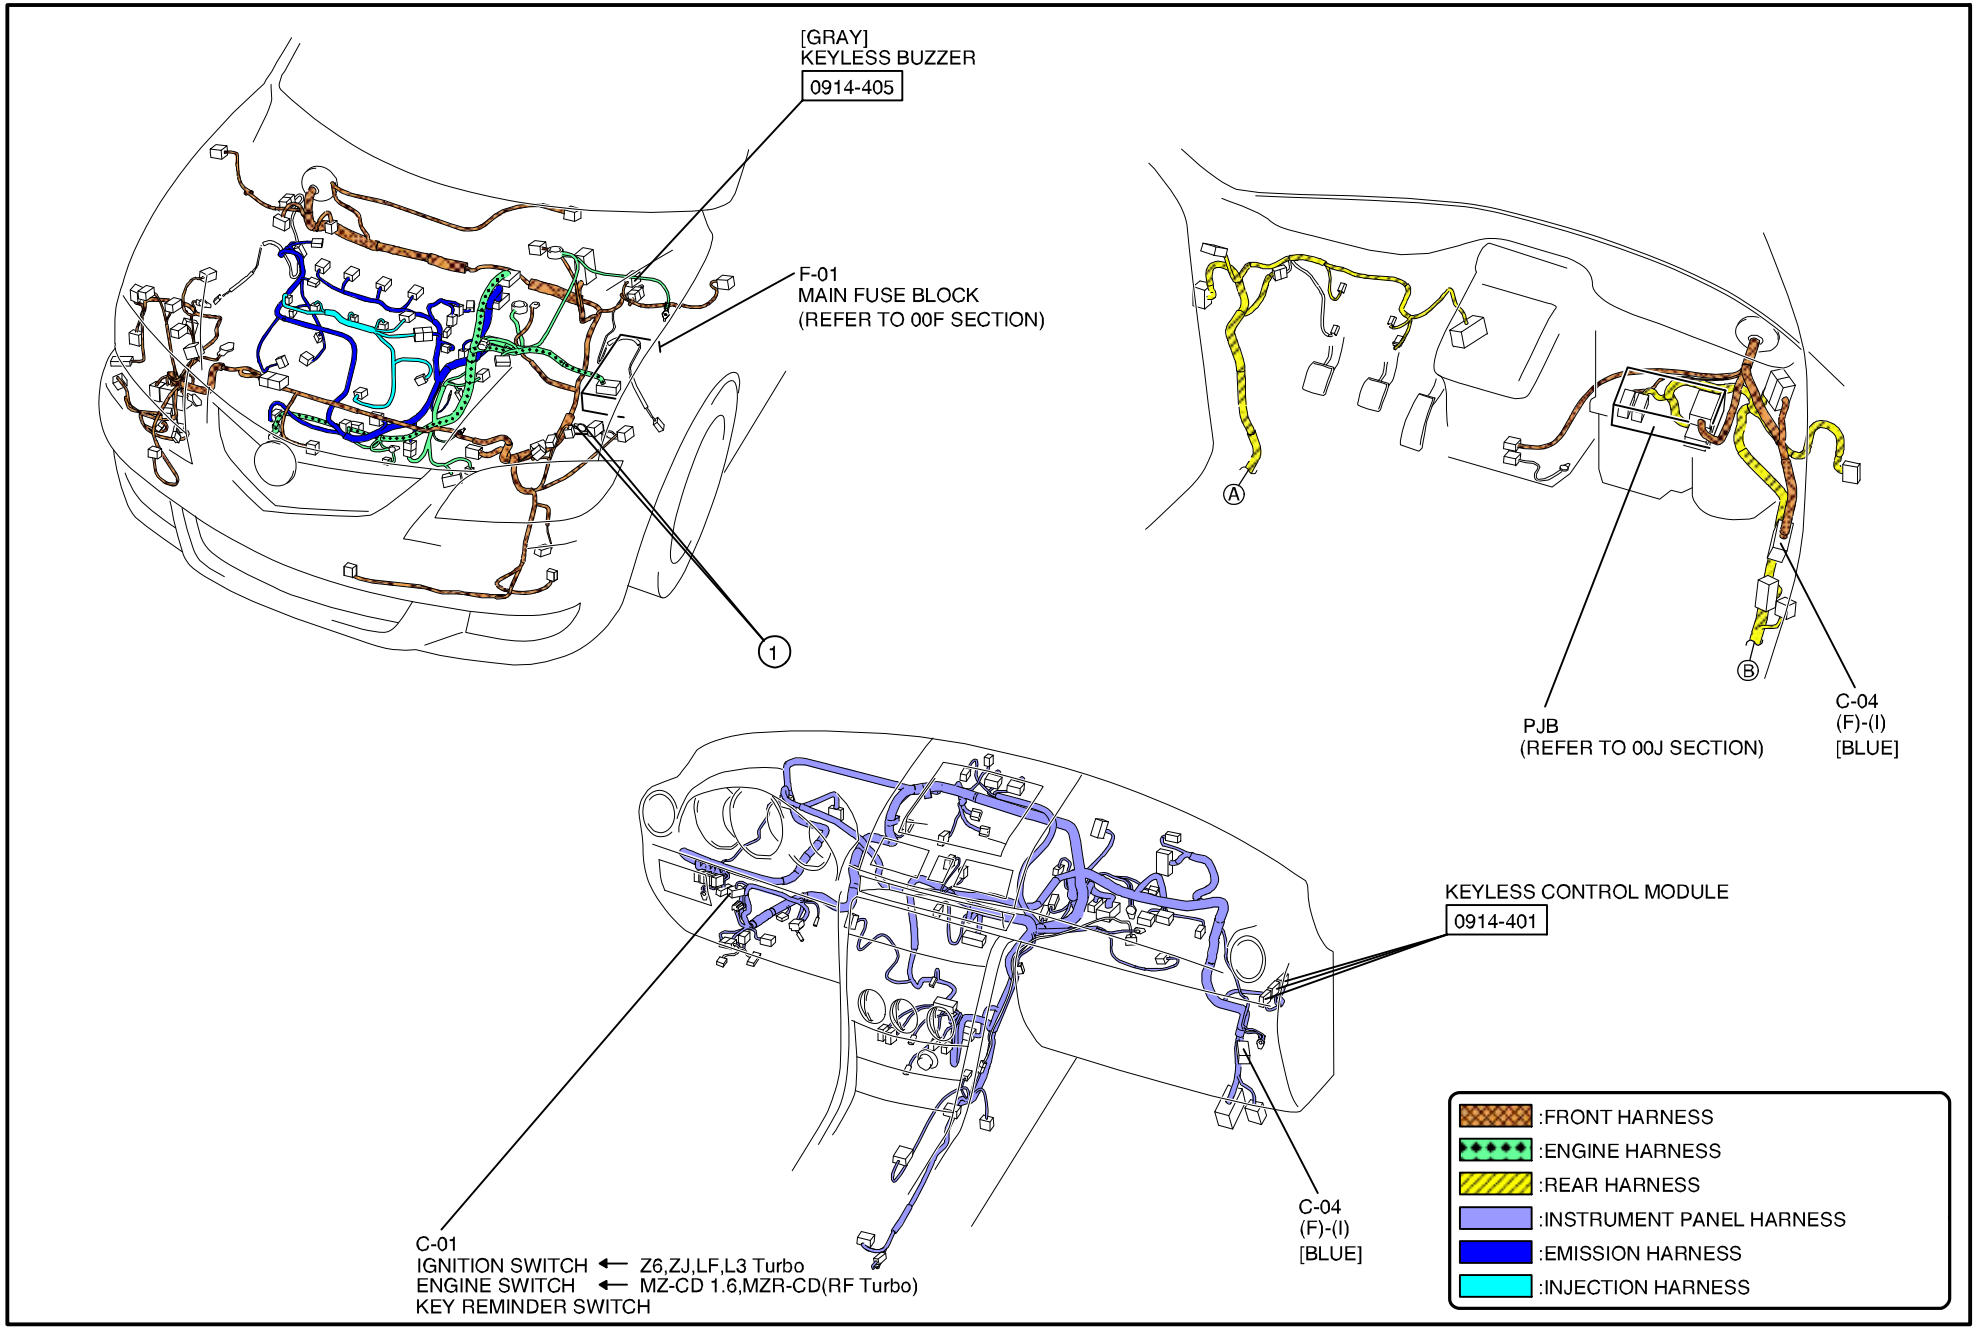


C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

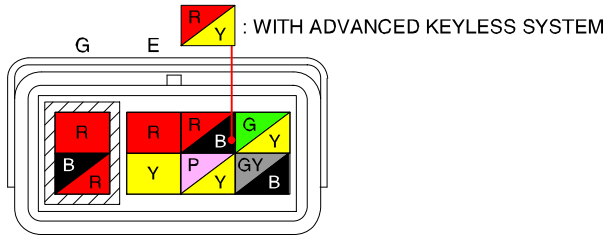


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

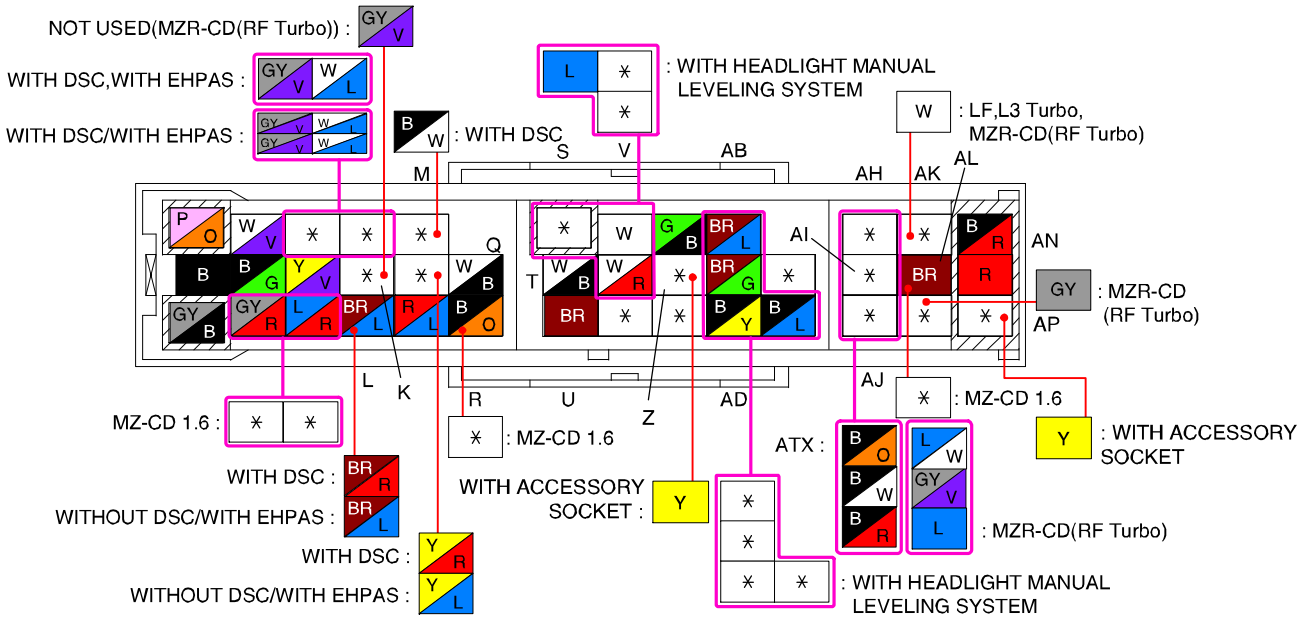


INSTRUMENT PANEL HARNESS

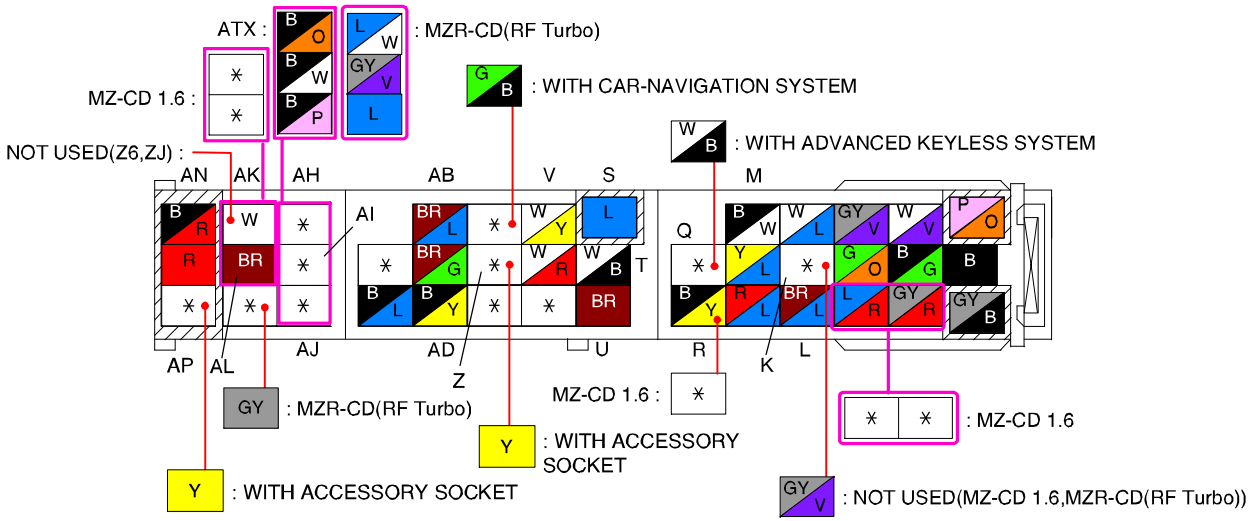


KEYLESS ENTRY SYSTEM (WITH ADVANCED KEYLESS SYSTEM)

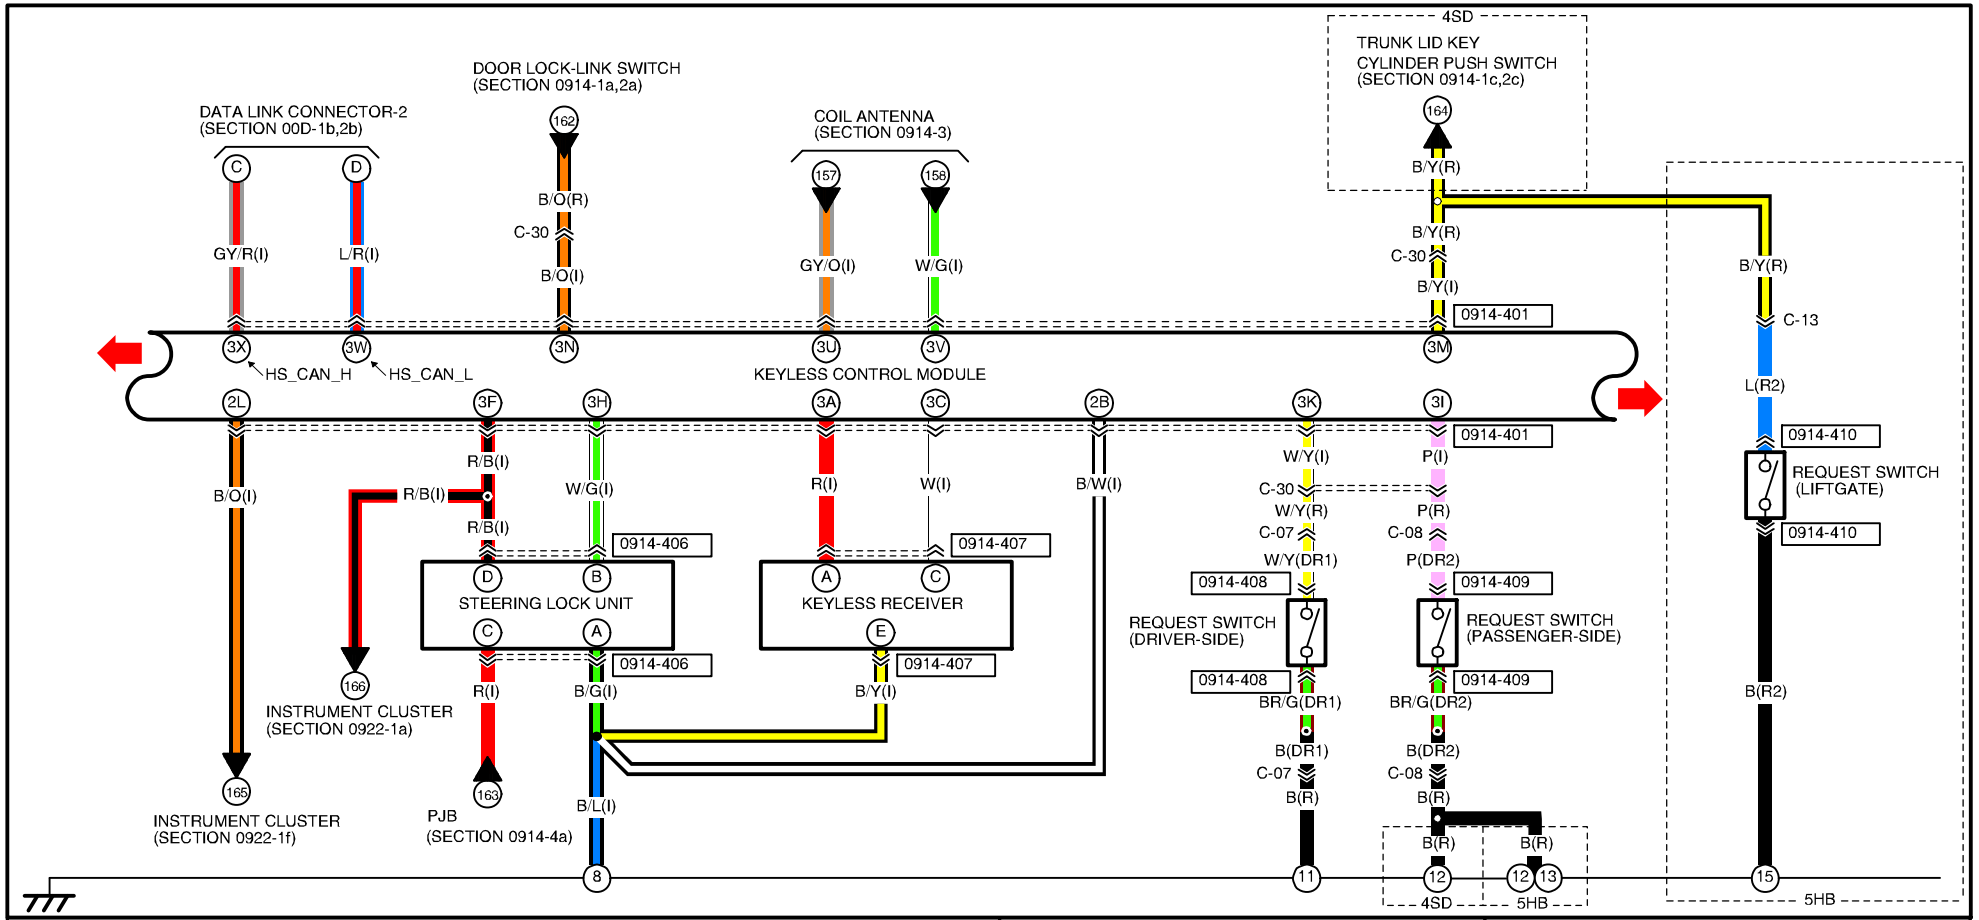


0914-401
KEYLESS CONTROL MODULE

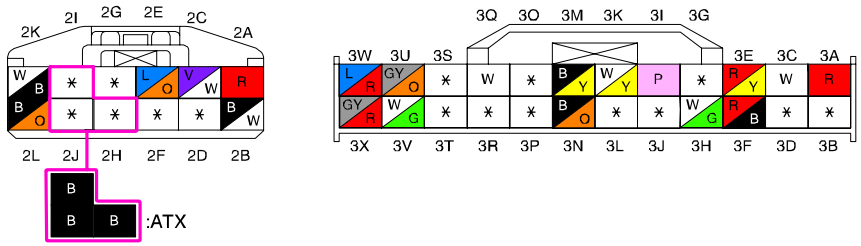


0914-406
STEERING LOCK UNIT




0914-407
KEYLESS RECEIVER




0914-408
REQUEST SWITCH
(DRIVER-SIDE)




0914-409
REQUEST SWITCH
(PASSENGER-SIDE)



0914-410
REQUEST SWITCH
(LIFTGATE)




KEYLESS ENTRY SYSTEM (WITH ADVANCED KEYLESS SYSTEM)

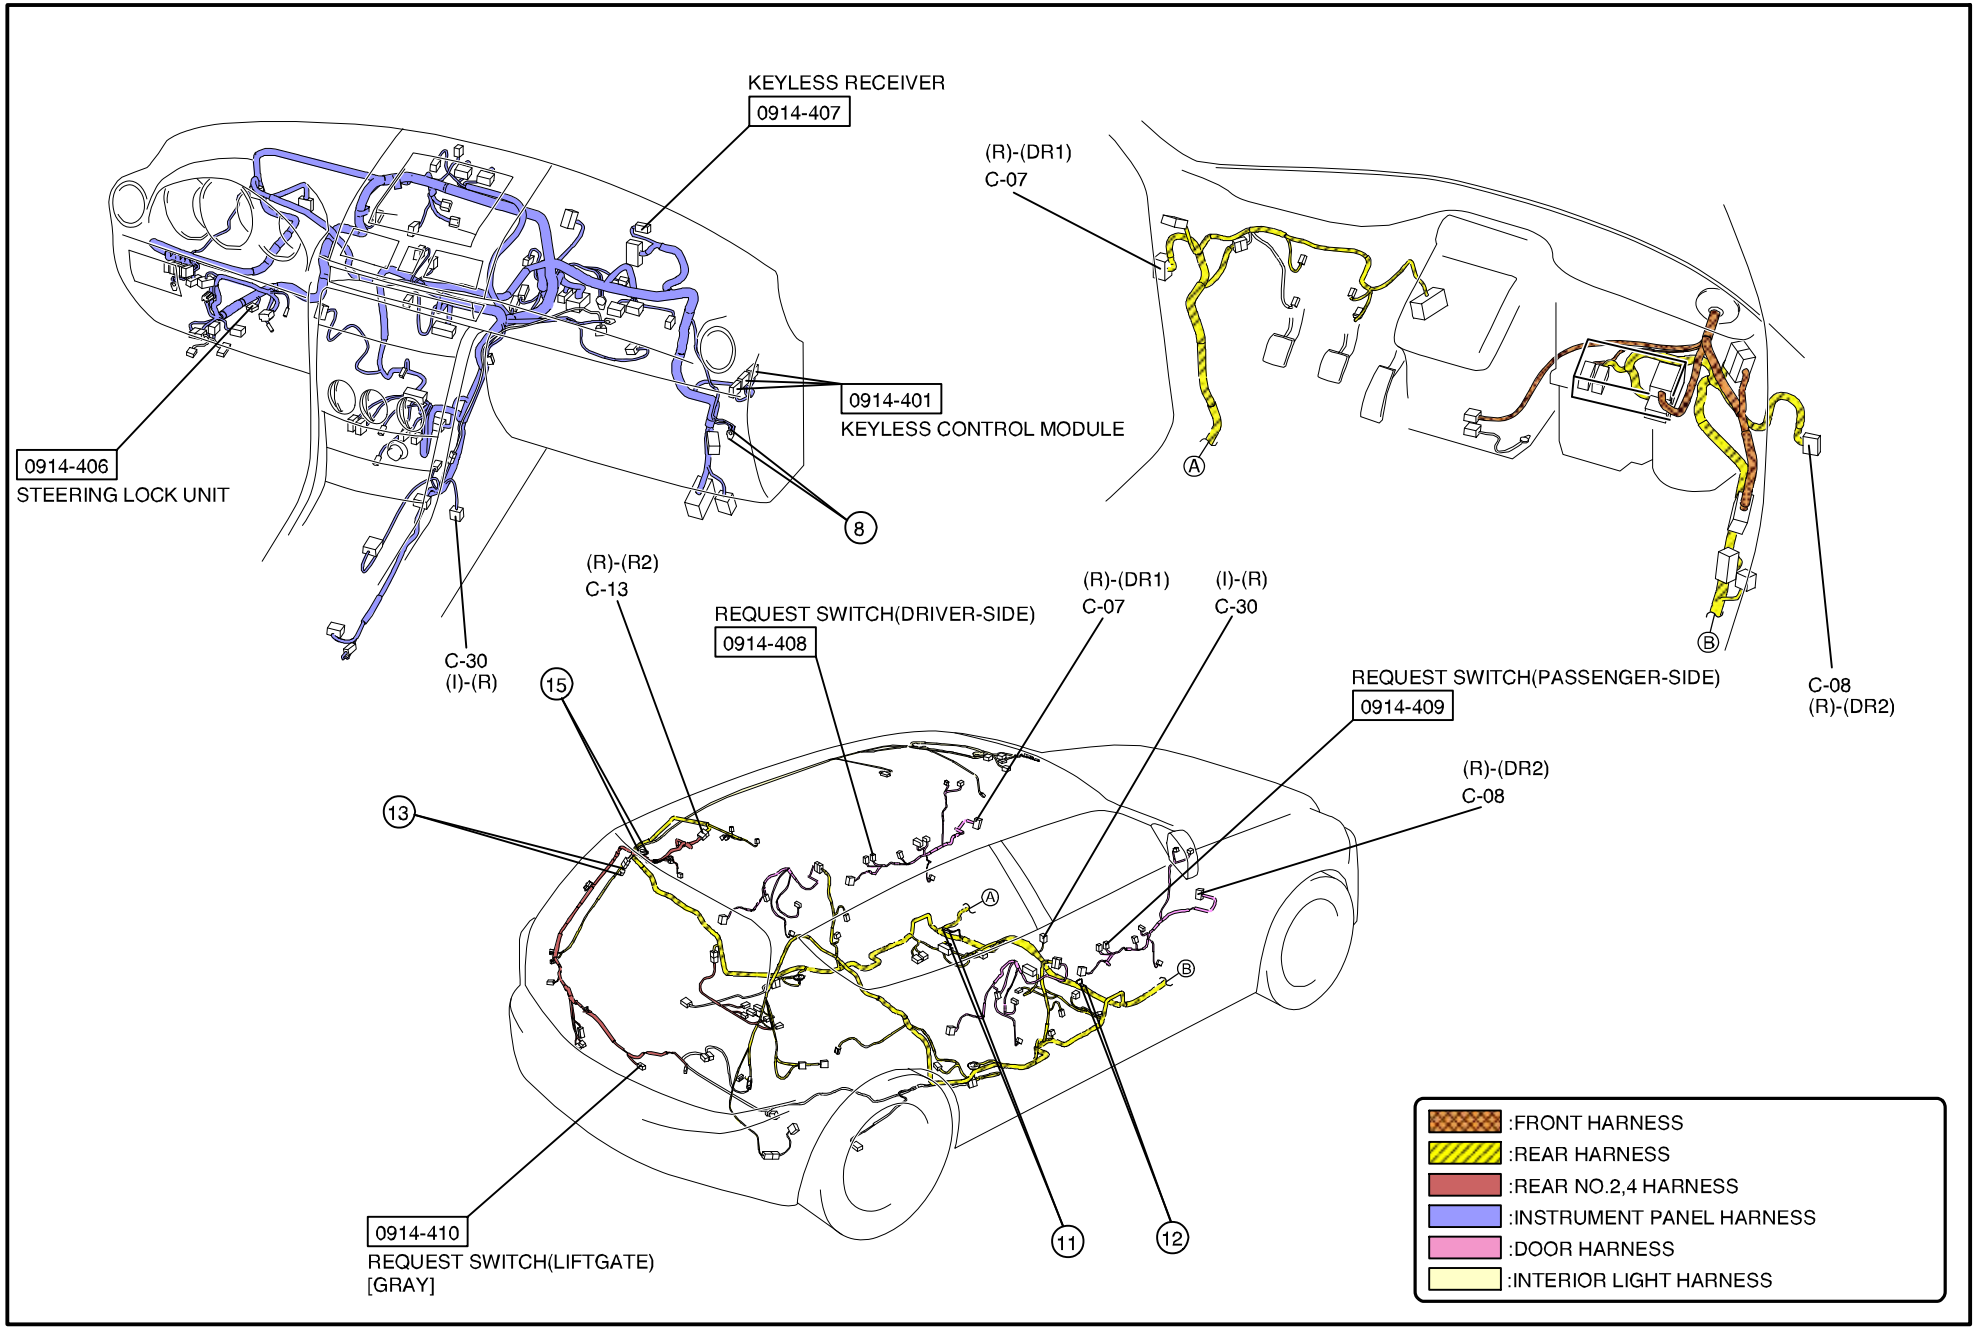


C-07
REAR HARNESS-DOOR NO.1 HARNESS

REAR HARNESS

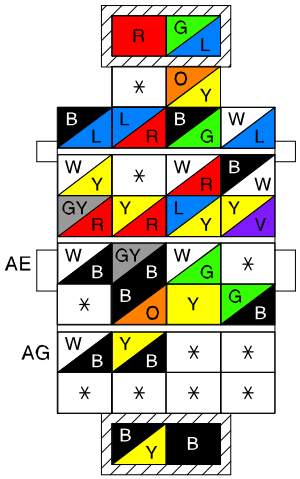


DOOR NO.1 HARNESS

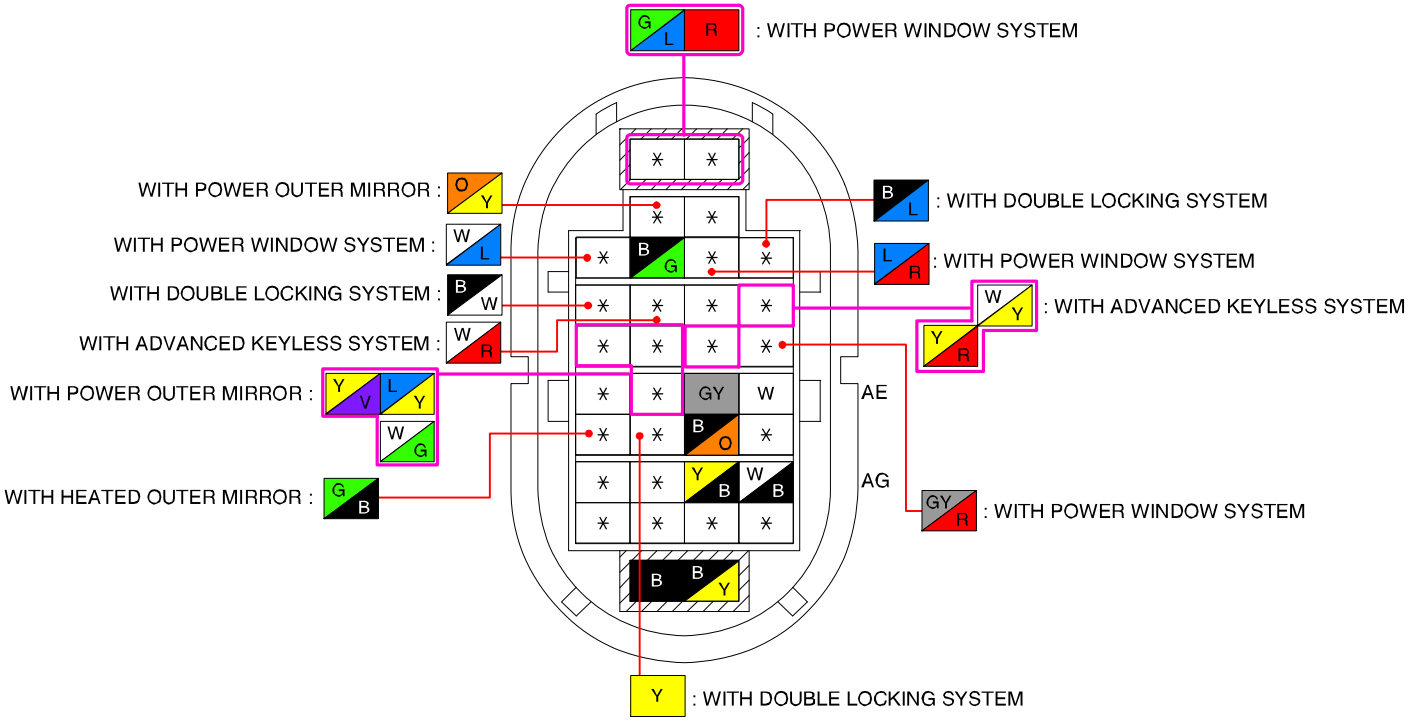


C-13
REAR HARNESS-REAR NO.2 HARNESS


REAR HARNESS

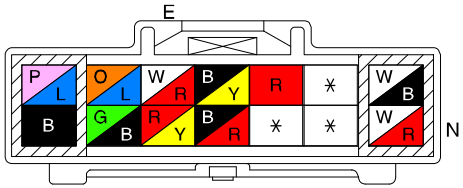


REAR NO.2 HARNESS

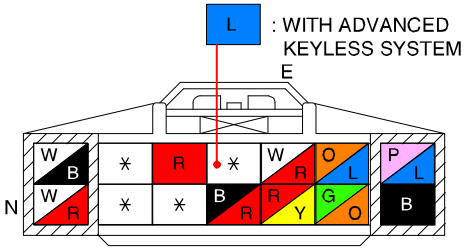


C-08
REAR HARNESS-DOOR NO.2 HARNESS

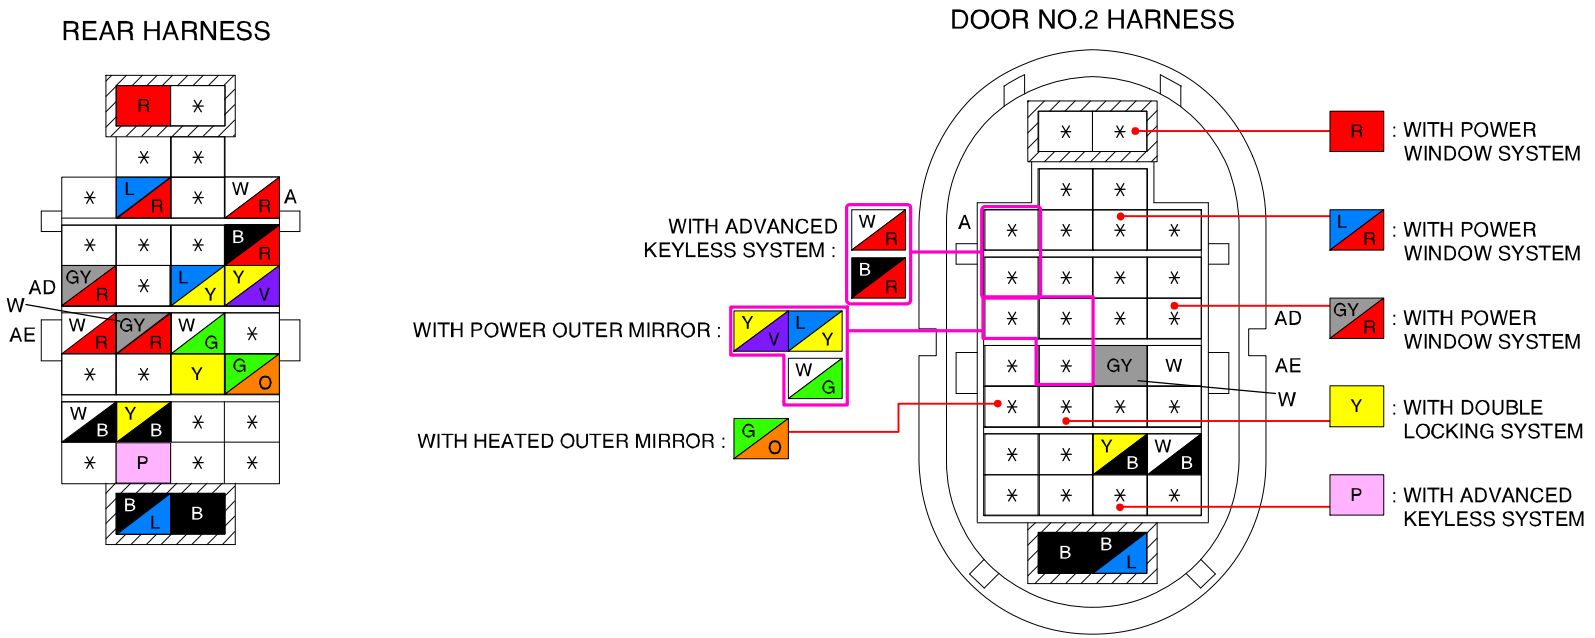


C-30
INSTRUMENT PANEL HARNESS-REAR HARNESS

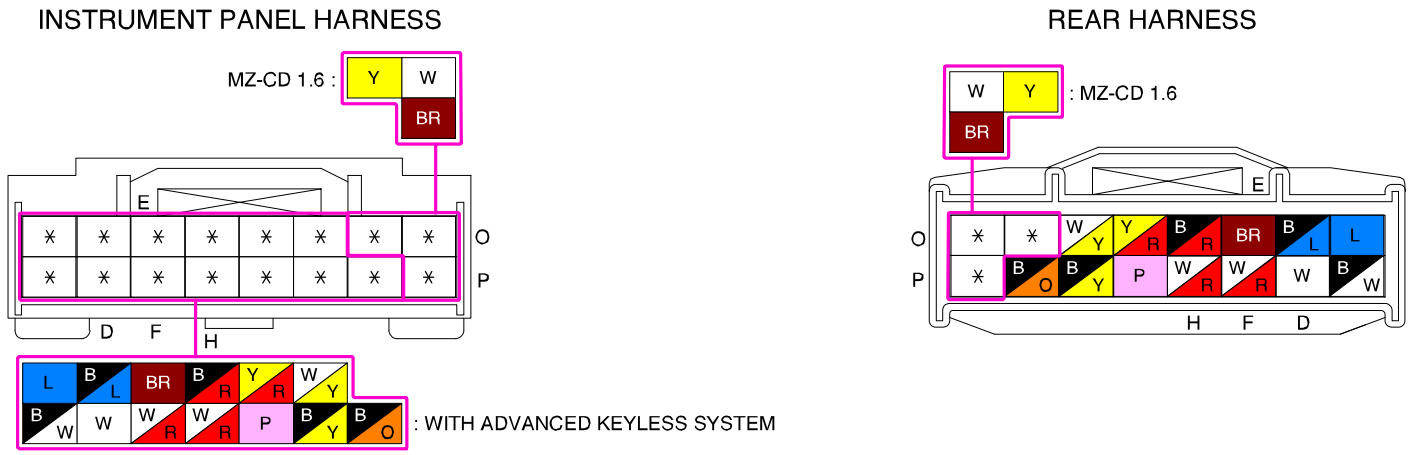


KEYLESS ENTRY SYSTEM (WITH ADVANCED KEYLESS SYSTEM)

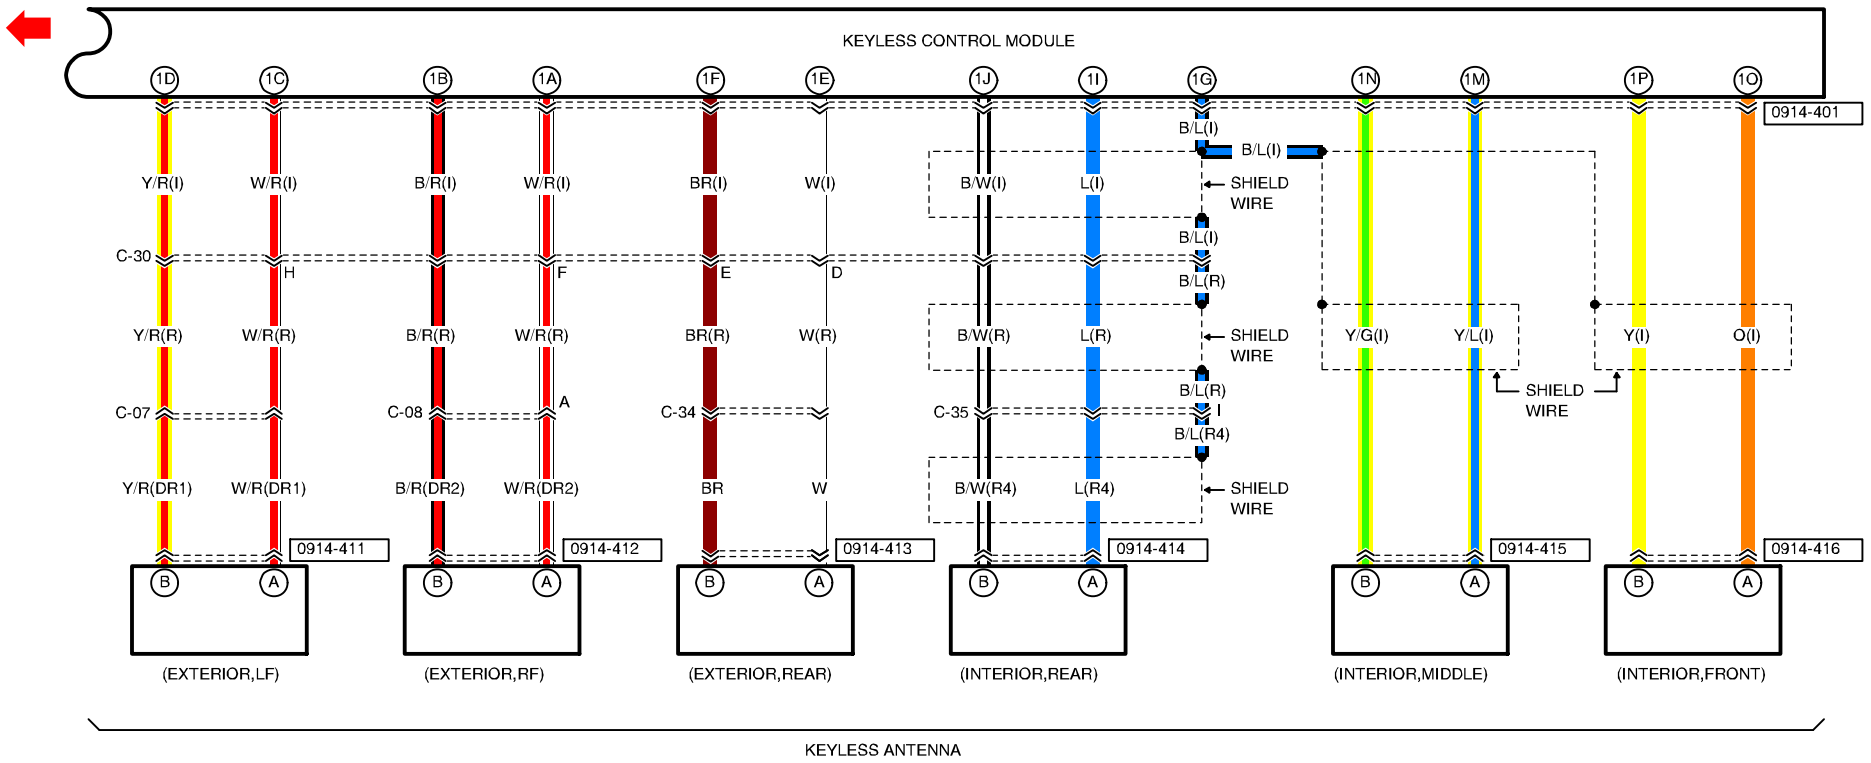


0914-401
KEYLESS CONTROL MODULE

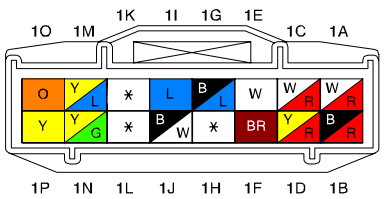


0914-411
KEYLESS ANTENNA
(EXTERIOR,LF)




0914-412
KEYLESS ANTENNA
(EXTERIOR,RF)




0914-413
KEYLESS ANTENNA
(EXTERIOR,REAR)




0914-414
KEYLESS ANTENNA
(INTERIOR,REAR)




0914-415
KEYLESS ANTENNA
(INTERIOR,MIDDLE)




0914-416
KEYLESS ANTENNA
(INTERIOR,FRONT)



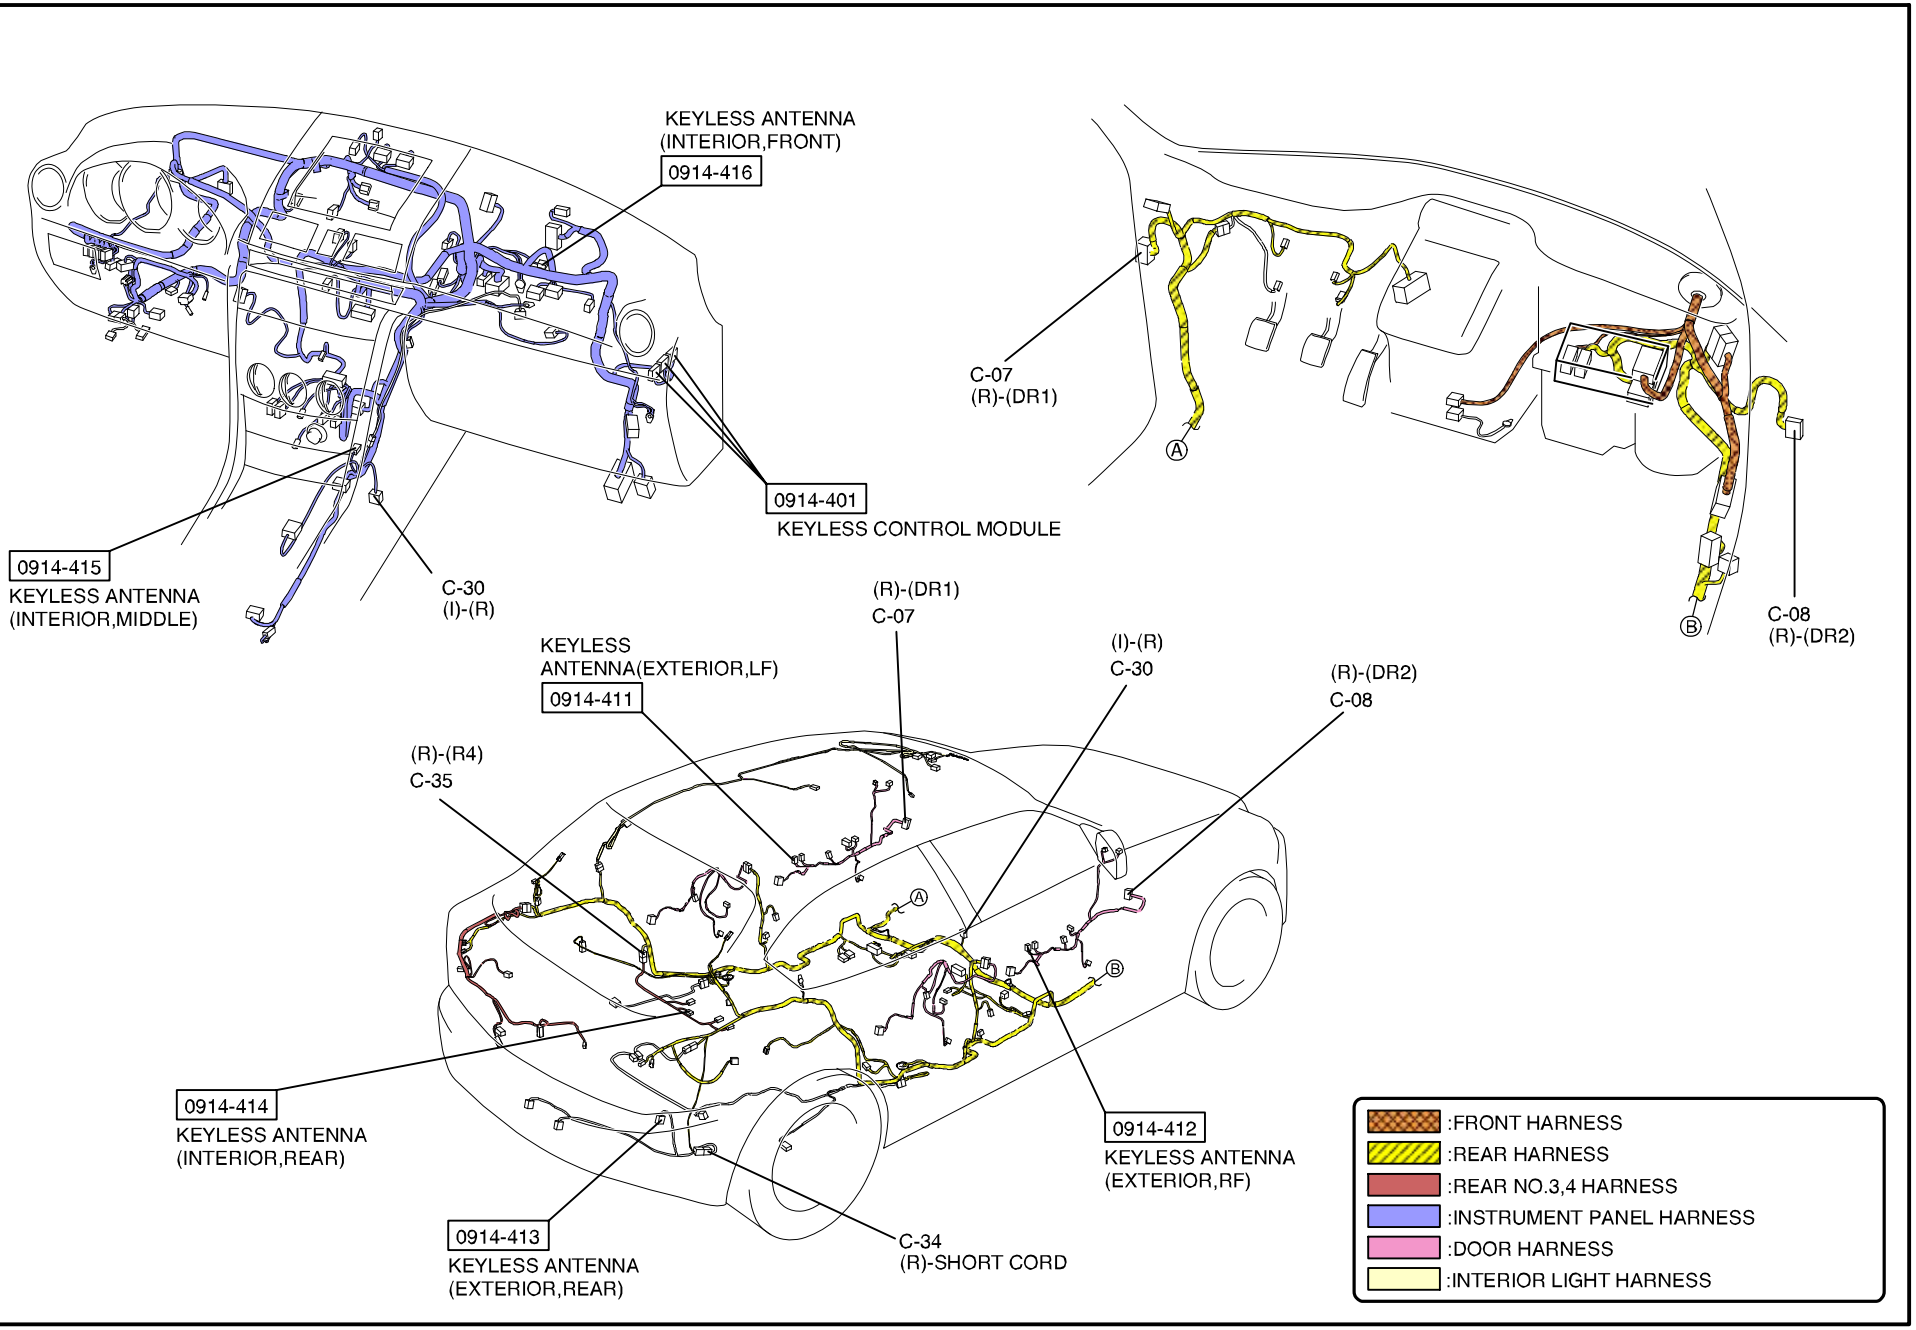

KEYLESS ANTENNA
(INTERIOR,FRONT)
0914-416
0914-401
KEYLESS CONTROL MODULE
0914-415
KEYLESS ANTENNA
(INTERIOR,MIDDLE)
C-30
(I)-(R)
C-07
(R)-(DR1)
Ⓐ
Ⓑ
C-08
(R)-(DR2)
(R)-(DR1)
C-07
KEYLESS
ANTENNA(EXTERIOR,LF)
0914-411
(I)-(R)
C-30
(R)-(DR2)
C-08
(R)-(R4)
C-35
0914-414
KEYLESS ANTENNA
(INTERIOR,REAR)
0914-412
KEYLESS ANTENNA
(EXTERIOR,RF)
0914-413
KEYLESS ANTENNA
(EXTERIOR,REAR)
C-34
(R)-SHORT CORD
:FRONT HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-07
REAR HARNESS-DOOR NO.1 HARNESS

REAR HARNESS

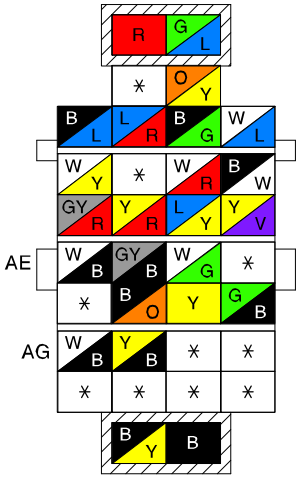


DOOR NO.1 HARNESS

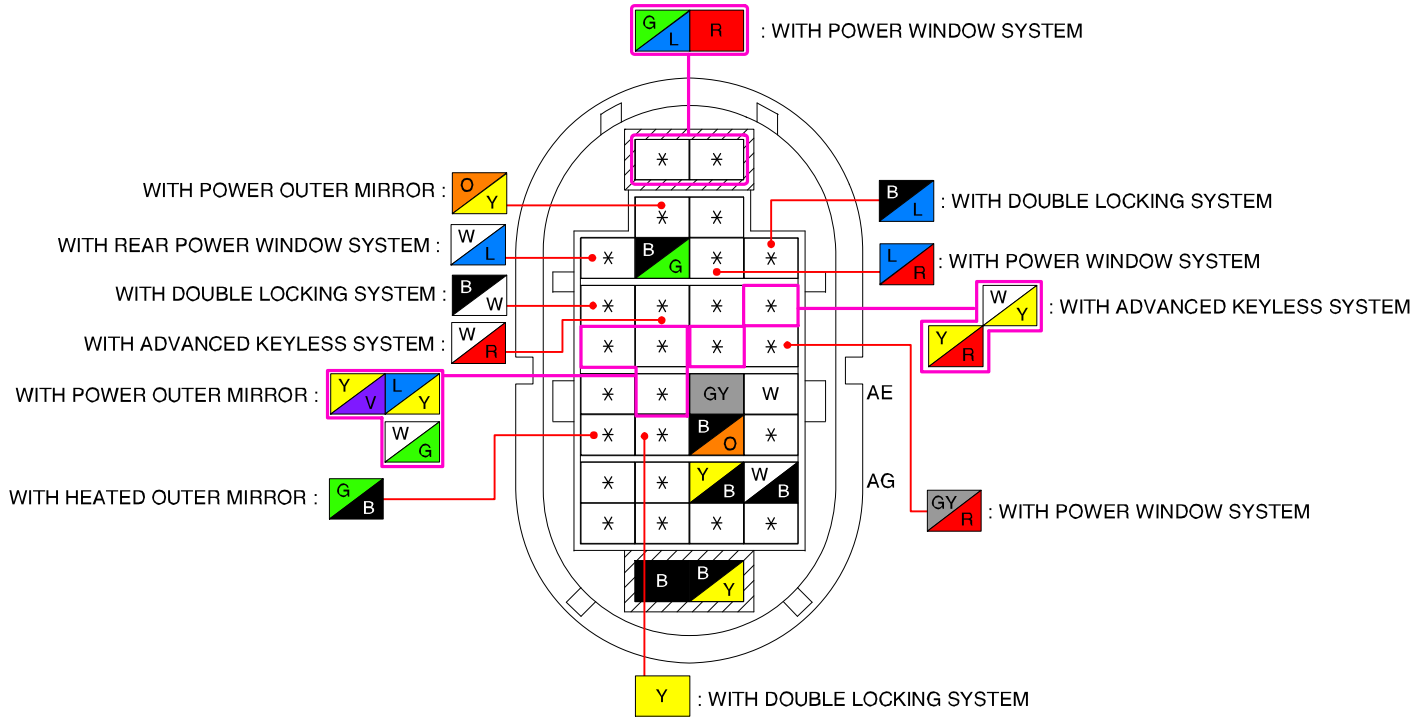


C-08
REAR HARNESS-DOOR NO.2 HARNESS

REAR HARNESS

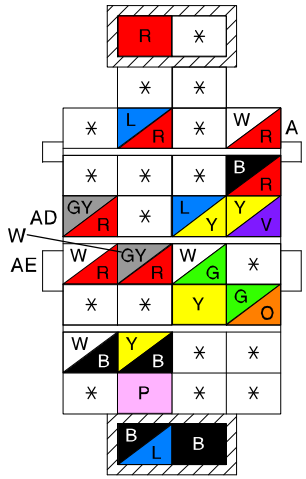


DOOR NO.2 HARNESS

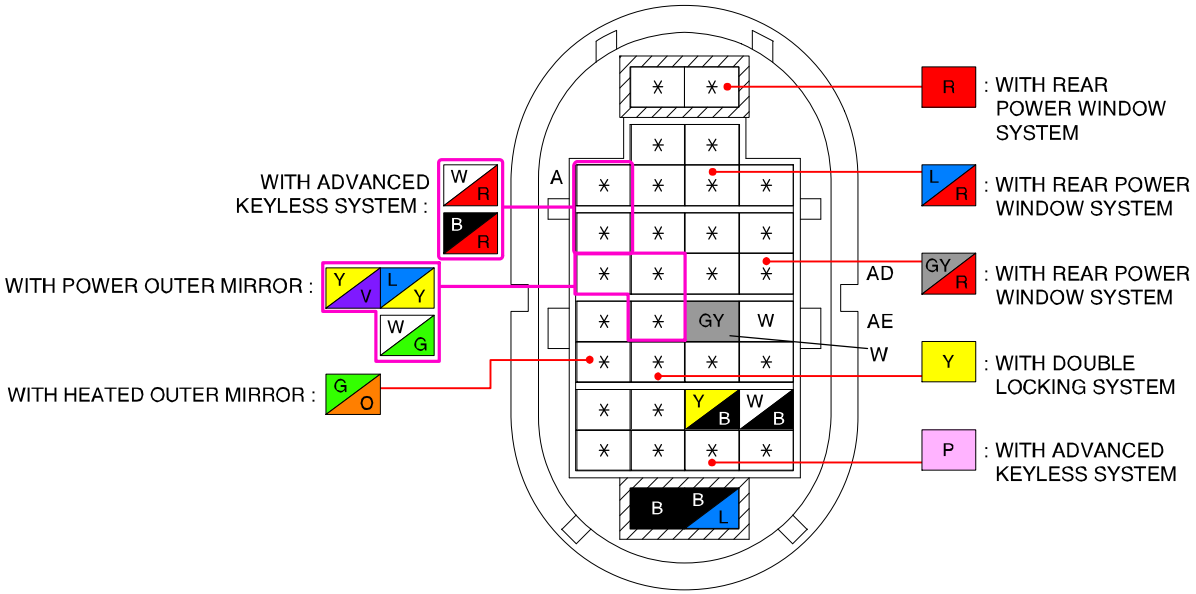


C-30
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

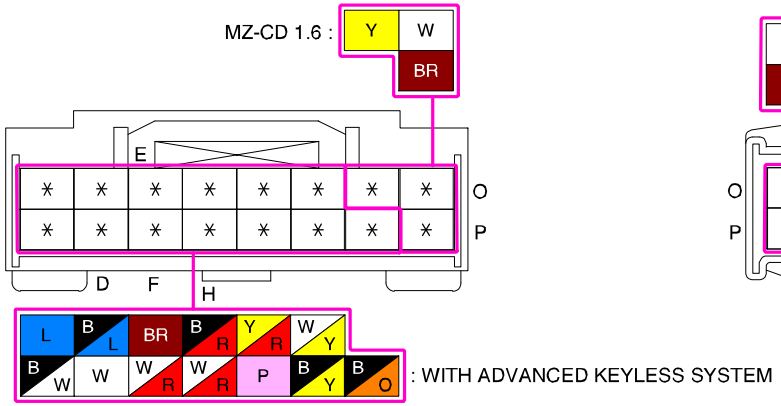


REAR HARNESS

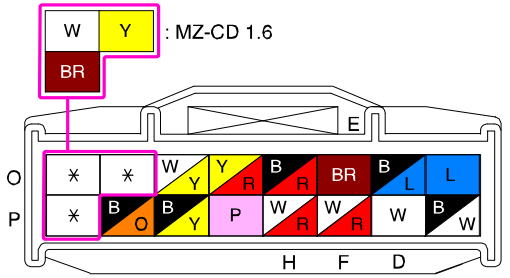


C-34
REAR HARNESS-SHORT CORD

REAR HARNESS

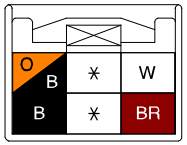


SHORT CORD

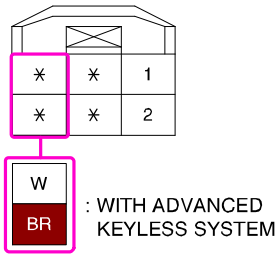


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

C-35
REAR HARNESS-REAR NO.4 HARNESS


REAR HARNESS

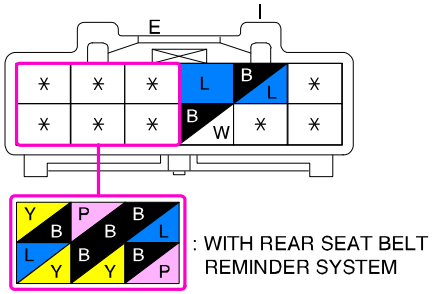


REAR NO.4 HARNESS

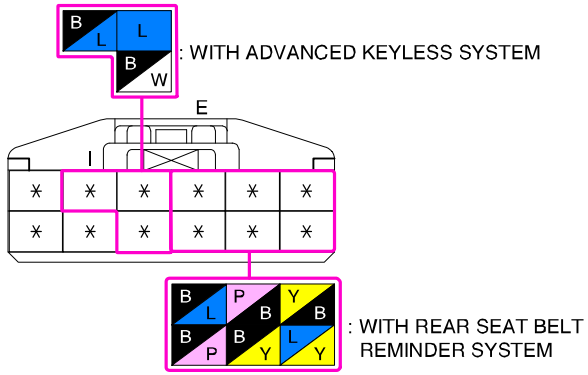


KEYLESS ENTRY SYSTEM (WITHOUT ADVANCED KEYLESS SYSTEM)

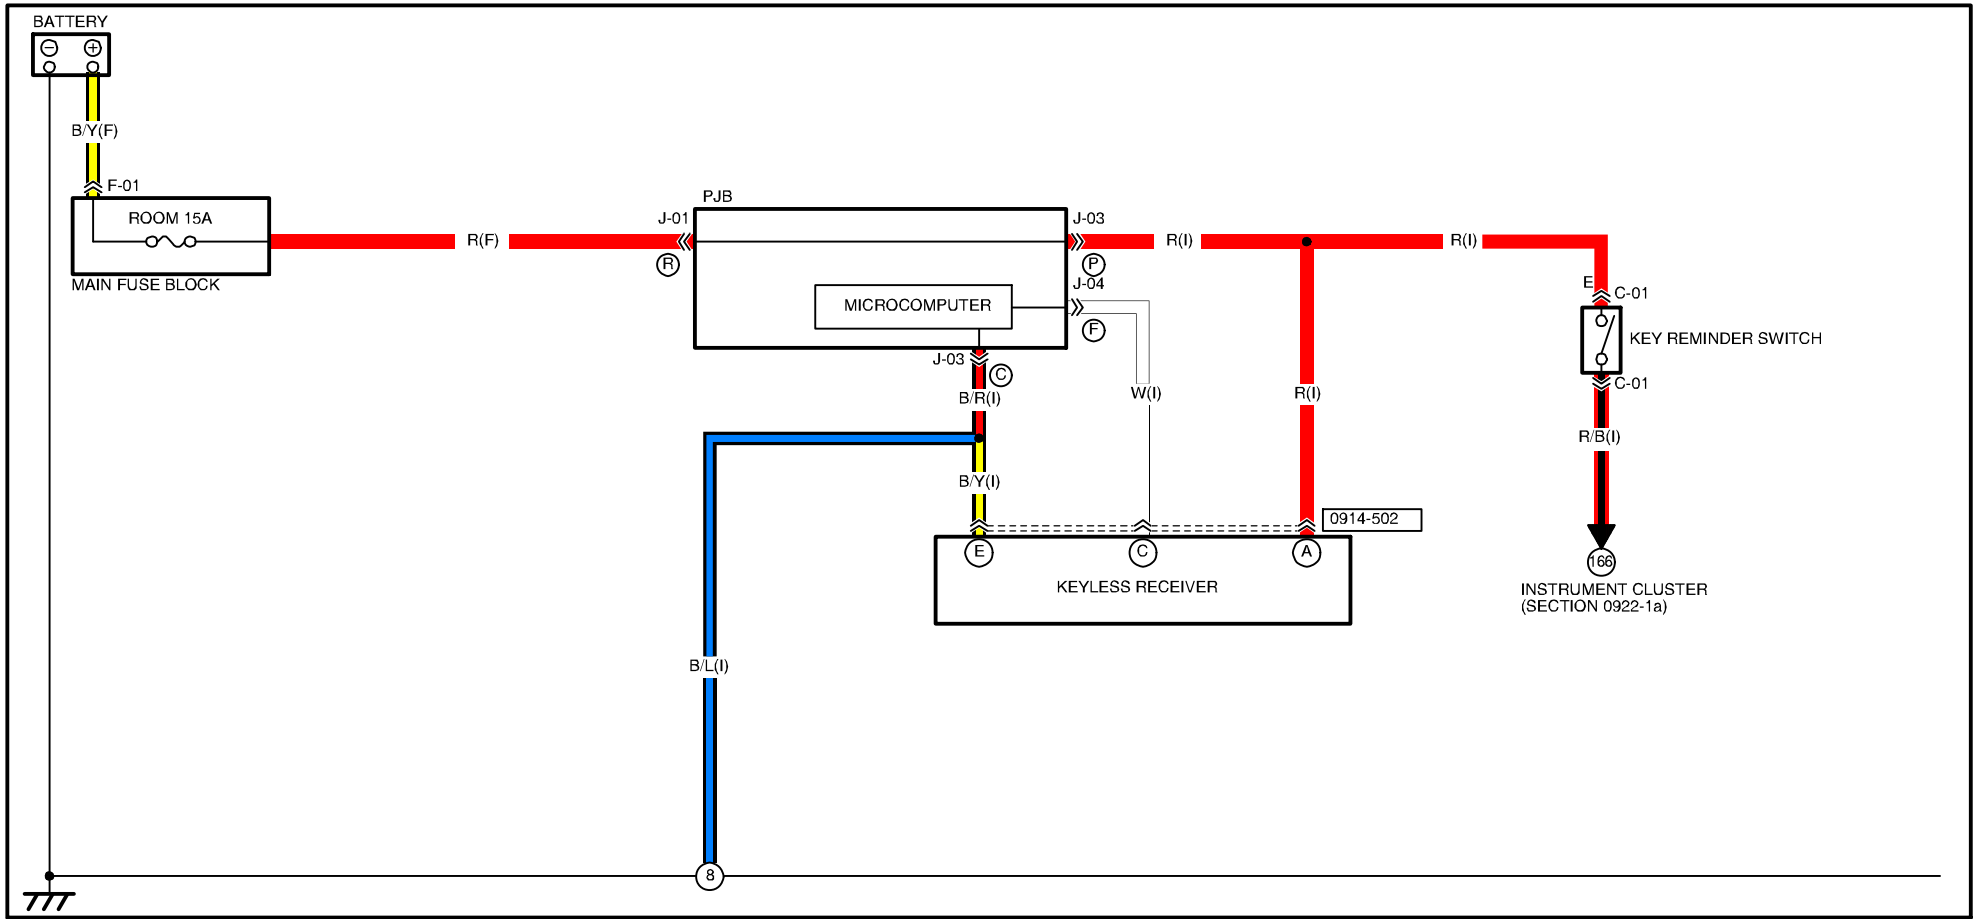



0914-502
KEYLESS RECEIVER



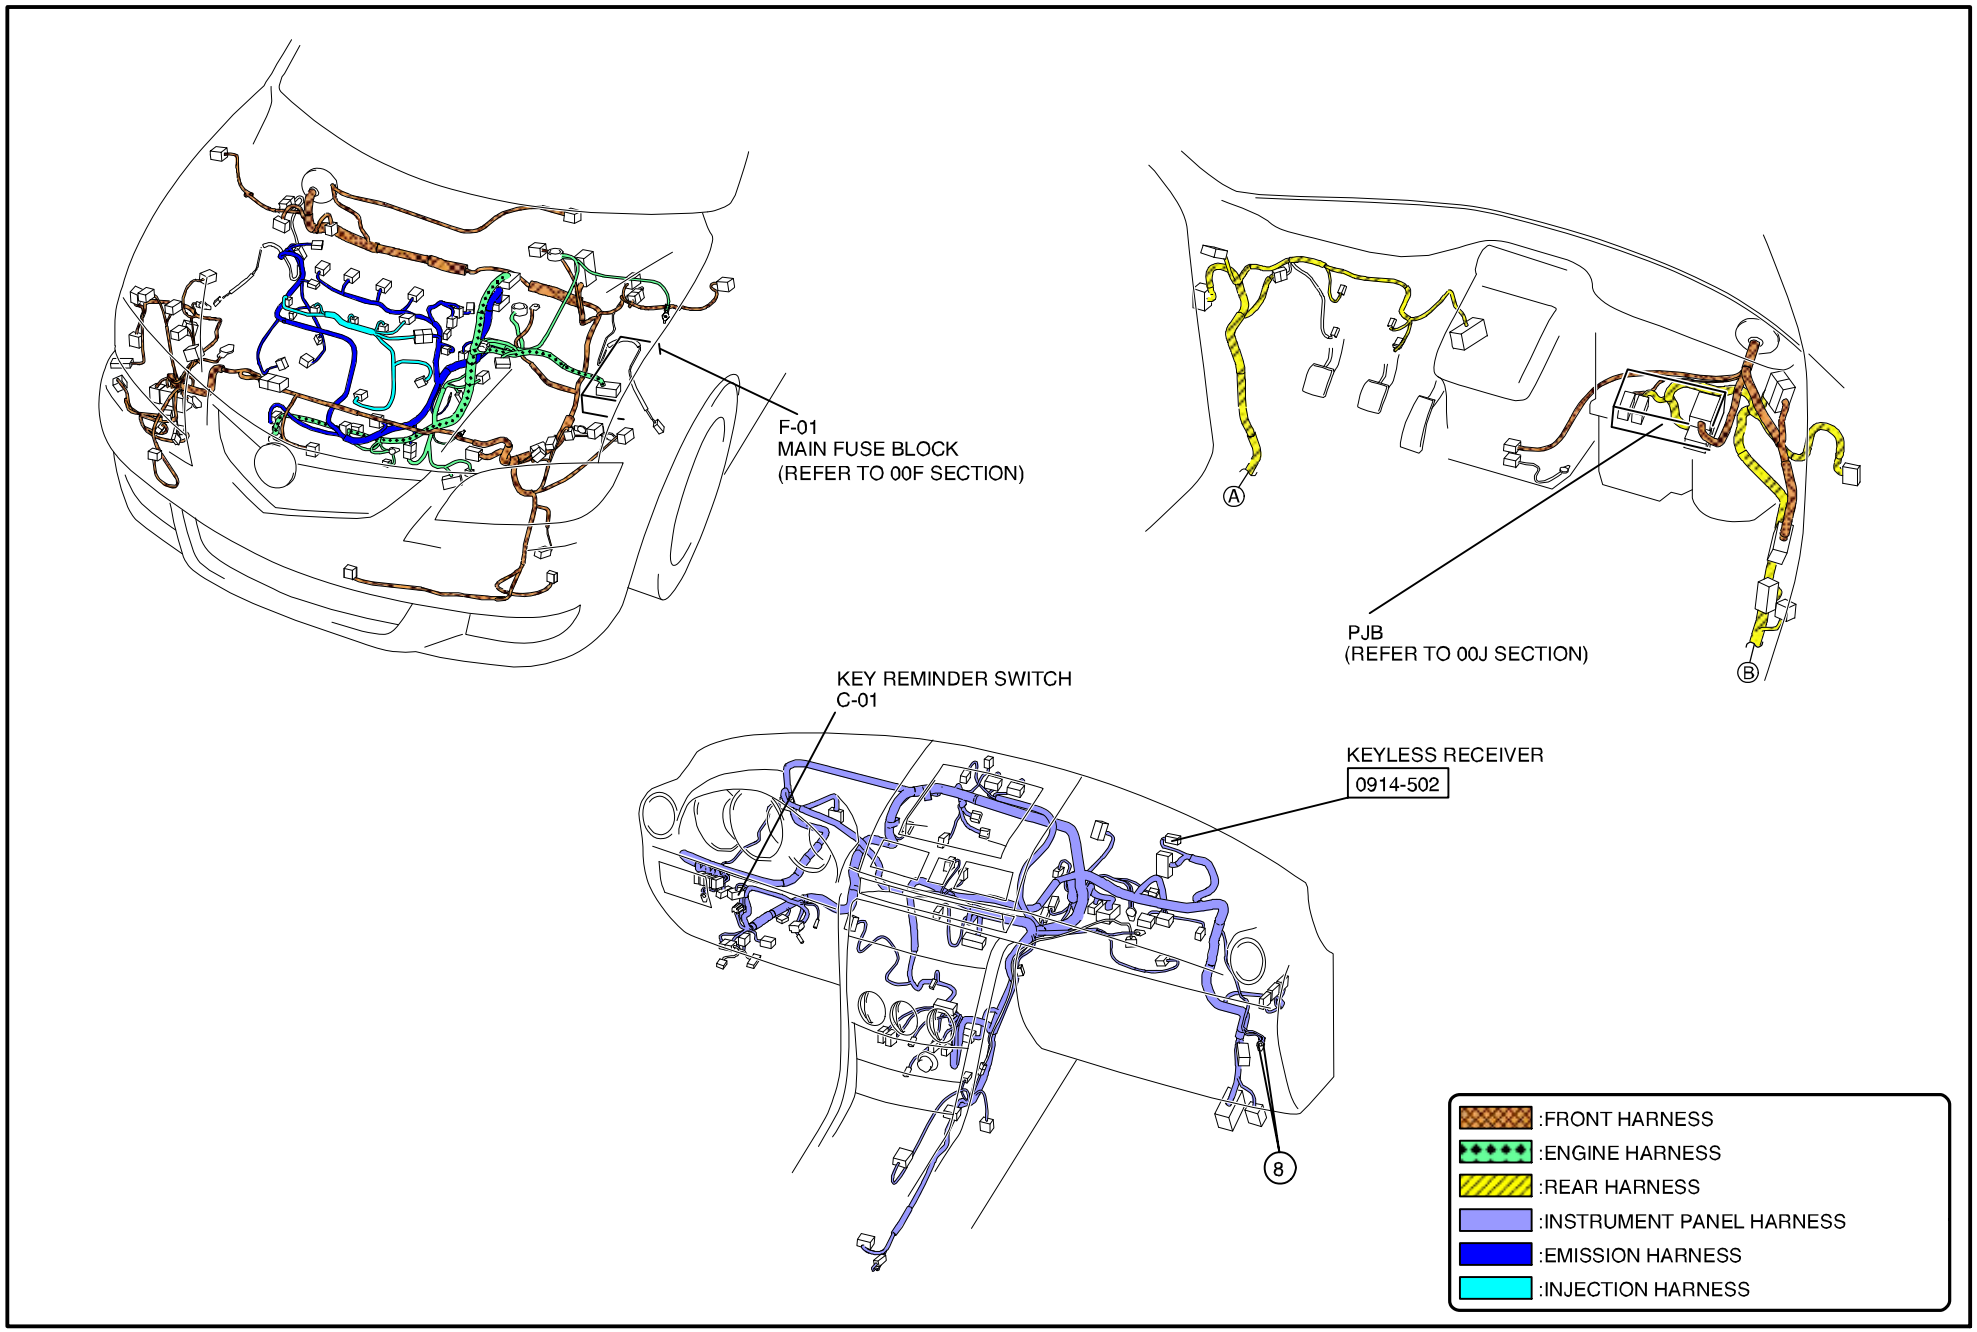

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
PJB
(REFER TO 00J SECTION)
Ⓑ
KEY REMINDER SWITCH
C-01
KEYLESS RECEIVER
0914-502
8
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

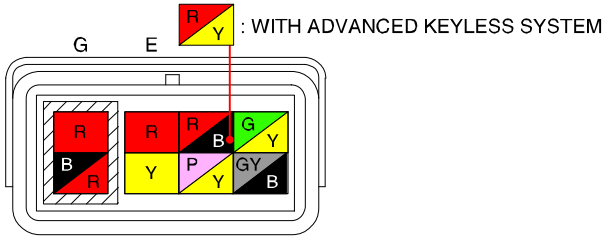

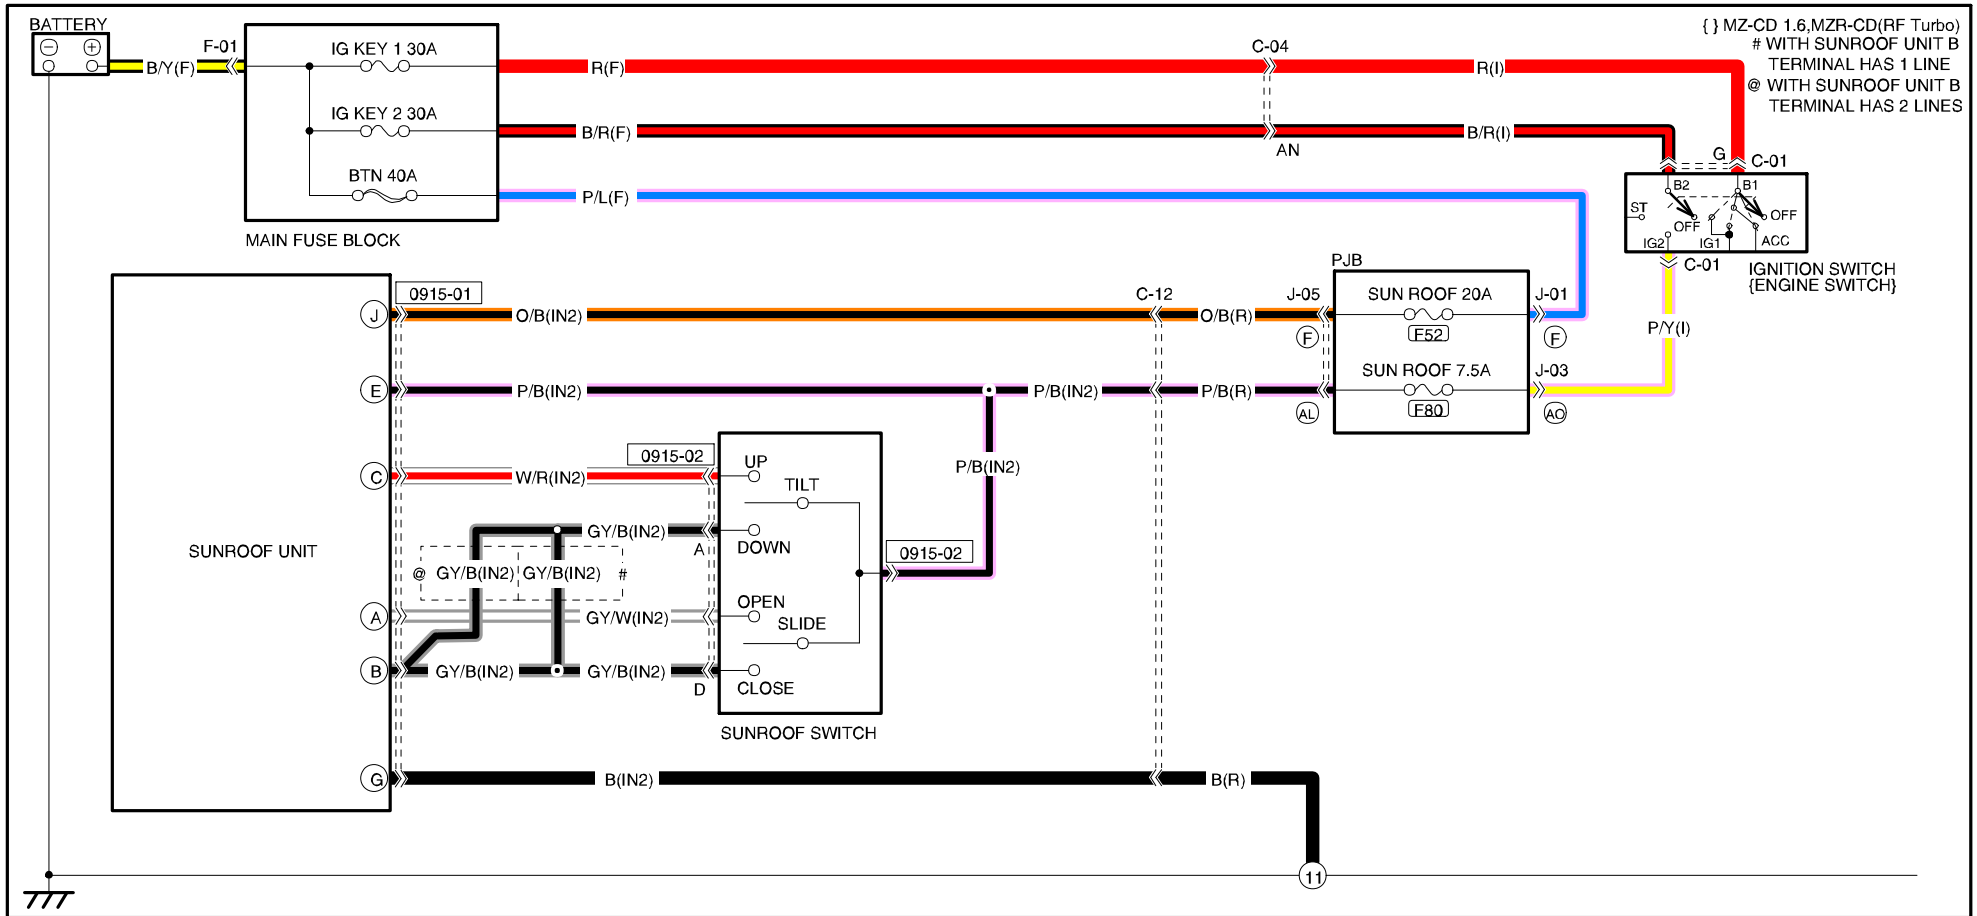



0915-01
SUNROOF UNIT

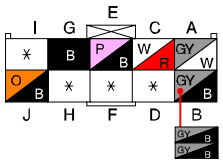


: WITH SUNROOF UNIT B TERMINAL HAS 2 LINES

0915-02
SUNROOF SWITCH



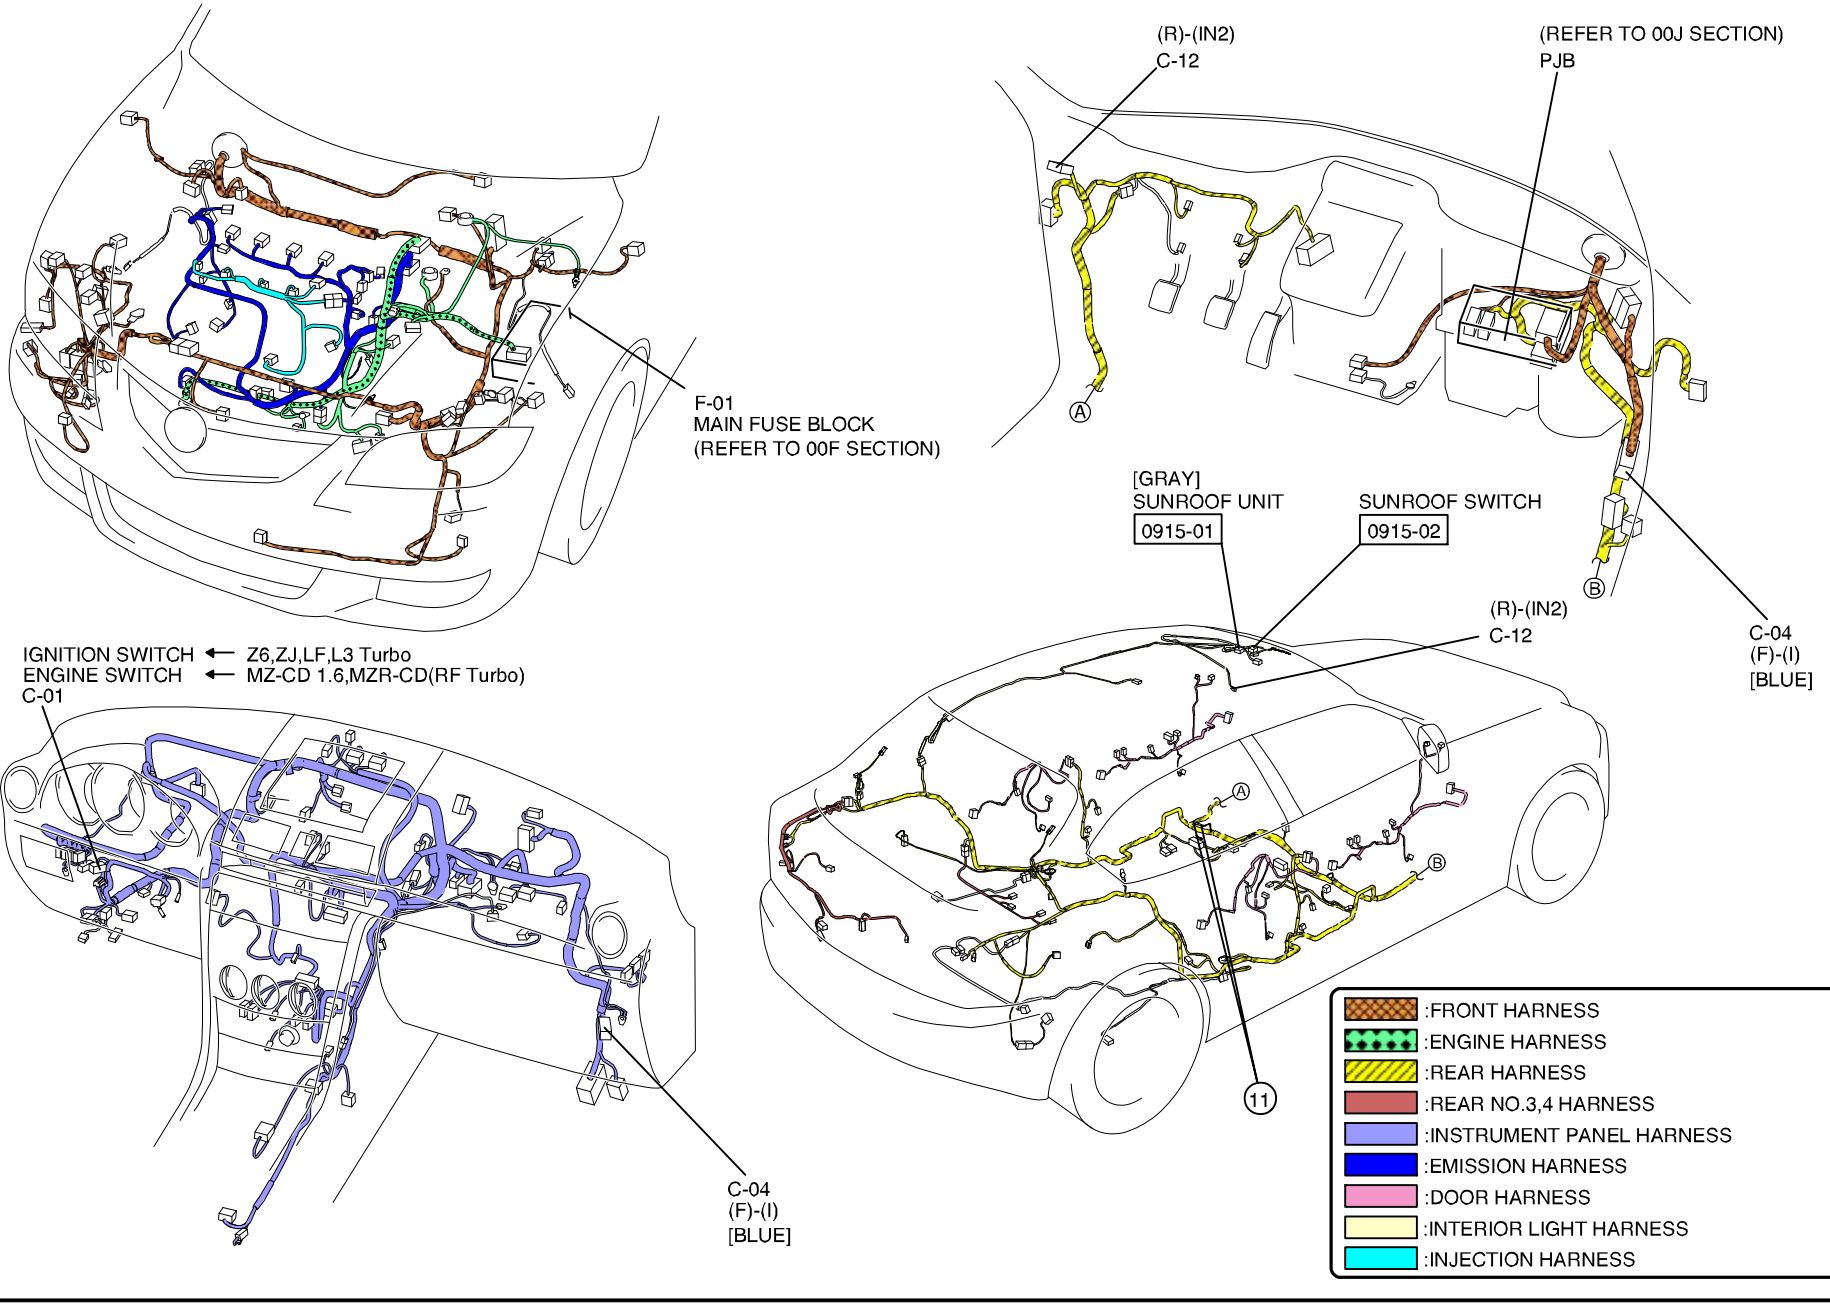

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
(R)-(IN2)
C-12
(REFER TO 00J SECTION)
PJB
A
B
[GRAY]
SUNROOF UNIT
0915-01
SUNROOF SWITCH
0915-02
(R)-(IN2)
C-12
C-04
(F)-(I)
[BLUE]
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-01
C-04
(F)-(I)
[BLUE]
11
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

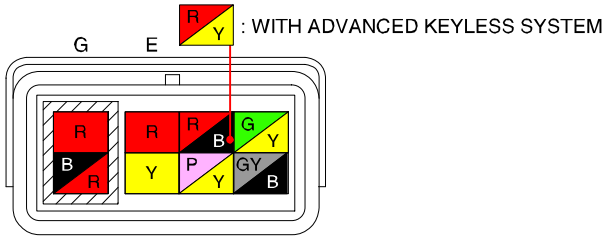


C-12
REAR HARNESS-INTERIOR LIGHT NO.2 HARNESS

REAR HARNESS

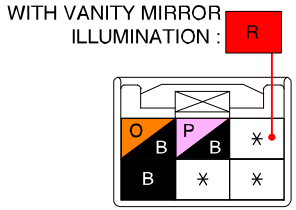


INTERIOR LIGHT NO.2 HARNESS

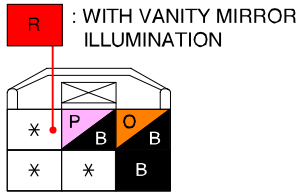


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

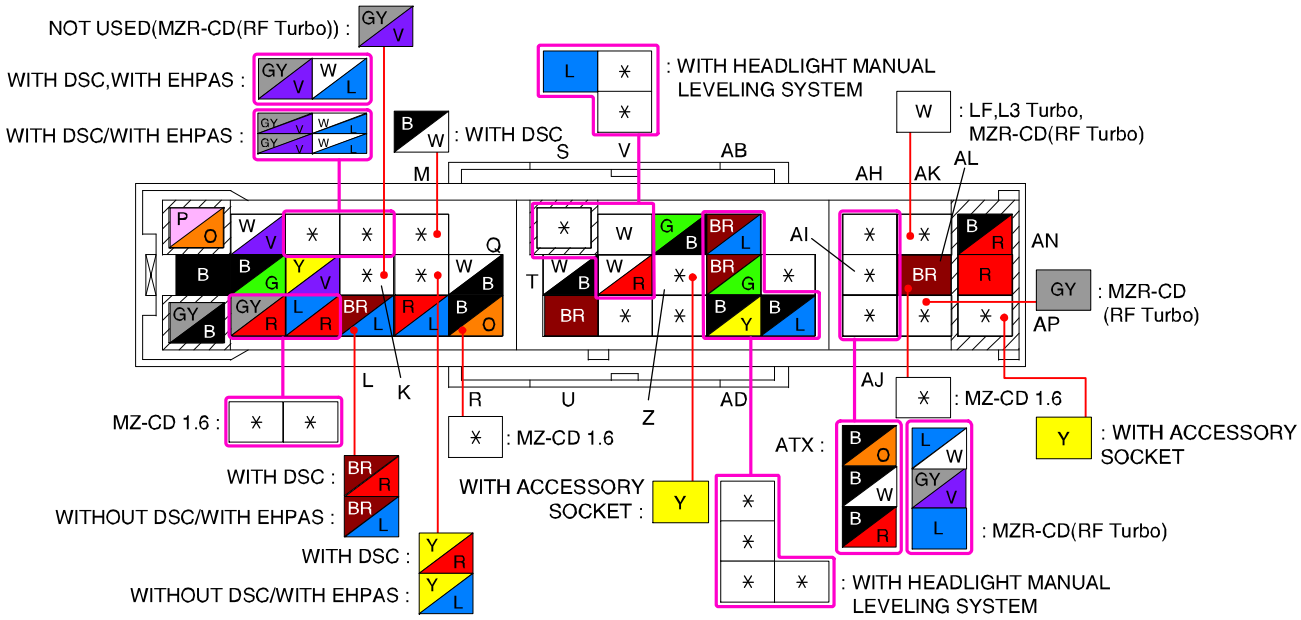


INSTRUMENT PANEL HARNESS

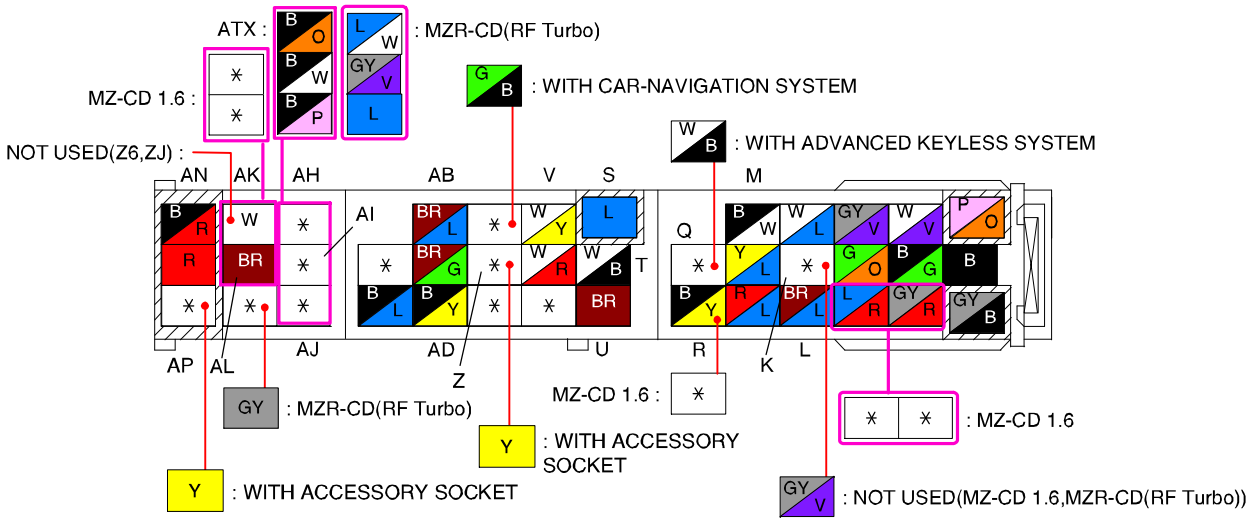


HEADLIGHT (WITHOUT RUNNING LIGHT SYSTEM/WITHOUT AUTO LIGHT SYSTEM)

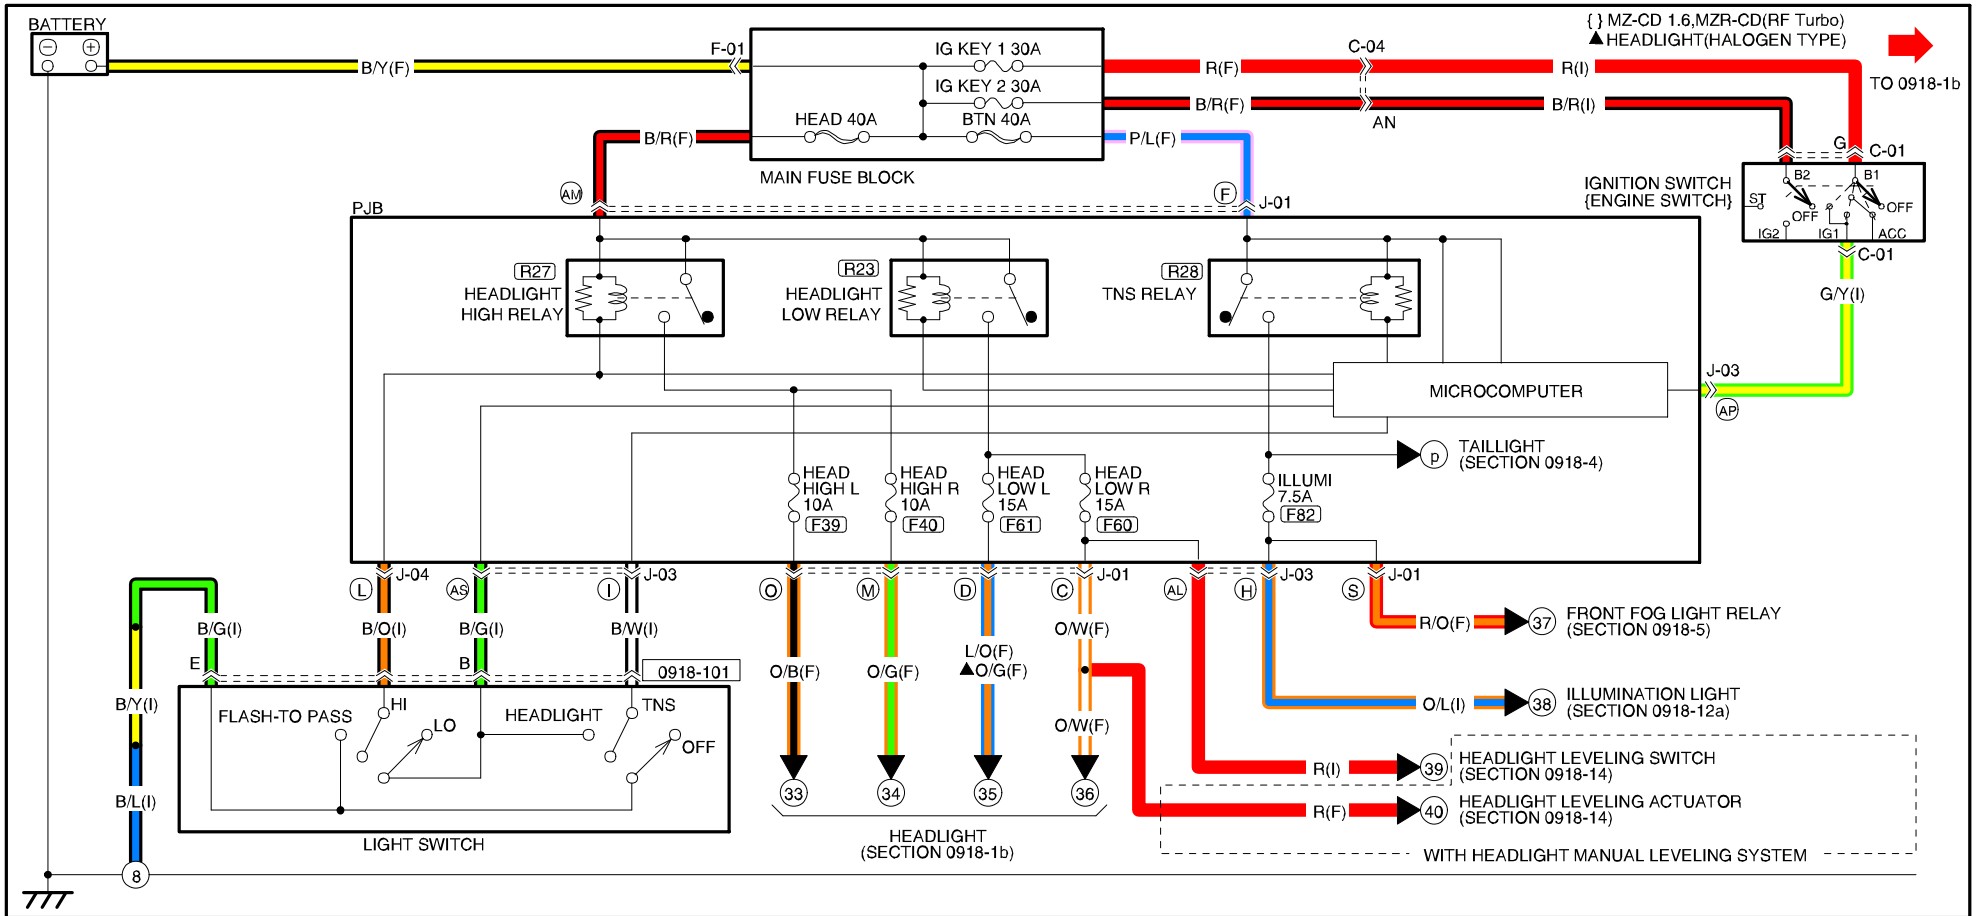


0918-101
LIGHT SWITCH

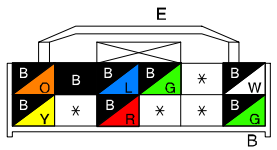

HEADLIGHT (WITHOUT RUNNING LIGHT SYSTEM/WITHOUT AUTO LIGHT SYSTEM)

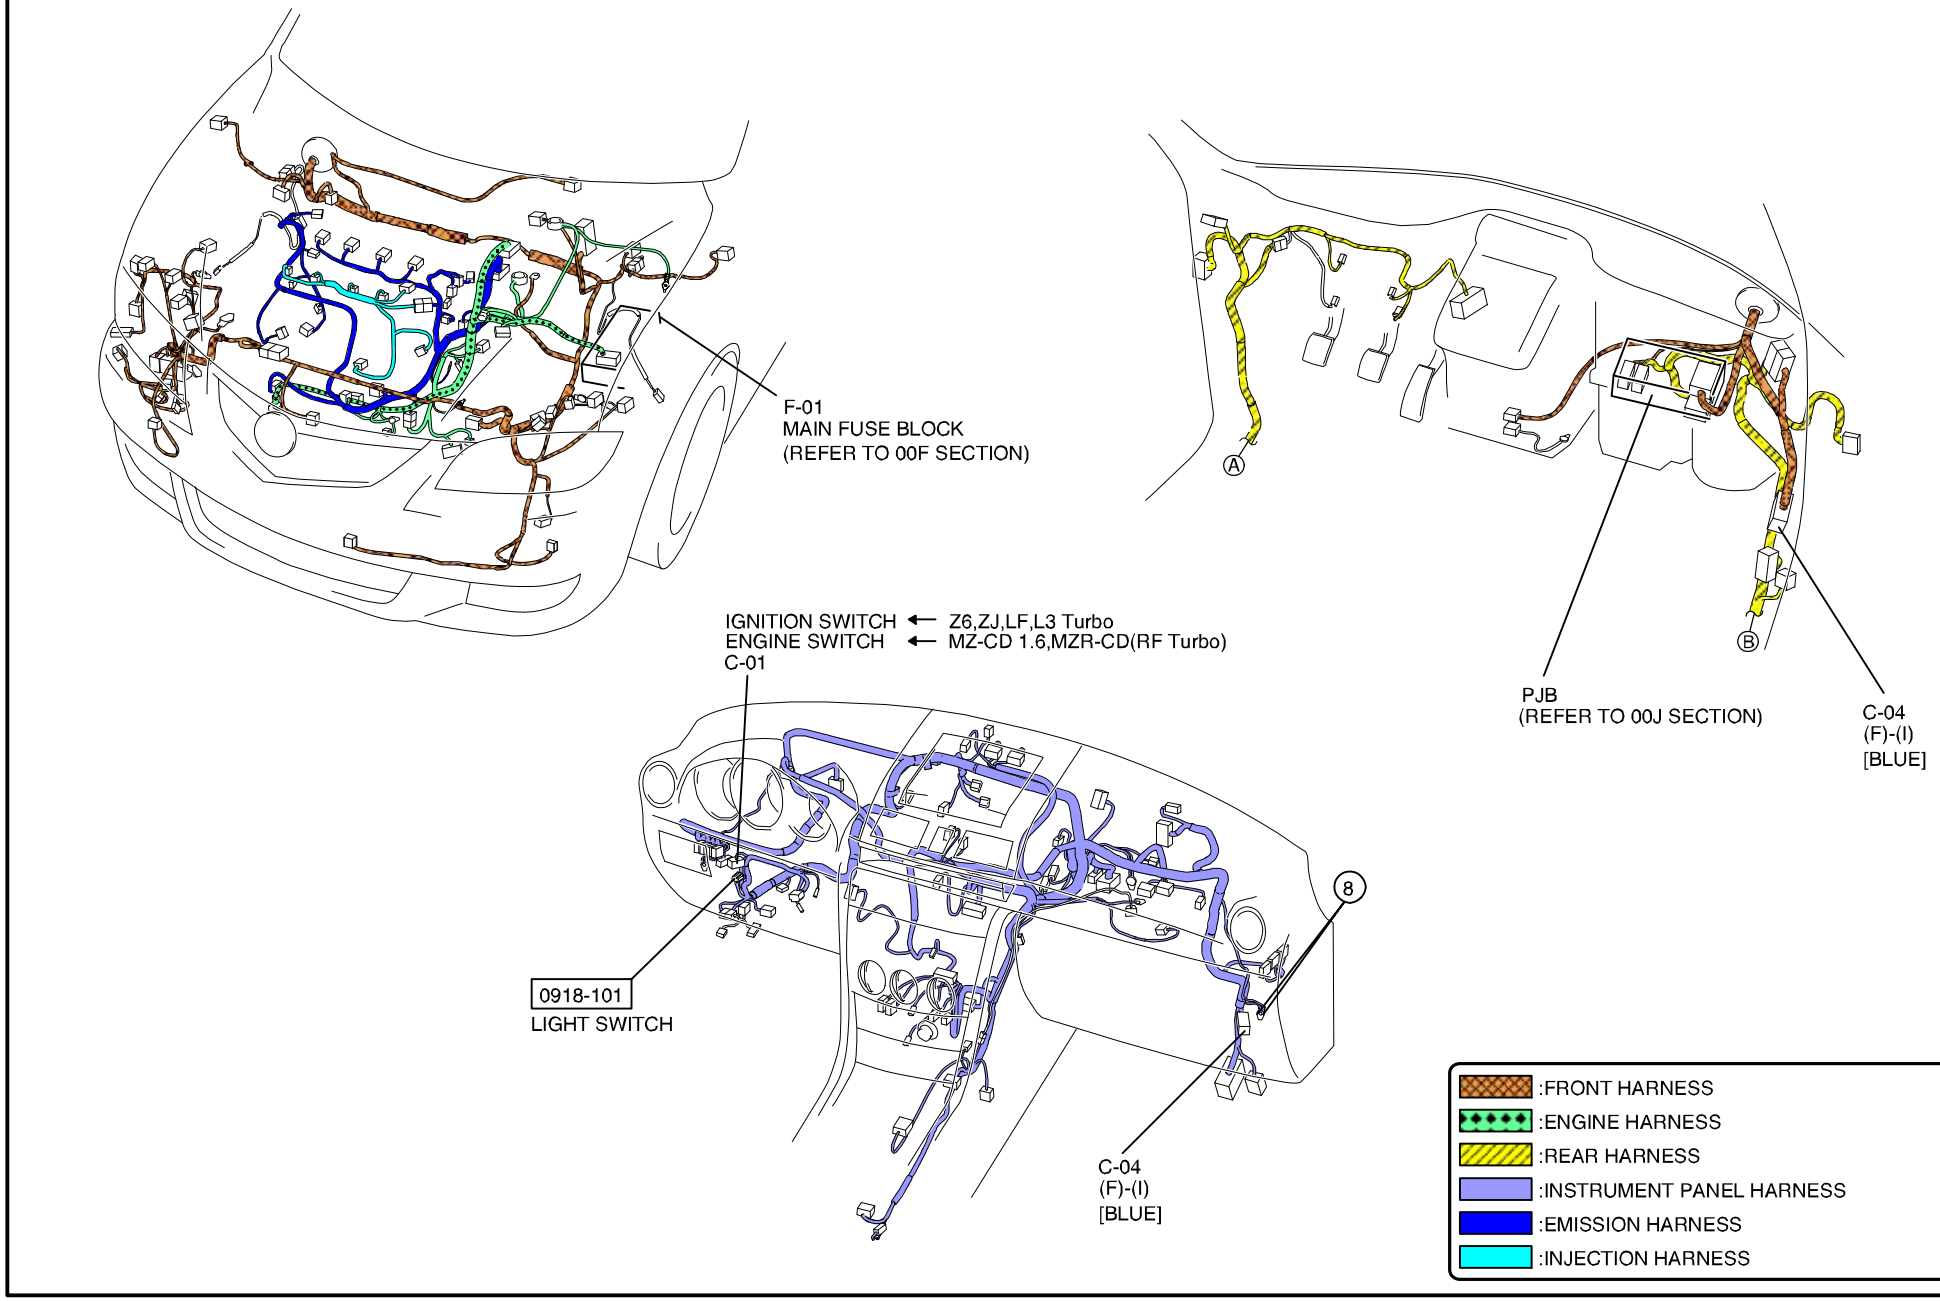


C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

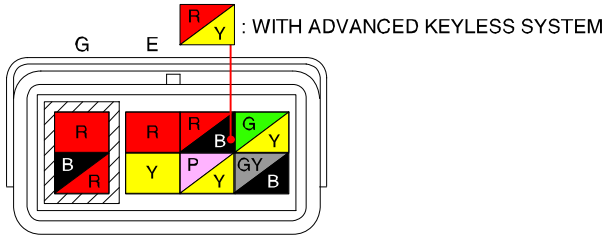


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS






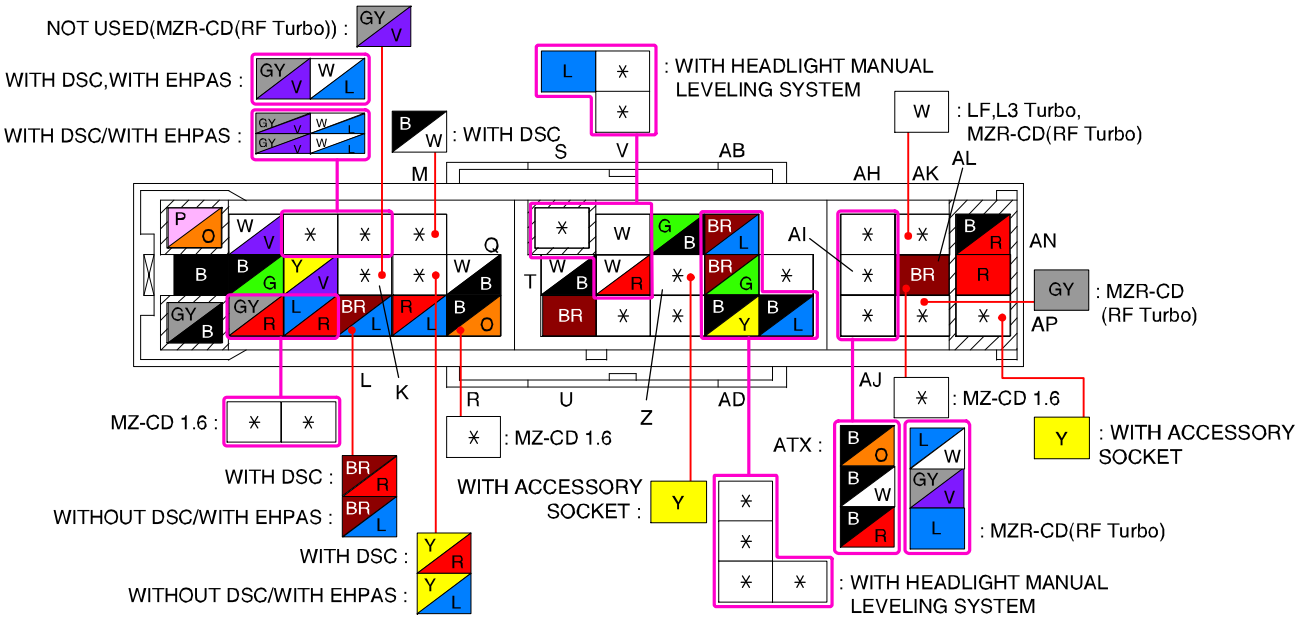



INSTRUMENT PANEL HARNESS

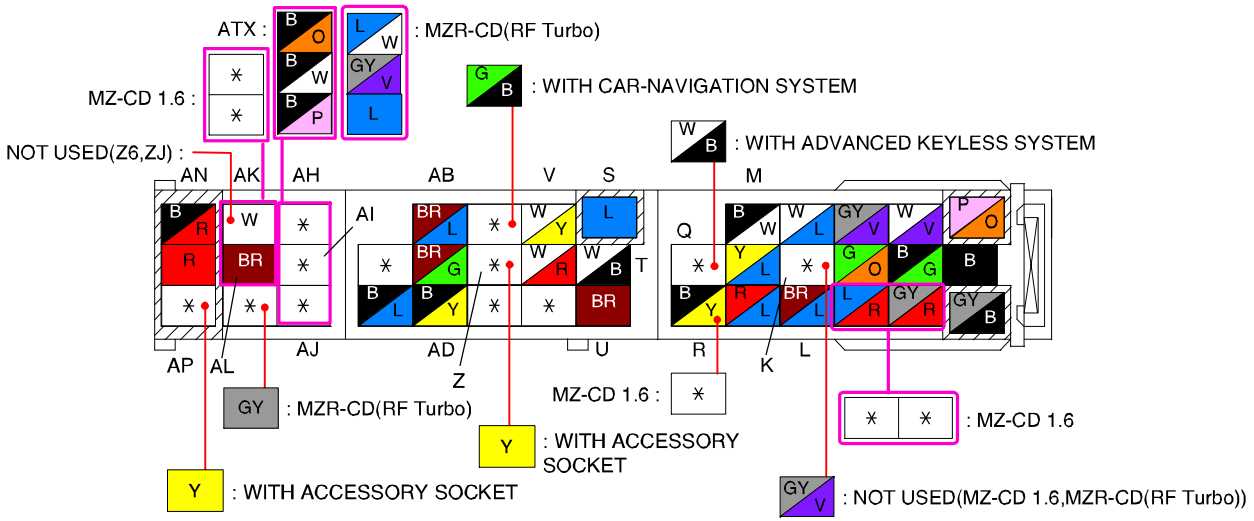


HEADLIGHT (WITHOUT RUNNING LIGHT SYSTEM/WITHOUT AUTO LIGHT SYSTEM)

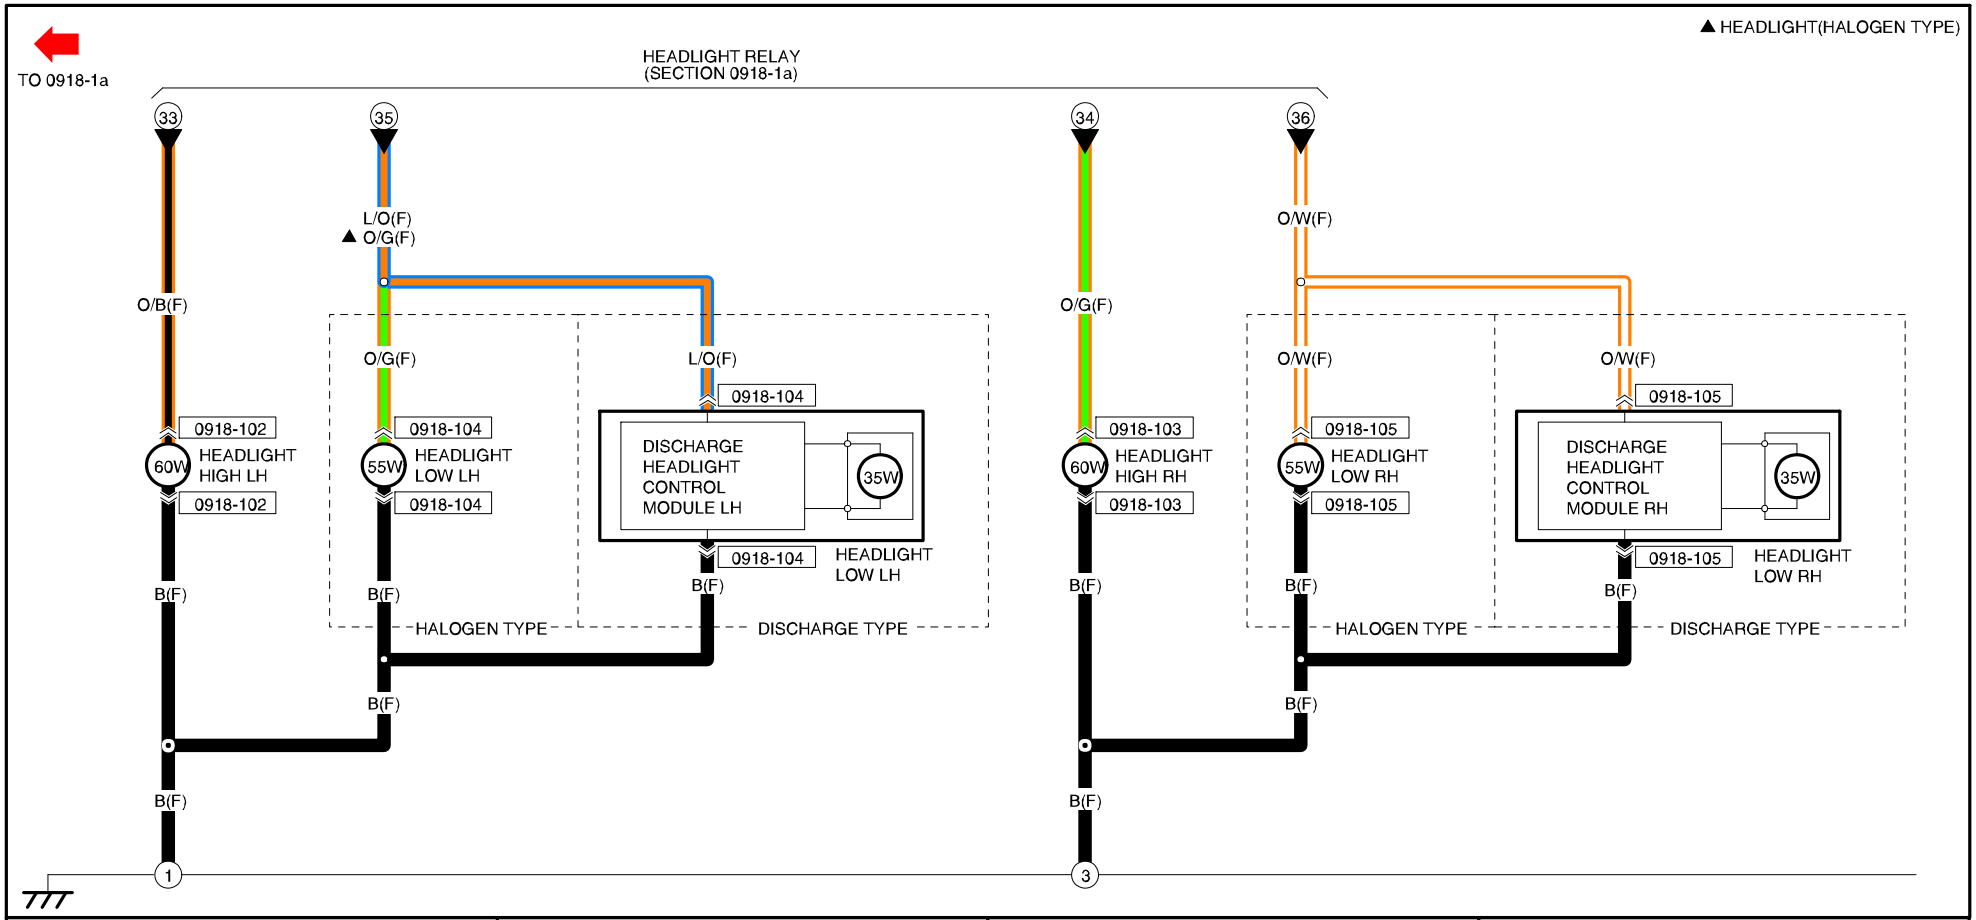


0918-102 HEADLIGHT HIGH LH	0918-103 HEADLIGHT HIGH RH	0918-104 HEADLIGHT LOW LH		0918-105 HEADLIGHT LOW RH	
					
		(HALOGEN TYPE)	(DISCHARGE TYPE)	(HALOGEN TYPE)	(DISCHARGE TYPE)

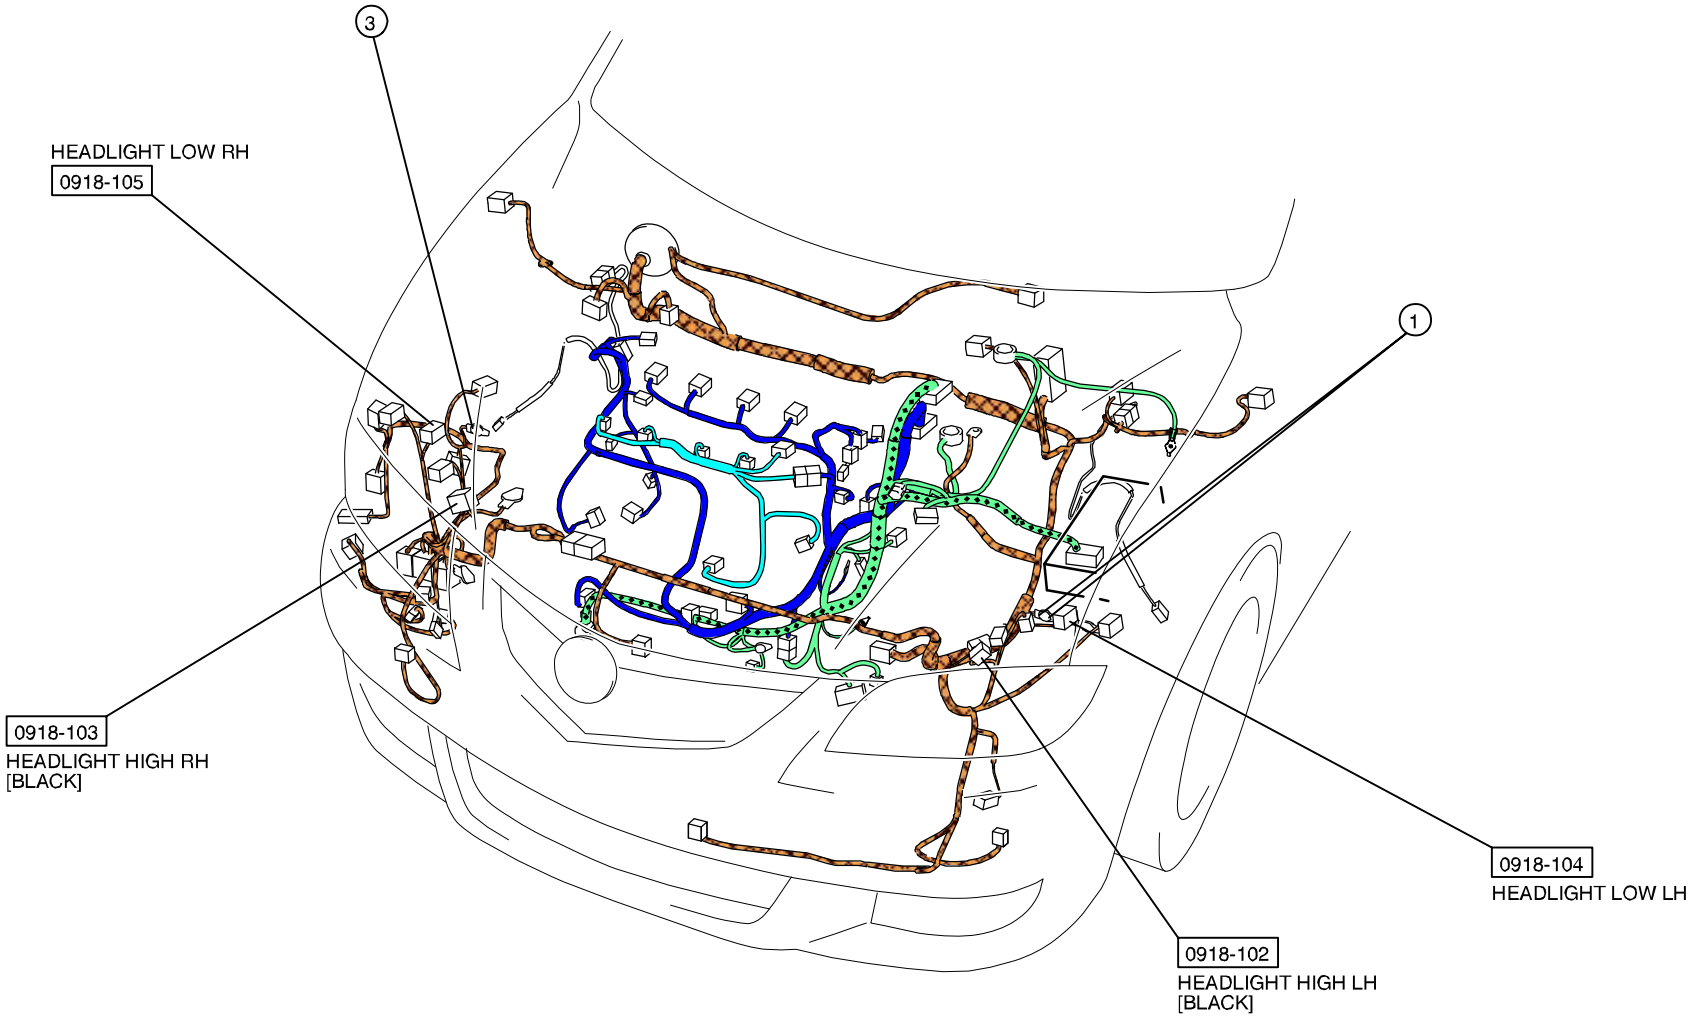
3
HEADLIGHT LOW RH
0918-105
1
0918-103
HEADLIGHT HIGH RH
[BLACK]
0918-104
HEADLIGHT LOW LH
0918-102
HEADLIGHT HIGH LH
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS


HEADLIGHT (WITH RUNNING LIGHT SYSTEM)

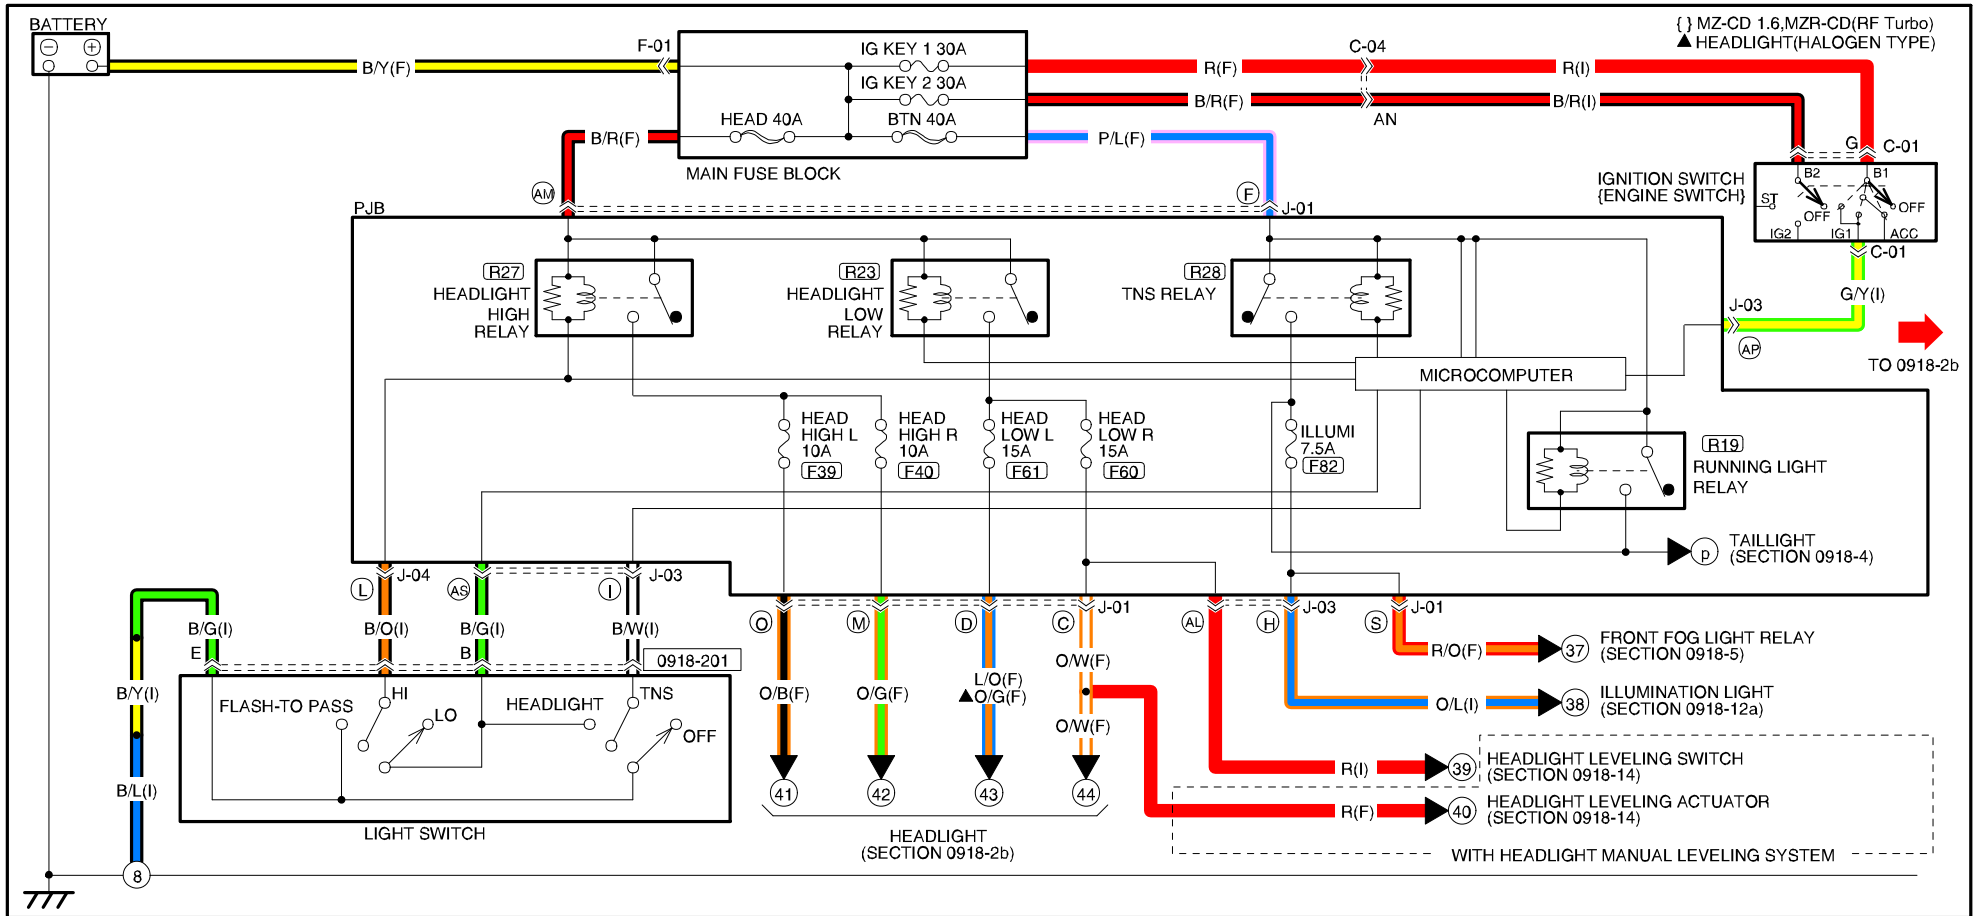


0918-201
LIGHT SWITCH

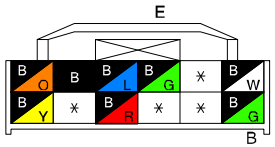

HEADLIGHT (WITH RUNNING LIGHT SYSTEM)

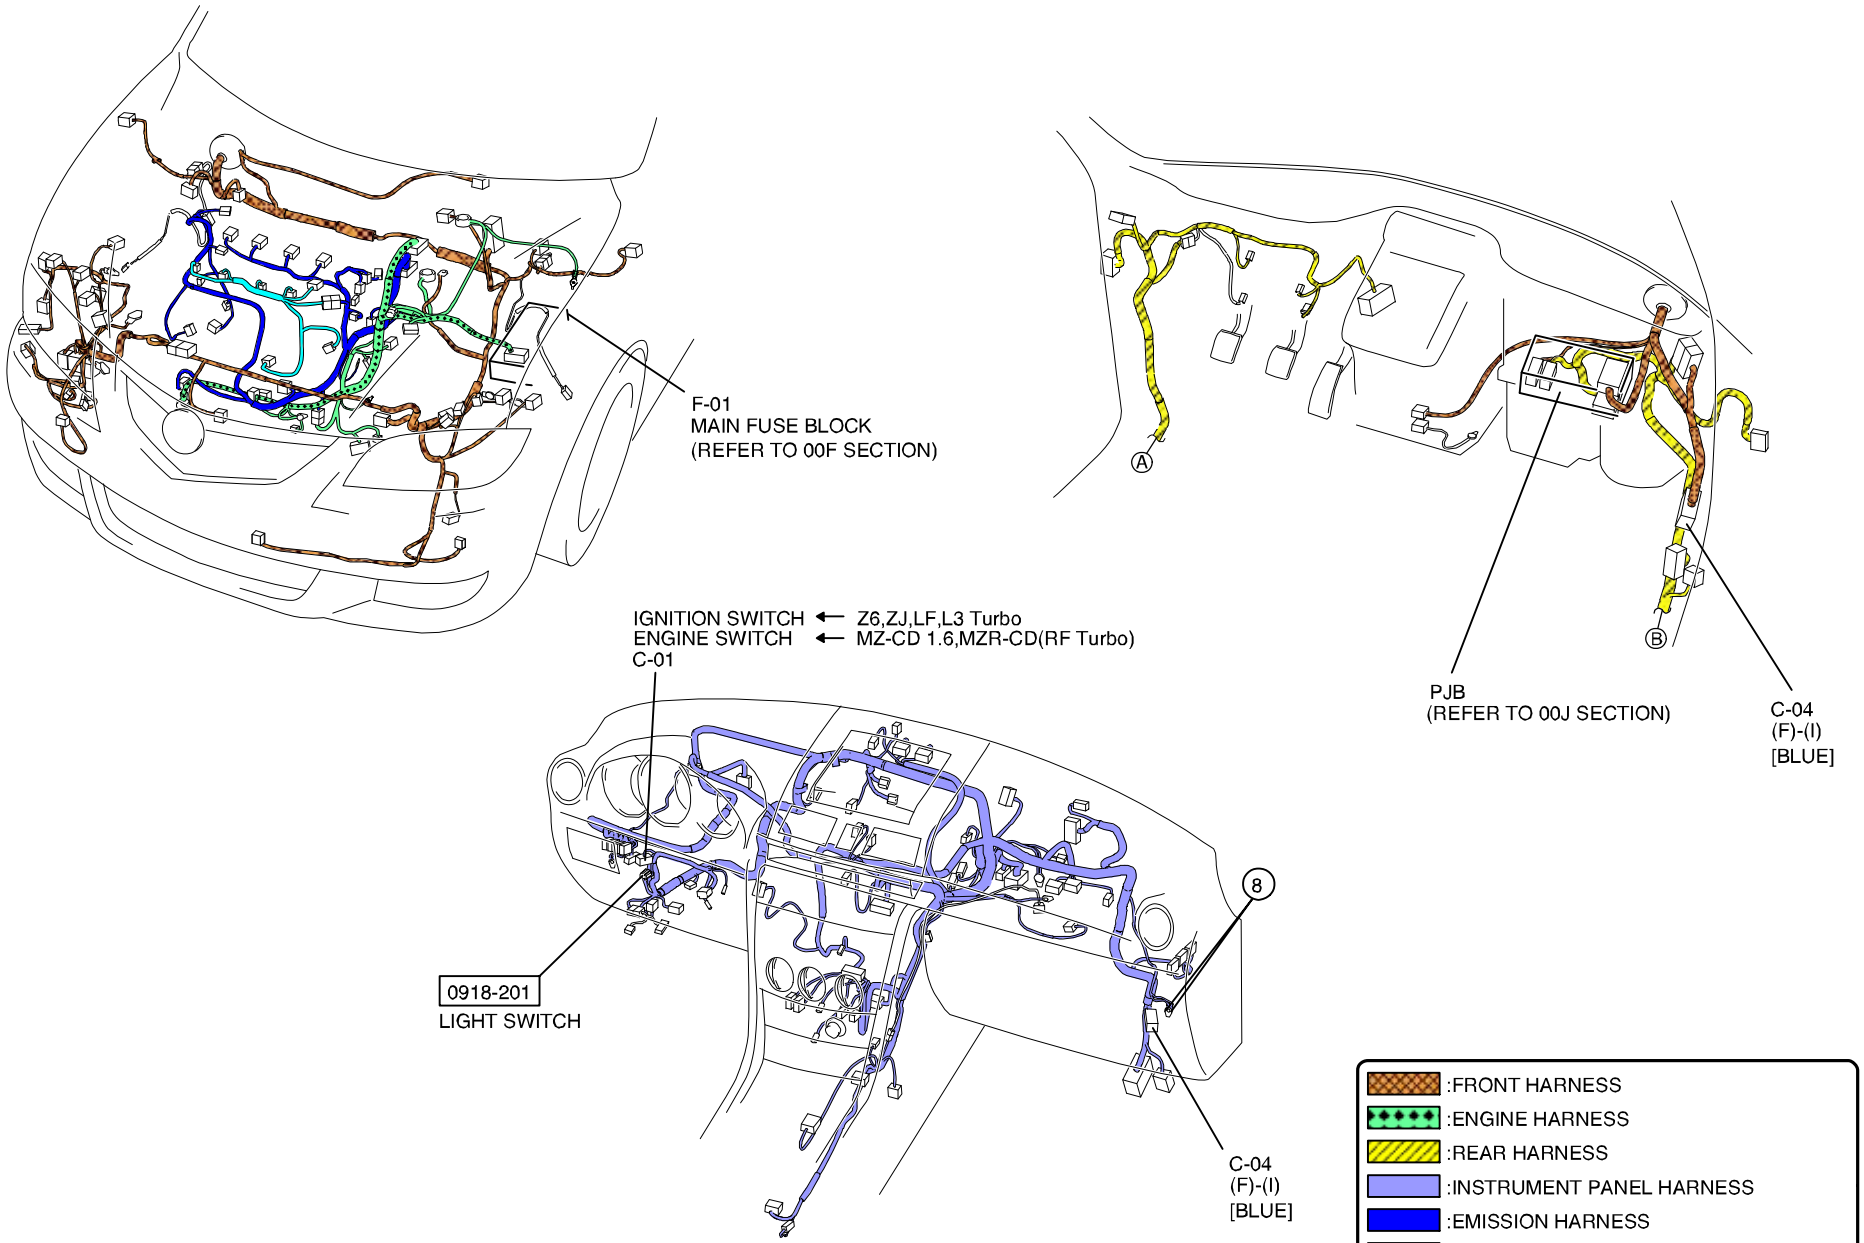


C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

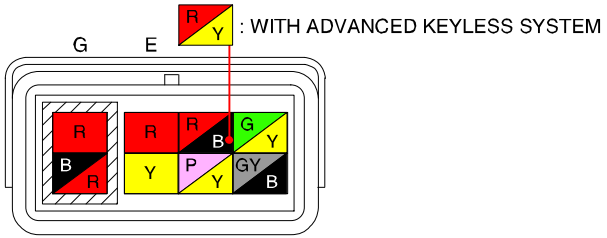


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS






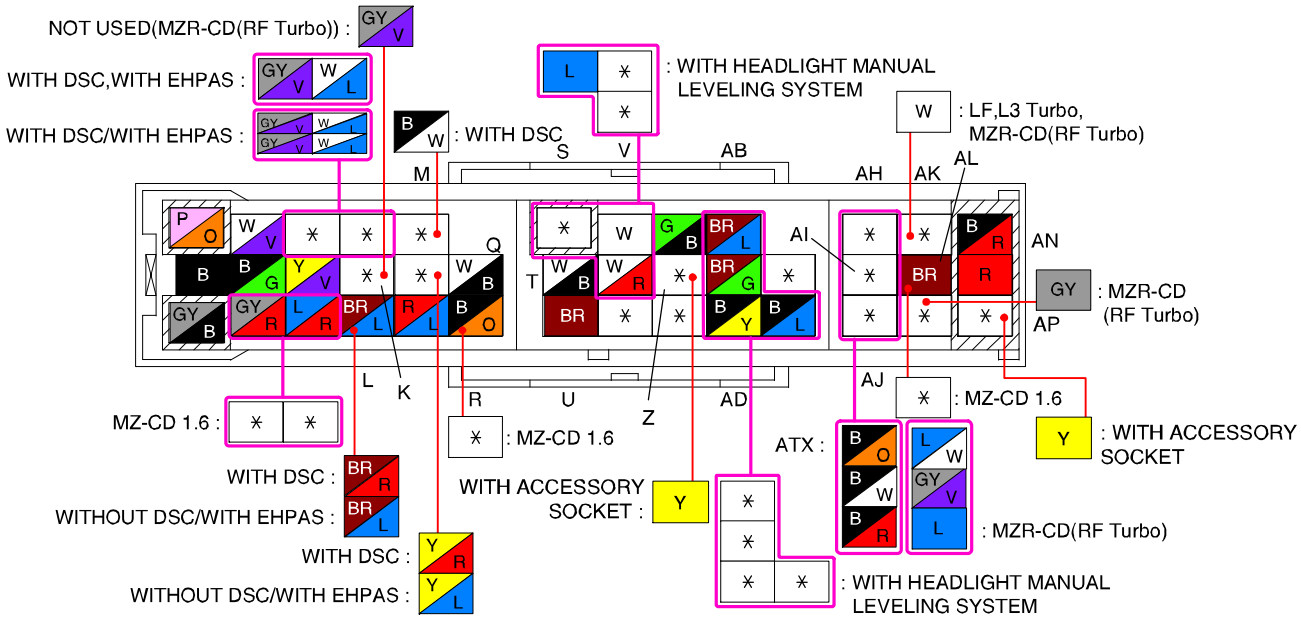


INSTRUMENT PANEL HARNESS

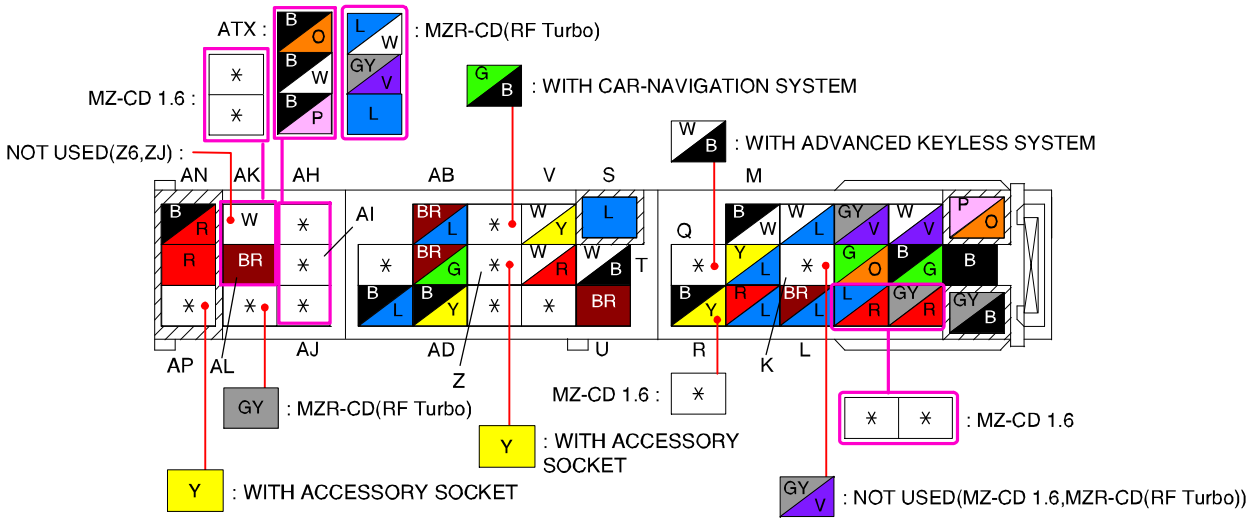


HEADLIGHT (WITH RUNNING LIGHT SYSTEM)

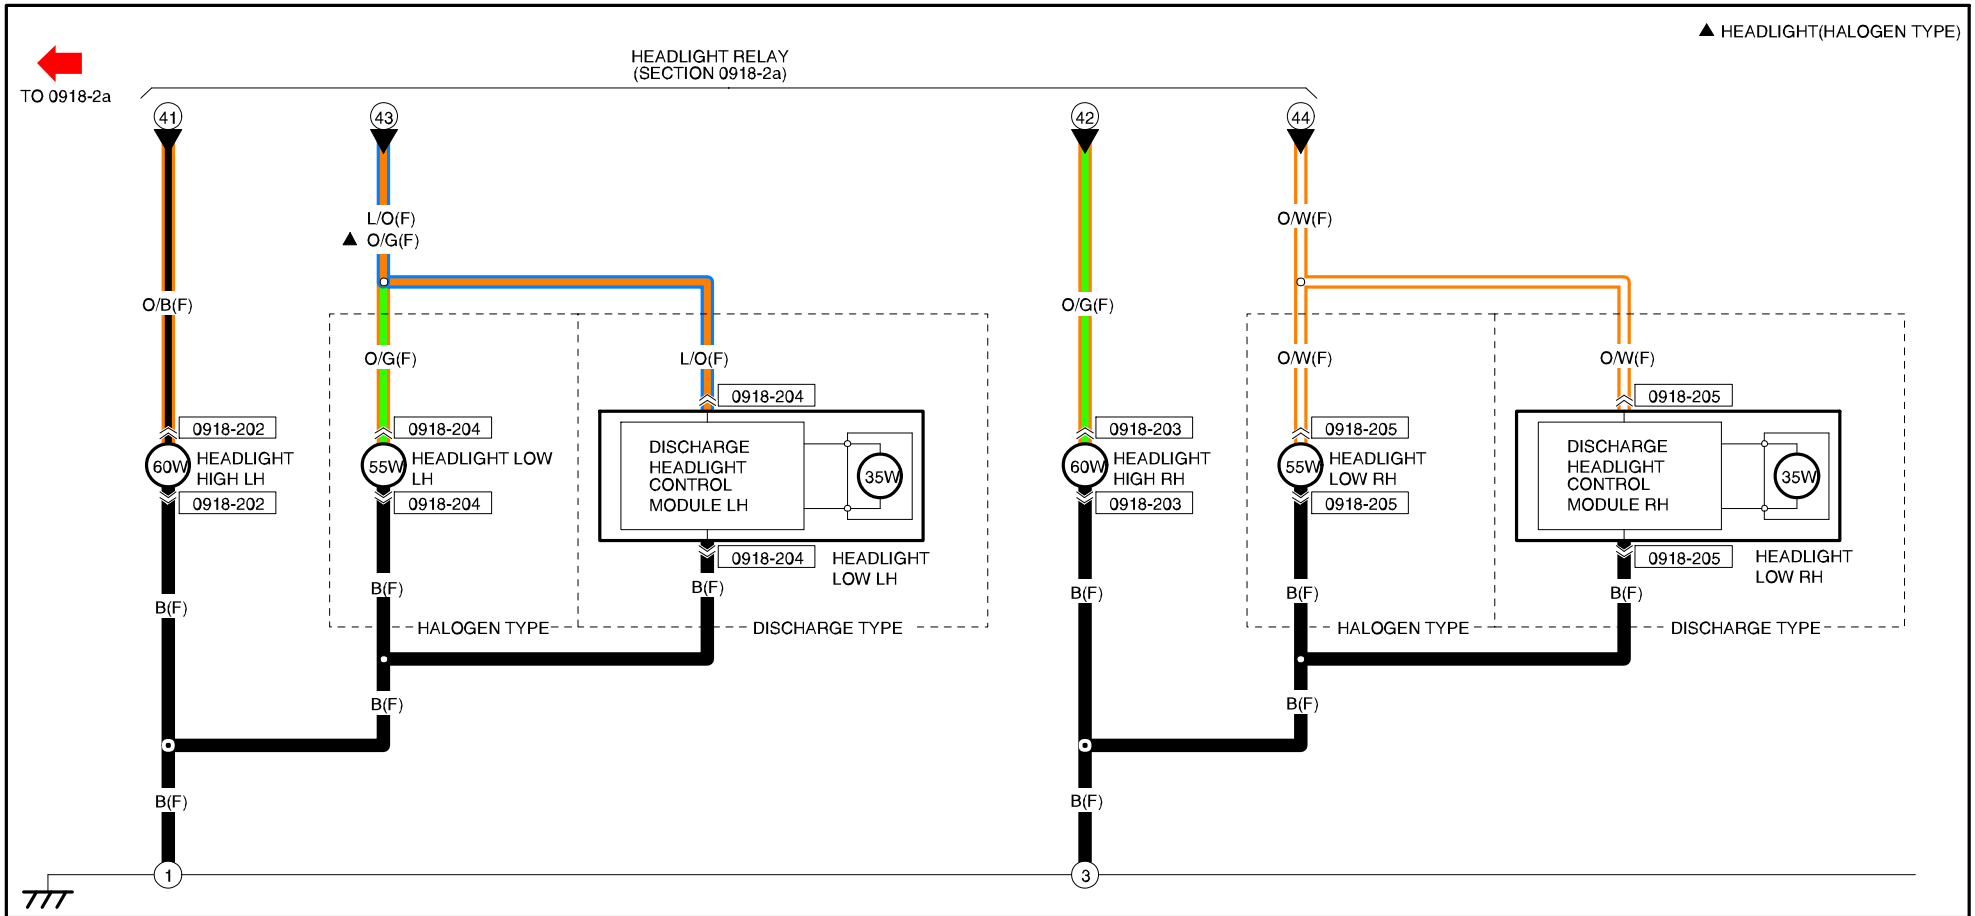


0918-202 HEADLIGHT HIGH LH	0918-203 HEADLIGHT HIGH RH	0918-204 HEADLIGHT LOW LH		0918-205 HEADLIGHT LOW RH	
					
		(HALOGEN TYPE)	(DISCHARGE TYPE)	(HALOGEN TYPE)	(DISCHARGE TYPE)


HEADLIGHT (WITH RUNNING LIGHT SYSTEM)

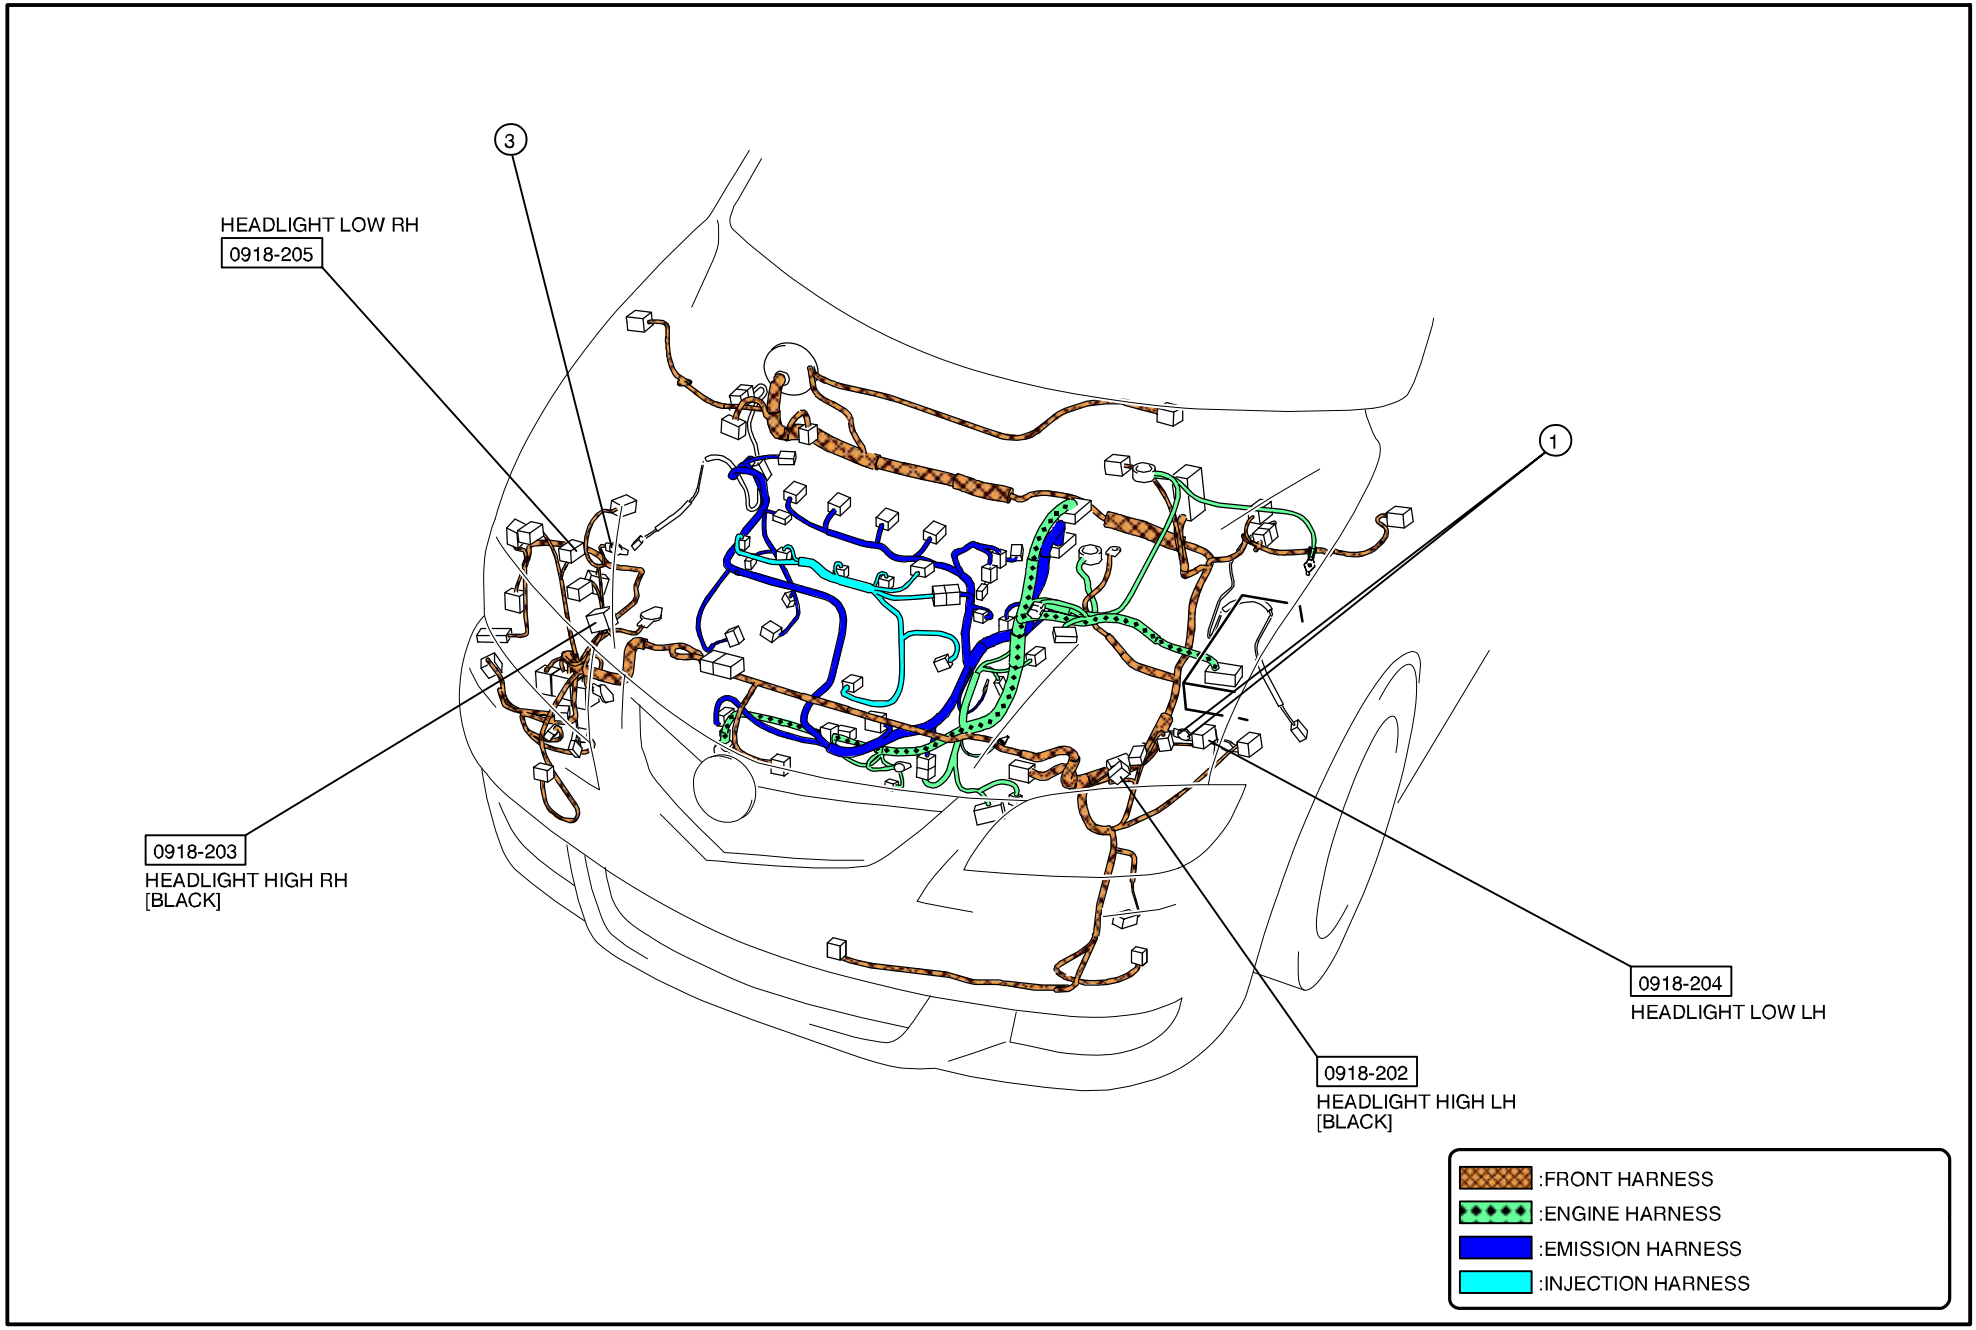


HEADLIGHT (WITH AUTO LIGHT SYSTEM)

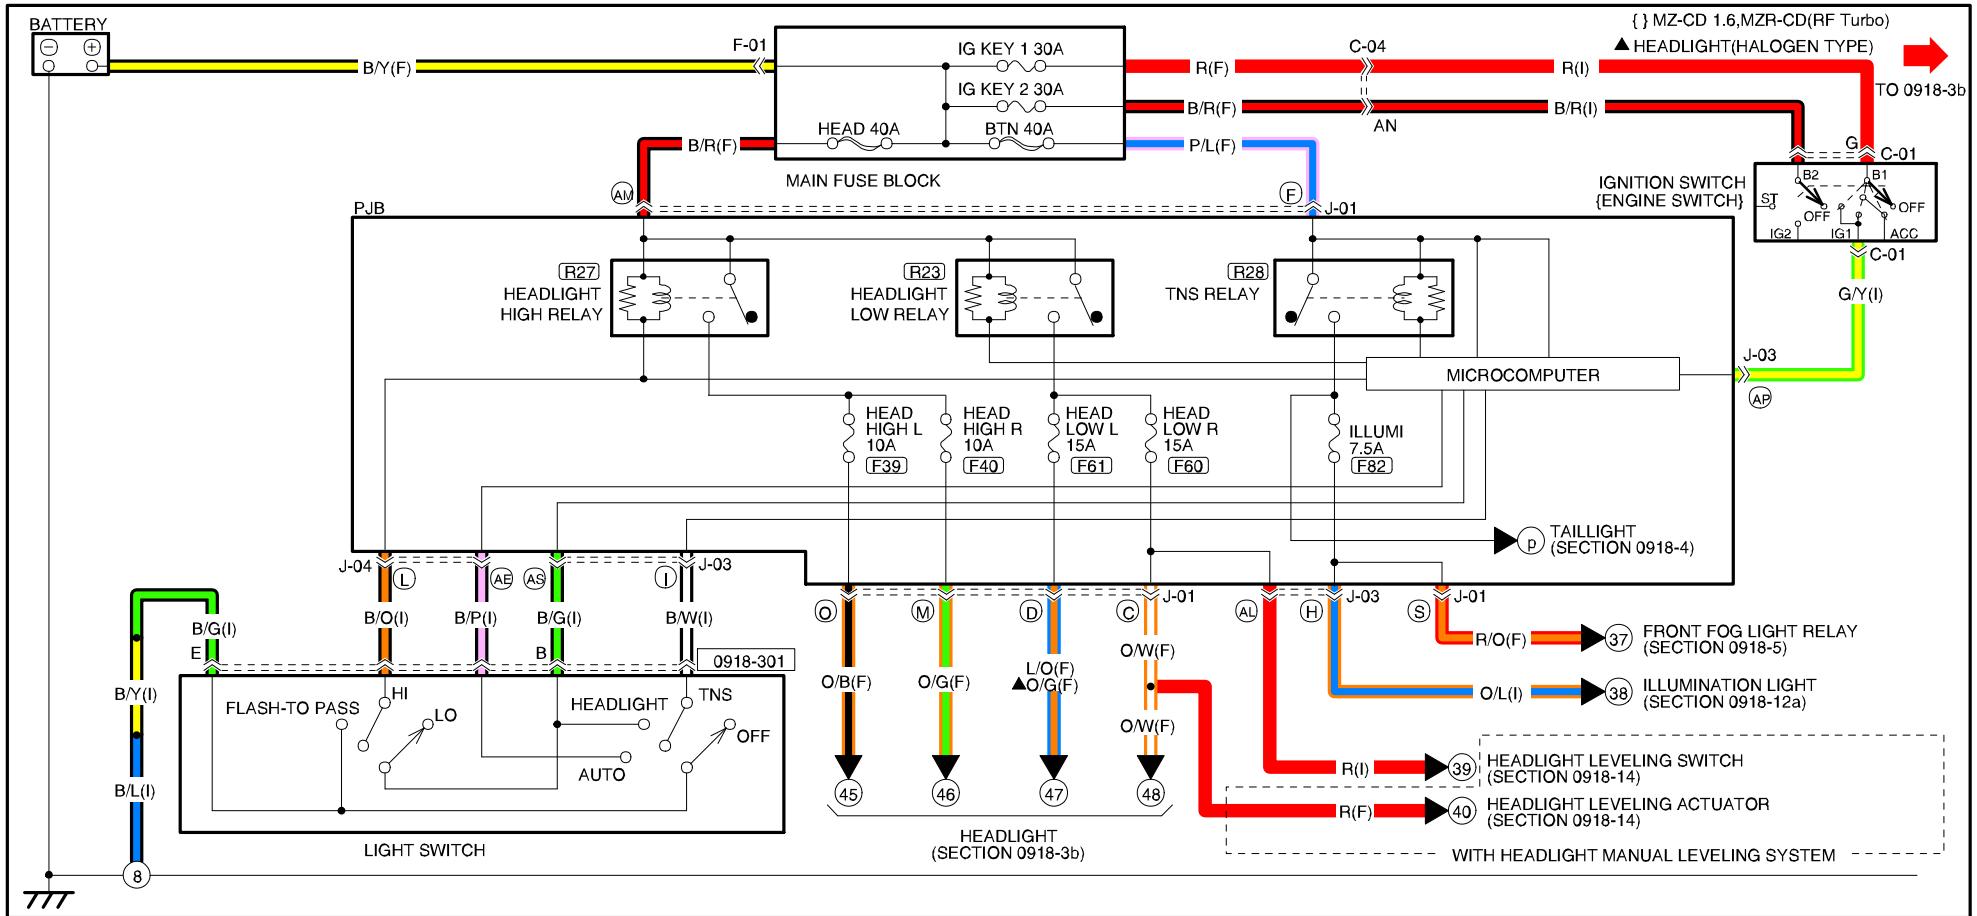


0918-301
LIGHT SWITCH

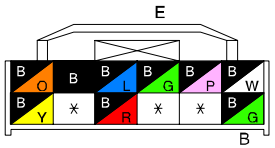

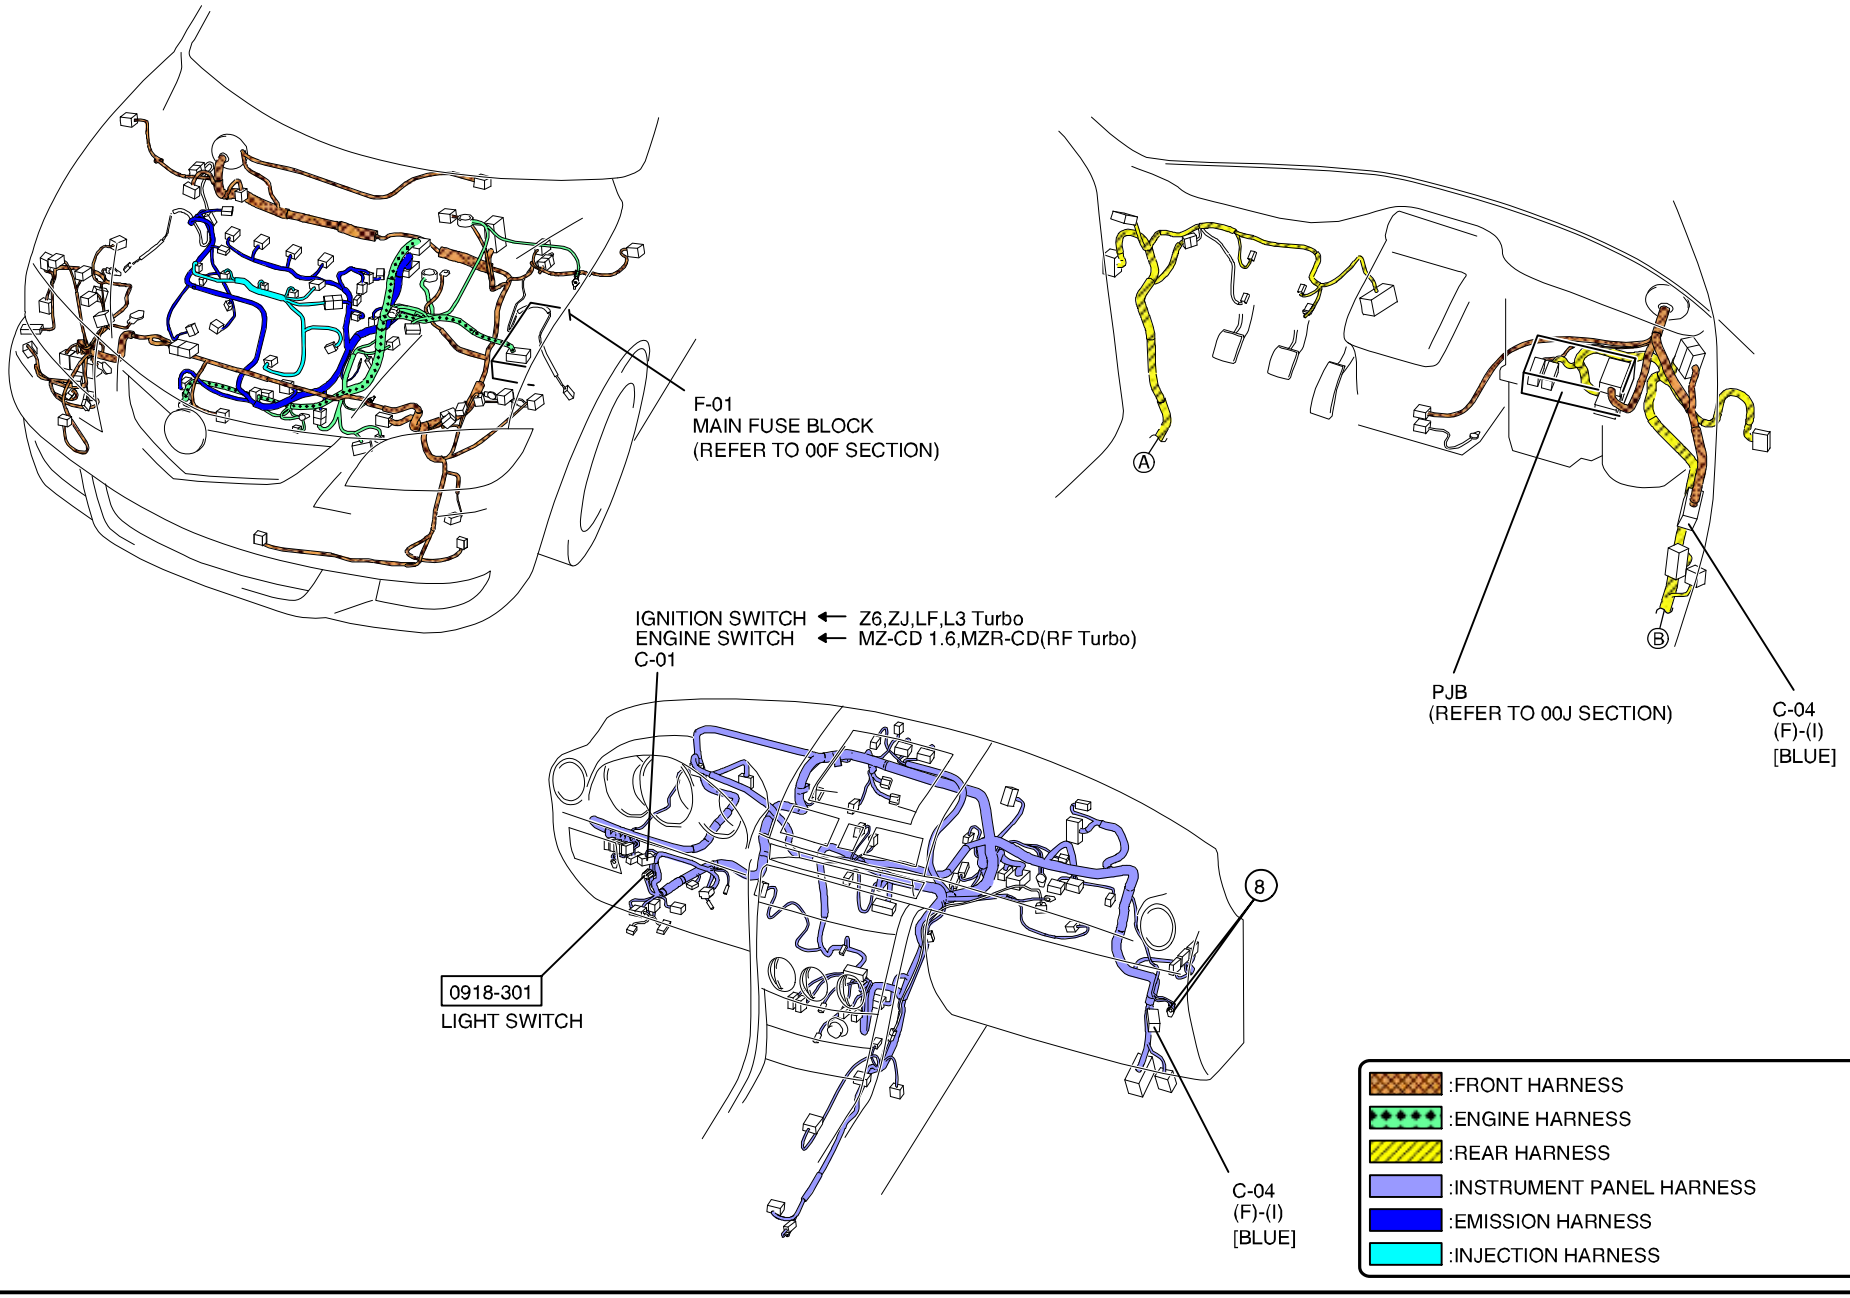

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
Ⓑ
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-01
8
0918-301
LIGHT SWITCH
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

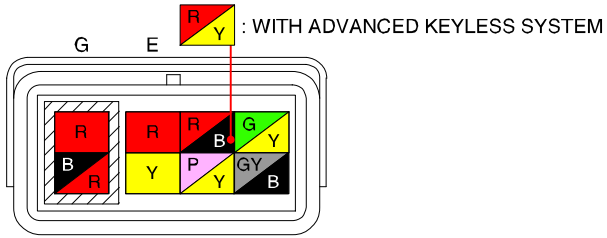


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS






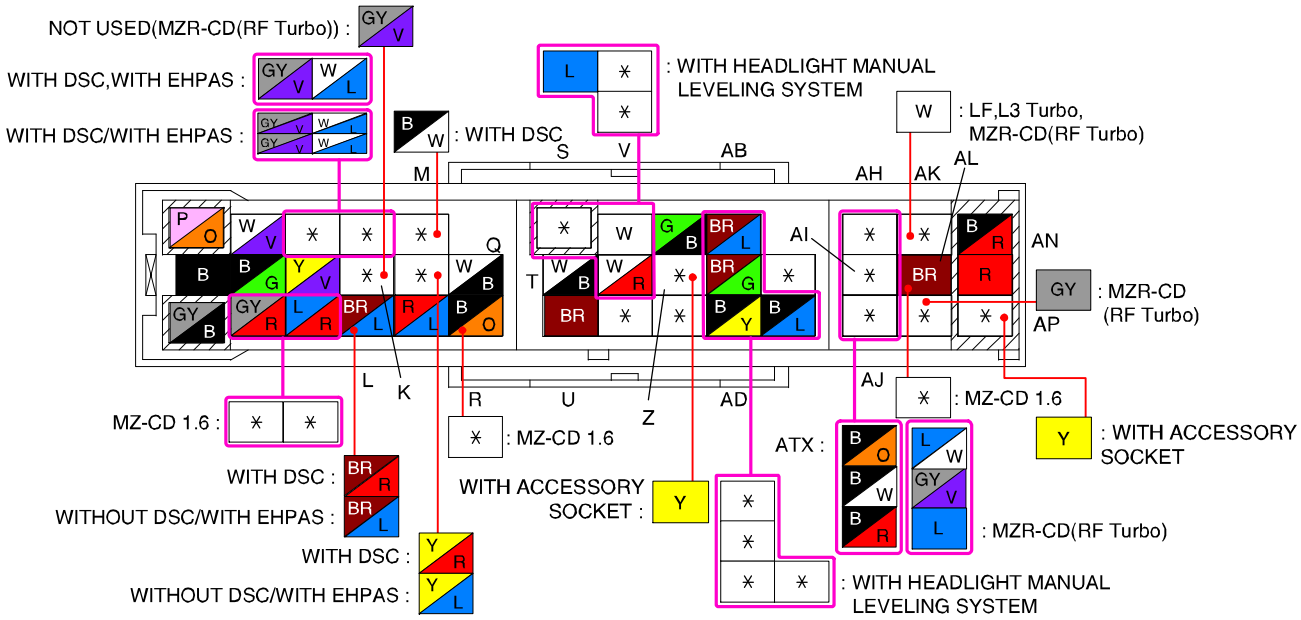



INSTRUMENT PANEL HARNESS

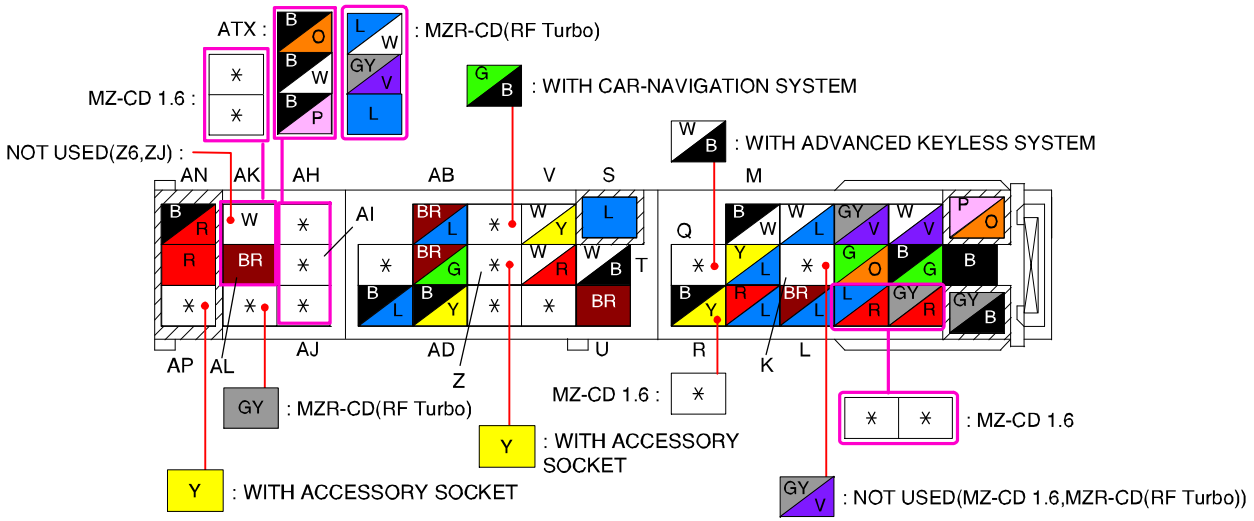


HEADLIGHT (WITH AUTO LIGHT SYSTEM)




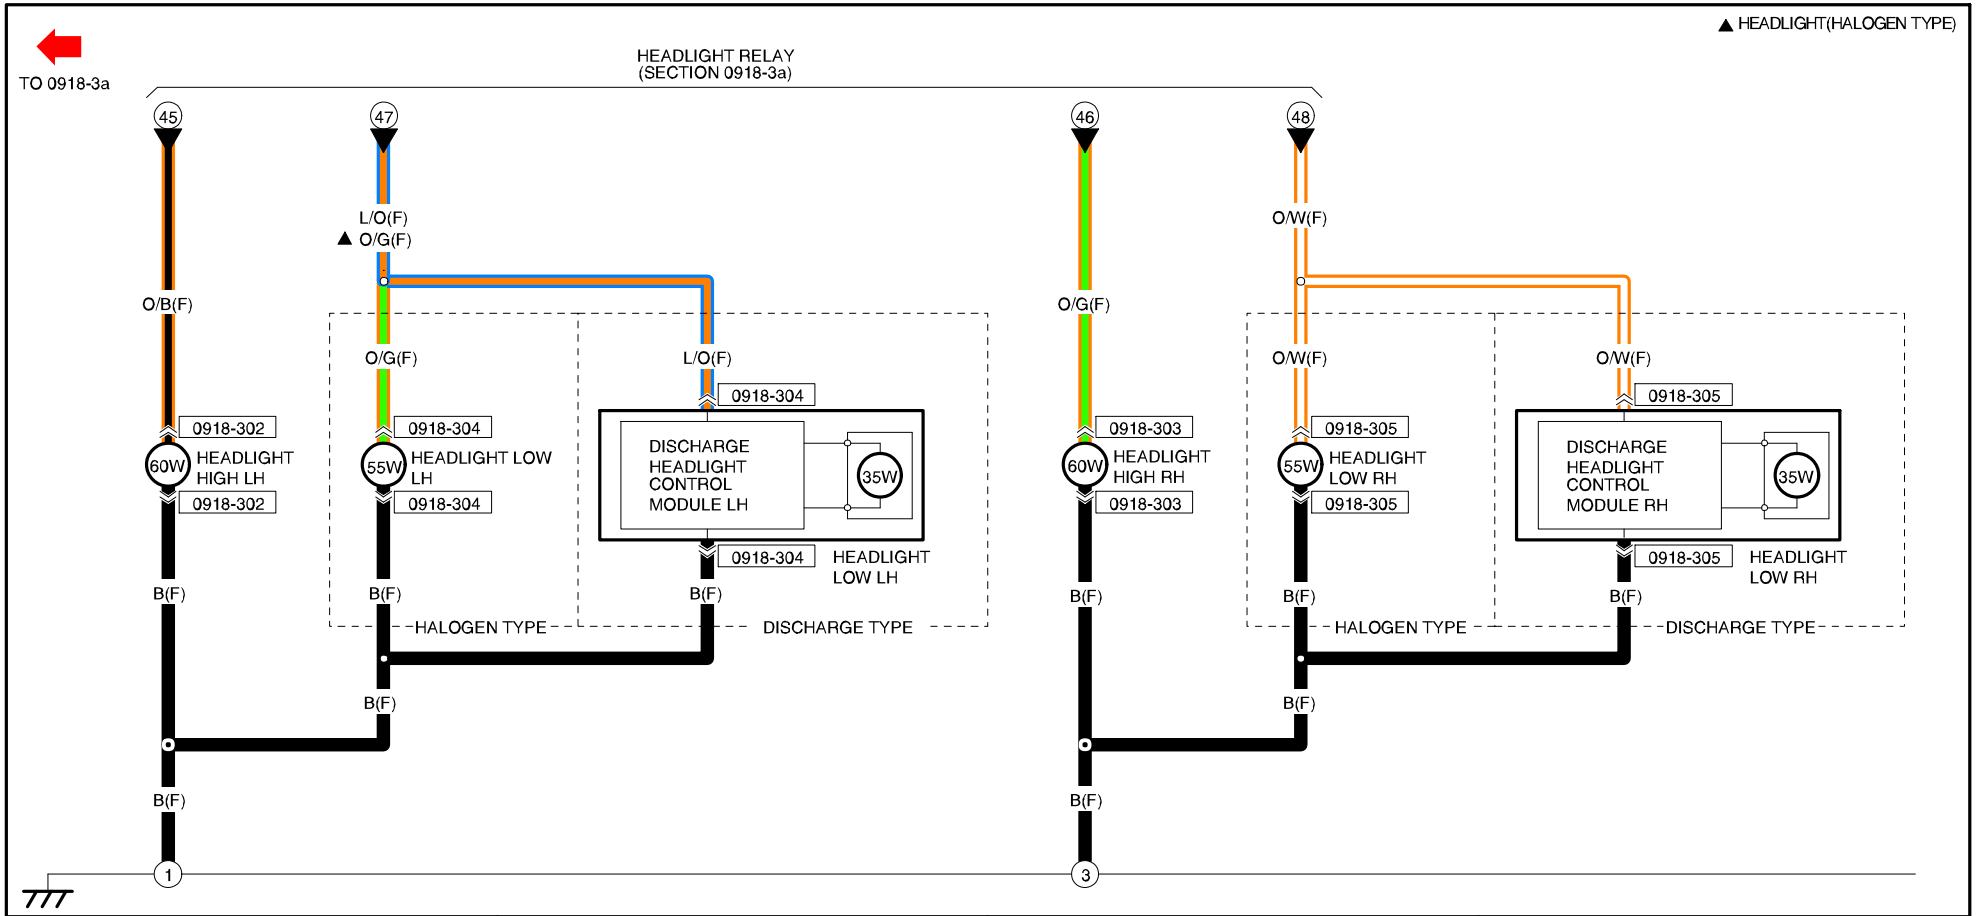



0918-302 HEADLIGHT HIGH LH	0918-303 HEADLIGHT HIGH RH	0918-304 HEADLIGHT LOW LH		0918-305 HEADLIGHT LOW RH	
					
		(HALOGEN TYPE)	(DISCHARGE TYPE)	(HALOGEN TYPE)	(DISCHARGE TYPE)

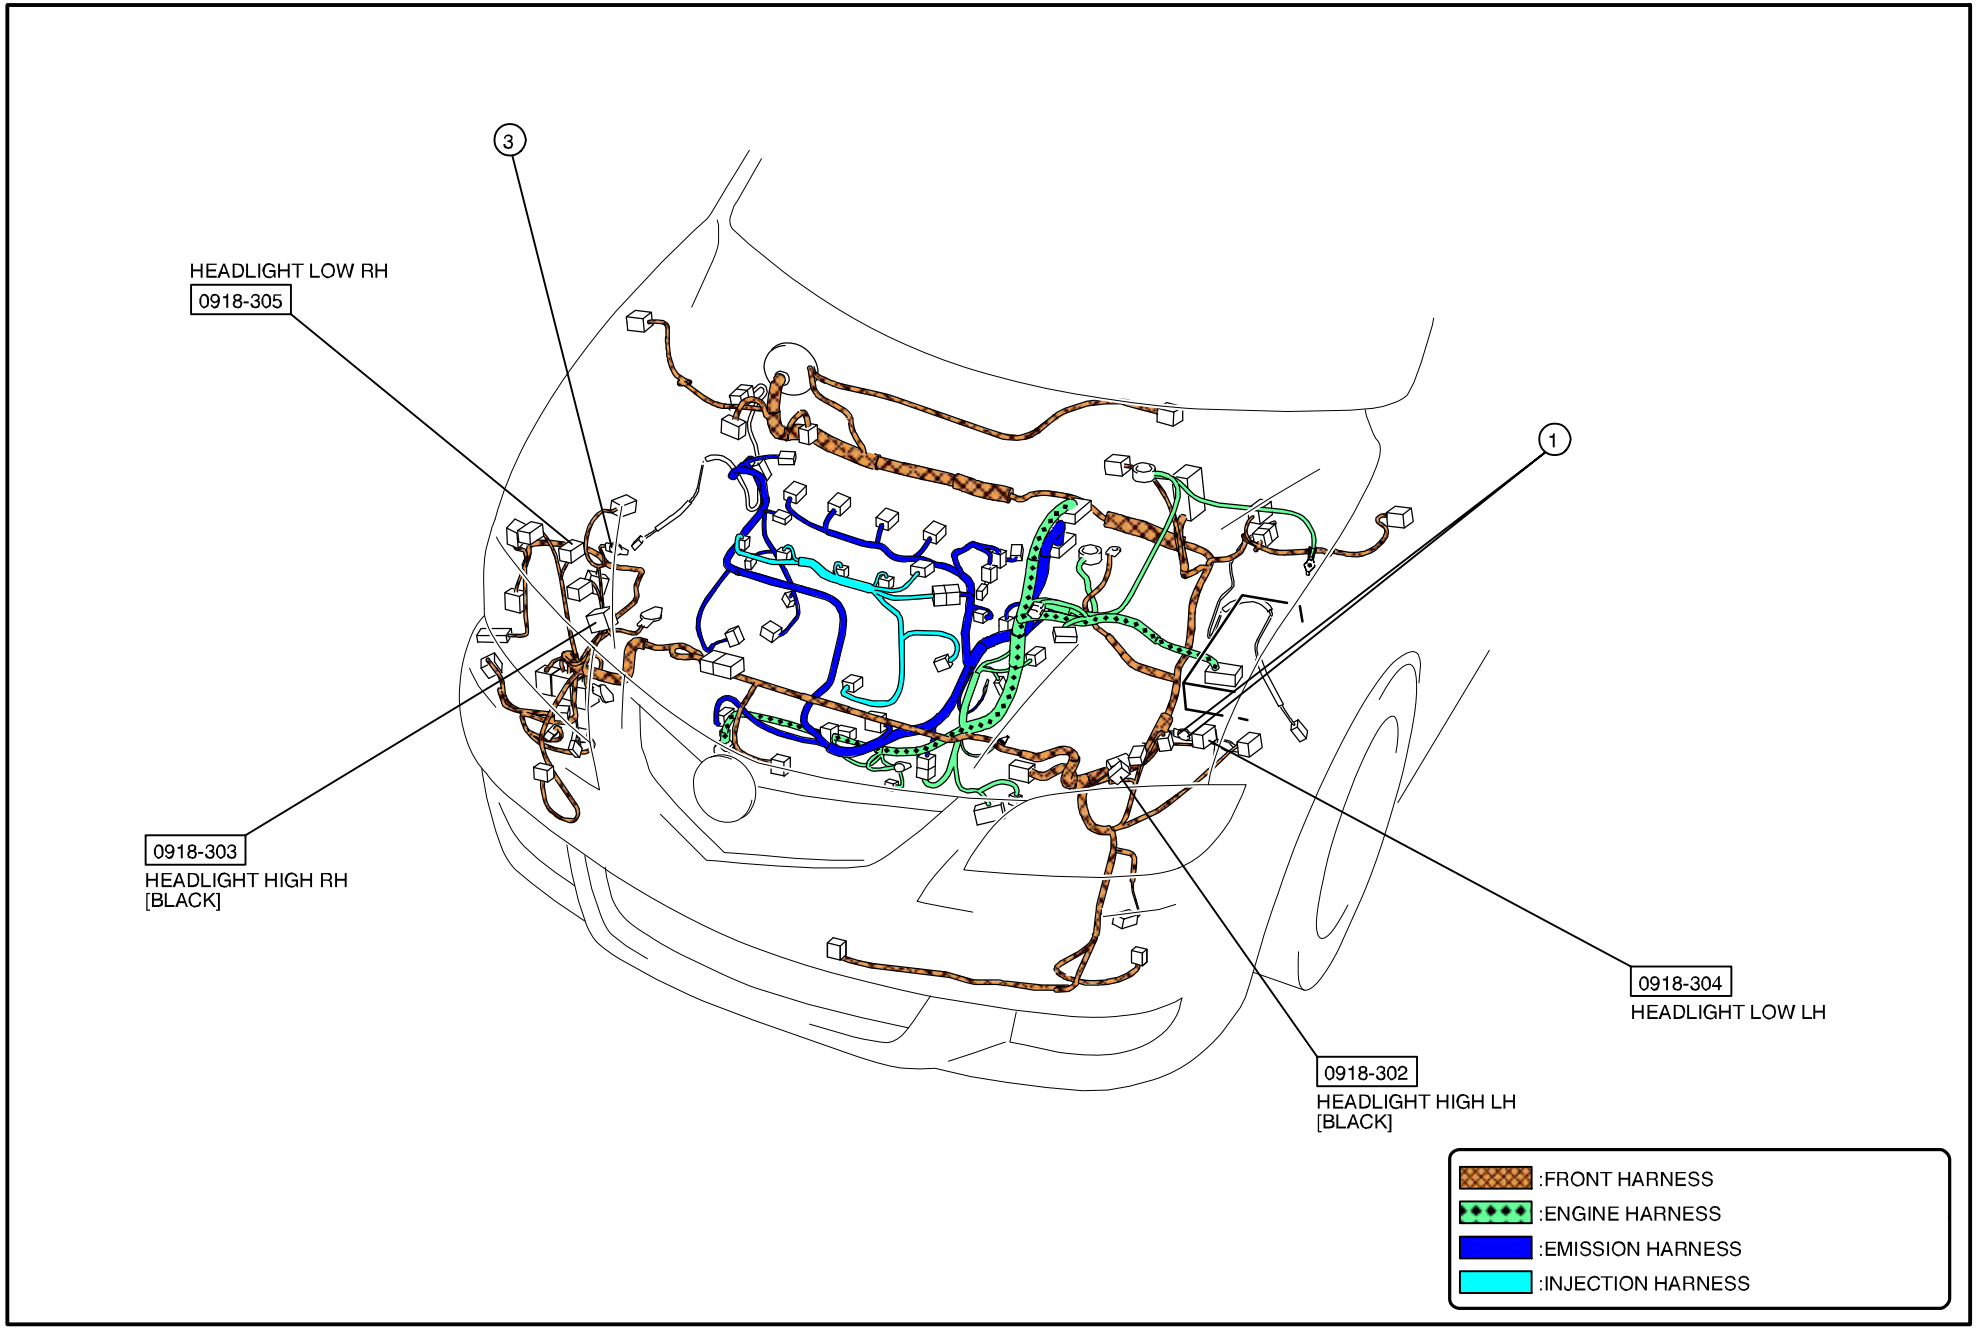
3
HEADLIGHT LOW RH
0918-305
1
0918-303
HEADLIGHT HIGH RH
[BLACK]
0918-304
HEADLIGHT LOW LH
0918-302
HEADLIGHT HIGH LH
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

LICENSE PLATE LIGHT/PARKING LIGHT/TAILLIGHT

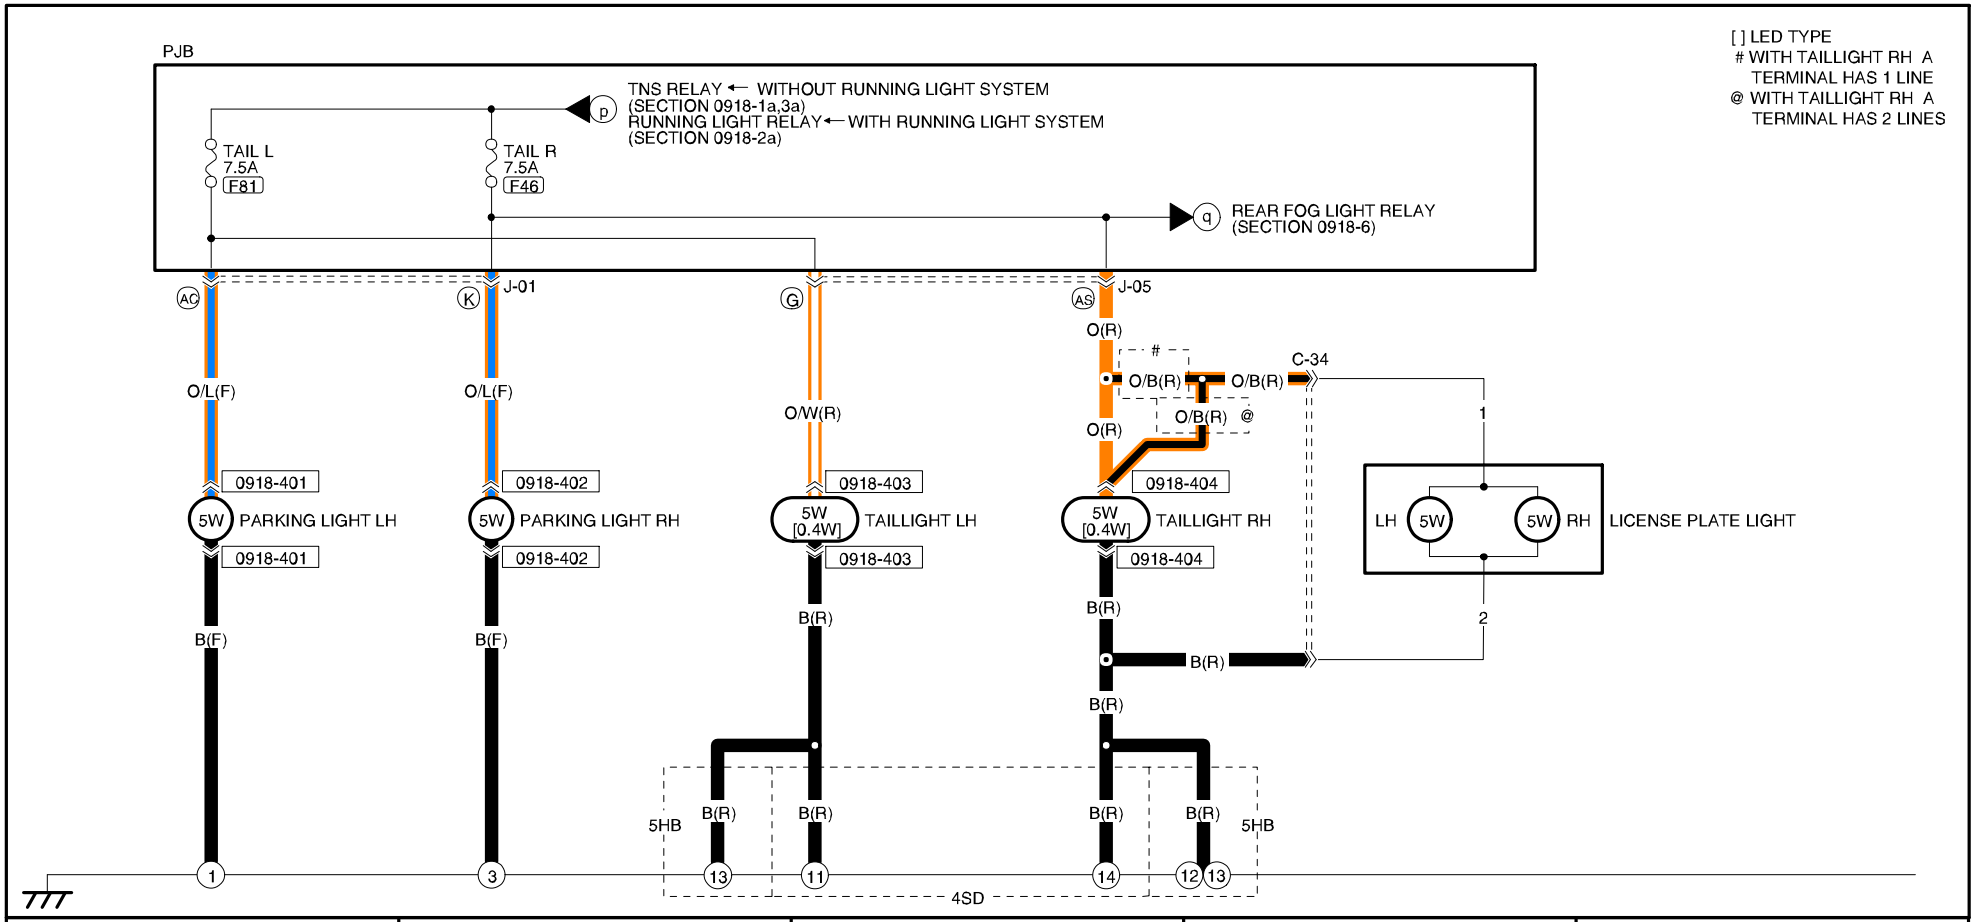


0918-401 PARKING LIGHT LH	0918-402 PARKING LIGHT RH	0918-403 TAILLIGHT LH	0918-404 TAILLIGHT RH	
			 WITH TAILLIGHT RH A TERMINAL HAS 2 LINES :	

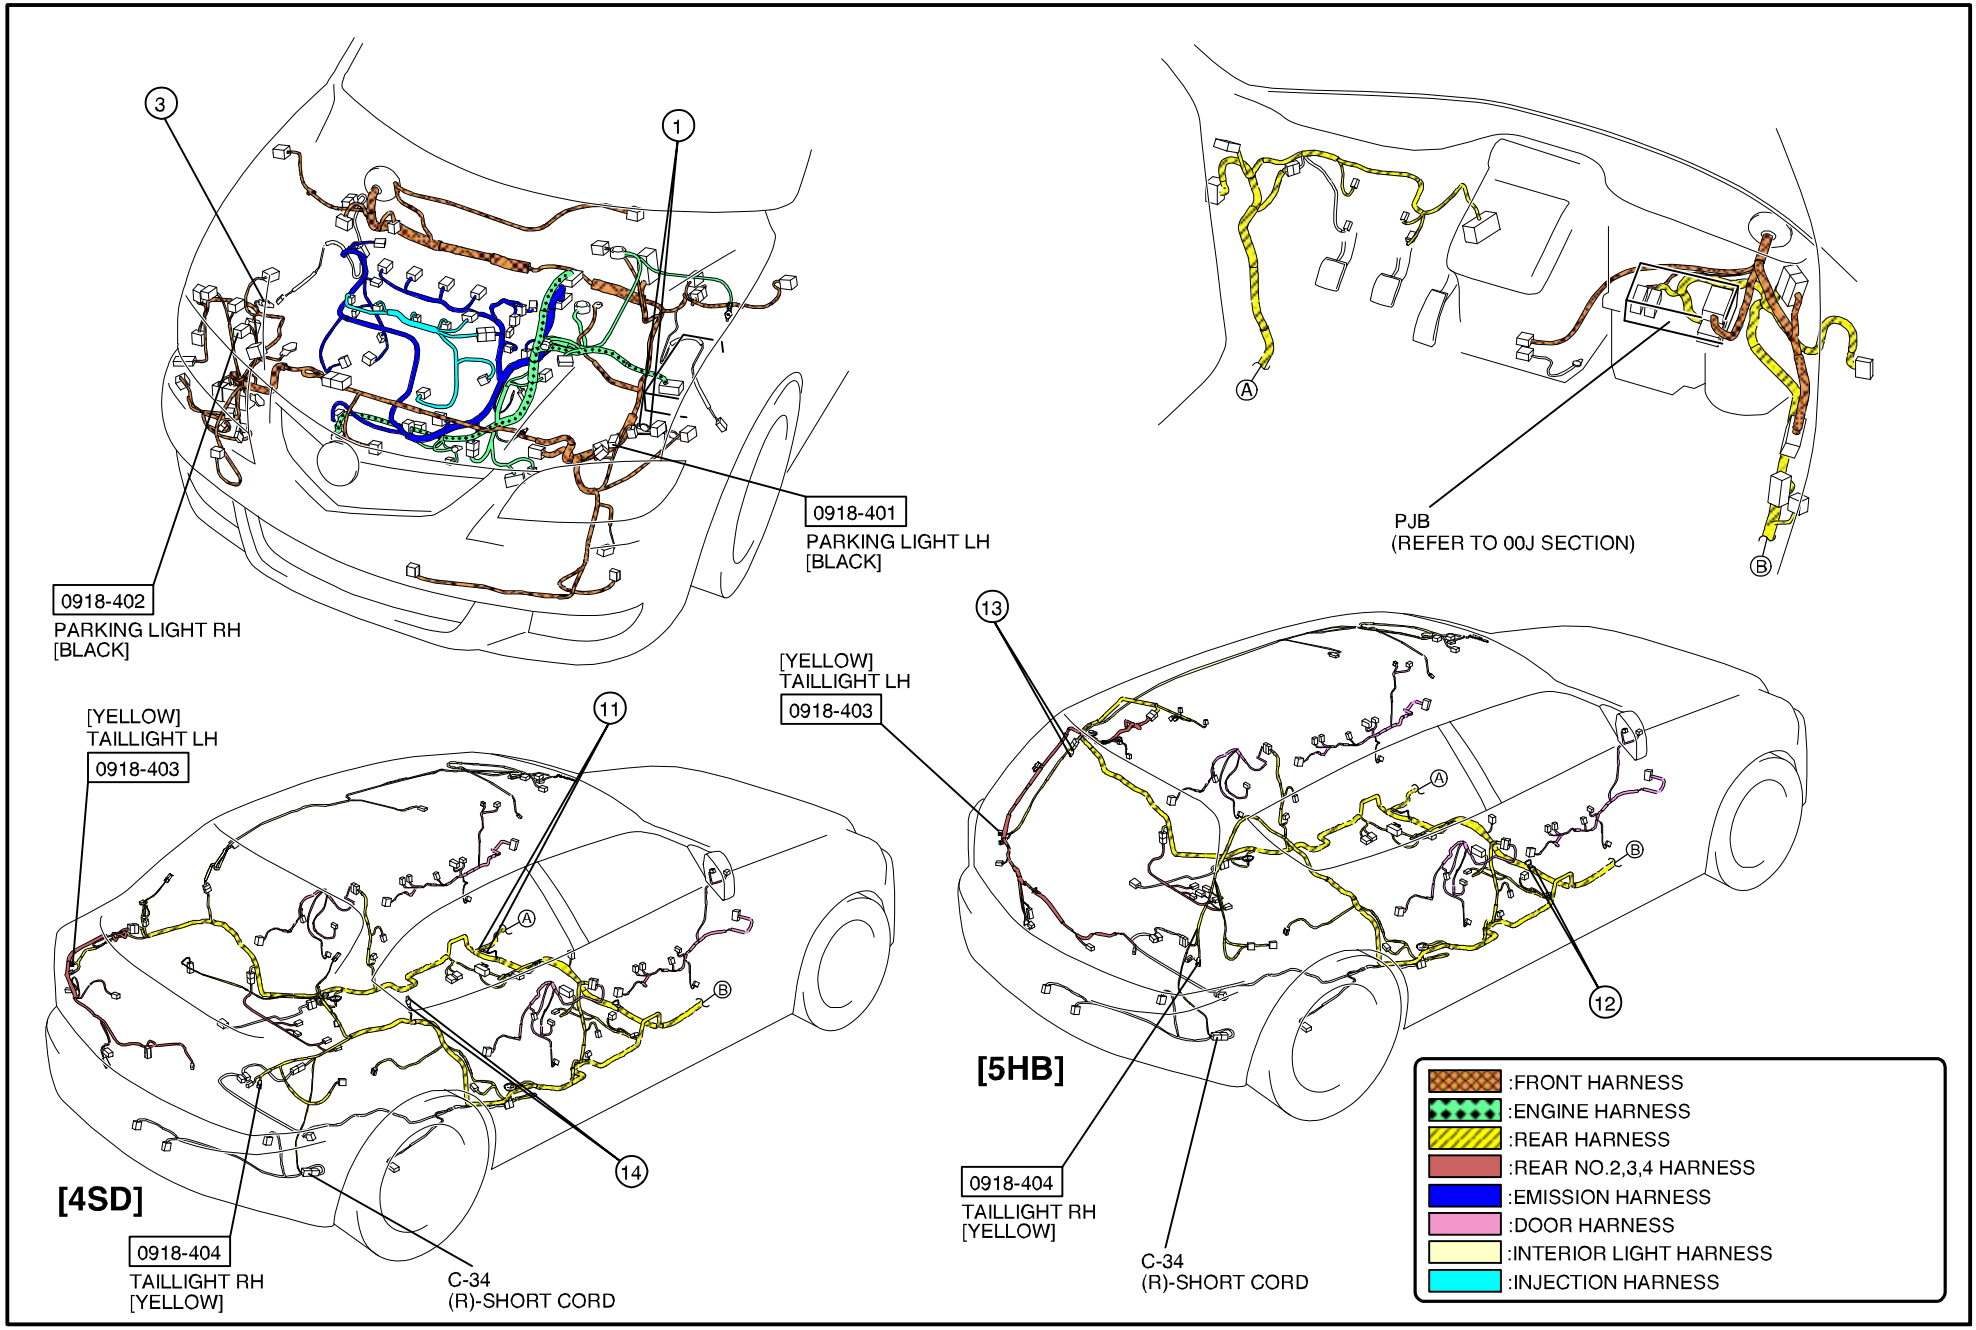

3
1
0918-402
PARKING LIGHT RH
[BLACK]
0918-401
PARKING LIGHT LH
[BLACK]
A
PJB
(REFER TO 00J SECTION)
B
[YELLOW]
TAILLIGHT LH
0918-403
11
14
[4SD]
0918-404
TAILLIGHT RH
[YELLOW]
C-34
(R)-SHORT CORD
13
[YELLOW]
TAILLIGHT LH
0918-403
[5HB]
12
0918-404
TAILLIGHT RH
[YELLOW]
C-34
(R)-SHORT CORD
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-34
REAR HARNESS-SHORT CORD

REAR HARNESS

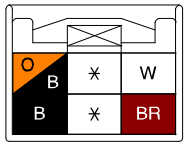


SHORT CORD

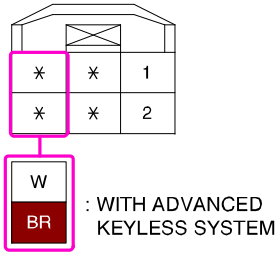


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


FRONT FOG LIGHT

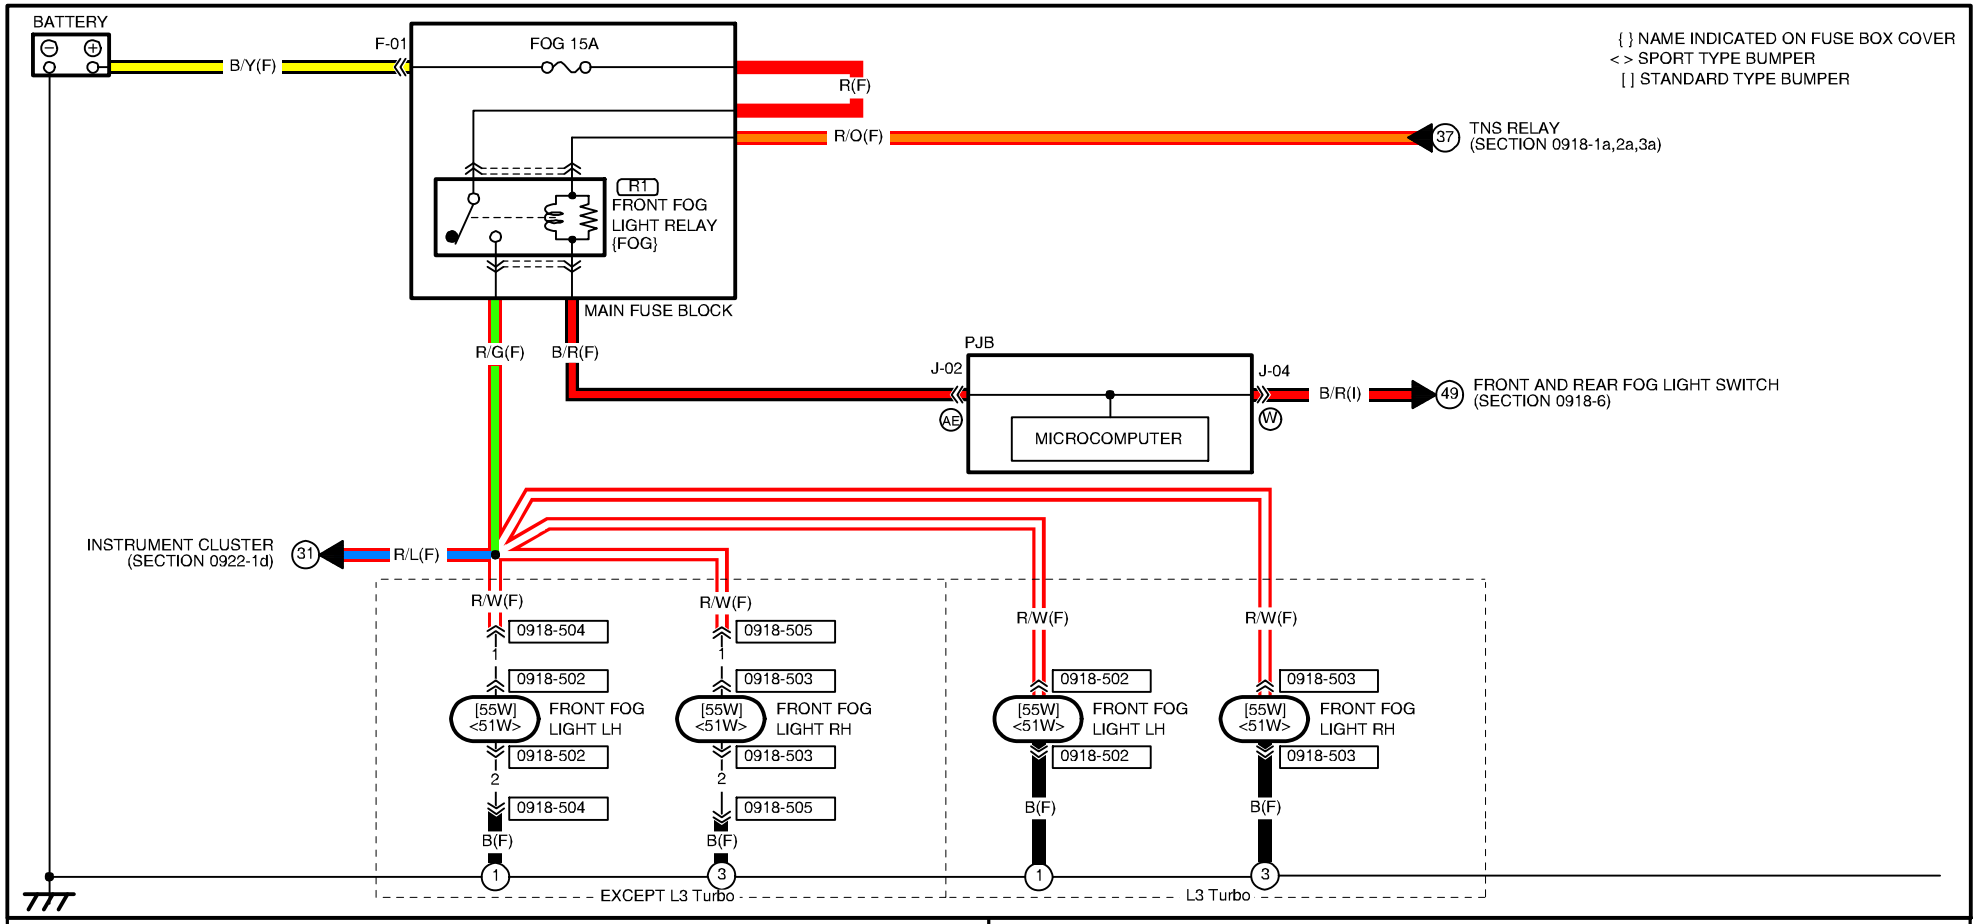

0918-502
FRONT FOG LIGHT LH




(EXCEPT L3 Turbo)




(L3 Turbo)

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0918-503
FRONT FOG LIGHT RH



(EXCEPT L3 Turbo)




(L3 Turbo)


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0918-504
FRONT HARNESS-SHORT CORD

FRONT HARNESS




SHORT CORD




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0918-505
FRONT HARNESS-SHORT CORD


FRONT HARNESS




SHORT CORD




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

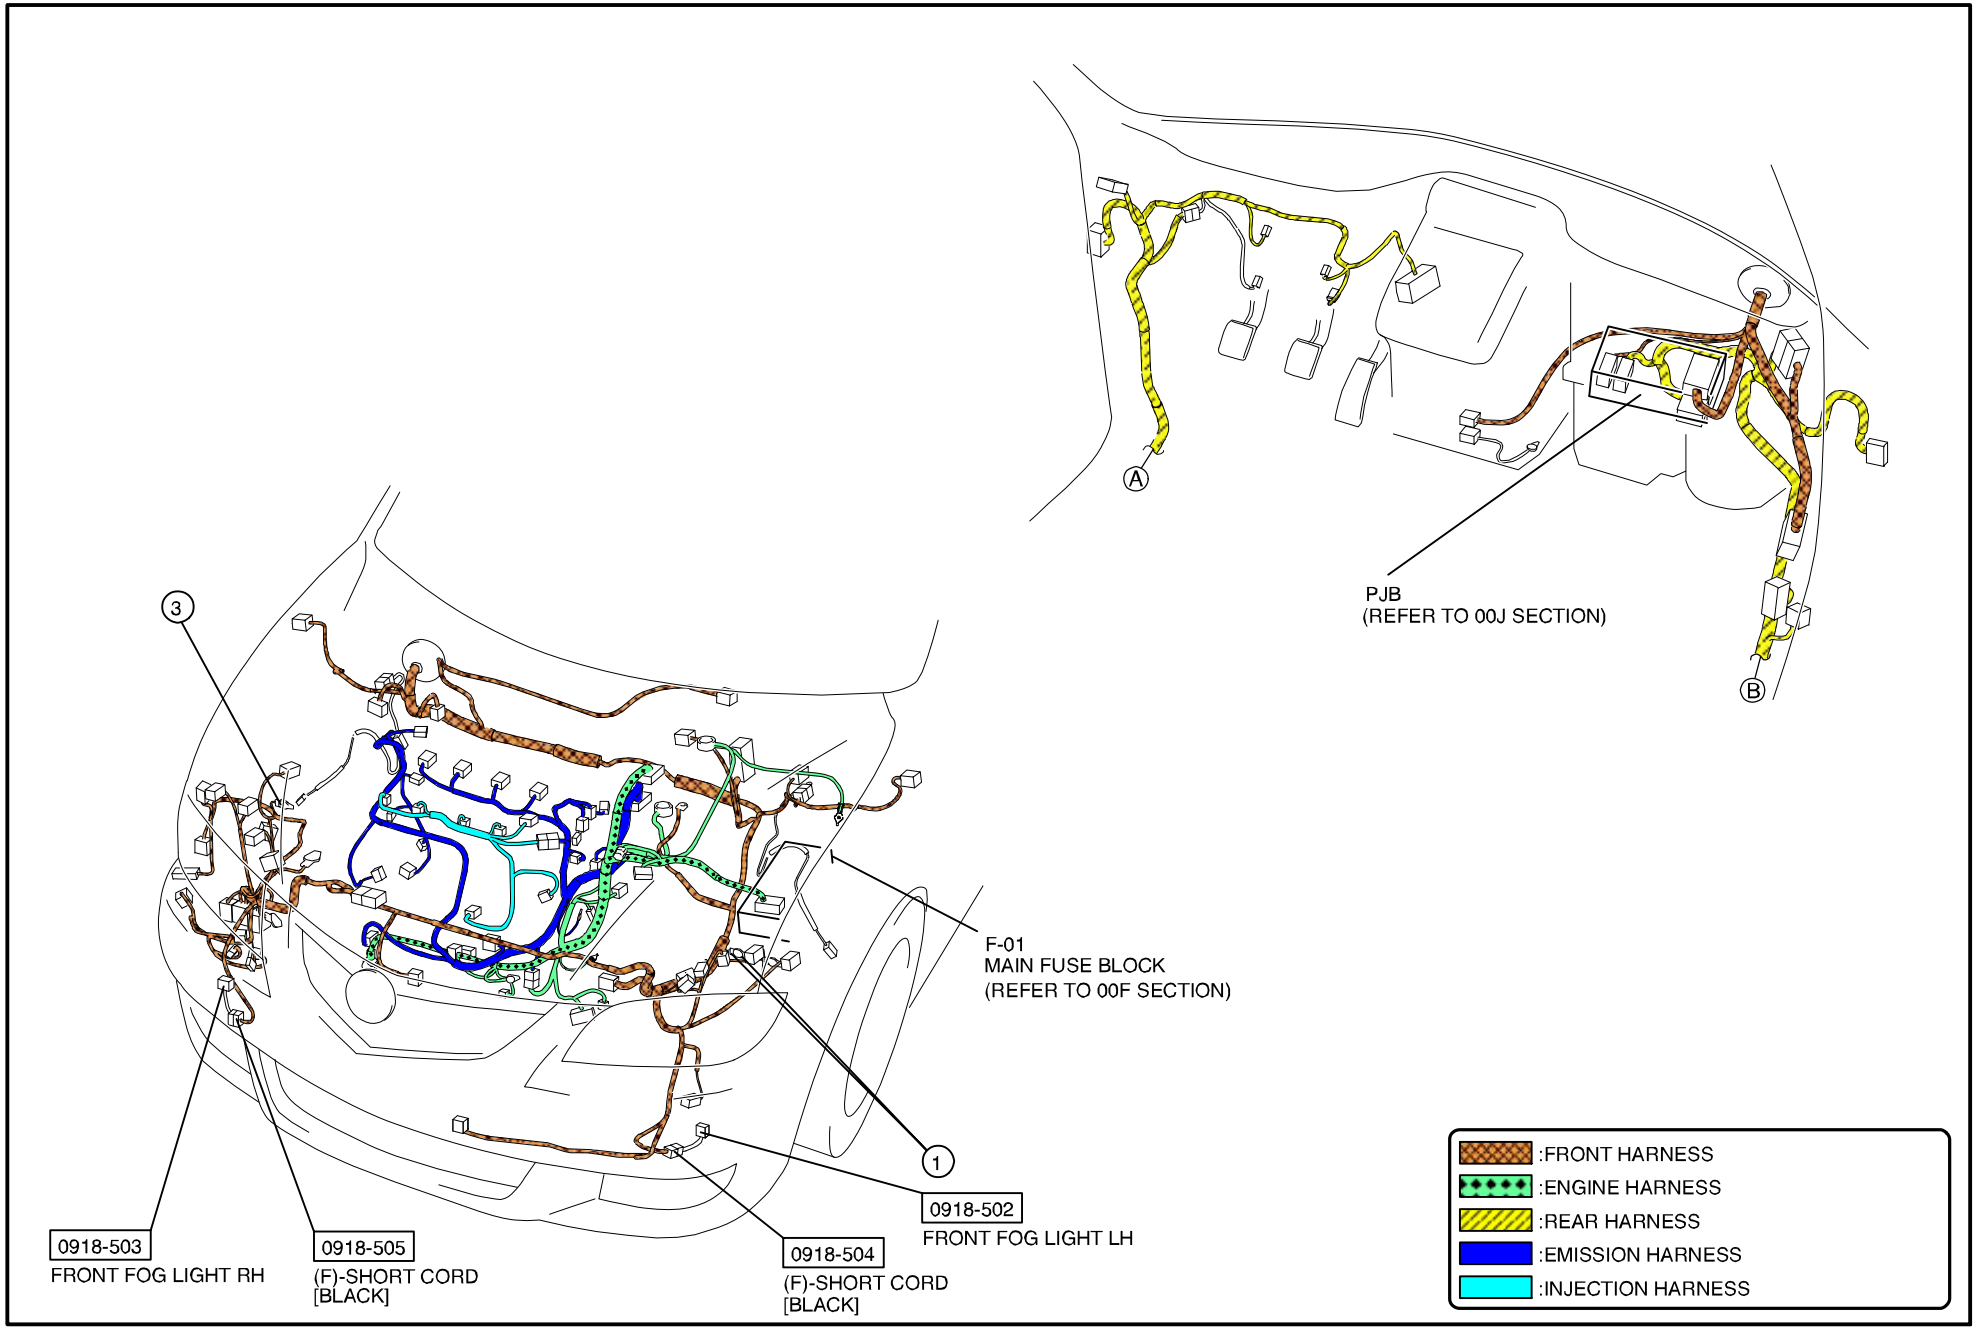

A
B
PJB
(REFER TO 00J SECTION)
3
1
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0918-503
FRONT FOG LIGHT RH
0918-505
(F)-SHORT CORD
[BLACK]
0918-504
(F)-SHORT CORD
[BLACK]
0918-502
FRONT FOG LIGHT LH
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

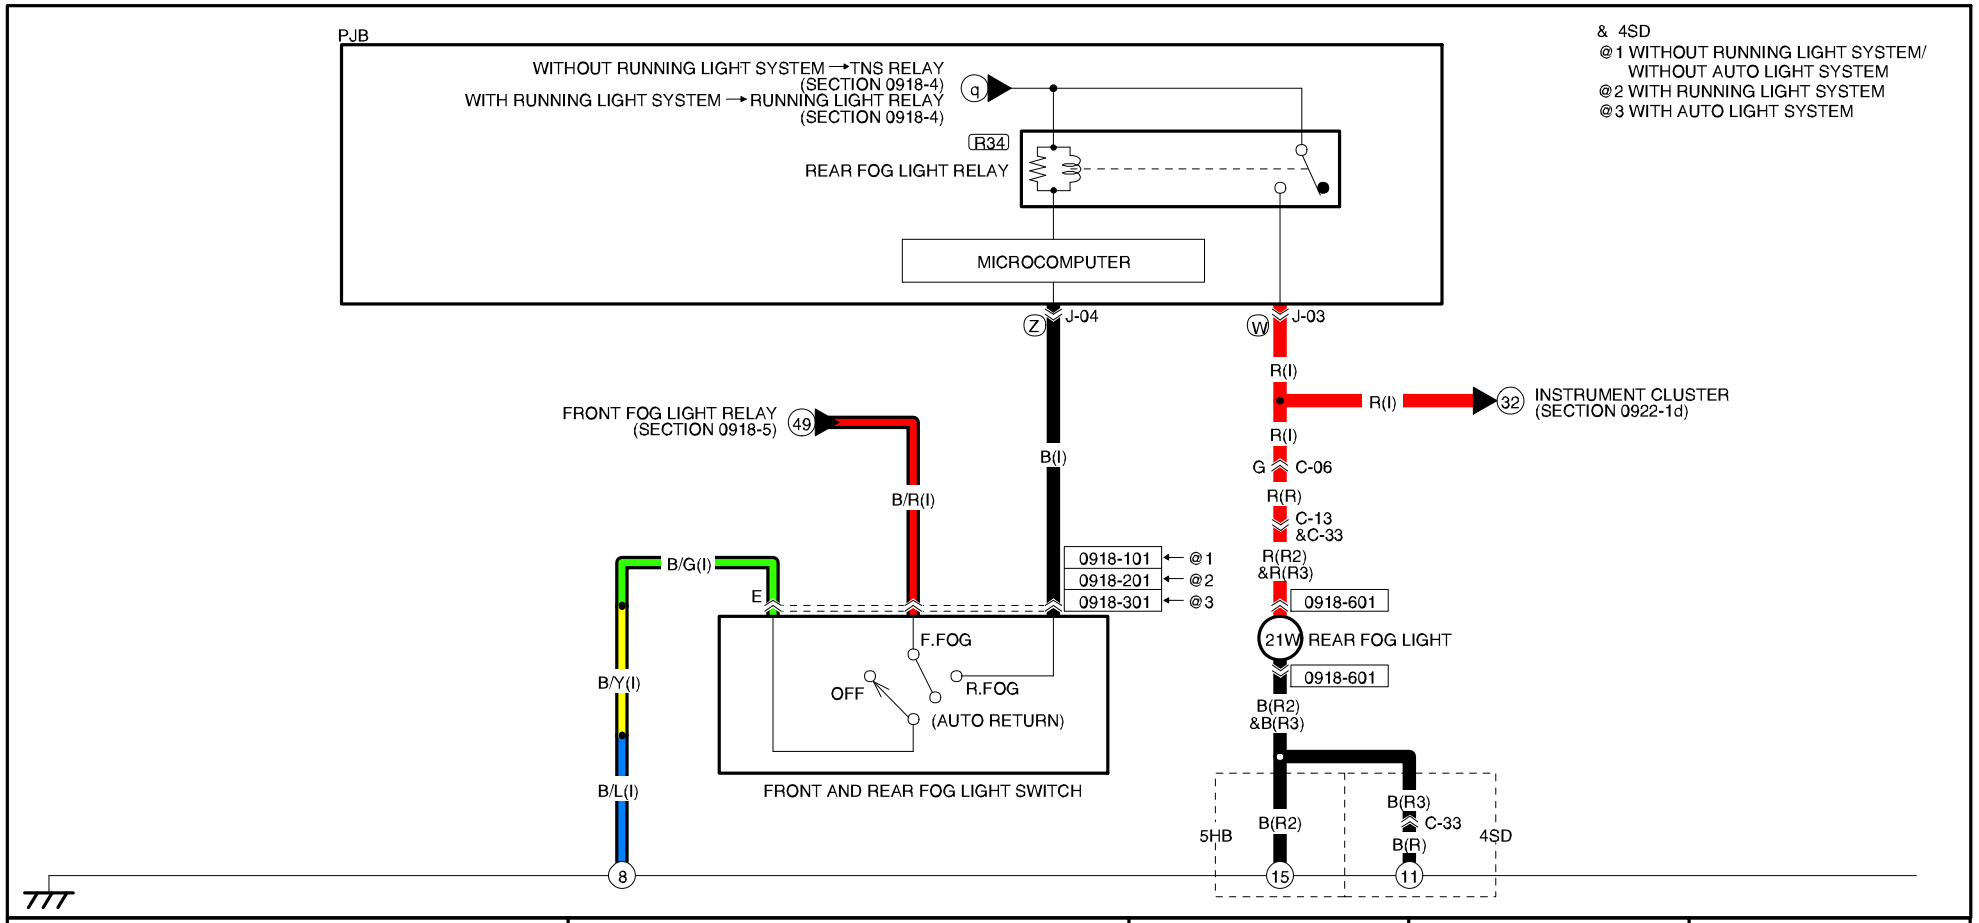


0918-601
REAR FOG LIGHT




0918-101 ← @1
0918-201 ← @2
0918-301 ← @3
FRONT AND REAR FOG LIGHT SWITCH

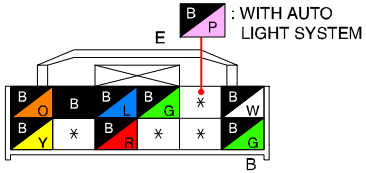

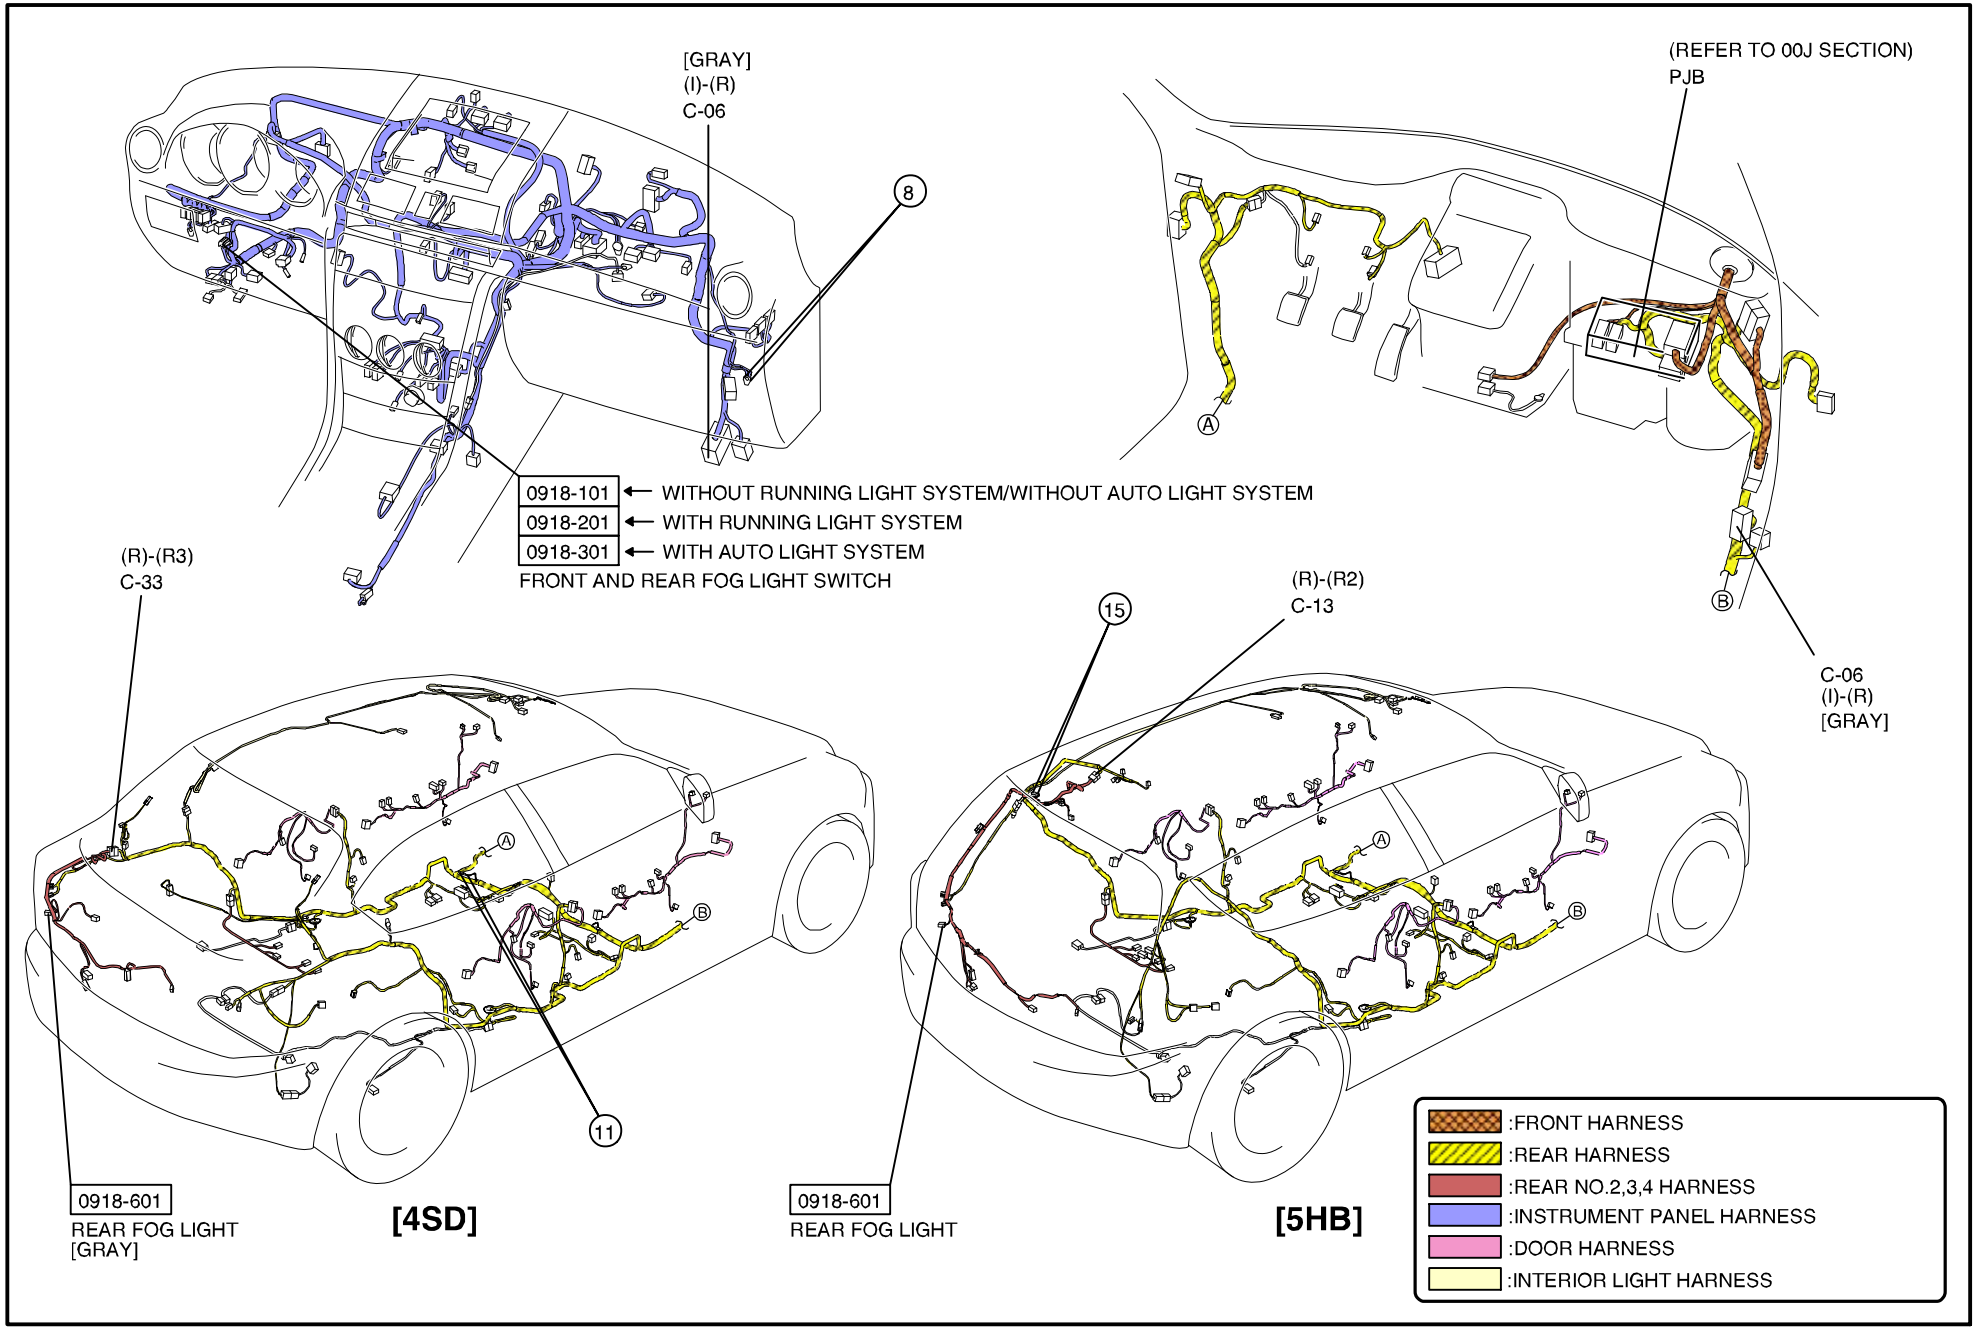

[GRAY]
(I)-(R)
C-06
8
(REFER TO 00J SECTION)
PJB
A
B
0918-101 ← WITHOUT RUNNING LIGHT SYSTEM/WITHOUT AUTO LIGHT SYSTEM
0918-201 ← WITH RUNNING LIGHT SYSTEM
0918-301 ← WITH AUTO LIGHT SYSTEM
FRONT AND REAR FOG LIGHT SWITCH
(R)-(R3)
C-33
(R)-(R2)
C-13
15
C-06
(I)-(R)
[GRAY]
11
0918-601
REAR FOG LIGHT
[GRAY]
[4SD]
0918-601
REAR FOG LIGHT
[5HB]
:FRONT HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

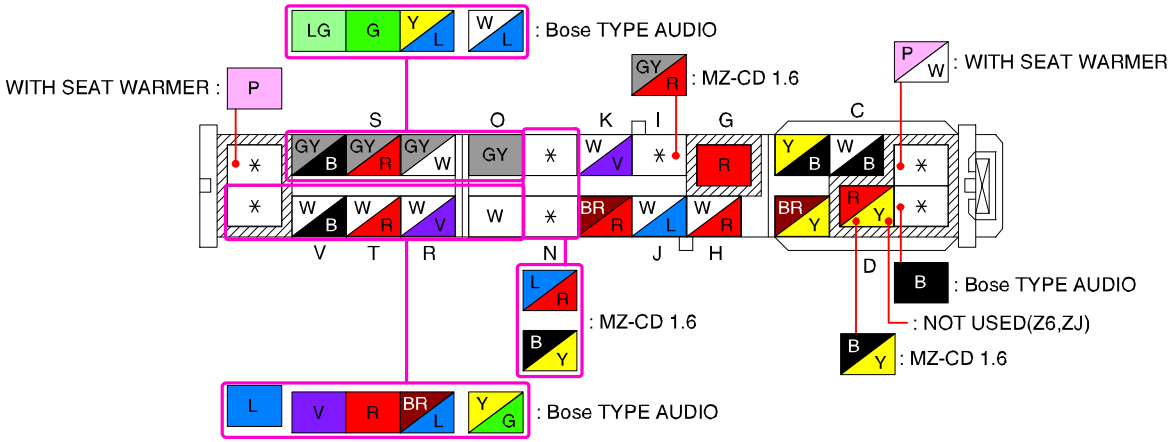


REAR HARNESS

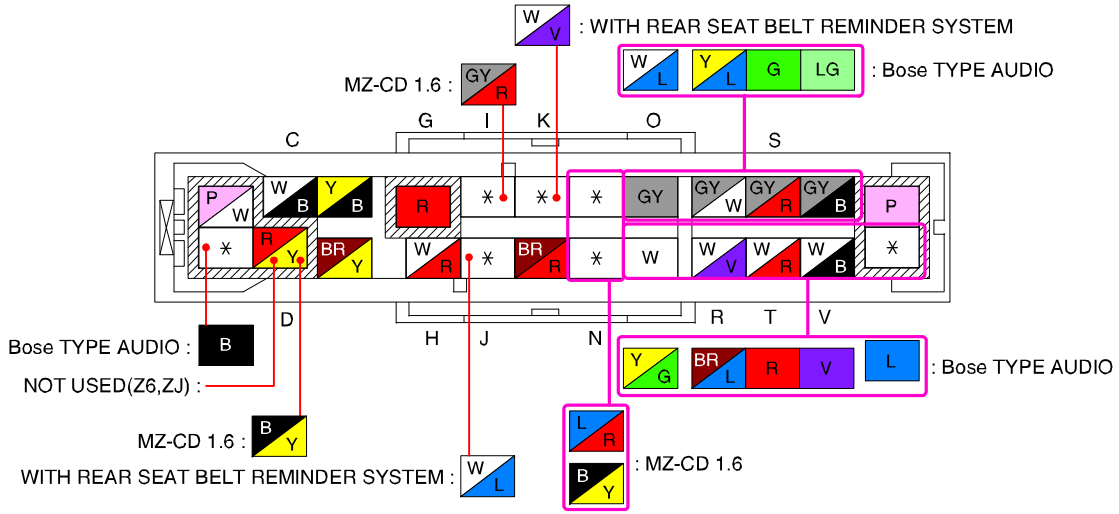


C-13
REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

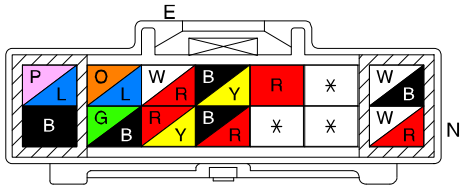


REAR NO.2 HARNESS

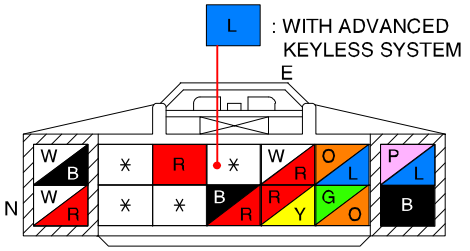


C-33
REAR HARNESS-REAR NO.3 HARNESS


REAR HARNESS

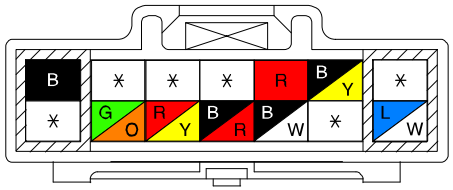


REAR NO.3 HARNESS

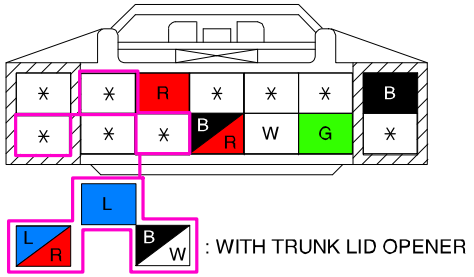


TURN AND HAZARD WARNING LIGHT

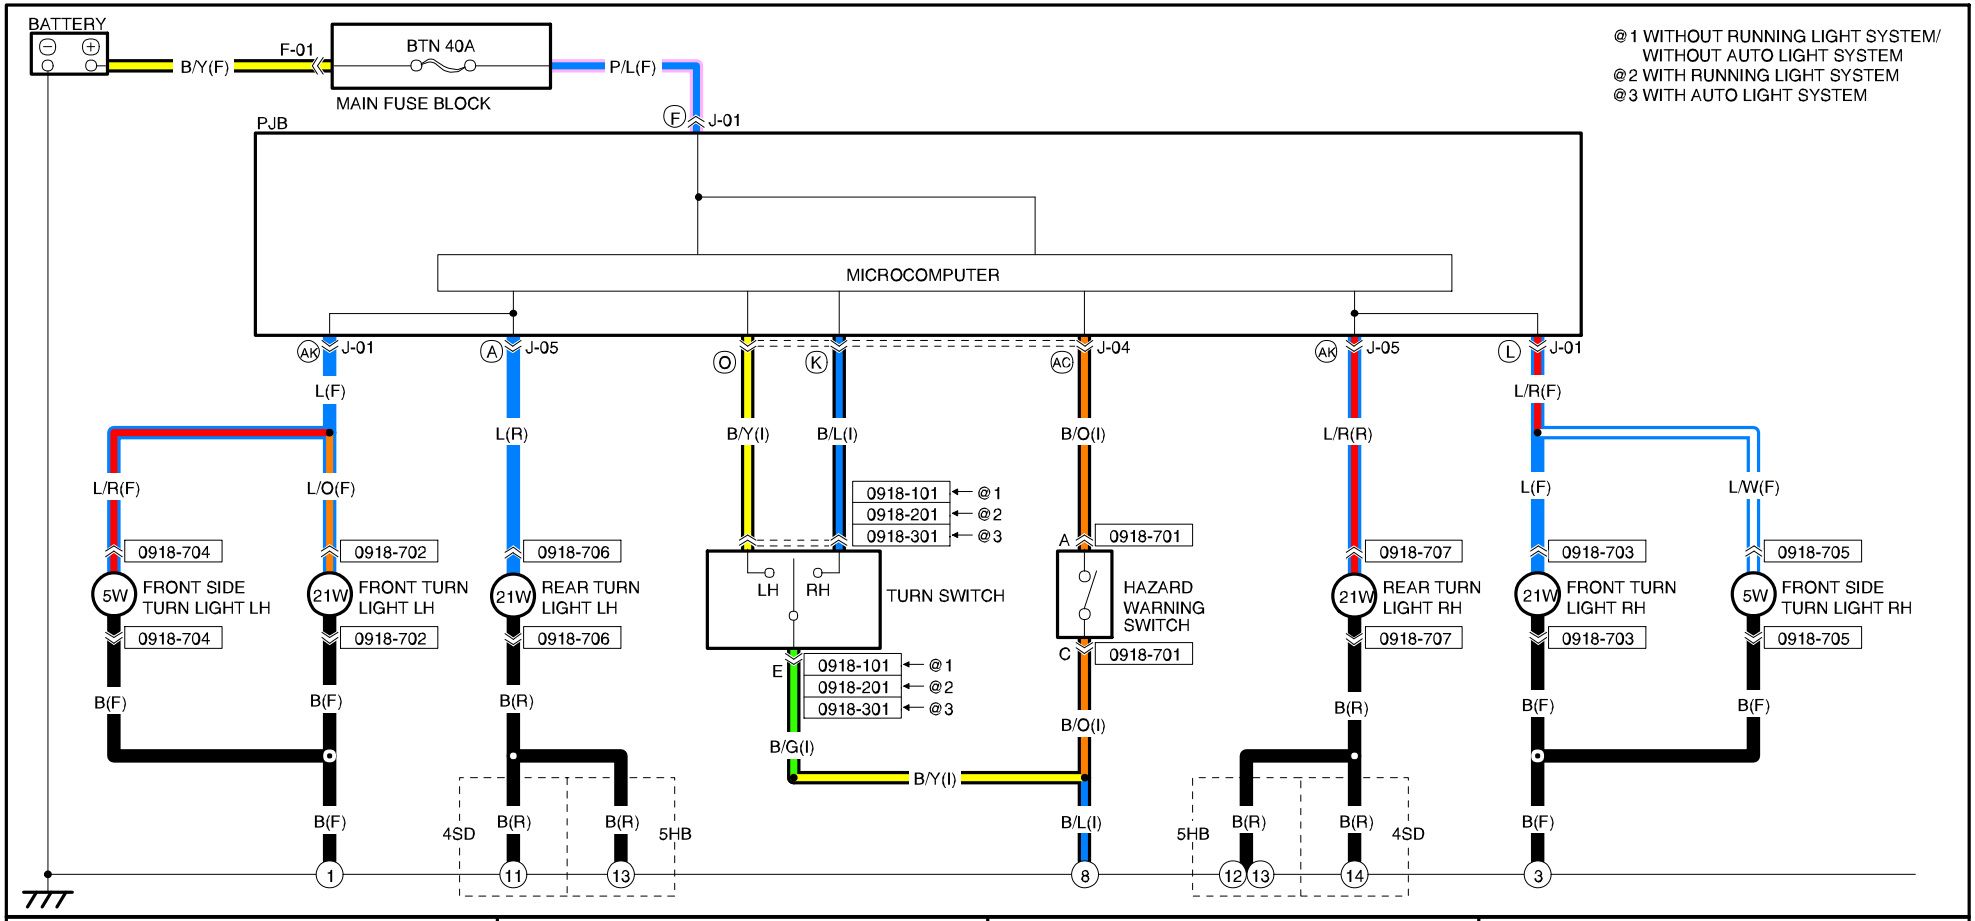


0918-701
HAZARD WARNING SWITCH




0918-702
FRONT TURN LIGHT LH




0918-703
FRONT TURN LIGHT RH




0918-704
FRONT SIDE TURN LIGHT LH




0918-705
FRONT SIDE TURN LIGHT RH




0918-706
REAR TURN LIGHT LH




0918-707
REAR TURN LIGHT RH




0918-101 ← @1
0918-201 ← @2
0918-301 ← @3
TURN SWITCH


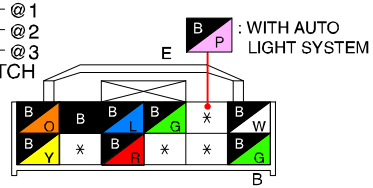


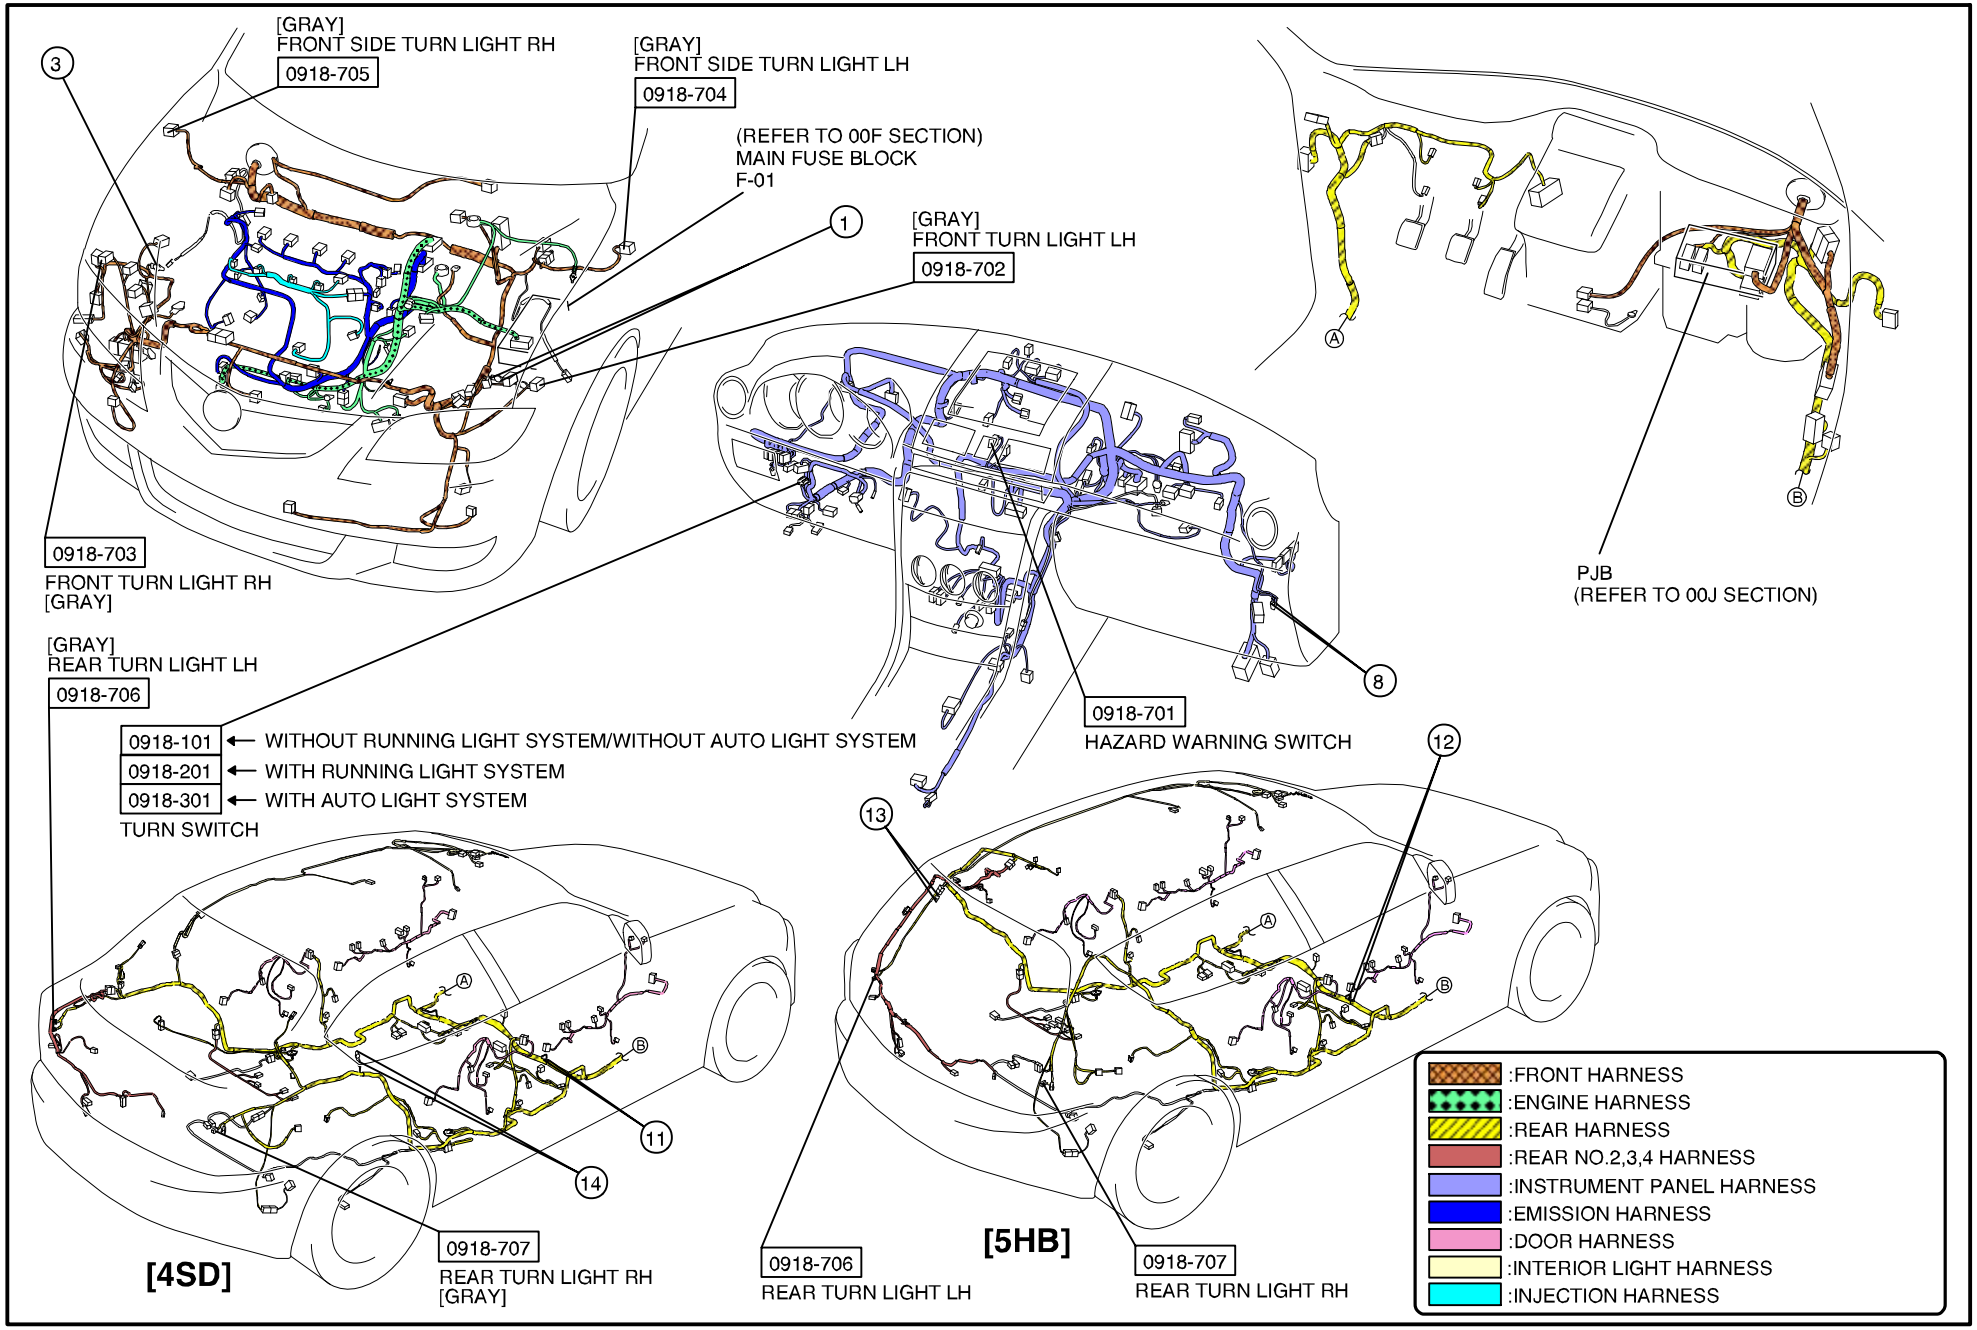
[GRAY]
FRONT SIDE TURN LIGHT RH
0918-705
[GRAY]
FRONT SIDE TURN LIGHT LH
0918-704
(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
[GRAY]
FRONT TURN LIGHT LH
0918-702
0918-703
FRONT TURN LIGHT RH
[GRAY]
[GRAY]
REAR TURN LIGHT LH
0918-706
0918-101 ← WITHOUT RUNNING LIGHT SYSTEM/WITHOUT AUTO LIGHT SYSTEM
0918-201 ← WITH RUNNING LIGHT SYSTEM
0918-301 ← WITH AUTO LIGHT SYSTEM
TURN SWITCH
0918-701
HAZARD WARNING SWITCH
PJB
(REFER TO 00J SECTION)
[4SD]
0918-707
REAR TURN LIGHT RH
[GRAY]
[5HB]
0918-706
REAR TURN LIGHT LH
0918-707
REAR TURN LIGHT RH
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS



BACK-UP LIGHT

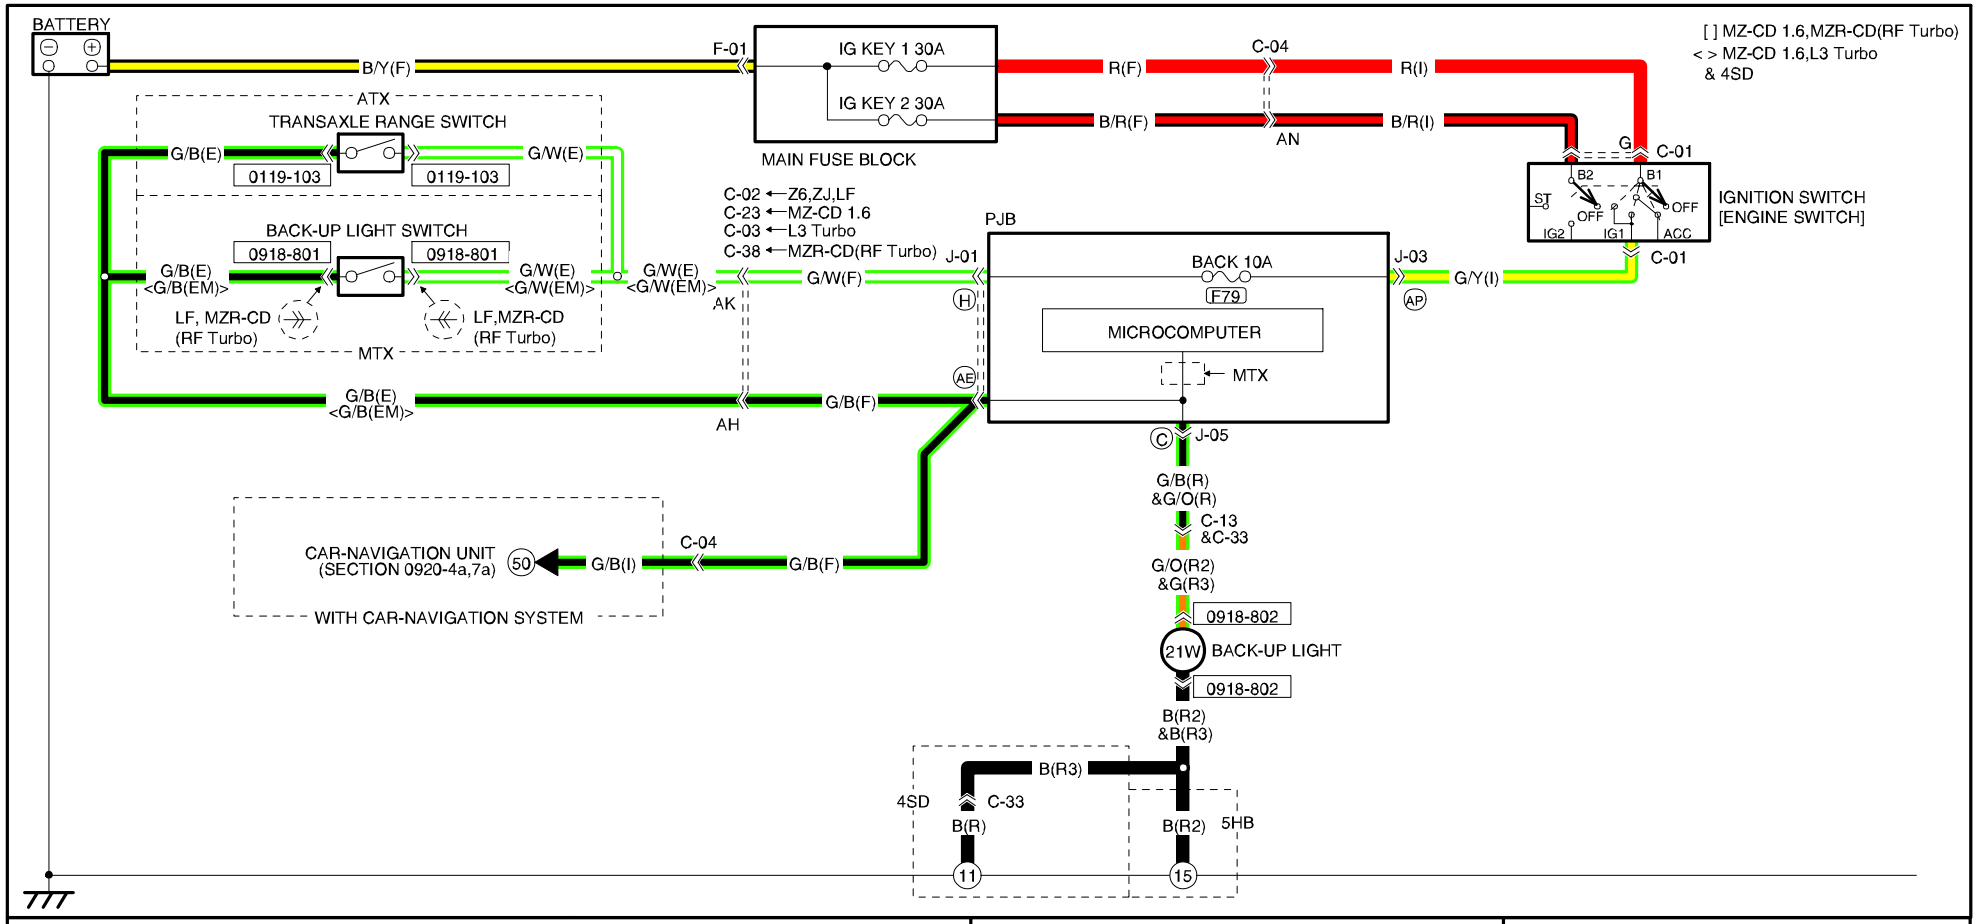


0918-801
BACK-UP LIGHT SWITCH


ENGINE HARNESS	ENGINE HARNESS	EMISSION HARNESS	EMISSION HARNESS
			
(Z6,ZJ)	(LF,MZR-CD(RF Turbo))	(MZ-CD 1.6)	(L3 Turbo)

0918-802
BACK-UP LIGHT


REAR NO.3 HARNESS	REAR NO.2 HARNESS
	
(4SD)	(5HB)

0119-103
TRANSAXLE RANGE SWITCH

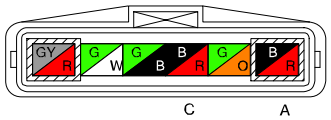

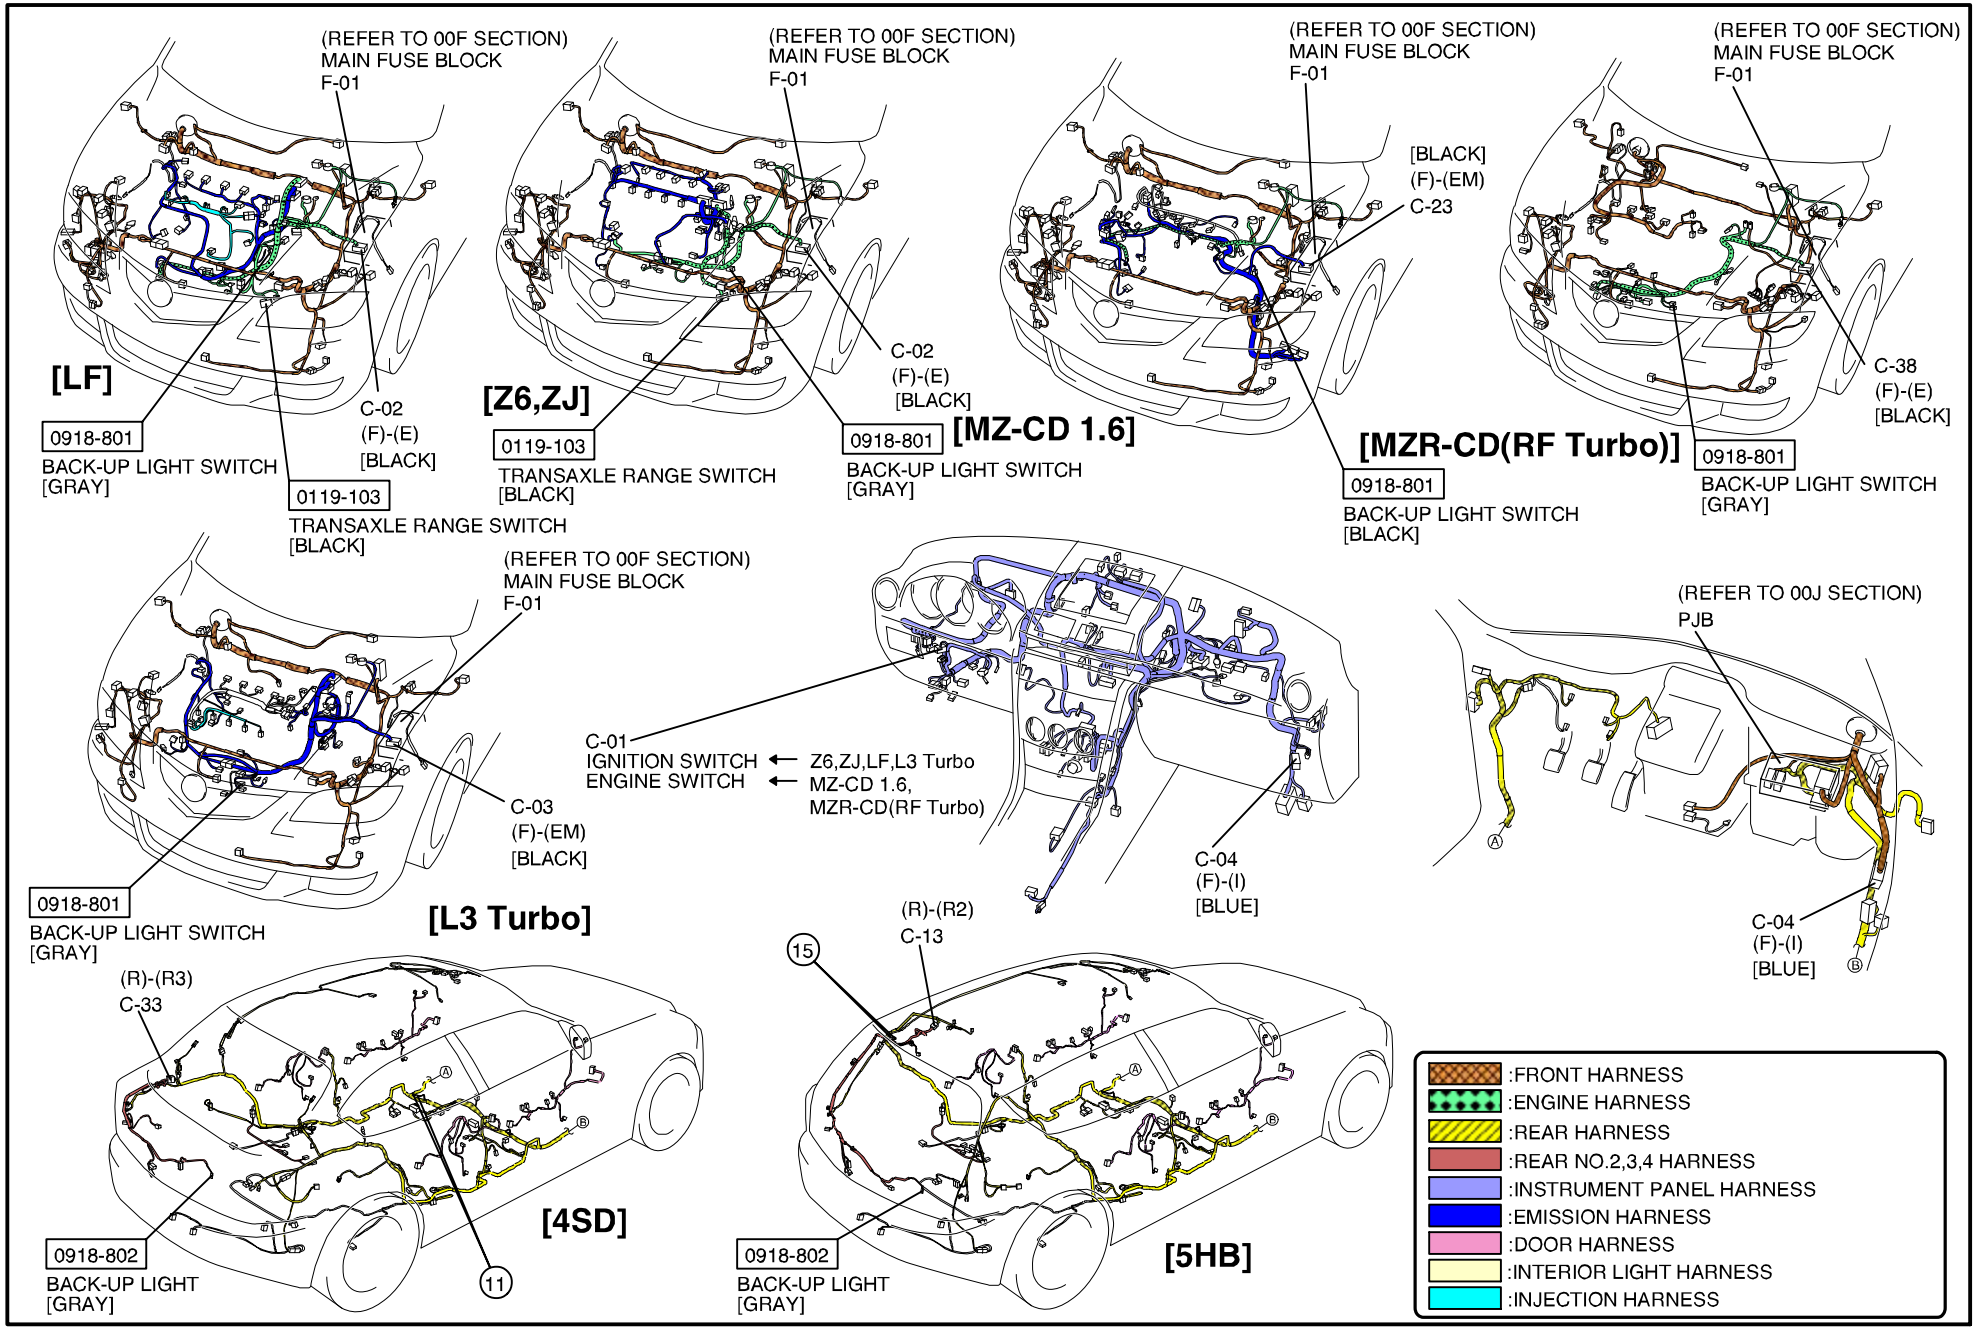

(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
[LF]
0918-801
BACK-UP LIGHT SWITCH
[GRAY]
C-02
(F)-(E)
[BLACK]
0119-103
TRANSAXLE RANGE SWITCH
[BLACK]
[Z6,ZJ]
0119-103
TRANSAXLE RANGE SWITCH
[BLACK]
C-02
(F)-(E)
[BLACK]
0918-801
BACK-UP LIGHT SWITCH
[GRAY]
[MZ-CD 1.6]
[BLACK]
(F)-(EM)
C-23
0918-801
BACK-UP LIGHT SWITCH
[BLACK]
[MZR-CD(RF Turbo)]
C-38
(F)-(E)
[BLACK]
0918-801
BACK-UP LIGHT SWITCH
[GRAY]
C-03
(F)-(EM)
[BLACK]
0918-801
BACK-UP LIGHT SWITCH
[GRAY]
[L3 Turbo]
C-01
IGNITION SWITCH
ENGINE SWITCH
Z6,ZJ,LF,L3 Turbo
MZ-CD 1.6,
MZR-CD(RF Turbo)
C-04
(F)-(I)
[BLUE]
(REFER TO 00J SECTION)
PJB
C-04
(F)-(I)
[BLUE]
(R)-(R3)
C-33
0918-802
BACK-UP LIGHT
[GRAY]
[4SD]
(R)-(R2)
C-13
15
0918-802
BACK-UP LIGHT
[GRAY]
[5HB]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

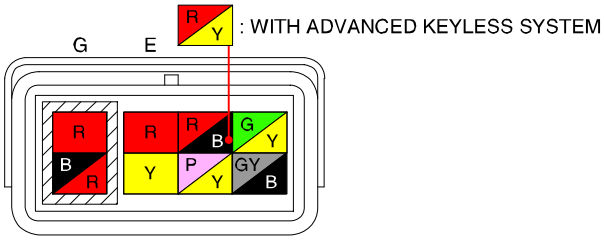


C-33
REAR HARNESS-REAR NO.3 HARNESS

REAR HARNESS

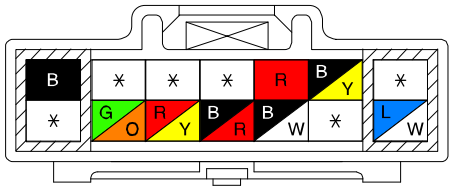


REAR NO.3 HARNESS

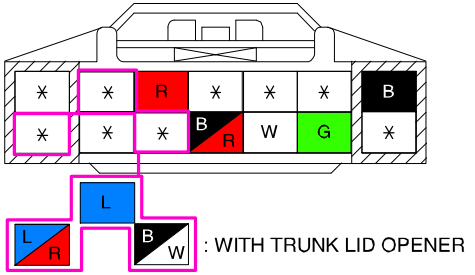


C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

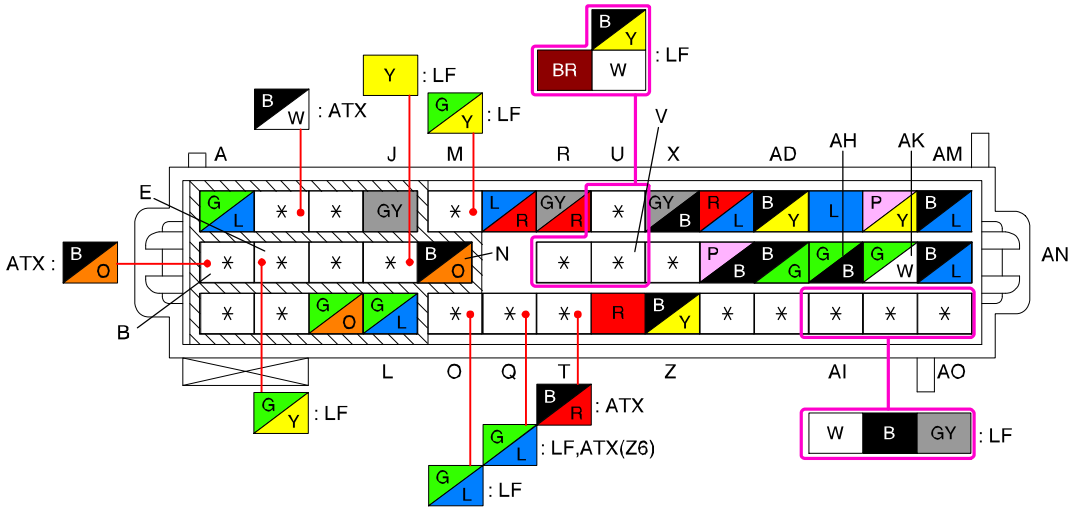


ENGINE HARNESS

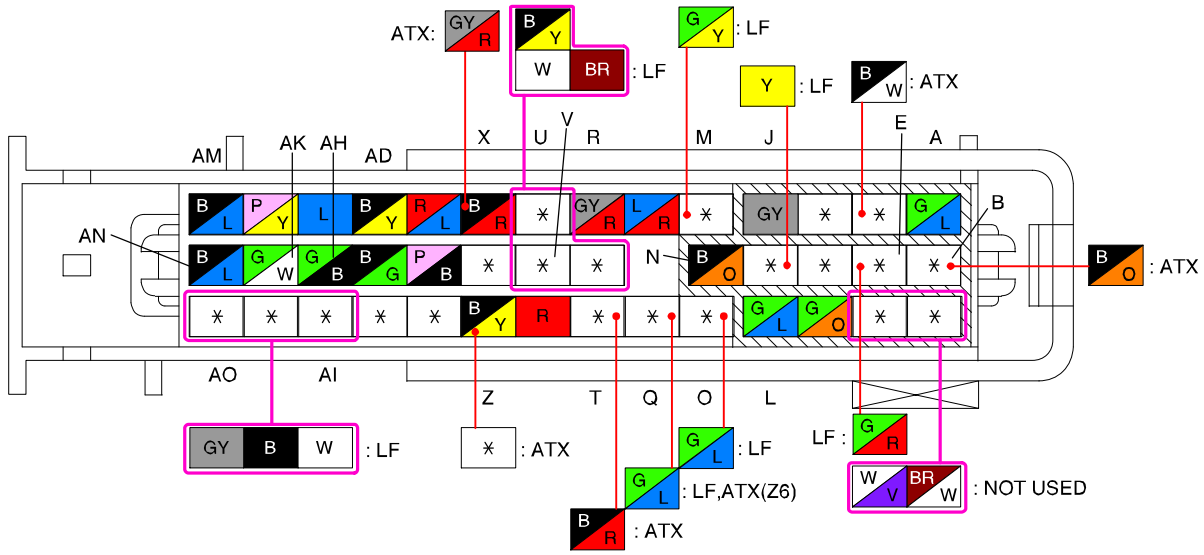


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

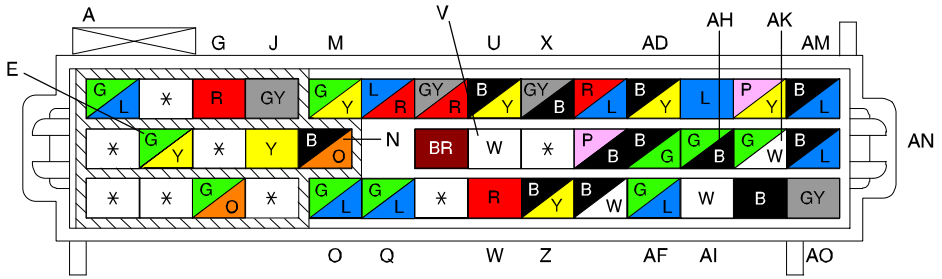


EMISSION HARNESS

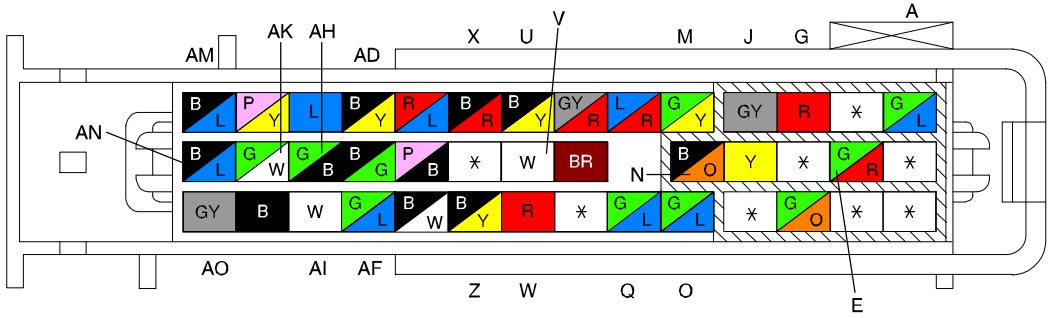


C-13
REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

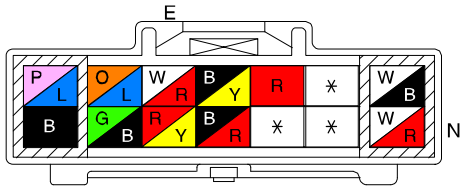


REAR NO.2 HARNESS

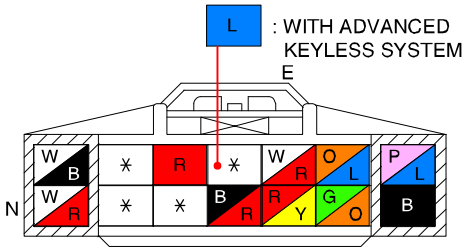


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

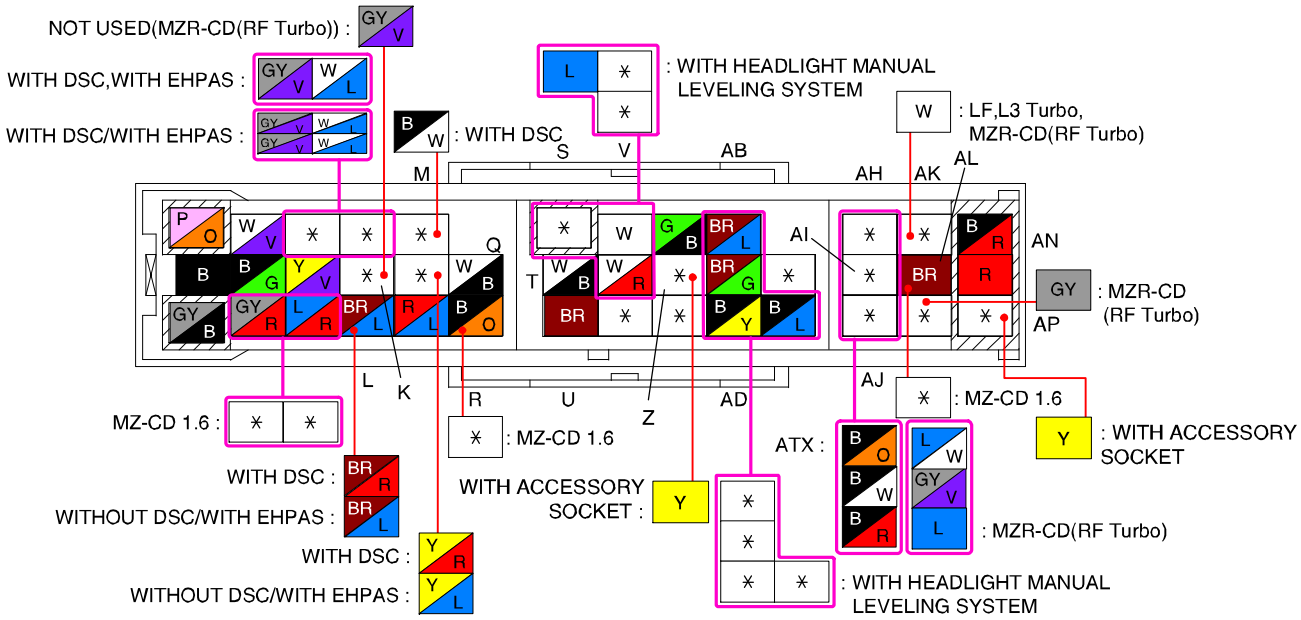


INSTRUMENT PANEL HARNESS

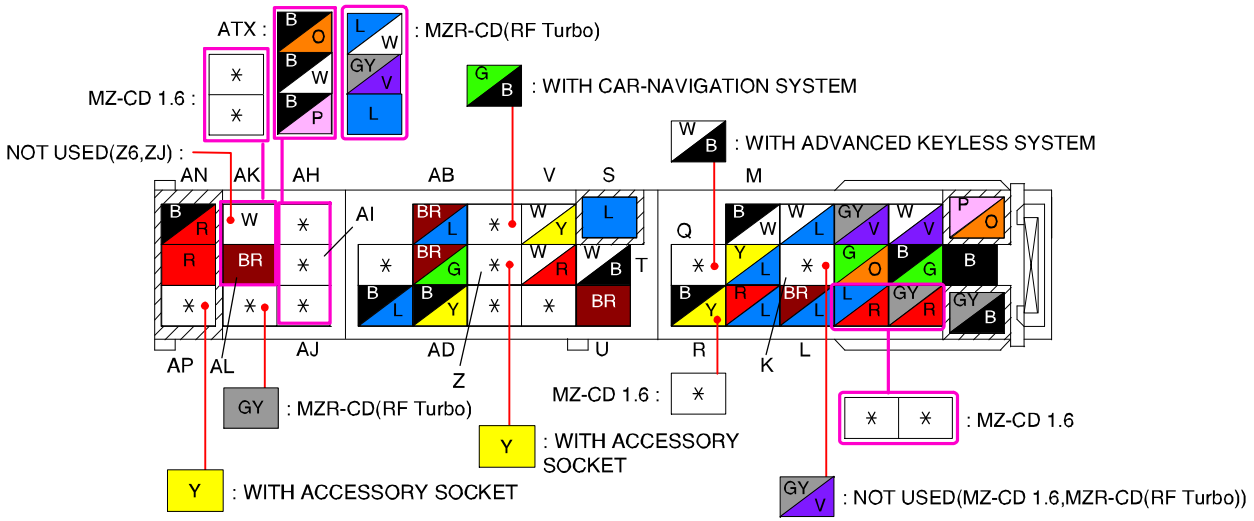


C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

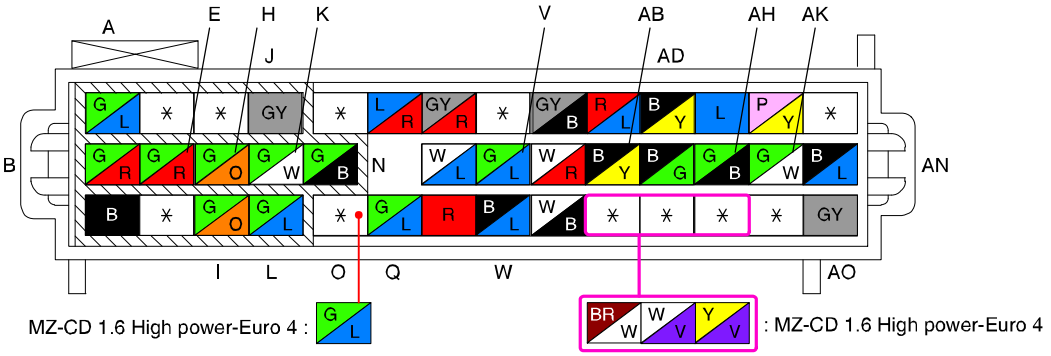


EMISSION HARNESS

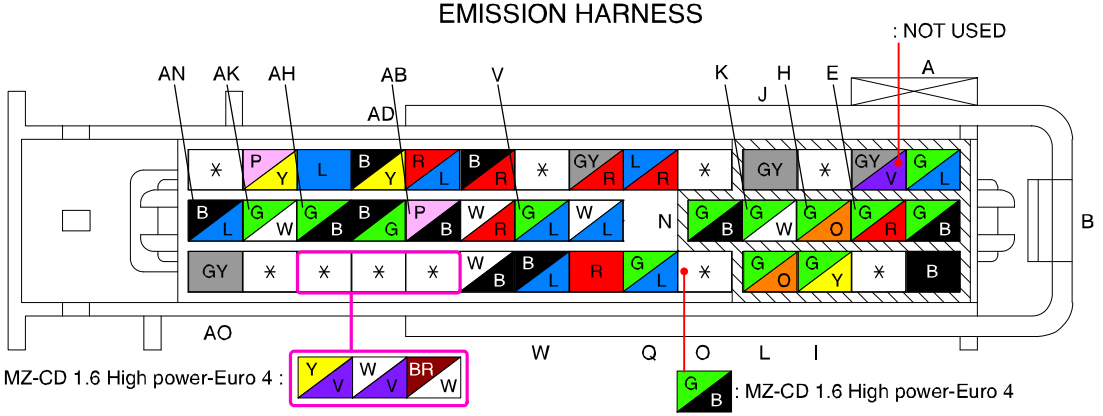


C-38
FRONT HARNESS-ENGINE HARNESS


FRONT HARNESS

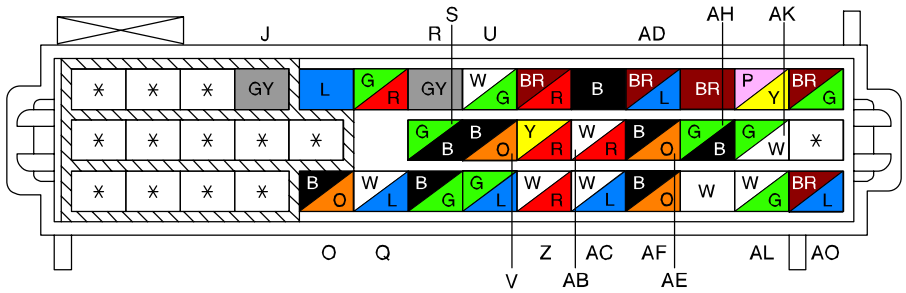

ENGINE HARNESS

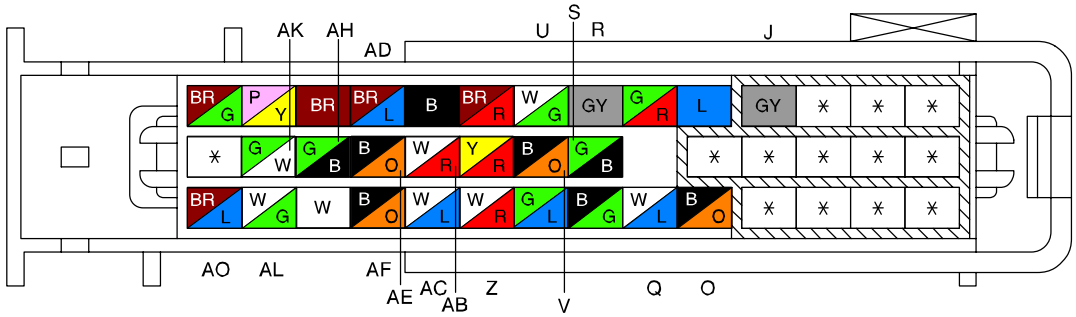


BRAKE LIGHT/HIGH-MOUNT BRAKE LIGHT

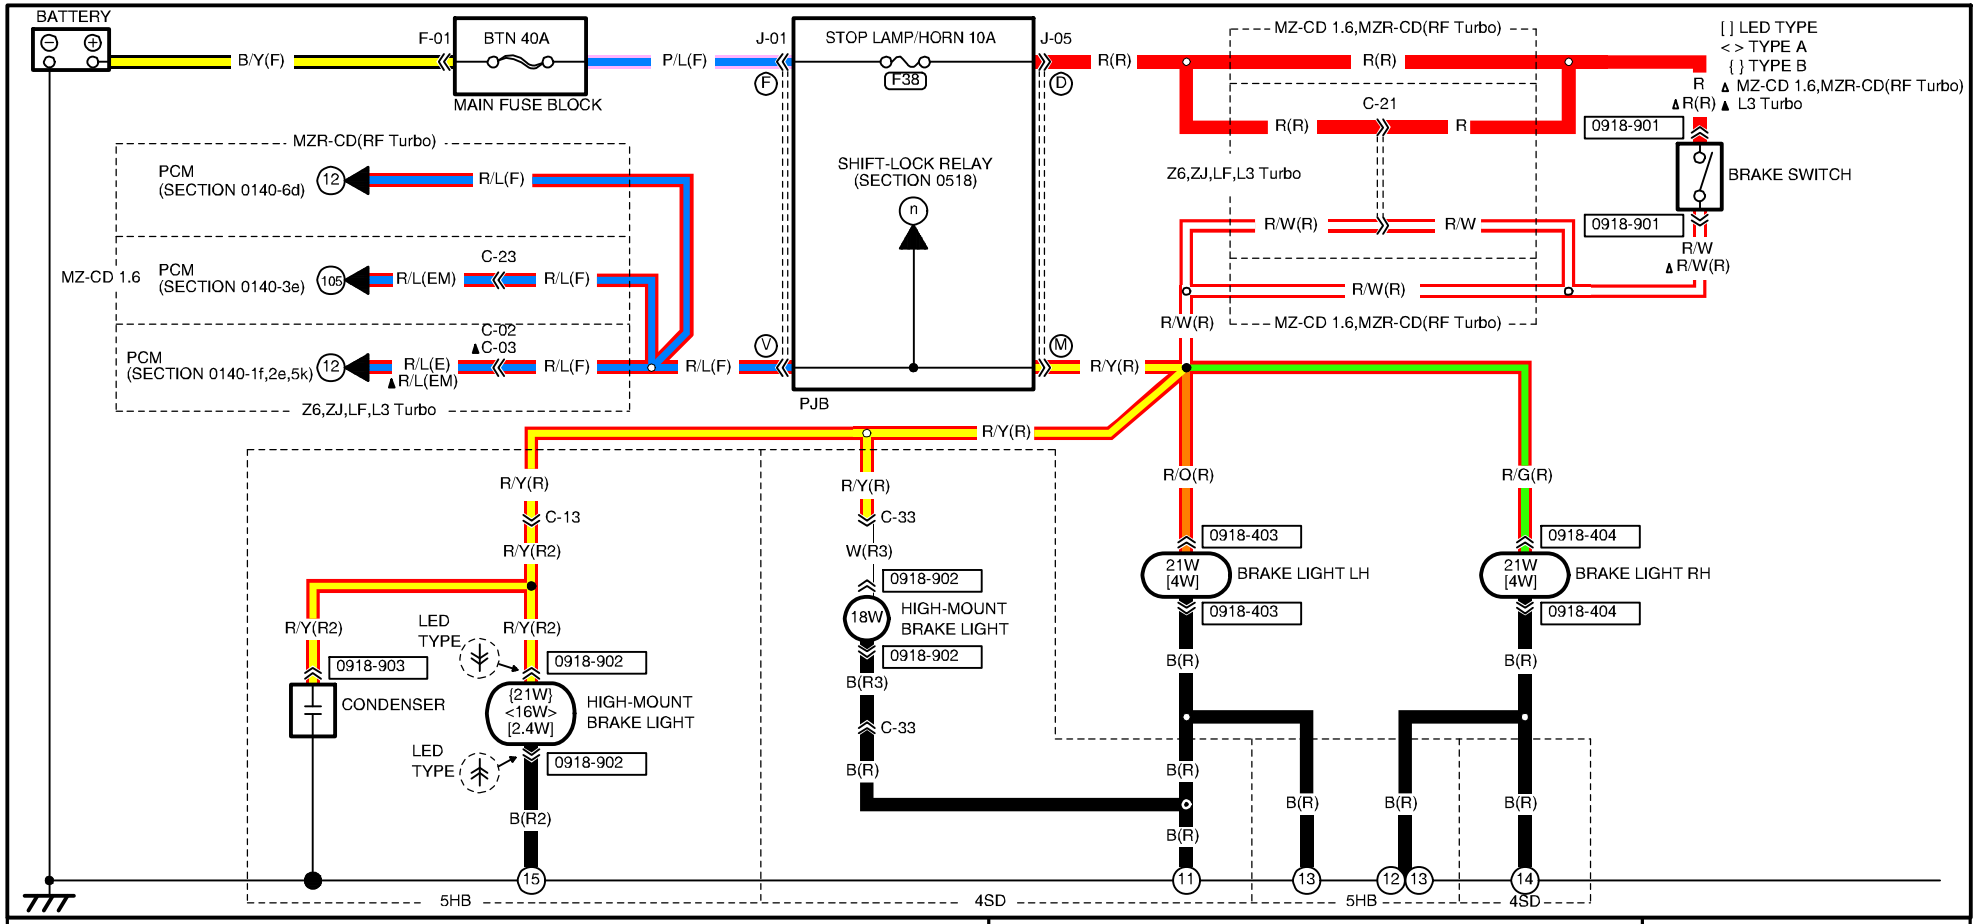

0918-901 BRAKE SWITCH

SHORT CORD

: NOT USED(Z6,ZJ)



(EXCEPT MZ-CD 1.6)

REAR HARNESS



(MZ-CD 1.6)


0918-902 HIGH-MOUNT BRAKE LIGHT

REAR NO.3 HARNESS



(4SD)

REAR NO.2 HARNESS



(LED TYPE)

(5HB)




(BULB TYPE)


0918-903 CONDENSER




0918-403 BRAKE LIGHT LH




0918-404 BRAKE LIGHT RH



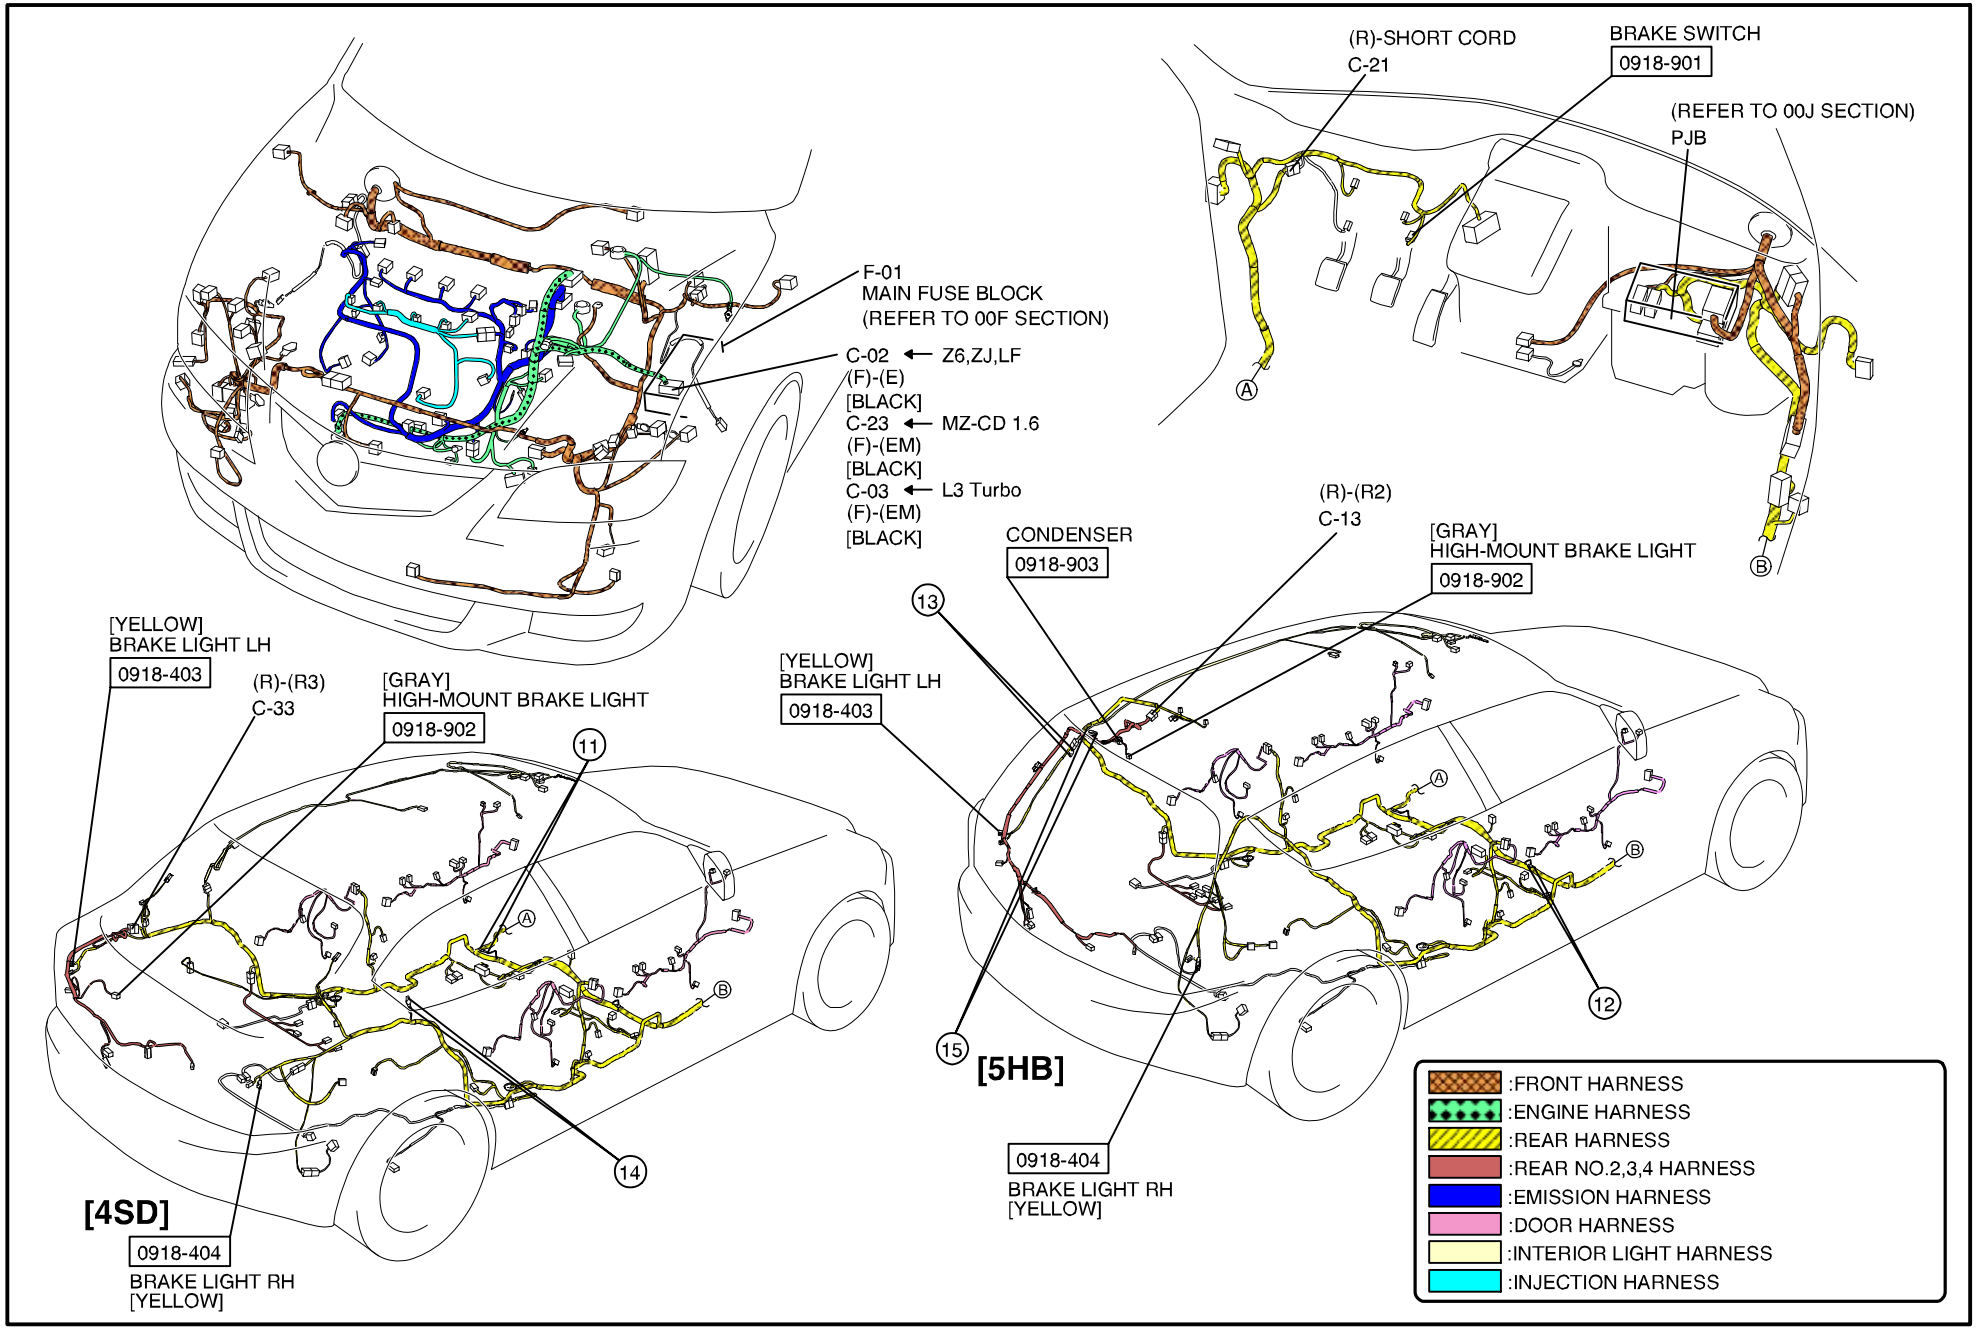

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-02 ← Z6,ZJ,LF
(F)-(E)
[BLACK]
C-23 ← MZ-CD 1.6
(F)-(EM)
[BLACK]
C-03 ← L3 Turbo
(F)-(EM)
[BLACK]
(R)-SHORT CORD
C-21
BRAKE SWITCH
0918-901
(REFER TO 00J SECTION)
PJB
A
B
(R)-(R2)
C-13
CONDENSER
0918-903
[GRAY]
HIGH-MOUNT BRAKE LIGHT
0918-902
13
[YELLOW]
BRAKE LIGHT LH
0918-403
12
15
[5HB]
0918-404
BRAKE LIGHT RH
[YELLOW]
[YELLOW]
BRAKE LIGHT LH
0918-403
(R)-(R3)
C-33
[GRAY]
HIGH-MOUNT BRAKE LIGHT
0918-902
11
14
[4SD]
0918-404
BRAKE LIGHT RH
[YELLOW]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-13
REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

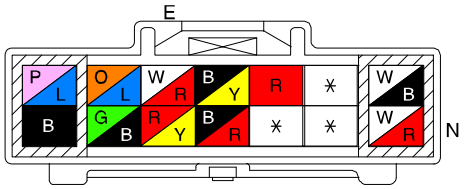


REAR NO.2 HARNESS

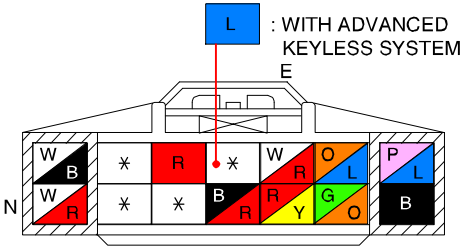


C-21
REAR HARNESS-SHORT CORD

REAR HARNESS

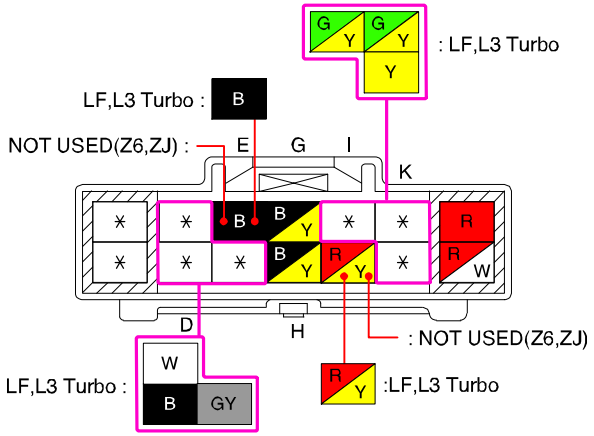


SHORT CORD

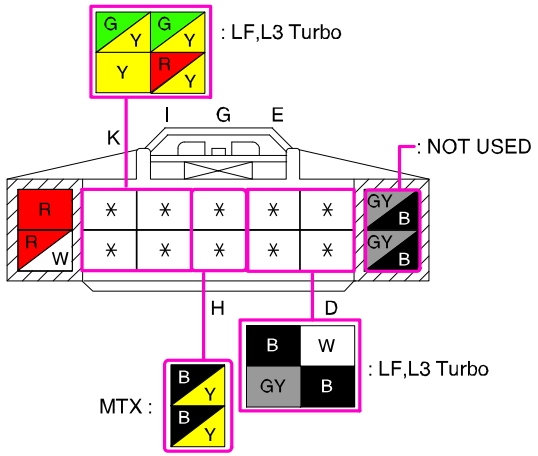


C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

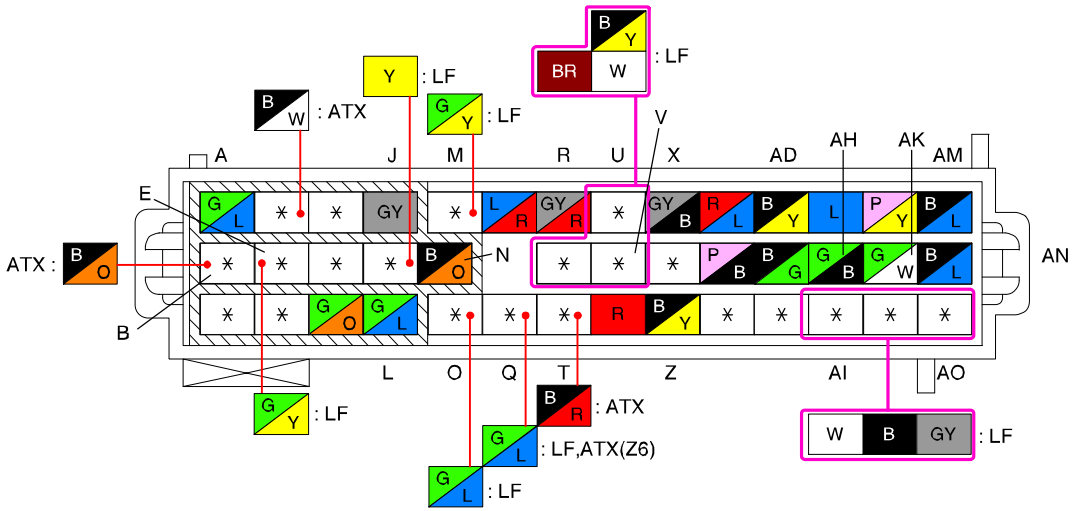


ENGINE HARNESS

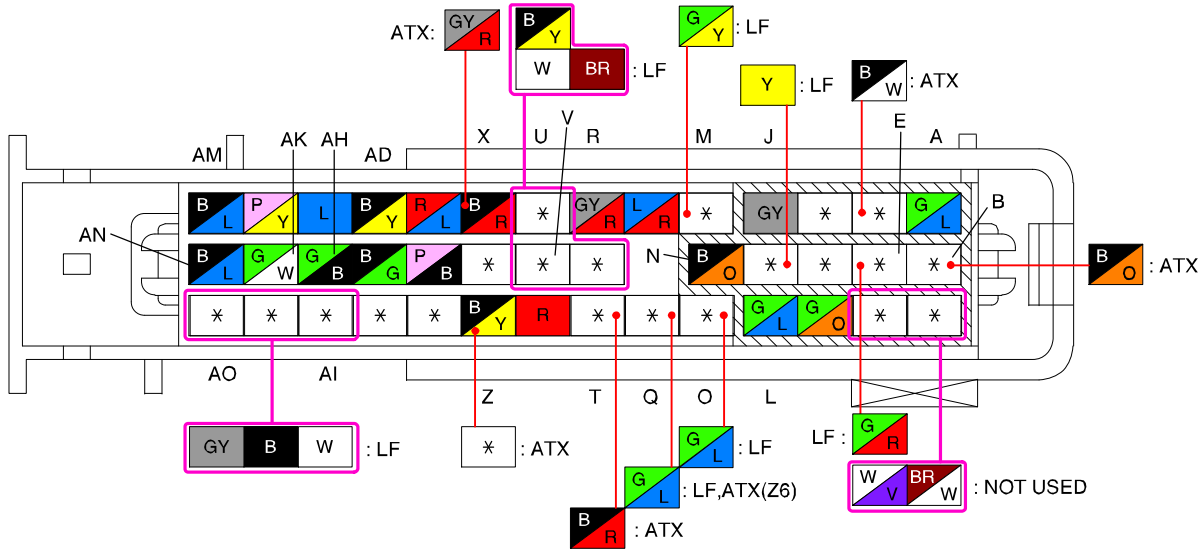


C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

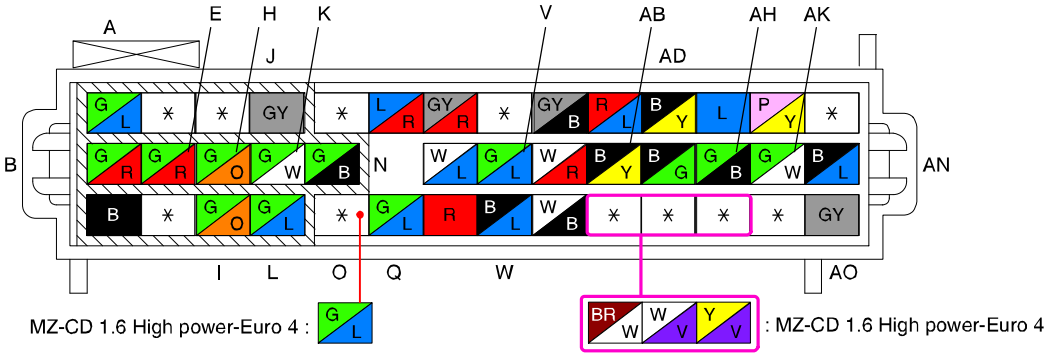


EMISSION HARNESS

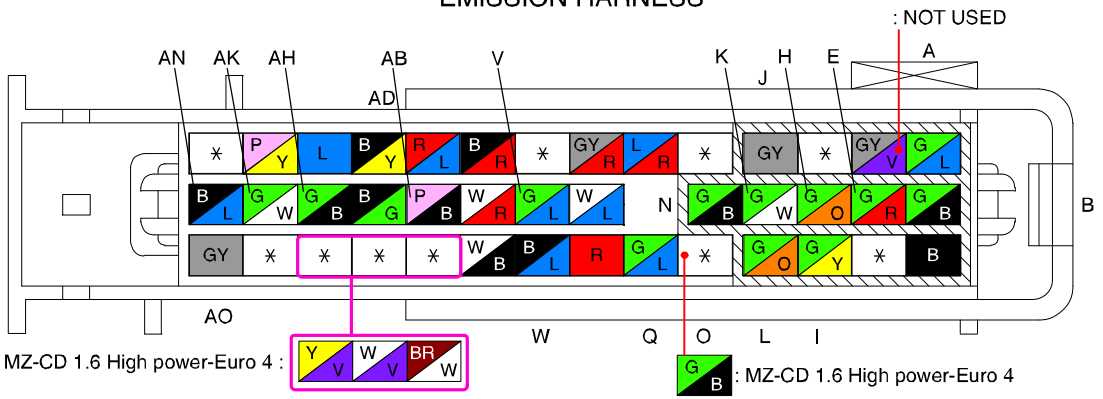


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

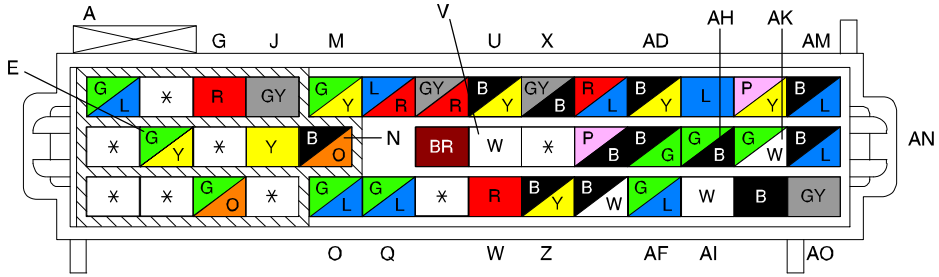


EMISSION HARNESS

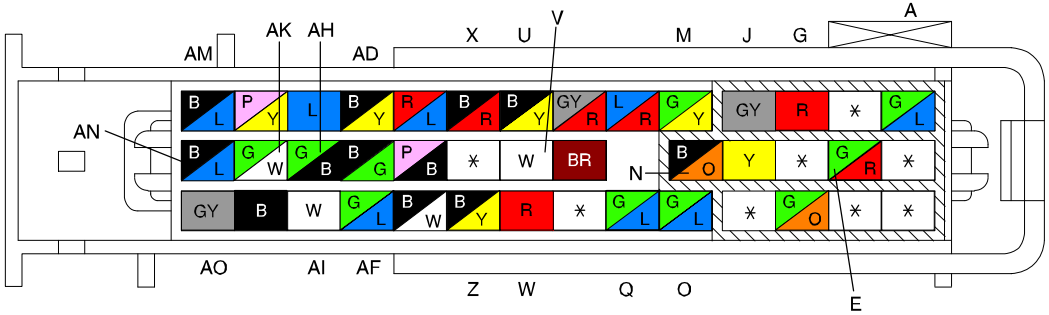


C-33
REAR HARNESS-REAR NO.3 HARNESS


REAR HARNESS

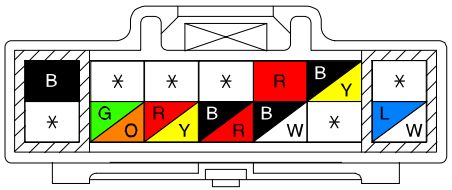



REAR NO.3 HARNESS

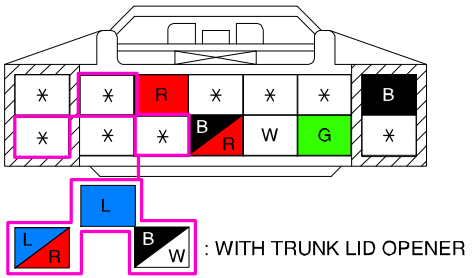

INTERIOR LIGHT/MAP LIGHT

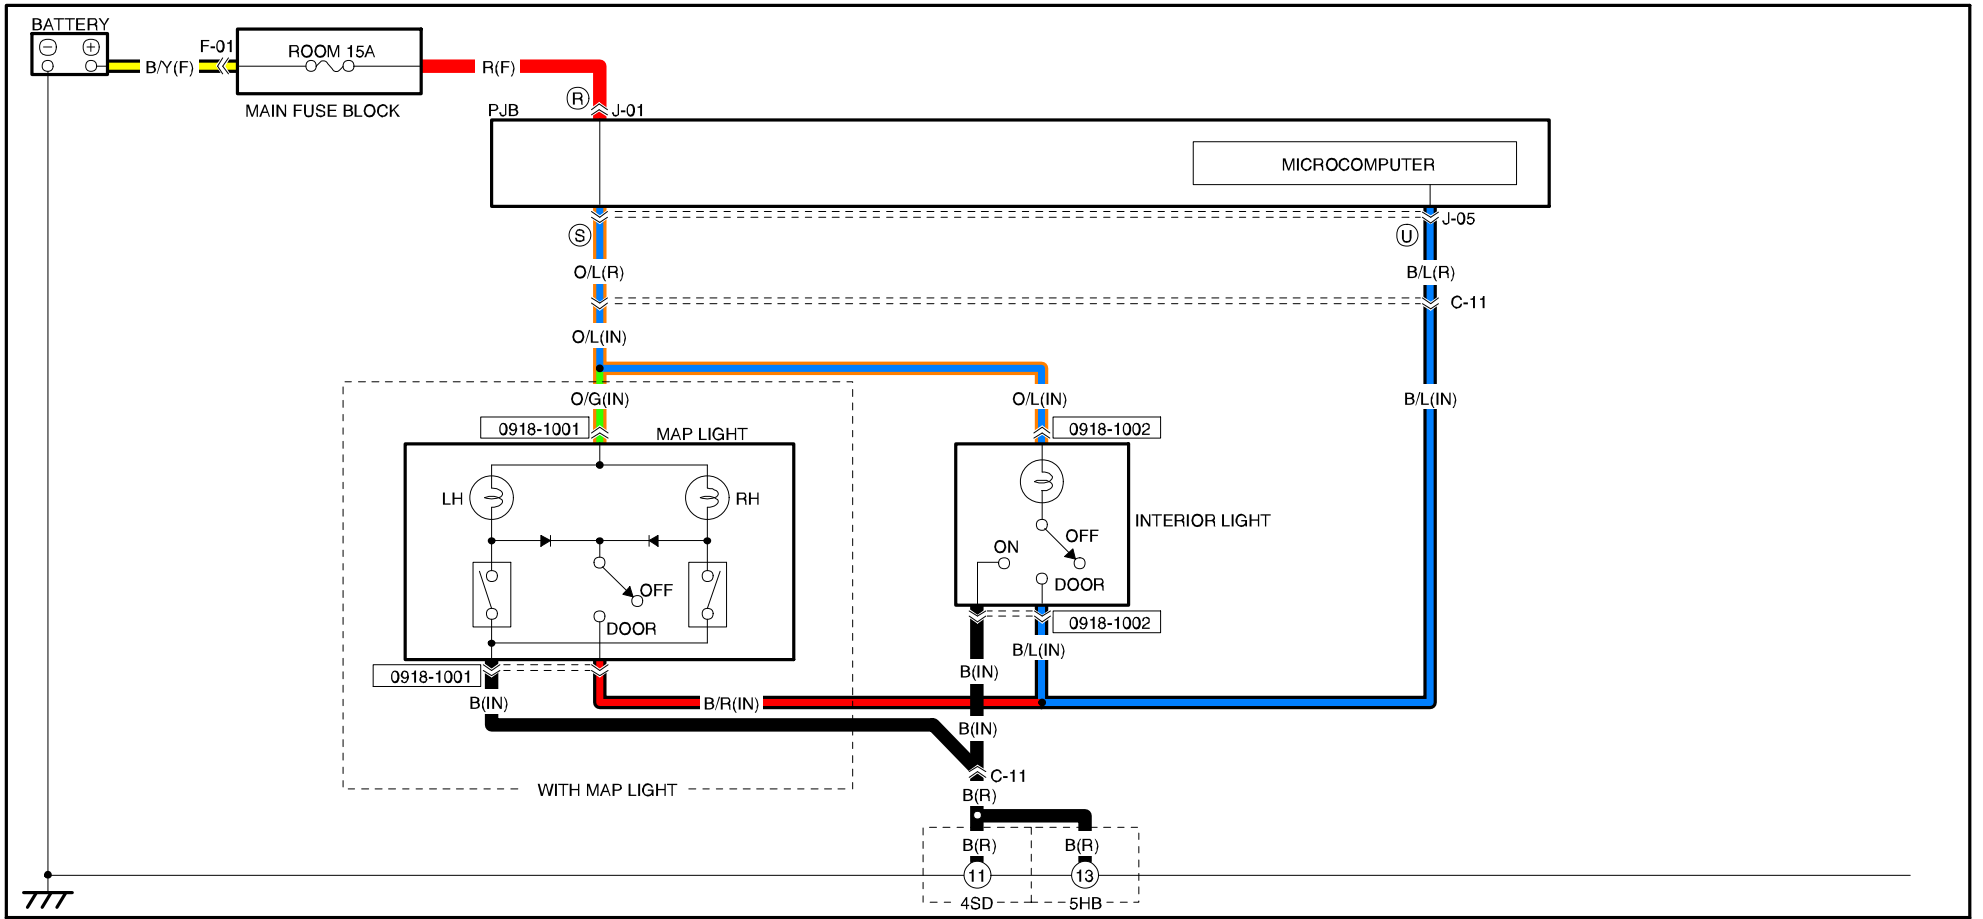


0918-1001 MAP LIGHT	0918-1002 INTERIOR LIGHT		
			

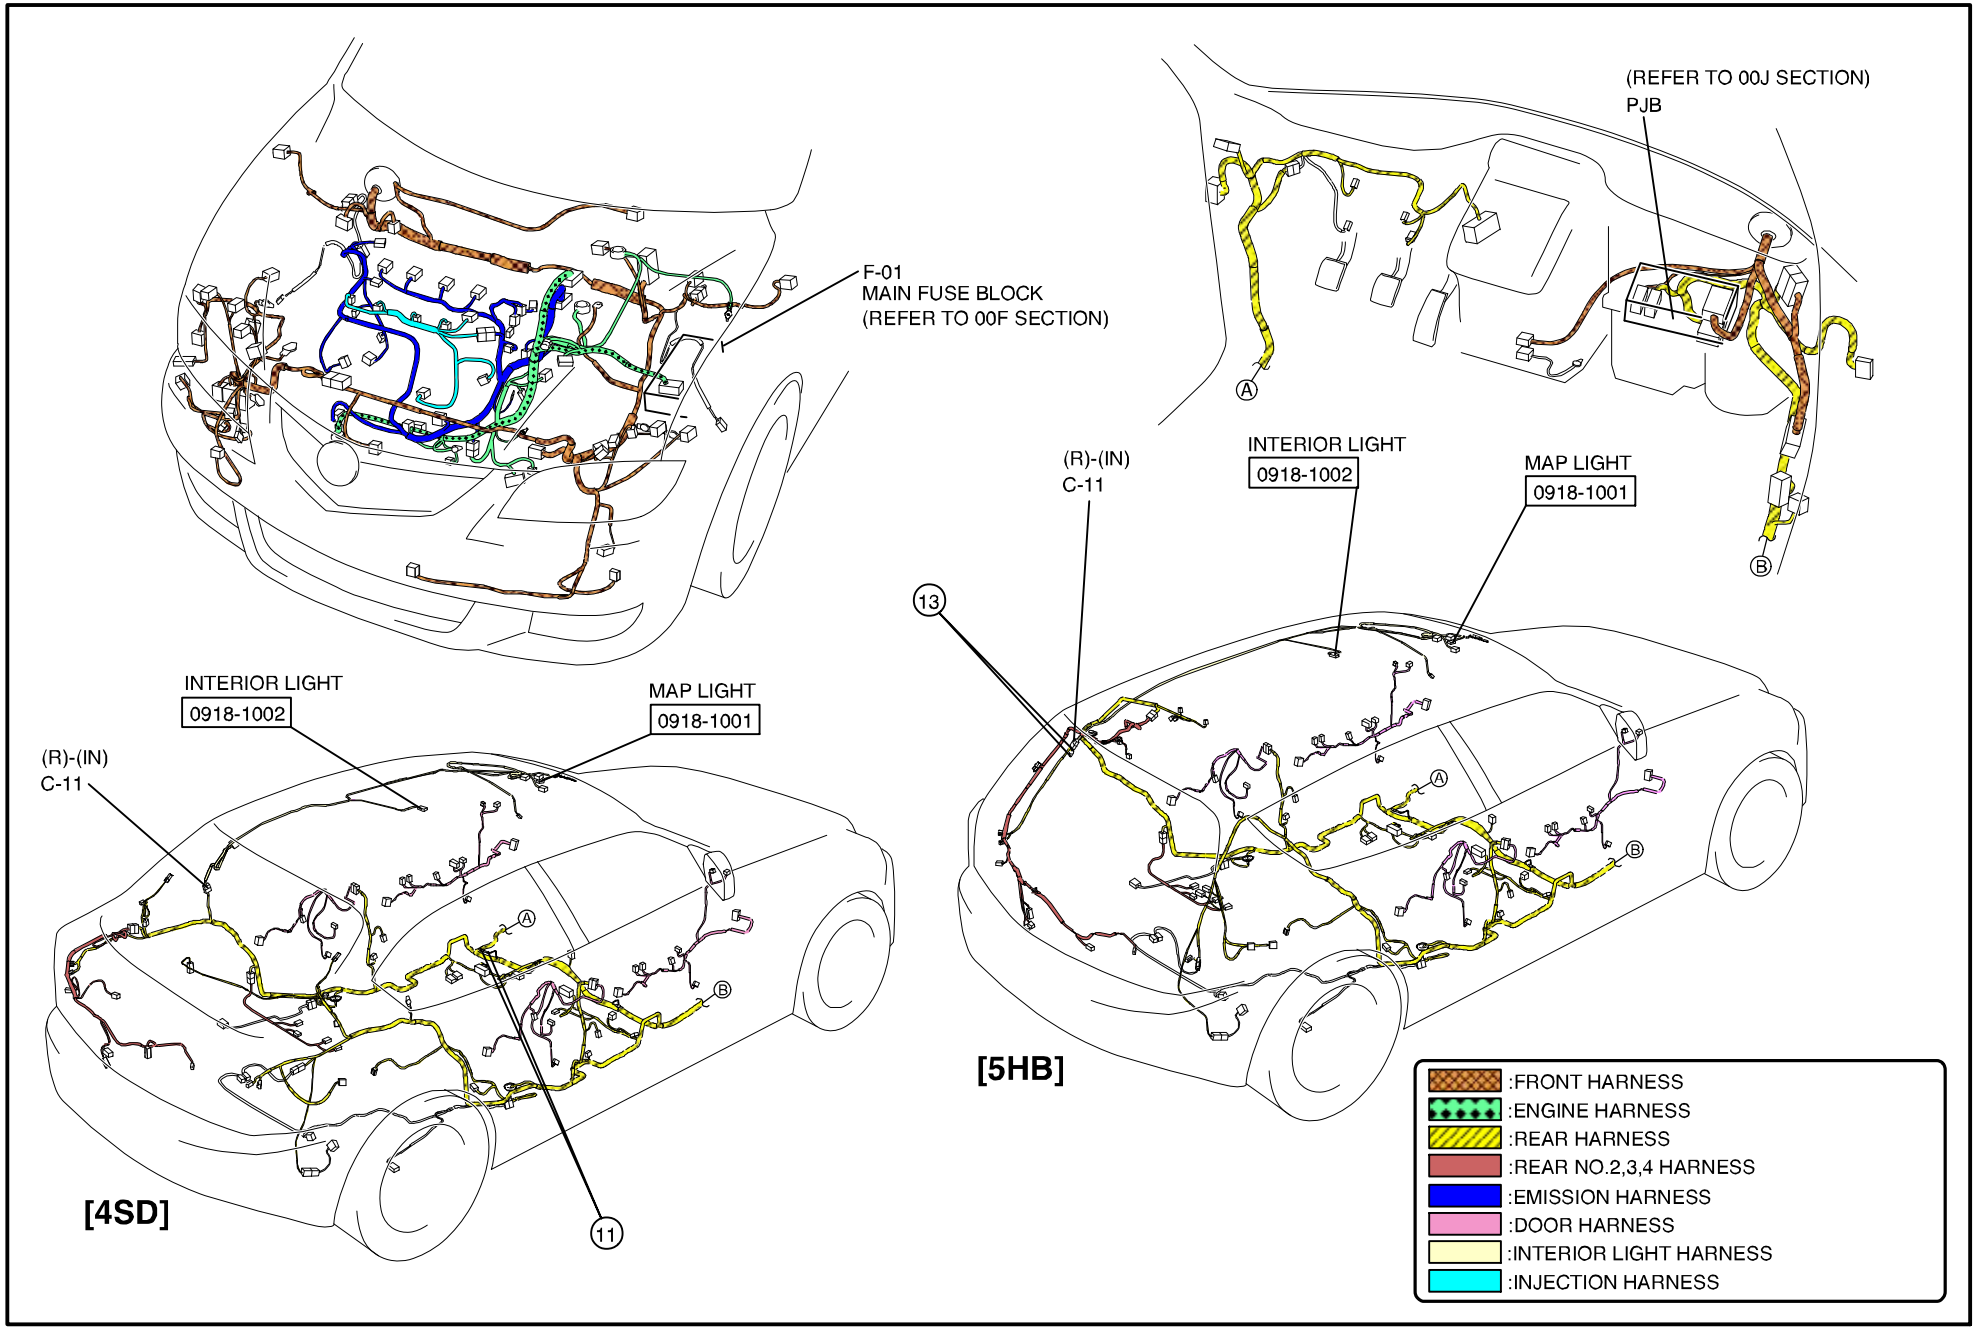

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
(REFER TO 00J SECTION)
PJB
A
B
(R)-(IN)
C-11
INTERIOR LIGHT
0918-1002
MAP LIGHT
0918-1001
13
[5HB]
INTERIOR LIGHT
0918-1002
MAP LIGHT
0918-1001
(R)-(IN)
C-11
11
[4SD]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-11
REAR HARNESS-INTERIOR LIGHT HARNESS


REAR HARNESS



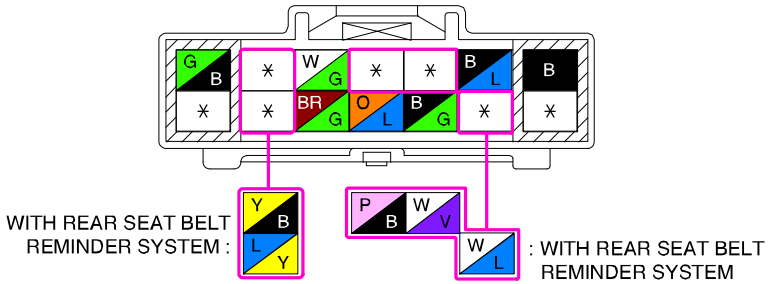



INTERIOR LIGHT HARNESS

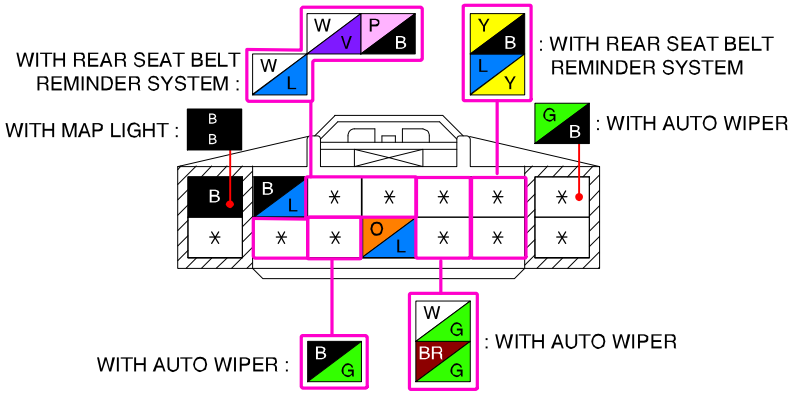

CARGO COMPARTMENT LIGHT (5HB)/TRUNK COMPARTMENT LIGHT (4SD)

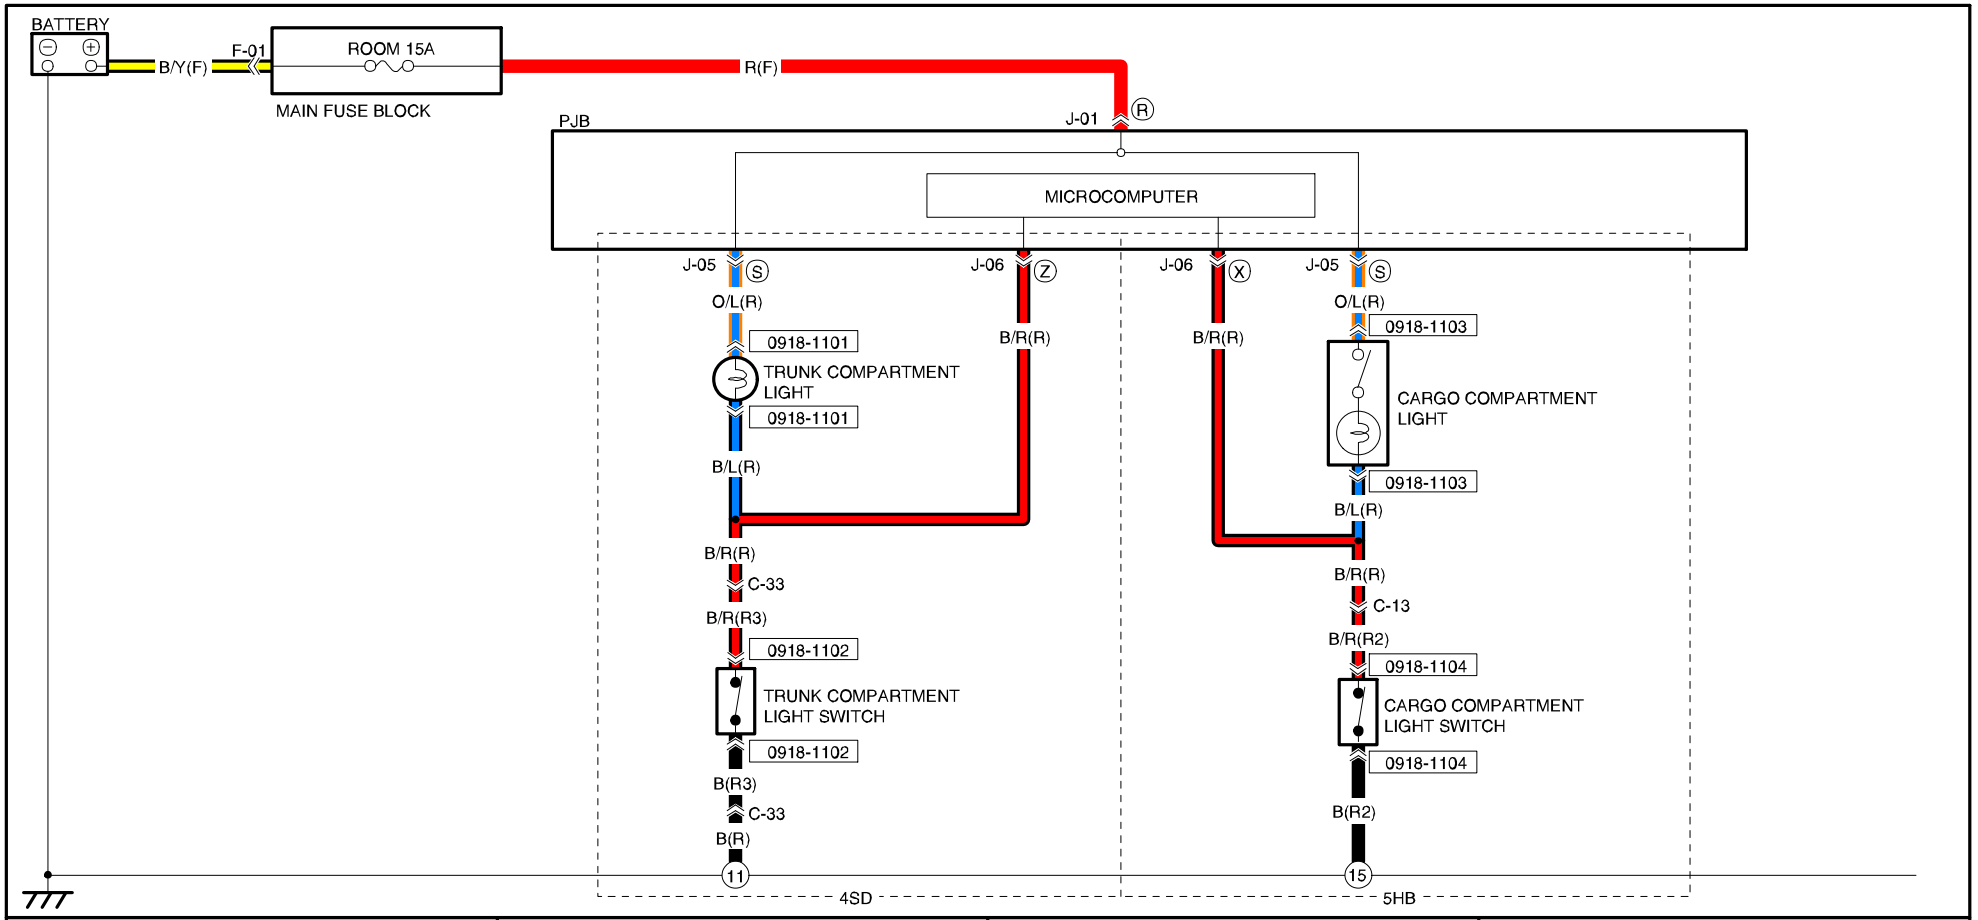


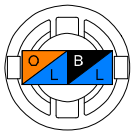0918-1101 TRUNK COMPARTMENT LIGHT	0918-1102 TRUNK COMPARTMENT LIGHT SWITCH	0918-1103 CARGO COMPARTMENT LIGHT	0918-1104 CARGO COMPARTMENT LIGHT SWITCH
		 	

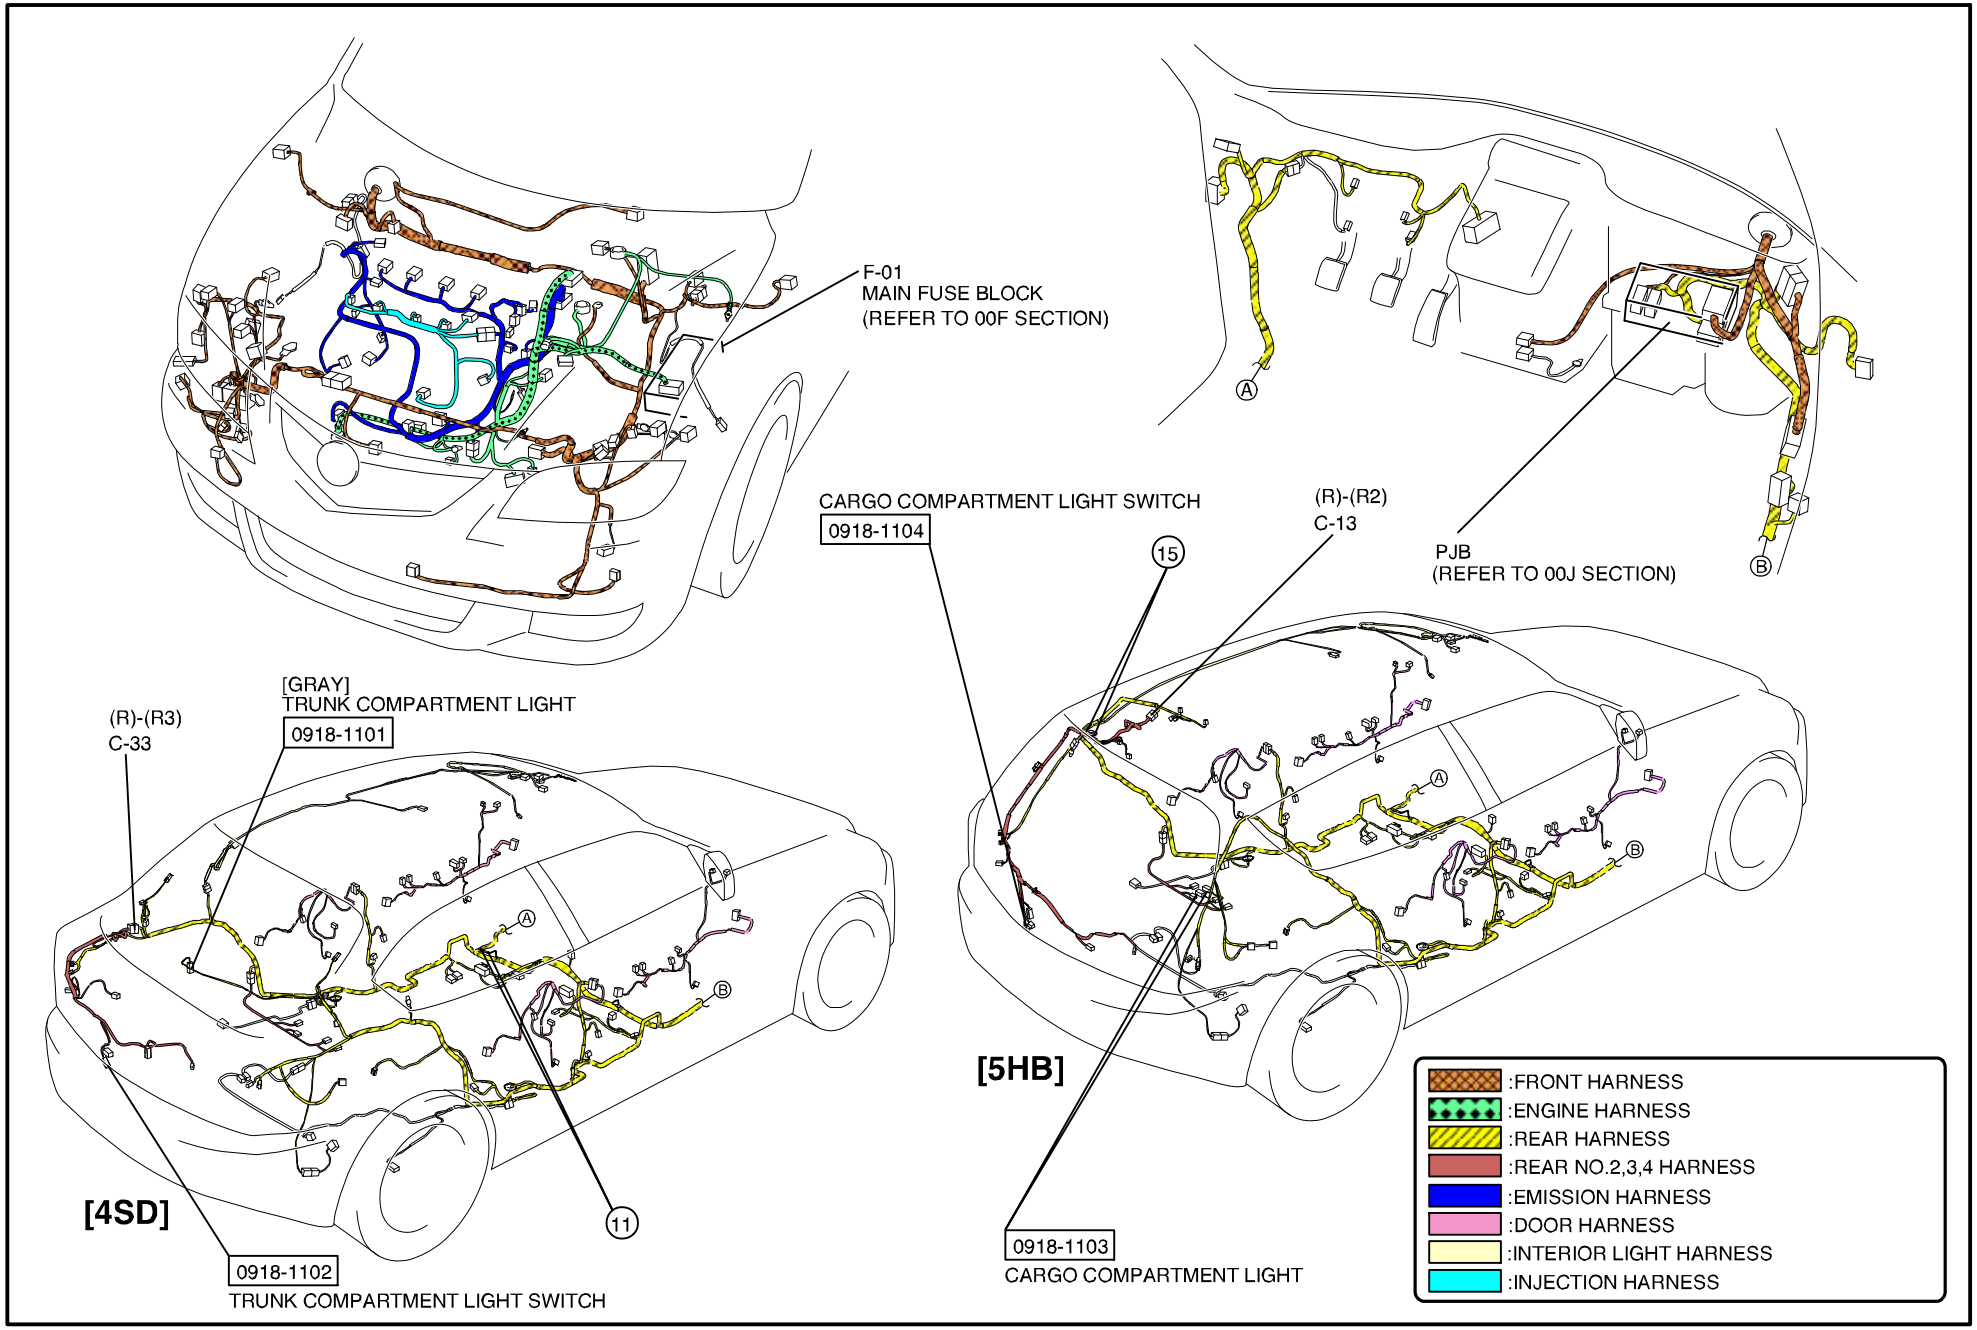

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
PJB
(REFER TO 00J SECTION)
CARGO COMPARTMENT LIGHT SWITCH
0918-1104
(R)-(R2)
C-13
15
[GRAY]
TRUNK COMPARTMENT LIGHT
0918-1101
(R)-(R3)
C-33
[4SD]
11
0918-1102
TRUNK COMPARTMENT LIGHT SWITCH
[5HB]
0918-1103
CARGO COMPARTMENT LIGHT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-13
REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

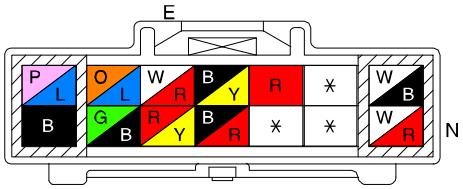


REAR NO.2 HARNESS

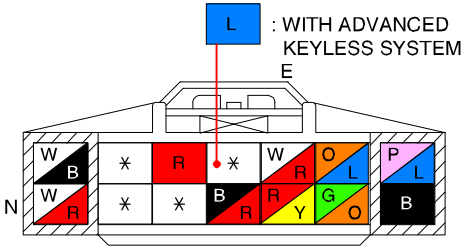


C-33
REAR HARNESS-REAR NO.3 HARNESS


REAR HARNESS




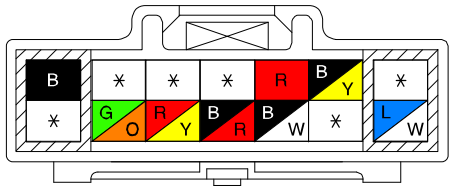



REAR NO.3 HARNESS

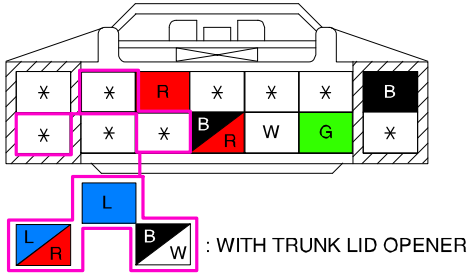


ILLUMINATION LIGHT

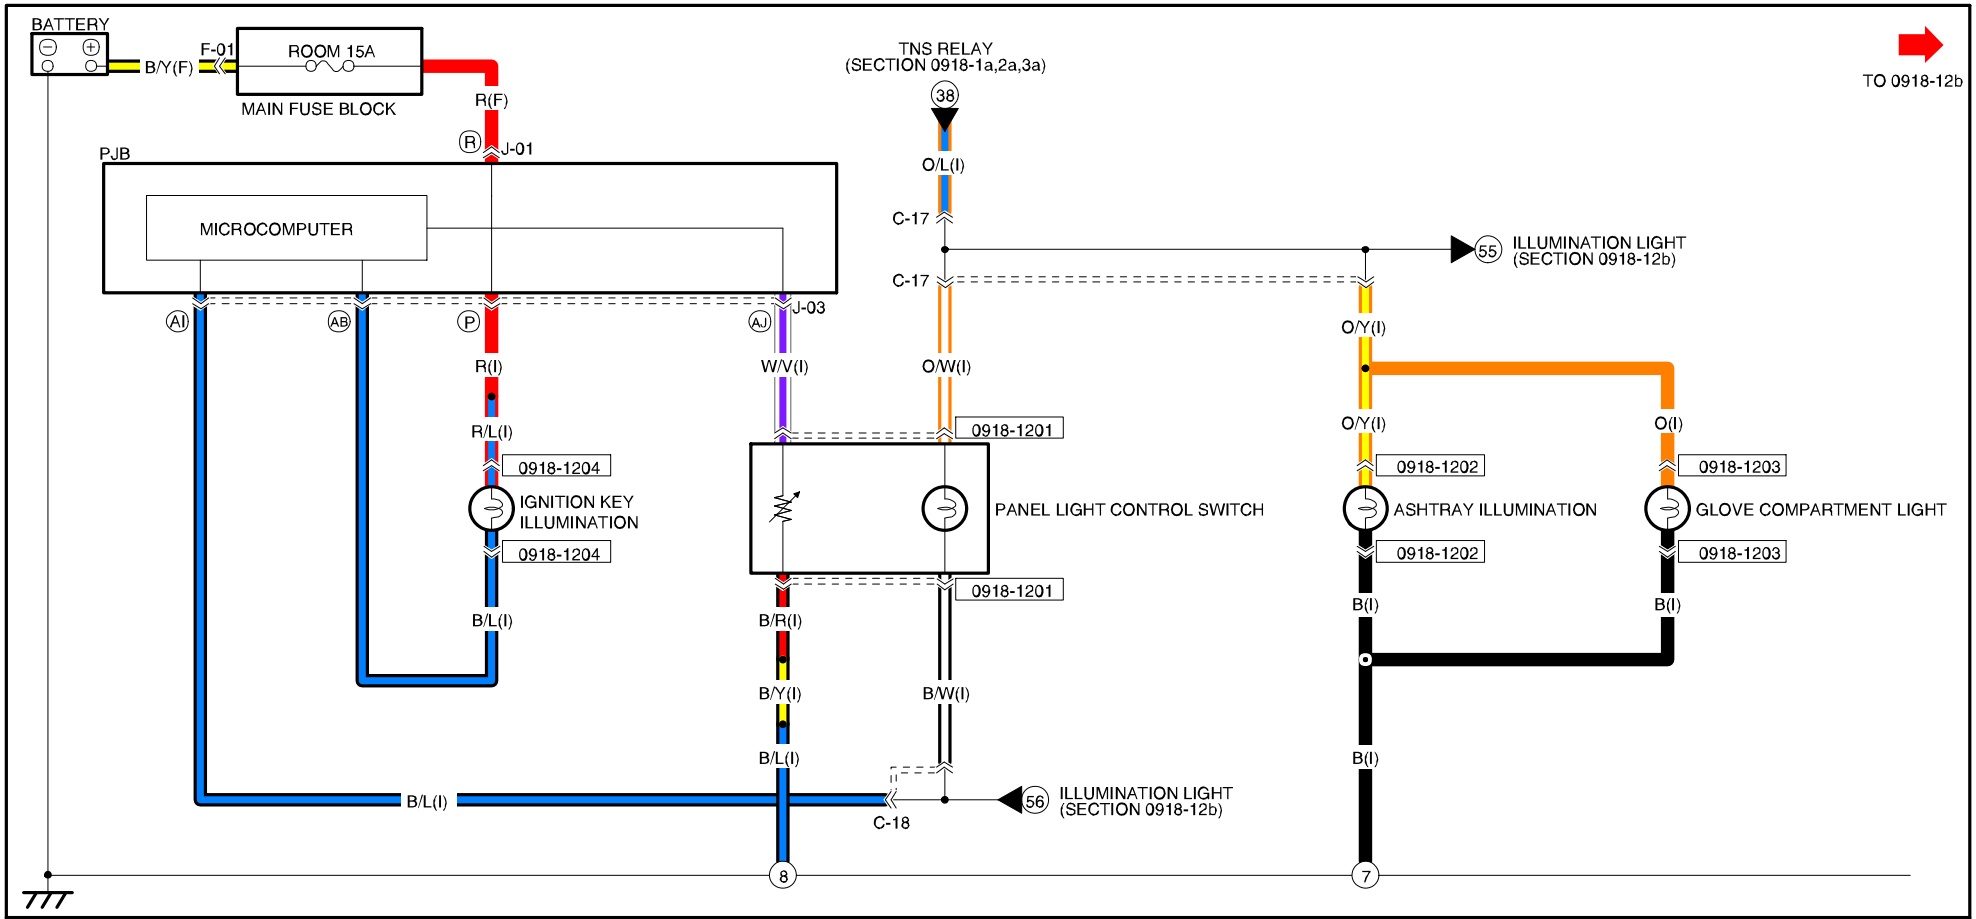

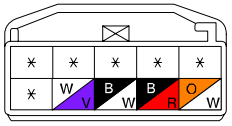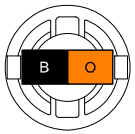
0918-1201 PANEL LIGHT CONTROL SWITCH	0918-1202 ASHTRAY ILLUMINATION	0918-1203 GLOVE COMPARTMENT LIGHT	0918-1204 IGNITION KEY ILLUMINATION
			

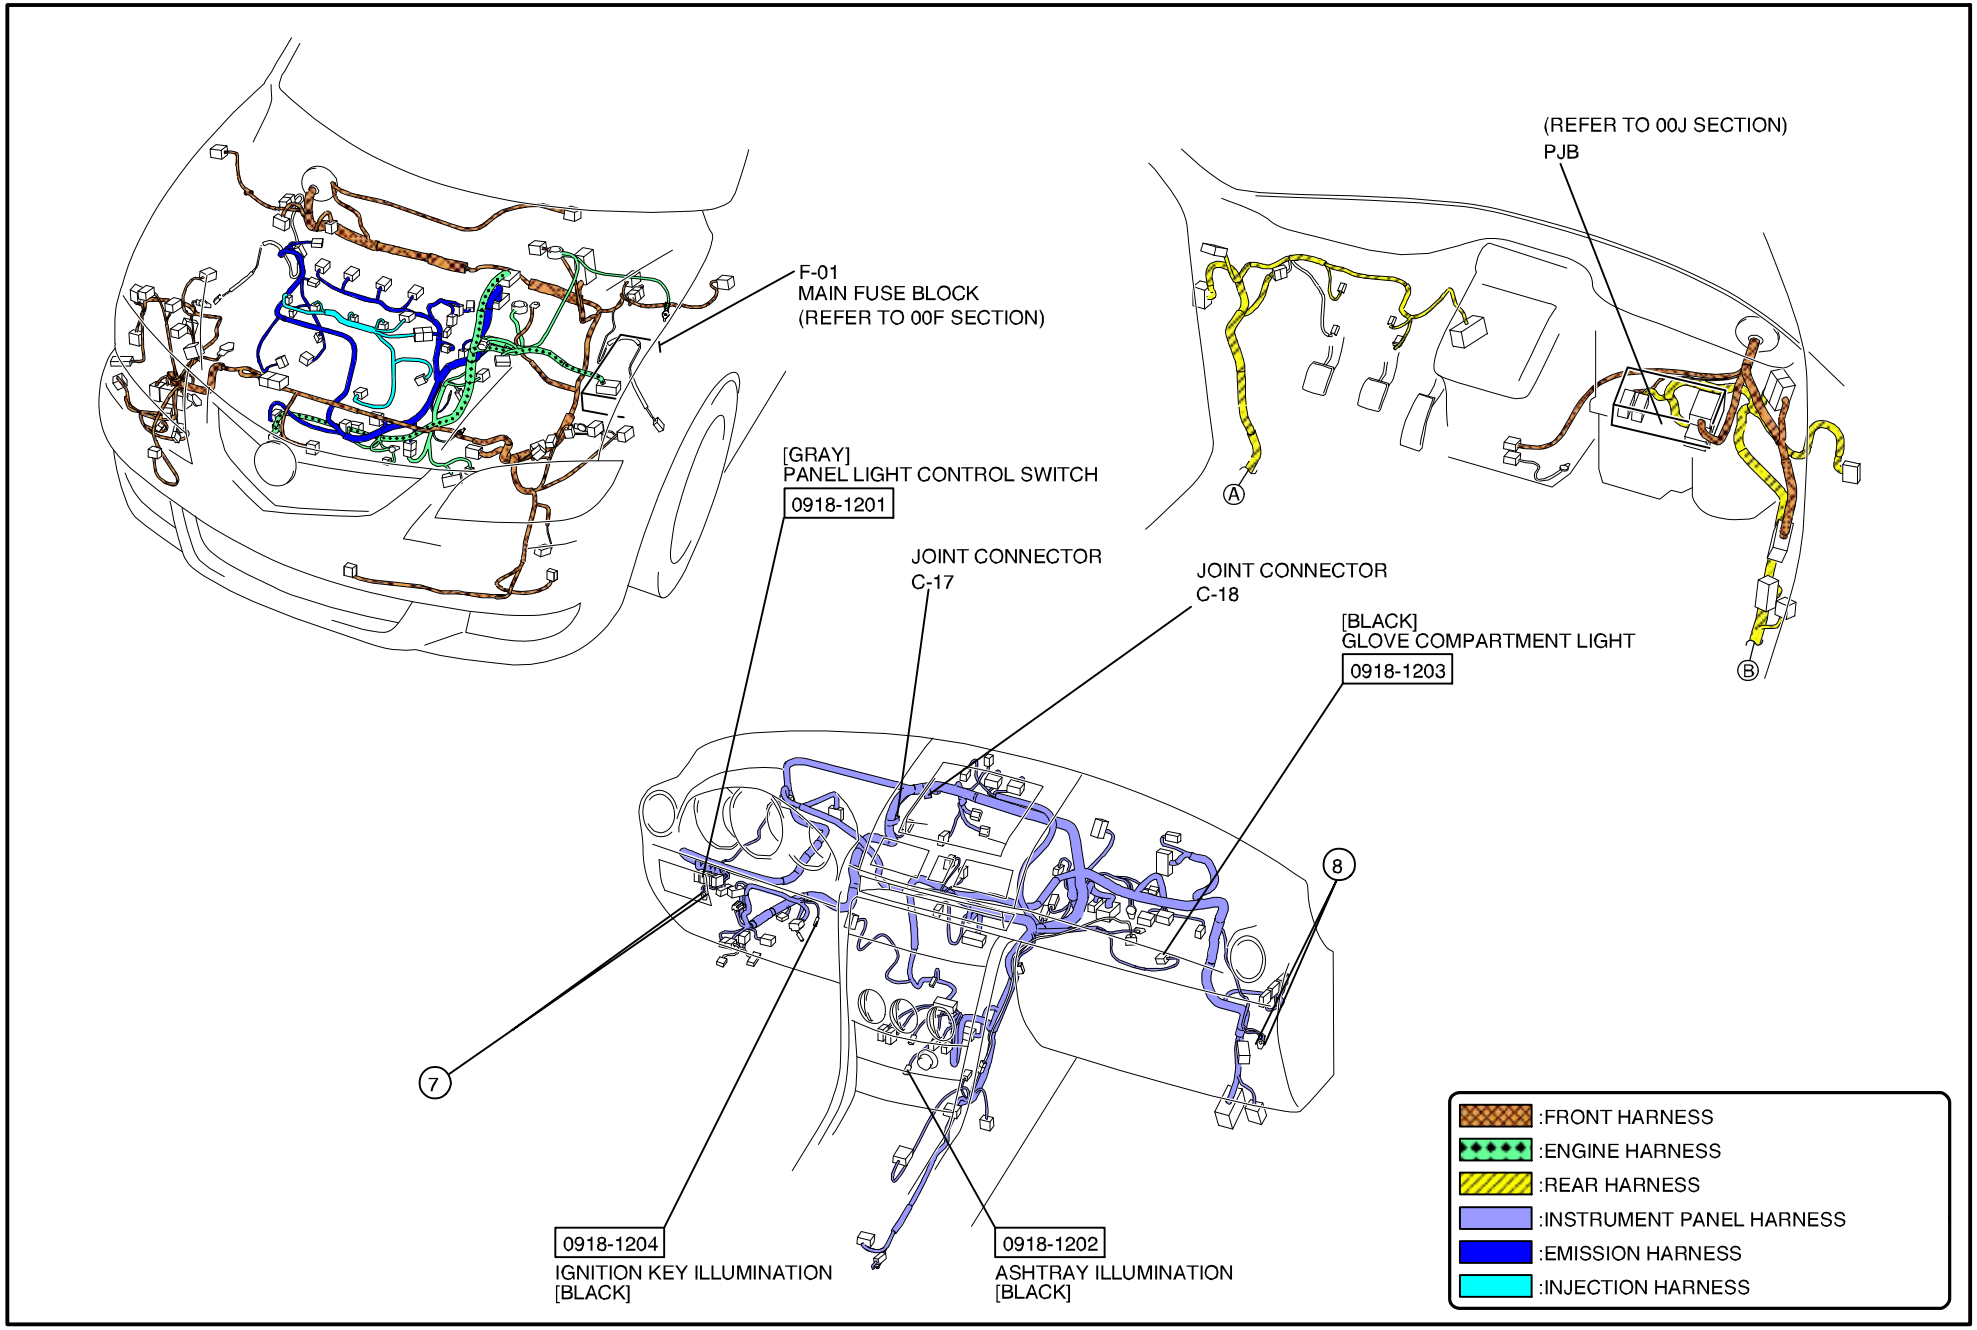
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
(REFER TO 00J SECTION)
PJB
[GRAY]
PANEL LIGHT CONTROL SWITCH
0918-1201
JOINT CONNECTOR
C-17
JOINT CONNECTOR
C-18
[BLACK]
GLOVE COMPARTMENT LIGHT
0918-1203
A
B
7
8
0918-1204
IGNITION KEY ILLUMINATION
[BLACK]
0918-1202
ASHTRAY ILLUMINATION
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-17
JOINT CONNECTOR

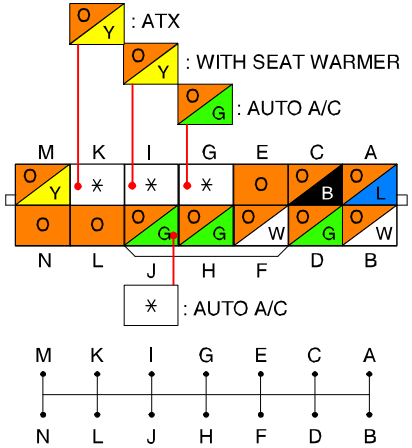


C-18
JOINT CONNECTOR

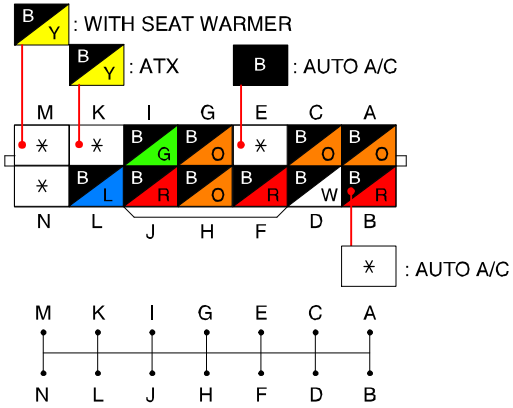


TO 0918-12a


TO 0918-12c

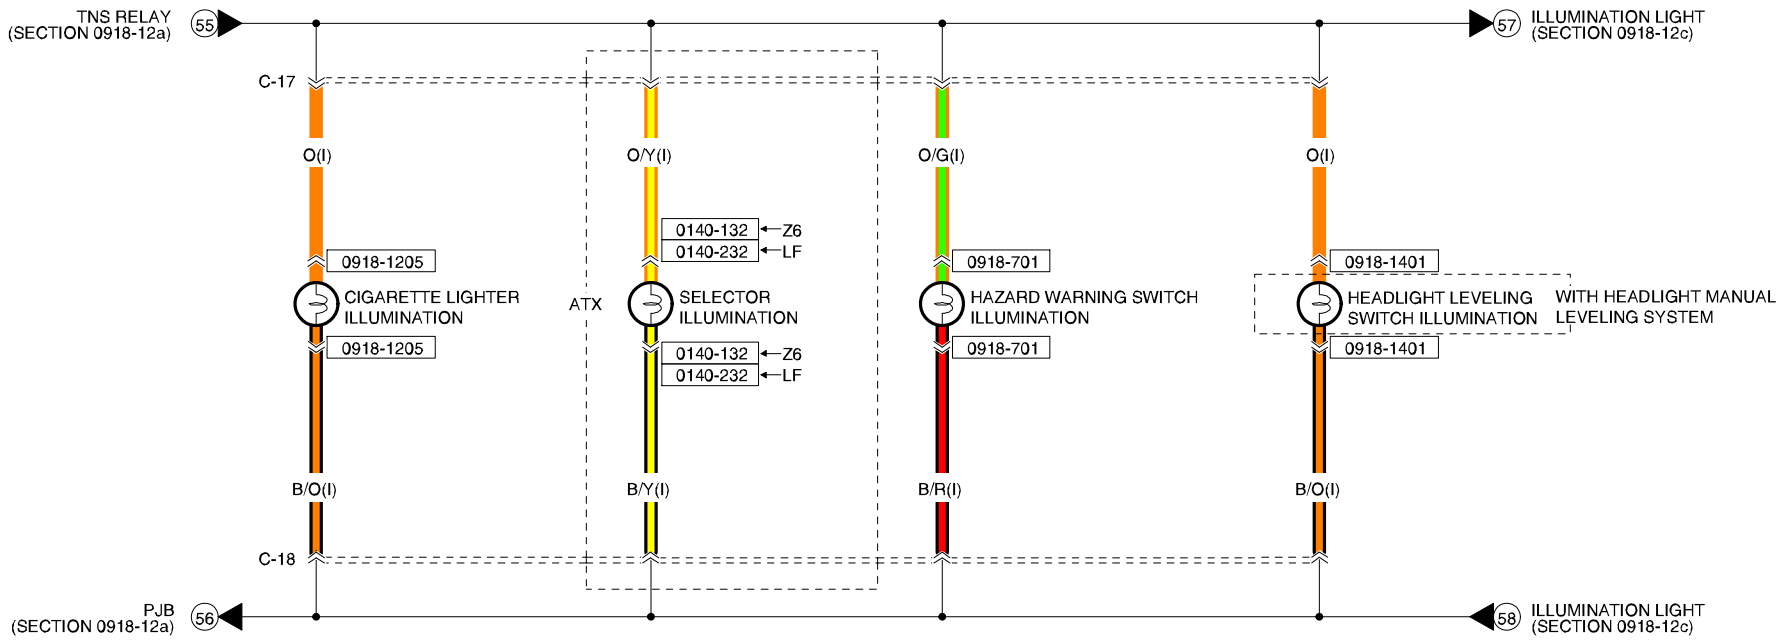


0918-1205
CIGARETTE LIGHTER ILLUMINATION




0140-132 ←Z6
0140-232 ←LF
SELECTOR ILLUMINATION

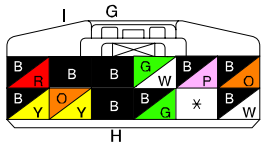


0918-701
HAZARD WARNING SWITCH ILLUMINATION




0918-1401
HEADLIGHT LEVELING SWITCH ILLUMINATION

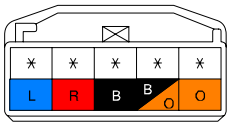


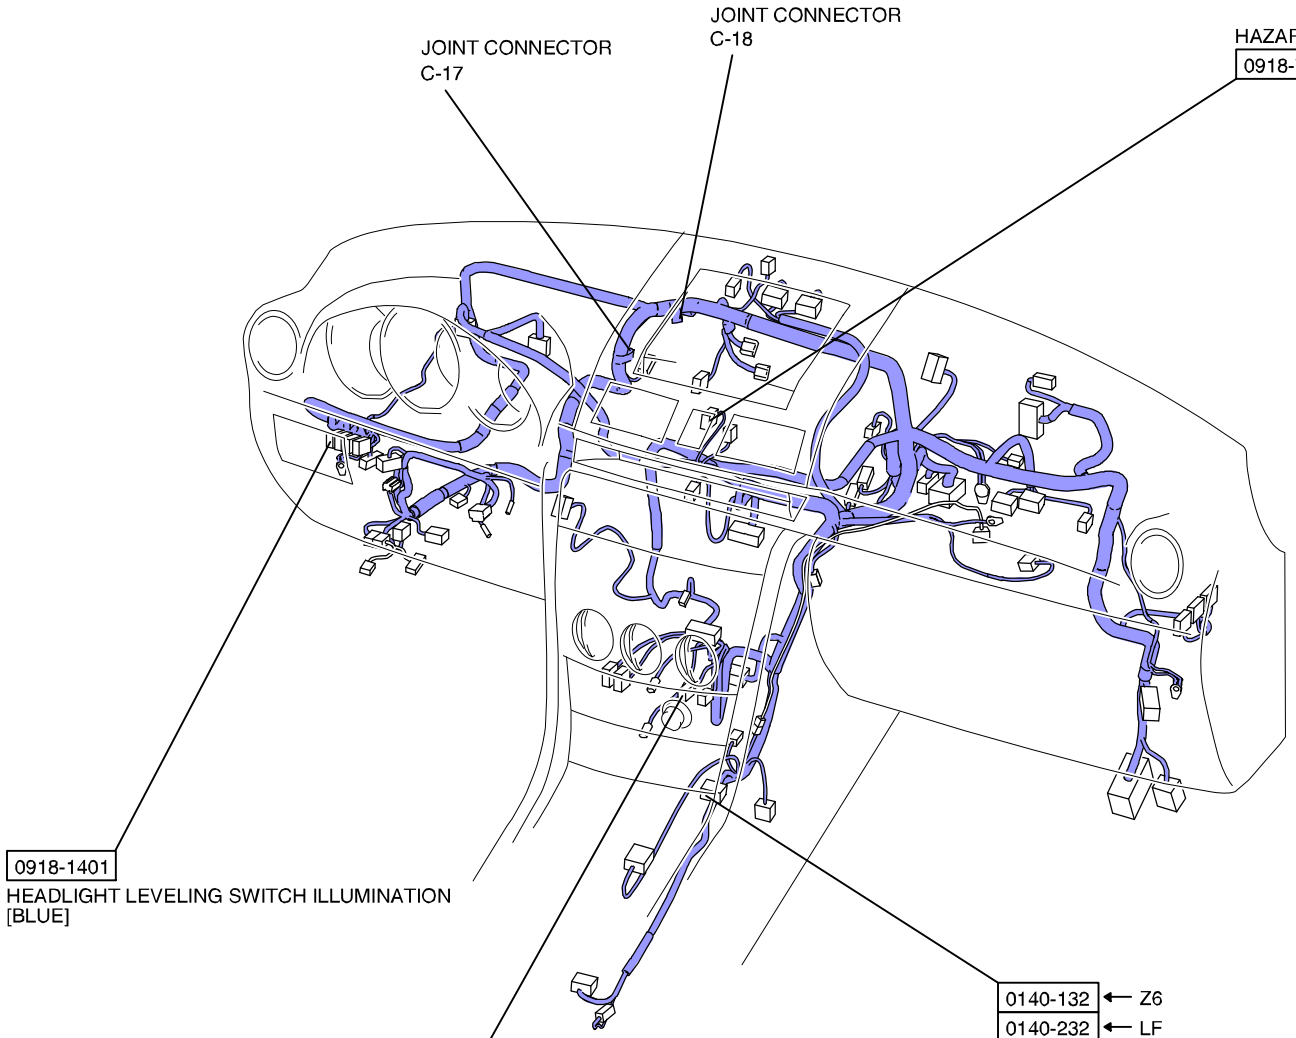

JOINT CONNECTOR
C-17
JOINT CONNECTOR
C-18
HAZARD WARNING SWITCH ILLUMINATION
0918-701
0918-1401
HEADLIGHT LEVELING SWITCH ILLUMINATION
[BLUE]
0140-132
Z6
0140-232
LF
SELECTOR ILLUMINATION
0918-1205
CIGARETTE LIGHTER ILLUMINATION
[BLACK]
:INSTRUMENT PANEL HARNESS

C-17
JOINT CONNECTOR

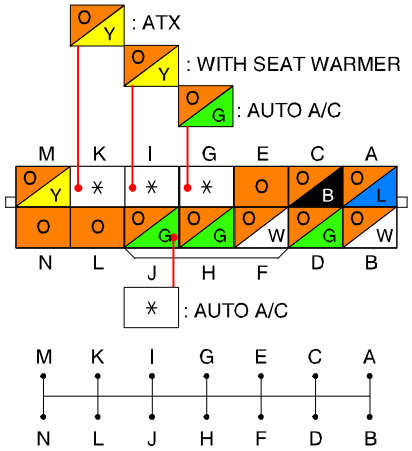


C-18
JOINT CONNECTOR

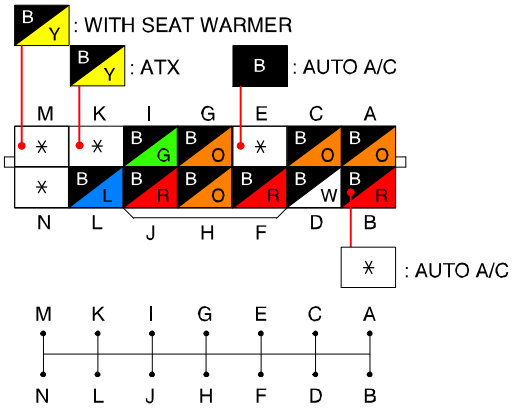


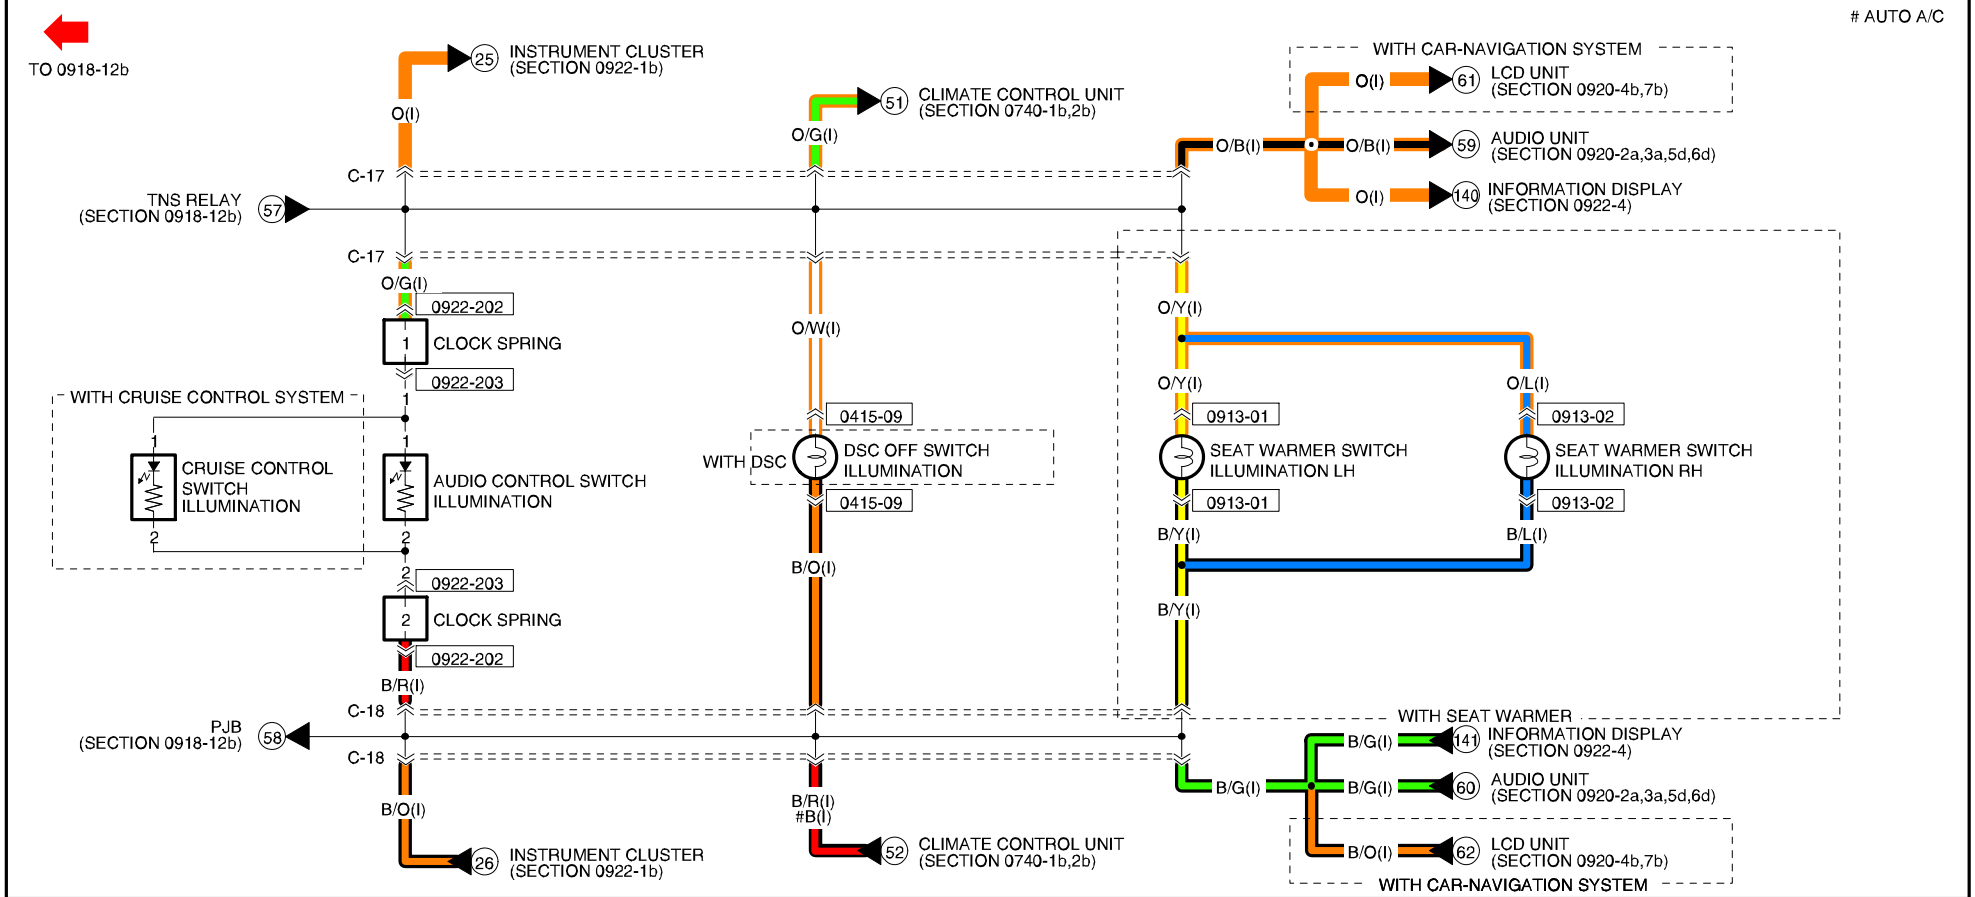


0415-09
DSC OFF SWITCH ILLUMINATION



0913-01
SEAT WARMER SWITCH ILLUMINATION LH




0913-02
SEAT WARMER SWITCH ILLUMINATION RH




0922-202
INSTRUMENT PANEL HARNESS-CLOCK SPRING

INSTRUMENT PANEL HARNESS

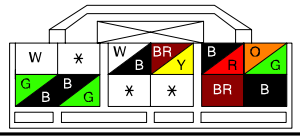


CLOCK SPRING




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0922-203
AUDIO CONTROL SWITCH ILLUMINATION/CRUISE CONTROL SWITCH ILLUMINATION




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

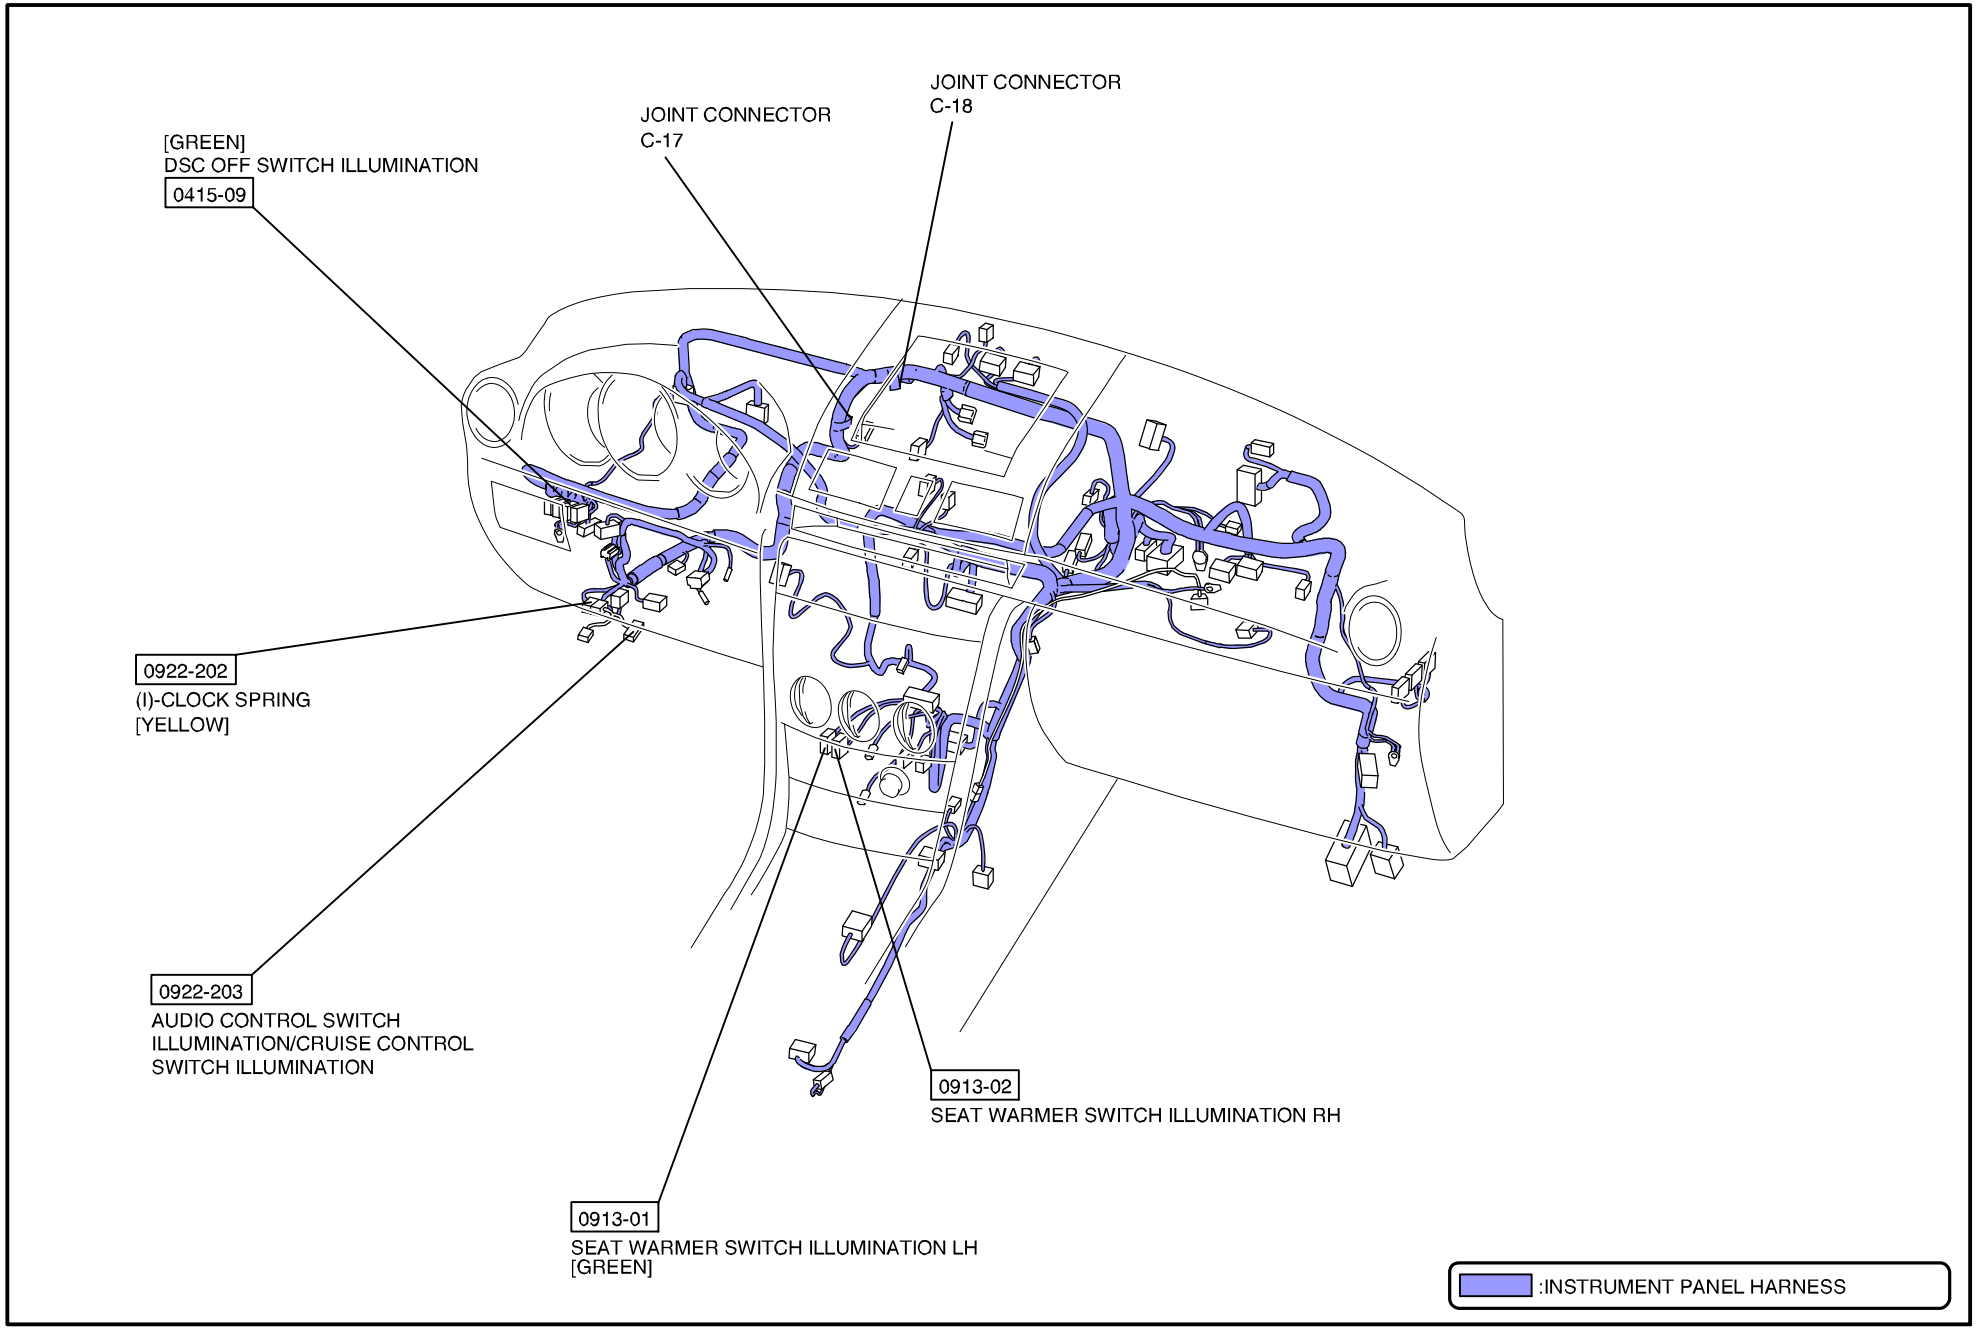
JOINT CONNECTOR
C-18
JOINT CONNECTOR
C-17
[GREEN]
DSC OFF SWITCH ILLUMINATION
0415-09
0922-202
(I)-CLOCK SPRING
[YELLOW]
0922-203
AUDIO CONTROL SWITCH
ILLUMINATION/CRUISE CONTROL
SWITCH ILLUMINATION
0913-02
SEAT WARMER SWITCH ILLUMINATION RH
0913-01
SEAT WARMER SWITCH ILLUMINATION LH
[GREEN]
:INSTRUMENT PANEL HARNESS


C-17
JOINT CONNECTOR

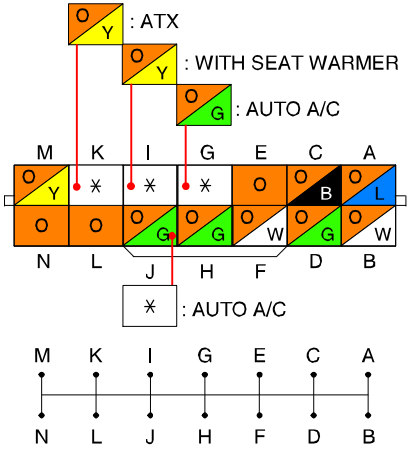


C-18
JOINT CONNECTOR

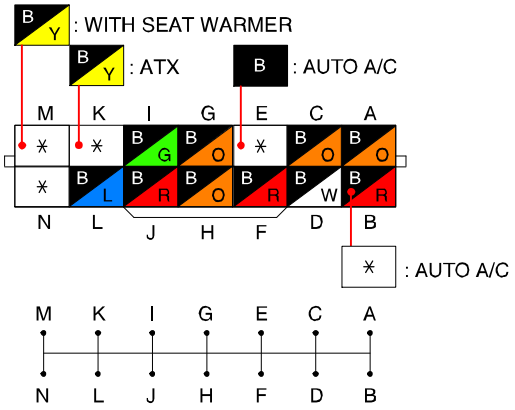


HEADLIGHT AUTO LEVELING SYSTEM

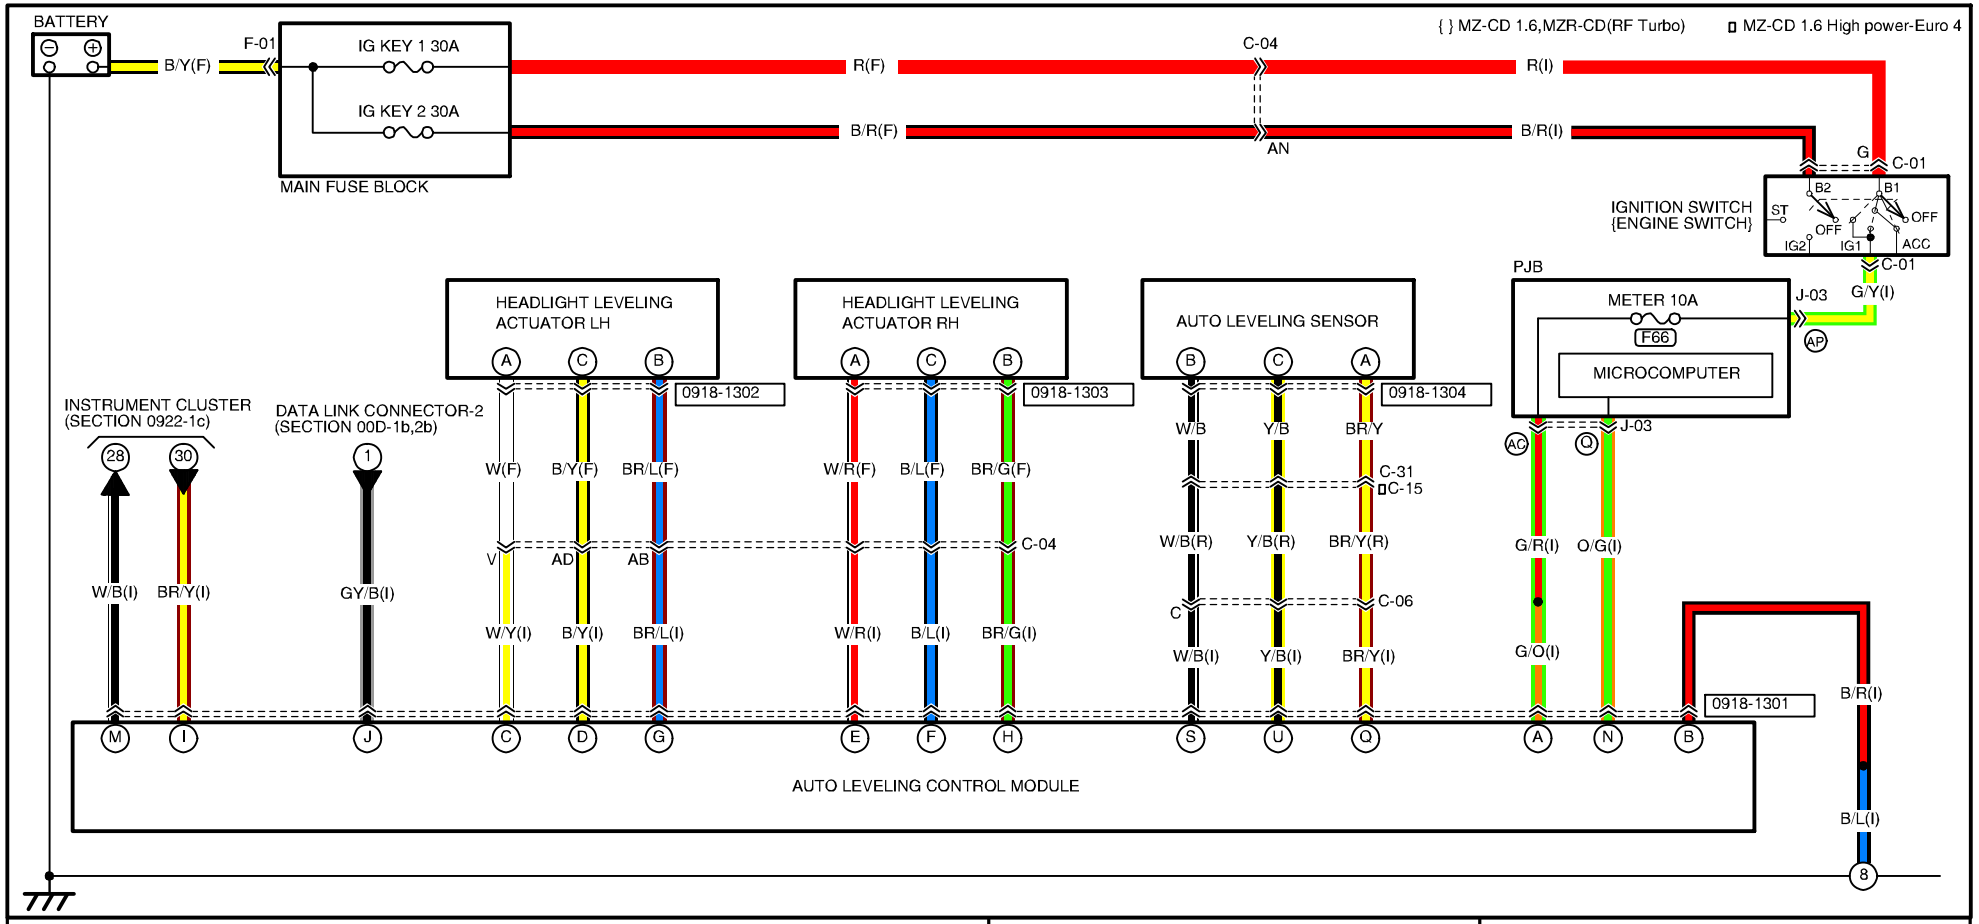


0918-1301
AUTO LEVELING CONTROL MODULE

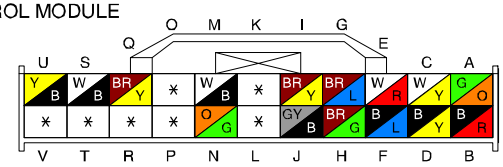


0918-1302
HEADLIGHT LEVELING ACTUATOR LH




0918-1303
HEADLIGHT LEVELING ACTUATOR RH




0918-1304
AUTO LEVELING SENSOR



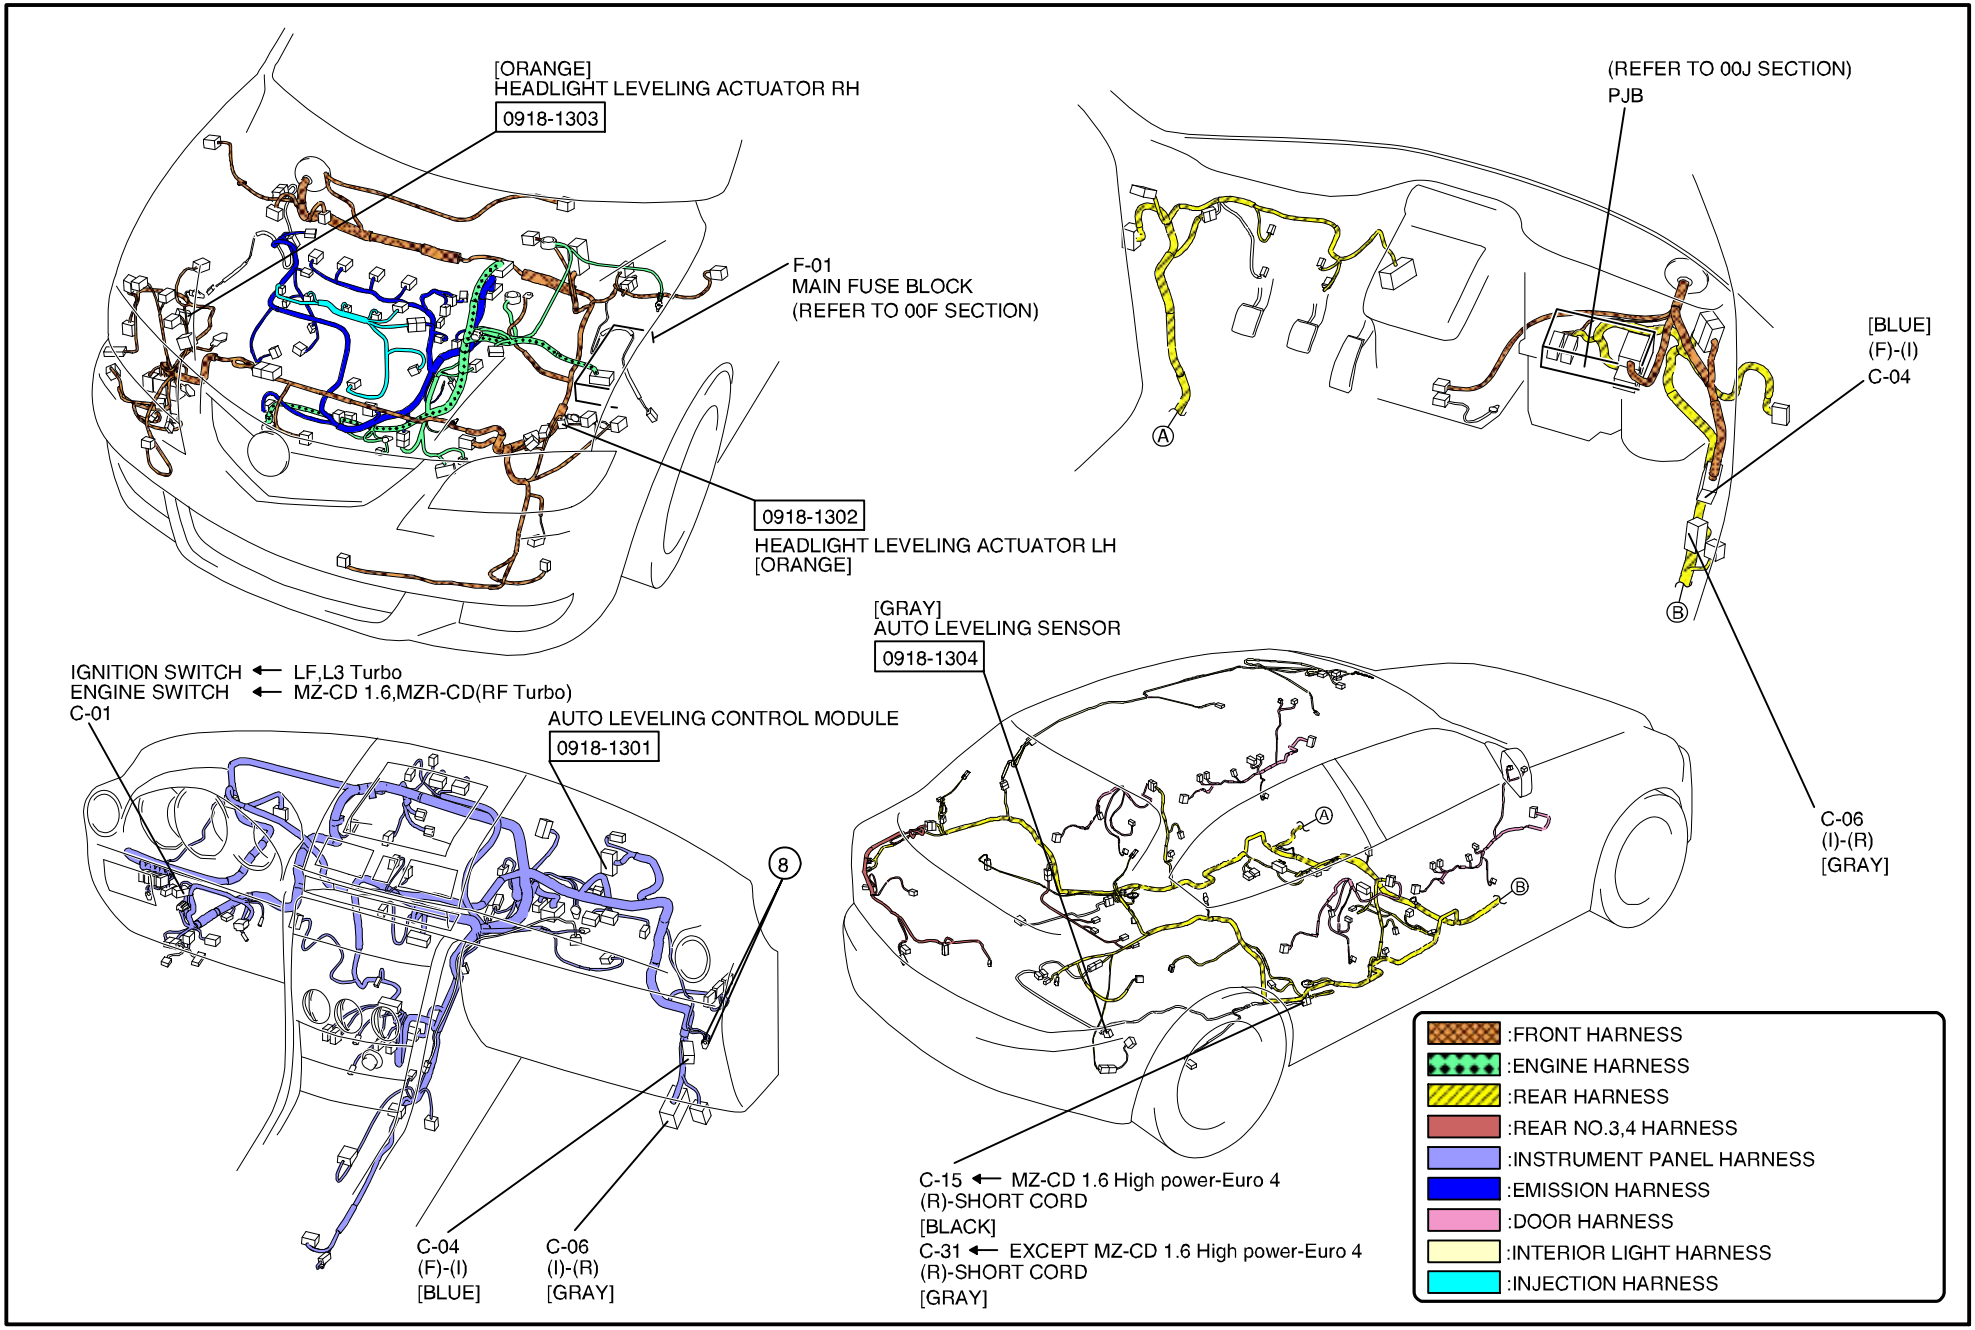

[ORANGE]
HEADLIGHT LEVELING ACTUATOR RH
0918-1303
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0918-1302
HEADLIGHT LEVELING ACTUATOR LH
[ORANGE]
(REFER TO 00J SECTION)
PJB
[BLUE]
(F)-(I)
C-04
Ⓐ
Ⓑ
[GRAY]
AUTO LEVELING SENSOR
0918-1304
IGNITION SWITCH ← LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-01
AUTO LEVELING CONTROL MODULE
0918-1301
8
C-04
(F)-(I)
[BLUE]
C-06
(I)-(R)
[GRAY]
C-06
(I)-(R)
[GRAY]
C-15 ← MZ-CD 1.6 High power-Euro 4
(R)-SHORT CORD
[BLACK]
C-31 ← EXCEPT MZ-CD 1.6 High power-Euro 4
(R)-SHORT CORD
[GRAY]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

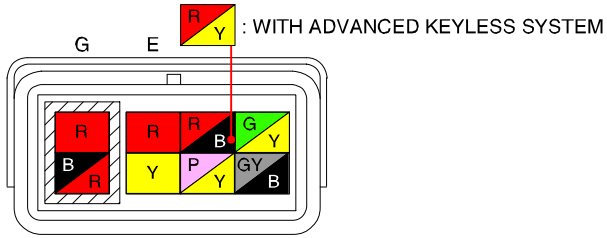


C-15
REAR HARNESS-SHORT CORD

REAR HARNESS

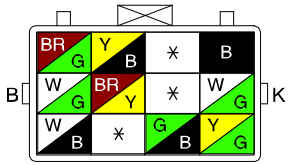


SHORT CORD

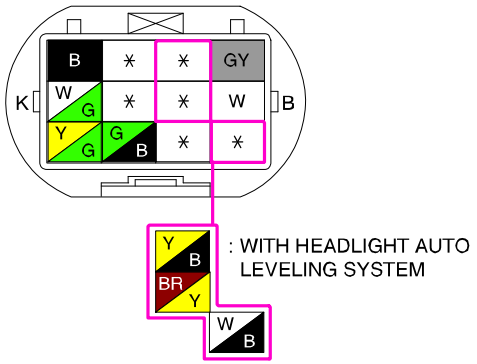


C-31
REAR HARNESS-SHORT CORD

REAR HARNESS

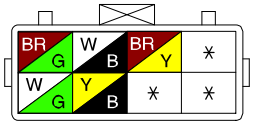


SHORT CORD

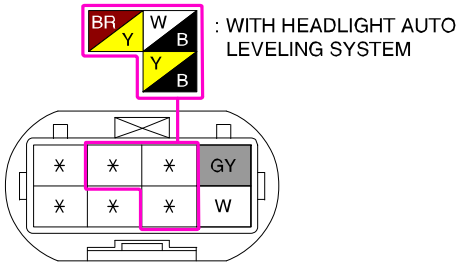


C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

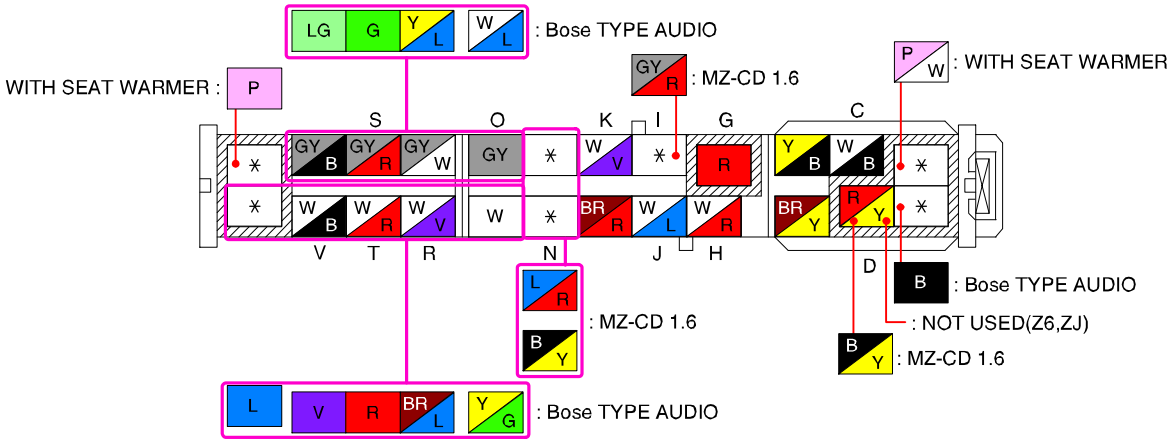


REAR HARNESS

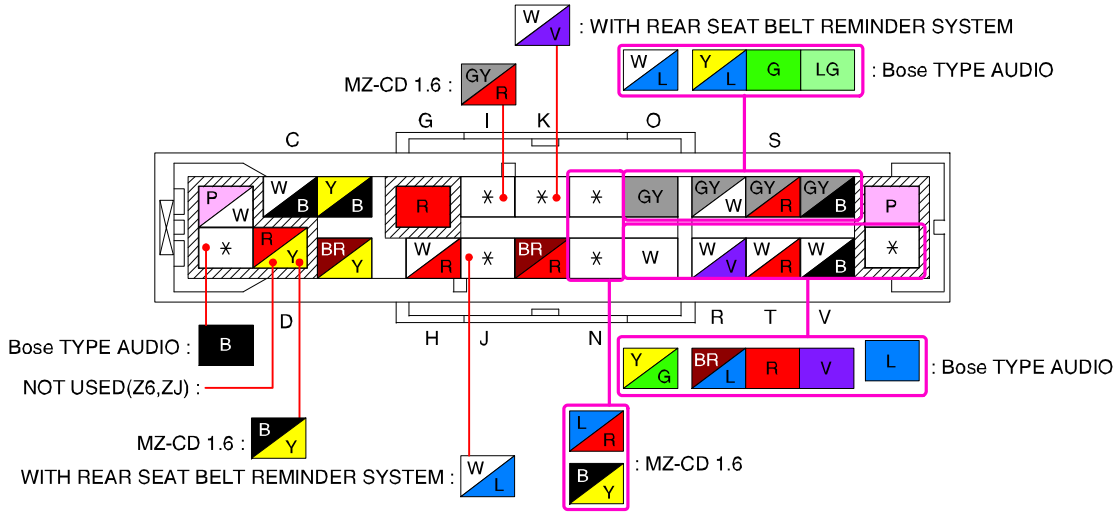



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

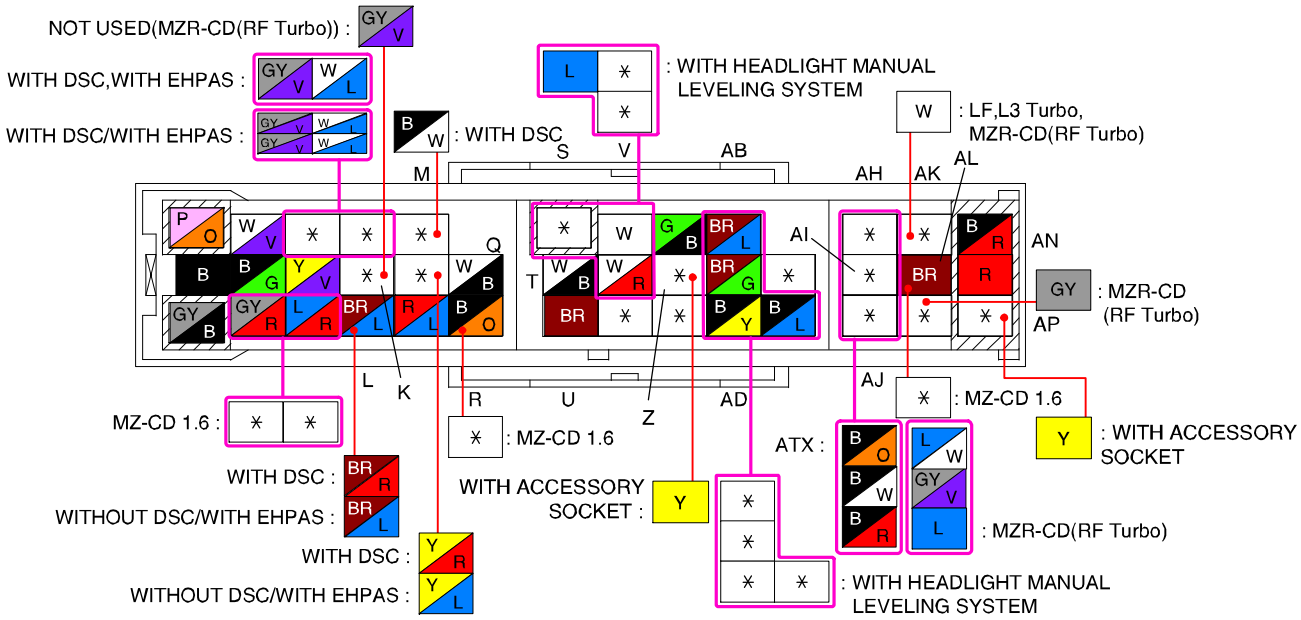


INSTRUMENT PANEL HARNESS

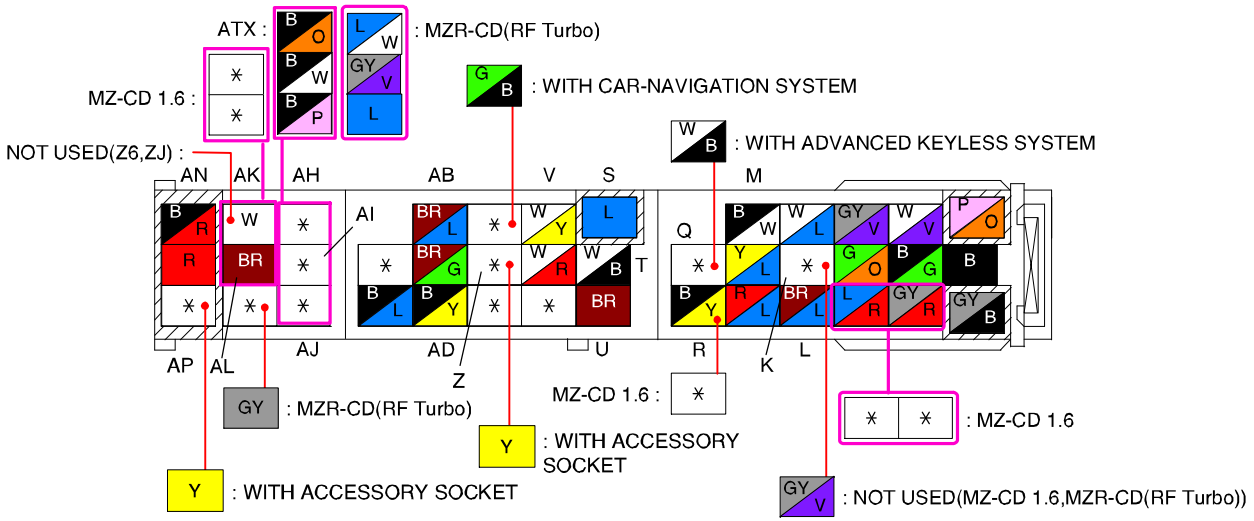


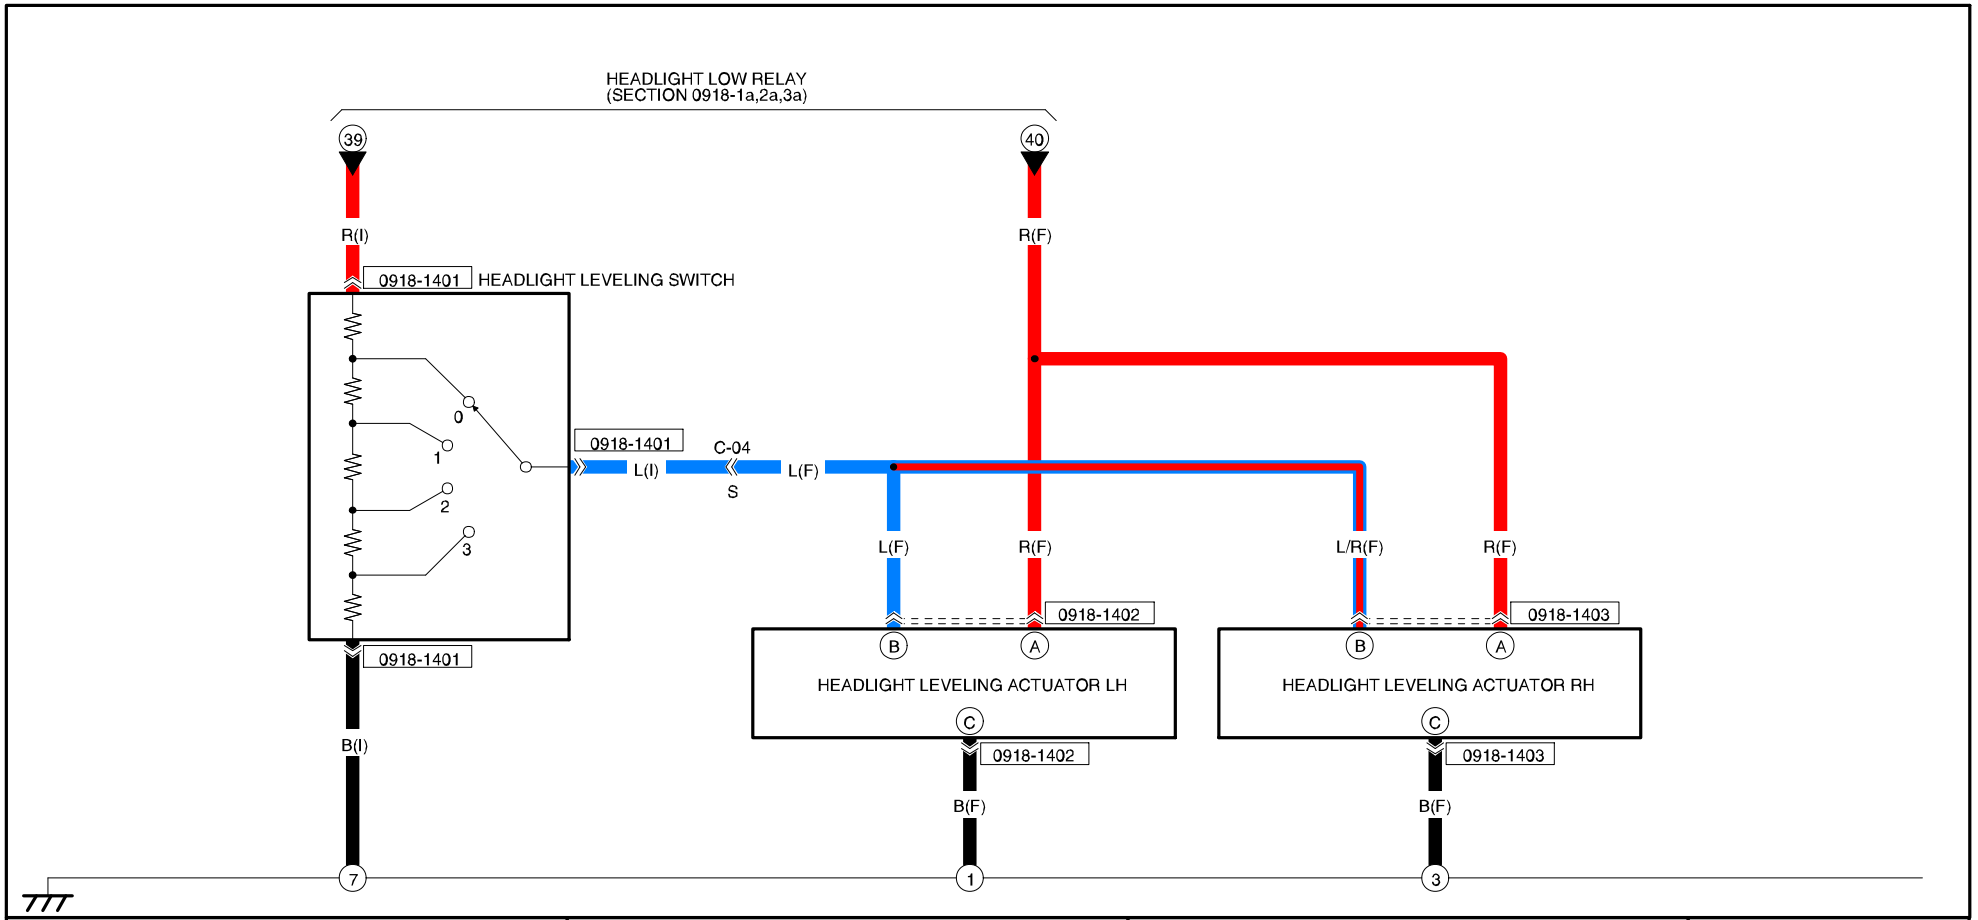


0918-1401
HEADLIGHT LEVELING SWITCH

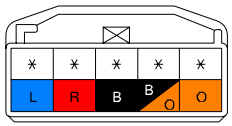


0918-1402
HEADLIGHT LEVELING ACTUATOR LH




0918-1403
HEADLIGHT LEVELING ACTUATOR RH



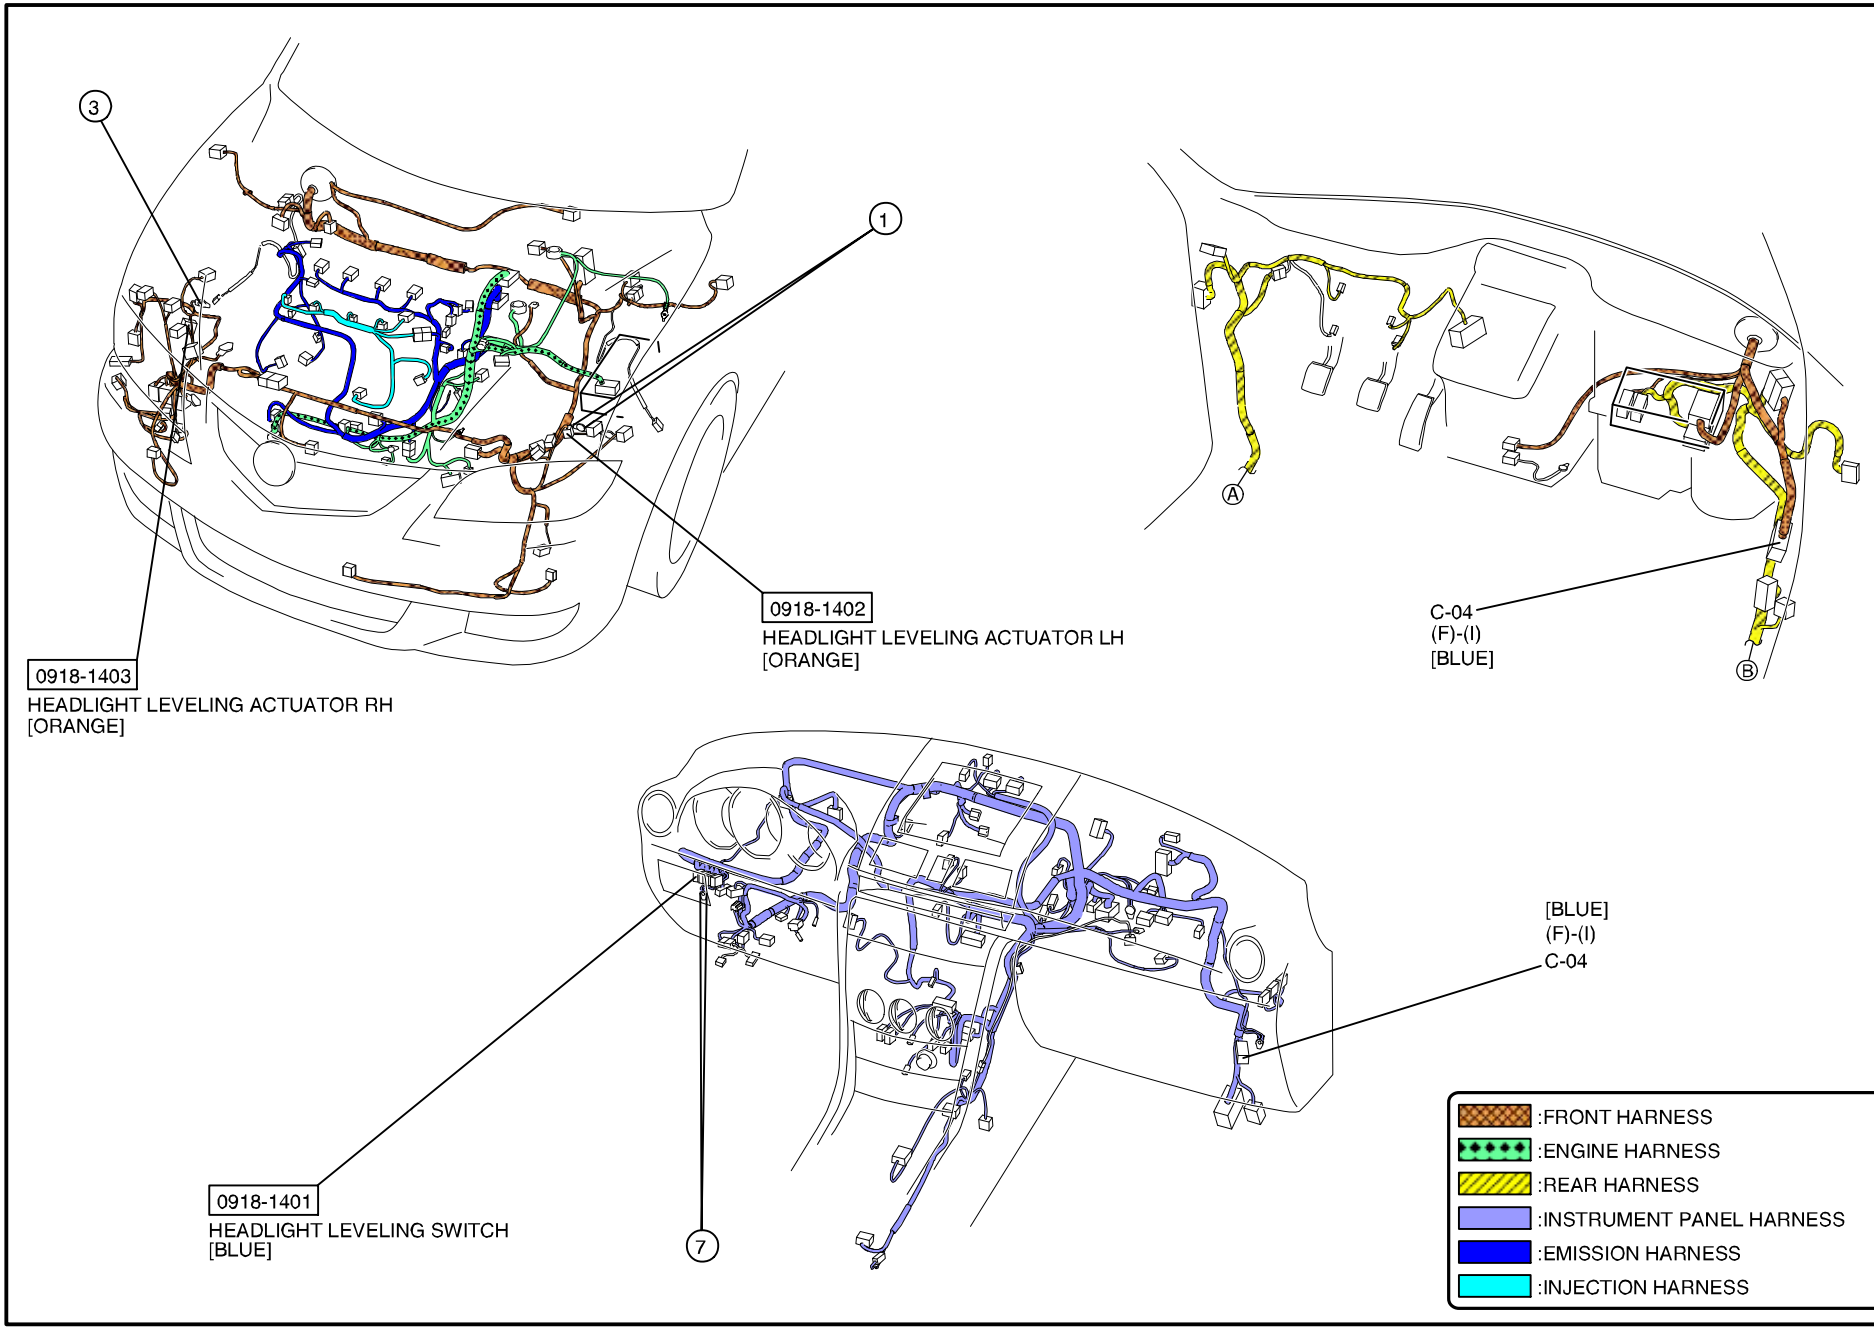

3
1
0918-1403
HEADLIGHT LEVELING ACTUATOR RH
[ORANGE]
0918-1402
HEADLIGHT LEVELING ACTUATOR LH
[ORANGE]
A
B
C-04
(F)-(I)
[BLUE]
0918-1401
HEADLIGHT LEVELING SWITCH
[BLUE]
7
[BLUE]
(F)-(I)
C-04
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

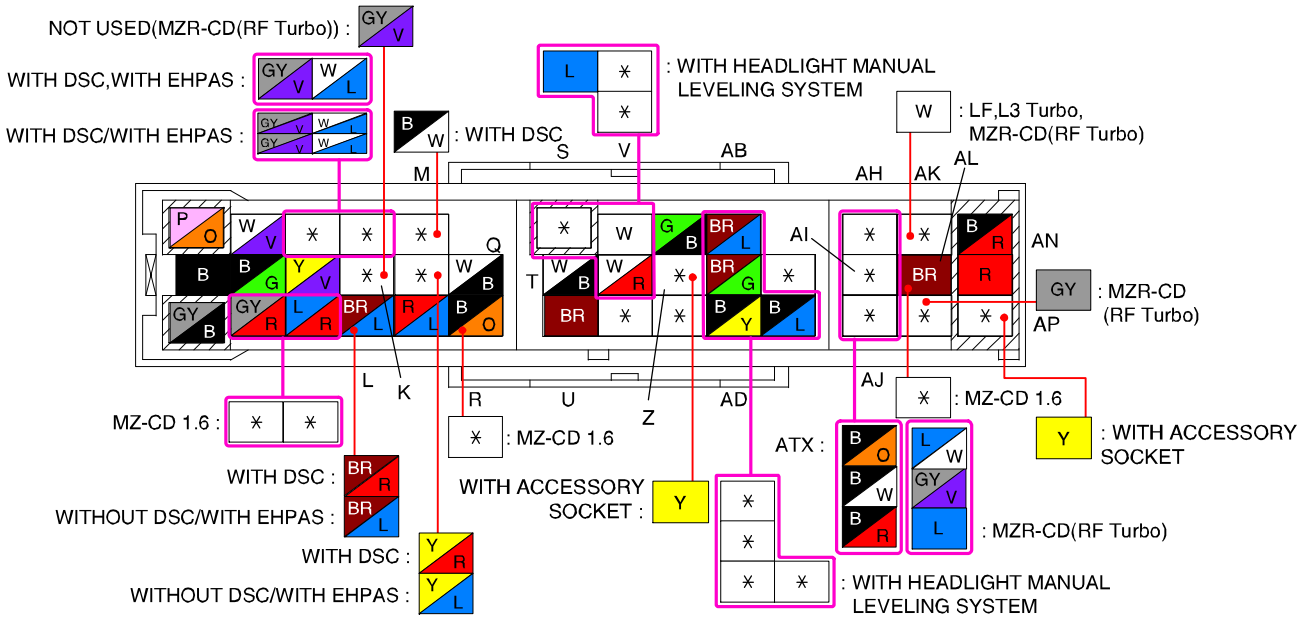

INSTRUMENT PANEL HARNESS

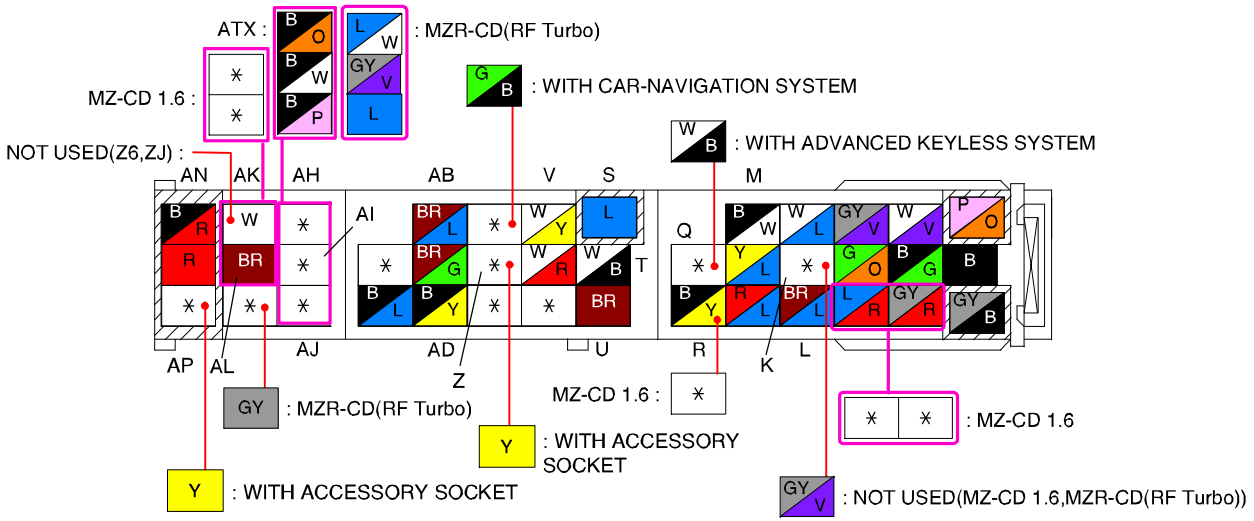

VANITY MIRROR ILLUMINATION

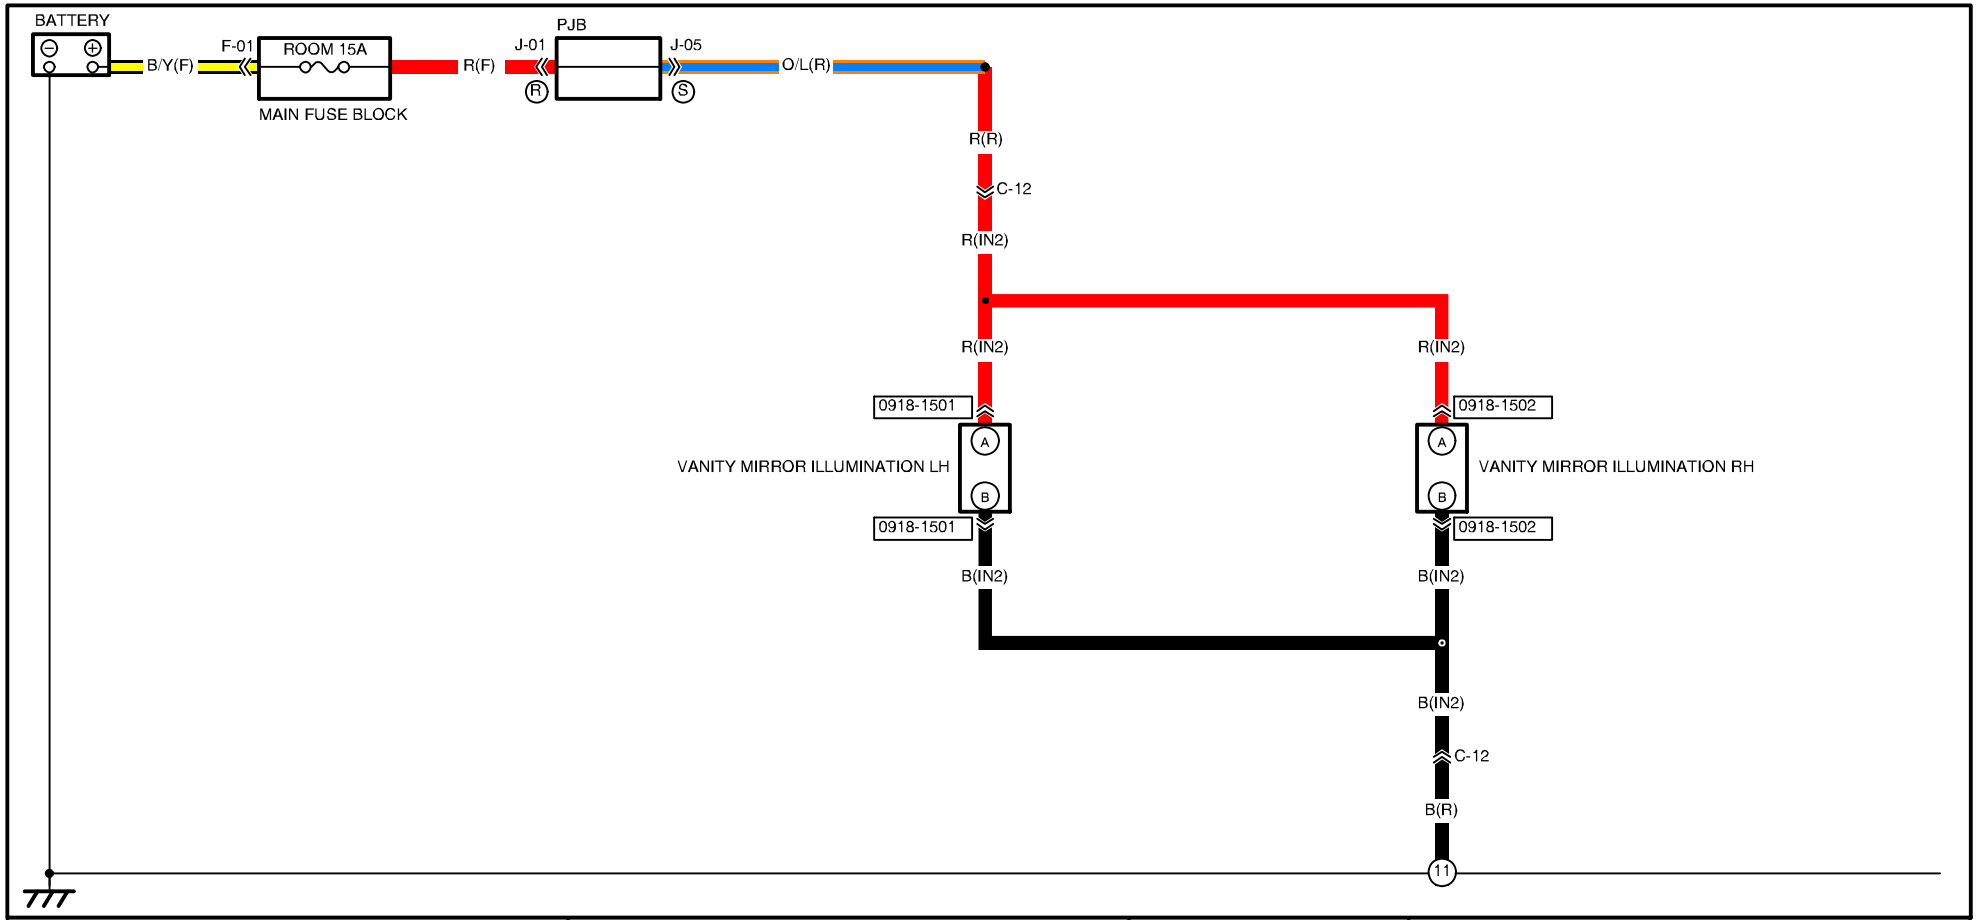


0918-1501
VANITY MIRROR ILLUMINATION LH




0918-1502
VANITY MIRROR ILLUMINATION RH

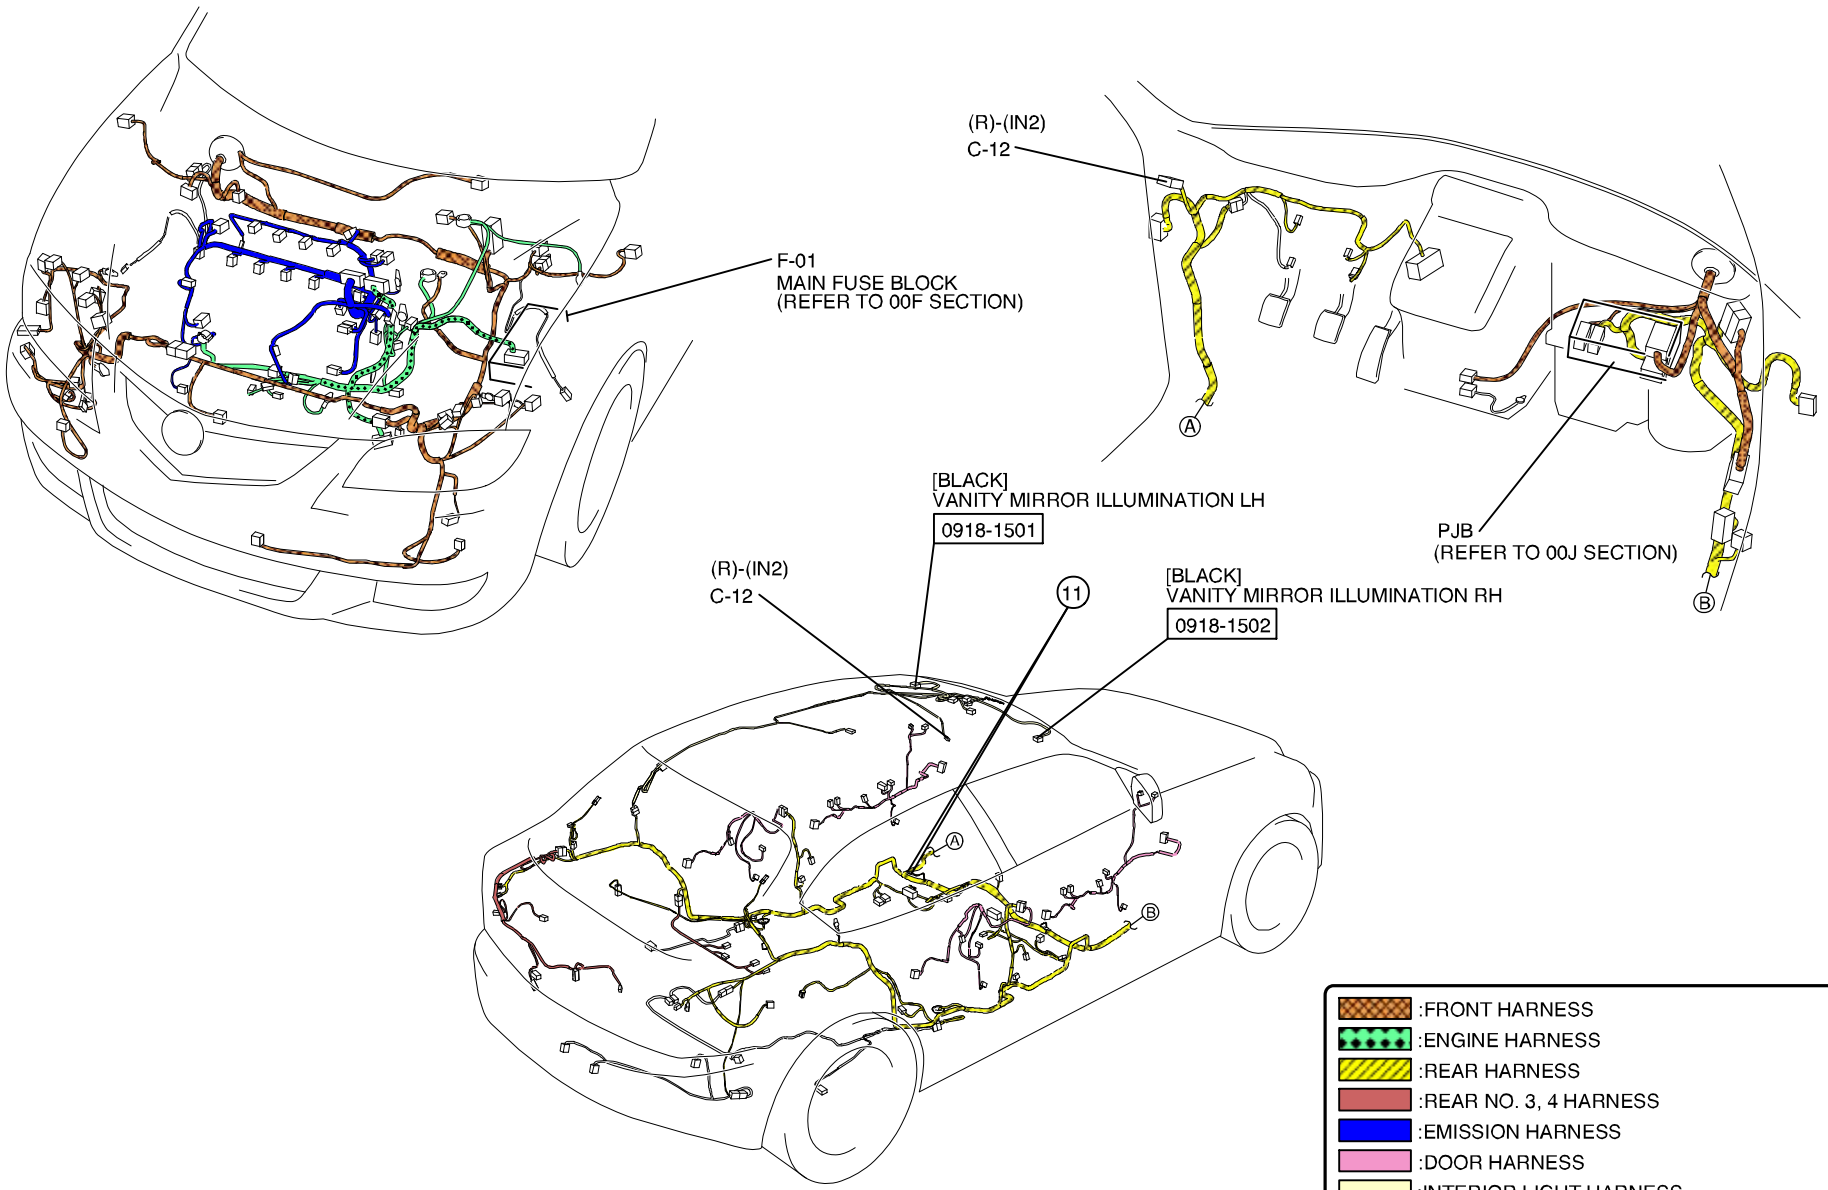



F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
(R)-(IN2)
C-12
A
PJB
(REFER TO 00J SECTION)
B
[BLACK]
VANITY MIRROR ILLUMINATION LH
0918-1501
(R)-(IN2)
C-12
11
[BLACK]
VANITY MIRROR ILLUMINATION RH
0918-1502
A
B
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO. 3, 4 HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-12
REAR HARNESS-INTERIOR LIGHT NO.2 HARNESS


REAR HARNESS

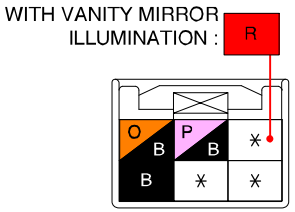


INTERIOR LIGHT NO.2 HARNESS

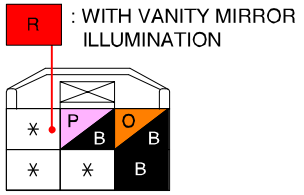


WINDSHIELD WIPER AND WASHER

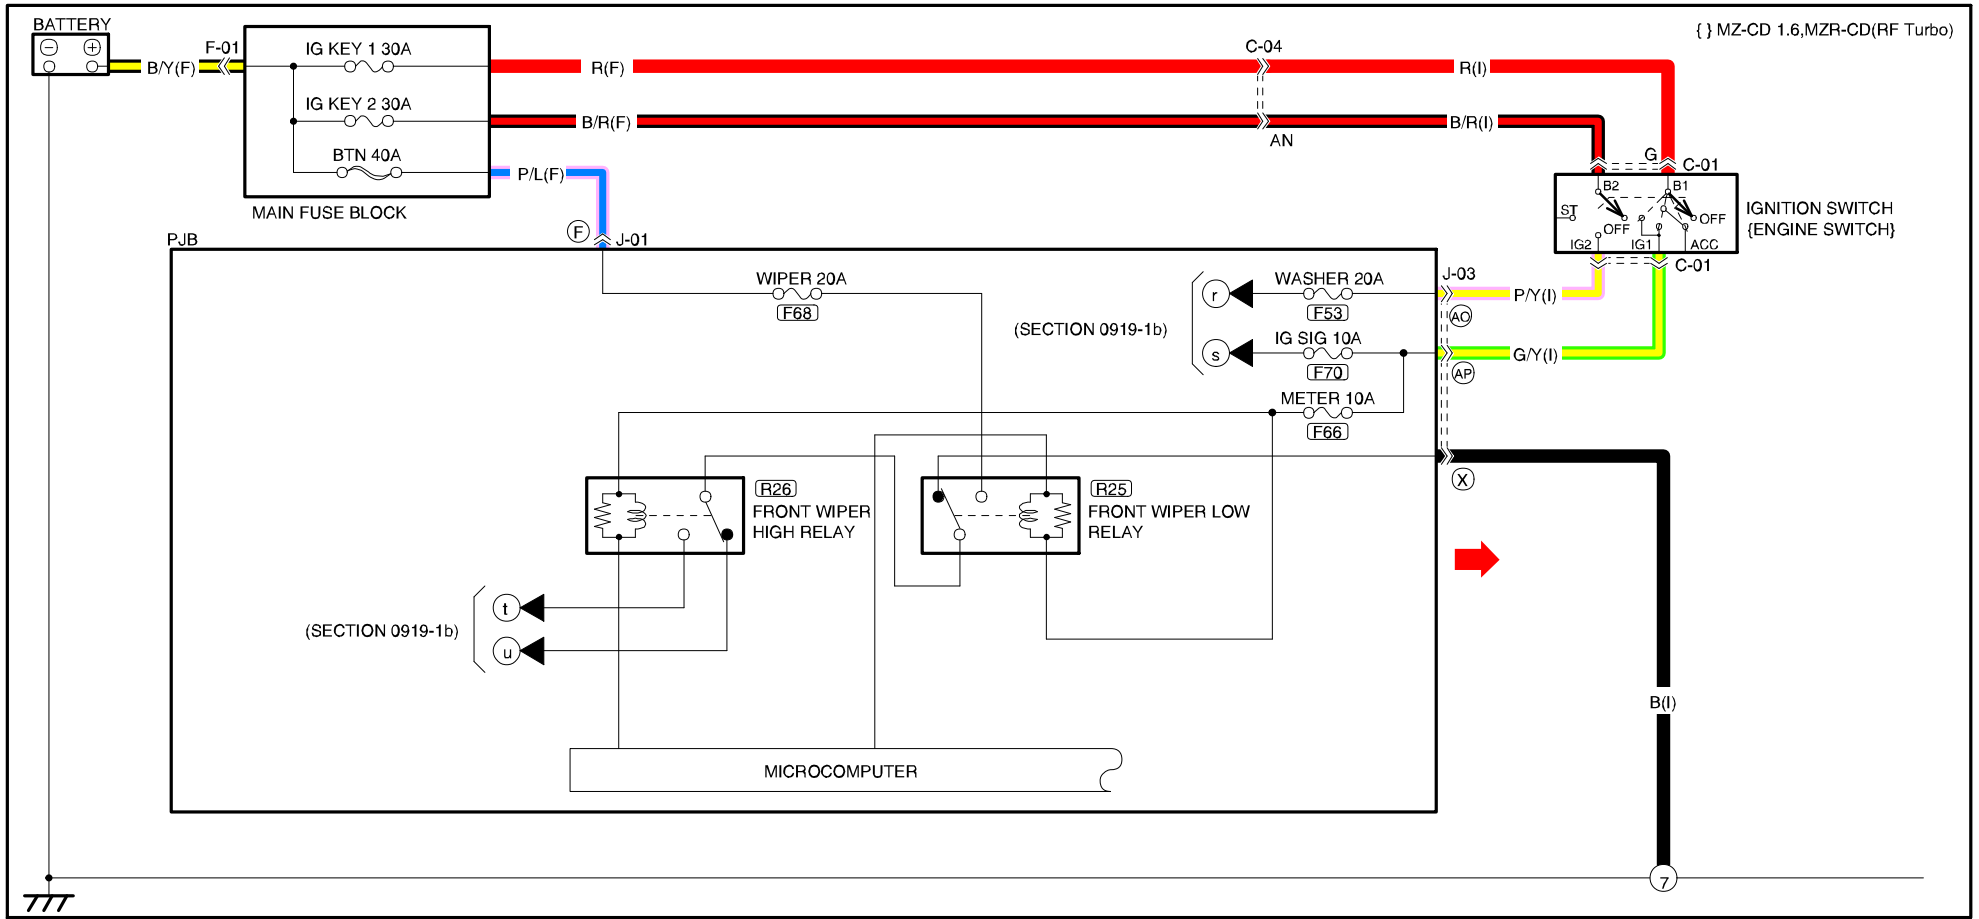

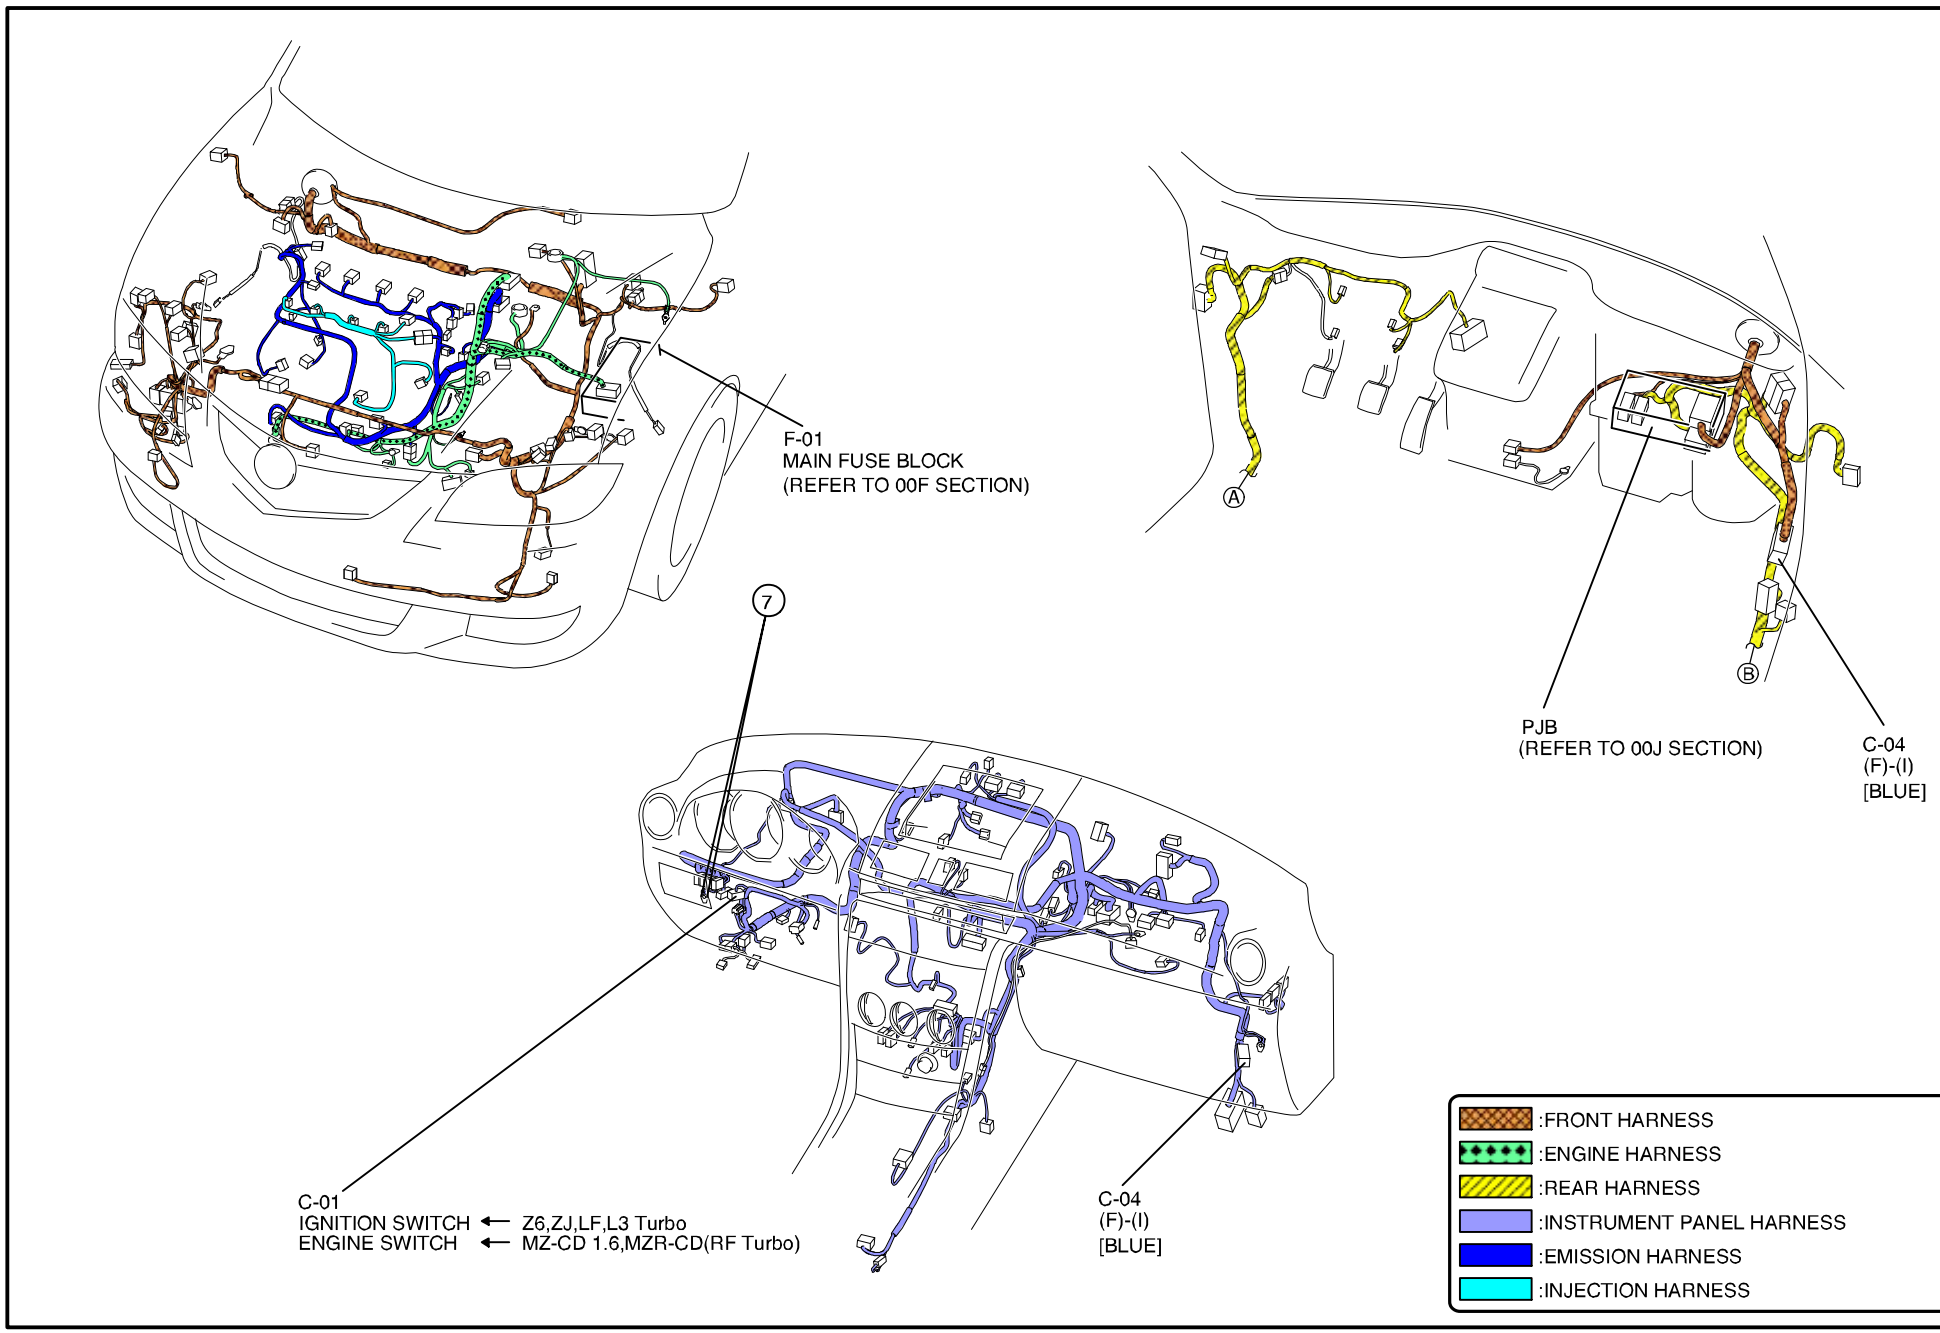

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
Ⓑ
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
7
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

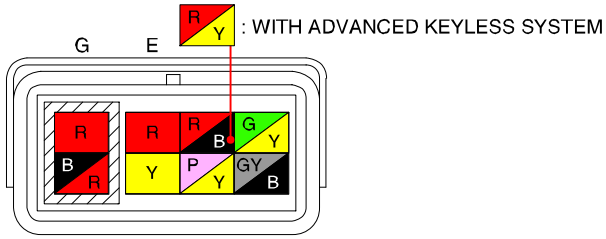


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

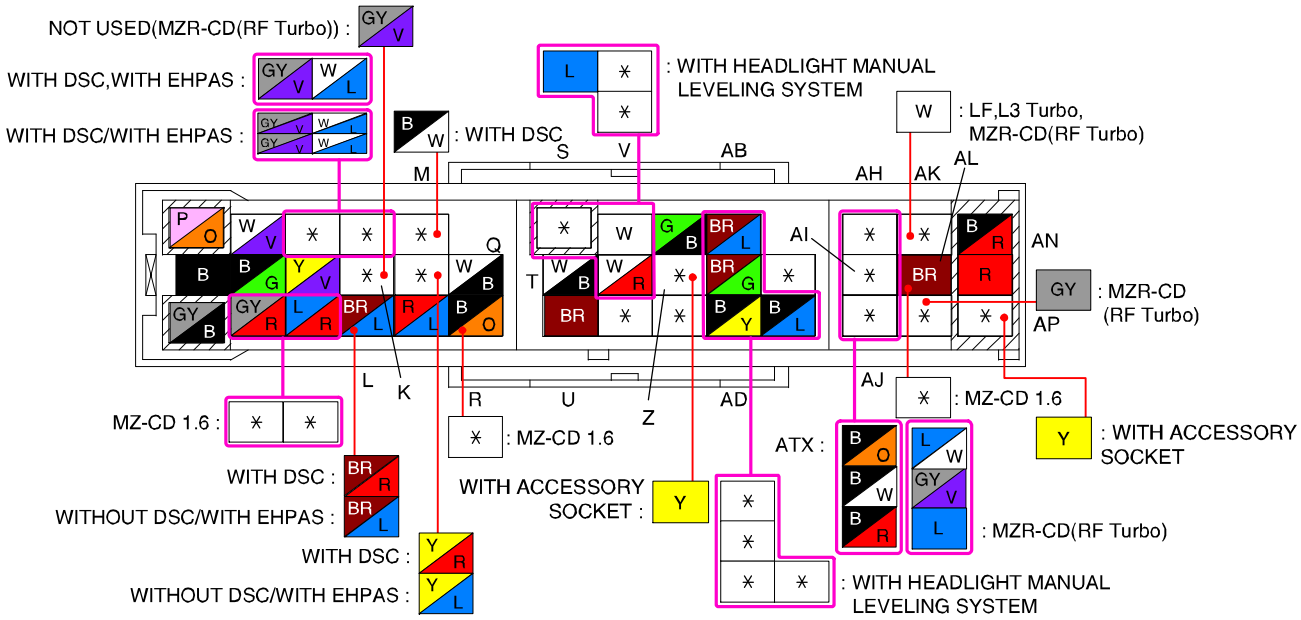


INSTRUMENT PANEL HARNESS

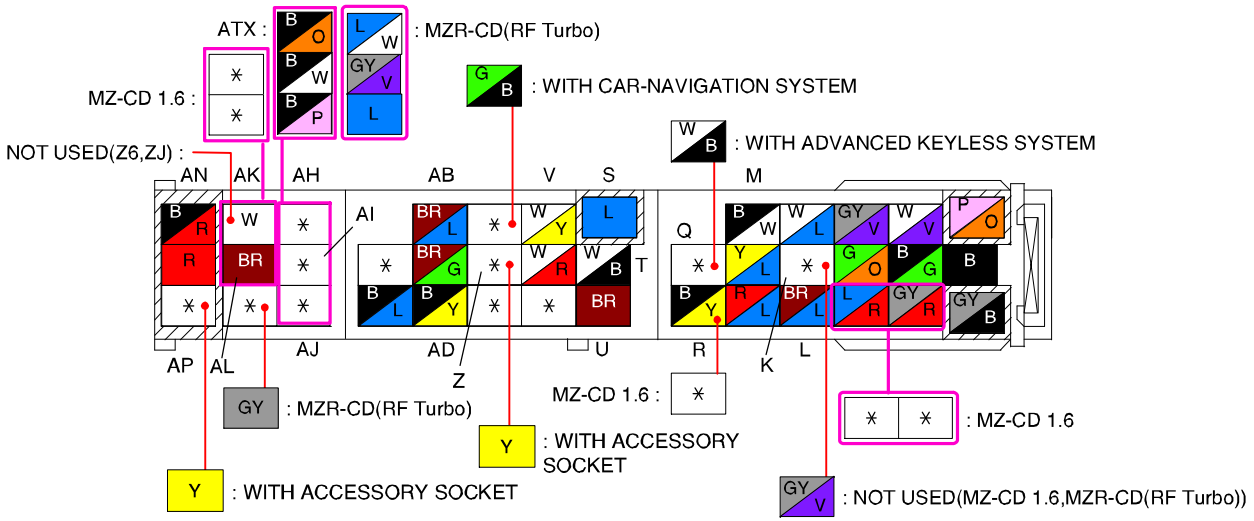


WINDSHIELD WIPER AND WASHER

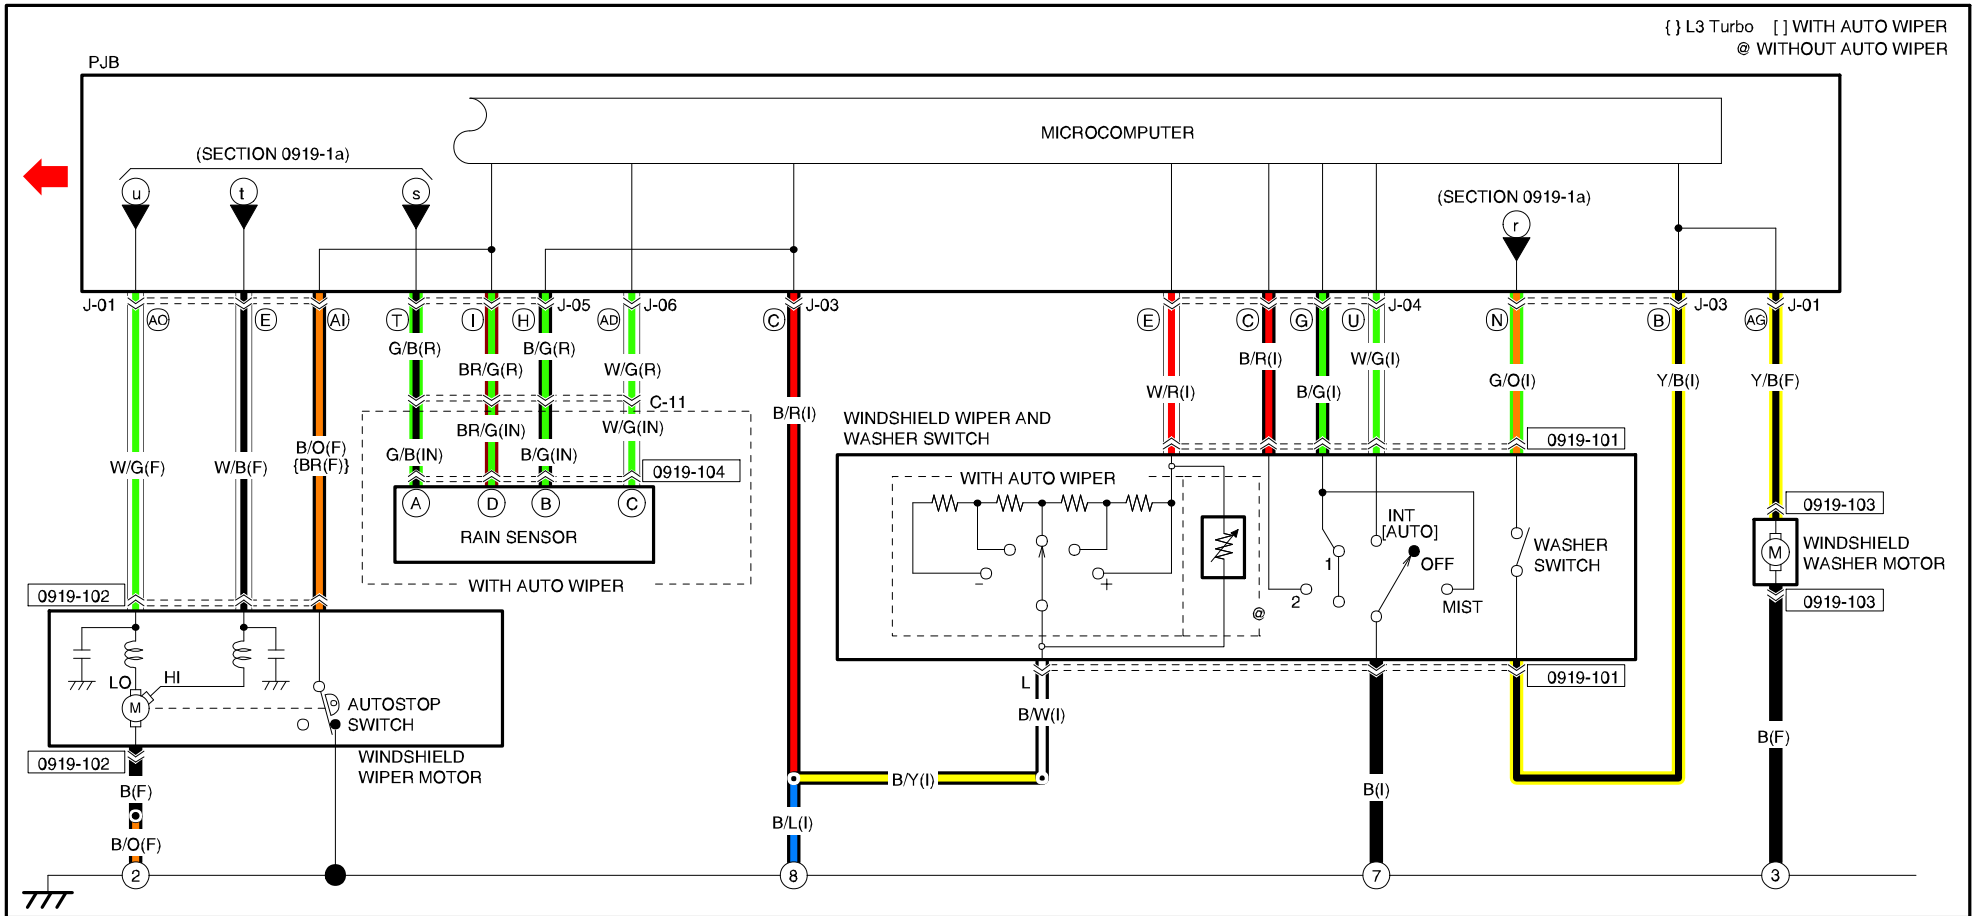


0919-101
WINDSHIELD WIPER AND WASHER SWITCH

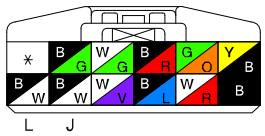


0919-102
WINDSHIELD WIPER MOTOR

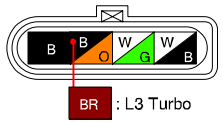


0919-103
WINDSHIELD WASHER MOTOR




0919-104
RAIN SENSOR



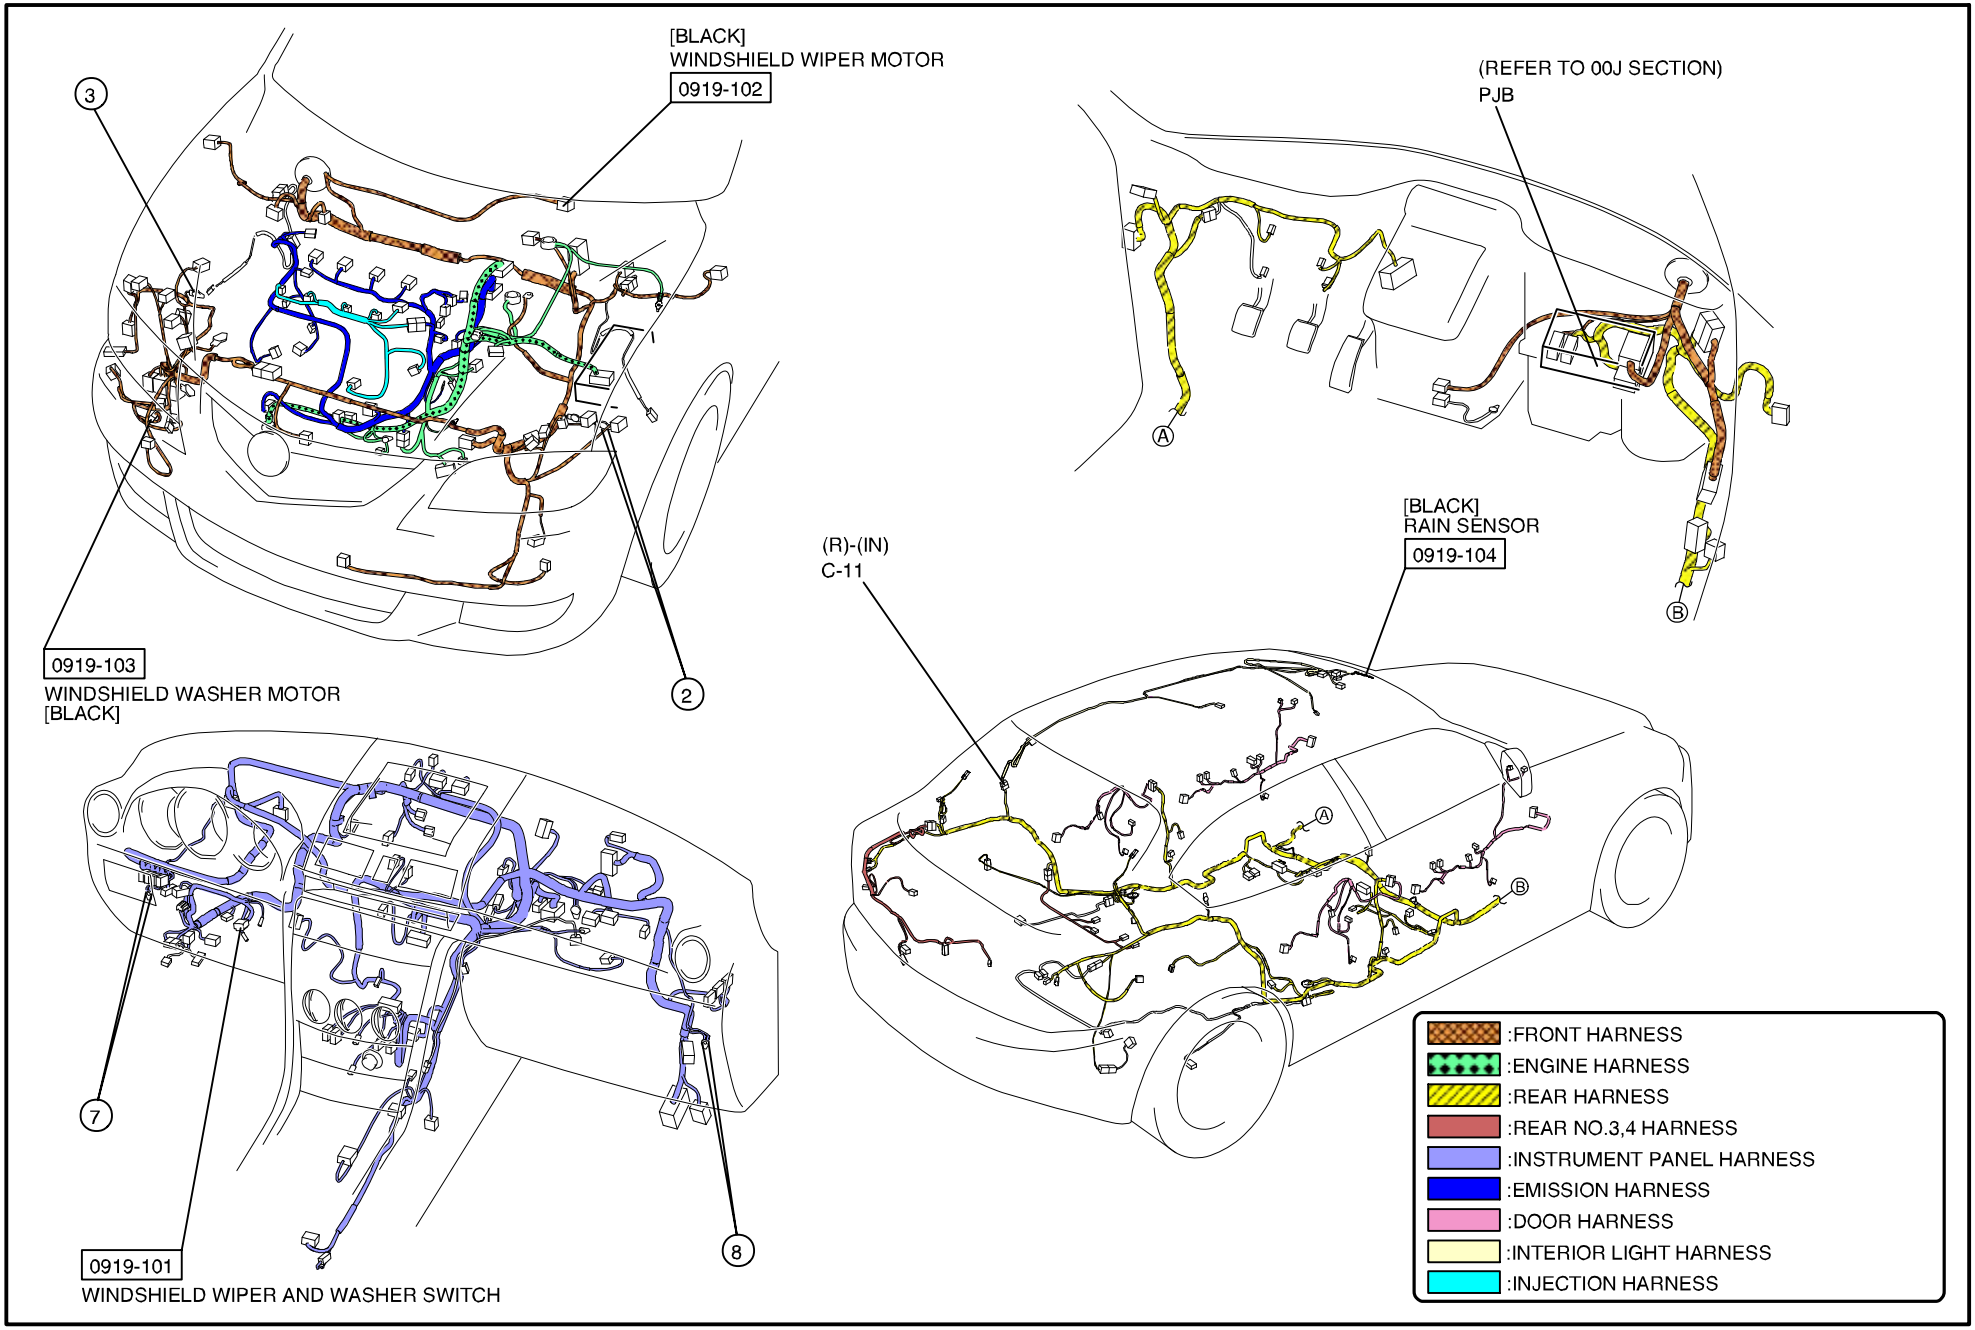

[BLACK]
WINDSHIELD WIPER MOTOR
0919-102
3
2
0919-103
WINDSHIELD WASHER MOTOR
[BLACK]
(REFER TO 00J SECTION)
PJB
A
B
[BLACK]
RAIN SENSOR
0919-104
(R)-(IN)
C-11
A
B
7
8
0919-101
WINDSHIELD WIPER AND WASHER SWITCH
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-11
REAR HARNESS-INTERIOR LIGHT HARNESS


REAR HARNESS

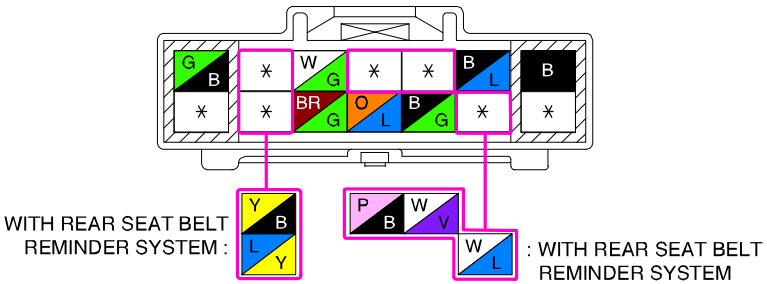

INTERIOR LIGHT HARNESS

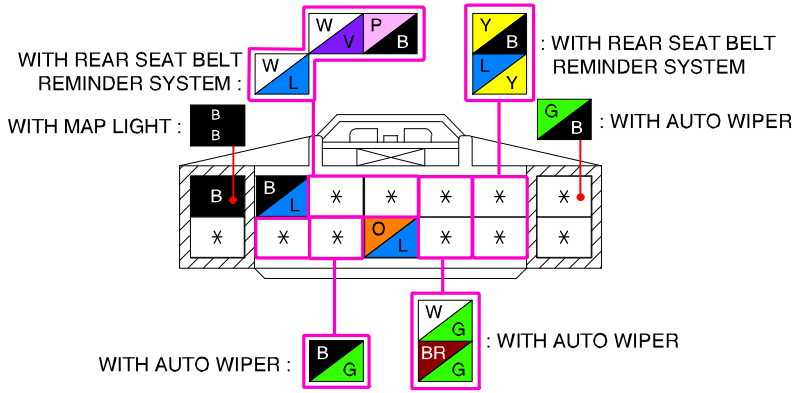


REAR WIPER AND WASHER

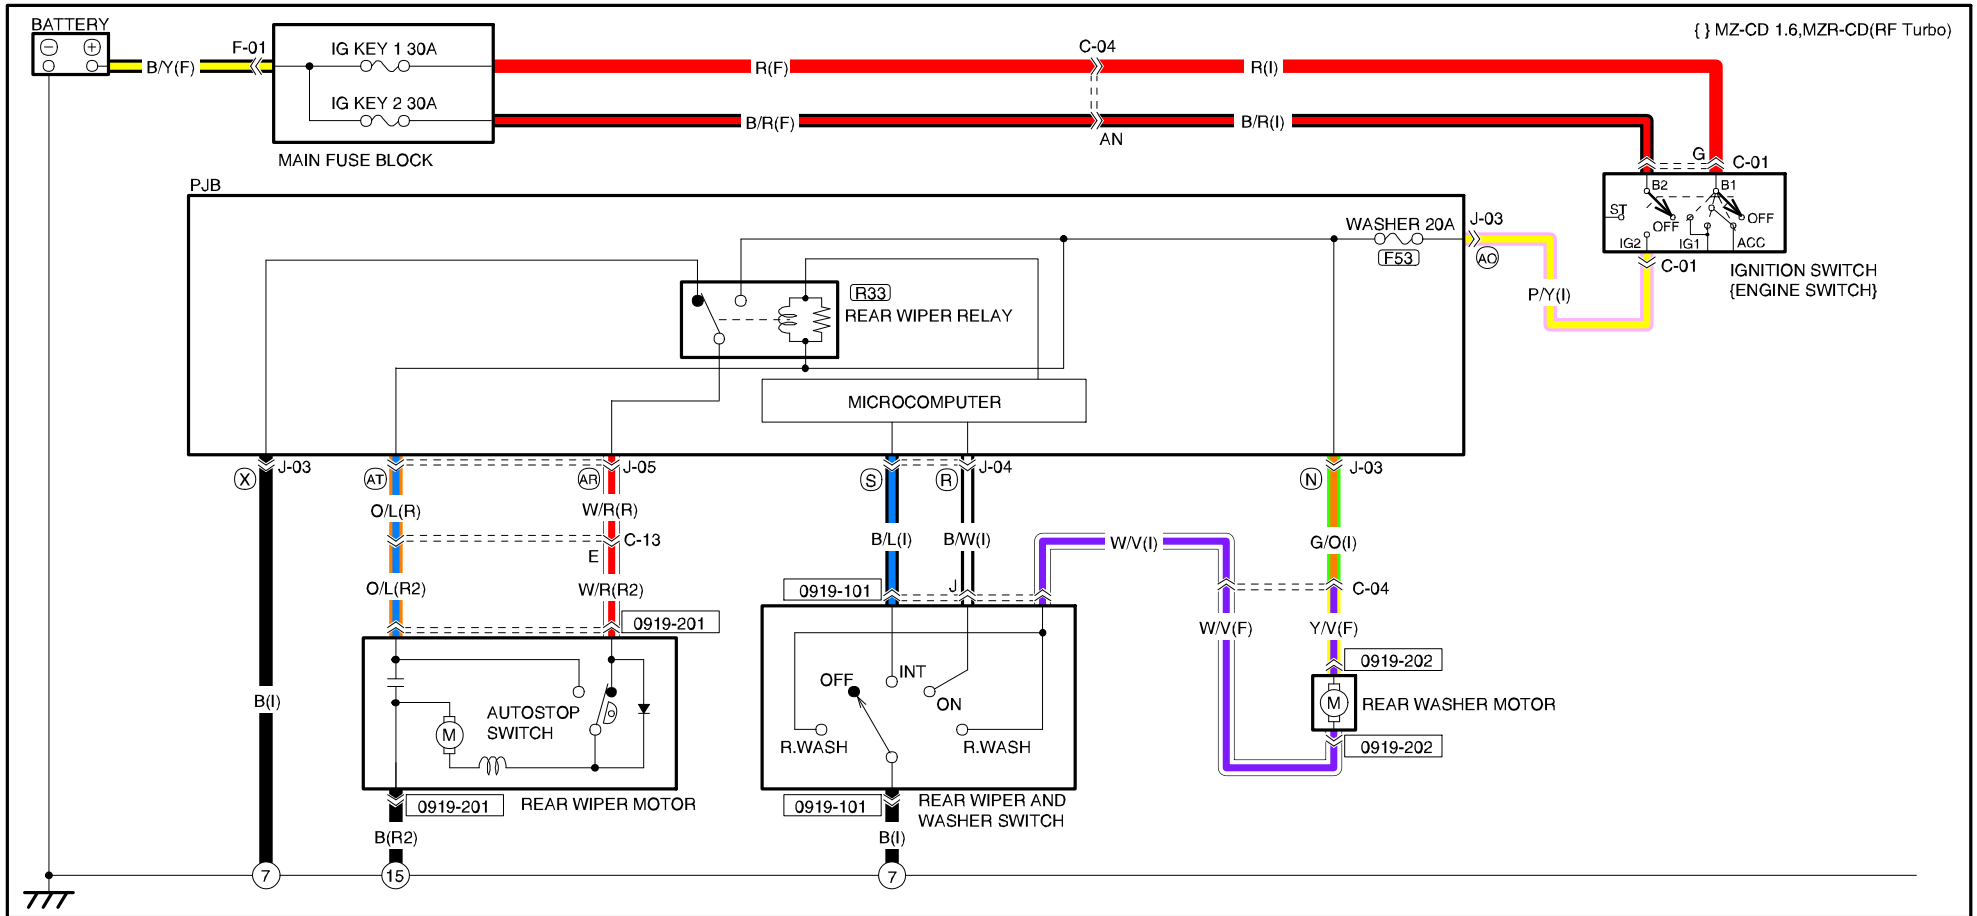


0919-201
REAR WIPER MOTOR




0919-202
REAR WASHER MOTOR




0919-101
REAR WIPER AND WASHER SWITCH

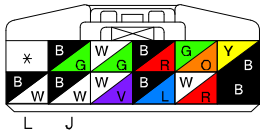

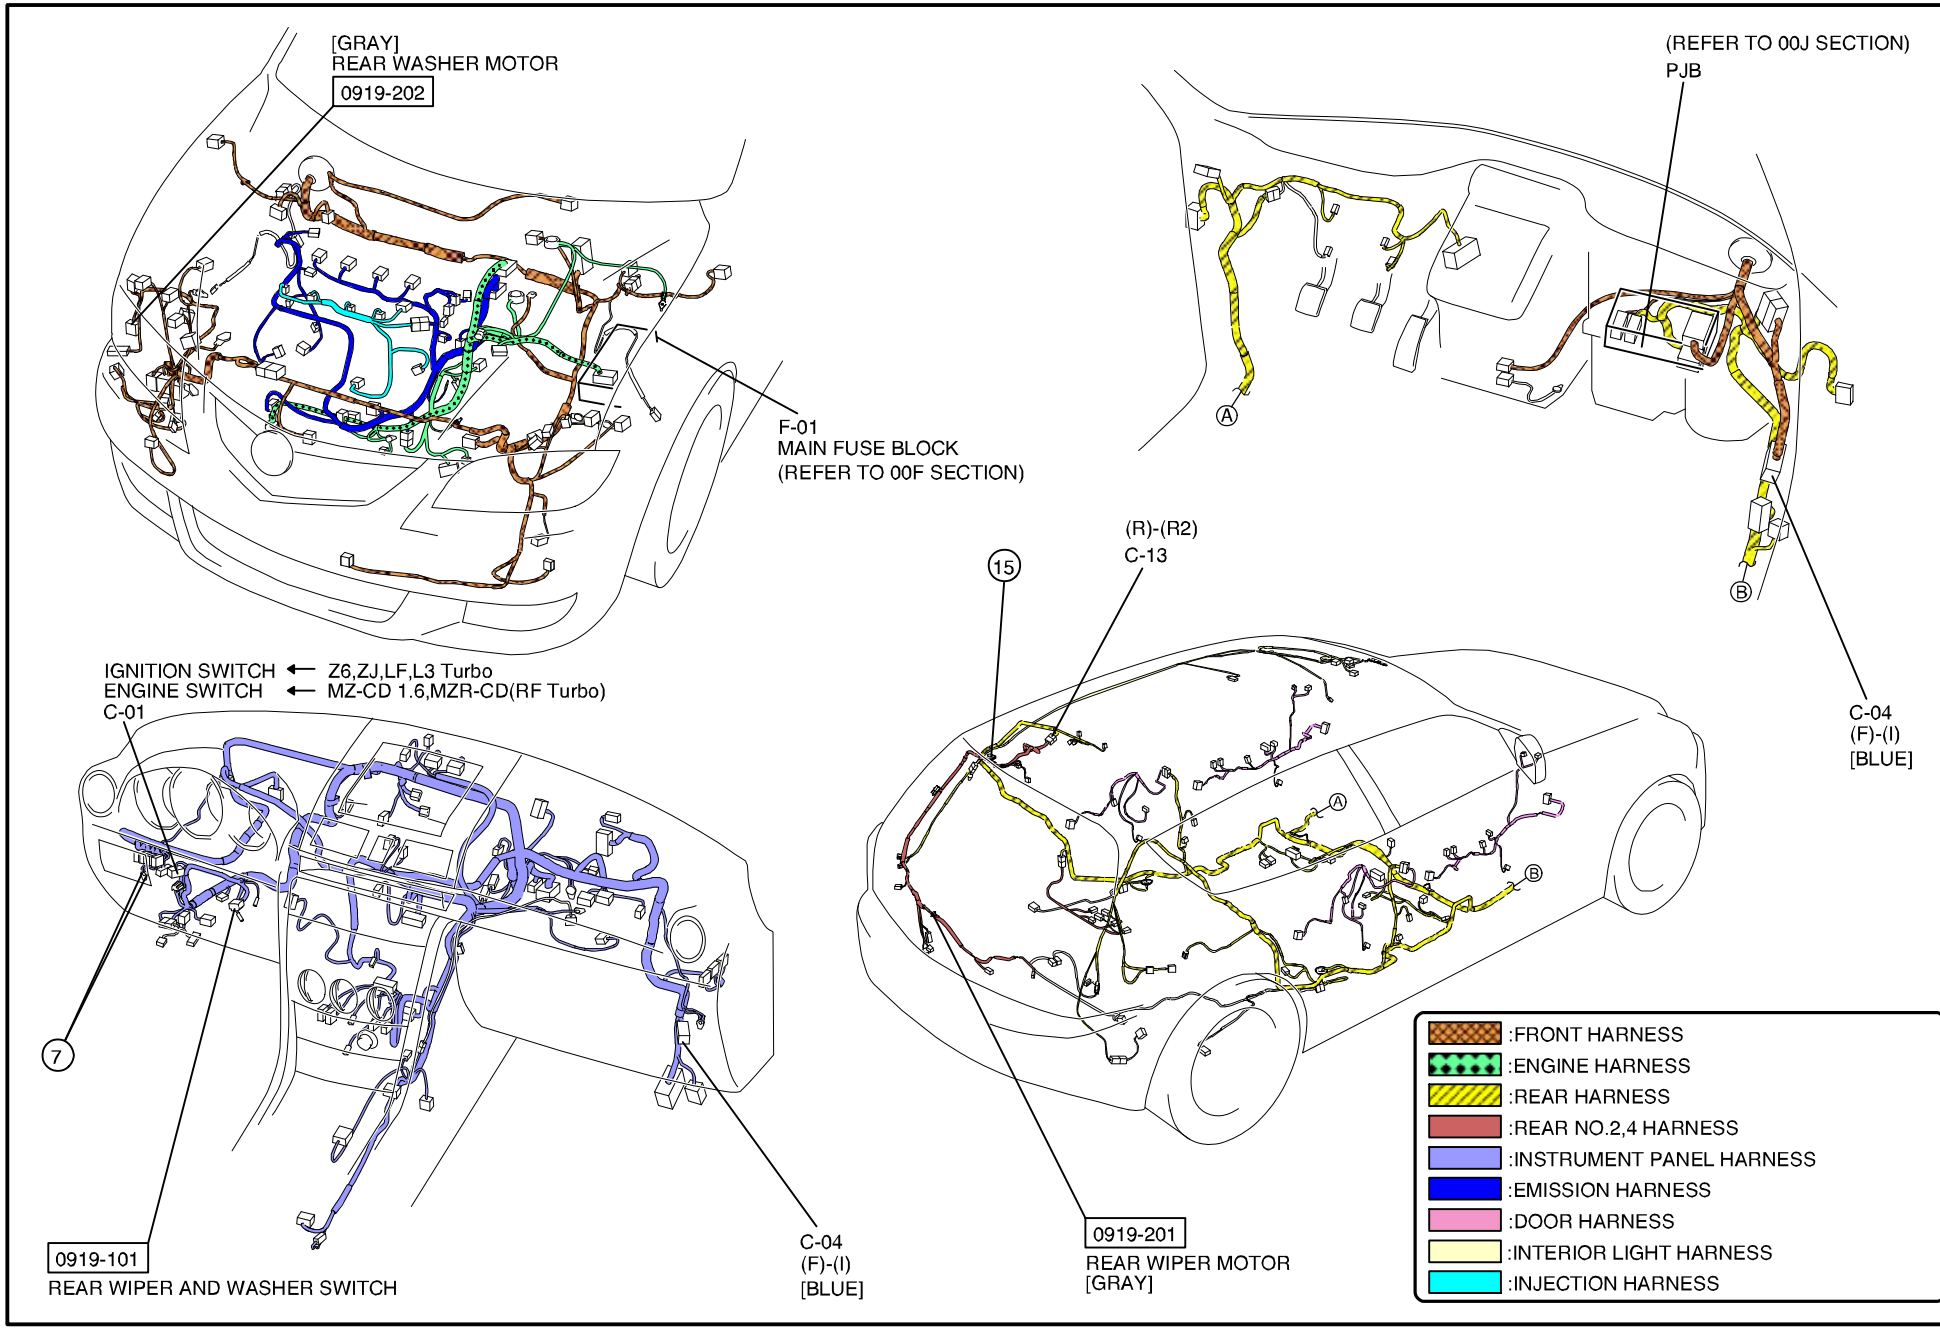

[GRAY]
REAR WASHER MOTOR
0919-202
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
(REFER TO 00J SECTION)
PJB
A
B
C-04
(F)-(I)
[BLUE]
(R)-(R2)
C-13
15
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-01
7
0919-101
REAR WIPER AND WASHER SWITCH
C-04
(F)-(I)
[BLUE]
0919-201
REAR WIPER MOTOR
[GRAY]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ← MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

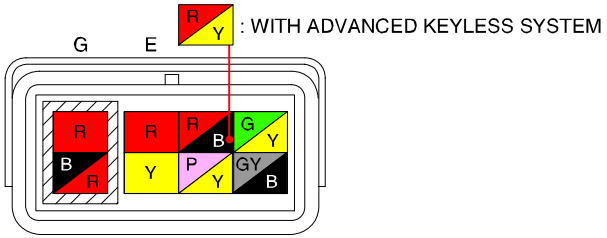


C-13
REAR HARNESS-REAR NO.2 HARNESS

REAR HARNESS

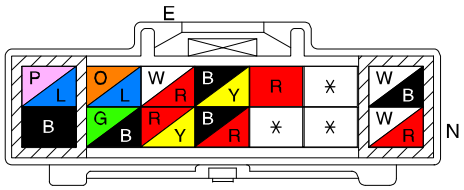


REAR NO.2 HARNESS

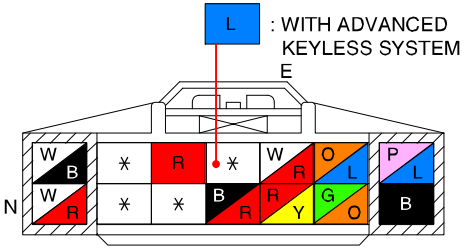


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

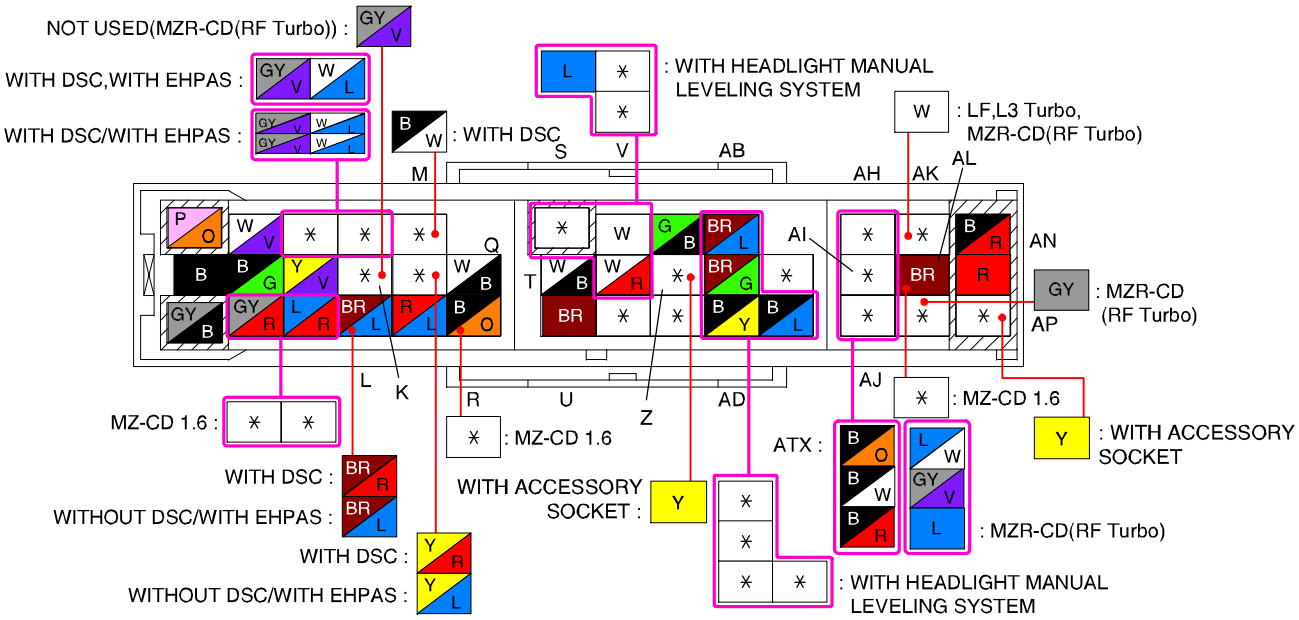


INSTRUMENT PANEL HARNESS

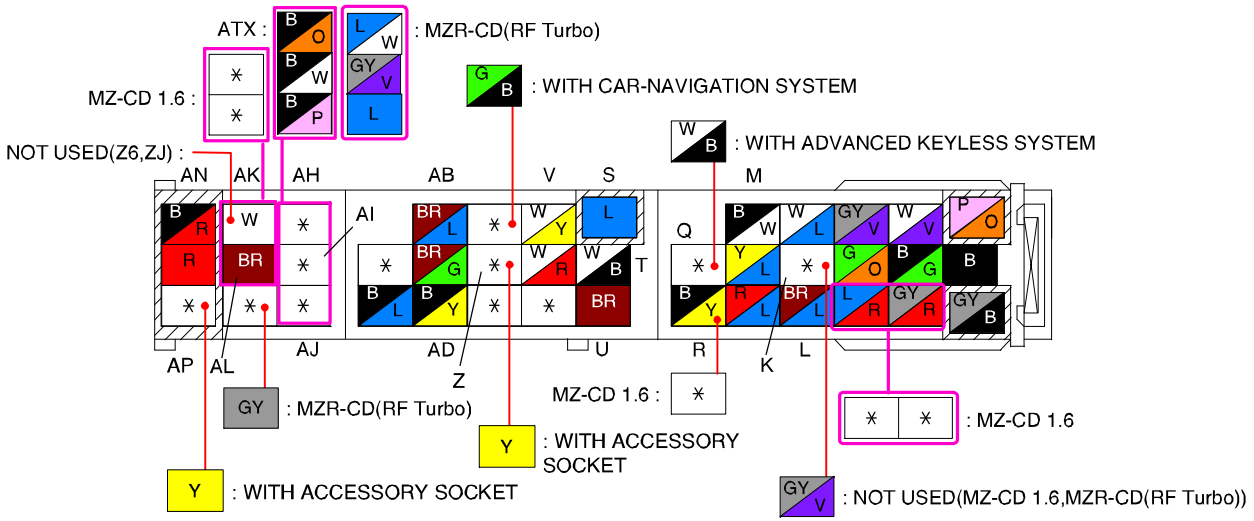


HEADLIGHT CLEANER

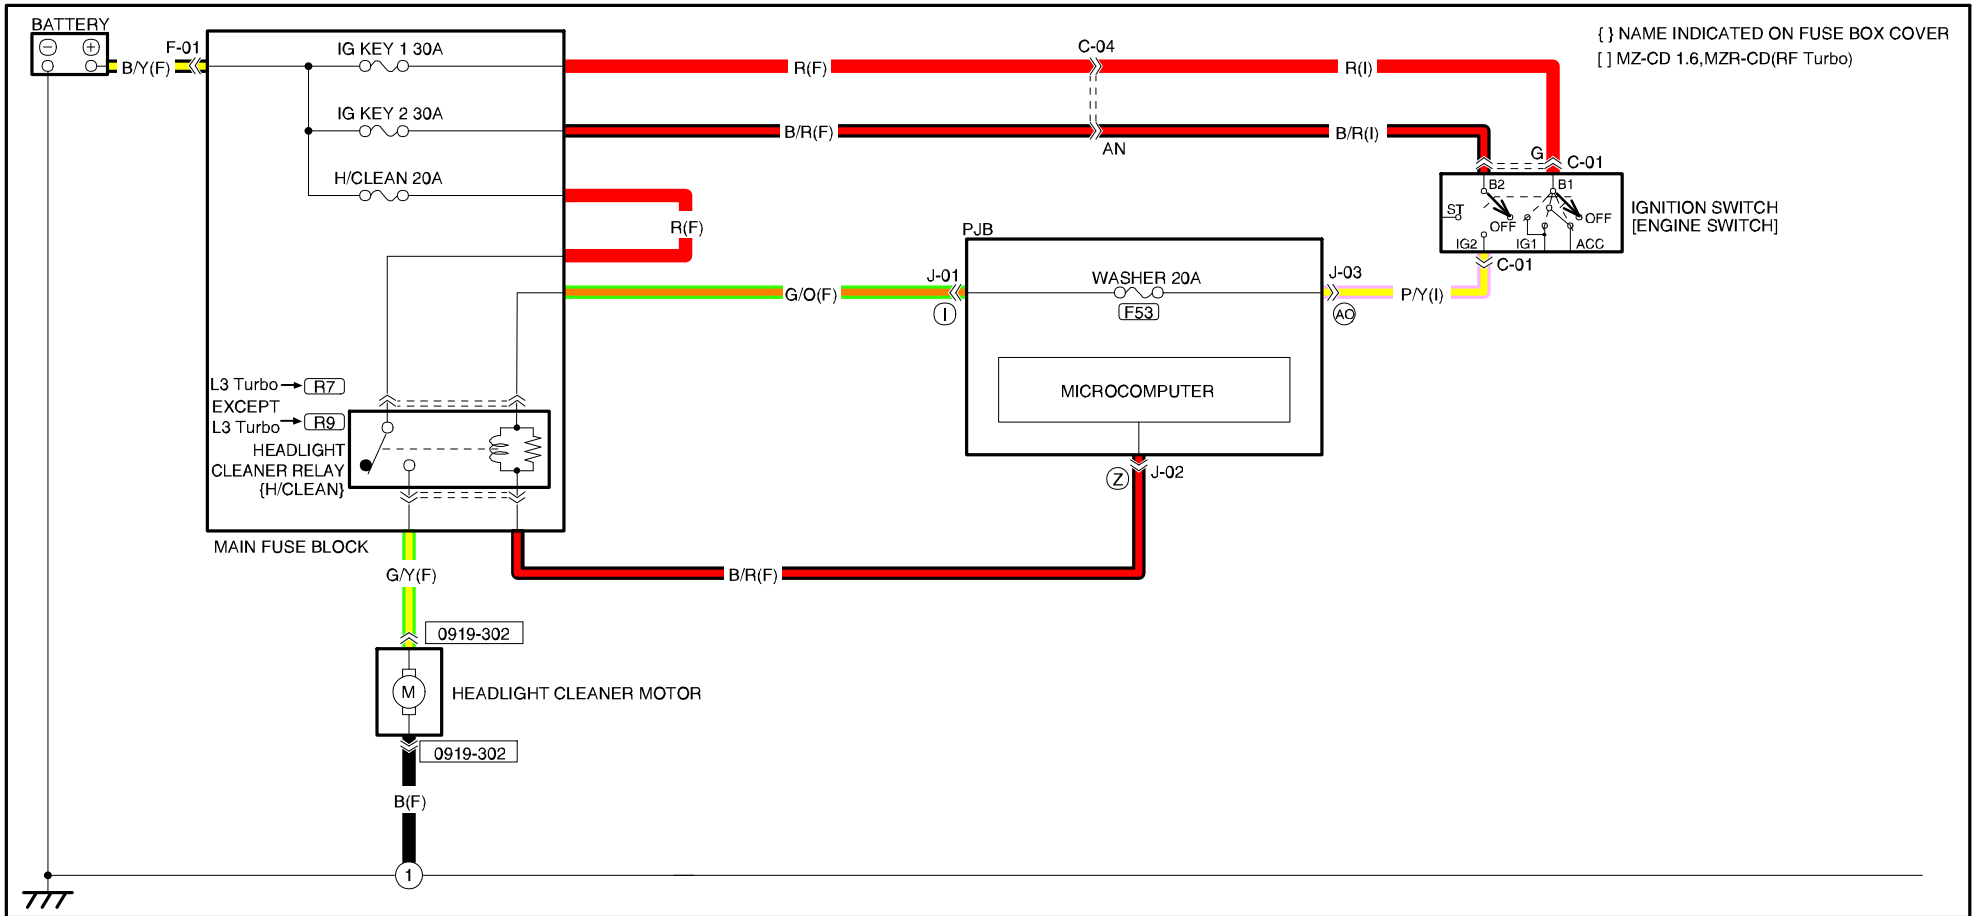


0919-302
HEADLIGHT CLEANER MOTOR



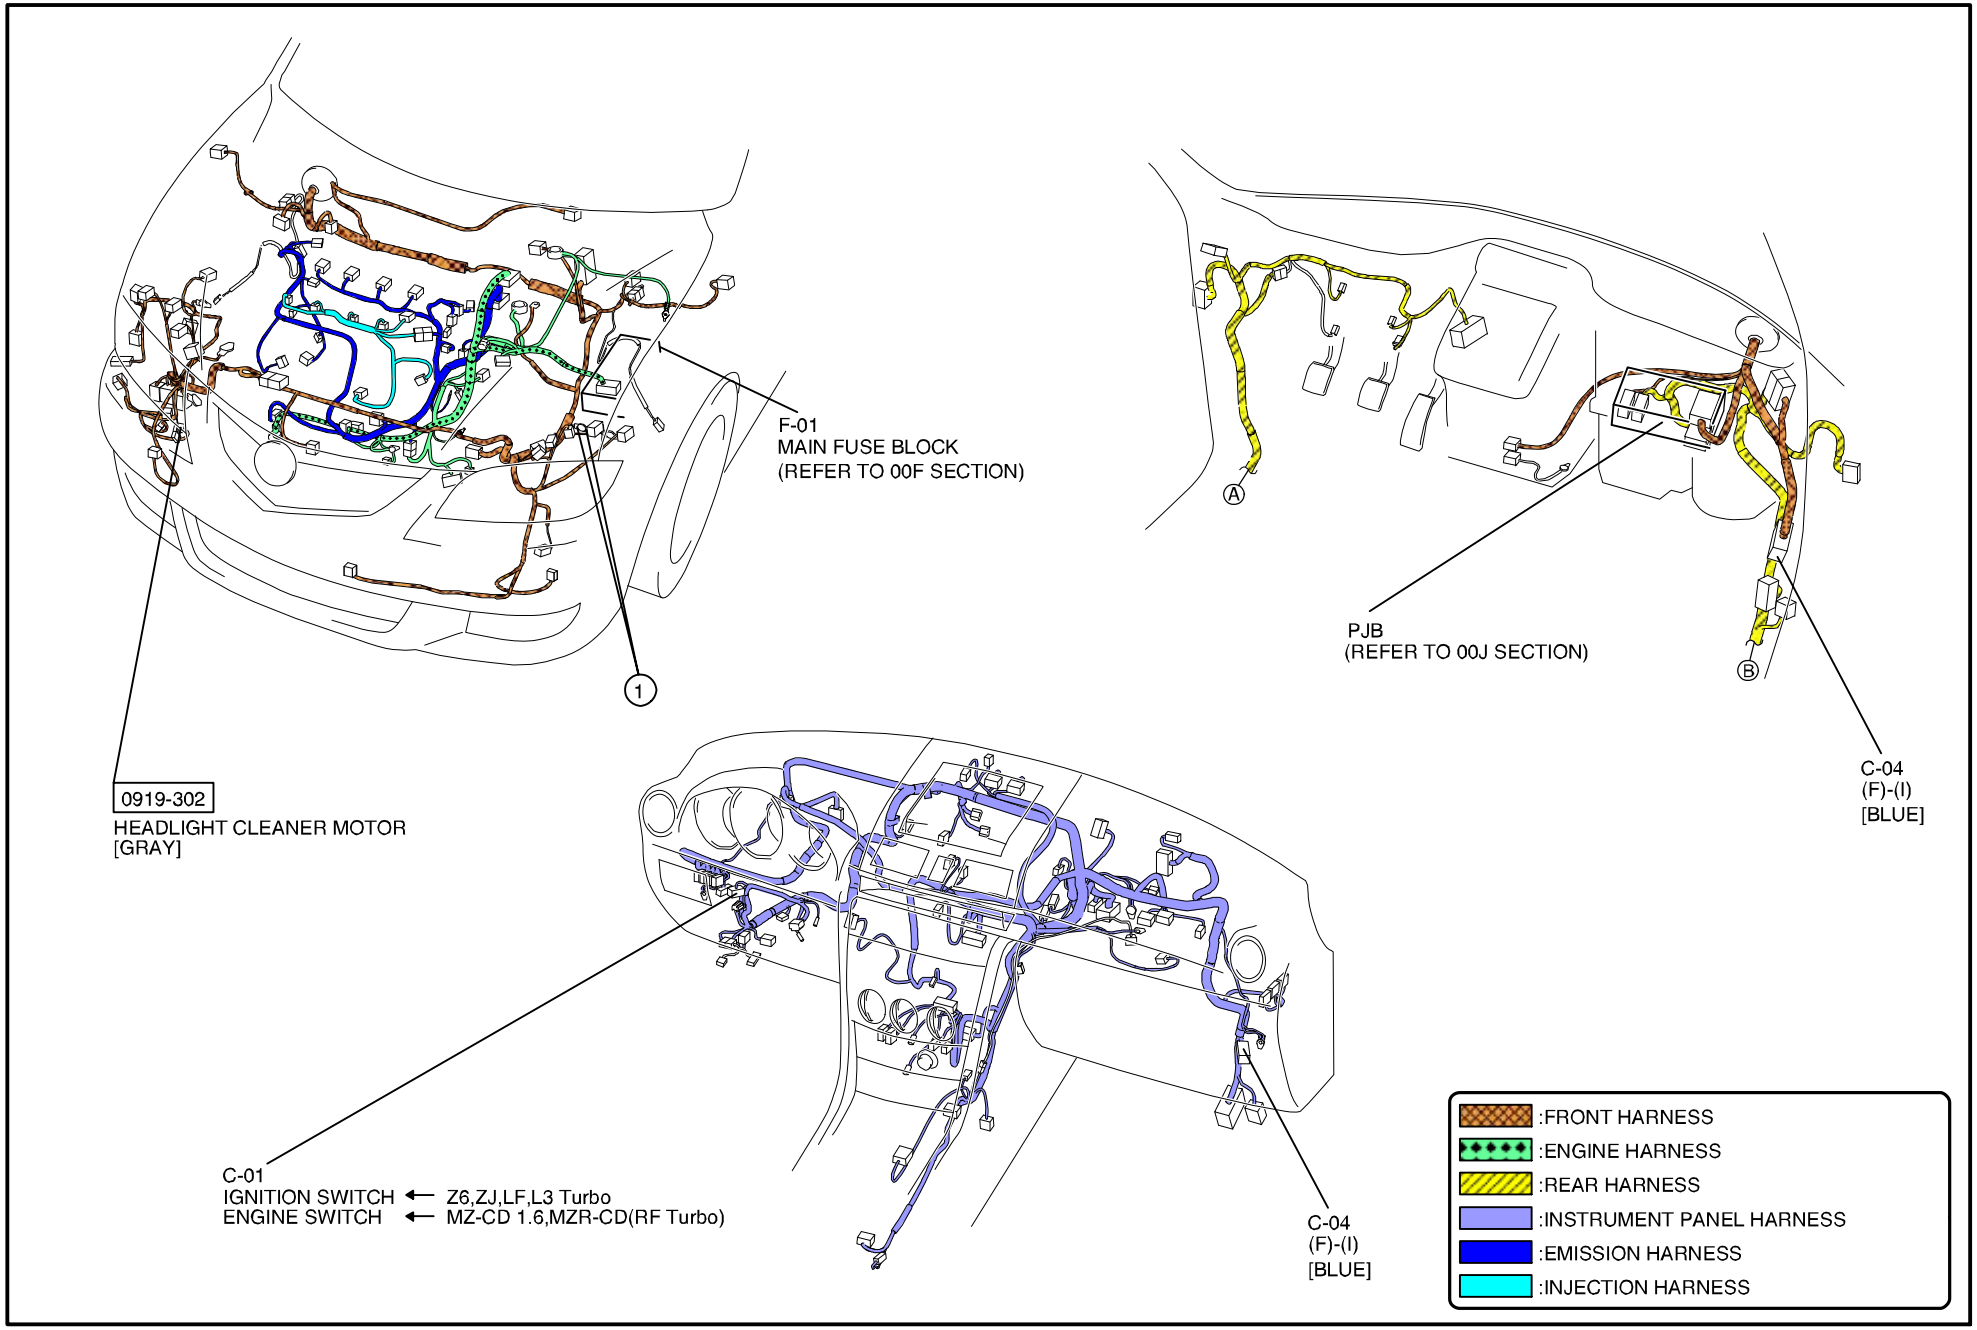

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
1
A
PJB
(REFER TO 00J SECTION)
B
C-04
(F)-(I)
[BLUE]
0919-302
HEADLIGHT CLEANER MOTOR
[GRAY]
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

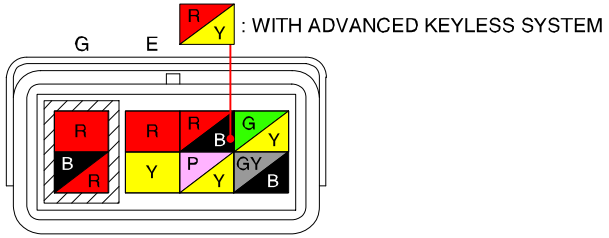


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

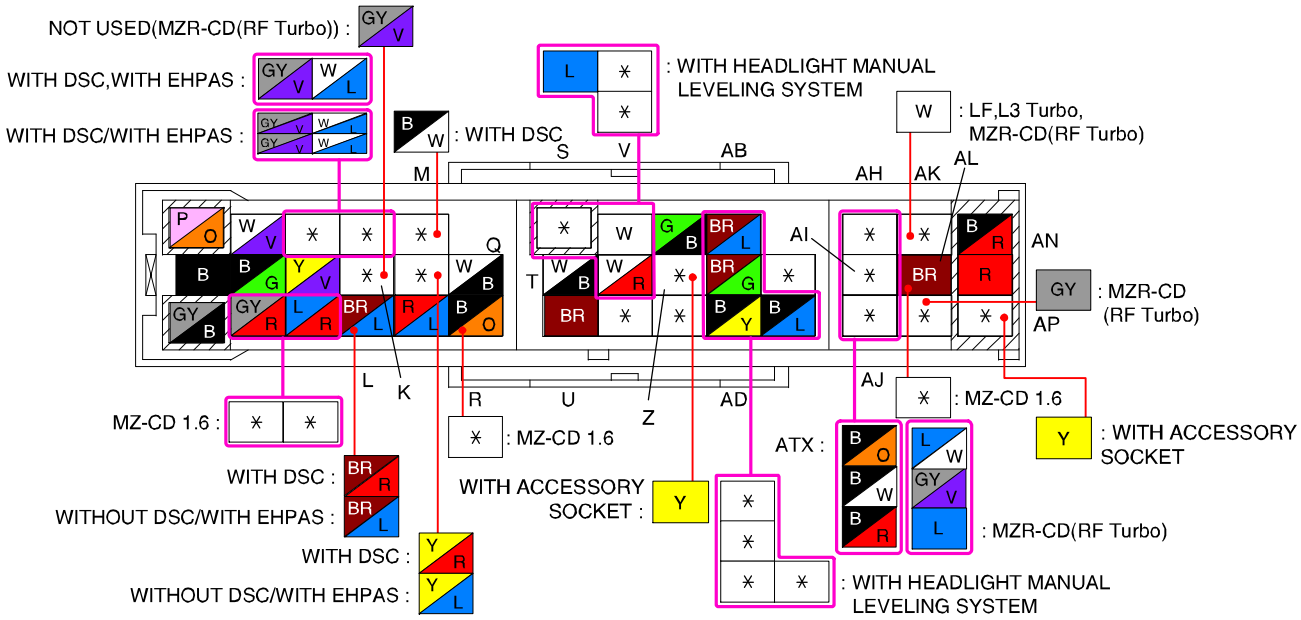

INSTRUMENT PANEL HARNESS

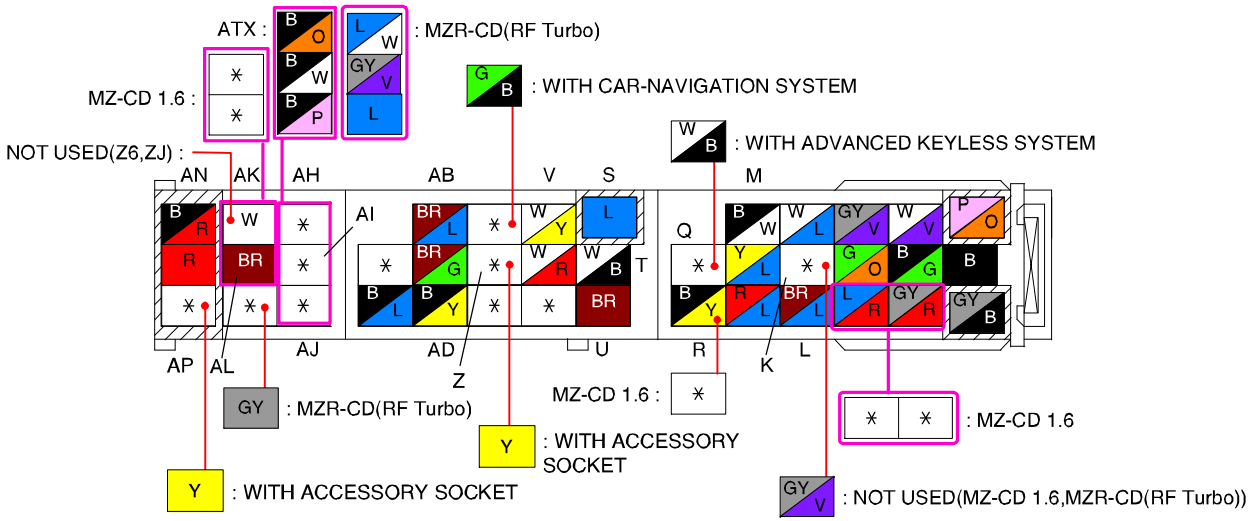

ACCESSORY SOCKET/CIGARETTE LIGHTER

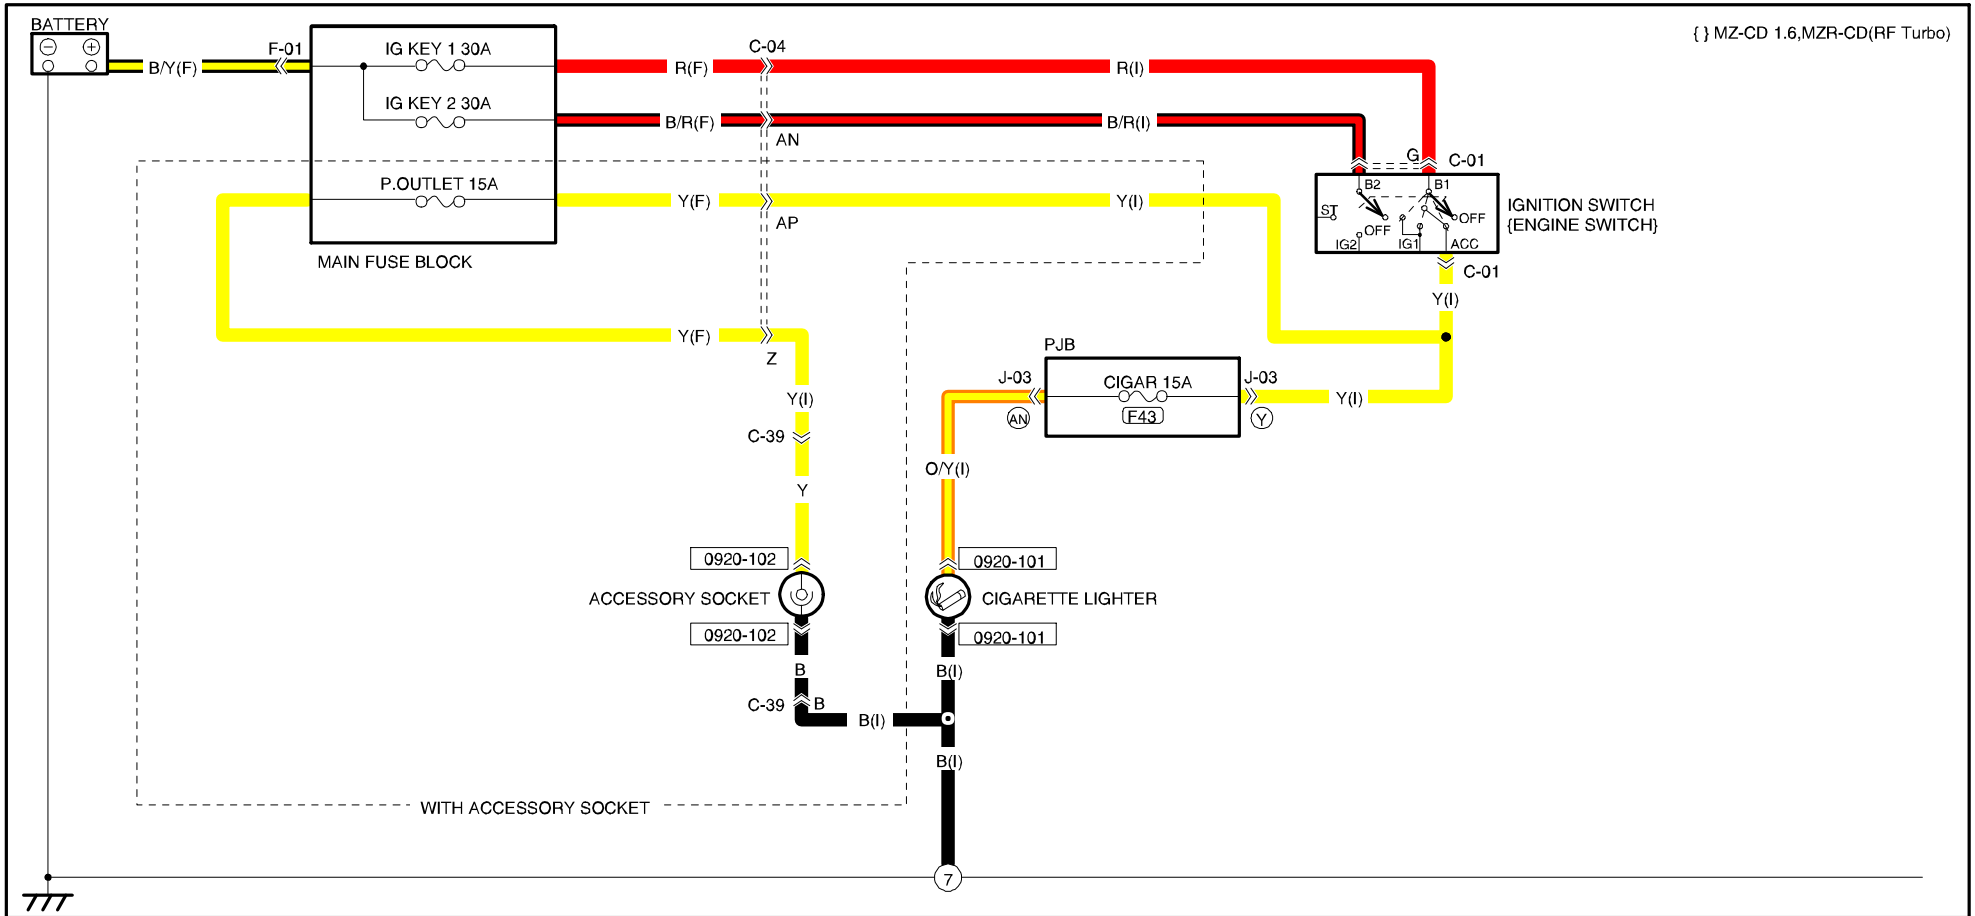


0920-101
CIGARETTE LIGHTER




0920-102
ACCESSORY SOCKET

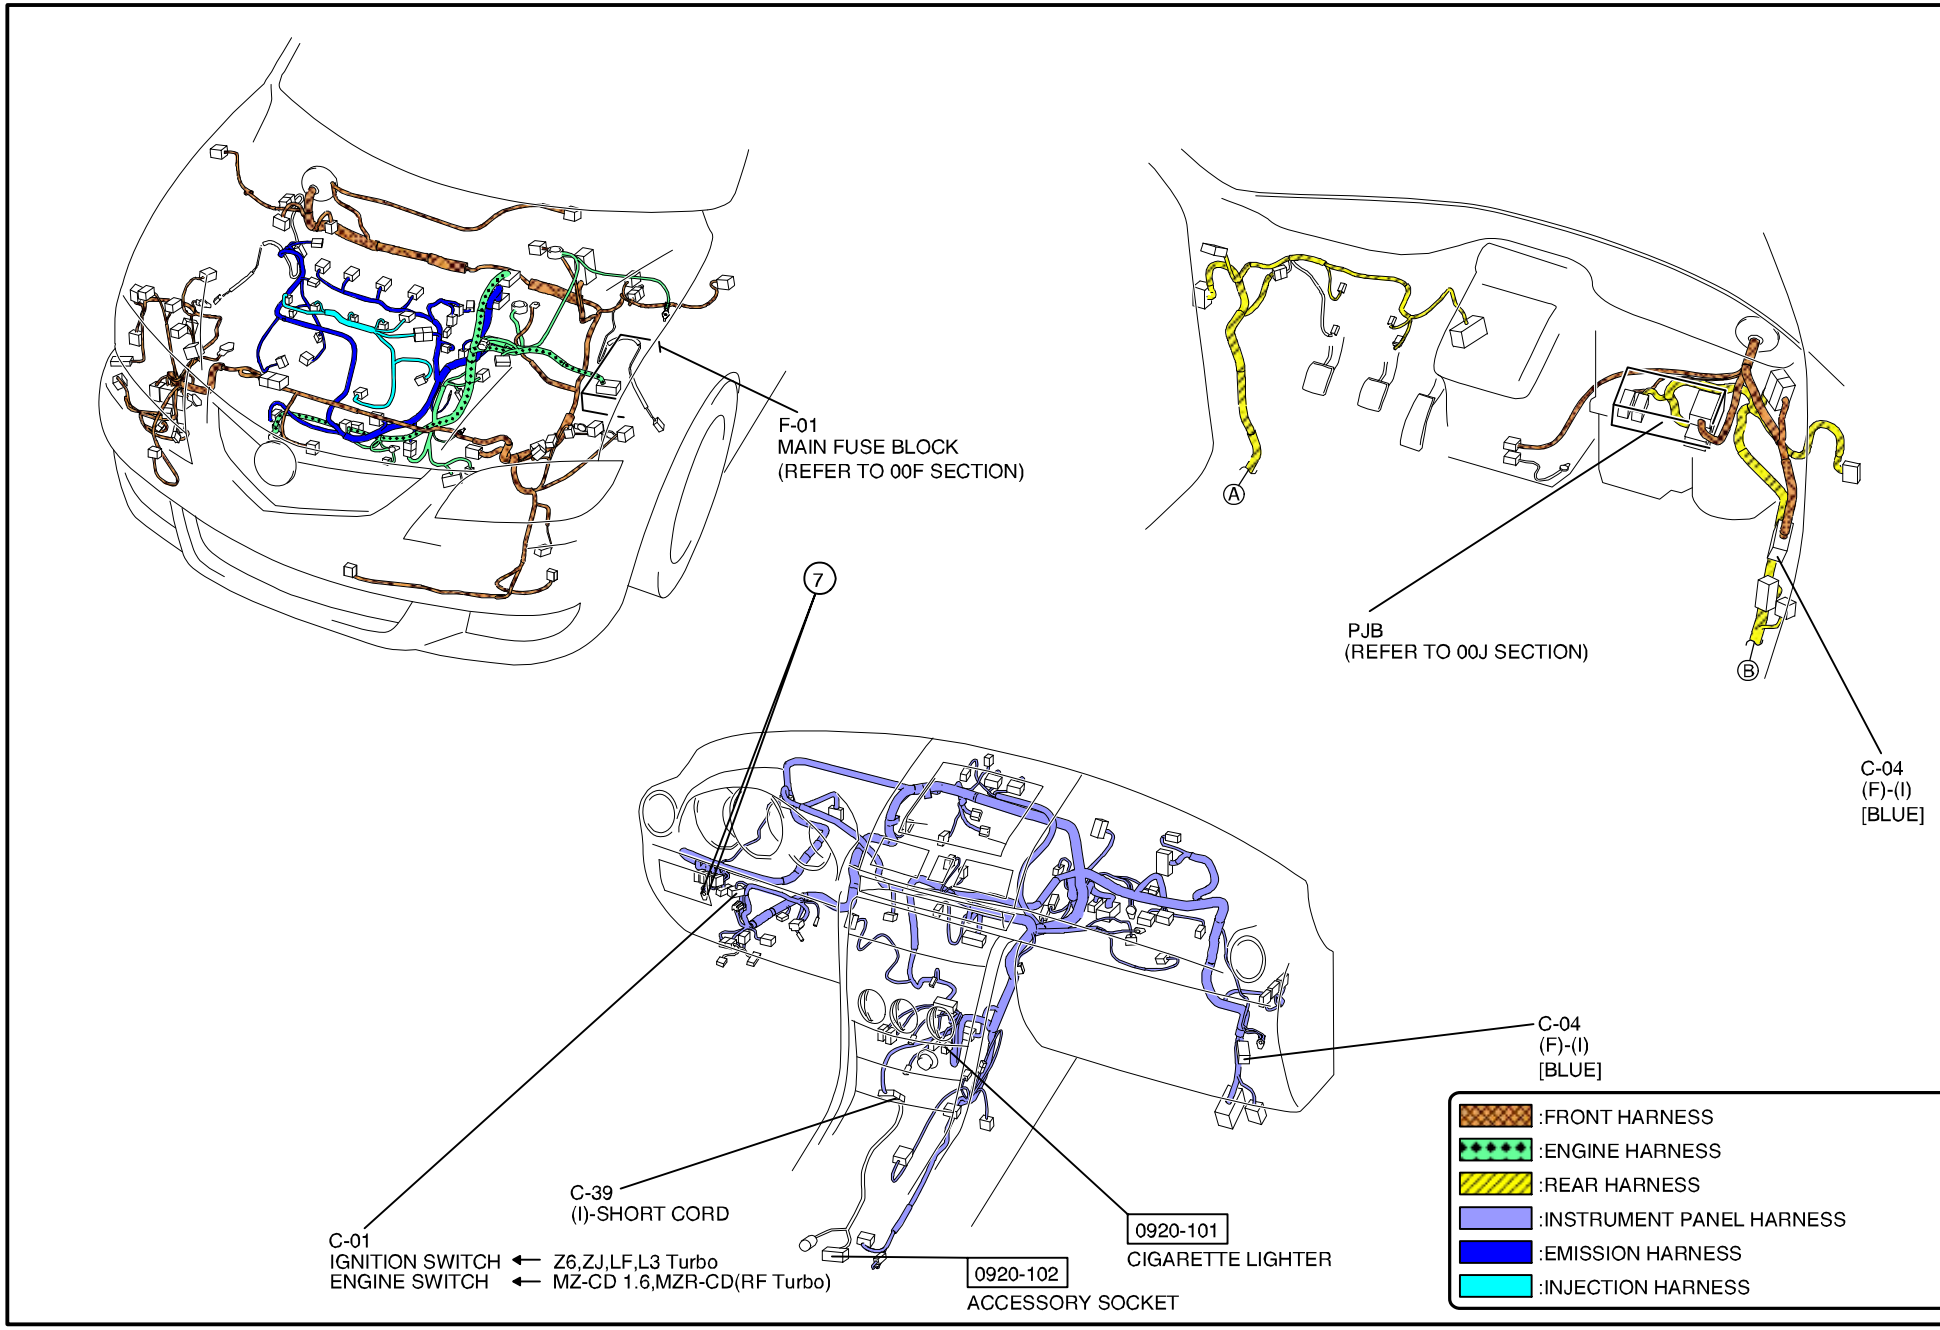



F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
PJB
(REFER TO 00J SECTION)
Ⓑ
C-04
(F)-(I)
[BLUE]
7
C-04
(F)-(I)
[BLUE]
C-39
(I)-SHORT CORD
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
0920-102
ACCESSORY SOCKET
0920-101
CIGARETTE LIGHTER
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

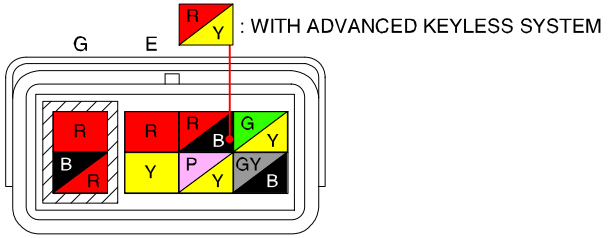


C-39
INSTRUMENT PANEL HARNESS-SHORT CORD

INSTRUMENT PANEL HARNESS

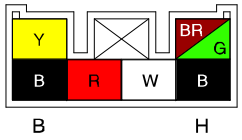


SHORT CORD

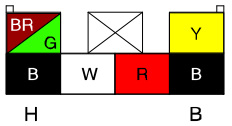


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

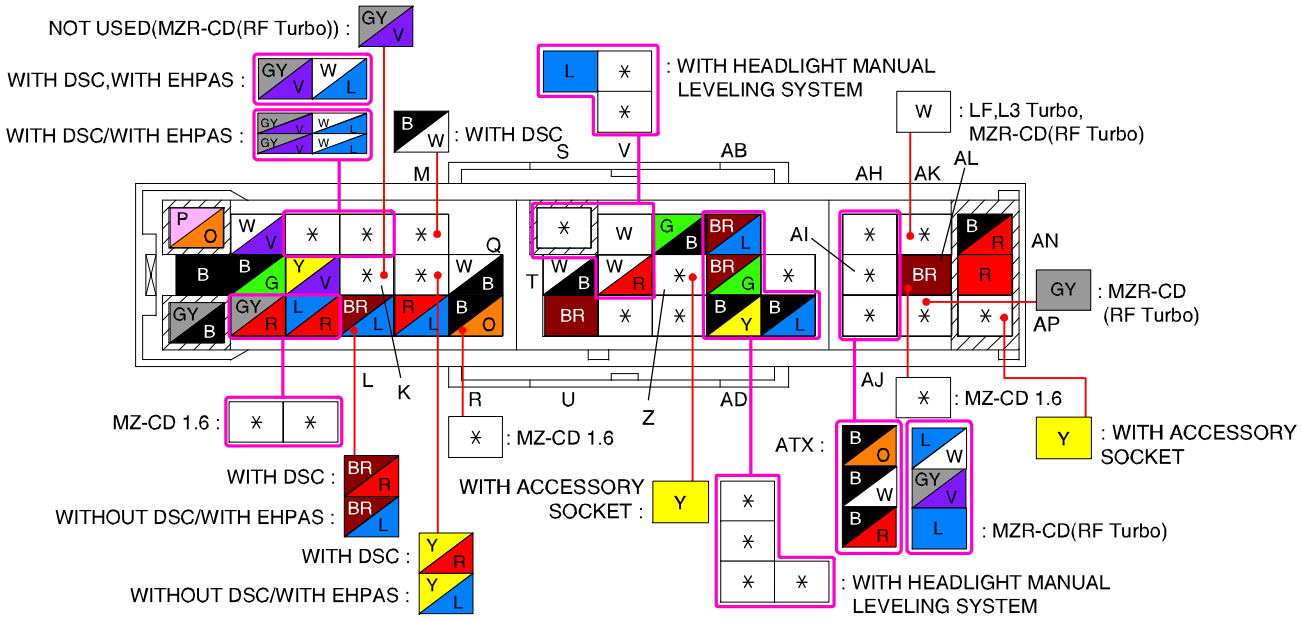


INSTRUMENT PANEL HARNESS

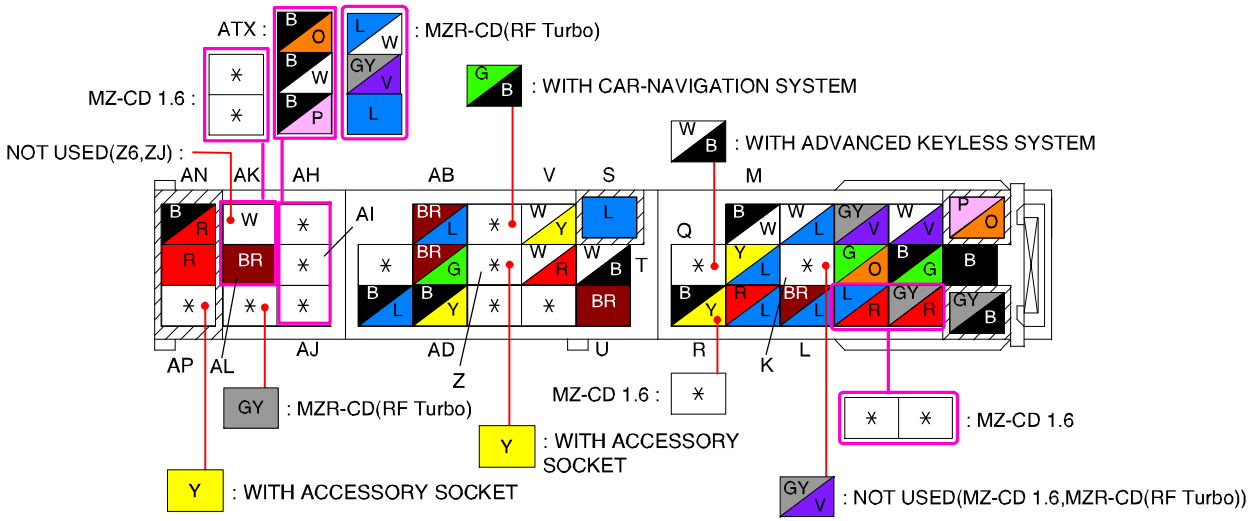


AUDIO SYSTEM (STANDARD TYPE AUDIO/WITHOUT CAR-NAVIGATION SYSTEM)

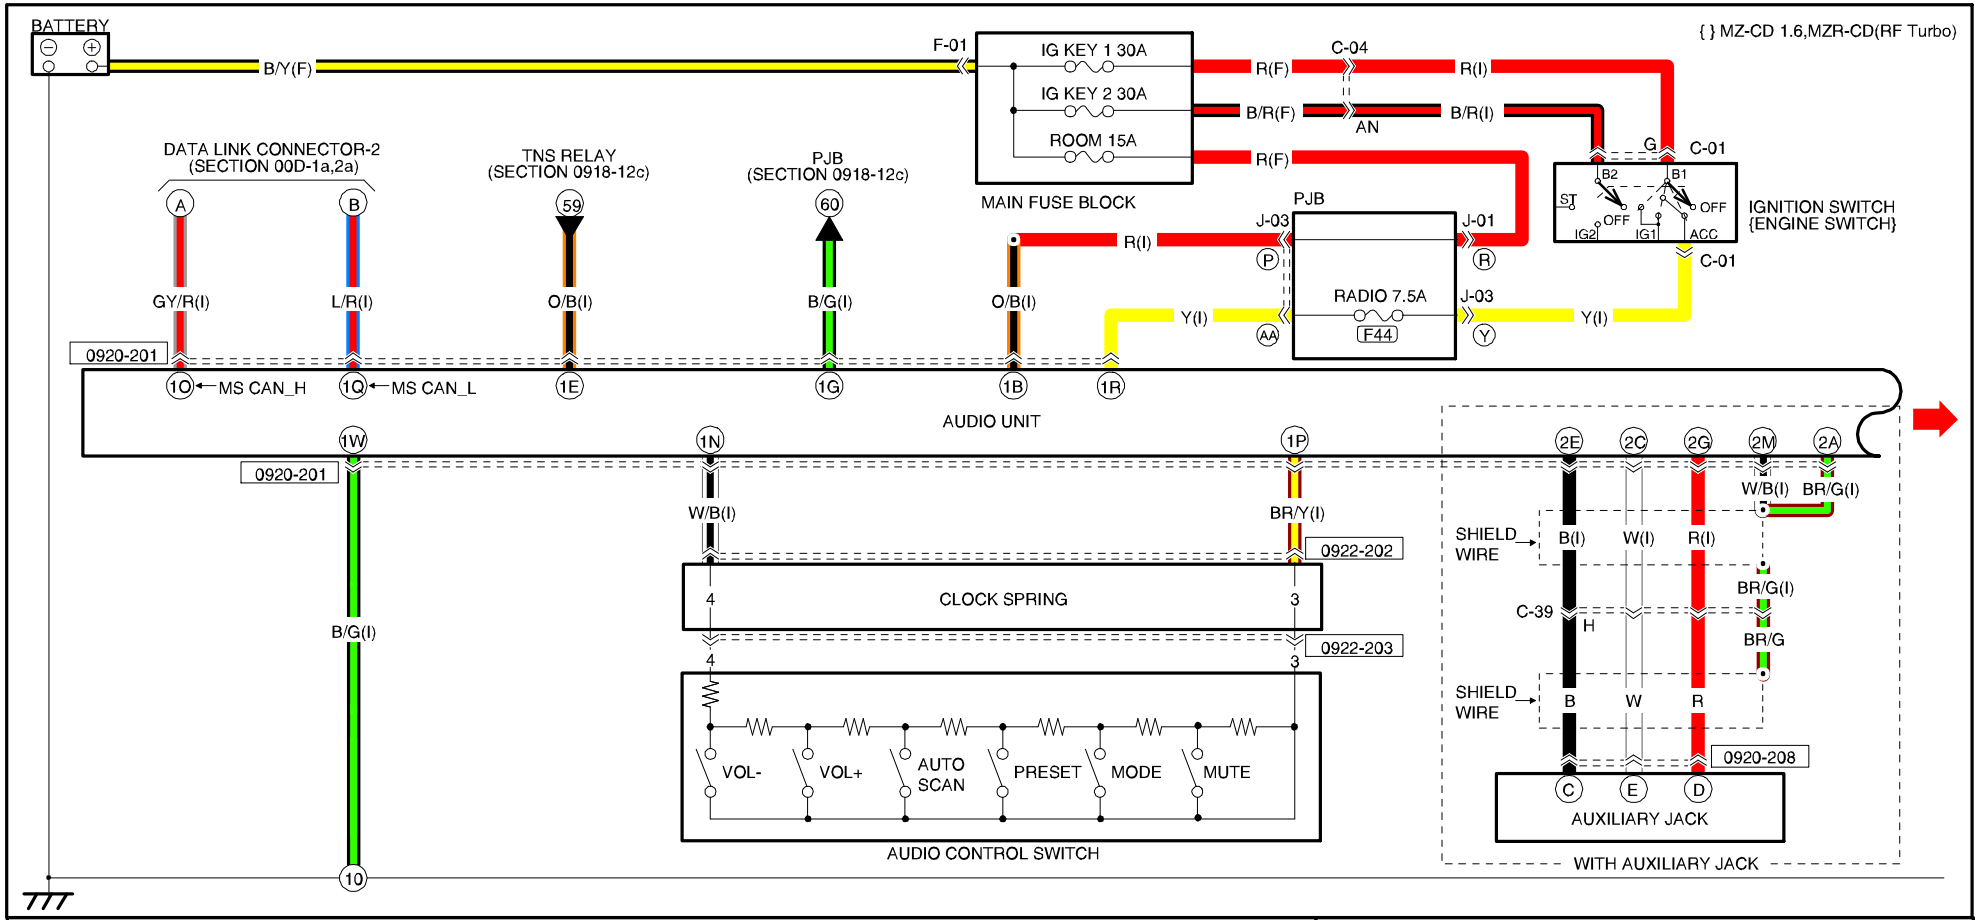


0920-201
AUDIO UNIT

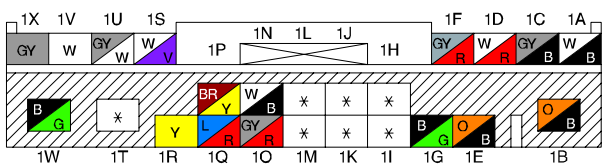

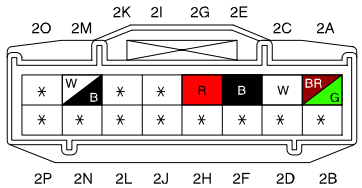


0922-202
INSTRUMENT PANEL HARNESS-CLOCK SPRING

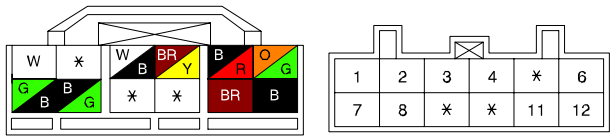


TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0920-208
AUXILIARY JACK




0922-203
AUDIO CONTROL SWITCH



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

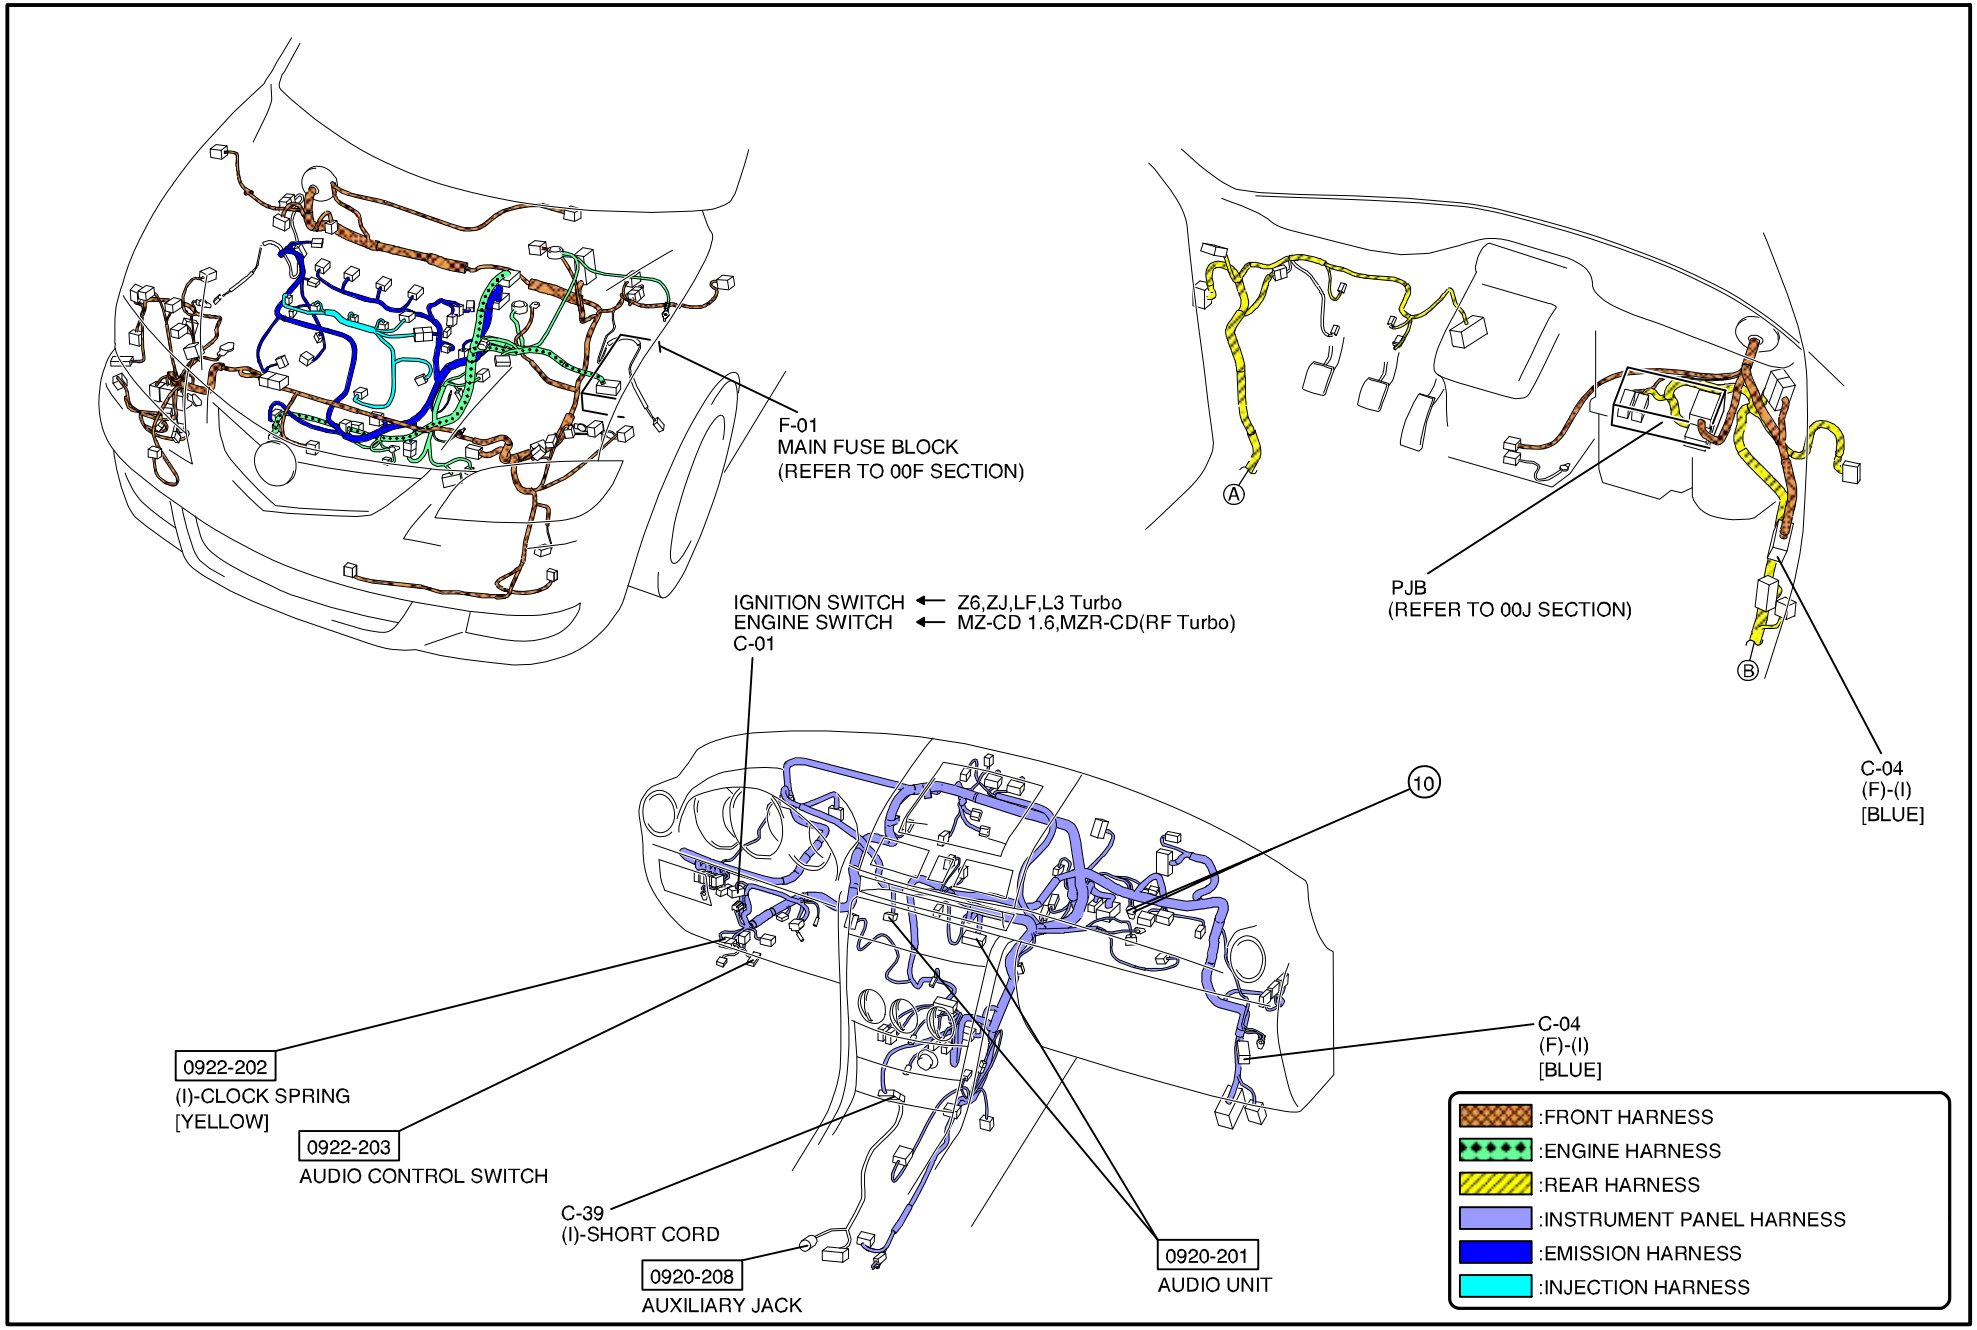

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
PJB
(REFER TO 00J SECTION)
Ⓑ
C-04
(F)-(I)
[BLUE]
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-01
10
C-04
(F)-(I)
[BLUE]
0922-202
(I)-CLOCK SPRING
[YELLOW]
0922-203
AUDIO CONTROL SWITCH
C-39
(I)-SHORT CORD
0920-208
AUXILIARY JACK
0920-201
AUDIO UNIT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

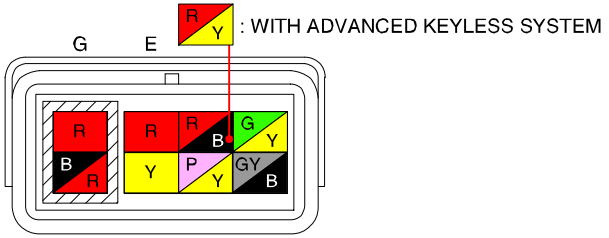


C-39
INSTRUMENT PANEL HARNESS-SHORT CORD

INSTRUMENT PANEL HARNESS

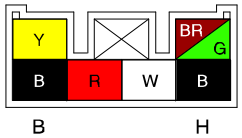


SHORT CORD

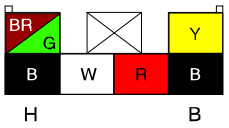



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

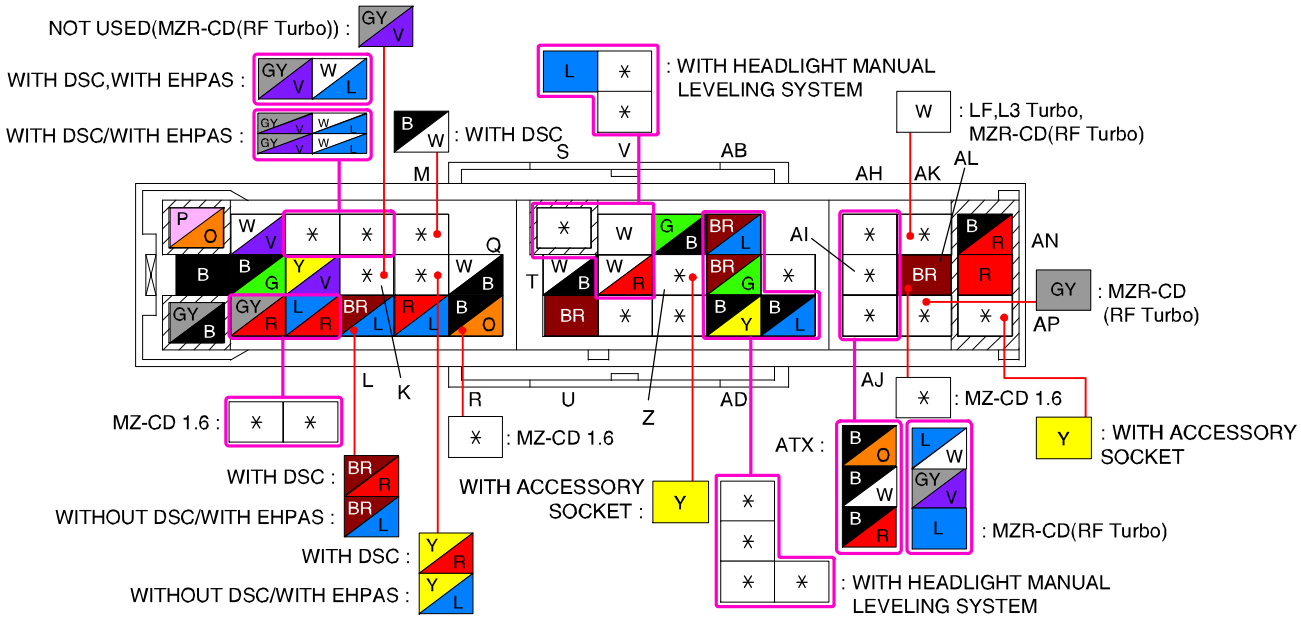


INSTRUMENT PANEL HARNESS

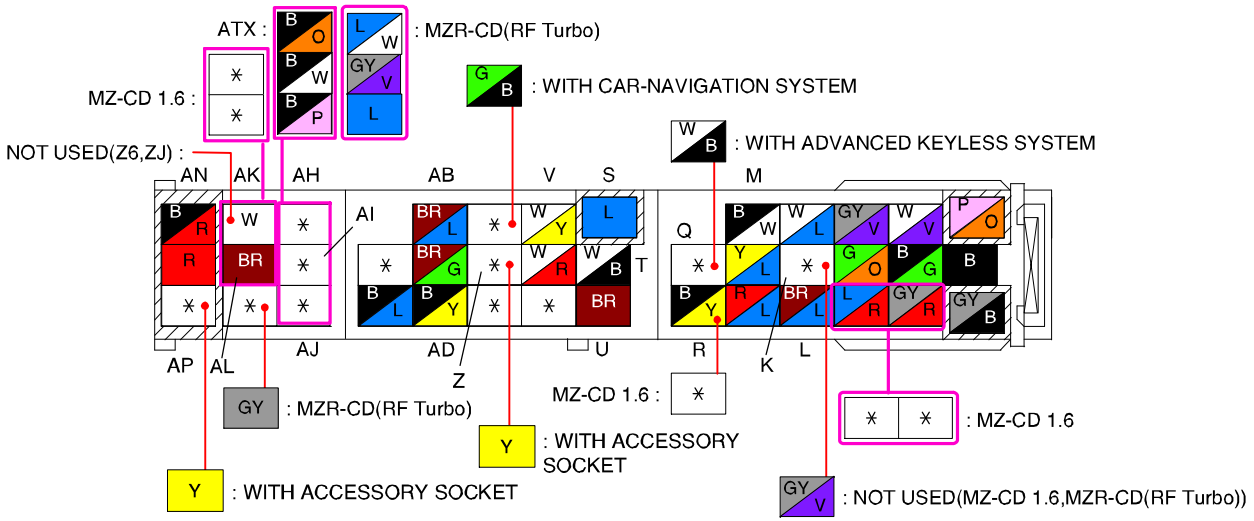

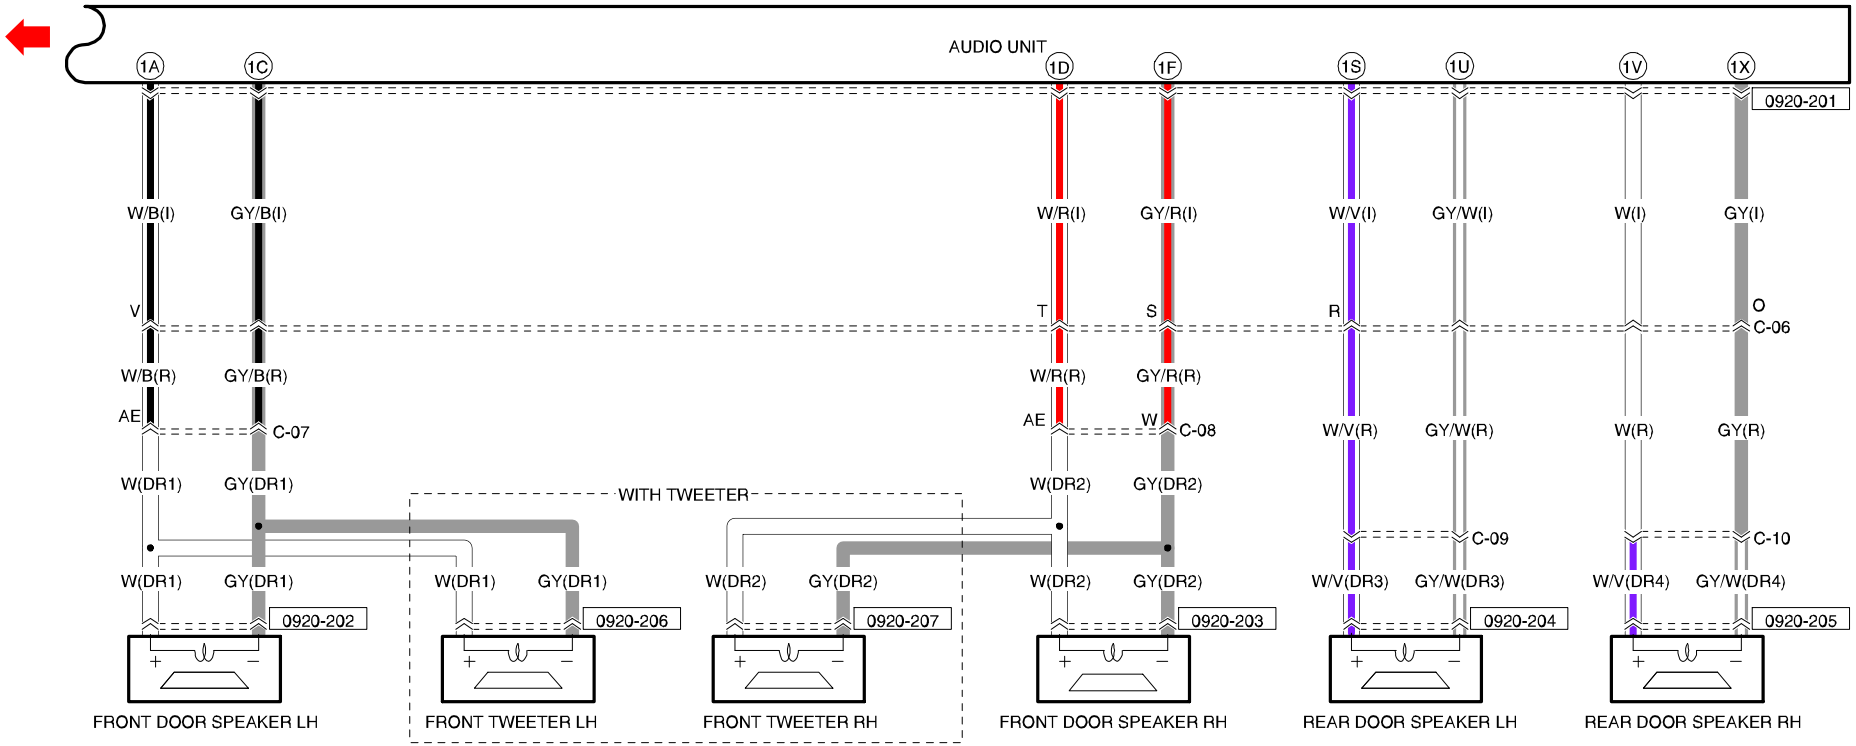

0920-201
AUDIO UNIT

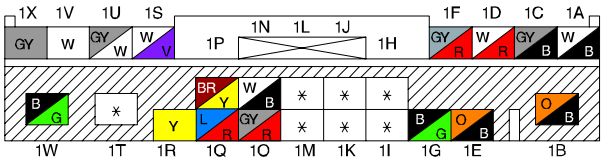

0920-202
FRONT DOOR SPEAKER LH



0920-203
FRONT DOOR SPEAKER RH



0920-204
REAR DOOR SPEAKER LH



0920-205
REAR DOOR SPEAKER RH




0920-206
FRONT TWEETER LH




0920-207
FRONT TWEETER RH

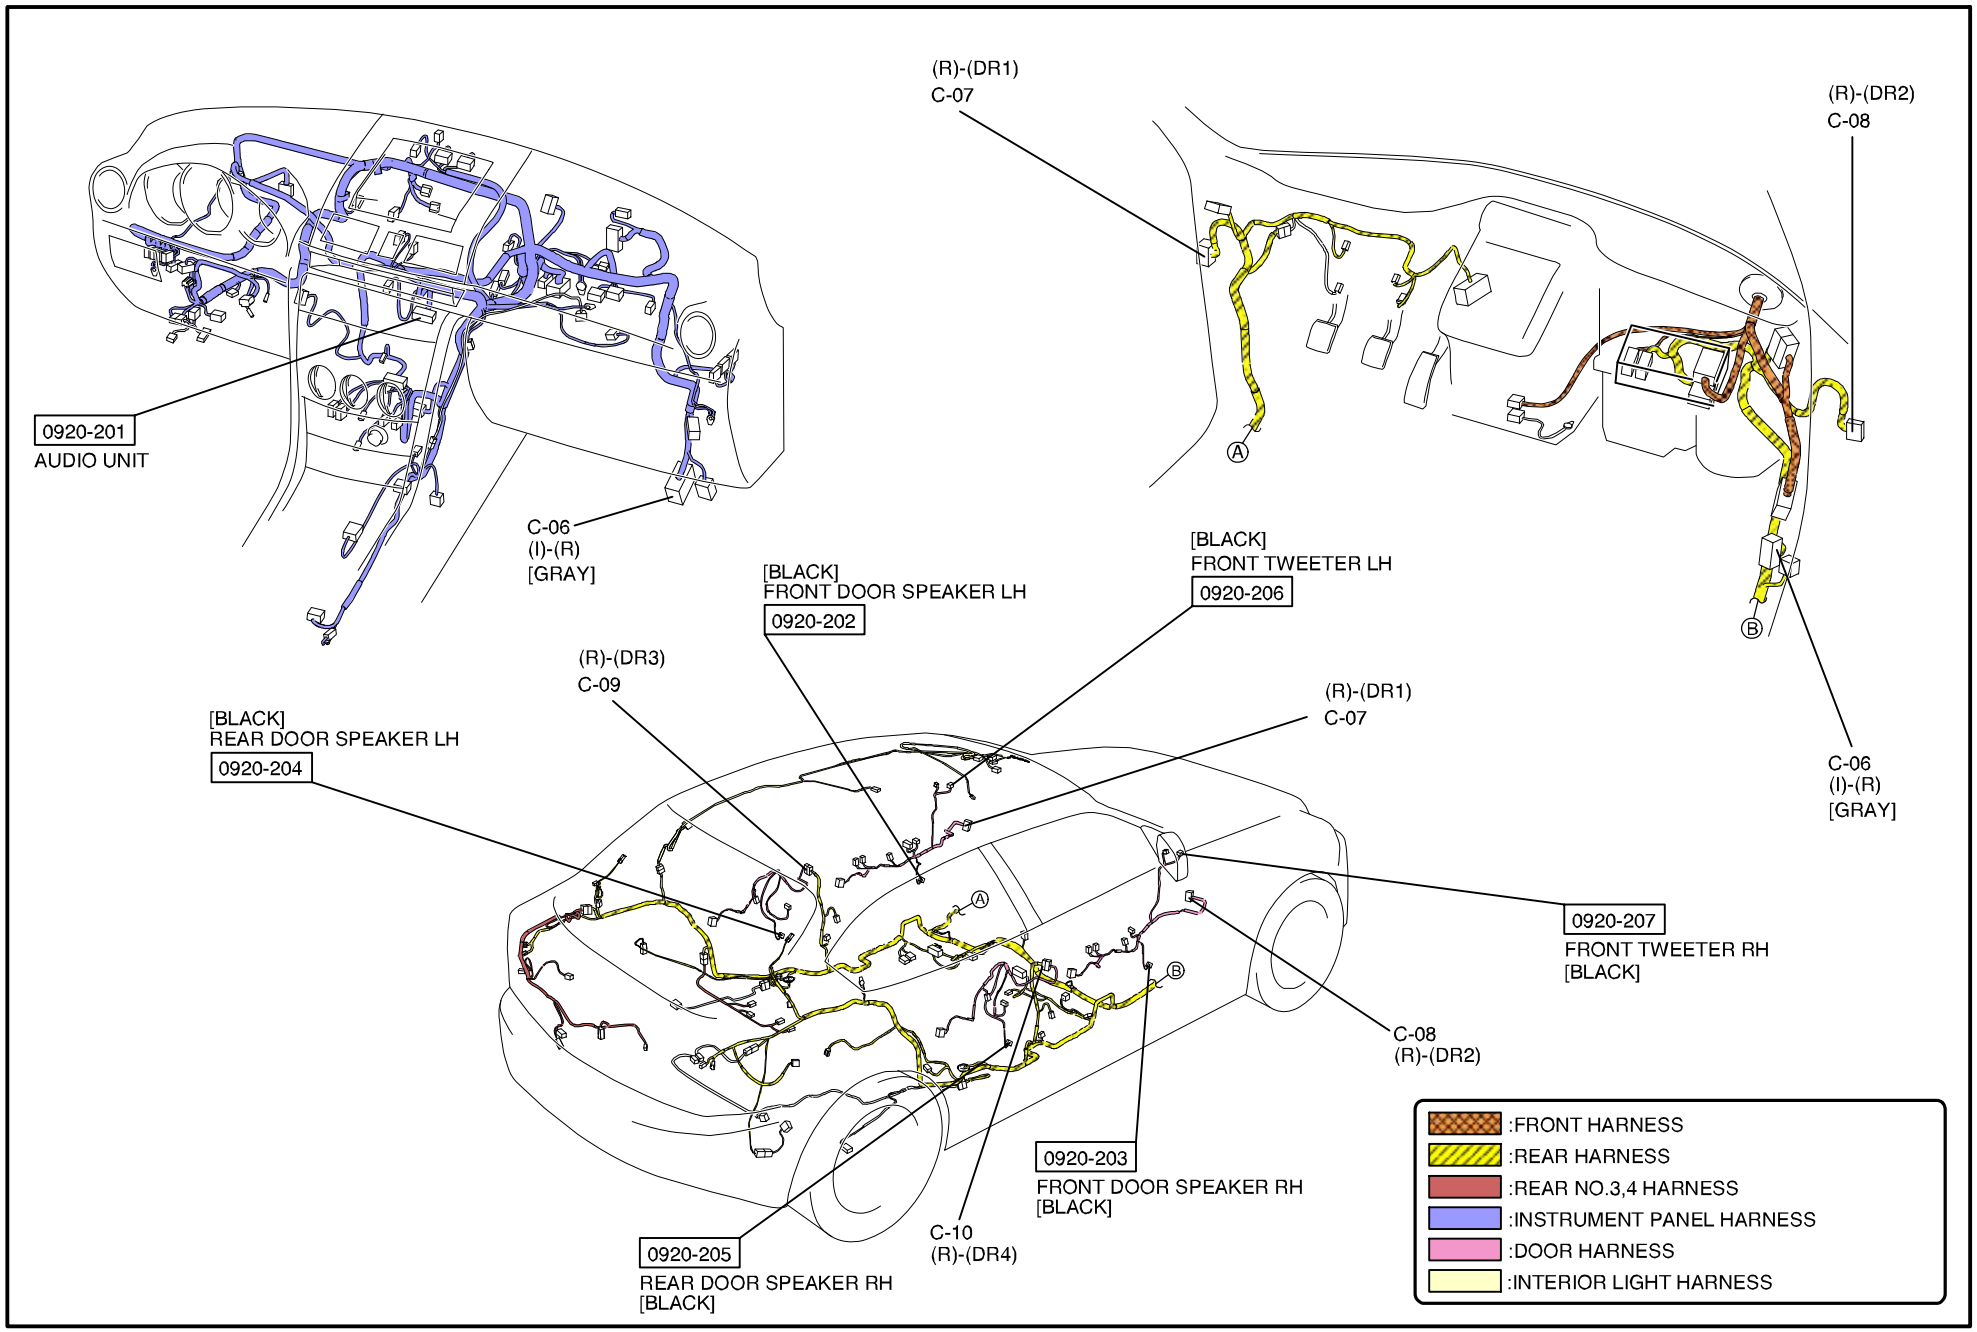



(R)-(DR1)
C-07
(R)-(DR2)
C-08
0920-201
AUDIO UNIT
C-06
(I)-(R)
[GRAY]
[BLACK]
FRONT DOOR SPEAKER LH
0920-202
[BLACK]
FRONT TWEETER LH
0920-206
(R)-(DR3)
C-09
(R)-(DR1)
C-07
[BLACK]
REAR DOOR SPEAKER LH
0920-204
C-06
(I)-(R)
[GRAY]
0920-207
FRONT TWEETER RH
[BLACK]
C-08
(R)-(DR2)
0920-203
FRONT DOOR SPEAKER RH
[BLACK]
C-10
(R)-(DR4)
0920-205
REAR DOOR SPEAKER RH
[BLACK]
:FRONT HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

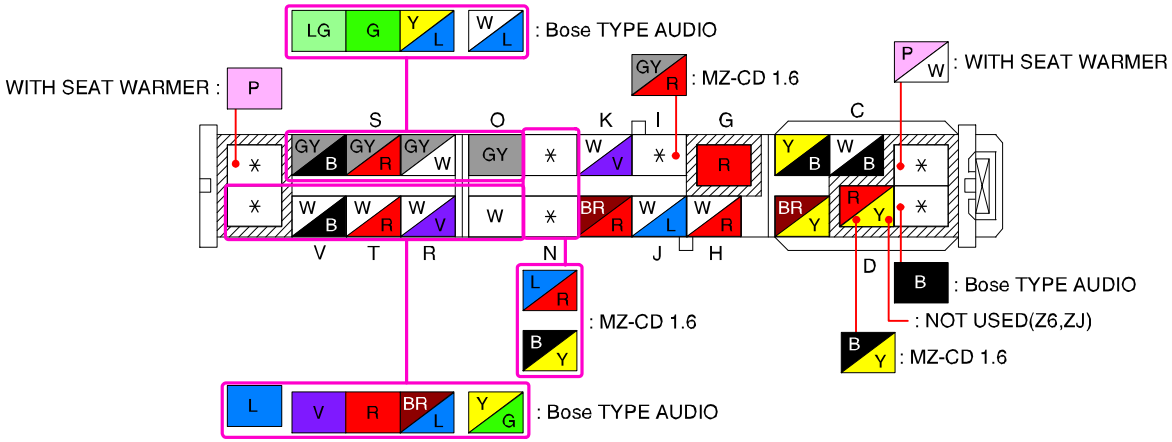


REAR HARNESS

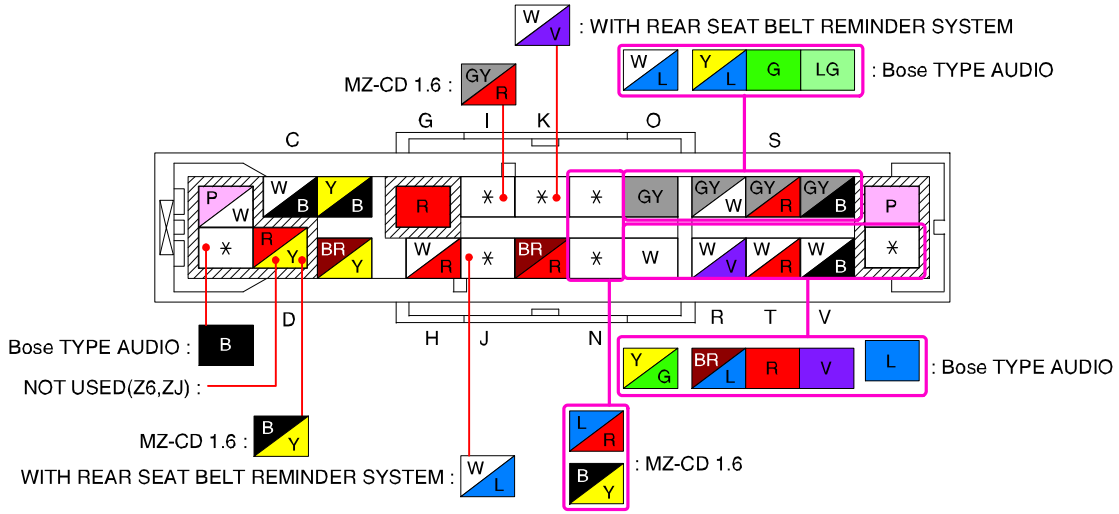


C-09
REAR HARNESS-DOOR NO.3 HARNESS

REAR HARNESS

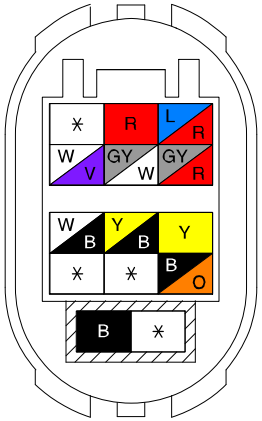


DOOR NO.3 HARNESS

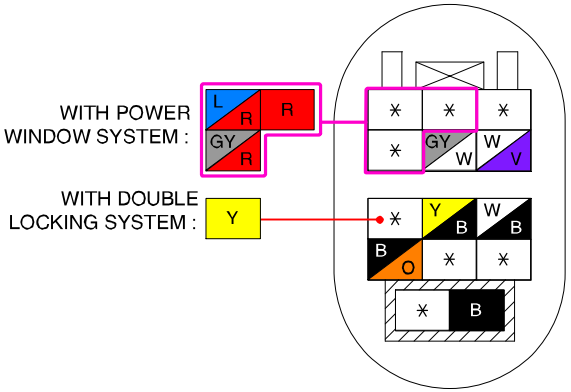


C-10
REAR HARNESS-DOOR NO.4 HARNESS

REAR HARNESS

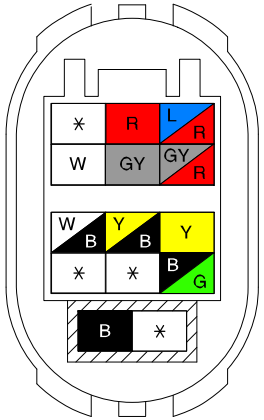


DOOR NO.4 HARNESS

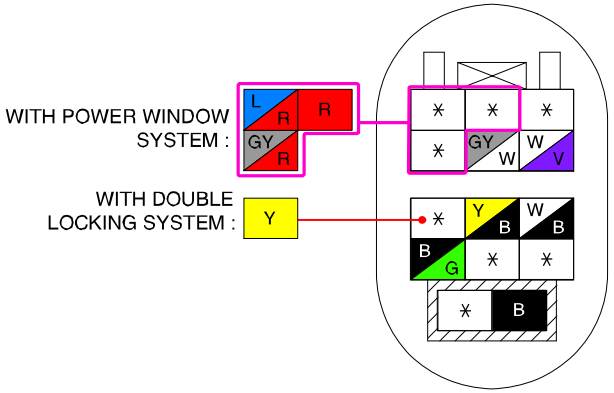


C-07
REAR HARNESS-DOOR NO.1 HARNESS

REAR HARNESS

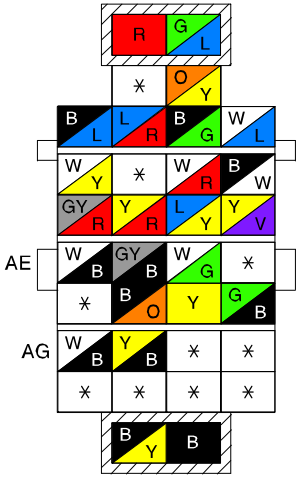


DOOR NO.1 HARNESS

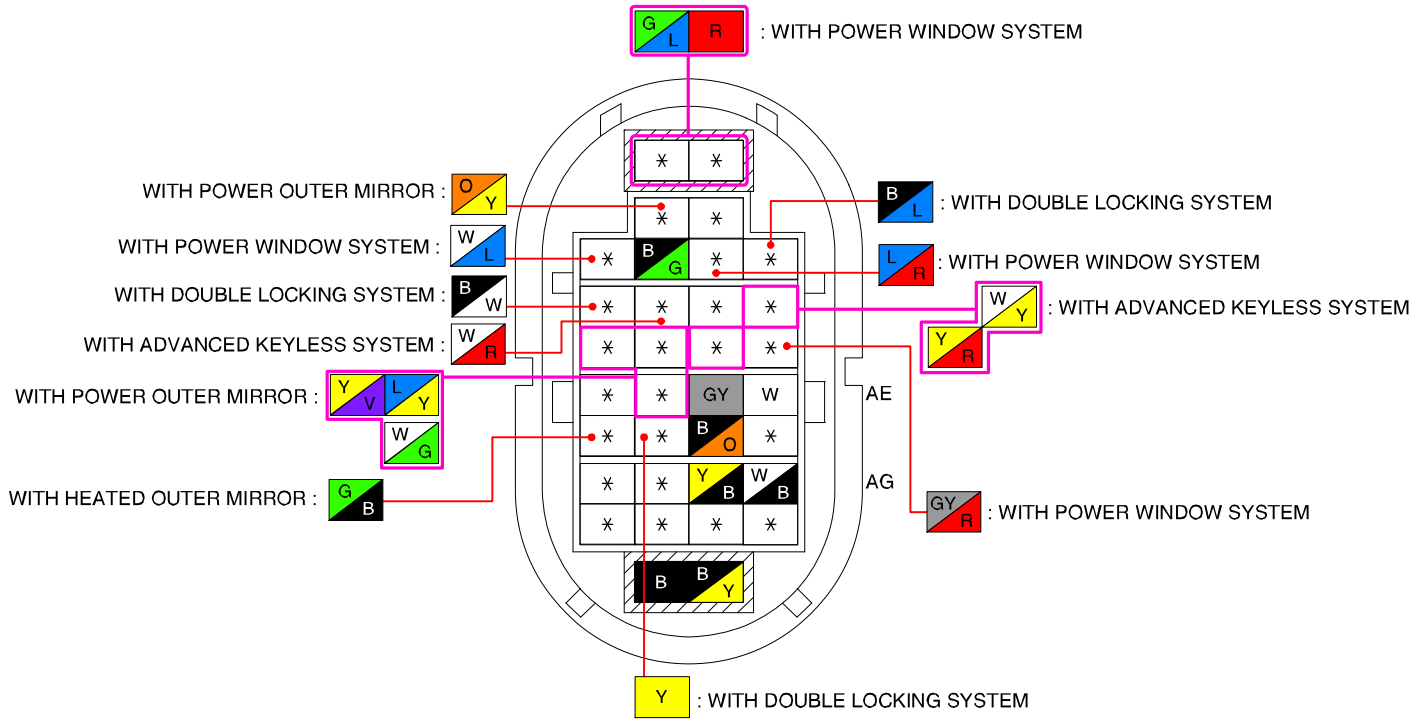


C-08
REAR HARNESS-DOOR NO.2 HARNESS


REAR HARNESS

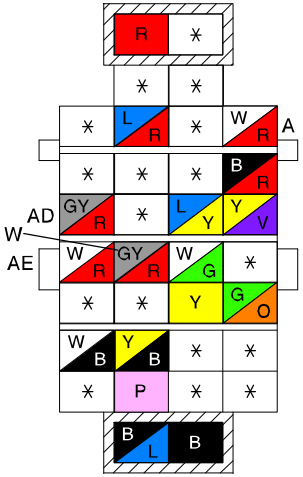


DOOR NO.2 HARNESS

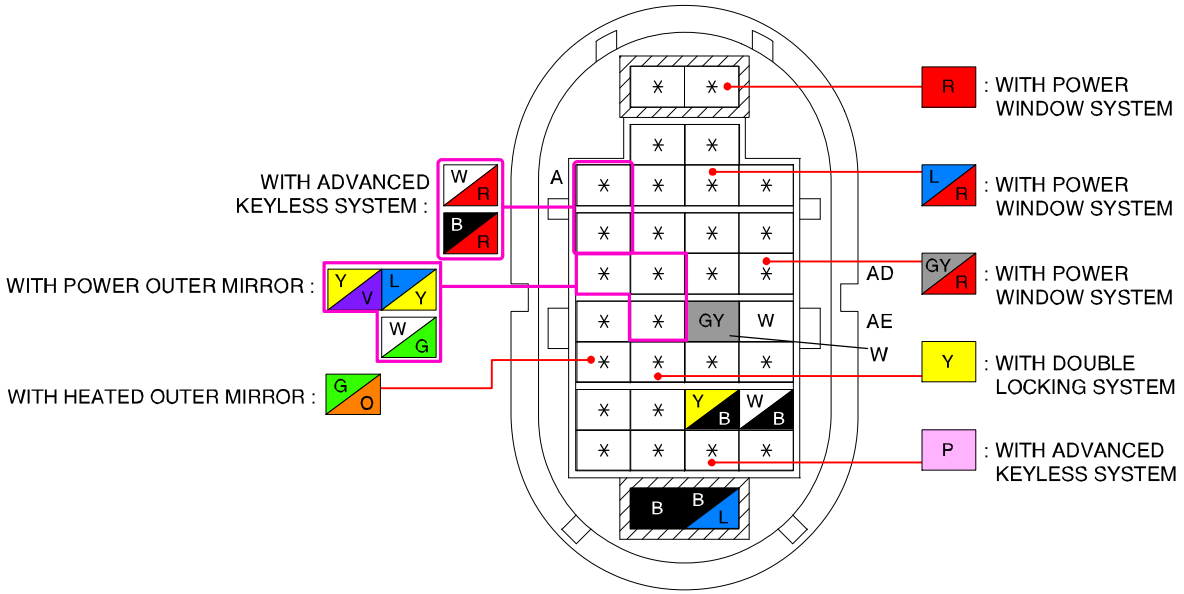


AUDIO SYSTEM (STANDARD TYPE AUDIO/WITH CAR-NAVIGATION SYSTEM)

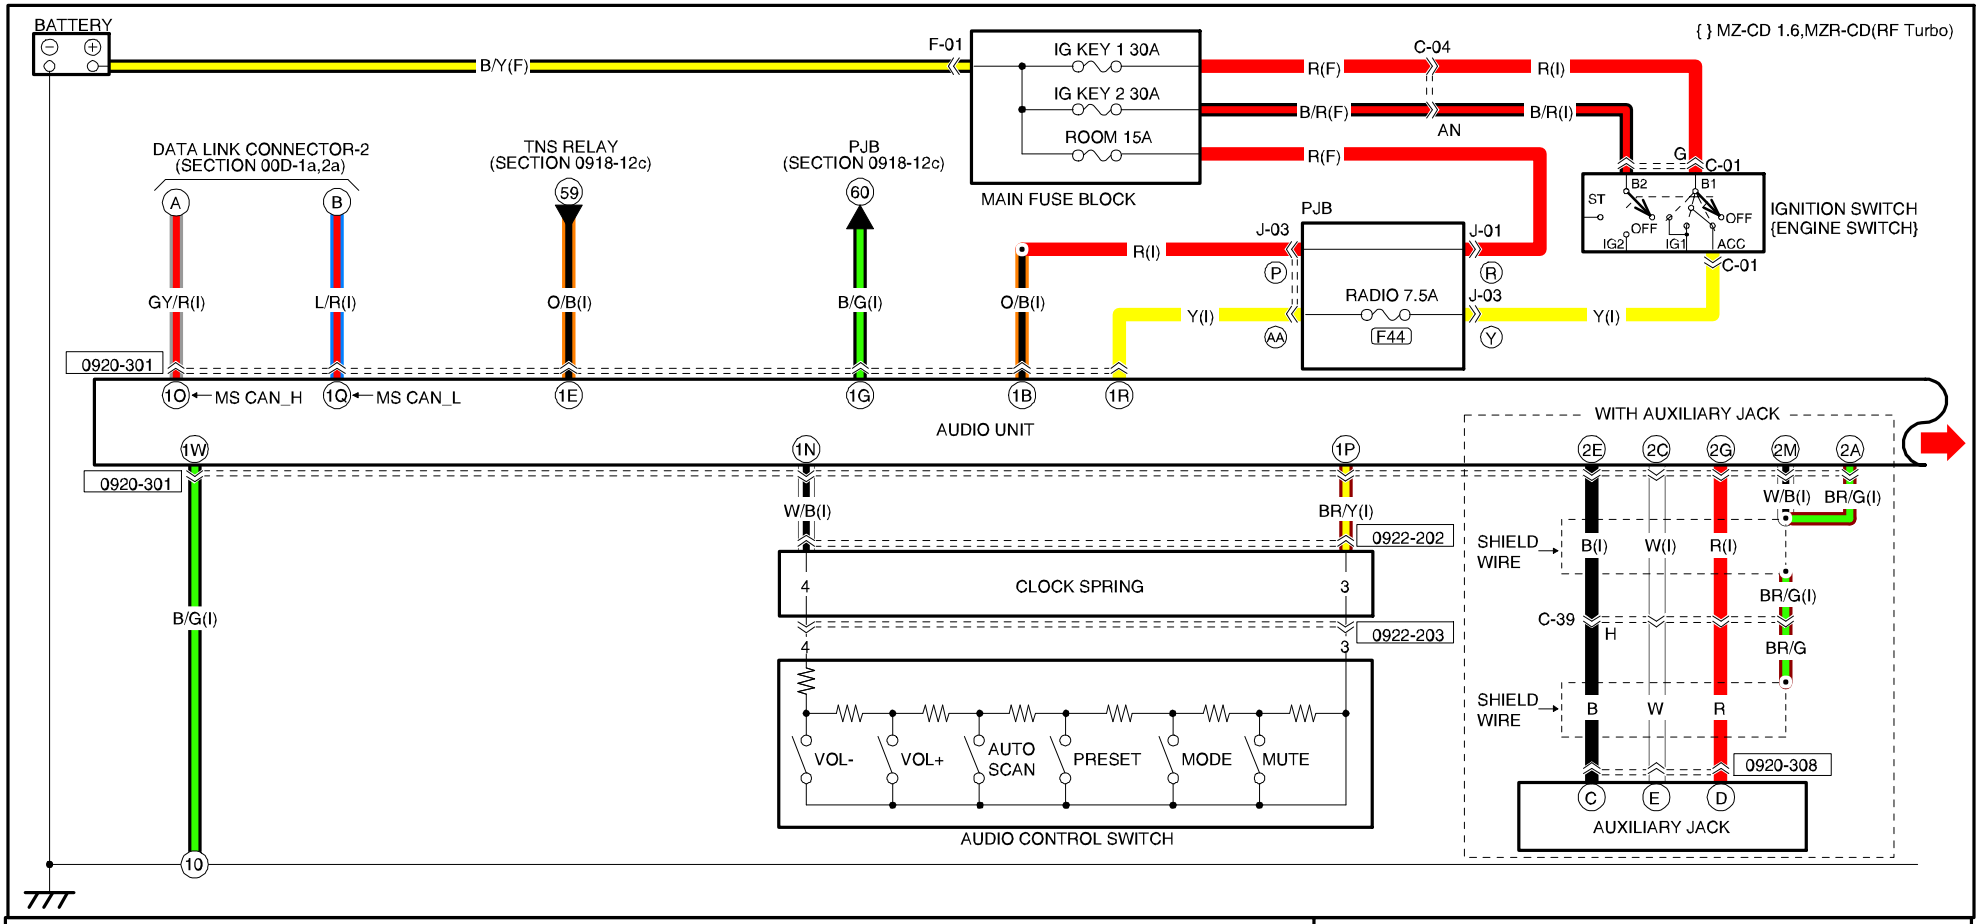


0920-301 AUDIO UNIT

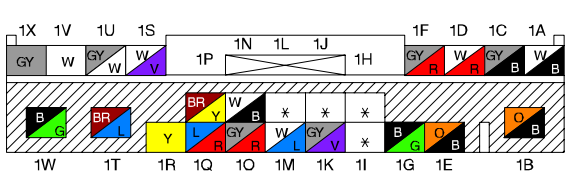

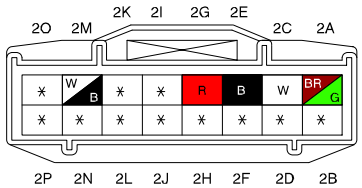


0922-202 INSTRUMENT PANEL HARNESS-CLOCK SPRING

INSTRUMENT PANEL HARNESS

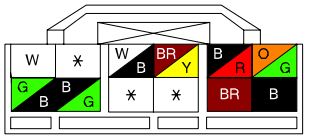


CLOCK SPRING




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0920-308 AUXILIARY JACK




0922-203 AUDIO CONTROL SWITCH



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

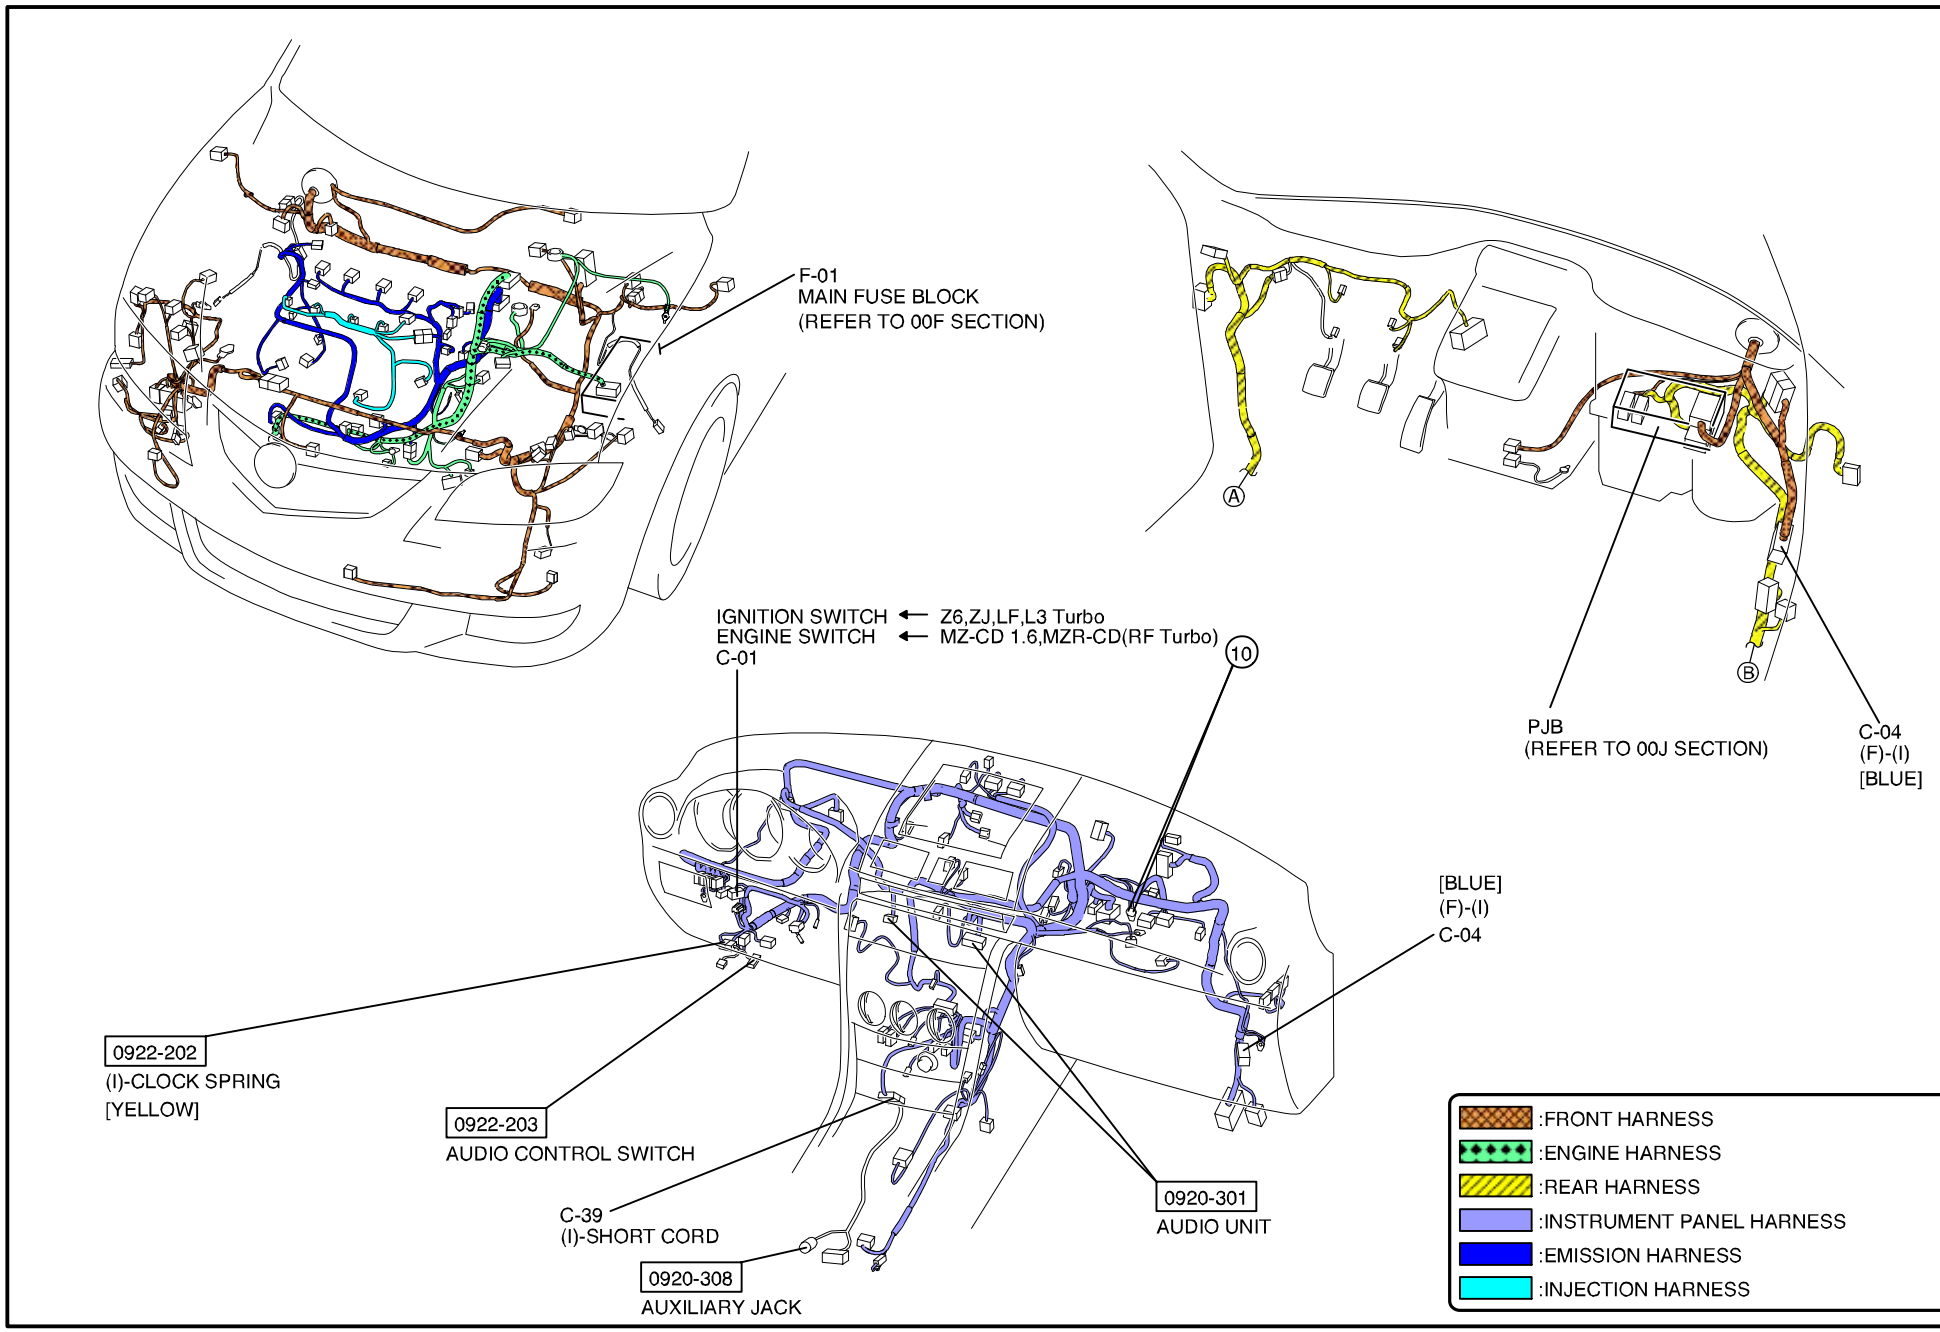

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
Ⓑ
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-01
10
[BLUE]
(F)-(I)
C-04
0922-202
(I)-CLOCK SPRING
[YELLOW]
0922-203
AUDIO CONTROL SWITCH
C-39
(I)-SHORT CORD
0920-308
AUXILIARY JACK
0920-301
AUDIO UNIT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

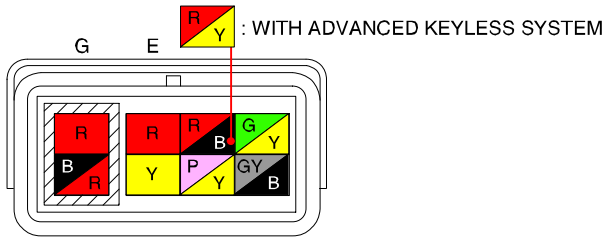


C-39
INSTRUMENT PANEL HARNESS-SHORT CORD

INSTRUMENT PANEL HARNESS

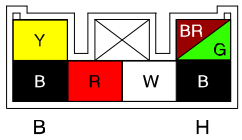


SHORT CORD

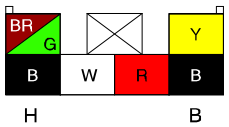



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

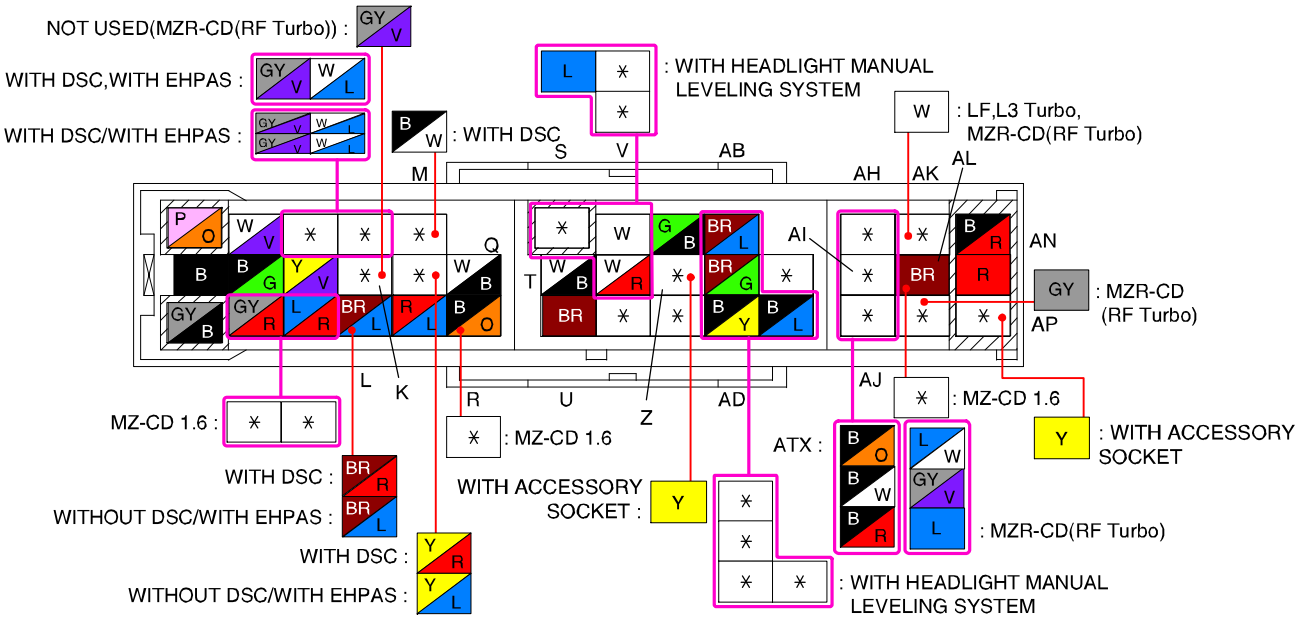


INSTRUMENT PANEL HARNESS

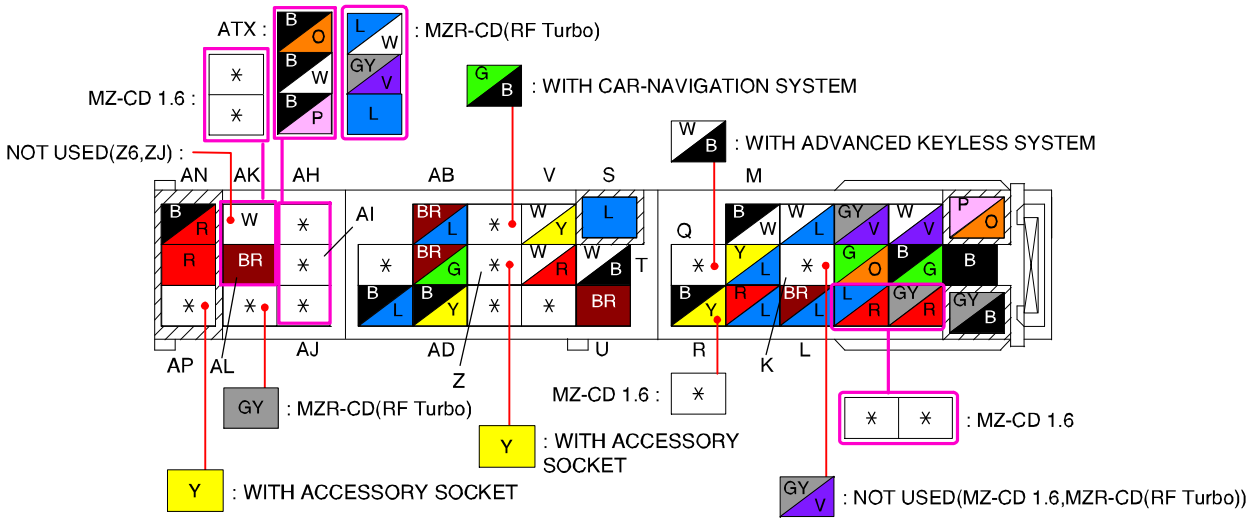

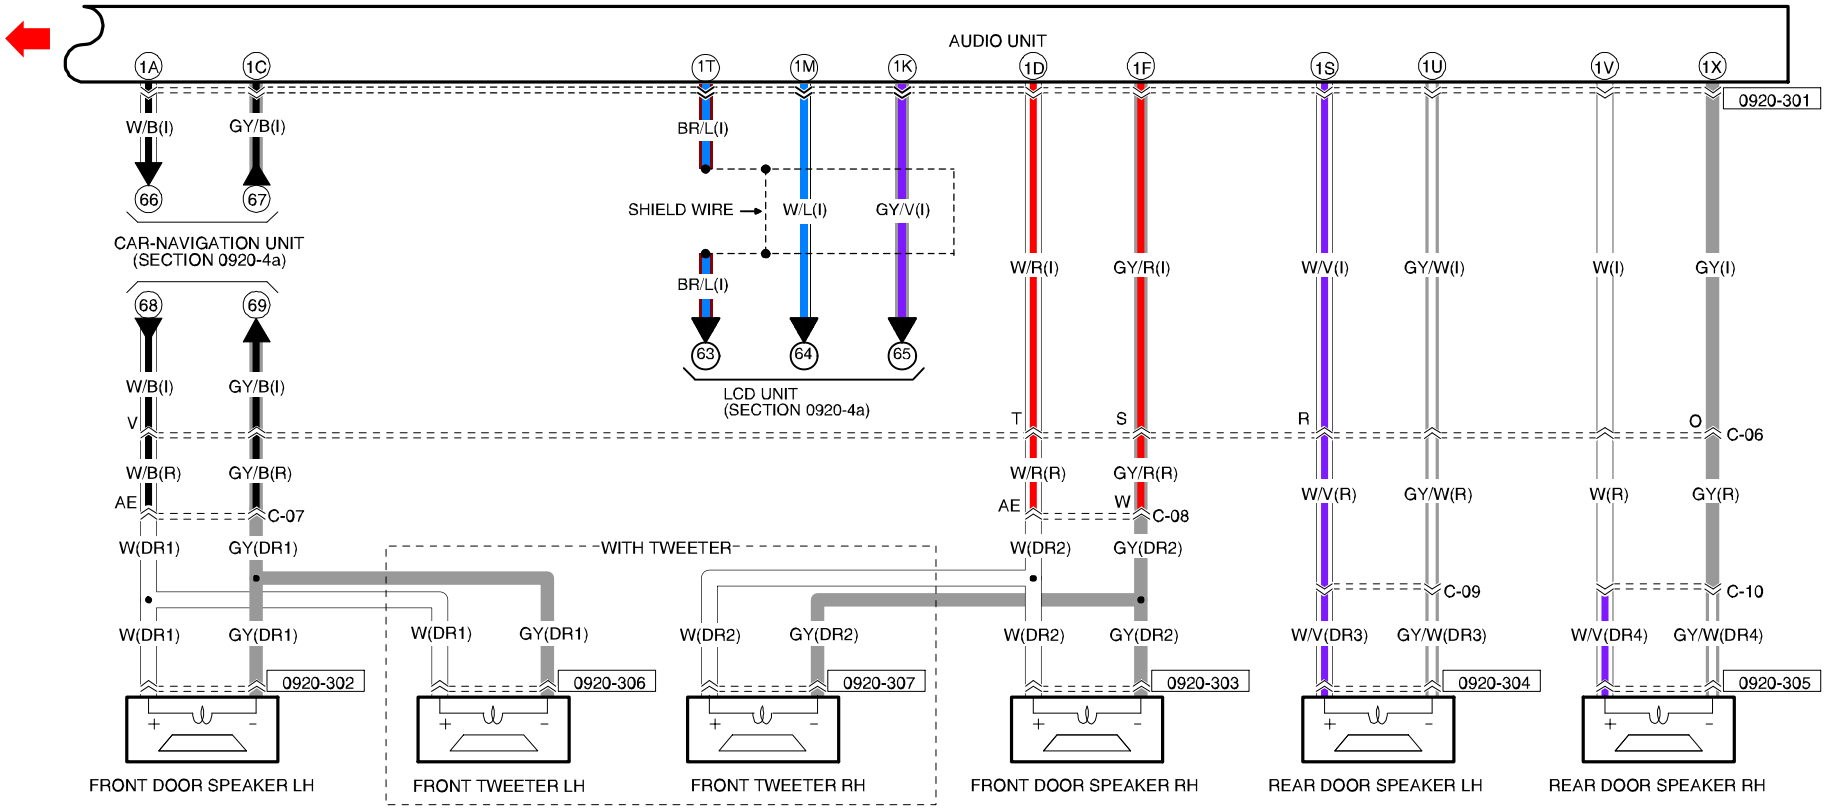


0920-301
AUDIO UNIT

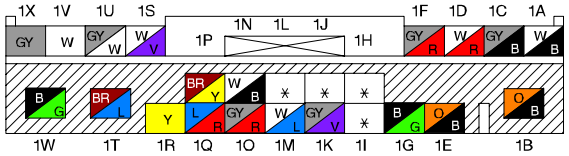

0920-302
FRONT DOOR SPEAKER LH



0920-303
FRONT DOOR SPEAKER RH



0920-304
REAR DOOR SPEAKER LH



0920-305
REAR DOOR SPEAKER RH




0920-306
FRONT TWEETER LH




0920-307
FRONT TWEETER RH

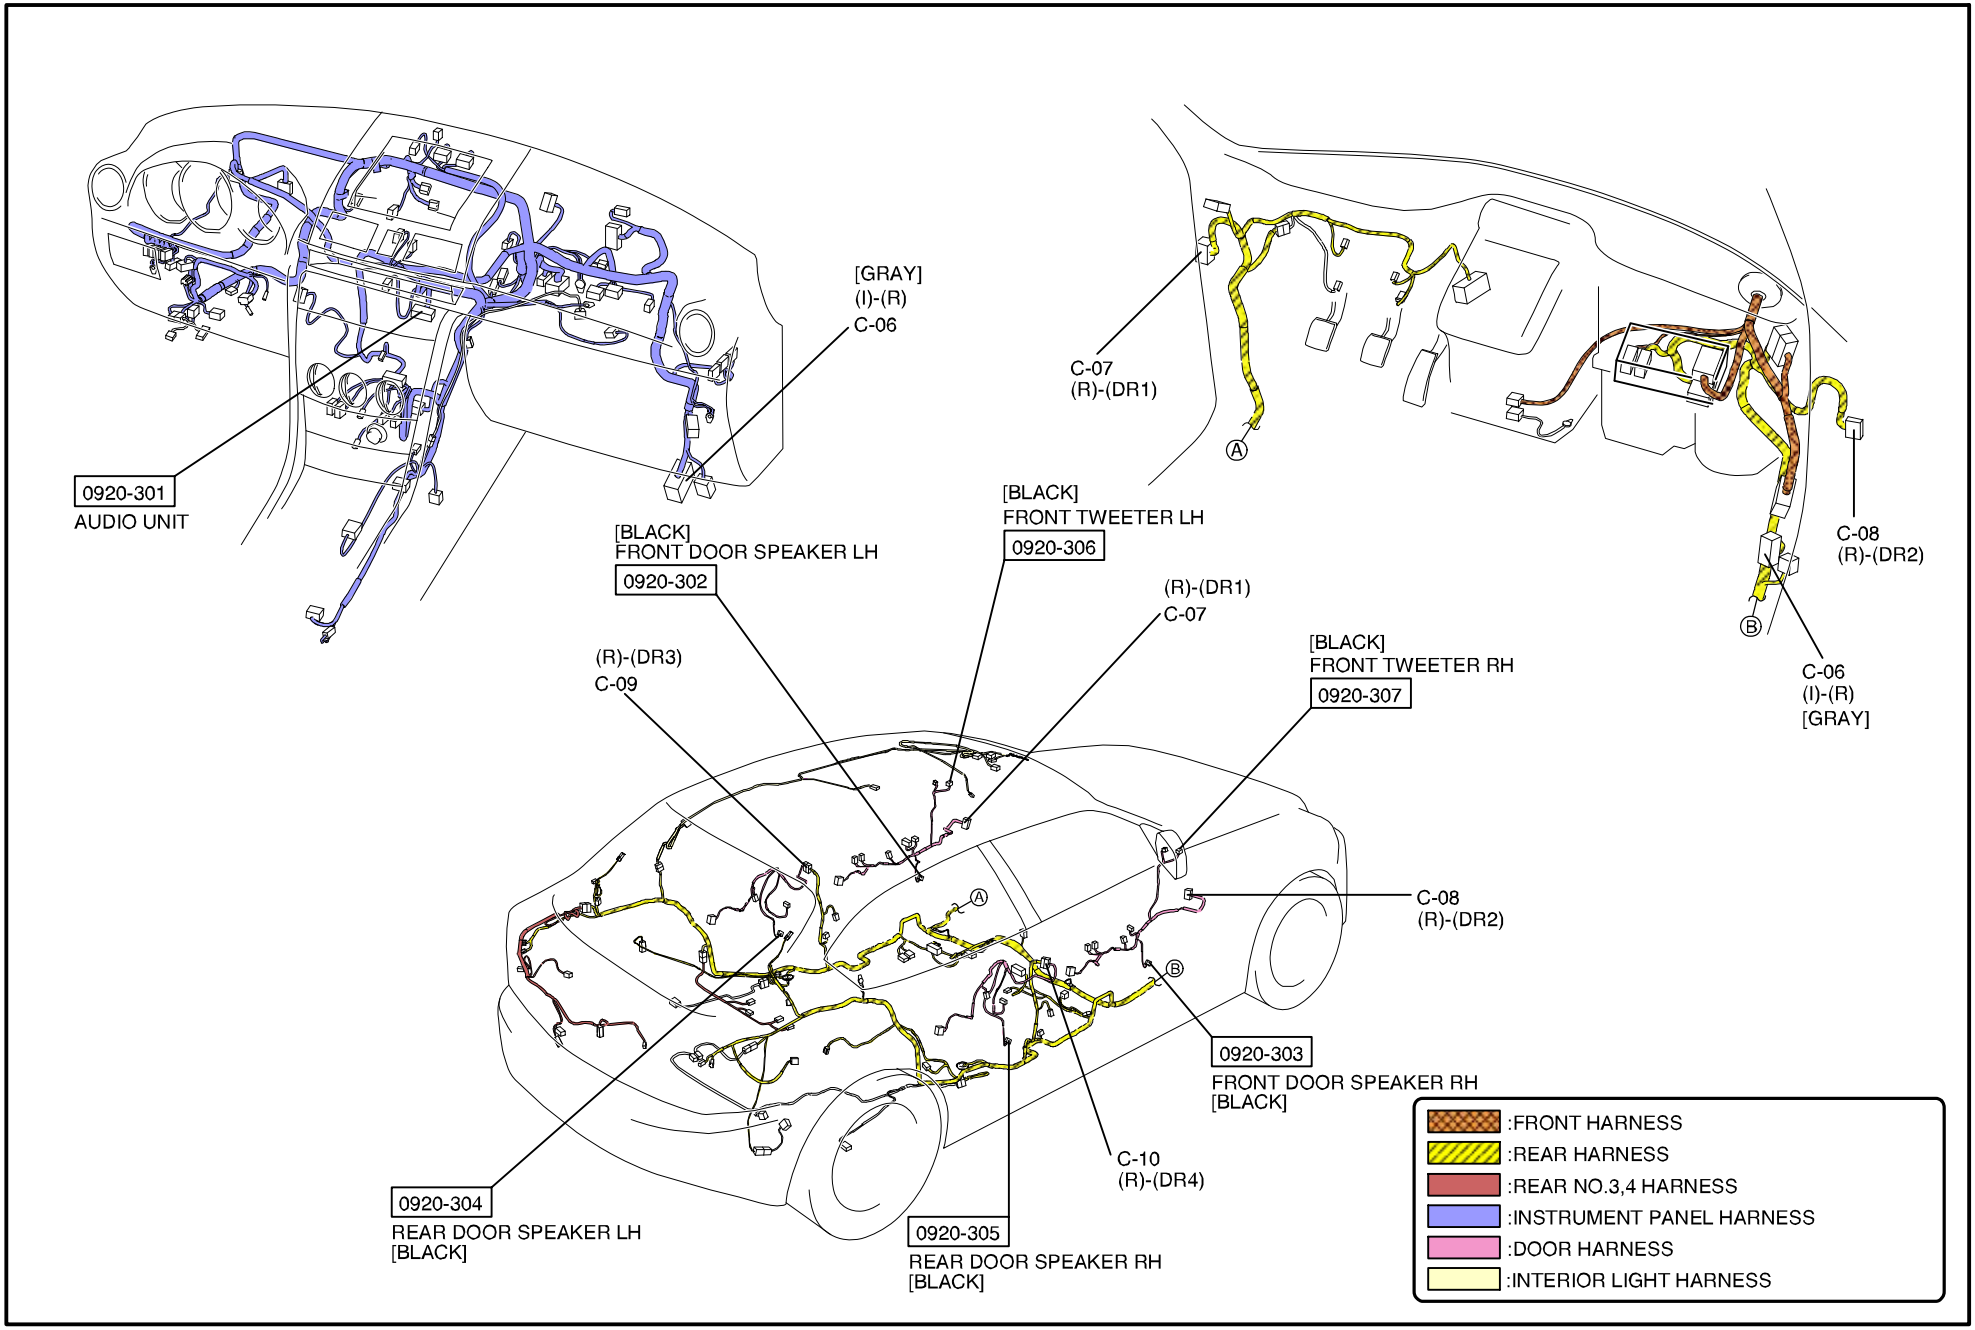



0920-301
AUDIO UNIT
[GRAY]
(I)-(R)
C-06
[BLACK]
FRONT DOOR SPEAKER LH
0920-302
C-07
(R)-(DR1)
Ⓐ
[BLACK]
FRONT TWEETER LH
0920-306
C-08
(R)-(DR2)
Ⓑ
C-06
(I)-(R)
[GRAY]
(R)-(DR1)
C-07
(R)-(DR3)
C-09
[BLACK]
FRONT TWEETER RH
0920-307
C-08
(R)-(DR2)
0920-303
FRONT DOOR SPEAKER RH
[BLACK]
C-10
(R)-(DR4)
0920-304
REAR DOOR SPEAKER LH
[BLACK]
0920-305
REAR DOOR SPEAKER RH
[BLACK]
:FRONT HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

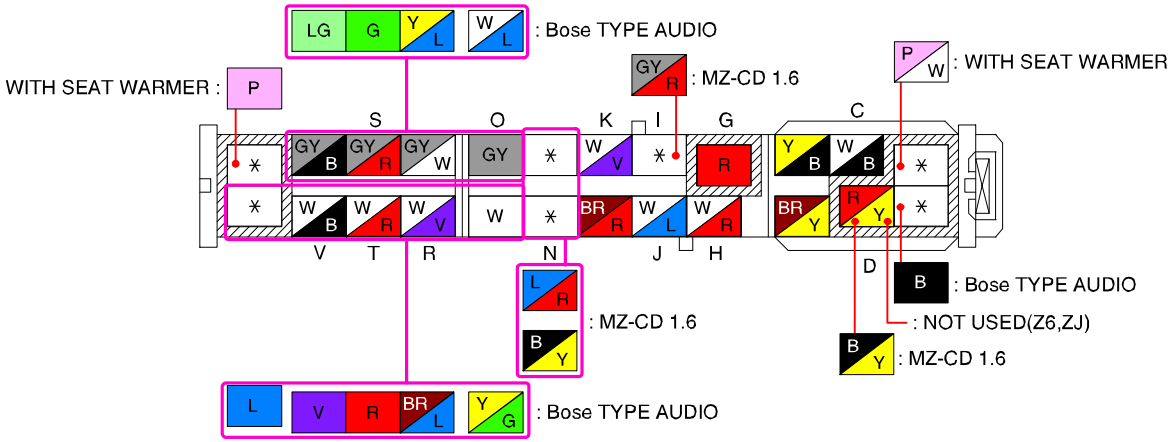


REAR HARNESS

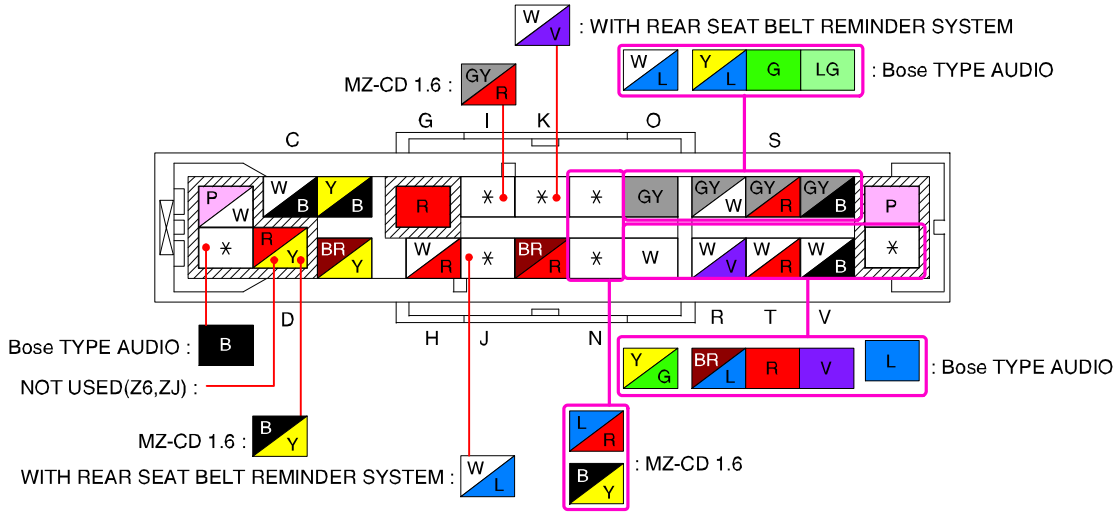


C-07
REAR HARNESS-DOOR NO.1 HARNESS

REAR HARNESS

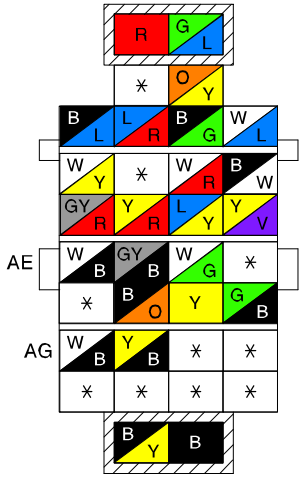


DOOR NO.1 HARNESS

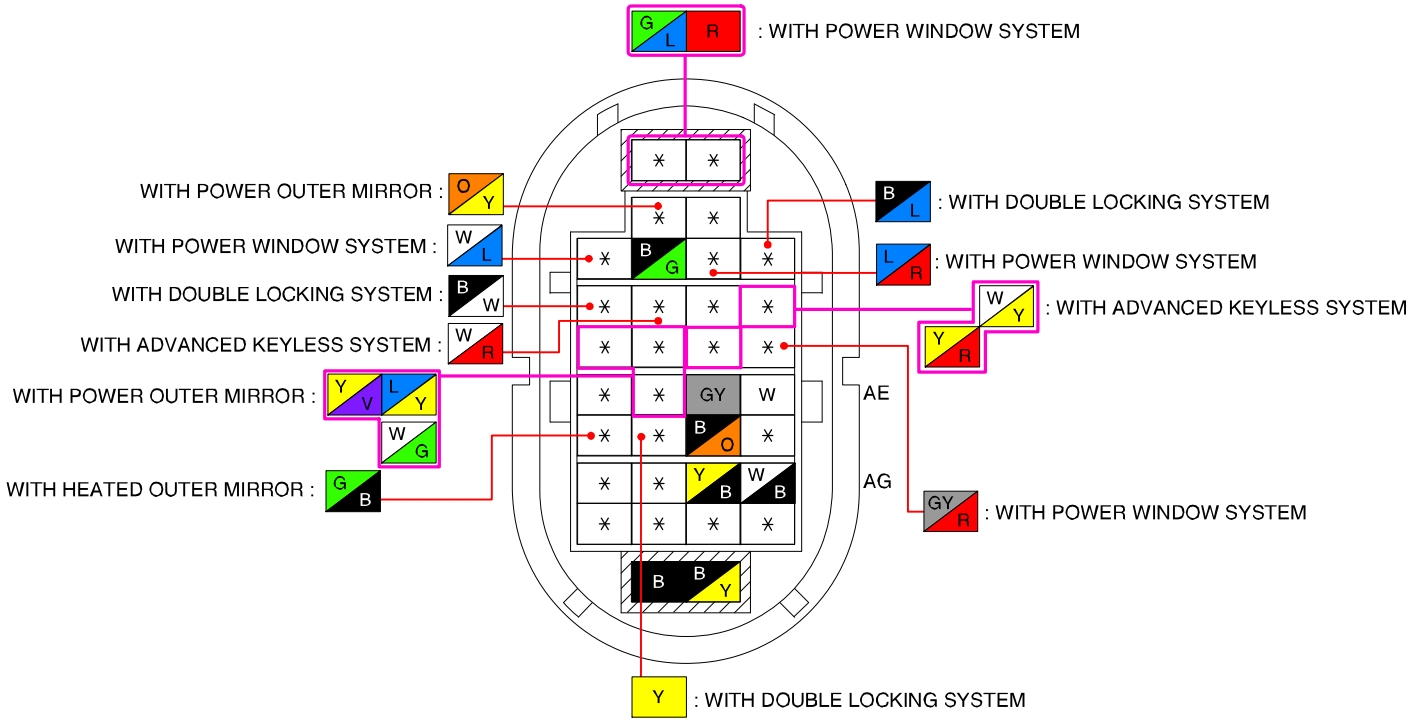


C-08
REAR HARNESS-DOOR NO.2 HARNESS


REAR HARNESS

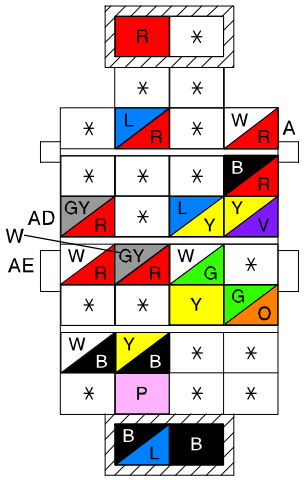


DOOR NO.2 HARNESS

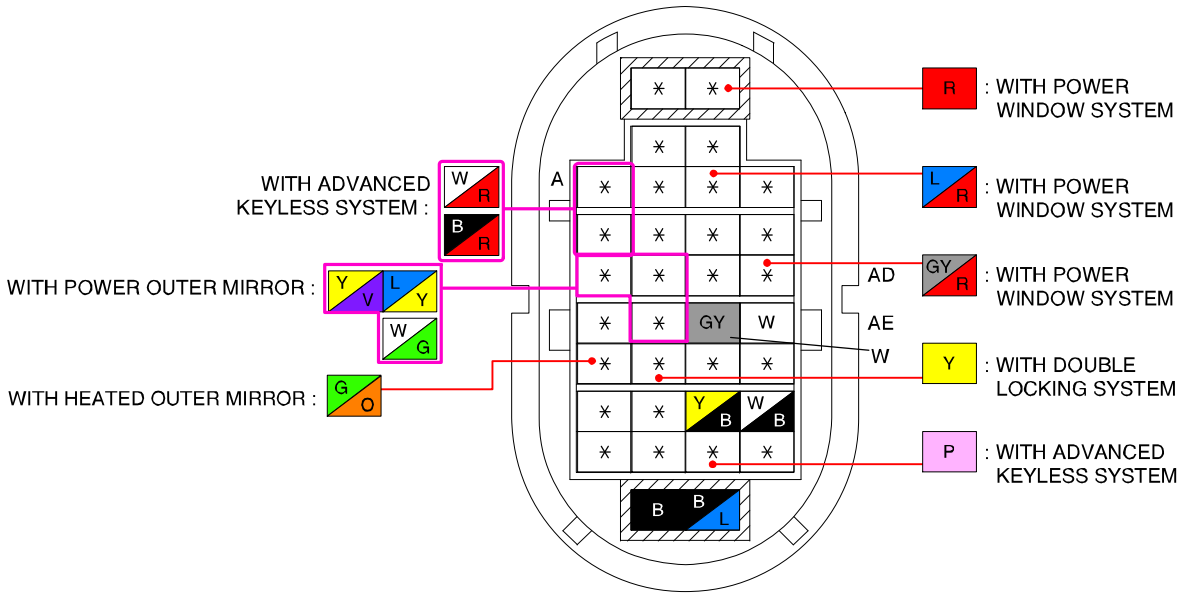


C-09
REAR HARNESS-DOOR NO.3 HARNESS

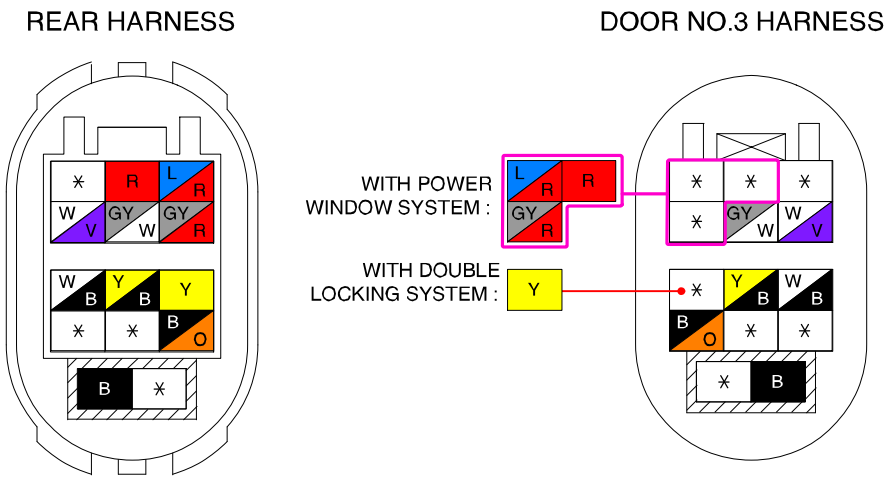


C-10
REAR HARNESS-DOOR NO.4 HARNESS

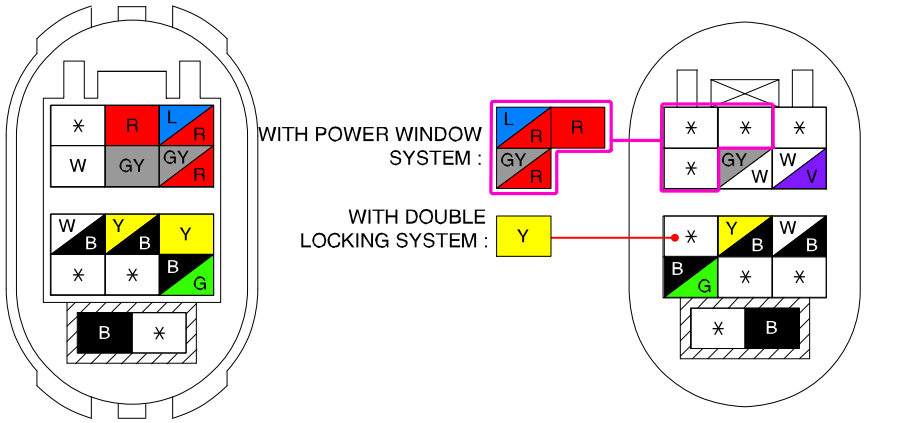


CAR-NAVIGATION SYSTEM (STANDARD TYPE AUDIO)

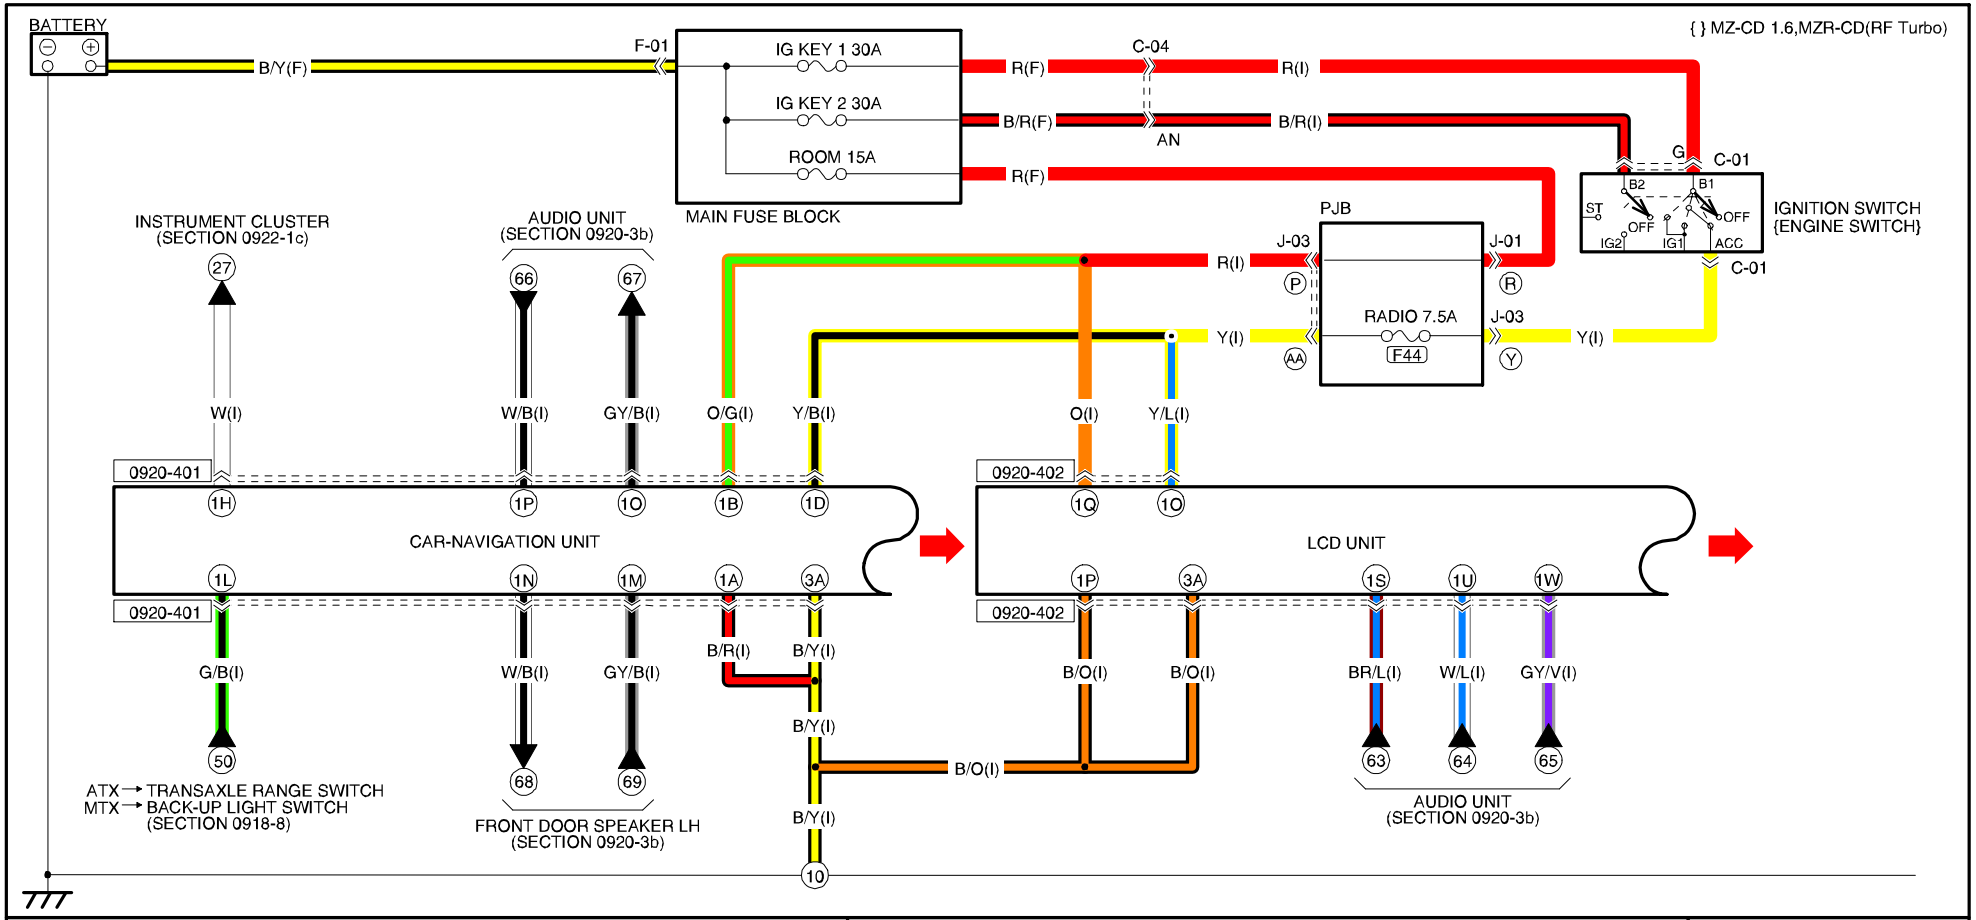


0920-401
CAR-NAVIGATION UNIT

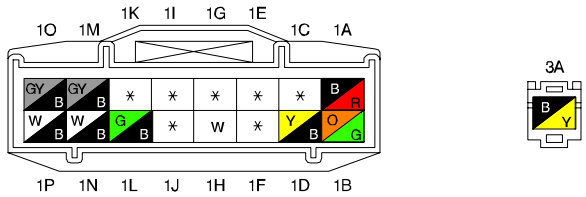


0920-402
LCD UNIT

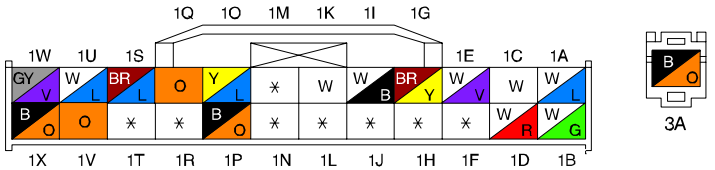

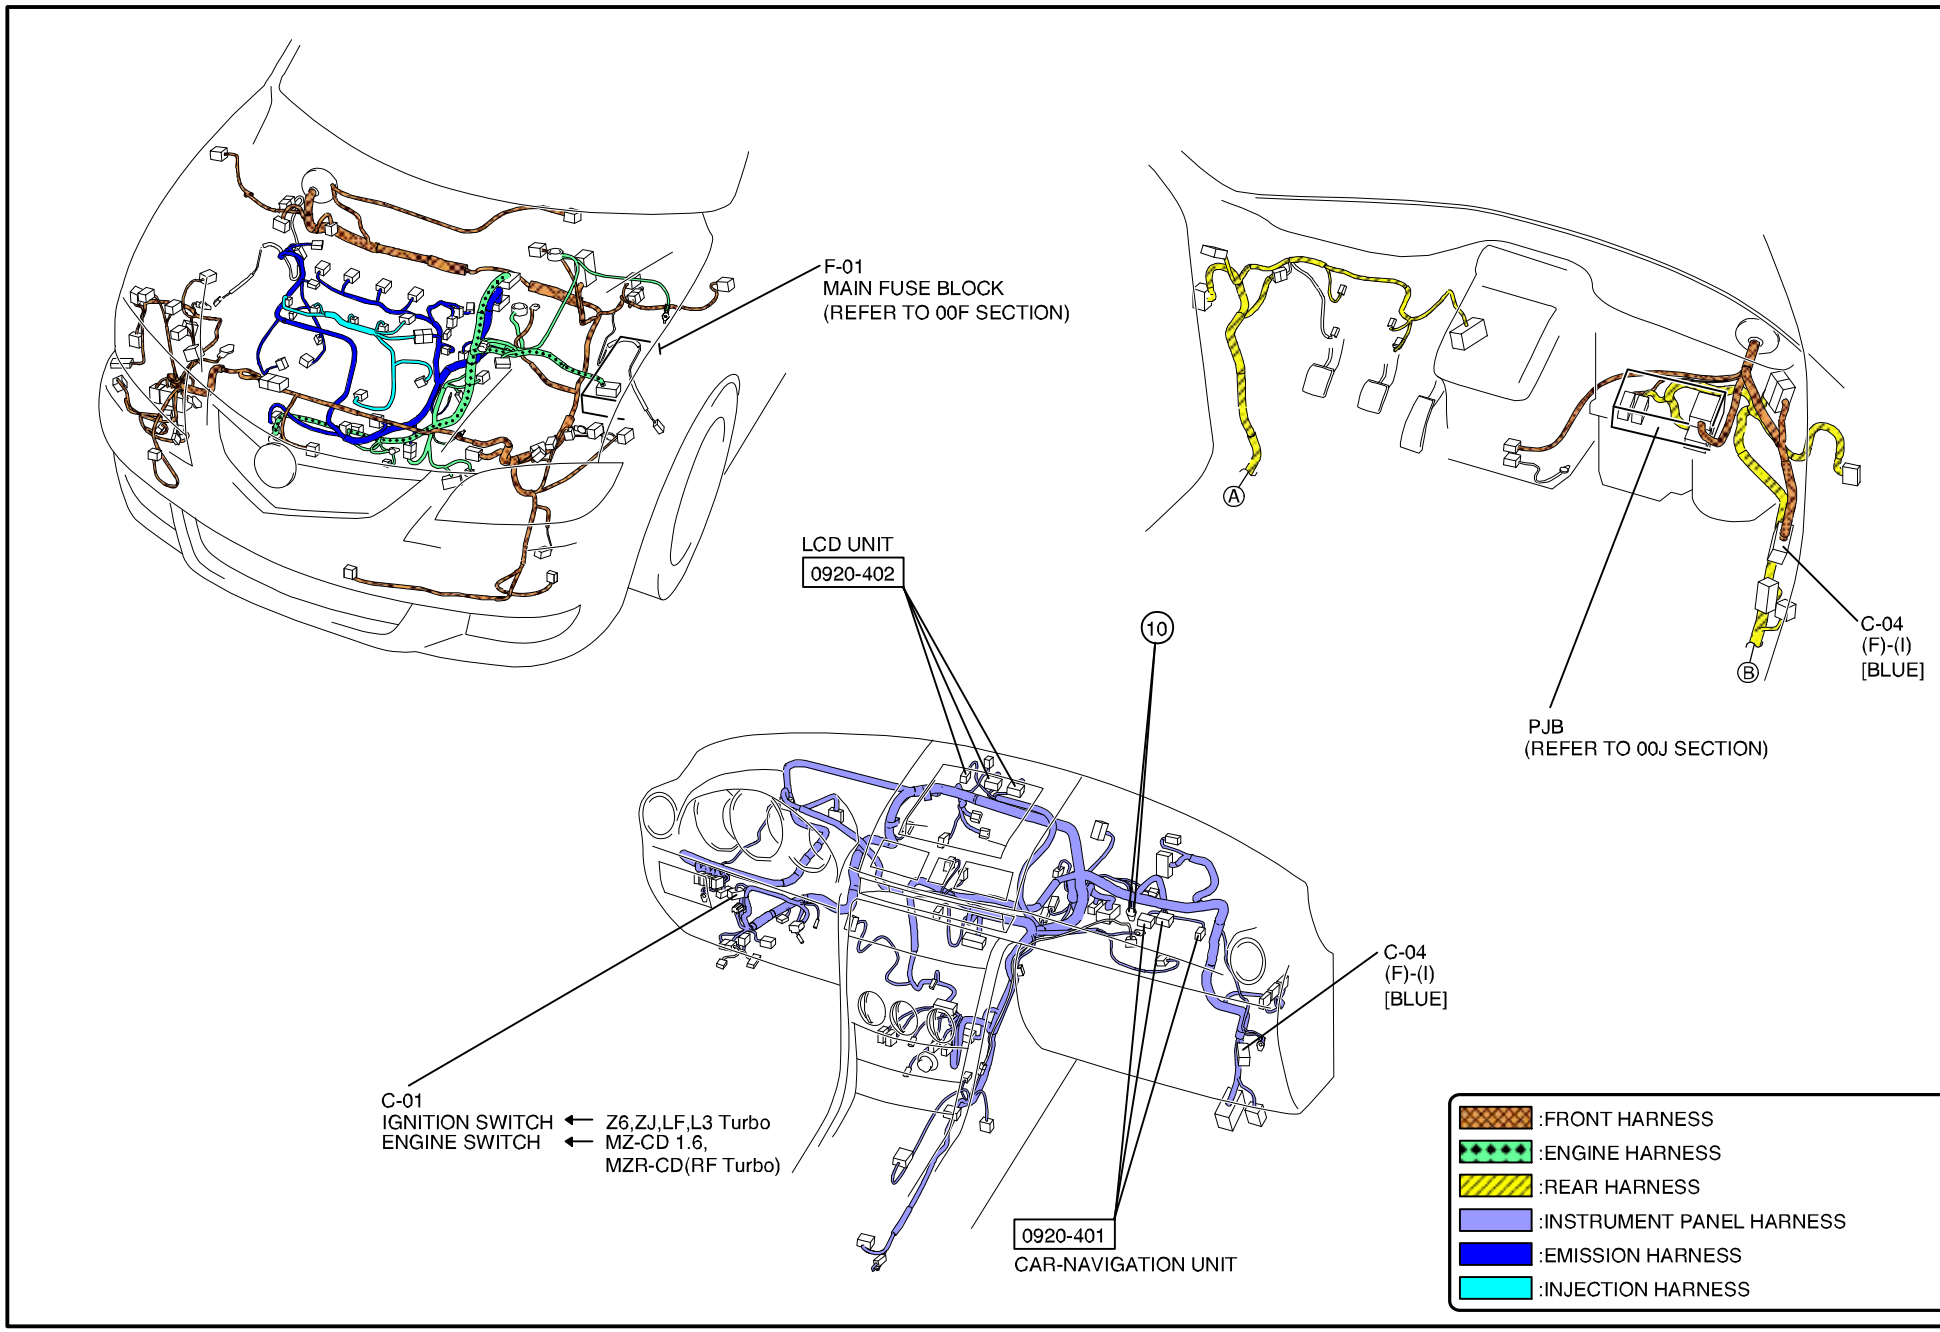

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
LCD UNIT
0920-402
10
A
B
C-04
(F)-(I)
[BLUE]
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,
MZR-CD(RF Turbo)
0920-401
CAR-NAVIGATION UNIT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

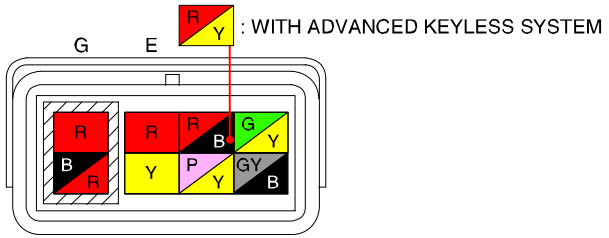


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

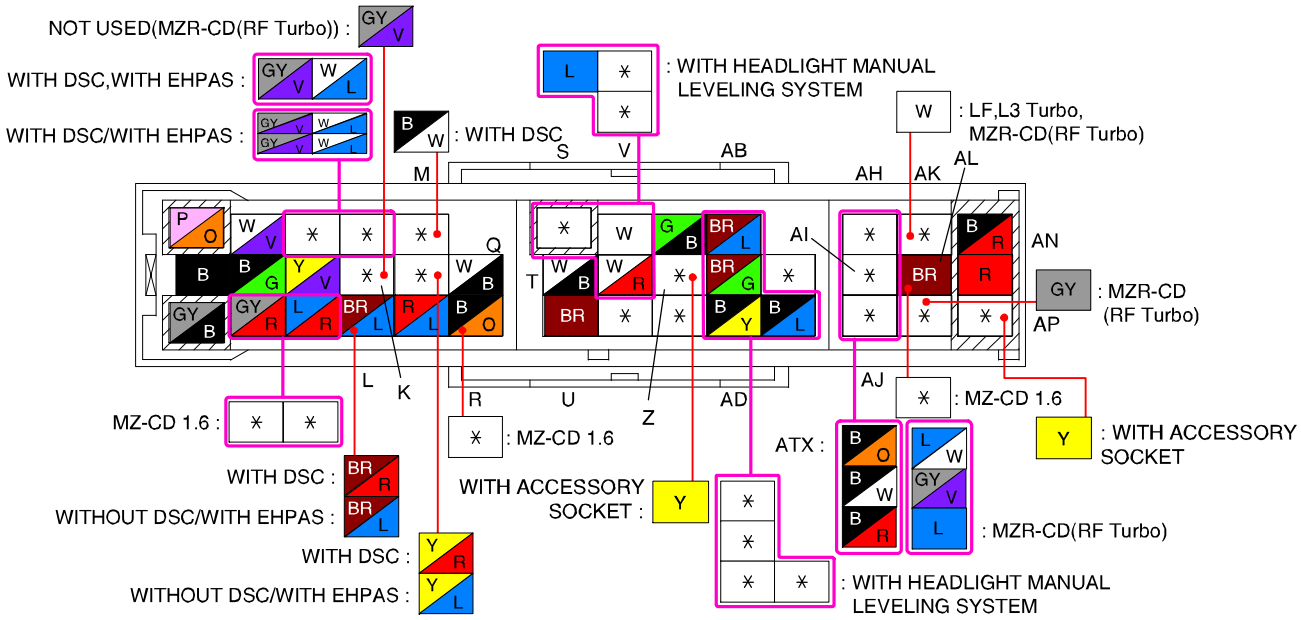


INSTRUMENT PANEL HARNESS

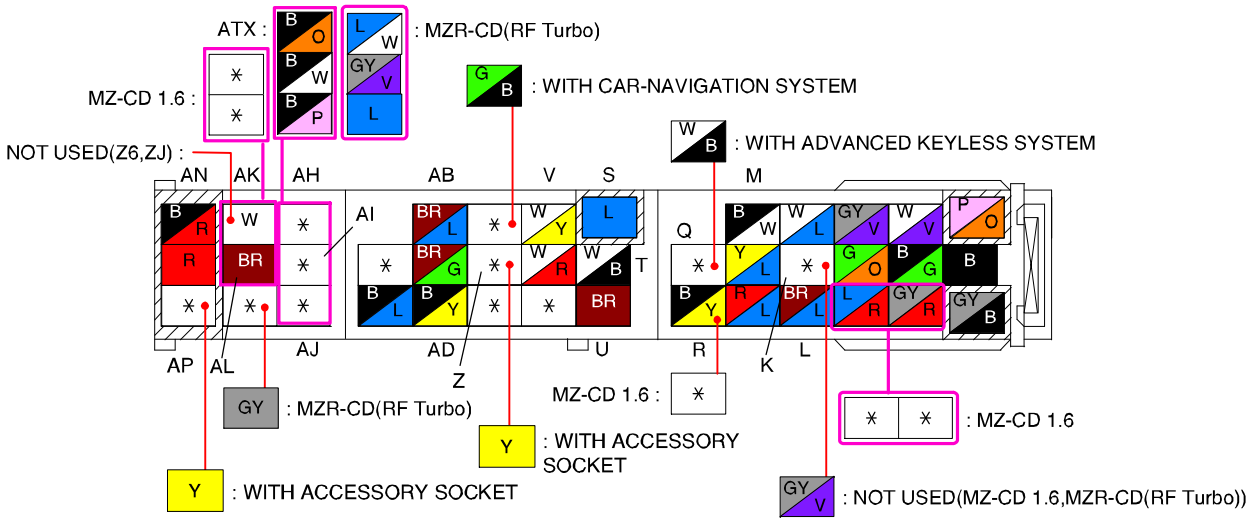


CAR-NAVIGATION SYSTEM (STANDARD TYPE AUDIO)

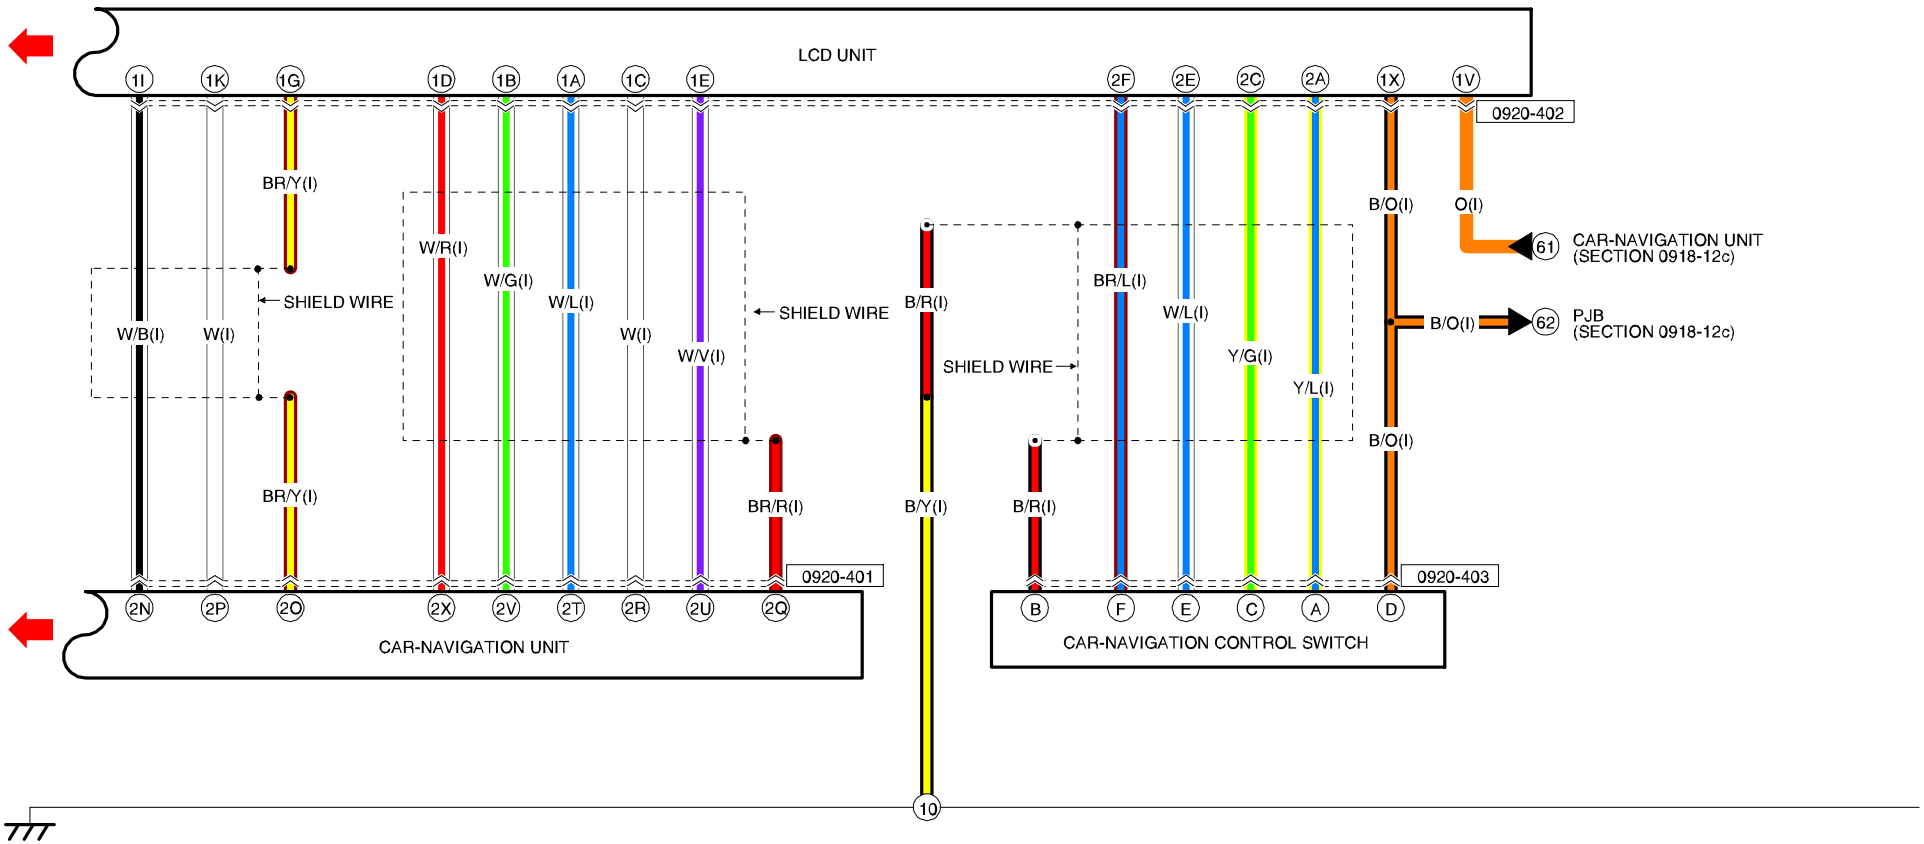


0920-401
CAR-NAVIGATION UNIT

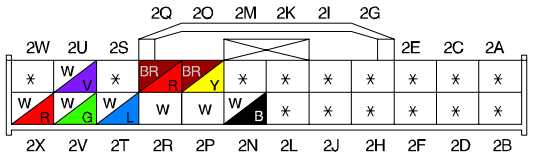


0920-402
LCD UNIT

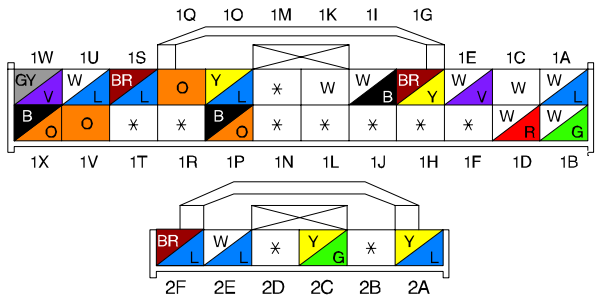


0920-403
CAR-NAVIGATION CONTROL SWITCH




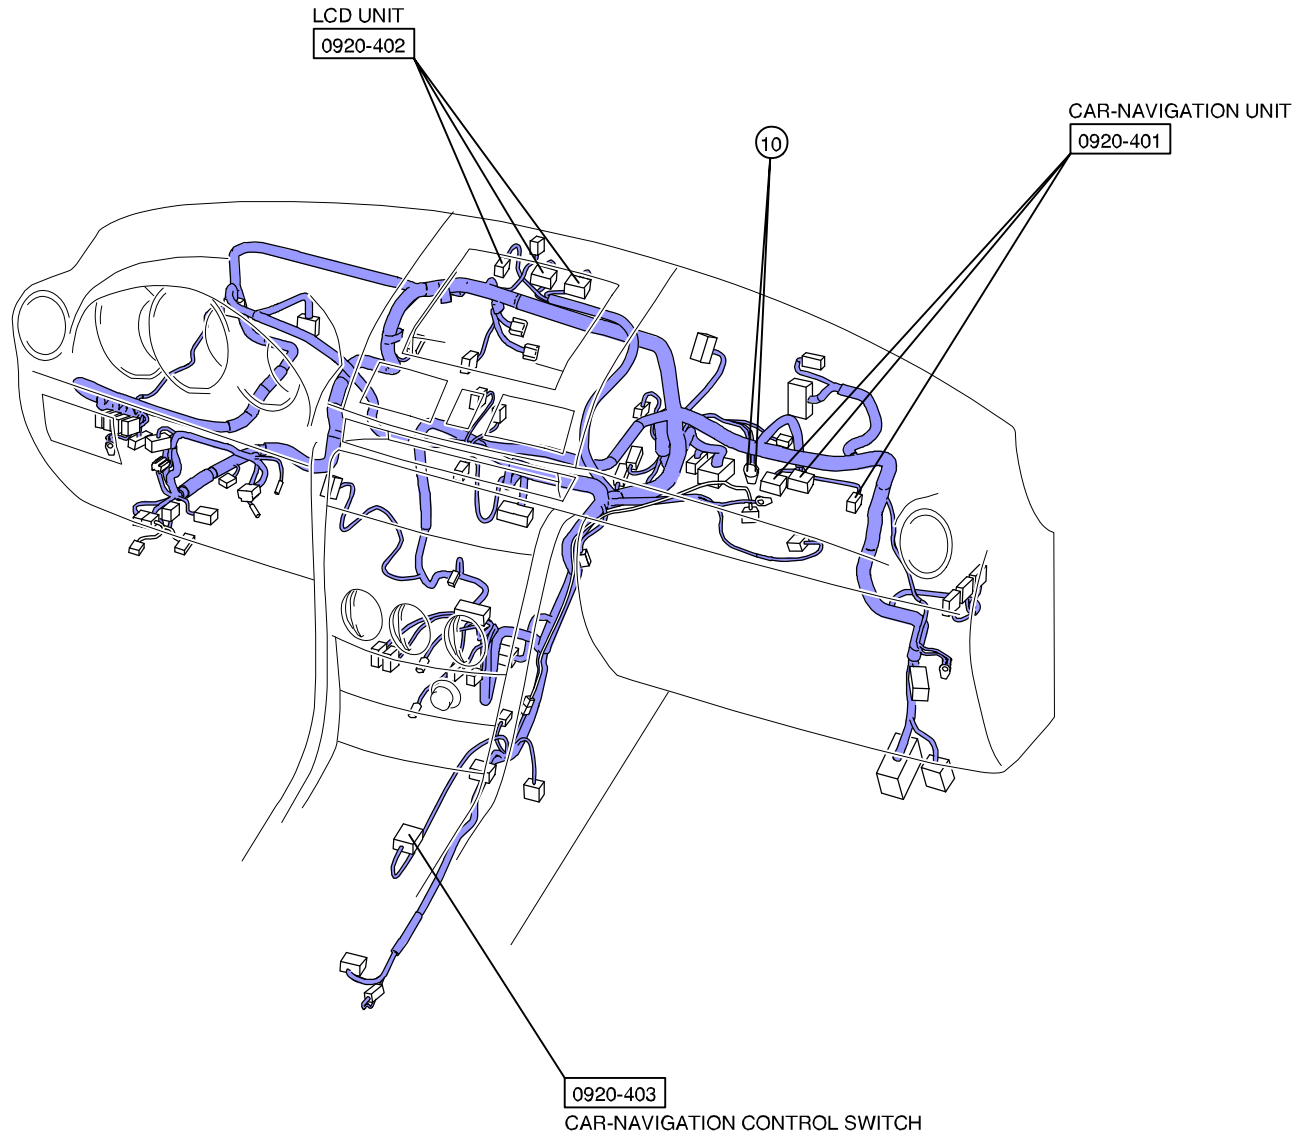
LCD UNIT
0920-402
CAR-NAVIGATION UNIT
0920-401
10
0920-403
CAR-NAVIGATION CONTROL SWITCH
:INSTRUMENT PANEL HARNESS


AUDIO SYSTEM (Bose® TYPE AUDIO/WITHOUT CAR-NAVIGATION SYSTEM)

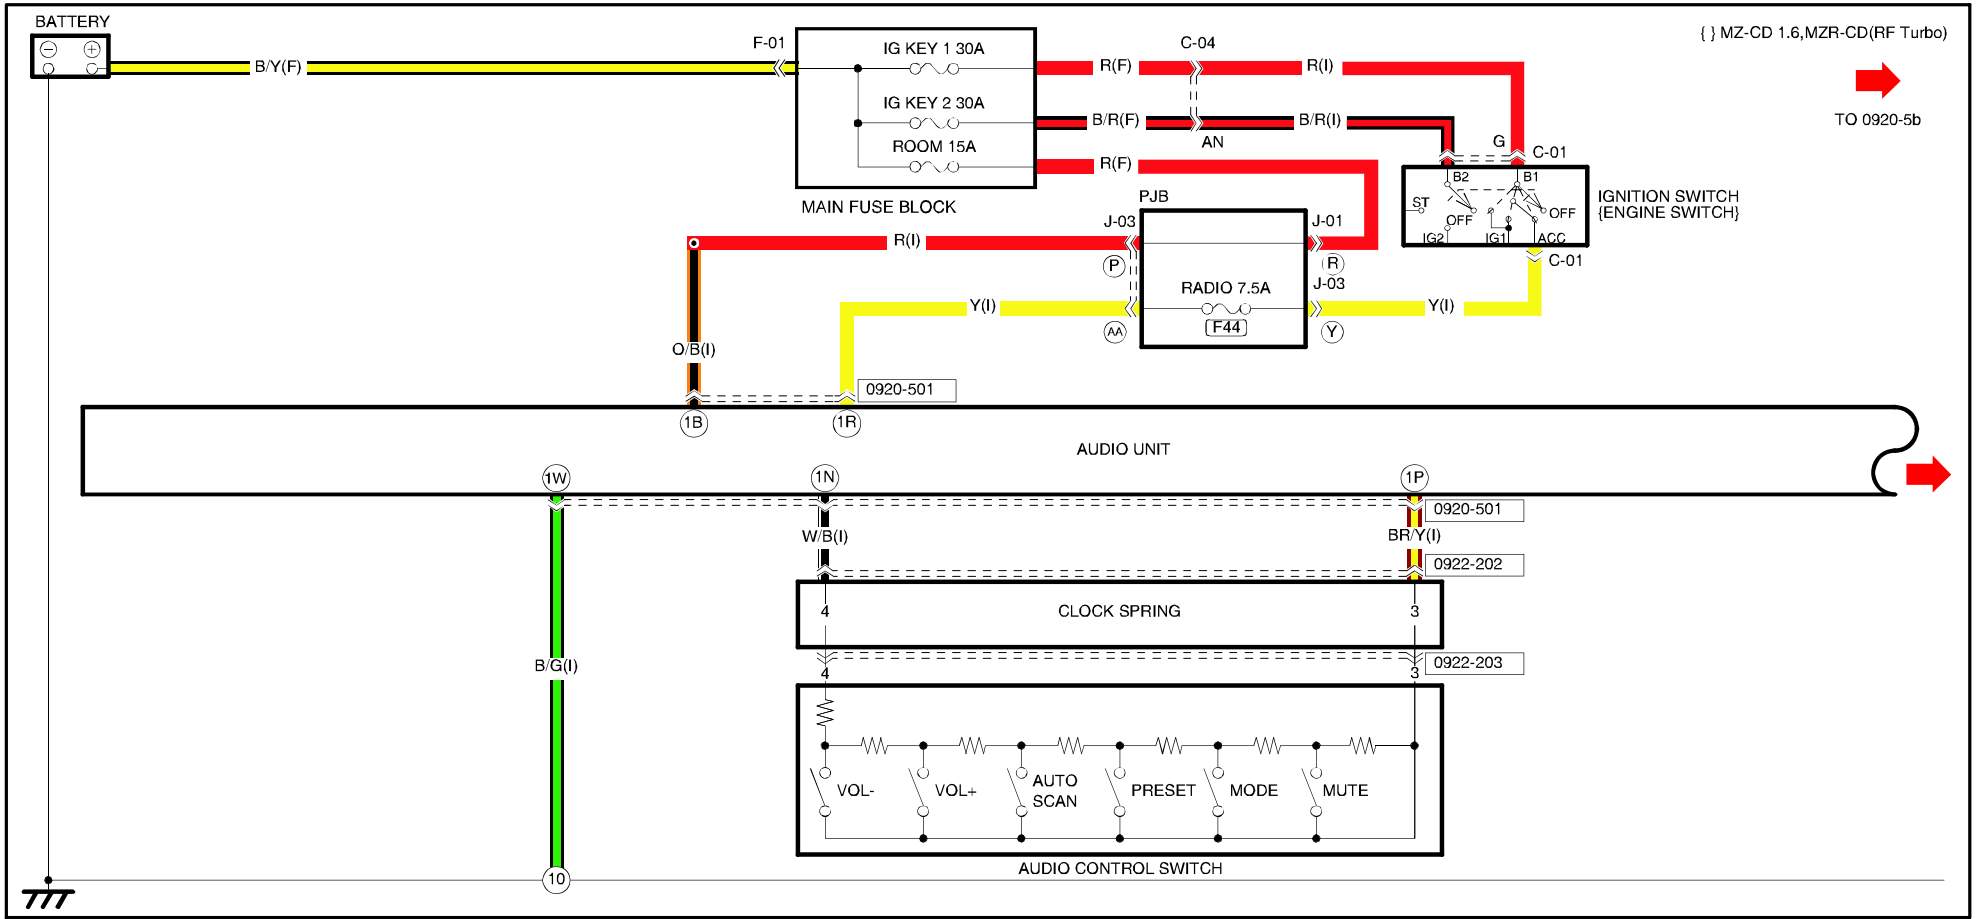


0920-501
AUDIO UNIT

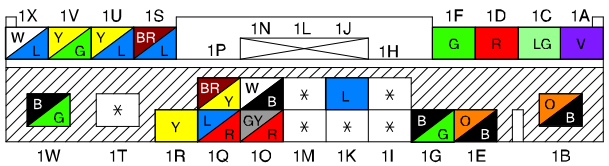

0922-202
INSTRUMENT PANEL HARNESS-CLOCK SPRING

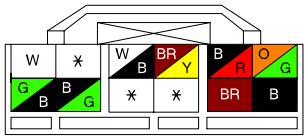


INSTRUMENT PANEL HARNESS




CLOCK SPRING

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0922-203
AUDIO CONTROL SWITCH



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

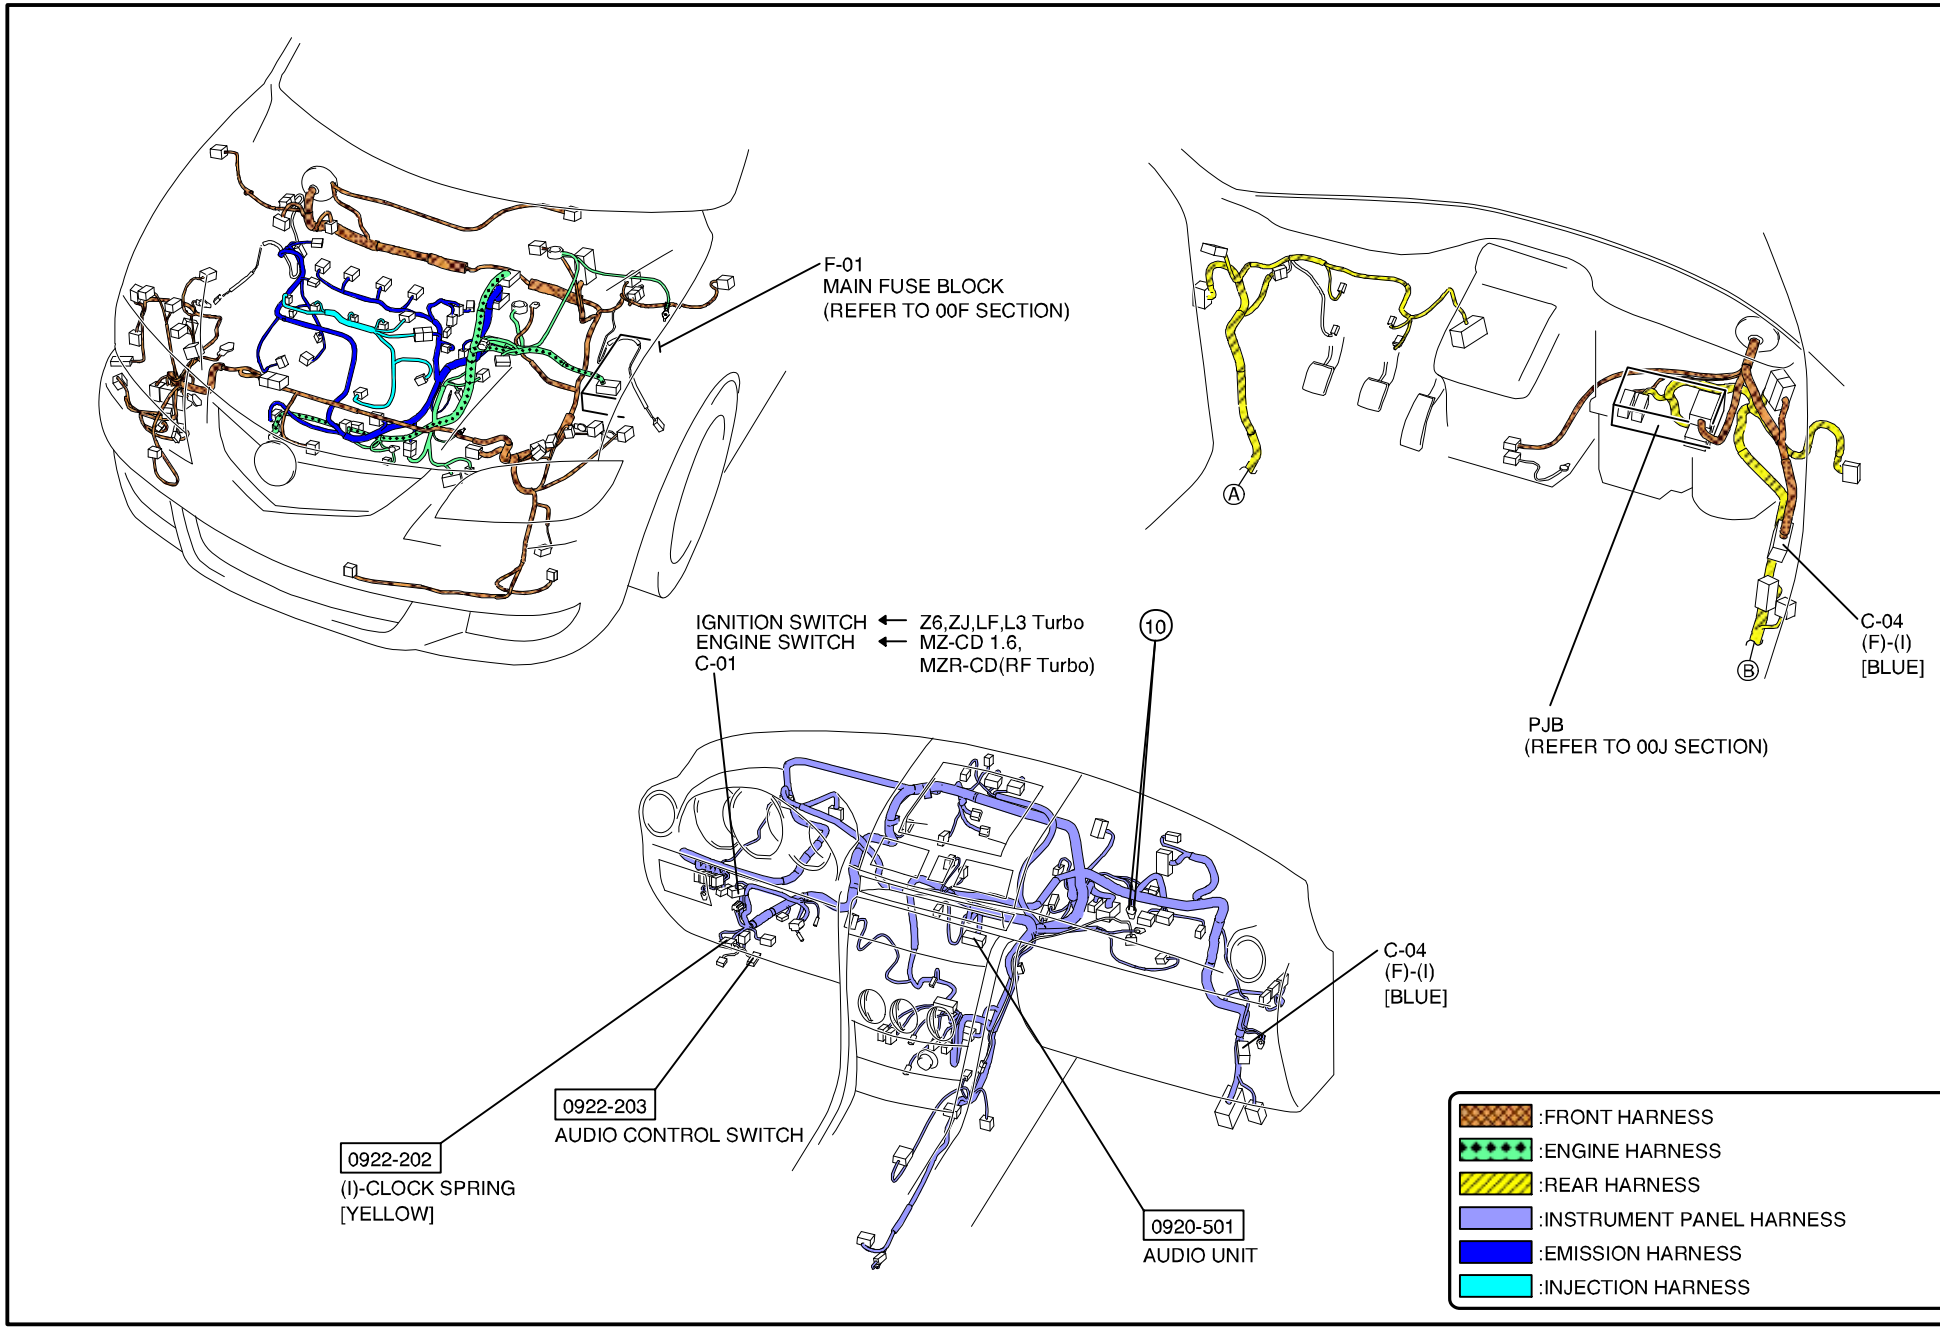

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
Ⓑ
C-04
(F)-(I)
[BLUE]
PJB
(REFER TO 00J SECTION)
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,
C-01 MZR-CD(RF Turbo)
10
C-04
(F)-(I)
[BLUE]
0922-202
(I)-CLOCK SPRING
[YELLOW]
0922-203
AUDIO CONTROL SWITCH
0920-501
AUDIO UNIT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

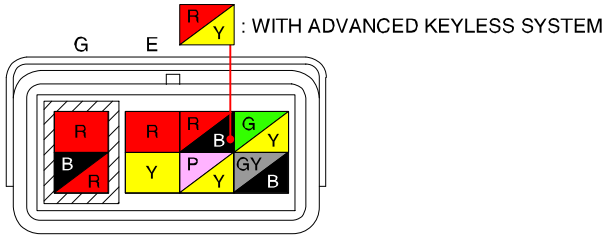


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

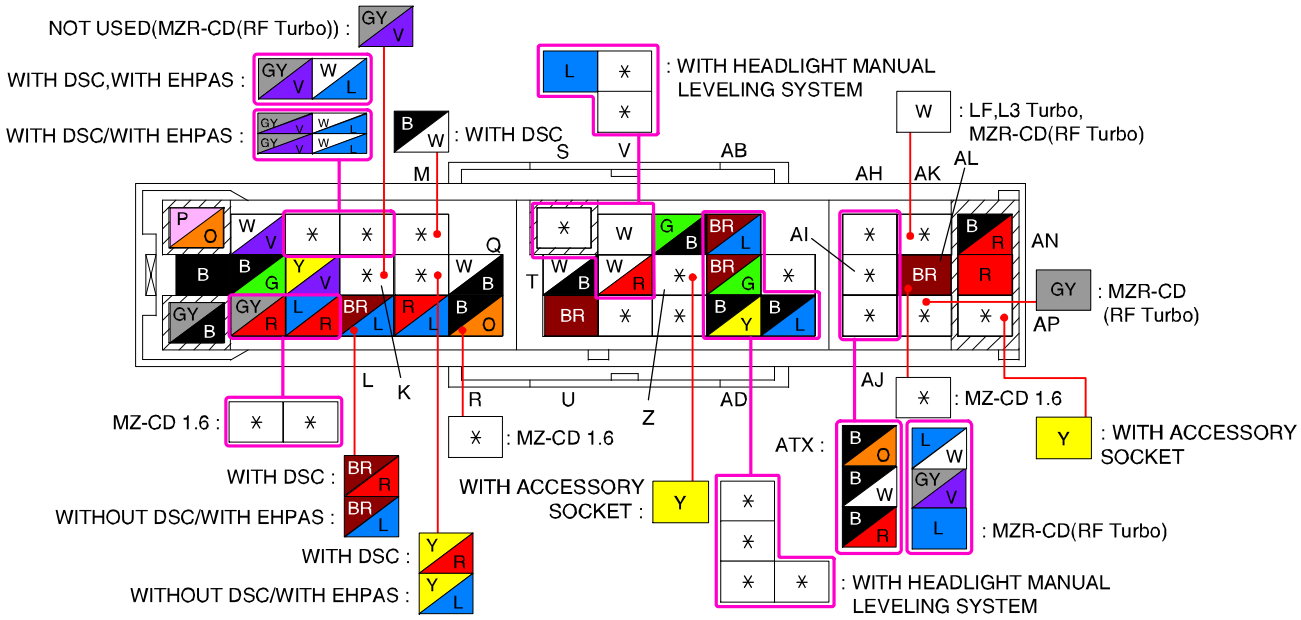


INSTRUMENT PANEL HARNESS

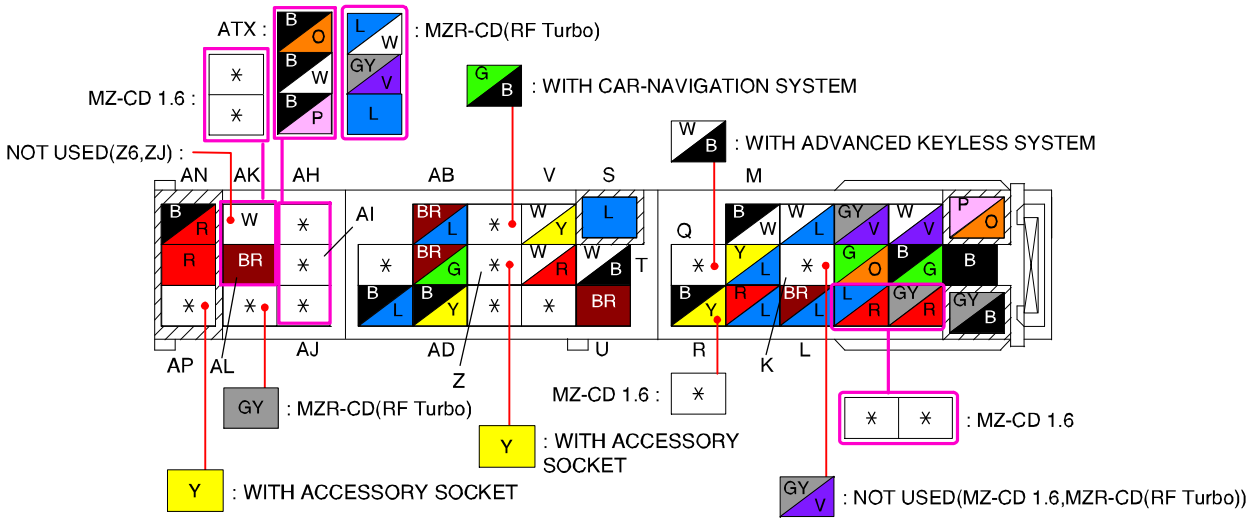


AUDIO SYSTEM (Bose® TYPE AUDIO/WITHOUT CAR-NAVIGATION SYSTEM)

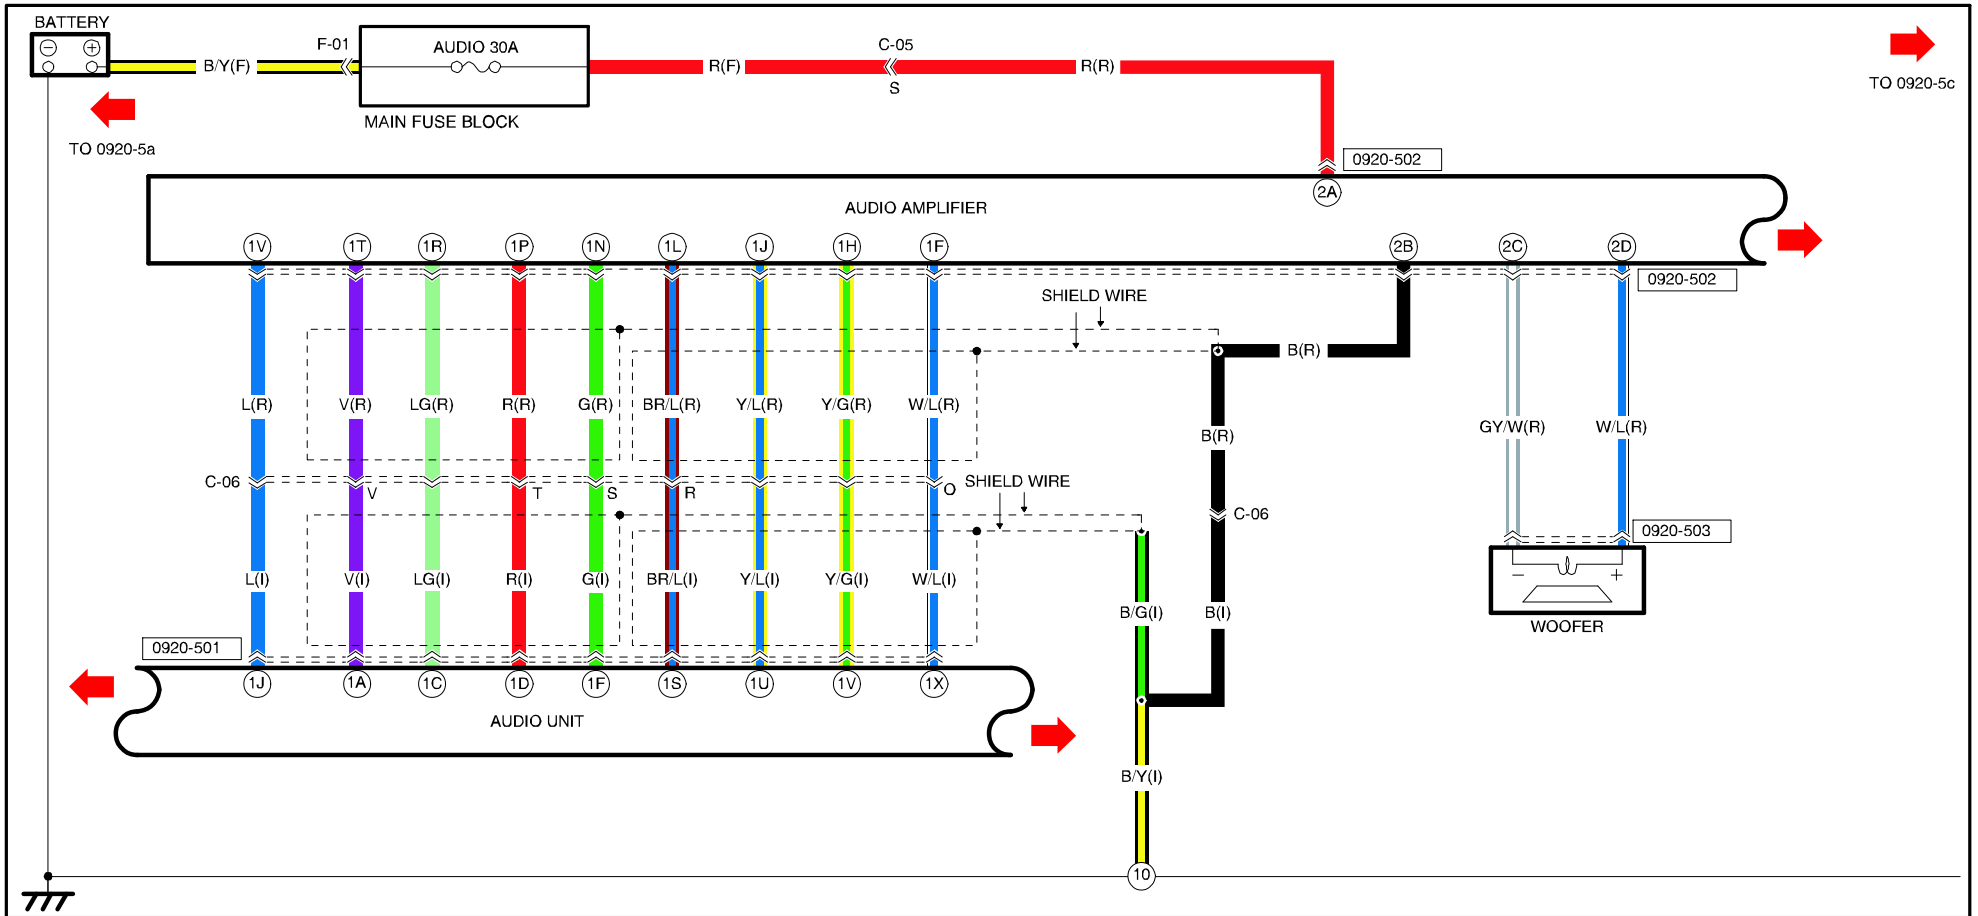


0920-501
AUDIO UNIT

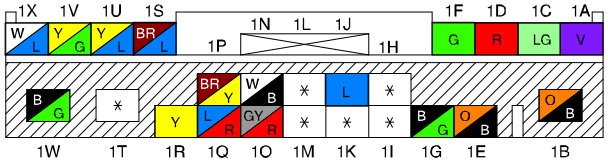


0920-502
AUDIO AMPLIFIER

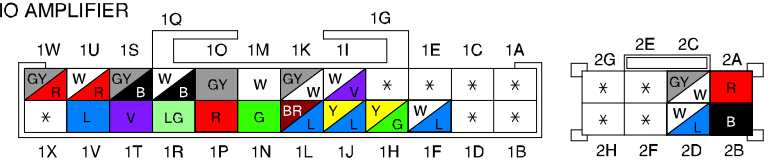


0920-503
WOOFER



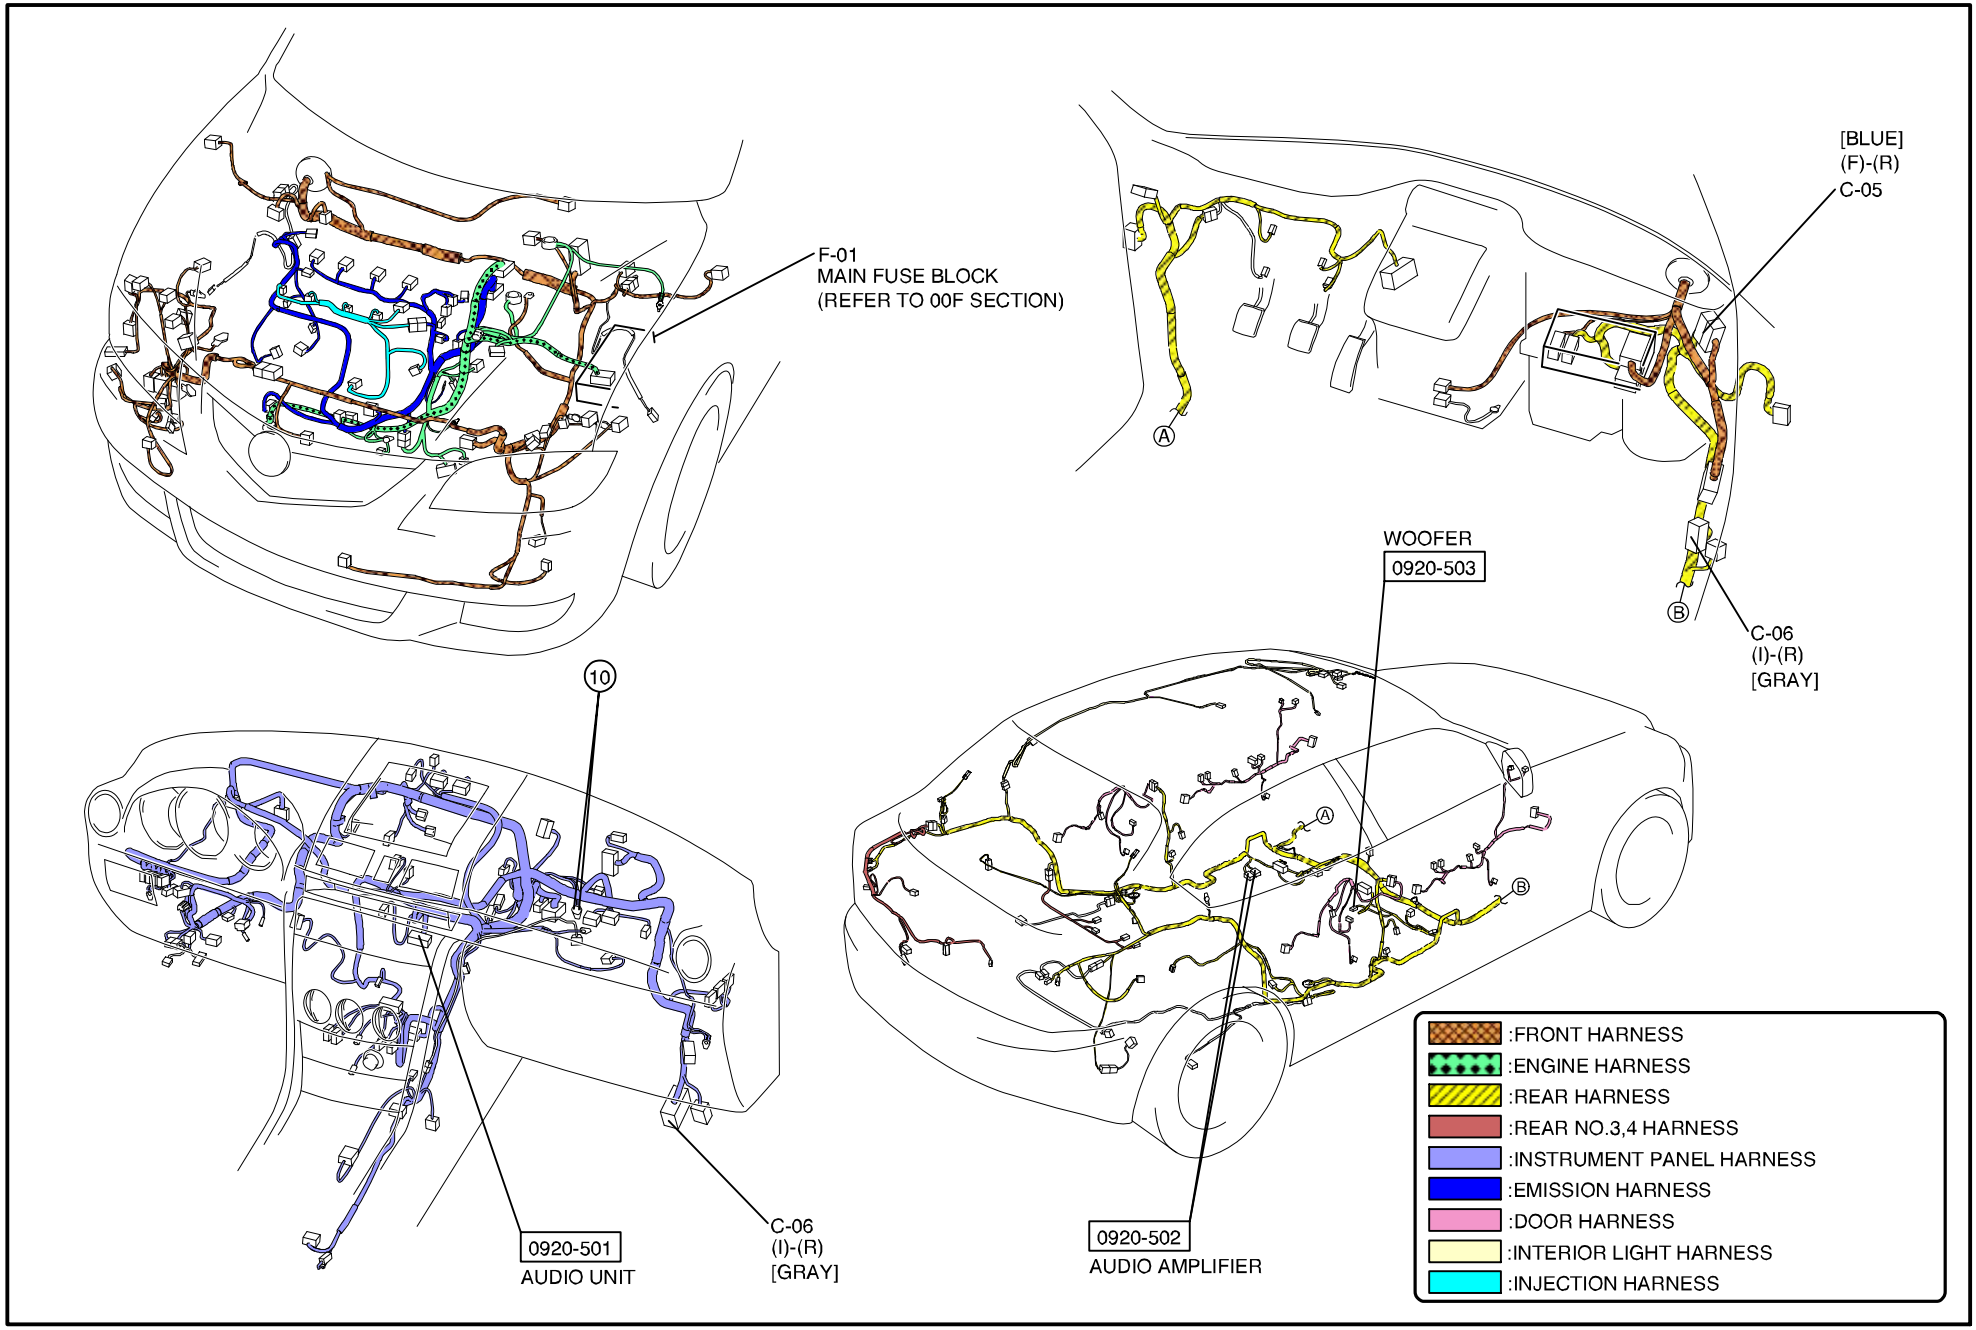

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
[BLUE]
(F)-(R)
C-05
Ⓐ
Ⓑ
WOOFER
0920-503
C-06
(I)-(R)
[GRAY]
10
0920-501
AUDIO UNIT
C-06
(I)-(R)
[GRAY]
0920-502
AUDIO AMPLIFIER
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

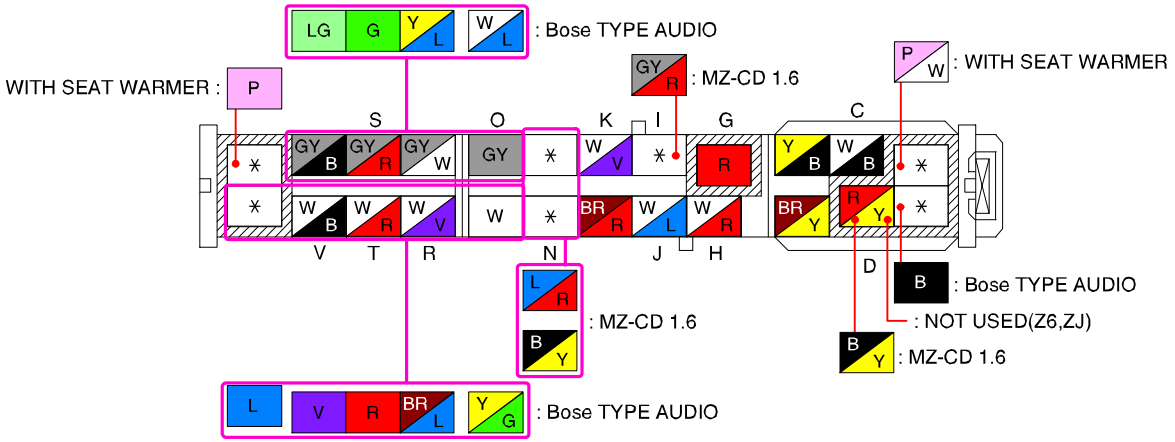


REAR HARNESS

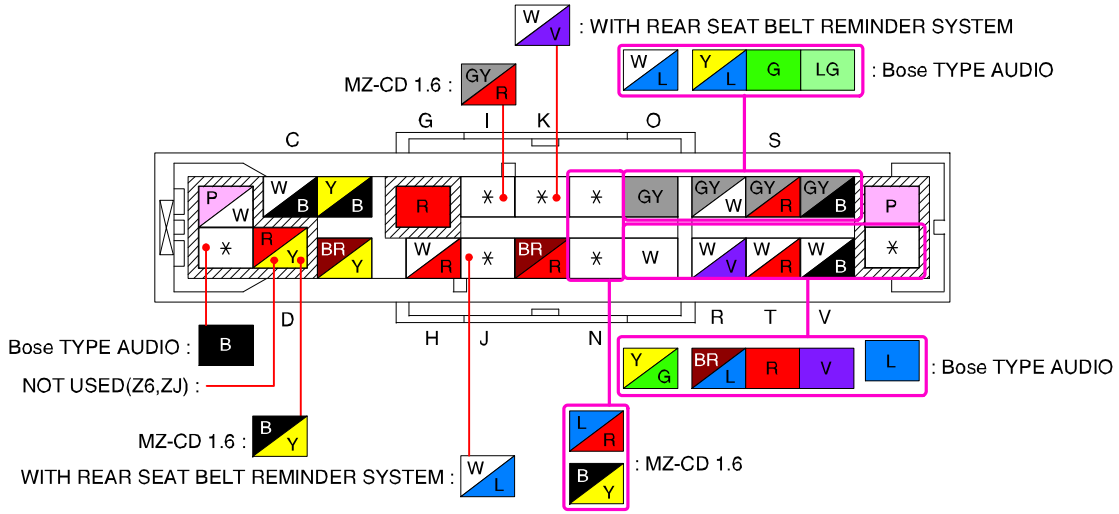


C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

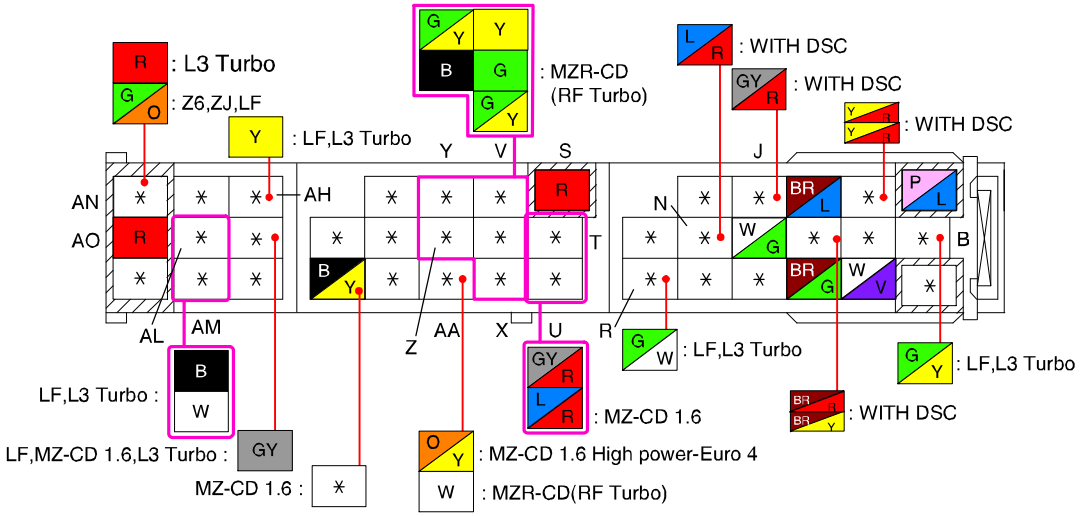


REAR HARNESS

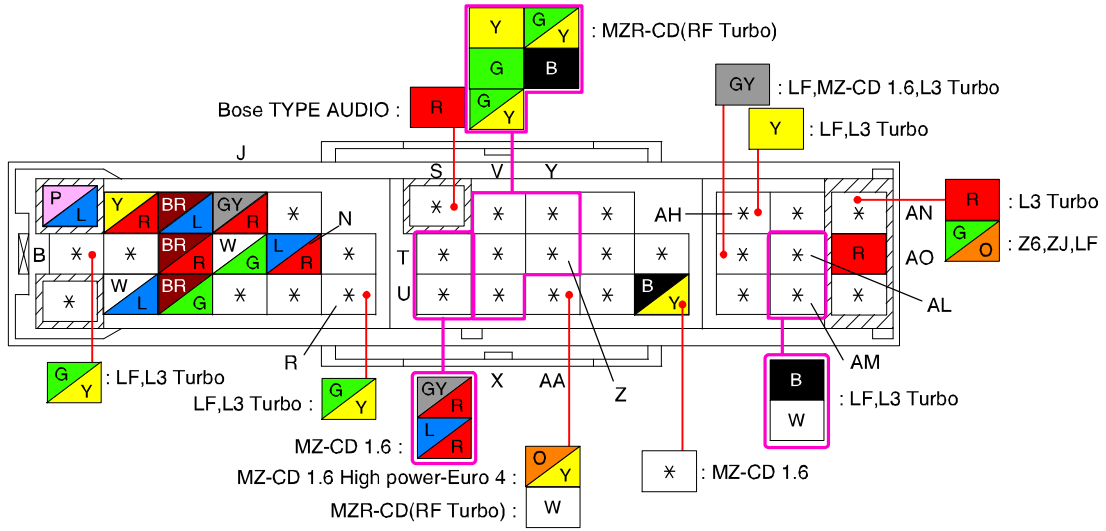


TO 0920-5b


TO 0920-5d

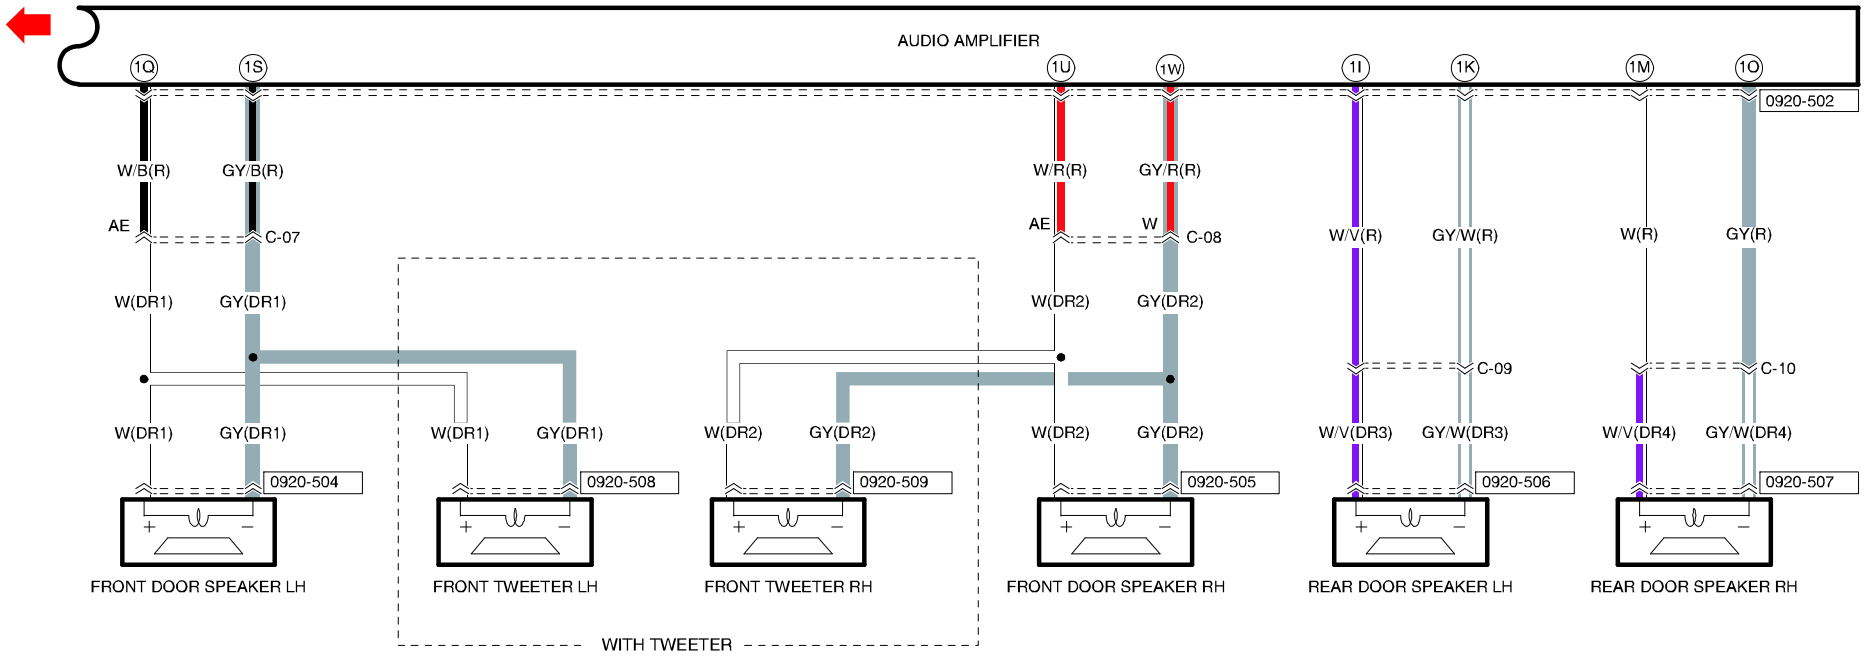

0920-502
AUDIO AMPLIFIER

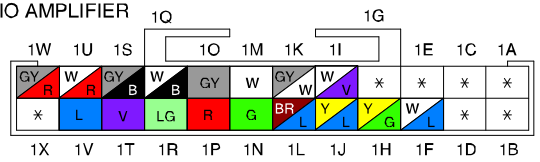

0920-504
FRONT DOOR SPEAKER LH



0920-505
FRONT DOOR SPEAKER RH



0920-506
REAR DOOR SPEAKER LH



0920-507
REAR DOOR SPEAKER RH




0920-508
FRONT TWEETER LH




0920-509
FRONT TWEETER RH

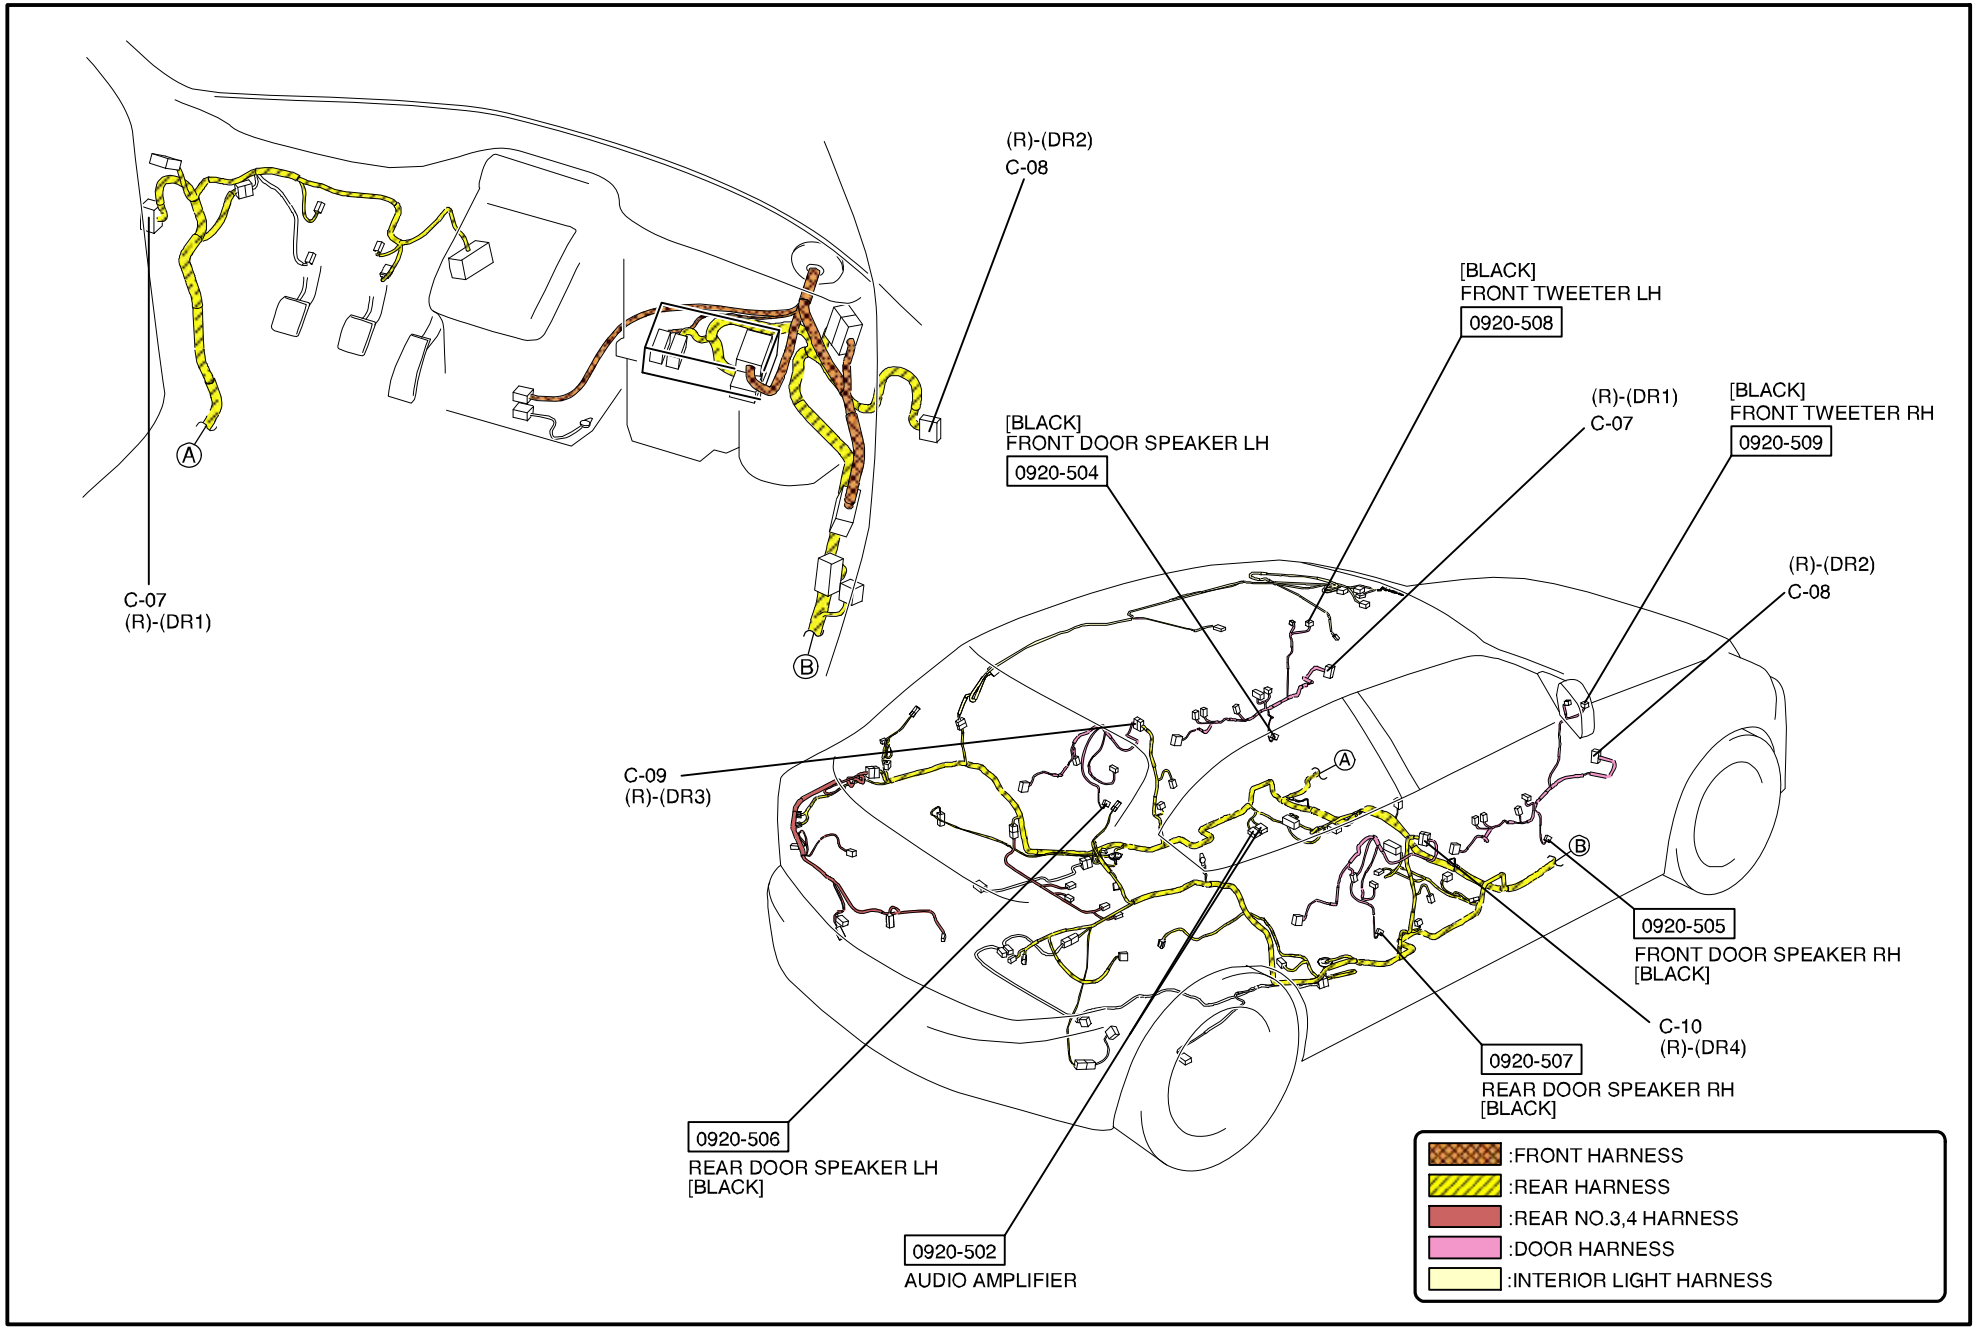



(R)-(DR2)
C-08
[BLACK]
FRONT TWEETER LH
0920-508
(R)-(DR1)
C-07
[BLACK]
FRONT TWEETER RH
0920-509
[BLACK]
FRONT DOOR SPEAKER LH
0920-504
(R)-(DR2)
C-08
C-07
(R)-(DR1)
A
B
C-09
(R)-(DR3)
0920-505
FRONT DOOR SPEAKER RH
[BLACK]
C-10
(R)-(DR4)
0920-507
REAR DOOR SPEAKER RH
[BLACK]
0920-506
REAR DOOR SPEAKER LH
[BLACK]
0920-502
AUDIO AMPLIFIER
:FRONT HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-07
REAR HARNESS-DOOR NO.1 HARNESS

REAR HARNESS

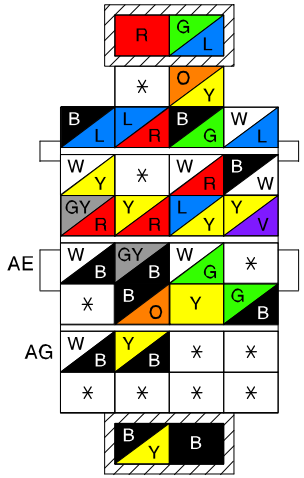


DOOR NO.1 HARNESS

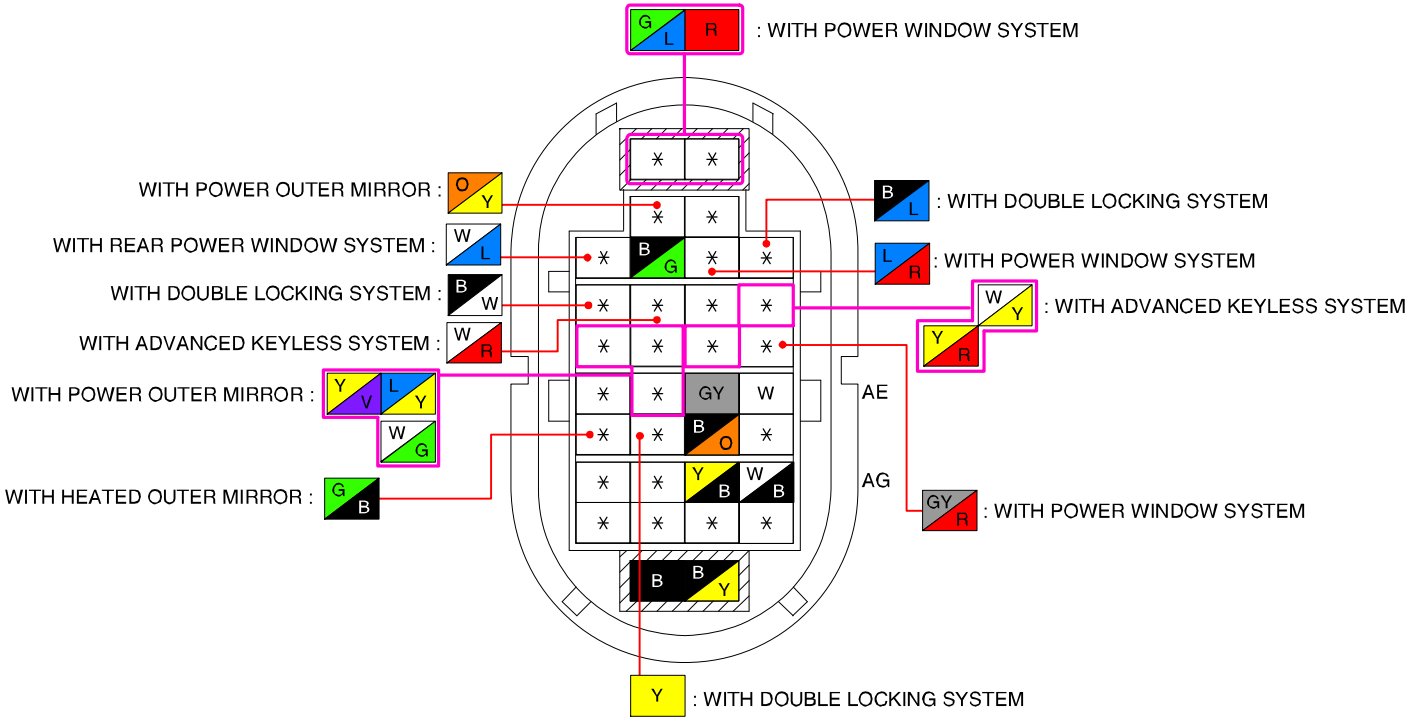


C-08
REAR HARNESS-DOOR NO.2 HARNESS


REAR HARNESS

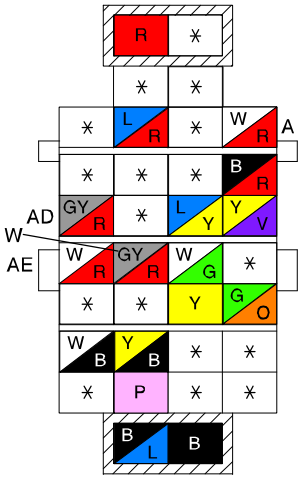


DOOR NO.2 HARNESS

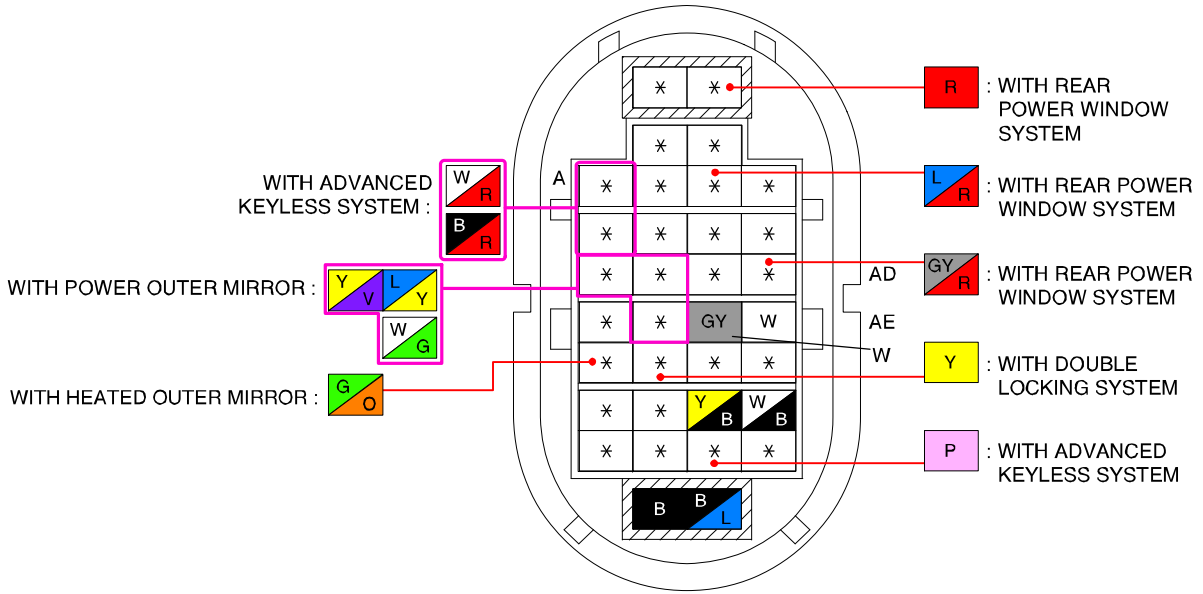


C-09
REAR HARNESS-DOOR NO.3 HARNESS

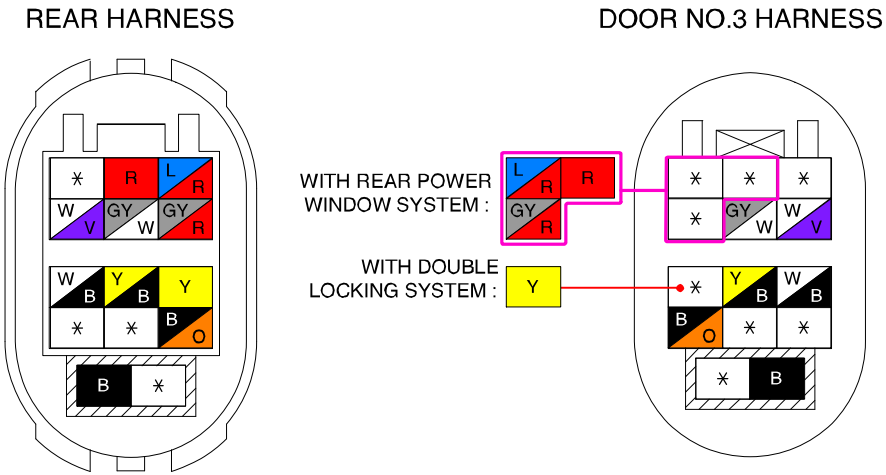


C-10
REAR HARNESS-DOOR NO.4 HARNESS

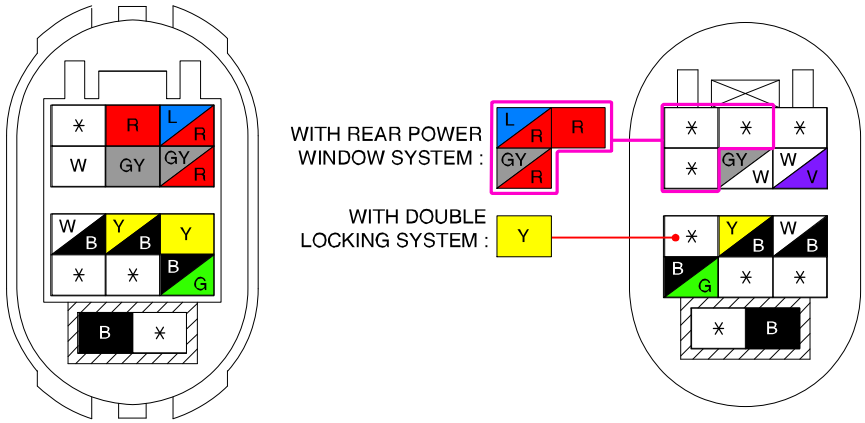


TO 0920-5c

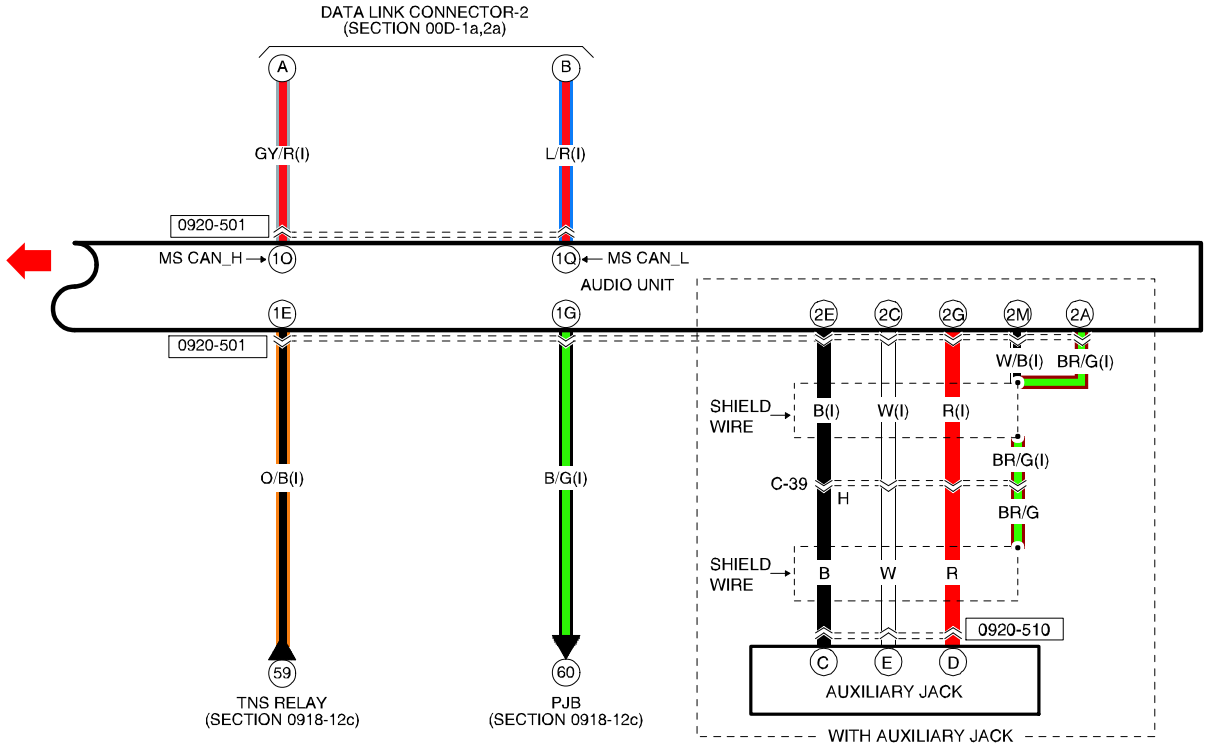



0920-501
AUDIO UNIT

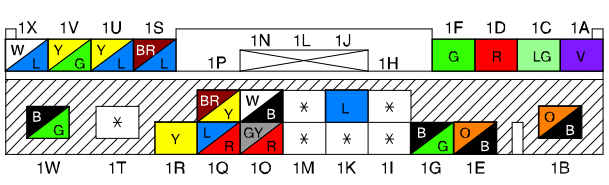

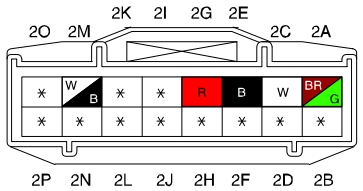


0920-510
AUXILIARY JACK



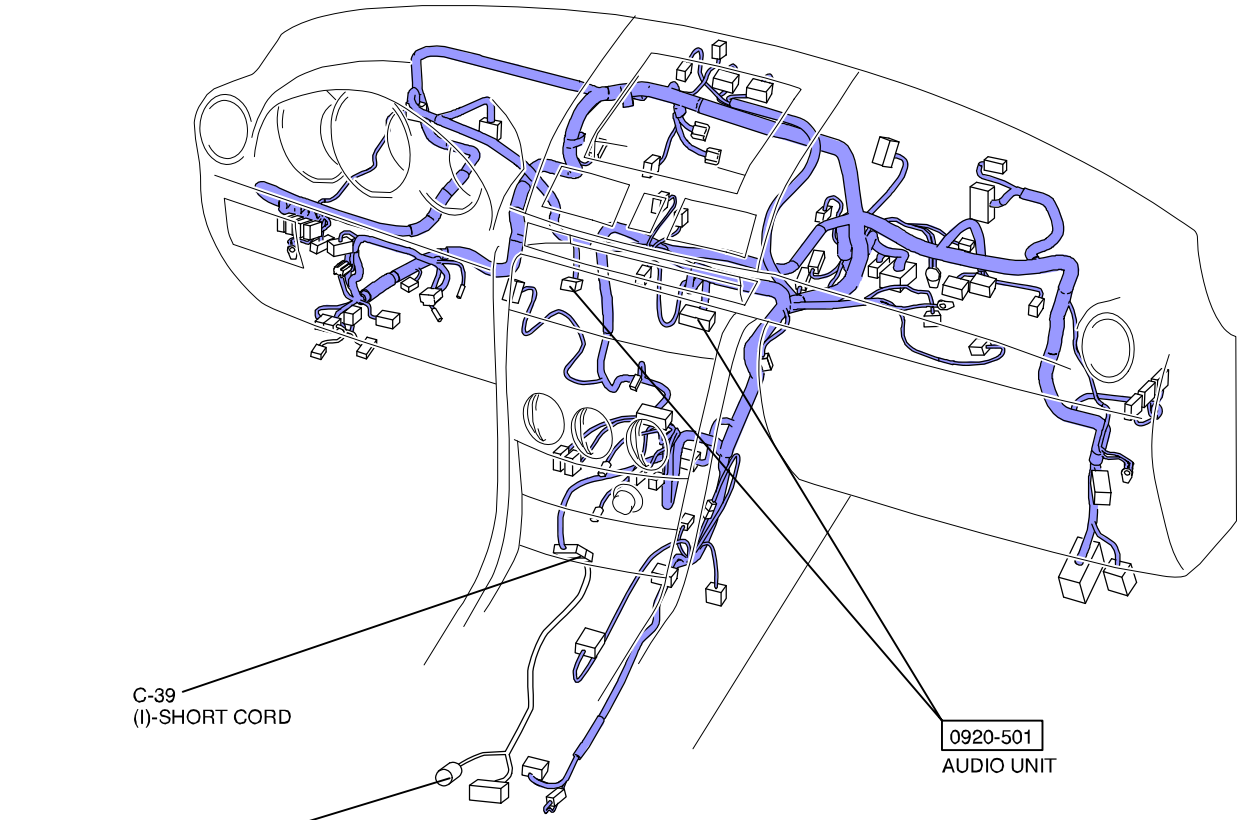

C-39
(I)-SHORT CORD
0920-501
AUDIO UNIT
0920-510
AUXILIARY JACK
:INSTRUMENT PANEL HARNESS

C-39
INSTRUMENT PANEL HARNESS-SHORT CORD


INSTRUMENT PANEL HARNESS

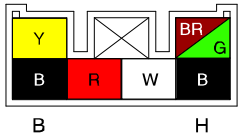


SHORT CORD

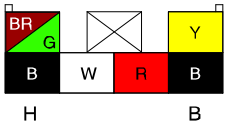


AUDIO SYSTEM (Bose® TYPE AUDIO/WITH CAR-NAVIGATION SYSTEM)

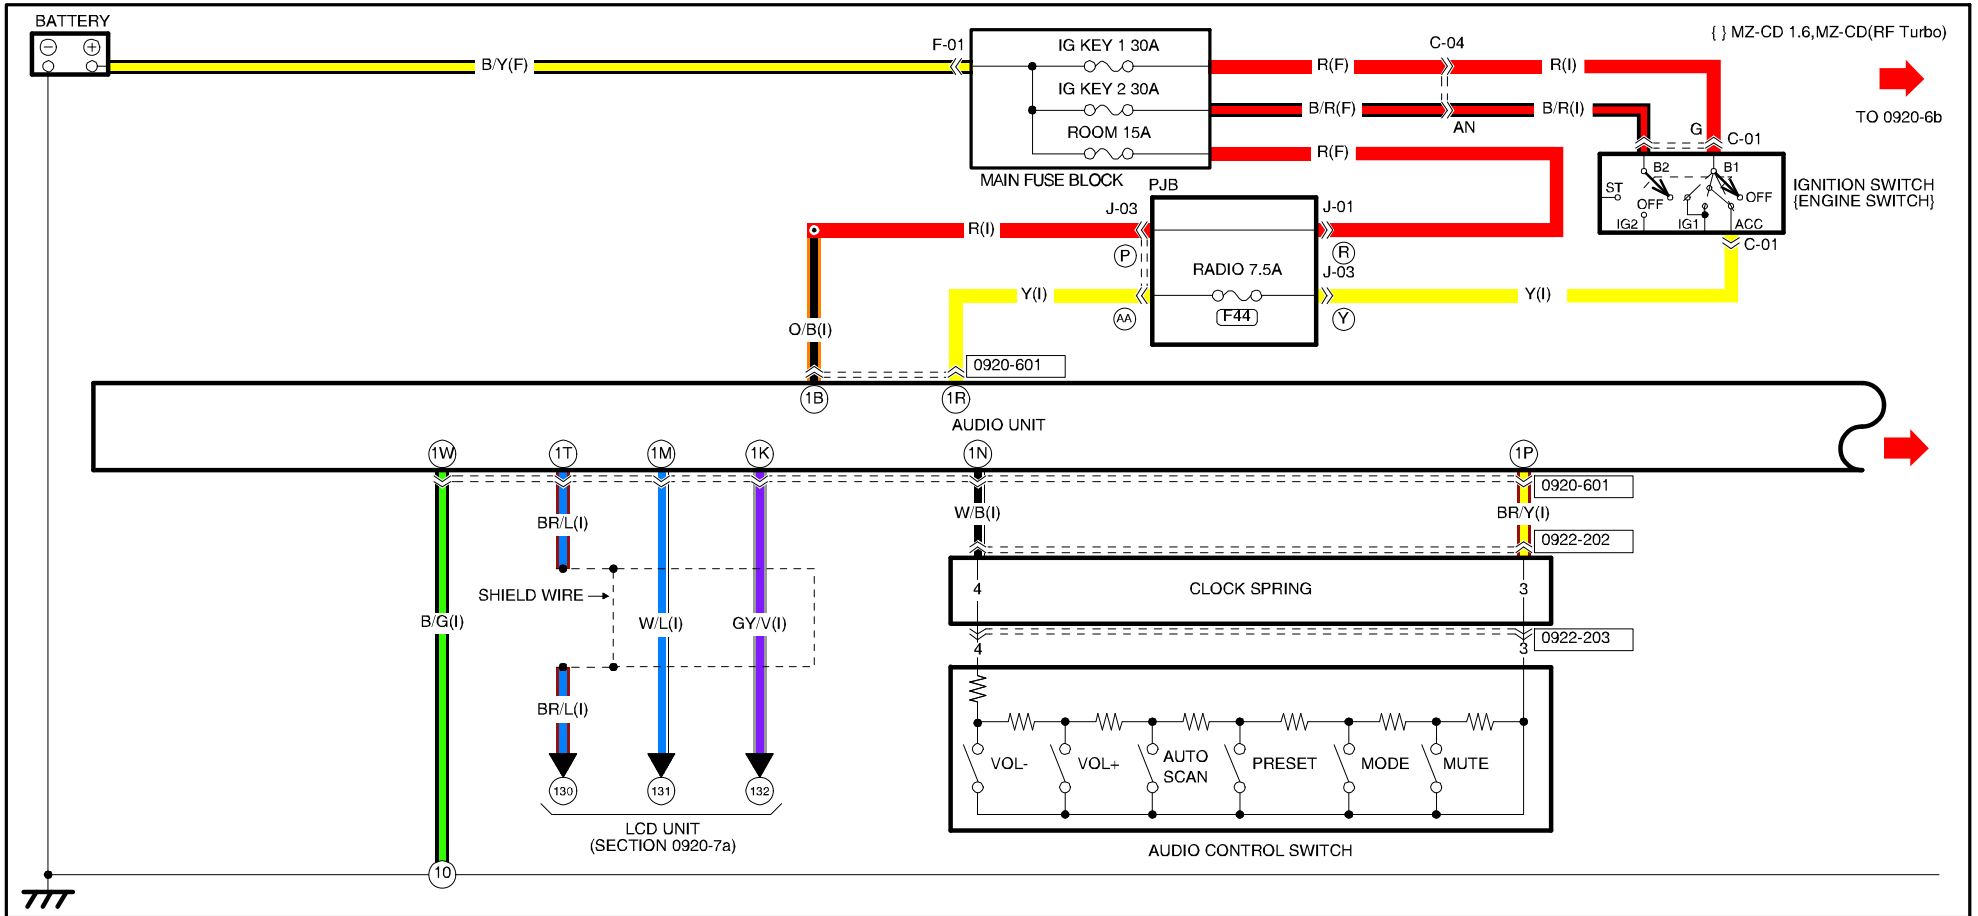


0920-601
AUDIO UNIT

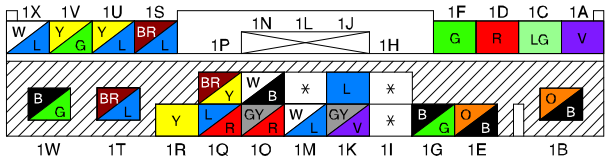

0922-202
INSTRUMENT PANEL HARNESS-CLOCK SPRING

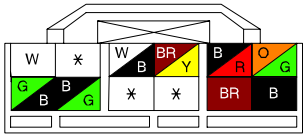


INSTRUMENT PANEL HARNESS




CLOCK SPRING

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0922-203
AUDIO CONTROL SWITCH



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

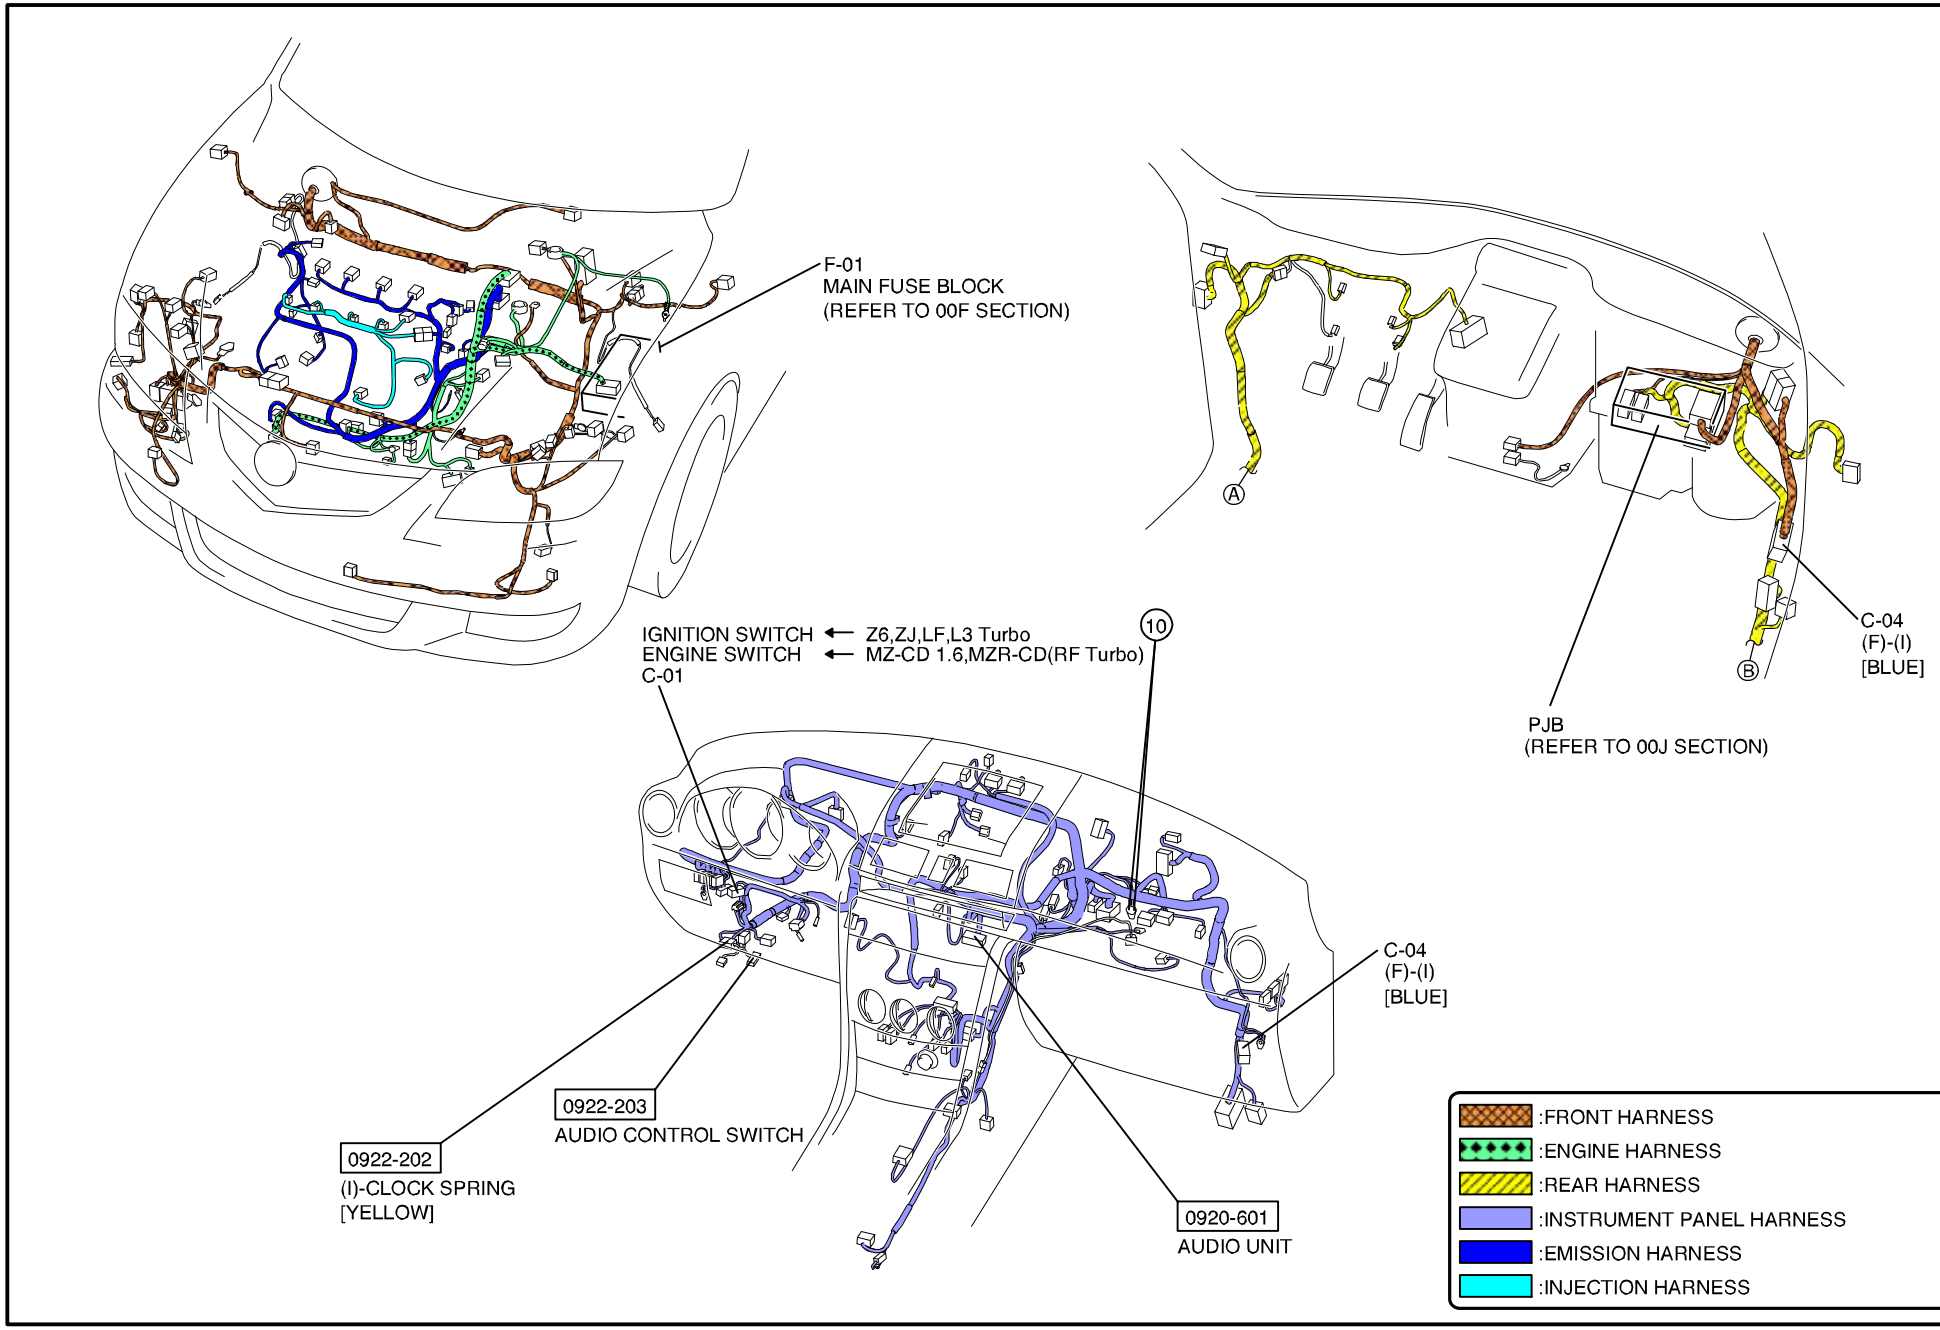

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
Ⓑ
C-04
(F)-(I)
[BLUE]
PJB
(REFER TO 00J SECTION)
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-01
10
C-04
(F)-(I)
[BLUE]
0922-202
(I)-CLOCK SPRING
[YELLOW]
0922-203
AUDIO CONTROL SWITCH
0920-601
AUDIO UNIT
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

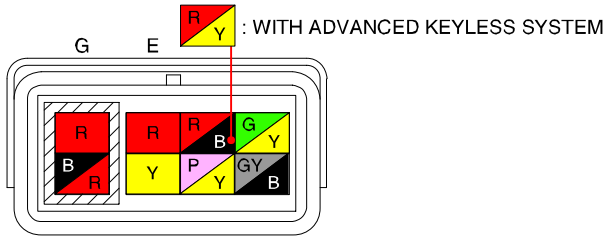


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

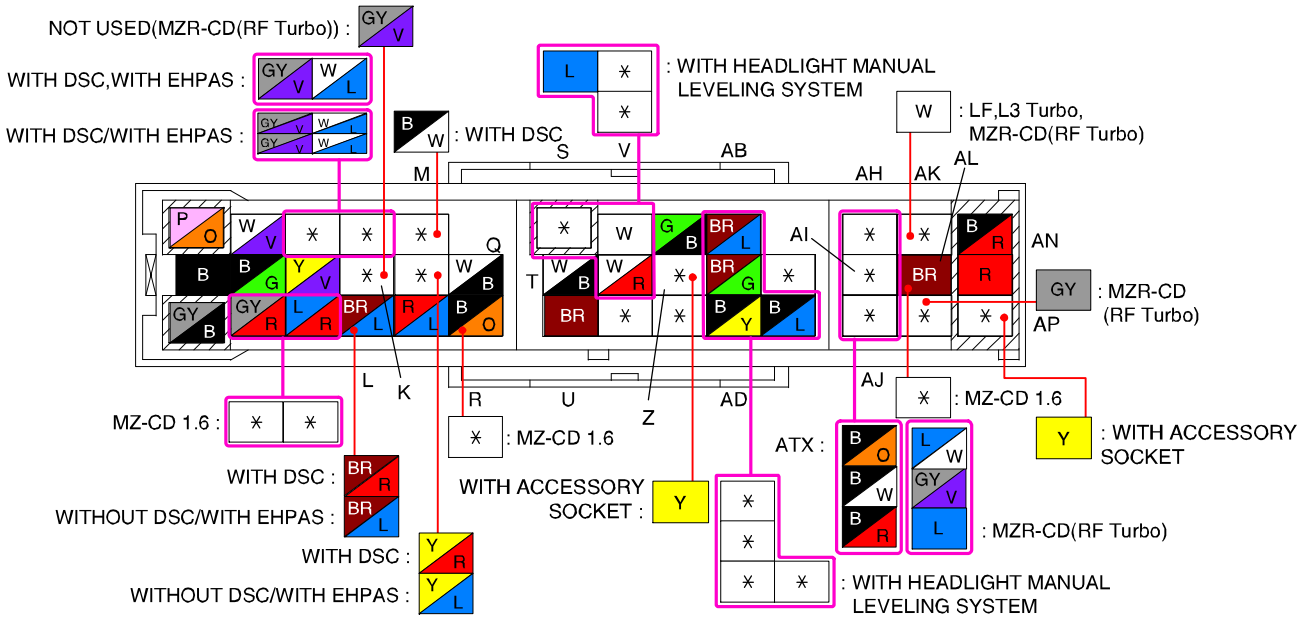


INSTRUMENT PANEL HARNESS

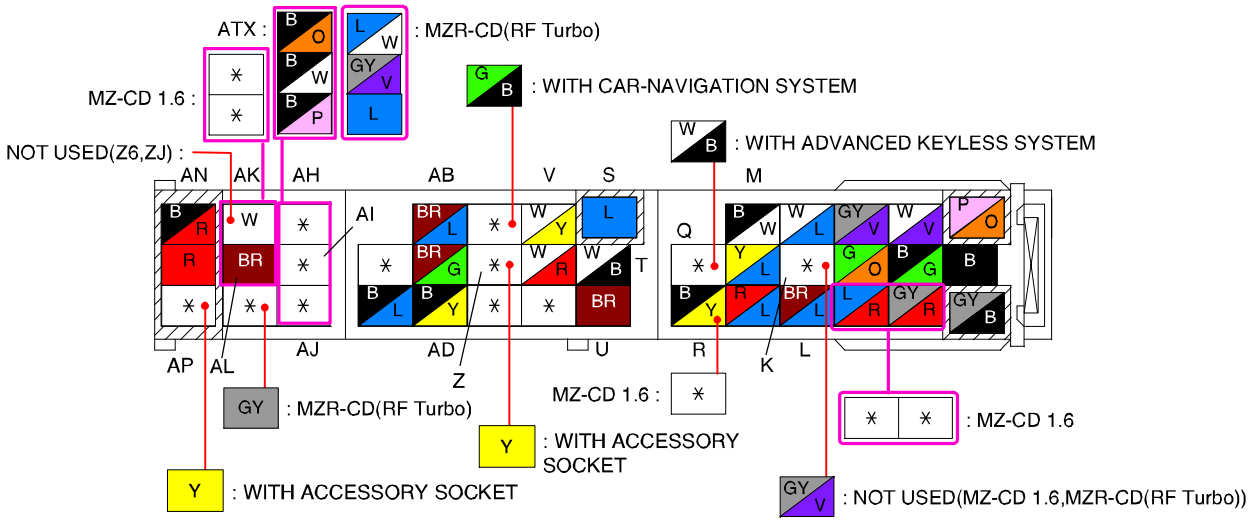


AUDIO SYSTEM (Bose® TYPE AUDIO/WITH CAR-NAVIGATION SYSTEM)

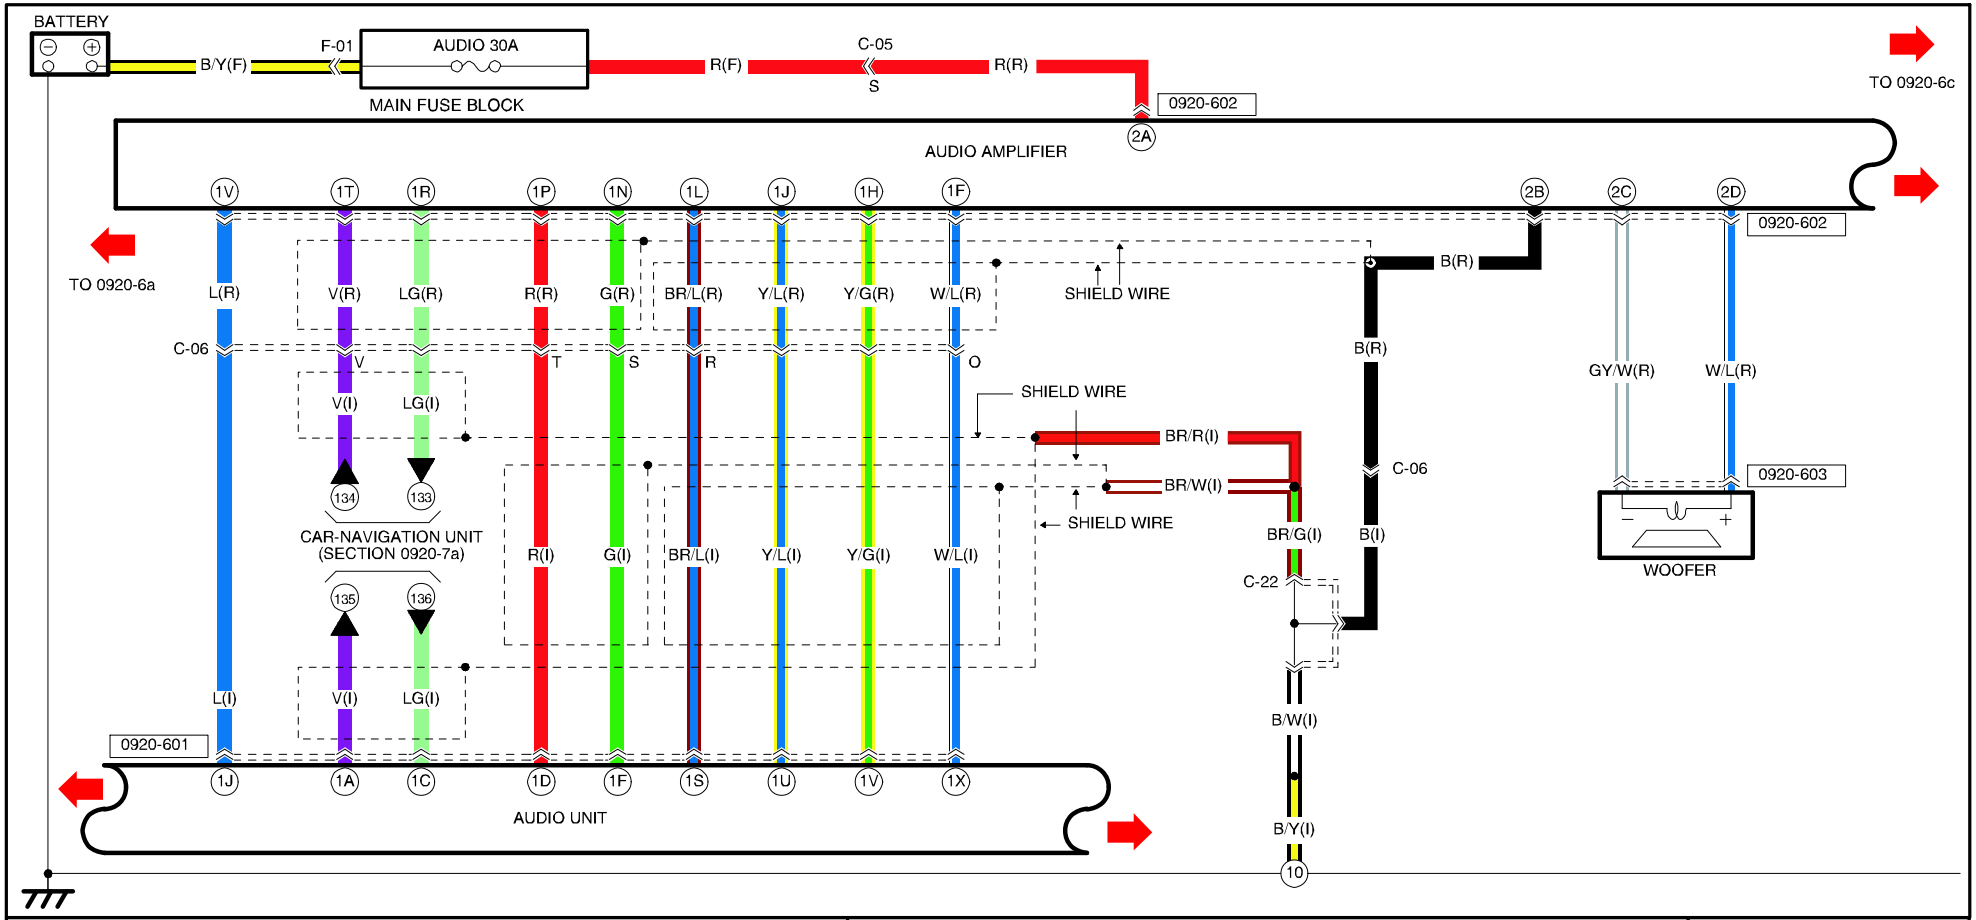


0920-601
AUDIO UNIT

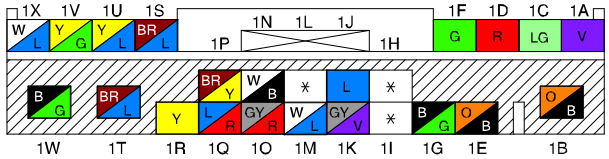


0920-602
AUDIO AMPLIFIER

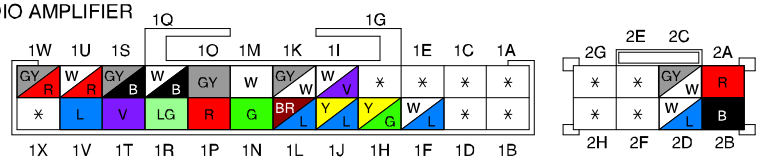


0920-603
WOOFER



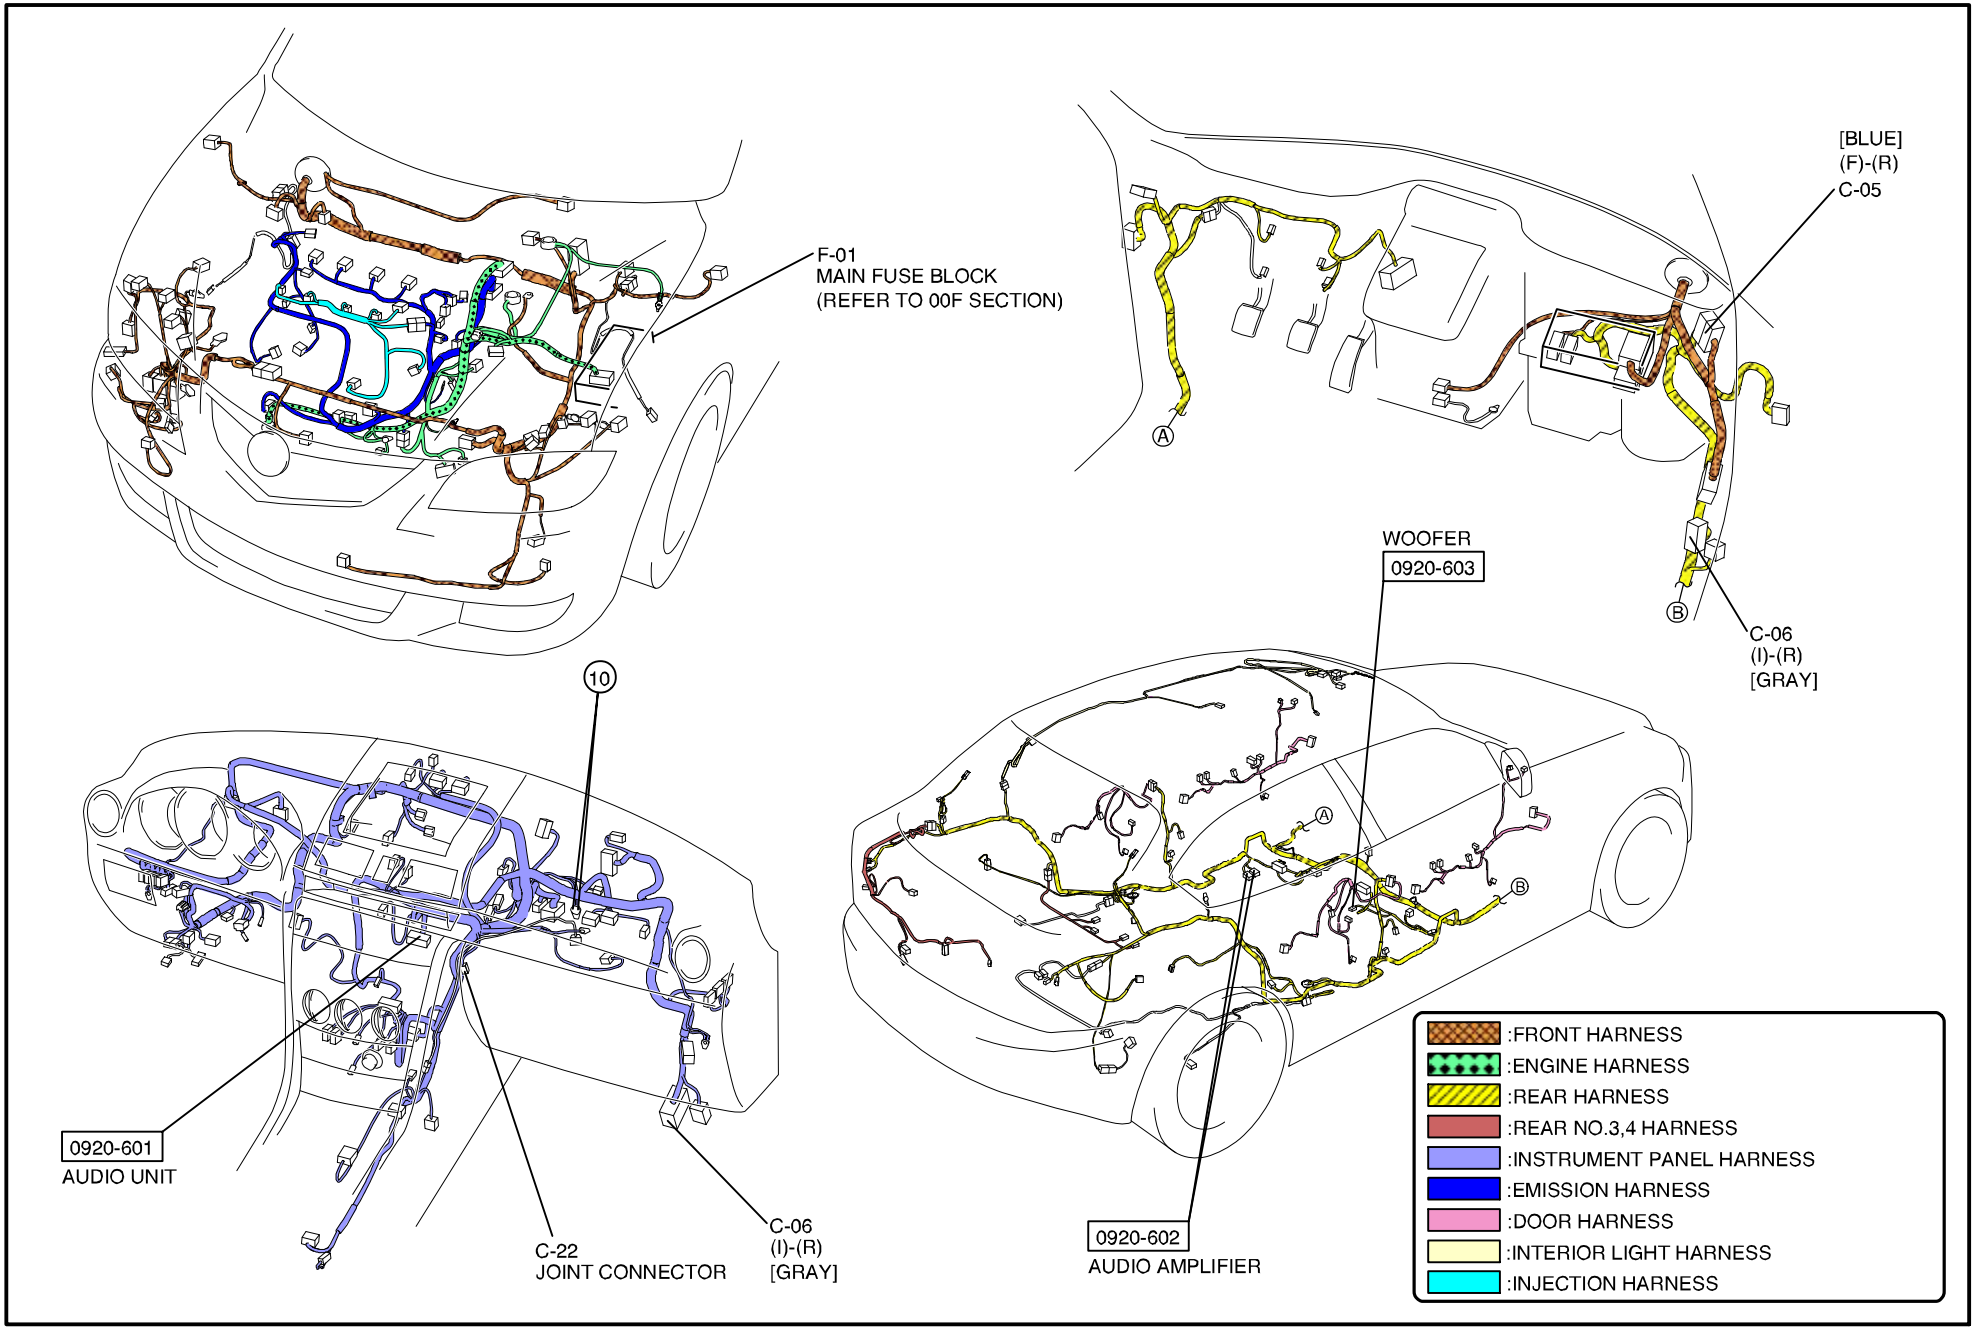

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
[BLUE]
(F)-(R)
C-05
Ⓐ
Ⓑ
WOOFER
0920-603
C-06
(I)-(R)
[GRAY]
10
0920-601
AUDIO UNIT
C-22
JOINT CONNECTOR
C-06
(I)-(R)
[GRAY]
0920-602
AUDIO AMPLIFIER
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS
:INJECTION HARNESS

C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

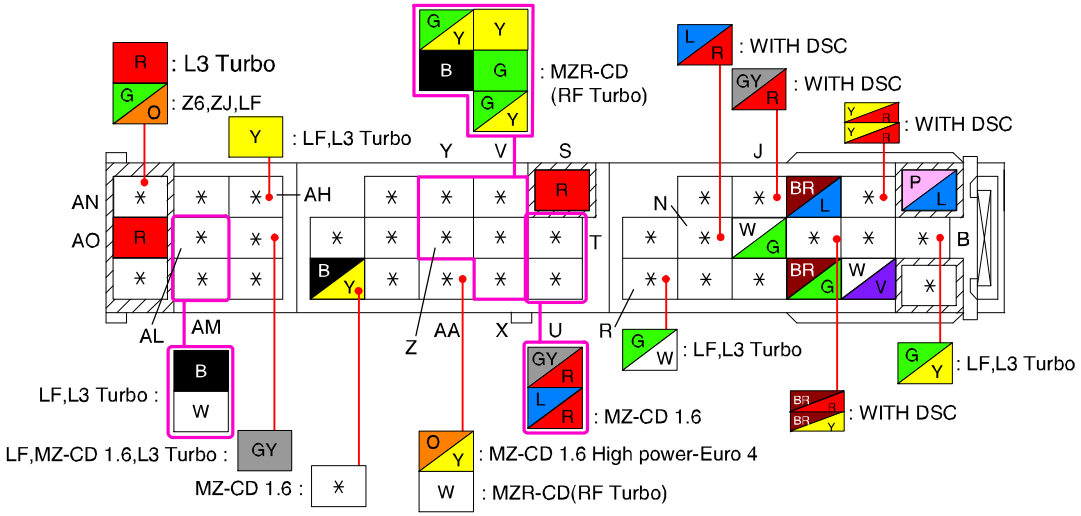


REAR HARNESS

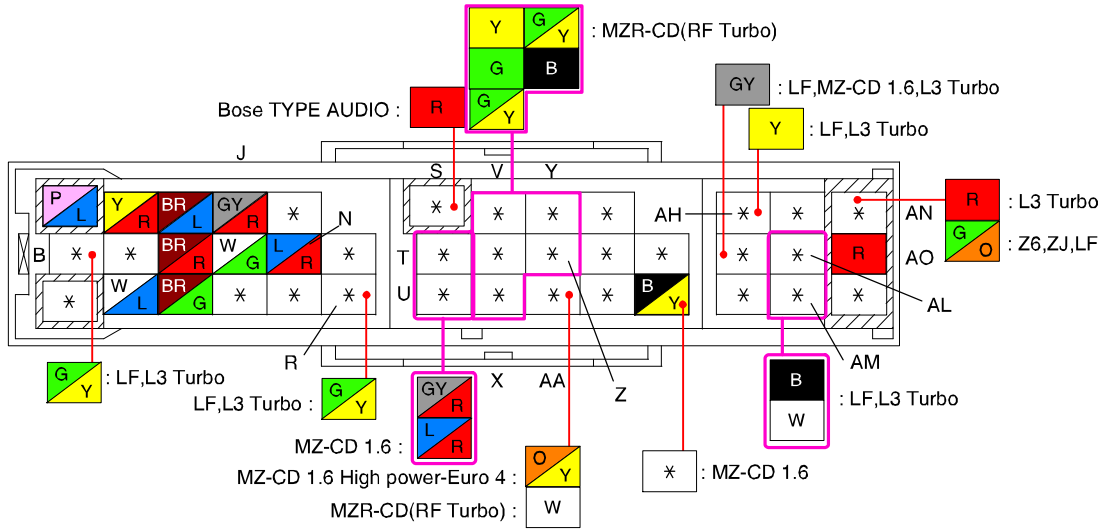


C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS


INSTRUMENT PANEL HARNESS

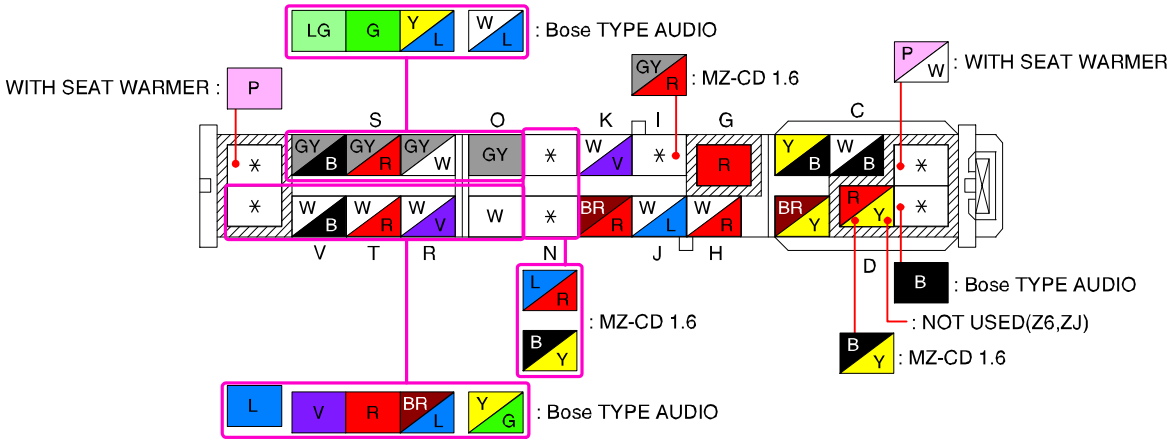

REAR HARNESS

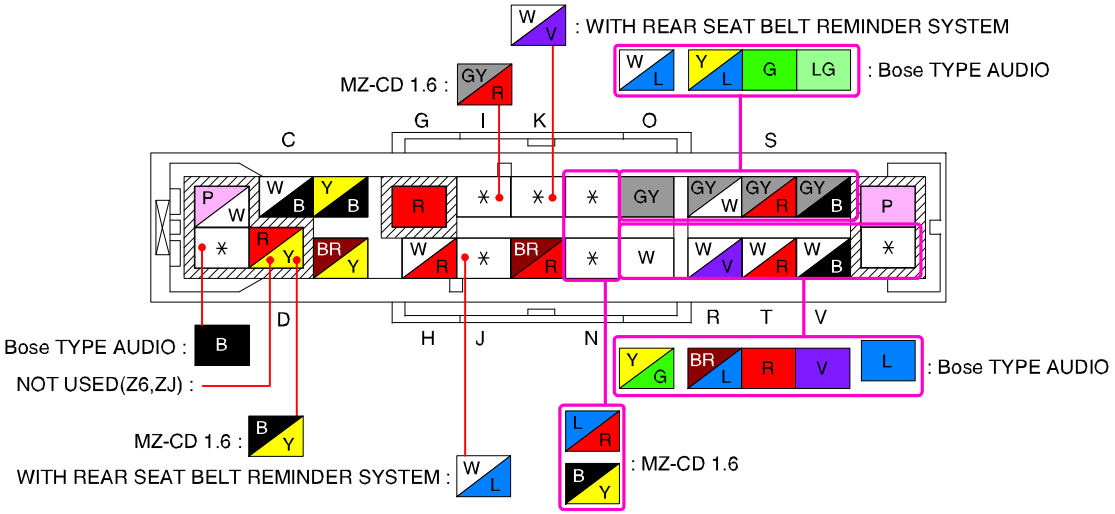


C-22
JOINT CONNECTOR

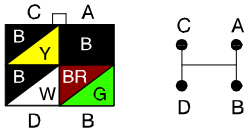


TO 0920-6b

TO 0920-6d

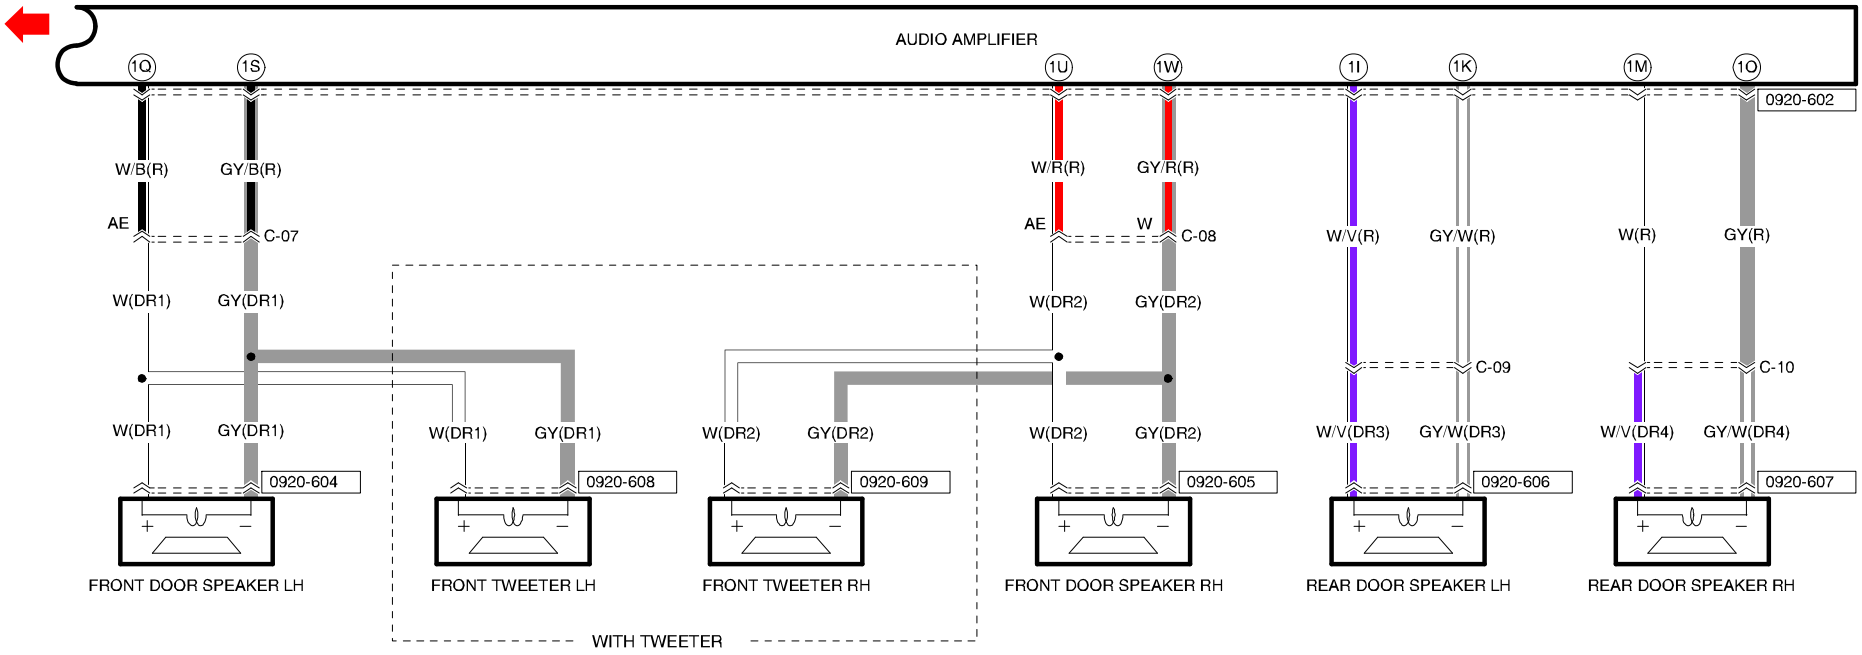

0920-602
AUDIO AMPLIFIER



0920-604
FRONT DOOR SPEAKER LH




0920-605
FRONT DOOR SPEAKER RH



0920-606
REAR DOOR SPEAKER LH



0920-607
REAR DOOR SPEAKER RH




0920-608
FRONT TWEETER LH




0920-609
FRONT TWEETER RH

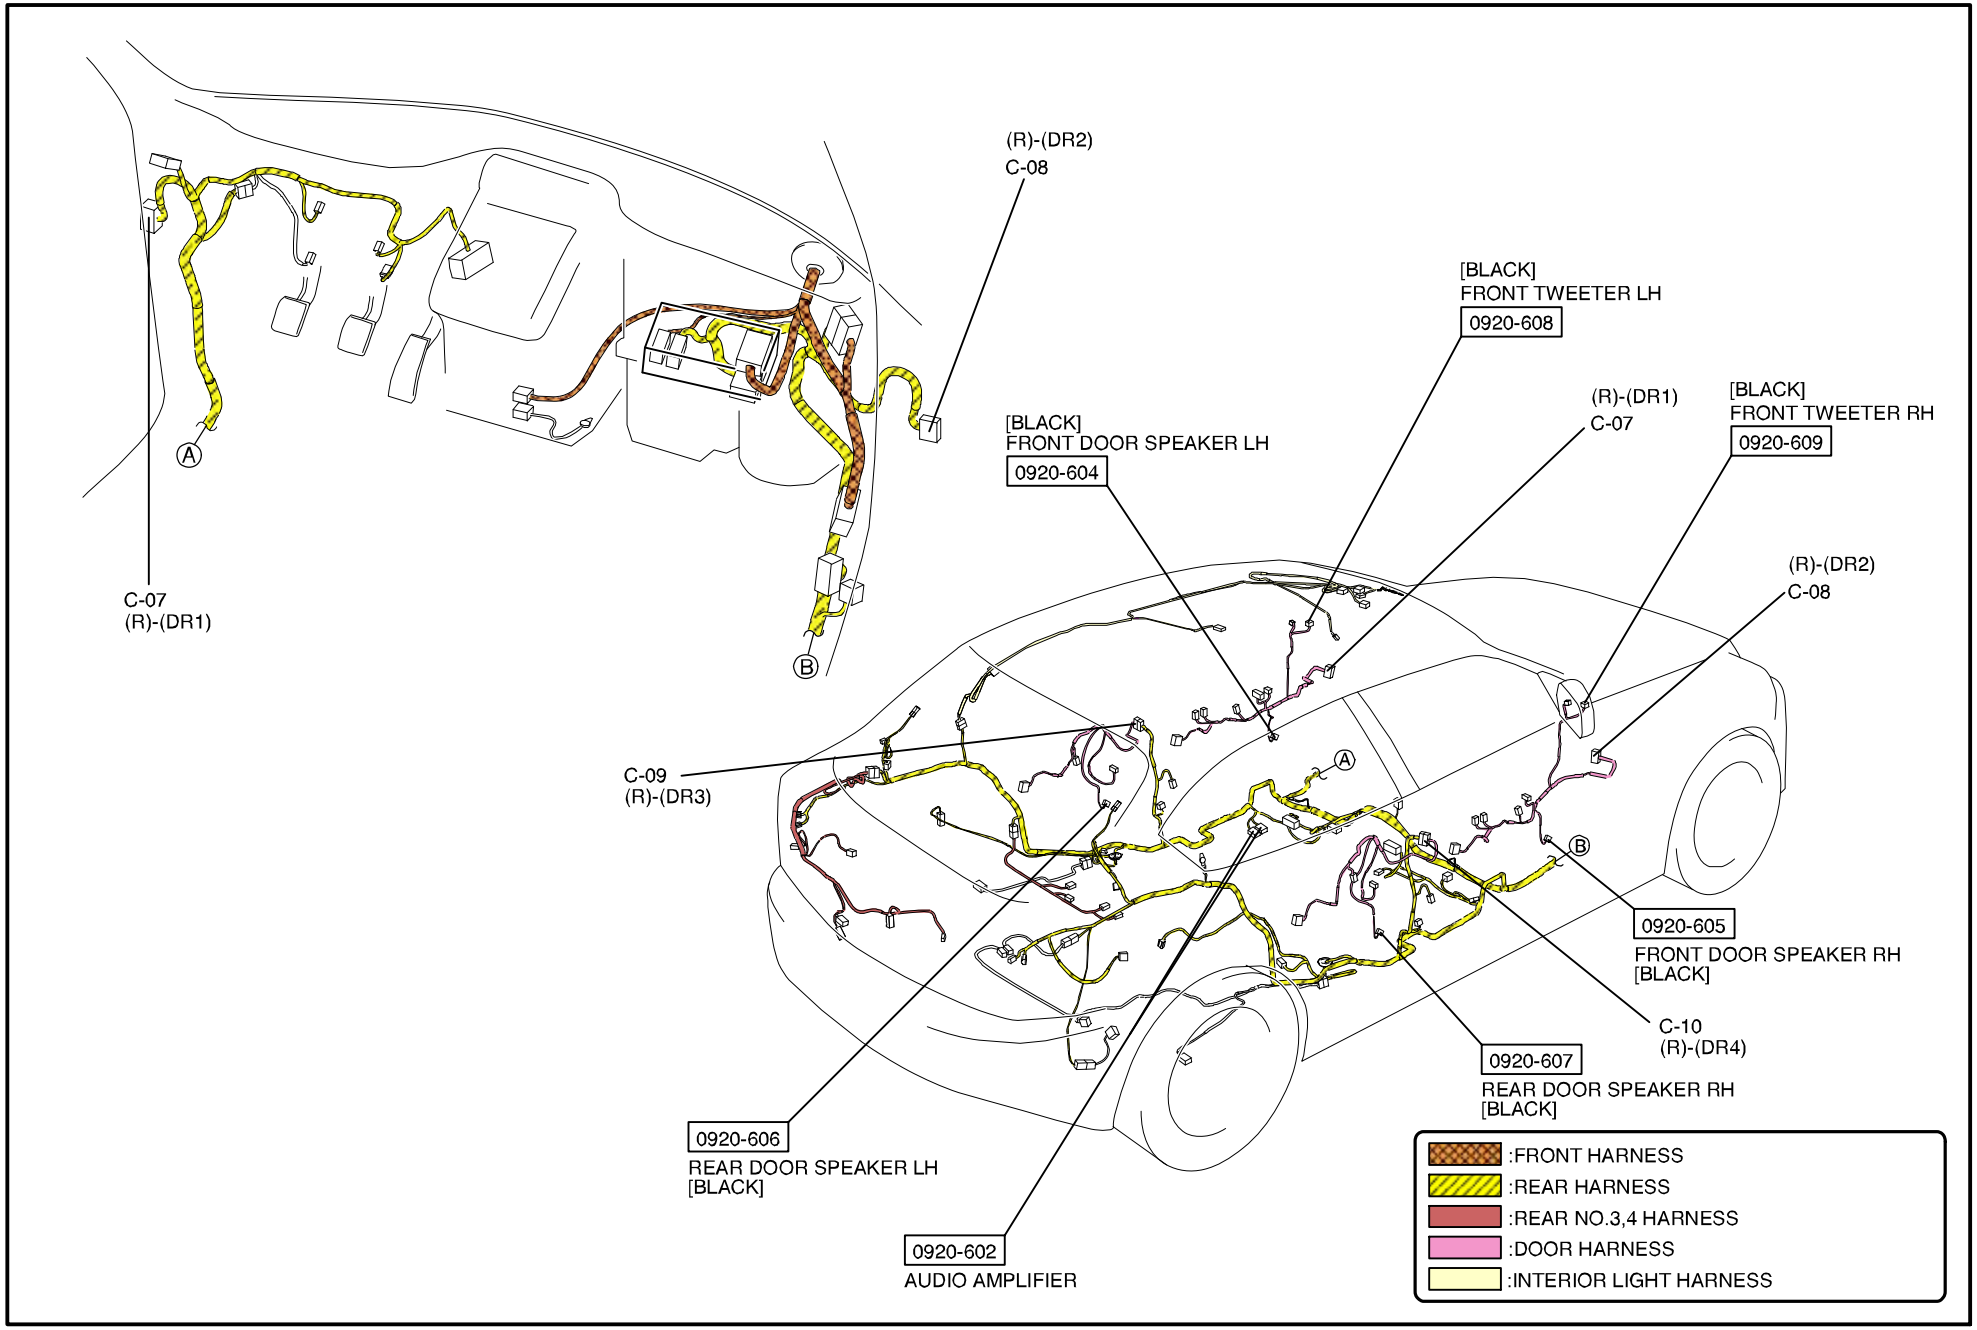



(R)-(DR2)
C-08
[BLACK]
FRONT TWEETER LH
0920-608
(R)-(DR1)
C-07
[BLACK]
FRONT TWEETER RH
0920-609
[BLACK]
FRONT DOOR SPEAKER LH
0920-604
(R)-(DR2)
C-08
C-07
(R)-(DR1)
C-09
(R)-(DR3)
A
B
0920-605
FRONT DOOR SPEAKER RH
[BLACK]
C-10
(R)-(DR4)
0920-607
REAR DOOR SPEAKER RH
[BLACK]
0920-606
REAR DOOR SPEAKER LH
[BLACK]
0920-602
AUDIO AMPLIFIER
:FRONT HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-07
REAR HARNESS-DOOR NO.1 HARNESS

REAR HARNESS

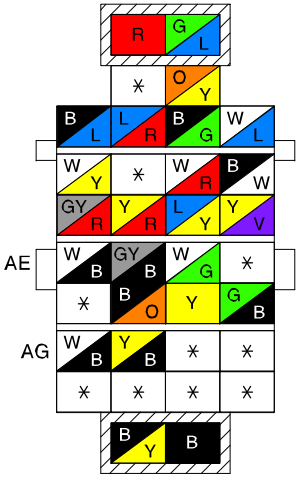


DOOR NO.1 HARNESS

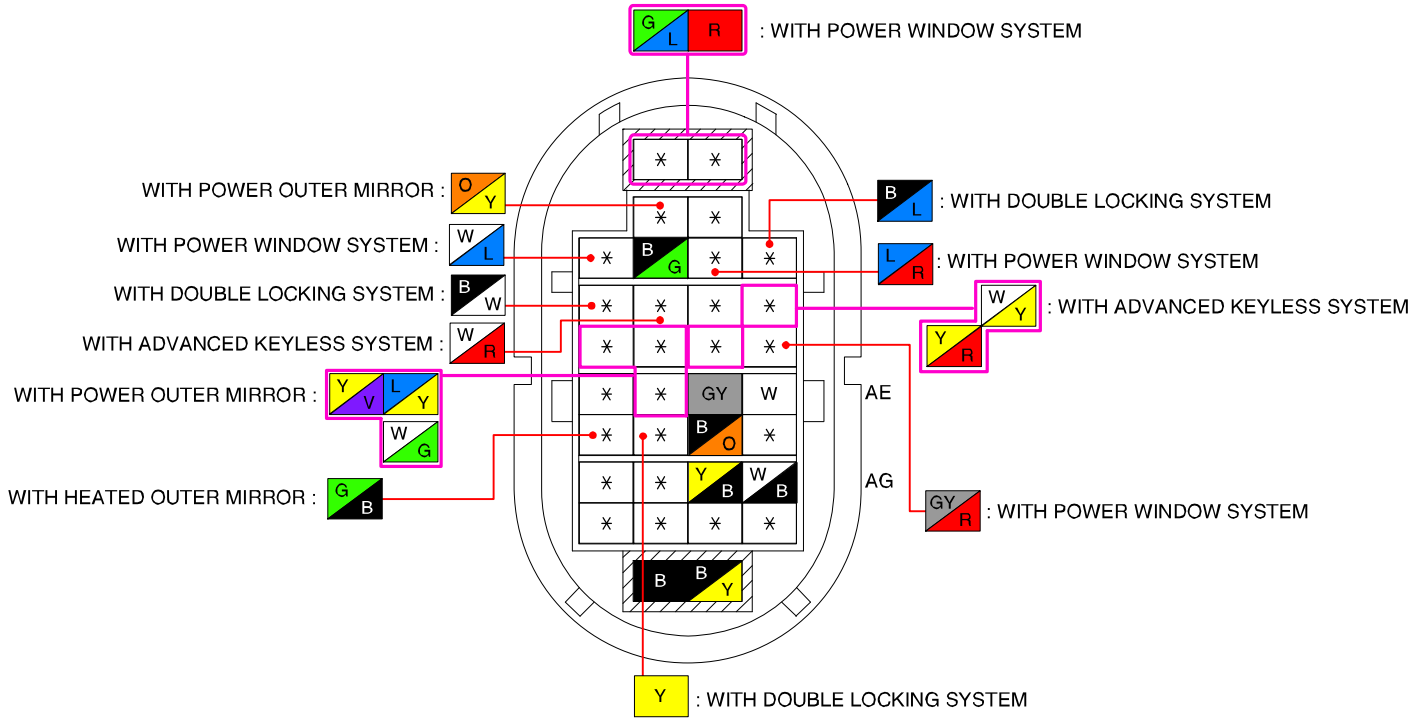


C-08
REAR HARNESS-DOOR NO.2 HARNESS


REAR HARNESS

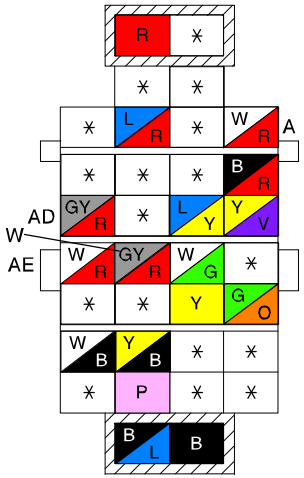


DOOR NO.2 HARNESS

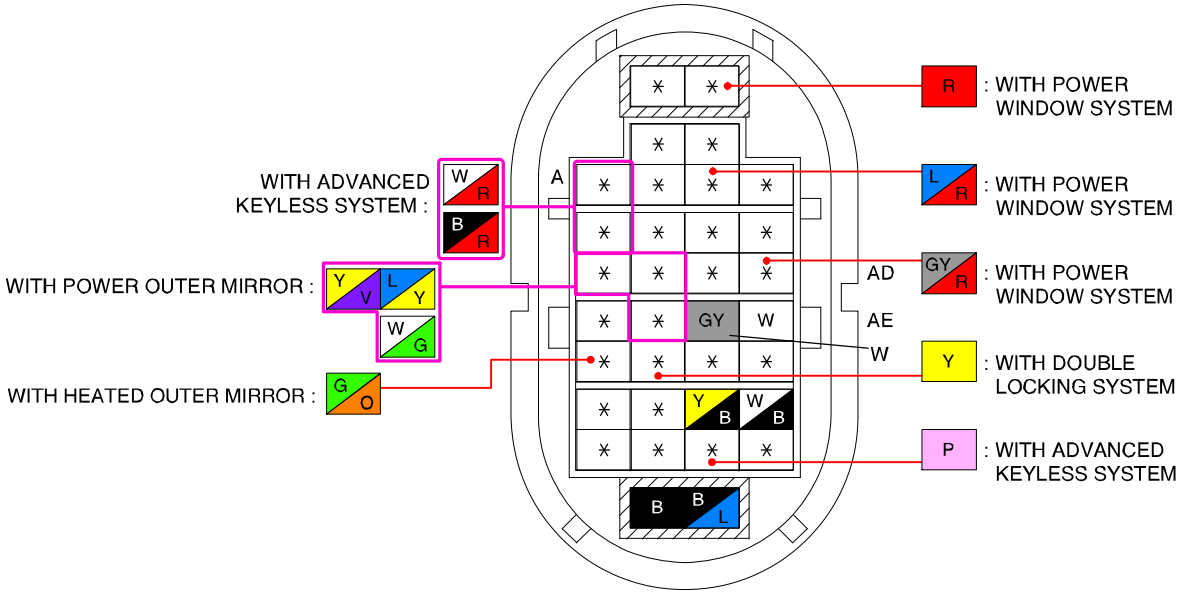


C-09
REAR HARNESS-DOOR NO.3 HARNESS

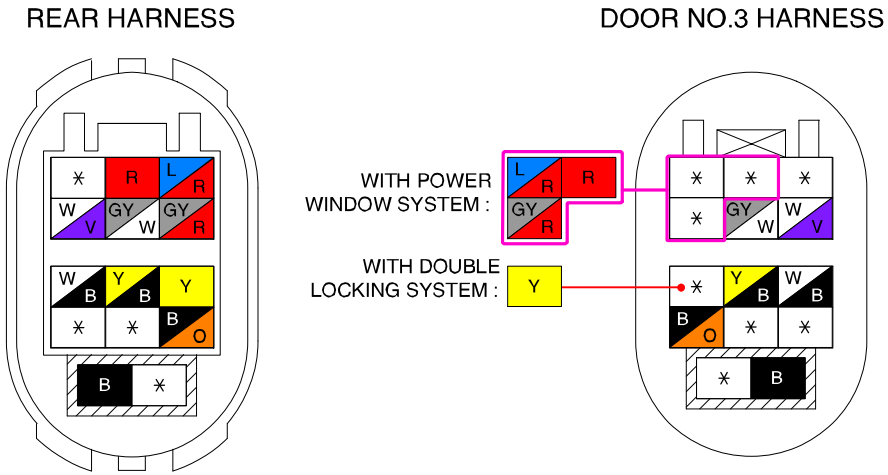


C-10
REAR HARNESS-DOOR NO.4 HARNESS

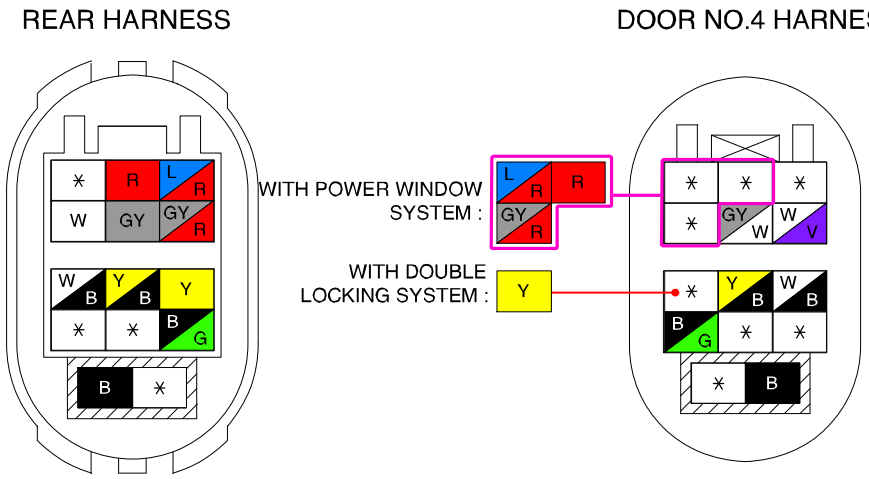


TO 0920-6c

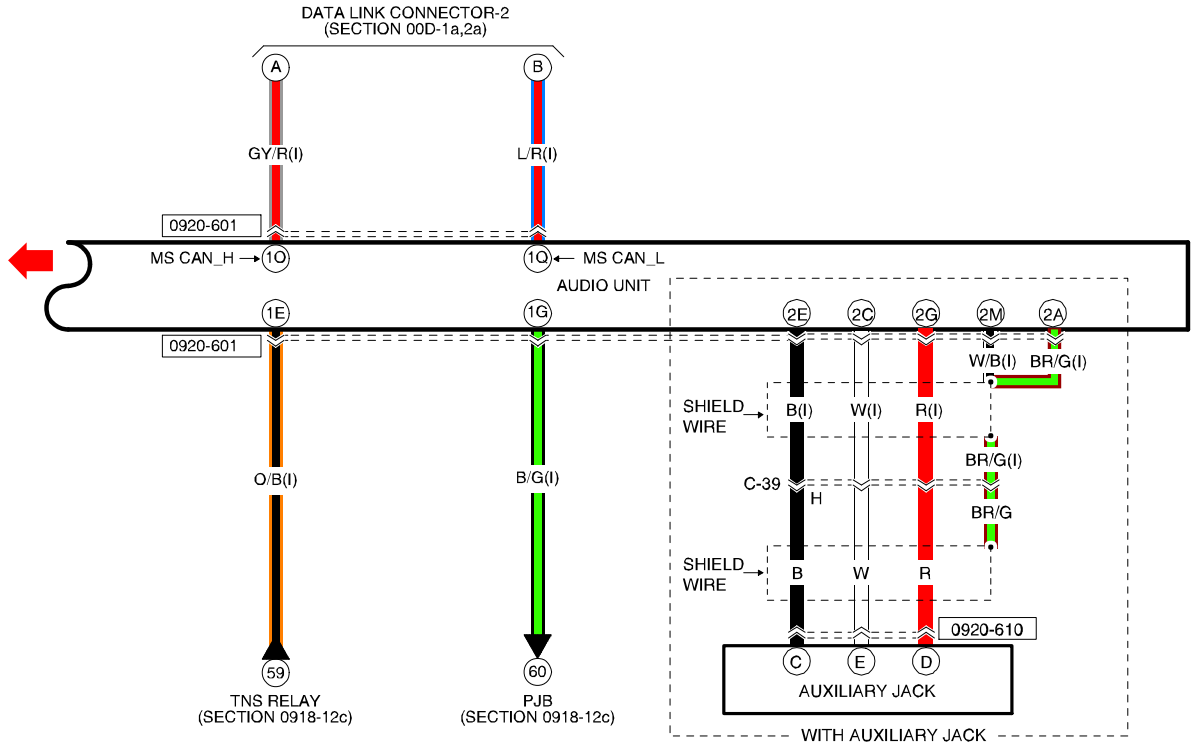



0920-601
AUDIO UNIT

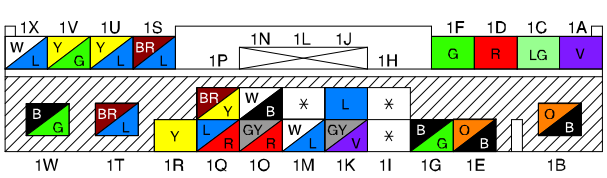

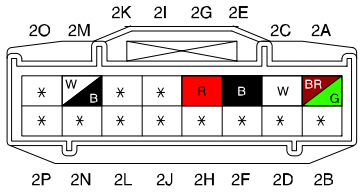


0920-610
AUXILIARY JACK



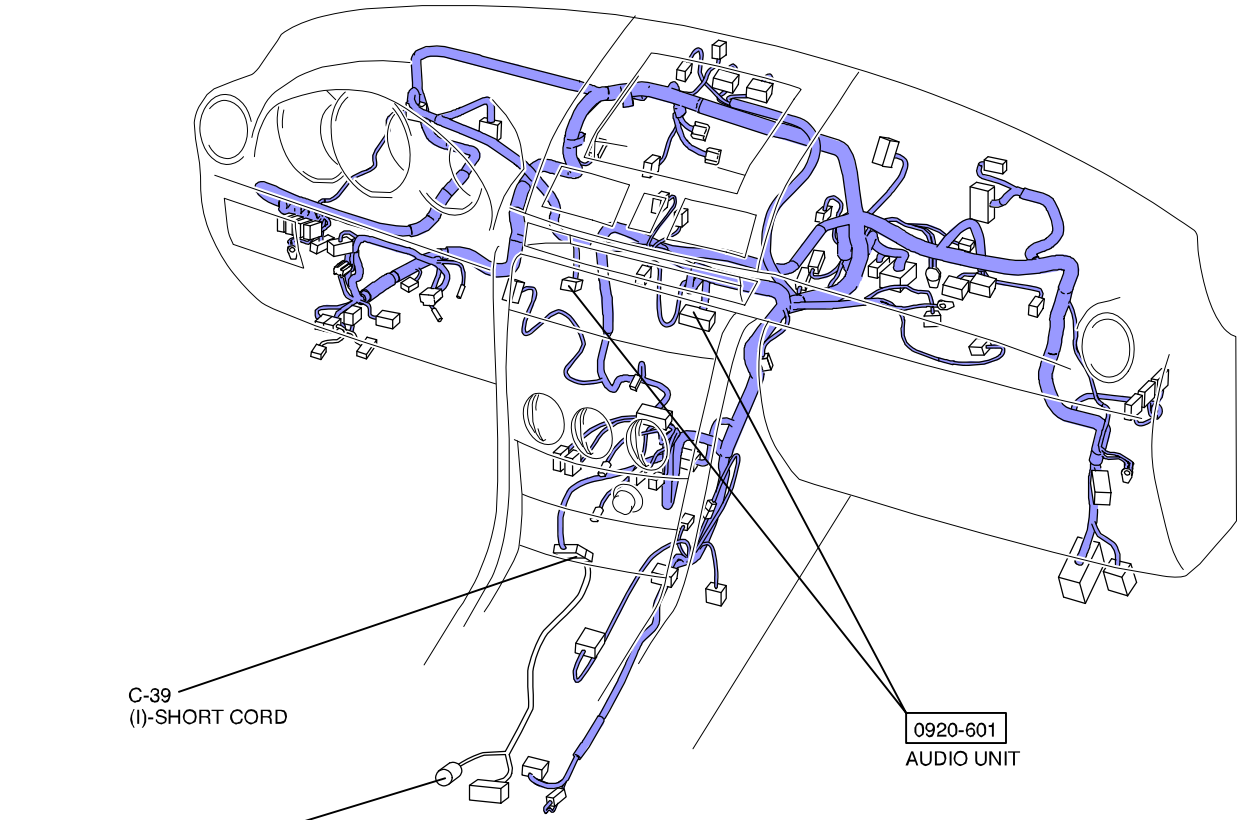

C-39
(I)-SHORT CORD
0920-601
AUDIO UNIT
0920-610
AUXILIARY JACK
:INSTRUMENT PANEL HARNESS

C-39
INSTRUMENT PANEL HARNESS-SHORT CORD


INSTRUMENT PANEL HARNESS

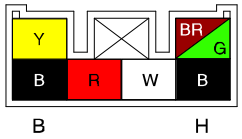


SHORT CORD

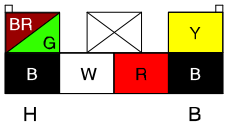


CAR-NAVIGATION SYSTEM (Bose® TYPE AUDIO)

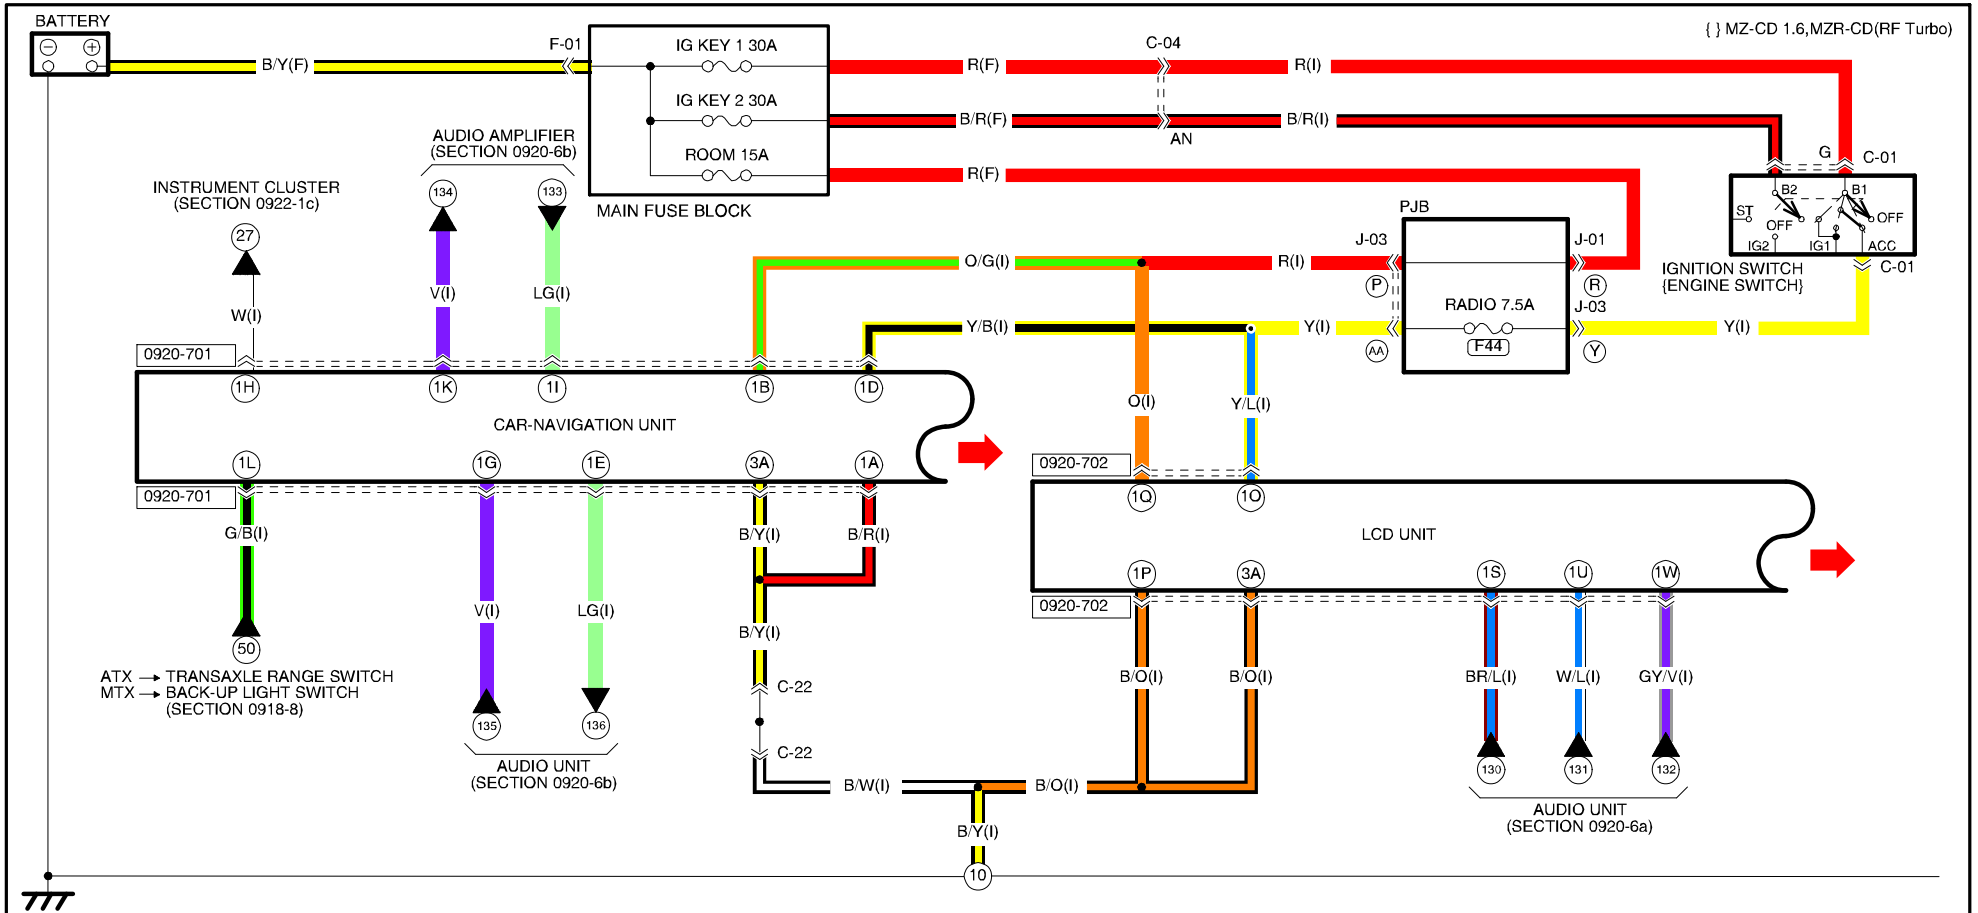


0920-701 CAR-NAVIGATION UNIT

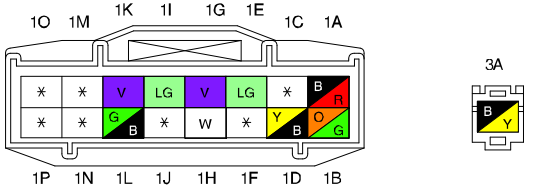


0920-702 LCD UNIT

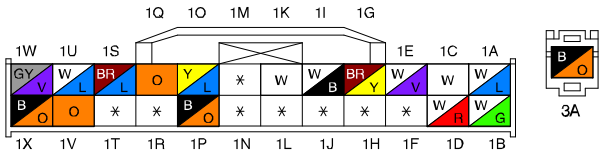


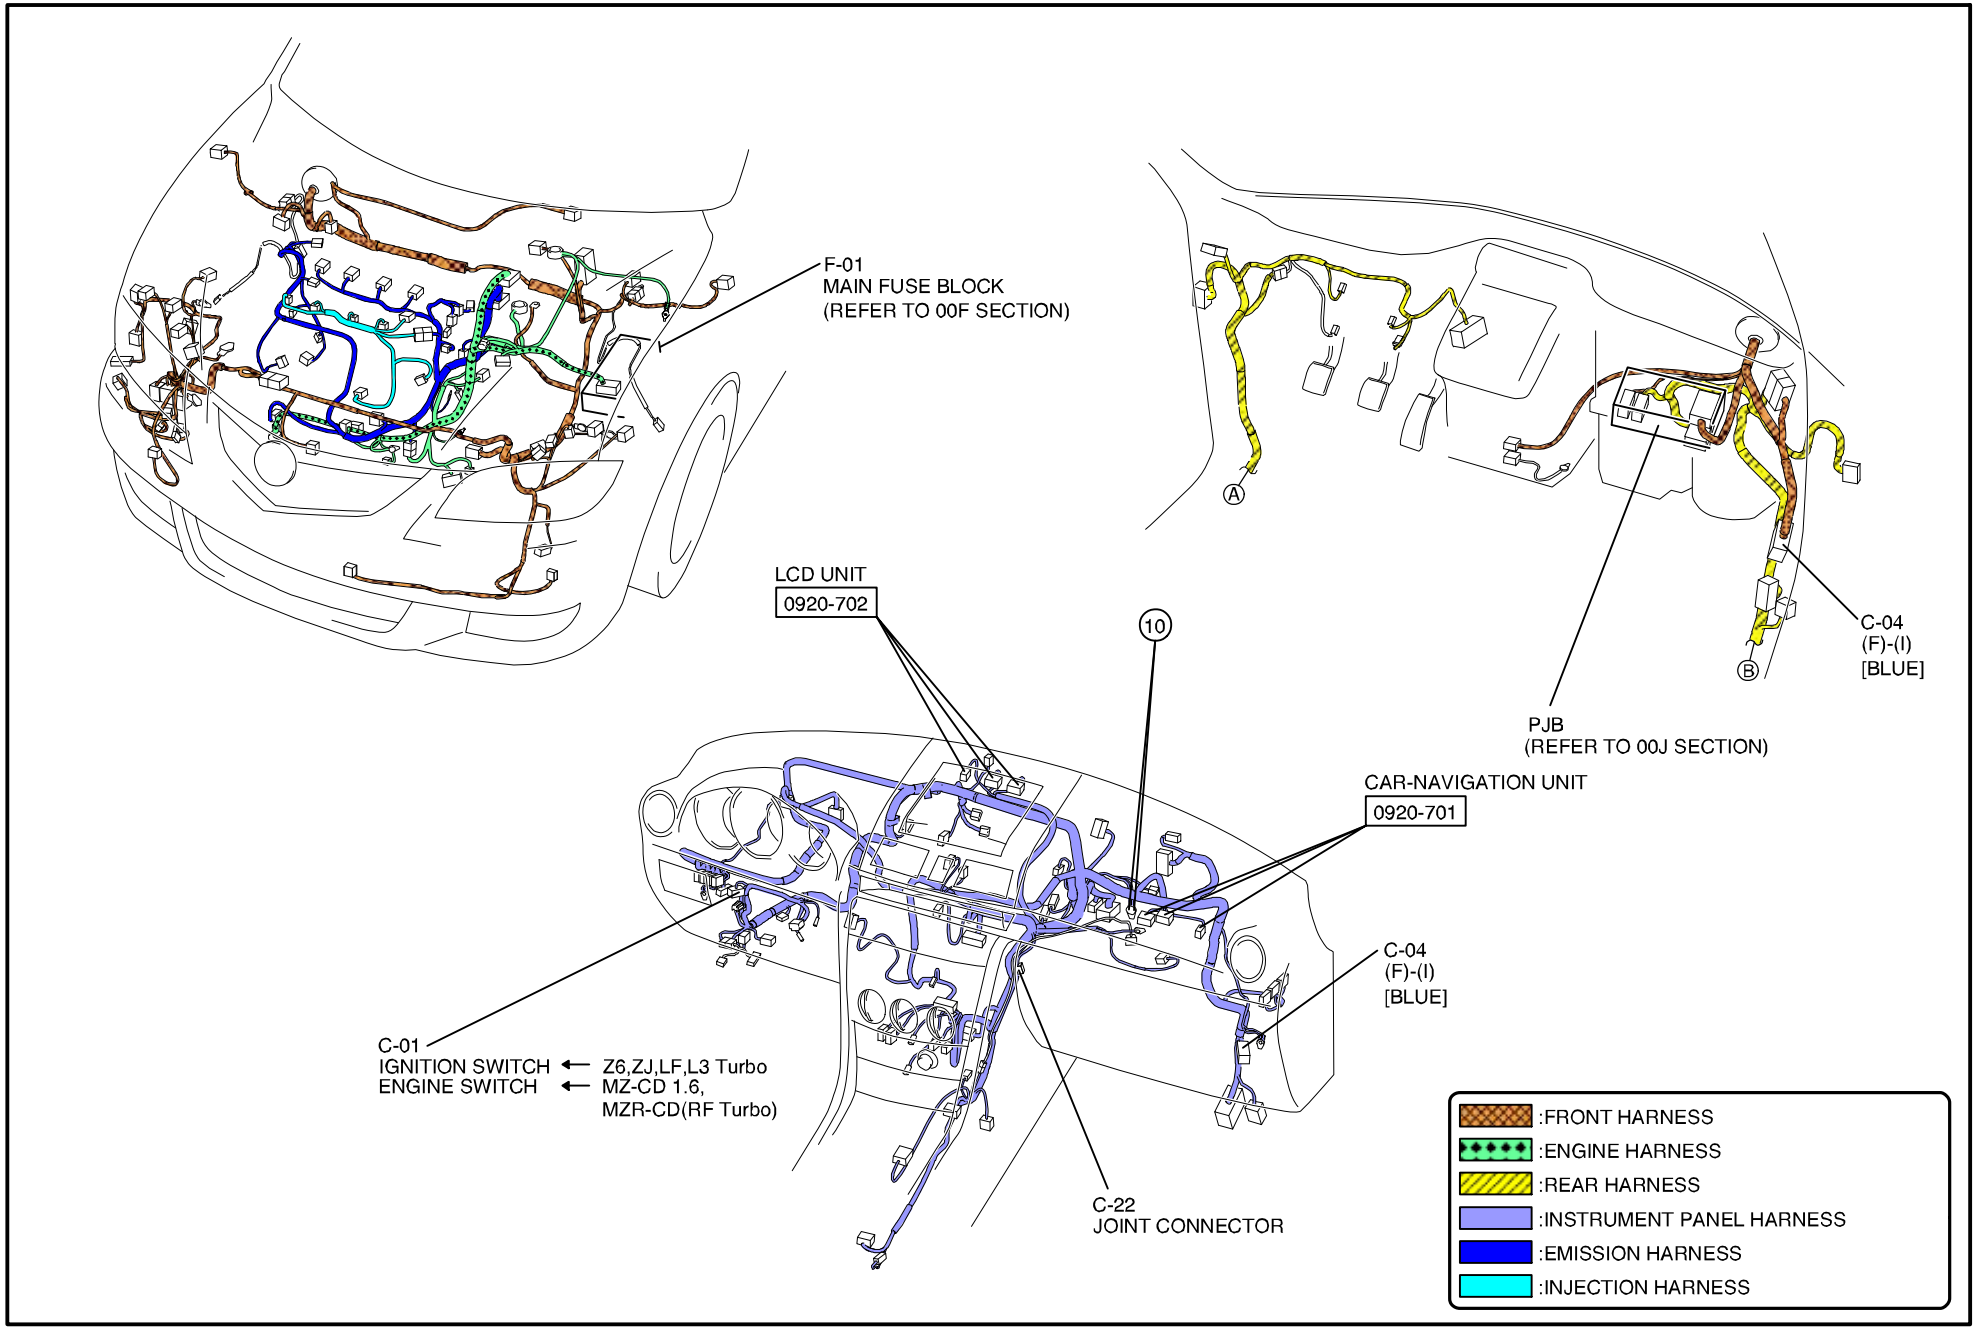
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
Ⓑ
C-04
(F)-(I)
[BLUE]
PJB
(REFER TO 00J SECTION)
LCD UNIT
0920-702
10
CAR-NAVIGATION UNIT
0920-701
C-04
(F)-(I)
[BLUE]
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,
MZR-CD(RF Turbo)
C-22
JOINT CONNECTOR
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

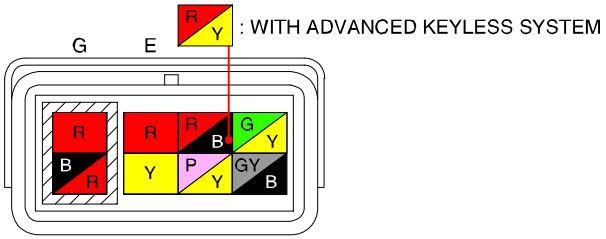


C-22
JOINT CONNECTOR

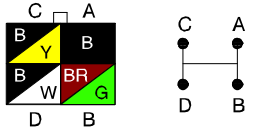



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

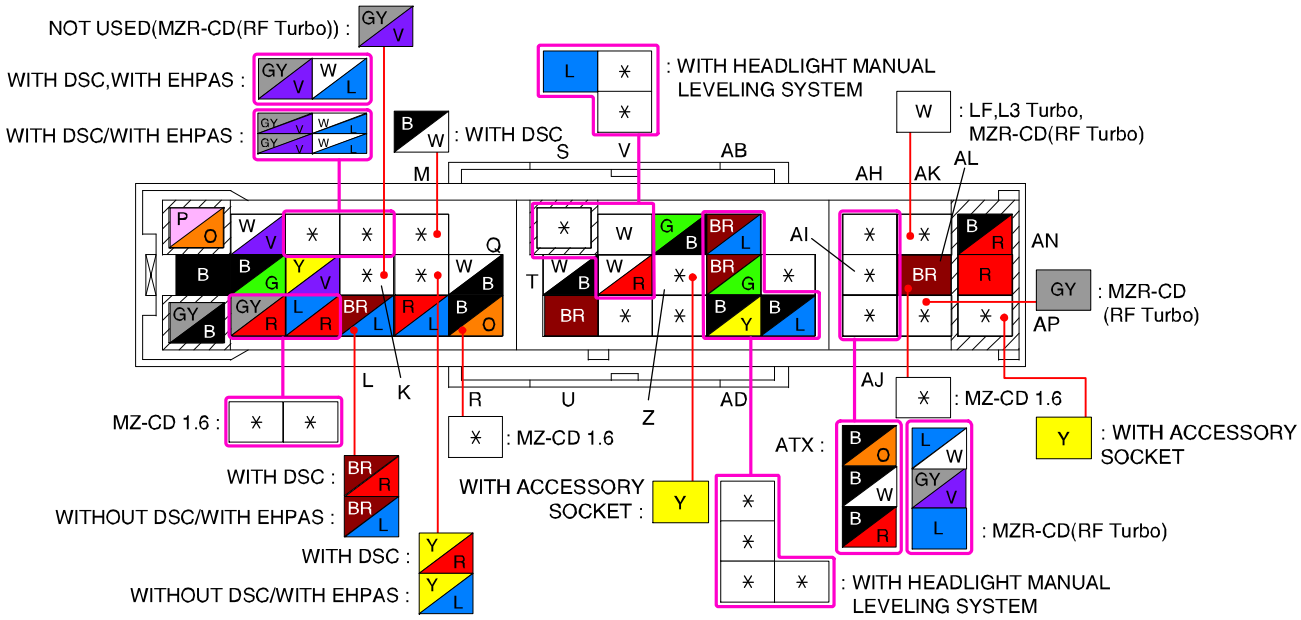


INSTRUMENT PANEL HARNESS

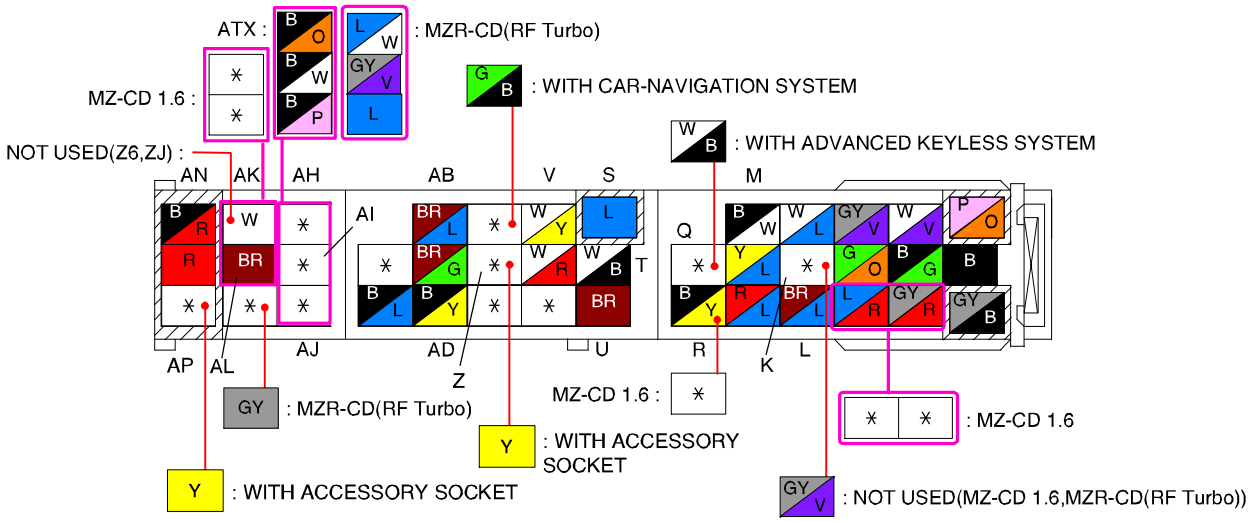


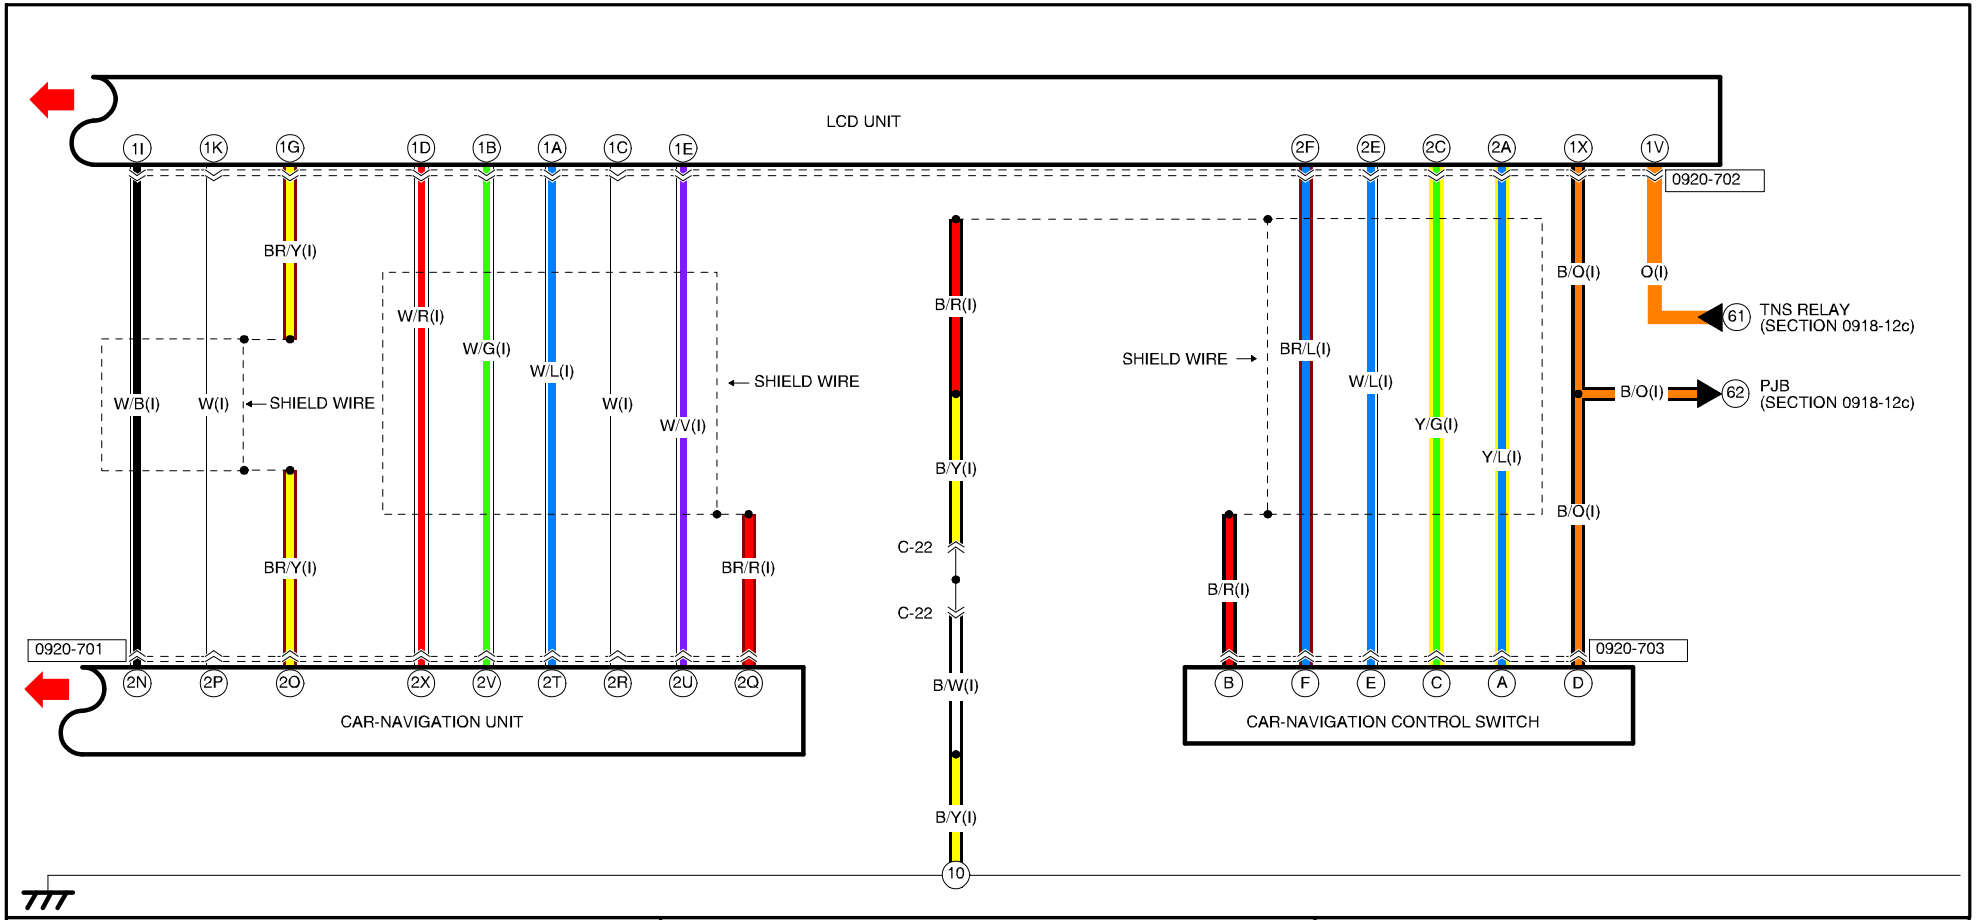


0920-701
CAR-NAVIGATION UNIT

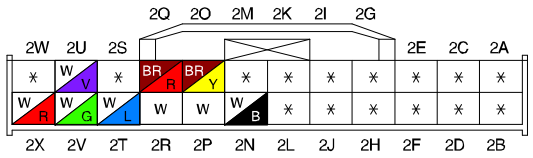


0920-702
LCD UNIT

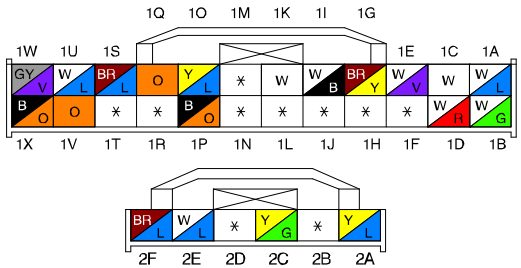


0920-703
CAR-NAVIGATION CONTROL SWITCH




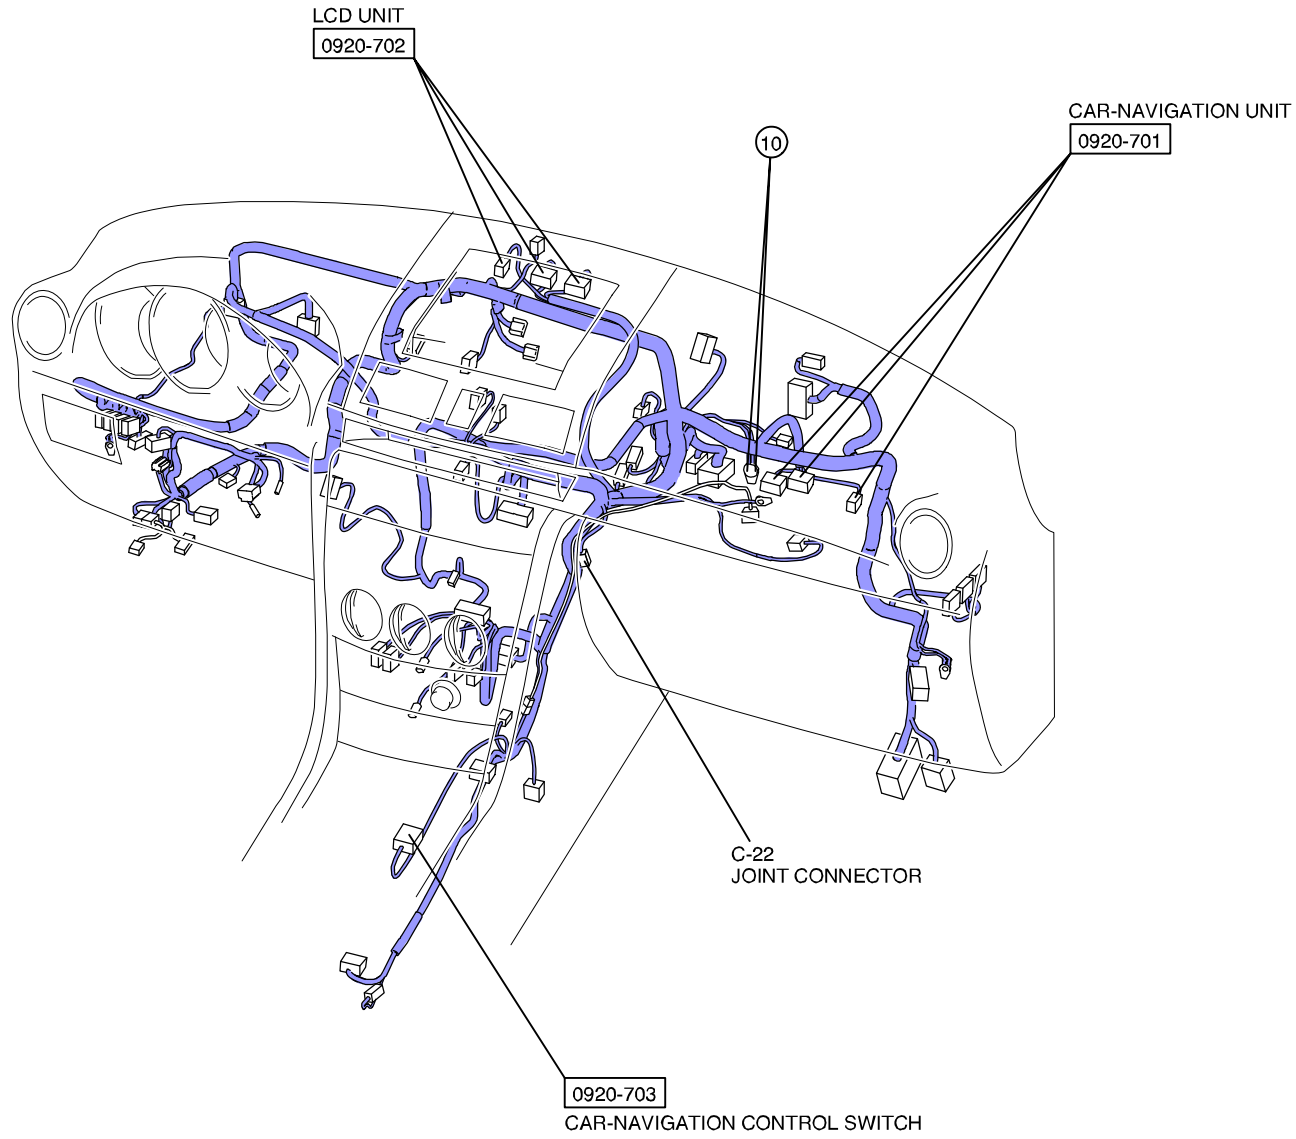
LCD UNIT
0920-702
CAR-NAVIGATION UNIT
0920-701
10
C-22
JOINT CONNECTOR
0920-703
CAR-NAVIGATION CONTROL SWITCH
:INSTRUMENT PANEL HARNESS

C-22
JOINT CONNECTOR

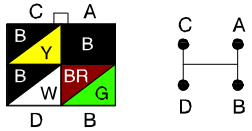


INSTRUMENT CLUSTER

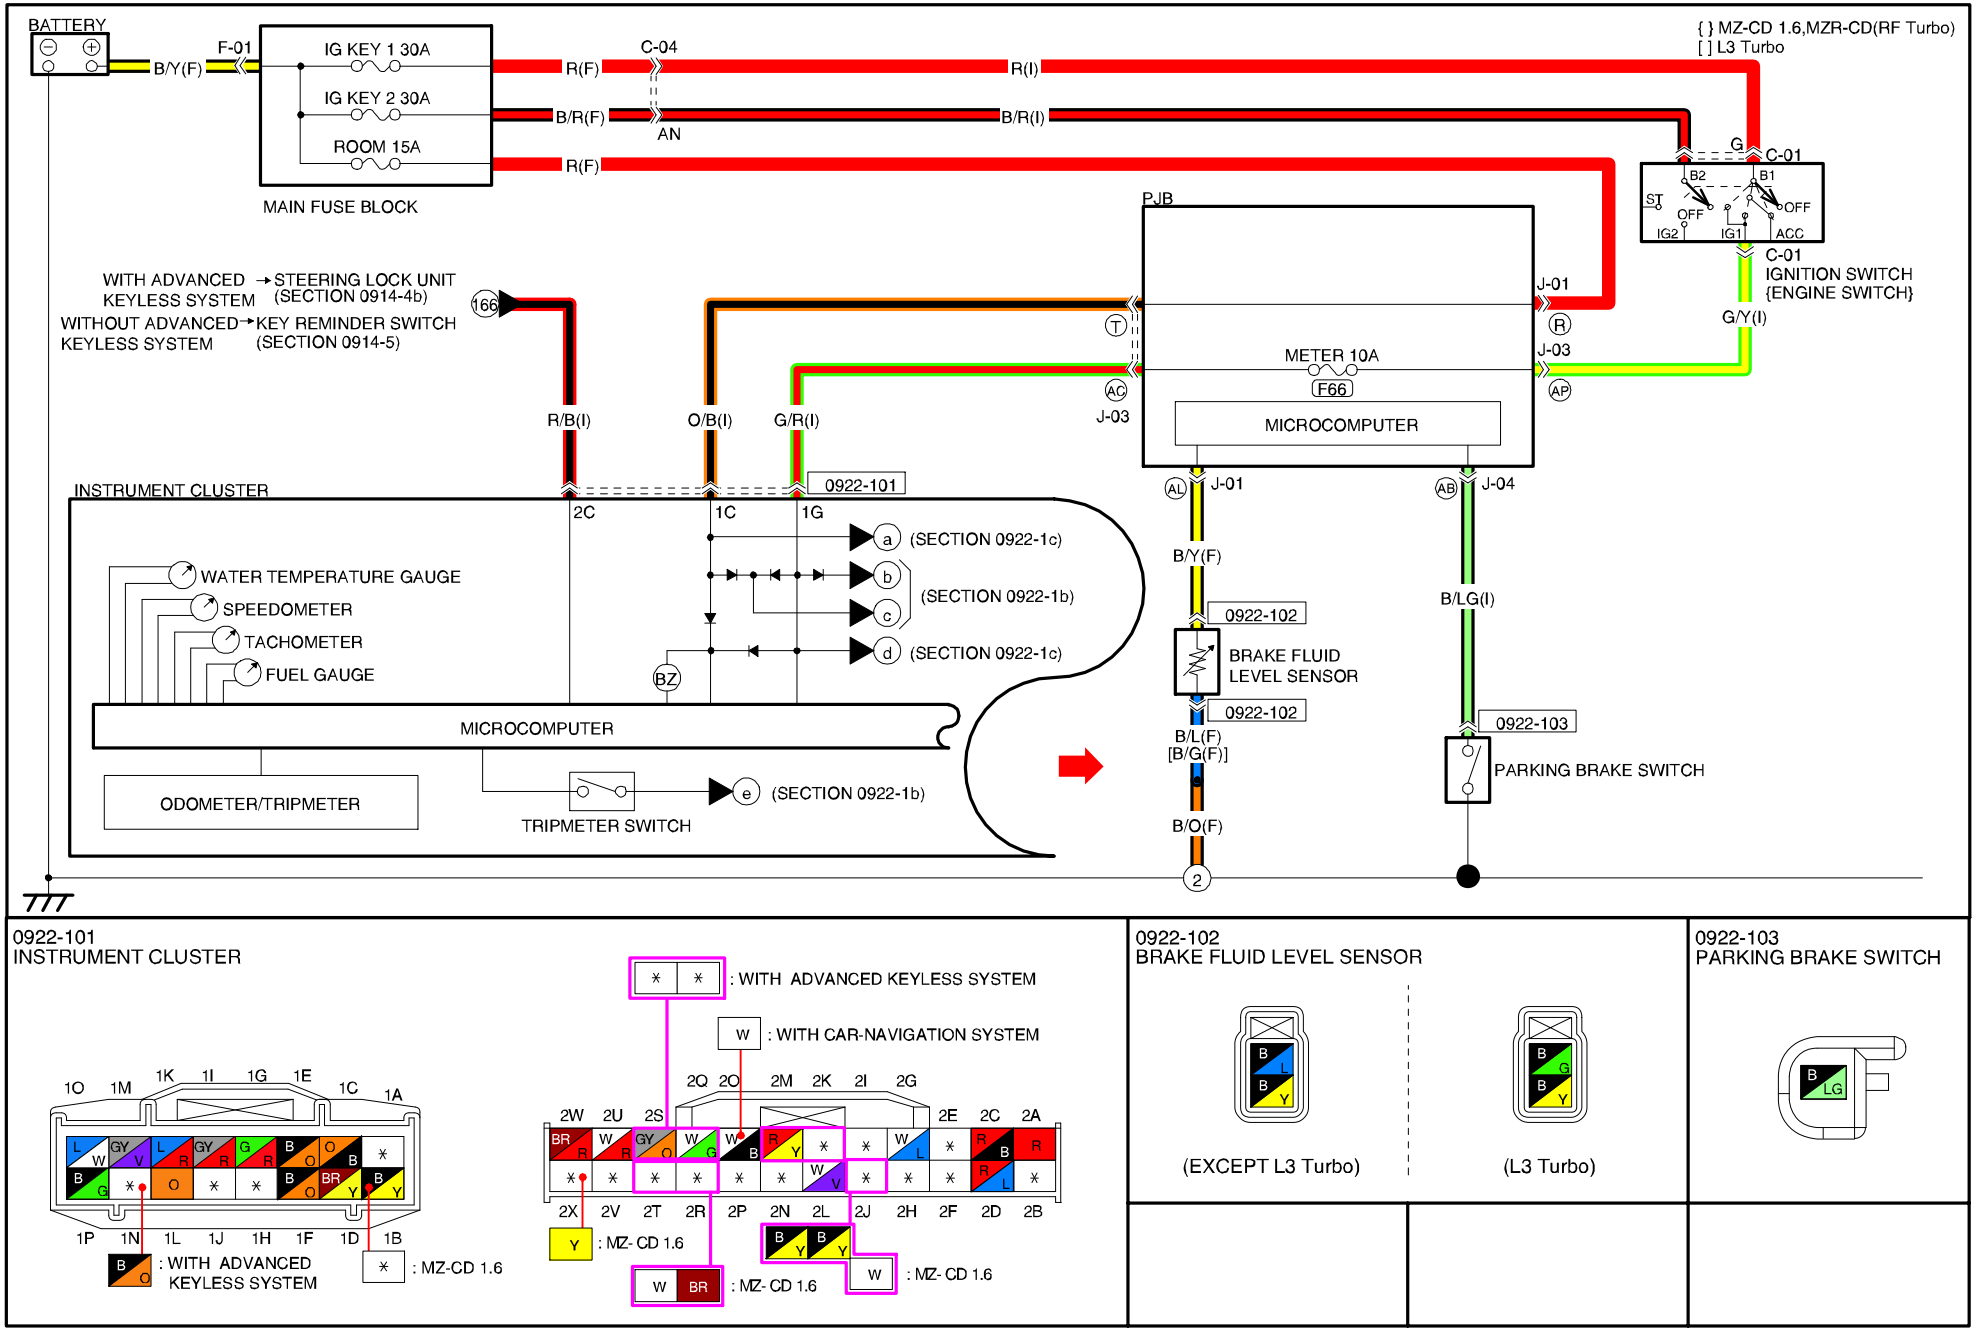


0922-101 INSTRUMENT CLUSTER

0922-102 BRAKE FLUID LEVEL SENSOR

0922-103 PARKING BRAKE SWITCH

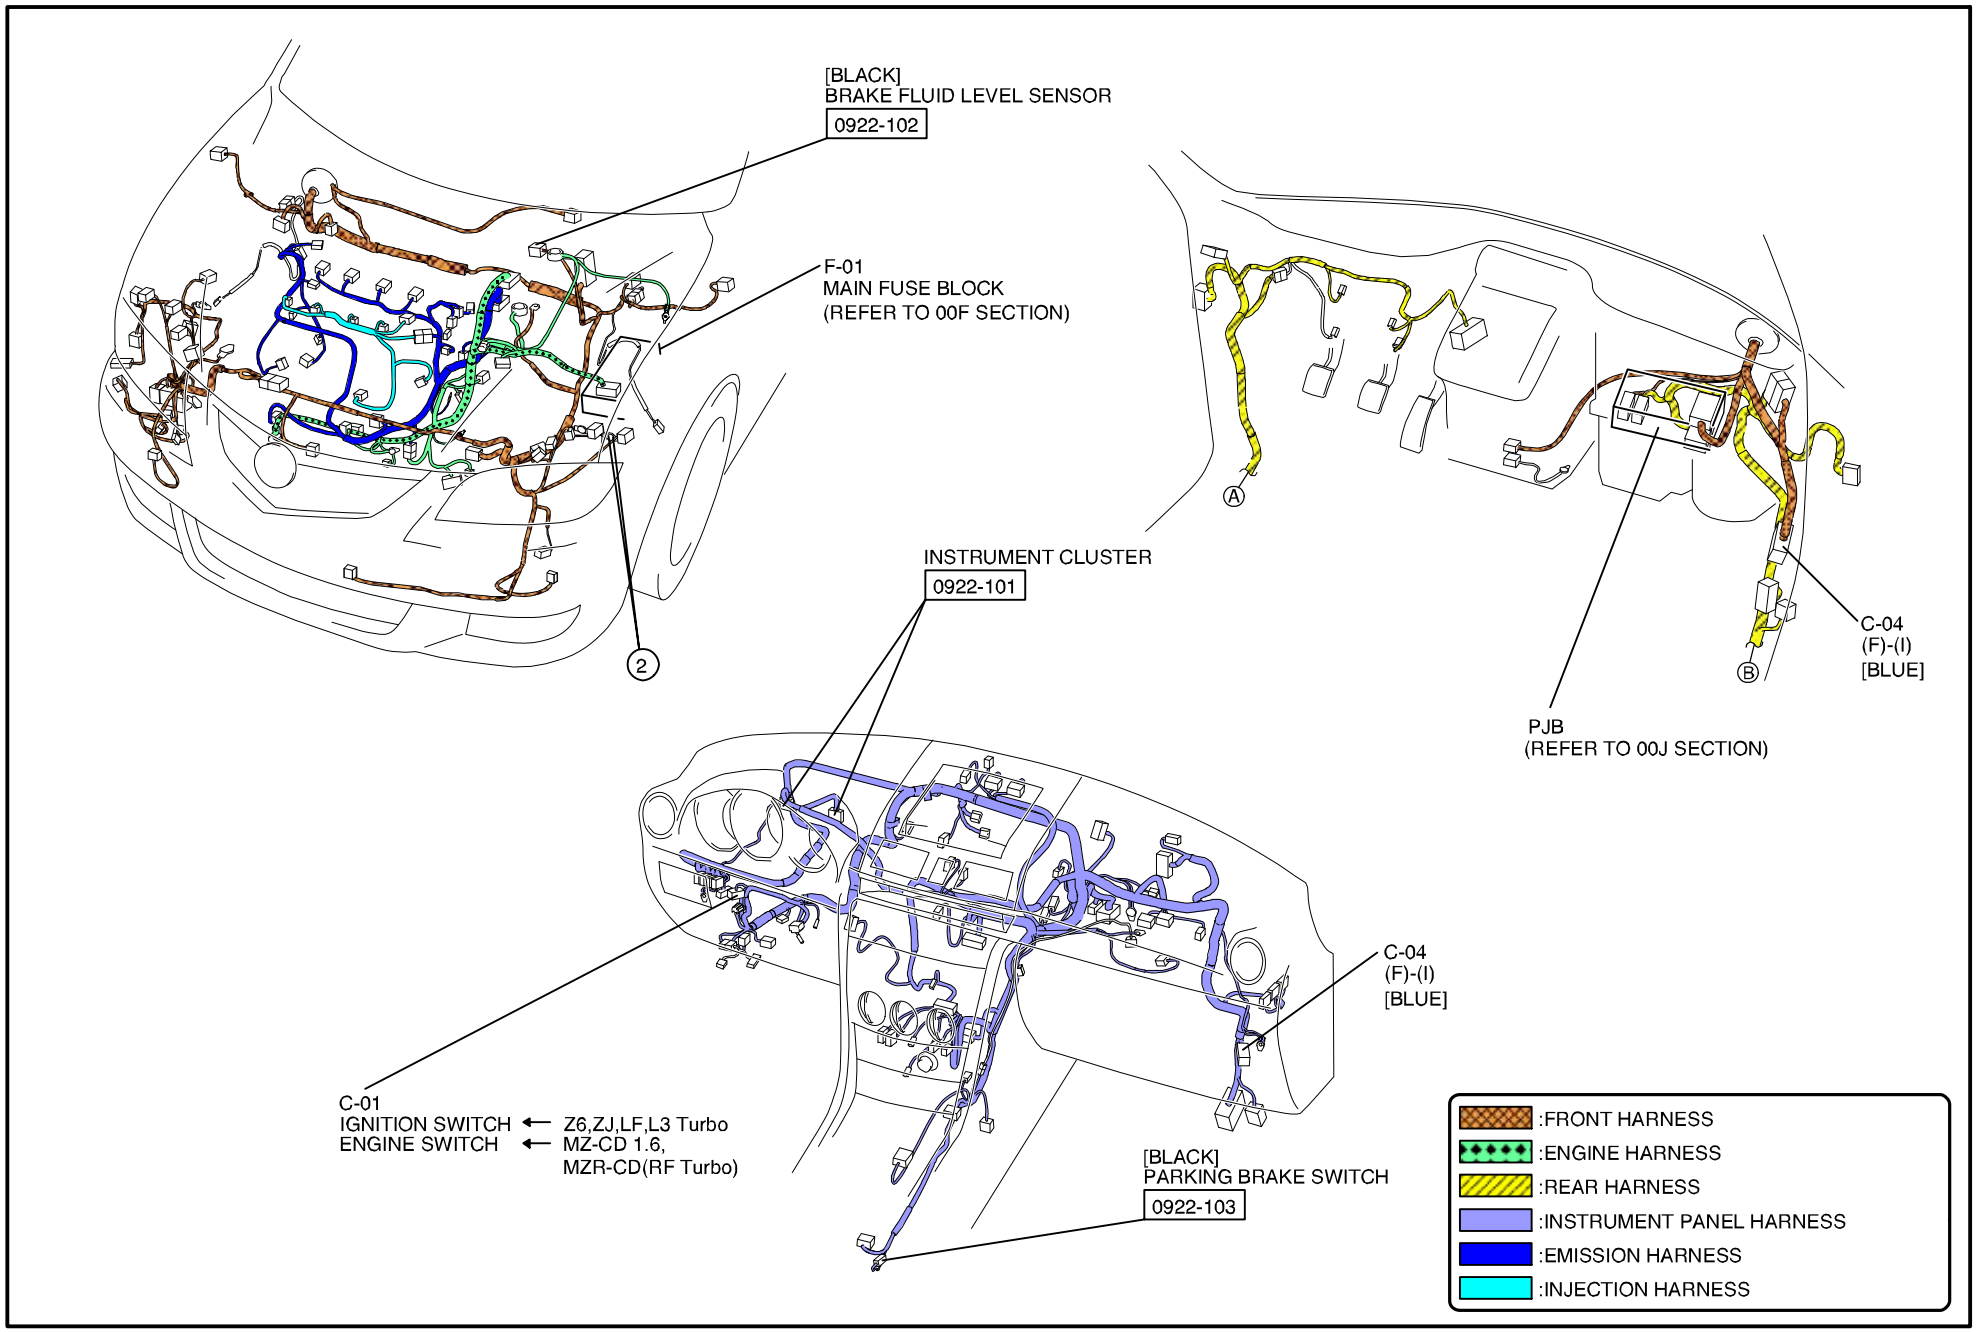

[BLACK]
BRAKE FLUID LEVEL SENSOR
0922-102
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
2
INSTRUMENT CLUSTER
0922-101
A
B
C-04
(F)-(I)
[BLUE]
PJB
(REFER TO 00J SECTION)
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,
MZR-CD(RF Turbo)
C-04
(F)-(I)
[BLUE]
[BLACK]
PARKING BRAKE SWITCH
0922-103
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

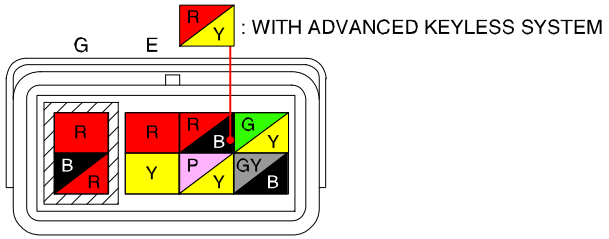



C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

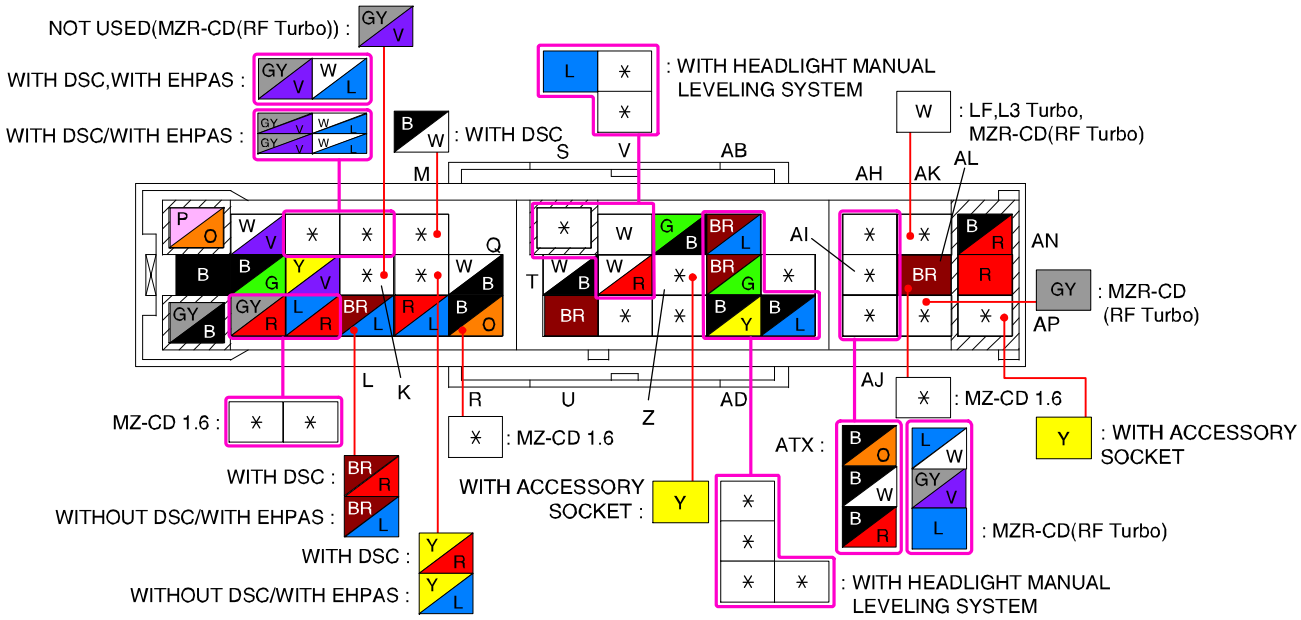



INSTRUMENT PANEL HARNESS

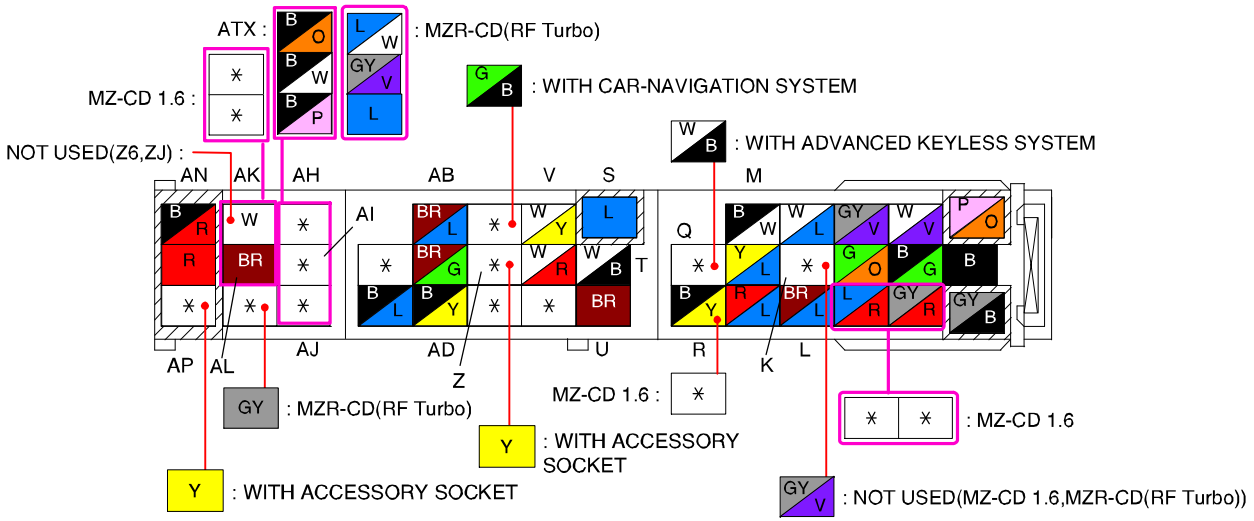

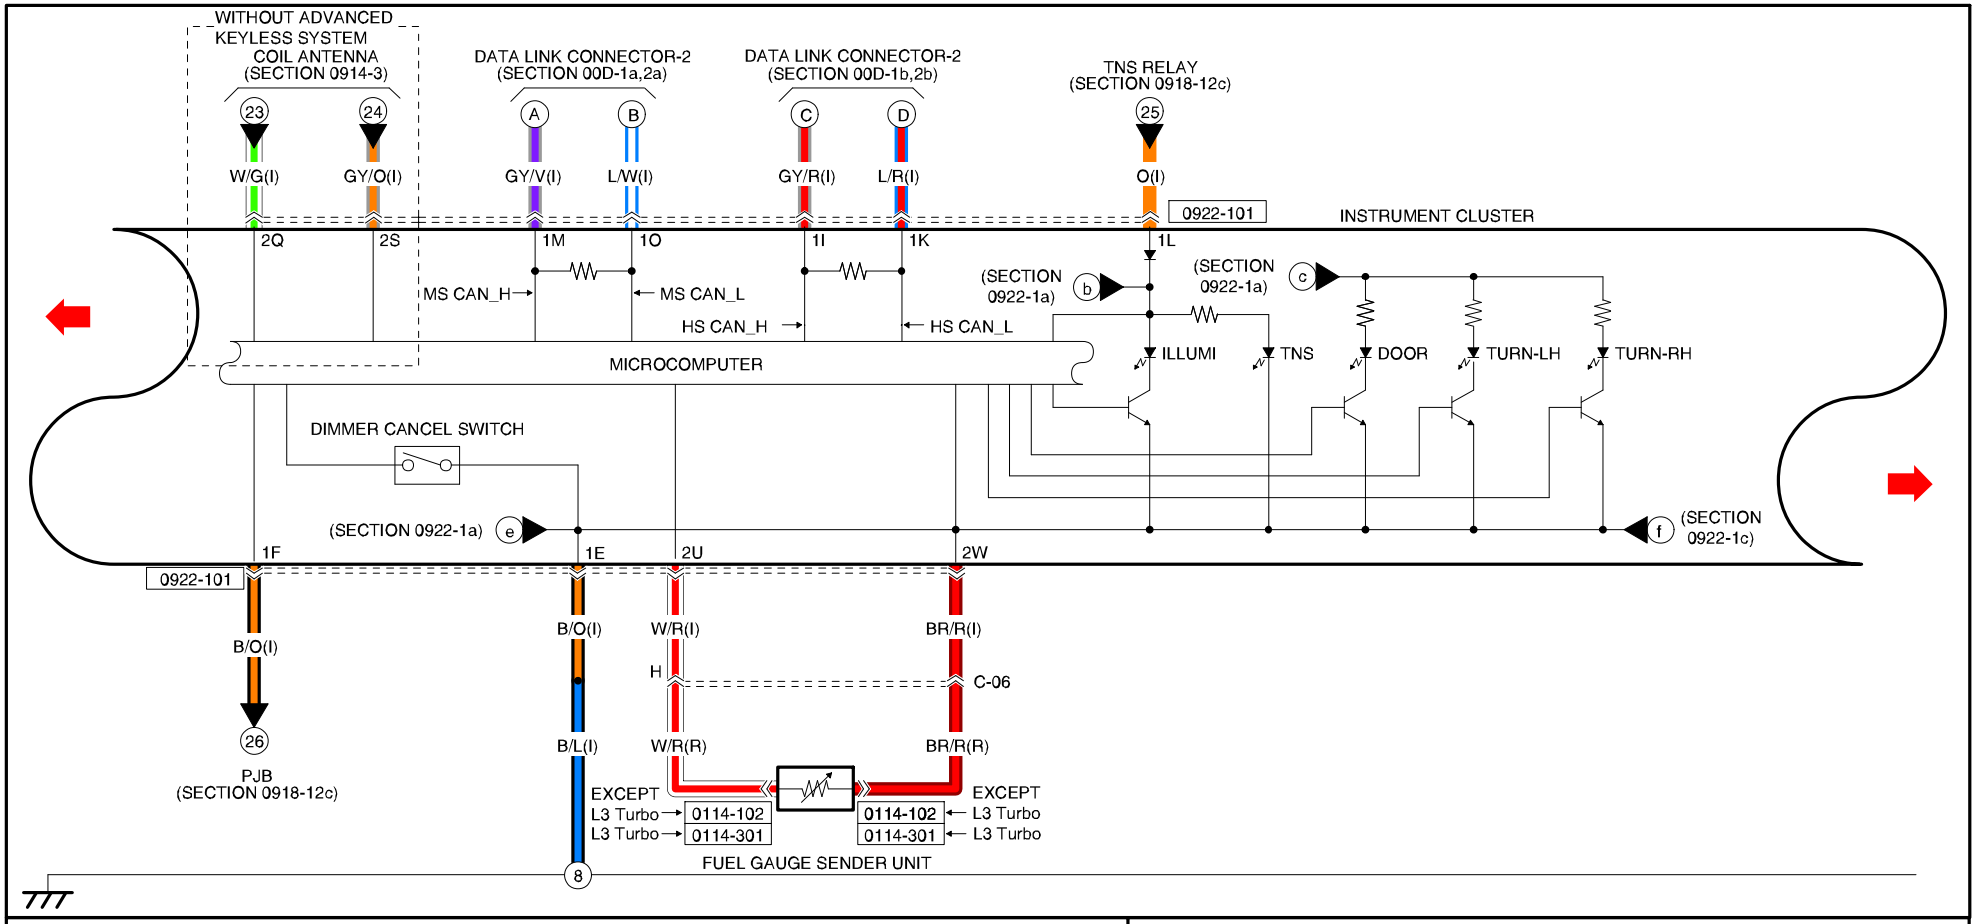


0922-101
INSTRUMENT CLUSTER

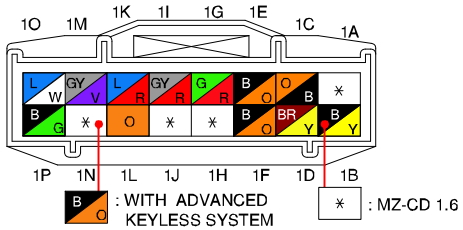


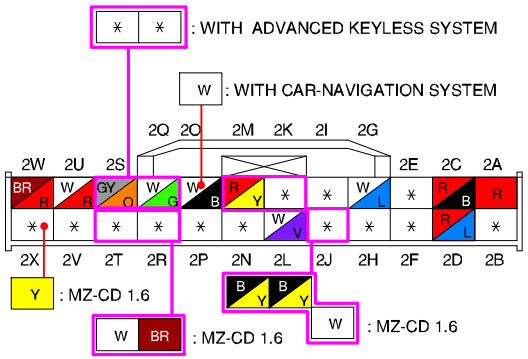


0114-102 ← EXCEPT L3 Turbo
0114-301 ← L3 Turbo
FUEL GAUGE SENDER UNIT

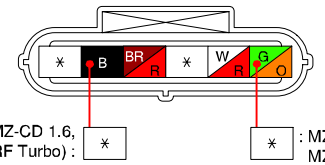

(EXCEPT L3 Turbo)




(L3 Turbo)

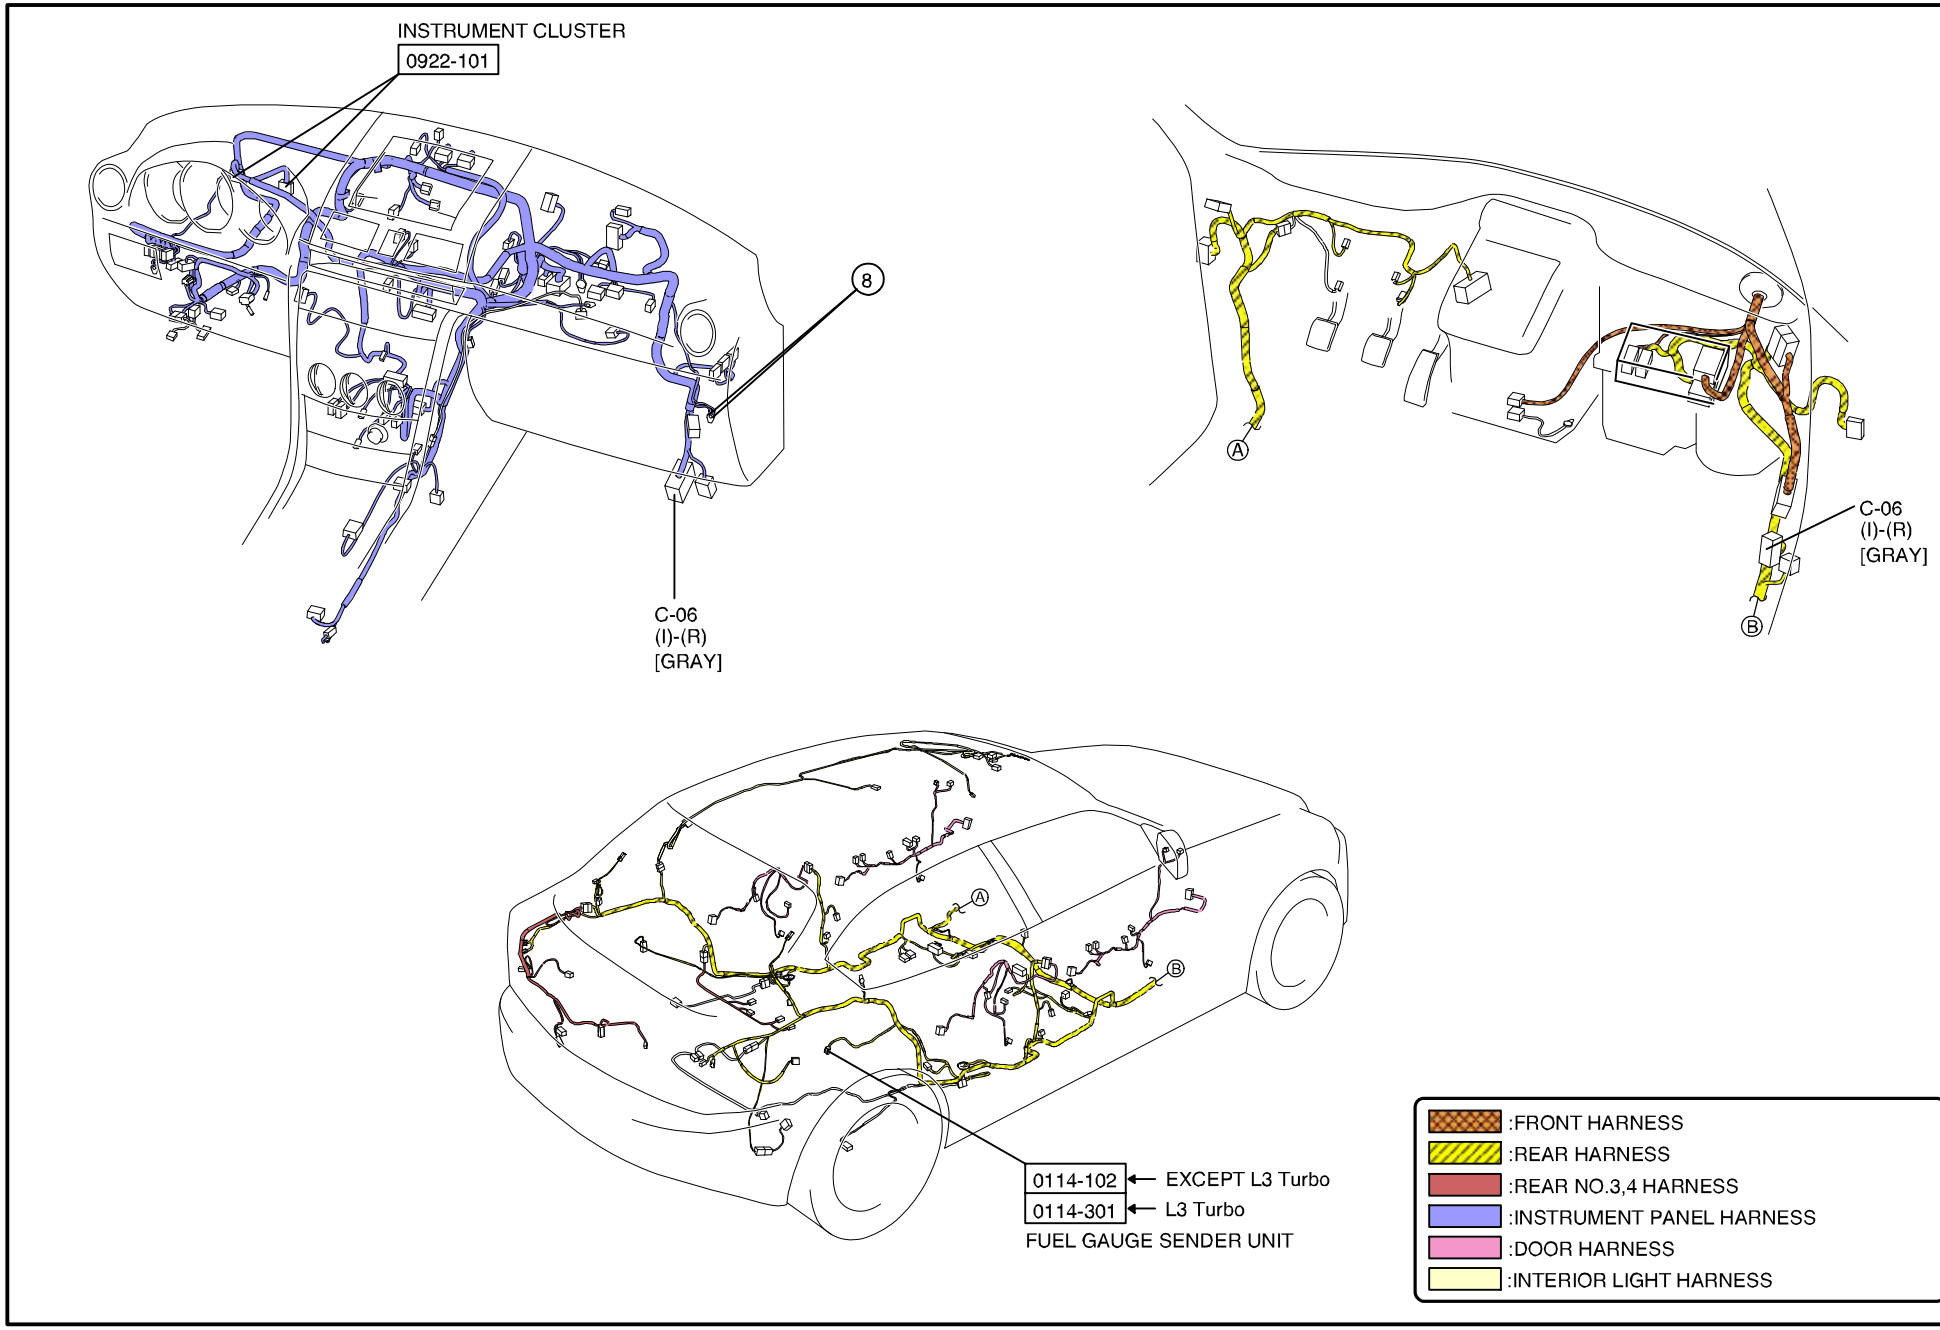

INSTRUMENT CLUSTER
0922-101
8
C-06
(I)-(R)
[GRAY]
A
B
C-06
(I)-(R)
[GRAY]
0114-102
EXCEPT L3 Turbo
0114-301
L3 Turbo
FUEL GAUGE SENDER UNIT
:FRONT HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS


INSTRUMENT PANEL HARNESS

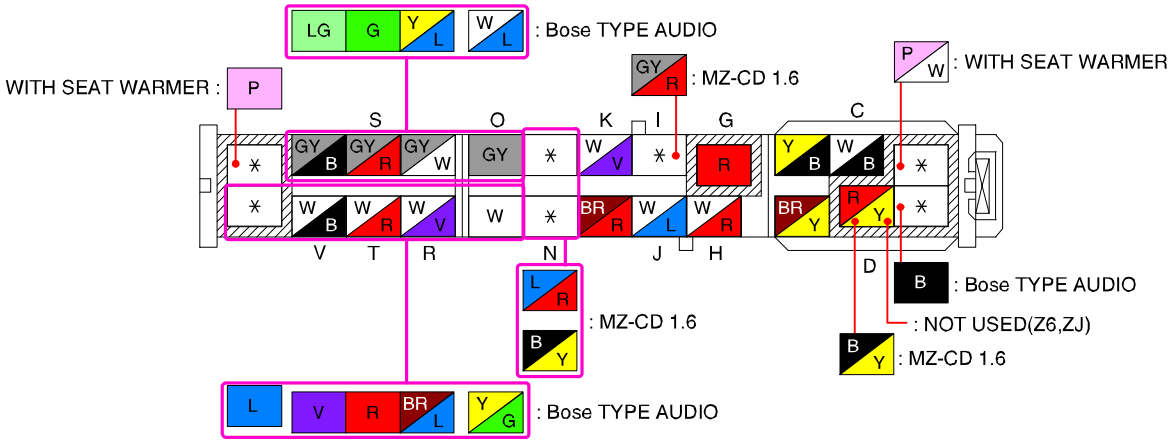


REAR HARNESS

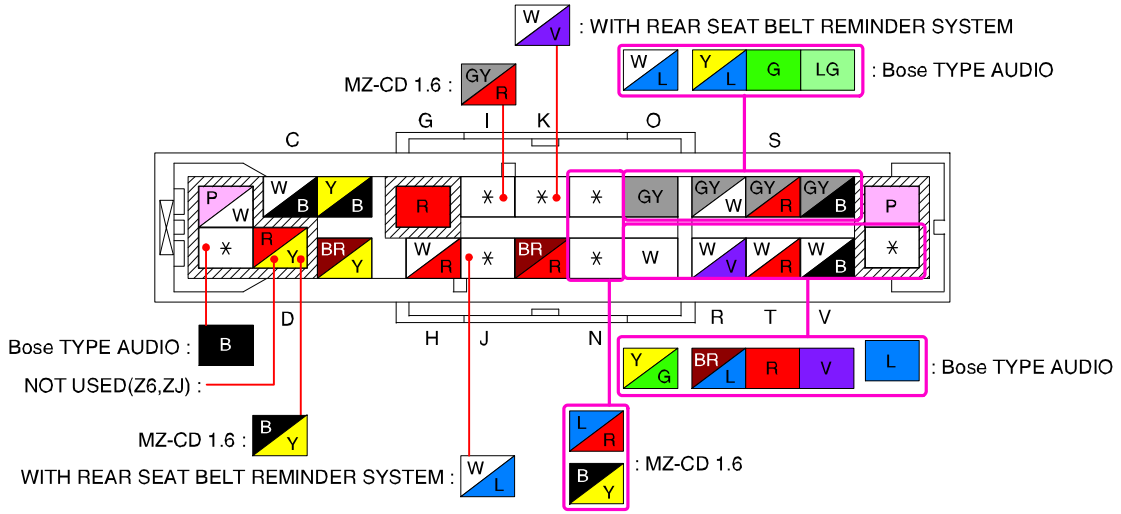


@ WITH CAR-NAVIGATION SYSTEM

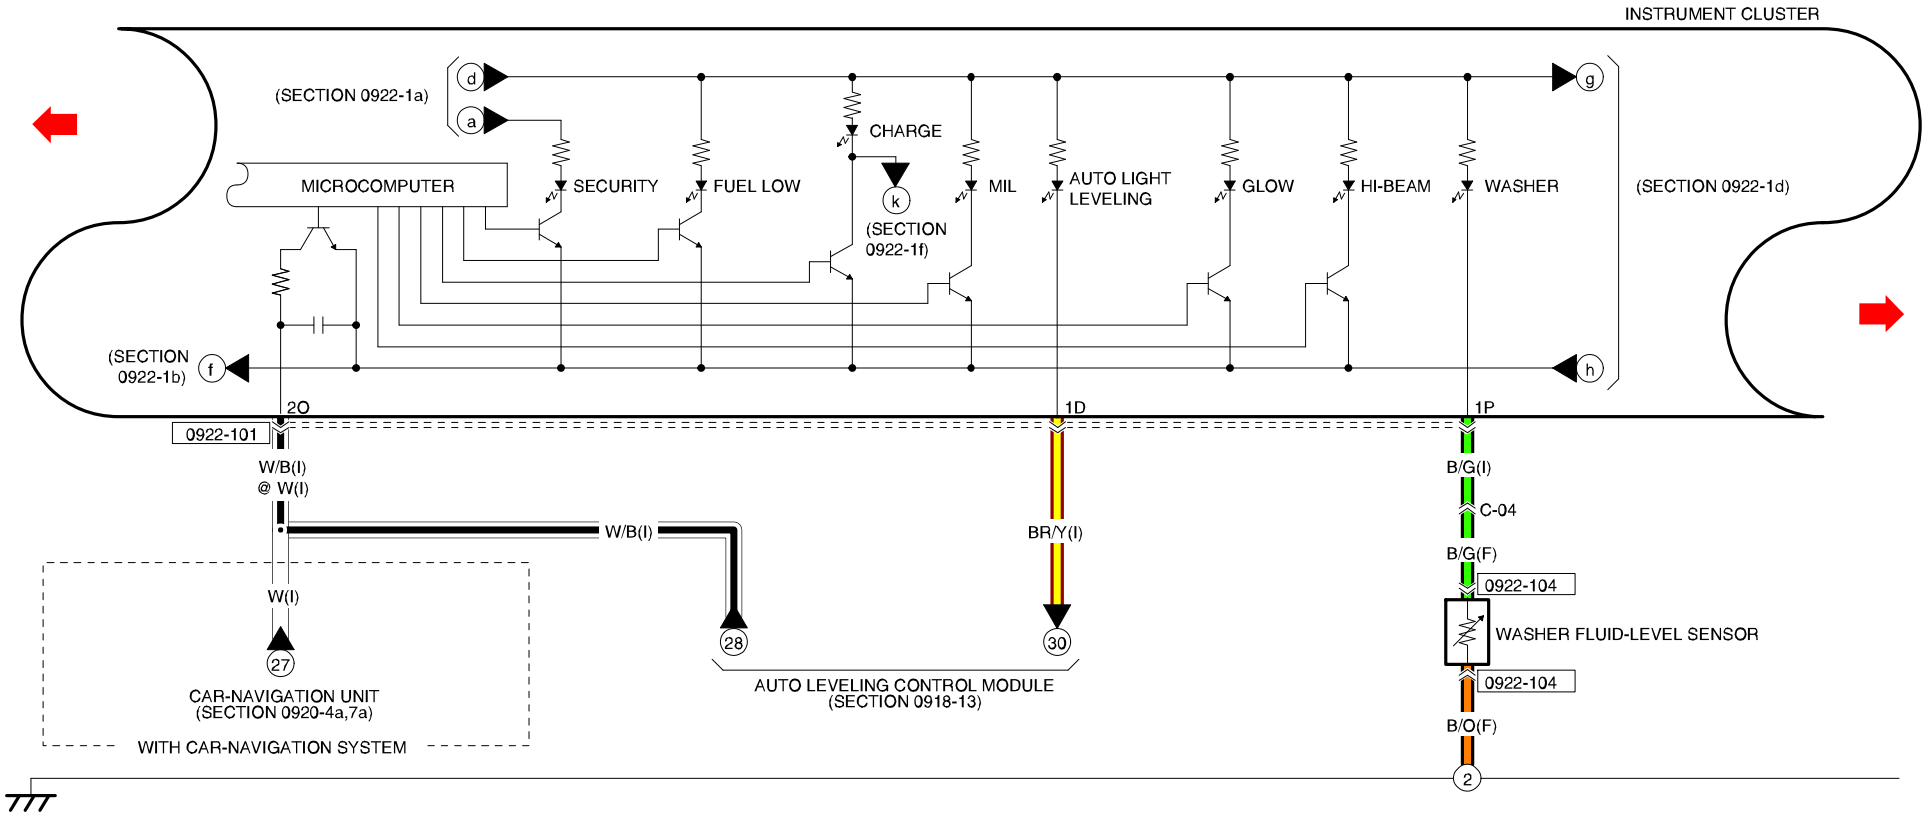


0922-101
INSTRUMENT CLUSTER

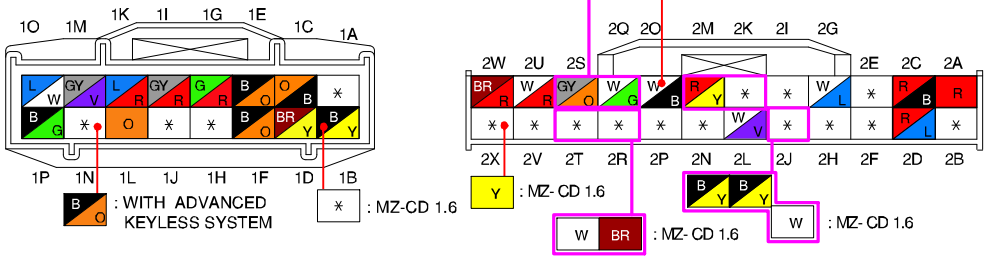


0922-104
WASHER FLUID-LEVEL SENSOR



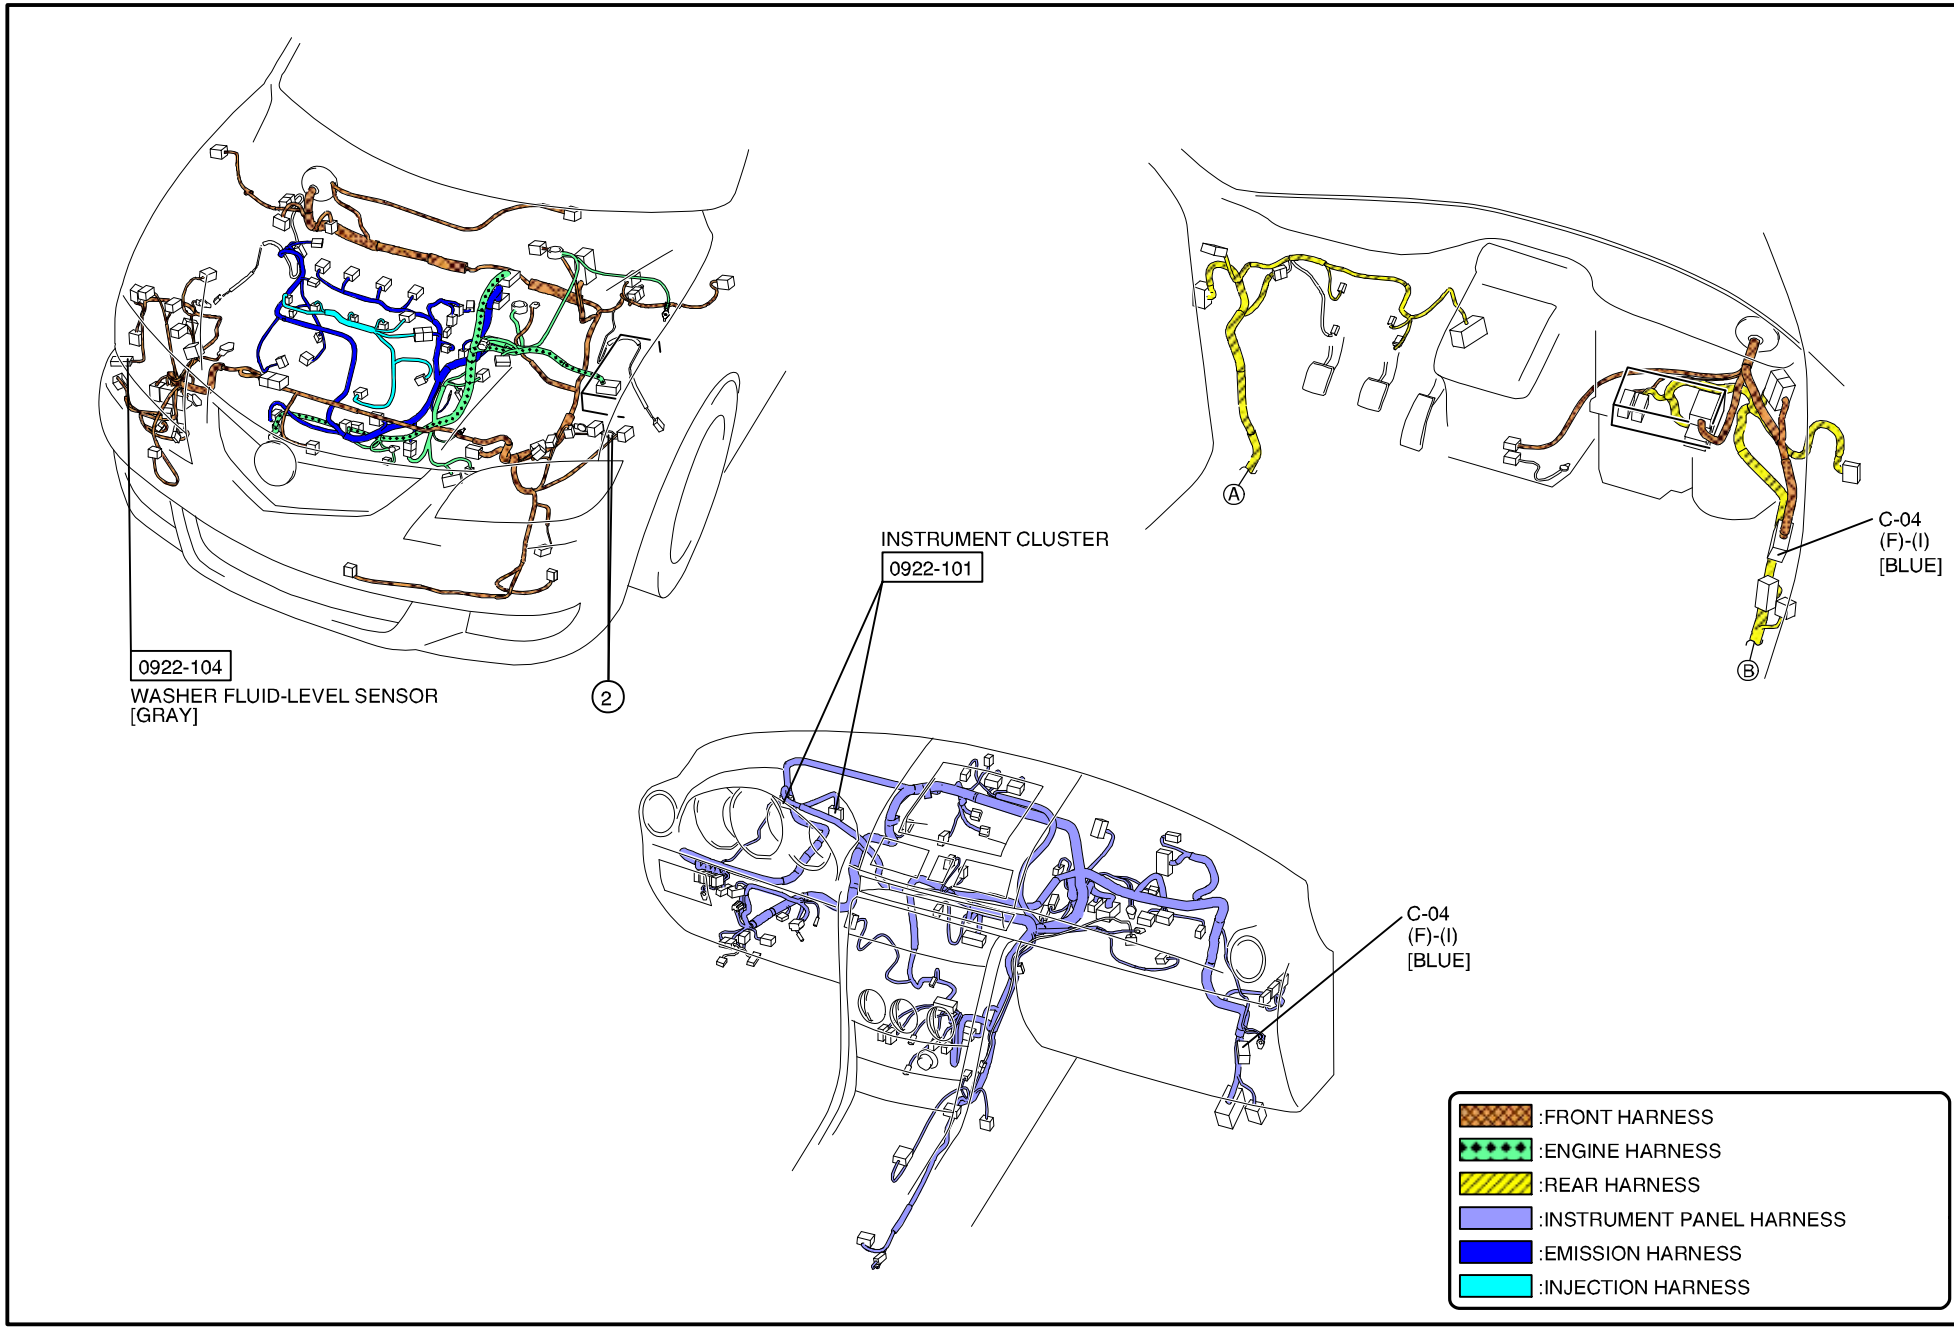

0922-104
WASHER FLUID-LEVEL SENSOR
[GRAY]
2
A
B
C-04
(F)-(I)
[BLUE]
INSTRUMENT CLUSTER
0922-101
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

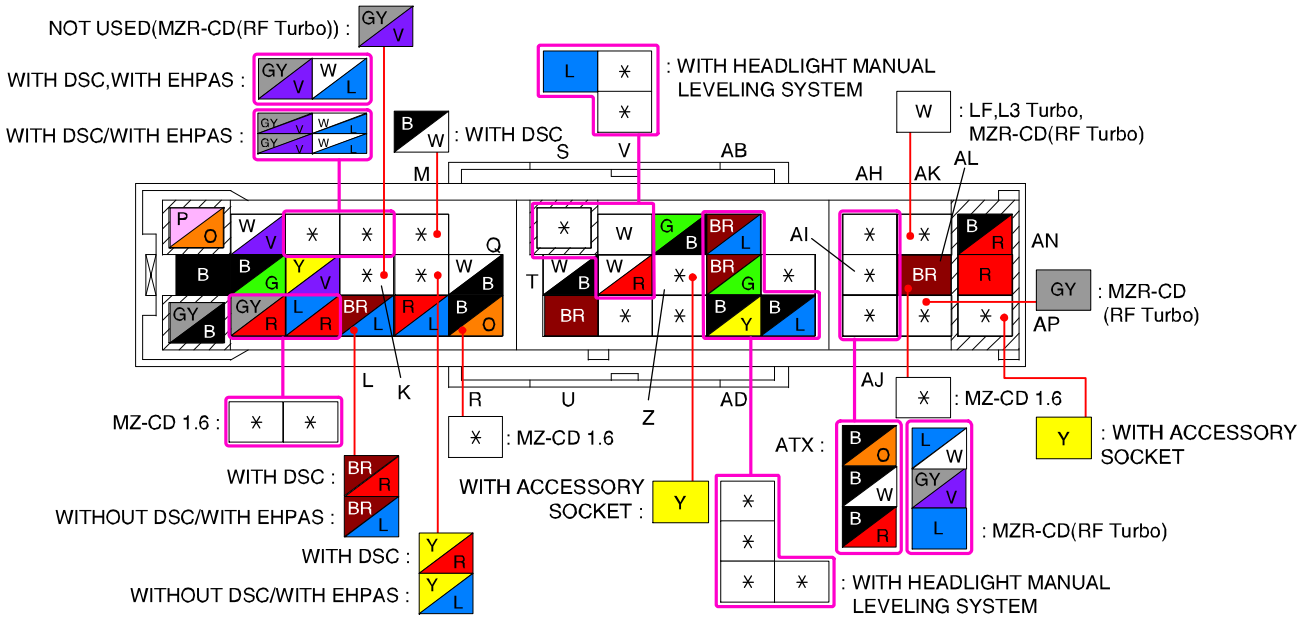

INSTRUMENT PANEL HARNESS

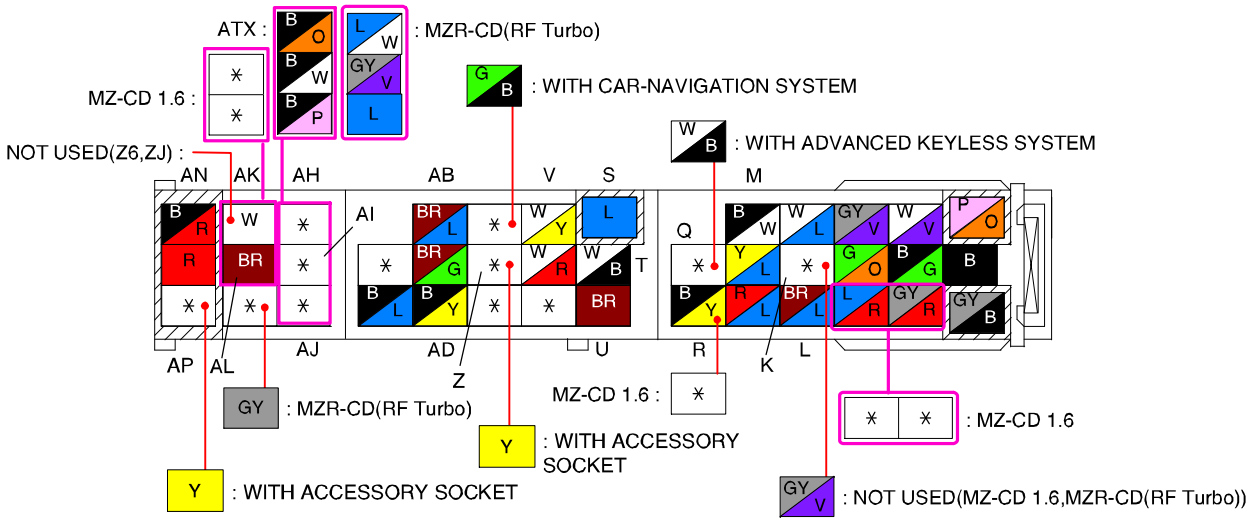


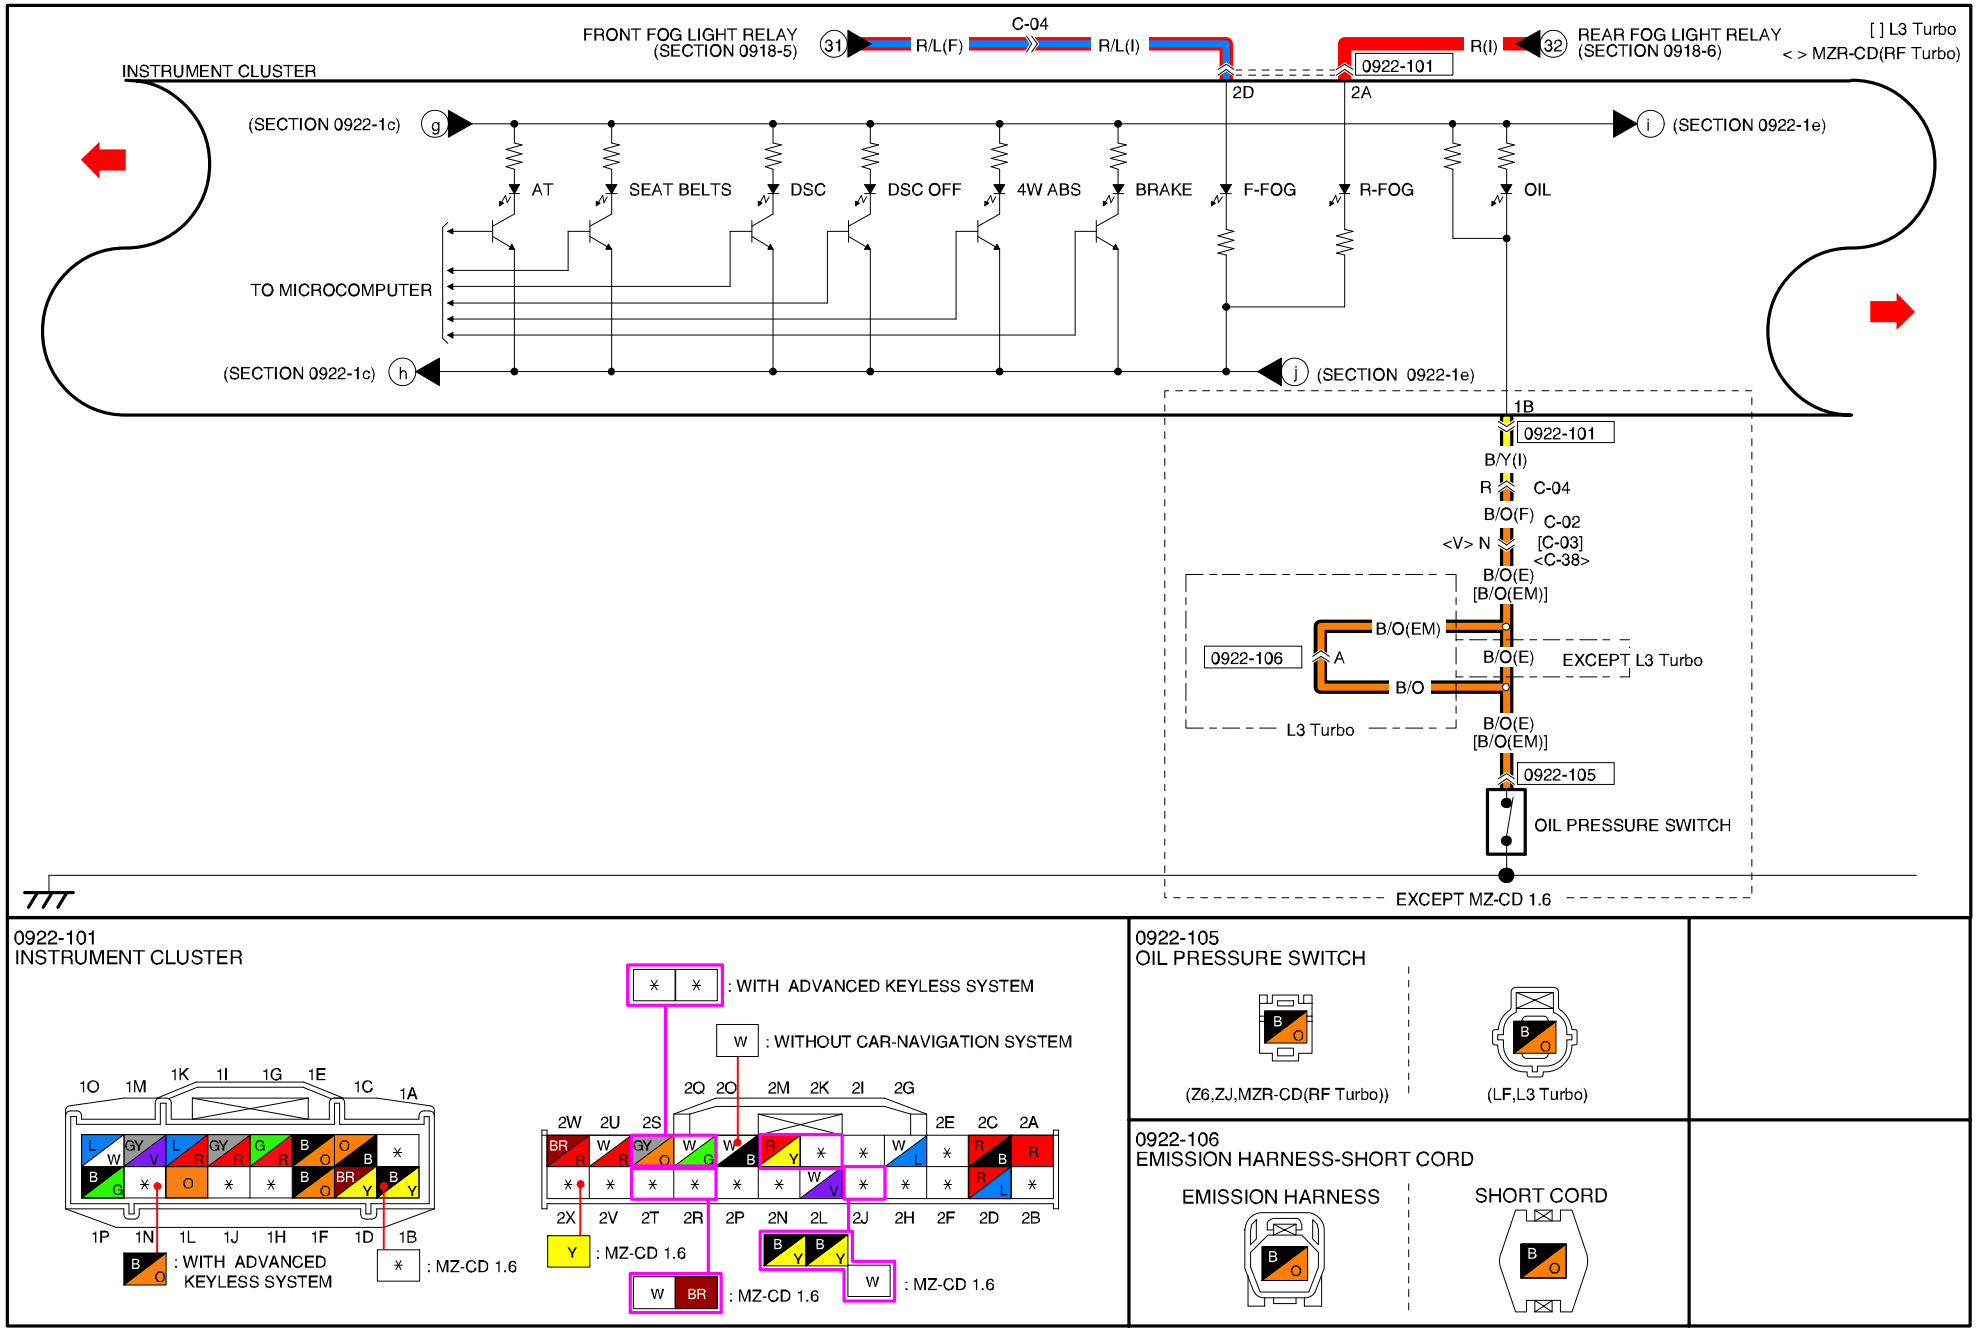

0922-101
INSTRUMENT CLUSTER


0922-105
OIL PRESSURE SWITCH

0922-106
EMISSION HARNESS-SHORT CORD

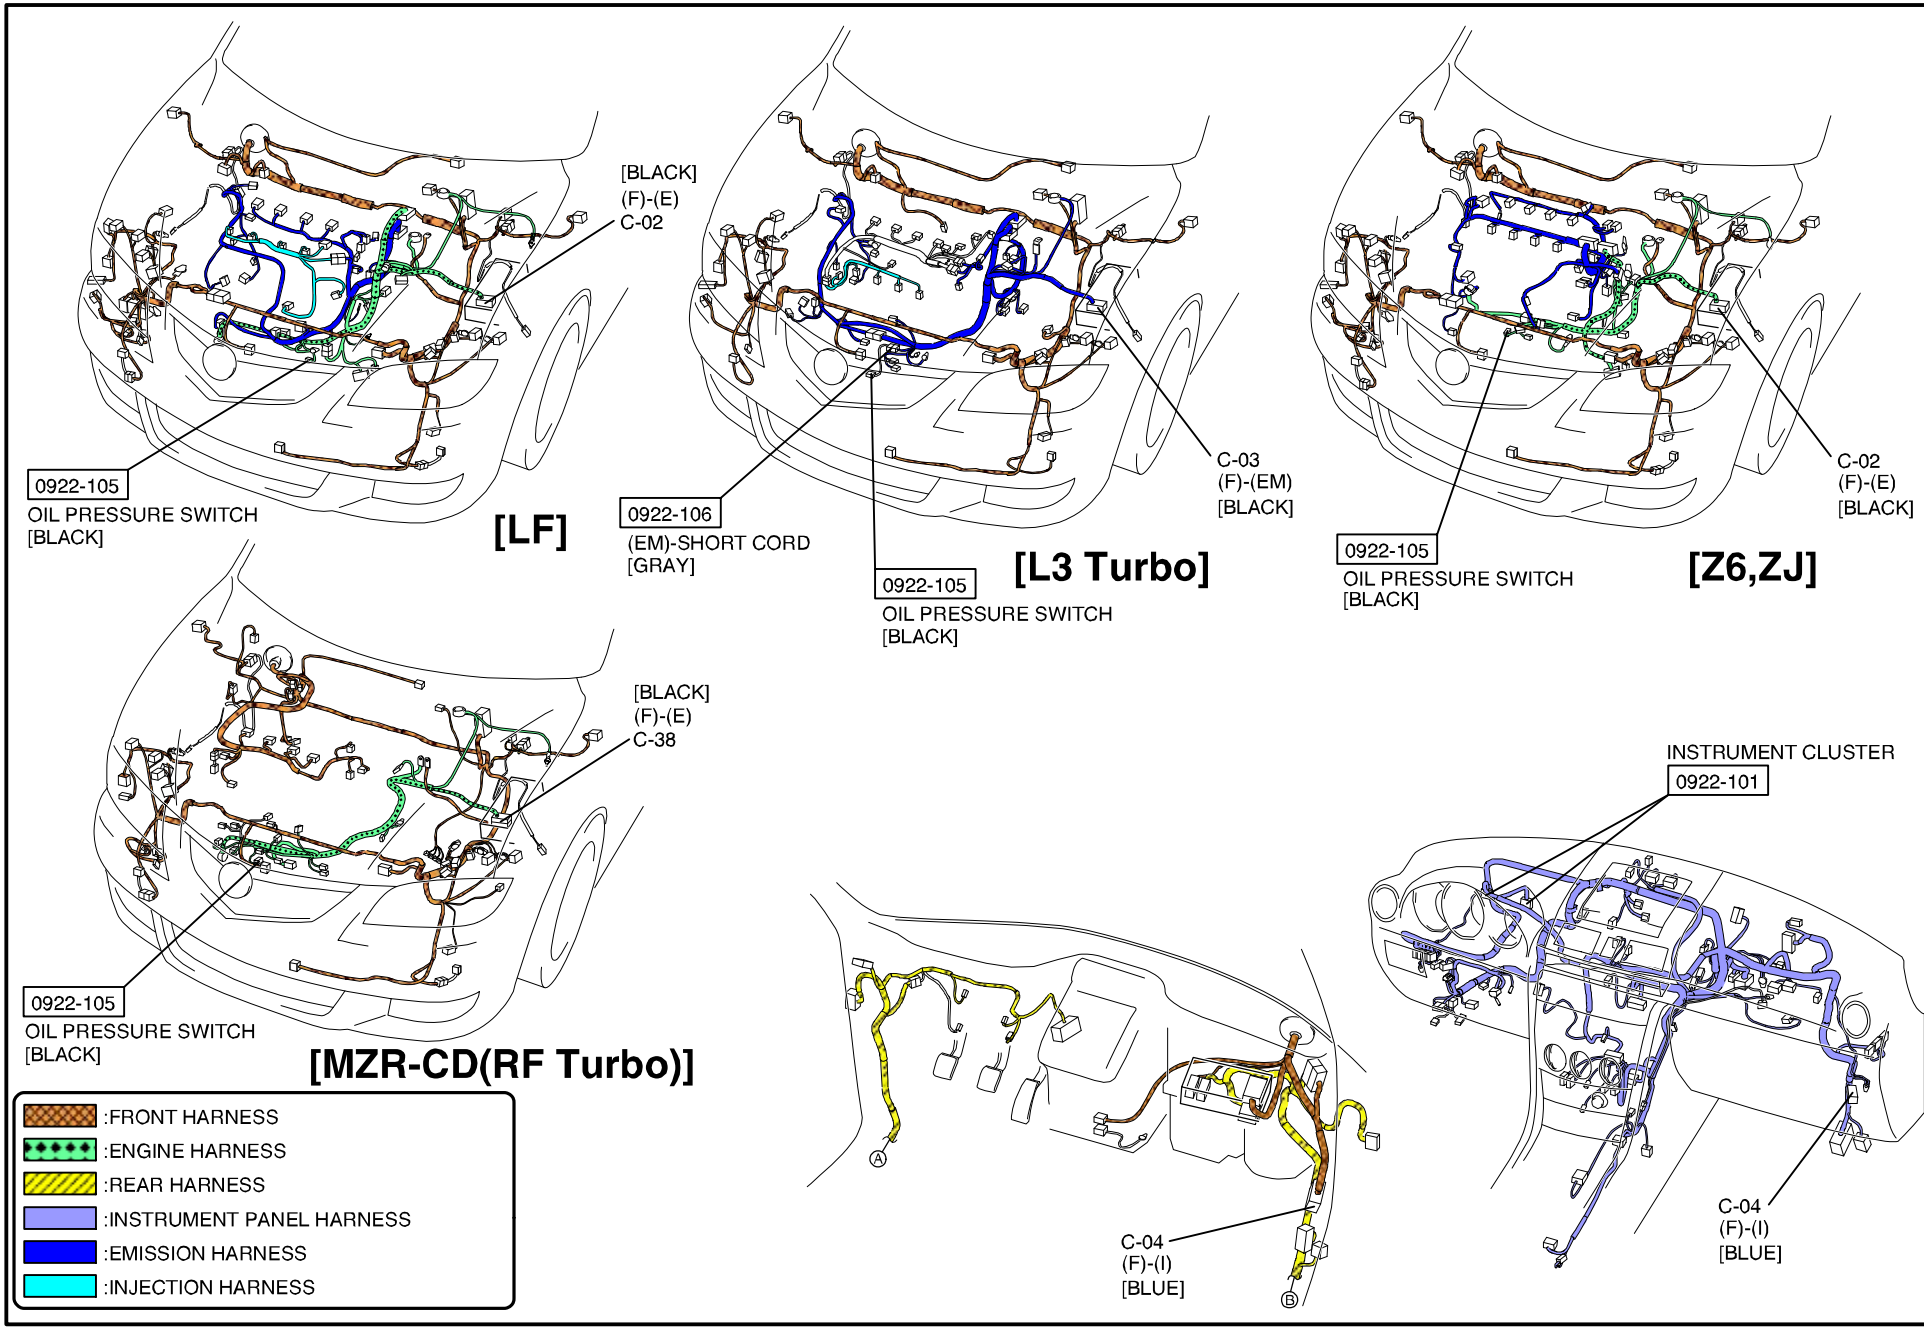

[BLACK]
(F)-(E)
C-02
0922-105
OIL PRESSURE SWITCH
[BLACK]
[LF]
0922-106
(EM)-SHORT CORD
[GRAY]
C-03
(F)-(EM)
[BLACK]
0922-105
OIL PRESSURE SWITCH
[BLACK]
[L3 Turbo]
C-02
(F)-(E)
[BLACK]
0922-105
OIL PRESSURE SWITCH
[BLACK]
[Z6,ZJ]
[BLACK]
(F)-(E)
C-38
0922-105
OIL PRESSURE SWITCH
[BLACK]
[MZR-CD(RF Turbo)]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS
A
B
C-04
(F)-(I)
[BLUE]
INSTRUMENT CLUSTER
0922-101
C-04
(F)-(I)
[BLUE]

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

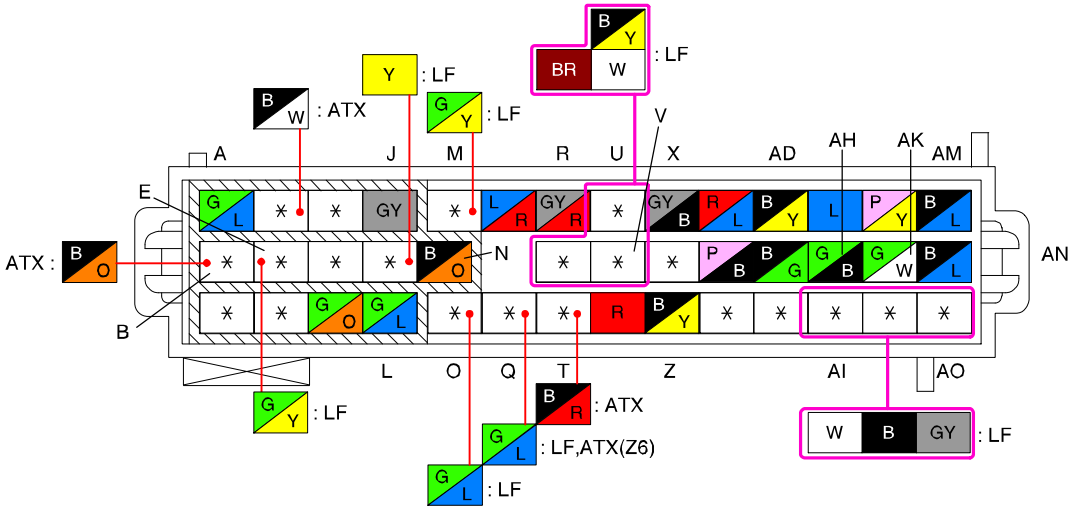


ENGINE HARNESS

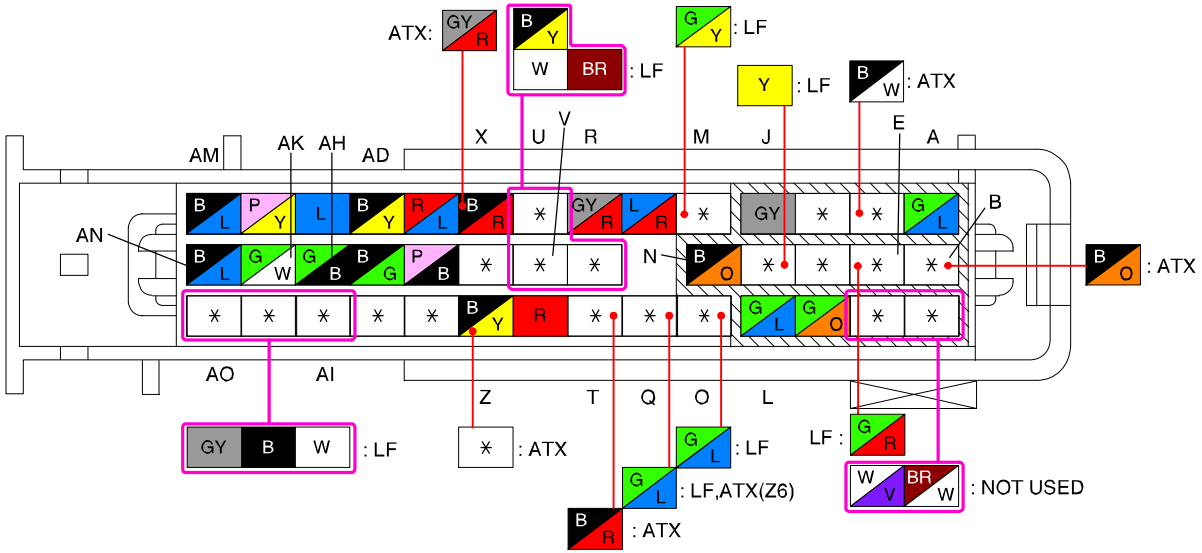


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

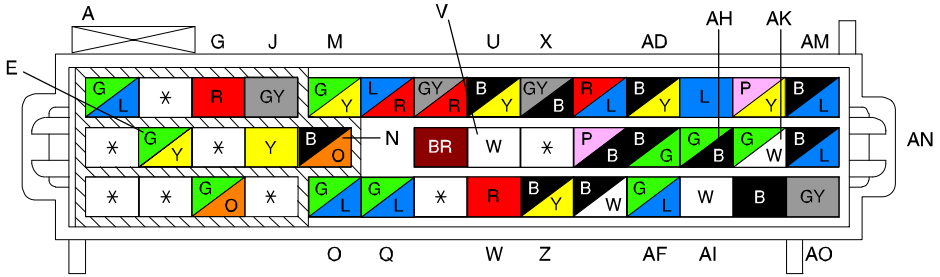


EMISSION HARNESS

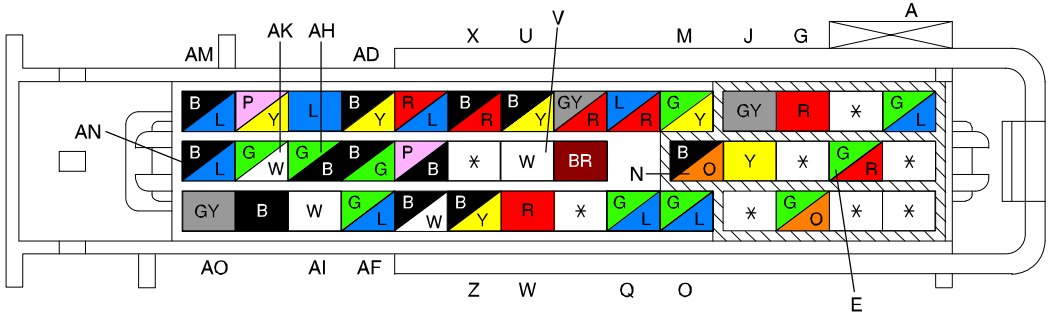


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

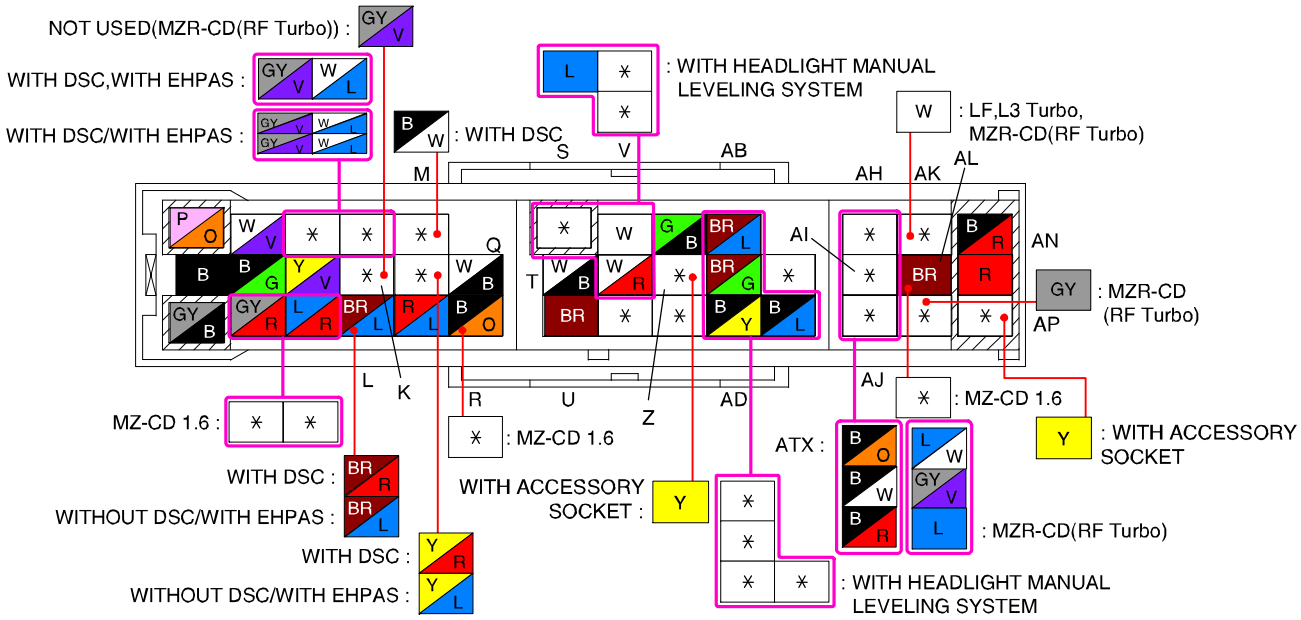


INSTRUMENT PANEL HARNESS

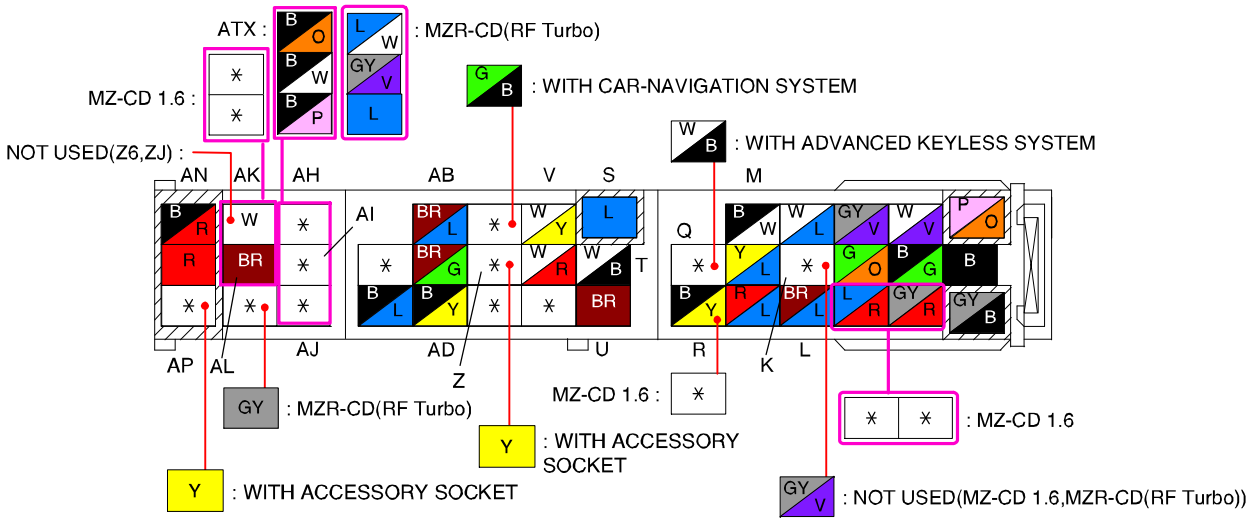


C-38
FRONT HARNESS-ENGINE HARNESS


FRONT HARNESS

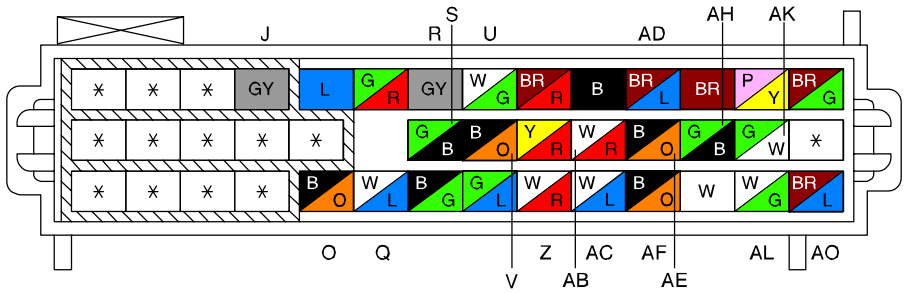


ENGINE HARNESS

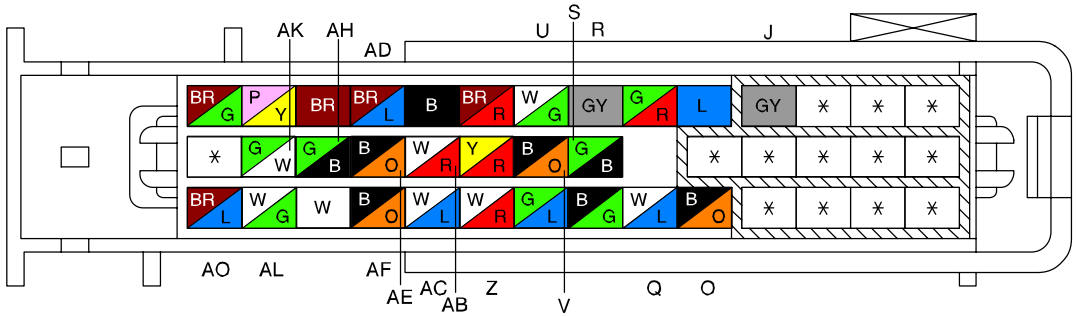


{ } MZ-CD 1.6

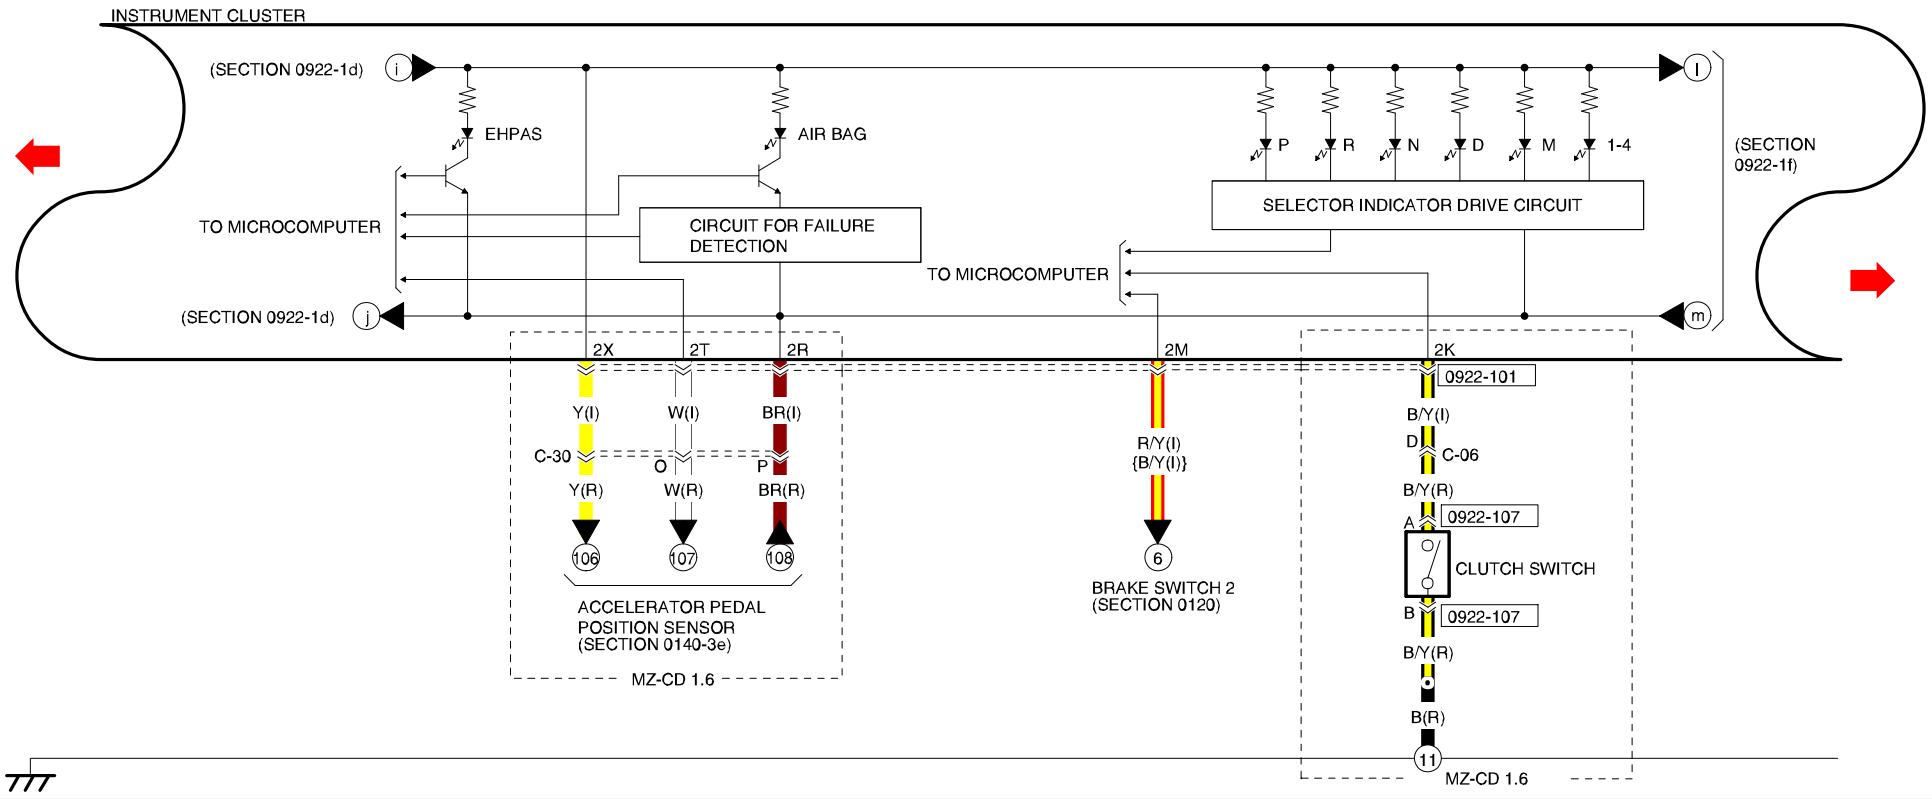


0922-101
INSTRUMENT CLUSTER

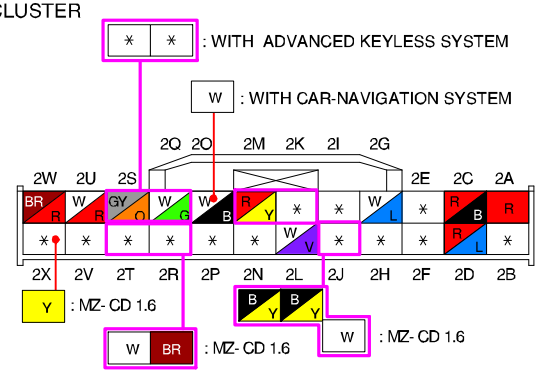


0922-107
CLUTCH SWITCH



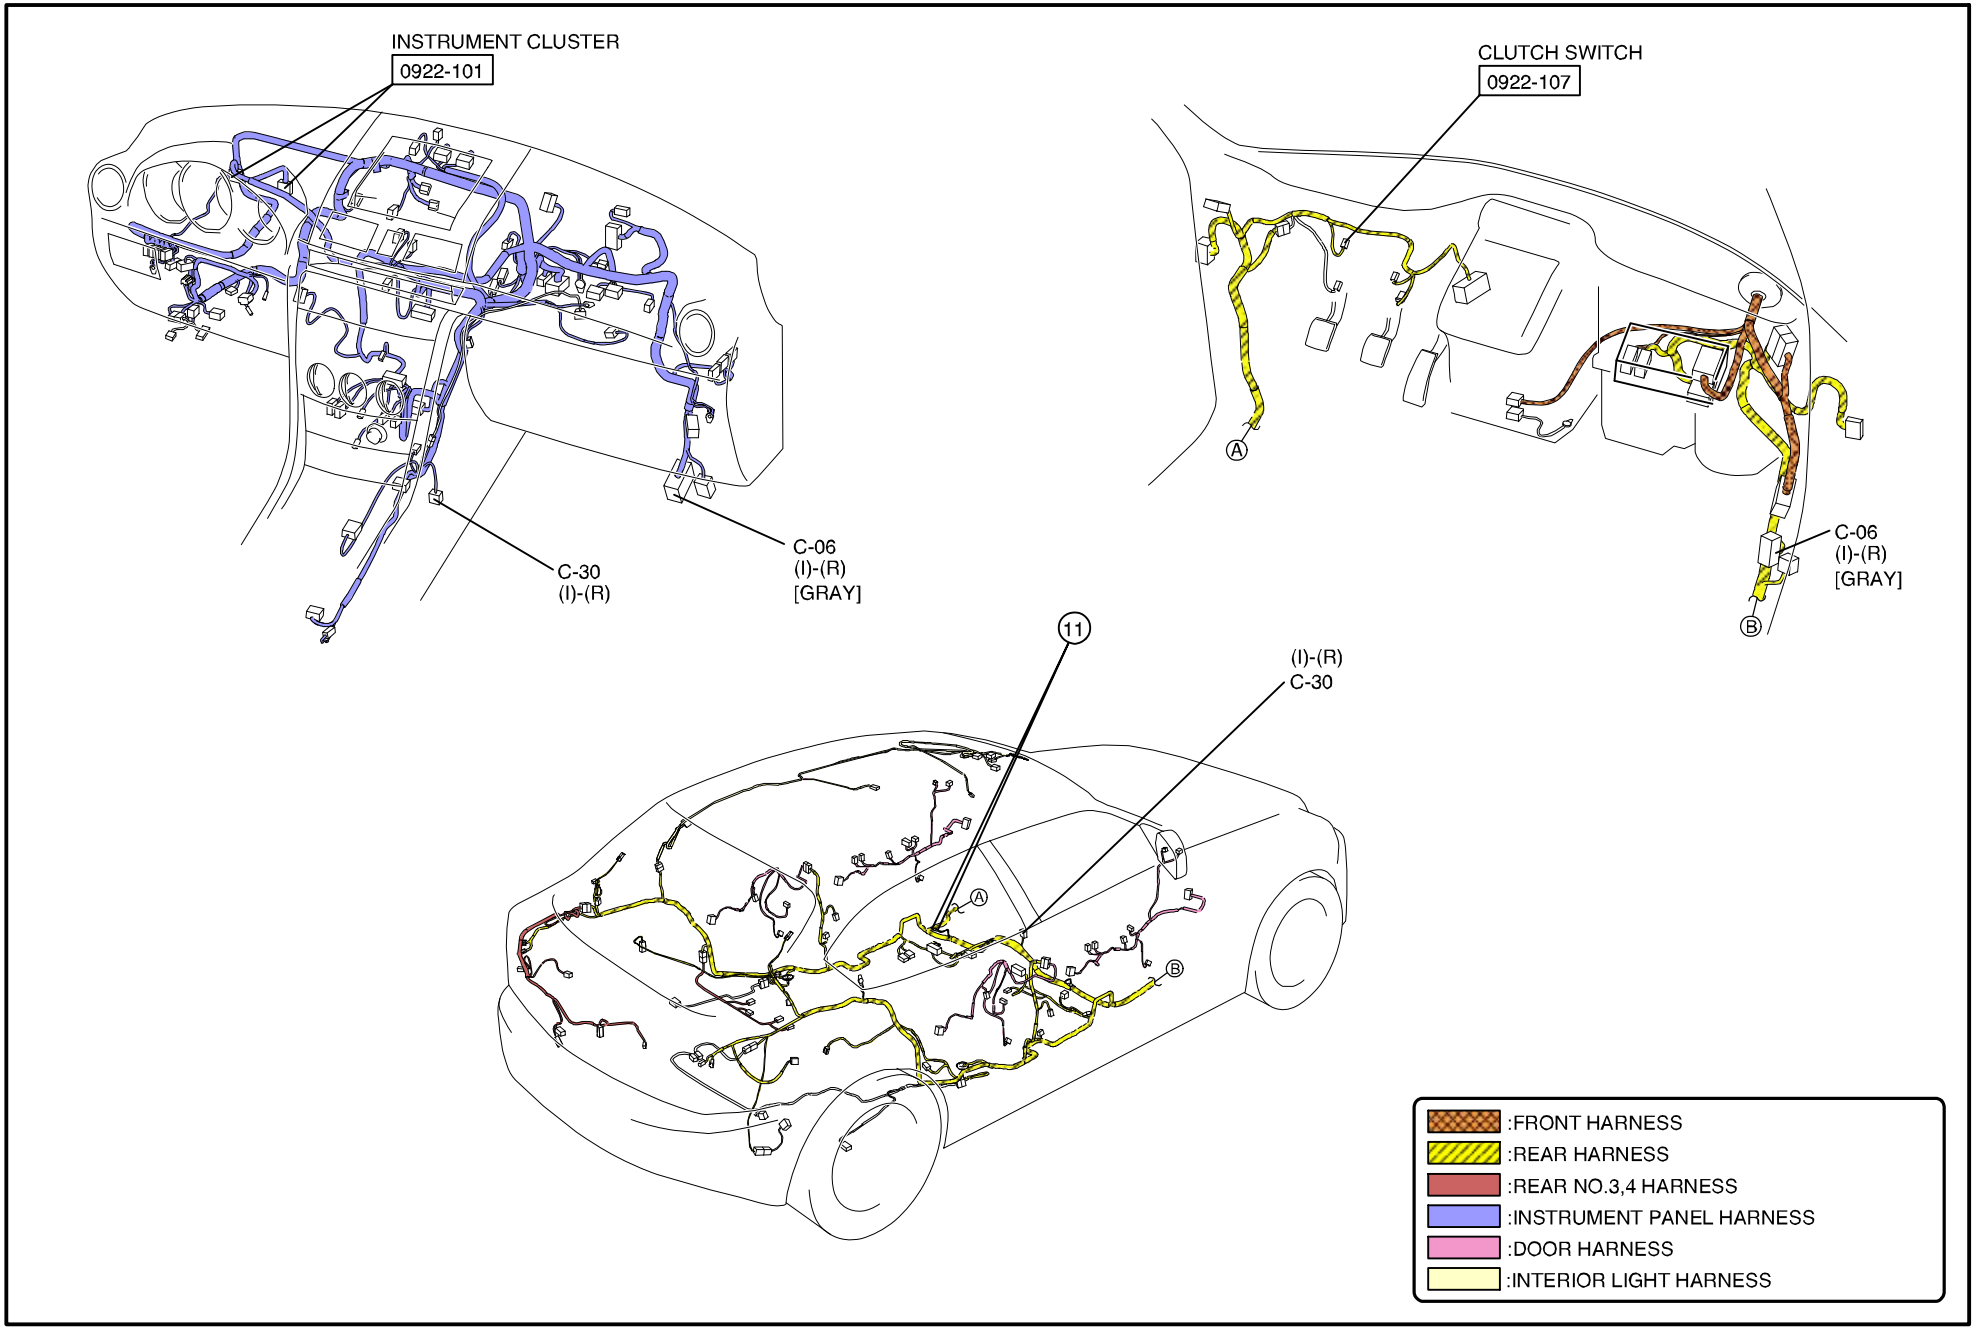

INSTRUMENT CLUSTER
0922-101
C-30
(I)-(R)
C-06
(I)-(R)
[GRAY]
CLUTCH SWITCH
0922-107
A
C-06
(I)-(R)
[GRAY]
B
11
(I)-(R)
C-30
A
B
:FRONT HARNESS
:REAR HARNESS
:REAR NO.3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

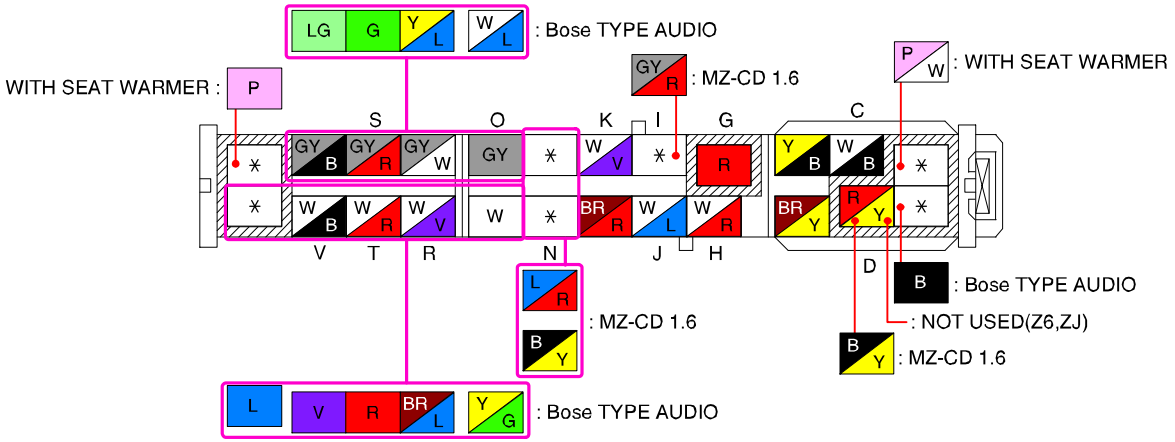


REAR HARNESS

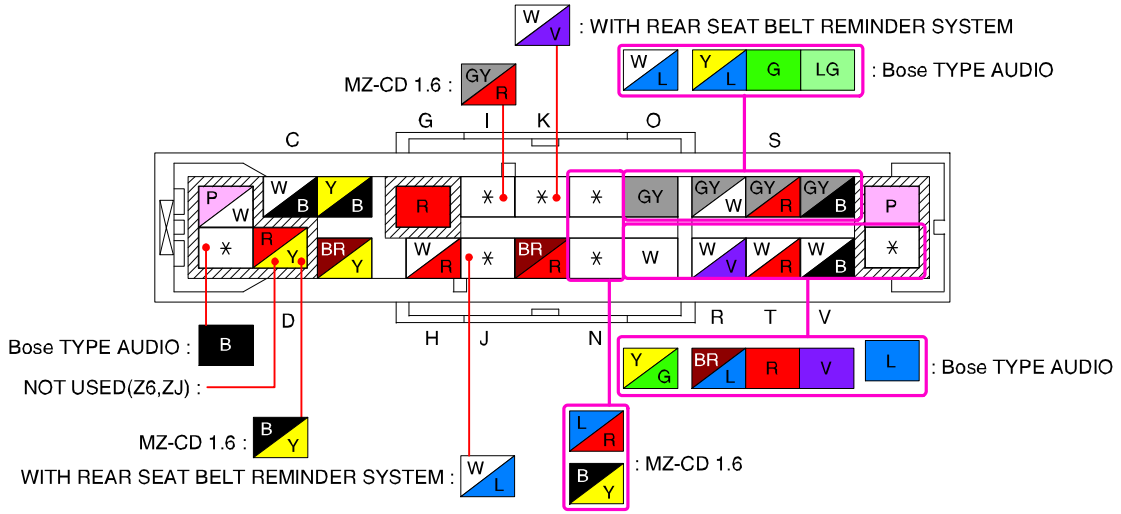



C-30
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

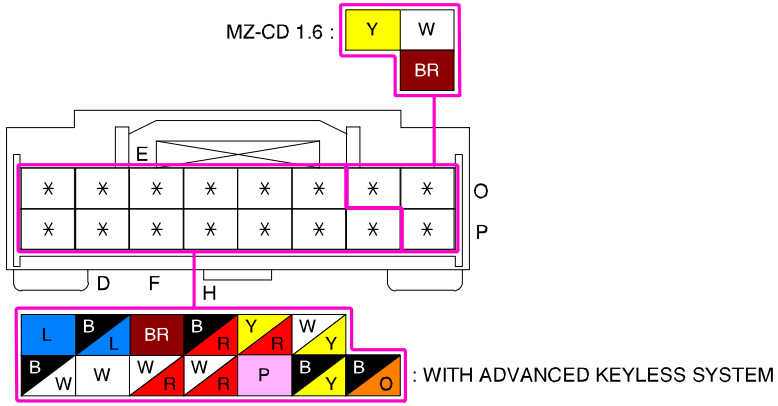



REAR HARNESS

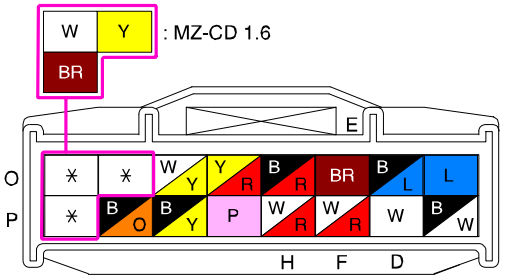


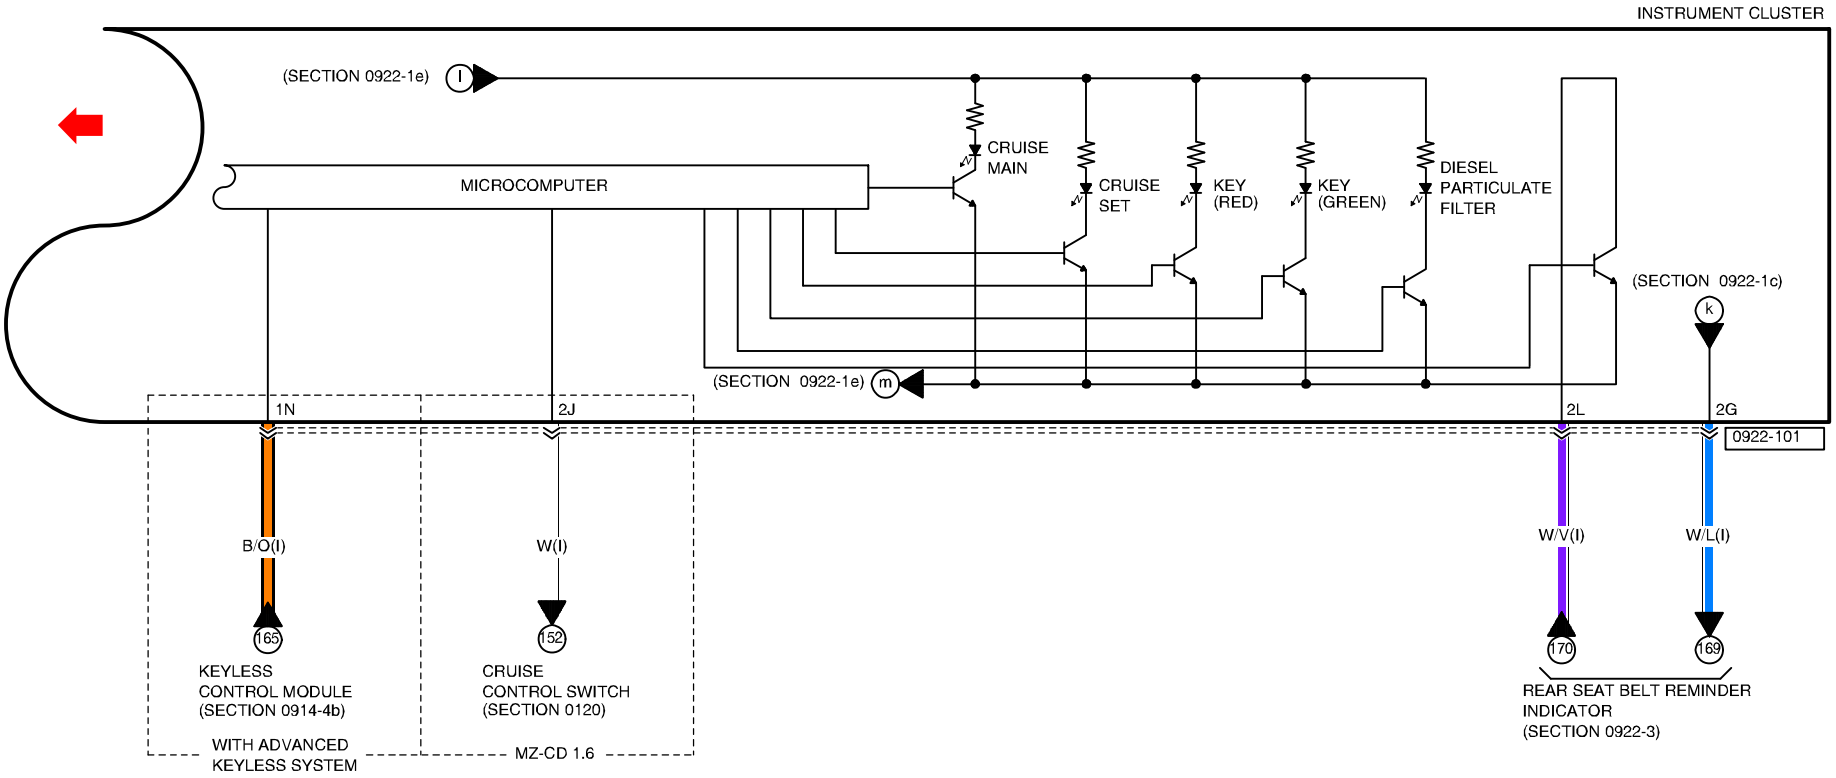

0922-101
INSTRUMENT CLUSTER

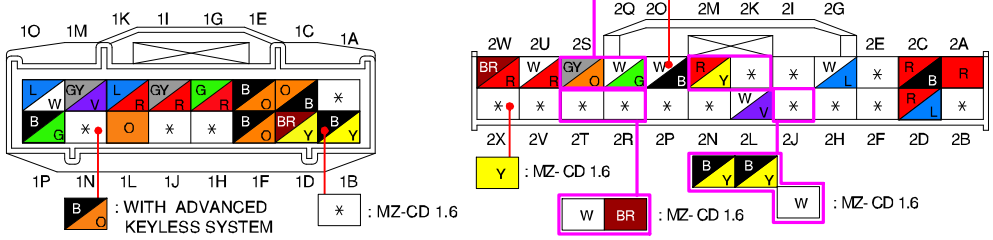


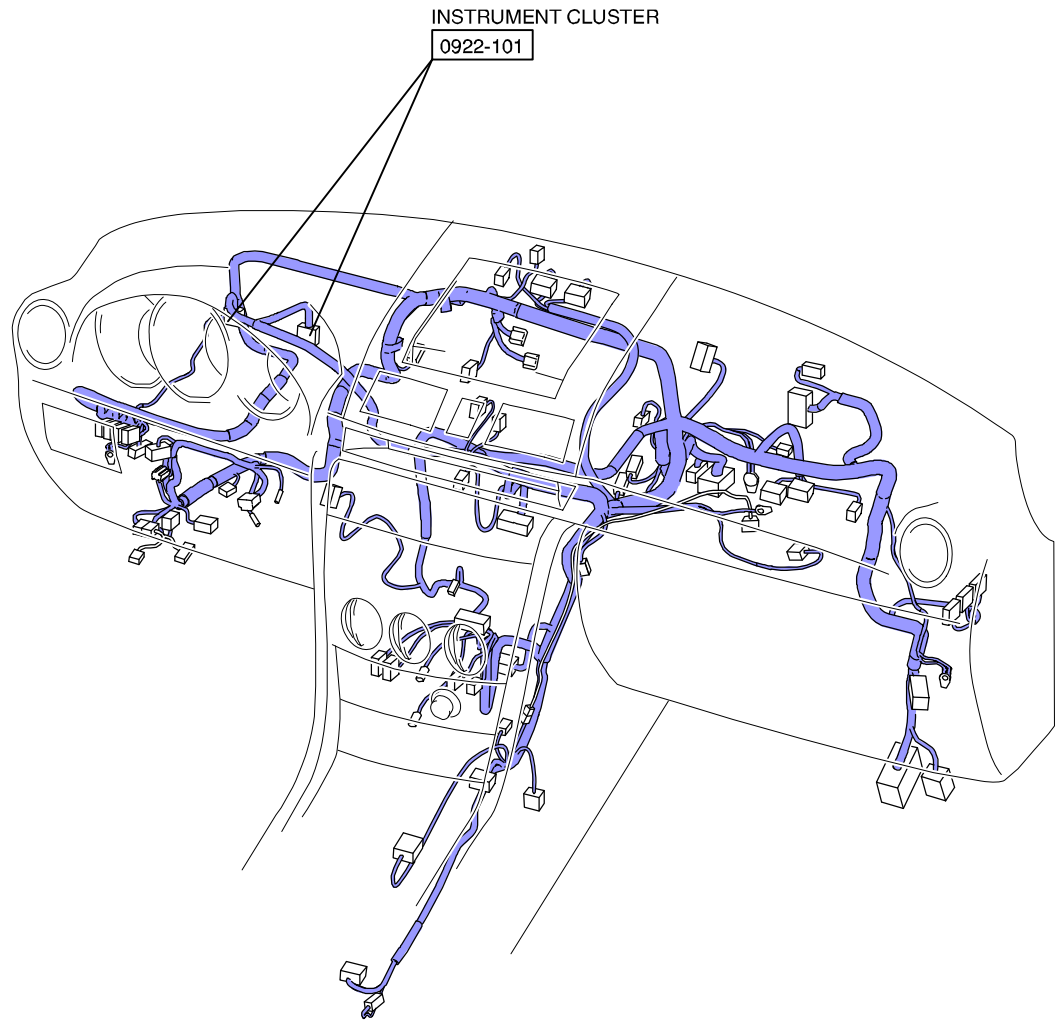
INSTRUMENT CLUSTER
0922-101
:INSTRUMENT PANEL HARNESS

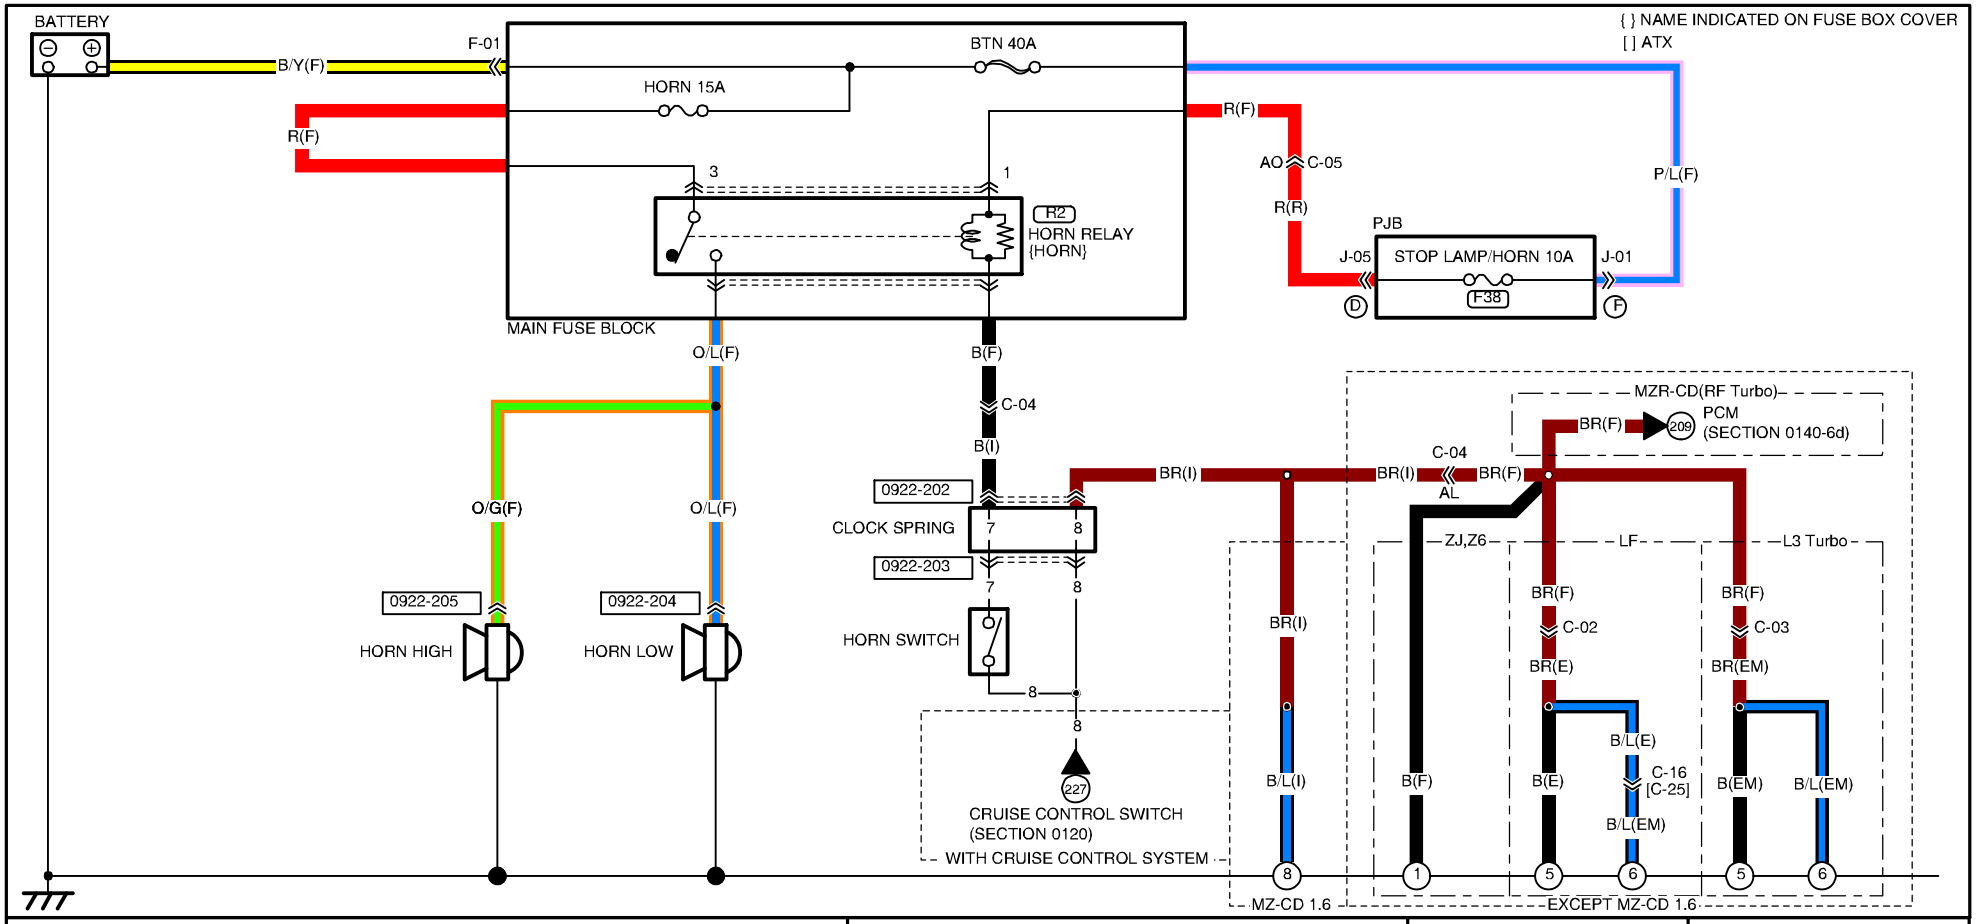


0922-202
INSTRUMENT PANEL HARNESS-CLOCK SPRING

INSTRUMENT PANEL HARNESS

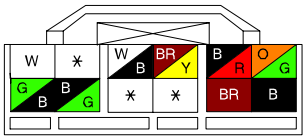


CLOCK SPRING



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0922-203
HORN SWITCH




TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.

0922-204
HORN LOW




0922-205
HORN HIGH

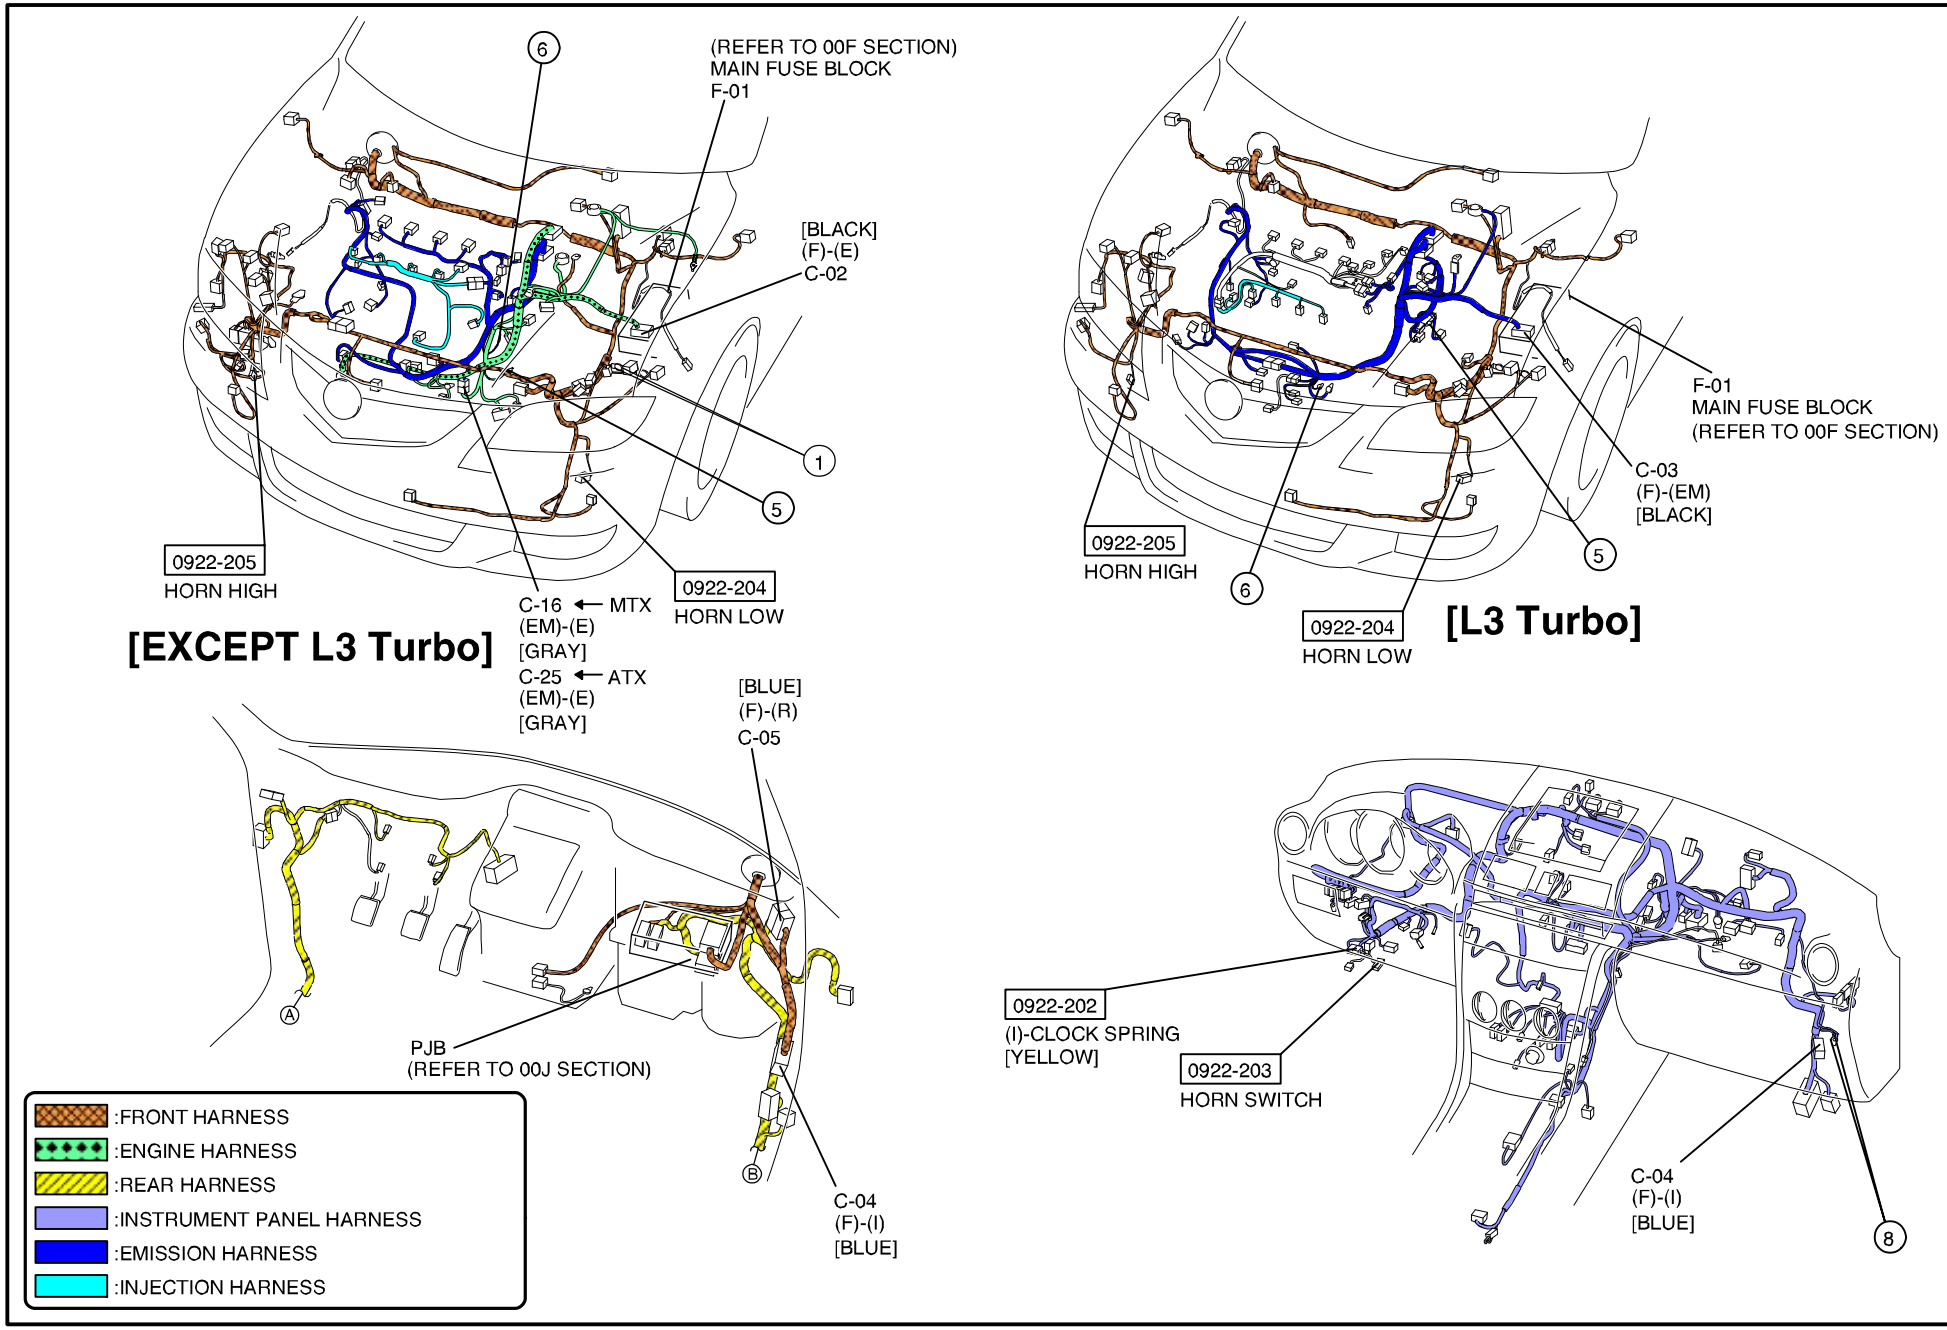



6
(REFER TO 00F SECTION)
MAIN FUSE BLOCK
F-01
[BLACK]
(F)-(E)
C-02
1
5
0922-205
HORN HIGH
C-16 ← MTX
(EM)-(E)
[GRAY]
C-25 ← ATX
(EM)-(E)
[GRAY]
0922-204
HORN LOW
[EXCEPT L3 Turbo]
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
C-03
(F)-(EM)
[BLACK]
0922-205
HORN HIGH
6
5
0922-204
HORN LOW
[L3 Turbo]
[BLUE]
(F)-(R)
C-05
A
B
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
0922-202
(I)-CLOCK SPRING
[YELLOW]
0922-203
HORN SWITCH
C-04
(F)-(I)
[BLUE]
8
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

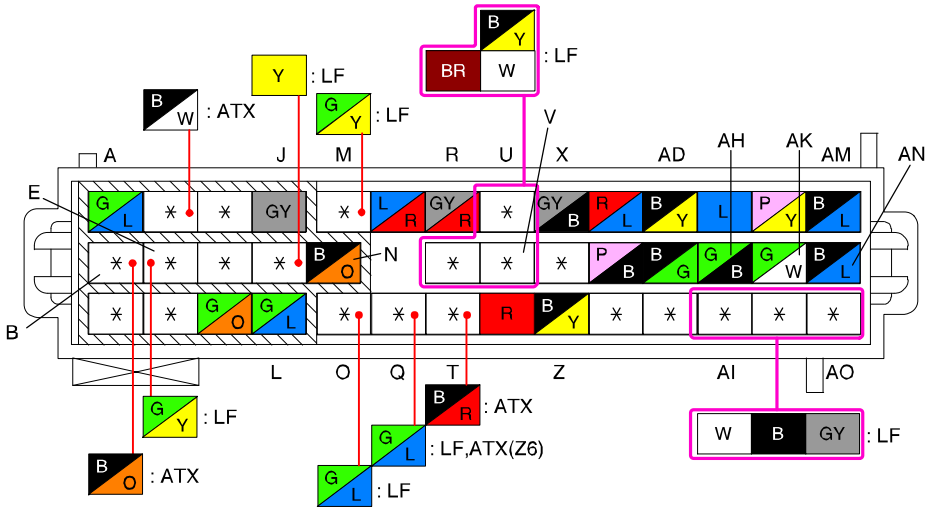


ENGINE HARNESS

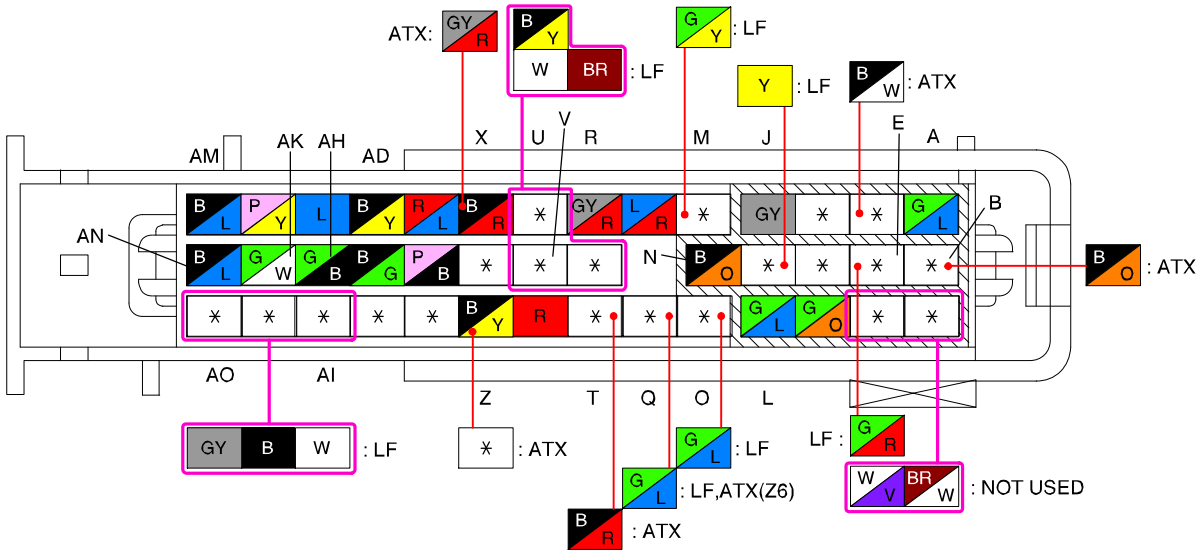


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

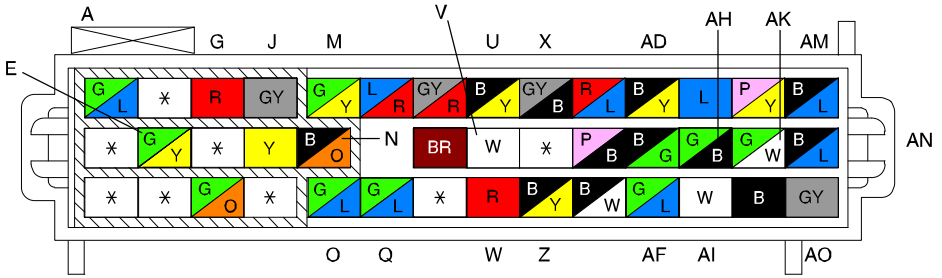


EMISSION HARNESS

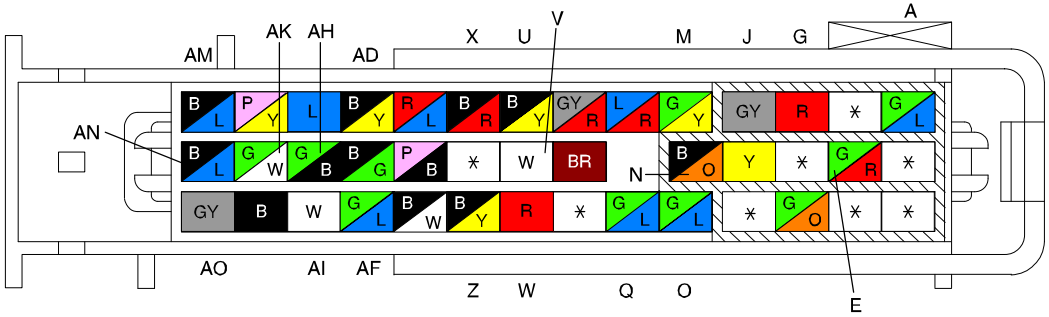


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

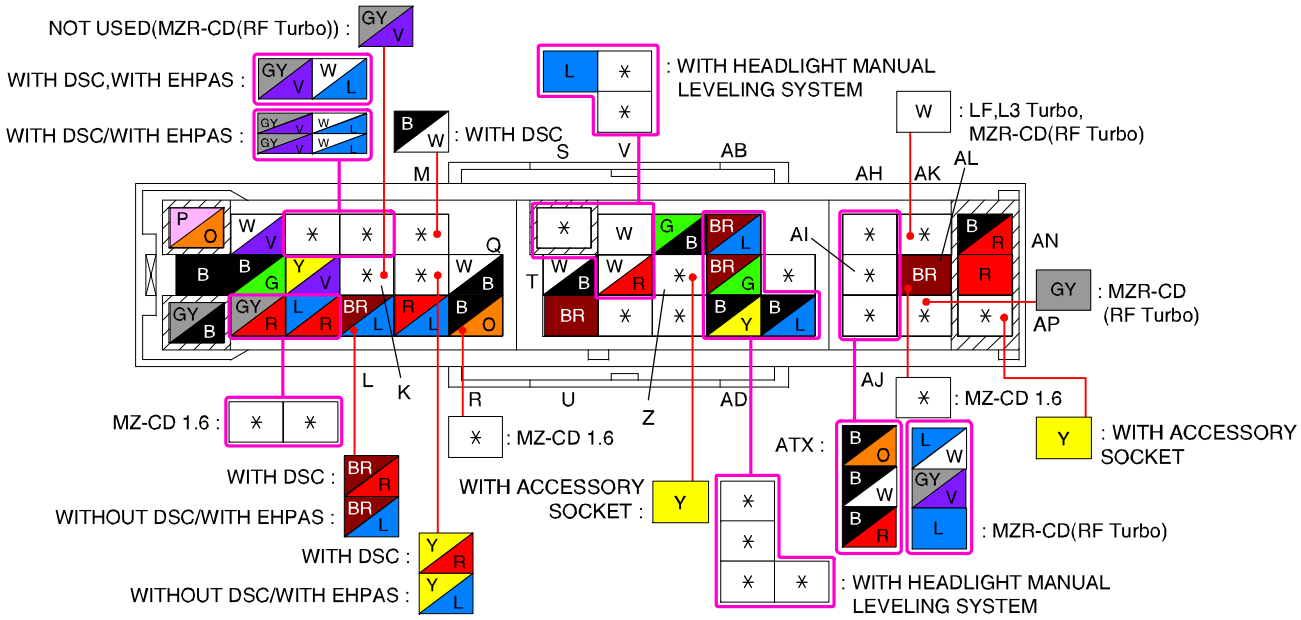


INSTRUMENT PANEL HARNESS

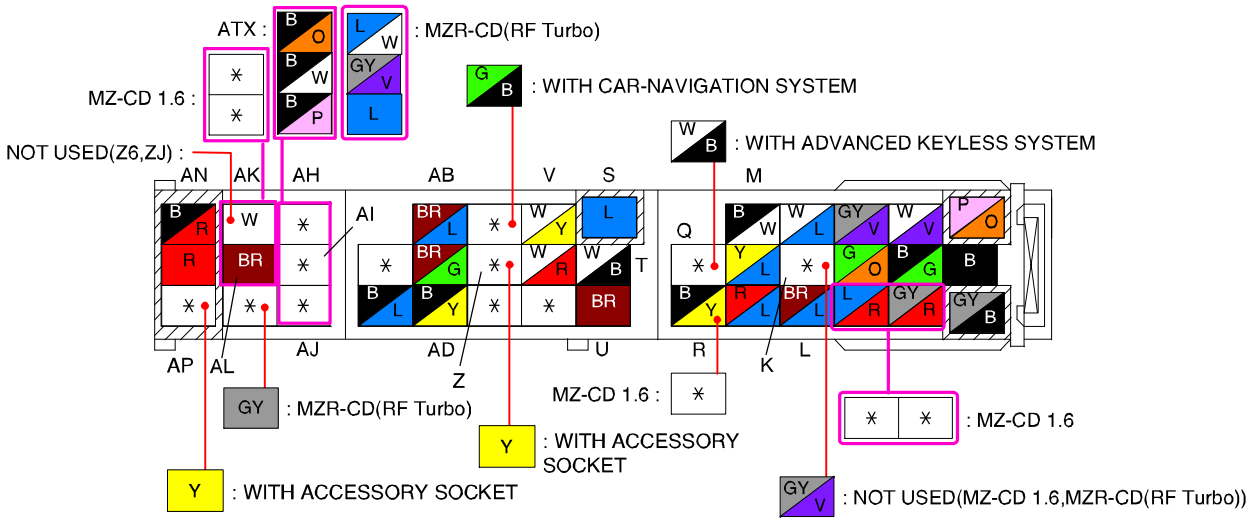


C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

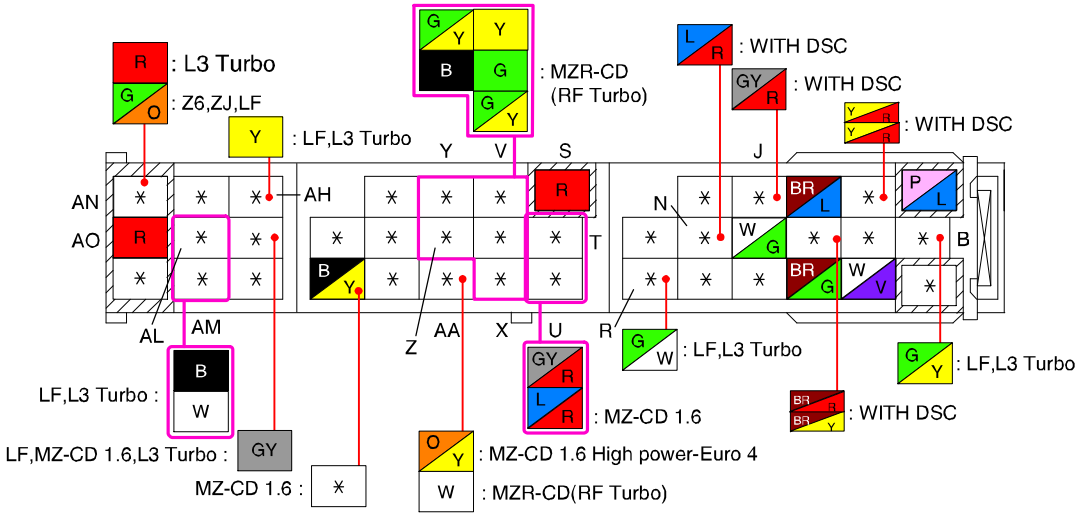


REAR HARNESS

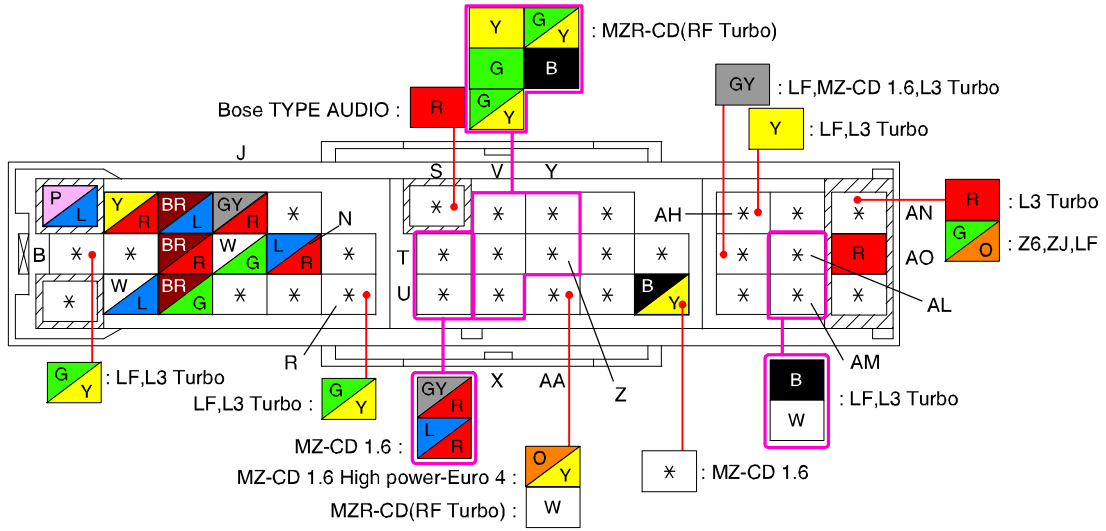


C-16
EMISSION HARNESS-ENGINE HARNESS

EMISSION HARNESS

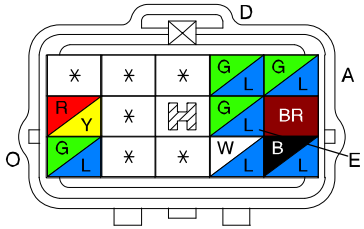


ENGINE HARNESS

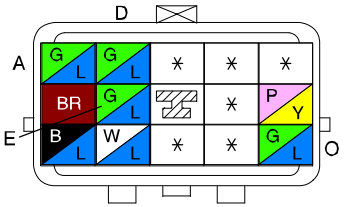


C-25
EMISSION HARNESS-ENGINE HARNESS


EMISSION HARNESS




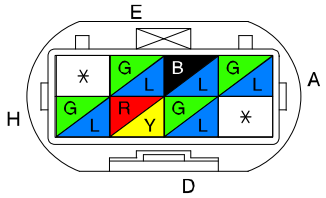



ENGINE HARNESS

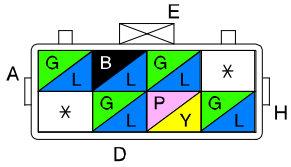


REAR SEAT BELT REMINDER SYSTEM

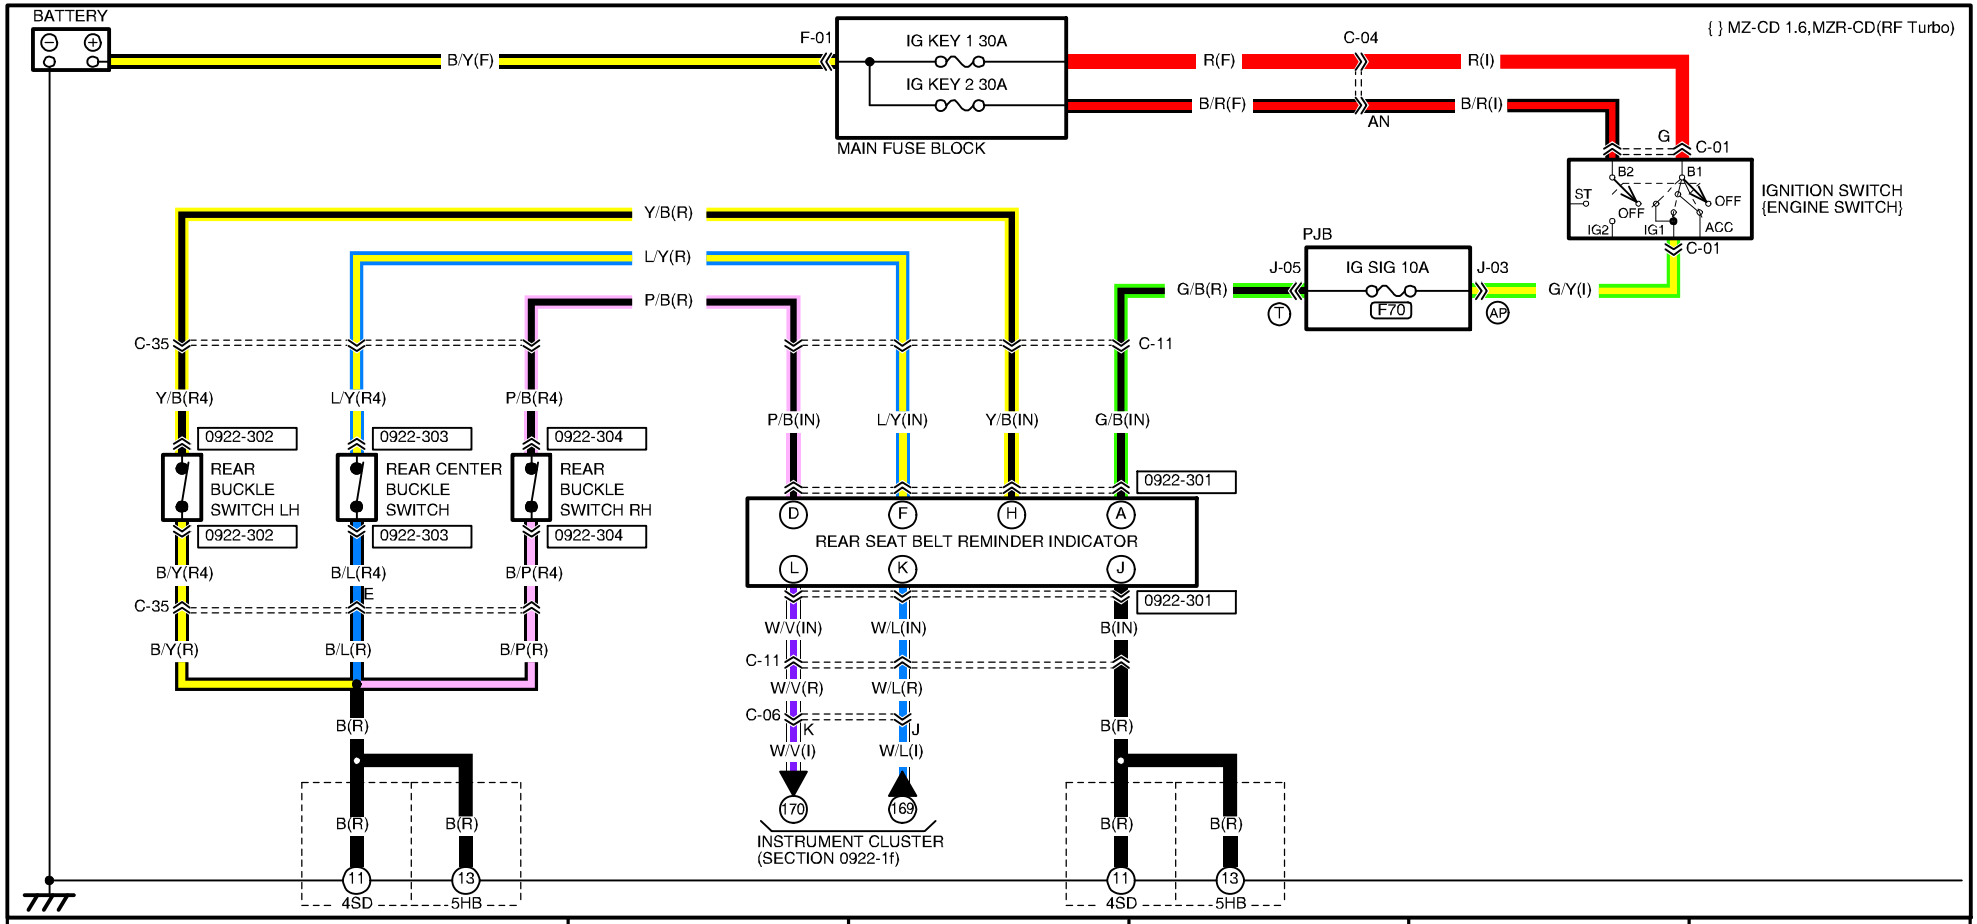

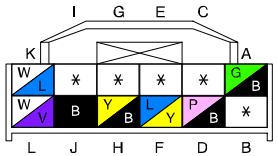0922-301 REAR SEAT BELT REMINDER INDICATOR	0922-302 REAR BUCKLE SWITCH LH	0922-303 REAR CENTER BUCKLE SWITCH	0922-304 REAR BUCKLE SWITCH RH		
					

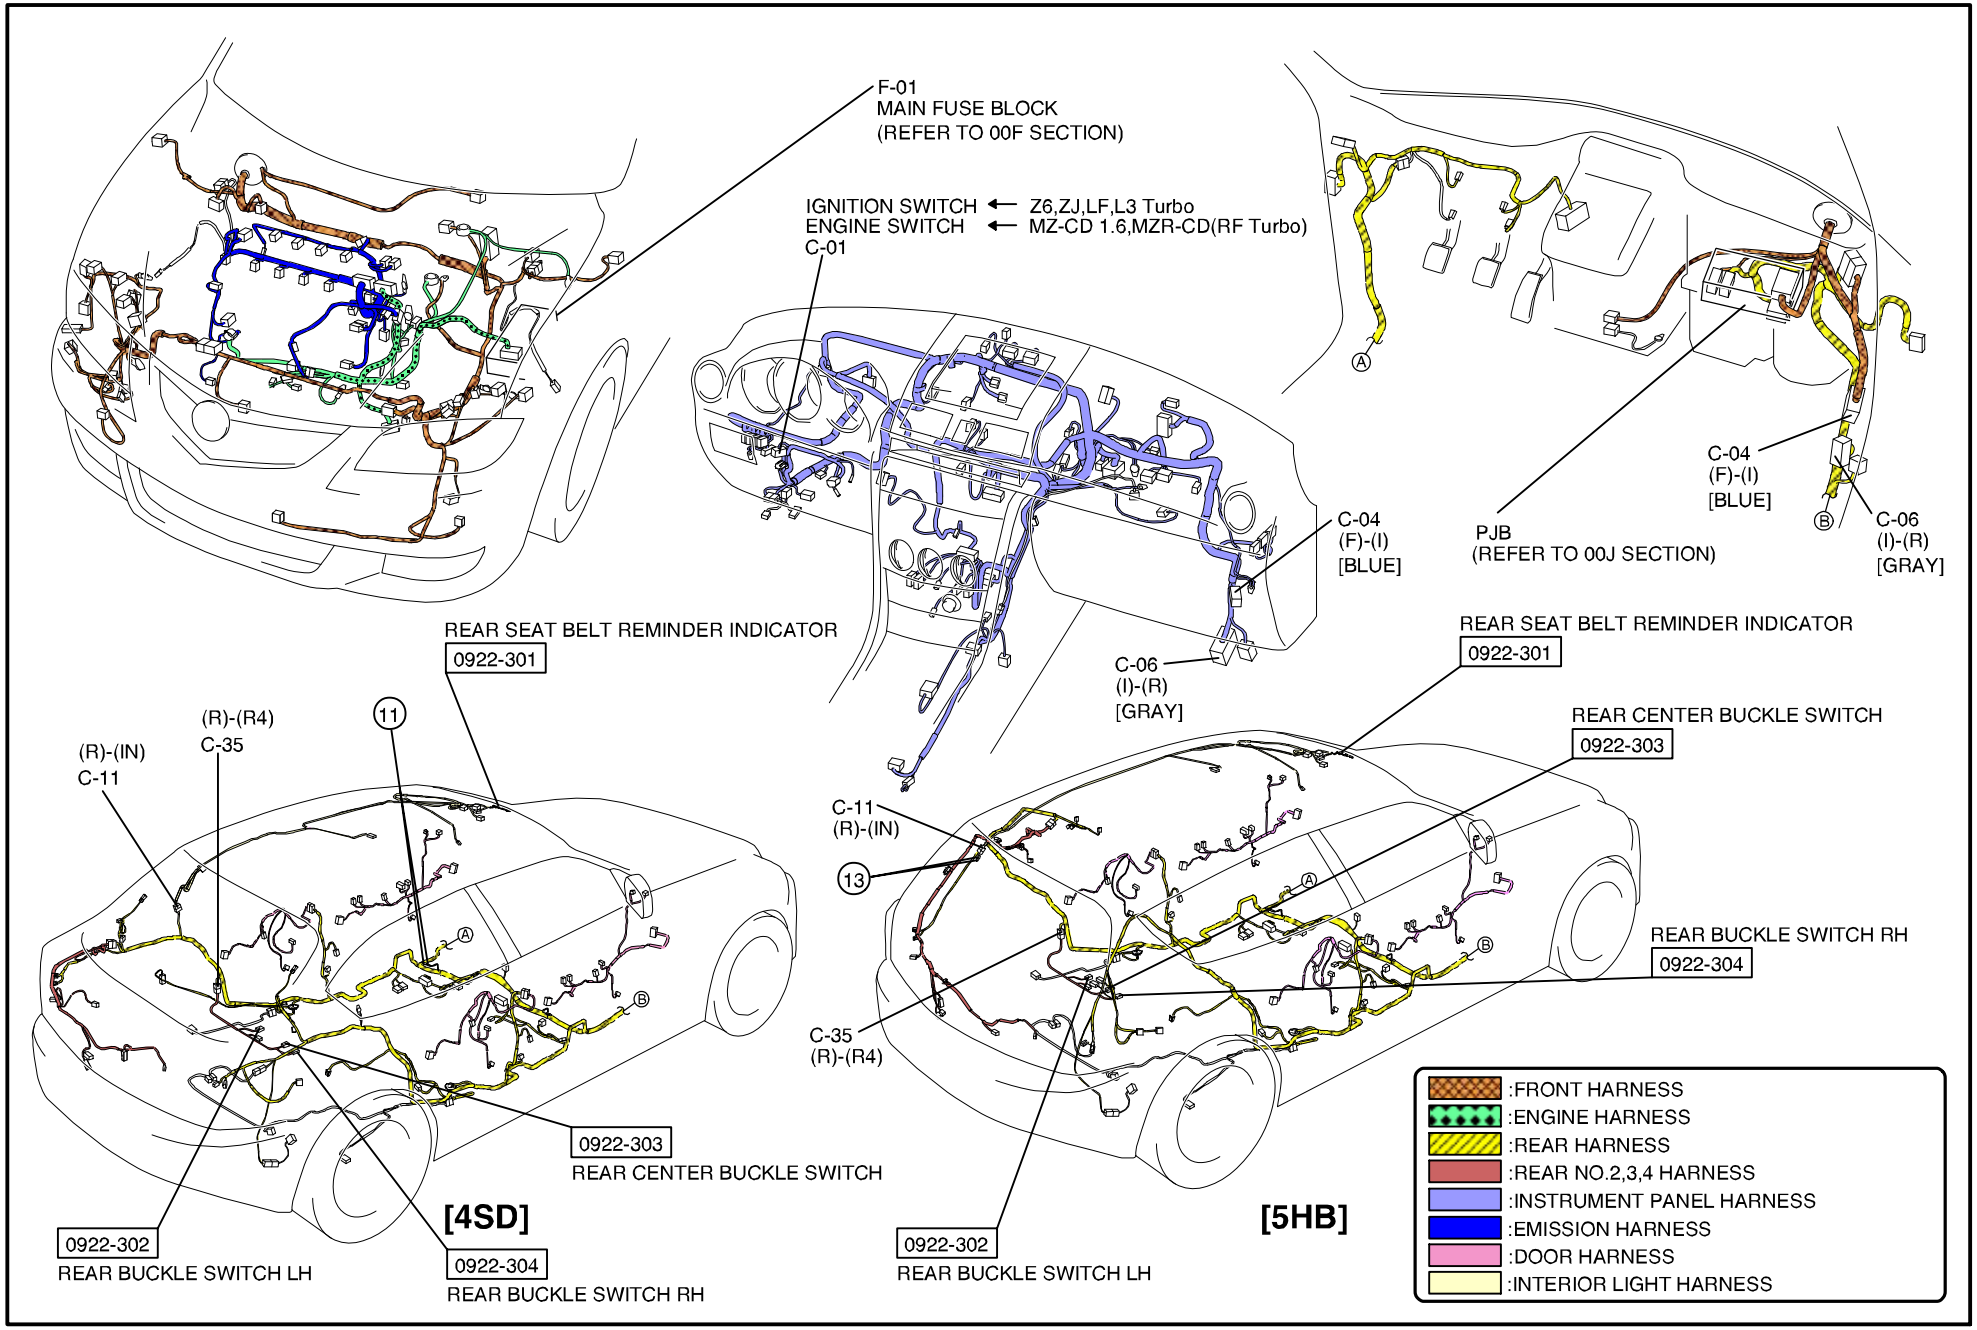

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,MZR-CD(RF Turbo)
C-01
C-04
(F)-(I)
[BLUE]
C-06
(I)-(R)
[GRAY]
PJB
(REFER TO 00J SECTION)
C-04
(F)-(I)
[BLUE]
C-06
(I)-(R)
[GRAY]
REAR SEAT BELT REMINDER INDICATOR
0922-301
(R)-(IN)
C-11
(R)-(R4)
C-35
11
0922-303
REAR CENTER BUCKLE SWITCH
[4SD]
0922-302
REAR BUCKLE SWITCH LH
0922-304
REAR BUCKLE SWITCH RH
REAR SEAT BELT REMINDER INDICATOR
0922-301
REAR CENTER BUCKLE SWITCH
0922-303
C-11
(R)-(IN)
13
REAR BUCKLE SWITCH RH
0922-304
C-35
(R)-(R4)
[5HB]
0922-302
REAR BUCKLE SWITCH LH
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:REAR NO.2,3,4 HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:DOOR HARNESS
:INTERIOR LIGHT HARNESS

C-01
IGNITION SWITCH/ ⟵ Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ⟵ MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

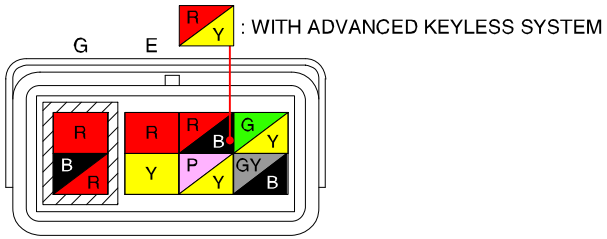


C-35
REAR HARNESS-REAR NO.4 HARNESS

REAR HARNESS

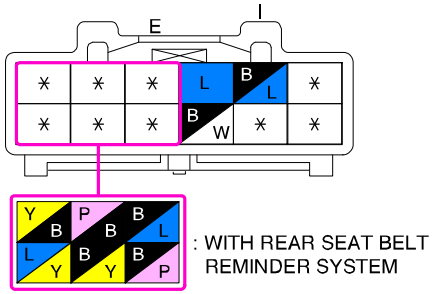


REAR NO.4 HARNESS

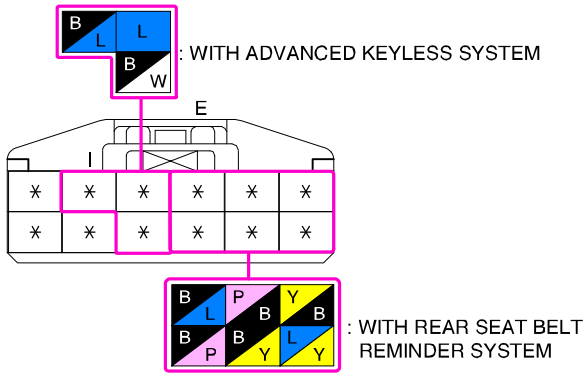


C-11
REAR HARNESS-INTERIOR LIGHT HARNESS

REAR HARNESS

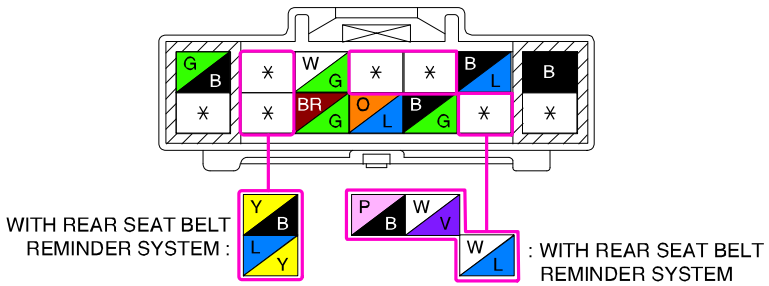


INTERIOR LIGHT HARNESS

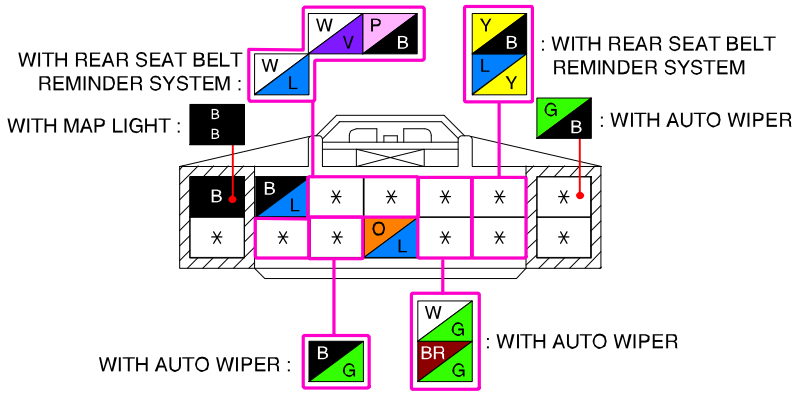


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS

FRONT HARNESS

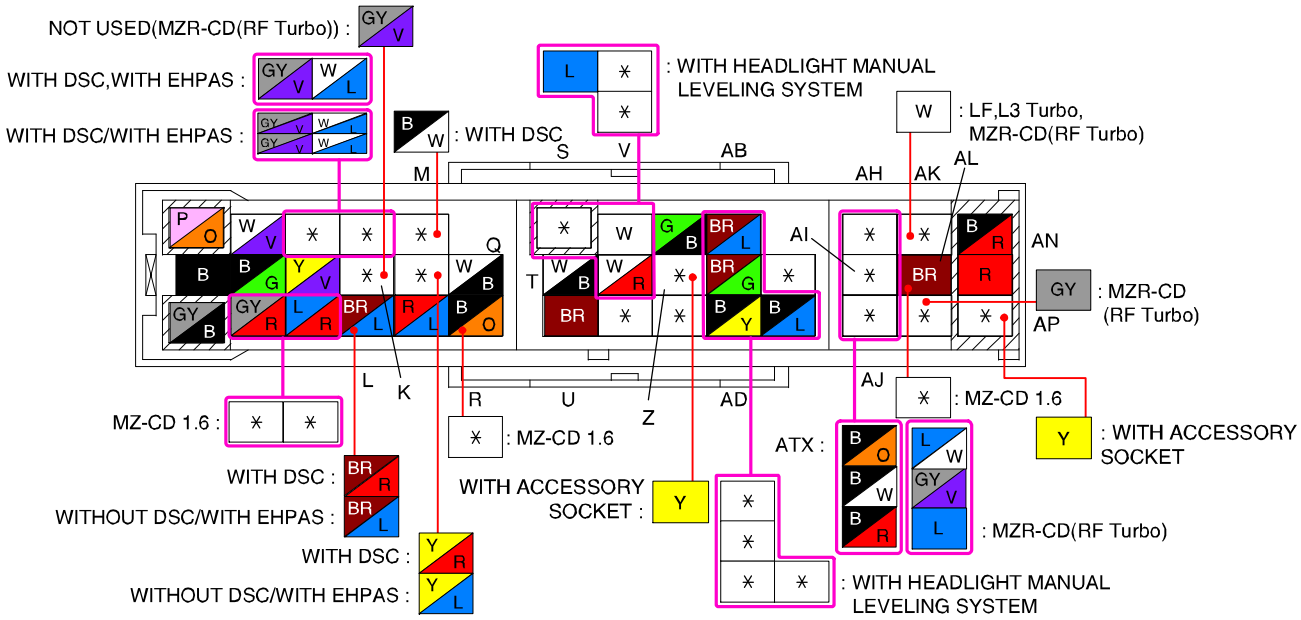


INSTRUMENT PANEL HARNESS

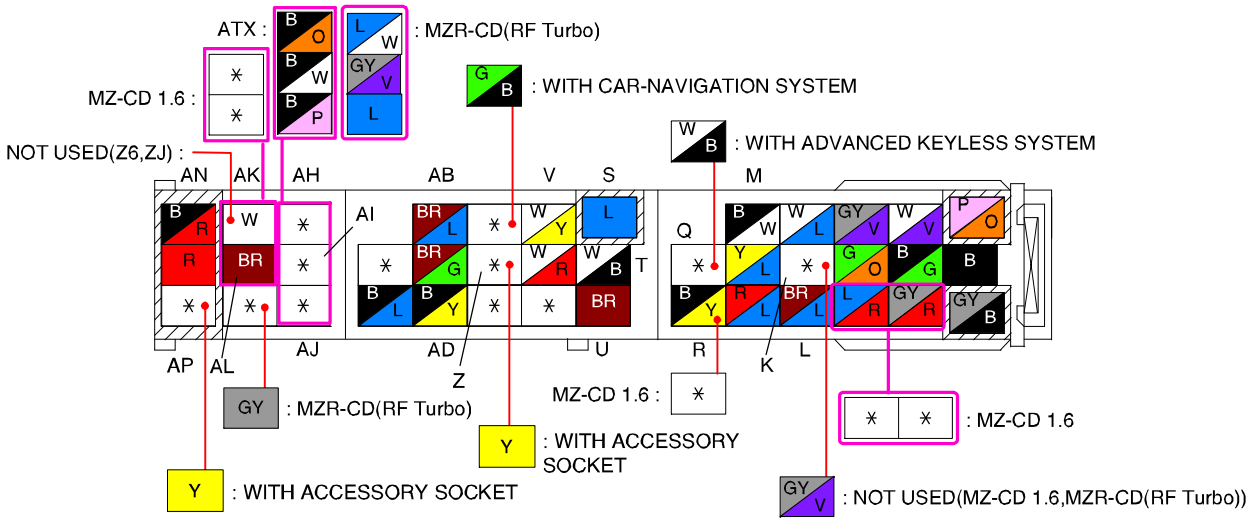



C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

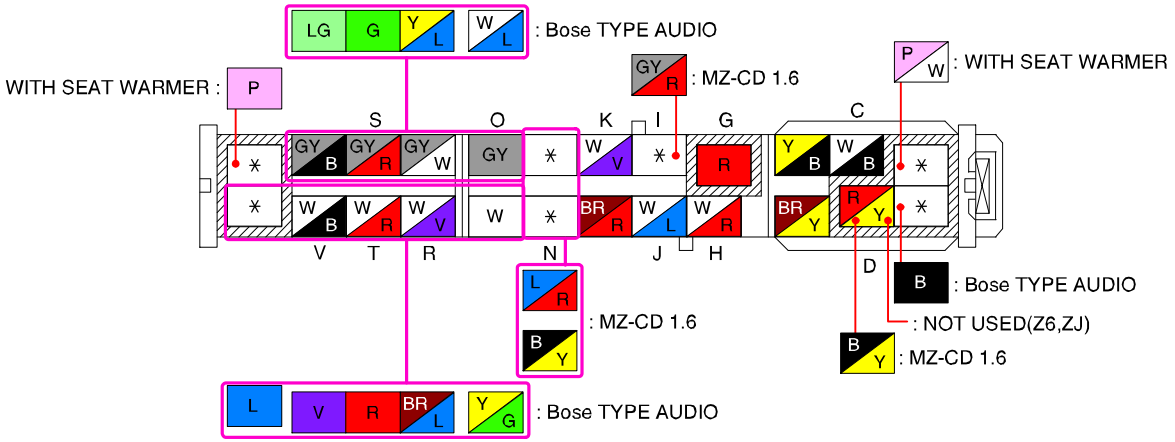


REAR HARNESS

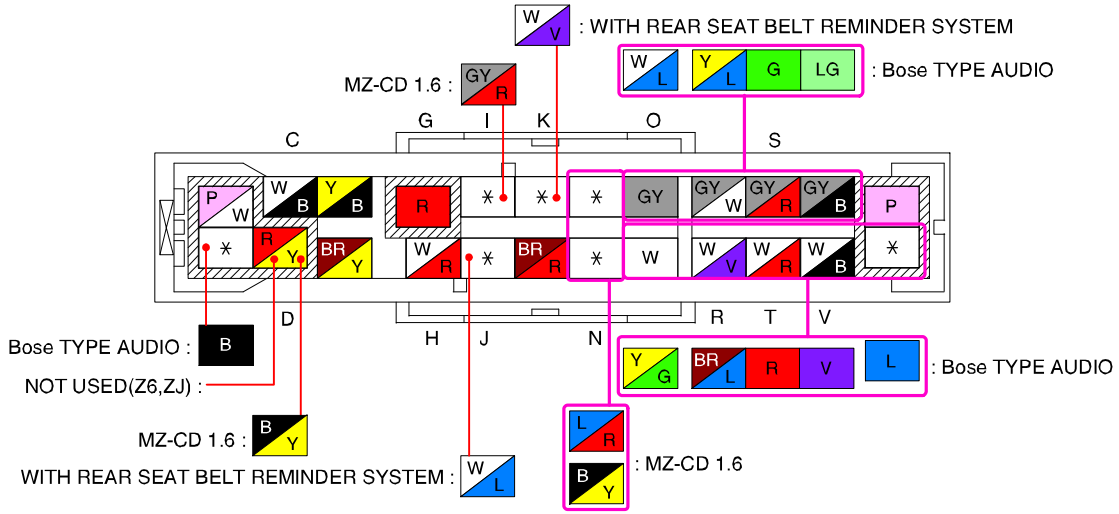


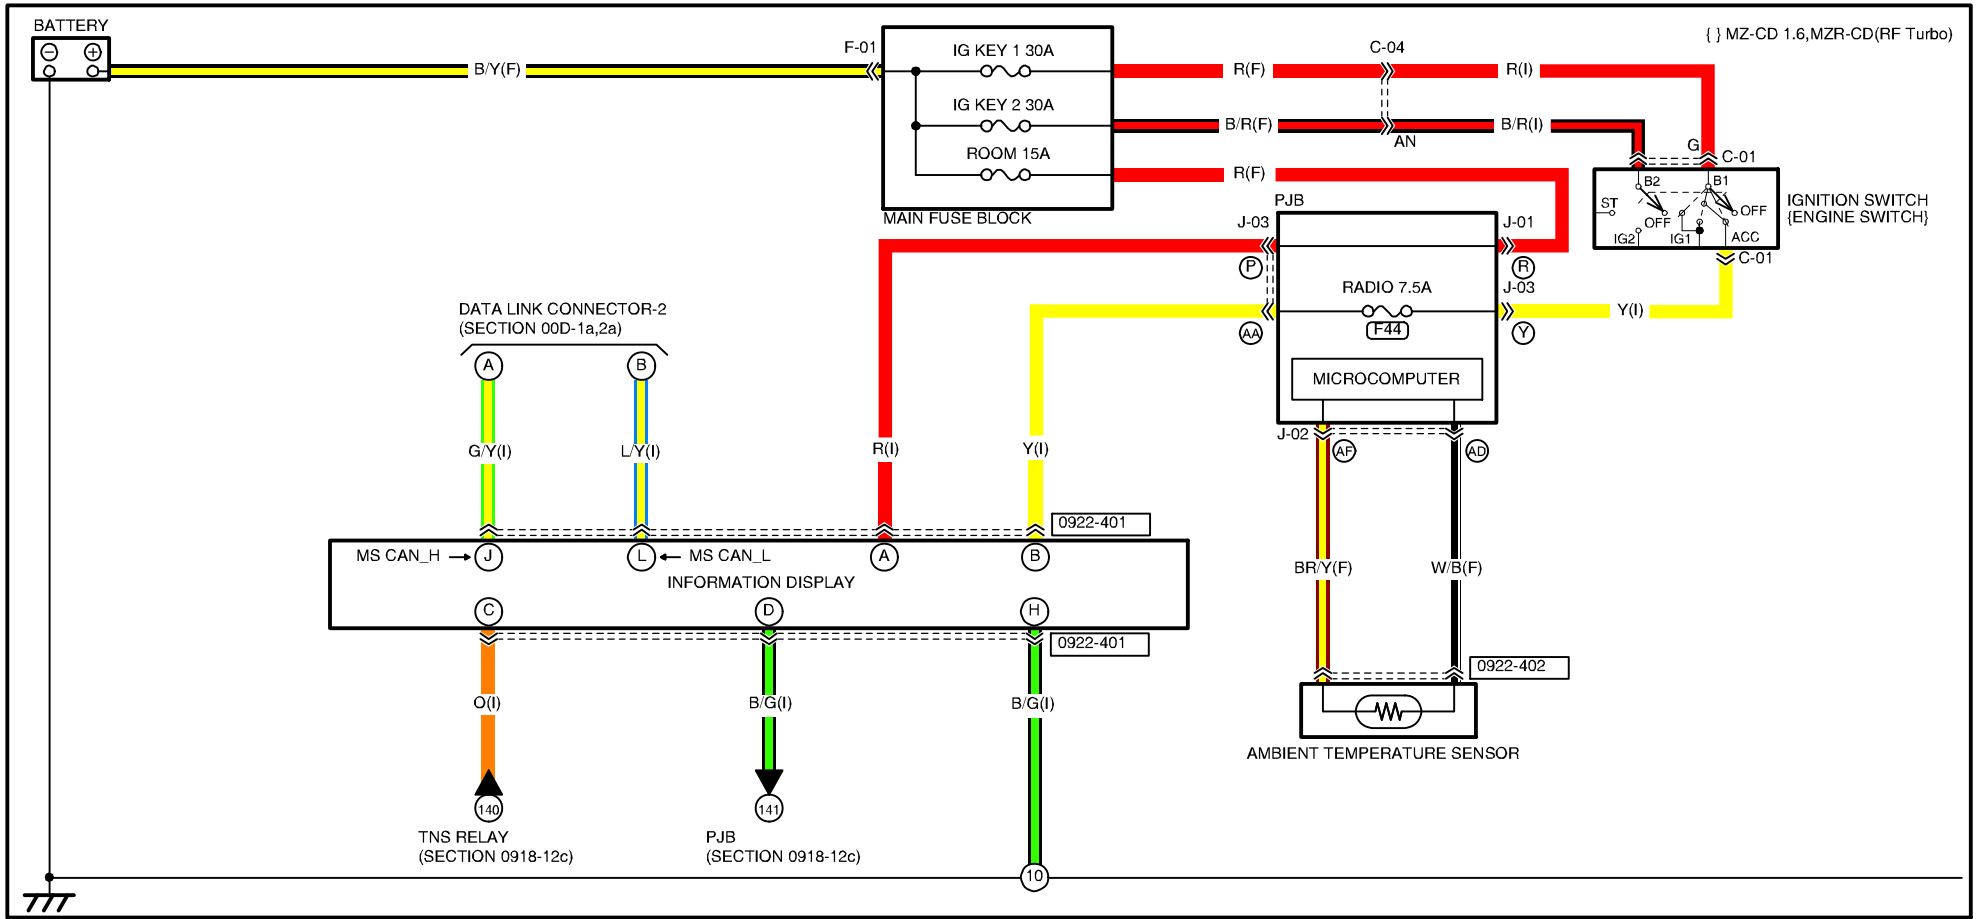


0922-401
INFORMATION DISPLAY

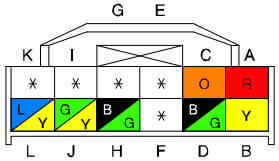


0922-402
AMBIENT TEMPERATURE SENSOR



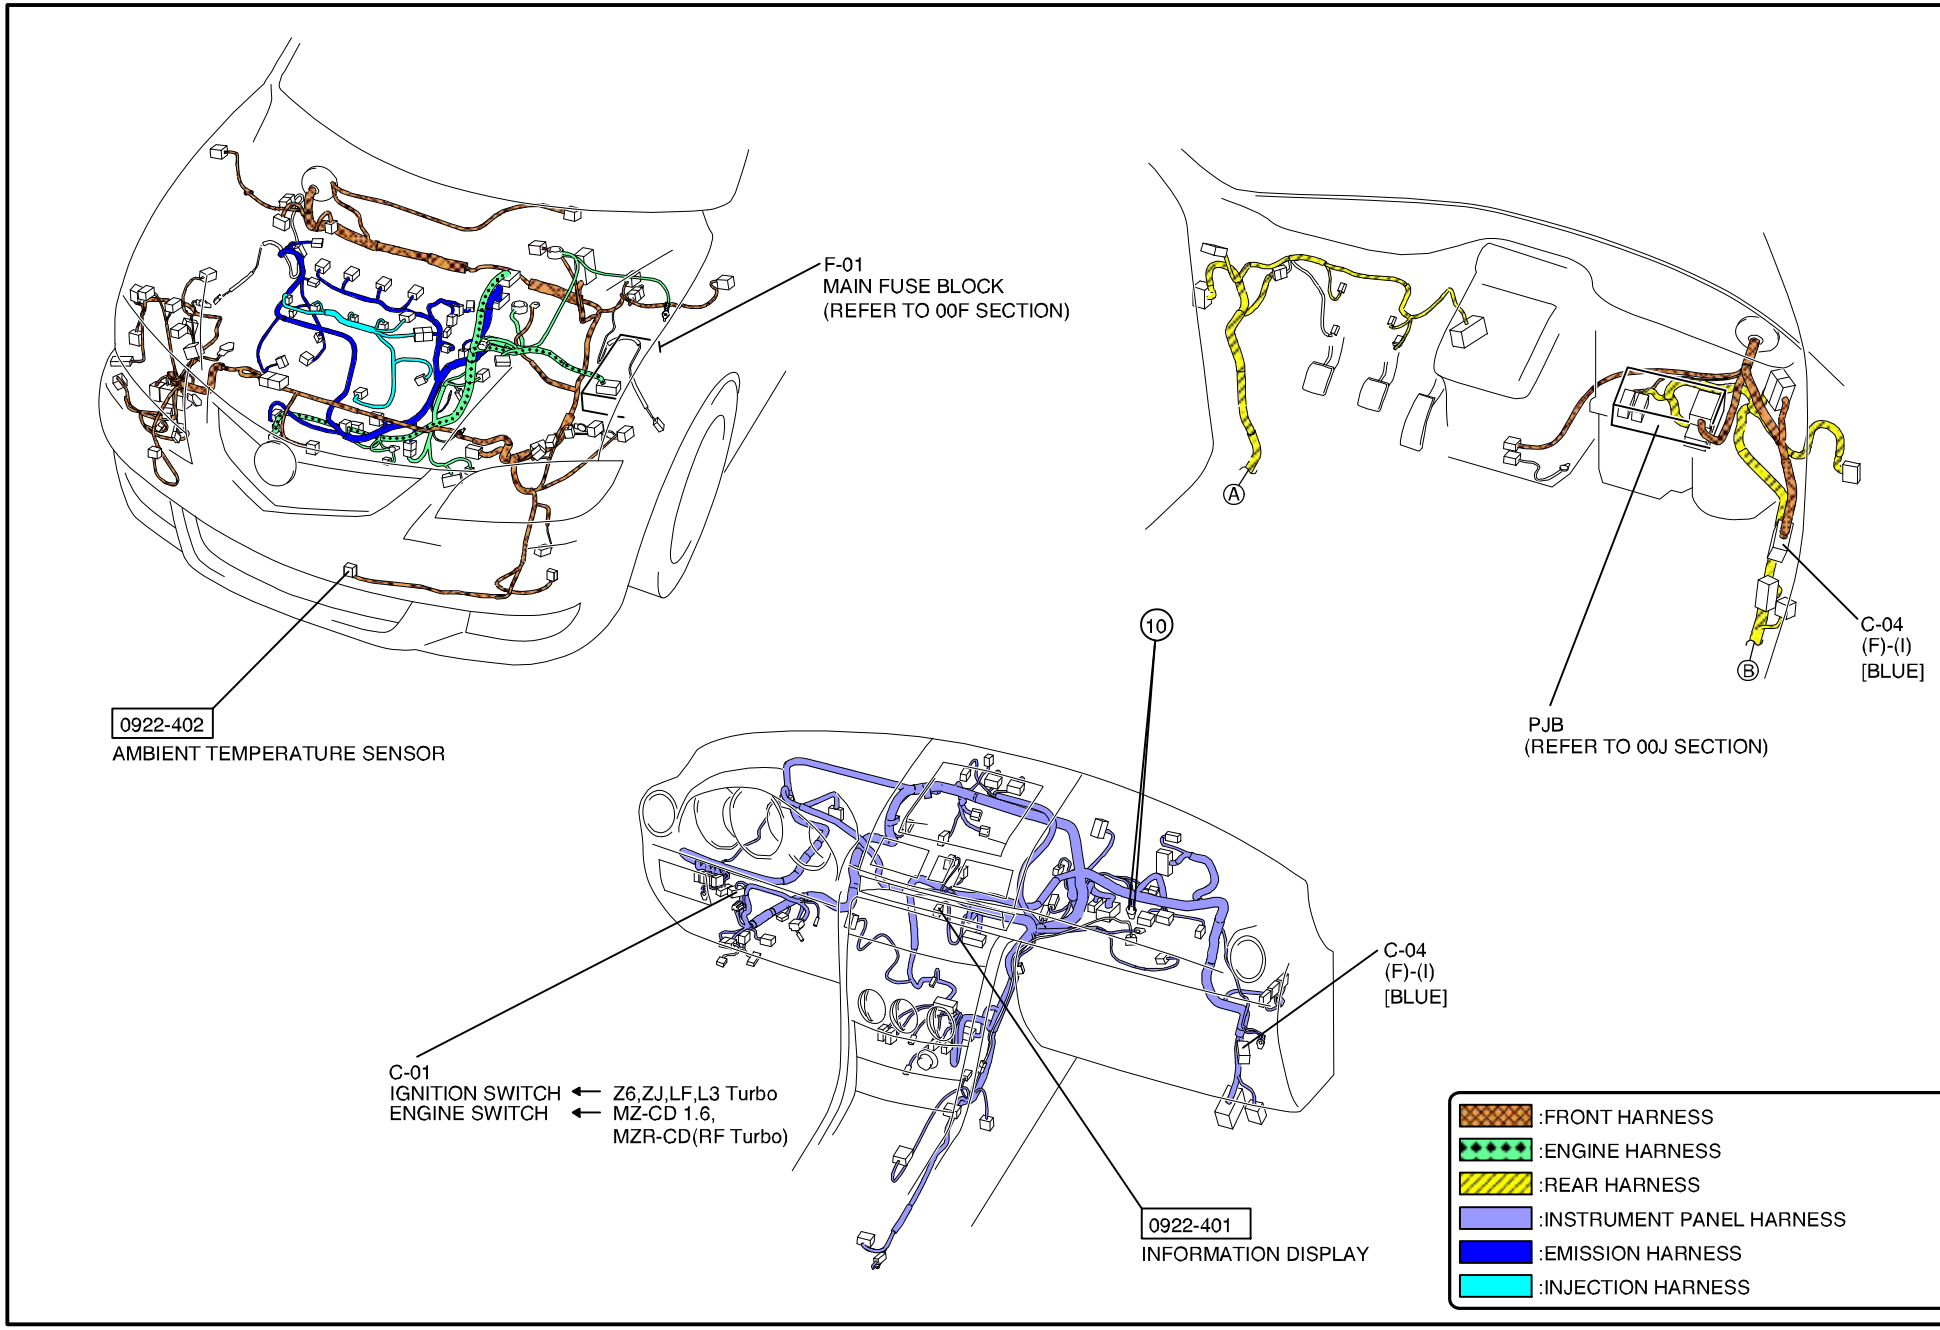

F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
0922-402
AMBIENT TEMPERATURE SENSOR
Ⓐ
Ⓑ
C-04
(F)-(I)
[BLUE]
PJB
(REFER TO 00J SECTION)
10
C-01
IGNITION SWITCH ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH ← MZ-CD 1.6,
MZR-CD(RF Turbo)
C-04
(F)-(I)
[BLUE]
0922-401
INFORMATION DISPLAY
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS
:INJECTION HARNESS

C-01
IGNITION SWITCH/ ← Z6,ZJ,LF,L3 Turbo
ENGINE SWITCH/ ← MZ-CD 1.6,MZR-CD(RF Turbo)
KEY REMINDER SWITCH

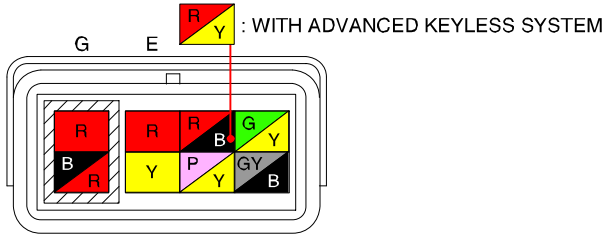


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

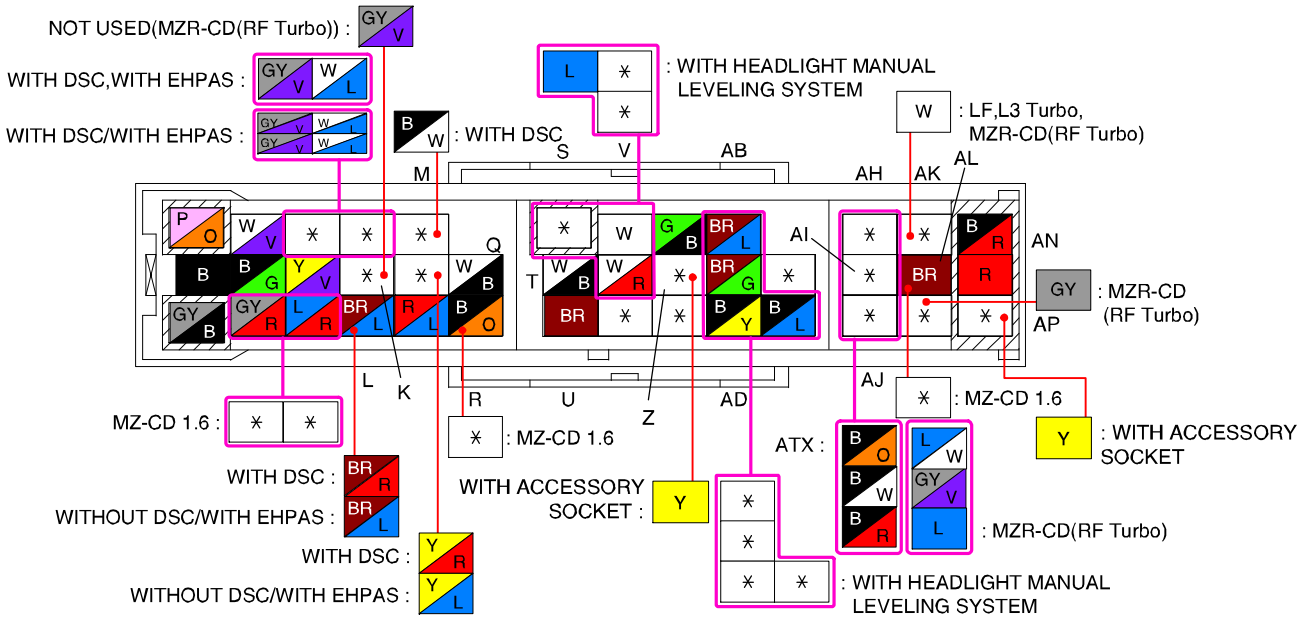


INSTRUMENT PANEL HARNESS

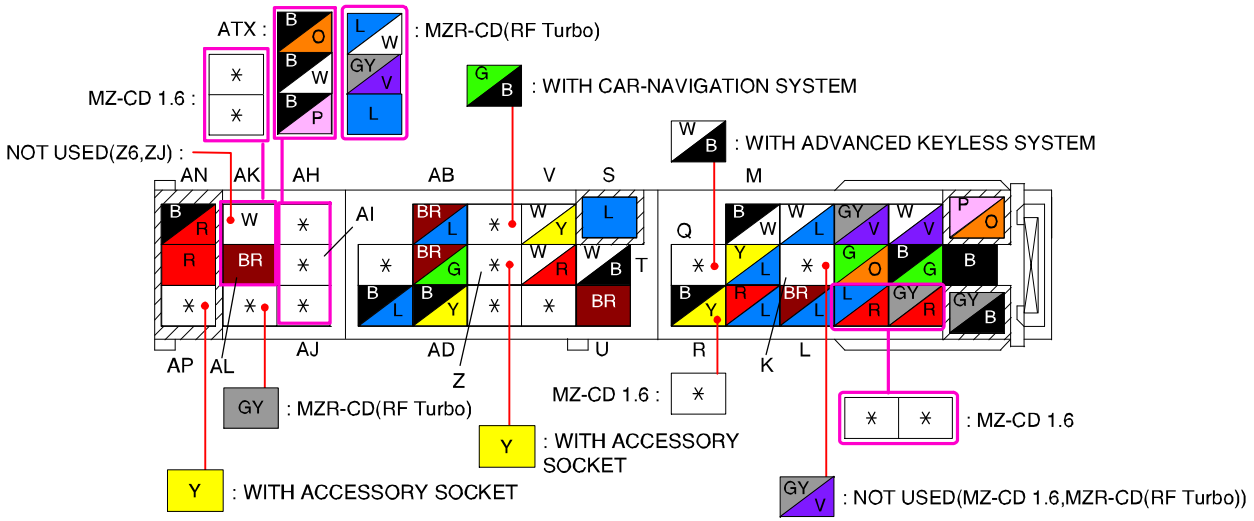

DATA LINK CONNECTOR (EXCEPT MZ-CD 1.6)

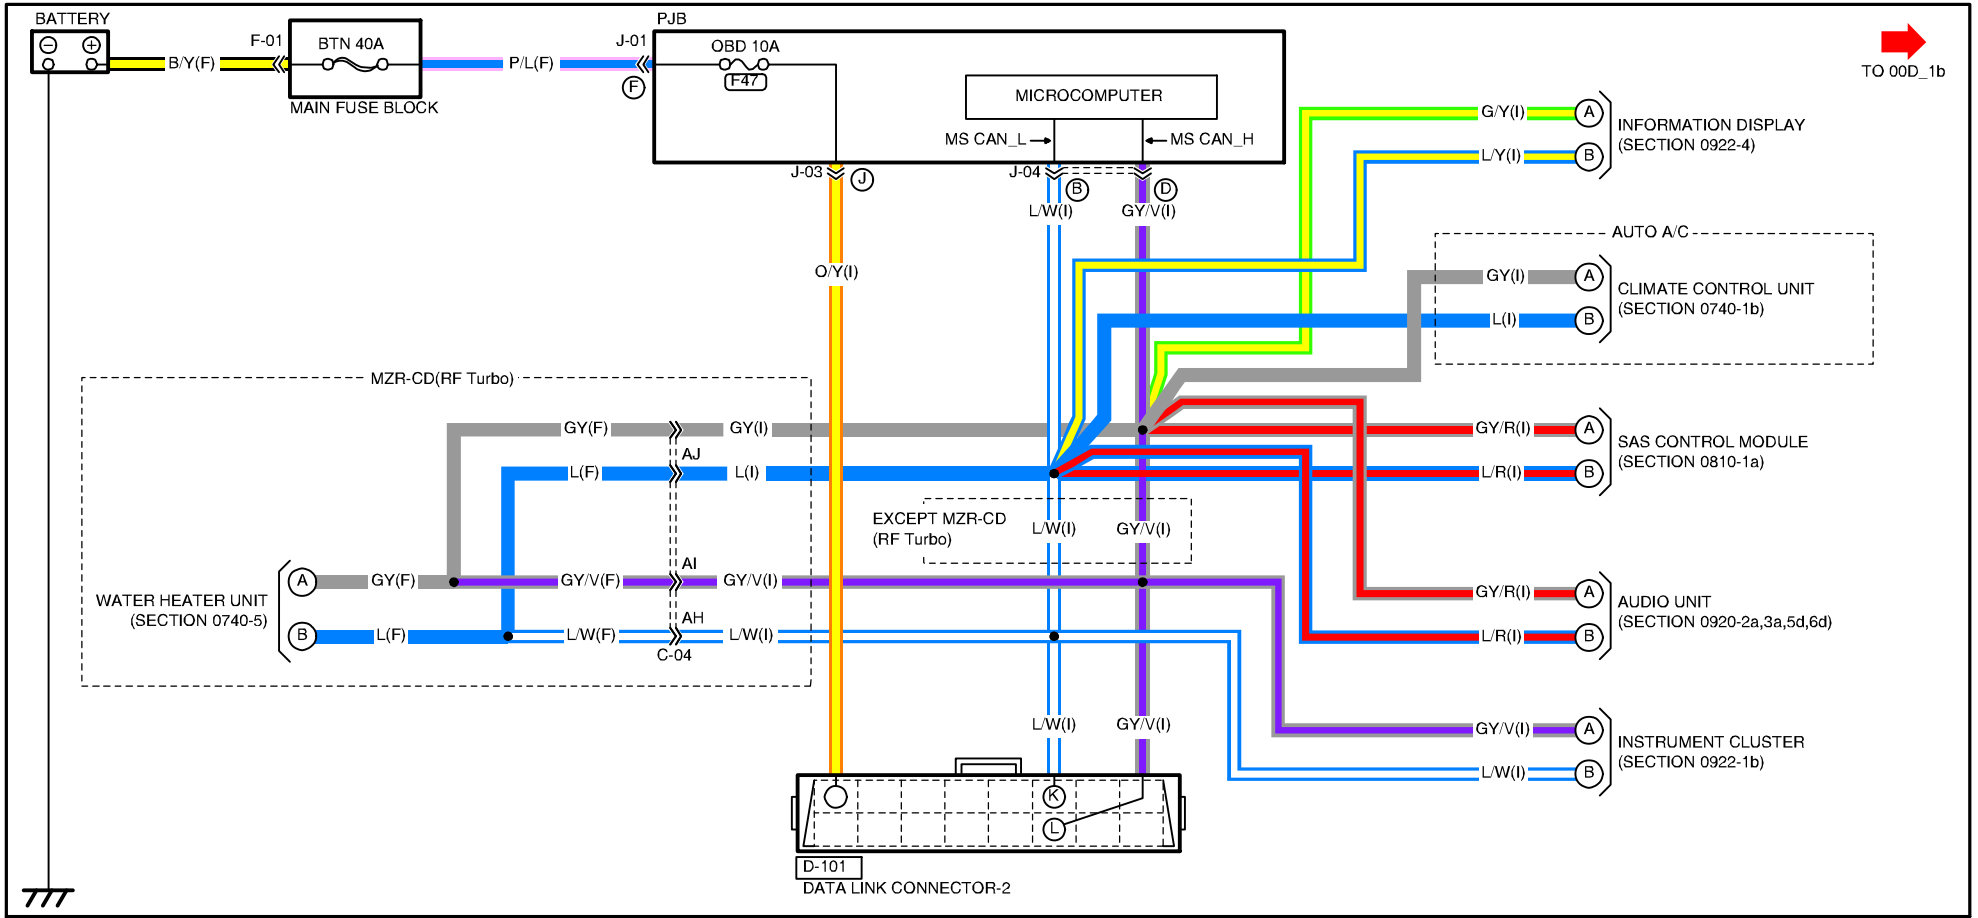


D-101
DATA LINK CONNECTOR-2




NOTE:SEEN FROM TERMINAL SIDE

DATA LINK CONNECTOR (EXCEPT MZ-CD 1.6)

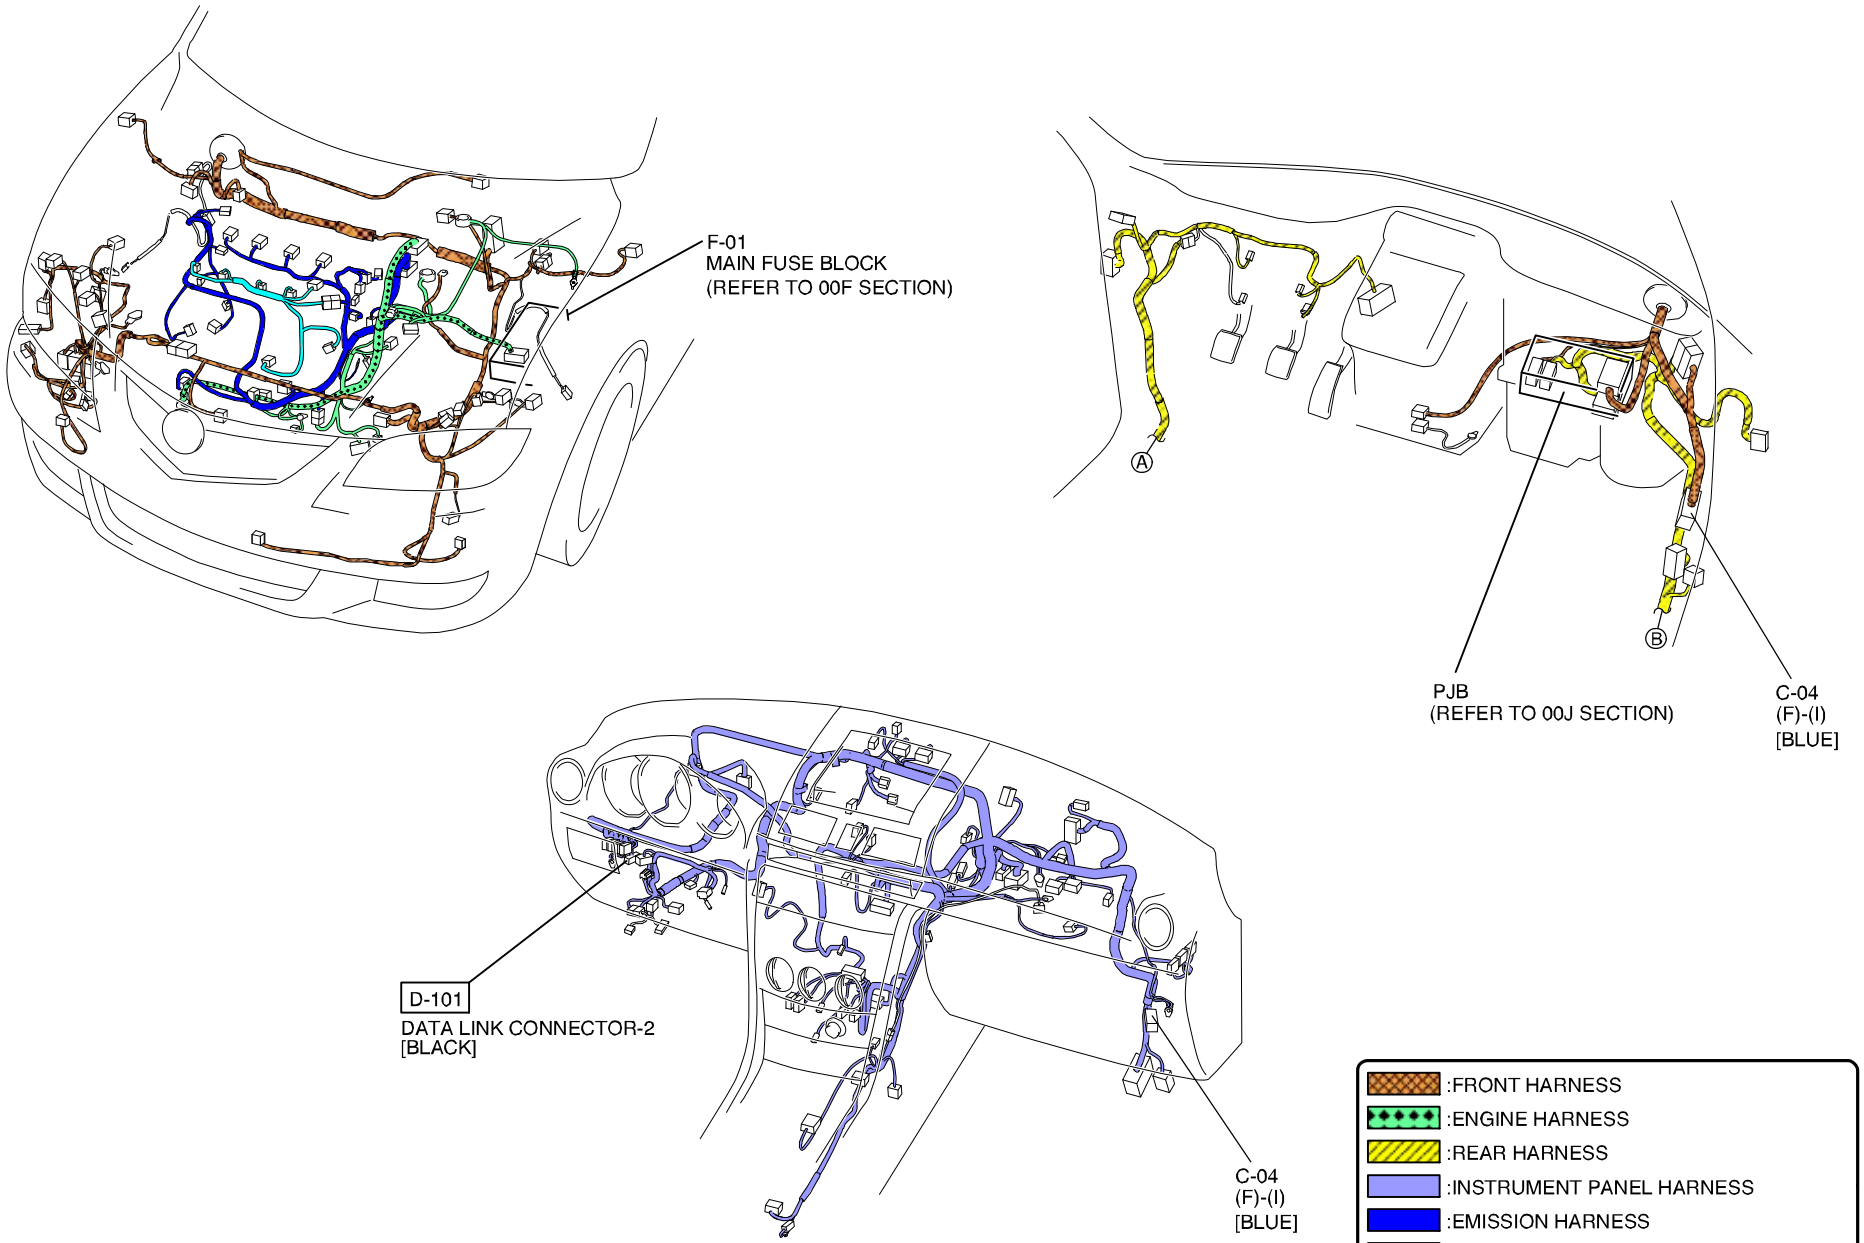


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

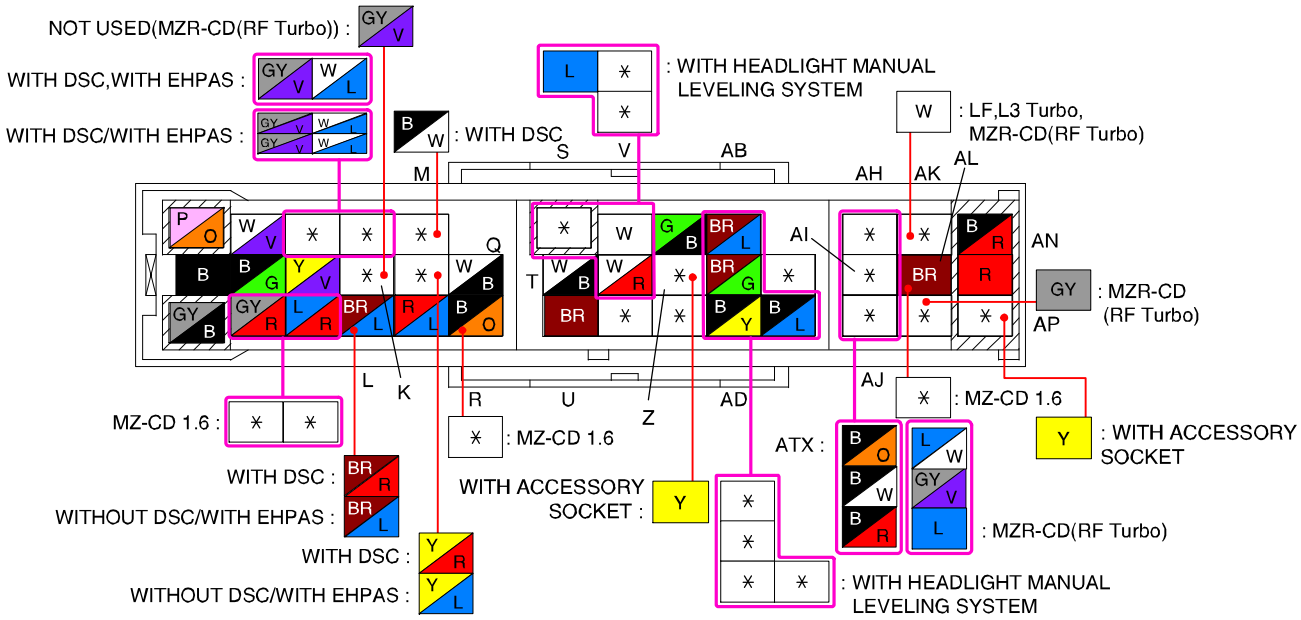


INSTRUMENT PANEL HARNESS

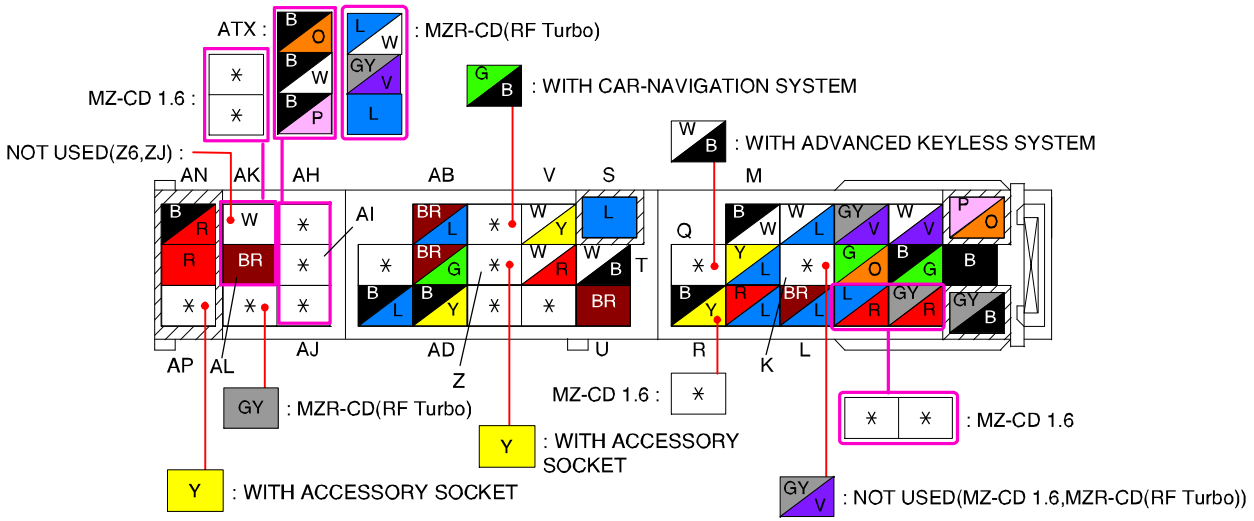

DATA LINK CONNECTOR (EXCEPT MZ-CD 1.6)

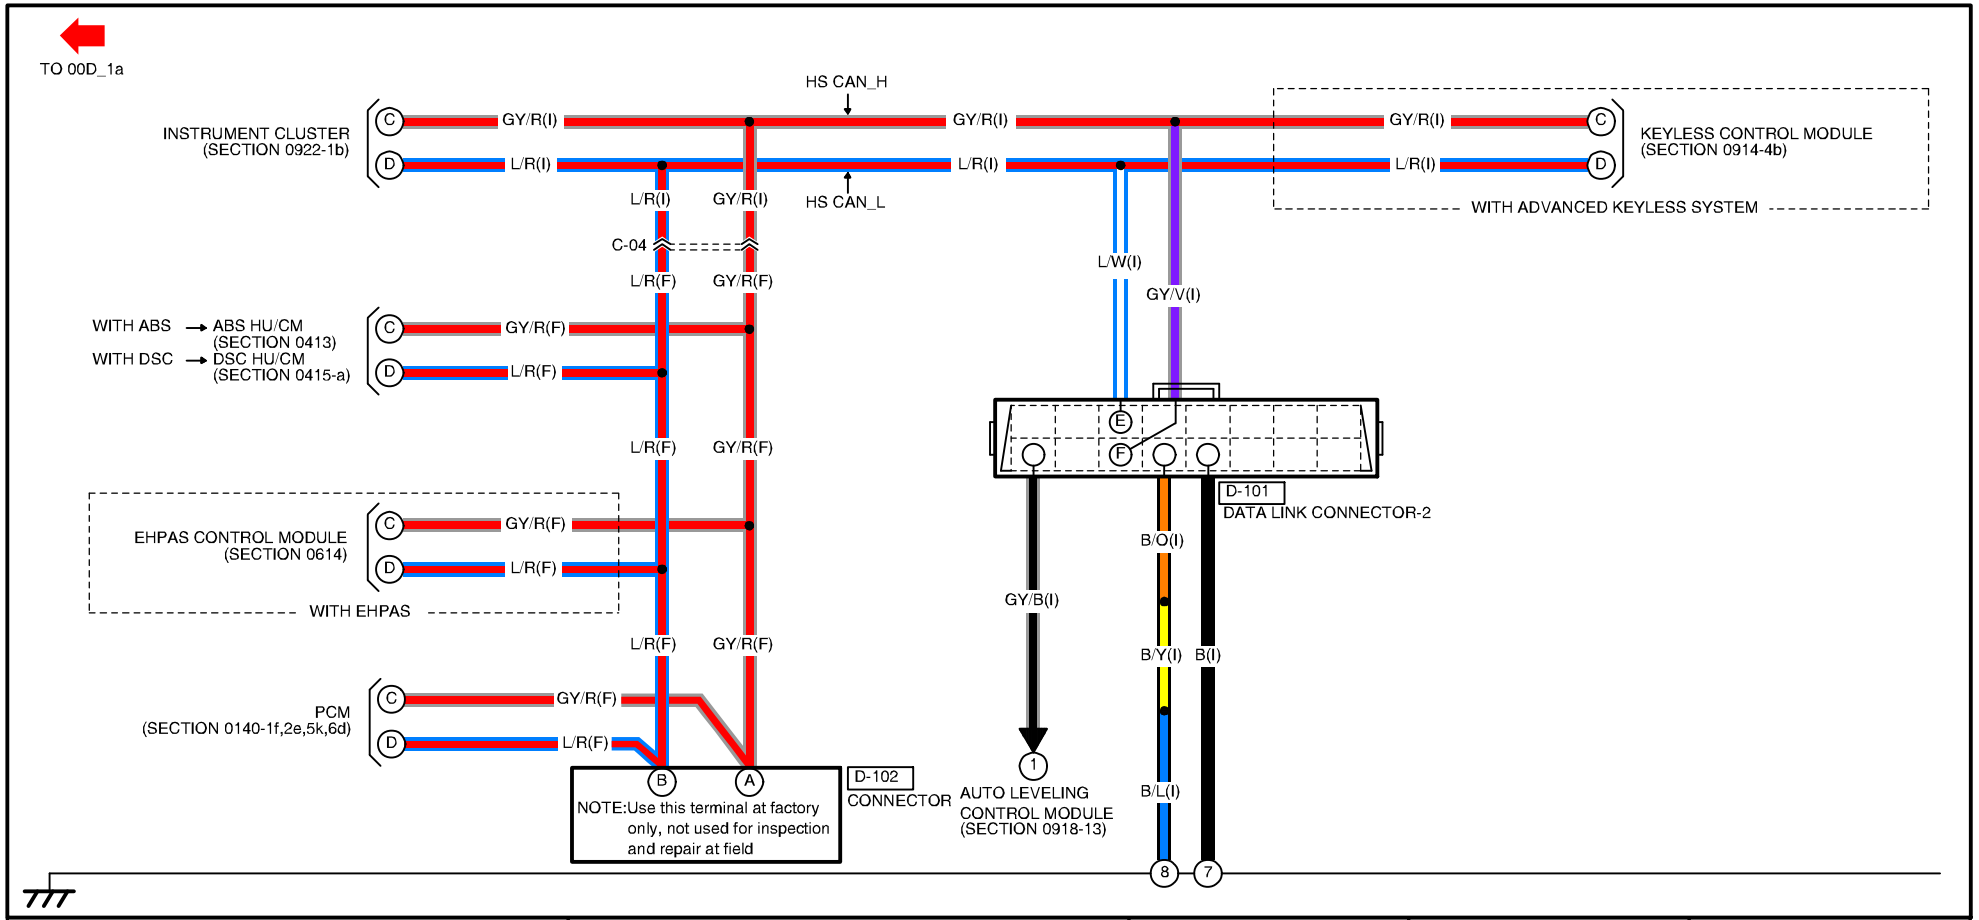


D-101
DATA LINK CONNECTOR-2



NOTE:SEEN FROM TERMINAL SIDE


D-102
CONNECTOR

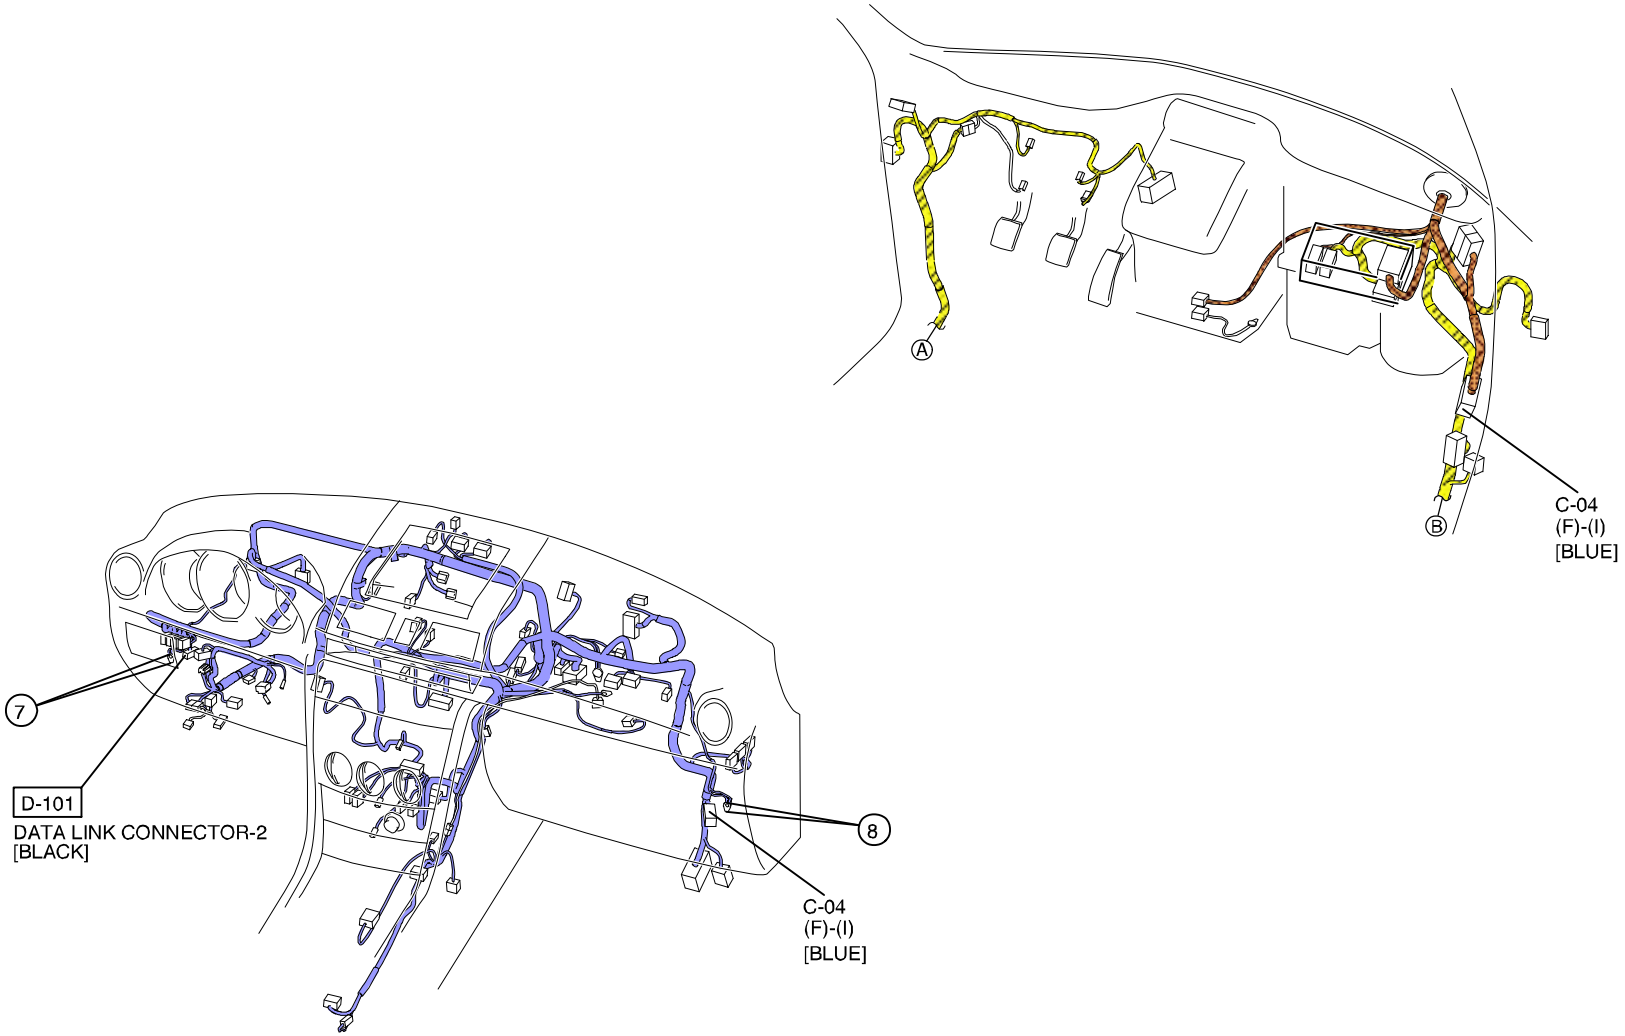



A
B
C-04
(F)-(I)
[BLUE]
7
D-101
DATA LINK CONNECTOR-2
[BLACK]
8
C-04
(F)-(I)
[BLUE]
:FRONT HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS

C-02
FRONT HARNESS-ENGINE HARNESS

FRONT HARNESS

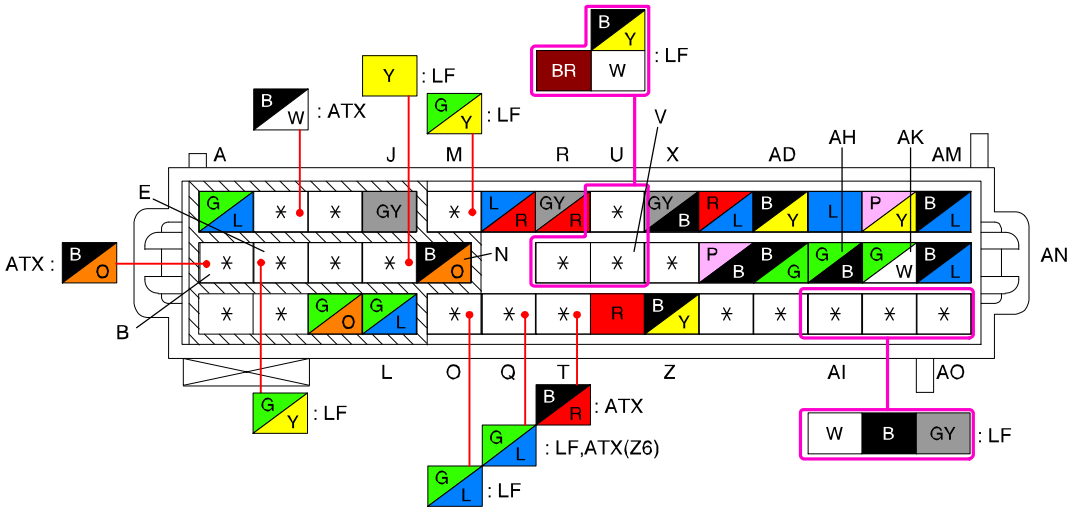


ENGINE HARNESS

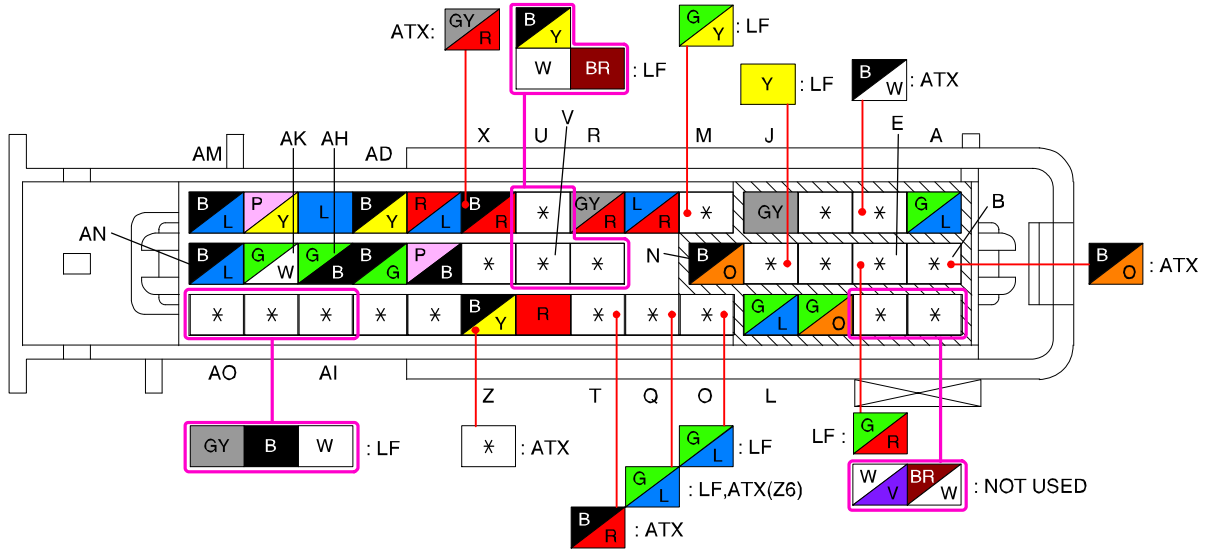


C-03
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

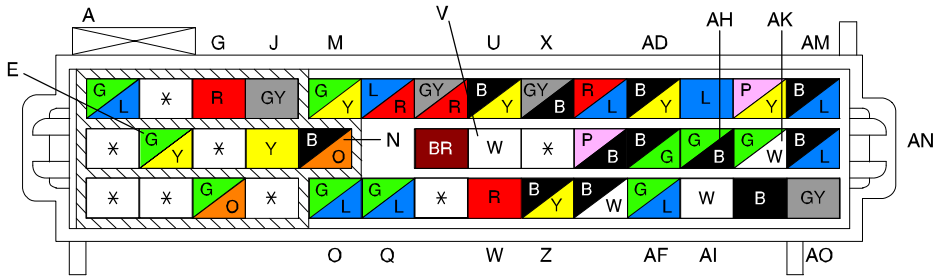


EMISSION HARNESS

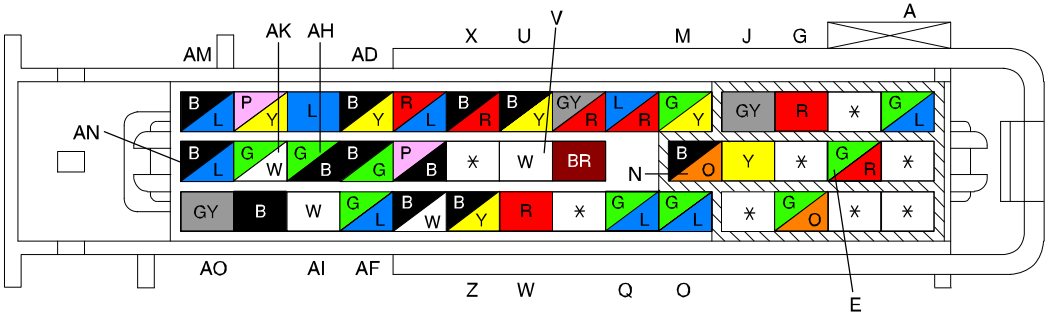


C-04
FRONT HARNESS-INSTRUMENT PANEL HARNESS


FRONT HARNESS

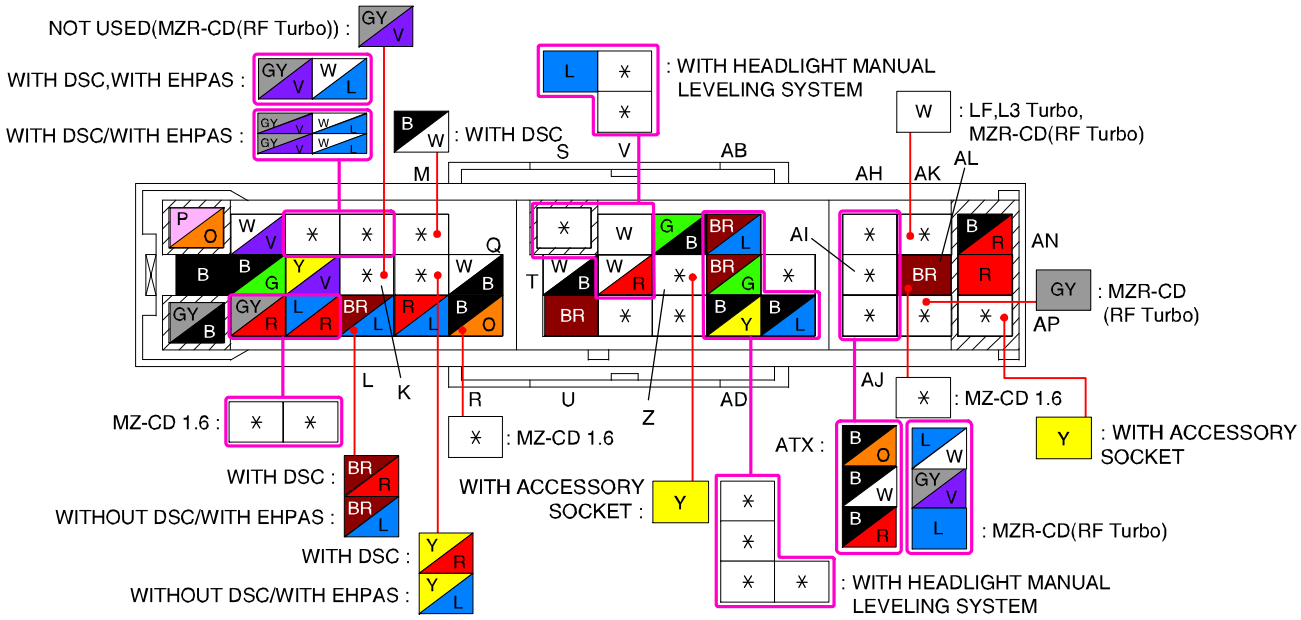


INSTRUMENT PANEL HARNESS

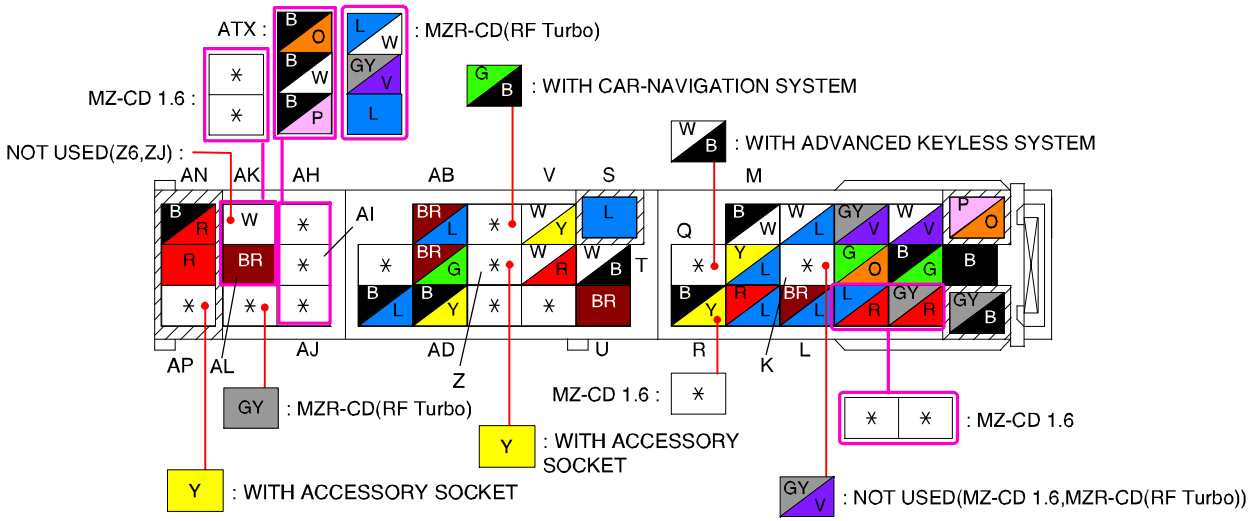


DATA LINK CONNECTOR (MZ-CD 1.6)

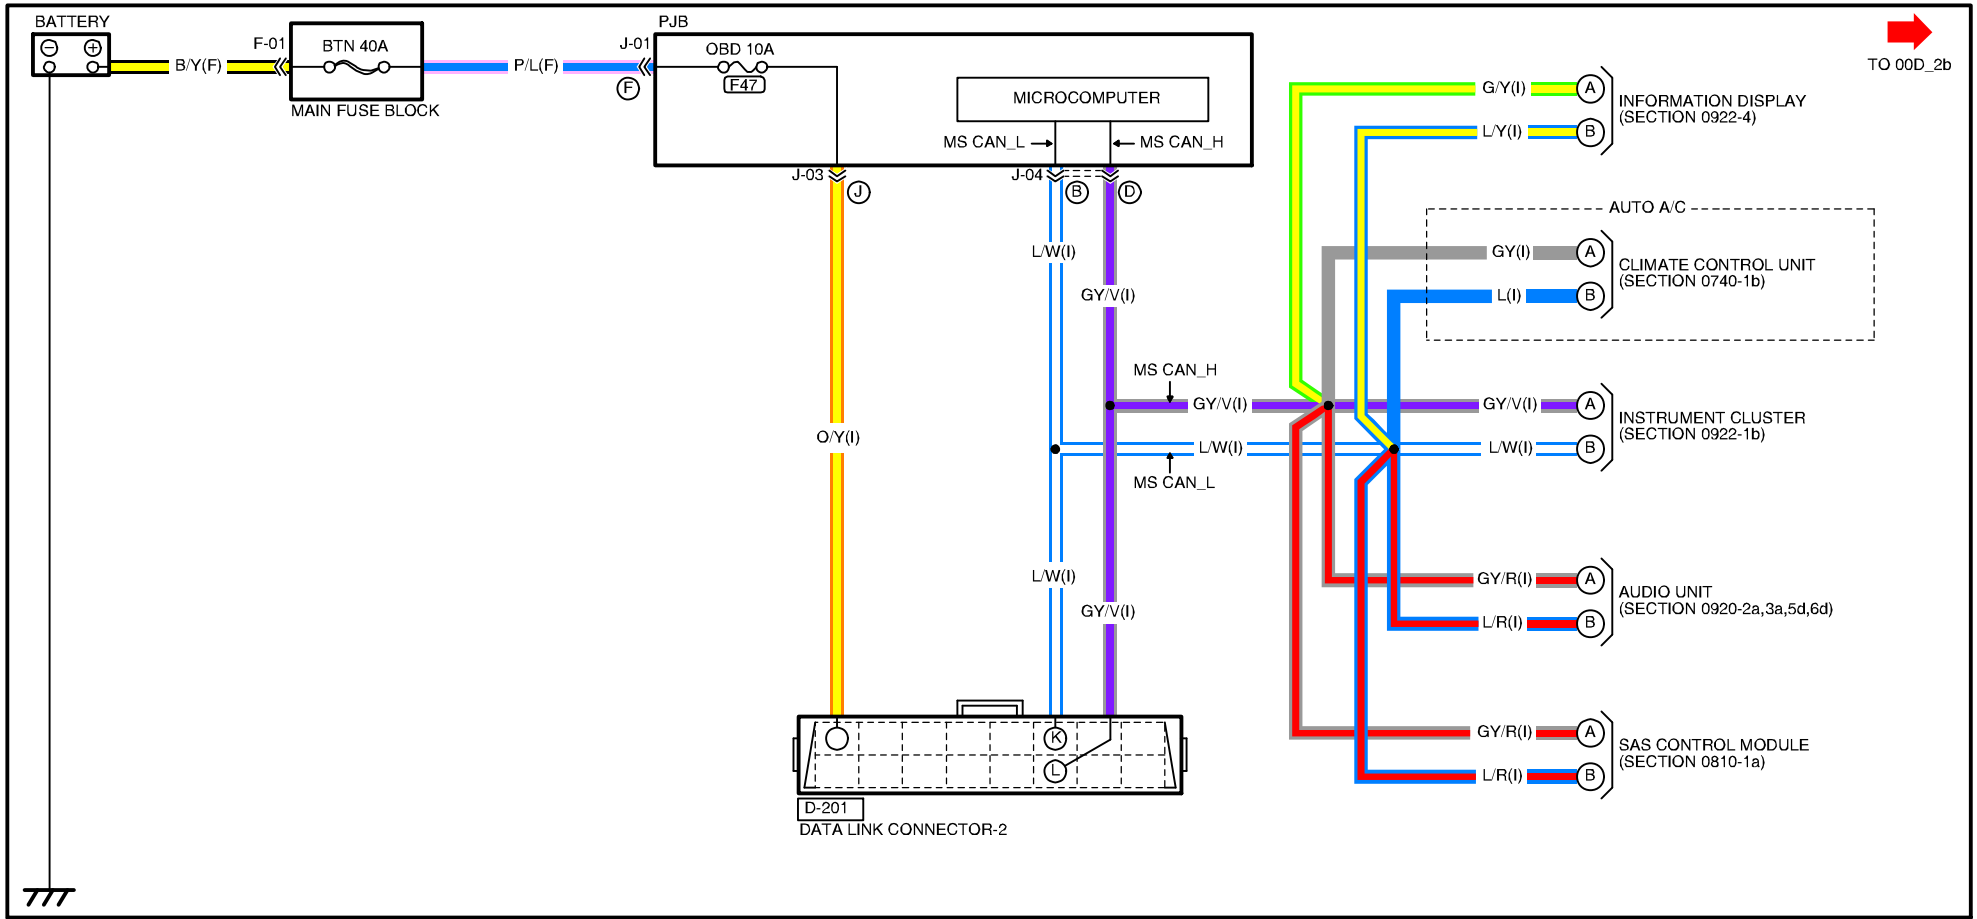


D-201
DATA LINK CONNECTOR-2




NOTE:SEEN FROM TERMINAL SIDE

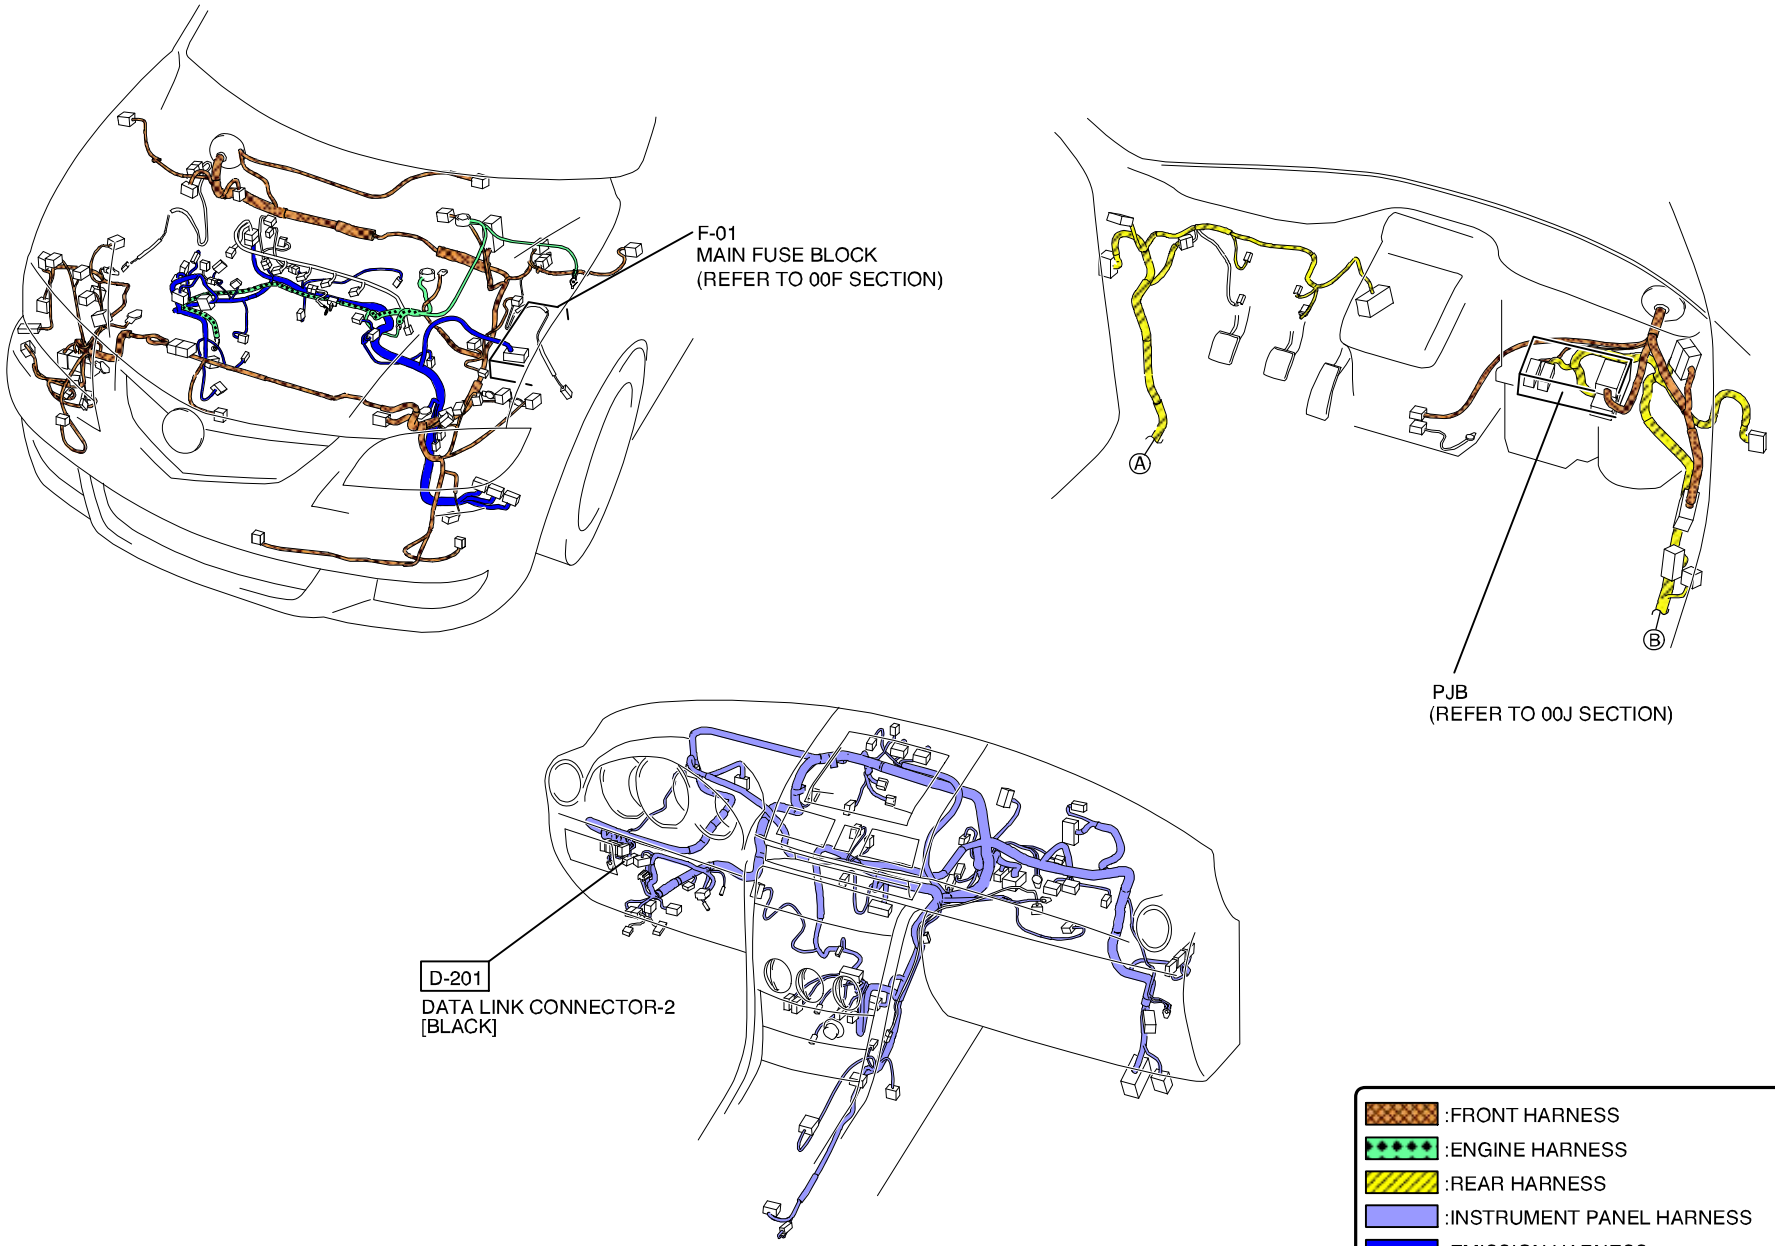
F-01
MAIN FUSE BLOCK
(REFER TO 00F SECTION)
Ⓐ
Ⓑ
PJB
(REFER TO 00J SECTION)
D-201
DATA LINK CONNECTOR-2
[BLACK]
:FRONT HARNESS
:ENGINE HARNESS
:REAR HARNESS
:INSTRUMENT PANEL HARNESS
:EMISSION HARNESS

DATA LINK CONNECTOR (MZ-CD 1.6)

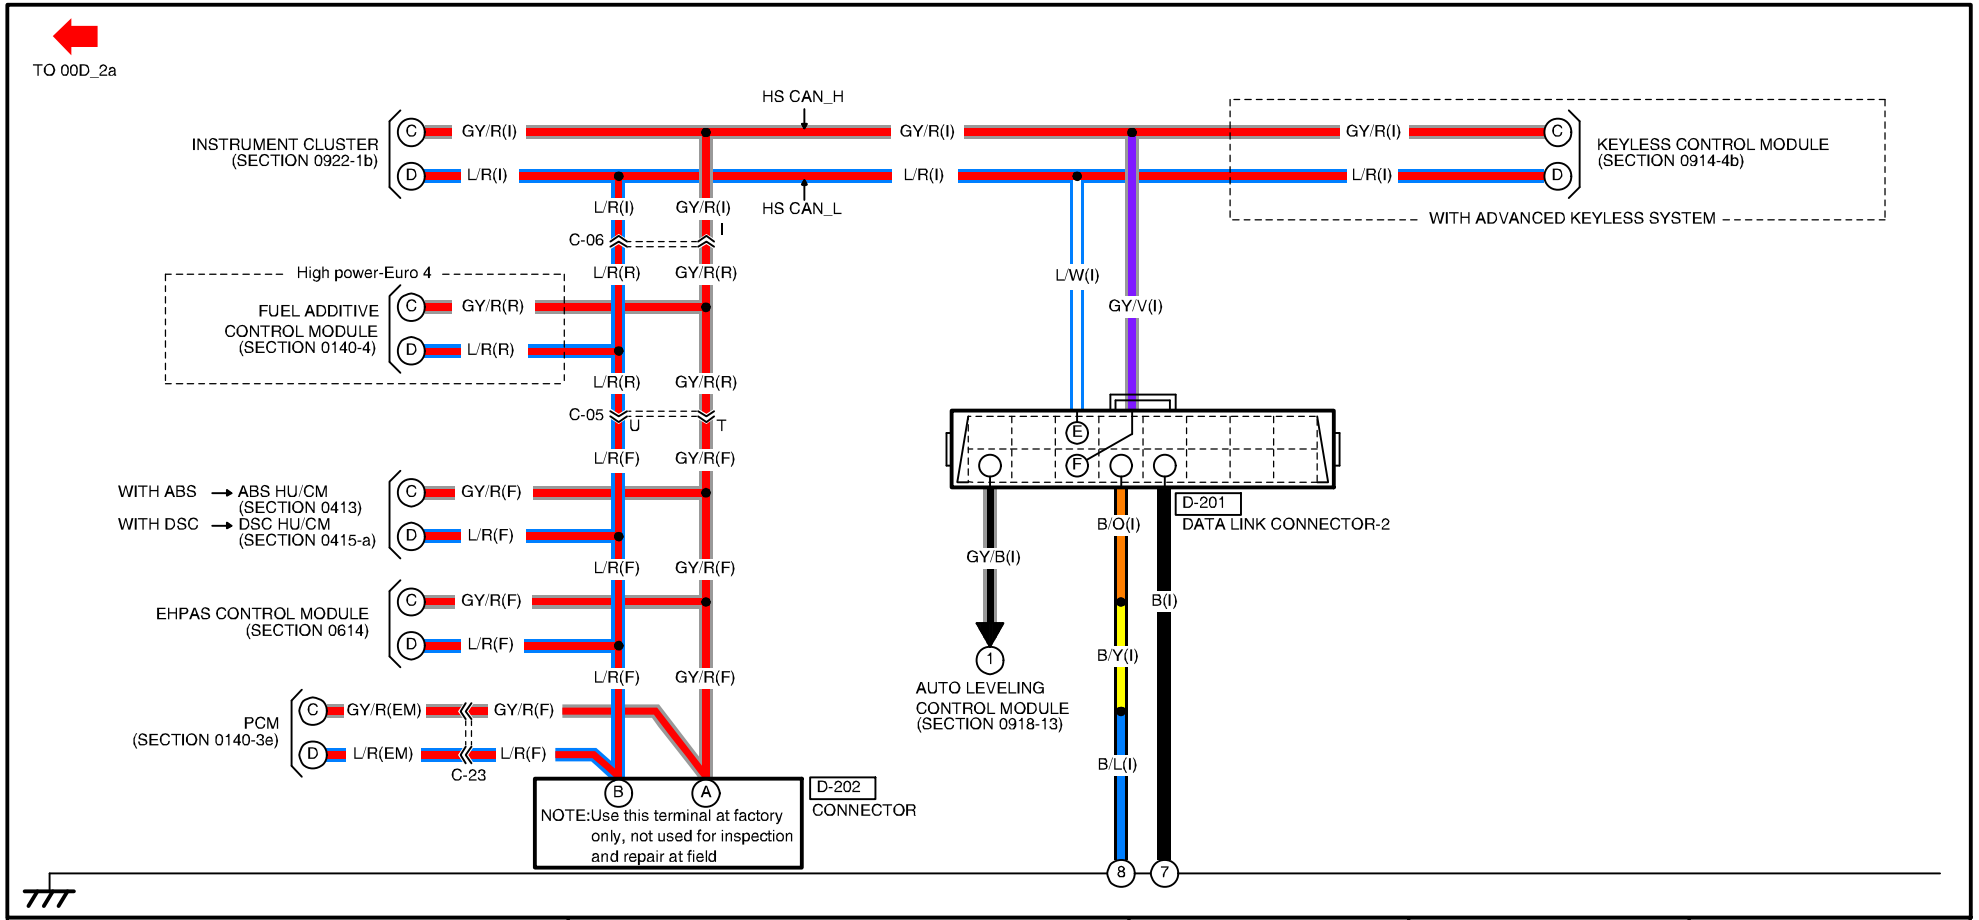

D-201
DATA LINK CONNECTOR-2




NOTE:SEEN FROM TERMINAL SIDE

D-202
CONNECTOR




DATA LINK CONNECTOR (MZ-CD 1.6)

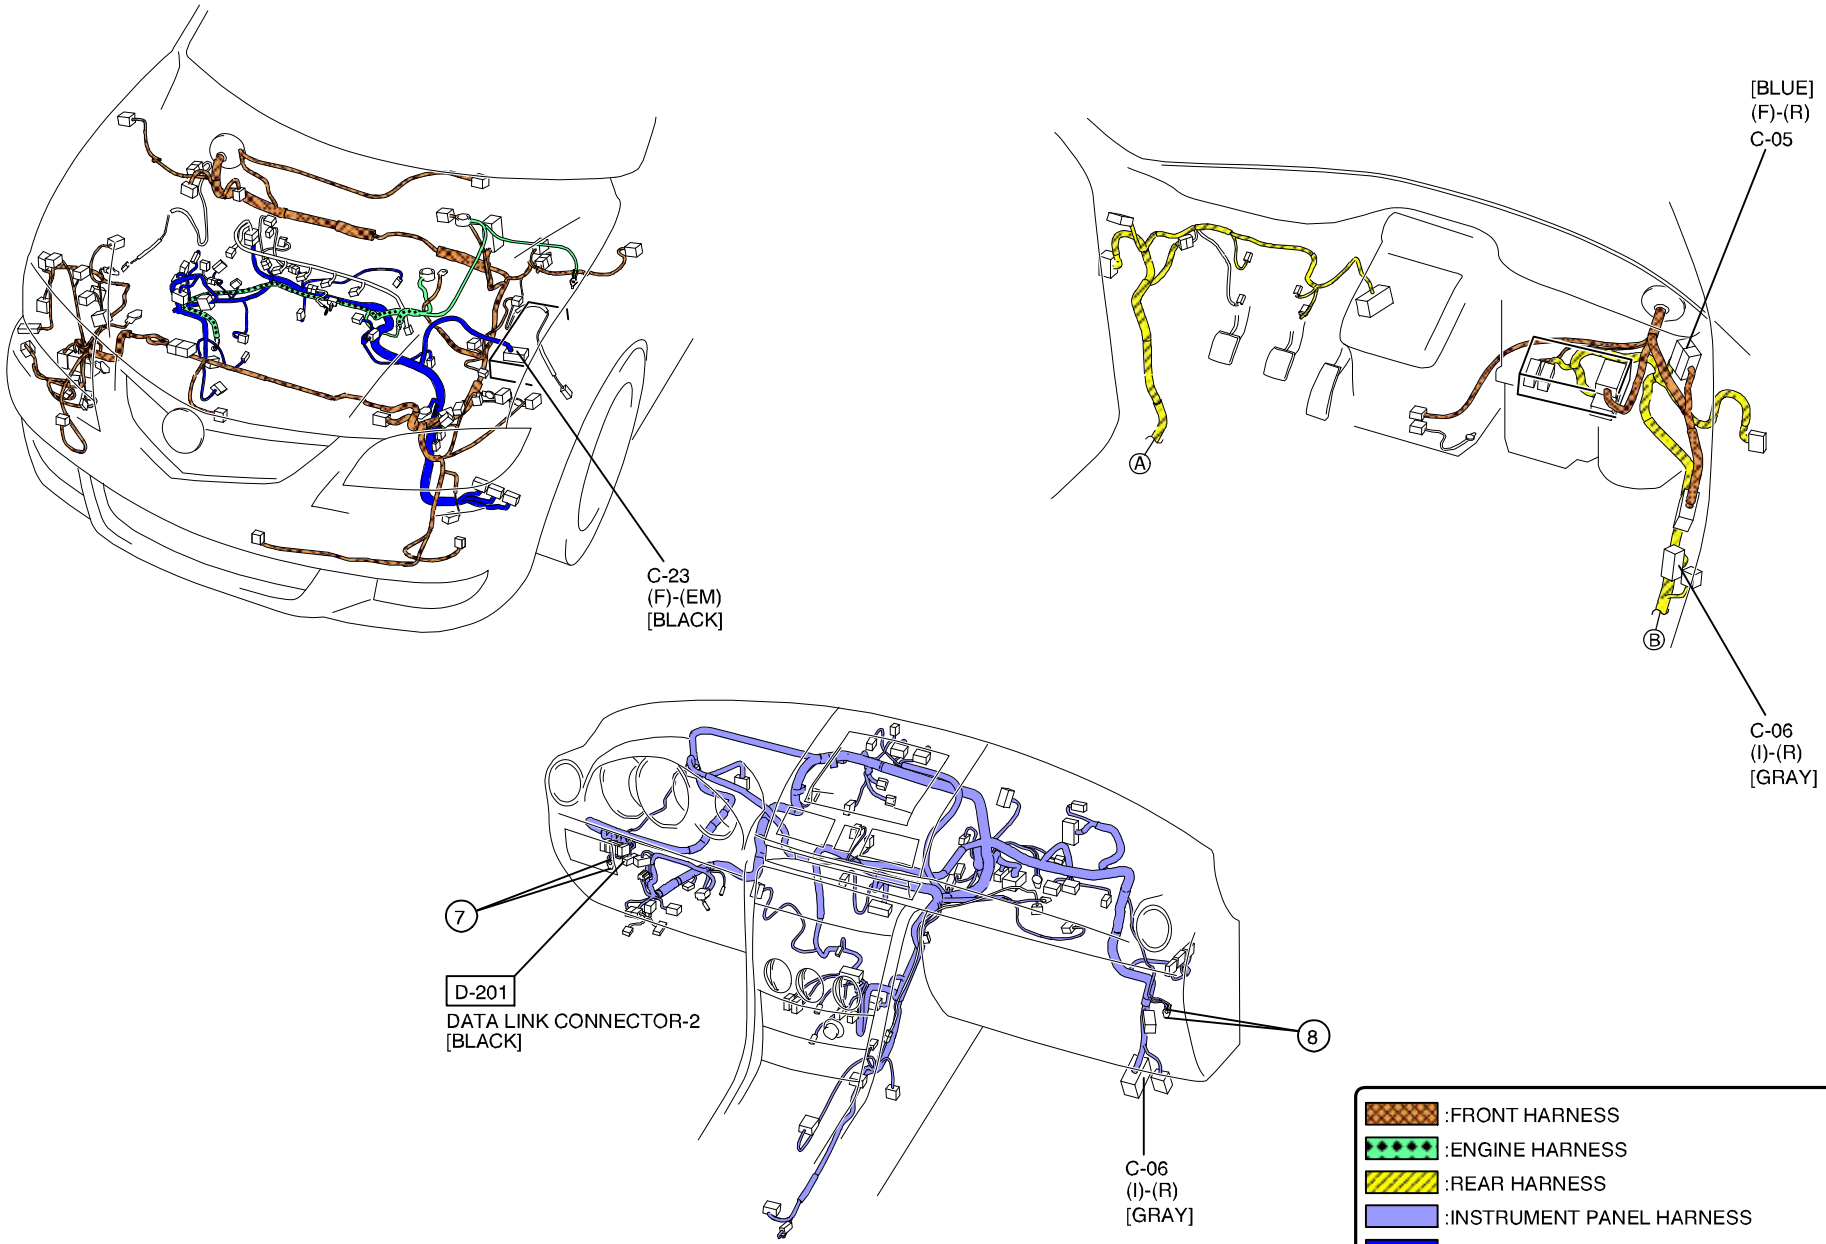


C-05
FRONT HARNESS-REAR HARNESS

FRONT HARNESS

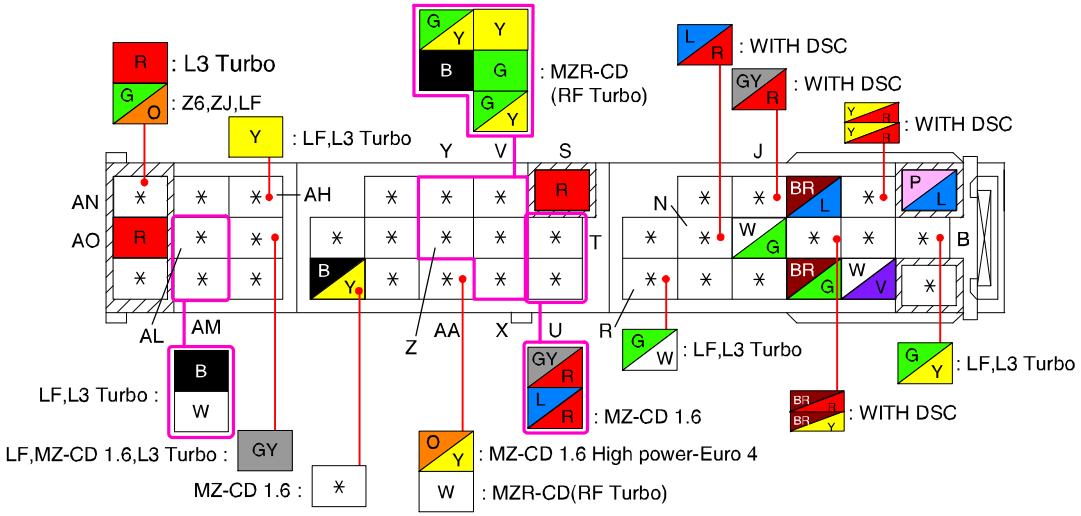


REAR HARNESS

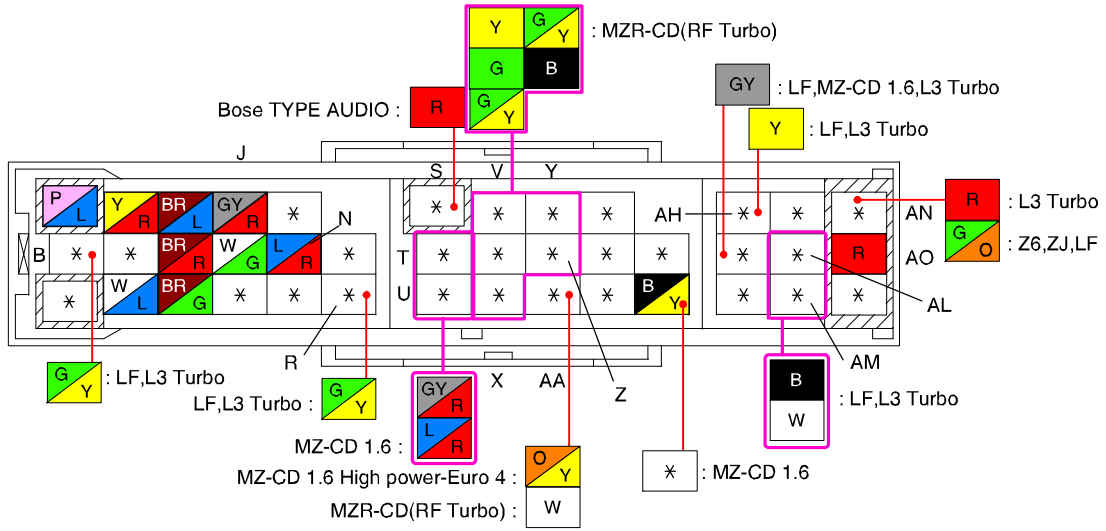


C-06
INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

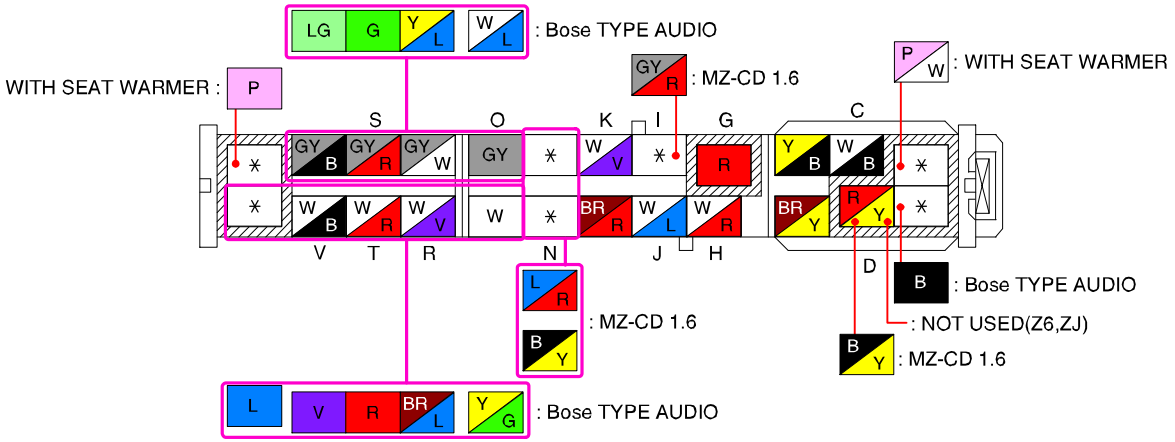


REAR HARNESS

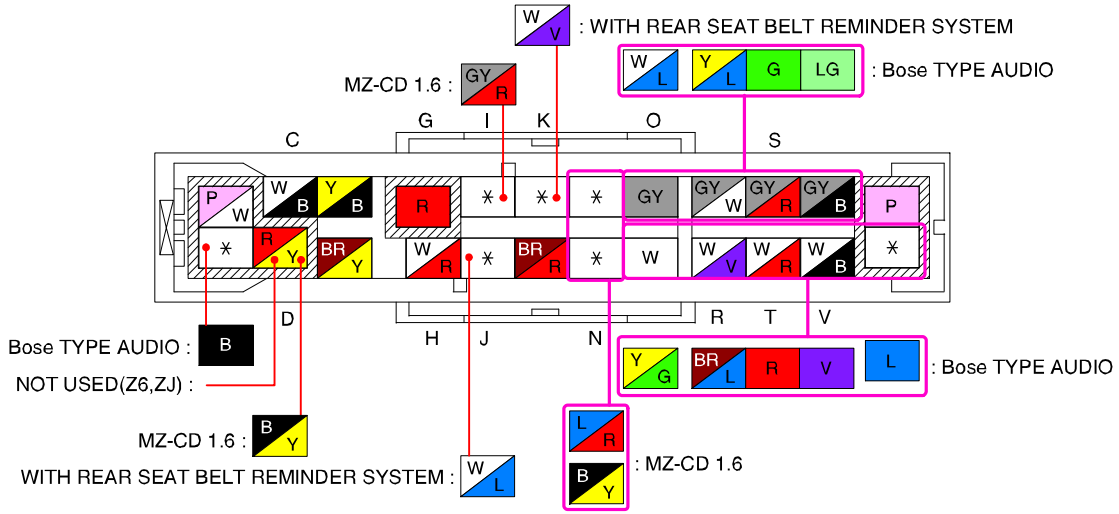

C-23
FRONT HARNESS-EMISSION HARNESS

FRONT HARNESS

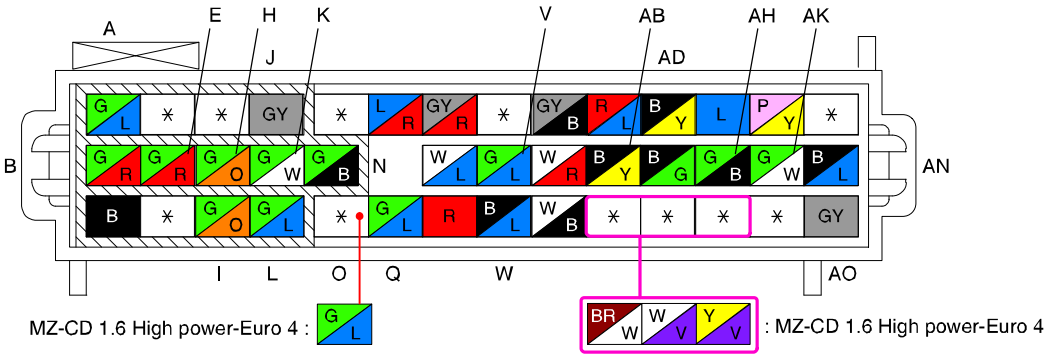

EMISSION HARNESS

