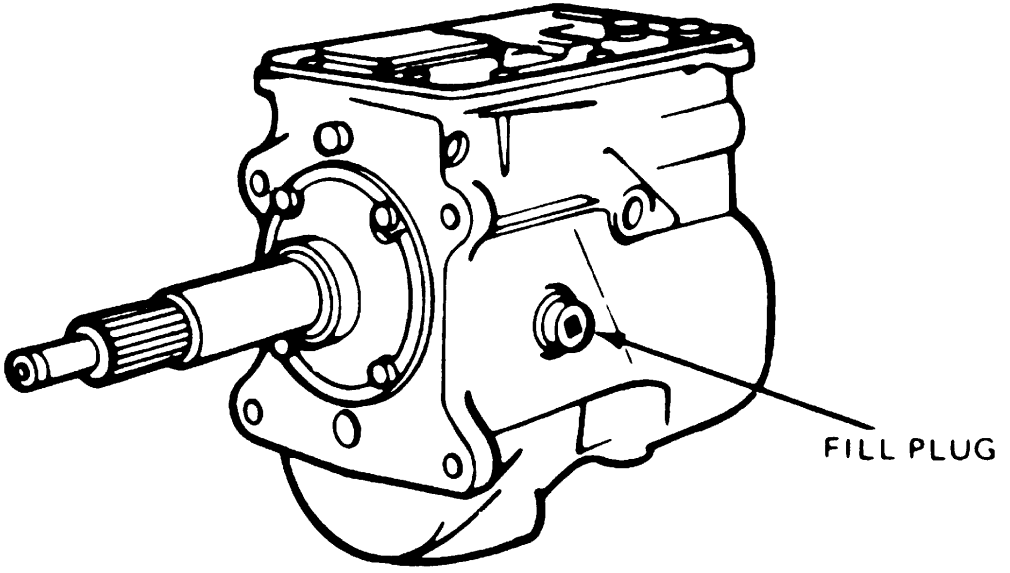

MANUAL TRANSMISSION
FILL TO BOTTOM OF
FILLER HOLE WITH
VEHICLE LEVEL