UNDERHOOD MAINTENANCE COMPONENT LOCATIONS—4.2L ENGINE
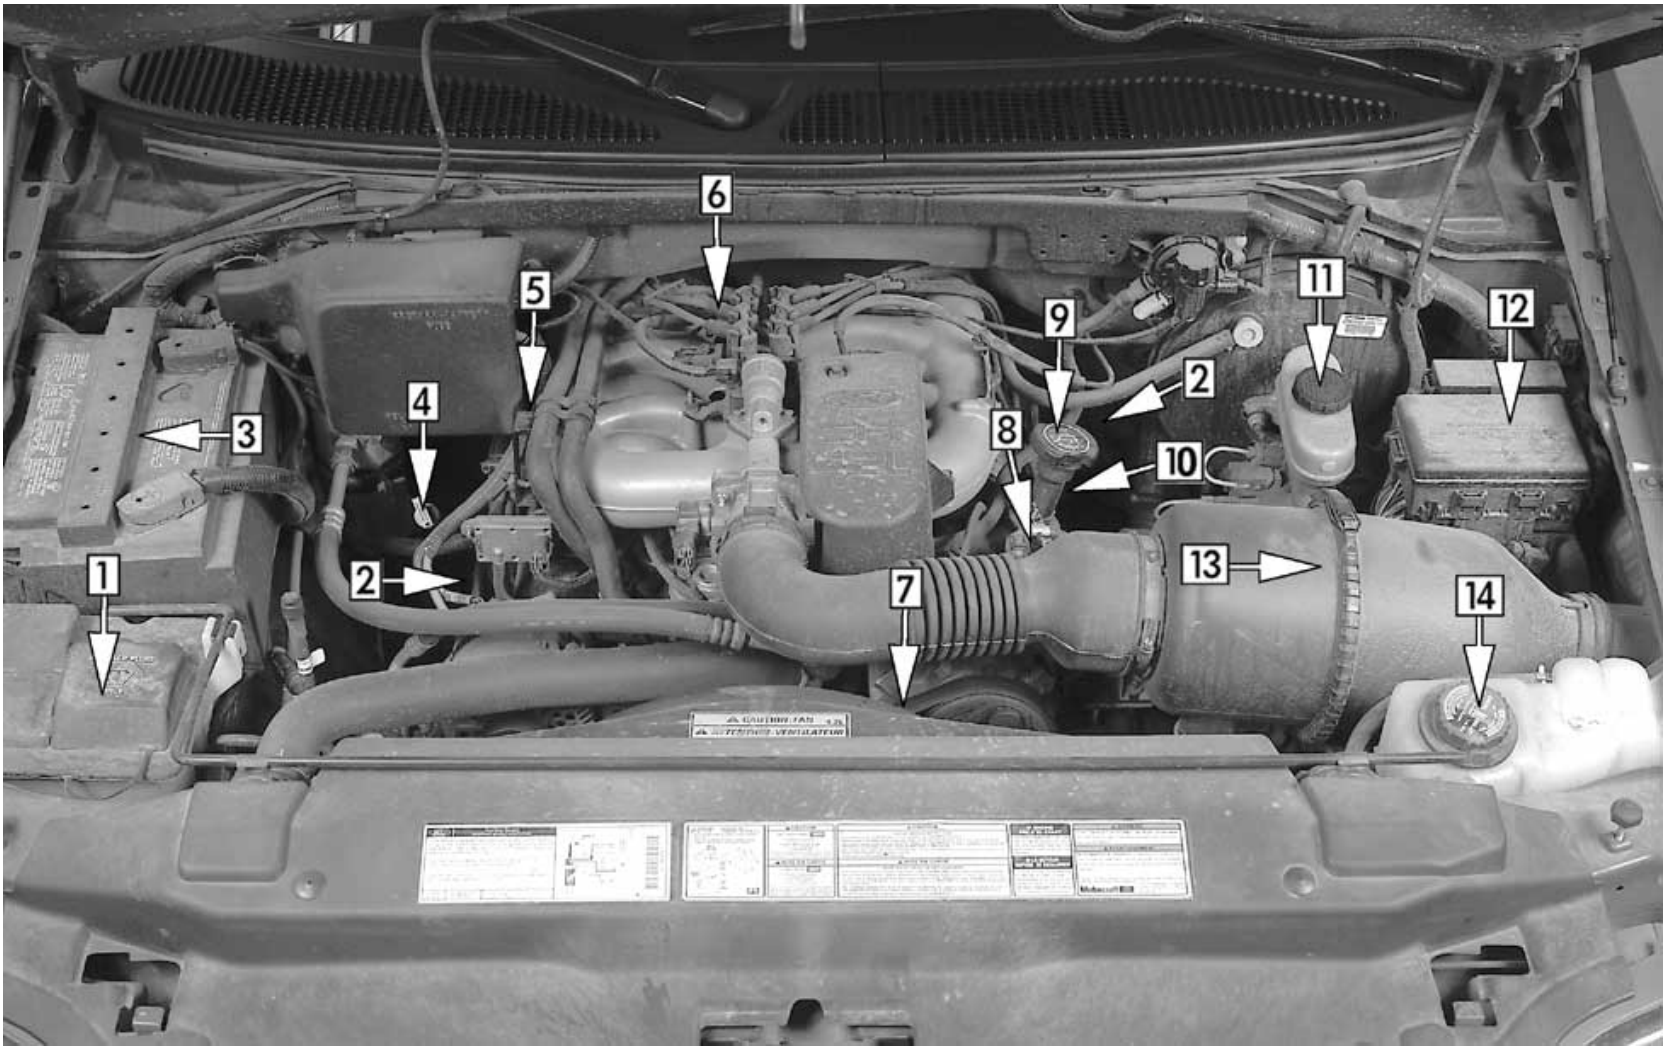
1. Windshield washer solvent reservoir
2. Spark plugs (3 on each side)
3. Battery
4. Automatic transmission dipstick
5. PCV valve
6. Spark plug wires
7. Drive vbelt
8. Power steering pump reservoir (below A/C compressor)
9. Engine oil fill cap
10. Engine oil dipstick
11. Brake master cylinder reservoir
12. Engine compartment fusebox
13. Air cleaner assembly
14. Coolant recovery tank