UNDERHOOD MAINTENANCE COMPONENT LOCATIONS—4.6L ENGINE
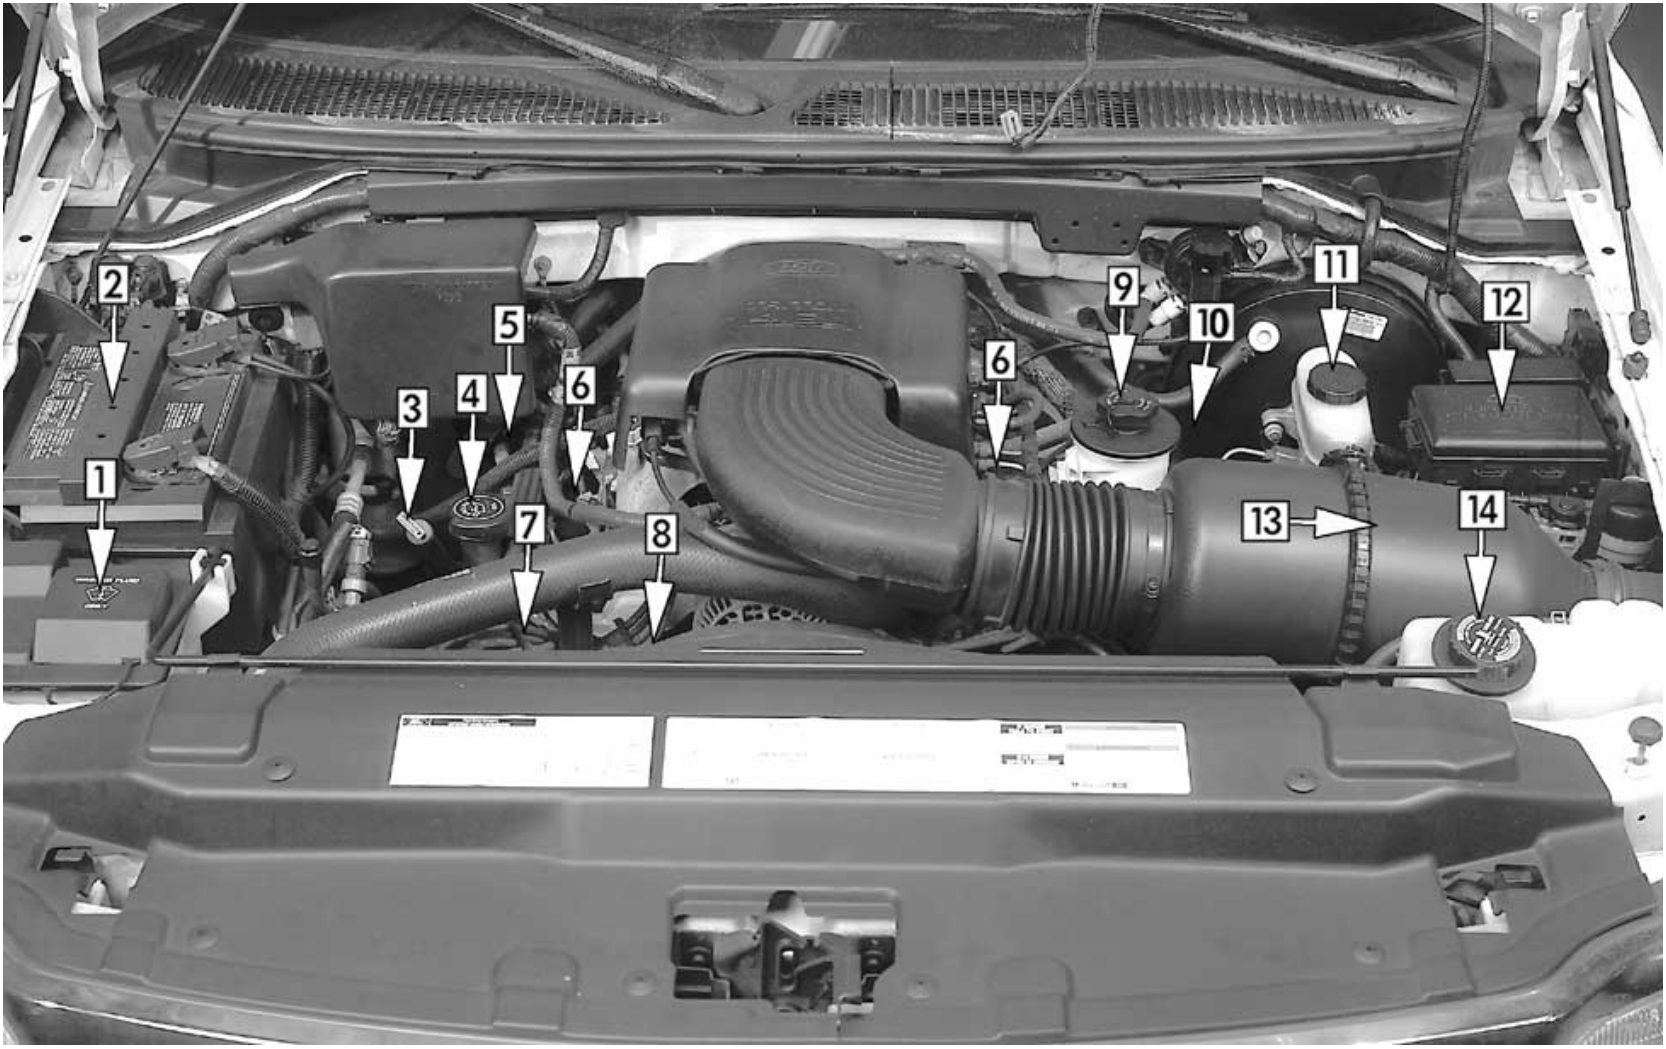
1. Windshield washer solvent reservoir
2. Battery
3. Automtic transmission dipstick
4. Engine oil fill cap
5. PCV valve
6. Spark plugs (4 on each side)
7. Spark plug wires
8. Drive belt
9. Power steering pump reservoir
10. Engine oil dipstick
11. Brake master cylinder reservoir
12. Engine compartment fusebox
1. 3 Air cleaner assembly
14. Coolant recovery tank