UNDERHOOD MAINTENANCE COMPONENT LOCATIONS—6.8L ENGINE
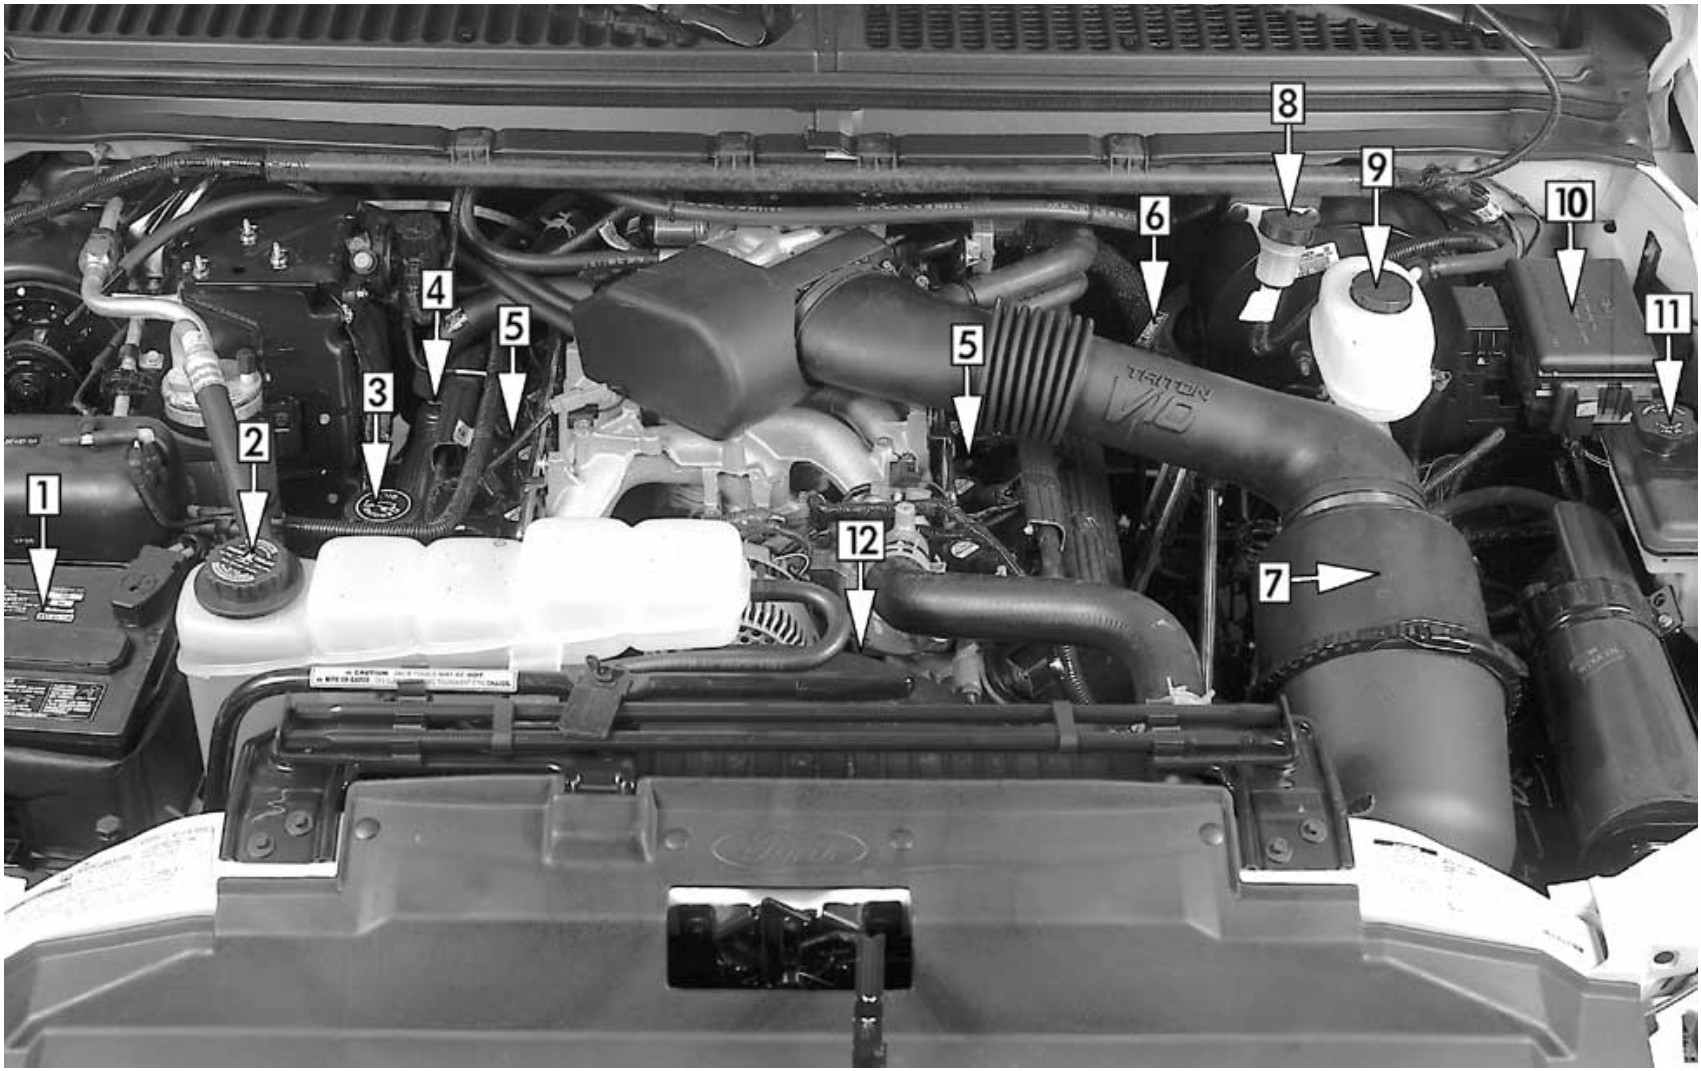
1. Battery
2. Coolant recovery tank
3. Engine oil fill cap
4. PCV valve
5. Spark plugs and ignition coils (5 on each side)
6. Engine oil dipstick
7. Air cleaner assembly
8. Clutch fluid reservoir
9. Brake master cylinder reservoir
10. Engine compartment fusebox
11. Power steering pump reservoir
12. Drive belt