## UNDERHOOD MAINTENANCE COMPONENT LOCATIONS—7.3L DIESEL ENGINE
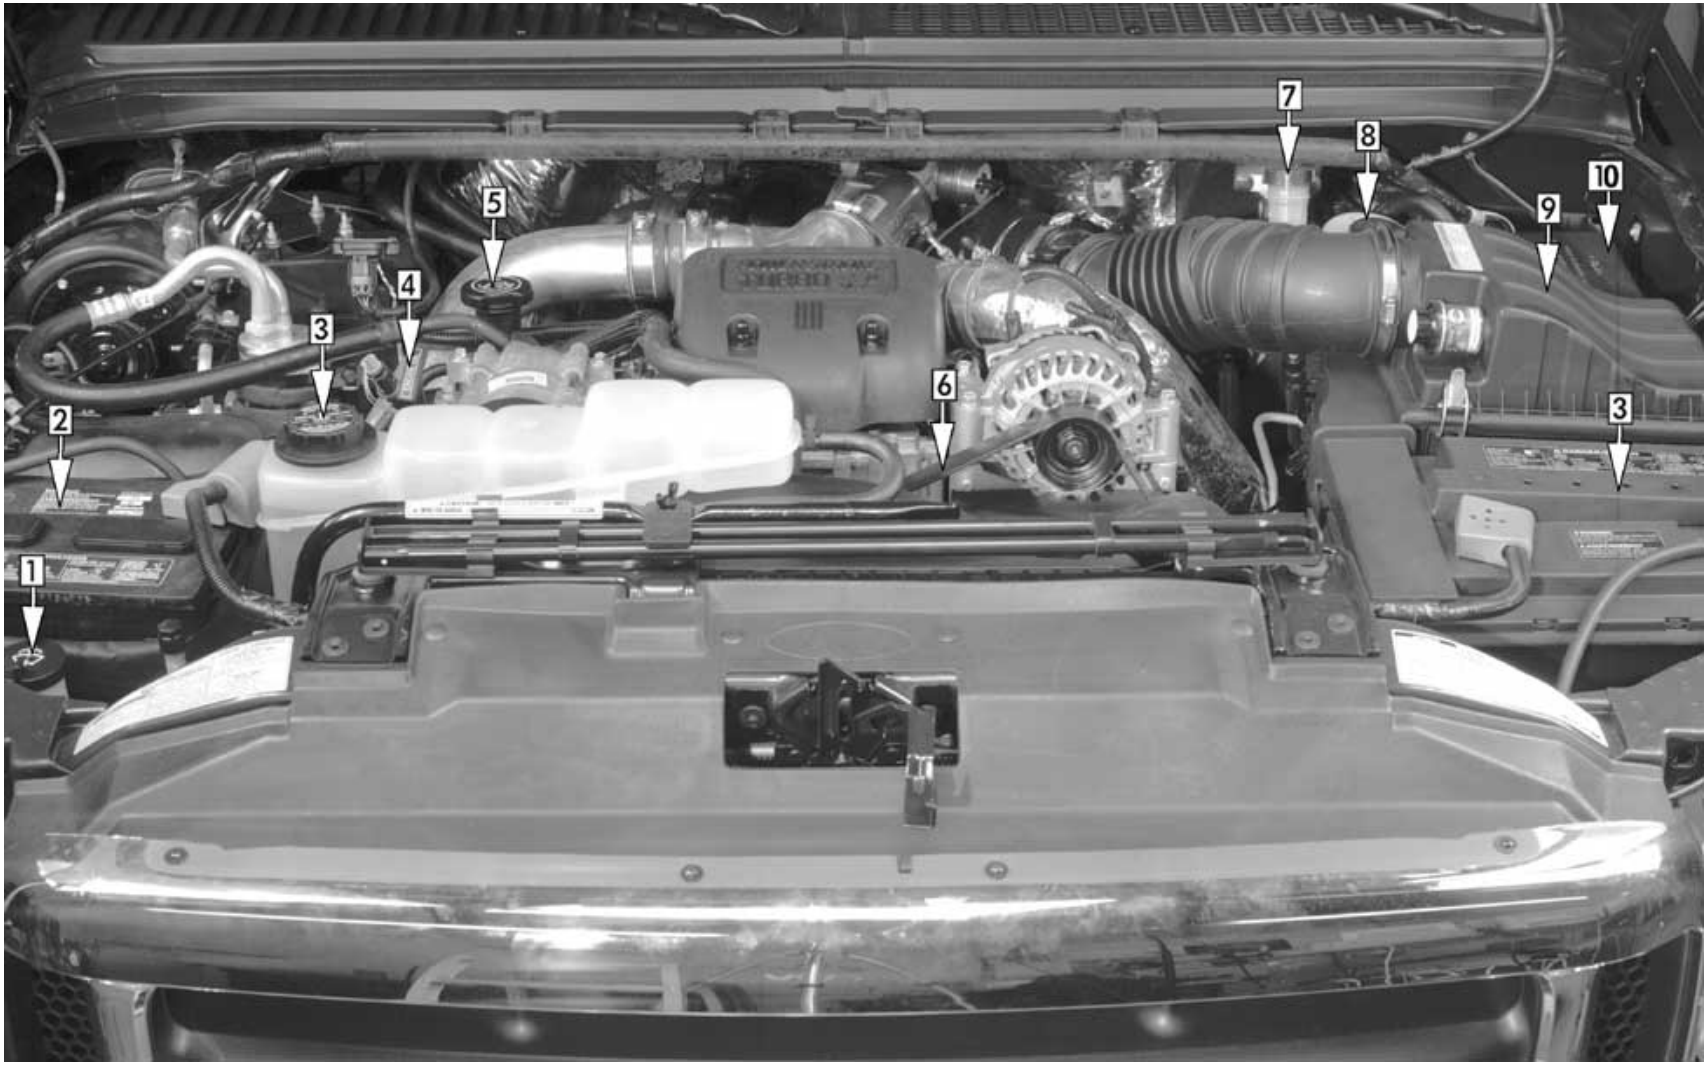
1. Windshield washer solvent reservoir
2. Battery
3. Coolant recovery tank
4. Engine oil dipstick
5. Engine oil fill cap
6. Drive belt
7. Clutch master cylinder
8. Brake master cylinder
9. Air cleaner assembly
10. Engine compartment fusebox