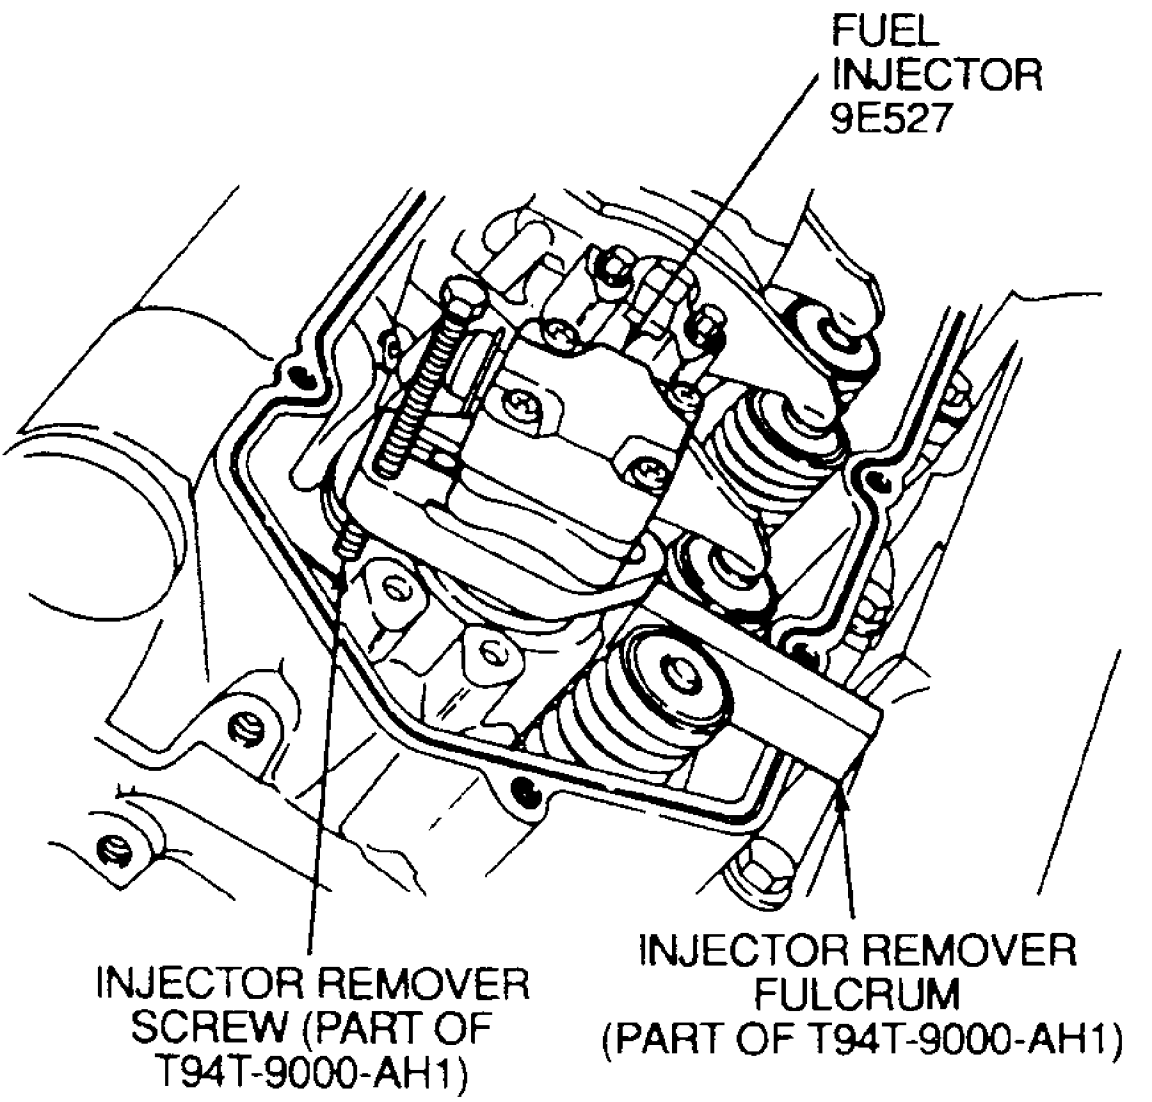
FUEL
INJECTOR
9E527
INJECTOR REMOVER
SCREW (PART OF
T94T-9000-AH1)
INJECTOR REMOVER
FULCRUM
(PART OF T94T-9000-AH1)