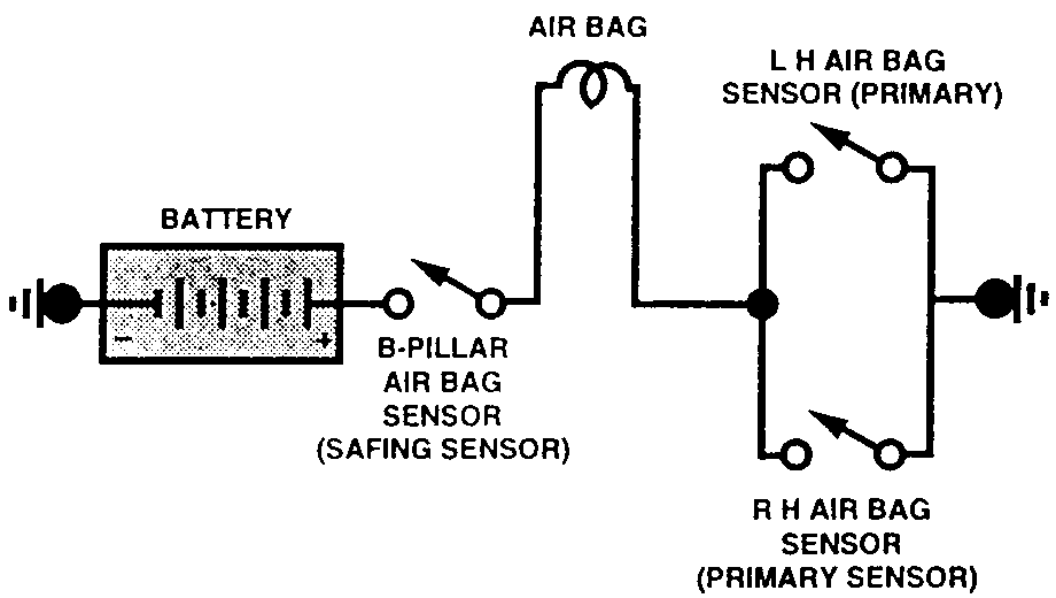
AIR BAG
L H AIR BAG
SENSOR (PRIMARY)
BATTERY
B-PILLAR
AIR BAG
SENSOR
(SAFING SENSOR)
R H AIR BAG
SENSOR
(PRIMARY SENSOR)