INSTRUMENT PANEL FUSE PANEL

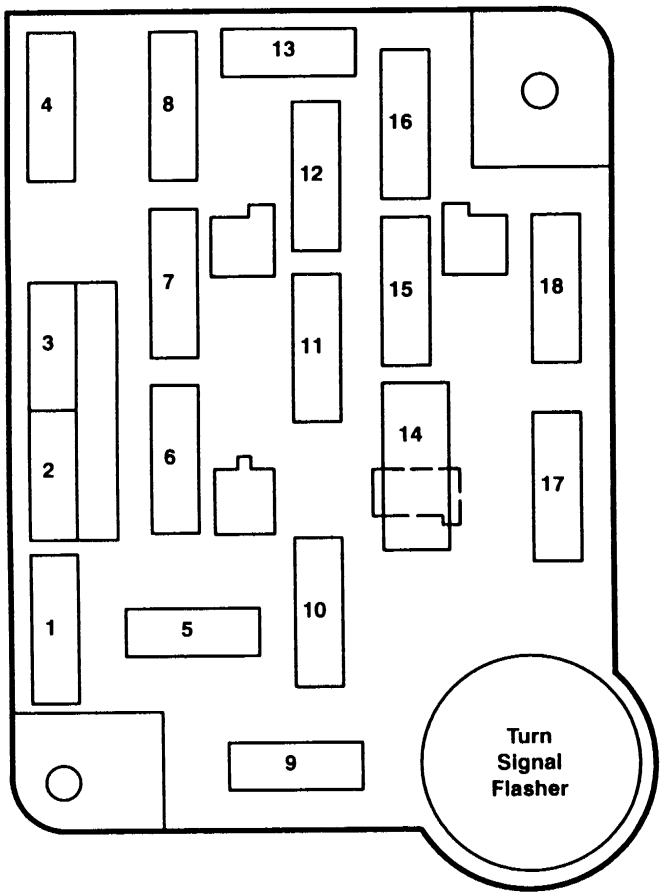

Fuse Value Amps	Color Code
3	Violet
4	Pink
5	Tan
10	Red
15	Light Blue
20	Yellow
25	Natural
30	Light Green

Power Distribution

The Generator and Battery are connected together at the Starter Relay hot terminal. Other circuits originate at the Starter Relay hot terminal and are protected by fuse links. Low power circuits are also protected by fuses.

The Ignition Switch and Main Light Switch are powered at all times, as are fuses 1, 4, 8, 12 and 16. The other fuses are powered through the Ignition Switch or the Main Light Switch.

Fuse Position	Amps	Circuits Protected
1	30	Air Conditioner/Heater
2	30	Interval Wiper/Washer
3	3	Idle Position Switch (Diesel Only)
4	15	Exterior Lamps, Trailer Marker Lamps Relay, Warning Chime, Instrument Illumination, Keyless Entry, Anti–Theft, Trailer Brake Control Unit
5	—	Not Used
6	15	Fuel Tank Selector (Diesel Only), Anti–Theft, Keyless Entry, Air Conditioner/Compressor Clutch
7	15	Turn Lamps
8	15	Courtesy Lamps, Engine Compartment Lamp, Power Mirrors, Vanity Mirrors, Speedometer Memory, Warning Chime, Keyless Entry
9	25	Power Point
10	4	Instrument Illumination
11	15	Radio
12	20 c.b.	Power Door Lock, Power Lumbar, Anti-Theft, Keyless Entry
13	15	Stop and Hazard Lamps, Stop Sense For: Anti-lock Brakes, Speed Control, PCM, Shift Lock
14	20 c.b.	Power Windows
15	20	Anti-lock Brakes
16	15	Cigar Lighter, Data Link Connector (Diesel Only)
17	10	Trans Control Indicator Lamp and Switch, Brake Fluid Level Switch, Warning Chime, Diesel Warning Lamps Display, Fuel Water Switch, Low Vacuum Warning Switch, Instrument Cluster, Switch Lamps
18	10	Speedometer, Day/Night Mirror, Auxiliary Powertrain Control (Diesel Only), Speed Control (Diesel Only), Shift Lock