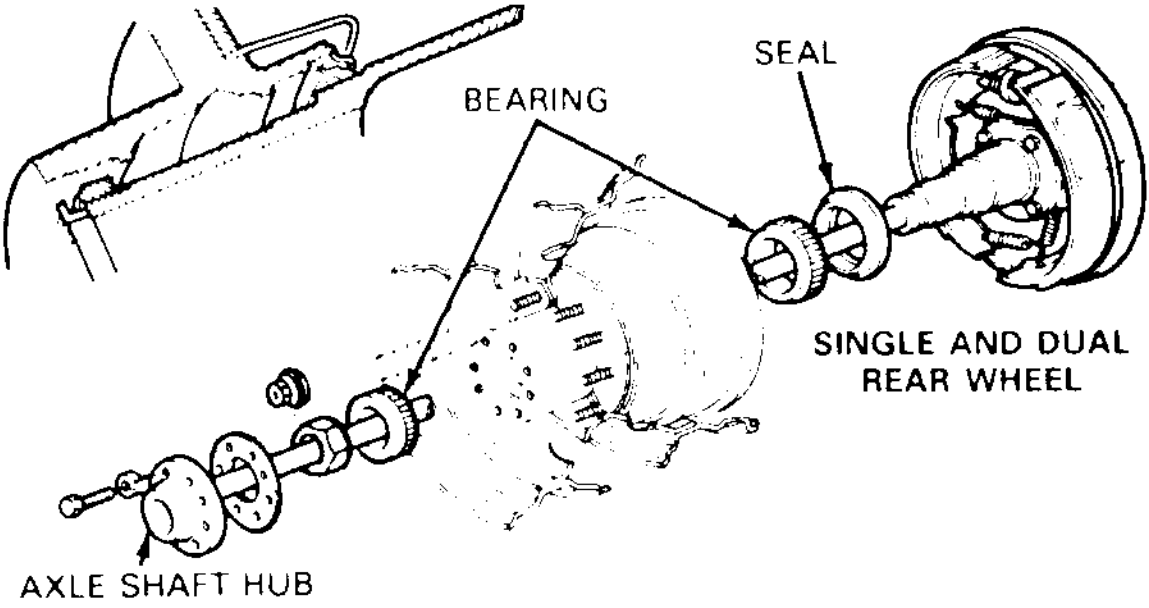

INSTALLING BEARING CUP

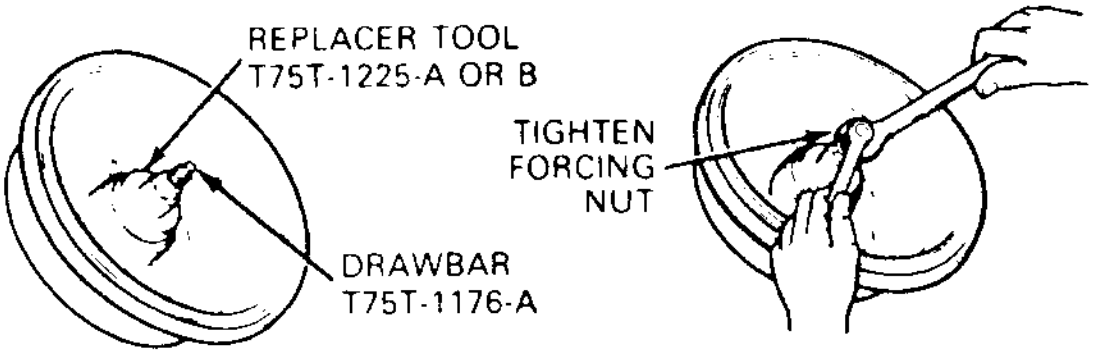
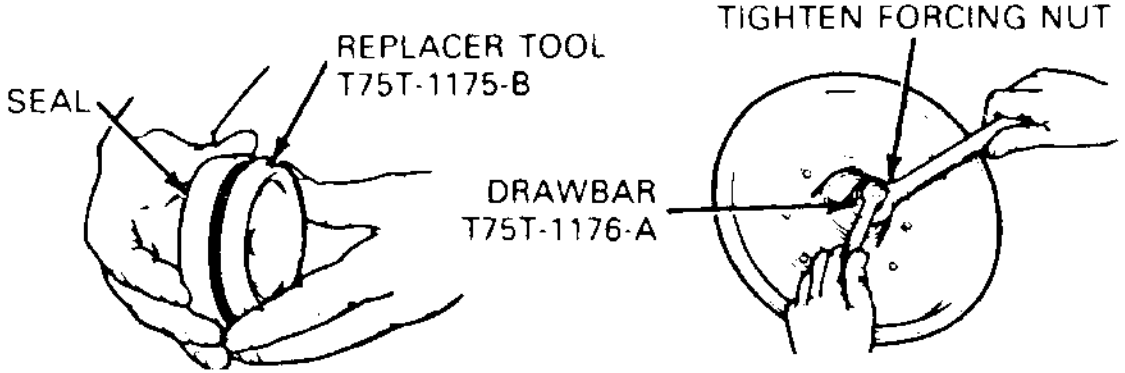
INSTALLING SEAL