ACCESSORIES & EQUIPMENT

Seat Hardware, Trim, and Upholstery - Escalade, Suburban, Tahoe, Yukon

SPECIFICATIONS

FASTENER SPECIFICATIONS

Application	Specification	
	Metric	English
Driver or Passenger Seat Back Cushion Frame Bolt	50 N.m	37 lb ft
Driver or Passenger Seat Bolt	45 N.m	33 lb ft
Driver or Passenger Seat Cushion Frame Bolt	50 N.m	37 lb ft
Front Center Seat Bolt	45 N.m	33 lb ft
Front Seat Center Armrest Hinge Finish Cover Bolt	9 N.m	80 lb in
Front Seat Center Armrest Screw	9 N.m	80 lb in
Front Seat Cushion Center Pad Bolt	9 N.m	80 lb in
Front Seat Outer Recliner Finish Cover Bracket Screw	9 N.m	80 lb in
Rear Seat Armrest Bolt (Bucket)	25 N.m	18 lb ft
Rear Seat Armrest Bolt (Split Bench)	9 N.m	80 lb in
Rear Seat Assembly Nut	45 N.m	33 lb ft
Rear Seat Back Recliner Bolt	50 N.m	37 lb ft
Rear Seat Cushion Trim Panel Screw	2 N.m	18 lb in
Rear Seat Front Riser Hinge Bolt	55 N.m	41 lb ft
Rear Seat Inner and Outer Recliner Bolt	9 N.m	80 lb in
Rear Seat Inner Recliner Bolt	50 N.m	37 lb ft
Rear Seat Latch Bolt	9 N.m	80 lb in
Rear Seat Outer Recliner Bolt	50 N.m	37 lb ft
Rear Seat Riser Bolt	9 N.m	80 lb in
Rear Seat Riser Opening Finish Cover Bolt	2 N.m	18 lb in
Rear Seat Separation Bolt	45 N.m	33 lb ft
3rd Row Seat Assembly Bolt	45 N.m	33 lb ft

cardiagn.com

Application	Specification	
	Metric	English
3rd Row Seat Cushion Frame Bolt	45 N.m	33 lb ft
3rd Row Seat Back Frame Bolt	45 N.m	33 lb ft
3rd Row Seat Back Latch Bolt	10 N.m	89 lb in

DIAGNOSTIC INFORMATION AND PROCEDURES

MANUAL SEAT ADJUSTER MECHANICAL DIAGNOSIS

Condition	Action
NOTE: **Replace all seat adjusters as an assembly Replace both sides at the same time.**	
The adjusters are not in parallel alignment with each other.	1. Loosen the floor pan attaching bolts. 2. Position the seat fully forward. 3. Tighten the bolts.
The adjusters are new, not broken in.	Operate the seat to the fully forward and fully rearward positions several times in order to work the tightness out of the channels.
The adjusters are improperly lubricated.	Lubricate the adjuster channels.
The adjusters are bent or damaged.	Replace the adjusters.
The adjusters are binding.	Lubricate or replace the adjusters.
The seat components are loose, damaged, or broken.	Repair or replace the defective components.
The seat mounting bolts are loose.	Tighten the mounting bolts to specifications.

cardiagn.com

The adjuster lock bar spring is disconnected or broken.	Repair or replace the spring.
The adjuster lock bar is sticking or binding.	Lubricate the lock bar pivot or replace the adjuster.
The locking wire is too loose.	Tighten the locking wire.
The locking wire is disconnected or broken.	Repair or replace the locking wire.
The locking wire is too tight.	Loosen the locking wire.

SEAT - HARD TO MOVE FORWARD AND REARWARD

Condition	Action
IMPORTANT: Replace all seat adjusters as an assembly Replace both sides at the same time.	
The adjusters are not in parallel alignment with each other.	1. Loosen the floor pan attaching bolts. 2. Position the seat fully forward. 3. Tighten the bolts. Refer to **Fastener Specifications**.

MANUAL SEAT ADJUSTER DOES NOT LOCK

Problem	Action
The locking wire is too tight.	Loosen the locking wire.
The adjuster lock bar spring is disconnected or broken.	Repair or replace the spring.
The adjuster lock bar is sticking or binding.	Lubricate the lock bar pivot or replace the adjuster.

MANUAL SEAT ADJUSTER DOES NOT UNLOCK

Problem	Action
The locking wire is too loose.	Tighten the locking wire.
The locking wire is disconnected or broken.	Repair or replace the locking wire.
The adjuster lock bar is sticking or binding.	Lubricate the lock bar pivot.

MANUAL SEAT ADJUSTER LOCKS BETWEEN LOCK POSITIONS

cardiagn.com

Problem	Action
The adjusters are misaligned.	Align the adjusters.
The adjusters are new, not broken in.	Operate the seat to the fully forward and fully rearward positions several times in order to work the tightness out of the channels.
The adjusters are improperly lubricated.	Lubricate the adjuster channels.
The adjusters are bent or damaged.	Replace the adjusters.
The adjusters are binding or damaged.	Lubricate or replace the adjusters.
The seat components are loose, damaged, or broken.	Repair or replace the seat.
The seat mounting bolts are loose.	Tighten the mounting bolts to specifications. Refer to **Fastener Specifications**.

SEATS - ADJUSTER TRACK LOCKS AHEAD OF OTHER TRACK

Condition	Action
IMPORTANT: Replace all seat adjusters as an assembly Replace both sides at the same time.	
The adjusters are out of time.	Remove and reinstall the front bucket seat. Refer to **Driver or Passenger Seat Removal and Installation**.

REPAIR INSTRUCTIONS

DRIVER OR PASSENGER SEAT REMOVAL AND INSTALLATION

cardiagn.com

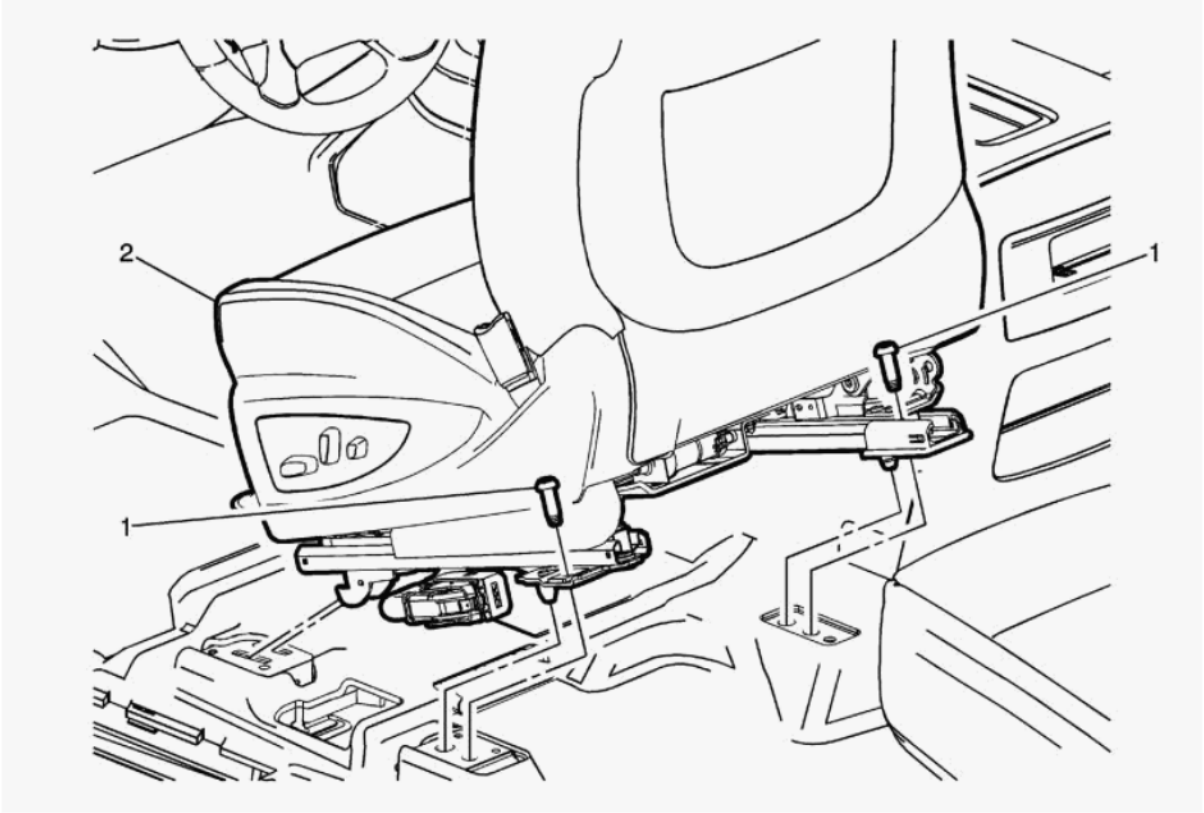


Fig. 1: Driver or Passenger Seat
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
WARNING: Refer to SIR Warning . **Preliminary Procedure** 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Disconnect the seat belt from the tensioner. Refer to Front Seat Belt Anchor Plate Tensioner Replacement . 3. Remove the driver or passenger seat inner adjuster front finish cover. Refer to Driver or Passenger Seat Inner Adjuster Front Finish Cover Replacement.	

cardiagn.com

Callout	Component Name
4. Remove the driver or passenger seat adjuster finish cover. Refer to **Driver or Passenger Seat Adjuster Finish Cover Replacement**.	
1	Driver or Passenger Seat Bolt (Qty: 2) **CAUTION:** **Refer to** **Fastener** **Caution** . **Procedure** Adjust the seat to the forward position to gain access to the rear bolts. **Tighten** 45 N.m (33 lb ft)
2	Driver or Passenger Seat Assembly **Procedure** 1. Disconnect the front seat and tensioner electrical connector, and passenger presence system connector, if equipped. 2. With the aid of an assistant remove the front seat, by tilting the seat forward, and then lifting and pulling the seat rearwards to disengage the 4 front foot hooks. 3. If replacing with a new seat assembly, the new seat adjuster memory module requires programming. Refer to **Control Module References**

FRONT CENTER SEAT REMOVAL AND INSTALLATION

cardiagn.com

nd ...

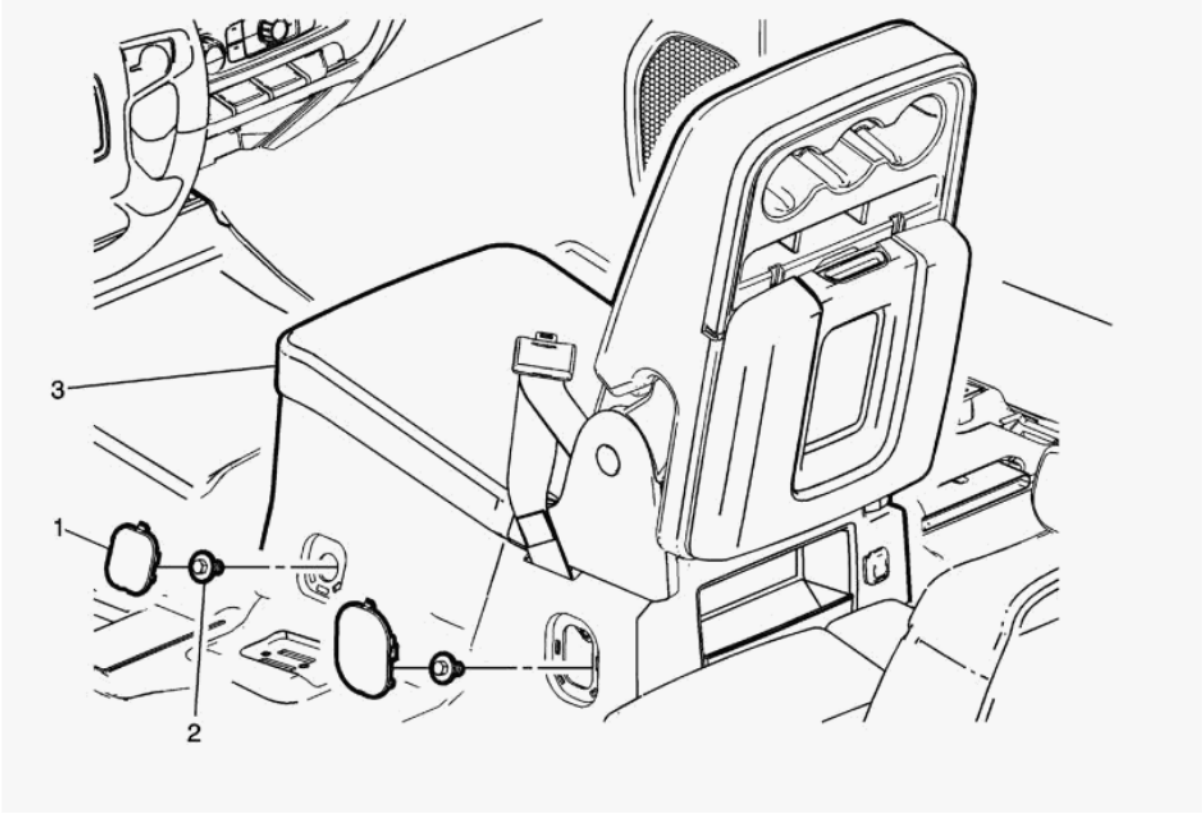


Fig. 2: Front Center Seat
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the driver and passenger seats. Refer to **Driver or Passenger Seat Removal and Installation**.	
1	Front Center Seat Stanchion Cover (Qty: 4)
2	Front Center Seat Bolt (Qty: 4) **CAUTION:** **Refer to** **Fastener** **Caution** .

cardiagn.com

Callout	Component Name
	Tighten 45 N.m (33 lb ft)
3	Front Center Seat Assembly **Procedure** Disconnect the electrical connector.

DRIVER OR PASSENGER SEAT INNER ADJUSTER FRONT FINISH COVER REPLACEMENT

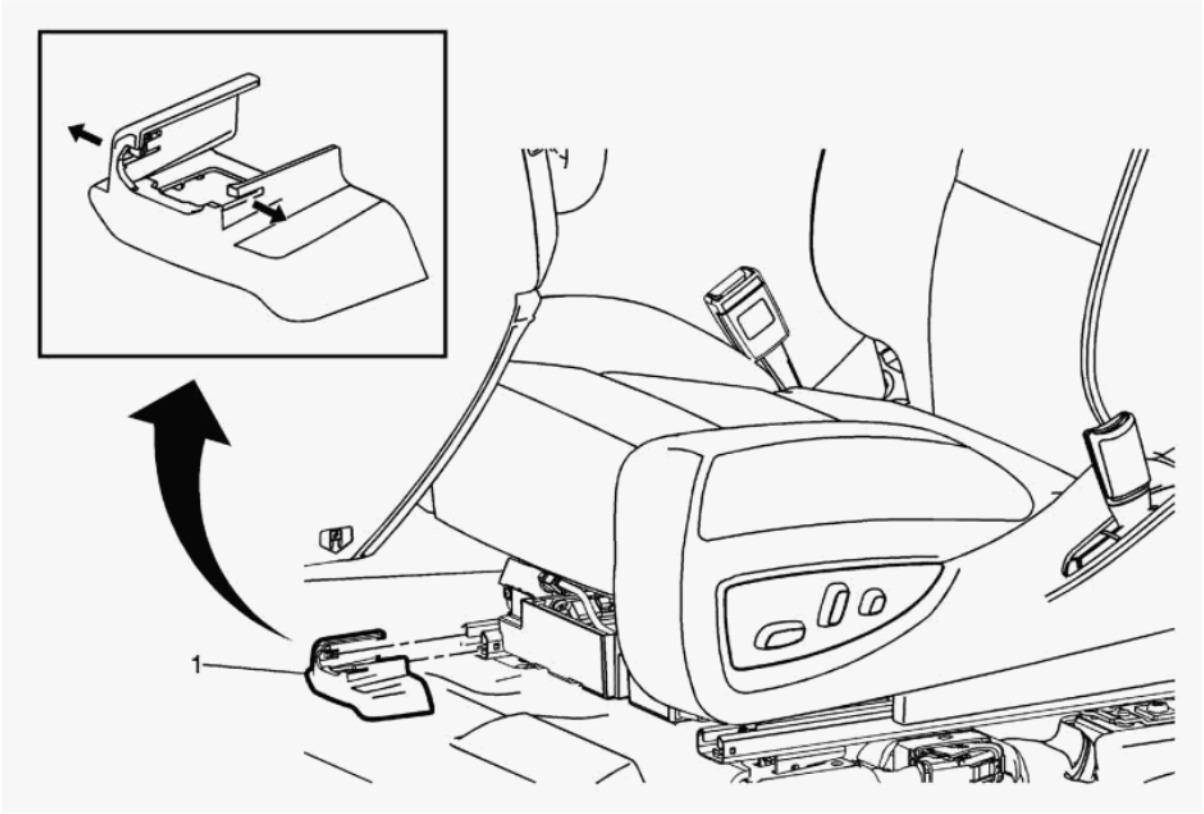


Fig. 3: Driver or Passenger Seat Inner Adjuster Front Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

cardiagn.com

Callout	Component Name
1	Driver or Passenger Seat Inner Adjuster Front Finish Cover **CAUTION:** **Do not twist the cover during removal. Twisting the cover may cause the component to break.** **Procedure** 1. Adjust the seat to the full rearward position to gain access to the finish cover. 2. Firmly grasp both sides of the finish cover pulling the sides outward to disengage the top of the cover off of the track. 3. Remove the finish cover by sliding the cover forward and then disengage it from the seat track.

FRONT SEAT WIRING HARNESS CONNECTOR BRACKET REPLACEMENT

cardiagn.com

nd ...

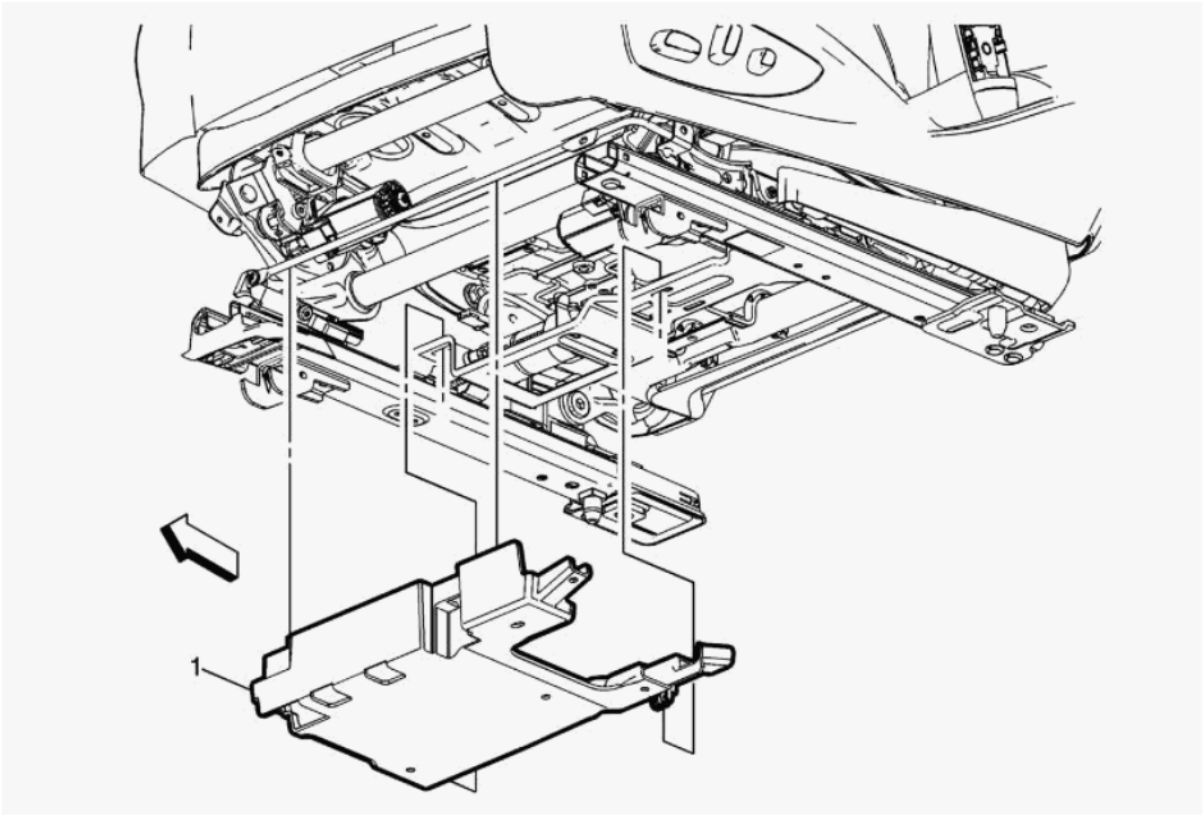


Fig. 4: Front Seat Wiring Harness Connector Bracket
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Seat Wiring Harness Connector Bracket **Procedure** 1. Raise the seat to the highest position to gain access to the bracket. 2. Disconnect all electrical connectors. 3. Gently pull forward on the front of the bracket to disconnect it from the electrical tray rod. 4. Gently push up on the rear of the cover to disengage the remaining retainers from the seat adjuster actuator motor mounting bracket. 5. Transfer components as necessary.

cardiagn.com

nd ...

FRONT SEAT ADJUSTER REAR FINISH COVER REPLACEMENT

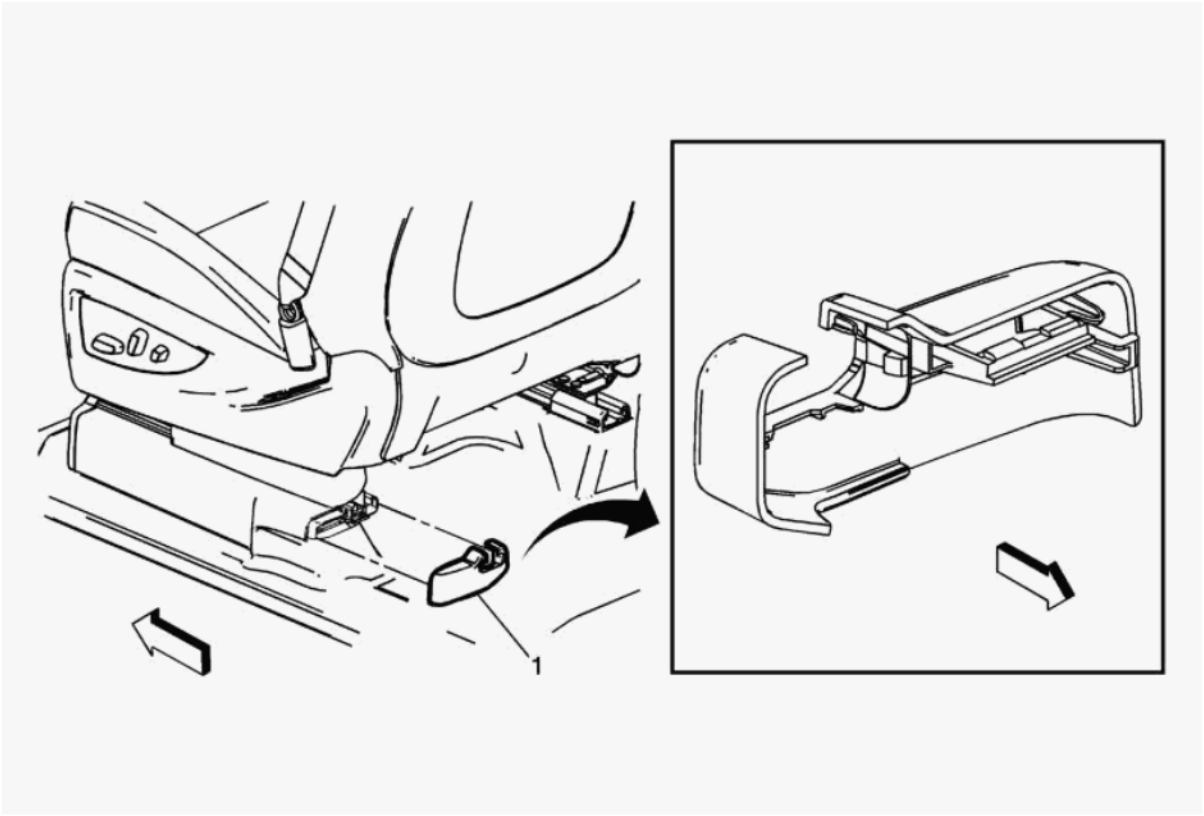


Fig. 5: Front Seat Adjuster Rear Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Seat Adjuster Rear Finish Cover **CAUTION:** **Do not twist the cover during removal. Twisting the**

cardiagn.com

Callout	Component Name
	cover may cause the component to break. **Procedure** 1. Adjust the seat to the full forward position to gain access to the finish cover. 2. Firmly grasp the finish cover, pulling rearward to disengage it from the seat track.

FRONT SEAT ADJUSTER KNOB REPLACEMENT (8-WAY POWER)

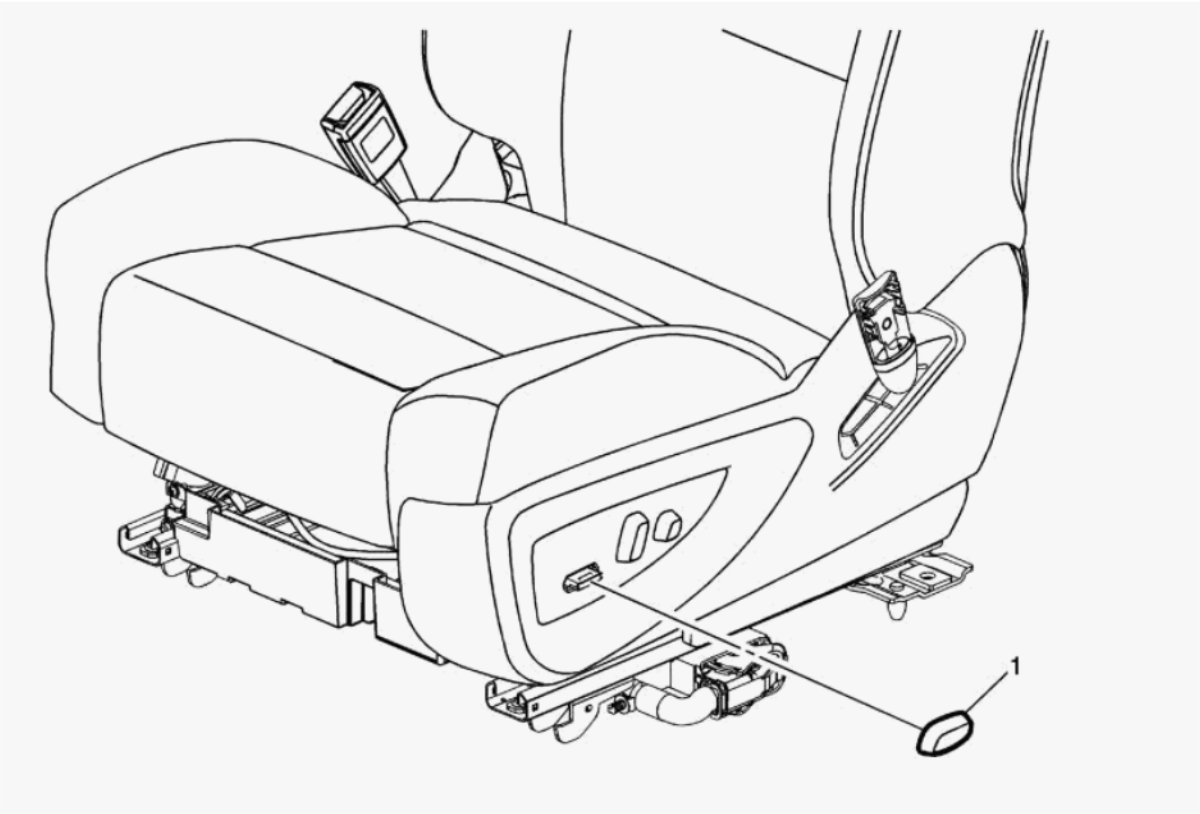


Fig. 6: Front Seat Adjuster Knob (8-Way Power)

cardiagn.com

nd ...

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Seat Adjuster Knob **Procedure** Use a flat-bladed tool to release the adjuster knob from the outer finish panel.

FRONT SEAT ADJUSTER KNOB REPLACEMENT (22-WAY ROTARY)

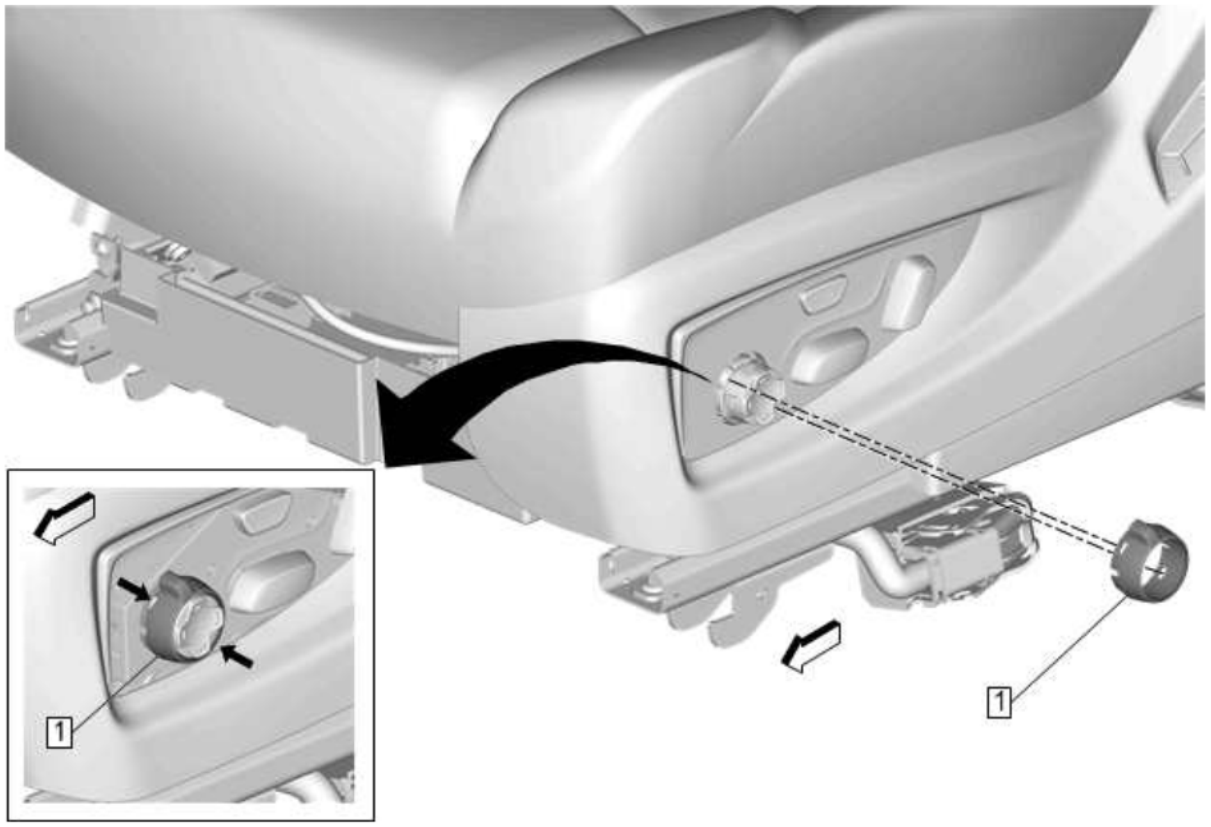


Fig. 7: Front Seat Adjuster Knob (22-Way Rotary)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Seat Adjuster Knob

cardiagn.com

Callout	Component Name
	Procedure Use a flat-bladed tool to push inward on the adjuster tabs to release the knob from the adjust switch and outer finish panel.

FRONT SEAT ADJUSTER KNOB REPLACEMENT (22-WAY POWER)

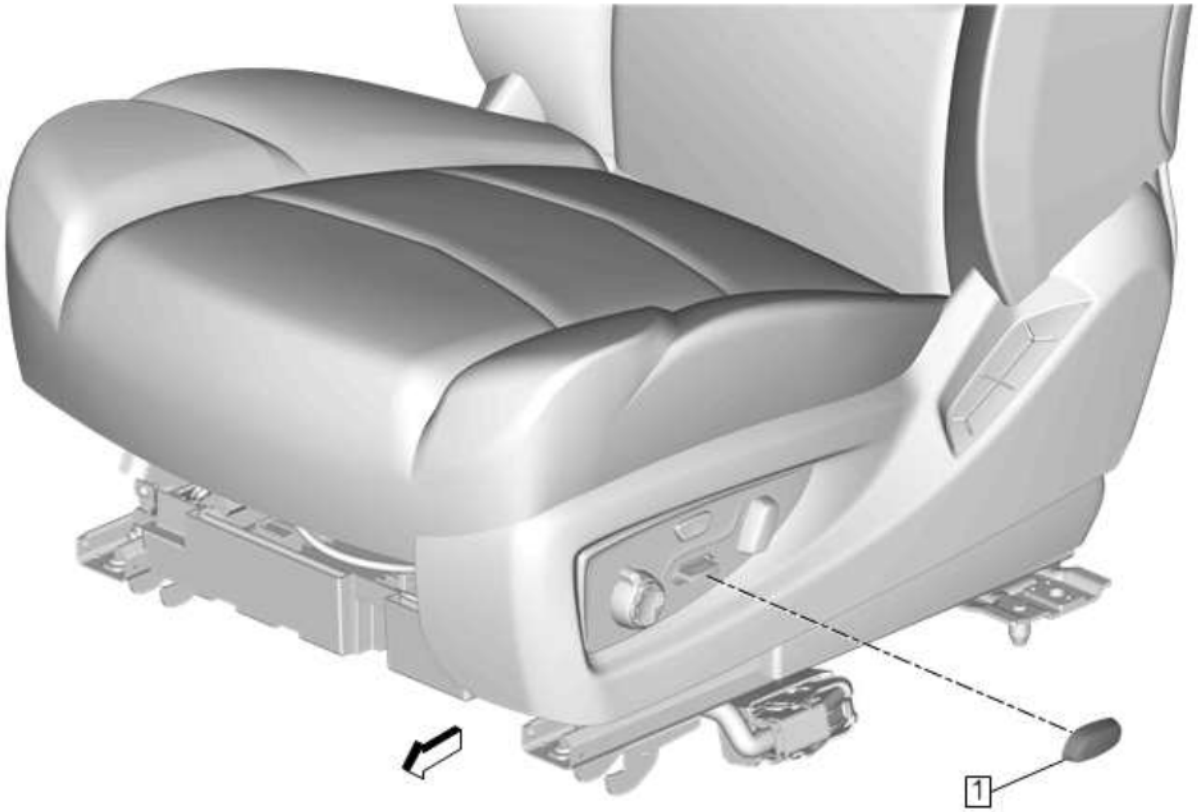


Fig. 8: Front Seat Adjuster Knob (22-Way Power)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Seat Adjuster Knob **Procedure** Use a flat-bladed tool to release the adjuster knob from the front seat cushion outer finish cover.

cardiagn.com

nd ...

FRONT SEAT ADJUSTER SWITCH BRACKET REPLACEMENT

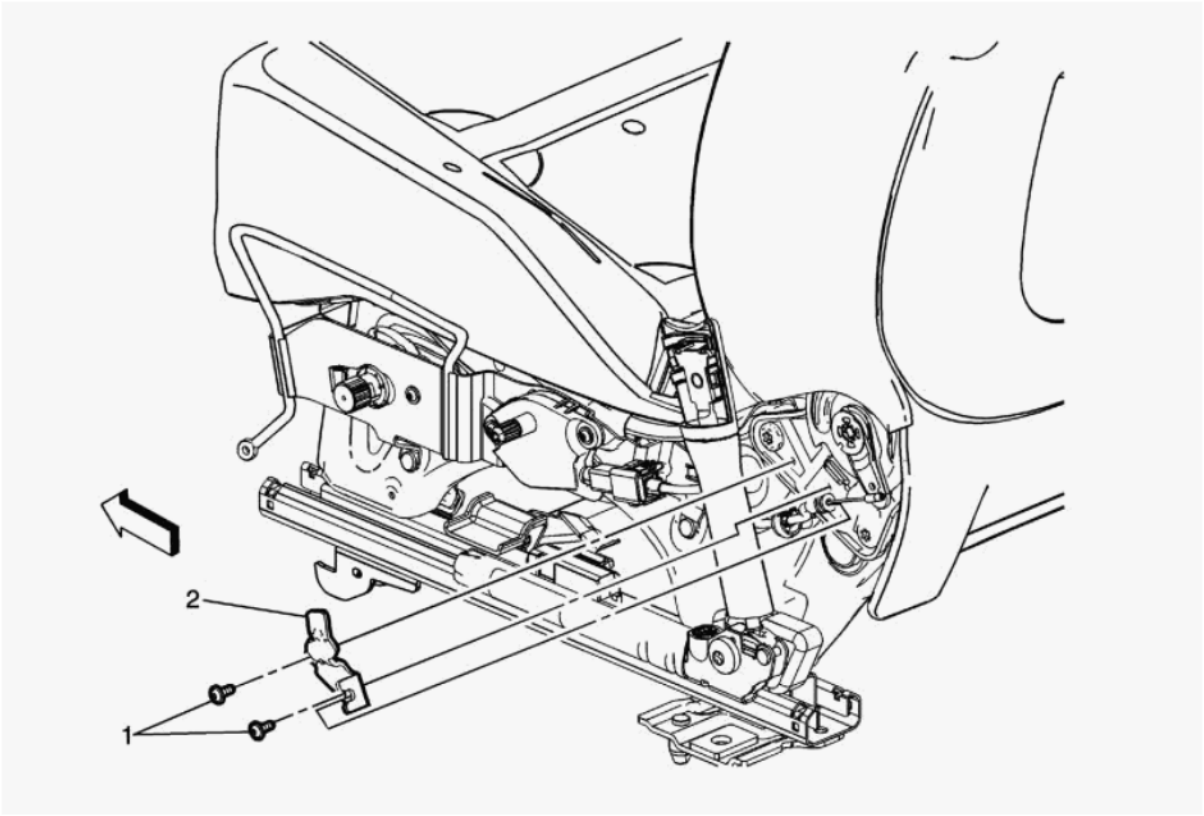


Fig. 9: Front Seat Adjuster Switch Bracket
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front seat cushion outer finish cover. Refer to **Front Seat Cushion Outer Finish Cover Replacement (8-Way Power)Front Seat Cushion Outer Finish Cover Replacement (2-Way Manual)Front Seat Cushion Outer Finish Cover Replacement (22-Way Power)**.	
1	Front Seat Adjuster Switch Bracket Screw (Qty: 2) **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to **Fastener** **Caution** .
2	Front Seat Adjuster Switch Bracket **Procedure** Detach the recliner cable from the adjuster switch bracket.

DRIVER OR PASSENGER SEAT HEAD RESTRAINT REPLACEMENT

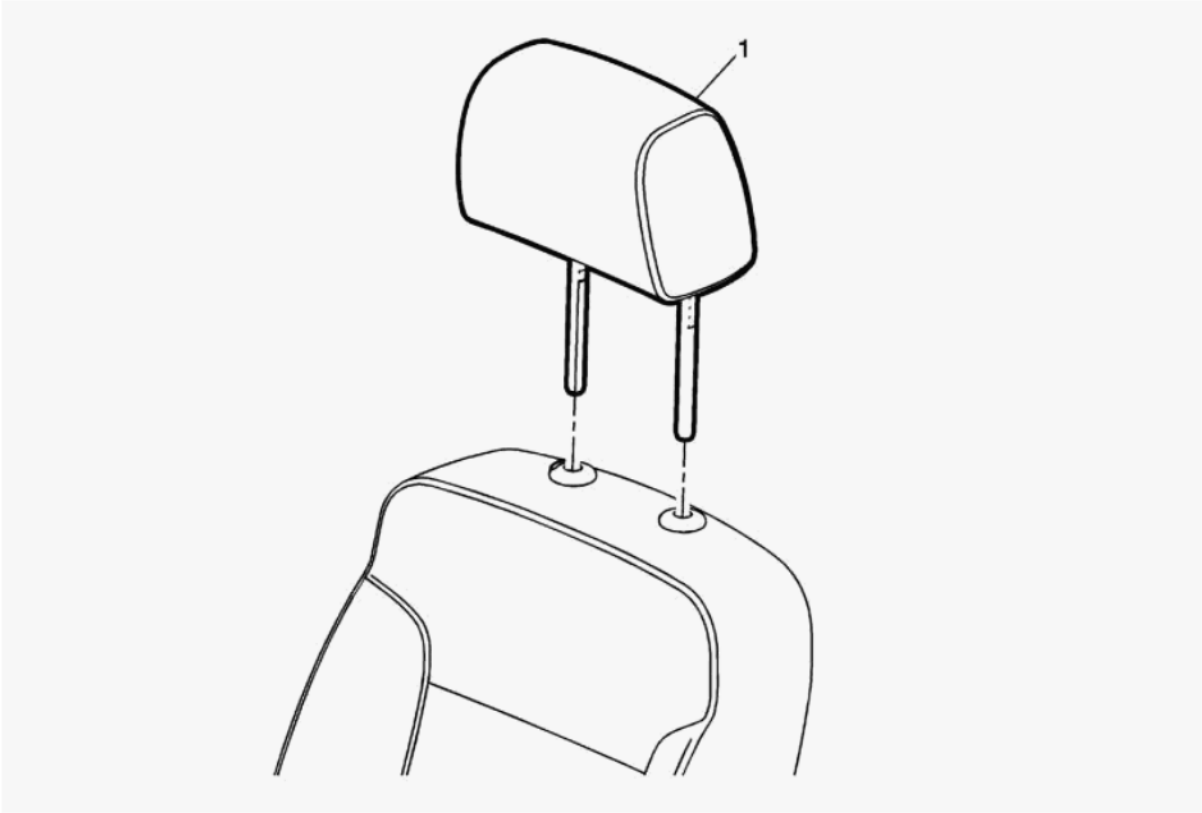


Fig. 10: Driver or Passenger Seat Head Restraint
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

cardiagn.com

Callout	Component Name
1	Driver or Passenger Seat Head Restraint **Procedure** 1. Lower the seat back to gain space between the head restraint and the roof. 2. Depress the large button on the head restraint guide and raise the head restraint to the full up position. 3. Depress the large and small buttons on the guides and lift up on the head restraint to remove.

FRONT SEAT HEAD RESTRAINT GUIDE REPLACEMENT

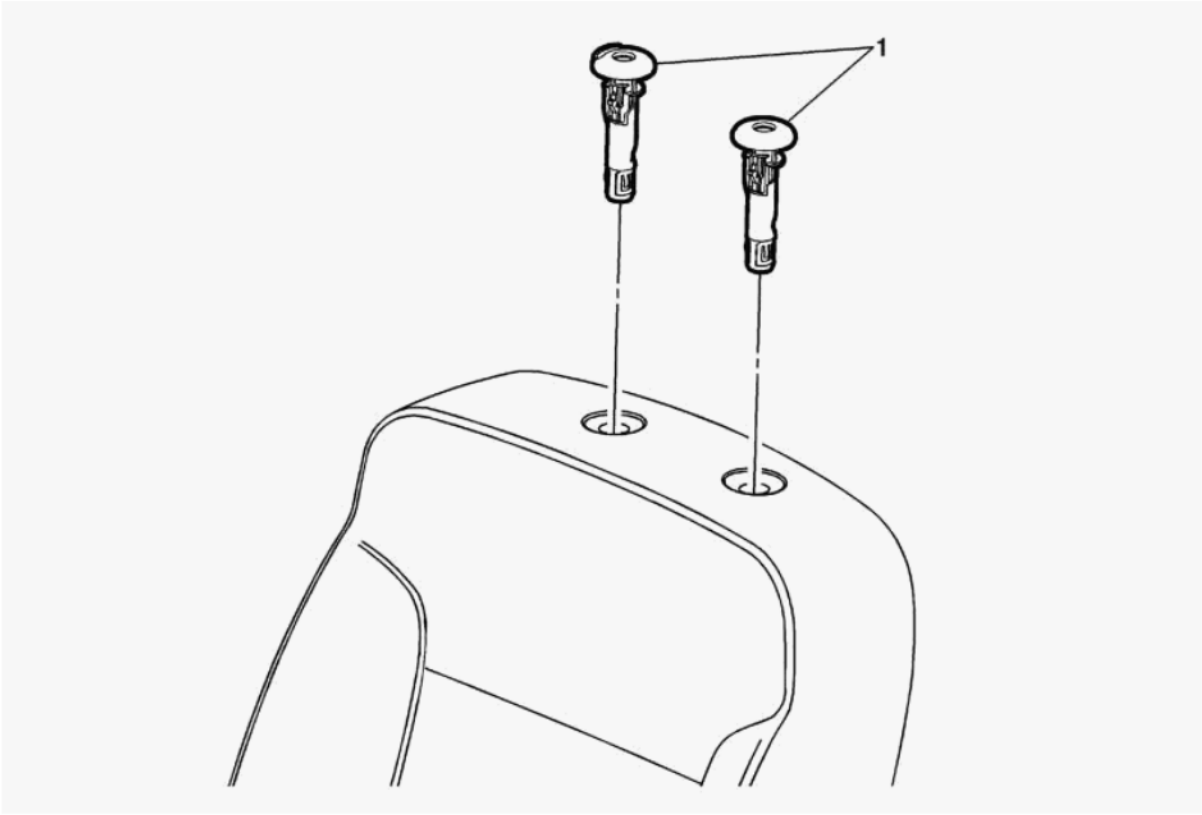


Fig. 11: Driver or Passenger Seat Head Restraint Guide
Courtesy of GENERAL MOTORS COMPANY

cardiagn.com

Callout	Component Name
Preliminary Procedure Remove the rear seat head restraint. Refer to **Driver or Passenger Seat Head Restraint Replacement**.	
1	Driver or Passenger Seat Head Restraint Guide (Qty: 2) **Procedure** 1. Lower the seat back to gain space between the head restraint guide and the roof. 2. The guide is released from the inboard side by inserting a suitable flat-bladed tool into the slot and prying it inward until released. 3. Using a suitable flat-bladed tool, slide the tool into the guide until you find the slot on the inboard side of the guide. Push inward on the guide slot tab, while pulling upward to remove the guide from the seat back frame.

FRONT SEAT BELT ANCHOR PLATE TENSIONER COVER REPLACEMENT

cardiagn.com

nd ...

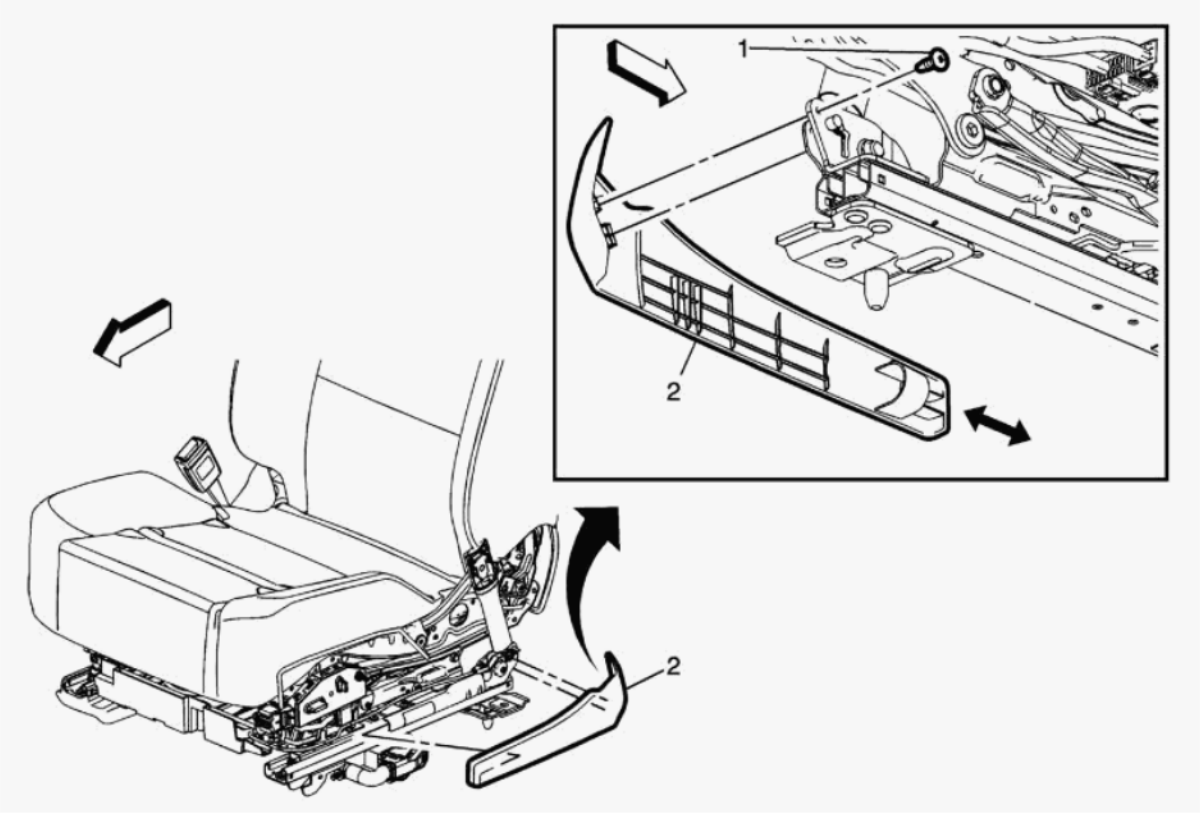


Fig. 12: Front Seat Belt Anchor Plate Tensioner Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front seat cushion outer finish cover. Refer to **Front Seat Cushion Outer Finish Cover Replacement (8-Way Power)Front Seat Cushion Outer Finish Cover Replacement (2-Way Manual)Front Seat Cushion Outer Finish Cover Replacement (22-Way Power)**.	

cardiagn.com

Callout	Component Name
1	Front Seat Belt Anchor Plate Tensioner Cover Screw **CAUTION:** **Refer to** **Fastener Caution .** **Procedure** Raise the seat to the highest seat position.
2	Front Seat Belt Anchor Plate Tensioner Cover **Procedure** 1. Disengage the seat tensioner wiring harness from the cover. 2. Release the rear tab of the cover from the seat track. 3. Slide the finish cover forward off the tensioner rod.

DRIVER OR PASSENGER SEAT ADJUSTER FINISH COVER REPLACEMENT

cardiagn.com

nd ...

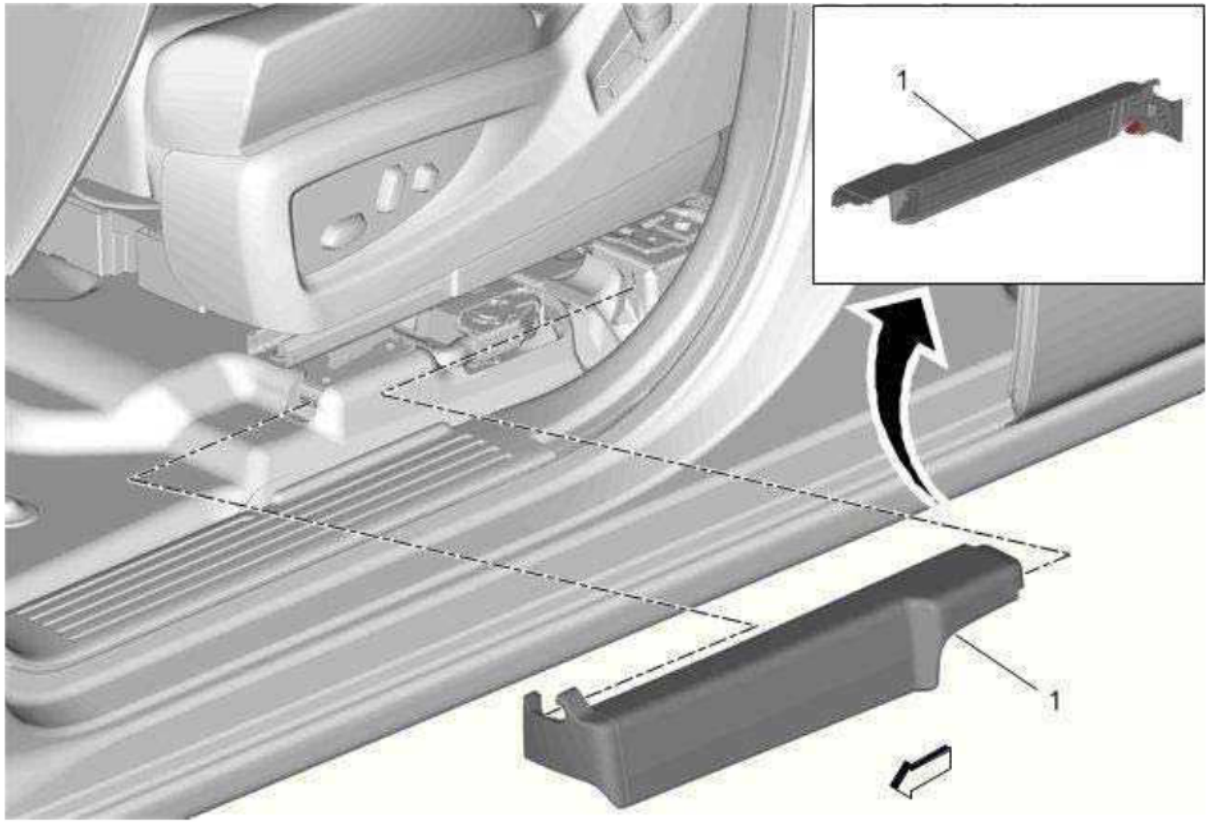


Fig. 13: Driver or Passenger Seat Adjuster Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the front seat adjuster rear finish cover. Refer to **Front Seat Adjuster Rear Finish Cover Replacement**.	
1	Driver or Passenger Seat Adjuster Finish Cover **CAUTION:** **Do not twist the cover during**

cardiagn.com

Callout	Component Name
	removal. Twisting the cover may cause the component to break. **Procedure** 1. Adjust the seat to the full rearward position to gain access to the finish cover. 2. Firmly grasp the adjuster front finish cover and side cover, pulling forward to disengage it from the seat track. 3. Firmly grasp the adjuster finish cover, pulling forward to disengage it from the seat track. 4. Make sure the front cap and side cover are not separated and heat stakes are not broken.

FRONT SEAT OUTER RECLINER FINISH COVER BRACKET REPLACEMENT

cardiagn.com

nd ...

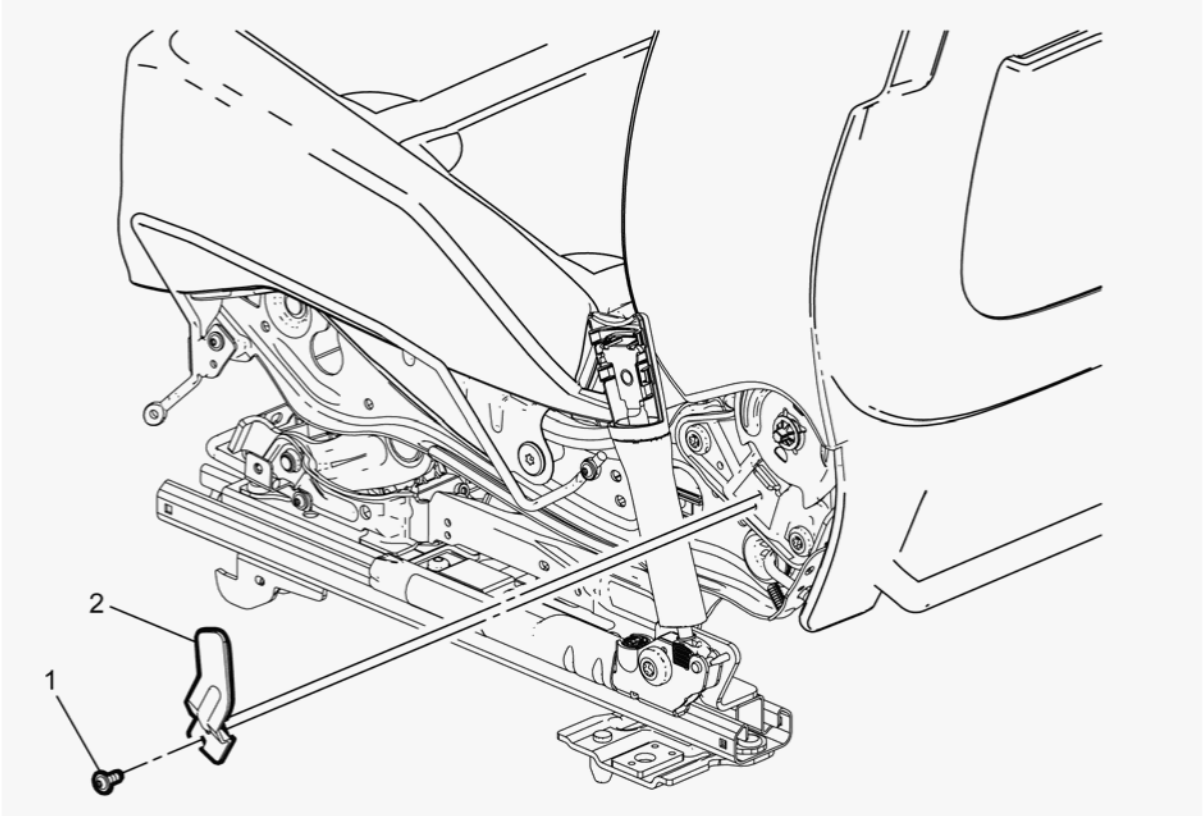



Fig. 14: Front Seat Outer Recliner Finish Cover Bracket
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front seat cushion outer finish cover. Refer to **Front Seat Cushion Outer Finish Cover Replacement (8-Way Power)Front Seat Cushion Outer Finish Cover Replacement (2-Way Manual)Front Seat Cushion Outer Finish Cover Replacement (22-Way Power)**.	

cardiagn.com

Callout	Component Name
1	Front Seat Outer Recliner Finish Cover Bracket Fastener **CAUTION:** **Refer to** **Fastener Caution .** **Tighten** 9 N.m (80 lb in)
2	Front Seat Outer Recliner Finish Cover Bracket

DRIVER OR PASSENGER SEAT INNER RECLINER FINISH COVER REPLACEMENT

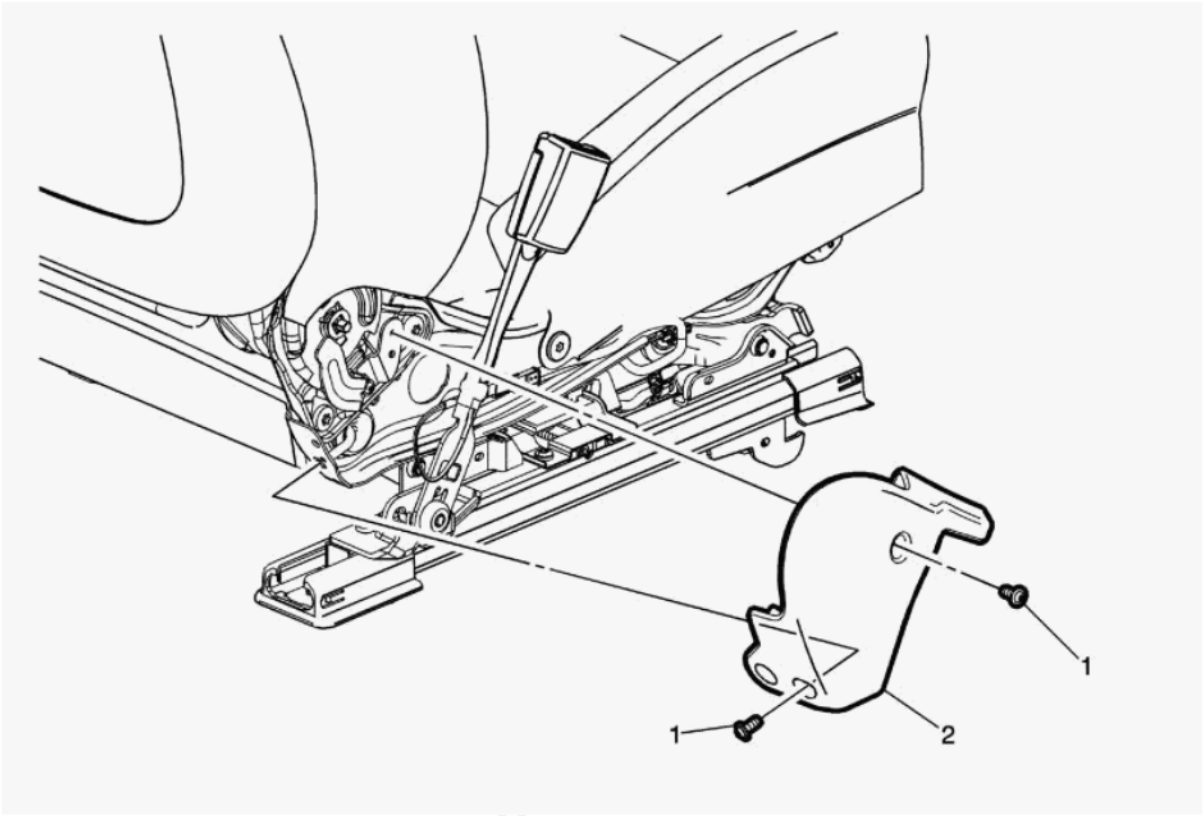

cardiagn.com

Fig. 15: Driver or Passenger Seat Inner Recliner Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the driver or passenger seat. Refer to **Driver or Passenger Seat Removal and Installation**.	
1	Driver or Passenger Seat Inner Recliner Finish Cover Fastener (Qty: 2) **CAUTION:** **Refer to Fastener Caution .**
2	Driver or Passenger Seat Inner Recliner Finish Cover **Procedure** 1. Disengage the seat back cushion finish panel straps and pull back the toe kick cover to gain access to the rear fastener. 2. Remove the inner finish cover by pulling upward.

FRONT SEAT CUSHION CENTER COVER REPLACEMENT

cardiagn.com

nd ...

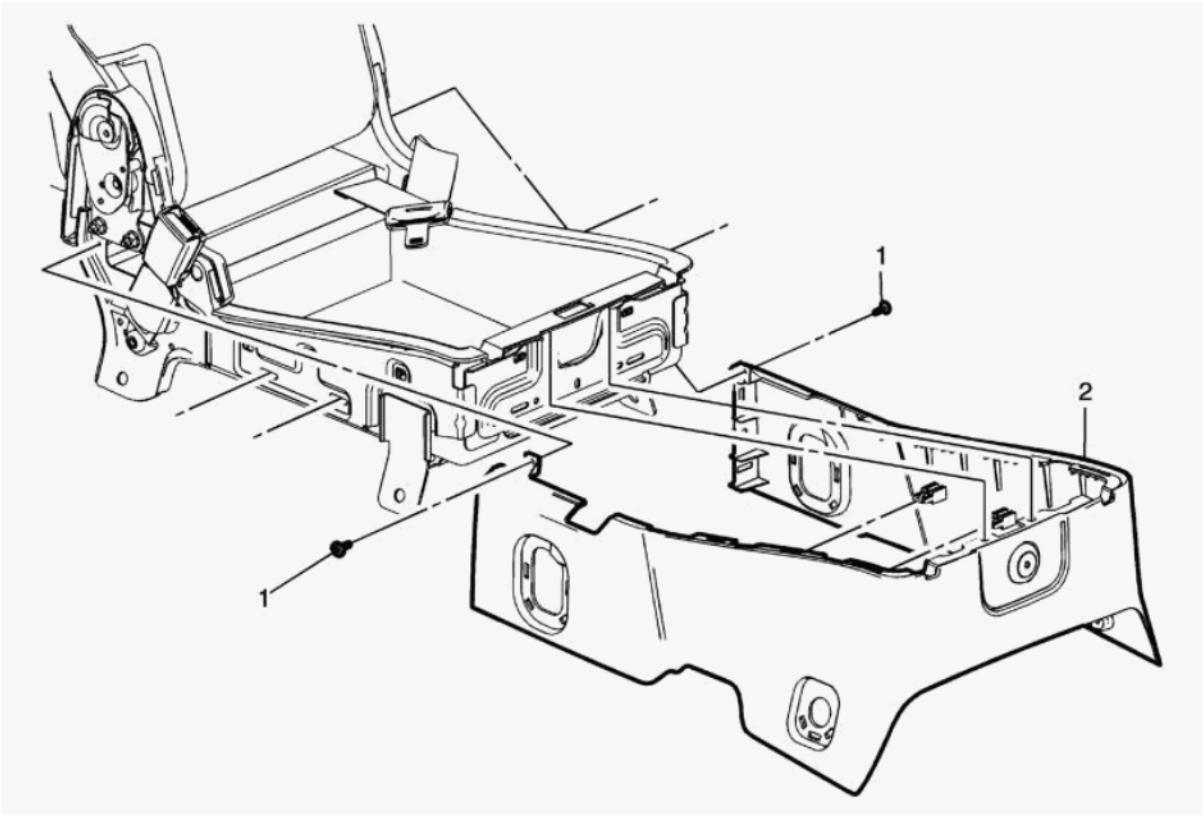



Fig. 16: Front Seat Cushion Center Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the front center seat. Refer to **Front Center Seat Removal and Installation**. 2. Remove the front seat cushion rear frame center cover. Refer to **Front Seat Cushion Rear Frame Center Cover Replacement**. 3. Remove the front seat center armrest hinge finish cover. Refer to **Front Seat Center Armrest Hinge Finish Cover Replacement**. 4. Remove the front seat cushion center pad. Refer to **Front Seat Cushion Center Pad Replacement**.	
1	Front Seat Cushion Center Cover Fastener (Qty: 2) **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to **Fastener Caution** .
2	Front Seat Cushion Center Cover **Procedure** 1. Pull downward on the front of the cushion center cover to disengage it from the storage bin. 2. Pull outward on the cushion center cover sides to disengage it from the center seat frame. 3. Pull forward to disengage the remaining retainers.

FRONT SEAT CUSHION CENTER FRAME REPLACEMENT

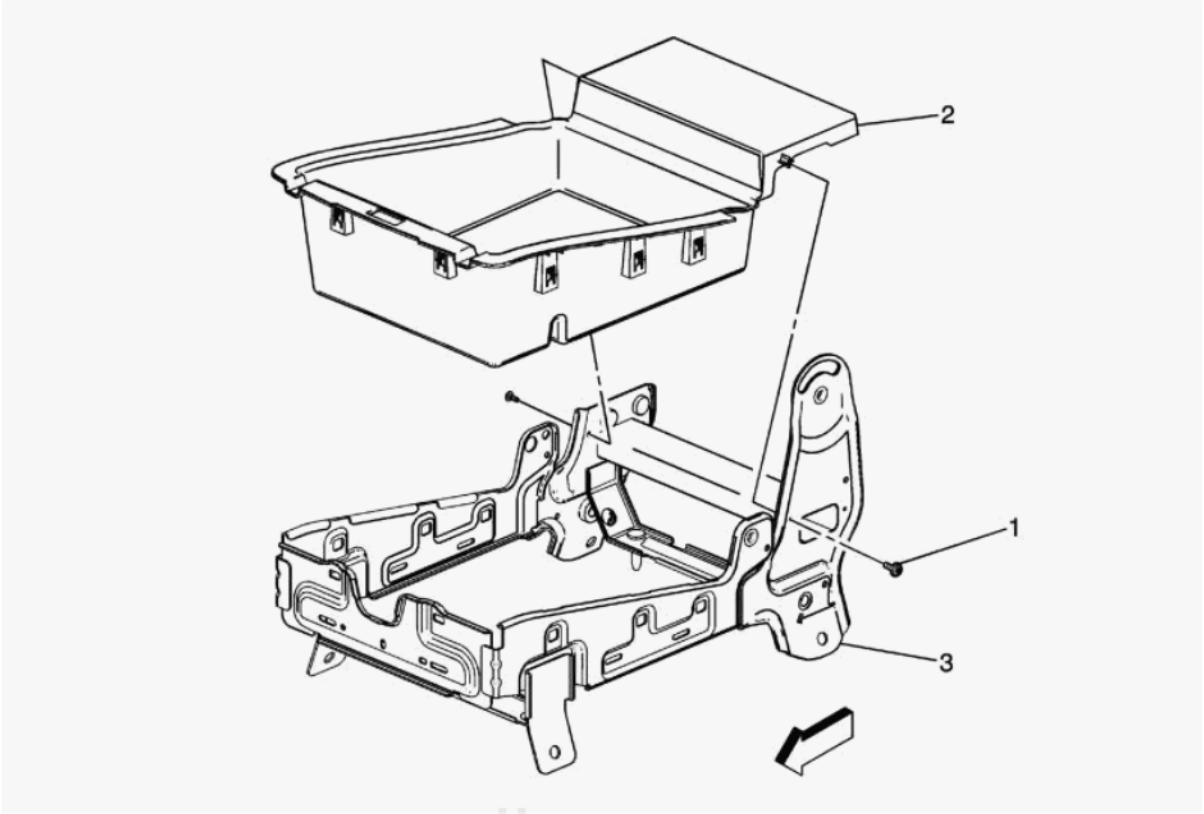

cardiagn.com

Fig. 17: Front Seat Cushion Center Frame
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the front seat cushion center cover. Refer to **Front Seat Cushion Center Cover Replacement**. 2. Remove the front center seat back cushion latch. Refer to **Front Center Seat Back Cushion Latch Replacement**. 3. Remove the front seat center armrest hinge finish inner cover. Refer to **Front Seat Center Armrest Hinge Finish Inner Cover Replacement**.	
1	Front Seat Cushion Center Frame Screw (Qty: 2) **CAUTION:** **Refer to Fastener Caution .**
2	Front Seat Cushion Center Storage Bin
3	Front Seat Cushion Center Frame

FRONT SEAT CUSHION CENTER PAD REPLACEMENT

cardiagn.com

nd ...

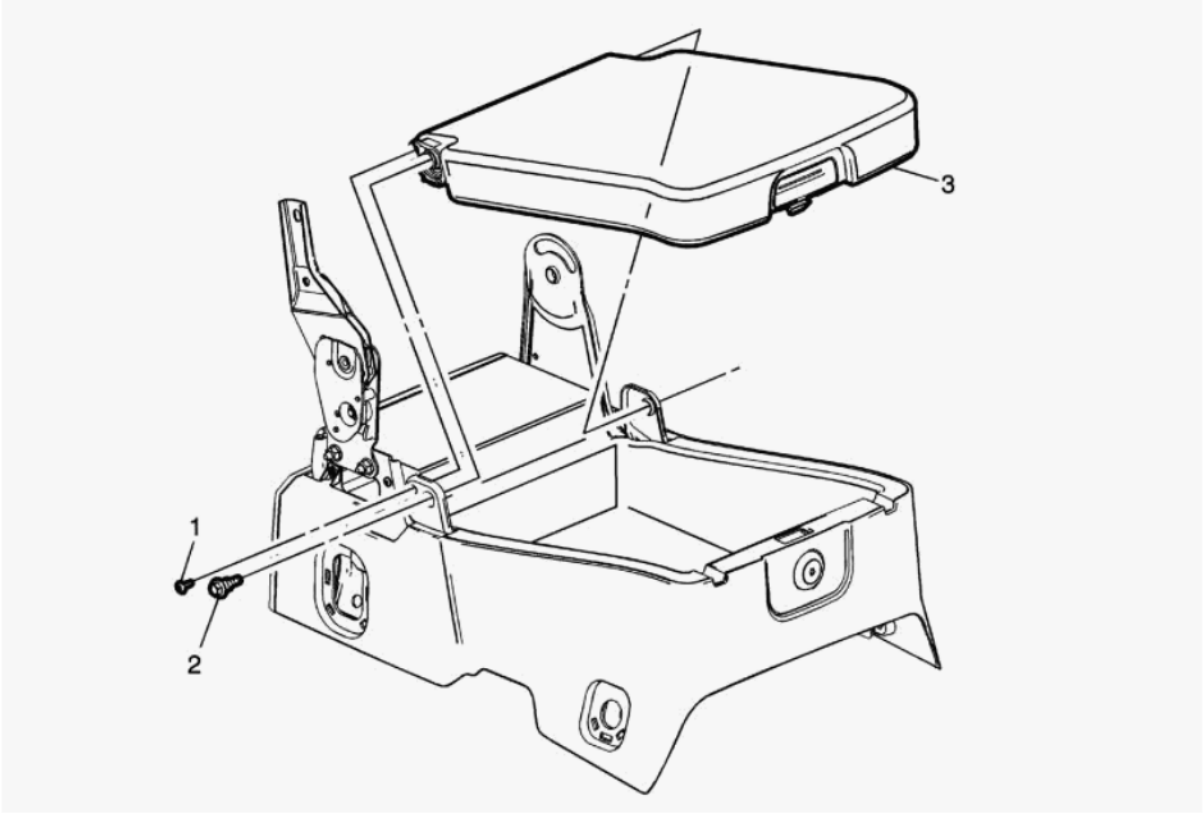



Fig. 18: Front Seat Cushion Center Pad
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front seat center armrest hinge finish inner cover. Refer to **Front Seat Center Armrest Hinge Finish Inner Cover Replacement**.	
1	Front Seat Cushion Center Pad Screw **CAUTION:** **Refer to** **Fastener** **Caution** .

cardiagn.com

Callout	Component Name
2	Front Seat Cushion Center Pad Bolt **CAUTION:** **Refer to** **Fastener Caution** . **Tighten** 9 N.m (80 lb in)
3	Front Seat Cushion Center Pad

FRONT SEAT CUSHION CENTER STOWAGE COMPARTMENT LOCK CYLINDER REPLACEMENT

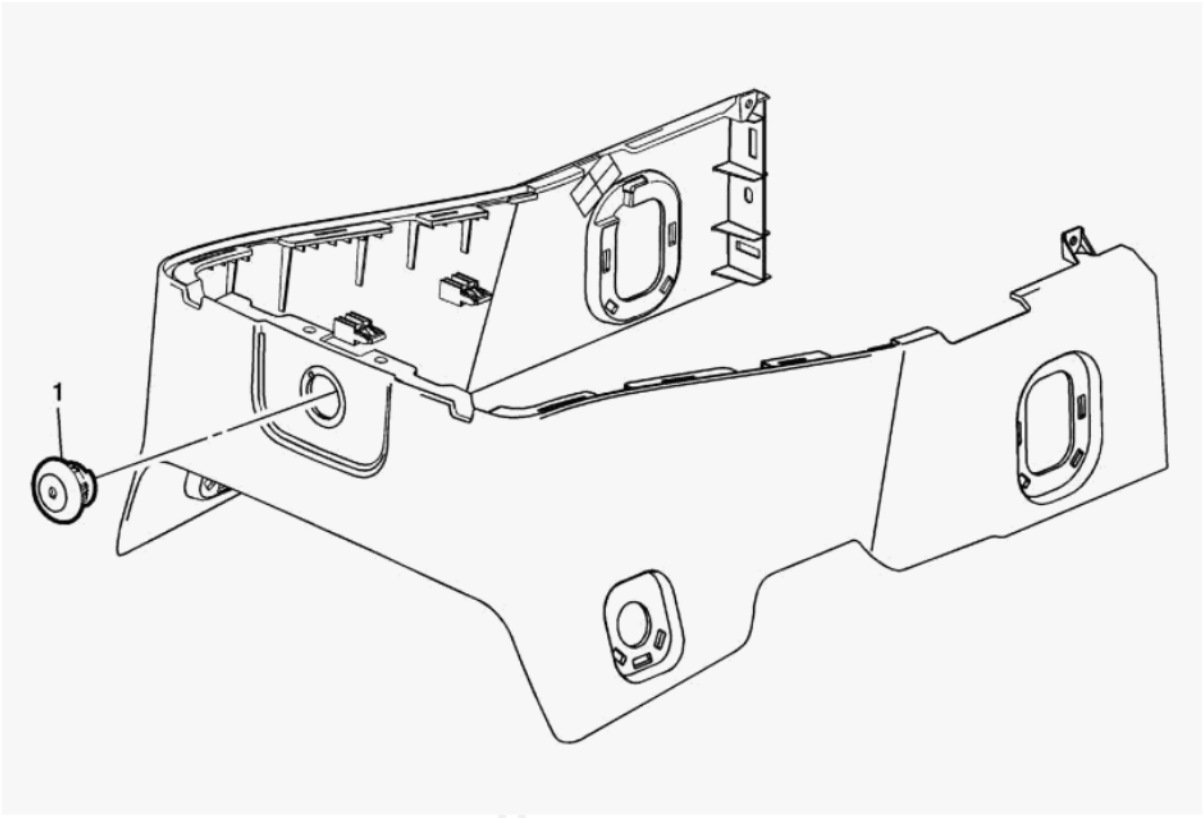


cardiagn.com

Fig. 19: Front Seat Cushion Center Stowage Compartment Lock Cylinder Case
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front seat cushion center cover. Refer to **Front Seat Cushion Center Cover Replacement**.	
1	Front Seat Cushion Center Stowage Compartment Lock Cylinder Case **Procedure** 1. Use a flat-bladed tool to release the lock clamp from the lock cylinder assembly. 2. Remove the lock cylinder by sliding it forward through the front seat cushion center cover.

FRONT SEAT CENTER ARMREST REPLACEMENT

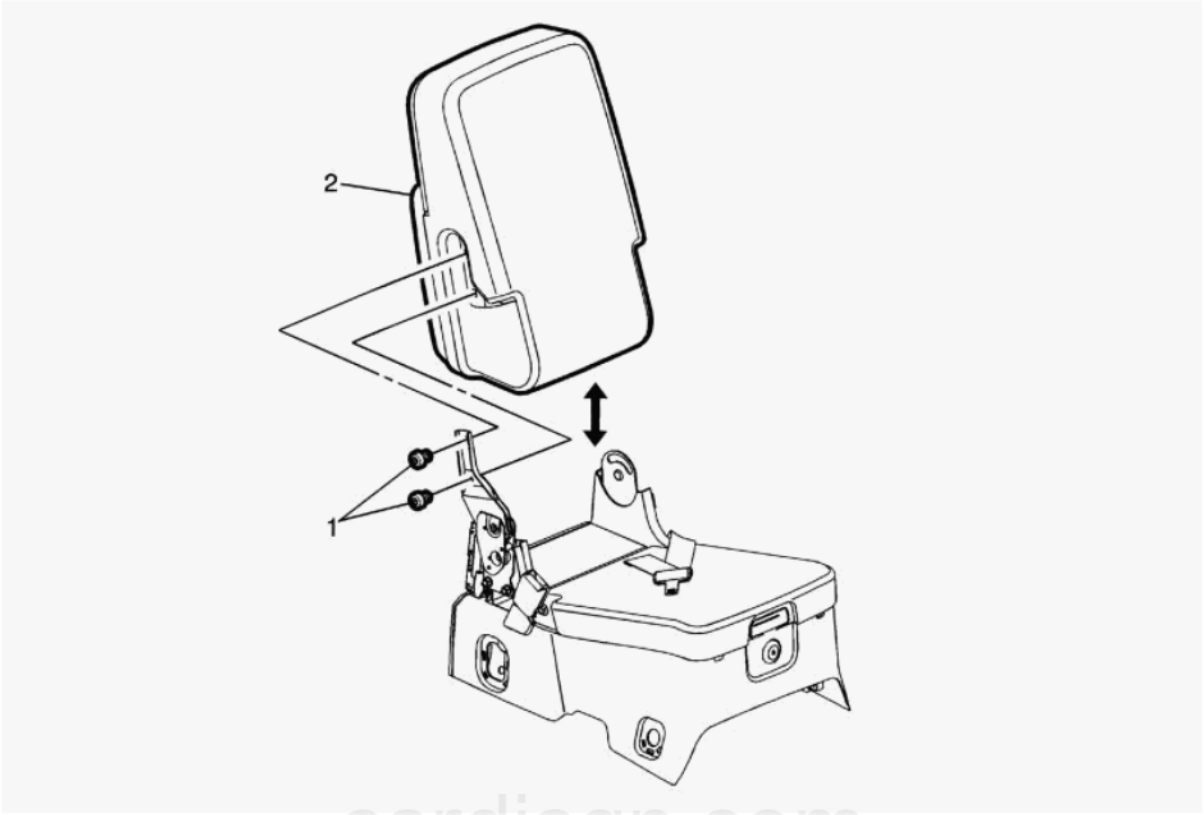

cardiagn.com

Fig. 20: Front Seat Center Armrest
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the front center seat back cushion latch upper cover. Refer to **Front Center Seat Back Cushion Latch Upper Cover Replacement**. 2. Remove the front seat cushion rear frame center cover. Refer to **Front Seat Cushion Rear Frame Center Cover Replacement**.	
1	Front Seat Center Armrest screw (Qty: 2) **CAUTION:** **Refer to Fastener Caution .** **Tighten** 9 N.m (80 lb in)
2	Front Seat Center Armrest

FRONT SEAT CENTER ARMREST HINGE FINISH COVER REPLACEMENT

cardiagn.com

nd ...

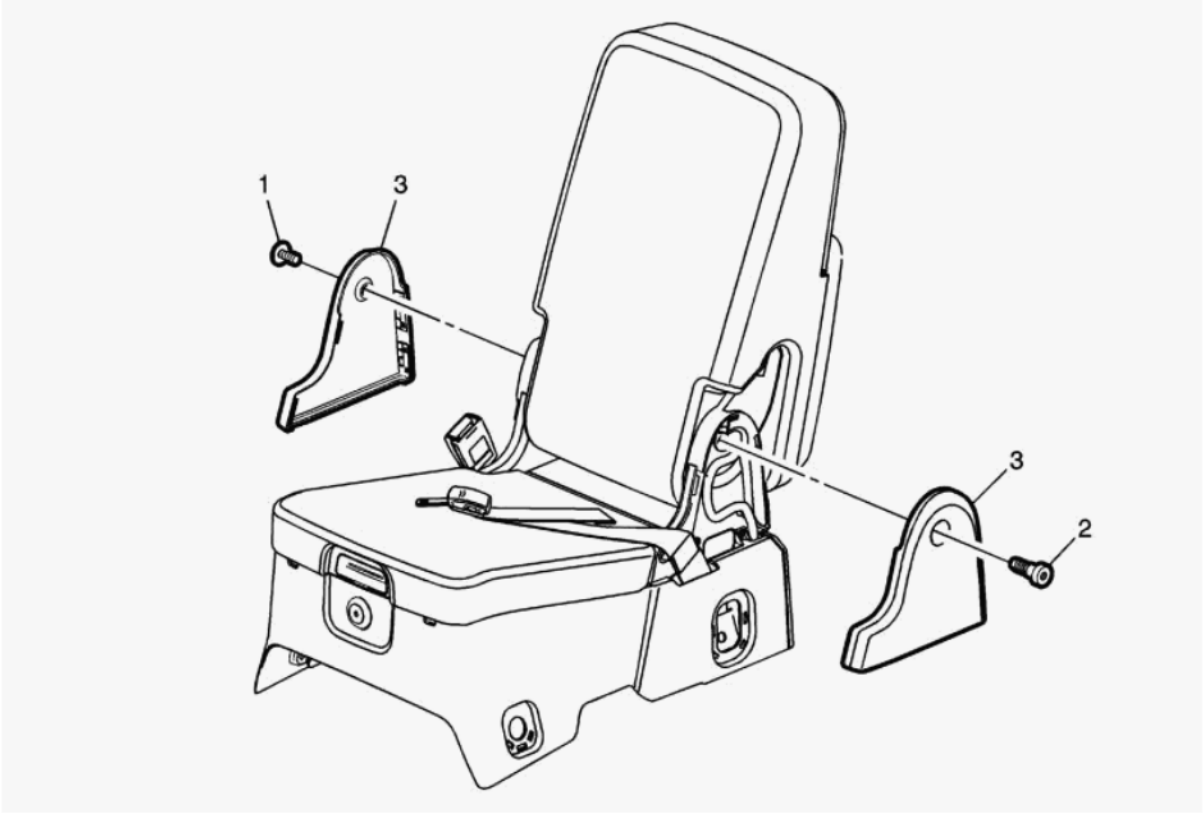


Fig. 21: Front Seat Center Armrest Hinge Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front center seat. Refer to **Front Center Seat Removal and Installation**.	
1	Front Seat Center Armrest Hinge Finish Cover Cap **NOTE:** **Use a trim tool to aid in the removal of the push in cap.**

cardiagn.com

Callout	Component Name
2	Front Seat Center Armrest Hinge Finish Cover Bolt **CAUTION:** **Refer to** **Fastener Caution .** **Tighten** 9 N.m (80 lb in)
3	Front Seat Center Armrest Hinge Finish Cover (Qty: 2) **Preliminary Procedure** Use a flat bladed tool to release the plastic tabs attaching the finish cover to the inner finish cover.

FRONT SEAT CENTER ARMREST HINGE FINISH INNER COVER REPLACEMENT

cardiagn.com

nd ...

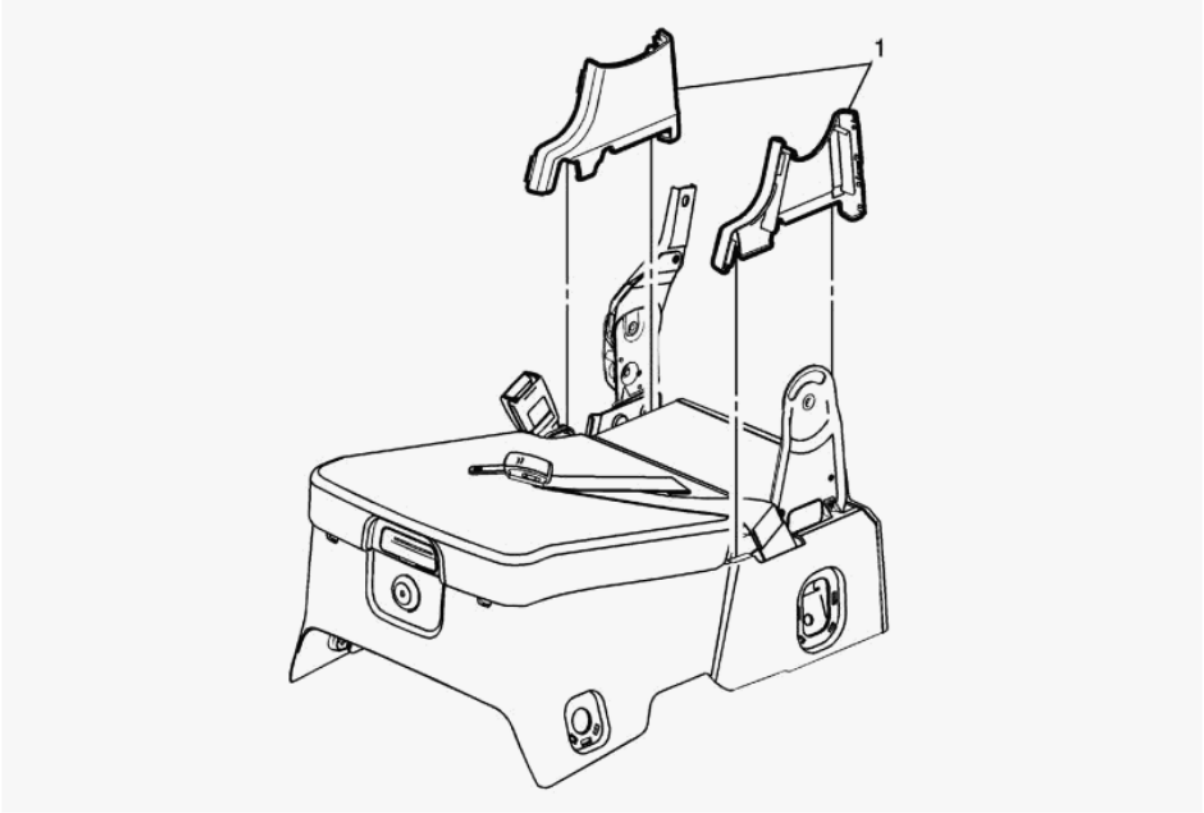


Fig. 22: Front Seat Center Armrest Hinge Finish Inner Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front seat center armrest. Refer to **Front Seat Center Armrest Replacement**.	
1	Front Seat Center Armrest Hinge Finish Inner Cover (Qty: 2) **Procedure** Use a flat bladed tool to release the plastic tabs attaching the inner finish cover to the outer finish cover.

FRONT SEAT CUSHION REAR FRAME CENTER COVER REPLACEMENT

cardiagn.com

nd ...

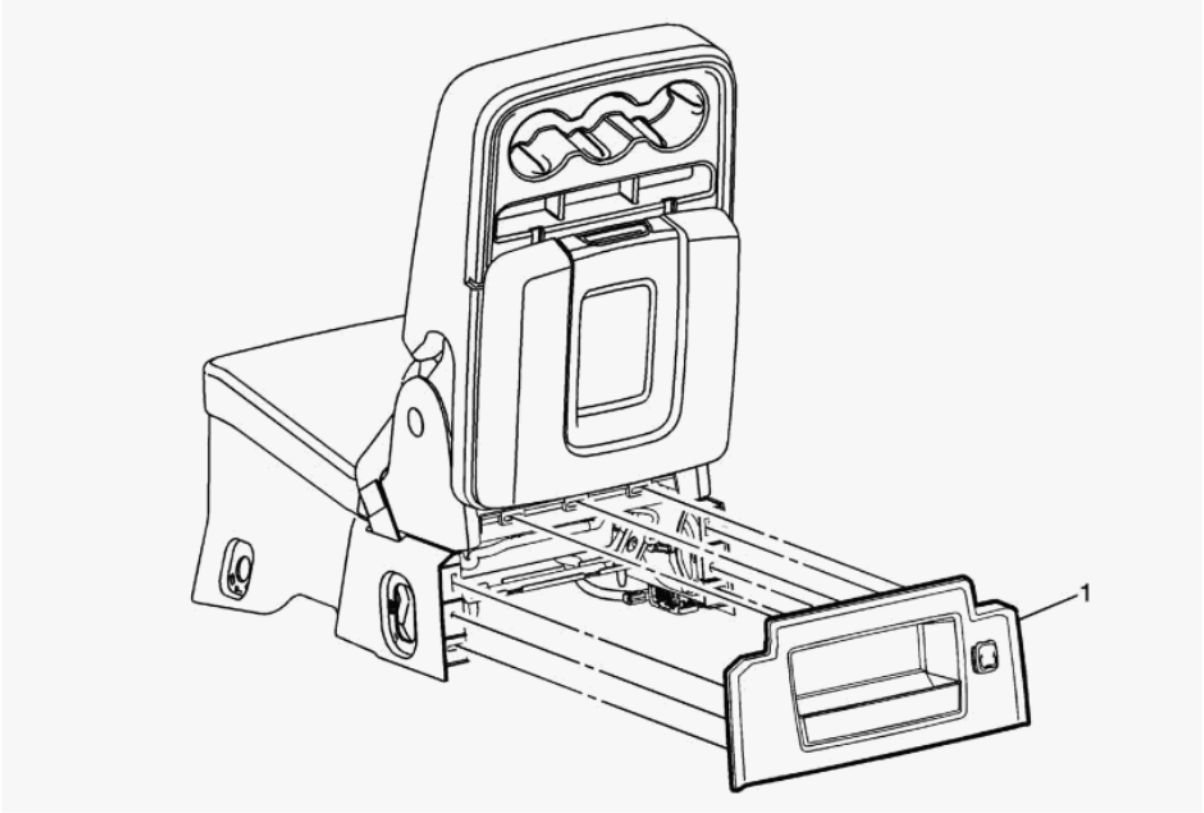


Fig. 23: Front Seat Cushion Rear Frame Center Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Seat Cushion Rear Frame Center Cover **Procedure** 1. Disconnect the electrical connection. 2. Gently pull rearward on the top of the cover to disengage it from the storage bin. 3. Gently pull rearward on the sides of the cover to disengage the remaining retainers from the center cushion cover.

DRIVER OR PASSENGER SEAT CUSHION FRAME REPLACEMENT (EXCEPT PASSENGER SIDE WITH 6-WAY POWER)

cardiagn.com

nd ...

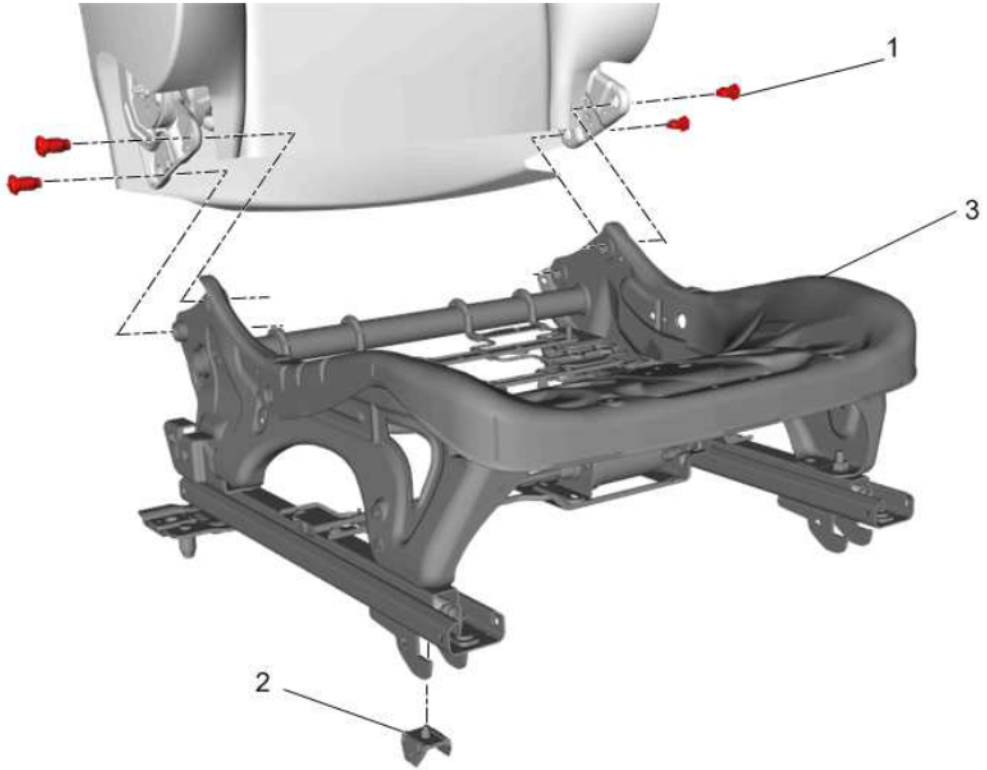


Fig. 24: Driver or Passenger Seat Cushion Frame (Except Passenger Side with 6-way Power)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove Front Seat Cushion Cover and Pad. Refer to **Front Seat Cushion Cover and Pad Replacement**	
1	Driver or Passenger Seat Back Frame Fastener (Qty: 4) **CAUTION:** **Refer to Fastener Caution .** **Procedure**

cardiagn.com

Callout	Component Name
	1. Remove the front seat recliner control bracket. 2. Clean the thread locking compound from the bolts and reapply new thread locker. The bolts are held in by Blue 242Â® medium strength loctite. **Tighten** 50 N.m (37 lb ft)
2	Front Seat Adjuster Front Spacer **NOTE:** **Installed on the outboard side only.**
3	Driver or Passenger Seat Cushion Frame **Procedure** 1. Disconnect the electrical connector. 2. Transfer components as necessary.

DRIVER OR PASSENGER SEAT CUSHION FRAME REPLACEMENT (PASSENGER SIDE WITH 6-WAY POWER)

cardiagn.com

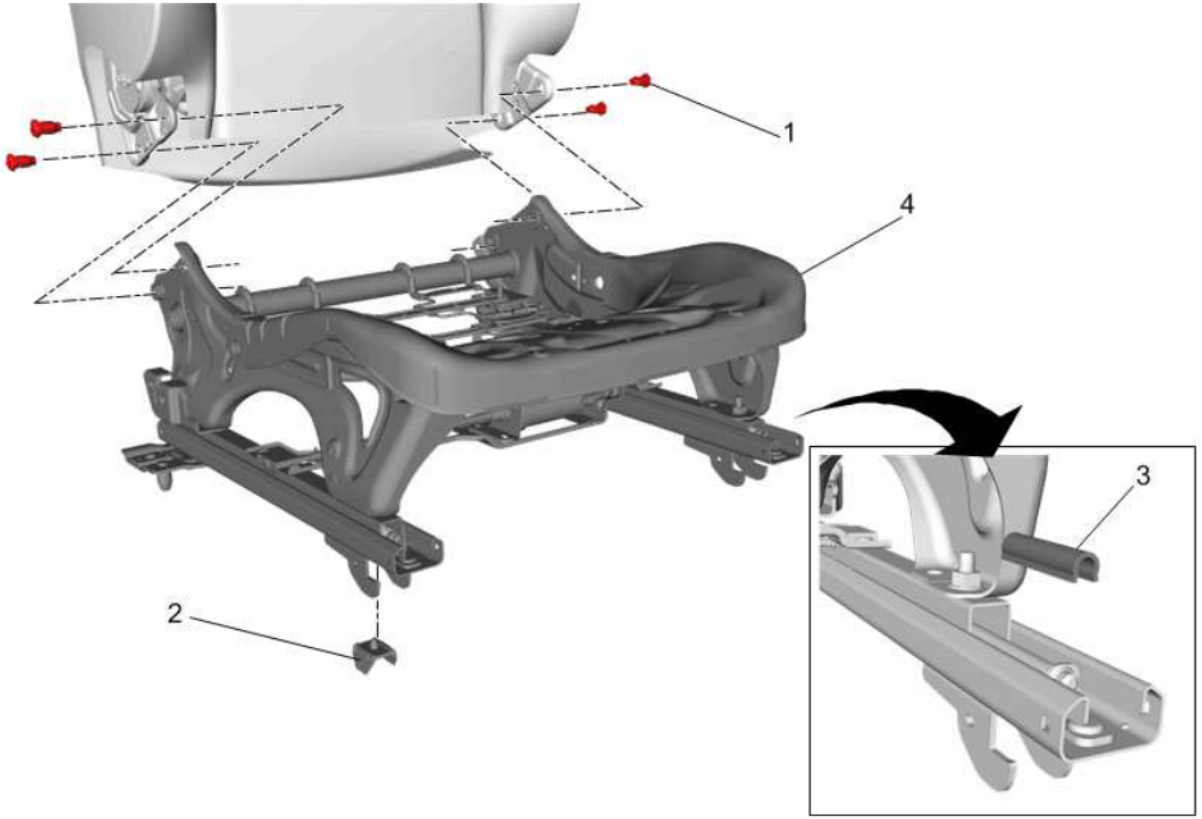


Fig. 25: Driver or Passenger Seat Cushion Frame (Passenger Side with 6-way Power)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove Front Seat Cushion Cover and Pad. Refer to **Front Seat Cushion Cover and Pad Replacement**	
1	Driver or Passenger Seat Back Frame Fastener (Qty: 4) **CAUTION:** **Refer to Fastener Caution .** **Procedure**

cardiagn.com

Callout	Component Name
	1. Remove the front seat recliner control bracket. 2. Clean the thread locking compound from the bolts and reapply new thread locker. The bolts are held in by Blue 242Â® medium strength loctite. **Tighten** 50 N.m (37 lb ft)
2	Front Seat Adjuster Front Spacer **NOTE:** **Installed on the outboard side only.**
3	Front Seat Adjuster Stop (Qty: 2) **NOTE:** **When replacing the seat cushion frame, ensure the front seat adjuster stops are installed. The frame may need to be adjusted to access the stops.**
4	Driver or Passenger Seat Cushion Frame **Procedure**

cardiagn.com

Callout	Component Name
	1. Disconnect the electrical connector. 2. Transfer components as necessary.

FRONT SEAT CUSHION PAD SUPPORT REPLACEMENT (22-WAY POWER)

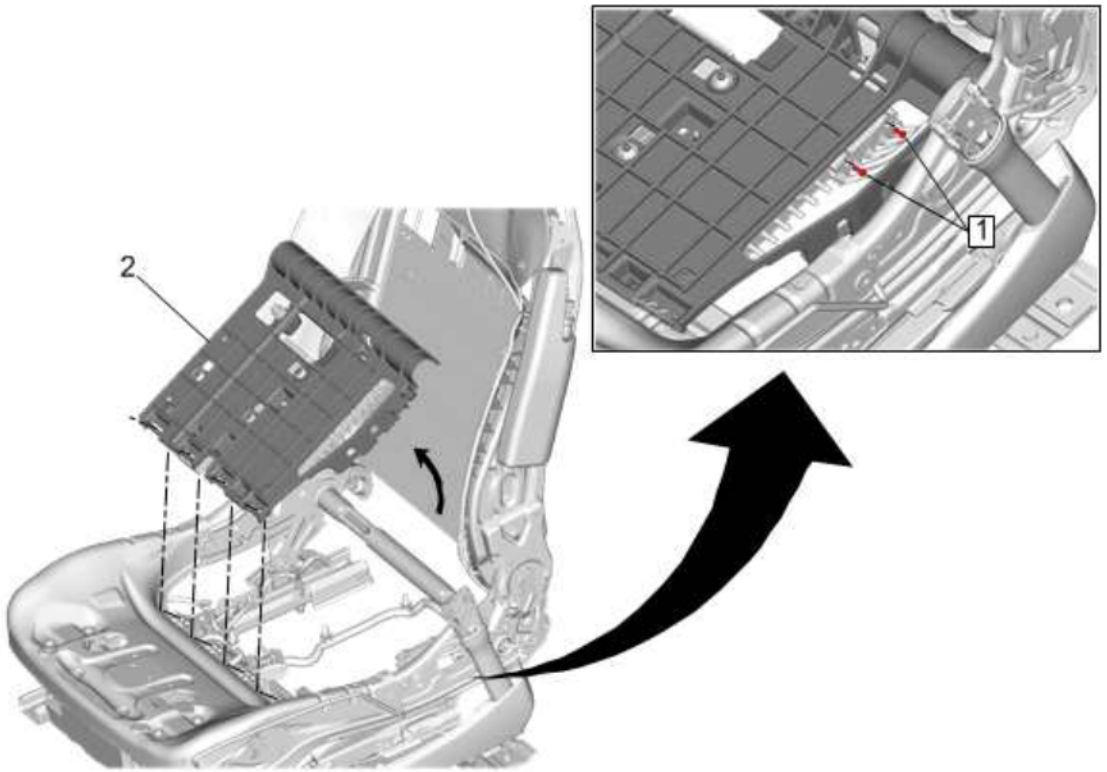


Fig. 26: Front Seat Cushion Pad Support (22-Way Power)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
WARNING: **Refer to SIR Warning .**	

cardiagn.com

Callout	Component Name
Preliminary Procedures 1. Remove Front Seat Cushion Cover and Pad. Refer to **Front Seat Cushion Cover and Pad Replacement** 2. Remove Driver or Passenger Seat Back Cover and Pad (22-Way Power). Refer to **Driver or Passenger Seat Back Cover and Pad Replacement (22-Way Power)**	
1	Front Seat Lumbar Support Bladder Bolt (Qty: 2) **CAUTION:** **Refer to Fastener Caution .** **Tighten** 0.6 N.m (6 lb in)
2	Front Seat Cushion Pad Support **Procedure** 1. Disconnect the electrical connector. 2. Transfer components as necessary. 3. Refer to **Control Module References** for programming and set up information, if required.

FRONT SEAT CUSHION OUTER FINISH COVER REPLACEMENT (8-WAY POWER)

cardiagn.com

nd ...

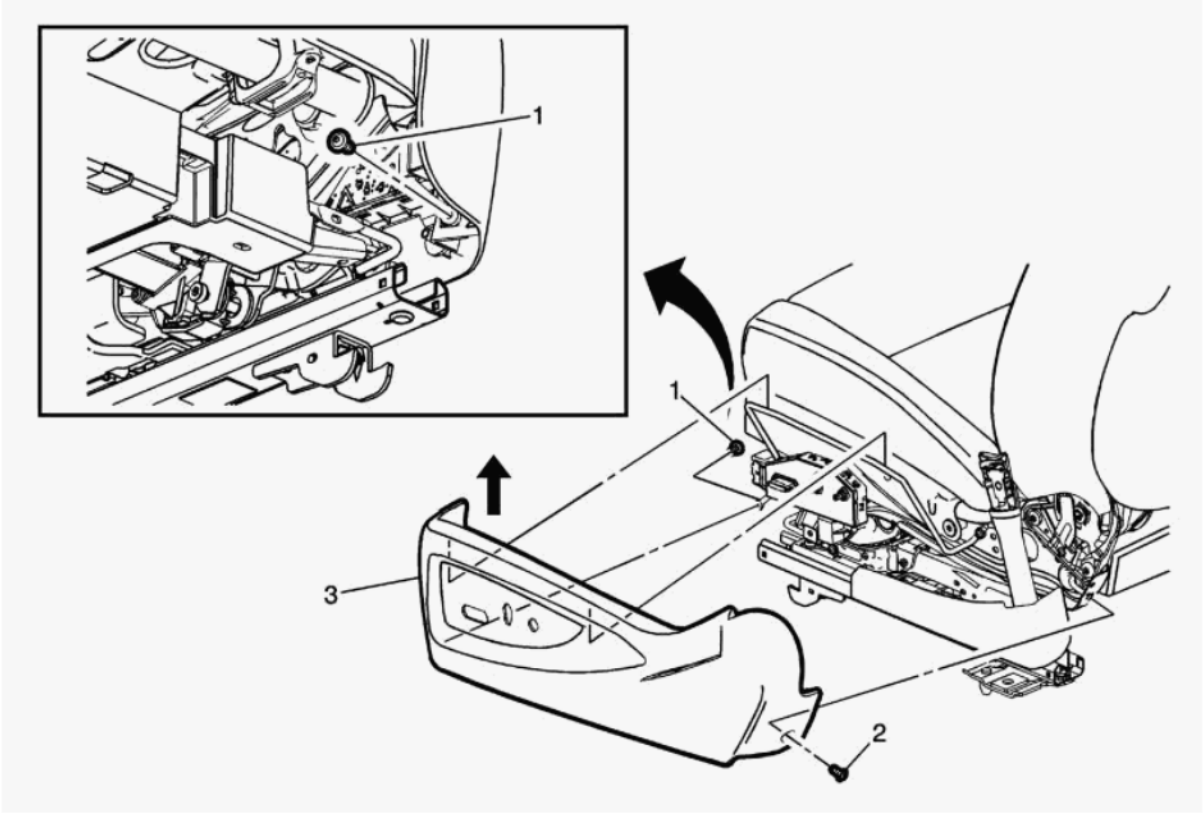


Fig. 27: Front Seat Cushion Outer Finish Cover (8-Way Power)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the seat belt from the front seat belt anchor plate tensioner. Refer to **Front Seat Belt Anchor Plate Tensioner Replacement**	
1	Front Seat Cushion Outer Finish Cover Front Fastener **CAUTION:** **Refer to Fastener Caution .**

cardiagn.com

Callout	Component Name
2	Front Seat Cushion Outer Finish Cover Rear Fastener **CAUTION:** **Refer to** **Fastener Caution .**
3	Front Seat Cushion Outer Finish Cover **Procedure** 1. Disengage the seat back cushion finish panel straps and pull back the toe kick cover to gain access to the rear fastener. 2. Remove the outer finish cover by pulling upward near the retainer clip locations. 3. Disconnect the electrical connectors. 4. If replacing the finish cover, transfer components as necessary.

FRONT SEAT CUSHION OUTER FINISH COVER REPLACEMENT (2-WAY MANUAL)

cardiagn.com

nd ...

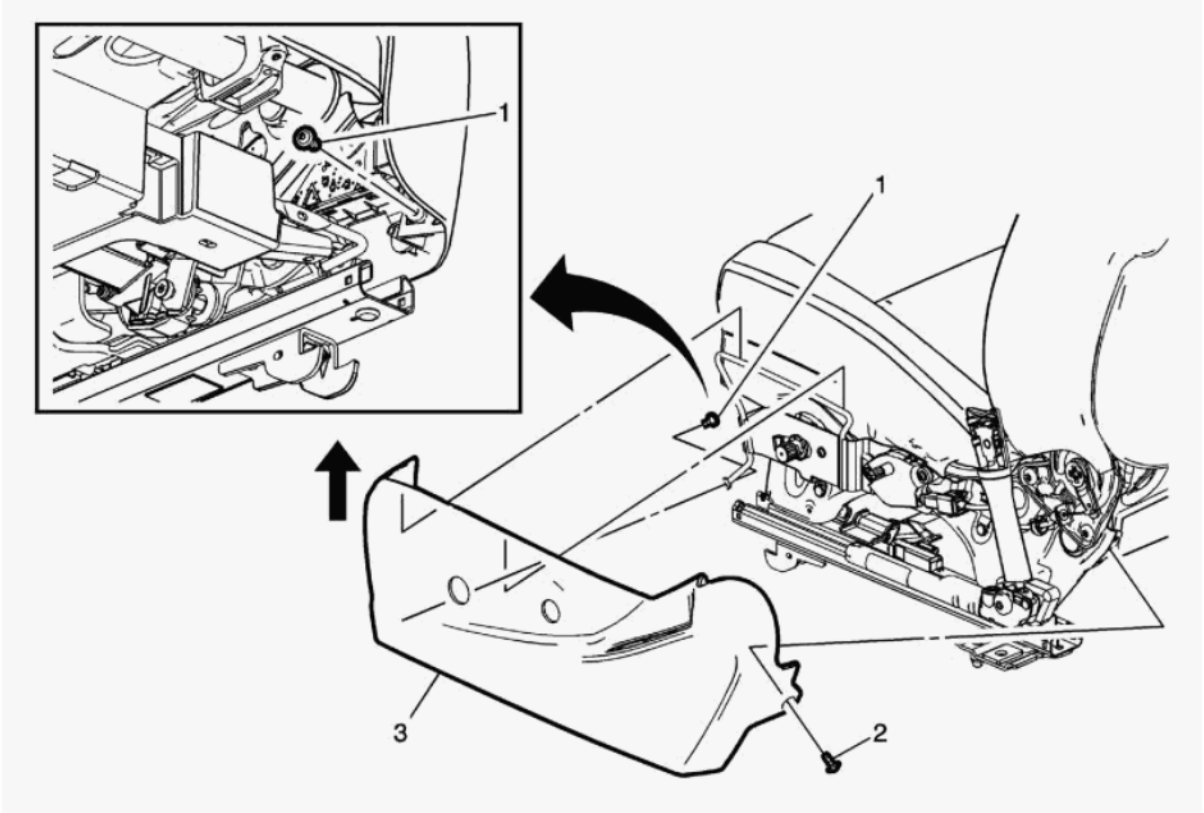


Fig. 28: Front Seat Cushion Outer Finish Cover (2-Way Manual)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the seat belt from the pretensioner. 2. Remove the front seat back recliner handle. Refer to **Front Seat Back Recliner Handle Replacement (2 Way Manual)**. 3. Remove the driver seat lumbar support actuator lever, if equipped. Refer to **Driver Seat Lumbar Support Actuator Lever Replacement**.	
1	Front Seat Cushion Outer Finish Cover Front Fastener **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to Fastener Caution .
2	Front Seat Cushion Outer Finish Cover Rear Fastener **CAUTION:** **Refer to Fastener Caution .**
3	Front Seat Cushion Outer Finish Cover **Procedure** 1. Disengage the seat back cushion finish panel straps and pull back the toe kick cover to gain access to the rear fastener. 2. Remove the outer finish cover by pulling upward near the retainer clip locations. 3. Disconnect the electrical connectors. 4. If replacing the finish cover, transfer components as necessary.

FRONT SEAT CUSHION OUTER FINISH COVER REPLACEMENT (22-WAY POWER)

cardiagn.com

nd ...

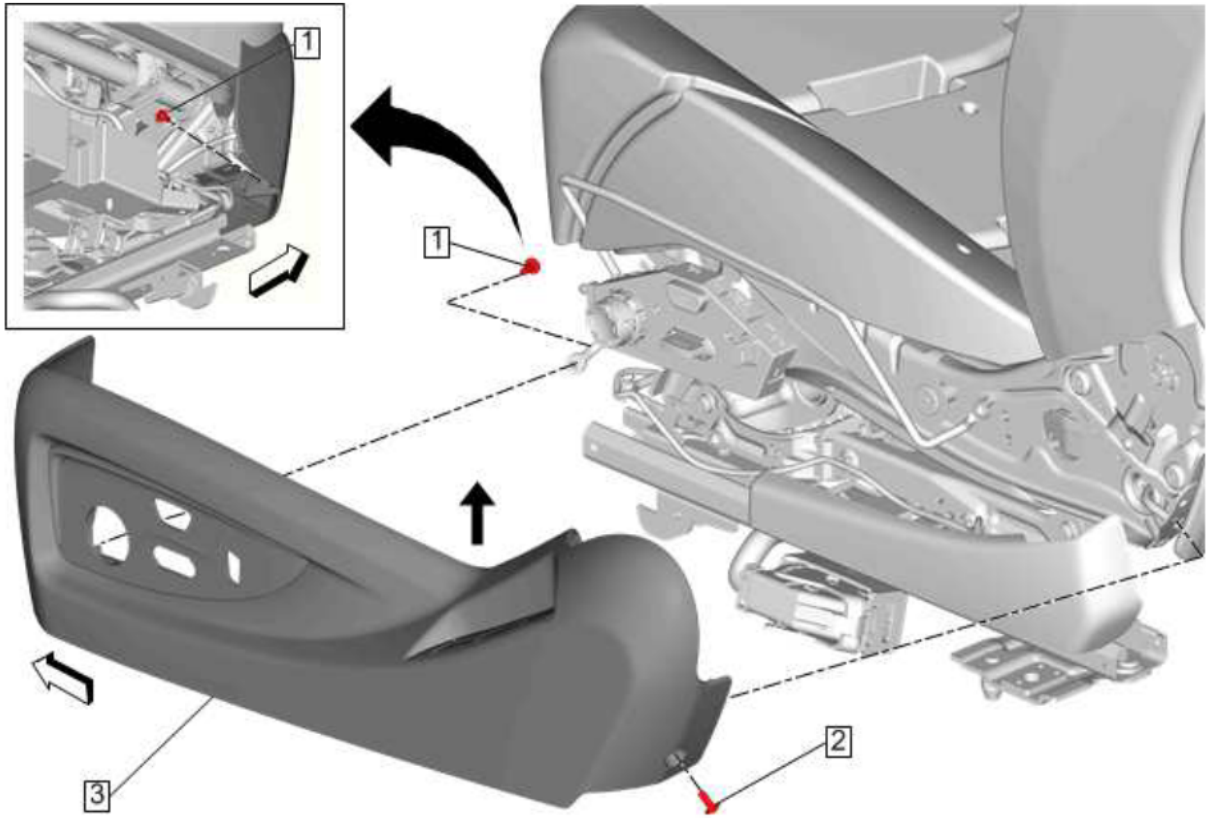


Fig. 29: Front Seat Cushion Outer Finish Cover (22-Way Power)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove Front Seat Recliner Knob Replacement (22-Way Power). Refer to **Front Seat Recliner Knob Replacement (22 Way Power)** 2. Remove Front Seat Adjuster Knob (22-Way Power). Refer to **Front Seat Adjuster Knob Replacement (22-Way Power)** 3. Disconnect the seat belt from the tensioner. Refer to **Front Seat Belt Anchor Plate Tensioner Replacement**	
1	Front Seat Cushion Outer Finish Cover Front Screw **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to Fastener Caution . **Tighten** 3 N.m (26 lb in)
2	Front Seat Cushion Outer Finish Cover Rear Screw **Tighten** 3 N.m (26 lb in) **Procedure** Disengage the seat back cushion finish panel straps and pull back the toe kick cover to gain access to the rear fastener.
3	Front Seat Cushion Outer Finish Cover **CAUTION:** **Do not twist the cover during removal. Twisting the cover may cause the component to break.** **Procedure** 1. Remove the outer finish cover by pulling upward near the retainer clip locations. 2. Disconnect all electrical connectors. 3. Transfer components as necessary.

FRONT SEAT CUSHION COVER AND PAD REPLACEMENT

cardiagn.com

nd ...

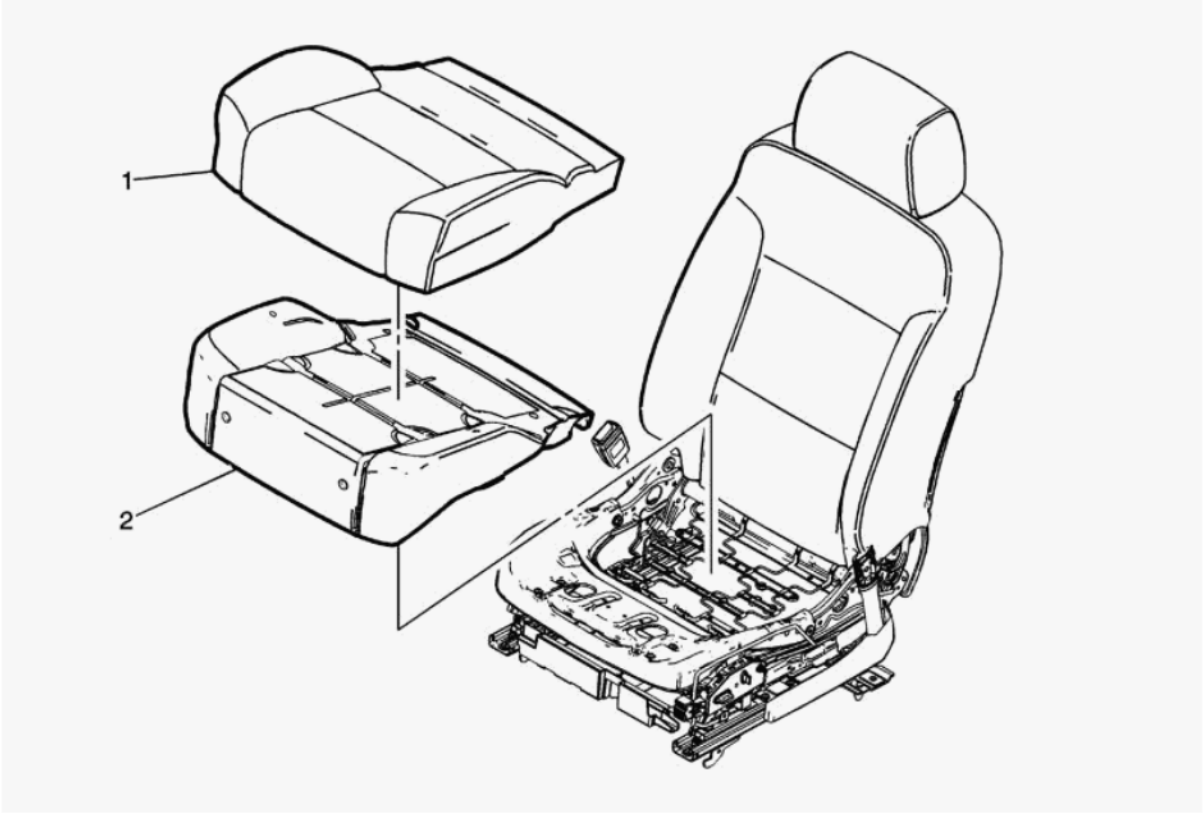


Fig. 30: Front Seat Cushion Cover and Pad
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
WARNING: **Refer to SIR Warning .** **Preliminary Procedures** 1. Disable the SIR system. Refer to **SIR Disabling and Enabling** . 2. Remove the driver or passenger seat. Refer to **Driver or Passenger Seat Removal and Installation**. 3. Remove the driver or passenger seat inner recliner finish cover. Refer to **Driver or Passenger Seat Inner Recliner Finish Cover Replacement**.	

cardiagn.com

Callout	Component Name
4. Remove the front seat cushion outer finish cover. Refer to **Front Seat Cushion Outer Finish Cover Replacement (8-Way Power)Front Seat Cushion Outer Finish Cover Replacement (2-Way Manual)Front Seat Cushion Outer Finish Cover Replacement (22-Way Power)**. 5. Whenever the inflatable restraint passenger presence system or any component of the passenger presence system is removed. Refer to **Control Module References** .	
1	Front Seat Cushion Cover **Procedure** 1. Remove the front seat cushion cover retainer fasteners and retainer. 2. Disengage the J-channel retainers from the seat cushion frame. 3. Disconnect the blower ventilation duct and electrical connectors, if equipped. 4. If the seat is equipped with lane departure warning actuators, release the electrical harness and disconnect the electrical connector. 5. Remove the seat cushion cover and pad from the seat cushion frame as an assembly.
2	Front Seat Cushion Pad **Procedure** 1. Separate the seat cushion cover from the seat cushion pad by releasing the hook and loop retainers, U-channels and pulling the cover away from the pad. 2. Transfer part as necessary.

DRIVER OR PASSENGER SEAT BACK COVER AND PAD REPLACEMENT

cardiagn.com

nd ...

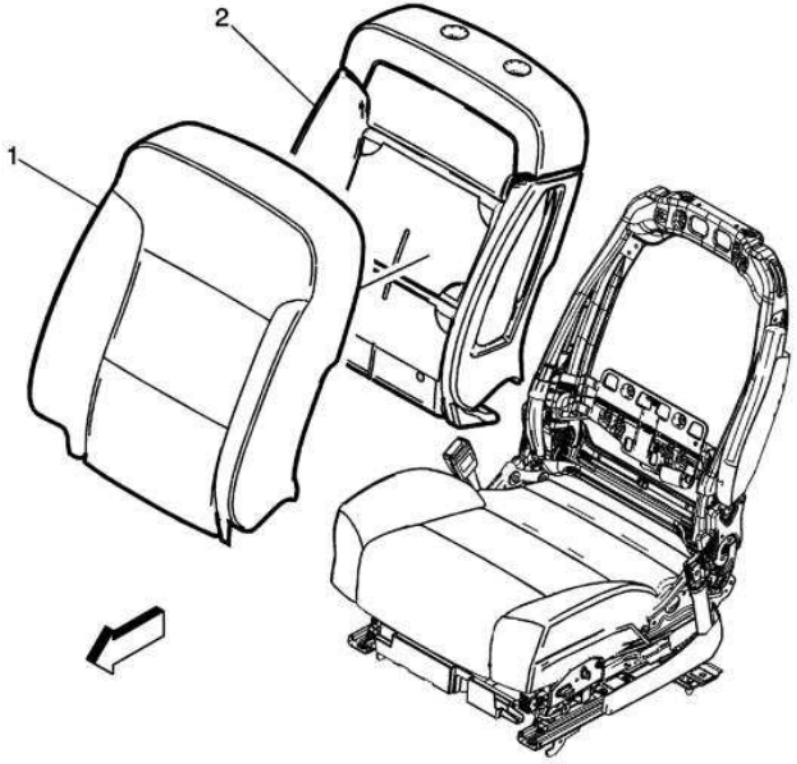


Fig. 31: Driver or Passenger Seat Back Cover and Pad
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
WARNING: **Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal**	

cardiagn.com

Callout	Component Name
mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in personal injury.	
Preliminary Procedures 1. Remove Driver or Passenger Seat. Refer to **Driver or Passenger Seat Removal and Installation** 2. Remove Front Seat Back Cushion Finish Panel. Refer to **Front Seat Back Cushion Finish Panel Replacement** 3. Remove Front Seat Cushion Outer Finish Cover. Refer to **Front Seat Cushion Outer Finish Cover Replacement (8-Way Power)Front Seat Cushion Outer Finish Cover Replacement (2-Way Manual)Front Seat Cushion Outer Finish Cover Replacement (22-Way Power)** 4. Remove Driver or Passenger Seat Inner Recliner Finish Cover. Refer to **Driver or Passenger Seat Inner Recliner Finish Cover Replacement** 5. Remove Front Seat Head Restraint Guide. Refer to **Front Seat Head Restraint Guide Replacement**	
1	Driver or Passenger Seat Back Cushion Cover

cardiagn.com

Callout	Component Name
	Procedure 1. Disengage the j-channel retainers from the seat back cushion frame. 2. Loosen the seat back cushion cover and pad, release the material from around the outboard seat back airbag and the inboard seat back airbag, if equipped. 3. Disconnect the blower from the seat back cushion pad, if equipped. 4. Disconnect the electrical connectors that attach to the seat back cushion, if equipped. 5. Remove the seat back cushion cover and pad from the seat cushion frame as an assembly.
2	Driver or Passenger Seat Back Cushion Pad **Procedure** Pull the cover away from the pad to disengage the hook and loop fasteners and the U-channel.

DRIVER OR PASSENGER SEAT BACK COVER AND PAD REPLACEMENT (22-WAY POWER)

cardiagn.com

nd ...

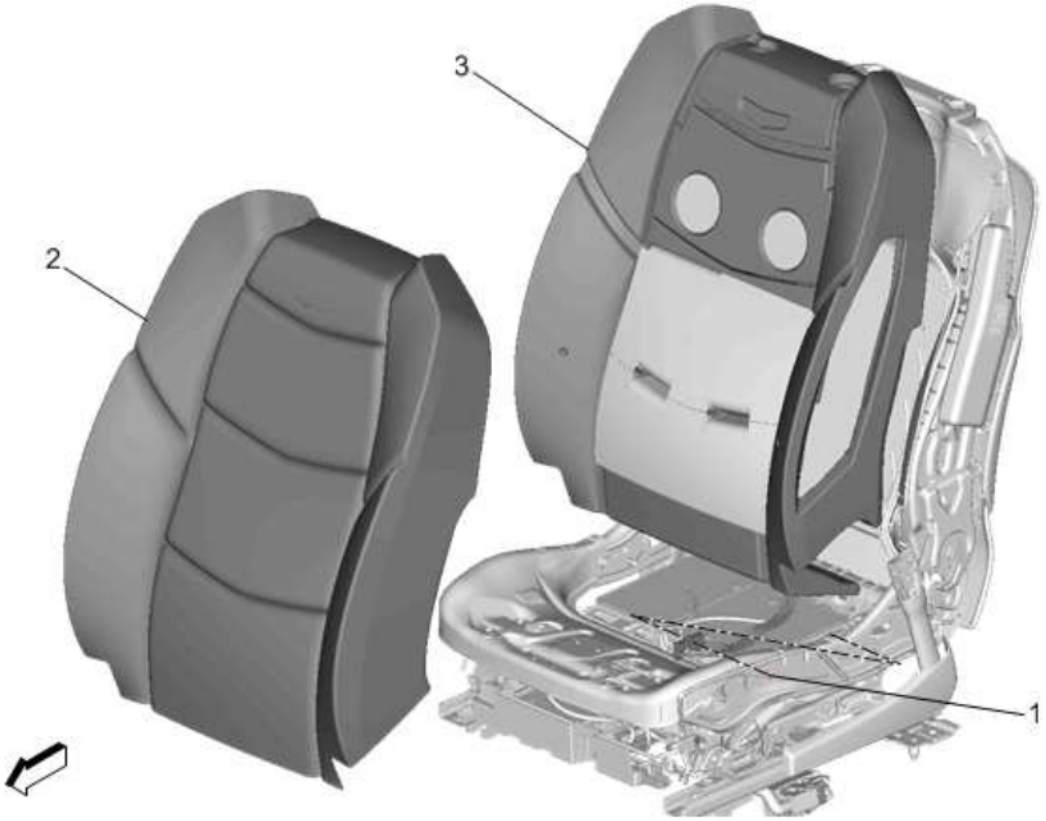


Fig. 32: Driver or Passenger Seat Back Cover and Pad (22-Way Power)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
WARNING: **Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal**	

cardiagn.com

Callout	Component Name
mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in personal injury. **Preliminary Procedures** 1. Remove Driver or Passenger Seat. Refer to **Driver or Passenger Seat Removal and Installation** 2. Remove Front Seat Back Cushion Finish Panel. Refer to **Front Seat Back Cushion Finish Panel Replacement** 3. Remove Front Seat Cushion Outer Finish Cover. Refer to **Front Seat Cushion Outer Finish Cover Replacement (22-Way Power)** 4. Remove Driver or Passenger Seat Inner Recliner Finish Cover. Refer to **Driver or Passenger Seat Inner Recliner Finish Cover Replacement** 5. Remove Front Seat Head Restraint Guide. Refer to **Front Seat Head Restraint Guide Replacement**	
1	Front Seat Back Massage Bladder Bolt **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to Fastener Caution . **Tighten** 0.6 N.m (6 lb in)
2	Driver or Passenger Seat Back Cushion Cover **Procedure** 1. Disengage the j-channel retainers from the seat back cushion frame. 2. Loosen the seat back cushion cover and pad, release the material from around the outboard seat back airbag and the inboard seat back airbag, if equipped. 3. Disconnect the blower from the seat back cushion pad, if equipped. 4. Disconnect the electrical connectors that attach to the seat back cushion, if equipped. 5. Remove the seat back cushion cover and pad from the seat cushion frame as an assembly.
3	Driver or Passenger Seat Back Cushion Pad **Procedure** Pull the cover away from the pad to disengage the hook and loop fasteners and the U-channel.

FRONT SEAT BACK PAD SUPPORT BRACKET REPLACEMENT (22-WAY POWER)

cardiagn.com

nd ...

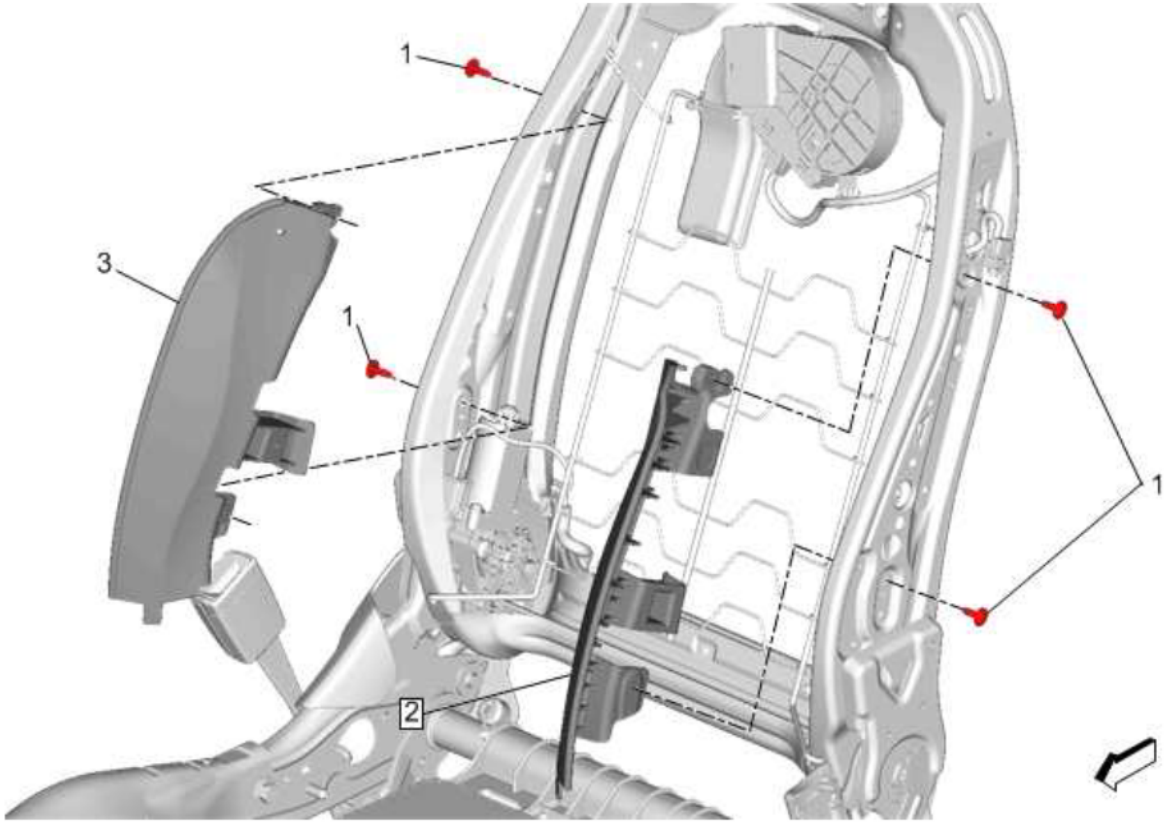



Fig. 33: Front Seat Back Pad Support Bracket (22-Way Power)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Refer to **Front Seat Outboard Seat Back Airbag Replacement** 2. Refer to **Front Seat Inboard Seat Back Airbag Replacement** 3. Refer to **Front Seat Back Lumbar Bladder Replacement (22-Way Power)**	
1	Front Seat Back Pad Support Bracket Bolt (Qty: 4) **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to **Fastener Caution** . **Tighten** 5.5 N.m (49 lb in)
2	Front Seat Back Pad Support Bracket - Left Side **Procedure** Unclip the wiring harness.
3	Front Seat Back Pad Support Bracket - Right Side

DRIVER OR PASSENGER SEAT BACK CUSHION FRAME REPLACEMENT

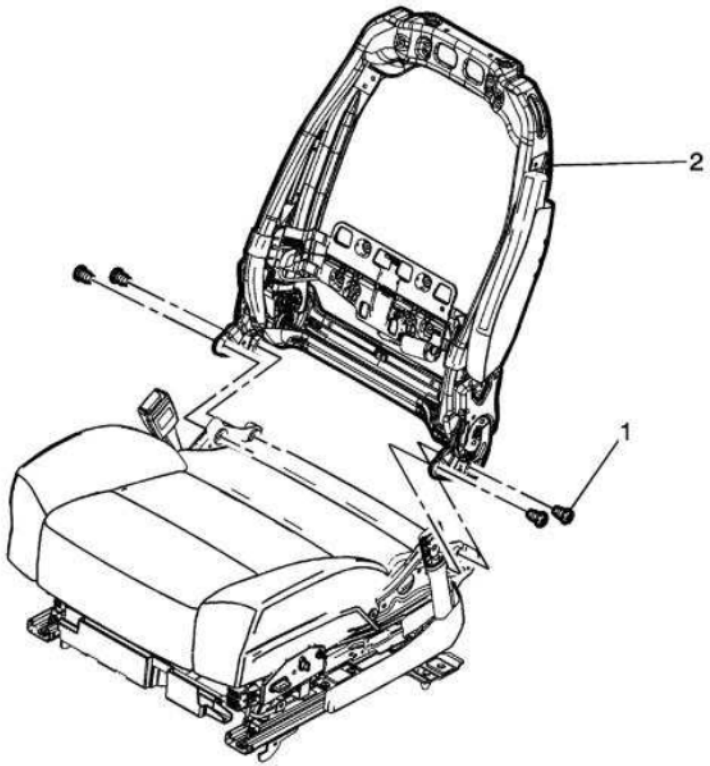

cardiagn.com

Fig. 34: Driver or Passenger Seat Back Cushion Frame
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
WARNING: **Refer to SIR Warning .** **WARNING:** **Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in**	

cardiagn.com

Callout	Component Name
personal injury. **Preliminary Procedures** 1. Disable the SIR system. Refer to **SIR Disabling and Enabling** . 2. Remove the driver or passenger seat. Refer to **Driver or Passenger Seat Removal and Installation**. 3. Remove the driver or passenger seat back cushion cover and pad. Refer to **Driver or Passenger Seat Back Cover and Pad ReplacementDriver or Passenger Seat Back Cover and Pad Replacement (22-Way Power)**.	
1	Driver or Passenger Seat Back Cushion Frame Bolt (Qty: 4) **CAUTION:** **Refer to Fastener Caution .** **Procedure** 1. Remove the front seat recliner control bracket to gain access to the seat cushion frame bolt. 2. Clean the thread locking compound from the bolts. 3. Apply high strength (red) thread locking compound to the bolt threads. **Tighten** 50 N.m (37 lb ft)
2	Driver or Passenger Seat Back Cushion Frame **Procedure** 1. Disconnect electrical connectors as needed. 2. Remove the 2 push in retainers and release the lower cushion cover material from the seat back frame. 3. Remove the front seat inboard seat back airbag, if equipped. Refer to **Front Seat Inboard Seat Back Airbag Replacement**

cardiagn.com

Callout	Component Name
	4. Remove the front seat outboard seat back airbag. Refer to **Front Seat Outboard Seat Back Airbag Replacement** . 5. Transfer components as necessary.

FRONT SEAT RECLINER KNOB REPLACEMENT (22 WAY POWER)

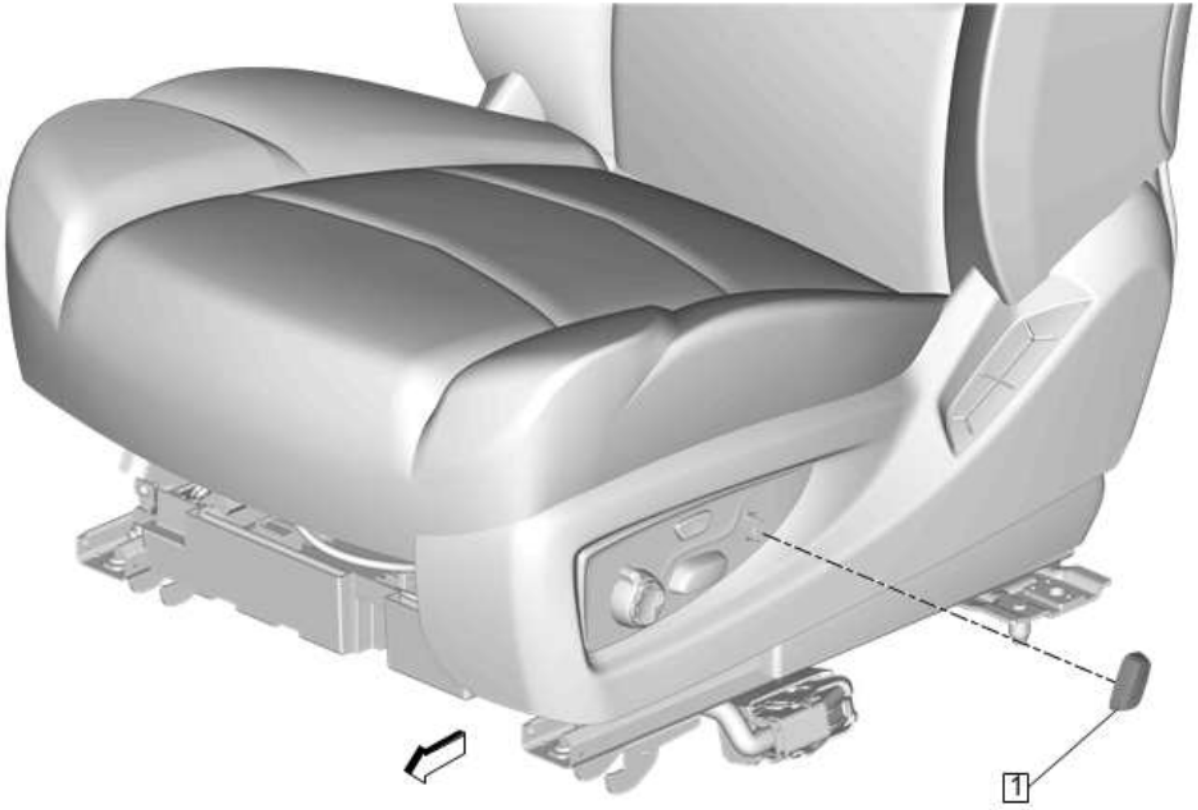


Fig. 35: Front Seat Recliner Knob (22 Way Power)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Seat Recliner Knob **Procedure** Use a flat-bladed tool to release the recliner knob from the front seat cushion outer finish cover.

cardiagn.com

nd ...

FRONT SEAT BACK RECLINER HANDLE REPLACEMENT (2 WAY MANUAL)

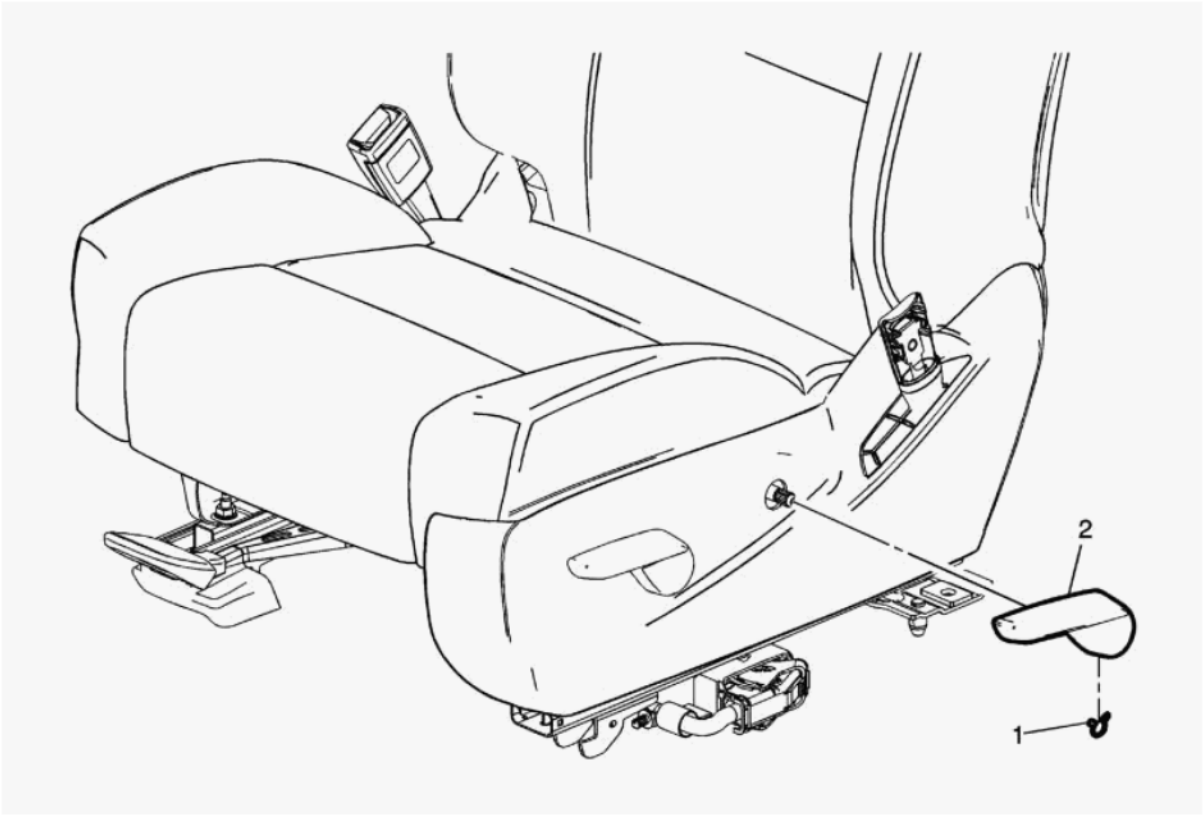


Fig. 36: Front Seat Back Recliner Handle (2 Way Manual)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Seat Back Recliner Handle Clamp **Procedure** Use a flat-bladed tool to release the recliner handle clamp from the handle assembly.
2	Front Seat Back Recliner Handle **Procedure** Use a flat-bladed tool to release the handle from the cushion outer finish panel.

FRONT SEAT BACK CUSHION FINISH PANEL REPLACEMENT

cardiagn.com

nd ...

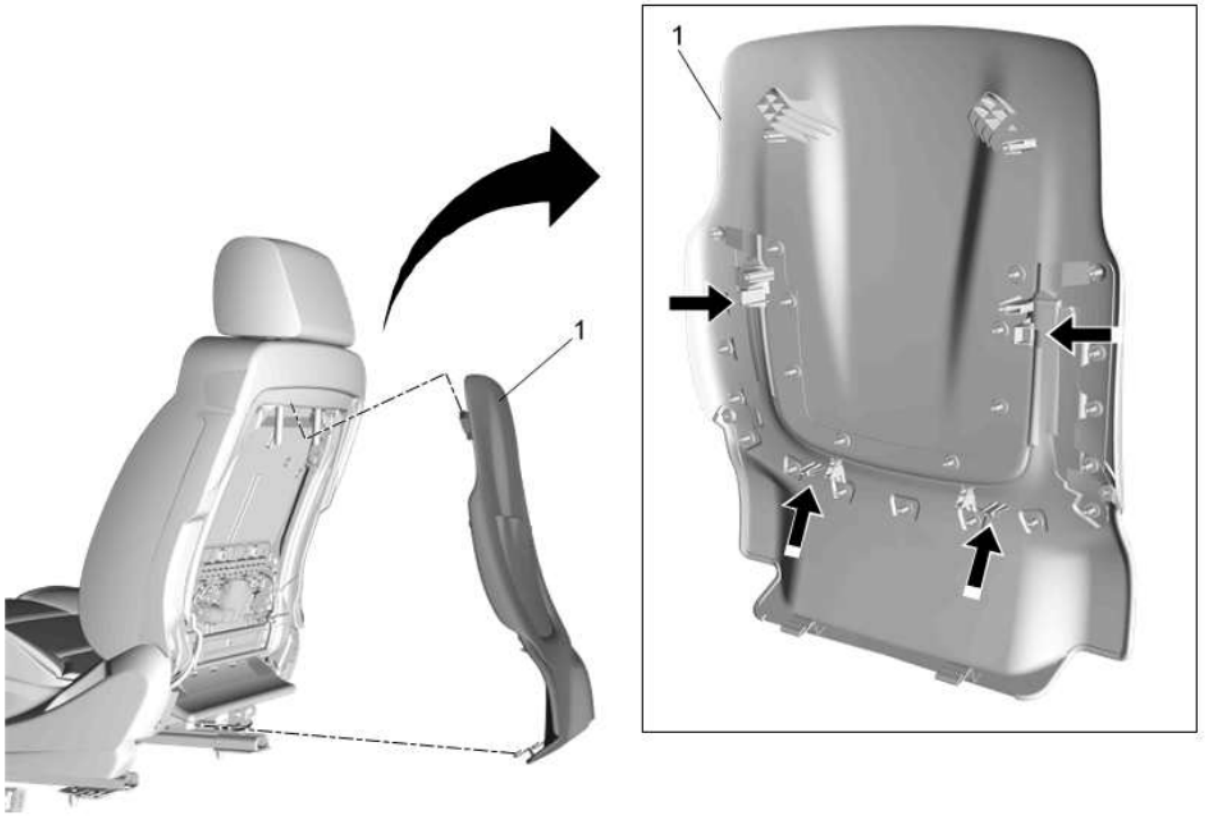


Fig. 37: Front Seat Back Cushion Finish Panel
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Seat Back Cushion Finish Panel **Procedure** 1. Detach the seat back cushion cover two bottom bungee and third center bungee clips from the crossbar, if equipped. 2. Detach the lower (flexible) back panel hooks from the frame by reaching up inside the back panel from the bottom to locate the flat of the hooks. While pushing up on the flat of the hook, push inward in the area of the hook to release the hook from the frame. 3. With the lower (flexible) hooks free, pull down on the back panel to disengage the upper (rigid) hooks. 4. With the upper (rigid) and lower (flexible) hooks free, detach the side (flexible) hooks from the frame by pushing

cardiagn.com

Callout	Component Name
	inward and towards the center of the seat, one side at a time.

FRONT CENTER SEAT BACK CUSHION LATCH UPPER COVER REPLACEMENT

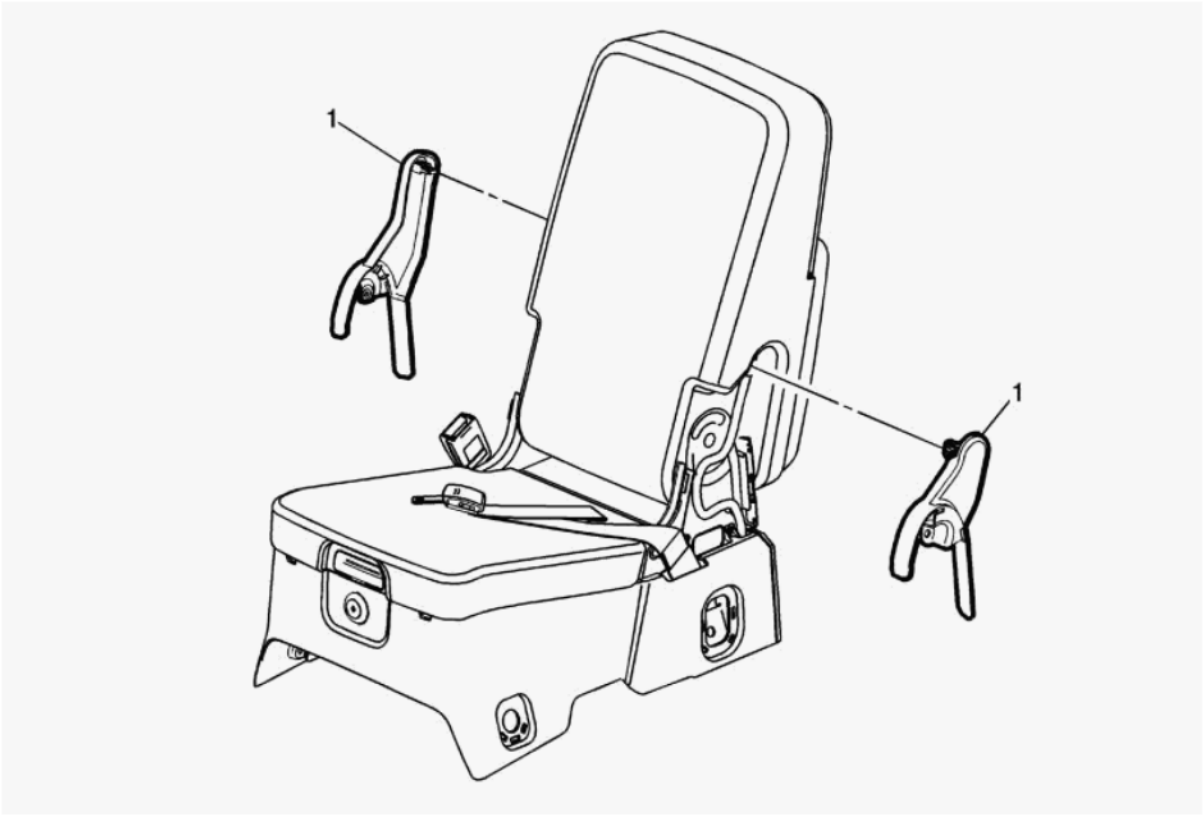


Fig. 38: Front Center Seat Back Cushion Latch Upper Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front seat center armrest hinge finish cover. Refer to **Front Seat Center Armrest Hinge Finish Cover Replacement**.	
1	Front Center Seat Back Cushion Latch Cover (Qty: 2) **Procedure**

cardiagn.com

Callout	Component Name
	Firmly grasp the latch cover, pulling it outward to disengage the top of the cover from the armrest frame.

FRONT CENTER SEAT BACK CUSHION LATCH REPLACEMENT

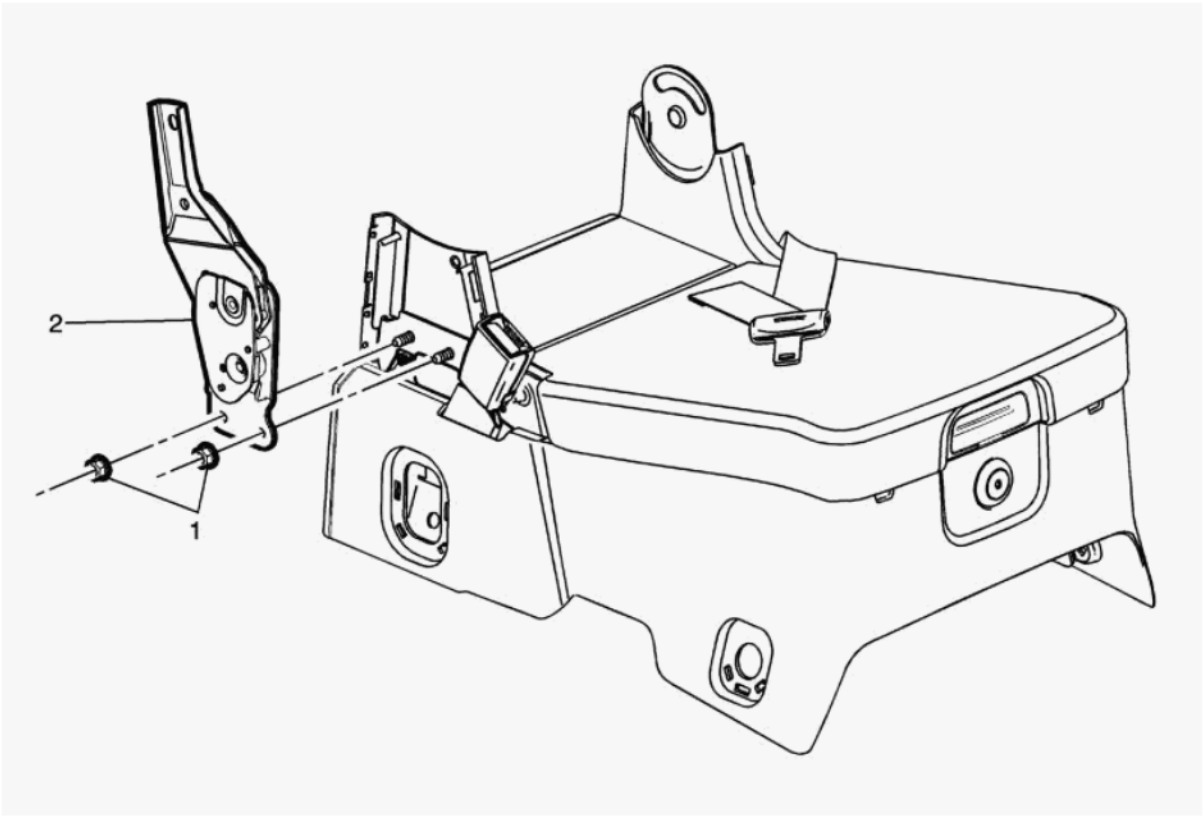


Fig. 39: Front Center Seat Back Cushion Latch
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front seat center armrest. Refer to **Front Seat Center Armrest Replacement**.	
1	Front Center Seat Back Cushion Latch Nut (Qty: 2) **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to **Fastener Caution** . **Tighten** 9 N.m (80 lb in)
2	Front Center Seat Back Cushion Latch

DRIVER OR PASSENGER SEAT LUMBAR SUPPORT REPLACEMENT (22-WAY POWER)

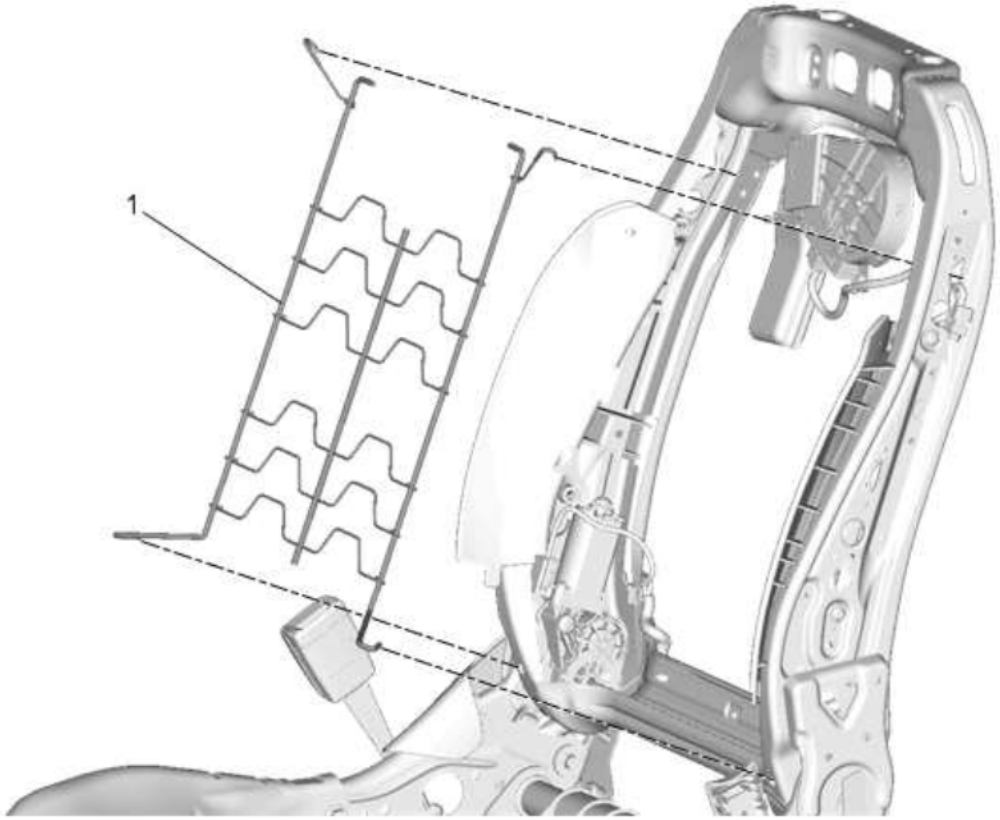


Fig. 40: Driver or Passenger Seat Lumbar Support (22-Way Power)
Courtesy of GENERAL MOTORS COMPANY

cardiagn.com

Callout	Component Name
Preliminary Procedure Refer to **Front Seat Back Lumbar Bladder Replacement (22-Way Power)**	
1	Front Seat Lumbar Support **Procedure** 1. Pull outward at the bottom of the seat to release the bottom support wires. 2. Disengage the side support wires from the seat back frame.

DRIVER OR PASSENGER SEAT LUMBAR SUPPORT ACTUATOR KNOB REPLACEMENT (8 WAY POWER)

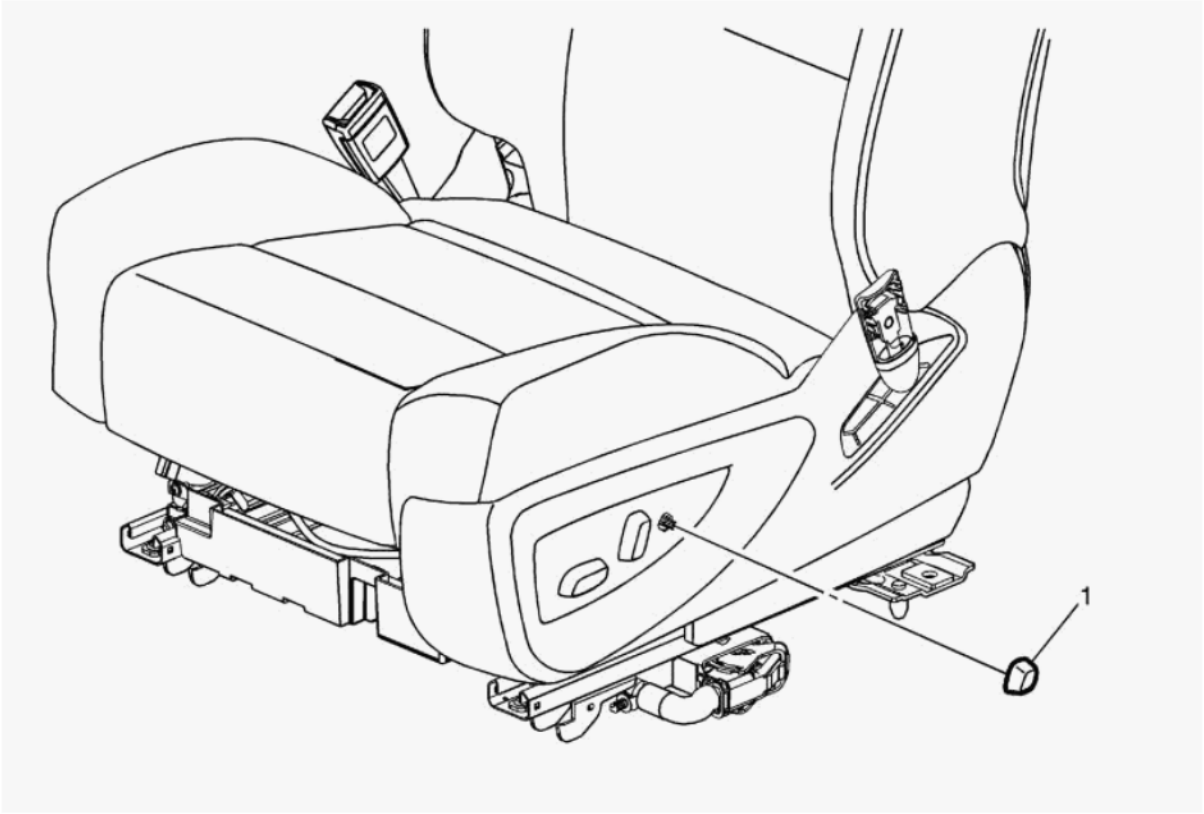


Fig. 41: Driver or Passenger Seat Lumbar Support Actuator Knob (8 Way Power)
Courtesy of GENERAL MOTORS COMPANY

cardiagn.com

nd ...

Callout	Component Name
1	Driver or Passenger Seat Lumbar Support Actuator Knob **Procedure** Use a flat-bladed tool to release the actuator knob from the outer finish panel.

DRIVER SEAT LUMBAR SUPPORT ACTUATOR LEVER REPLACEMENT



Fig. 42: Driver Seat Lumbar Support Actuator Lever
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Driver Seat Lumbar Support Actuator Lever **CAUTION:**

cardiagn.com

Callout	Component Name
	Do not twist the cover during removal. Twisting the cover may cause the component to break. **Procedure** Use a flat-bladed tool to remove the driver seat lumbar support actuator lever.

REAR SEAT SEPARATION (3RD ROW POWER WITH AS8)

cardiagn.com

nd ...

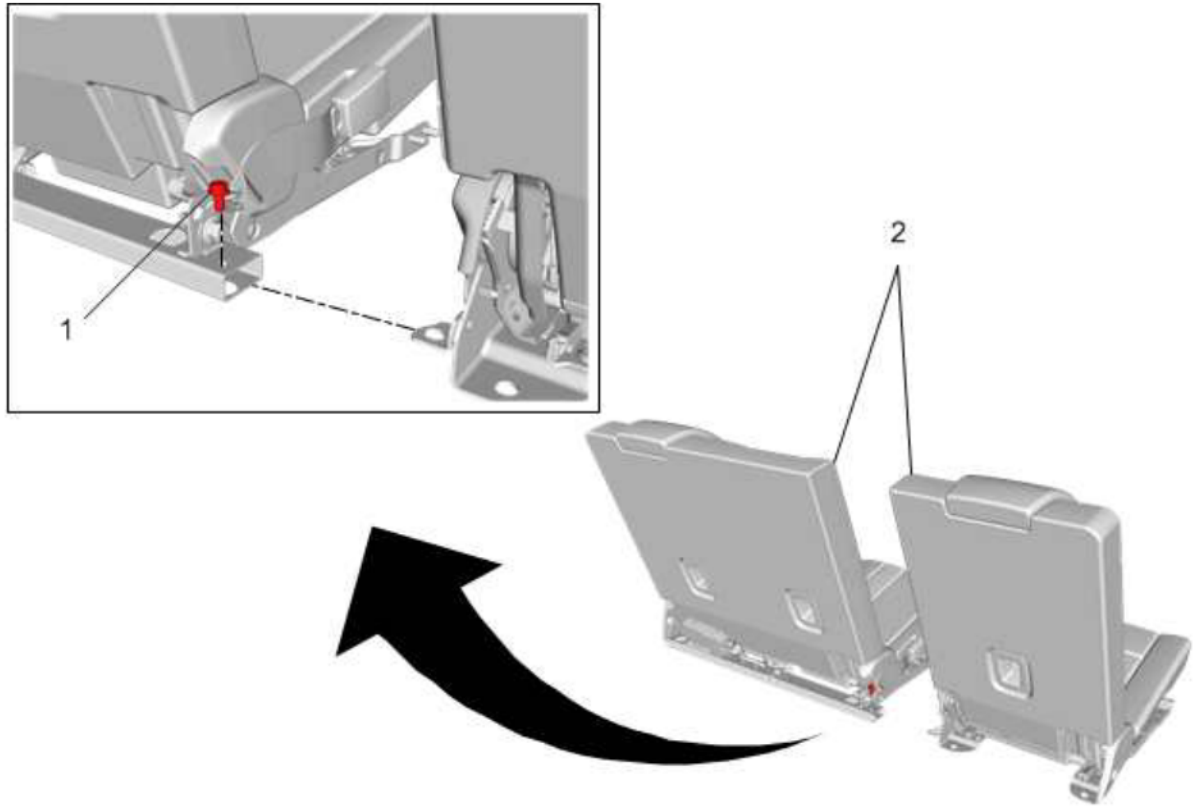


Fig. 43: Rear Seat Separation (3rd Row Power with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the 3rd row seat. Refer to **3rd Row Seat Removal and Installation**. 2. If equipped with power folding seat, disconnect and remove the actuator wiring harness from the seat cushion frame.	
1	3rd Row Seat Bolt **CAUTION:** **Refer to** **Fastener**

cardiagn.com

Callout	Component Name
	Caution . **Tighten** 45 N.m (33 lb ft)
2	3rd Row Seat **Procedure** Separate the 40% side of the seat from the 60% side of the seat by sliding apart.

REAR SEAT SEPARATION (3RD ROW MANUAL WITH ARN)

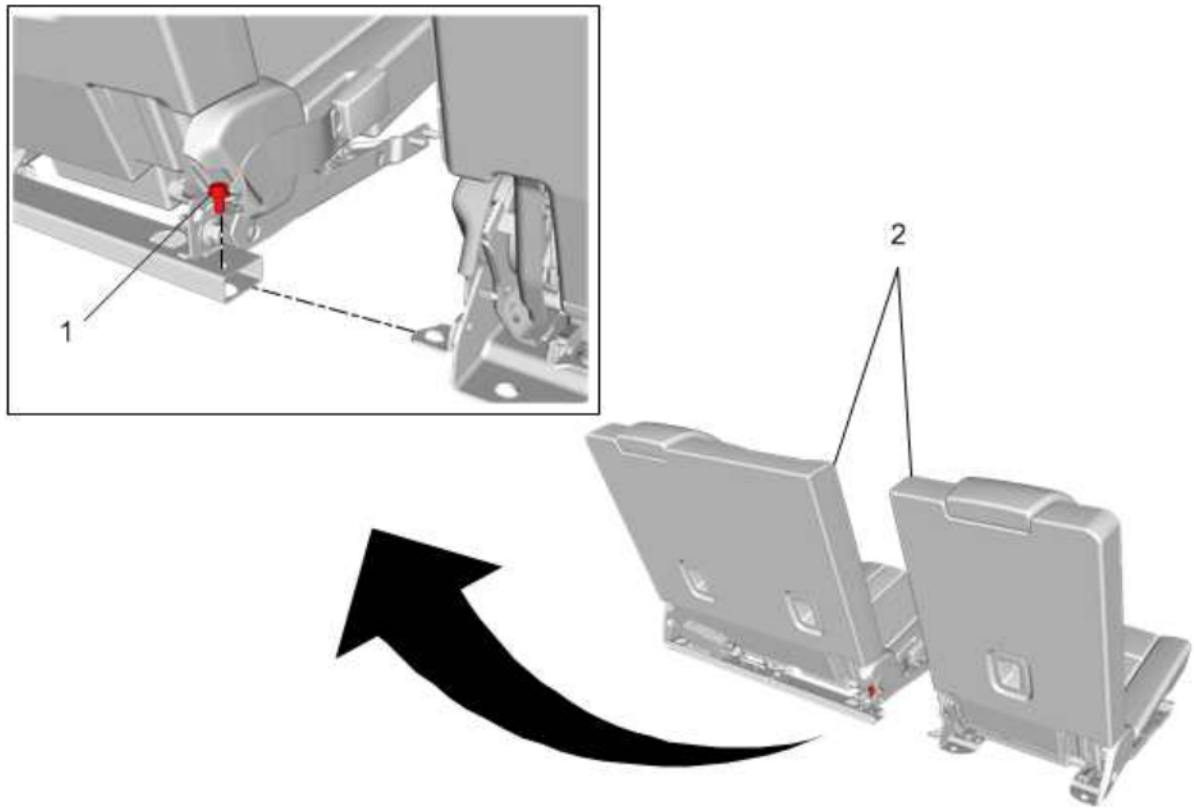


Fig. 44: Rear Seat Separation (3rd Row Manual with ARN)
Courtesy of GENERAL MOTORS COMPANY

cardiagn.com

Callout	Component Name
Preliminary Procedures Remove the 3rd row seat. Refer to **3rd Row Seat Removal and Installation**.	
1	3rd Row Seat Bolt **CAUTION:** **Refer to Fastener Caution .** **Tighten** 45 N.m (33 lb ft)
2	3rd Row Seat **Procedure** Separate the 40% side of the seat from the 60% side of the seat by sliding apart.

REAR SEAT SEPARATION (2ND ROW)

cardiagn.com

nd ...

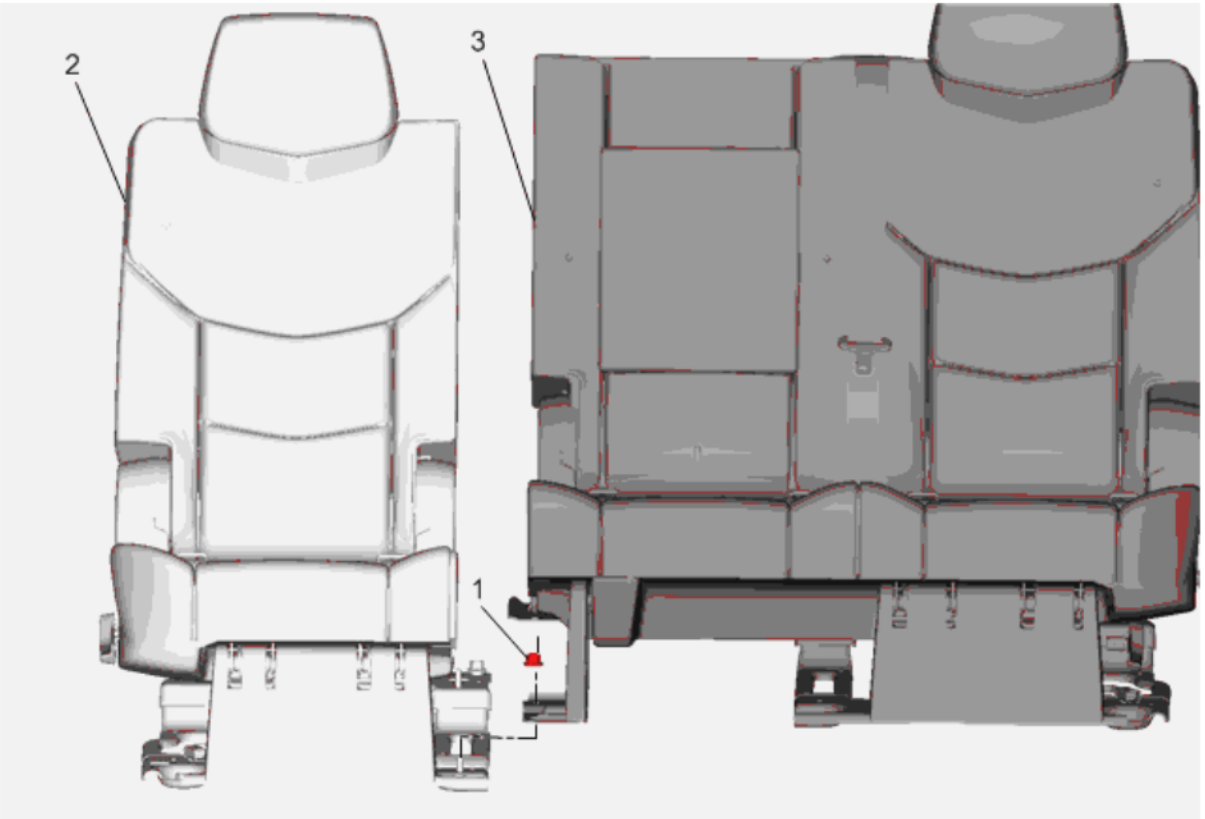


Fig. 45: Rear Seat Separation (2nd Row)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove Rear Seat. Refer to **Rear Seat Removal and Installation (60/40 Bench)Rear Seat Removal and Installation (Bucket)**	
1	Rear Seat Nut (Qty: 2) **CAUTION:** **Refer to** **Fastener** **Caution** .

cardiagn.com

Callout	Component Name
	Tighten 45 N.m (33 lb ft)
2	Rear Seat Assembly - 40 Percent
3	Rear Seat Assembly - 60 Percent

REAR SEAT REMOVAL AND INSTALLATION (60/40 BENCH)

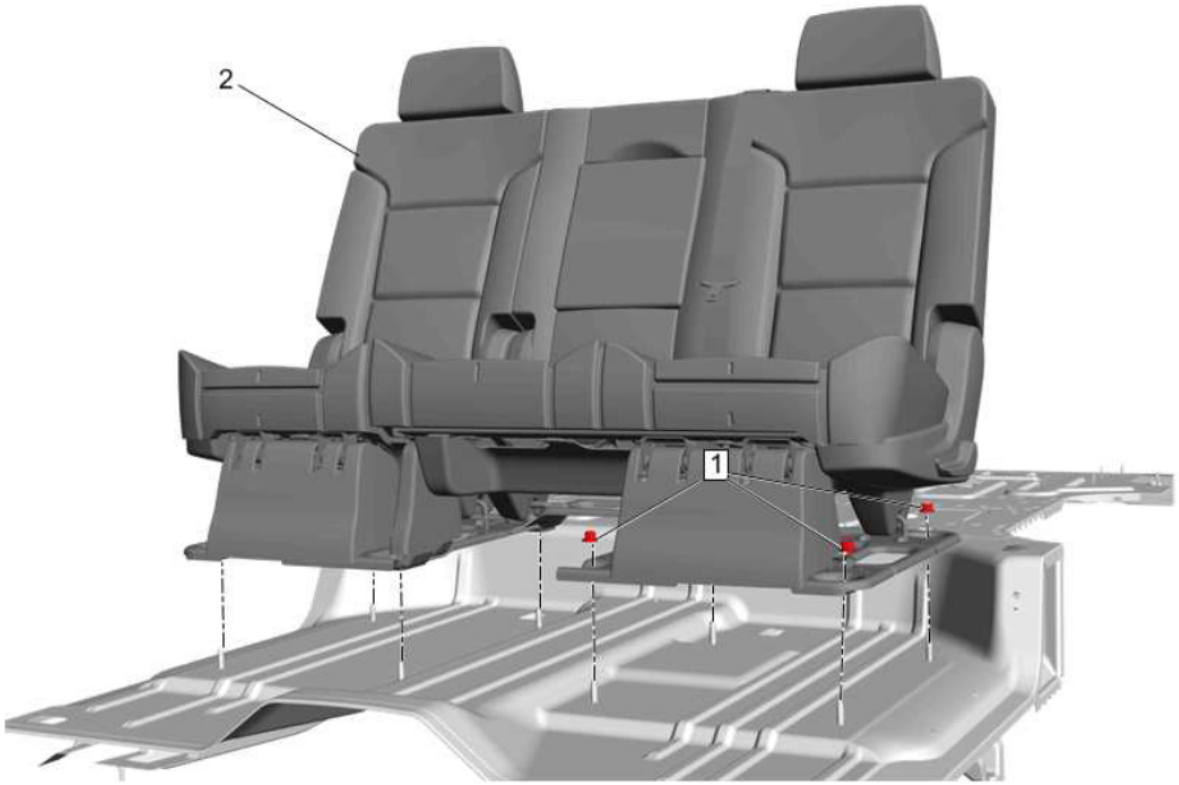


Fig. 46: Rear Seat (60/40 Bench)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Refer to **Intermediate Floor Panel Carpet Replacement**	

cardiagn.com

Callout	Component Name
1	Rear Seat Assembly Nut (Qty: 8) **CAUTION:** **Refer to Fastener Caution .** **Procedure** Fold the seat forward. Reposition the rear outer edges of the front floor panel carpet to gain access to the nuts. **Tighten** 45 N.m (33 lb ft)
2	Rear Seat Assembly **Procedure** 1. Disconnect the electrical connector, if equipped. 2. Separate the rear seats if only one seat is to be removed. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**. 3. Remove the seat with the aid of an assistant; the seat is very heavy.

REAR SEAT REMOVAL AND INSTALLATION (BUCKET)

cardiagn.com

nd ...

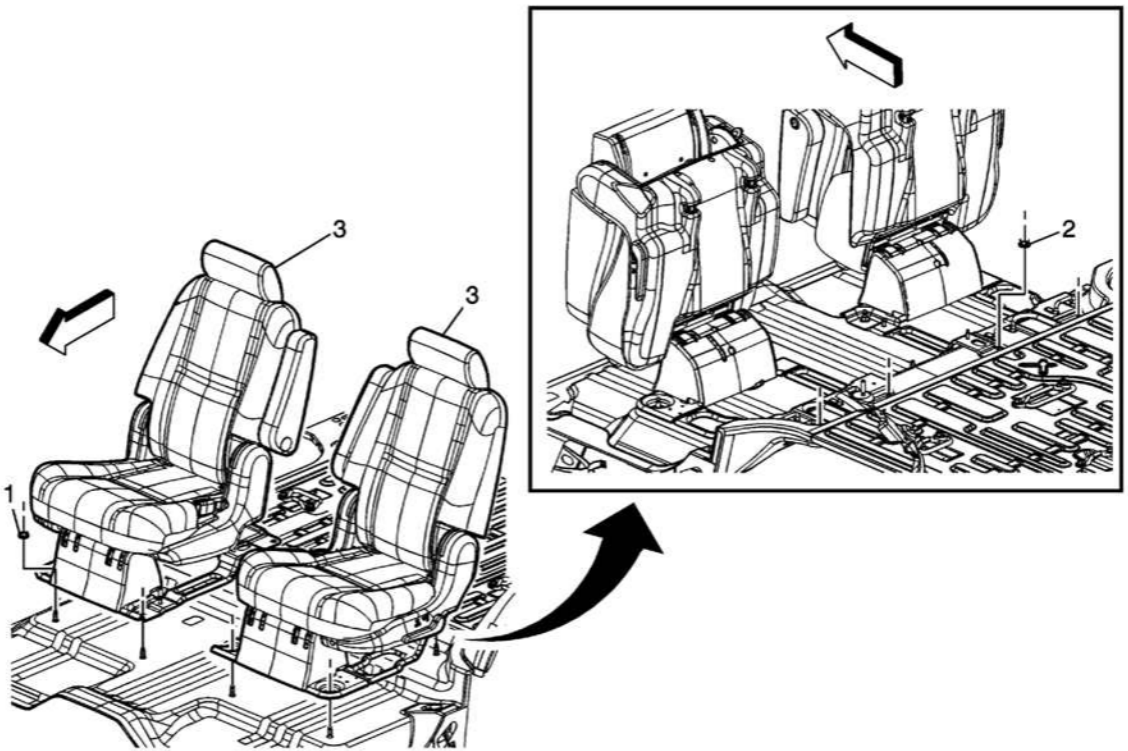


Fig. 47: Rear Seat Assembly And Nuts (Bucket)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Refer to **Intermediate Floor Panel Carpet Replacement** .	
1	Rear Seat Assembly Forward Nut (Qty: 4) **CAUTION:** **Refer to** **Fastener** **Caution** . **Procedure**

cardiagn.com

Callout	Component Name
	Fold the seat forward and reposition the rear outer edges of the front floor panel carpet to gain access to the nuts. **Tighten** 45 N.m (33 lb ft)
2	Rear Seat Assembly Rearward Nut (Qty: 4) **Tighten** 45 N.m (33 lb ft)
3	Rear Seat Assembly **Procedure** Disconnect the electrical connector, if equipped.

REAR SEAT ARMREST REPLACEMENT (BUCKET)

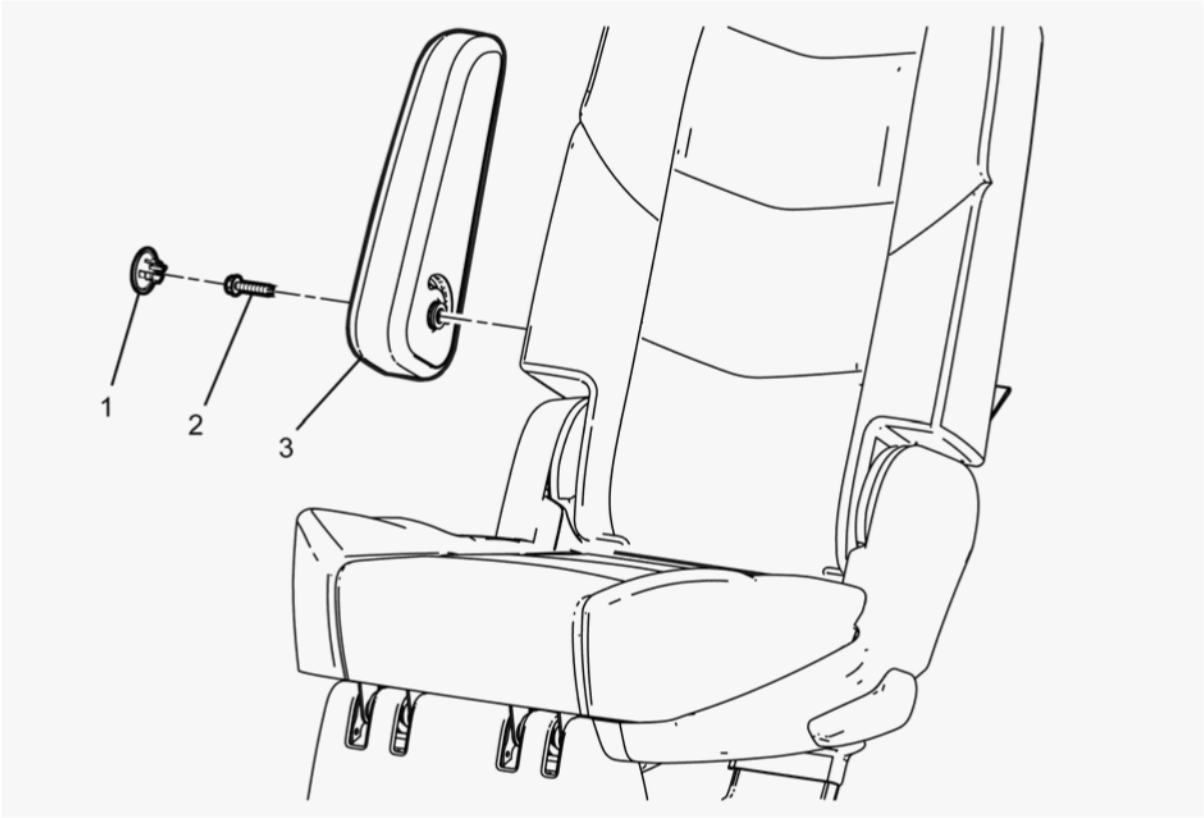


Fig. 48: Rear Seat Armrest (Bucket)

cardiagn.com

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Seat Armrest Bolt Finish Cover **NOTE:** **During re-installation make sure to orientate the finish cover locator to armrest assembly notch.**
2	Rear Seat Armrest Bolt **CAUTION:** **Refer to Fastener Caution .** **Procedure** Clean old thread locking compound from the bolt. Apply medium strength (blue) thread locking compound to the bolt. **Tighten** 25 N.m (18 lb ft)
3	Rear Seat Armrest

REAR SEAT ARMREST REPLACEMENT (60/40 BENCH)

cardiagn.com

nd ...

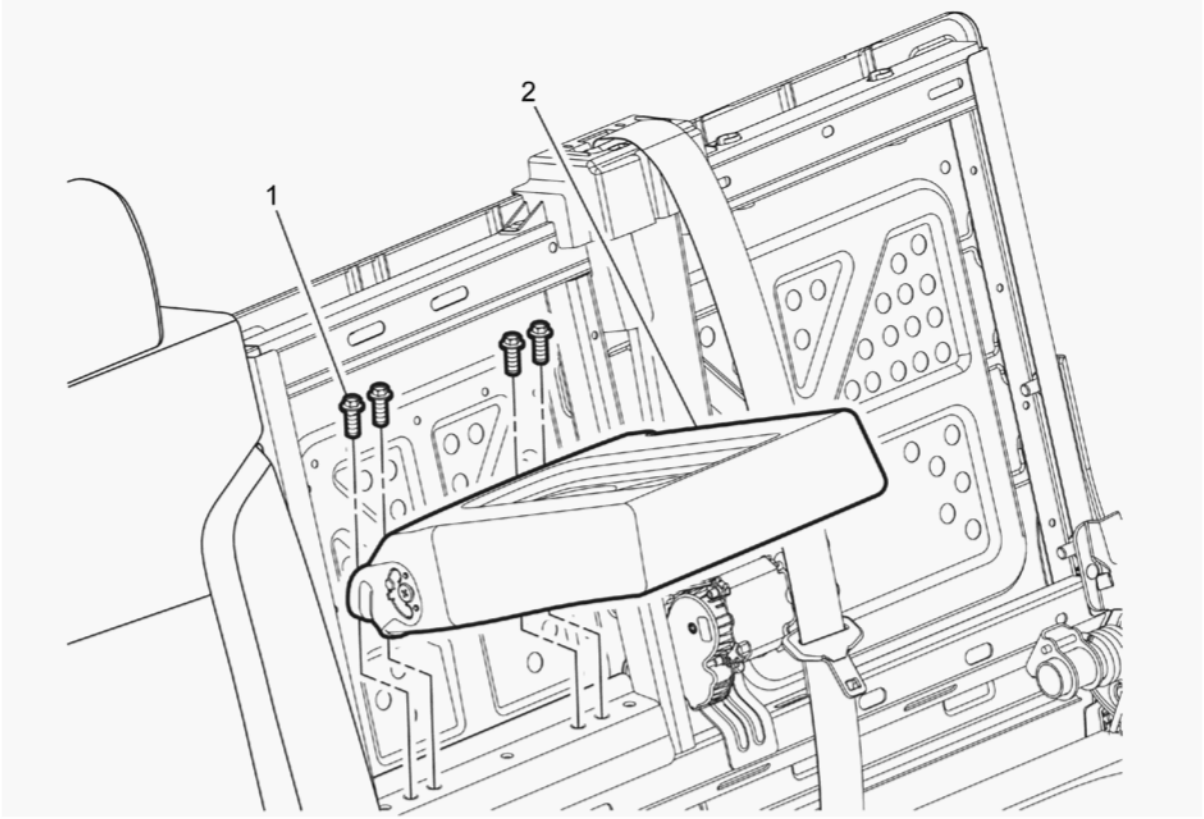


Fig. 49: Rear Seat Armrest (60/40 Bench)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear seat armrest support finish cover. Refer to **Rear Seat Armrest Support Finish Cover Replacement**.	
1	Rear Seat Armrest Bolt **CAUTION:** **Refer to Fastener Caution .**

cardiagn.com

Callout	Component Name
	Tighten 9 N.m (80 lb in)
2	Rear Seat Armrest

REAR SEAT ARMREST SUPPORT FINISH COVER REPLACEMENT

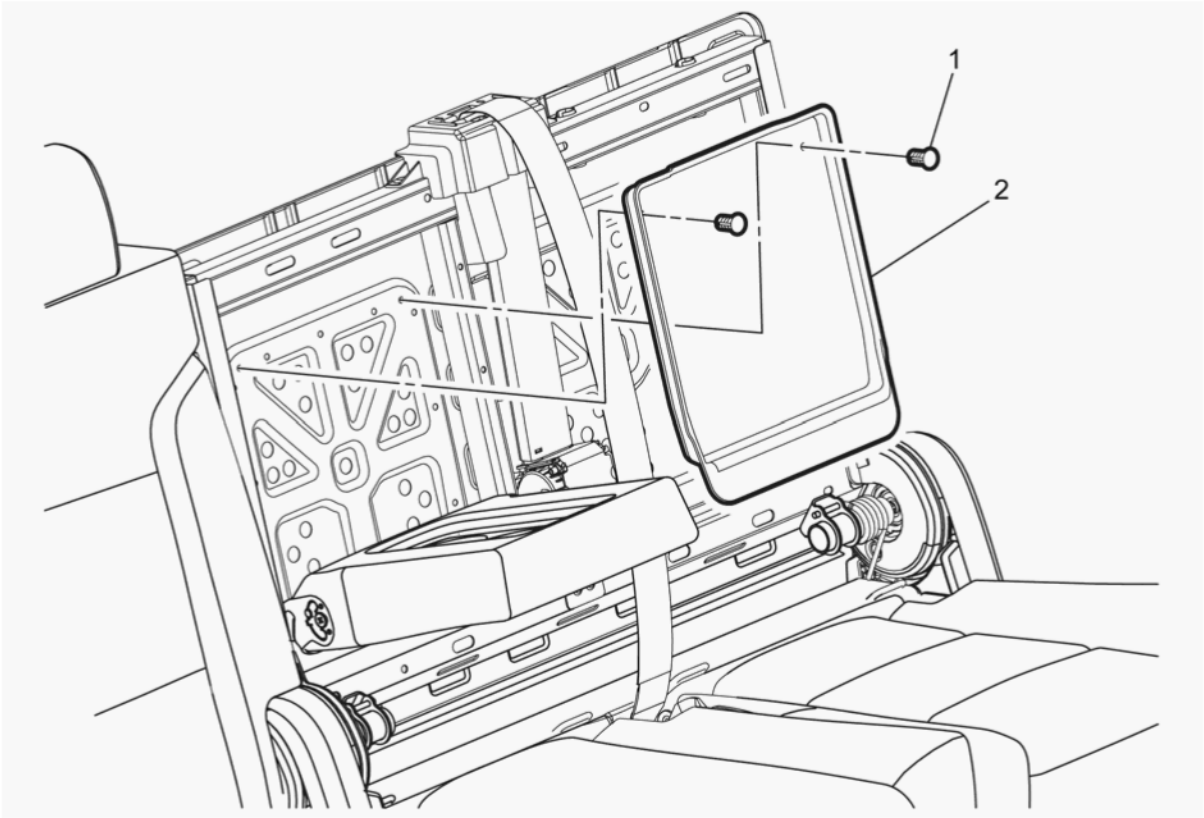


Fig. 50: Rear Seat Armrest Support Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Seat Armrest Support Finish Cover Retainer (Qty: 2)
2	Rear Seat Armrest Support Finish Cover **Procedure**

cardiagn.com

Callout	Component Name
	Disengage the rear seat armrest support finish cover by pulling up to separate it from the rear seat back frame.

REAR SEAT STRUT REPLACEMENT

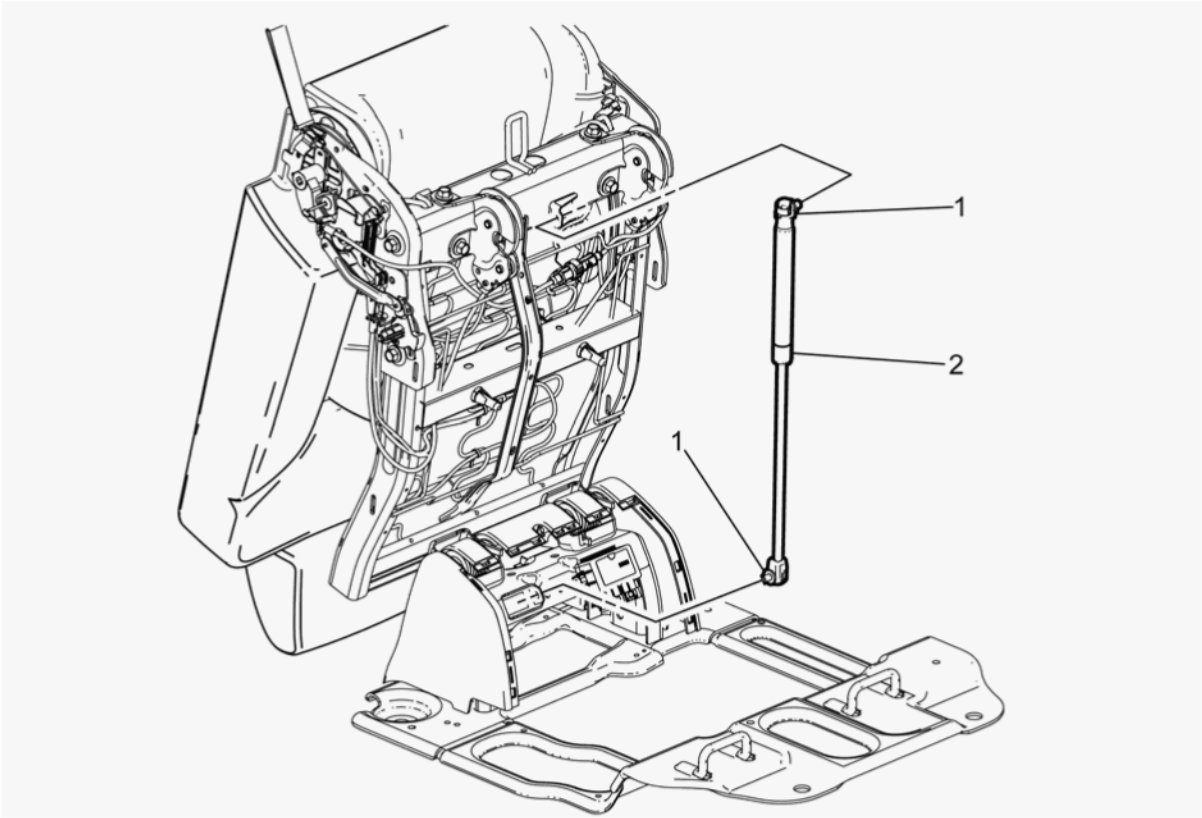


Fig. 51: Rear Seat Strut
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the rear seat riser opening finish cover. Refer to **Rear Seat Riser Opening Finish Cover Replacement**. 2. Remove the rear seat cushion trim panel. Refer to **Rear Seat Cushion Trim Panel Replacement (60/40 Bench)Rear Seat Cushion Trim Panel Replacement (Bucket)**.	

cardiagn.com

nd ...

REAR SEAT HINGE FINISH COVER REPLACEMENT

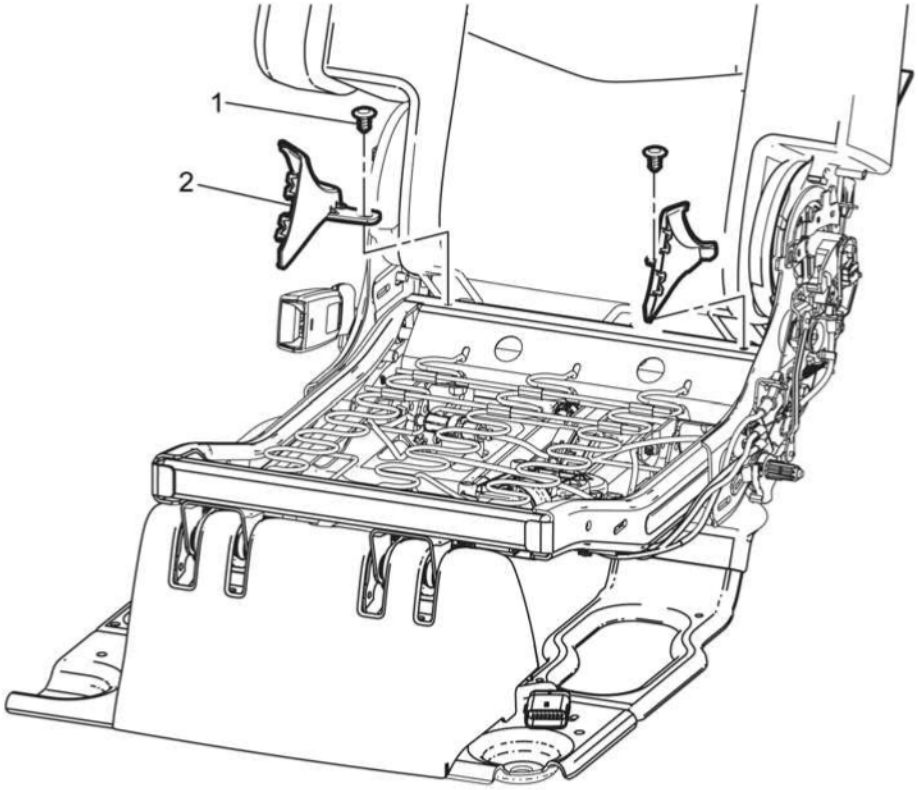


Fig. 52: Rear Seat Hinge Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear seat cushion trim panel (bucket). Refer to **Rear Seat Cushion Trim Panel Replacement (Bucket)**.	
1	Rear Seat Hinge Finish Cover Retainer **Procedure** 1. Disengage the seat cushion cover j-channel from the seat cushion frame. 2. Pull upward slightly on the rear seat cushion cover and pad to gain access to the retainers.

cardiagn.com

Callout	Component Name
	NOTE:
2	Rear Seat Hinge Finish Cover **The seat cushion pad does not need to be removed for the removal of the hinge finish cover.** **CAUTION:** **Do not twist the cover during removal. Twisting the cover may cause the component to break.** **Procedure** Carefully pull forward to release the hinge finish cover from the seat assembly.

REAR SEAT HINGE STUD FINISH COVER REPLACEMENT

cardiagn.com

nd ...

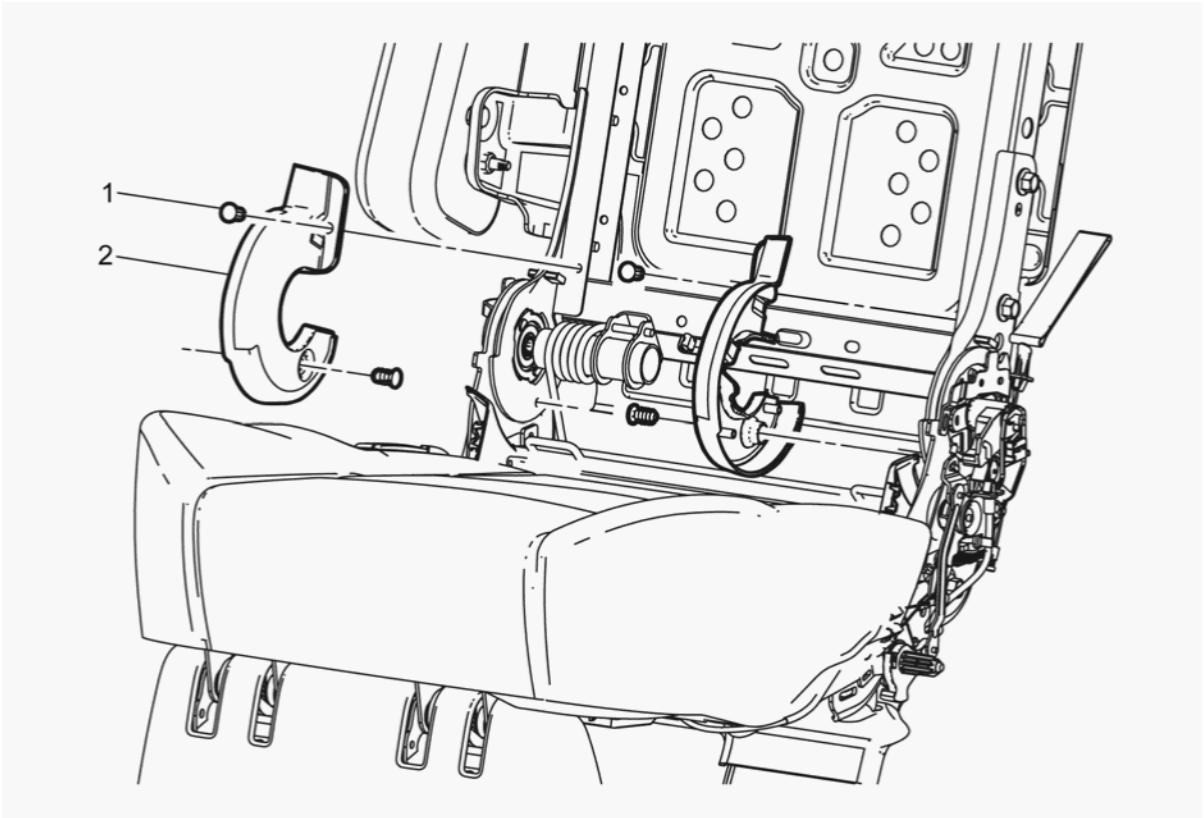


Fig. 53: Rear Seat Hinge Stud Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Seat Hinge Stud Finish Cover Retainer (Qty: 2) **Procedure** 1. Disengage the seat back cushion cover j-channel from the seat back cushion frame. 2. Pull upward slightly on the rear seat back cushion cover and pad to gain access to the retainers. **NOTE:** **The seat back**

cardiagn.com

Callout	Component Name
	cushion cover and pad does not need to be removed for the removal of the hinge stud finish cover.
2	Rear Seat Hinge Stud Finish Cover **CAUTION:** **Do not twist the cover during removal. Twisting the cover may cause the component to break.** **Procedure** Carefully pull forward to release the hinge stud finish cover from the seat assembly.

REAR SEAT HEAD RESTRAINT REPLACEMENT

cardiagn.com

nd ...

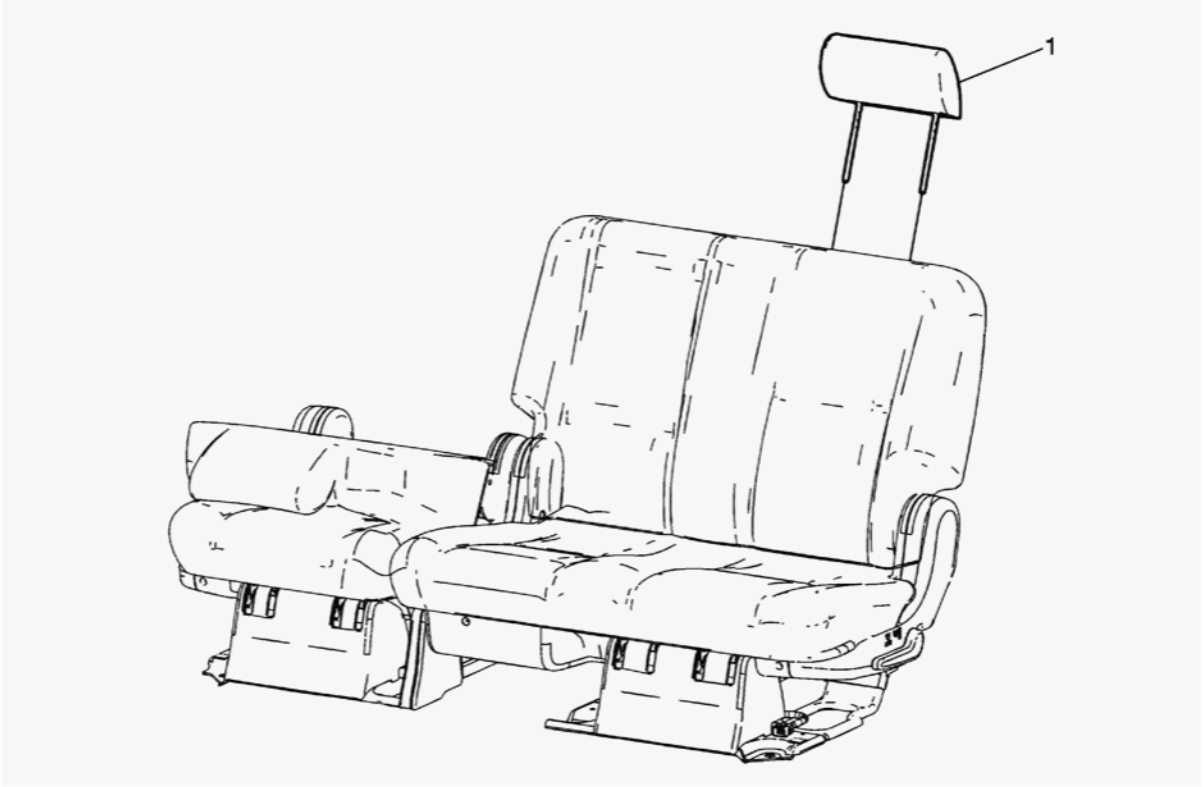


Fig. 54: Rear Seat Head Restraint
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Seat Head Restraint **Procedure** Access the head restraint guide buttons hidden below the seat back material. Depress the button on the inboard and outboard head restraint guide to release and raise the head restraint to the full up position and remove it from the seat.

REAR SEAT HEAD RESTRAINT GUIDE REPLACEMENT

cardiagn.com

nd ...

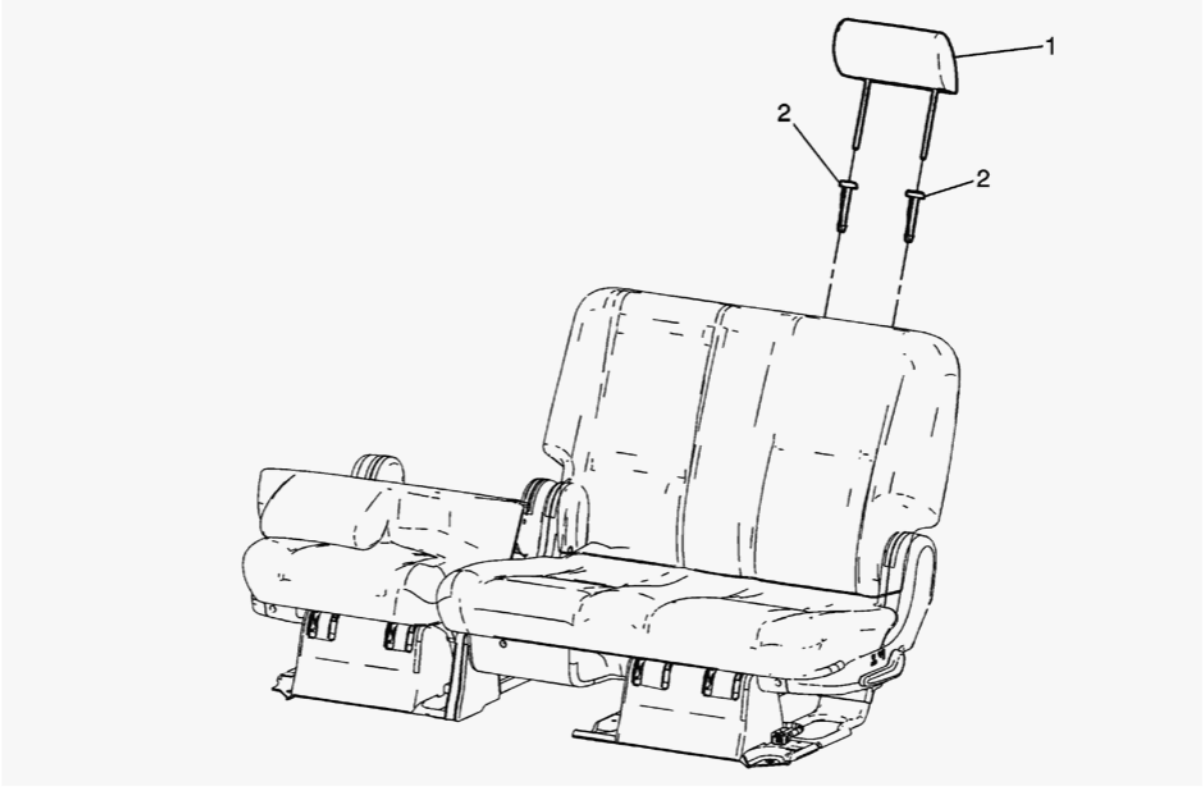


Fig. 55: Rear Seat Head Restraints And Guides
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat head restraint. Refer to **Rear Seat Head Restraint Replacement**. 2. Remove the rear seat back cushion cover and pad. Refer to **Rear Seat Back Cushion Cover and Pad Replacement (40%)Rear Seat Back Cushion Cover and Pad Replacement (Bucket)Rear Seat Back Cushion Cover and Pad Replacement (60%)**.	
1	Rear Seat Head Restraint
2	Rear Seat Head Restraint Guide **Procedure**

cardiagn.com

Callout	Component Name
	1. Release the glue from the rear seat back cushion pad and pull the seat back pad up enough to gain access to the head restraint guides. 2. Squeeze the bottom of the head restraint guide together and push up to remove.

REAR SEAT RISER REPLACEMENT (BUCKET)

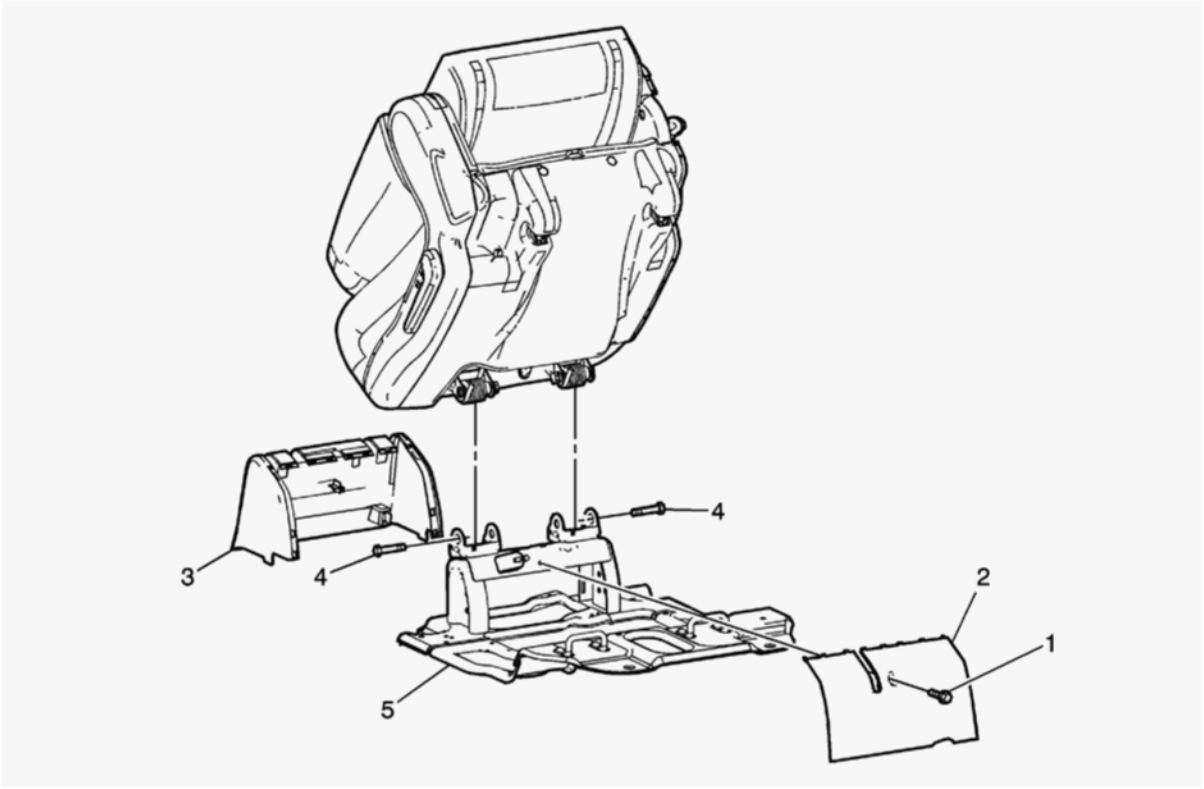


Fig. 56: Rear Seat Riser And Components (Bucket)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Remove the rear seat. Refer to **Rear Seat Removal and Installation (Bucket)**.	

cardiagn.com

Callout	Component Name
1	Rear Seat Riser Finish Cover Fastener **CAUTION:** **Refer to** **Fastener Caution** .
2	Rear Seat Riser Opening Finish Cover **Procedure** Remove the rear seat riser opening finish cover. Refer to **Rear Seat Riser Opening Finish Cover Replacement**.
3	Rear Seat Riser Finish Cover **Procedure** Remove the rear seat riser finish cover. Refer to **Rear Seat Riser Finish Cover Replacement**
4	Rear Seat Riser Bolt (Qty: 2) **Tighten** 9 N.m (80 lb in) **Procedure** Remove the rear seat cushion trim panel (bucket) to access the bolts. Refer to **Rear Seat Cushion Trim Panel Replacement (Bucket)**.
5	Rear Seat Riser **Procedure** 1. Disconnect the seat riser strut from the seat riser. 2. Disconnect the electrical harness retainers and connector from the seat riser.

REAR SEAT RISER LATCH REPLACEMENT (60/40 BENCH)

cardiagn.com

nd ...

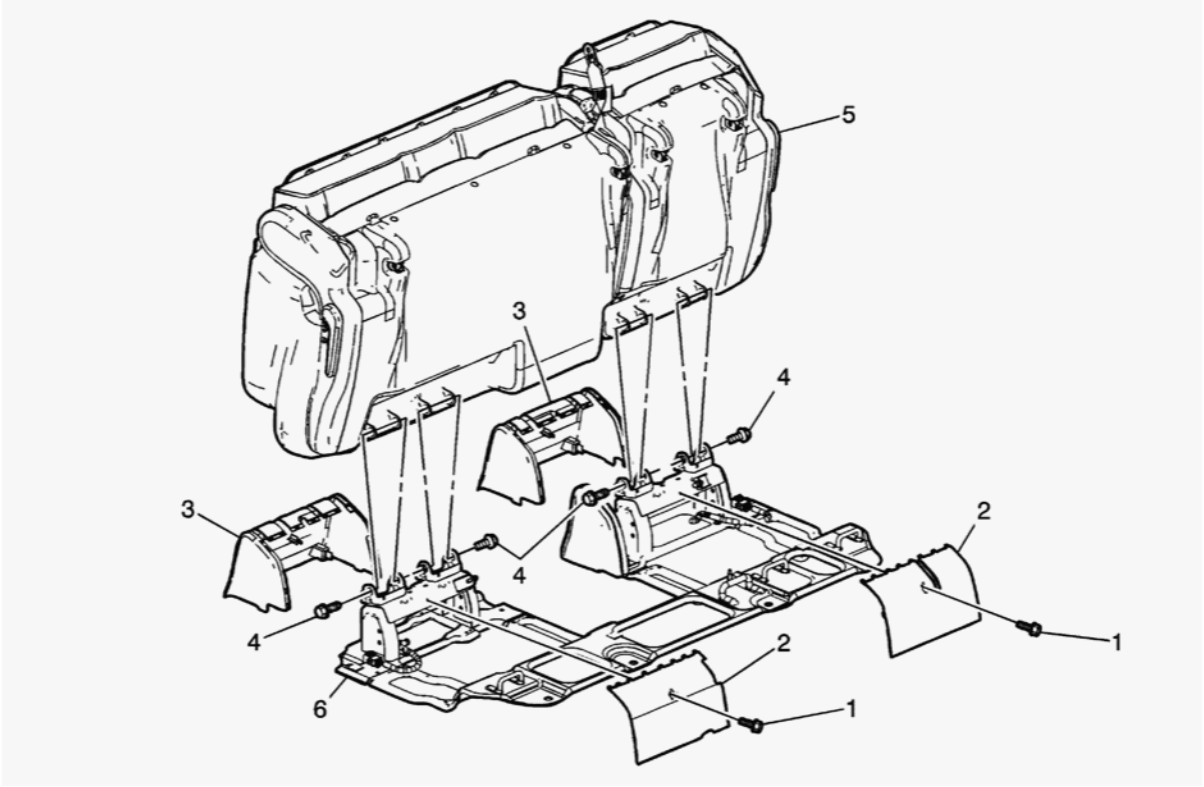


Fig. 57: Rear Seat Riser Latch And Components (60/40 Bench)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Remove the rear seat. Refer to **Rear Seat Removal and Installation (60/40 Bench)**. **NOTE:** **Service sides individually as required.**	
1	Rear Seat Riser Finish Cover Fastener
2	Rear Seat Riser Opening Finish Cover

cardiagn.com

Callout	Component Name
	Procedure Remove the rear seat riser opening finish cover. Refer to **Rear Seat Riser Opening Finish Cover Replacement**.
3	Rear Seat Riser Finish Cover **Procedure** 1. Remove the rear seat riser finish cover. Refer to **Rear Seat Riser Finish Cover Replacement**. 2. Remove the rear seat cushion trim panel. Refer to **Rear Seat Cushion Trim Panel Replacement (60/40 Bench)**.
4	Rear Seat Riser Bolt (Qty: 2) **Tighten** 9 N.m (80 lb in)
5	Rear Seat Riser **Procedure** 1. Disconnect the seat riser strut from the seat riser. 2. Disconnect the harness retainers and the connector from the seat riser. 3. Lift the seats off the riser assembly.
6	Rear Seat Riser Latch

REAR SEAT FRONT RISER FINISH COVER REPLACEMENT

cardiagn.com

nd ...

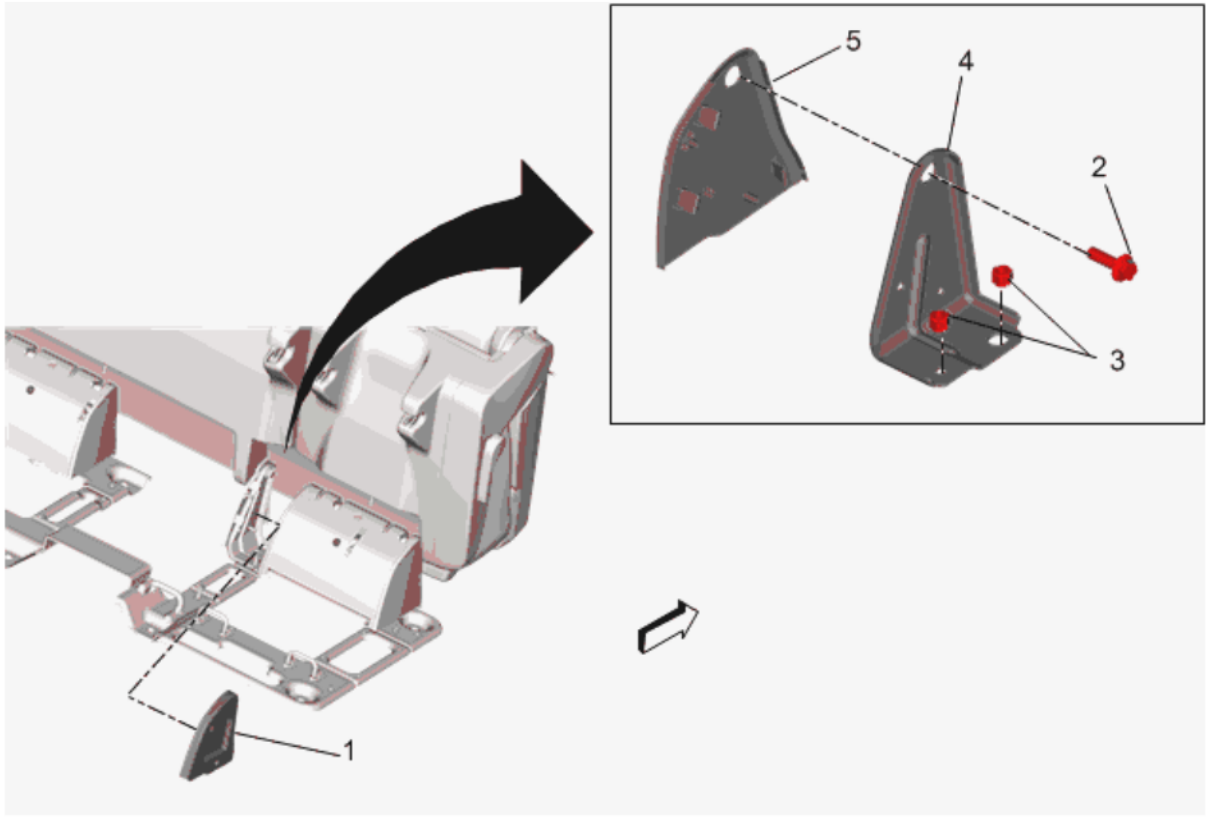


Fig. 58: Rear Seat Front Riser Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Refer to **Intermediate Floor Panel Carpet Replacement** .	
1	Rear Seat Front Riser Finish Cover (Inboard) **CAUTION:** **Do not twist the cover during removal. Twisting the**

cardiagn.com

Callout	Component Name
	cover may cause the component to break. **Procedure** Release the rear seat latch to fold up the seat and gain access to the finish cover fastener.
2	Rear Seat Back Latch Pivot Bolt **CAUTION:** **Refer to Fastener Caution .** **Tighten** 55 N.m (41 lb ft)
3	Rear Seat Assembly Nut (Qty: 2) **Tighten** 45 N.m (33 lb ft)
4	Rear Seat Bracket

cardiagn.com

Callout	Component Name
5	Rear Seat Front Riser Finish Cover (Outboard) **CAUTION:** **Do not twist the cover during removal. Twisting the cover may cause the component to break.** **Procedure** Carefully pull rearward to release the finish cover from the seat assembly.

REAR SEAT FRAME OUTER FINISH COVER REPLACEMENT

cardiagn.com

nd ...

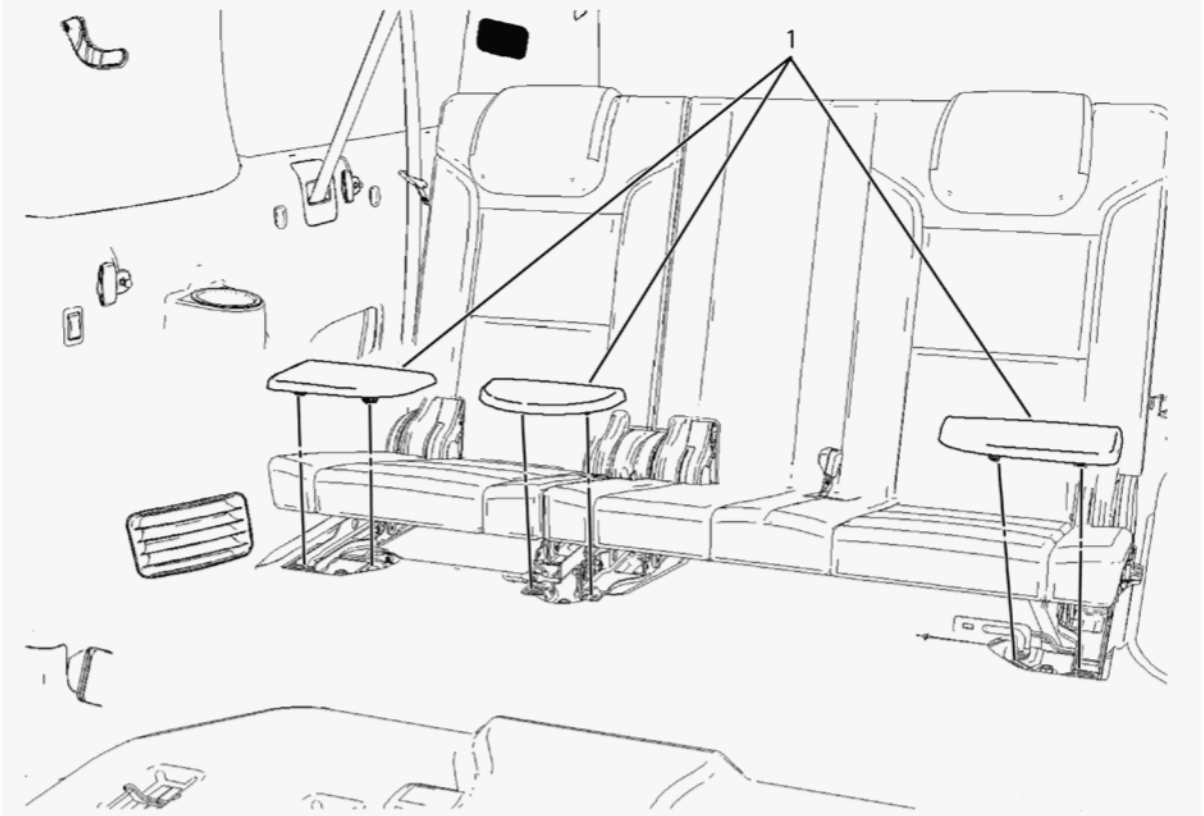


Fig. 59: Rear Seat Frame Outer Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Seat Frame Outer Finish Cover **Procedure** Release the 2 clips on each rear seat frame outer finish cover from the 3rd row seat frame.

REAR SEAT CUSHION COVER AND PAD REPLACEMENT (BUCKET)

cardiagn.com

nd ...

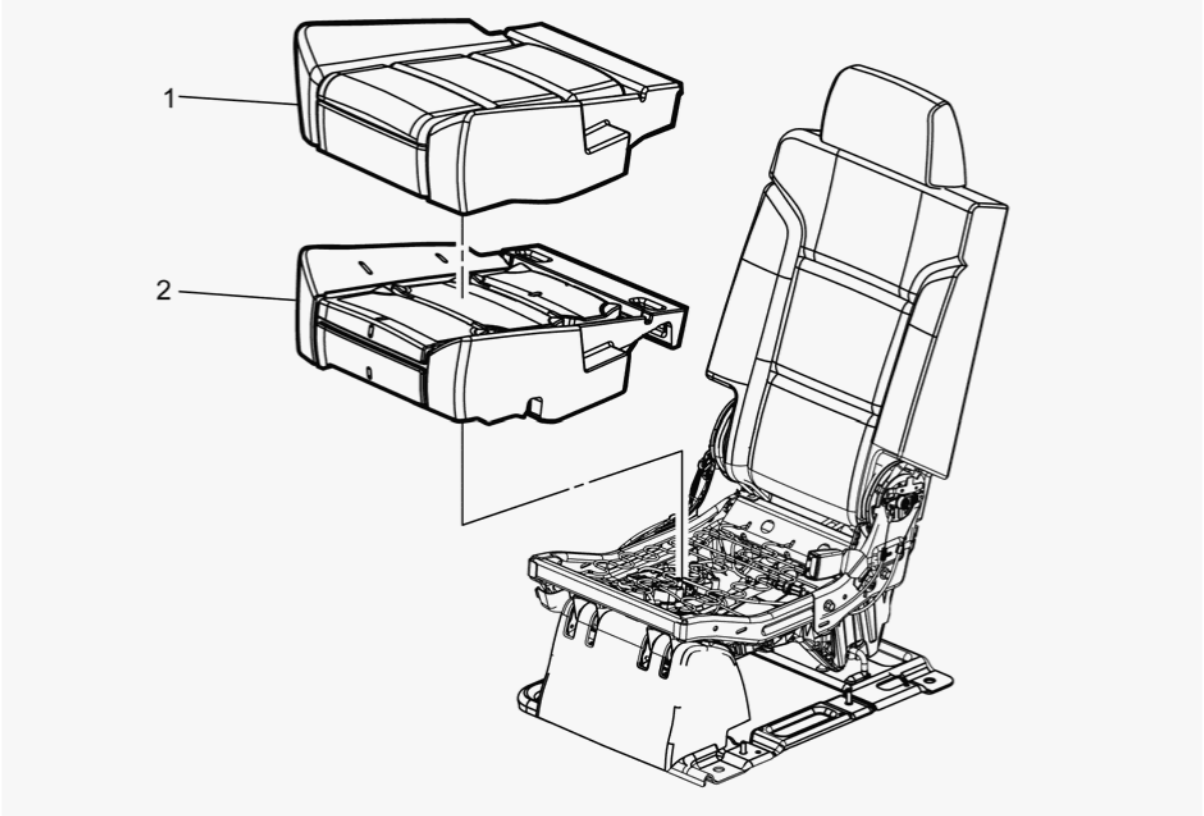


Fig. 60: Rear Seat Cushion Cover and Pad (Bucket)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Remove the rear seat cushion trim panel. Refer to **Rear Seat Cushion Trim Panel Replacement (Bucket)**.	
1	Rear Seat Cushion Cover **Procedure** 1. Disengage the seat cushion cover j-channel from the seat cushion frame. 2. Disconnect the electrical connectors, if equipped with heat.

cardiagn.com

Callout	Component Name
2	Rear Seat Cushion Pad **Procedure** 1. Disengage the hook and loop strips and the u-channels retaining the cover to the pad. 2. Separate the seat cushion cover from the pad.

REAR SEAT CUSHION COVER AND PAD REPLACEMENT (60/40 BENCH)

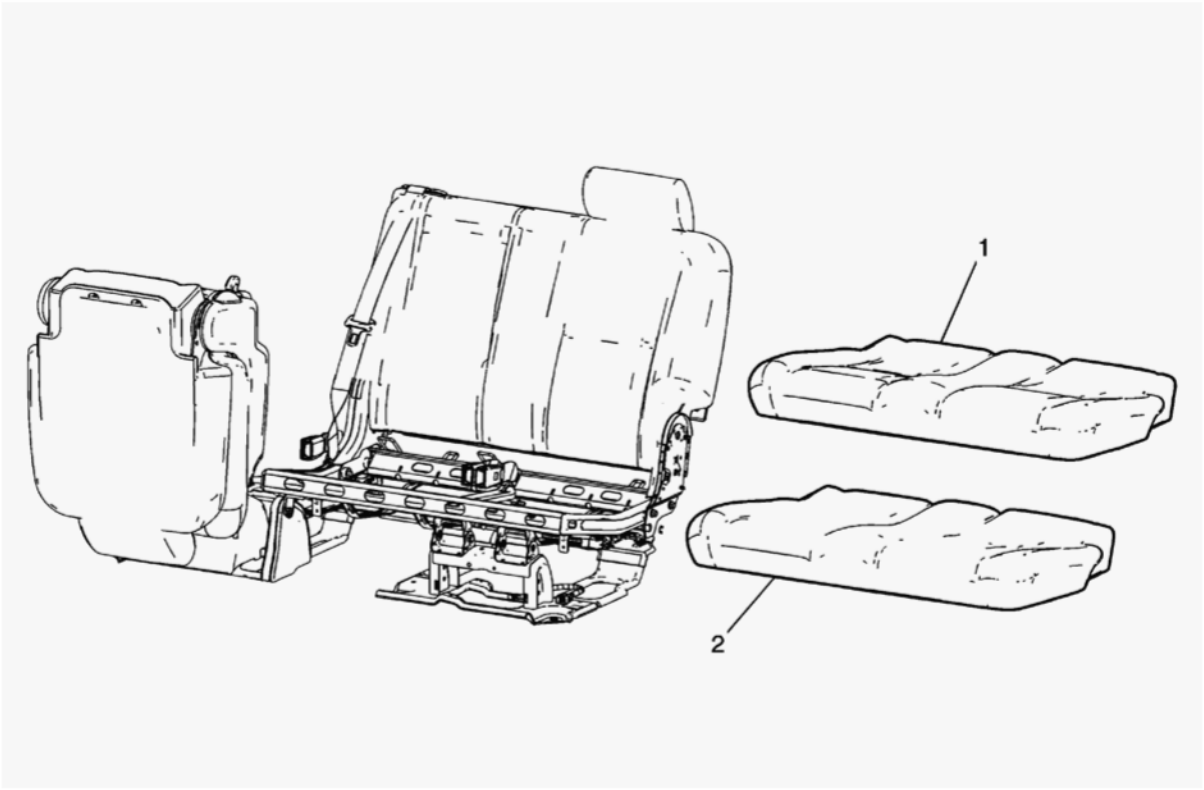


Fig. 61: Rear Seat Cushion Cover And Pad (60/40 Bench)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

cardiagn.com

Callout	Component Name
Preliminary Procedures 1. Remove the rear seat cushion trim panel. Refer to **Rear Seat Cushion Trim Panel Replacement (60/40 Bench)**. 2. For the 60% side, remove the rear seat belt buckle fastener. Slide the belt through the cover and pad in order to remove the cover completely. Refer to **Rear Seat Center Buckle Side Belt Replacement** .	
1	Rear Seat Cushion Cover **Procedure** 1. Disengage the seat cushion cover j-channel from the seat cushion frame. 2. Disconnect the electrical connectors, if equipped with heat.
2	Rear Seat Cushion Pad **Procedure** 1. Disengage the hook and loop fastener strips and U-channels retaining the cover to the pad. 2. Separate the seat cushion cover from the pad.

REAR SEAT CUSHION FRAME REPLACEMENT (60% BENCH)

cardiagn.com

nd ...

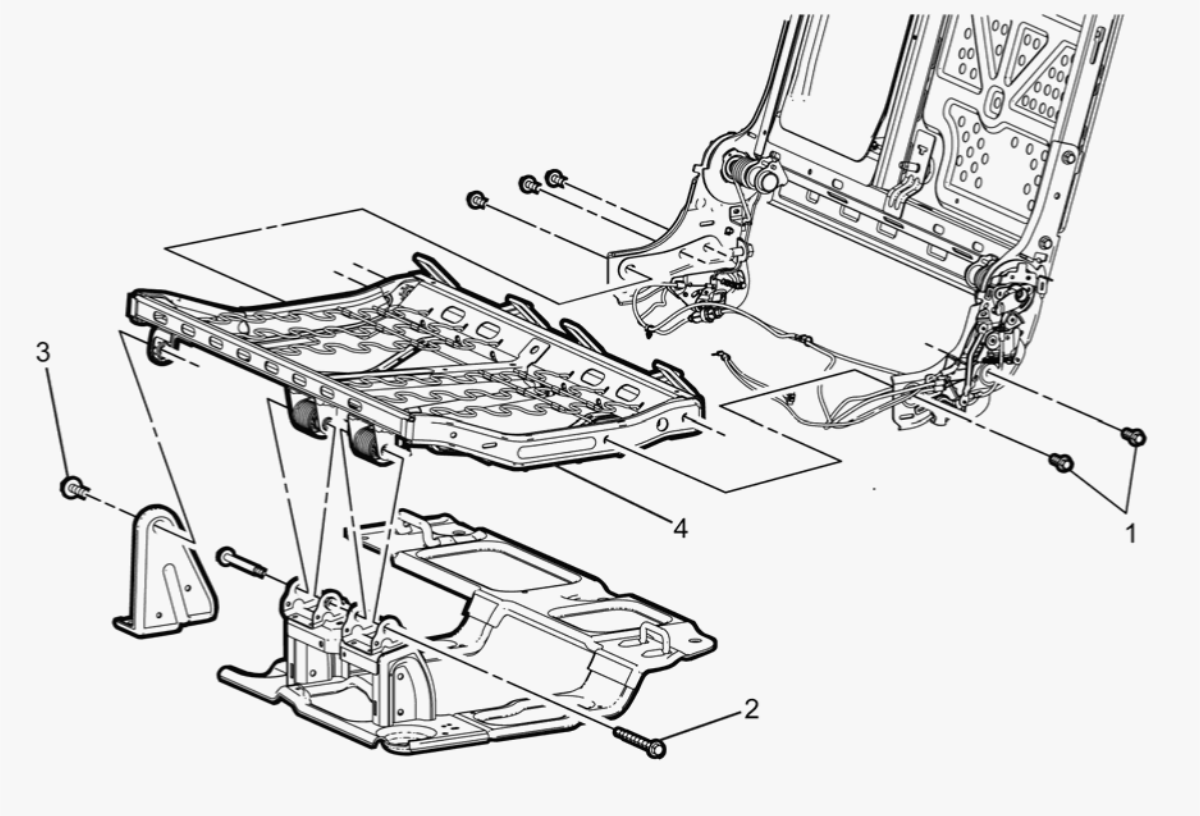


Fig. 62: Rear Seat Cushion Frame (60% Bench)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove Rear Seat Riser Finish Cover. Refer to **Rear Seat Riser Finish Cover Replacement** 2. Remove Rear Seat Front Riser Finish Cover. Refer to **Rear Seat Front Riser Finish Cover Replacement** 3. Remove Rear Seat Strut. Refer to **Rear Seat Strut Replacement** 4. Remove Rear Seat Cushion Cover and Pad. Refer to **Rear Seat Cushion Cover and Pad Replacement (60/40 Bench)**	
1	Rear Seat Inner and Outer Recliner Fastener (Qty: 5) **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to Fastener Caution . **Tighten** 50 N.m (37 lb ft)
2	Rear Seat Riser Outer Fastener (Qty: 2) **Tighten** 50 N.m (37 lb ft)
3	Rear Seat Riser Inner Fastener **Tighten** 50 N.m (37 lb ft)
4	Rear Seat Cushion Frame **Procedure** 1. Disconnect the recliner cables from the cushion frame and recliner assembly. 2. Disconnect the electrical connector, if equipped. **NOTE:** **Note the routing of the recliner cables for installation.**

REAR SEAT CUSHION FRAME REPLACEMENT (40% BENCH)

cardiagn.com

nd ...

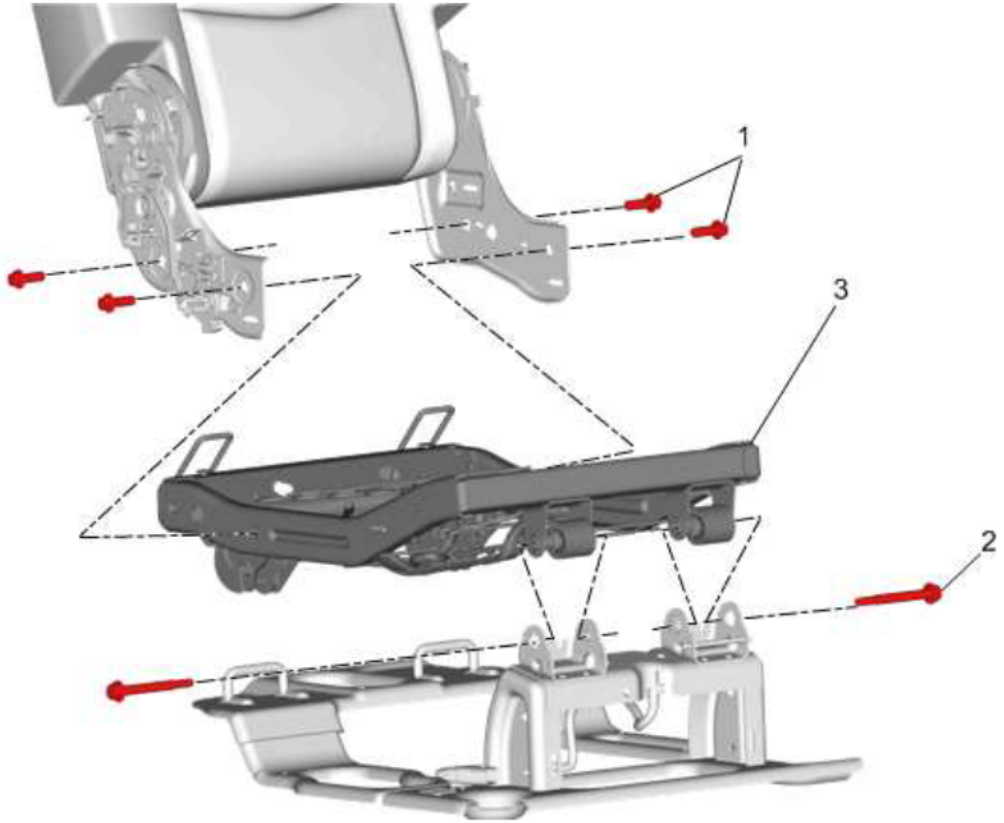


Fig. 63: Rear Seat Cushion Frame (40% Bench)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove Rear Seat Riser Finish Cover. Refer to **Rear Seat Riser Finish Cover Replacement** 2. Remove Rear Seat Strut. Refer to **Rear Seat Strut Replacement** 3. Remove Rear Seat Cushion Cover and Pad. Refer to **Rear Seat Cushion Cover and Pad Replacement (60/40 Bench)**	
1	Rear Seat Inner and Outer Recliner Fastener (Qty: 4) **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to Fastener Caution . **Tighten** 50 N.m (37 lb ft)
2	Rear Seat Riser Outer Fastener (Qty: 2) **Tighten** 50 N.m (37 lb ft)
3	Rear Seat Cushion Frame **Procedure** 1. Disconnect the recliner cables from the cushion frame and recliner assembly. 2. Disconnect the electrical connector, if equipped. **NOTE:** **Note the routing of the recliner cables for installation.**

REAR SEAT LATCH REPLACEMENT

cardiagn.com

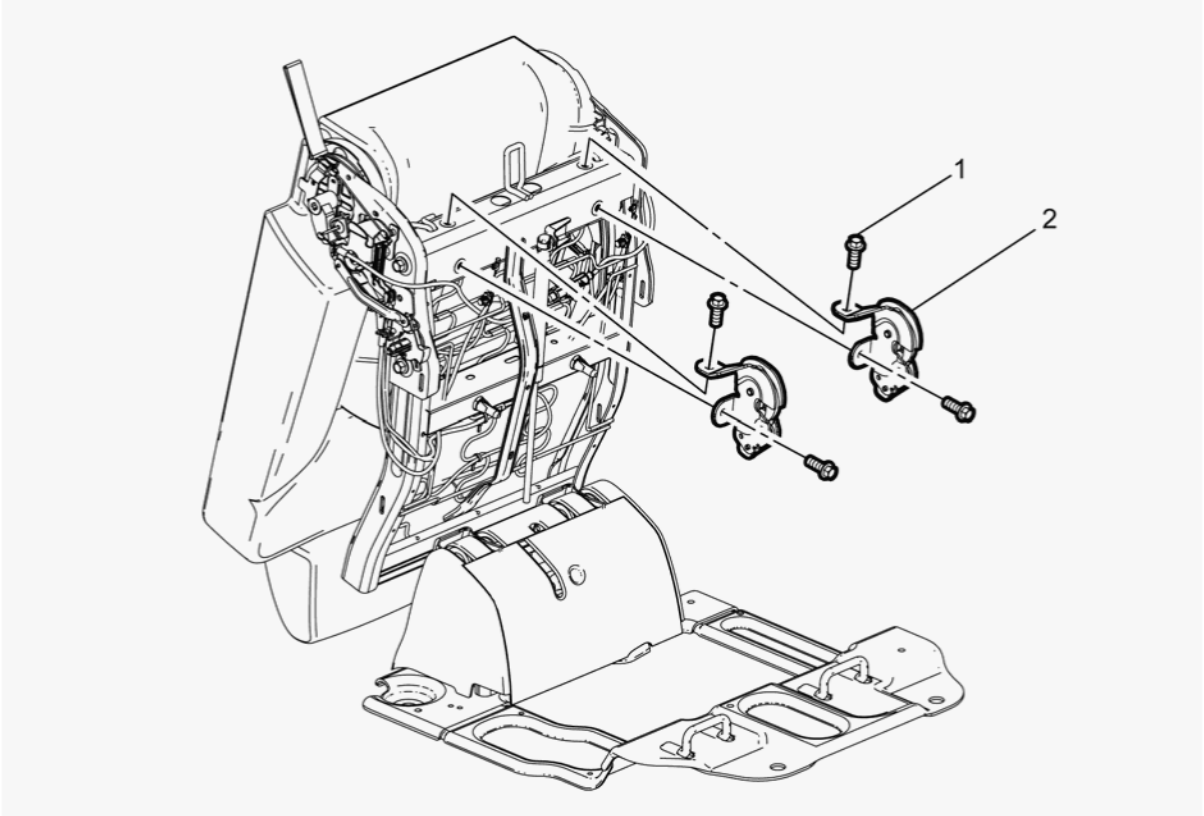



Fig. 64: Rear Seat Latch
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
1. Remove the rear seat latch cable. Refer to **Rear Seat Latch Cable Replacement**. 2. Remove the rear seat cushion trim panel. Refer to **Rear Seat Cushion Trim Panel Replacement (60/40 Bench)Rear Seat Cushion Trim Panel Replacement (Bucket)**. 3. Disengage the seat cushion cover J-channel at the rear of the seat cushion frame. 4. Pull upward slightly on the rear of the seat cushion cover and pad to gain access to the seat latch fasteners. 5. Remove the rear seat latch cable from the latch only.	

cardiagn.com

Callout	Component Name
1	Rear Seat Latch Fastener (Qty: 4) **CAUTION:** **Refer to** **Fastener Caution .** **Tighten** 9 N.m (80 lb in)
2	Rear Seat Latch (Qty: 2)

REAR SEAT CUSHION INNER PANEL REPLACEMENT

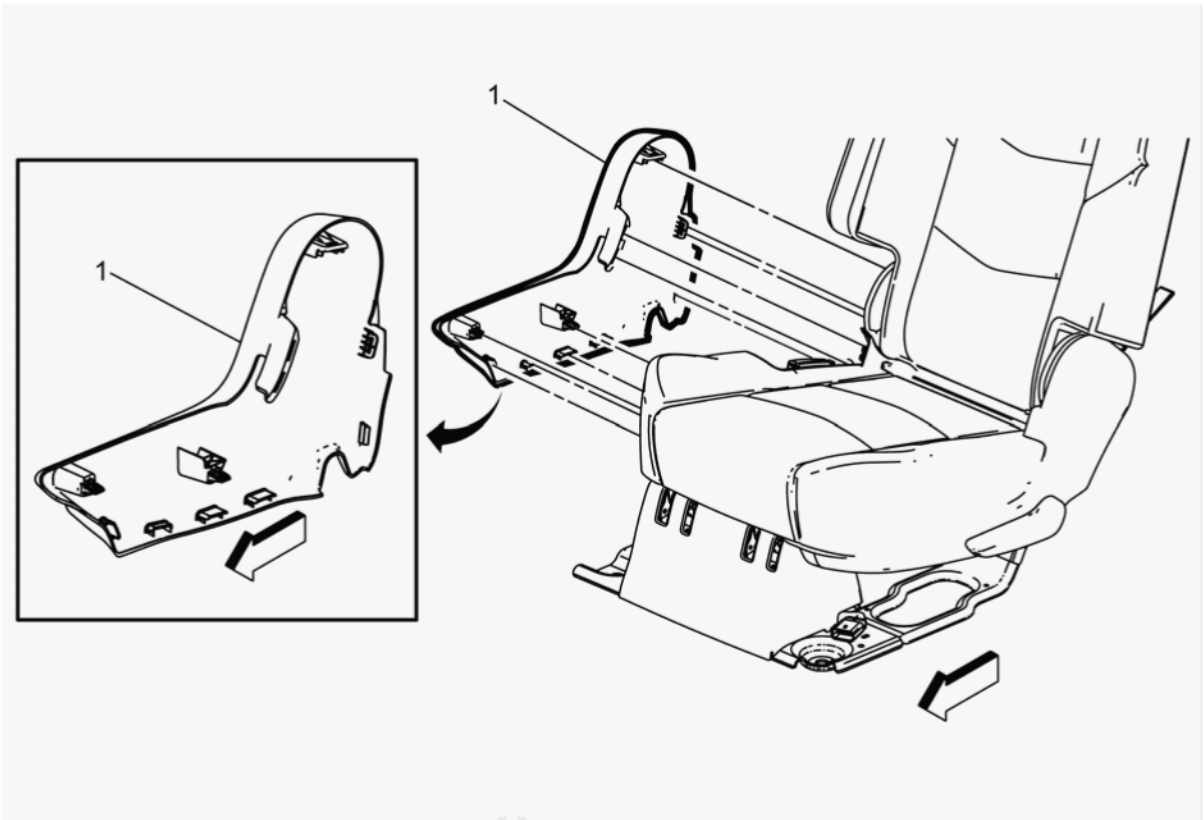

cardiagn.com

Fig. 65: Rear Seat Cushion Inner Panel
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove rear seat, if required. Refer to Rear Seat Removal and Installation (60/40 Bench)Rear Seat Removal and Installation (Bucket). **NOTE:** **The bench rear seat must be removed to gain access to the 60% and 40% seat cushion inner panel.**	
1	Rear Seat Cushion Inner Trim Panel **Procedure** 1. Disengage the retainer two tabs that attach inner trim panel to the hinge finish cover with a suitable flat-bladed tool. 2. Disengage the rear portion of the trim panel first by pulling outward at the retainer clip locations. 3. Disengage the front portion of the trim panel first by pulling outward at the retainer clip locations. 4. Remove the inner trim panel by gently pulling the trim panel outboard off the recliner bracket and seat frame.

REAR SEAT CUSHION OUTER TRIM PANEL REPLACEMENT

cardiagn.com

nd ...

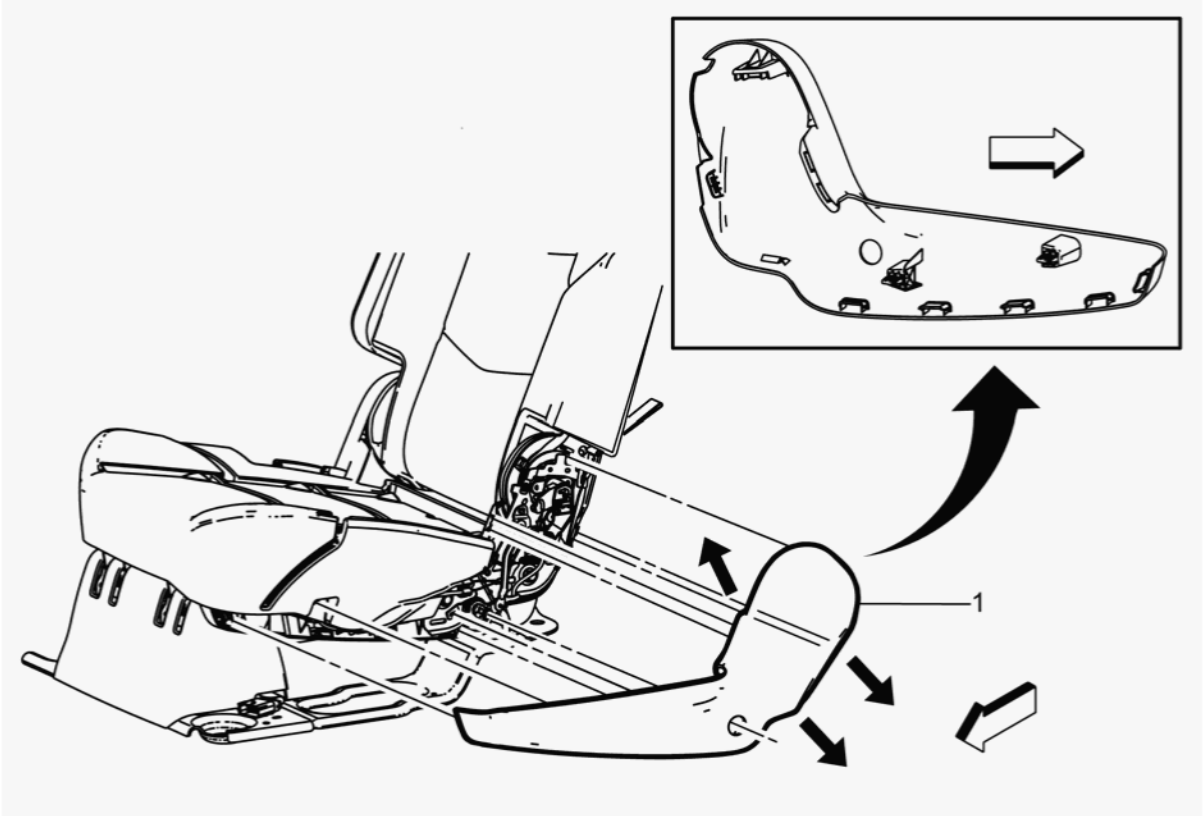


Fig. 66: Rear Seat Cushion Outer Trim Panel
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear seat recliner handle. Refer to **Rear Seat Recliner Handle Replacement**.	
1	Rear Seat Cushion Outer Trim Panel **Procedure** 1. Disengage the retainer two tabs that attach outer trim panel to the hinge finish cover with a suitable flat-bladed tool. 2. Disengage the rear portion of the trim panel first by pulling outward at the retainer clip locations. 3. Disengage the front portion of the trim panel first by pulling outward at the retainer clip locations. 4. Remove the outer trim panel by gently pulling the trim panel outboard off the recliner bracket and seat frame.

cardiagn.com

REAR SEAT CUSHION TRIM PANEL REPLACEMENT (60/40 BENCH)

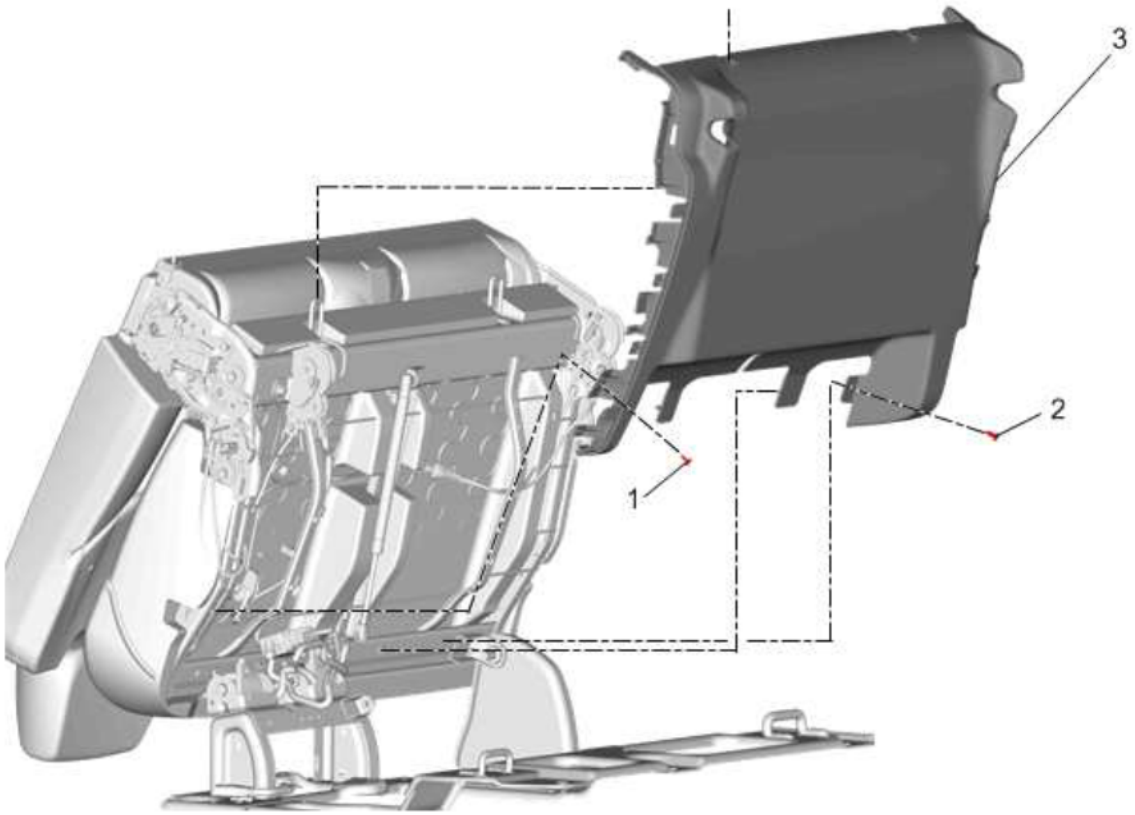


Fig. 67: Rear Seat Cushion Trim Panel (60/40 Bench)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Remove Rear Seat Cushion Inner Panel. Refer to **Rear Seat Cushion Inner Panel Replacement**	
2. Remove Rear Seat Cushion Outer Trim Panel. Refer to **Rear Seat Cushion Outer Trim Panel Replacement**	
3. Remove Rear Seat Riser Finish Cover. Refer to **Rear Seat Riser Finish Cover Replacement**	
NOTE:	

cardiagn.com

Callout	Component Name
The 60% seat is shown, the 40% seat is similar.	
1	Rear Seat Cushion Trim Panel Screw (Qty: 4) **CAUTION:** **Refer to Fastener Caution .** **Tighten** 2 N.m (18 lb in) **Procedure** Release the rear seat latch to fold up the seat and gain access to the latch finish cover fastener
2	Rear Seat Cushion Trim Panel Retainer (Qty: 2)
3	Rear Seat Cushion Trim Panel **Procedure** Release the tabs with the metal retaining clips. Remove the cushion trim panel by pulling the panel upward over the rear frame wire hooks.

REAR SEAT CUSHION TRIM PANEL REPLACEMENT (BUCKET)

cardiagn.com

nd ...

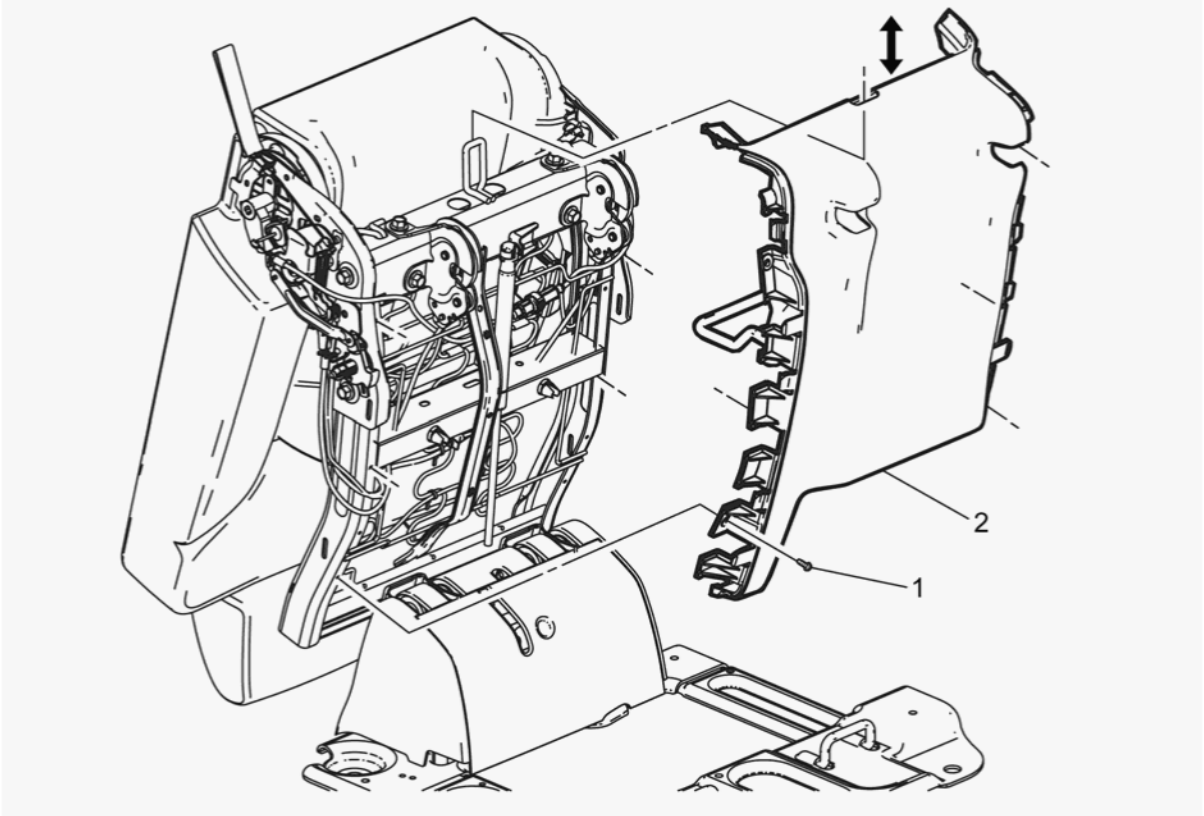


Fig. 68: Rear Seat Cushion Trim Panel (Bucket)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the rear seat cushion inner trim panel. Refer to **Rear Seat Cushion Inner Panel Replacement** 2. Remove the rear seat cushion outer trim panel. Refer to **Rear Seat Cushion Outer Trim Panel Replacement** 3. Remove the rear seat riser finish cover. Refer to **Rear Seat Riser Finish Cover Replacement**	
1	Rear Seat Cushion Trim Panel Screw (Qty: 4) **CAUTION:**

cardiagn.com

Callout	Component Name
	Refer to Fastener Caution . **Tighten** 2 N.m (18 lb in) **Procedure** Release the rear seat latch to fold up the seat and gain access to the latch finish cover fastener
2	Rear Seat Cushion Trim Panel **Procedure** 1. Remove the plastic push in retainer. 2. Release the tab with the metal retaining clip. 3. Remove the cushion trim panel by pulling the panel upward over the rear frame wire hooks.

REAR SEAT SHOULDER BELT GUIDE OPENING BEZEL REPLACEMENT (3RD ROW SHORT WHEEL BASE)

cardiagn.com

nd ...

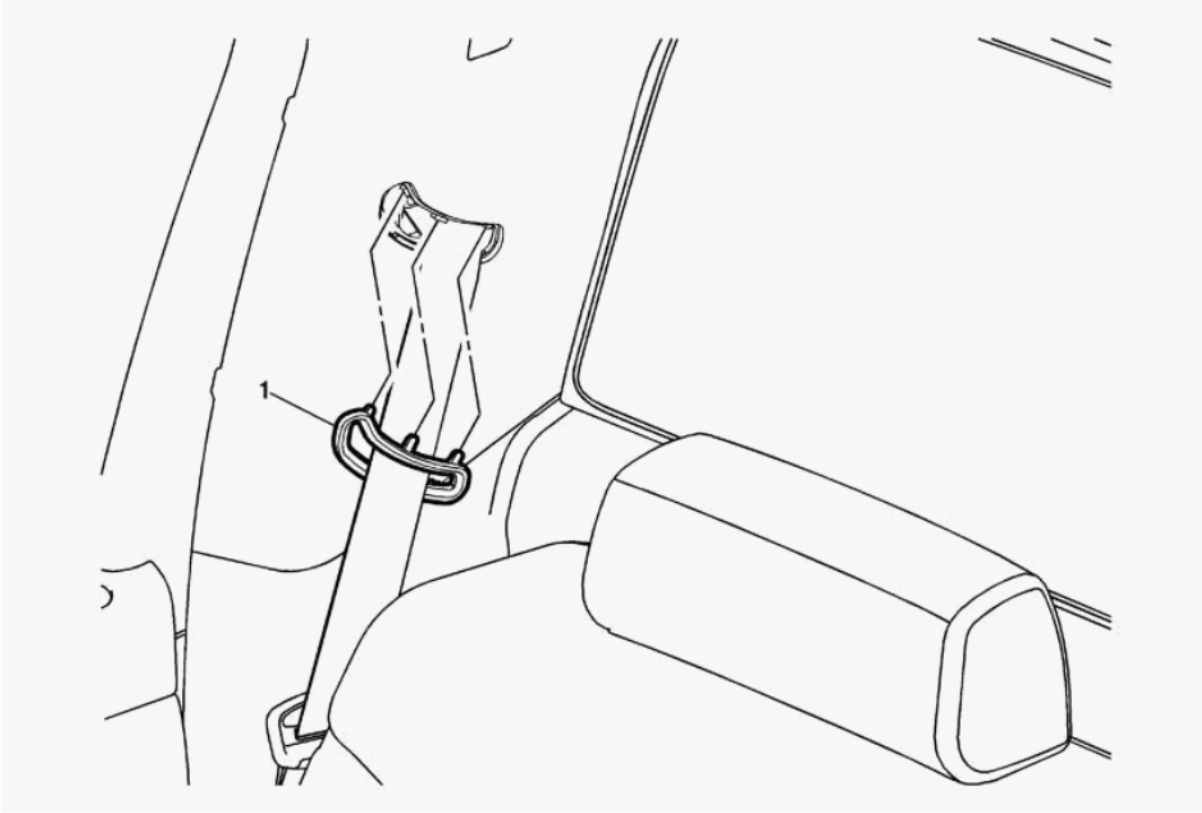


Fig. 69: Rear Seat Shoulder Belt Guide Opening Bezel (3rd Row Short Wheel Base)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the 3rd row seat. Refer to **3rd Row Seat Removal and Installation** 2. Remove the rear seat shoulder belt anchor plate fastener. Refer to **3rd Row Center Seat Belt Retractor Replacement (Short Wheelbase)**	
1	Rear Seat Shoulder Belt Guide Opening Bezel **CAUTION:**

cardiagn.com

Callout	Component Name
	Do not twist the cover during removal. Twisting the cover may cause the component to break. **Procedure** 1. Firmly grasp both sides of the bezel pulling the bottom outward to disengage the bottom of the cover. 2. Remove the bezel by sliding the cover downward and guiding the lower portion of the belt through the bezel.

REAR SEAT BELT OPENING BEZEL REPLACEMENT

cardiagn.com

nd ...

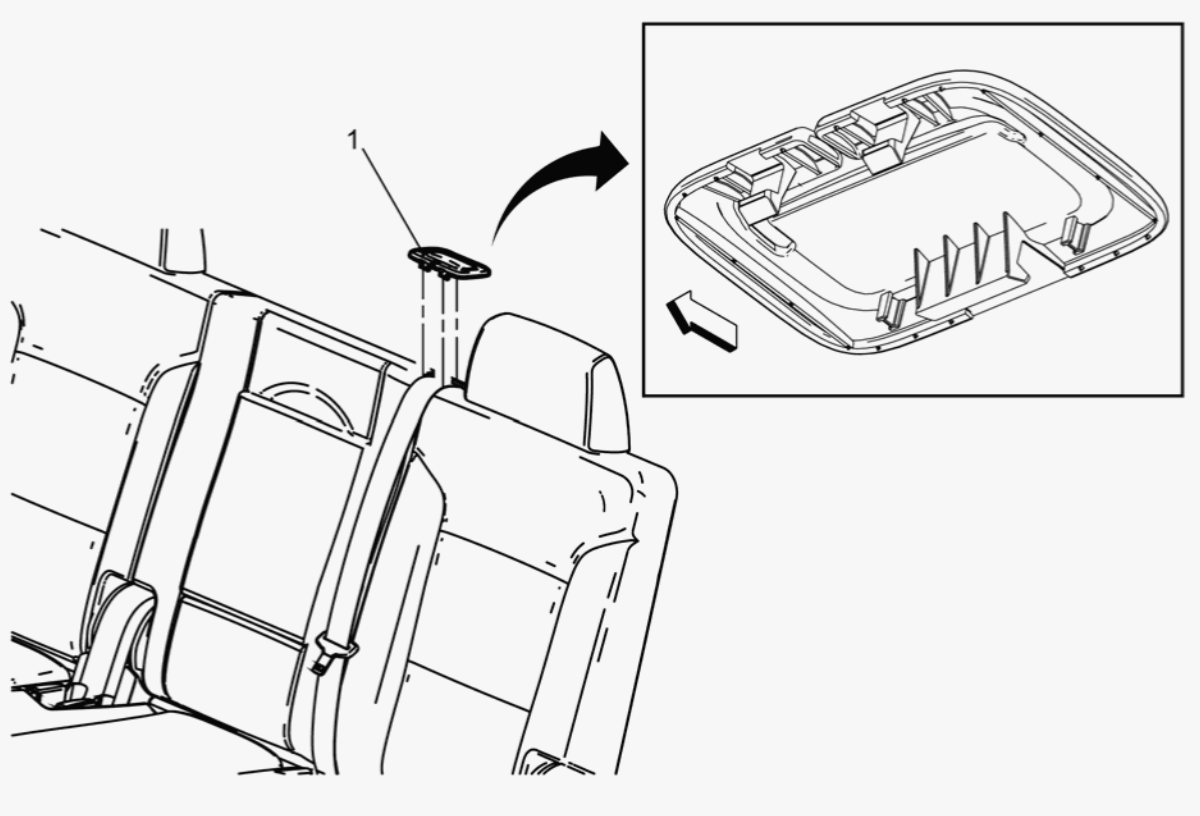


Fig. 70: Rear Seat Belt Opening Bezel
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Seat Belt Opening Bezel **Procedure** 1. Use a suitable flat-bladed tool to release the bezel from the rear seat cushion cover and pad and then slide it out rearwards to remove. 2. Route the rear seat retractor belt through the opening in the rear seat back shoulder opening cover.

REAR SEAT BACK FOLDING SWITCH REPLACEMENT

cardiagn.com

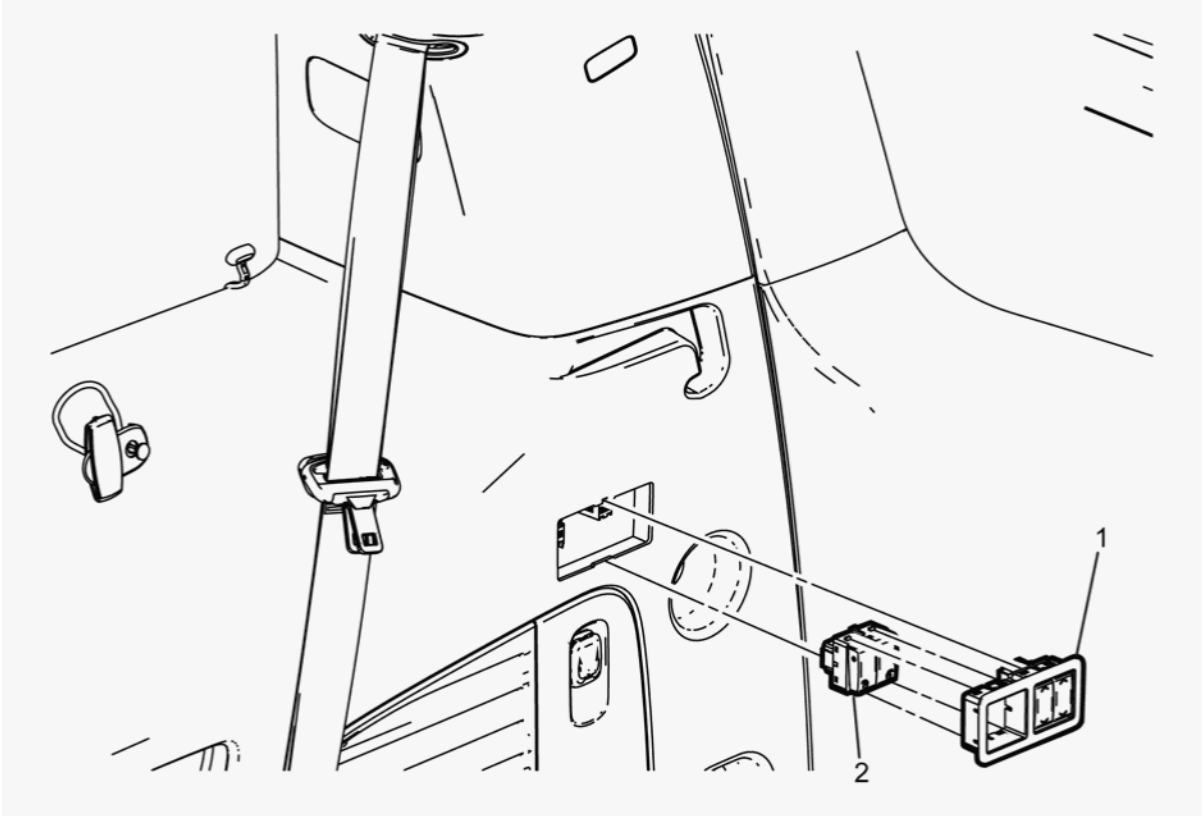


Fig. 71: Rear Seat Back Folding Switch
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the quarter lower rear trim panel. Refer to **Quarter Lower Rear Trim Panel Replacement (Left Side, Standard Wheelbase)** **Quarter Lower Rear Trim Panel Replacement (Right Side, Standard Wheelbase)** **Quarter Lower Rear Trim Panel Replacement (Left Side, Extended Wheelbase)** **Quarter Lower Rear Trim Panel Replacement (Right Side, Extended Wheelbase)** .	
1	Rear Seat Back Folding Actuator Switch Bezel **Procedure** Use a flat-bladed plastic trim tool in order to release the rear seat back folding actuator switch bezel from the quarter lower trim panel
2	Rear Seat Back Folding Actuator Switch **Procedure**

cardiagn.com

Callout	Component Name
	Disconnect the electrical connectors.

REAR SEAT BACK CUSHION COVER AND PAD REPLACEMENT (40%)

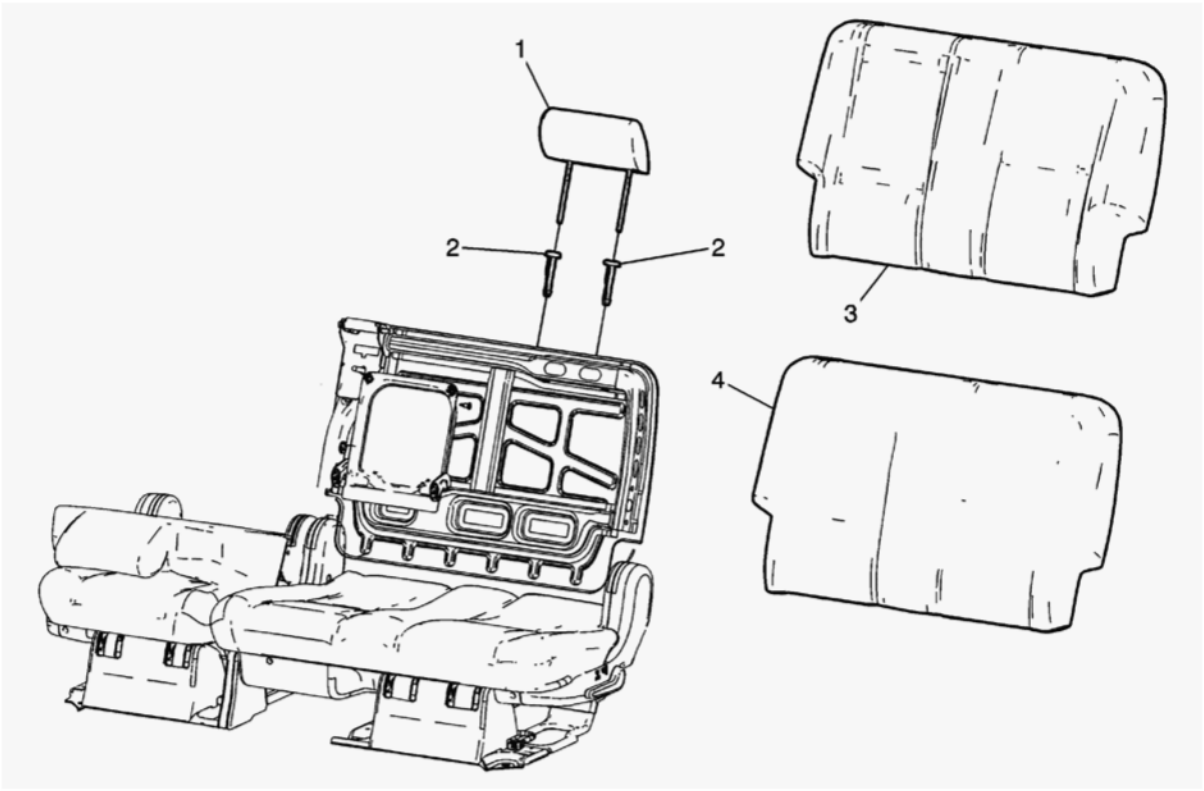


Fig. 72: Rear Seat Back Cushion Cover, Pad And Components (40%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Remove rear seat. Refer to **Rear Seat Removal and Installation (60/40 Bench)**	
2. Remove rear seat head restraint guide. Refer to **Rear Seat Head Restraint Guide Replacement**	
3. Remove Rear Seat Armrest. Refer to **Rear Seat Armrest Replacement (60/40 Bench)**	

cardiagn.com

Callout	Component Name
4. Remove Rear seat center buckle side belt. Refer to **Rear Seat Center Buckle Side Belt Replacement** 5. Remove rear seat belt opening bezel. Refer to **Rear Seat Belt Opening Bezel Replacement**	
1	Rear Seat Head Restraint
2	Rear Seat Head Restraint Guide
3	Rear Seat Back Cushion Cover **Procedure** 1. Disconnect the seat back cushion cover j-channel. 2. Remove the four push in retainers holding the cover to the seat back frame. 3. Disconnect the electrical connector if equipped with heated seat. 4. Pull the seat back cushion cover away from the seat cushion pad to disengage the hook and loop fasteners.
4	Rear Seat Back Cushion Pad

REAR SEAT BACK CUSHION COVER AND PAD REPLACEMENT (BUCKET)

cardiagn.com

nd ...

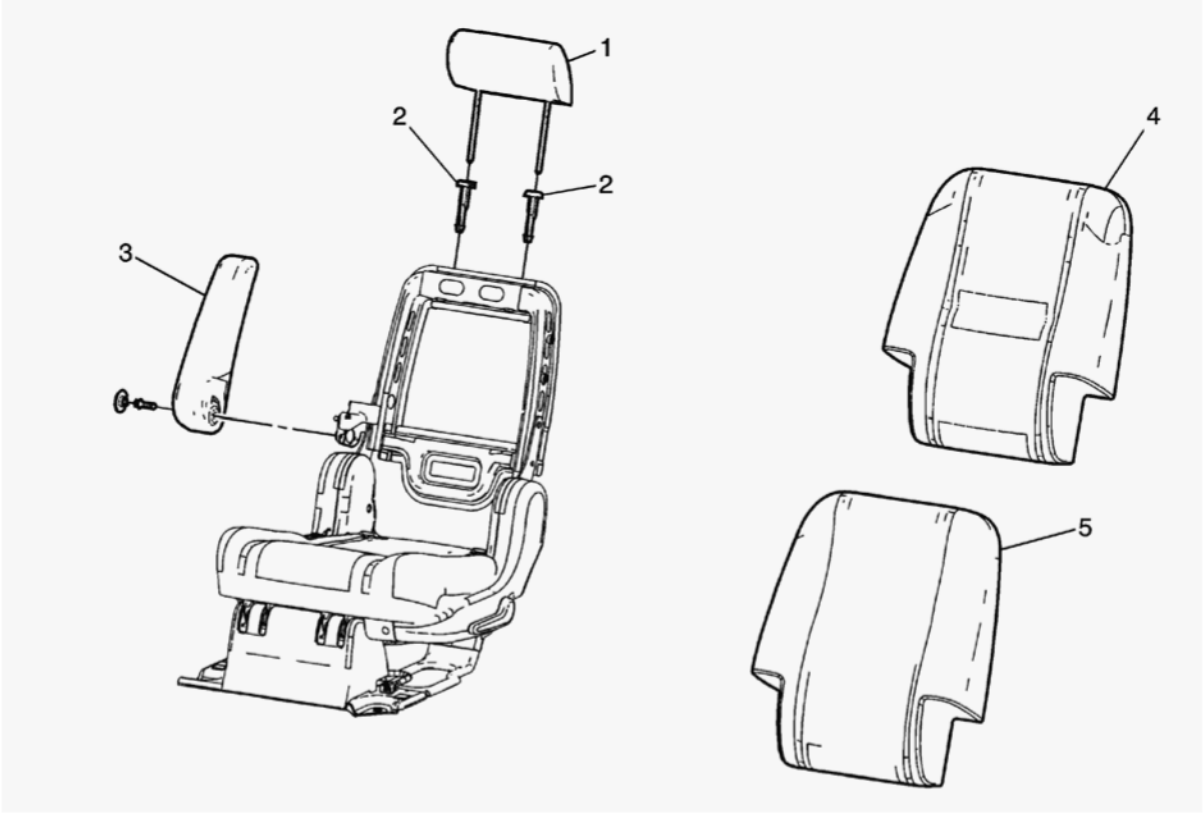



Fig. 73: Rear Seat Back Cushion Cover, Pad And Components (Bucket)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the rear seat. Refer to **Rear Seat Removal and Installation (Bucket)**. 2. Remove the rear seat head restraint. Refer to **Rear Seat Head Restraint Replacement**. 3. Remove the rear seat armrest. Refer to **Rear Seat Armrest Replacement (Bucket)**.	
1	Rear Seat Head Restraint
2	Rear Seat Head Restraint Guides
3	Rear Seat Armrest

cardiagn.com

Callout	Component Name
4	Rear Seat Back Cushion Cover **Procedure** 1. Disconnect the seat back cushion cover j-channel from the seat cushion frame. 2. Disconnect the electrical connector if equipped with heated seat. 3. Pull the seat back cushion cover away from the seat cushion pad to disengage the hook and loop fasteners.
5	Rear Seat Back Cushion Pad **Procedure** Remove the rear seat head restraint guides. Refer to **Rear Seat Head Restraint Guide Replacement**.

REAR SEAT BACK CUSHION COVER AND PAD REPLACEMENT (60%)

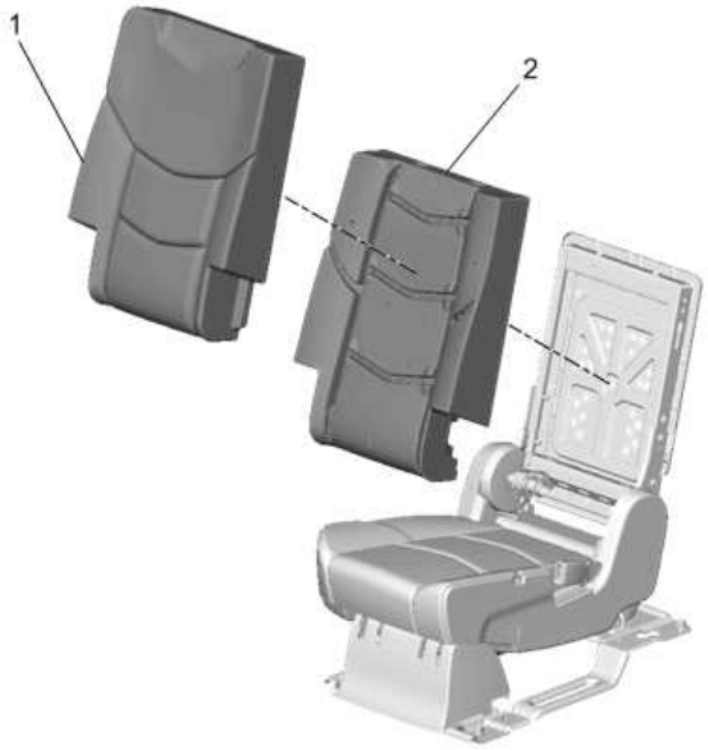

cardiagn.com

Fig. 74: Rear Seat Back Cushion Cover, Pad And Components (60%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove rear seat. Refer to **Rear Seat Removal and Installation (60/40 Bench)** 2. Remove rear seat head restraint guide. Refer to **Rear Seat Head Restraint Guide Replacement**	
1	Rear Seat Back Cushion Cover **Procedure** 1. Disconnect the seat back cushion cover j-channel. 2. Remove the four push in retainers holding the cover to the seat back frame. 3. Disconnect the electrical connector if equipped with heated seat. 4. Pull the seat back cushion cover away from the seat cushion pad to disengage the hook and loop fasteners.
2	Rear Seat Back Cushion Pad

REAR SEAT BACK CUSHION FRAME REPLACEMENT (BUCKET)

cardiagn.com

nd ...

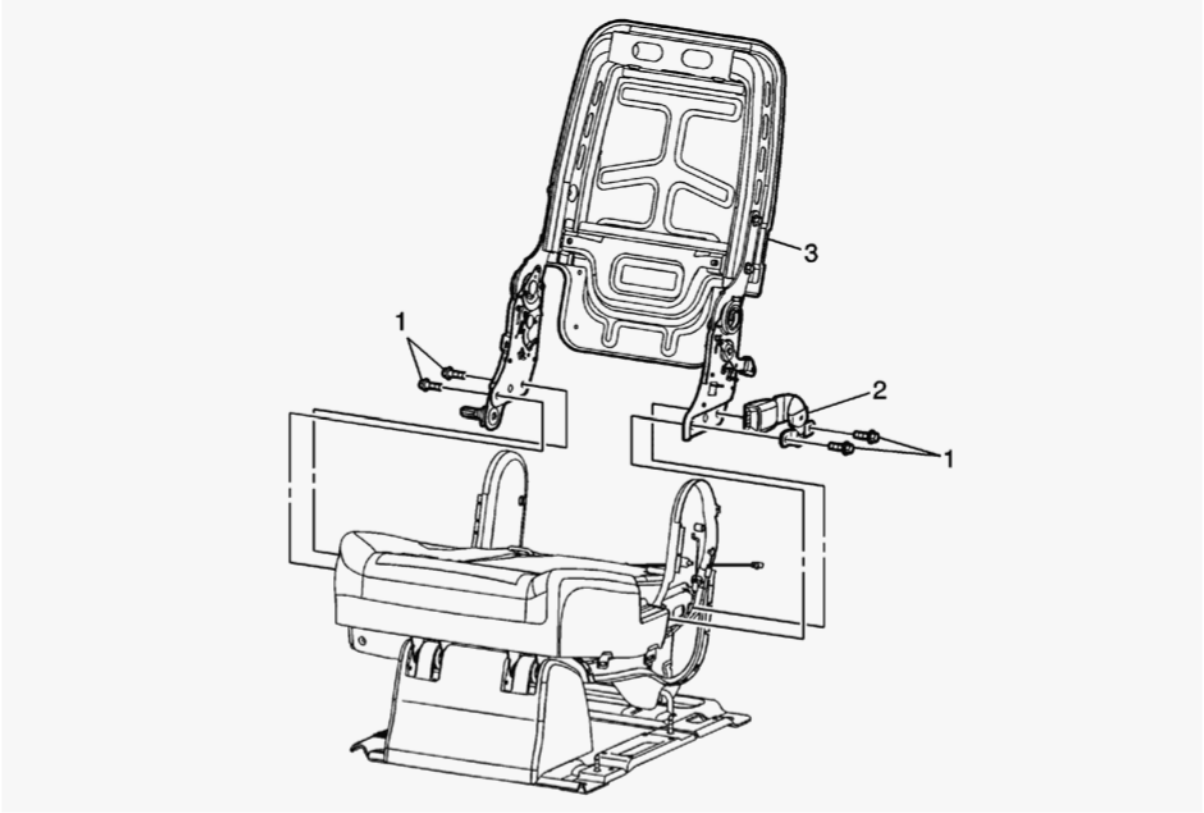



Fig. 75: Rear Seat Back Cushion Frame, Bolts & Buckle Assembly (Bucket)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat. Refer to **Rear Seat Removal and Installation (Bucket)**. 2. Remove the rear seat back cover and pad. Refer to **Rear Seat Back Cushion Cover and Pad Replacement (Bucket)**.	
1	Rear Seat Back Recliner Bolts (Qty: 4) **CAUTION:** **Refer to** **Fastener**

cardiagn.com

Callout	Component Name
	Caution . **Tighten** 50 N.m (37 lb ft)
2	Rear Seat Belt Buckle Assembly **Procedure** Refer to **Rear Seat Belt Buckle Replacement (Bucket)** .
3	Rear Seat Back Cushion Frame **Procedure** Transfer components as necessary.

REAR SEAT BACK CUSHION FRAME REPLACEMENT (40%)

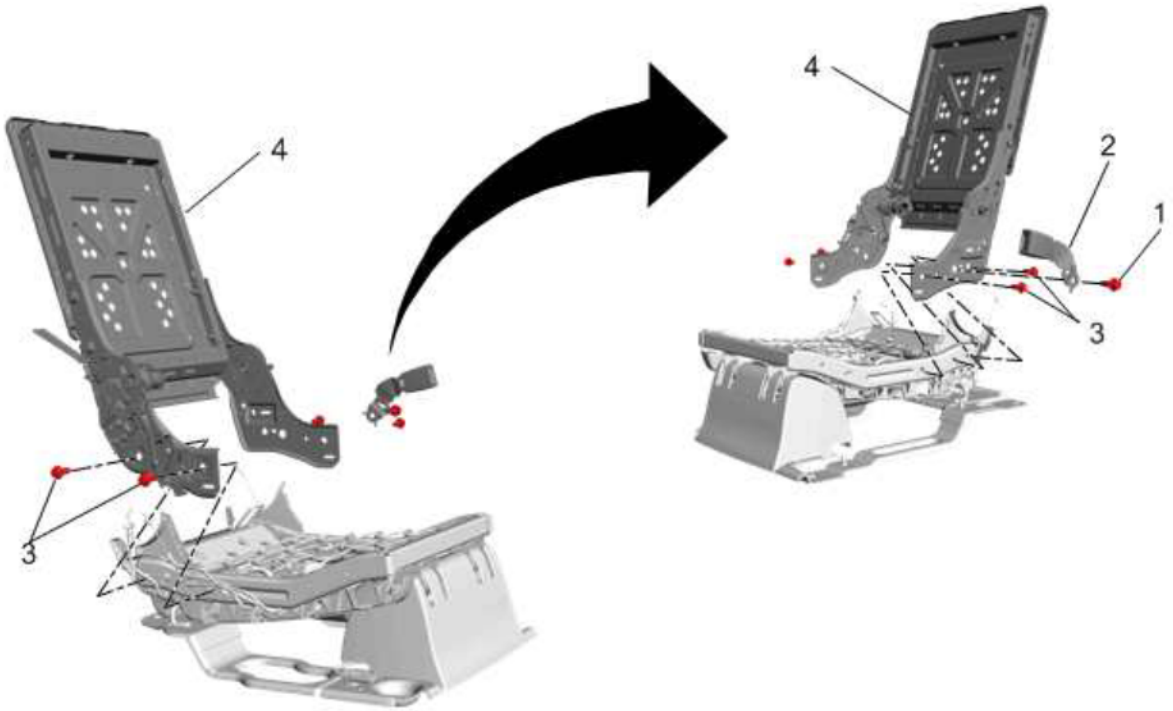

cardiagn.com

Fig. 76: Rear Seat Back Cushion Frame (40%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove rear seat. Refer to **Rear Seat Removal and Installation (60/40 Bench)** 2. Remove rear seat cushion cover and pad. Refer to **Rear Seat Cushion Cover and Pad Replacement (60/40 Bench)** 3. Remove rear seat back cushion cover and pad. Refer to **Rear Seat Back Cushion Cover and Pad Replacement (40%)**	
1	Rear Seat Belt Buckle Fastener **CAUTION:** **Refer to Fastener Caution .** **Tighten** 55 N.m (41 lb ft)
2	Rear Seat Belt Buckle
3	Rear Seat Back Cushion Frame Fastener (Qty: 4) **CAUTION:** **Refer to Fastener Caution .** **Tighten** 55 N.m (41 lb ft)
4	Rear Seat Back Cushion Frame **Procedure**

cardiagn.com

Callout	Component Name
	1. Disconnect the recliner cables from the recliners. 2. Disconnect all electrical connectors. 3. Transfer components as necessary.

REAR SEAT BACK CUSHION FRAME REPLACEMENT (60%)

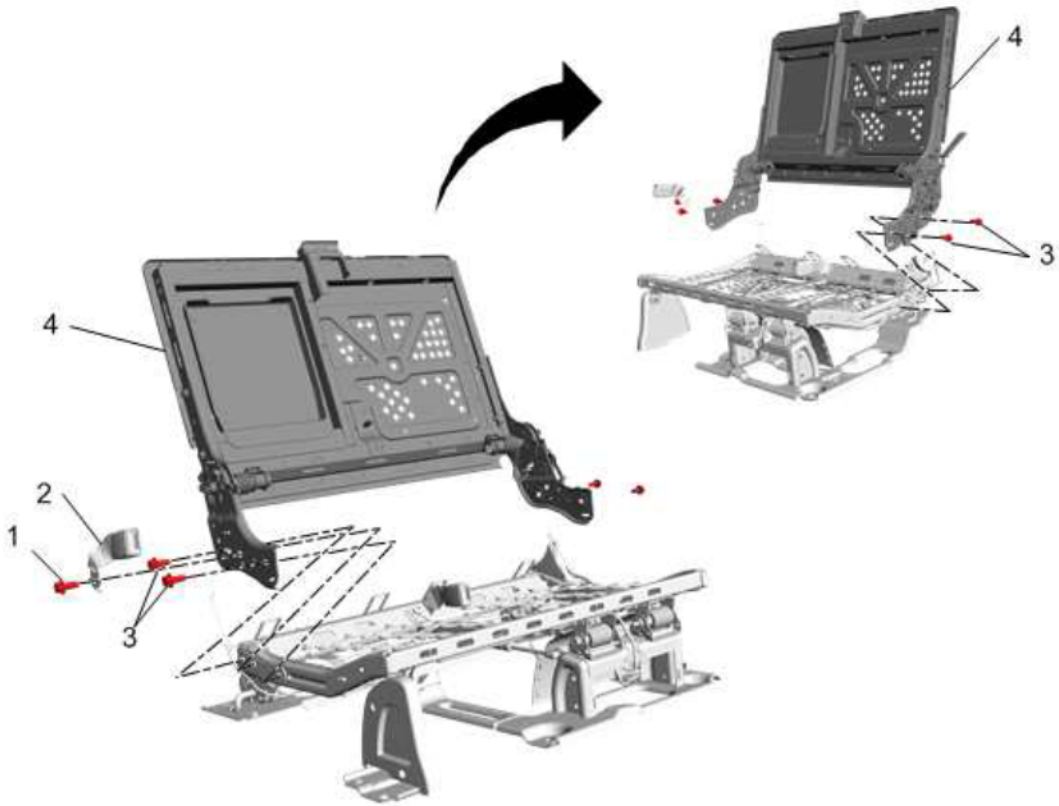


Fig. 77: Rear Seat Back Cushion Frame (60%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	

cardiagn.com

Callout	Component Name
1. Remove rear seat. Refer to **Rear Seat Removal and Installation (60/40 Bench)** 2. Remove rear seat cushion cover and pad. Refer to **Rear Seat Cushion Cover and Pad Replacement (60/40 Bench)** 3. Remove rear seat back cushion cover and pad. Refer to **Rear Seat Back Cushion Cover and Pad Replacement (60%)**	
1	Rear Seat Belt Buckle Fastener **CAUTION:** **Refer to Fastener Caution .** **Tighten** 55 N.m (41 lb ft)
2	Rear Seat Belt Buckle
3	Rear Seat Back Cushion Frame Fastener (Qty: 4) **CAUTION:** **Refer to Fastener Caution .** **Tighten** 55 N.m (41 lb ft)
4	Rear Seat Back Cushion Frame **Procedure** 1. Disconnect the recliner cables from the recliners. 2. Disconnect all electrical connectors. 3. Transfer components as necessary.

cardiagn.com

nd ...

REAR SEAT RECLINER HANDLE REPLACEMENT

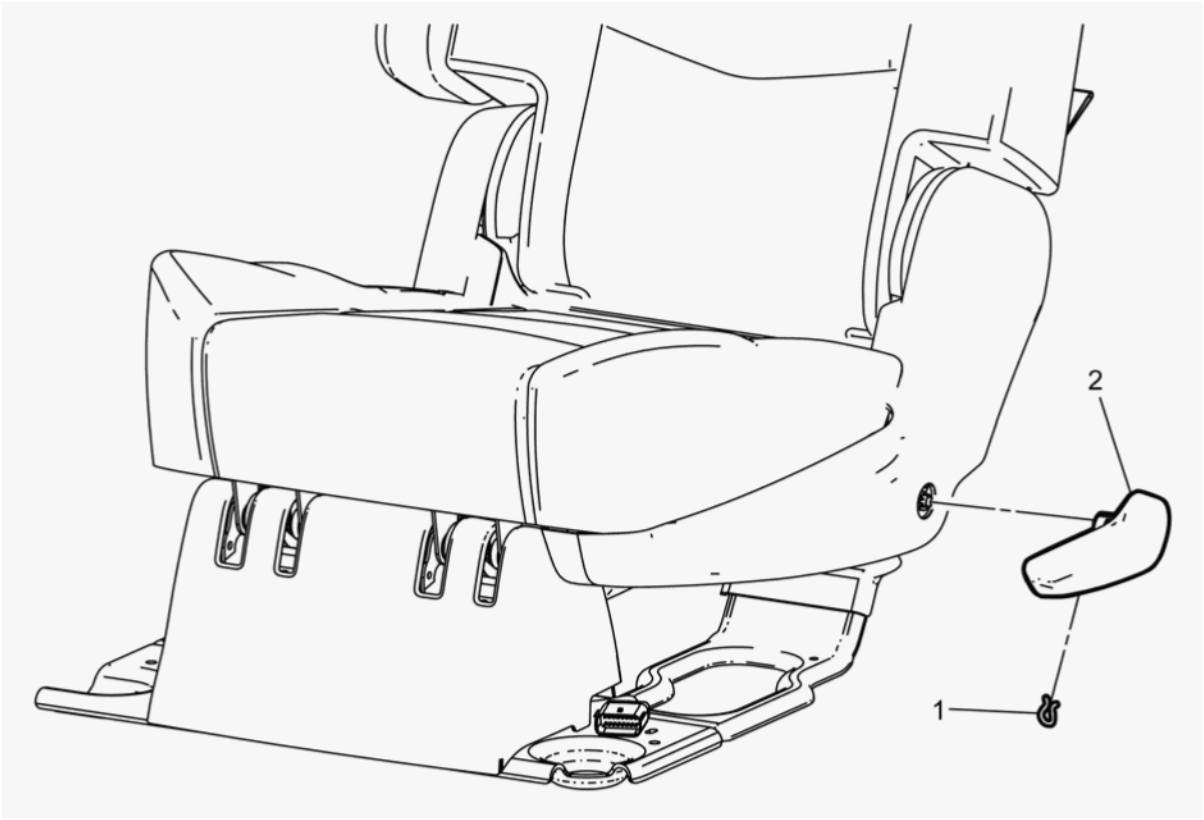


Fig. 78: Rear Seat Recliner Handle
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Seat Recliner Handle Clip **Preliminary Procedure** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the lever..
2	Rear Seat Recliner Handle

REAR SEAT LATCH CABLE REPLACEMENT

cardiagn.com

nd ...

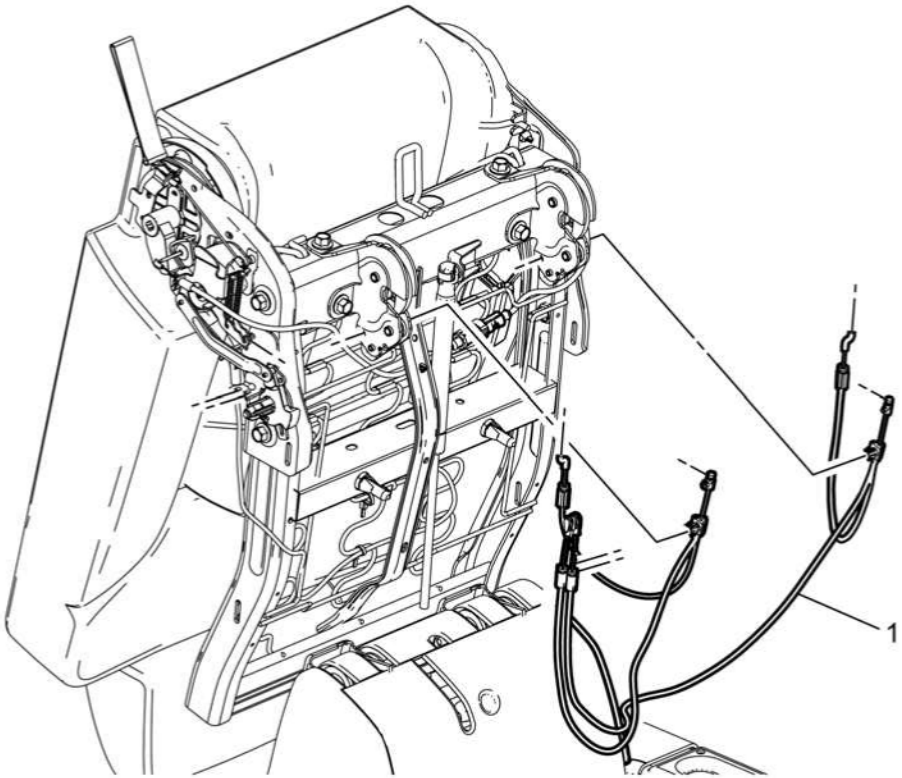


Fig. 79: Rear Seat Latch Cable
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Remove the rear seat cushion trim panel. Refer to **Rear Seat Cushion Trim Panel Replacement (60/40 Bench)Rear Seat Cushion Trim Panel Replacement (Bucket)**.	
1	Rear Seat Latch Cable **Procedure** 1. Release the rear seat latch to fold up the seat and gain access to the latch cable. 2. Release the J-channel retainers on the rear and side of the seat cushion. 3. Release the seat cushion enough for access to the cables for routing purposes.

cardiagn.com

Callout	Component Name
	4. Disconnect the latch cable from the seat recliner bracket.

REAR SEAT LATCH CABLE SYNCHRONIZATION

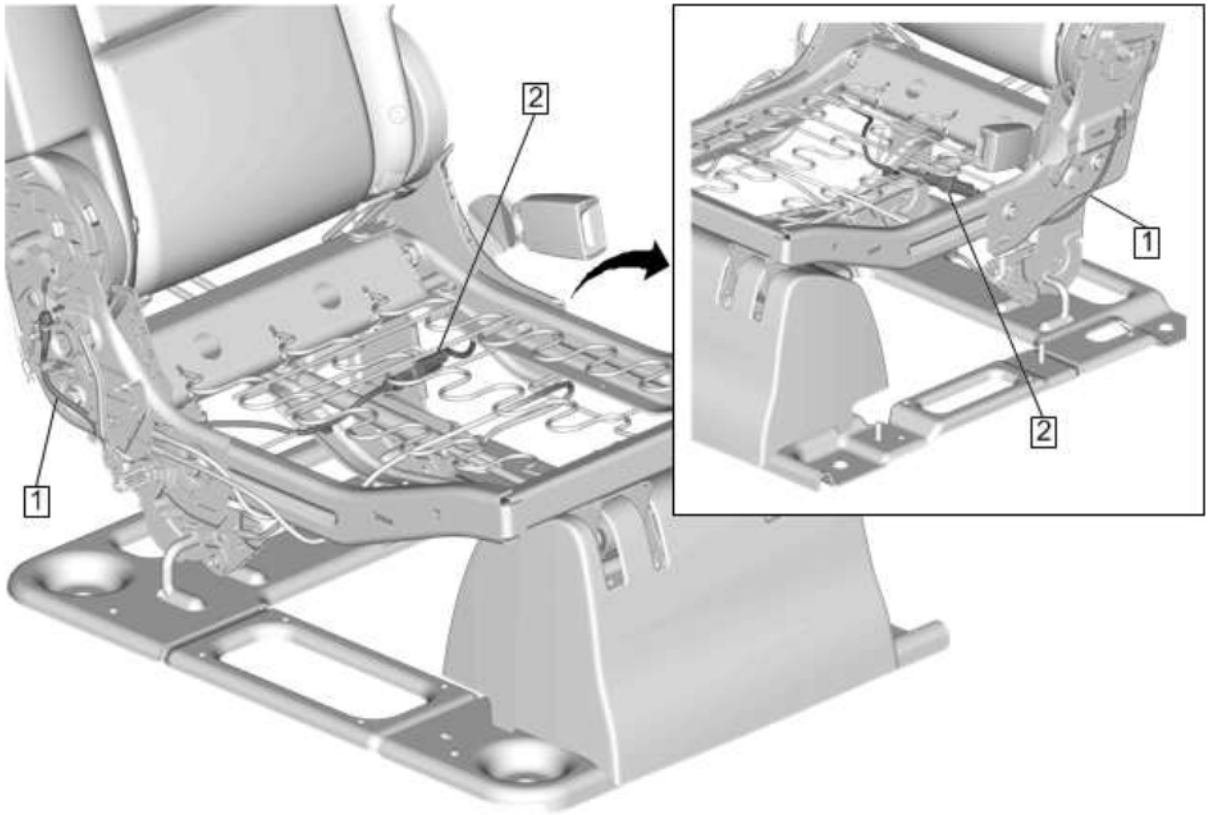


Fig. 80: Rear Seat Latch Cable
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
1. Remove the rear seat. Refer to **Rear Seat Removal and Installation (60/40 Bench)Rear Seat Removal and Installation (Bucket)**. 2. Remove the rear seat back cushion cover and pad. Refer to **Rear Seat Back Cushion Cover and Pad Replacement (40%)Rear Seat**	

cardiagn.com

Callout	Component Name
	Back Cushion Cover and Pad Replacement (Bucket)Rear Seat Back Cushion Cover and Pad Replacement (60%). 3. Remove the rear seat cushion cover and pad. Refer to **Rear Seat Cushion Cover and Pad Replacement (Bucket)Rear Seat Cushion Cover and Pad Replacement (60/40 Bench)**.
1	Rear Seat Latch Cable (Routing Steps) **Procedure** 1. Attached cable to outboard recliner. 2. Route and attach to inboard recliner. 3. Close cable adjuster in place.
2	Rear Seat Latch Cable (Cable Sync Steps) **Procedure** 1. Fold the seat back over in the closed position. 2. Un-sync cable. 3. Pull up with 2 hands on both sides of center clip. 4. Lift the seat back to the upright locked position. 5. Re-sync cable while leaving the cable in it's routed position, push clip down to sync.

REAR SEAT OUTER RECLINER REPLACEMENT

cardiagn.com

nd ...

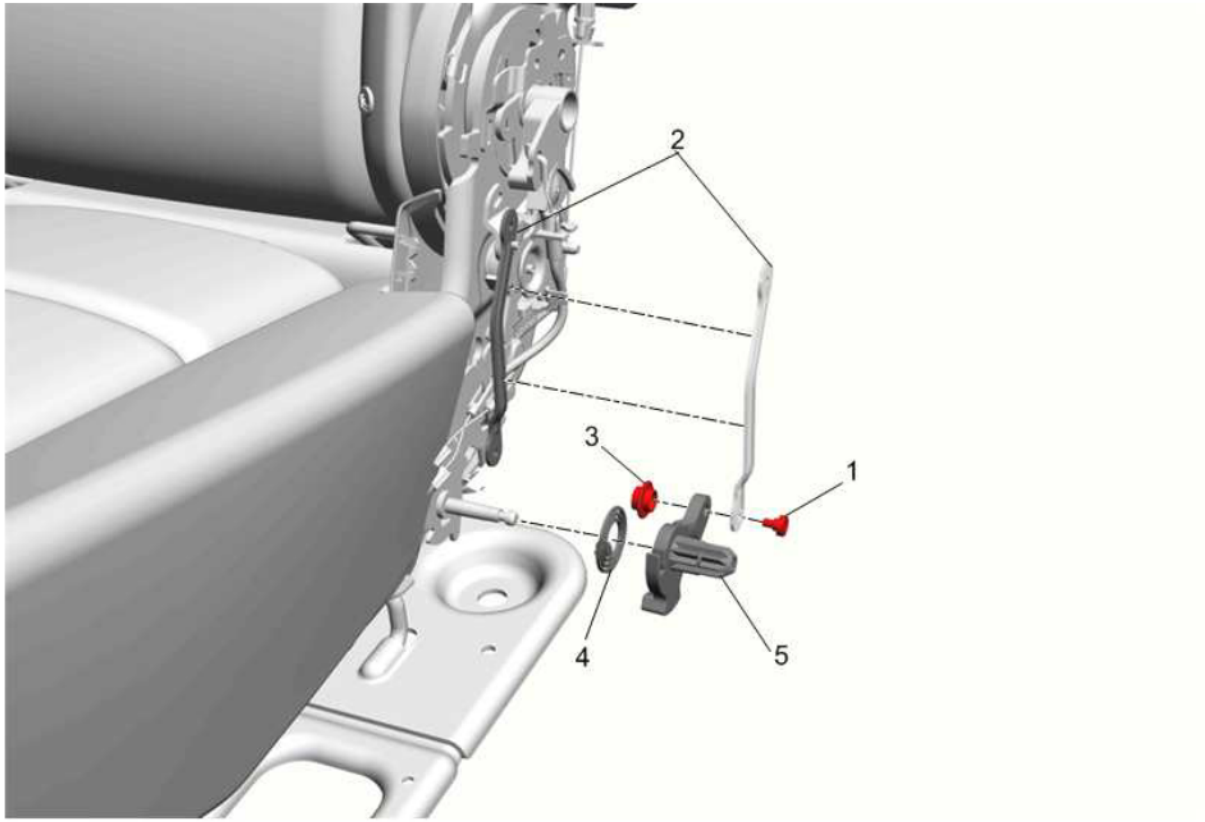


Fig. 81: Rear Seat Outer Recliner
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
WARNING: Refer to Eye Protection Warning .	
Preliminary Procedure Remove rear seat cushion outer trim panel. Refer to **Rear Seat Cushion Outer Trim Panel Replacement**.	
1	Rear Seat Outer Recliner Rivet
2	Rear Seat Outer Recliner Lever **Procedure** Swing the recliner lever out of the way in order to remove the recliner.

cardiagn.com

Callout	Component Name
3	Rear Seat Outer Recliner Spacer
4	Rear Seat Outer Recliner Spring
5	Rear Seat Outer Recliner

3RD ROW SEAT REMOVAL AND INSTALLATION

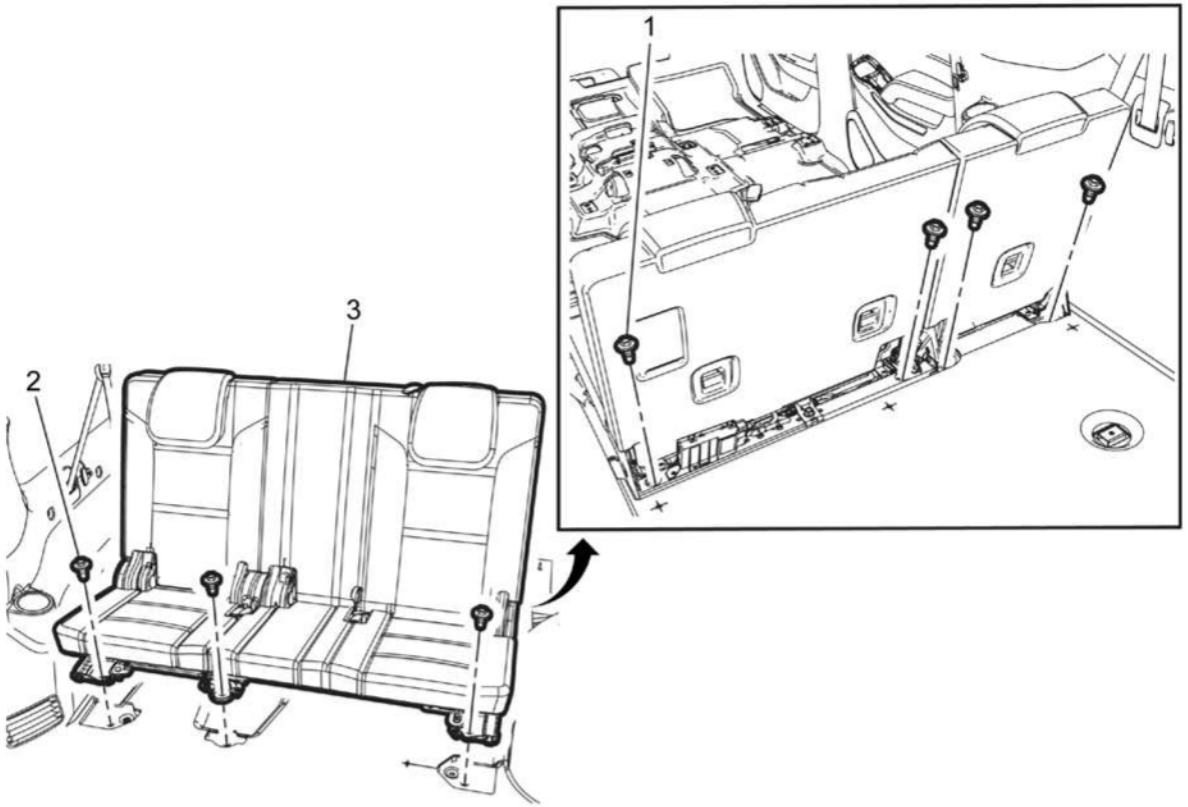


Fig. 82: 3rd Row Seat
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Remove the rear seat frame outer finish covers. Refer to **Rear Seat Frame Outer Finish Cover Replacement**.	

cardiagn.com

Callout	Component Name
2. If equipped with power folding seat, disconnect the electrical connector from the power folding seat module.	
1	3rd Row Rear Seat Rear Bolt (Qty: 4) **CAUTION:** **Refer to Fastener Caution .** **Tighten** 45 N.m (33 lb ft)
2	3rd Row Rear Seat Front Bolt (Qty: 3) **Tighten** 45 N.m (33 lb ft)
3	3rd Row Rear Seat **NOTE:** **Remove the seat with the aid of an assistant.**

3RD ROW SEAT BACK LATCH COVER REPLACEMENT (40% INBOARD WITH AS8)

cardiagn.com

nd ...



Fig. 83: 3rd Row Seat Back Latch Cover (40% Inboard with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Separate the 3rd row seat. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation**. 2. Remove the 3rd row seat belt buckle (40% bench). Refer to **3rd Row Seat Belt Buckle Replacement (40% Bench)** .	
1	3rd Row Seat Back Latch Cover Retainer
2	3rd Row Seat Back Latch Cover **Procedure**

cardiagn.com

Callout	Component Name
	1. Release the metal clip retaining the cover to the seat frame. 2. Release the plastic tab from the hook feature on the seat frame and remove the cover.

3RD ROW SEAT BACK LATCH COVER REPLACEMENT (60% INBOARD WITH AS8)

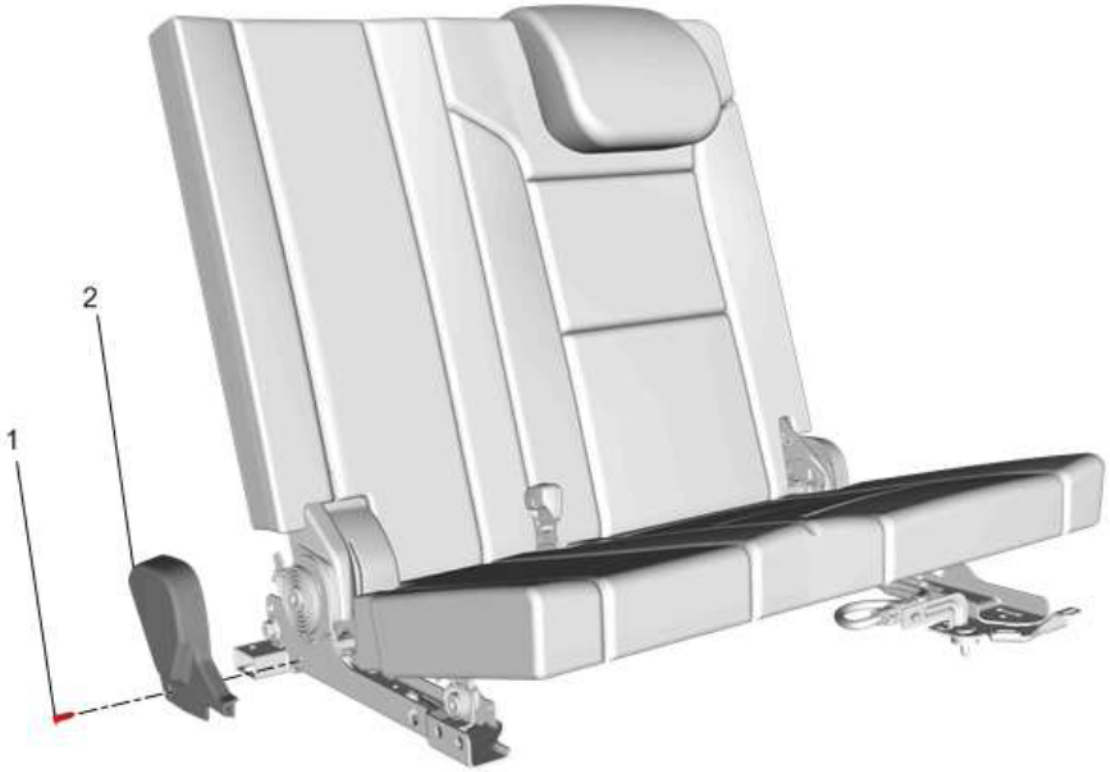


Fig. 84: 3rd Row Seat Back Latch Cover (60% Inboard with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
Separate the 3rd row seat. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation**.	

cardiagn.com

Callout	Component Name
1	3rd Row Seat Back Latch Cover Retainer **Procedure** Release the front metal retainer from the seat frame.
2	3rd Row Seat Back Latch Cover **Procedure** Lift and release the seat back latch cover off the hook feature at the upper rear of the cover.

3RD ROW SEAT BACK LATCH COVER REPLACEMENT (40% OUTBOARD WITH AS8)

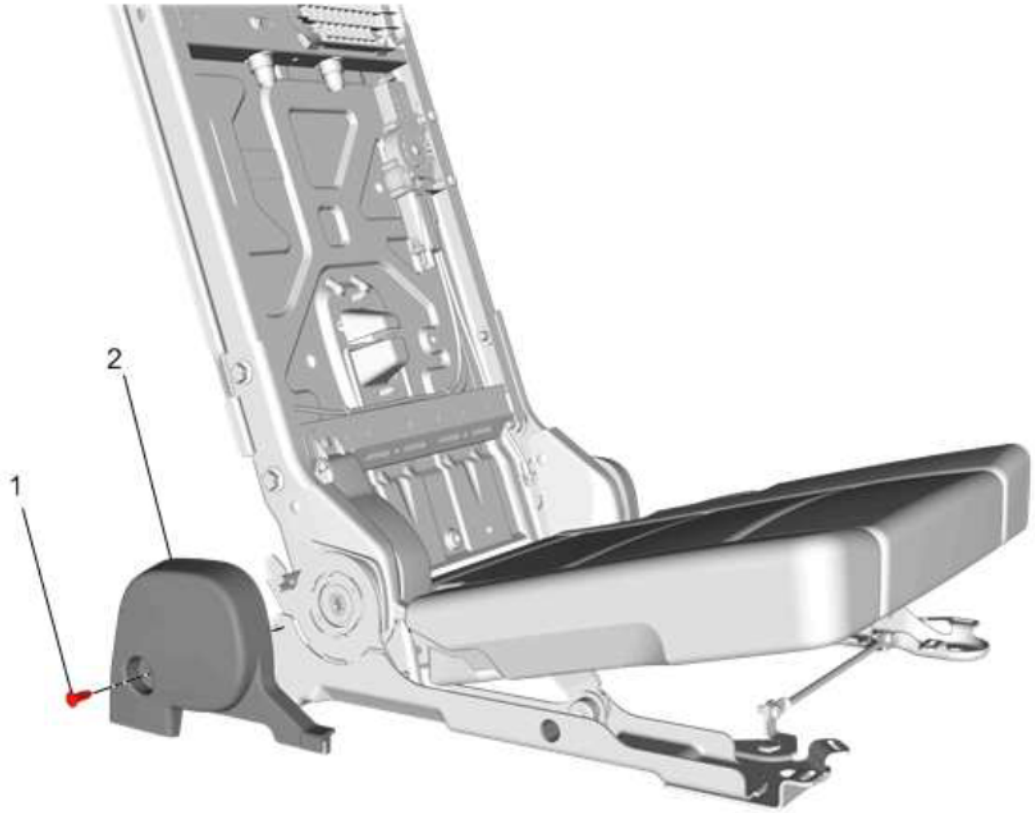


Fig. 85: 3rd Row Seat Back Latch Cover (40% Outboard with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

cardiagn.com

Callout	Component Name
Preliminary Procedures Remove the 3rd row seat. Refer to **3rd Row Seat Removal and Installation**.	
1	3rd Row Seat Back Latch Cover Retainer
2	3rd Row Seat Back Latch Cover **Procedure** 1. Release the metal clip retaining the cover to the seat frame. 2. Release the plastic tab from the hook feature on the seat frame and remove the cover.

3RD ROW SEAT BACK LATCH COVER REPLACEMENT (60% OUTBOARD WITH AS8)



cardiagn.com

nd ...

Fig. 86: 3rd Row Seat Back Latch Cover (60% Outboard with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Separate the 3rd row seat. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation**.	
1	3rd Row Seat Back Latch Cover Retainer **Procedure** Release the front metal retainer from the seat frame.
2	3rd Row Seat Back Latch Cover **Procedure** Lift and release the seat back latch cover off the hook feature at the upper rear of the cover.

3RD ROW SEAT BACK LATCH COVER REPLACEMENT (60% INBOARD WITH ARN)




cardiagn.com

nd ...

Fig. 87: 3rd Row Seat Back Latch Cover (60% Inboard with ARN)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Separate the 3rd row seat. Refer to **Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**.	
1	3rd Row Seat Back Latch Cover Retainer **Procedure** Release the front metal retainer from the seat frame.
2	3rd Row Seat Back Latch Cover **Procedure** Lift and release the seat back latch cover off the hook feature at the upper rear of the cover.

3RD ROW SEAT BACK LATCH COVER REPLACEMENT (60% OUTBOARD WITH ARN)

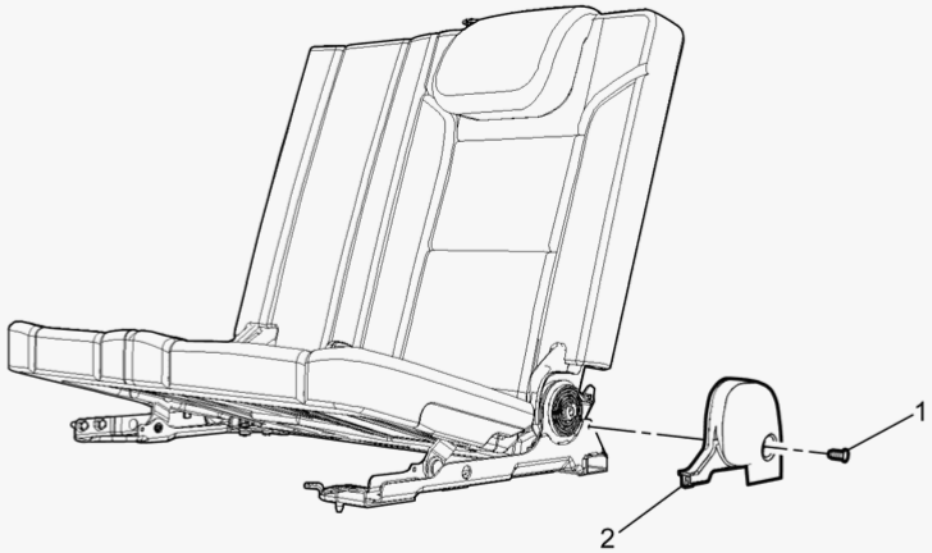


cardiagn.com

Fig. 88: 3rd Row Seat Back Latch Cover (60% Outboard with ARN)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Separate the 3rd row seat. Refer to **Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**.	
1	3rd Row Seat Back Latch Cover Retainer **Procedure** Release the front metal retainer from the seat frame.
2	3rd Row Seat Back Latch Cover **Procedure** Lift and release the seat back latch cover off the hook feature at the upper rear of the cover.

3RD ROW SEAT BACK LATCH COVER REPLACEMENT (40% OUTBOARD WITH ARN)

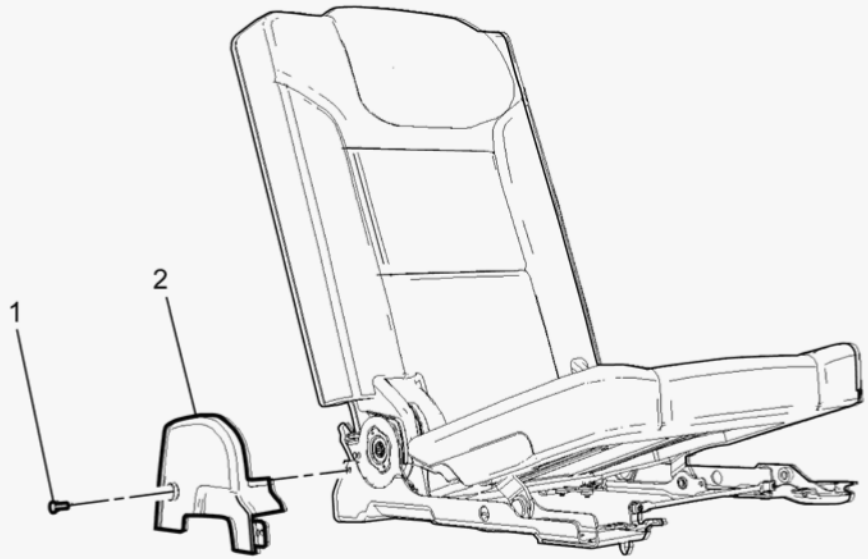

cardiagn.com

Fig. 89: 3rd Row Seat Back Latch Cover (40% Outboard with ARN)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Remove the 3rd row seat. Refer to **Rear Seat Removal and Installation (60/40 Bench)**	
1	3rd Row Seat Back Latch Cover Retainer
2	3rd Row Seat Back Latch Cover **Procedure** 1. Release the metal clip retaining the cover to the seat frame. 2. Release the plastic tab from the hook feature on the seat frame and remove the cover.

3RD ROW SEAT BACK LATCH COVER REPLACEMENT (40% INBOARD WITH ARN)

cardiagn.com

nd ...



Fig. 90: 3rd Row Seat Back Latch Cover (40% Inboard with ARN)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Separate the 3rd row seat. Refer to **Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**. 2. Remove the 3rd row seat belt buckle (40% bench). Refer to **3rd Row Seat Belt Buckle Replacement (40% Bench)** .	
1	3rd Row Seat Back Latch Cover Retainer
2	3rd Row Seat Back Latch Cover **Procedure**

cardiagn.com

Callout	Component Name
	1. Release the metal clip retaining the cover to the seat frame. 2. Release the plastic tab from the hook feature on the seat frame and remove the cover.

3RD ROW SEAT BACK LATCH CABLE REPLACEMENT (POWER WITH AS8)

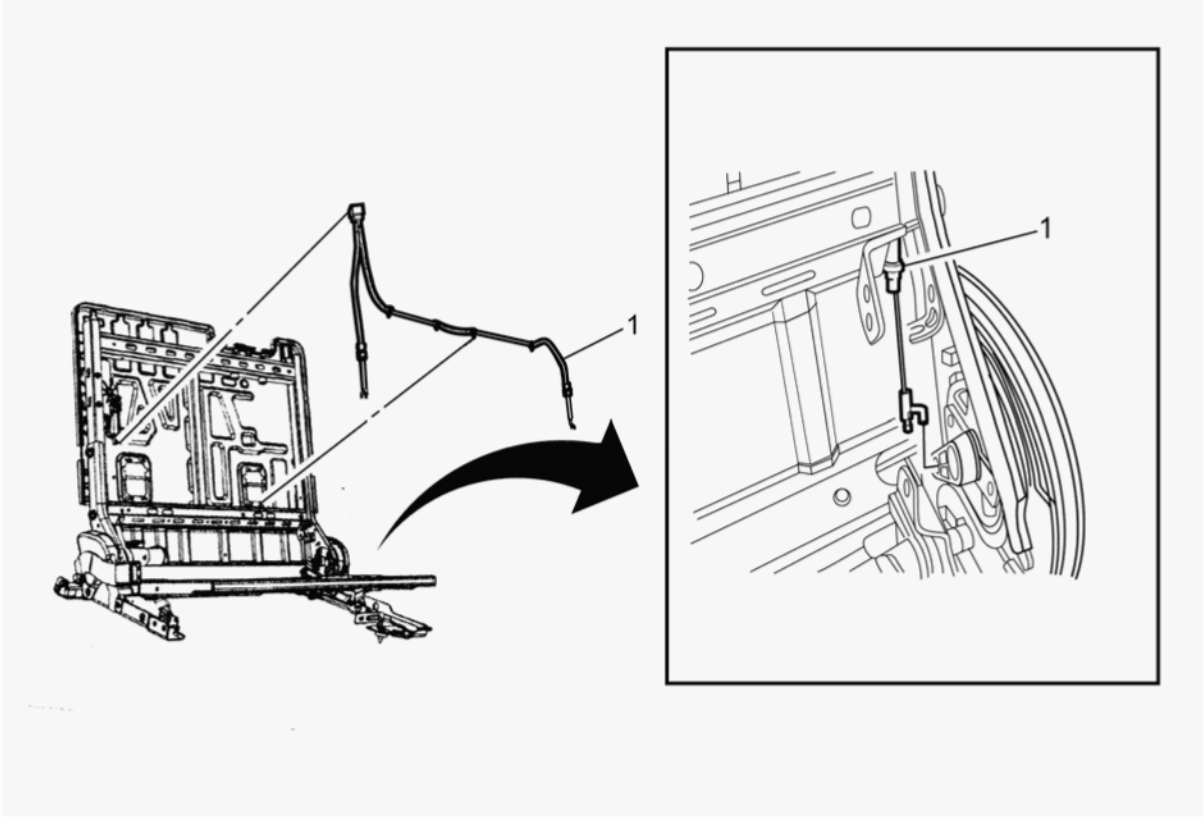


Fig. 91: 3rd Row Seat Back Latch Cable (Power with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
	1. Remove the 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (40%)3rd Row Seat Back**

cardiagn.com

Callout	Component Name
	Cover and Pad Replacement (60%). 2. Remove the 3rd row seat back hinge finish cover. Refer to **3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (40% Outboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (60% Inboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (60% Outboard with AS8)**.
1	3rd Row Seat Back Latch Cable **Procedure** 1. Disconnect the seat back latch cable from the seat back hinges. 2. Release the seat back latch cable retainers from the seat back frame. 3. Disconnect the seat back latch cable from the seat back latch actuator motor.

3RD ROW SEAT BACK LATCH CABLE REPLACEMENT (MANUAL WITH ARN)

cardiagn.com

nd ...

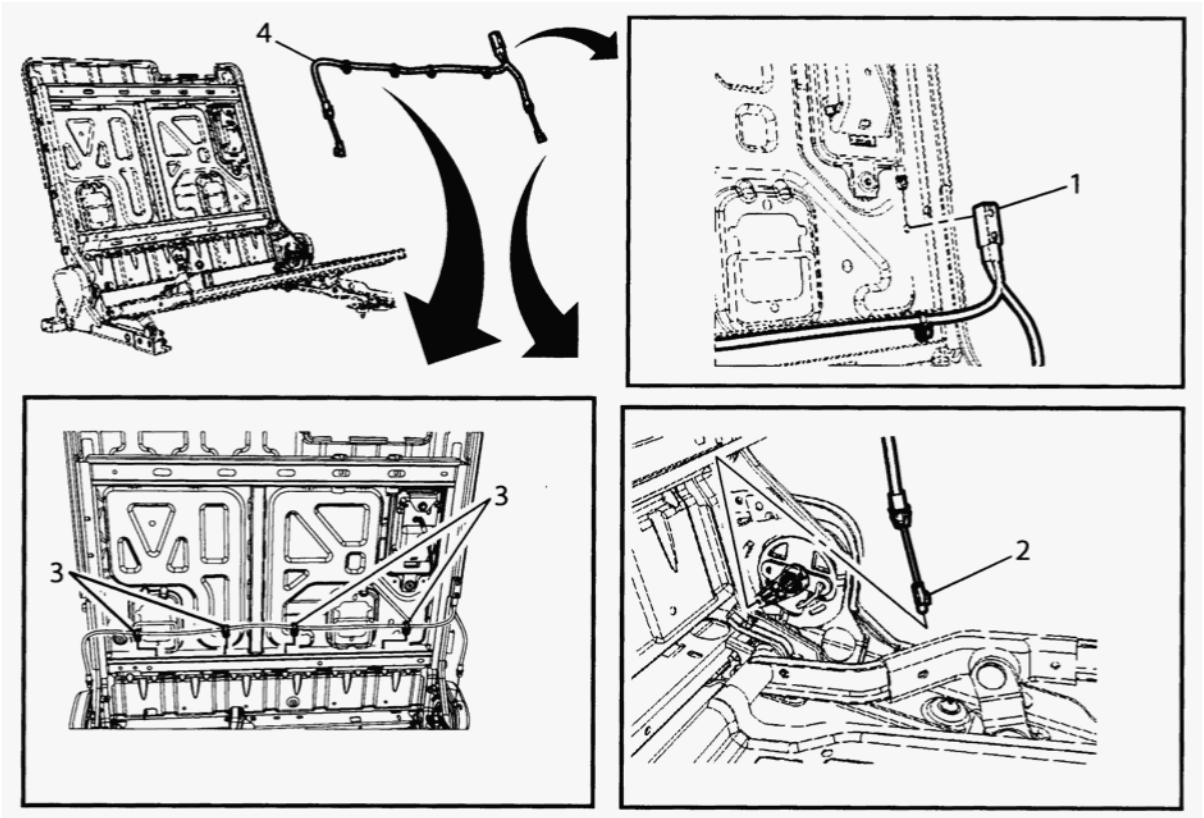


Fig. 92: 3rd Row Seat Back Latch Cable (Manual with ARN)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Remove the 3rd row seat back hinge finish covers. Refer to **3rd Row Seat Back Hinge Finish Cover Replacement (60% Inboard with ARN)3rd Row Seat Back Hinge Finish Cover Replacement (60% Outboard with ARN)3rd Row Seat Back Hinge Finish Cover Replacement (40% Outboard with ARN)3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with ARN)**.	
1	3rd Row Seat Back Latch Cable Connector
2	3rd Row Seat Back Latch Cable Connector (Qty: 2) **Procedure** Disconnect the left and right seat back latch cable ends from the seat back hinge release levers.
3	3rd Row Seat Back Latch Cable Clip (Qty: 4)

cardiagn.com

Callout	Component Name
4	3rd Row Seat Back Latch Cable **Procedure** Route the seat back latch cable behind the center vertical brace of the seat back frame assembly.

3RD ROW SEAT CUSHION COVER AND PAD REPLACEMENT (60%)

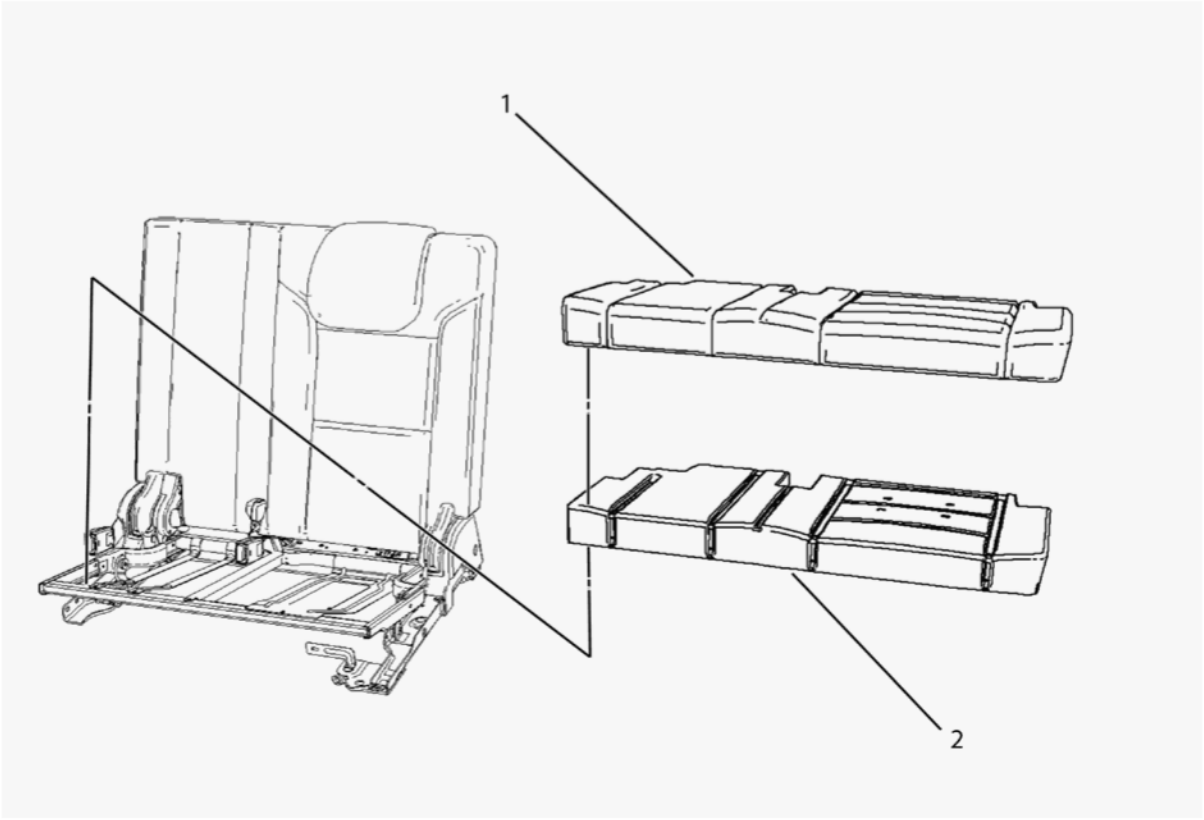



Fig. 93: 3rd Row Seat Cushion Cover and Pad (60%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the 3rd row seat. Refer to **Rear Seat Removal and Installation (60/40 Bench)**.	

cardiagn.com

Callout	Component Name
2. Separate the 3rd row 60% from the 40% seat. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**.	
1	3rd Row Seat Cushion Cover **Procedure** 1. Disconnect the seat cushion cover j-channel from the seat cushion frame. 2. Disengage the hook and loop fastener strips retaining the cover to the pad and separate the cover from the pad.
2	3rd Row Seat Cushion Pad

3RD ROW SEAT CUSHION COVER AND PAD REPLACEMENT (40%)

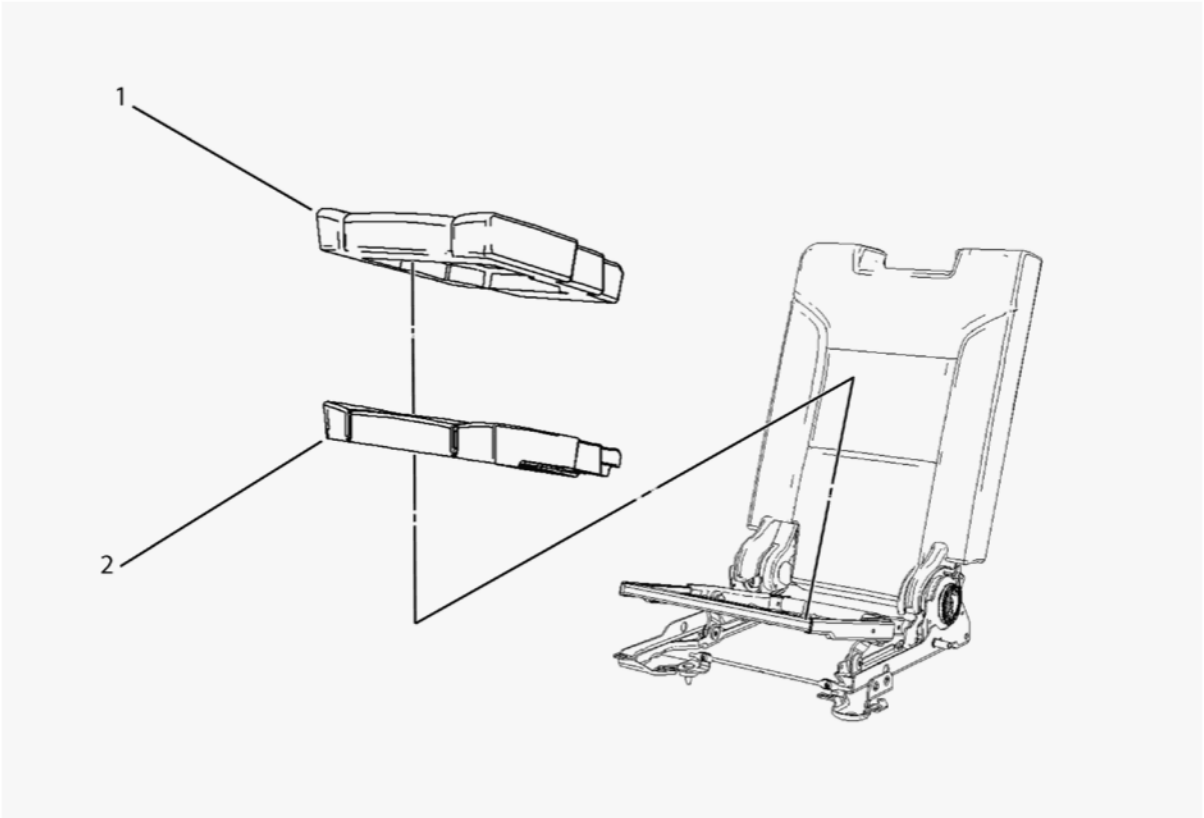

cardiagn.com

Fig. 94: 3rd Row Seat Cushion Cover and Pad (40%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Separate the 3rd row seat. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**.	
1	3rd Row 40% Seat Cushion Cover **Procedure** 1. Disconnect the seat cushion cover j-channel from the seat cushion frame. 2. Disengage the hook and loop fastener strips retaining the cover to the pad and separate the cover from the pad.
2	3rd Row 40% Seat Cushion Pad

3RD ROW SEAT CUSHION FRAME REPLACEMENT (60%)

cardiagn.com

nd ...

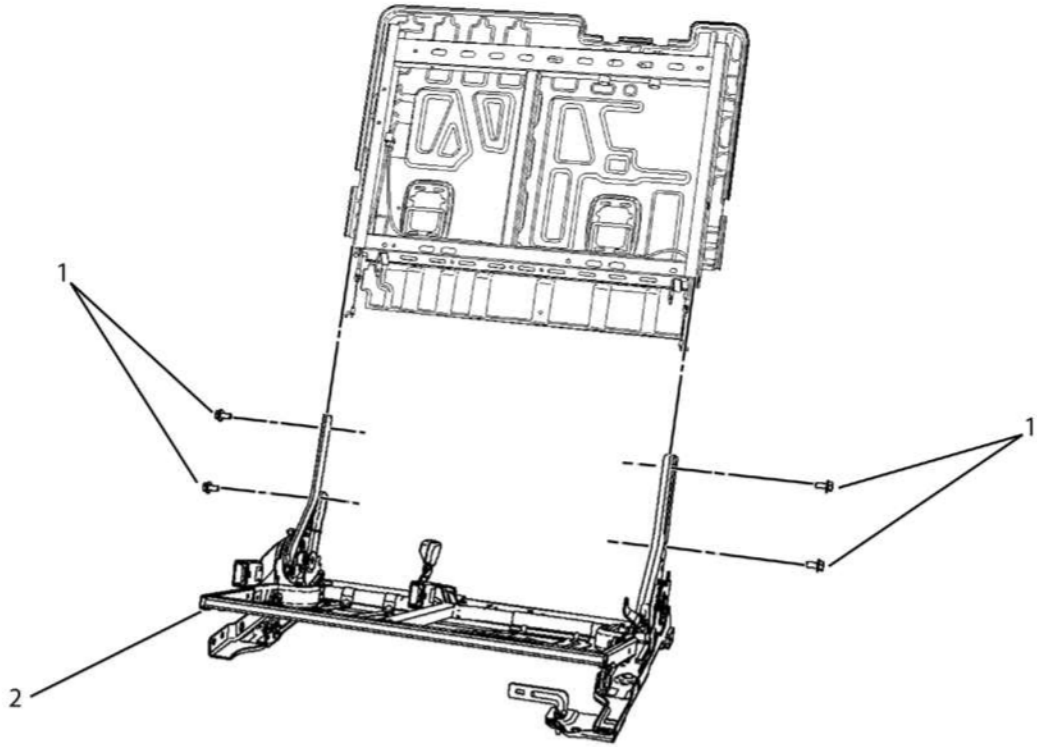


Fig. 95: 3rd Row Seat Cushion Frame (60%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Remove the 60% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (60%)**. 2. Remove the 60% 3rd row seat cushion cover and pad. Refer to **3rd Row Seat Cushion Cover and Pad Replacement (60%)**. 3. Remove the 3rd row seat back (inboard) hinge finish cover. Refer to **3rd Row Seat Back Hinge Finish Cover Replacement (60% Inboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (60% Inboard with ARN)**. 4. Remove the 60% 3rd row rear seat back pivot actuator motor, if equipped. Refer to **3rd Row Seat Back Pivot Actuator Motor Replacement - Back Cushion** .	

cardiagn.com

Callout	Component Name
1	3rd Row Seat Cushion Frame Bolt (Qty: 4) **CAUTION:** **Refer to** **Fastener Caution .** **Tighten** 45 N.m (33 lb ft)
2	3rd Row Seat Cushion Frame **Procedure** 1. Disconnect, and remove the two seat back latch cables from the seat frame. 2. Disconnect and unclip the electrical harness attached to the seat frame. 3. Transfer parts as necessary.

3RD ROW SEAT CUSHION FRAME REPLACEMENT (40%)

cardiagn.com

nd ...

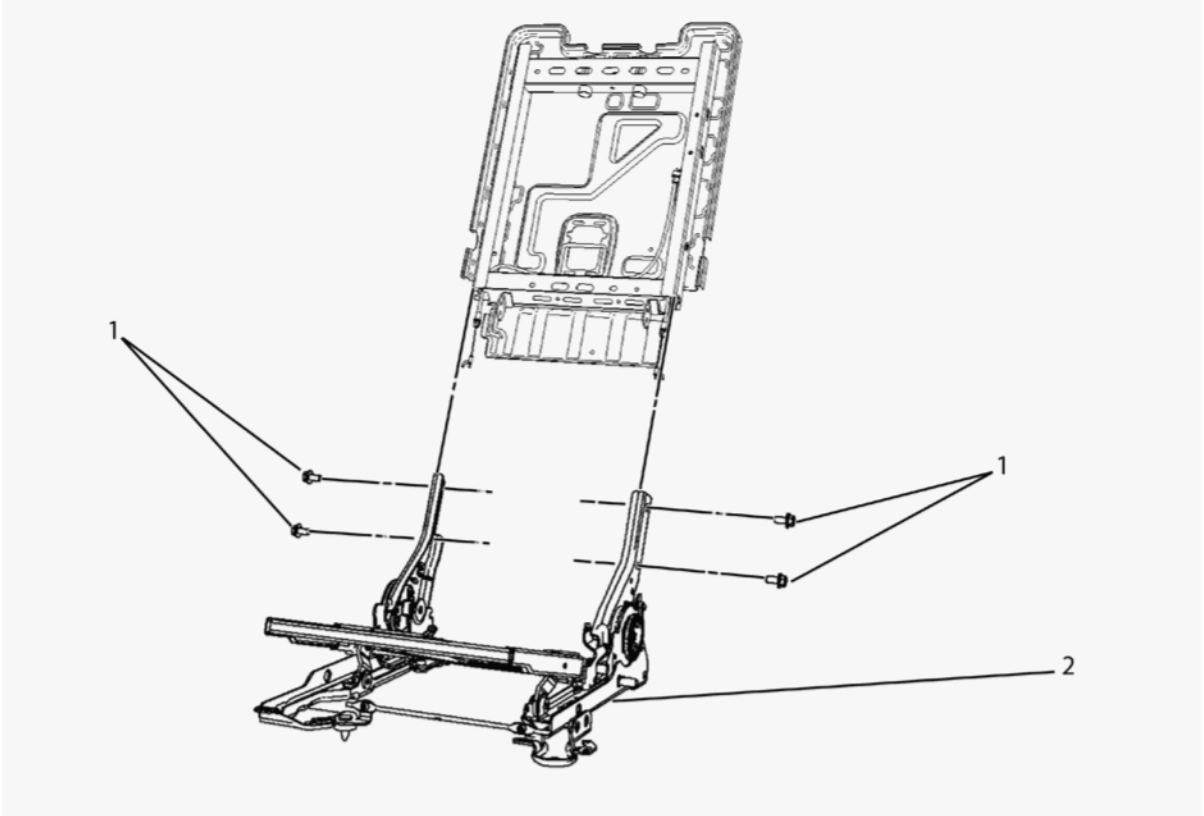


Fig. 96: 3rd Row Seat Cushion Frame (40%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Remove the 40% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (40%)**. 2. Remove the 40% 3rd row seat cushion cover and pad. Refer to **3rd Row Seat Cushion Cover and Pad Replacement (40%)**. 3. Remove the 3rd row seat back hinge finish cover for the 40% seat. Refer to **3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (40% Outboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (40% Outboard with ARN)3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with ARN)**. 4. Remove the 40% 3rd row seat back pivot actuator motor, if equipped. Refer to **3rd Row Seat Back Pivot Actuator Motor Replacement - Back Cushion** .	

cardiagn.com

3RD ROW SEAT PULL HANDLE REPLACEMENT

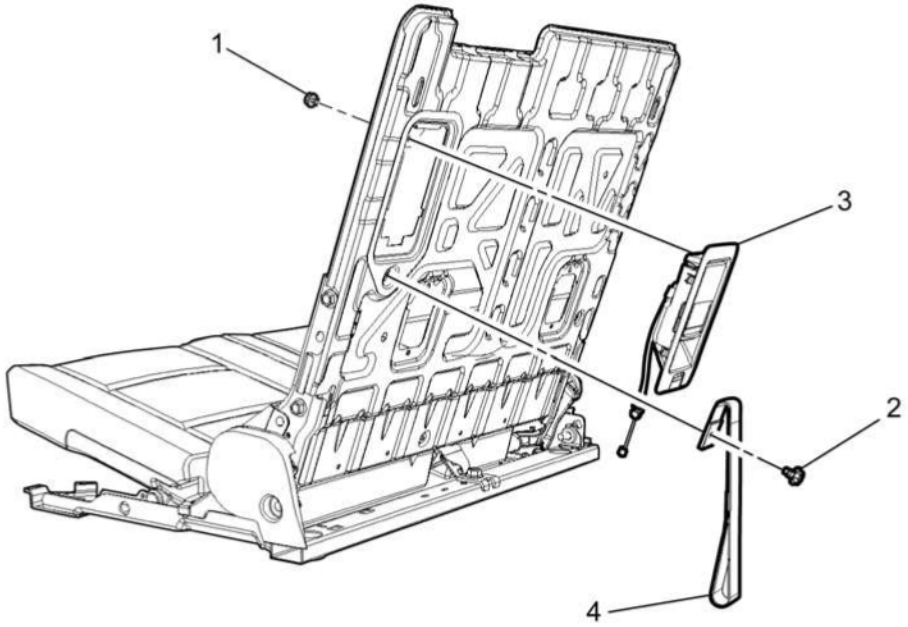


Fig. 97: 3rd Row Seat Pull Handle
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Remove the 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (40%)3rd Row Seat Back Cover and Pad Replacement (60%)**.	
1	3rd Row Seat Back Latch Bolt **CAUTION:** **Refer to** **Fastener**

cardiagn.com

Callout	Component Name
	Caution . **Tighten** 10 N.m (89 lb in)
2	3rd Row Seat Back Latch Bolt **Tighten** 10 N.m (89 lb in)
3	3rd Row Seat Back Latch **Procedure** Disconnect the seat back latch from the latch cable.
4	3rd Row Seat Back Latch Pull Handle **Procedure** Thread the pull handle through the 3rd row seat back latch bezel.

3RD ROW SEAT HEAD RESTRAINT REPLACEMENT

cardiagn.com

nd ...

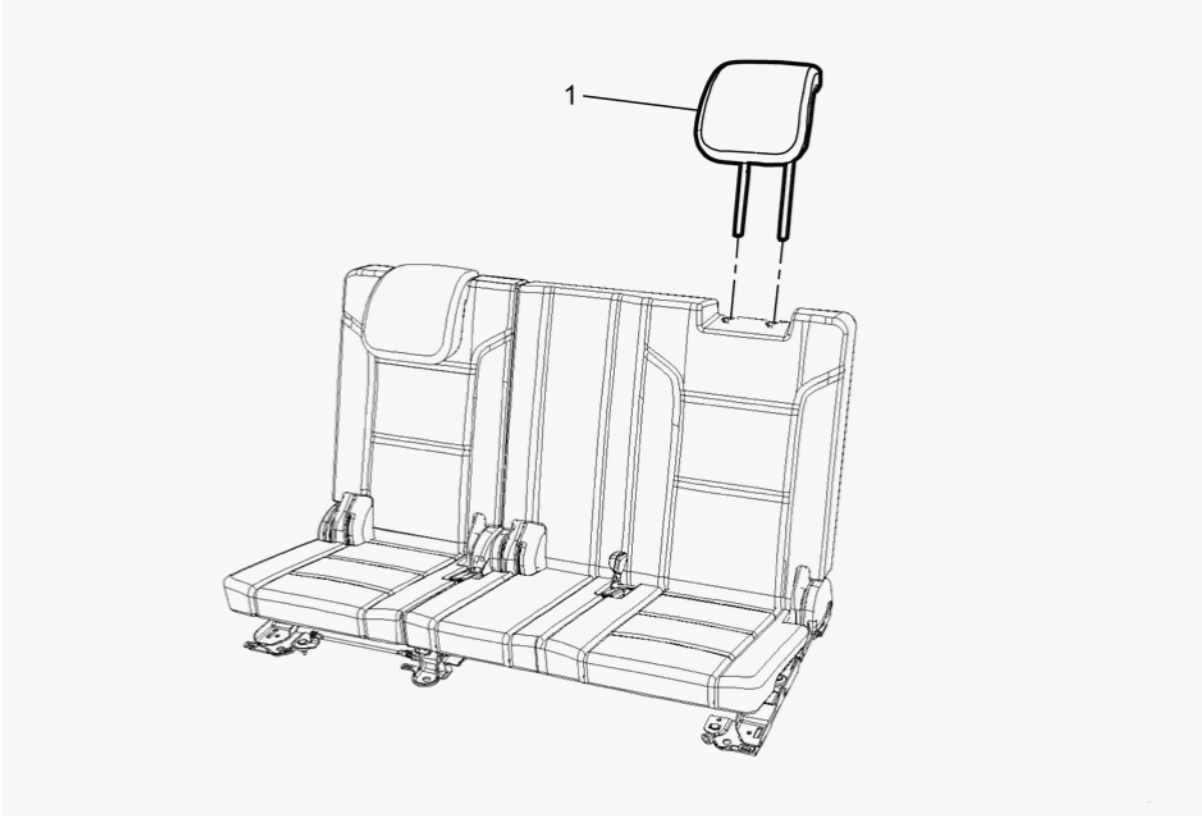


Fig. 98: 3rd Row Seat Head Restraint
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	3rd Row Seat Head Restraint **Procedure** Depress the button on the inboard and outboard head restraint guide to raise the head restraint to the full up position and remove the head restraint.

3RD ROW SEAT HEAD RESTRAINT GUIDE REPLACEMENT

cardiagn.com

nd ...

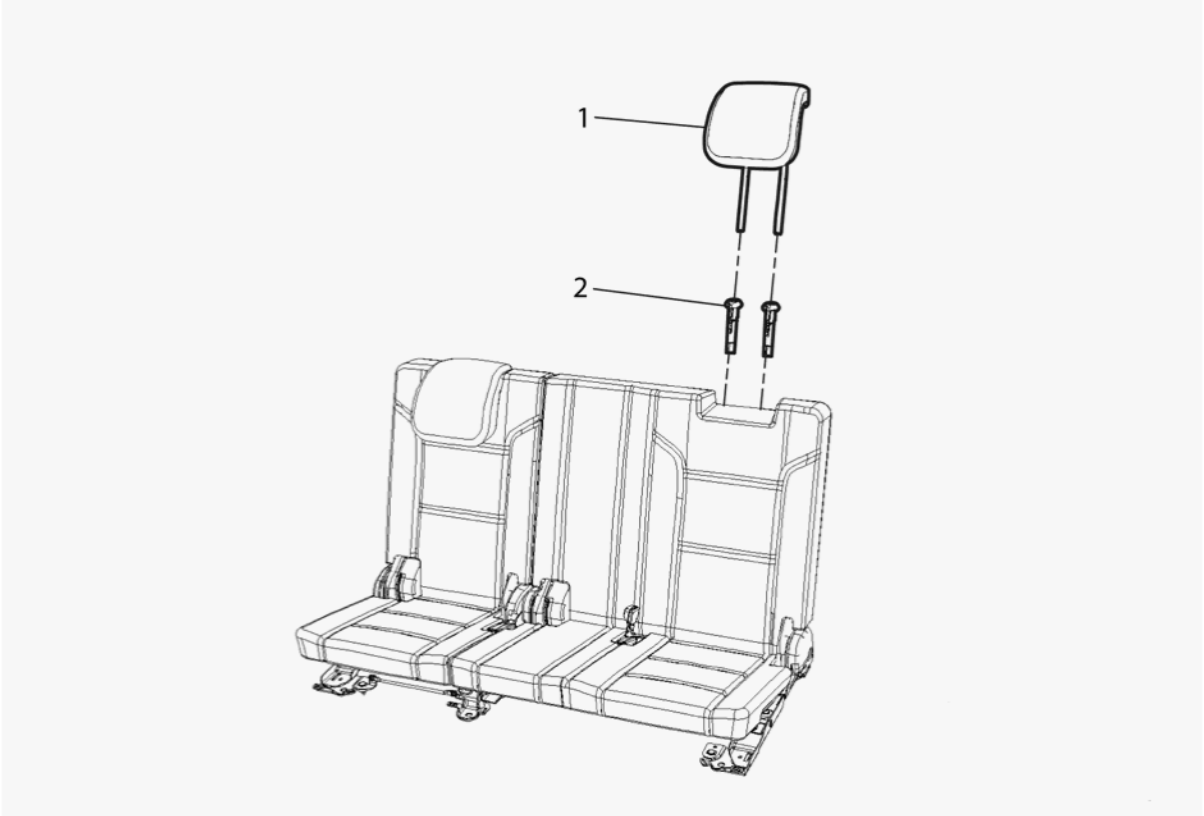


Fig. 99: 3rd Row Seat Head Restraint Guide
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	3rd Row Seat Head Restraint **Procedure** Remove the 3rd row seat head restraint. Refer to **3rd Row Seat Head Restraint Replacement**.
2	3rd Row Seat Head Restraint Guide **Procedure** 1. Using a suitable flat-bladed tool, slide the tool into the guide until you find the slot on the inboard side of the guide. 2. Push inward on the guide slot tab, while pulling upward to remove the guide from the seat back frame.

cardiagn.com

Callout	Component Name
	NOTE: The guide is released from the inboard side by a s flat too slo pry inw rele

3RD ROW SEAT BACK COVER AND PAD REPLACEMENT (40%)

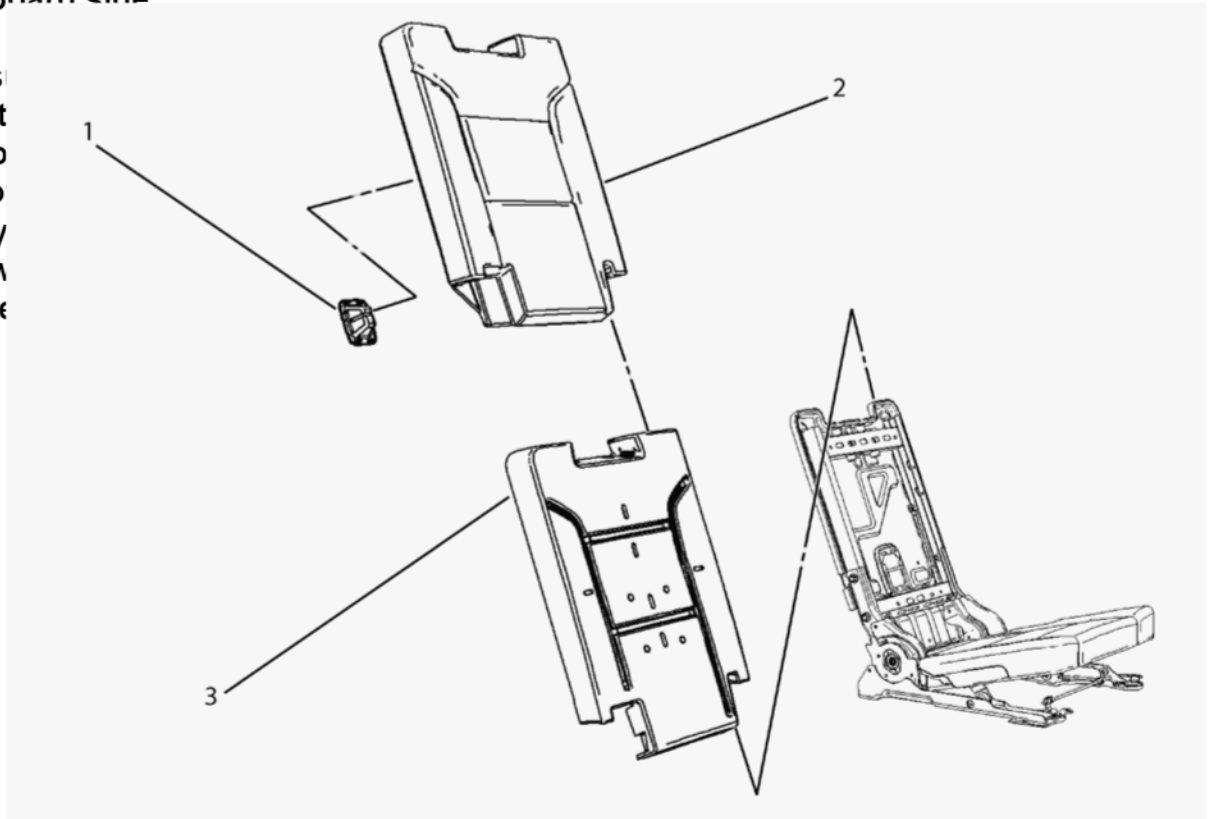


Fig. 100: 3rd Row Seat Back Cover and Pad (40%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the 3rd row seat. Refer to **3rd Row Seat Removal and Installation**. 2. Remove the 3rd row seat head restraint guide. Refer to **3rd Row Seat Head Restraint Guide Replacement**.	

cardiagn.com

Callout	Component Name
3. Separate the 3rd row seat. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**. 4.	
1	3rd Row Seat Back Tether Cover
2	3rd Row Seat Back Cover **Procedure** 1. Disconnect the seat back cover j-channel from the seat back frame. 2. Disengage the hook and loop fastener strips retaining the cover to the pad and separate the cover from the pad.
3	3rd Row Seat Back Pad **Procedure** Remove the two plastic push in retainers and release the glue retaining the pad to the frame.

3RD ROW SEAT BACK COVER AND PAD REPLACEMENT (60%)

cardiagn.com

nd ...

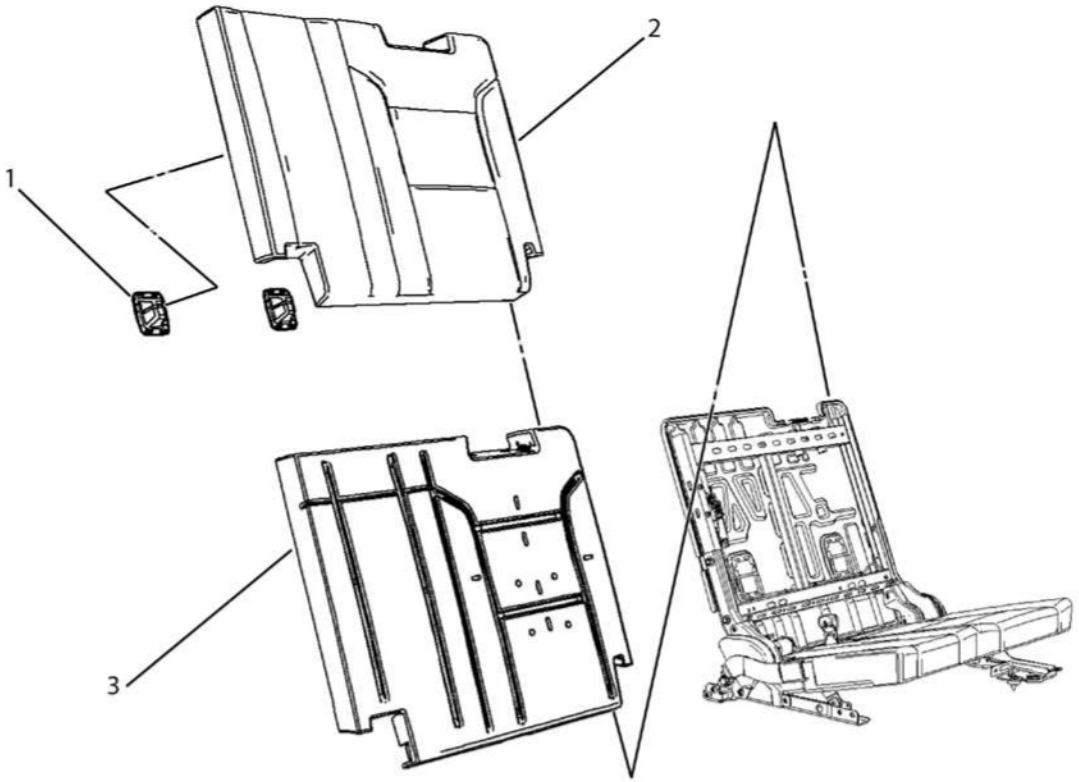



Fig. 101: 3rd Row Seat Back Cover and Pad (60%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the 3rd row seat. Refer to **3rd Row Seat Removal and Installation**. 2. Remove the 3rd row seat head restraint guide. Refer to **3rd Row Seat Head Restraint Guide Replacement**. 3. Separate the 3rd row seat. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**. 4.	
1	3rd Row Seat Back Tether Cover (Qty: 2)

cardiagn.com

Callout	Component Name
2	3rd Row Seat Back Cover **Procedure** 1. Disconnect the seat back cover j-channel from the seat back frame. 2. Disengage the hook and loop fasteners retaining the cover to the pad. 3. Separate the cover from the pad. 4. Remove the four plastic push in retainers and release the glue securing the seat pad to the frame.
3	3rd Row Seat Back Pad

3RD ROW SEAT BACK FRAME REPLACEMENT (40%)

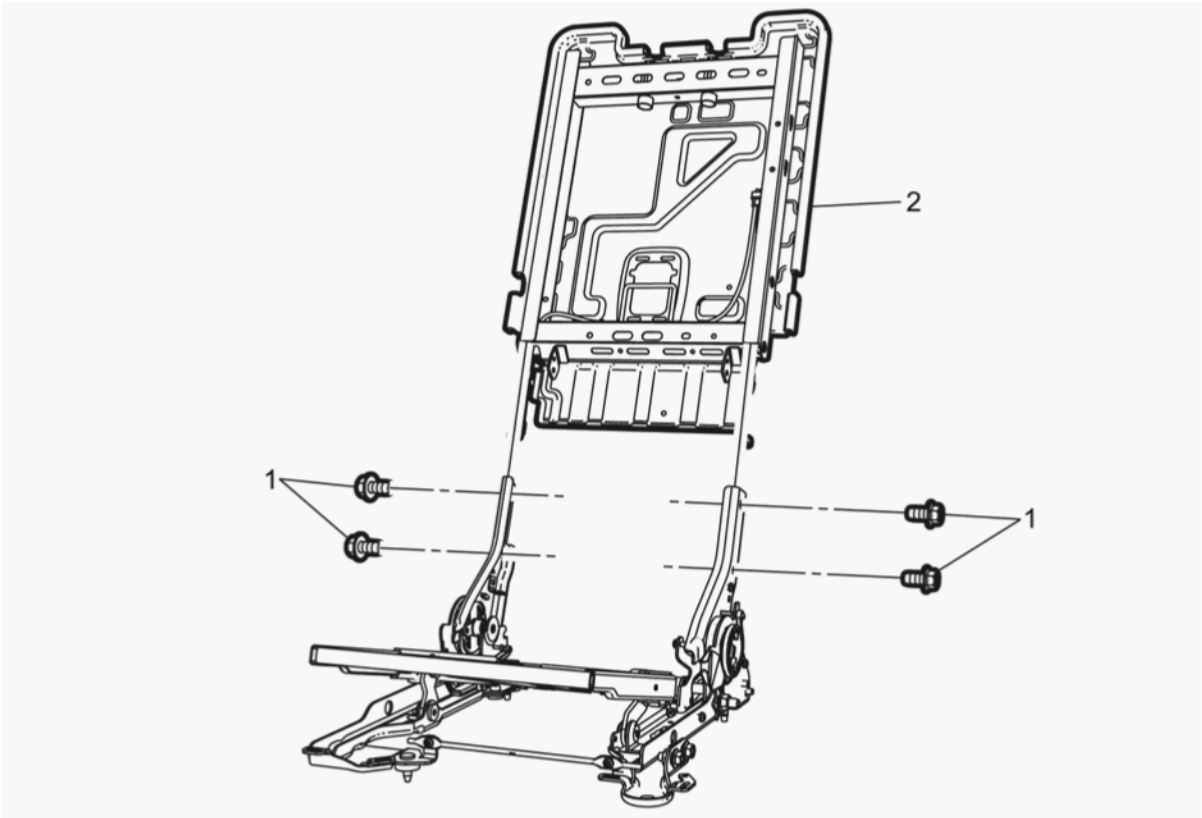

cardiagn.com

Fig. 102: 3rd Row Seat Back Frame (40%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the 3rd row seat. Refer to **3rd Row Seat Removal and Installation**. 2. Disconnect any electrical connectors, if equipped, and separate the 3rd row seat assemblies. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**. 3. Remove the 40% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (40%)**. 4. Remove the 3rd row seat back hinge finish cover for the 40% seat. Refer to **3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (40% Outboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (40% Outboard with ARN)3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with ARN)**. 5. Remove the rear seat recliner actuator (3rd Row Seat), if equipped. Refer to **Rear Seat Recliner Actuator Replacement (with Split Bench) Rear Seat Recliner Actuator Replacement (3rd Row Seat)** .	
1	3rd Row Seat Back Frame Bolt (Qty: 4) **CAUTION:** **Refer to Fastener Caution .** **Tighten** 45 N.m (33 lb ft)
2	3rd Row Seat Back Frame **Procedure** 1. Disconnect the 2 seat back latch cables. 2. Unclip and disconnect the electrical harnesses as necessary. 3. Transfer parts as necessary.

cardiagn.com

nd ...

3RD ROW SEAT BACK FRAME REPLACEMENT (60%)

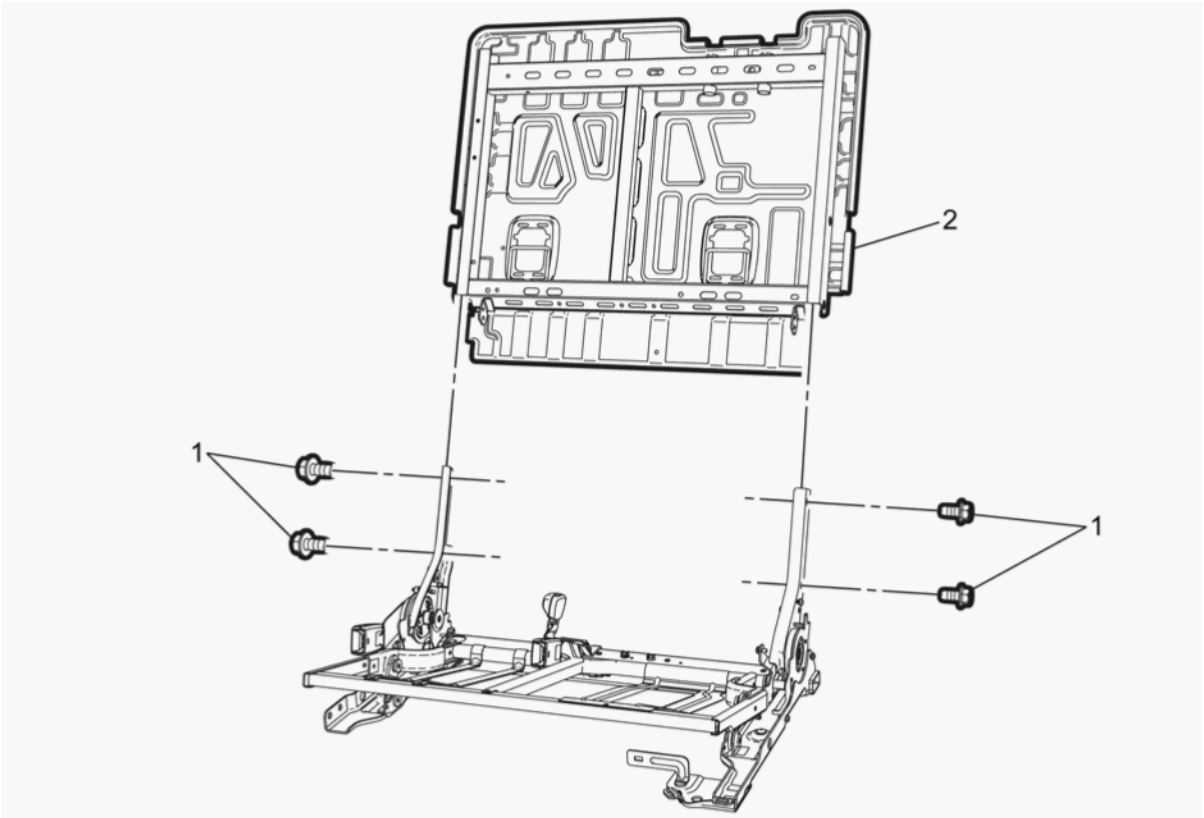


Fig. 103: 3rd Row Seat Back Frame (60%)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

Preliminary Procedures

1. Remove the 3rd row seat. Refer to **3rd Row Seat Removal and Installation**.
2. Disconnect any electrical connectors, if equipped, and separate the 3rd row seat assemblies. Refer to **Rear Seat Separation (3rd Row Power with AS8)Rear Seat Separation (3rd Row Manual with ARN)Rear Seat Separation**.
3. Remove the 60% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (60%)**.
4. Remove the 3rd row seat back hinge finish cover for the 40% seat. Refer to **3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with AS8)3rd Row Seat Back Hinge Finish Cover Replacement (40% Outboard with AS8)3rd Row Seat Back**

cardiagn.com

Callout	Component Name
	Hinge Finish Cover Replacement (40% Outboard with ARN)3rd Row Seat Back Hinge Finish Cover Replacement (40% Inboard with ARN). 5. Remove the rear seat recliner actuator (3rd Row Seat), if equipped. Refer to **Rear Seat Recliner Actuator Replacement (with Split Bench)** **Rear Seat Recliner Actuator Replacement (3rd Row Seat)** .
1	3rd Row Seat Back Frame Bolt (Qty: 4) **CAUTION:** **Refer to Fastener Caution** . **Tighten** 45 N.m (33 lb ft)
2	3rd Row Seat Back Frame **Procedure** 1. Disconnect the 2 seat back latch cables. 2. Unclip and disconnect the electrical harnesses as necessary. 3. Transfer parts as necessary.

3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (40% INBOARD WITH AS8)

cardiagn.com

nd ...

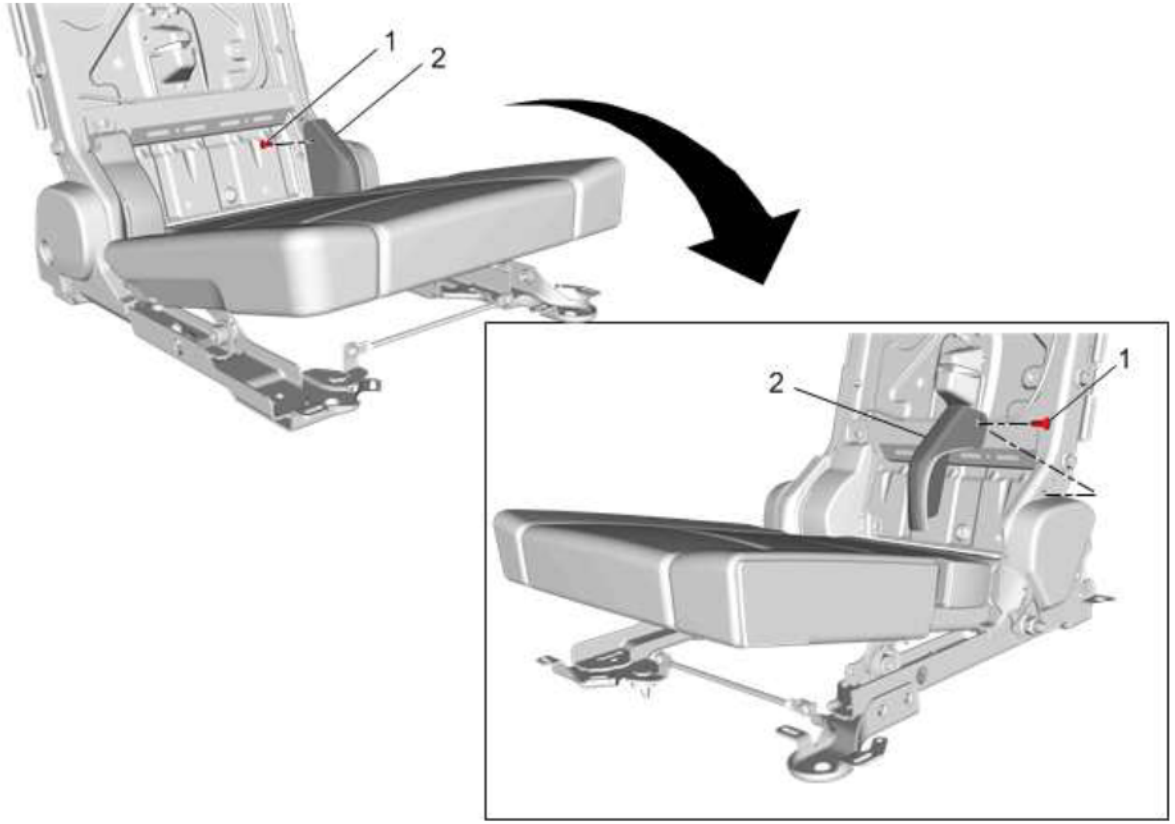


Fig. 104: 3rd Row Seat Back Hinge Finish Cover (40% Inboard with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Reposition the 40% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (40%)**.	
1	3rd Row Seat 40% Inboard Hinge Finish Cover Retainer (Qty: 2)
2	3rd Row Seat 40% Inboard Hinge Finish Cover **Procedure** 1. Release the bottom of the hinge finish cover from the retaining tab pocket. 2. Ensure that the cover is properly seated prior to installing the retainers.

cardiagn.com

3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (40% OUTBOARD WITH AS8)

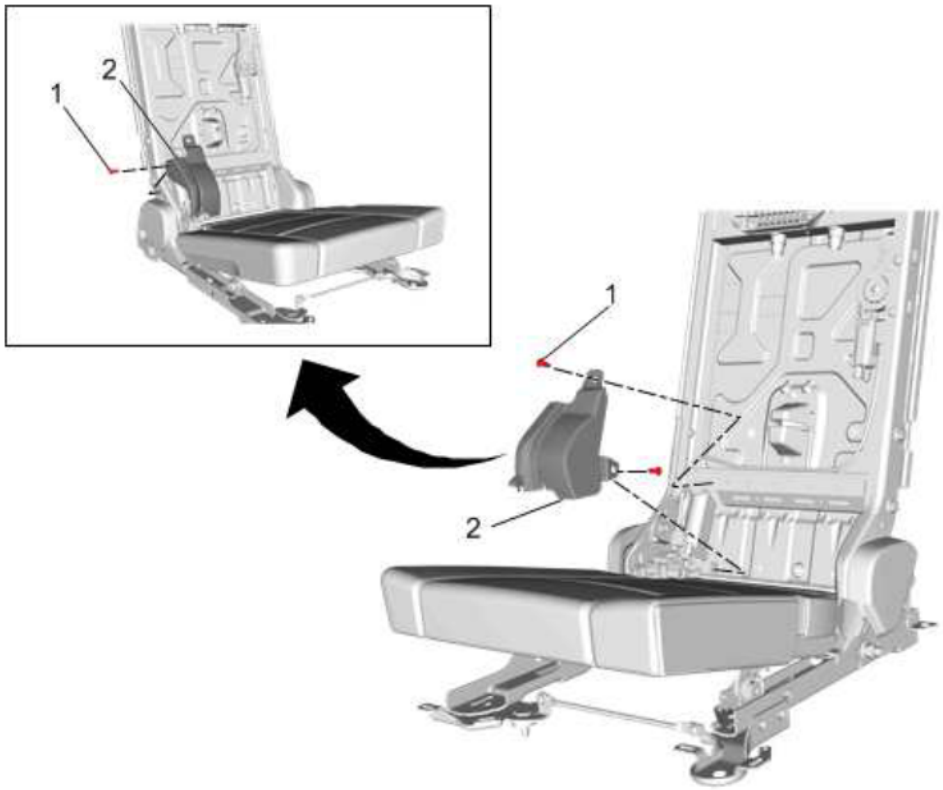


Fig. 105: 3rd Row Seat Back Hinge Finish Cover (40% Outboard with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Reposition the 40% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (40%)**.	
1	3rd Row Seat 40% Inboard Hinge Finish Cover Retainer (Qty: 3)
2	3rd Row Seat 40% Inboard Hinge Finish Cover **Procedure** Release the bottom of the hinge finish cover from the retaining tab feature on the seat frame.

3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (60% INBOARD WITH AS8)

cardiagn.com

nd ...

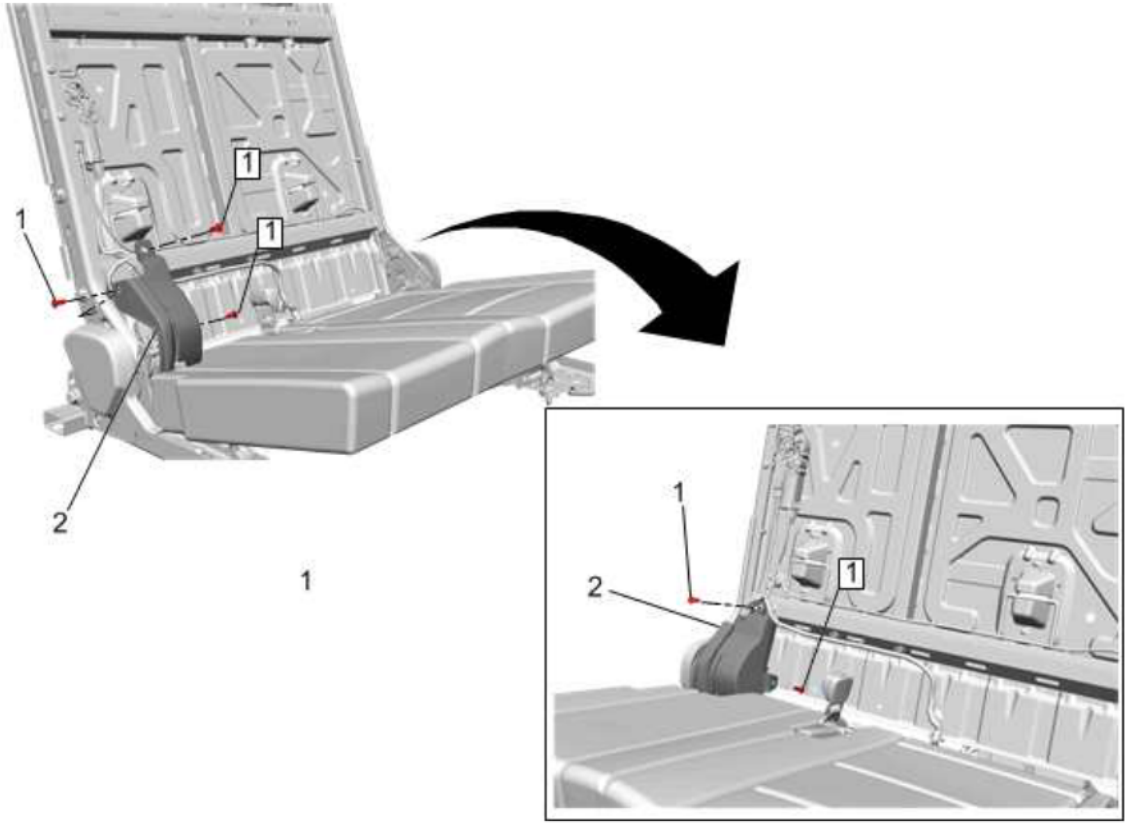


Fig. 106: 3rd Row Seat Back Hinge Finish Cover (60% Inboard with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Reposition the 60% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (60%)**.	
1	3rd Row Seat 60% Inboard Hinge Finish Cover Retainer (Qty: 3)
2	3rd Row Seat 60% Inboard Hinge Finish Cover **Procedure** 1. Release the bottom of the hinge finish cover from the retaining tab pocket. 2. Ensure the cover is properly seated prior to installing the retainers.

cardiagn.com

3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (60% OUTBOARD WITH AS8)

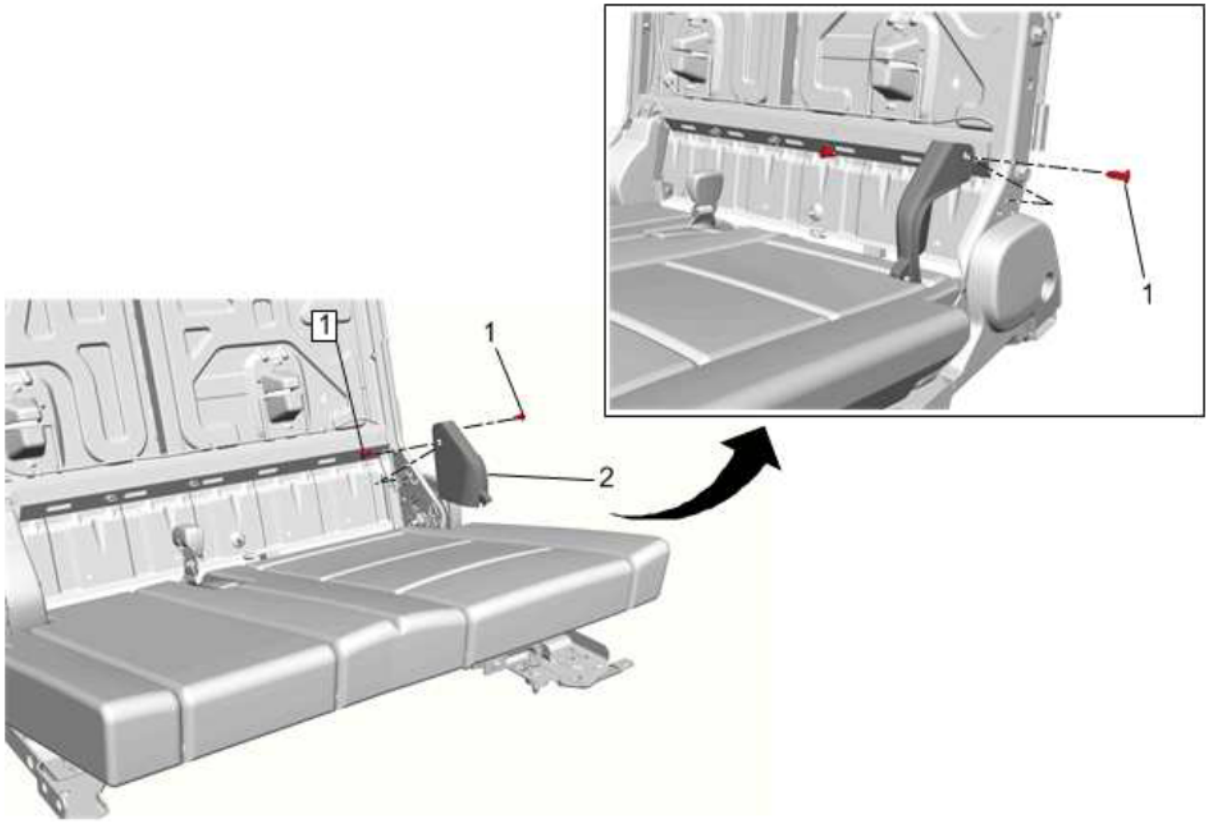


Fig. 107: 3rd Row Seat Back Hinge Finish Cover (60% Outboard with AS8)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Reposition the 60% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (60%)**.	
1	3rd Row Seat 60% Outboard Hinge Finish Cover Retainer (Qty: 2)
2	3rd Row Seat 60% Outboard Hinge Finish Cover **Procedure** 1. Release the bottom of the hinge finish cover from the retaining tab pocket.

cardiagn.com

Callout	Component Name
	2. Ensure that the cover is properly seated prior to installing the retainers.

3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (60% INBOARD WITH ARN)

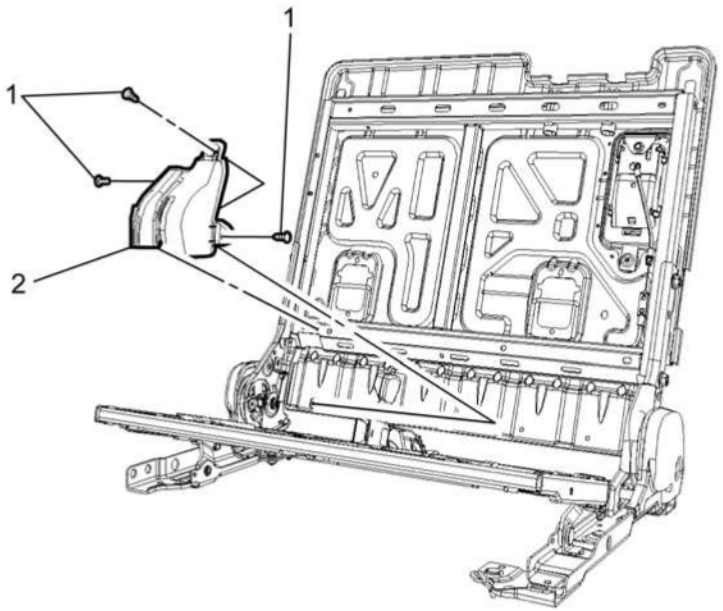


Fig. 108: 3rd Row Seat Back Hinge Finish Cover (60% Inboard with ARN)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Reposition the 60% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (60%)**.	
1	3rd Row Seat 60% Inboard Hinge Finish Cover Retainer (Qty: 3)

cardiagn.com

Callout	Component Name
2	3rd Row Seat 60% Inboard Hinge Finish Cover **Procedure** 1. Release the bottom of the hinge finish cover from the retaining tab pocket. 2. Ensure the cover is properly seated prior to installing the retainers.

3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (60% OUTBOARD WITH ARN)

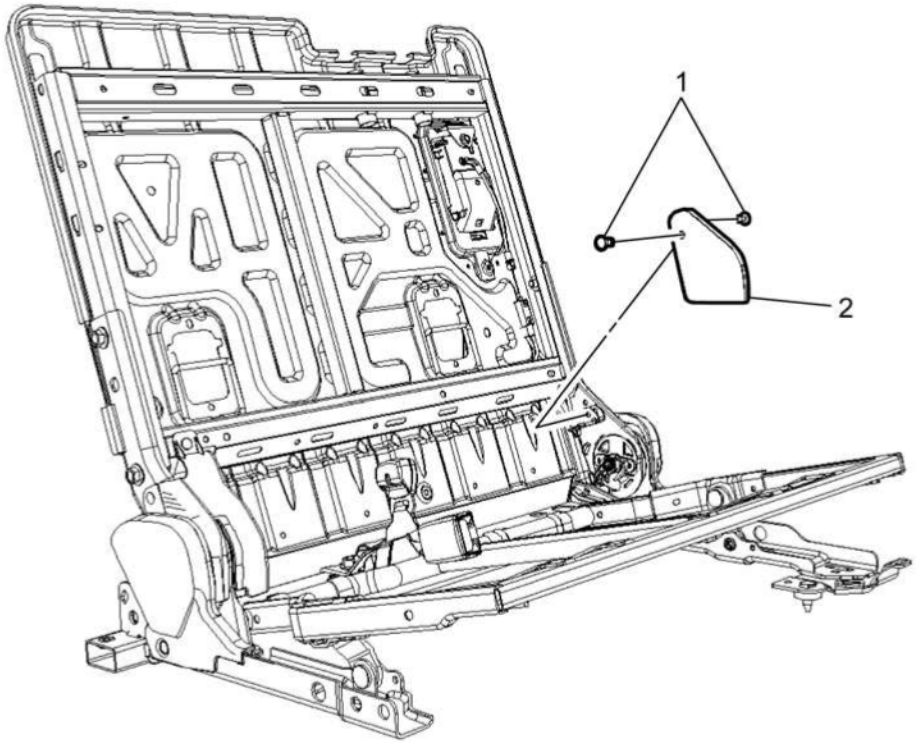



Fig. 109: 3rd Row Seat Back Hinge Finish Cover (60% Outboard with ARN)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name

cardiagn.com

Callout	Component Name
Preliminary Procedure Reposition the 60% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (60%)**.	
1	3rd Row Seat 60% Outboard Hinge Finish Cover Retainer (Qty: 2)
2	3rd Row Seat 60% Outboard Hinge Finish Cover **Procedure** 1. Release the bottom of the hinge finish cover from the retaining tab pocket. 2. Ensure that the cover is properly seated prior to installing the retainers.

3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (40% OUTBOARD WITH ARN)

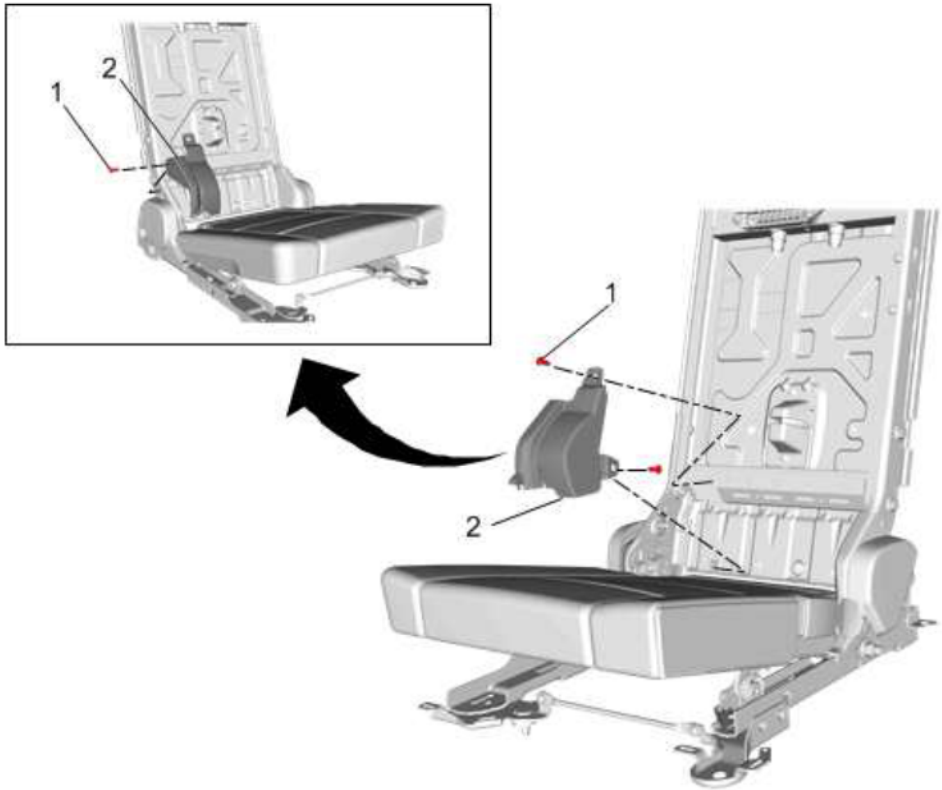

cardiagn.com

Fig. 110: 3rd Row Seat Back Hinge Finish Cover (40% Outboard with ARN)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Reposition the 40% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (40%)**.	
1	3rd Row Seat 40% Inboard Hinge Finish Cover Retainer (Qty: 3)
2	3rd Row Seat 40% Inboard Hinge Finish Cover **Procedure** Release the bottom of the hinge finish cover from the retaining tab feature on the seat frame.

3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (40% INBOARD WITH ARN)

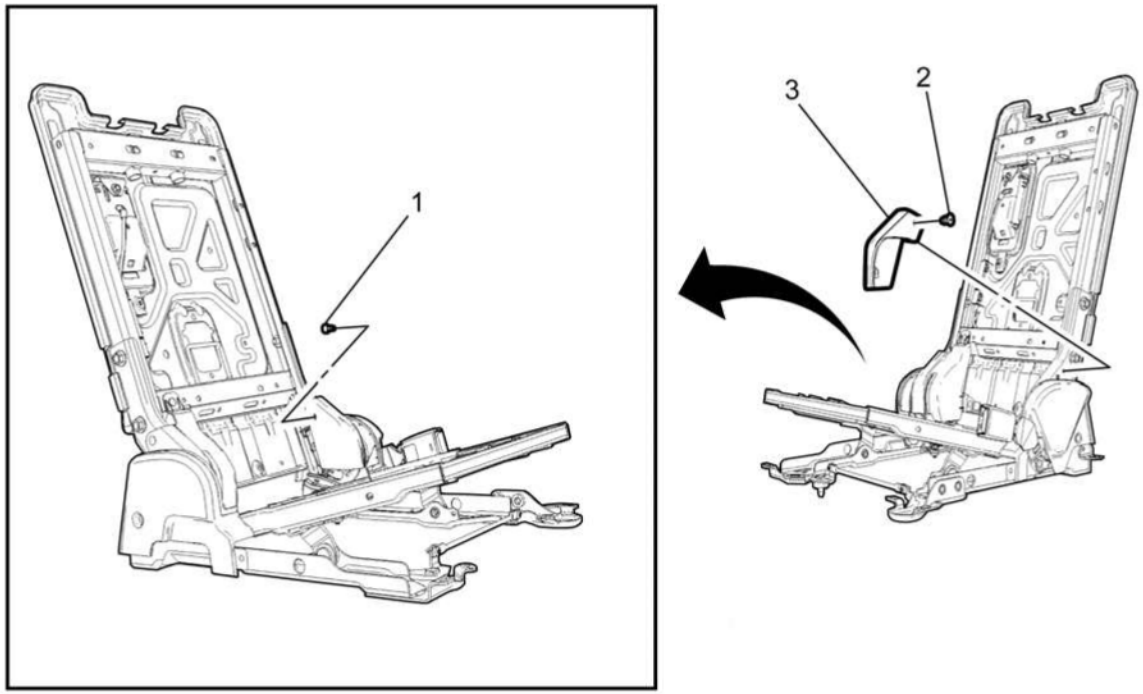


Fig. 111: 3rd Row Seat Back Hinge Finish Cover (40% Inboard with ARN)

cardiagn.com

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Reposition the 40% 3rd row seat back cover and pad. Refer to **3rd Row Seat Back Cover and Pad Replacement (40%)**.	
1	3rd Row Seat 40% Inboard Hinge Finish Cover Fastener
2	3rd Row Seat 40% Inboard Hinge Finish Cover Fastener
3	3rd Row Seat 40% Inboard Hinge Finish Cover **Procedure** 1. Release the bottom of the hinge finish cover from the retaining tab pocket. 2. Ensure that the cover is properly seated prior to installing the retainers.

REAR SEAT RISER OPENING FINISH COVER REPLACEMENT

cardiagn.com

nd ...

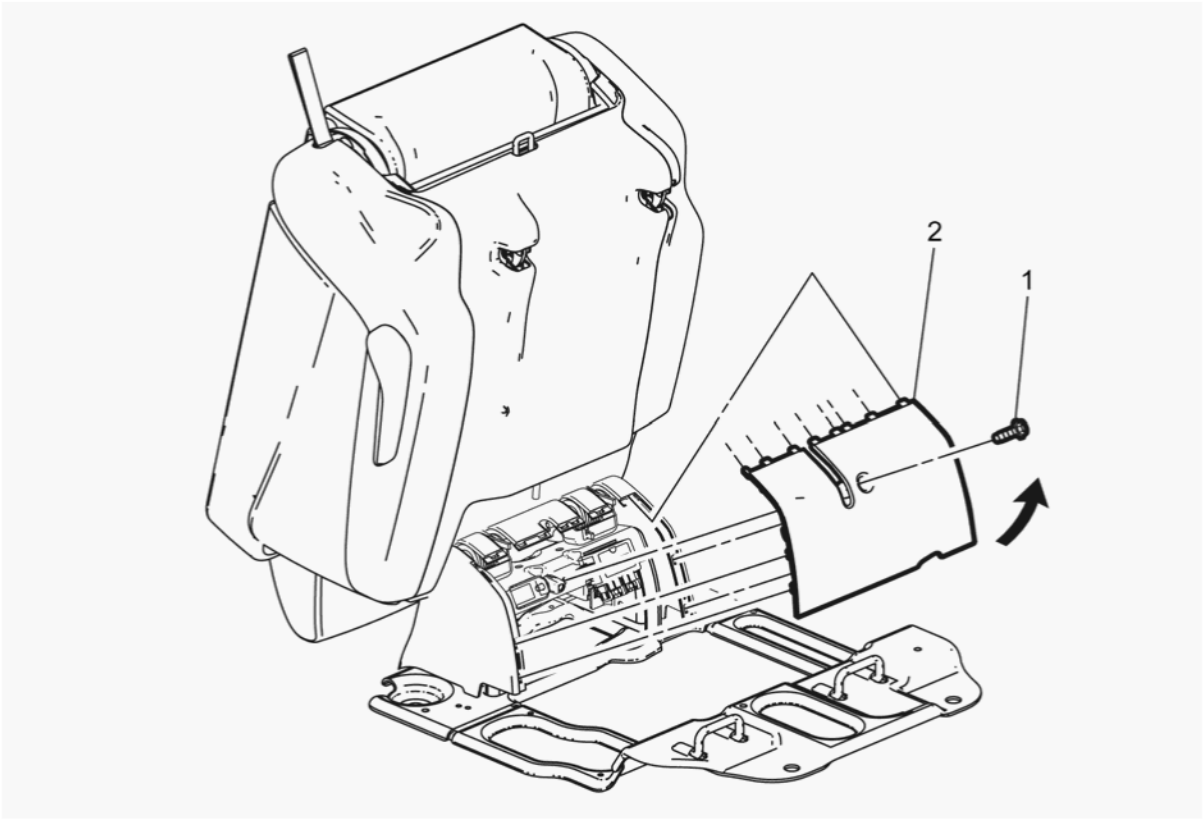


Fig. 112: Rear Seat Riser Opening Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Seat Riser Opening Finish Cover Fastener **CAUTION:** **Refer to** **Fastener Caution** . **Procedure** Release the rear seat latch to fold up the seat and gain access to the finish cover fastener.

cardiagn.com

Callout	Component Name
	Tighten 2 N.m (18 lb in)
2	Rear Seat Cushion Trim Panel

REAR SEAT RISER FINISH COVER REPLACEMENT

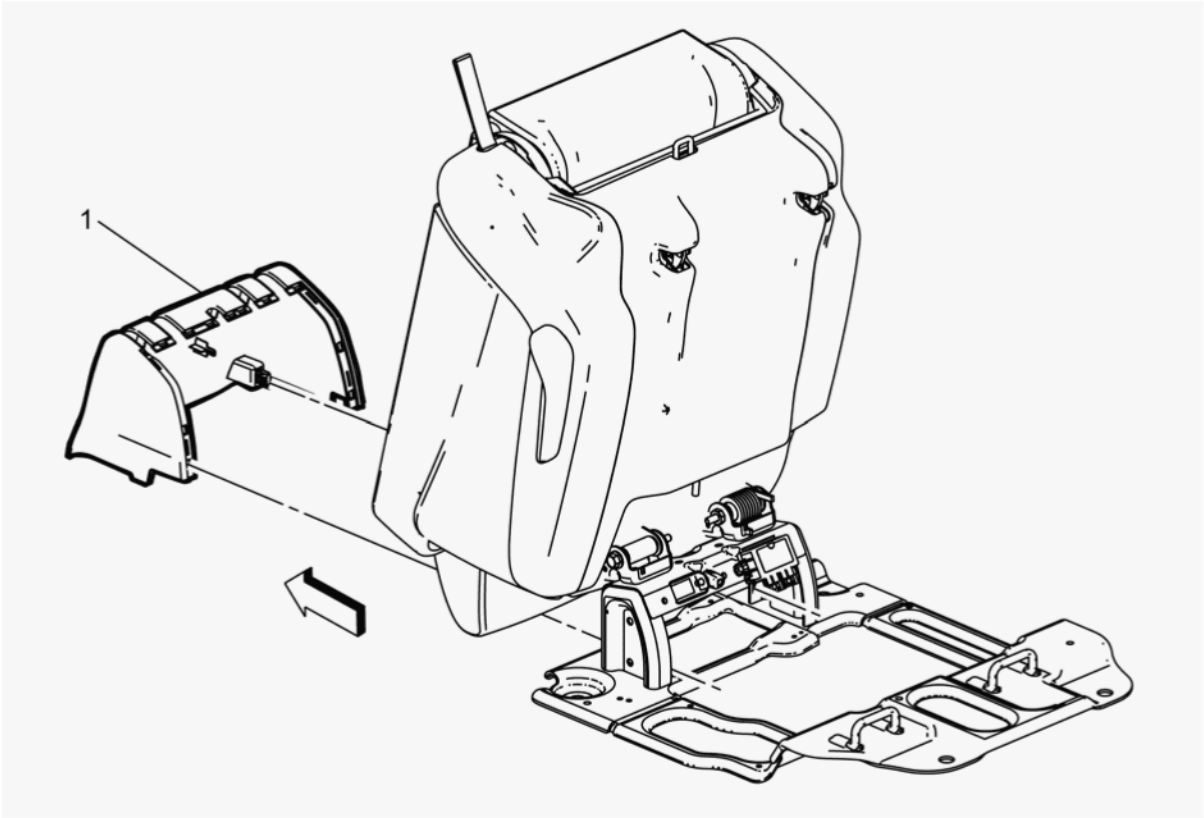


Fig. 113: Rear Seat Riser Finish Cover
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear seat riser opening finish cover. Refer to **Rear Seat Riser Opening Finish Cover Replacement**.	

cardiagn.com

Callout	Component Name
1	Rear Seat Riser Finish Cover **Procedure** Disengage the rear seat riser finish cover from the riser by pulling at the retainer clip locations.

cardiagn.com