Browse

Fuse box diagram

Locate fuses and relays

Fuses and relay Chevrolet Aveo

For Chevrolet Aveo 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011 model year (hatchback, sedan).

Fuse box in engine compartment.

fuse box location.

The engine compartment fuse block is located on the driver’s side of the vehicle, near the battery.

fuse box diagram.

type 1.

10
10
20
10
10
10
30
10
15
10
30
30
30
30
30
30

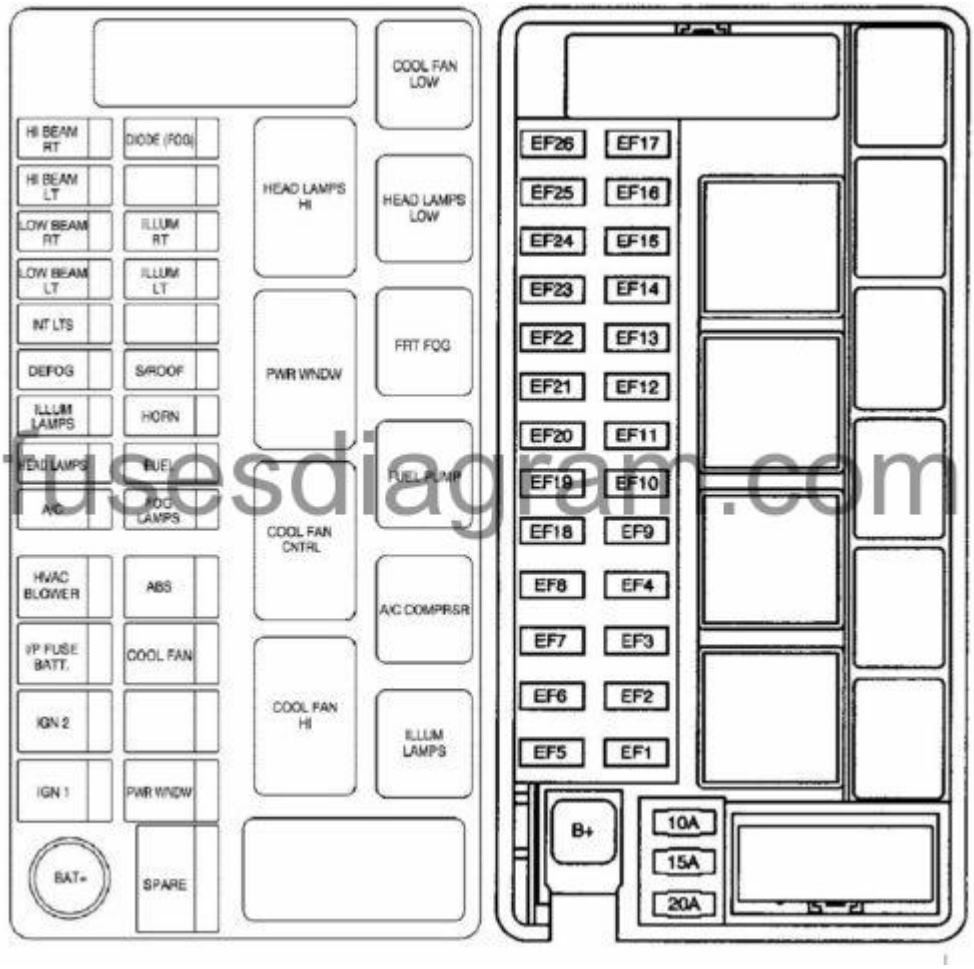

fusesdiagram.com

legend.

Fuse No.	Device	Rating	Description

EF1	PWRWNDW	30A	Power Window Relay
EF2	MAIN RELAY	20A	Main Relay (1.2L)
EF3	COOL FAN	30A	Cooling Fan Relay
EF4	ABS	50A	EBCM
EF5	IGN1	30A	lejntion-1
EF6	IGN2	3QA	Ignition-2
EF7	I/P FUSE	30A	Battery Main
EF8	HVAC BLOWER	20A	Blower Motor
EF9	FOG LAMPS	15A	Front Fog Lamp Relay
EF10	FUEL	15A	Fuel Pump Relay
EF11	HORN	10A	Horn, Theft Deterrent Alarm, and Hood Contact Switch
EF12	S/ROOF	20A	Sun Roof Module
EF13		–	Not Used
EF14	ILLUM LT	10A	License Lamp, Tail Lamp, Position Lamp
EF15	ILLUM RT	10A	Tail Lamp, Position Lamp, Illumination Lamp
EF16	DIODE	–	Fog
EF17		–	Not Used

EF18	A/C	20A	A/C Compressor
EF19	HEAD LAMPS	25A	DRL Module, Head Lamp Relay
EF20	ILLUM LAMPS	2QA	Illumination Relay
EF21	DEFOG	30A	Defog
EF22	INT LTS	10A	Room Lamp, Trunk Lamp
EF23	LOW BEAM LT	10A	Head Lamp Low
EF24	LOW BEAM RT	10A	Head Lamp Low
EF25	HI BEAM LT	10A	Head Lamp High
EF26	HI BEAM RT	10A	Head Lamp High
EF27		10A	Spare
EF28		15A	Spare
EF29		20A	Spare

Relay.

BLANK – Not Used

COOL FAN LOW – Cooling Fan Low

HEAD LAMPS HI – Headlamp High

HEAD LAMPS LOW – Headlamp Low

PWR WNDW – Power Window

FRT FOG – Fog Lamp

COOL FN CNTRL – Cooling Fan Control

FUEL PUMP – Fuel Pump

A/C COMPRSR – Air Conditioning Compressor

COOL FAN HI – Cooling Fan High

ILLUM LAMPS – Illumination Lamps

BLANK – Not Used

fuse box diagram.

type 2.

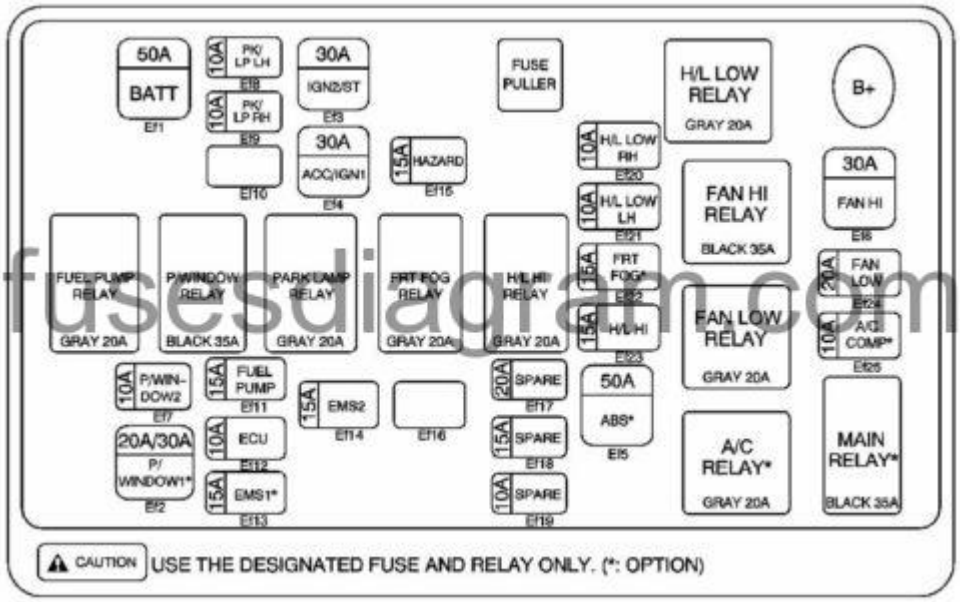

fusesdiagram.com

No.	Fuse	Rating	Description
Ef1	BATT Fuse	50A	Fuse Block – I/P F7, F10, F11, F12, F13, F14, F15, F16, F18, F21 Fuses
Ef2	P/WINDOW1 Fuse	30A	Window Switch – Driver
Ef3	IGN2/ST Fuse	30A	Ignition Switch
Ef4	ACC/IGN1 Fuse	30A	Ignition Switch
Ef5	ABS Fuse	50A	Electronic Brake Control Module (EBCM)
Ef6	FAN HI Fuse	30A	FAN HI Relay
Ef7	P/WINDOW2 Fuse	10A	Window Switch – Driver
Ef8	PK/LP LH Fuse	10A	License Lamp, Position Lamp/Headlamp Leveling Actuator – Left, Tail Lamp – Left

Ef9	PK/LP RH Fuse	10A	Fuse Block – I/P PARK Relay (T61), JX202, Position Lamp/Headlamp Leveling Actuator – Right, Tail Lamp – Right
Ef10	Empty	–	Not Used
Ef11	FUEL PUMP Fuse	15A	FUEL PUMP Relay
Ef12	ECU Fuse	10A	Engine Control Module (ECM), Transmission Control Module (TCM) (MLQ)
Ef13	EMS1 Fuse	15A	A/C Relay, Engine Control Module (ECM), FAN HI Relay, FAN LOW Relay, Fuel Injector 1, Fuel Injector 2, Fuel Injector 3, Fuel Injector 4, Ignition Coil Module
Ef14	EMS2 Fuse	15A	Camshaft Position (CMP) Sensor, Evaporative Emission (EVAP) Canister Purge Solenoid Valve, Exhaust Gas Recirculation (EGR) Valve, Heated Oxygen Sensor (HO2S) 1, Heated Oxygen Sensor (HO2S) 2, Port Deactivation (PDA) Solenoid (1.2L)
Ef15	HAZARD Fuse	15A	Hazard Switch and Hood Ajar Switch
Ef16	Empty	–	Not Used
Ef17	SPARE Fuse	20A	Not Used
Ef18	SPARE Fuse	15A	Not Used
Ef19	SPARE Fuse	10A	Not Used
Ef20	H/L LOW RH Fuse	10A	Headlamp – Right

Ef21	H/L LOW LH Fuse	10A	Headlamp – Left, and Headlamp Leveling Switch
Ef22	FRT FOG Fuse	15A	FRT FOG Relay
Ef23	H/L HI Fuse	15A	H/L HI Relay
Ef24	FAN LOW Fuse	20A	FAN LOW Relay
Ef25	A/C COMP Fuse	10A	A/C Relay
–	A/C Relay	–	A/C Compressor Clutch, and Engine Control Module (ECM)
–	FAN HI Relay	–	Cooling Fan, Cooling Fan Resistor, and Engine Control Module (ECM)
–	FAN LOW Relay	–	Cooling Fan Resistor, and Engine Control Module (ECM)
–	FRT FOG Relay	–	Fog Lamp – Left Front, Fog Lamp – Right Front, Fuse Block – I/P, and Instrument Panel Cluster (IPC)
			Engine Control Module (ECM), and Fuel Pump and
–	FUEL PUMP Relay	–	Sender Assembly
–	H/L HI Relay	–	Headlamp – Left, Headlamp – Right, Headlamp Switch, Instrument Panel Cluster (IPC)
–	H/L LOW Relay	–	Fuse Block – I/P, Fuse Block – Underhood EF20 and EF21 Fuses
–	MAIN Relay	–	Engine Control Module (ECM), Fuse Block –

			Underhood EF13 and EF14 Fuses
–	PARK LAMP Relay	–	Fuse Block – I/P, Fuse Block – Underhood EF8 and EF9 Fuses
–	P/WINDOW Relay	–	Fuse Block – I/P, Fuse Block – Underhood EF2 and EF7 Fuses

Fuse box in passenger compartment Chevrolet Aveo.

fuse box location.

The instrument panel fuse block is located on the end of the instrument panel on the driver's side of the vehicle. To access the fuses, open the fuse panel door by pulling the door out. To reinstall the door, first insert the rear edge of the fuse panel door, then push the front of the door into the end of the instrument panel to secure it.

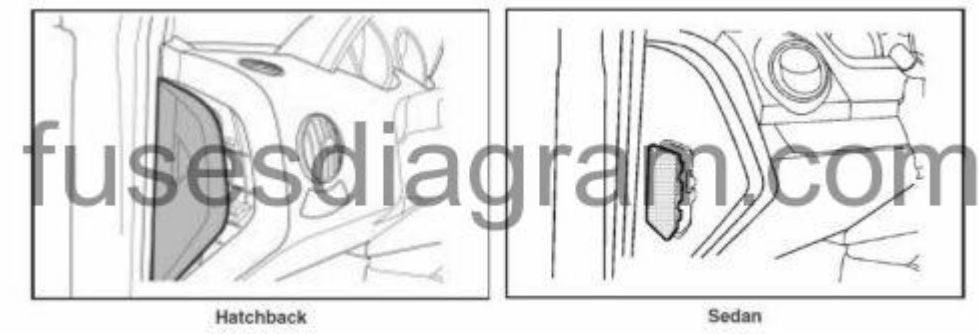

fuse box layout.

type 1.

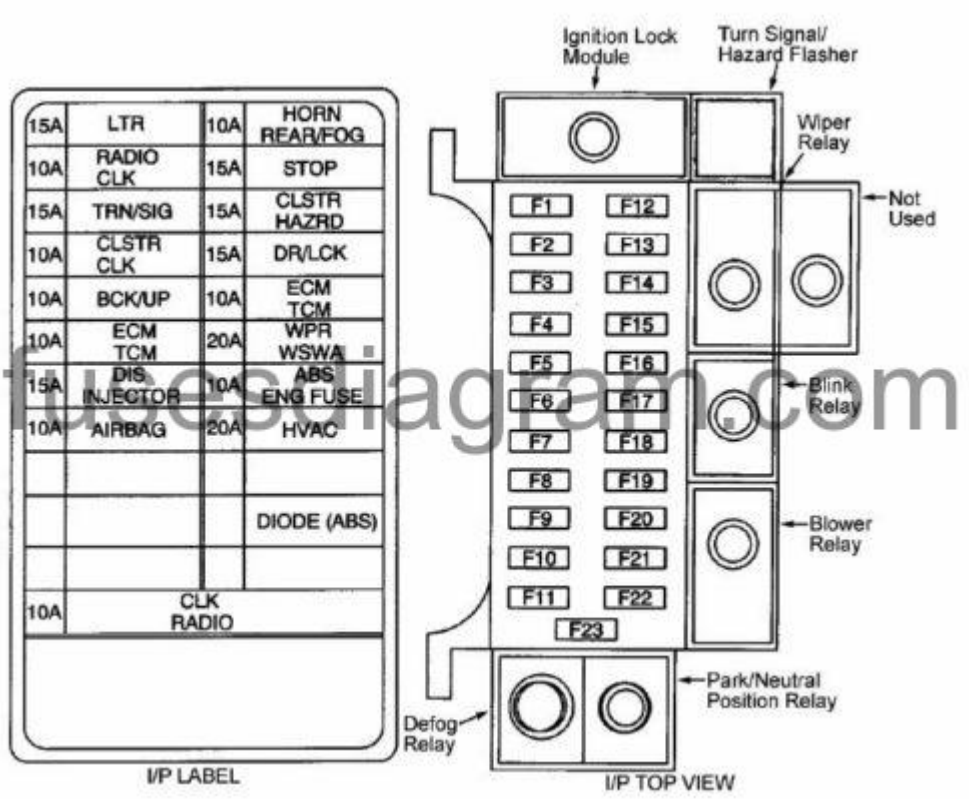

fusesdiagram.com

Fuse No.	Device	Rating	Description
F1	LTR	15A	Cigar Lighter, Extra Power Jack
F2	RADIO CLK	10A	Radio, Clock
F3	TRN/51G	15A	Hazard Switch
F4	CLSTR CLK	10A	DRL, Clock, Cluster, Chime Bell, Immobilizer
F5	BCK/UP	10A	Backup Switch
F6	ECM/TCM	10A	VSS, ECM, TCM, PNP Switch
F7	DIS INJECTOR	15A	ABS Warning Lamp Module
F8	AIR BAG	10A	SDM

F9-F11		—	Not Used
F12	HORN REAR/FOG	10A	Horn Relay, Key Remind Switch, DRL Relay
F13	STOP	15A	Brake Switch
F14	CLSTR HAZARD	15A	Cluster, Blink Relay, Hazard Switch .
F15	DRL/LCK	15A	Central Door Lock Unit, Anti-Theft Module
F16	ECM/TCM	10A	Immobilizer, DLC, TCM, ECM
F17	WPR WSW	20A	Windshield Wiper, Wiper Relay, Wiper Switch, Room Lamp
F18	ABS ENG FUSE	10A	EBCM, Power Window Relay, A/C Switch, Cooling Fan
F19	HVAC	20A	Blower Switch, A/C Switch, Defog Switch
F20-F22		—	Not Used
F23	CLK RADIO	10A	Radio, Clock

fuse box layout.

type 2.

hatchback.

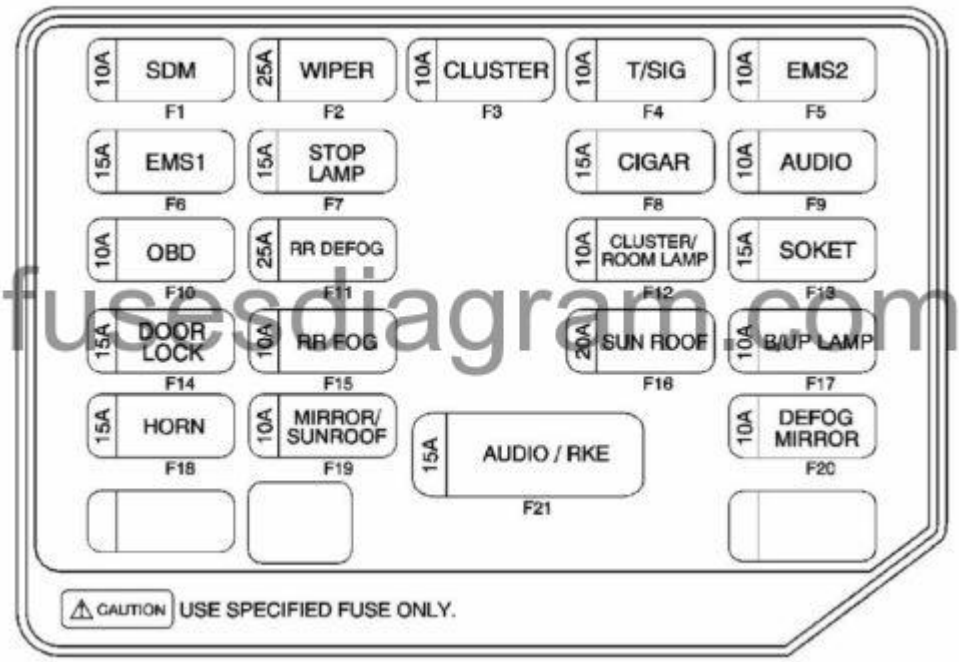

No.	Fuse	Rating	Description
F1	SDM Fuse	10A	Inflatable Restraint Sensing and Diagnostic Module (SDM)

F2	WIPER Fuse	25A	Windshield Wiper/Washer Switch, Windshield Wiper Motor
F3	CLUSTER Fuse	10A	Clock, Instrument Panel Cluster (IPC), Remote Control Door Lock Receiver (RCDLR), Stop Lamp Switch
F4	T/SIG Fuse	10A	Hazard Switch
F5	EMS2 Fuse	10A	Fuse Block – Underhood, Heated Oxygen Sensor (HO2S) 2, Tank Shut-off Valve, Transmission Control Module (TCM) (MLQ), Vehicle Speed Sensor (VSS) (MFM/MLM)
F6	EMS1 Fuse	15A	Fuse Block – Underhood, Immobilizer
F7	STOP LAMP Fuse	15A	Stop Lamp Switch
F8	CIGAR Fuse	15A	Cigar Lighter
F9	AUDIO Fuse	10A	Clock, I/P Compartment Lamp Switch, Radio
F10	OBD Fuse	10A	Data Link Connector (DLC), Immobilizer
F11	RR DEFOG Fuse	25A	REAR DEFOG Relay
F12	CLUSTER/ROOM LAMP Fuse	10A	Dome Lamp, I/P Compartment Lamp Switch, Instrument Panel Cluster (IPC), Rear Compartment Lamp
F13	SOKET Fuse	15A	Auxiliary Power Outlet

F14	DOOR LOCK Fuse	15A	DOOR LOCK Relay, DOOR UNLOCK Relay
F15	RR FOG Fuse	10A	Fuse Block – I/P Controller, REAR FOG Relay
F16	SUN ROOF Fuse	20A	Sunroof Control Module (CF5)
F17	B/UP LAMP Fuse	10A	Backup Lamp Switch, Park/Neutral Position (PNP) Switch
F18	HORN Fuse	15A	HORN Relay
F19	MIRROR/SUNROOF Fuse	10A	Dome Lamp, HVAC Control Module, Outside Rearview Mirror Switch
F20	DEFOG MIRROR Fuse	10A	HVAC Control Module, Outside Rearview Mirror – Driver, Outside Rearview Mirror – Passenger
F21	AUDIO/RKE Fuse	15A	Clock, Fuse Block – I/P, HVAC Control Module, Ignition Key Alarm Switch, Key Illumination, Outside Rearview Mirror – Driver, Outside Rearview Mirror – Passenger, Radio, Remote Control Door Lock Receiver (RCDLR)

sedan.

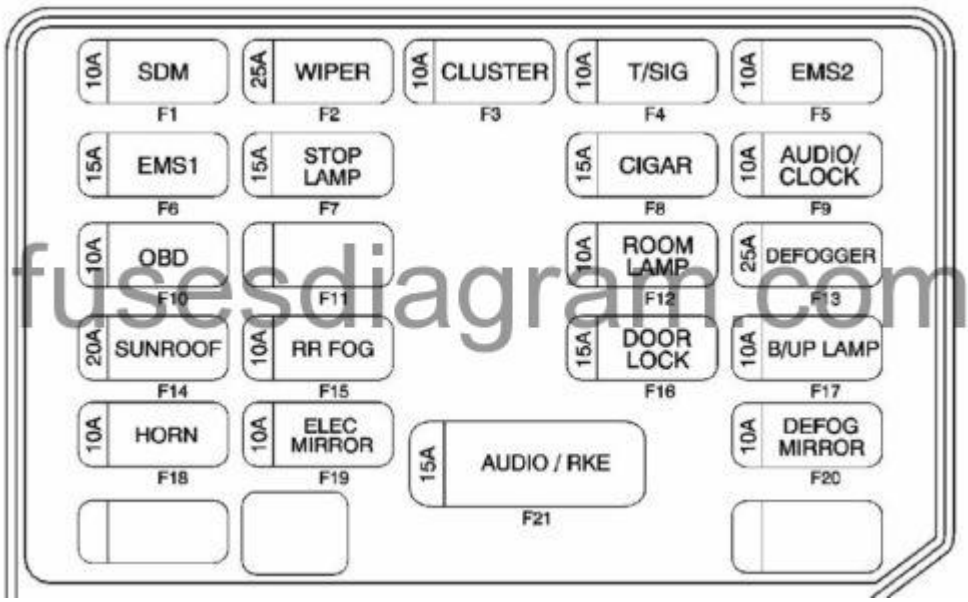

fusesdiagram.com

No.	Fuse	Rating	Description
F1	SDM Fuse	10A	Inflatable Restraint Sensing and Diagnostic Module (SDM)
F2	WIPER Fuse	25A	Windshield Wiper/Washer Switch, Windshield Wiper Motor
F3	CLUSTER Fuse	10A	Clock, Instrument Panel Cluster (IPC), Remote Control Door Lock Receiver (RCDLR), Stop Lamp Switch
F4	T/SIG Fuse	10A	Hazard Switch
F5	EMS2 Fuse	10A	Fuse Block – Underhood, Heated Oxygen Sensor (HO2S) 2, Tank Shut-off Valve, Transmission Control Module (TCM) (MLQ), Vehicle Speed Sensor (VSS) (MFM/MLM)
F6	EMS1 Fuse	15A	Fuse Block – Underhood, Immobilizer
F7	STOP LAMP Fuse	15A	Stop Lamp Switch

F8	CIGAR Fuse	15A	Cigar Lighter
F9	AUDIO/CLOCK Fuse	10A	Clock, I/P Compartment Lamp Switch, Radio
F10	OBD Fuse	10A	Data Link Connector (DLC), Immobilizer
F11	–	–	Not Used
F12	CLUSTER/ROOM LAMP Fuse	10A	Dome Lamp, I/P Compartment Lamp Switch, Instrument Panel Cluster (IPC), Rear Compartment Lamp
F13	DEFOGGER Fuse	25A	REAR DEFOG Relay
F14	SUNROOF Fuse	20A	Sunroof Control Module
F15	RR FOG Fuse	10A	Fuse Block – I/P Controller, REAR FOG Relay
F16	DOOR LOCK Fuse	15A	DOOR LOCK/UNLOCK Relay
F17	B/UP LAMP Fuse	10A	Backup Lamp Switch, Park/Neutral Position (PNP) Switch
F18	HORN Fuse	10A	HORN Relay
F19	ELEC MIRROR Fuse	10A	Outside Rearview Mirror Switch, HVAC Control Module, Dome Lamp
F20	DEFOG MIRROR Fuse	10A	HVAC Control Module, Outside Rearview Mirror – Driver, Outside Rearview Mirror – Passenger
F21	AUDIO/RKE Fuse	15A	Clock, Fuse Block – I/P, HVAC Control Module, Ignition Key Alarm Switch, Key Illumination, Outside

			Rearview Mirror – Driver, Outside Rearview Mirror – Passenger, Radio, Remote Control Door Lock Receiver (RCDLR)

Posted in Chevrolet Tagged Fuse box diagram Chevrolet

« FUSES AND RELAY CHEVROLET IMPALA

FUSES AND RELAY CHEVROLET AVEO 2011-2016 »

Ads

Ads by Google

Fuse Diagram

AC not Working

Rear Window Replacement

Control Valve

Search …

Categories

Alfa Romeo

Audi

BMW

Chevrolet

Chrysler

Dodge

Fiat

Ford

Honda

Hyundai

Jeep

Kia

Land Rover

Mazda

Mercedes

Mercury

Nissan

Opel/Vauxhall

Peugeot

Range Rover

Renault

Toyota

Volkswagen

Recent Posts

Fuses and relay Toyota Yaris

Fuses and relay Toyota Avensis 1997-2003

Fuses and relay Honda Odyssey 2003-2008

Fuses and relay Honda Odyssey 1999-2004

Fuses and relay Honda Odyssey 1994-1998

Fuses and relay Audi A3 8P

Fuses and relay Audi A3 8L

Fuse box diagram Ford Taurus 1996-1999

Fuses and relay Kia Cerato Spectra

Fuses and relay Honda Jazz Fit

You may also enjoy...

Fuses and relay Chevrolet C…

Fuses and relay Chevrolet Av…

Fuses and relay Chevrolet Im…

Fuses and relay Chevrolet Sil…