Mondeo Wiring Diagrams

Table of Contents

Group 1 – General Information

General Information

Table of Contents 100-00-00-1
Systems Overview 100-00-01-1
Index 100-00-02-1
Introduction 100-00-03-1
Symbols 100-00-04-1
Connector Repair Procedures 100-00-05-1
Wiring Harness Overview 100-00-06-1

Group 2 – Chassis

Brake System

Anti–Lock Control 206-09A-00-1
Anti–Lock Control –
Traction Control and Stability Assist 206-09C-00-1

Group 3 – Powertrain

Engine

Engine Cooling –
1.8L Duratec–SCi (MI4) 303-03A-00-1
Engine Cooling –
1.8/2.0L Duratec–HE (MI4) 303-03B-00-1
Engine Cooling –
2.5L Duratec–VE (VE6) 303-03C-00-1
Engine Cooling –
3.0L Duratec–SE (VE6),
3.0L Duratec–ST (VE6) 303-03D-00-1
Engine Cooling –
2.0L Duratorq–DI/TDDi (Puma) Diesel,
90 HP 303-03E-00-1
Engine Cooling –
2.0L Duratorq–TDCi (Puma) Diesel,
2.2L Duratorq–TDCi (Puma) Diesel 303-03F-00-1
Fuel Charging and Controls –
1.8L Duratec–SCi (MI4) 303-04A-00-1
Fuel Charging and Controls –
1.8/2.0L Duratec–HE (MI4) 303-04B-00-1
Fuel Charging and Controls –
2.5L Duratec–VE (VE6) 303-04C-00-1
Fuel Charging and Controls –
3.0L Duratec–SE (VE6),
3.0L Duratec–ST (VE6) 303-04D-00-1
Fuel Charging and Controls –
2.0L Duratorq–DI/TDDi (Puma) Diesel,
90 HP 303-04E-00-1
Fuel Charging and Controls –
2.0L Duratorq–TDCi (Puma) Diesel,
2.2L Duratorq–TDCi (Puma) Diesel 303-04F-00-1
Starting System 303-06-00-1
Engine Ignition –
1.8L Duratec–SCi (MI4) 303-07A-00-1
Engine Ignition –
1.8/2.0L Duratec–HE (MI4) 303-07B-00-1
Engine Ignition –
2.5L Duratec–VE (VE6) 303-07C-00-1
Engine Ignition –
3.0L Duratec–SE (VE6),
3.0L Duratec–ST (VE6) 303-07D-00-1
Glow Plug System –
2.0L Duratorq–DI/TDDi (Puma) Diesel,
90 HP 303-07E-00-1
Glow Plug System –
2.0L Duratorq–TDCi (Puma) Diesel,
2.2L Duratorq–TDCi (Puma) Diesel 303-07F-00-1
Electronic Engine Controls –
1.8L Duratec–SCi (MI4) 303-14A-00-1
Electronic Engine Controls –
1.8/2.0L Duratec–HE (MI4) 303-14B-00-1
Electronic Engine Controls –
2.5L Duratec–VE (VE6) 303-14C-00-1
Electronic Engine Controls –
3.0L Duratec–SE (VE6),
3.0L Duratec–ST (VE6) 303-14D-00-1
Electronic Engine Controls –
2.0L Duratorq–DI/TDDi (Puma) Diesel,
90 HP 303-14E-00-1
Electronic Engine Controls –
2.0L Duratorq–TDCi (Puma) Diesel,
2.2L Duratorq–TDCi (Puma) Diesel 303-14F-00-1
Automatic Transmission –
4–speed automatic transmission
(CD4E) 307-01A-00-1
Automatic Transmission –
5–speed automatic transmission
(5F31J) 307-01B-00-1
Vehicle Speed Control 310-03-00-1

Group 4 – Electrical

Climate Control System
Auxiliary Heating 412-02B-00-1
Air Conditioning 412-03-00-1

Instrumentation and Warning System
Instrument Cluster and Panel Illumination 413-00-00-1
Instrument Cluster 413-01-00-1
Horn 413-06-00-1
Clock 413-07-00-1
Warning Devices 413-09-00-1
Parking Aid – Valeo 413-13A-00-1
Parking Aid – Bosch 413-13B-00-1
Generator and Regulator 414-02-00-1

Audio Systems
Audio Unit 415-01-00-1
Speakers 415-03-00-1
Video System 415-07-00-1

Lighting Systems
Exterior Lighting – Headlamps 417-01-00-1
Exterior Lighting – Autolamps 417-01-00-10
Exterior Lighting – Headlamp Levelling 417-01-00-11
Exterior Lighting – Turn Signal and Hazard Lamps 417-01-00-13
Exterior Lighting – Parking Lamps . 417-01-00-19
Exterior Lighting – Stop Lamps . . . 417-01-00-27
Exterior Lighting – Licence plate lamps 417-01-00-35
Exterior Lighting – Reversing Lamps 417-01-00-36
Exterior Lighting – Fog lamps 417-01-00-44
Exterior Lighting – Trailer socket . 417–01–00–50
Interior Lighting 417-02-00-1
Daytime Running Lamps 417-04-00-1

Electrical Distribution
Module Communications Network, Diagnostic 418-00B-00-1

Electronic Feature Group
Anti–Theft – Active 419-01A-00-1
Anti–Theft – Passive 419-01B-00-1
Vehicle Route Guidance/Navigation – Travel Pilot 419-07A-00-1
Vehicle Route Guidance/Navigation – DVD navigation system with touch screen 419-07B-00-1
Cellular Phone – without external CD changer and video system 419-08A-00-1
Cellular Phone – Bluetooth voice control 419-08B-00-1
Multifunction Electronic Control Modules 419-10-00-1

Group 5 – Body and Paint

Chassis
Rear View Mirrors 501-09-00-1
Seating 501-10-00-1
Glass, Frames and Mechanisms 501-11-00-1
Instrument Panel and Console 501-12-00-1
Handles, Locks, Latches and Entry Systems 501-14-00-1
Wipers and Washers 501-16-00-1
Roof Opening Panel 501-17-00-1
Occupant Restraints – Active 501-20A-00-1
Occupant Restraints – Passive 501-20B-00-1

Group 7 – General Wiring Information

Fuse and Relay Information 700-01-00-1
Power Distribution 700-02-00-1
Fuse Details 700-03-00-1
Ground Distribution 700-04-00-1
Component Location Charts 700-05-00-1
Component Location Views 700-06-00-1
Connector Views 700-07-00-1

Systems Overview

Fuel Charging and Controls – 1.8L Duratec–SCi (MI4)
303–04A–00

Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)
303–04B–00

Fuel Charging and Controls – 2.5L Duratec–VE (VE6)
303–04C–00

Fuel Charging and Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
303–04D–00

Fuel Charging and Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel
303–04F–00

Starting System
303–06–00

Electronic Engine Controls – 1.8L Duratec–SCi (MI4)
303–14A–00

Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)
303–14B–00

Electronic Engine Controls – 2.5L Duratec–VE (VE6)
303–14C–00

Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
303–14D–00

Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
303–14E–00

Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel
303–14F–00

Automatic Transmission – 4–speed automatic transmission (CD4E)
307–01A–00

Automatic Transmission – 5–speed automatic transmission (5F31J)
307–01B–00

Vehicle Speed Control
310–03–00

Fuel Charging and Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
303–04E–00

Engine Ignition – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
303–07D–00

Glow Plug System – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
303–07E–00

Glow Plug System – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel
303–07F–00

Module Communications Network, Diagnostic
418–00B–00

Multifunction Electronic Control Modules
419–10–00

Engine Ignition – 1.8L Duratec–SCi (MI4)
303–07A–00

Engine Ignition – 1.8/2.0L Duratec–HE (MI4)
303–07B–00

Engine Ignition – 2.5L Duratec–VE (VE6)
303–07C–00

Instrument Cluster
413–01–00

Horn
413–06–00

Clock/Timekeeping
413–07–01

Warning Devices
413–09–00

Audio Unit
415–01–00

Speakers
415–03–00

Video System
415–07–00

Auxiliary Heating
412–02B–00

Air Conditioning
412–03–00

Instrument Cluster and Panel Illumination
413–00–00

Vehicle Route Guidance/Navigation – DVD navigation system with touch screen
419–07B–00

Cellular Phone – without external CD changer and video system
419–08A–00


Cellular Phone – Bluetooth voice control
419–08B–00

Instrument Panel and Console
501–12–00

Anti–Theft – Active
419–01A–00

Anti–Theft – Passive
419–01B–00

Vehicle Route Guidance/Navigation – Travel Pilot
419–07A–00

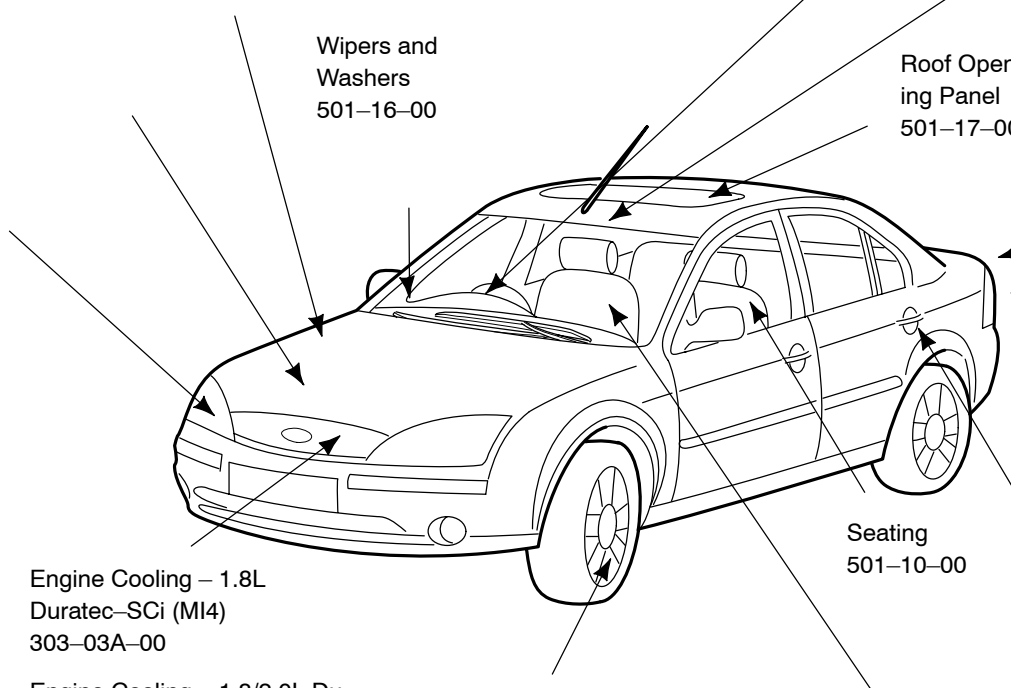

Rear View Mirrors
501–09–00

Interior Lighting
417–02–00

Wipers and Washers
501–16–00

Roof Opening Panel
501–17–00

Exterior Lighting – Licence plate lamps
417–01–00–31

Exterior Lighting – Headlamps
417–01–00–1

Exterior Lighting – Headlamp levelling
417–01–00–11

Exterior Lighting – Turn Signal and Hazard Lamps
417–01–00–13

Exterior Lighting – Stop Lamps
417–01–00–27

Exterior Lighting – Reversing Lamps
417–01–00–32

Seating
501–10–00

Parking Aid – Valeo
413–13A–00

Exterior Lighting – Parking Lamps
417–01–00–19

Engine Cooling – 1.8L Duratec–SCi (MI4)
303–03A–00

Parking Aid – Bosch
413–13B–00

Exterior Lighting – Fog lamps
417–01–00–36

Engine Cooling – 1.8/2.0L Duratec–HE (MI4)
303–03B–00

Anti–Lock Control
206–09A–00

Daytime Running Lamps
417–04–00

Engine Cooling – 2.5L Duratec–VE (VE6)
303–03C–00

Anti–Lock Control – Traction Control and Stability Assist
206–09C–00

Handles, Locks, Latches and Entry Systems
501–14–00

Exterior Lighting – Autolamps
417–04–00–10

Engine Cooling – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
303–03D–00

Engine Cooling – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
303–03E–00

Engine Cooling – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel
303–03F–00

Generator and Regulator
414–02–00

Glass, Frames and Mechanisms
501–11–00

Occupant Restraints – Active
501–20A–00

Occupant Restraints – Passive
501–20B–00

A/C compressor clutch diode, V7 412–03–00–500
A/C compressor clutch diode, V7 – 1.8L Duratec–SCi (MI4) 303–14A–00–10
A/C compressor clutch diode, V7 – 1.8L Duratec–SCi (MI4) 412–03–00–2
A/C compressor clutch diode, V7 – 2.5L Duratec–VE (VE6) 303–14C–00–11
A/C compressor clutch diode, V7 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–18
A/C compressor clutch solenoid, Y31 412–03–00–500
A/C compressor clutch solenoid, Y31 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–13
A/C compressor clutch solenoid, Y31 – 1.8L Duratec–SCi (MI4) 303–14A–00–10
A/C compressor clutch solenoid, Y31 – 1.8L Duratec–SCi (MI4) 412–03–00–2
A/C compressor clutch solenoid, Y31 – 2.5L Duratec–VE (VE6) 303–14C–00–11
A/C compressor clutch solenoid, Y31 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–18
A/C compressor clutch solenoid, Y31 – Diesel engines 412–03–00–3
A/C compressor clutch solenoid, Y31 – Petrol engines, except 1.8L Duratec–SCi (MI4) 412–03–00–1
A/C high–pressure switch, N126 412–03–00–500
A/C high–pressure switch, N126 – 1.8L Duratec–SCi (MI4) 303–14A–00–10
A/C high–pressure switch, N126 – 1.8L Duratec–SCi (MI4) 412–03–00–2
A/C high–pressure switch, N126 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–8
A/C high–pressure switch, N126 – 2.2L Duratorq–TDCi (Puma) Diesel,
2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–4
A/C high–pressure switch, N126 – 2.5L Duratec–VE (VE6) 303–14C–00–11
A/C high–pressure switch, N126 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–18
A/C high–pressure switch, N126 – Diesel engines 412–03–00–3
A/C high–pressure switch, N126 – Petrol engines, except 1.8L Duratec–SCi (MI4) 412–03–00–1
A/C low–pressure switch, N246 412–03–00–500
A/C low–pressure switch, N246 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–13
A/C low–pressure switch, N246 – 1.8L Duratec–SCi (MI4) 303–14A–00–10
A/C low–pressure switch, N246 – 1.8L Duratec–SCi (MI4) 412–03–00–2
A/C low–pressure switch, N246 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–8
A/C low–pressure switch, N246 – 2.5L Duratec–VE (VE6) 303–14C–00–11
A/C low–pressure switch, N246 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–18
A/C low–pressure switch, N246 – Diesel engines 412–03–00–3
A/C low–pressure switch, N246 – Petrol engines, except 1.8L Duratec–SCi (MI4) 412–03–00–1
A/C Wide Open Throttle (WOT) relay, K32 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–13
A/C Wide Open Throttle (WOT) relay, K32 – 1.8L Duratec–SCi (MI4) 303–14A–00–10
A/C Wide Open Throttle (WOT) relay, K32 – 1.8L Duratec–SCi (MI4) 412–03–00–2
A/C Wide Open Throttle (WOT) relay, K32 – 2.5L Duratec–VE (VE6) 303–14C–00–11
A/C Wide Open Throttle (WOT) relay, K32 – 3.0L Duratec–SE (VE6) 700–02–00–5
A/C Wide Open Throttle (WOT) relay, K32 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–18
A/C Wide Open Throttle (WOT) relay, K32 – Diesel engines 412–03–00–3
A/C Wide Open Throttle (WOT) relay, K32 – Diesel engines 700–02–00–6
A/C Wide Open Throttle (WOT) relay, K32 – Petrol engines, except 3.0L Duratec–SE (VE6) 700–02–00–4
ABS module, A7 – before 08/2004 . . . . . 206–09A–00–1
ABS module, A7 – before 08/2004 . . . . . 206–09A–00–3
ABS module, A7 – Bosch 8.0 . . . . . 206–09A–00–2
Accelerator pedal position sensor, B129 – 1.8L Duratec–SCi (MI4) 303–14A–00–8
Accelerator pedal position sensor, B129 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–4
Accelerator pedal position sensor, B129 – 2.2L Duratorq–TDCi (Puma) Diesel,
2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–10
Air Conditioning 412–03–00

Air temperature mode actuator, M249 412–03–00–5
Ambient air temperature sensor, B203 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–3
Ambient air temperature sensor, B203 – 1.8L Duratec–SCi (MI4) 303–14A–00–8
Ambient air temperature sensor, B203 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–6
Ambient air temperature sensor, B203 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 413–09–00–8
Ambient air temperature sensor, B203 – 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–8
Ambient air temperature sensor, B203 – 2.0L Duratorq–TDCi (Puma) Diesel 413–09–00–10
Ambient air temperature sensor, B203 – 2.2L Duratorq–TDCi (Puma) Diesel 303–14F–00–7
Ambient air temperature sensor, B203 – 2.5L Duratec–VE (VE6) 303–14C–00–2
Ambient air temperature sensor, B203 – 3.0L Duratec–SE (VE6) 303–14D–00–8
Ambient air temperature sensor, B203 – 3.0L Duratec–ST (VE6) 303–14D–00–9
Ambient air temperature sensor, B203 – Petrol engines 413–09–00–7
Antenna, A151 – Pre–equipment pack 415–01–00–1
Antenna, A151 – with external CD changer and/or video system 415–01–00–5
Antenna, A151 – without external CD changer and video system 415–01–00–4
Antenna, triplex, A260 . . . . . 419–07A–00–1
Anti–Lock Control 206–09A–00
Anti–Lock Control – Traction Control and Stability Assist 206–09C–00
Anti–Theft – Active 419–01A–00
Anti–Theft – Passive 419–01B–00
Anti–theft alarm horn, H5 . . . . . 419–01A–00–2
Anti–theft interior scan sensor, front, B102 . . . . . 419–01A–00–2
Audio control module, A369 – with video system 415–01–00–9
Audio Unit 415–01–00
Audio/navigation system control unit, A157 . . . . . 419–07A–00–1
Auto–dimming interior mirror, A222 – Auto–dimming interior mirror 501–09–00–3
Autolamps/rain sensor module, A365 – Autolamps 417–01–00–10
Autolamps/rain sensor, B302 – Autolamps 417–01–00–10
Automatic Transmission – 4–speed automatic transmission (CD4E) 307–01A–00
Automatic Transmission – 5–speed automatic transmission (5F31J) 307–01B–00
Auxiliary electric coolant heater relay 1, K168 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 303–14E–00–3
Auxiliary electric coolant heater relay 1, K168 – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 . . . . . 303–14F–00–5
Auxiliary electric coolant heater relay 1, K168 – Diesel engines, With electric coolant heater, before 12/2003 . . . . . 412–02B–00–1
Auxiliary electric coolant heater relay 2, K169 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 303–14E–00–3
Auxiliary electric coolant heater relay 2, K169 – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 . . . . . 303–14F–00–5
Auxiliary Heating 412–02B–00
Auxiliary IN, D81 – with external CD changer 415–01–00–7
Auxiliary IN, D81 – with video system 415–01–00–9
Auxiliary trailer socket, D46 – Trailer socket, before 01/2004 417–01–00–53
Battery backed sounder, A196 . . . . . 419–01A–00–2
Battery Junction Box (BJB), P93 700–02–00–2
Battery saver relay, K115 417–02–00–1
Battery saver relay, K115 700–02–00–3
Battery, O1 303–06–00–1

Battery, O1 – 3.0L Duratec–SE (VE6) 414–02–00–2
Battery, O1 – 3.0L Duratec–ST (VE6) 414–02–00–3
Battery, O1 – Diesel engines 414–02–00–4
Battery, O1 – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) 414–02–00–1
Blower motor control module, A97 – EATC, as of 04/2004 412–03–00–9
Blower motor control module, A97 – EATC, before 04/2004 412–03–00–8
Blower motor relay, K14 700–02–00–2
Blower motor relay, K14 – EATC, as of 04/2004 412–03–00–9
Blower motor relay, K14 – EATC, before 04/2004 412–03–00–8
Blower motor relay, K14 – Manual A/C, before 04/2004 412–03–00–6
Blower motor resistor, R21 – Manual A/C, before 04/2004 412–03–00–6
Blower motor switch, N14 – Manual A/C, before 04/2004 412–03–00–6
Blower motor, M3 – EATC, as of 04/2004 412–03–00–9
Blower motor, M3 – Manual A/C, before 04/2004 412–03–00–6
Bluetooth voice control module, A381 – Bluetooth voice control 419–08B–00–2
Booster heater, R50 – Diesel engines, with fuel fired heater 412–02B–00–2
Booster heater, R50 – Diesel engines, with fuel fired heater, as of 08/2004 . . . . . 412–02B–00–3
Brake booster sensor, B220 – 1.8L Duratec–SCi (MI4) 303–14A–00–12
Brake fluid level switch, N1 – as of 08/2004 413–01–00–5
Brake fluid level switch, N1 – before 08/2004 413–01–00–4
Brake pedal position switch, N82 – 1.8L Duratec–SCi (MI4) 303–14A–00–12
Brake pedal position switch, N82 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–6
Brake pedal position switch, N82 – Petrol engines, except 1.8L Duratec–SCi (MI4) 310–03–00–2
Brake pressure switch, N249 – 5–speed automatic transmission (5F31J), Diesel engines 307–01B–00–7
Camshaft position sensor, B41 – 1.8/2.0L Duratec–HE (MI4) 303–07B–00–1
Camshaft position sensor, B41 – 1.8/2.0L Duratec–HE (MI4), automatic transmission 303–14B–00–9
Camshaft position sensor, B41 – 1.8/2.0L Duratec–HE (MI4), manual transmission 303–14B–00–8
Camshaft position sensor, B41 – 1.8L Duratec–SCi (MI4) 303–14A–00–11
Camshaft position sensor, B41 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–3
Camshaft position sensor, B41 – 2.5L Duratec–VE (VE6) 303–07C–00–1
Camshaft position sensor, B41 – 2.5L Duratec–VE (VE6) 303–14C–00–7
Camshaft position sensor, B41 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
Camshaft position sensor, B41 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–11
Canister purge solenoid valve, Y1 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–1
Canister purge solenoid valve, Y1 – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 303–14A–00–2
Canister purge solenoid valve, Y1 – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 303–14A–00–1
Canister purge solenoid valve, Y1 – 2.5L Duratec–VE (VE6) 303–14C–00–1
Canister purge solenoid valve, Y1 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–1
Cargo space lamp, E87 417–02–00–1
Catalyst monitor sensor, B192 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–3
Catalyst monitor sensor, B192 – 1.8L Duratec–SCi (MI4) 303–14A–00–7
Catalyst monitor sensor, B192 – 2.5L Duratec–VE (VE6) 303–14C–00–3
Catalyst monitor sensor, B192 – 3.0L Duratec–SE (VE6) 303–14D–00–5
Catalyst monitor sensor, LH side, B199 – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 303–14D–00–7
Catalyst monitor sensor, LH side, B199 – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 303–14D–00–6
Catalyst monitor sensor, RH side, B300 – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 303–14D–00–7
Catalyst monitor sensor, RH side, B300 – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 303–14D–00–6

CD changer, A144 – with external CD changer 415–01–00–6
CD changer, A144 – with external CD changer 415–01–00–7
Cellular Phone without external CD changer and video system 419–08A–00
Cellular Phone – Bluetooth voice control 419–08B–00
Cellular phone antenna, B219 – without external CD changer and video system 419–08A–00–1
Cellular phone microphone, A291 – without external CD changer and video system 419–08A–00–1
Central Junction Box (CJB), P91 700–02–00–1
Cigar lighter, front, R42 – Cigar lighter 501–12–00–1
Climate controlled seat module, LH front, A373 – Climate controlled front seats 501–10–00–6
Climate controlled seat module, RH front, A374 – Climate controlled front seats 501–10–00–7
Climate controlled seat switch, N668 – Climate controlled front seats 501–10–00–6
Climate controlled seat switch, N668 – Climate controlled front seats 501–10–00–7
Clock 413–07–00
Clock spring, P13 – Driver air bag 501–20B–00–2
Clock, A39 413–07–00–1
Clutch pedal position switch, N81 – 1.8/2.0L Duratec–HE (MI4), manual transmission 303–14B–00–5
Clutch pedal position switch, N81 – 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–8
Clutch pedal position switch, N81 – 2.2L Duratorq–TDCi (Puma) Diesel 303–14F–00–7
Clutch pedal position switch, N81 – 2.5L Duratec–VE (VE6), manual transmission 303–14C–00–4
Clutch pedal position switch, N81 – 3.0L Duratec–SE (VE6) 303–14D–00–8
Clutch pedal position switch, N81 – 3.0L Duratec–ST (VE6) 303–14D–00–9
Component Location Charts 700–05–00
Component Location Views 700–06–00
Connector Repair Procedures 100–00–05
Connector Views 700–07–00
Control assembly, A141 415–07–00–3
Coolant supplement 1 heater, R79 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 303–14E–00–3
Coolant supplement 1 heater, R79 – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 . . . . . 303–14F–00–5
Coolant supplement 1 heater, R79 – Diesel engines, With electric coolant heater, before 12/2003 . 412–02B–00–1
Coolant supplement 2 heater, R80 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 303–14E–00–3
Coolant supplement 2 heater, R80 – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 . . . . . 303–14F–00–5
Coolant supplement 2 heater, R80 – Diesel engines, With electric coolant heater, before 12/2003 . 412–02B–00–1
Cooling fan motor, M37 – 1.8/2.0L Duratec–HE (MI4) 303–03B–00–1
Cooling fan motor, M37 – 1.8L Duratec–SCi (MI4) 303–03A–00–1
Cooling fan motor, M37 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–03F–00–1
Cooling fan motor, M37 – 2.5L Duratec–VE (VE6),automatic transmission 303–03C–00–2
Cooling fan motor, M37 – 2.5L Duratec–VE (VE6),manual transmission 303–03C–00–1
Cooling fan motor, M37 – 3.0L Duratec–ST (VE6) 303–03D–00–2
Cooling fan relay, K45 – 1.8/2.0L Duratec–HE (MI4) 303–03B–00–1
Cooling fan relay, K45 – 1.8L Duratec–SCi (MI4) 303–03A–00–1
Cooling fan relay, K45 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–03F–00–1
Cooling fan relay, K45 – 2.5L Duratec–VE (VE6),automatic transmission 303–03C–00–2
Cooling fan relay, K45 – 3.0L Duratec–ST (VE6) 303–03D–00–2
Cooling fan resistor, R27 – 1.8/2.0L Duratec–HE (MI4) 303–03B–00–1
Cooling fan resistor, R27 – 1.8L Duratec–SCi (MI4) 303–03A–00–1

Cooling fan resistor, R27 – 2.5L Duratec–VE (VE6),automatic transmission 303–03C–00–2
Cooling fan resistor, R27 – 3.0L Duratec–ST (VE6) 303–03D–00–2
Crankshaft position sensor, B43 – 1.8/2.0L Duratec–HE (MI4) 303–07B–00–1
Crankshaft position sensor, B43 – 1.8/2.0L Duratec–HE (MI4), automatic transmission 303–14B–00–9
Crankshaft position sensor, B43 – 1.8/2.0L Duratec–HE (MI4), manual transmission 303–14B–00–8
Crankshaft position sensor, B43 – 1.8L Duratec–SCi (MI4) 303–14A–00–8
Crankshaft position sensor, B43 – 2.2L Duratorq–TDCi (Puma) Diesel,
2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–9
Crankshaft position sensor, B43 – 2.5L Duratec–VE (VE6) 303–07C–00–1
Crankshaft position sensor, B43 – 2.5L Duratec–VE (VE6) 303–14C–00–7
Crankshaft position sensor, B43 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
Crankshaft position sensor, B43 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–11
Crash sensor, B177 . . . . . 501–20B–00–1
Cylinder head temperature sensor, B135 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–6
Cylinder head temperature sensor, B135 – 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–8
Cylinder head temperature sensor, B135 – 2.2L Duratorq–TDCi (Puma) Diesel 303–14F–00–7
Cylinder head temperature sensor, B135 – 2.2L Duratorq–TDCi (Puma) Diesel,
2.0L Duratorq–TDCi (Puma) Diesel 303–03F–00–1
Data Link Connector (DLC), D20 – Data link connector, pins 2 and 10,
2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 418–00B–00–5
Data Link Connector (DLC), D20 – Data link connector, pins 2, 10 and 13, Diesel engines,
except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel 418–00B–00–4
Data Link Connector (DLC), D20 – Data link connector, pins 2, 10 and 13, Petrol engines,
except 1.8L Duratec–SCi (MI4) 418–00B–00–3
Data Link Connector (DLC), D20 – Data link connector, pins 3 and 11,
with external CD changer and video system 418–00B–00–8
Data Link Connector (DLC), D20 – Data link connector, pins 6 and 14,
2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel,
manual transmission, as of 08/2004 . . . . . 418–00B–00–17
Data Link Connector (DLC), D20 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission,
except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 418–00B–00–13
Data Link Connector (DLC), D20 – Data link connector, pins 6 and 14, Petrol engines,
before 08/2004 . . . . . 418–00B–00–10
Daytime Running Lamps 417–04–00
Daytime Running Lamps (DRL) relay, K5 – with high intensity discharge headlamps 417–04–00–4
Daytime Running Lamps (DRL) relay, K5 – without high intensity discharge headlamps 417–04–00–2
Defrost mode actuator, M210 412–03–00–4
Diesel pump unit, A74 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–04E–00–1
Diesel pump unit, A74 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–2
Diode, V33 – 1.8/2.0L Duratec–HE (MI4) 303–03B–00–1
Diode, V33 – 1.8L Duratec–SCi (MI4) 303–03A–00–1
Diode, V33 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–03F–00–1
Diode, V33 – 2.5L Duratec–VE (VE6) 303–14C–00–1
Diode, V33 – 2.5L Duratec–VE (VE6),automatic transmission 303–03C–00–2
Diode, V33 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–1
Diode, V33 – 3.0L Duratec–ST (VE6) 303–03D–00–2
Discharge temperature sensor, floor, B246 – with EATC, as of 04/2004 412–03–00–503
Discharge temperature sensor, panel, B247 – with EATC, as of 04/2004 412–03–00–503

Door ajar switch, LH front, N84 417–02–00–5
Door ajar switch, LH front, N84 . . . . . 419–01A–00–1
Door ajar switch, LH front, N84 419–10–00–6
Door ajar switch, LH front, N84 501–14–00–1
Door ajar switch, LH front, N84 – LHD 413–09–00–4
Door ajar switch, LH front, N84 – RHD 413–09–00–5
Door ajar switch, LH rear, N86 417–02–00–5
Door ajar switch, LH rear, N86 . . . . . 419–01A–00–1
Door ajar switch, LH rear, N86 419–10–00–6
Door ajar switch, LH rear, N86 501–14–00–1
Door ajar switch, LH rear, N86 – LHD 413–09–00–4
Door ajar switch, LH rear, N86 – RHD 413–09–00–5
Door ajar switch, RH front, N85 417–02–00–5
Door ajar switch, RH front, N85 . . . . . 419–01A–00–1
Door ajar switch, RH front, N85 419–10–00–6
Door ajar switch, RH front, N85 501–14–00–1
Door ajar switch, RH front, N85 – LHD 413–09–00–4
Door ajar switch, RH front, N85 – RHD 413–09–00–5
Door ajar switch, RH rear, N87 417–02–00–5
Door ajar switch, RH rear, N87 . . . . . 419–01A–00–1
Door ajar switch, RH rear, N87 419–10–00–6
Door ajar switch, RH rear, N87 501–14–00–1
Door ajar switch, RH rear, N87 – LHD 413–09–00–4
Door ajar switch, RH rear, N87 – RHD 413–09–00–5
Door lock unit, driver side front, A172 501–14–00–3
Door lock unit, LH rear, A275 501–14–00–2
Door lock unit, passenger side front, A173 501–14–00–3
Door lock unit, RH rear, A276 501–14–00–2
Driver air bag unit, A42 – Driver air bag 501–20B–00–2
Driver safety belt retractor pretensioner, A225 . . . . . 501–20A–00–2
Driver seat backrest motor, M230 – 8–way power seats 501–10–00–2
Driver seat front height motor, M229 – 8–way power seats 501–10–00–2
Driver seat height motor, M158 – 2–way power seats 501–10–00–1
Driver seat horizontal motor, M227 – 8–way power seats 501–10–00–2
Driver seat rear height motor, M228 – 8–way power seats 501–10–00–2
DVD player, A433 415–07–00–4
EEC Diode, V13 – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
EEC Diode, V13 – 1.8L Duratec–SCi (MI4) 303–04A–00–1
EEC Diode, V13 – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 303–14A–00–2
EEC Diode, V13 – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 303–14A–00–1
EEC Diode, V13 – 3.0L Duratec–SE (VE6) 700–02–00–5
EEC Diode, V13 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–1
EEC Diode, V13 – Petrol engines, except 3.0L Duratec–SE (VE6) 700–02–00–4
EGR stepper motor, M251 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–7
EGR stepper motor, M251 – 1.8L Duratec–SCi (MI4) 303–14A–00–4
EGR valve actuator, M254 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–1
EGR valve actuator, M254 – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV 303–14F–00–2
EGR valve actuator, M254 – 2.2L Duratorq–TDCi (Puma) Diesel, stage III,
2.0L Duratorq–TDCi (Puma) Diesel, stage III 303–14F–00–1

Electronic Automatic Temperature Control (EATC) module, A205 – EATC, as of 04/2004 412–03–00–9
Electronic Automatic Temperature Control (EATC) module, A205 – EATC, before 04/2004 412–03–00–8
Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4) 303–14B–00
Electronic Engine Controls – 1.8L Duratec–SCi (MI4) 303–14A–00
Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00
Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel,
2.2L Duratorq–TDCi (Puma) Diesel 303–14F–00
Electronic Engine Controls – 2.5L Duratec–VE (VE6) 303–14C–00
Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00
Electronic Stability Program (ESP) module, A176 – as of 08/2004 ..... 206–09C–00–6
Electronic Stability Program (ESP) module, A176 – Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 ..... 206–09C–00–5
Electronic Stability Program (ESP) module, A176 – Petrol engines,
2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 ..... 206–09C–00–4
Electronic thermostat, B248 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–10
Electronic thermostat, B248 – 1.8L Duratec–SCi (MI4), as of 04/2004 ..... 303–14A–00–2
Electronic thermostat, B248 – 1.8L Duratec–SCi (MI4), before 04/2004 ..... 303–14A–00–1
Electronic throttle body, A364 – 1.8L Duratec–SCi (MI4) 303–14A–00–11
Engine compartment switch, N21 ..... 419–01A–00–2
Engine Coolant Temperature (ECT) sensor, B10 – 1.8/2.0L Duratec–HE (MI4) 303–03B–00–1
Engine Coolant Temperature (ECT) sensor, B10 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–4
Engine Coolant Temperature (ECT) sensor, B10 – 1.8L Duratec–SCi (MI4) 303–03A–00–1
Engine Coolant Temperature (ECT) sensor, B10 – 1.8L Duratec–SCi (MI4) 303–14A–00–8
Engine Coolant Temperature (ECT) sensor, B10 – 2.5L Duratec–VE (VE6) 303–14C–00–5
Engine Coolant Temperature (ECT) sensor, B10 – 3.0L Duratec–SE (VE6),
3.0L Duratec–ST (VE6) 303–14D–00–10
Engine Coolant Temperature (ECT) sensor, B10 – 3.0L Duratec–ST (VE6) 303–03D–00–2
Engine Cooling – 1.8/2.0L Duratec–HE (MI4) 303–03B–00
Engine Cooling – 1.8L Duratec–SCi (MI4) 303–03A–00
Engine Cooling – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–03E–00
Engine Cooling – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel 303–03F–00
Engine Cooling – 2.5L Duratec–VE (VE6) 303–03C–00
Engine Cooling – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–03D–00
Engine Ignition – 1.8/2.0L Duratec–HE (MI4) 303–07B–00
Engine Ignition – 1.8L Duratec–SCi (MI4) 303–07A–00
Engine Ignition – 2.5L Duratec–VE (VE6) 303–07C–00
Engine Ignition – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00
Engine RPM sensor, B251 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–6
ESP disable and tailgate/decklid release switch, N389 ..... 206–09C–00–3
Exhaust gas recirculation (EGR) valve position sensor,
B136 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–5
Exhaust gas recirculation (EGR) valve position sensor,
B136 – 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–8
Exhaust gas recirculation (EGR) valve position sensor,
B136 – 2.2L Duratorq–TDCi (Puma) Diesel 303–14F–00–7
Exterior Lighting – Autolamps 417–01–00–10
Exterior Lighting – Fog lamps 417–01–00–44
Exterior Lighting – Headlamp Levelling 417–01–00–11
Exterior Lighting – Headlamps 417–01–00–1

-8

Exterior Lighting – Licence plate lamps 417–01–00–35
Exterior Lighting – Parking Lamps 417–01–00–19
Exterior Lighting – Reversing Lamps 417–01–00–36
Exterior Lighting – Stop Lamps 417–01–00–27
Exterior Lighting – Trailer socket 417–01–00–50
Exterior Lighting – Turn Signal and Hazard Lamps 417–01–00–13
Exterior mirror, driver side, A355 501–09–00–1
Exterior mirror, passenger side, A356 501–09–00–1
F1 – F1, F2 700–03–00–1
F2 – F1, F2 700–03–00–1
F3 – F3, before 12/2003 700–03–00–2
F4 – F4, F5, F6 700–03–00–3
F5 – F4, F5, F6 700–03–00–3
F6 – F4, F5, F6 700–03–00–3
F7 – F7 700–03–00–4
F8 – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) 700–03–00–5
F8 – F8, 3.0L Duratec–SE (VE6) 700–03–00–6
F8 – F8, Diesel engines 700–03–00–7
F9 – F9 700–03–00–8
F10 – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) 700–03–00–9
F11 – F11, F13, F15 700–03–00–10
F13 – F11, F13, F15 700–03–00–10
F15 – F11, F13, F15 700–03–00–10
F16 – F16 700–03–00–11
F17 – F17 700–03–00–12
F18 – F18 700–03–00–13
F20 – F20, F21 700–03–00–14
F21 – F20, F21 700–03–00–14
F22 – F22, F23, petrol engines 700–03–00–15
F22 – F22, F23, Diesel engines 700–03–00–16
F23 – F22, F23, petrol engines 700–03–00–15
F23 – F22, F23, Diesel engines 700–03–00–16
F24 – F24, F25 700–03–00–17
F25 – F24, F25 700–03–00–17
F26 – F26 700–03–00–18
F27 – F27 700–03–00–19
F27 – F27, 3.0L Duratec–SE (VE6) 700–03–00–20
F28 – F28, F29 700–03–00–21
F29 – F28, F29 700–03–00–21
F30 – F30, F31, F32, Petrol engines 700–03–00–22
F30 – F30, F31, F32, F33, Diesel engines 700–03–00–24
F31 – F30, F31, F32, Petrol engines 700–03–00–22
F31 – F30, F31, F32, F33, Diesel engines 700–03–00–24
F32 – F30, F31, F32, Petrol engines 700–03–00–22
F32 – F30, F31, F32, F33, Diesel engines 700–03–00–24
F33 – F33, 1.8L Duratec–SCi (MI4) 700–03–00–23
F33 – F30, F31, F32, F33, Diesel engines 700–03–00–24
F37 – F37, 1.8L Duratec–SCi (MI4) 700–03–00–25
F37 – F37, 1.8/2.0L Duratec–HE (MI4) 700–03–00–26

F37 – F37, 2.5L Duratec–VE (VE6) 700–03–00–27
F37 – F37, 3.0L Duratec–SE (VE6) 700–03–00–28
F37 – F37, 3.0L Duratec–ST (VE6), before 04/2004 700–03–00–29
F37 – F37, 3.0L Duratec–ST (VE6), as of 04/2004 700–03–00–30
F40 – F40, 1.8L Duratec–SCi (MI4) 700–03–00–31
F40 – F40, 1.8/2.0L Duratec–HE (MI4) 700–03–00–32
F40 – F40, 2.5L Duratec–VE (VE6) 700–03–00–33
F40 – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 700–03–00–34
F40 – F40, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 700–03–00–35
F41 – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 700–03–00–36
F42 – F42, 1.8L Duratec–SCi (MI4) 700–03–00–37
F42 – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission 700–03–00–38
F42 – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission 700–03–00–39
F42 – F42, 2.5L Duratec–VE (VE6) 700–03–00–40
F42 – F42, 3.0L Duratec–SE (VE6) 700–03–00–41
F42 – F42, 3.0L Duratec–ST (VE6), before 04/2004 700–03–00–42
F42 – F42, 3.0L Duratec–ST (VE6), as of 04/2004 700–03–00–43
F42 – F42, Diesel engines 700–03–00–44
F60 – F60 700–03–00–45
F61 – F61 700–03–00–46
F62 – F62 700–03–00–47
F63 – F63, 4–door model/5–door model 700–03–00–48
F63 – F63, wagon 700–03–00–49
F64 – F64, without trailer socket, 4–door model/5–door model 700–03–00–50
F64 – F64, with trailer socket, 4–door model/5–door model 700–03–00–51
F64 – F64, without trailer socket, wagon 700–03–00–52
F64 – F64, with trailer socket, wagon 700–03–00–53
F65 – F65, F66 700–03–00–54
F66 – F65, F66 700–03–00–54
F67 – F67, 1.8L Duratec–SCi (MI4) 700–03–00–55
F67 – F67, 1.8/2.0L Duratec–HE (MI4) 700–03–00–56
F67 – F67, 2.5L Duratec–VE (VE6) 700–03–00–57
F67 – F67, 3.0L Duratec–SE (VE6) 700–03–00–58
F67 – F67, 3.0L Duratec–ST (VE6) 700–03–00–59
F67 – F67, Diesel engines 700–03–00–60
F68 – F68 700–03–00–61
F69 – F69, without external CD changer and video system 700–03–00–62
F69 – F69, with external CD changer and/or video system 700–03–00–63
F70 – F70 700–03–00–64
F71 – F71, except DVD navigation system with touch screen, without video system 700–03–00–65
F71 – F71, except DVD navigation system with touch screen, with video system 700–03–00–66
F71 – F71, with DVD navigation system with touch screen 700–03–00–67
F71 – F71, Bluetooth voice control 700–03–00–68
F72 – F72, without external CD changer and video system 700–03–00–69
F72 – F72, with external CD changer and/or video system 700–03–00–70
F73 – F73 700–03–00–71
F74 – F74, before 01/2004 700–03–00–72
F74 – F74, as of 01/2004, F201, with 7–pin trailer socket 700–03–00–73
F74 – F74, as of 01/2004, F200, F201, with 13–pin trailer socket 700–03–00–74

F75 – F75, except 5–speed automatic transmission (5F31J) 700–03–00–75
F75 – F75, 5–speed automatic transmission (5F31J) 700–03–00–76
F76 – F76, F77, before 04/2004 700–03–00–77
F76 – F76, F77, as of 04/2004 700–03–00–78
F77 – F76, F77, before 04/2004 700–03–00–77
F77 – F76, F77, as of 04/2004 700–03–00–78
F78 – F78, F80 700–03–00–79
F79 700–02–00–23
F80 – F78, F80 700–03–00–79
F81 – F81 700–03–00–80
F82 – F82, Petrol engines 700–03–00–81
F82 – F82, Diesel engines 700–03–00–82
F83 – F83 700–03–00–83
F85 – F85, F86 700–03–00–84
F86 – F85, F86 700–03–00–84
F87 700–02–00–3
F88 – F88, F89, without autolamps 700–03–00–85
F88 – F88, F89, with autolamps 700–03–00–86
F89 – F88, F89, with autolamps 700–03–00–86
F90 – F90 700–03–00–87
F91 – F91, LHD 700–03–00–88
F91 – F91, RHD 700–03–00–89
F91 – F91 700–03–00–90
F92 – F92, before 01/2004 700–03–00–91
F92 – F92, as of 01/2004, with trailer socket, with parking aid 700–03–00–92
F93 – F93 700–03–00–93
F94 – F94 700–03–00–94
F95 – F95, F96 700–03–00–95
F96 – F95, F96 700–03–00–95
F97 – F97 700–03–00–96
F98 – F98 700–03–00–97
F99 – F99, 4–door model/5–door model 700–03–00–98
F99 – F99, wagon 700–03–00–99
F102 – F102, 3.0L Duratec–ST (VE6) 700–03–00–100
F200 – F74, as of 01/2004, F200, F201, with 13–pin trailer socket 700–03–00–74
F200 – F200, F201 700–03–00–101
F201 – F74, as of 01/2004, F201, with 7–pin trailer socket 700–03–00–73
F201 – F74, as of 01/2004, F200, F201, with 13–pin trailer socket 700–03–00–74
F201 – F200, F201 700–03–00–101
Fog lamp, LH side front, E43 – Fog lamps, without trailer socket, 4–door model/5–door model . . 417–01–00–44
Fog lamp, LH side front, E43 – Fog lamps, without trailer socket, wagon 417–01–00–47
Fog lamp, RH side front, E42 – Fog lamps, without trailer socket, 4–door model/5–door model . . 417–01–00–44
Fog lamp, RH side front, E42 – Fog lamps, without trailer socket, wagon 417–01–00–47
Footwell lamp, LH front, E61 417–02–00–3
Footwell lamp, RH front, E62 417–02–00–3
Front dome lamp, E63 417–02–00–2
Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4) 303–04B–00
Fuel Charging and Controls – 1.8L Duratec–SCi (MI4) 303–04A–00
Fuel Charging and Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–04E–00

Fuel Charging and Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel 303–04F–00
Fuel Charging and Controls – 2.5L Duratec–VE (VE6) 303–04C–00
Fuel Charging and Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–04D–00
Fuel control valve, Y190 – 1.8L Duratec–SCi (MI4) 303–14A–00–3
Fuel injector 1, Y108 – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
Fuel injector 1, Y108 – 1.8L Duratec–SCi (MI4) 303–04A–00–1
Fuel injector 1, Y108 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–04F–00–1
Fuel injector 1, Y108 – 2.5L Duratec–VE (VE6) 303–04C–00–1
Fuel injector 1, Y108 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–04D–00–1
Fuel injector 2, Y109 – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
Fuel injector 2, Y109 – 1.8L Duratec–SCi (MI4) 303–04A–00–1
Fuel injector 2, Y109 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–04F–00–1
Fuel injector 2, Y109 – 2.5L Duratec–VE (VE6) 303–04C–00–1
Fuel injector 2, Y109 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–04D–00–1
Fuel injector 3, Y110 – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
Fuel injector 3, Y110 – 1.8L Duratec–SCi (MI4) 303–04A–00–1
Fuel injector 3, Y110 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–04F–00–1
Fuel injector 3, Y110 – 2.5L Duratec–VE (VE6) 303–04C–00–1
Fuel injector 3, Y110 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–04D–00–1
Fuel injector 4, Y111 – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
Fuel injector 4, Y111 – 1.8L Duratec–SCi (MI4) 303–04A–00–1
Fuel injector 4, Y111 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–04F–00–1
Fuel injector 4, Y111 – 2.5L Duratec–VE (VE6) 303–04C–00–1
Fuel injector 4, Y111 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–04D–00–1
Fuel injector 5, Y112 – 2.5L Duratec–VE (VE6) 303–04C–00–1
Fuel injector 5, Y112 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–04D–00–1
Fuel injector 6, Y113 – 2.5L Duratec–VE (VE6) 303–04C–00–1
Fuel injector 6, Y113 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–04D–00–1
Fuel metering valve, Y165 – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV 303–14F–00–2
Fuel metering valve, Y165 – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III 303–14F–00–1
Fuel pump relay, K4 – 2.5L Duratec–VE (VE6) 303–14C–00–8
Fuel pump relay, K4 – 3.0L Duratec–SE (VE6) 303–14D–00–12
Fuel pump relay, K4 – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 303–14D–00–14
Fuel pump relay, K4 – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 303–14D–00–13
Fuel rail pressure transducer sensor, B225 – 1.8L Duratec–SCi (MI4) 303–14A–00–11
Fuel rail pressure transducer sensor, B225 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–9
Fuel tank unit, A31 413–01–00–2
Fuel temperature sensor, B109 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–9
Fuse and Relay Information 700–01–00
Fuse Details 700–03–00
Fuse holder 2, P46 – F200, F201 700–03–00–101
Fuse holder 2, P46 – F74, as of 01/2004, F200, F201, with 13–pin trailer socket 700–03–00–74
Fuse holder 2, P46 – F74, as of 01/2004, F201, with 7–pin trailer socket 700–03–00–73
Fuse holder 2, P46 – Trailer socket, with 13–pin trailer socket, as of 01/2004 417–01–00–52
Fuse holder 2, P46 – Trailer socket, with 7–pin trailer socket, as of 01/2004 417–01–00–51

Fuse holder, P44 – F200, F201 700–03–00–101
Fuse holder, P44 – F74, as of 01/2004, F200, F201, with 13–pin trailer socket 700–03–00–74
Fuse holder, P44 – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–39
Fuse holder, P44 – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004 417–01–00–43
G100 – G100, G101 700–04–00–1
G101 – G100, G101 700–04–00–1
G102 – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) 700–04–00–2
G102 – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) 700–04–00–3
G102 – G102, 3.0L Duratec–SE (VE6) 700–04–00–4
G102 – G102, Diesel engines 700–04–00–5
G103 – G103 700–04–00–6
G104 – G104 700–04–00–7
G104 – G104 700–04–00–8
G104 – G104 700–04–00–9
G105 – G105 700–04–00–10
G106 – G106, 1.8L Duratec–SCi (MI4), before 04/2004 700–04–00–11
G106 – G106, 1.8L Duratec–SCi (MI4), as of 04/2004 700–04–00–12
G106 – G106, 1.8/2.0L Duratec–HE (MI4) 700–04–00–13
G106 – G106, 2.5L Duratec–VE (VE6) 700–04–00–14
G106 – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 700–04–00–15
G106 – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 700–04–00–16
G106 – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 700–04–00–17
G106 – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 700–04–00–18
G107 – G107 700–04–00–19
G109 – G109 700–04–00–20
G200 – G200 700–04–00–21
G200 – G200 700–04–00–22
G200 – G200, LHD 700–04–00–23
G200 – G200, RHD 700–04–00–24
G200 – G200 700–04–00–25
G200 – G200 700–04–00–26
G200 – G200 700–04–00–27
G201 – G201, except DVD navigation system with touch screen, before 04/2004 700–04–00–28
G201 – G201, except DVD navigation system with touch screen, as of 04/2004 700–04–00–29
G201 – G201, with DVD navigation system with touch screen, before 04/2004 700–04–00–30
G202 – G202 700–04–00–31
G203 – G203 700–04–00–32
G204 – G204, before 04/2004 700–04–00–33
G204 – G204, as of 04/2004 700–04–00–34
G204 – G204, before 04/2004 700–04–00–35
G204 – G204, as of 04/2004 700–04–00–36
G205 – G205, LHD 700–04–00–37
G205 – G205, RHD 700–04–00–38
G205 – G205 700–04–00–39
G205 – G205 700–04–00–40
G300 – G300, 4–door model 700–04–00–41
G300 – G300, 5–door model/wagon 700–04–00–42

G300 – G300, without trailer socket, 4–door model/5–door model 700–04–00–43
G300 – G300, with trailer socket, 4–door model/5–door model, before 01/2004 700–04–00–44
G300 – G300, with trailer socket, 4–door model/5–door model, as of 01/2004 700–04–00–45
G300 – G300, without trailer socket, wagon 700–04–00–46
G300 – G300, with trailer socket, wagon, before 01/2004 700–04–00–47
G300 – G300, with trailer socket, wagon, as of 01/2004 700–04–00–48
G300 – G300 700–04–00–49
G301 – G301, 4–door model 700–04–00–50
G302 – Trailer socket, before 01/2004 417–01–00–50
G302 – Trailer socket, with 7–pin trailer socket, as of 01/2004 417–01–00–51
G302 – Trailer socket, with 13–pin trailer socket, as of 01/2004 417–01–00–52
G302 – Trailer socket, before 01/2004 417–01–00–53
G302 – G302, G303, before 01/2004 700–04–00–51
G303 – Trailer socket, before 01/2004 417–01–00–50
G303 – Trailer socket, with 7–pin trailer socket, as of 01/2004 417–01–00–51
G303 – Trailer socket, with 13–pin trailer socket, as of 01/2004 417–01–00–52
G303 – G302, G303, before 01/2004 700–04–00–51
G303 – G302, G303, as of 01/2004 700–04–00–52
G304 – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–30
G304 – Stop Lamps, with trailer socket, wagon, as of 01/2004 417–01–00–34
G304 – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–39
G304 – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004 417–01–00–43
G304 – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–46
G304 – Fog lamps, with trailer socket, wagon, as of 01/2004 417–01–00–49
G304 – Trailer socket, with 13–pin trailer socket, as of 01/2004 417–01–00–52
G304 – Trailer socket, before 01/2004 417–01–00–53
G304 – G304, with 7–pin trailer socket, as of 01/2004 700–04–00–53
G304 – G304, with 13–pin trailer socket, as of 01/2004 700–04–00–54
Gearshift lever unit, N93 – 4–speed automatic transmission (CD4E) 307–01A–00–1
Gearshift lever unit, N93 – 5–speed automatic transmission (5F31J) 307–01B–00–1
Generator and Regulator 414–02–00
Generator, O5 – 3.0L Duratec–SE (VE6) 414–02–00–2
Generator, O5 – 3.0L Duratec–ST (VE6) 414–02–00–3
Generator, O5 – Diesel engines 414–02–00–4
Generator, O5 – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) 414–02–00–1
Generic Electronic Module (GEM), A112 419–10–00–2
Generic Electronic Module (GEM), A112 419–10–00–3
Generic Electronic Module (GEM), A112 419–10–00–9
Glass, Frames and Mechanisms 501–11–00
Glove compartment lamp switch, N20 417–02–00–6
Glove compartment lamp, E28 417–02–00–6
Glow Plug System – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–07E–00
Glow Plug System – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel 303–07F–00
Glow plugs, P20 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–07E–00–1
Glow plugs, P20 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . 303–07F–00–1
GPS antenna, A153 – DVD navigation system with touch screen 419–07B–00–5
Ground Distribution 700–04–00
Handles, Locks, Latches and Entry Systems 501–14–00
Hazard flasher switch, N49 – Turn Signal and Hazard Lamps 417–01–00–13

Headlamp cleaning relay, K34 – With rear window wiper, with headlamp washer 501–16–00–6
Headlamp levelling sensor, front, B245 – Headlamp Levelling, with high intensity discharge headlamps 417–01–00–12
Headlamp levelling sensor, rear, B244 – Headlamp Levelling, with high intensity discharge headlamps 417–01–00–12
Headlamp washer pump motor, M246 – With rear window wiper, with headlamp washer 501–16–00–6
Headlamp washer pump motor, M246 – Without rear window wiper, with headlamp washer 501–16–00–4
Headlamp, LH side, E1 – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps 417–01–00–2
Headlamp, LH side, E1 – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps 417–01–00–1
Headlamp, LH side, E1 – Without high intensity discharge headlamps 417–04–00–1
Headlamp, RH side, E7 – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps 417–01–00–2
Headlamp, RH side, E7 – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps 417–01–00–1
Headlamp, RH side, E7 – Without high intensity discharge headlamps 417–04–00–1
Heated Exhaust Gas Oxygen (HEGO) sensor, B3 – 1.8L Duratec–SCi (MI4) 303–14A–00–7
Heated rear seats switch, N387 – with heated rear seats 501–10–00–8
Heated rear window relay, K1 700–02–00–2
Heated seat back, LH front, N31 – Heated front seats 501–10–00–4
Heated seat back, LH rear, N644 – with heated rear seats 501–10–00–8
Heated seat back, RH front, N32 – Heated front seats 501–10–00–5
Heated seat back, RH rear, N646 – with heated rear seats 501–10–00–8
Heated seat cushion, LH front, N29 – Heated front seats 501–10–00–4
Heated seat cushion, LH rear, N643 – with heated rear seats 501–10–00–8
Heated seat cushion, RH front, N30 – Heated front seats 501–10–00–5
Heated seat cushion, RH rear, N645 – with heated rear seats 501–10–00–8
Heated seat module, LH front, A371 – Heated front seats 501–10–00–4
Heated seat module, LH rear, A436 – with heated rear seats 501–10–00–8
Heated seat module, RH front, A372 – Heated front seats 501–10–00–5
Heated seat module, RH rear, A437 – with heated rear seats 501–10–00–8
Heated seat switch, N393 – Heated front seats 501–10–00–4
Heated seat switch, N393 – Heated front seats 501–10–00–5
Heated windshield timer relay, K40 700–02–00–8
Heated windshield timer relay, K40 – Heated windshield 501–11–00–7
Heated windshield/heated rear window switch, N263 – Heated rear window, Heated exterior mirrors 501–11–00–8
Heated windshield/heated rear window switch, N263 – Heated windshield 501–11–00–7
Heater/A/C control module, A300 412–03–00–5
High beam relay, K244 700–02–00–3
High beam relay, K244 – Headlamps, High beam, with high intensity discharge headlamps, without autolamps 417–01–00–8
High beam relay, K244 – Headlamps, High beam, without high intensity discharge headlamps, without autolamps 417–01–00–3
High intensity discharge headlamp calibration connector, D49 – Headlamps, Low beam, with high intensity discharge headlamps 417–01–00–7
High intensity discharge headlamp, LH side, E181 – Headlamps, Low beam, with high intensity discharge headlamps 417–01–00–7

High intensity discharge headlamp, LH side, E181 – With high intensity discharge headlamps 417–04–00–5
High intensity discharge headlamp, RH side, E182 – Headlamps, Low beam, with high intensity discharge headlamps 417–01–00–7
High intensity discharge headlamp, RH side, E182 – With high intensity discharge headlamps 417–04–00–5
High mounted stop lamp, E70 – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 417–01–00–28
High mounted stop lamp, E70 – Stop Lamps, with trailer socket, wagon, as of 01/2004 417–01–00–33
High mounted stop lamp, E70 – Stop Lamps, with trailer socket, wagon, before 01/2004 417–01–00–32
High mounted stop lamp, E70 – Stop Lamps, without trailer socket, 4–door model/5–door model 417–01–00–27
High mounted stop lamp, E70 – Stop Lamps, without trailer socket, wagon 417–01–00–31
High pitch horn, H3 413–06–00–1
High speed cooling fan relay, K46 – 1.8/2.0L Duratec–HE (MI4) 303–03B–00–1
High speed cooling fan relay, K46 – 1.8L Duratec–SCi (MI4) 303–03A–00–1
High speed cooling fan relay, K46 – 2.5L Duratec–VE (VE6),automatic transmission 303–03C–00–2
High speed cooling fan relay, K46 – 3.0L Duratec–ST (VE6) 303–03D–00–2
Horn 413–06–00
Horn relay, K33 – F26 700–03–00–18
Horn, H1 413–06–00–1
Idle speed control valve, Y13 – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
Idle speed control valve, Y13 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–1
Idle speed control valve, Y13 – 2.5L Duratec–VE (VE6) 303–04C–00–1
Idle speed control valve, Y13 – 2.5L Duratec–VE (VE6) 303–14C–00–1
Idle speed control valve, Y13 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–04D–00–1
Idle speed control valve, Y13 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–1
Ignition coil, cylinder 1, T6 – 1.8L Duratec–SCi (MI4) 303–07A–00–1
Ignition coil, cylinder 2, T7 – 1.8L Duratec–SCi (MI4) 303–07A–00–1
Ignition coil, cylinder 3, T8 – 1.8L Duratec–SCi (MI4) 303–07A–00–1
Ignition coil, cylinder 4, T9 – 1.8L Duratec–SCi (MI4) 303–07A–00–1
Ignition relay 2, K258 – Climate controlled front seats 501–10–00–7
Ignition relay 2, K258 – Heated front seats 501–10–00–5
Ignition relay, K41 700–02–00–1
Ignition switch, N278 – Ignition switch automatic transmission 700–02–00–10
Ignition switch, N278 – Ignition switch manual transmission 700–02–00–9
Ignition transformer capacitor, U1 – 1.8/2.0L Duratec–HE (MI4) 303–07B–00–1
Ignition transformer capacitor, U1 – 1.8L Duratec–SCi (MI4) 303–07A–00–1
Ignition transformer capacitor, U1 – 2.5L Duratec–VE (VE6) 303–07C–00–1
Ignition transformer capacitor, U1 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
Ignition transformer, T2 – 1.8/2.0L Duratec–HE (MI4) 303–07B–00–1
Ignition transformer, T2 – 2.5L Duratec–VE (VE6) 303–07C–00–1
Ignition transformer, T2 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
In–vehicle temperature sensor, LH side, B66 – with EATC, as of 04/2004 412–03–00–503
Index 100–00–02
Inertia Fuel Shutoff (IFS) switch, N316 413–01–00–2
Inertia Fuel Shutoff (IFS) switch, N316 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–10
Inertia Fuel Shutoff (IFS) switch, N316 – 1.8L Duratec–SCi (MI4) 303–14A–00–5
Inertia Fuel Shutoff (IFS) switch, N316 – 2.5L Duratec–VE (VE6) 303–14C–00–8
Inertia Fuel Shutoff (IFS) switch, N316 – 3.0L Duratec–SE (VE6) 303–14D–00–12
Inertia Fuel Shutoff (IFS) switch, N316 – 3.0L Duratec–ST (VE6), as of 04/2004 .... 303–14D–00–14
Inertia Fuel Shutoff (IFS) switch, N316 – 3.0L Duratec–ST (VE6), before 04/2004 .... 303–14D–00–13

Injection pump power (IPP) relay, K219 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–04E–00–1
Injector Driver Module (IDM), A313 – 1.8L Duratec–SCi (MI4) 303–04A–00–1
Instrument Cluster 413–01–00
Instrument Cluster and Panel Illumination 413–00–00
Instrument cluster, A30 413–01–00–1
Instrument Panel and Console 501–12–00
Intake Manifold Runner Control (IMRC) module, A149 – 2.5L Duratec–VE (VE6) 303–04C–00–2
Intake Manifold Runner Control (IMRC) module, A149 – 2.5L Duratec–VE (VE6) 303–14C–00–6
Intake Manifold Runner Control (IMRC) module, A149 – F40, 2.5L Duratec–VE (VE6) 700–03–00–33
Intake Manifold Runner Control (IMRC) module, A149 – G106, 2.5L Duratec–VE (VE6) 700–04–00–14
Interior Lighting 417–02–00
Intermediate Shaft Speed (ISS) sensor, B235 – 5–speed automatic transmission (5F31J) 307–01B–00–8
Introduction 100–00–03
Knock sensor 1, B105 – 1.8L Duratec–SCi (MI4) 303–14A–00–4
Knock sensor 2, B106 – 1.8L Duratec–SCi (MI4) 303–14A–00–4
Knock sensor, B45 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–7
Knock sensor, B45 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel .. 303–14F–00–9
Left front speaker, Y28 415–03–00–1
Left rear speaker, Y17 415–03–00–2
Licence plate lamp, LH side, E34 – Licence plate lamps 417–01–00–35
Licence plate lamp, RH side, E35 – Licence plate lamps 417–01–00–35
Low beam relay, K243 700–02–00–1
Low beam relay, K243 – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps 417–01–00–5
Low beam relay, K243 – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps 417–01–00–1
Low beam relay, K243 – Light switch, with daytime running lamps, with high intensity discharge headlamps 700–02–00–14
Low beam relay, K243 – Light switch, without daytime running lamps, with high intensity discharge headlamps 700–02–00–12
Low beam relay, K243 – With high intensity discharge headlamps 417–04–00–3
Low beam relay, K243 – Without high intensity discharge headlamps 417–04–00–1
Low cleaning water level switch, N89 413–01–00–2
Low pitch horn, H2 413–06–00–1
Luggage compartment lamp, E57 417–02–00–1
Main light switch, N113 – Headlamps, High beam, with high intensity discharge headlamps, with autolamps 417–01–00–9
Main light switch, N113 – Headlamps, High beam, with high intensity discharge headlamps, without autolamps 417–01–00–8
Main light switch, N113 – Headlamps, High beam, without high intensity discharge headlamps, with autolamps 417–01–00–4
Main light switch, N113 – Headlamps, High beam, without high intensity discharge headlamps, without autolamps 417–01–00–3
Main light switch, N113 – with high intensity discharge headlamps 417–04–00–4
Manifold Absolute Pressure (MAP) sensor, B2 – 1.8L Duratec–SCi (MI4) 303–14A–00–11
Mass Air Flow (MAF) sensor, B22 – 1.8L Duratec–SCi (MI4) 303–14A–00–6
Mass Air Flow (MAF) sensor, B22 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–3
Mass Air Flow (MAF) sensor, B22 – 2.5L Duratec–VE (VE6) 303–14C–00–2

Mass Air Flow (MAF) sensor, B22 – 3.0L Duratec–SE (VE6) 303–14D–00–2
Mass Air Flow (MAF) sensor, B22 – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 303–14D–00–4
Microphone, A164 – Bluetooth voice control 419–08B–00–2
Mobile phone speaker, Y153 – with external CD changer and/or video system 419–08A–00–2
Mobile phone speaker, Y153 – without external CD changer and video system 419–08A–00–1
Mobile telephone module, A177 – without external CD changer and video system 419–08A–00–1
Module Communications Network, Diagnostic 418–00B–00
Multifunction Electronic Control Modules 419–10–00
Multimedia control module, A306 – with DVD navigation system with touch screen 415–07–00–2
Multimedia control module, A306 – without DVD navigation system with touch screen 415–07–00–1
Navigation system main unit, A182 – DVD navigation system with touch screen 419–07B–00–5
Occupant Restraints – Active 501–20A–00
Occupant Restraints – Passive 501–20B–00
Oil pressure switch, N17 413–01–00–501
Panel/floor mode actuator, M250 412–03–00–5
Parking Aid – Bosch 413–13B–00
Parking Aid – Valeo 413–13A–00
Parking aid module resistor, R91 – Bosch 413–13B–00–3
Parking aid module, A265 – Bosch 413–13B–00–4
Parking aid module, A265 – Valeo 413–13A–00–6
Parking aid sensor, rear, inner left, B169 – Bosch 413–13B–00–4
Parking aid sensor, rear, inner left, B169 – Valeo 413–13A–00–6
Parking aid sensor, rear, inner right, B170 – Bosch 413–13B–00–4
Parking aid sensor, rear, inner right, B170 – Valeo 413–13A–00–6
Parking aid sensor, rear, outer left, B168 – Bosch 413–13B–00–4
Parking aid sensor, rear, outer left, B168 – Valeo 413–13A–00–6
Parking aid sensor, rear, outer right, B171 – Bosch 413–13B–00–4
Parking aid sensor, rear, outer right, B171 – Valeo 413–13A–00–6
Parking aid speaker, Y234 – Bosch 413–13B–00–3
Parking aid speaker, Y234 – Valeo 413–13A–00–5
Parking brake switch, N63 – as of 08/2004 413–01–00–5
Parking brake switch, N63 – before 08/2004 413–01–00–4
Passenger air bag unit, A43 – Passenger air bag 501–20B–00–3
Passenger safety belt retractor pretensioner, A226 . . . . . 501–20A–00–2
Passenger seat backrest motor, M234 – 8–way power seats 501–10–00–3
Passenger seat front height motor, M279 – 8–way power seats 501–10–00–3
Passenger seat height motor, M159 – 2–way power seats 501–10–00–1
Passenger seat horizontal motor, M232 – 8–way power seats 501–10–00–3
Passenger seat rear height motor, M280 – 8–way power seats 501–10–00–3
Passive anti–theft system transceiver module, A102 – Diesel engines 419–01B–00–2
Passive anti–theft system transceiver module, A102 – Petrol engines 419–01B–00–1
PCM module relay, K163 – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
PCM module relay, K163 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–1
PCM module relay, K163 – 1.8L Duratec–SCi (MI4) 303–04A–00–1
PCM module relay, K163 – 1.8L Duratec–SCi (MI4) 303–14A–00–3
PCM module relay, K163 – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 303–14A–00–2
PCM module relay, K163 – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 303–14A–00–1
PCM module relay, K163 – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV 303–14F–00–2

PCM module relay, K163 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–04F–00–1
PCM module relay, K163 – 2.5L Duratec–VE (VE6) 303–14C–00–1
PCM module relay, K163 – 3.0L Duratec–SE (VE6) 700–02–00–5
PCM module relay, K163 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–1
PCM module relay, K163 – Diesel engines 700–02–00–6
PCM module relay, K163 – Petrol engines, except 3.0L Duratec–SE (VE6) 700–02–00–4
Phone hand unit, A178 – Bluetooth voice control 419–08B–00–2
Power Distribution 700–02–00
Power mirror adjust switch, N70 501–09–00–1
Power mirror fold module, A148 501–09–00–1
Power mirror fold module, A148 – With power folding mirrors 501–09–00–2
Power point, RH side rear, D44 – Rear power point 501–12–00–2
Power steering pressure switch, N96 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–4
Power steering pressure switch, N96 – 1.8L Duratec–SCi (MI4) 303–14A–00–12
Power steering pressure switch, N96 – 2.5L Duratec–VE (VE6) 303–14C–00–5
Power steering pressure switch, N96 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–10
Powertrain control module (PCM), A147 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–1
Powertrain control module (PCM), A147 – 1.8L Duratec–SCi (MI4) 303–14A–00–8
Powertrain control module (PCM), A147 – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 303–14A–00–1
Powertrain control module (PCM), A147 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–1
Powertrain control module (PCM), A147 – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III 303–14F–00–1
Powertrain control module (PCM), A147 – 2.5L Duratec–VE (VE6) 303–04C–00–1
Powertrain control module (PCM), A147 – 2.5L Duratec–VE (VE6) 303–14C–00–1
Powertrain control module (PCM), A147 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . 303–04D–00–1
Powertrain control module (PCM), A147 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . 303–14D–00–1
Pre–catalyst exhaust gas temperature sensor, B187 – 1.8L Duratec–SCi (MI4) 303–14A–00–8
Pre–catalyst heated oxygen sensor (HO2S), B89 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–3
Pre–catalyst heated oxygen sensor (HO2S), LH, B47 – 2.5L Duratec–VE (VE6) 303–14C–00–3
Pre–catalyst heated oxygen sensor (HO2S), LH, B47 – 3.0L Duratec–SE (VE6) 303–14D–00–5
Pre–catalyst heated oxygen sensor (HO2S), LH, B47 – 3.0L Duratec–ST (VE6), as of 04/2004 . . 303–14D–00–7
Pre–catalyst heated oxygen sensor (HO2S), LH, B47 – 3.0L Duratec–ST (VE6), before 04/2004 . 303–14D–00–6
Pre–catalyst heated oxygen sensor (HO2S), RH, B48 – 2.5L Duratec–VE (VE6) 303–14C–00–3
Pre–catalyst heated oxygen sensor (HO2S), RH, B48 – 3.0L Duratec–SE (VE6) 303–14D–00–5
Pre–catalyst heated oxygen sensor (HO2S), RH, B48 – 3.0L Duratec–ST (VE6), as of 04/2004 . . 303–14D–00–7
Pre–catalyst heated oxygen sensor (HO2S), RH, B48 – 3.0L Duratec–ST (VE6), before 04/2004 . 303–14D–00–6
Pre–glow relay Diesel, K70 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–07E–00–1
Pre–glow relay Diesel, K70 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–07F–00–1
Primary brake pressure sensor, B140 – as of 08/2004 . . . . . 206–09C–00–6
Primary brake pressure sensor, B140 – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–5
Primary brake pressure sensor, B140 – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–4
Radio remote control switch, N214 . . . . . 419–07A–00–1
Radio remote control switch, N214 – Pre–equipment pack 415–01–00–1
Radio remote control switch, N214 – with external CD changer and/or video system 415–01–00–5
Radio remote control switch, N214 – without external CD changer and video system 415–01–00–4

Radio, A11 – with external CD changer and/or video system 415–01–00–5
Radio, A11 – without external CD changer and video system 415–01–00–4
Rain sensor module, A217 – with rain sensor 501–16–00–2
Rain sensor, B303 – with rain sensor 501–16–00–2
Rear dome lamp, E64 417–02–00–2
Rear fog lamp cutoff relay, K125 – Bosch, 4–door model/5–door model 413–13B–00–1
Rear fog lamp cutoff relay, K125 – Bosch, wagon 413–13B–00–2
Rear fog lamp cutoff relay, K125 – F92, as of 01/2004, with trailer socket, with parking aid 700–03–00–92
Rear fog lamp cutoff relay, K125 – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–46
Rear fog lamp cutoff relay, K125 – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 417–01–00–45
Rear fog lamp cutoff relay, K125 – Fog lamps, with trailer socket, wagon, as of 01/2004 417–01–00–49
Rear fog lamp cutoff relay, K125 – Fog lamps, with trailer socket, wagon, before 01/2004 417–01–00–48
Rear fog lamp cutoff relay, K125 – G300, with trailer socket, 4–door model/5–door model, before 01/2004 700–04–00–44
Rear fog lamp cutoff relay, K125 – G300, with trailer socket, wagon, before 01/2004 700–04–00–47
Rear fog lamp cutoff relay, K125 – G304, with 13–pin trailer socket, as of 01/2004 700–04–00–54
Rear fog lamp cutoff relay, K125 – G304, with 7–pin trailer socket, as of 01/2004 700–04–00–53
Rear fog lamp cutoff relay, K125 – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model 700–02–00–20
Rear fog lamp cutoff relay, K125 – Light switch, Fog lamps, with trailer socket, wagon 700–02–00–22
Rear fog lamp cutoff relay, K125 – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 413–13A–00–2
Rear fog lamp cutoff relay, K125 – Valeo, wagon, as of 01/2004 . . . . . 413–13A–00–4
Rear lamp assembly, LH side, E9 – Fog lamps, without trailer socket, 4–door model/5–door model 417–01–00–44
Rear lamp assembly, LH side, E9 – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps 417–01–00–20
Rear lamp assembly, LH side, E9 – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps 417–01–00–19
Rear lamp assembly, LH side, E9 – Parking Lamps, without trailer socket, wagon, without autolamps 417–01–00–23
Rear lamp assembly, LH side, E9 – Parking Lamps, without trailer socket, wagon, with autolamps 417–01–00–24
Rear lamp assembly, LH side, E9 – Reversing lamps, without trailer socket, 4–door model/5–door model 417–01–00–36
Rear lamp assembly, LH side, E9 – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–30
Rear lamp assembly, LH side, E9 – Stop Lamps, without trailer socket, 4–door model/5–door model 417–01–00–27
Rear lamp assembly, LH side, E9 – Stop Lamps, without trailer socket, wagon 417–01–00–31
Rear lamp assembly, LH side, E9 – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model 417–01–00–15
Rear lamp assembly, LH side, E9 – Turn Signal and Hazard Lamps, without trailer socket, wagon 417–01–00–17
Rear lamp assembly, LH side, E9 – without trailer socket, 4–door model/5–door model 417–04–00–6
Rear lamp assembly, RH side, E10 – Fog lamps, without trailer socket, 4–door model/5–door model 417–01–00–44
Rear lamp assembly, RH side, E10 – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps 417–01–00–20
Rear lamp assembly, RH side, E10 – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps 417–01–00–19

Rear lamp assembly, RH side, E10 – Parking Lamps, without trailer socket, wagon, with autolamps 417–01–00–24
Rear lamp assembly, RH side, E10 – Parking Lamps, without trailer socket, wagon, without autolamps 417–01–00–23
Rear lamp assembly, RH side, E10 – Reversing lamps, without trailer socket, 4–door model/5–door model 417–01–00–36
Rear lamp assembly, RH side, E10 – Stop Lamps, without trailer socket, 4–door model/5–door model 417–01–00–27
Rear lamp assembly, RH side, E10 – Stop Lamps, without trailer socket, wagon 417–01–00–31
Rear lamp assembly, RH side, E10 – Turn Signal and Hazard Lamps, without trailer socket, wagon 417–01–00–17
Rear lamp assembly, RH side, E10 – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model 417–01–00–15
Rear lamp assembly, RH side, E10 – without trailer socket, 4–door model/5–door model 417–04–00–6
Rear View Mirrors 501–09–00
Rear window heater, R19 – Heated rear window, Heated exterior mirrors 501–11–00–8
Rear window wiper motor, M9 – With rear window wiper 501–16–00–7
Rear window wiper relay, K64 700–02–00–24
Rear window wiper relay, K64 – With rear window wiper 501–16–00–7
Recirculation door motor, M92 412–03–00–4
Remote control antenna, A158 . . . . . 419–01A–00–1
Remote control antenna, A158 419–10–00–6
Restraints Control Module (RCM), A208 . . . . . 501–20B–00–1
Reversing lamp switch, N394 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–4
Reversing lamp switch, N394 – Bosch, wagon 413–13B–00–2
Reversing lamp switch, N394 – Petrol engines 419–07A–00–2
Reversing lamp switch, N394 – With rear window wiper 501–16–00–7
Reversing lamps relay, K273 – Diesel engines 419–07A–00–3
Reversing lamps relay, K273 – Petrol engines 419–07A–00–2
Right front speaker, Y18 415–03–00–1
Right rear speaker, Y19 415–03–00–2
Roof Opening Panel 501–17–00
Roof opening panel control switch, N230 – Diesel engines 501–17–00–2
Roof opening panel control switch, N230 – Petrol engines 501–17–00–1
Roof opening panel module, A26 – Diesel engines 501–17–00–2
Roof opening panel motor, M34 – Diesel engines 501–17–00–2
Roof opening panel motor, M34 – Petrol engines 501–17–00–1
S102 – G203 700–04–00–32
S110 – G204, before 04/2004 700–04–00–33
S110 – G204, as of 04/2004 700–04–00–34
S112 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–15
S112 413–07–00–1
S112 – Petrol engines 419–01B–00–1
S113 – Manual A/C, before 04/2004 412–03–00–6
S116 – G204, before 04/2004 700–04–00–35
S116 – G204, as of 04/2004 700–04–00–36
S120 – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–4

S120 – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–5
S120 – as of 08/2004 . . . . . 206–09C–00–6
S132 – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . 417–01–00–3
S132 – Headlamps, High beam, without high intensity discharge headlamps, with autolamps 417–01–00–4
S132 – Headlamps, High beam, with high intensity discharge headlamps, without autolamps 417–01–00–8
S132 – Headlamps, High beam, with high intensity discharge headlamps, with autolamps 417–01–00–9
S133 – without high intensity discharge headlamps 417–04–00–2
S133 – with high intensity discharge headlamps 417–04–00–4
S134 – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–4
S134 – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–5
S134 – as of 08/2004 . . . . . 206–09C–00–6
S137 – 5–speed automatic transmission (5F31J) 307–01B–00–2
S137 – Petrol engines, except 1.8L Duratec–SCi (MI4) 310–03–00–1
S137 – Diesel engines 310–03–00–9
S137 – F82, Petrol engines 700–03–00–81
S137 – F82, Diesel engines 700–03–00–82
S142 – 1.8L Duratec–SCi (MI4) 303–07A–00–1
S142 – 1.8/2.0L Duratec–HE (MI4) 303–07B–00–1
S142 – Ignition switch manual transmission 700–02–00–9
S142 – Ignition switch automatic transmission 700–02–00–10
S145 – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps 417–01–00–6
S145 – Autolamps 417–01–00–10
S147 – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps 417–01–00–2
S147 – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps 417–01–00–6
S153 – 5–speed automatic transmission (5F31J) 307–01B–00–2
S153 – F75, 5–speed automatic transmission (5F31J) 700–03–00–76
S167 – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps 417–01–00–20
S167 – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps 417–01–00–22
S167 – Parking Lamps, without trailer socket, wagon, with autolamps 417–01–00–24
S167 – Parking Lamps, with trailer socket, wagon, with autolamps 417–01–00–26
S167 – Light switch, with autolamps 700–02–00–18
S169 – Autolamps 417–01–00–10
S169 – Light switch, with autolamps 700–02–00–18
S169 – F20, F21 700–03–00–14
S172 413–00–00–1
S174 – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 418–00B–00–10
S174 – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 418–00B–00–11
S174 – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 418–00B–00–12
S174 – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 418–00B–00–13
S176 – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 418–00B–00–10
S176 – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 418–00B–00–11
S176 – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 418–00B–00–12

S176 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission,
except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 418–00B–00–13
S178 – Data link connector, pin 7 . . . . . 418–00B–00–2
S180 – EATC 412–03–00–10
S183 – with rain sensor 501–16–00–2
S184 – DVD navigation system with touch screen 419–07B–00–1
S184 – with external CD changer and/or video system 419–08A–00–2
S184 – F69, with external CD changer and/or video system 700–03–00–63
S185 – Without rear window wiper, without headlamp washer 501–16–00–3
S185 – With rear window wiper, without headlamp washer 501–16–00–5
S190 – Data link connector, pins 3 and 11, without external CD changer and video system 418–00B–00–6
S192 – Data link connector, pins 3 and 11, without external CD changer and video system 418–00B–00–6
S192 – Data link connector, pins 3 and 11, with external CD changer or video system 418–00B–00–7
S194 – Data link connector, pins 3 and 11, without external CD changer and video system 418–00B–00–6
S194 – Data link connector, pins 3 and 11, with external CD changer or video system 418–00B–00–7
S201 – G202 700–04–00–31
S210 417–02–00–3
S211 – Trailer socket, with 7–pin trailer socket, as of 01/2004 417–01–00–51
S211 – Trailer socket, with 13–pin trailer socket, as of 01/2004 417–01–00–52
S211 – G300, without trailer socket, 4–door model/5–door model 700–04–00–43
S211 – G300, with trailer socket, 4–door model/5–door model, before 01/2004 700–04–00–44
S211 – G300, without trailer socket, wagon 700–04–00–46
S211 – G300, with trailer socket, wagon, before 01/2004 700–04–00–47
S211 – G300 700–04–00–49
S212 – 2–way power seats 501–10–00–1
S215 – G205 700–04–00–40
S231 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–10
S231 – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 303–14D–00–14
S232 – 4–speed automatic transmission (CD4E), wagon 307–01A–00–3
S232 – Reversing lamps, without trailer socket, 4–door model/5–door model 417–01–00–36
S232 – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 417–01–00–37
S232 – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–38
S232 – Reversing lamps, without trailer socket, wagon 417–01–00–40
S232 – Reversing lamps, with trailer socket, wagon, before 01/2004 417–01–00–41
S236 – Climate controlled front seats 501–10–00–7
S238 – with heated rear seats 501–10–00–8
S238 – F83 700–03–00–83
S250 – 2–way power seats 501–10–00–1
S250 – F65, F66 700–03–00–54
S252 – F99, 4–door model/5–door model 700–03–00–98
S252 – F99, wagon 700–03–00–99
S270 – Front power windows, Passenger side 501–11–00–2
S272 501–14–00–2
S274 501–14–00–2
S276 501–14–00–2
S278 – Climate controlled front seats 501–10–00–7
S280 – with heated rear seats 501–10–00–8
S301 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–04F–00–1

S301 – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV 303–14F–00–2
S301 – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 700–04–00–17
S301 – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 700–04–00–18
S311 – G104 700–04–00–9
S315 – G104 700–04–00–7
S315 – G104 700–04–00–8
S317 – G105 700–04–00–10
S331 – Heated windshield 501–11–00–7
S332 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–04F–00–1
S333 – Diesel engines, with fuel fired heater 412–02B–00–2
S333 – Diesel engines 414–02–00–5
S334 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–04F–00–1
S335 – F93 700–03–00–93
S337 – Diesel engines, With electric coolant heater, before 12/2003 . . . . . 412–02B–00–1
S339 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–04F–00–1
S343 – F42, 3.0L Duratec–SE (VE6) 700–03–00–41
S343 – F42, 3.0L Duratec–ST (VE6), before 04/2004 700–03–00–42
S344 – 5–speed automatic transmission (5F31J), Petrol engines 307–01B–00–6
S346 – 5–speed automatic transmission (5F31J), 4–door model/5–door model 307–01B–00–3
S346 – F17 700–03–00–12
S347 – F67, 3.0L Duratec–SE (VE6) 700–03–00–58
S347 – F67, 3.0L Duratec–ST (VE6) 700–03–00–59
S349 – with rain sensor 501–16–00–2
S349 700–02–00–24
S349 – F94 700–03–00–94
S361 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 303–14E–00–3
S361 – F3, before 12/2003 700–03–00–2
S369 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–10
S371 – Turn Signal and Hazard Lamps 417–01–00–14
S373 – Turn Signal and Hazard Lamps 417–01–00–14
S377 – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 418–00B–00–10
S377 – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 418–00B–00–11
S377 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 418–00B–00–12
S377 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission,
except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 418–00B–00–13
S378 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–10
S379 – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 418–00B–00–10
S379 – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 418–00B–00–11
S379 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 418–00B–00–12
S379 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission,
except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 418–00B–00–13
S380 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–14
S380 – 2.5L Duratec–VE (VE6) 303–14C–00–12
S380 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–19
S380 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–11

S380 – Diesel engines 310–03–00–11
S381 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–5
S383 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–6
S385 – Data link connector, pin 7 . . . . . 418–00B–00–2
S387 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 418–00B–00–12
S387 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission,
except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 418–00B–00–13
S389 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 418–00B–00–12
S389 – Data link connector, pins 6 and 14, Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission,
except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 418–00B–00–13
S390 – 5–speed automatic transmission (5F31J) 307–01B–00–5
S395 – 5–speed automatic transmission (5F31J) 307–01B–00–8
S397 – 5–speed automatic transmission (5F31J) 307–01B–00–8
S399 – 5–speed automatic transmission (5F31J) 307–01B–00–8
S401 – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 303–14A–00–1
S401 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–1
S401 – G106, 1.8L Duratec–SCi (MI4), as of 04/2004 700–04–00–12
S401 – G106, 1.8/2.0L Duratec–HE (MI4) 700–04–00–13
S401 – G106, 2.5L Duratec–VE (VE6) 700–04–00–14
S401 – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 700–04–00–15
S403 – 1.8L Duratec–SCi (MI4) 303–07A–00–1
S403 – G106, 1.8L Duratec–SCi (MI4), before 04/2004 700–04–00–11
S403 – G106, 1.8L Duratec–SCi (MI4), as of 04/2004 700–04–00–12
S405 – 1.8L Duratec–SCi (MI4) 303–14A–00–3
S409 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–3
S411 – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) 700–04–00–2
S411 – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) 700–04–00–3
S411 – G102, 3.0L Duratec–SE (VE6) 700–04–00–4
S411 – G102, Diesel engines 700–04–00–5
S431 – 1.8L Duratec–SCi (MI4) 303–03A–00–1
S431 – 2.5L Duratec–VE (VE6),automatic transmission 303–03C–00–2
S433 – 1.8L Duratec–SCi (MI4) 303–03A–00–1
S433 – 2.5L Duratec–VE (VE6),automatic transmission 303–03C–00–2
S435 – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
S435 – 2.5L Duratec–VE (VE6) 303–14C–00–1
S435 – F40, 1.8L Duratec–SCi (MI4) 700–03–00–31
S435 – F40, 1.8/2.0L Duratec–HE (MI4) 700–03–00–32
S437 – Petrol engines, except 1.8L Duratec–SCi (MI4) 412–03–00–1
S437 – Diesel engines 412–03–00–3
S437 – Petrol engines, except 3.0L Duratec–SE (VE6) 700–02–00–4
S437 – 3.0L Duratec–SE (VE6) 700–02–00–5
S437 – Diesel engines 700–02–00–6
S439 – F42, 1.8L Duratec–SCi (MI4) 700–03–00–37
S439 – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission 700–03–00–38
S439 – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission 700–03–00–39

-25

S439 – F42, 2.5L Duratec–VE (VE6) 700–03–00–40
S439 – F42, 3.0L Duratec–SE (VE6) 700–03–00–41
S439 – F42, 3.0L Duratec–ST (VE6), before 04/2004 700–03–00–42
S441 – 1.8L Duratec–SCi (MI4), before 04/2004 310–03–00–5
S441 – 1.8L Duratec–SCi (MI4), as of 04/2004 310–03–00–6
S441 – F67, 1.8L Duratec–SCi (MI4) 700–03–00–55
S441 – F67, 1.8/2.0L Duratec–HE (MI4) 700–03–00–56
S443 – F37, 2.5L Duratec–VE (VE6) 700–03–00–27
S443 – F37, 3.0L Duratec–SE (VE6) 700–03–00–28
S443 – F37, 3.0L Duratec–ST (VE6), before 04/2004 700–03–00–29
S443 – F37, 3.0L Duratec–ST (VE6), as of 04/2004 700–03–00–30
S447 – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III 303–14F–00–1
S447 – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV 303–14F–00–2
S461 – 1.8L Duratec–SCi (MI4) 303–03A–00–1
S461 – 2.5L Duratec–VE (VE6),automatic transmission 303–03C–00–2
S461 – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) 700–03–00–5
S461 – F8, Diesel engines 700–03–00–7
S461 – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) 700–03–00–9
S471 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–2
S473 – Ignition switch manual transmission 700–02–00–9
S475 – 1.8L Duratec–SCi (MI4) 303–14A–00–12
S477 – 1.8L Duratec–SCi (MI4) 303–14A–00–11
S479 – 1.8/2.0L Duratec–HE (MI4), automatic transmission 303–14B–00–9
S481 – 1.8L Duratec–SCi (MI4) 303–14A–00–12
S483 – 2.5L Duratec–VE (VE6) 303–07C–00–1
S483 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
S483 – 1.8L Duratec–SCi (MI4) 303–14A–00–8
S483 – 2.5L Duratec–VE (VE6) 303–14C–00–7
S483 – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 700–04–00–16
S485 – 2.5L Duratec–VE (VE6) 303–14C–00–7
S485 – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 700–04–00–16
S487 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–7
S487 – G106, 1.8/2.0L Duratec–HE (MI4) 700–04–00–13
S489 – 1.8/2.0L Duratec–HE (MI4) 303–07B–00–1
S489 – 2.5L Duratec–VE (VE6) 303–07C–00–1
S489 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
S491 – 1.8/2.0L Duratec–HE (MI4) 303–07B–00–1
S491 – 2.5L Duratec–VE (VE6) 303–07C–00–1
S491 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
S493 – 2.5L Duratec–VE (VE6) 303–07C–00–1
S493 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
S495 – 1.8L Duratec–SCi (MI4) 303–14A–00–6
S497 – 1.8L Duratec–SCi (MI4) 303–14A–00–9
S499 – 1.8L Duratec–SCi (MI4) 303–14A–00–8
S510 – Front power windows, Passenger side 501–11–00–2
S510 – front and rear power windows, Passenger side front 501–11–00–4
S512 – Front power windows, Passenger side 501–11–00–2
S512 – front and rear power windows, Passenger side front 501–11–00–4

S514 – Front power windows, Passenger side 501–11–00–2
S514 – front and rear power windows, Passenger side front 501–11–00–4
S516 – Front power windows, Driver side 501–11–00–1
S516 – front and rear power windows, Driver side front 501–11–00–3
S516 – G200, LHD 700–04–00–23
S516 – G205, RHD 700–04–00–38
S518 . . . . . 419–01A–00–3
S518 – G300, 5–door model/wagon 700–04–00–42
S520 – G300, 4–door model 700–04–00–41
S530 – Front power windows, Passenger side 501–11–00–2
S530 – front and rear power windows, Passenger side front 501–11–00–4
S530 – F91, LHD 700–03–00–88
S530 – F91, RHD 700–03–00–89
S532 – Front power windows, Driver side 501–11–00–1
S532 – front and rear power windows, Driver side front 501–11–00–3
S532 – F91, LHD 700–03–00–88
S532 – F91, RHD 700–03–00–89
S601 – 2.5L Duratec–VE (VE6) 303–07C–00–1
S601 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
S601 – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 700–04–00–16
S631 – 2.5L Duratec–VE (VE6) 303–04C–00–1
S631 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–04D–00–1
S631 – F40, 2.5L Duratec–VE (VE6) 700–03–00–33
S631 – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 700–03–00–34
S633 – 2.5L Duratec–VE (VE6) 303–04C–00–1
S633 – 2.5L Duratec–VE (VE6) 303–14C–00–6
S633 – F40, 2.5L Duratec–VE (VE6) 700–03–00–33
S635 – F67, 2.5L Duratec–VE (VE6) 700–03–00–57
S635 – F67, 3.0L Duratec–SE (VE6) 700–03–00–58
S635 – F67, 3.0L Duratec–ST (VE6) 700–03–00–59
S637 – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
S671 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–6
S675 – 2.5L Duratec–VE (VE6),manual transmission 303–03C–00–1
S675 – 3.0L Duratec–ST (VE6) 303–03D–00–2
S675 – 2.5L Duratec–VE (VE6) 303–14C–00–6
S675 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–10
S679 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–9
S681 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–9
S687 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–10
S689 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–10
S704 – DVD navigation system with touch screen 419–07B–00–1
S704 – G201, with DVD navigation system with touch screen, before 04/2004 700–04–00–30
S709 – G201, with DVD navigation system with touch screen, before 04/2004 700–04–00–30
S710 417–02–00–4
S710 – G200 700–04–00–22
S712 – G300, without trailer socket, wagon 700–04–00–46
S712 – G300, with trailer socket, wagon, before 01/2004 700–04–00–47
S712 – G300, with trailer socket, wagon, as of 01/2004 700–04–00–48
S713 – G205 700–04–00–40

S714 413–00–00–2
S718 – with video system 415–01–00–9
S718 – DVD navigation system with touch screen, – with video system 419–07B–00–7
S720 – with external CD changer 415–01–00–7
S720 . . . . . 419–07A–00–5
S720 – DVD navigation system with touch screen 419–07B–00–6
S722 – with external CD changer 415–01–00–7
S722 – with video system 415–01–00–9
S722 . . . . . 419–07A–00–5
S724 – DVD navigation system with touch screen 419–07B–00–5
S726 – with video system 415–01–00–9
S726 – DVD navigation system with touch screen, – with video system 419–07B–00–7
S728 – DVD navigation system with touch screen, – with video system 419–07B–00–7
S732 – F91 700–03–00–90
S733 – Fog lamps, without trailer socket, wagon 417–01–00–47
S733 – Fog lamps, with trailer socket, wagon, before 01/2004 417–01–00–48
S733 – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model 700–02–00–19
S733 – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model 700–02–00–20
S733 – Light switch, Fog lamps, with trailer socket, wagon 700–02–00–22
S734 – Fog lamps, without trailer socket, wagon 417–01–00–47
S750 – F99, 4–door model/5–door model 700–03–00–98
S750 – F99, wagon 700–03–00–99
S754 – DVD navigation system with touch screen 419–07B–00–1
S754 – F72, with external CD changer and/or video system 700–03–00–70
S770 – with video system 415–01–00–8
S770 – Data link connector, pins 3 and 11, with external CD changer and video system 418–00B–00–8
S772 – with video system 415–01–00–8
S772 – Data link connector, pins 3 and 11, with external CD changer or video system 418–00B–00–7
S772 – Data link connector, pins 3 and 11, with external CD changer and video system 418–00B–00–8
S774 – Data link connector, pins 3 and 11, with external CD changer and video system 418–00B–00–8
S774 – DVD navigation system with touch screen 419–07B–00–8
S776 – Data link connector, pins 3 and 11, with external CD changer and video system 418–00B–00–8
S776 – DVD navigation system with touch screen 419–07B–00–8
S778 – with external CD changer 415–01–00–6
S778 – Data link connector, pins 3 and 11, with external CD changer and video system 418–00B–00–8
S778 . . . . . 419–07A–00–4
S778 – DVD navigation system with touch screen 419–07B–00–8
S780 – with external CD changer 415–01–00–6
S780 – Data link connector, pins 3 and 11, with external CD changer or video system 418–00B–00–7
S780 – Data link connector, pins 3 and 11, with external CD changer and video system 418–00B–00–8
S780 . . . . . 419–07A–00–4
S782 – DVD navigation system with touch screen 419–07B–00–5
S784 – DVD navigation system with touch screen 419–07B–00–5
S786 – with external CD changer 415–01–00–7
S786 – with video system 415–01–00–9
S786 – DVD navigation system with touch screen, – with video system 419–07B–00–7
S802 – Bluetooth voice control 415–01–00–10
S804 415–07–00–3
S810 – Trailer socket, before 01/2004 417–01–00–50

S810 – Trailer socket, with 7–pin trailer socket, as of 01/2004 417–01–00–51
S810 – Trailer socket, with 13–pin trailer socket, as of 01/2004 417–01–00–52
S810 – F74, before 01/2004 700–03–00–72
S810 – F74, as of 01/2004, F201, with 7–pin trailer socket 700–03–00–73
S810 – F74, as of 01/2004, F200, F201, with 13–pin trailer socket 700–03–00–74
S811 – Trailer socket, before 01/2004 417–01–00–50
S811 – G300, with trailer socket, 4–door model/5–door model, before 01/2004 700–04–00–44
S811 – G300, with trailer socket, 4–door model/5–door model, as of 01/2004 700–04–00–45
S811 – G300, with trailer socket, wagon, before 01/2004 700–04–00–47
S815 – Valeo 413–13A–00–6
S816 – Valeo 413–13A–00–6
S850 – DVD navigation system with touch screen 419–07B–00–1
S850 – F72, with external CD changer and/or video system 700–03–00–70
S872 – DVD navigation system with touch screen 419–07B–00–3
S874 – Data link connector, pins 3 and 11, with voice control 418–00B–00–9
S874 – Bluetooth voice control 419–08B–00–1
S876 – Data link connector, pins 3 and 11, with voice control 418–00B–00–9
S876 – Bluetooth voice control 419–08B–00–1
S911 – 1.8L Duratec–SCi (MI4) 303–07A–00–1
S911 – G109 700–04–00–20
S931 – Reversing lamps, without trailer socket, 4–door model/5–door model 417–01–00–36
S933 – Reversing lamps, without trailer socket, 4–door model/5–door model 417–01–00–36
S935 – F37, 1.8L Duratec–SCi (MI4) 700–03–00–25
S936 – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–30
S936 – Stop Lamps, with trailer socket, wagon, as of 01/2004 417–01–00–34
S936 – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–39
S936 – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004 417–01–00–43
S936 – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–46
S936 – Fog lamps, with trailer socket, wagon, as of 01/2004 417–01–00–49
S936 – G304, with 13–pin trailer socket, as of 01/2004 700–04–00–54
S1006 – with rain sensor 501–16–00–2
S1006 700–02–00–23
S1007 – with heated rear seats 501–10–00–8
S1008 – with heated rear seats 501–10–00–8
S1009 – Data link connector, pins 3 and 11, without external CD changer and video system 418–00B–00–6
S1010 – Heated front seats 501–10–00–4
S1010 – Climate controlled front seats 501–10–00–6
S1011 – Heated front seats 501–10–00–5
S1011 – Climate controlled front seats 501–10–00–7
S1012 – Heated front seats 501–10–00–4
S1012 – Climate controlled front seats 501–10–00–6
S1013 – Heated front seats 501–10–00–5
S1013 – Climate controlled front seats 501–10–00–7
S1014 – G200 700–04–00–26
S1015 – G205 700–04–00–39
S1016 – Climate controlled front seats 501–10–00–6
S1016 – G200 700–04–00–26
S1017 – Climate controlled front seats 501–10–00–7
S1018 – G200 700–04–00–26

S1019 – Heated front seats 501–10–00–5
S1020 – Climate controlled front seats 501–10–00–6
S1021 – Climate controlled front seats 501–10–00–7
S1022 – Climate controlled front seats 501–10–00–6
S1022 – G200 700–04–00–26
S1023 – Climate controlled front seats 501–10–00–7
S1024 – Climate controlled front seats 501–10–00–6
S1025 – Climate controlled front seats 501–10–00–7
S1026 – Climate controlled front seats 501–10–00–6
S1026 – G200 700–04–00–26
S1027 – Climate controlled front seats 501–10–00–7
S1028 – Bosch 413–13B–00–4
S1028 – F92, as of 01/2004, with trailer socket, with parking aid 700–03–00–92
S1029 – Bosch 413–13B–00–4
Safety belt buckle switch, driver, N466 413–09–00–6
Safety belt buckle switch, driver, N466 . . . . . 501–20A–00–2
Seat back fan 1, LH front, M169 – Climate controlled front seats 501–10–00–6
Seat back fan 1, RH front, M173 – Climate controlled front seats 501–10–00–7
Seat back fan 2, LH front, M170 – Climate controlled front seats 501–10–00–6
Seat back fan 2, RH front, M174 – Climate controlled front seats 501–10–00–7
Seat control switch, driver, N242 – 2–way power seats 501–10–00–1
Seat control switch, driver, N242 – 8–way power seats 501–10–00–2
Seat control switch, passenger, N243 – 2–way power seats 501–10–00–1
Seat control switch, passenger, N243 – 8–way power seats 501–10–00–3
Seat cushion fan 1, LH front, M167 – Climate controlled front seats 501–10–00–6
Seat cushion fan 1, RH front, M171 – Climate controlled front seats 501–10–00–7
Seat cushion fan 2, LH front, M168 – Climate controlled front seats 501–10–00–6
Seat cushion fan 2, RH front, M172 – Climate controlled front seats 501–10–00–7
Seating 501–10–00
Second cooling fan motor, M38 – 2.5L Duratec–VE (VE6),automatic transmission 303–03C–00–2
Second cooling fan motor, M38 – 3.0L Duratec–ST (VE6) 303–03D–00–2
Side air bag module, driver, A242 – Side air bag 501–20B–00–5
Side air bag module, passenger, A245 – Side air bag 501–20B–00–5
Side air bag sensor, driver, B238 – Side air bag 501–20B–00–6
Side air bag sensor, passenger, B239 – Side air bag 501–20B–00–6
Side head air bag module, driver, A326 – with side head air bags 501–20B–00–4
Side head air bag module, passenger, A327 – with side head air bags 501–20B–00–4
Spark plugs, P136 – 2.5L Duratec–VE (VE6) 303–07C–00–1
Spark plugs, P136 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–07D–00–1
Speakers 415–03–00
Speed control module, A27 – Petrol engines 413–01–00–6
Starter motor, M8 303–06–00–1
Starter motor, M8 . . . . . 419–01B–00–3
Starter relay, K22 303–06–00–1
Starter relay, K22 . . . . . 419–01B–00–3
Starting System 303–06–00
Steering position sensor, B36 – as of 08/2004 . . . . . 206–09C–00–6
Steering position sensor, B36 – Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–5

Steering position sensor, B36 – Petrol engines,
2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–4
Steering wheel/speed control switch, N78 – 1.8L Duratec–SCi (MI4), as of 04/2004 310–03–00–6
Steering wheel/speed control switch, N78 – Diesel engines 310–03–00–9
Steering wheel/speed control switch, N78 – Petrol engines, except 1.8L Duratec–SCi (MI4) 310–03–00–1
Stop lamp switch, N15 . . . . . 206–09C–00–1
Stop lamp switch, N15 – 1.8L Duratec–SCi (MI4) 303–14A–00–12
Stop lamp switch, N15 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–8
Stop lamp switch, N15 – 2.2L Duratorq–TDCi (Puma) Diesel,
2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–6
Stop lamp switch, N15 – 2.5L Duratec–VE (VE6) 303–14C–00–7
Stop lamp switch, N15 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–11
Stop lamp switch, N15 – 5–speed automatic transmission (5F31J) 307–01B–00–1
Stop lamp switch, N15 – 5–speed automatic transmission (5F31J), Diesel engines 307–01B–00–7
Stop lamp switch, N15 – before 08/2004 . . . . . 206–09A–00–1
Stop lamp switch, N15 – Petrol engines, except 1.8L Duratec–SCi (MI4) 310–03–00–2
Stop lamp switch, N15 – Stop Lamps, with trailer socket, 4–door model/5–door model,
as of 01/2004 417–01–00–29
Stop lamp switch, N15 – Stop Lamps, with trailer socket, 4–door model/5–door model,
before 01/2004 417–01–00–28
Stop lamp switch, N15 – Stop Lamps, with trailer socket, wagon, as of 01/2004 417–01–00–33
Stop lamp switch, N15 – Stop Lamps, with trailer socket, wagon, before 01/2004 417–01–00–32
Stop lamp switch, N15 – Stop Lamps, without trailer socket, 4–door model/5–door model 417–01–00–27
Stop lamp switch, N15 – Stop Lamps, without trailer socket, wagon 417–01–00–31
Sunload sensor, B72 – with EATC, as of 04/2004 412–03–00–503
Swirl plate position sensor, B197 – 1.8L Duratec–SCi (MI4) 303–14A–00–6
Swirl plate solenoid valve, Y160 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–2
Swirl plate solenoid valve, Y160 – 1.8L Duratec–SCi (MI4) 303–14A–00–5
Switch interface (SI) module, trailer, A311 – F74, as of 01/2004, F200, F201,
with 13–pin trailer socket 700–03–00–74
Switch interface (SI) module, trailer, A311 – F74, as of 01/2004, F201, with 7–pin trailer socket . 700–03–00–73
Switch interface (SI) module, trailer, A311 – F74, before 01/2004 700–03–00–72
Switch interface (SI) module, trailer, A311 – G300, with trailer socket, 4–door model/5–door model,
as of 01/2004 700–04–00–45
Switch interface (SI) module, trailer, A311 – G300, with trailer socket, 4–door model/5–door model,
before 01/2004 700–04–00–44
Switch interface (SI) module, trailer, A311 – G300, with trailer socket, wagon, as of 01/2004 700–04–00–48
Switch interface (SI) module, trailer, A311 – G300, with trailer socket, wagon, before 01/2004 . . 700–04–00–47
Switch interface (SI) module, trailer, A311 – Stop Lamps, with trailer socket,
4–door model/5–door model, as of 01/2004 417–01–00–30
Switch interface (SI) module, trailer, A311 – Stop Lamps, with trailer socket,
4–door model/5–door model, before 01/2004 417–01–00–28
Switch interface (SI) module, trailer, A311 – Stop Lamps, with trailer socket,
wagon, as of 01/2004 417–01–00–34
Switch interface (SI) module, trailer, A311 – Stop Lamps, with trailer socket,
wagon, before 01/2004 417–01–00–32
Switch interface (SI) module, trailer, A311 – Trailer socket, before 01/2004 417–01–00–50
Switch interface (SI) module, trailer, A311 – Trailer socket, with 13–pin trailer socket,
as of 01/2004 417–01–00–52


Switch interface (SI) module, trailer, A311 – Trailer socket, with 7–pin trailer socket, as of 01/2004 417–01–00–51
Switch interface (SI) module, trailer, A311 – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model 417–01–00–16
Switch interface (SI) module, trailer, A311 – Turn Signal and Hazard Lamps, with trailer socket, wagon 417–01–00–18
Symbols 100–00–04
Systems Overview 100–00–01
Table of Contents 100–00–00
Tailgate exterior release switch, N356 . . . . . 419–01A–00–3
Tailgate exterior release switch, N356 501–14–00–4
Tailgate/decklid anti–theft inhibit switch, N98 . . . . . 419–01A–00–3
Tailgate/decklid motor, M39 . . . . . 419–01A–00–3
Tailgate/decklid motor, M39 501–14–00–4
Temperature manifold absolute pressure sensor, B142 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–2
Temperature manifold absolute pressure sensor, B142 – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP 303–14E–00–5
Temperature manifold absolute pressure sensor, B142 – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 303–14F–00–3
Thermo switch, outside air temperature, N289 – Diesel engines, with fuel fired heater 412–02B–00–2
Thermo switch, outside air temperature, N289 – Diesel engines, with fuel fired heater, as of 08/2004 . . . . . 412–02B–00–3
Throttle Position Sensor (TPS), B8 – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–2
Throttle Position Sensor (TPS), B8 – 2.5L Duratec–VE (VE6) 303–14C–00–5
Throttle Position Sensor (TPS), B8 – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 303–14D–00–10
Tiptronic module, A360 – 5–speed automatic transmission (5F31J) 307–01B–00–1
Touch screen, A363 – DVD navigation system with touch screen 419–07B–00–5
Trailer interface (TI) module, A310 – Valeo, wagon, before 01/2004 . . . . . 413–13A–00–3
Trailer socket, D41 – Trailer socket, before 01/2004 417–01–00–50
Trailer socket, D41 – Trailer socket, with 7–pin trailer socket, as of 01/2004 417–01–00–51
Trailer tow relay, reversing lamp, K357 – F200, F201 700–03–00–101
Trailer tow relay, reversing lamp, K357 – F74, as of 01/2004, F200, F201, with 13–pin trailer socket 700–03–00–74
Trailer tow relay, reversing lamp, K357 – G304, with 13–pin trailer socket, as of 01/2004 700–04–00–54
Trailer tow relay, reversing lamp, K357 – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–39
Trailer tow relay, reversing lamp, K357 – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004 417–01–00–43
Trailer tow relay, reversing lamp, K357 – Trailer socket, with 13–pin trailer socket, as of 01/2004 417–01–00–52
Trailer tow relay, stop lamp, K526 – F200, F201 700–03–00–101
Trailer tow relay, stop lamp, K526 – F74, as of 01/2004, F200, F201, with 13–pin trailer socket . . 700–03–00–74
Trailer tow relay, stop lamp, K526 – F74, as of 01/2004, F201, with 7–pin trailer socket 700–03–00–73
Trailer tow relay, stop lamp, K526 – G304, with 13–pin trailer socket, as of 01/2004 700–04–00–54
Trailer tow relay, stop lamp, K526 – G304, with 7–pin trailer socket, as of 01/2004 700–04–00–53
Trailer tow relay, stop lamp, K526 – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 417–01–00–30
Trailer tow relay, stop lamp, K526 – Stop Lamps, with trailer socket, wagon, as of 01/2004 417–01–00–34
Transmission control module (TCM), A318 – 5–speed automatic transmission (5F31J) 307–01B–00–8
Transmission Fluid Temperature (TFT) sensor, B191 – 5–speed automatic transmission (5F31J) . 307–01B–00–8

Transmission hardware unit, A40 – 1.8/2.0L Duratec–HE (MI4), automatic transmission 303–14B–00–6
Transmission hardware unit, A40 – 4–speed automatic transmission (CD4E) 307–01A–00–4
Transmission range sensor, B120 – 4–speed automatic transmission (CD4E), 4–door model/5–door model 307–01A–00–2
Transmission range sensor, B120 – 4–speed automatic transmission (CD4E), wagon 307–01A–00–3
Transmission range sensor, B120 – Petrol engines 419–07A–00–2
Turbine Shaft Speed (TSS) sensor, B44 – 1.8/2.0L Duratec–HE (MI4), automatic transmission .. 303–14B–00–9
Turbine Shaft Speed (TSS) sensor, B44 – 4–speed automatic transmission (CD4E) 307–01A–00–4
Turn signal lamp, LH front, E3 – Turn Signal and Hazard Lamps 417–01–00–14
Turn signal lamp, RH front, E8 – Turn Signal and Hazard Lamps 417–01–00–14
Turn signal switch, N90 419–10–00–3
Turn signal switch, N90 – Turn Signal and Hazard Lamps 417–01–00–13
Turn signal switch, N90 – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model 417–01–00–16
UEGO sensor, B198 – 1.8L Duratec–SCi (MI4) 303–14A–00–7
Vanity mirror lamp, LH side, E30 417–02–00–4
Vanity mirror lamp, RH side, E31 417–02–00–4
Variable geometry turbo actuator, M253 – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV 303–14F–00–2
Variable geometry turbo actuator, M253 – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III 303–14F–00–1
Vehicle Route Guidance/Navigation – DVD navigation system with touch screen 419–07B–00
Vehicle Route Guidance/Navigation – Travel Pilot 419–07A–00
Vehicle Speed Control 310–03–00
Vehicle speed sensor (VSS), B11 – 1.8/2.0L Duratec–HE (MI4), automatic transmission 303–14B–00–9
Vehicle speed sensor (VSS), B11 – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6) 310–03–00–3
Video display, LH side, A307 415–07–00–5
Video display, LH side, A307 415–07–00–6
Video display, RH side, A308 415–07–00–5
Video display, RH side, A308 415–07–00–6
Video System 415–07–00
Warning Devices 413–09–00
Washer pump motor, front and rear, M84 – With rear window wiper, with headlamp washer 501–16–00–6
Washer pump motor, front and rear, M84 – With rear window wiper, without headlamp washer ... 501–16–00–5
Wheel speed sensor, LH side front, B15 – before 08/2004 ..... 206–09A–00–3
Wheel speed sensor, LH side front, B15 – Bosch 8.0 ..... 206–09A–00–4
Wheel speed sensor, LH side rear, B17 – before 08/2004 ..... 206–09A–00–3
Wheel speed sensor, LH side rear, B17 – Bosch 8.0 ..... 206–09A–00–4
Wheel speed sensor, RH side front, B14 – before 08/2004 ..... 206–09A–00–3
Wheel speed sensor, RH side front, B14 – Bosch 8.0 ..... 206–09A–00–4
Wheel speed sensor, RH side rear, B16 – before 08/2004 ..... 206–09A–00–3
Wheel speed sensor, RH side rear, B16 – Bosch 8.0 ..... 206–09A–00–4
Window control switch, driver (multiple), N300 – front and rear power windows, Driver side front . 501–11–00–3
Window control switch, driver (multiple), N300 – Front power windows, Driver side 501–11–00–1
Window control switch, driver (multiple), N300 – RHD 413–00–00–4
Window control switch, LH rear, N298 – front and rear power windows, LH rear door 501–11–00–5
Window control switch, passenger side front, N297 – front and rear power windows, Passenger side front 501–11–00–4
Window control switch, passenger side front, N297 – Front power windows, Passenger side 501–11–00–2

Window control switch, RH rear, N299 – front and rear power windows, RH rear door 501–11–00–6
Window regulator motor, driver side front, M80 – front and rear power windows, Driver side front . 501–11–00–3
Window regulator motor, driver side front, M80 – Front power windows, Driver side 501–11–00–1
Window regulator motor, LH rear, M116 – front and rear power windows, LH rear door 501–11–00–5
Window regulator motor, passenger side front, M79 – front and rear power windows,
Passenger side front 501–11–00–4
Window regulator motor, passenger side front, M79 – Front power windows, Passenger side 501–11–00–2
Window regulator motor, RH rear, M117 – front and rear power windows, RH rear door 501–11–00–6
Windshield heater, LH side, R53 – Heated windshield 501–11–00–7
Windshield heater, RH side, R54 – Heated windshield 501–11–00–7
Windshield washer jet heater, LH side, R51 – with windshield washer jet heater 501–16–00–8
Windshield washer jet heater, RH side, R52 – with windshield washer jet heater 501–16–00–8
Windshield washer pump motor, M112 – Without rear window wiper, with headlamp washer 501–16–00–4
Windshield washer pump motor, M112 – Without rear window wiper, without headlamp washer . . 501–16–00–3
Windshield wiper motor, M111 – with rain sensor 501–16–00–2
Windshield wiper motor, M111 – with variable intermittent wipe 501–16–00–1
Windshield wiper relay, K162 700–02–00–23
Wiper/washer switch, N104 419–10–00–9
Wiper/washer switch, N104 – with rain sensor 501–16–00–2
Wiper/washer switch, N104 – with variable intermittent wipe 501–16–00–1
Wipers and Washers 501–16–00
Wiring Harness Overview 100–00–06
Yaw velocity sensor, B139 – as of 08/2004 . . . . . 206–09C–00–6
Yaw velocity sensor, B139 – Diesel engines,
except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–5
Yaw velocity sensor, B139 – Petrol engines,
2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 206–09C–00–4

Note

All wiring connections between components are shown exactly as they exist in the vehicles. It is important to realise, however, that no attempt has been made on the schematic to represent components and wiring as they physically appear on the vehicle. For example, a 4-foot length of wire is treated no differently in a schematic from one which is only a few inches long. Furthermore, to aid in understanding electrical (electronic) operation, wiring inside complicated components has been simplified.

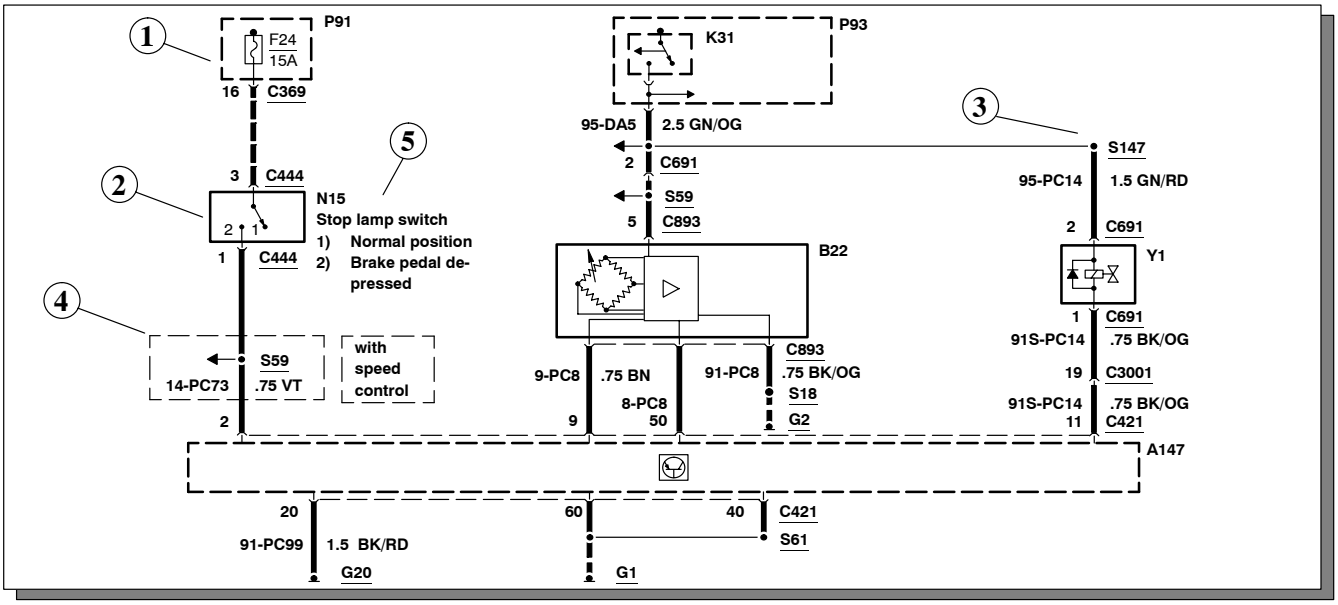

Complete Circuit Operation

Each circuit is shown completely and independently in one chapter or “cell”. Other components which are connected to the circuit may not be shown unless they influence the circuit operation.

Current Flow (1)

Each cell normally starts with the component that powers the circuit such as a fuse or the ignition switch. Current flow is shown from the power source at the top of the page to ground at the bottom of the page.

Switch Positions (2)

Within the schematic, all switches, sensors and relays are shown “at rest” (as if the ignition switch were OFF).

Splices (3)

An arrow indicates that the splice is not shown completely. The page where the splices appears in full is listed in the Index.

Boxes (4)


A thin dashed box on a schematic indicates a part of the circuit which is only present for a particular vehicle model, country, or option. These qualifiers will be shown next to the box on the schematic.

Component Names and Notes (5)

Component names are placed on the right hand side of each component. Any notes that describe switch positions or operating conditions follow the name. Descriptions of the internals of the component (e.g. “Speed sensor”) are also included here.


Fuse and Relay Information

The “Fuse and Relay Information” cell (700-01-00) contains a view of the Fuse-/Relay Box in which all fuses and relays are identified. Cell 700-01-00 also specifies in table format which circuits/systems are protected by each fuse.

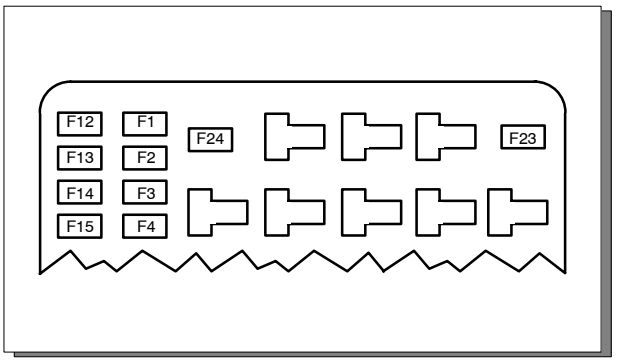


Power Distribution


The “Power Distribution” cell (700-02-00) shows the current feed circuit. The current path is shown from the battery to the ignition switch and to all fuses.

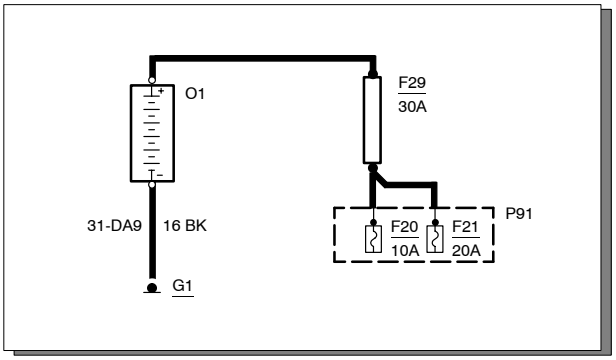

Fuse Details

The “Fuse Details” cell (700-03-00) shows the circuits protected by each fuse. The circuit is traced from the fuse to the component. All details (wires, splices, connectors) between the fuse and the first component are shown.

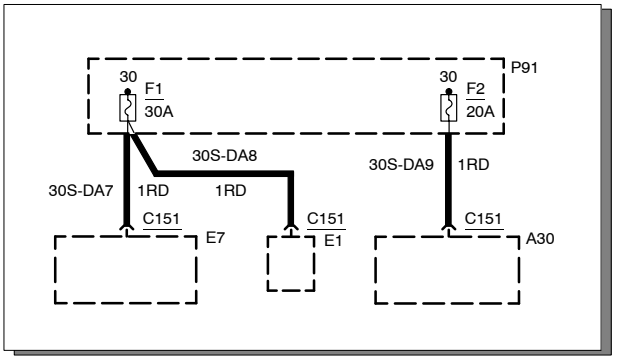


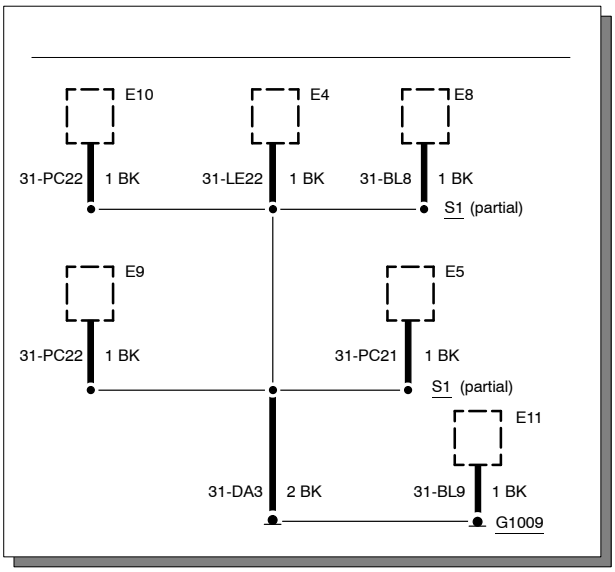

Ground Distribution

Cell 700-04-00 contains the schematics that show the complete details for each ground connection or main ground splice. This is useful in diagnosing a problem affecting several components at once (poor ground connection or ground splice). All Details (wires, splices, connectors) between the ground point and the components are shown. These ground connection details are shown here in order to keep the individual cell schematics as uncluttered as possible.

Splices with a large number of wires may be split in order to improve the graphic representation. A thin line is then used to indicate the unity of the split splice.

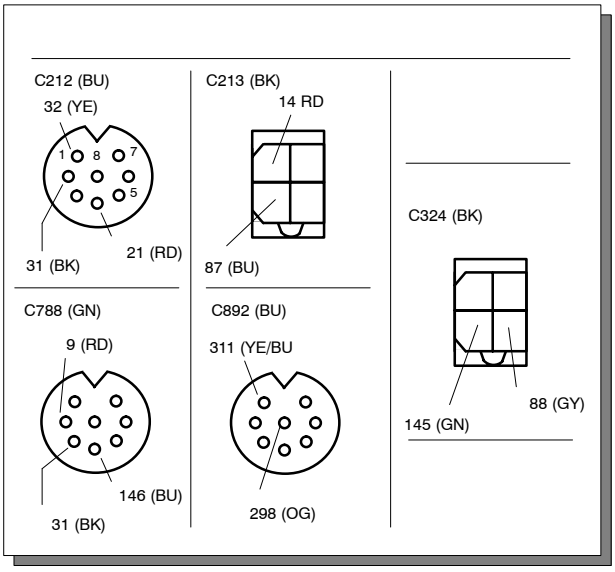


Component Identification Information

Component Identification Information begins in cell 700-06-00 and consists of
(1) Component Location Chart (List),
(2) Component Location Views, and
(3) Connector Views (Faces).
The **Component Location Chart** helps the user find where the various items depicted on the schematic can physically be found on the vehicle. A brief written description of the location is given, along with a reference to the component location views.
The **Component Location Views** show the components and their connecting wires as they can be found on the vehicle.
The **Connector Views** show the cavity or pin locations of all connectors. They are shown as they would appear to a user probing the wires with the connector disconnected.


Note:


Connector colours are portrayed in the following manner:

when both sides of the connector have the same colour

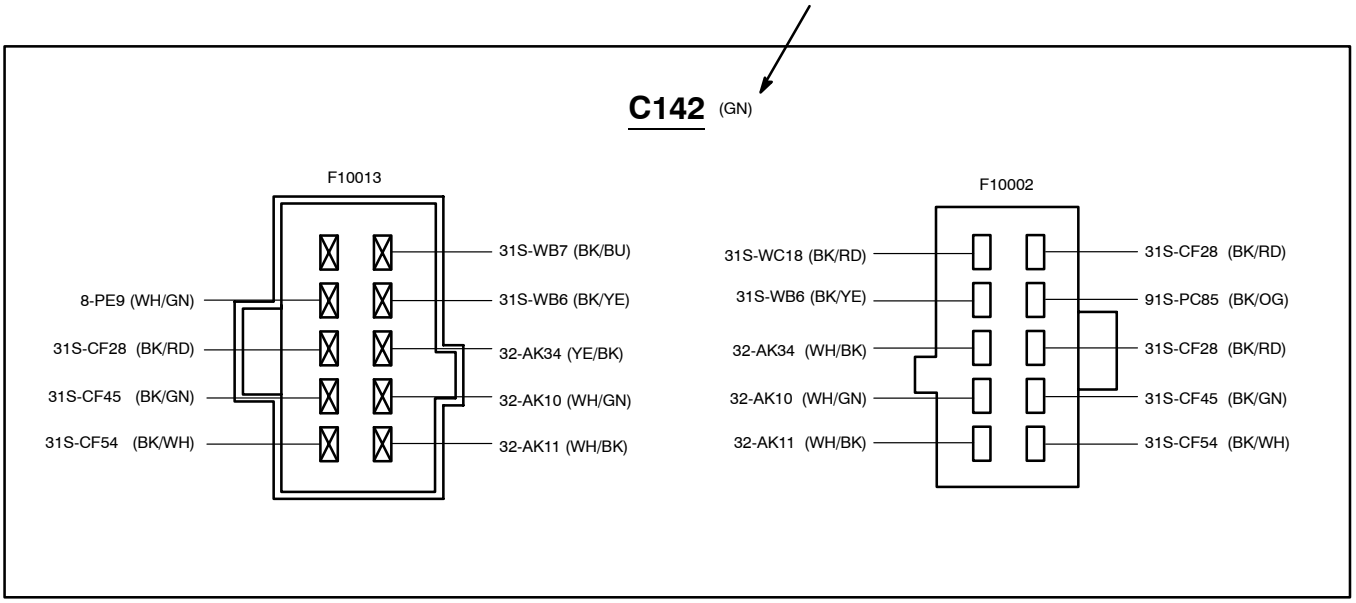

when the male and female sides of the connector have different colours

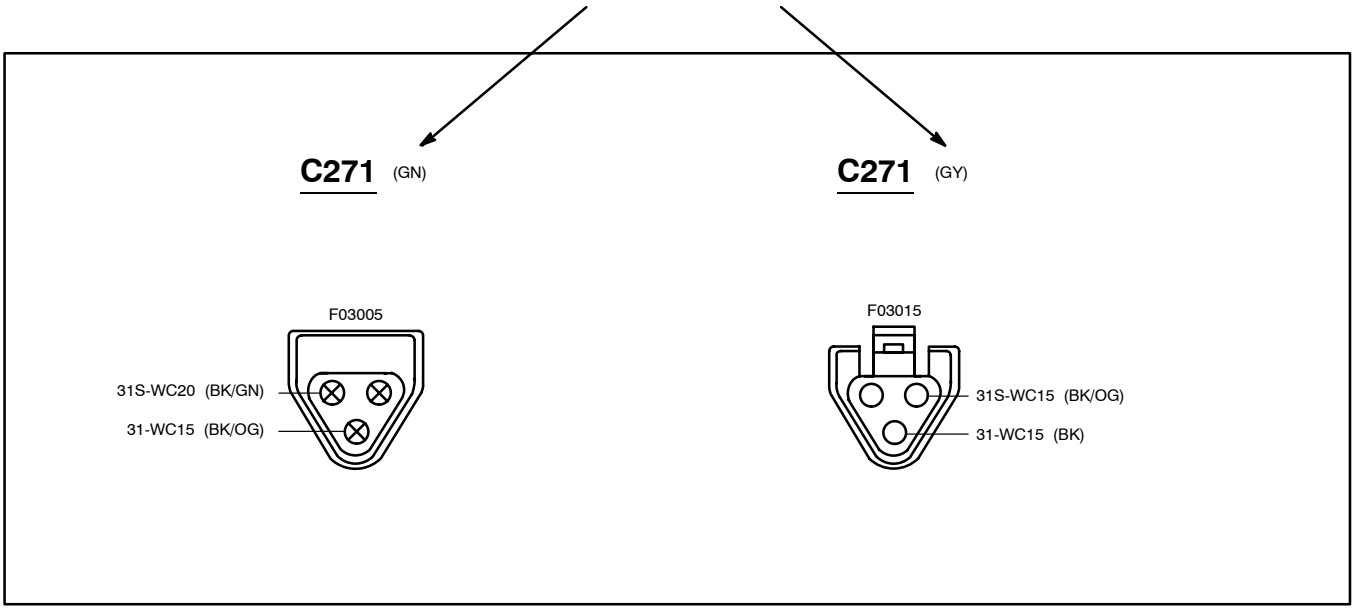

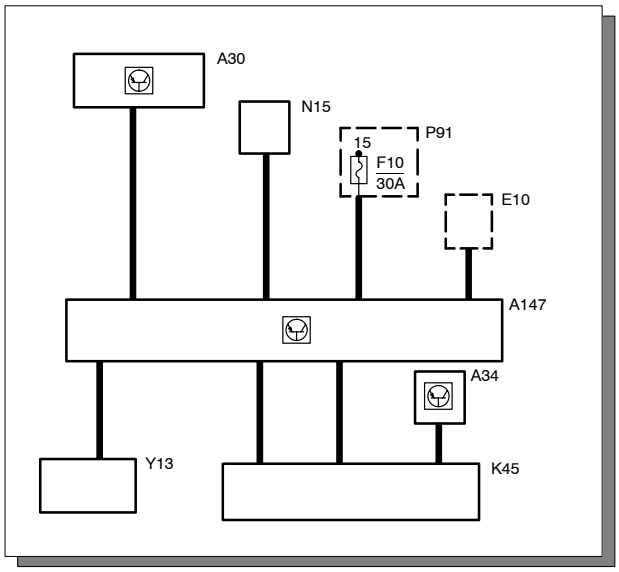

Block Diagrams

Block diagrams can be found at the beginning of some cells. These diagrams provide an overview of the systems detailed on the pages that follow them. All components connected to the control module are shown in order to provide easy understanding of the system component interactions.


Circuit Numbering and Wire Identification

Circuit Numbering:

Ford has introduced a world-wide uniform system for circuit numbering and wire identification. The system is called Function - System Connection, or FSC for short.

FSC was developed mainly to assist in vehicle development and production processes, but is also helpful in helping the technician troubleshoot electrical circuits.

Example:

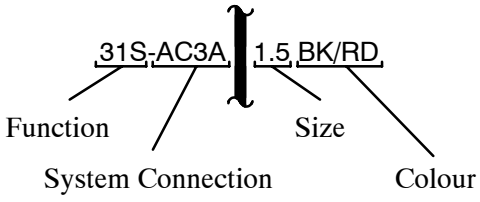

Function:

The first two digits identify the function of the wire. In this case, the function code includes the letter “S” to indicate it is an additionally switched function. The function part of the circuit number is the most helpful to the technician in troubleshooting a circuit. The function codes are based on some DIN designations used previously, with new numbers added for overload-protected functions, sensor functions, data links and special electronic module functions. A complete list of function codes and their descriptions is included in cell 100-00-04 “Symbols”.

System Connection (including branch):

Systems are related to subsets of the vehicle circuitry. A complete list of the system codes can be found in cell 100-00-04 “Symbols”.

Immediately following the system letter code is the connection number specific to that system. A branch identification is used to differentiate wires in one connection with the same function.

Wire Identification (wire colours):


The wire identification consists of a basic colour and an identification colour, and is determined directly from the wire's circuit number. In the wiring diagrams the wire colours will be located separately next to the wires as before.

The basic and identification colours are abbreviated using the international norm IEC 757. The abbreviations are listed in cell 100-00-04 "Symbols".

Each function code has a specific basic colour associated with it which can also be seen in the chart of function codes in cell 100-00-04 "Symbols". The identification colour is a coloured stripe used to differentiate several wires with the same function within one component connector.


One essential difference from the previous wire colouring system is the change of some of the basic wire colours. Ground circuits, previously assigned the basic colour brown (BN) are now black (BK).

Using the circuit number and wire identification used in the above example we know the following information about the wire.




Function:	31 = Ground S = Additionally switched circuit
System:	KA = Wiper / Washer
Connection:	3 = Switch connection A = Branch
Size:	1.5 = 1.5 mm^2
Colour:	BK = Basic colour black (determined by function 31) RD = Identification colour red (red stripe)

Symbols

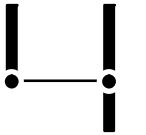

Distributed splice

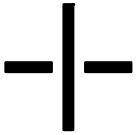

Crossed wiring without connection



Splice

Removable connection



Ground




Connector



Female connector

Male connector




Entire component




Part of a component




Component case directly attached to metal part of vehicle (ground)




Component with screw terminals



Connector attached to component



Connector attached to component lead (pigtail)

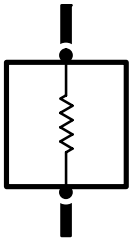


Wire resistance



Resistor or heating element



Potentiometer (pressure or temperature)



Potentiometer (outside influence)


Symbols



Battery




Circuit breaker




Fuse



Fusible link

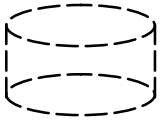


Shield



Signal horn or speaker



Steering column slip ring




Temperature dependent circuit breaker



Diode, current flows in direction of arrow



Light emitting diode (LED)



Capacitor




Variable capacitor




Piezoelectric sensor


Symbols




Coil



Solenoid controlled valve or clutch solenoid



Transistor



Lamp



Bifilament lamp




High beam symbol



Rear fog lamp symbol



Front fog lamp symbol




Hall sensor




Clock spring



Buzzer

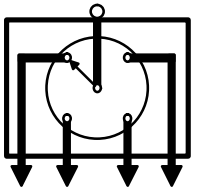


Distributor



Shorting bar connector

Symbols

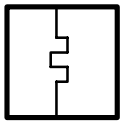

Heating element

Conductor loop



Gauges



Permanent magnet, one–speed–motor



Fuel sender




Antenna




Permanent magnet, two–speed–motor



Busbar

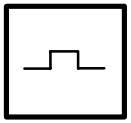

Thermal timer relay




Ignition coil assembly



Turn signal symbol



AC voltage

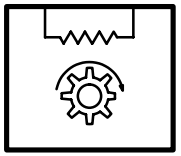

ABS wheel sensor




Filter

Symbols




A thick dashed line represents 2 or more wires

A thin dashed line represents a continuation

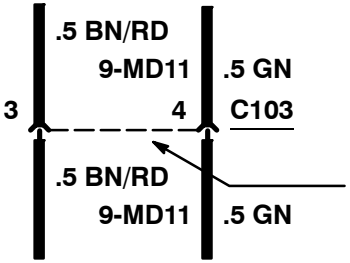

Two connections (pins) in the same connector

Dashed line indicates terminals for the same connector

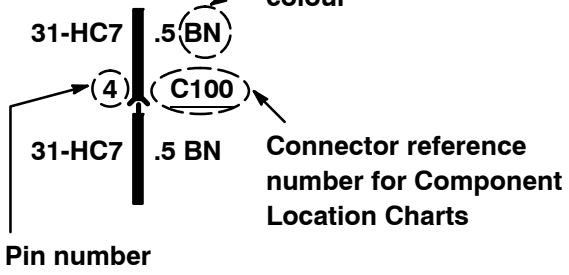


Wire insulation is one colour


Connector reference number for Component Location Charts

Pin number

Wire insulation is one colour with another colour stripe (green with white)

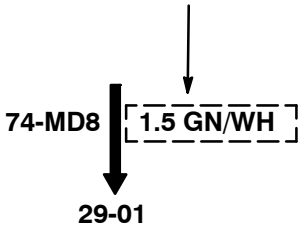


Circuit references a wire which connects to another circuit

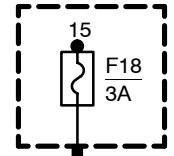

P91
Central Junction Box (CJB)


Other circuits which share fuse 18, but are not shown, can be referenced in Fuse Details

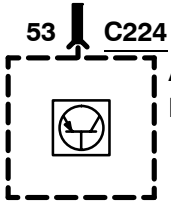


A11
Radio




M111
Windshield wiper motor

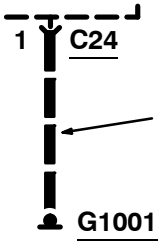

Other circuits which are also grounded at G1001, but are not shown, can be referenced in Ground Distribution

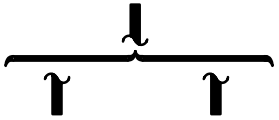


A choice bracket shows wiring differences between models, countries or options

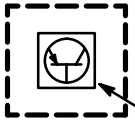

A7
ABS module

Symbol indicates a solid state device (consists only of electronic parts)

Circuit number

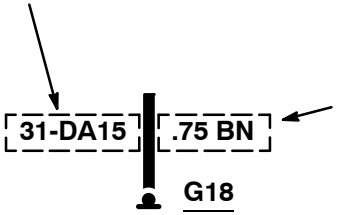


Wire size in mm2


Wire attached to metal part of car (grounded)

Ground reference number for Component Location Charts


Symbols

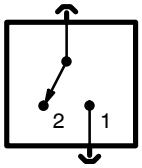


One pole, two position switch

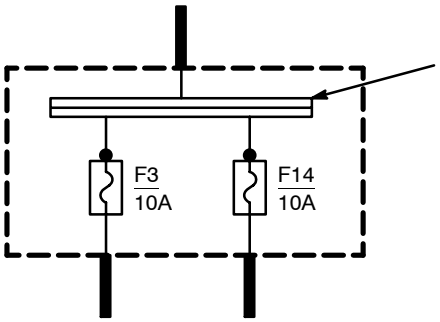

Busbar

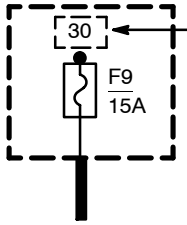


Indicates that fuse is supplied with power at all times

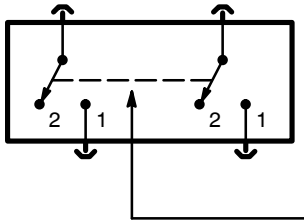


Switches that move together

Dashed line shows a mechanical connection between switches

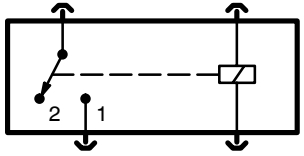


Normally open contact


When coil is energised, switch is pulled closed

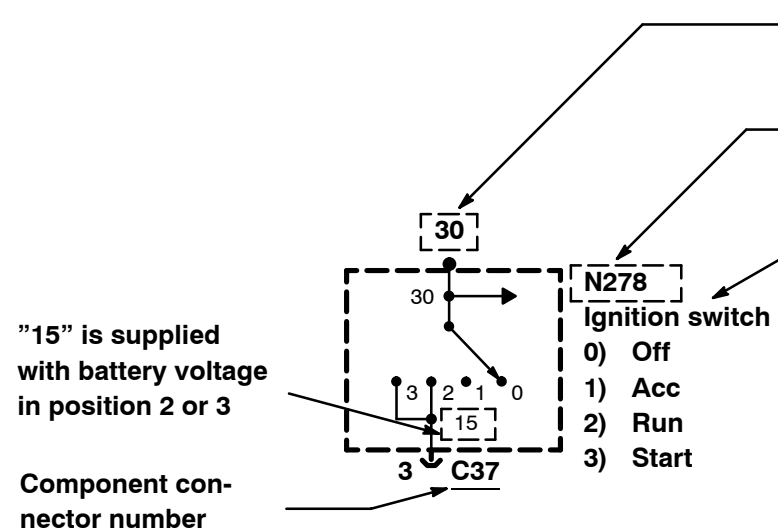

Symbols

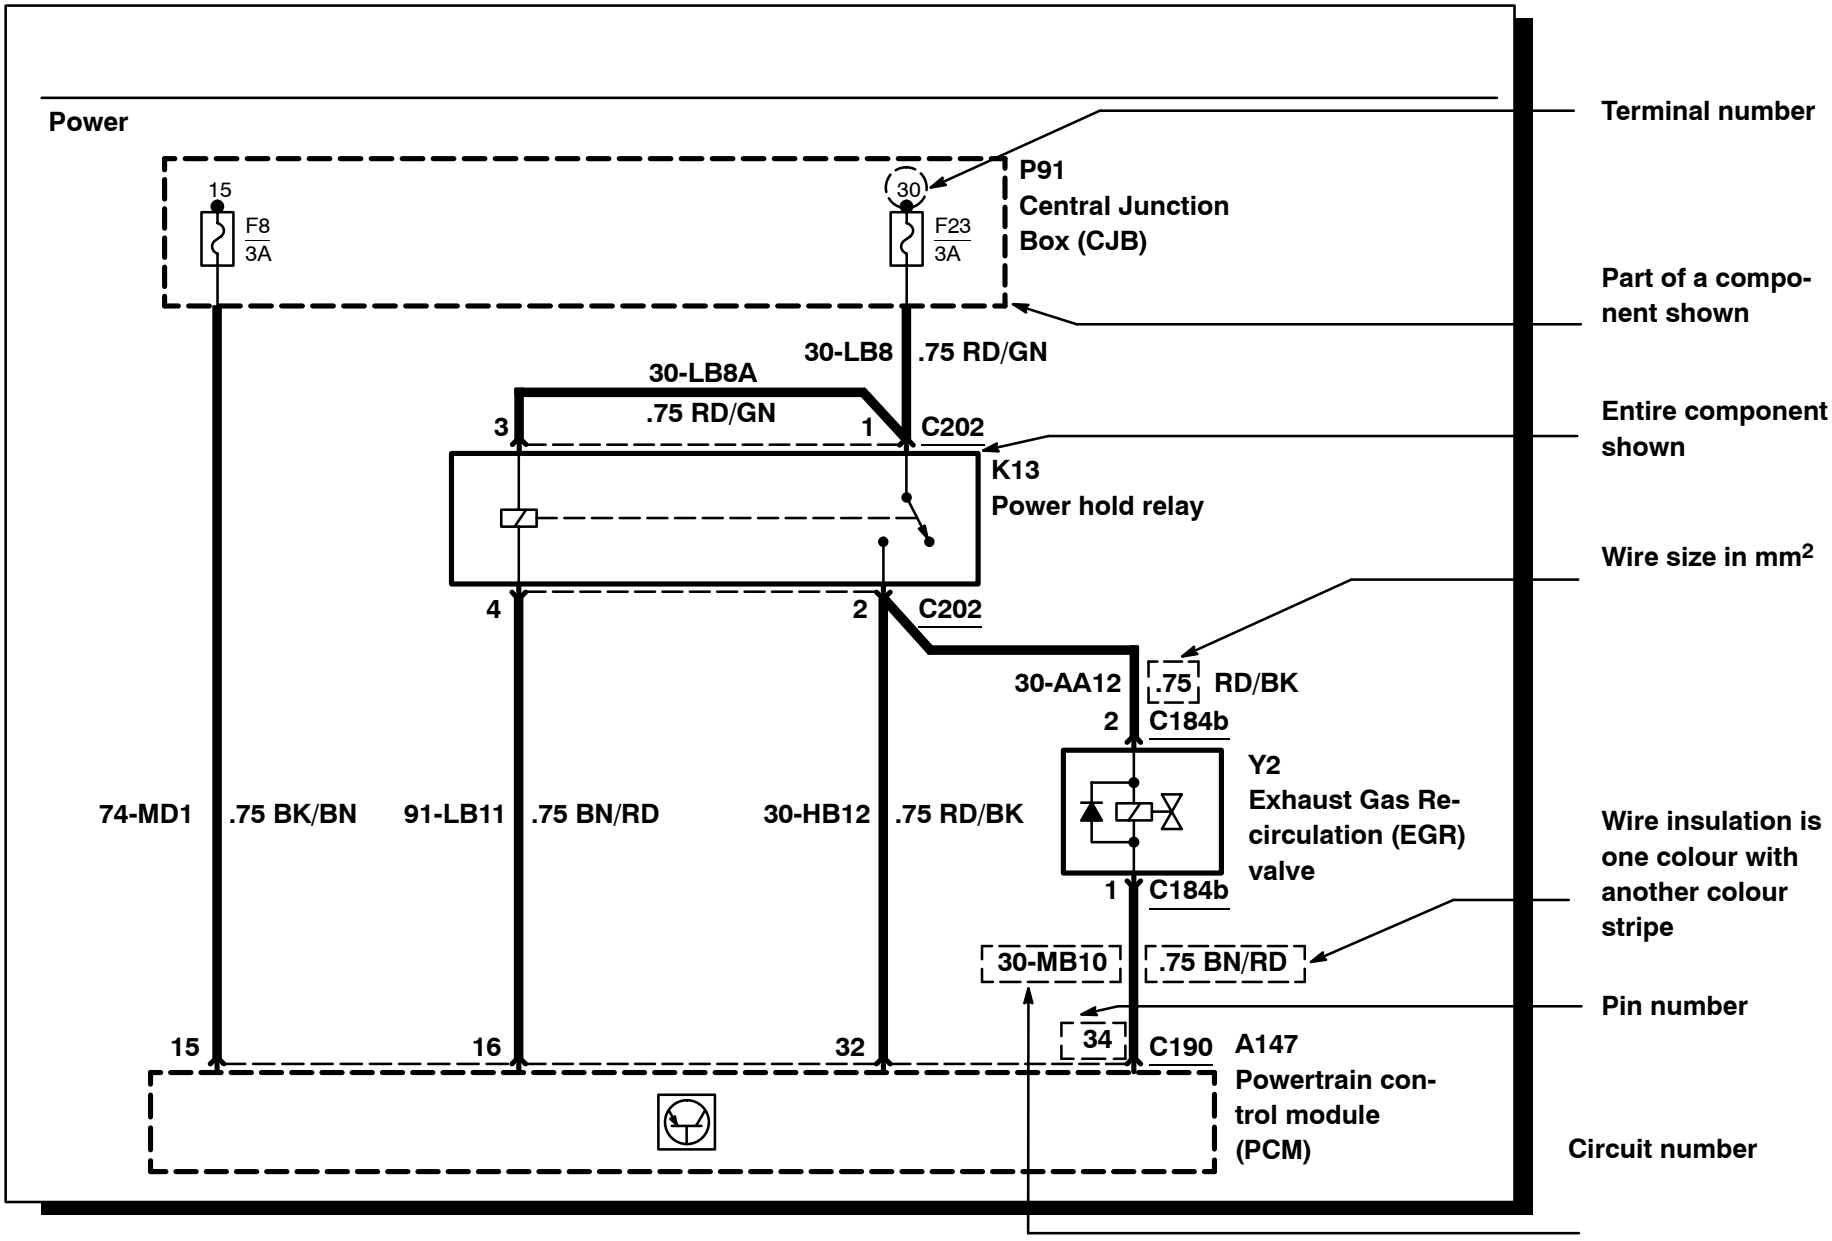
Power
15
F8
3A
30
F23
3A
P91
Central Junction
Box (CJB)
30-LB8 .75 RD/GN
30-LB8A
.75 RD/GN
3
1
C202
K13
Power hold relay
4
2
C202
30-AA12
.75
RD/BK
2
C184b
Y2
Exhaust Gas Re-
circulation (EGR)
valve
1
C184b
74-MD1 .75 BK/BN
91-LB11 .75 BN/RD
30-HB12 .75 RD/BK
30-MB10
.75 BN/RD
15
16
32
34
C190
A147
Powertrain con-
trol module
(PCM)
Terminal number
Part of a compo-
nent shown
Entire component
shown
Wire size in mm2
Wire insulation is
one colour with
another colour
stripe
Pin number
Circuit number

Symbols

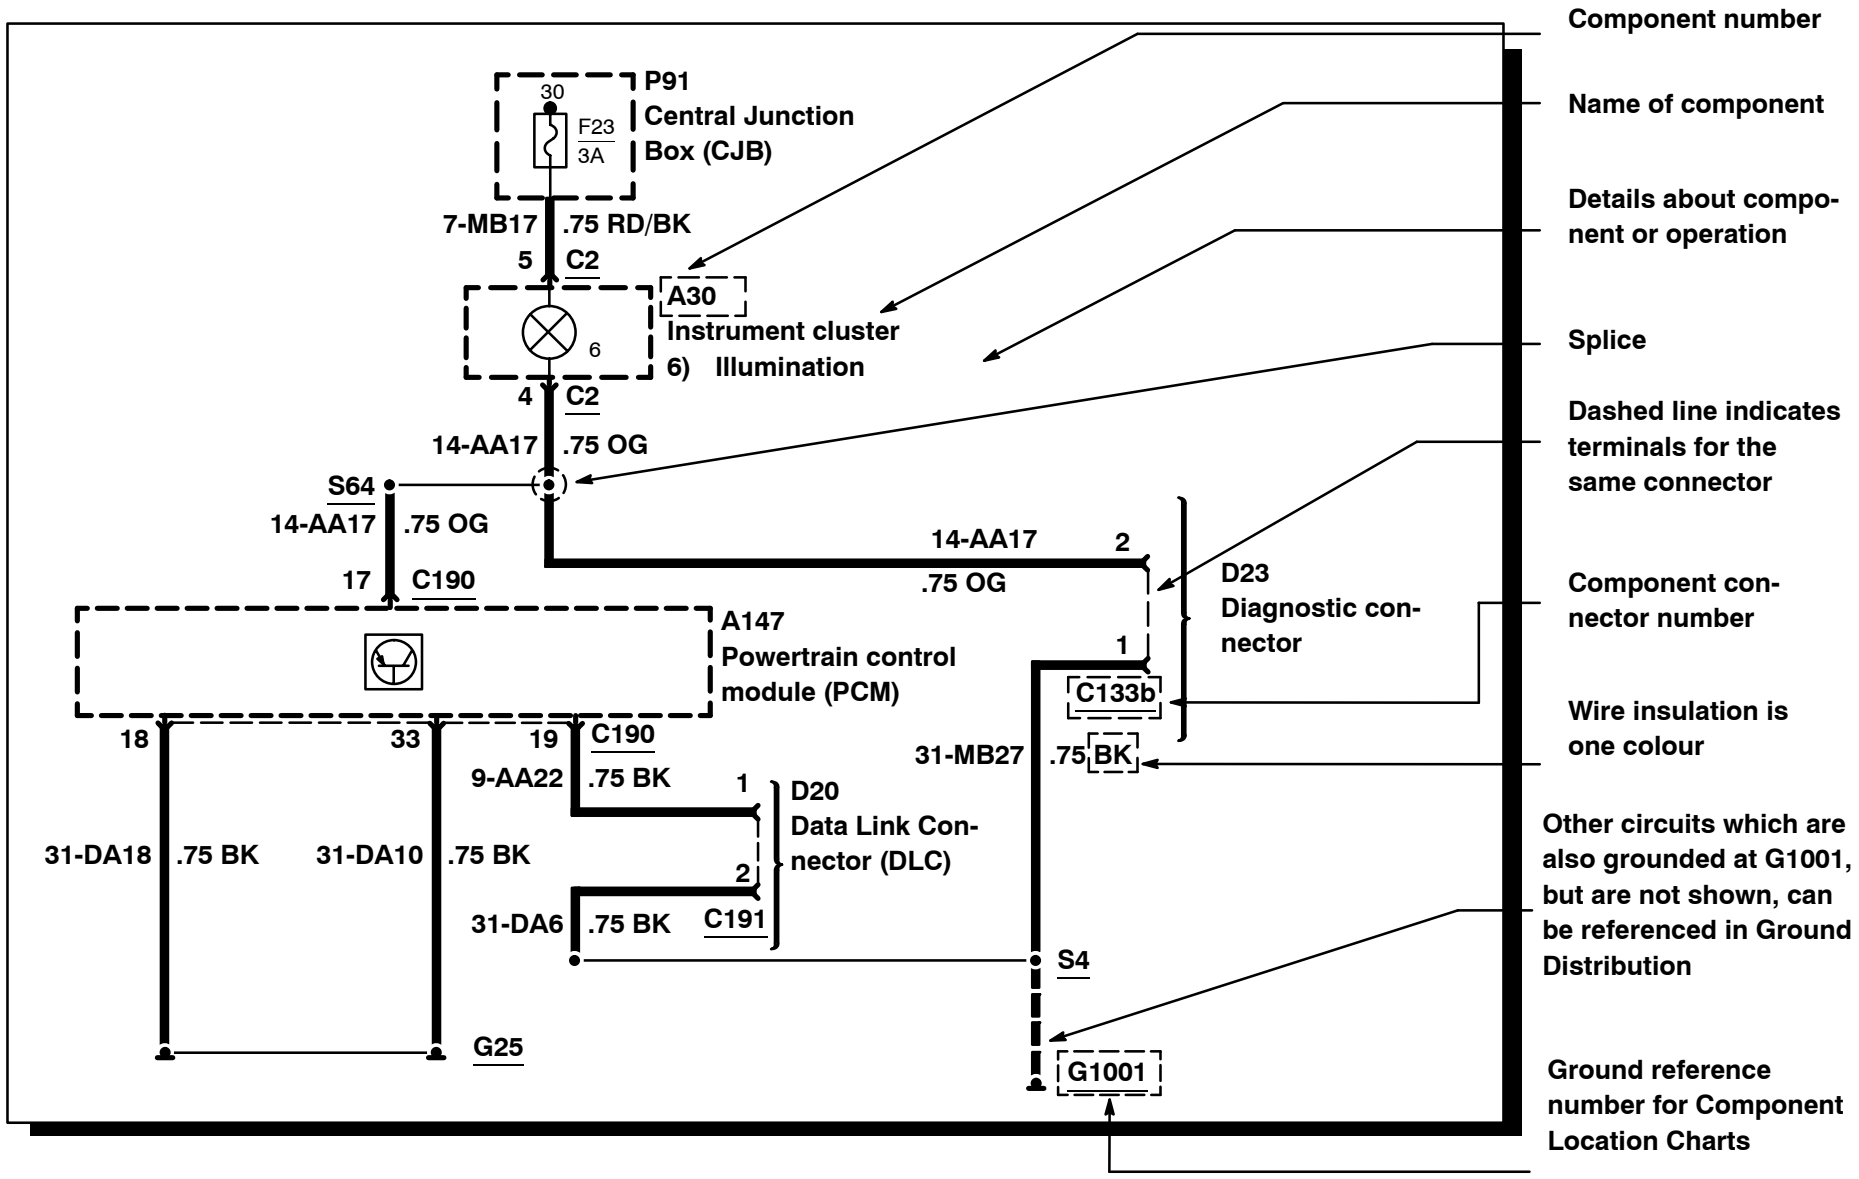
Component number
Name of component
Details about component or operation
Splice
Dashed line indicates terminals for the same connector
Component connector number
Wire insulation is one colour
Other circuits which are also grounded at G1001, but are not shown, can be referenced in Ground Distribution
Ground reference number for Component Location Charts
P91
Central Junction Box (CJB)
30
F23
3A
7-MB17 .75 RD/BK
5 C2
A30
Instrument cluster
6) Illumination
6
4 C2
14-AA17 .75 OG
S64
14-AA17 .75 OG
17 C190
A147
Powertrain control module (PCM)
14-AA17 .75 OG
2
D23
Diagnostic connector
1
C133b
31-MB27 .75 BK
18
33
19 C190
9-AA22 .75 BK
1
D20
Data Link Connector (DLC)
2
31-DA18 .75 BK
31-DA10 .75 BK
31-DA6 .75 BK C191
S4
G25
G1001

Symbols

Number	Description	Basic colour
1	Audio signal positive	WH
2	Audio signal negative	GY
3	Audio signal reference (return/ shield)	BN
4	Data link, bus positive	GY
5	Data link, bus positive	BU
6	Data link, bus shield	NO
7	Constant DC voltage, other than battery	YE
8	Sensor signal (X–direction, forward, upward)	WH
9	Sensor signal return (reference/ground)	BN
10	Sensor signal (Y–direction, reverse, downward)	GY
15	Battery voltage, hot in Start and Run only	GN
20	Battery voltage, hot in Run only	PK
29	Battery voltage, hot at all times (secondary fused)	OG
30	Battery voltage, hot at all times (not fused and primary fused)	RD
31	Ground	BK
32	Switched between: Battery voltage, Ground or Open Circuit (Plus for: front down, open, mirror leftward, unlock, on)	WH

Number	Description	Basic colour
33	Switched between: Battery voltage, Ground or Open Circuit (Plus for: front up, close, mirror rightward, lock, off)	YE
34	Switched between: Battery voltage, Ground or Open Circuit (Plus for: rear up, mirror upward, forward or module settings)	BU
35	Switched between: Battery voltage, Ground or Open Circuit (Plus for: rear down, mirror downward, reverse or inductor output voltage)	VT
48	Drain wire	NO
49	Pulsed power feed	BU
50	Battery voltage, hot in Start only	GY
59	AC Power	GY
64	DC voltage, hot only if engine runs	BU
75	Battery voltage, hot in Run and Accessory only	YE
91	Ground	BK

Symbols – System Codes

Distribution Systems

DA: Splices distribution
DB: Busbars
DC: Circuit protection – Battery Junction Box (BJB)
DD: Circuit protection – Central Junction Box (CJB)
DE: Ground
DF: Junction block
DG: Circuit protection – Auxiliary fuse box
DH: Distribution – Auxiliary fuse box
DJ: Auxiliary distribution
DK: Integrated components

Data Bus Systems

EA: ACP Bus
EB: ALT Bus
EC: CAN Bus
ED: DCL Bus
EE: ISO Bus
EG: SCP Bus

Power Convenience Systems

AA: Door locks and decklid (including: remote keyless entry/global closing)
AD: Power mirrors
AG: Power roof
AH: Power seats
AJ: Power windows
AL: Power steering column
AM: Power doors

Basic Systems

BA: Charge (including: ammeter/voltmeter)
BB: Start

Chassis Systems

CC: Ride suspension
CD: Suspension (air/self–levelling)
CE: Power steering (variable automatic power assist)
CF: Anti–lock brakes/traction control
CG: Brakes (engine/exhaust/jake)

Climate Systems

FA: Climate 1
FB: Climate 2
FC: Climate, auxiliary heater

Information and Warning Systems

GA: Gauges – level/pressure/temperature
GB: Gauges miscellaneous (including: speedometer/clock)
GC: Indicator – level/pressure/temperature
GE: Auxiliary warning/bulb outage
GG: Instrument cluster
GH: Trip computer
GJ: Horn
GK: Navigation
GL: Anti–theft
GM: Audio warning (including: buzzers/chimes)
GN: parking aid
GP: Vehicle emergency monitoring

Heated Systems

HA: Auxiliary (including: air/filter/lighter)
HB: De–ice (including: mirrors/washer jets/windows)
HC: Heated seats

Occupant Restraint Systems

JA: Air Bags

Wiper and Washer Systems

KA: Wiper/washer

Lighting Systems

LB: Courtesy (glove comp./hood/luggage comp./map/recharg. flashlight/vanity)
LC: Entry (including: dome/floor/door)
LD: Fog/flood/driving
LE: Head (including: concealed/dim–dip/daytime running)
LF: Parking/marker/licence/clearance
LG: Turn signal/cornering/hazard/stop/reverse
LH: Switch illumination
LK: Instrument Illumination

Entertainment and Communication Systems

MC: Communication
MD: Entertainment

Special Vehicles (unique)

NA: Ambulance
NB: Police
NC: Taxi
ND: Trailer

Powertrain Control Systems

PA: Engine control (common, cooling and extra carbureted)
PG: Vehicle speed and engine RPM

Symbols

LHD	Left–hand–drive vehicles
RHD	Right–hand–drive vehicles


Country codes

A	Austria
B	Belgium
CH	Switzerland
CZ	Czech Republic
D	Germany
DK	Denmark
E	Spain
F	France
GR	Greece
H	Hungary
I	Italy
IS	Iceland
N	Norway
NL	Netherlands
P	Portugal
S	Sweden
FIN	Finland

Wire colours	
BK	Black
BN	Brown
BU	Blue
GN	Green
GY	Grey
LG	Light green
NA	Natural
OG	Orange
PK	Pink
RD	Red
SR	Silver
VT	Violet
WH	White
YE	Yellow

A large proportion of the plugs in the electrical systems of this vehicle are new generation plugs first introduced on the Fiesta ’89 and since then progressively brought into use on other vehicles. These plugs not only provide a very reliable contact, they are also easy to repair.

A wiring loom repair kit is available for such repairs. This allowed individual replacement of single connectors. The repair kit includes the required replacement connectors, the tools needed for assembly and an illustration of the most important repair procedures.

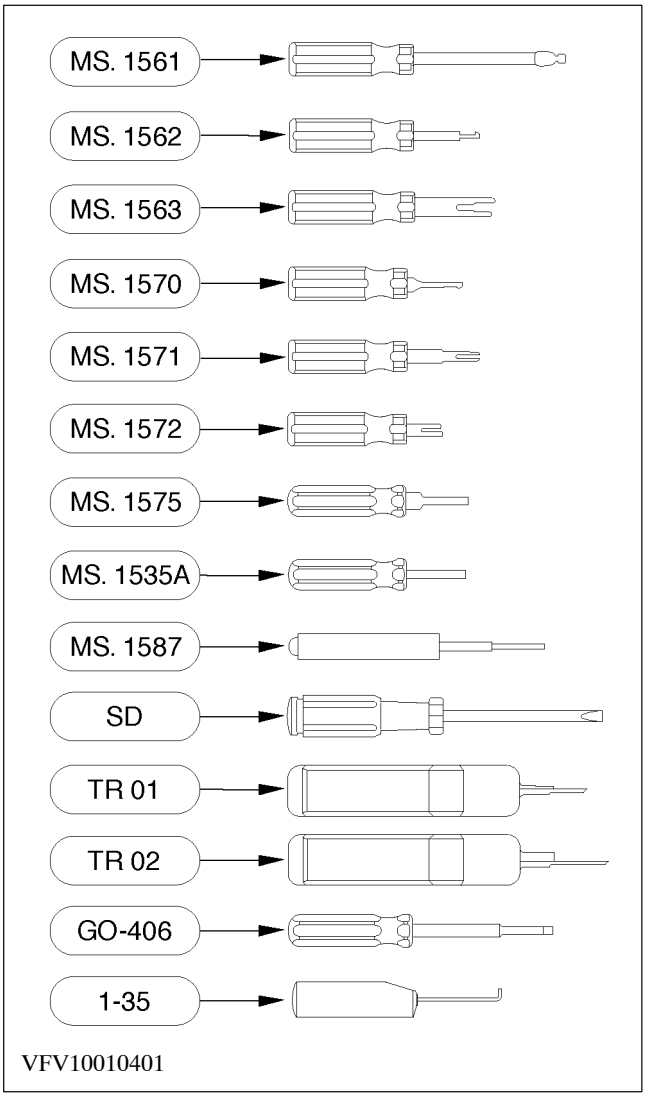

VFV10010401

Special tools may be ordered from OTC Europe or their agents/distributors. In case of difficulty they may be obtained from:


Löwener OTC Tool GmbH
Industriestr. 67
D-40764 Langenfeld
Tel.: (0)2173-928-0
Fax: (0)2173-928-199

Plug Repairs Using the Wiring Loom Repair Kit

Do not use excessive force while repairing plugs. When inserting the replacement terminals listen or feel for the “click” to make sure that the terminal engages correctly.

Special Tools
(Included in the wiring loom repair kit)


MS. 1561	=	Extractor
MS. 1562	=	Extractor
MS. 1563	=	Releasing tool I
MS. 1570	=	Extractor
MS. 1571	=	Releasing tool II
MS. 1572	=	Releasing tool III
SD	=	Screwdriver
MS. 1535A	=	Releasing tool IV
MS. 1575	=	Releasing tool V
MS. 1587	=	Releasing tool VI
TR 01	=	Extractor, male side
TR 02	=	Extractor, female side
GO-406	=	Extractor
1-35	=	Extractor, secondary lock

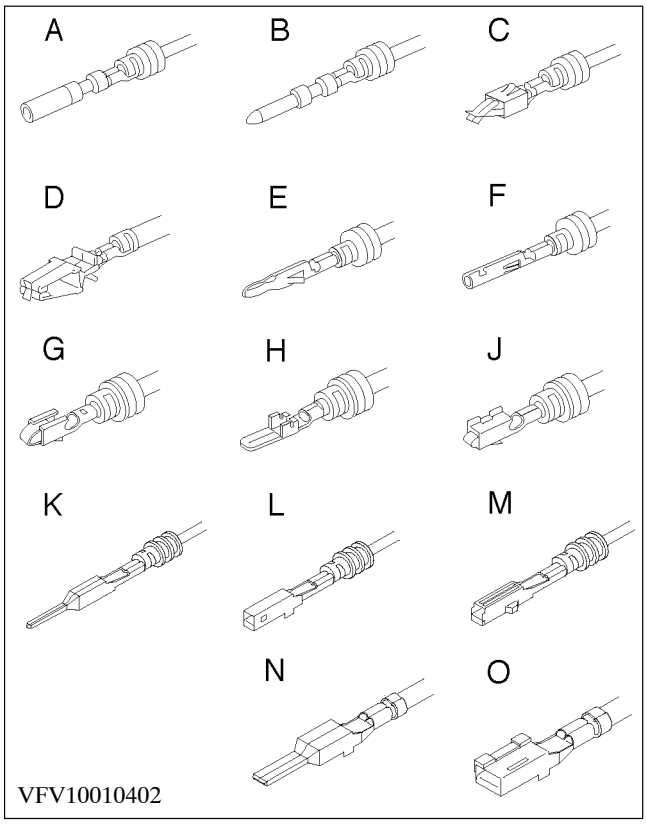

Available Individual Connectors
(Included in the wiring loom repair kit)

A = Socket terminal
B = Pin terminal
C = DFK flat-pin terminal
D = ESPA DFK-1 flat-pin terminal
E = Pin terminal
F = Socket terminal
G = Flat socket terminal
H = Flat pin terminal
J = Socket terminal
K = Pin terminal
L = Socket terminal
M = Socket terminal
N = Pin terminal
O = Socket terminal

These connectors are already provided with cable terminations of different cross sections. The repair kit also includes various crimp-on sleeves for connection to the loom cable.

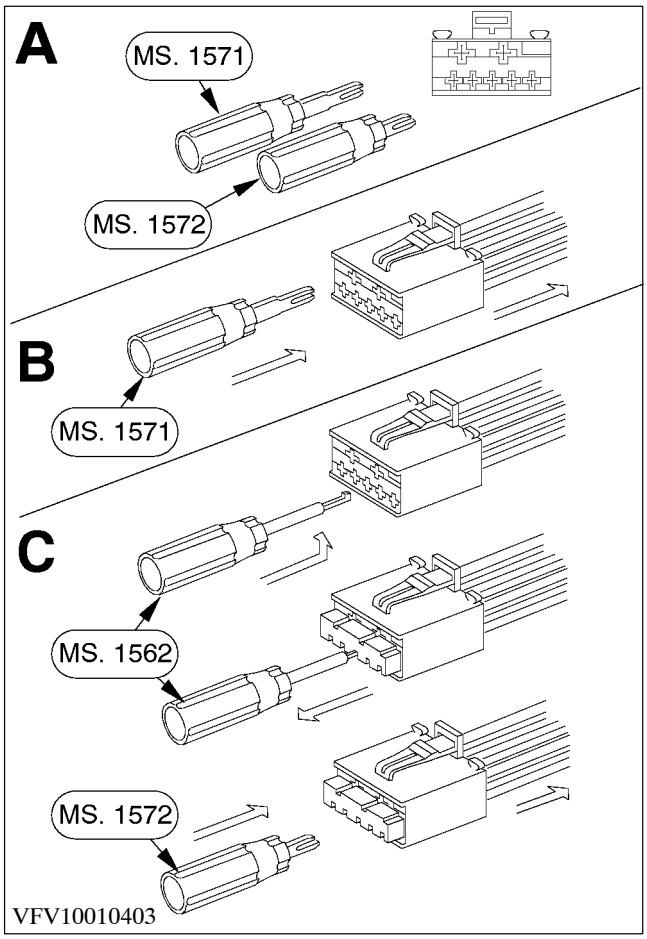


Dismantling Double-Row Multiplugs

Note: Two different releasing tools are used (A):
- MS. 1571 with two legs of equal length
- MS. 1572 with two legs of different lengths

To remove the larger (upper) flat-pin terminal, insert releasing tool MS. 1571 and press the flat-pin terminal out towards the rear (B).

To remove the smaller (lower) flat-pin terminals, first pull out the unlocking device as far as the first stop using extractor MS. 1562 (C). Then insert releasing tool MS. 1572 with the longer leg adjacent to the red locking device and press the small flat-pin terminal out to the rear (C). Insert the replacement terminal and then engage the locking device fully again.

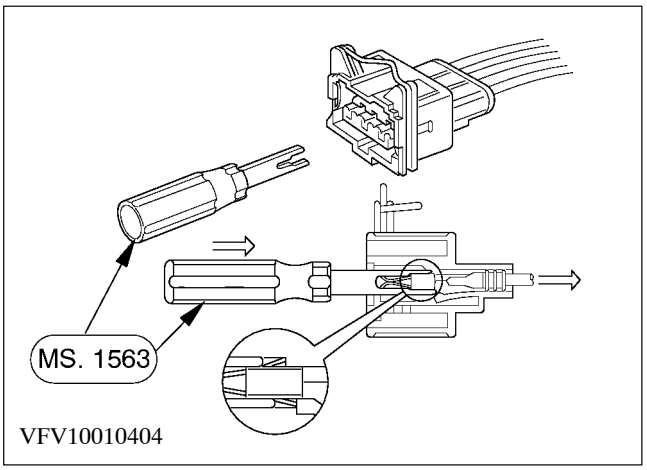


VFV10010404

Dismantling Type DFK Multiplugs

Insert releasing tool MS. 1563 with the longer leg adjacent to the red locking device and press the DFK flat-pin terminal out.

When inserting the replacement terminal, make sure that it engages correctly.

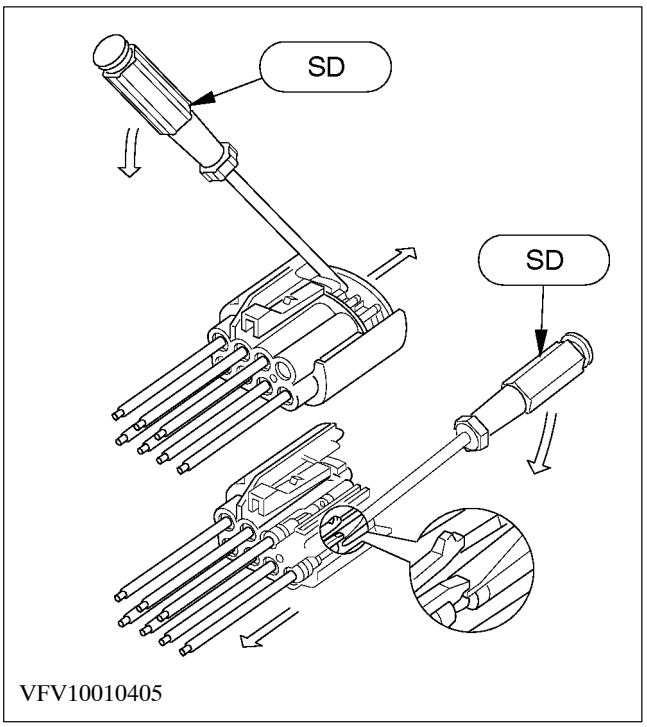


VFV10010405

Dismantling Oval Plugs

a) Pin side

Prise out the cover using screwdriver SD. Then lift the locking device of the pin in question and pull out the pin at the end of the cable.


When inserting the replacement pin, make sure that it engages correctly.

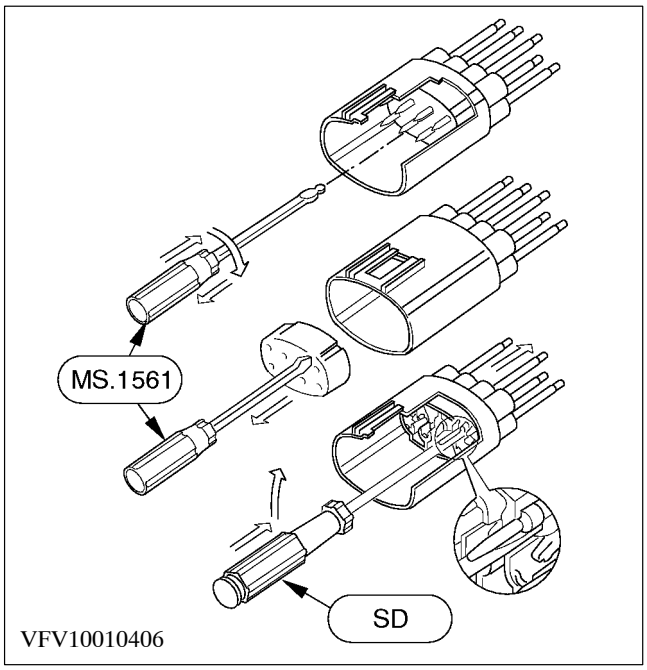

b) Socket side

Remove the locking cap completely using extractor MS. 1561. Then lift the locking device with screwdriver SD and pull out the socket terminal at the end of the cable.


When inserting the replacement socket terminal, make sure that it engages correctly.

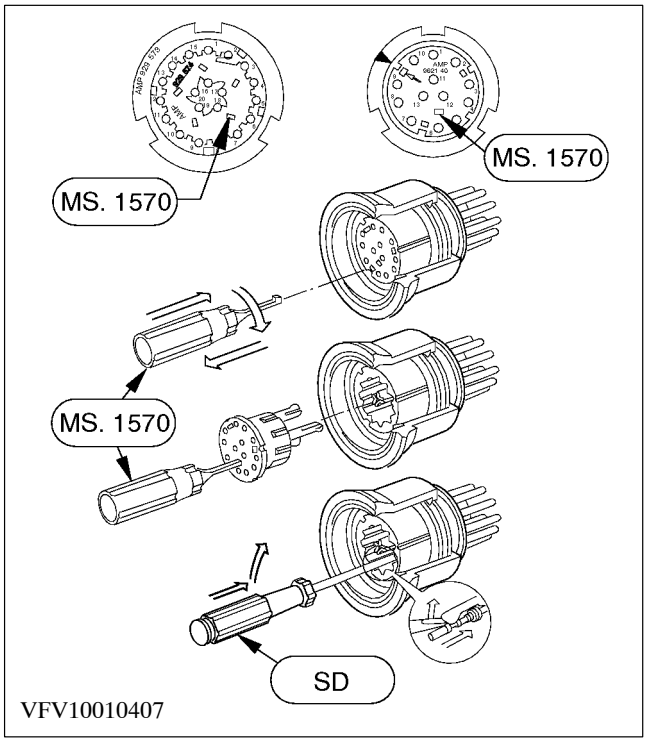

Dismantling Round Plugs

Insert extractor MS. 1570 in one of the rectangular openings, turn through 90° and pull out the red locking device completely. Then lift the locking tab of the pin or sleeve-type terminal in question slightly with screwdriver SD and pull out the terminal on the cable.

When inserting the replacement terminal, make sure that the terminal and red locking device engage fully.

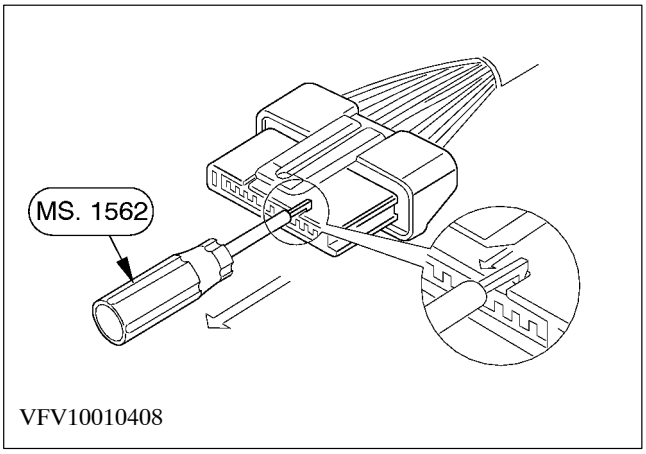


VFV10010408

Dismantling Single-Row Multiplugs

Pull the locking device towards the front using extractor MS. 1562 (to disengage it). Then pull out the single terminal in question on its cable towards the rear.

The locking device must engage correctly after insertion of the replacement terminal.

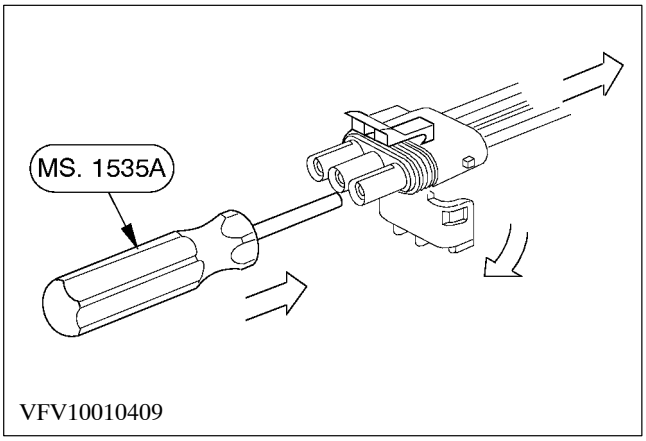


VFV10010409

Dismantling 3-Pin Plugs

Open the locking device. Then press in the pin in question - as shown - with the available releasing tool MS. 1535A and pull out the cable towards the rear.

When inserting the replacement terminal, listen or feel for the “click” to make sure that the pin and locking device engage correctly.

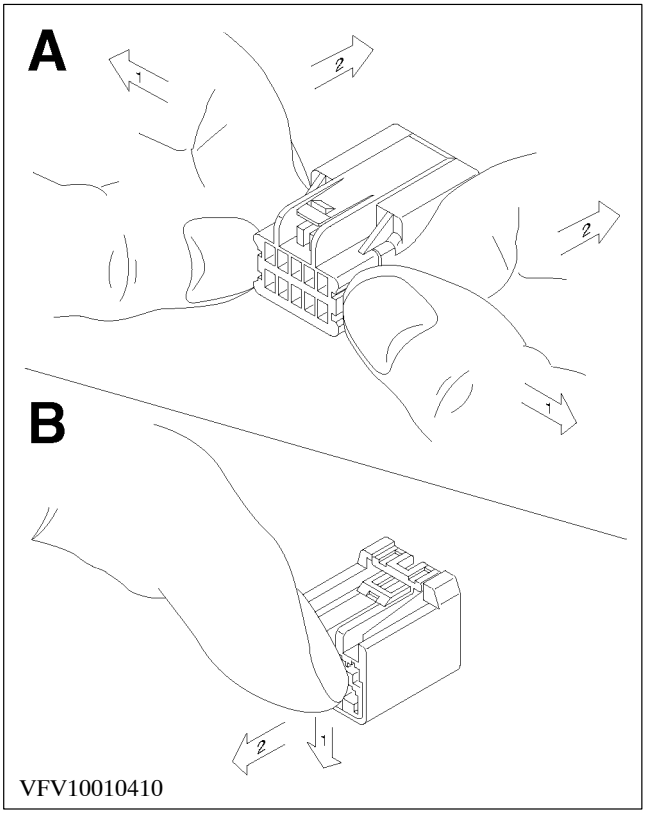

VFV10010410

Dismantling Unsealed YES-Connectors


A: Disengagement of spacer from the full-lock position (male)

Release the locks holding the spacer in the full-lock position by deflecting the operating arms outward. With the operating arms deflected, push the spacer to the pre-set postition.

B: Disengagement of spacer from the full-lock position (female)

Release the lock holding the spacer in the full-lock position by deflecting the operating arm downward. With the operating arm deflected, pull the spacer to the pre-set postition.

The illustration shows the spacer being moved from the full-lock position to the pre-set position.

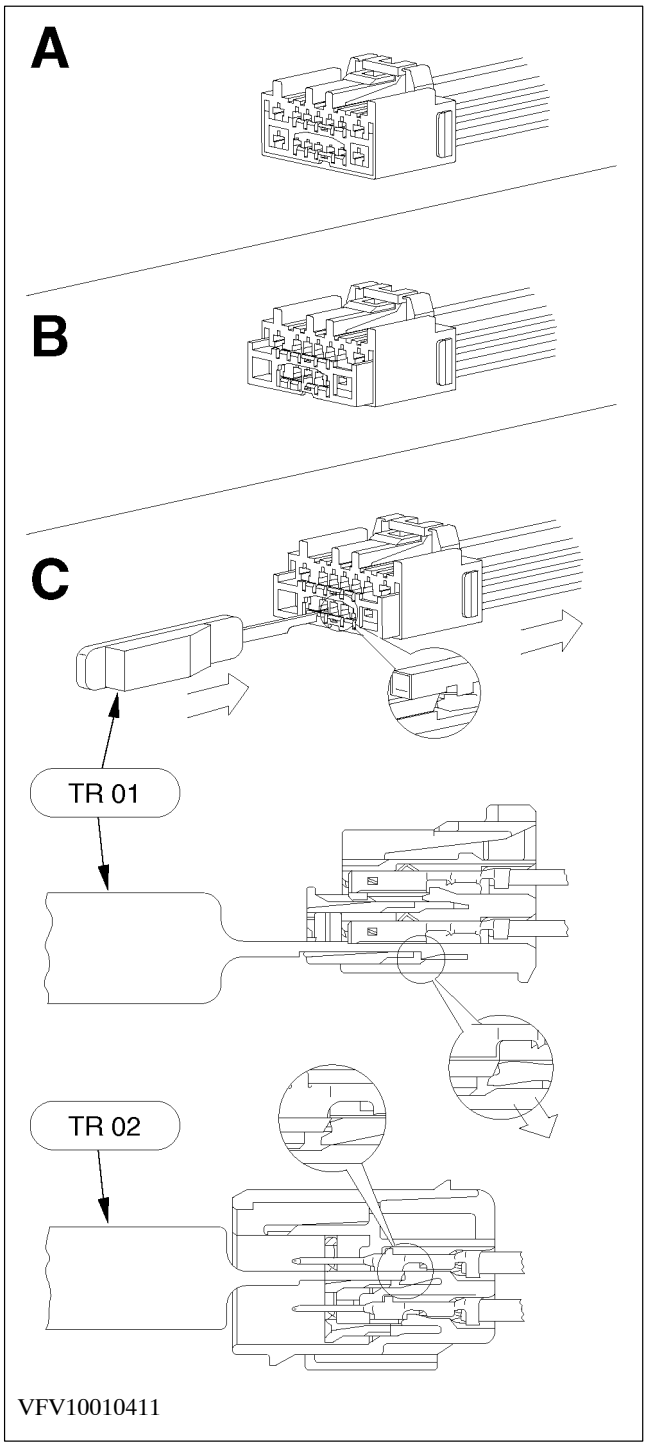

VFV10010411

Dismantling Unsealed YES-Connectors


Note: Spacer in full-lock position (A). To remove the pins pull the spacer to the pre-set position (B) as described in figure VFV10010410.

Push the applicable wire lightly to assure the terminal is fully forward in the terminal cavity.

Insert extractor TR 01 for male side or TR 02 for female side into the face of the terminal cavity. The tip of the tool must be positioned between the servicing tab of the flexible arm and the terminal.

Push the tool forward, automatically lifting the flexible arm. Utilisation of alternate tools will require the operator to manually deflect the flexible arm.

With the flexible arm deflected, pull the wire to remove the terminal from the cavity. If the terminal does not disengage easily from the housing, repeat the steps previously outlined.

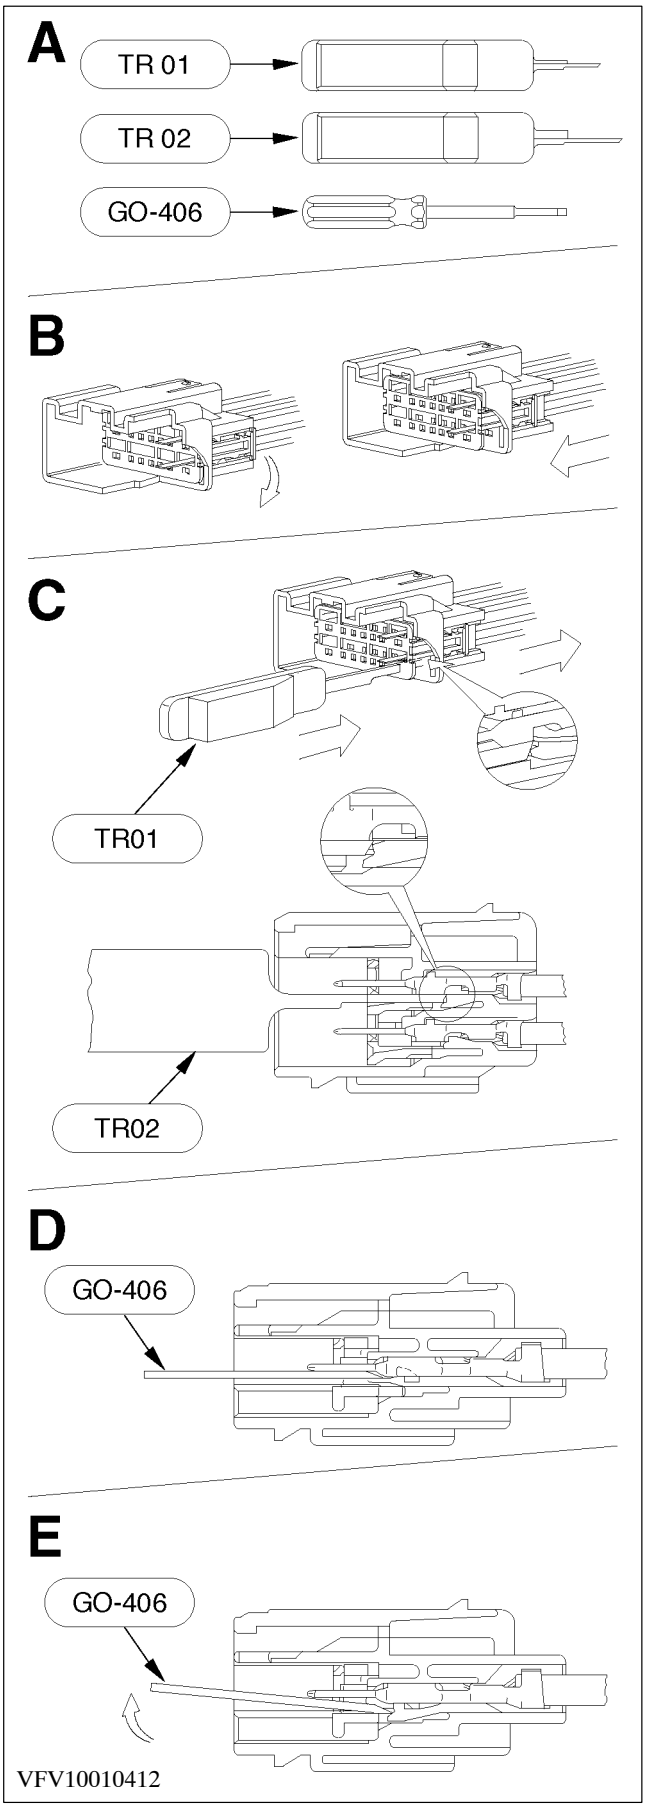


Dismantling YES-Hybrid-Connectors

Note: Three different releasing tolls are used (A). To remove the pins pull the spacer to the pre-set position (B) as described in figure VFV10010410.

To remove the smaller flat-pin terminals, push the wire lightly in the direction of the terminal insertion. After assuring the orientation of the removal tool insert extractor TR 01 (C) for male side or TR 02 (C) for female side between the terminal and the elastic arm along the guiding hole of the front holder. Push the extractor lightly. The lock between the beak and the hook will be released. Then pull the wire lightly from the housing.

To remove the larger flat-pin terminals, push the wire lightly in the direction of the terminal insertion. After assuring the orientation of the removal tool insert extractor GO-406 (D) between the terminal and the elastic arm along the guiding hole of the front holder. The lock between the beak and the hook is released by lifting extractor GO-406 (E). Then pull the wire lightly from the housing.

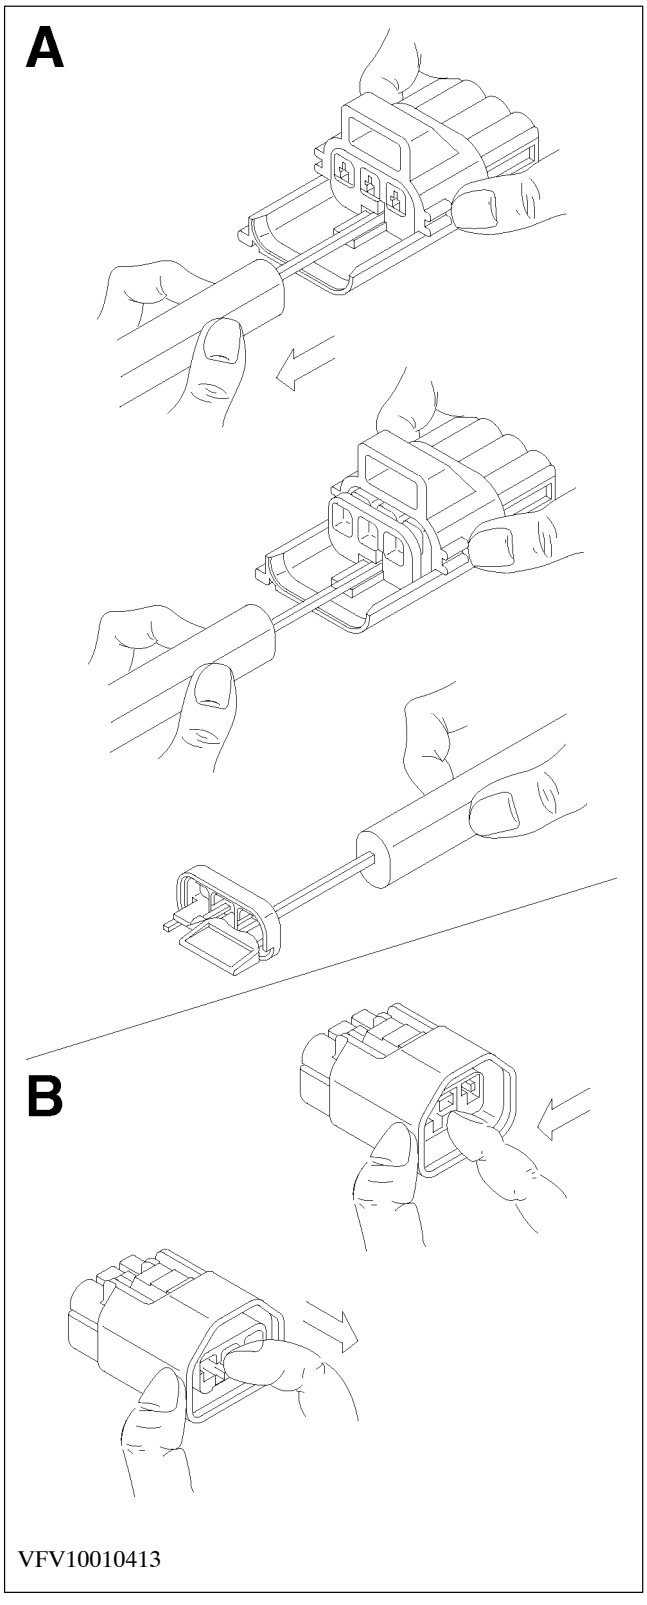


Dismantling Sealed YES-Connectors

A: Disengagement of front holder from the full-lock position (male)

Insert hook tool 1-35 into the slot provided. A slight pull of hook tool 1-35 in the direction of the arrow will release the spacer for terminal removal.

B: Disengagement of spacer from the full-lock position (female)

Release the lock holding the spacer in the full-lock position by deflecting the operating arm from right to left. With the operating arm deflected, pull the spacer to the pre-set position.

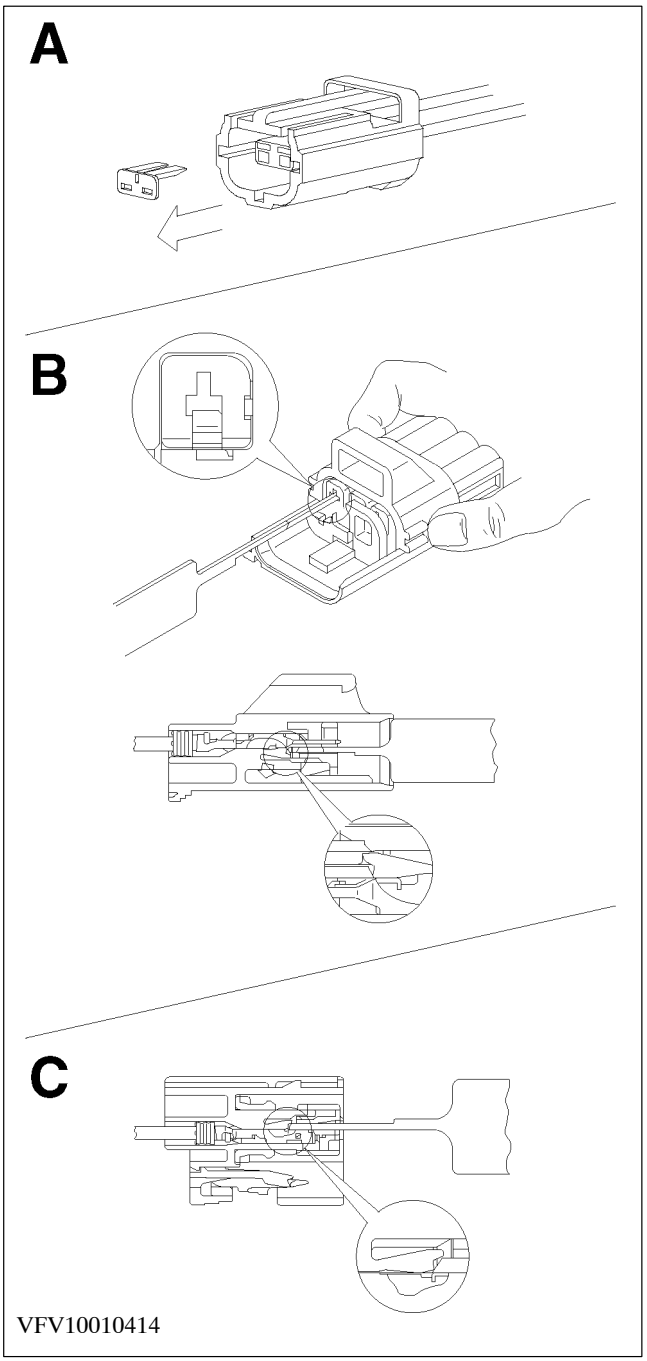

VFV10010414

Dismantling Sealed YES-Connectors


Note: Disengage the front holder and/or spacer as described in figure VFV10010413.

Push the applicable wire lightly to assure the terminal is fully forward in the terminal cavity.


Insert extractor TR 01 for male side or TR 02 for female side into the face of the terminal cavity as shown for male terminal. The tip of the tool must be positioned between the servicing tab of the flexible arm and the terminal.

Push the extractor forward, automatically lifting the flexible arm. Ultilisation of alternate extractors will require the operator to manually deflect the flexible arm.

With the flexible arm deflected, pull the wire to remove the terminal from the cavity. If the terminal does not disengage easily from the housing, repeat the steps previously outlined.

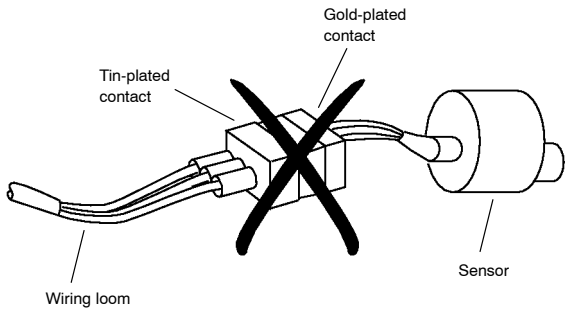

VFV10010415

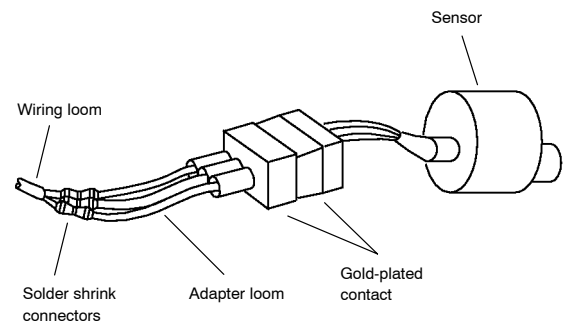

VFV10010416

Gold-plated contacts

Servicing sensors and connectors with gold-plated contacts for engine control systems

Connectors with gold-plated contacts have been introduced at various critical connections (current less than 1 mA, voltage under 5 V) in the engine control systems. Gold-plated contacts have significantly less resistance than the tin-plated contacts which have been used previously. Uninterrupted, interference-free signal transmission to the engine control unit can thus be guaranteed.


Note: Gold-plated contacts must never be connected with tin-plated contacts (figure VFV10010415). Not only can the gold plating be damaged, but the resulting resistance is much higher than either a gold-gold connection or a tin-tin connection.

The contacts which are needed to repair the gold-plated connections can be obtained as an addition to the wiring loom repair kit from Löwener. The addition to the kit includes gold-plated contacts with white pigtails and a tube of special grease. Connectors with gold-plated contacts are protected by a special grease which is applied during production and therefore must never be treated with lithium grease.


If a connector or a sensor needs to be replaced, the new replacement may include gold-plated contacts.

Sensors with gold-plated contacts must only be replaced with those which also have gold-plated contacts.

If a sensor with tin-plated contacts is to be replaced with a new sensor with gold-plated contacts, a special adapter loom must be used (figure VFV10010416). The same applies to replacement wiring looms with gold-plated contacts which are being connected to sensors with tin-plated contacts.

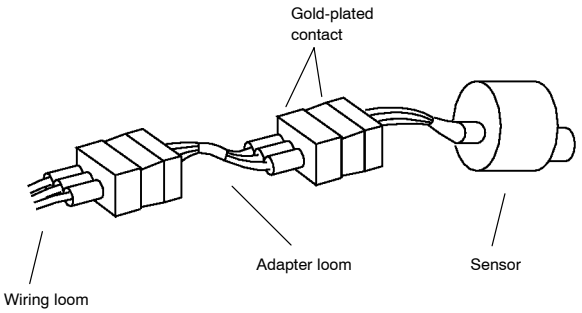

VFV10010417

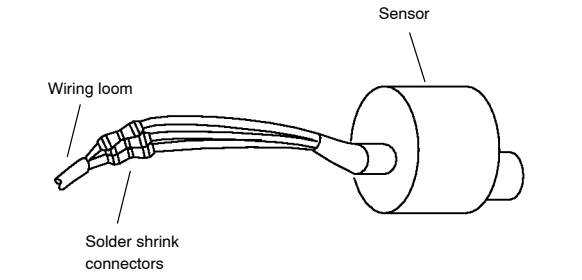


VFV10010418

The adapter loom for the throttle position sensor (TPS) and the camshaft position sensor must be attached with solder shrink connectors (figure VFV10010416). The adapter loom for the crankshaft position sensor has a connector at both ends and only needs to be plugged in between the sensor and the wiring loom (figure VFV10010417).

The throttle position sensor (TPS) can be replaced with a new sensor (with gold-plated contacts) by cutting the wiring loom, removing the connector and attaching the wires back together with solder shrink connectors (figure VFV10010418).

Only solder shrink connectors should be used to attach cut wires together (order from Ford parts). The solder shrink connectors that are available in the wiring loom repair kit from Löwener are approximately the same.

Wiring Harness Overview

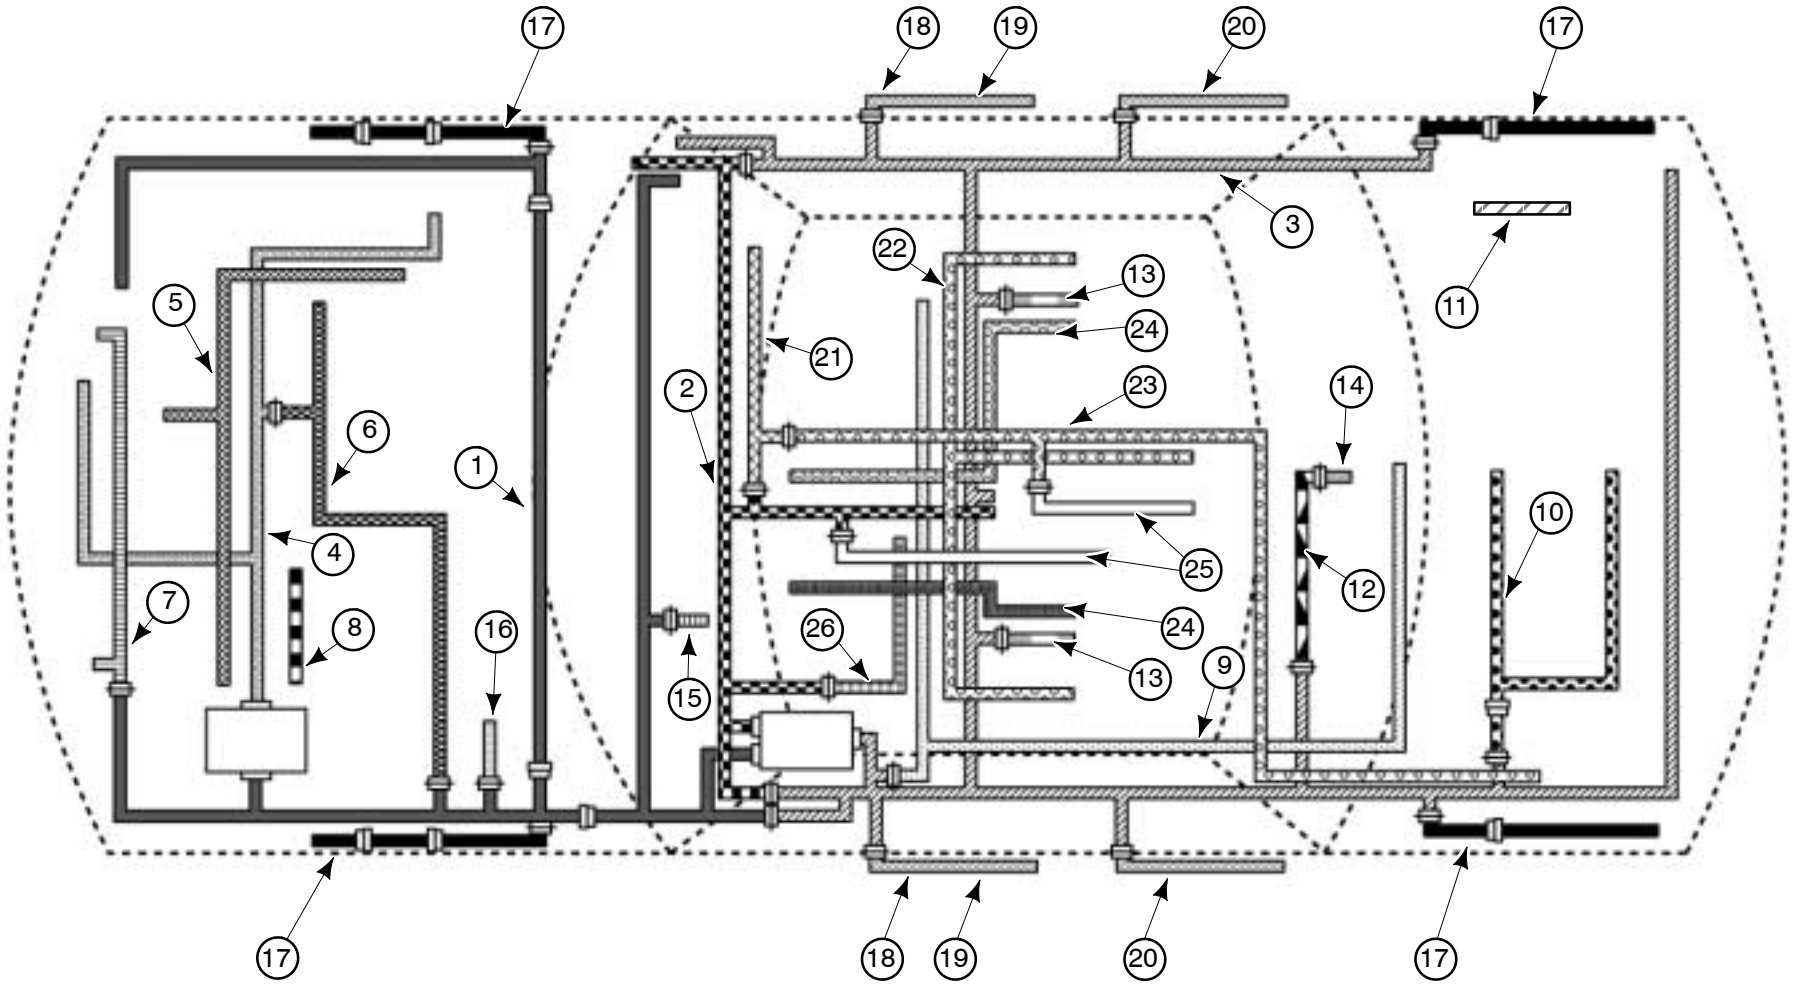


Connector


Grommet

Item	Part Number	Description
1	14K733	**Wiring harness – Engine compartment**
2	14K024	**Wiring harness – Dash panel**
3	14A005	**Wiring harness – Body Main**
4	12A522	**Wiring harness – Engine control**
5	14300	**Wiring harness – Battery output**
6	9H589	**Wiring harness – Engine control**
7	15A211	**Wiring harness – Fog lamp jumper**
8	14301	**Wiring harness – Engine ground**
9	14335	**Wiring harness – Interior illumination**
10	18C619	**Wiring harness – Heated rear window**
11	18C620	**Wiring harness – Heated rear window ground**
12	14406	**Wiring harness – Fuel tank sender**
13	14K155	**Wiring harness – Side air bag**
14	9A340	**Wiring harness – Fuel pump**
15	13A612	**Wiring harness – Stop lamp switch**
16	6B018	**Wiring harness – Engine block heater**
17	2B325	**Wiring harness – Brake warning switch**
18	14A584	**Wiring harness – Doors**
19	14K138	**Wiring harness – Passenger door**
20	14240	**Wiring harness – Rear doors**
21	10E925	**Wiring harness – Navigation system**
22	14B067A	**Wiring harness – Rear seat entertainment**
23	14B067B	**Wiring harness – Rear seat entertainment**
24	18C873	**Wiring harness – Radio to CD player**
25	14K006	**Wiring harness – Cigar lighter**
26	19A442	**Wiring harness – Mobile telephone**


Anti–Lock Control – before 08/2004

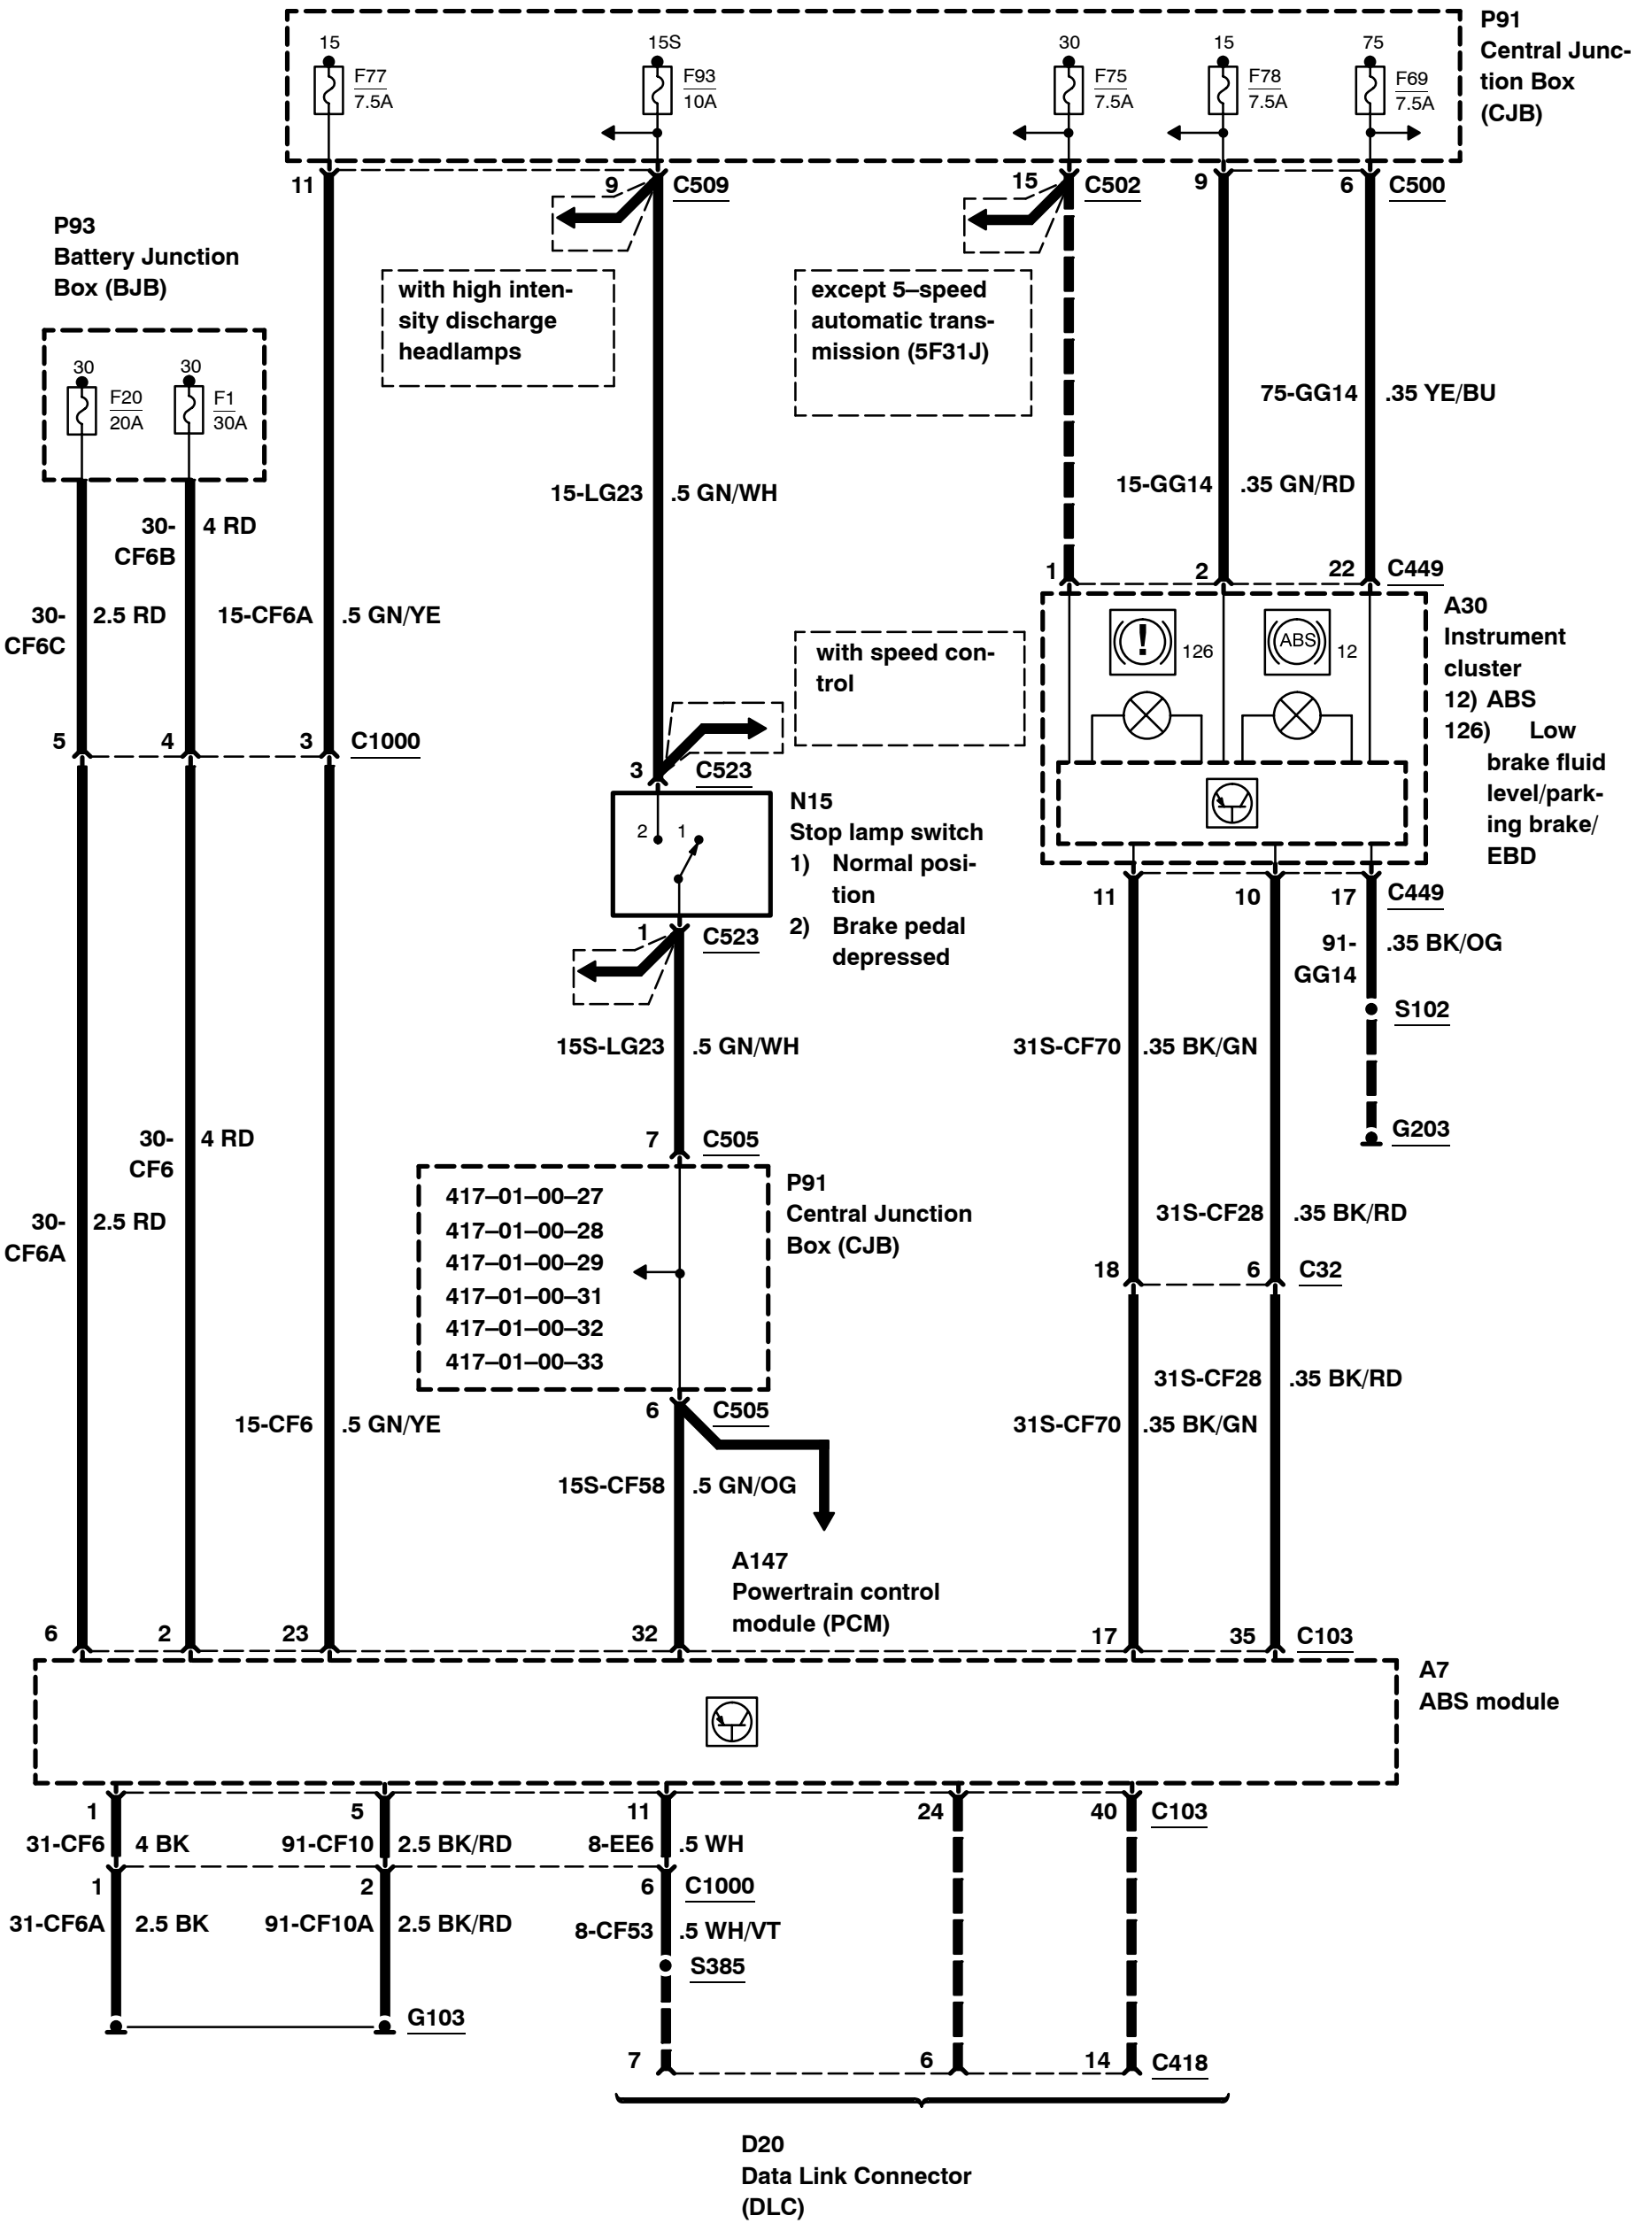


Anti–Lock Control – Bosch 8.0

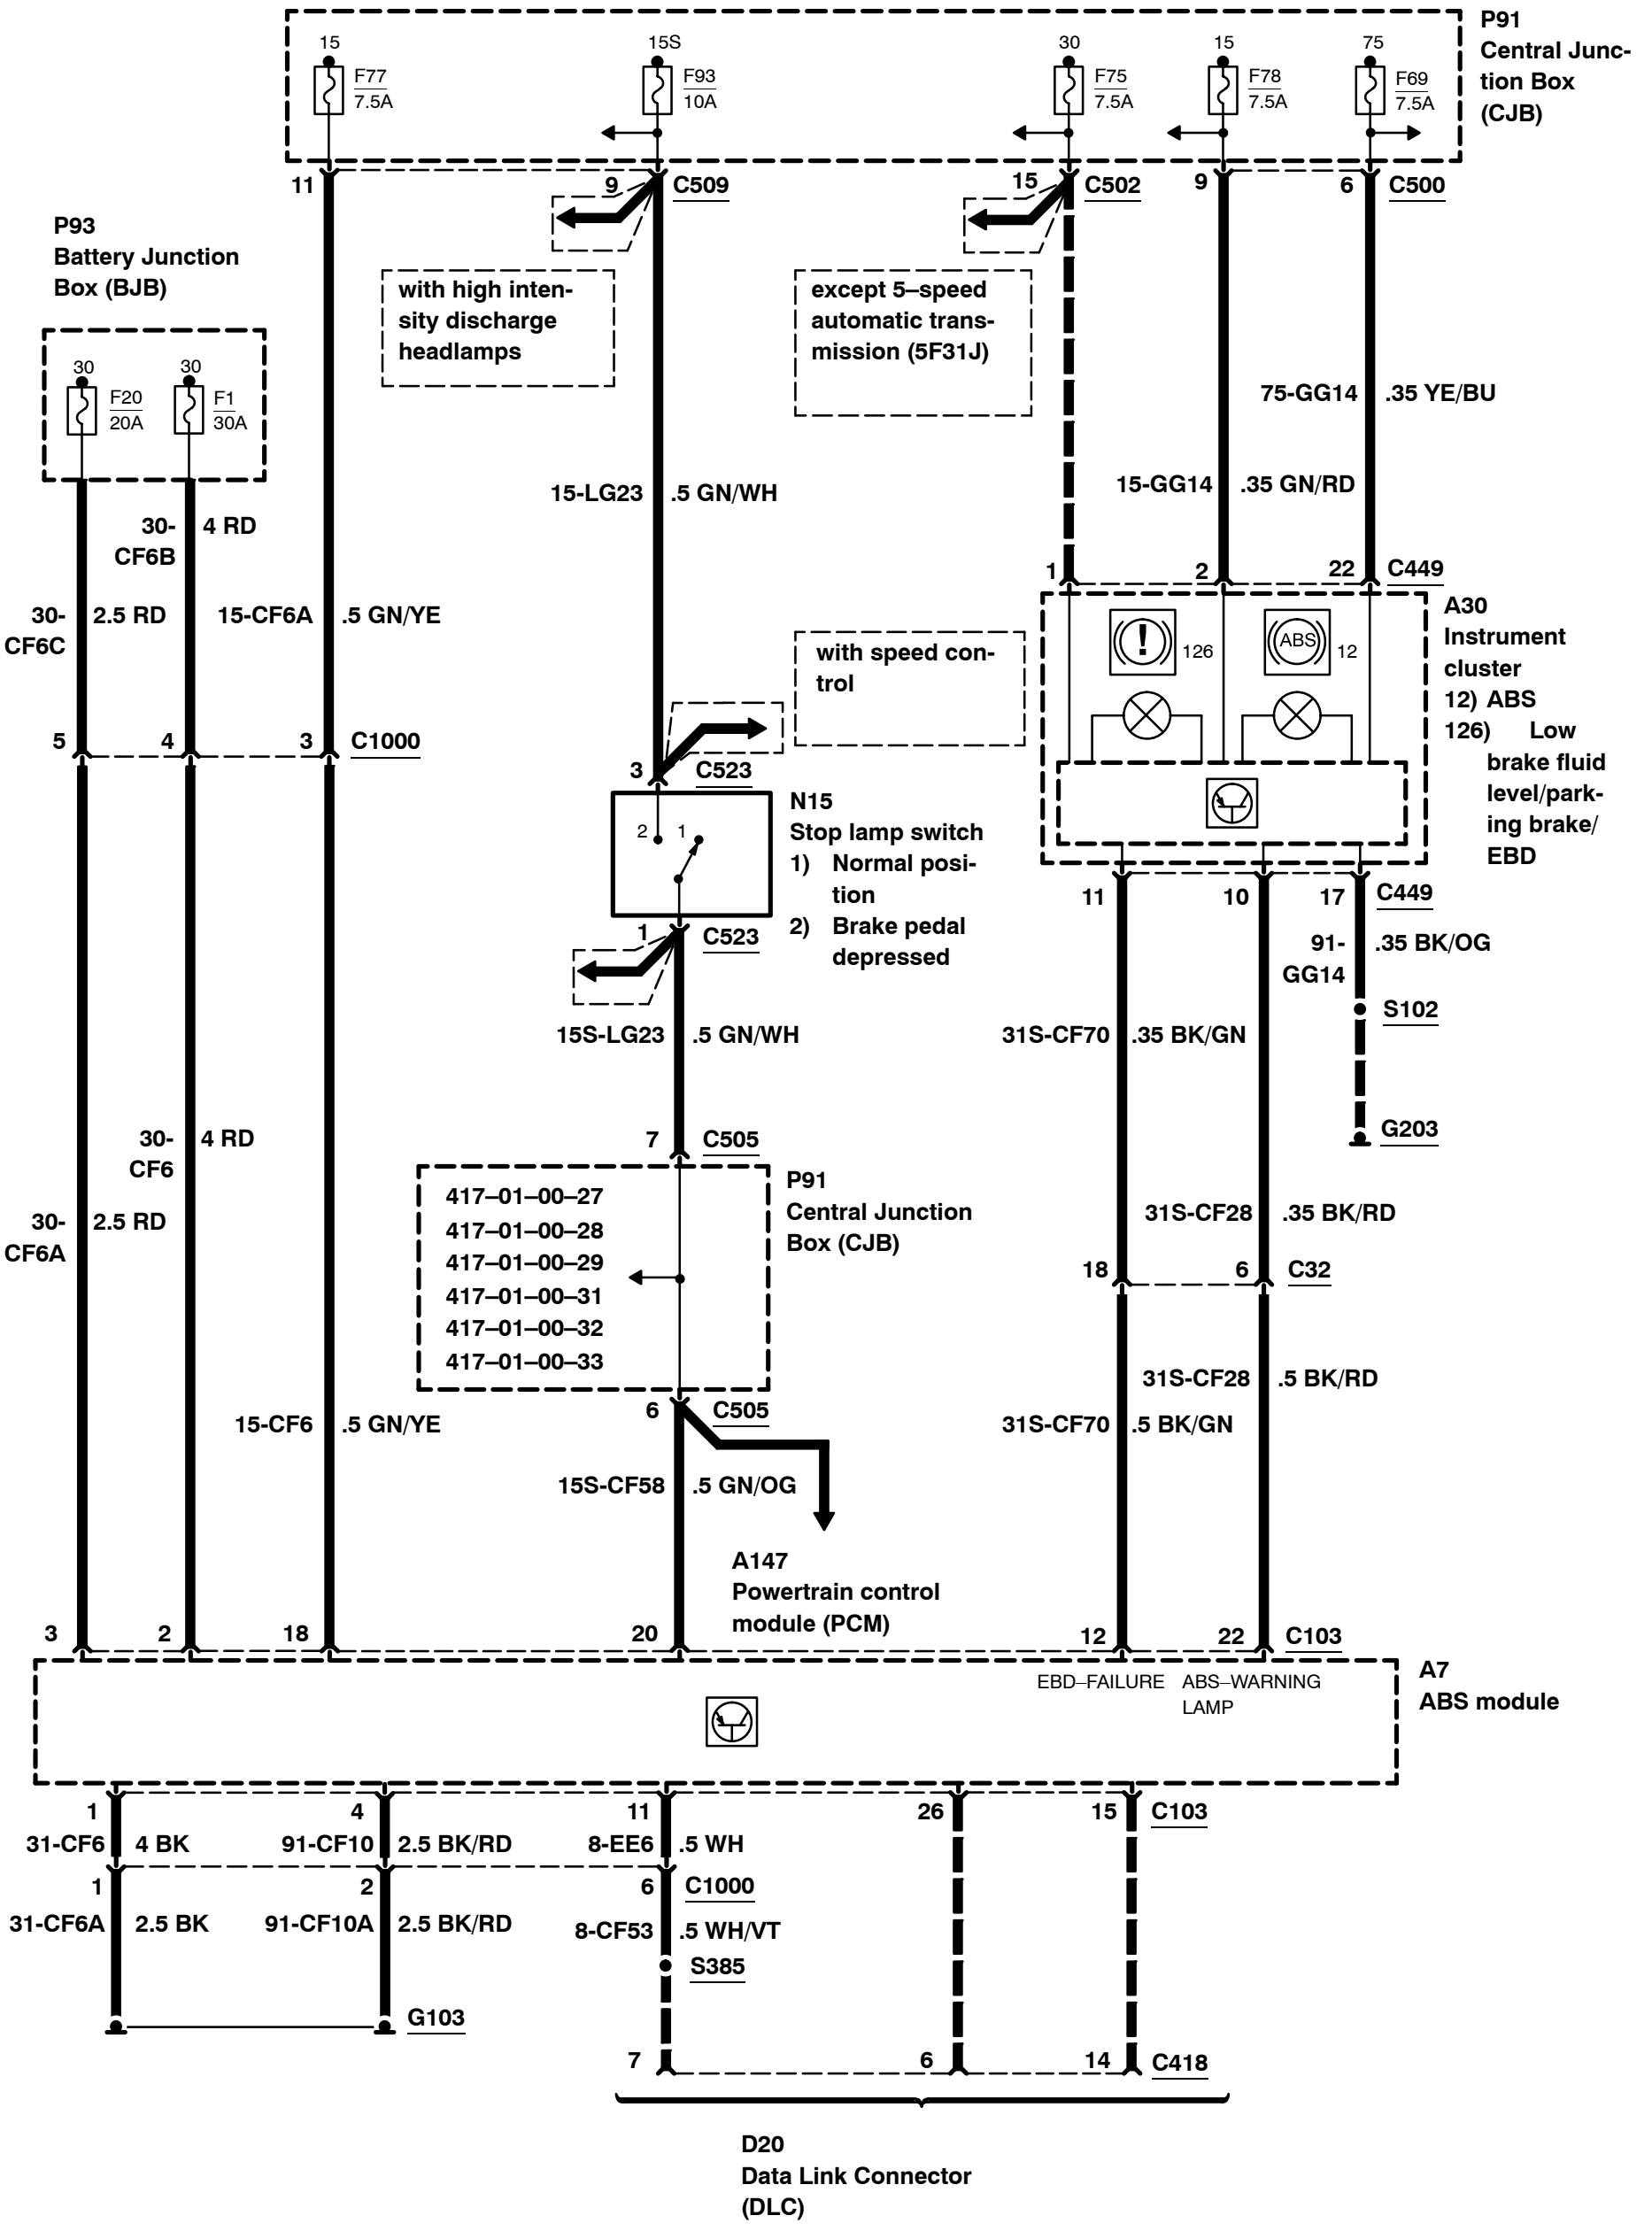


Anti–Lock Control – before 08/2004

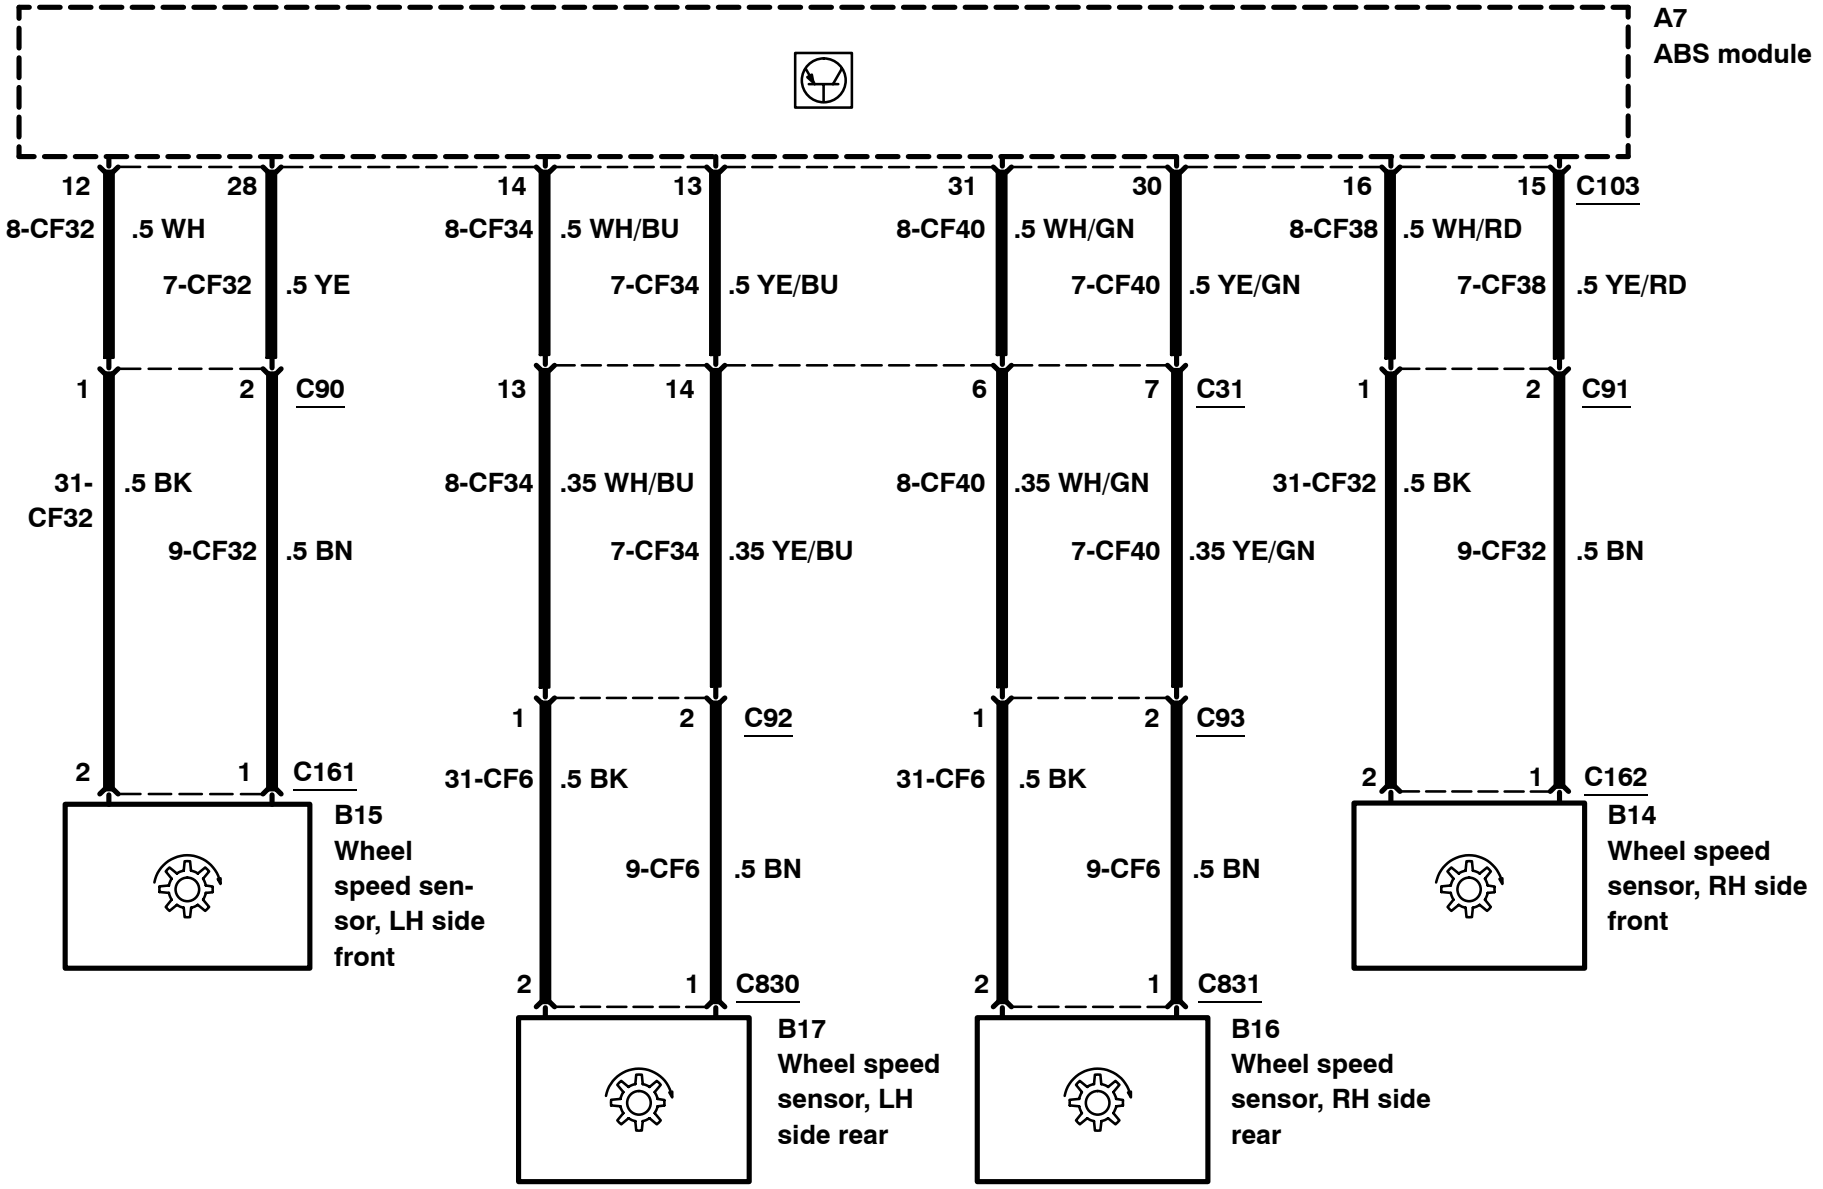


Anti–Lock Control – Bosch 8.0

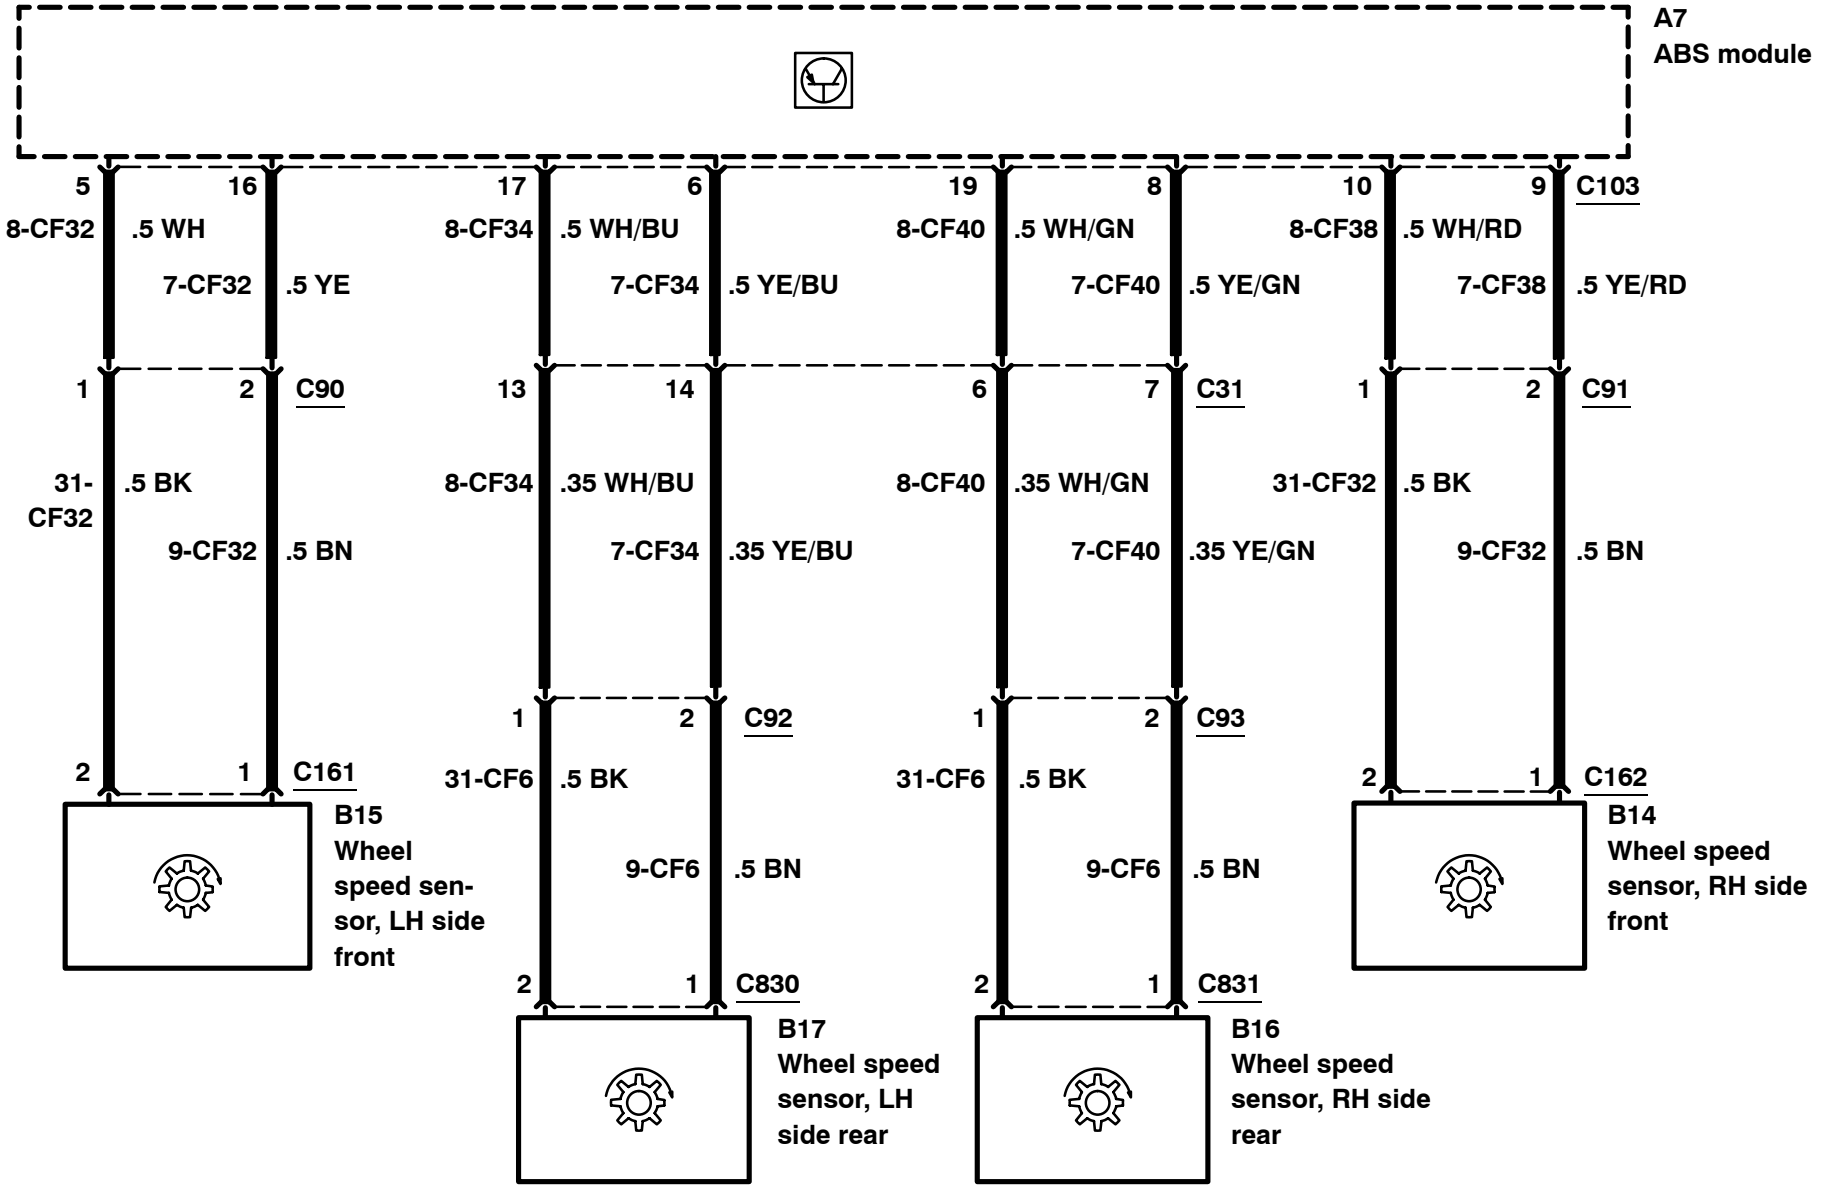


Anti–Lock Control – Traction Control and Stability Assist

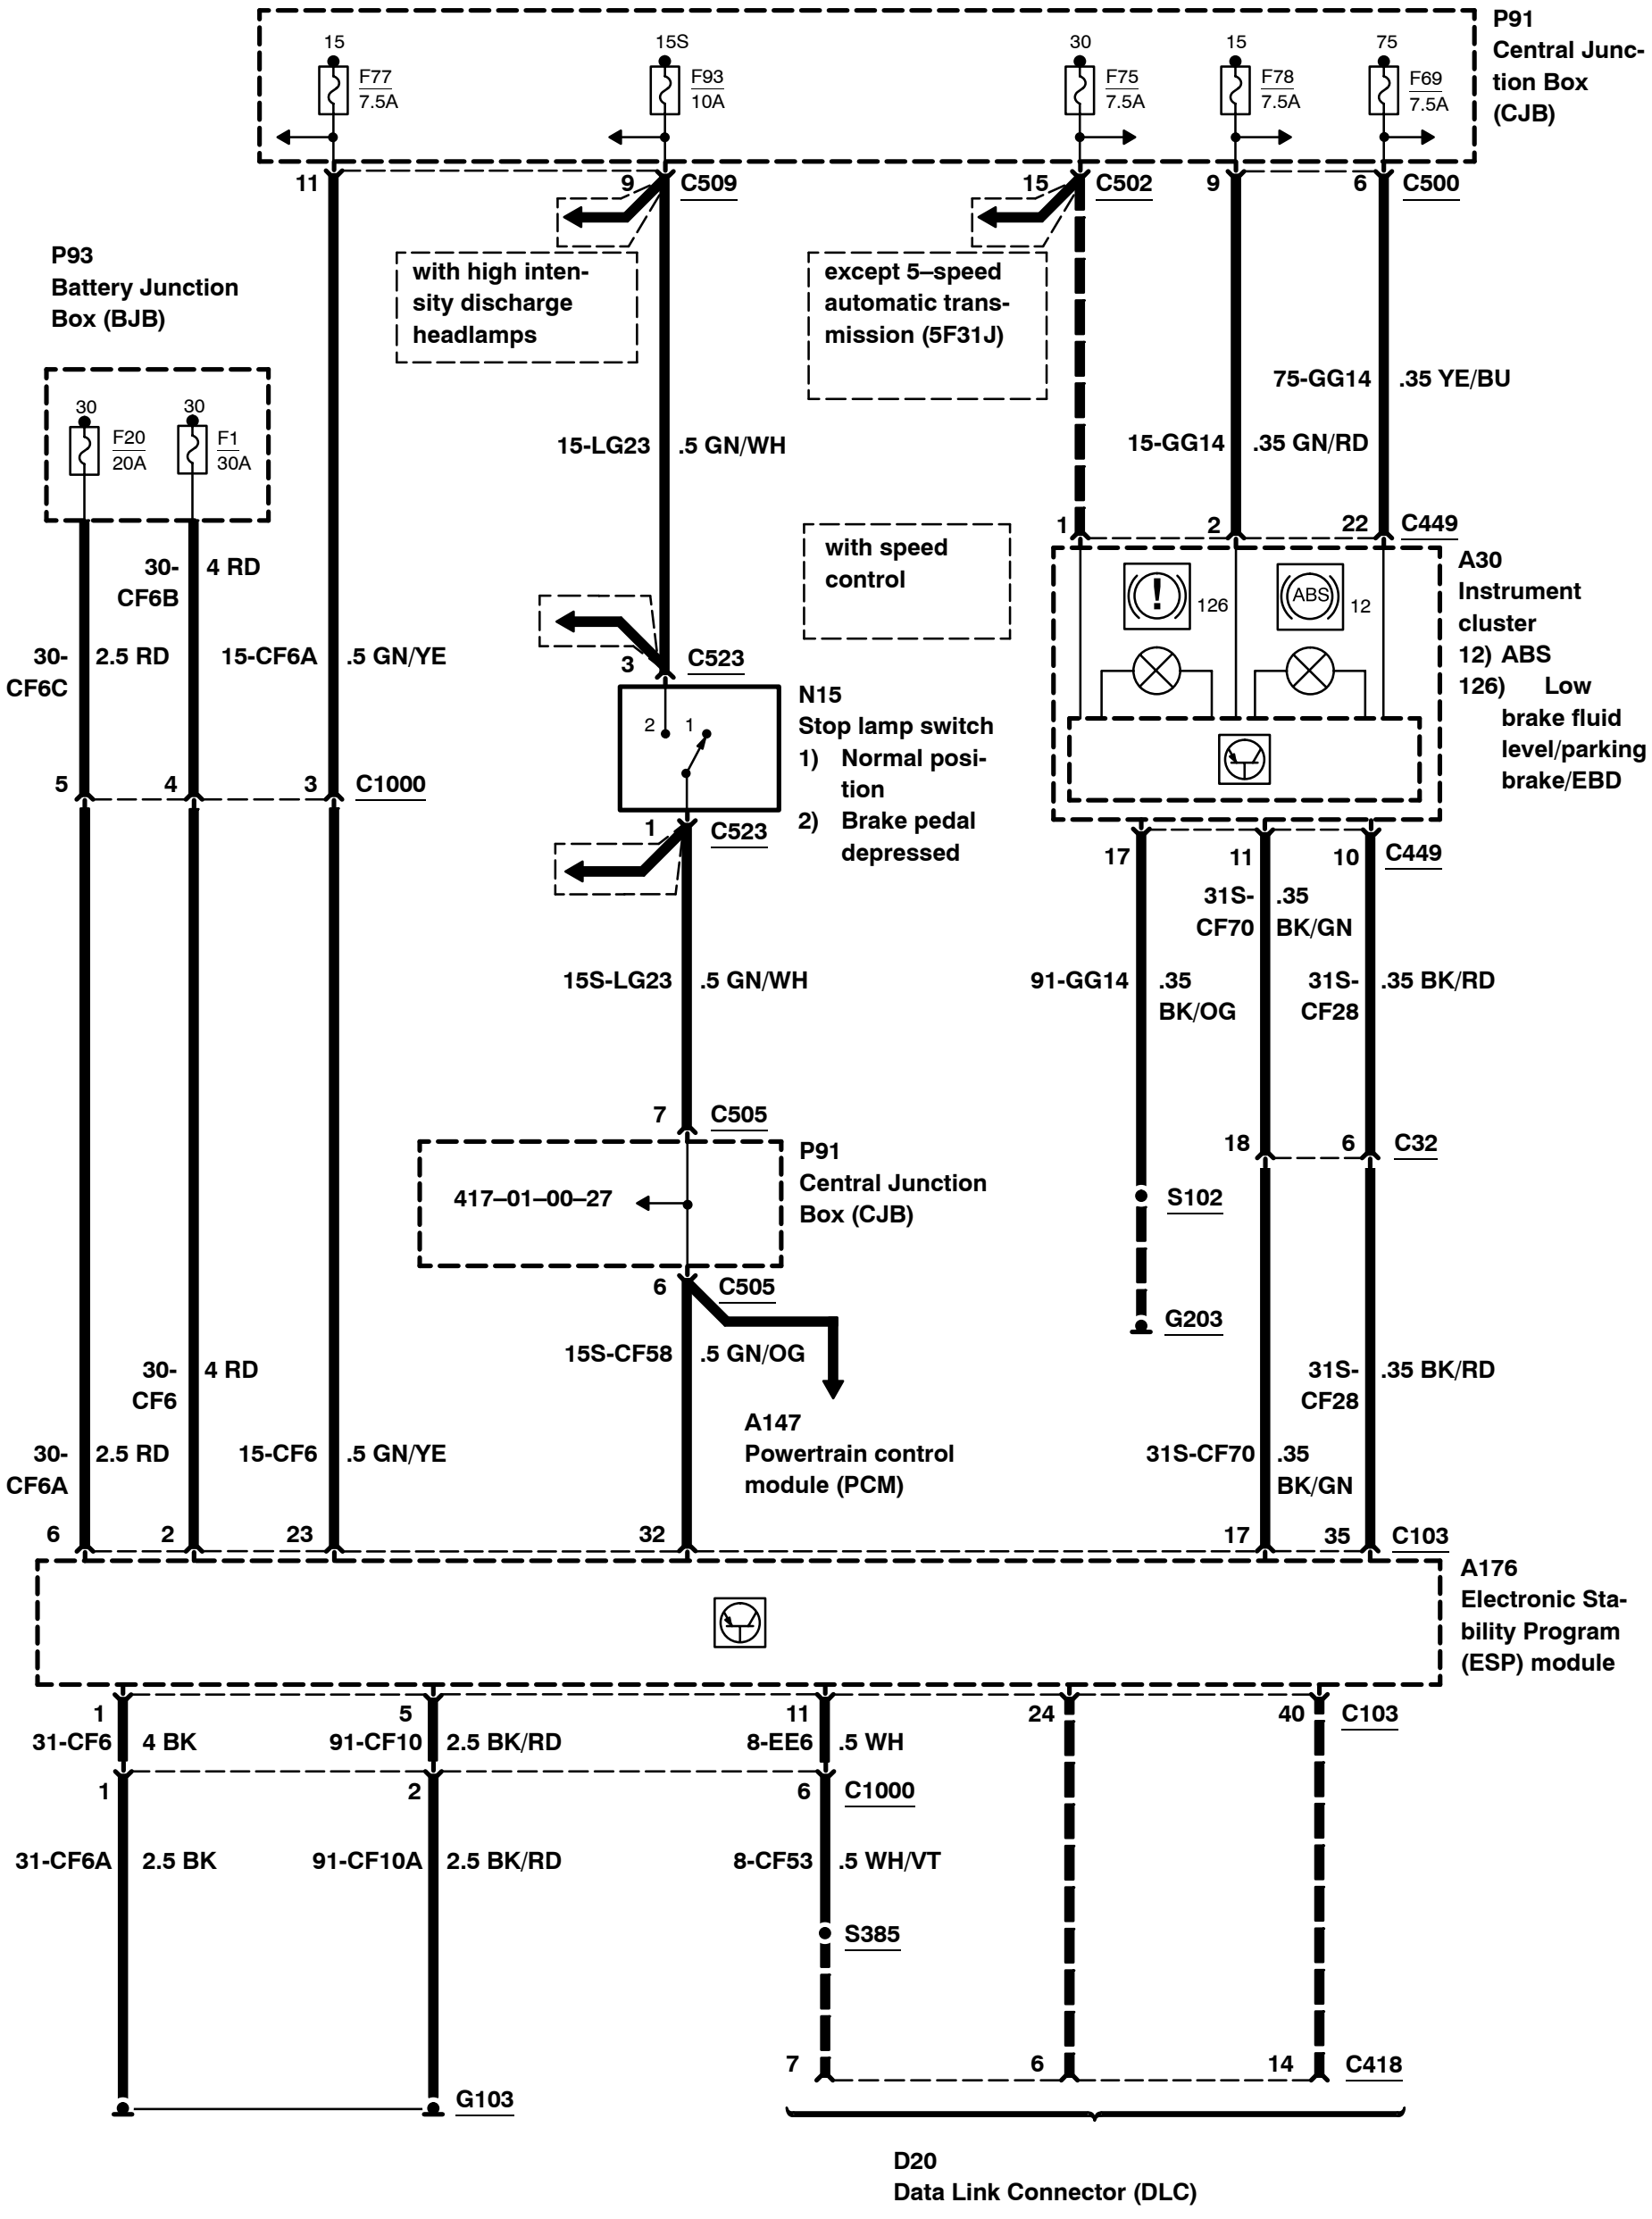


Anti–Lock Control – Traction Control and Stability Assist

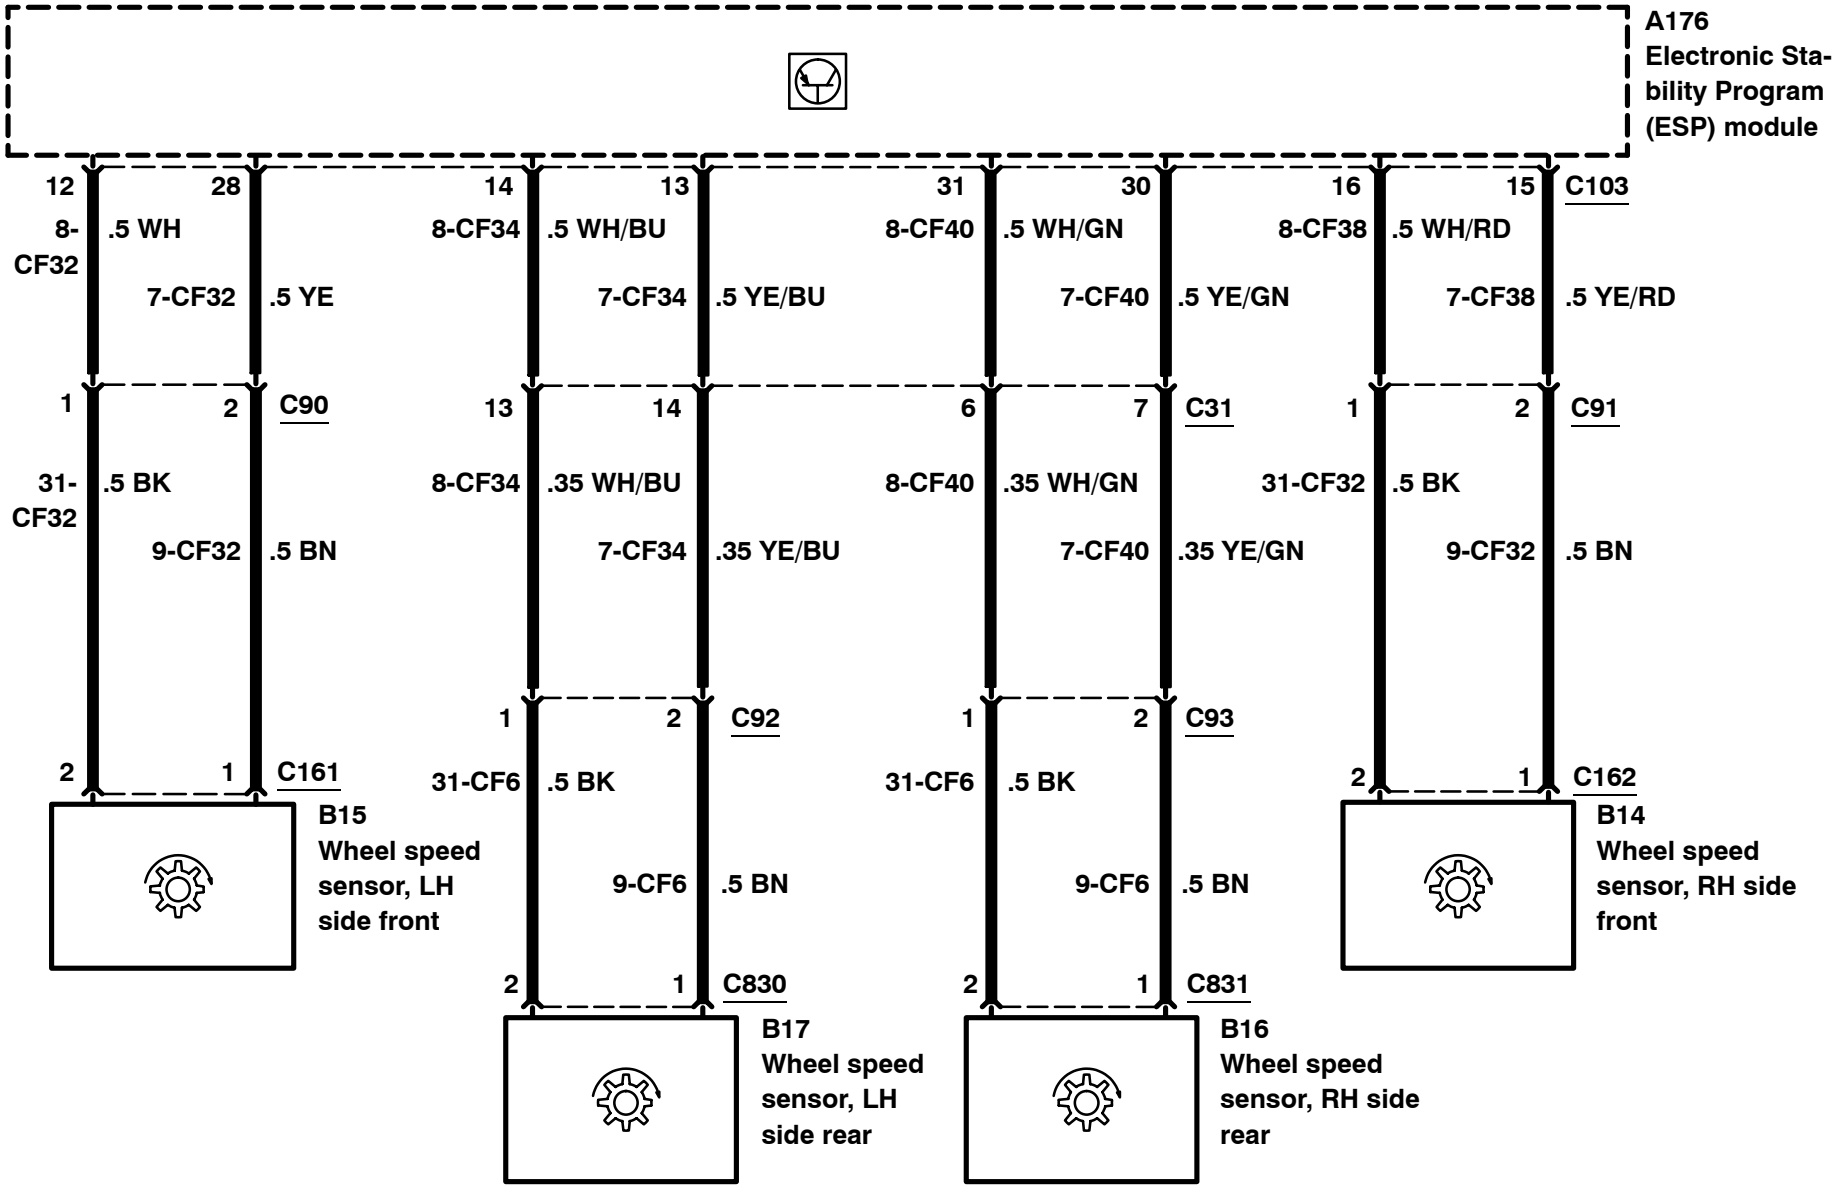


Anti–Lock Control – Traction Control and Stability Assist

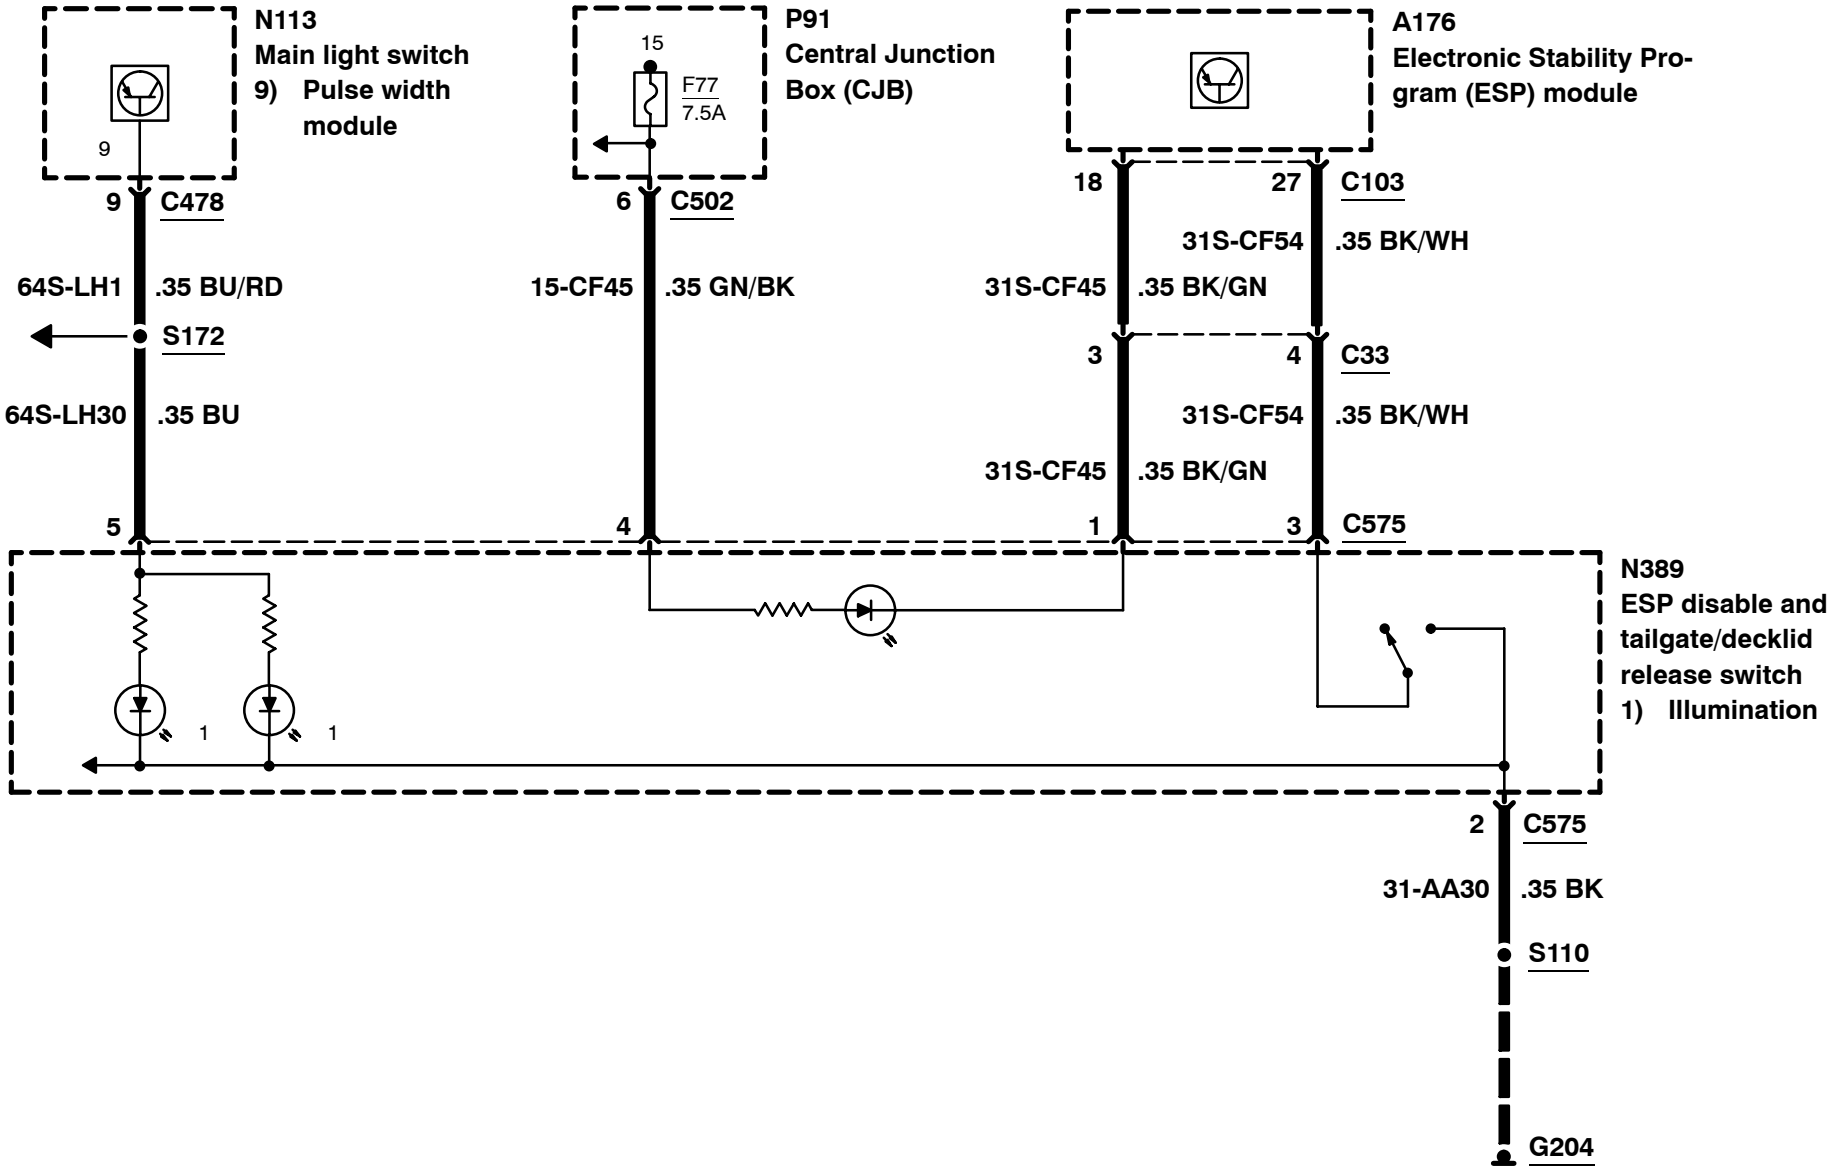


Anti–Lock Control – Traction Control and Stability Assist – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004

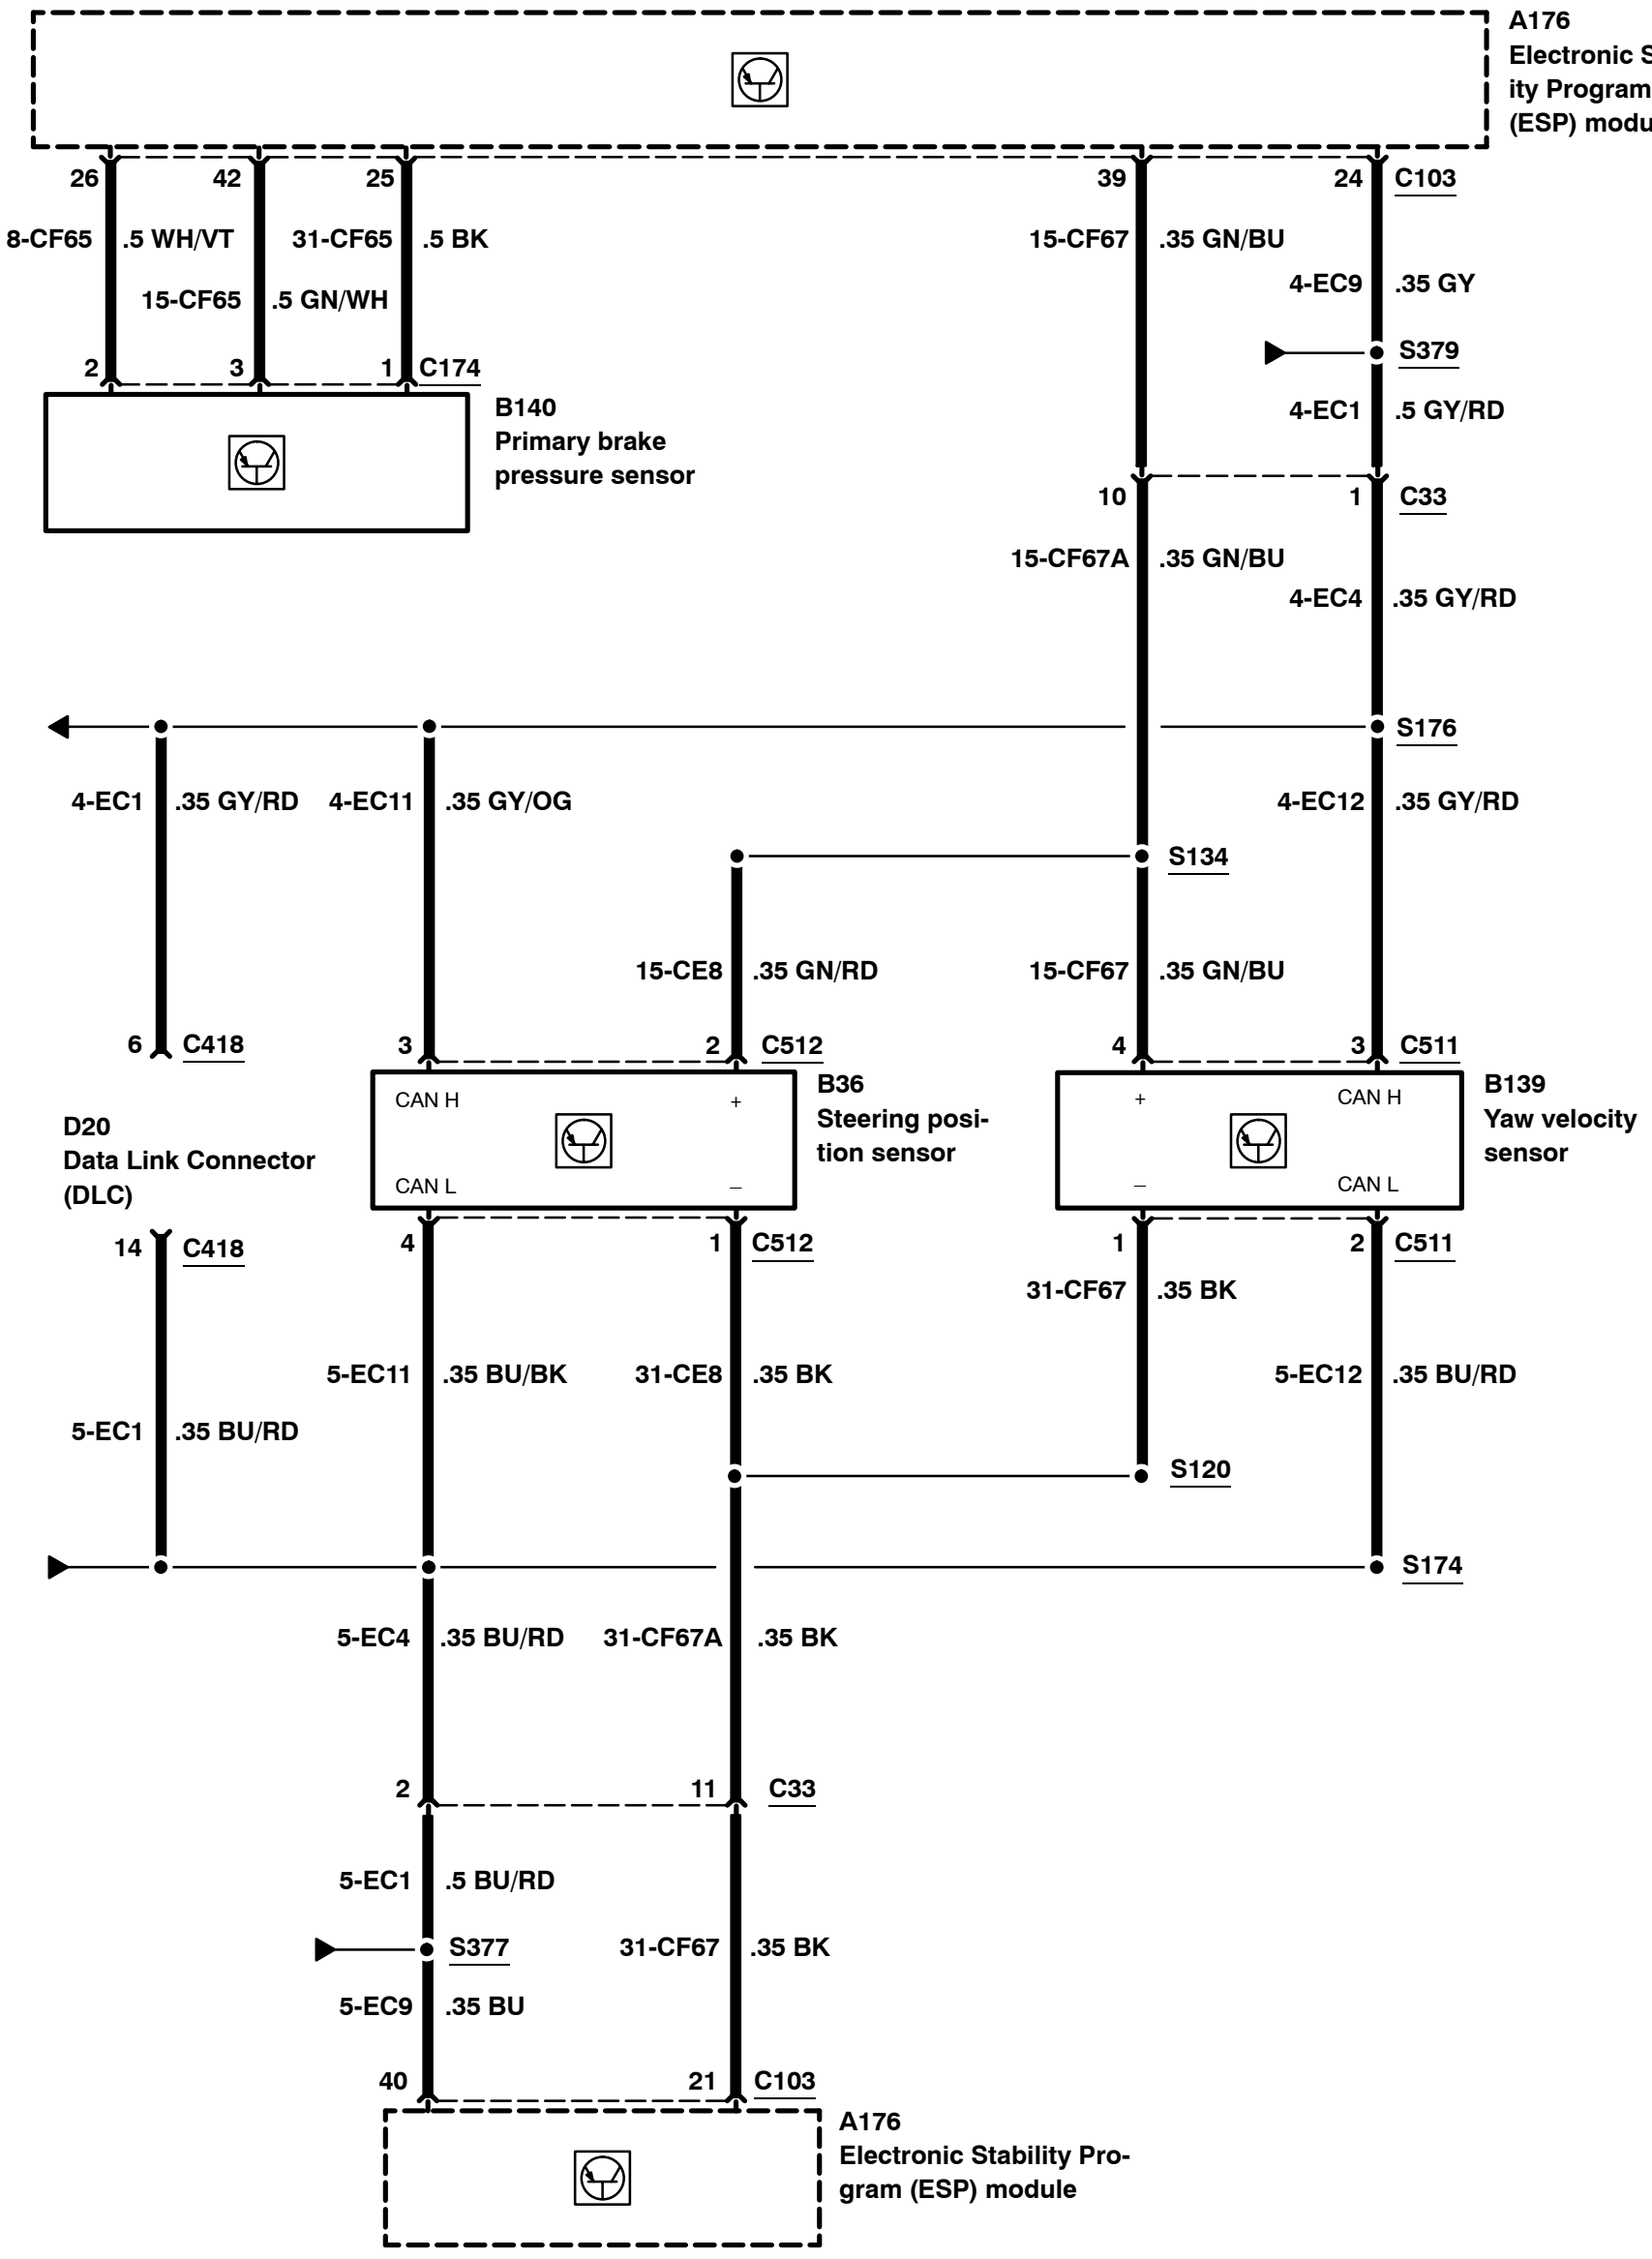


Anti–Lock Control – Traction Control and Stability Assist – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004

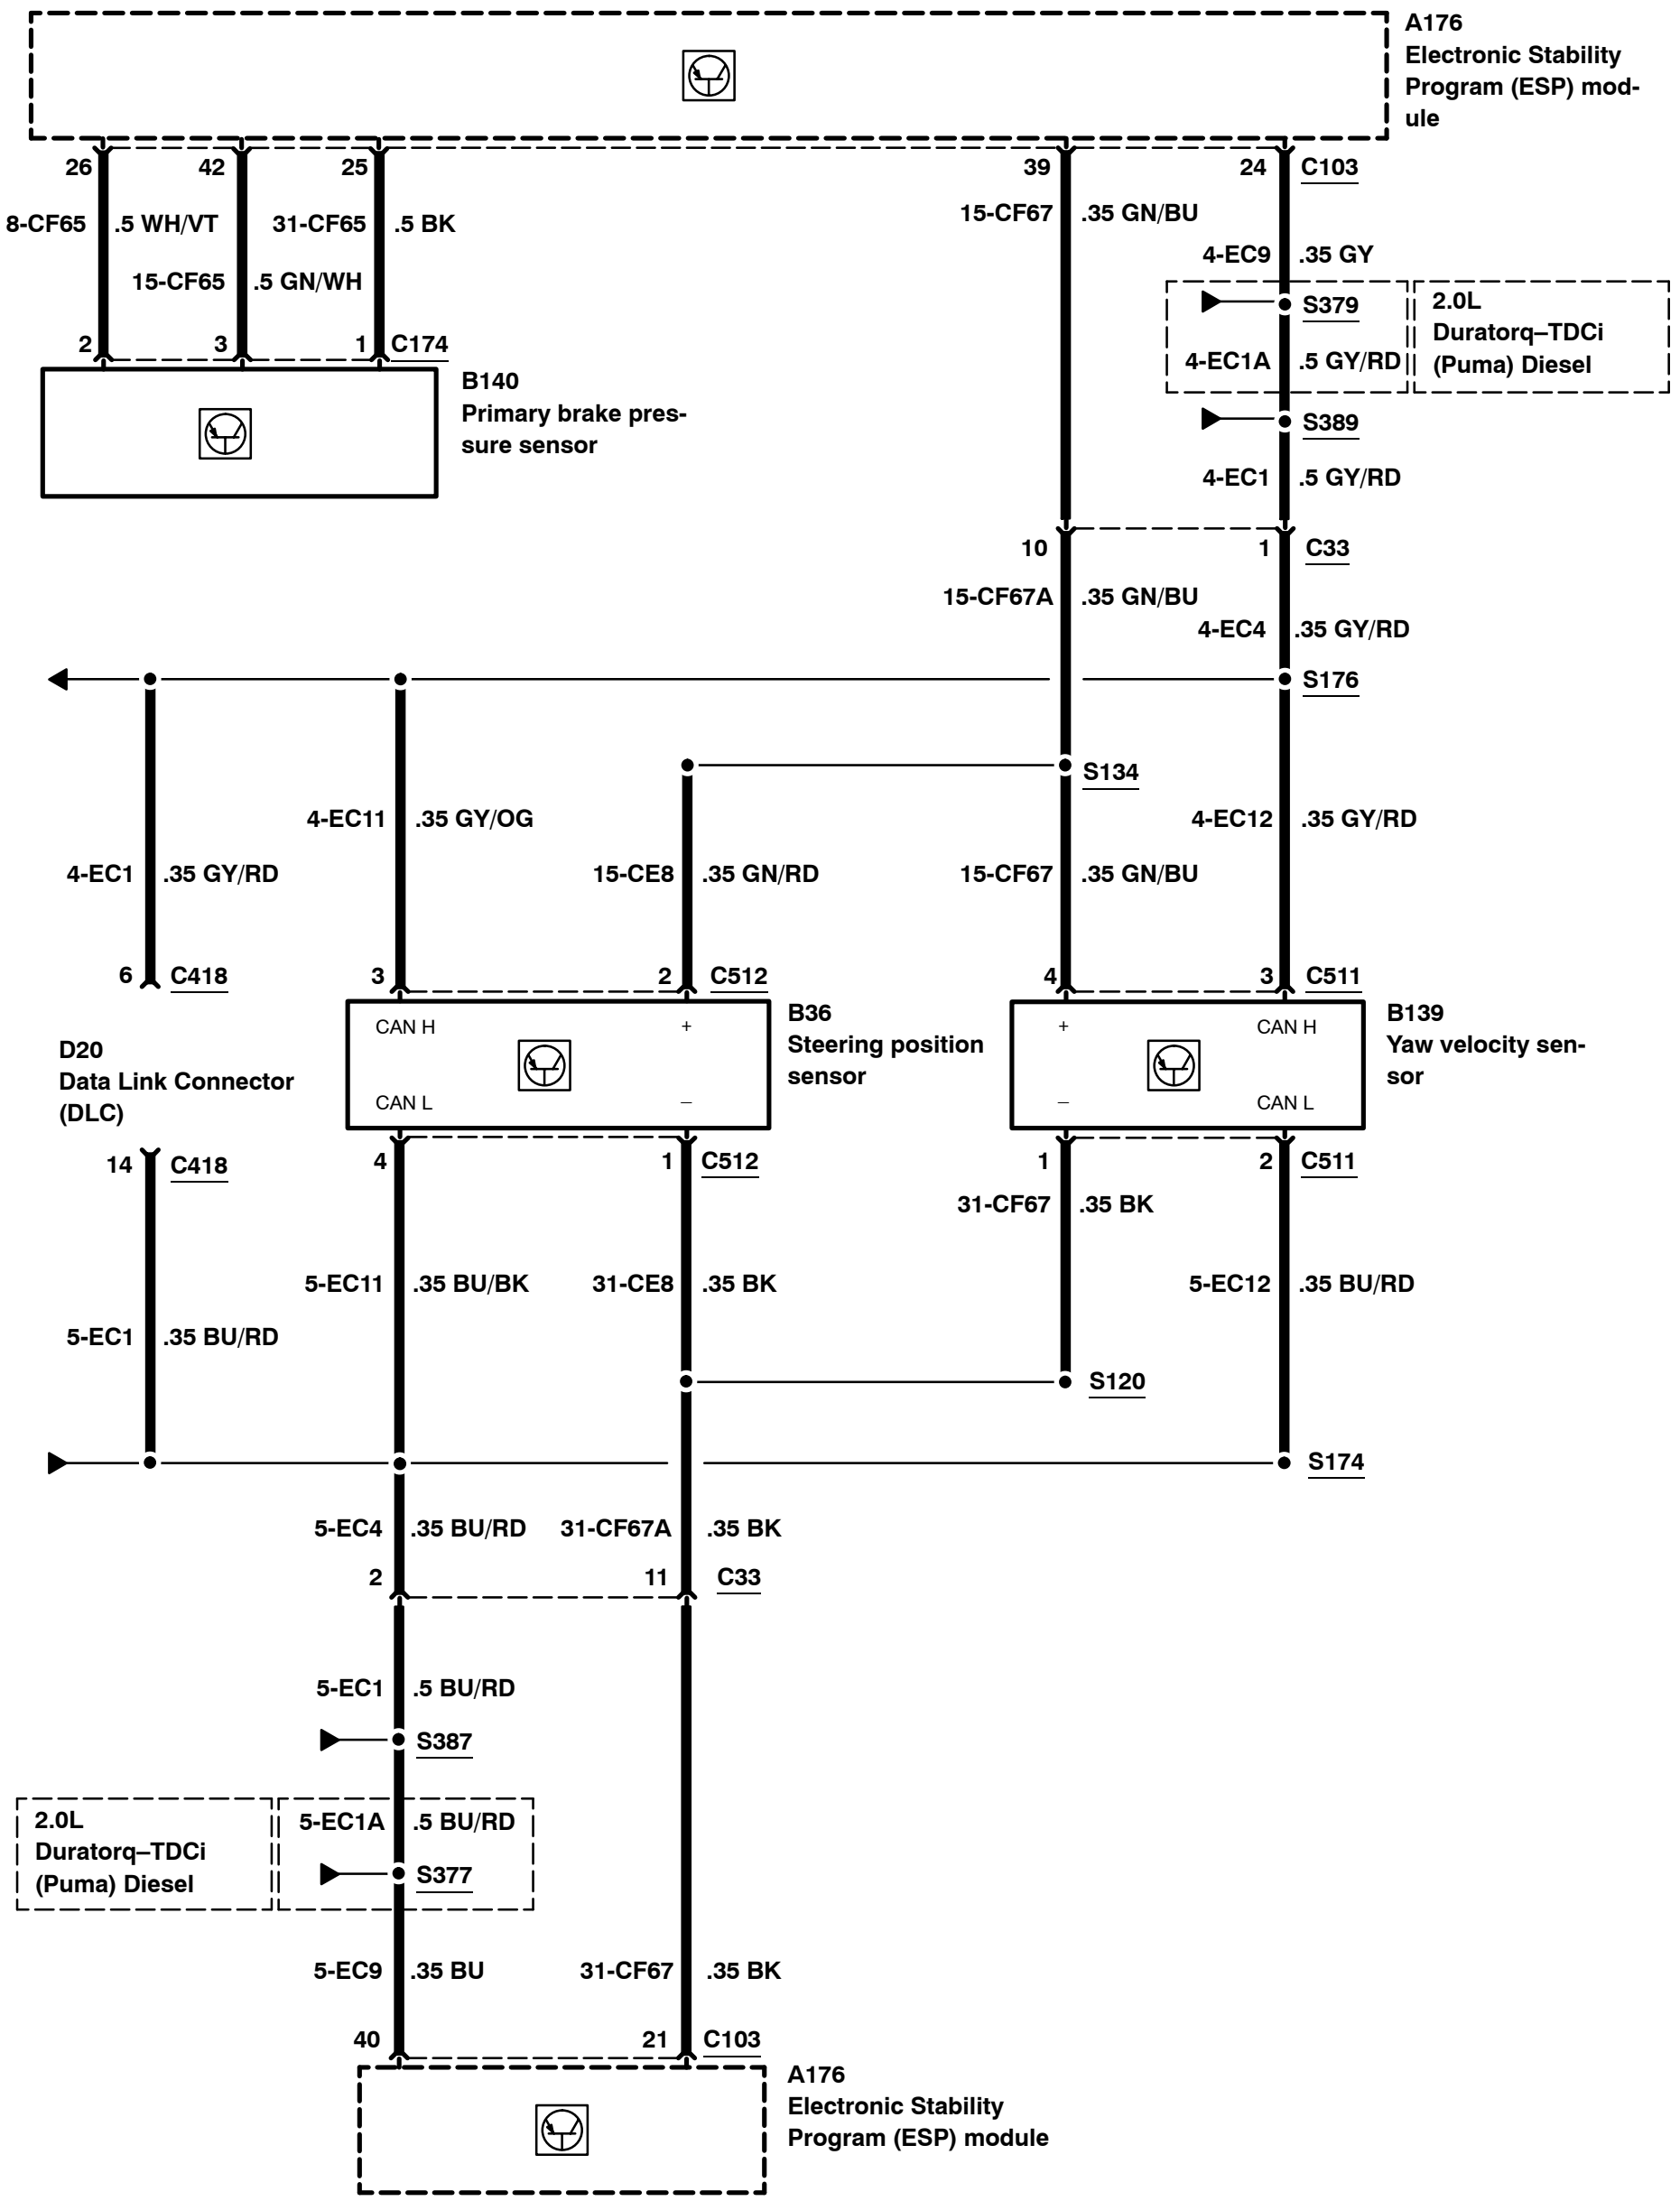


Anti–Lock Control – Traction Control and Stability Assist – as of 08/2004

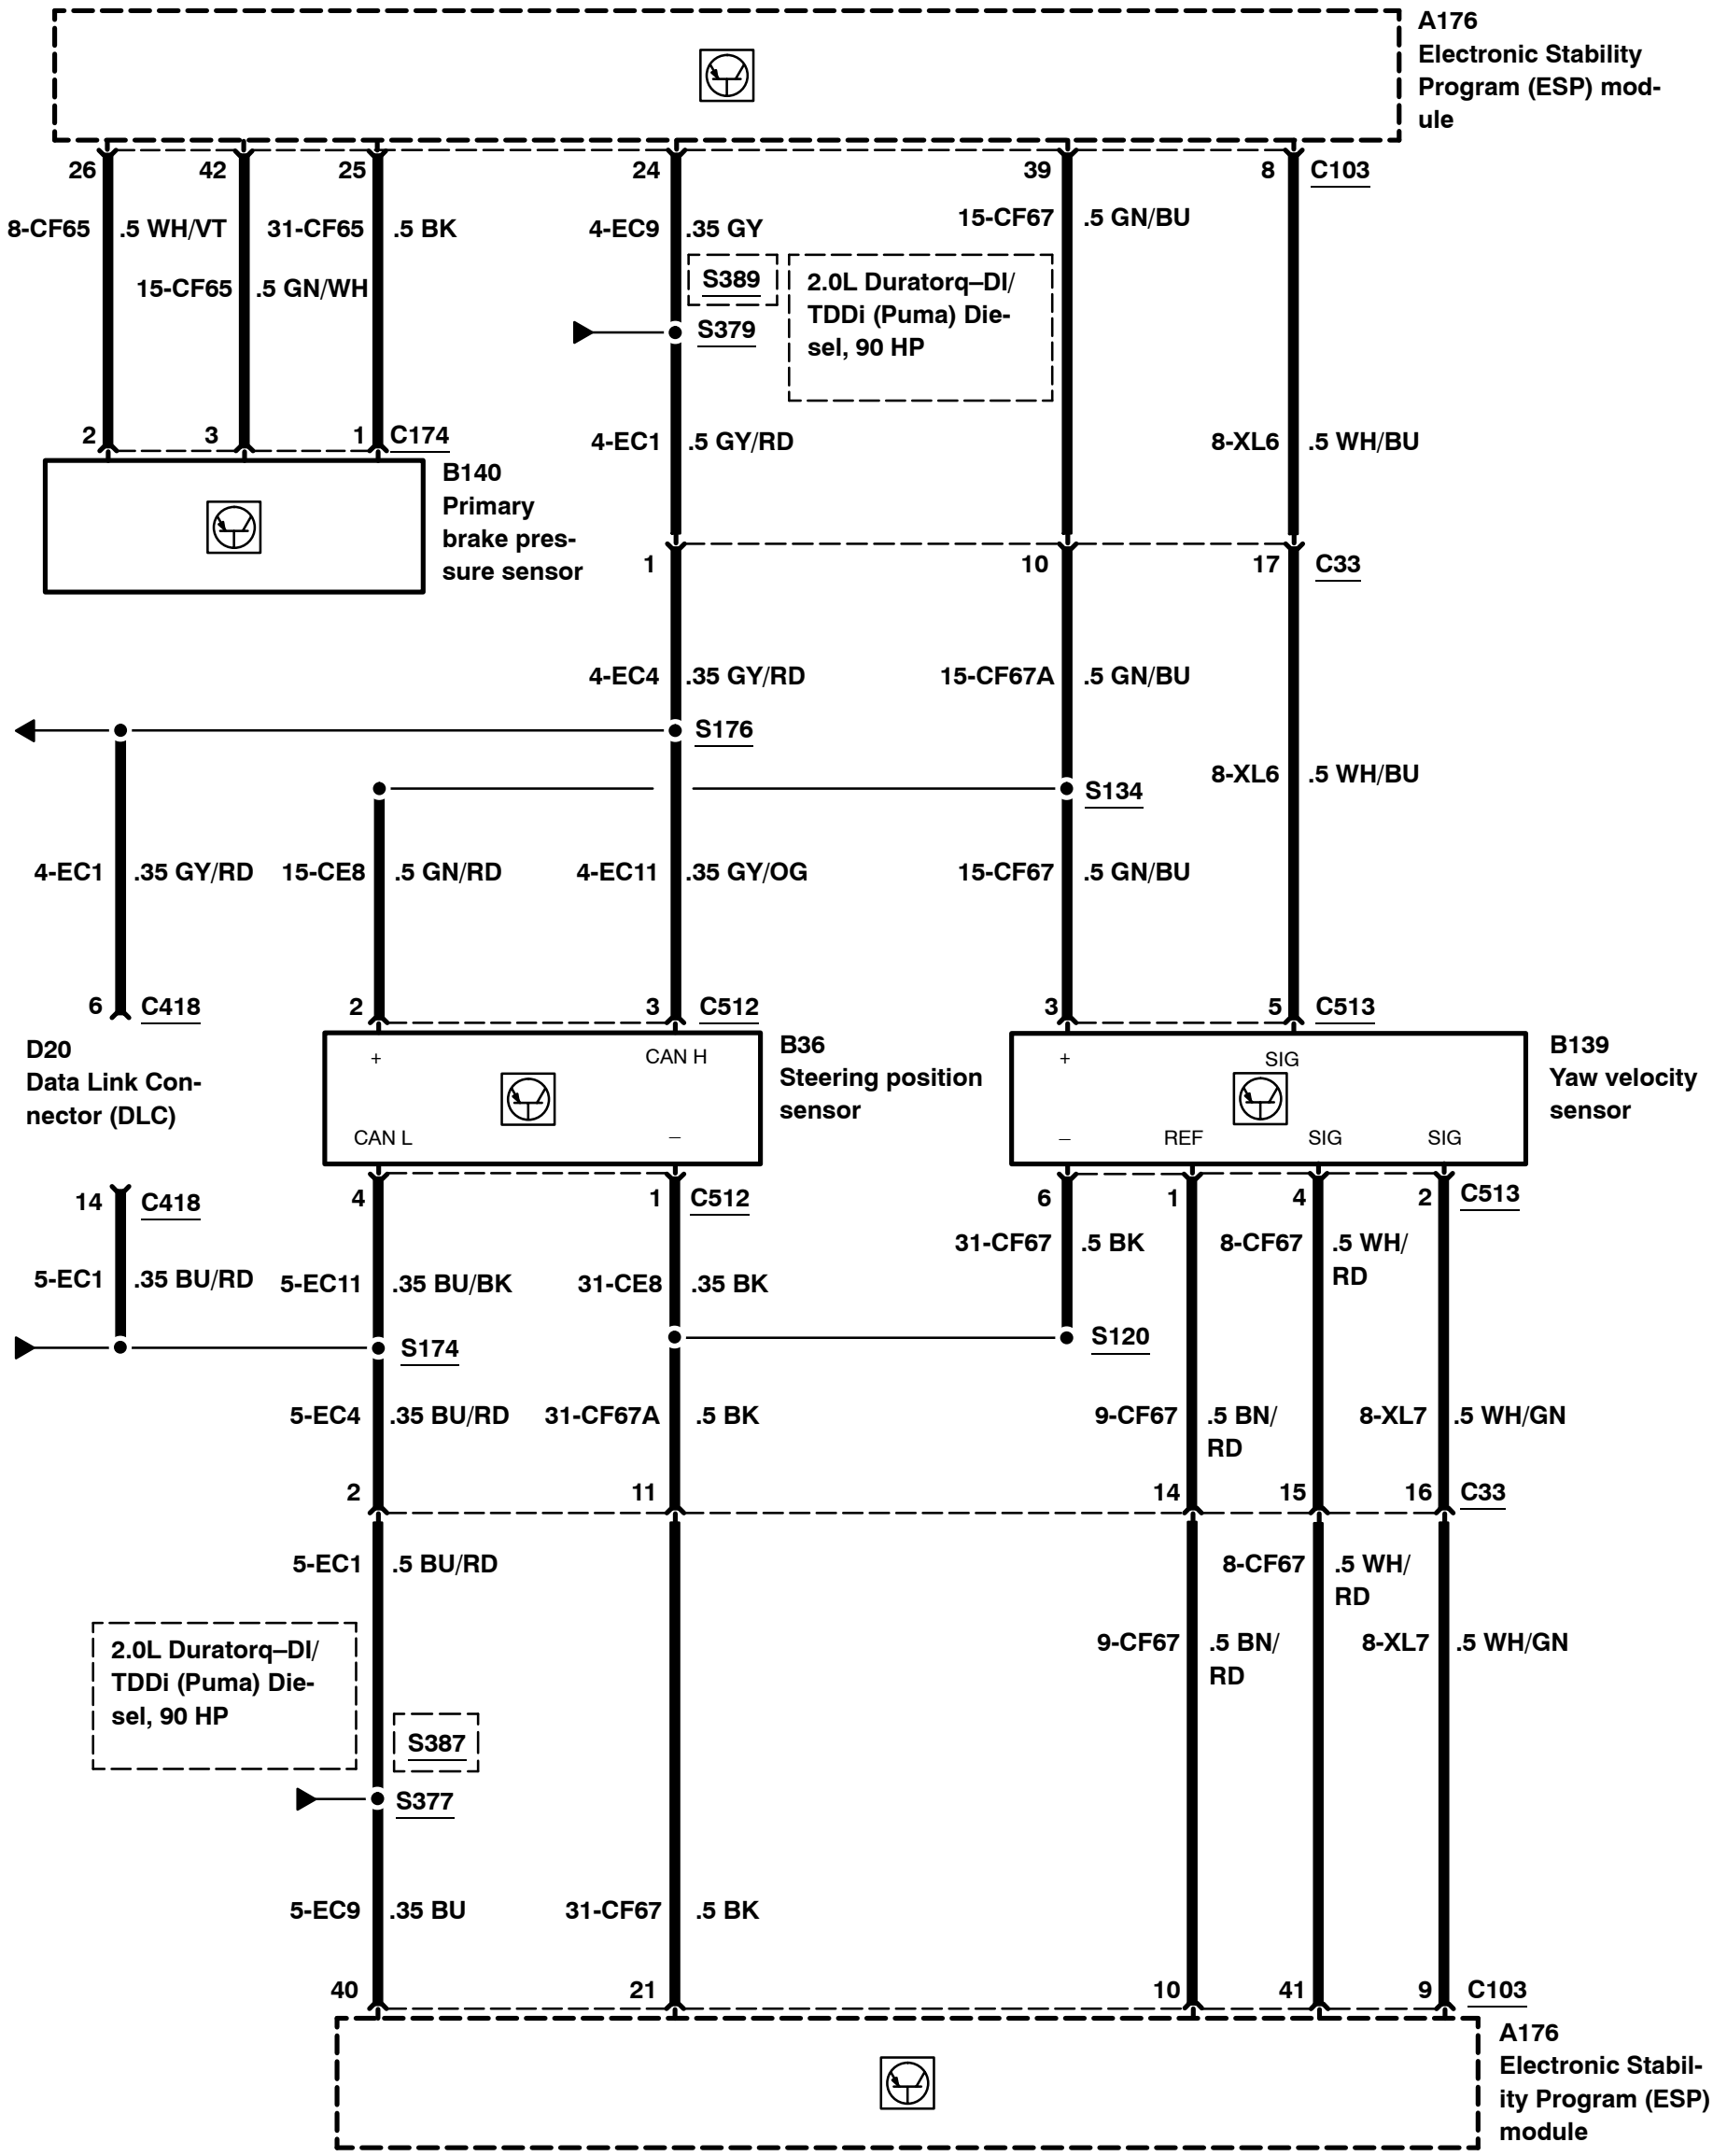


Engine Cooling – 1.8L Duratec–SCi (MI4)

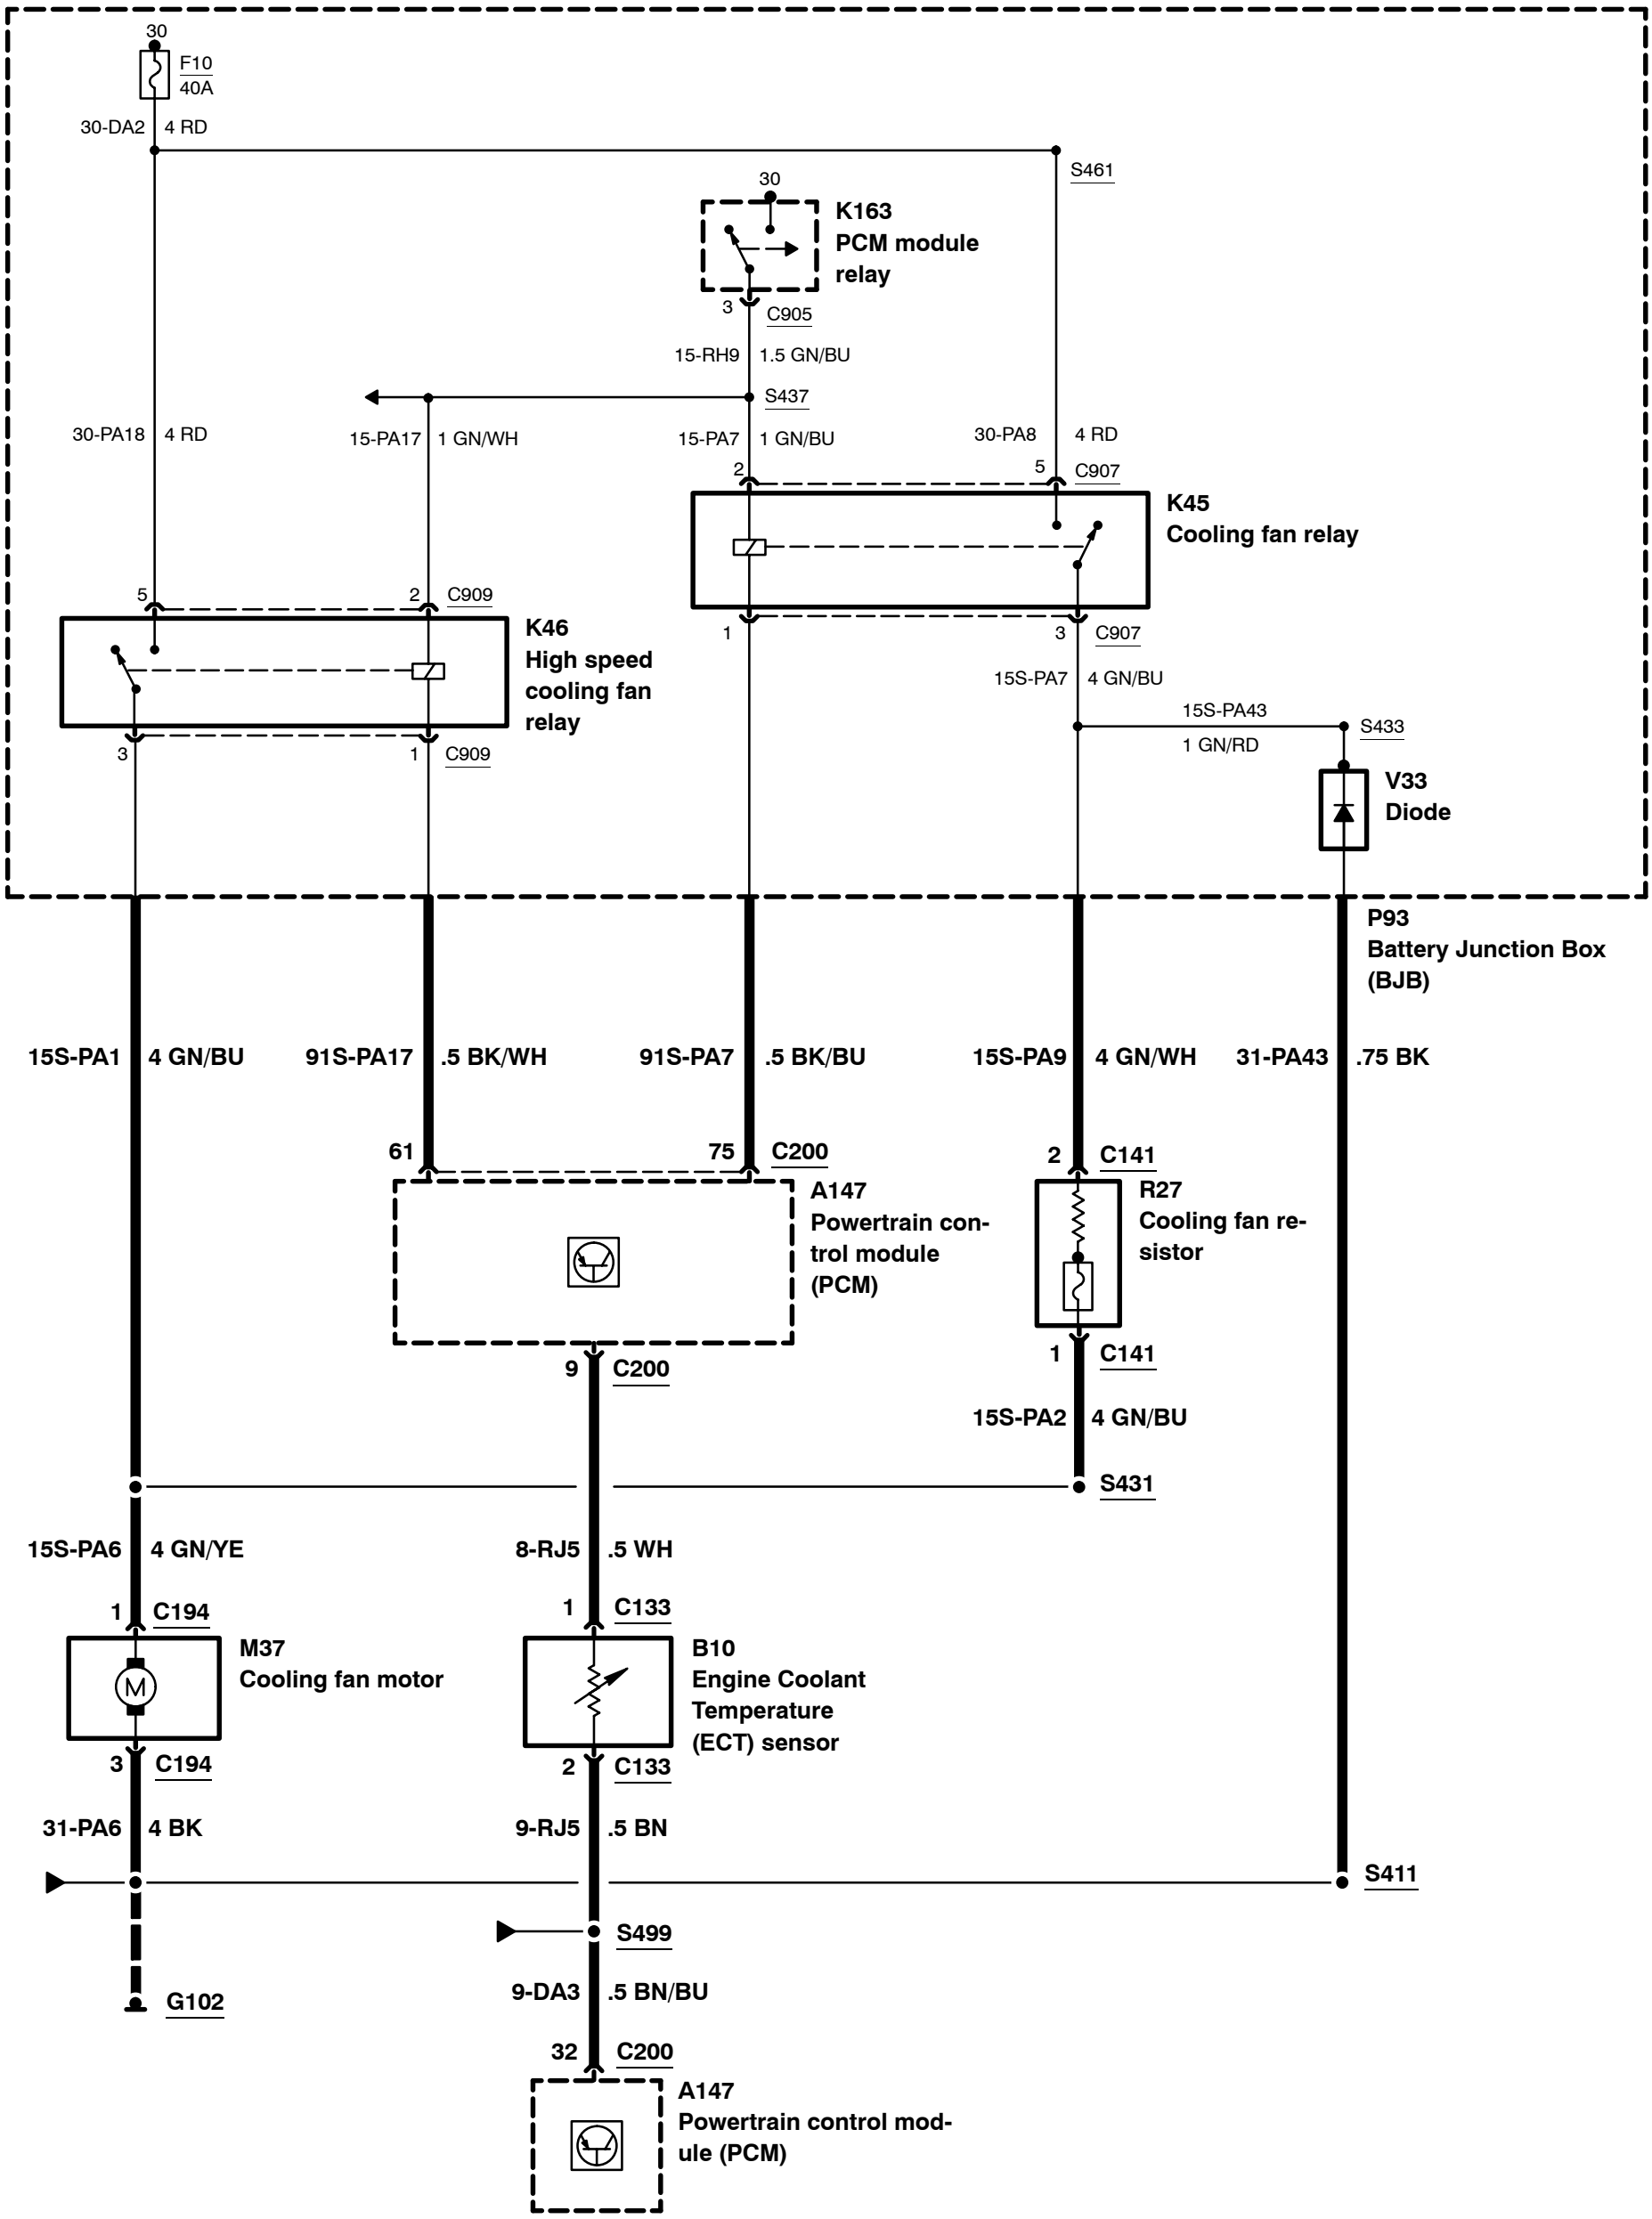


Engine Cooling – 1.8/2.0L Duratec–HE (MI4)

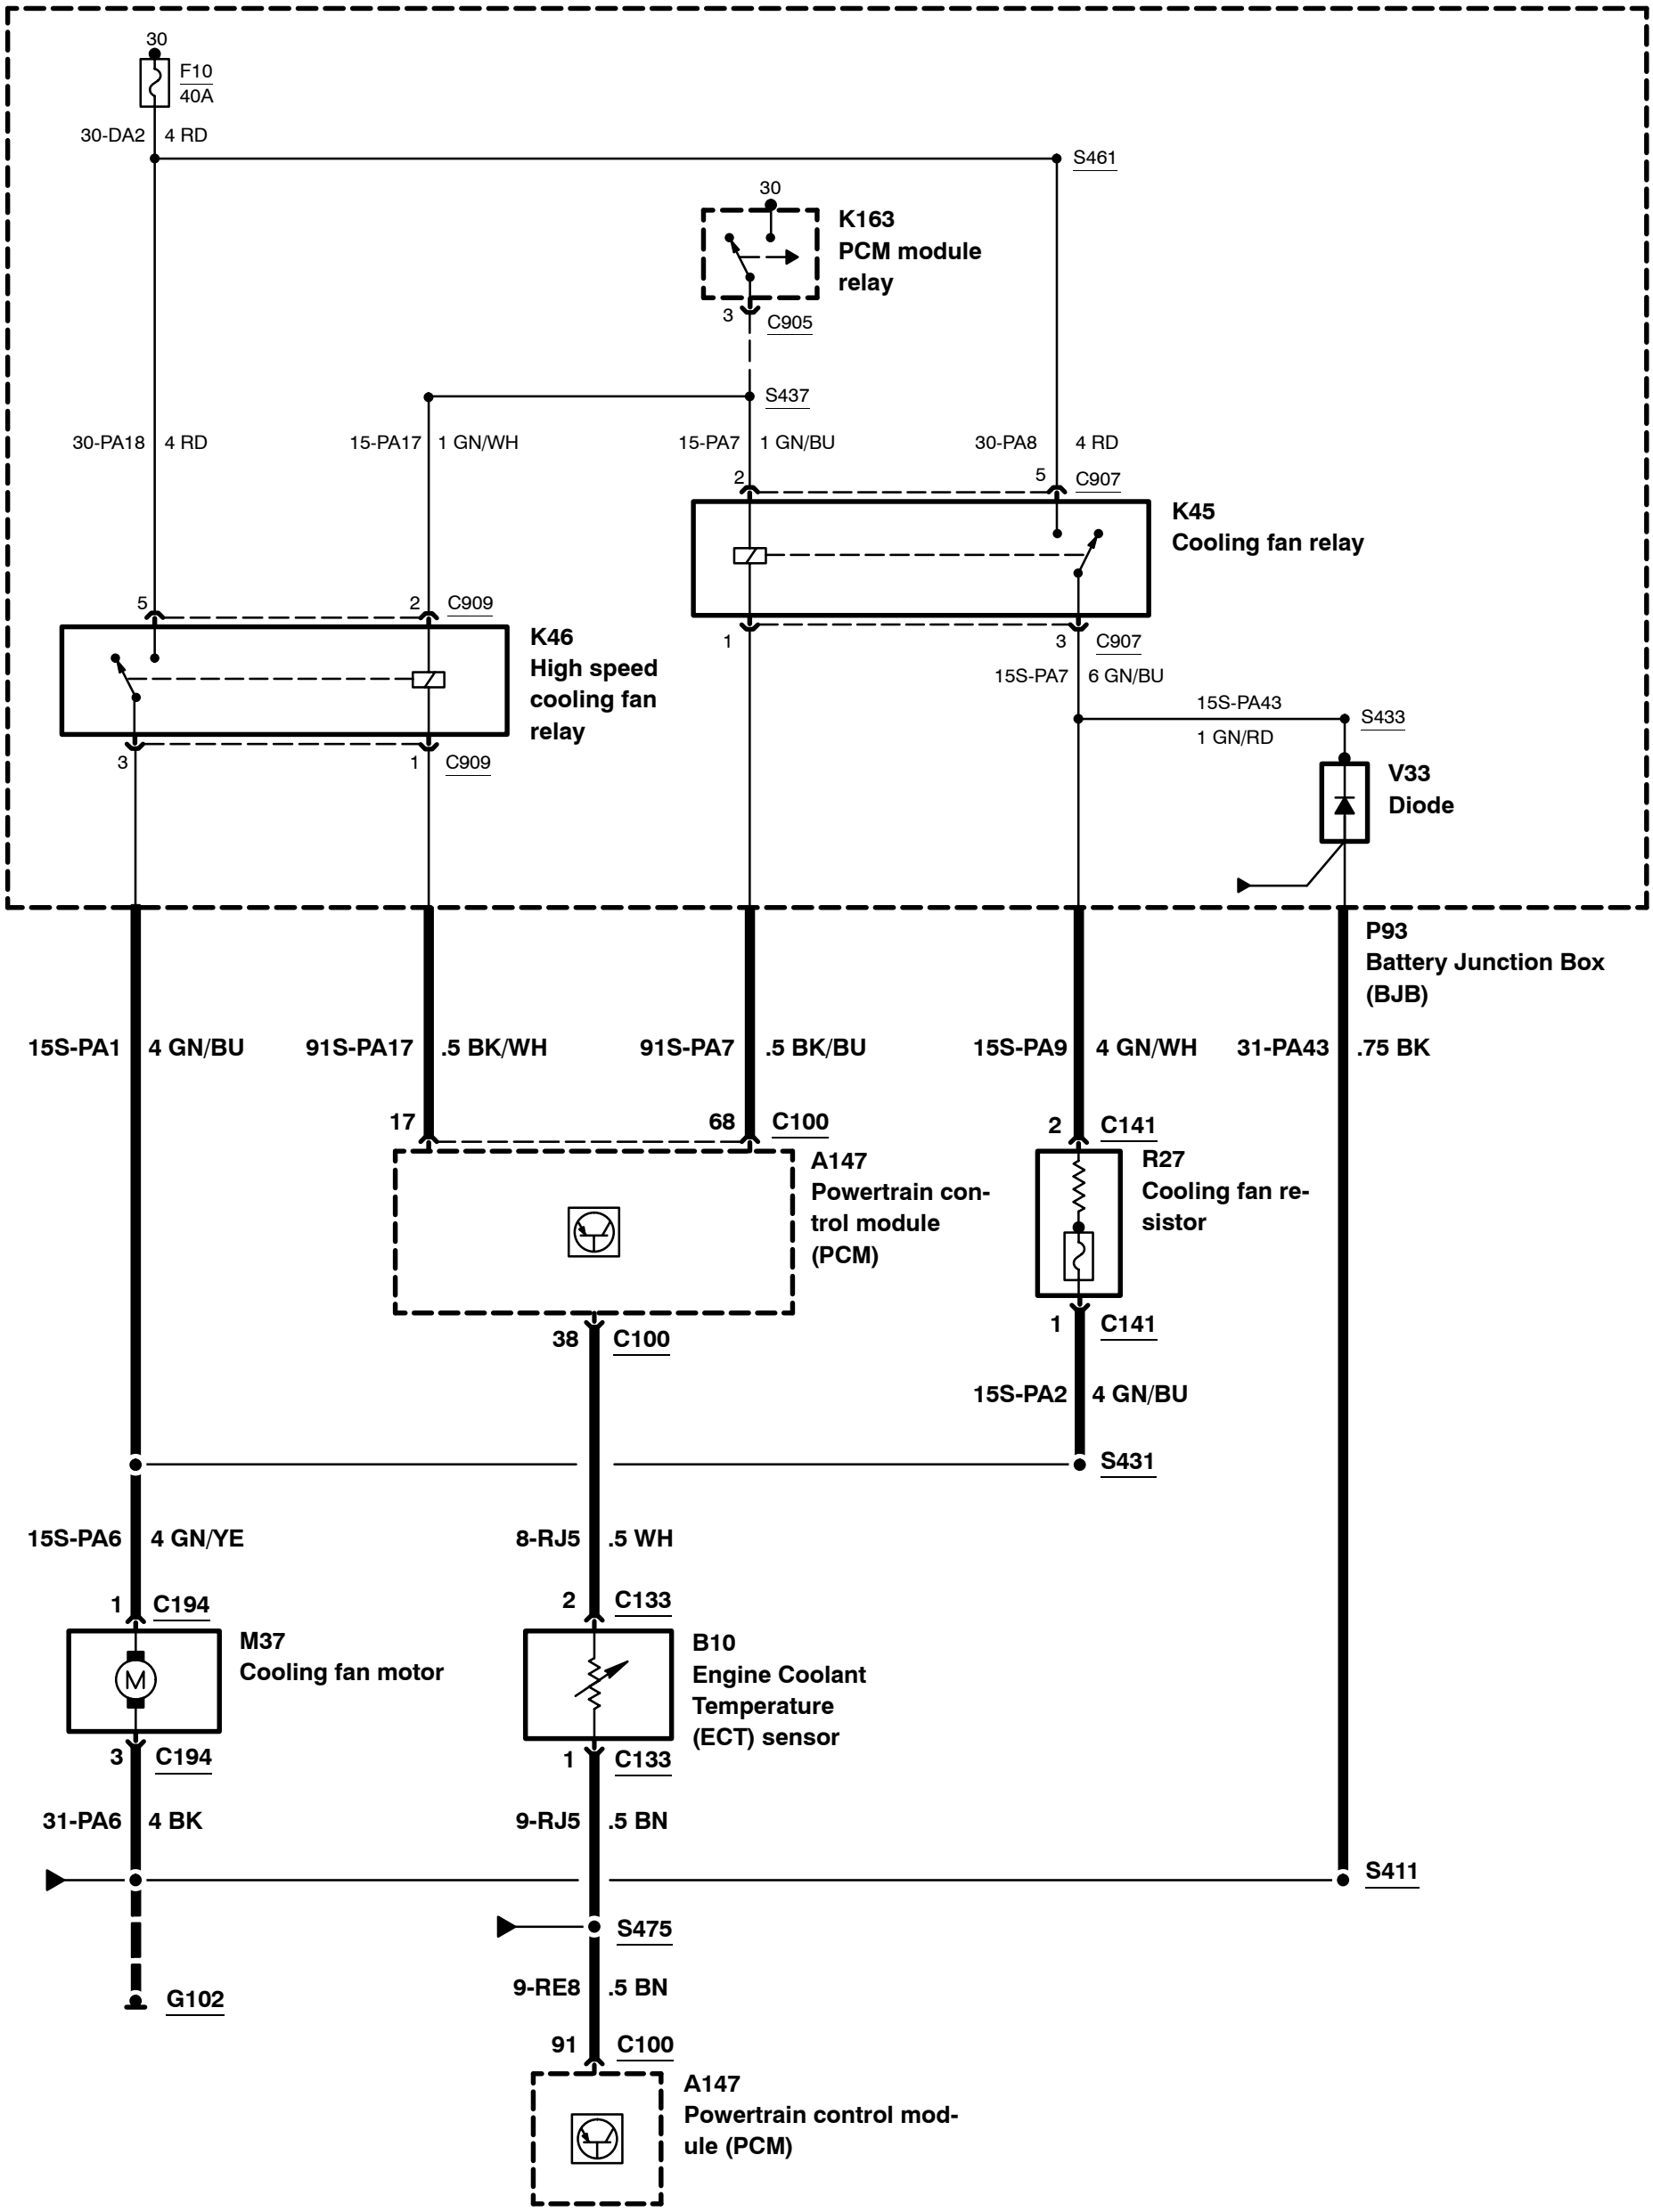


Engine Cooling – 2.5L Duratec–VE (VE6),manual transmission

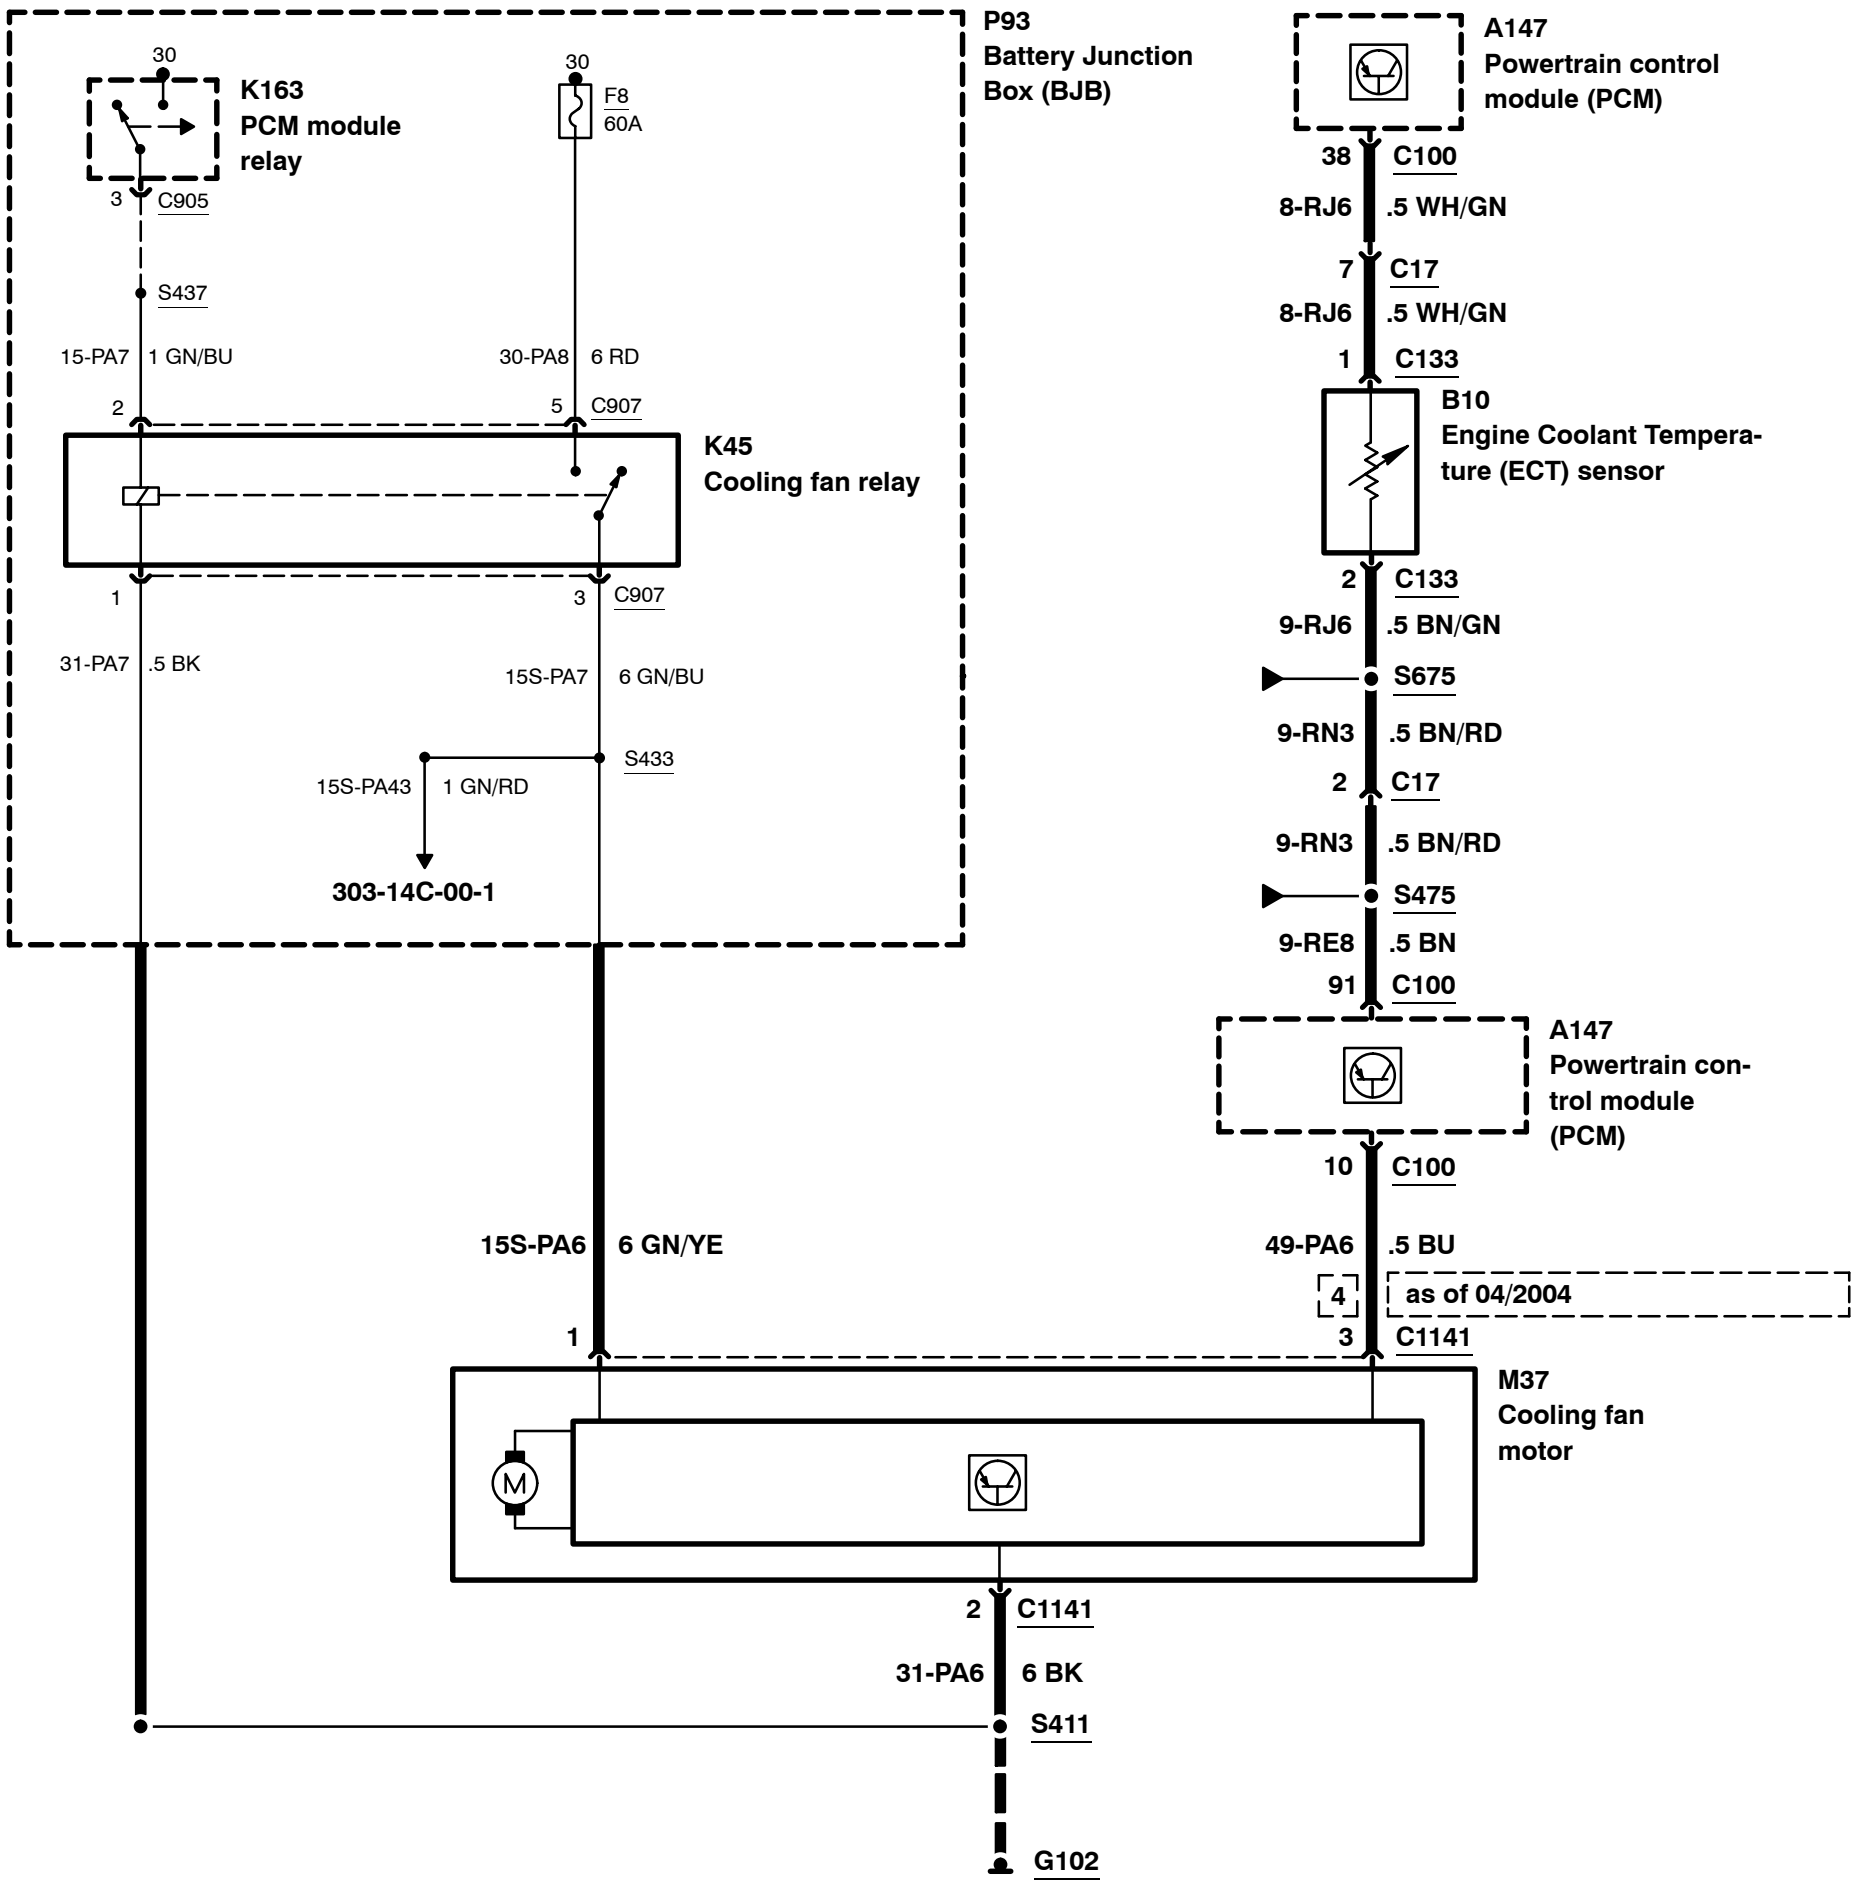


Engine Cooling – 2.5L Duratec–VE (VE6),automatic transmission

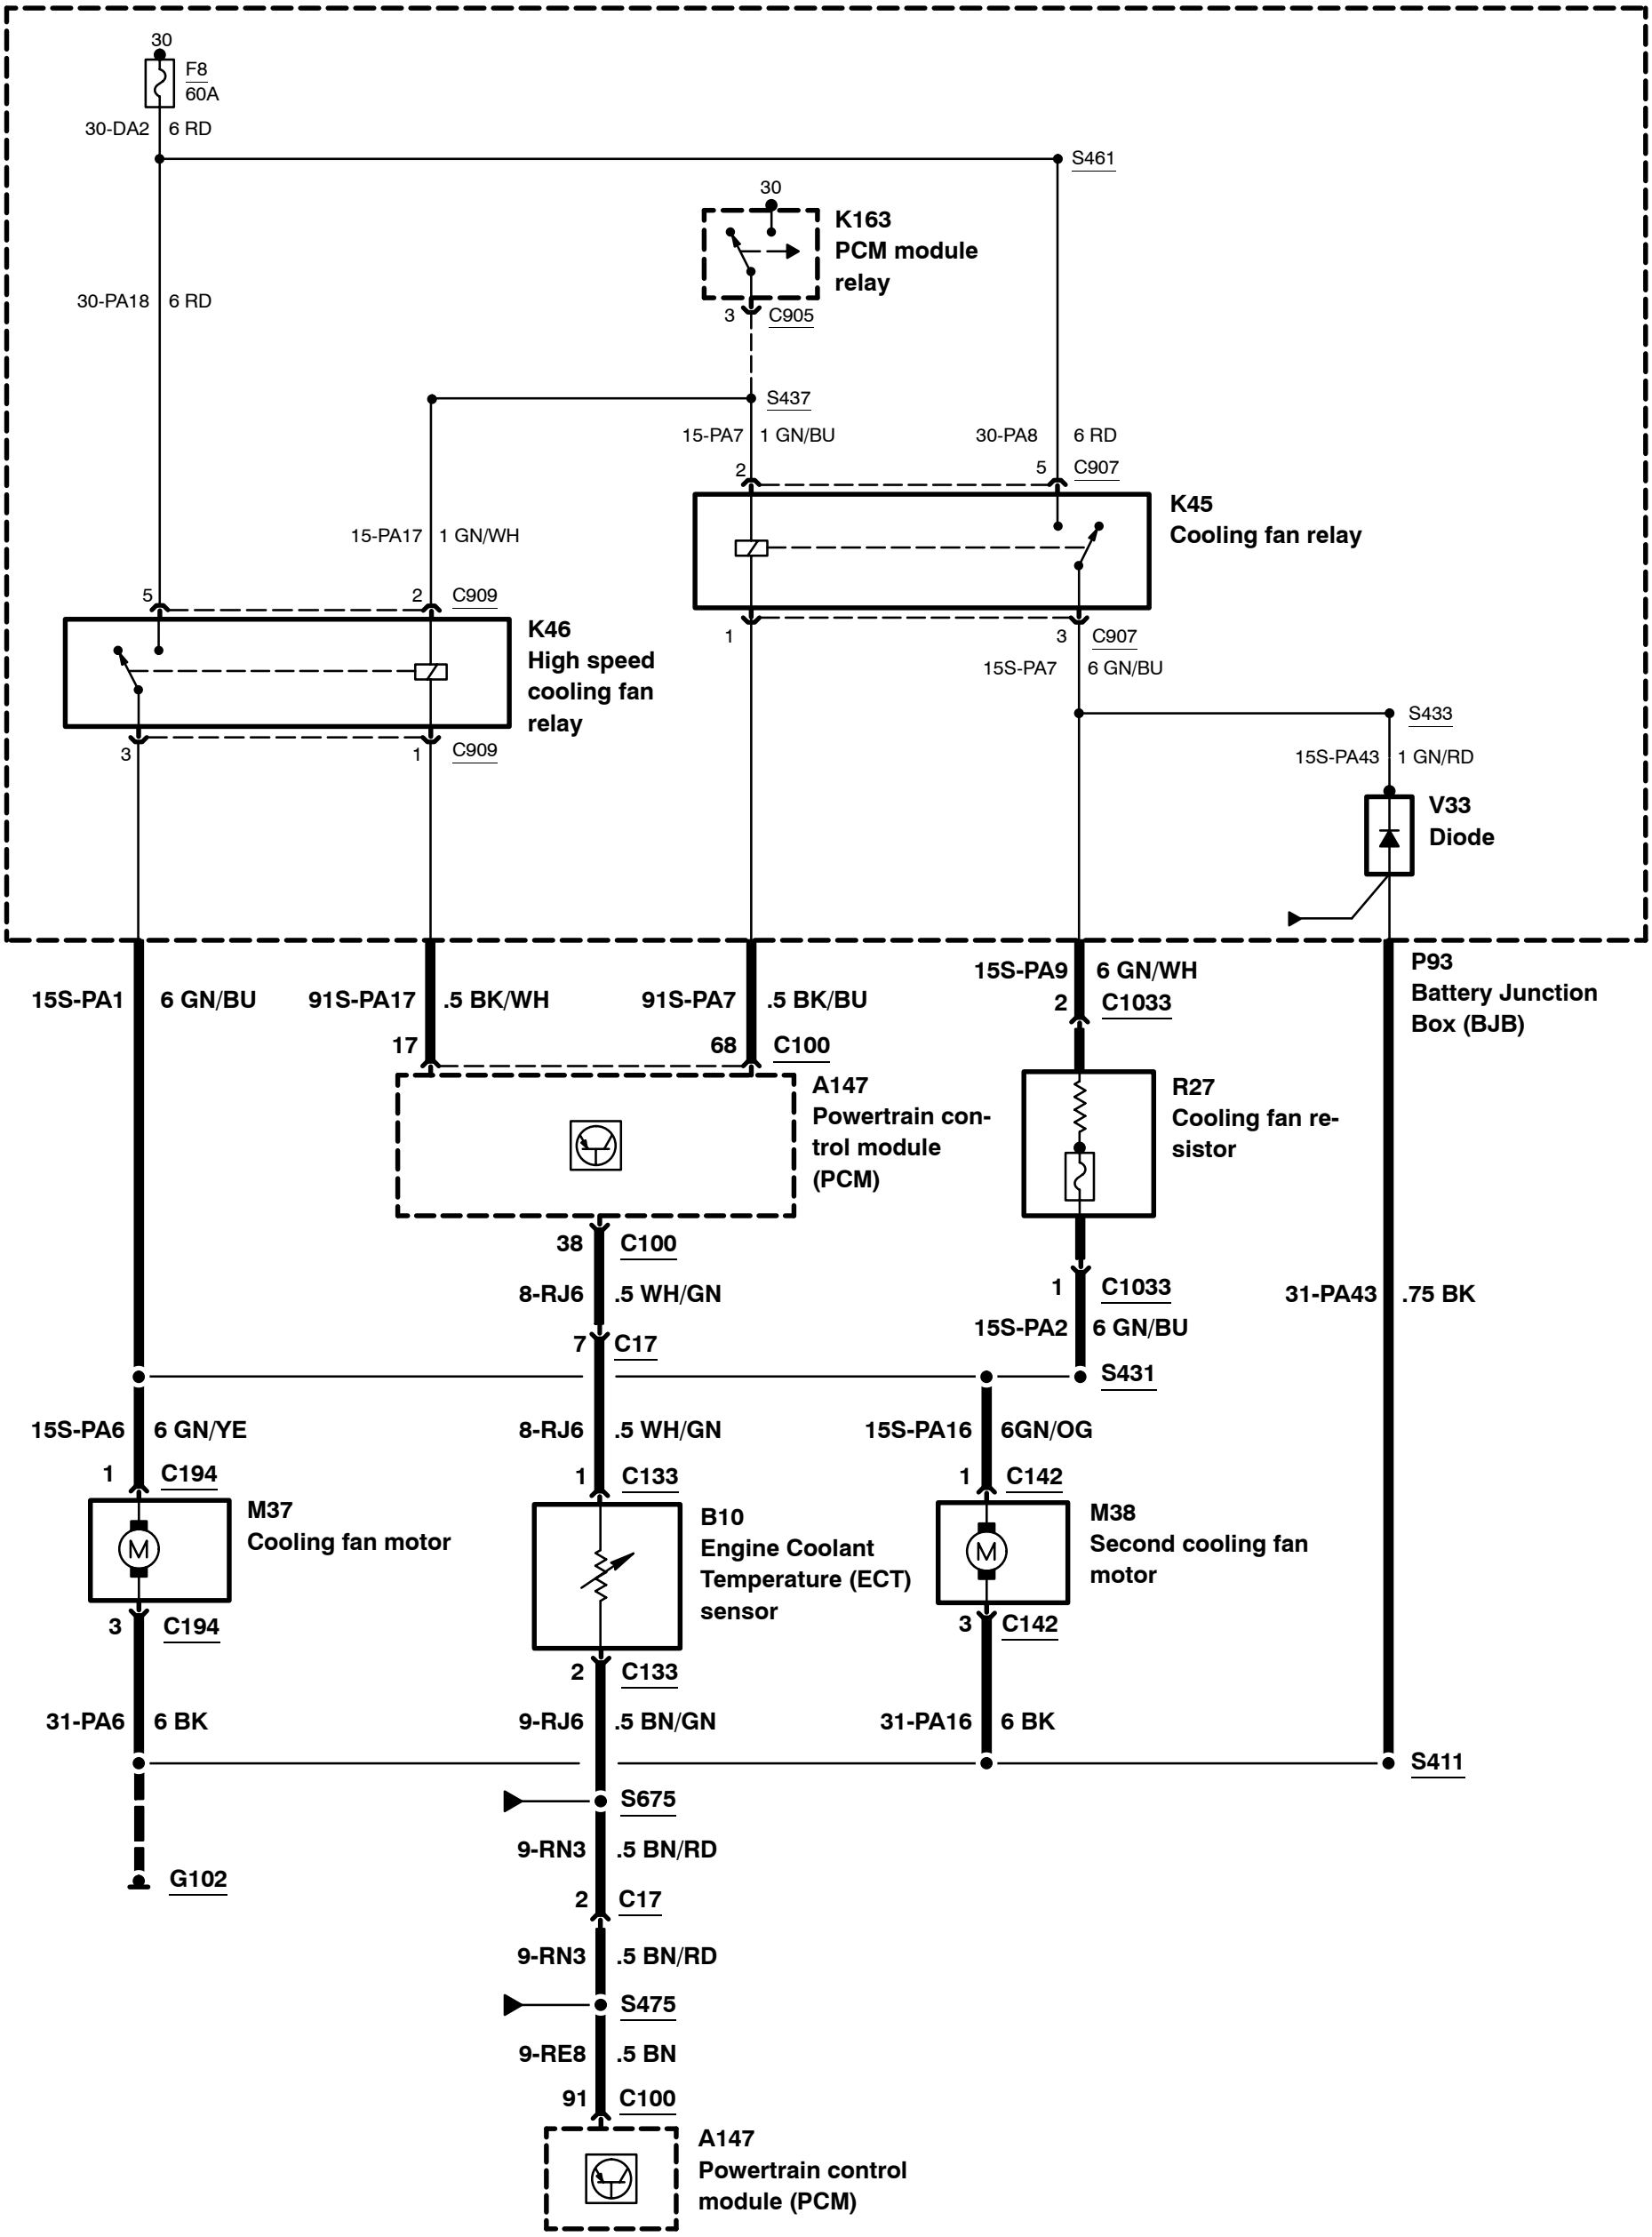


Engine Cooling – 3.0L Duratec–SE (VE6)

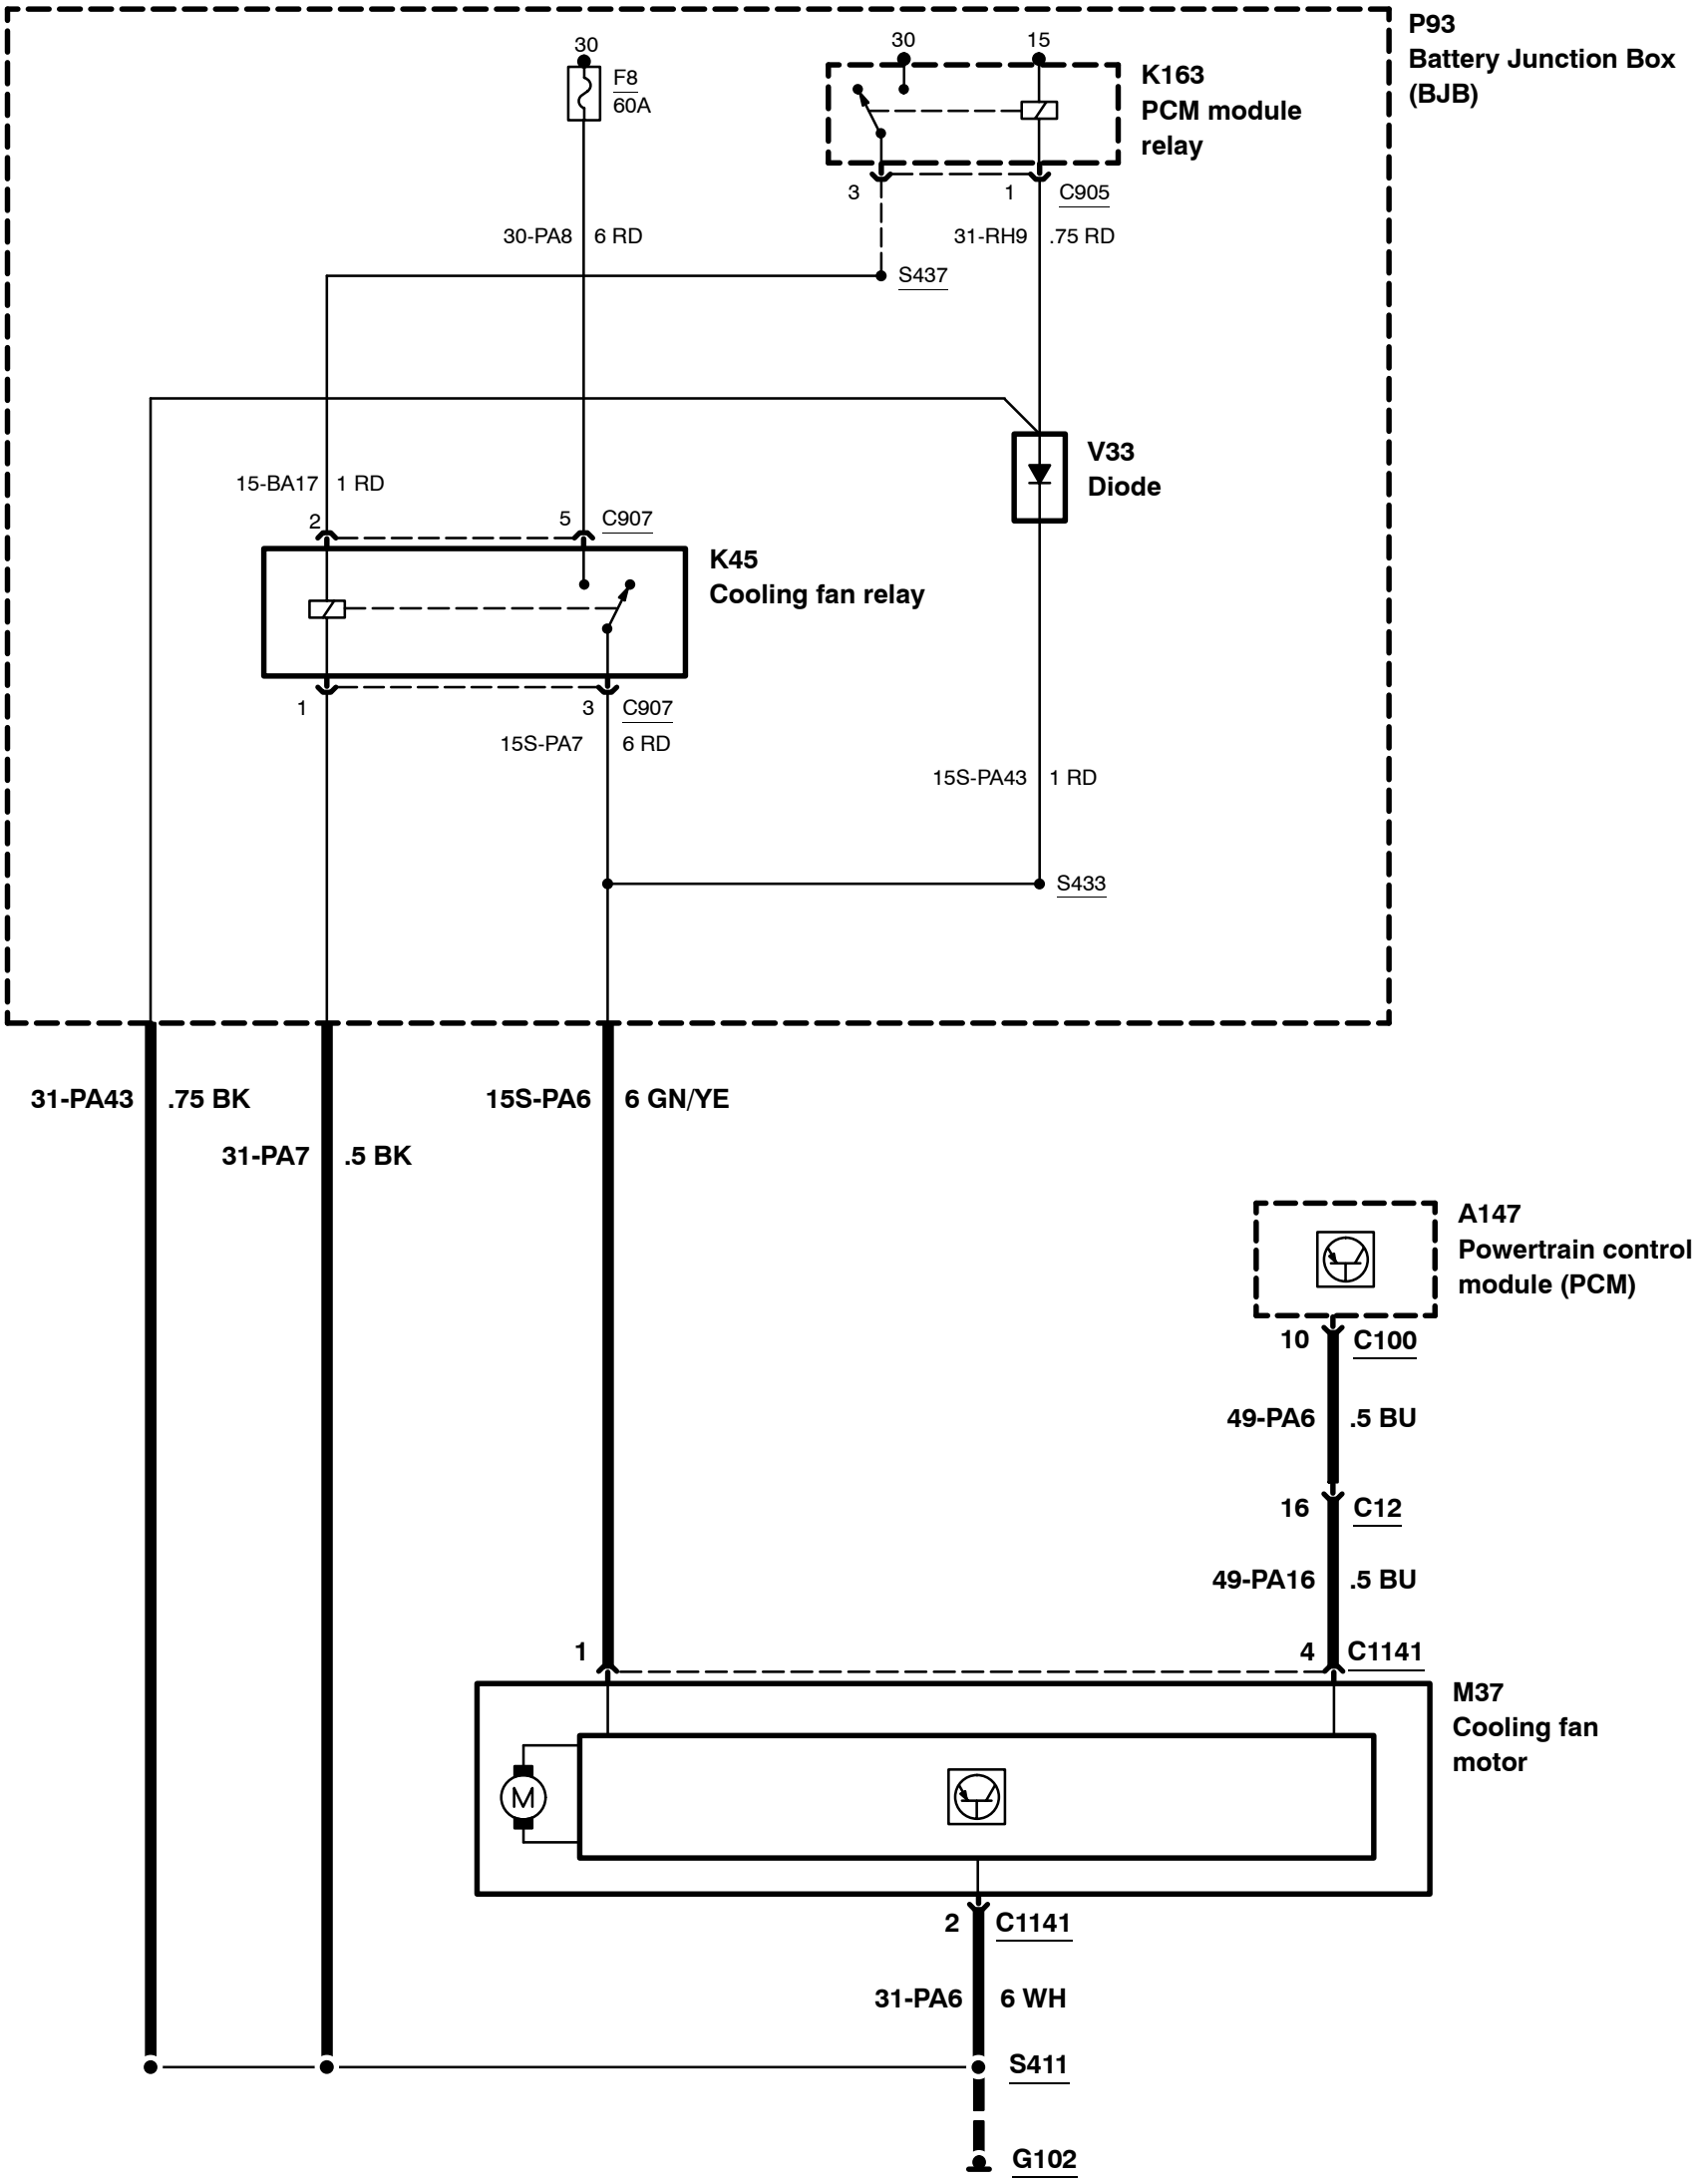


Engine Cooling – 3.0L Duratec–ST (VE6)

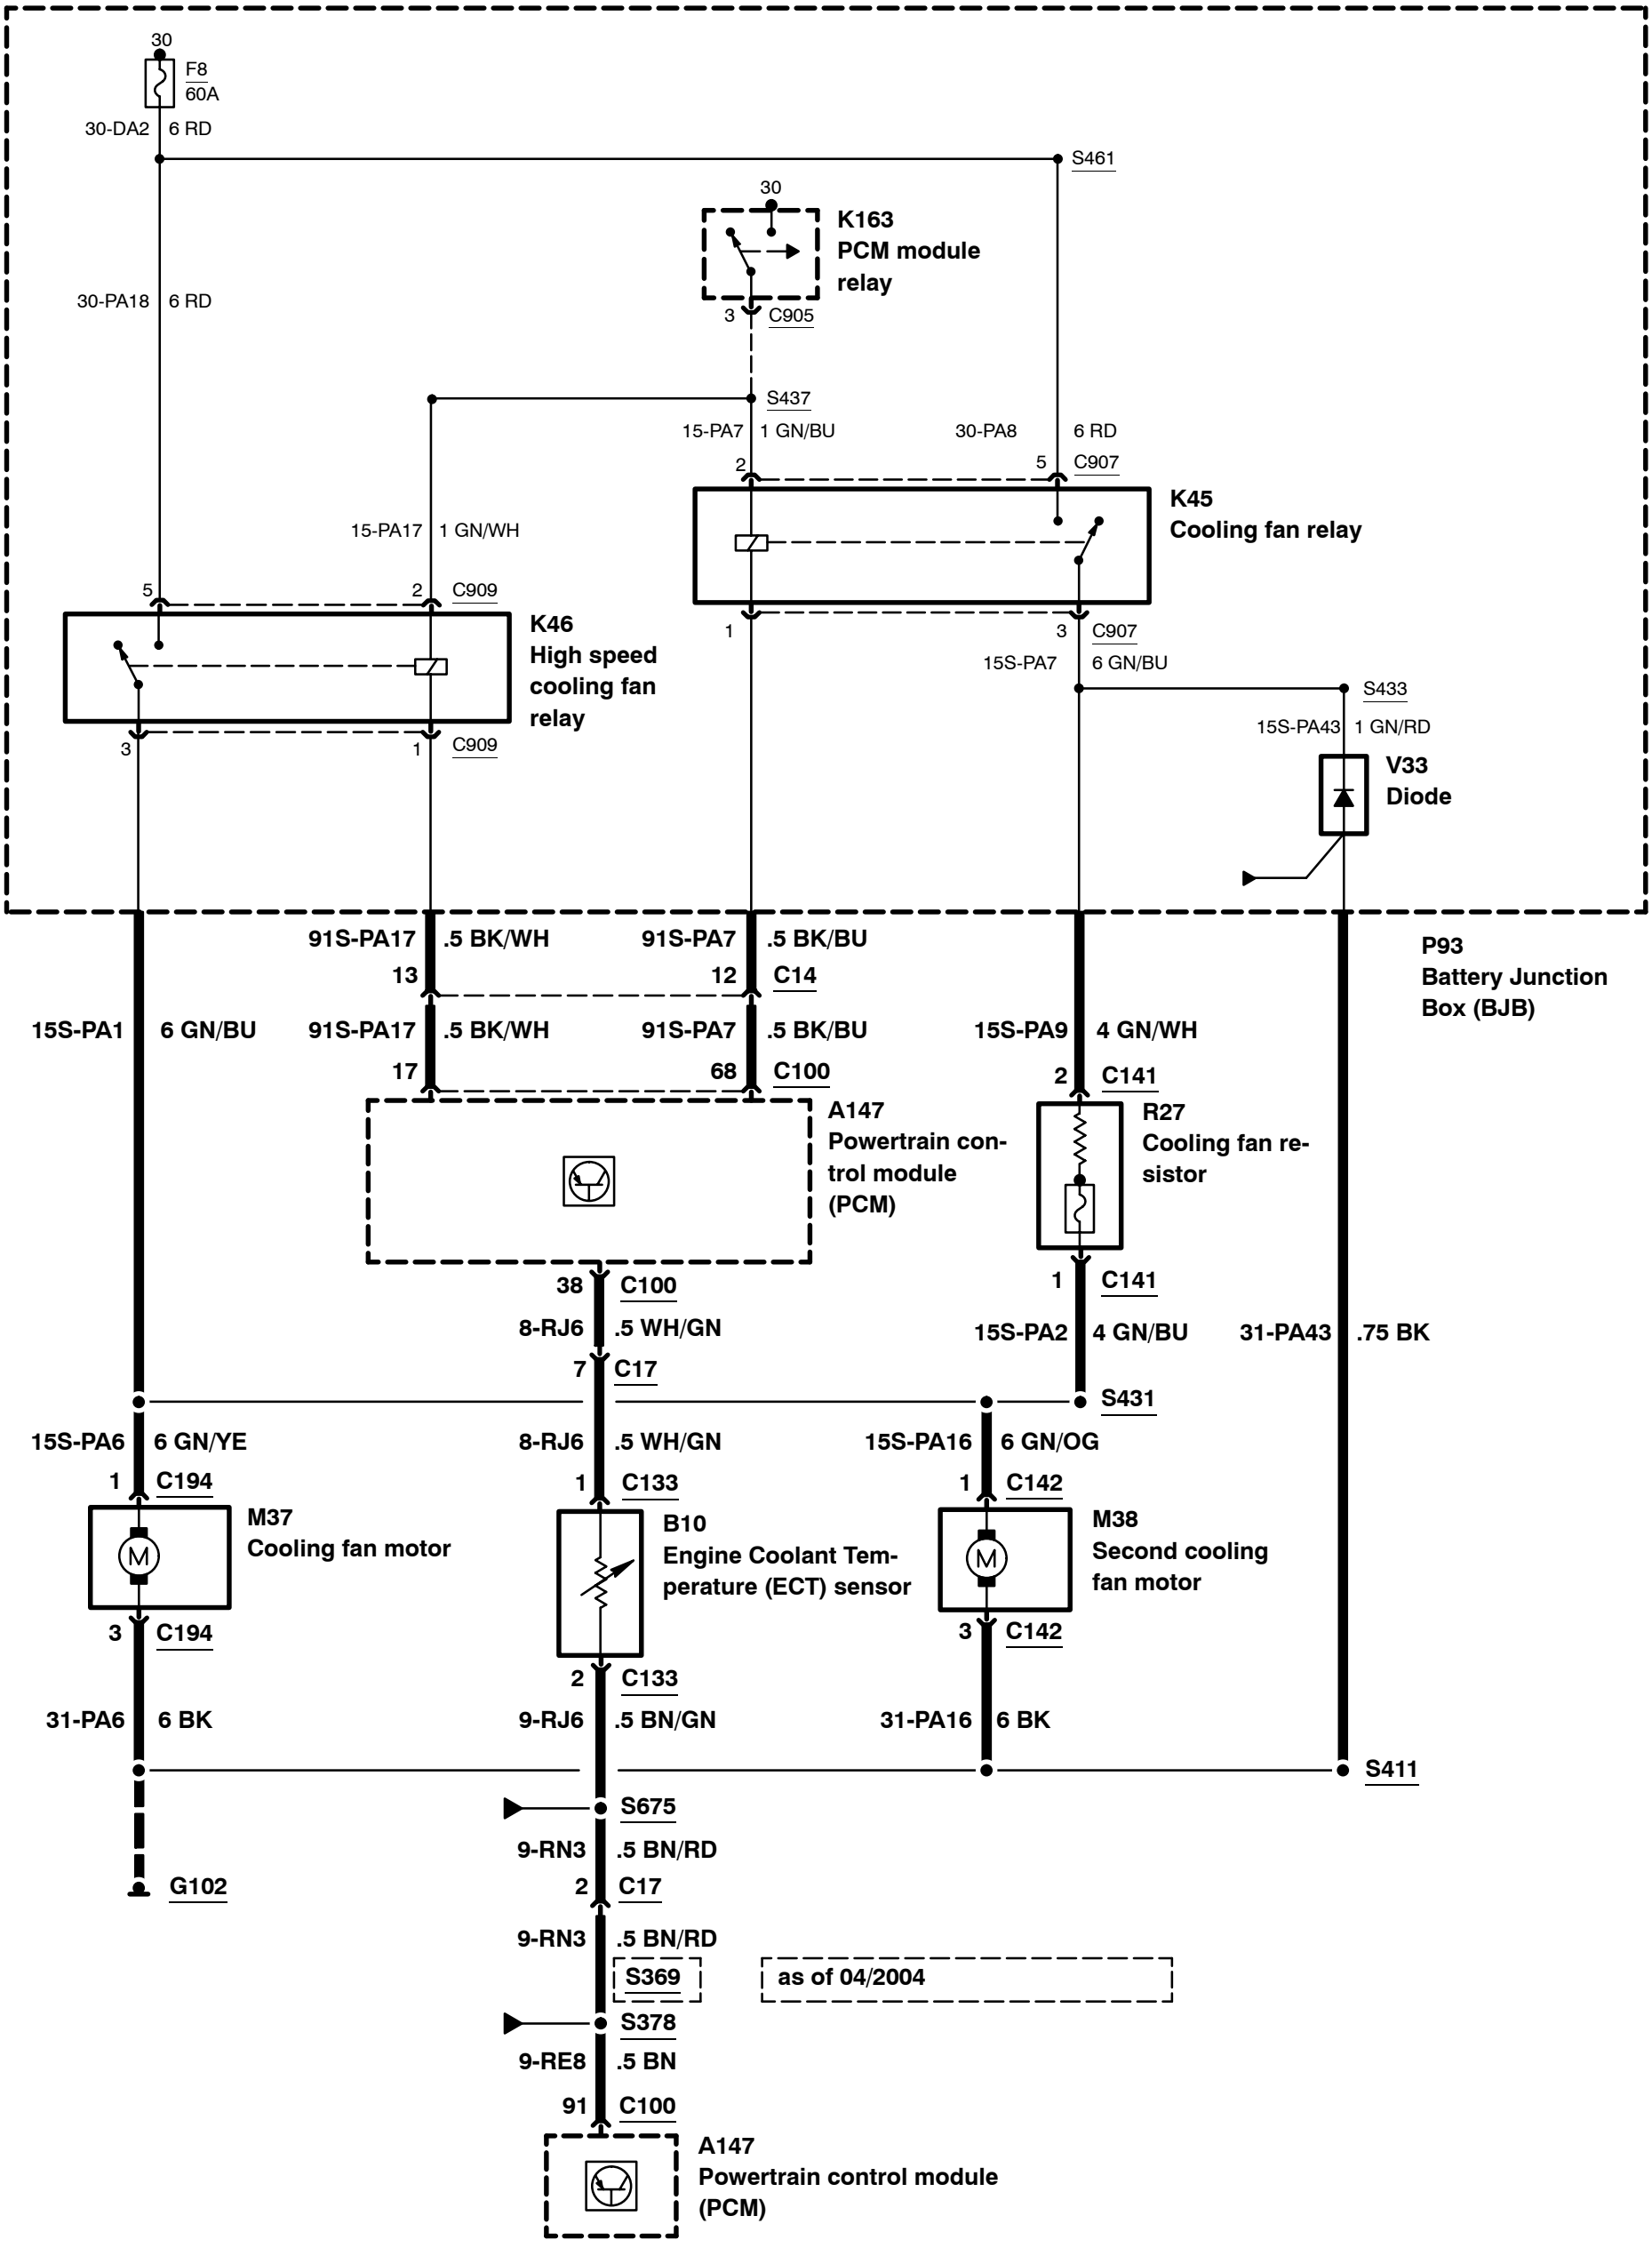


Engine Cooling – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

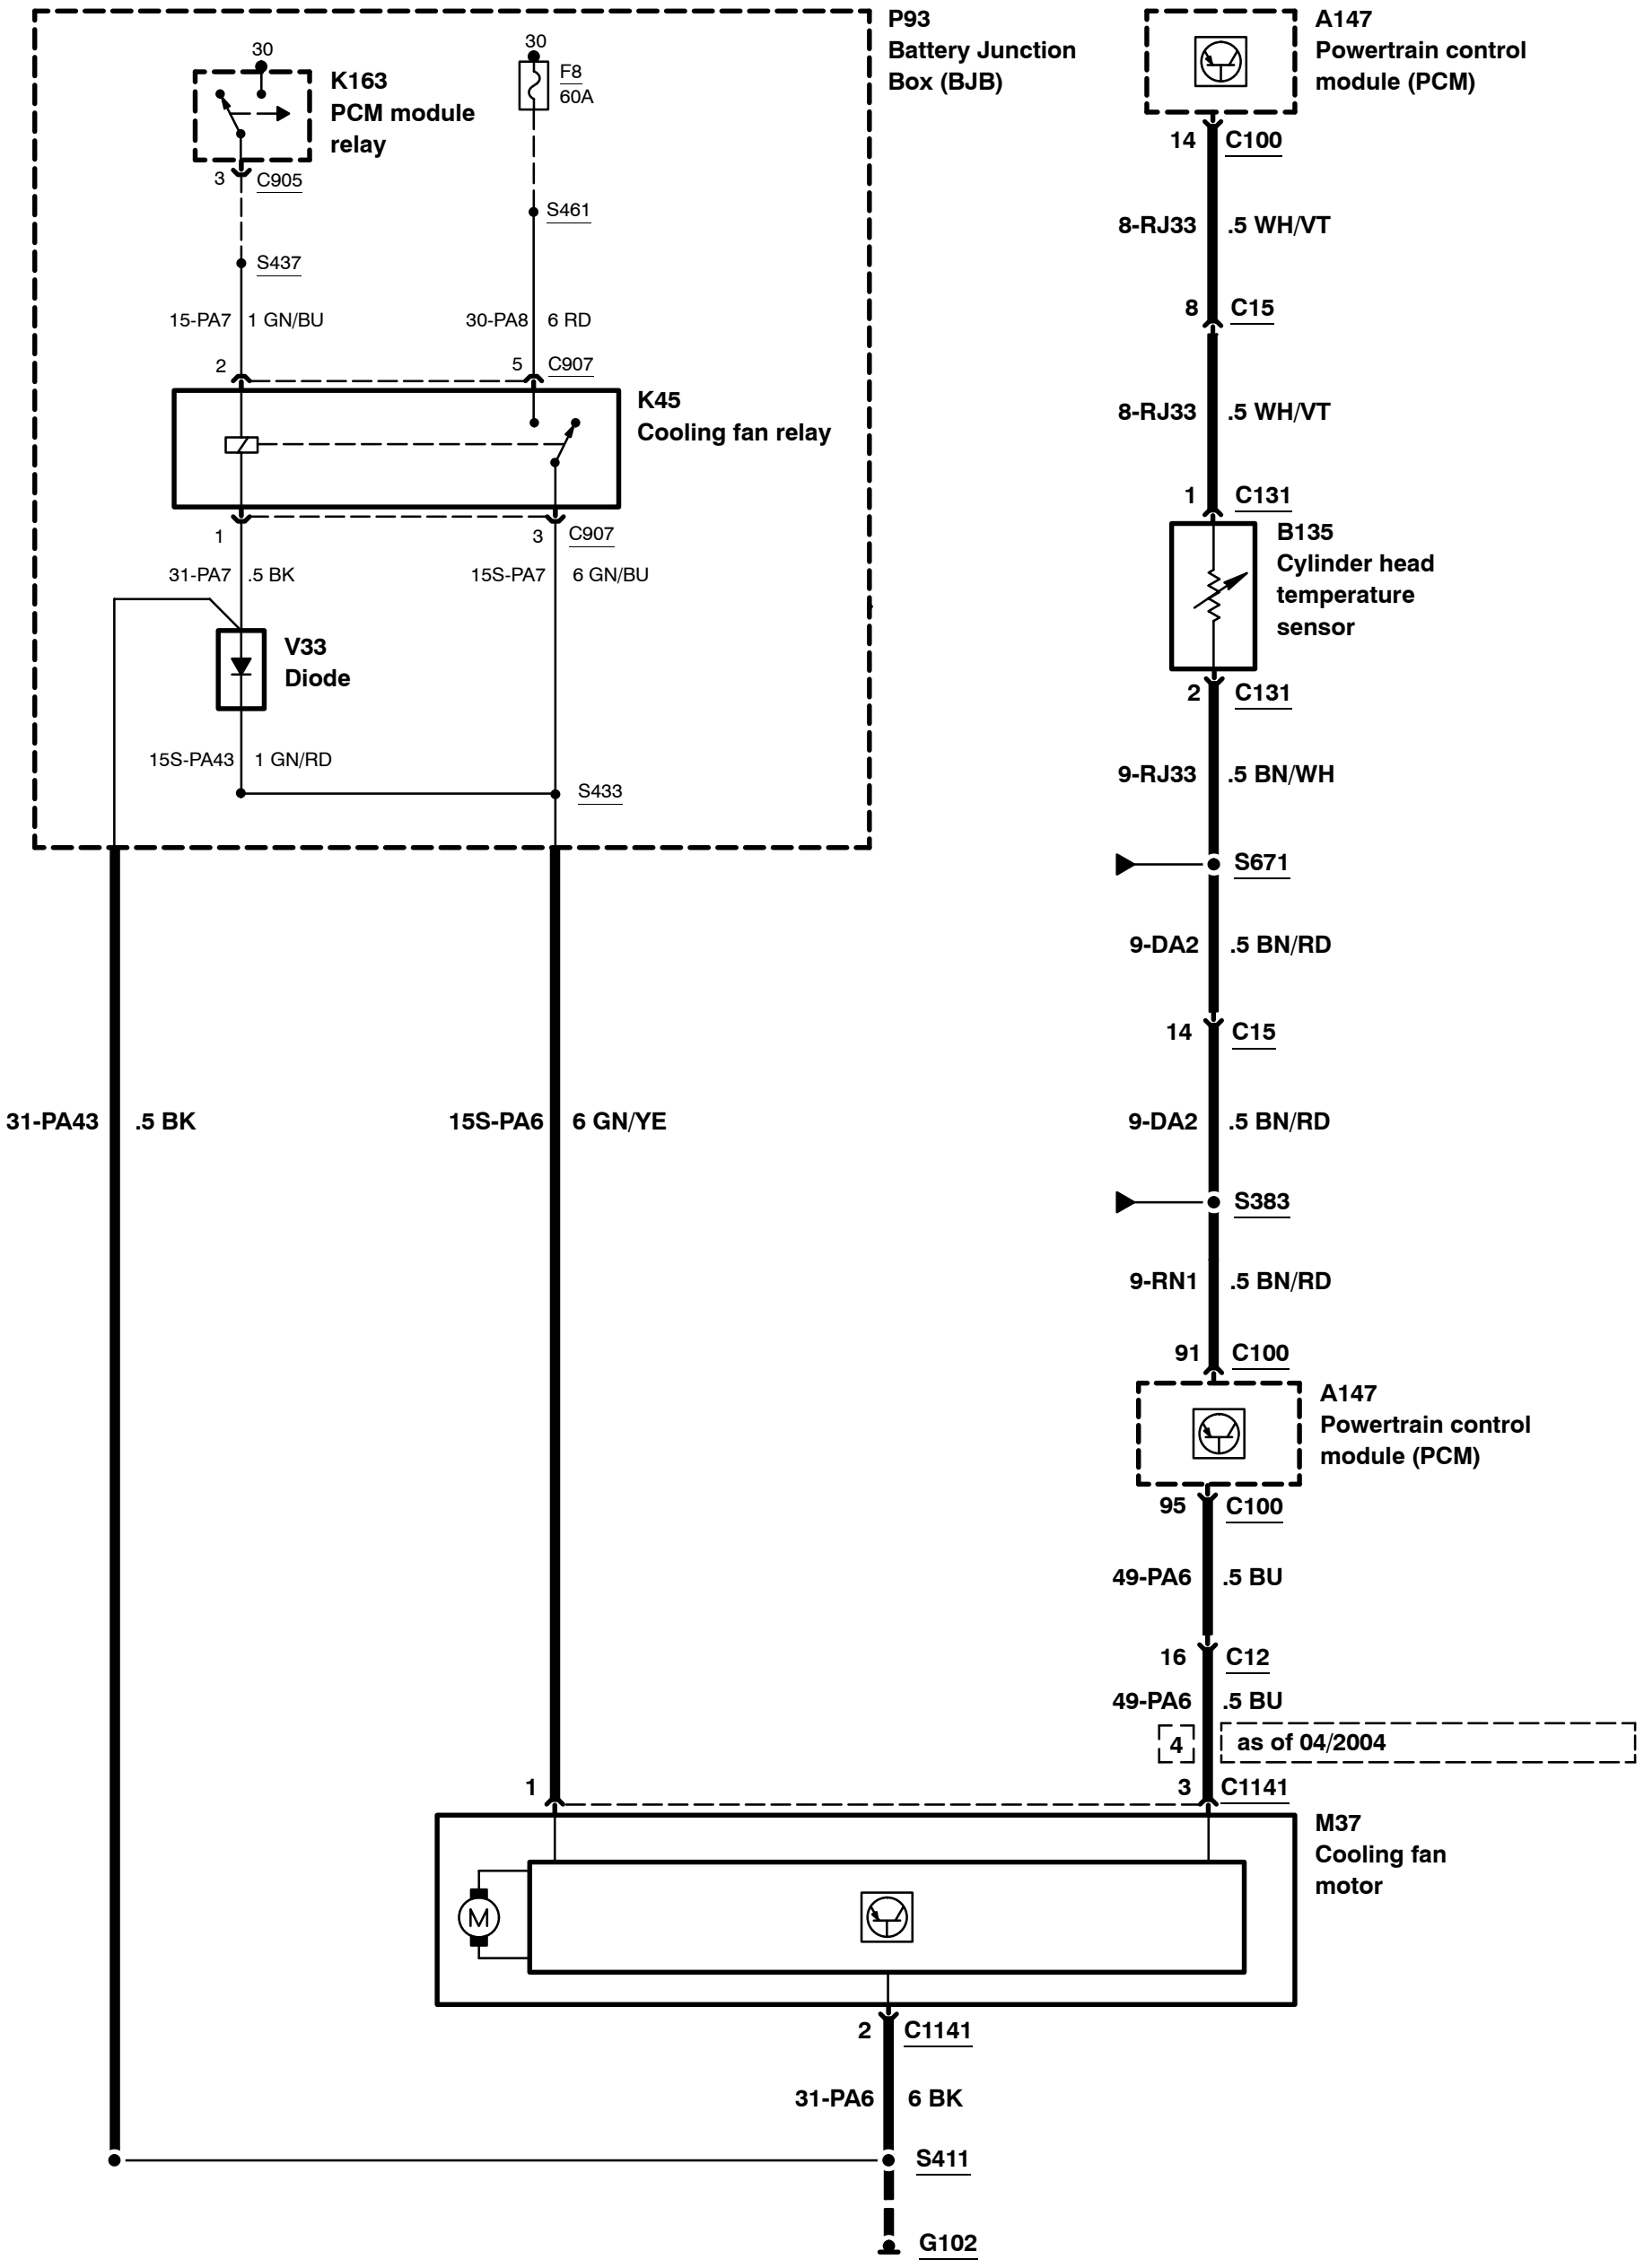


Engine Cooling – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

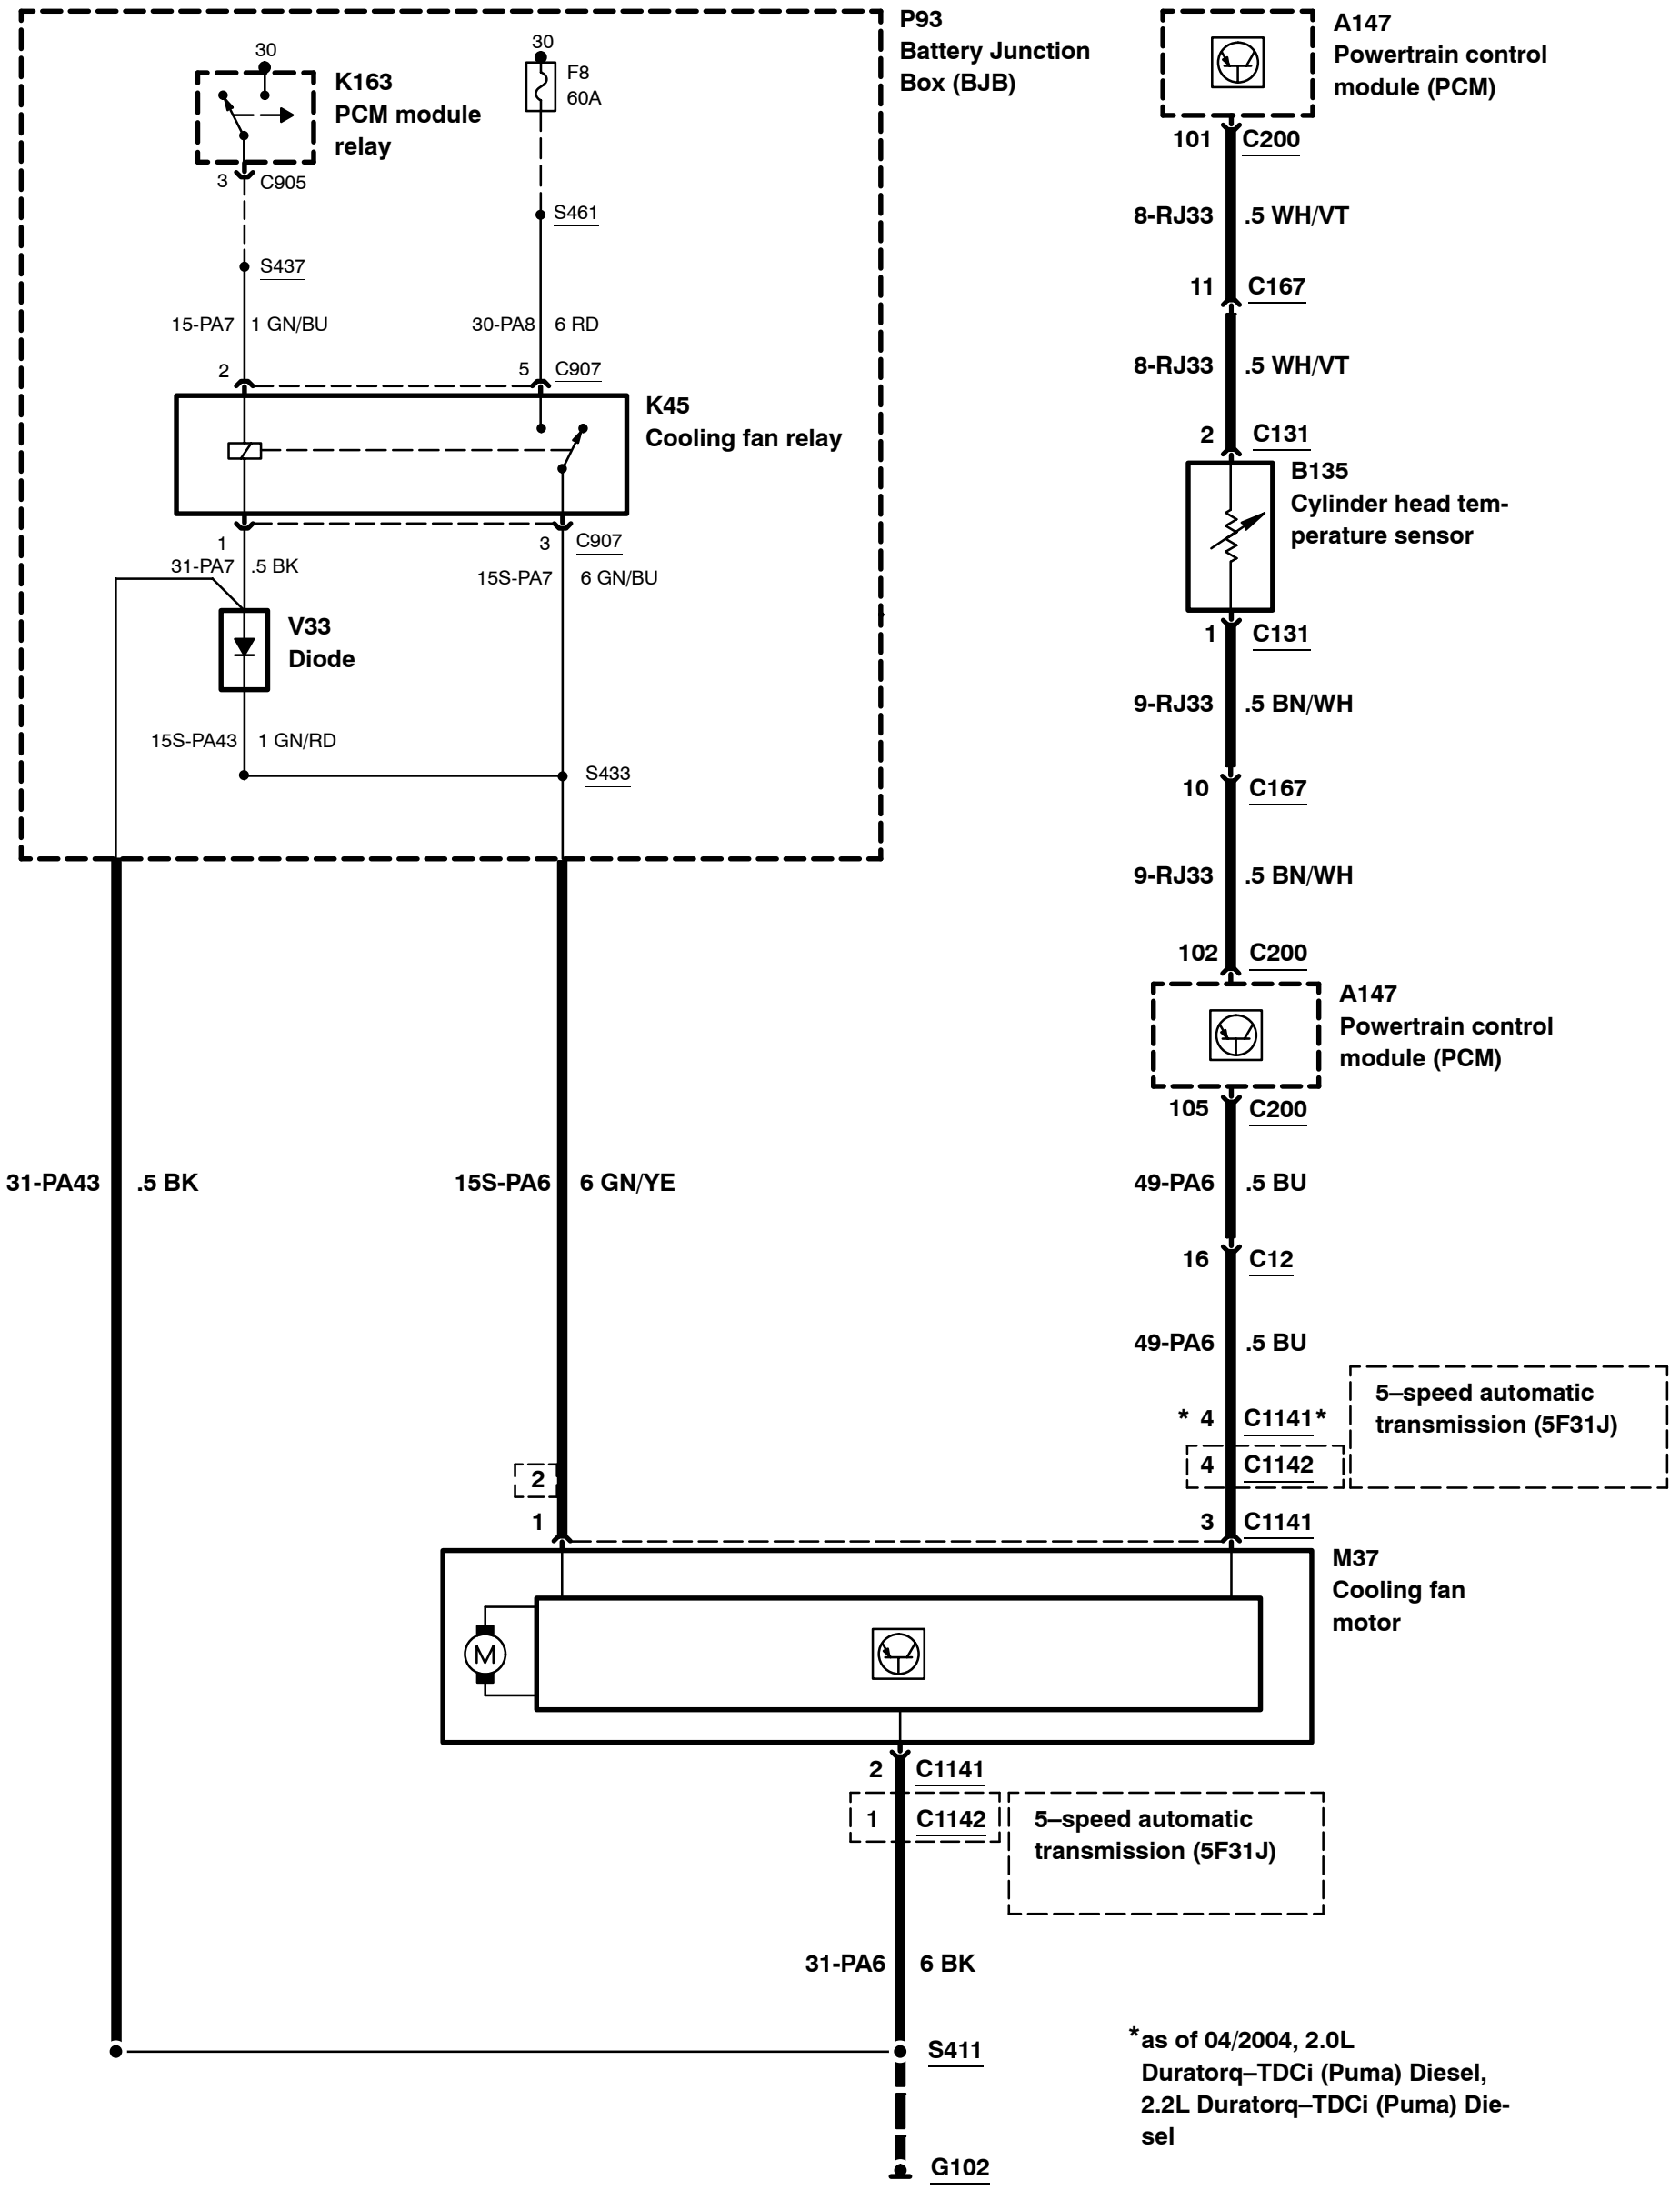


Fuel Charging and Controls – 1.8L Duratec–SCi (MI4)

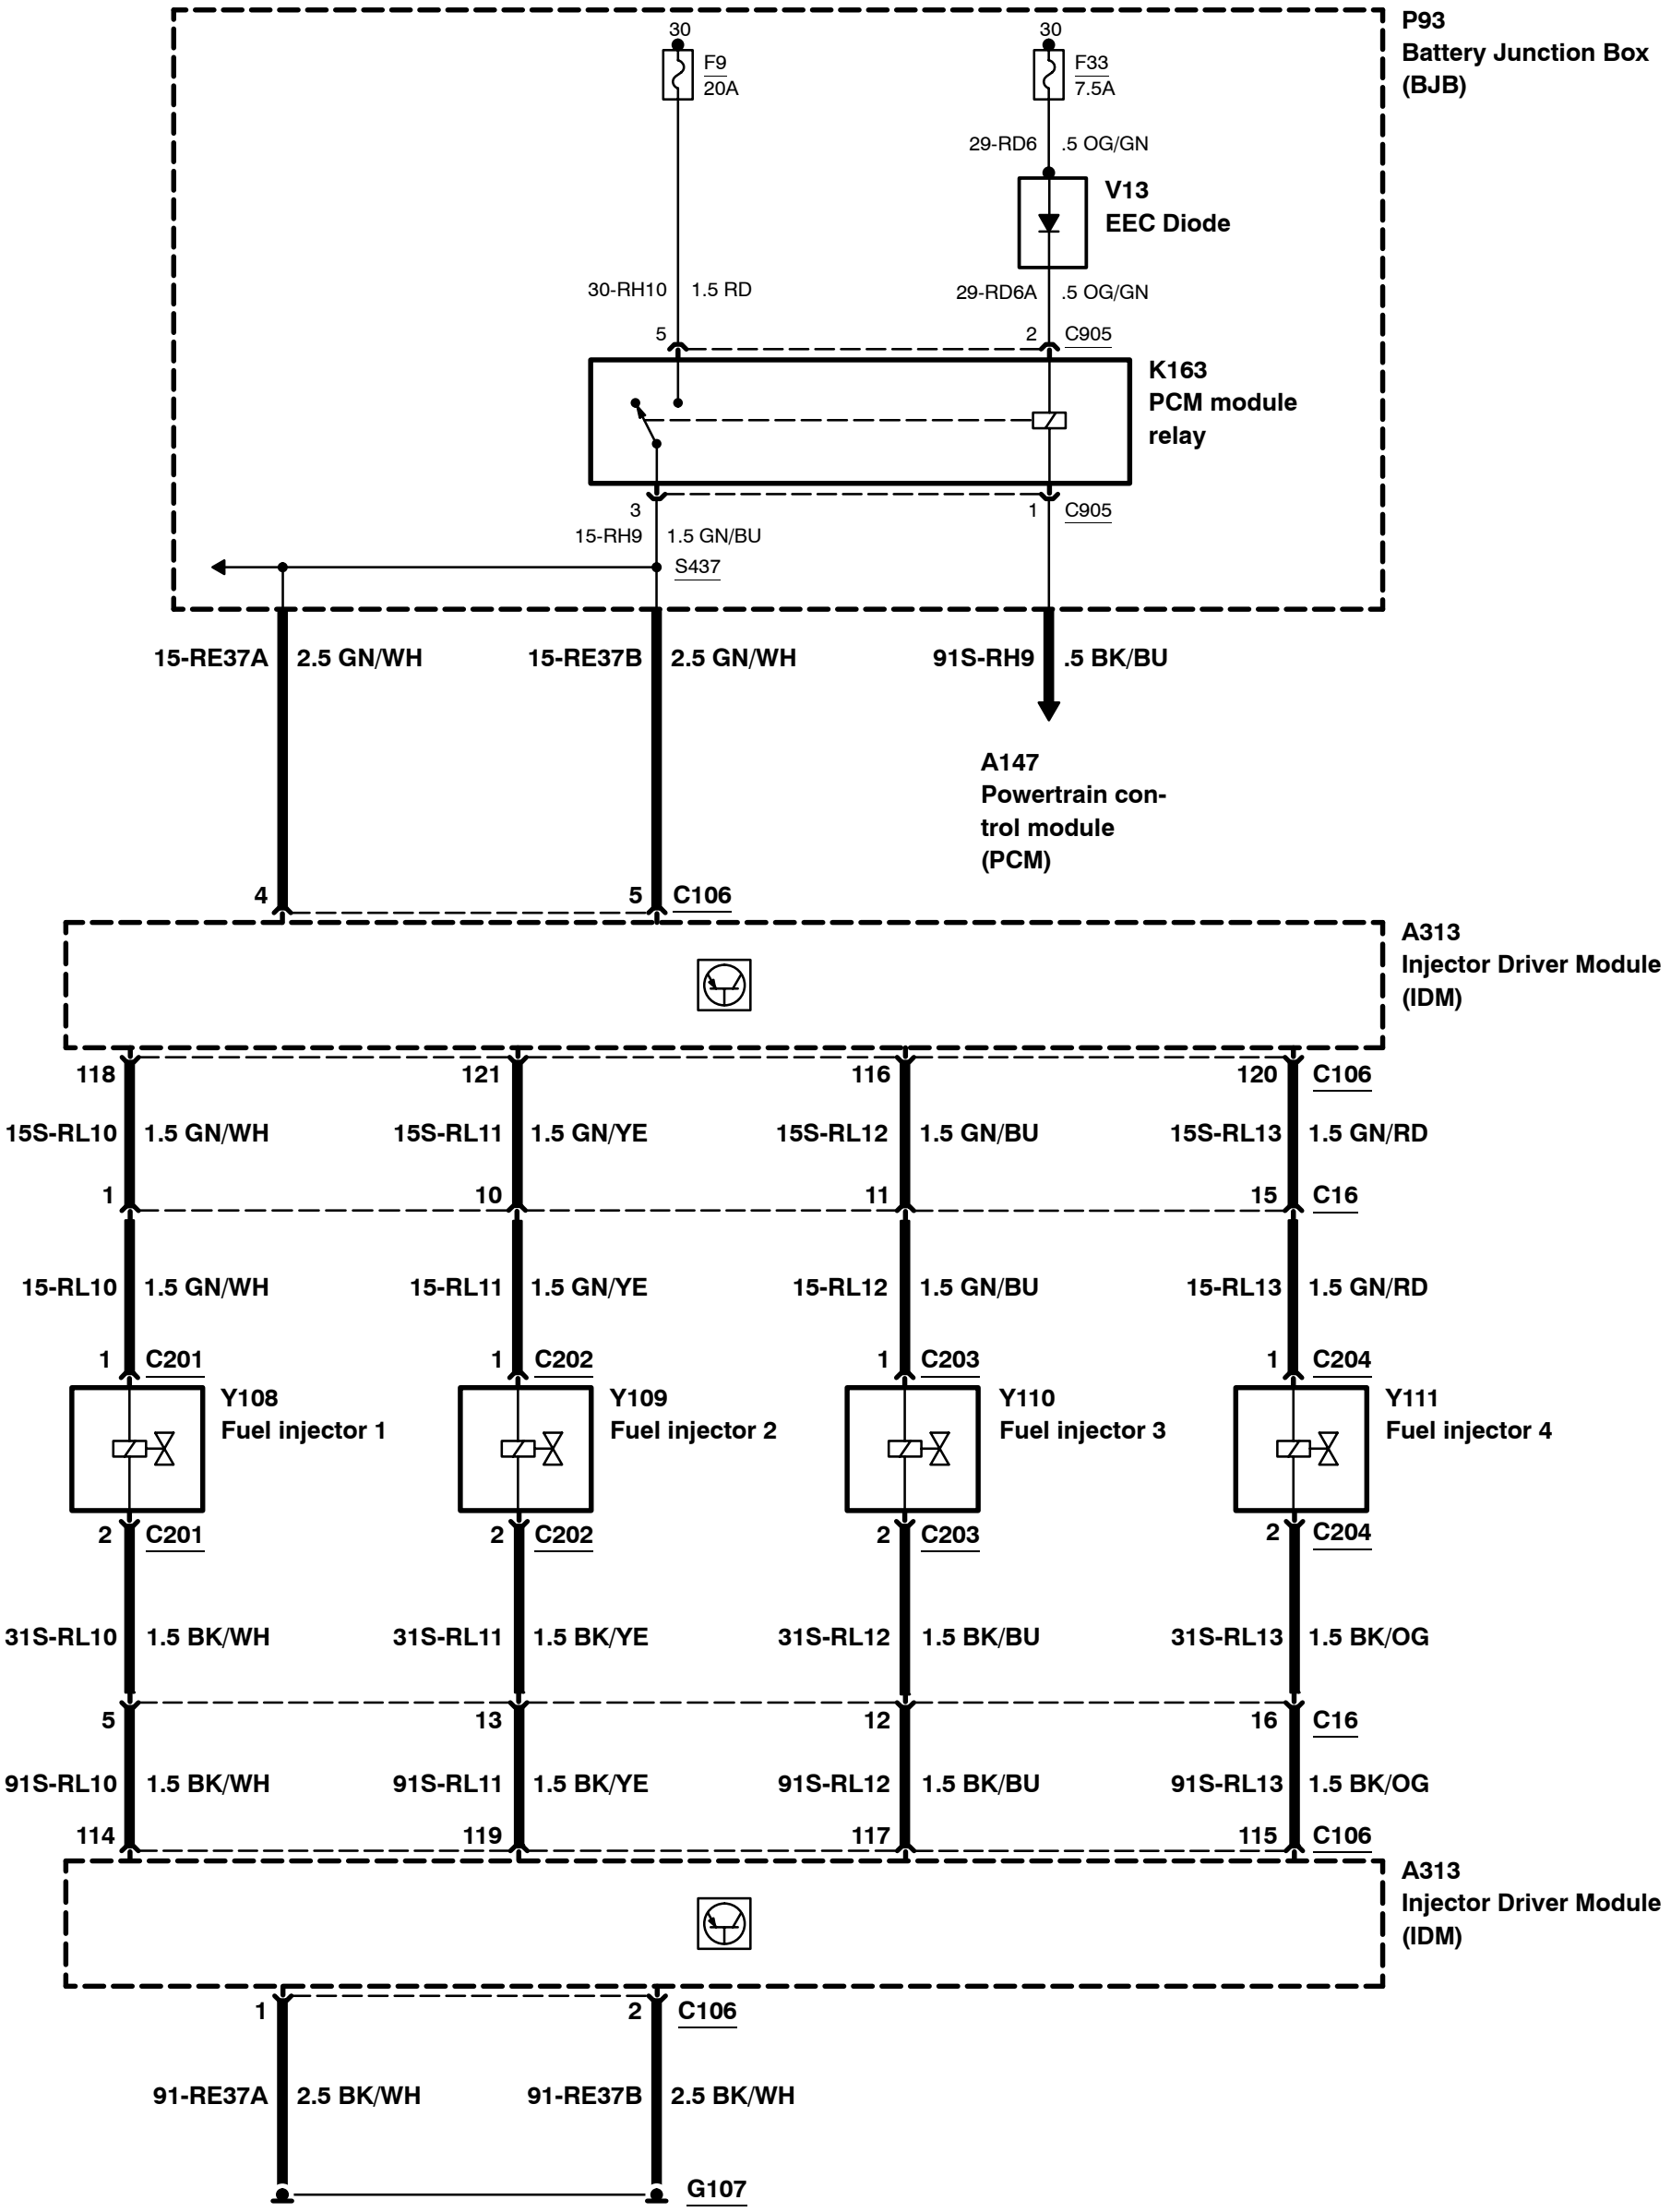


Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)

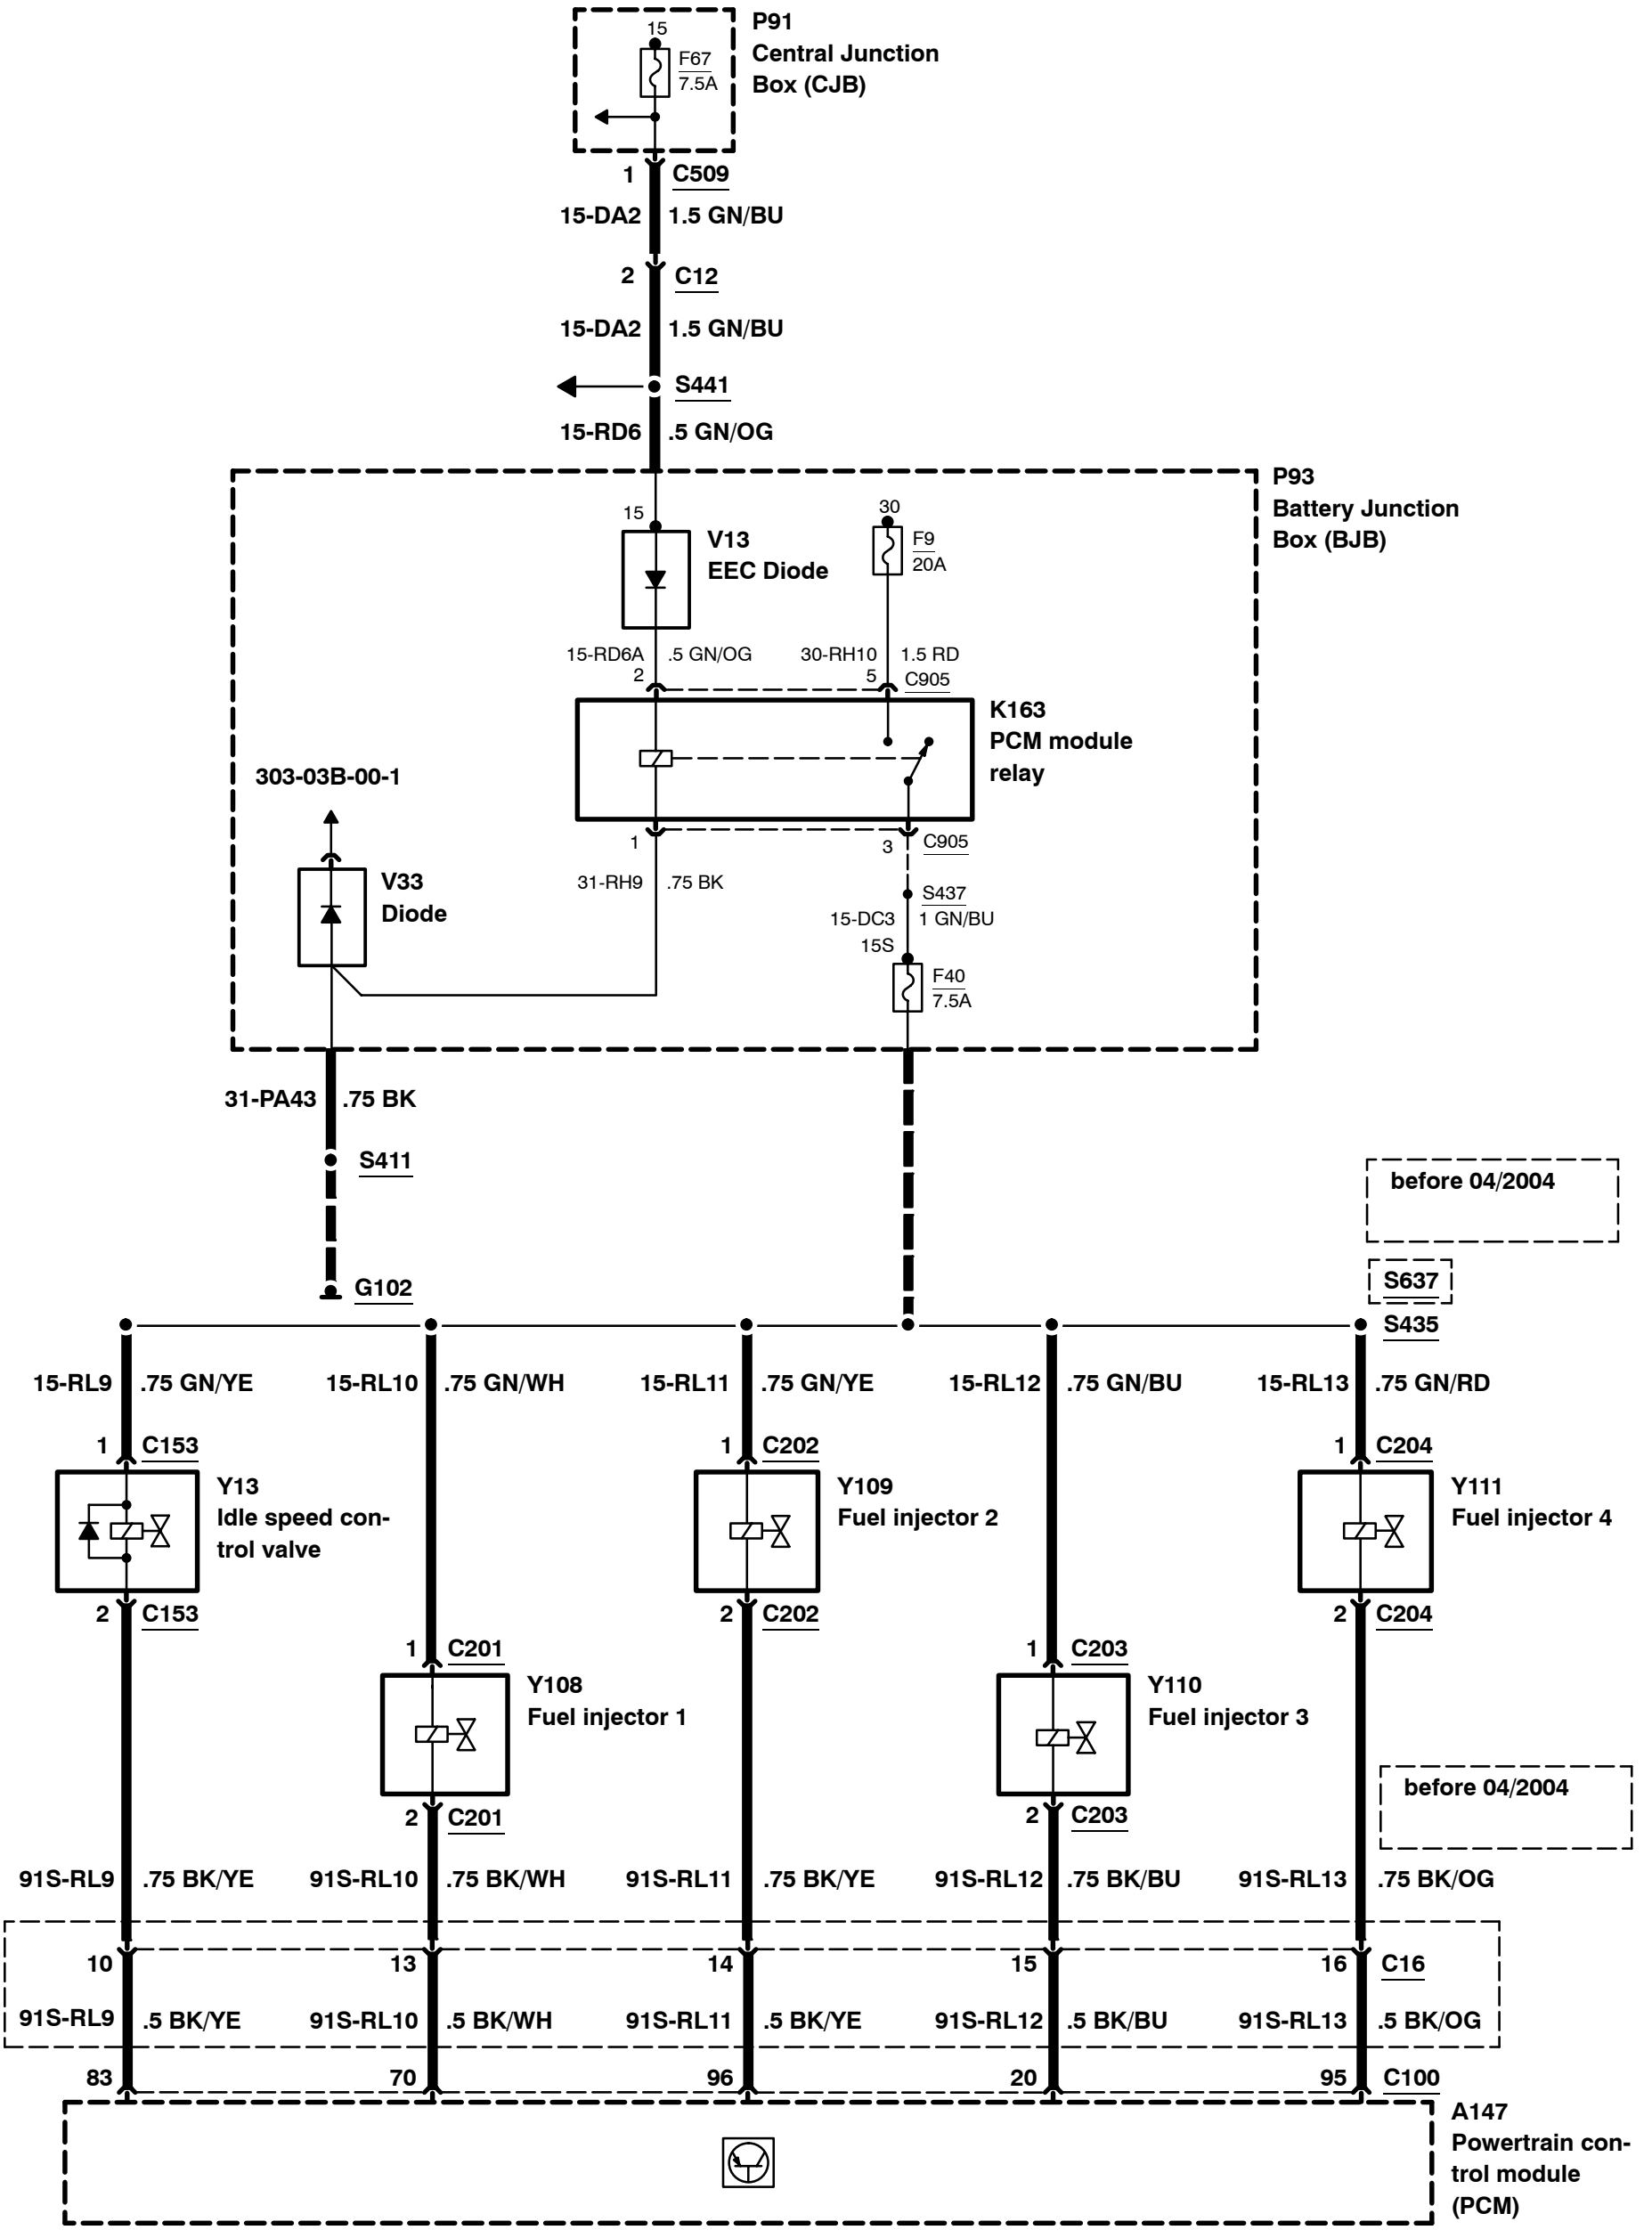


Fuel Charging and Controls – 2.5L Duratec–VE (VE6)

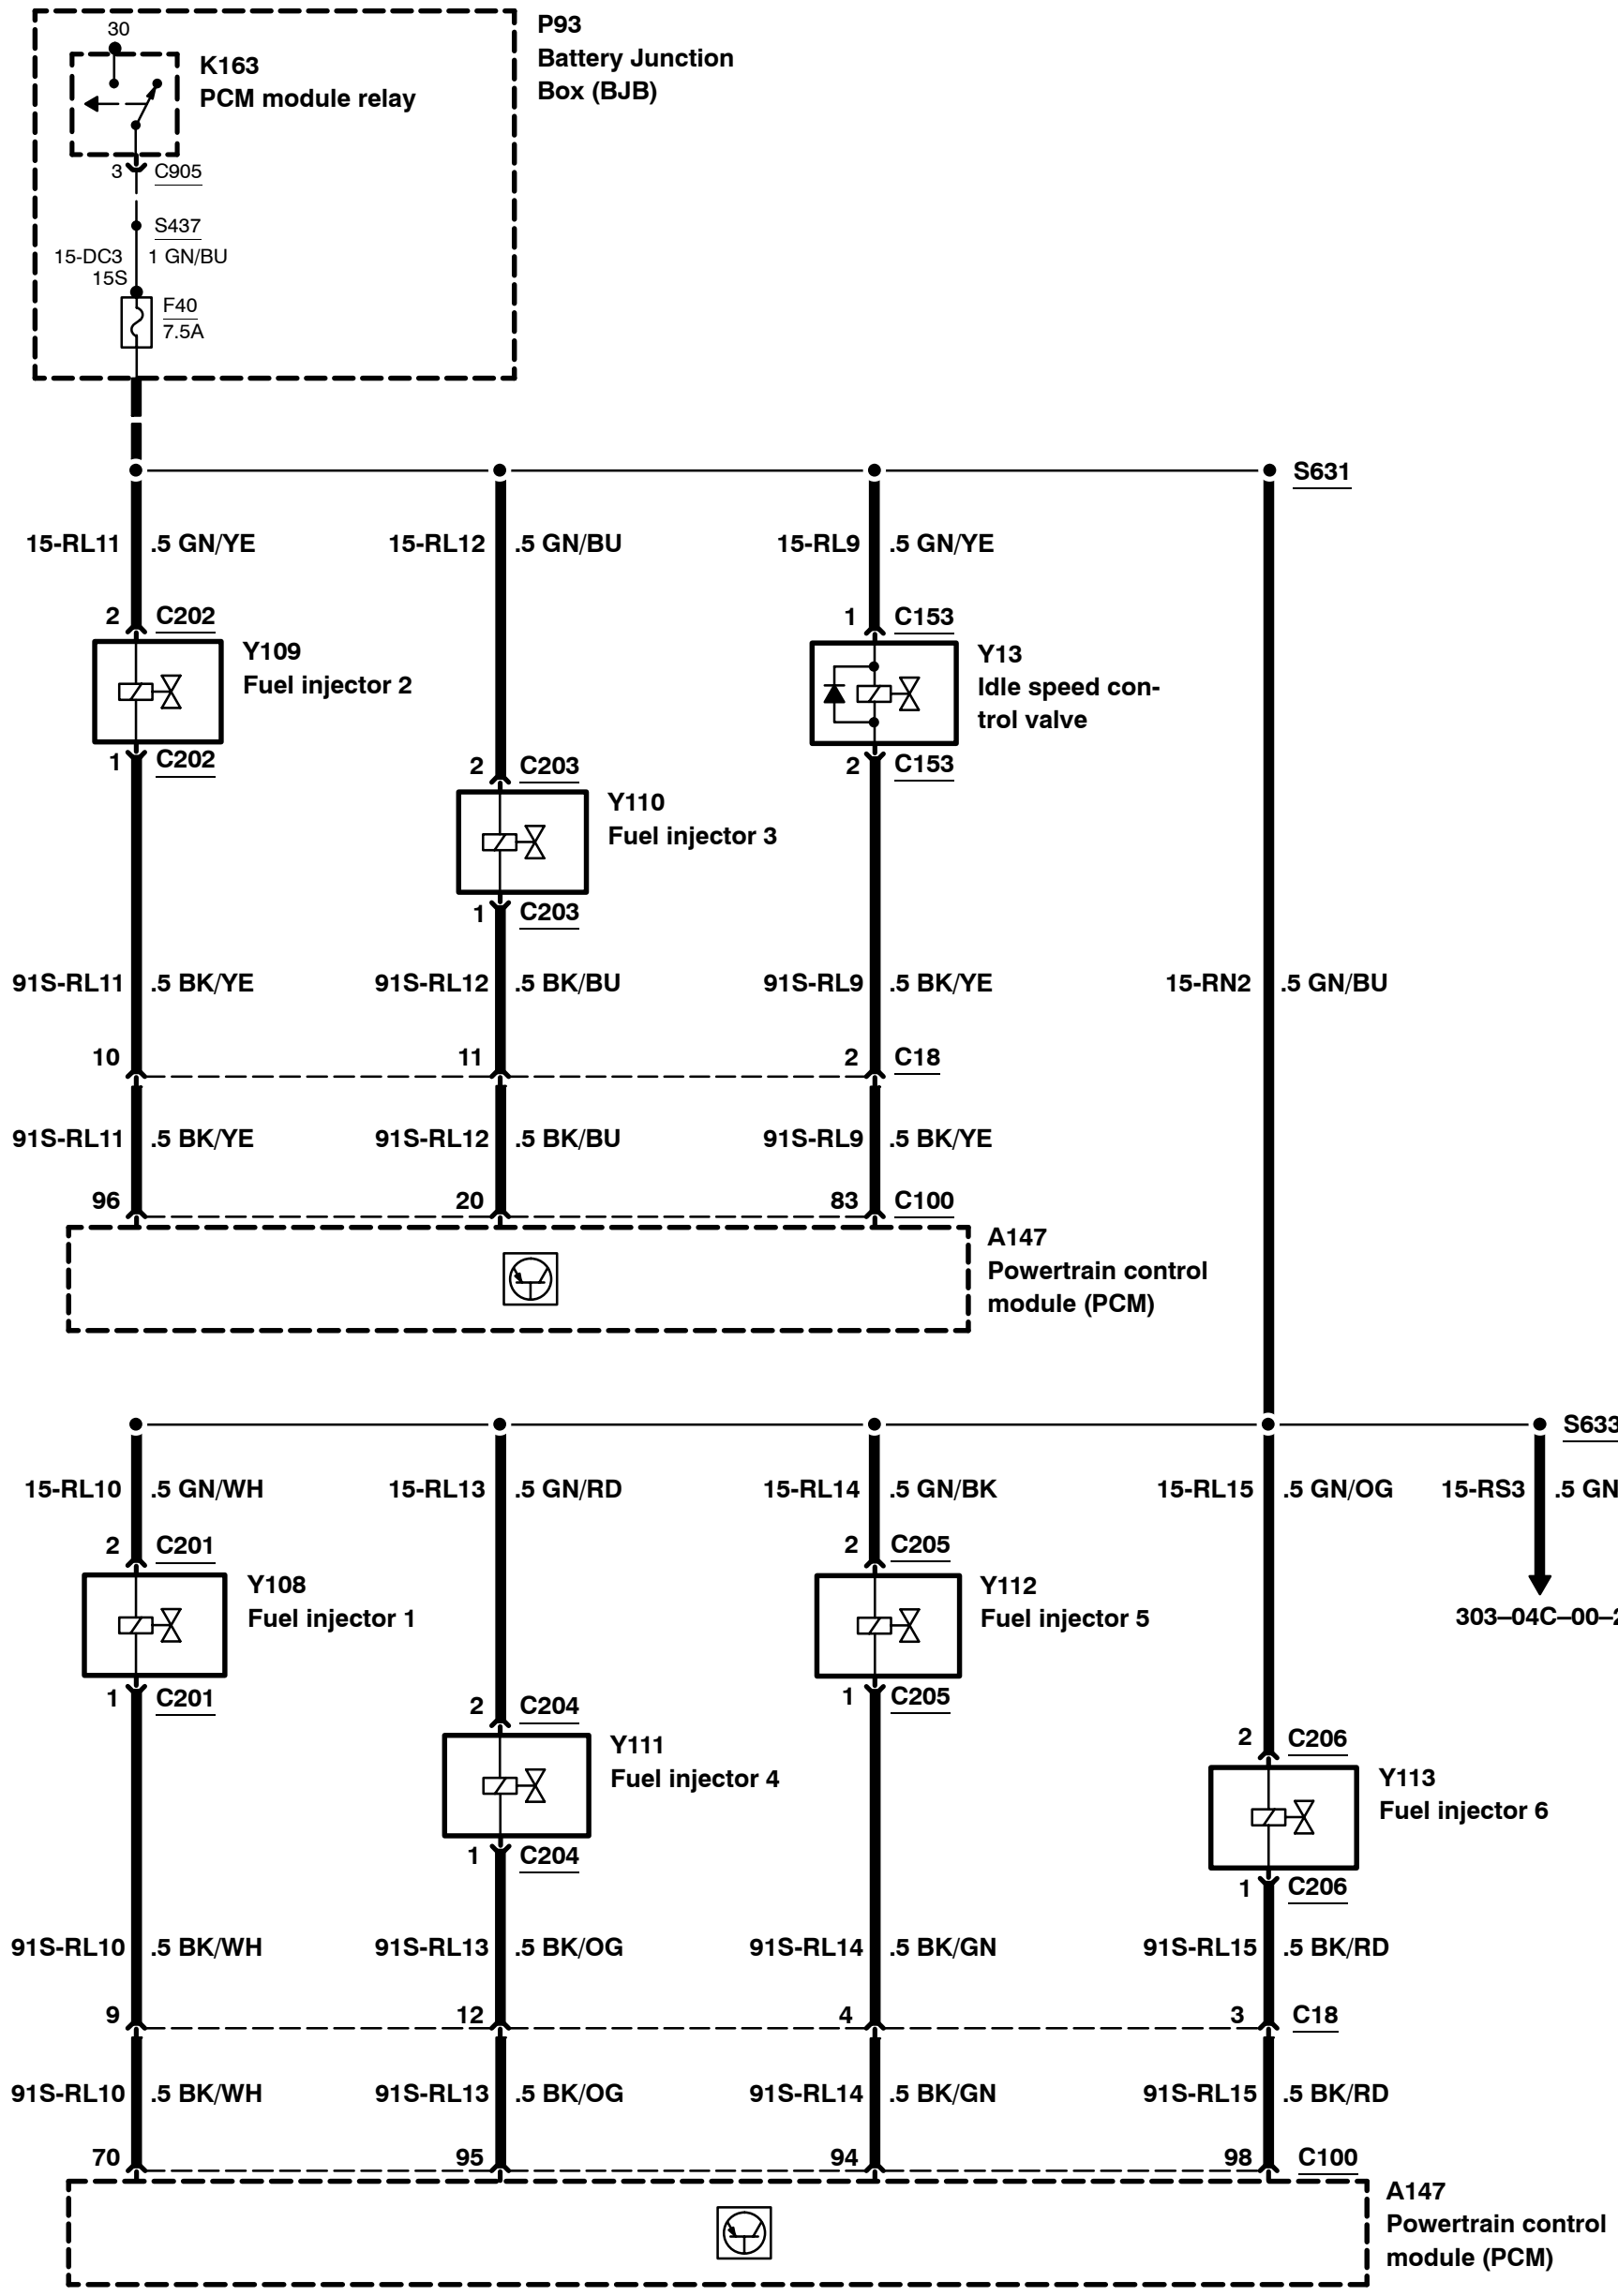


Fuel Charging and Controls – 2.5L Duratec–VE (VE6)

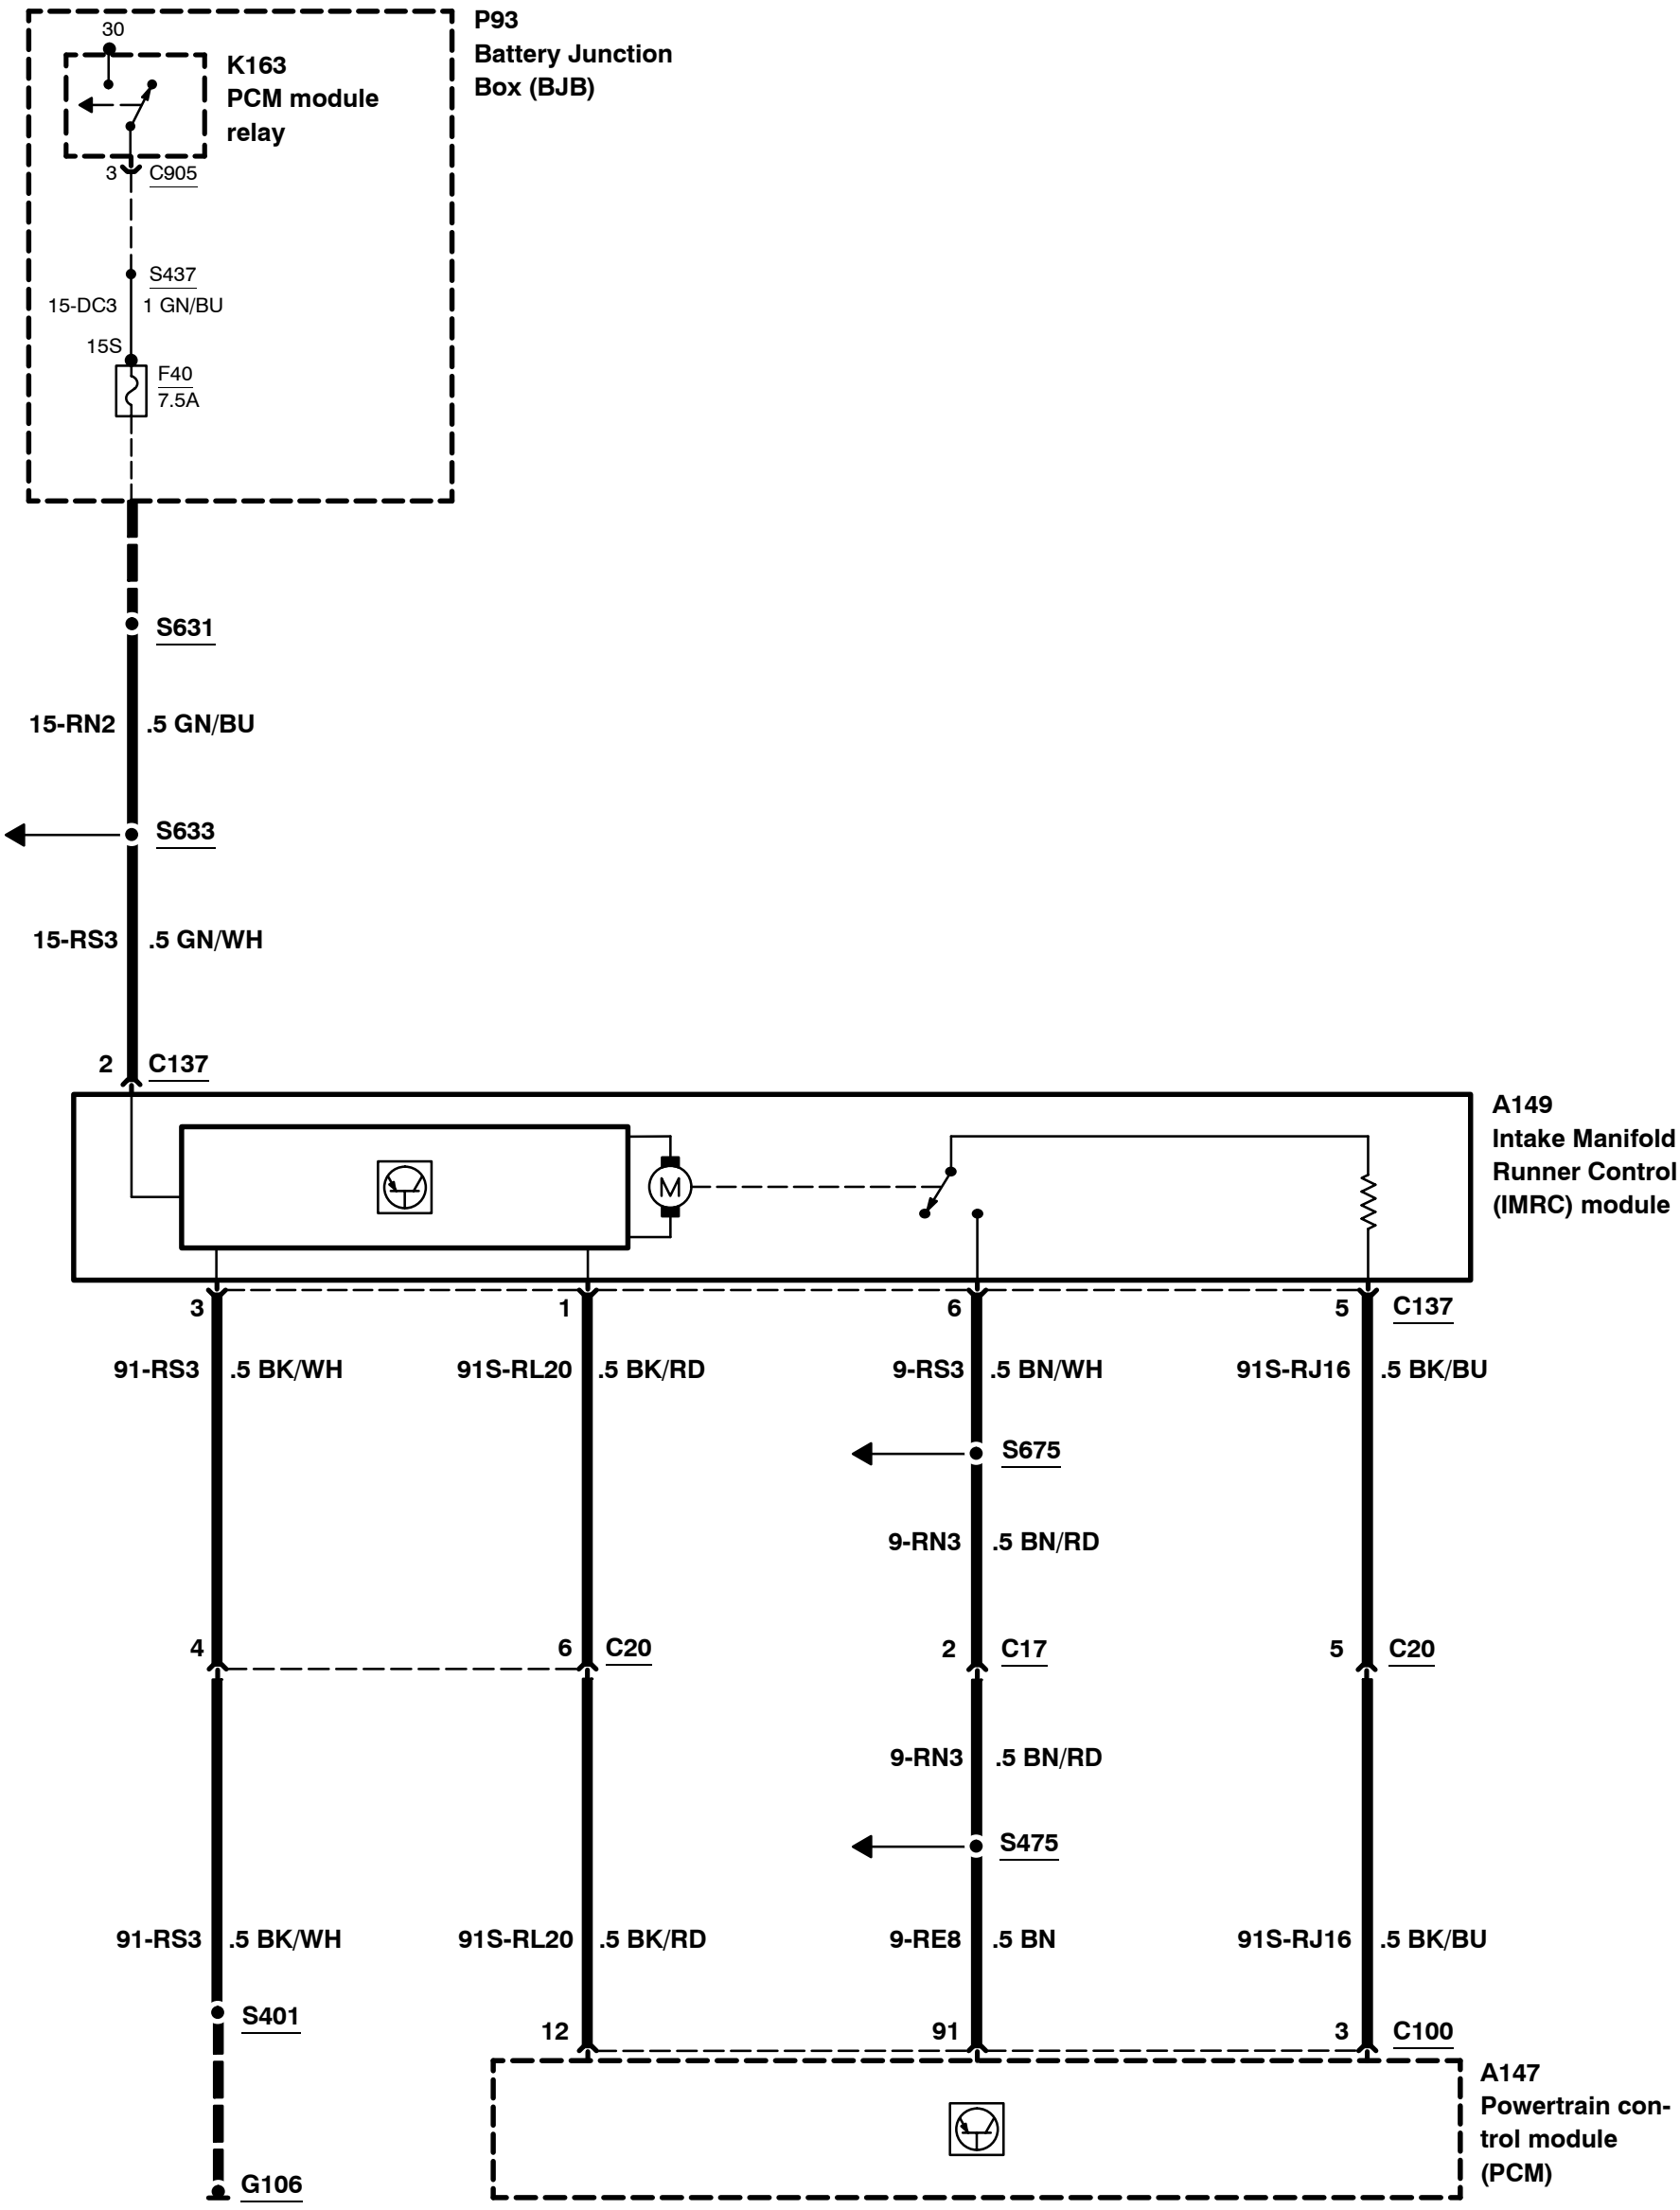


Fuel Charging and Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

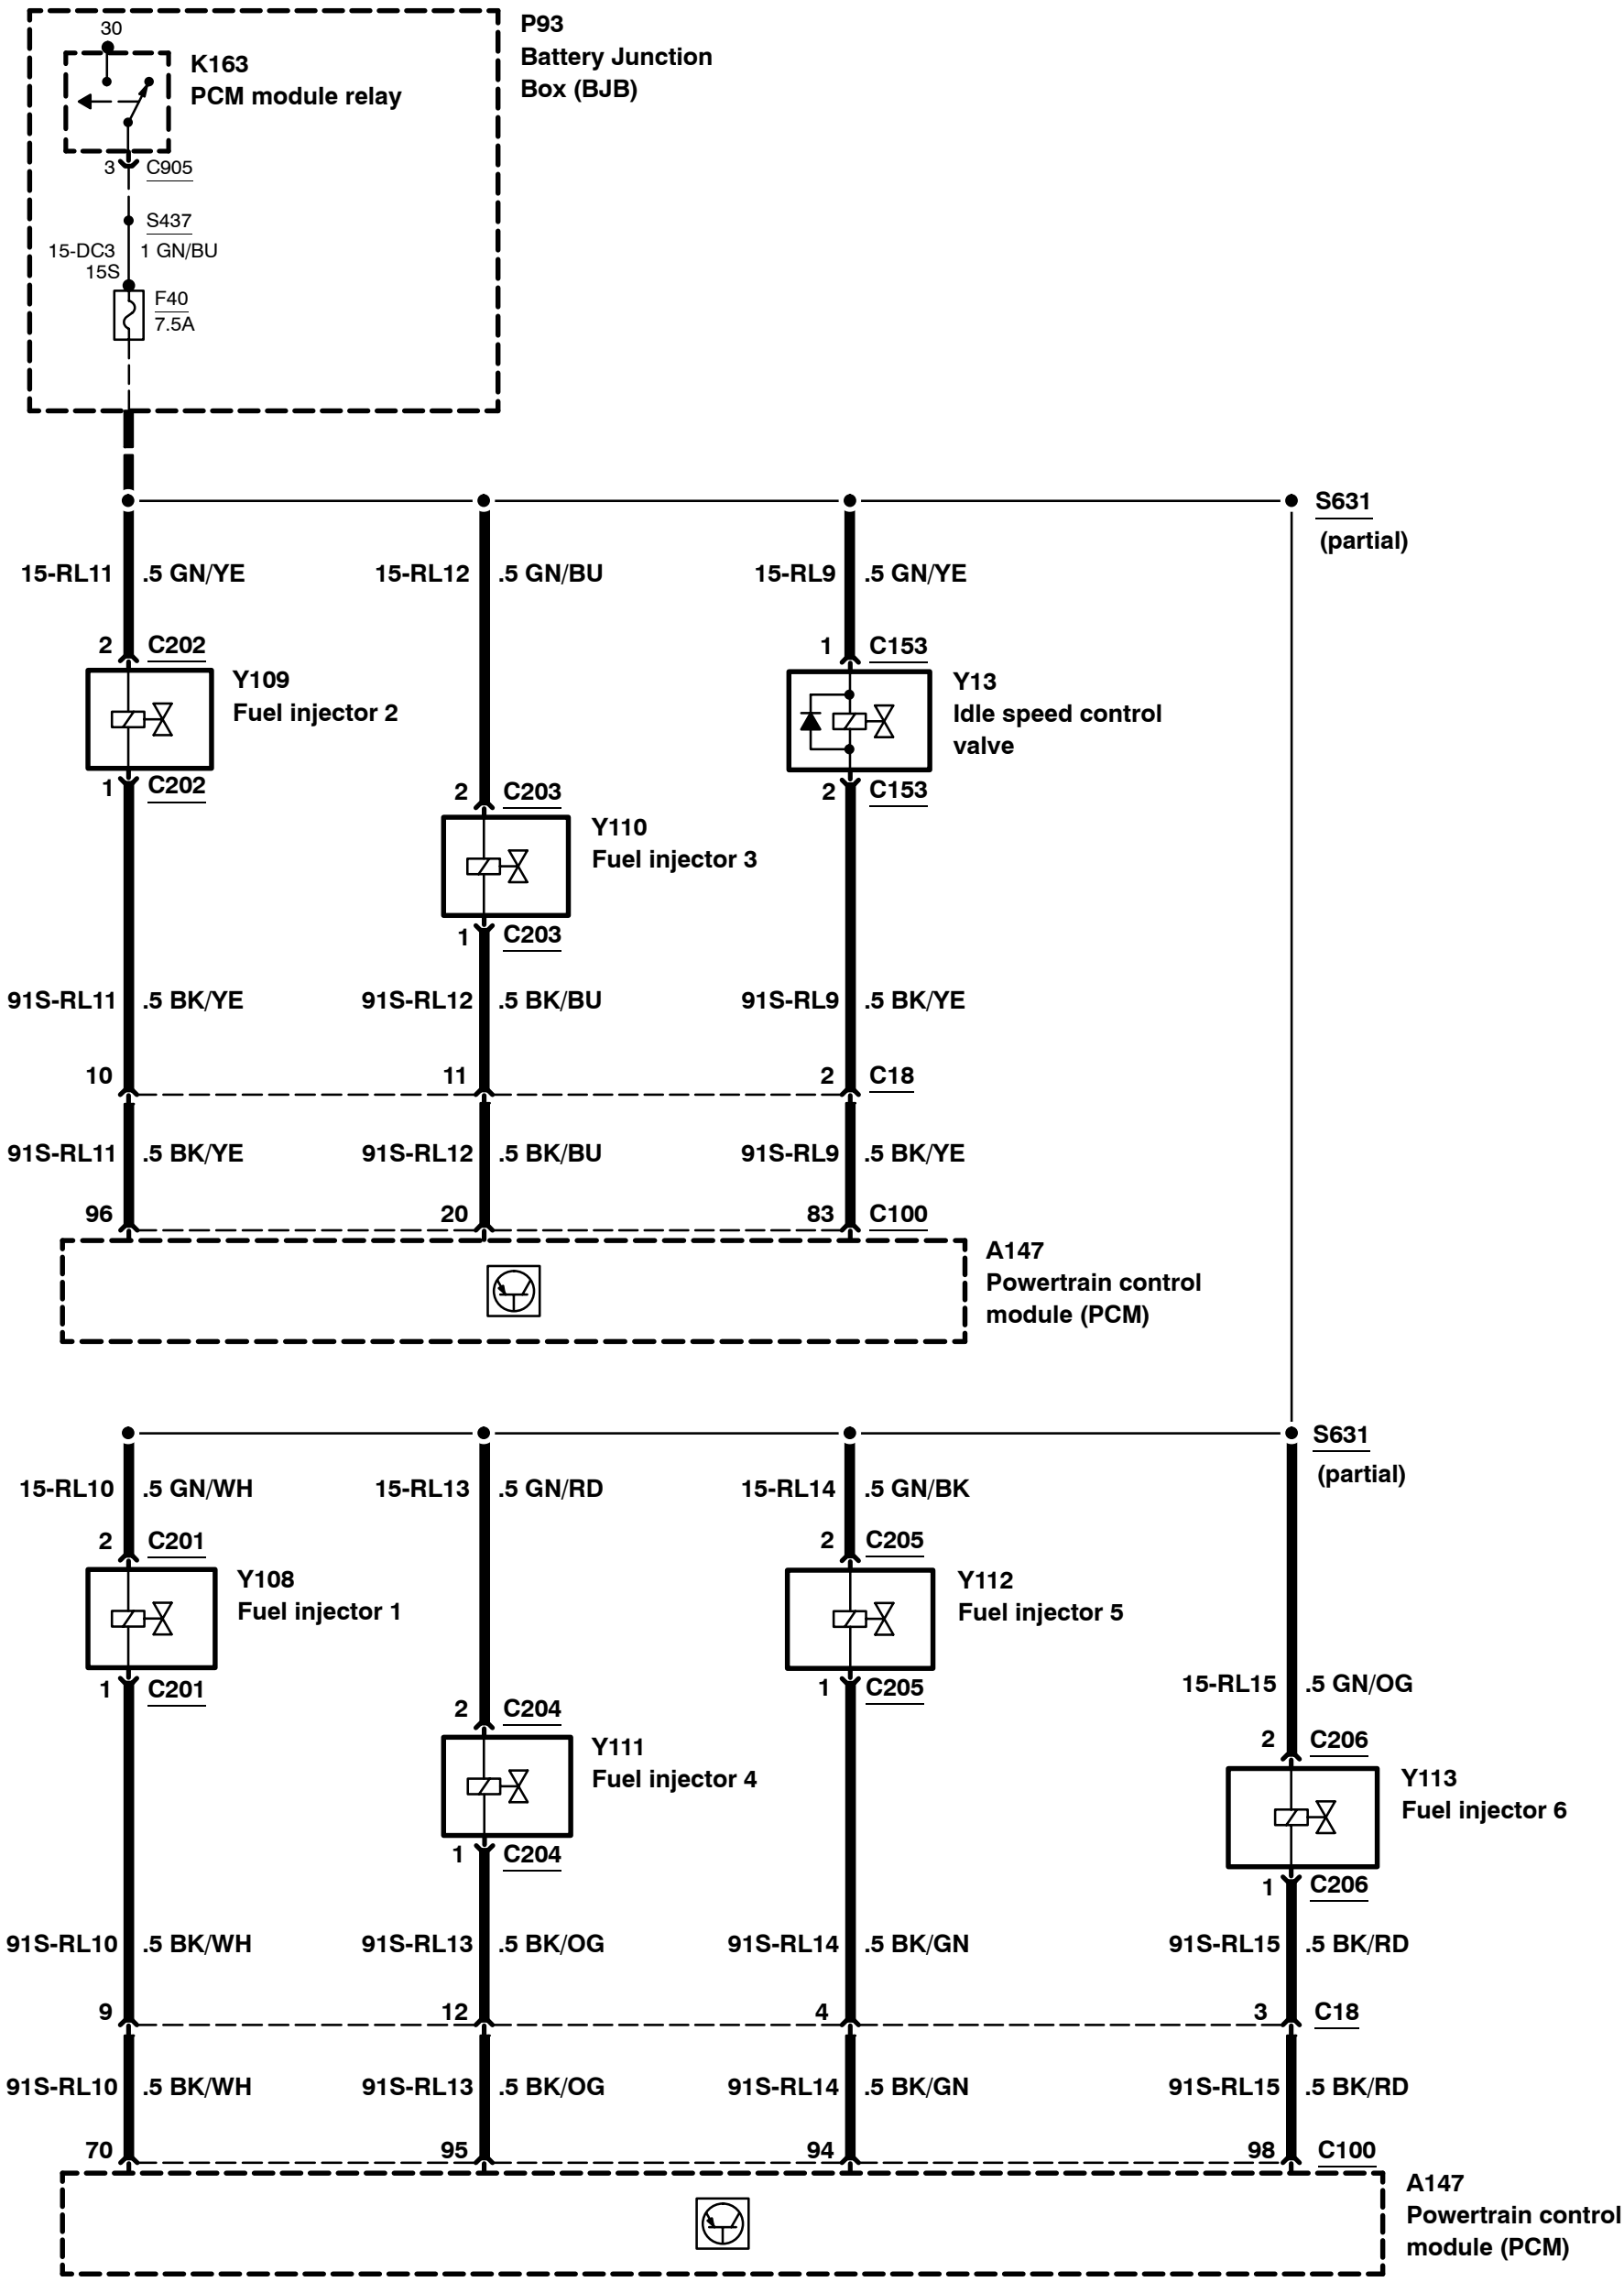


Fuel Charging and Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

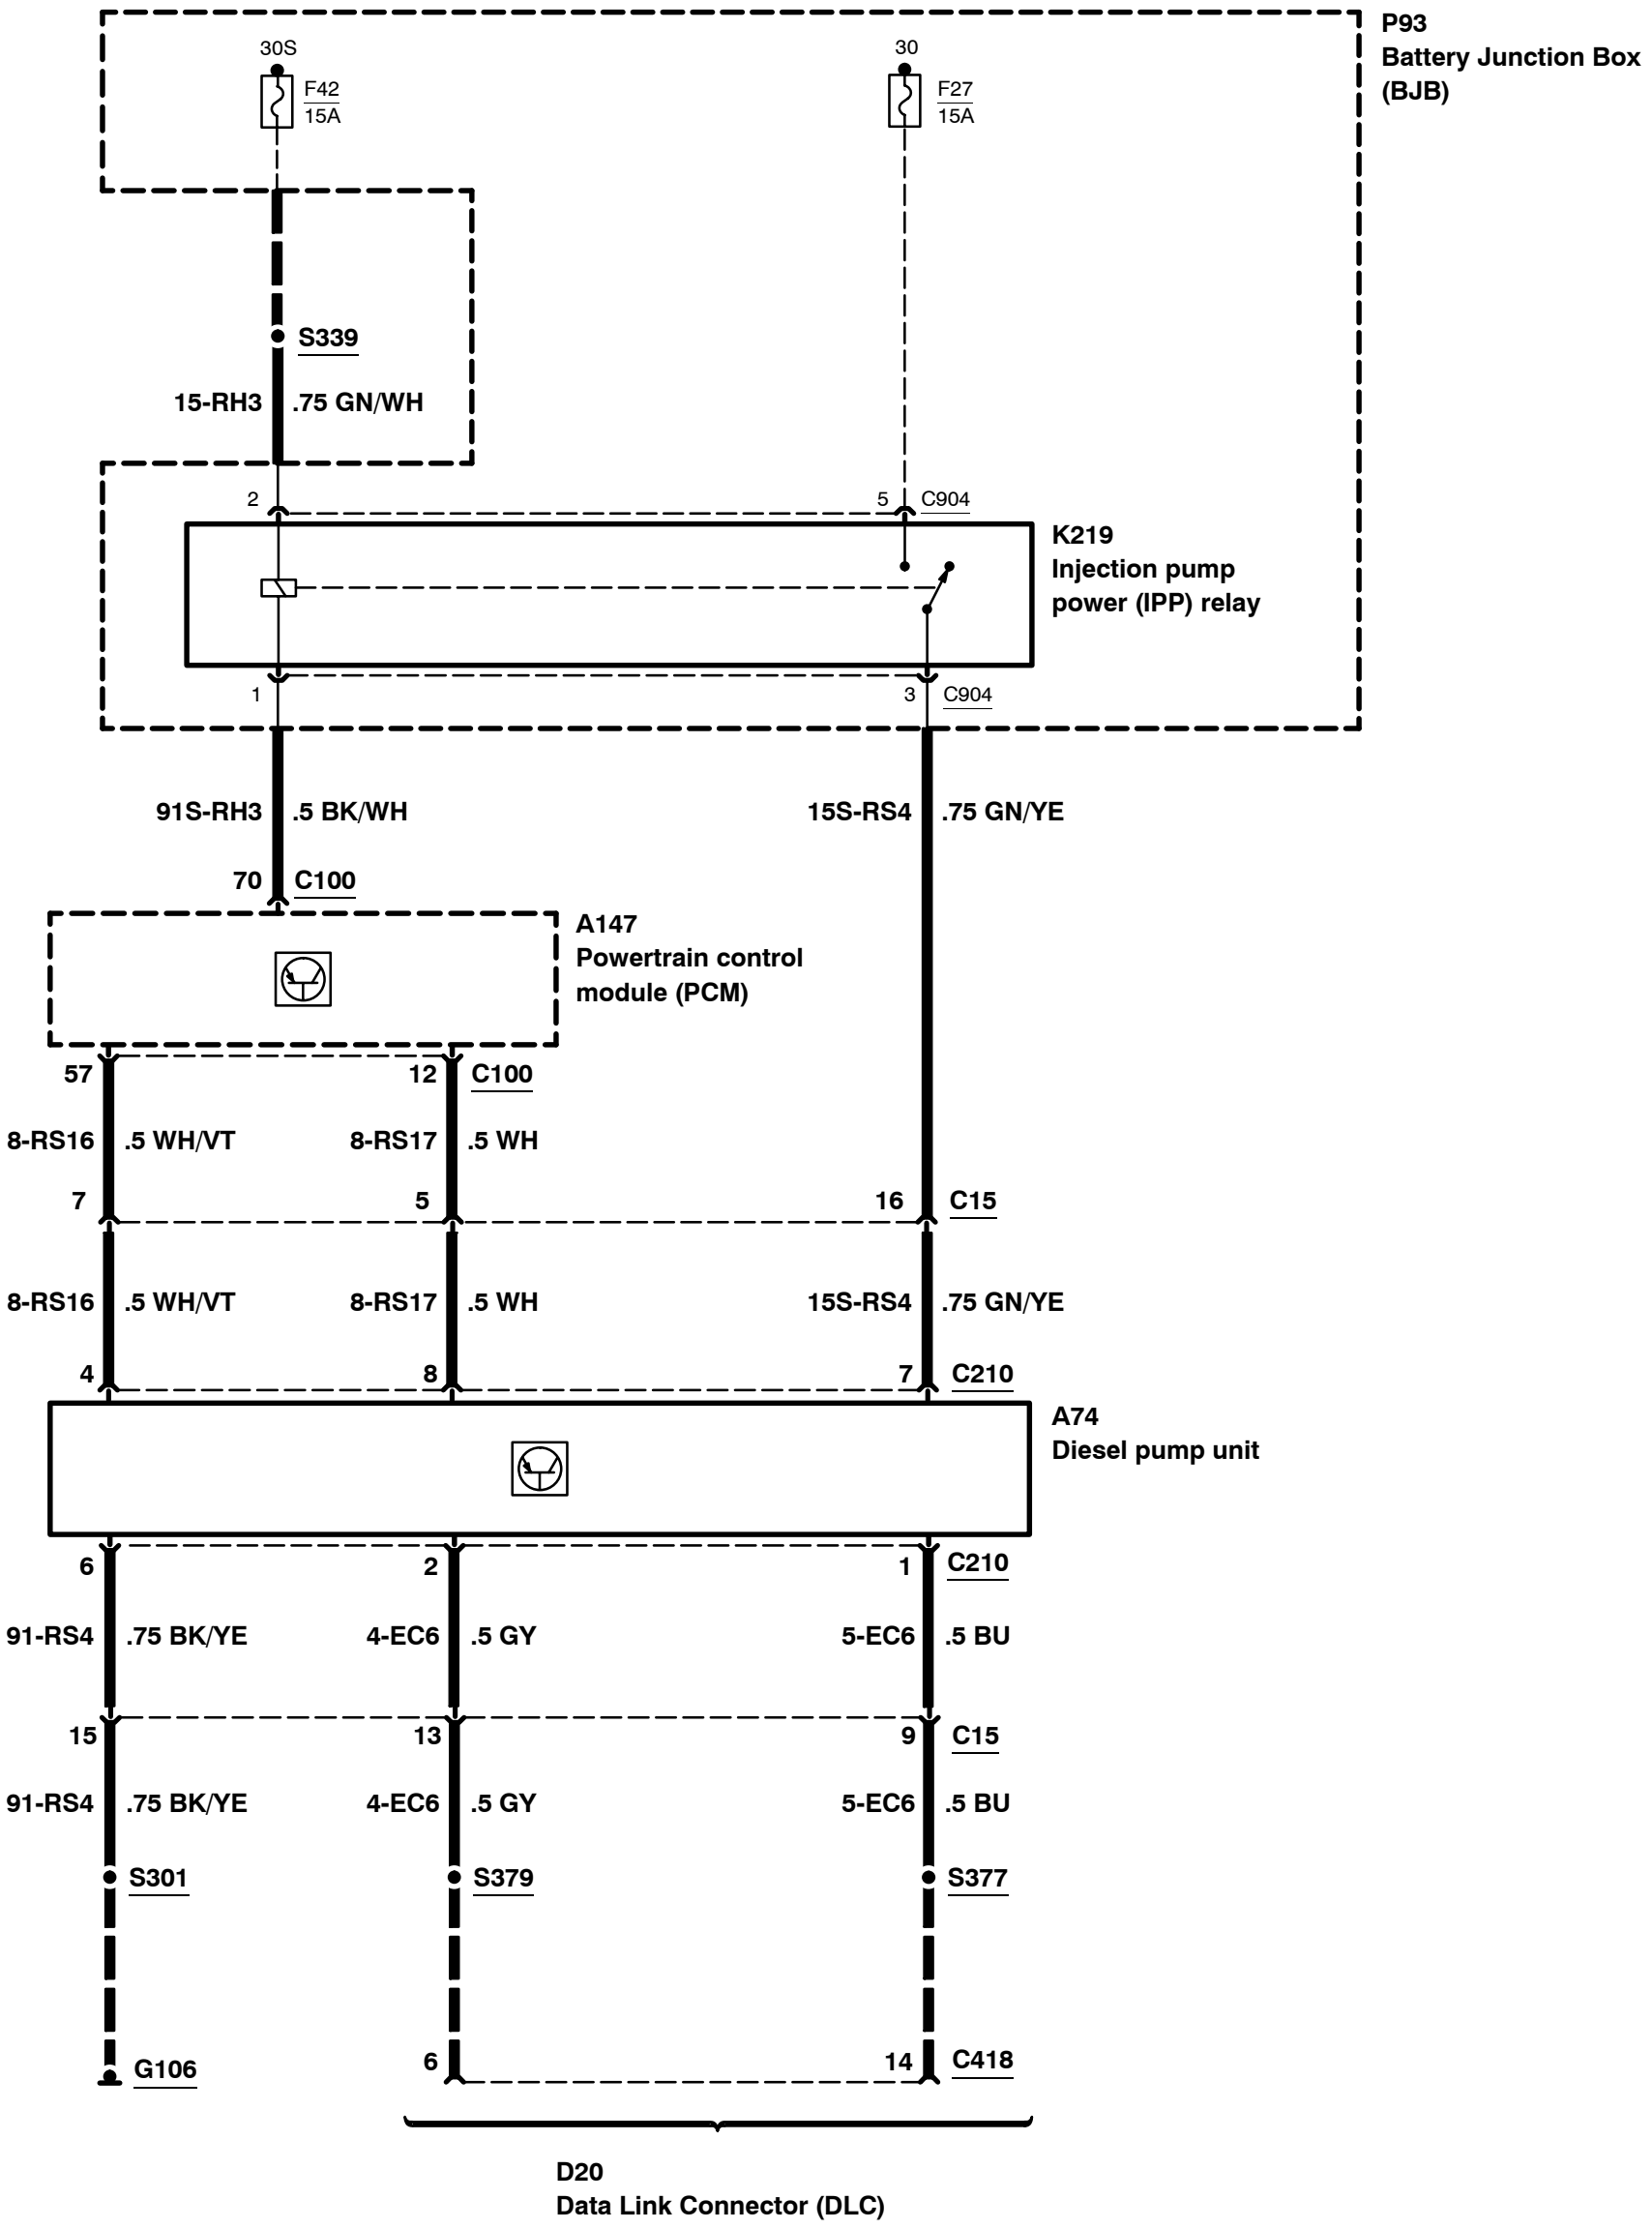


Fuel Charging and Controls – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

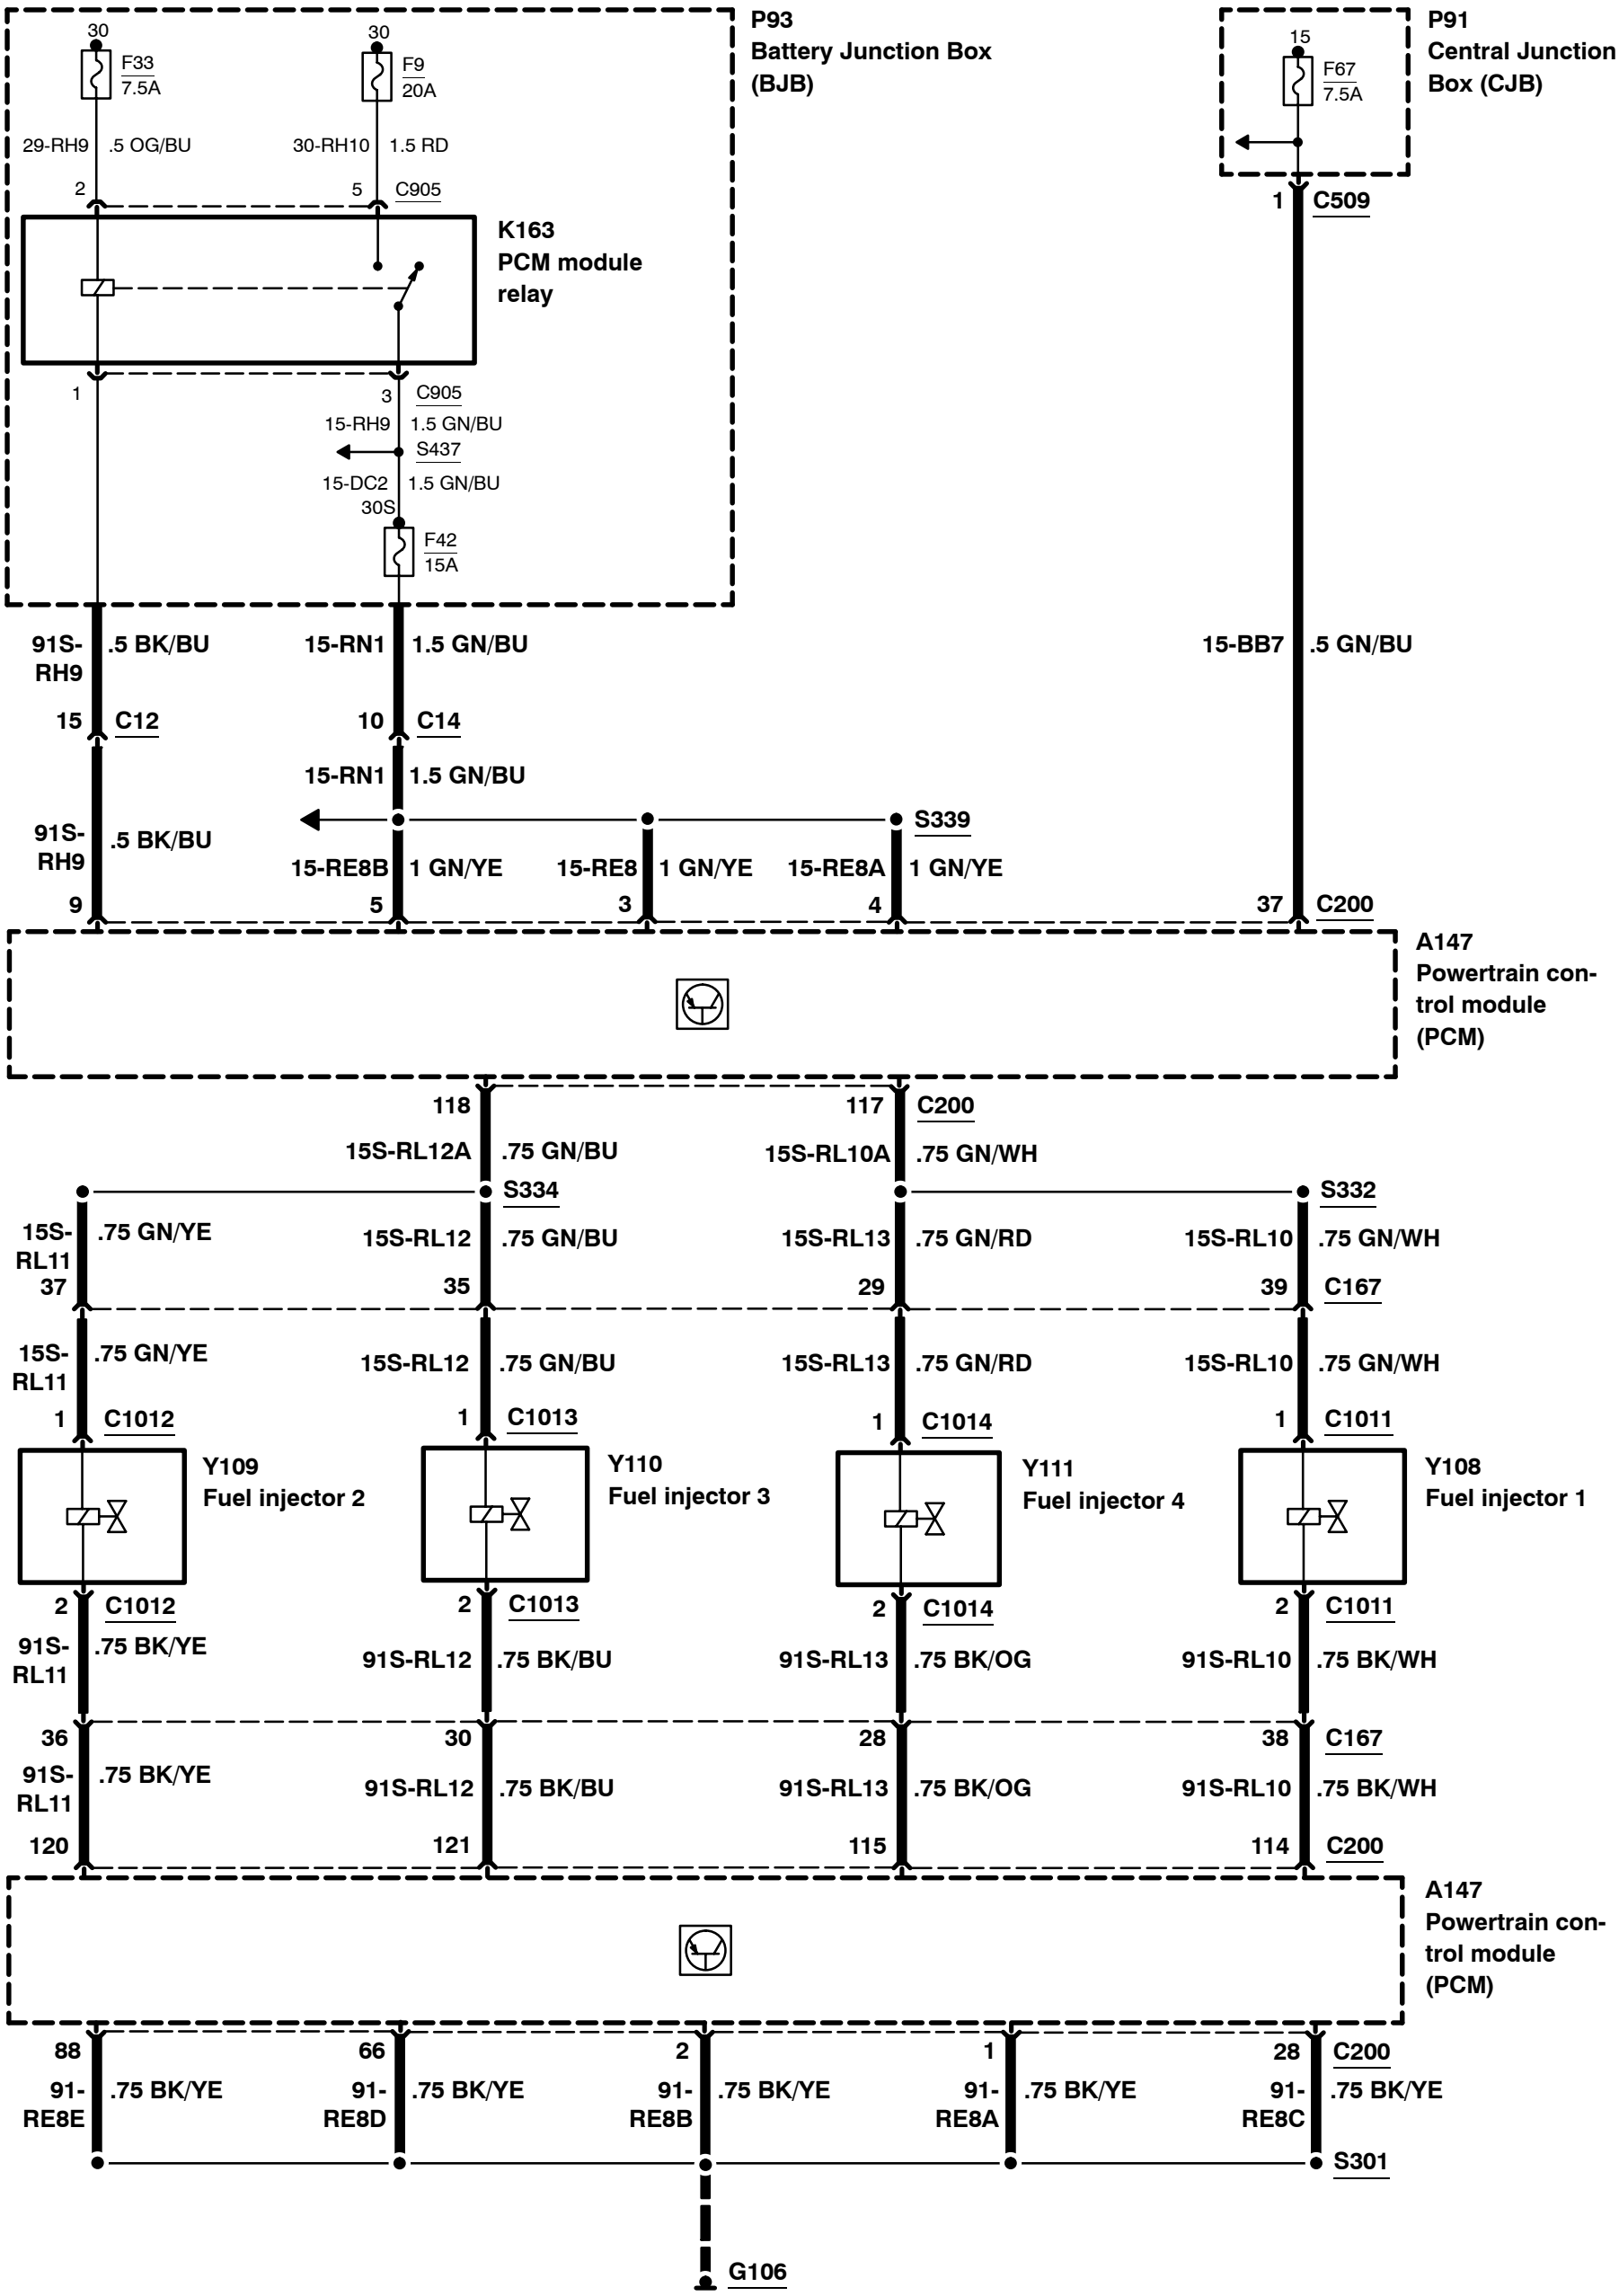


Starting System

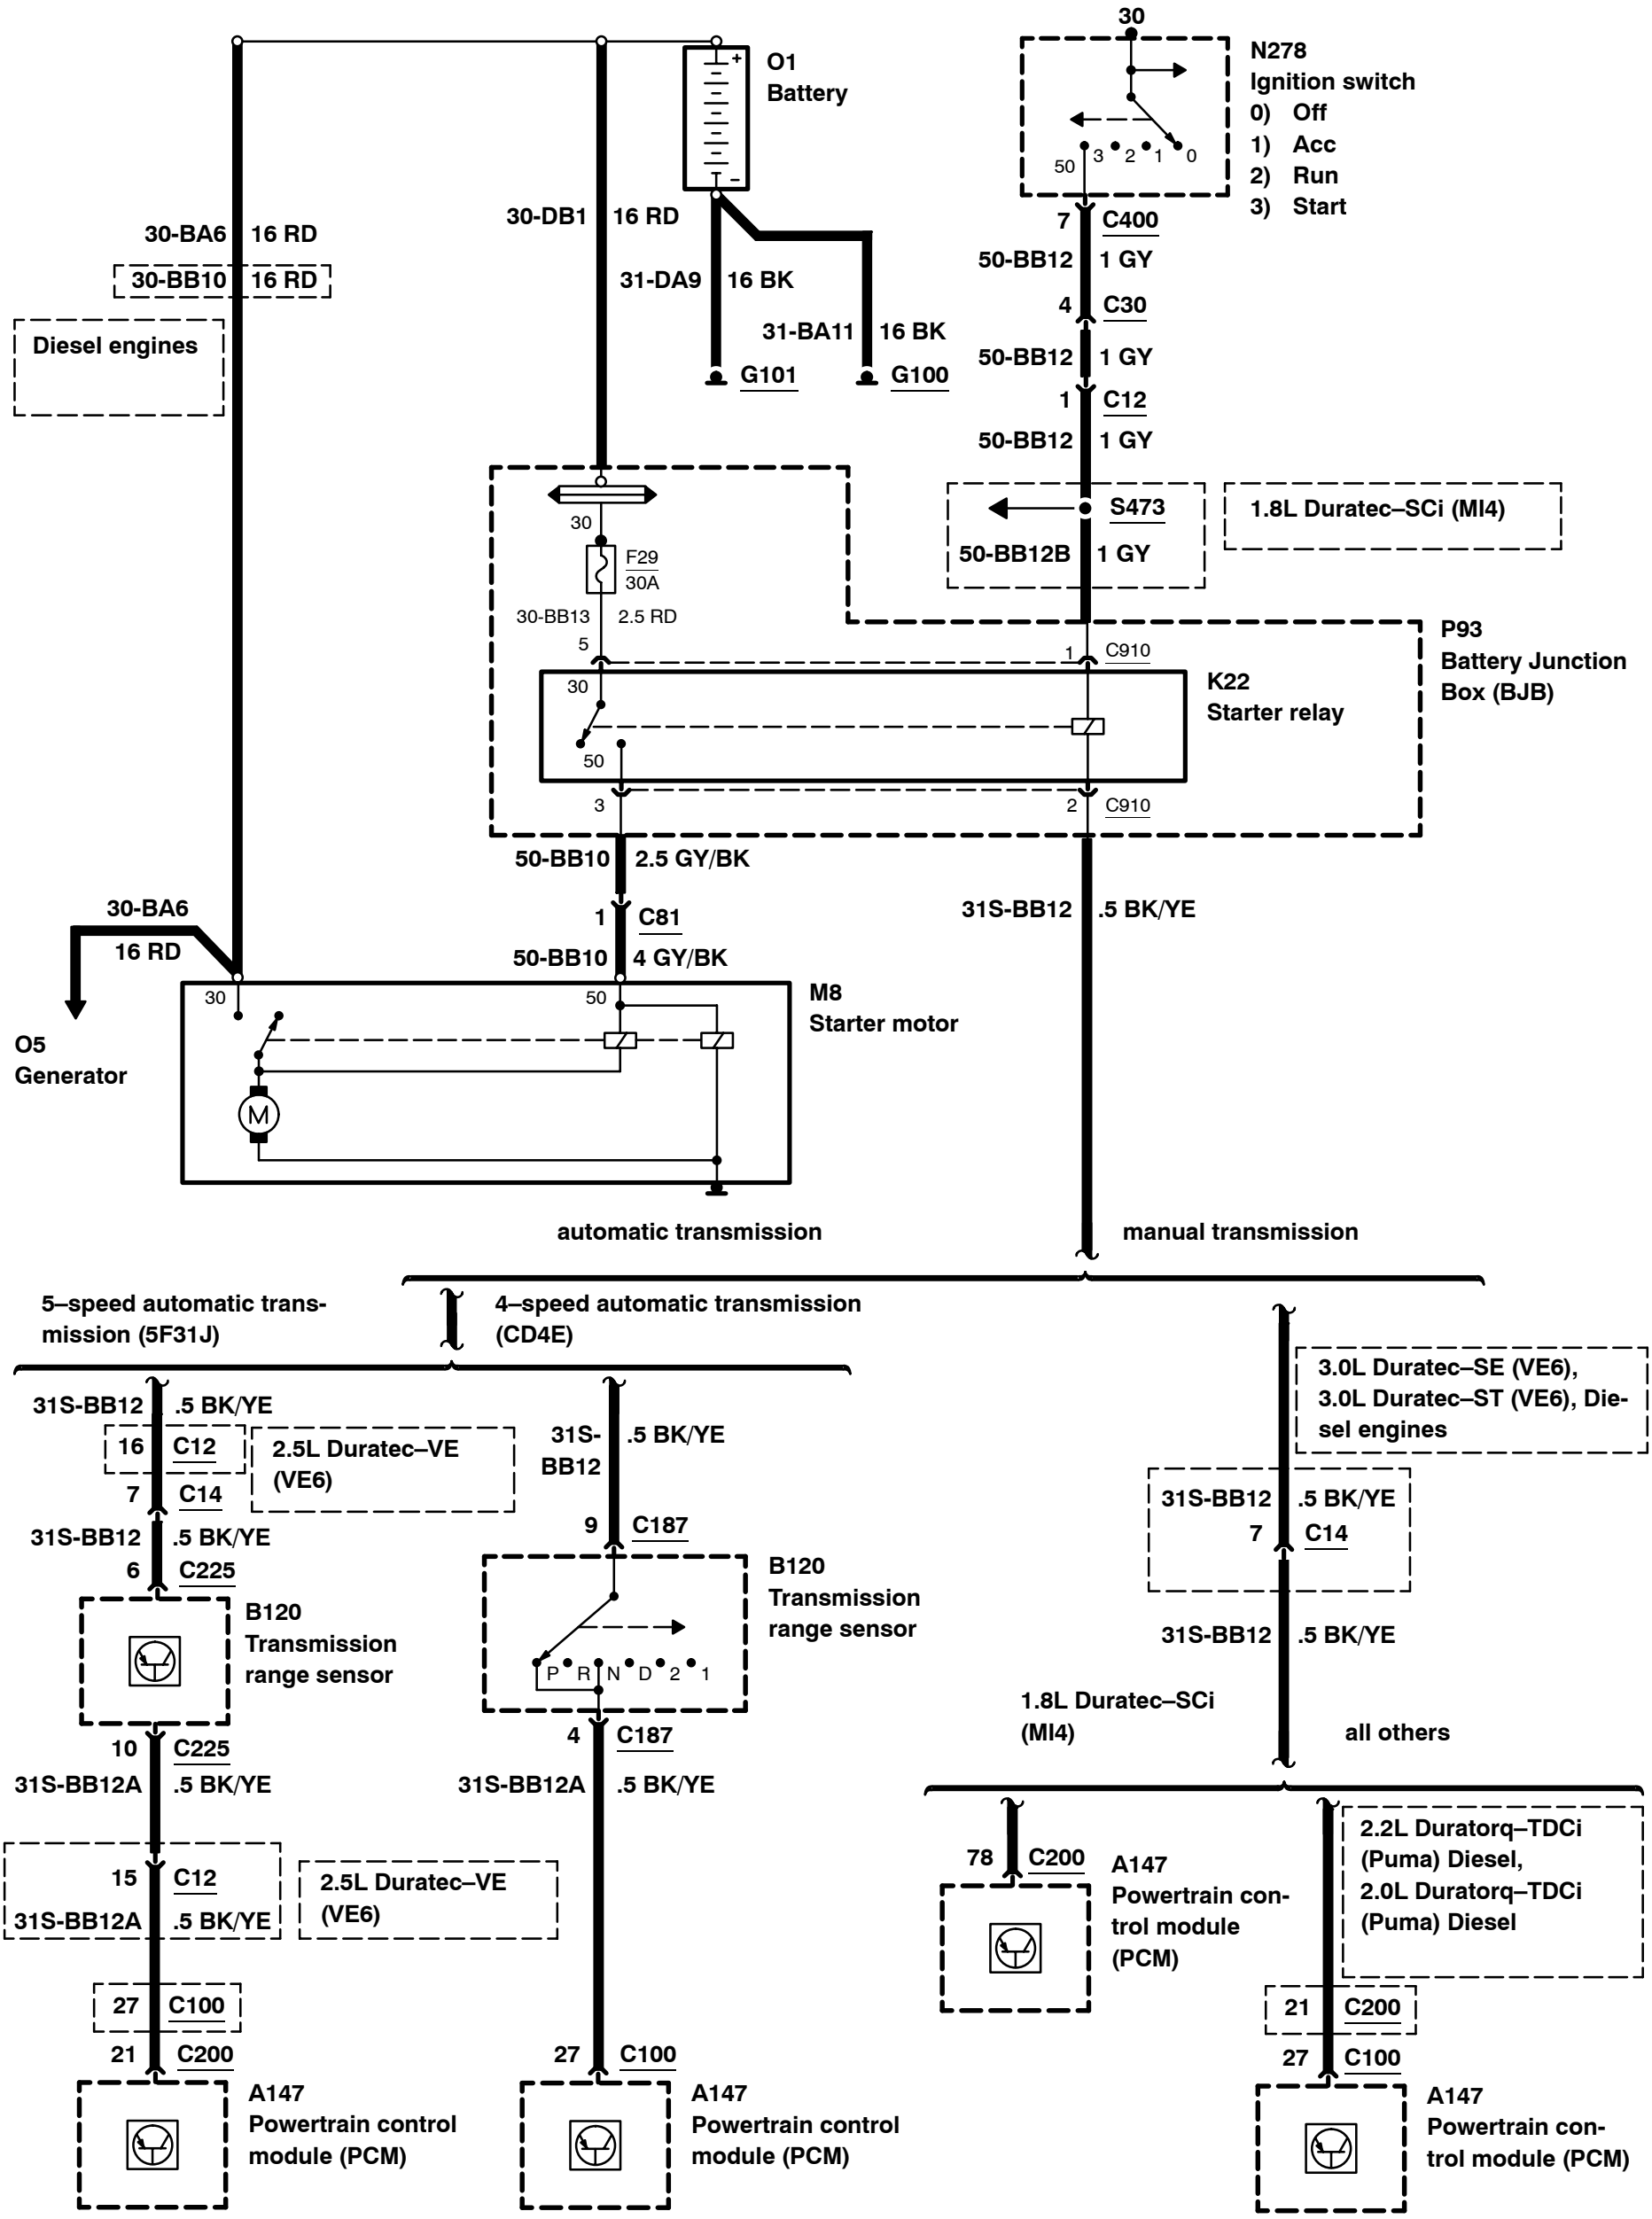


Engine Ignition – 1.8L Duratec–SCi (MI4)

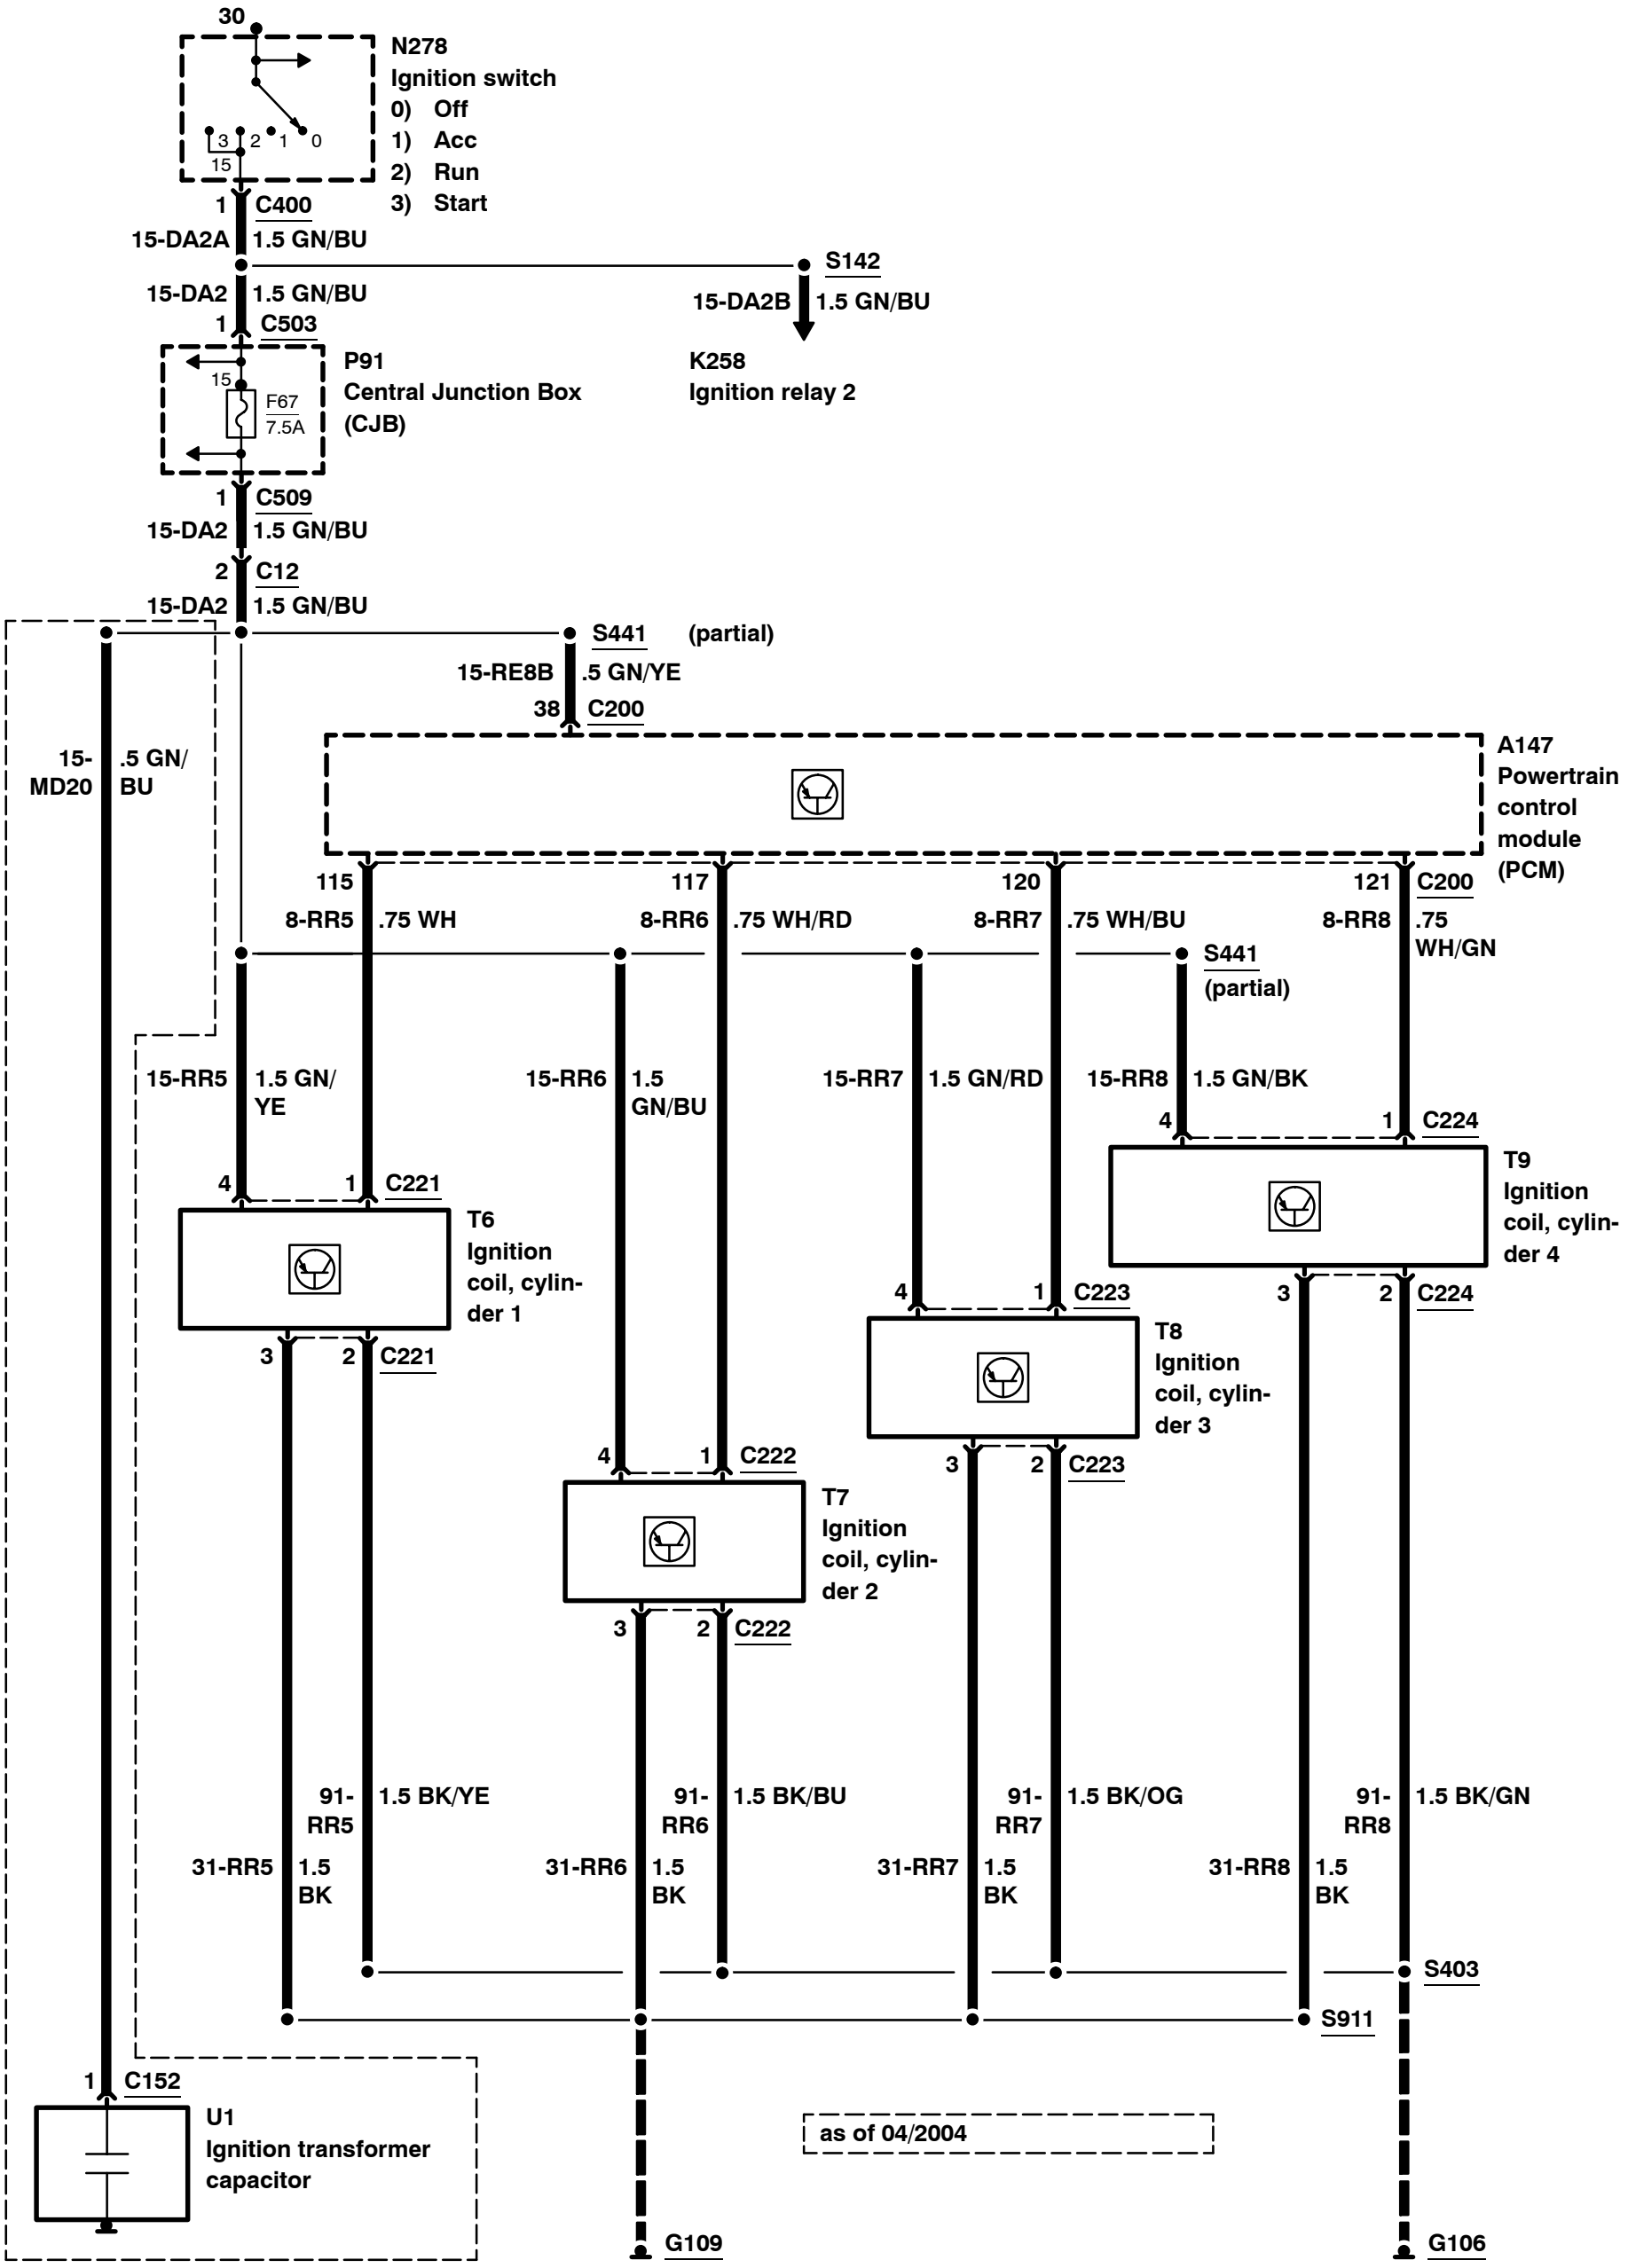


Engine Ignition – 1.8/2.0L Duratec–HE (MI4)

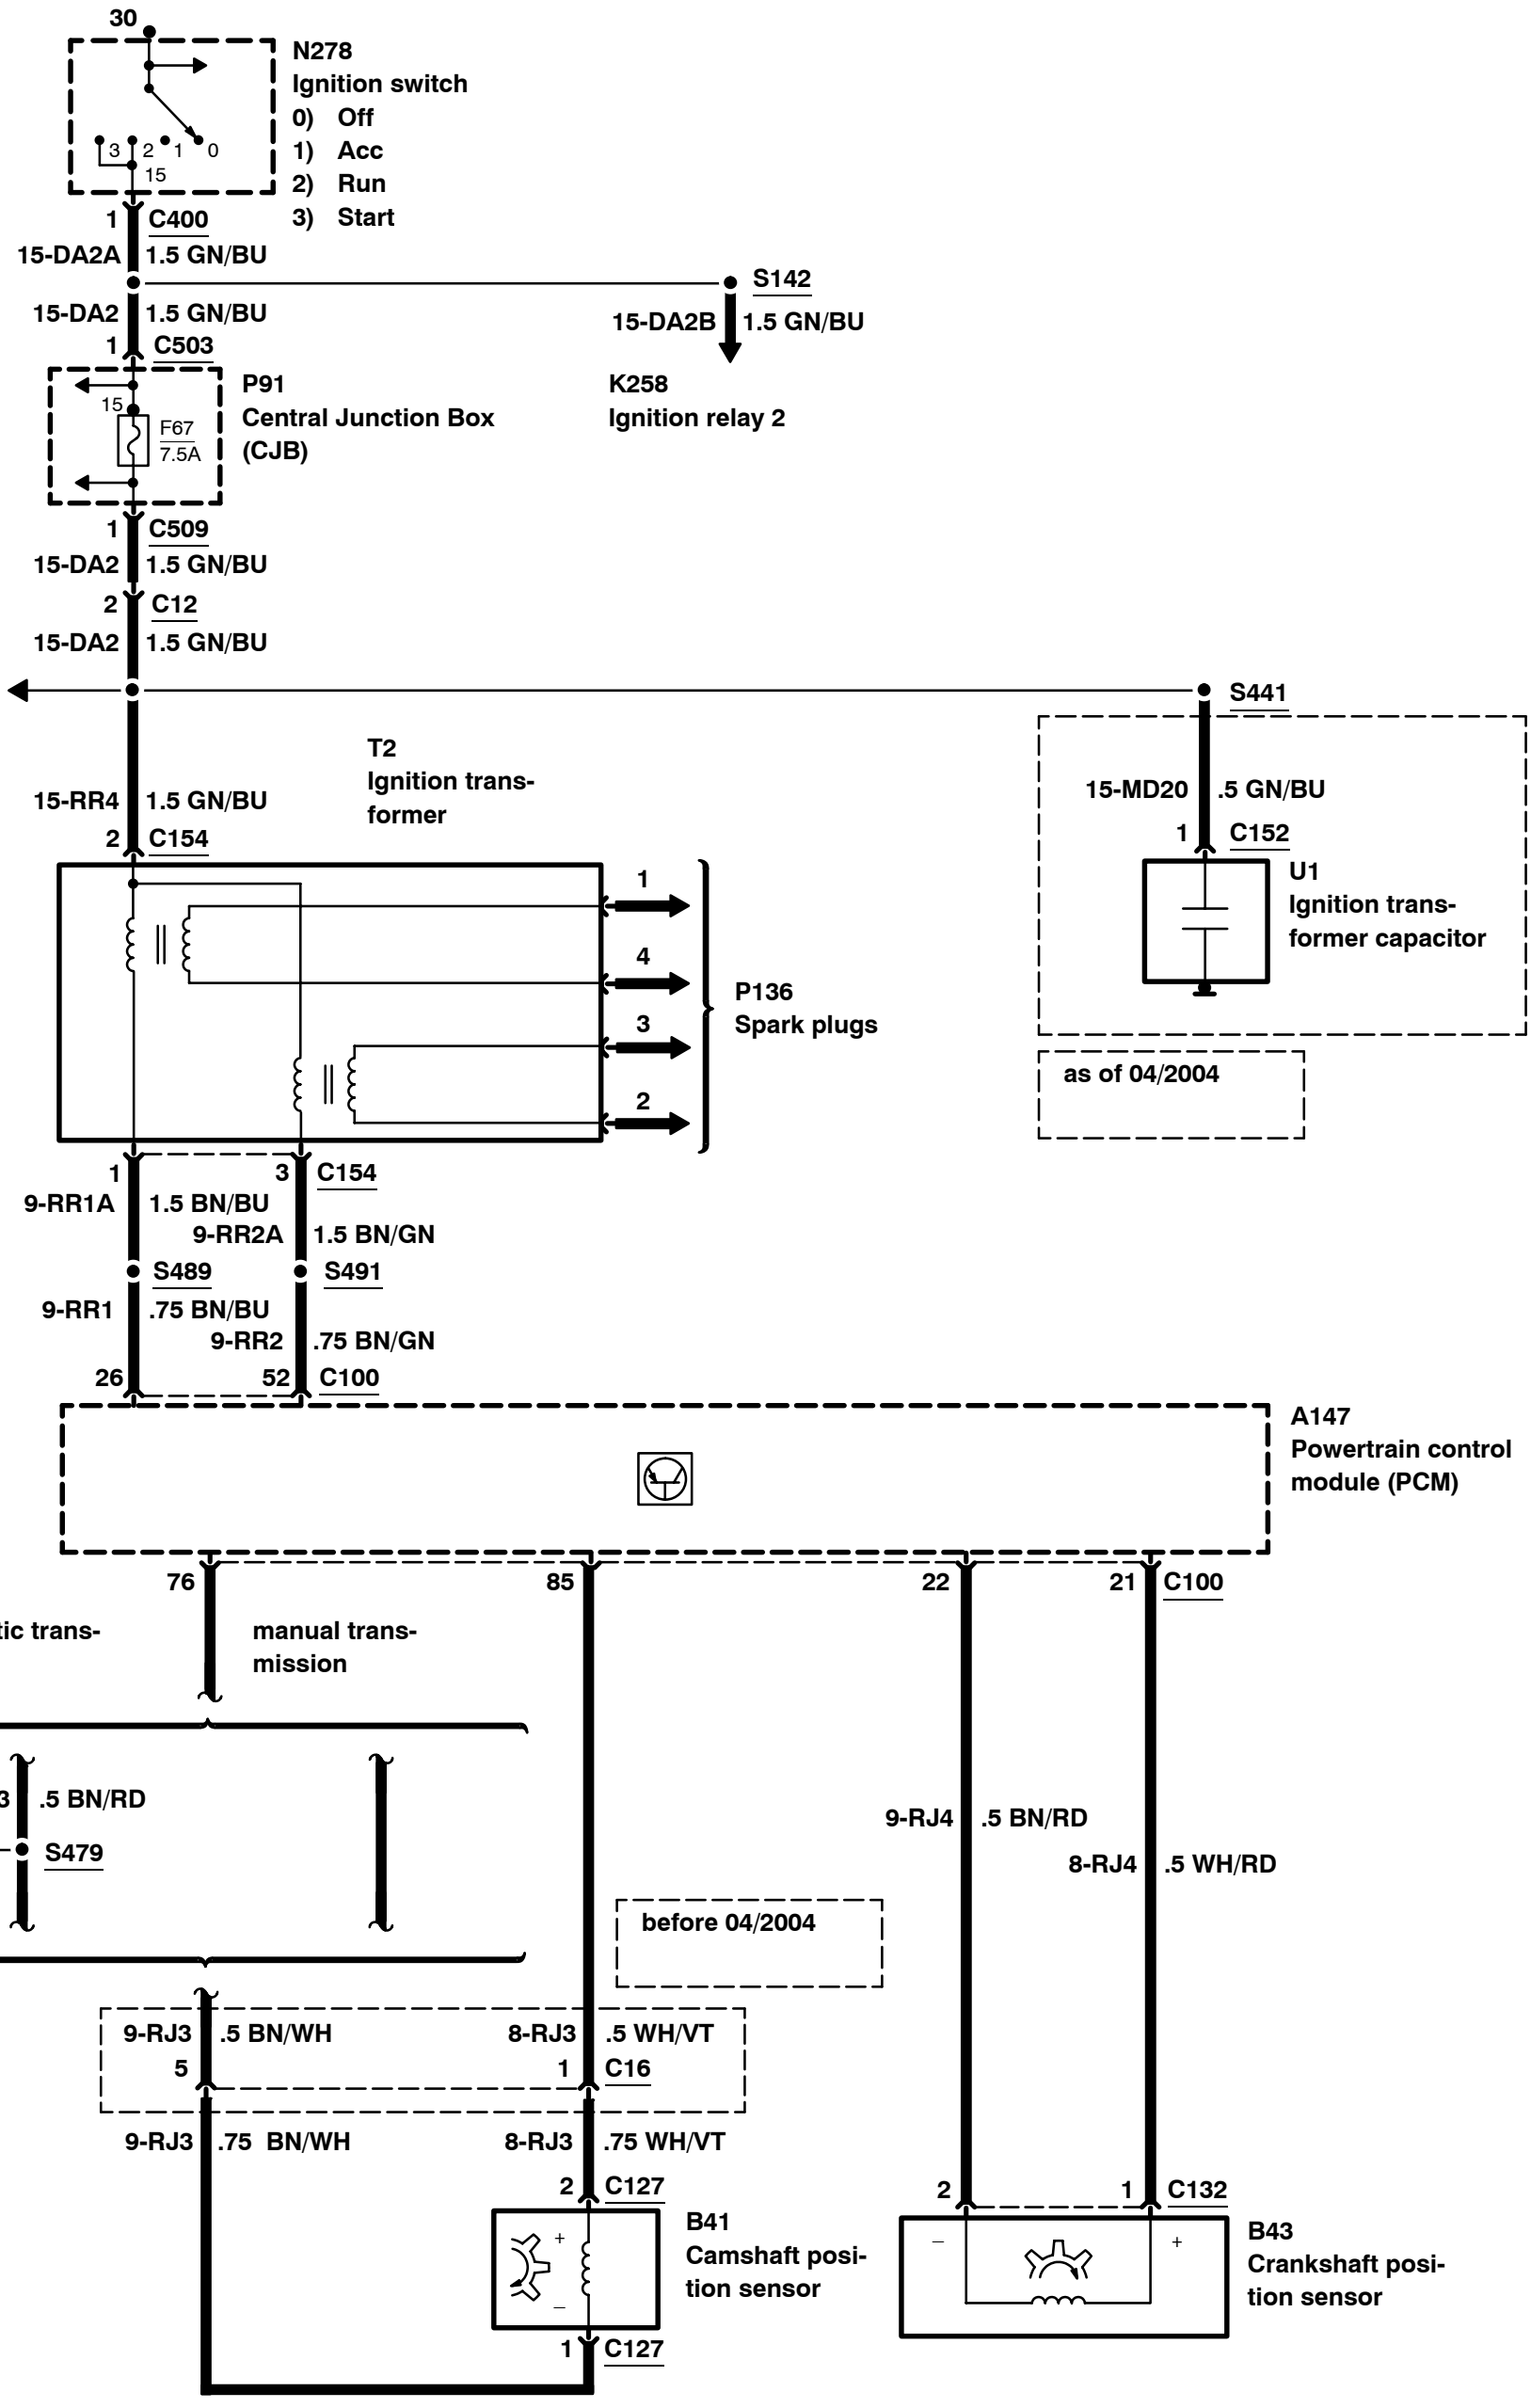


Engine Ignition – 2.5L Duratec–VE (VE6)

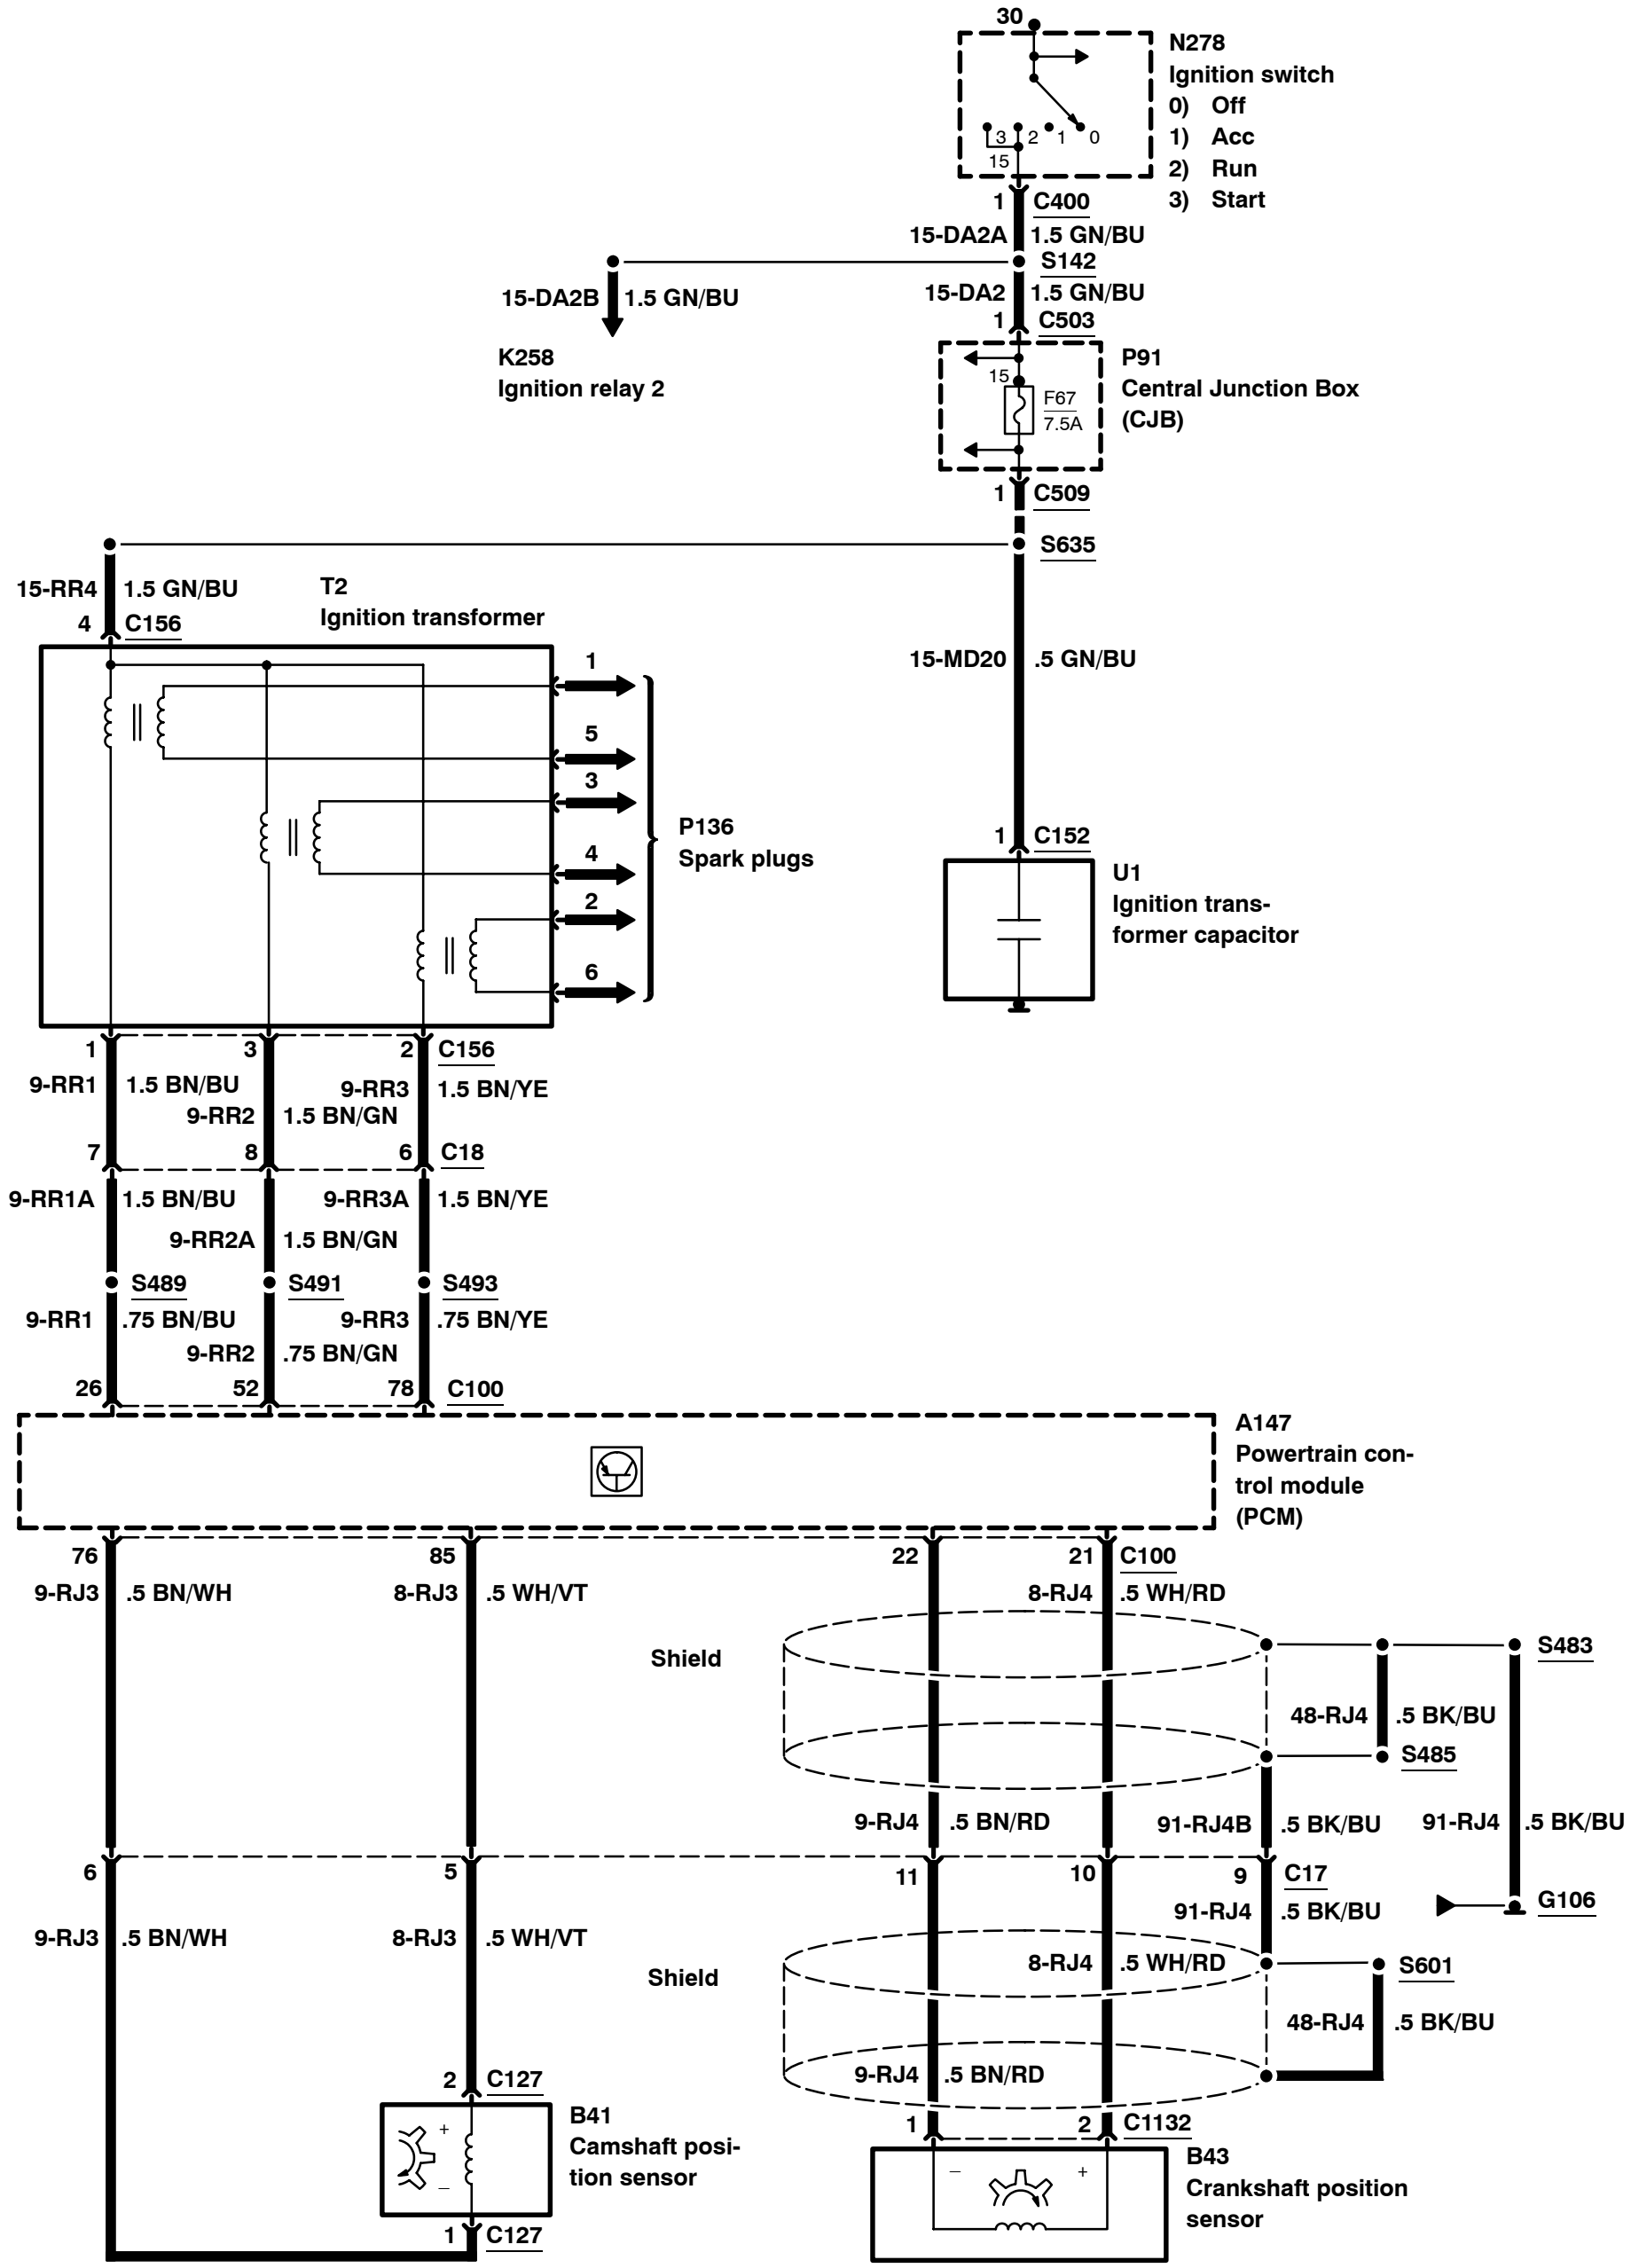


Engine Ignition – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

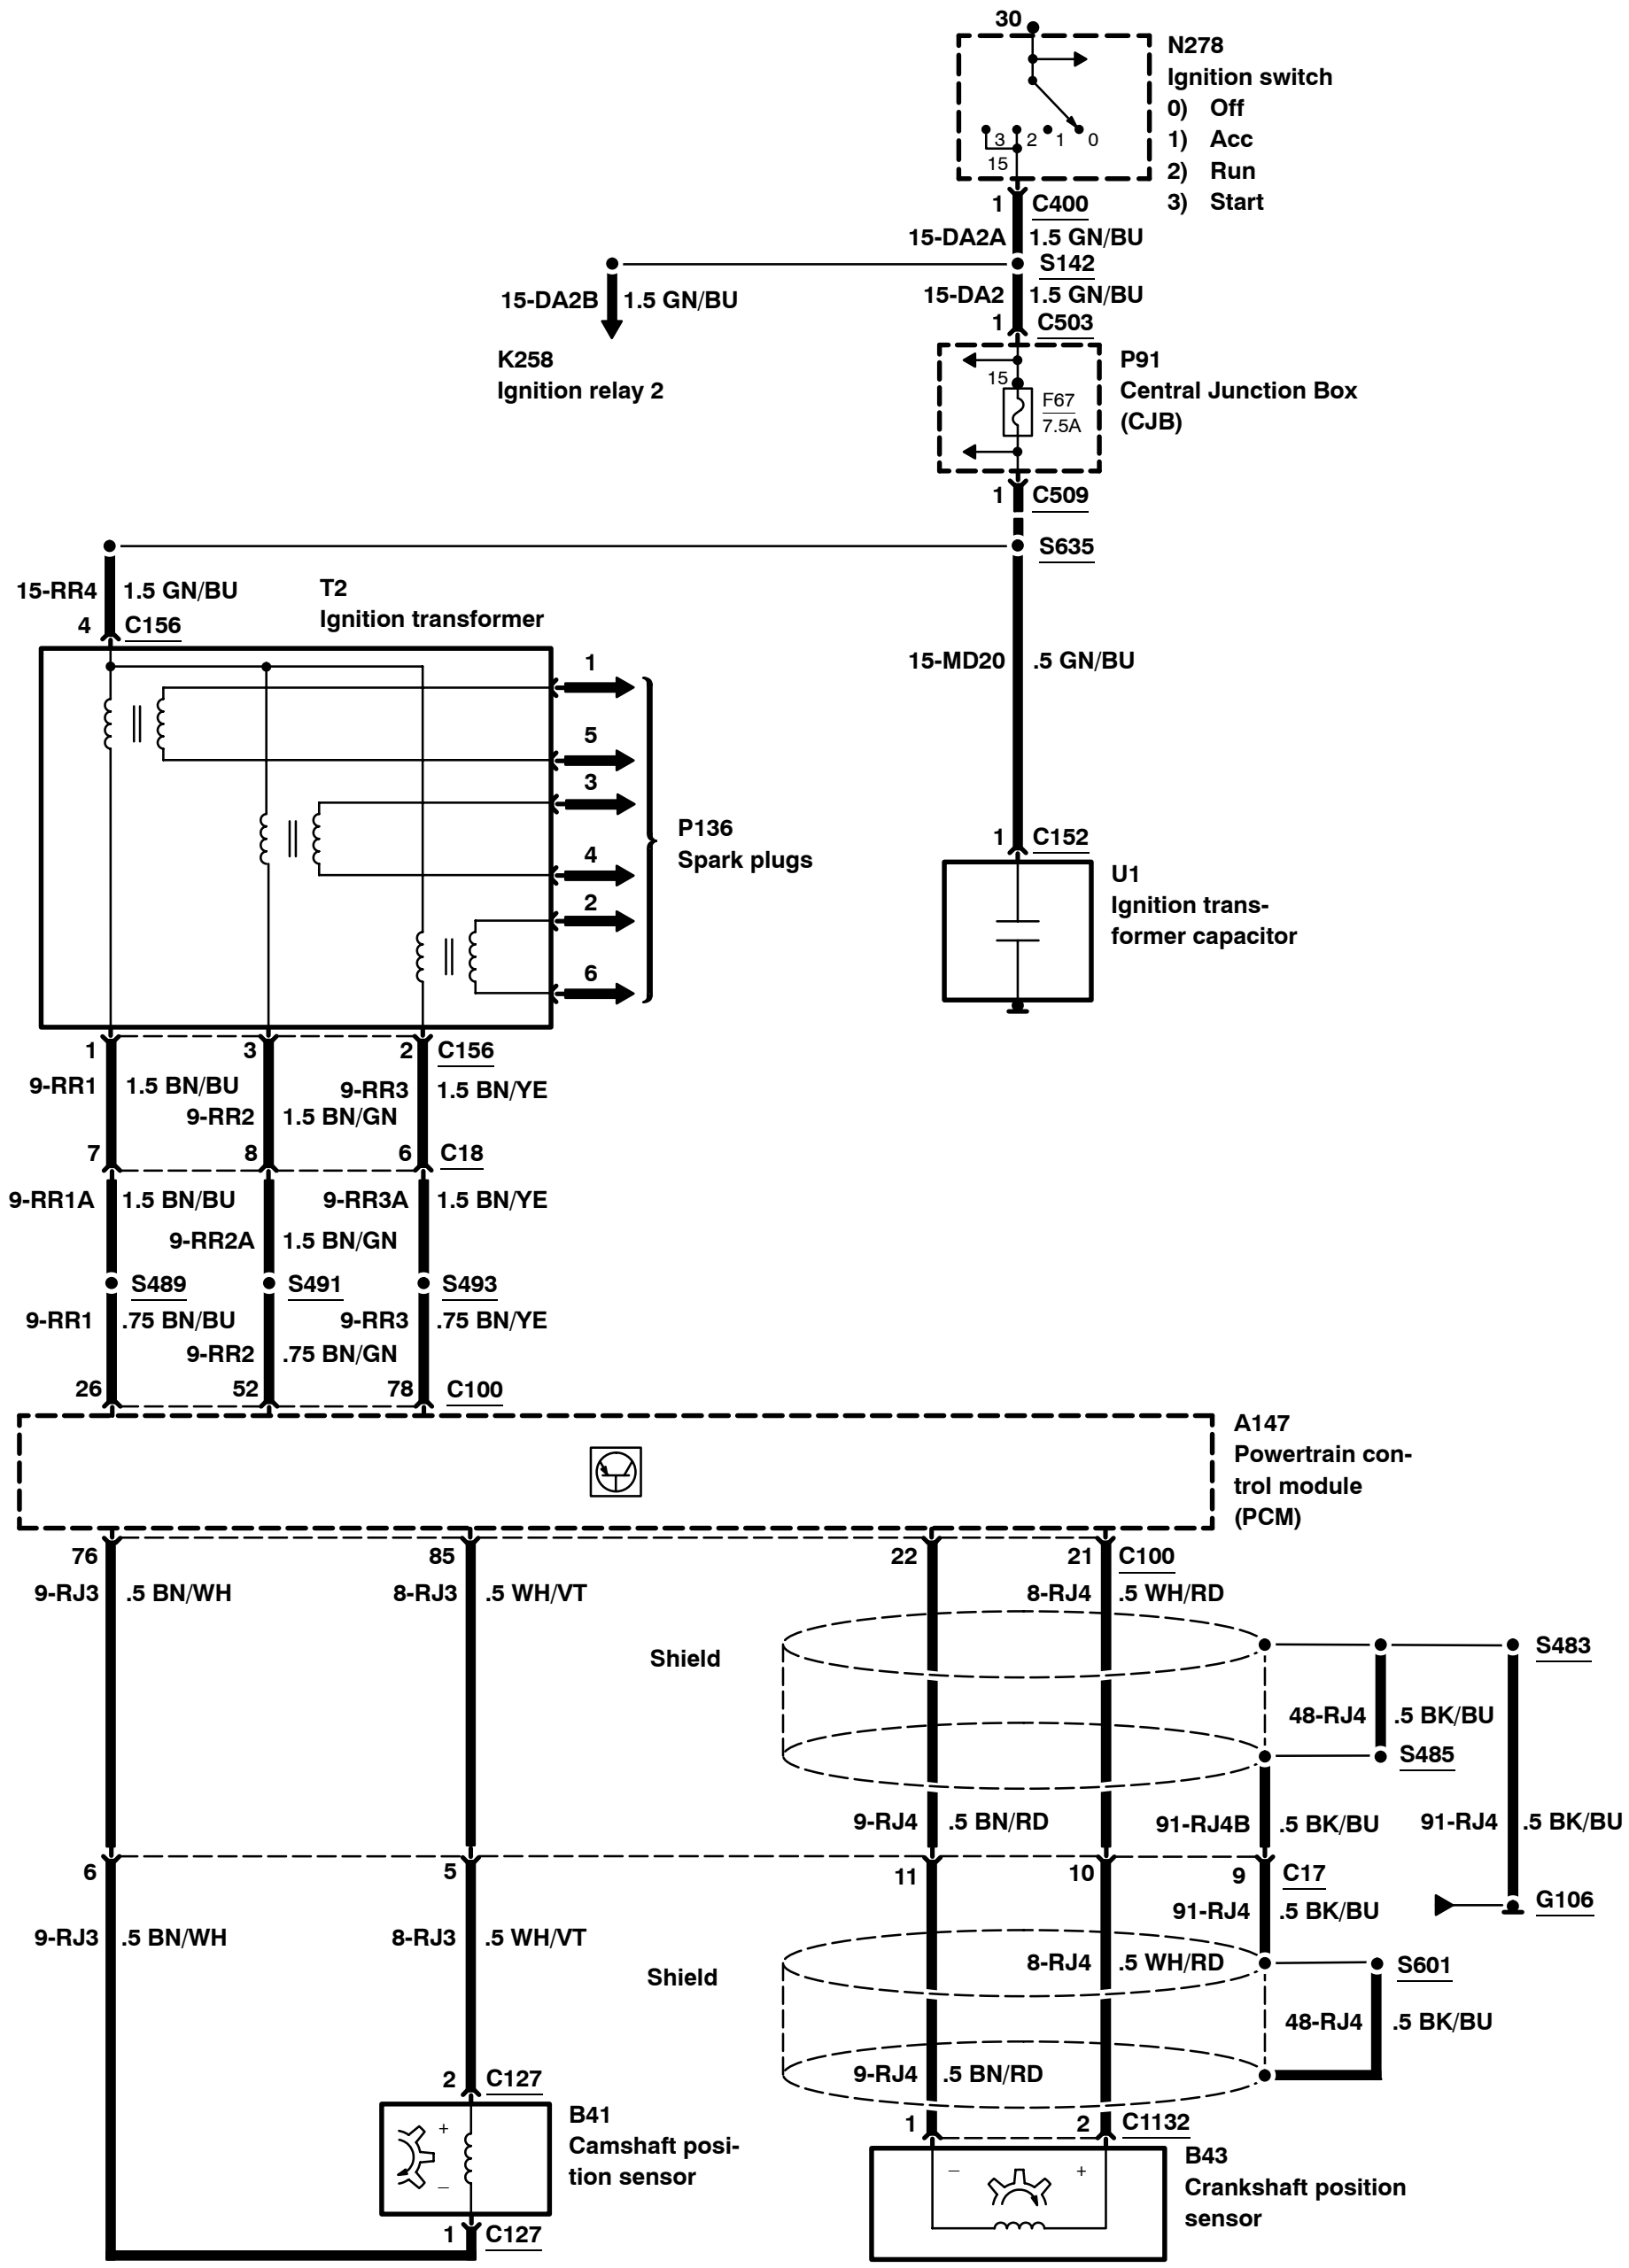

Glow Plug System – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

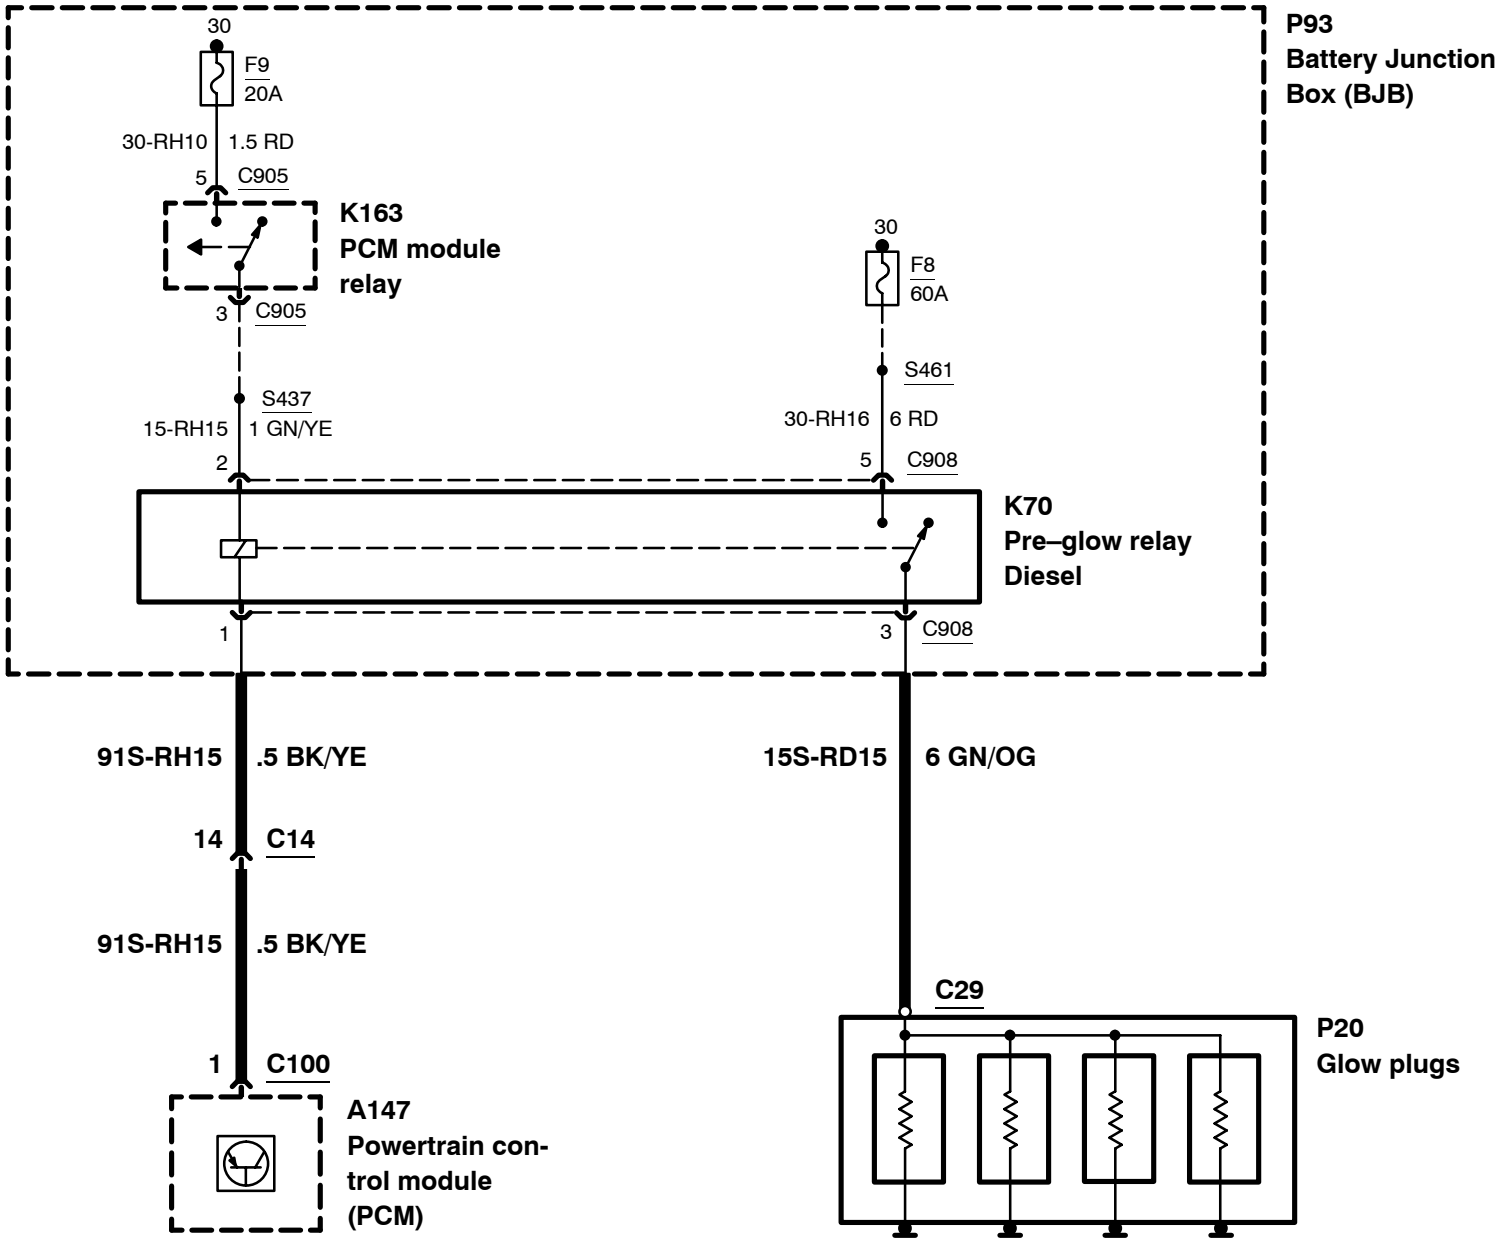


Glow Plug System – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

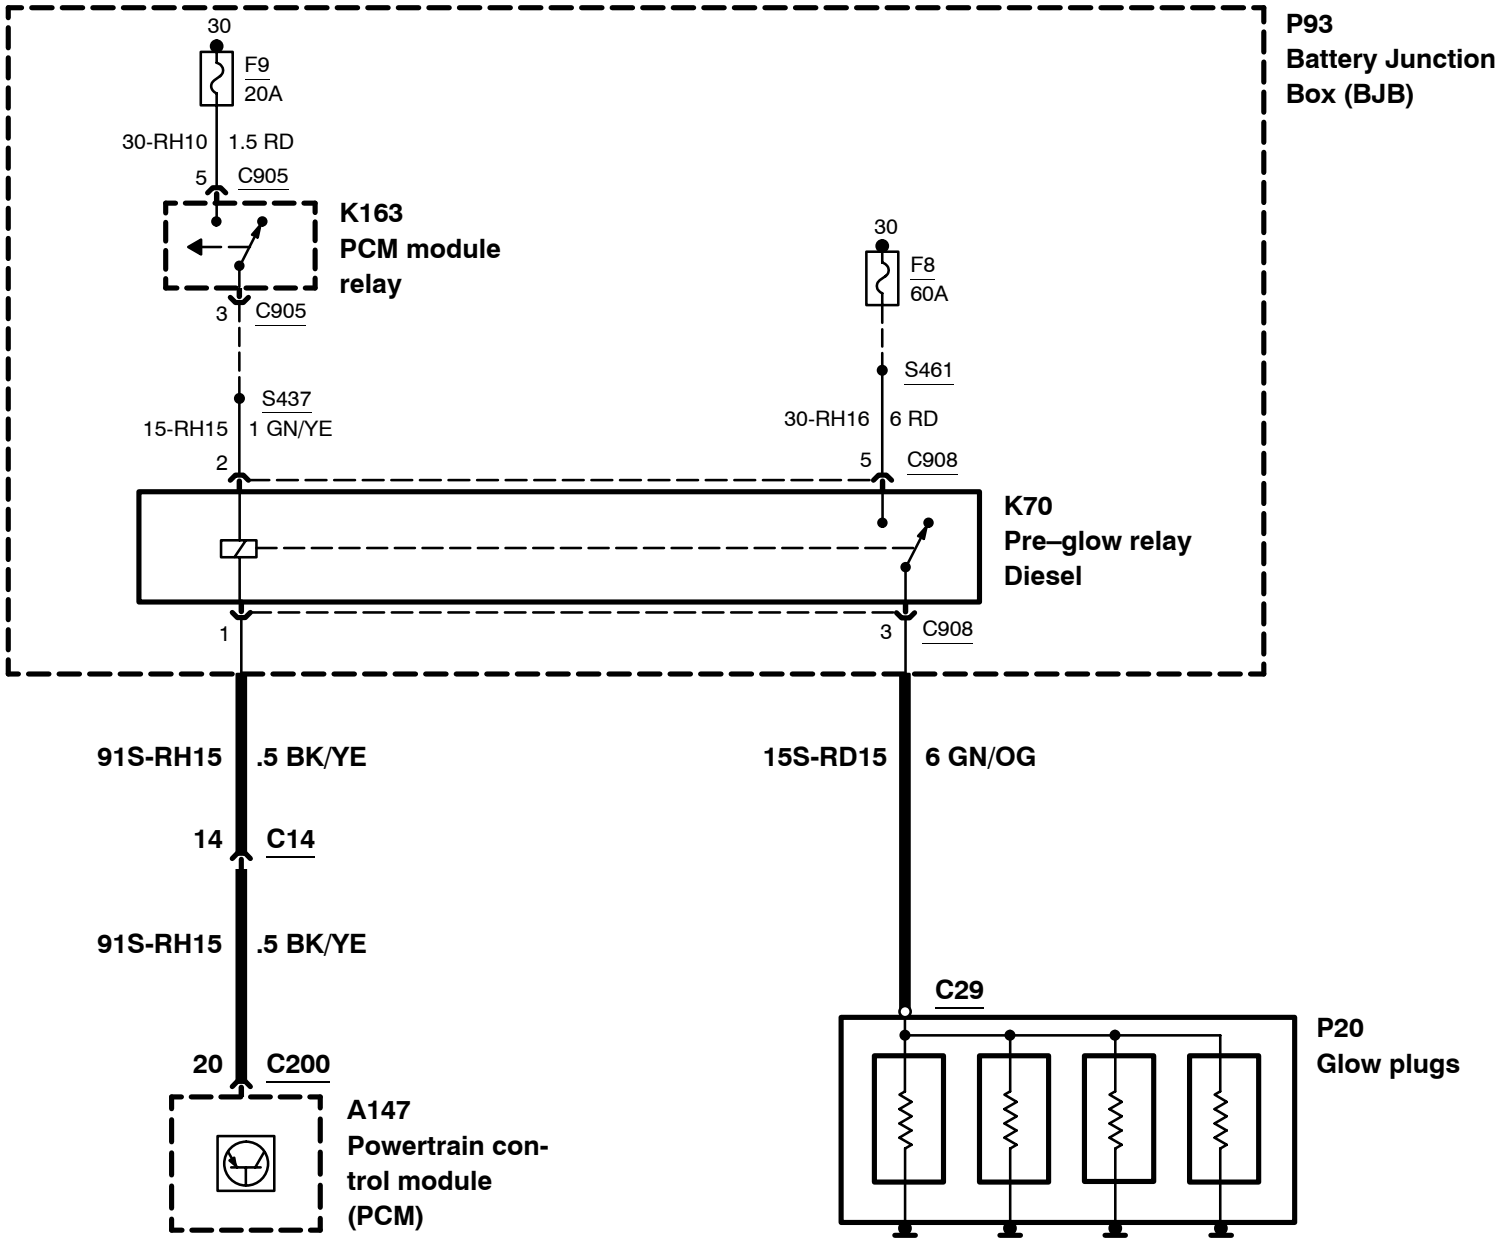


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

Block diagram

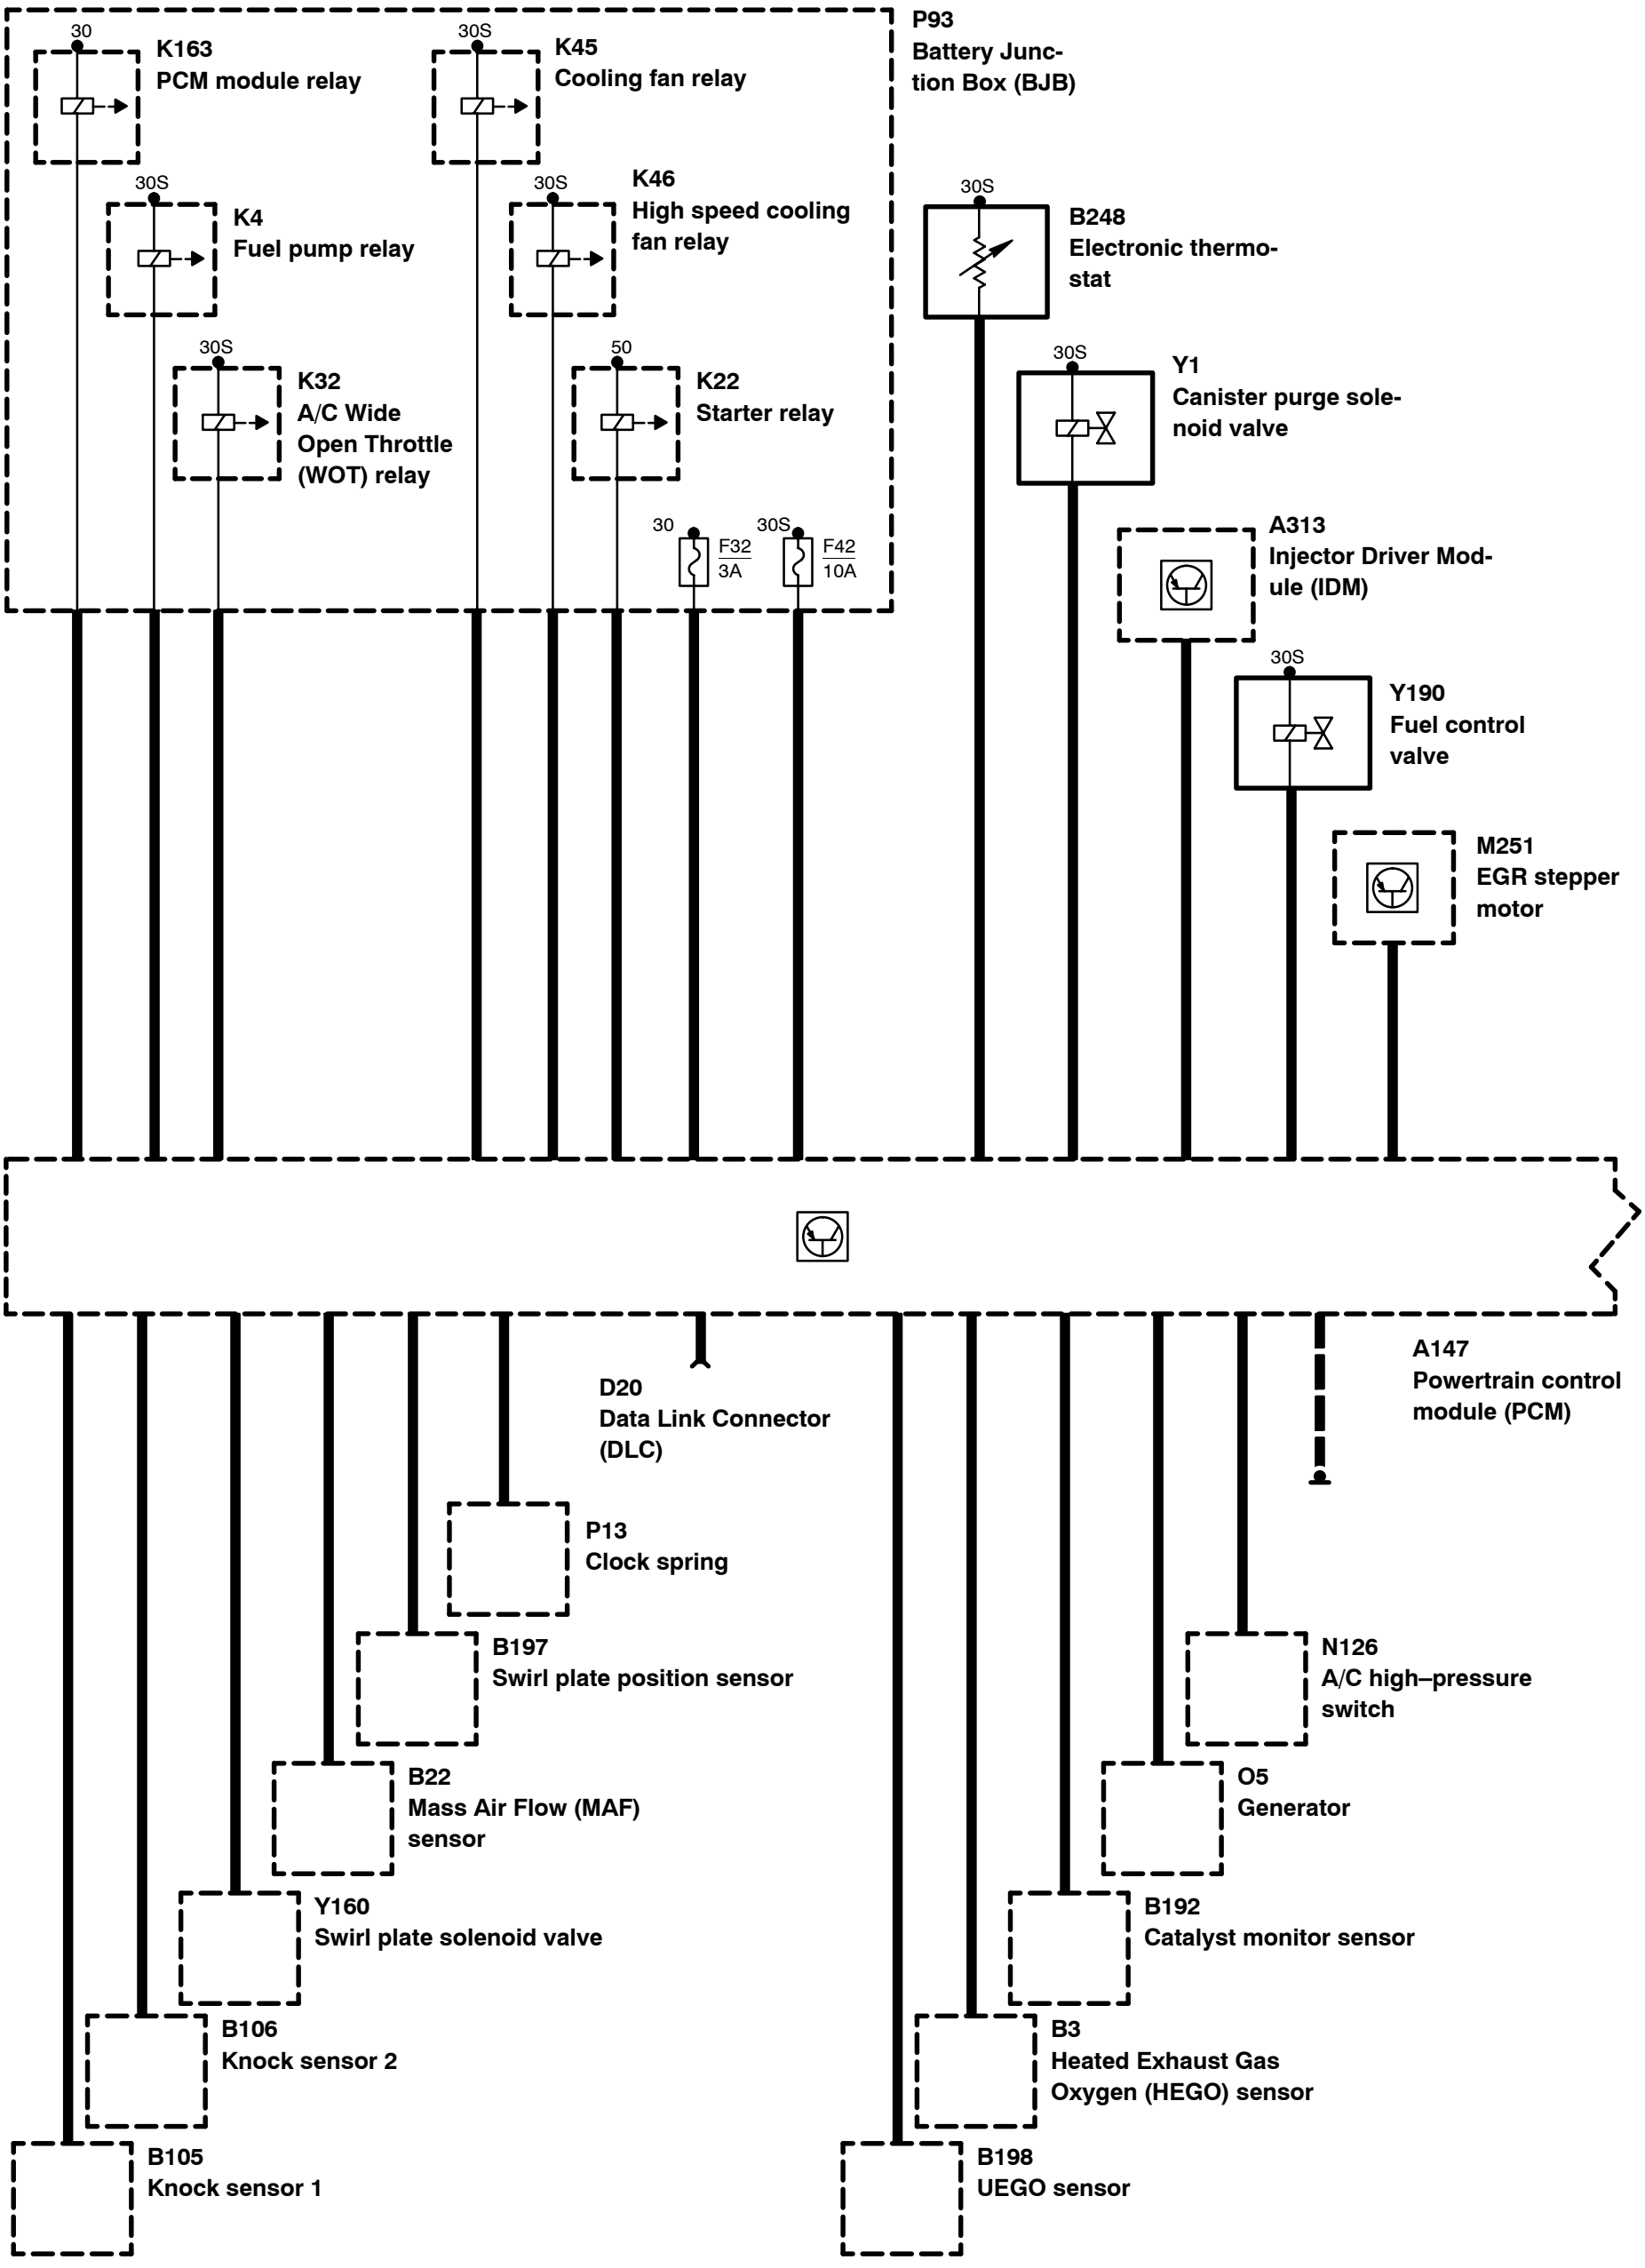


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)


Block diagram

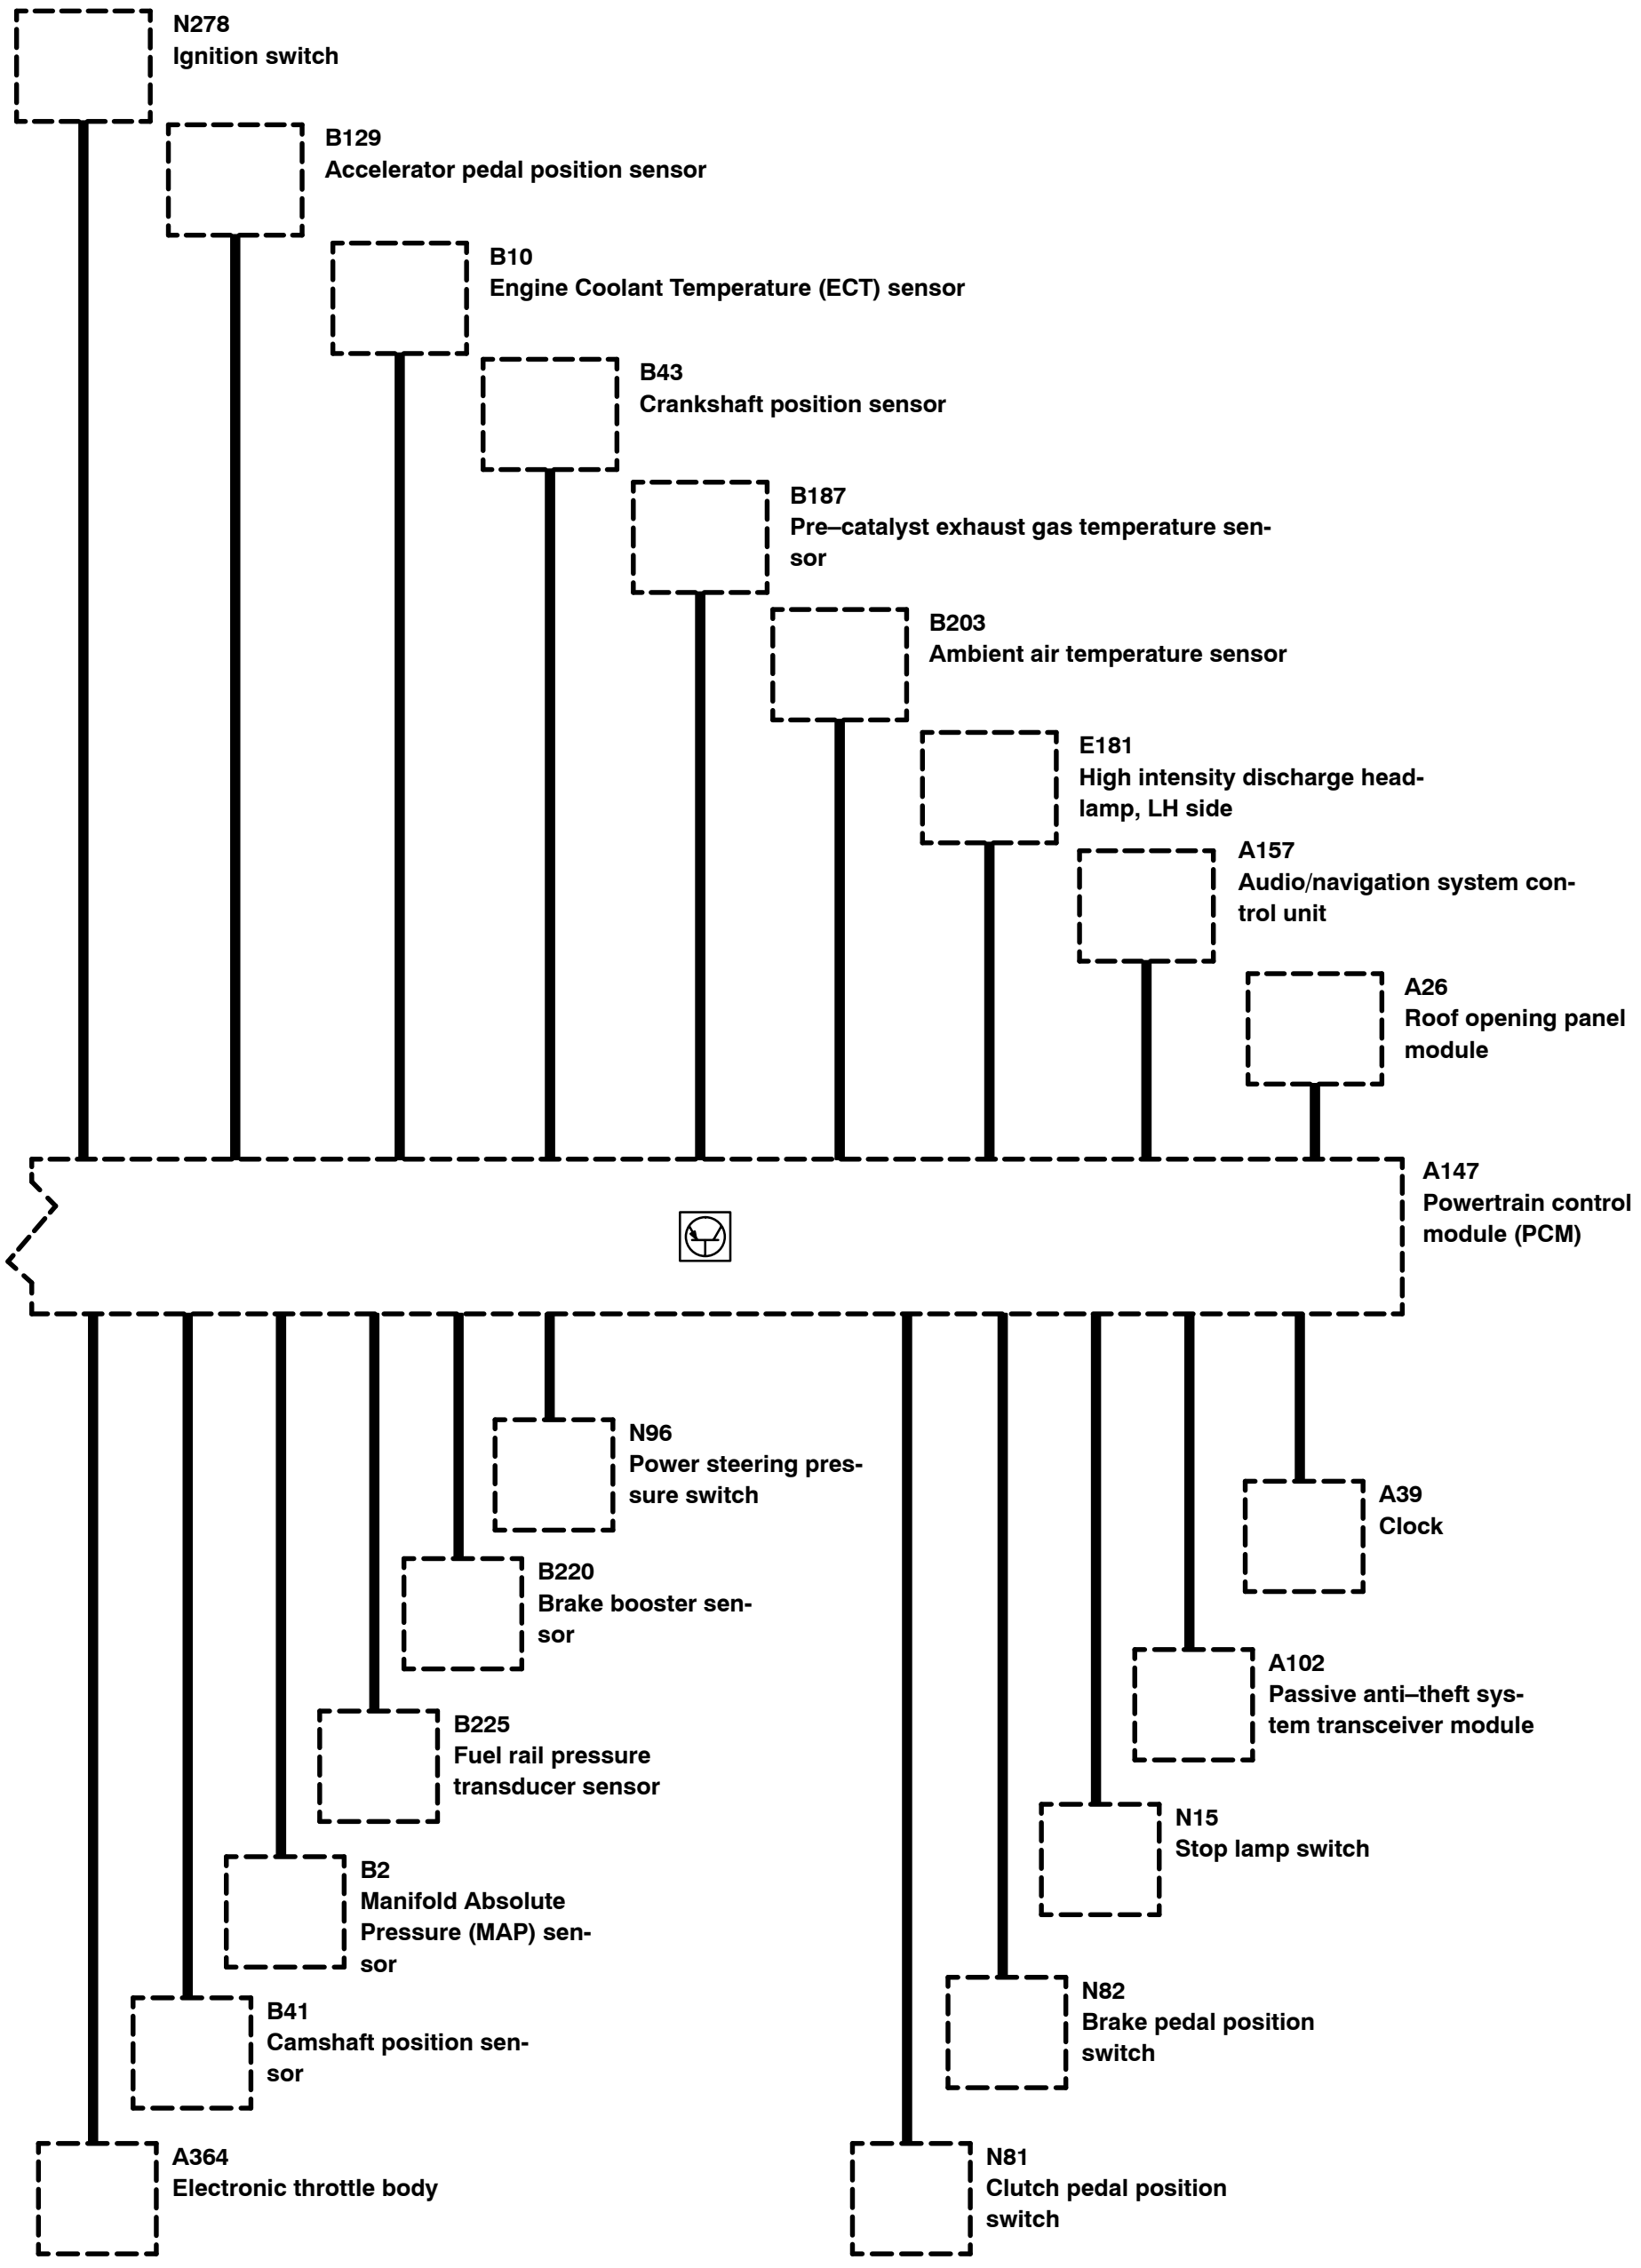


Electronic Engine Controls – 1.8L Duratec–SCi (MI4), before 04/2004

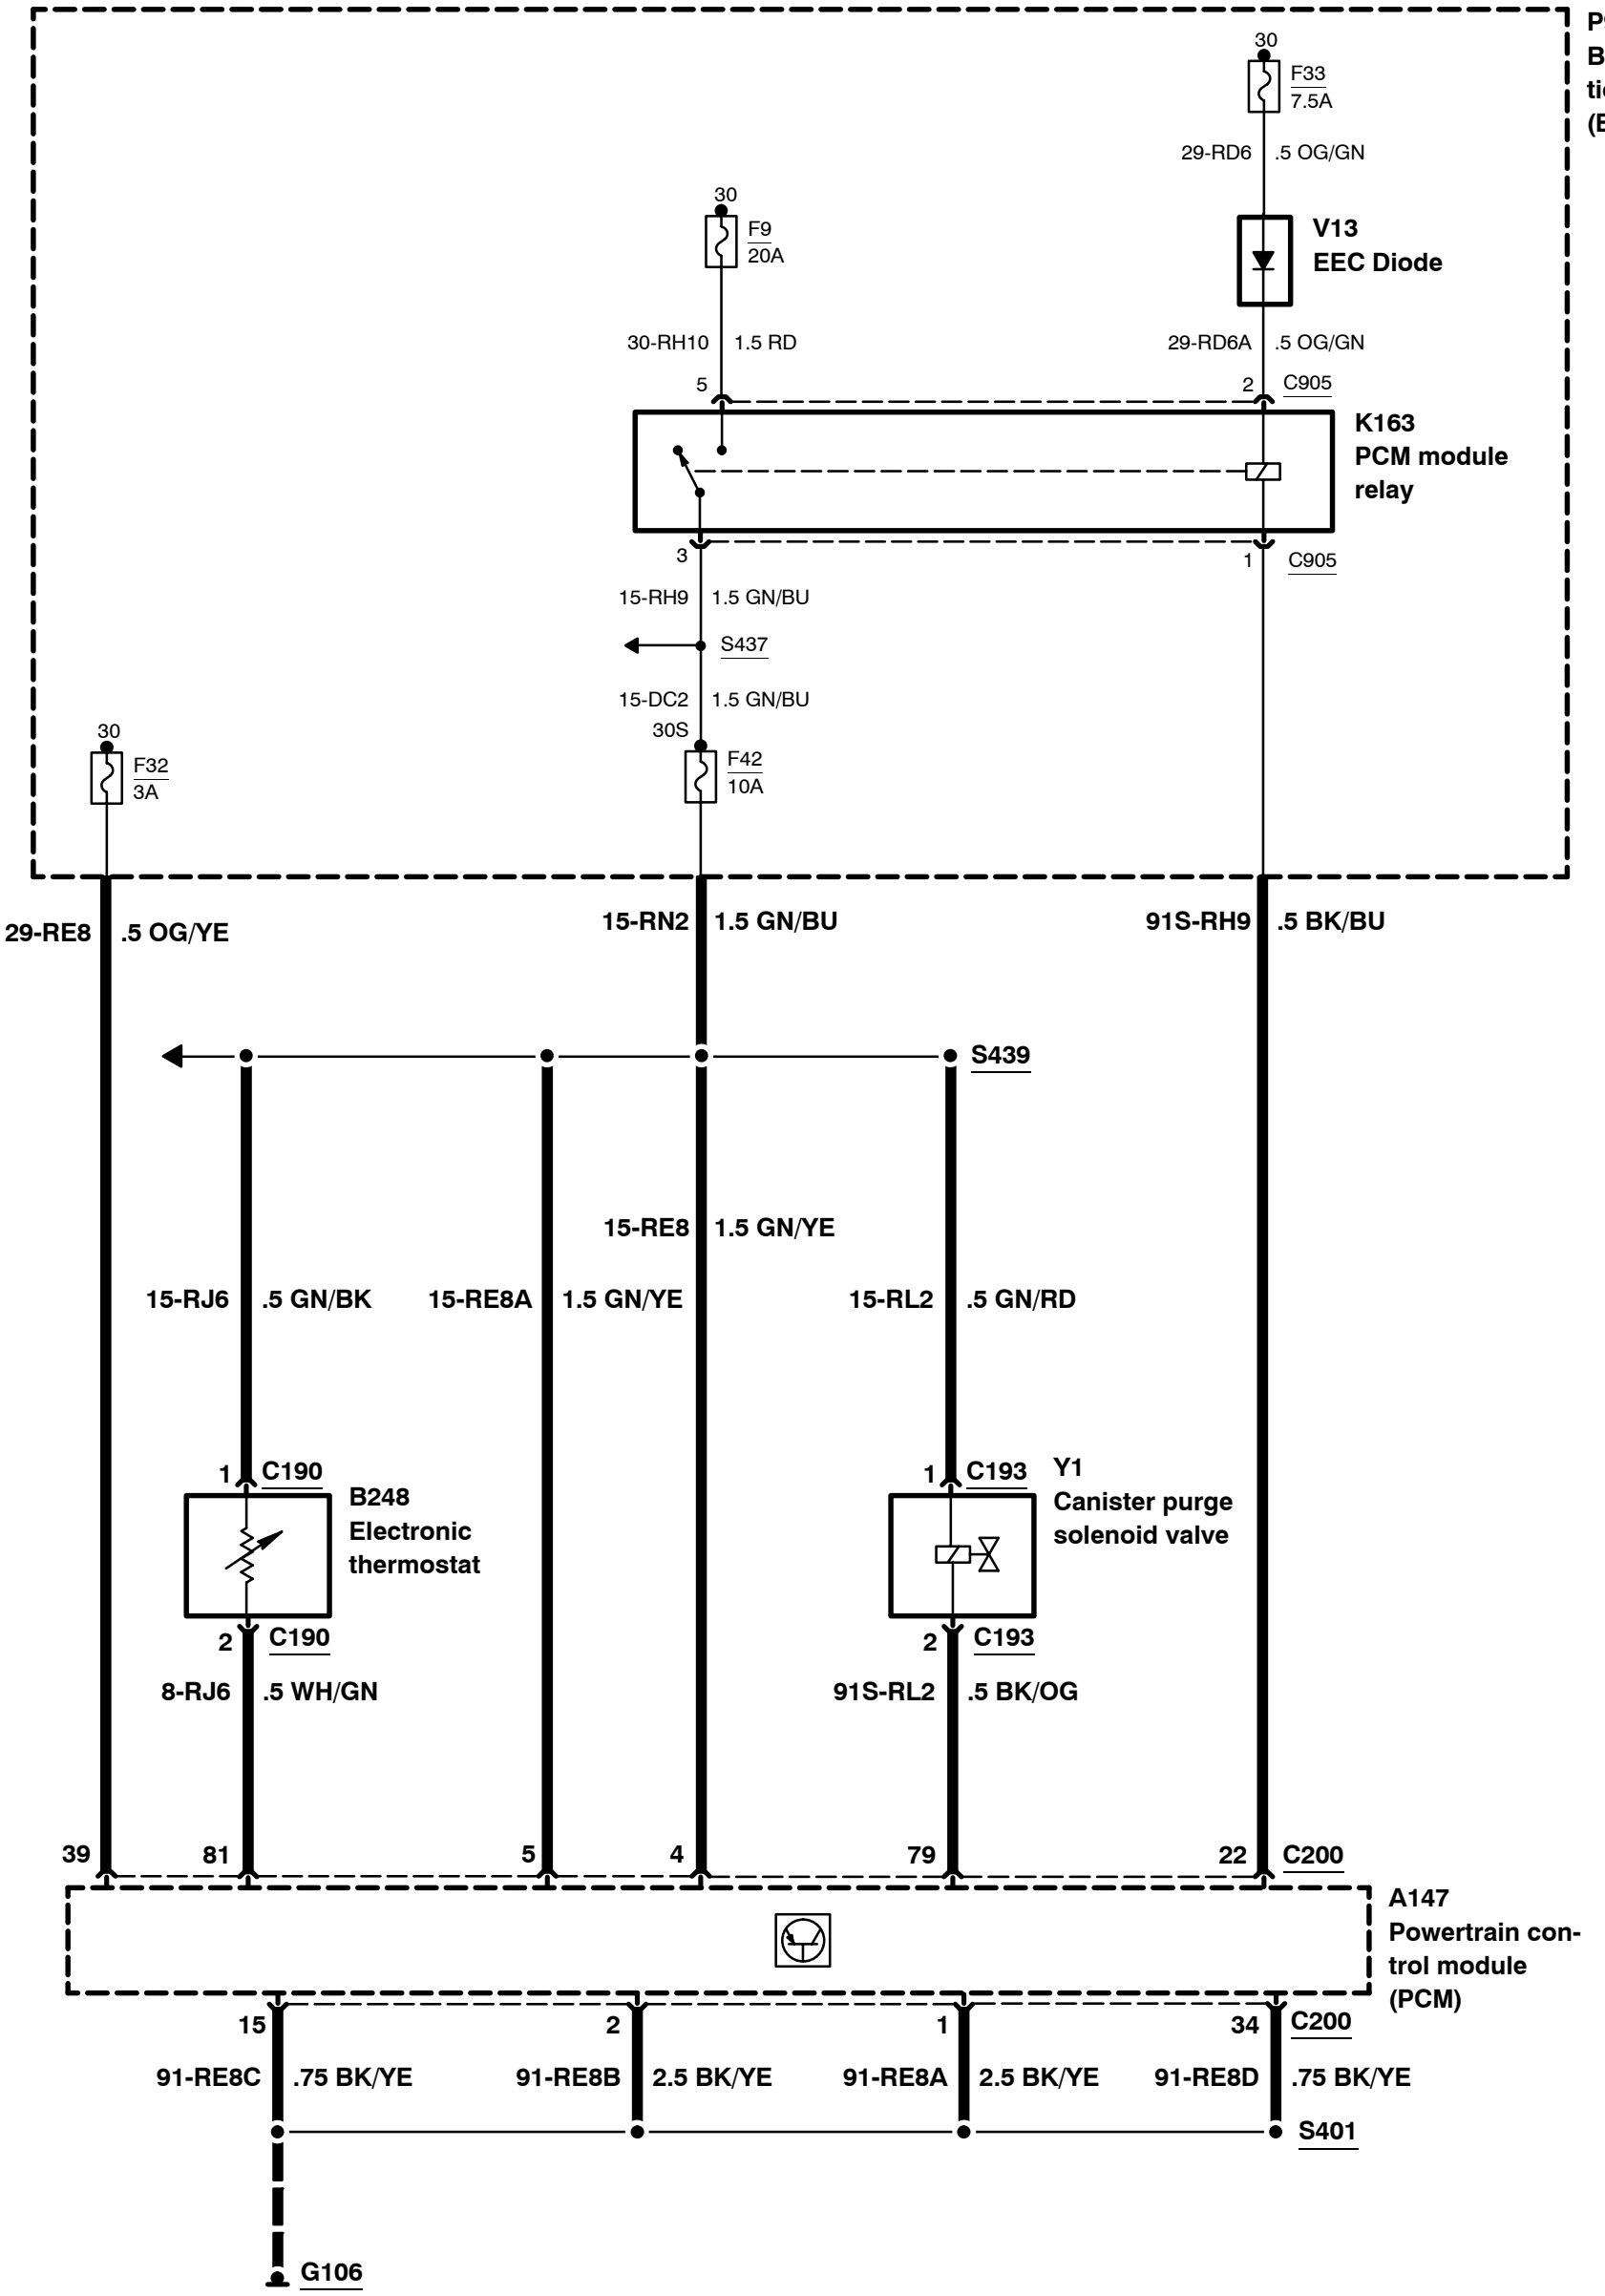


Electronic Engine Controls – 1.8L Duratec–SCi (MI4), as of 04/2004

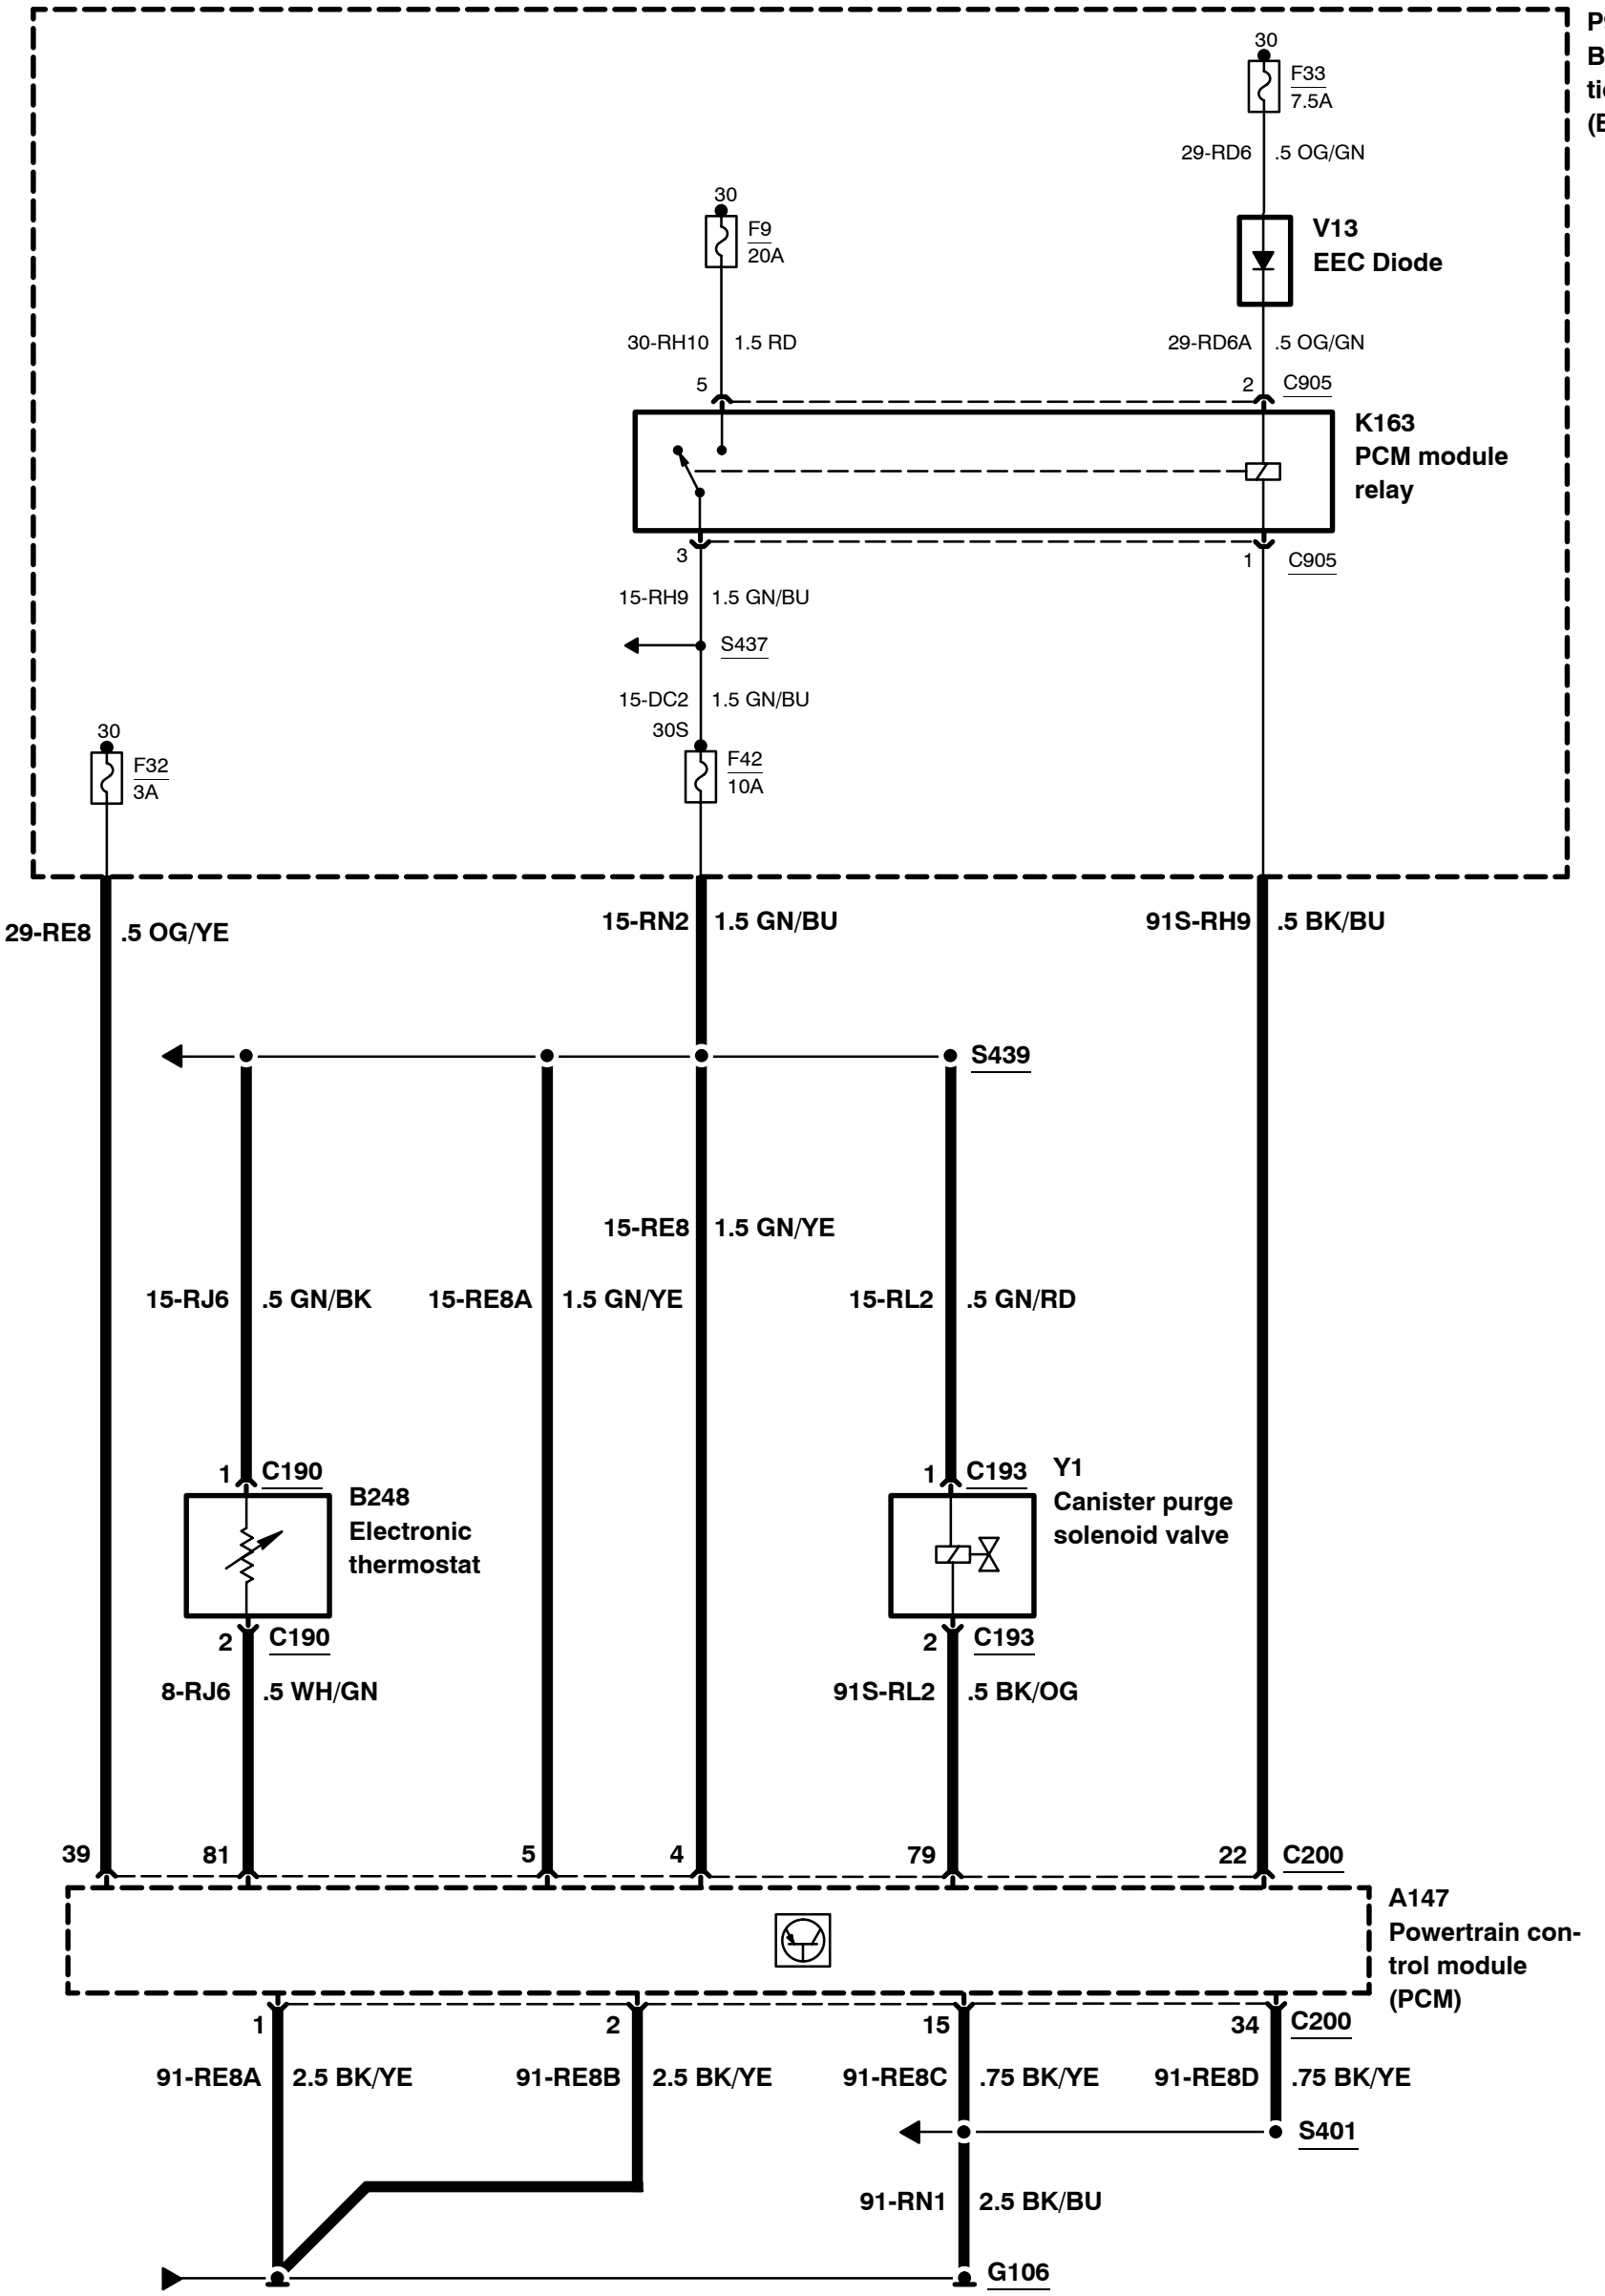


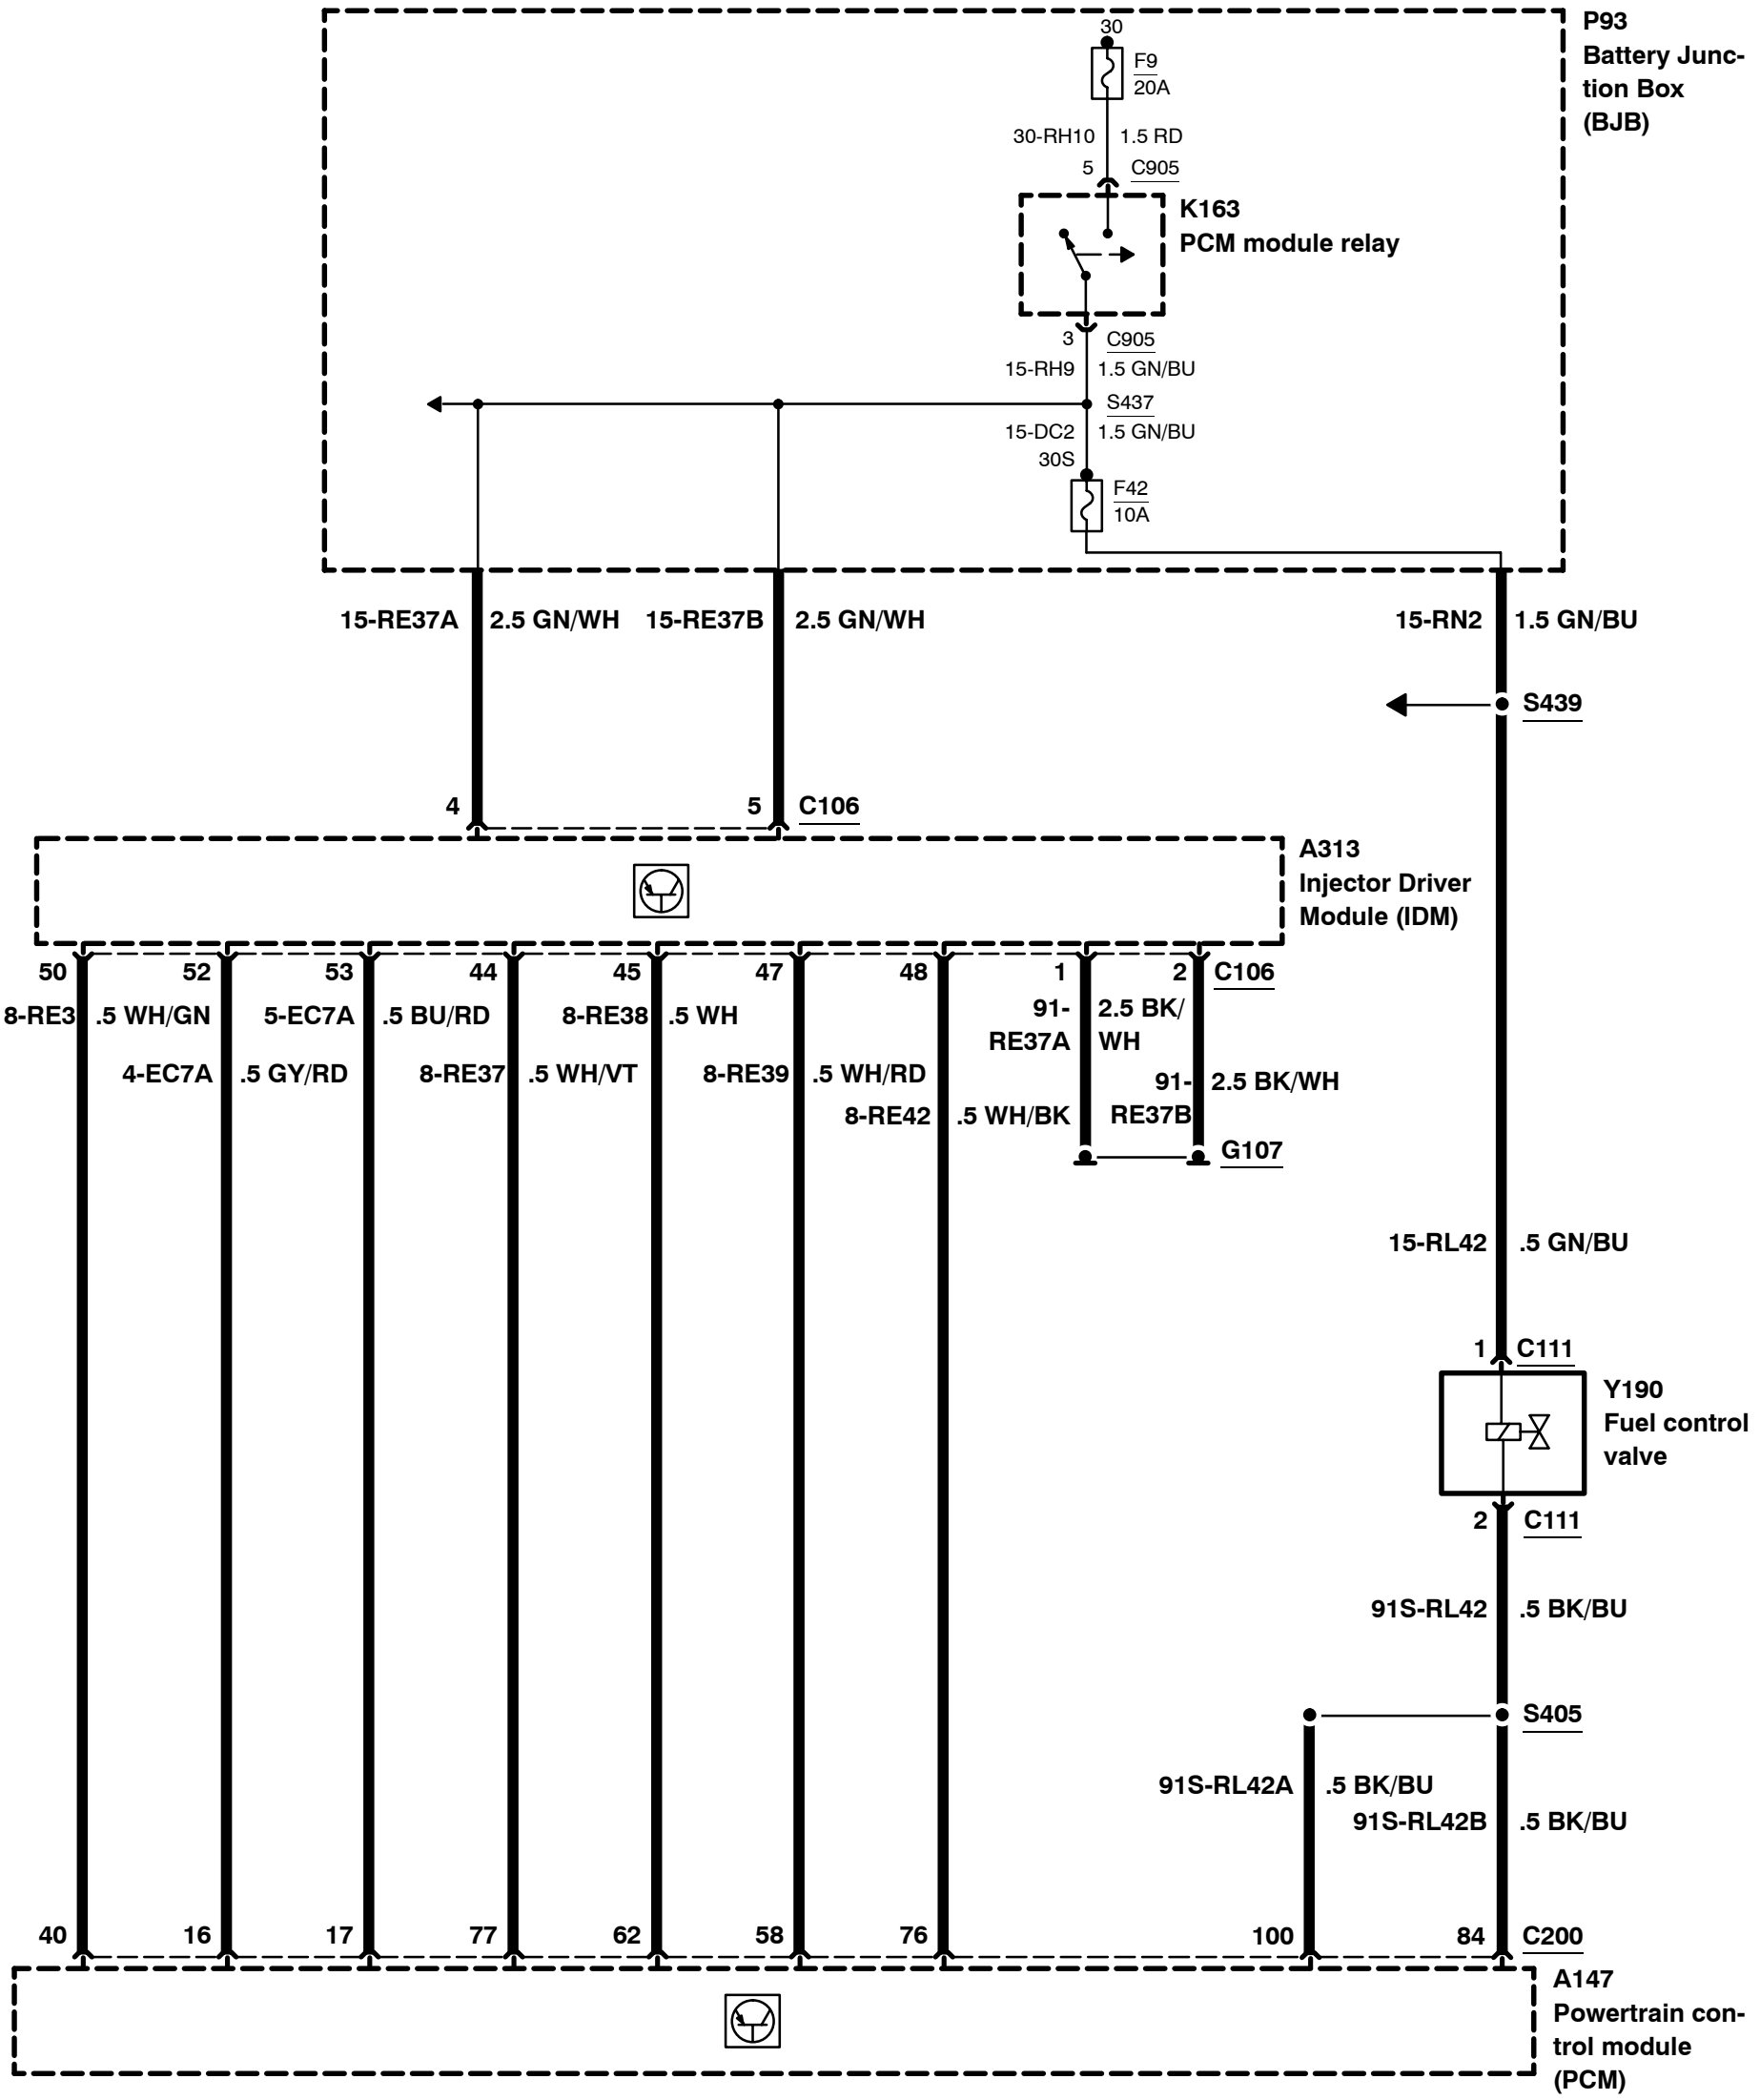
P93
Battery Junction Box (BJB)
30
F9
20A
30-RH10
1.5 RD
5
C905
K163
PCM module relay
3
C905
15-RH9
1.5 GN/BU
S437
15-DC2
1.5 GN/BU
30S
F42
10A
15-RE37A
2.5 GN/WH
15-RE37B
2.5 GN/WH
15-RN2
1.5 GN/BU
S439
4
5
C106
A313
Injector Driver Module (IDM)
50
52
53
44
45
47
48
1
2
C106
8-RE3
.5 WH/GN
5-EC7A
.5 BU/RD
8-RE38
.5 WH
91-RE37A
2.5 BK/WH
4-EC7A
.5 GY/RD
8-RE37
.5 WH/VT
8-RE39
.5 WH/RD
91-RE37B
2.5 BK/WH
8-RE42
.5 WH/BK
G107
15-RL42
.5 GN/BU
1
C111
Y190
Fuel control valve
2
C111
91S-RL42
.5 BK/BU
S405
91S-RL42A
.5 BK/BU
91S-RL42B
.5 BK/BU
40
16
17
77
62
58
76
100
84
C200
A147
Powertrain control module (PCM)


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

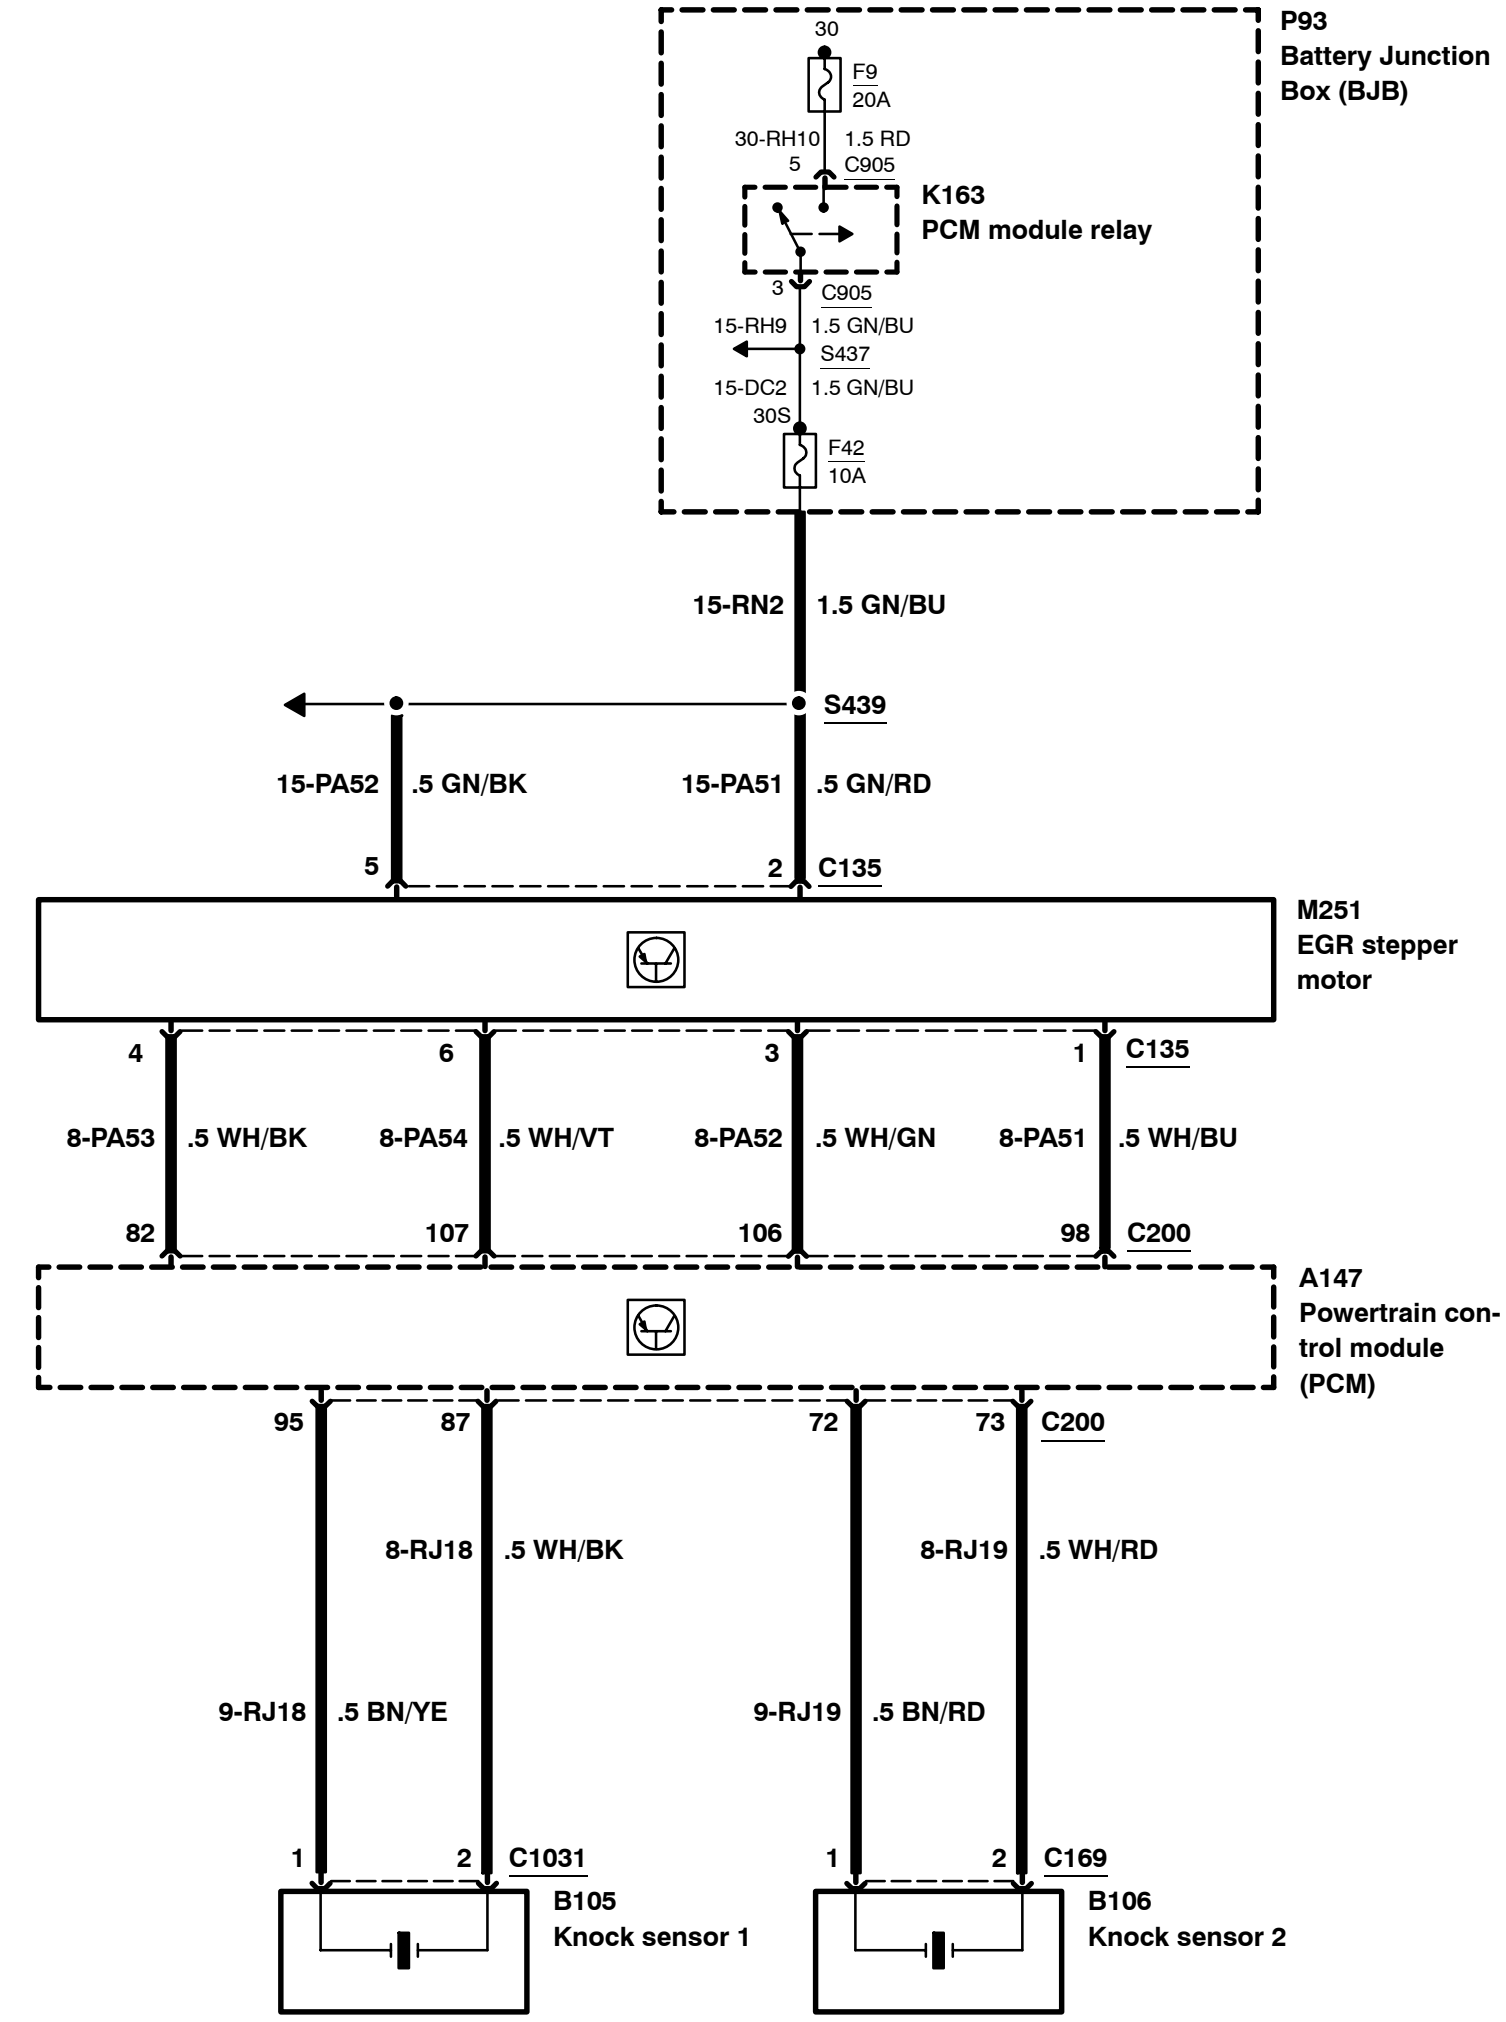


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

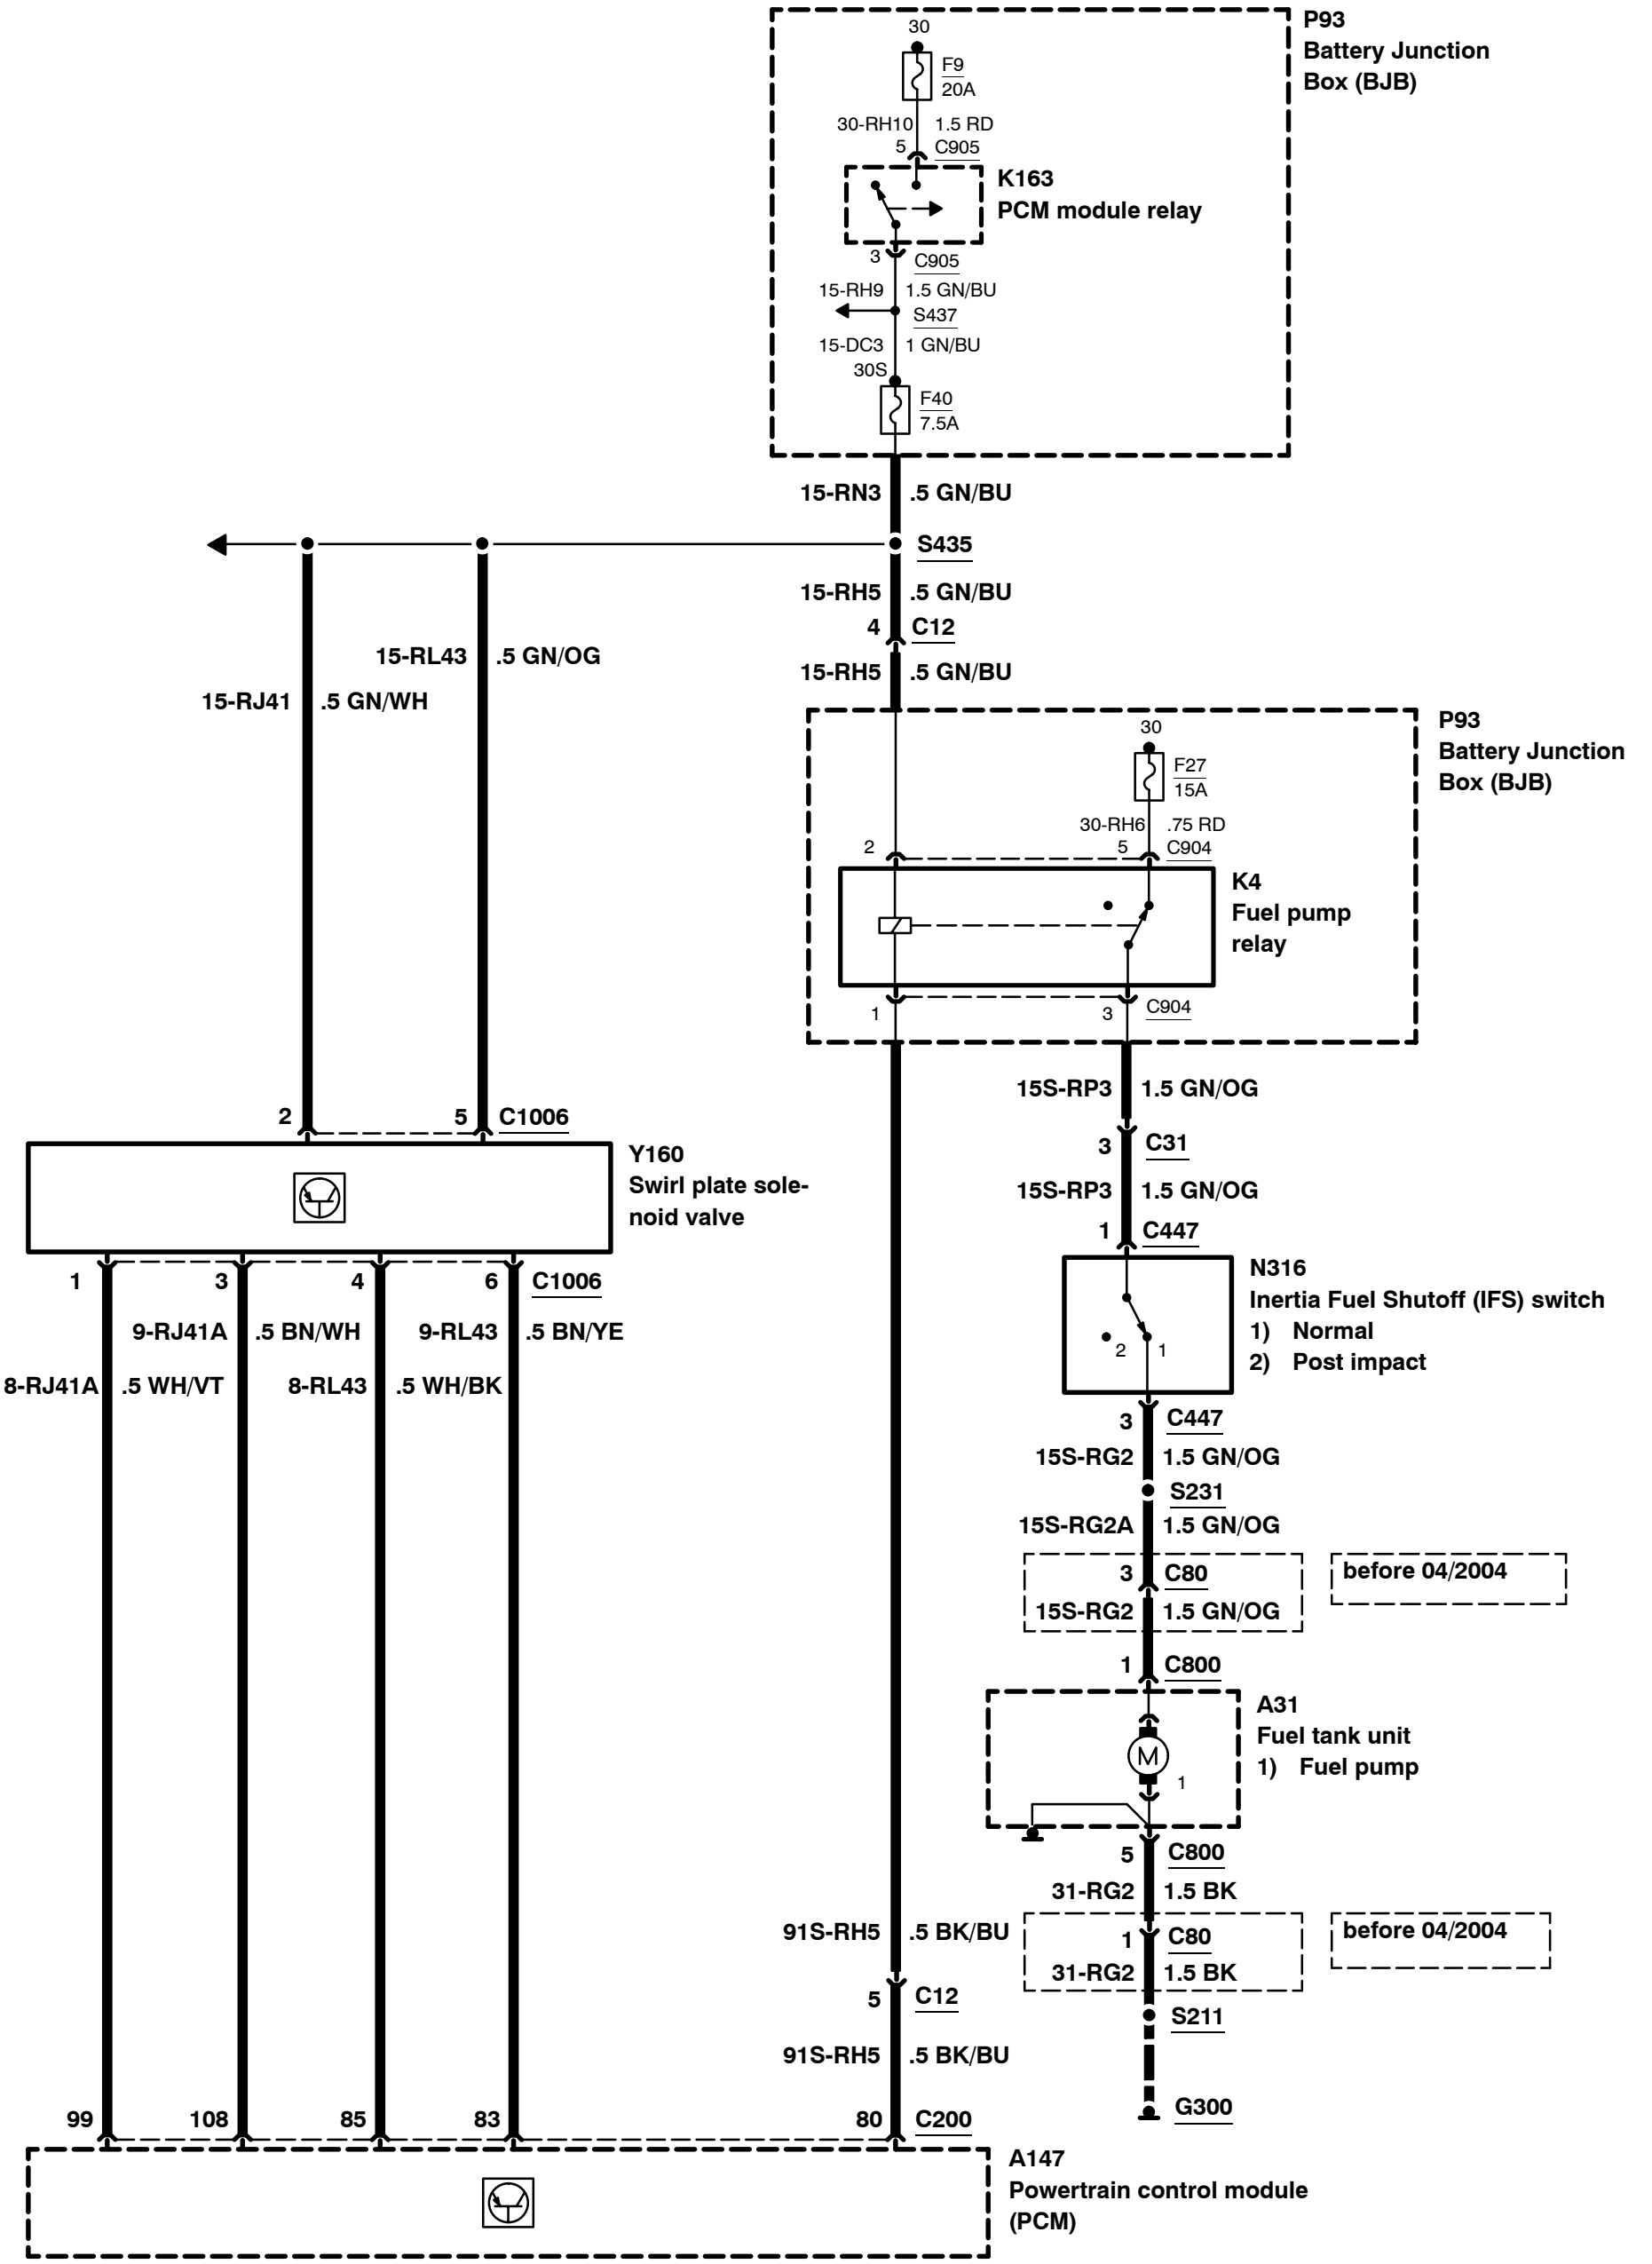


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

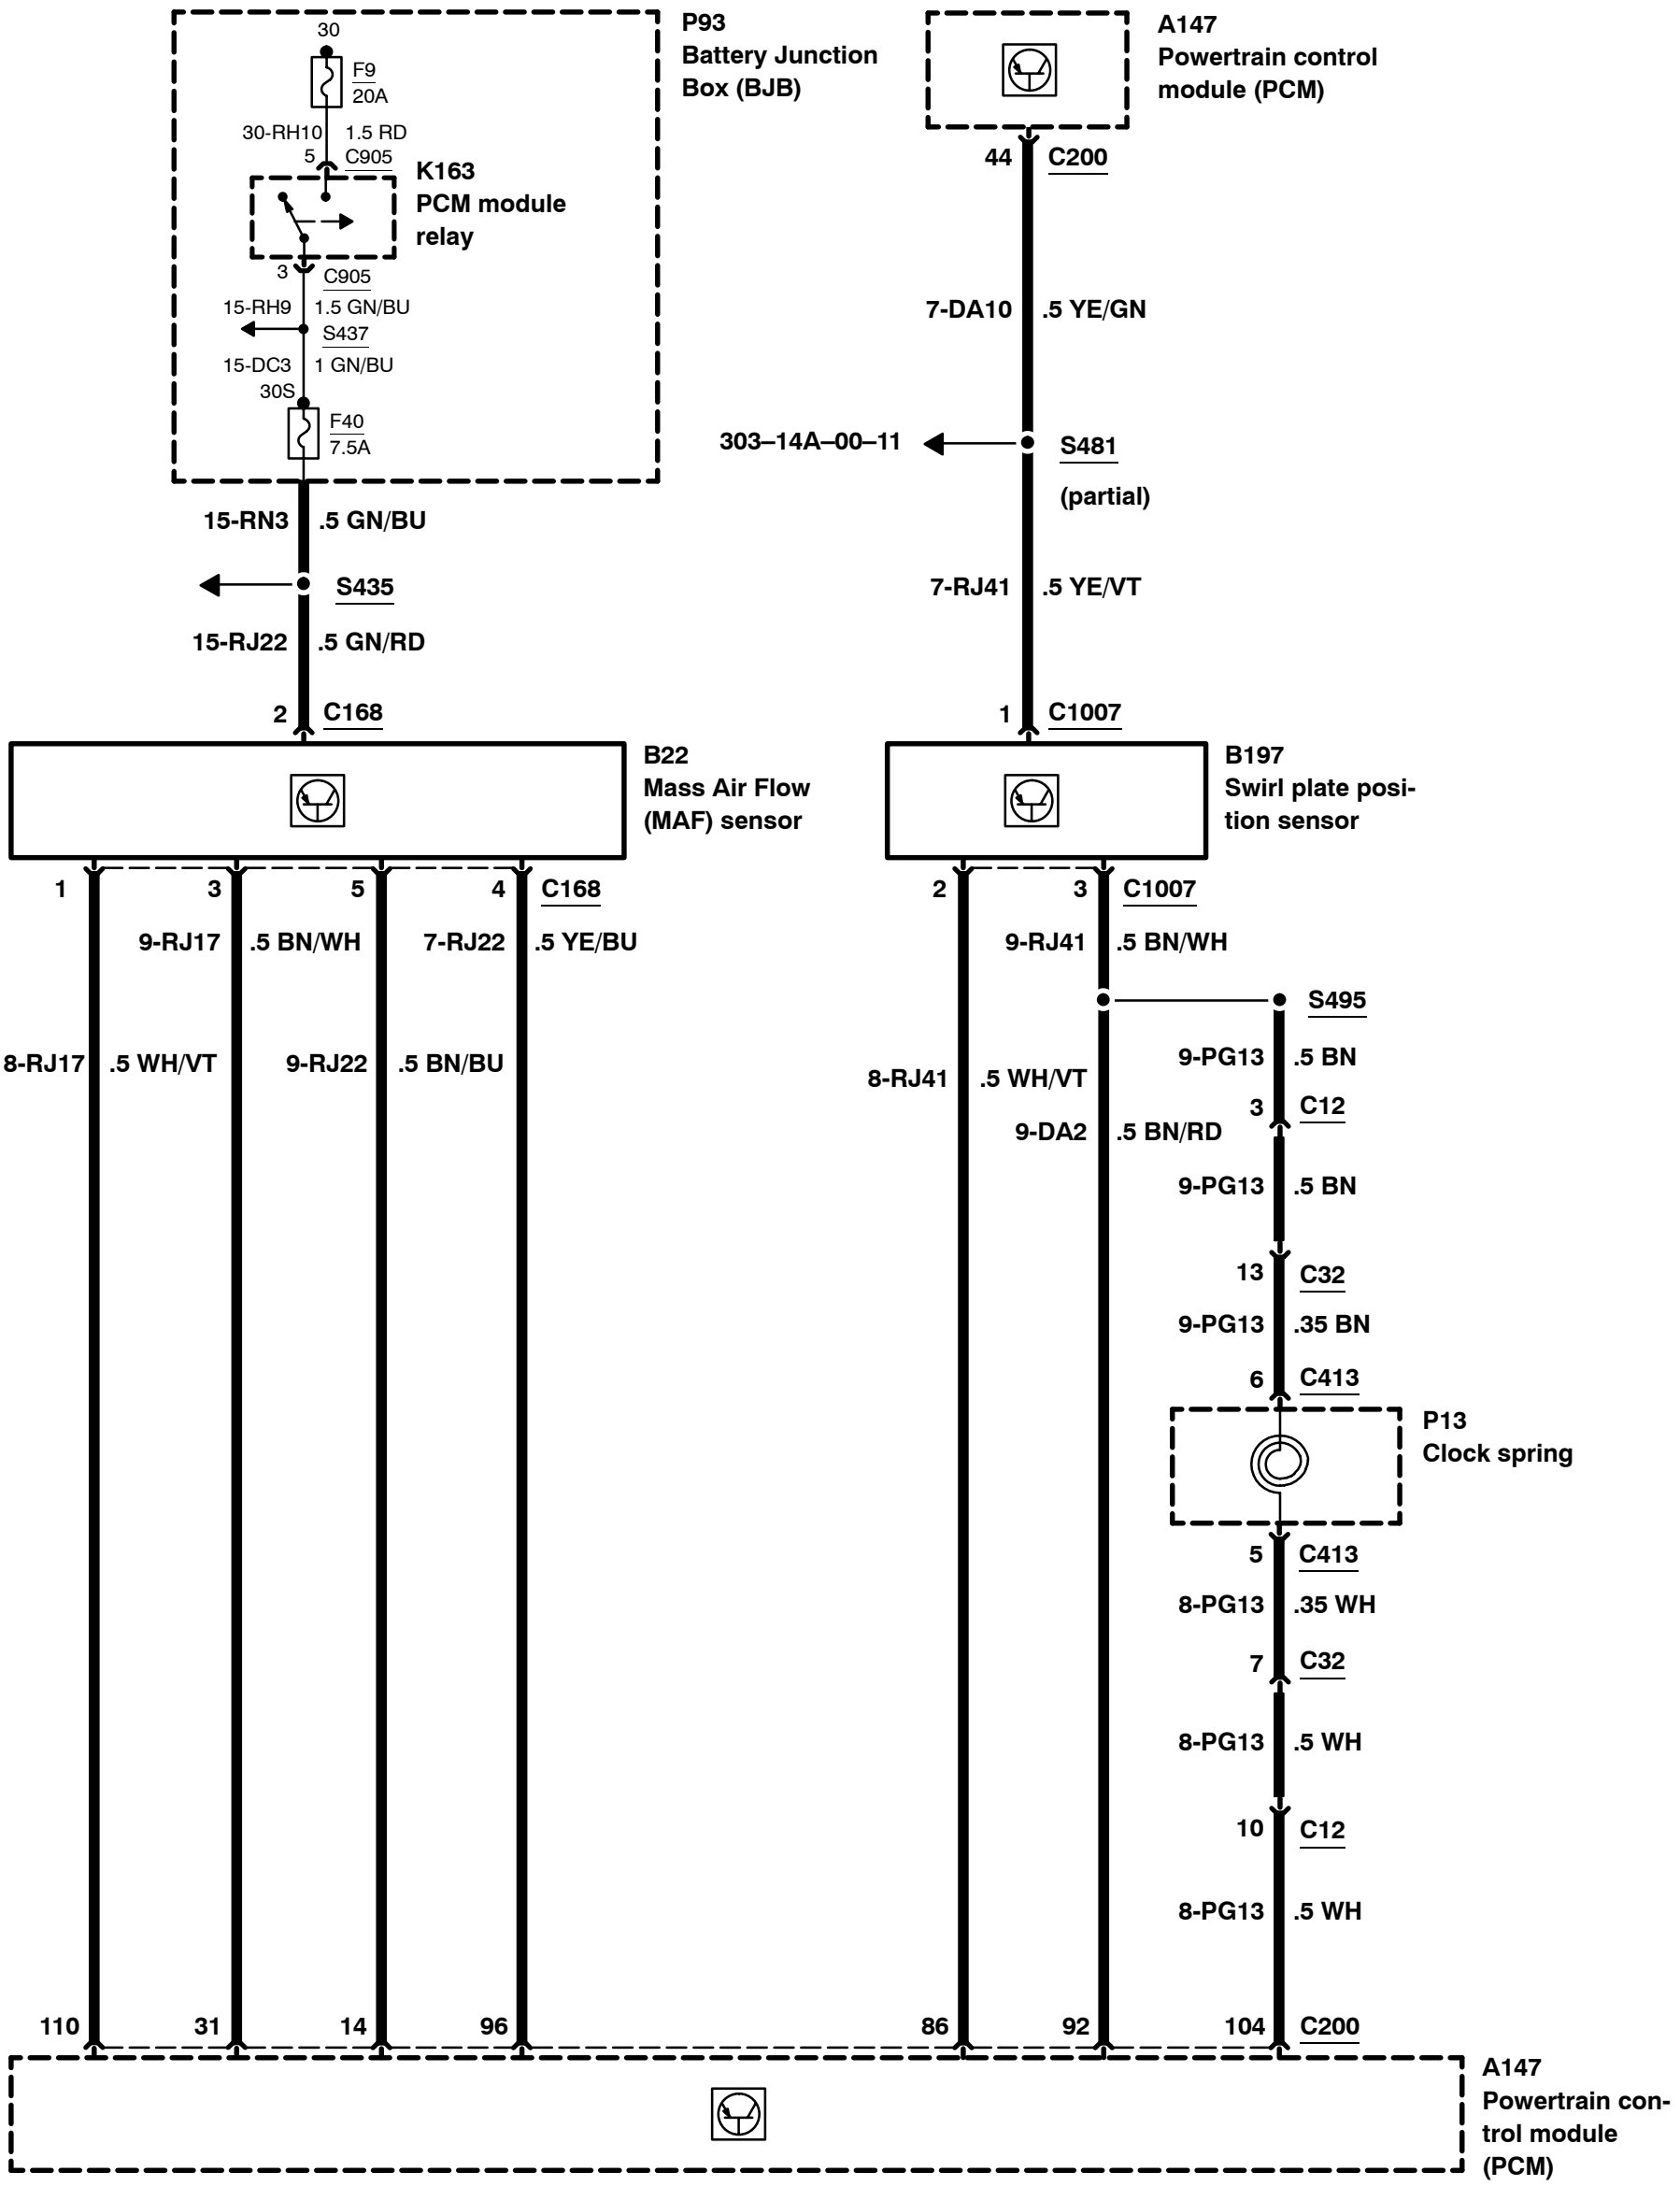


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

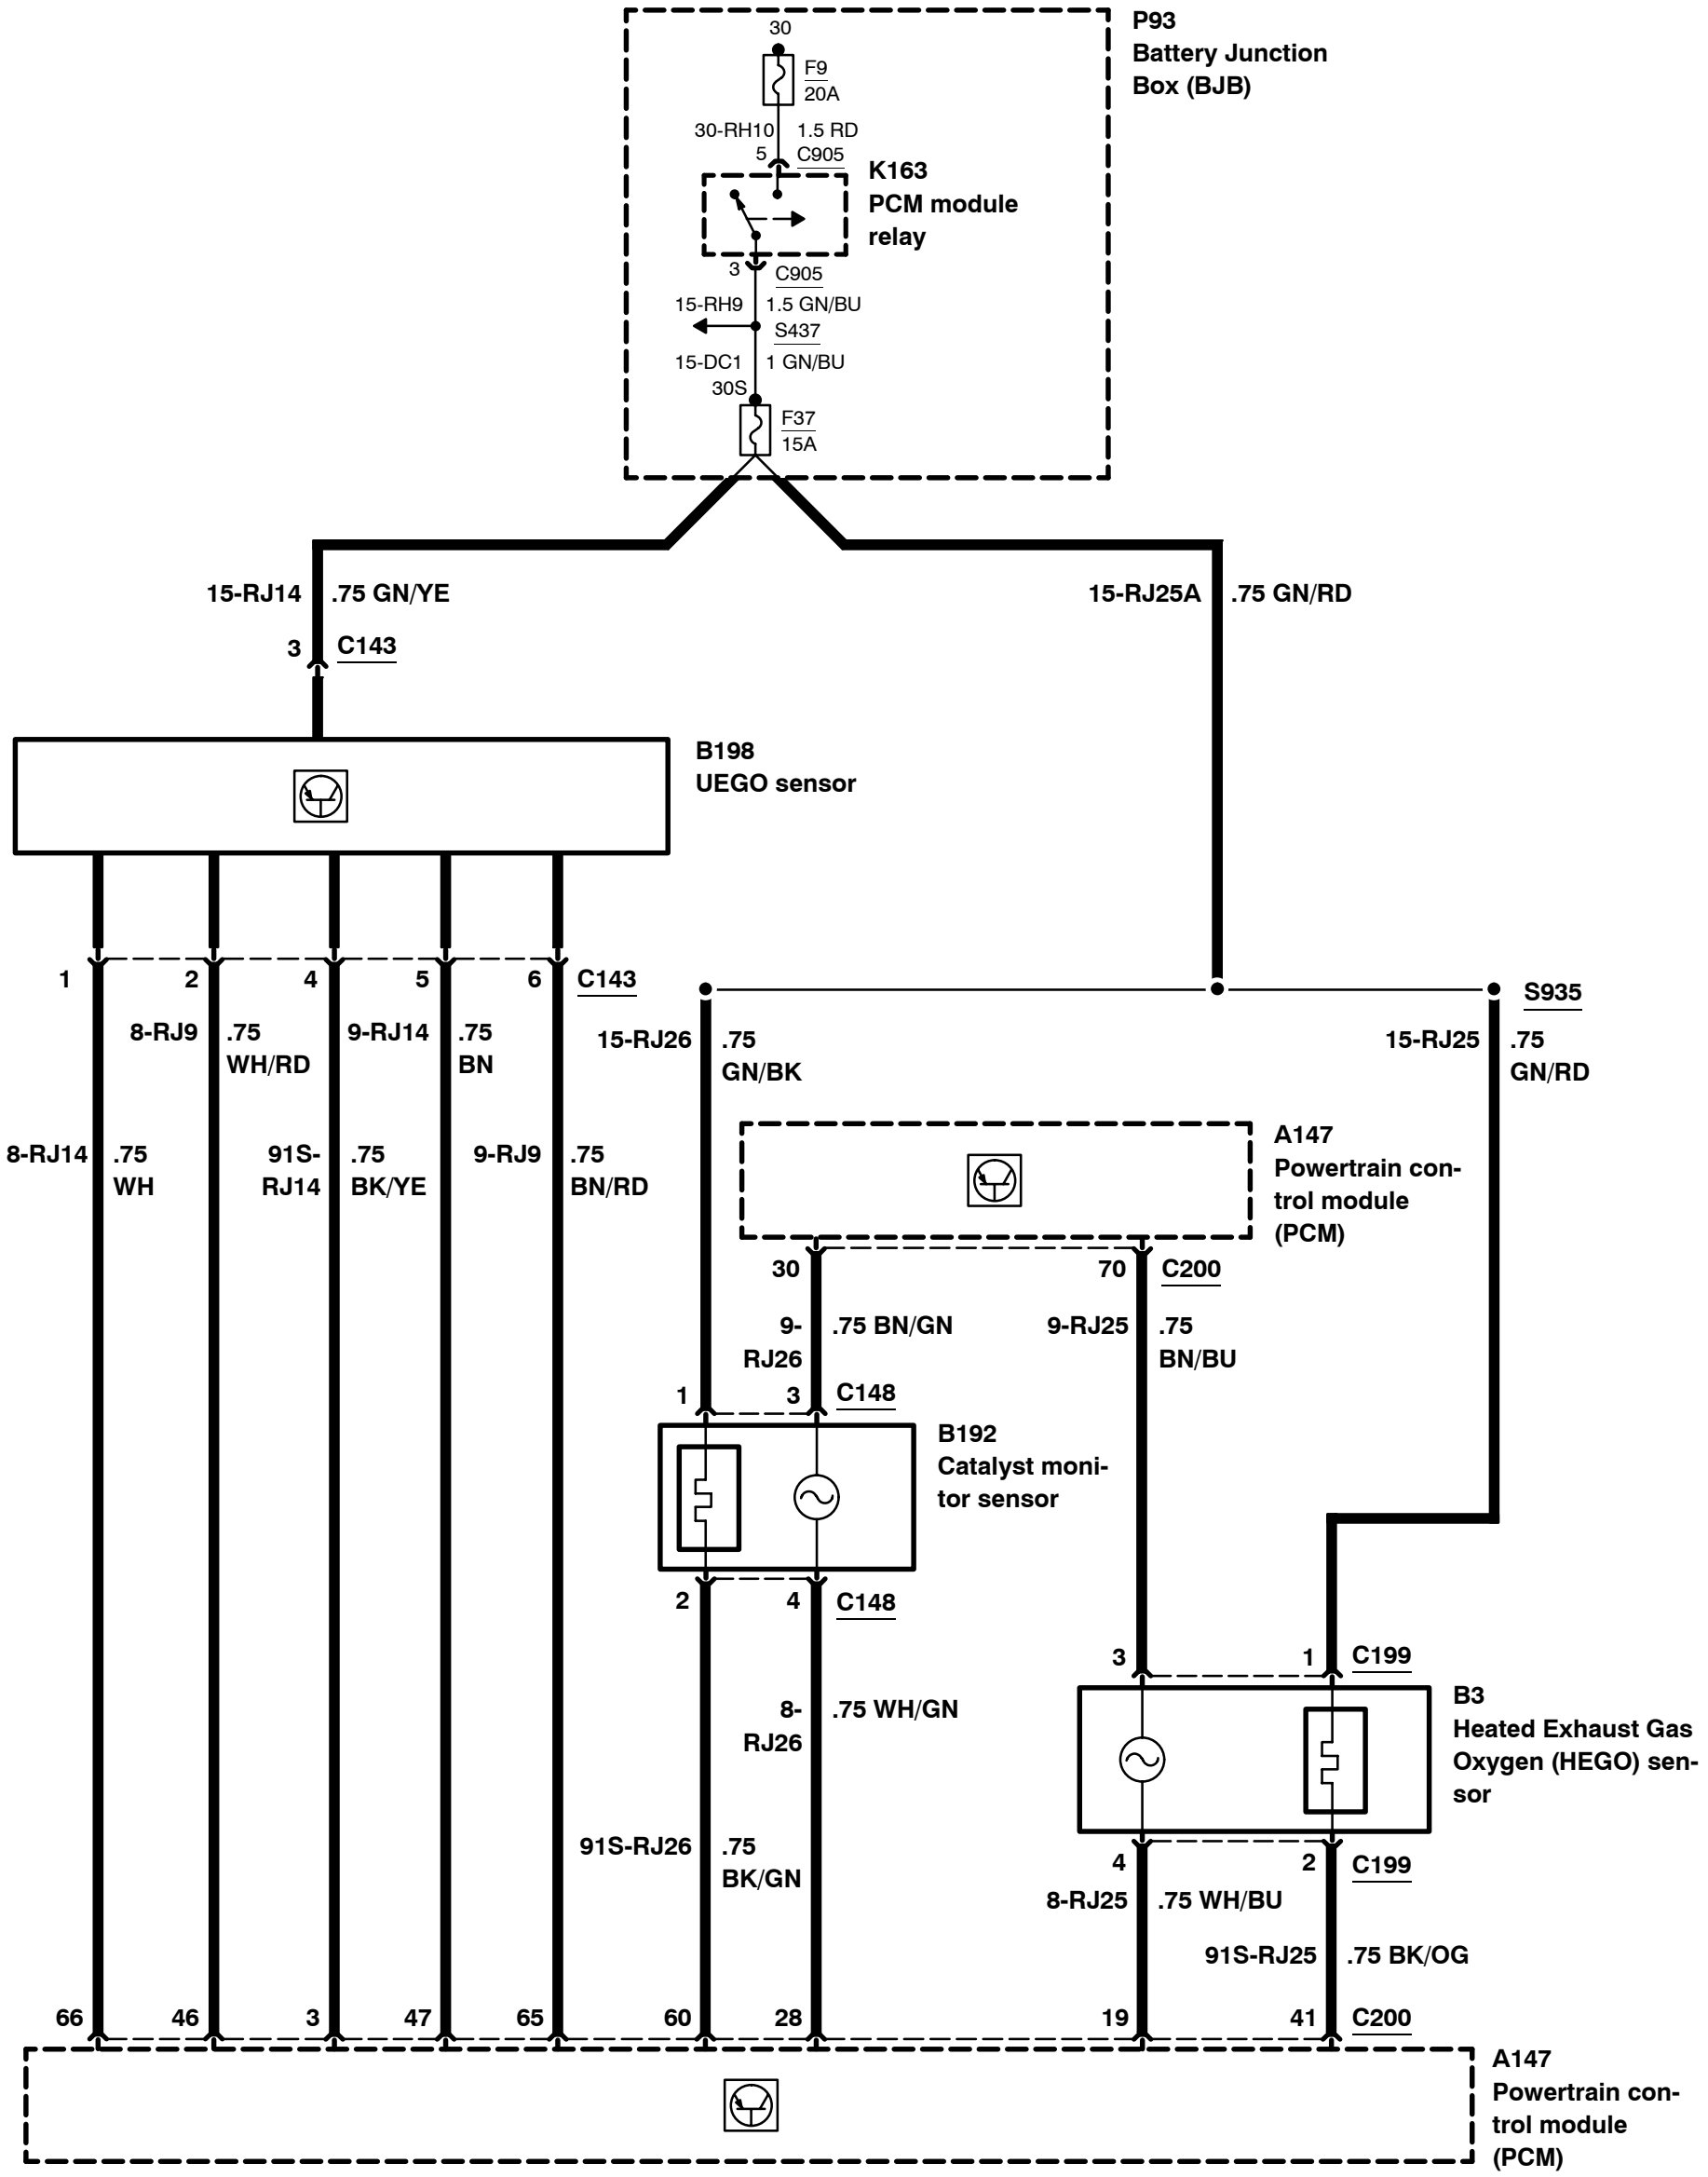


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

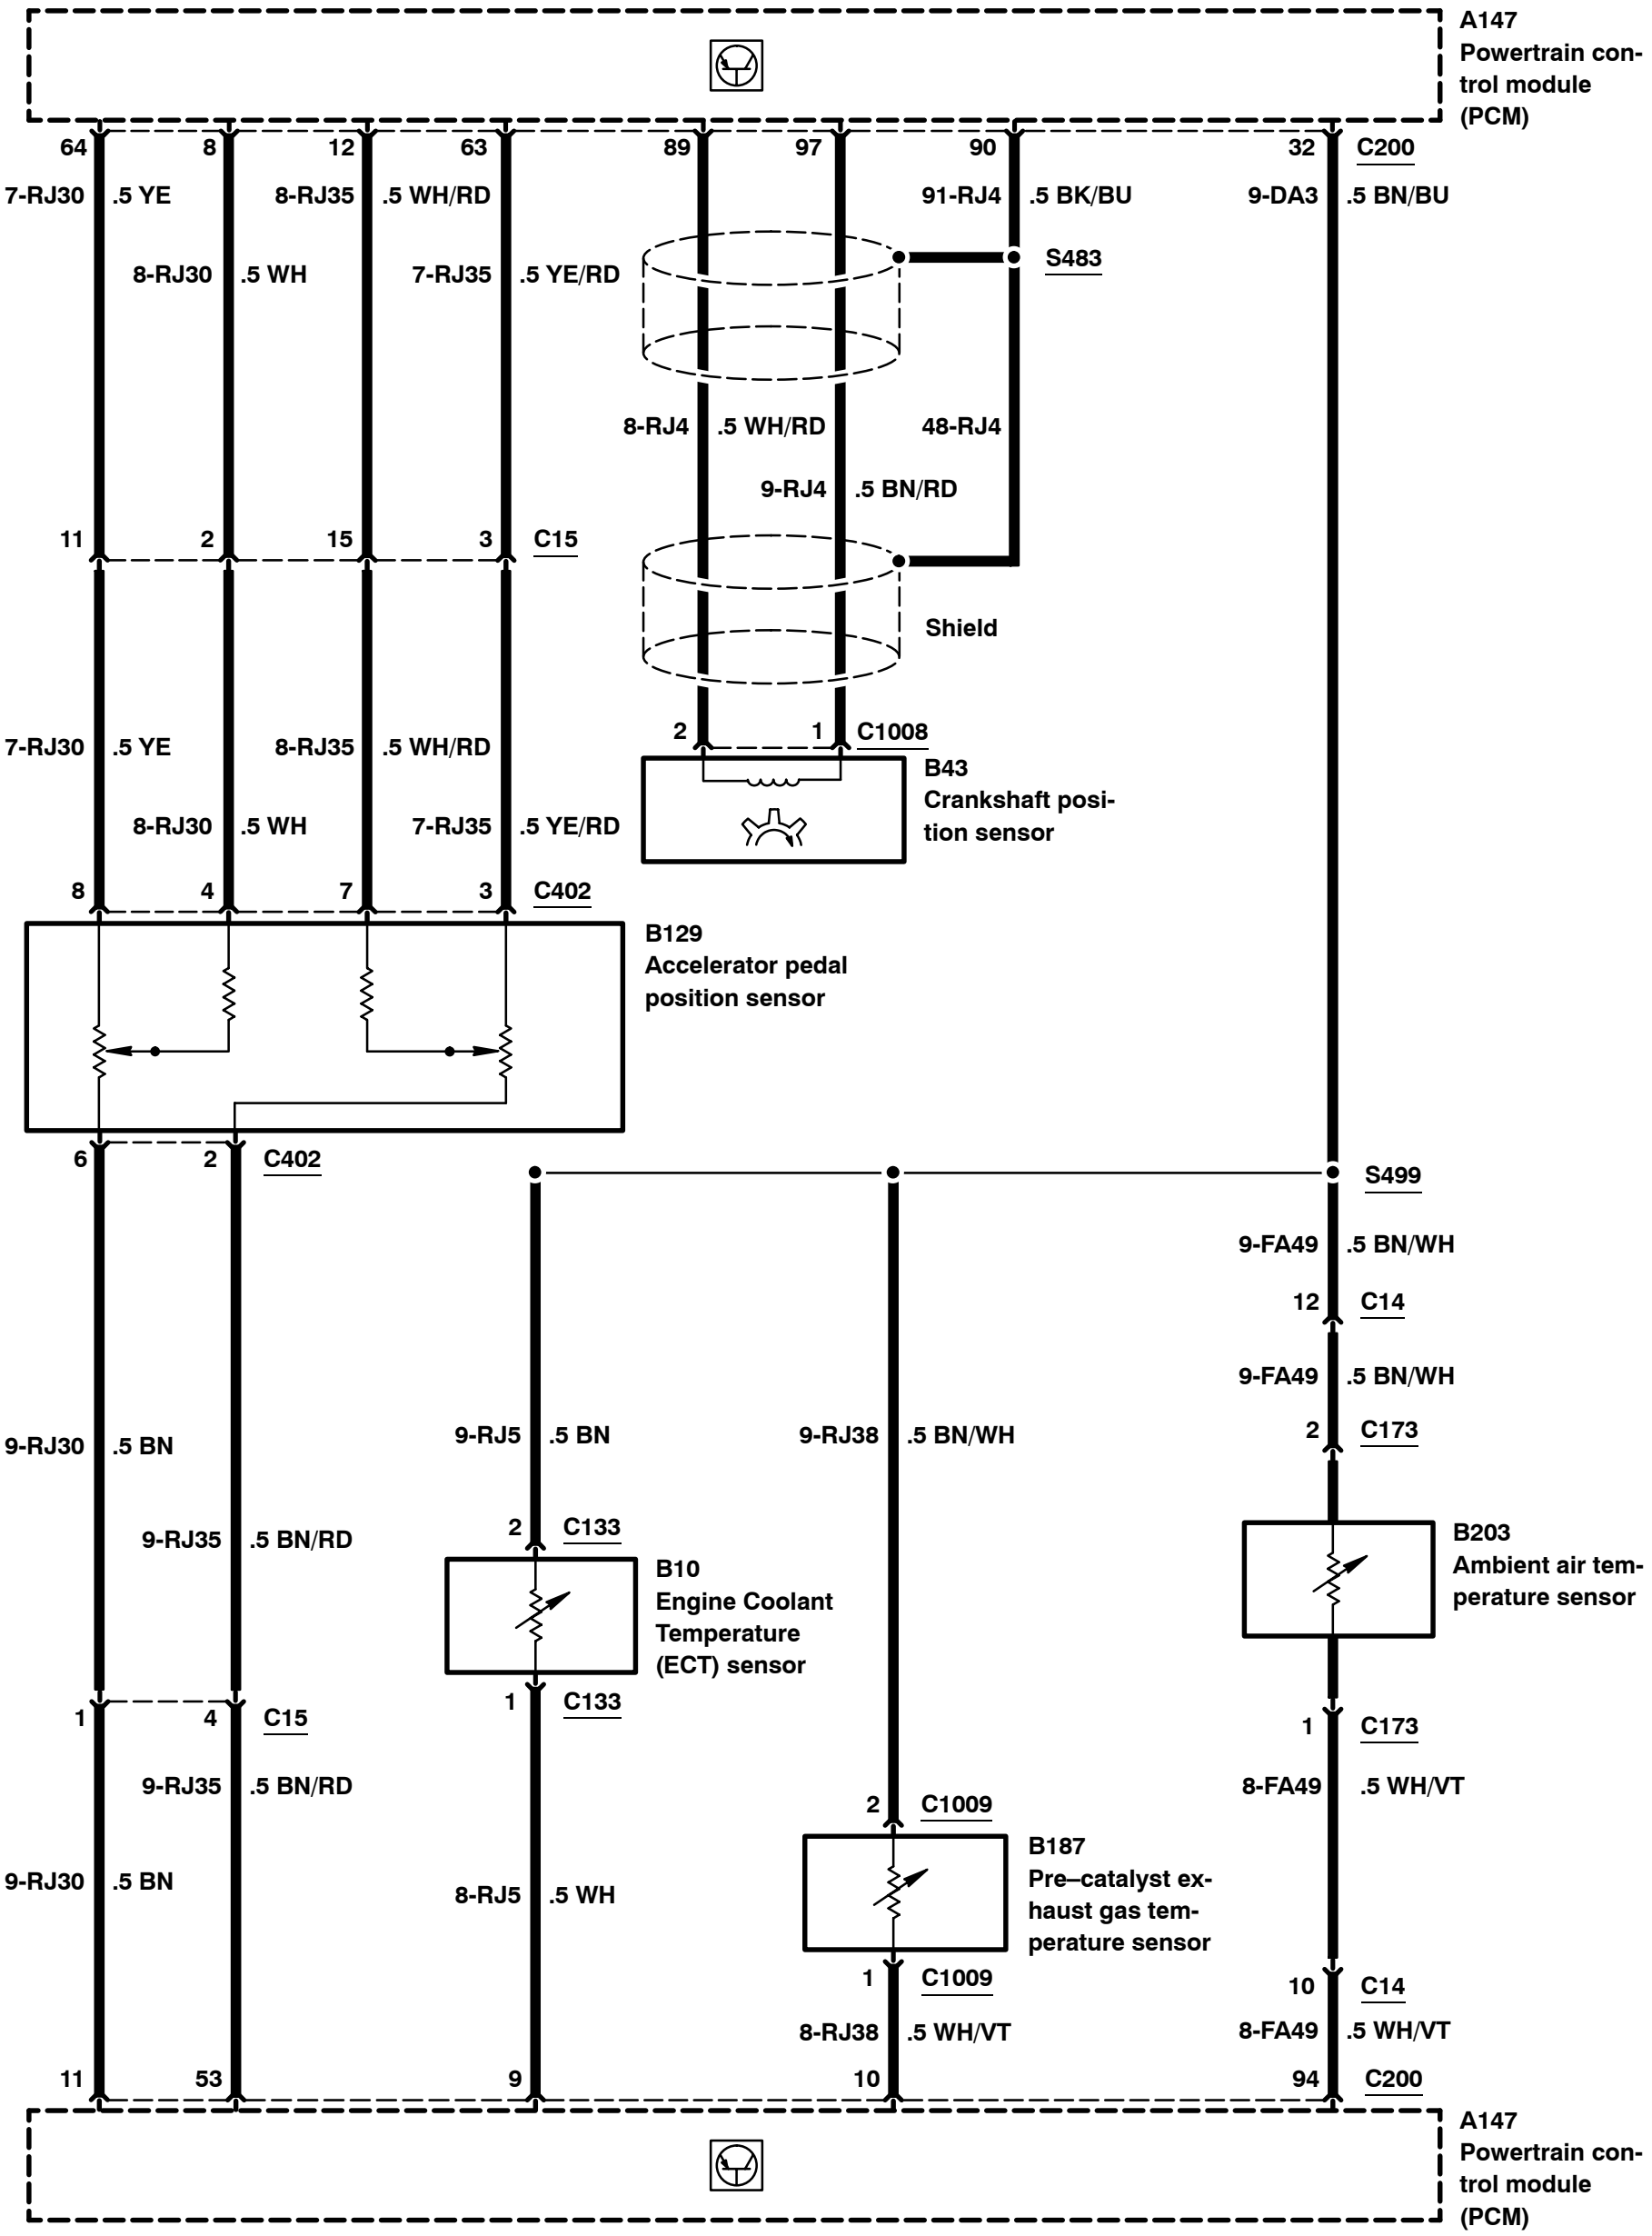


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

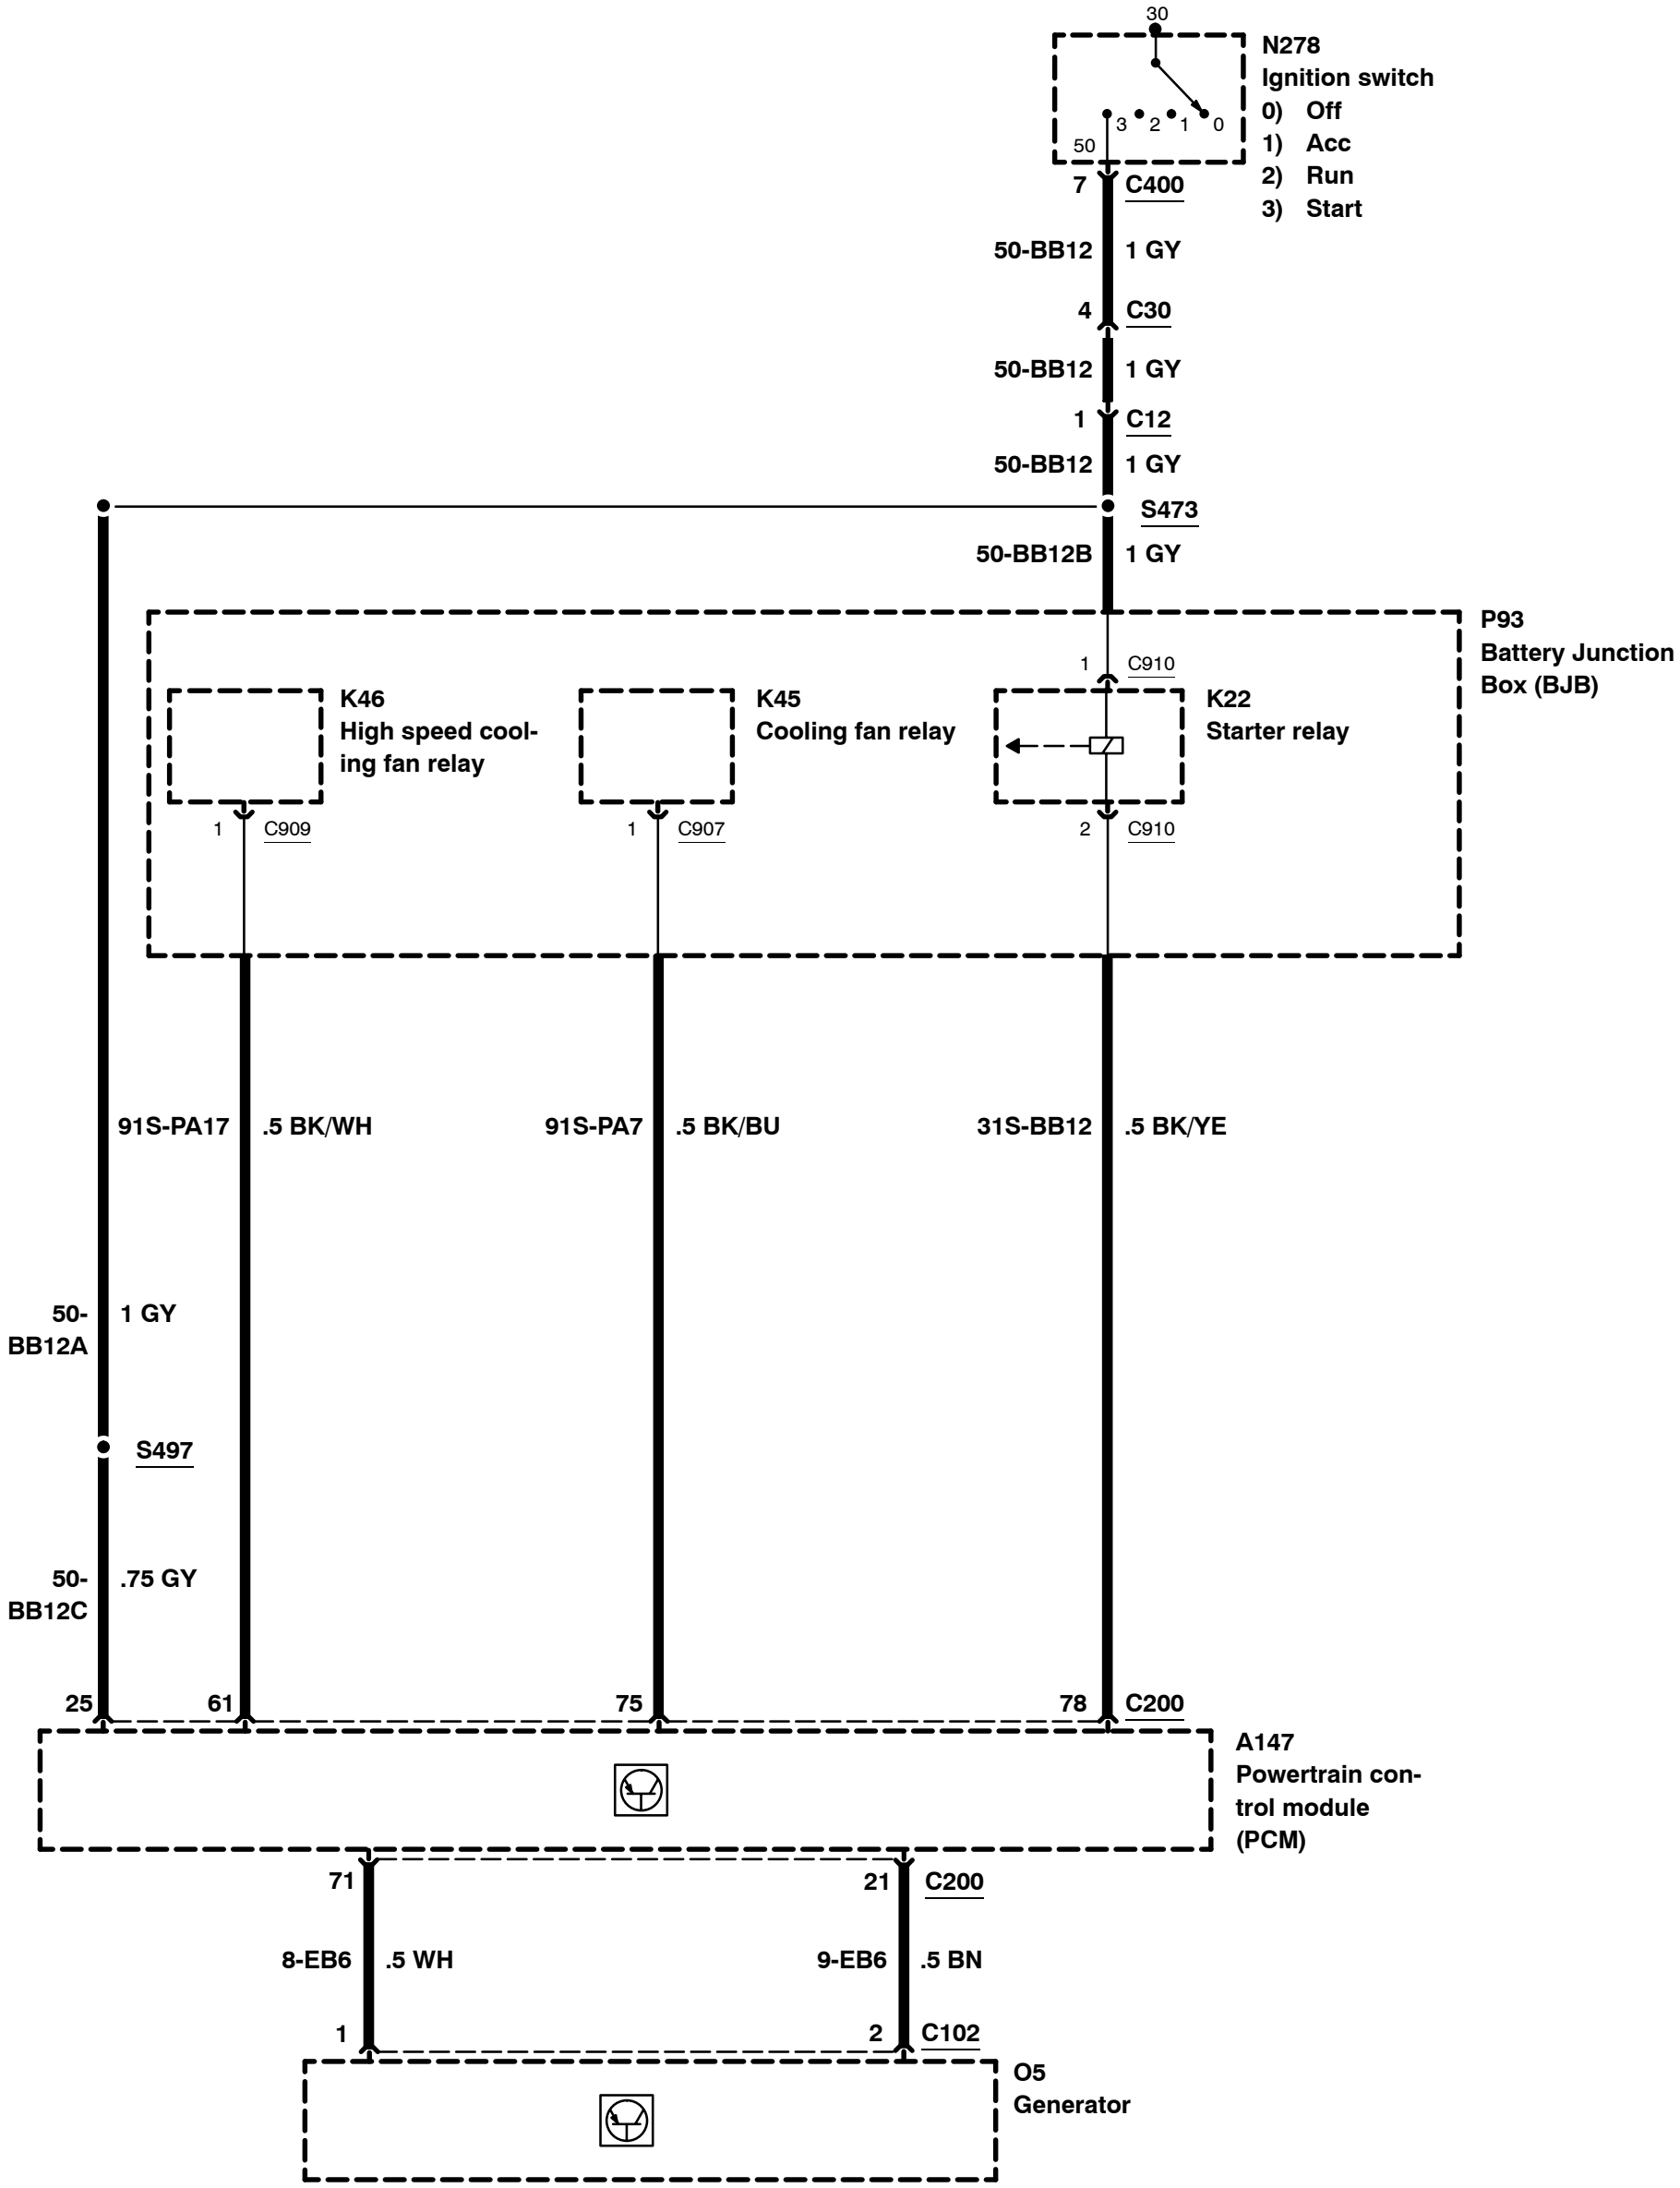


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

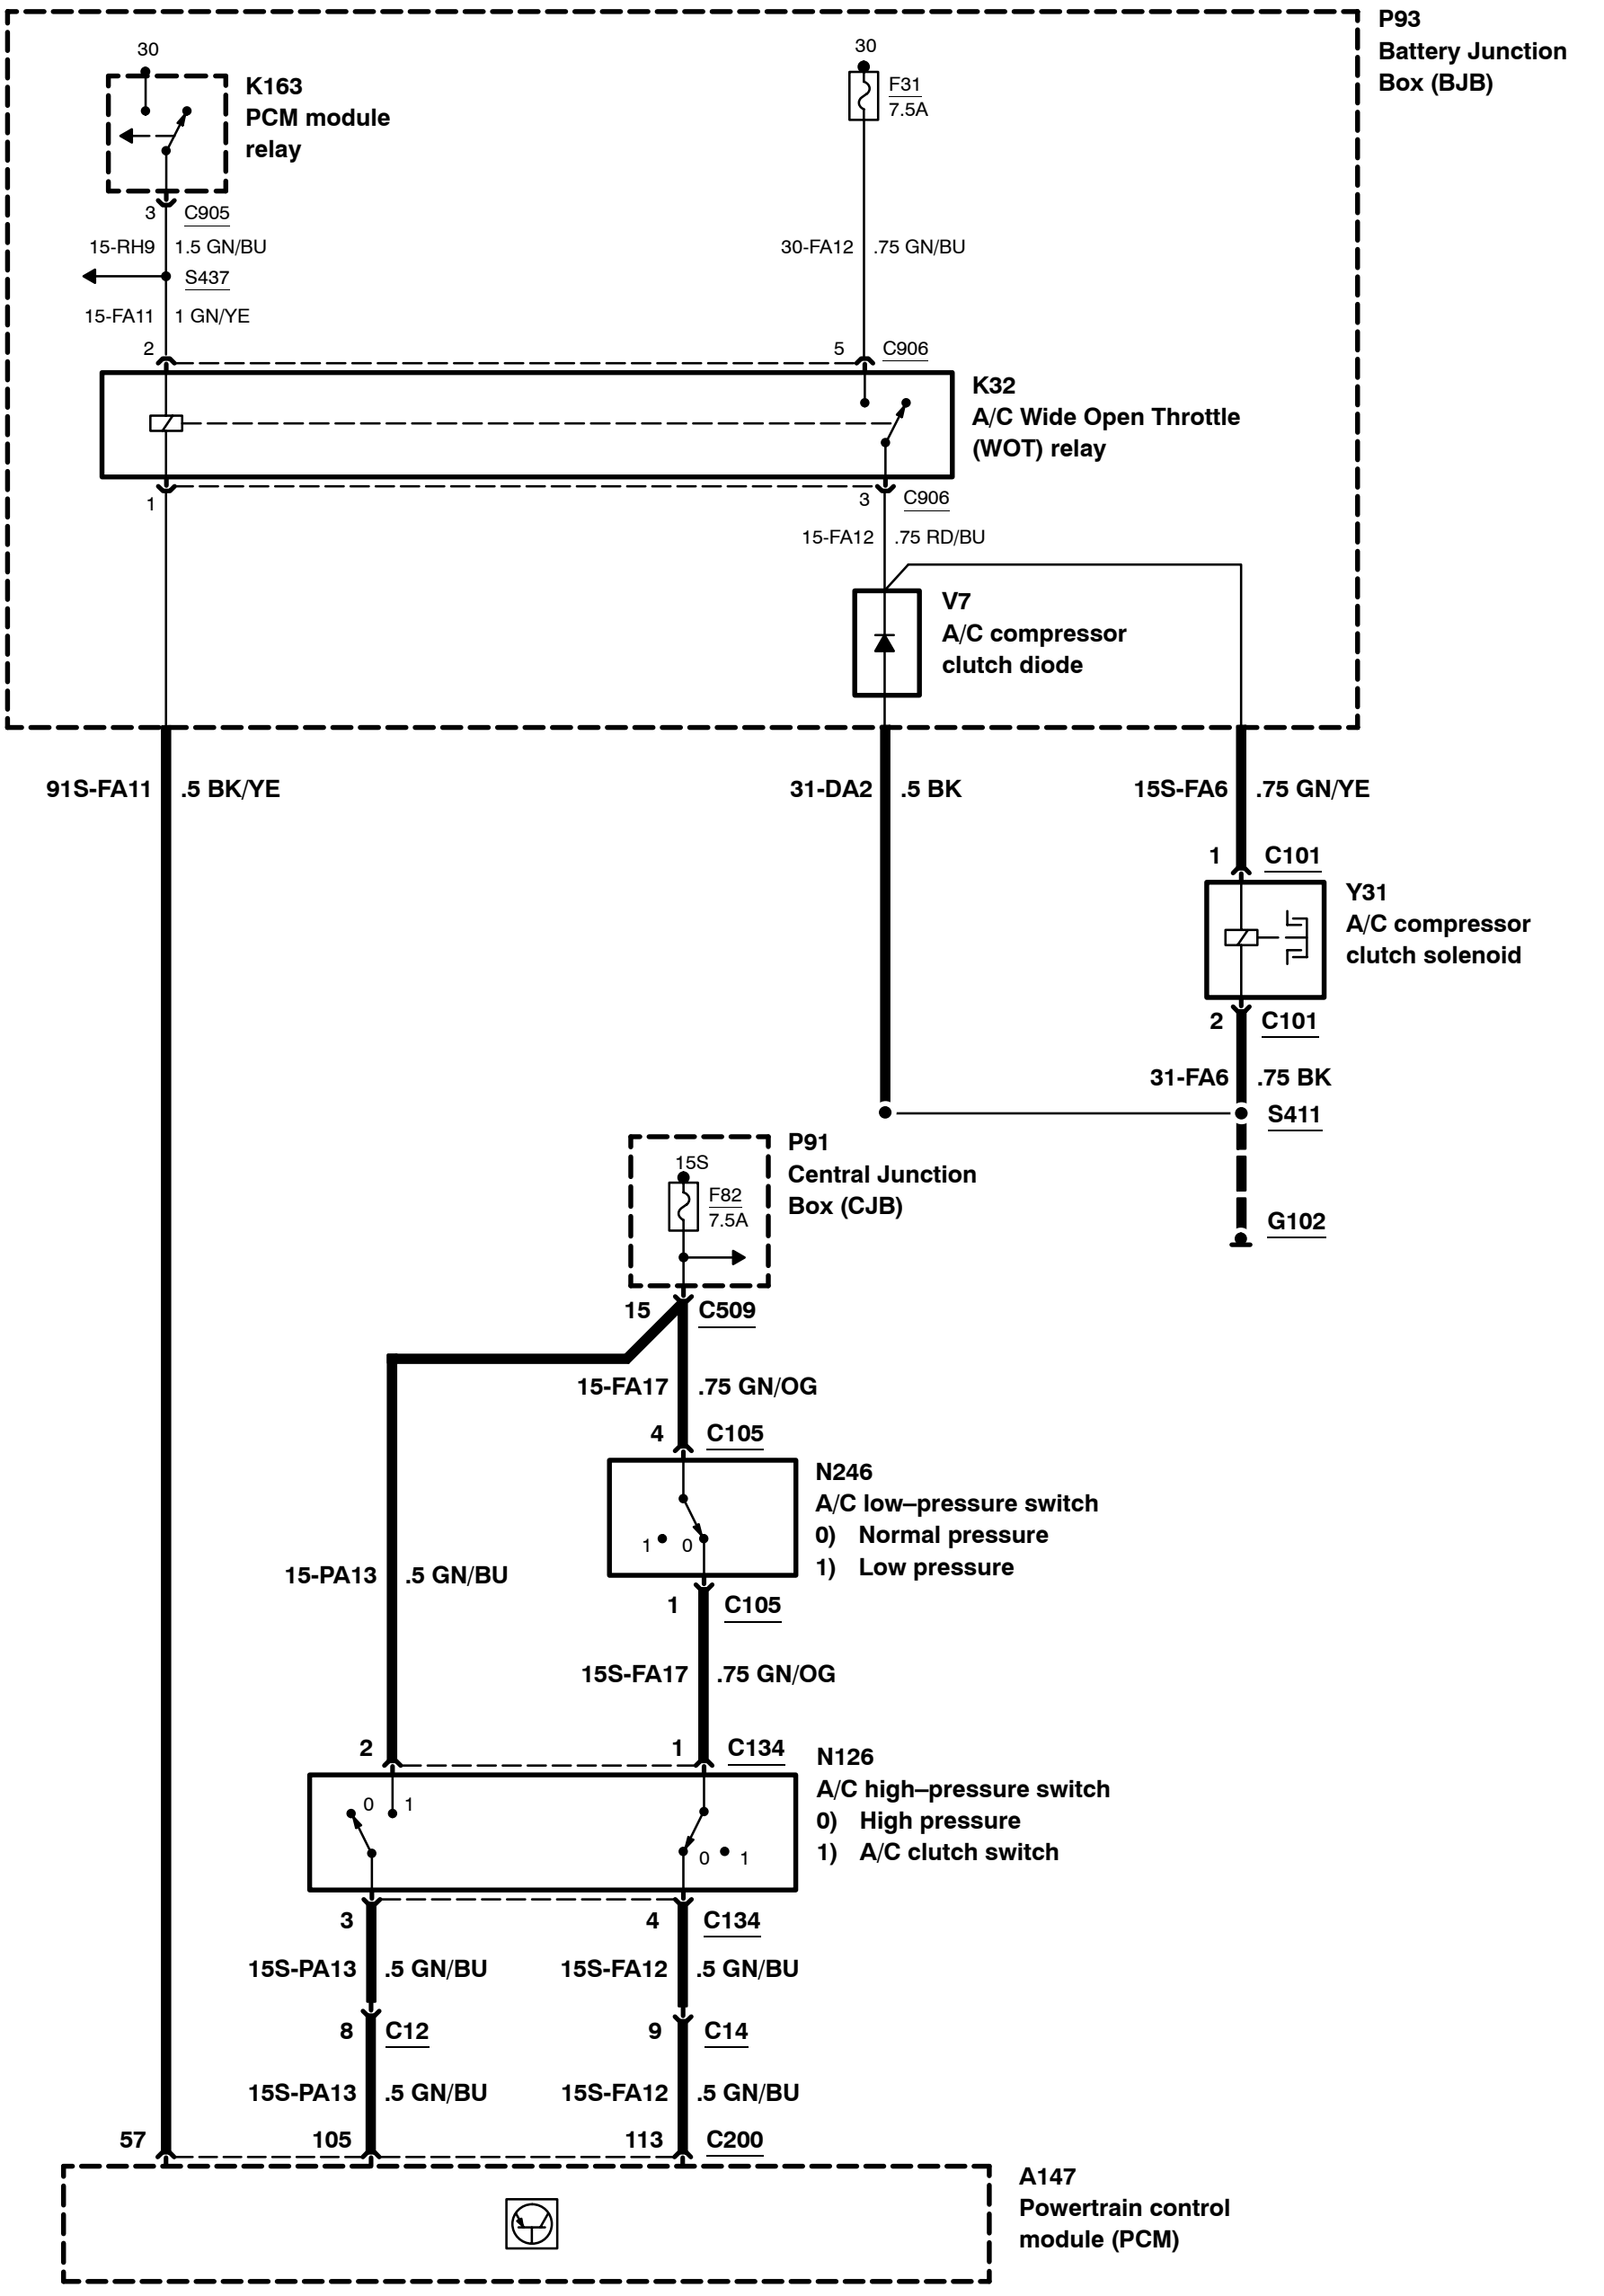


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

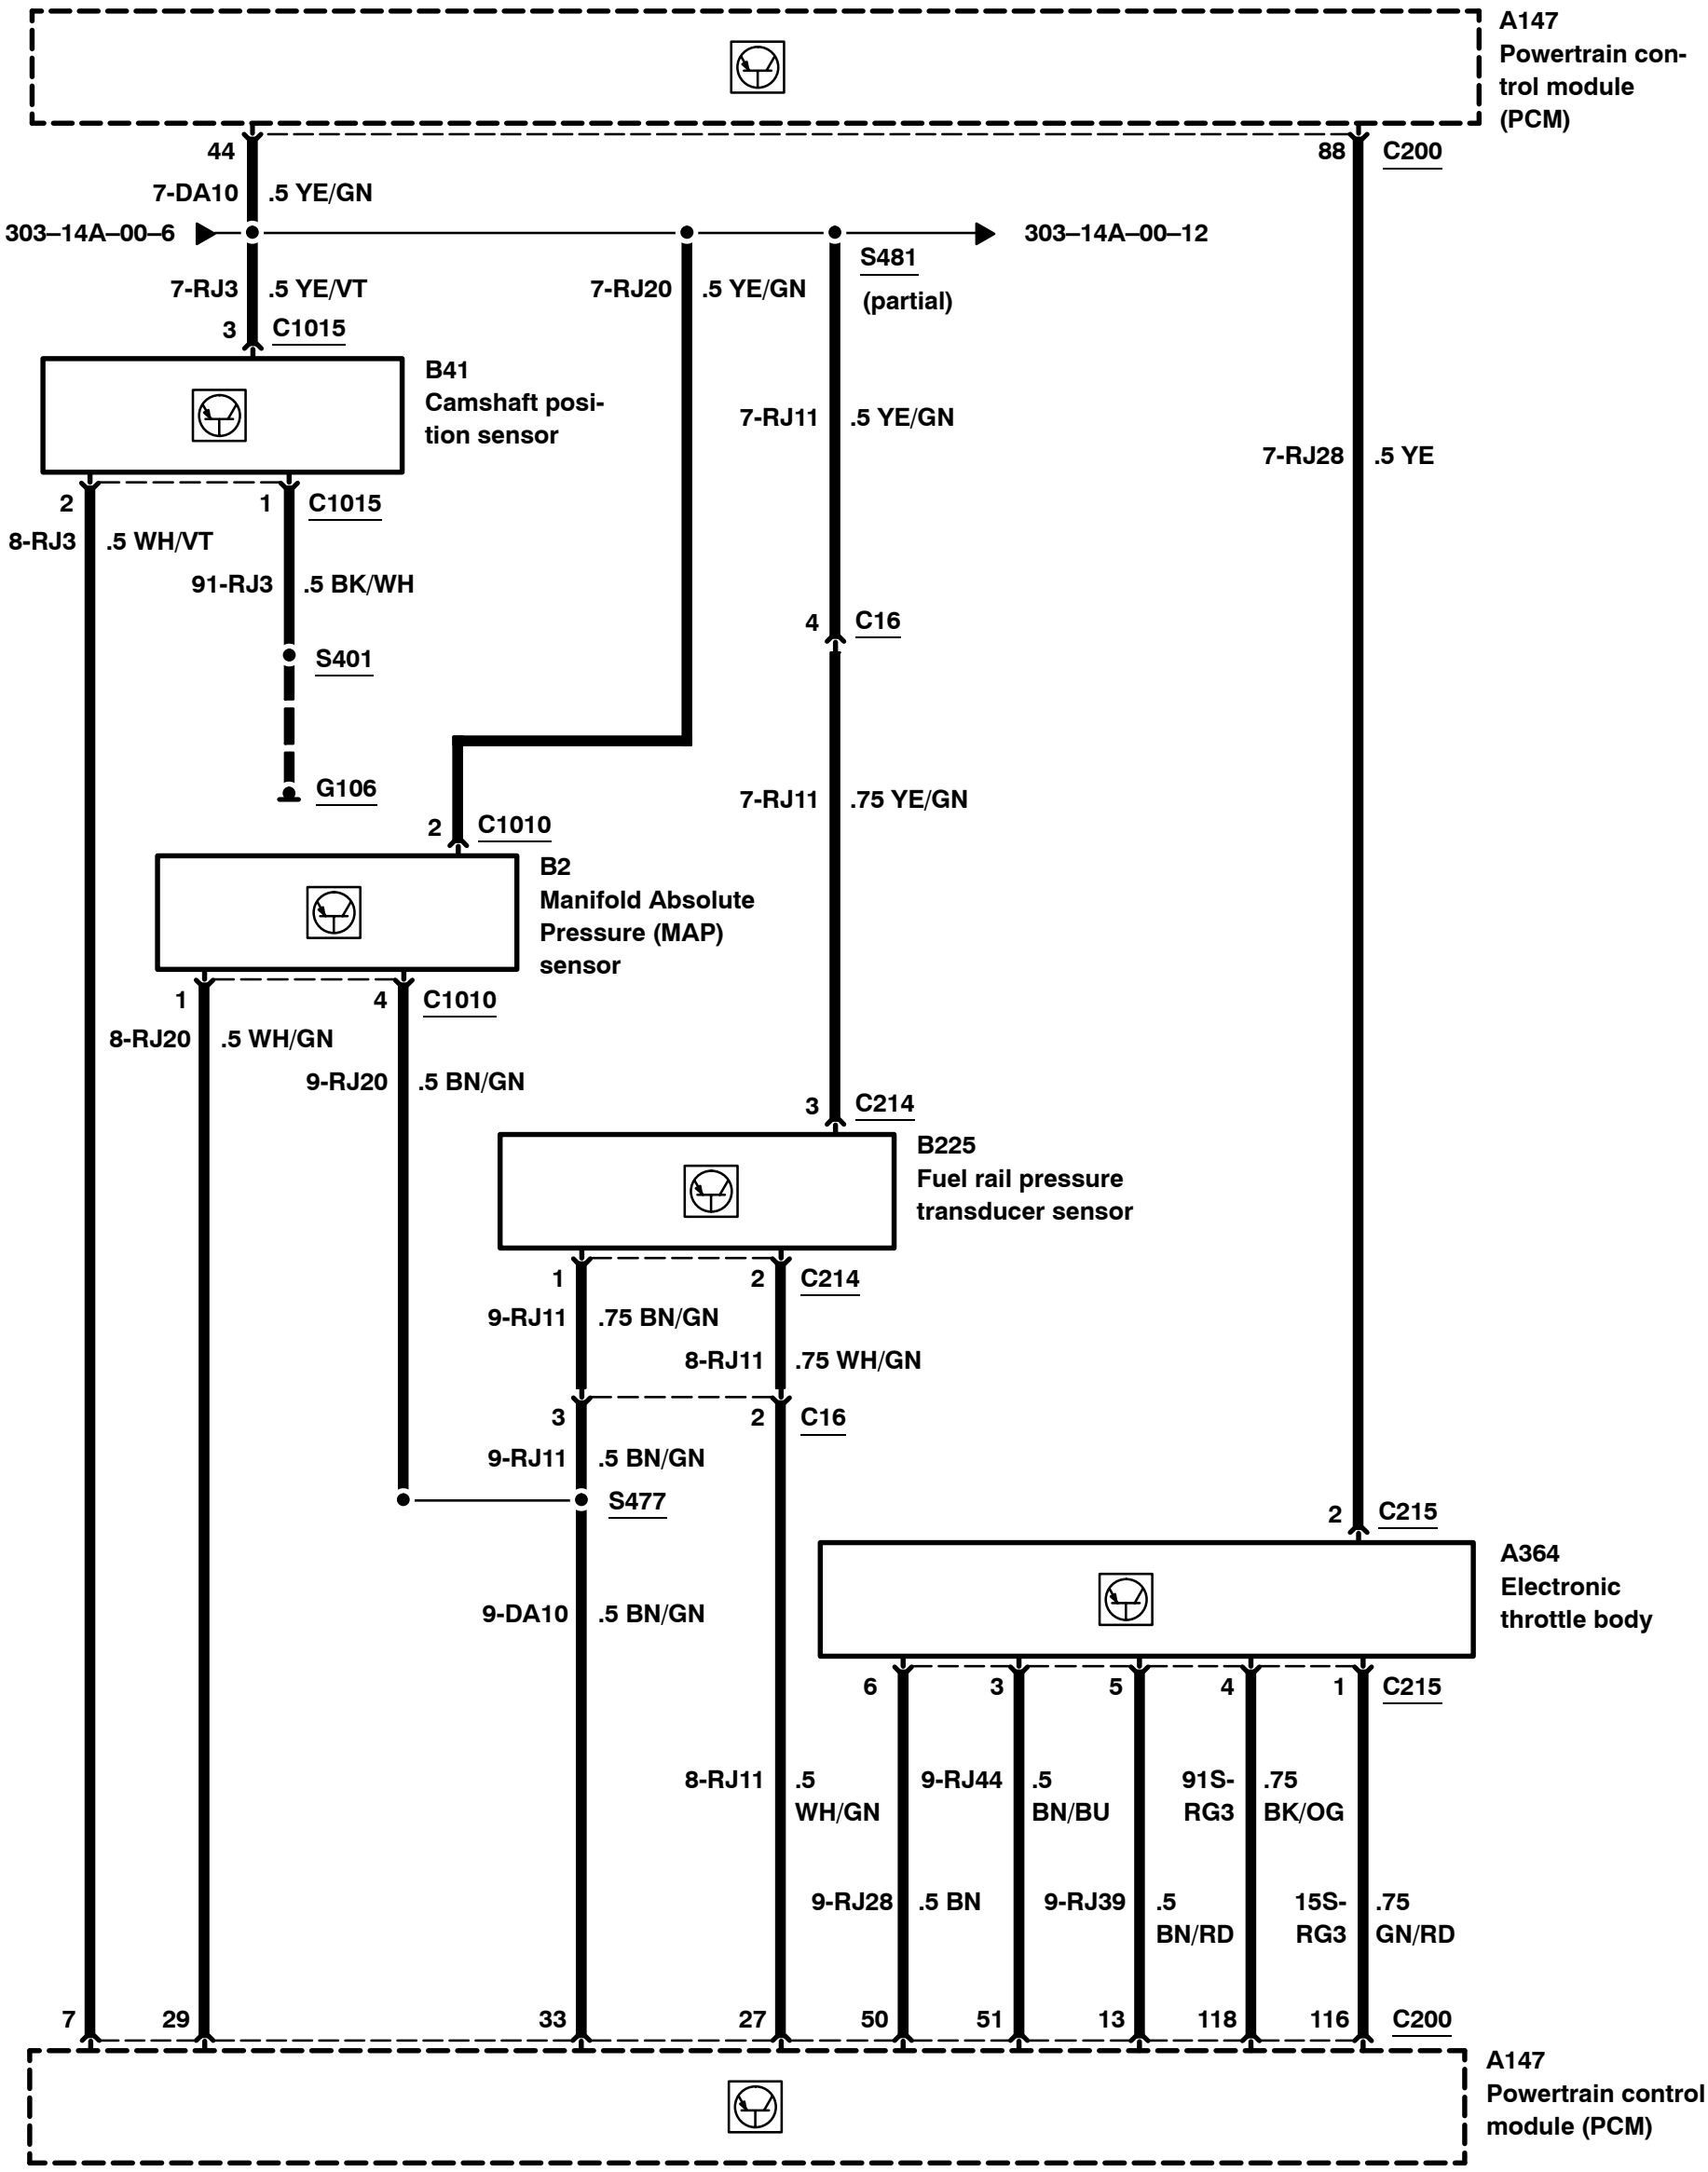


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

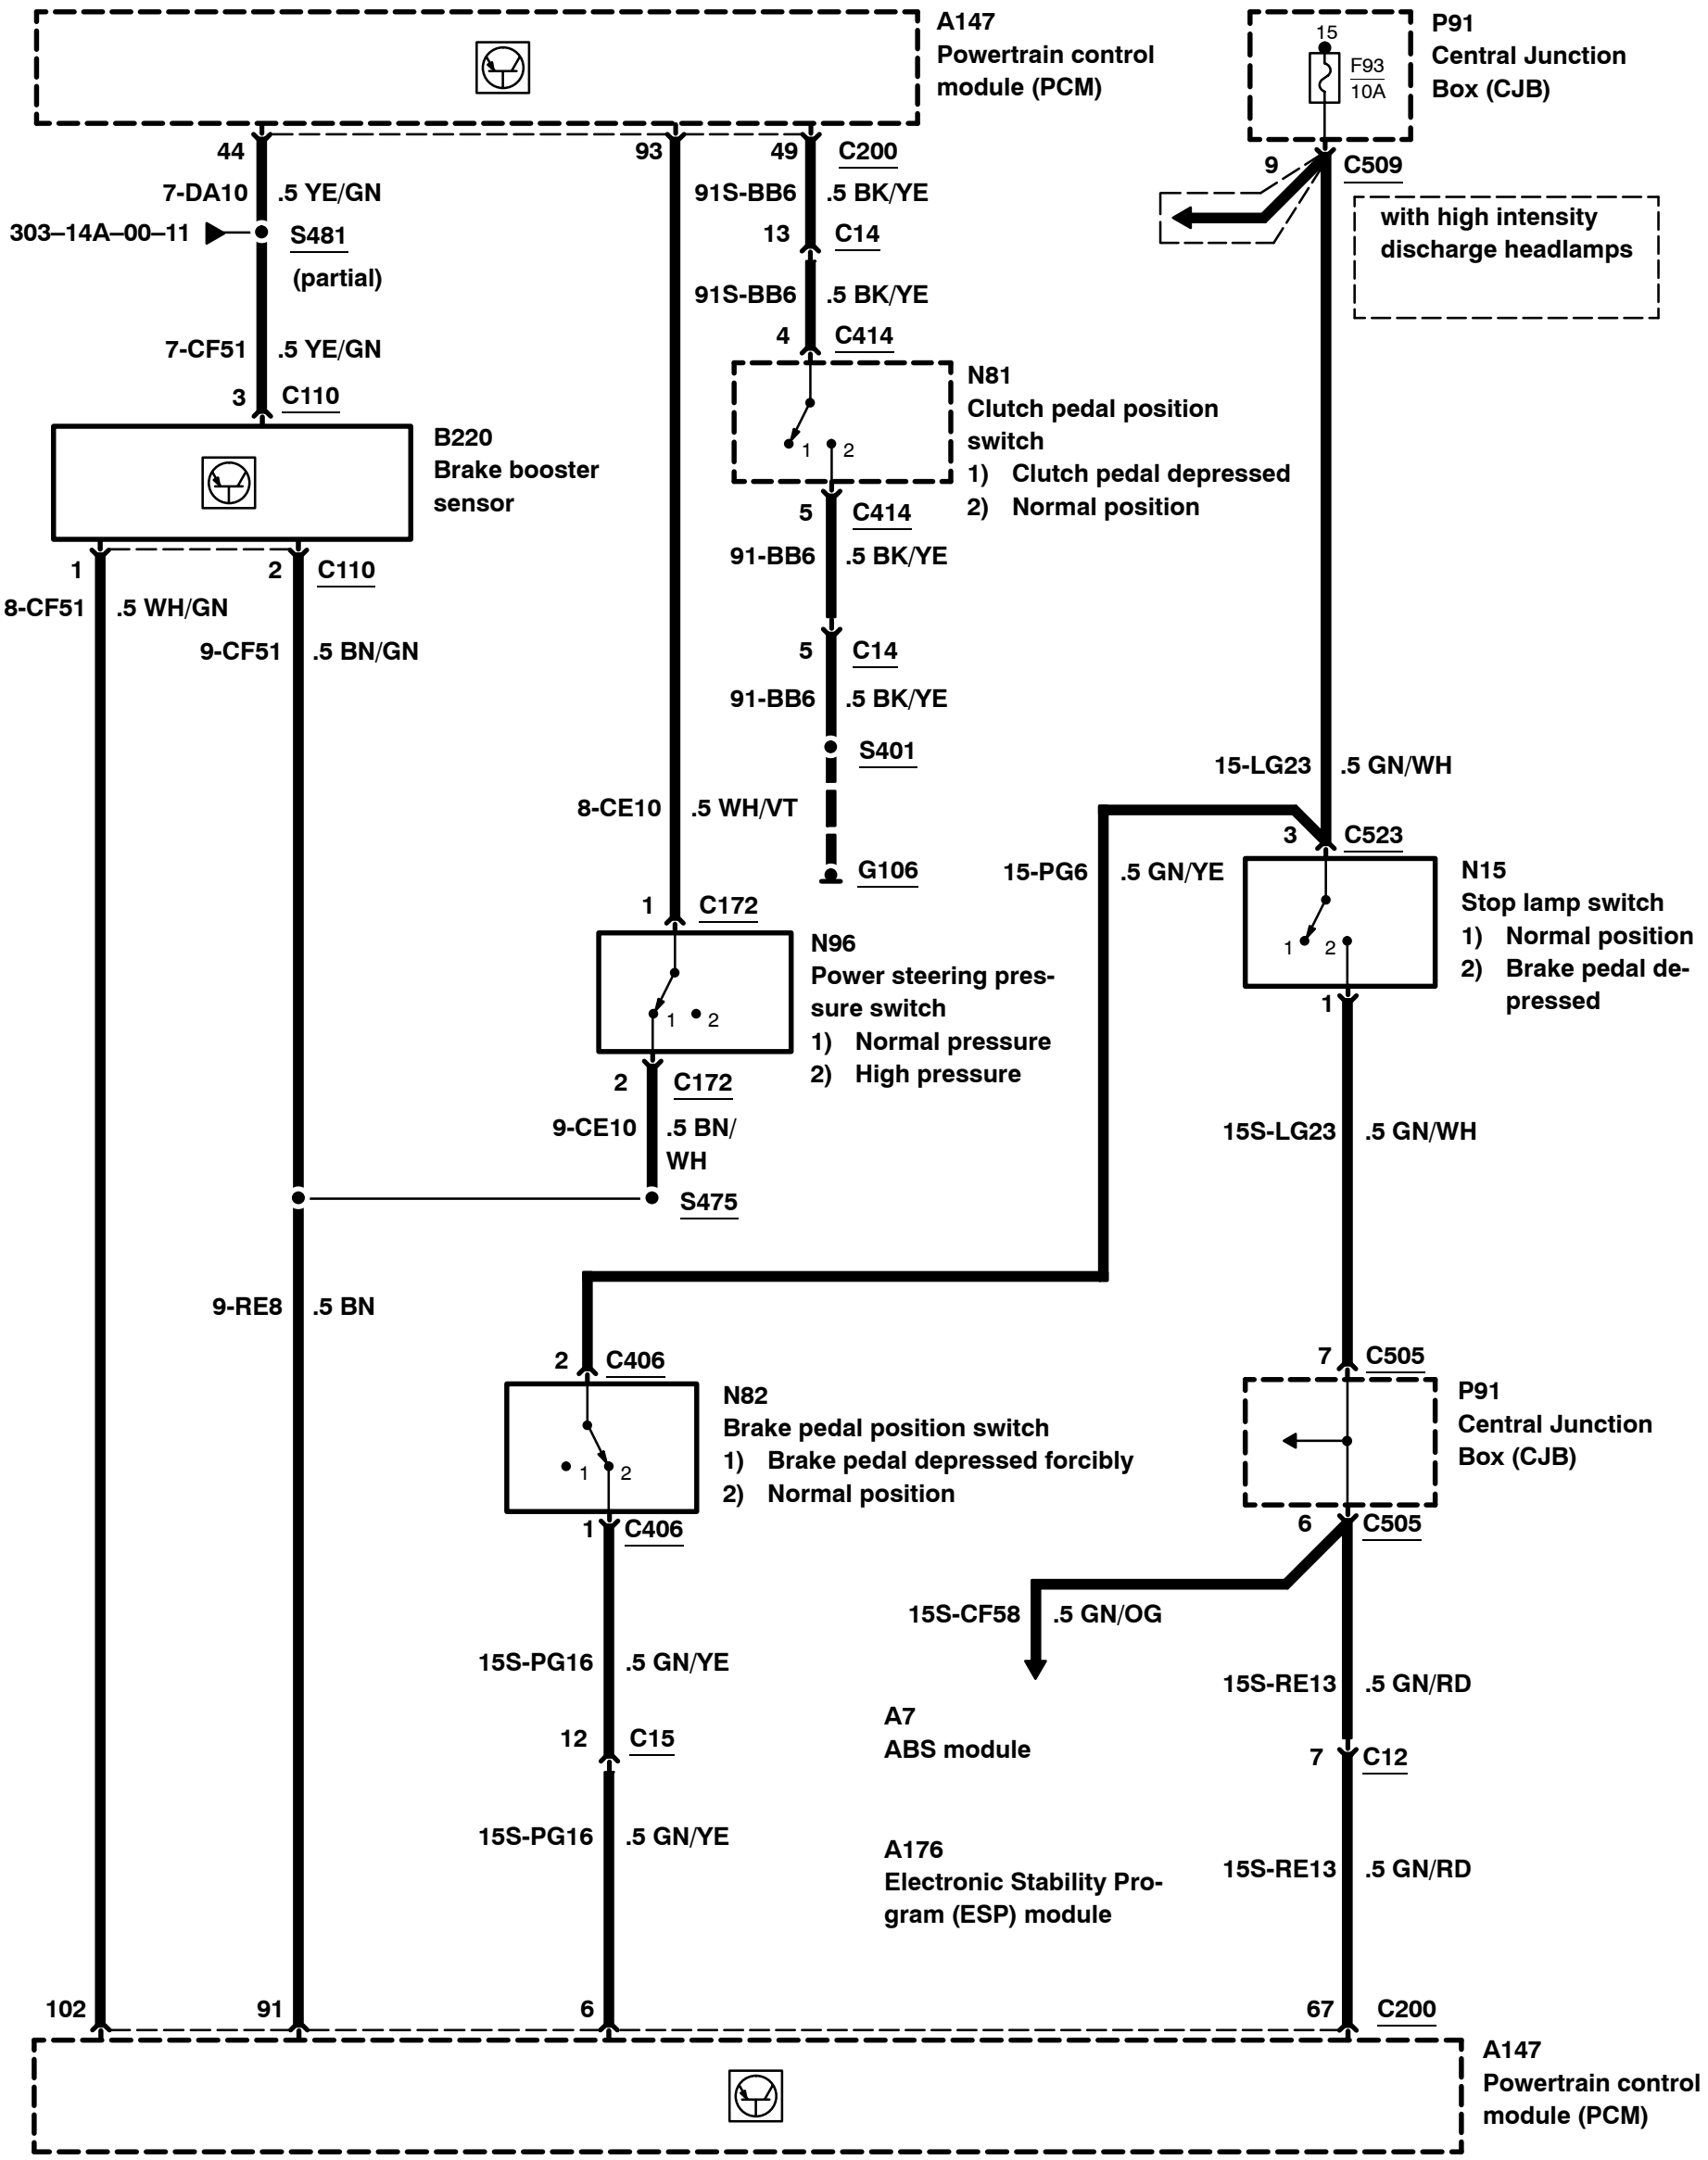

Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

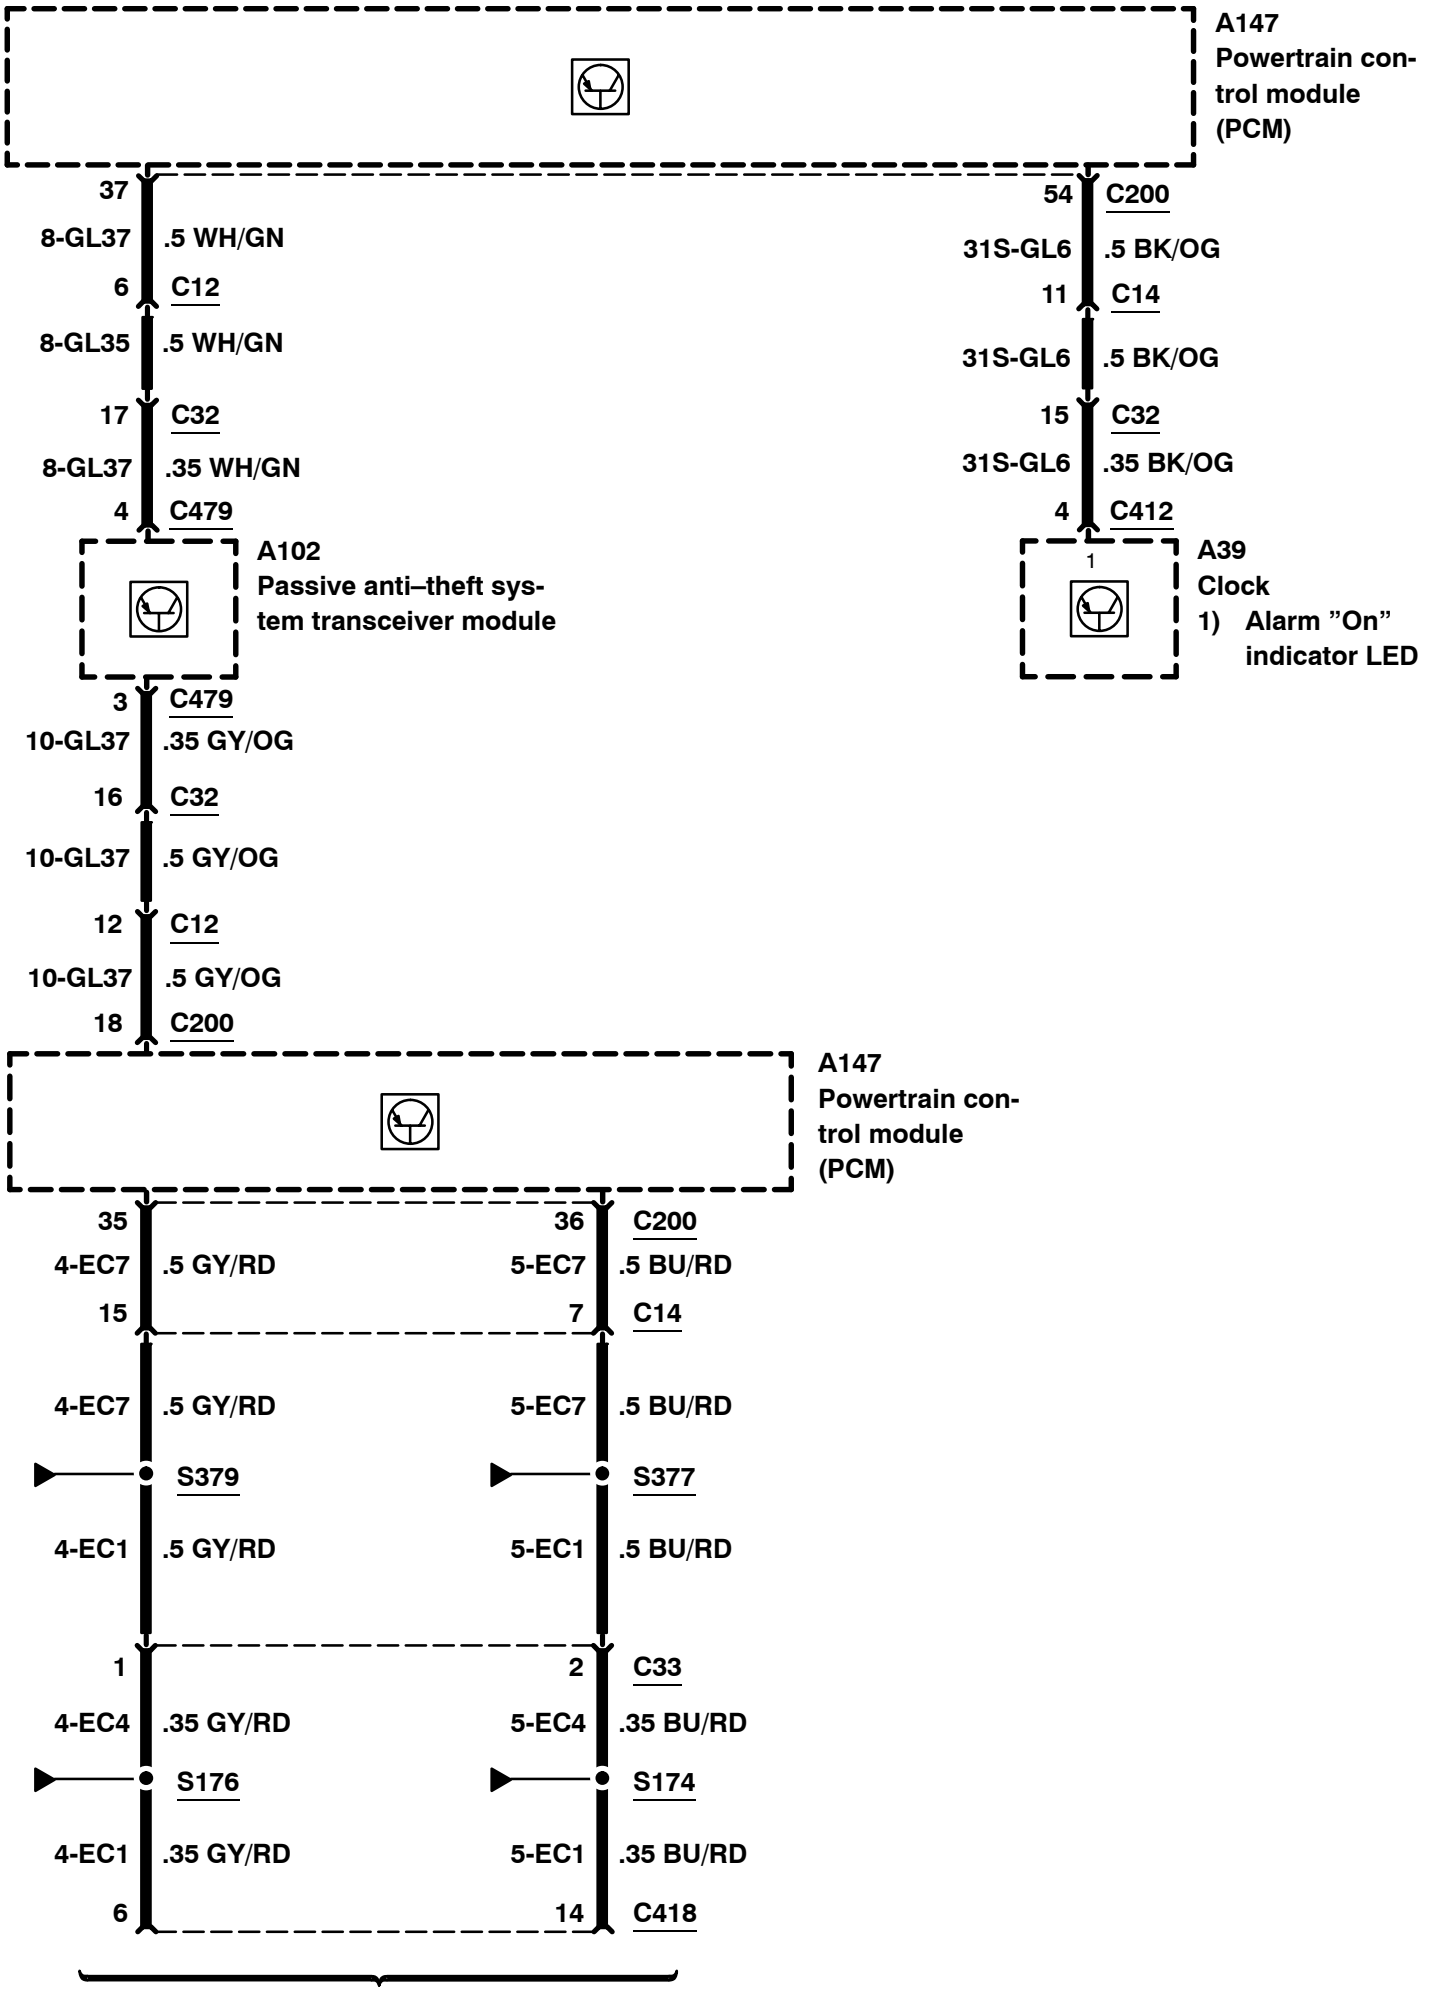


Electronic Engine Controls – 1.8L Duratec–SCi (MI4)

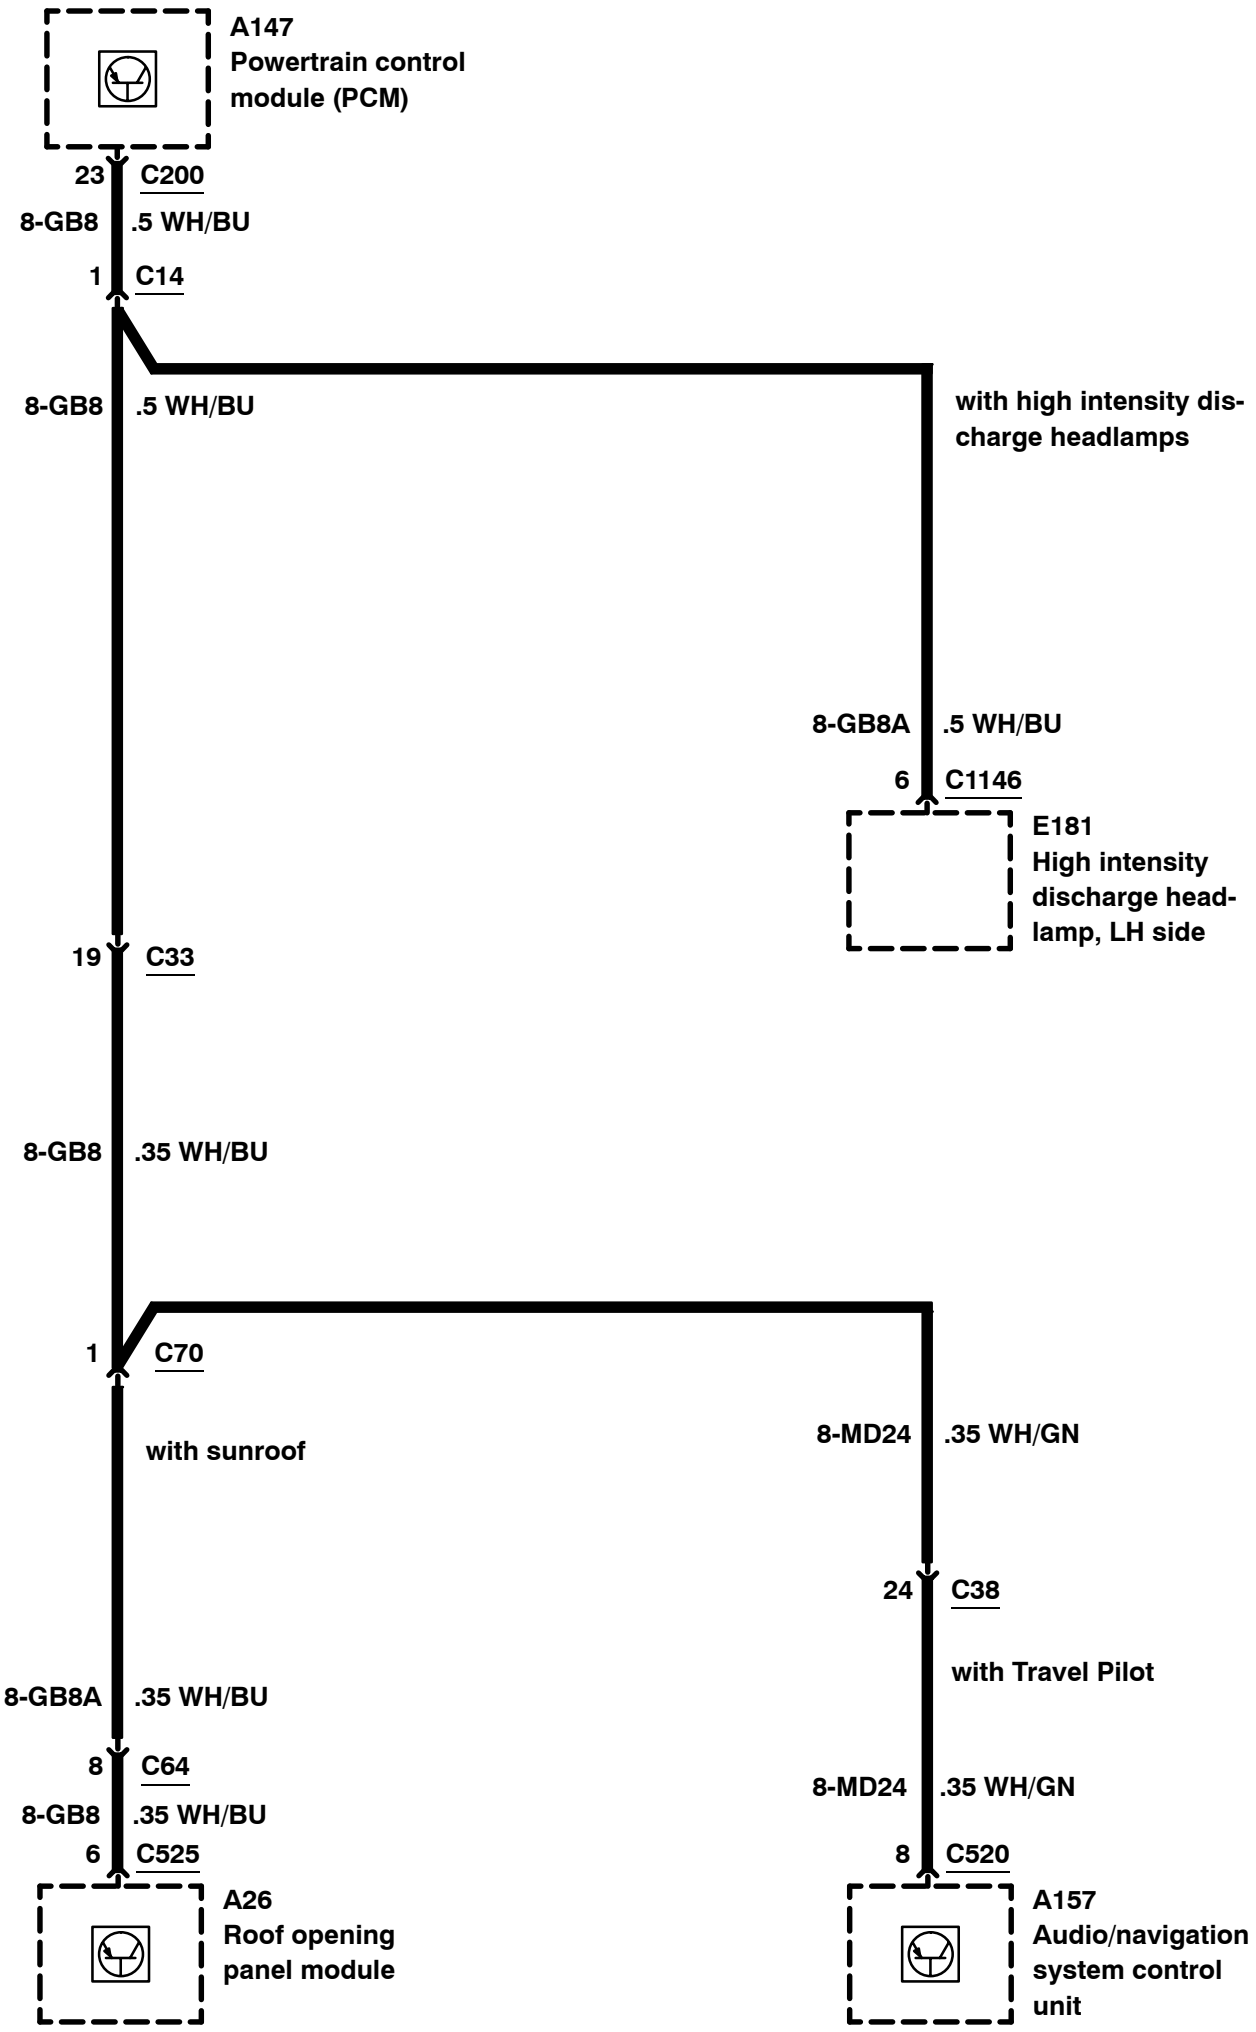


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

Block diagram

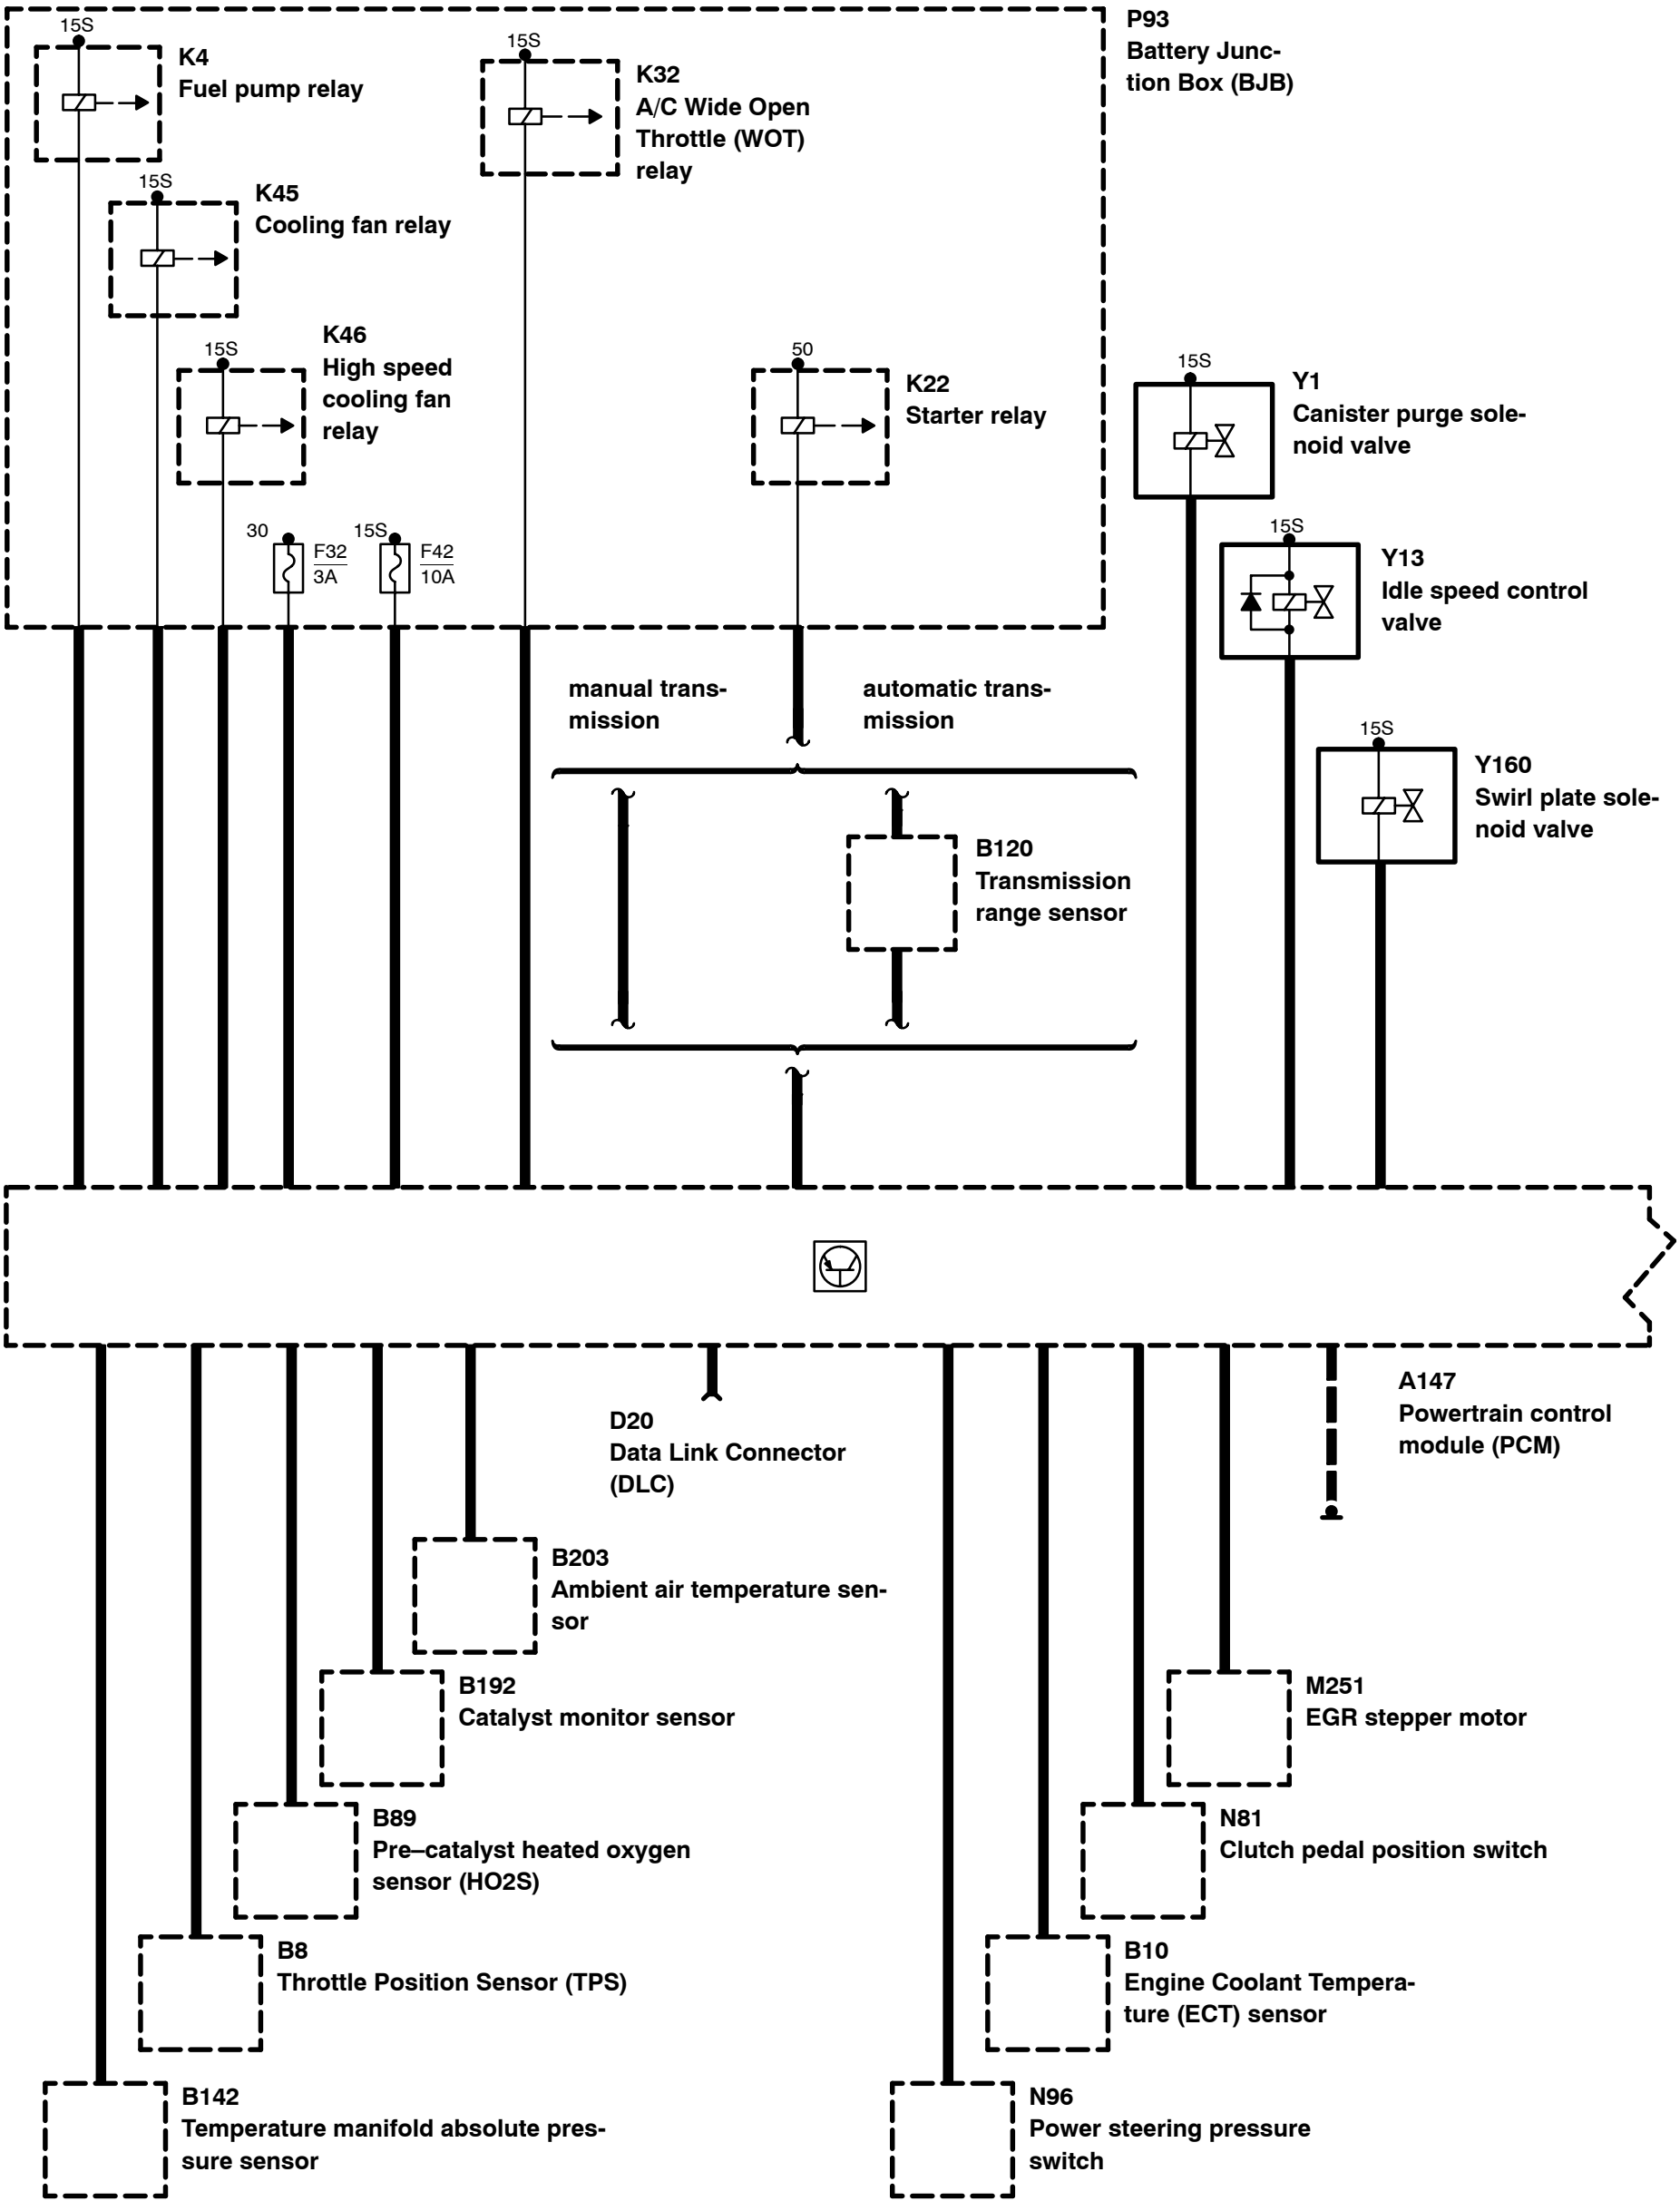


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)


Block diagram

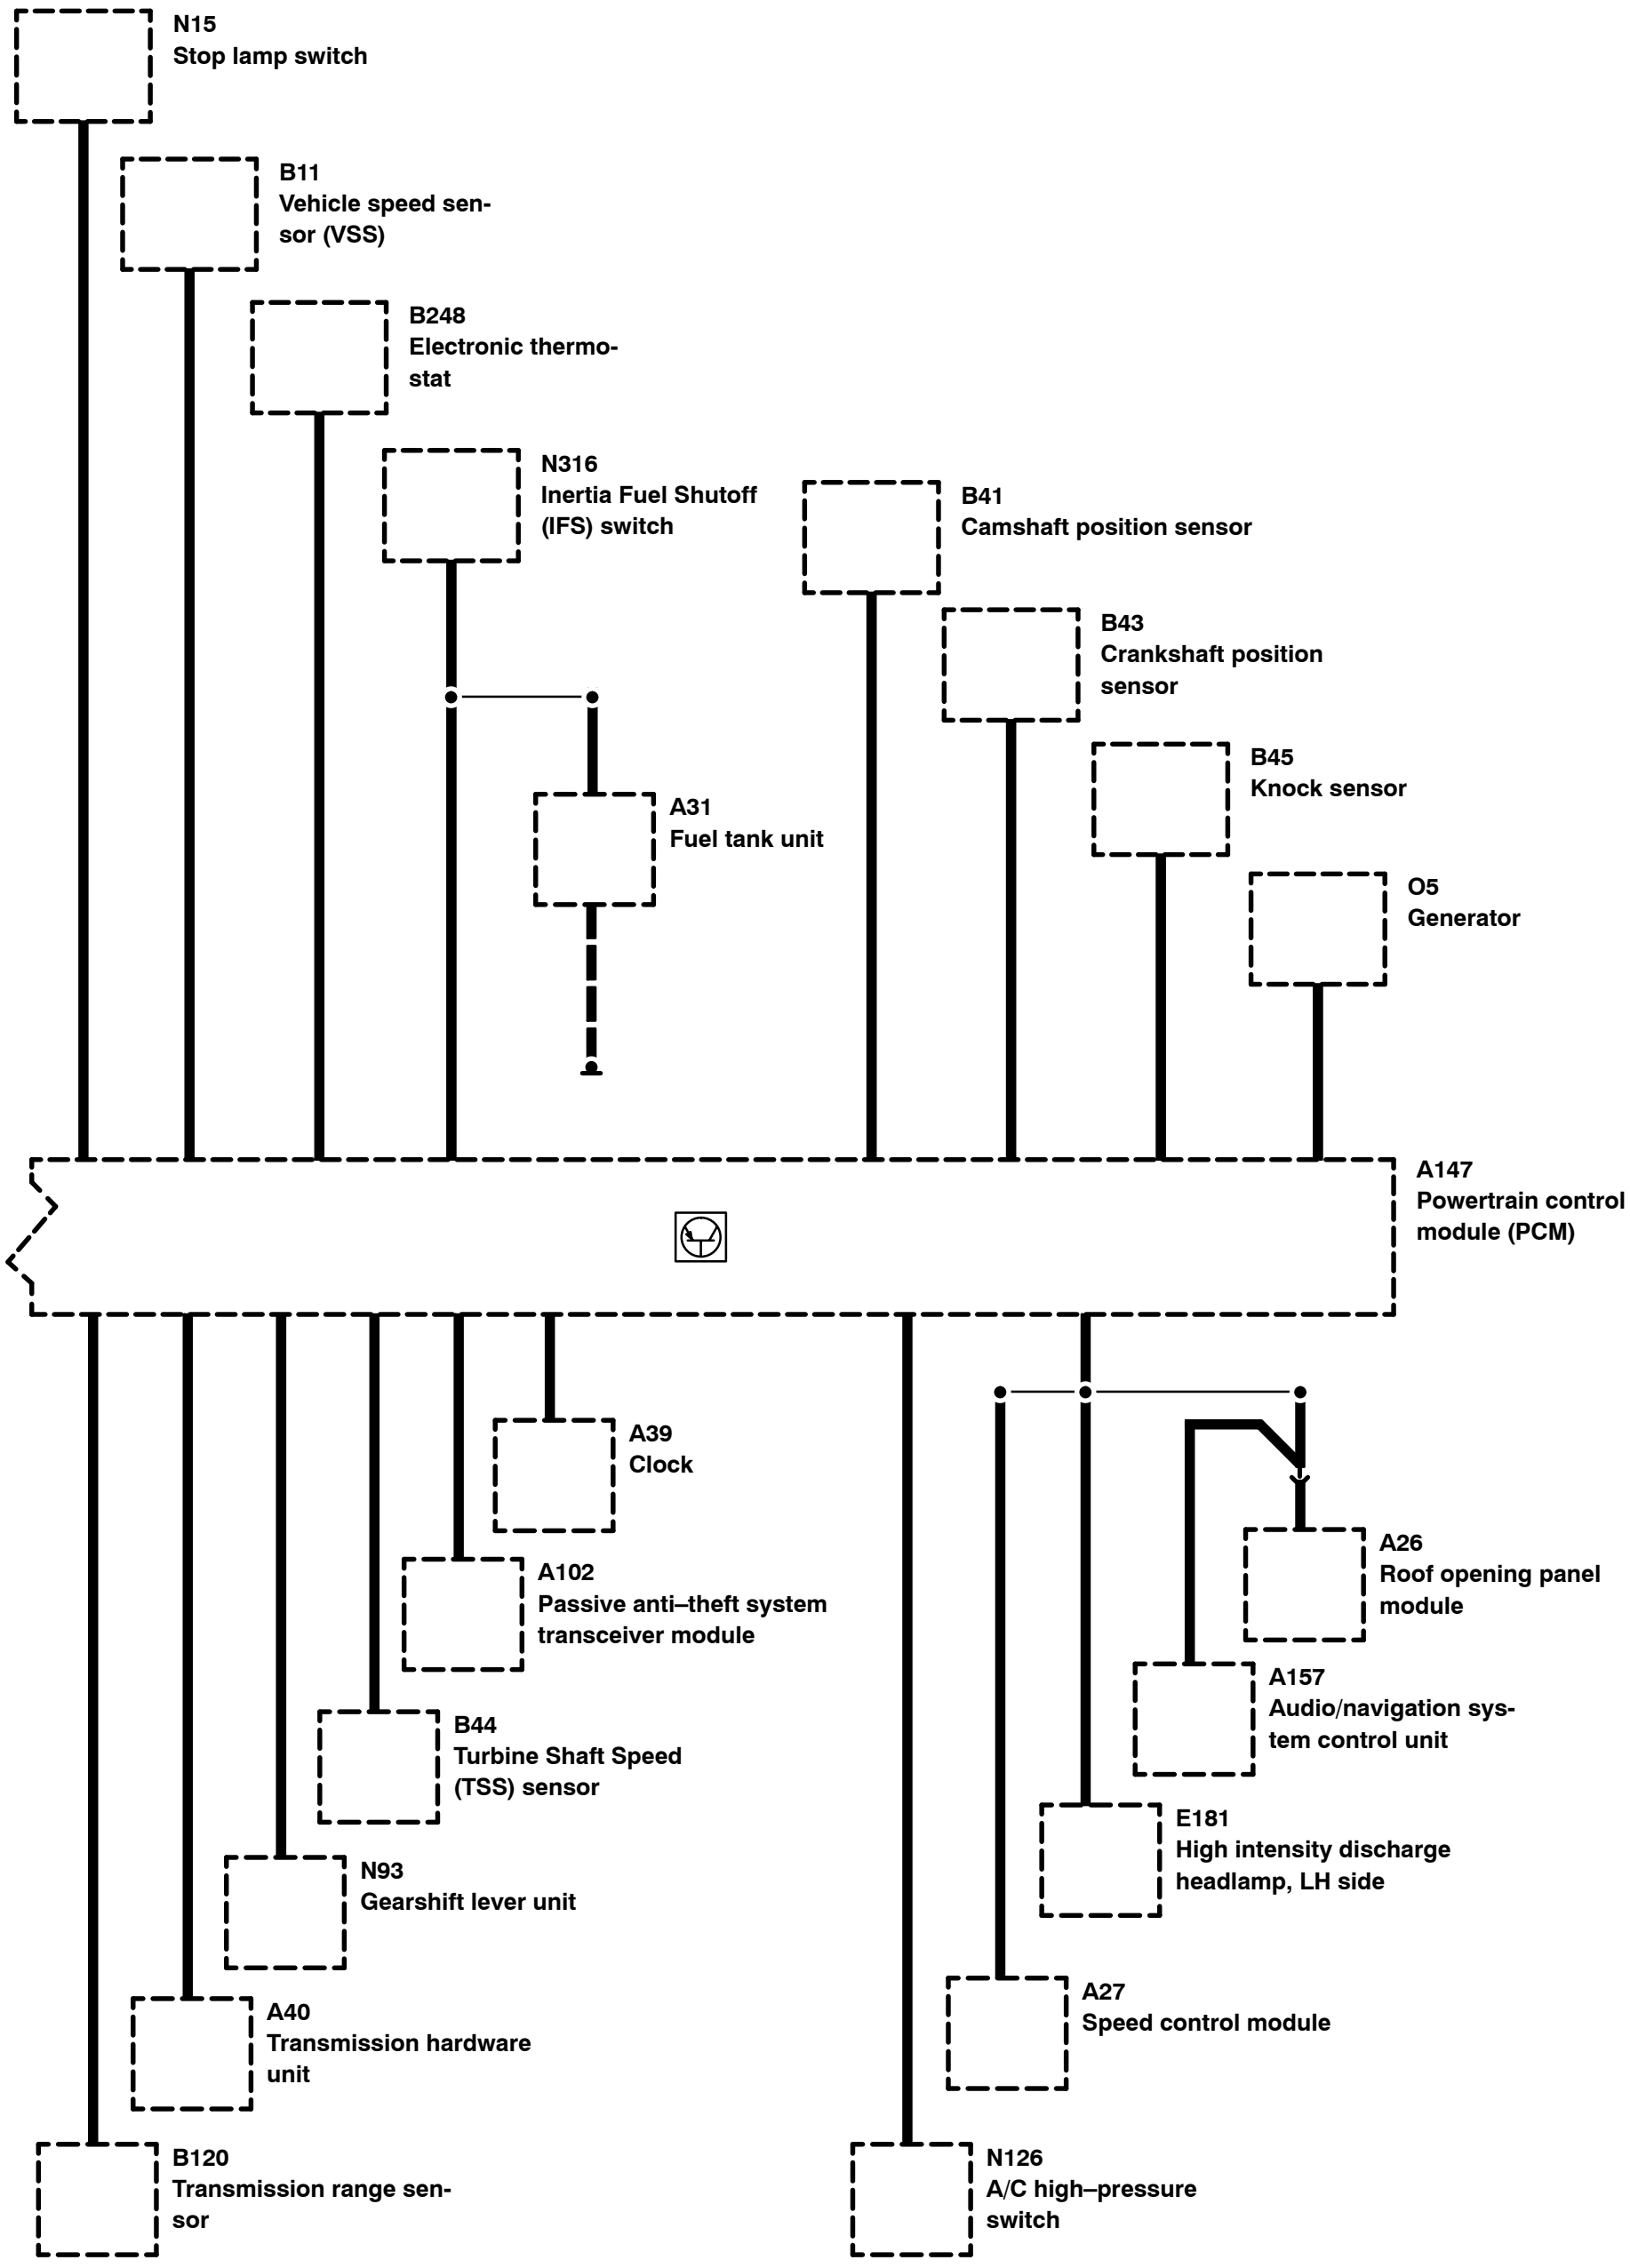


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

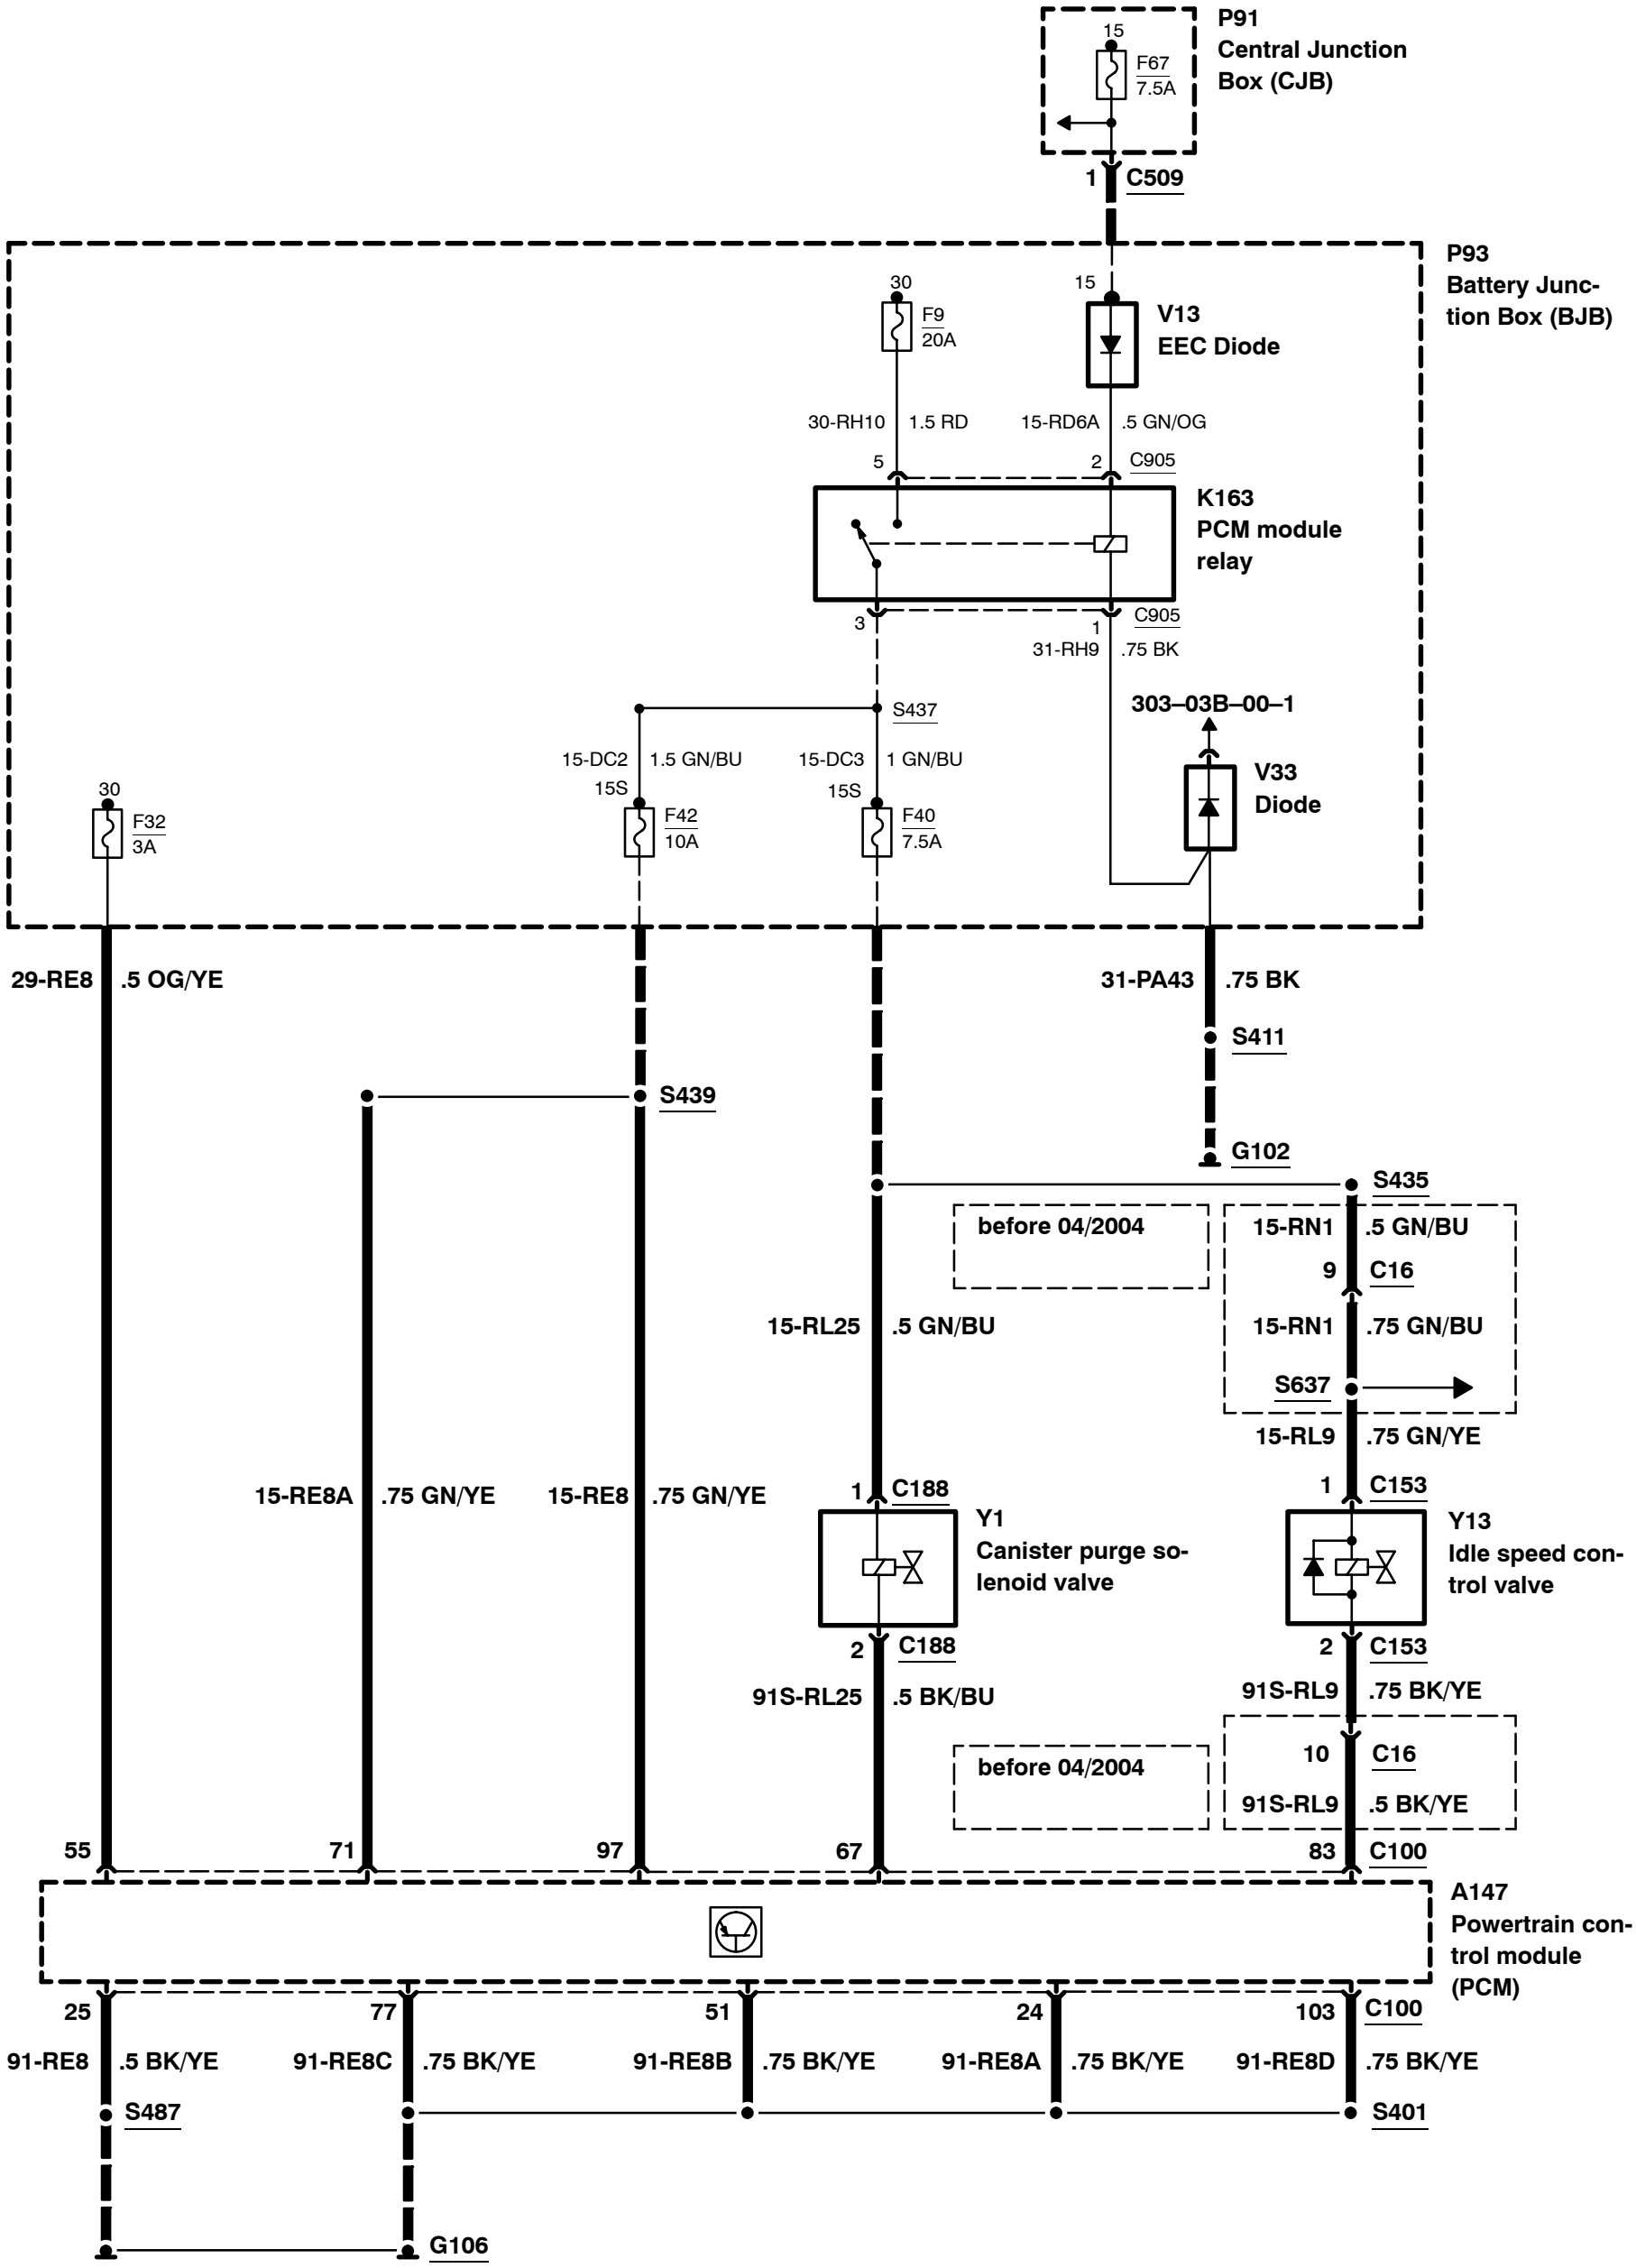


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

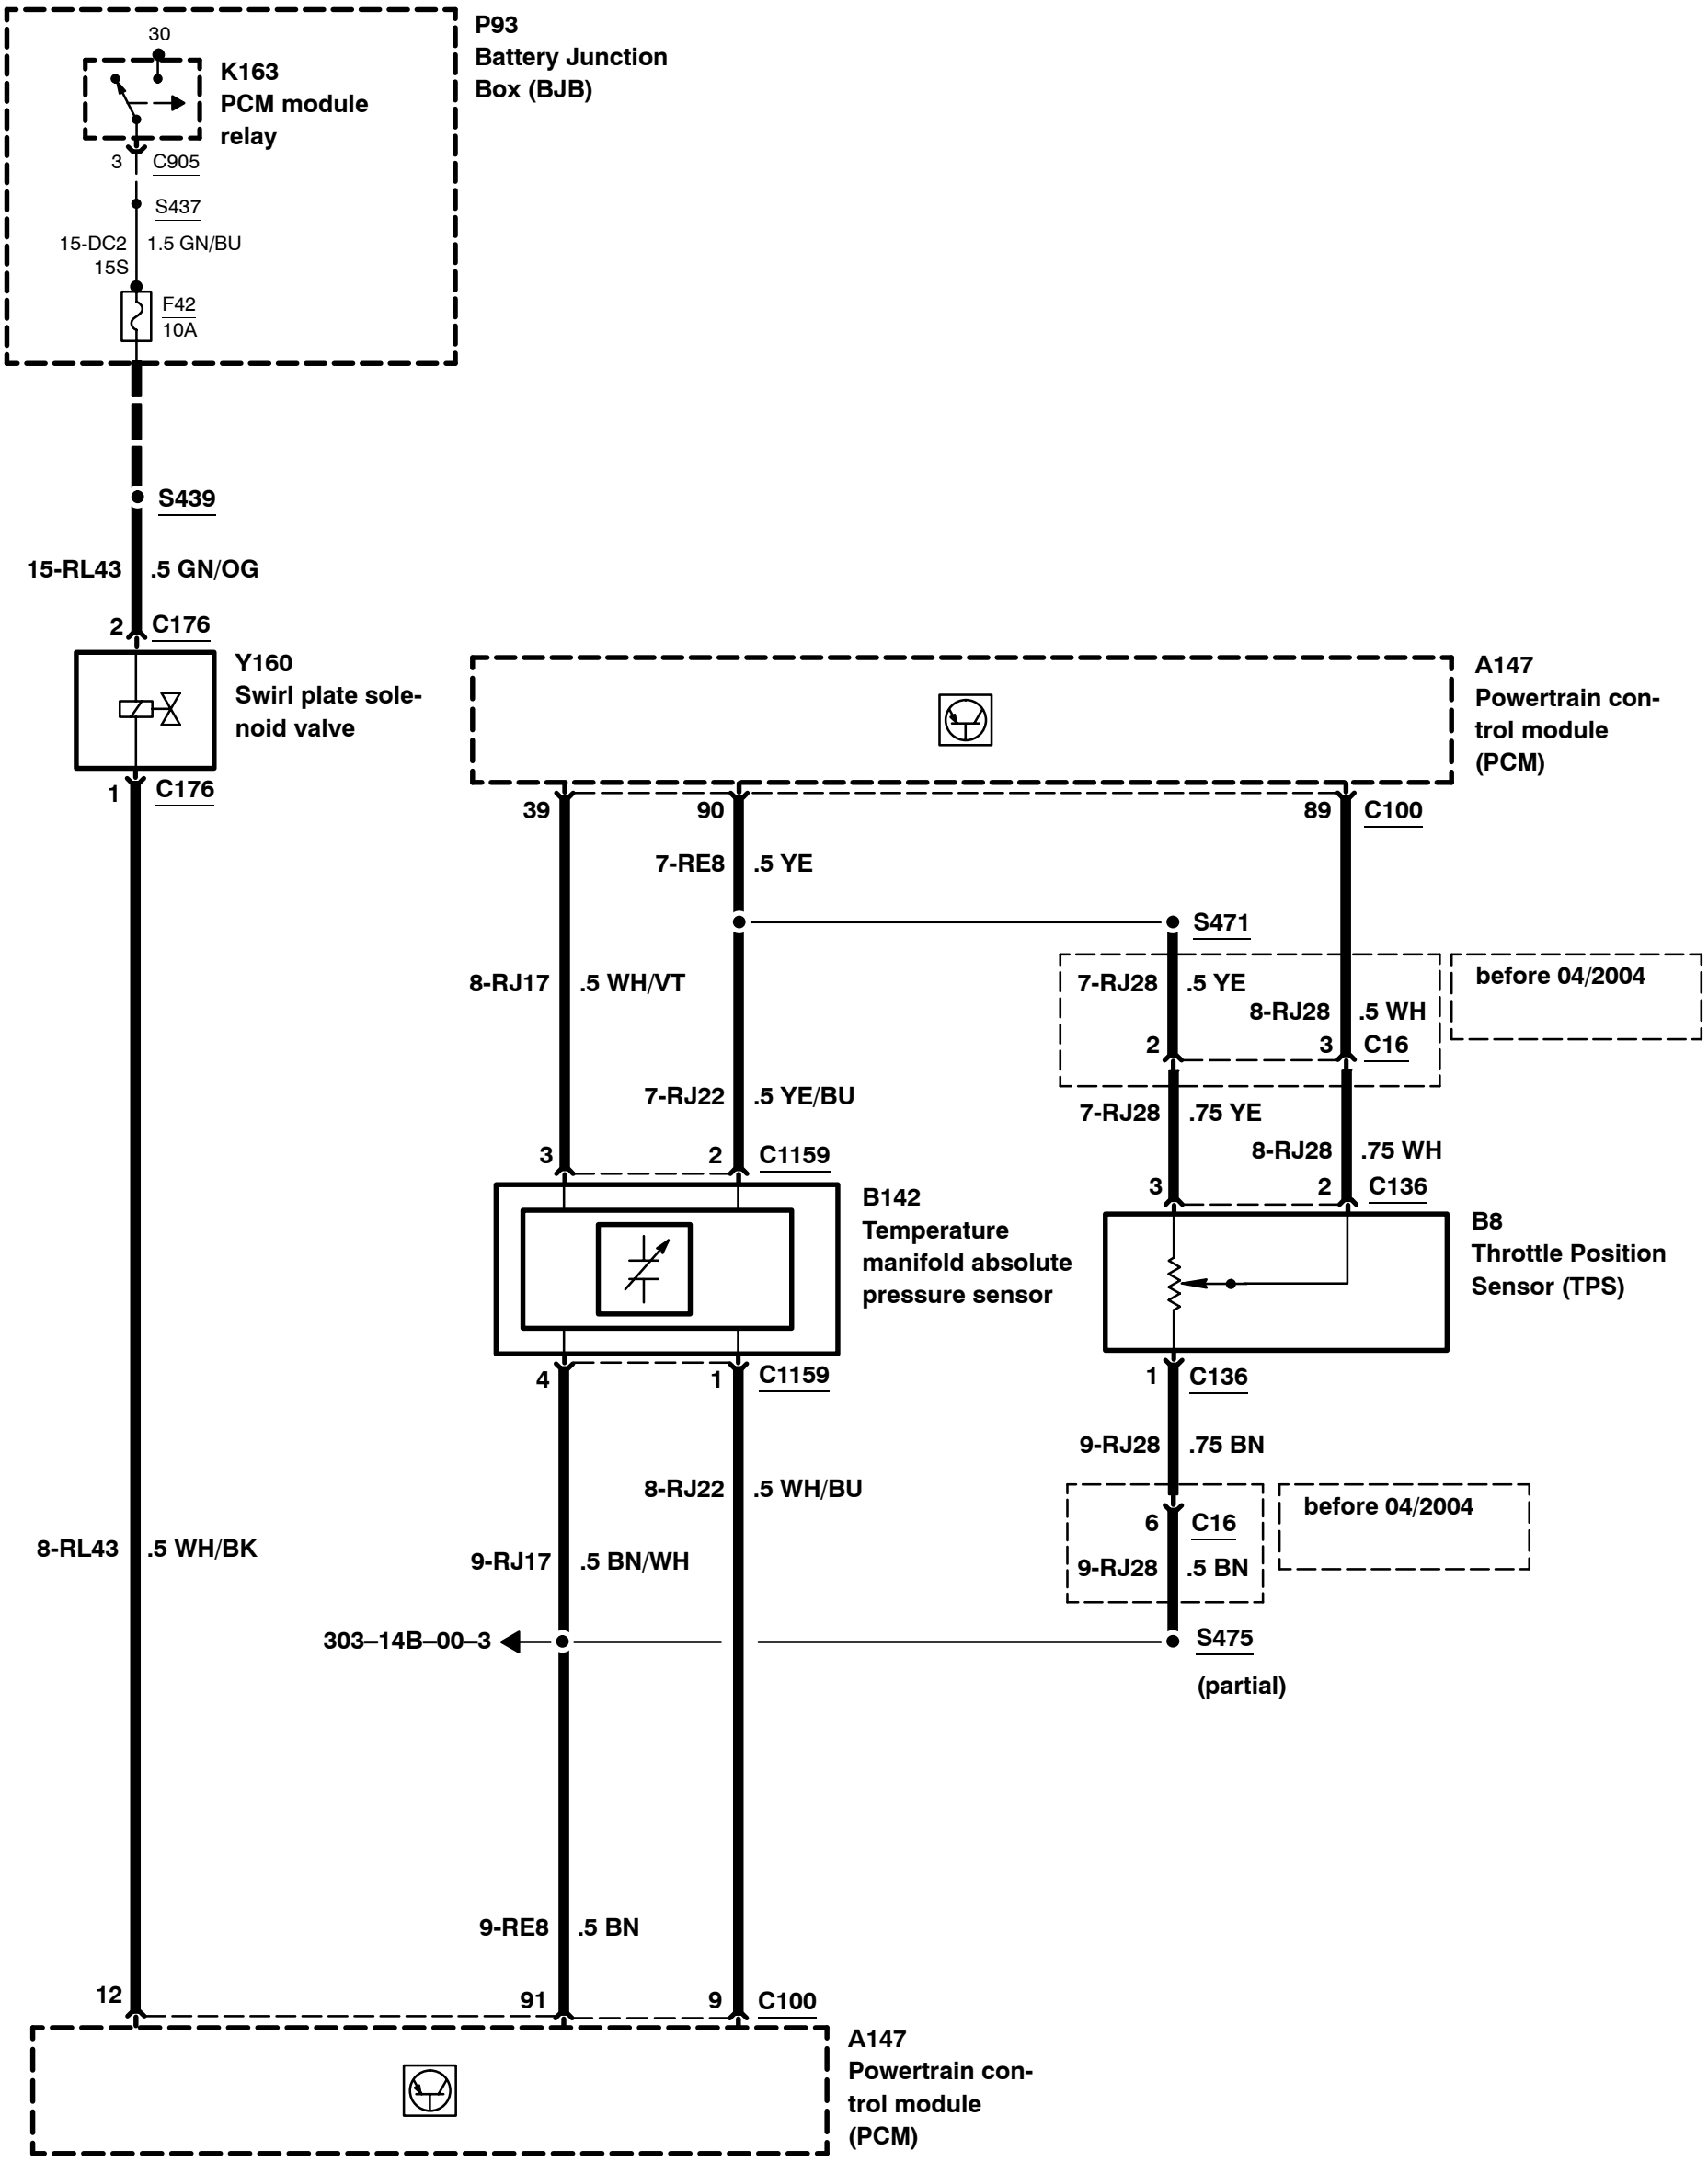


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

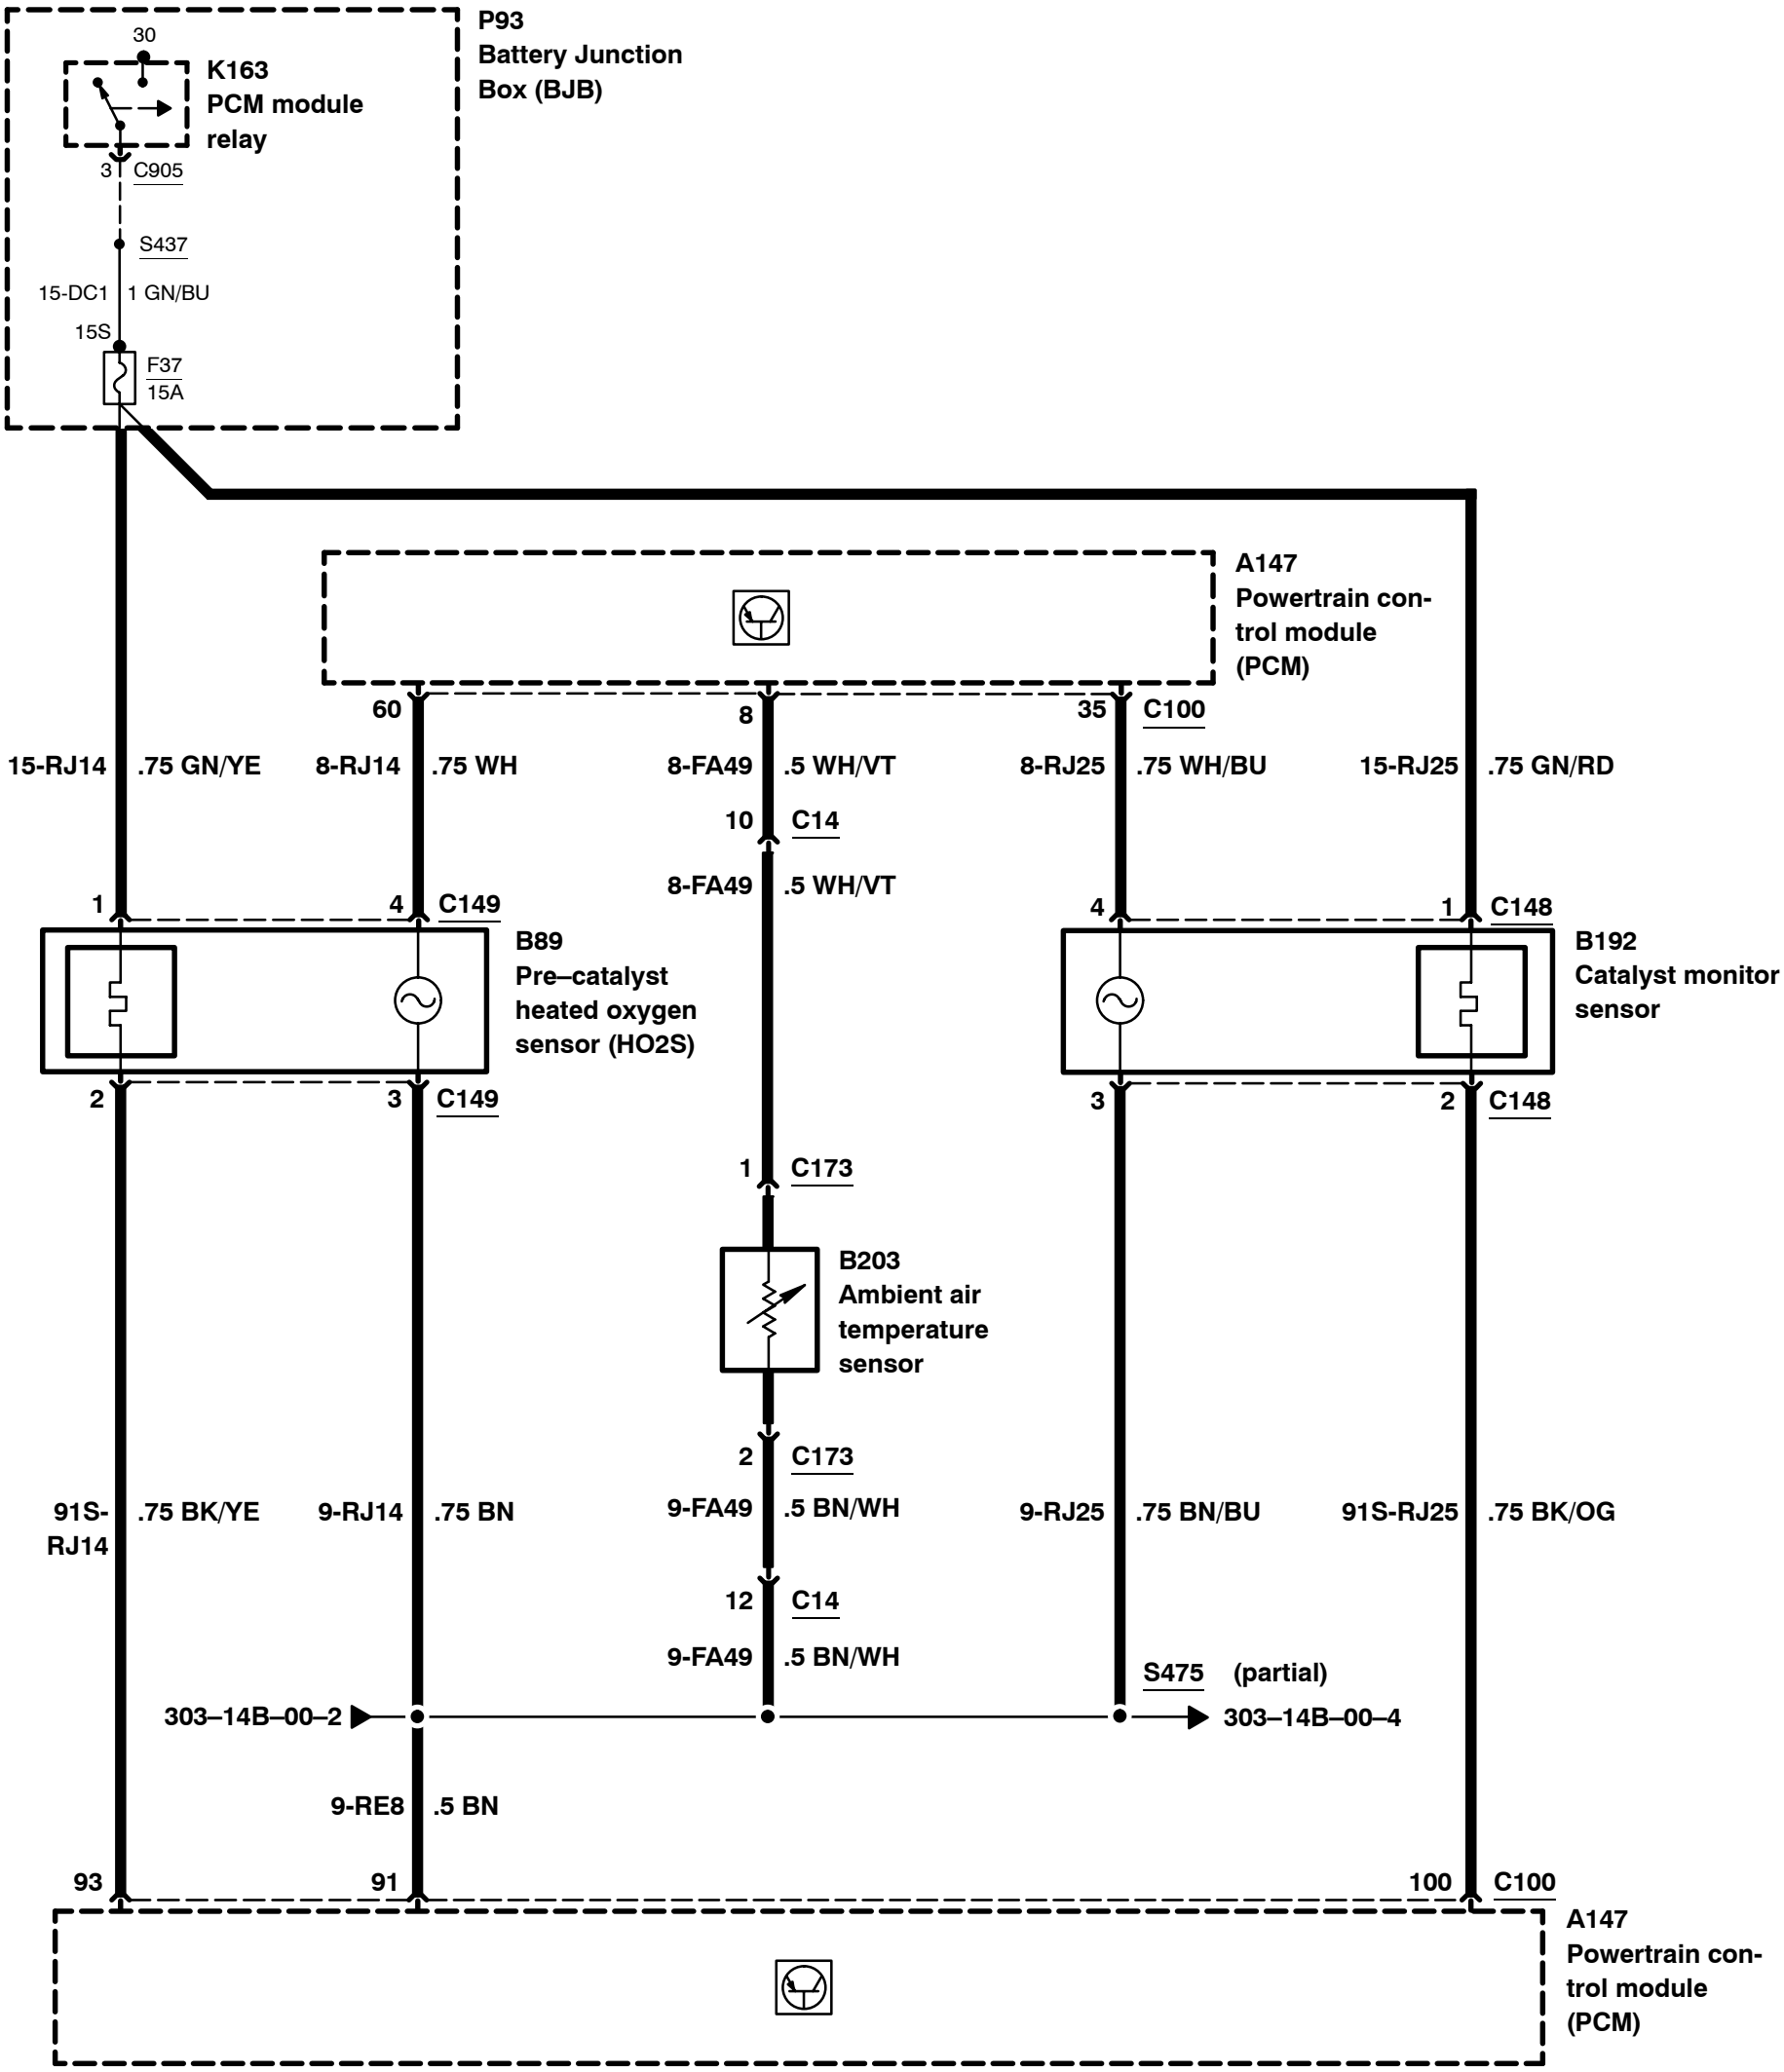


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

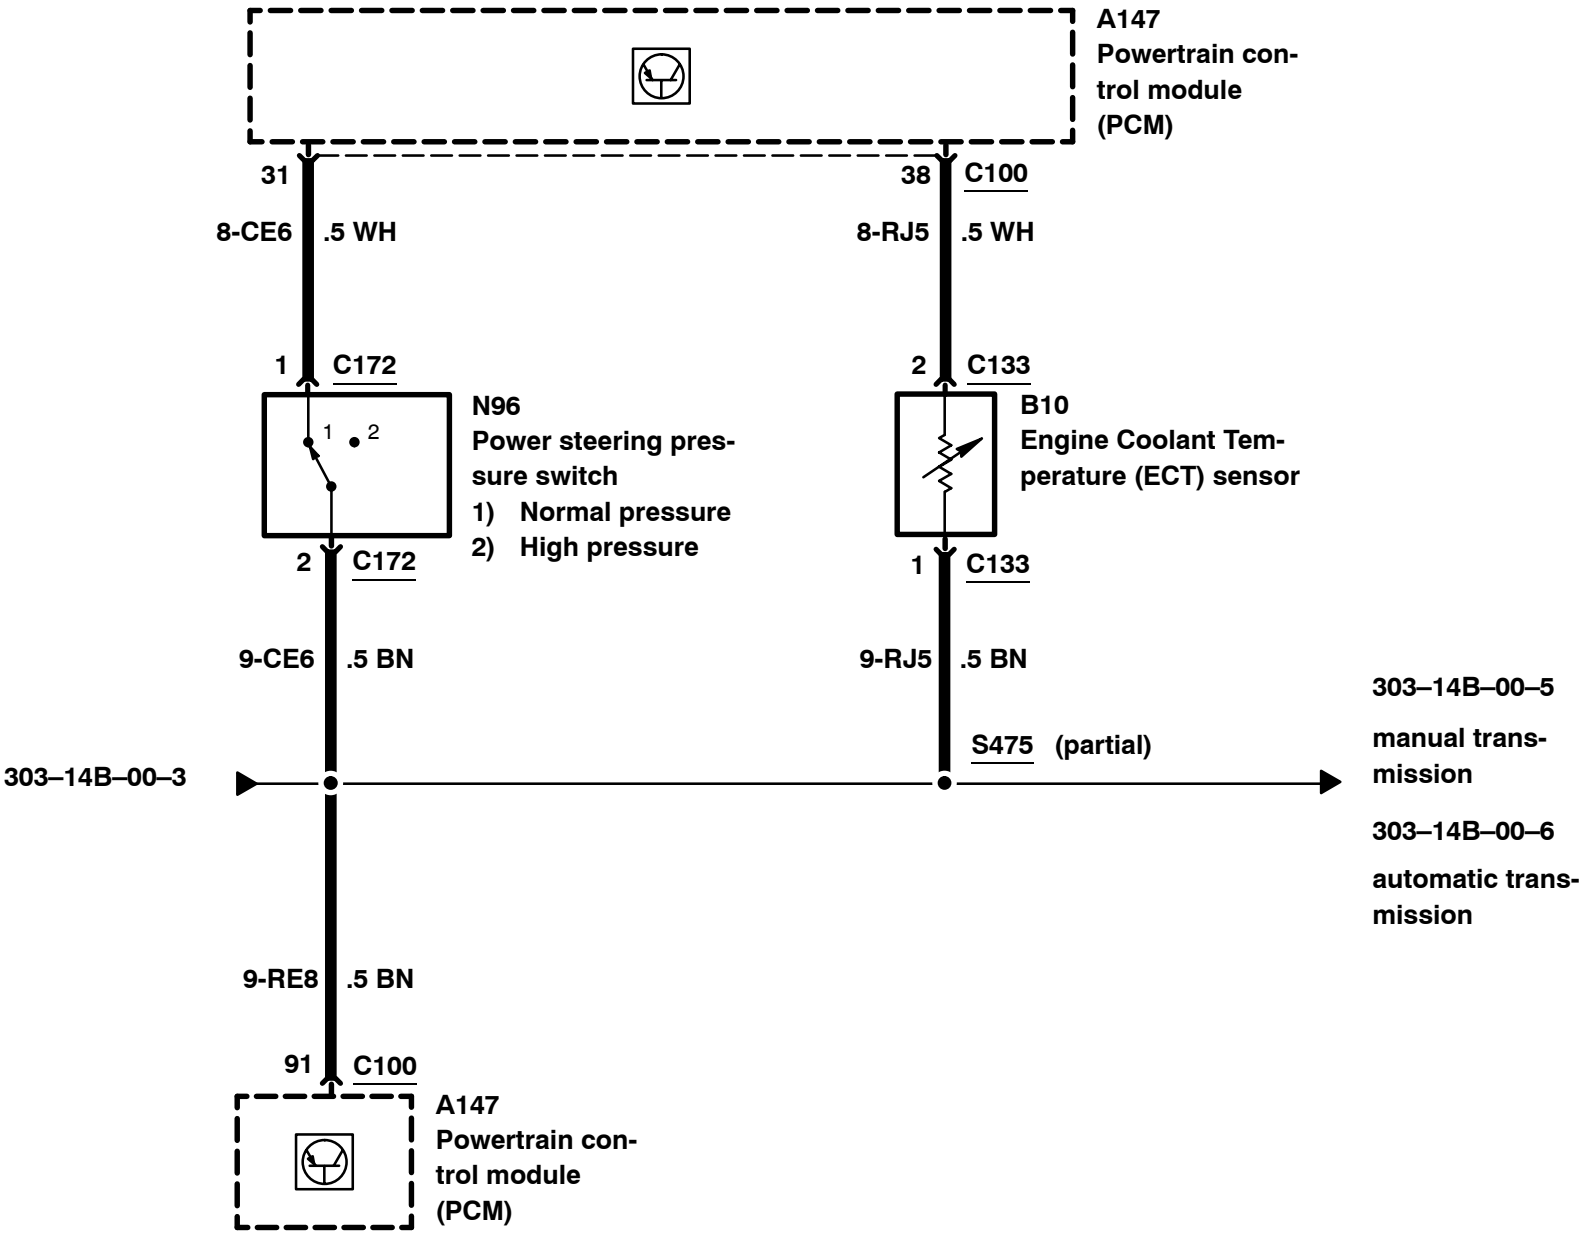


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4), manual transmission

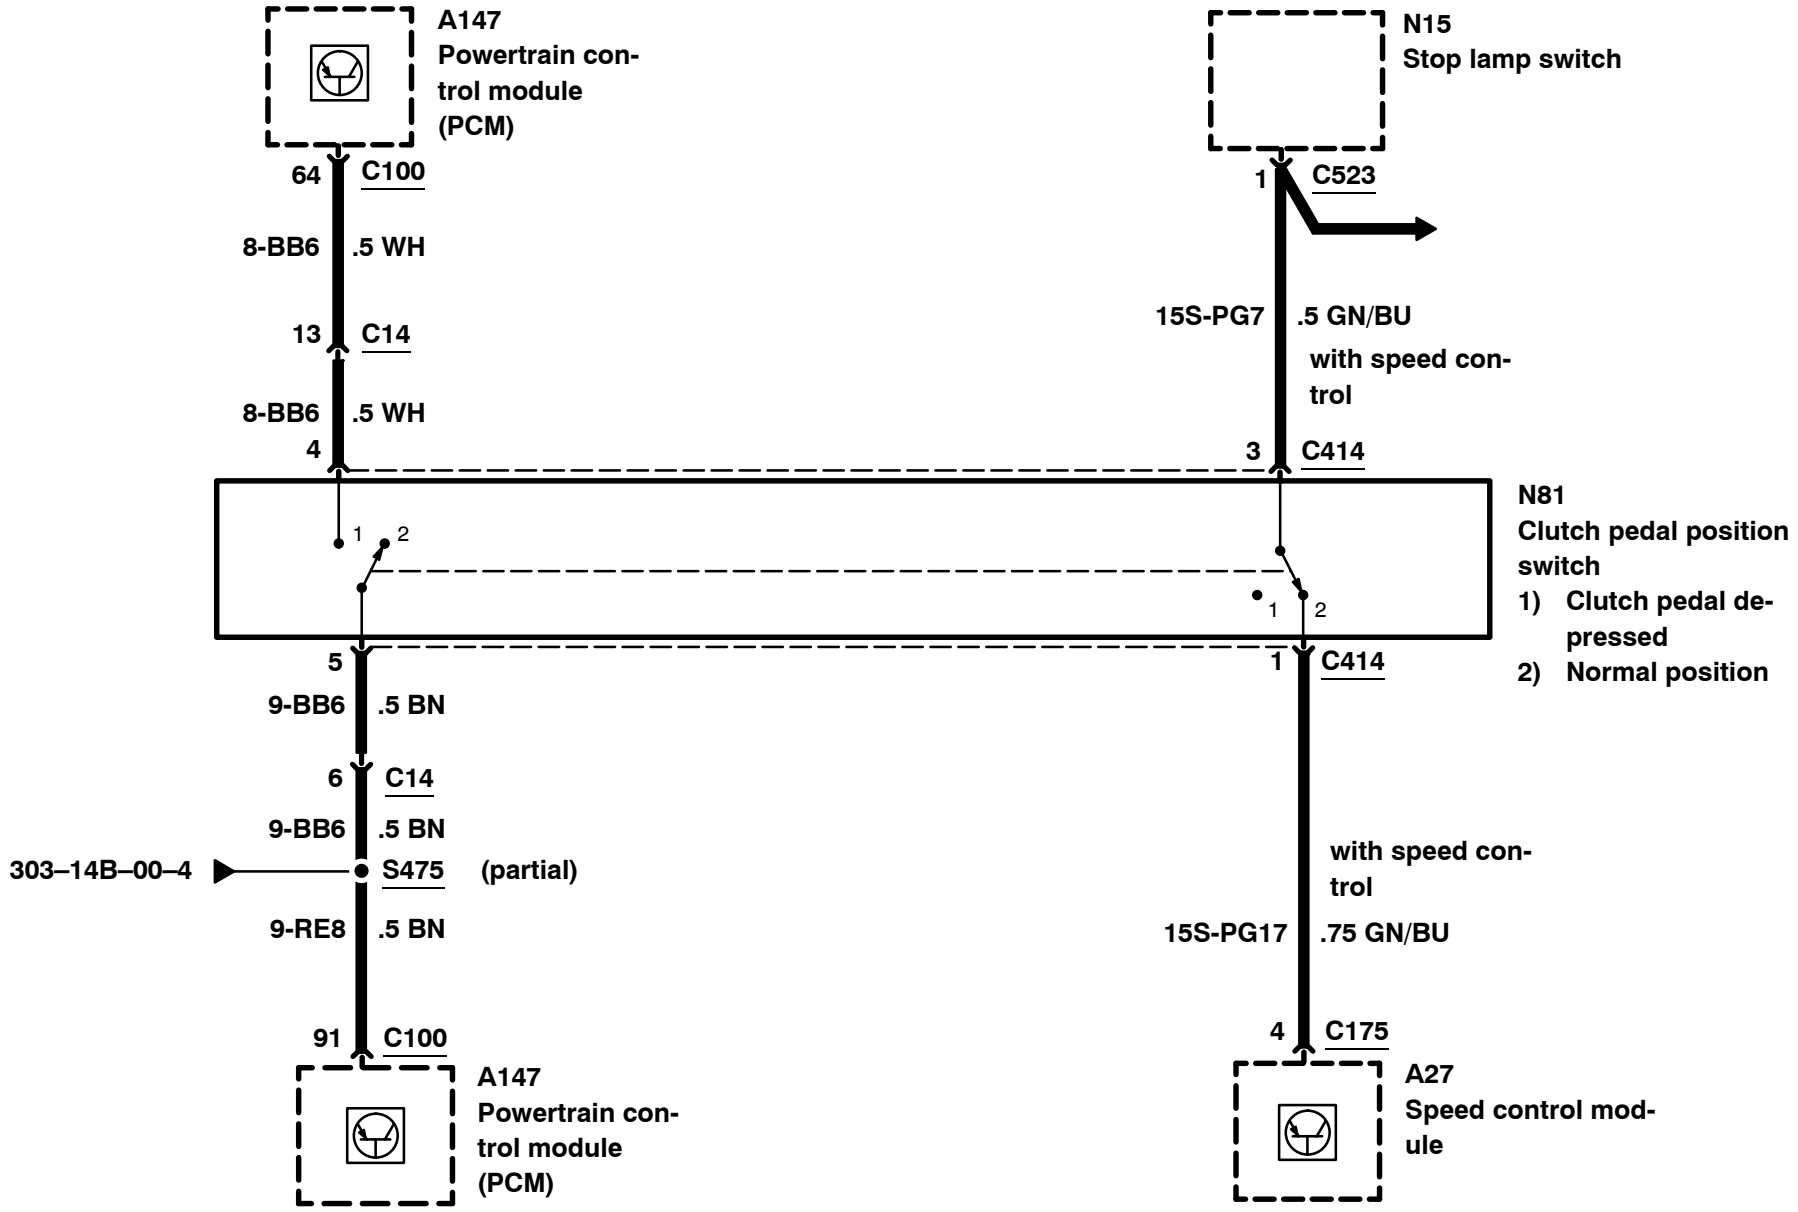


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4), automatic transmission

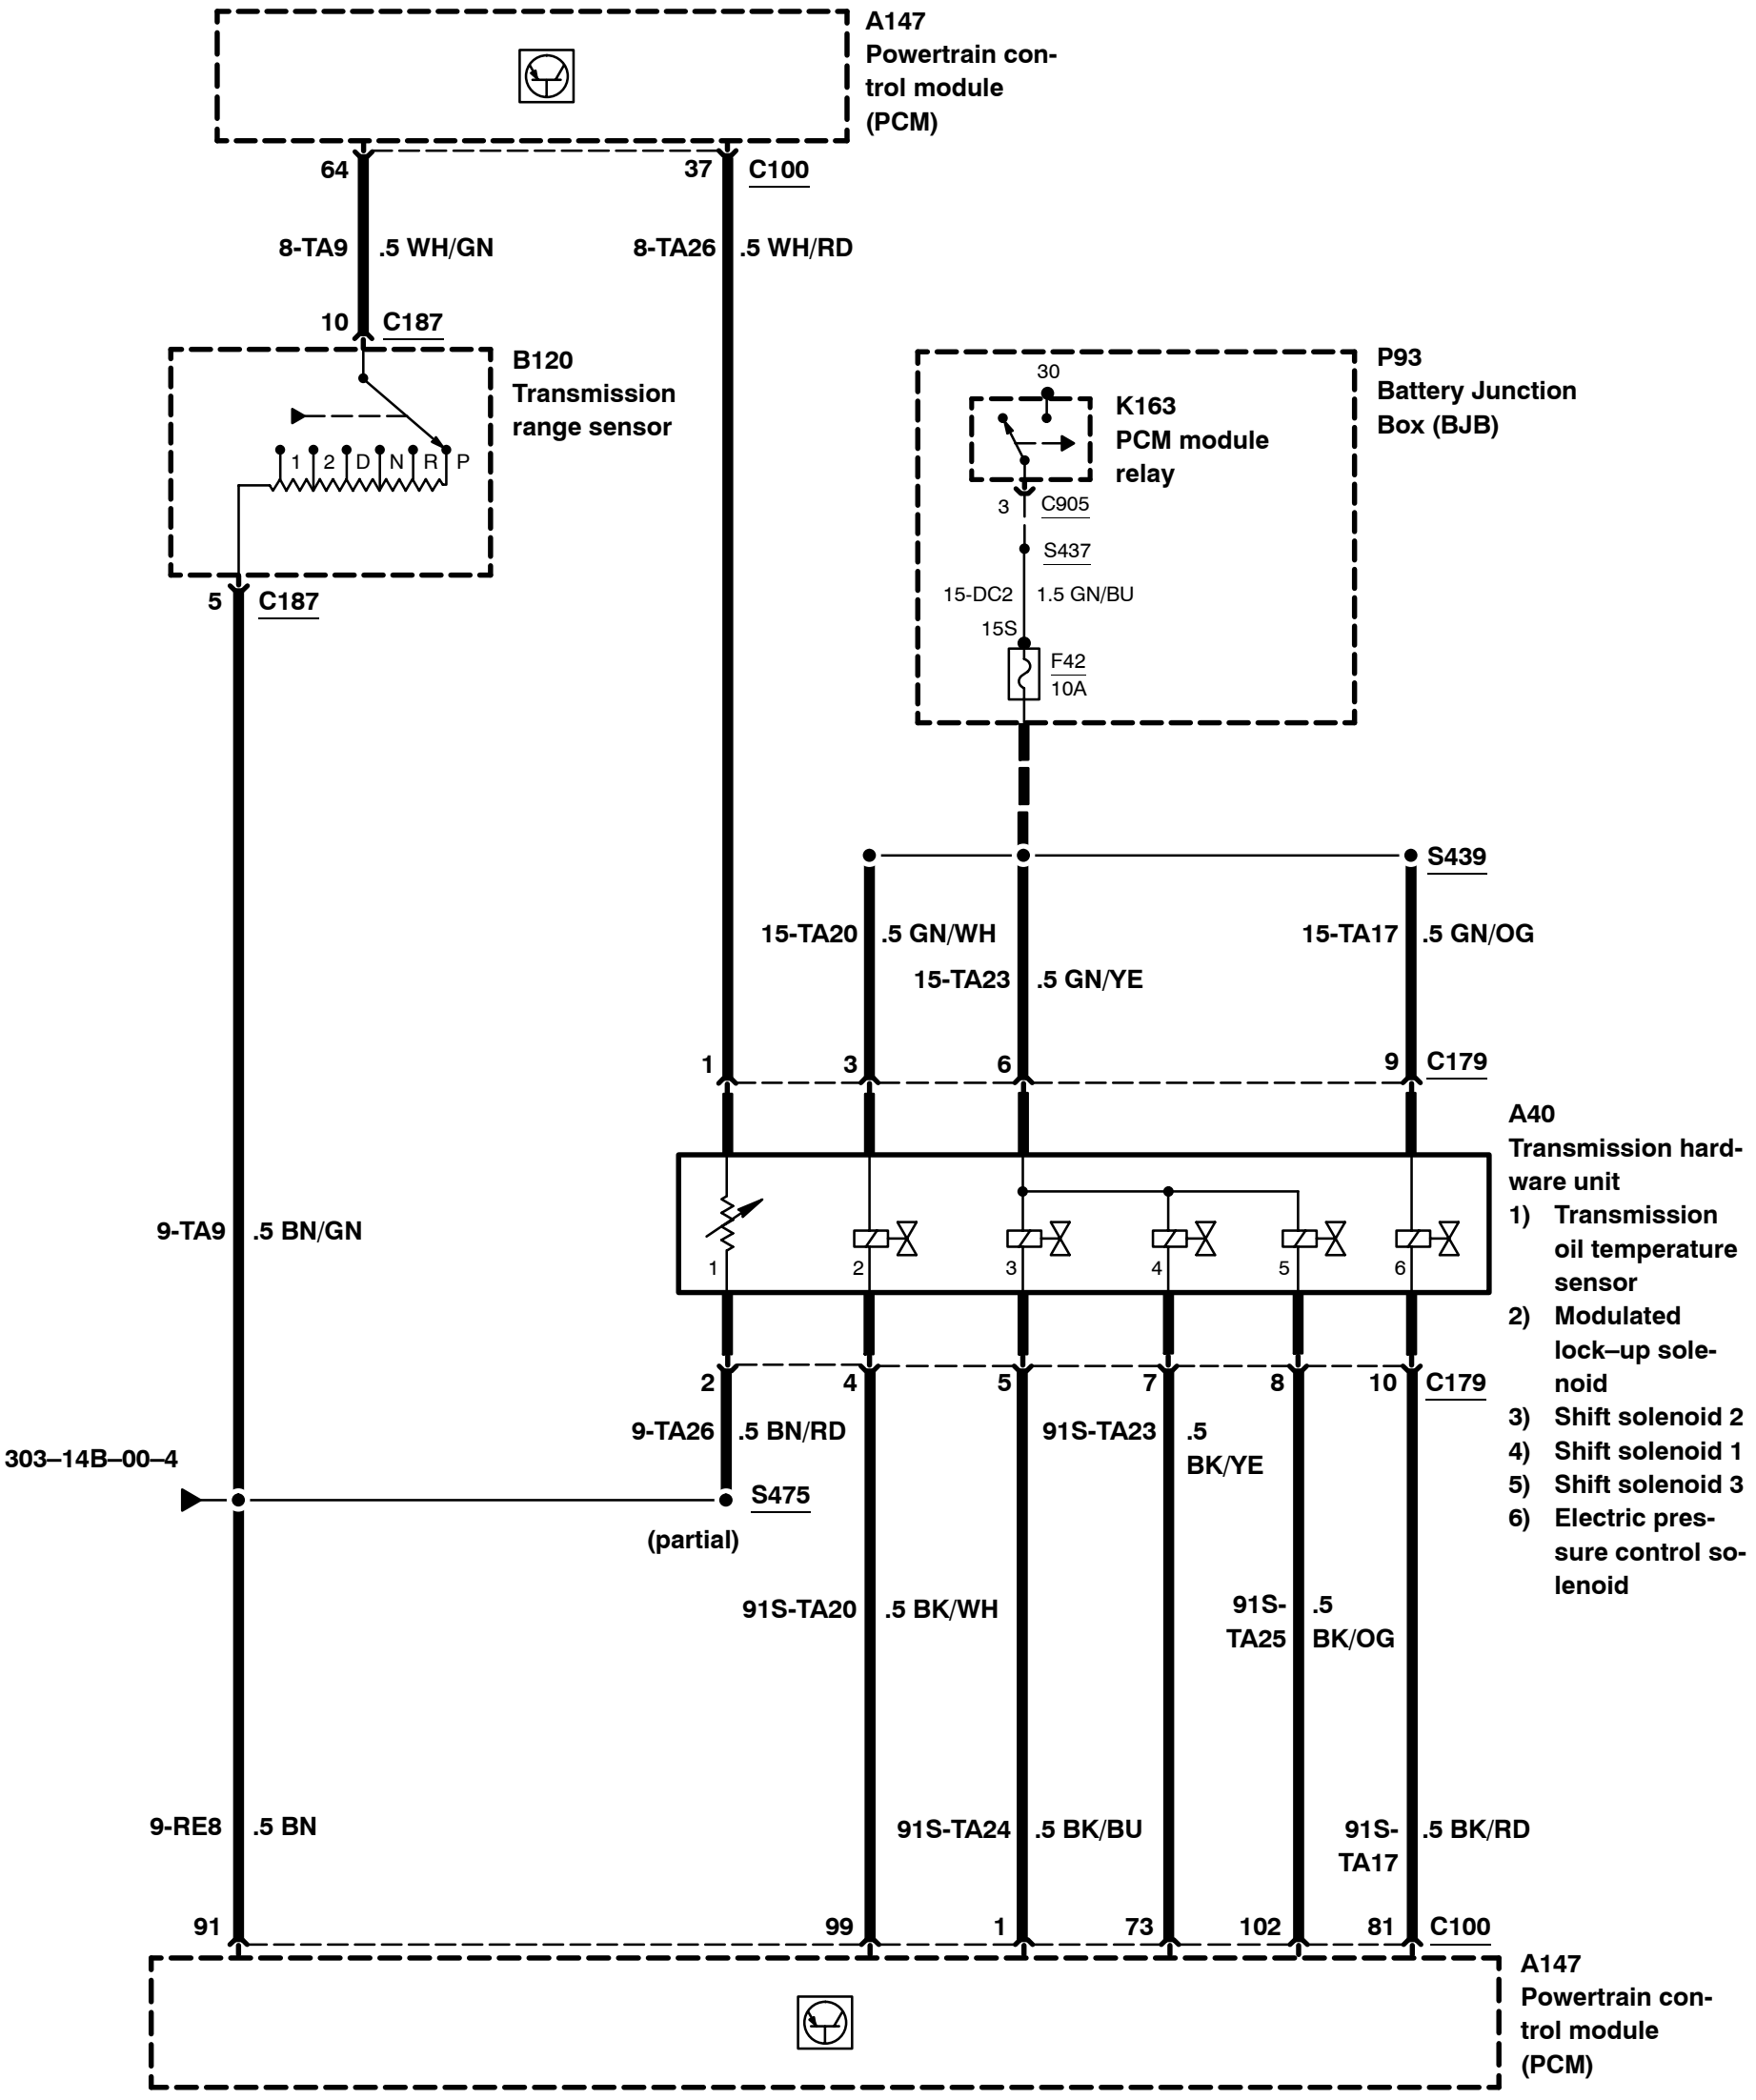


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

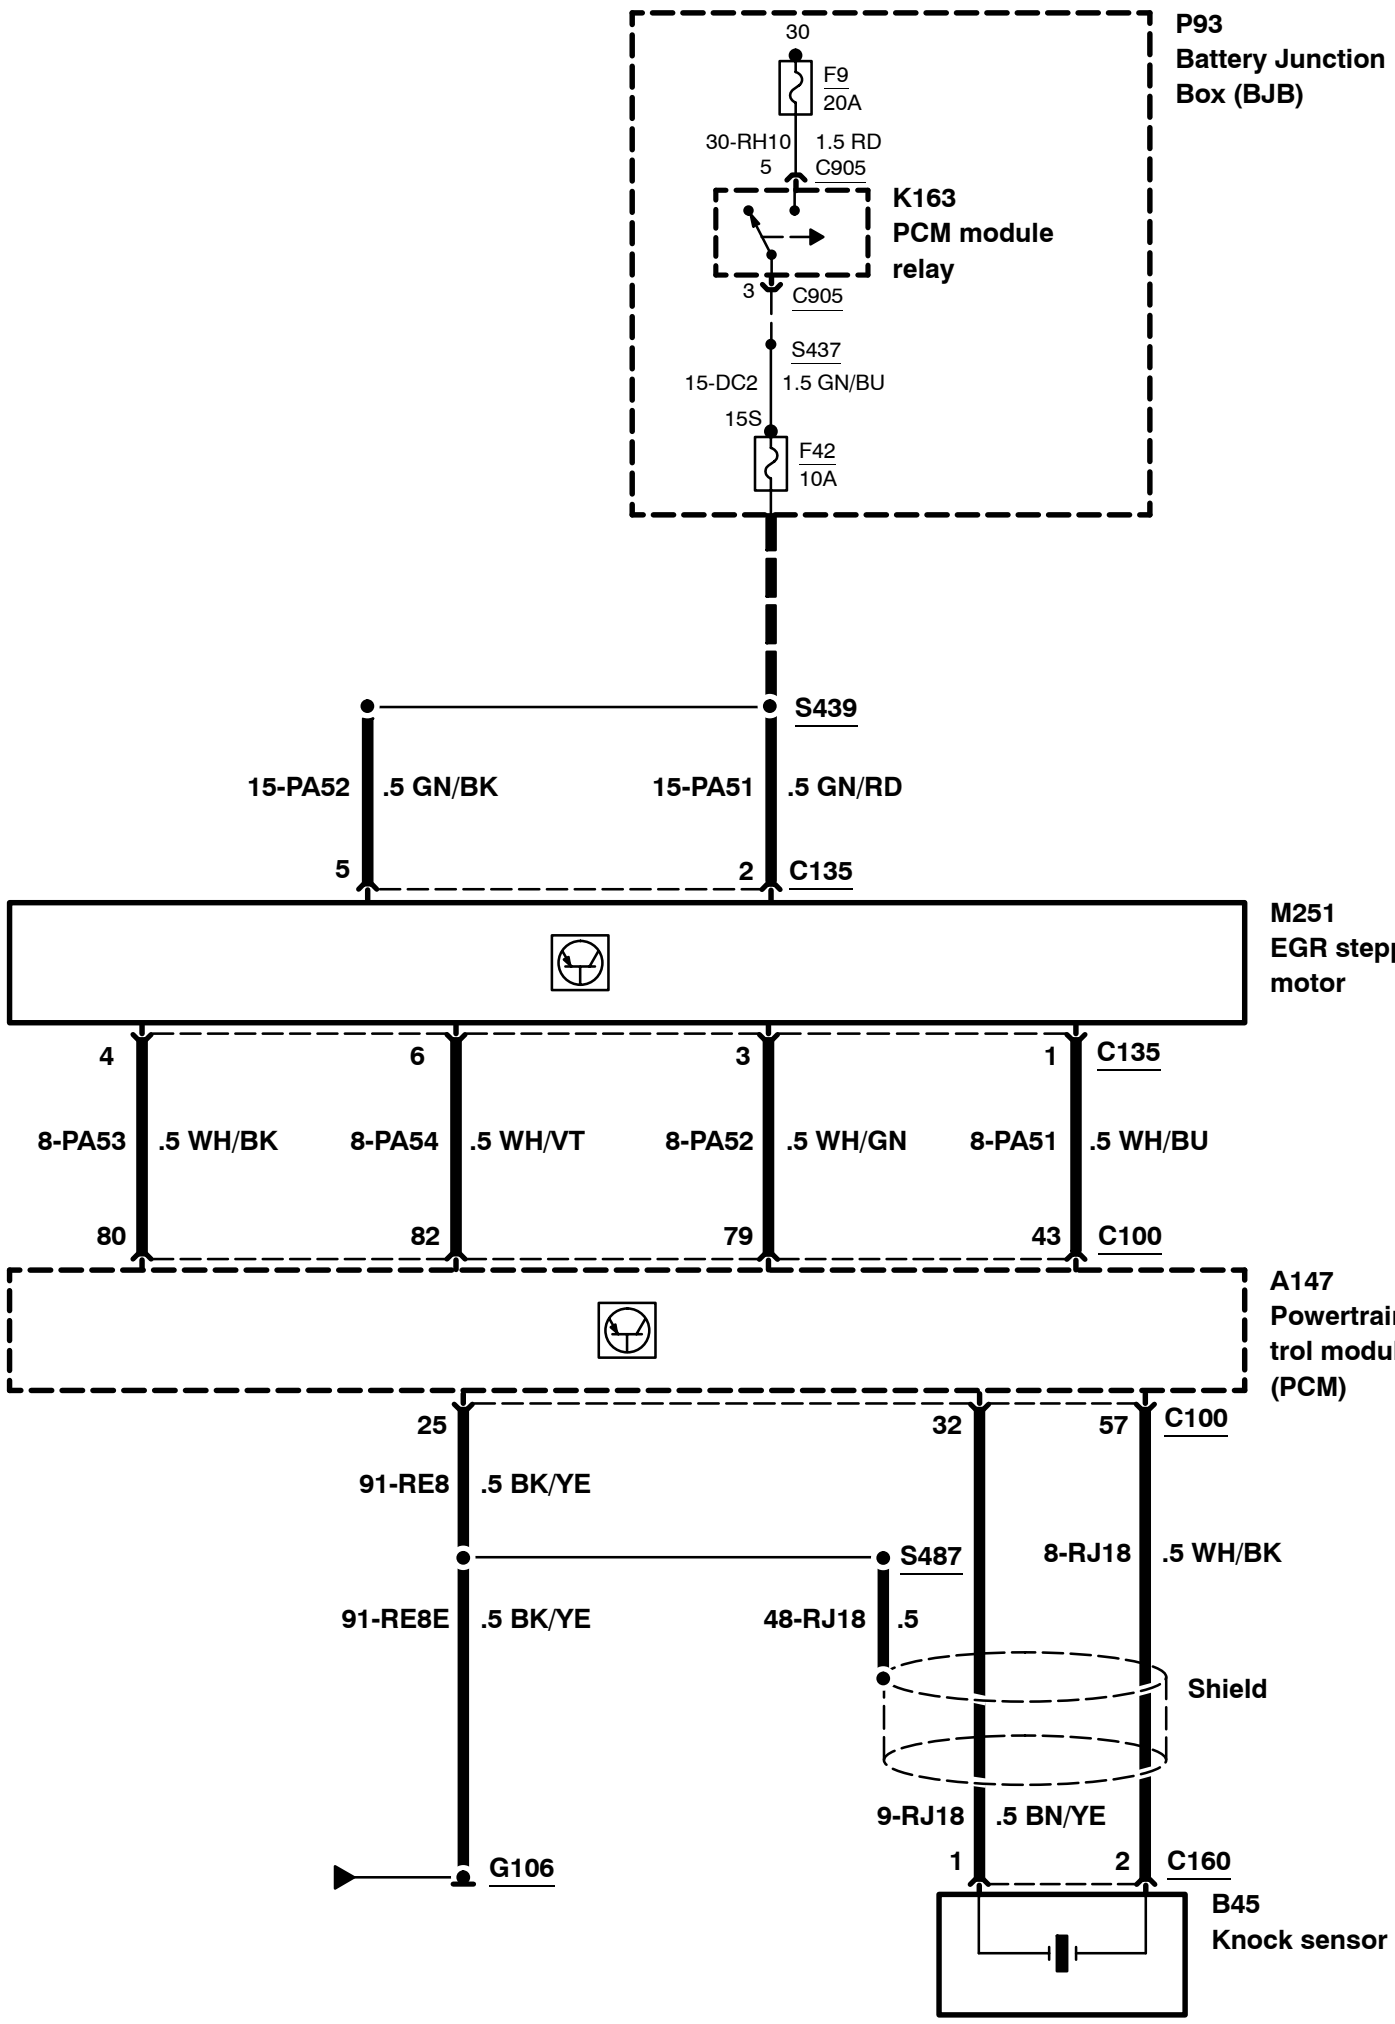


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4), manual transmission

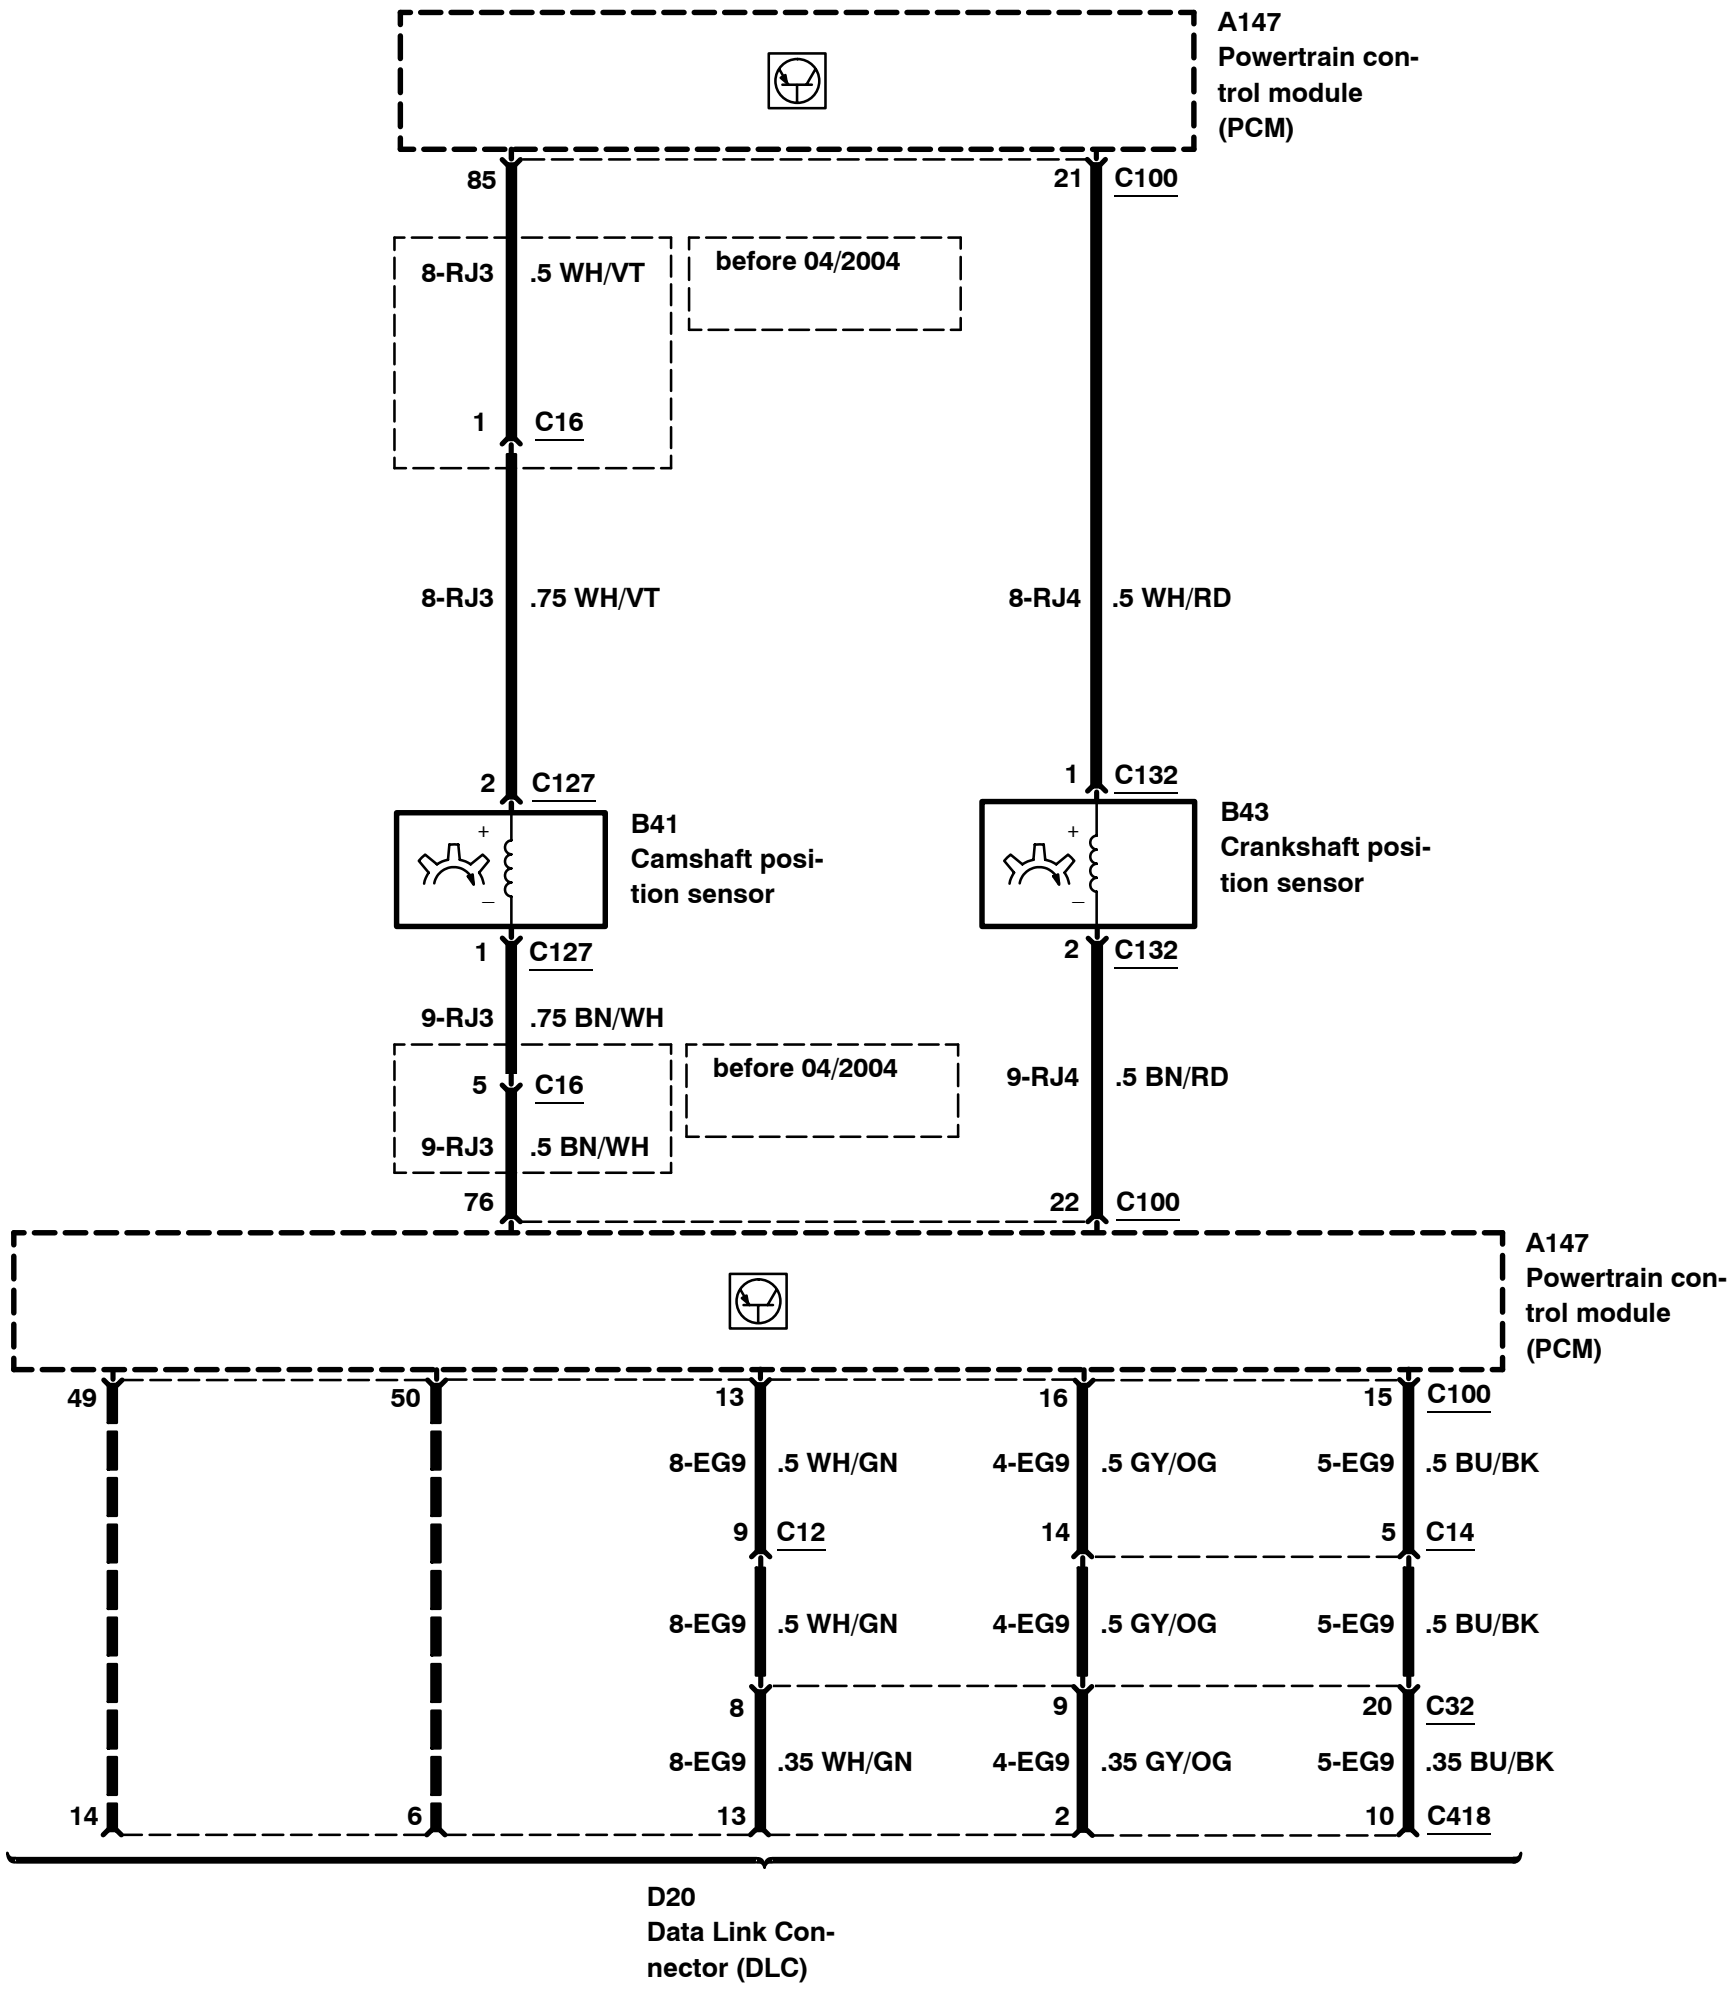


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4), automatic transmission

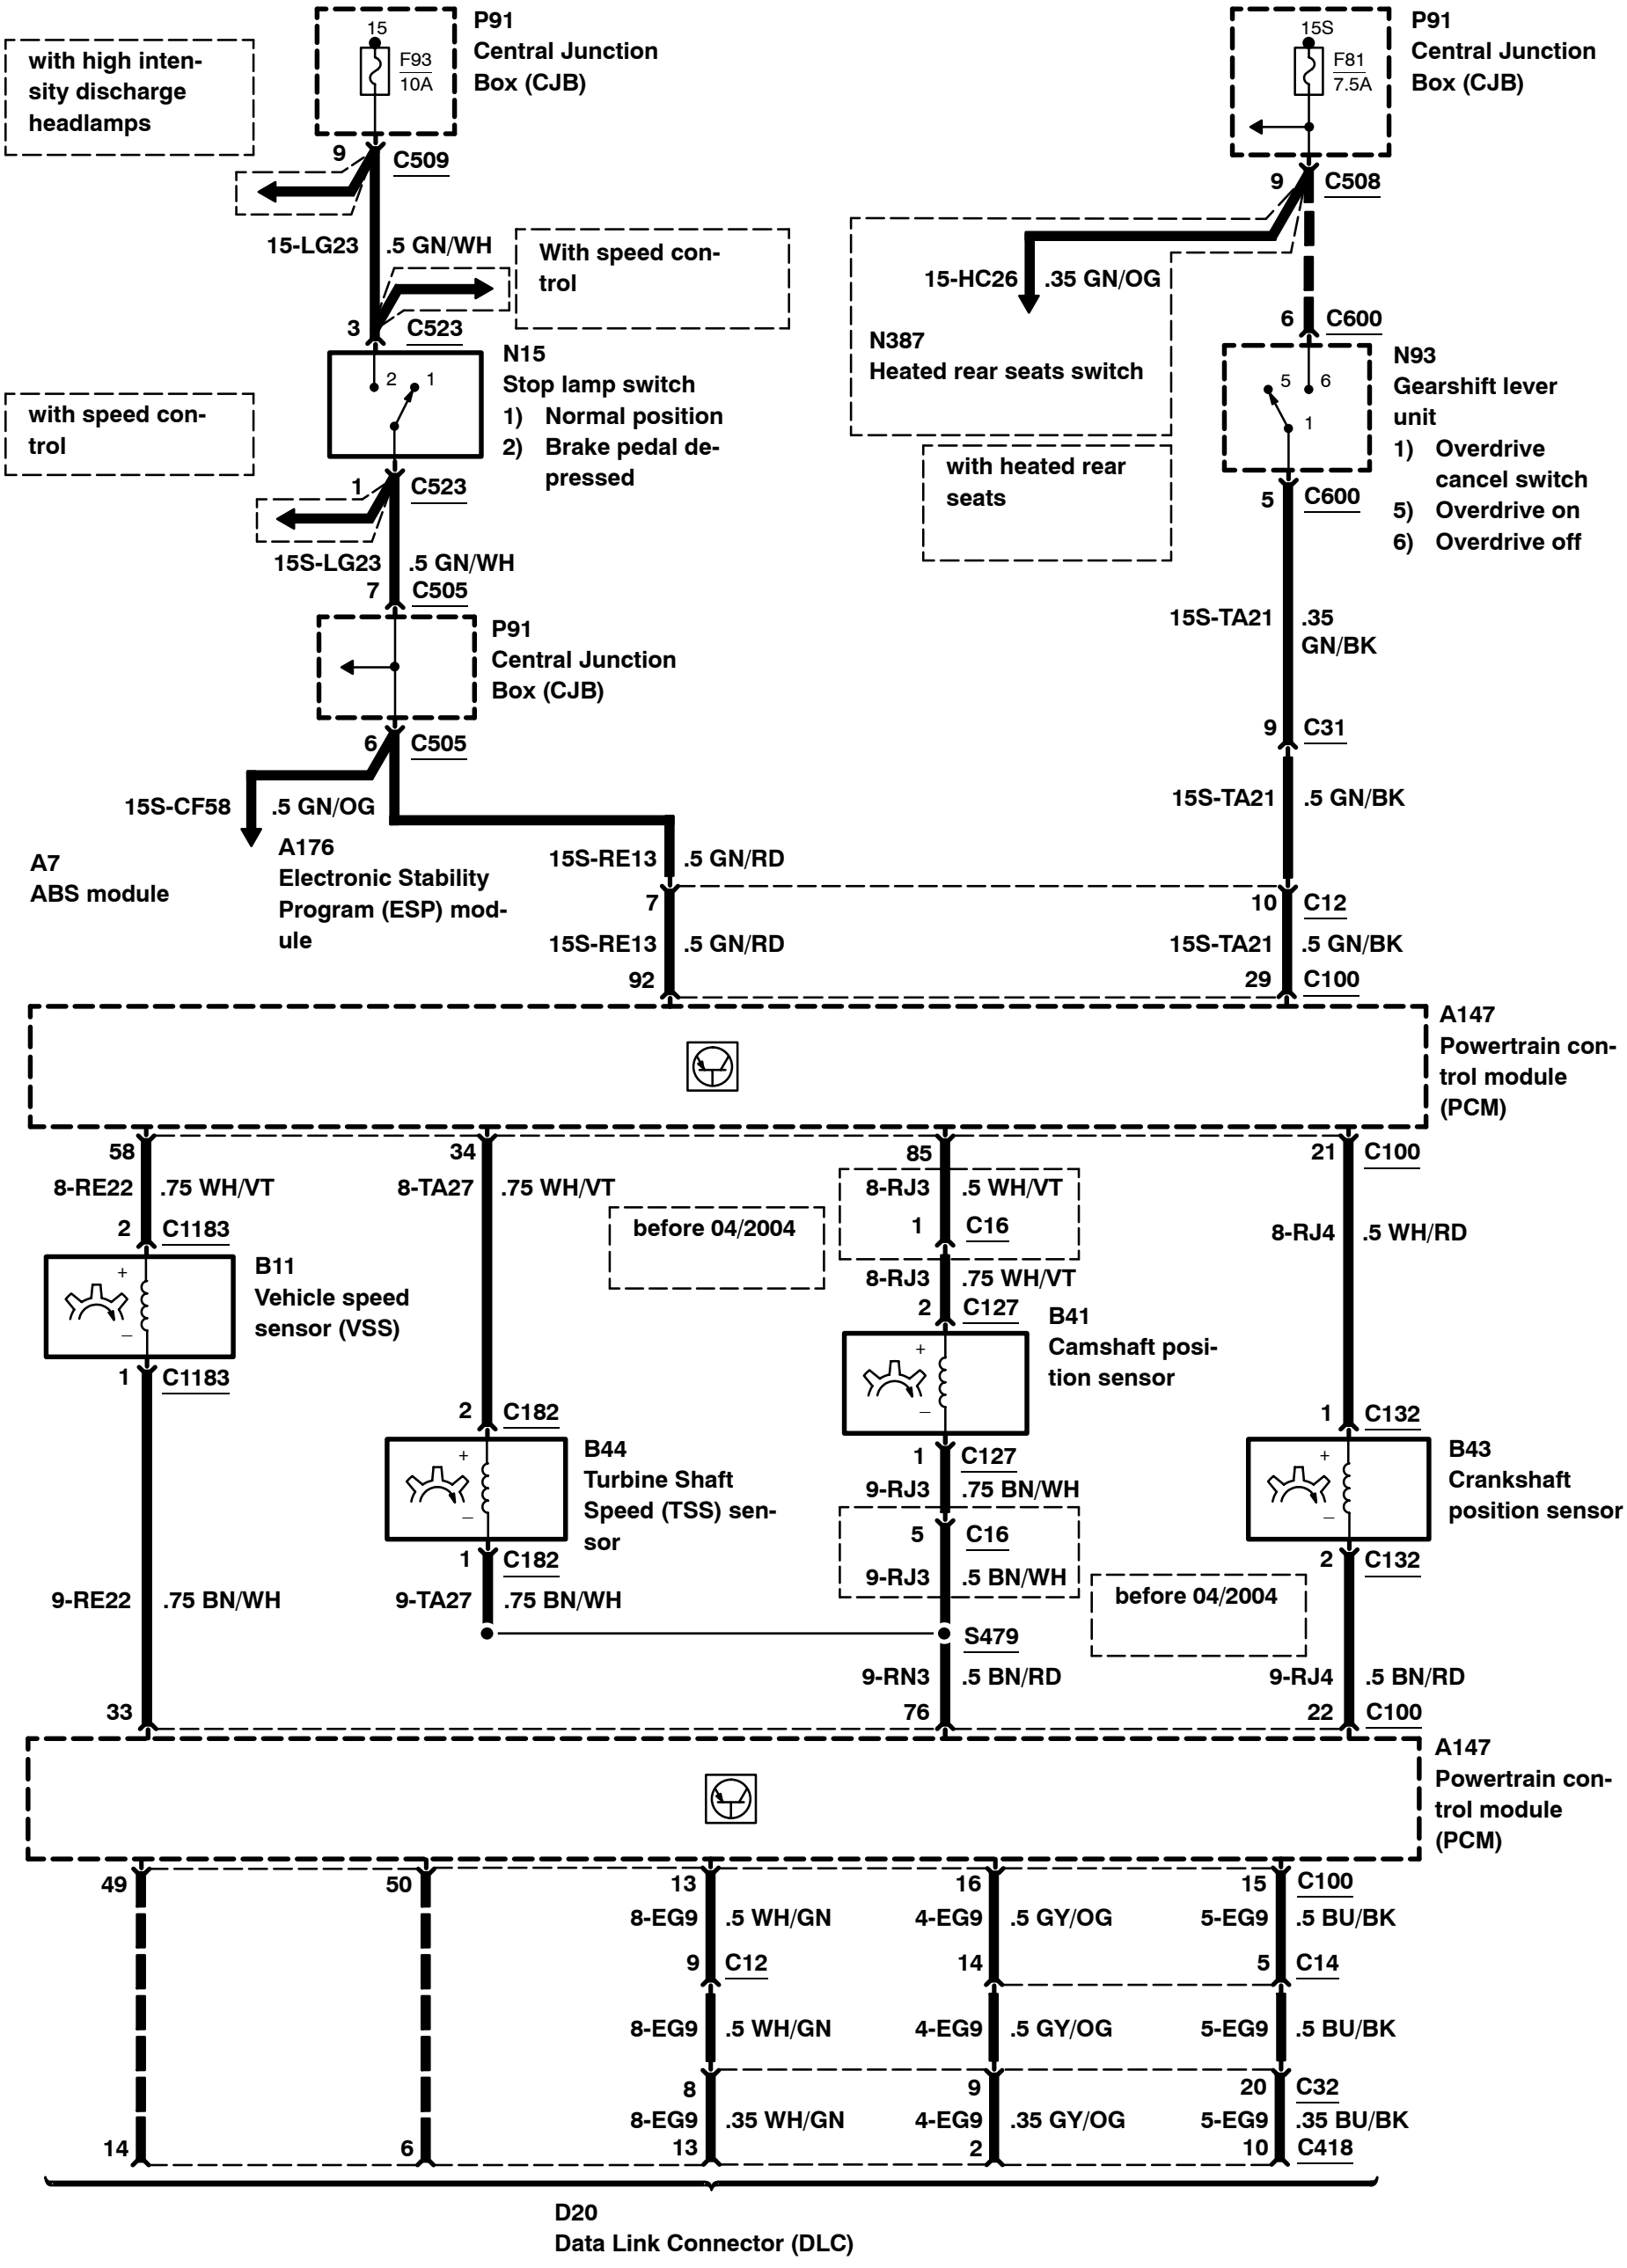


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

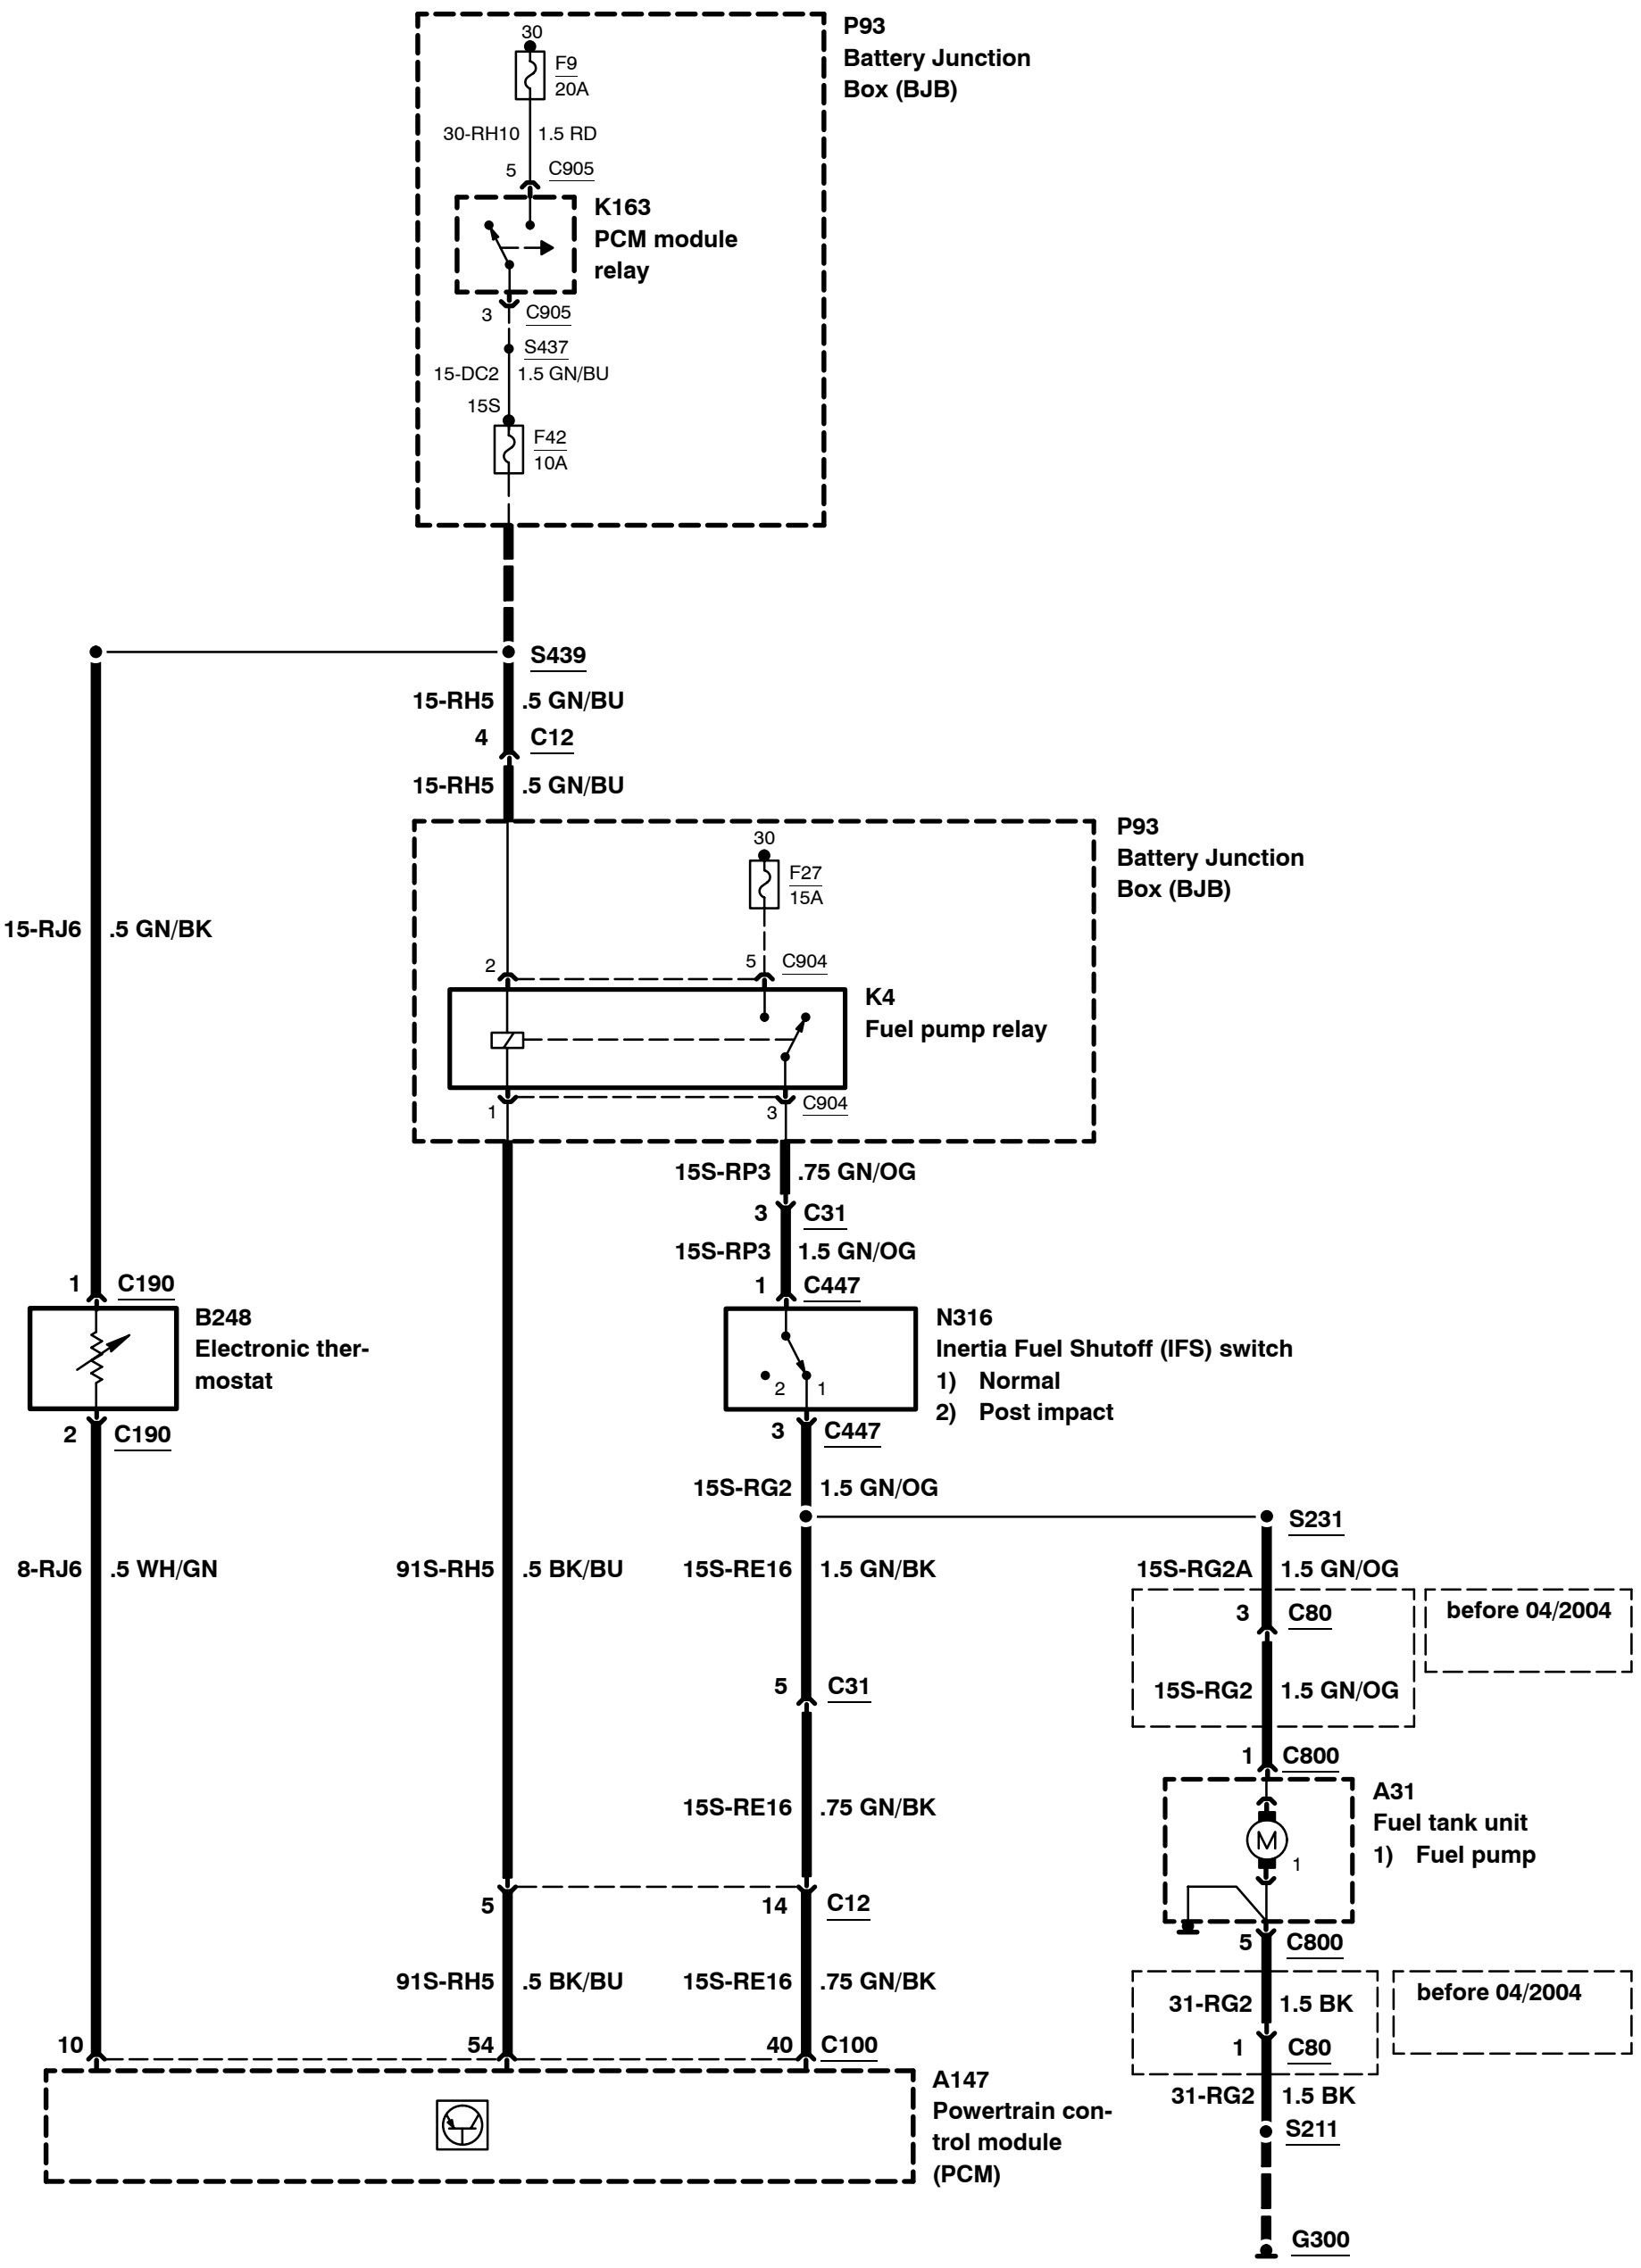


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

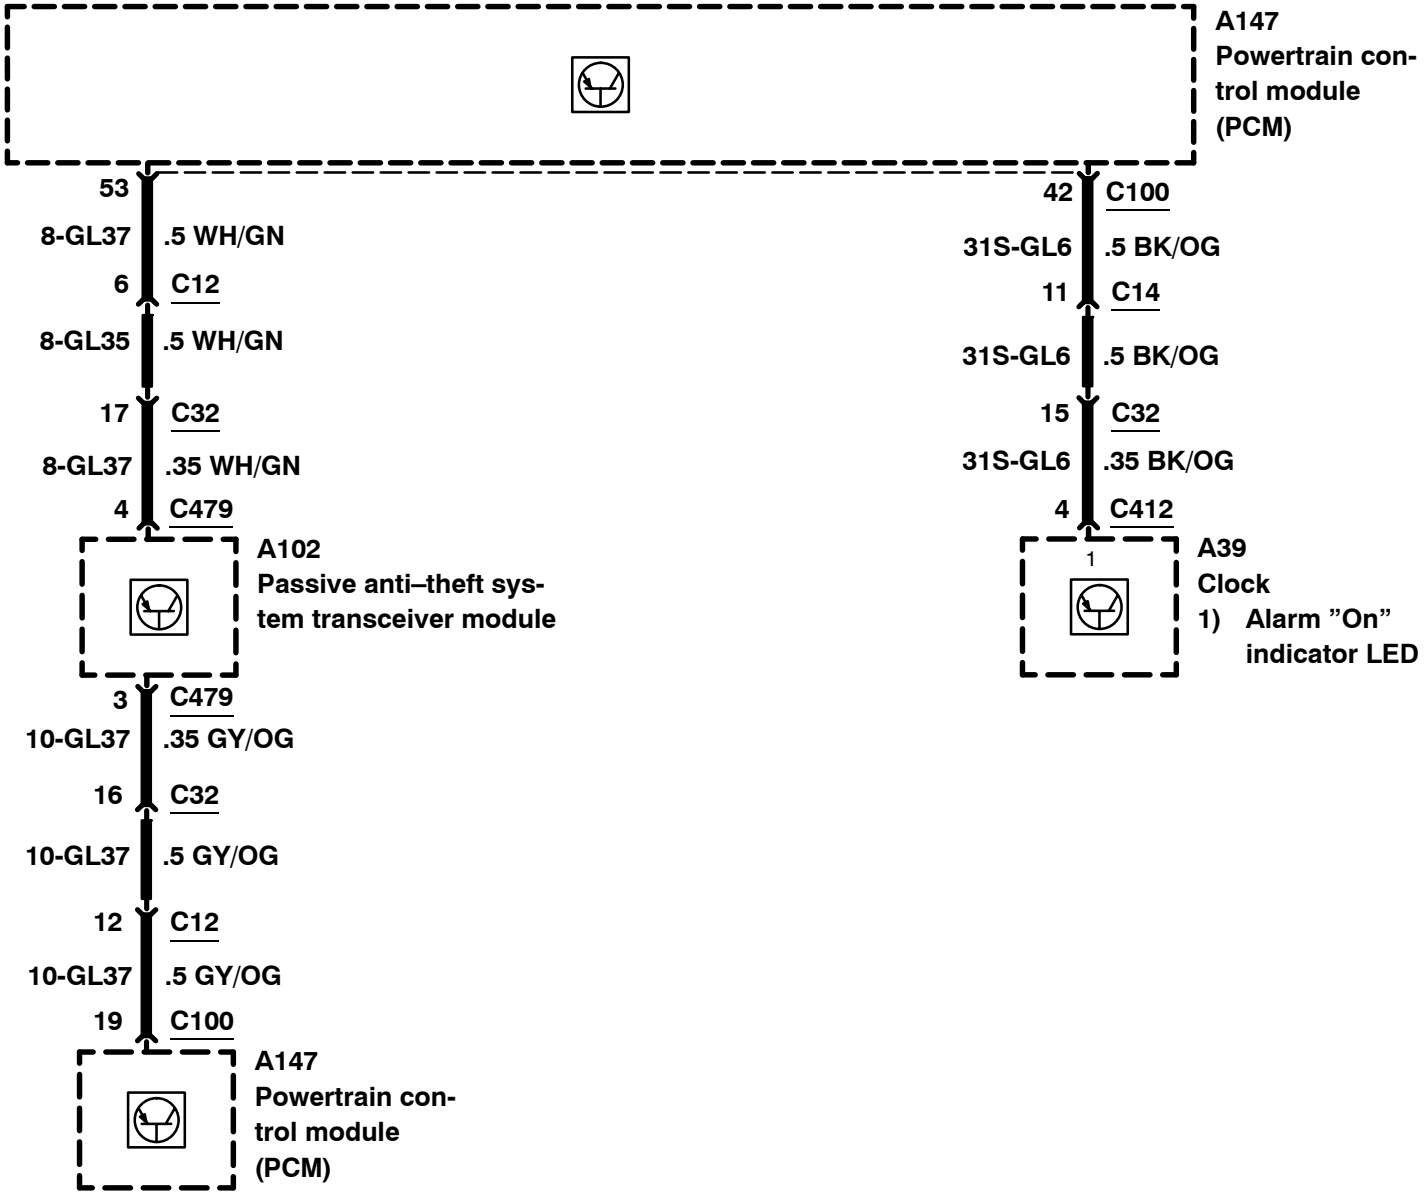


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

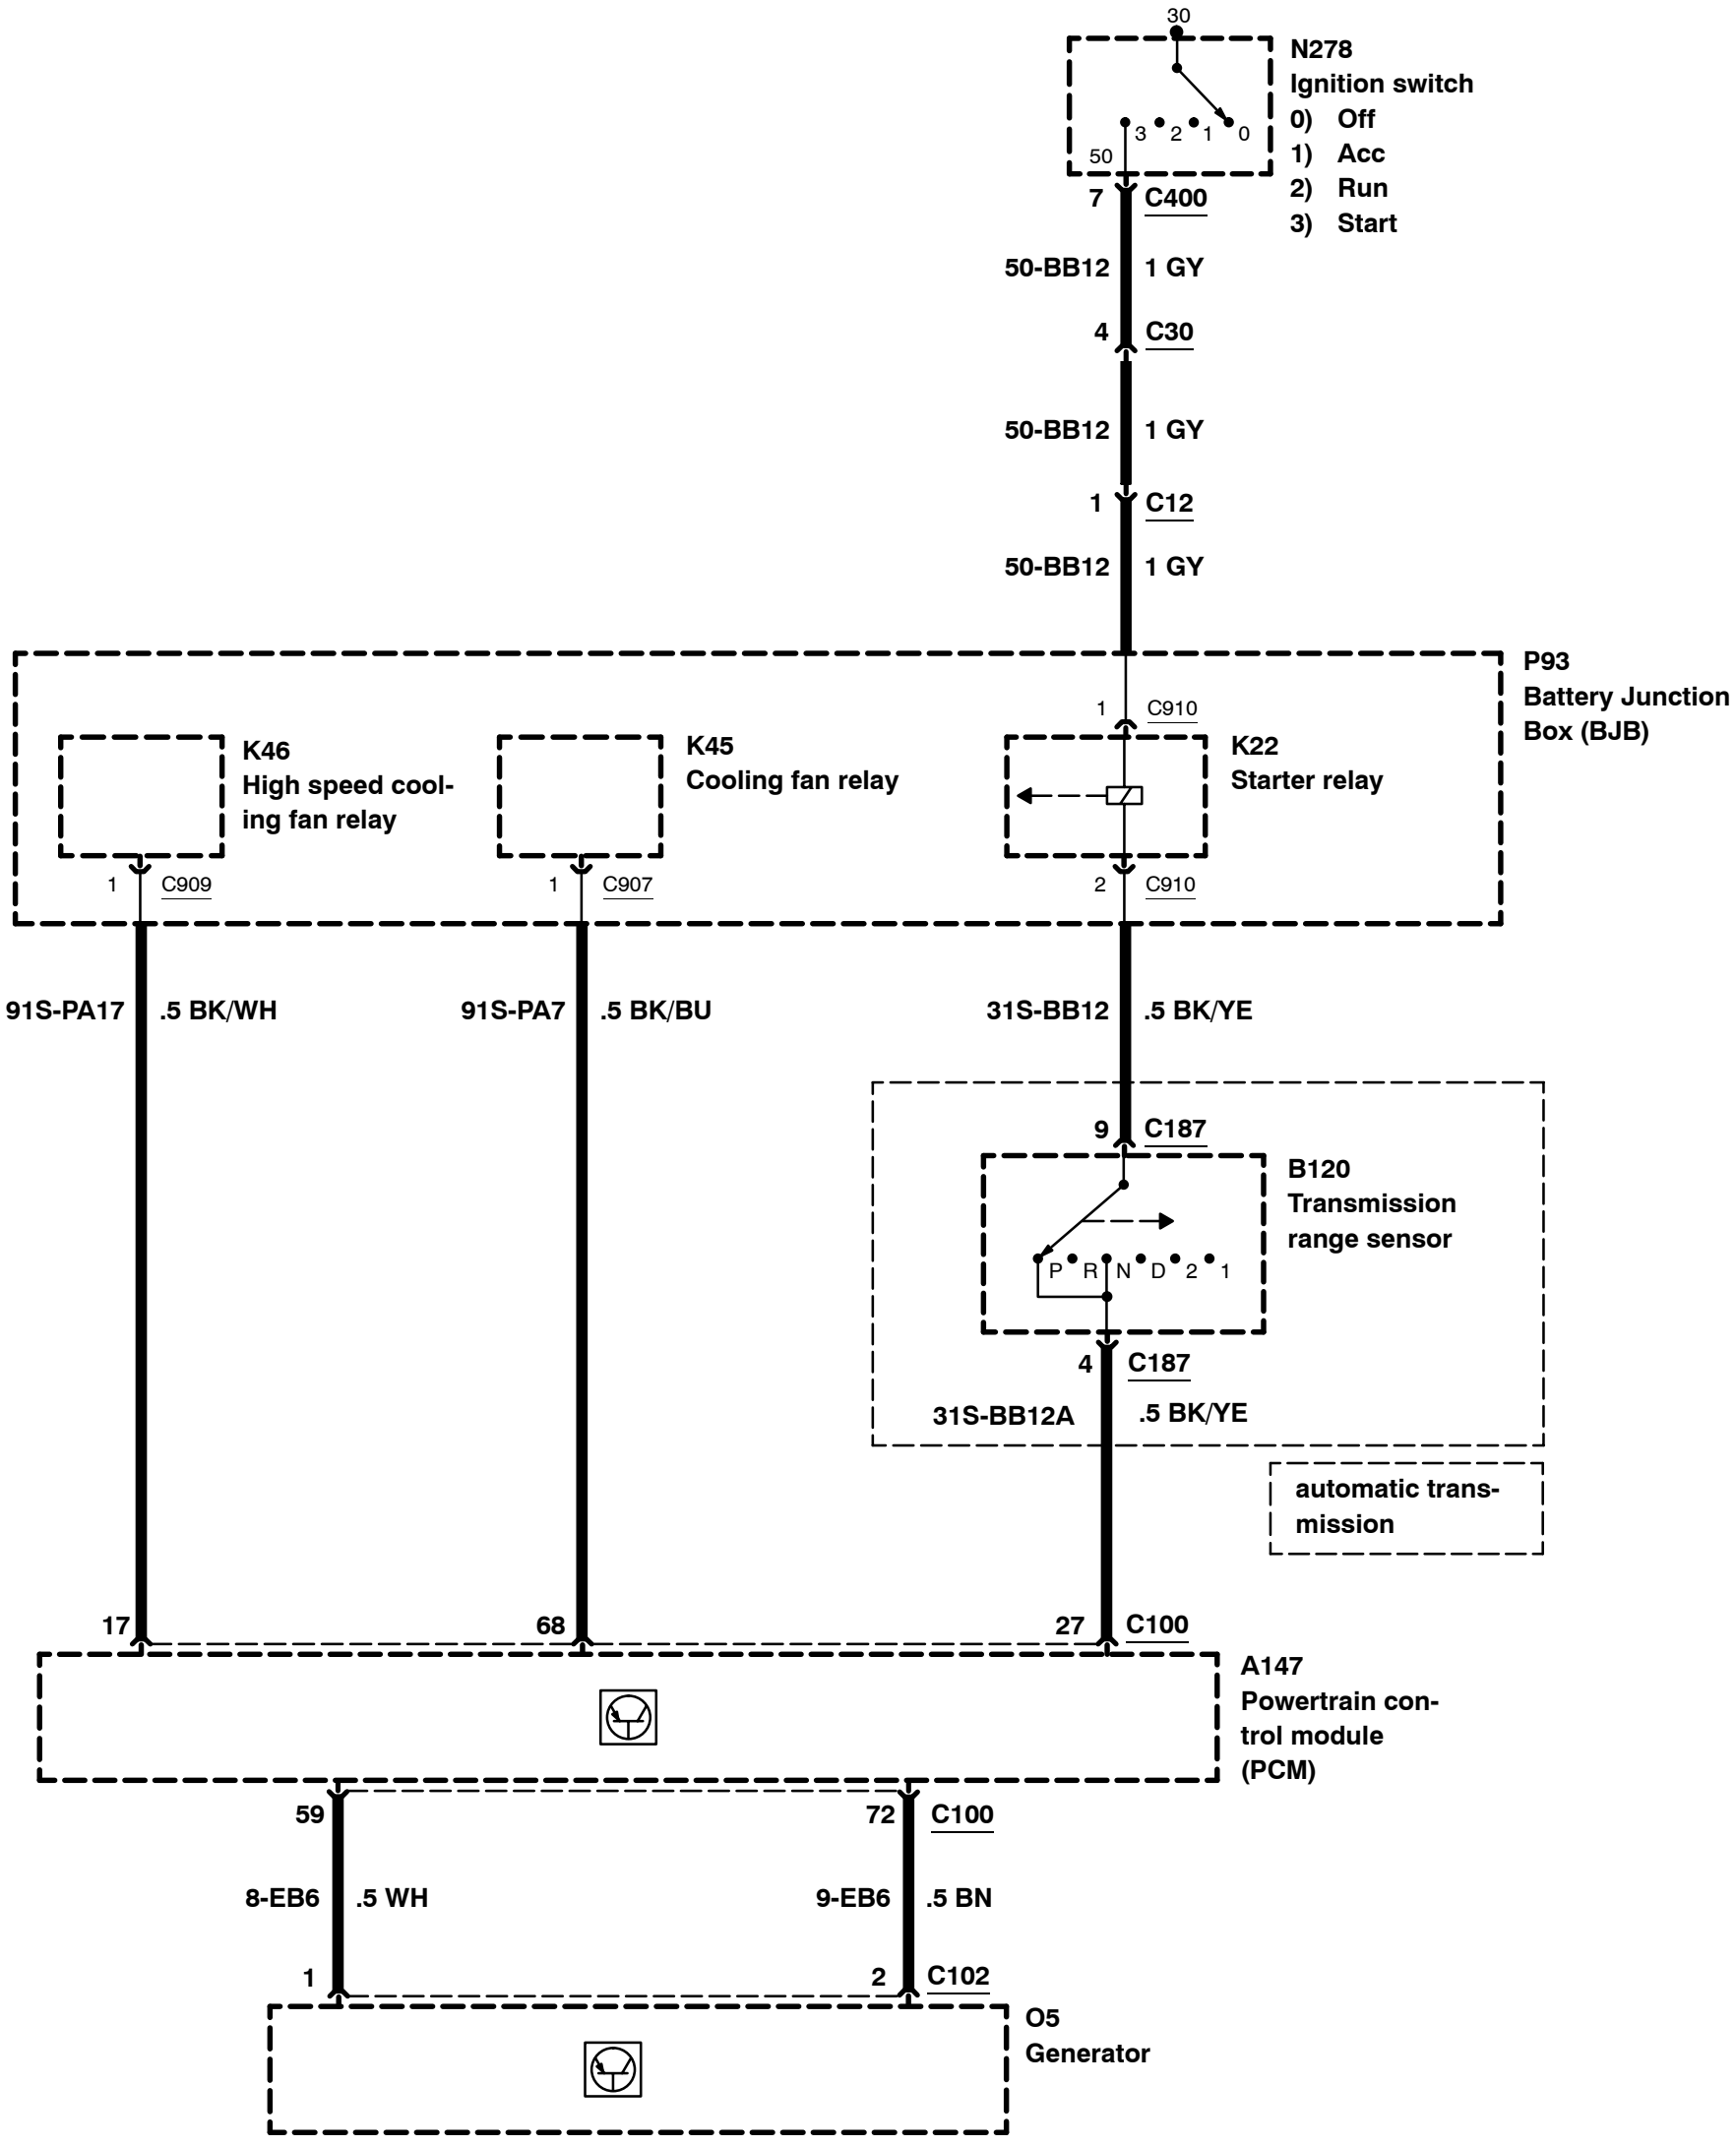

Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

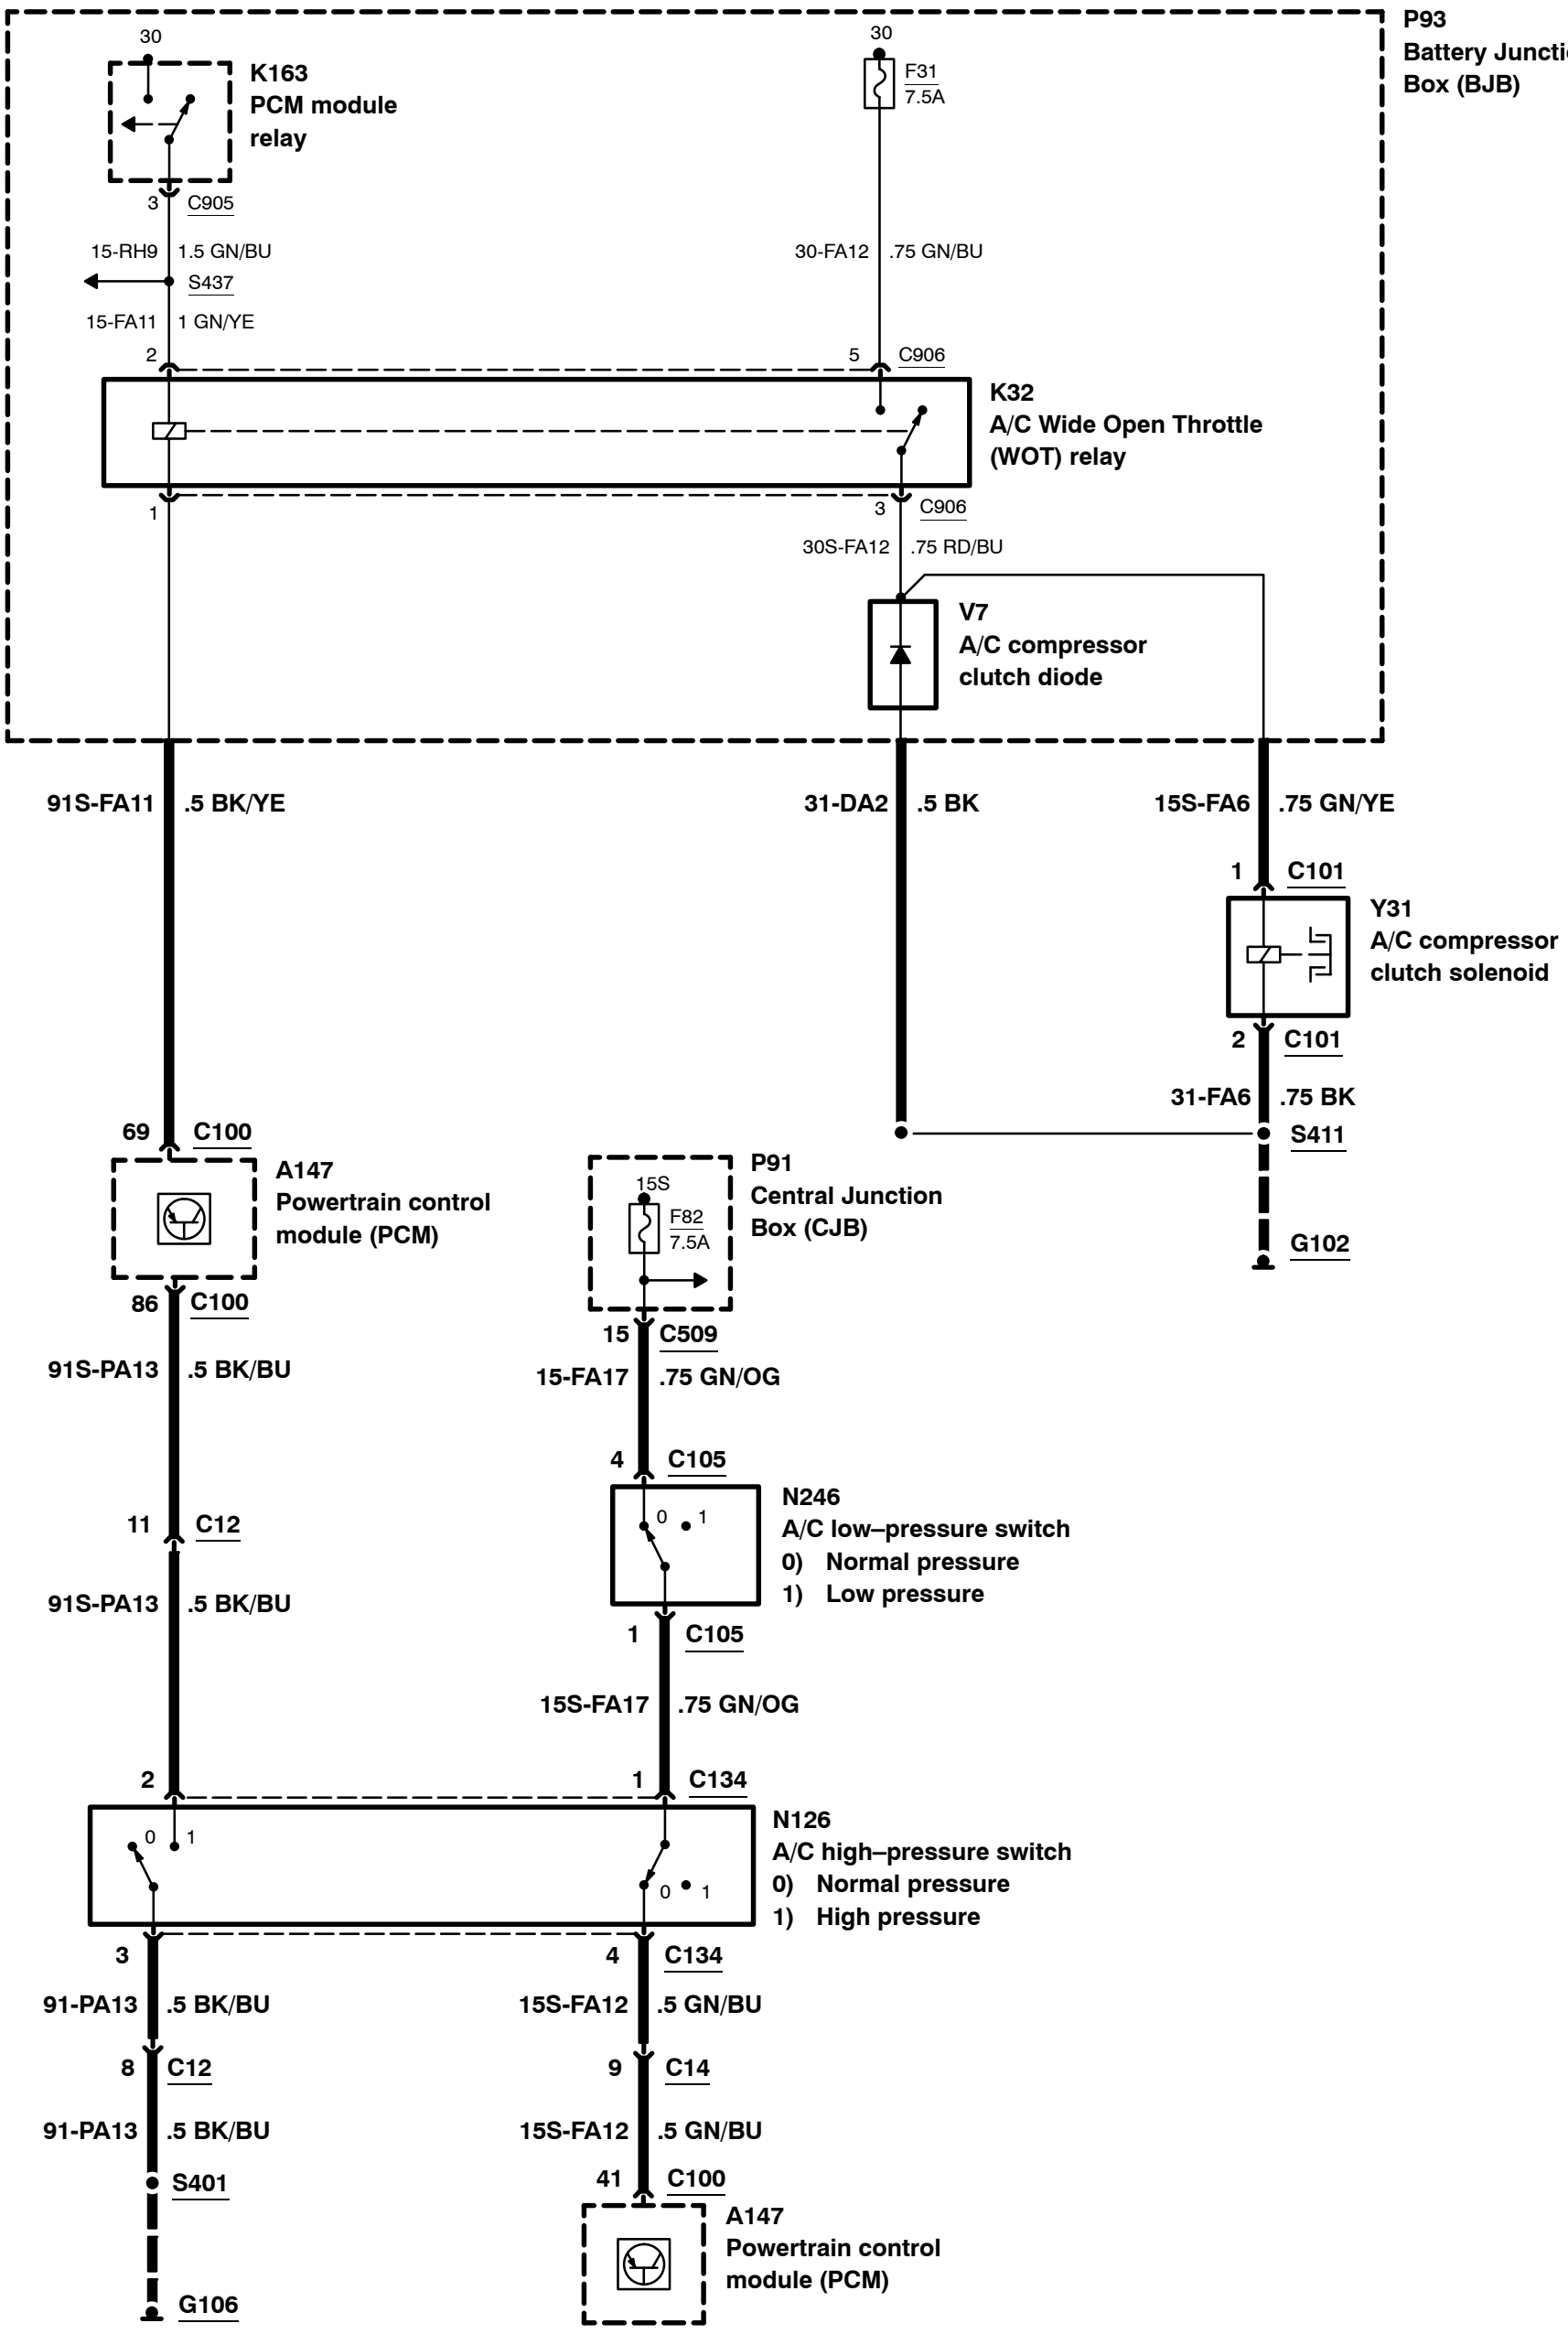


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

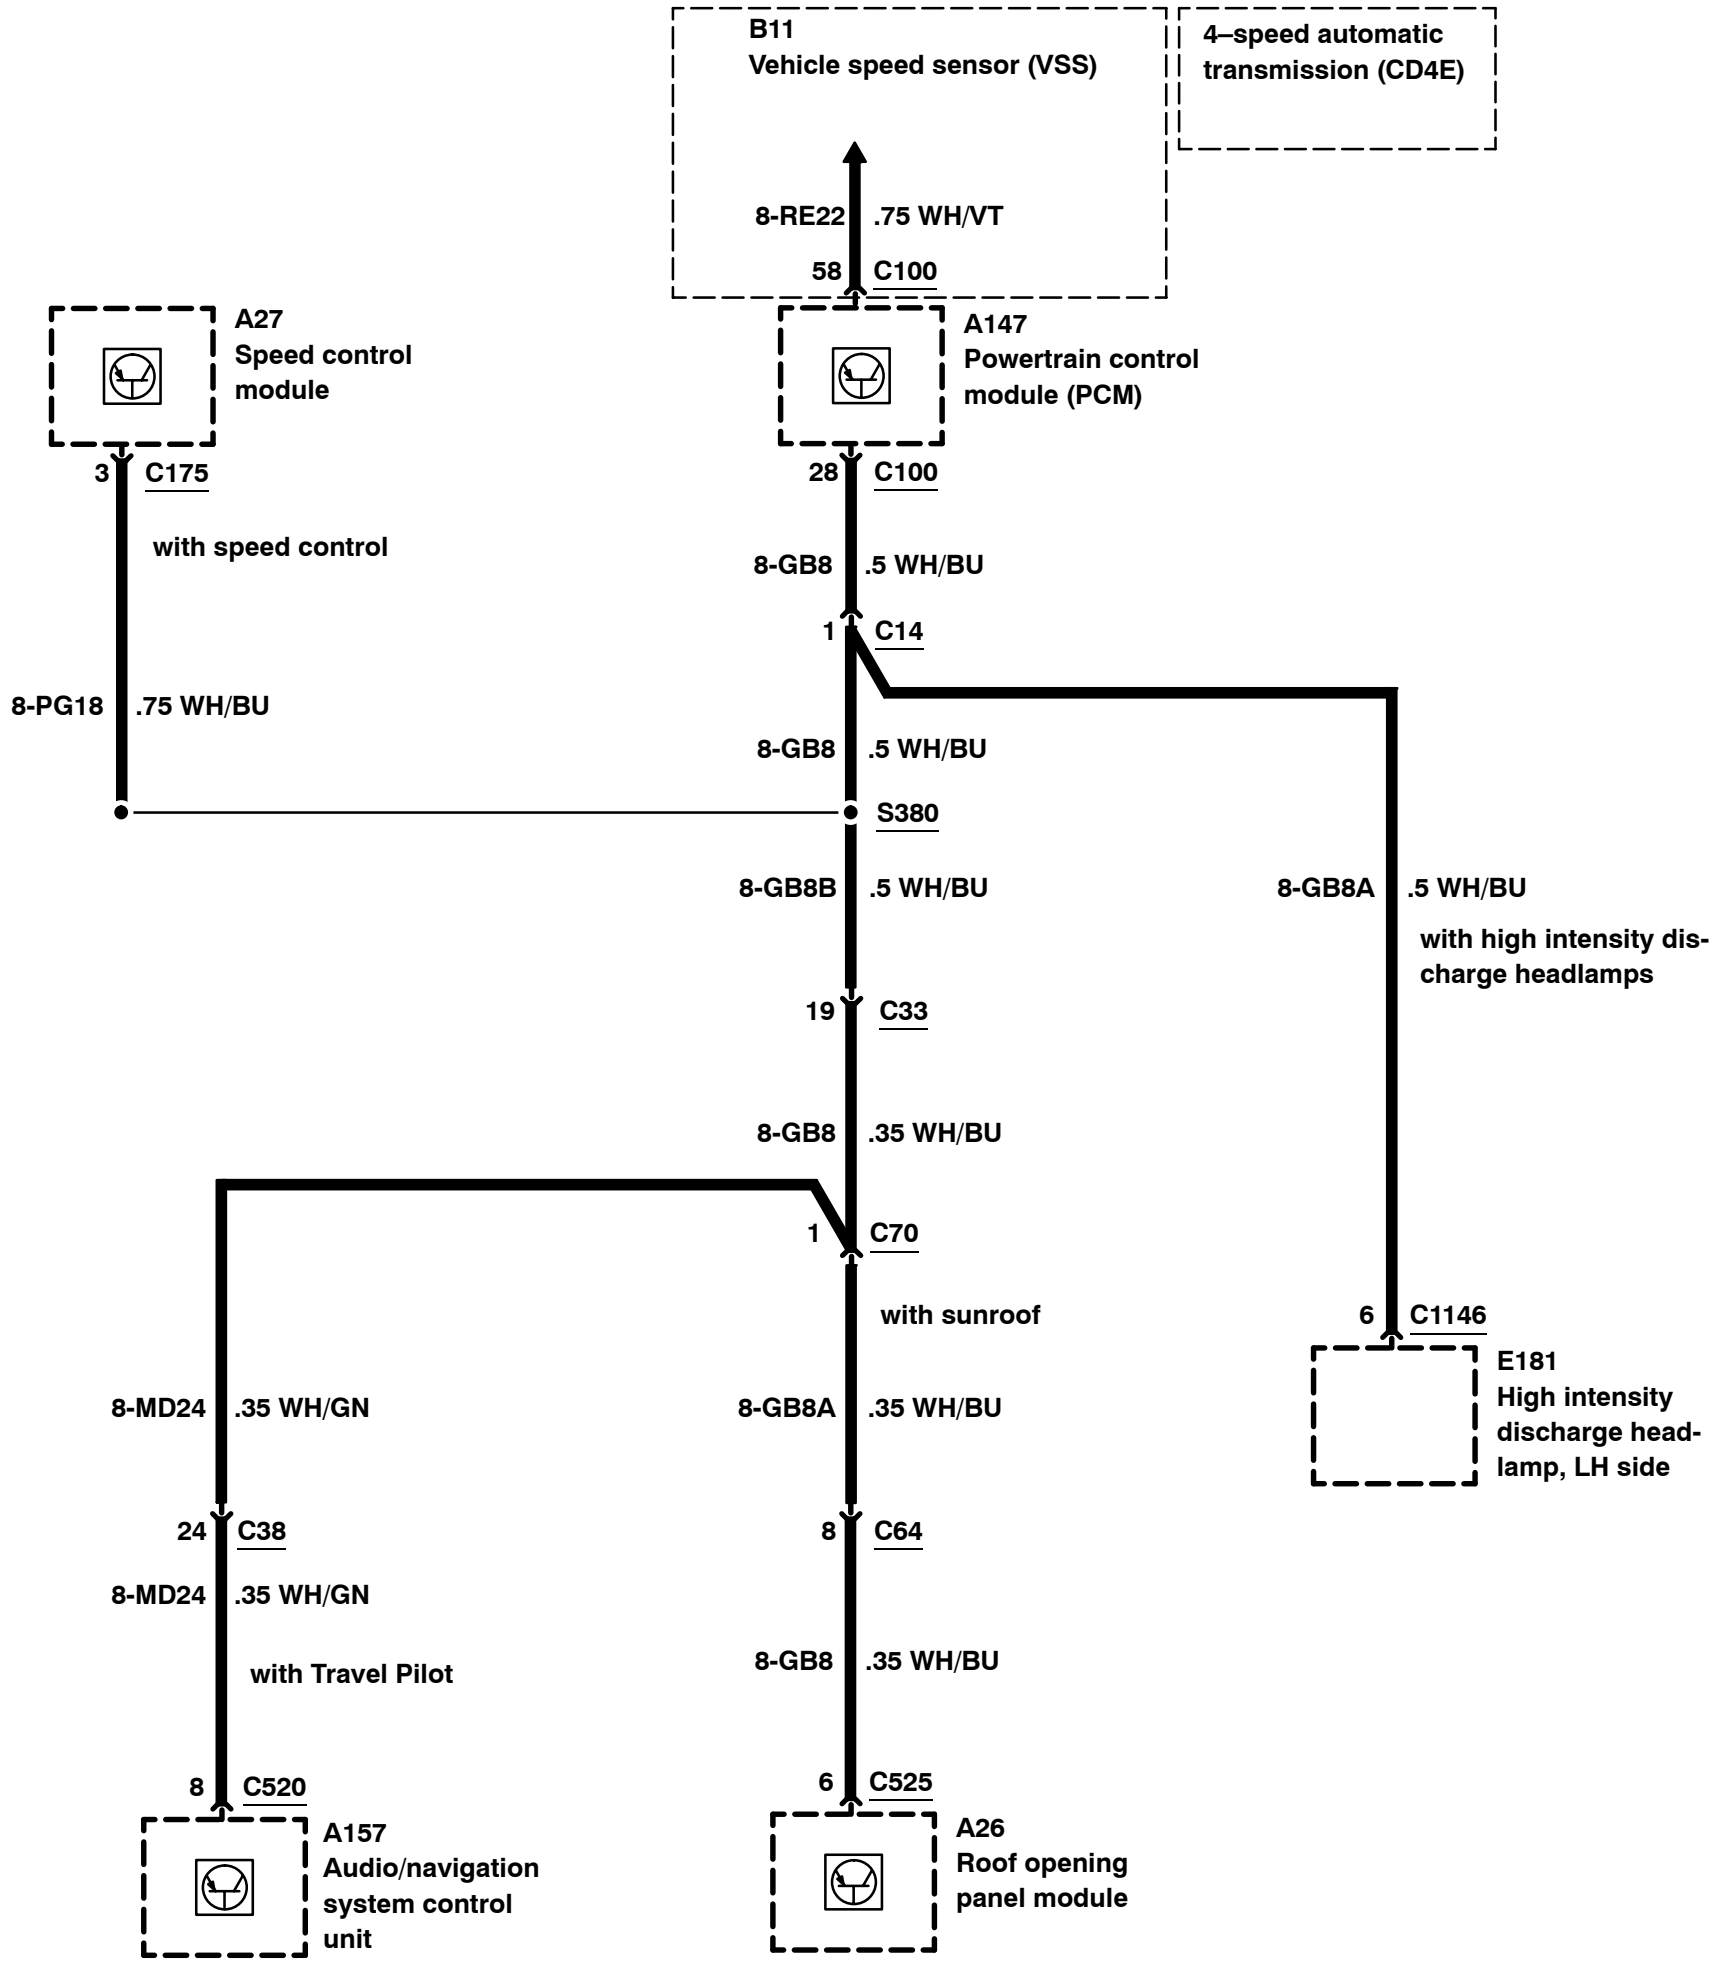


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

Block diagram

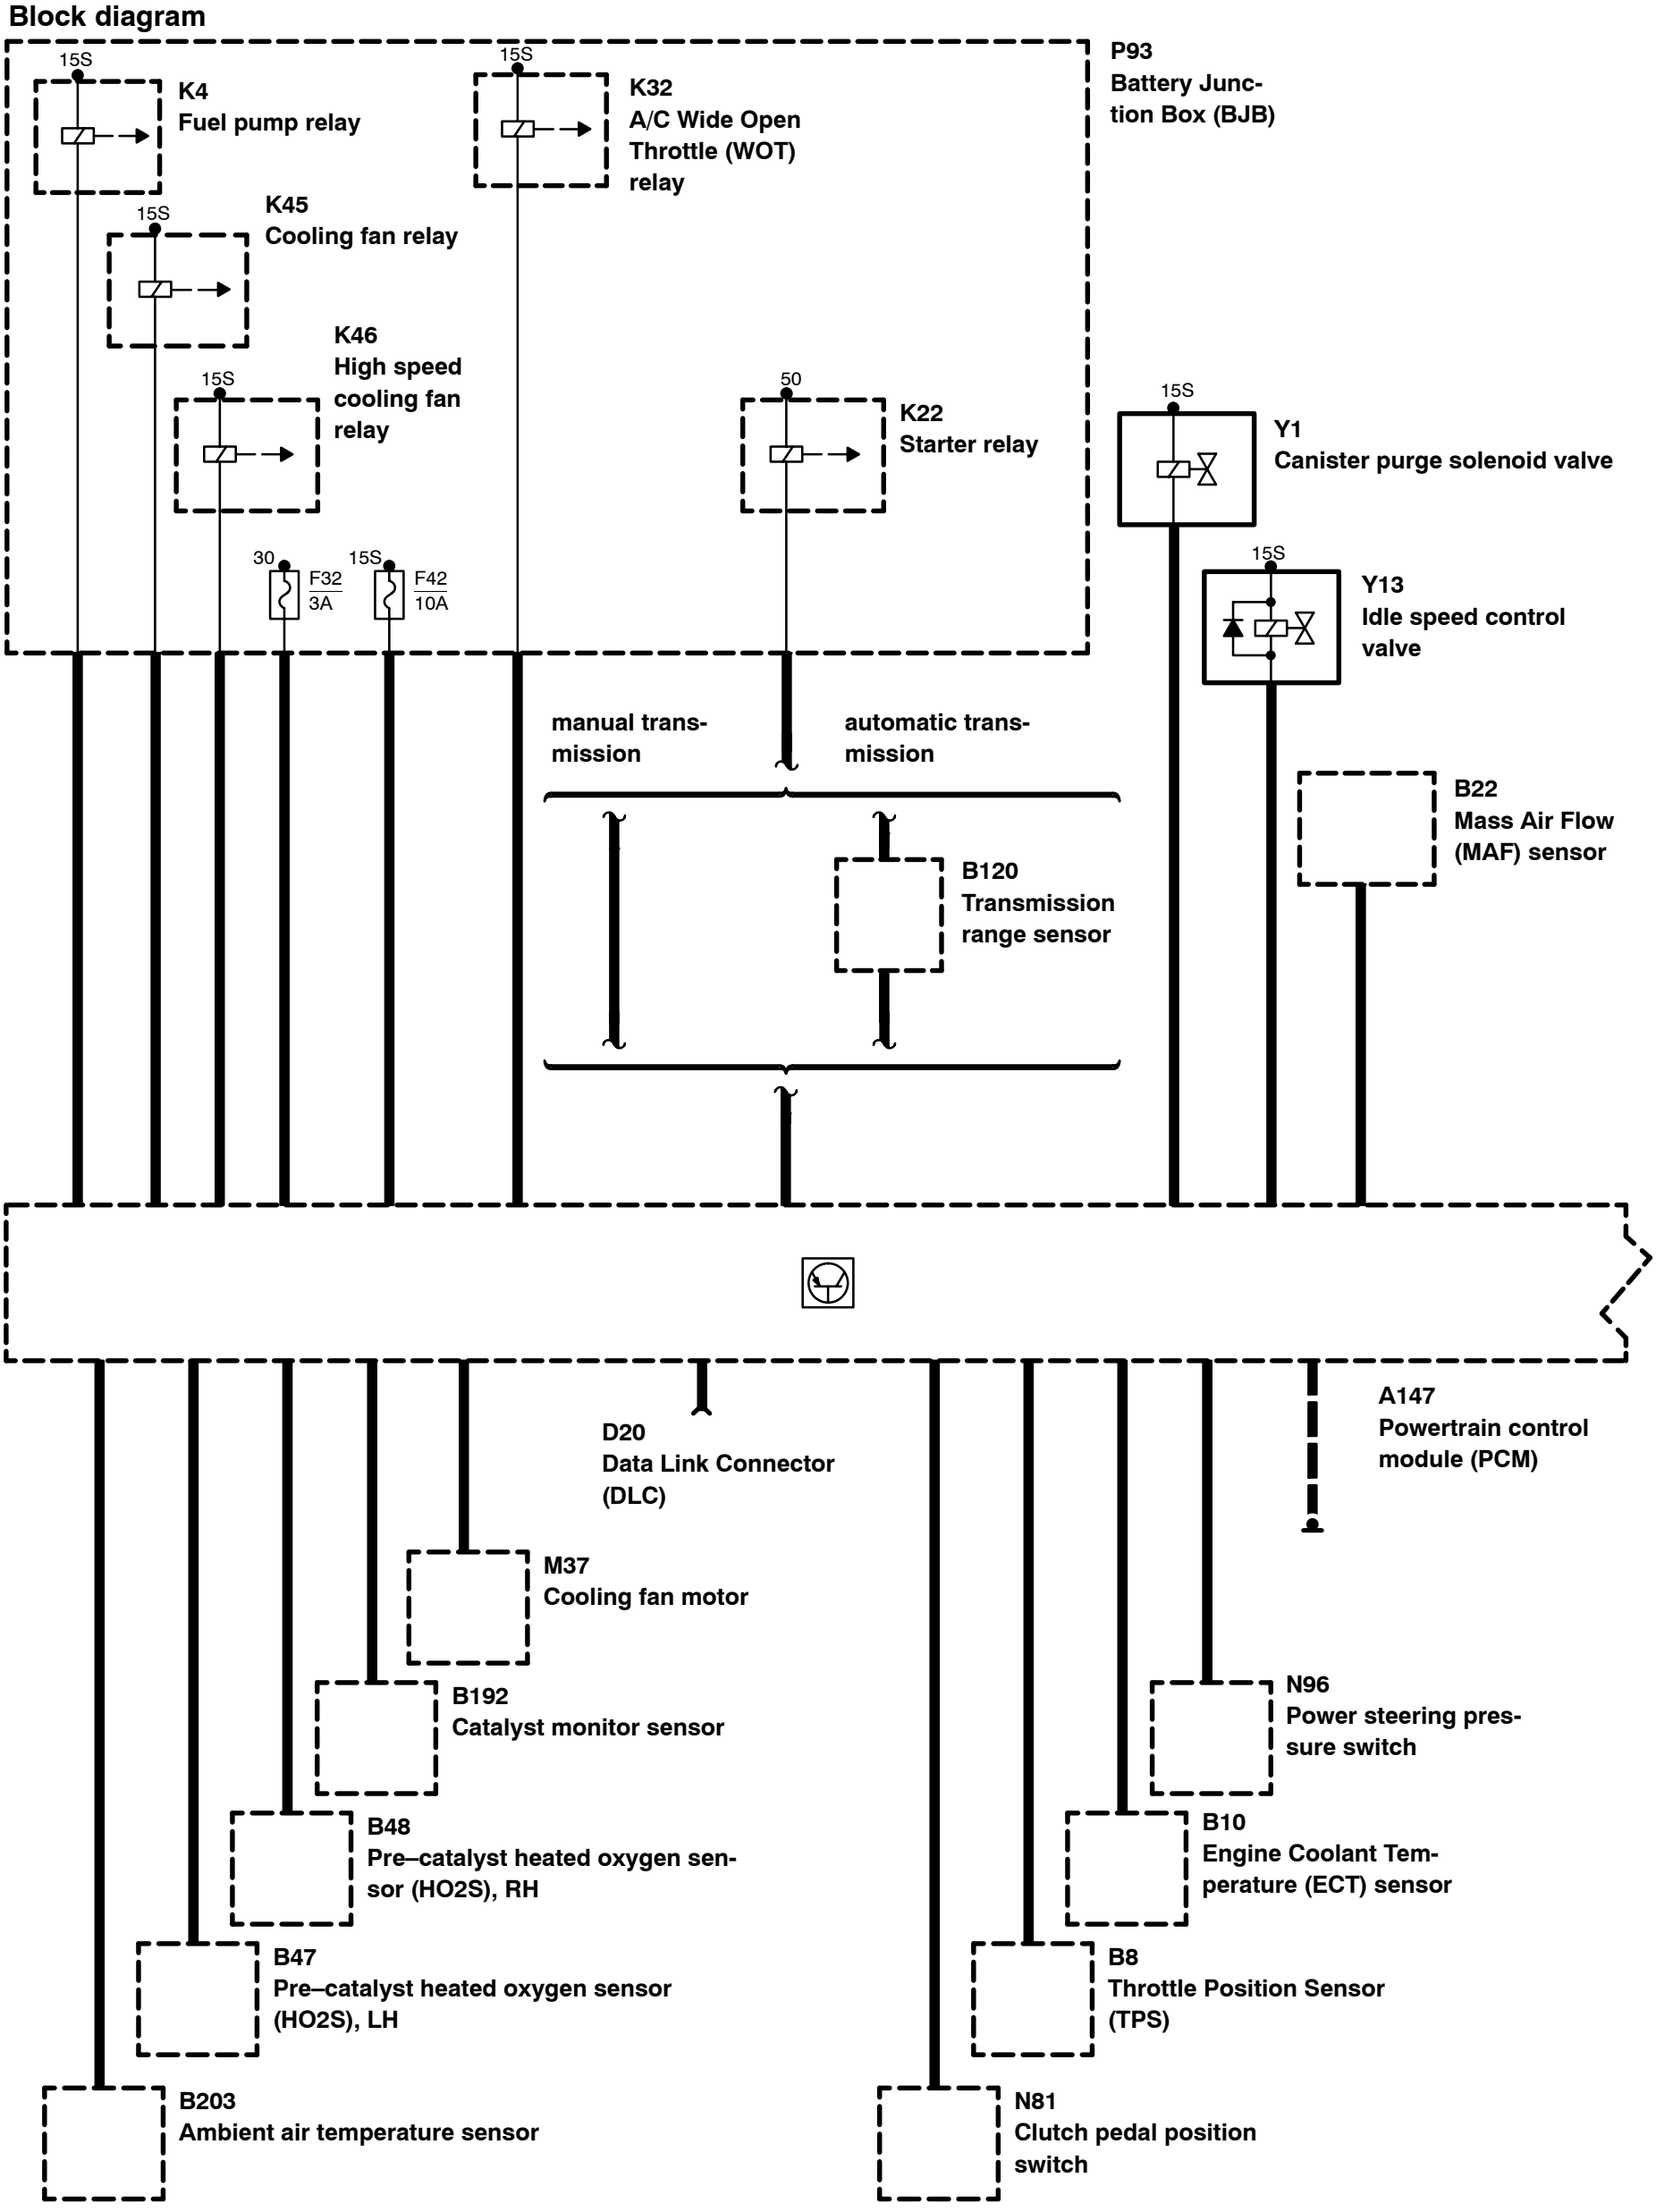


Electronic Engine Controls – 2.5L Duratec–VE (VE6)


Block diagram

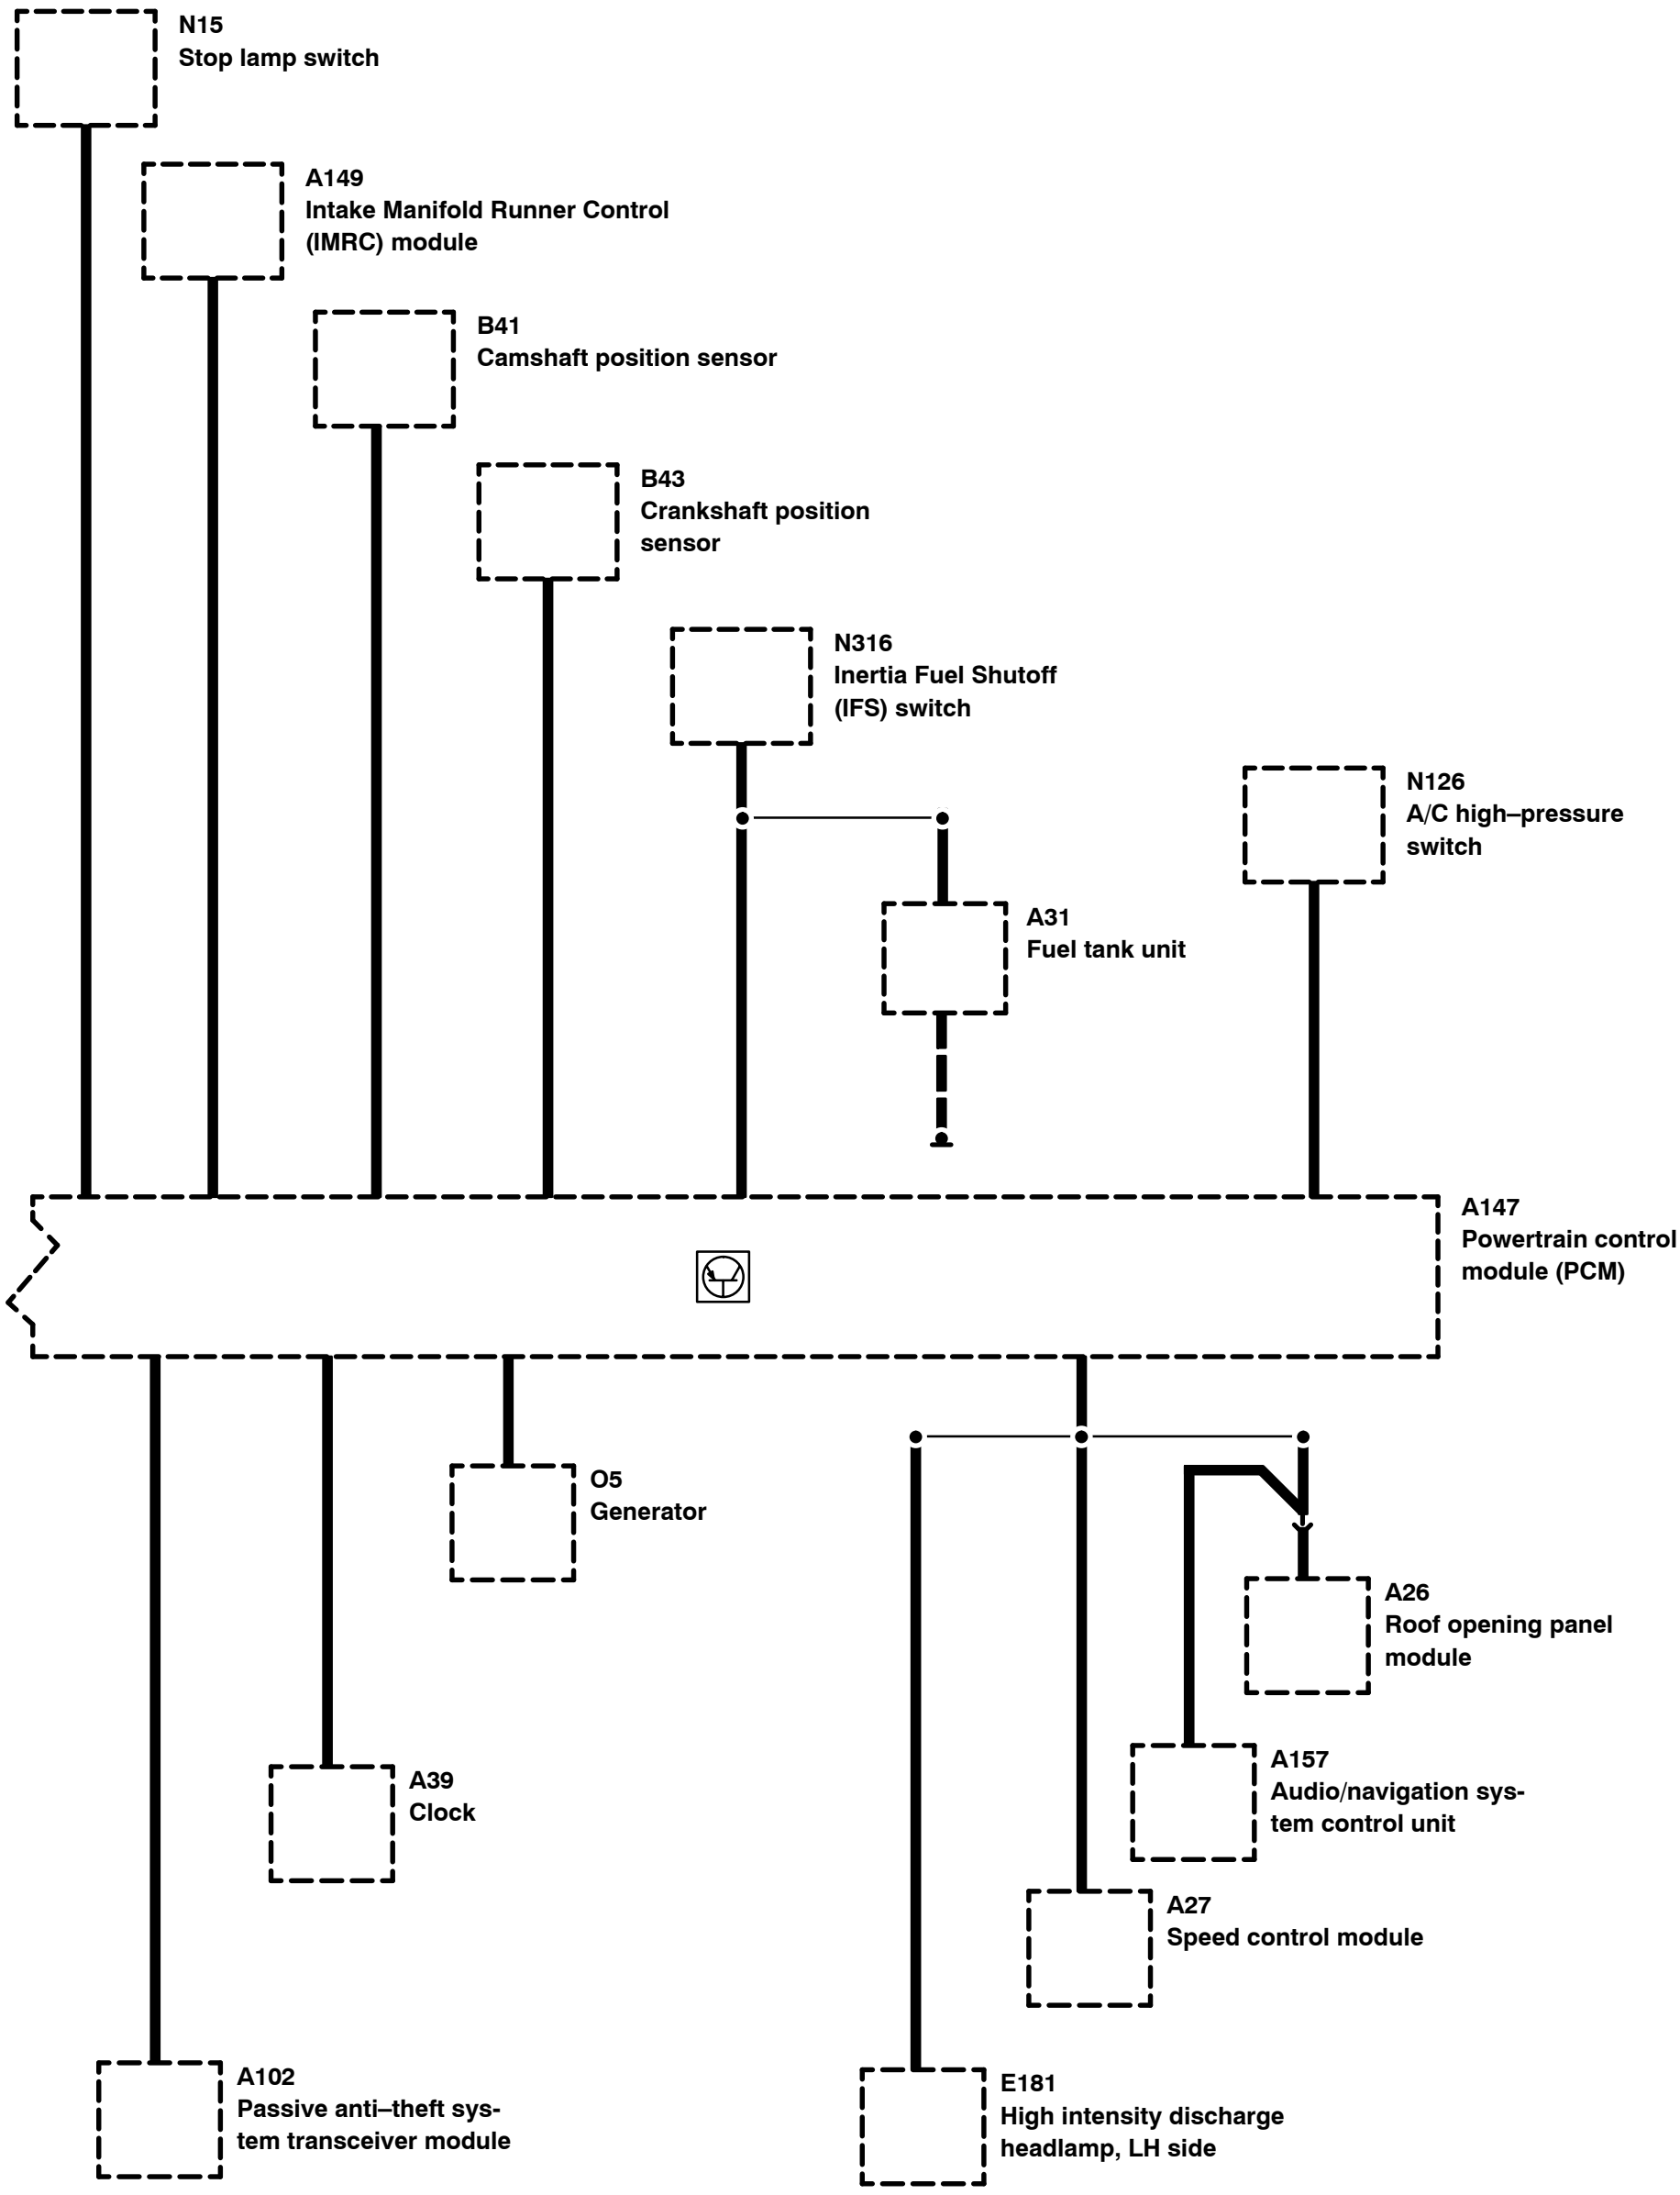


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

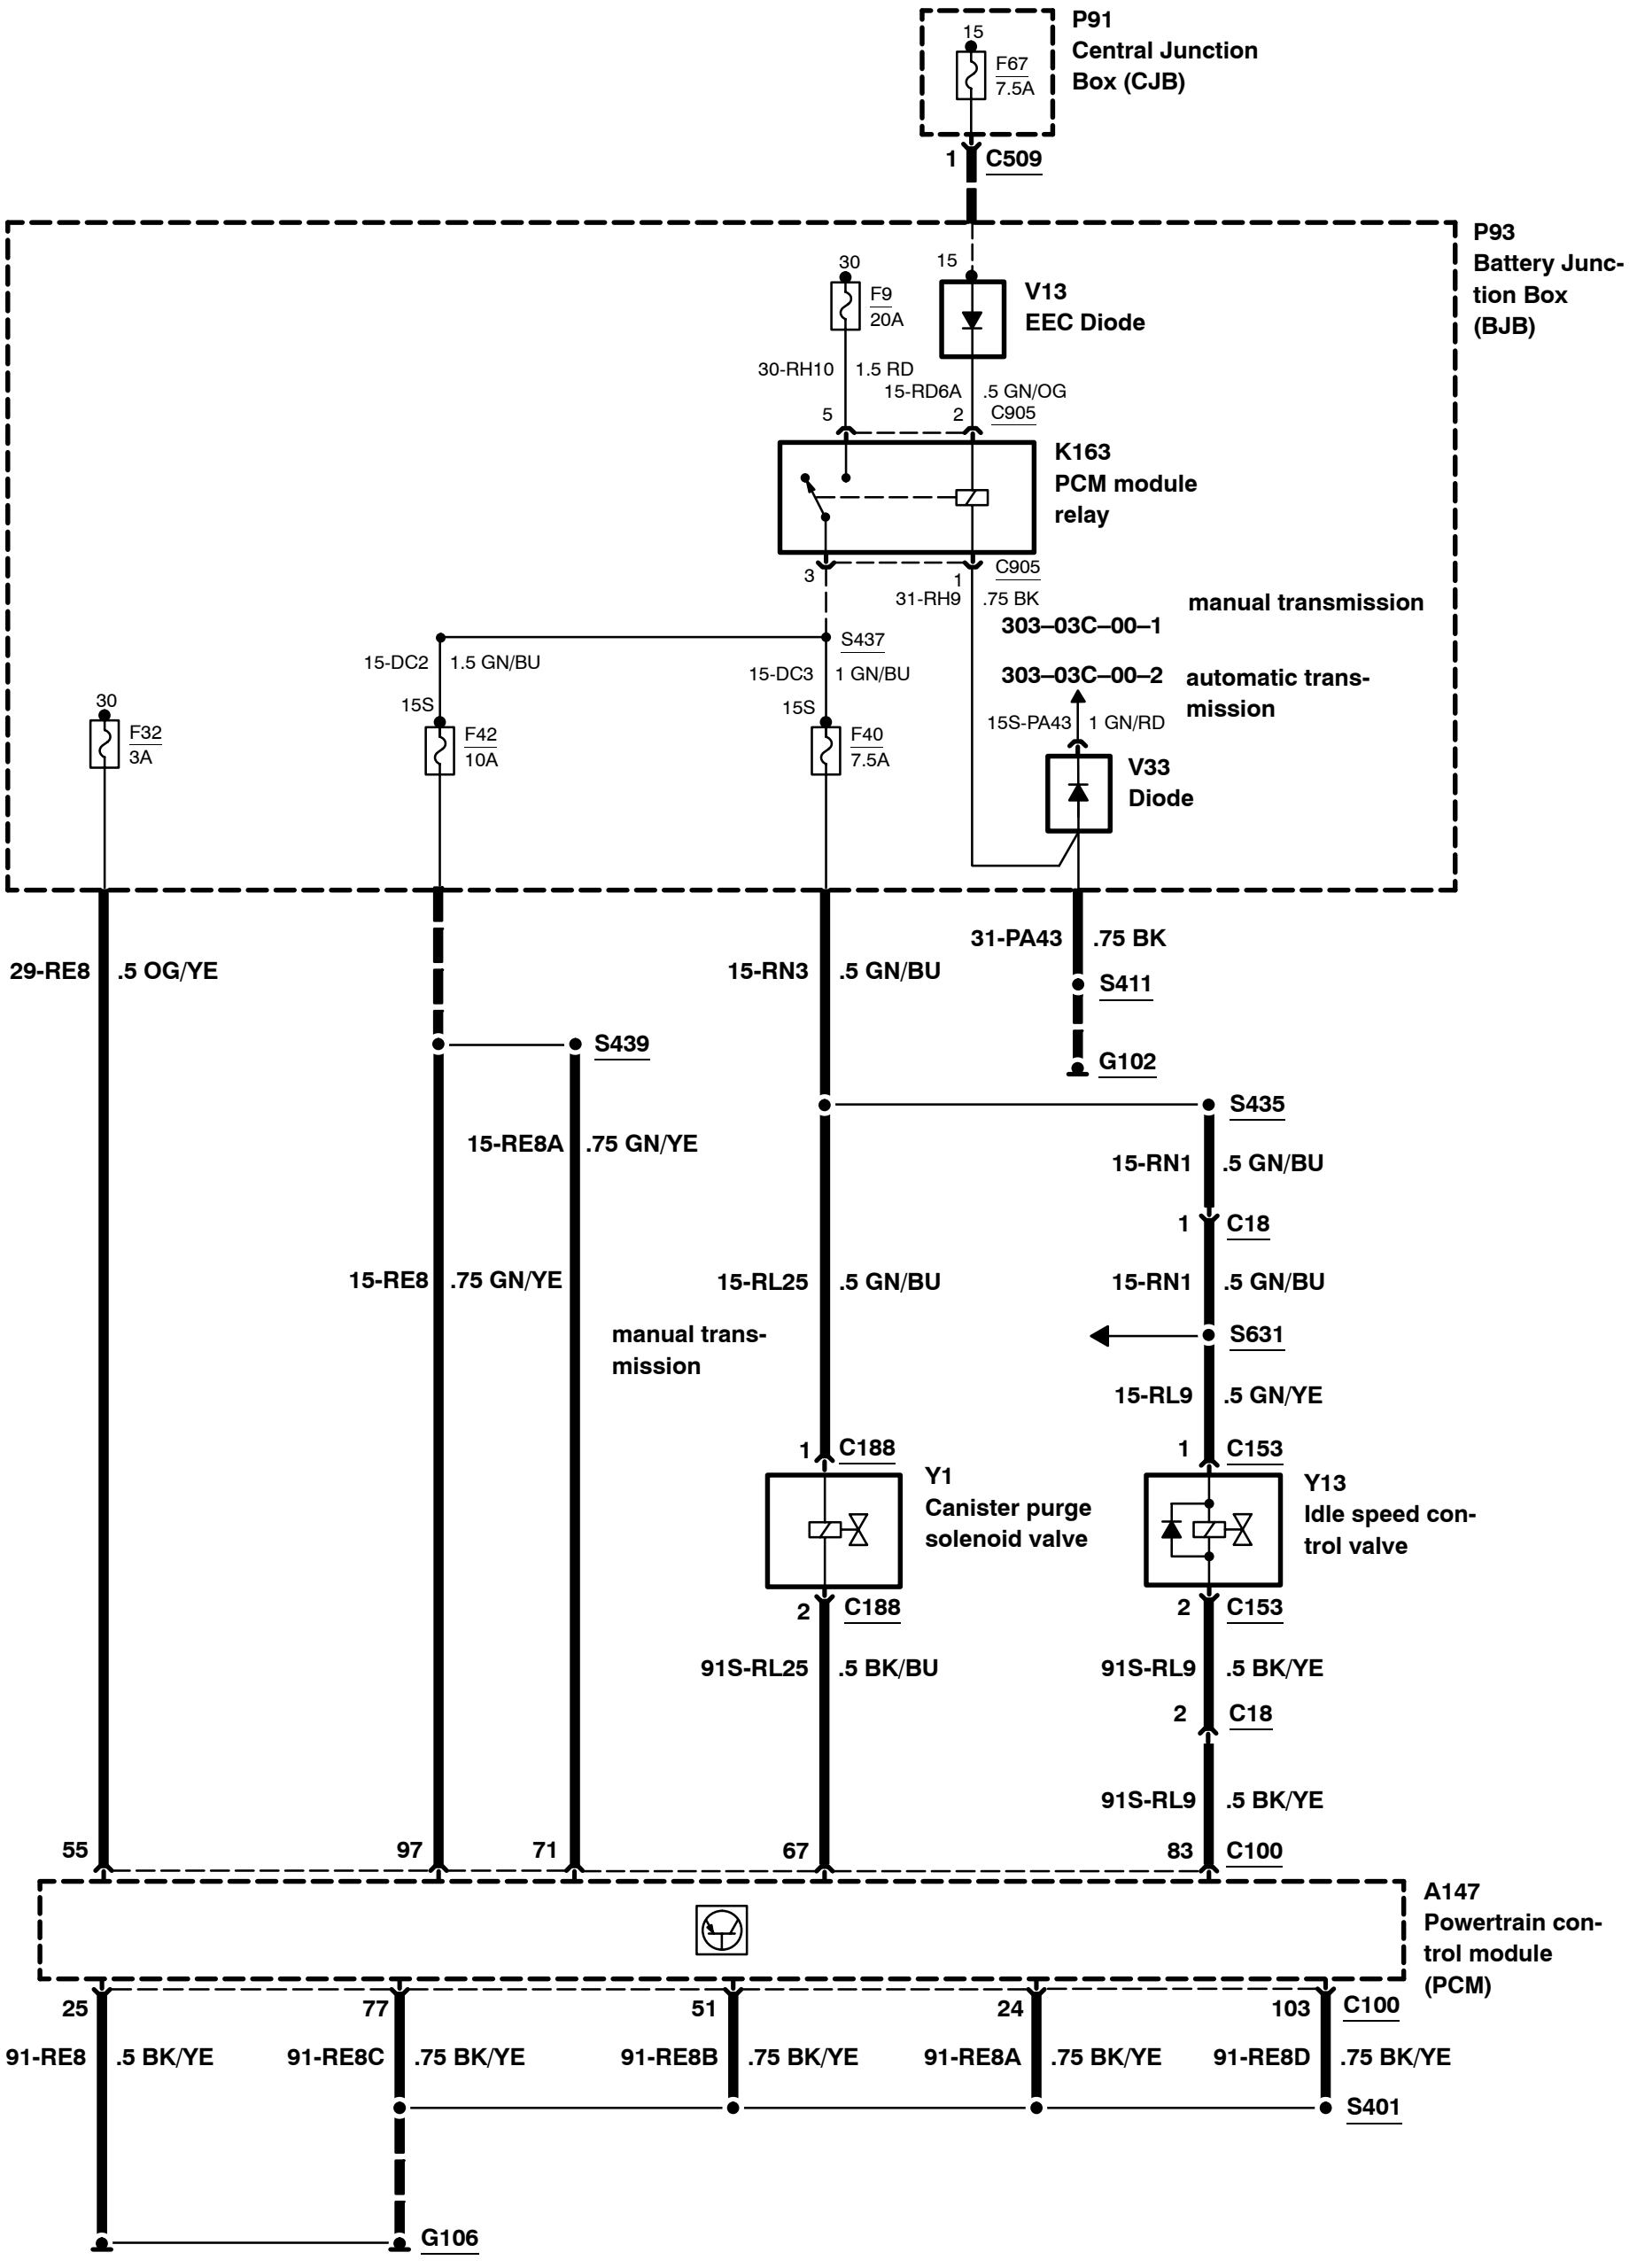


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

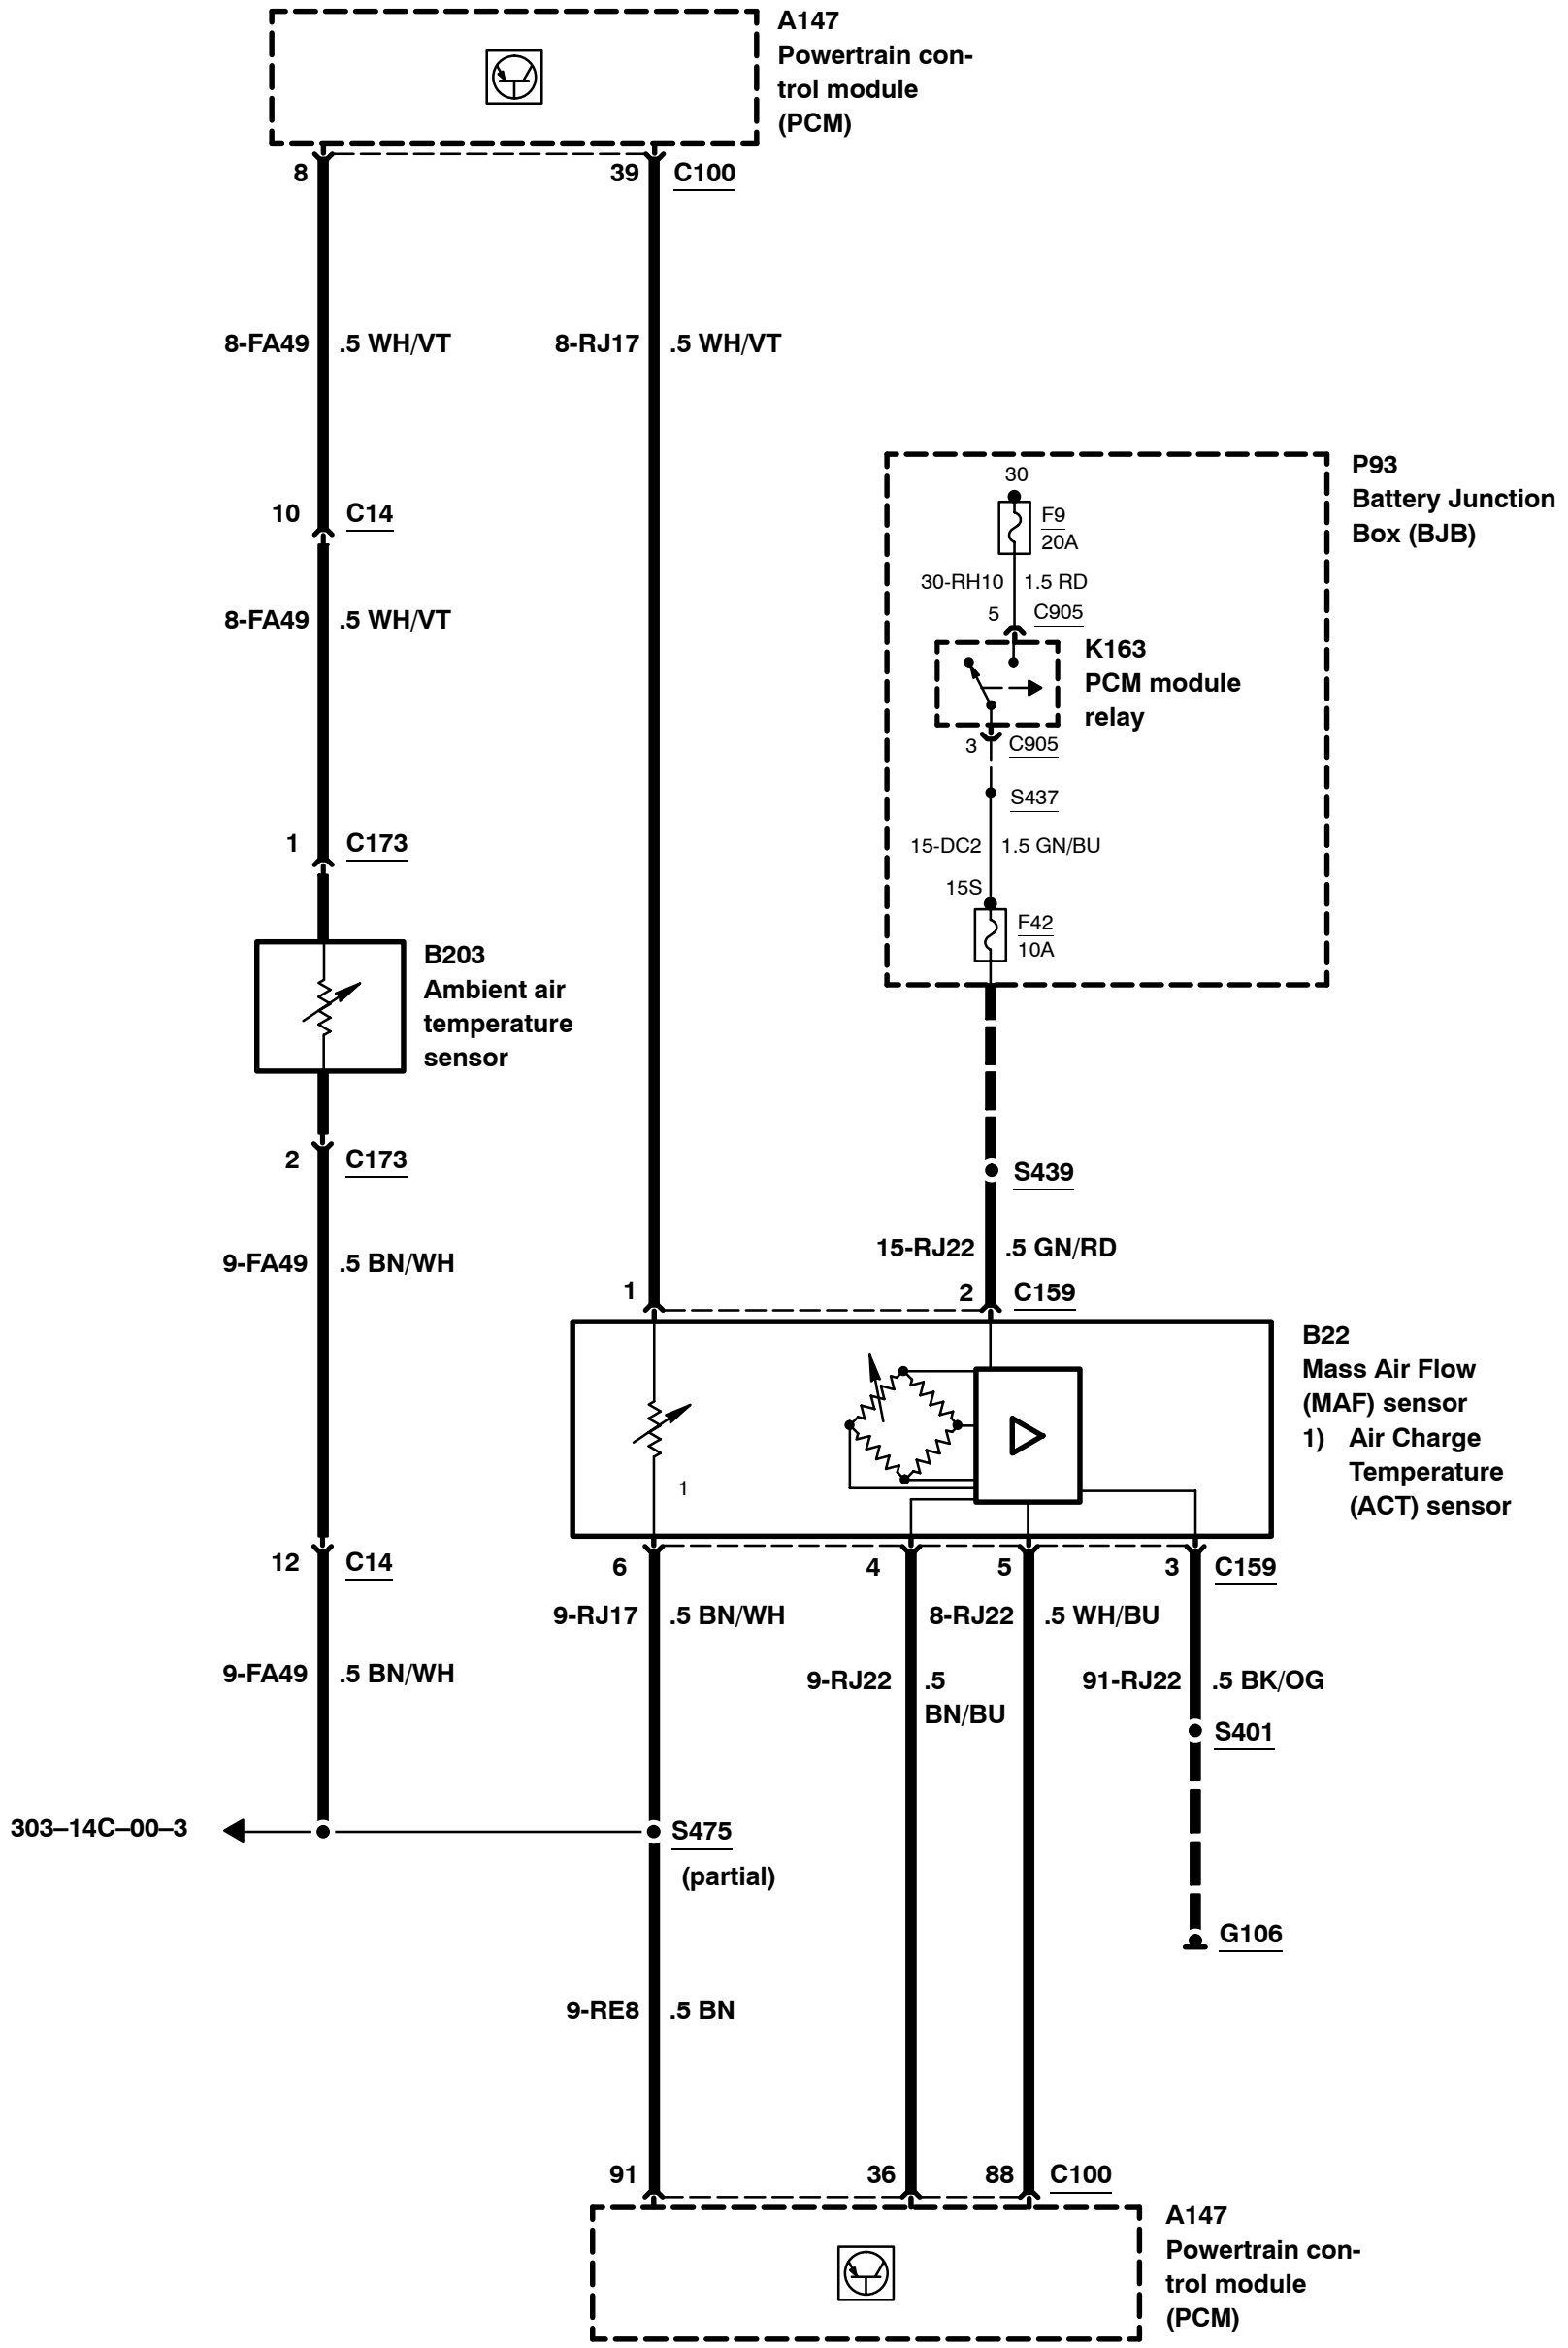


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

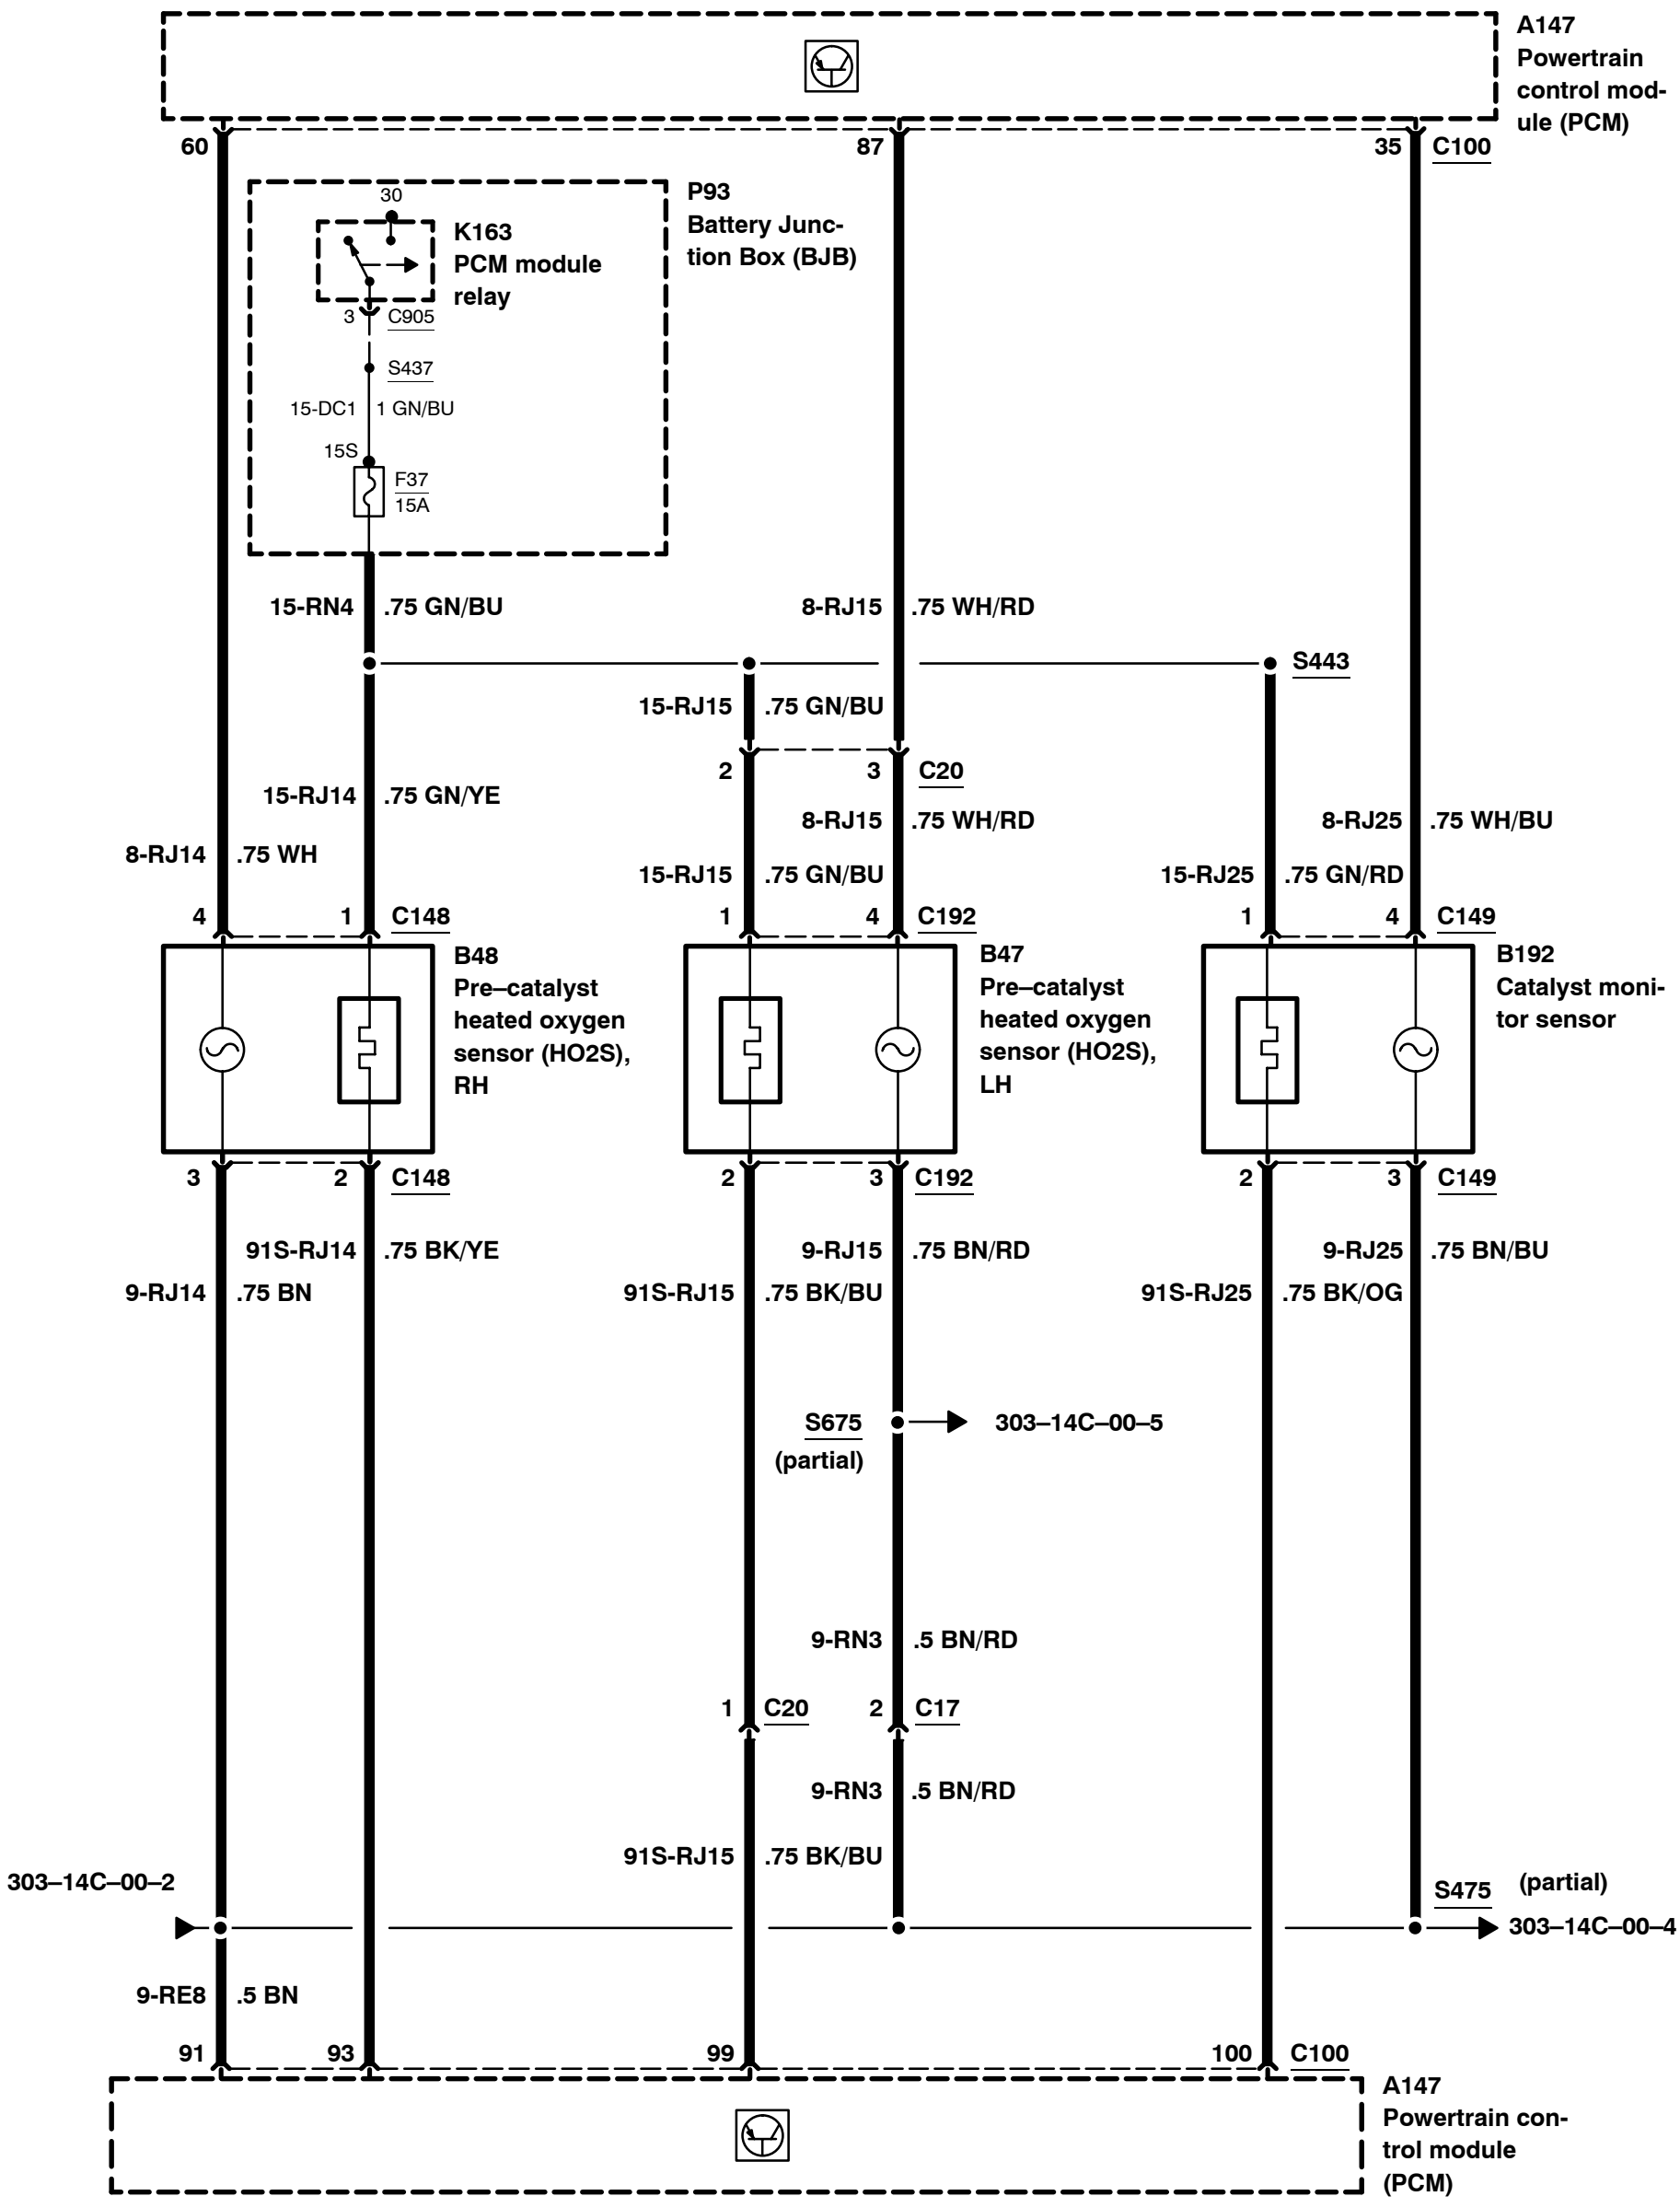


Electronic Engine Controls – 2.5L Duratec–VE (VE6), manual transmission

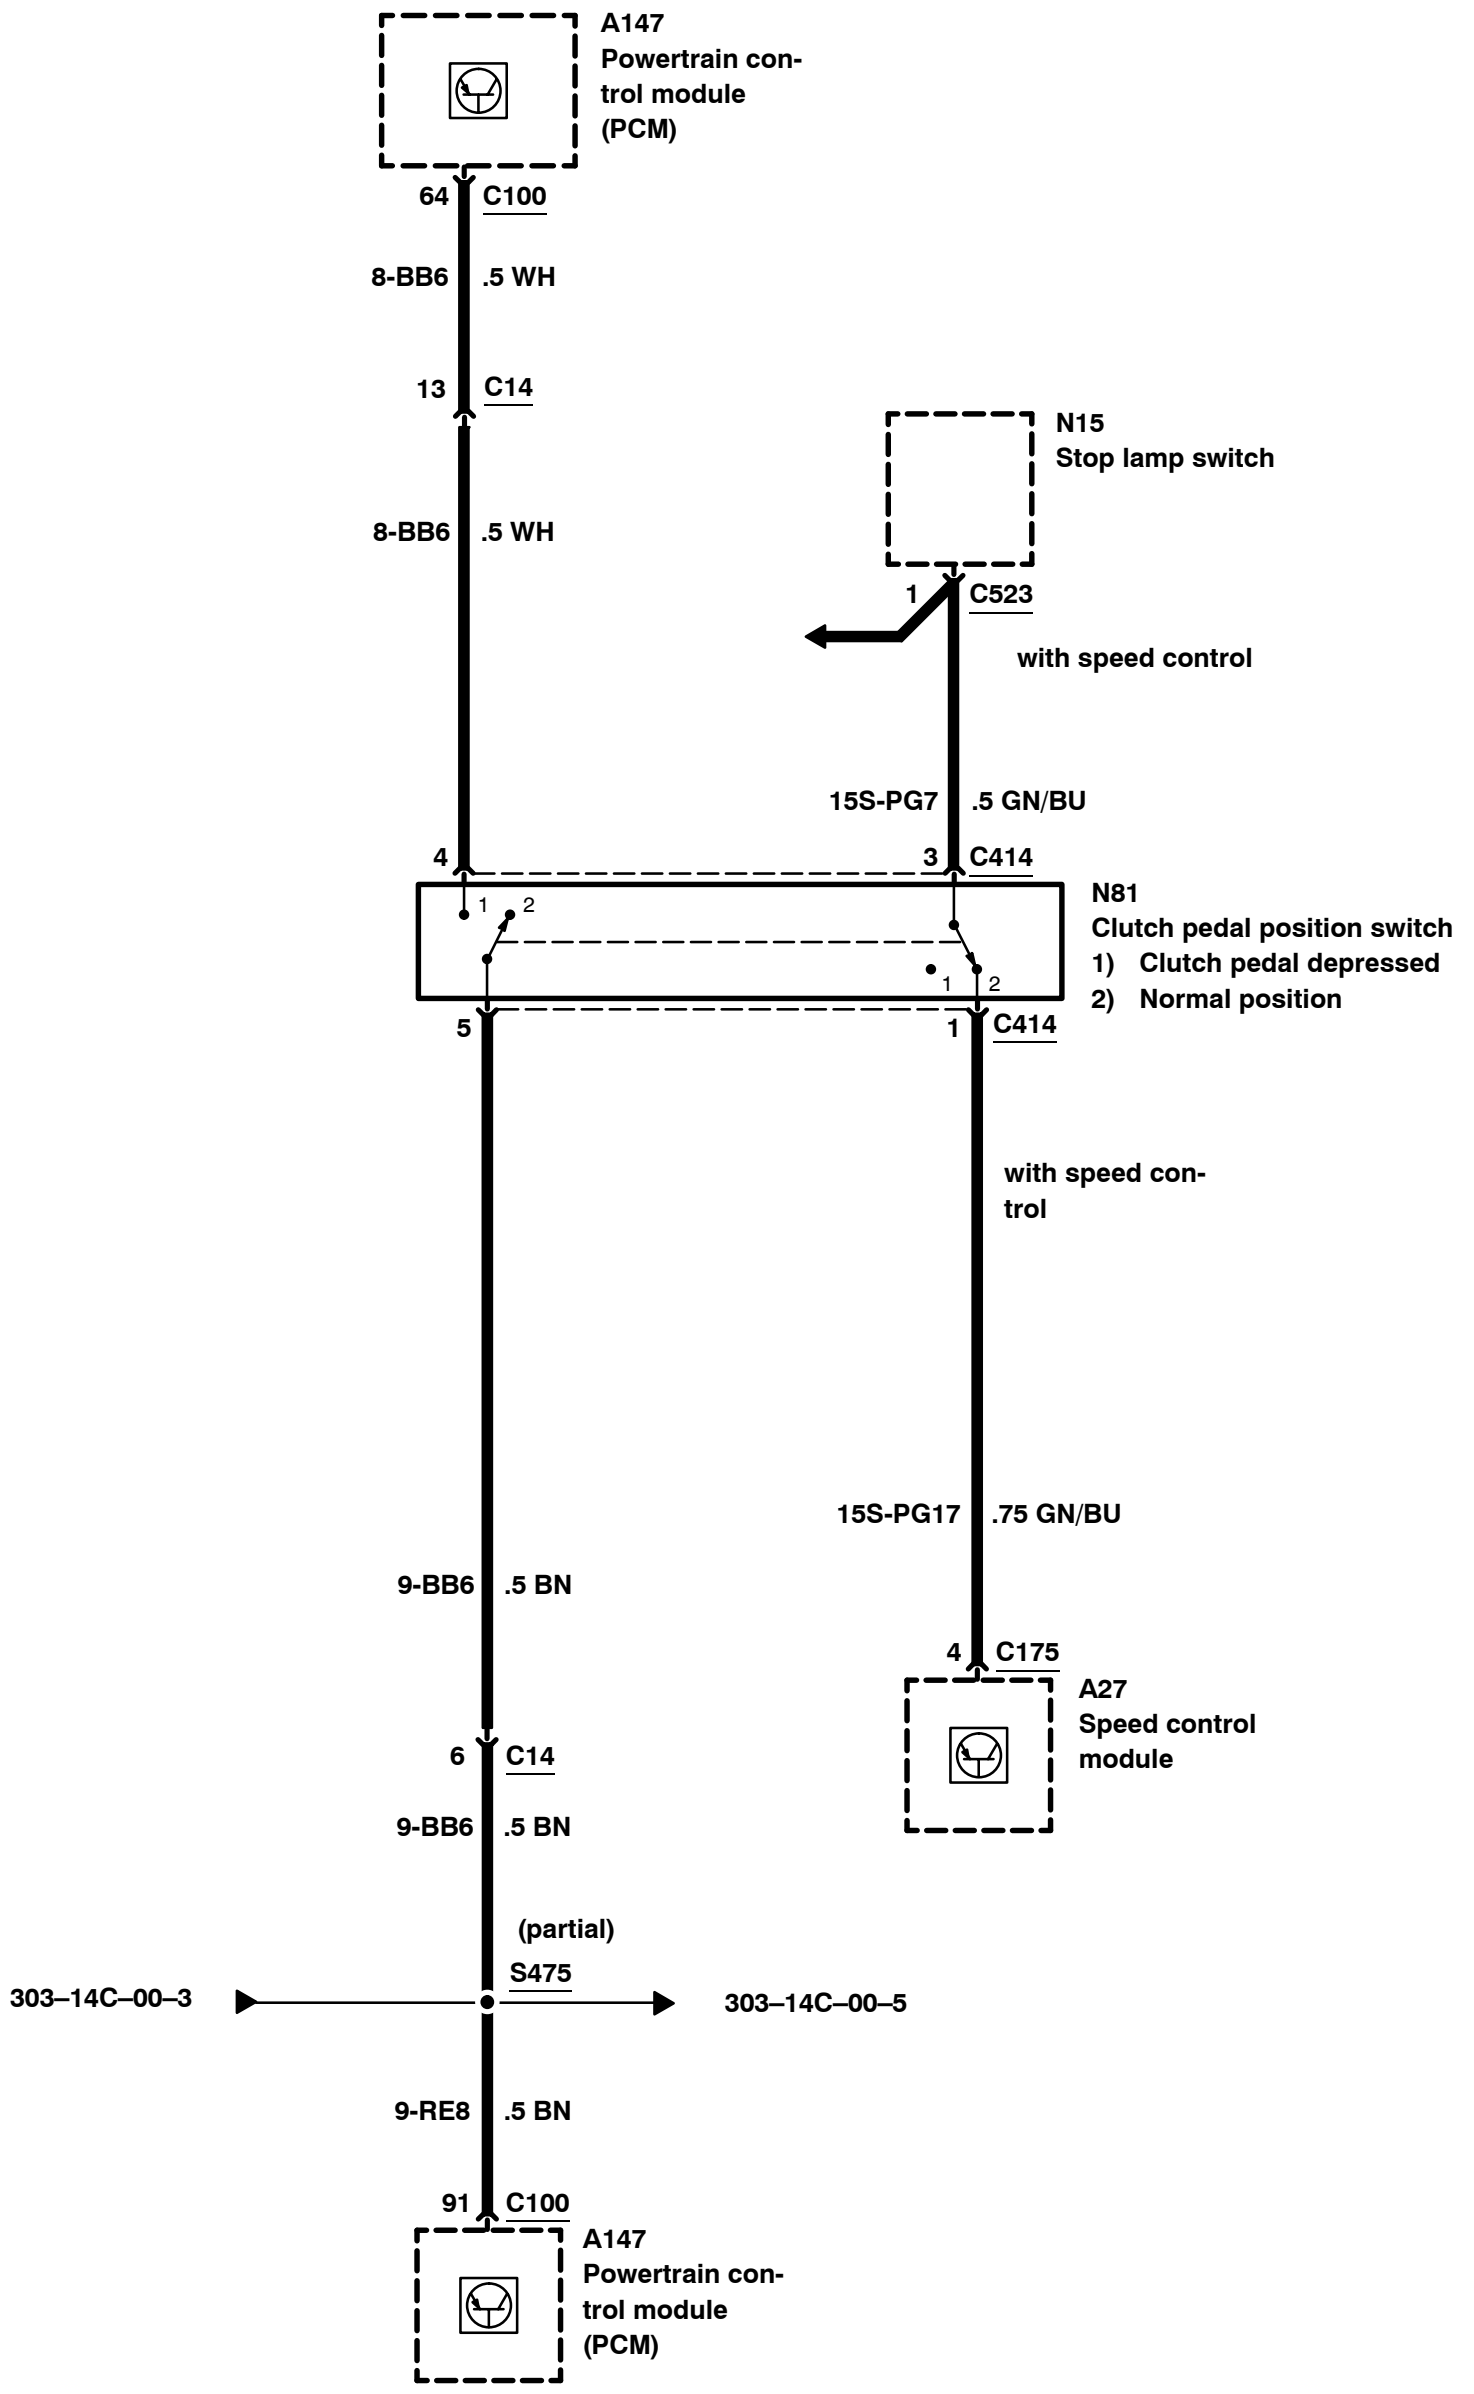


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

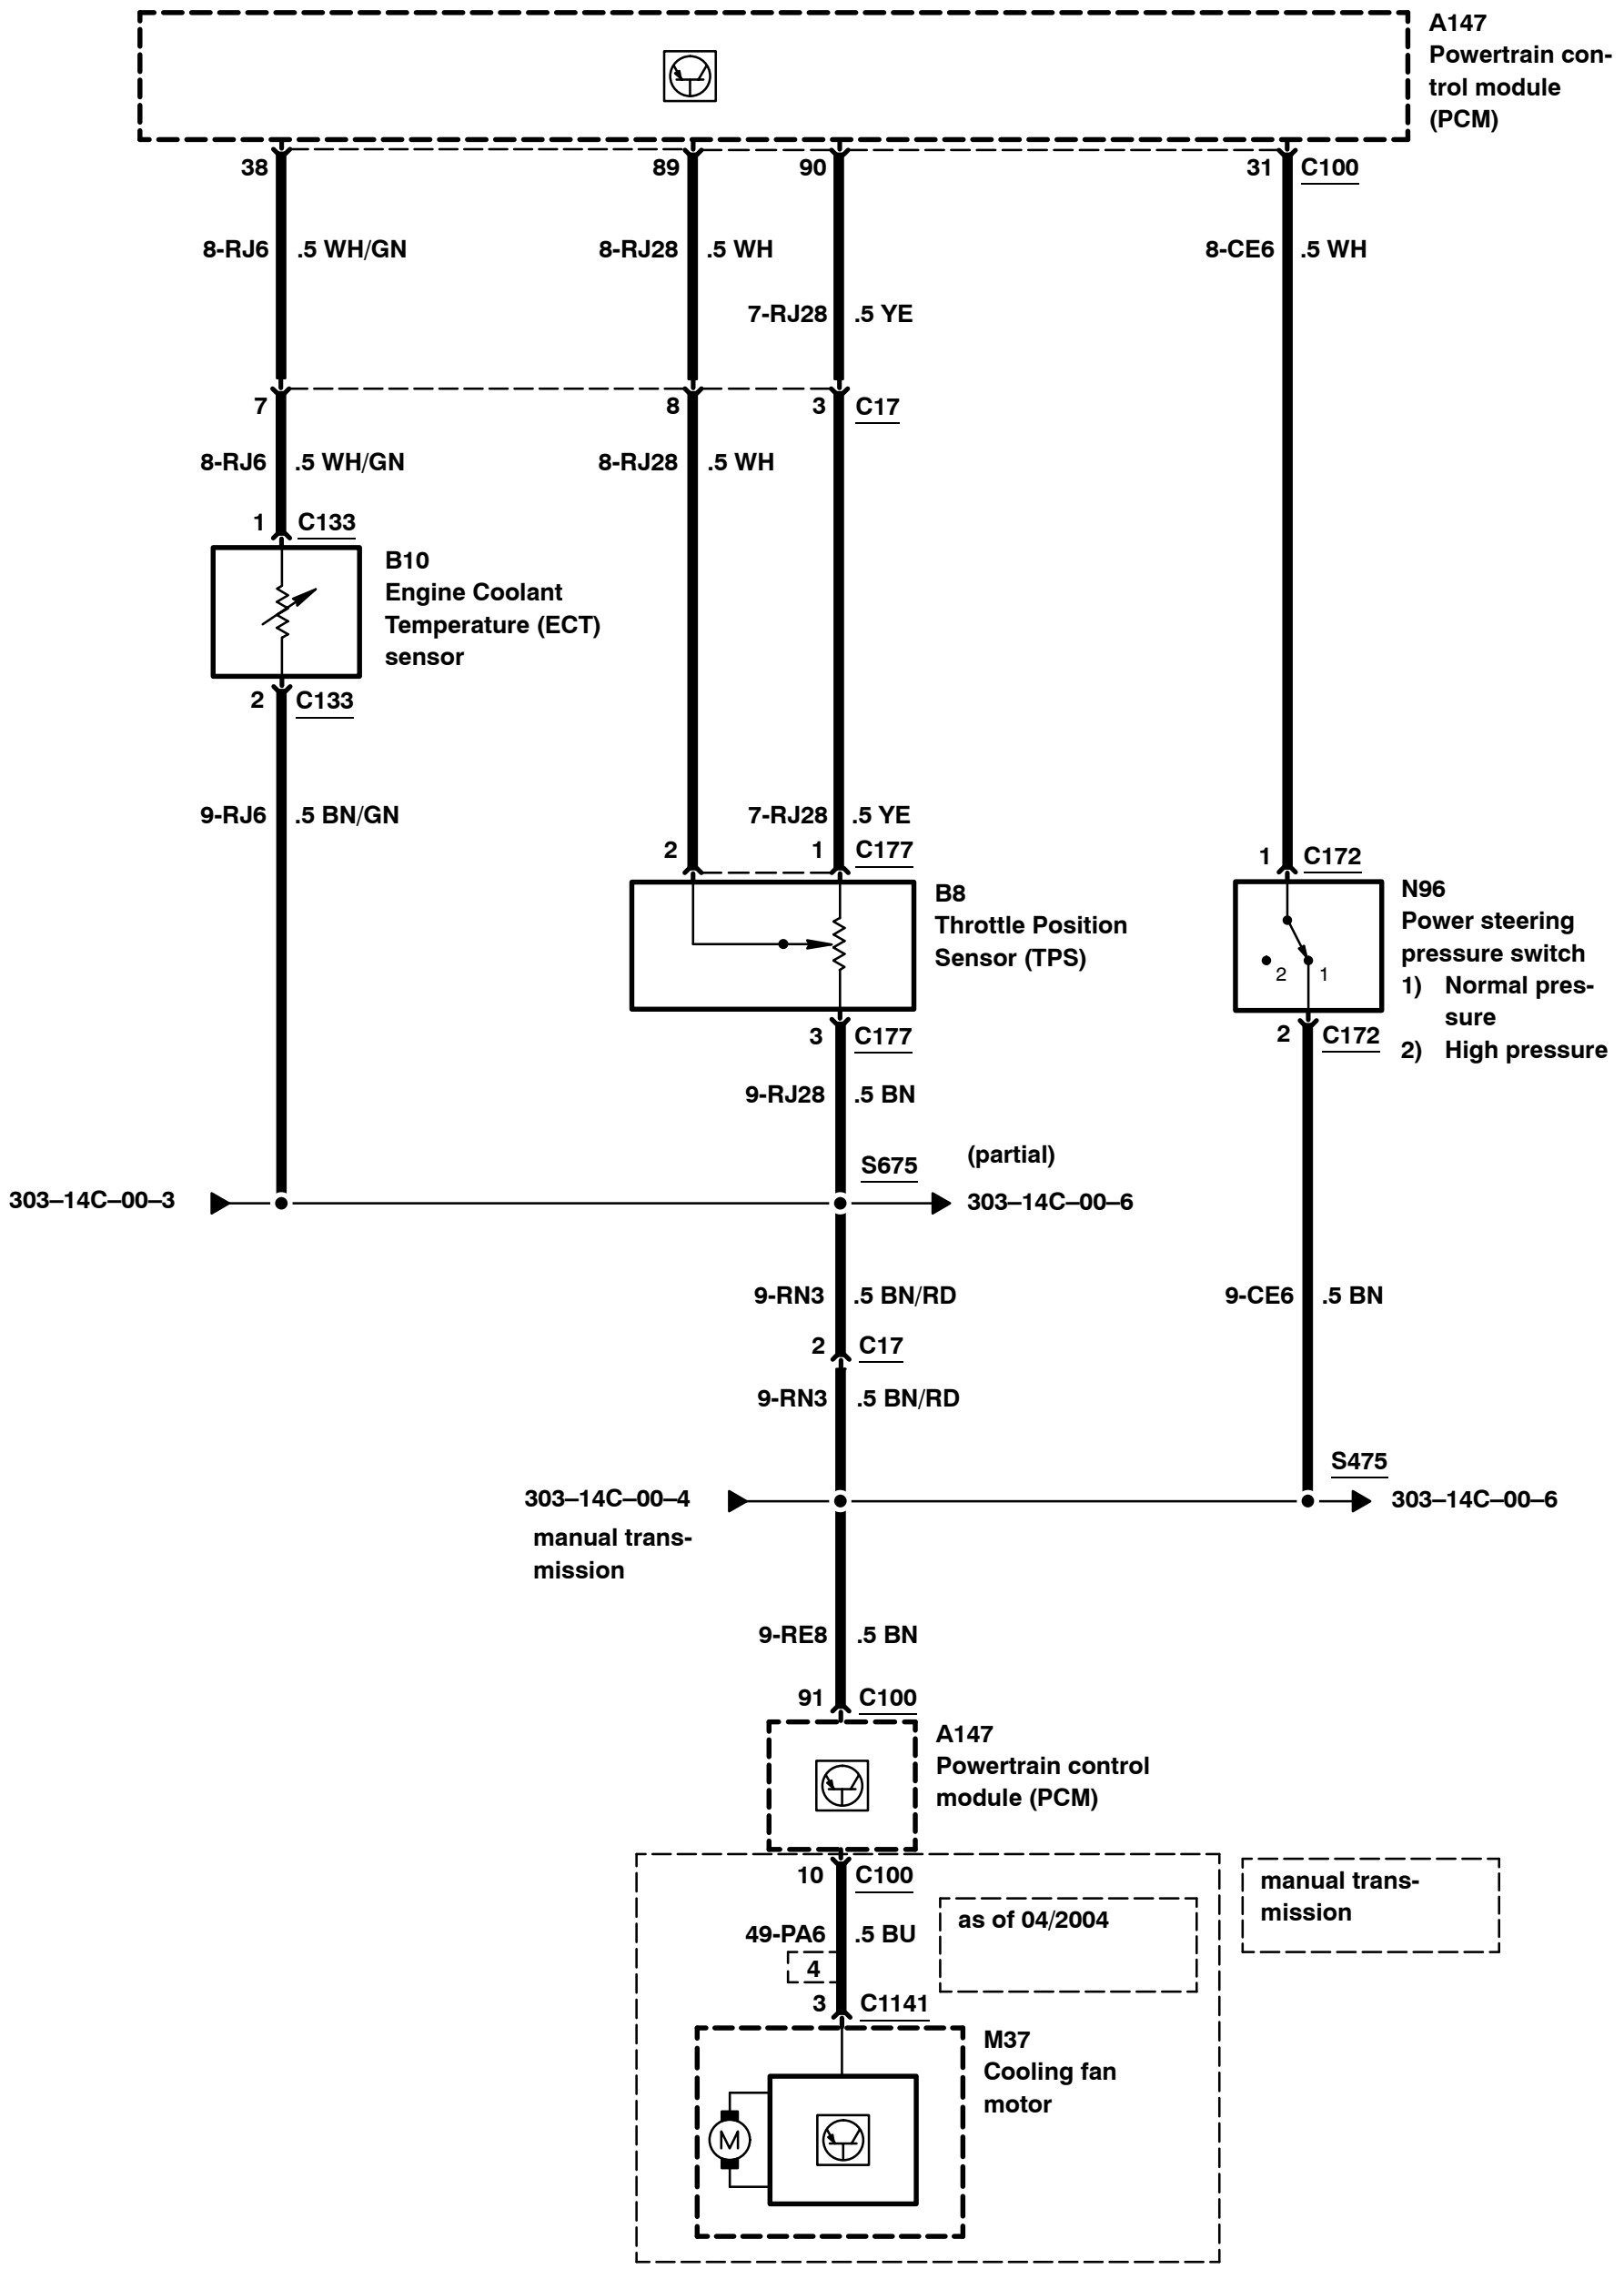


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

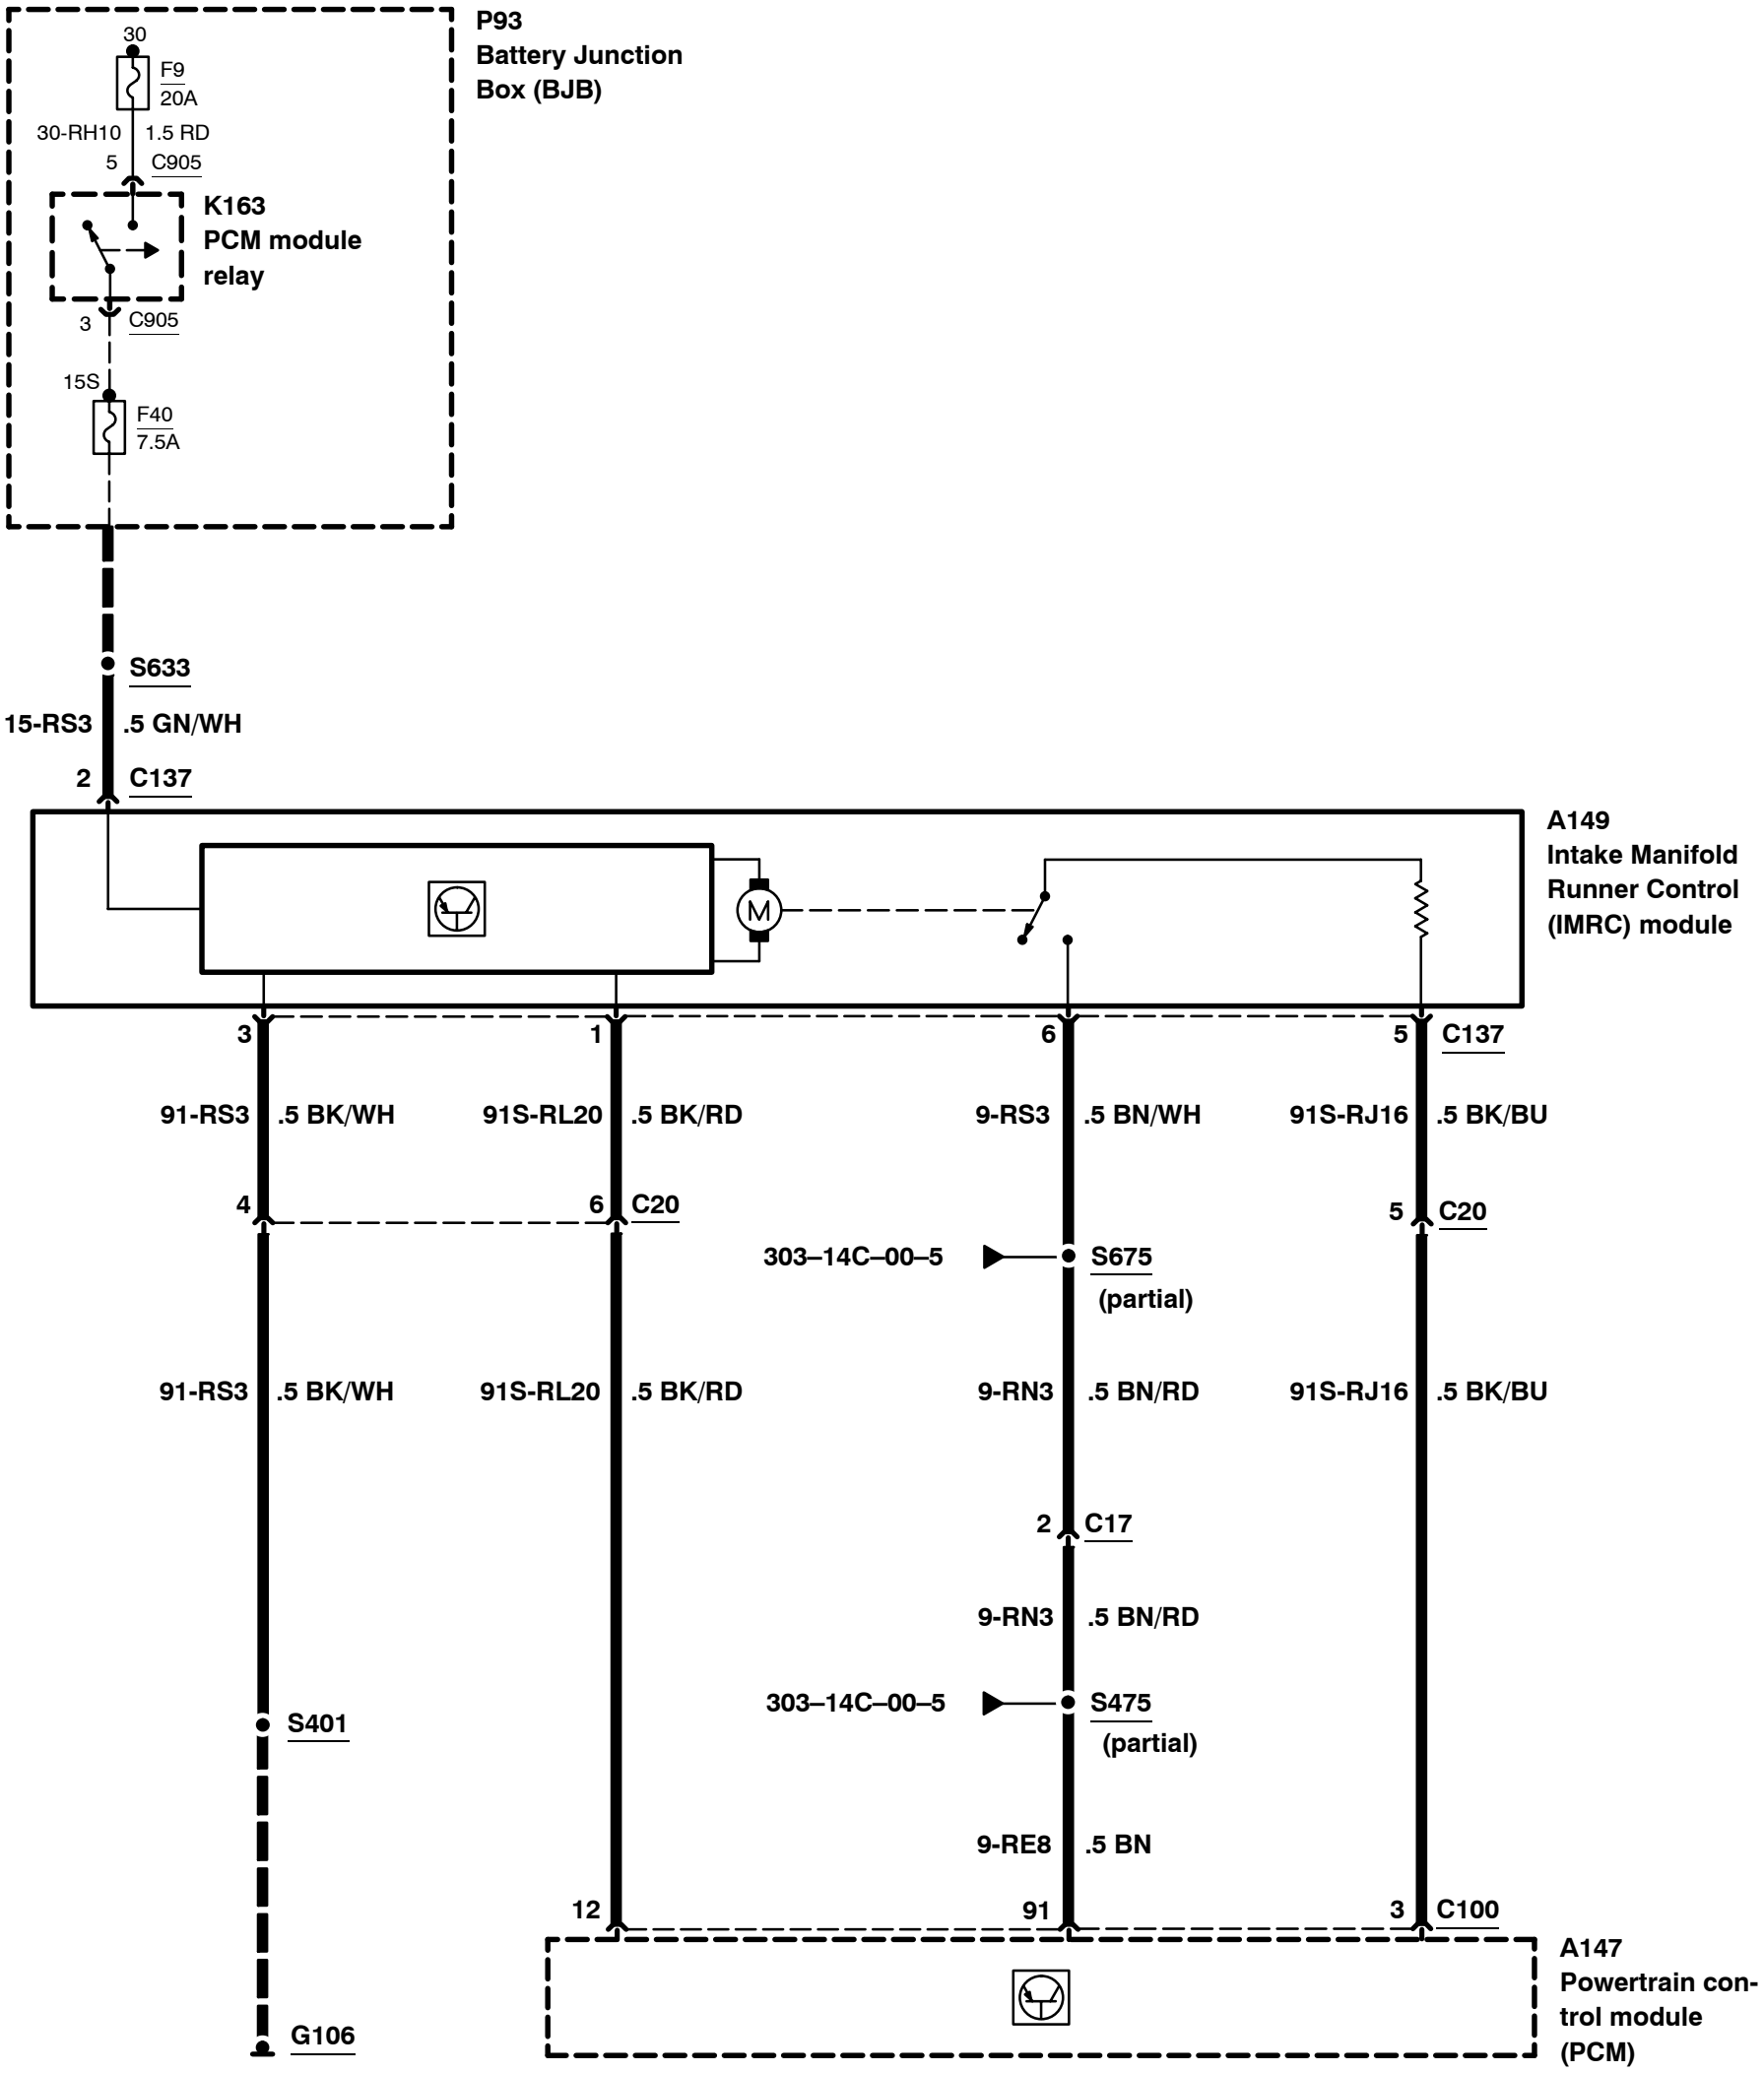


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

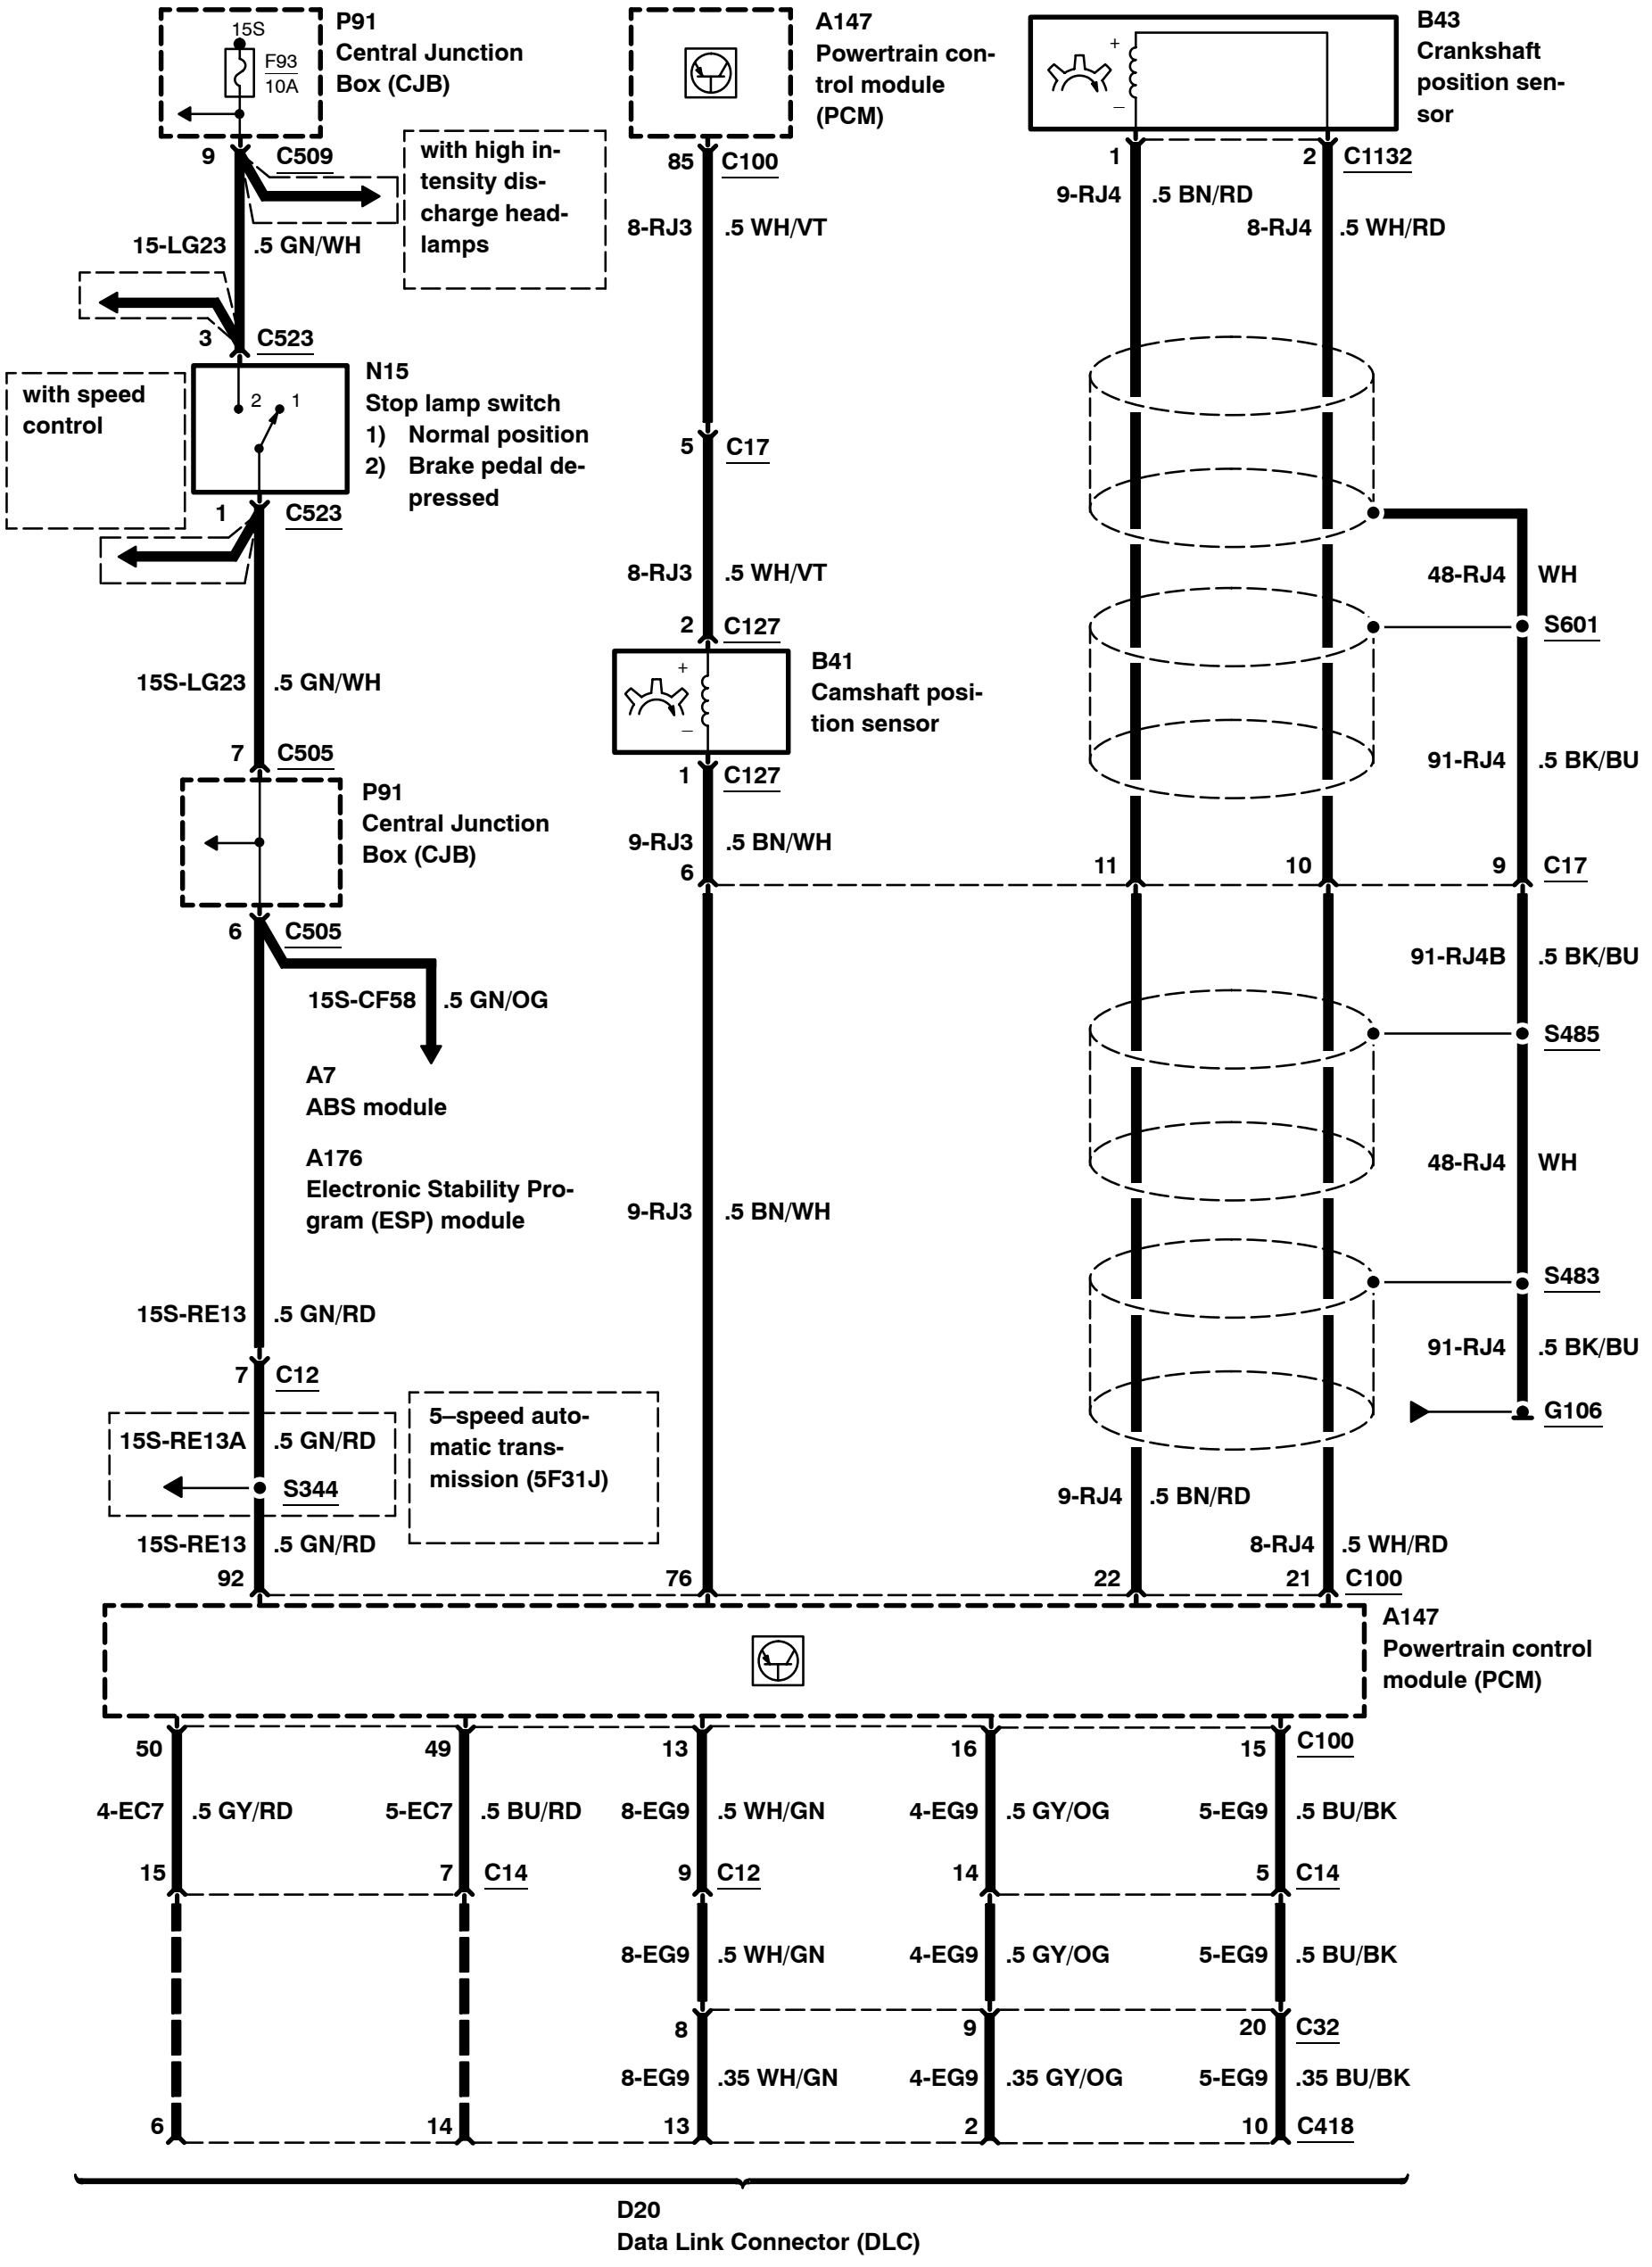


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

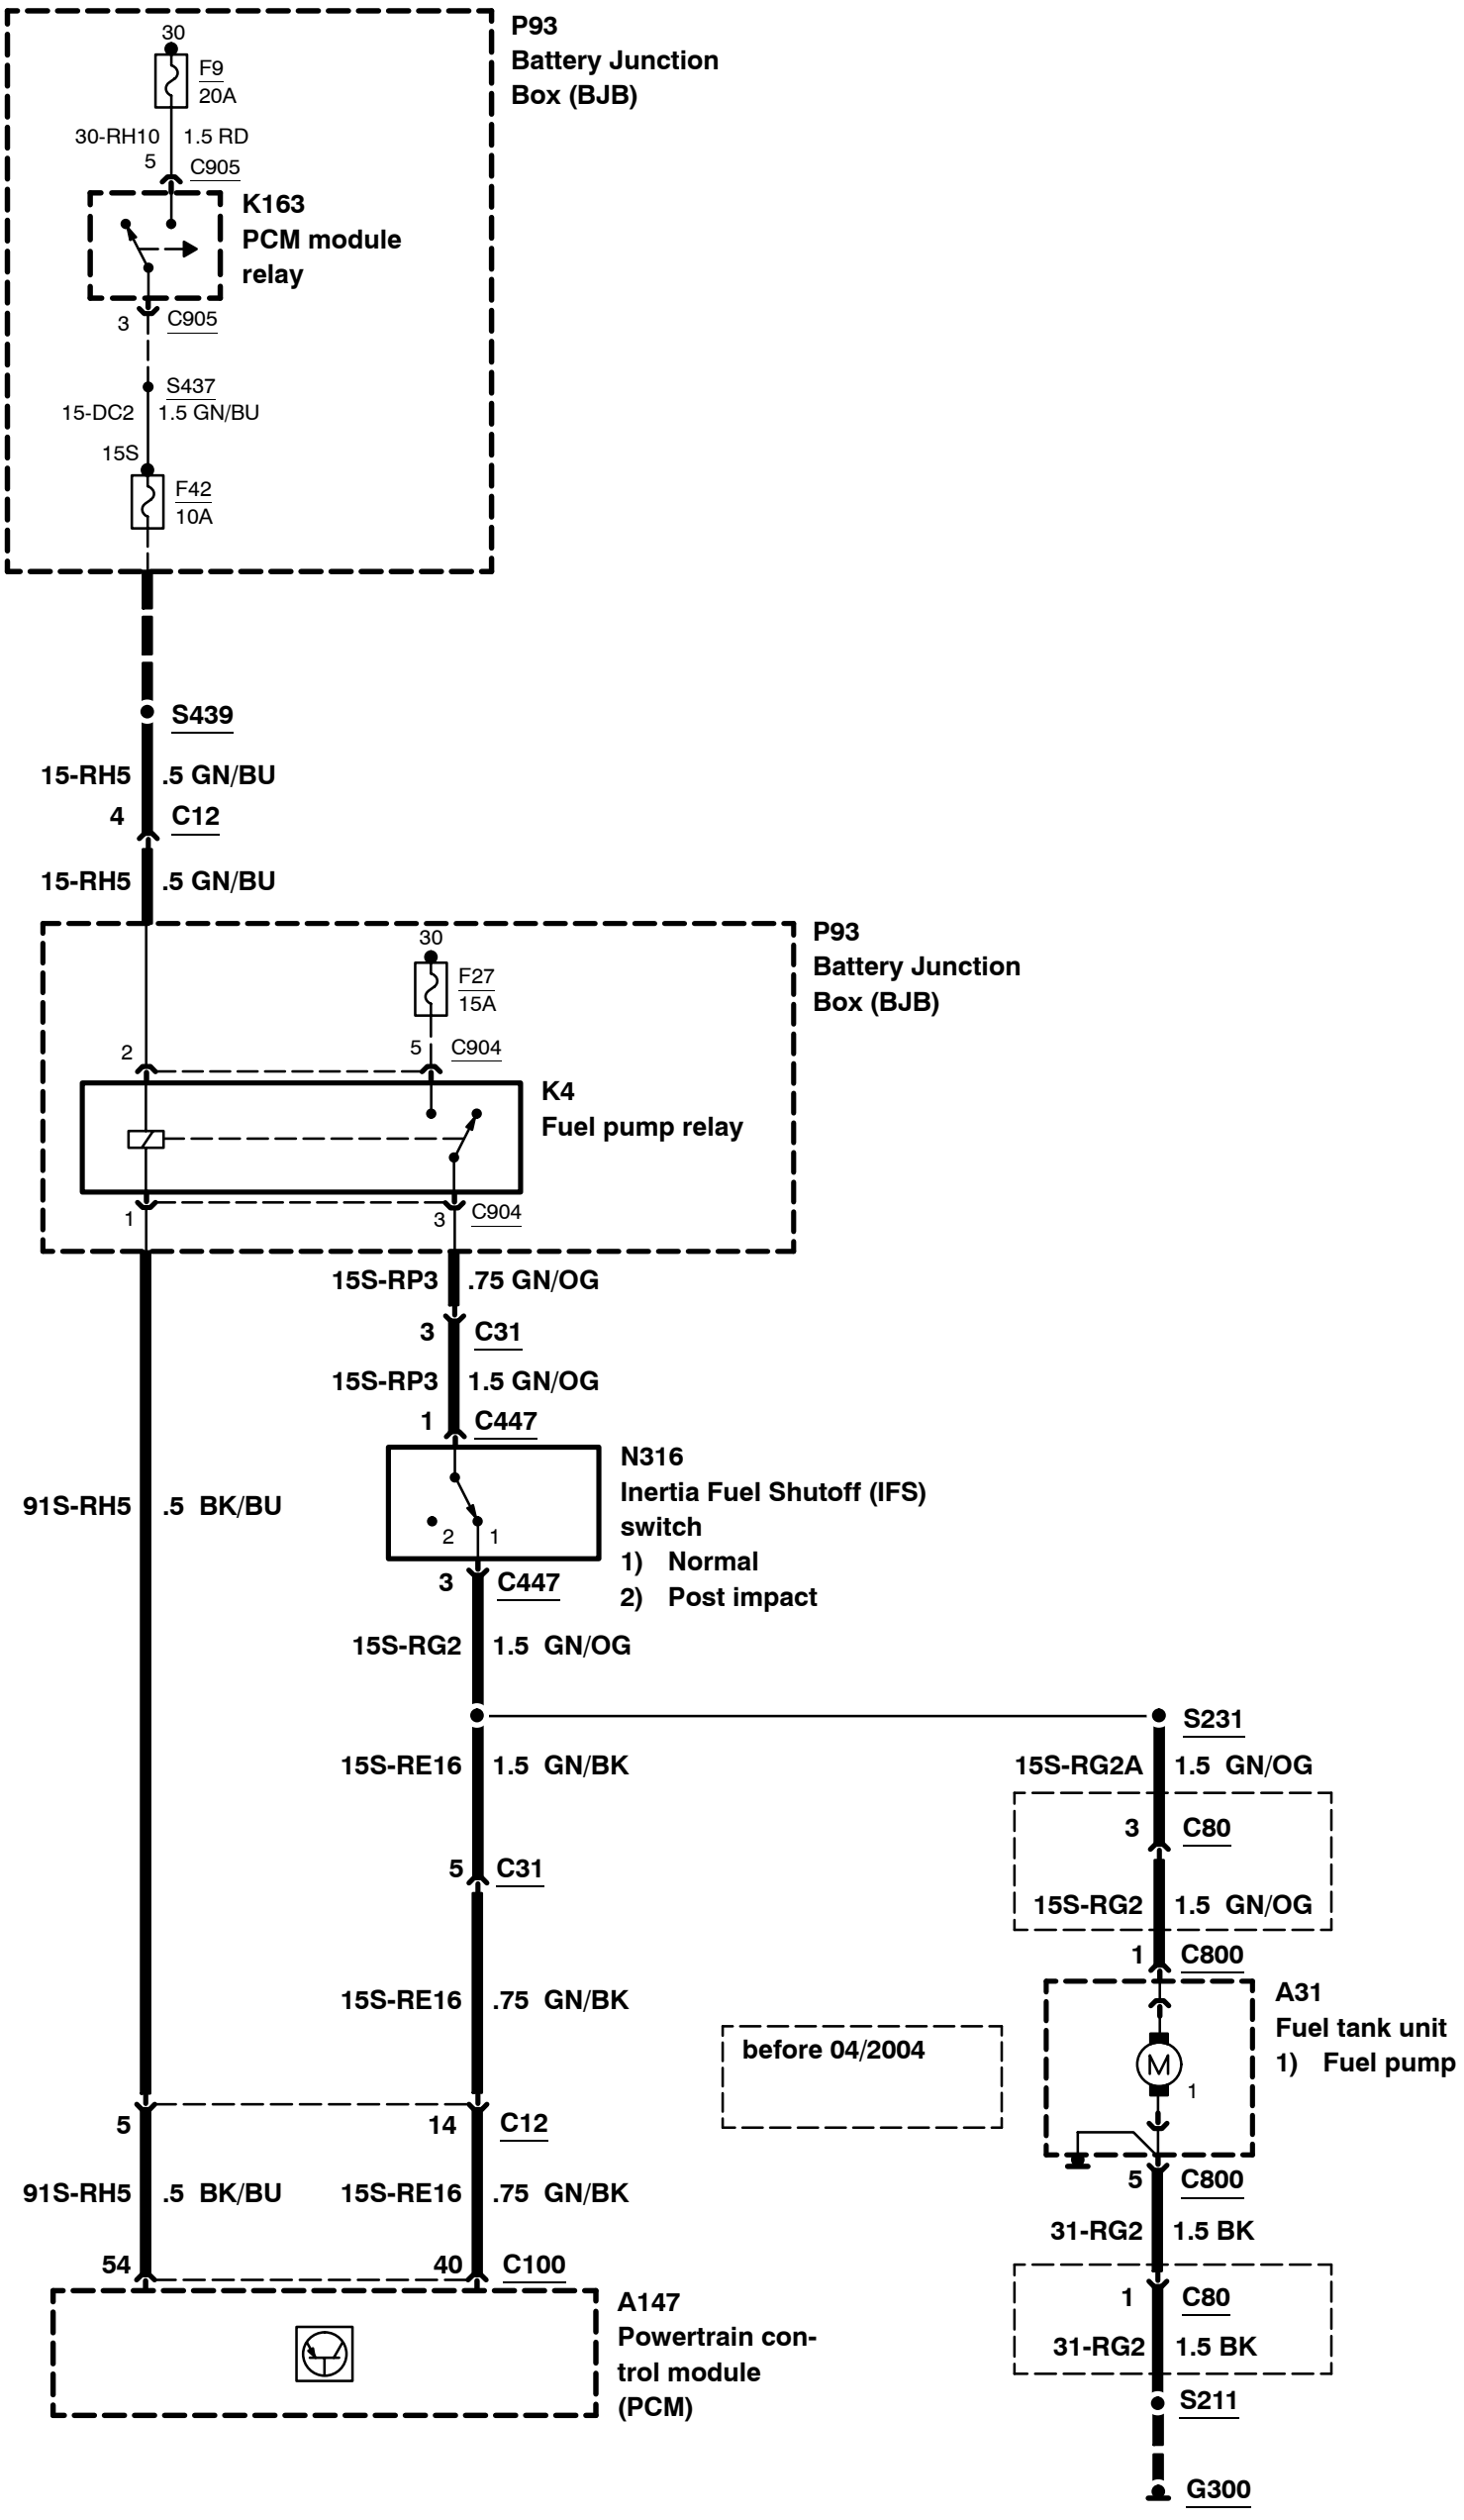


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

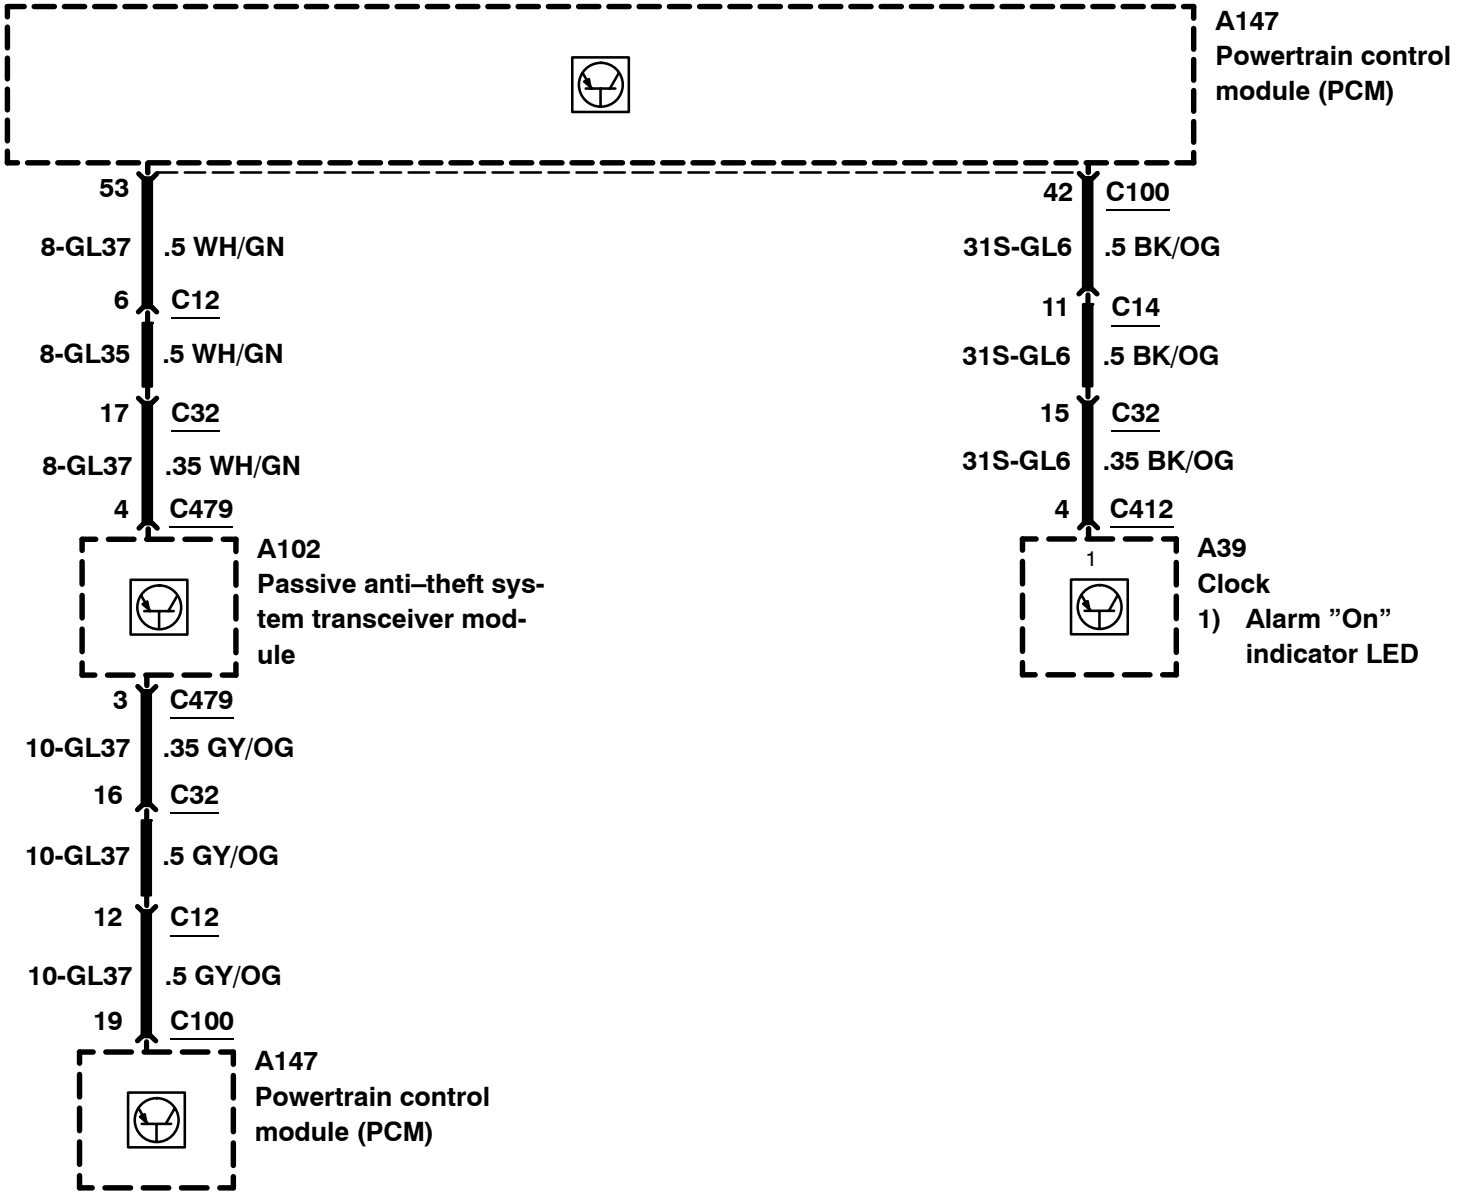


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

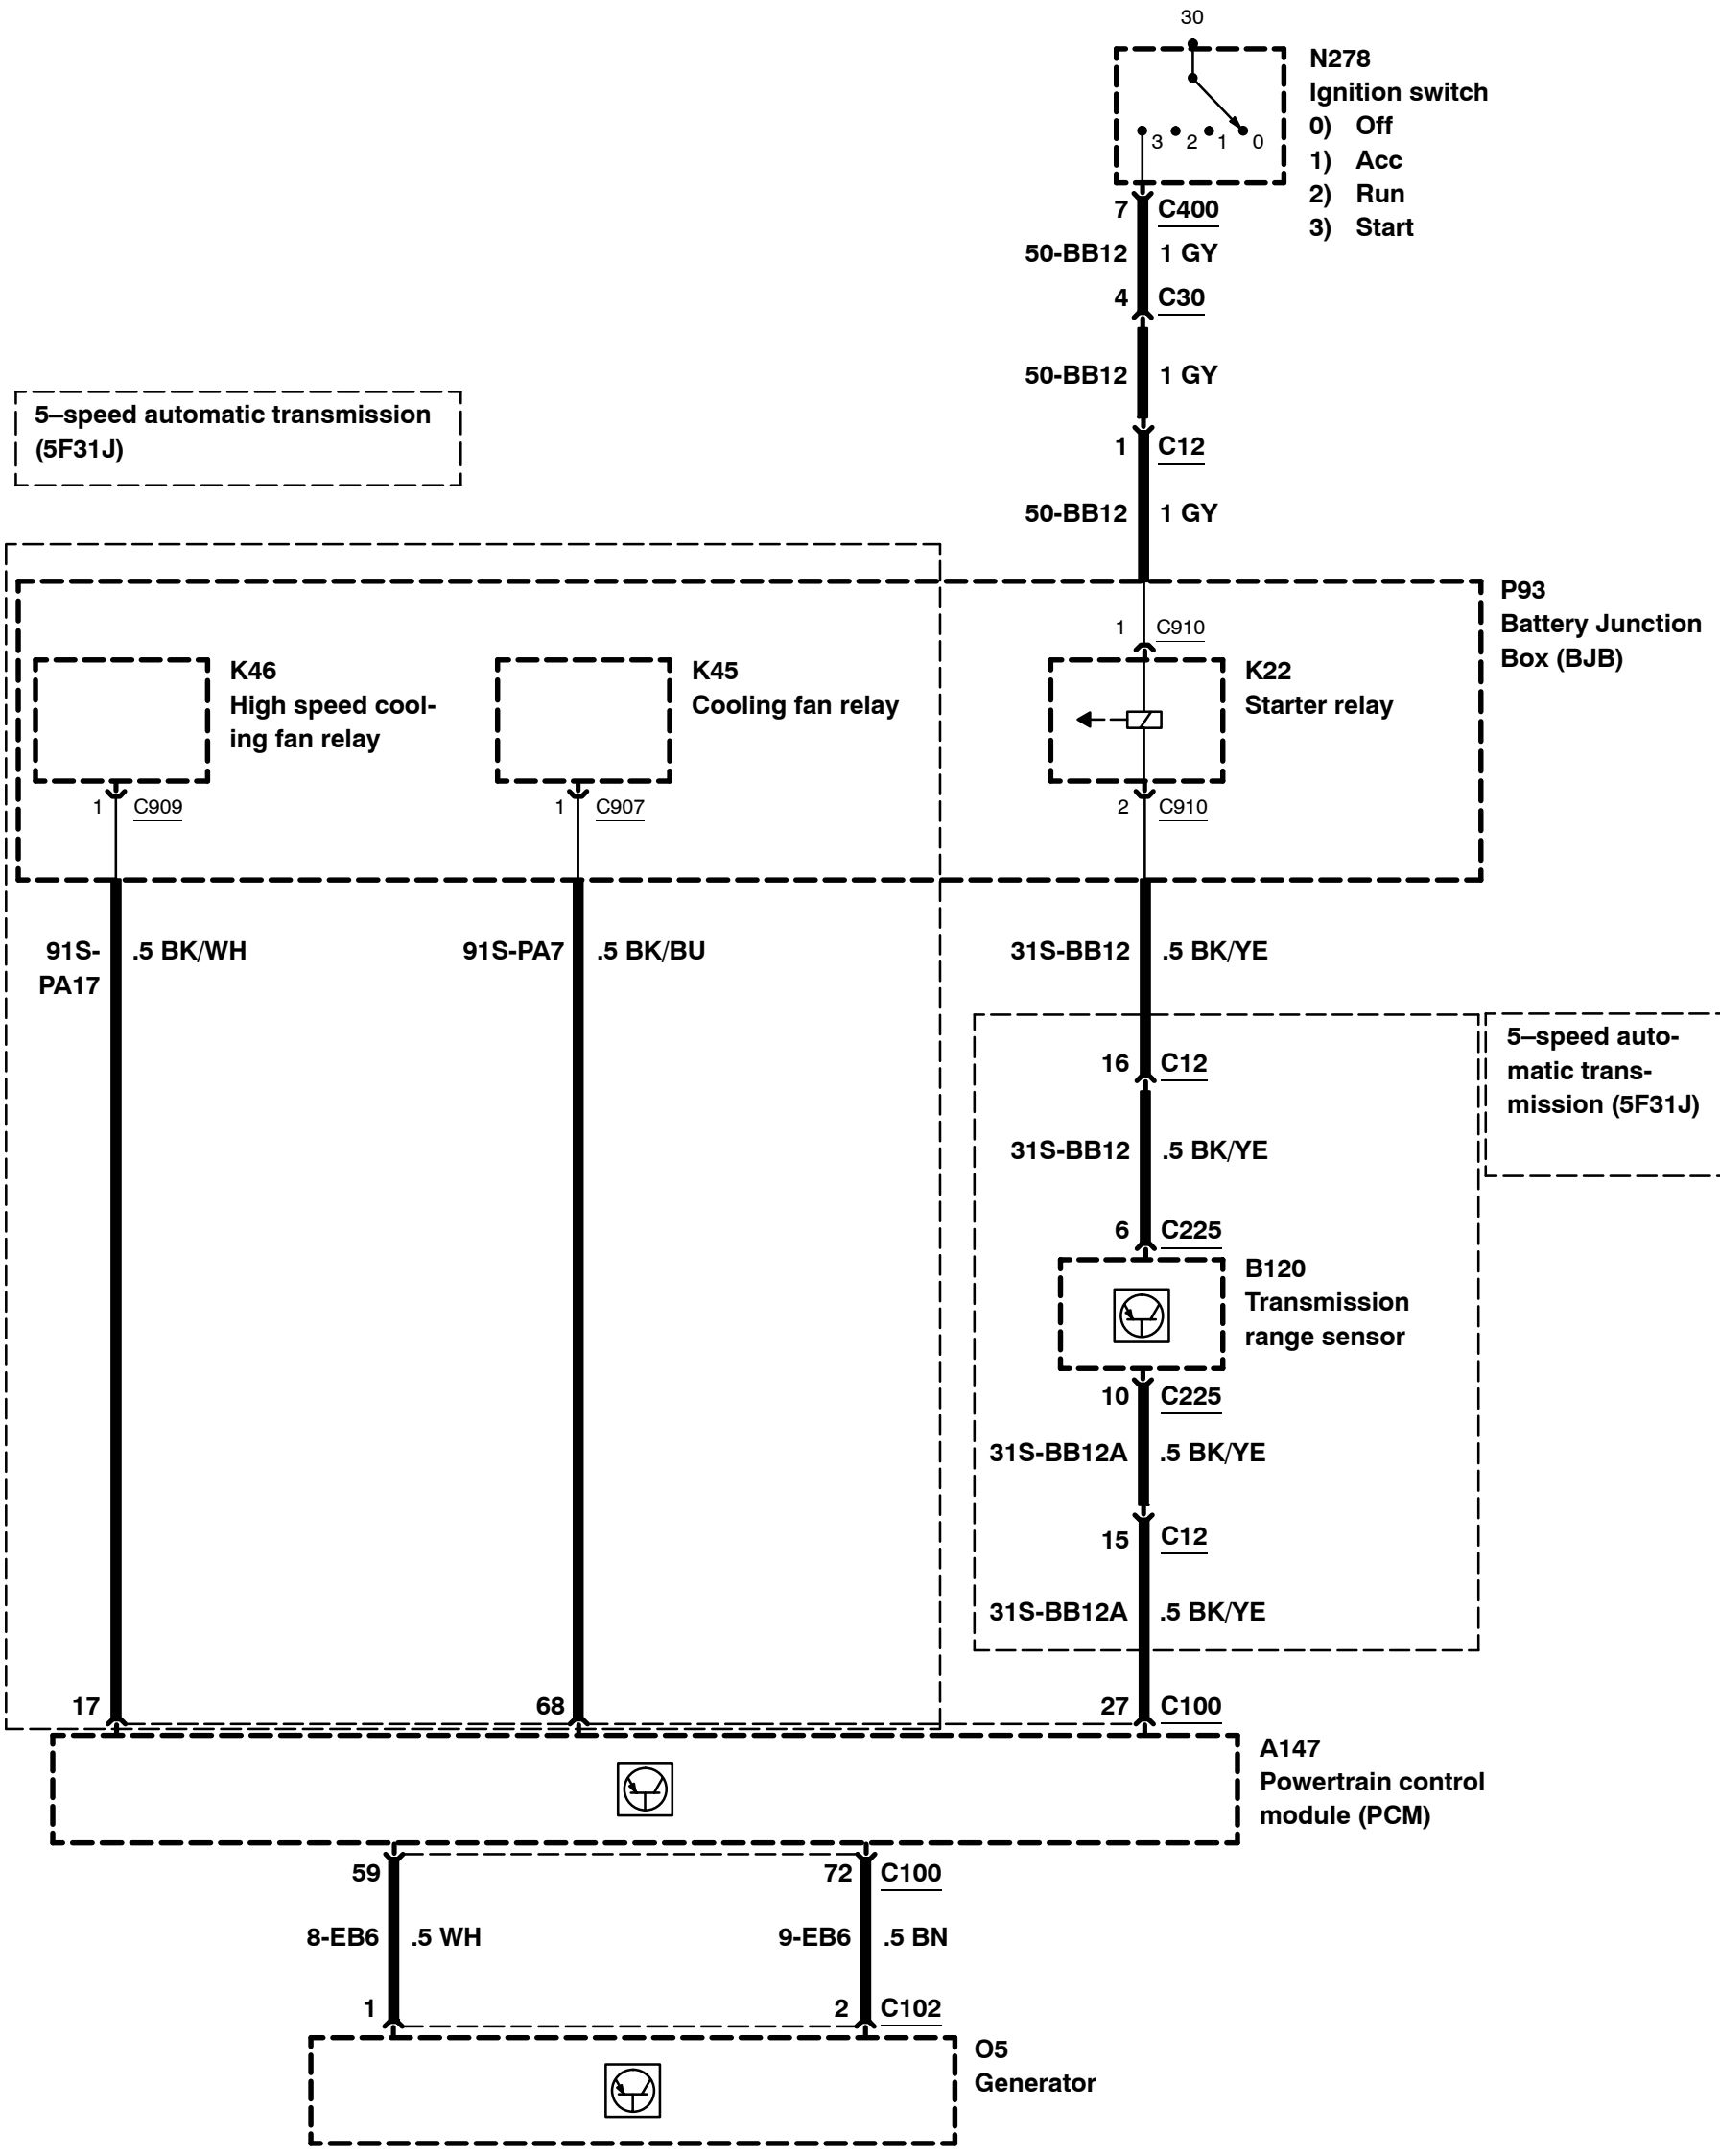

Electronic Engine Controls – 2.5L Duratec–VE (VE6)

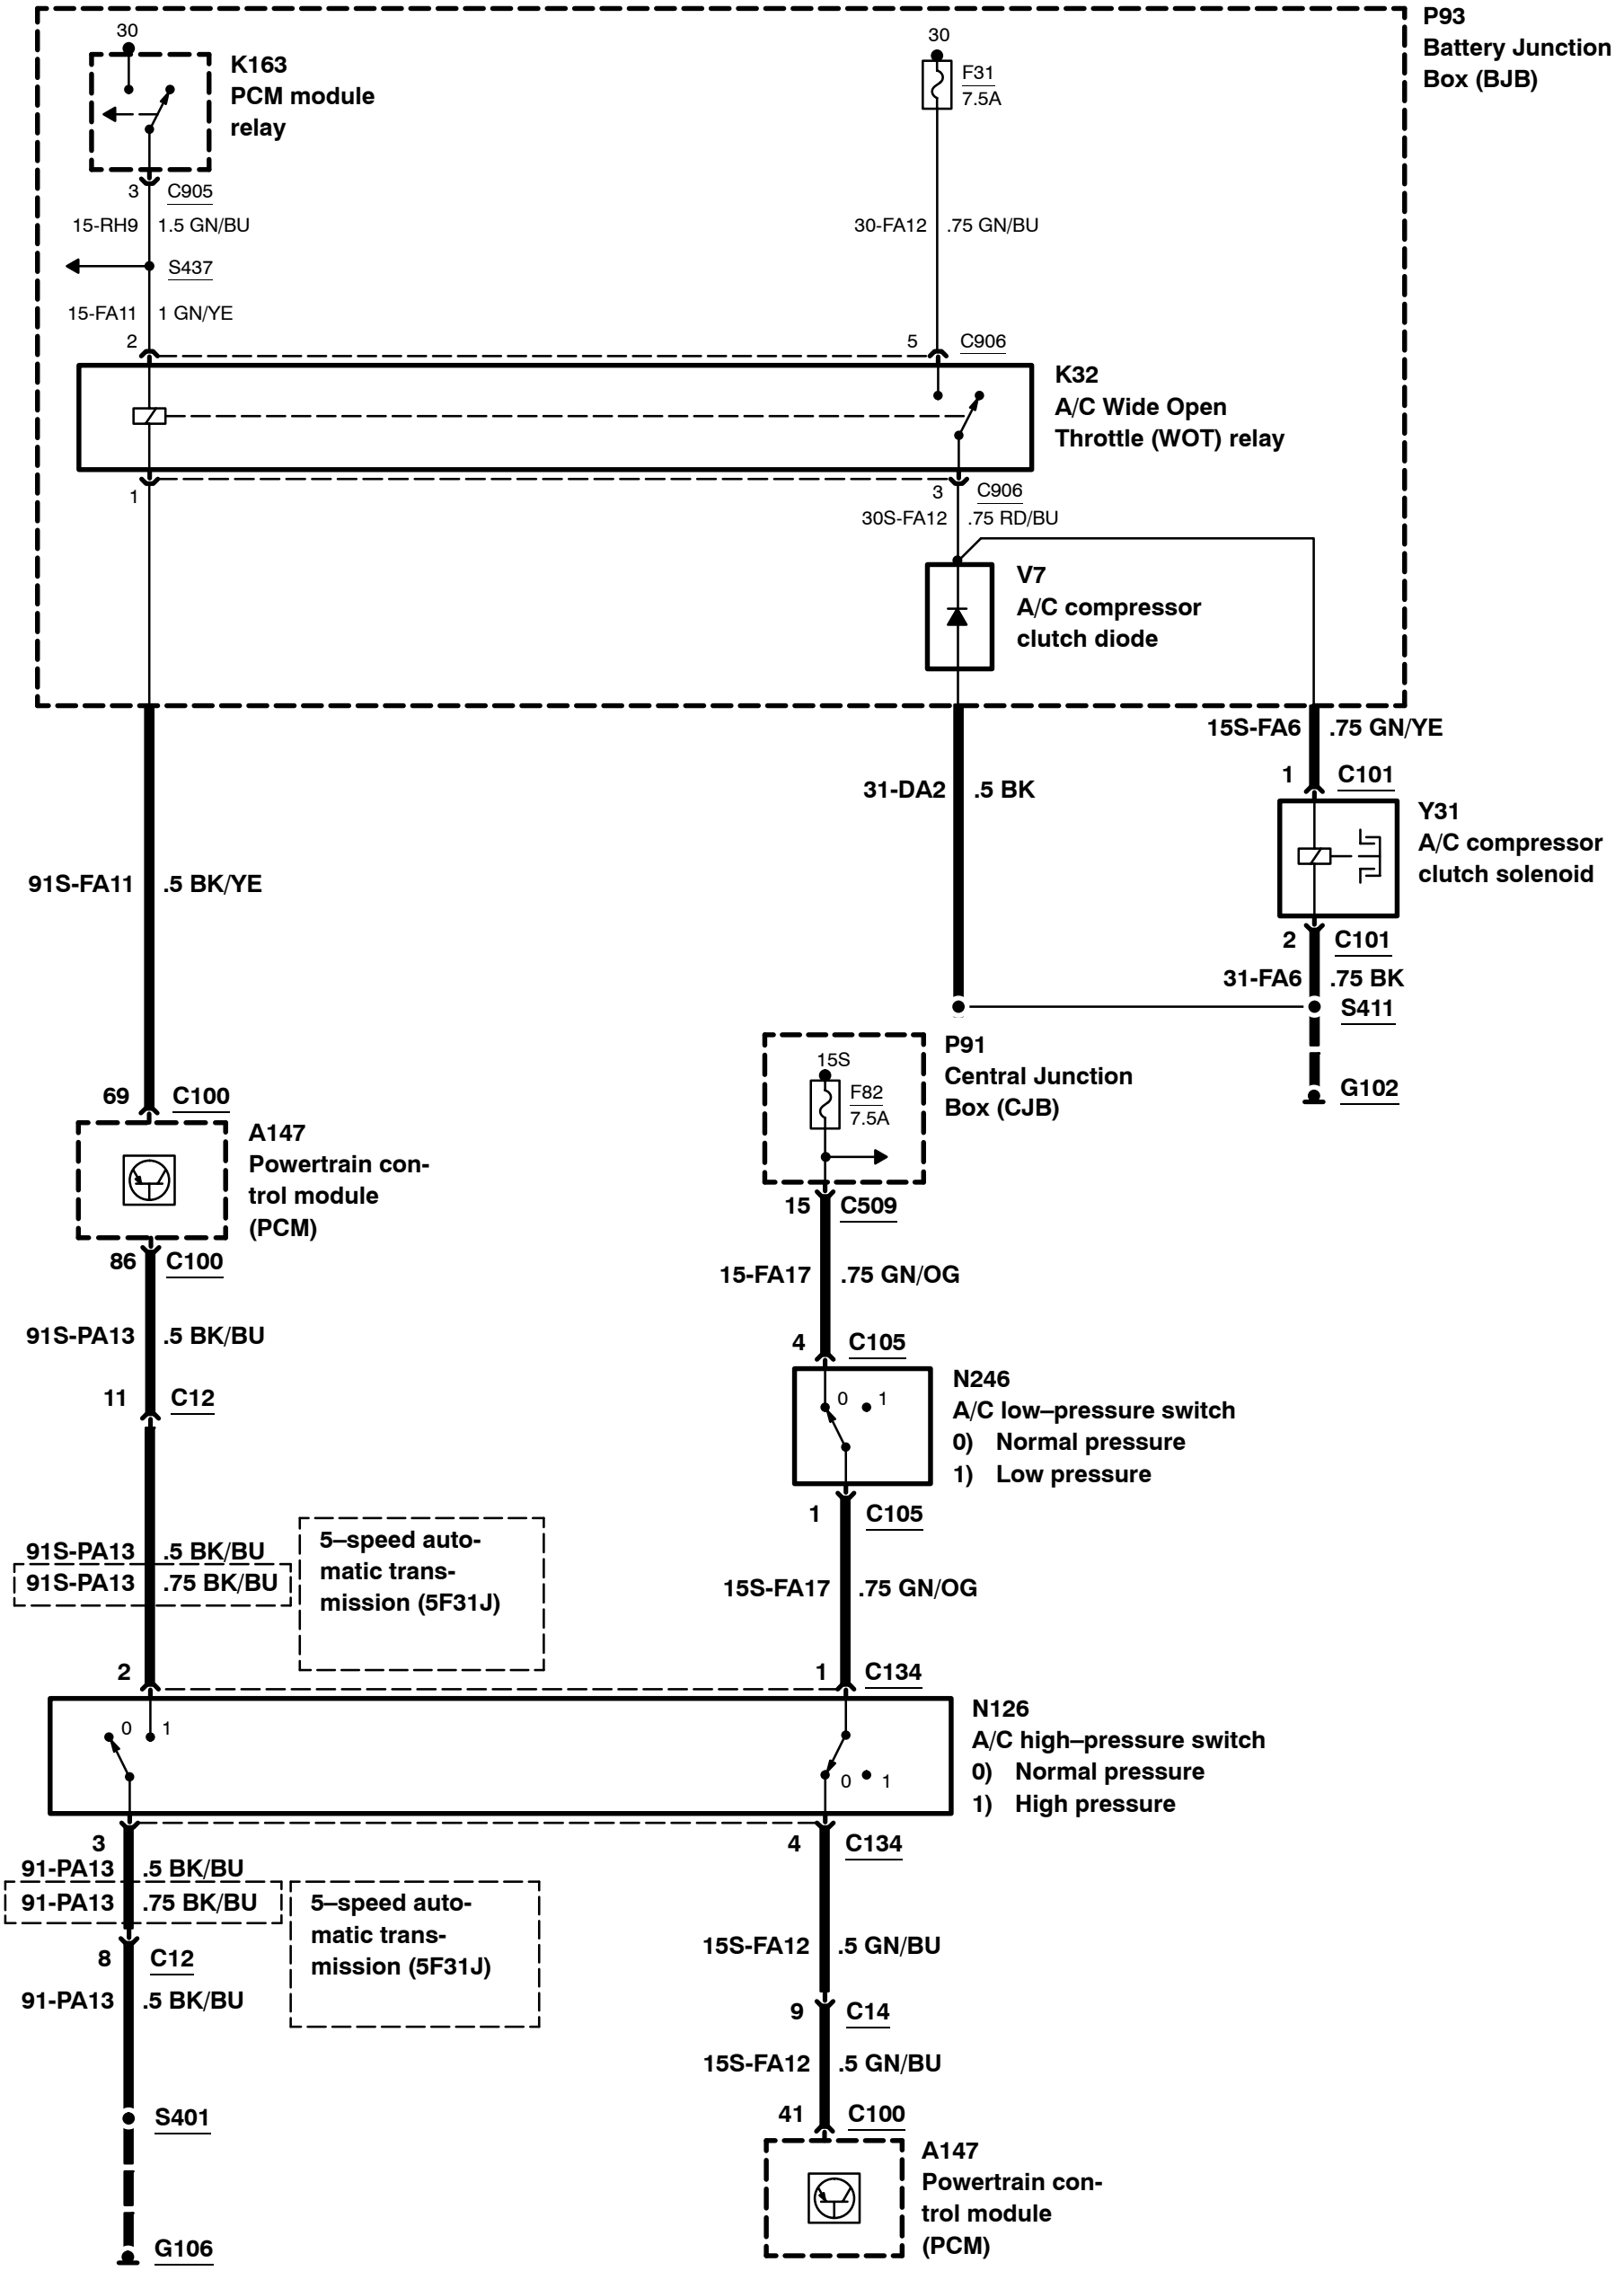


Electronic Engine Controls – 2.5L Duratec–VE (VE6)

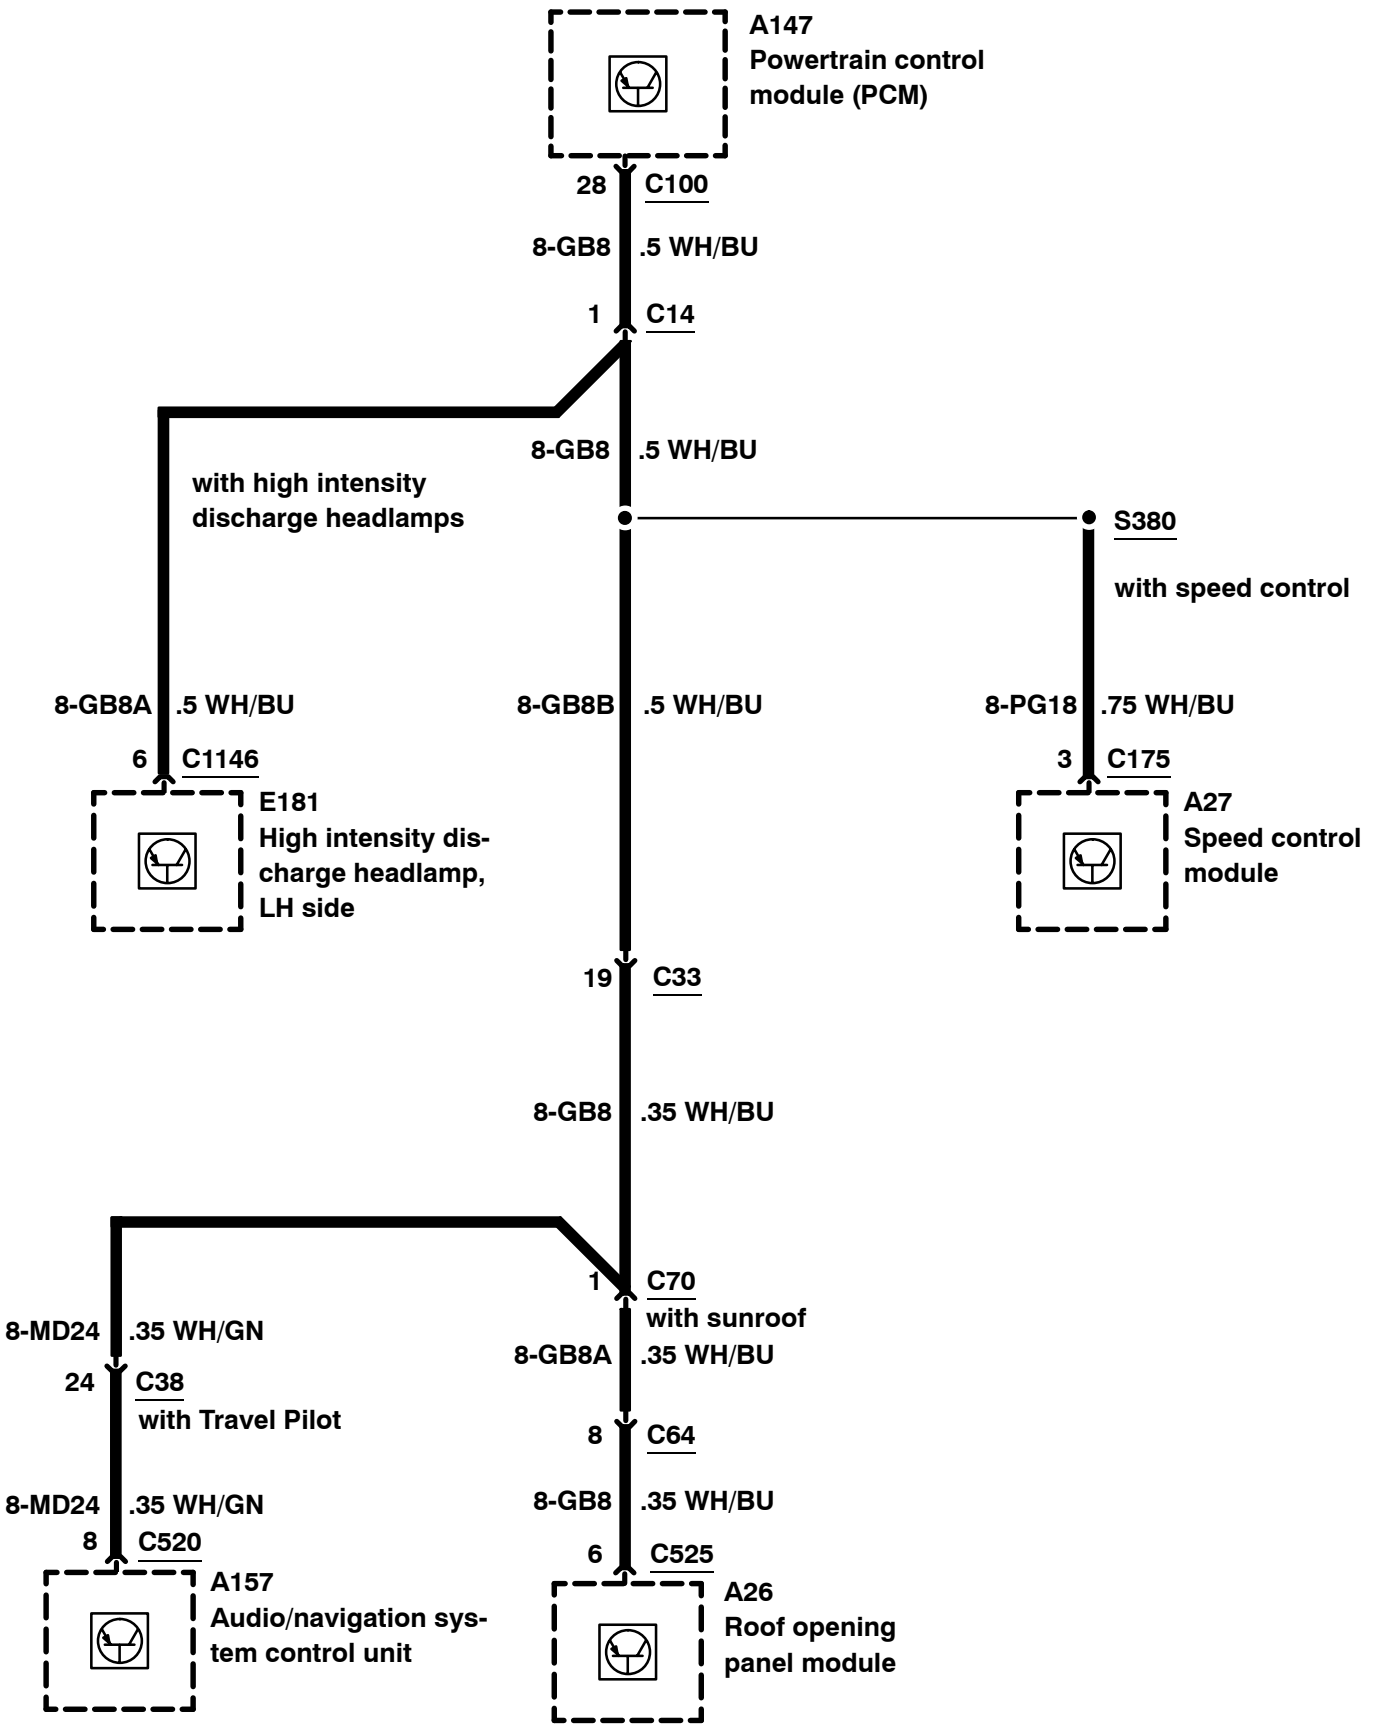


Electronic Engine Controls – 3.0L Duratec–ST (VE6)

Block diagram

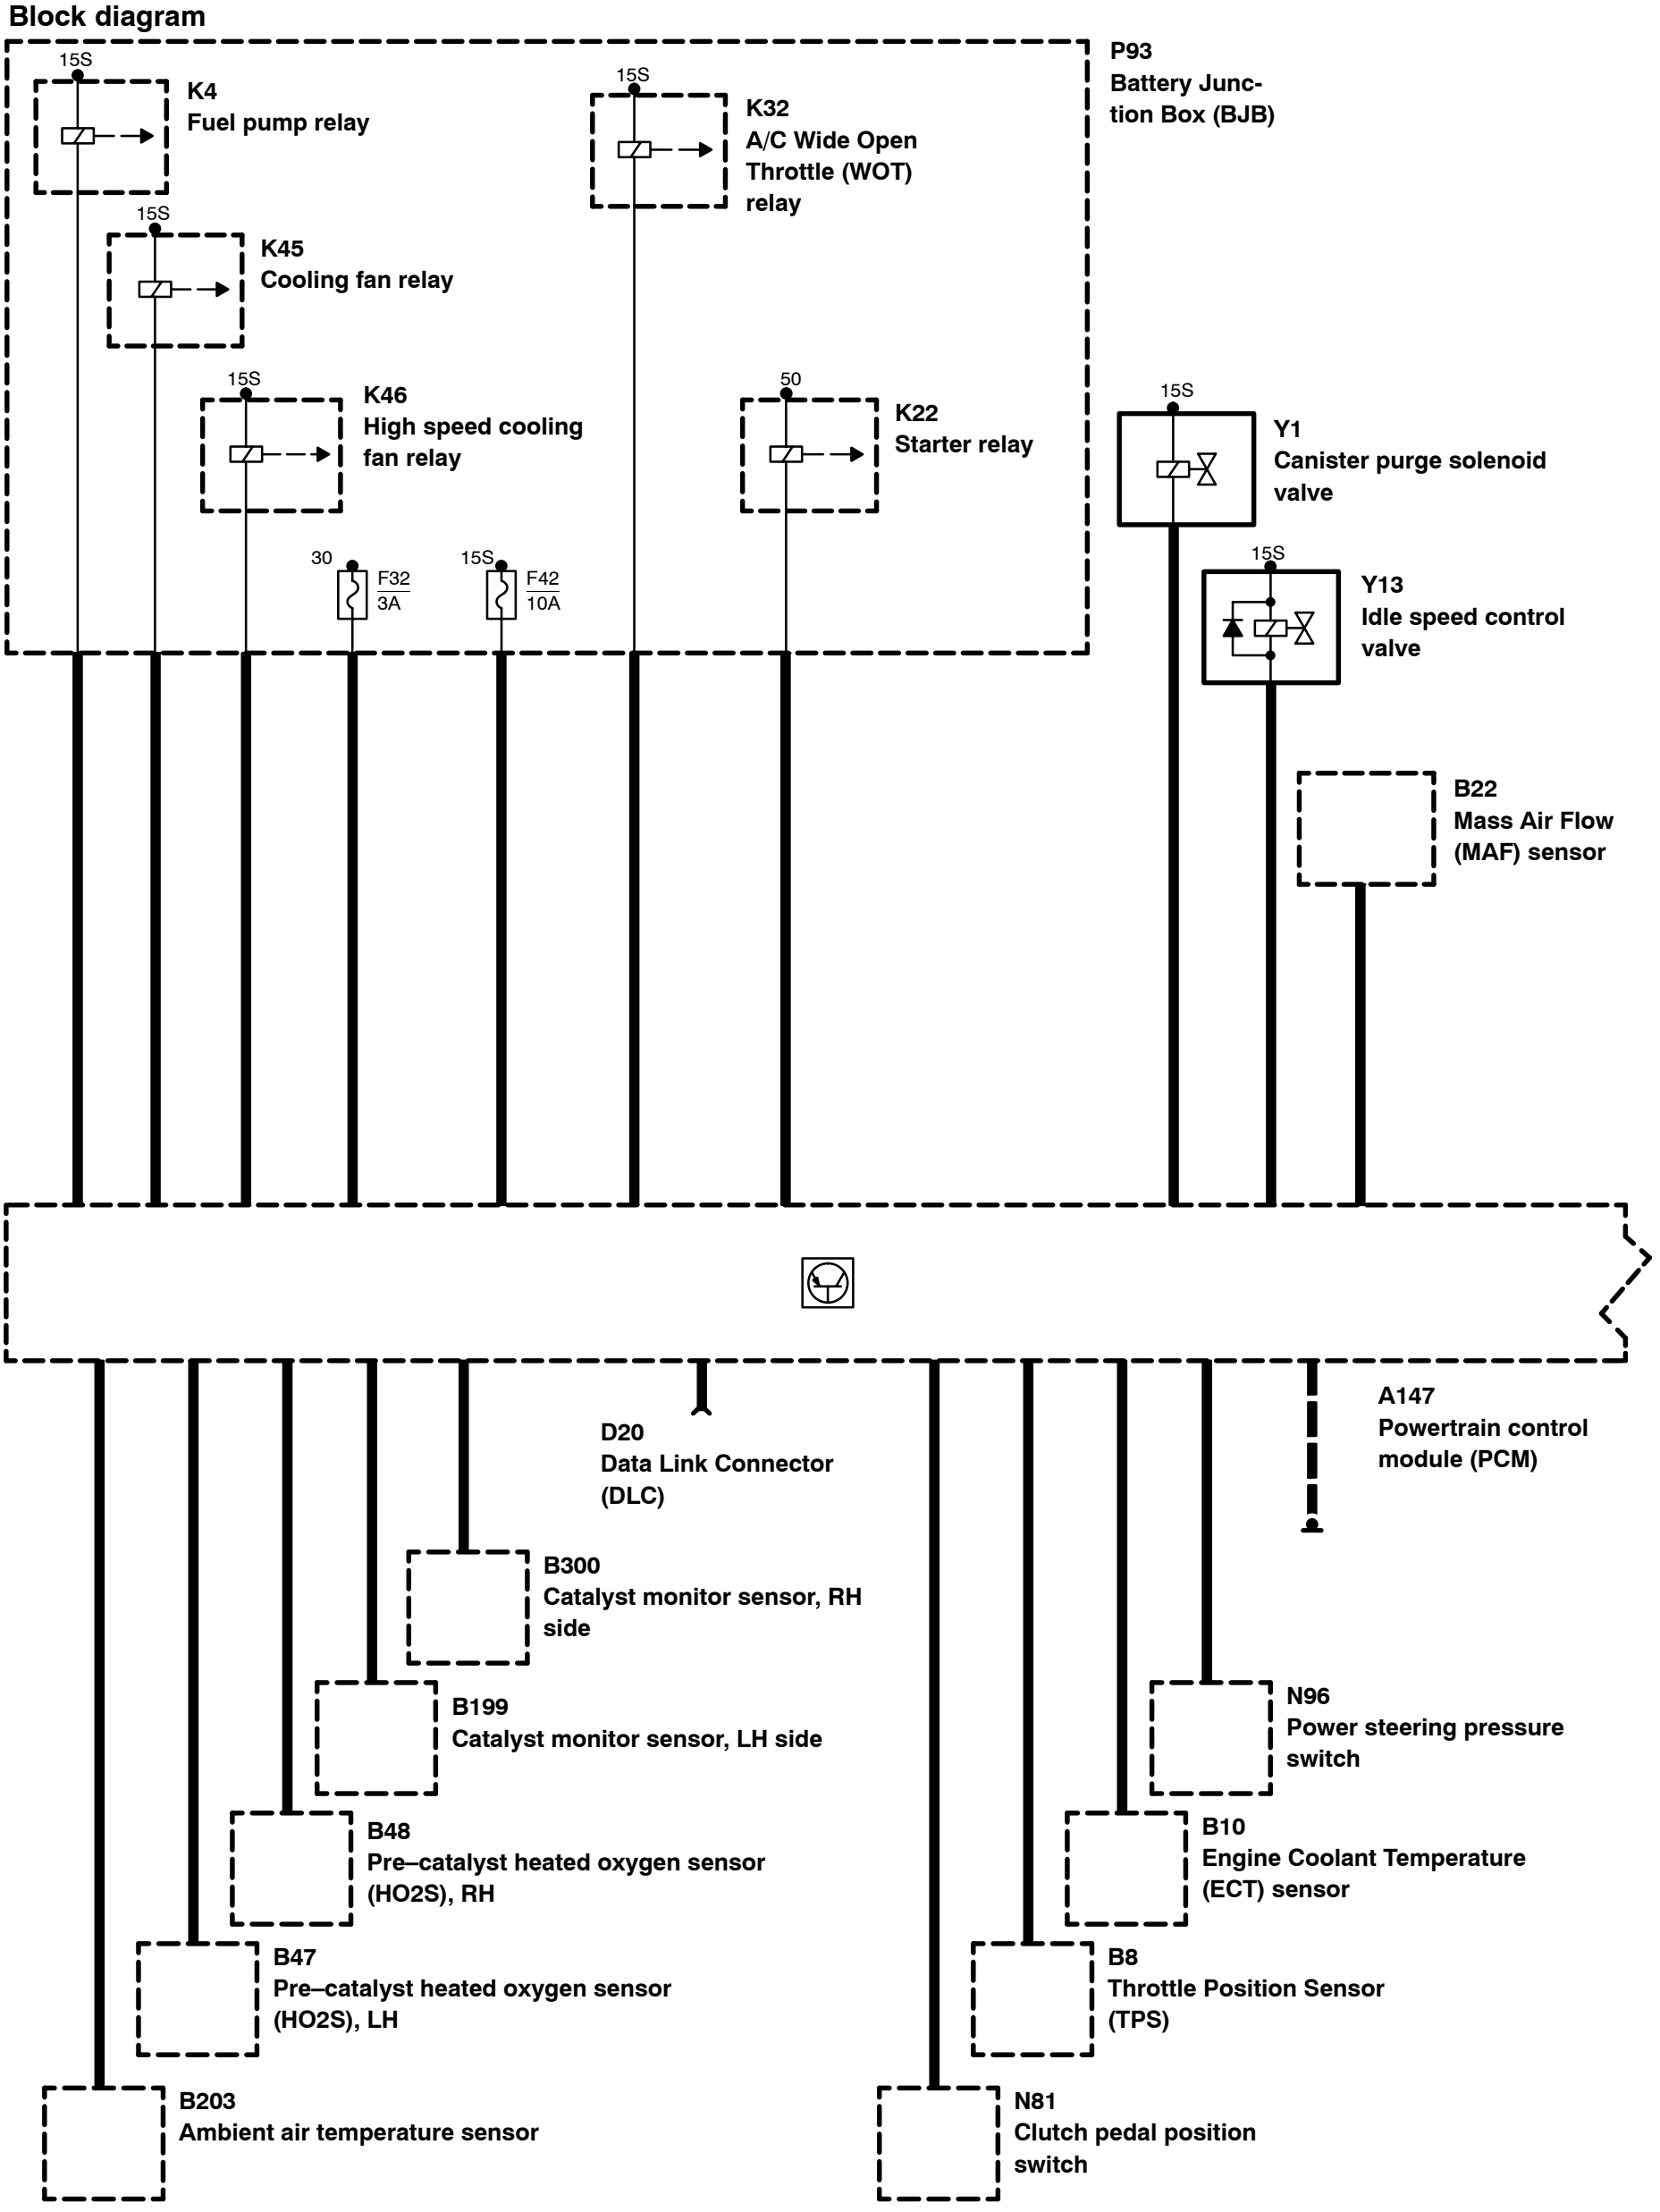


Electronic Engine Controls – 3.0L Duratec–SE (VE6)

Block diagram

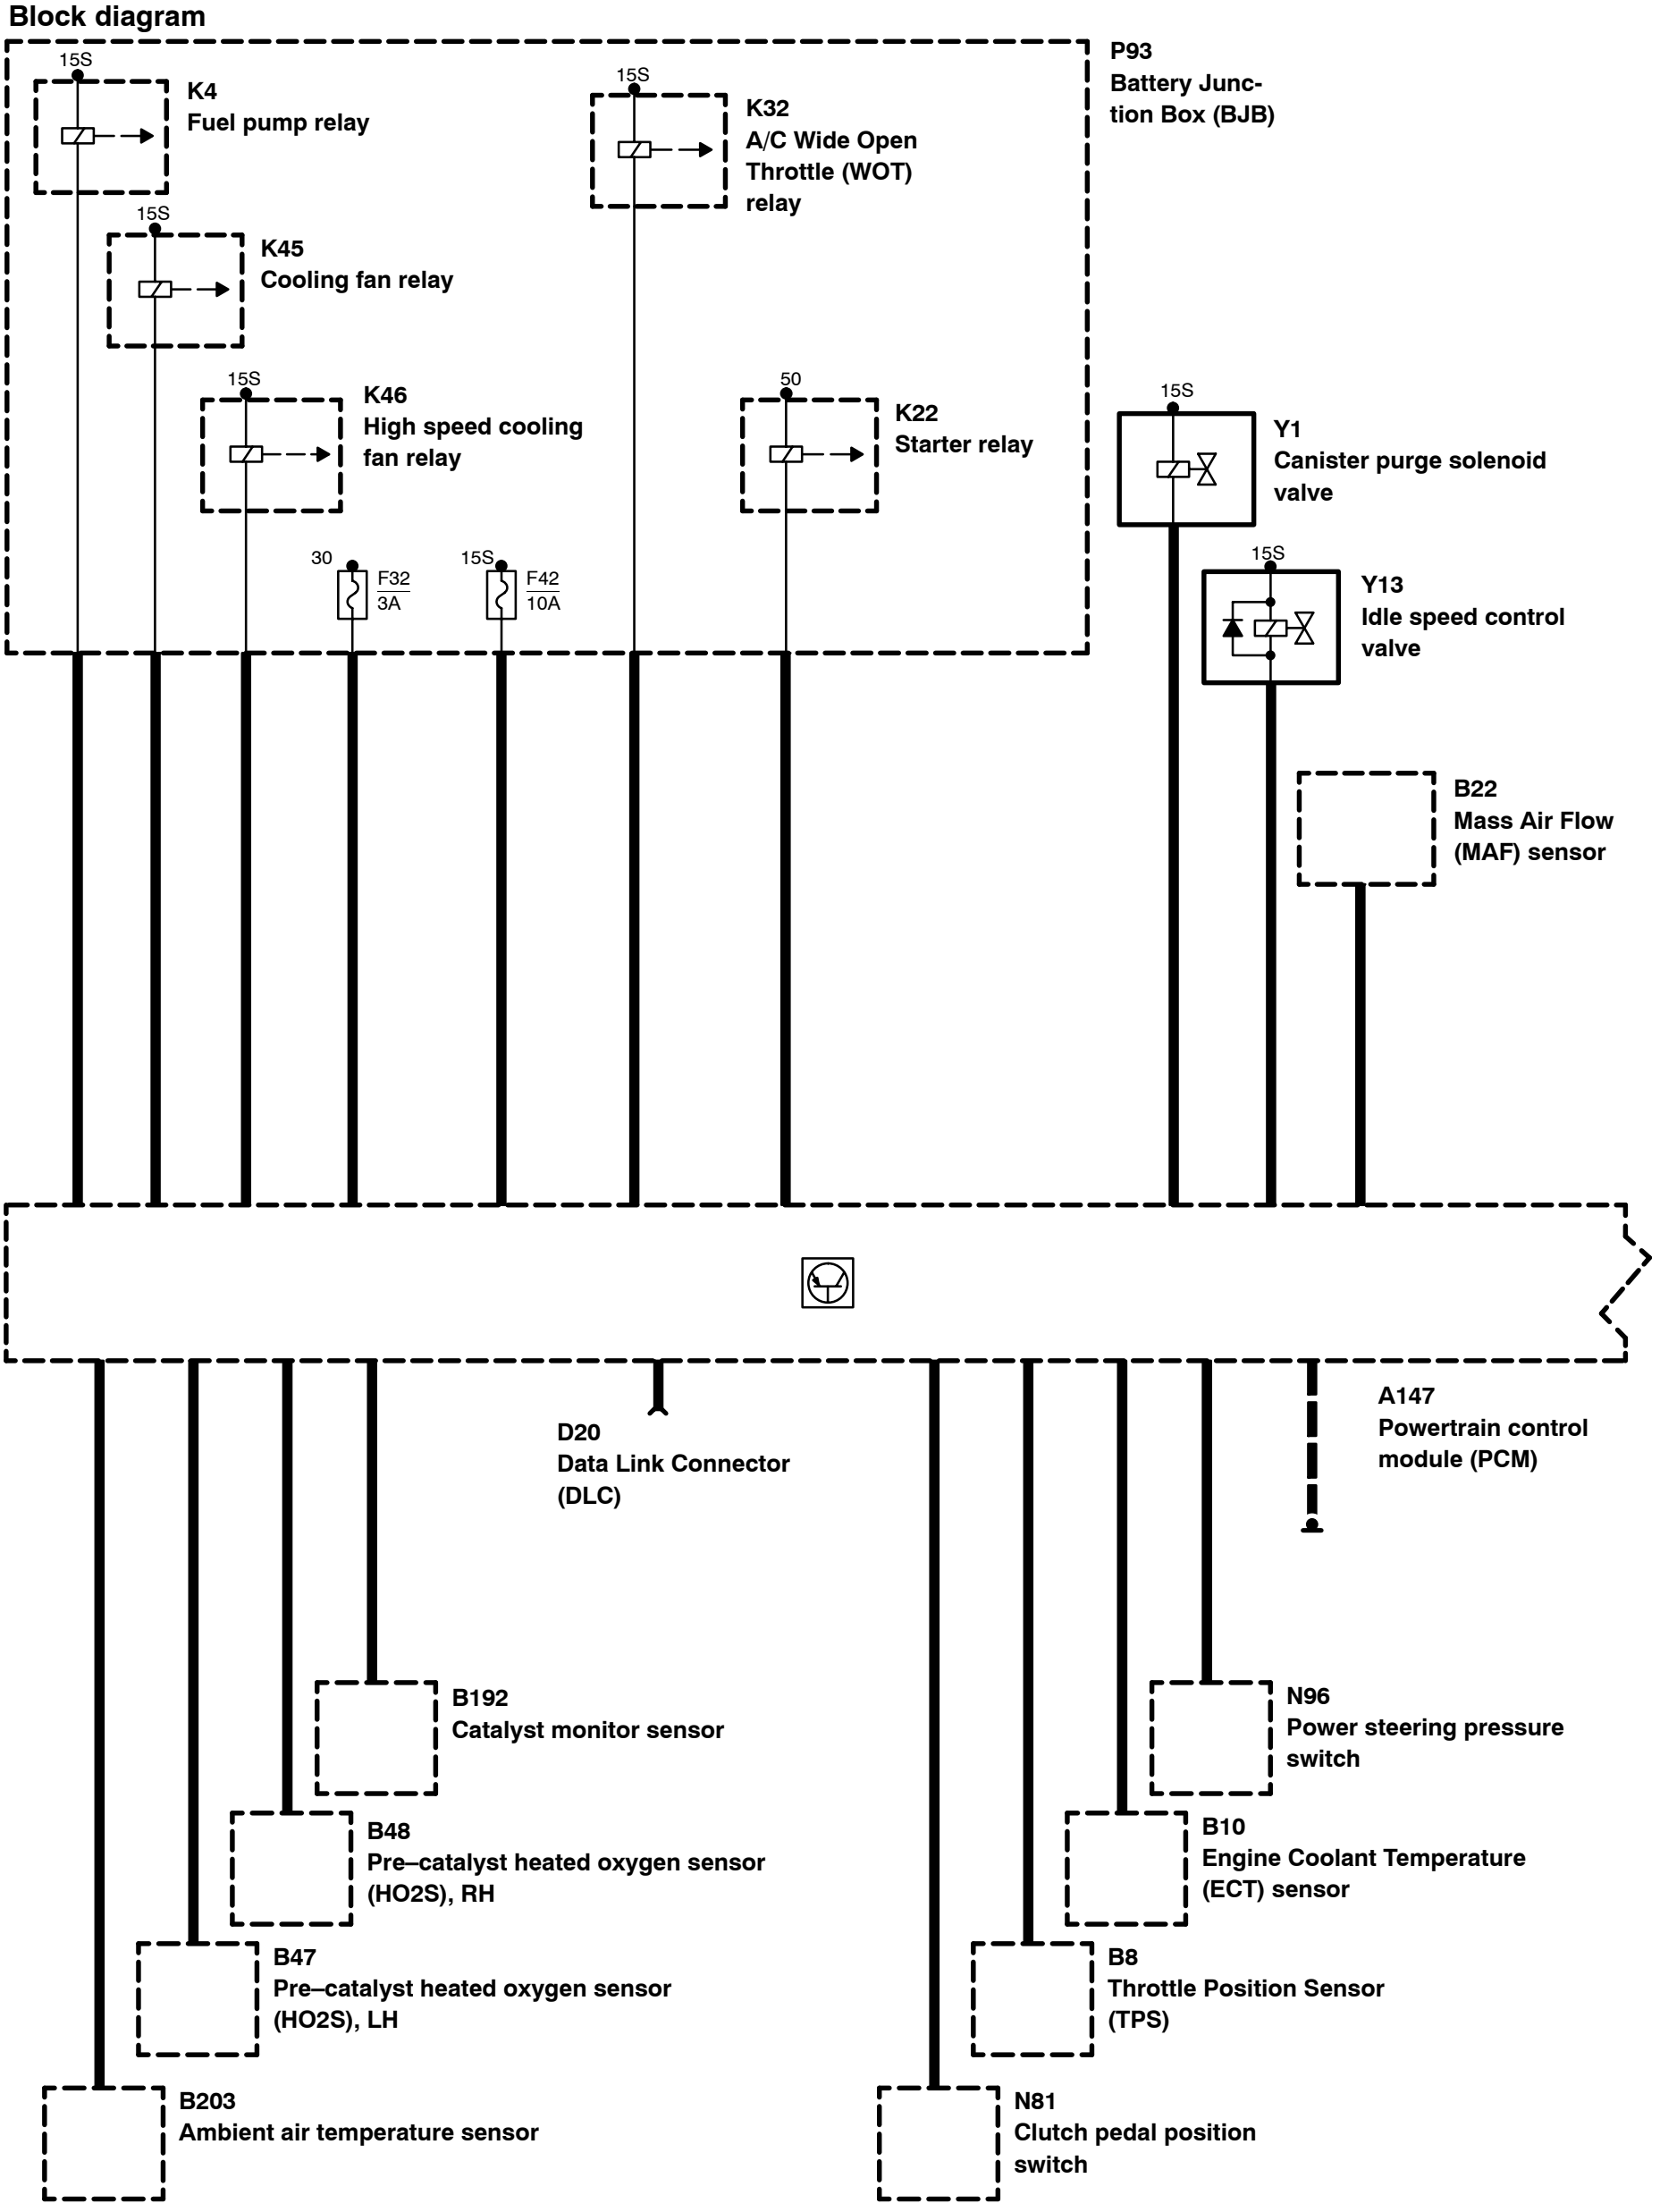


Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)


Block diagram

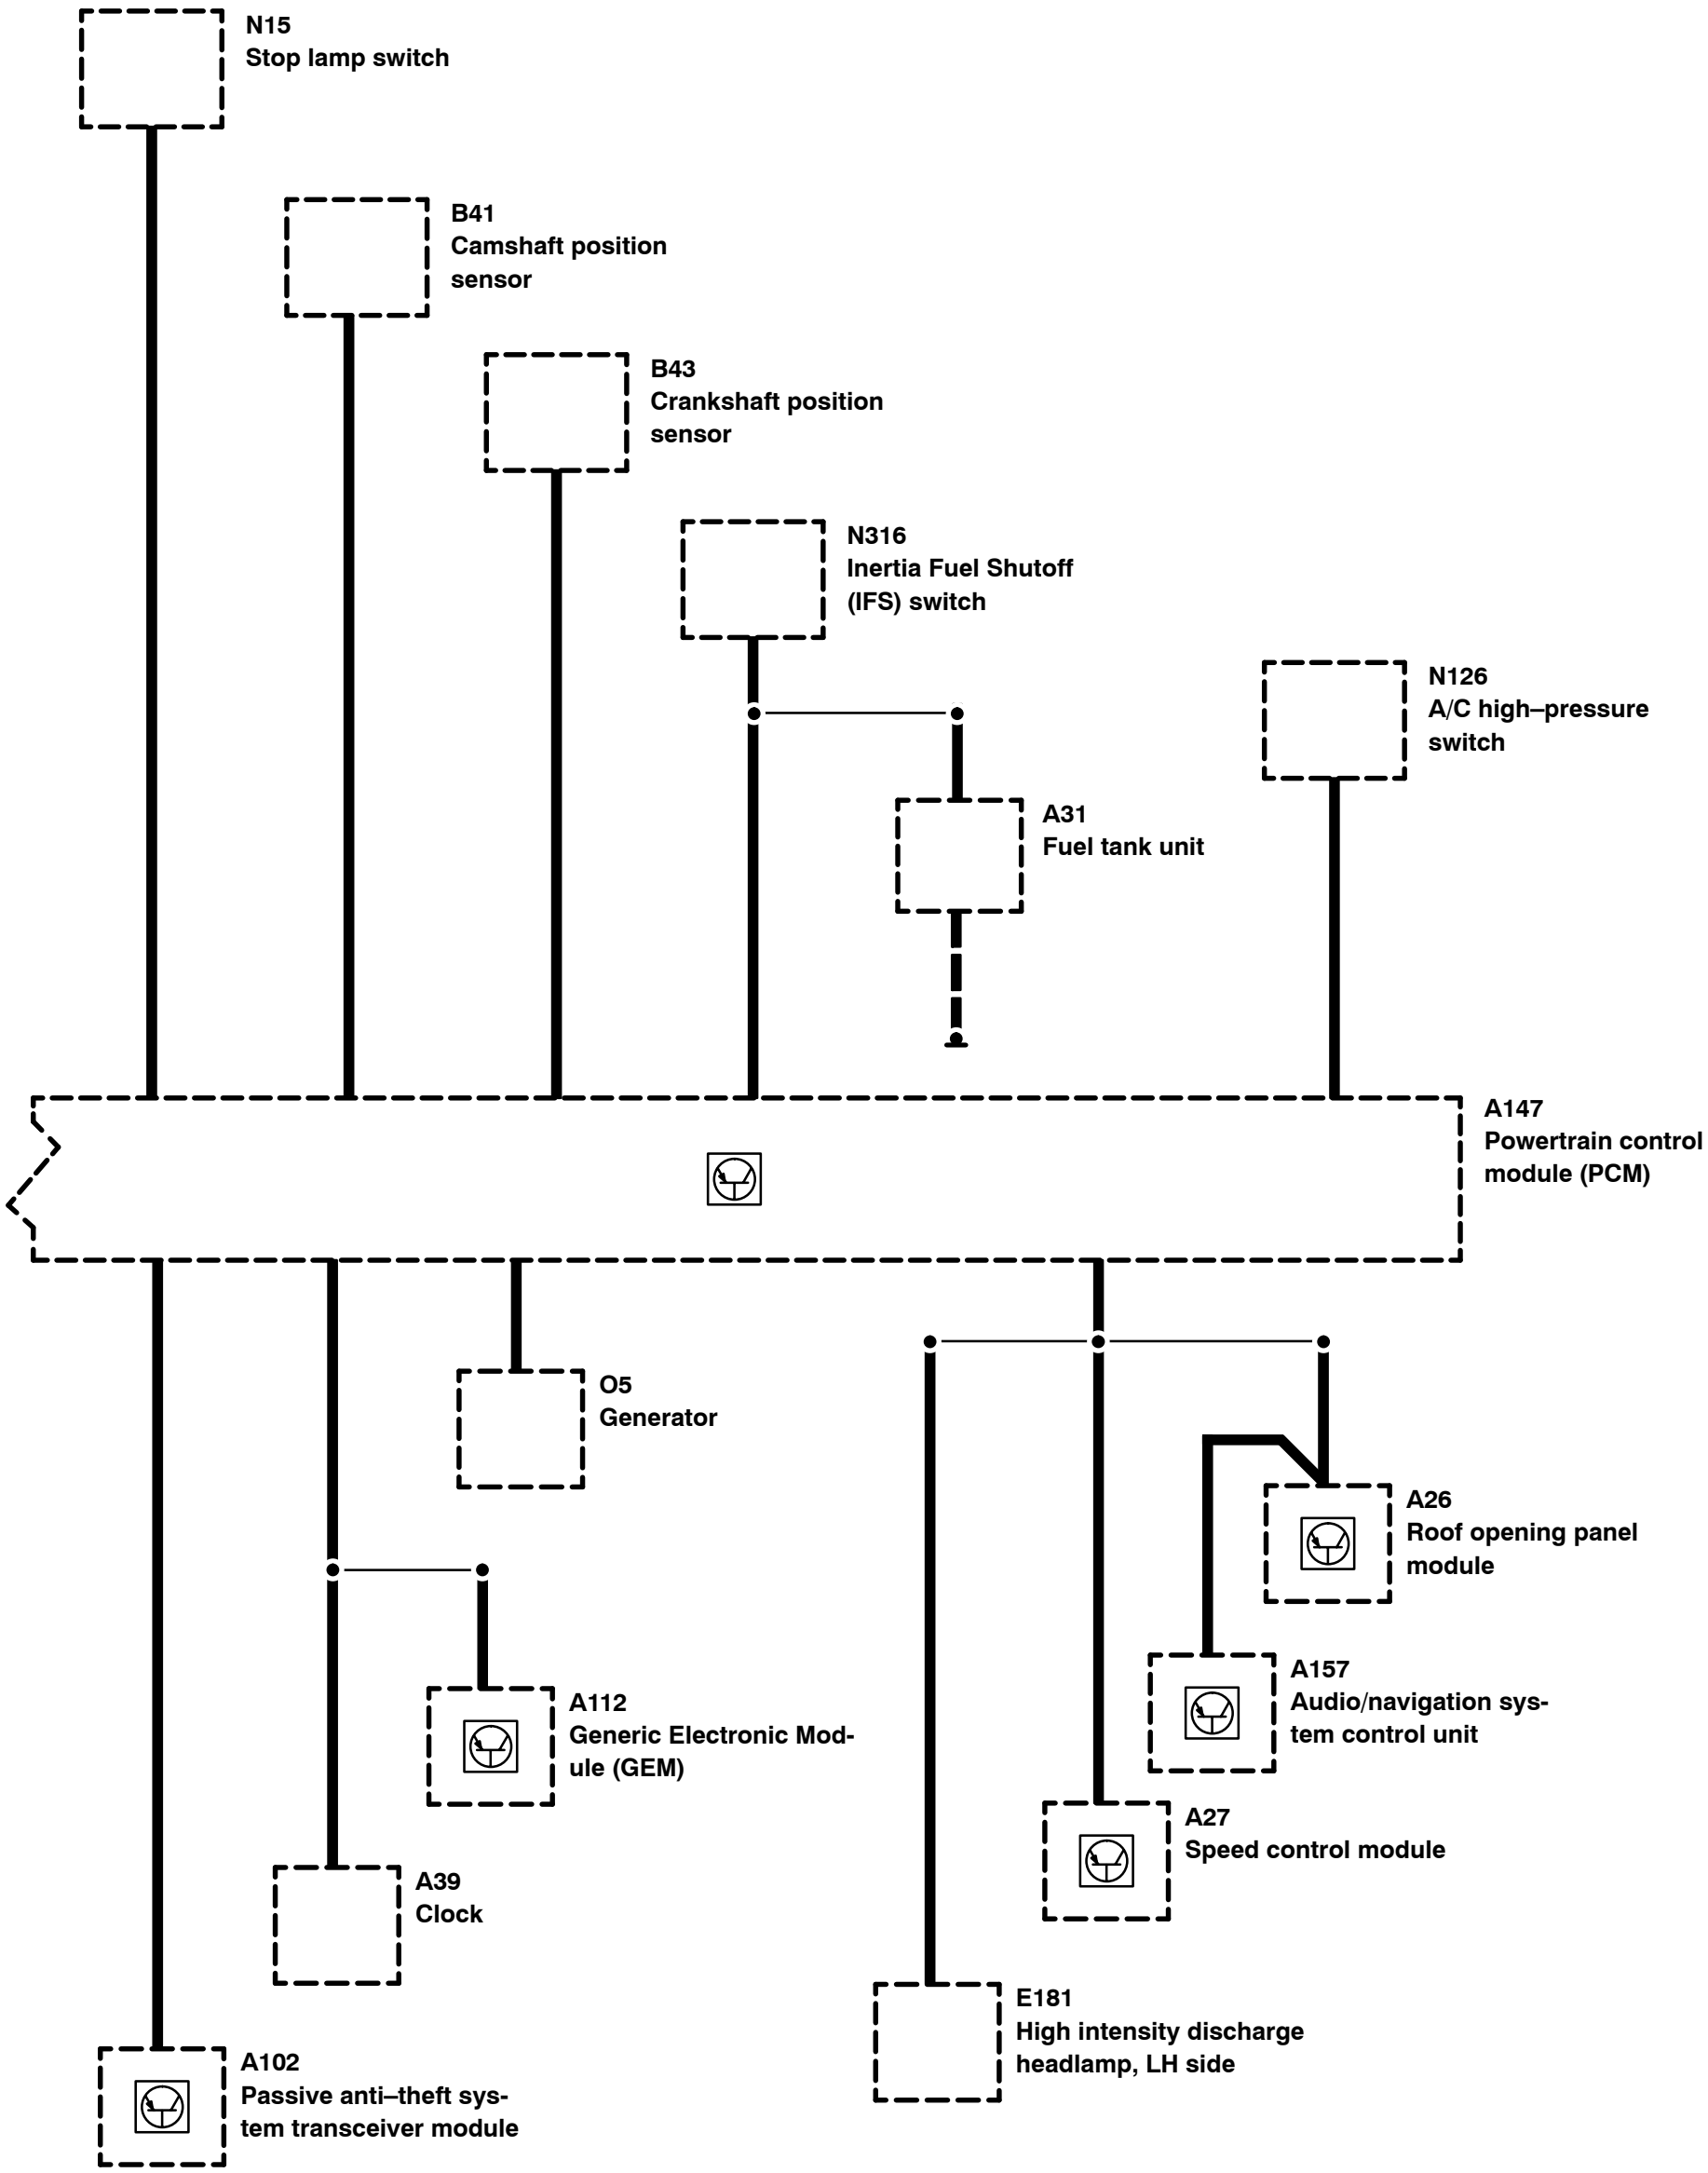


Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

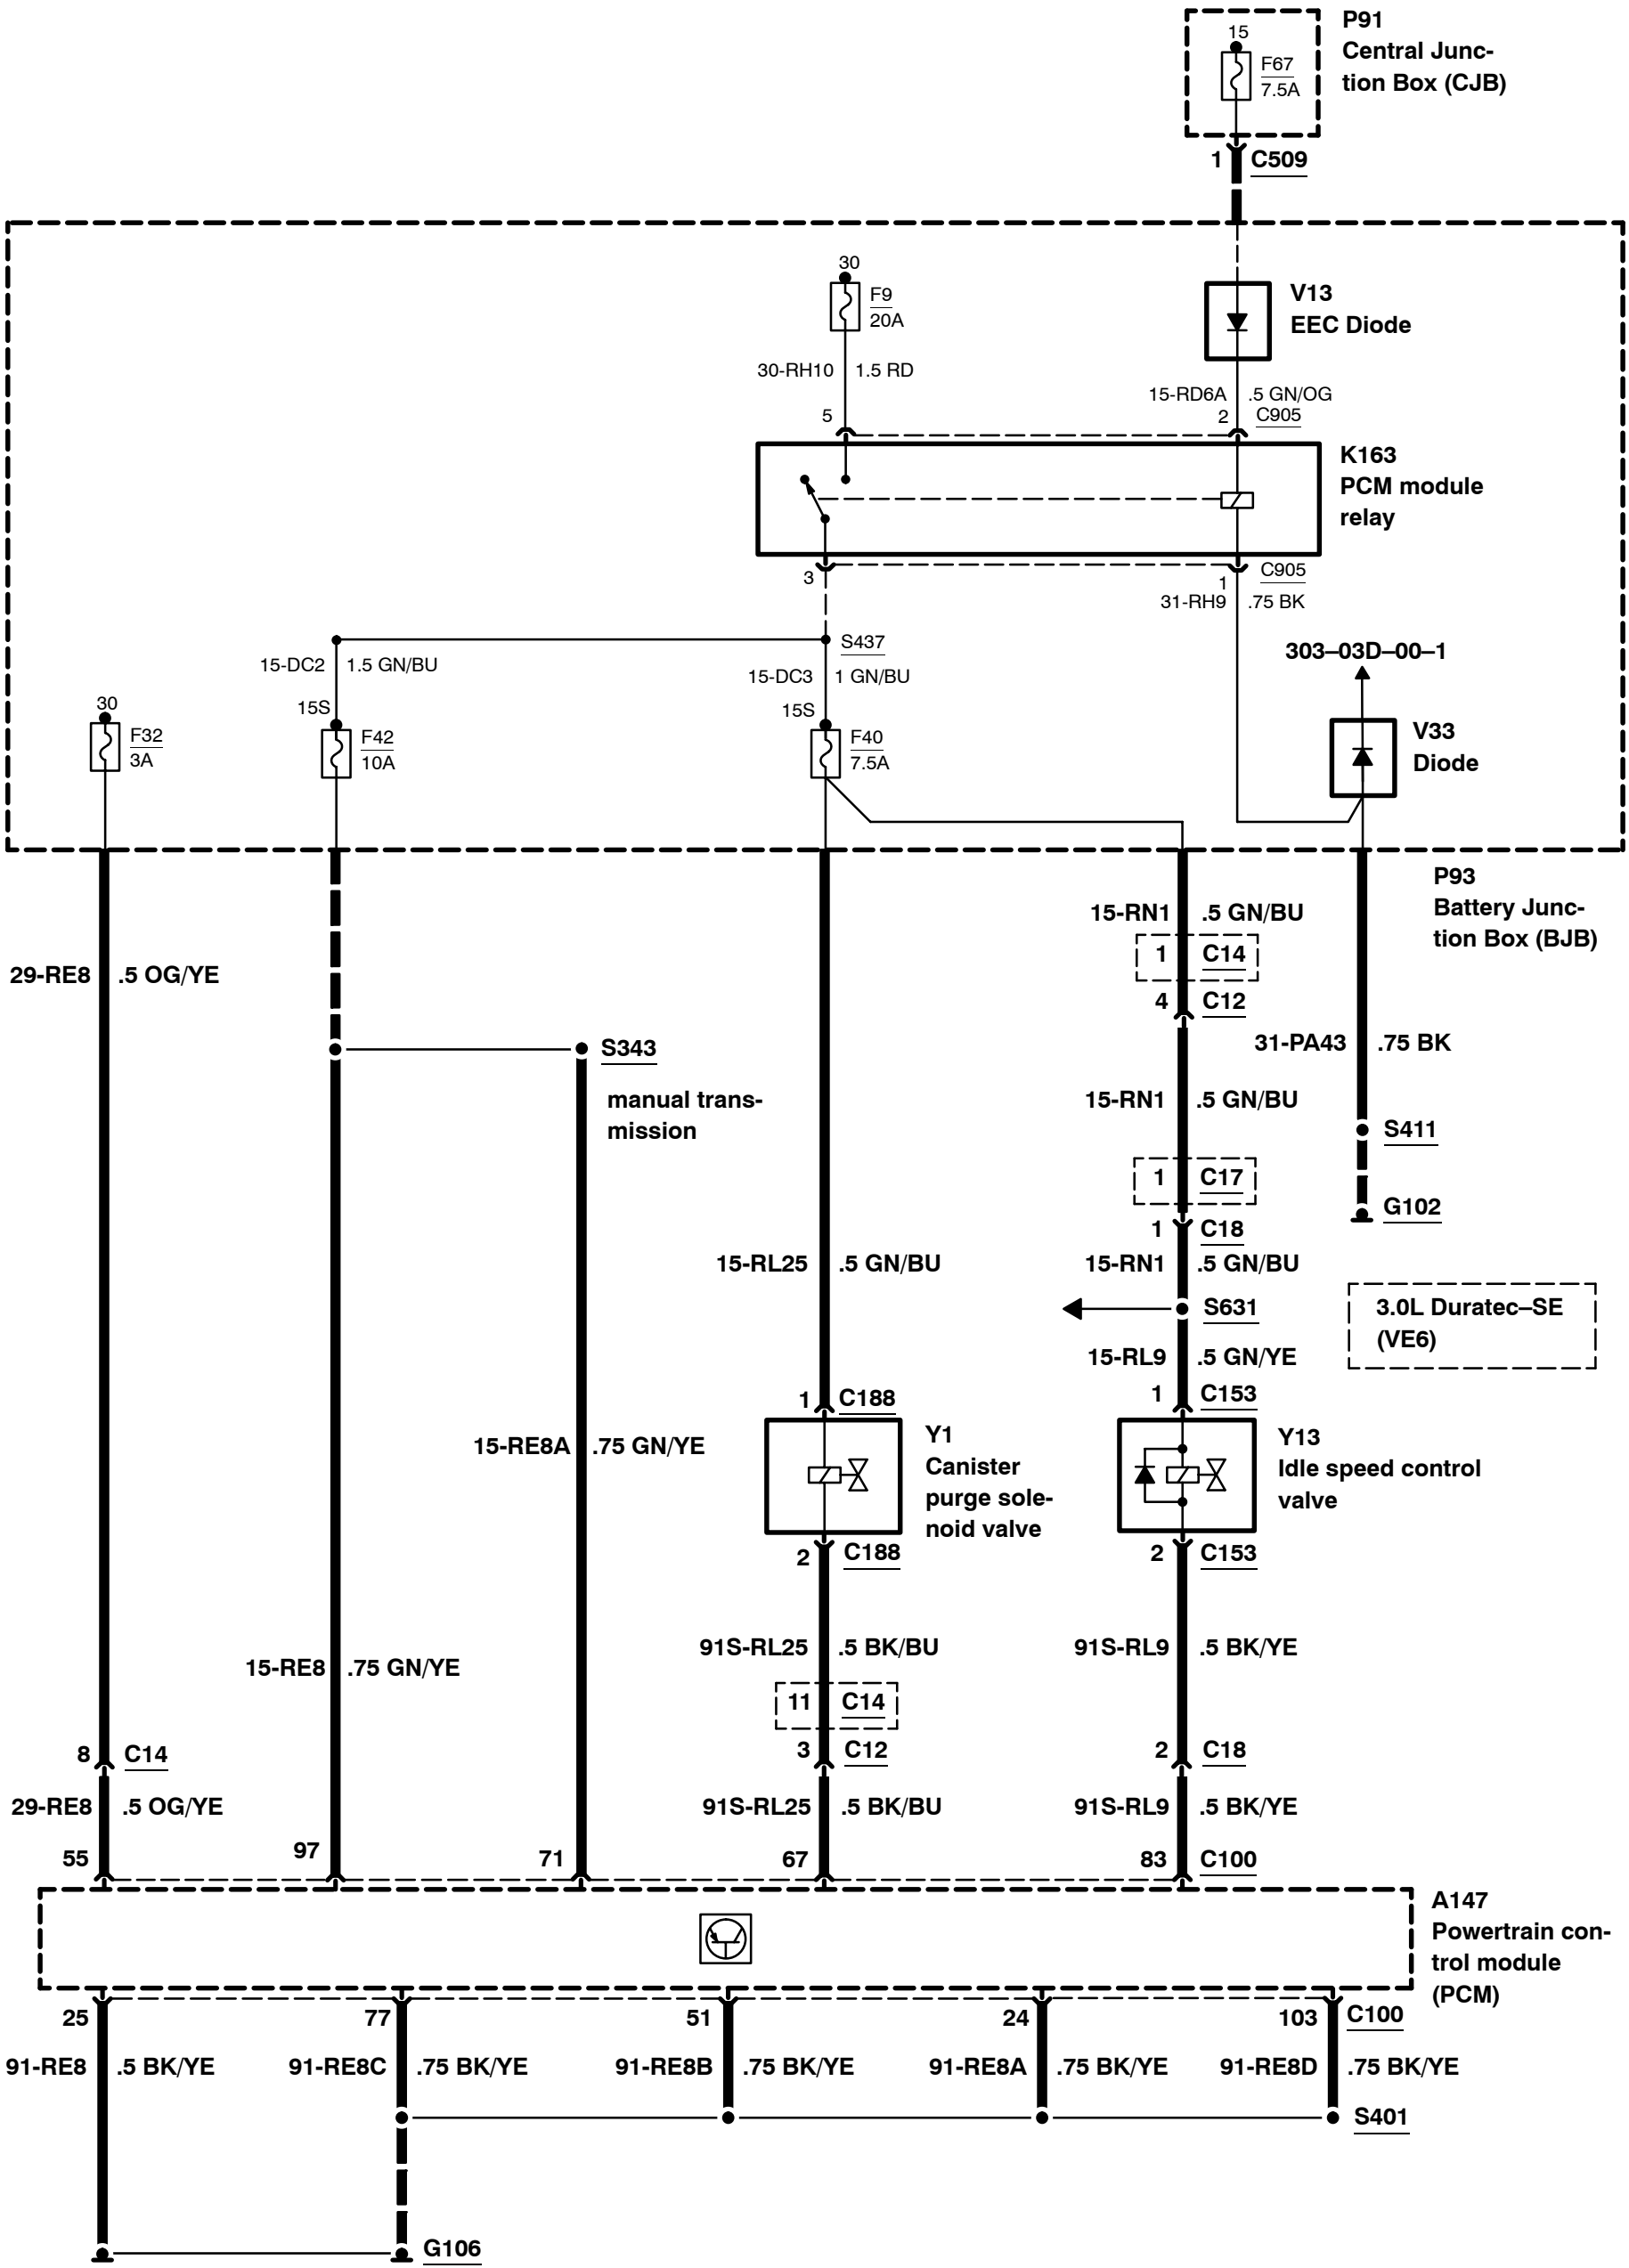


Electronic Engine Controls – 3.0L Duratec–SE (VE6)

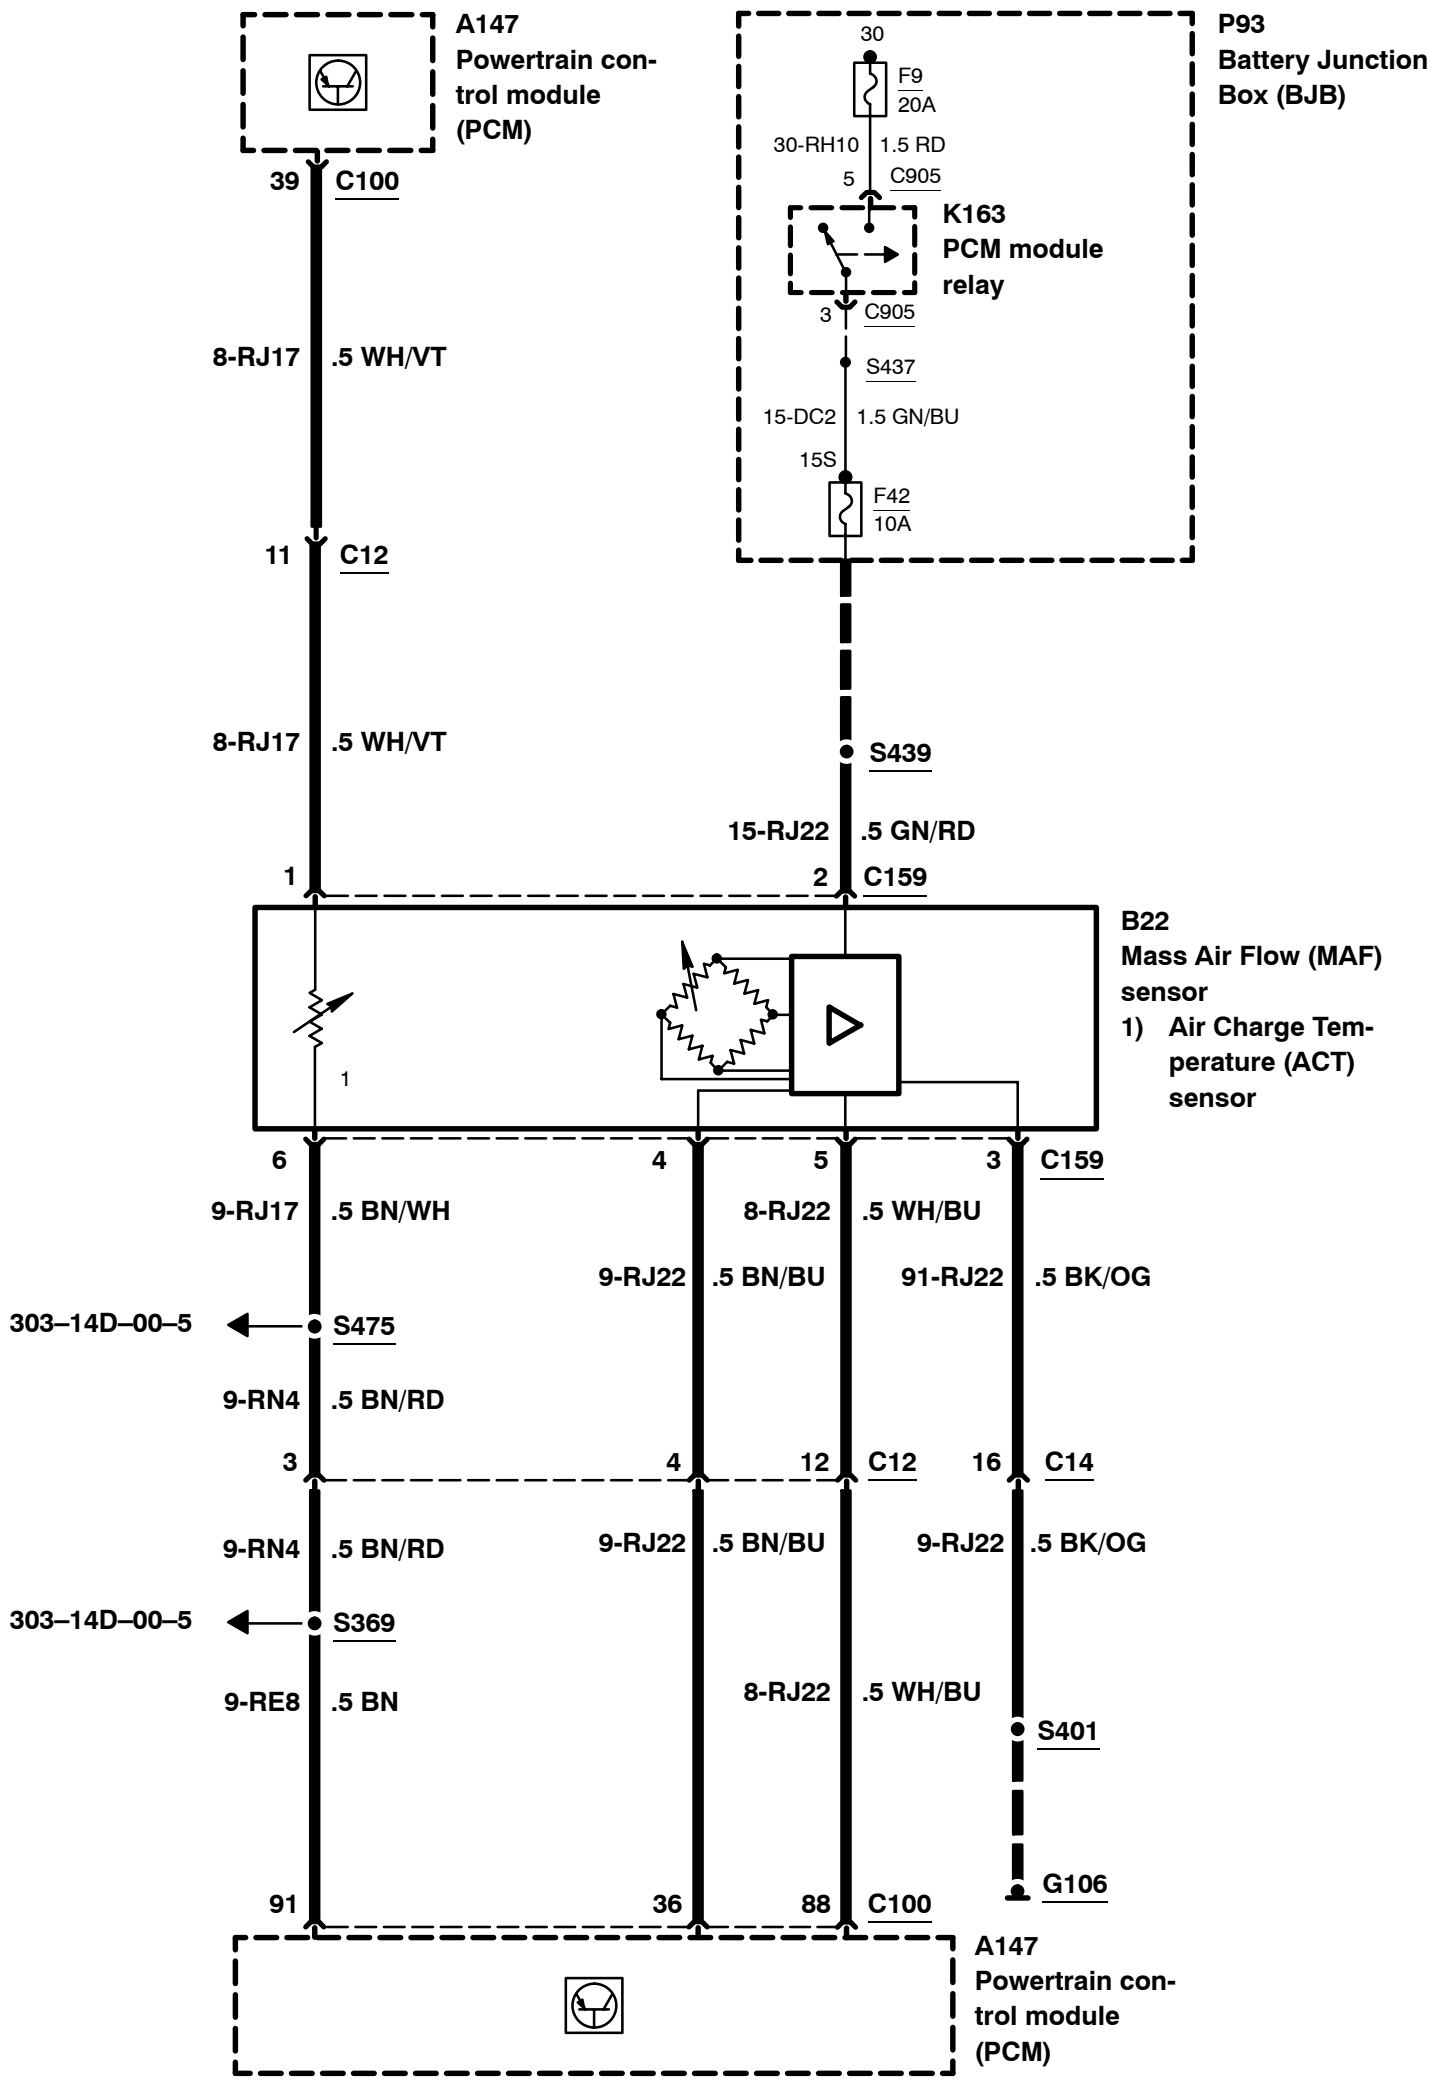


Electronic Engine Controls – 3.0L Duratec–ST (VE6), before 04/2004

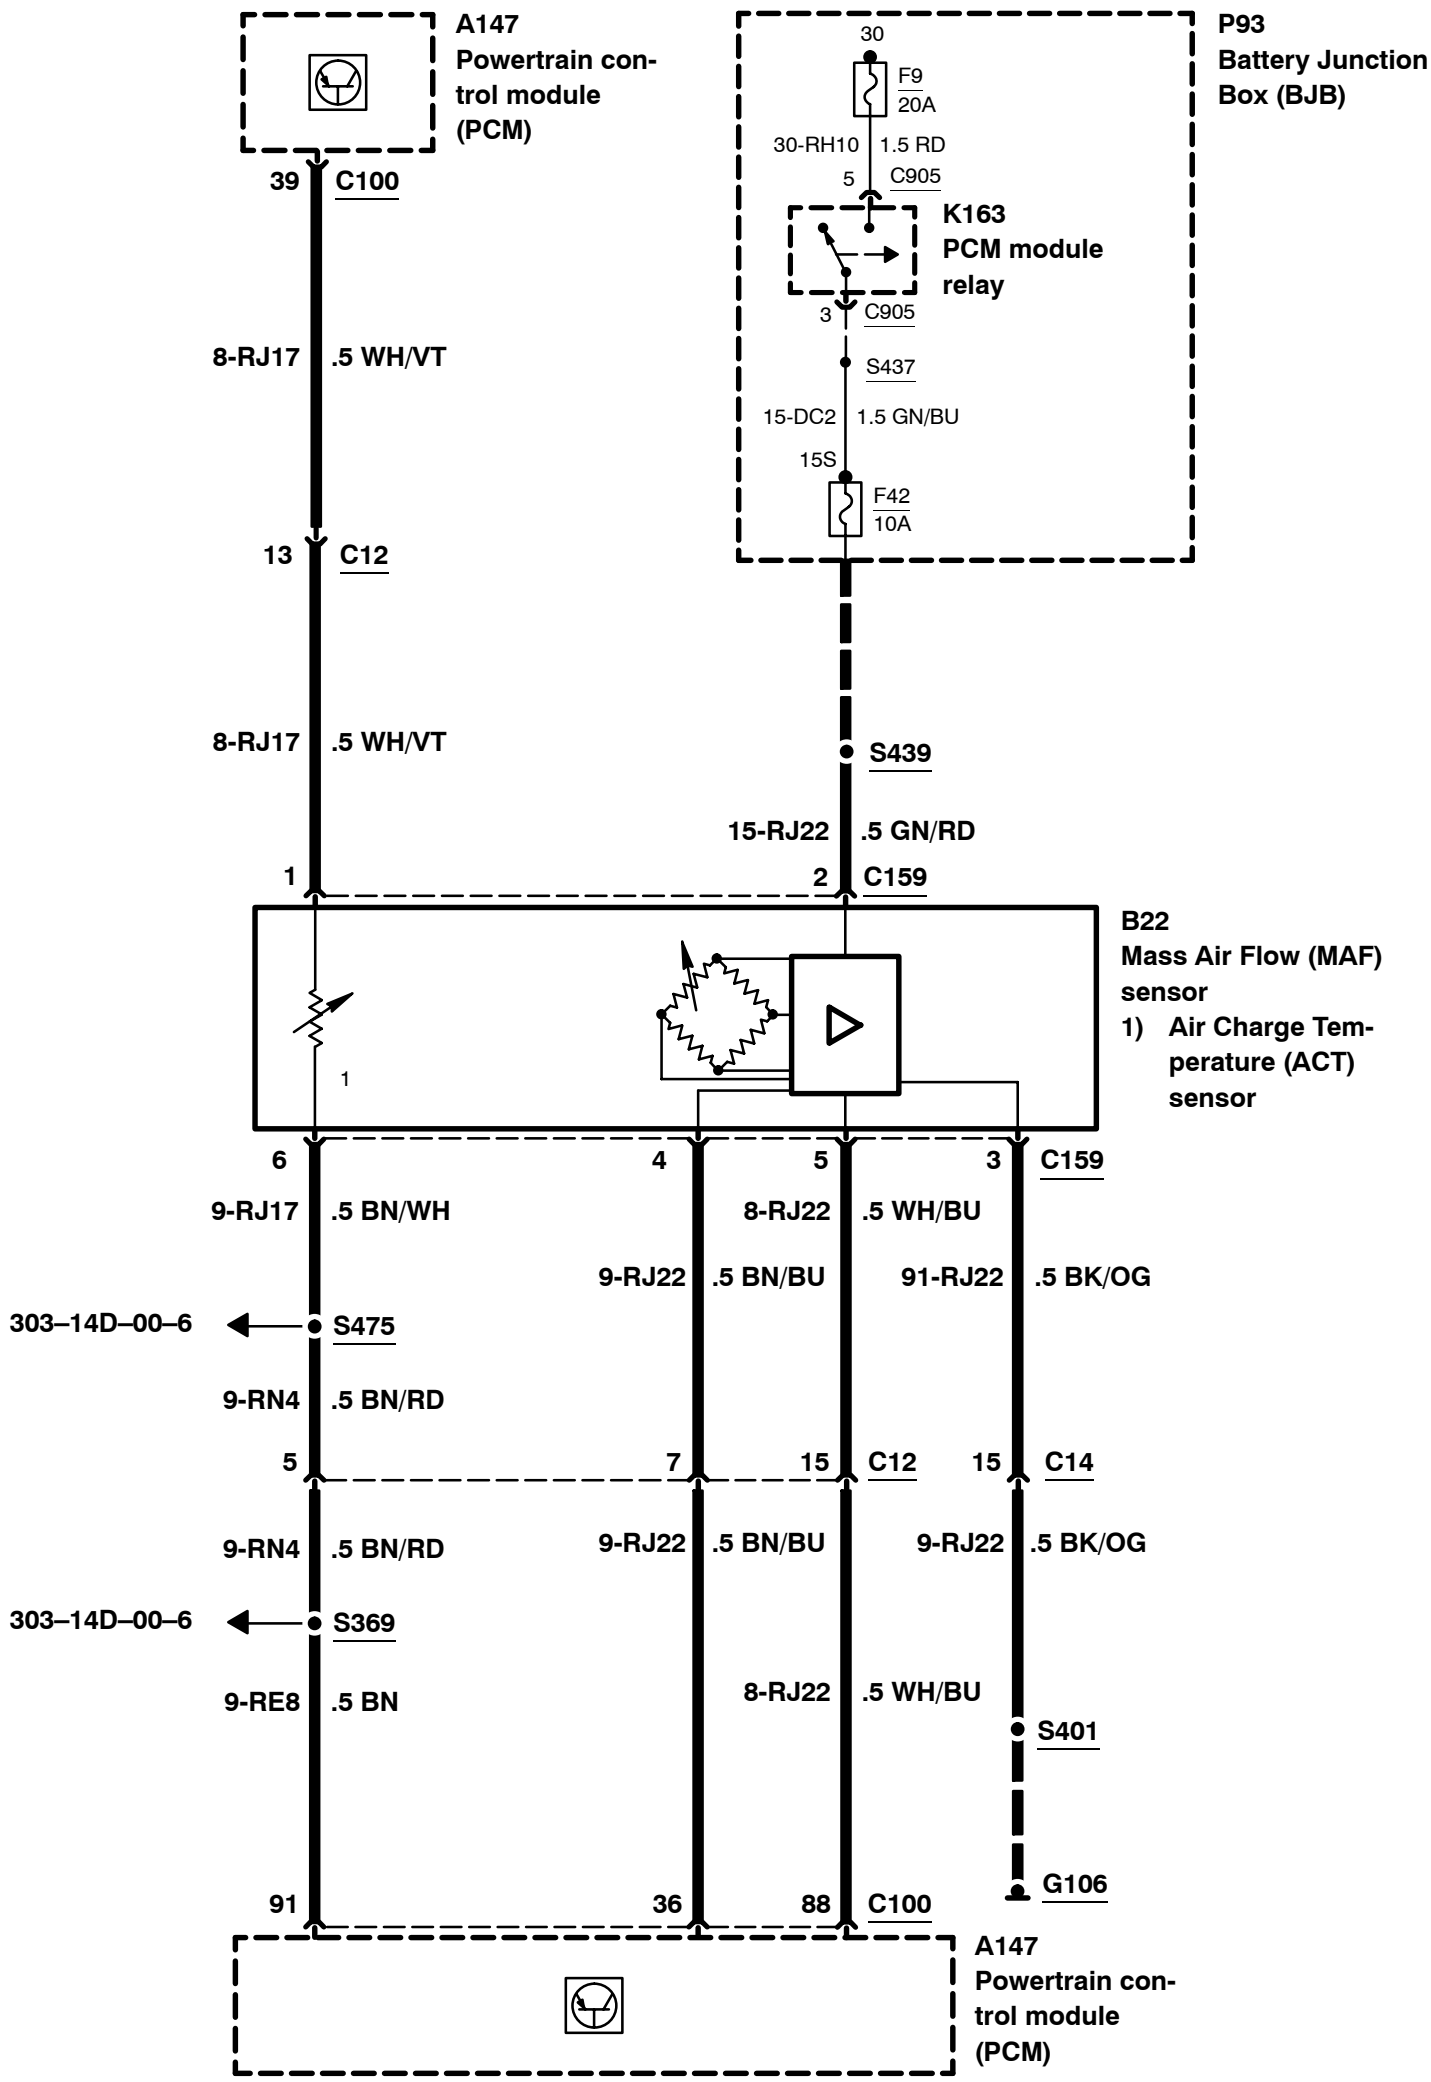


Electronic Engine Controls – 3.0L Duratec–ST (VE6), as of 04/2004

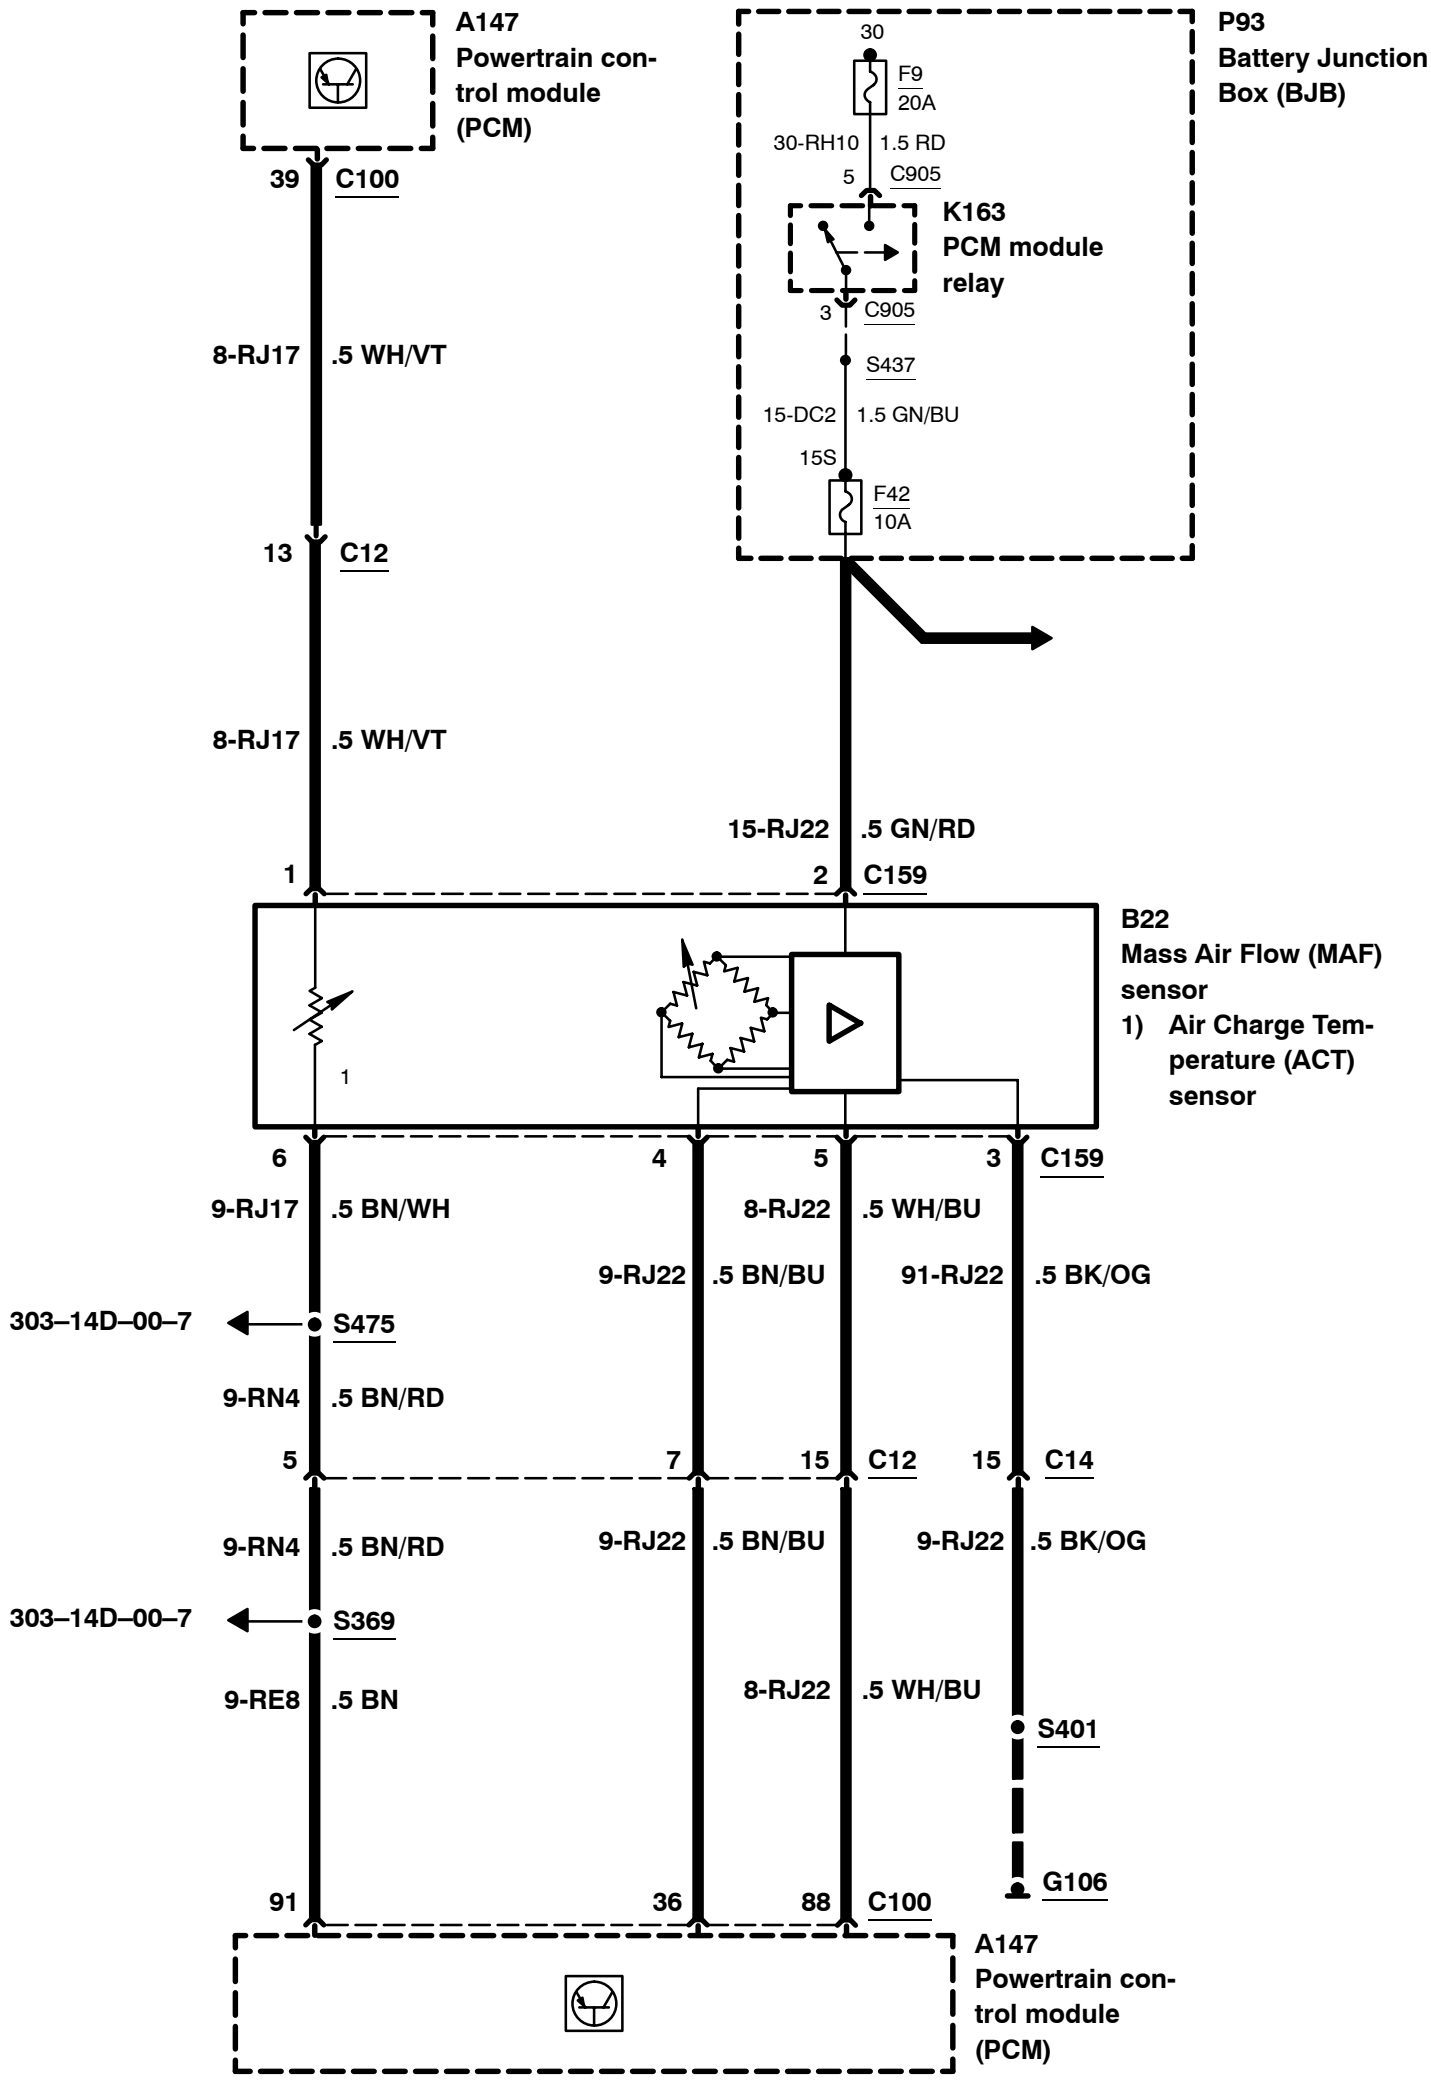


Electronic Engine Controls – 3.0L Duratec–SE (VE6)

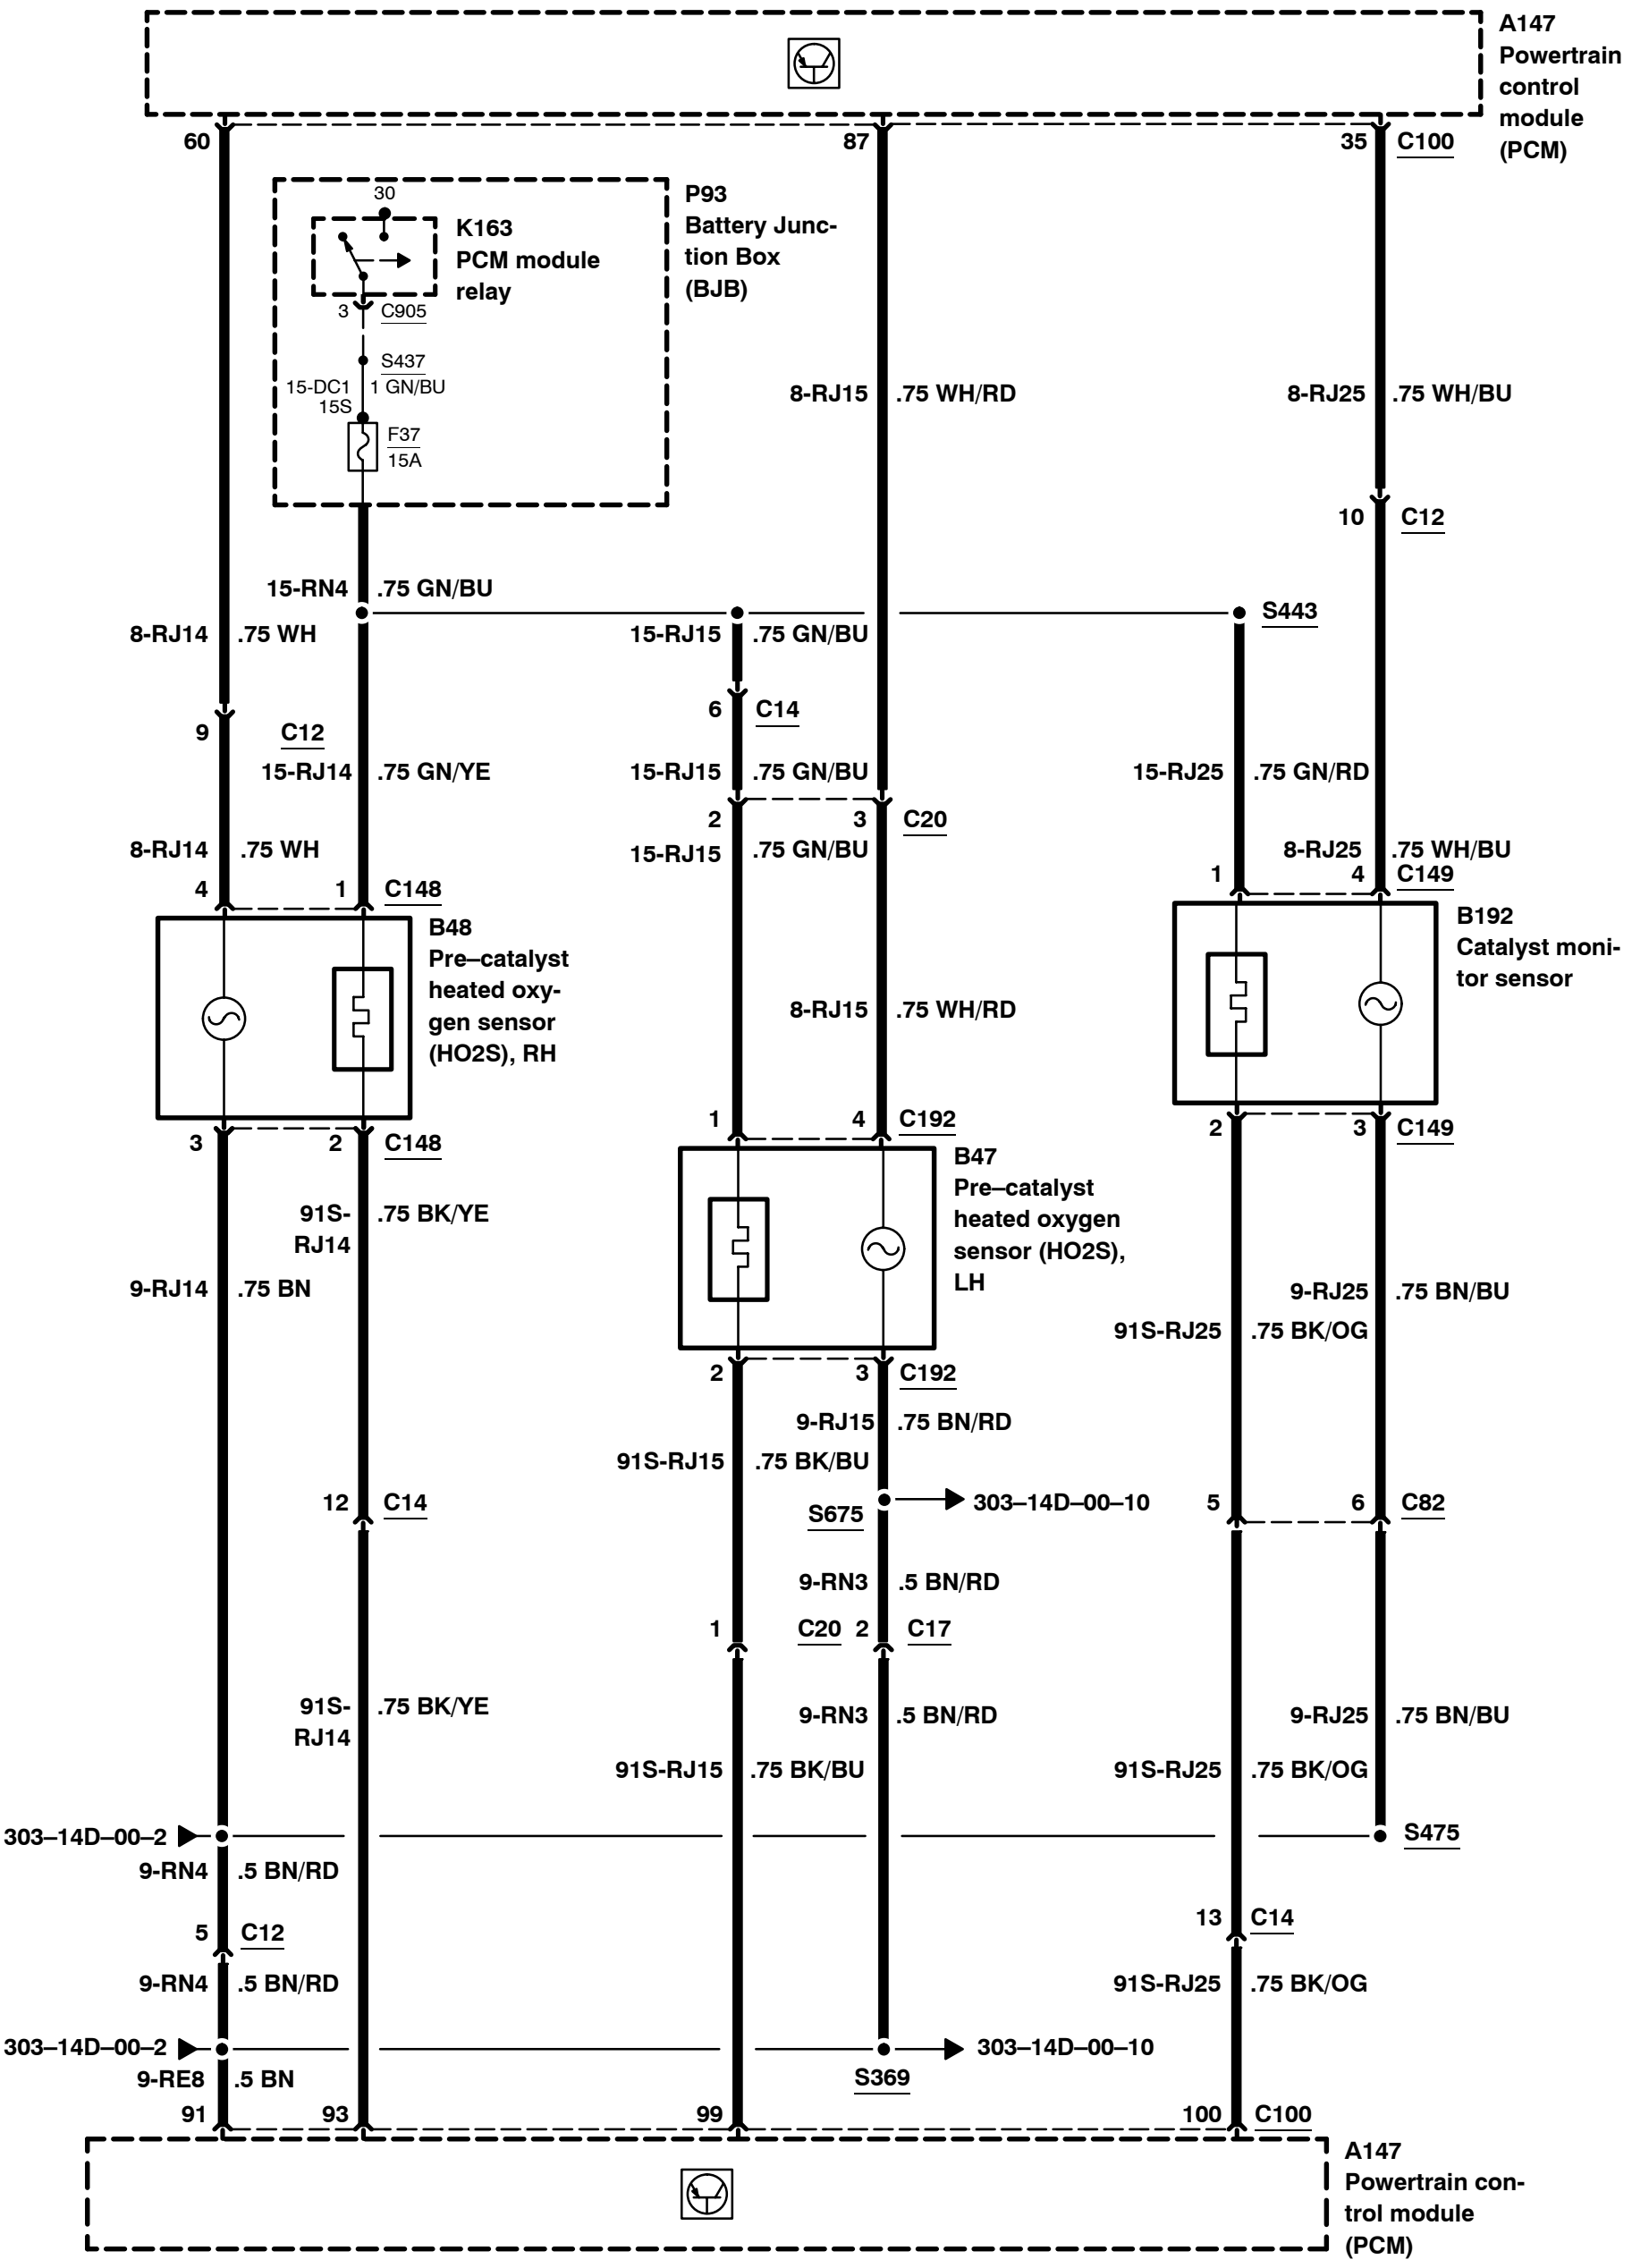


Electronic Engine Controls – 3.0L Duratec–ST (VE6), before 04/2004

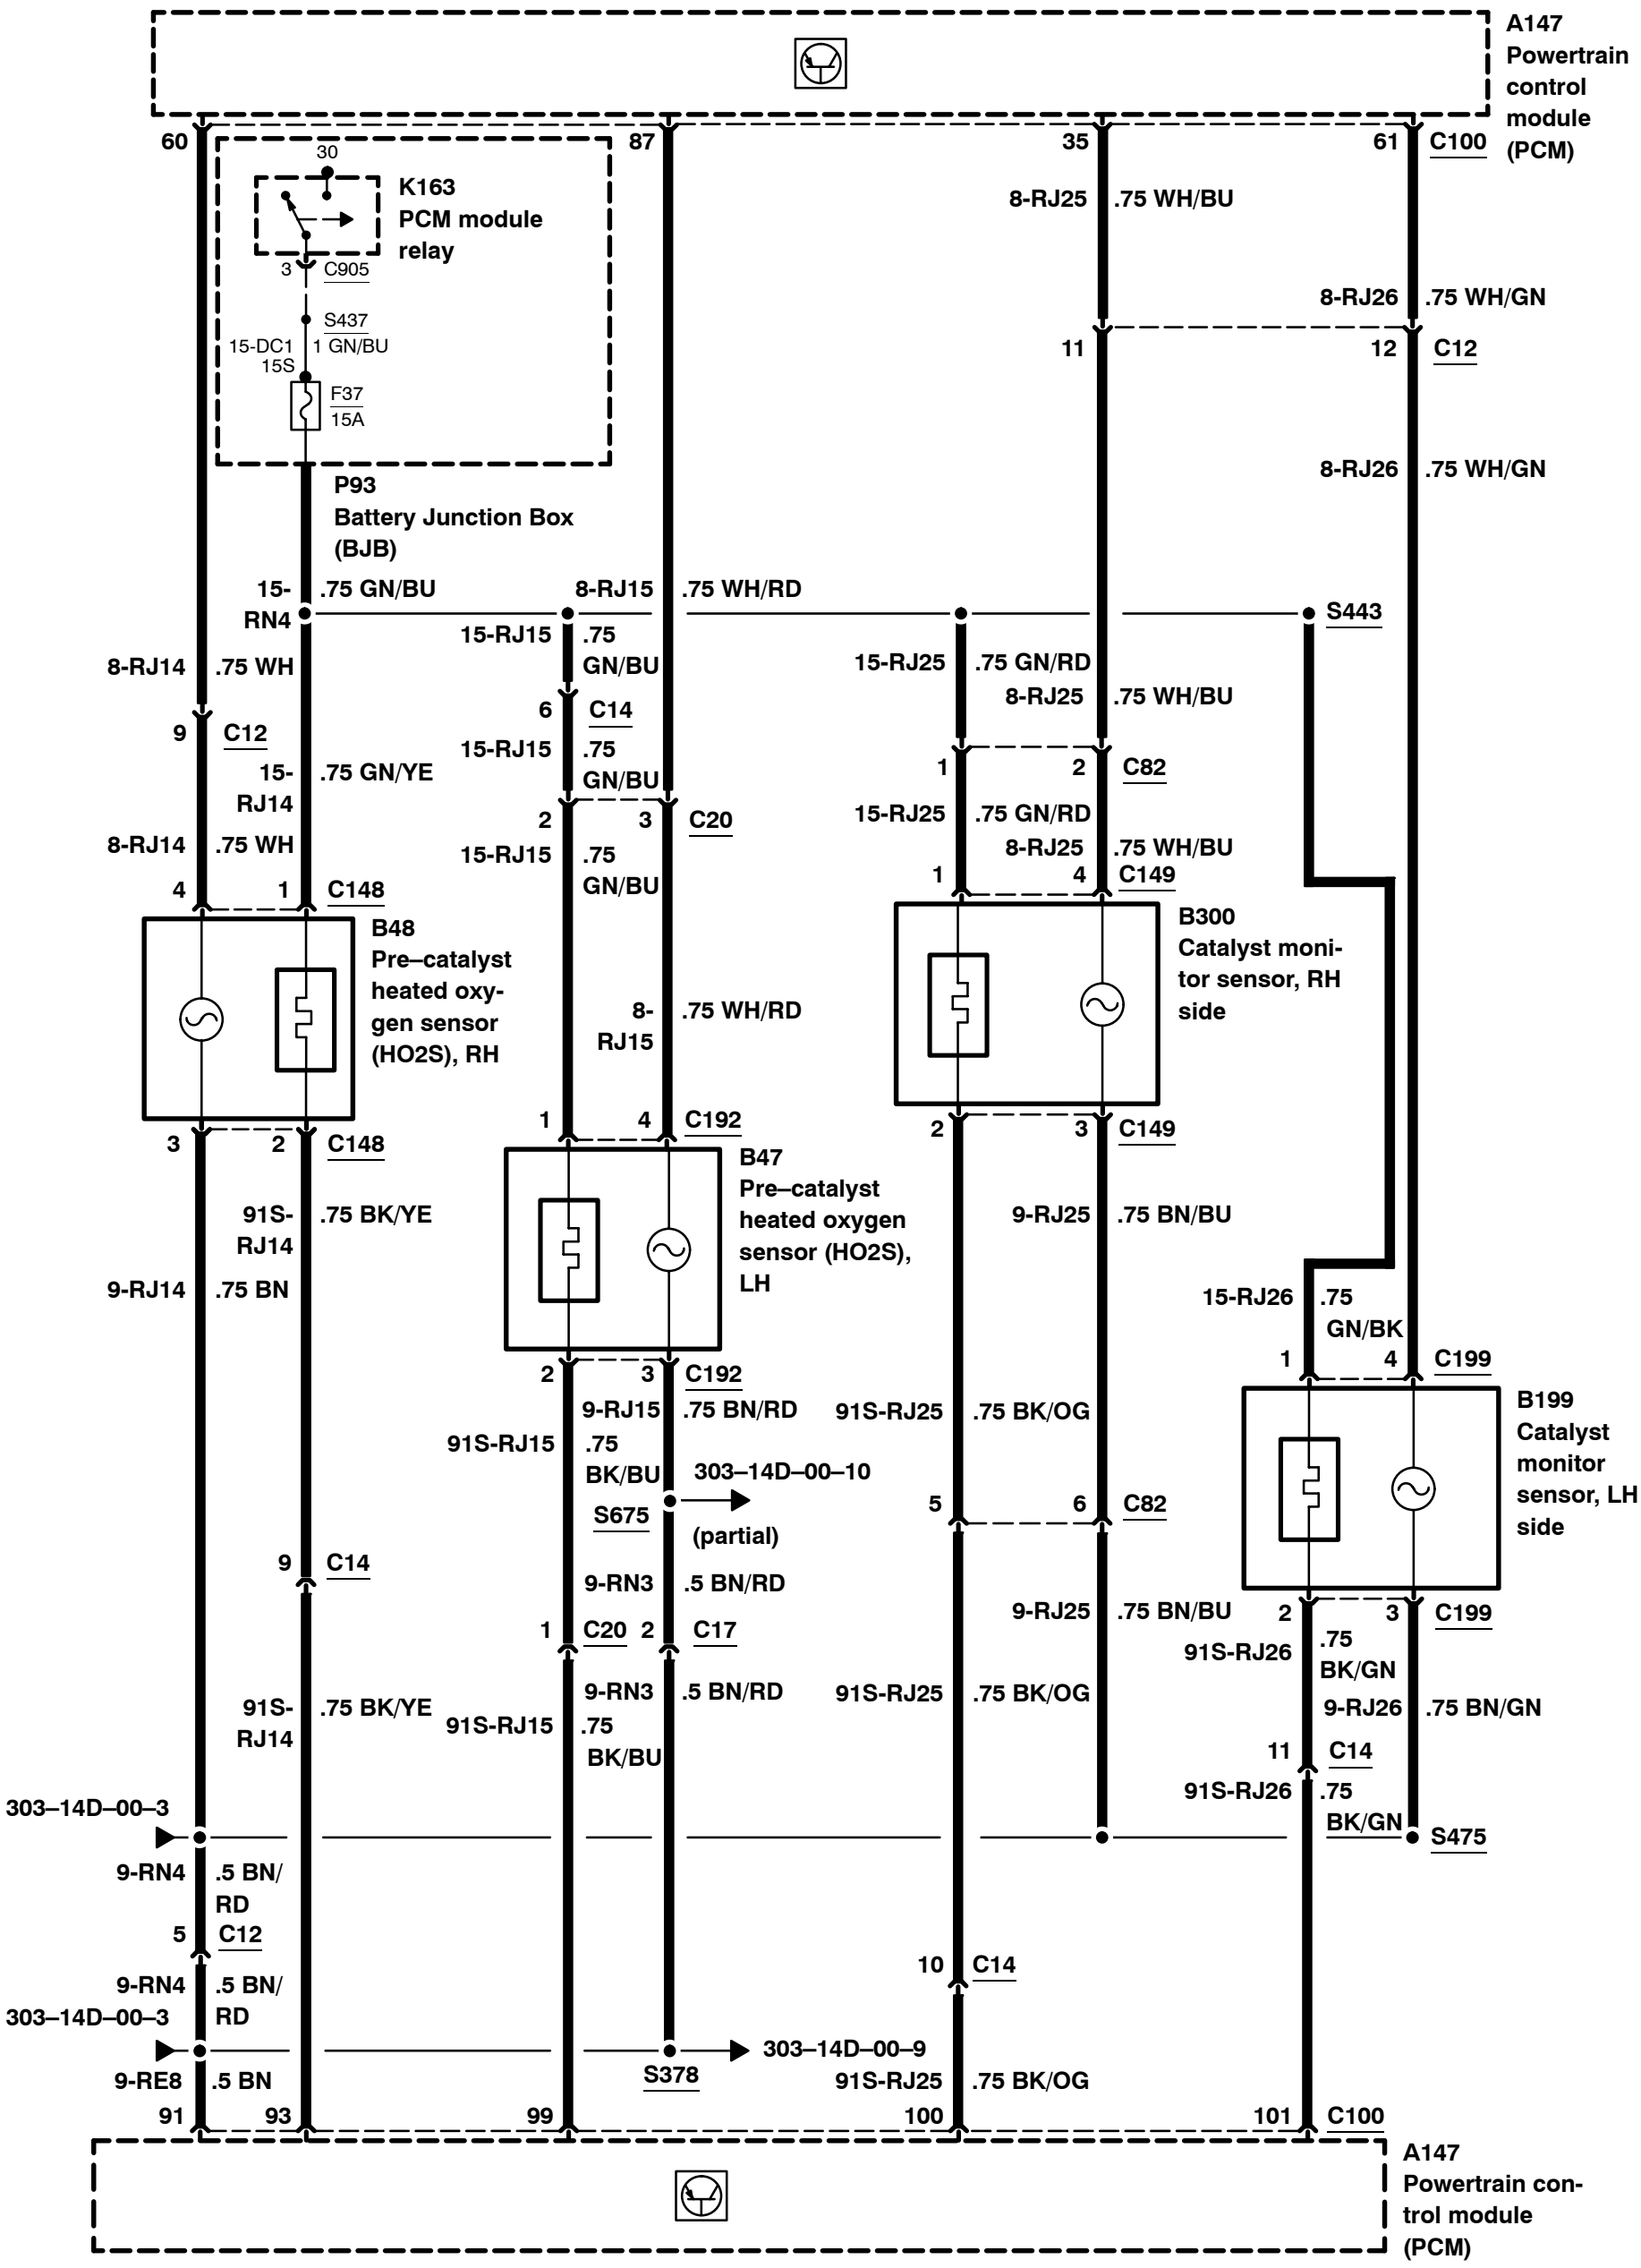

Electronic Engine Controls – 3.0L Duratec–ST (VE6), as of 04/2004

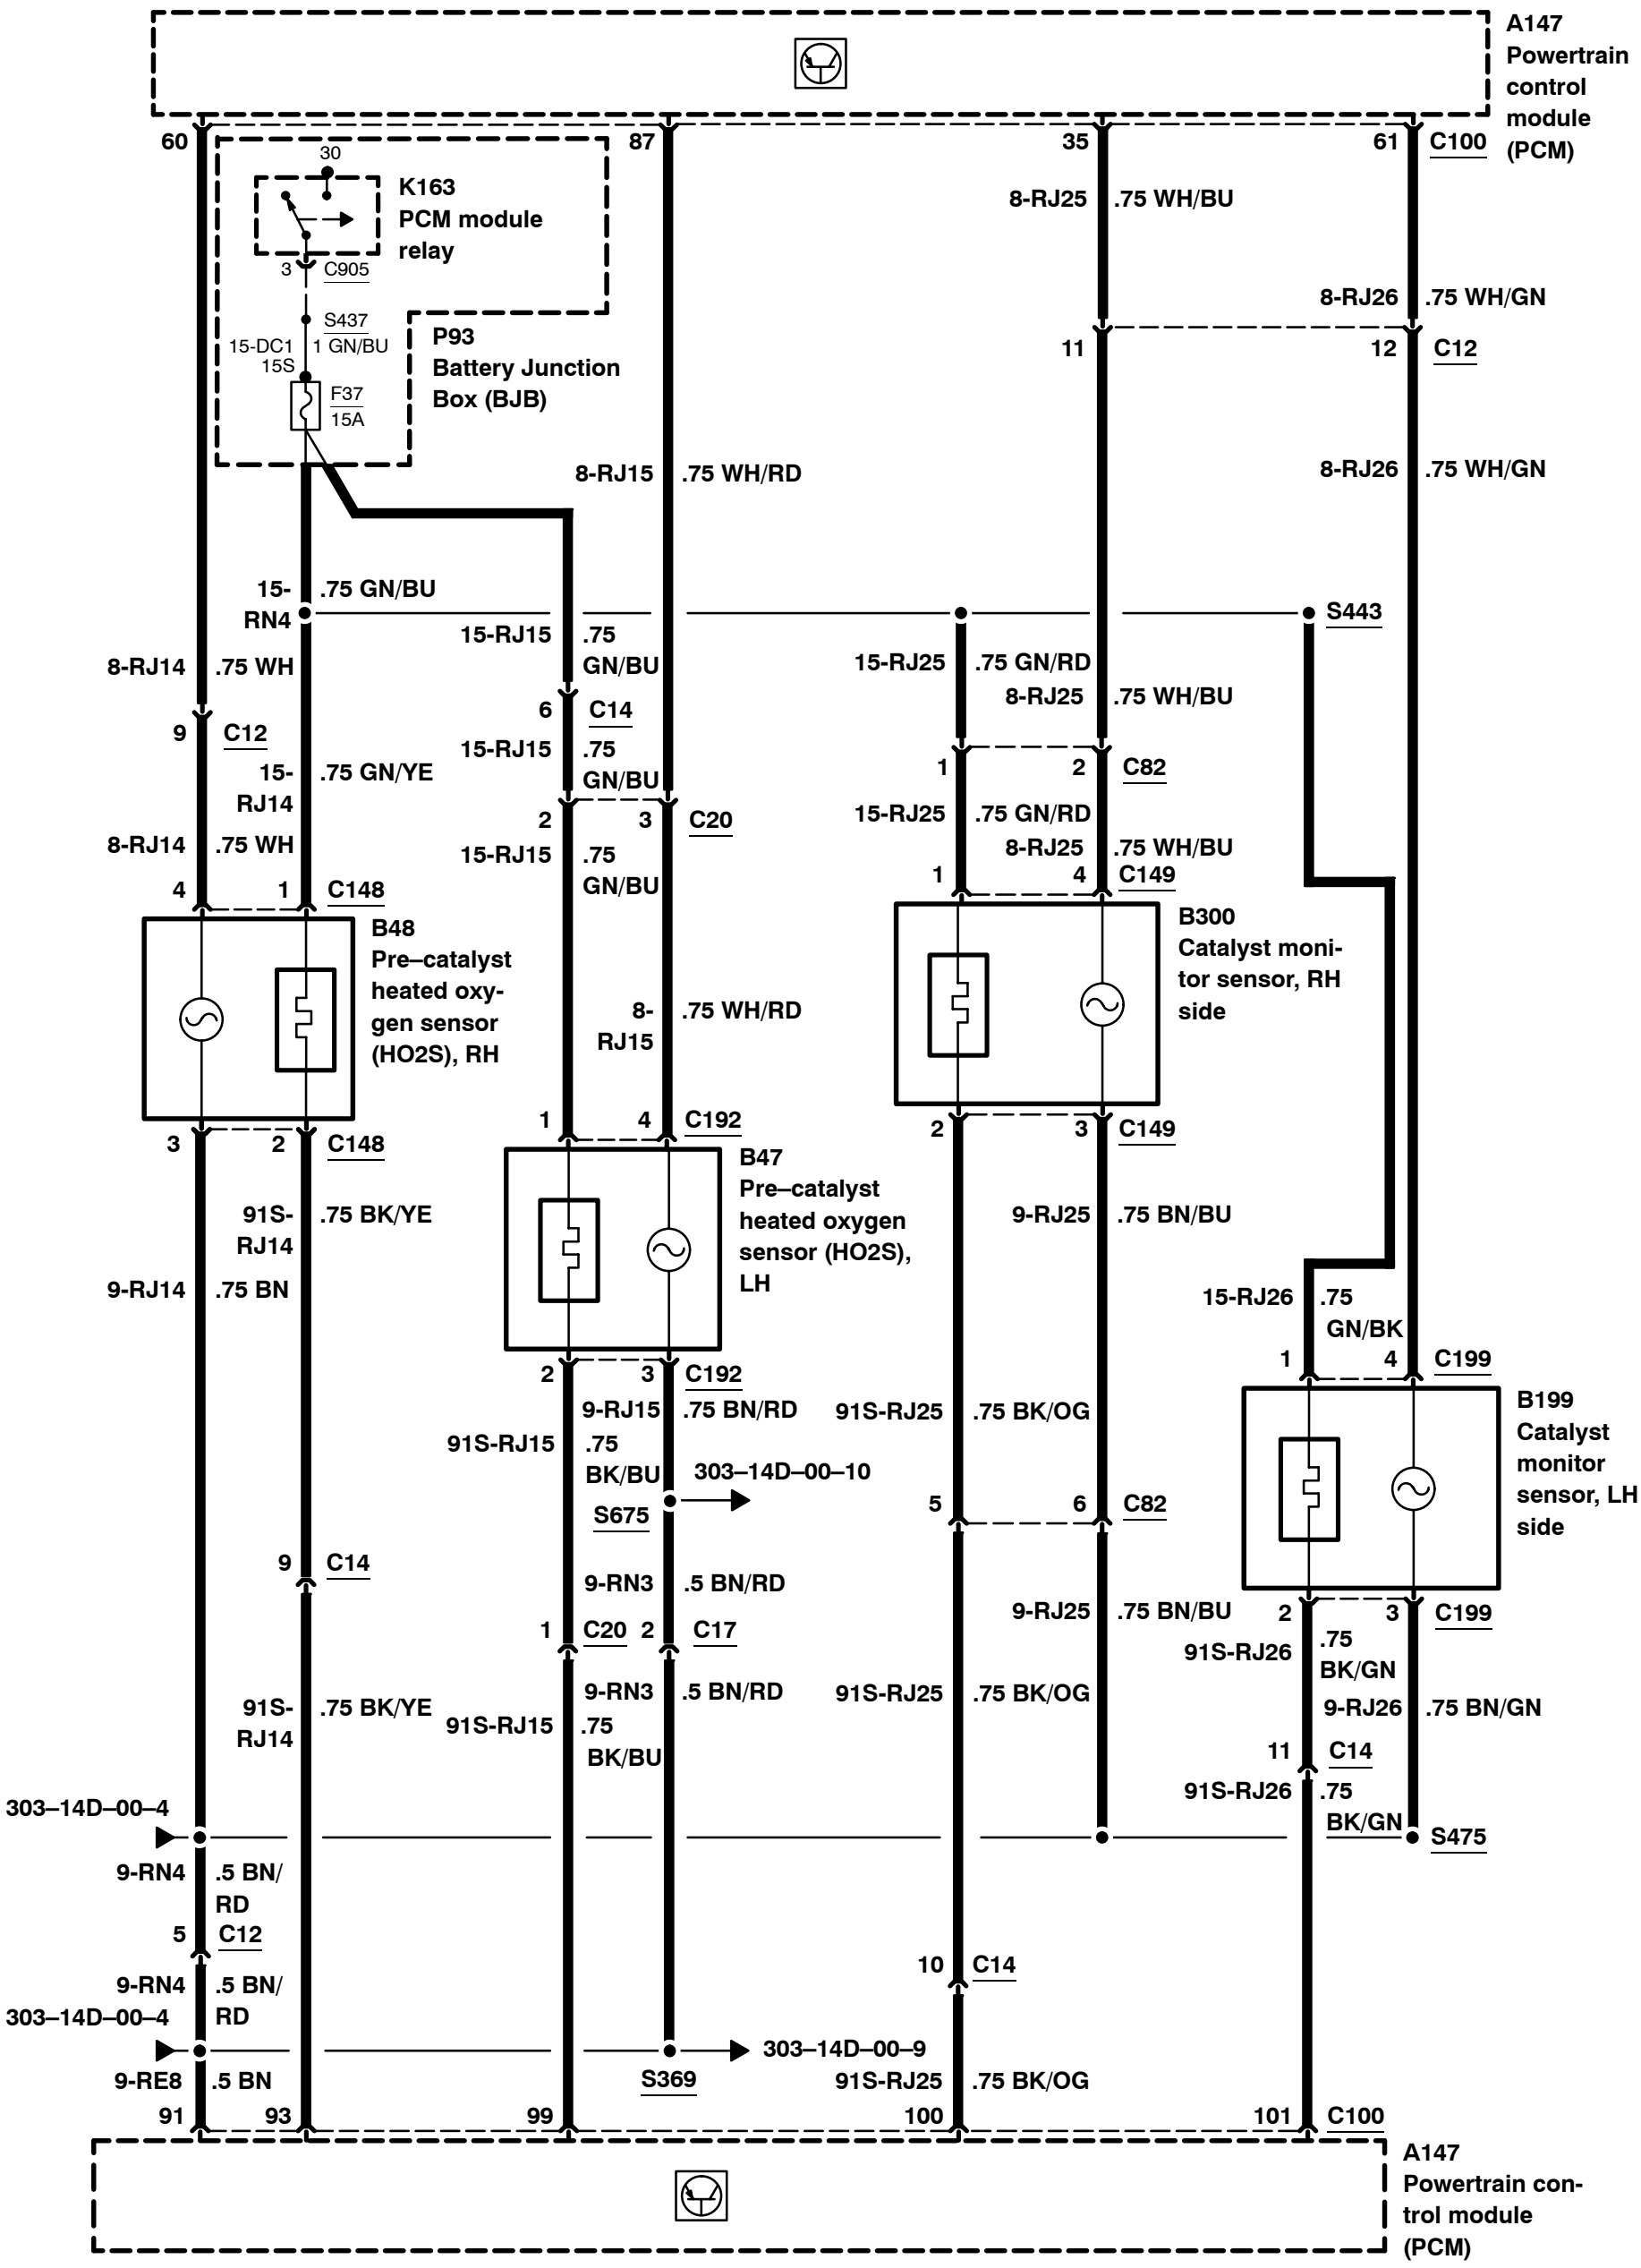


Electronic Engine Controls – 3.0L Duratec–SE (VE6)

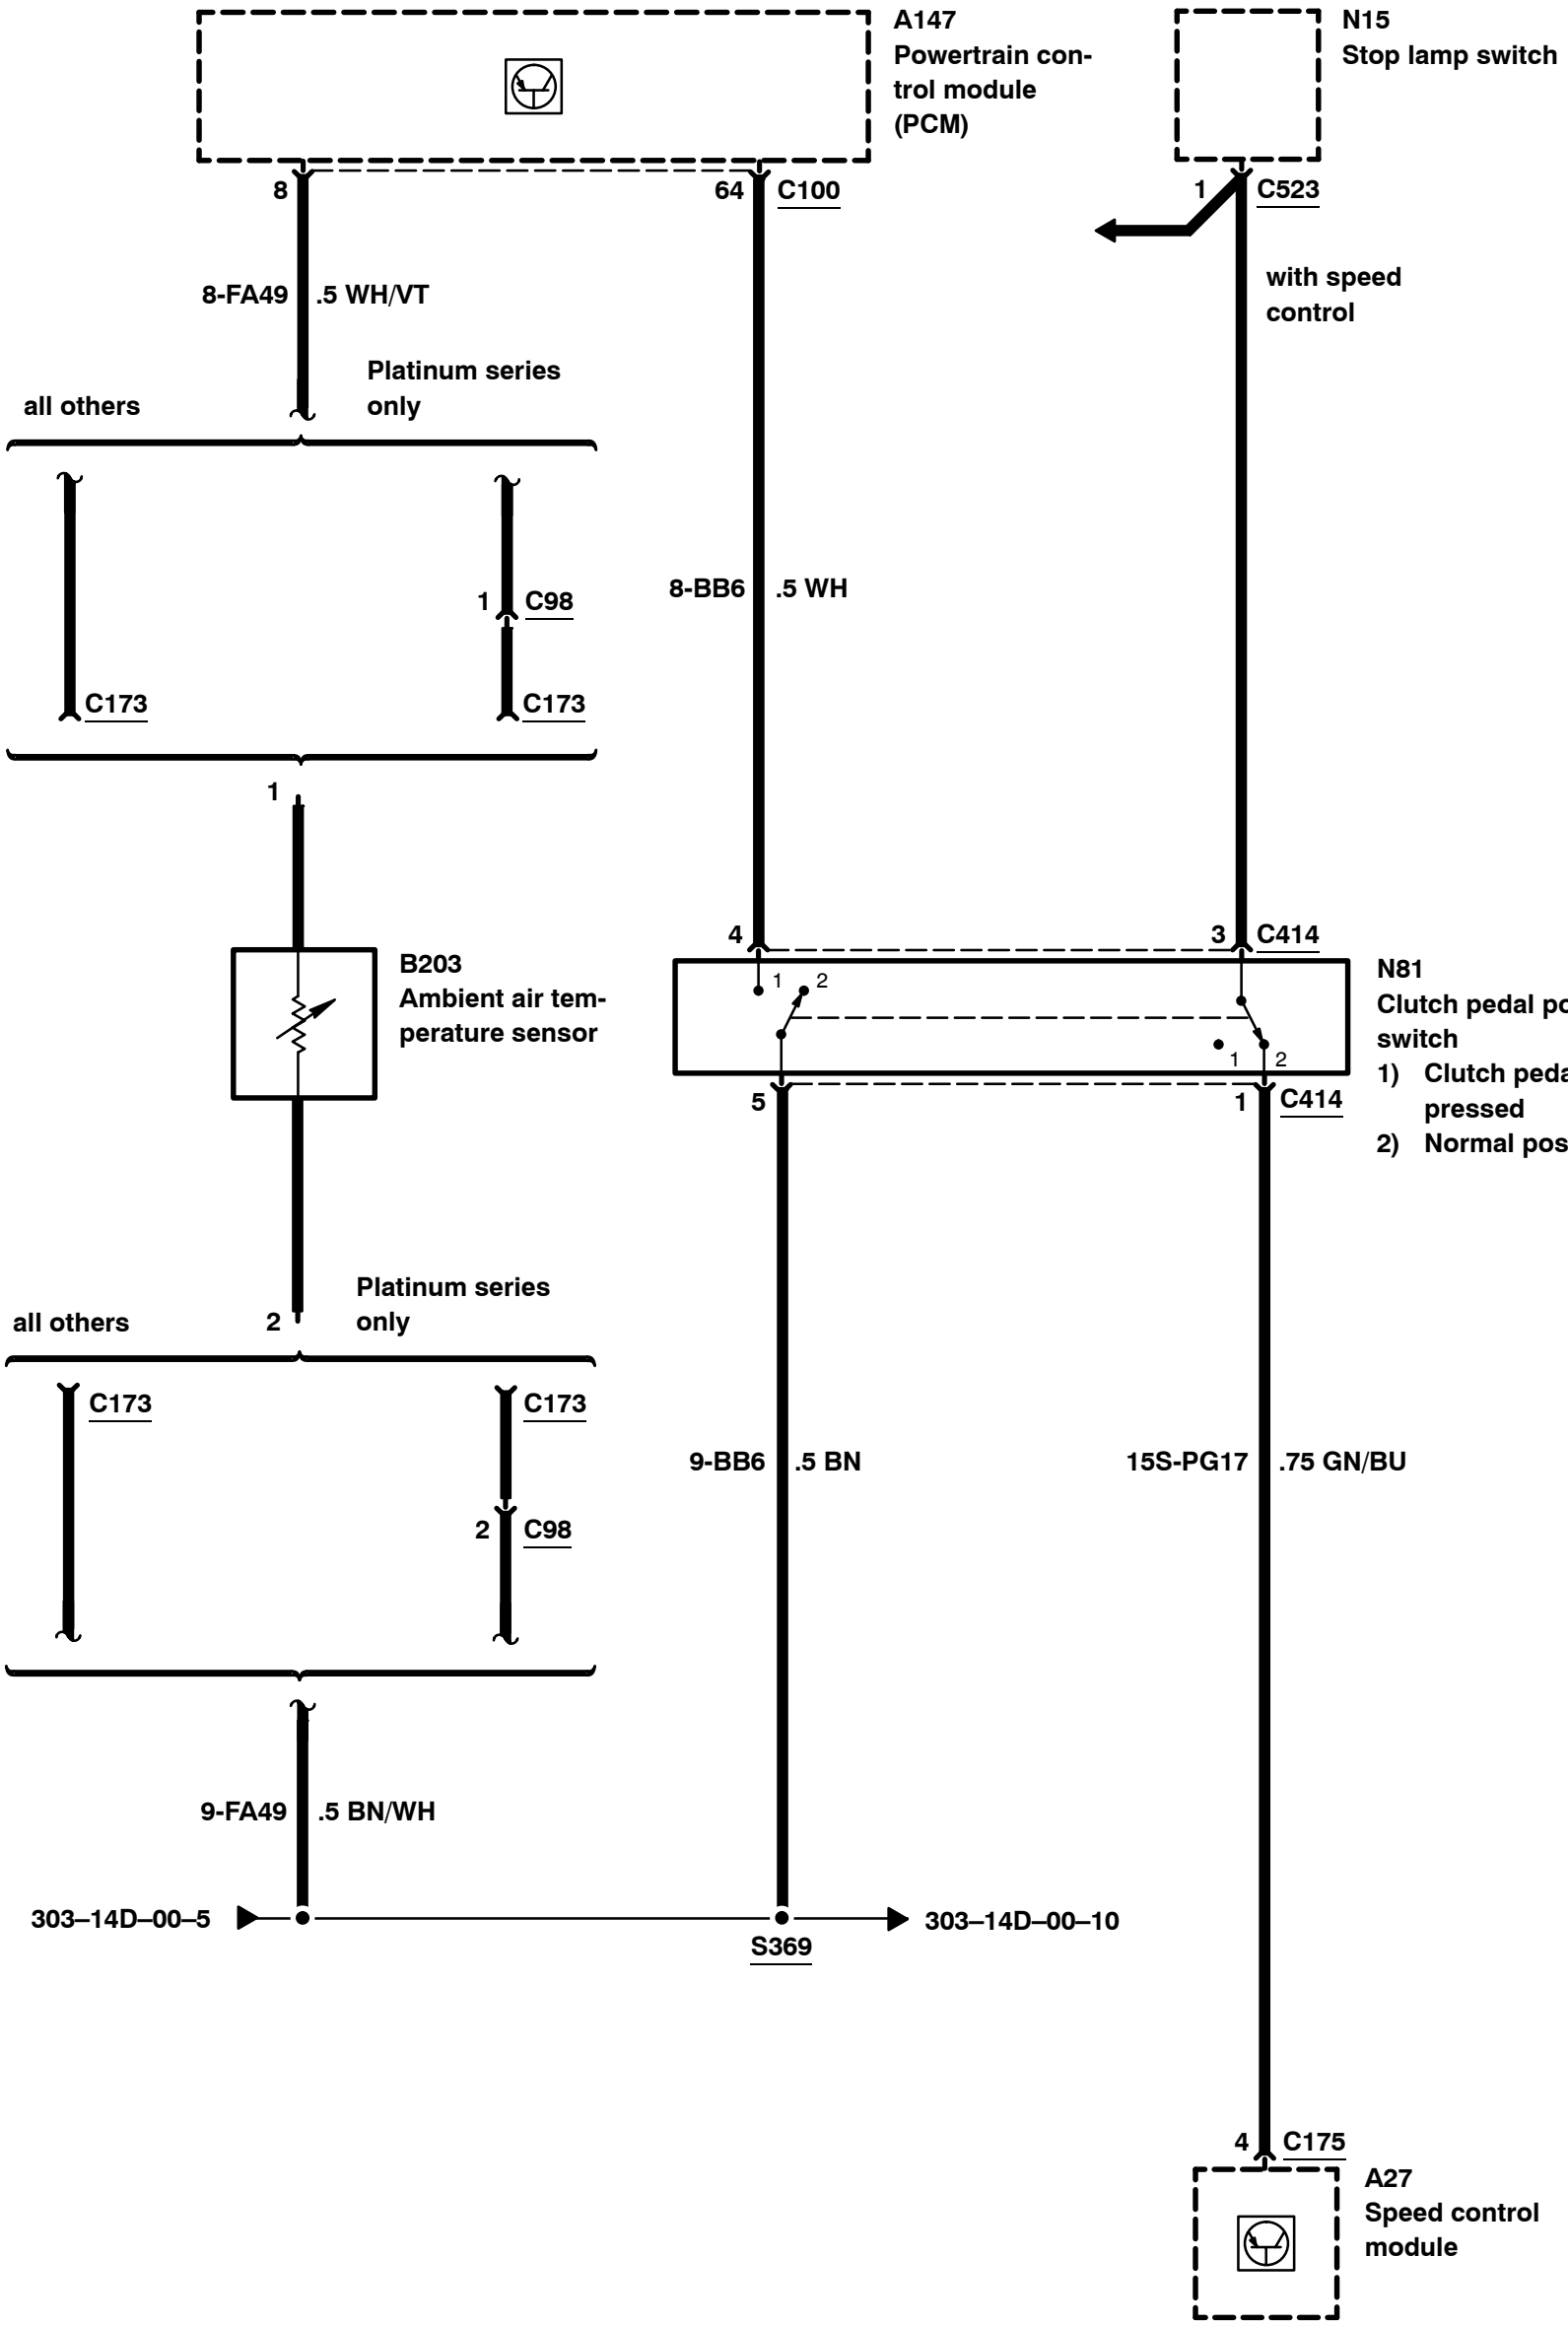


Electronic Engine Controls – 3.0L Duratec–ST (VE6)


Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

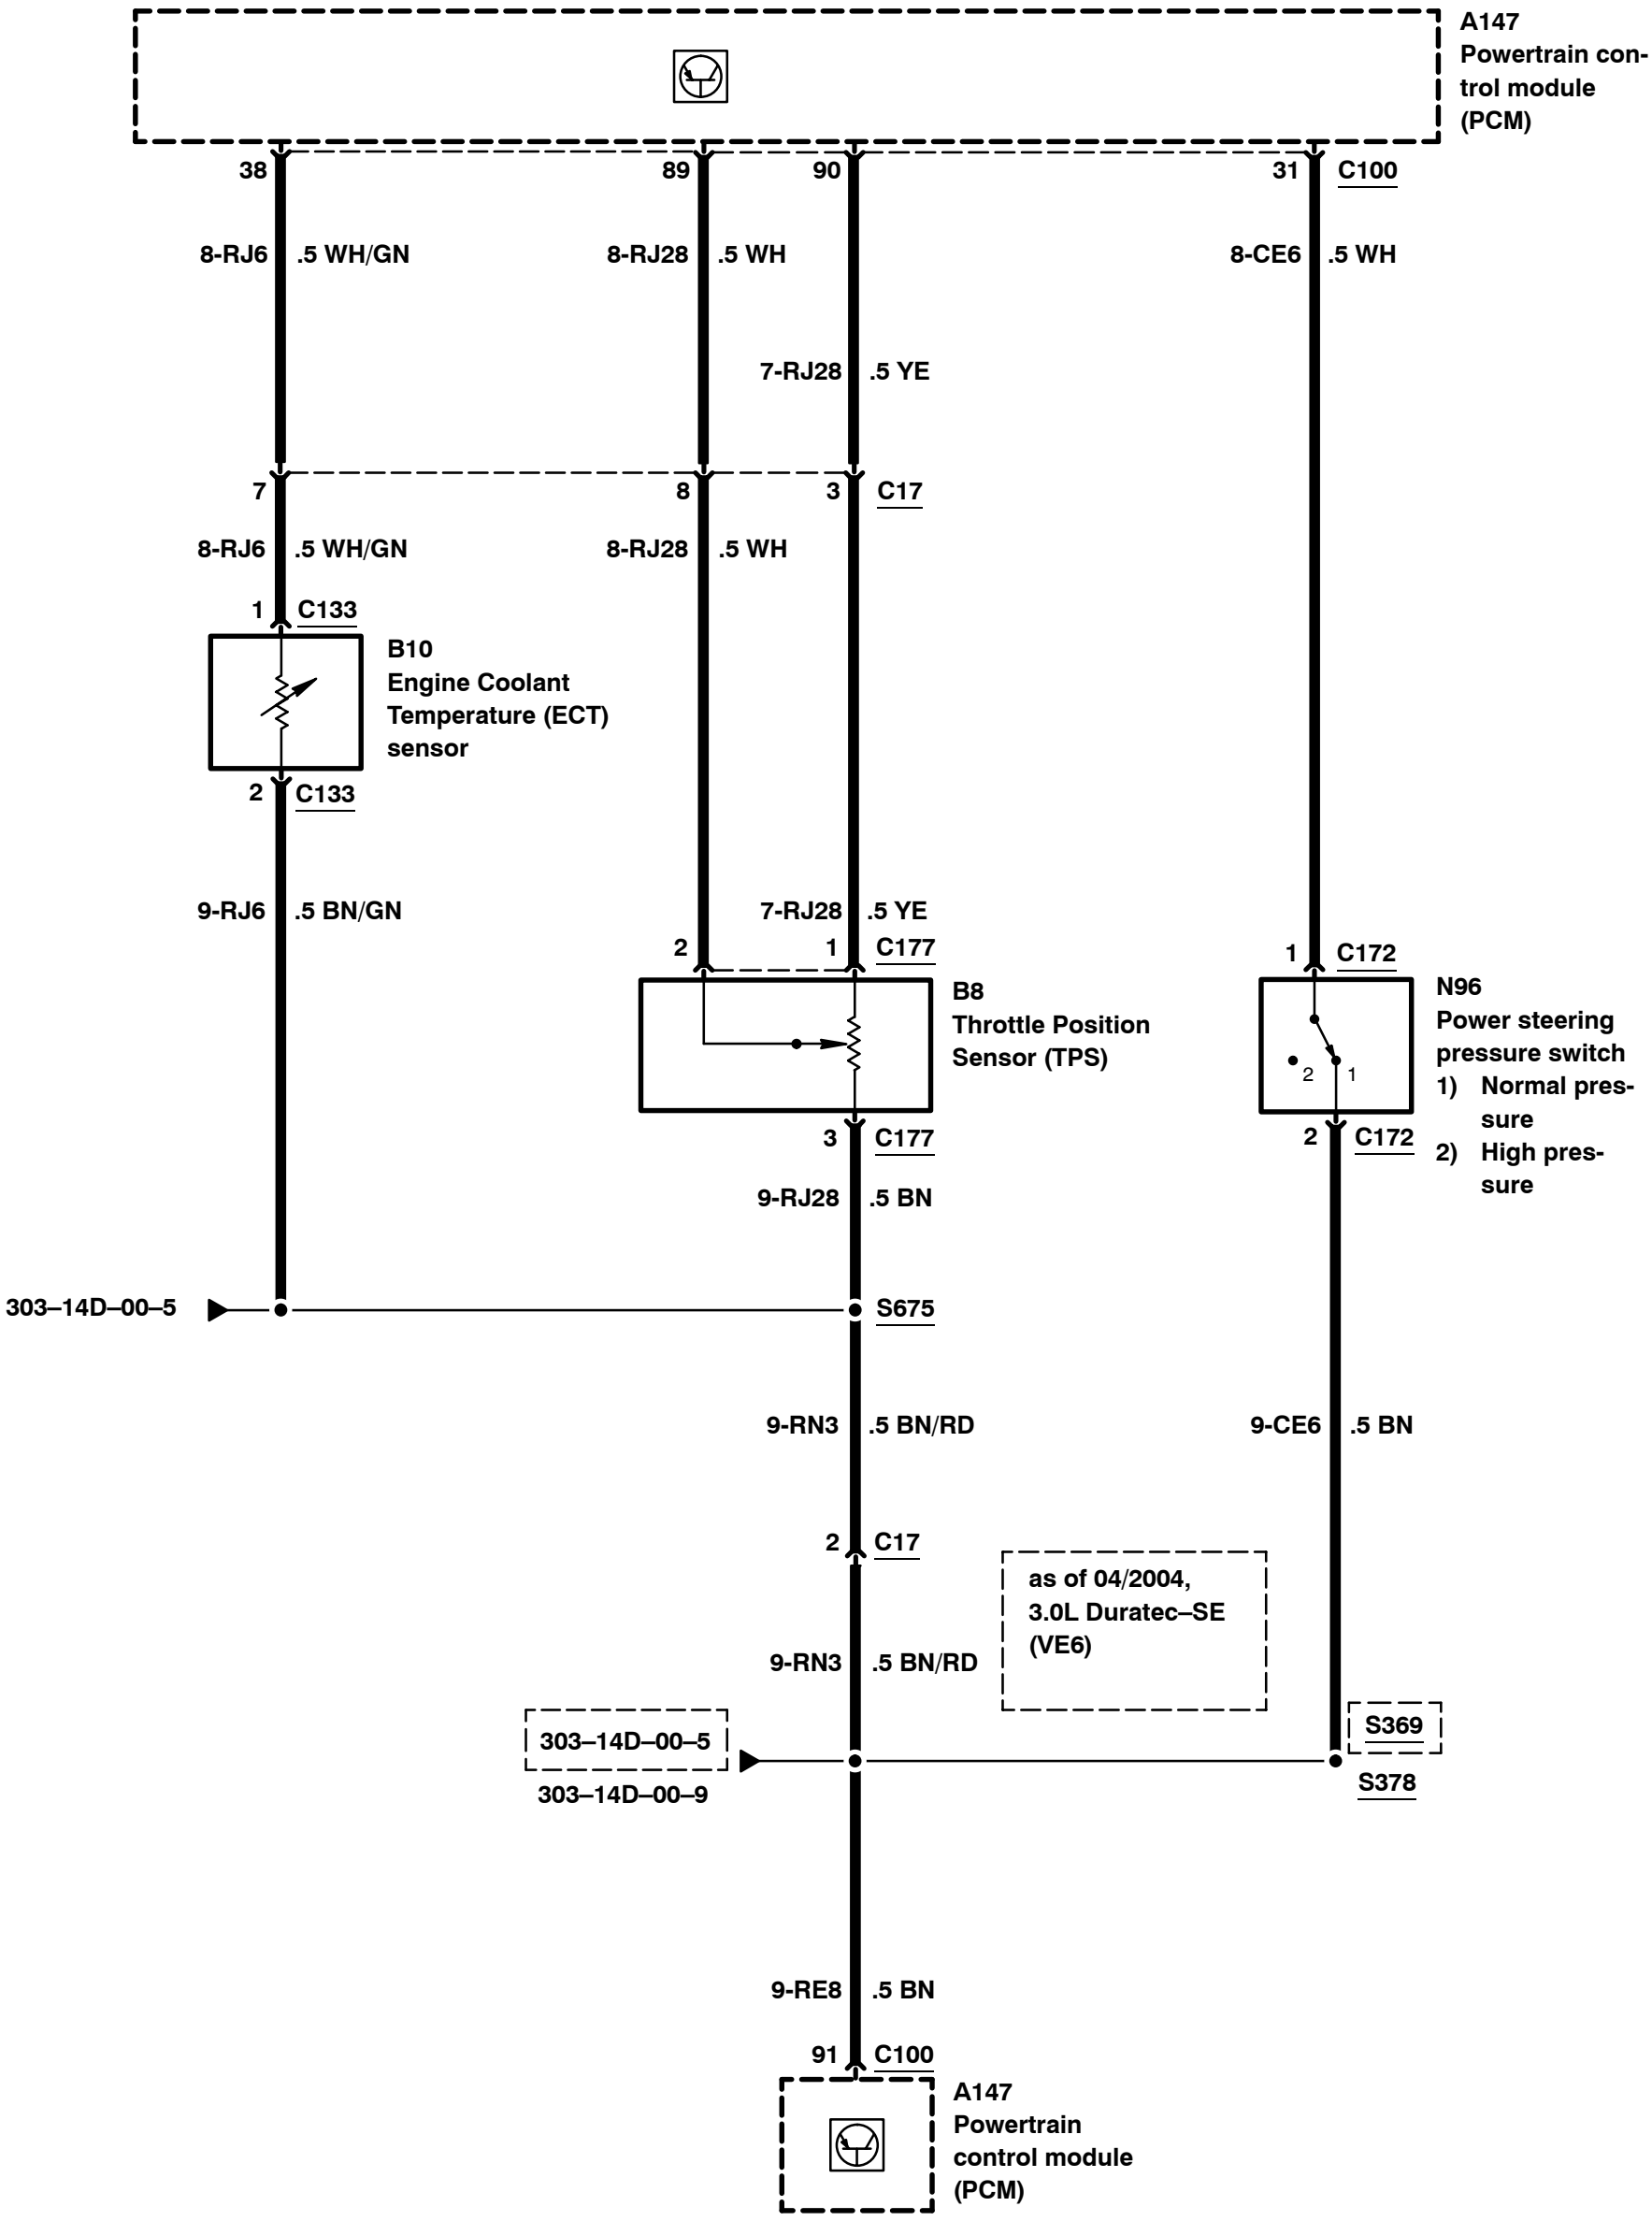


Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

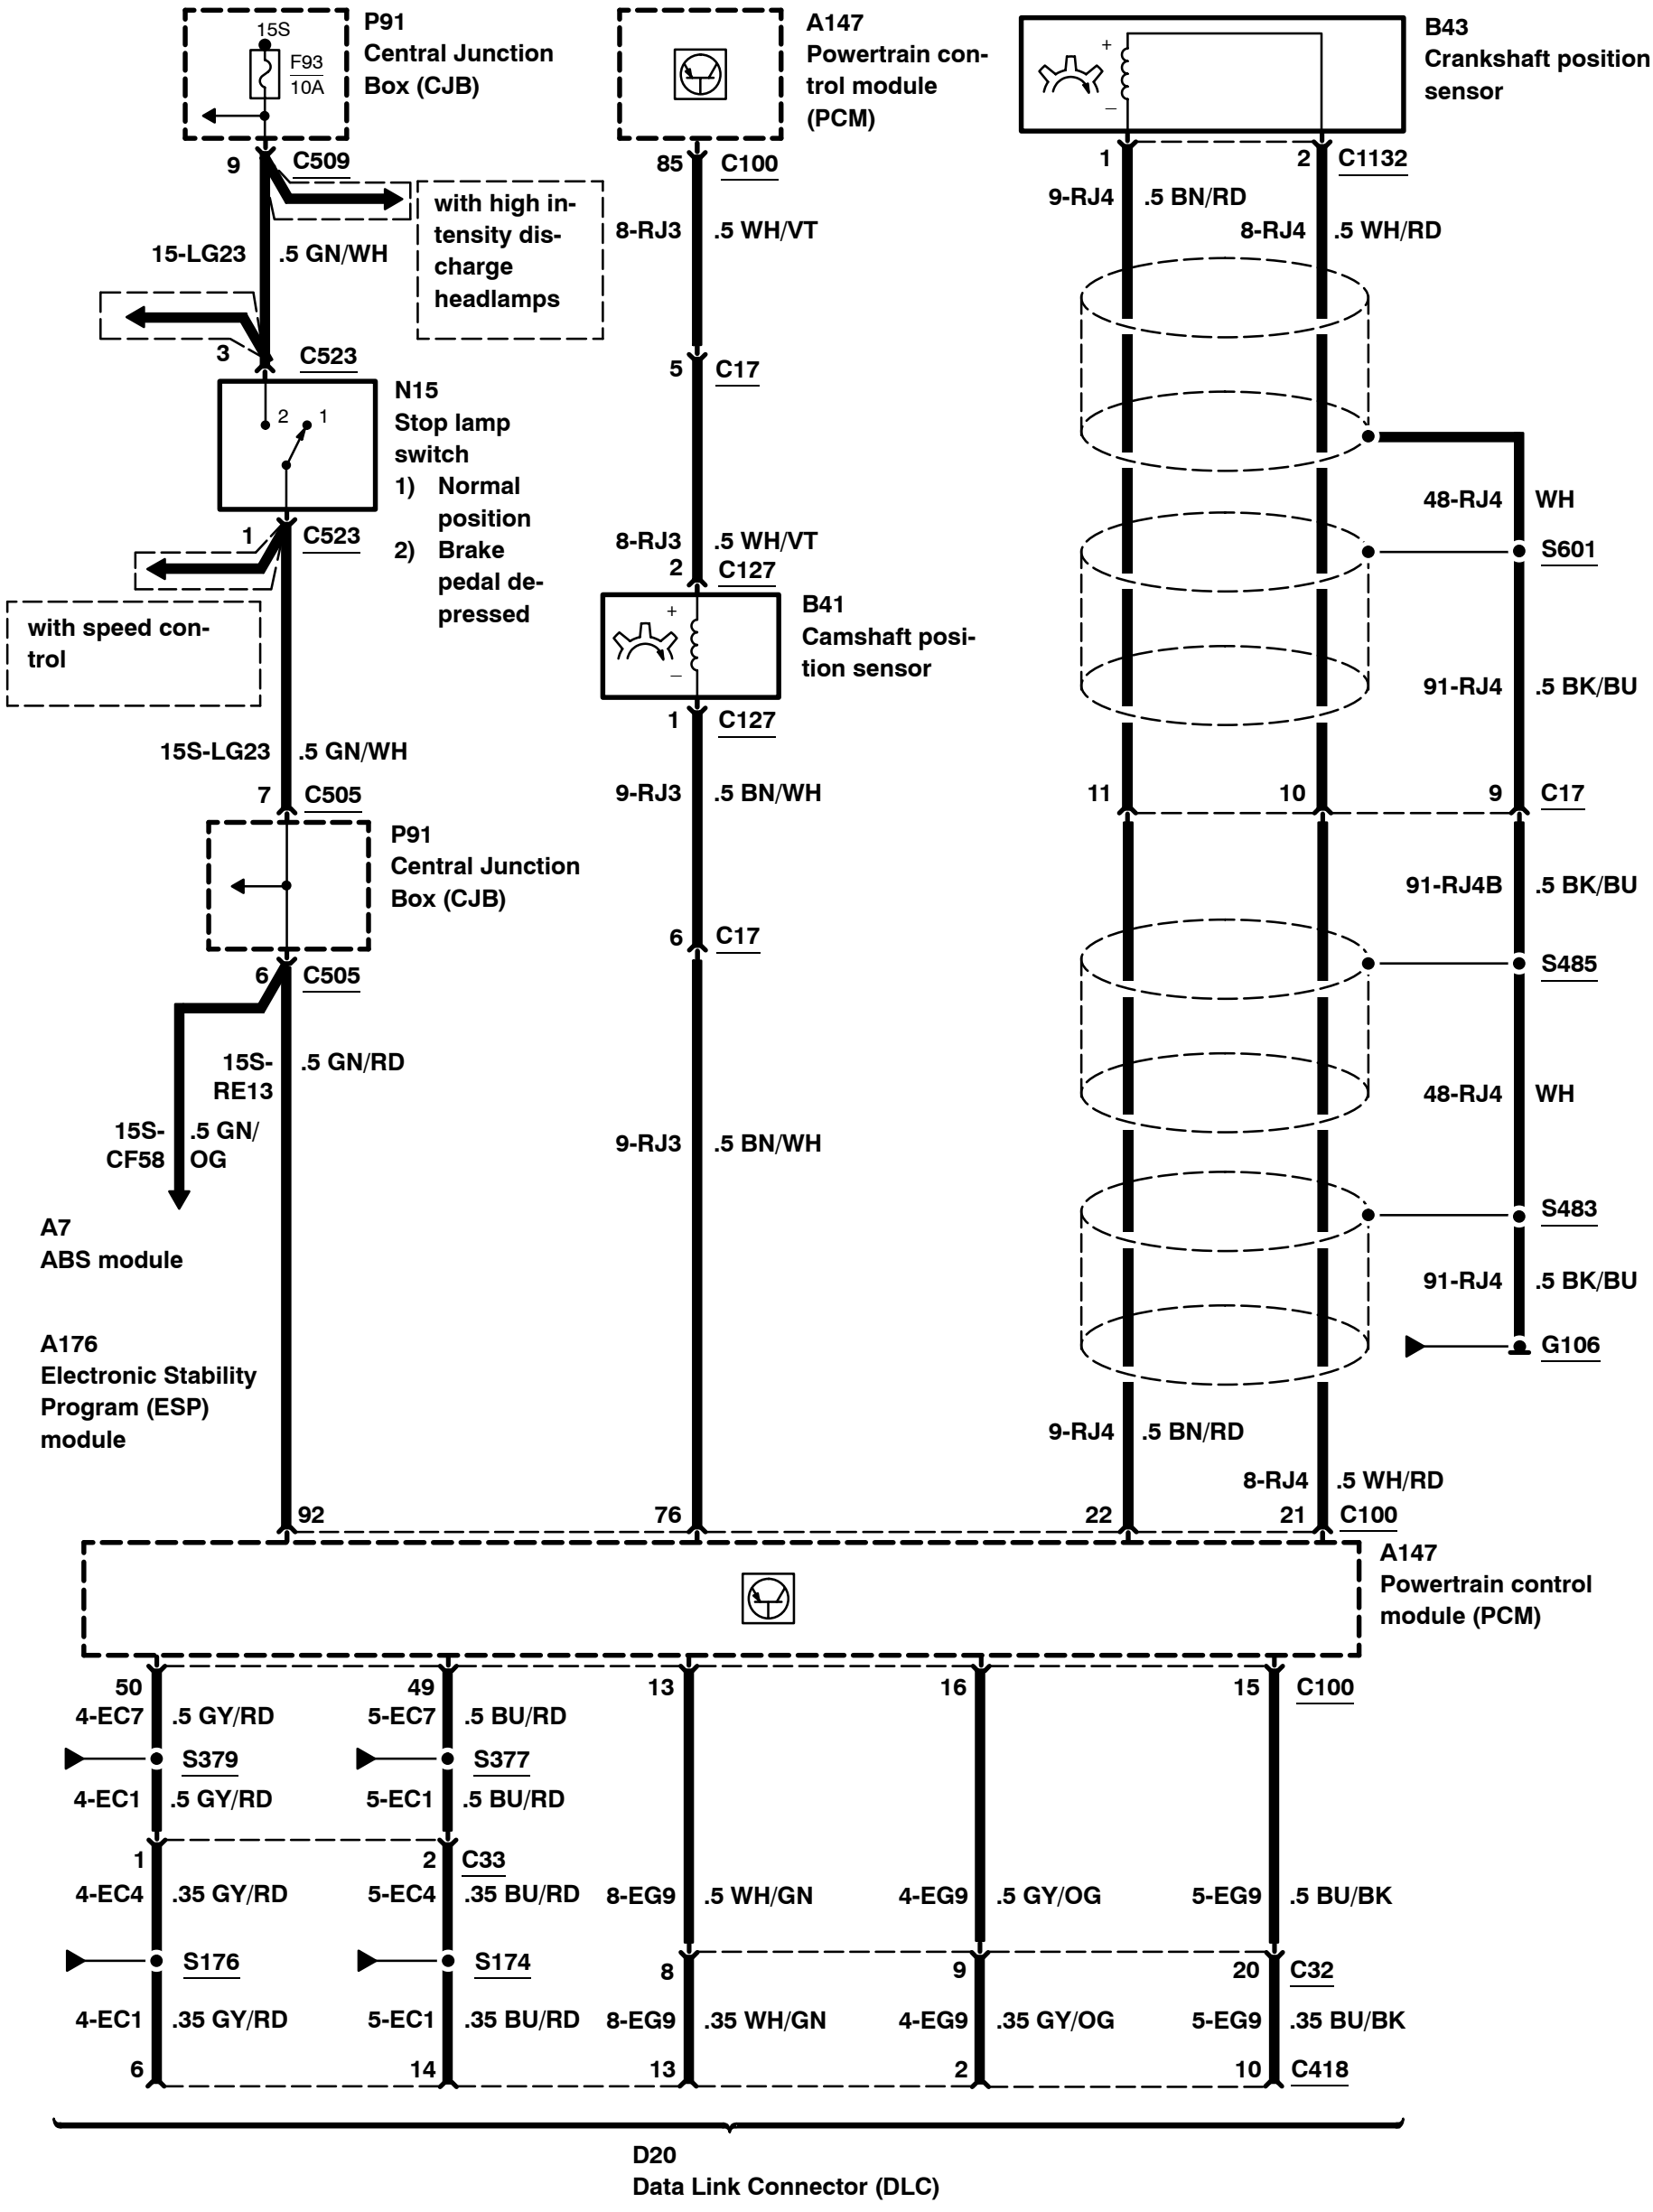


Electronic Engine Controls – 3.0L Duratec–SE (VE6)

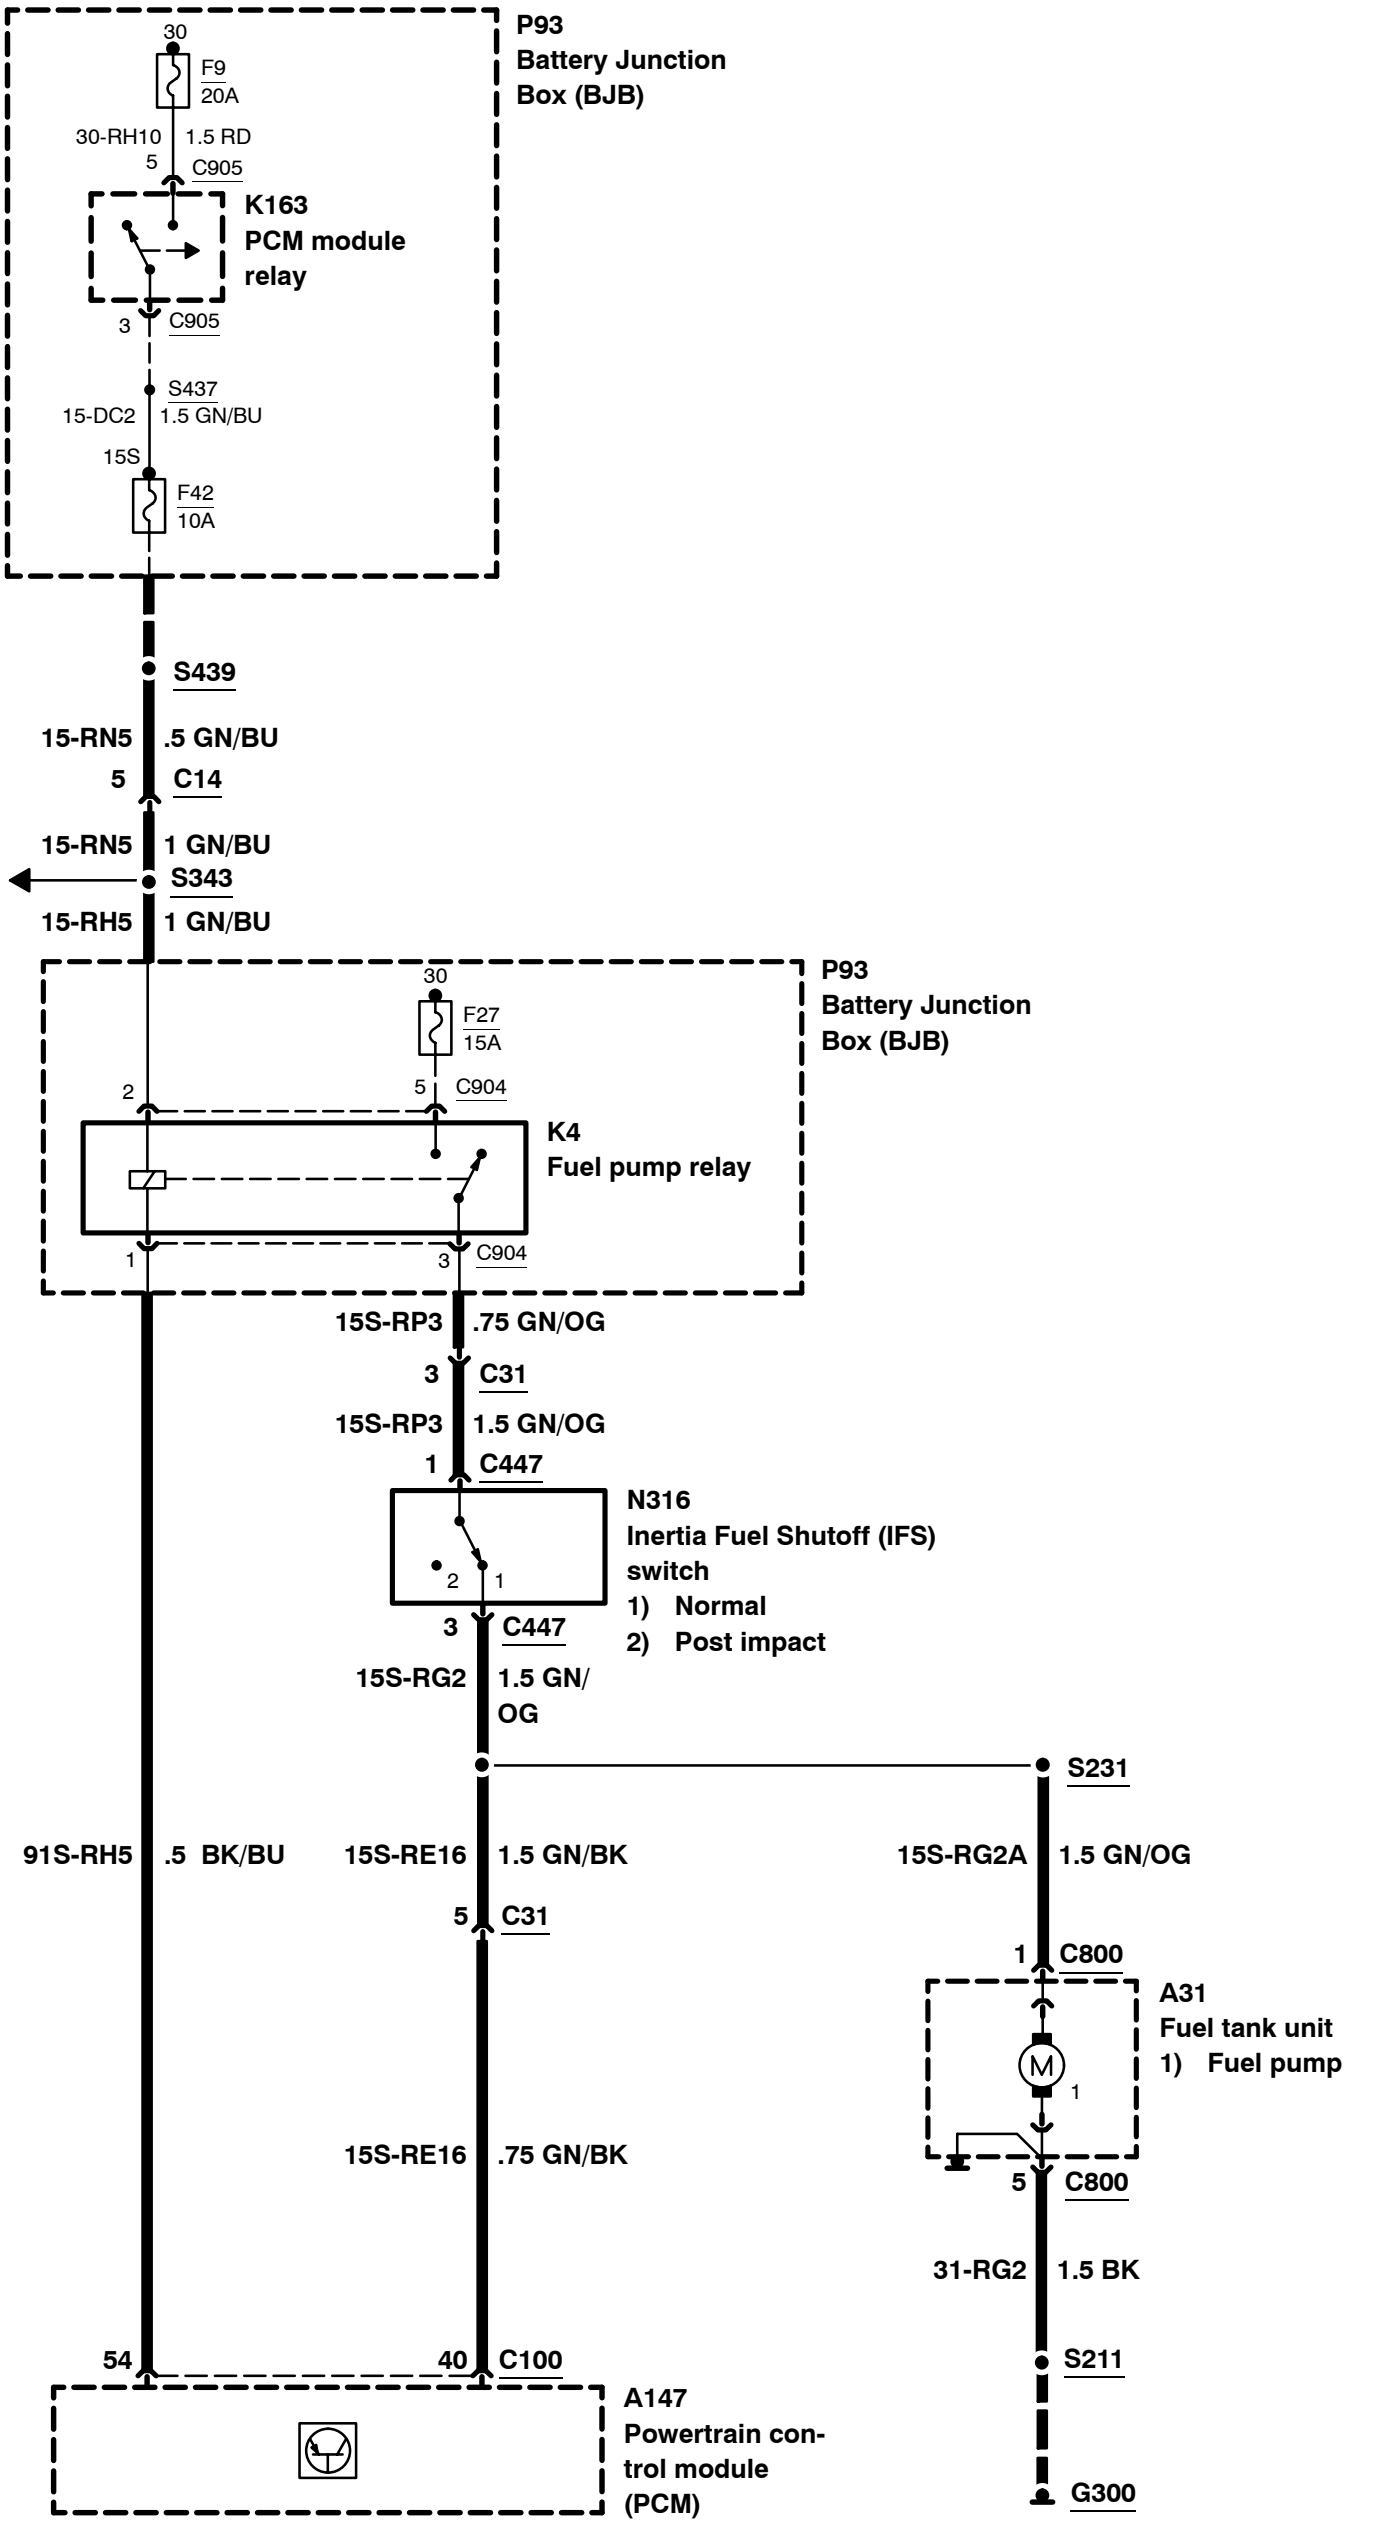


Electronic Engine Controls – 3.0L Duratec–ST (VE6), before 04/2004

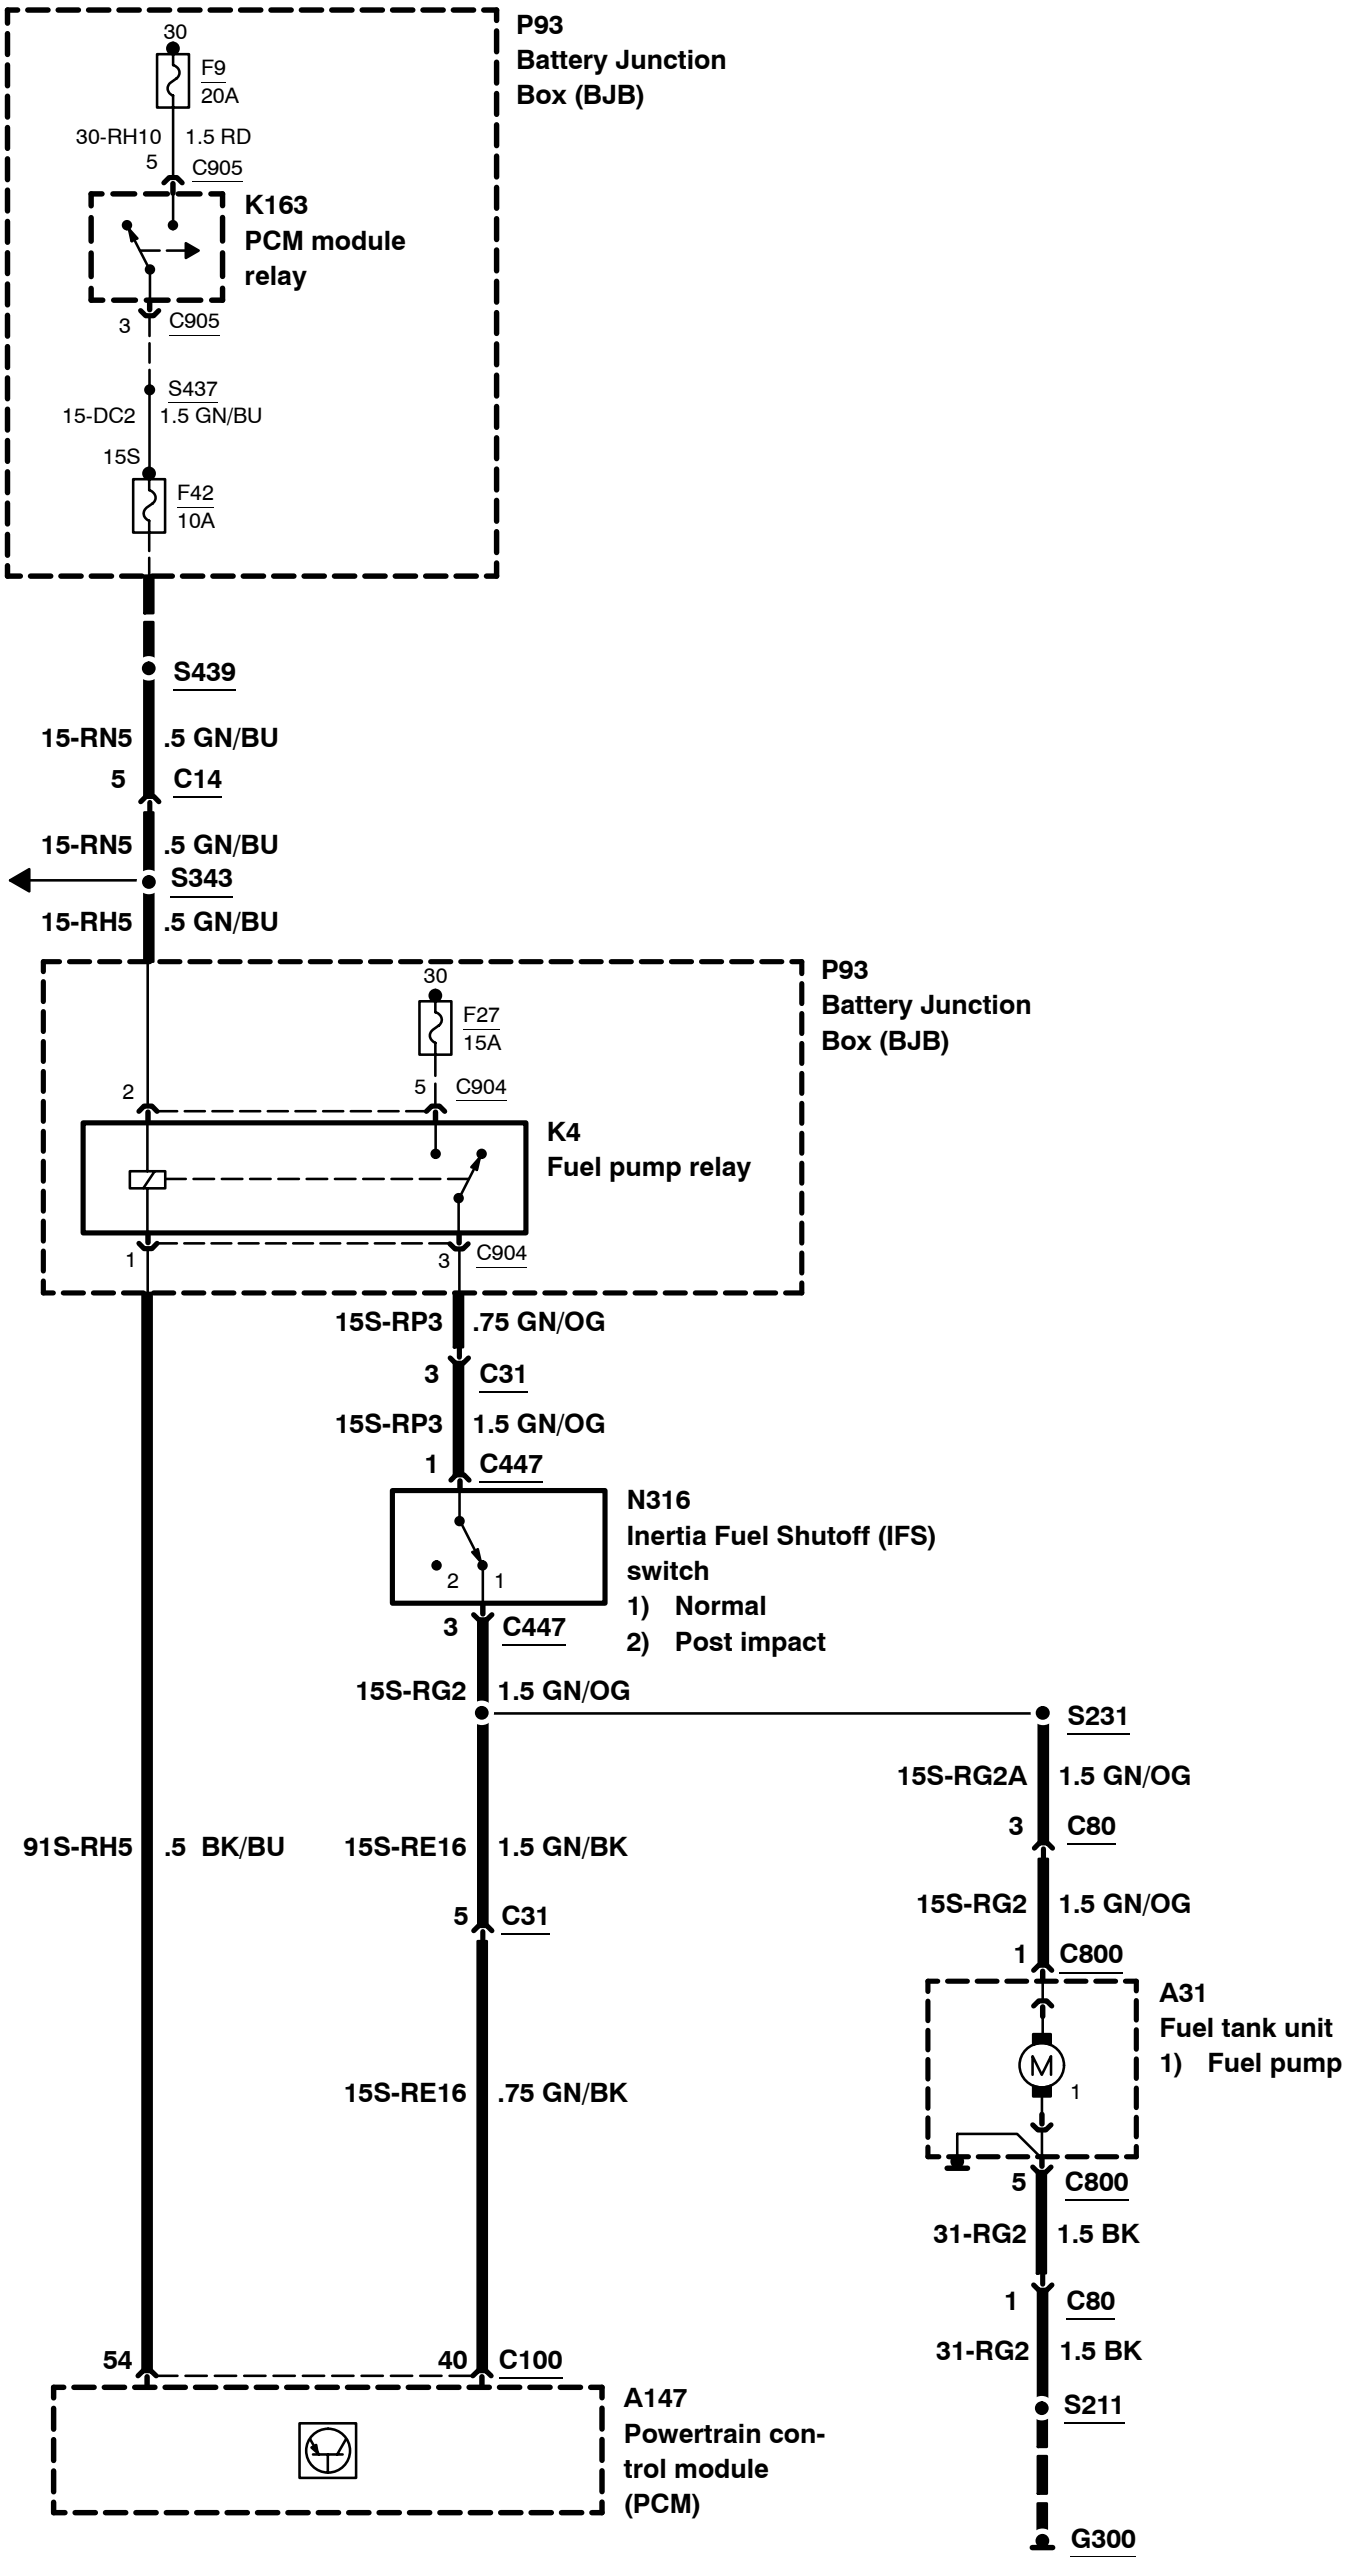


Electronic Engine Controls – 3.0L Duratec–ST (VE6), as of 04/2004

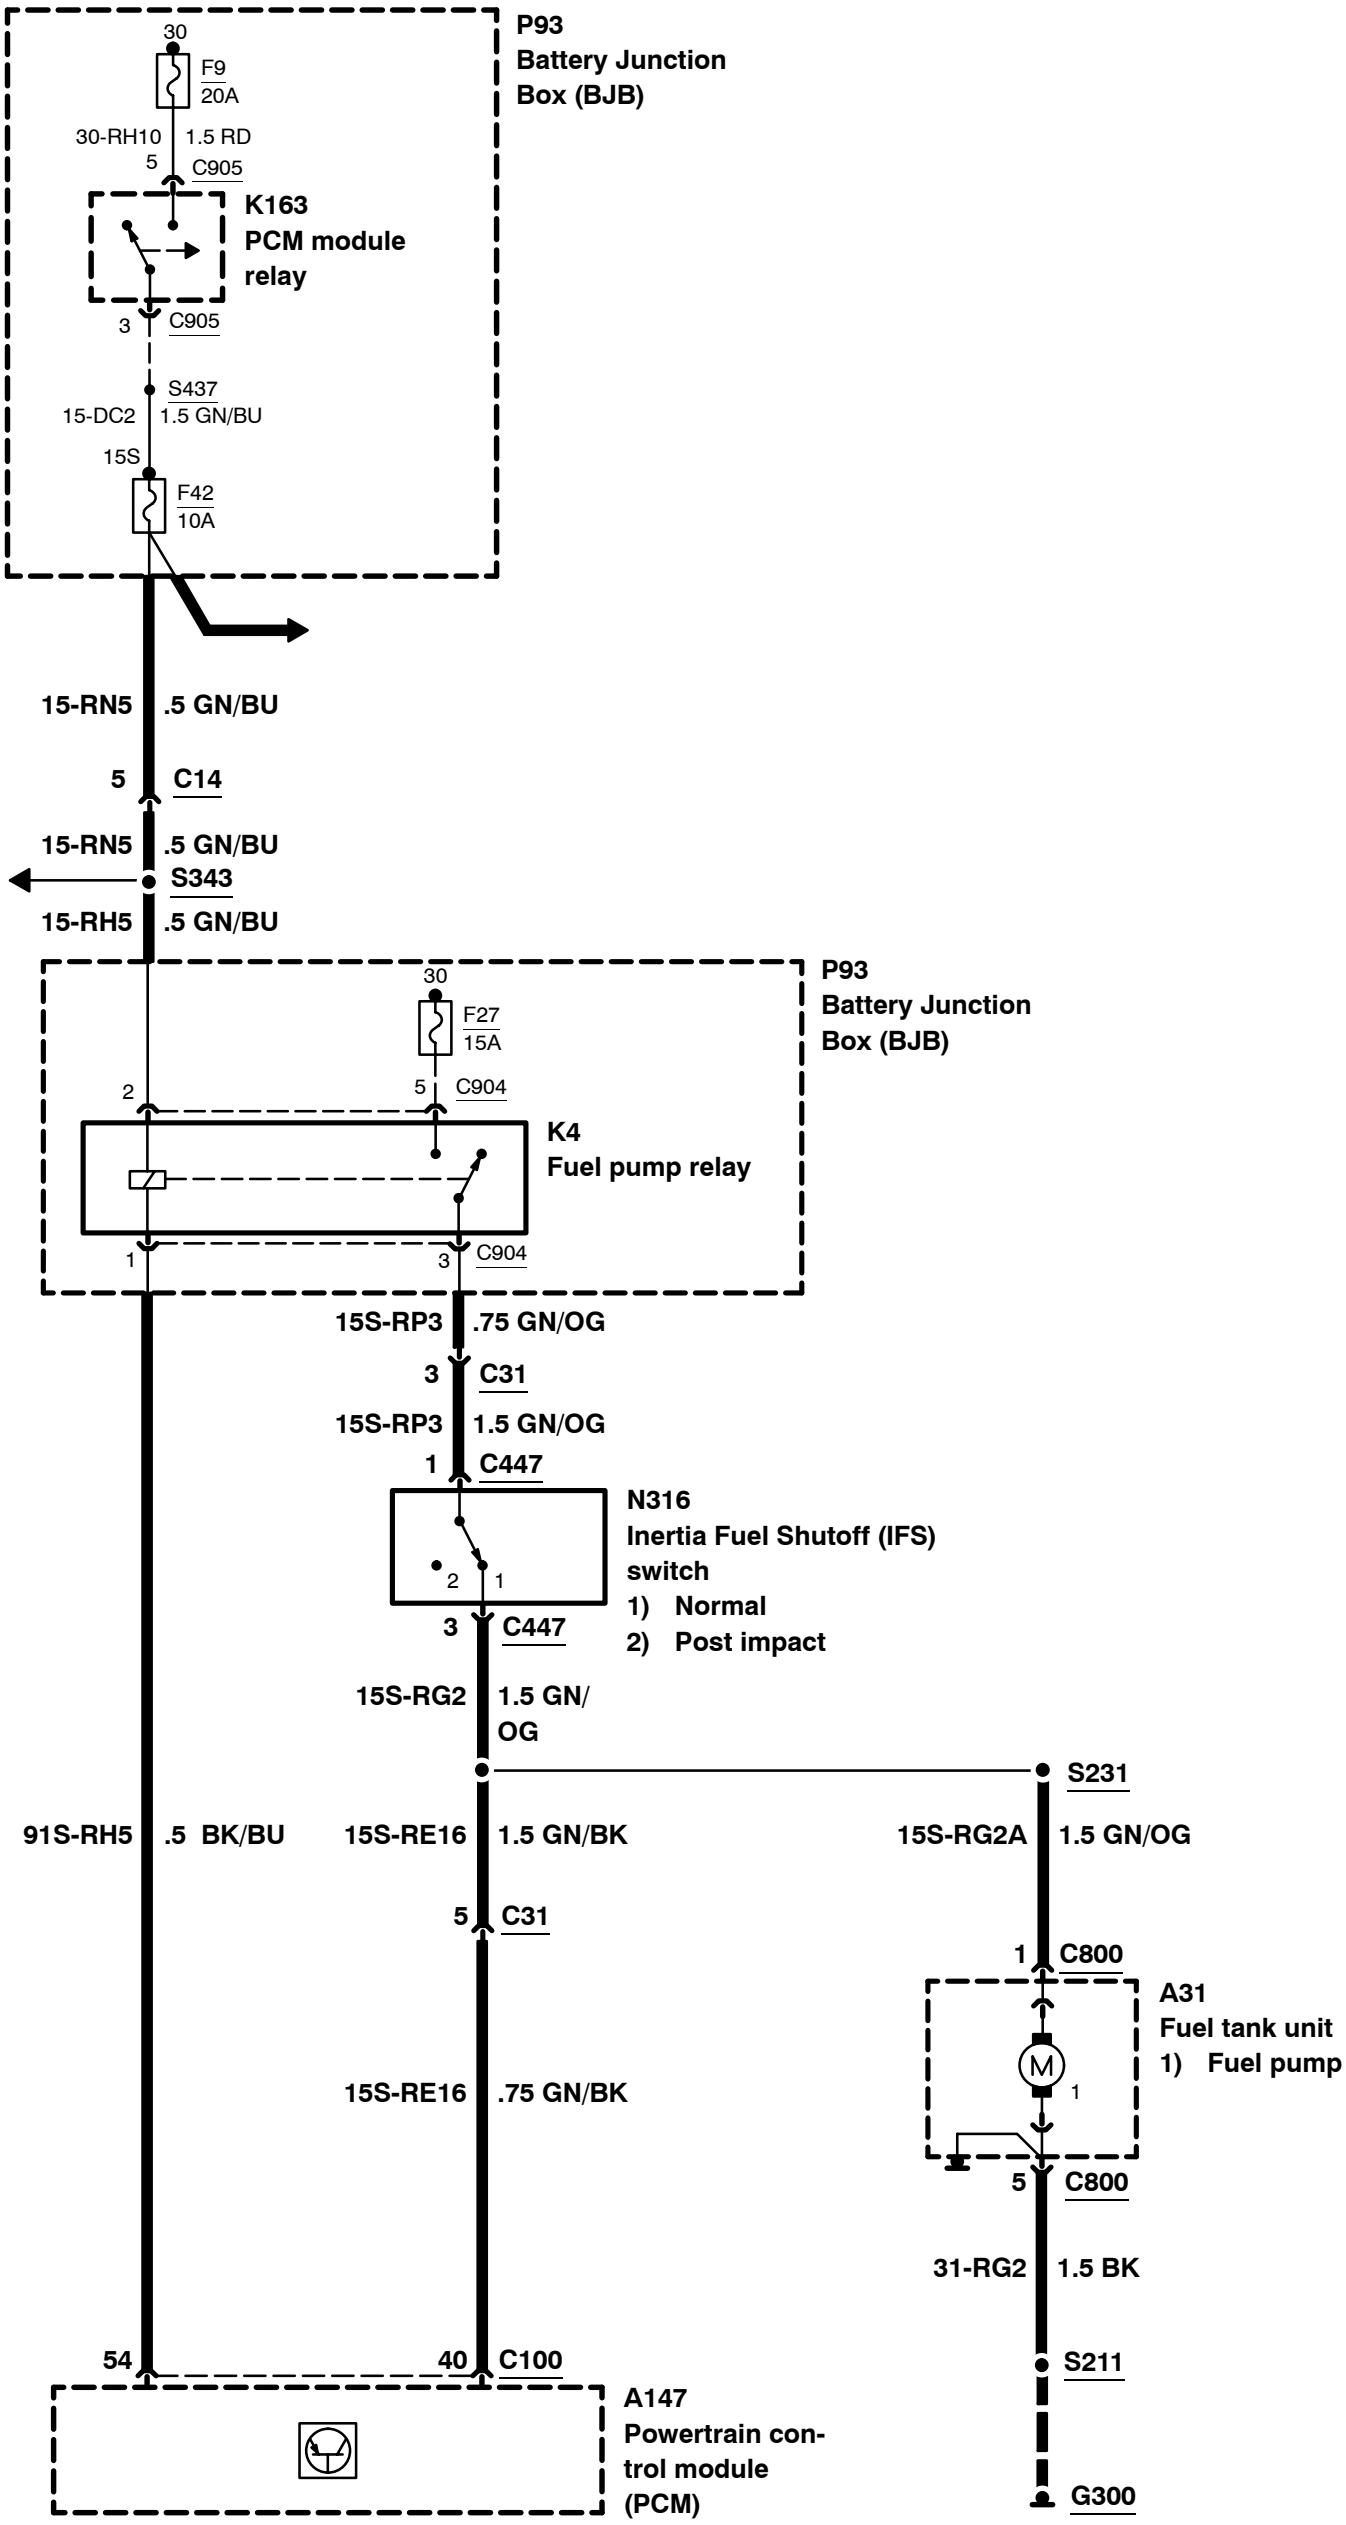


Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

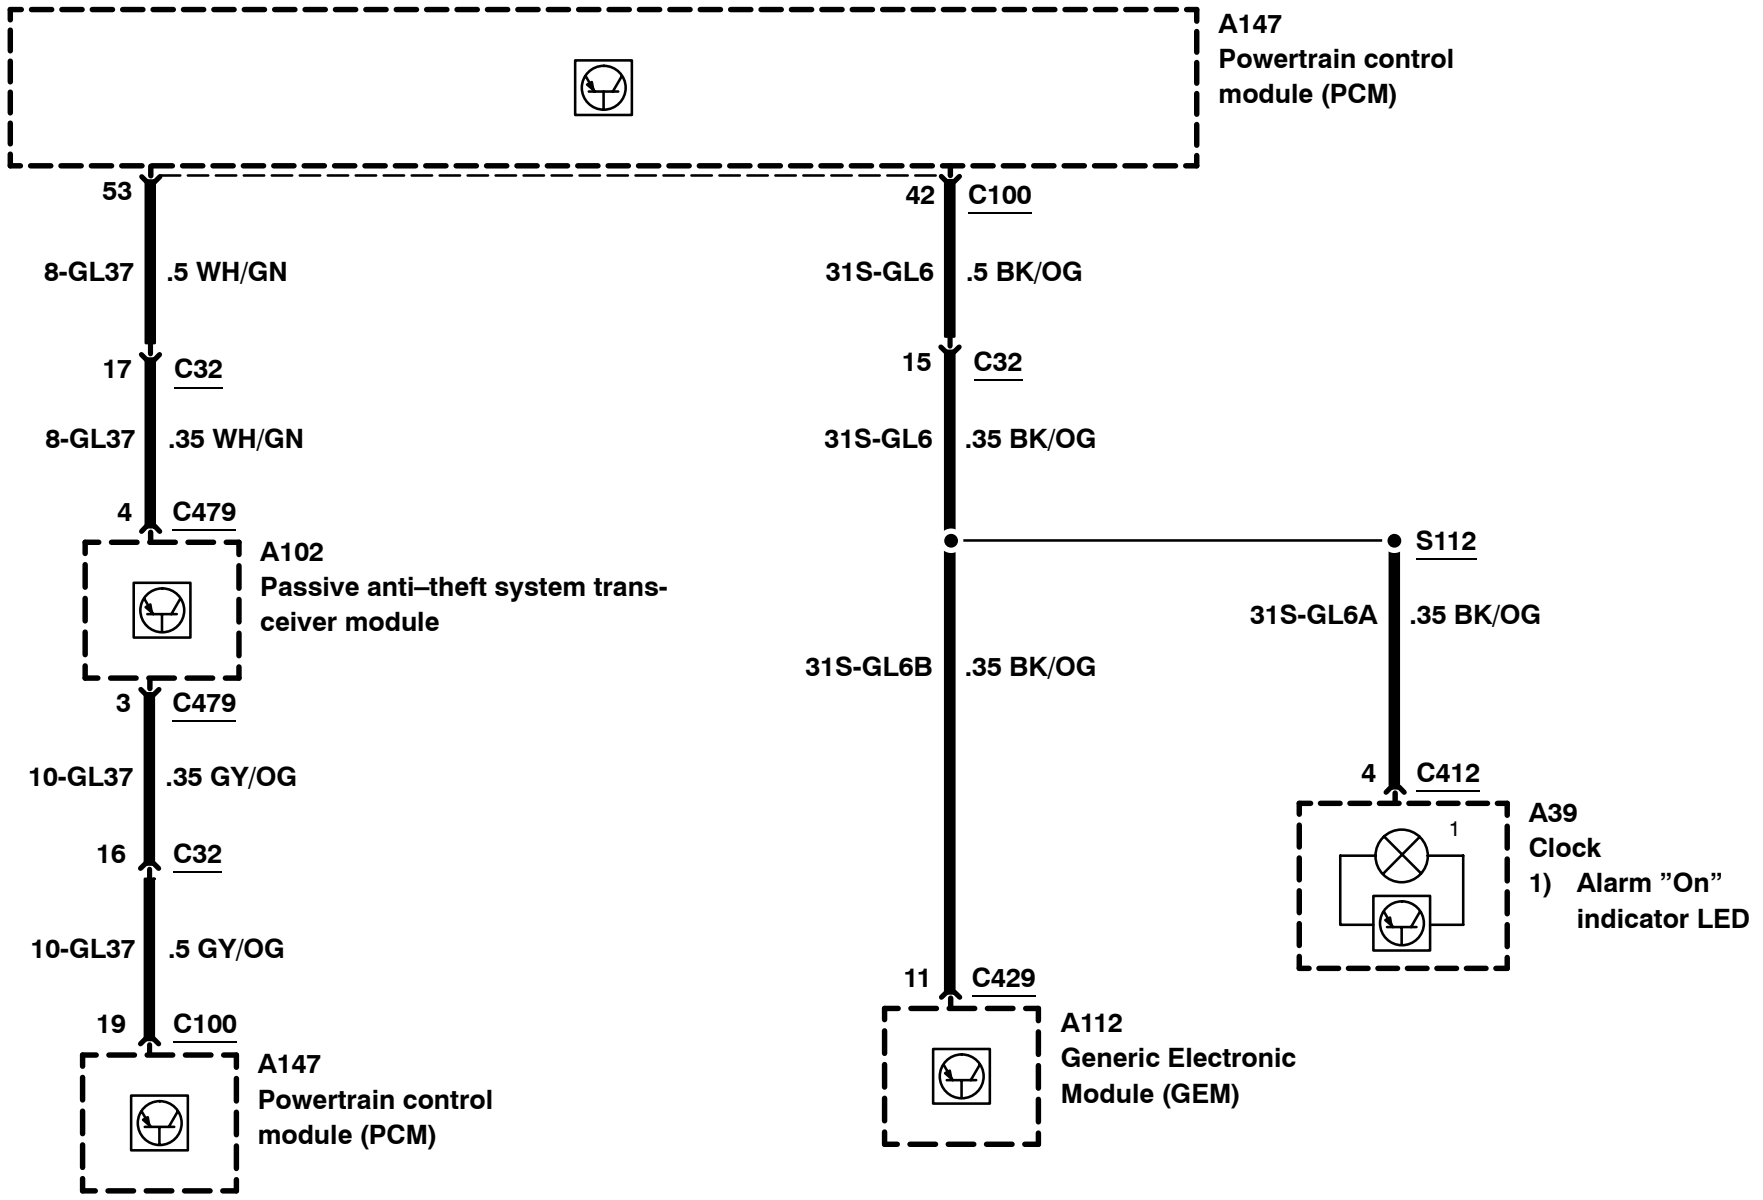


Electronic Engine Controls – 3.0L Duratec–SE (VE6)

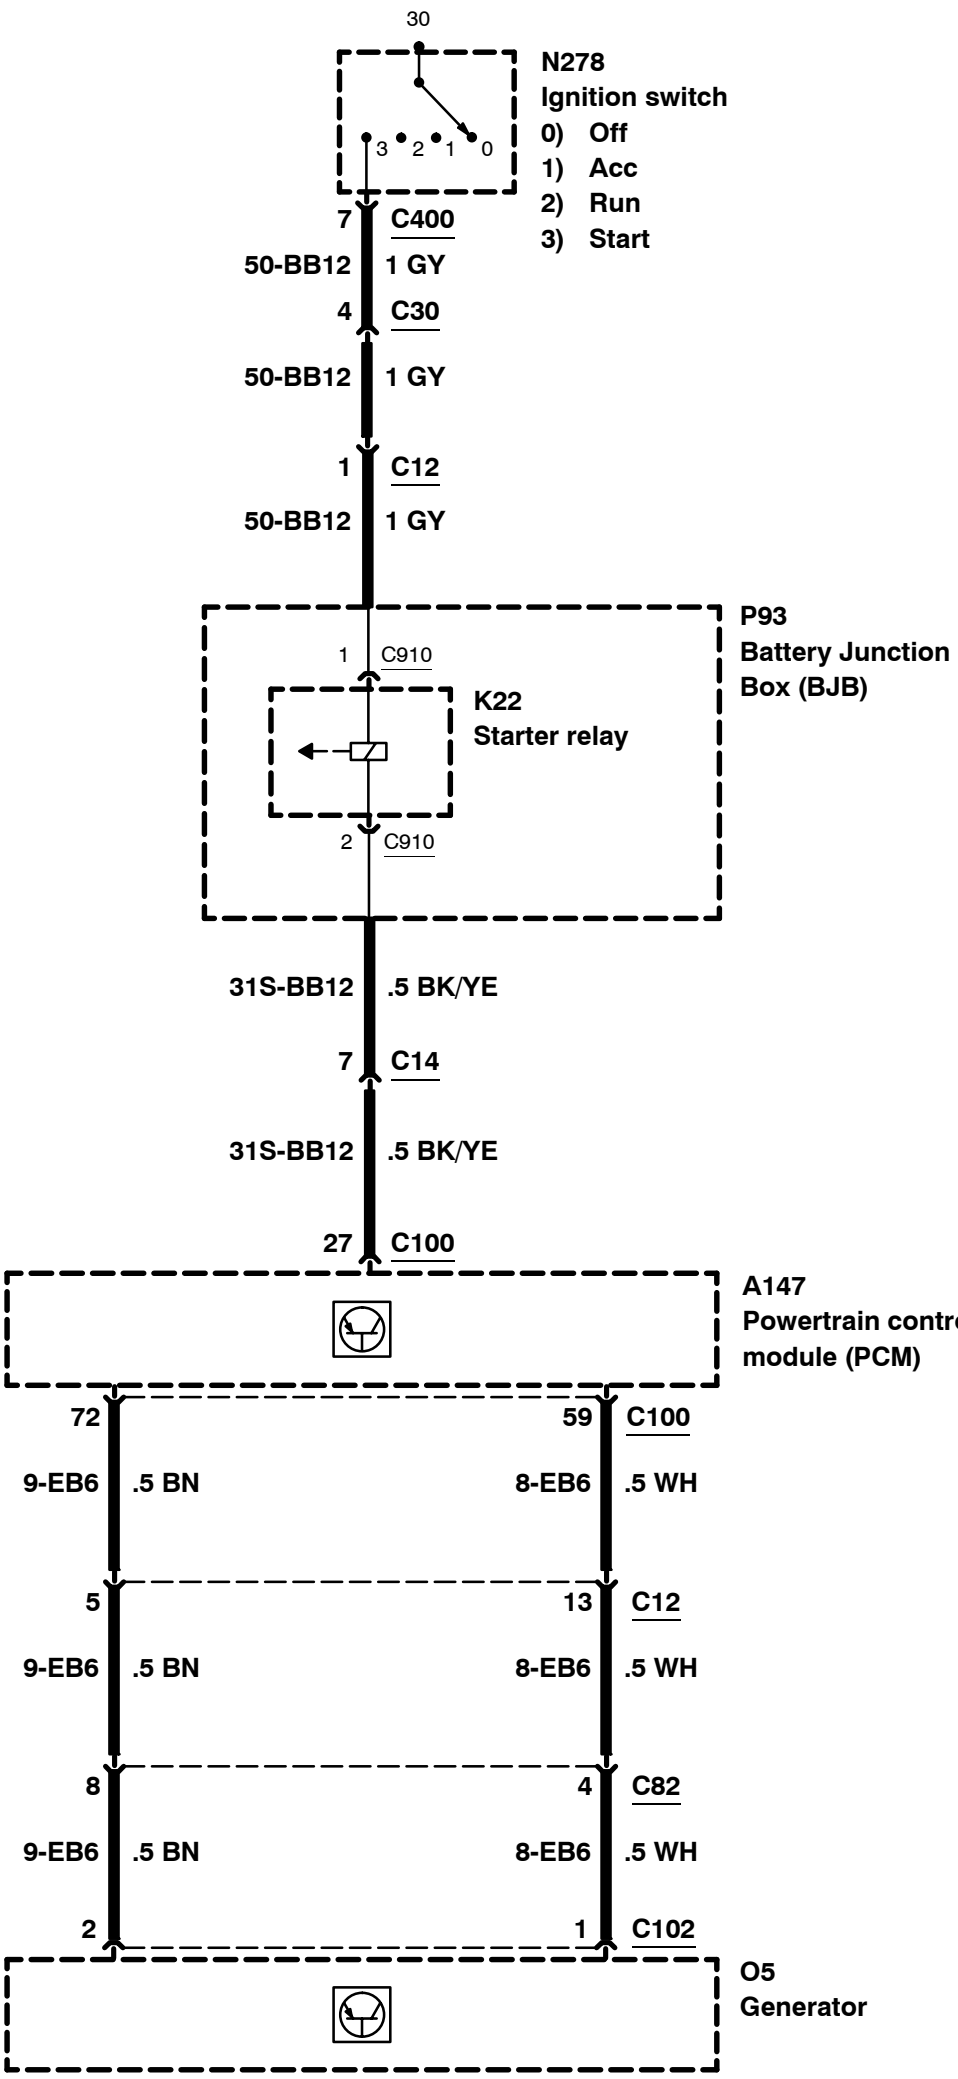


Electronic Engine Controls – 3.0L Duratec–ST (VE6)

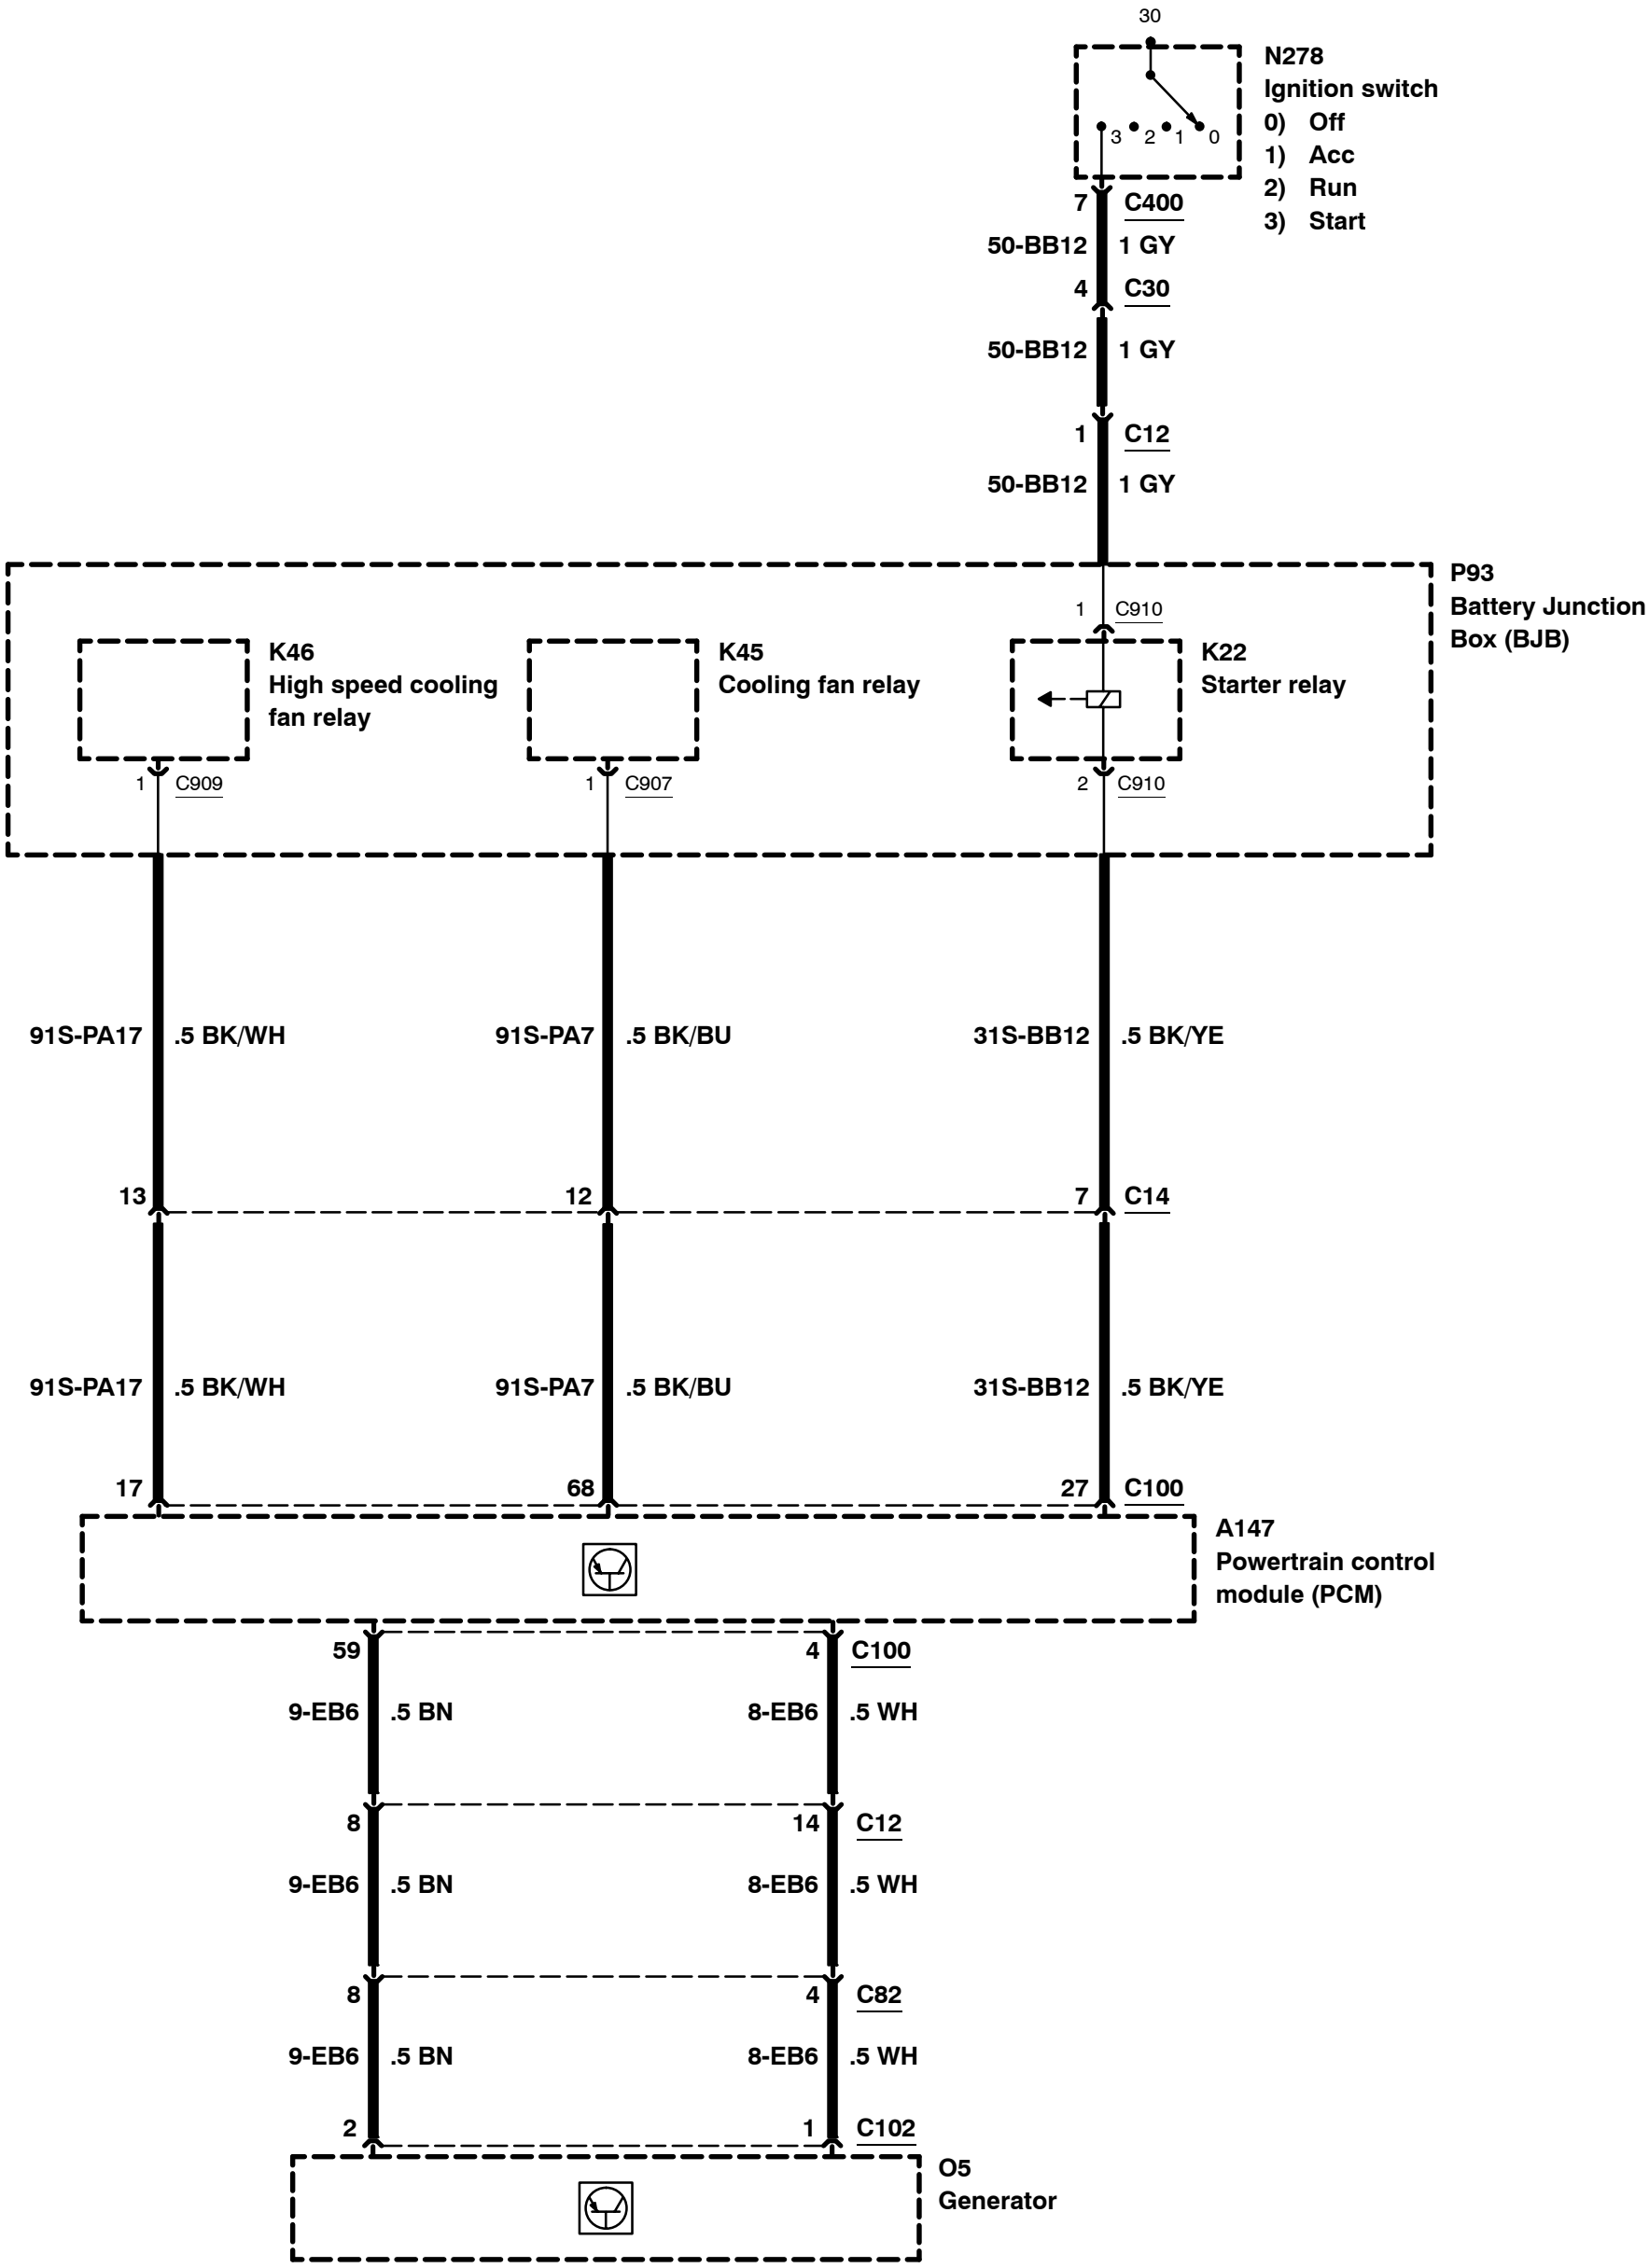

Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

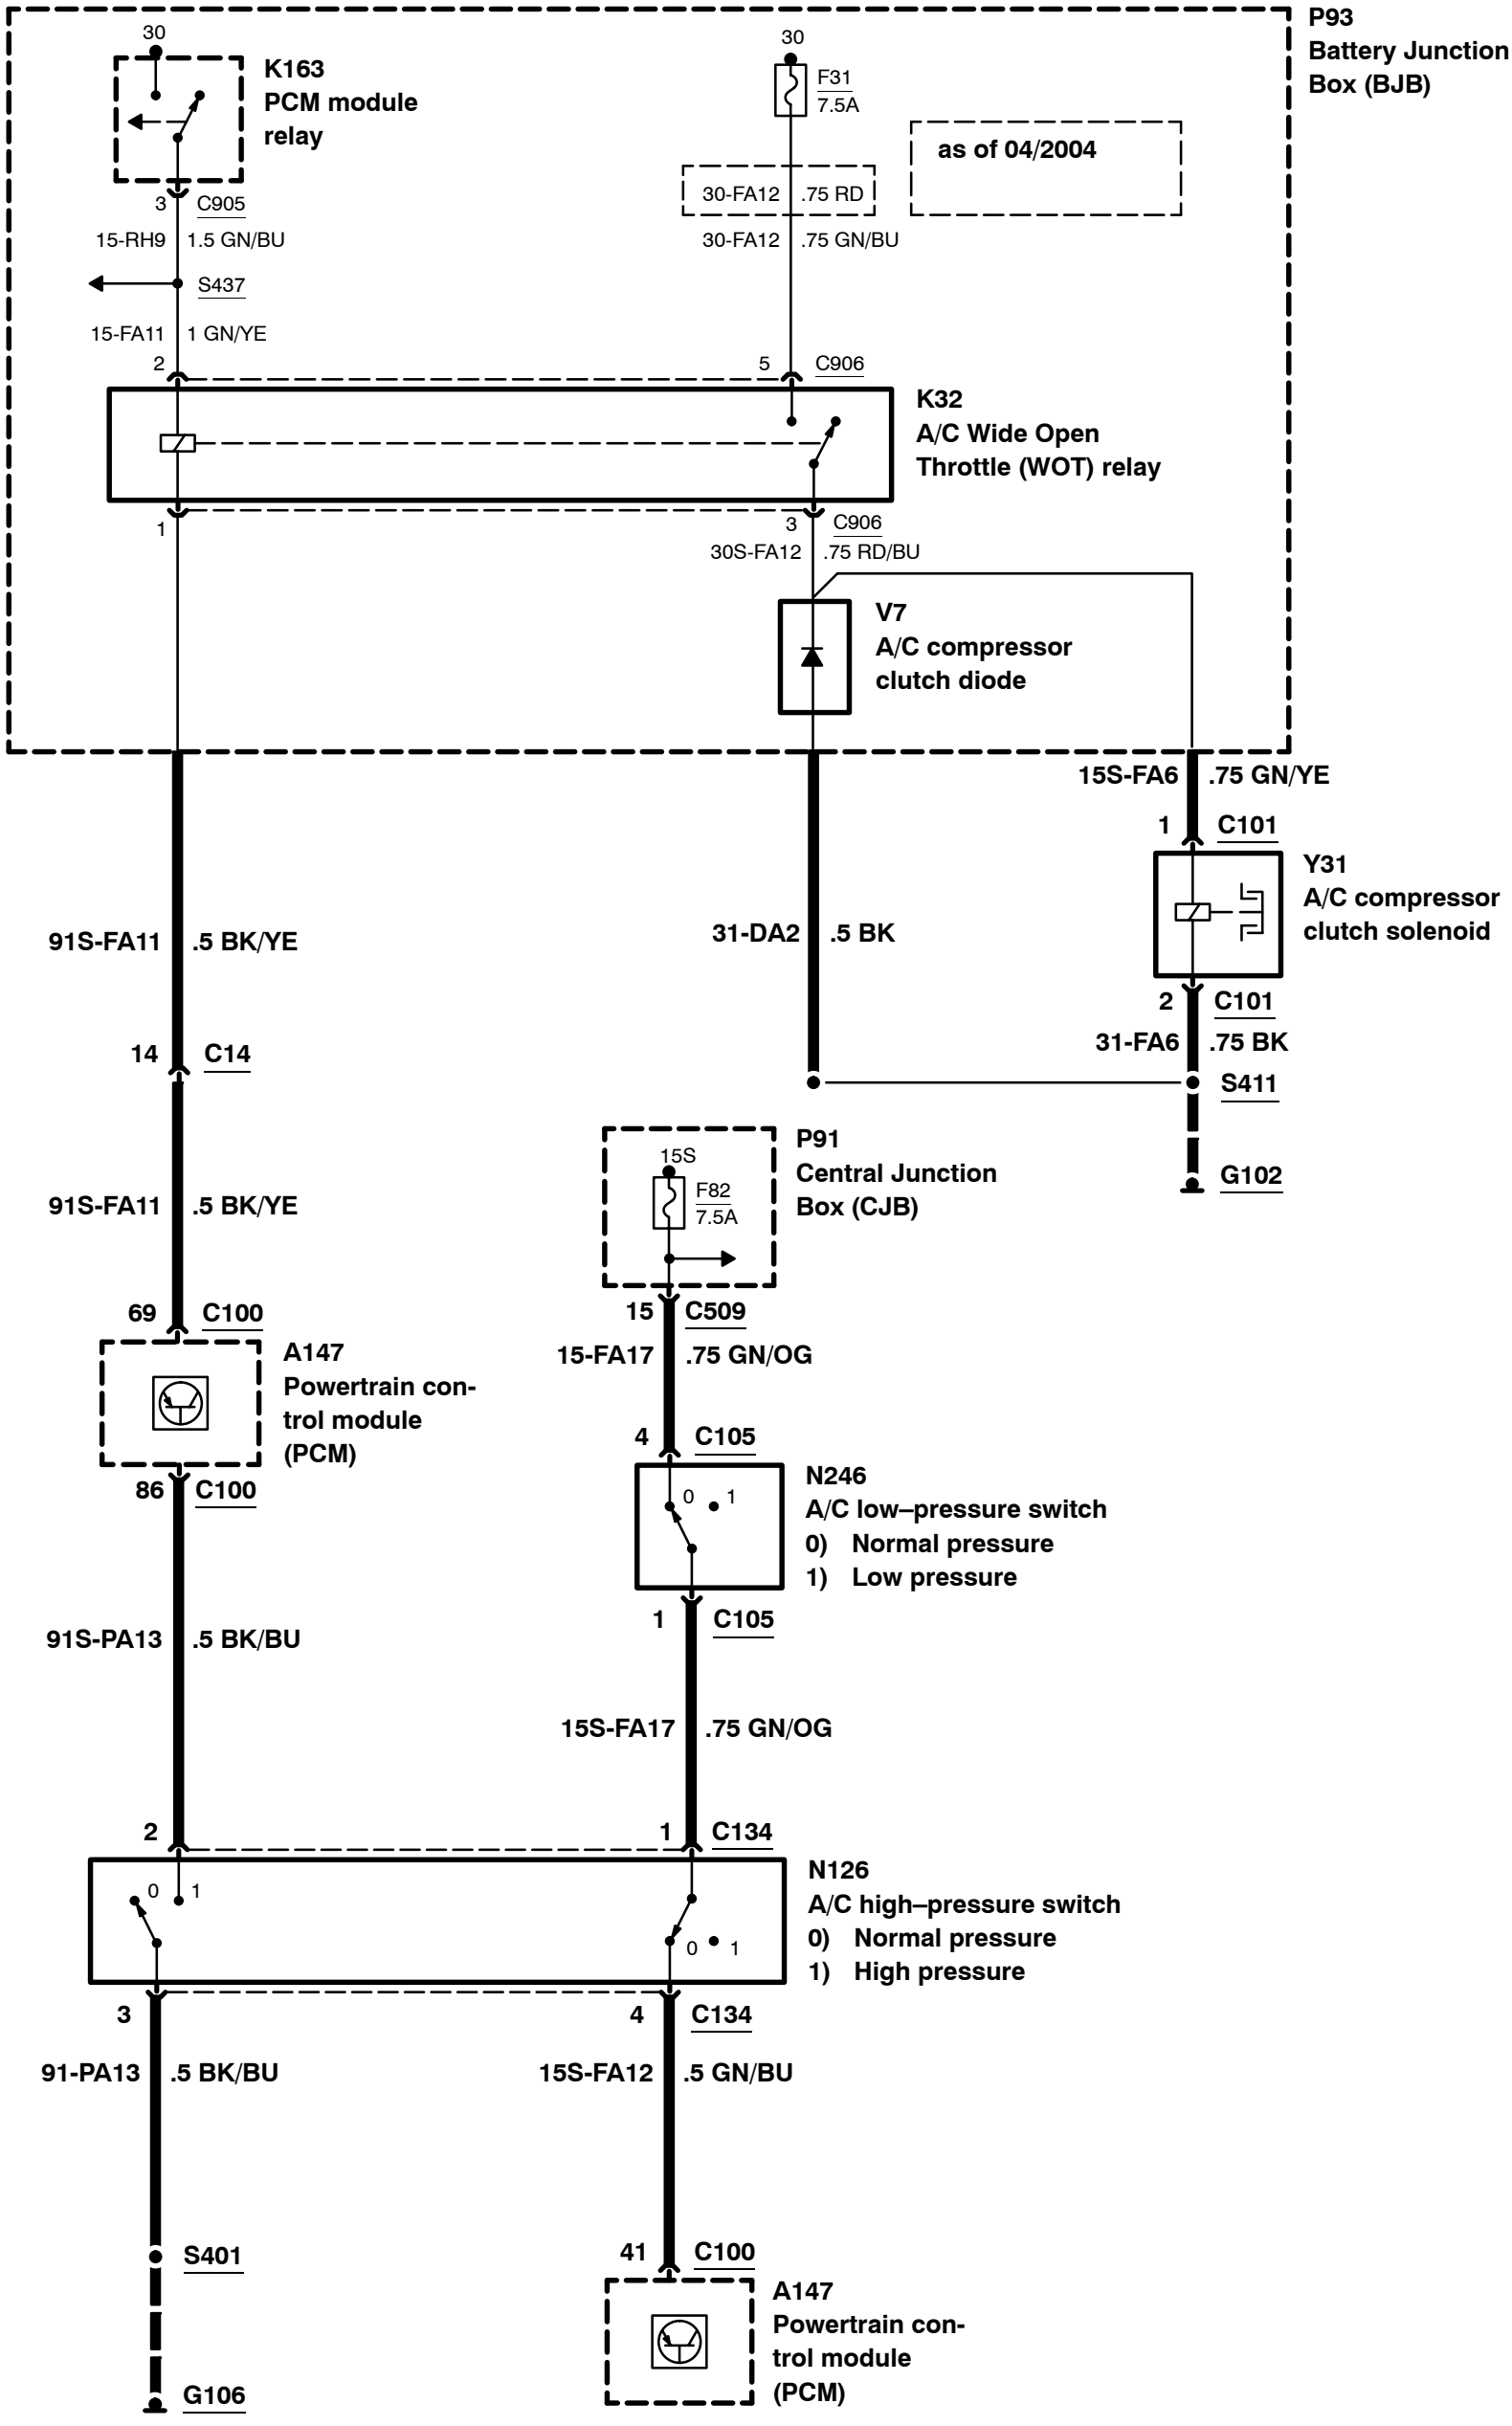


Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

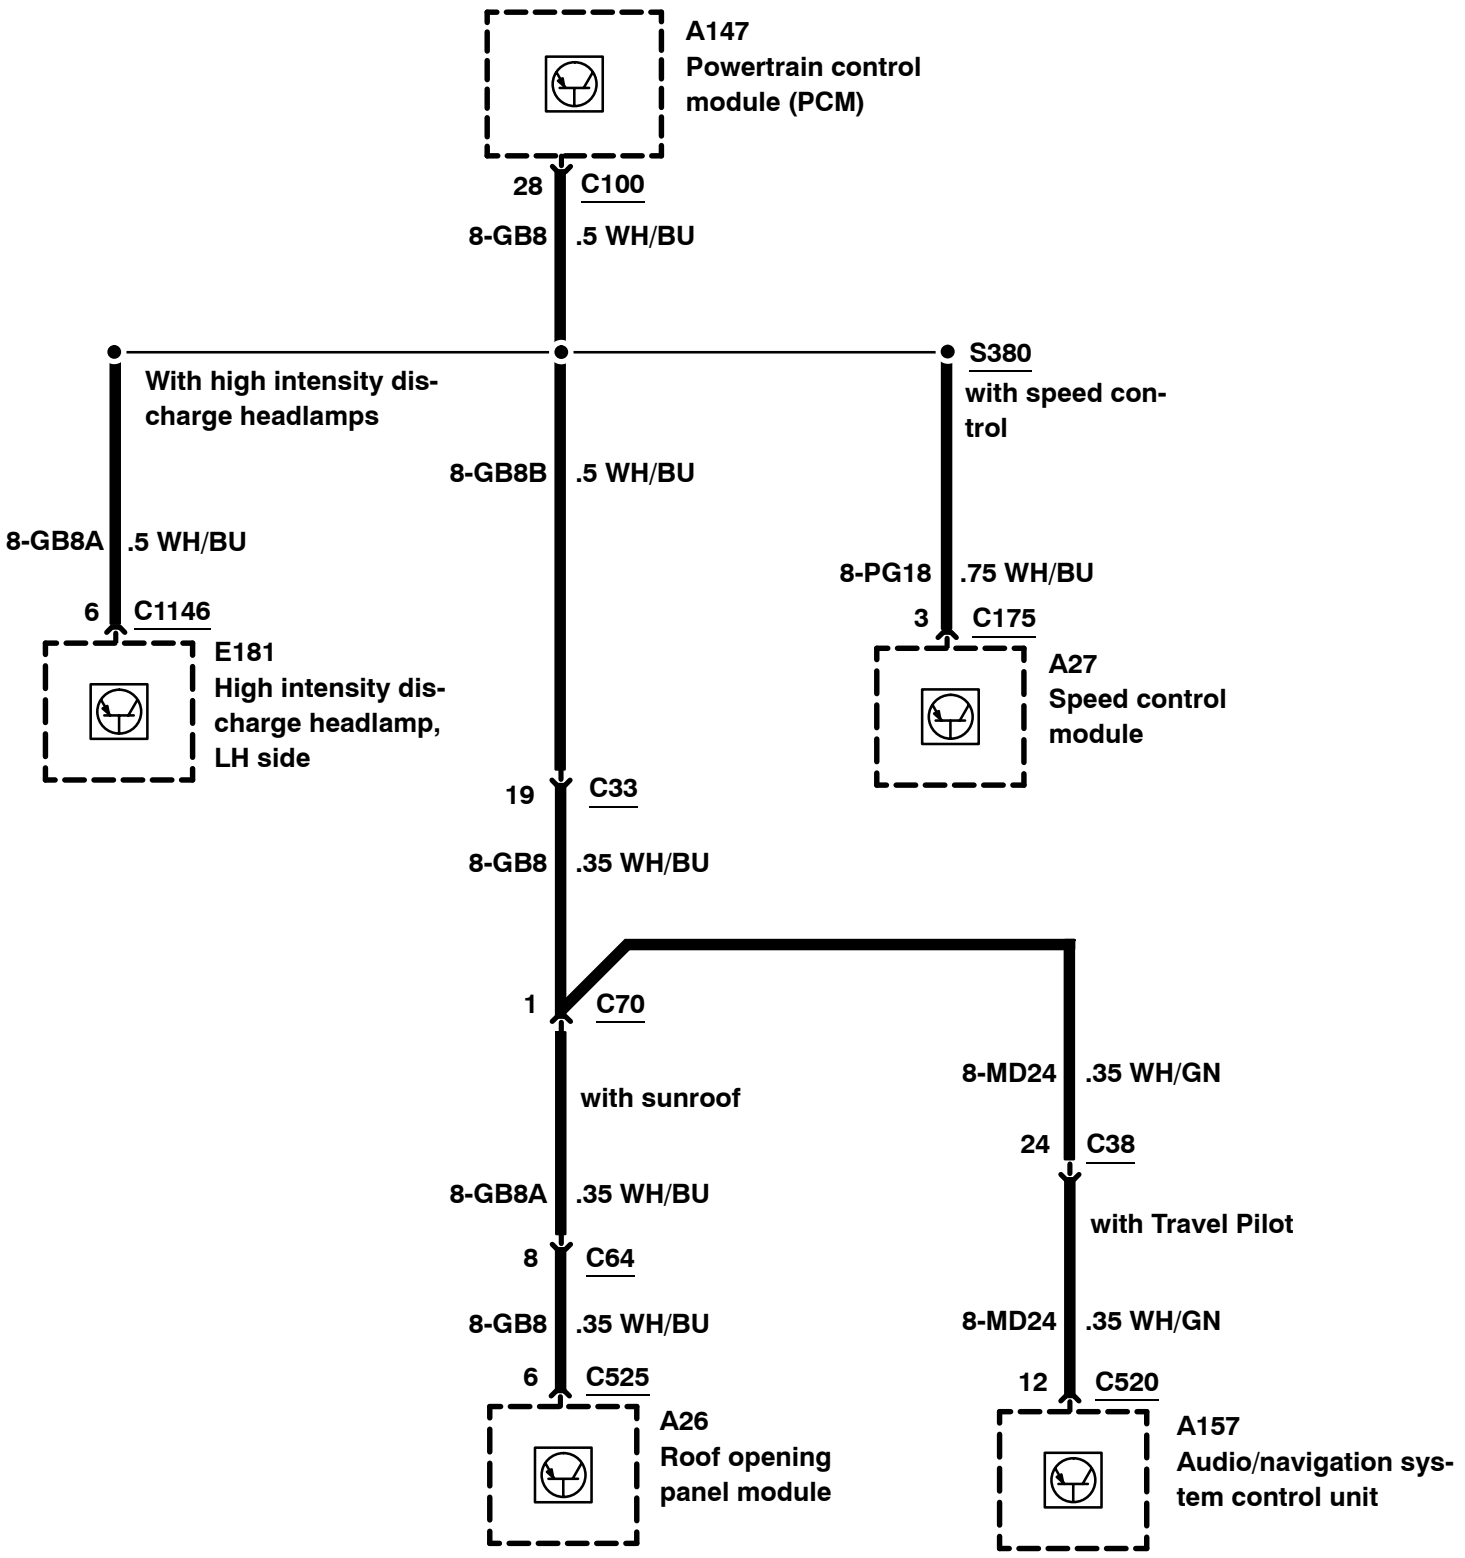


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

Block diagram

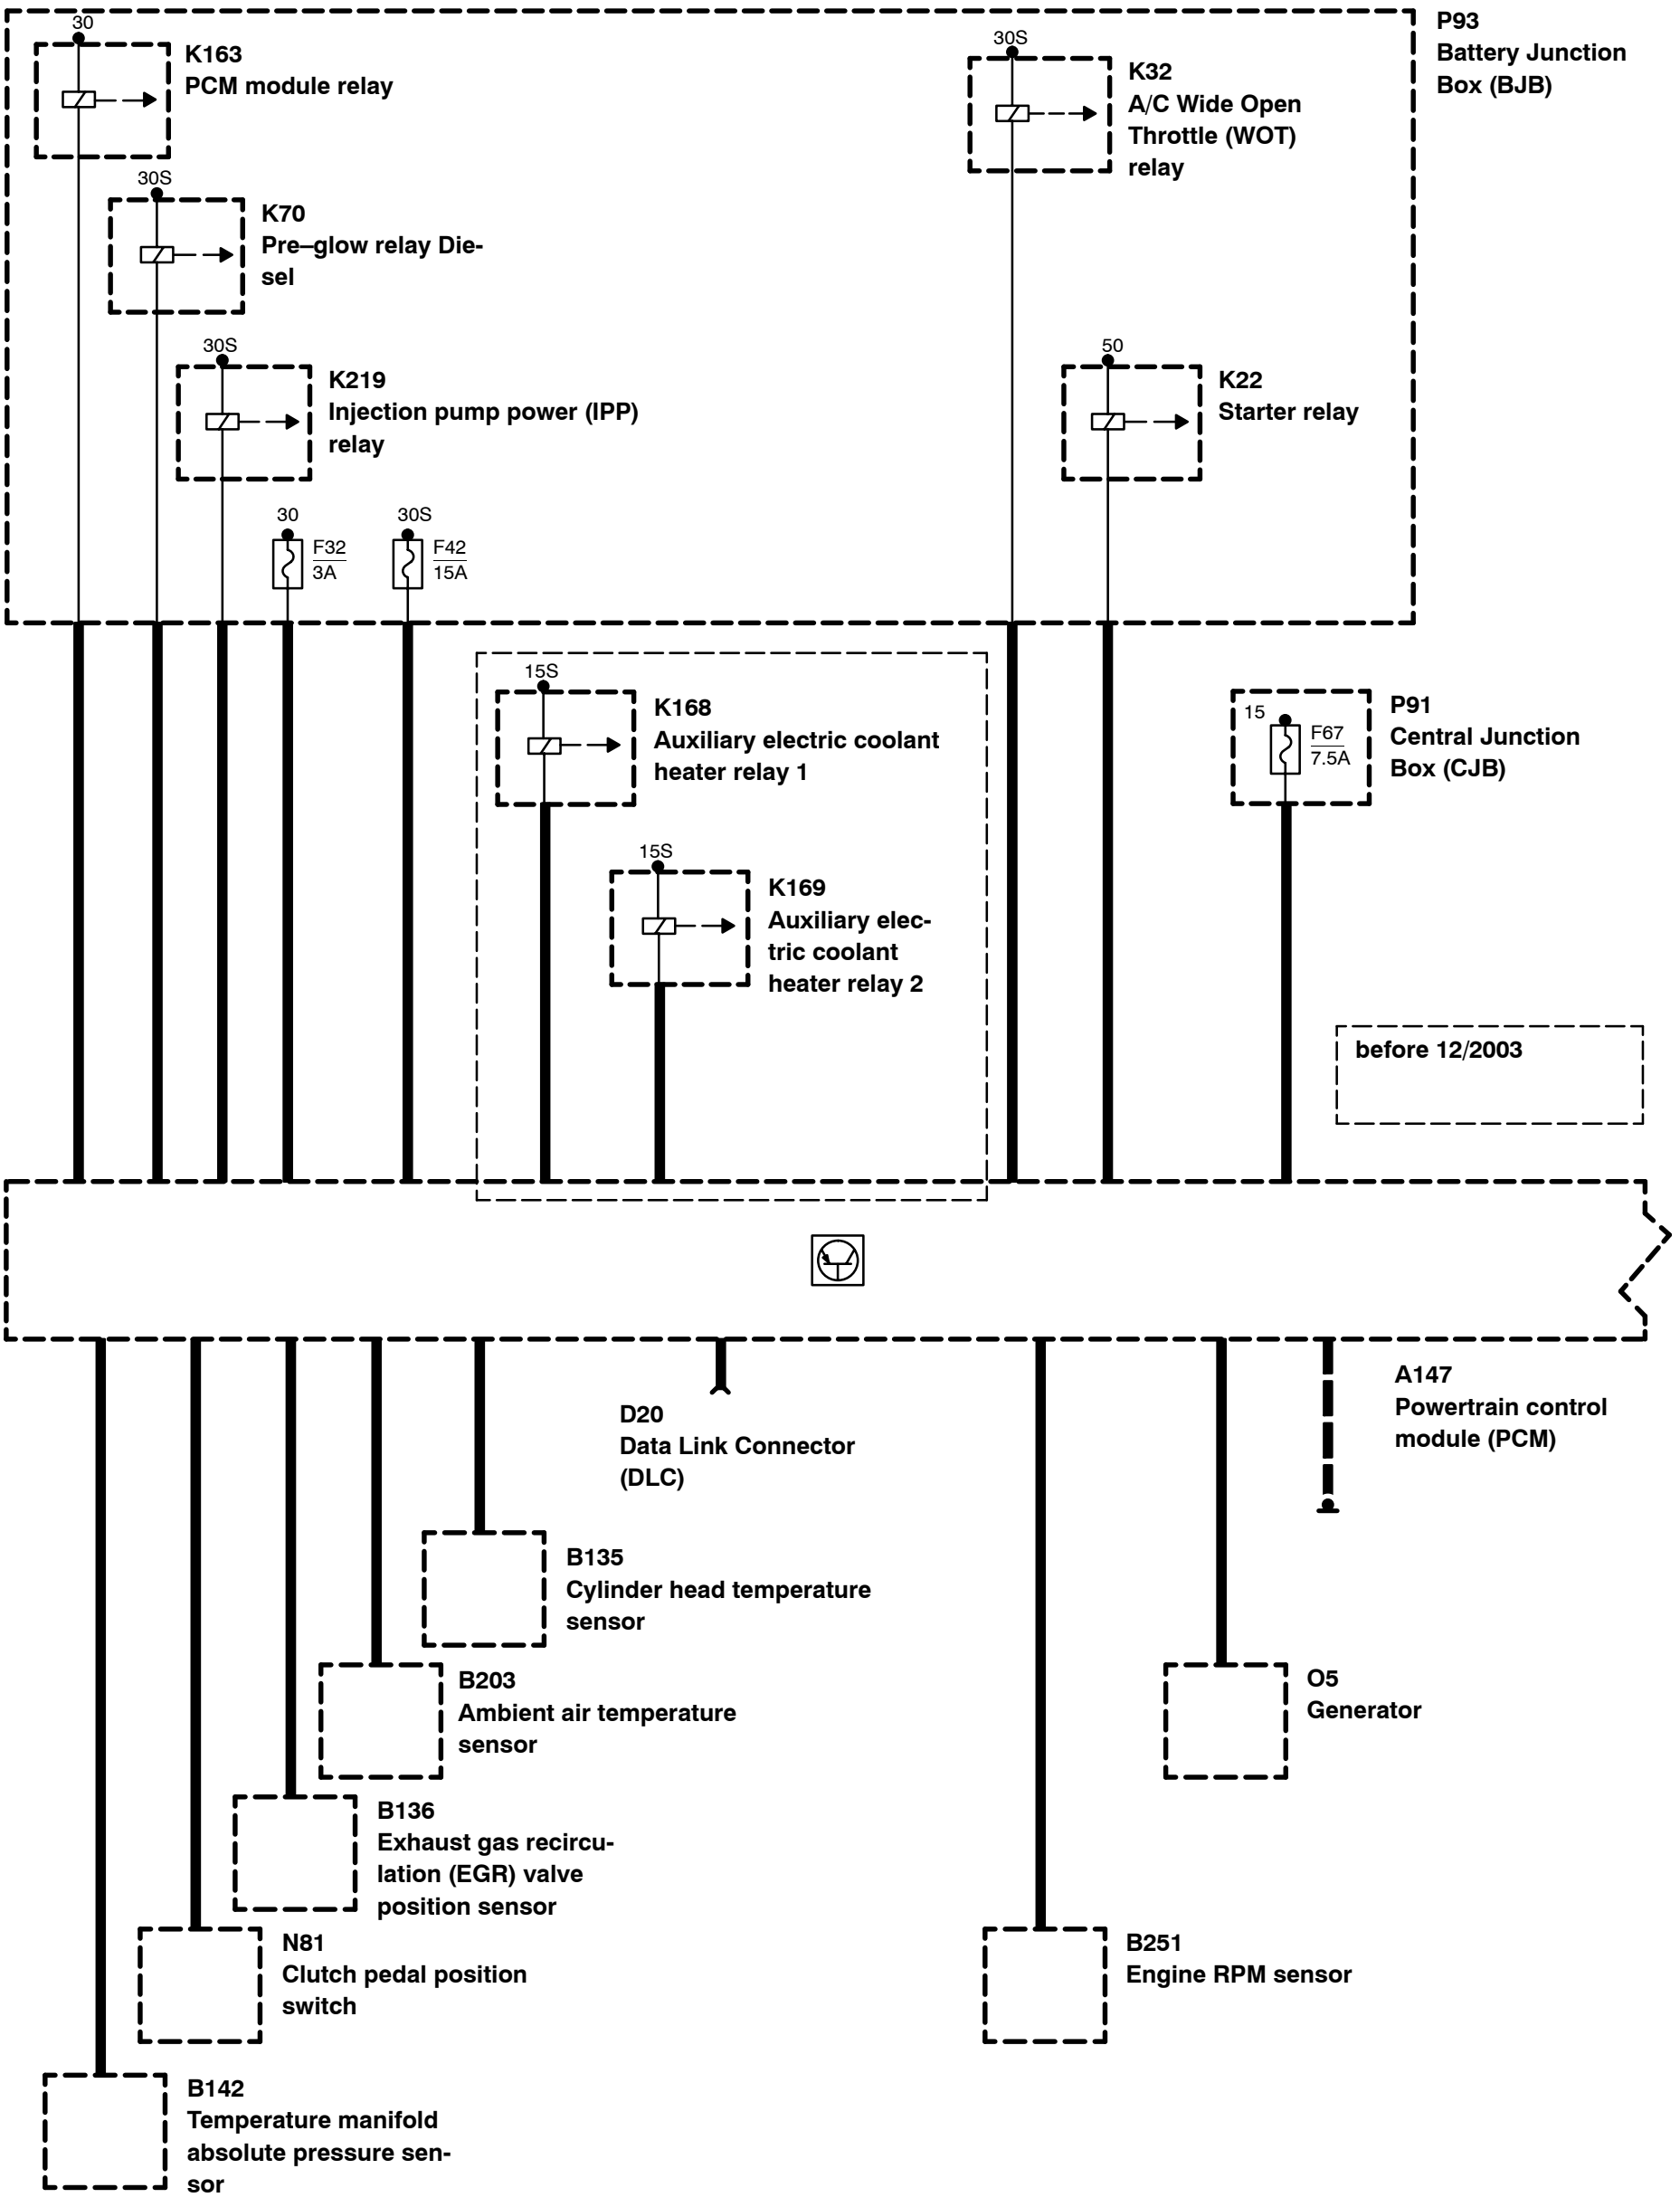


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP


Block diagram

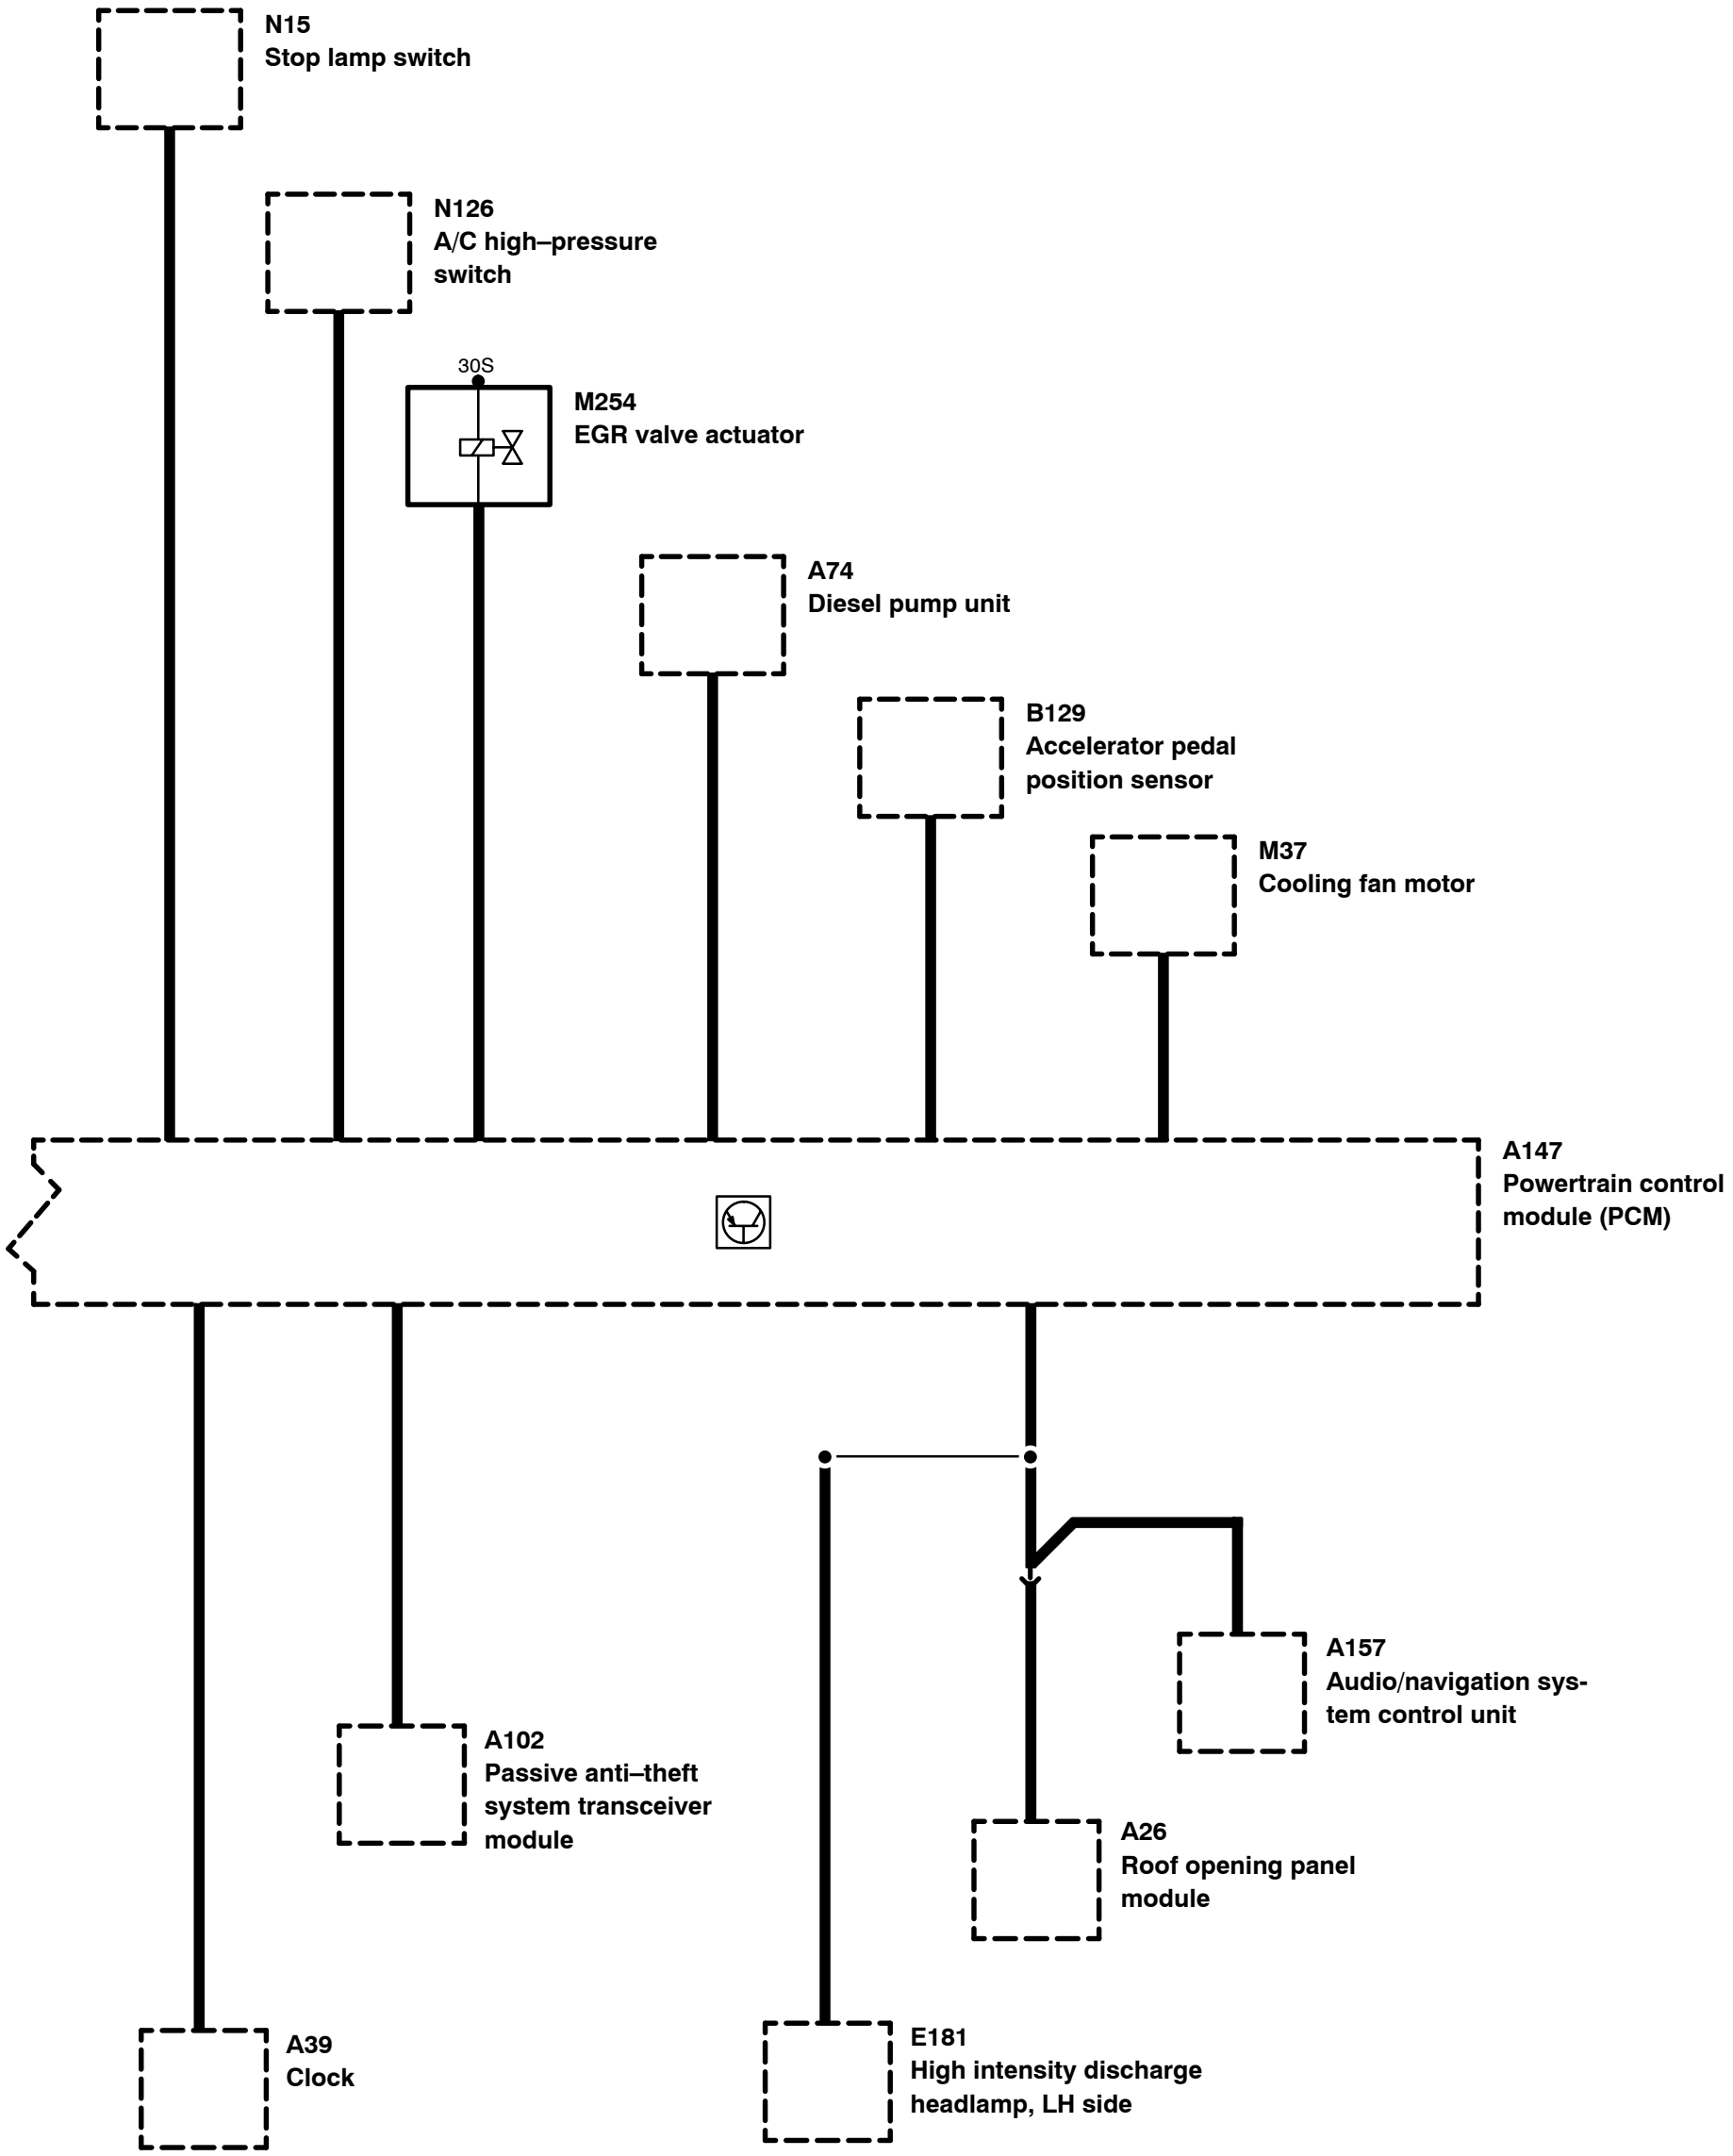


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

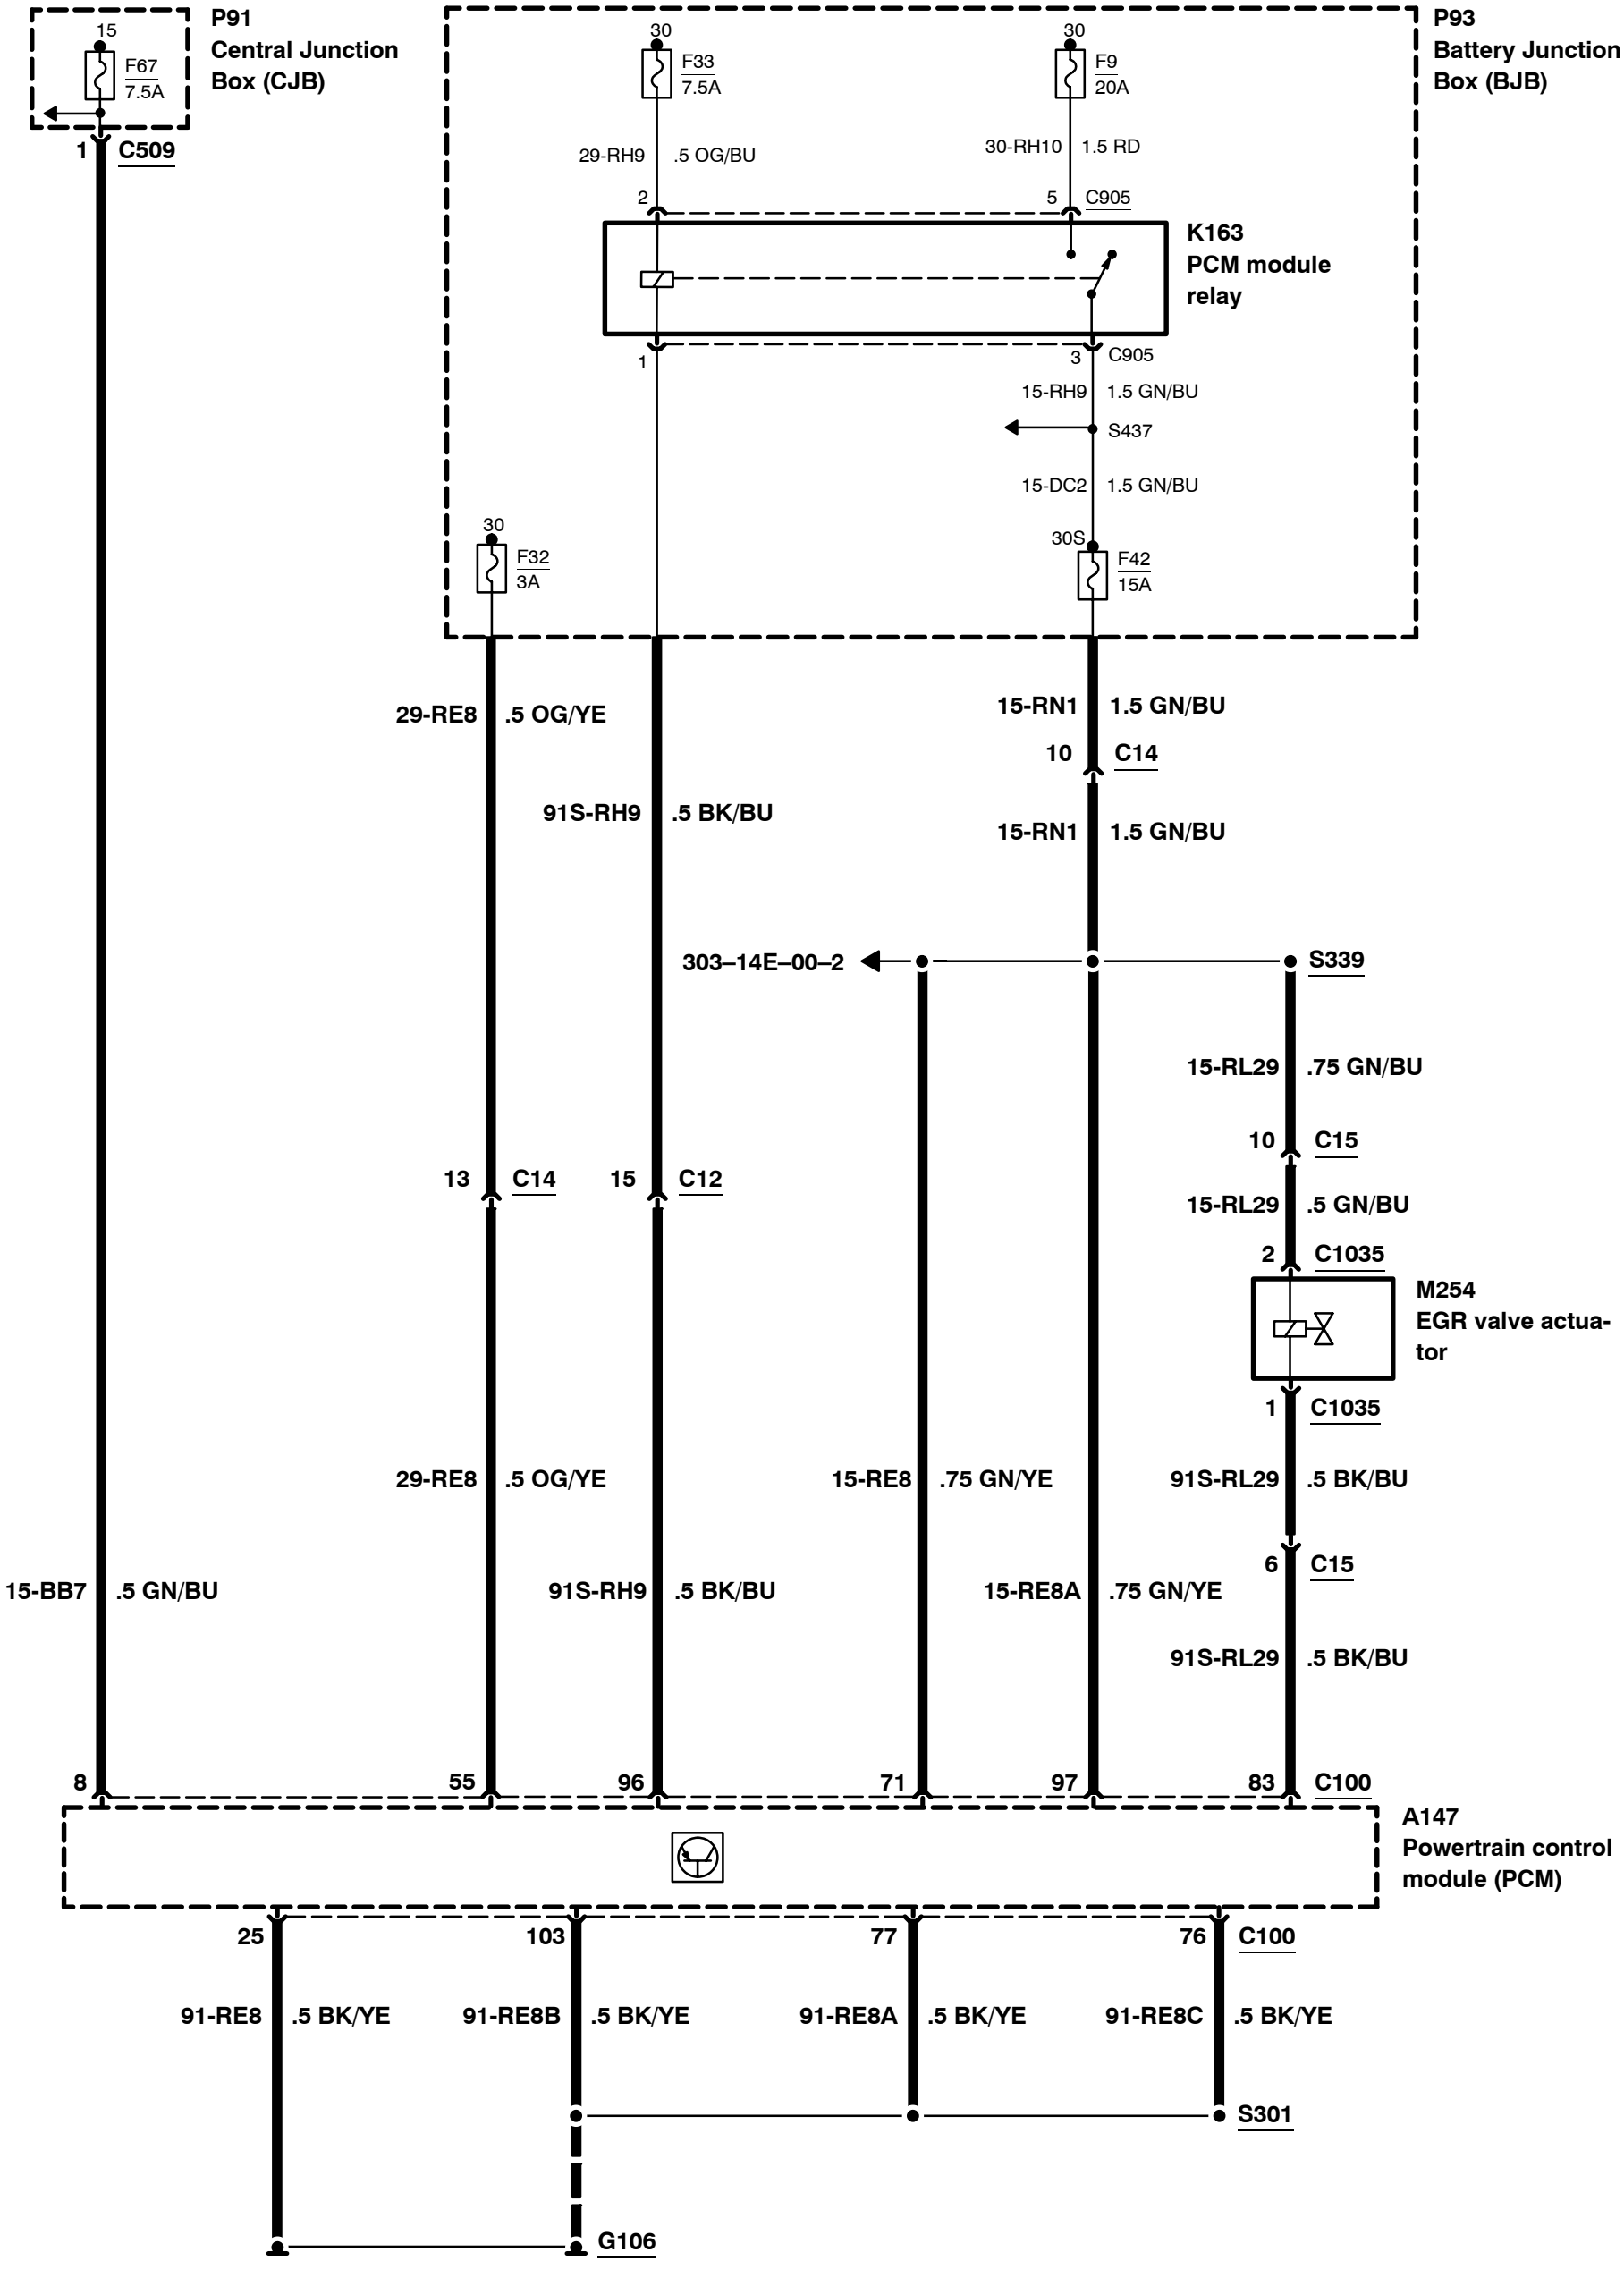


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

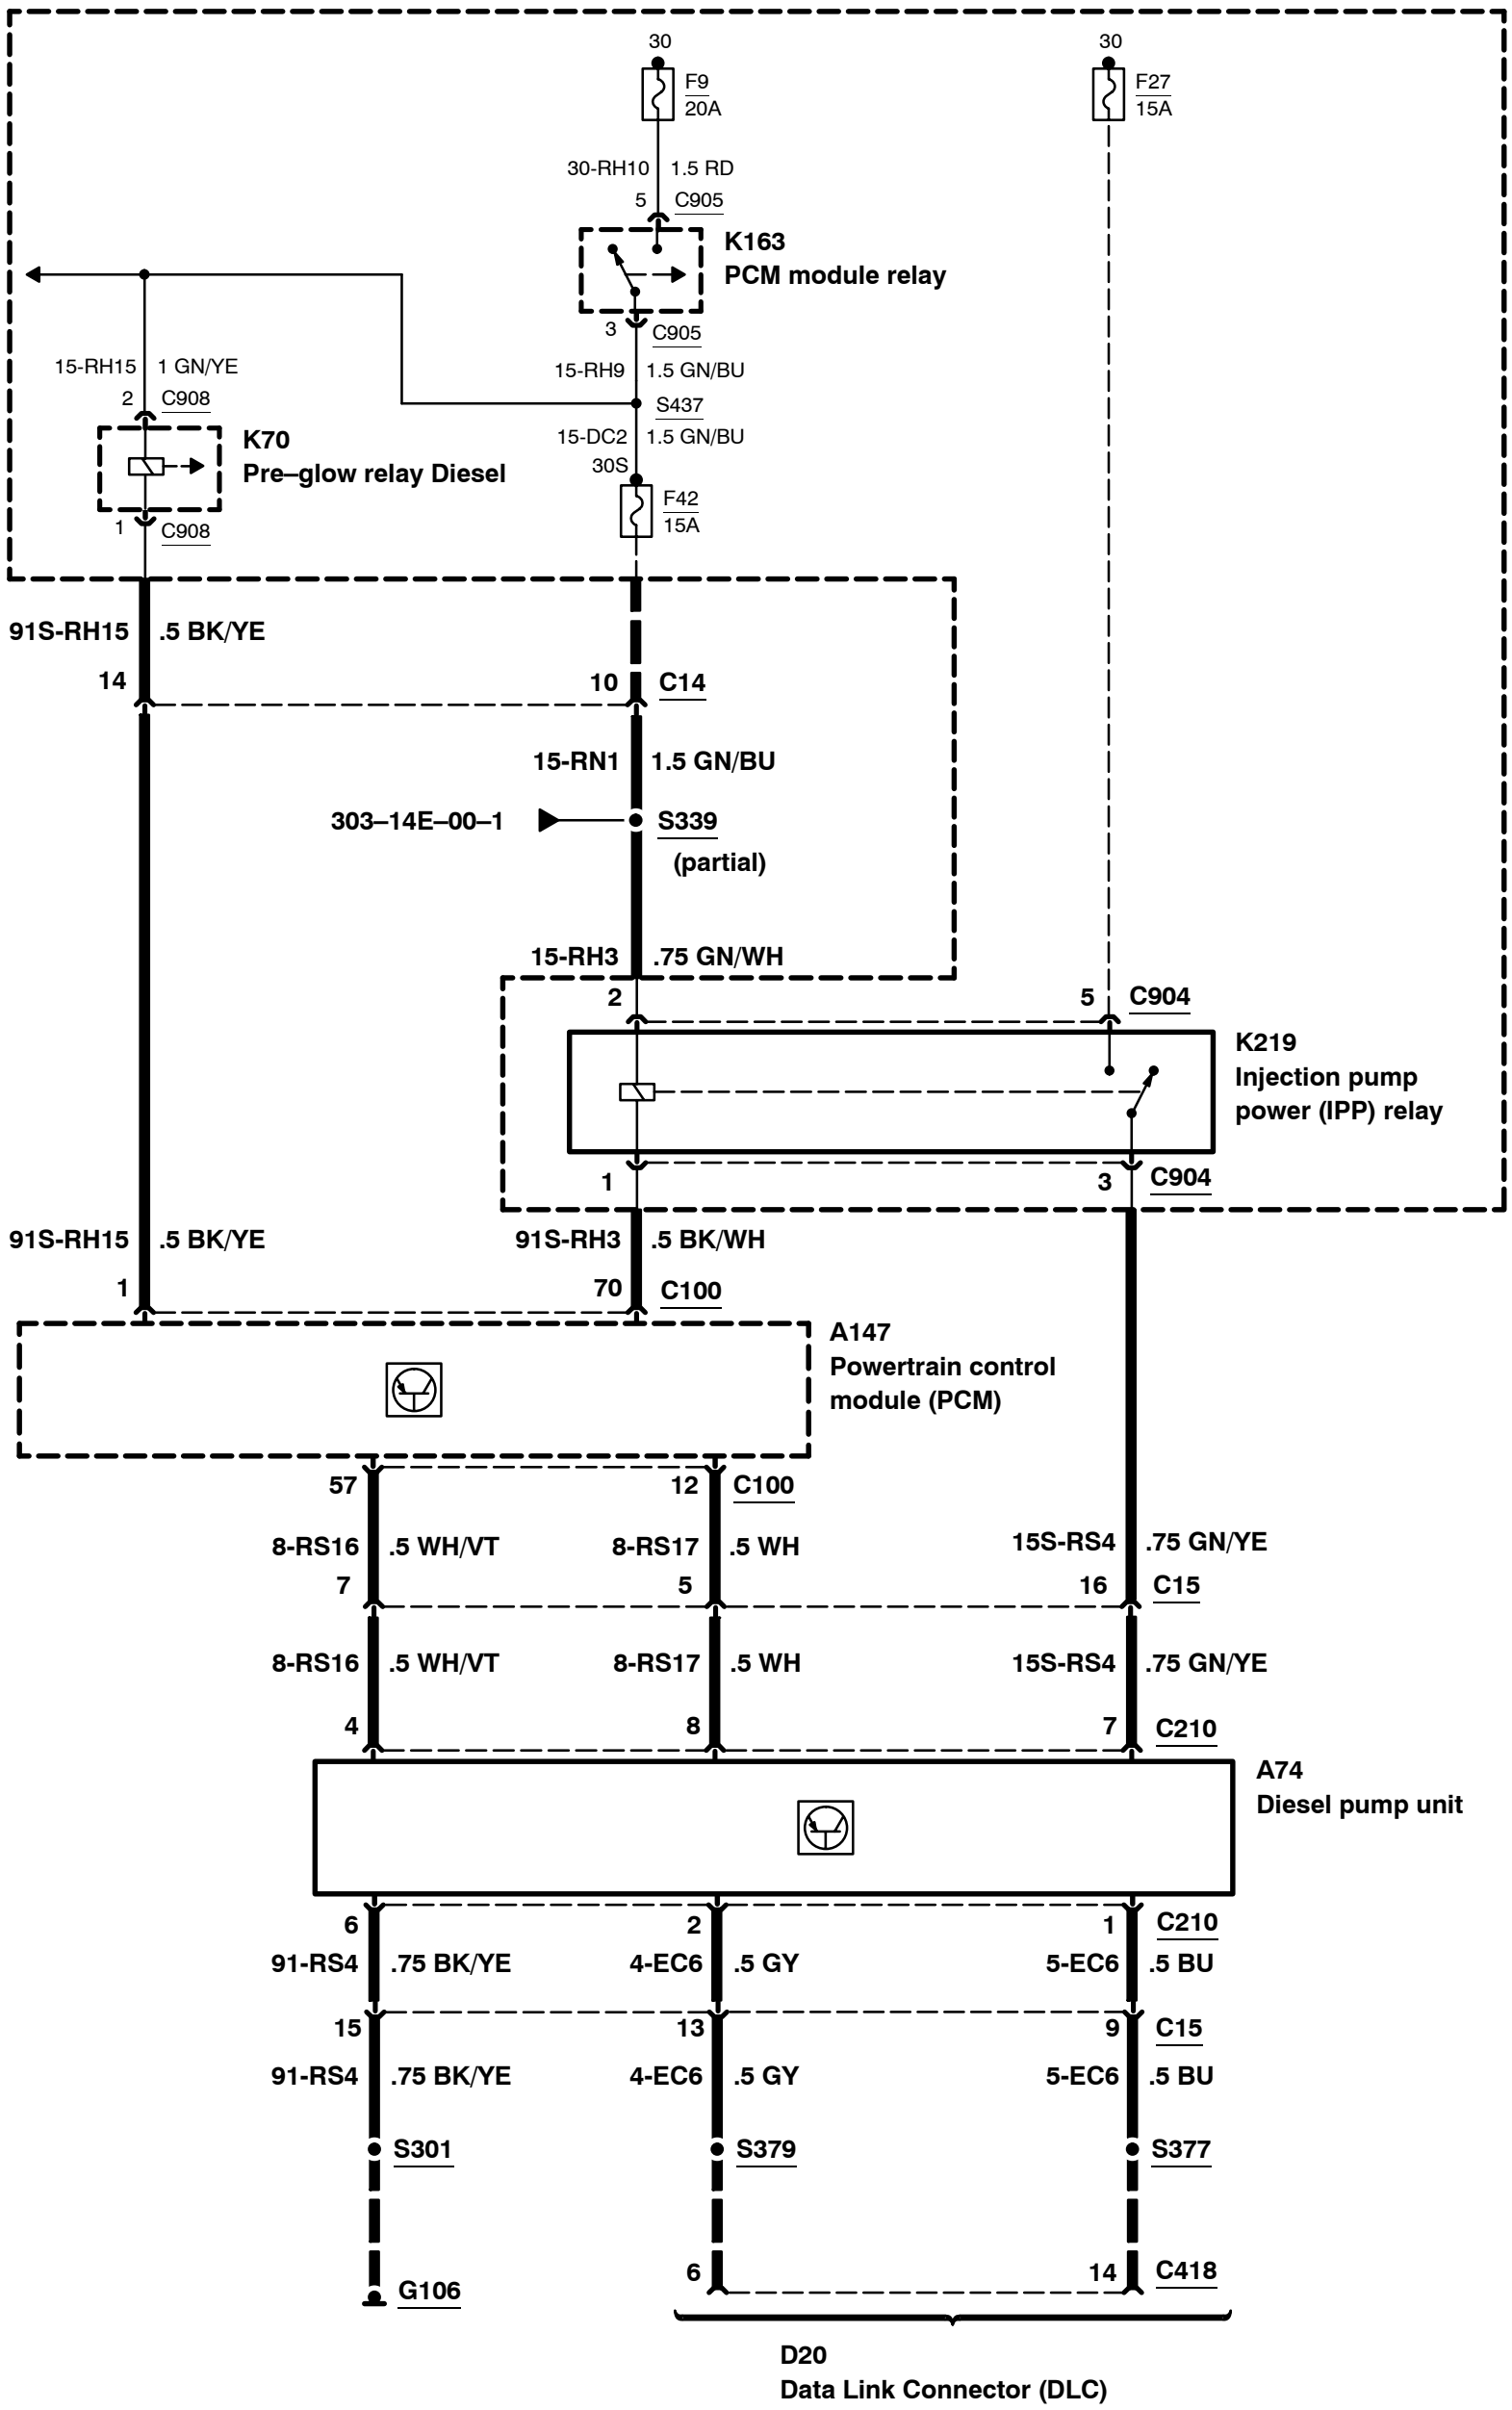


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003

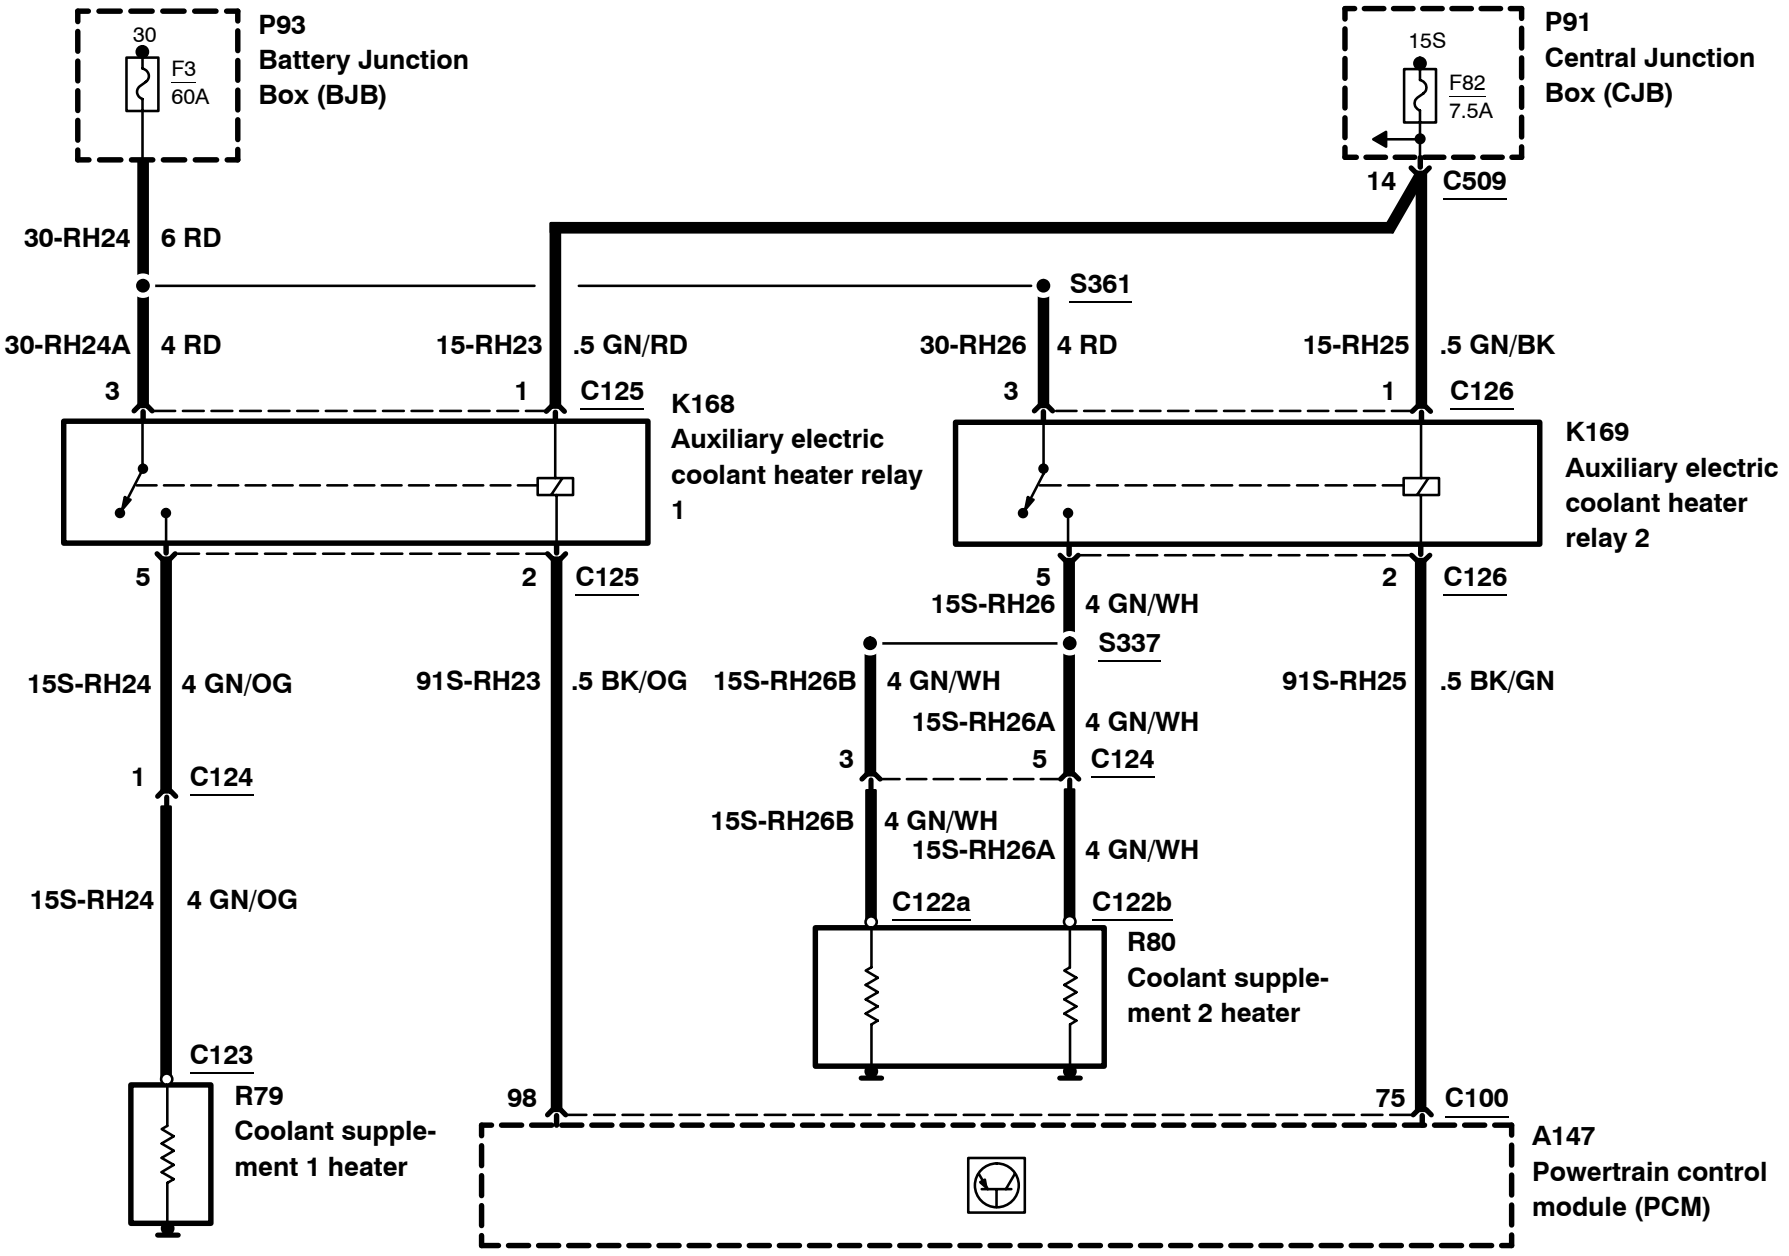


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

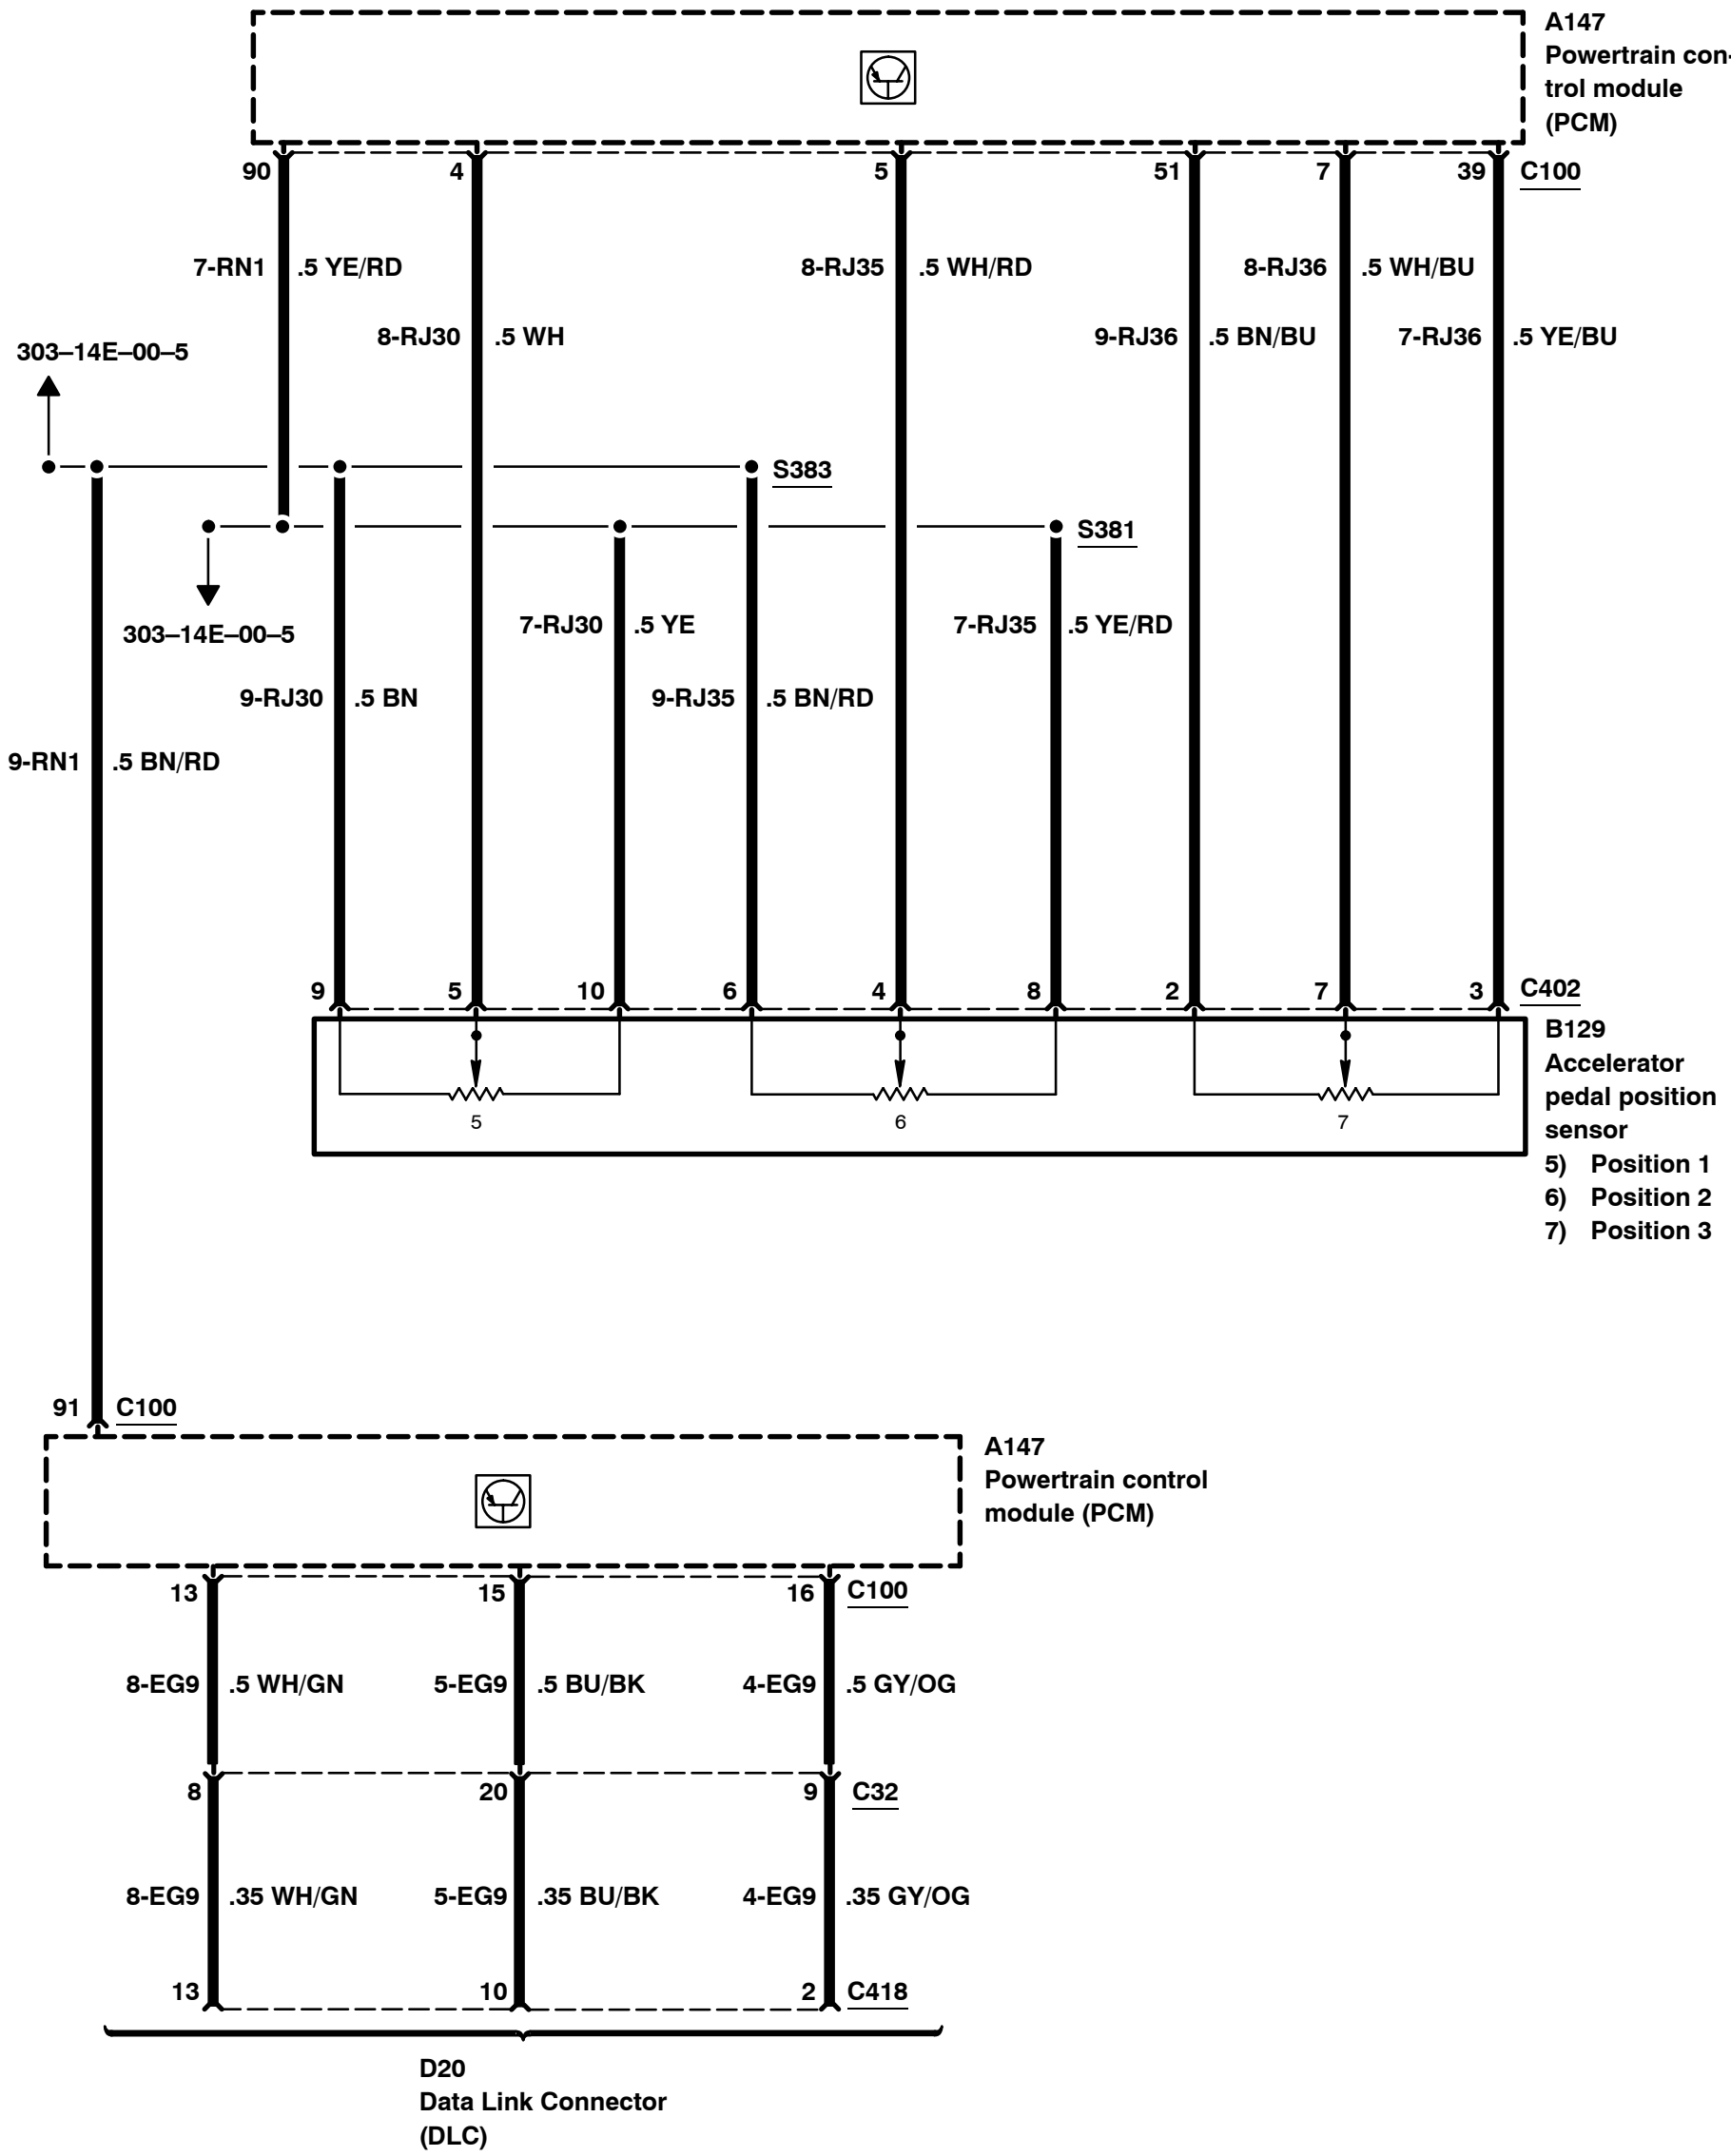


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

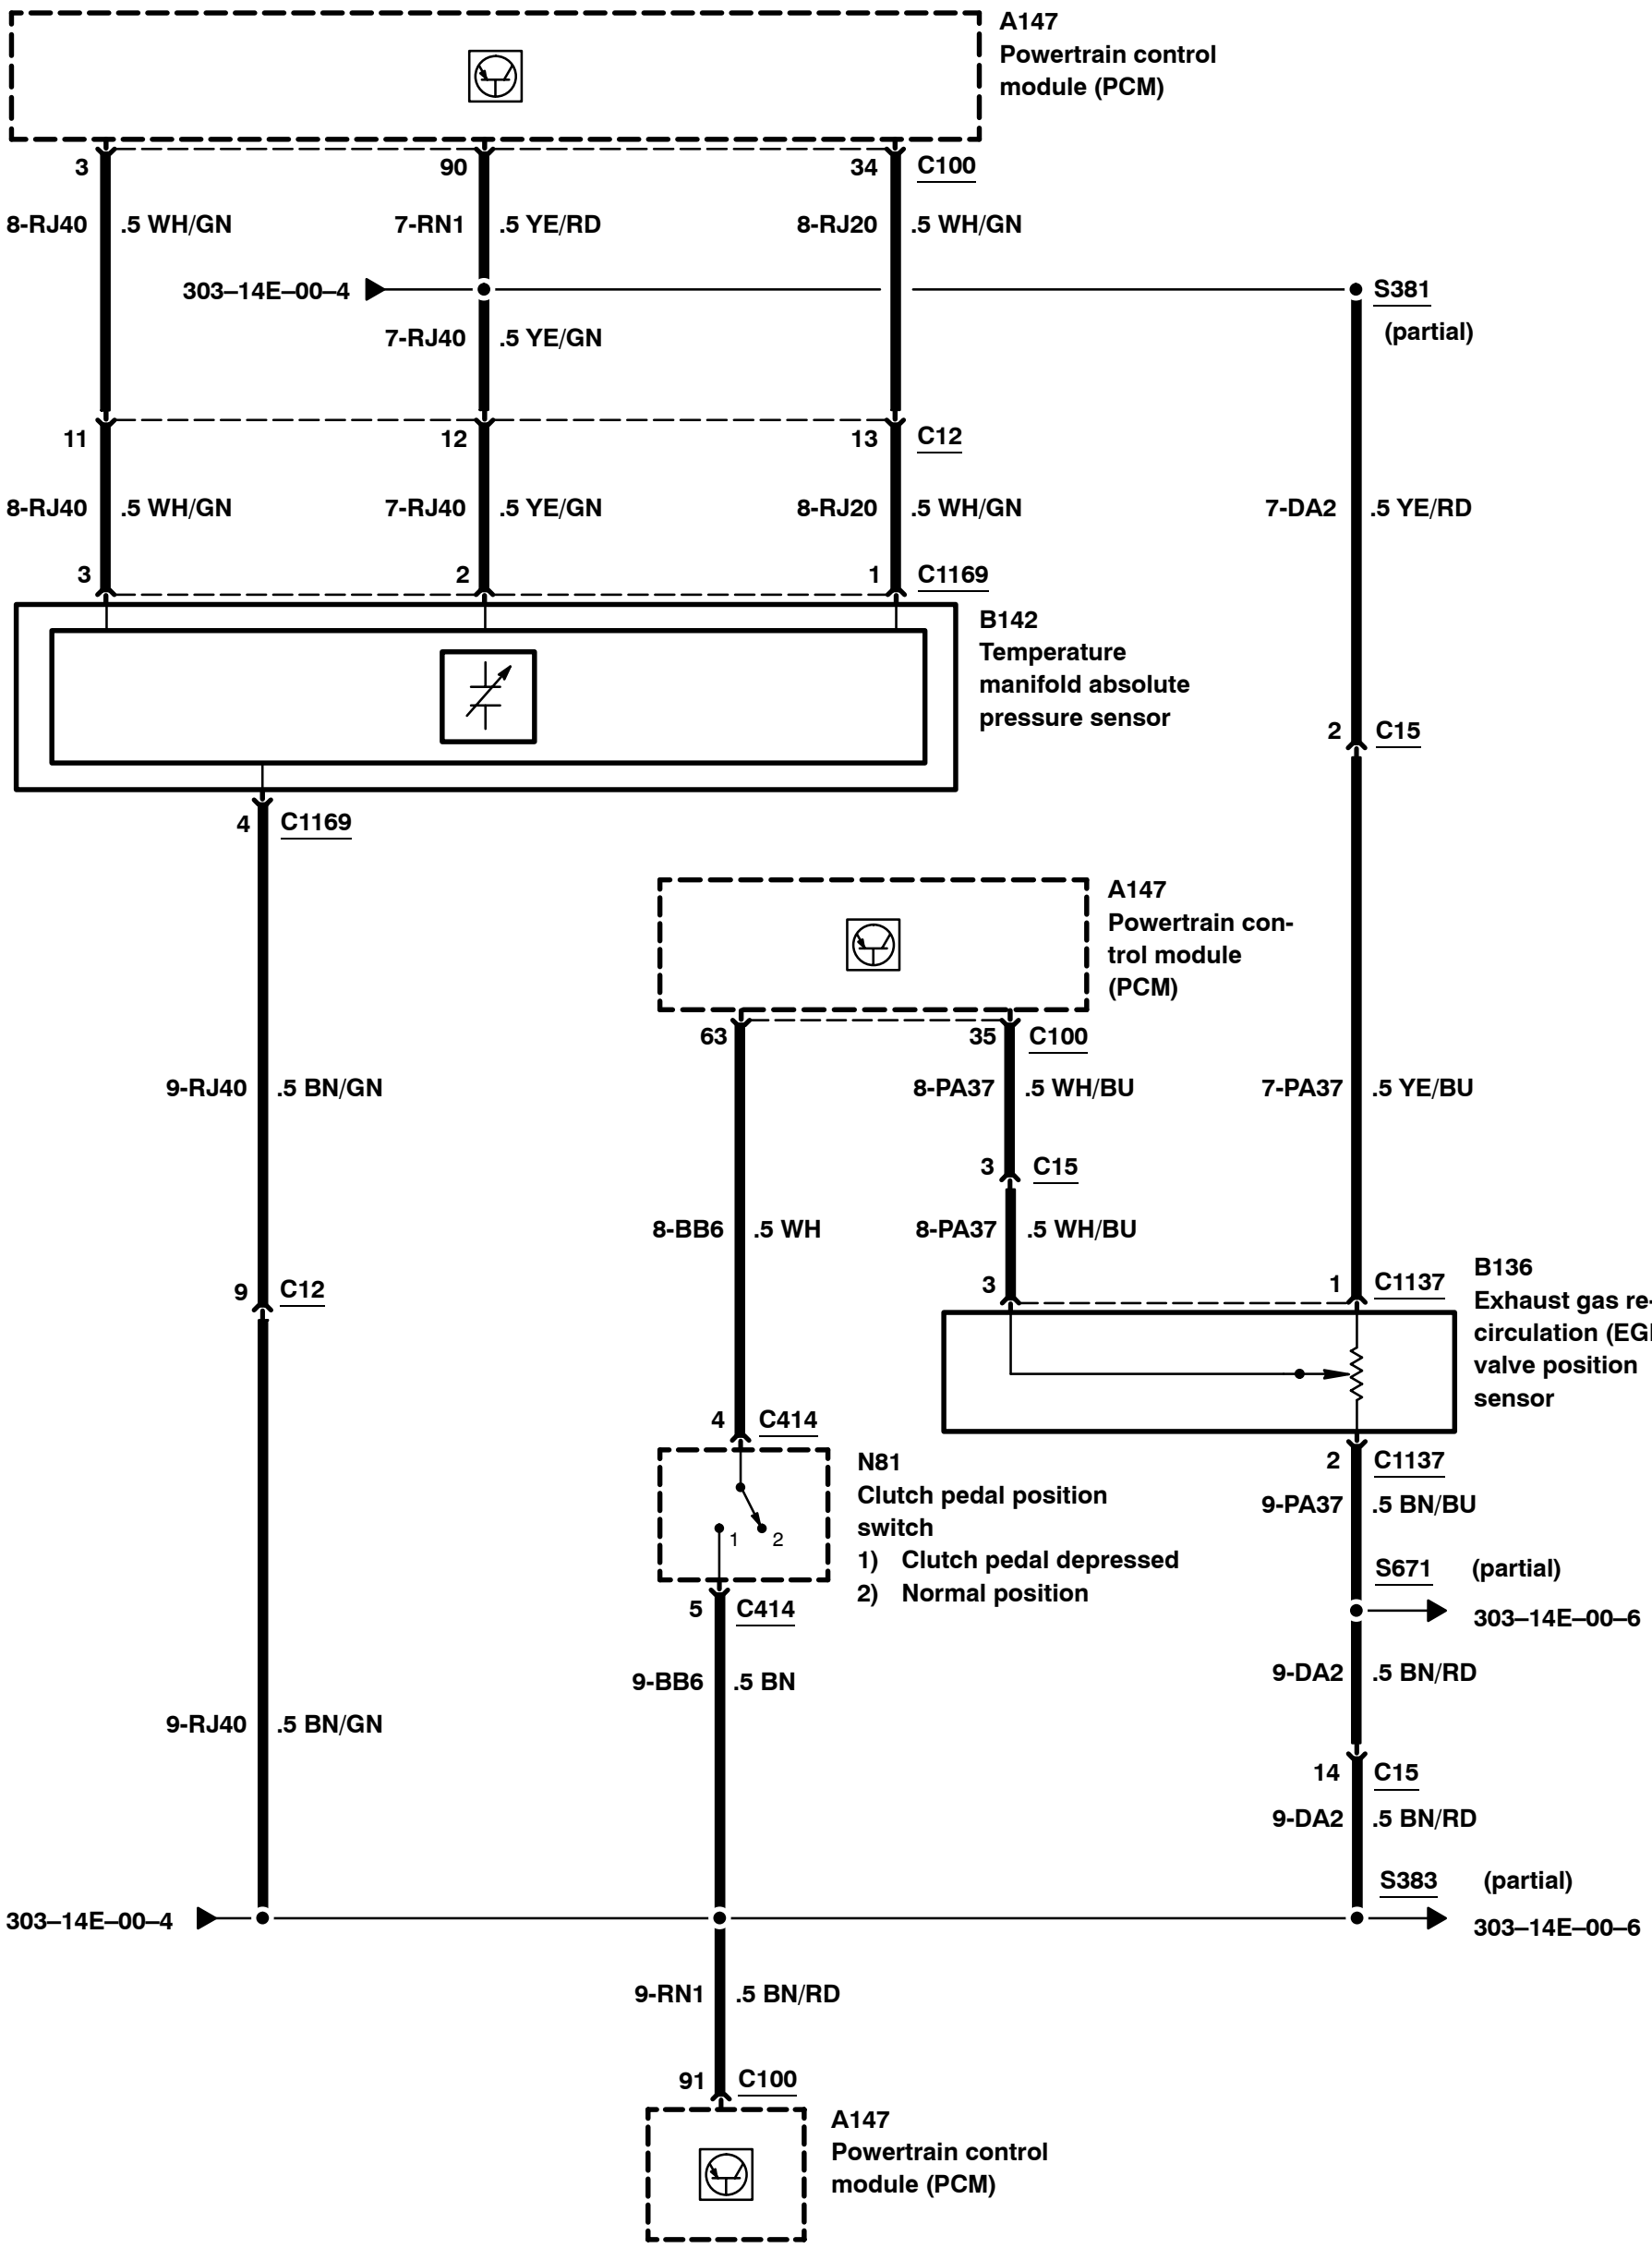


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

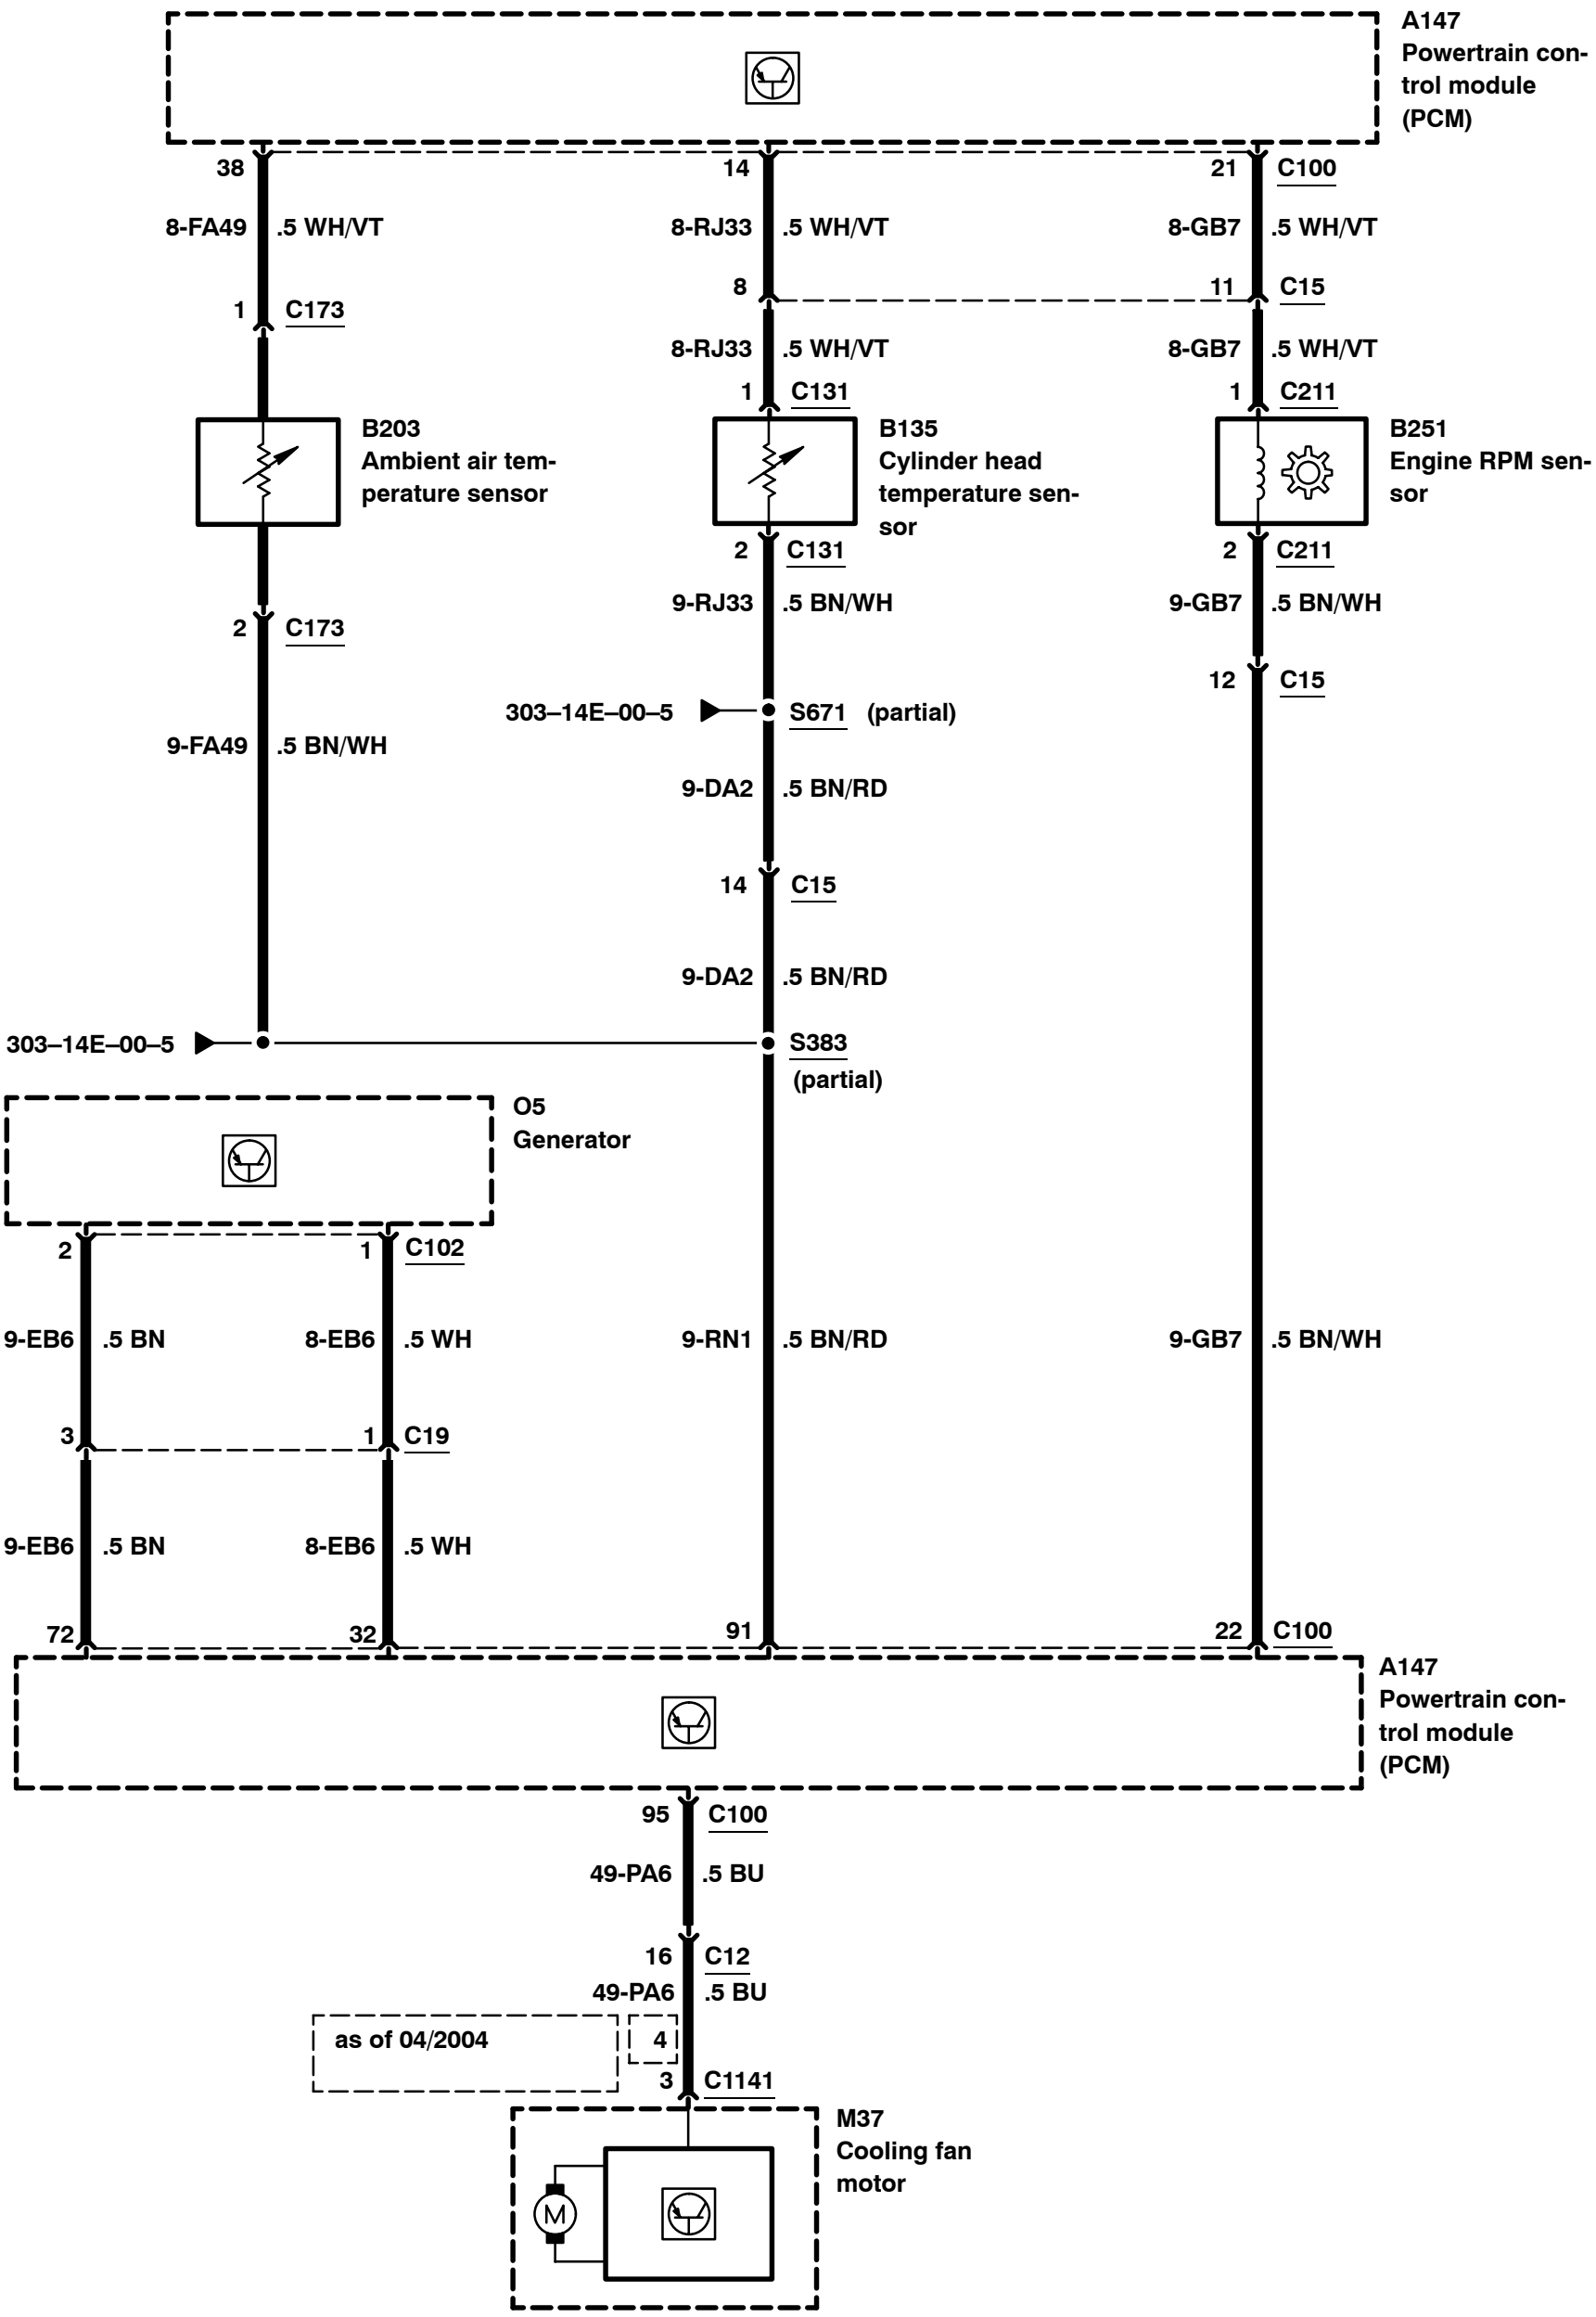


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

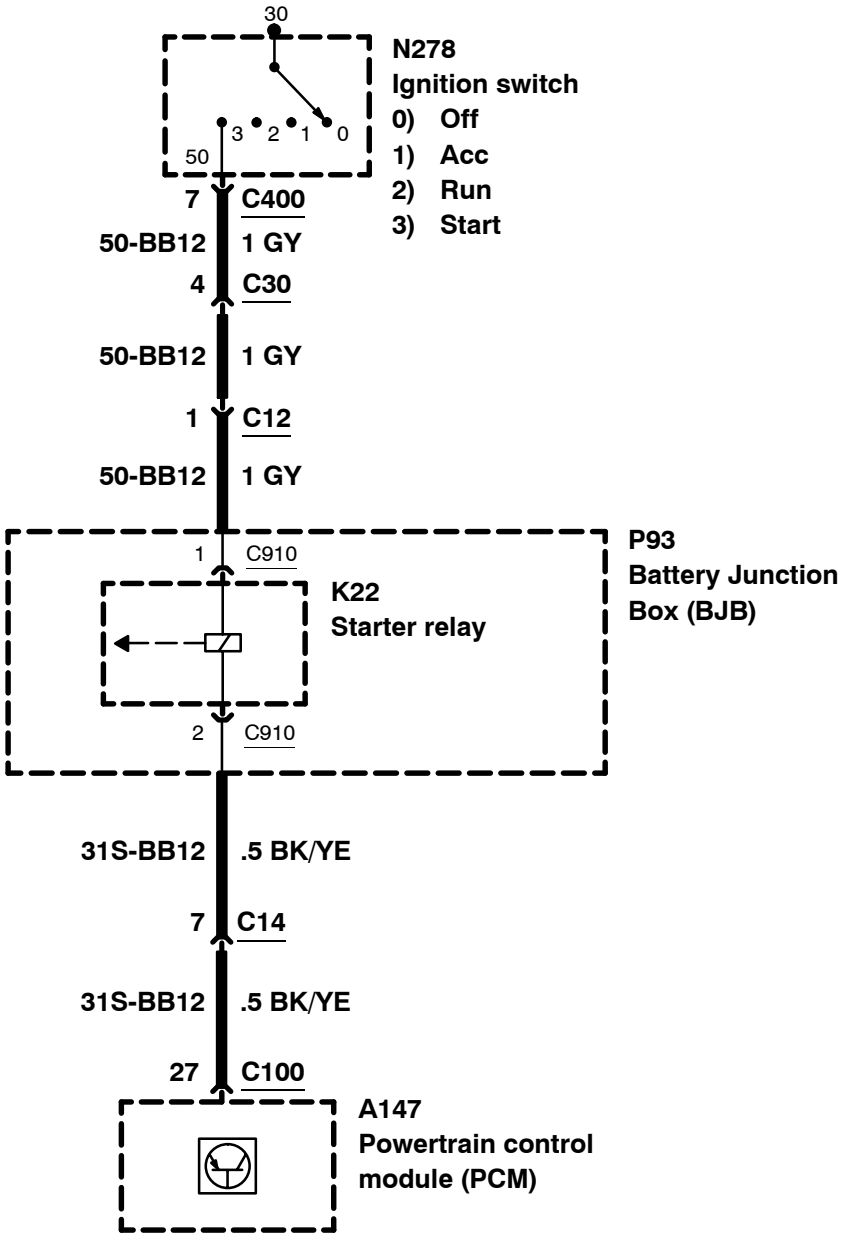

Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

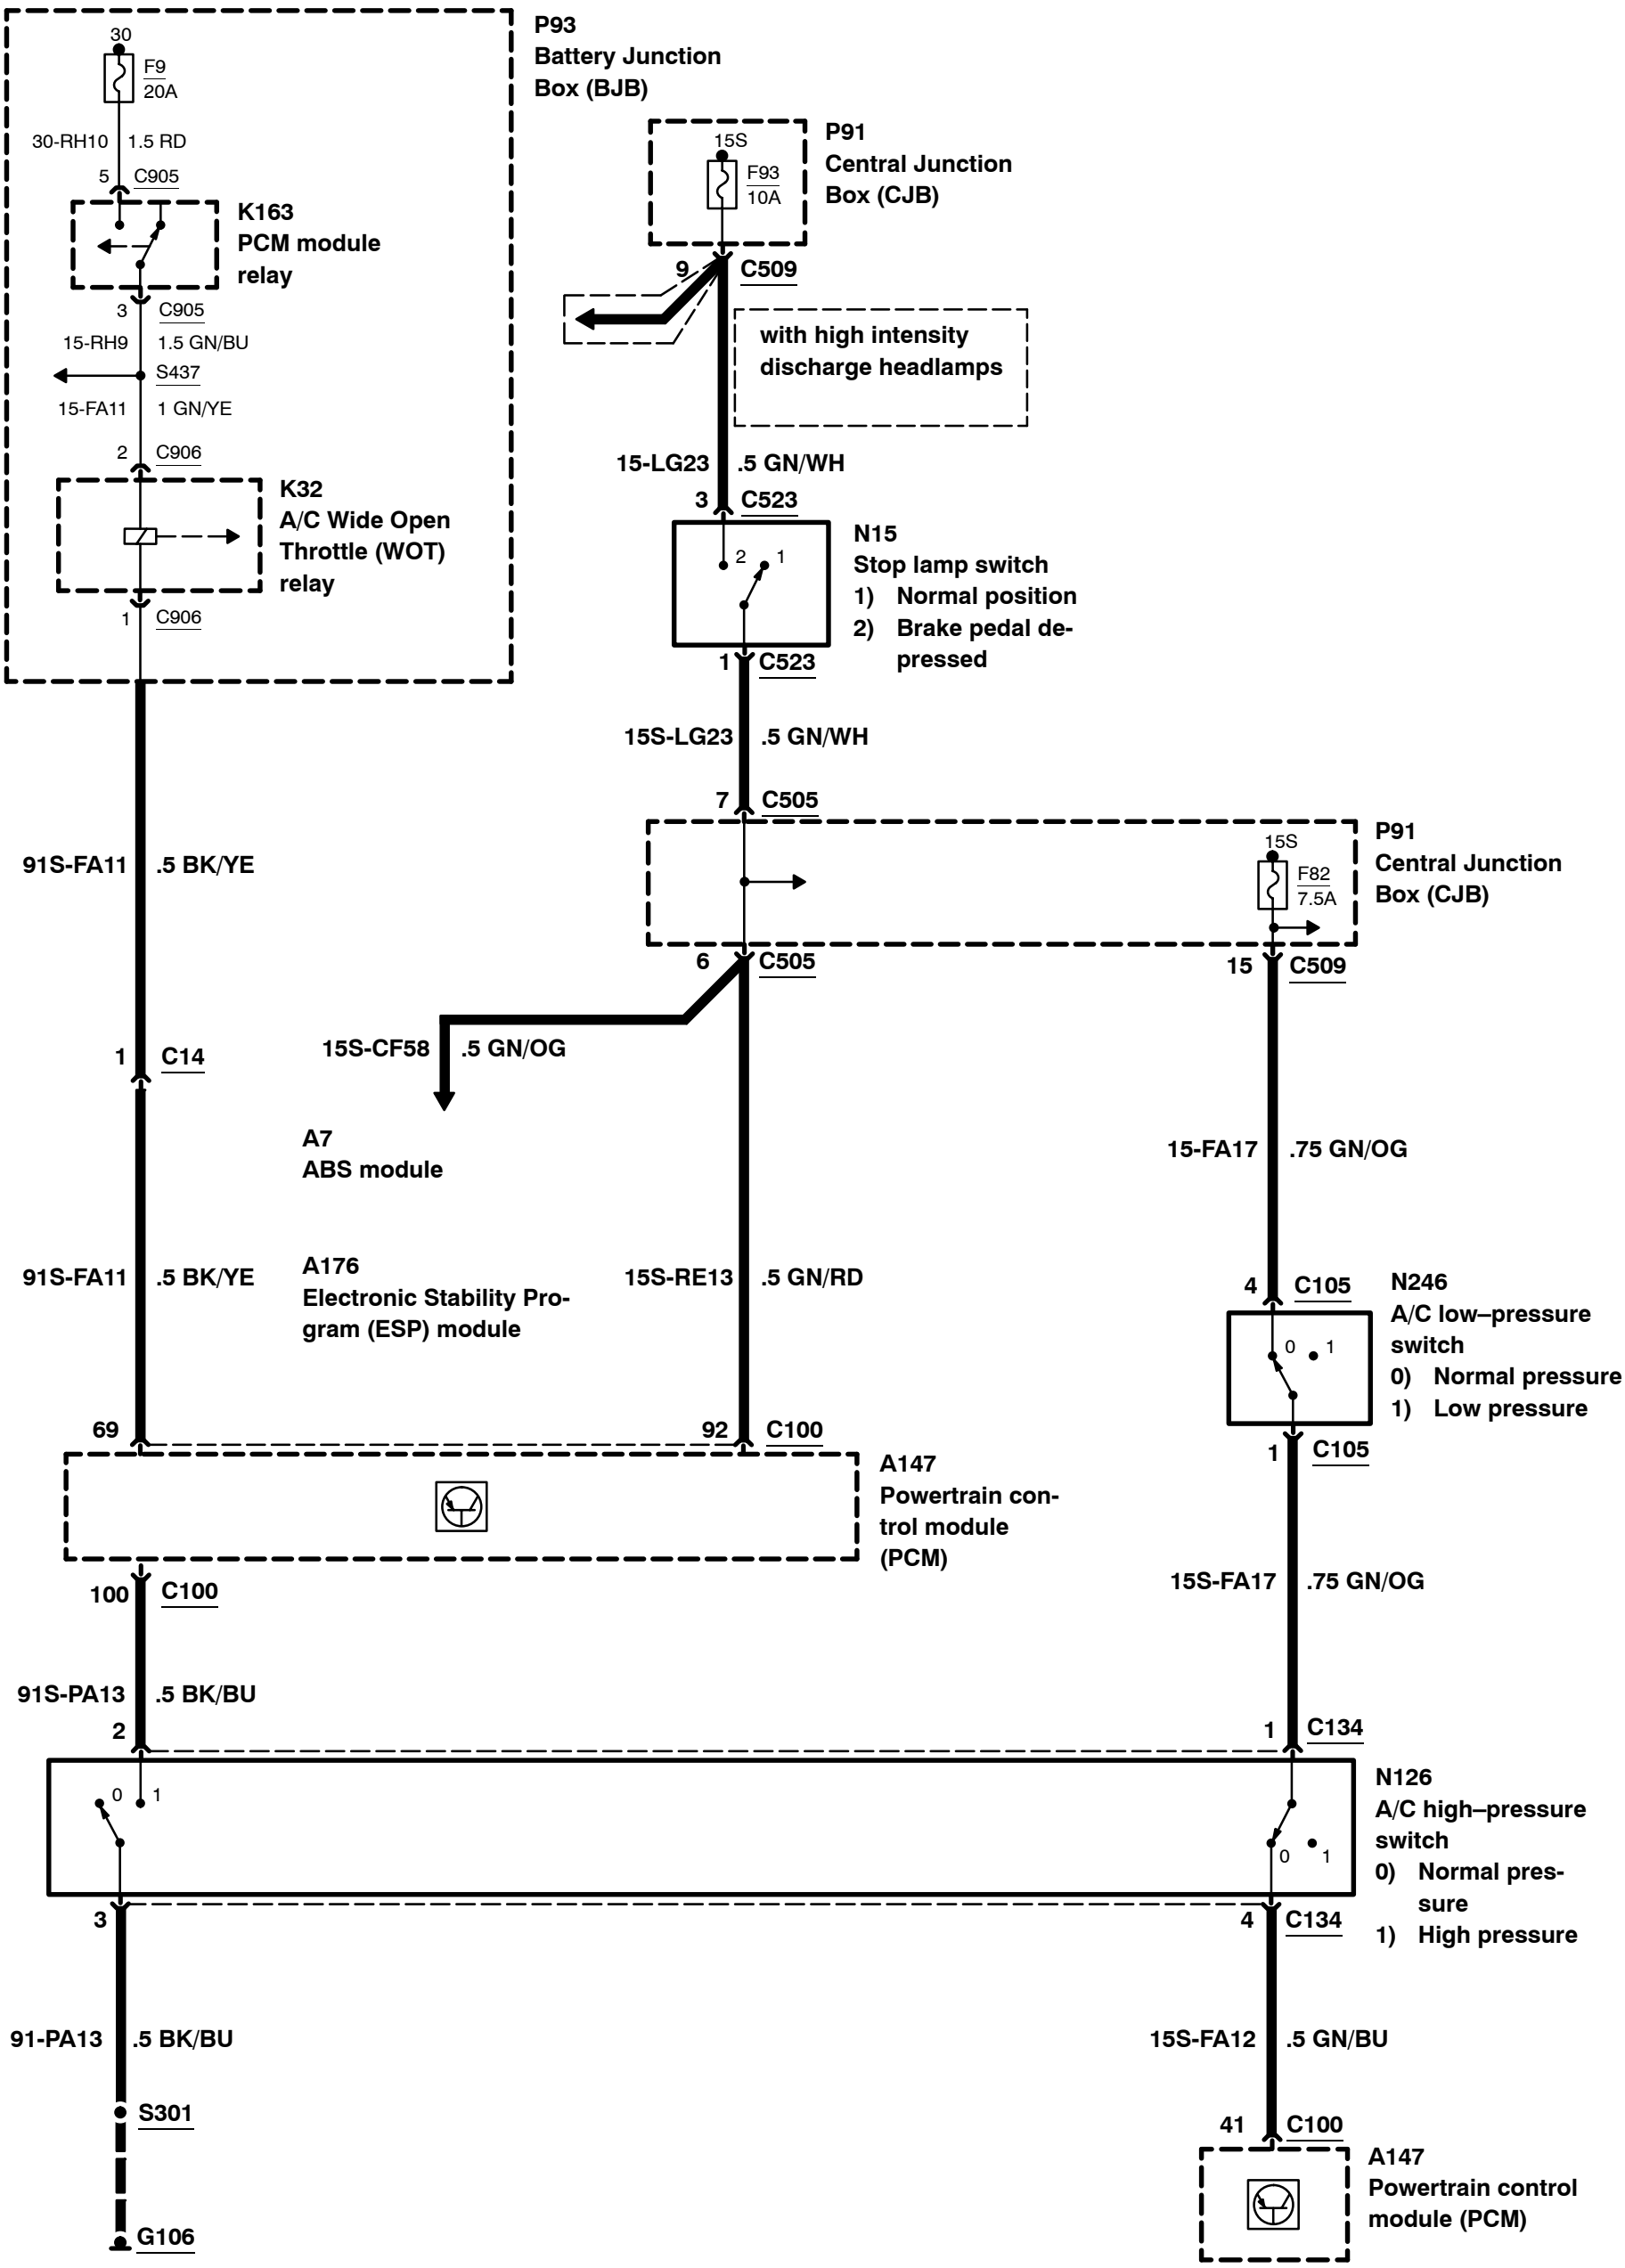


Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

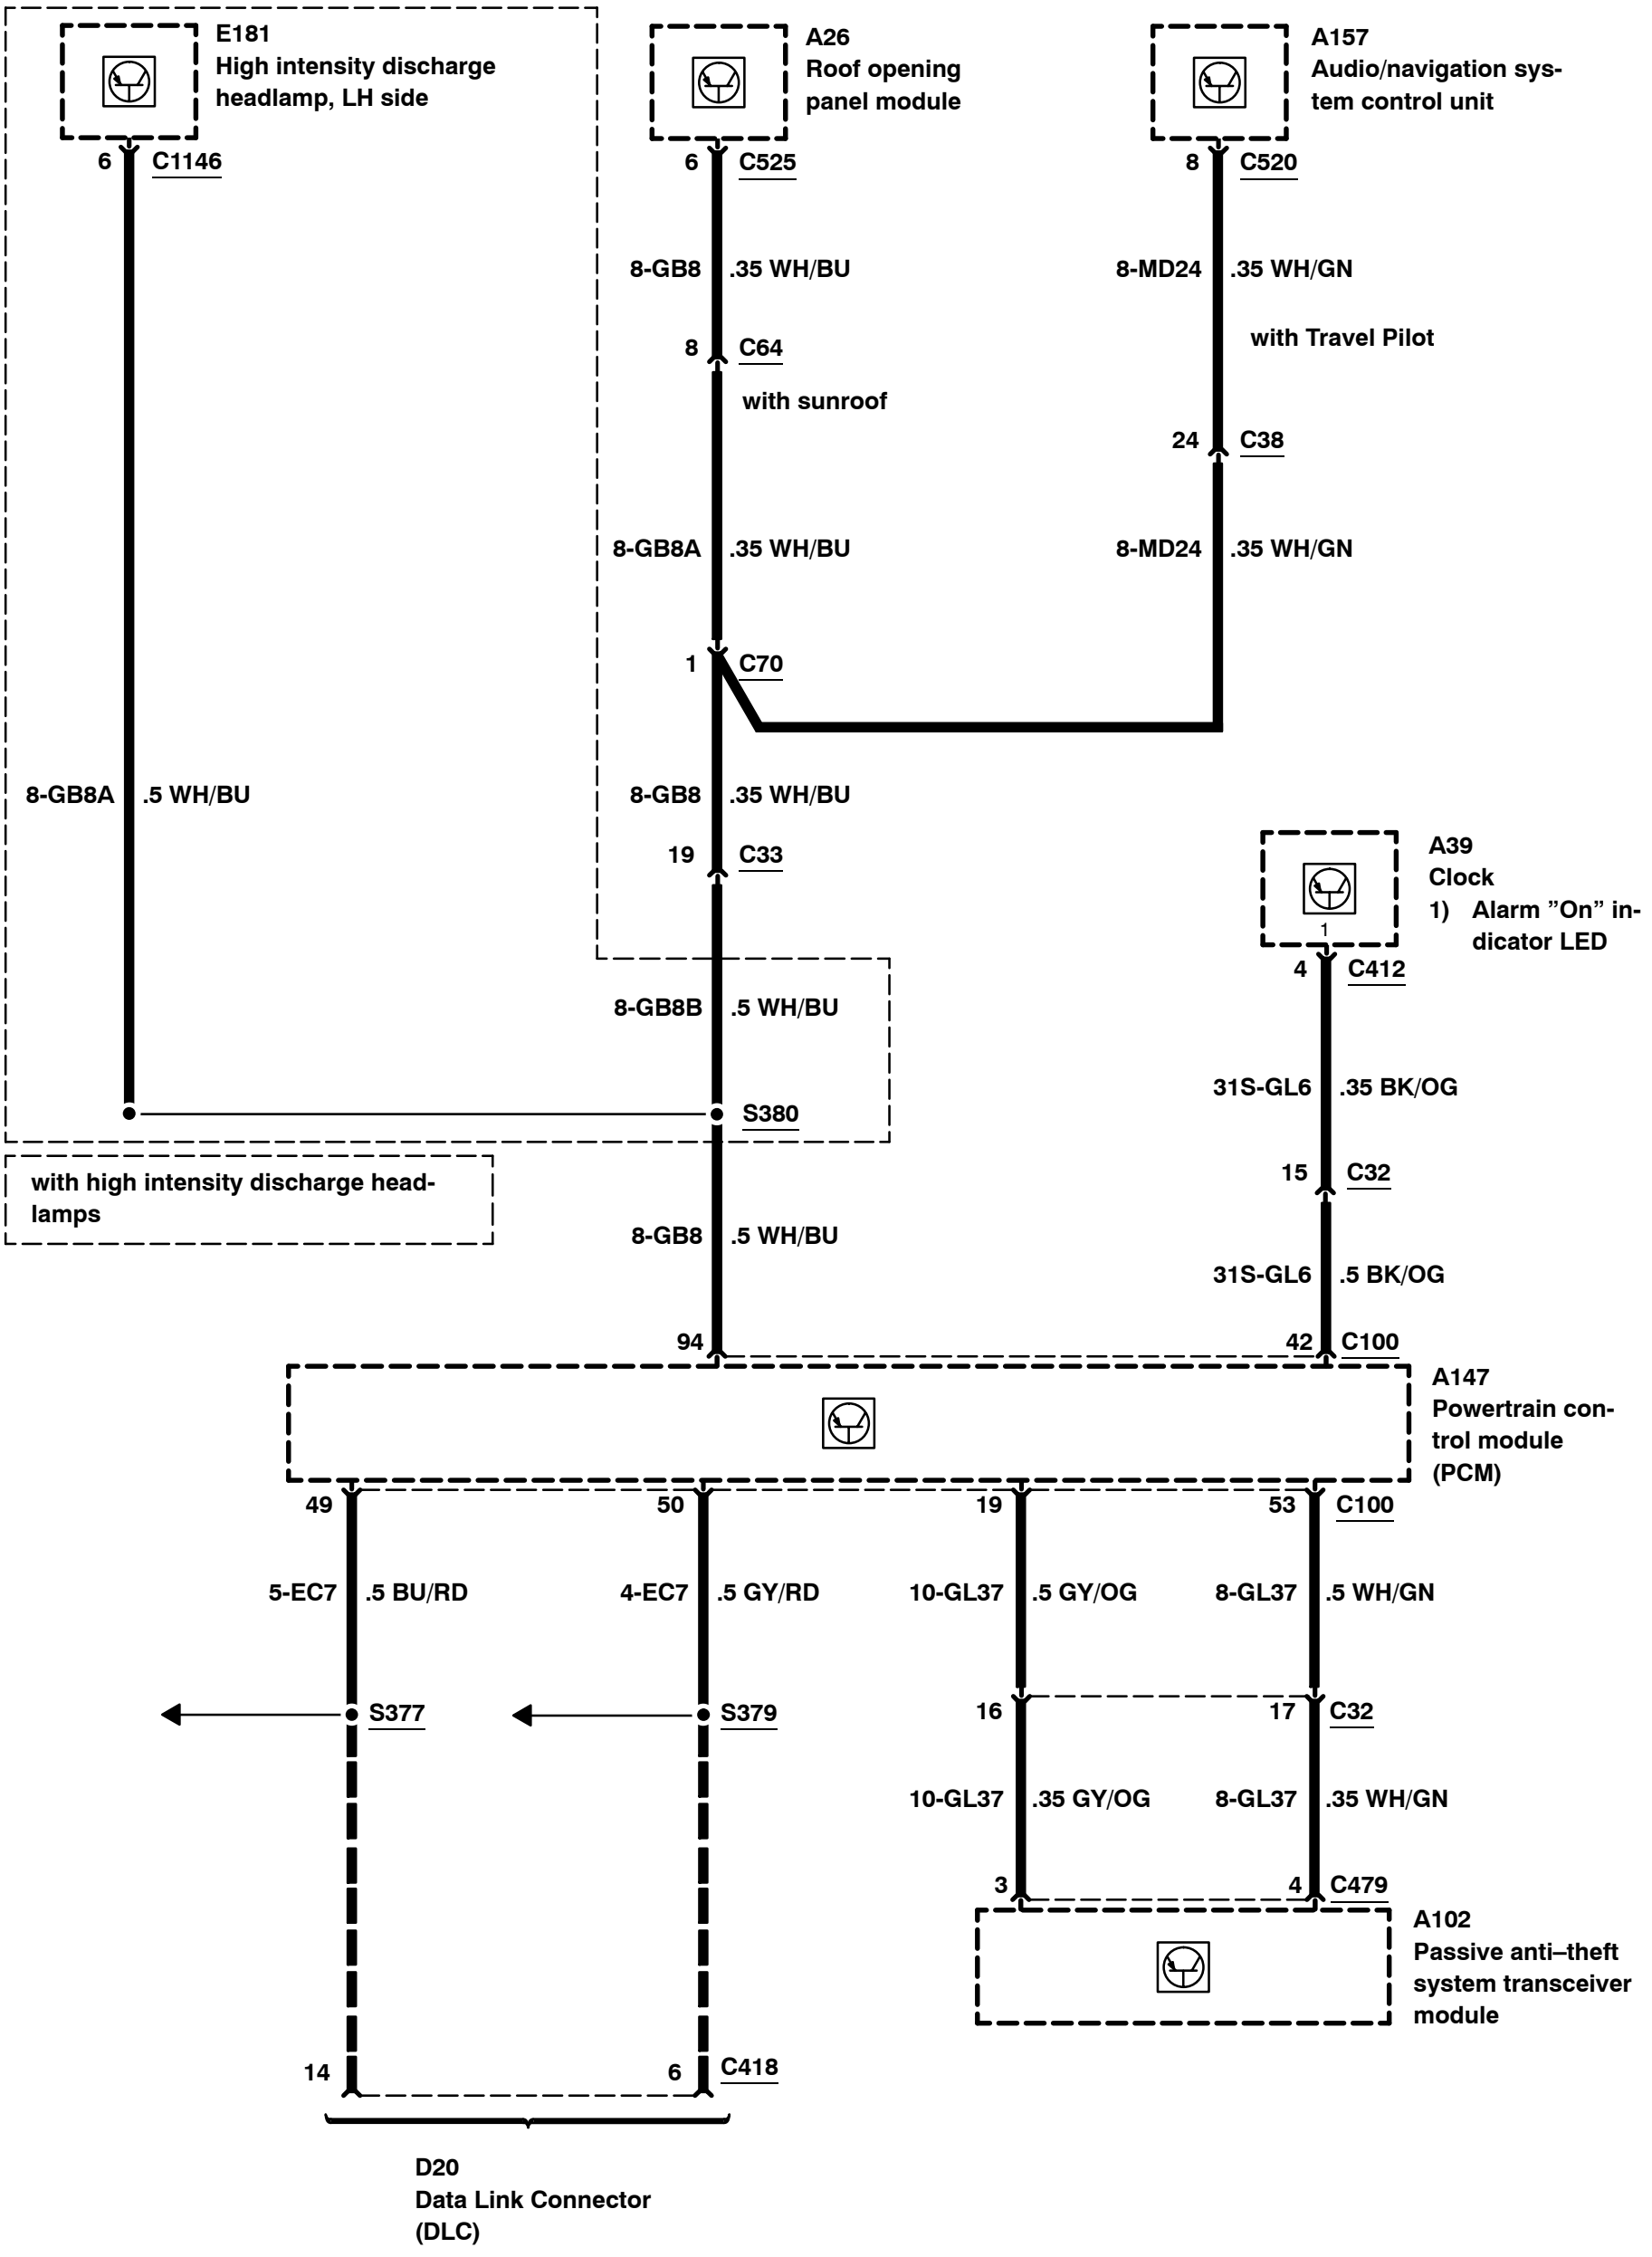


Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel

Block diagram

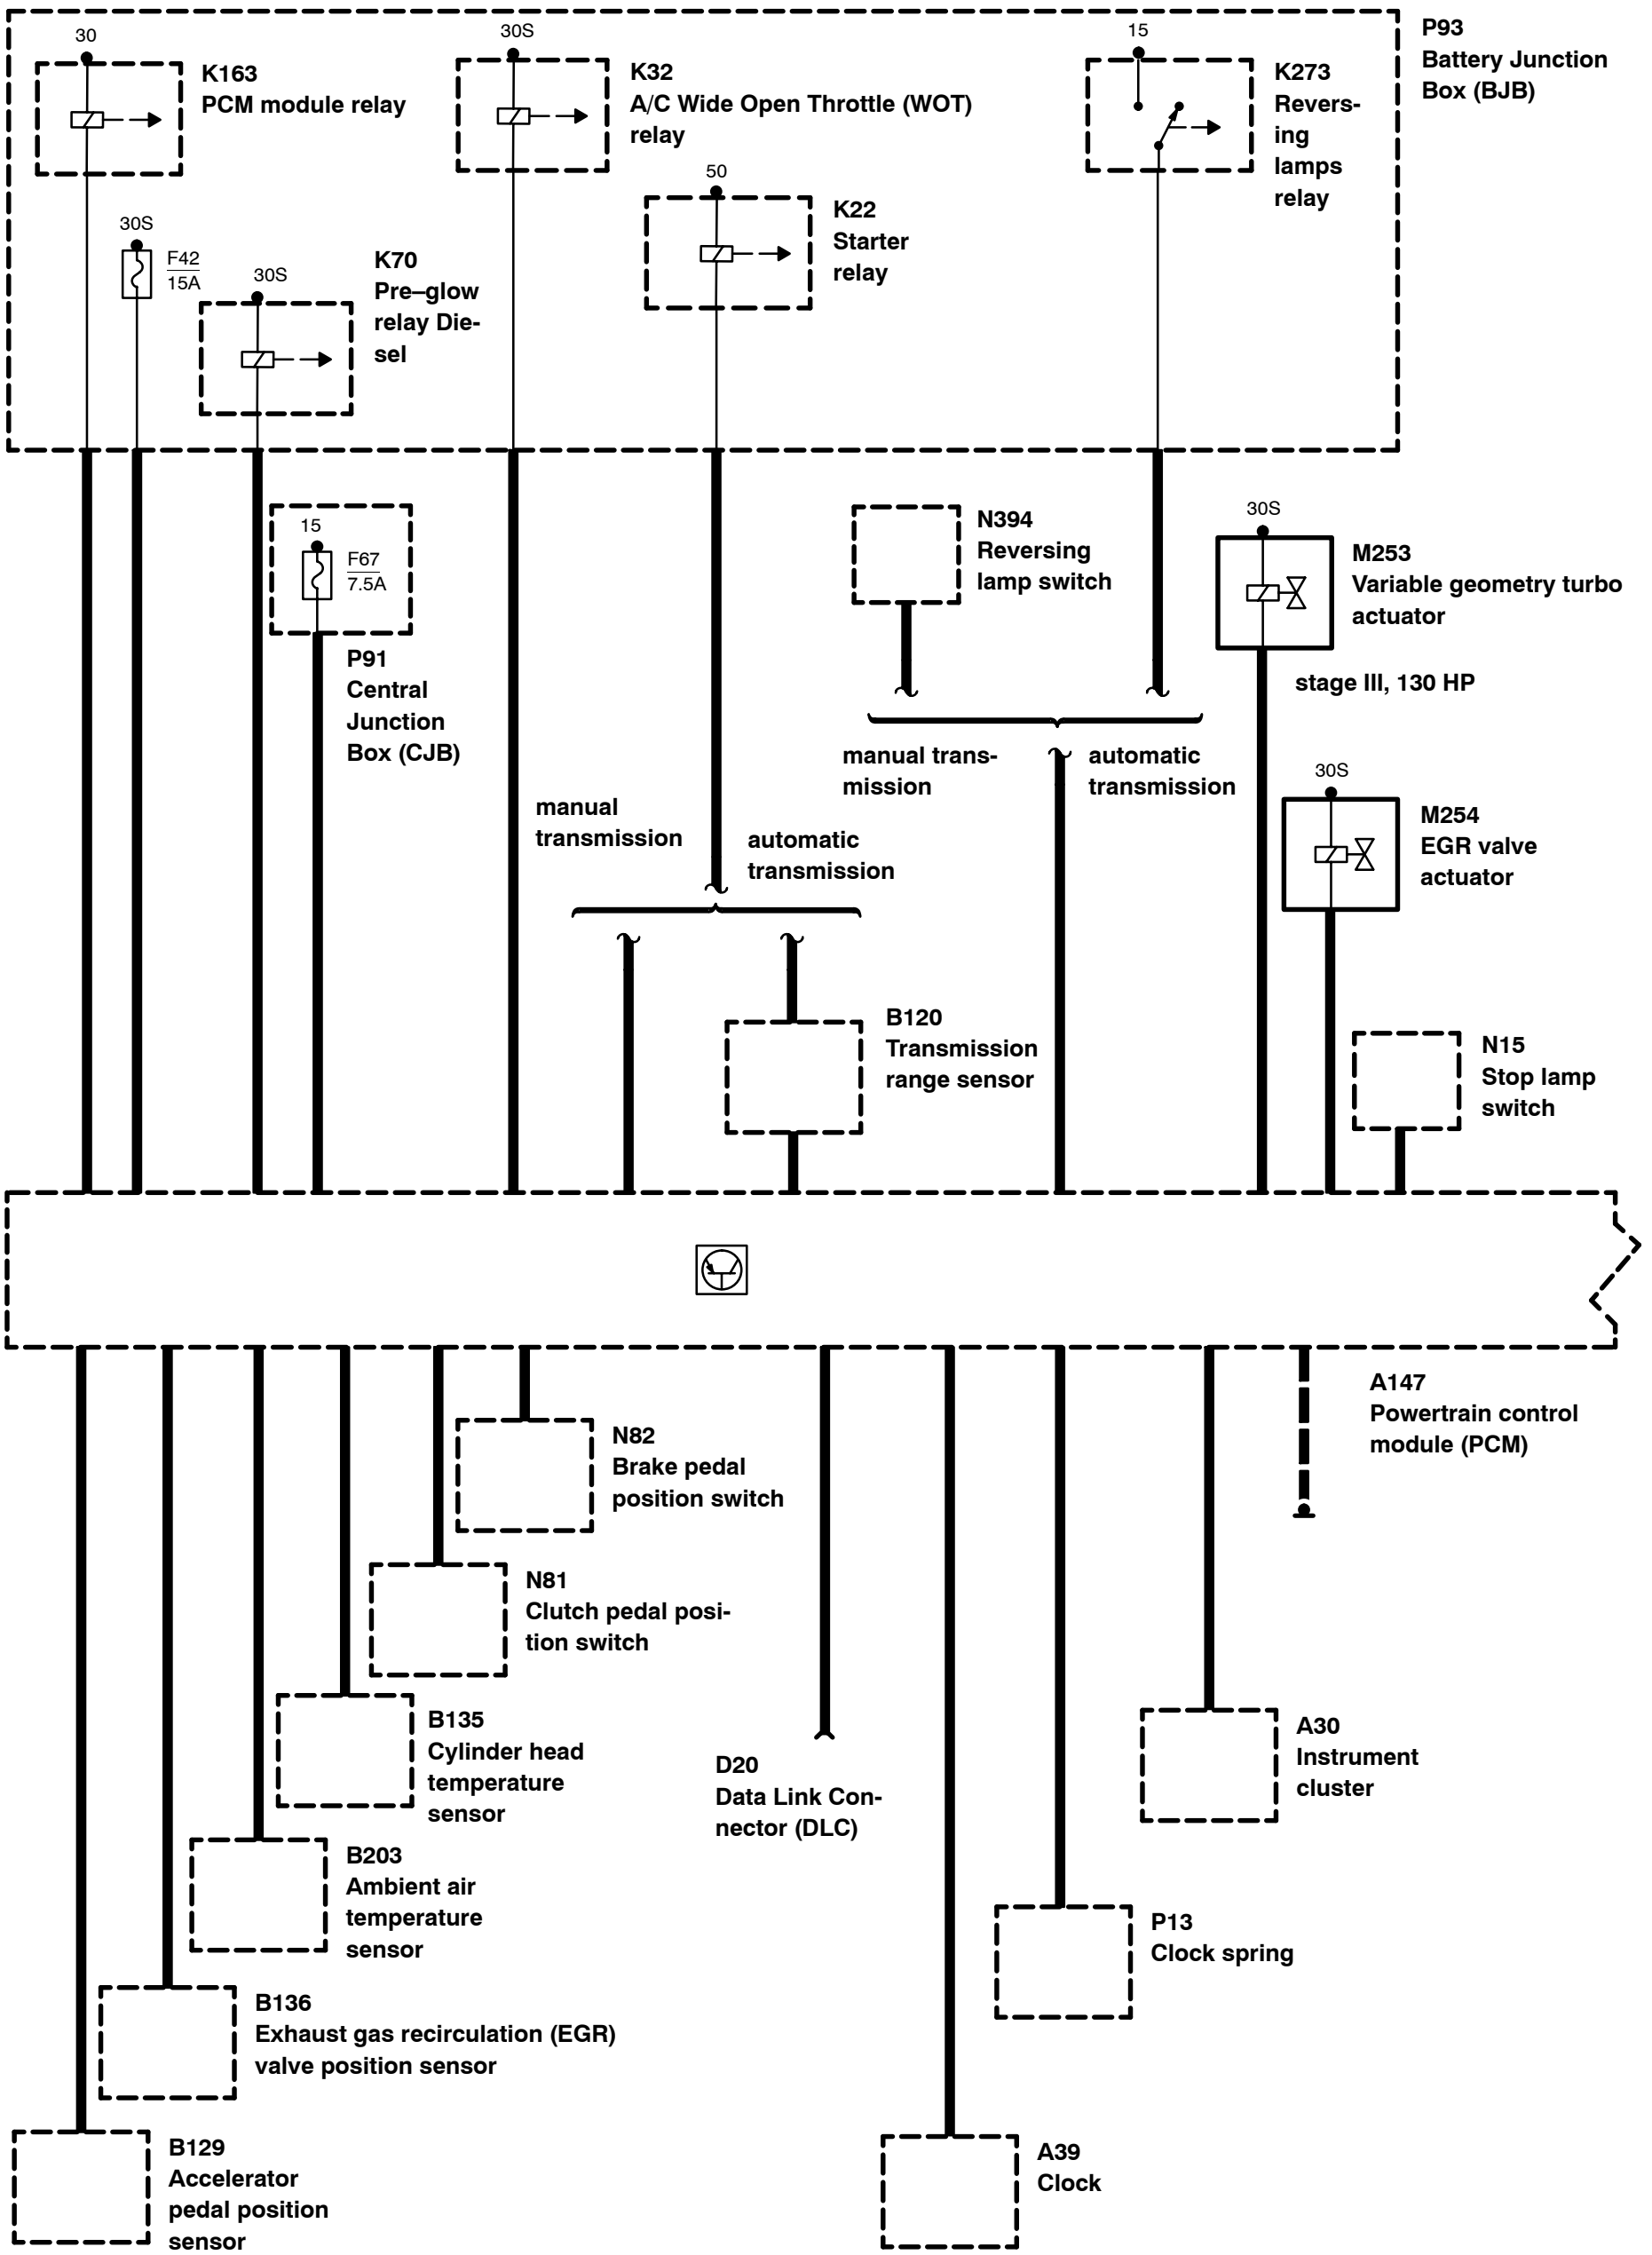


Electronic Engine Controls – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel


Block diagram

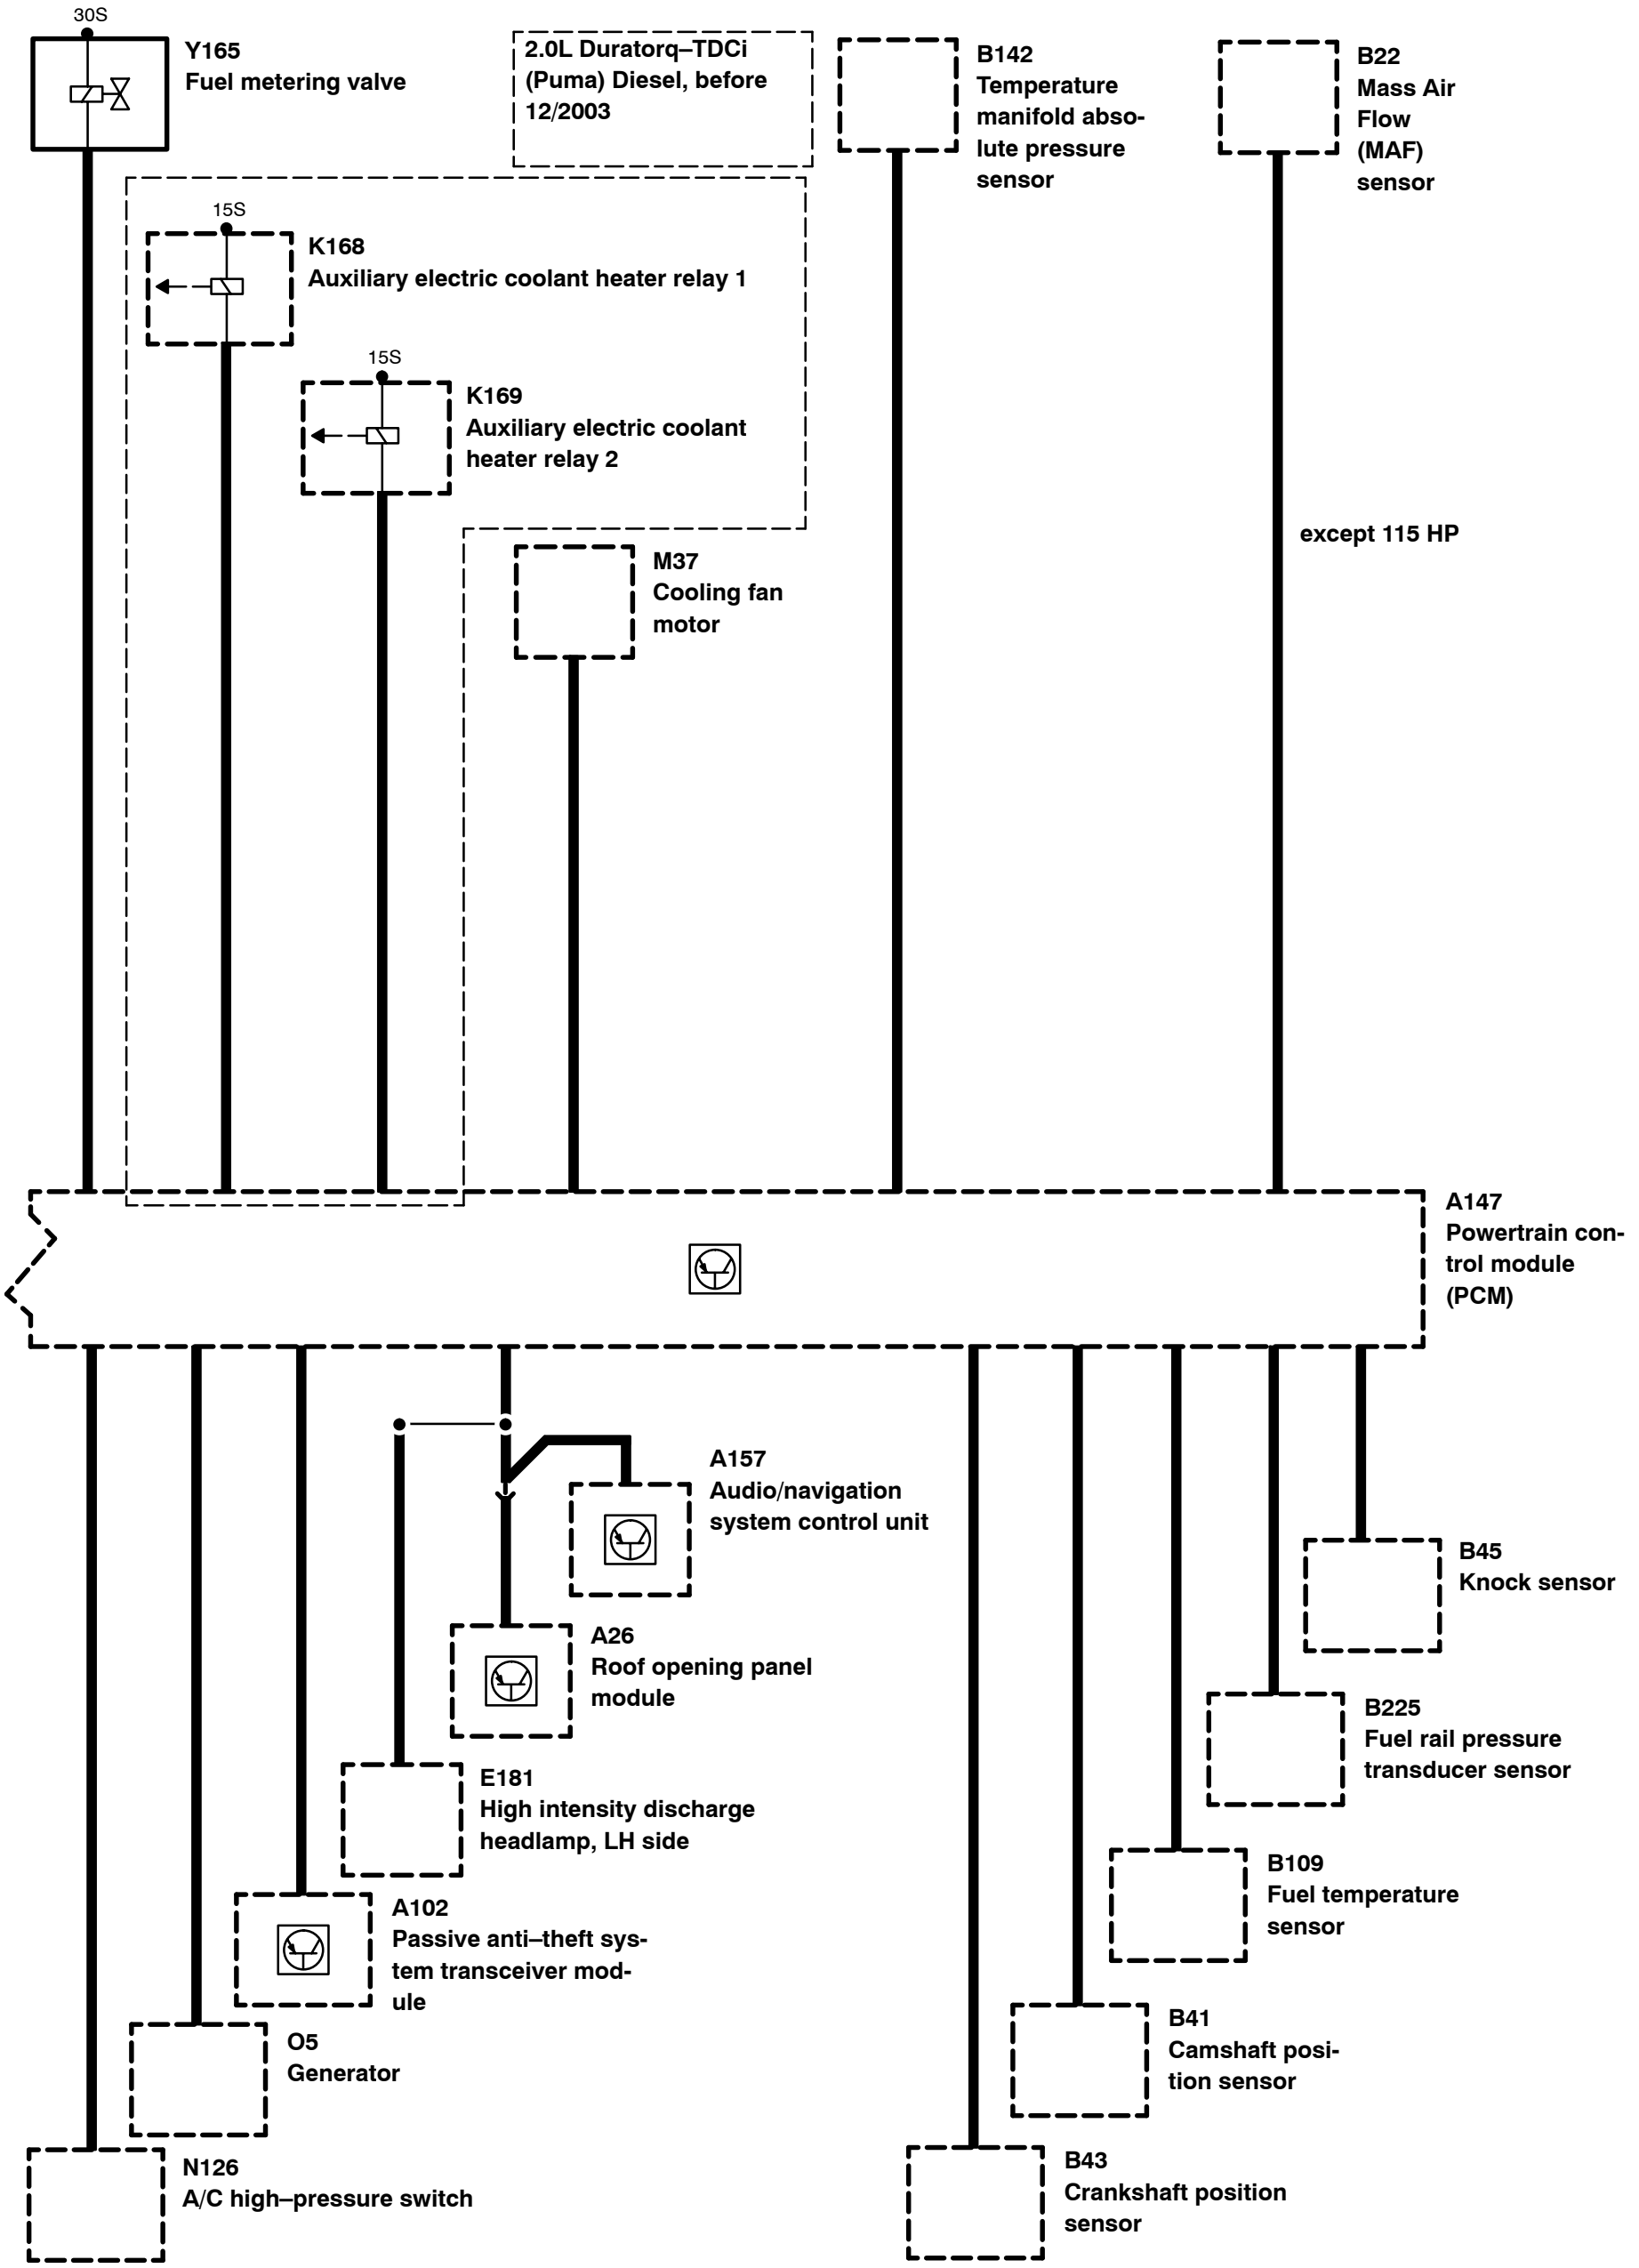


Electronic Engine Controls – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III

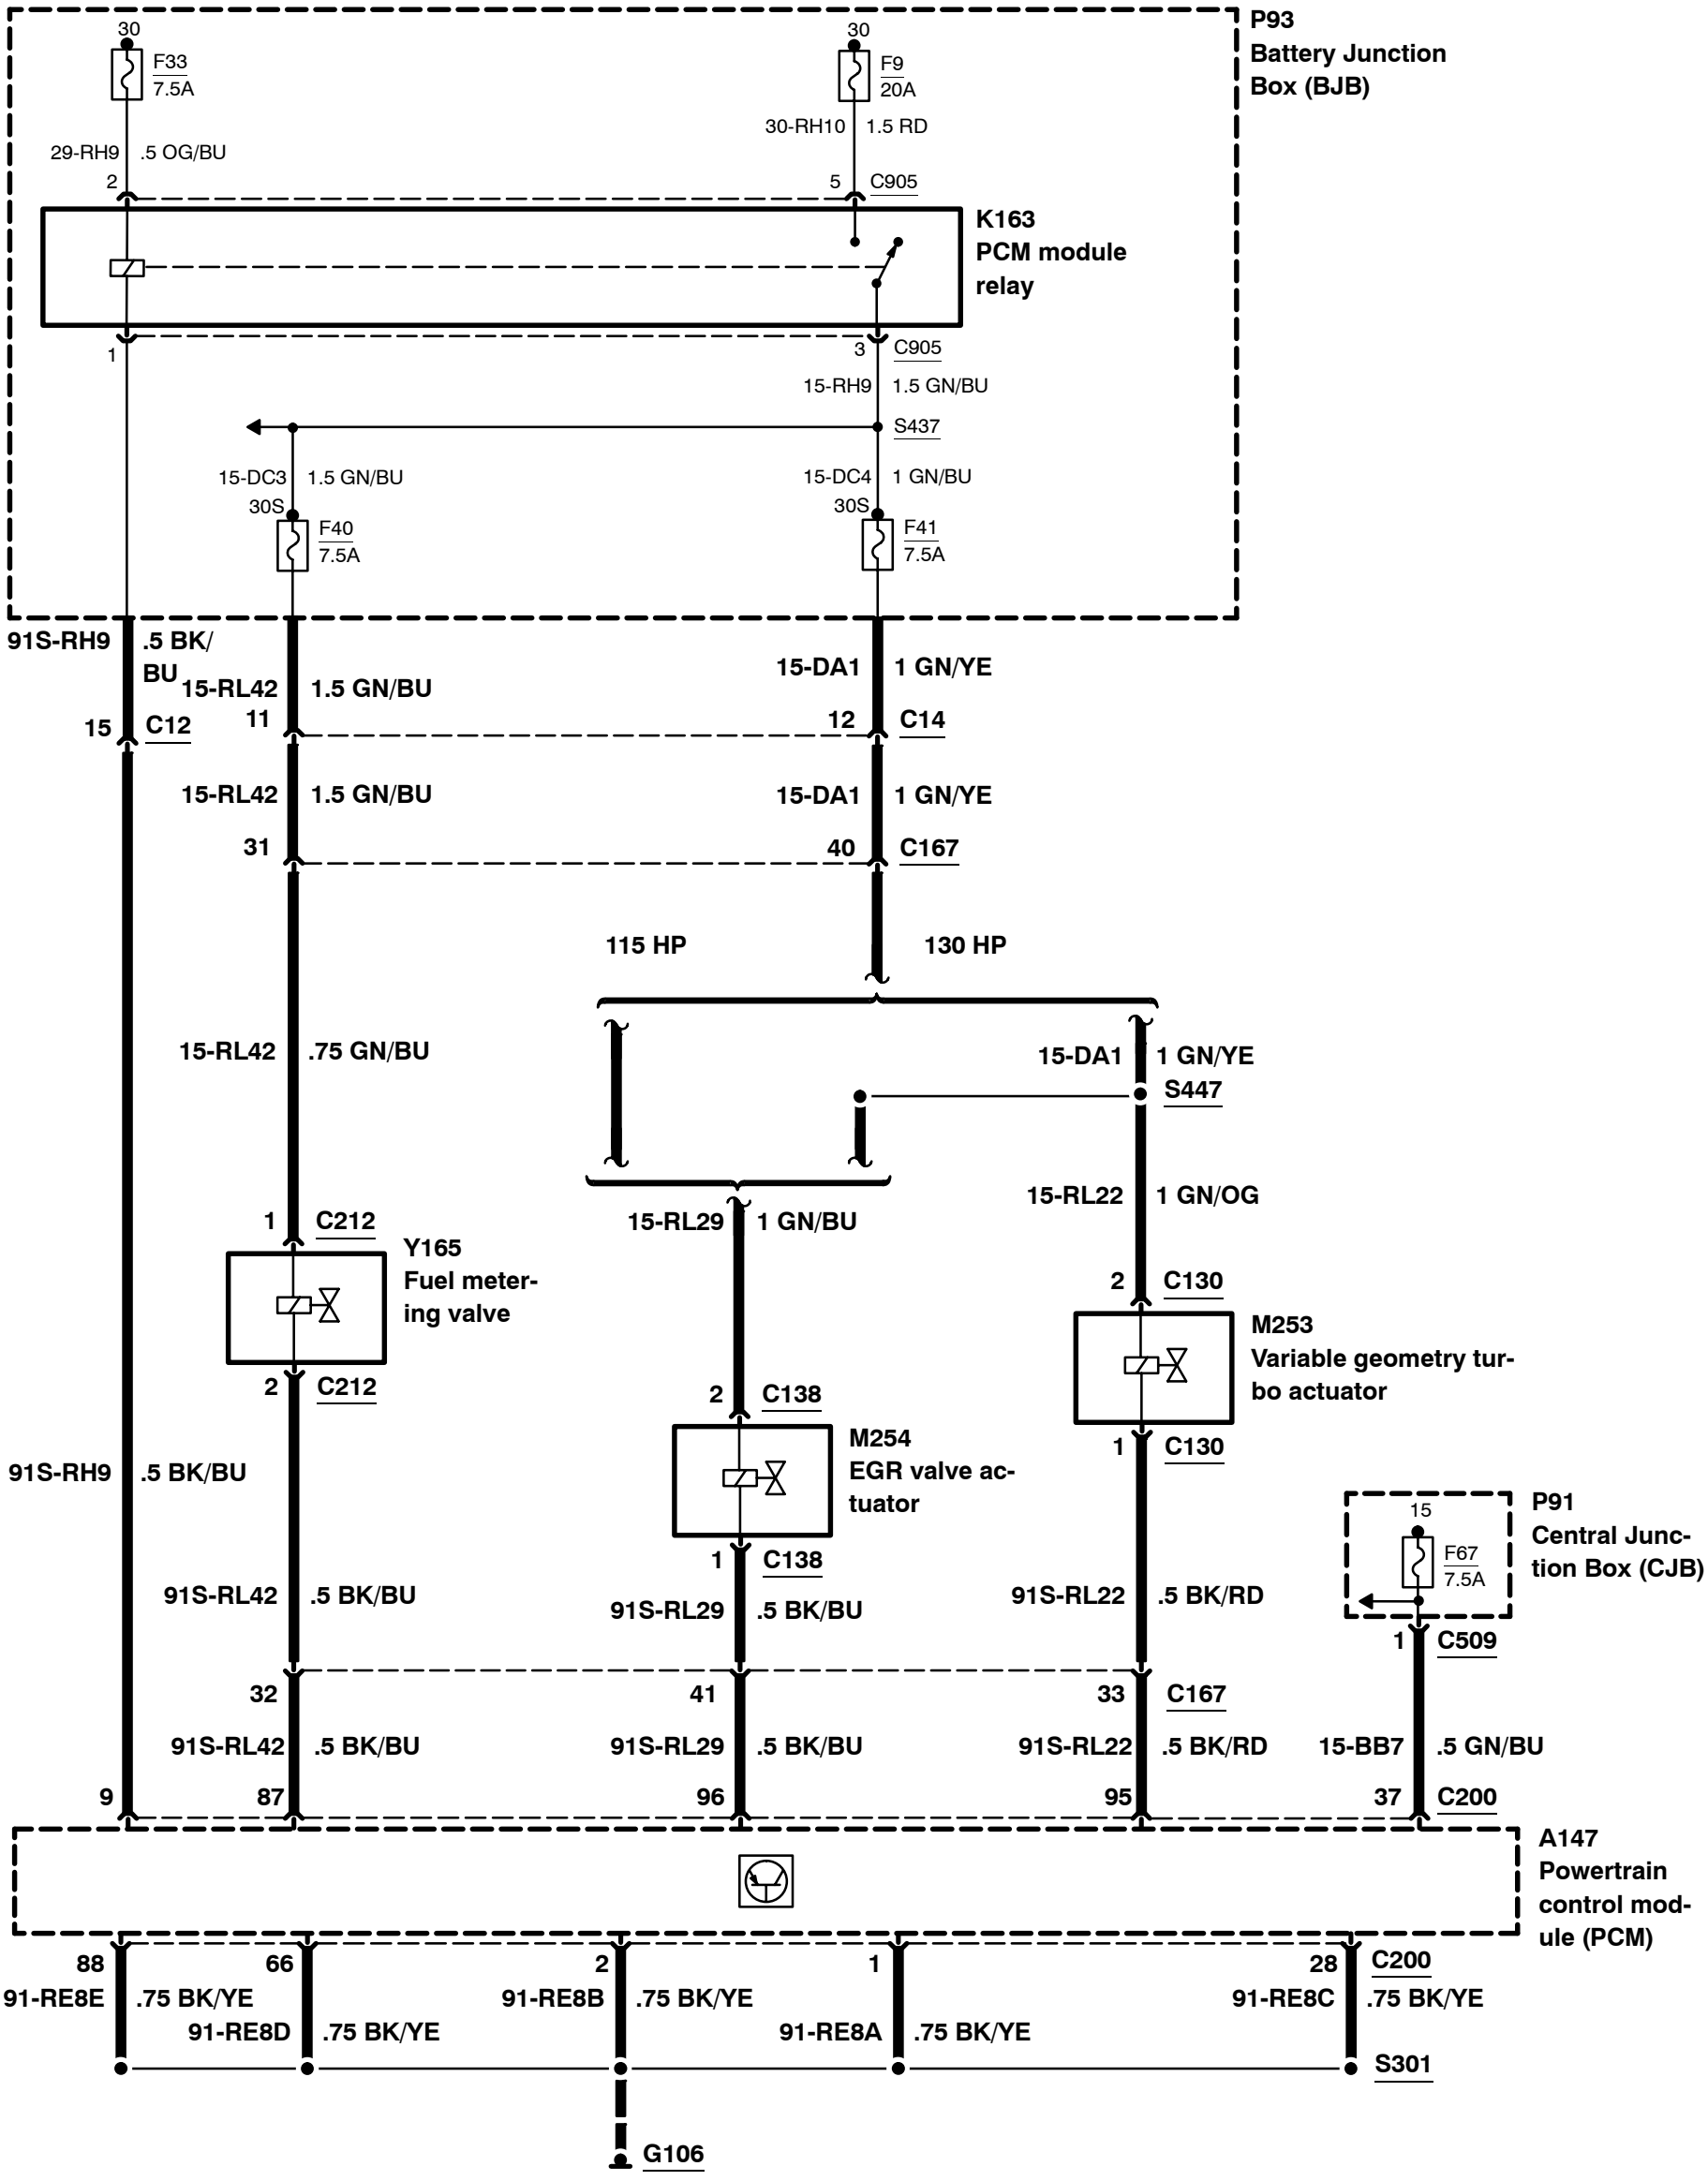


Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV

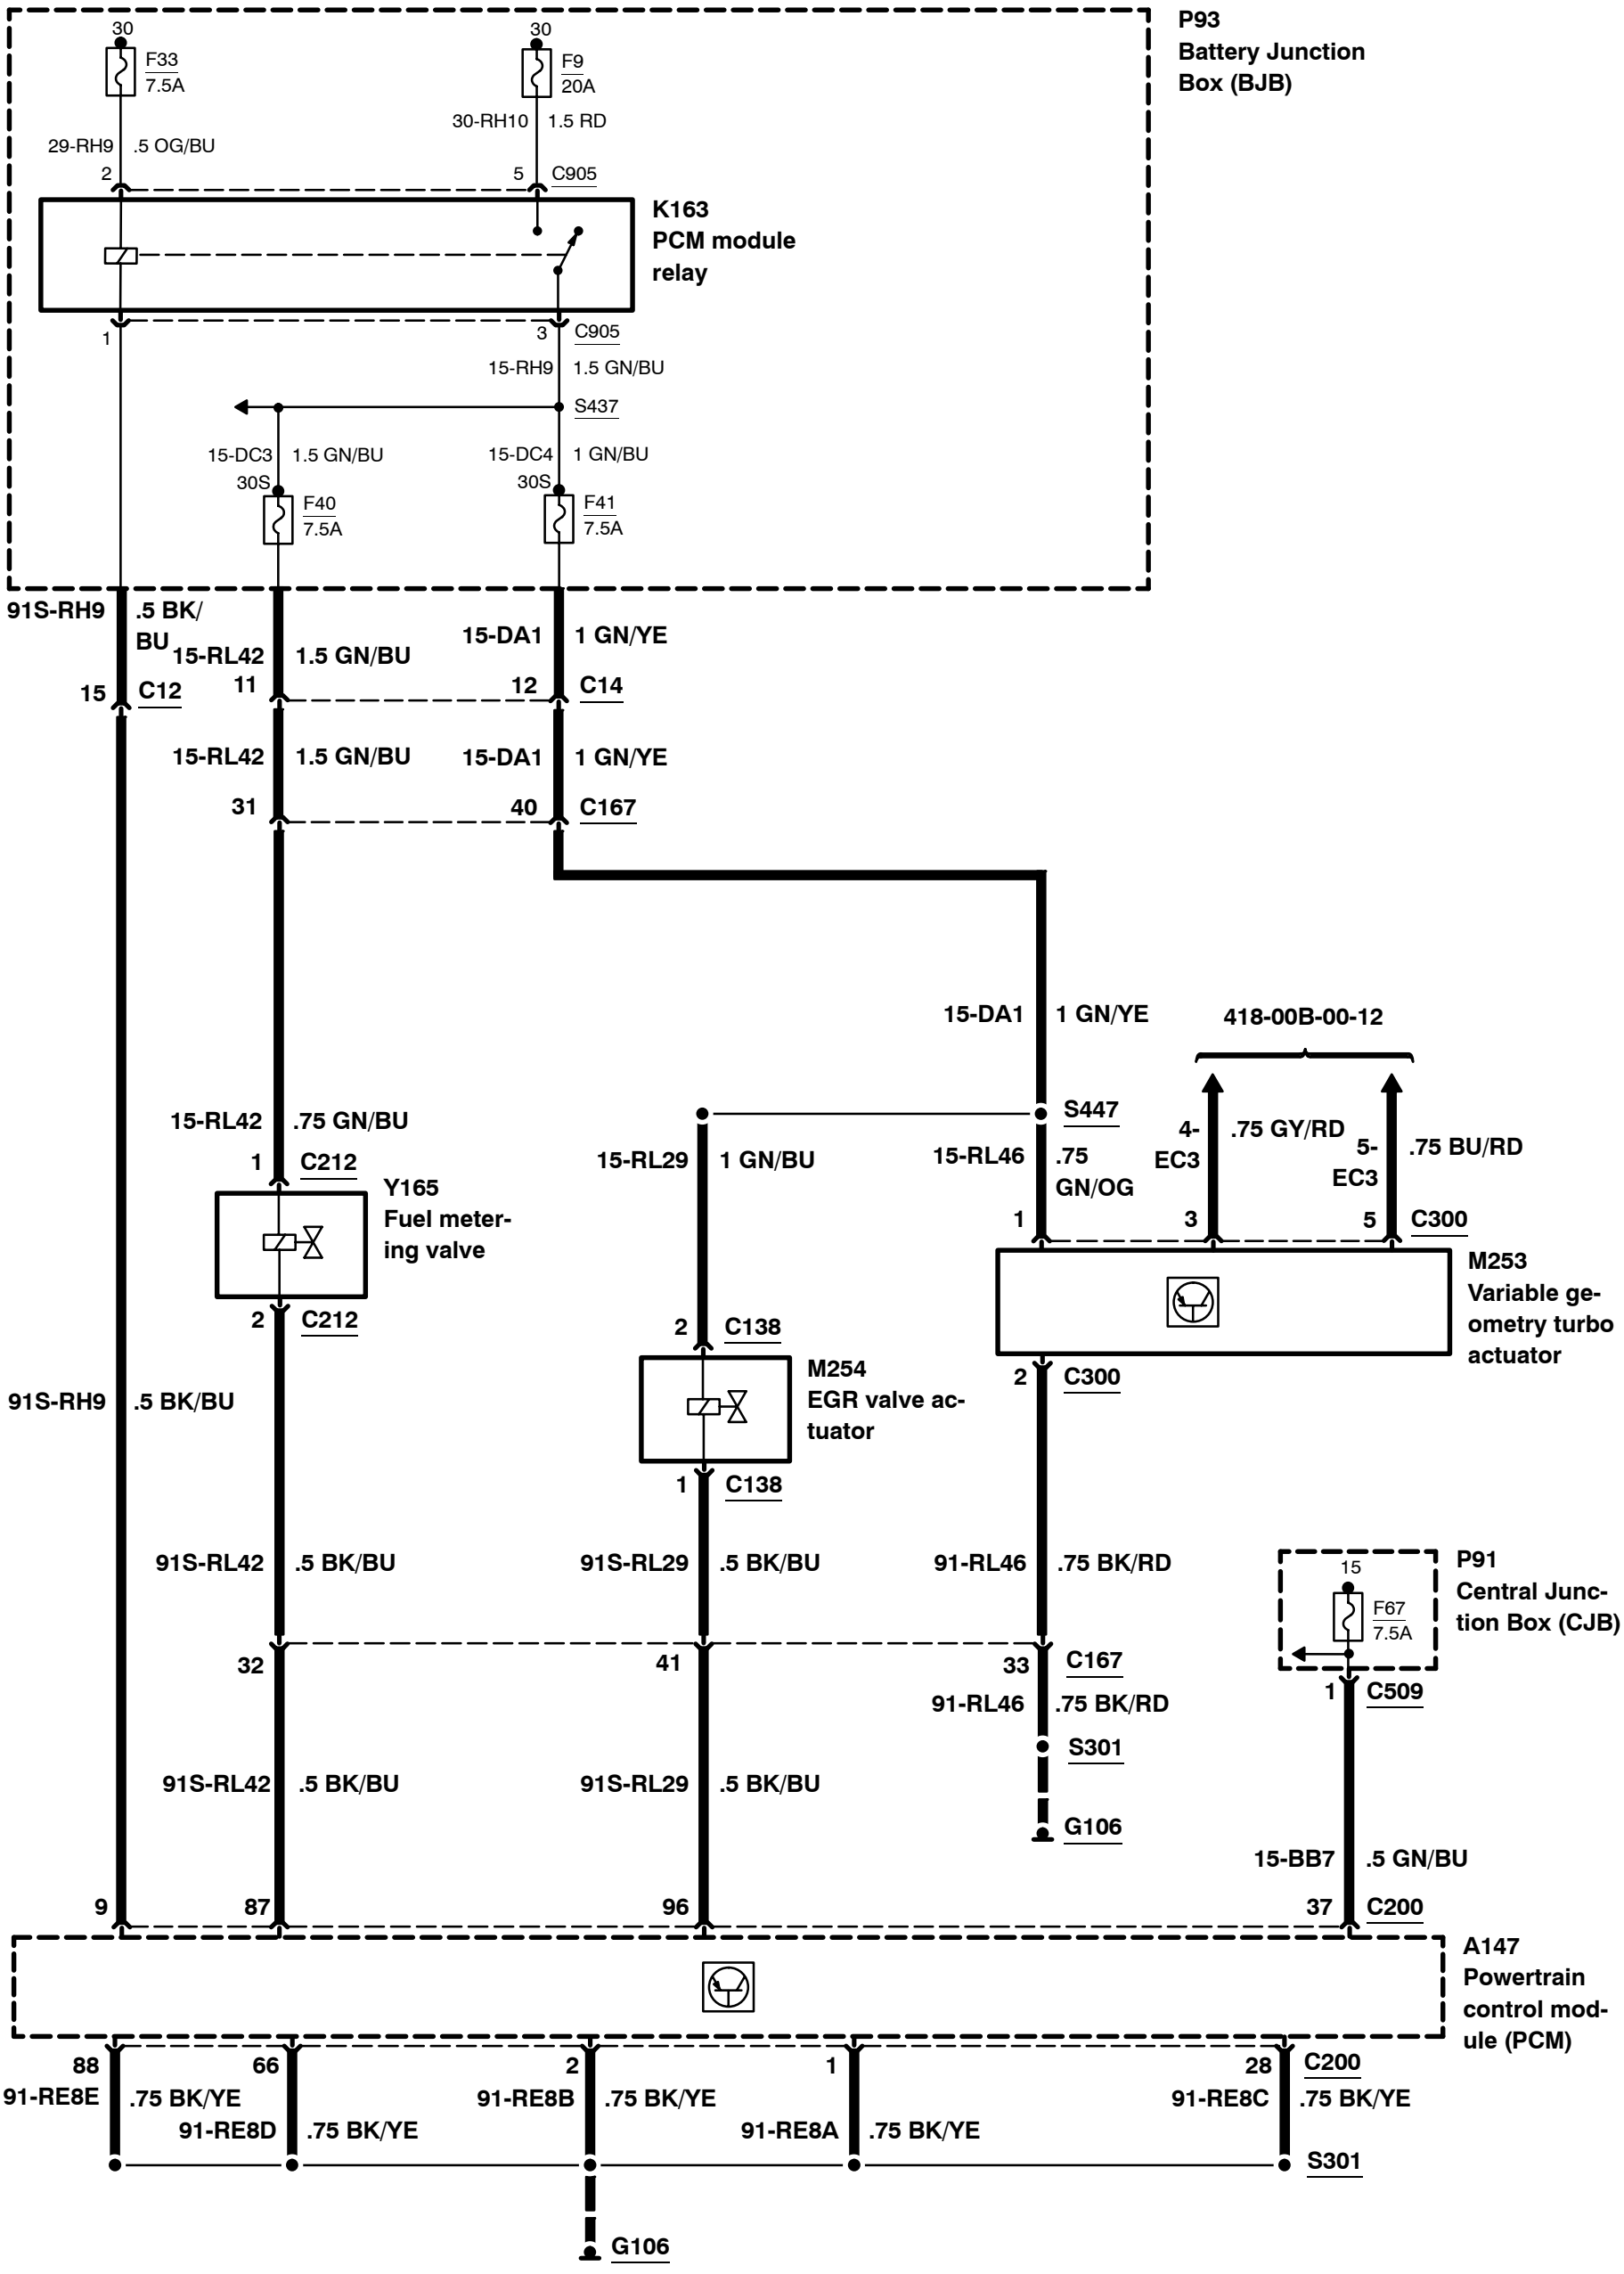


Electronic Engine Controls – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

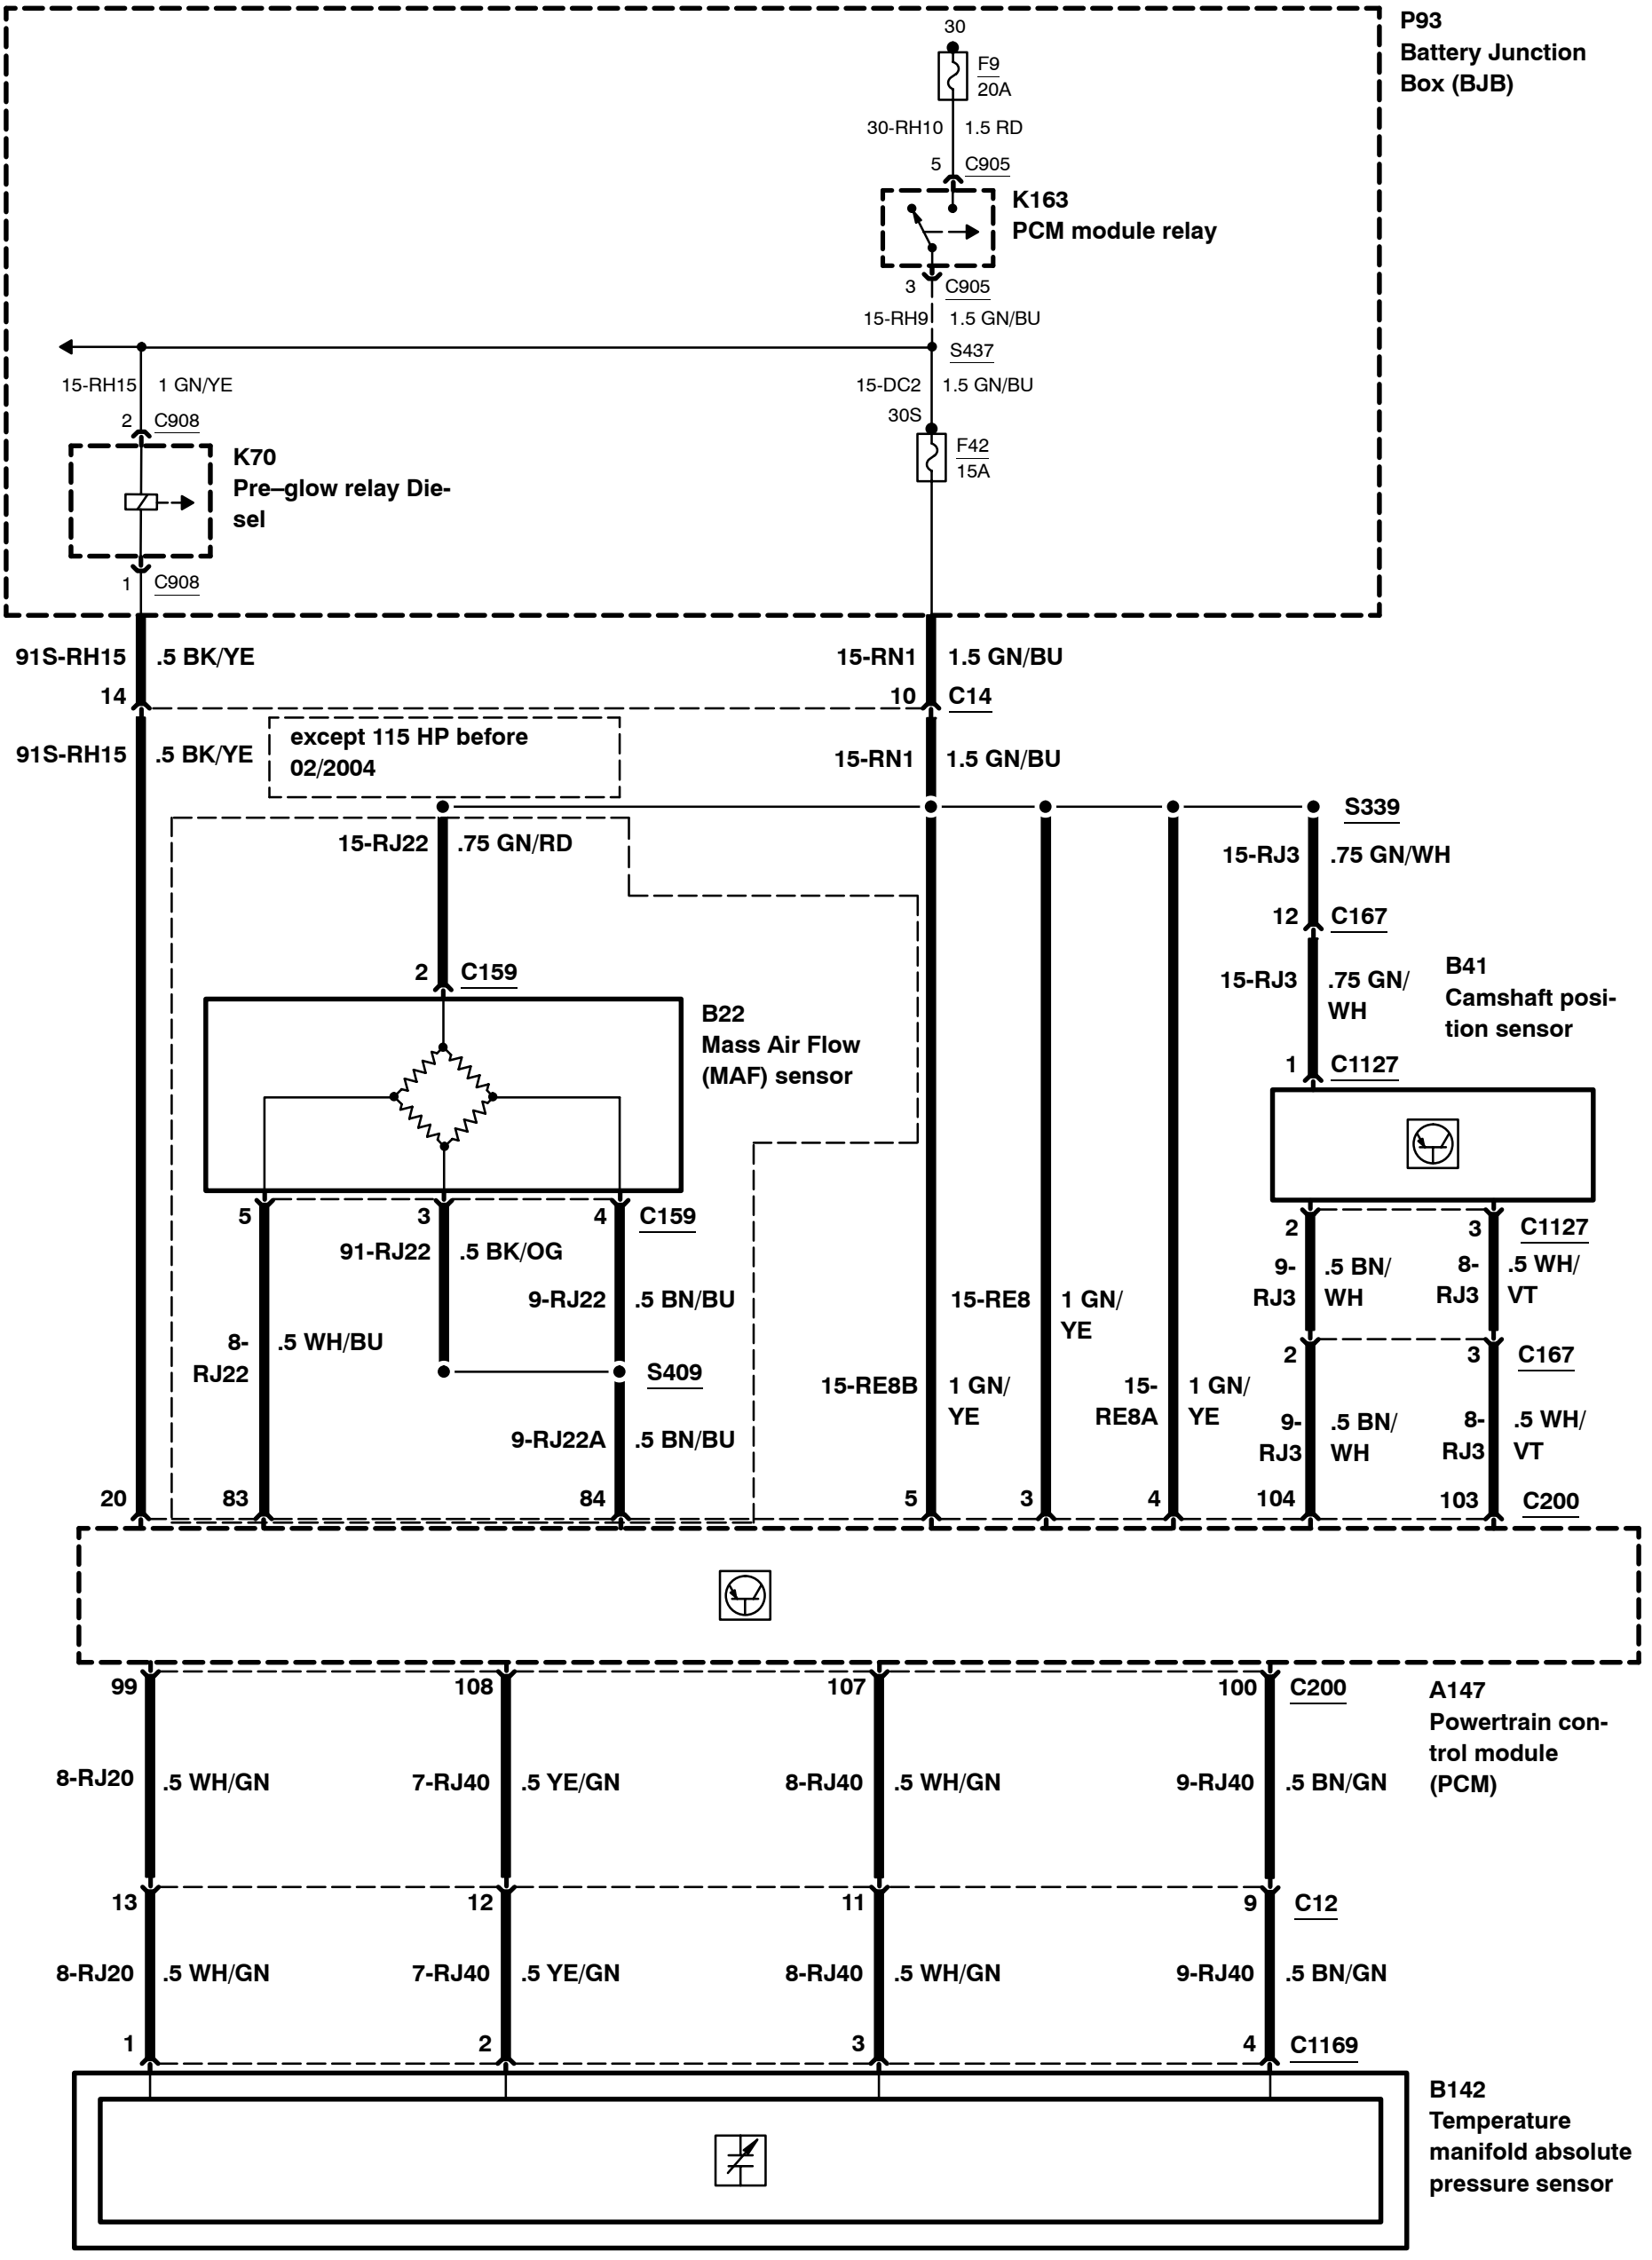


Electronic Engine Controls – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

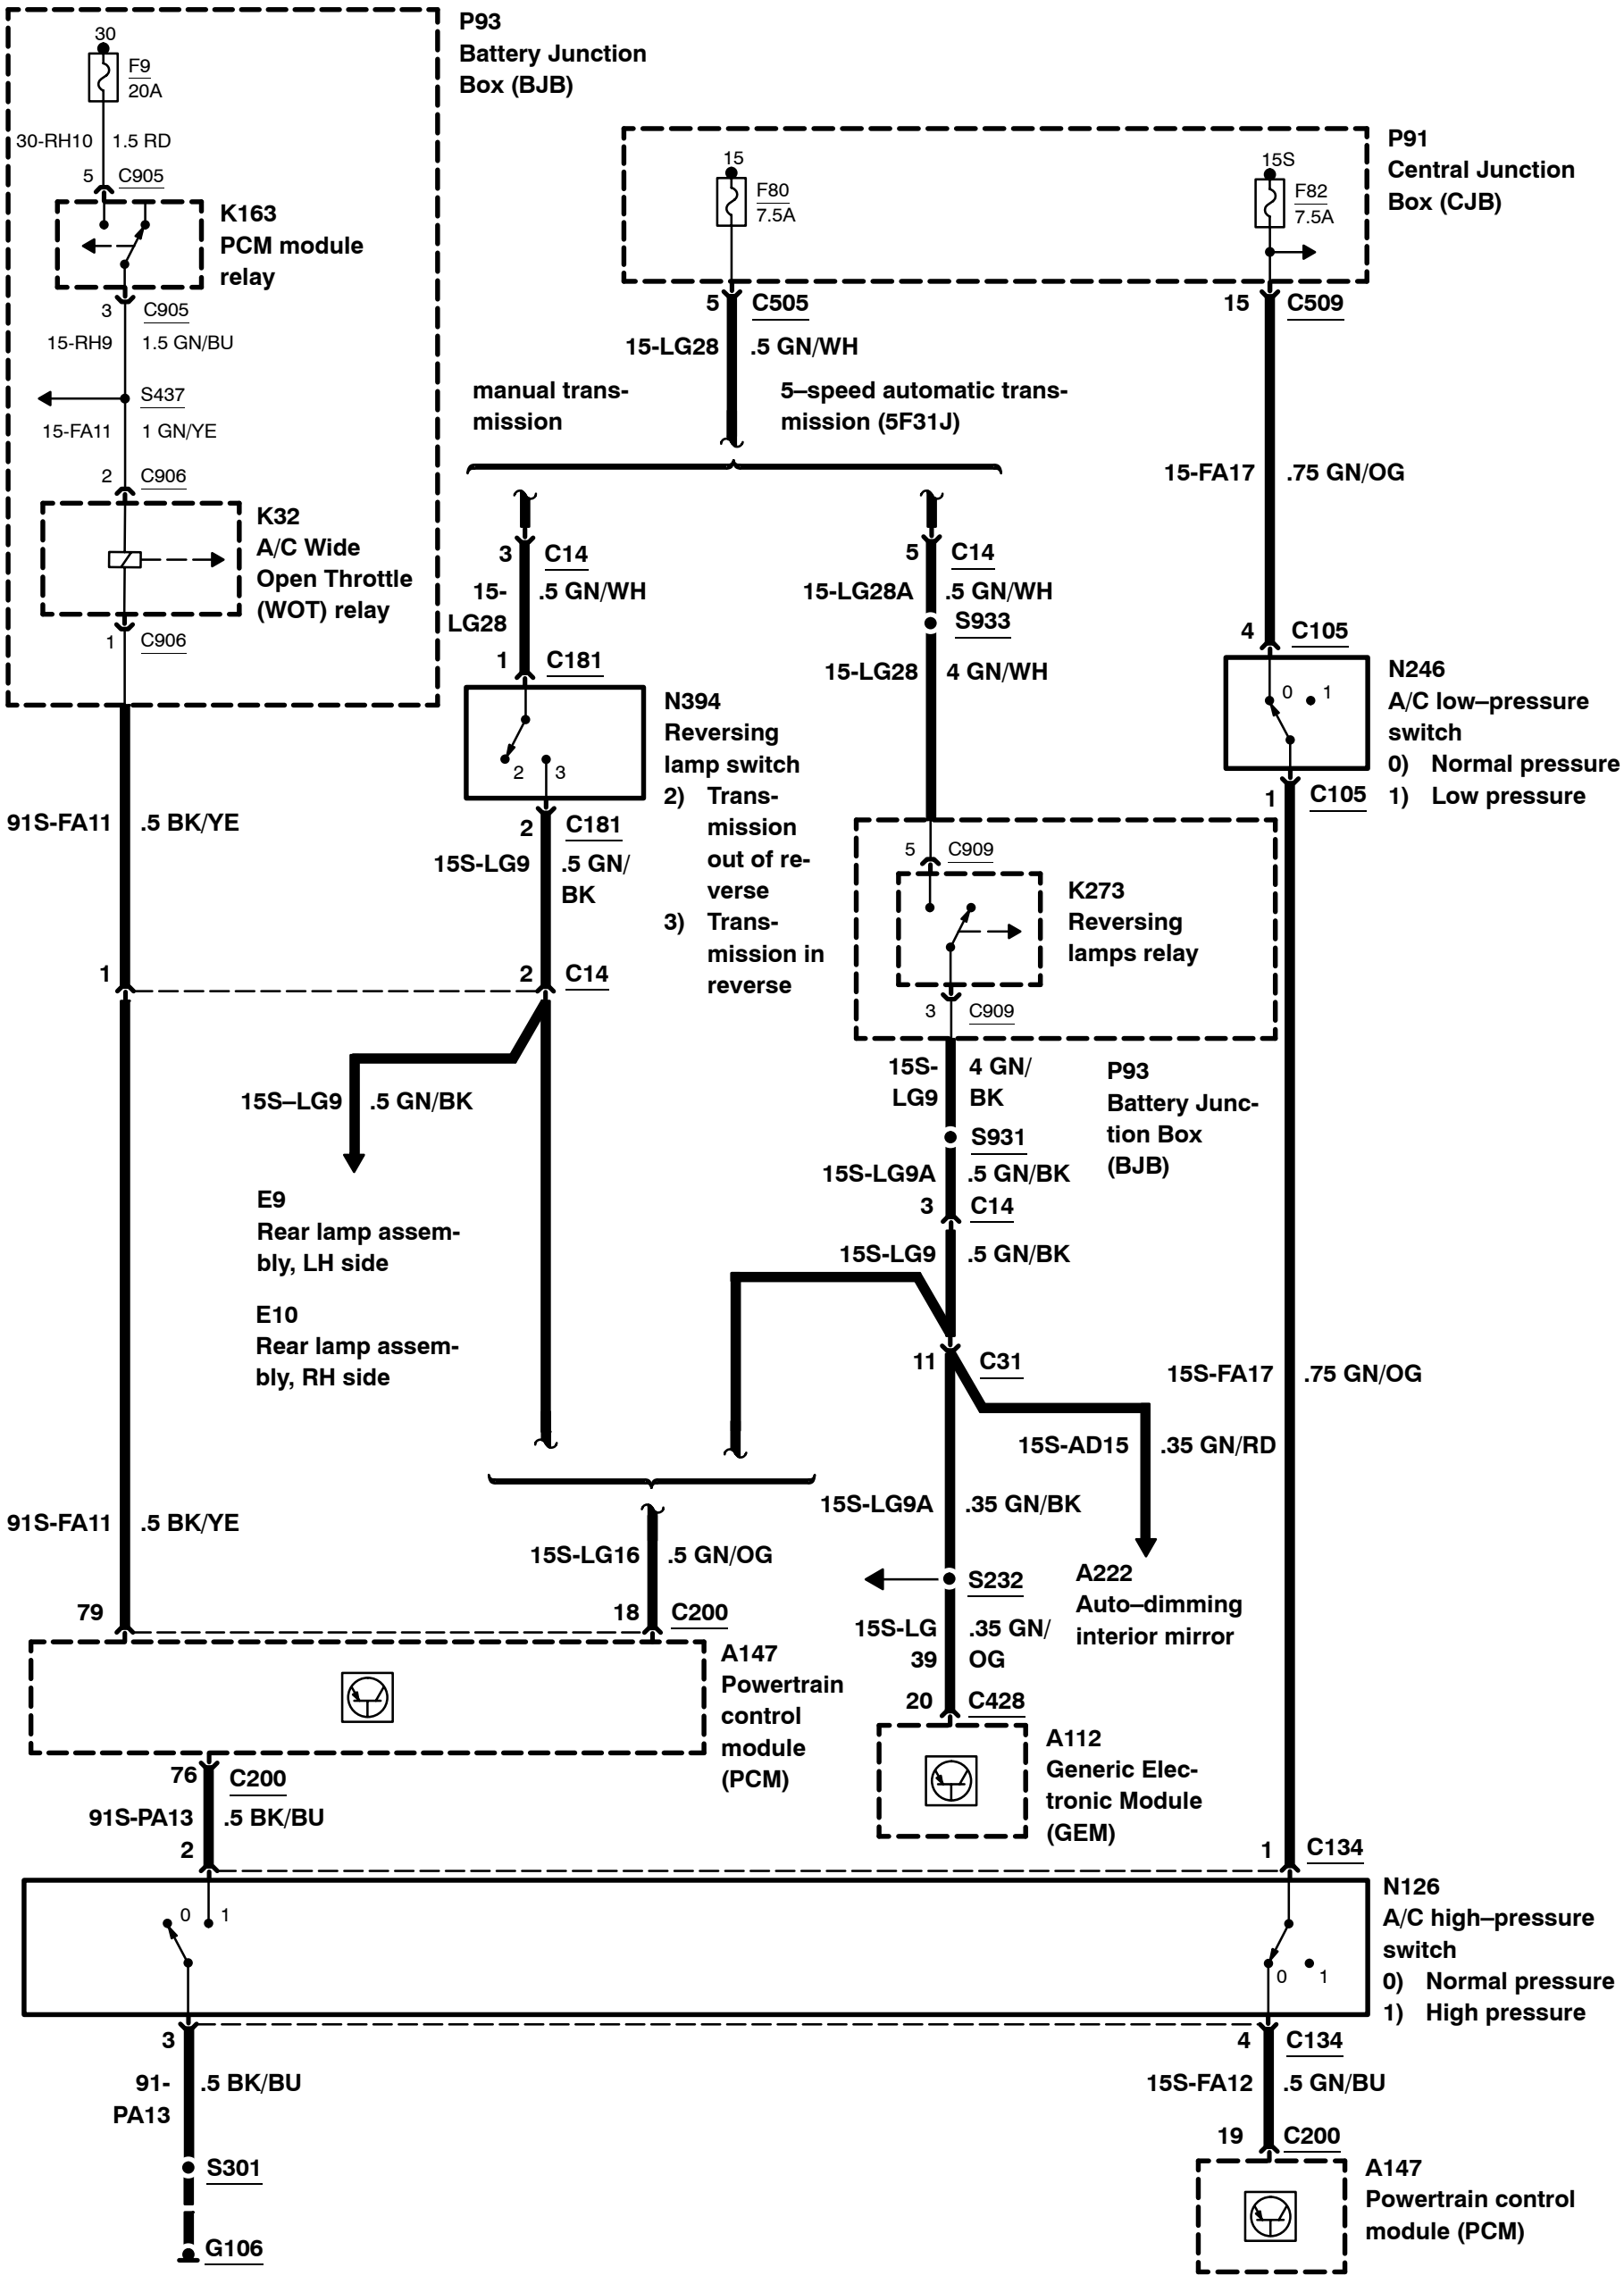


Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003

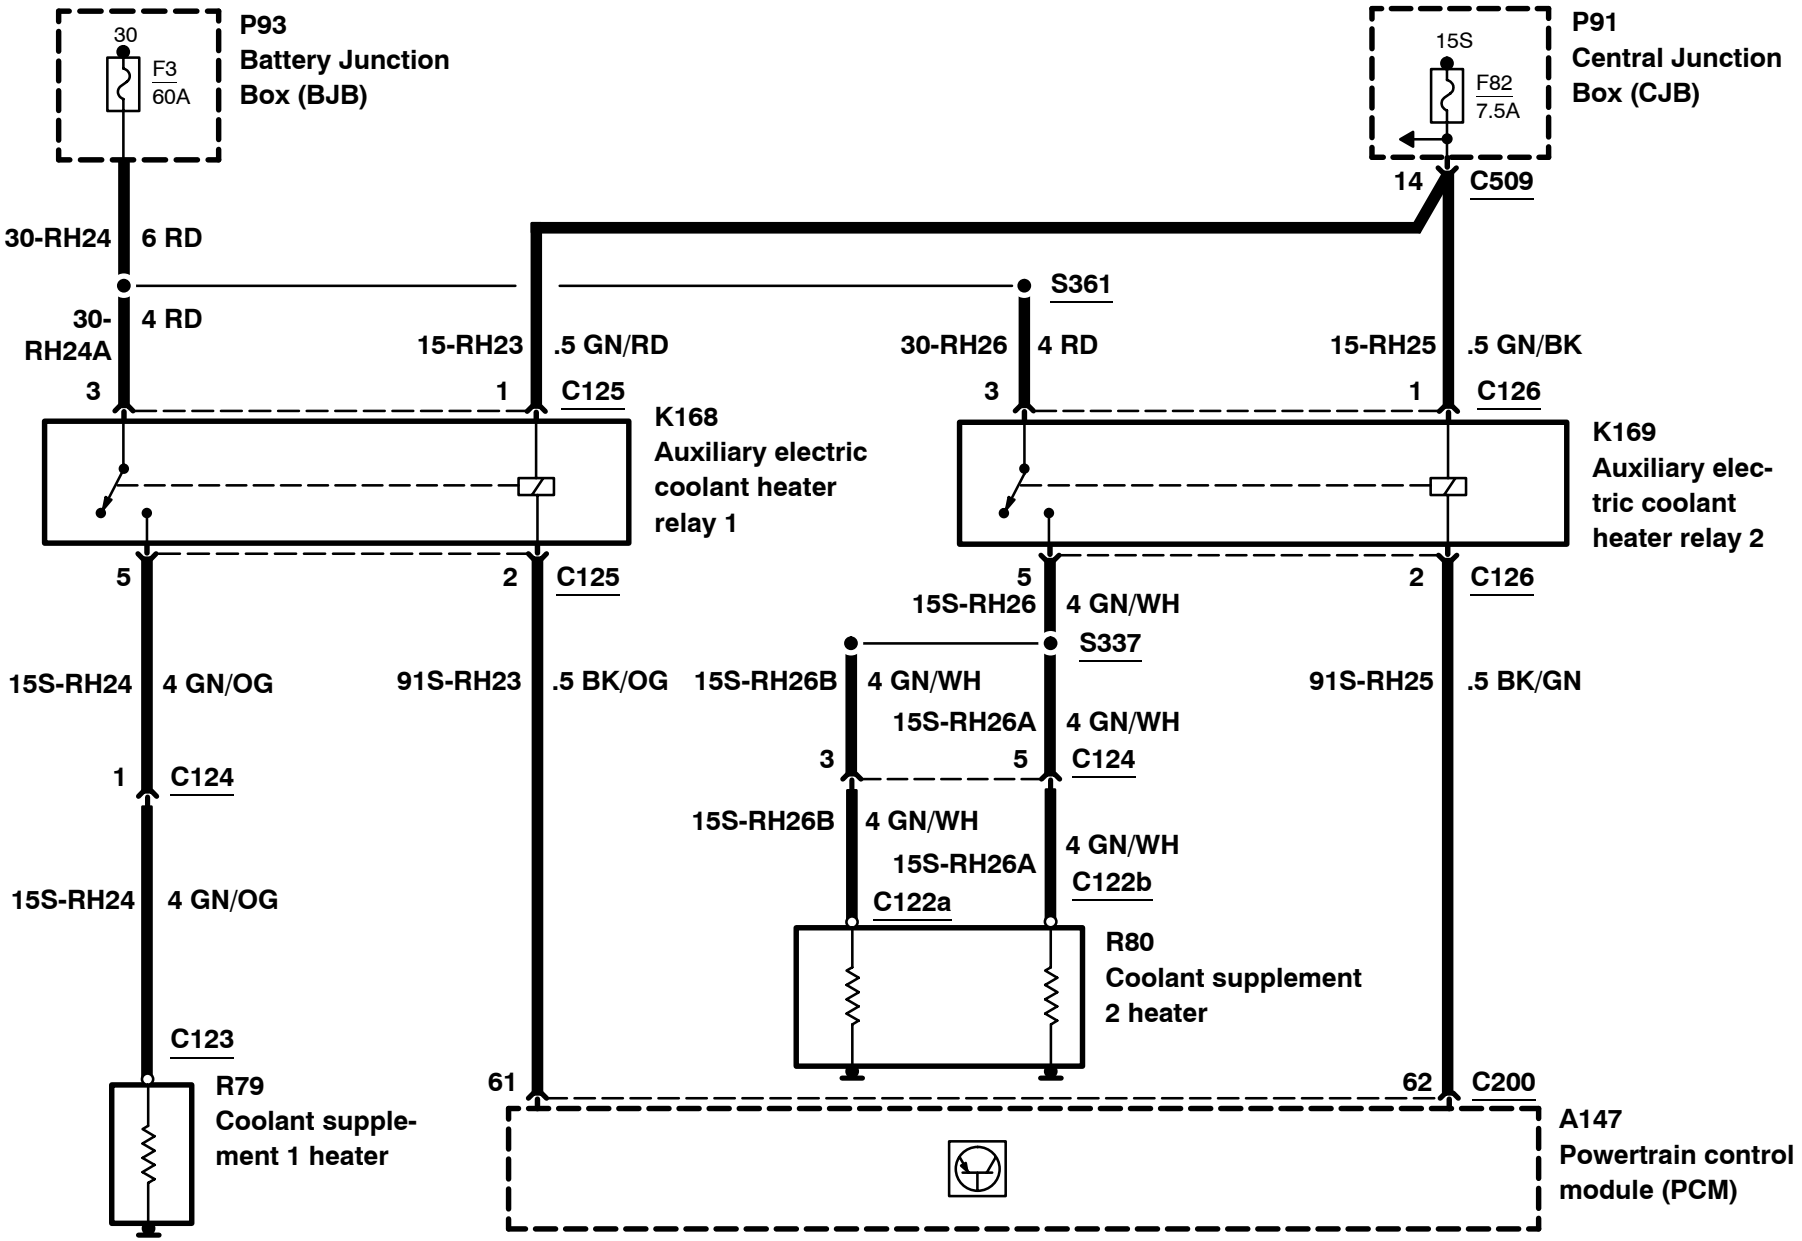


Electronic Engine Controls – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

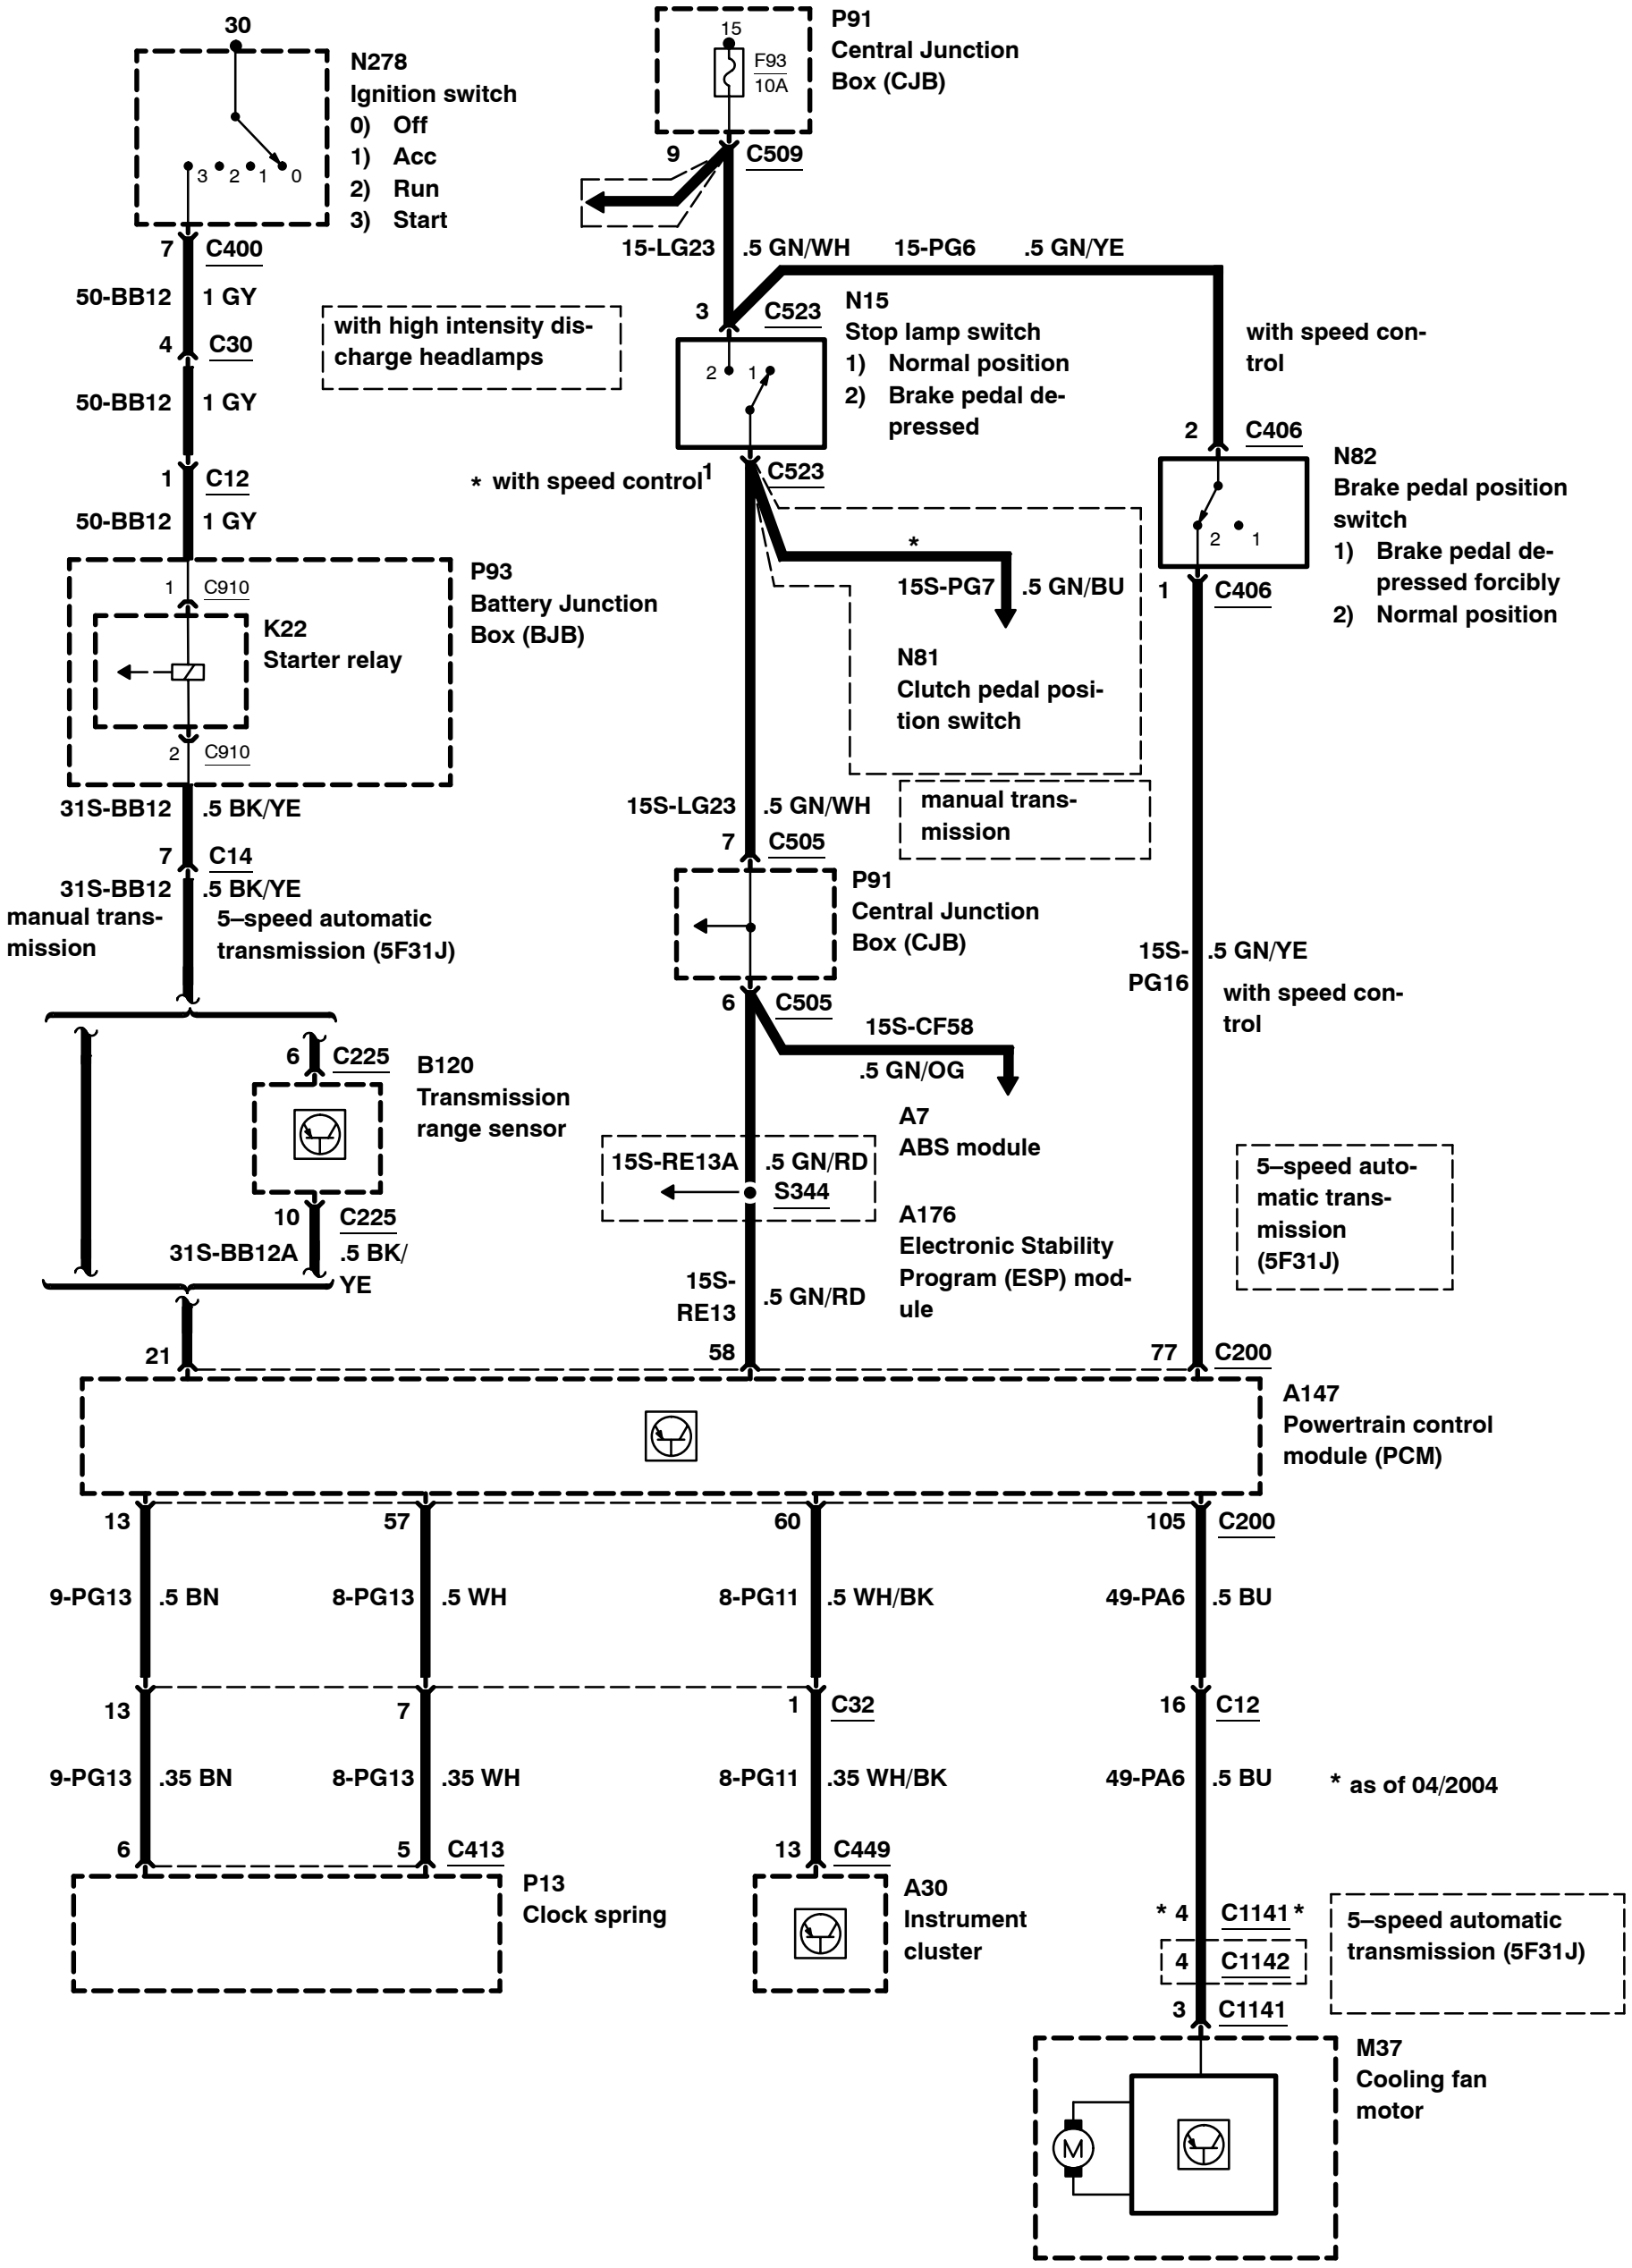


Electronic Engine Controls – 2.2L Duratorq–TDCi (Puma) Diesel

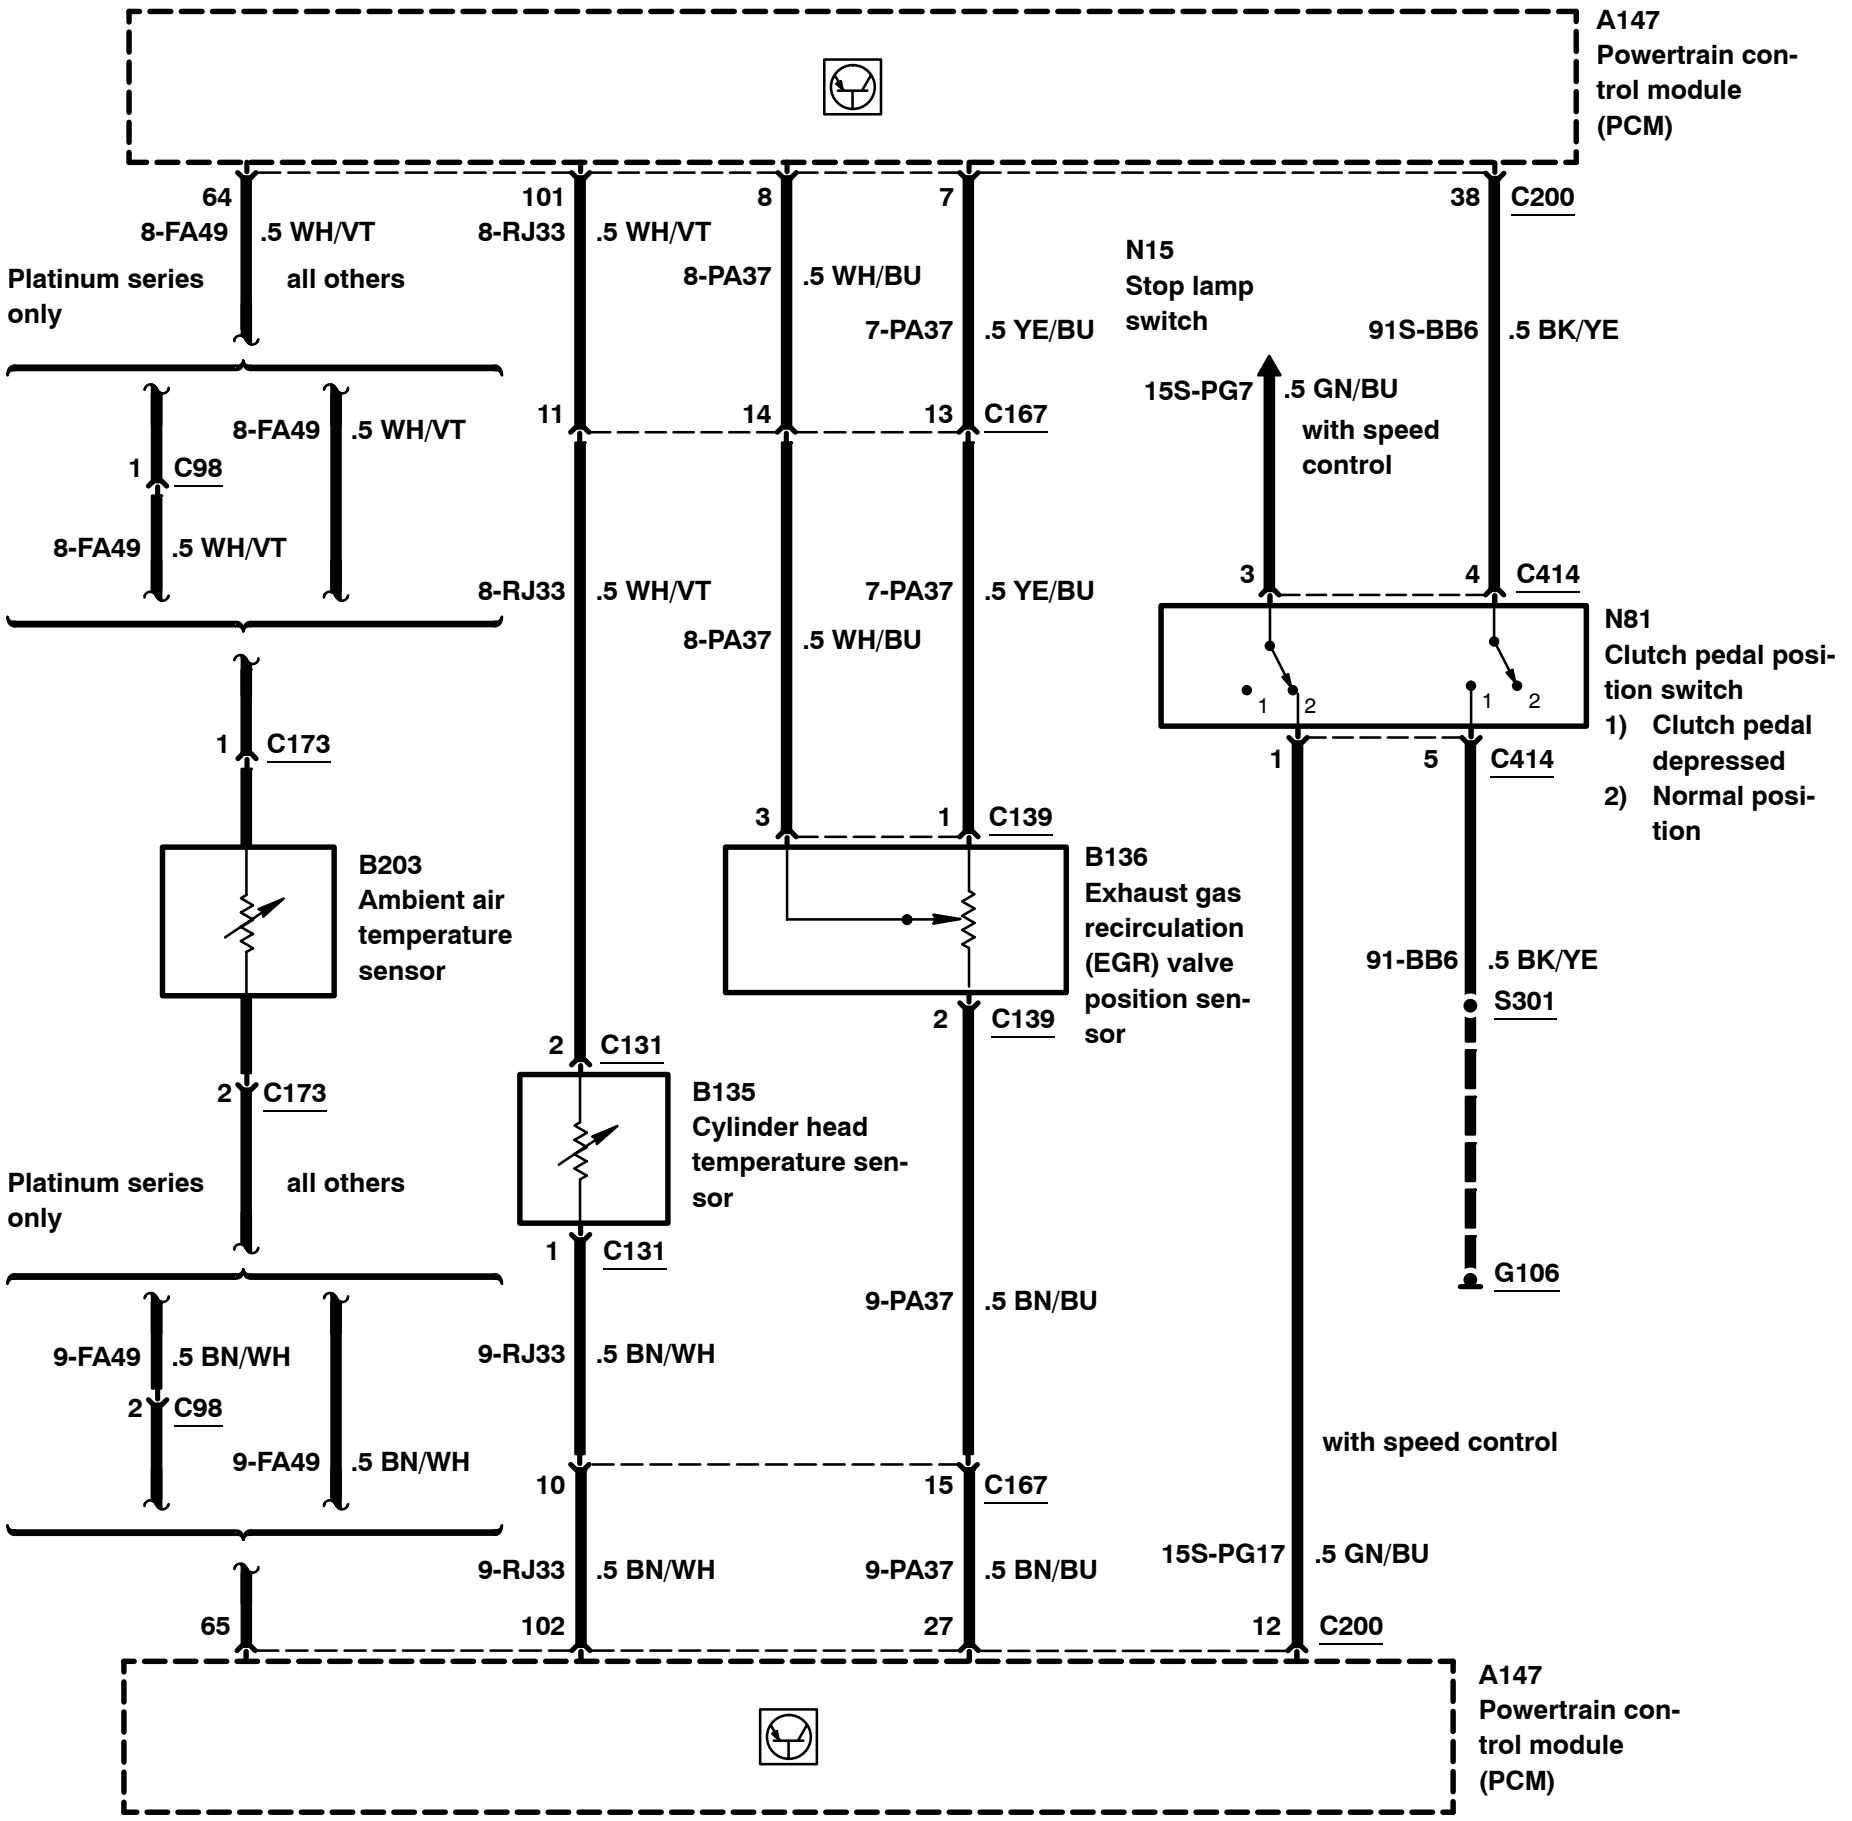


Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel

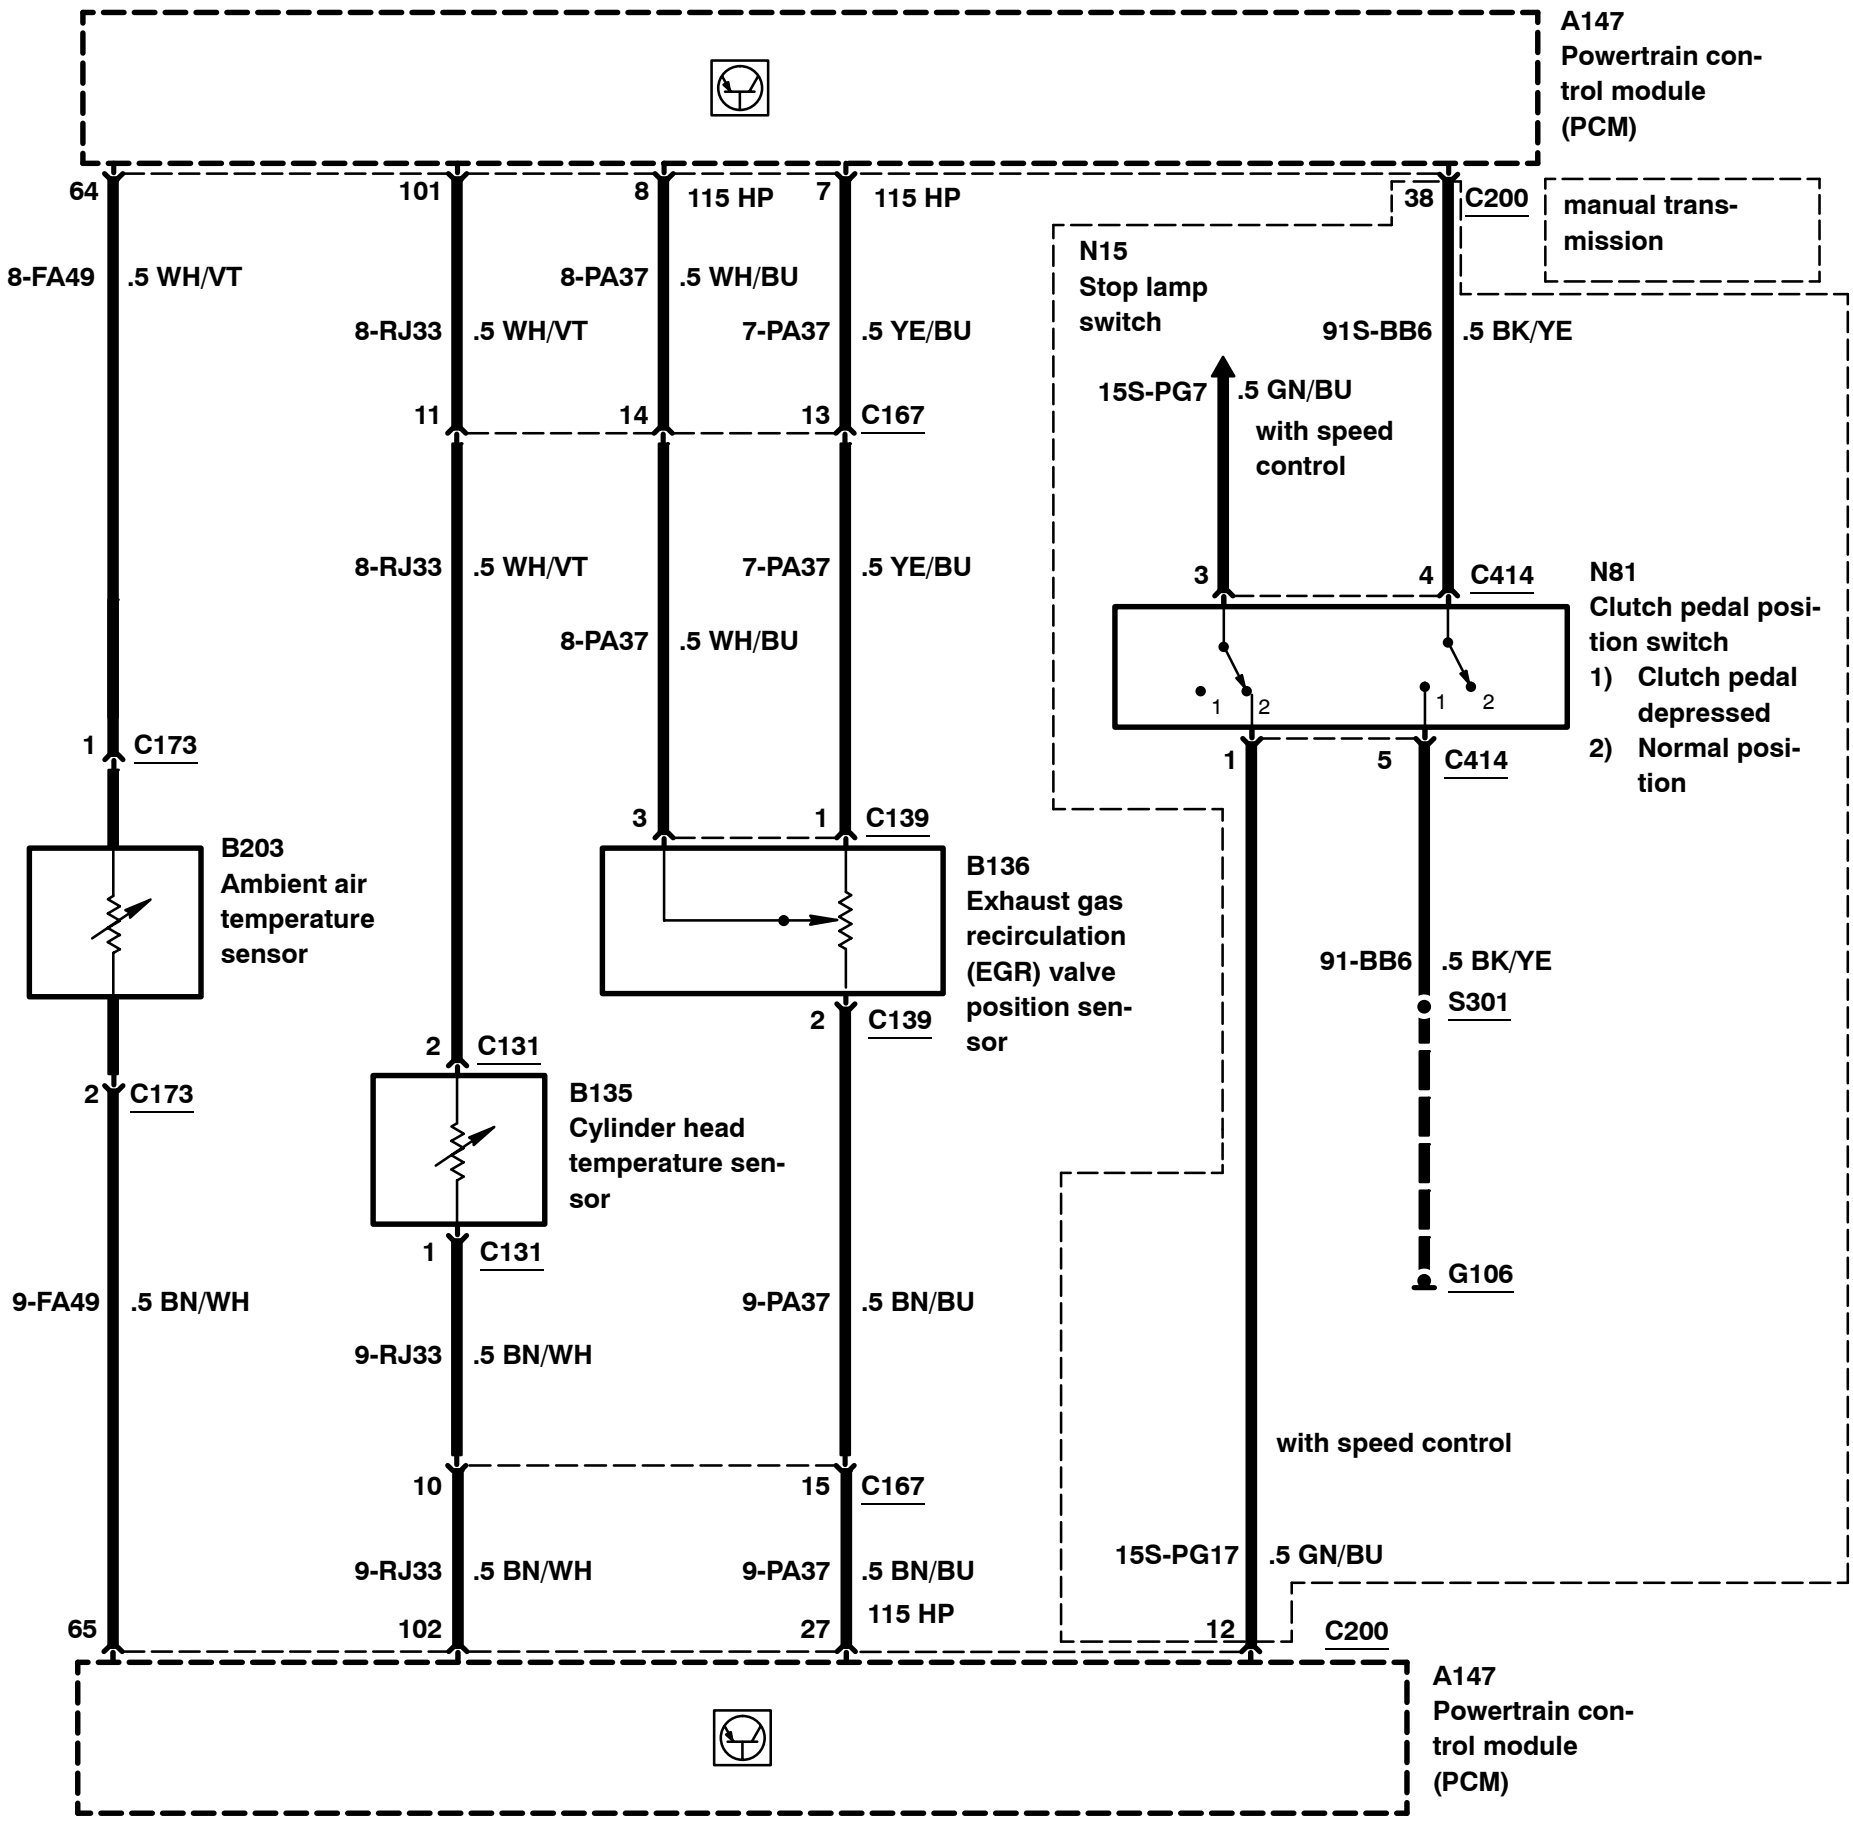


Electronic Engine Controls – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

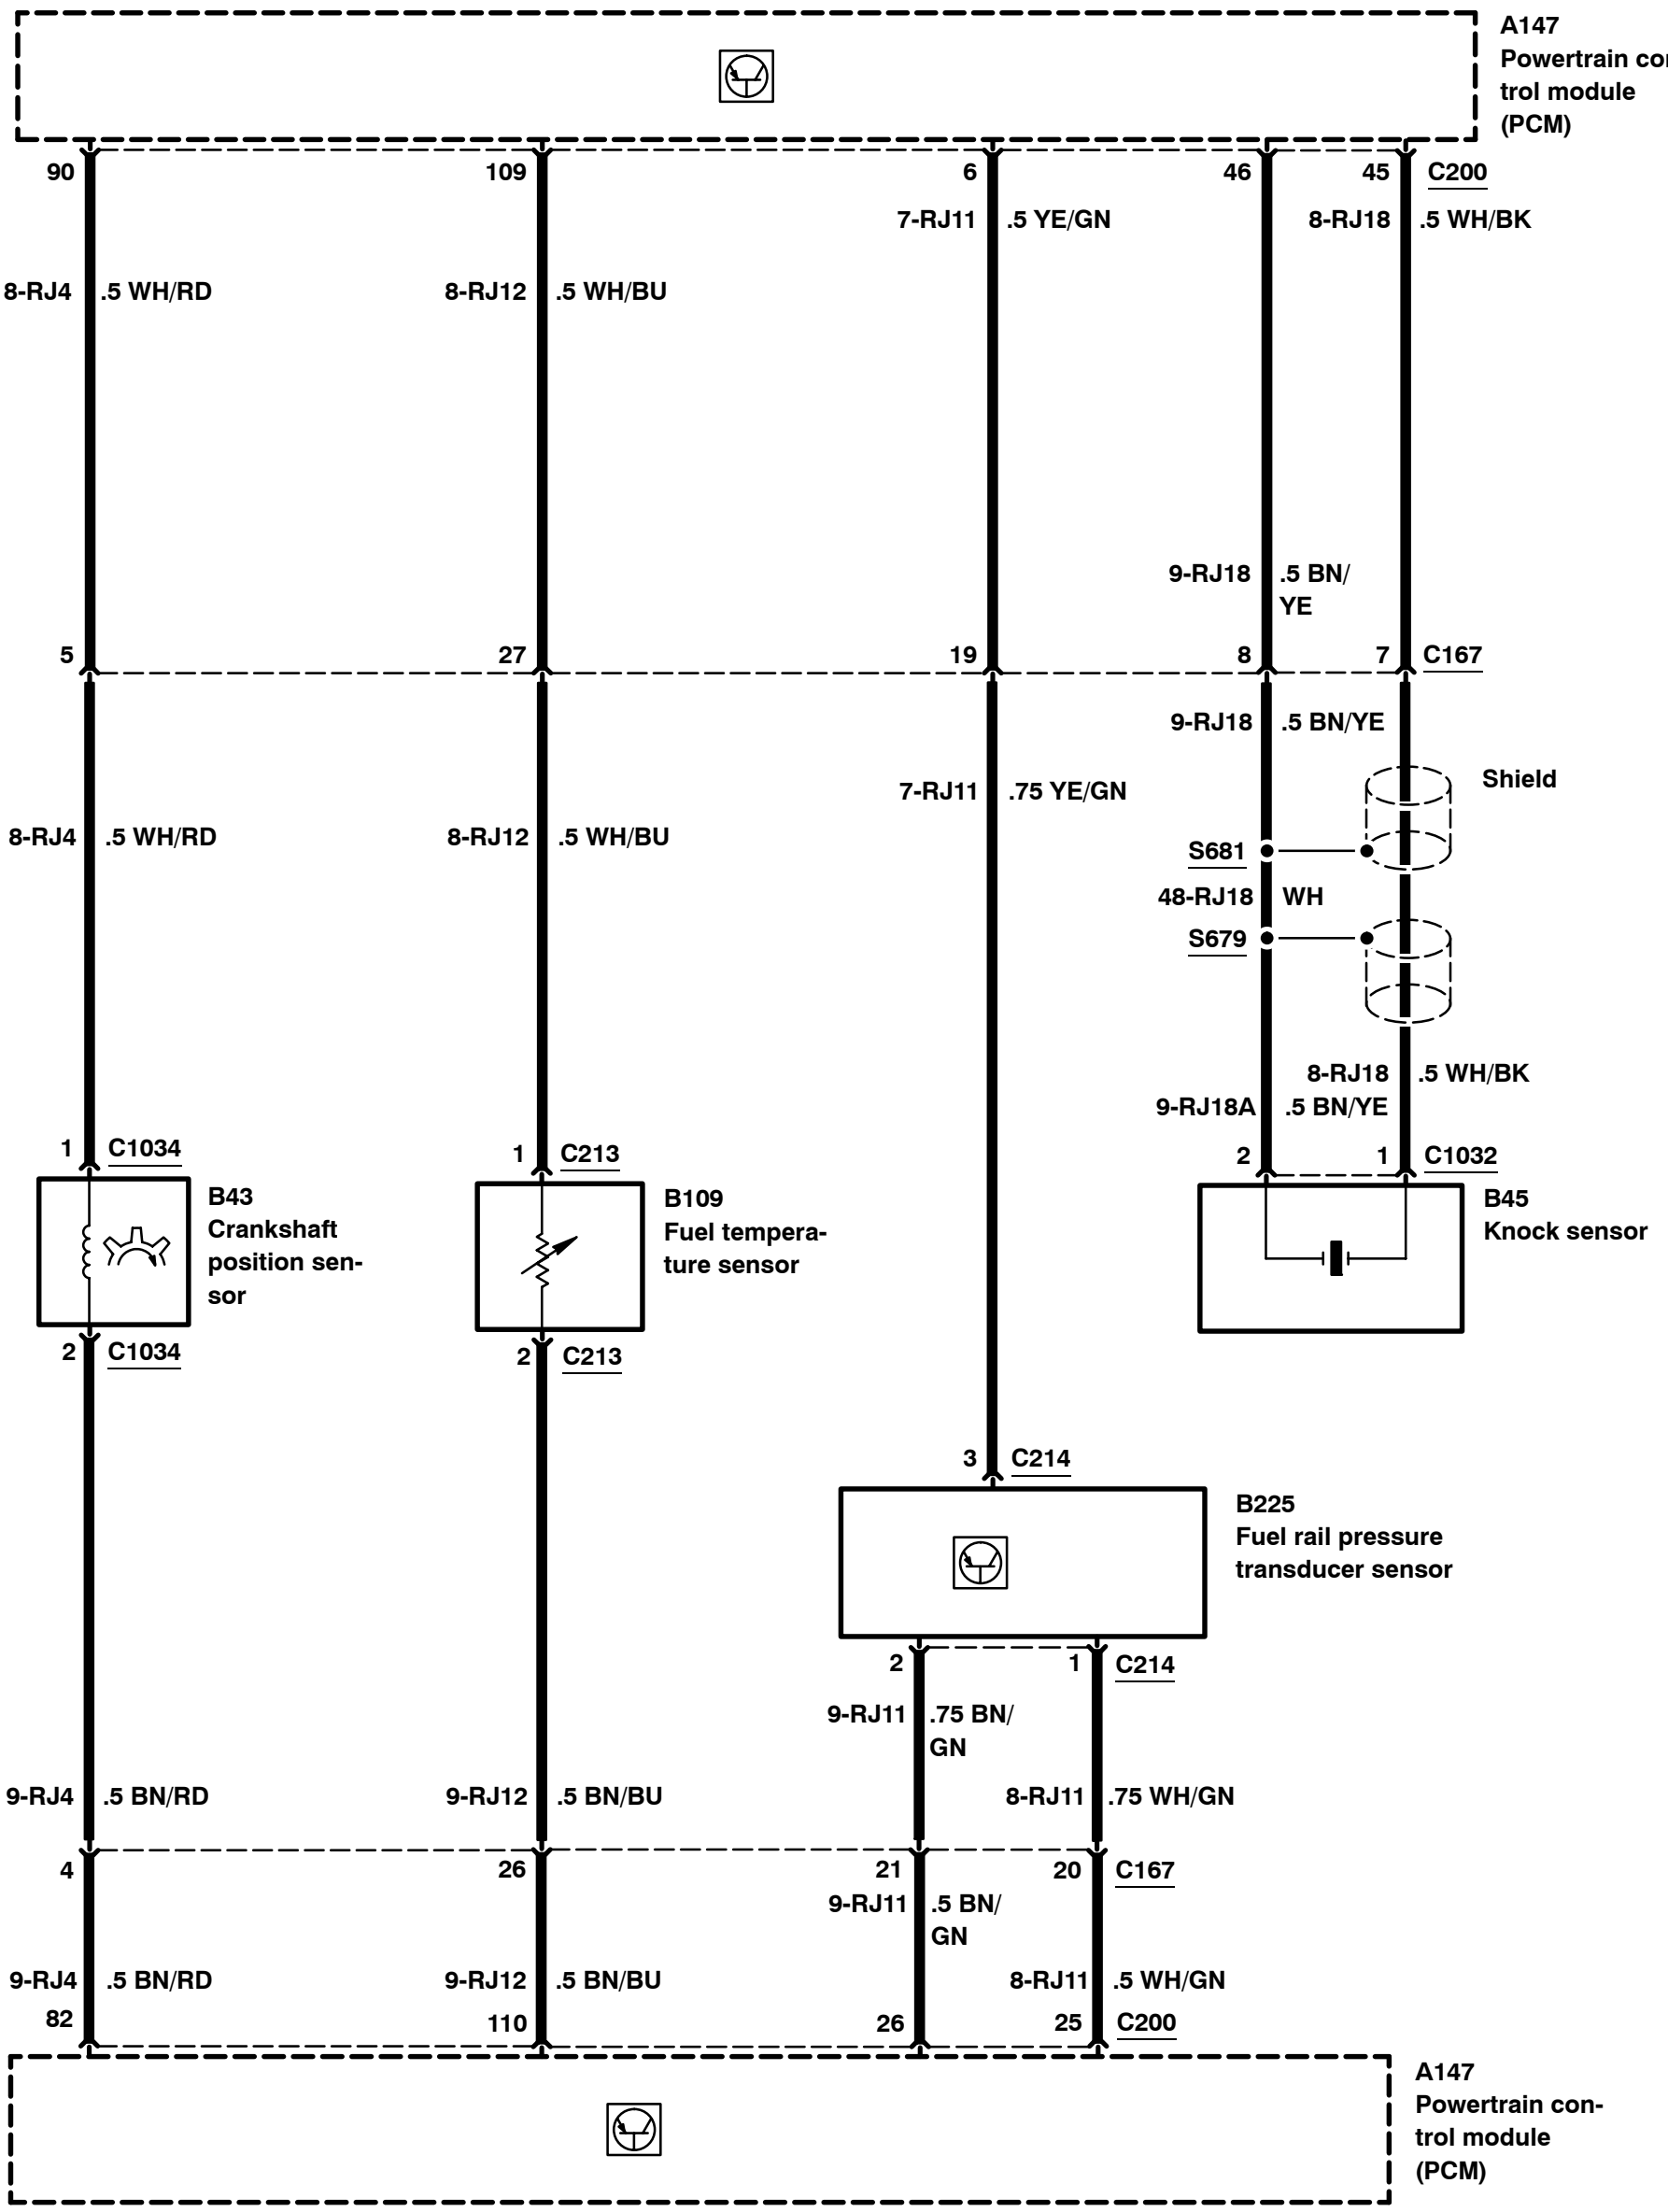


Electronic Engine Controls – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

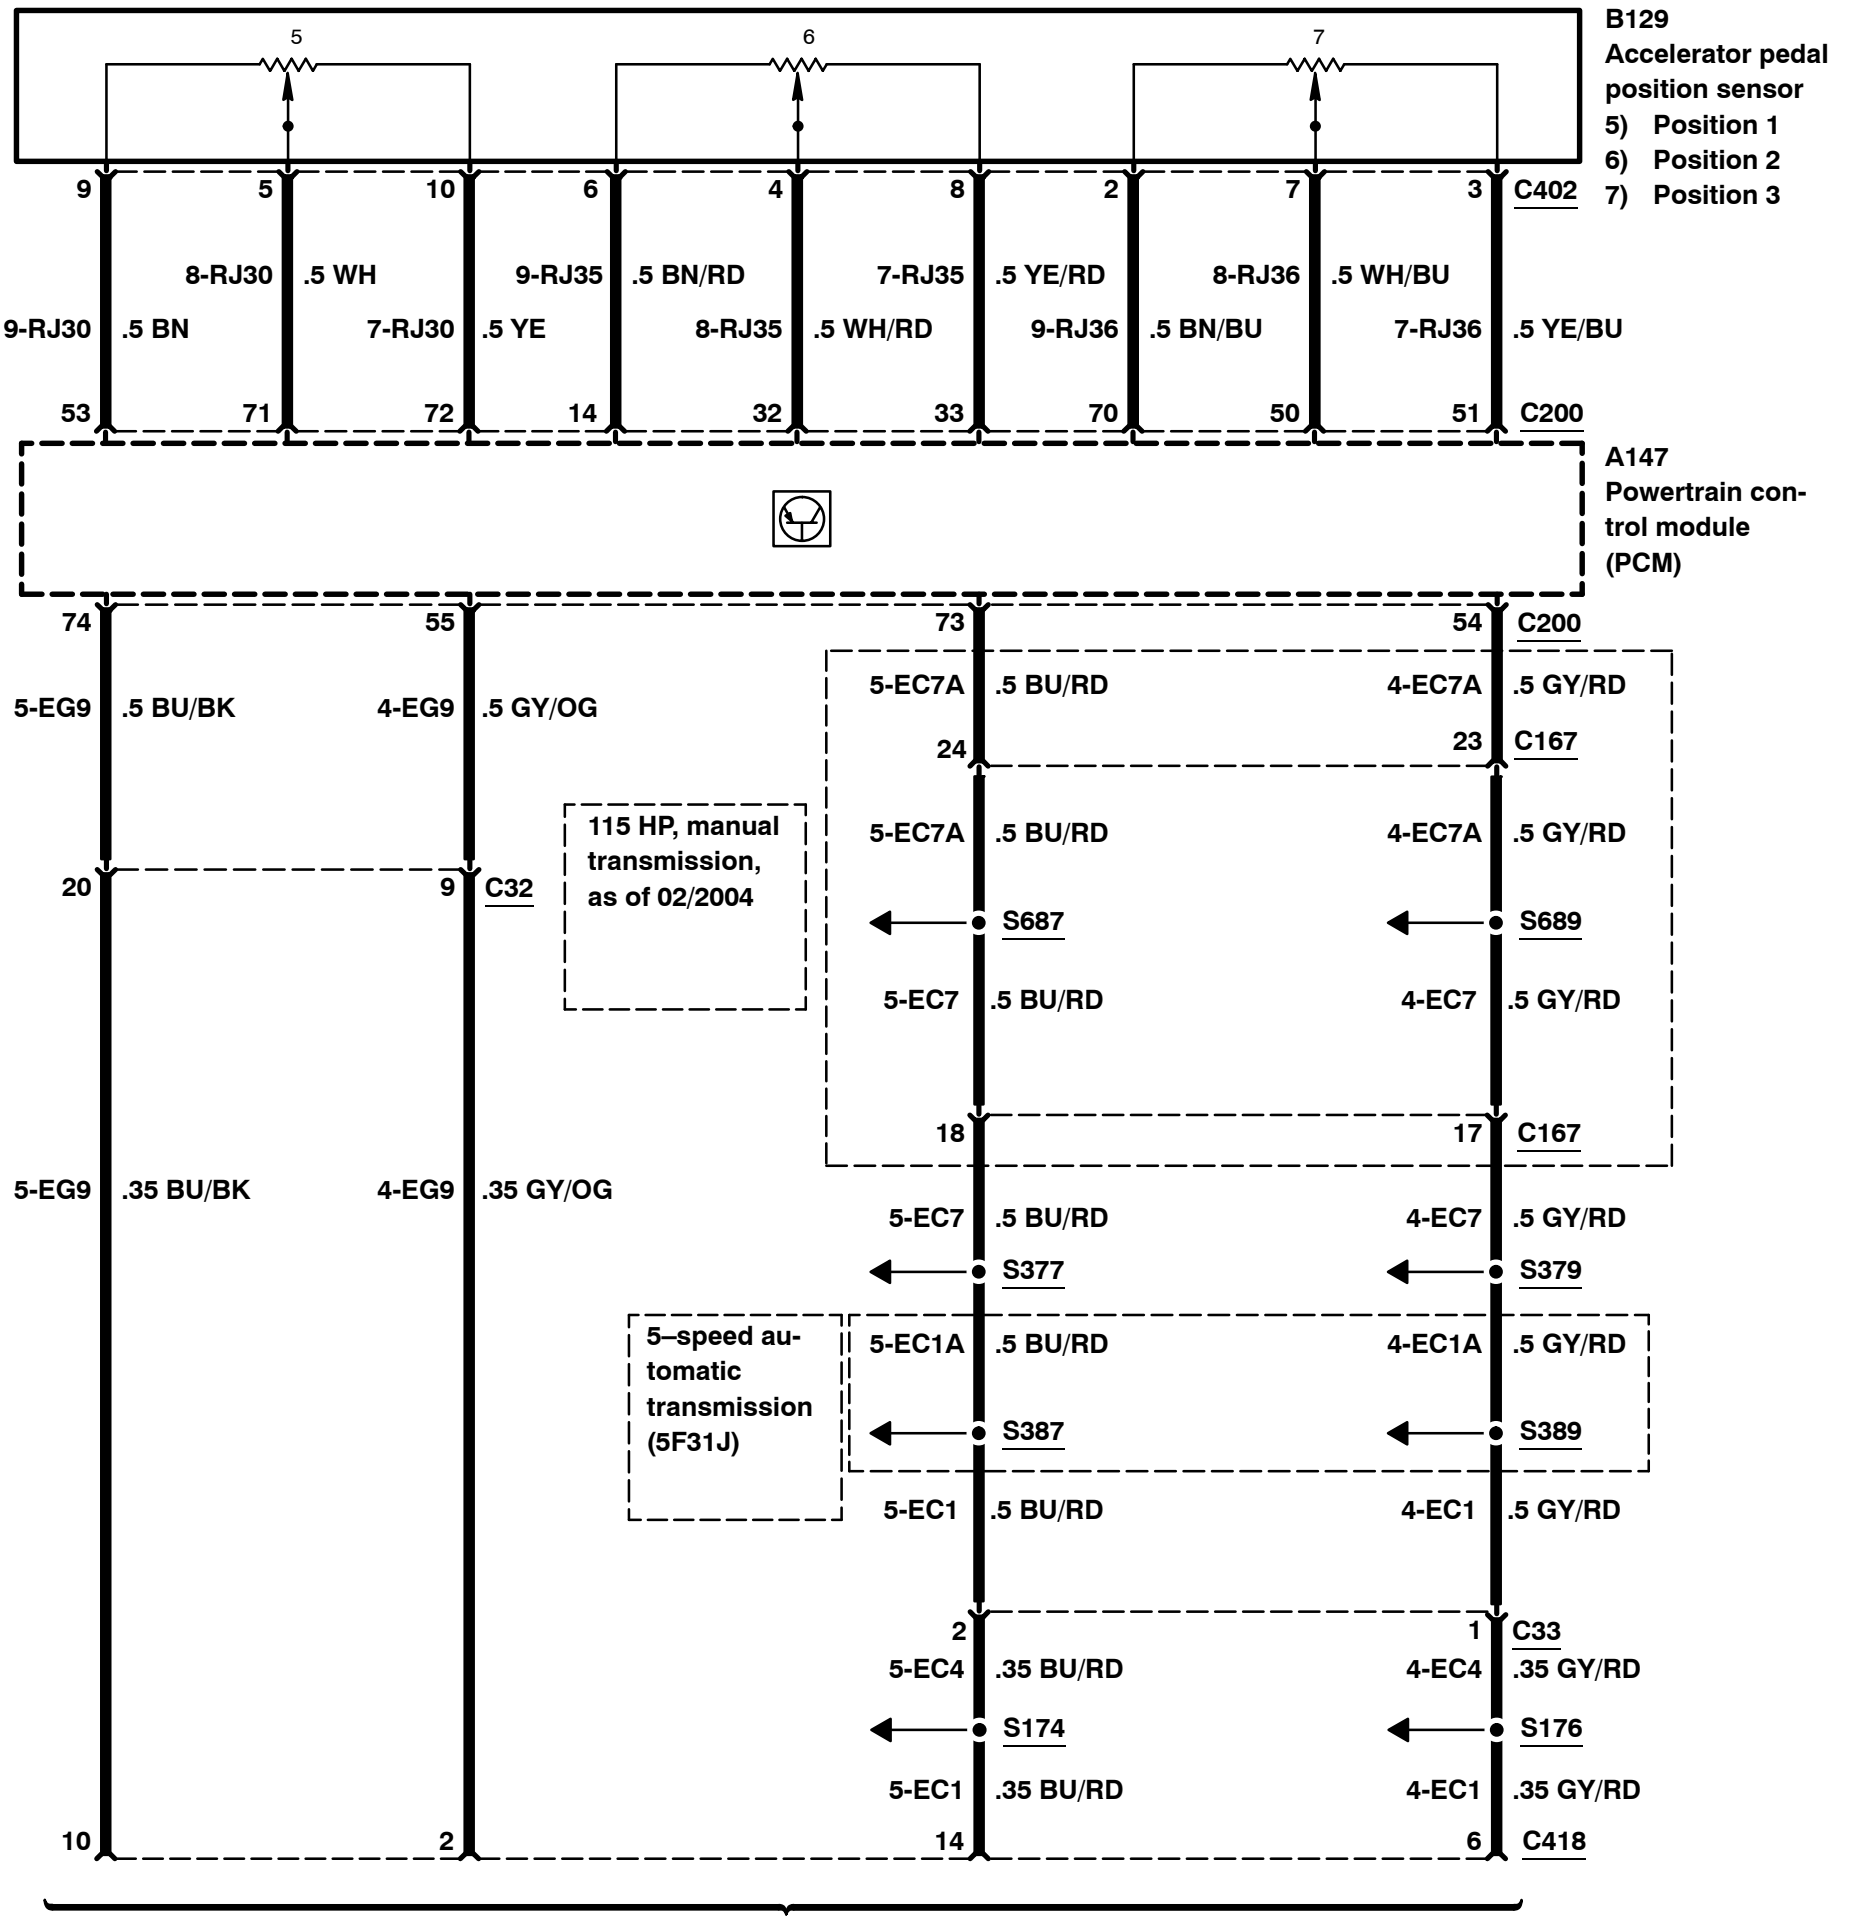


Electronic Engine Controls – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

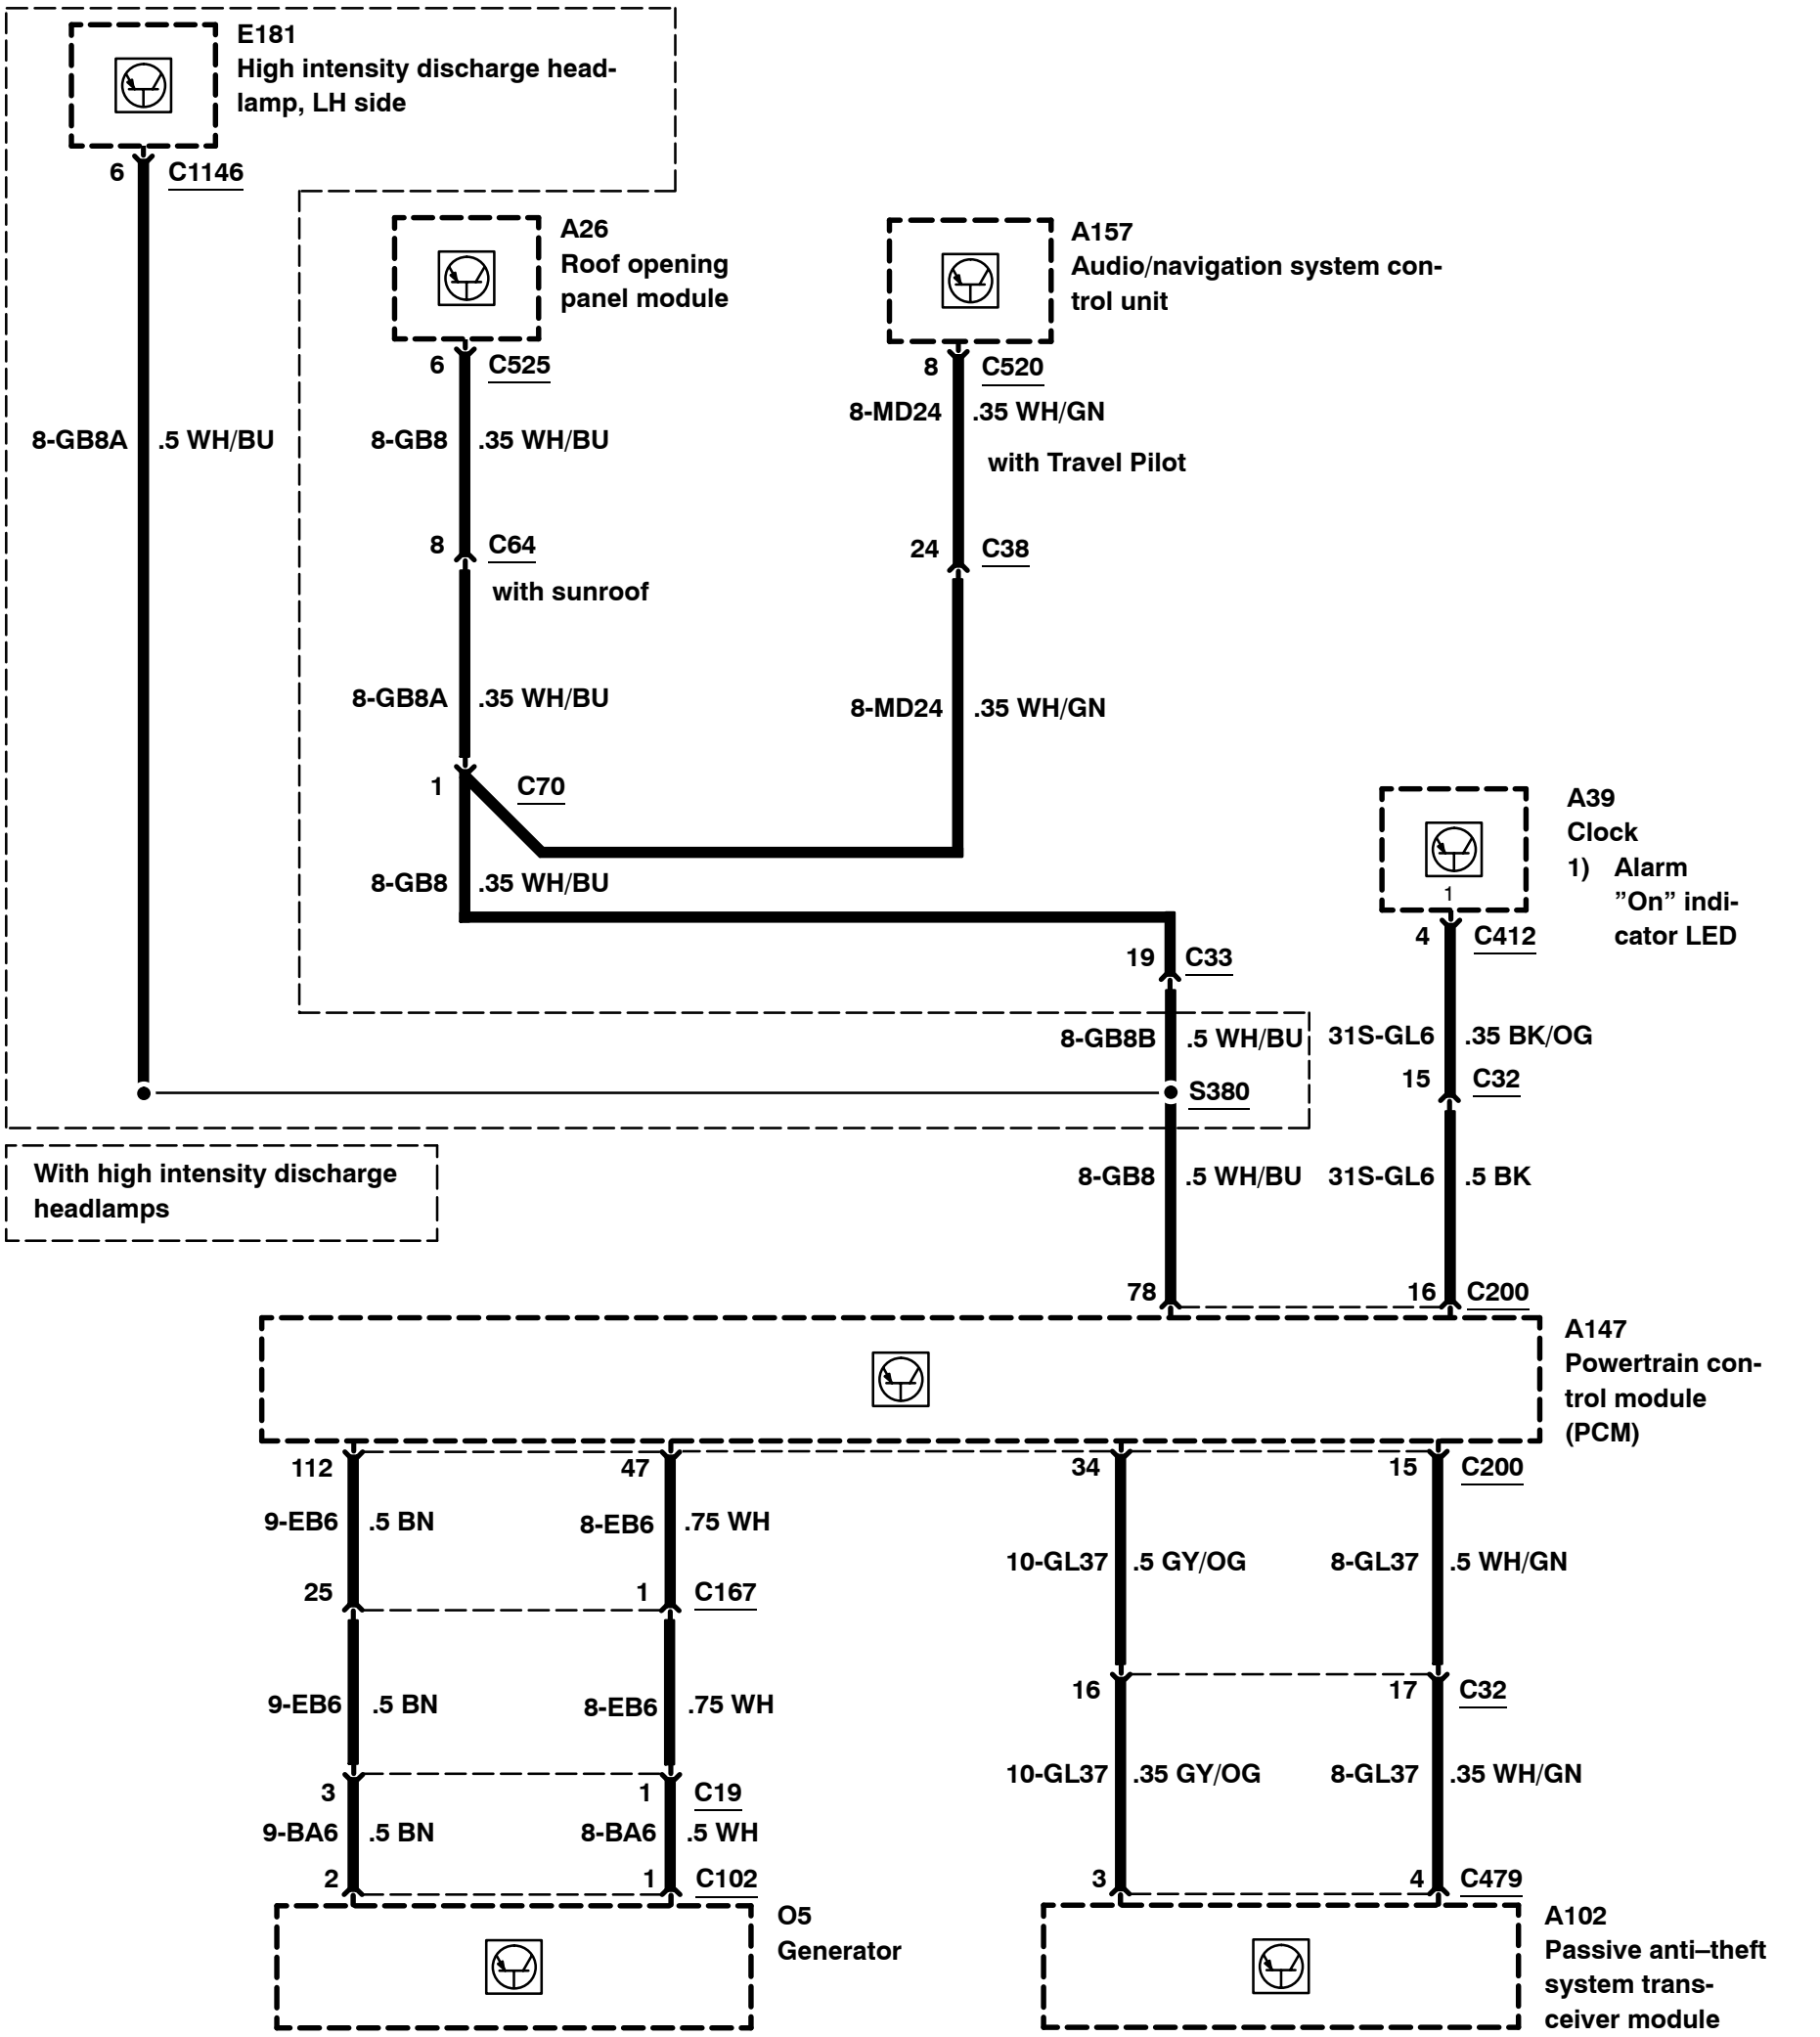


Automatic Transmission – 4–speed automatic transmission (CD4E)

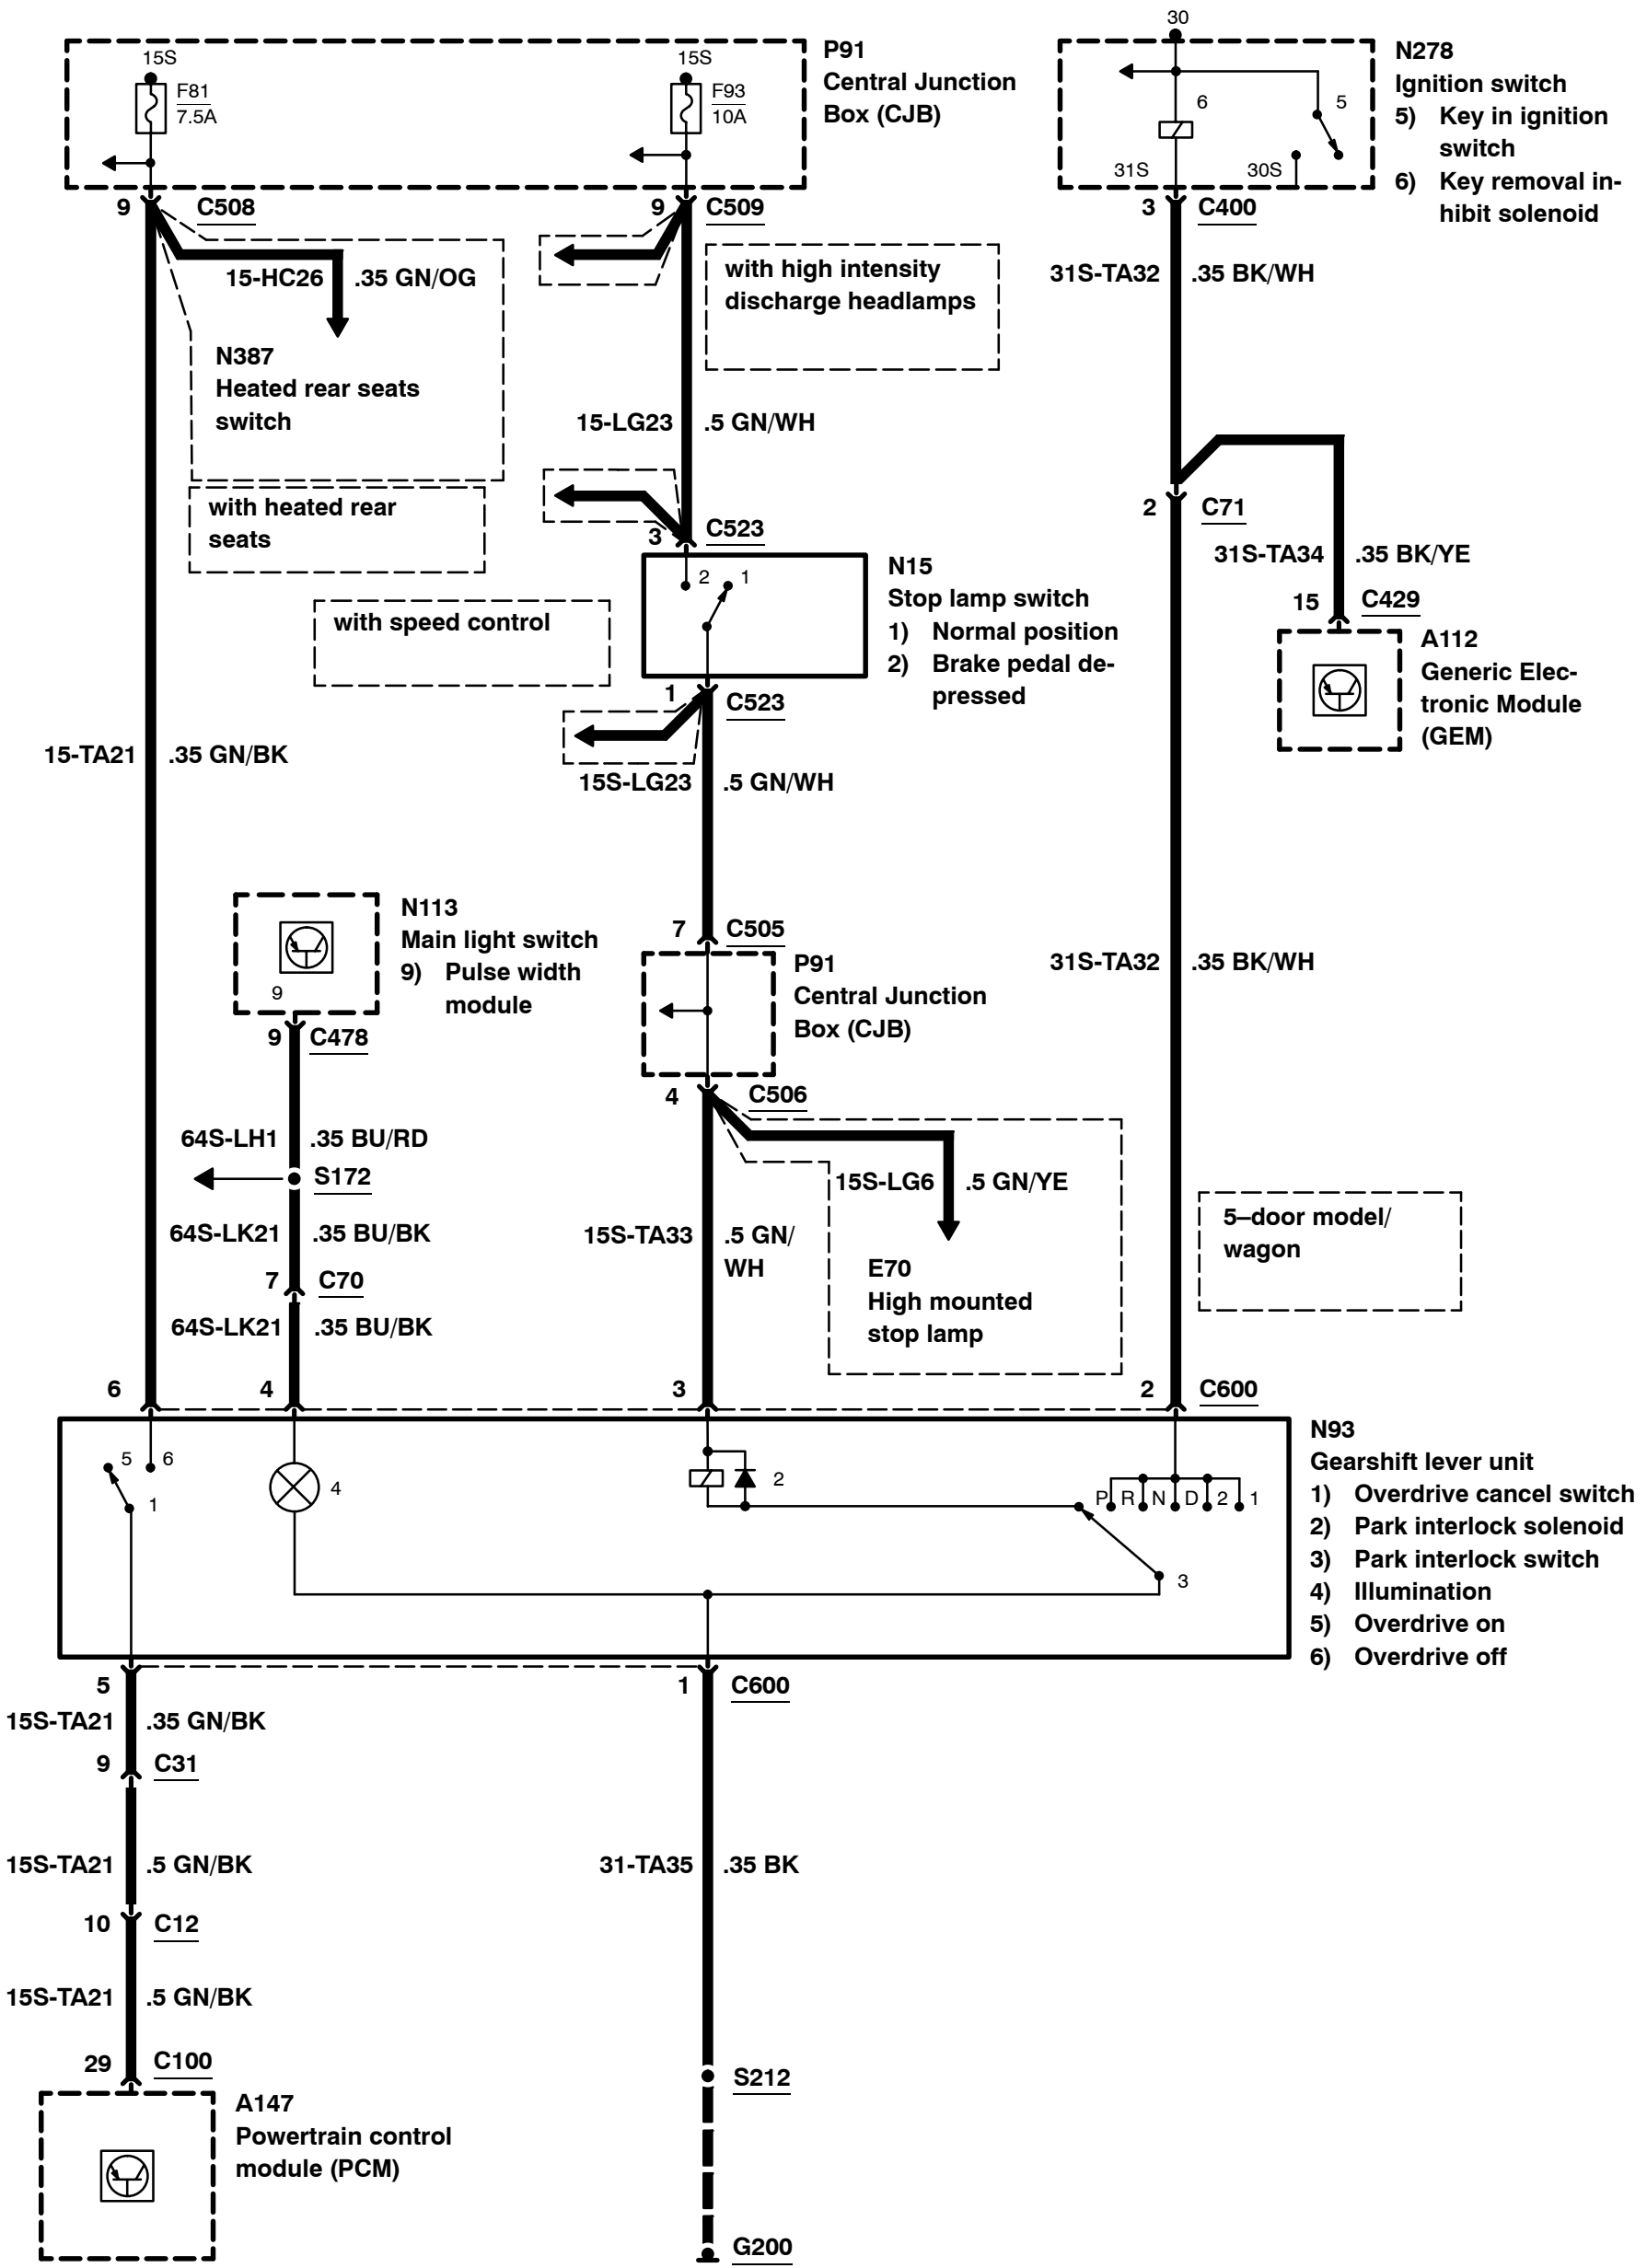


Automatic Transmission – 4–speed automatic transmission (CD4E), 4–door model/5–door model

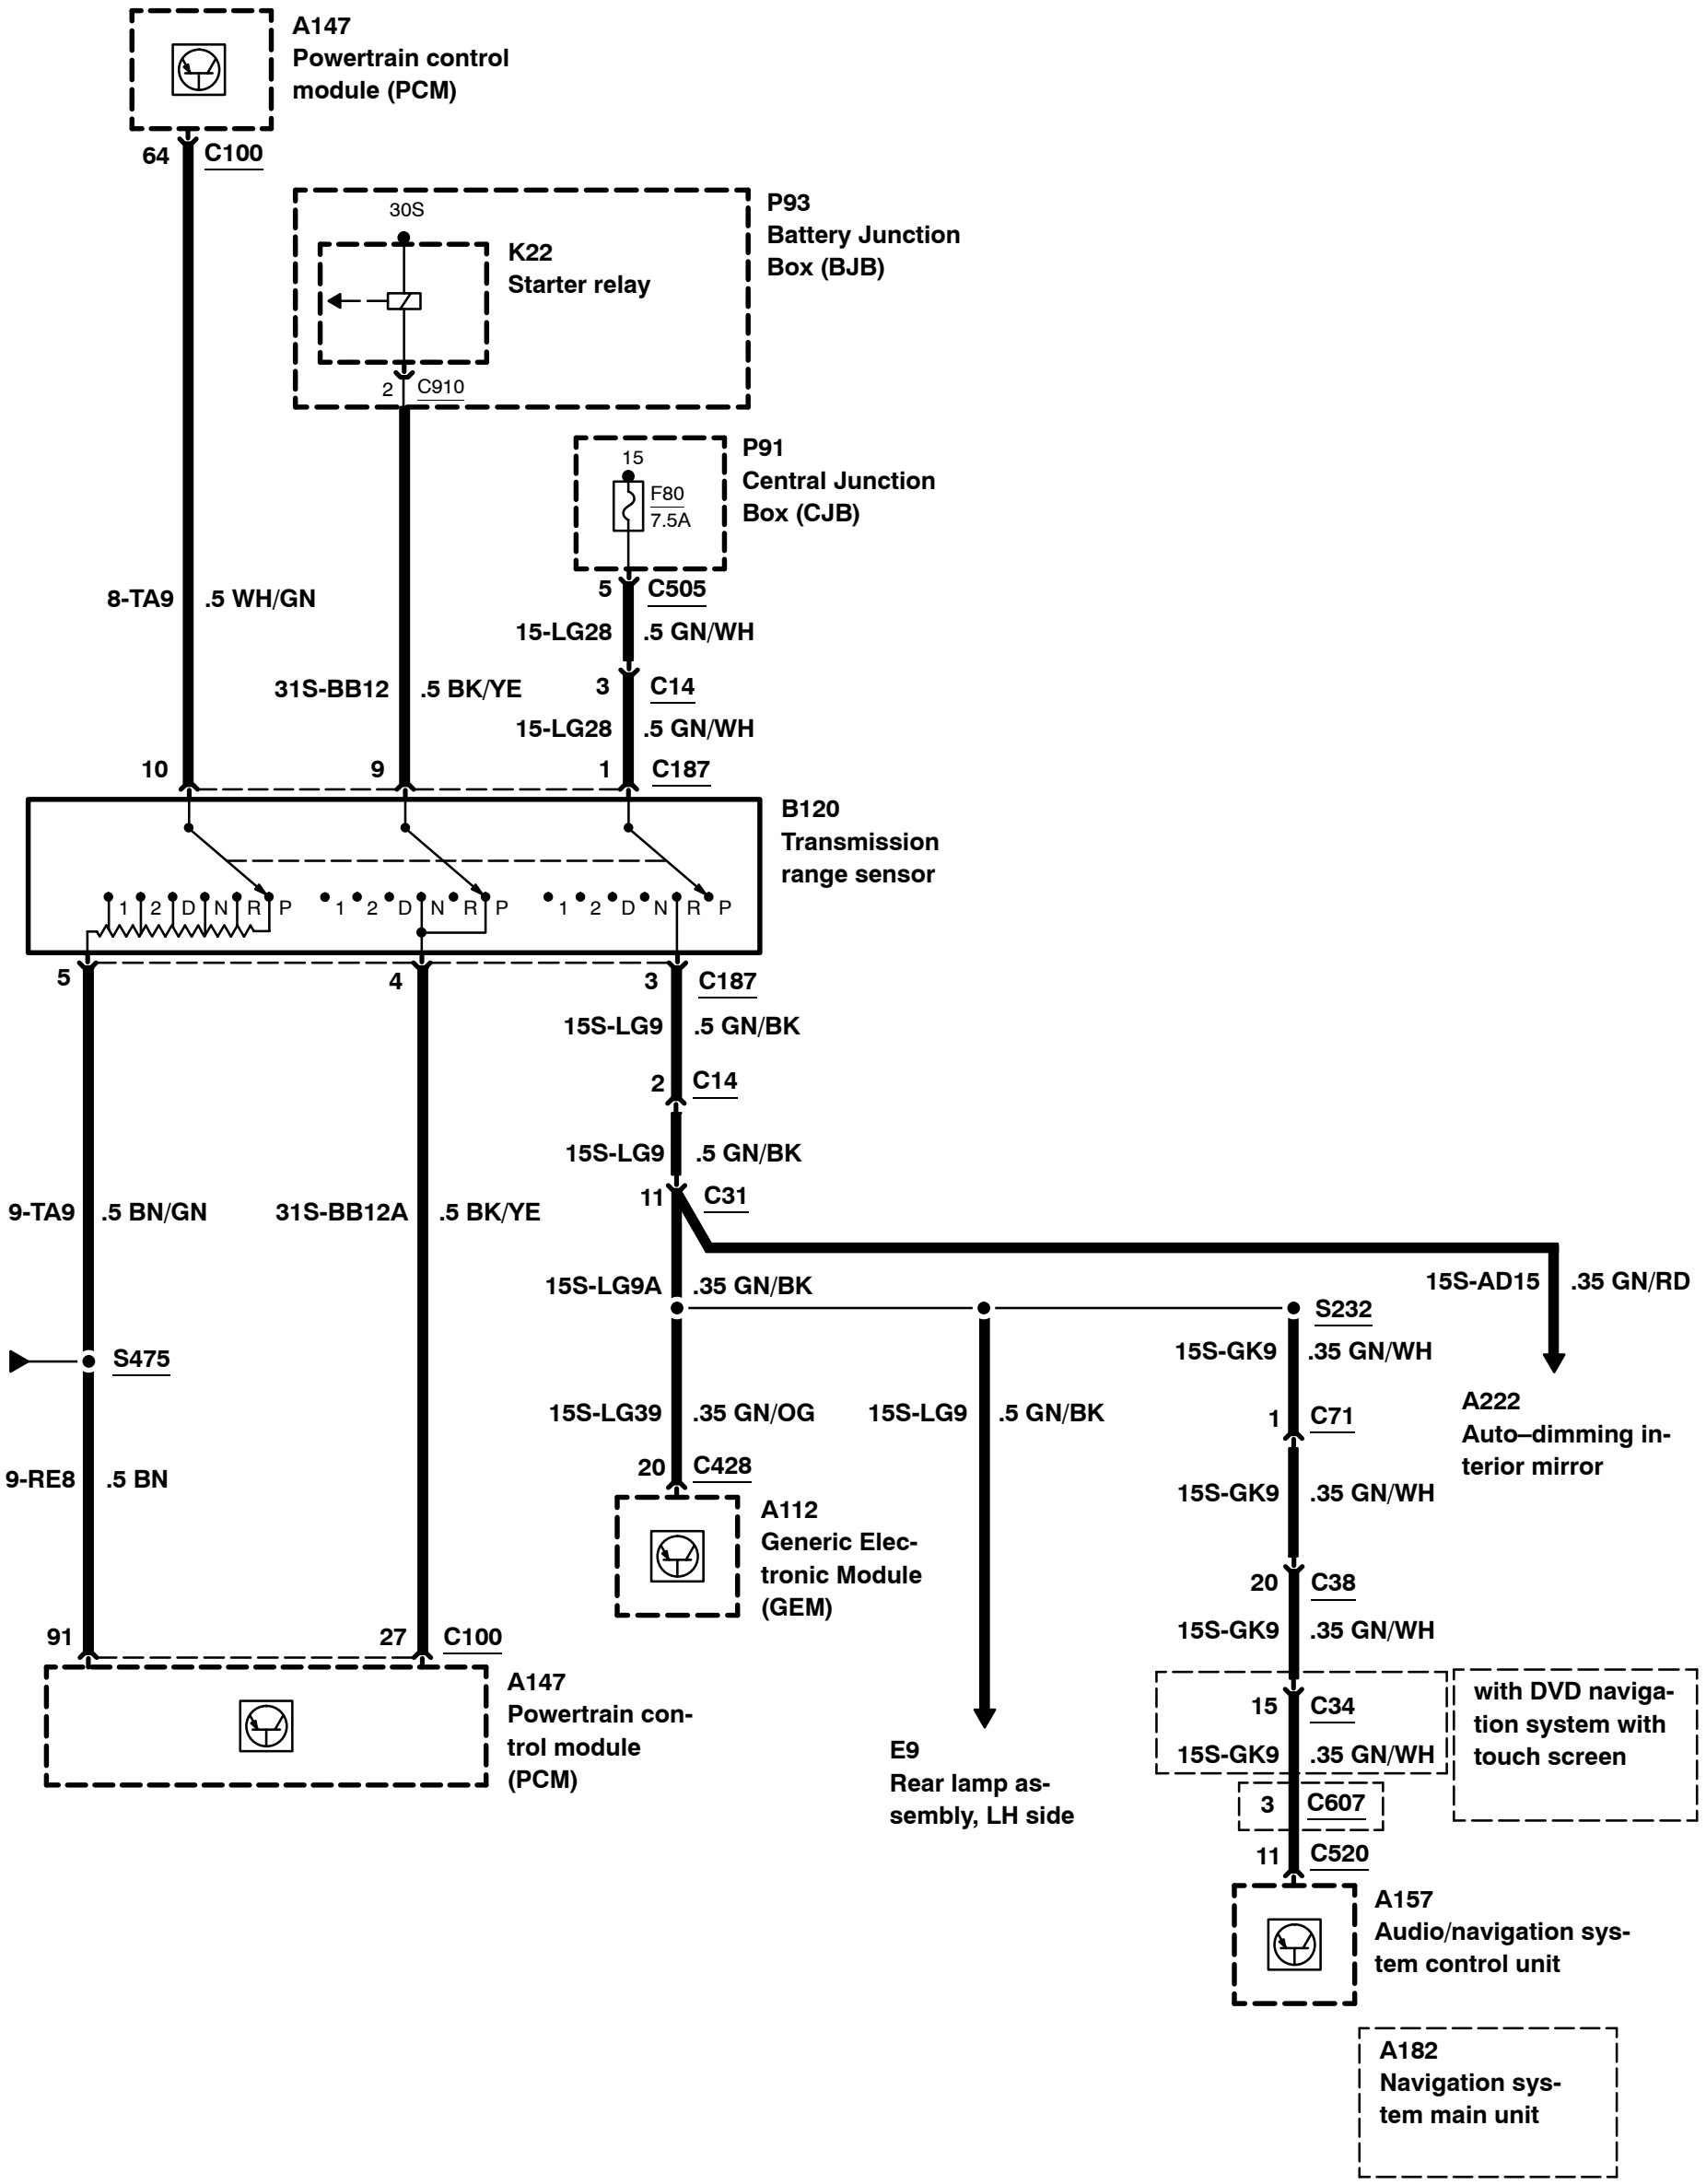


Automatic Transmission – 4–speed automatic transmission (CD4E), wagon

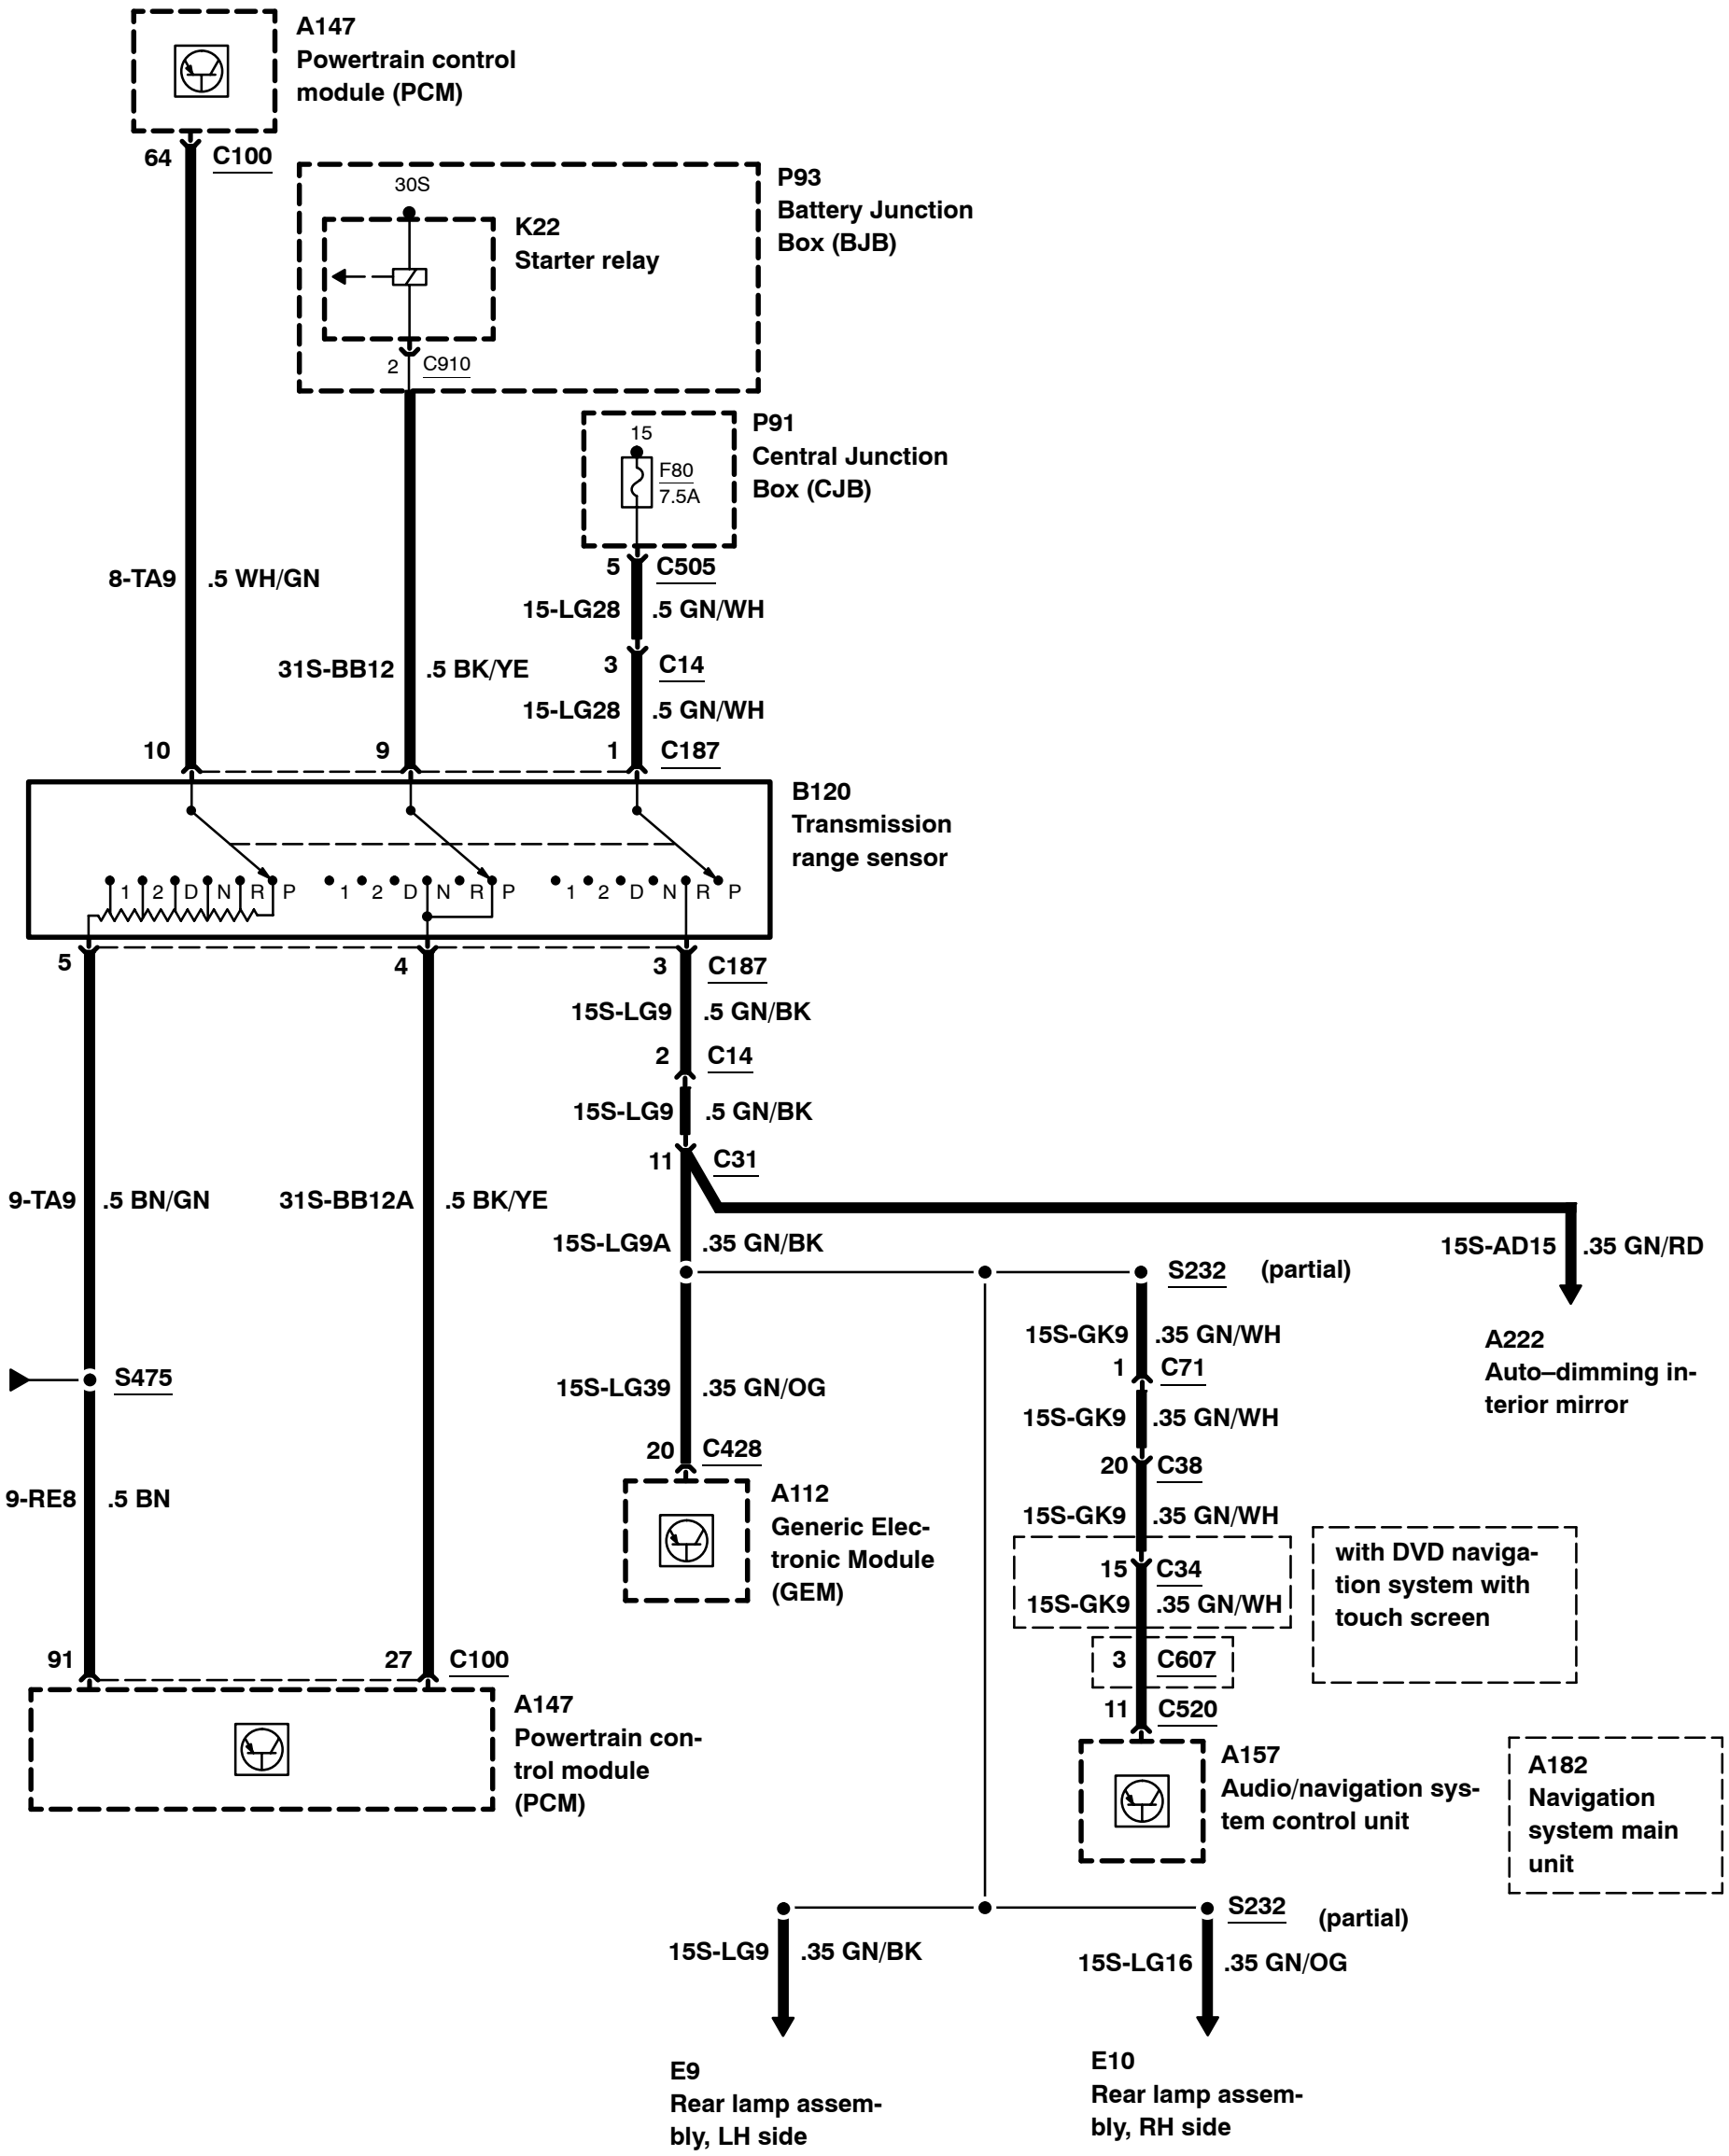


Automatic Transmission – 4–speed automatic transmission (CD4E)

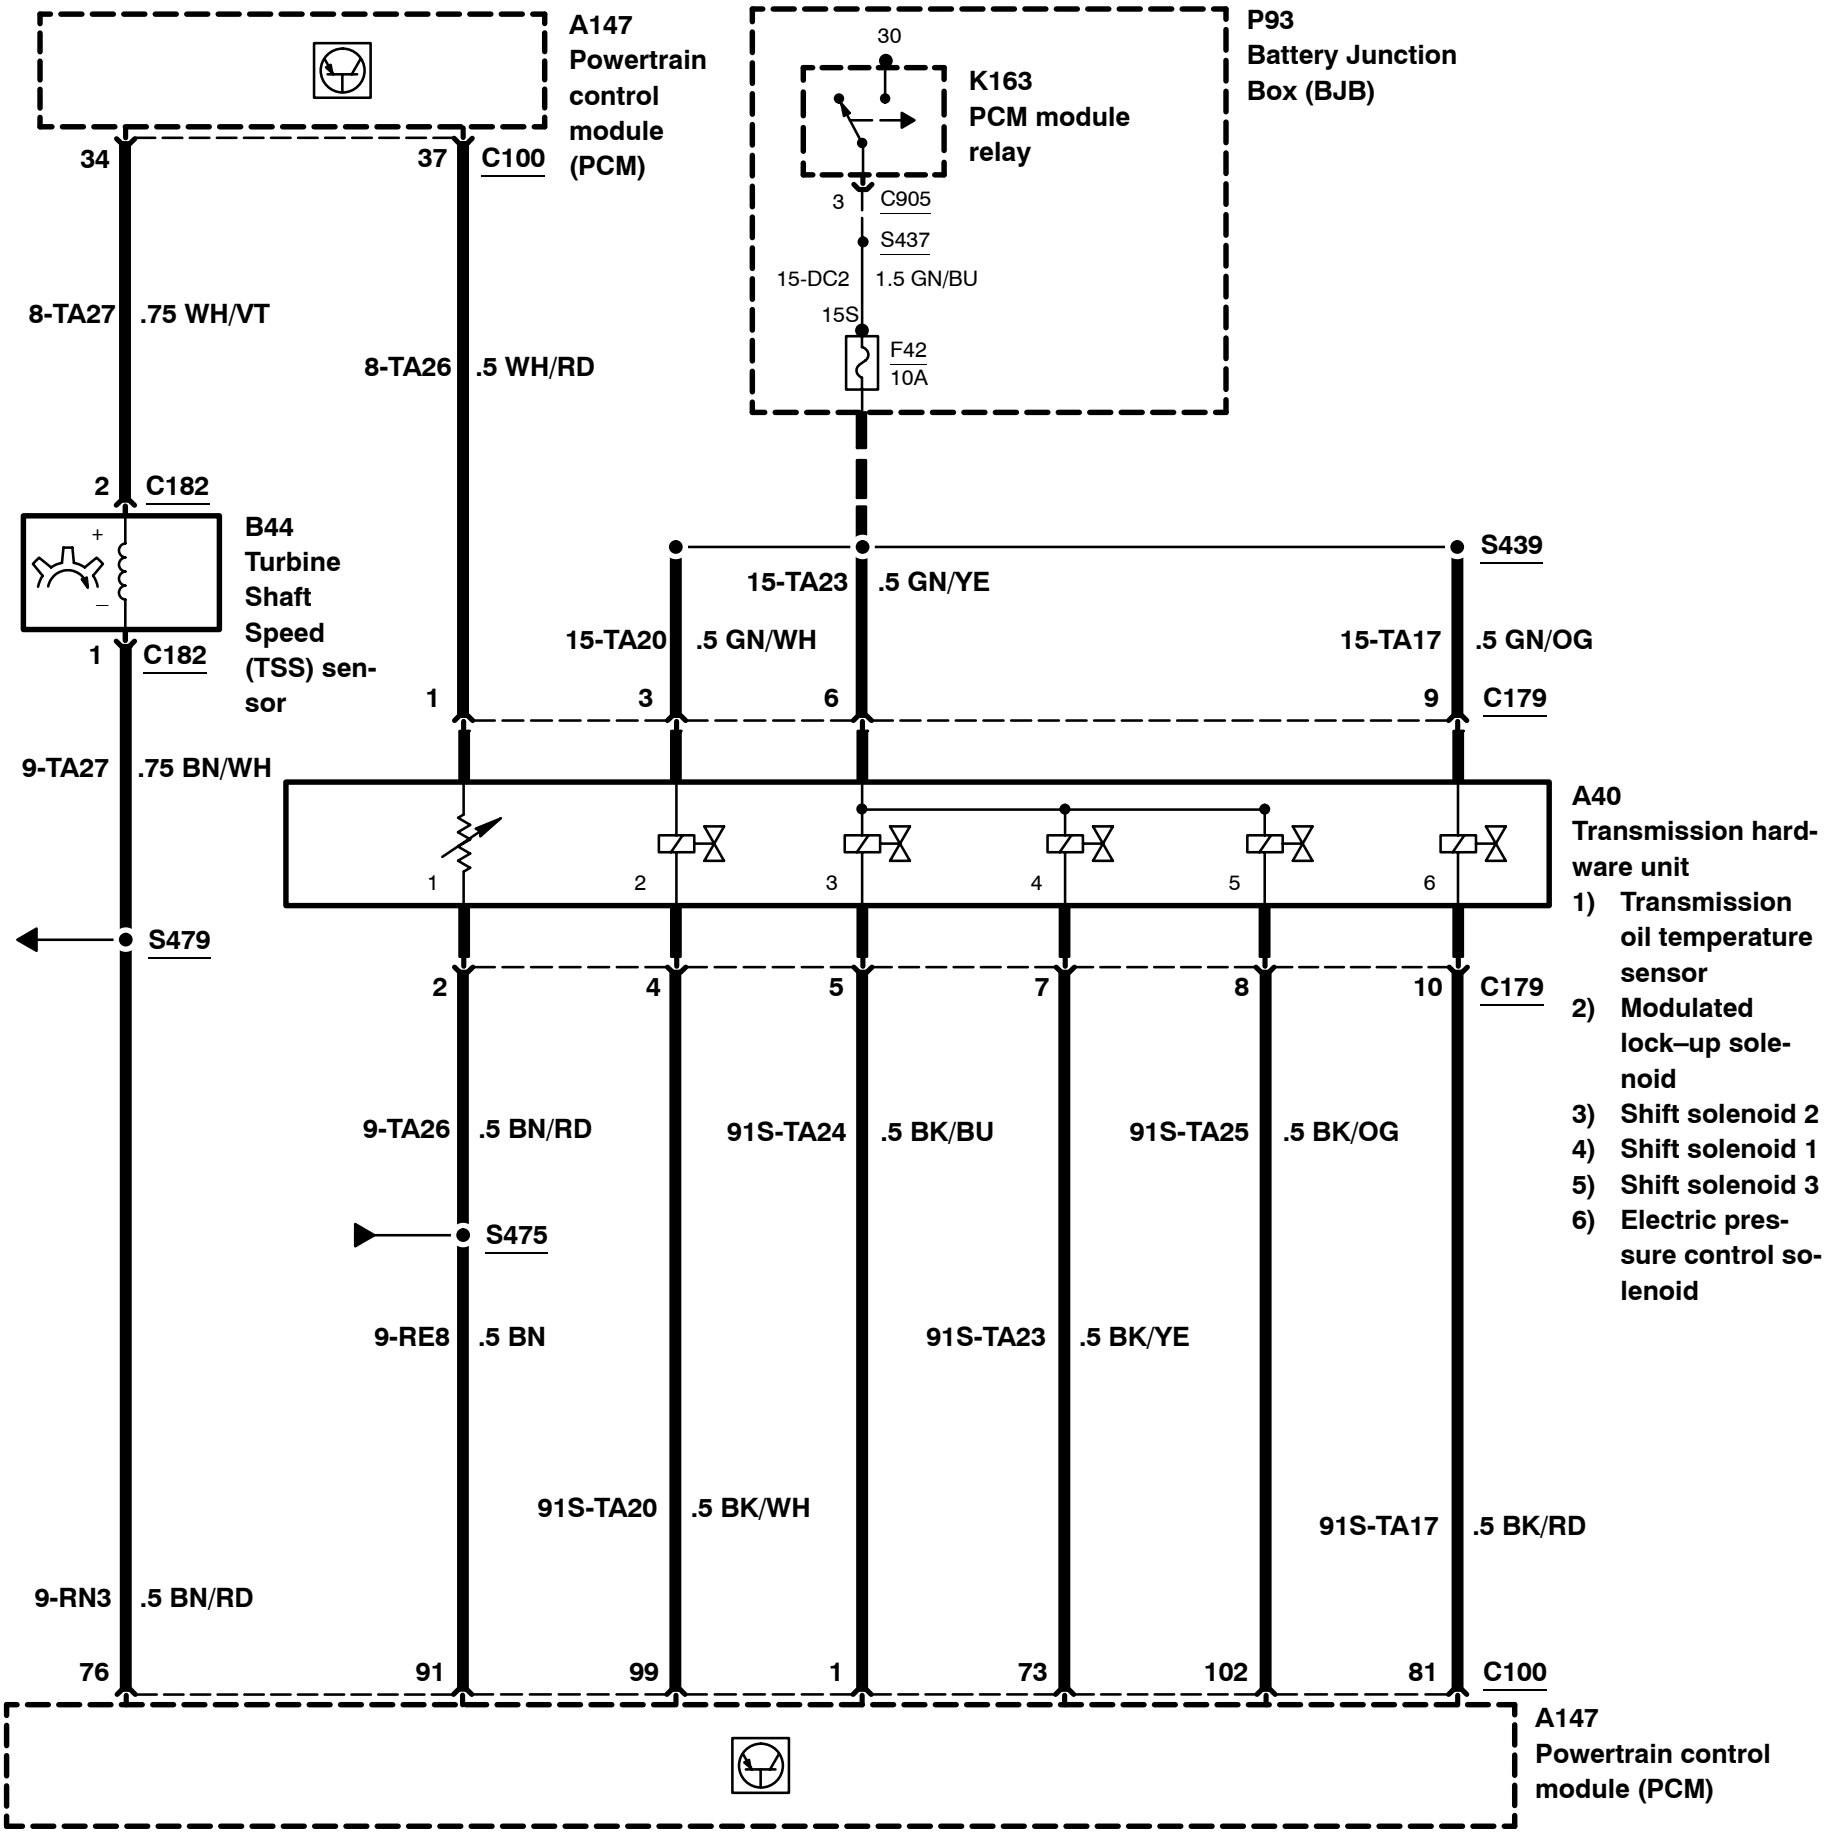


Automatic Transmission – 5–speed automatic transmission (5F31J)

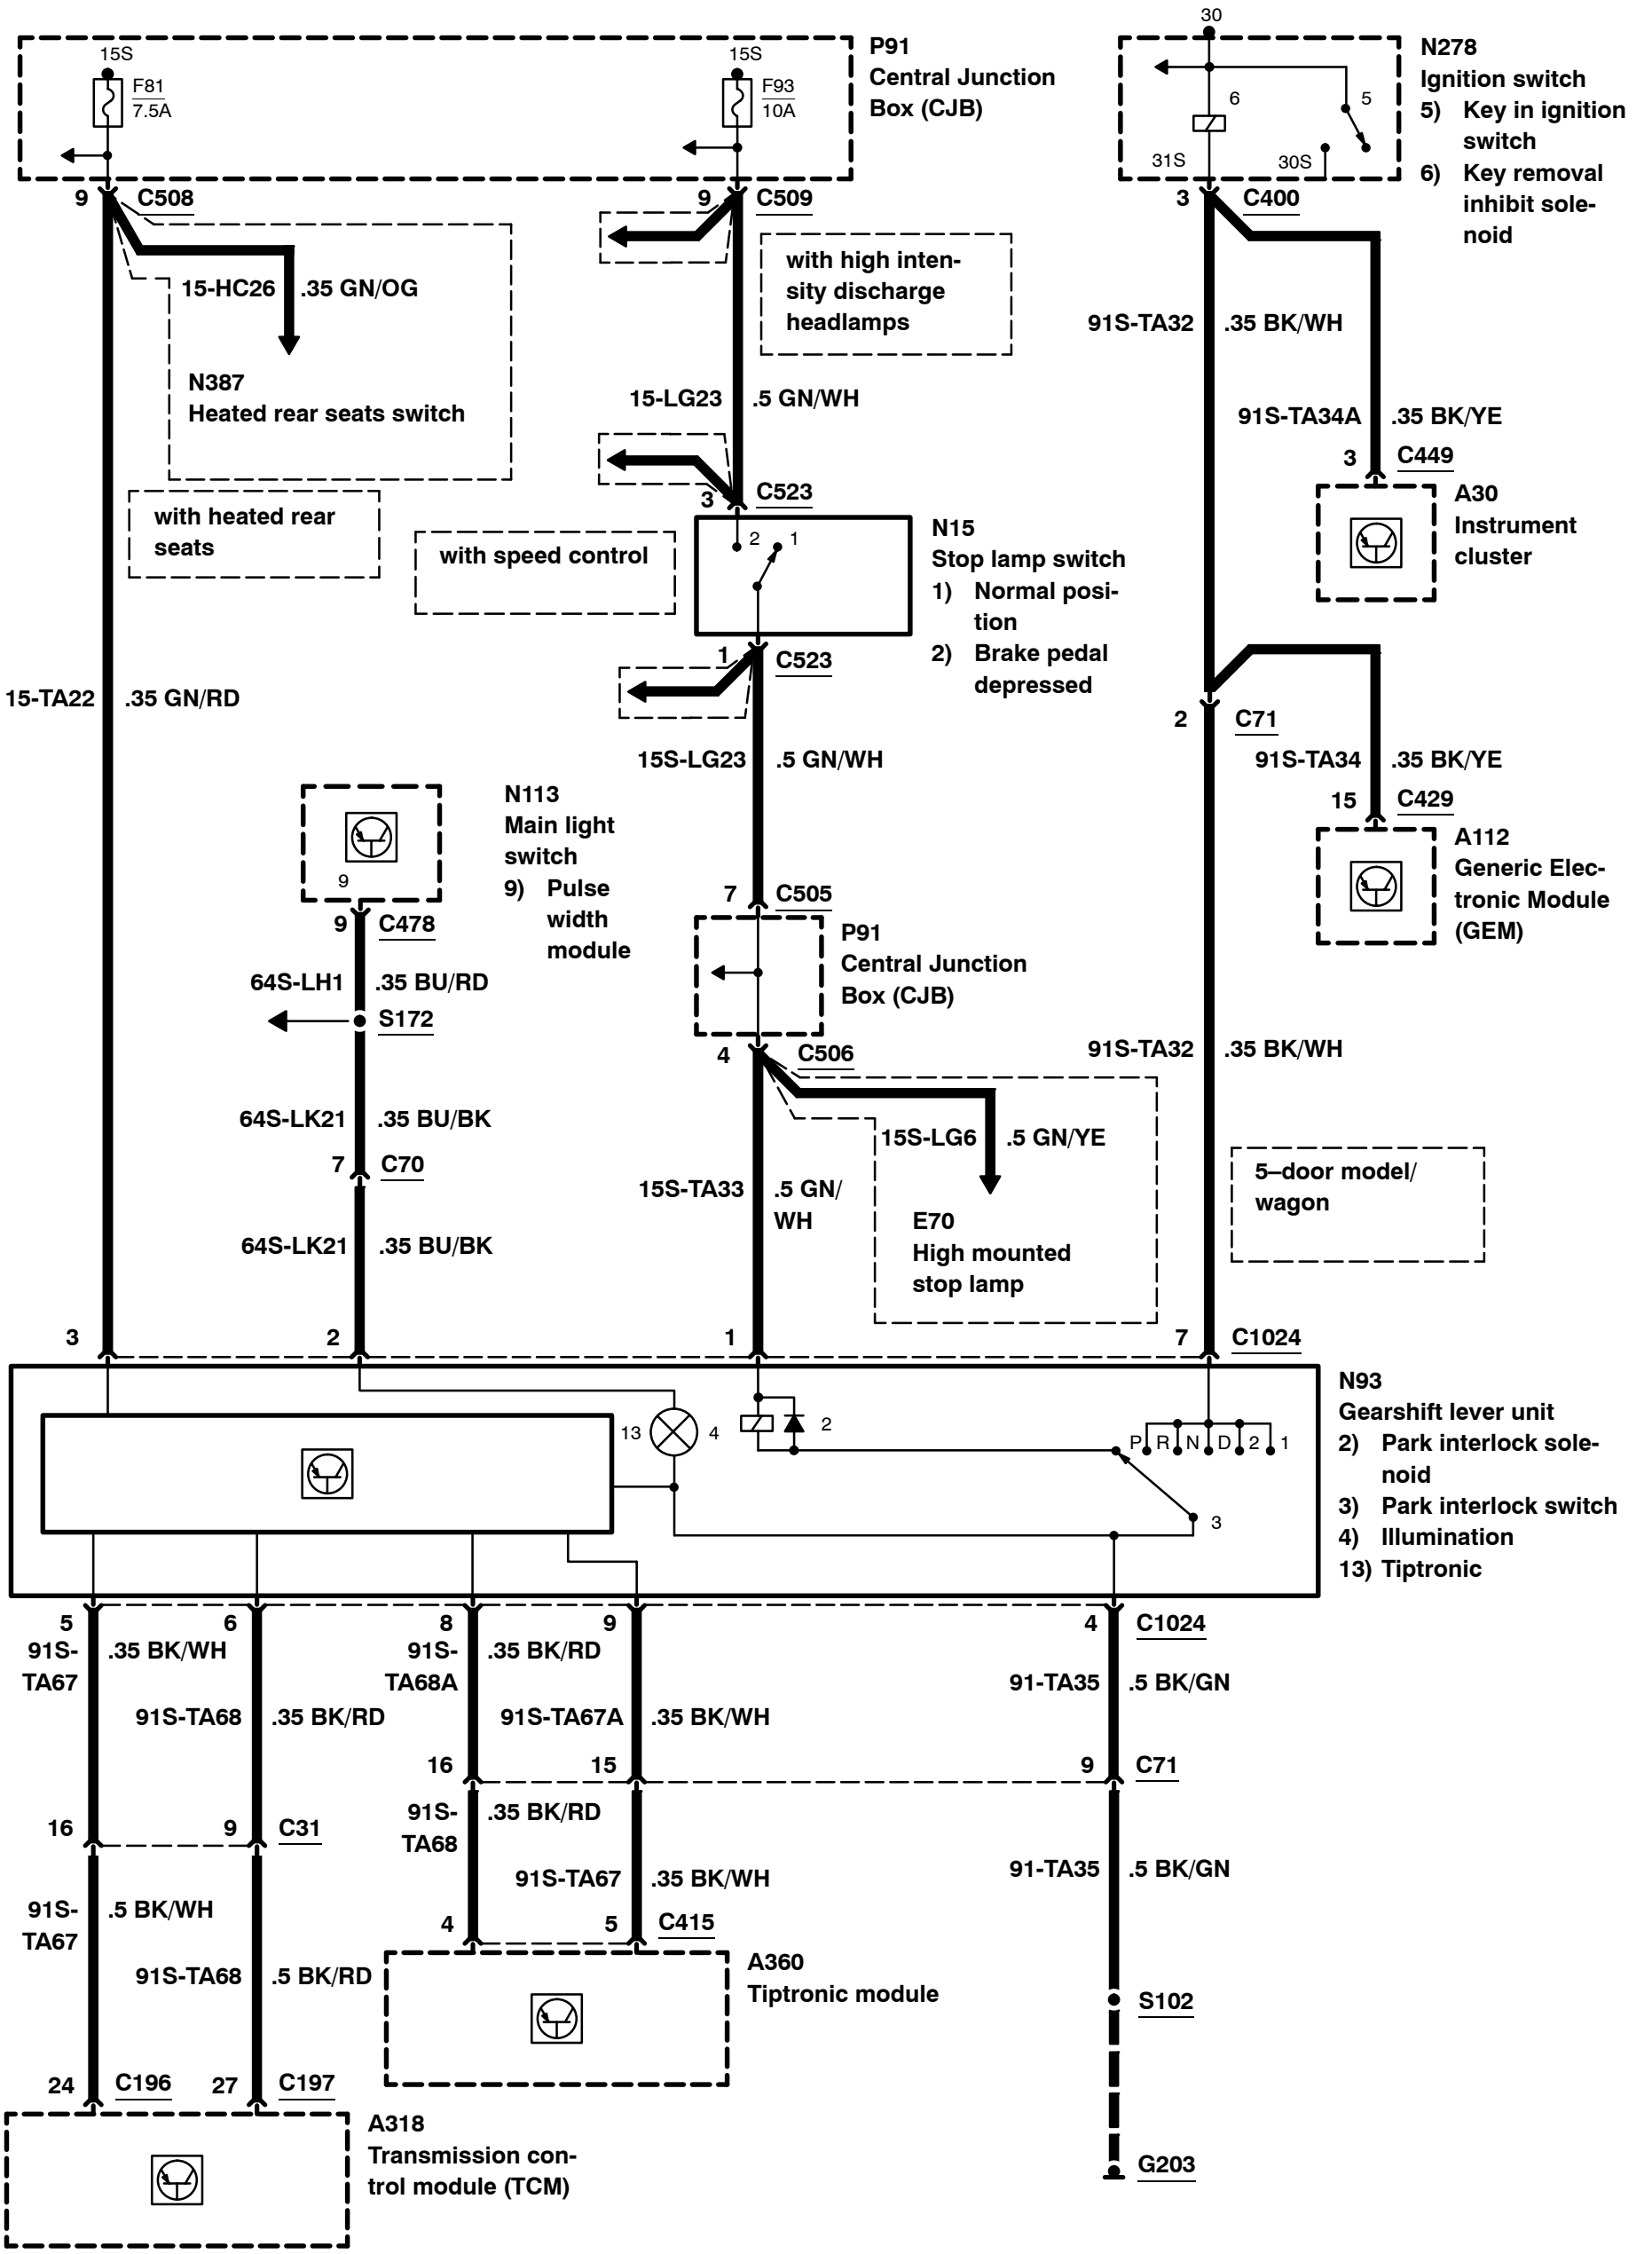


Automatic Transmission – 5–speed automatic transmission (5F31J)

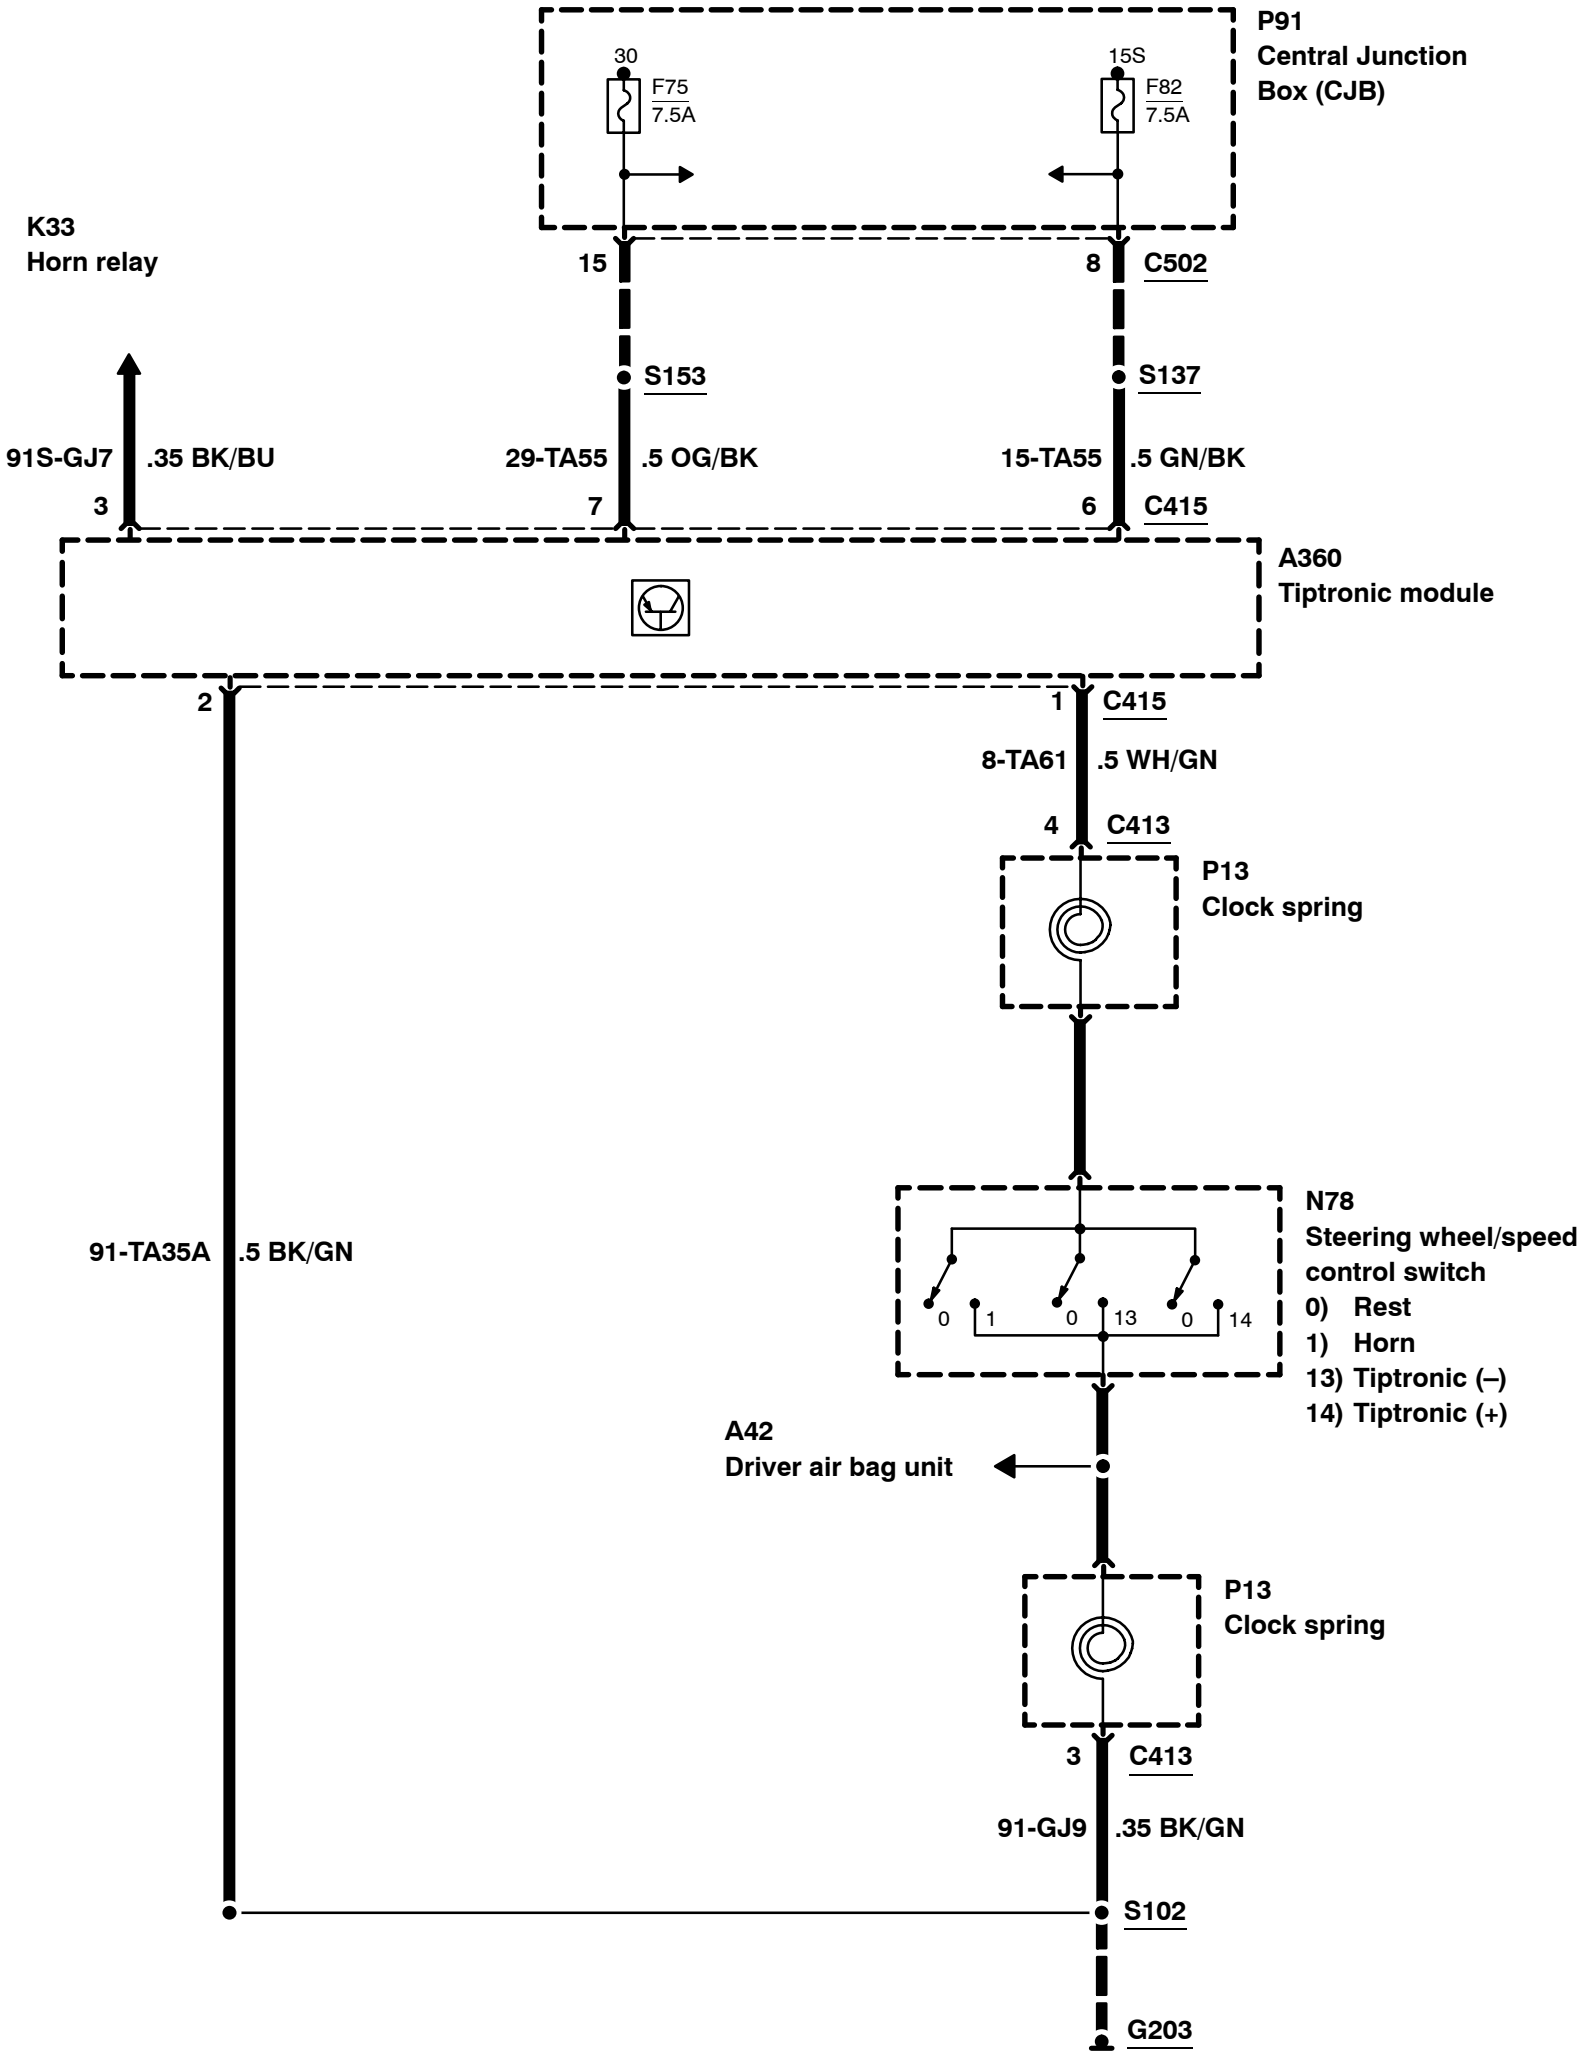


Automatic Transmission – 5–speed automatic transmission (5F31J), 4–door model/5–door model

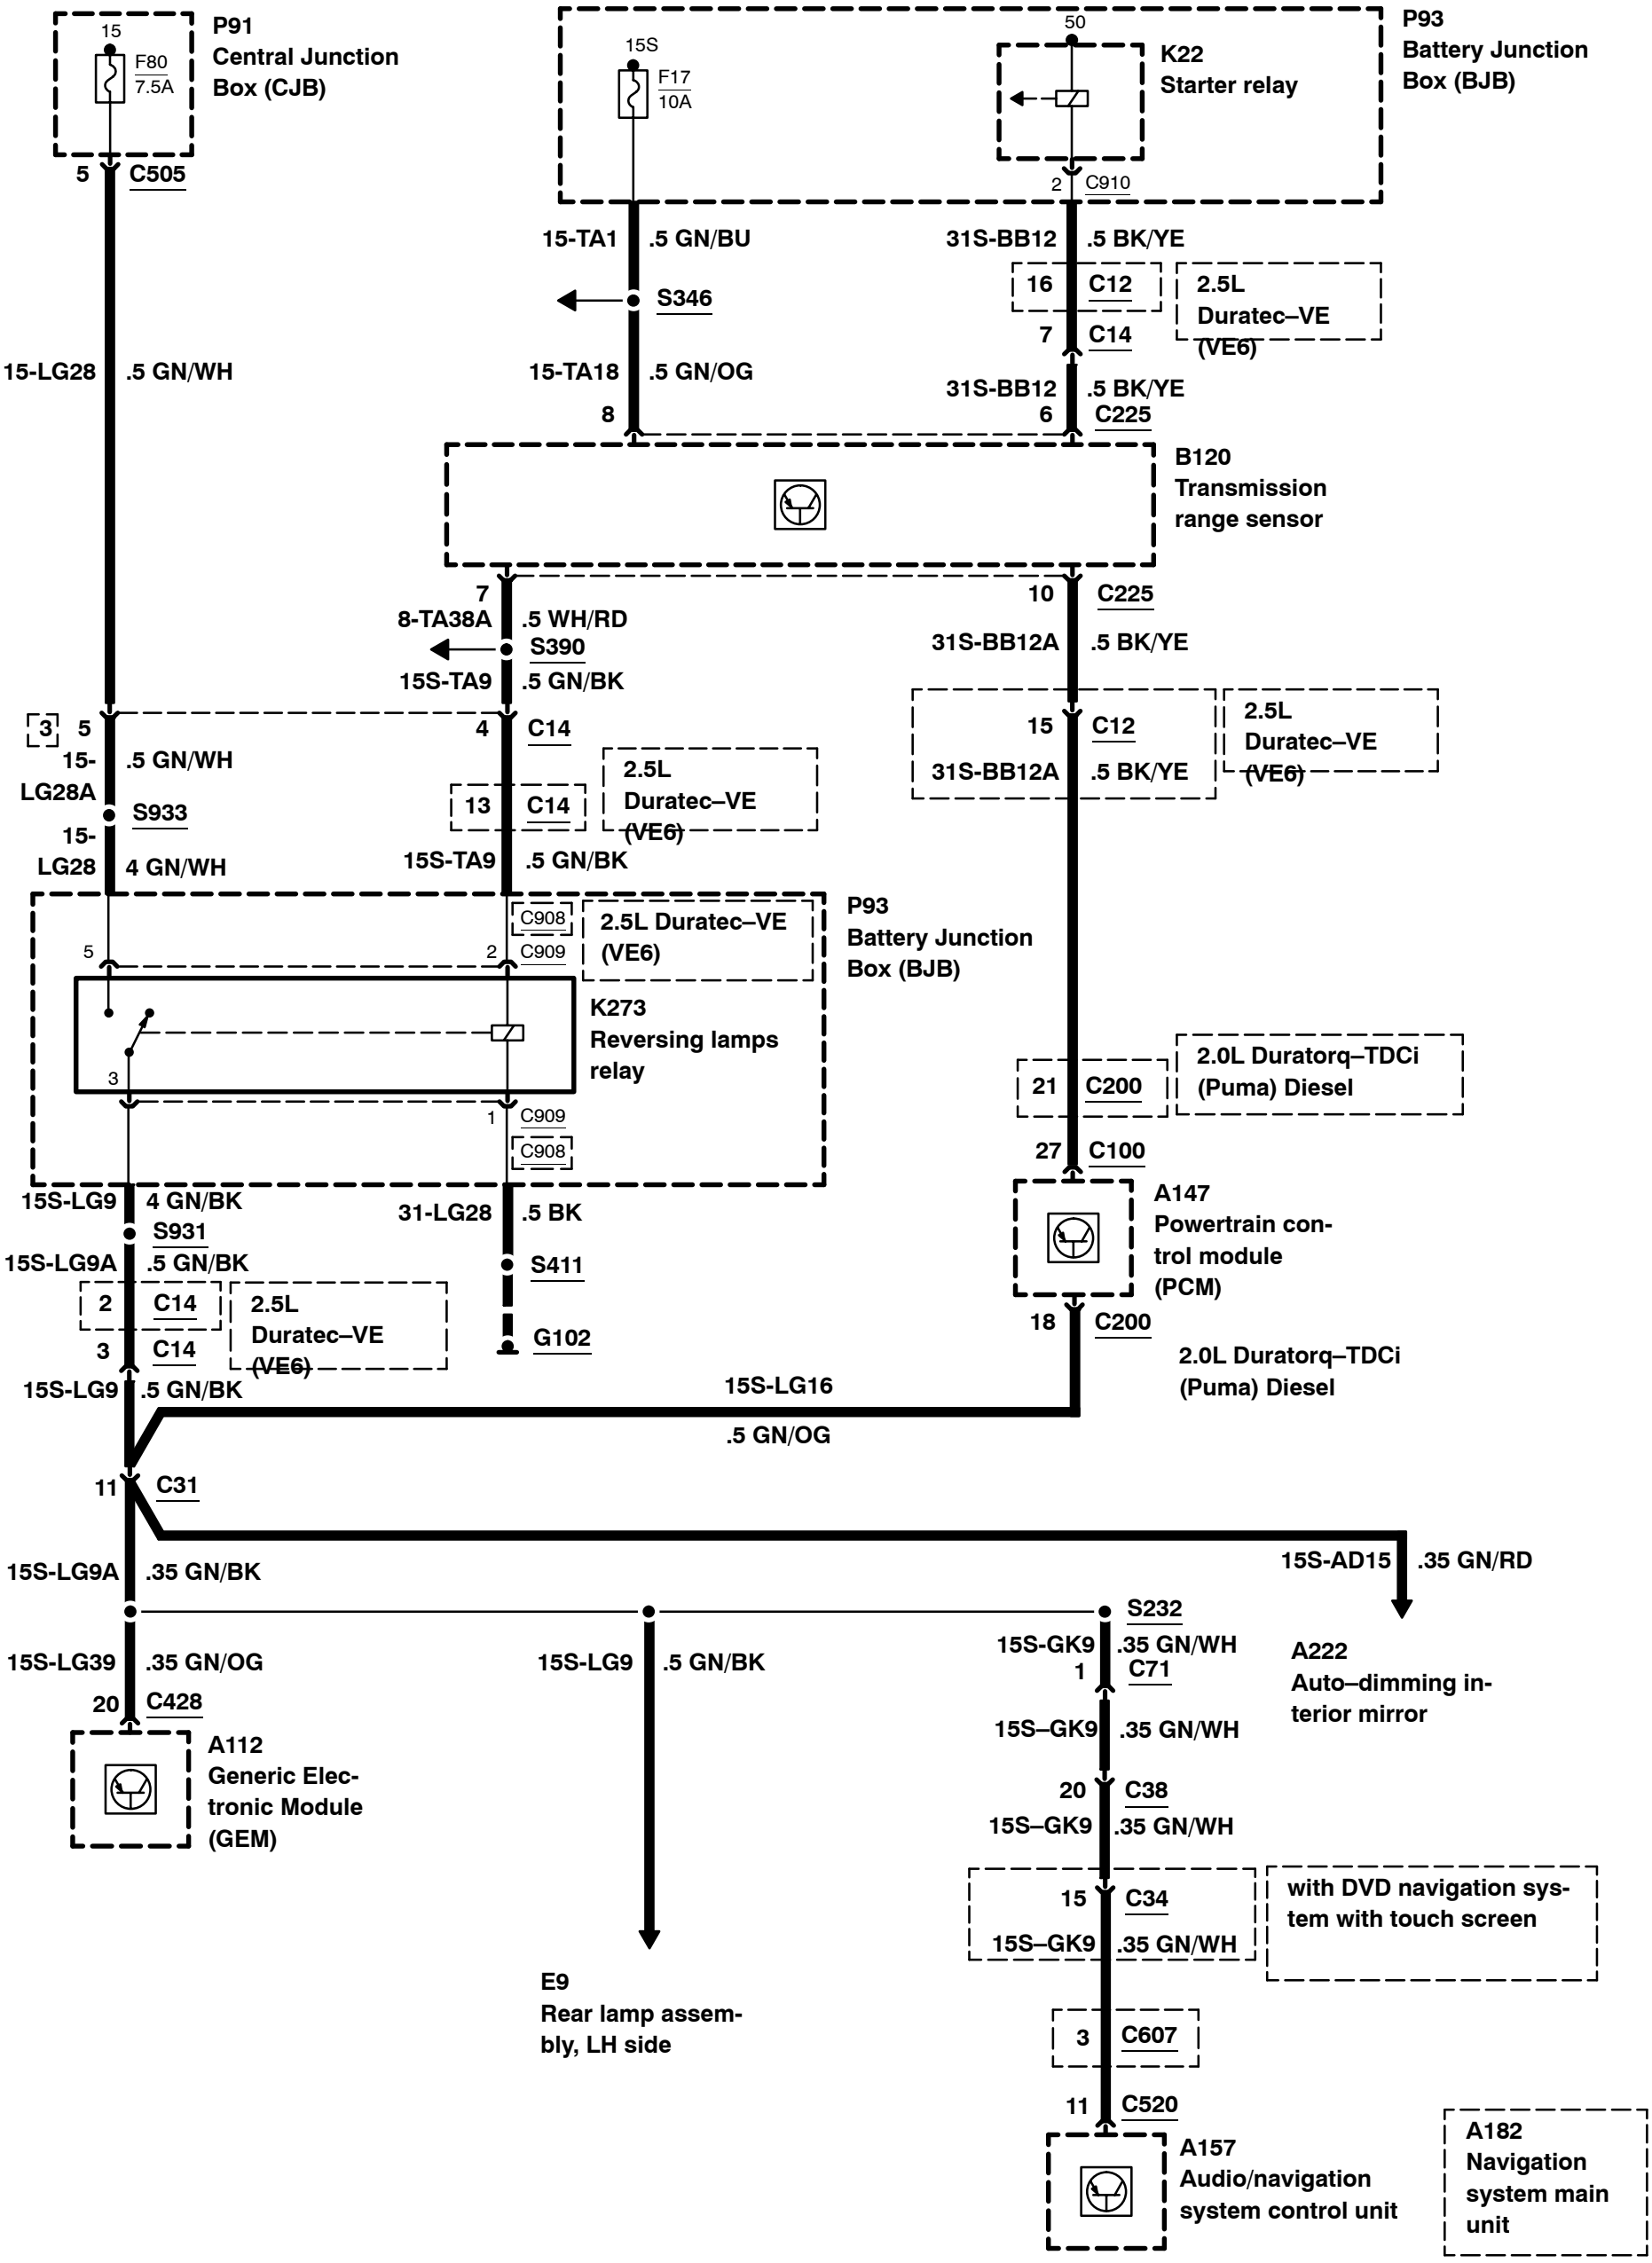


Automatic Transmission – 5–speed automatic transmission (5F31J), wagon

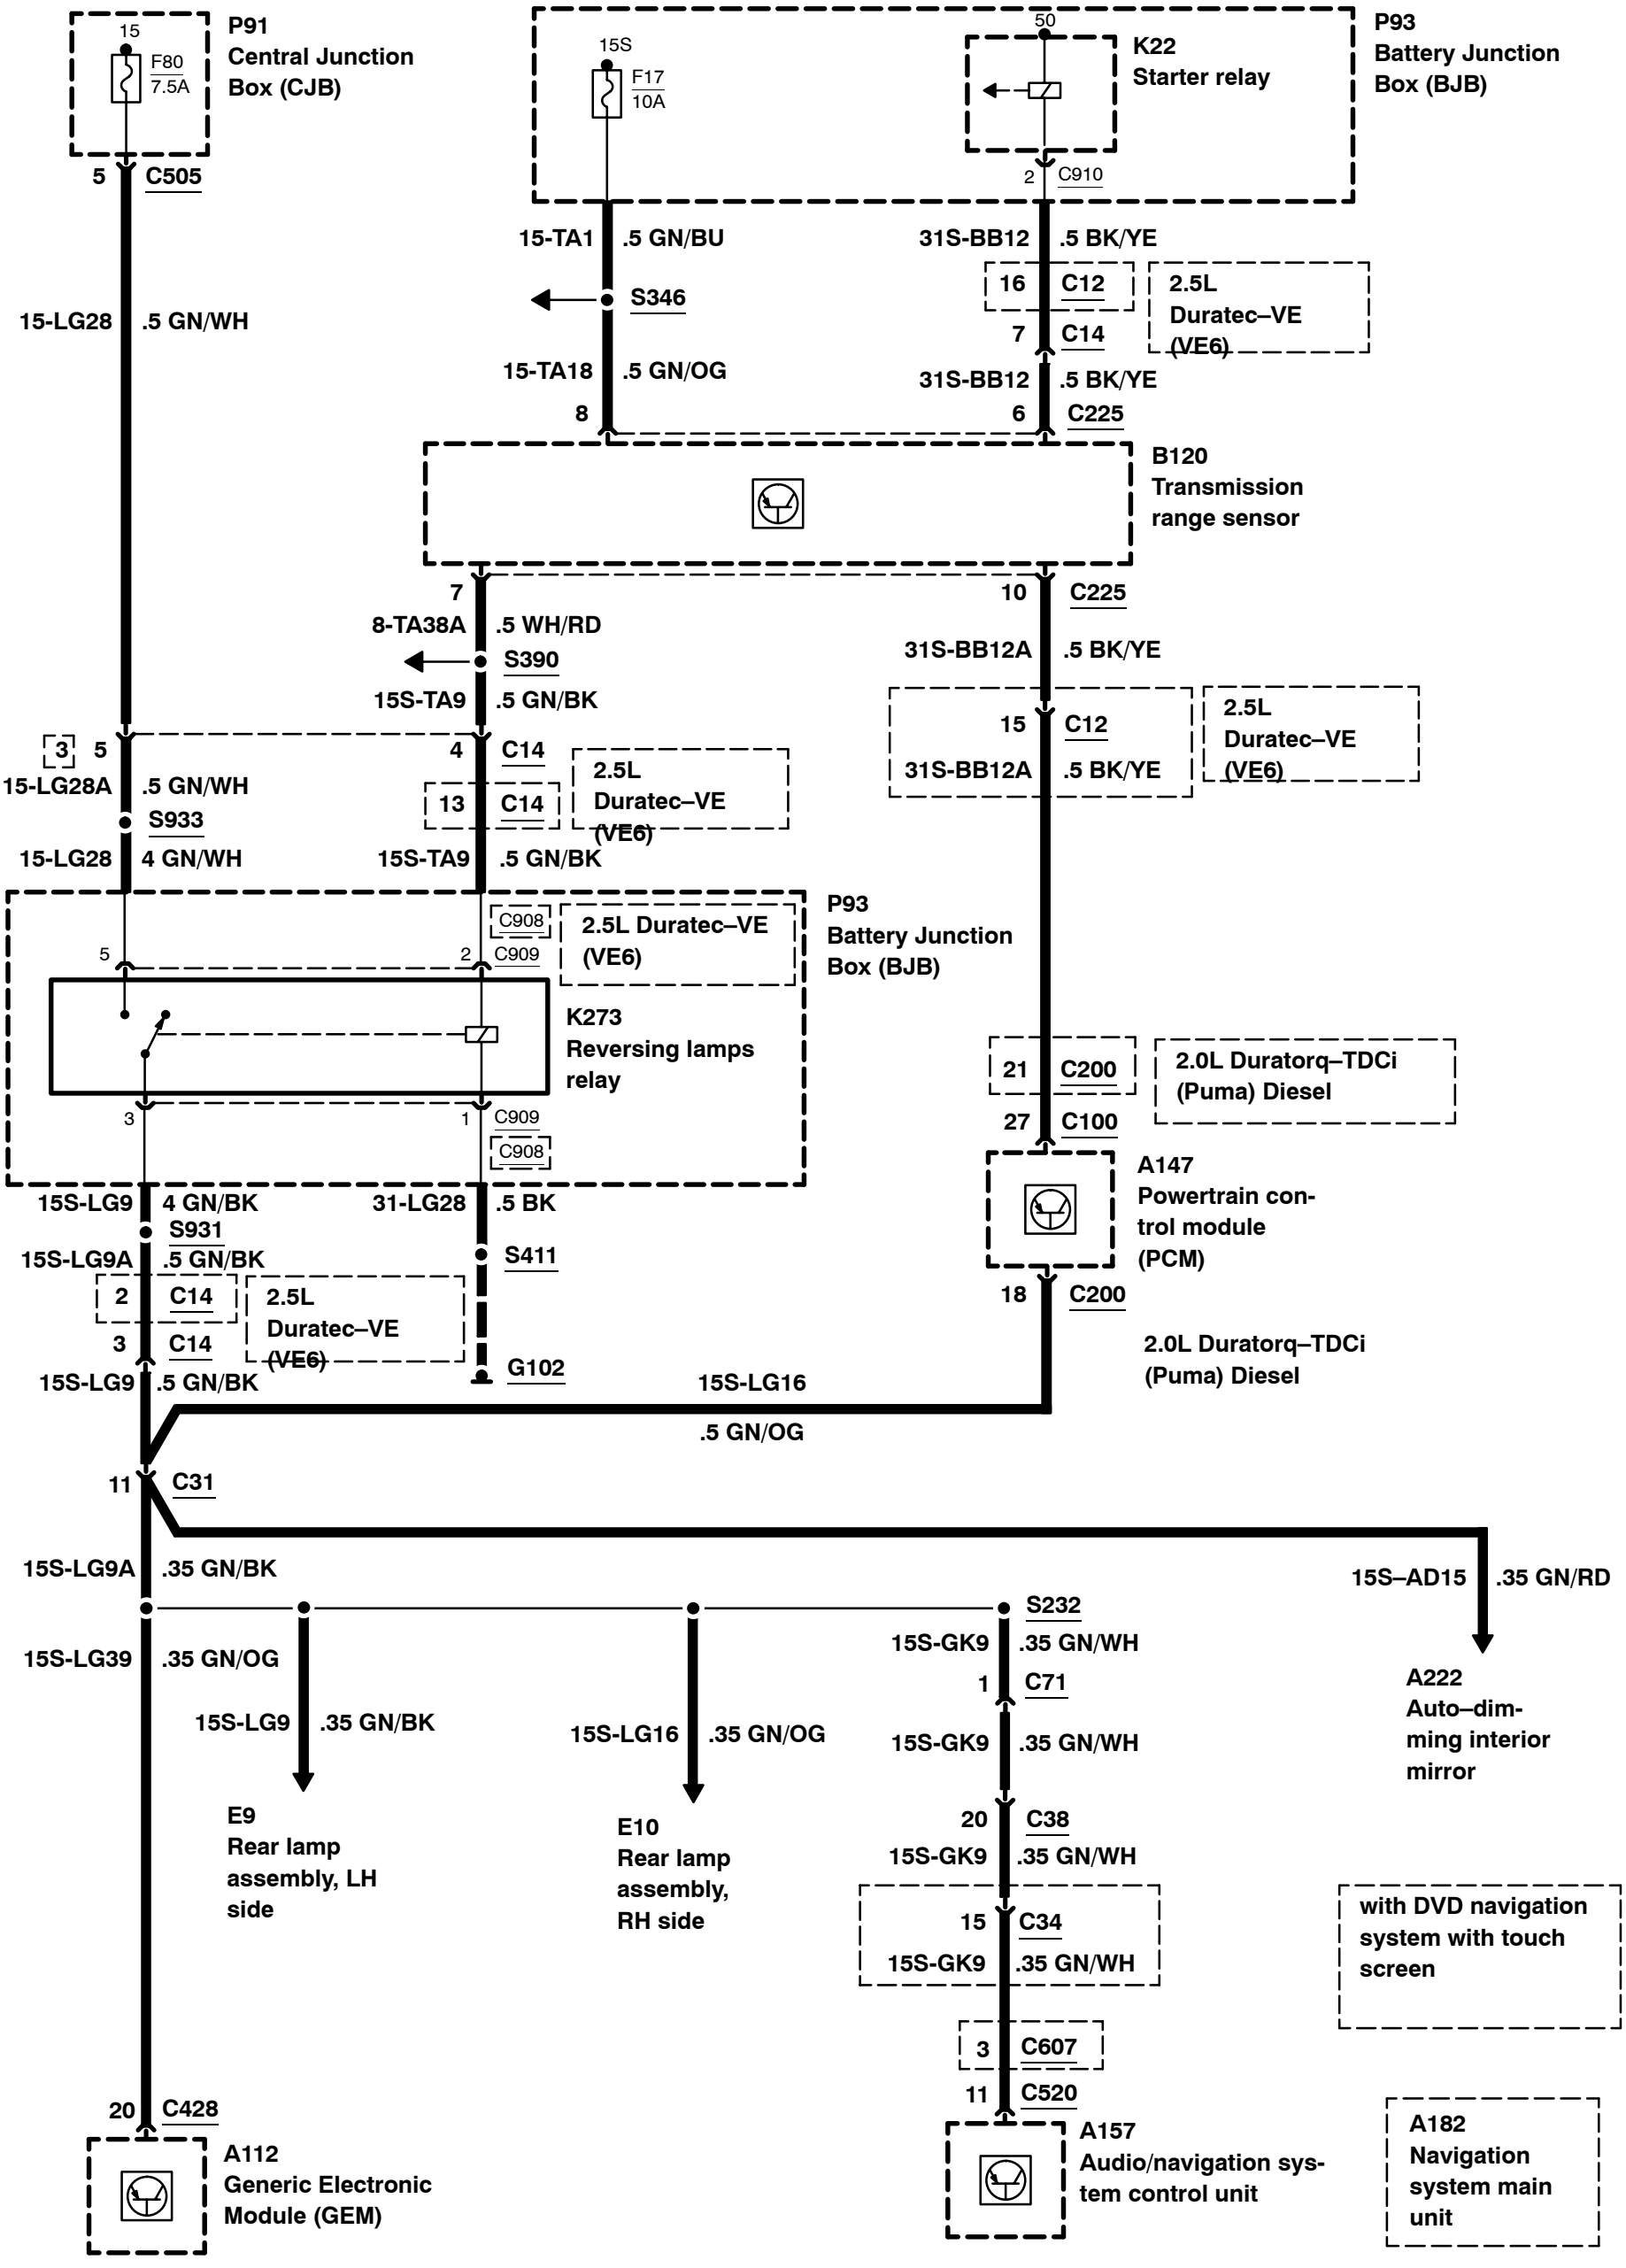


Automatic Transmission – 5–speed automatic transmission (5F31J)

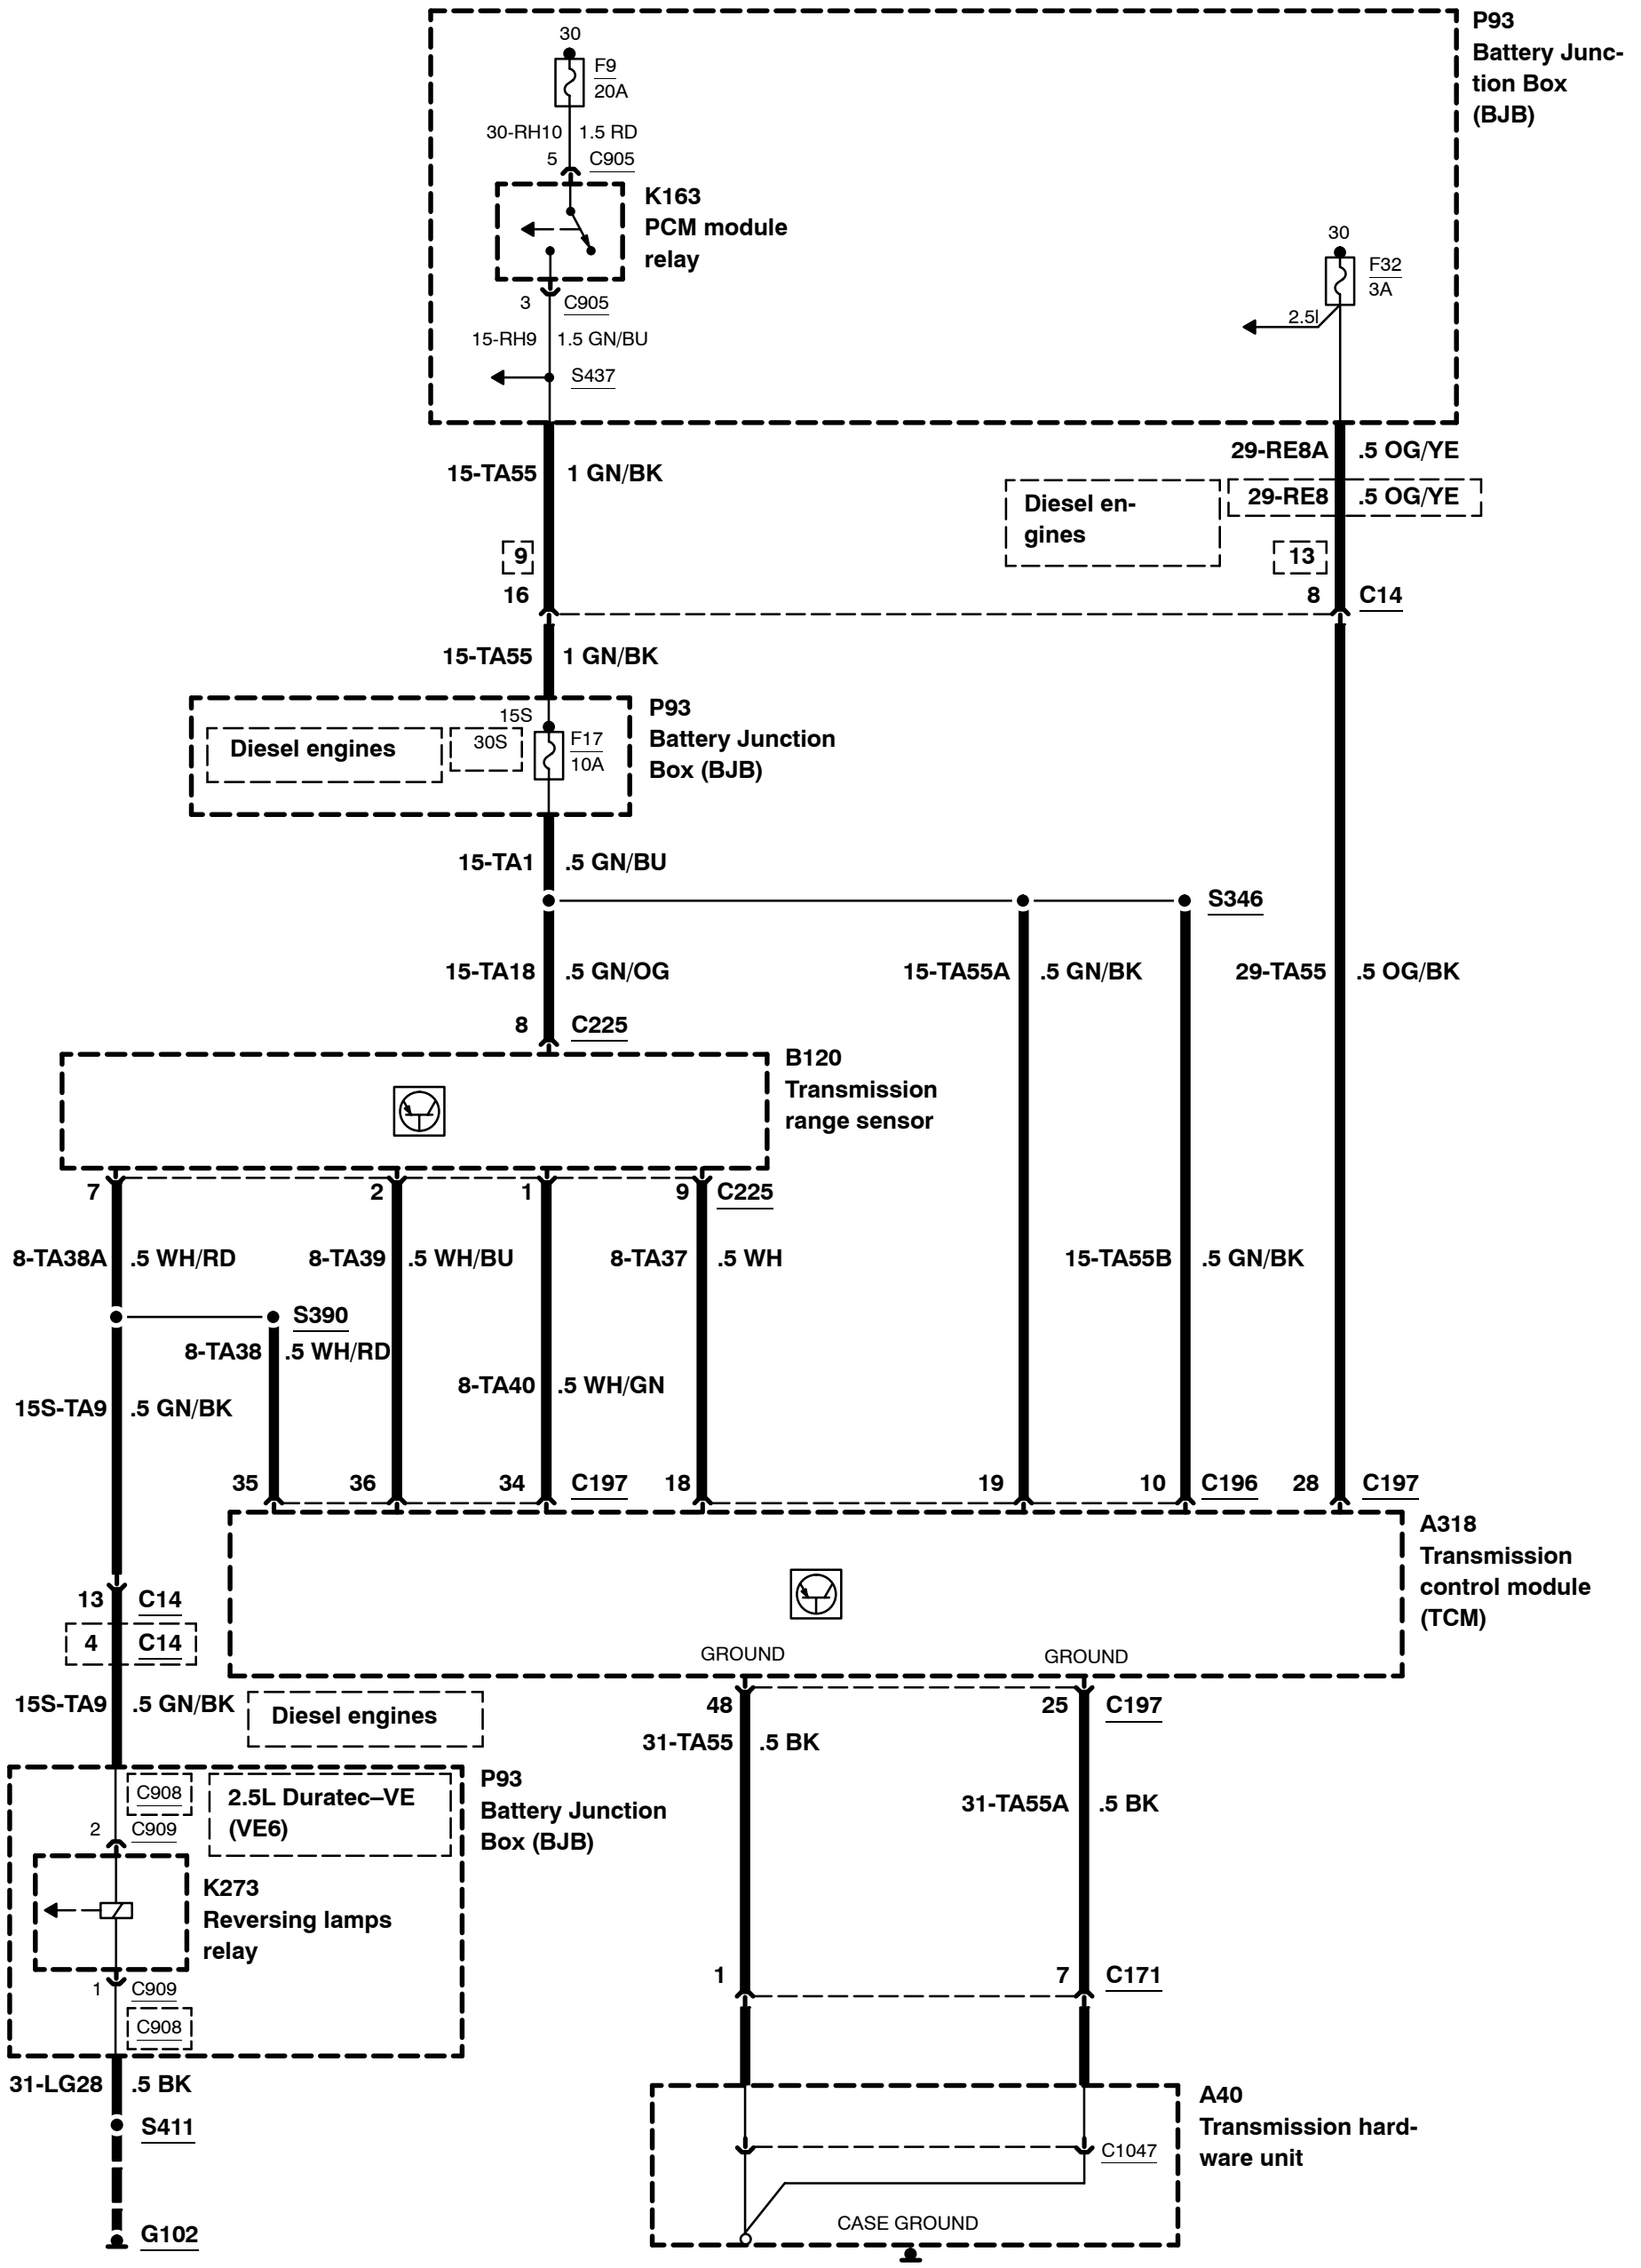


Automatic Transmission – 5–speed automatic transmission (5F31J), Petrol engines

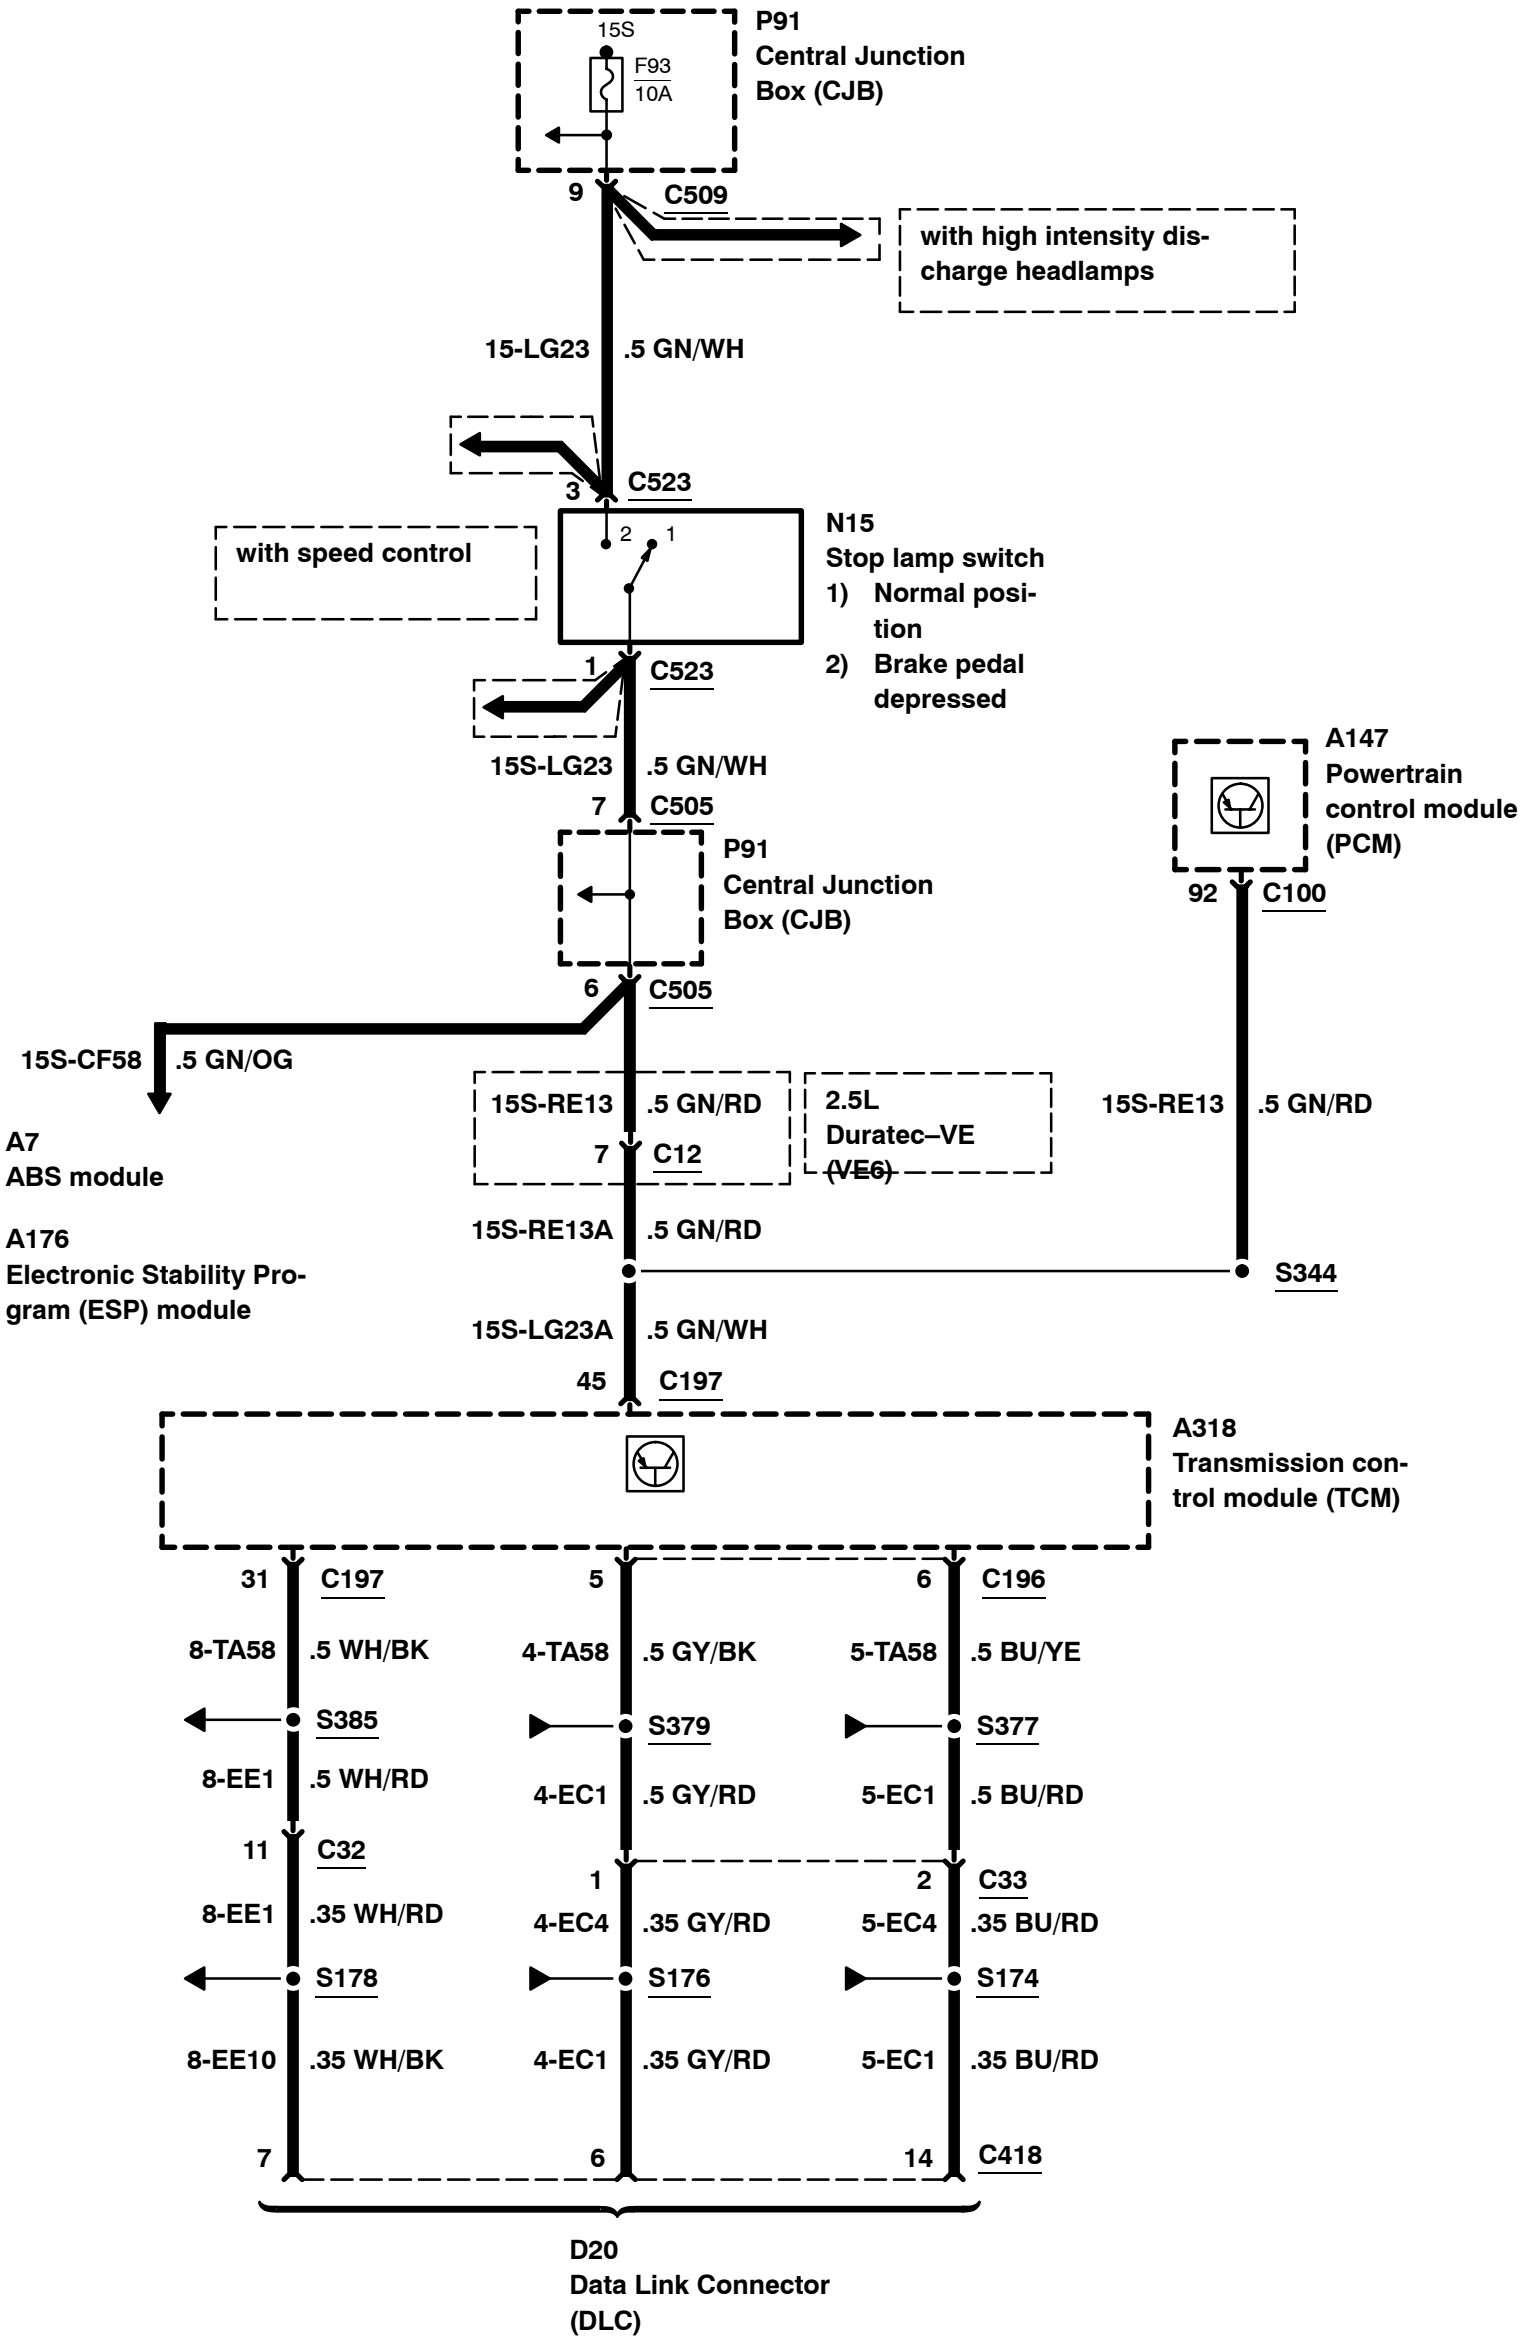


Automatic Transmission – 5–speed automatic transmission (5F31J), Diesel engines

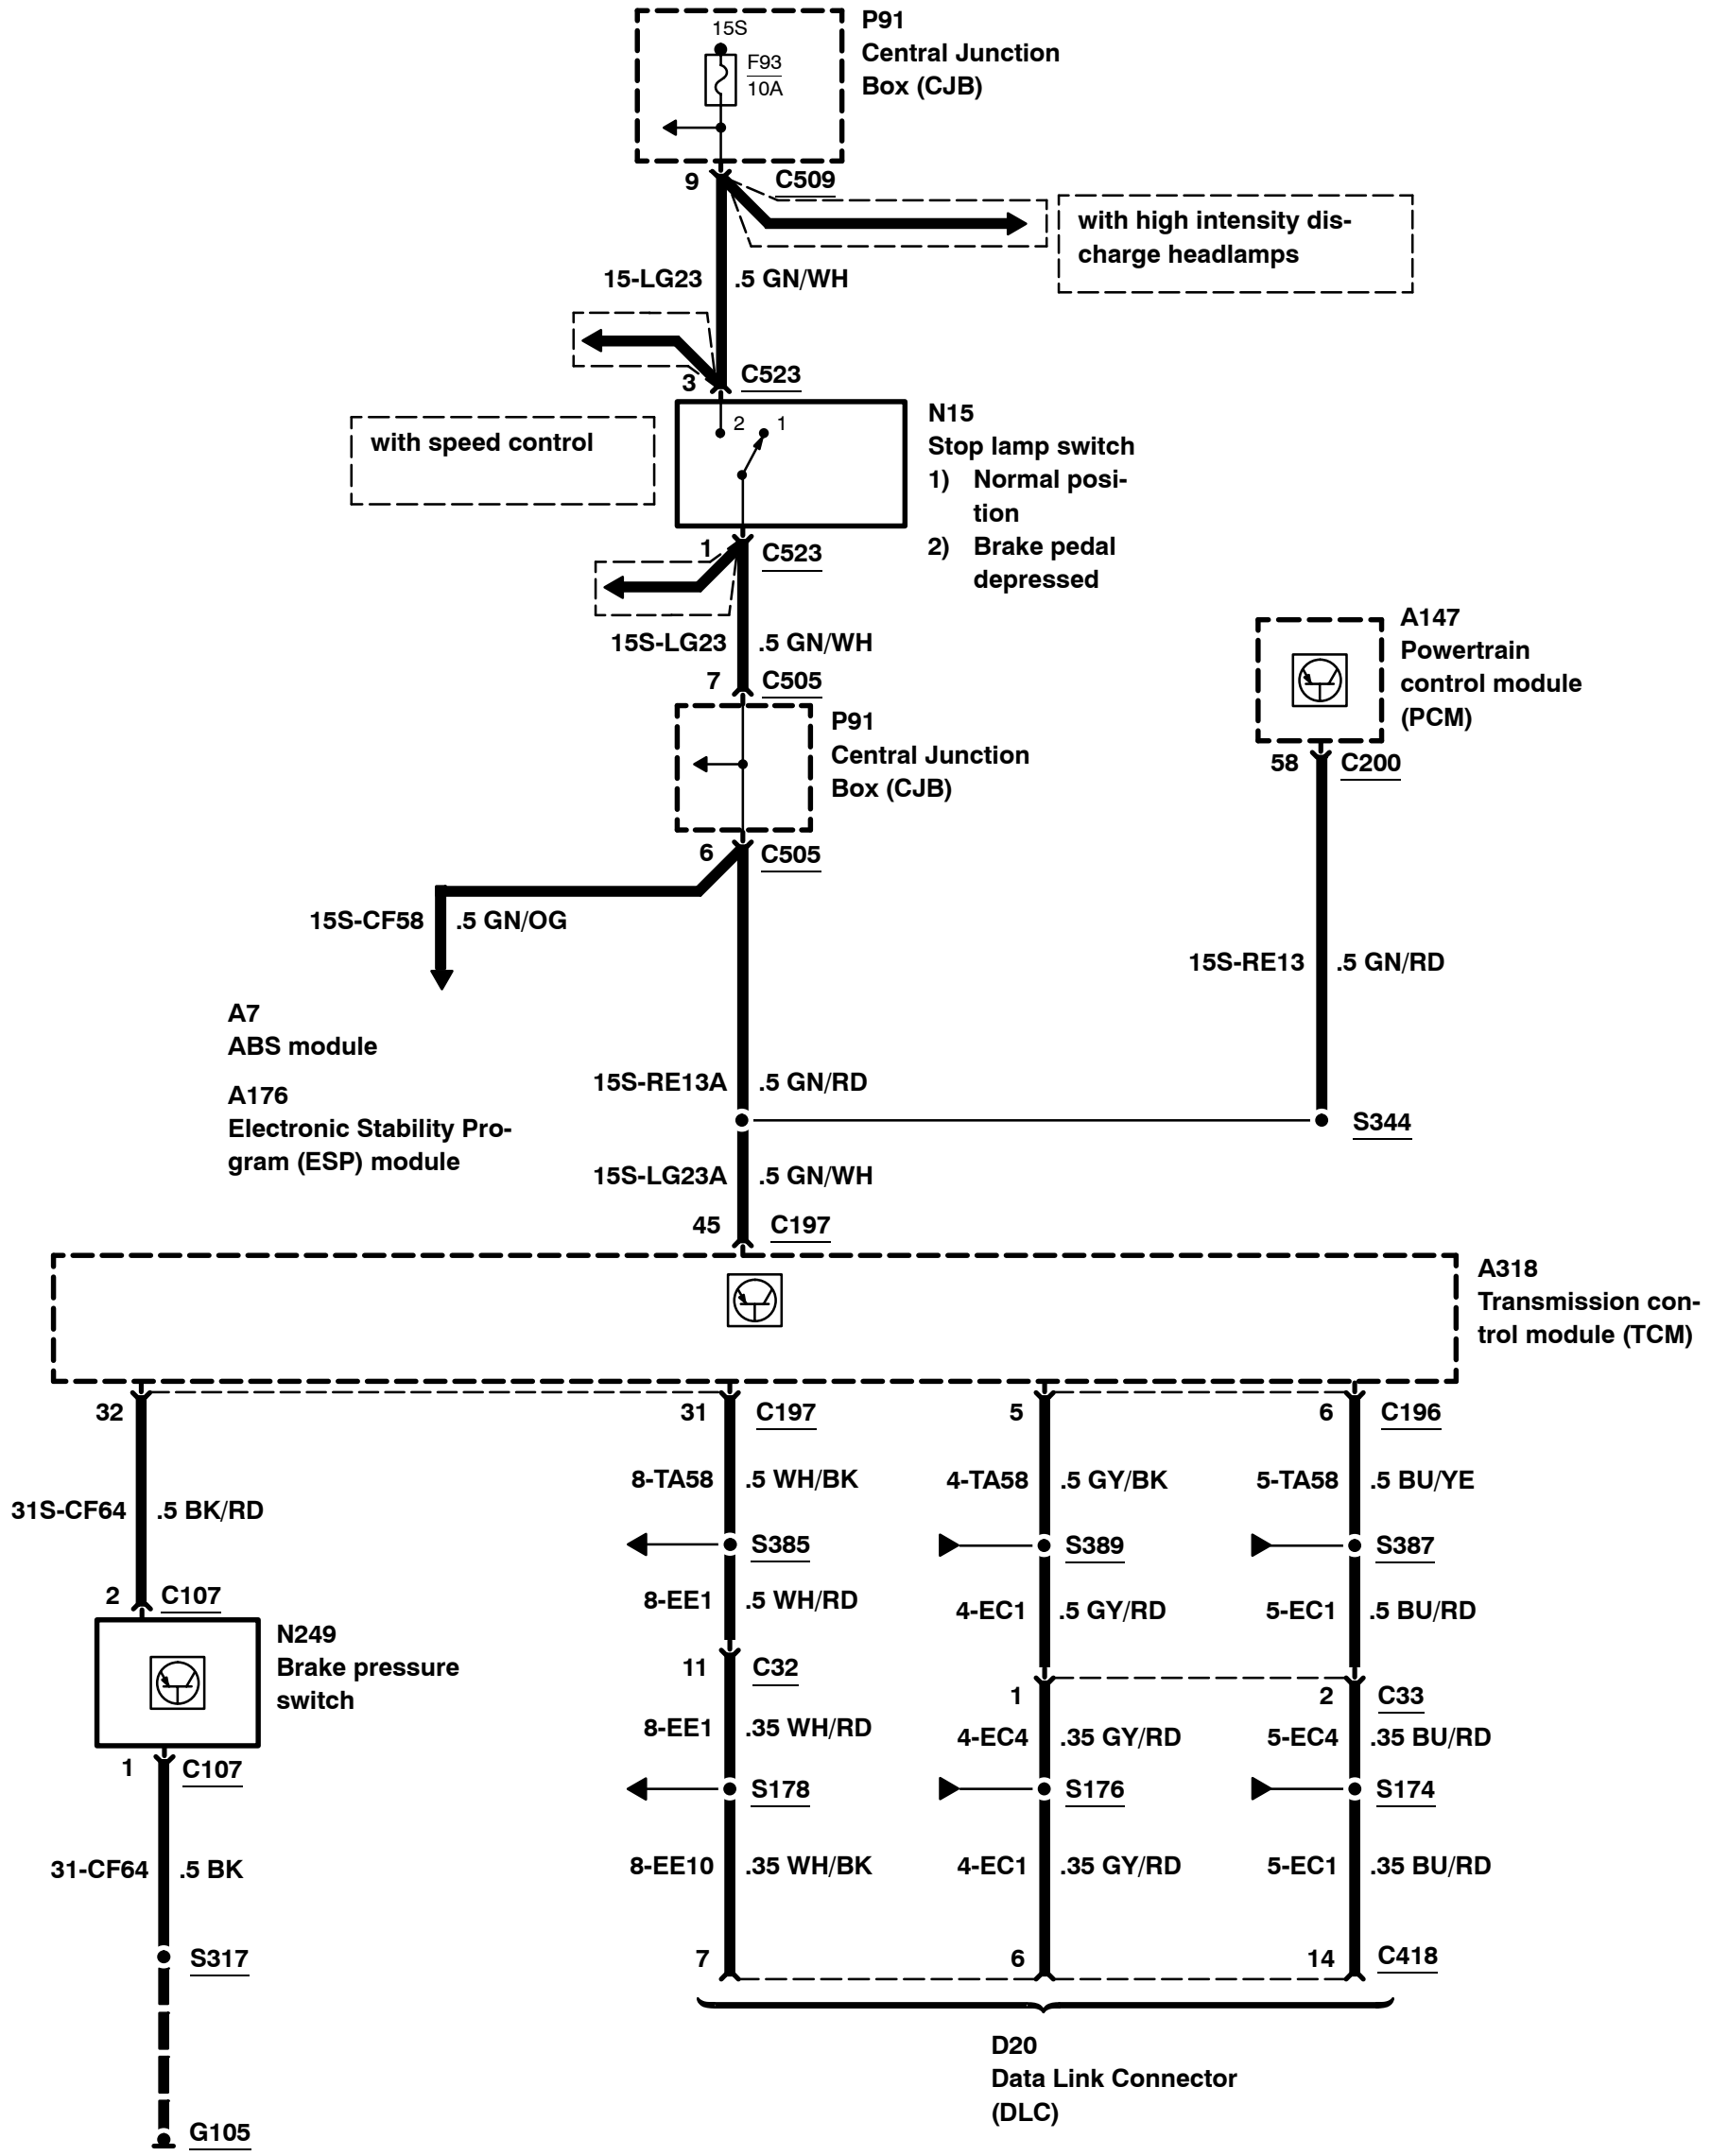

Automatic Transmission – 5–speed automatic transmission (5F31J)

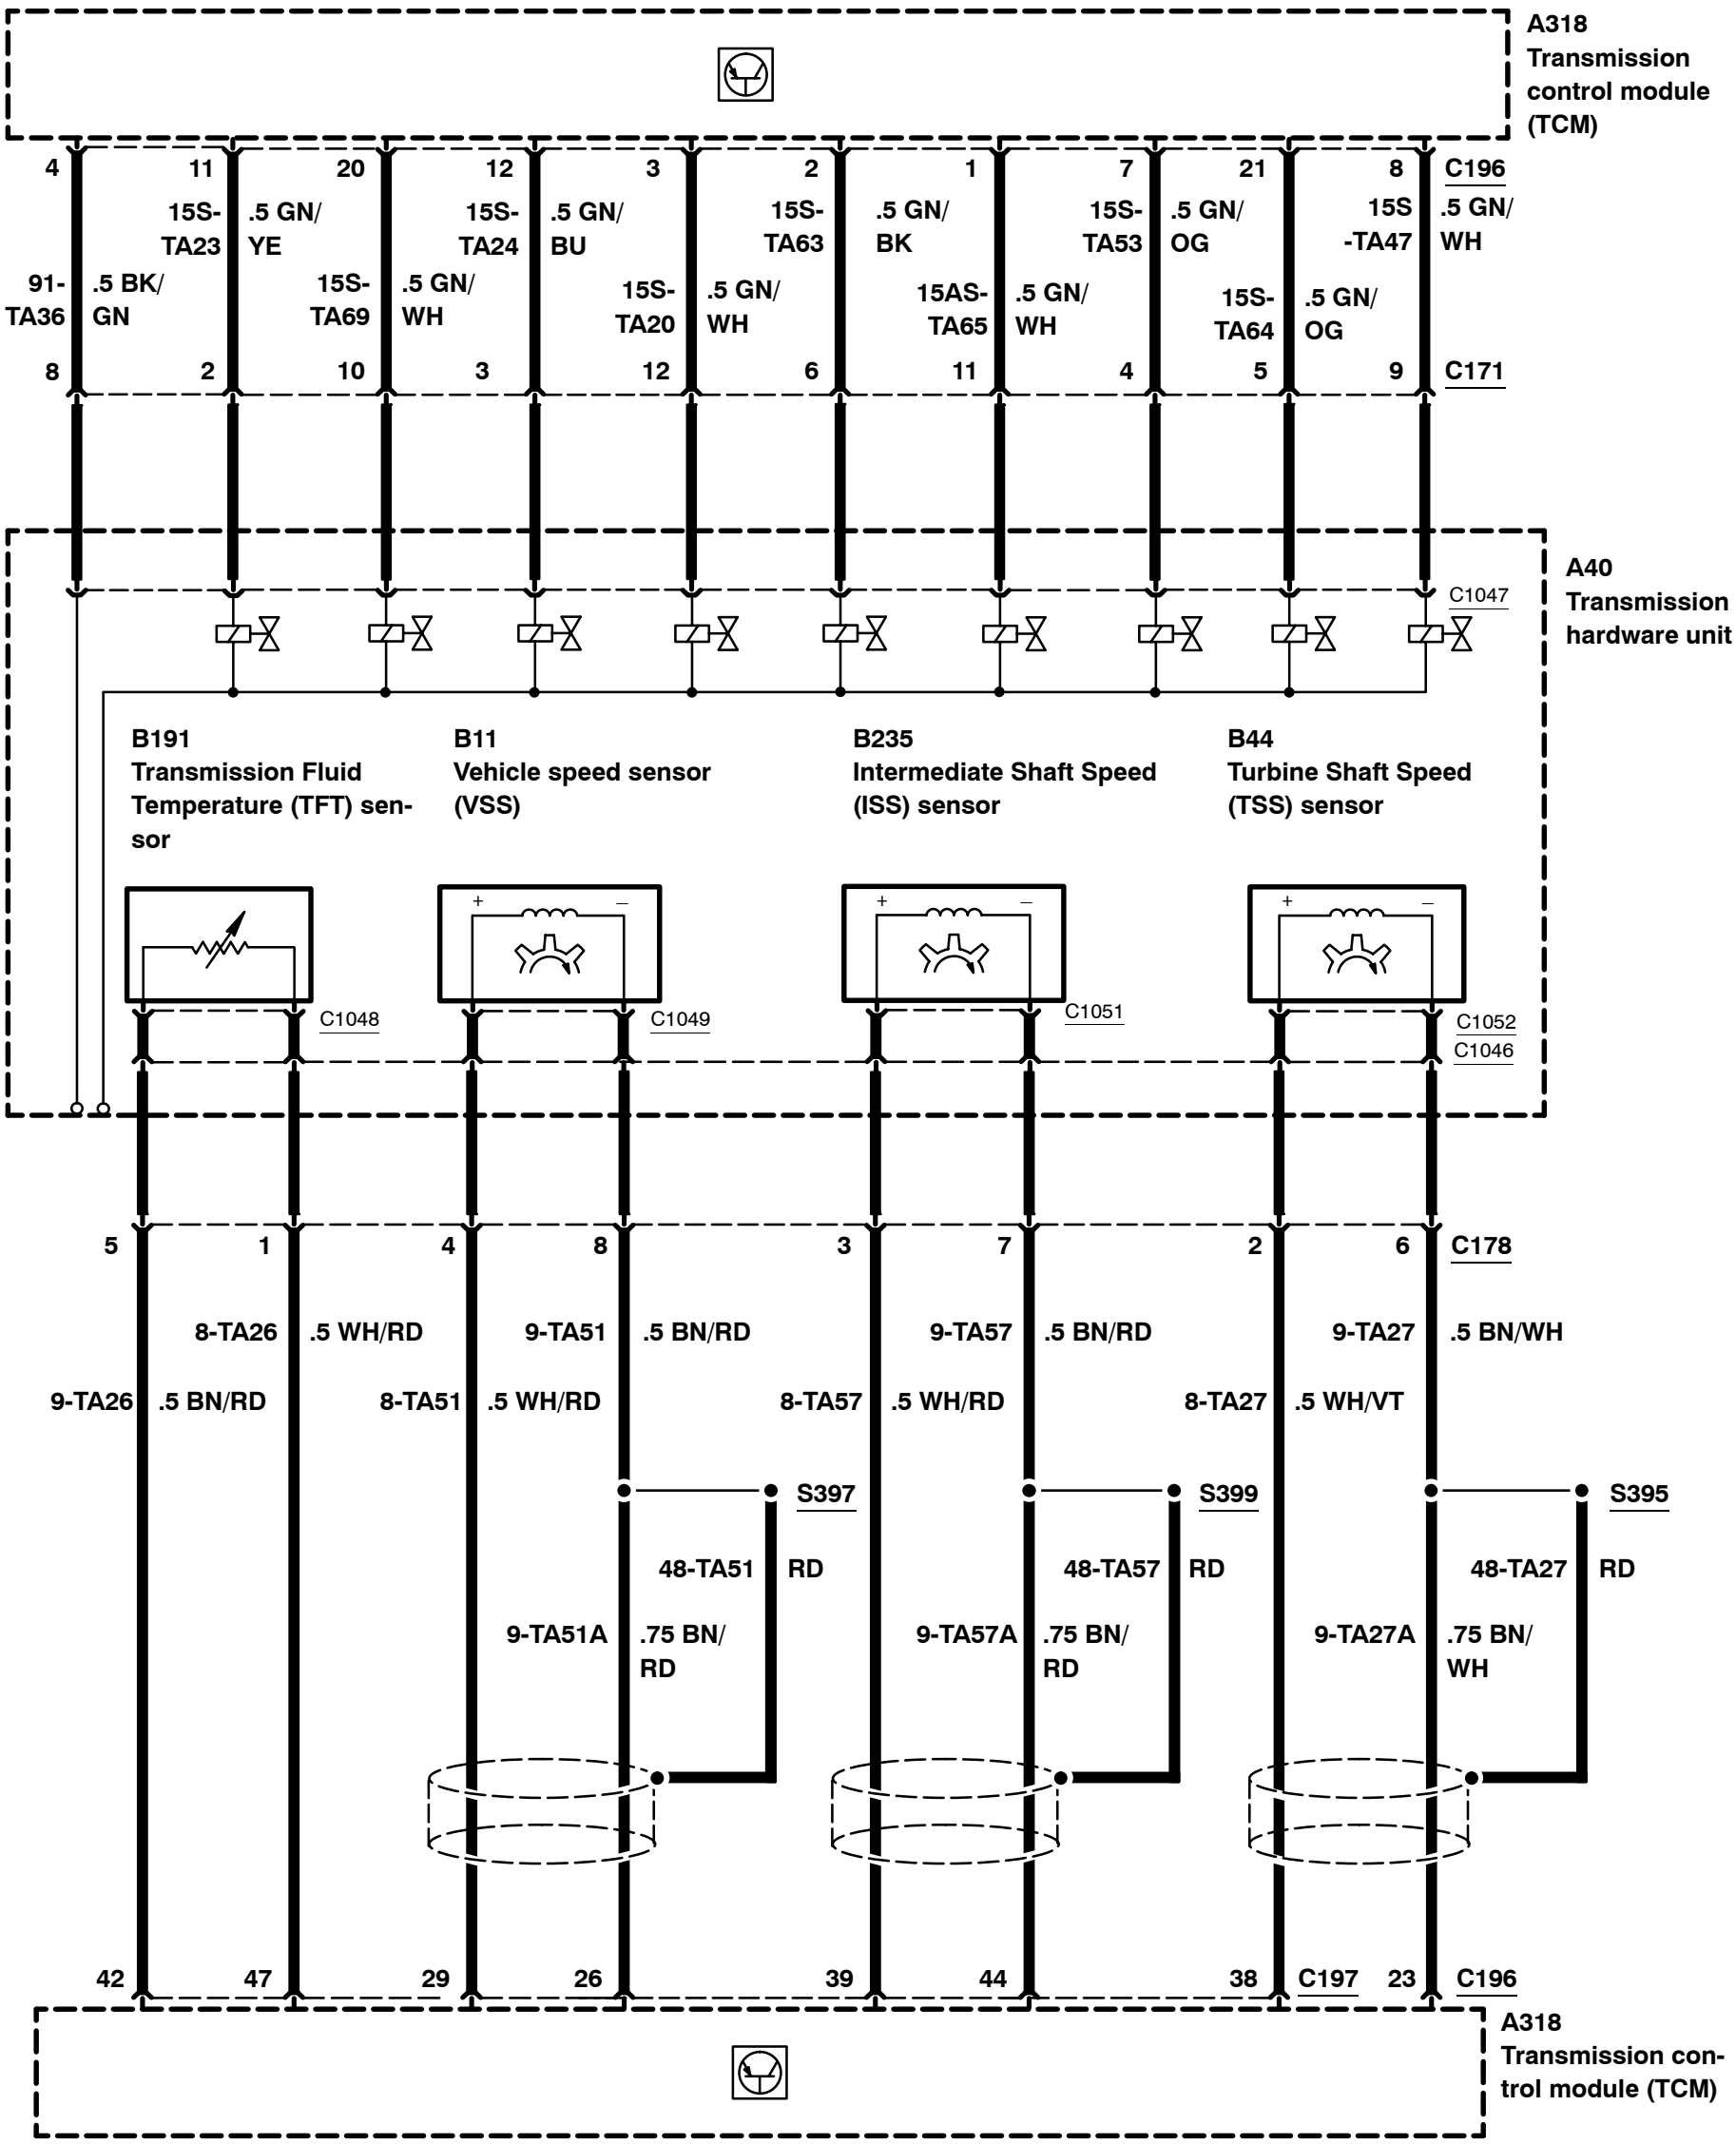


Vehicle Speed Control – Petrol engines, except 1.8L Duratec–SCi (MI4)

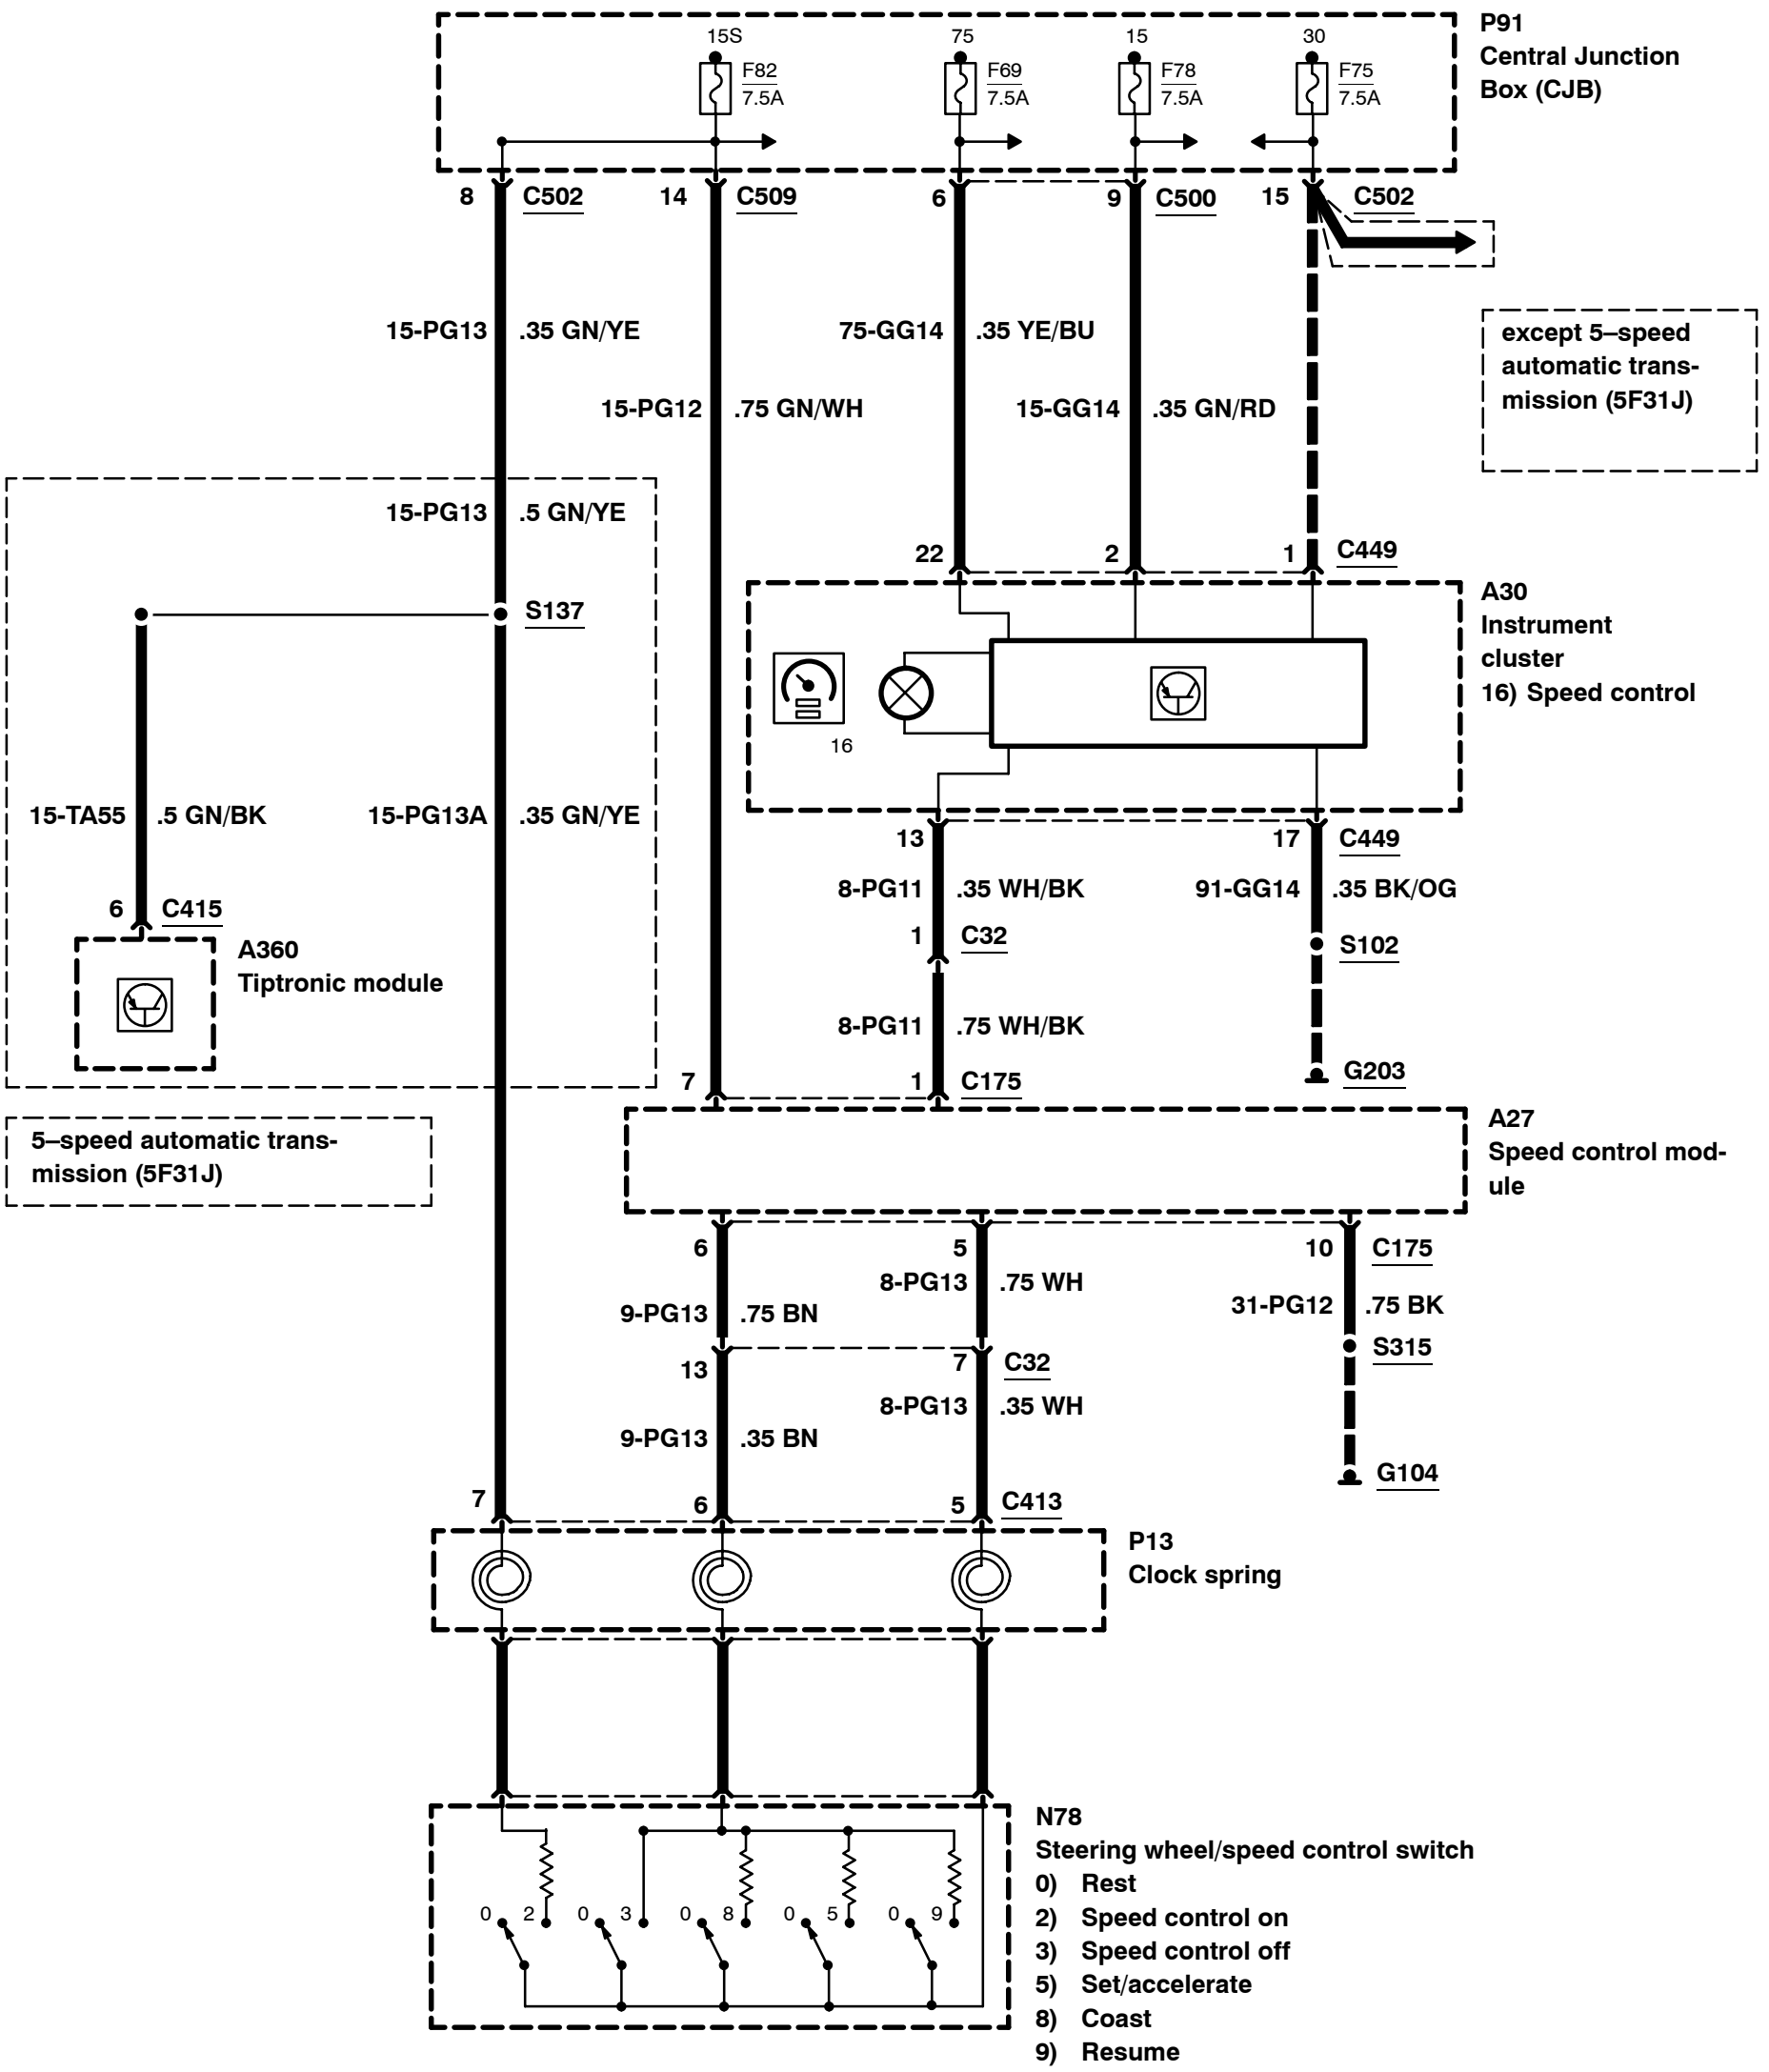


N78
Steering wheel/speed control switch

0) Rest
2) Speed control on
3) Speed control off
5) Set/accelerate
8) Coast
9) Resume


Vehicle Speed Control – Petrol engines, except 1.8L Duratec–SCi (MI4)

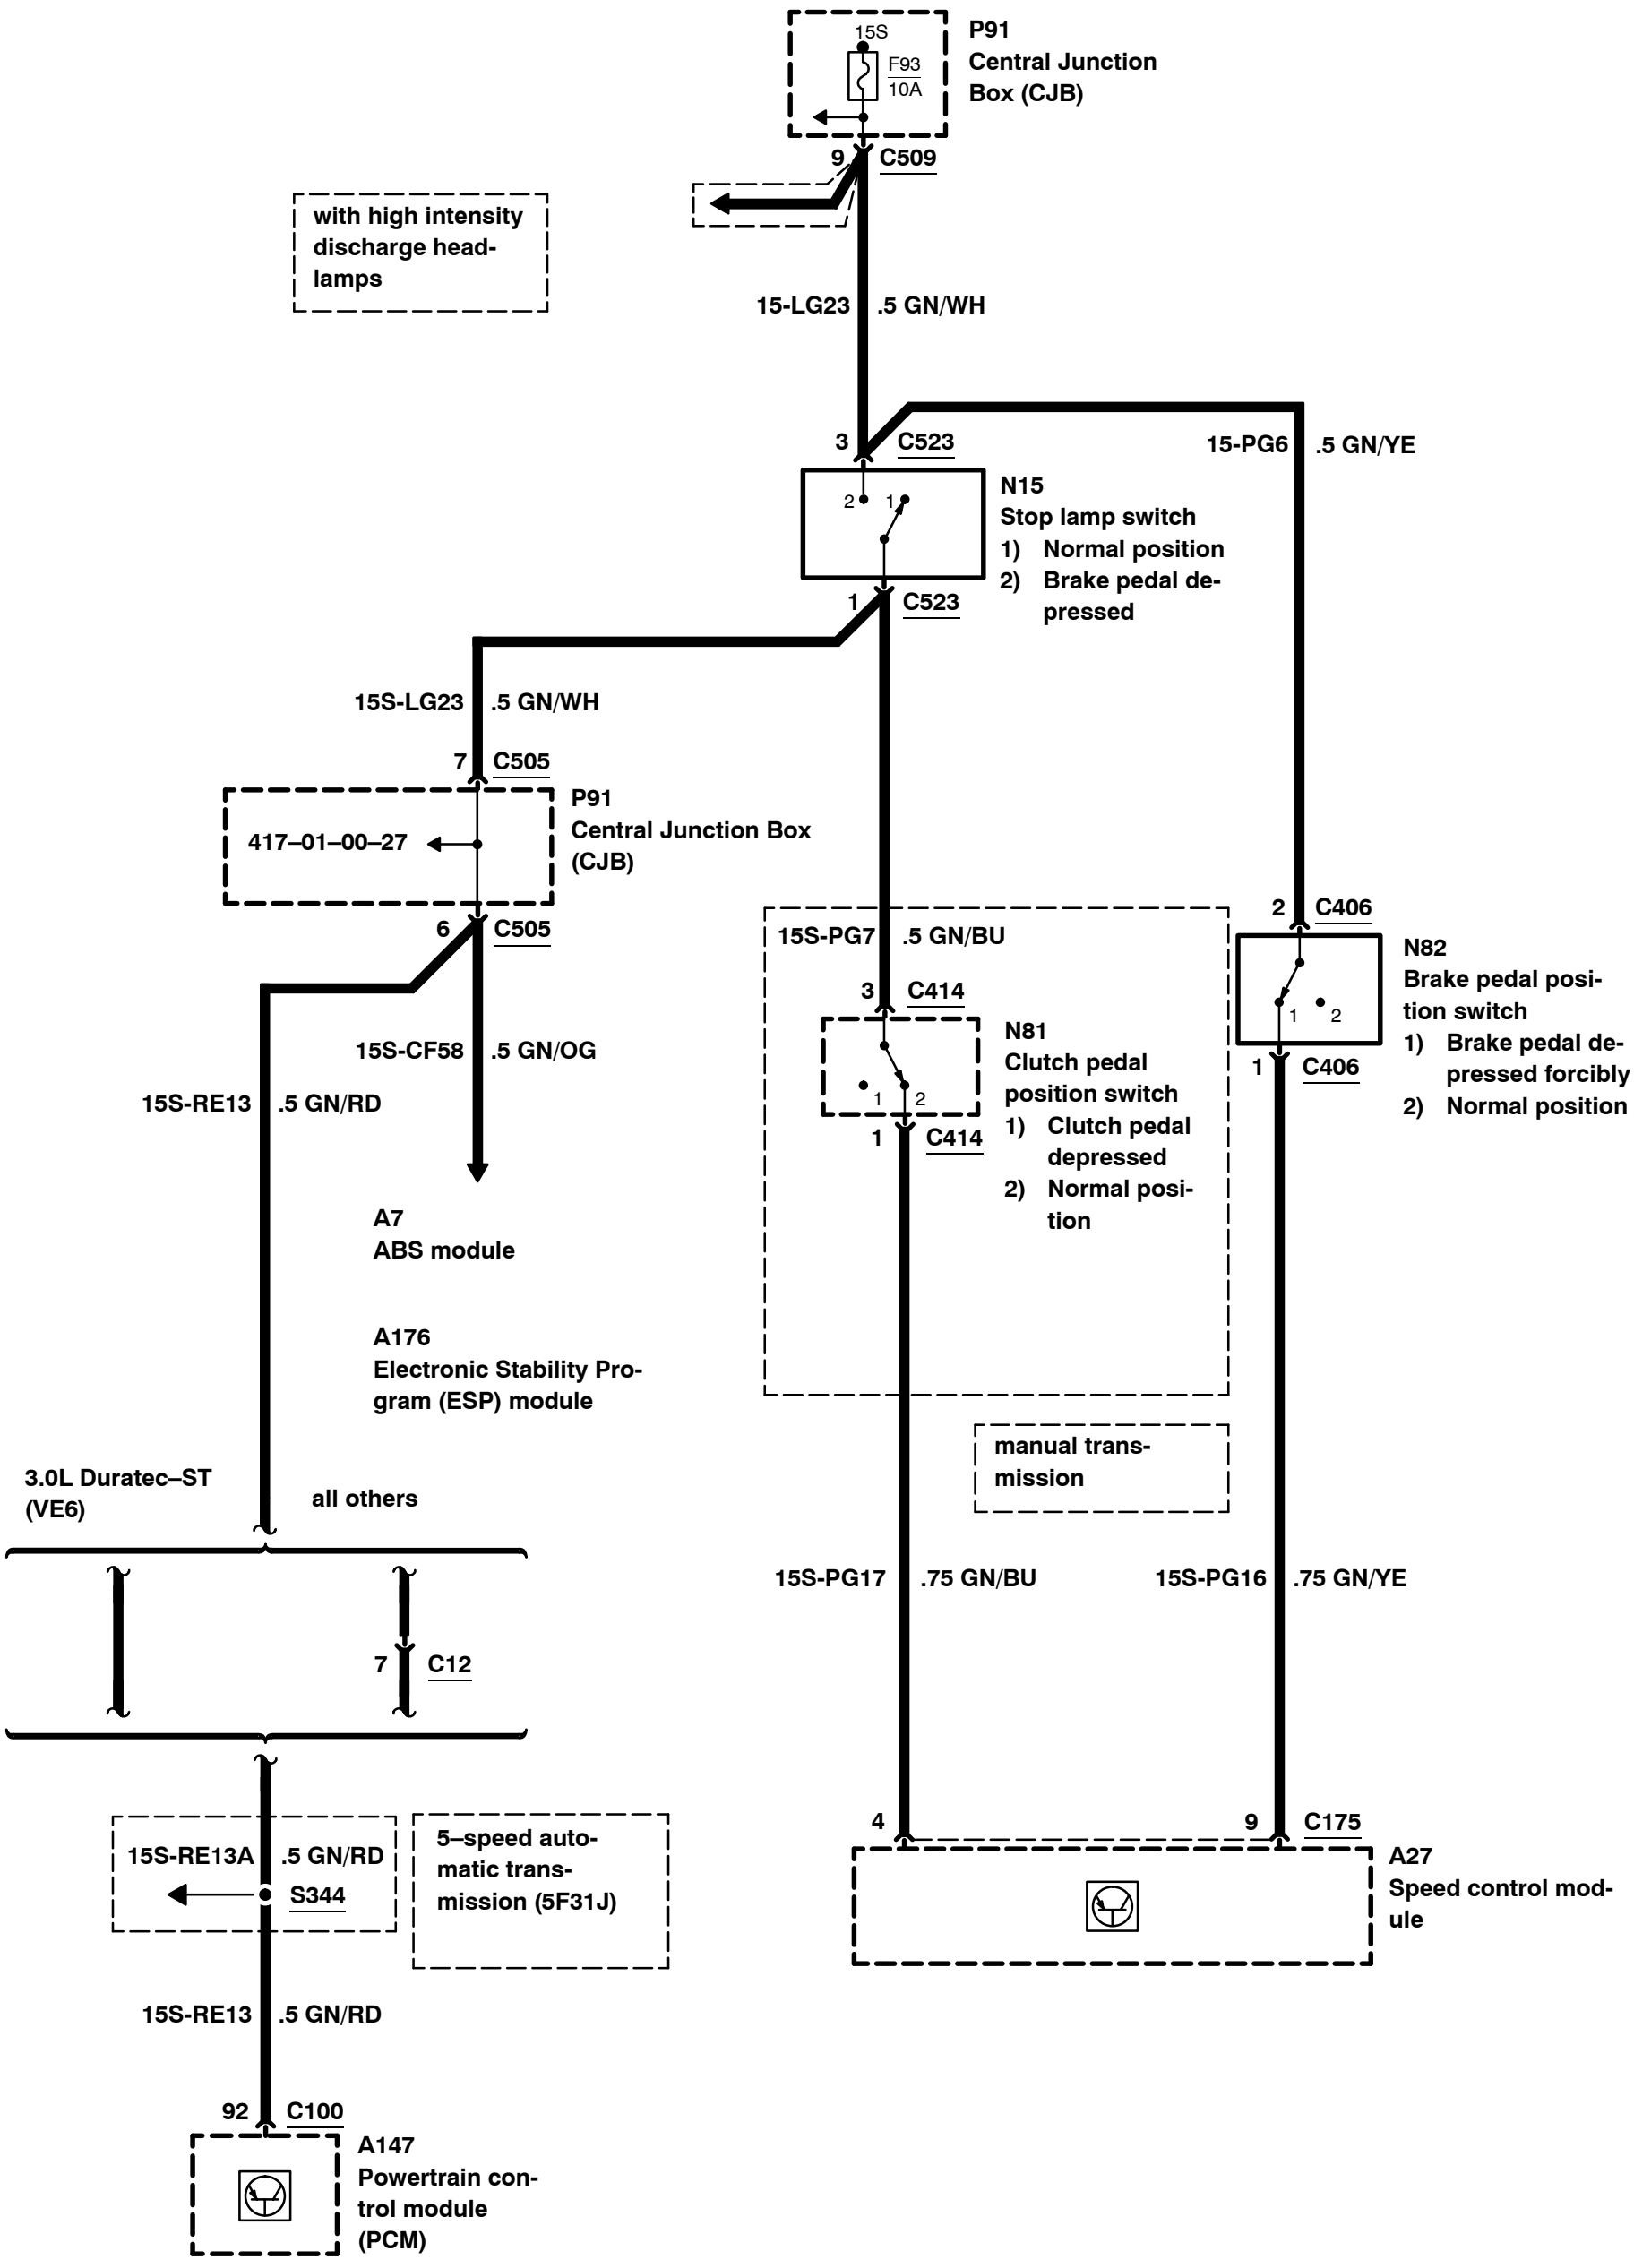


Vehicle Speed Control – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)

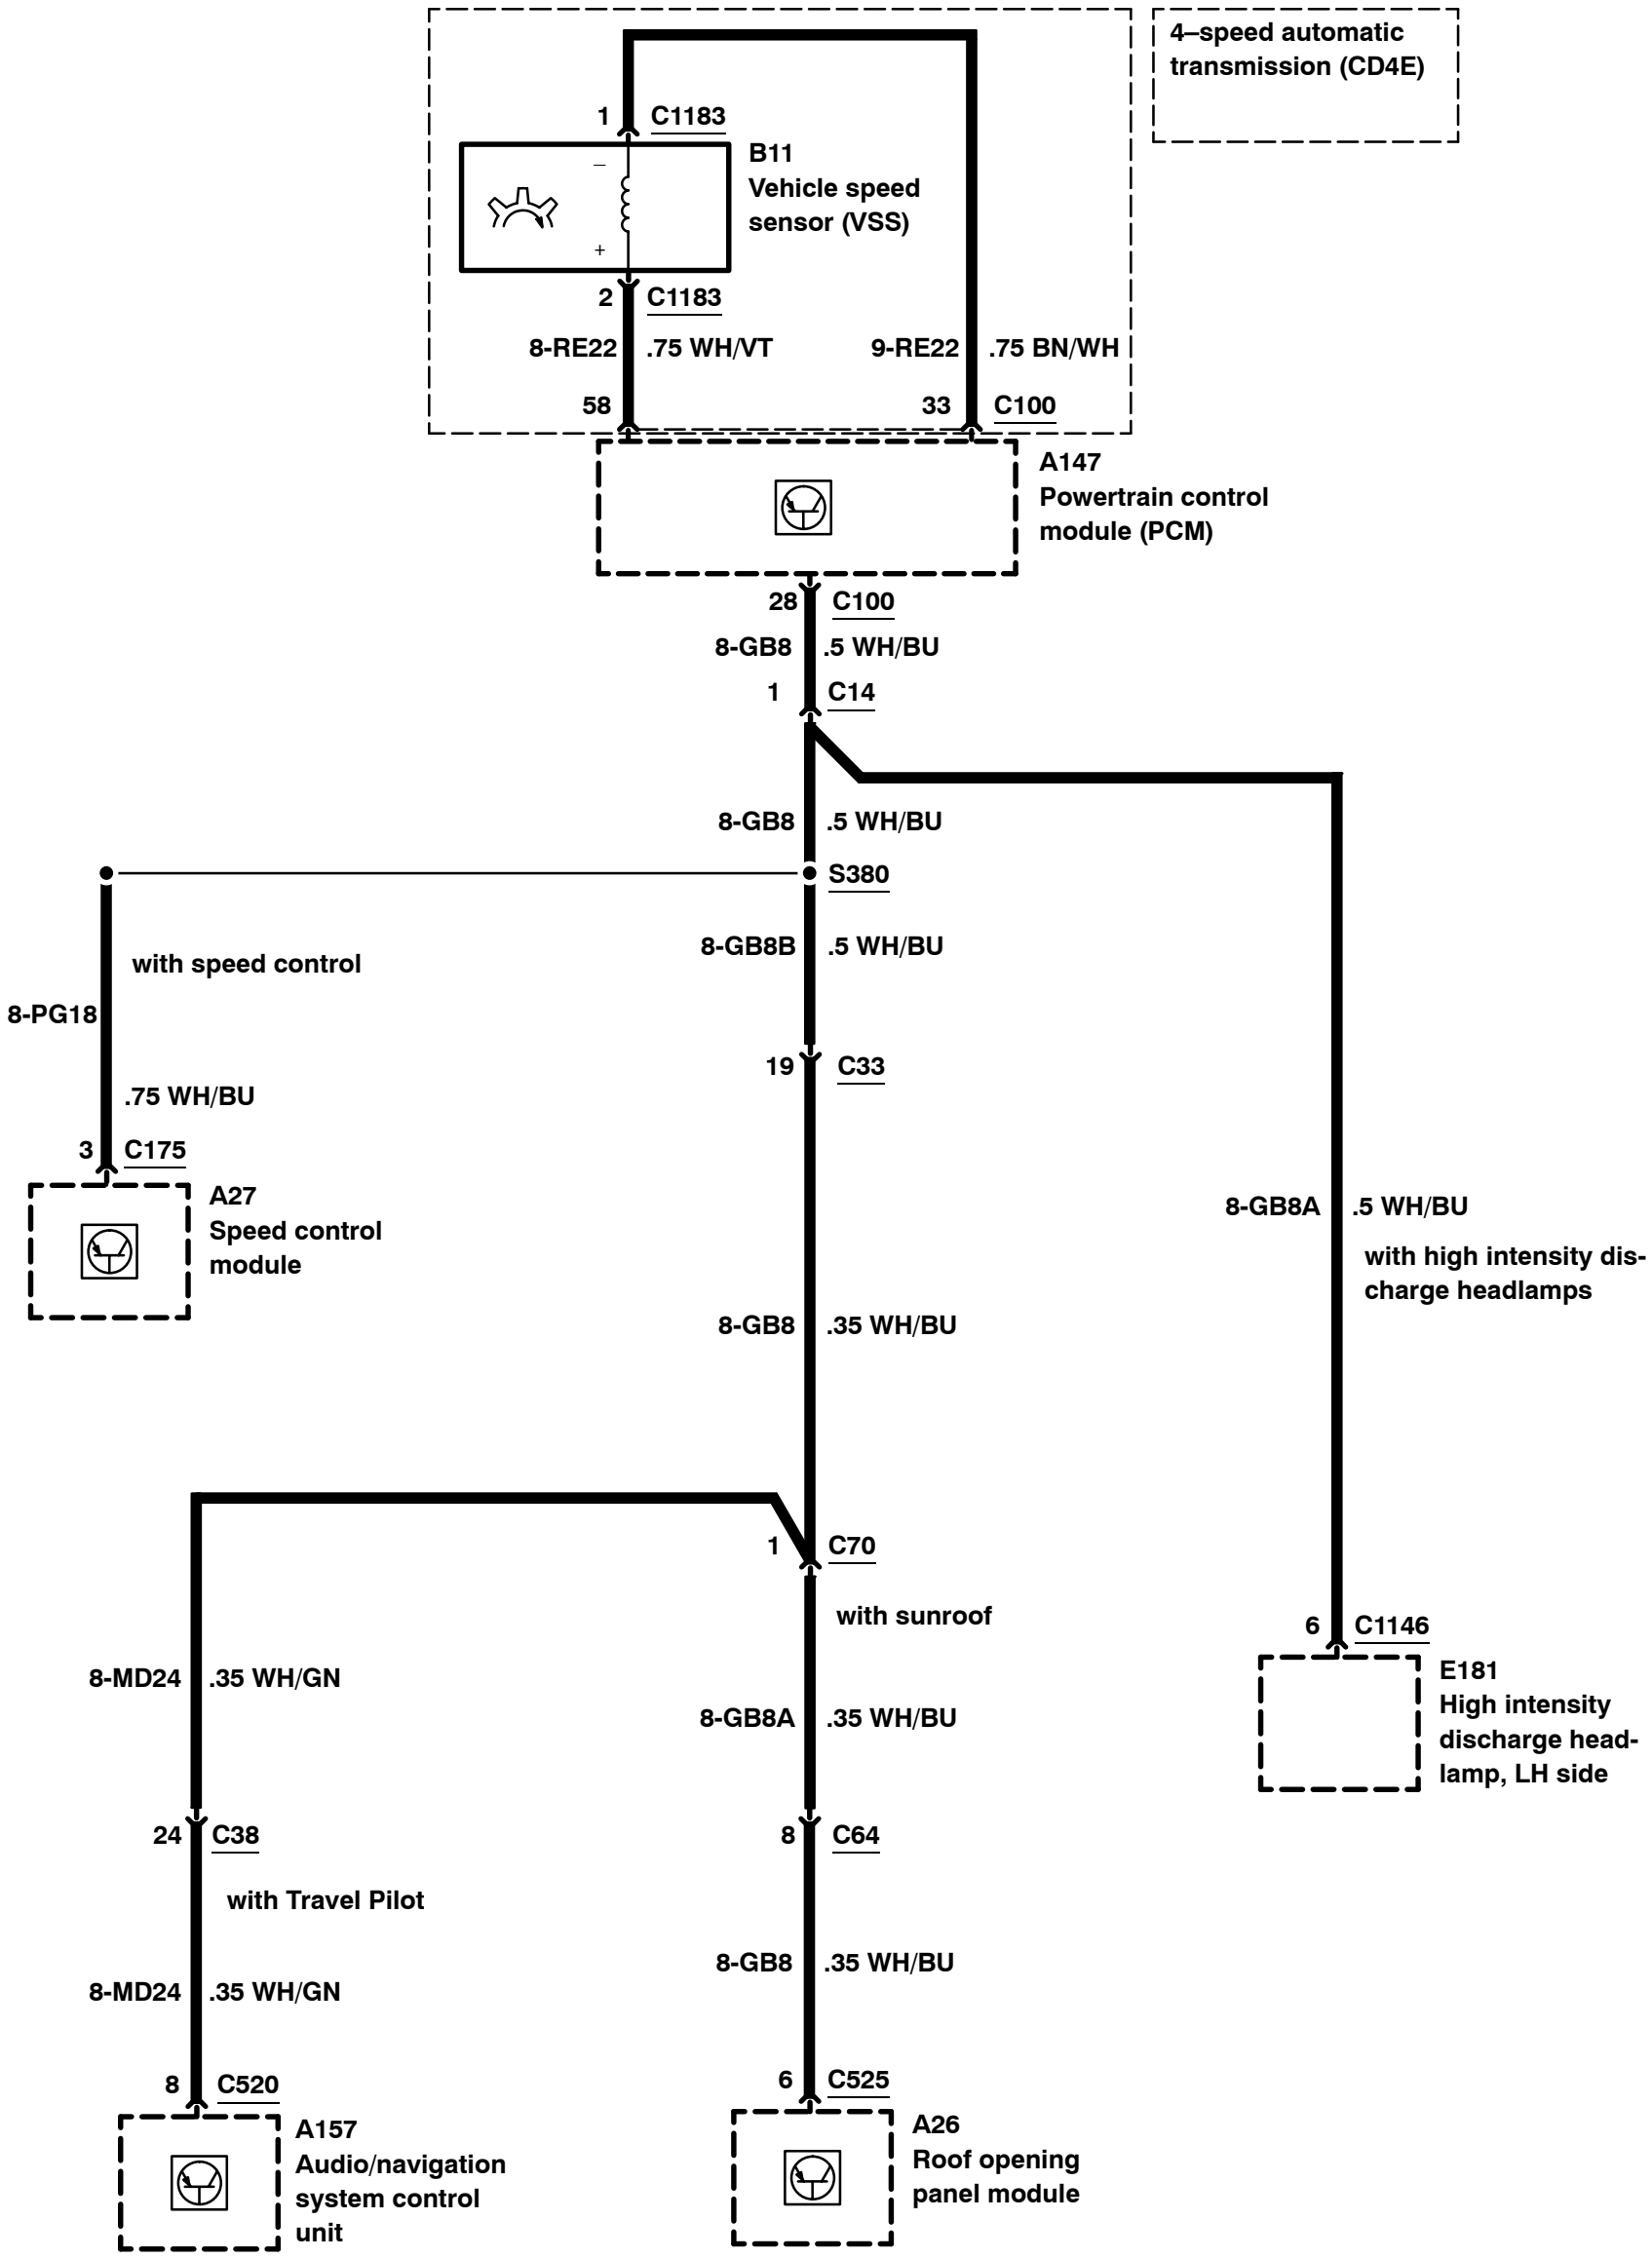


Vehicle Speed Control – 3.0L Duratec–ST (VE6)

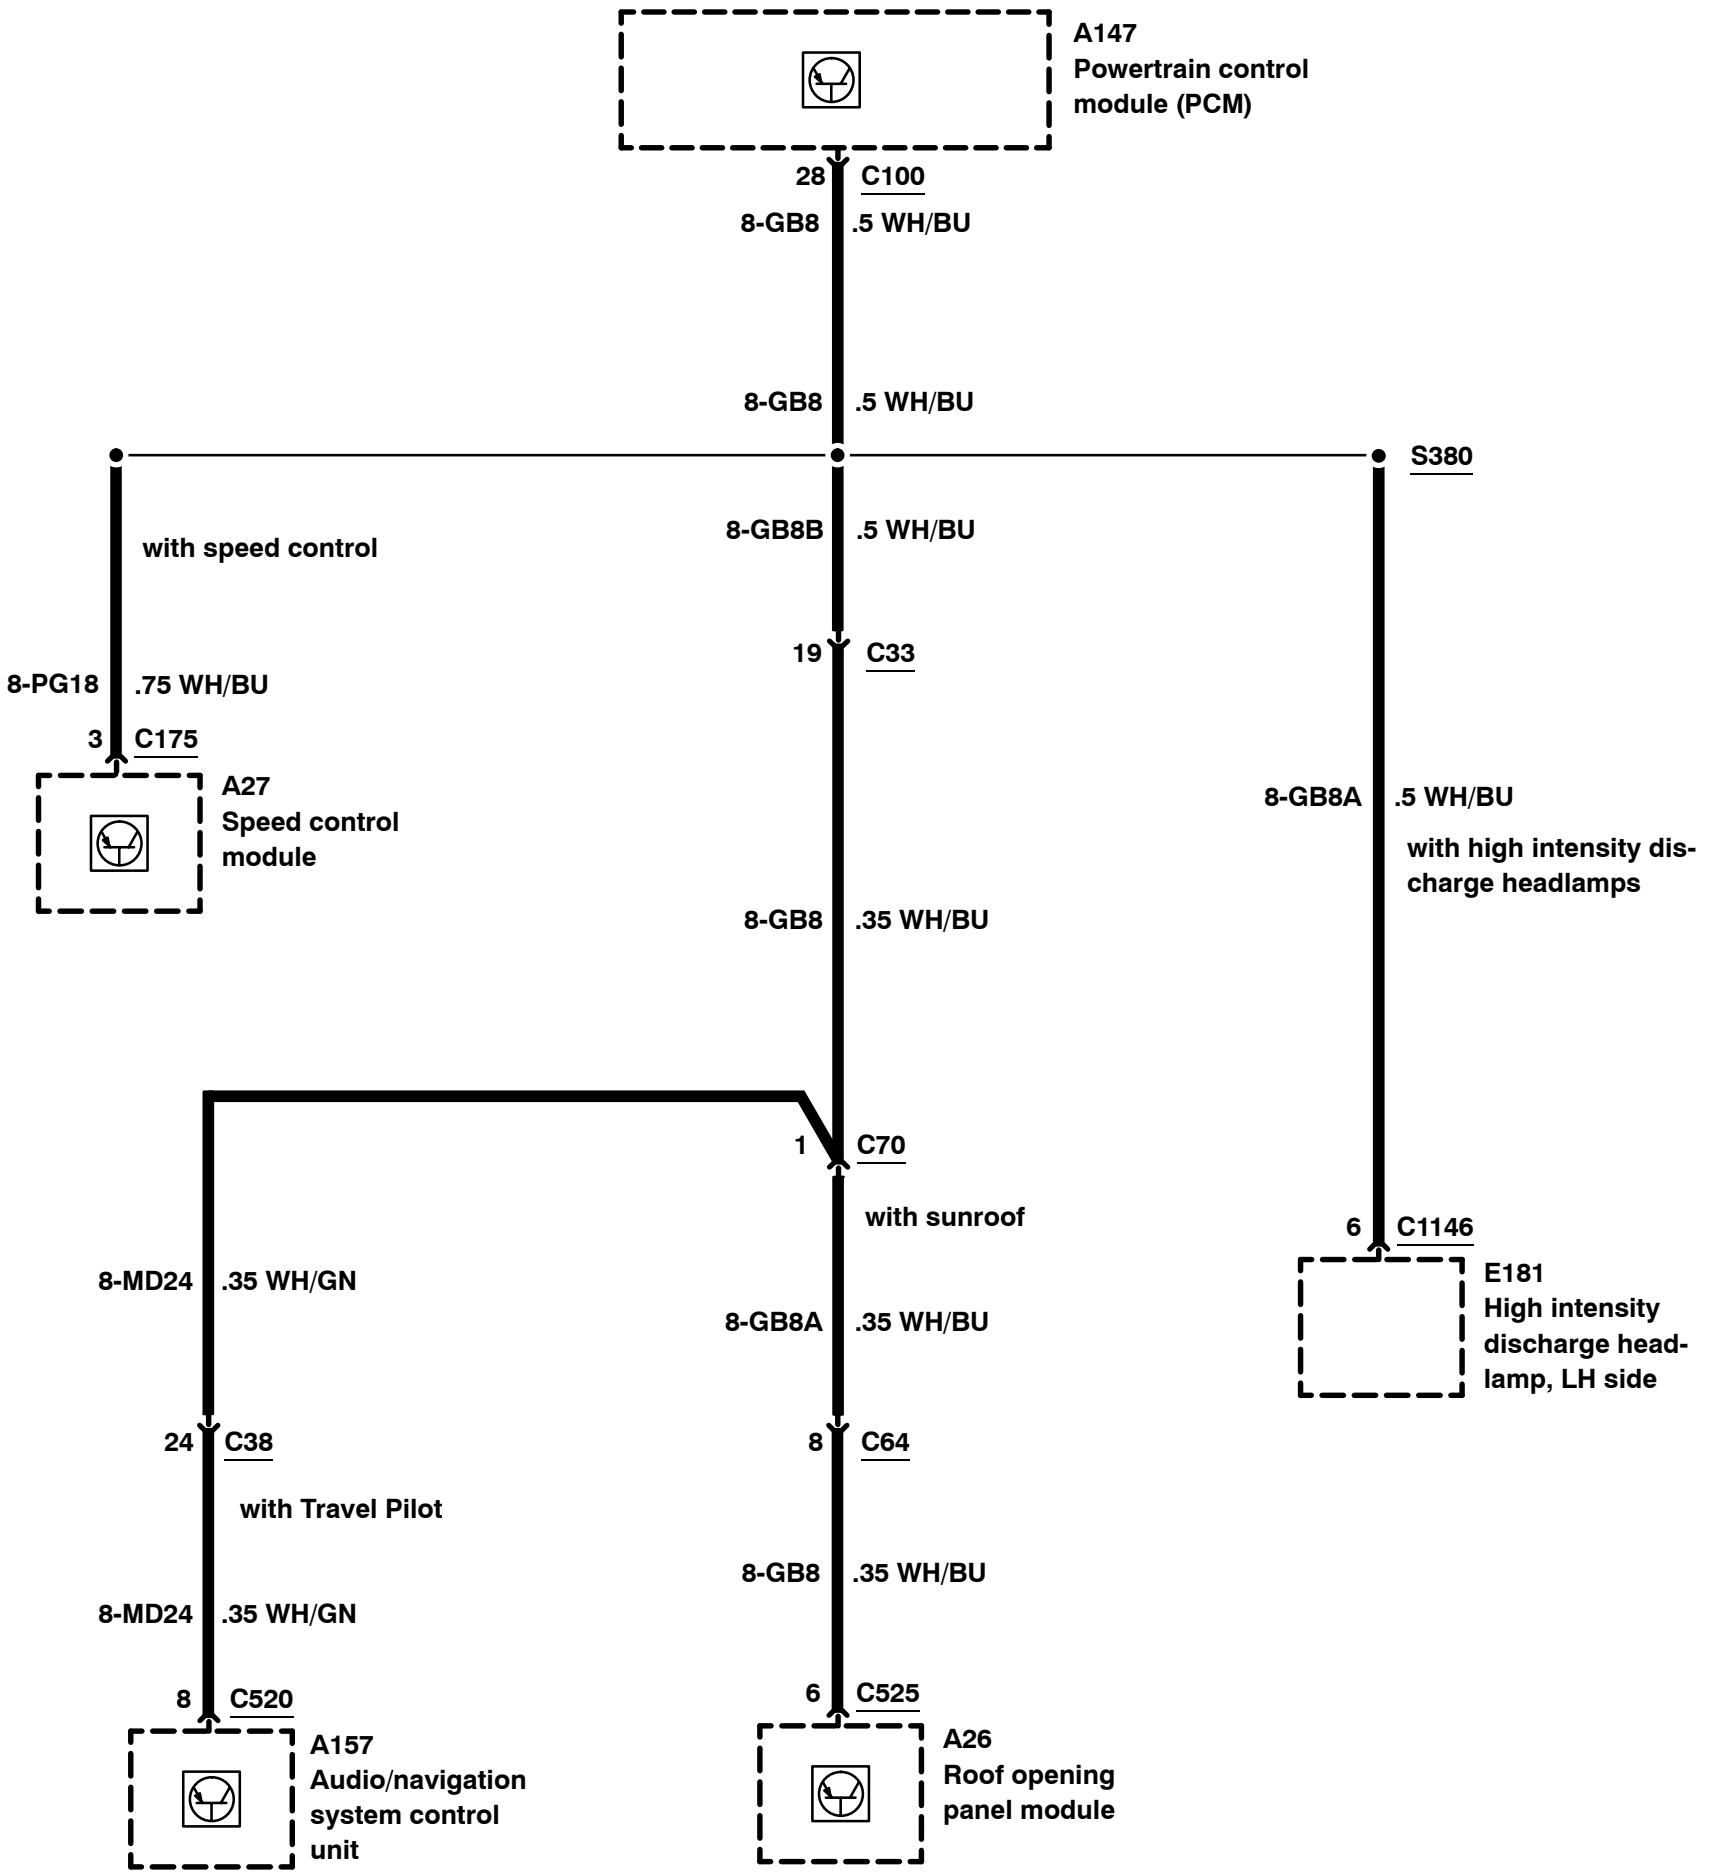


Vehicle Speed Control – 1.8L Duratec–SCi (MI4), before 04/2004

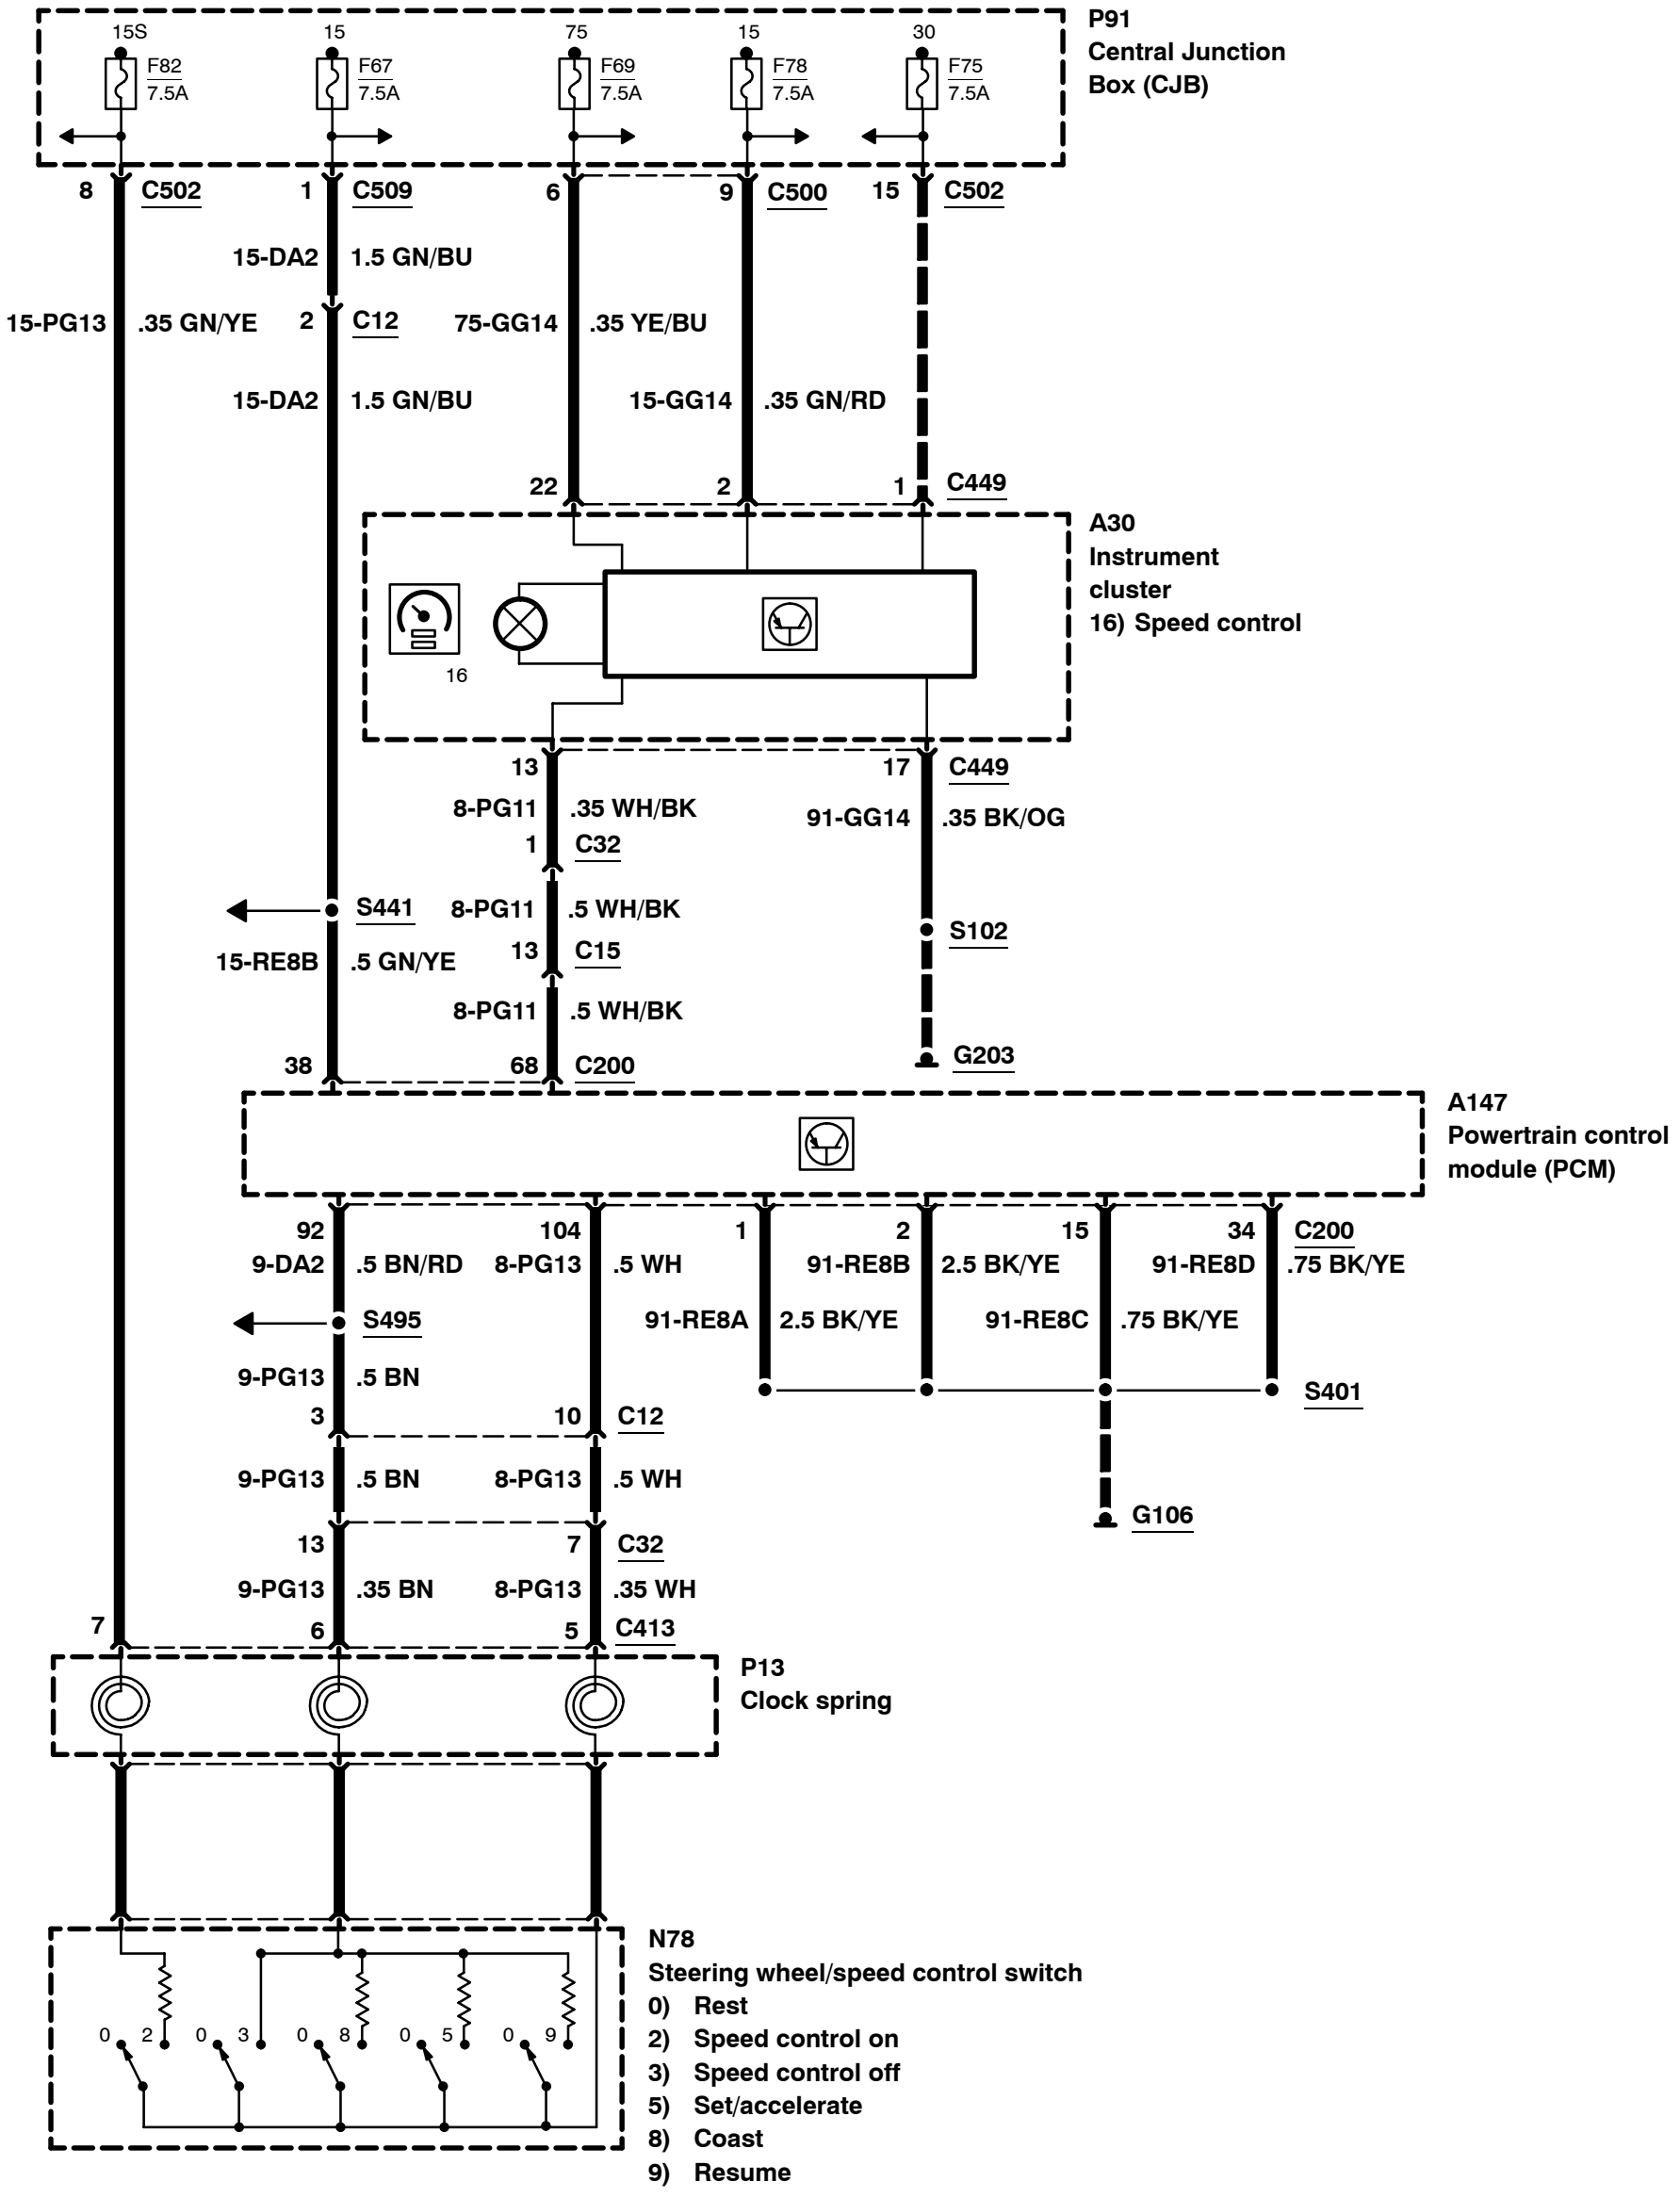


Vehicle Speed Control – 1.8L Duratec–SCi (MI4), as of 04/2004

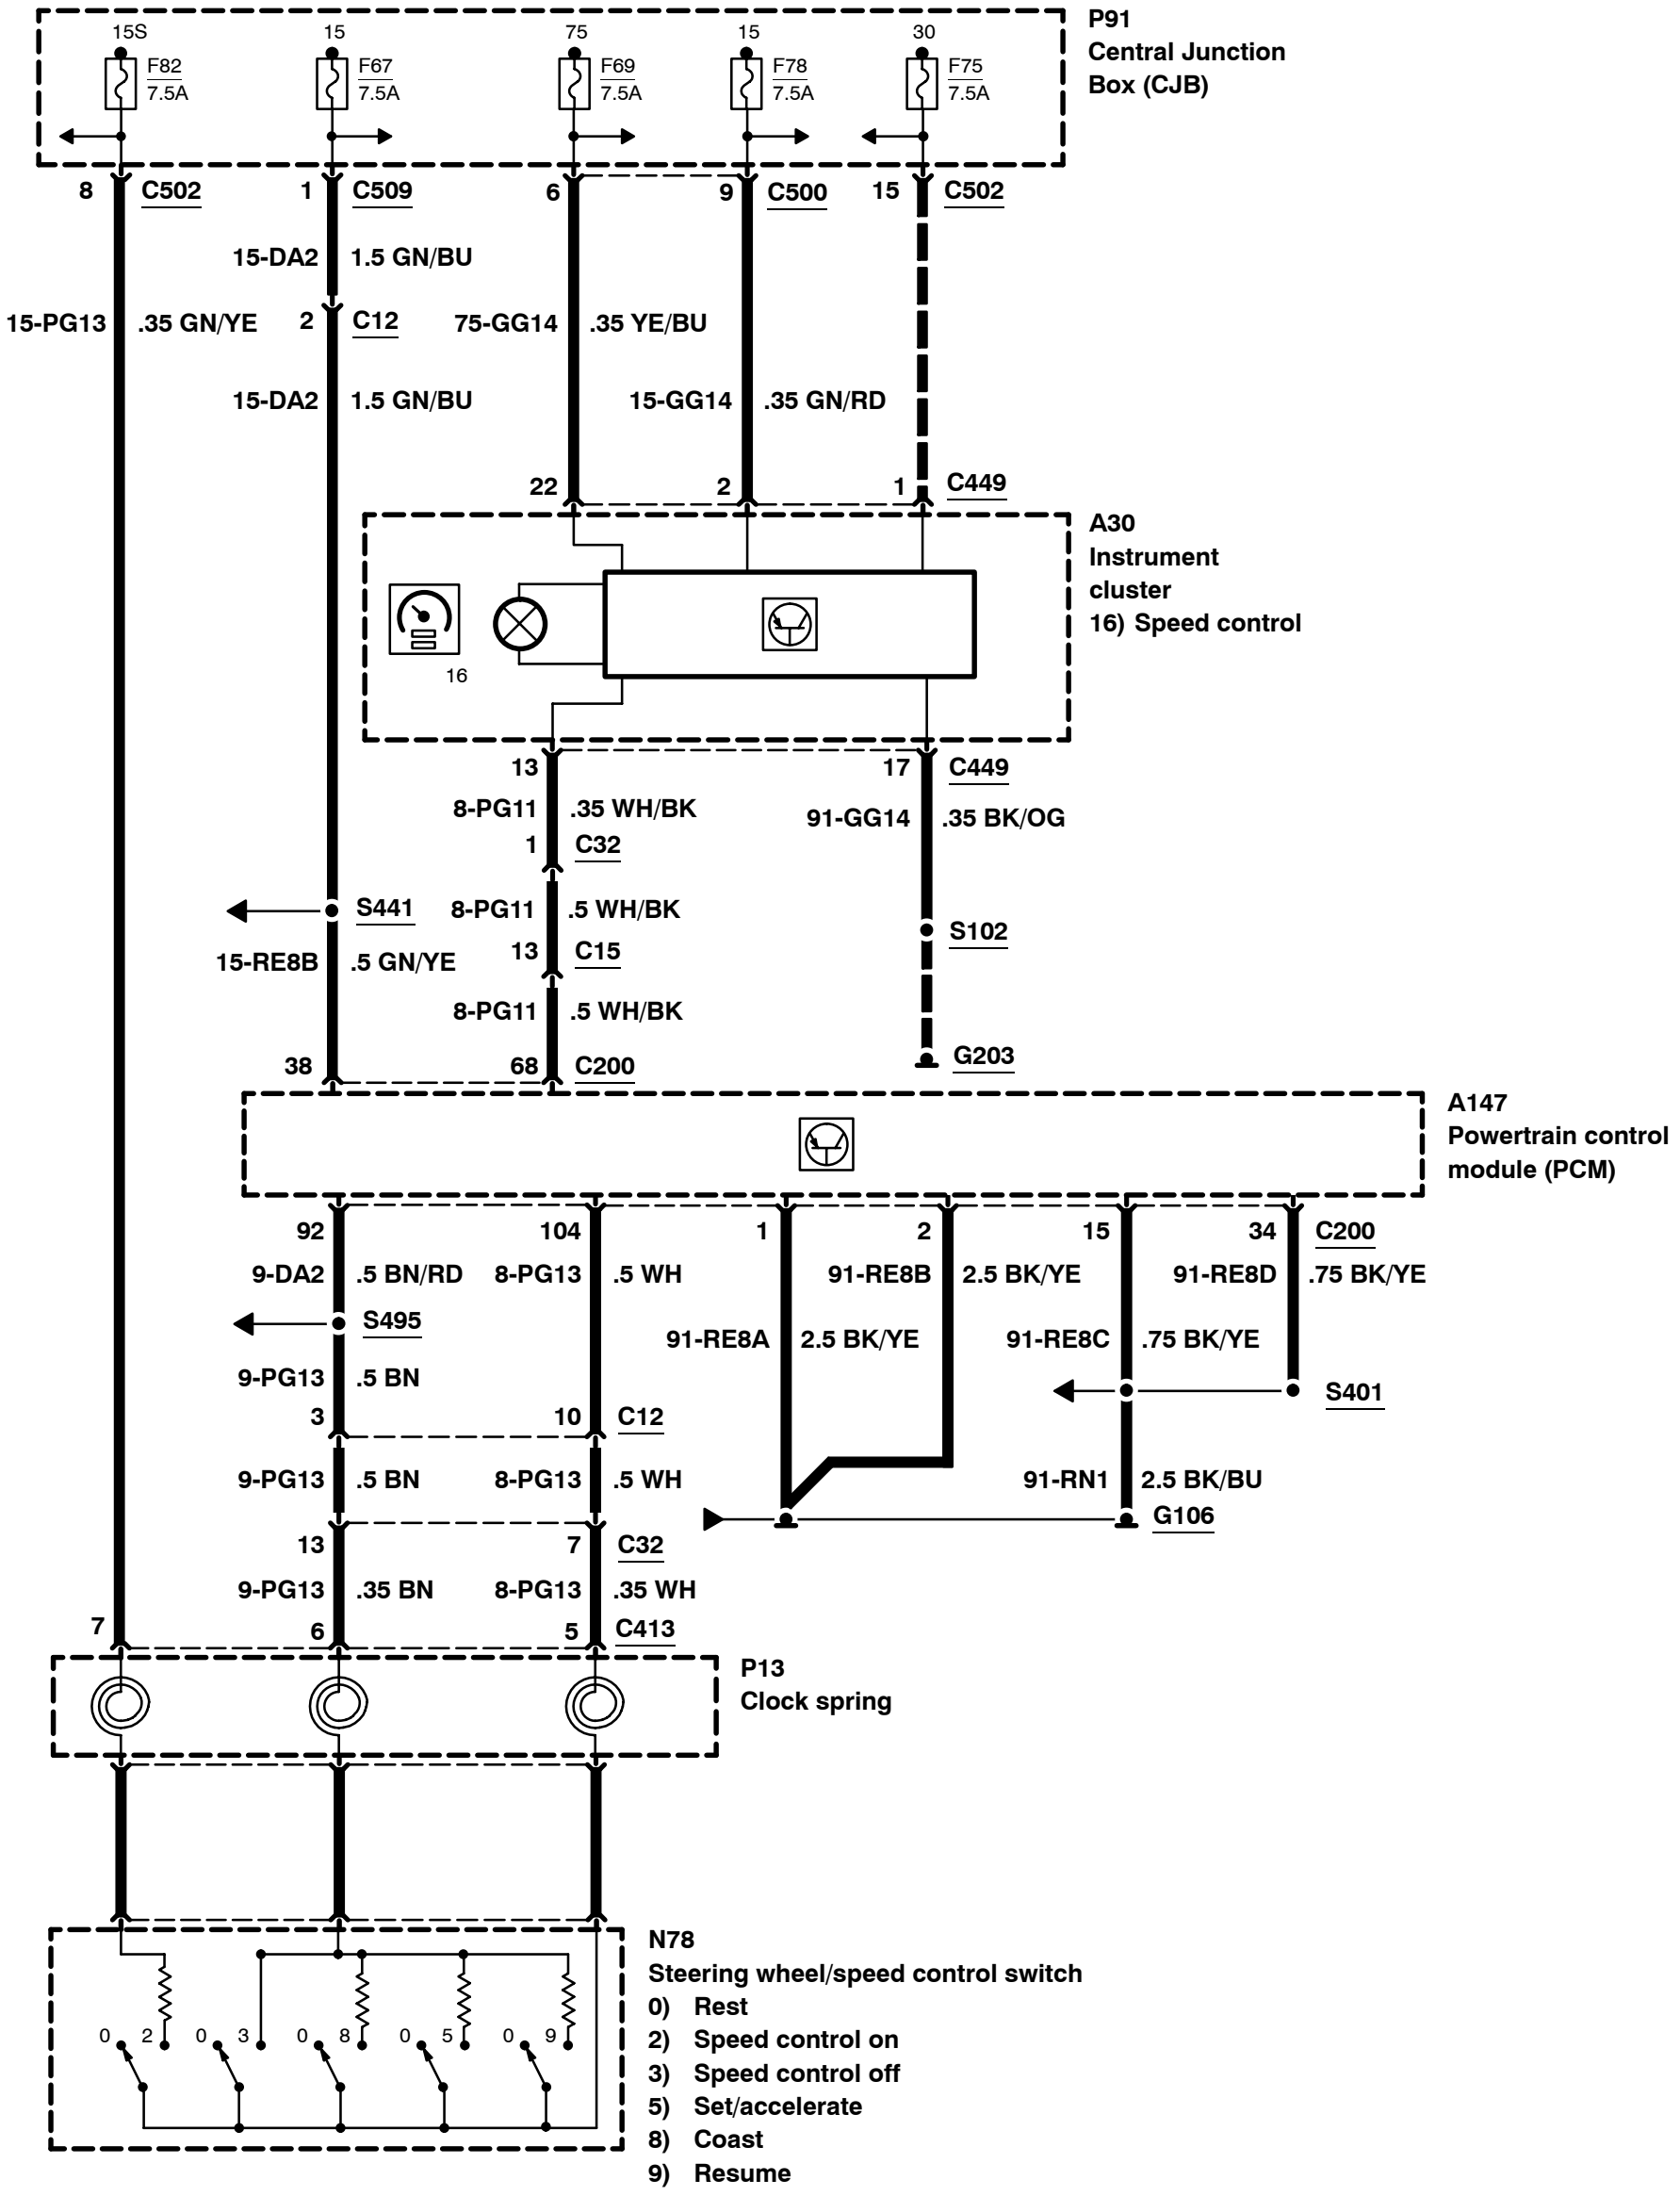


Vehicle Speed Control – 1.8L Duratec–SCi (MI4)

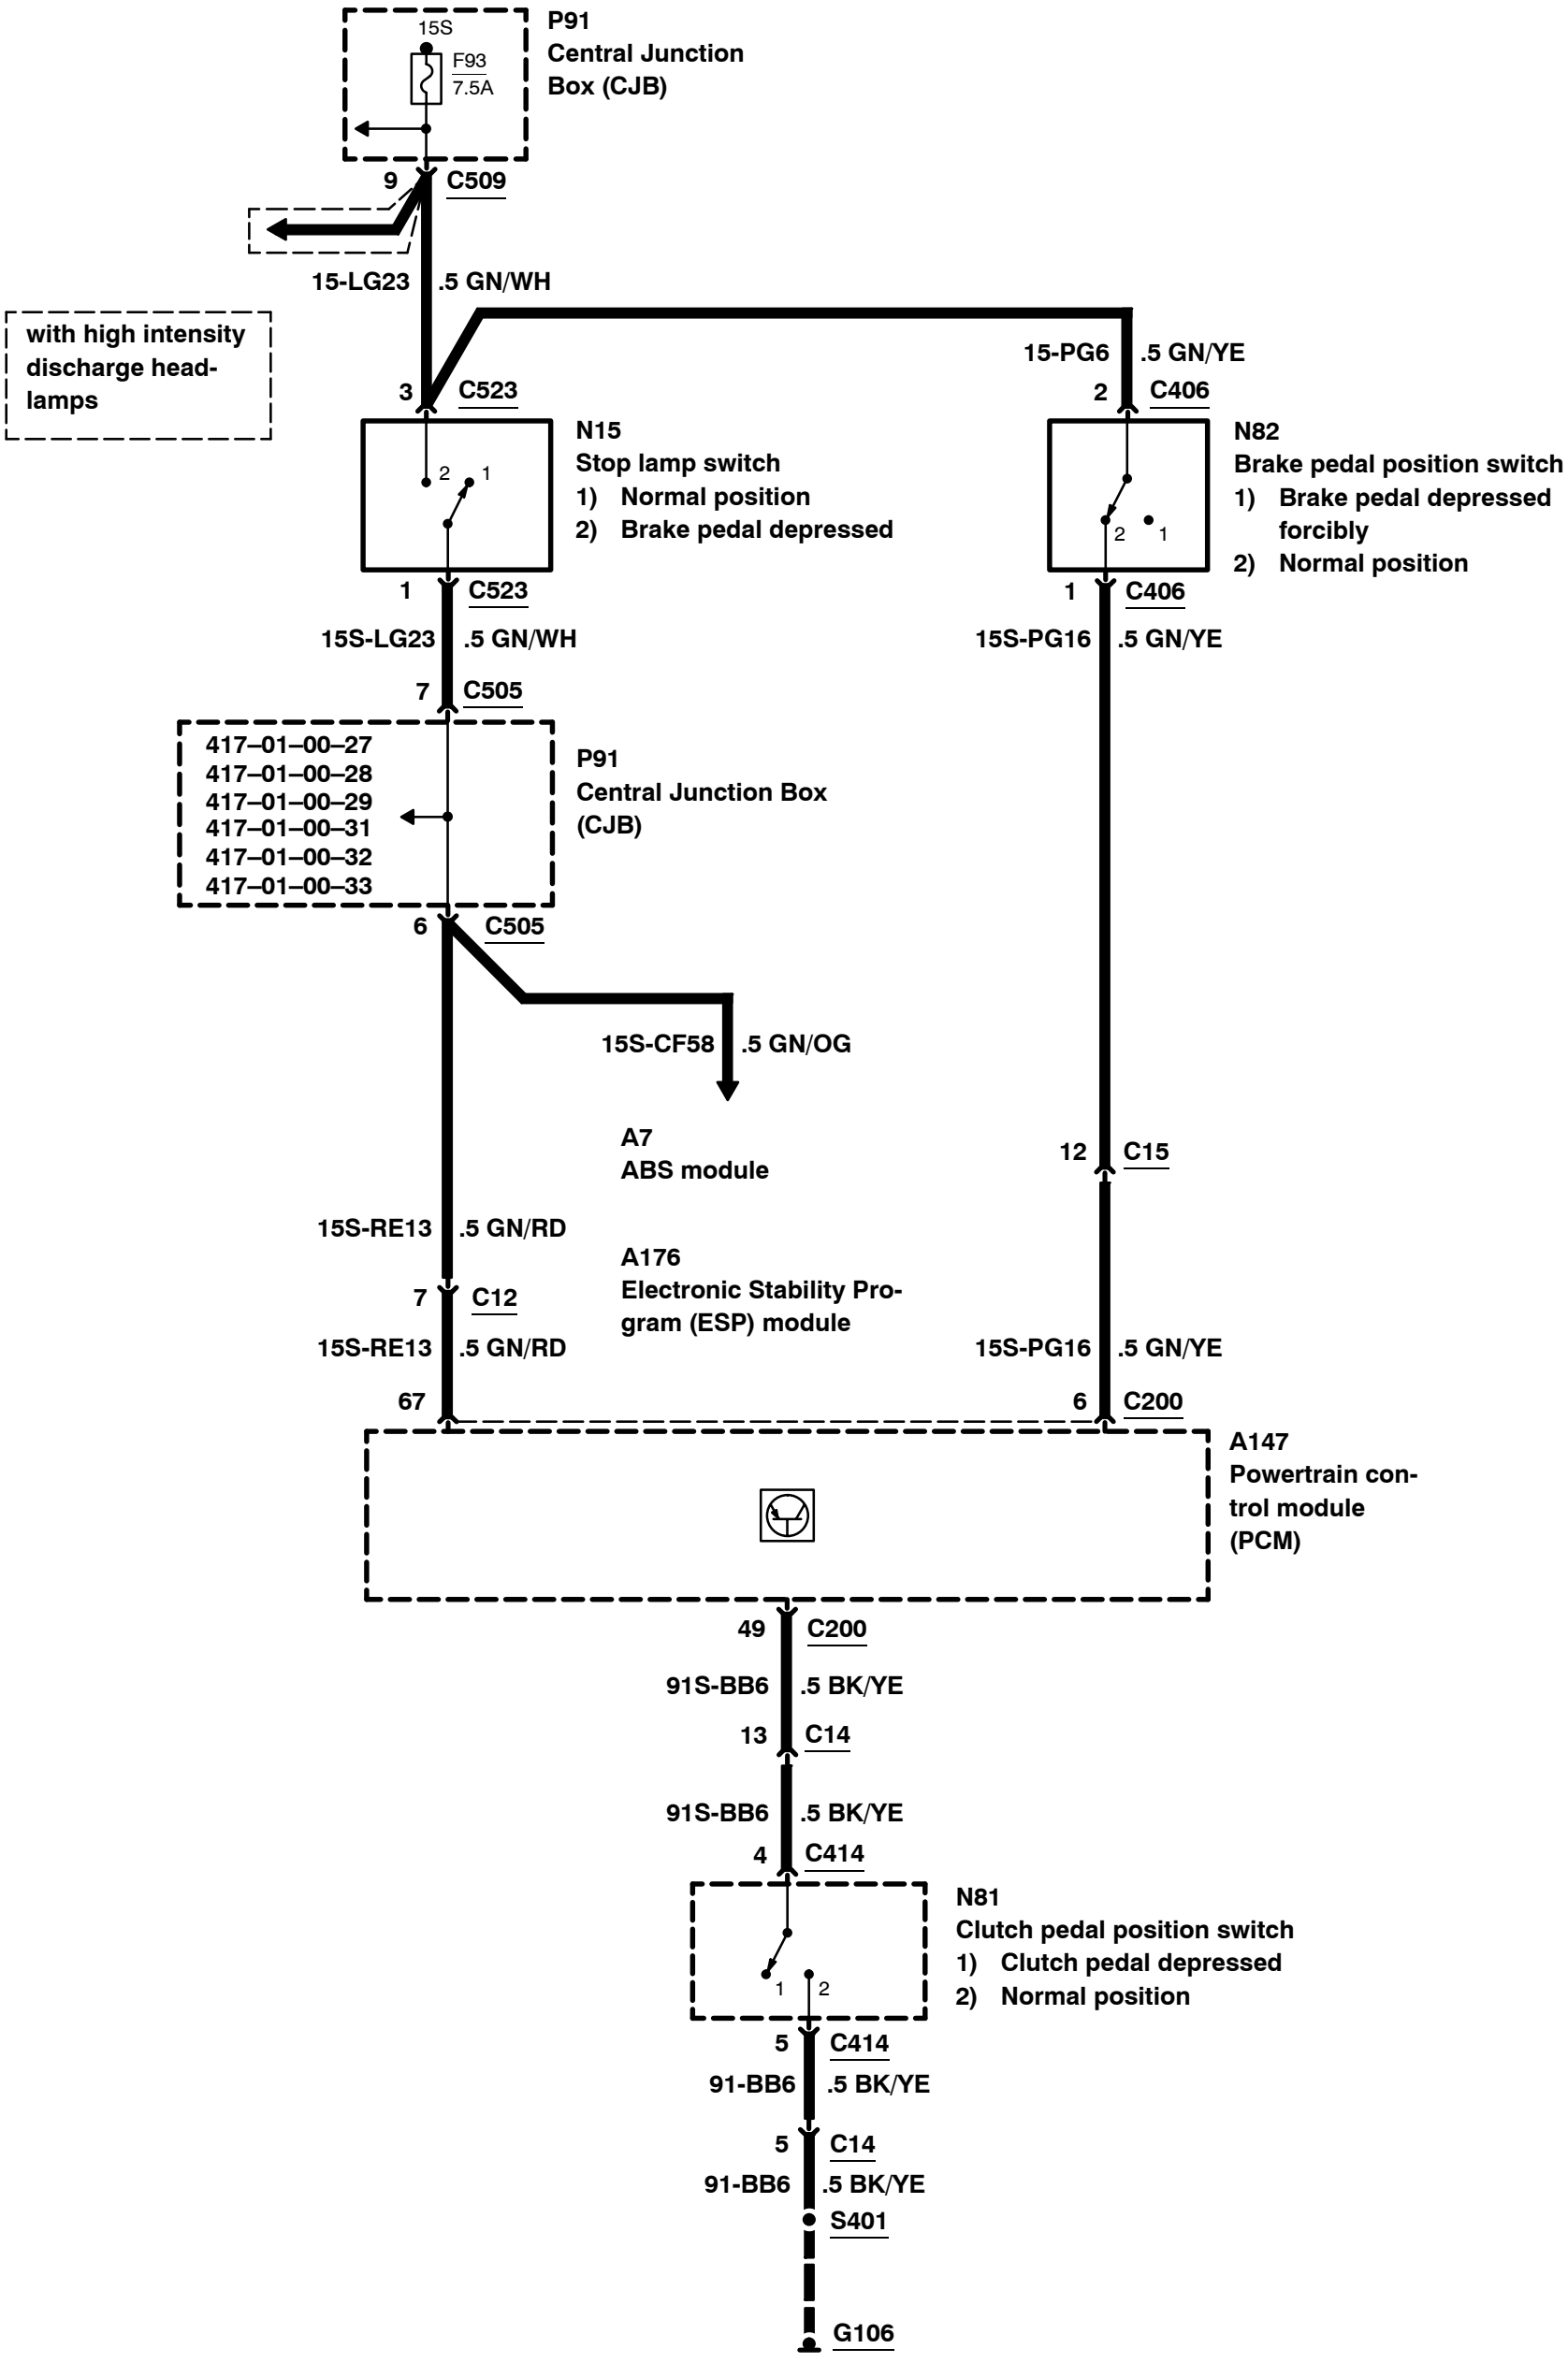


Vehicle Speed Control – 1.8L Duratec–SCi (MI4)

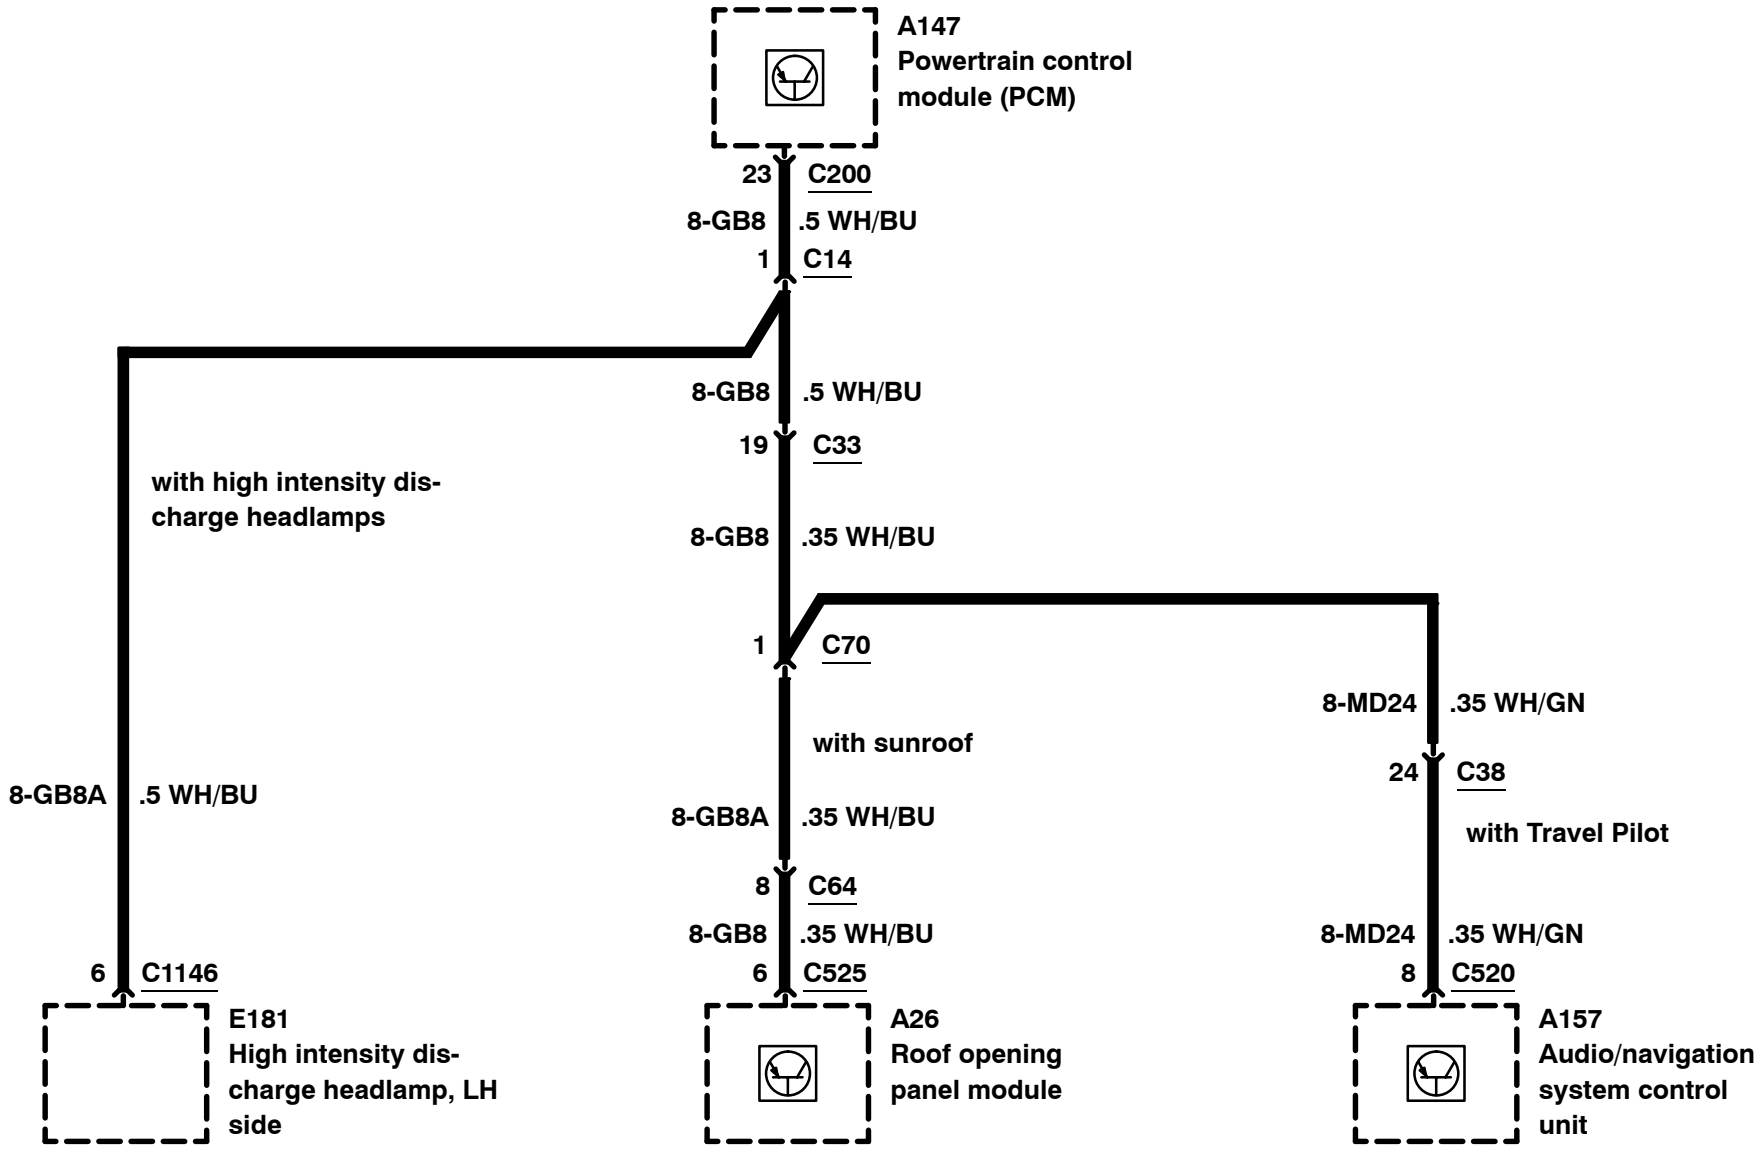


Vehicle Speed Control – Diesel engines

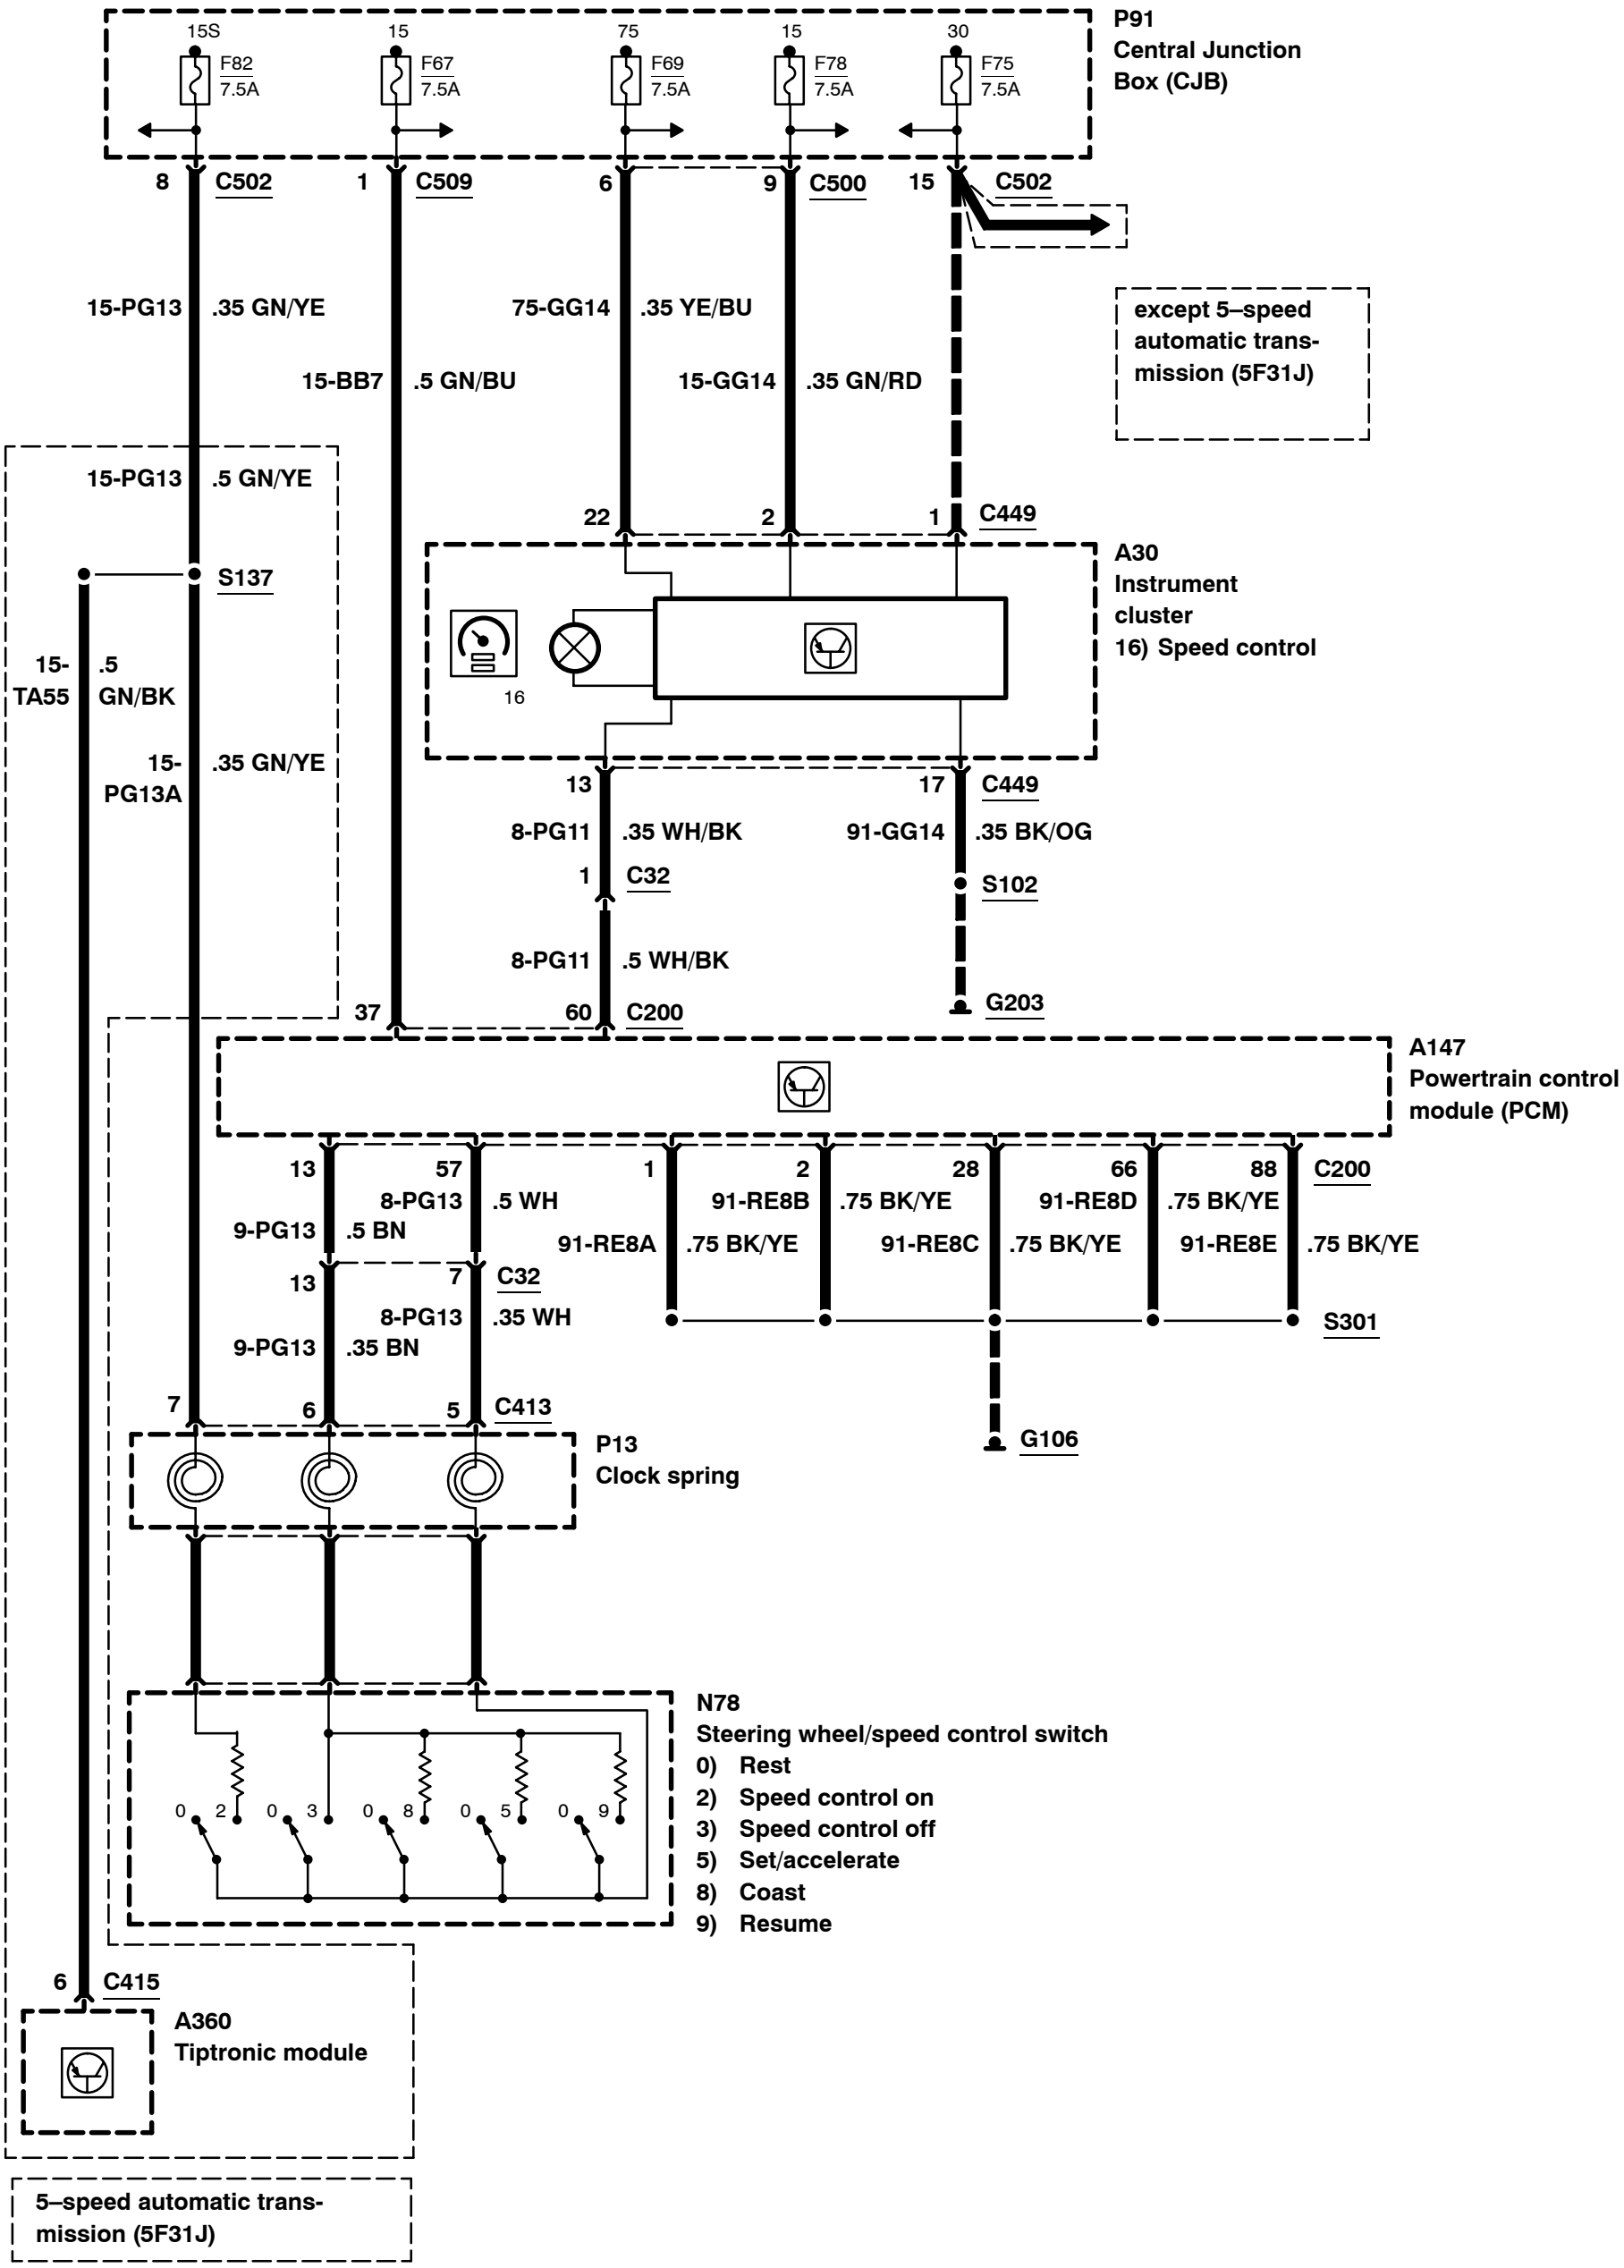


Vehicle Speed Control – Diesel engines

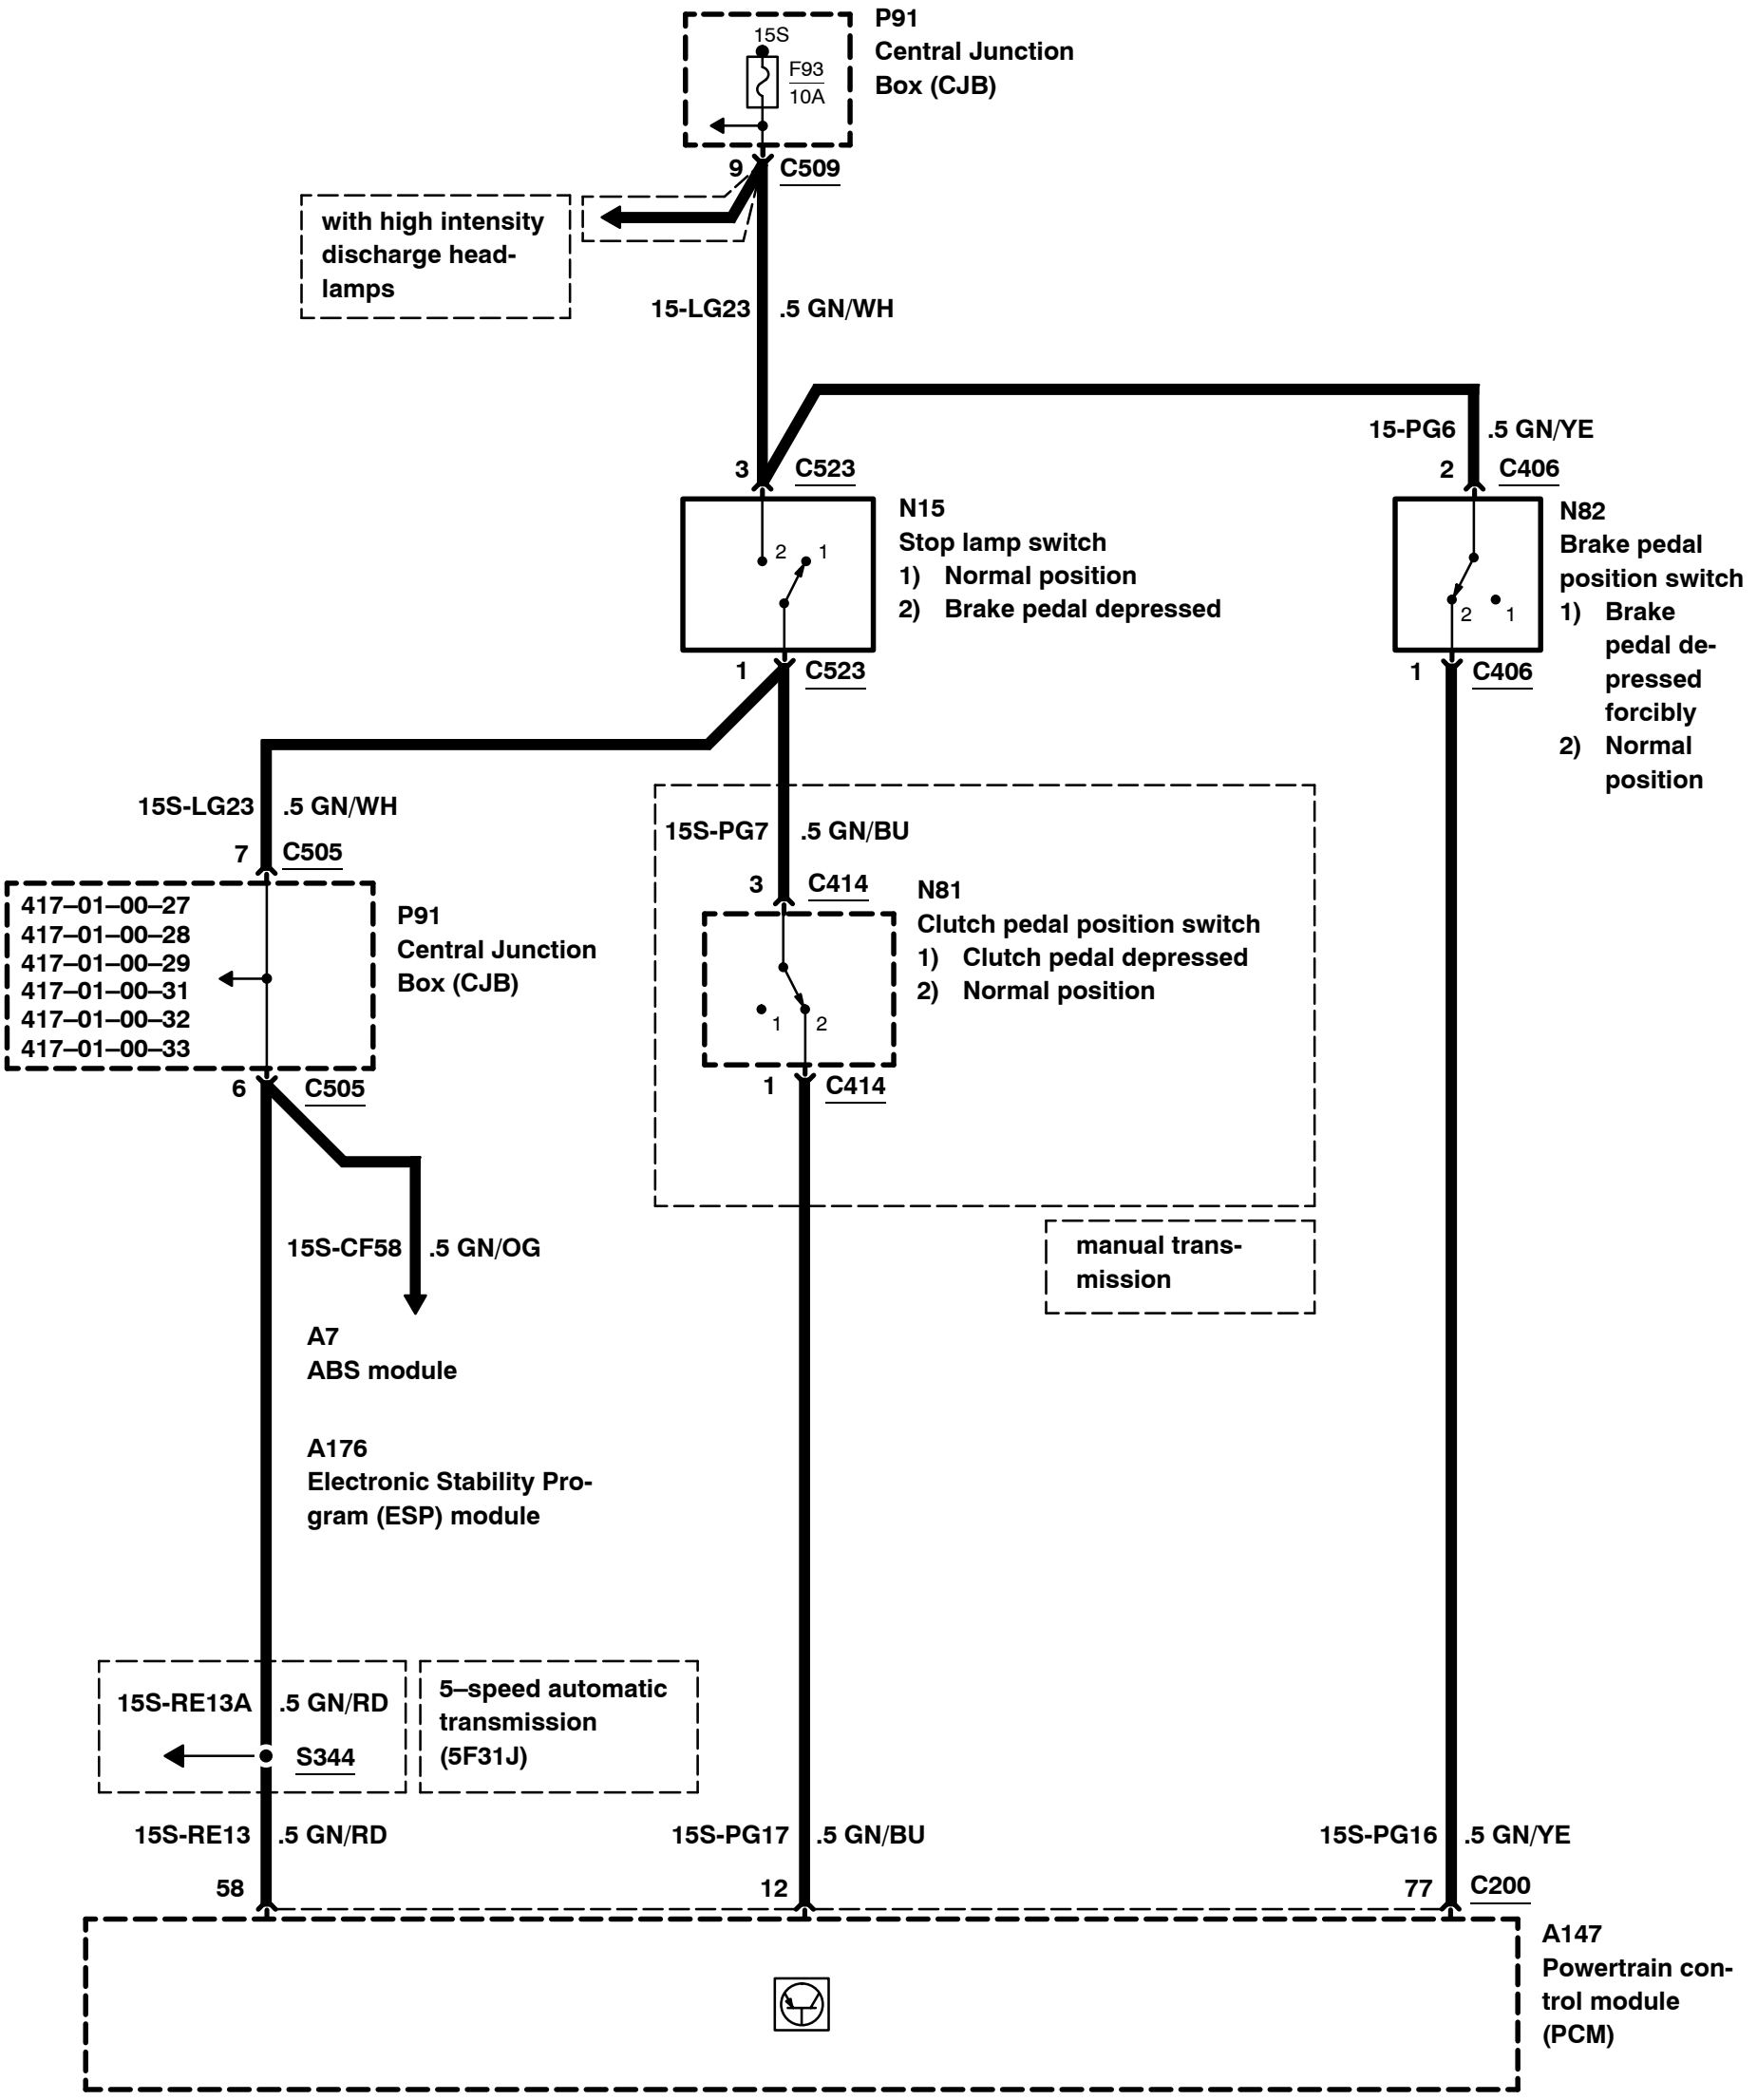


Vehicle Speed Control – Diesel engines

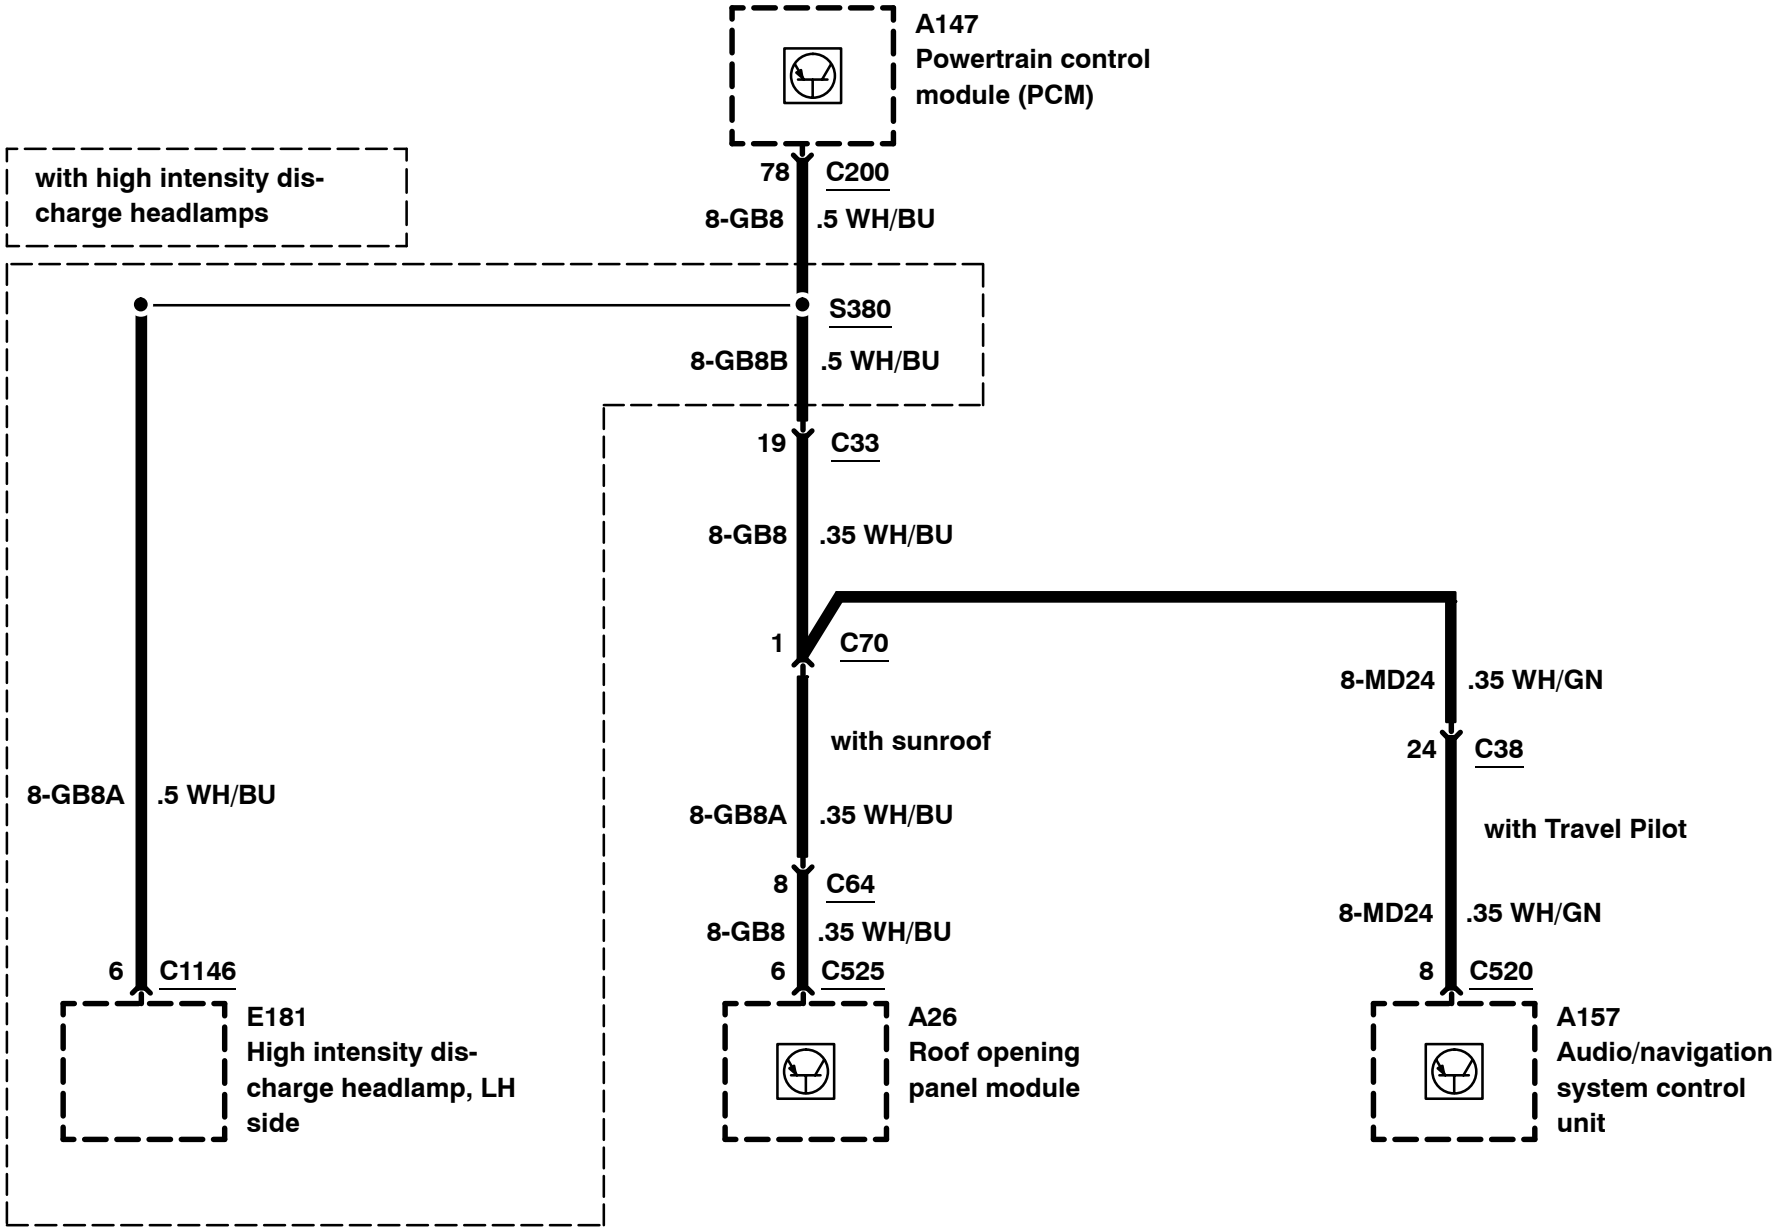


Auxiliary Heating – Diesel engines, With electric coolant heater, before 12/2003

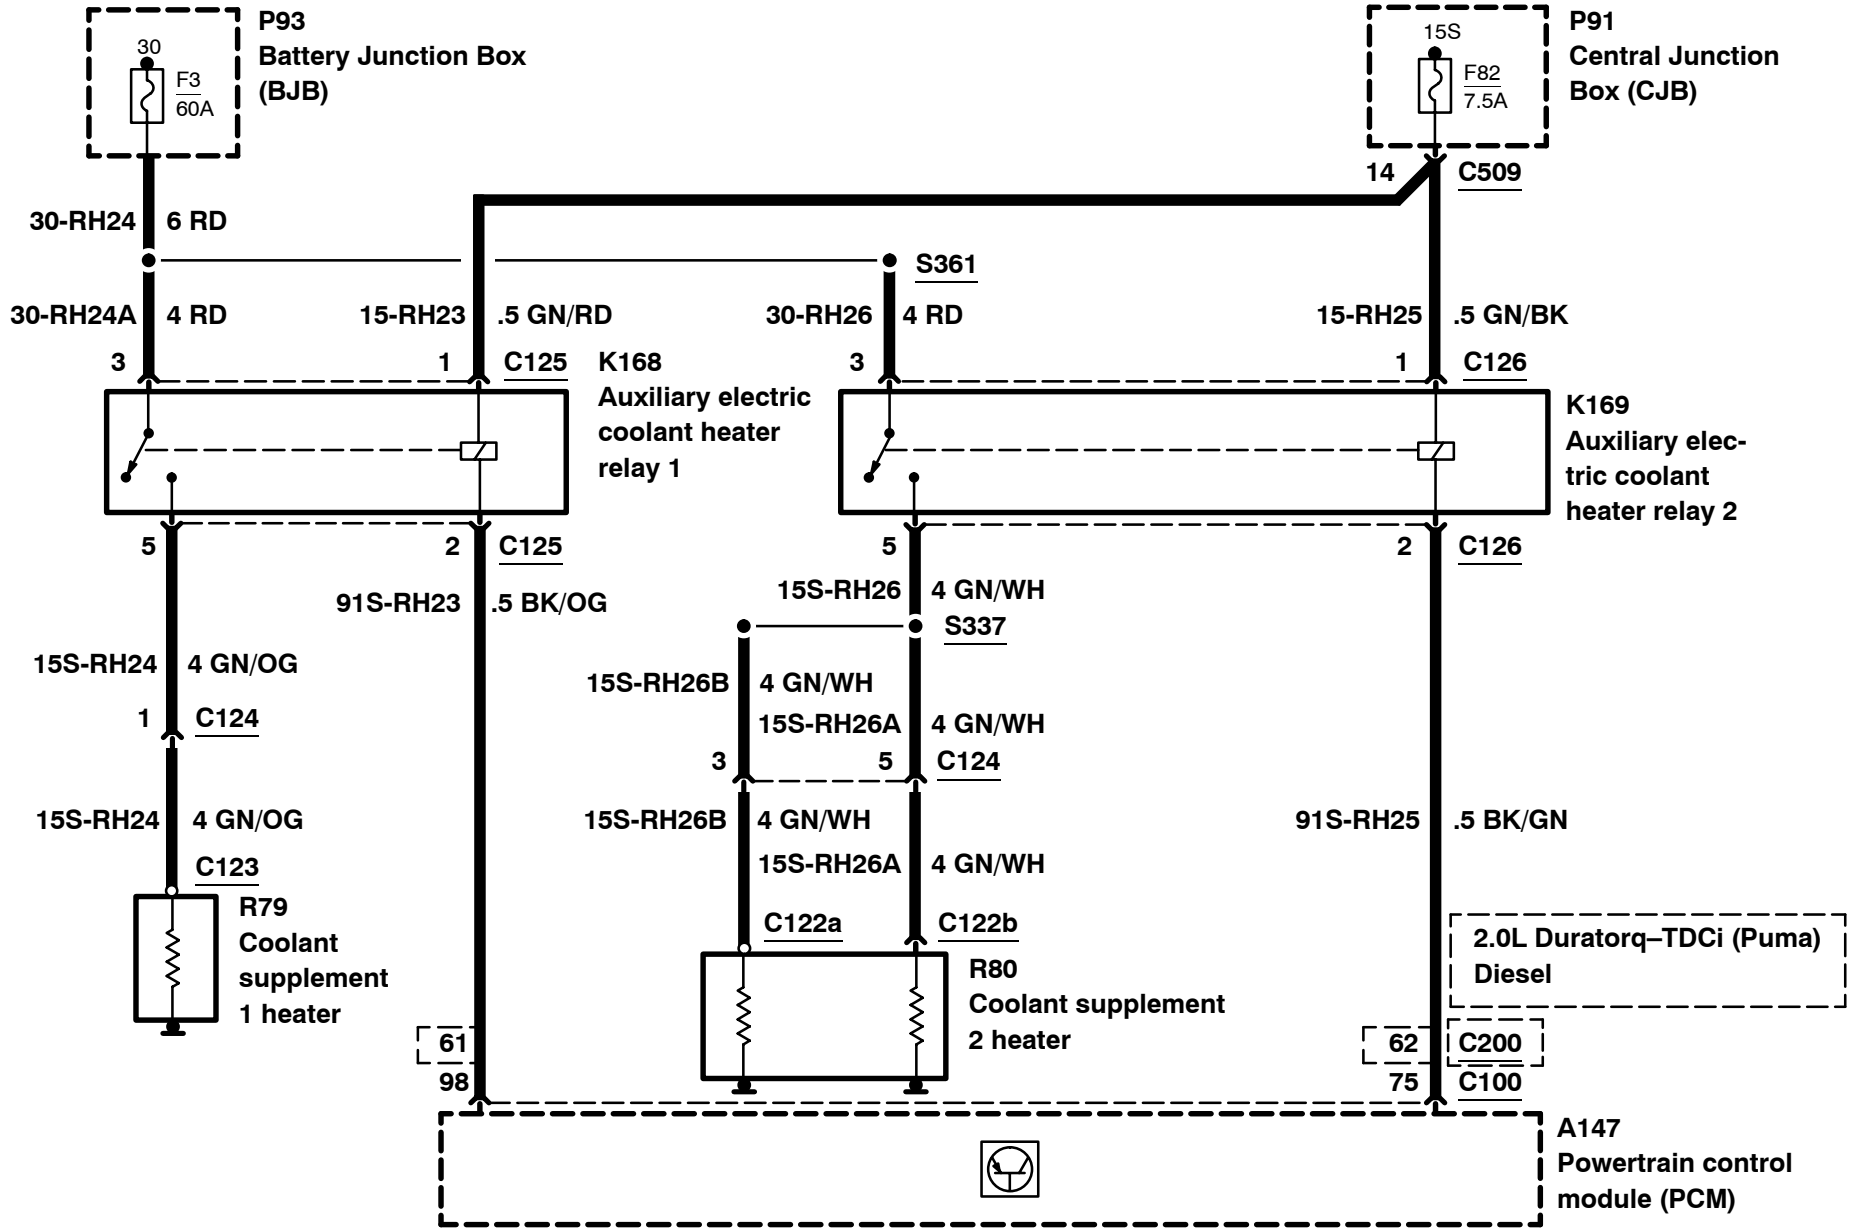

Auxiliary Heating – Diesel engines, with fuel fired heater

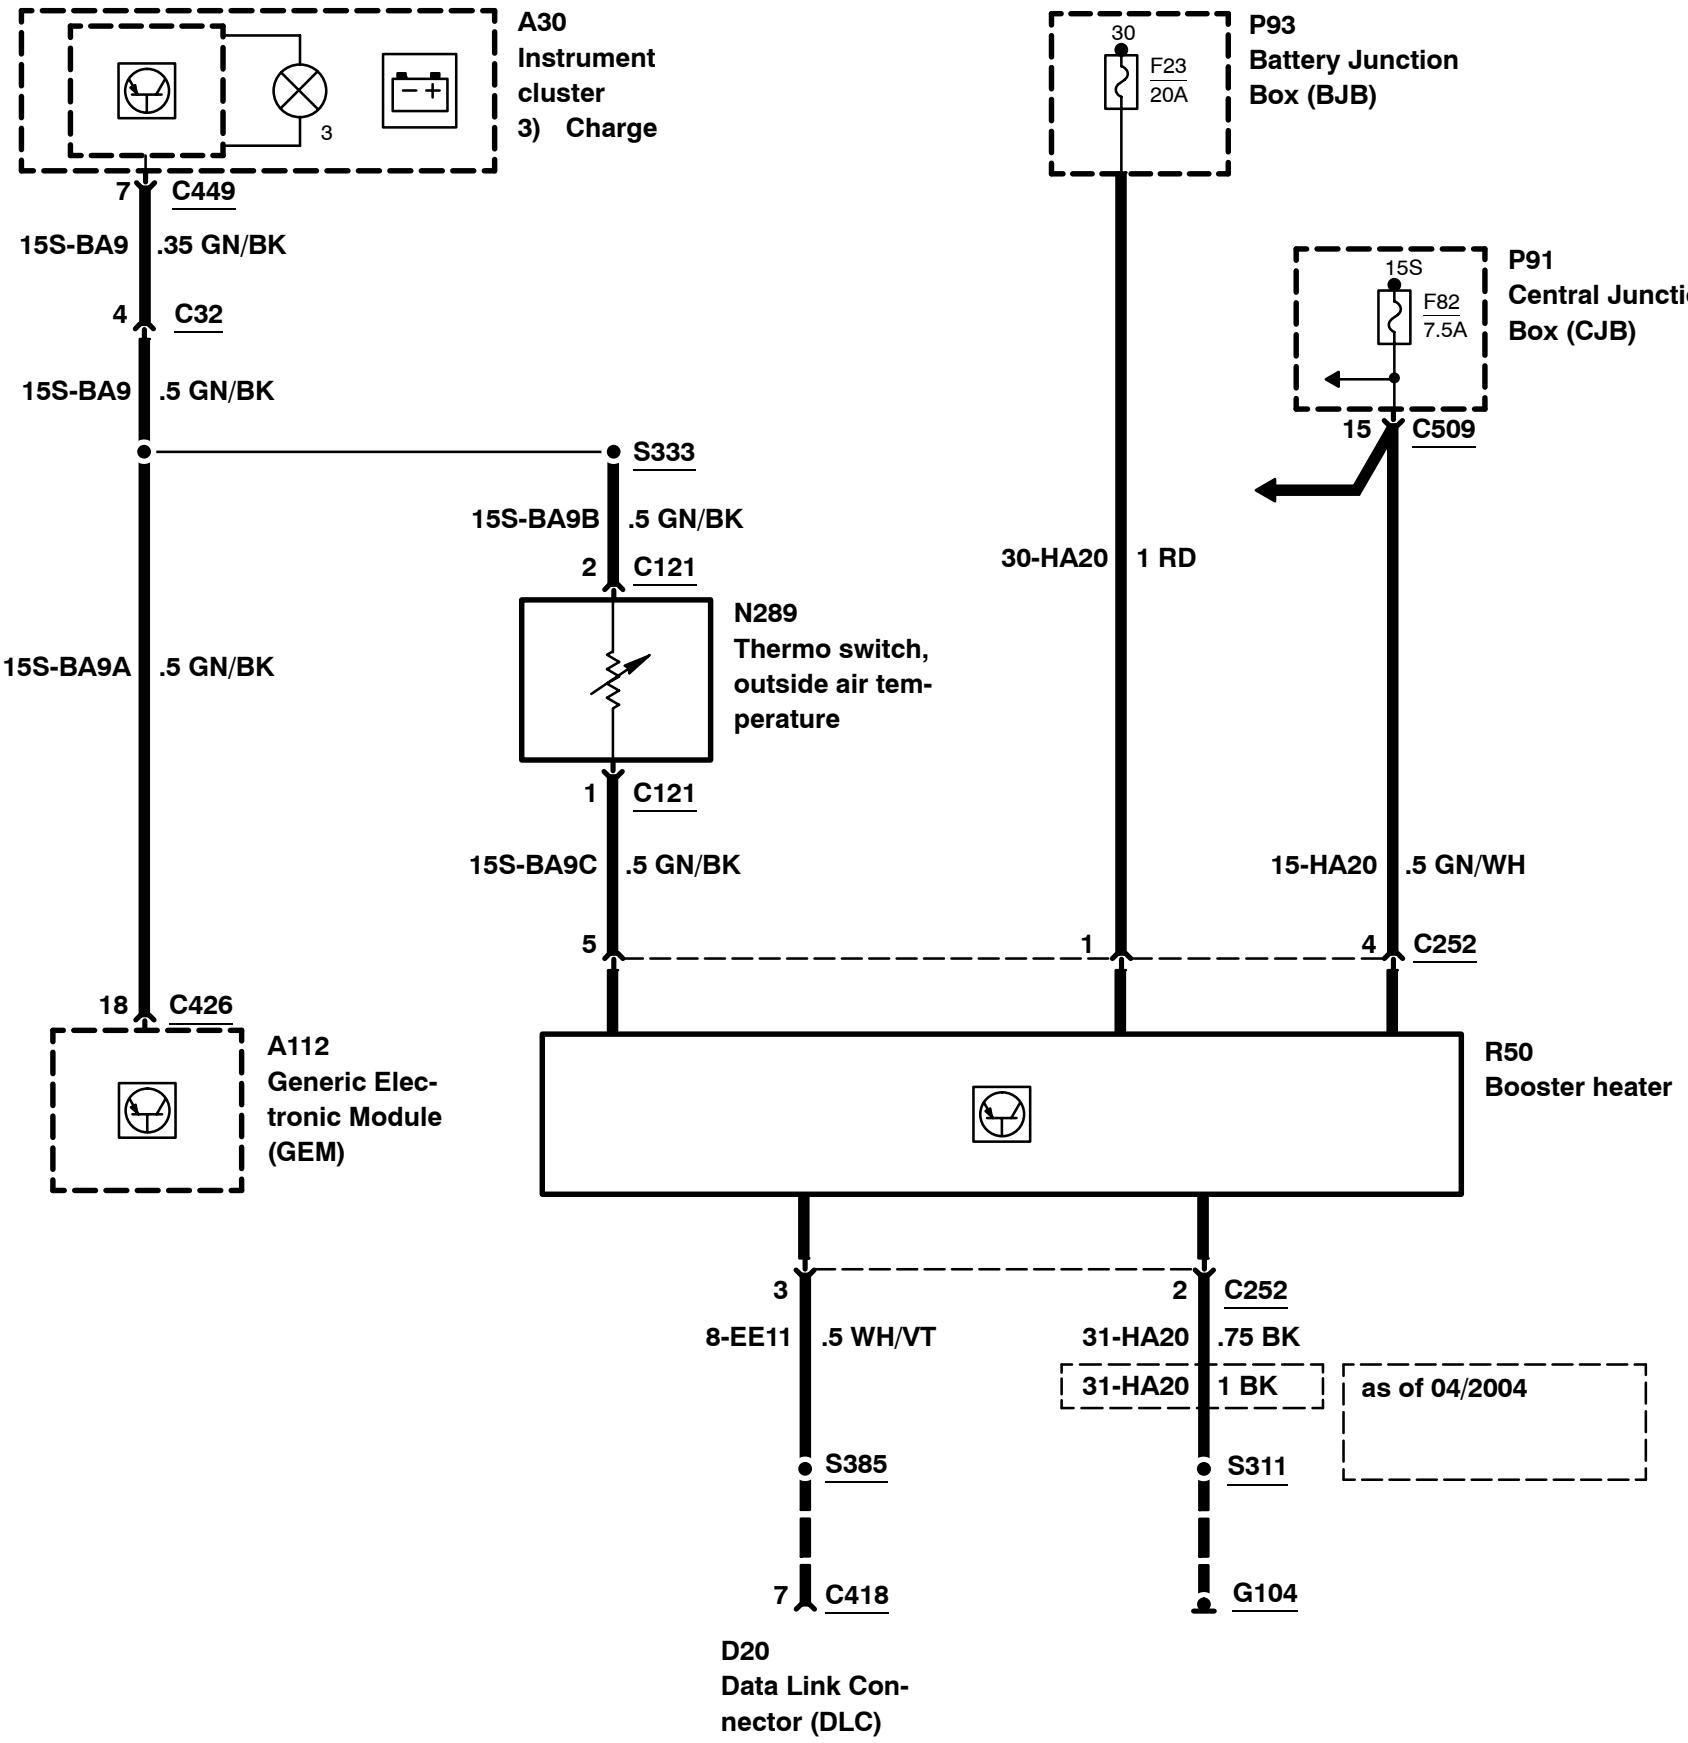


Auxiliary Heating – Diesel engines, with fuel fired heater, as of 08/2004

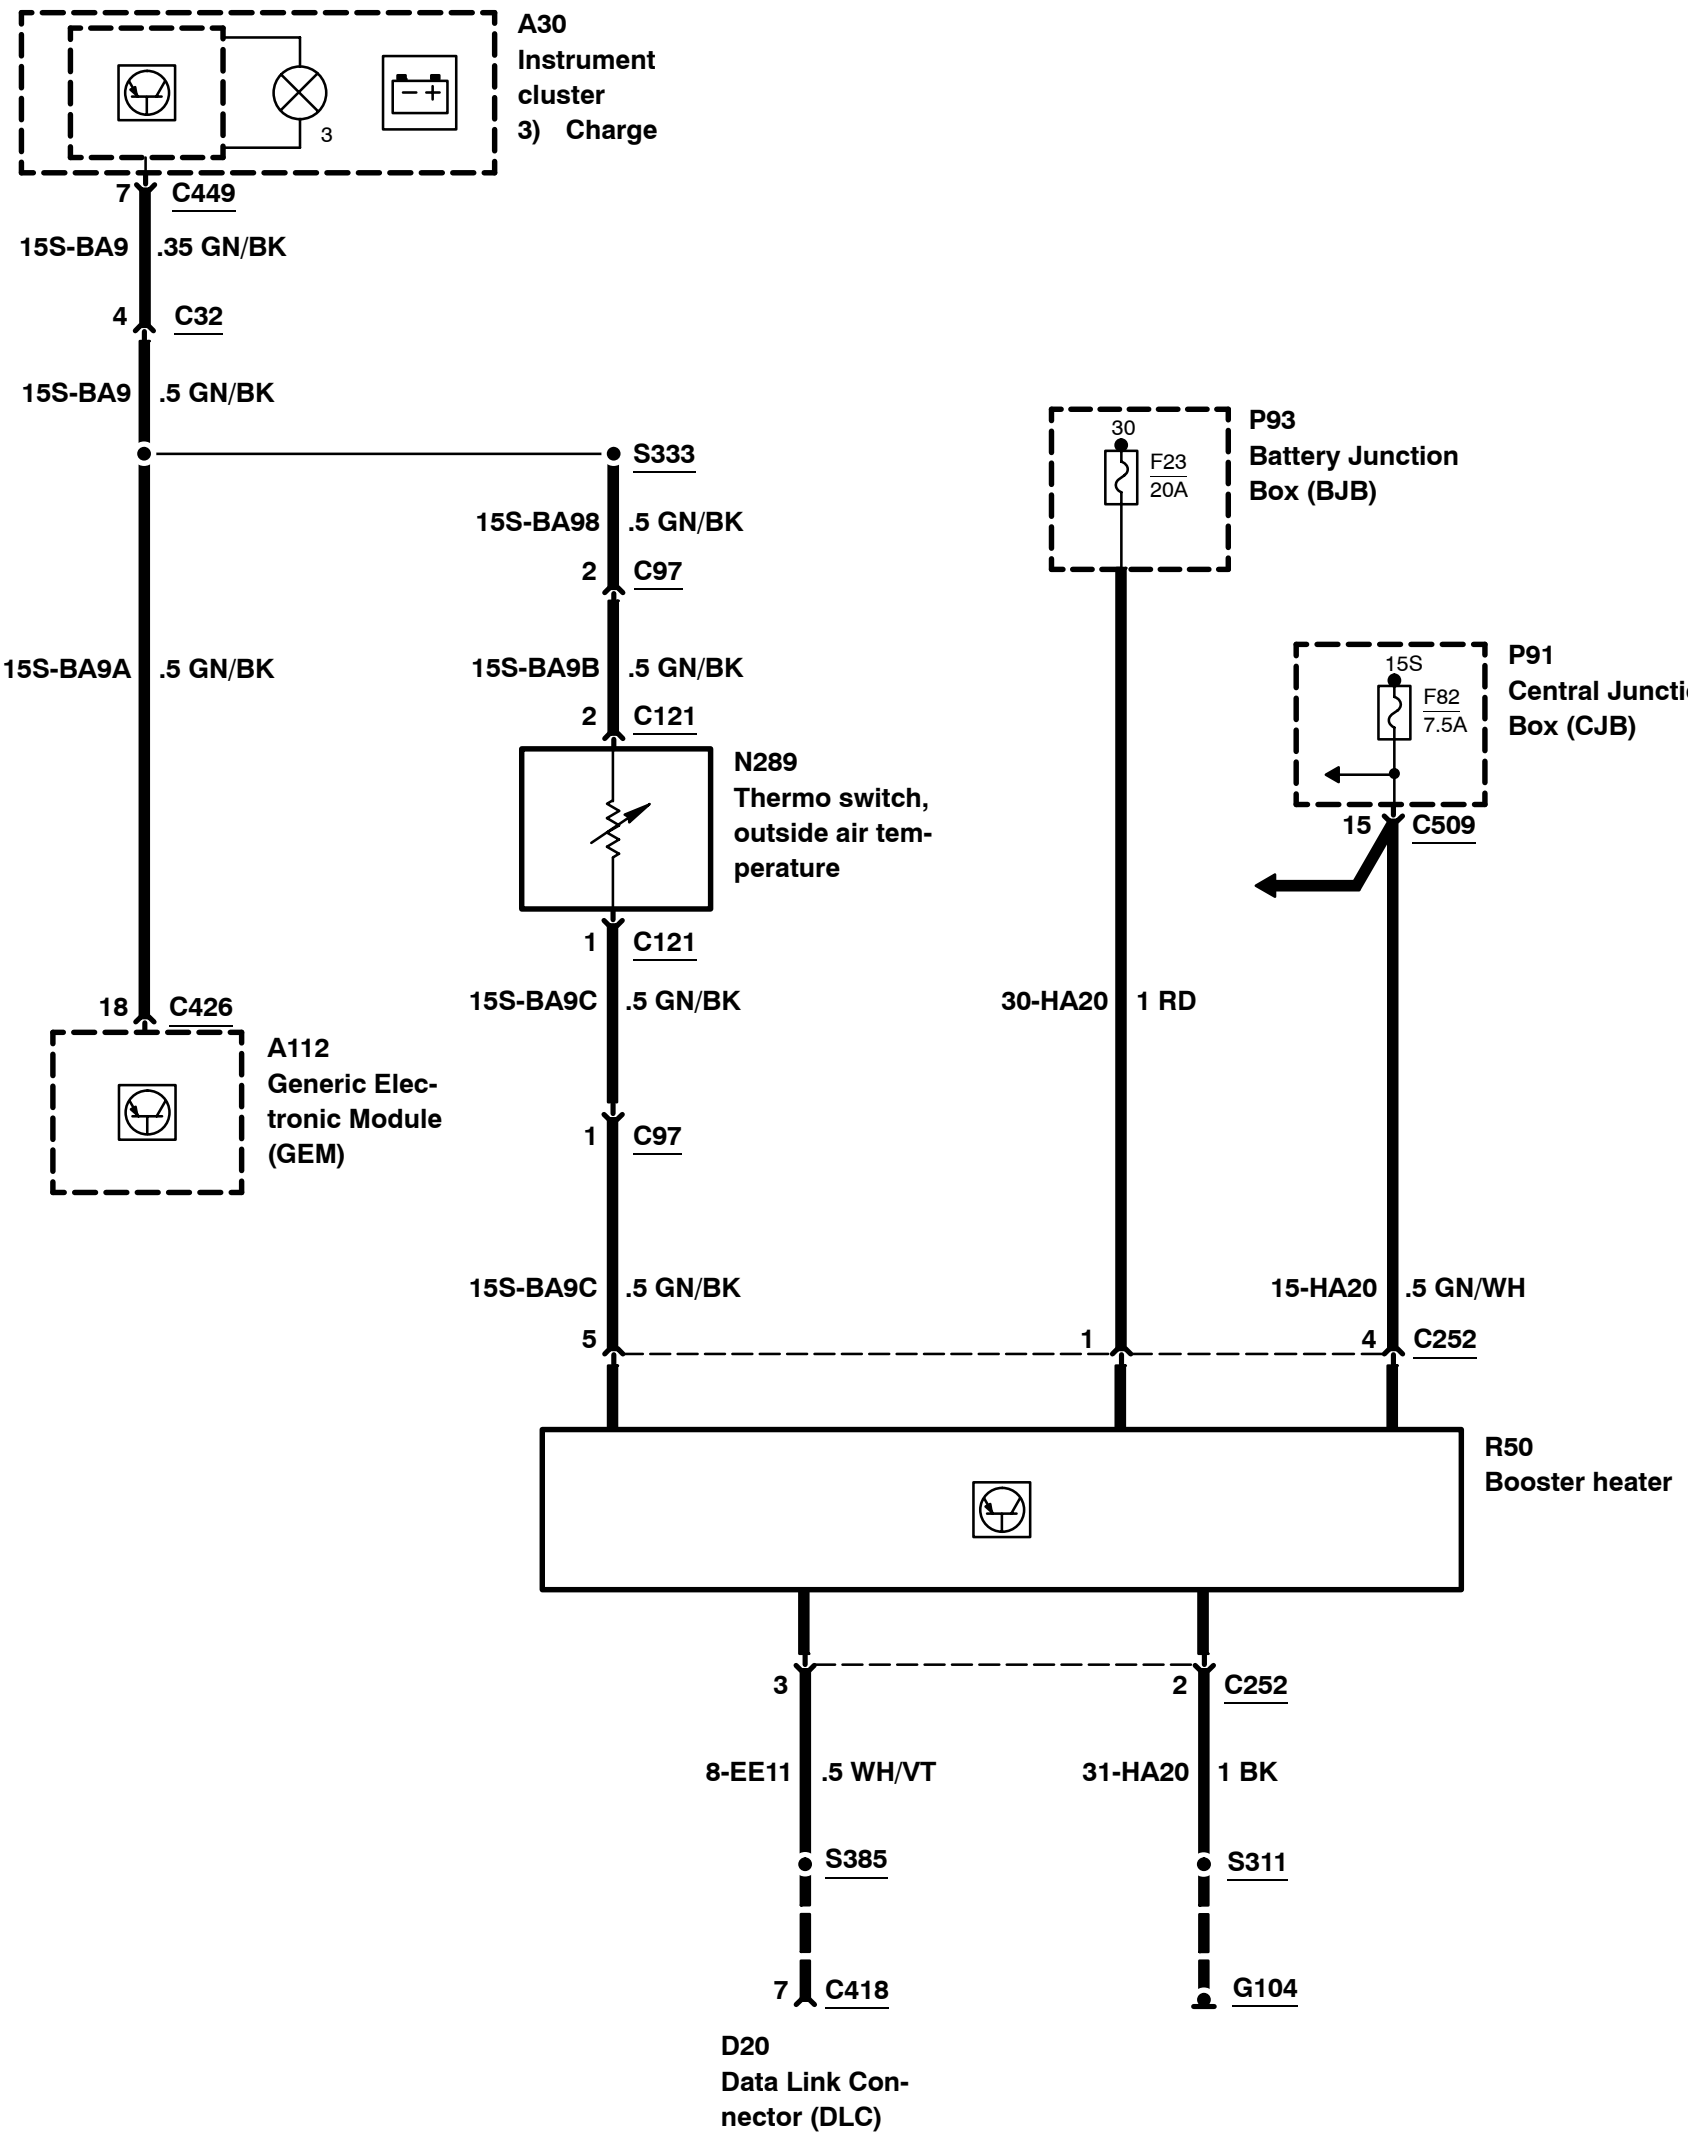


Air Conditioning

Block diagram

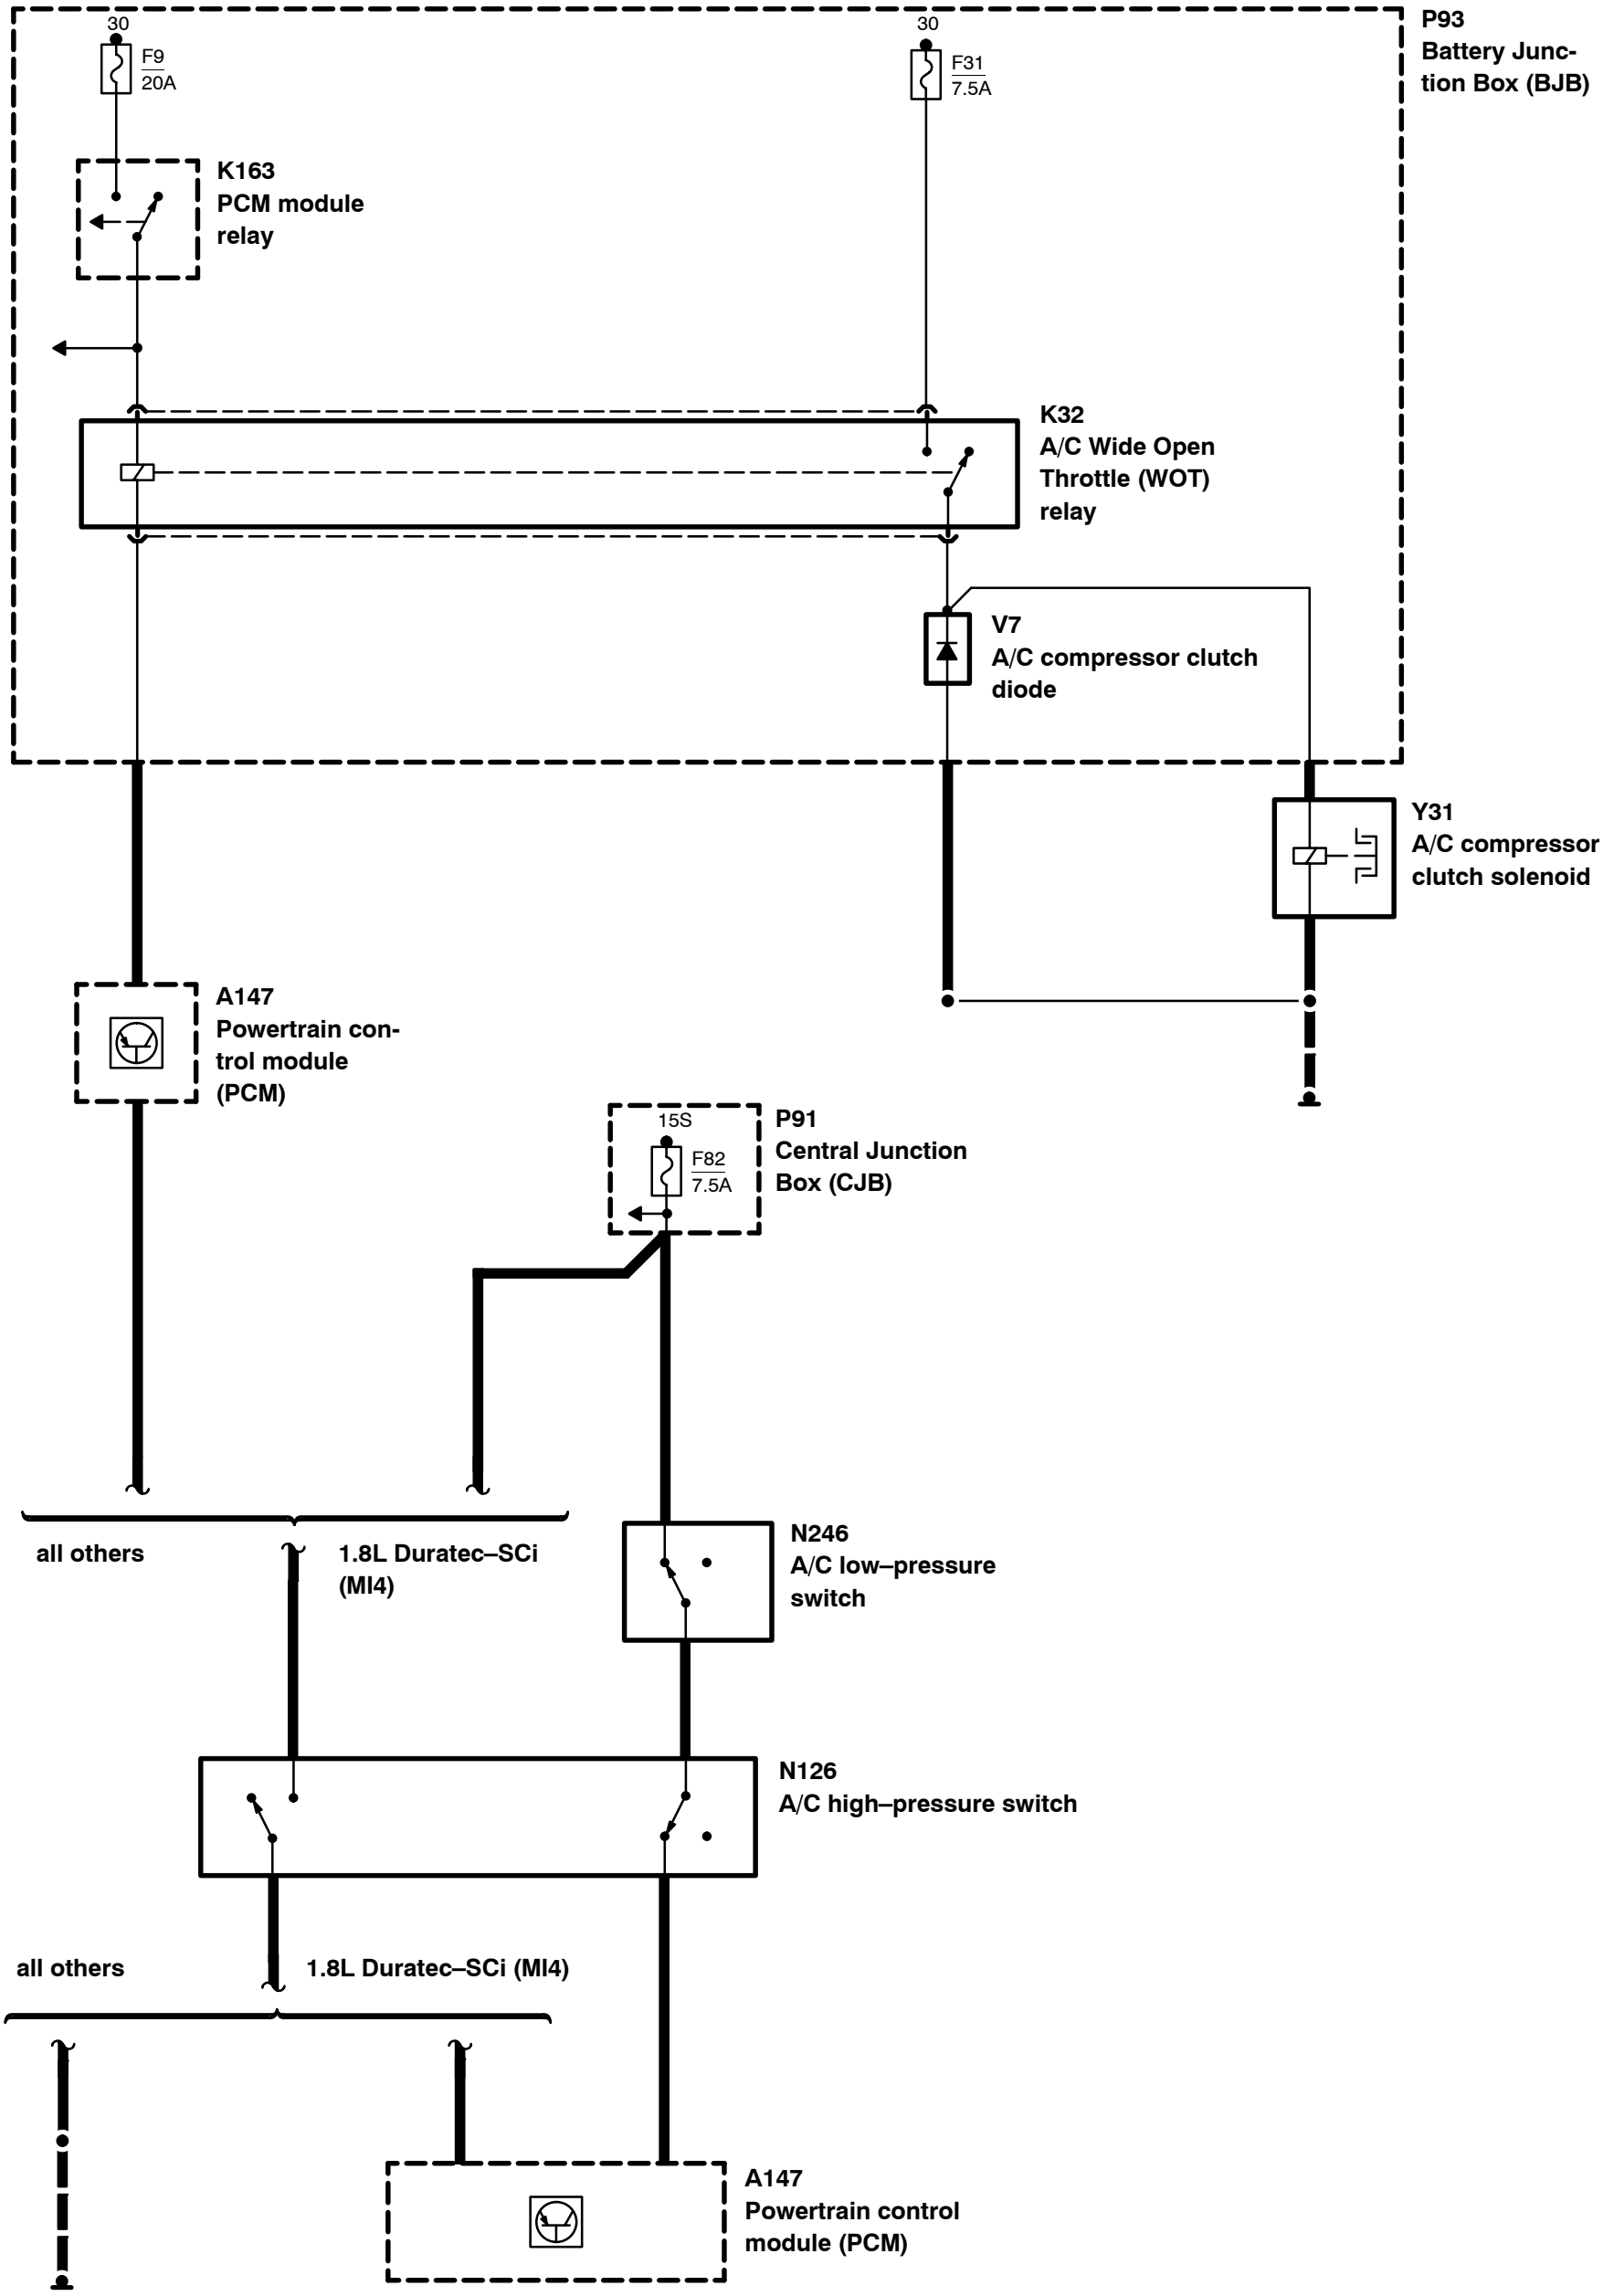


Air Conditioning – Manual A/C, before 04/2004

Block diagram

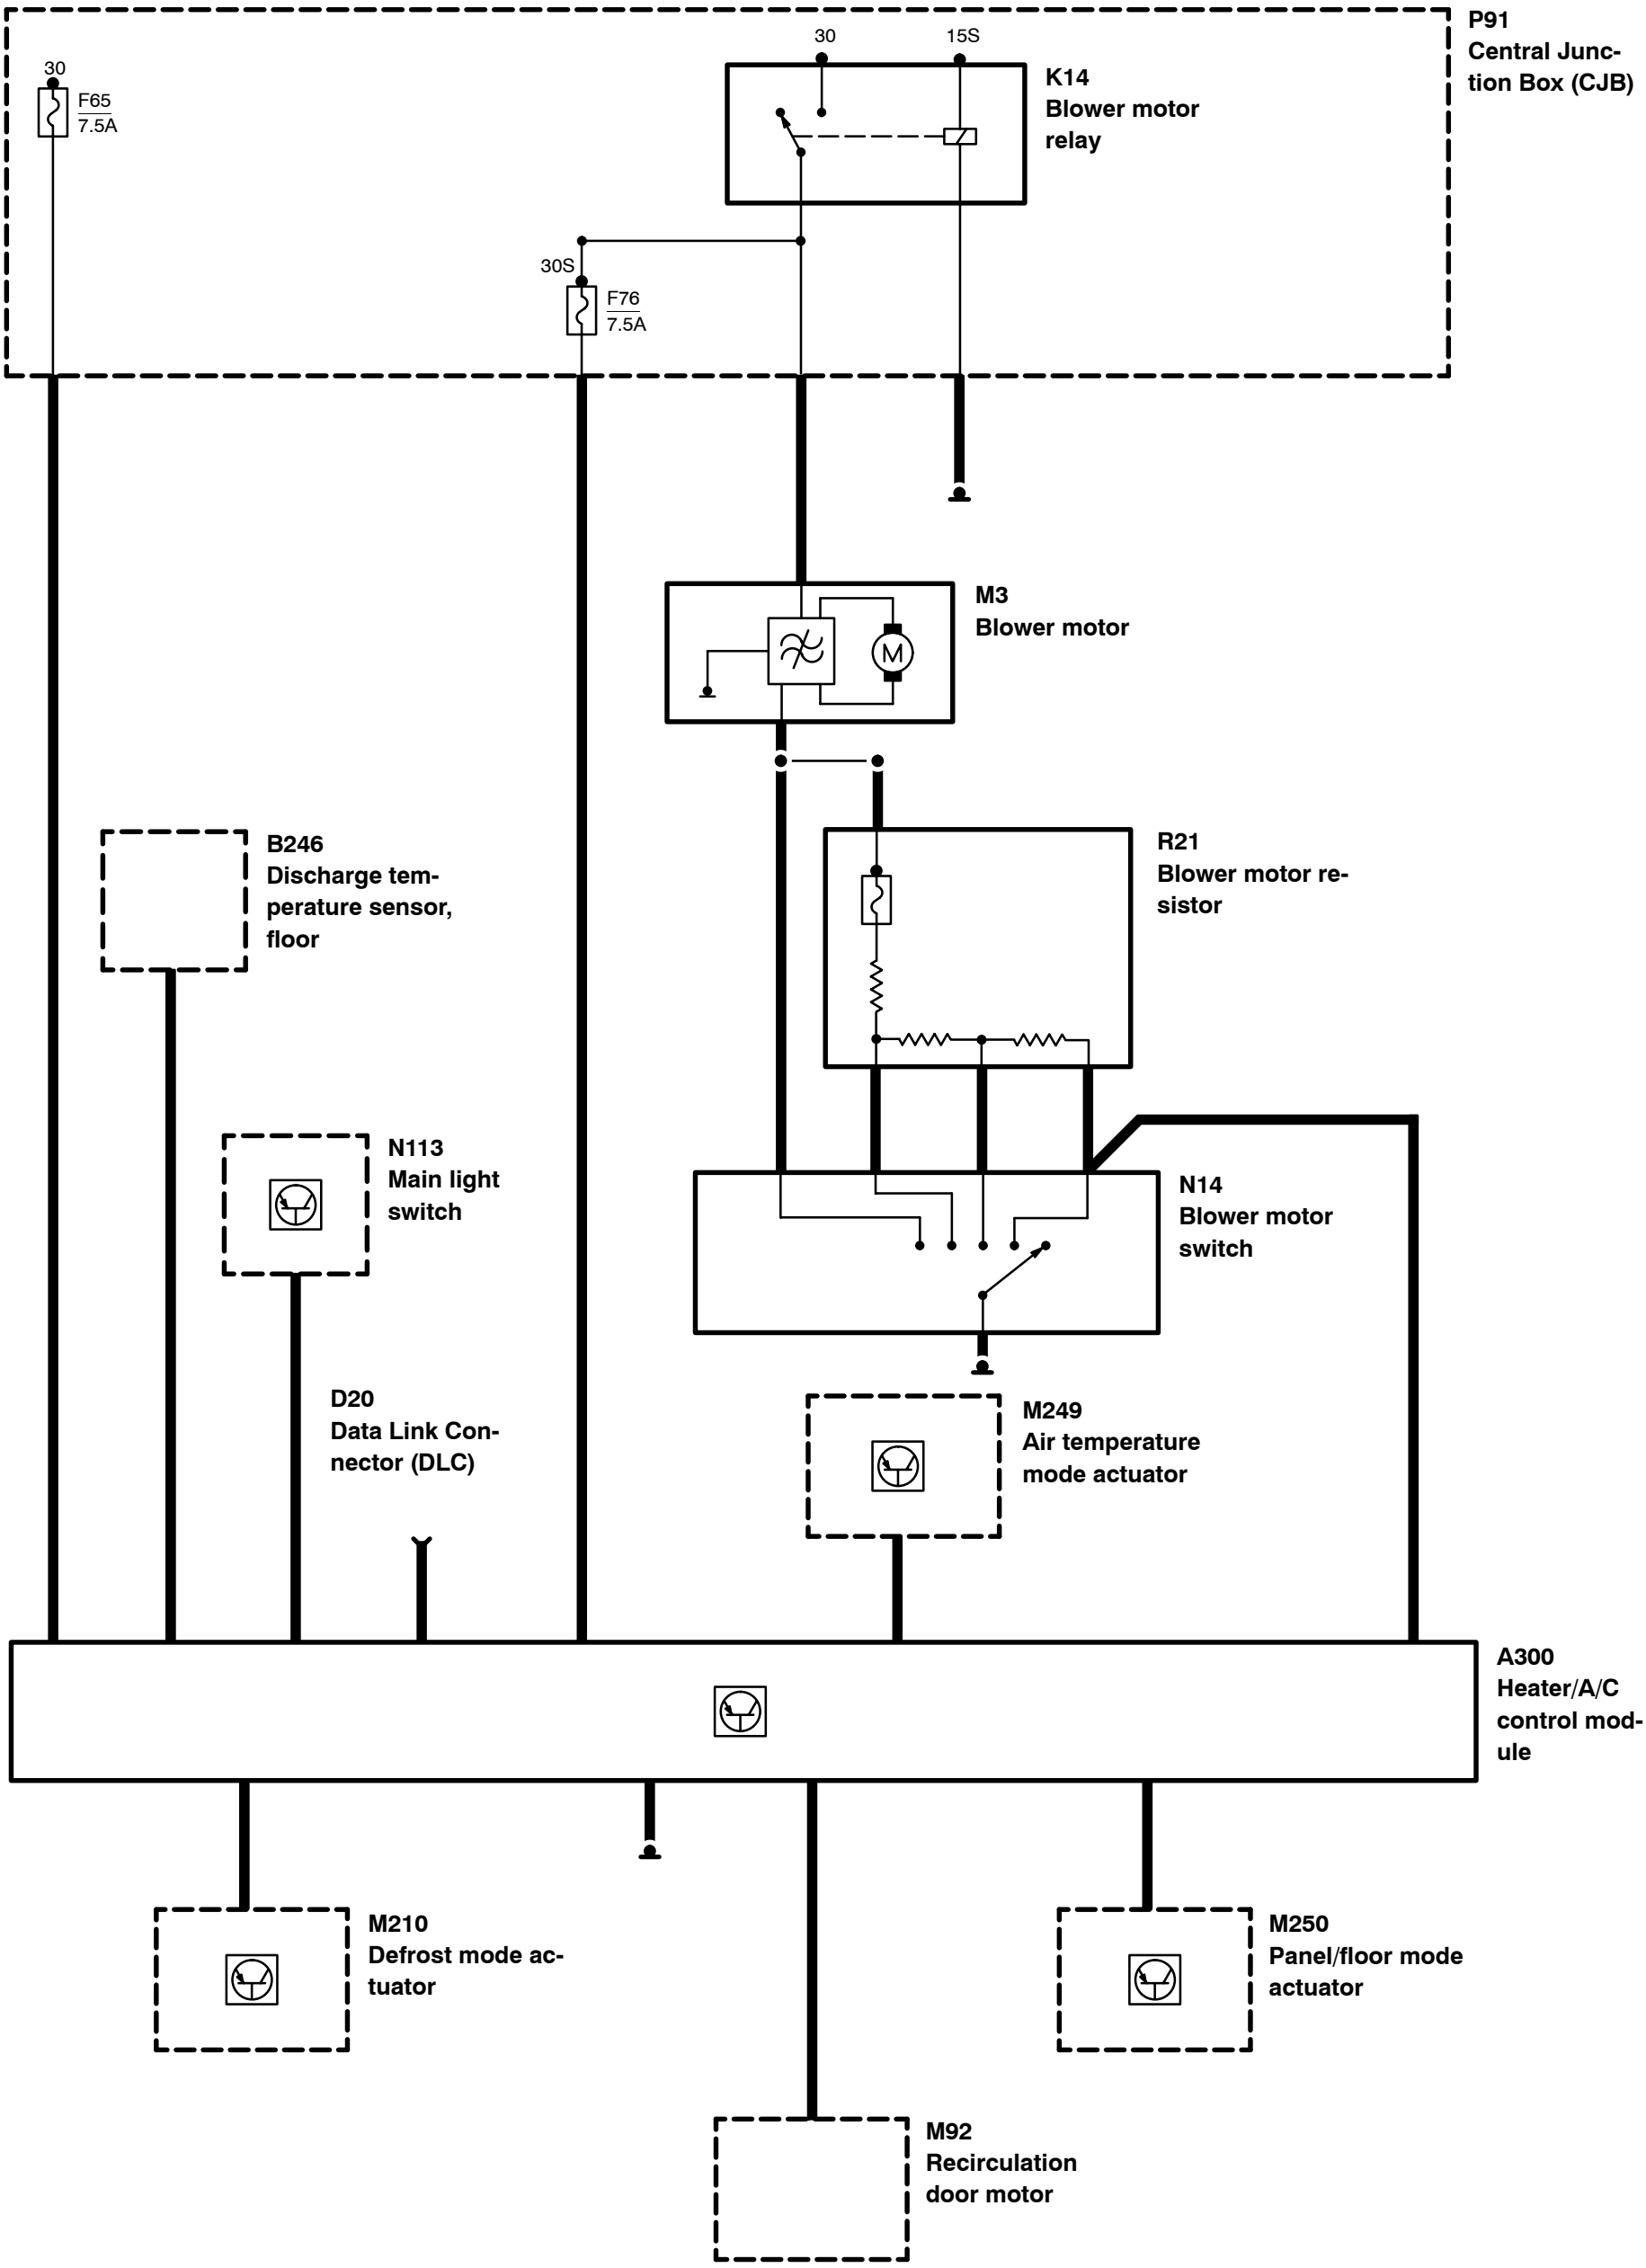


Air Conditioning – with EATC, before 04/2004

Block diagram

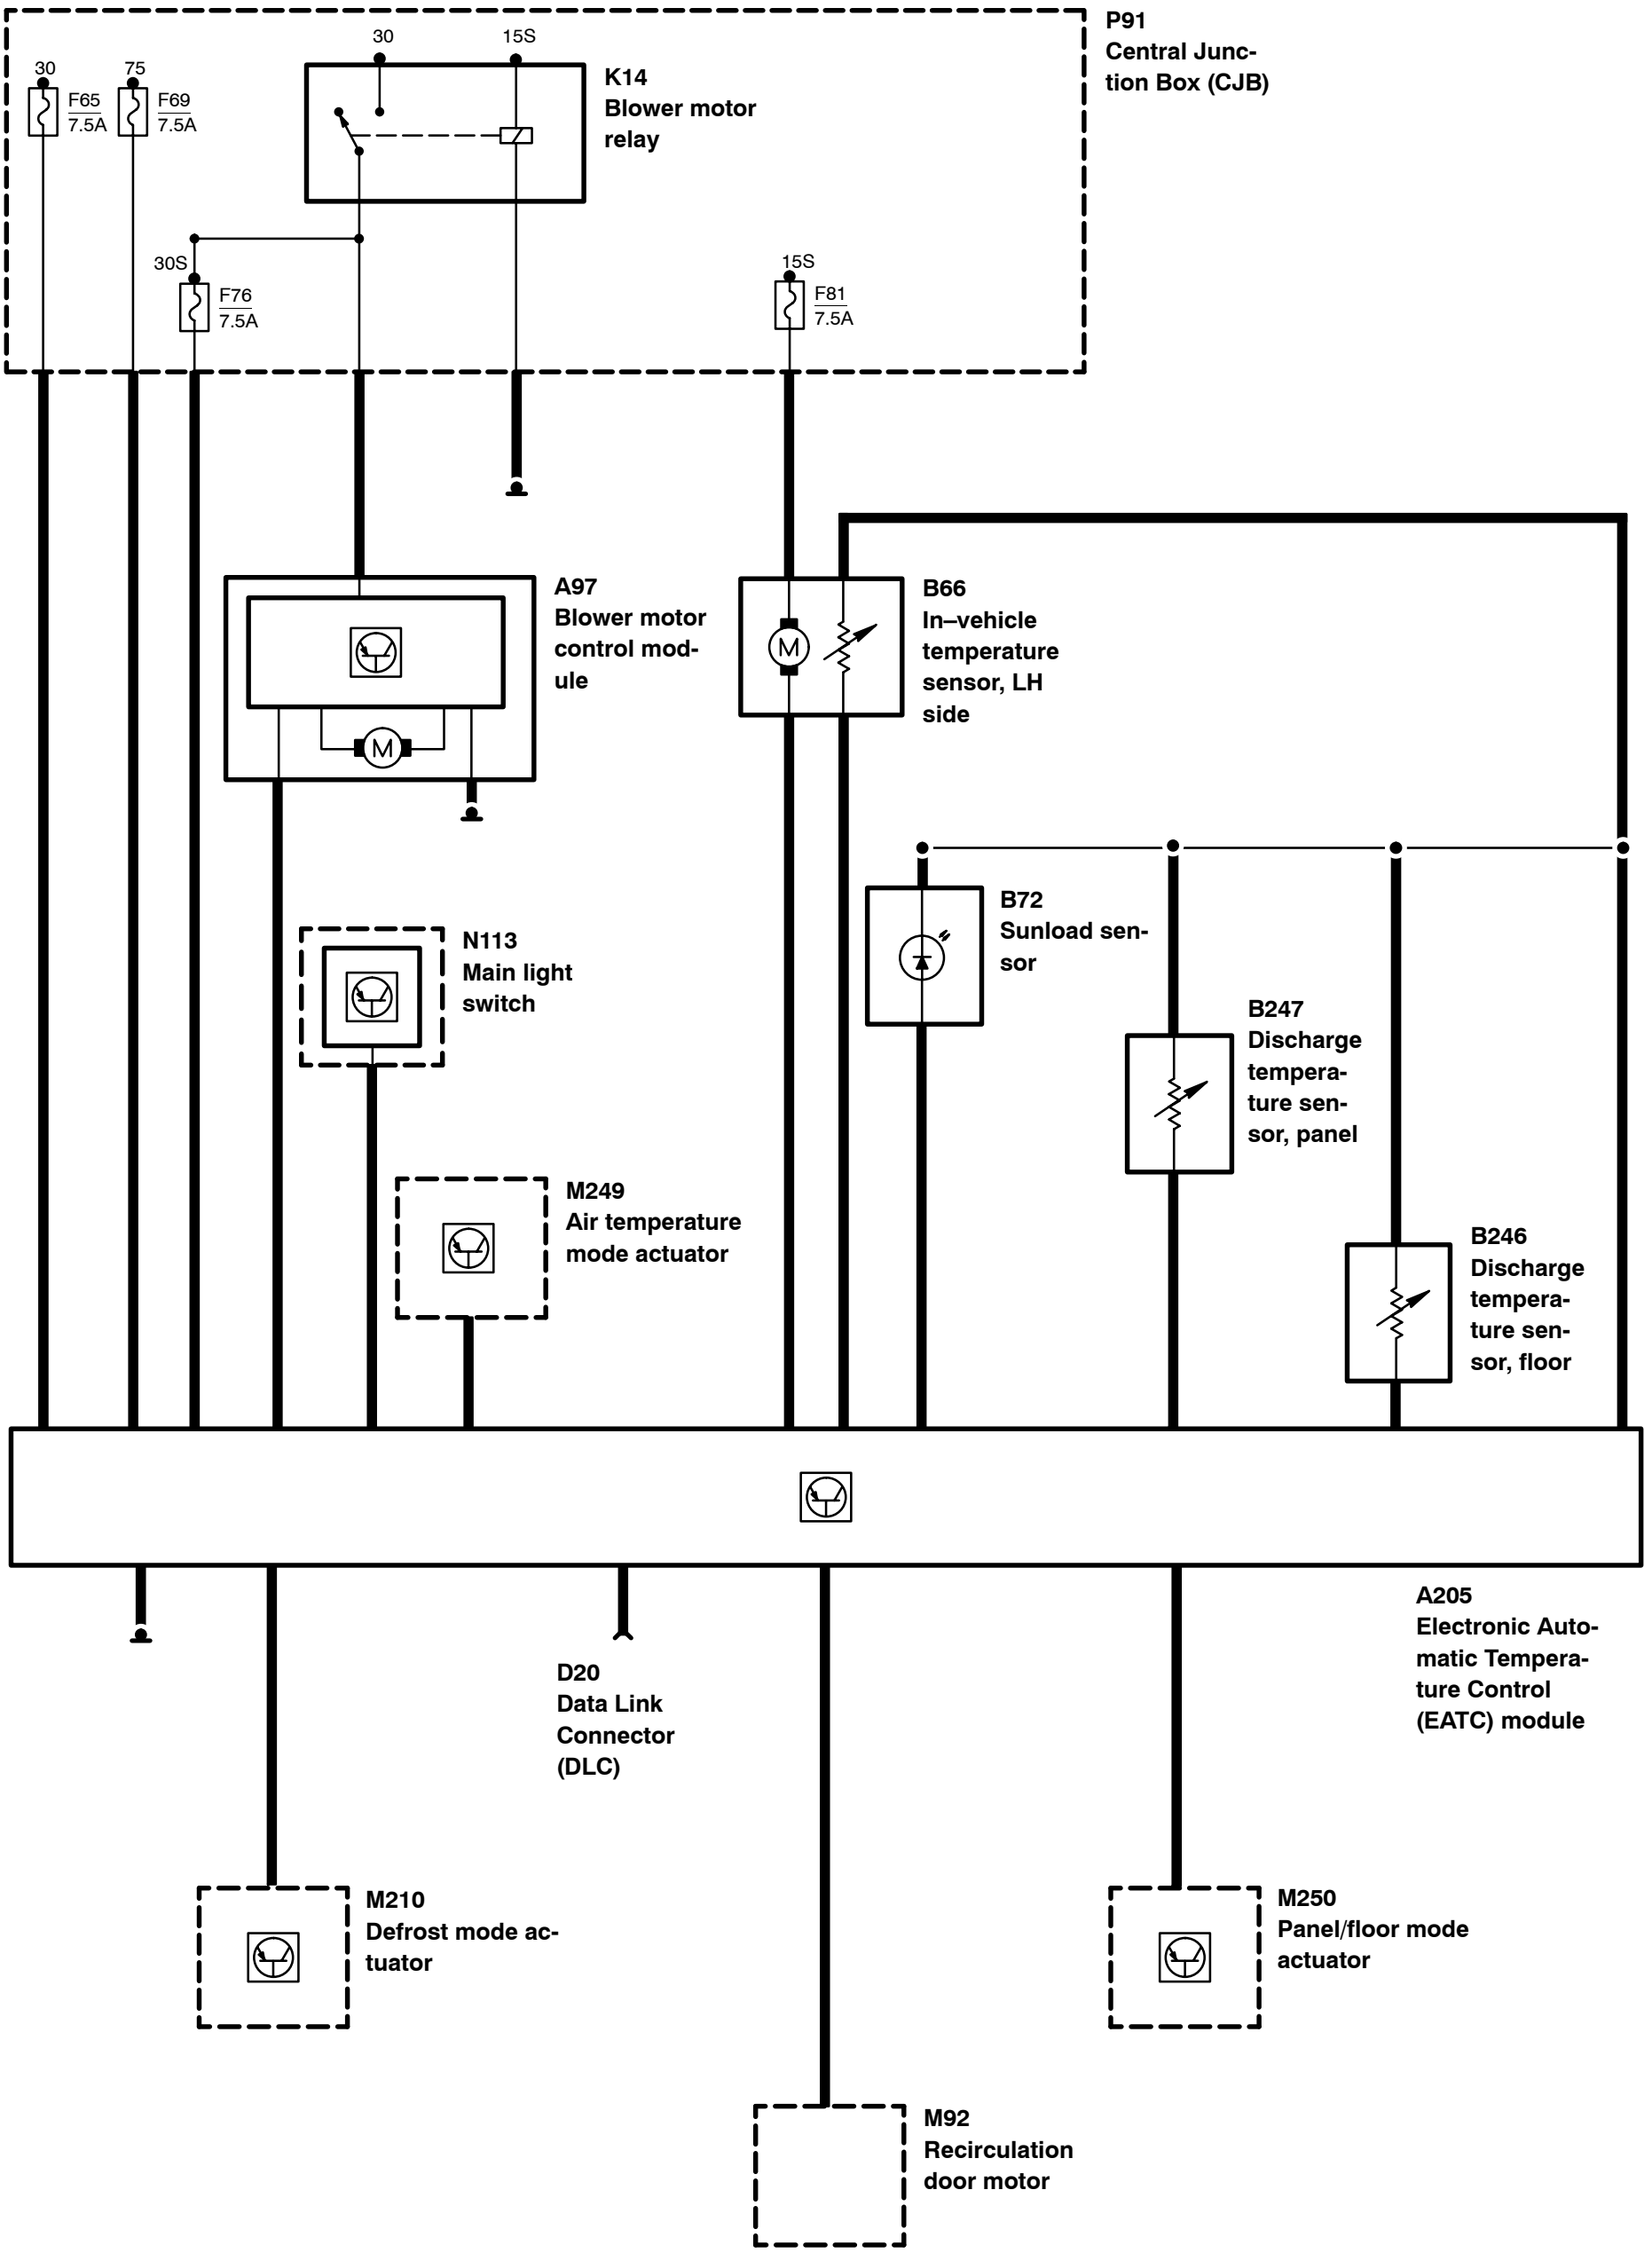


Air Conditioning – with EATC, as of 04/2004


Block diagram

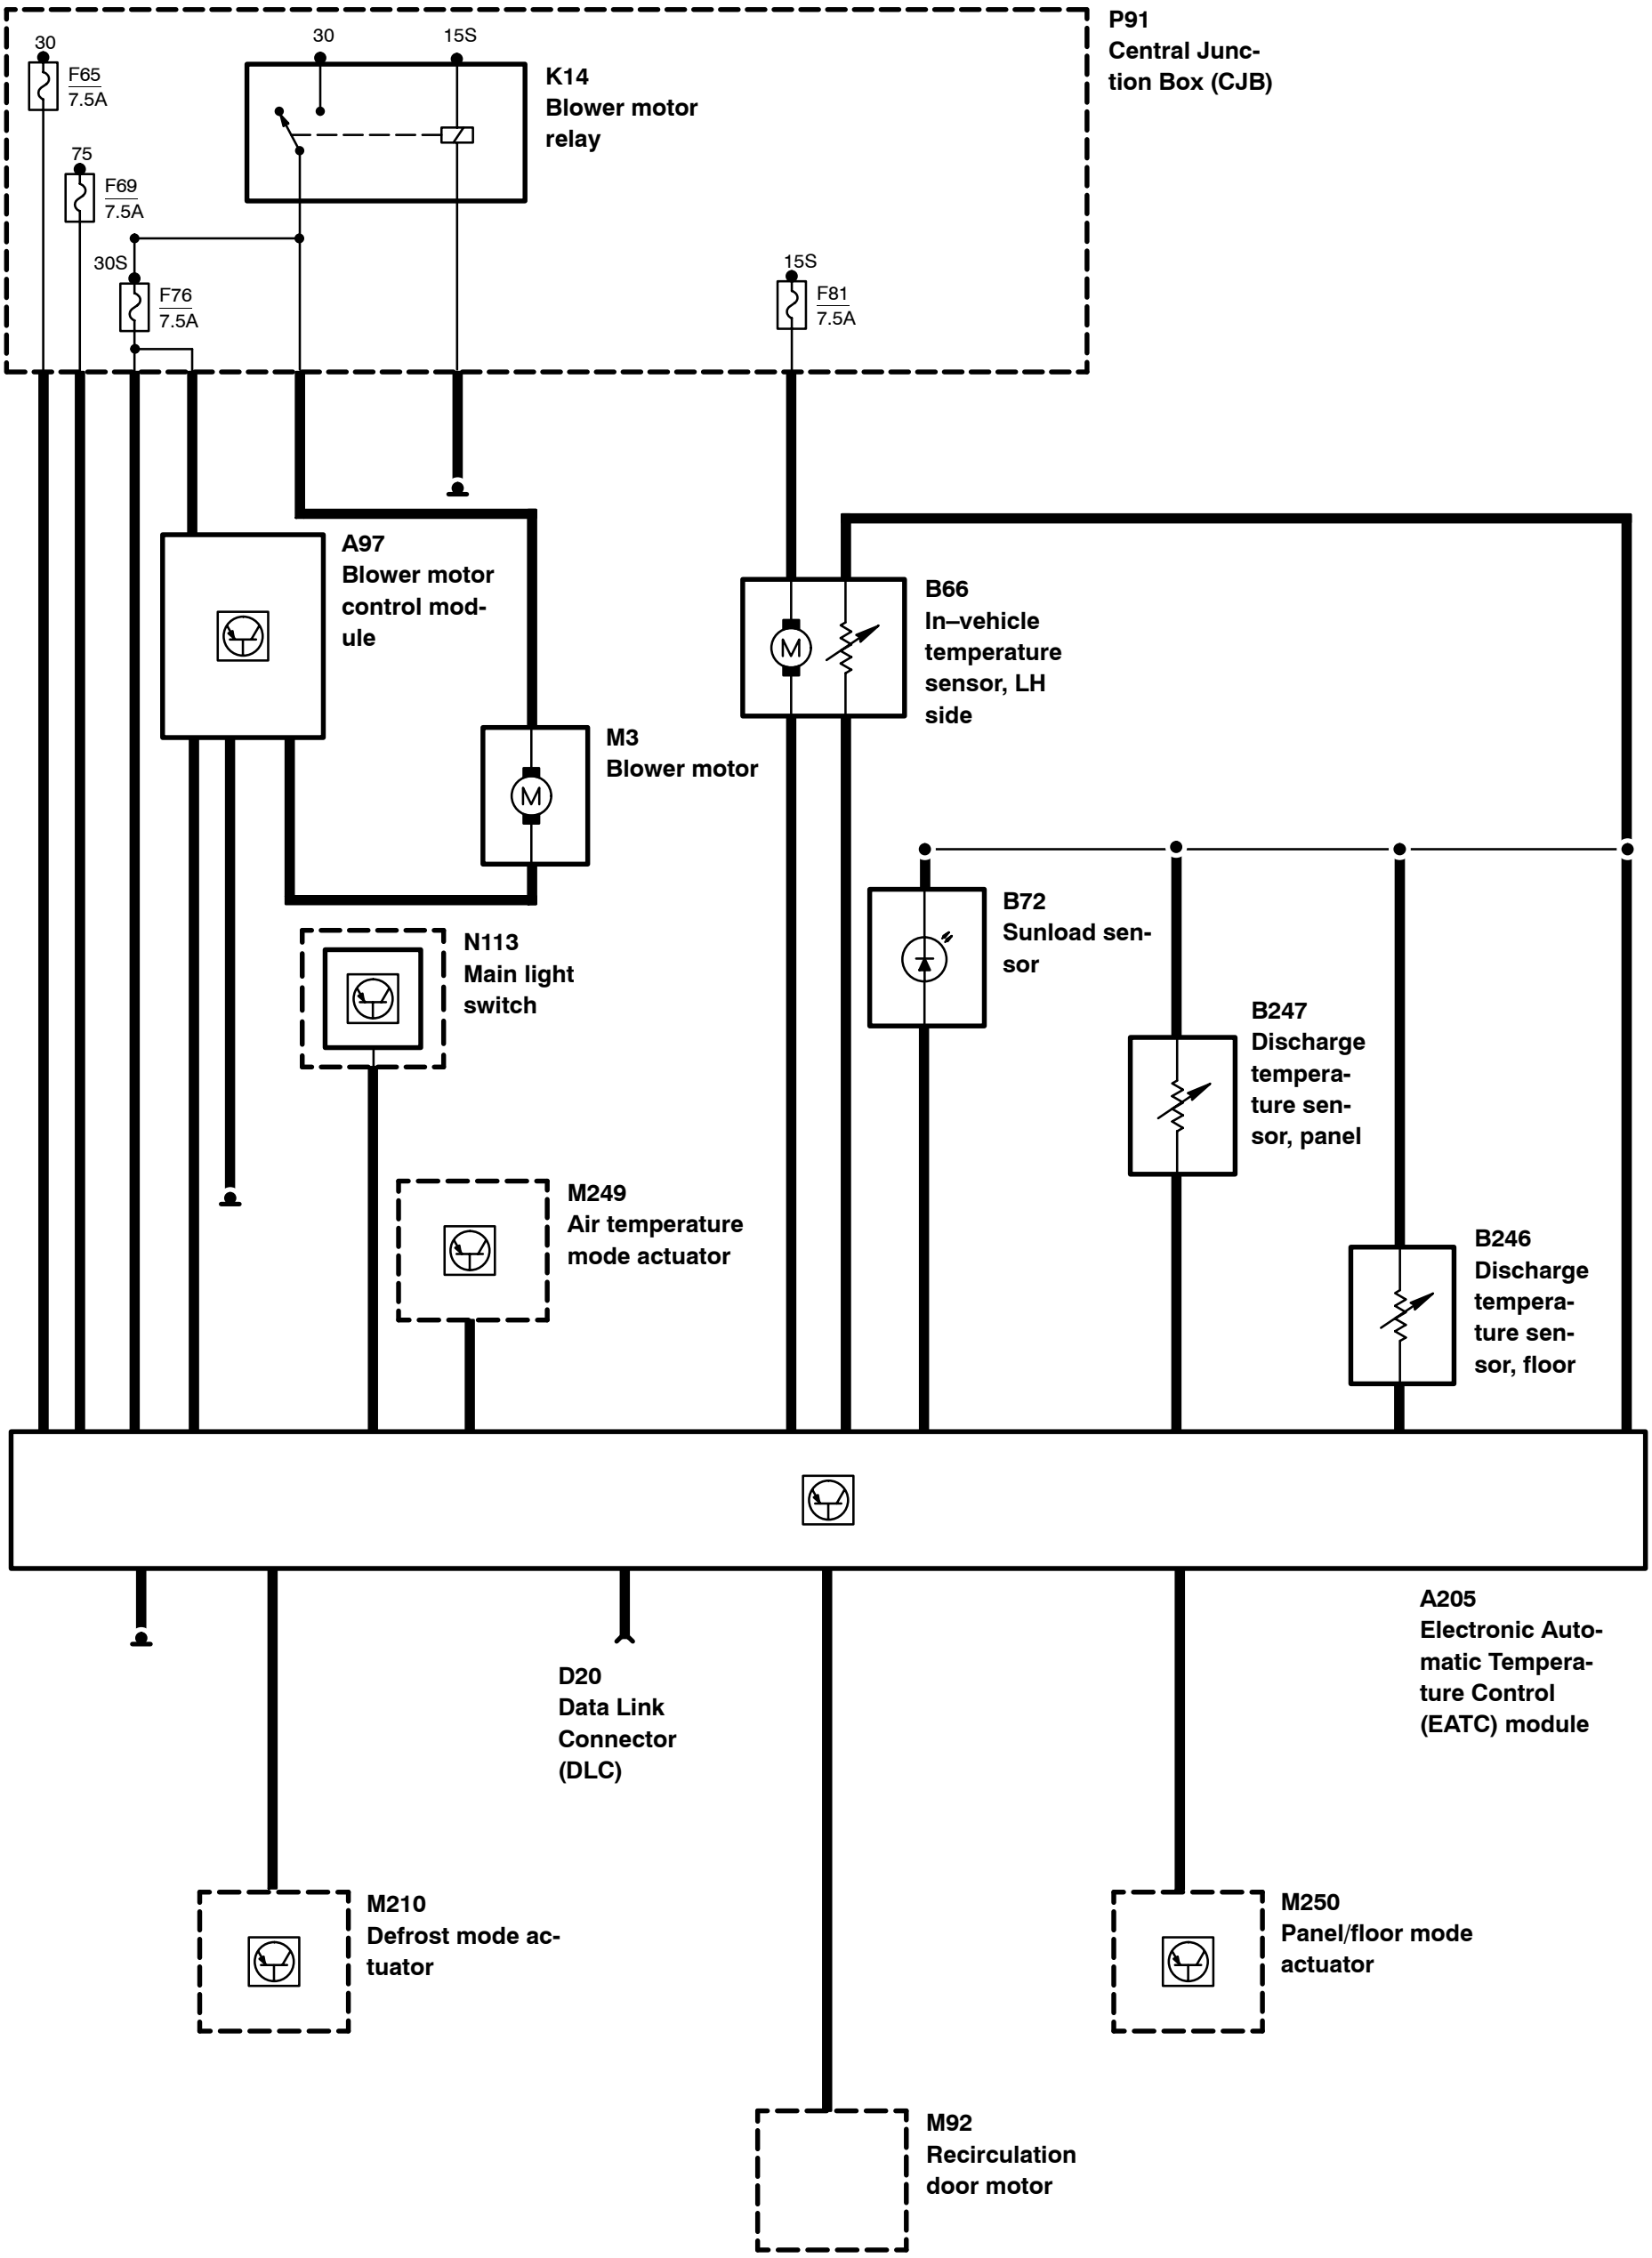


Air Conditioning – Petrol engines, except 1.8L Duratec–SCi (MI4)

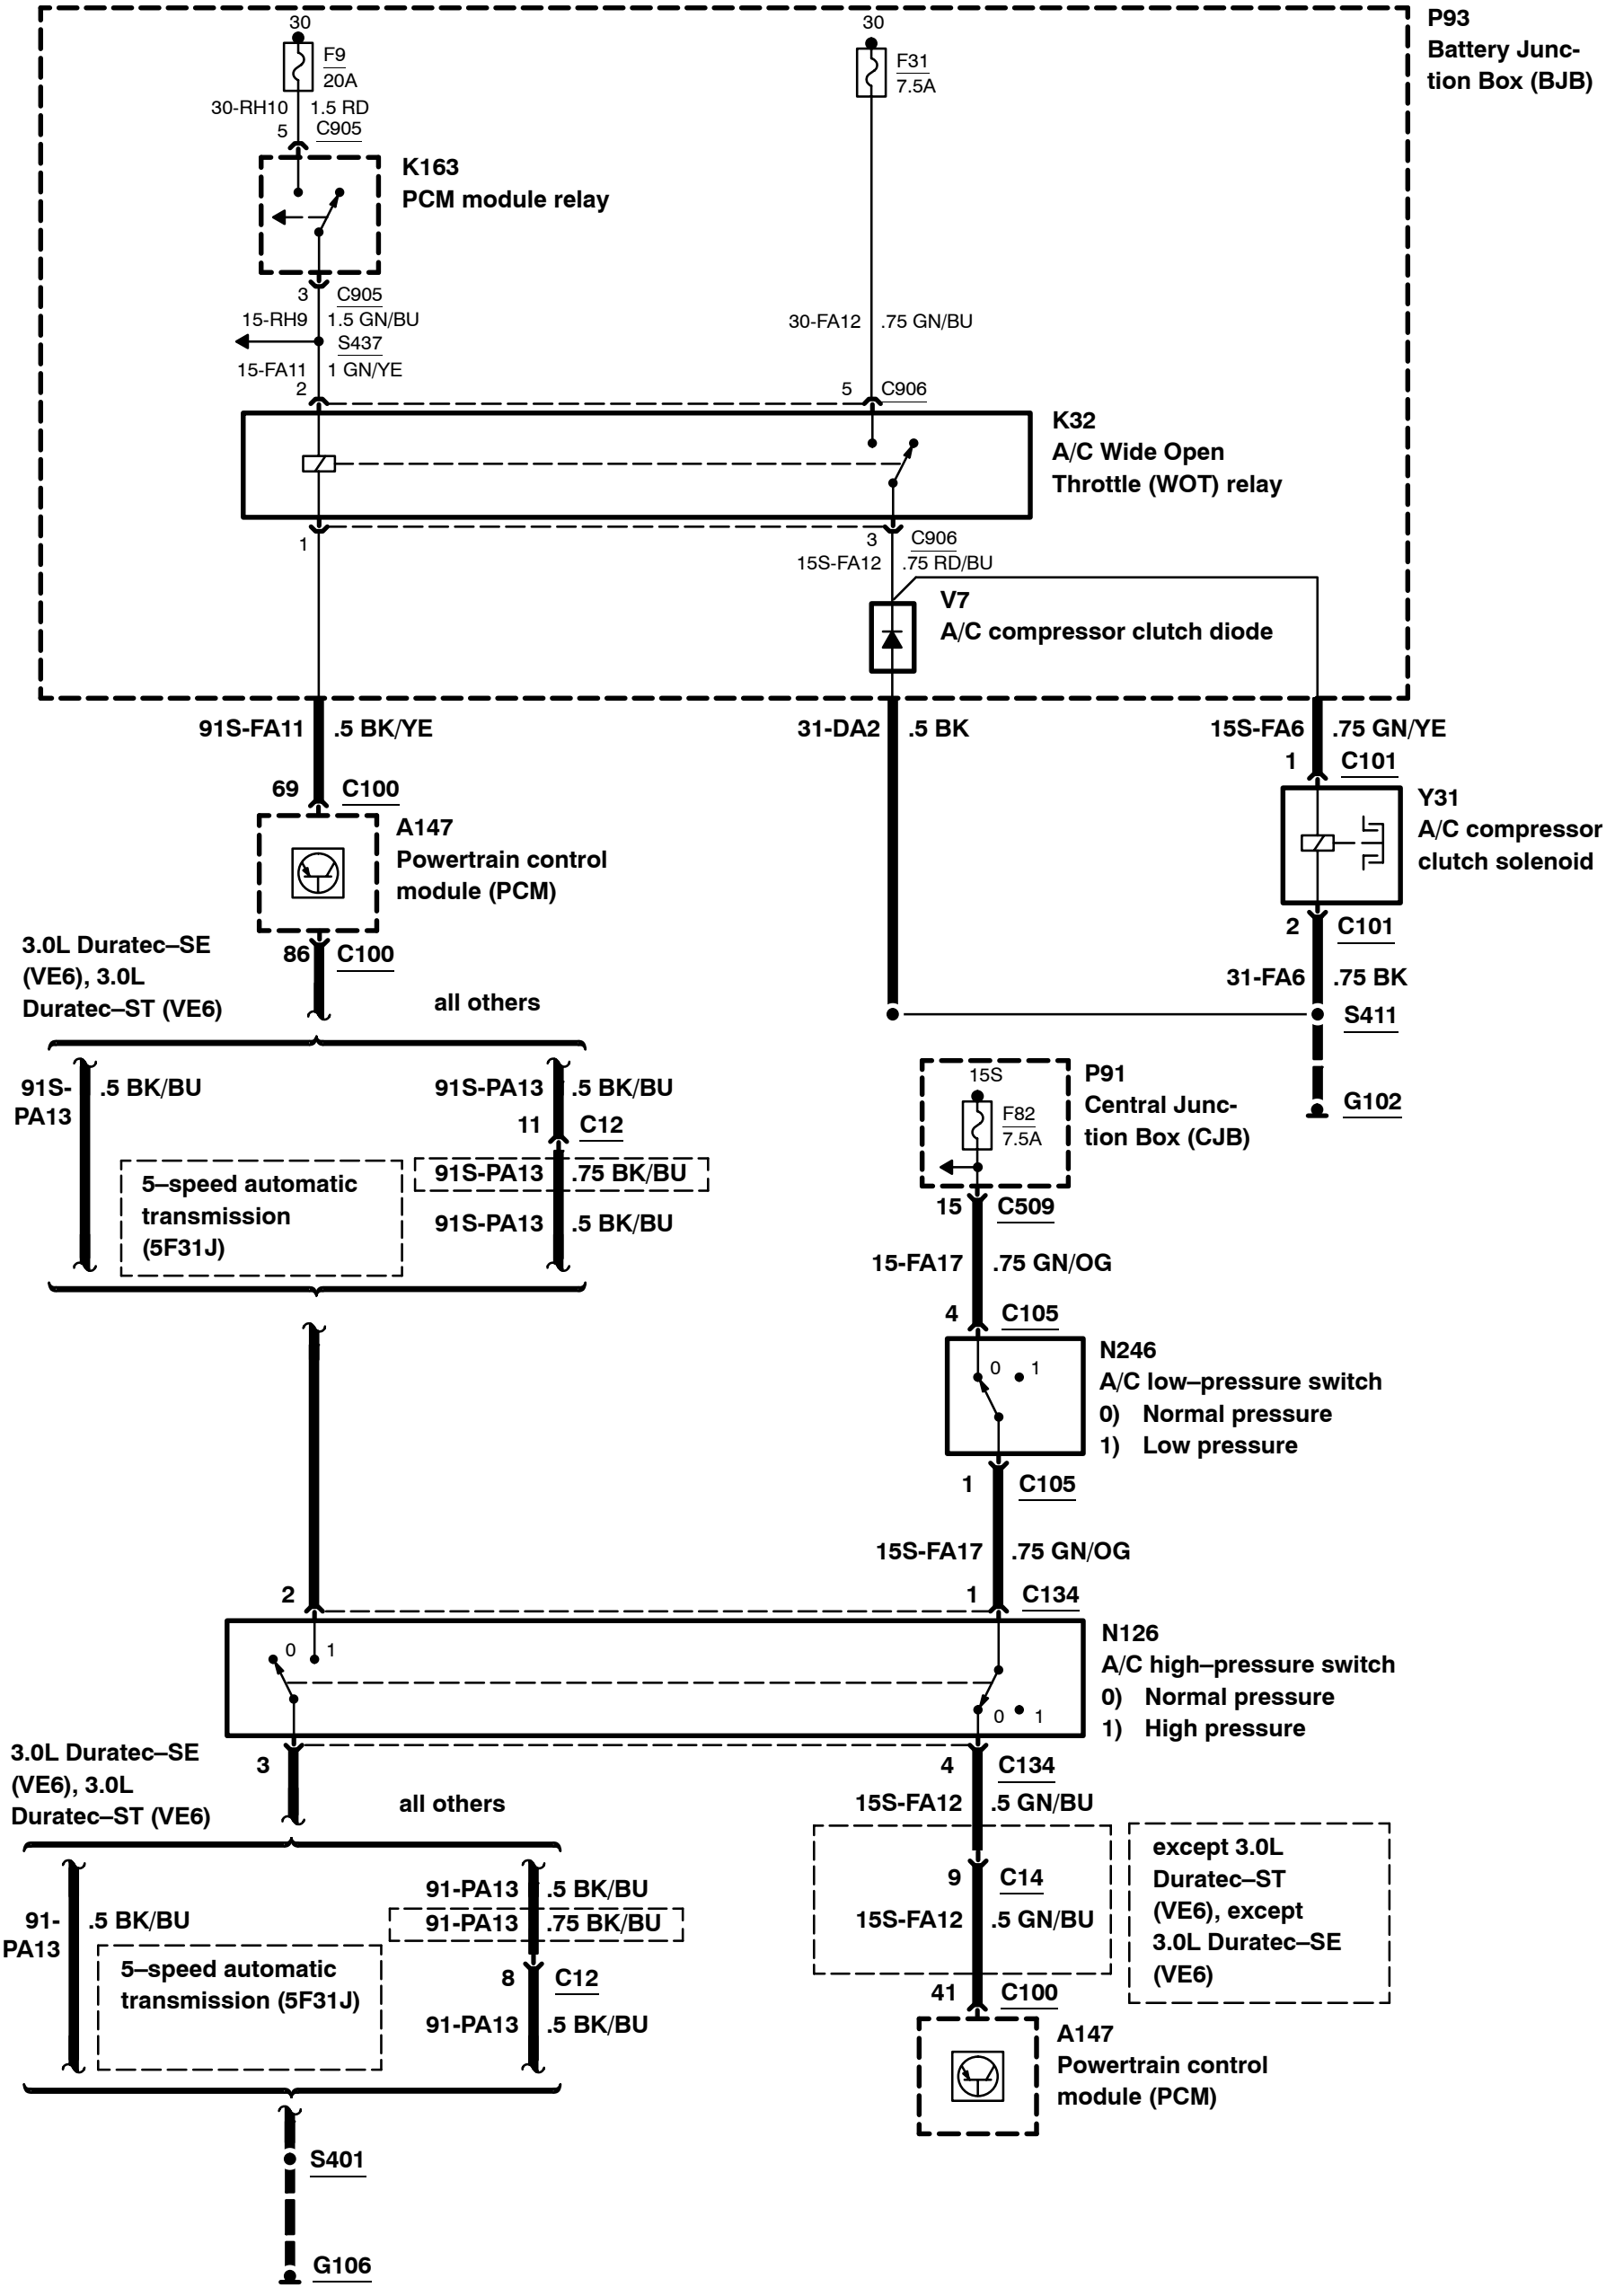


Air Conditioning – 1.8L Duratec–SCi (MI4)

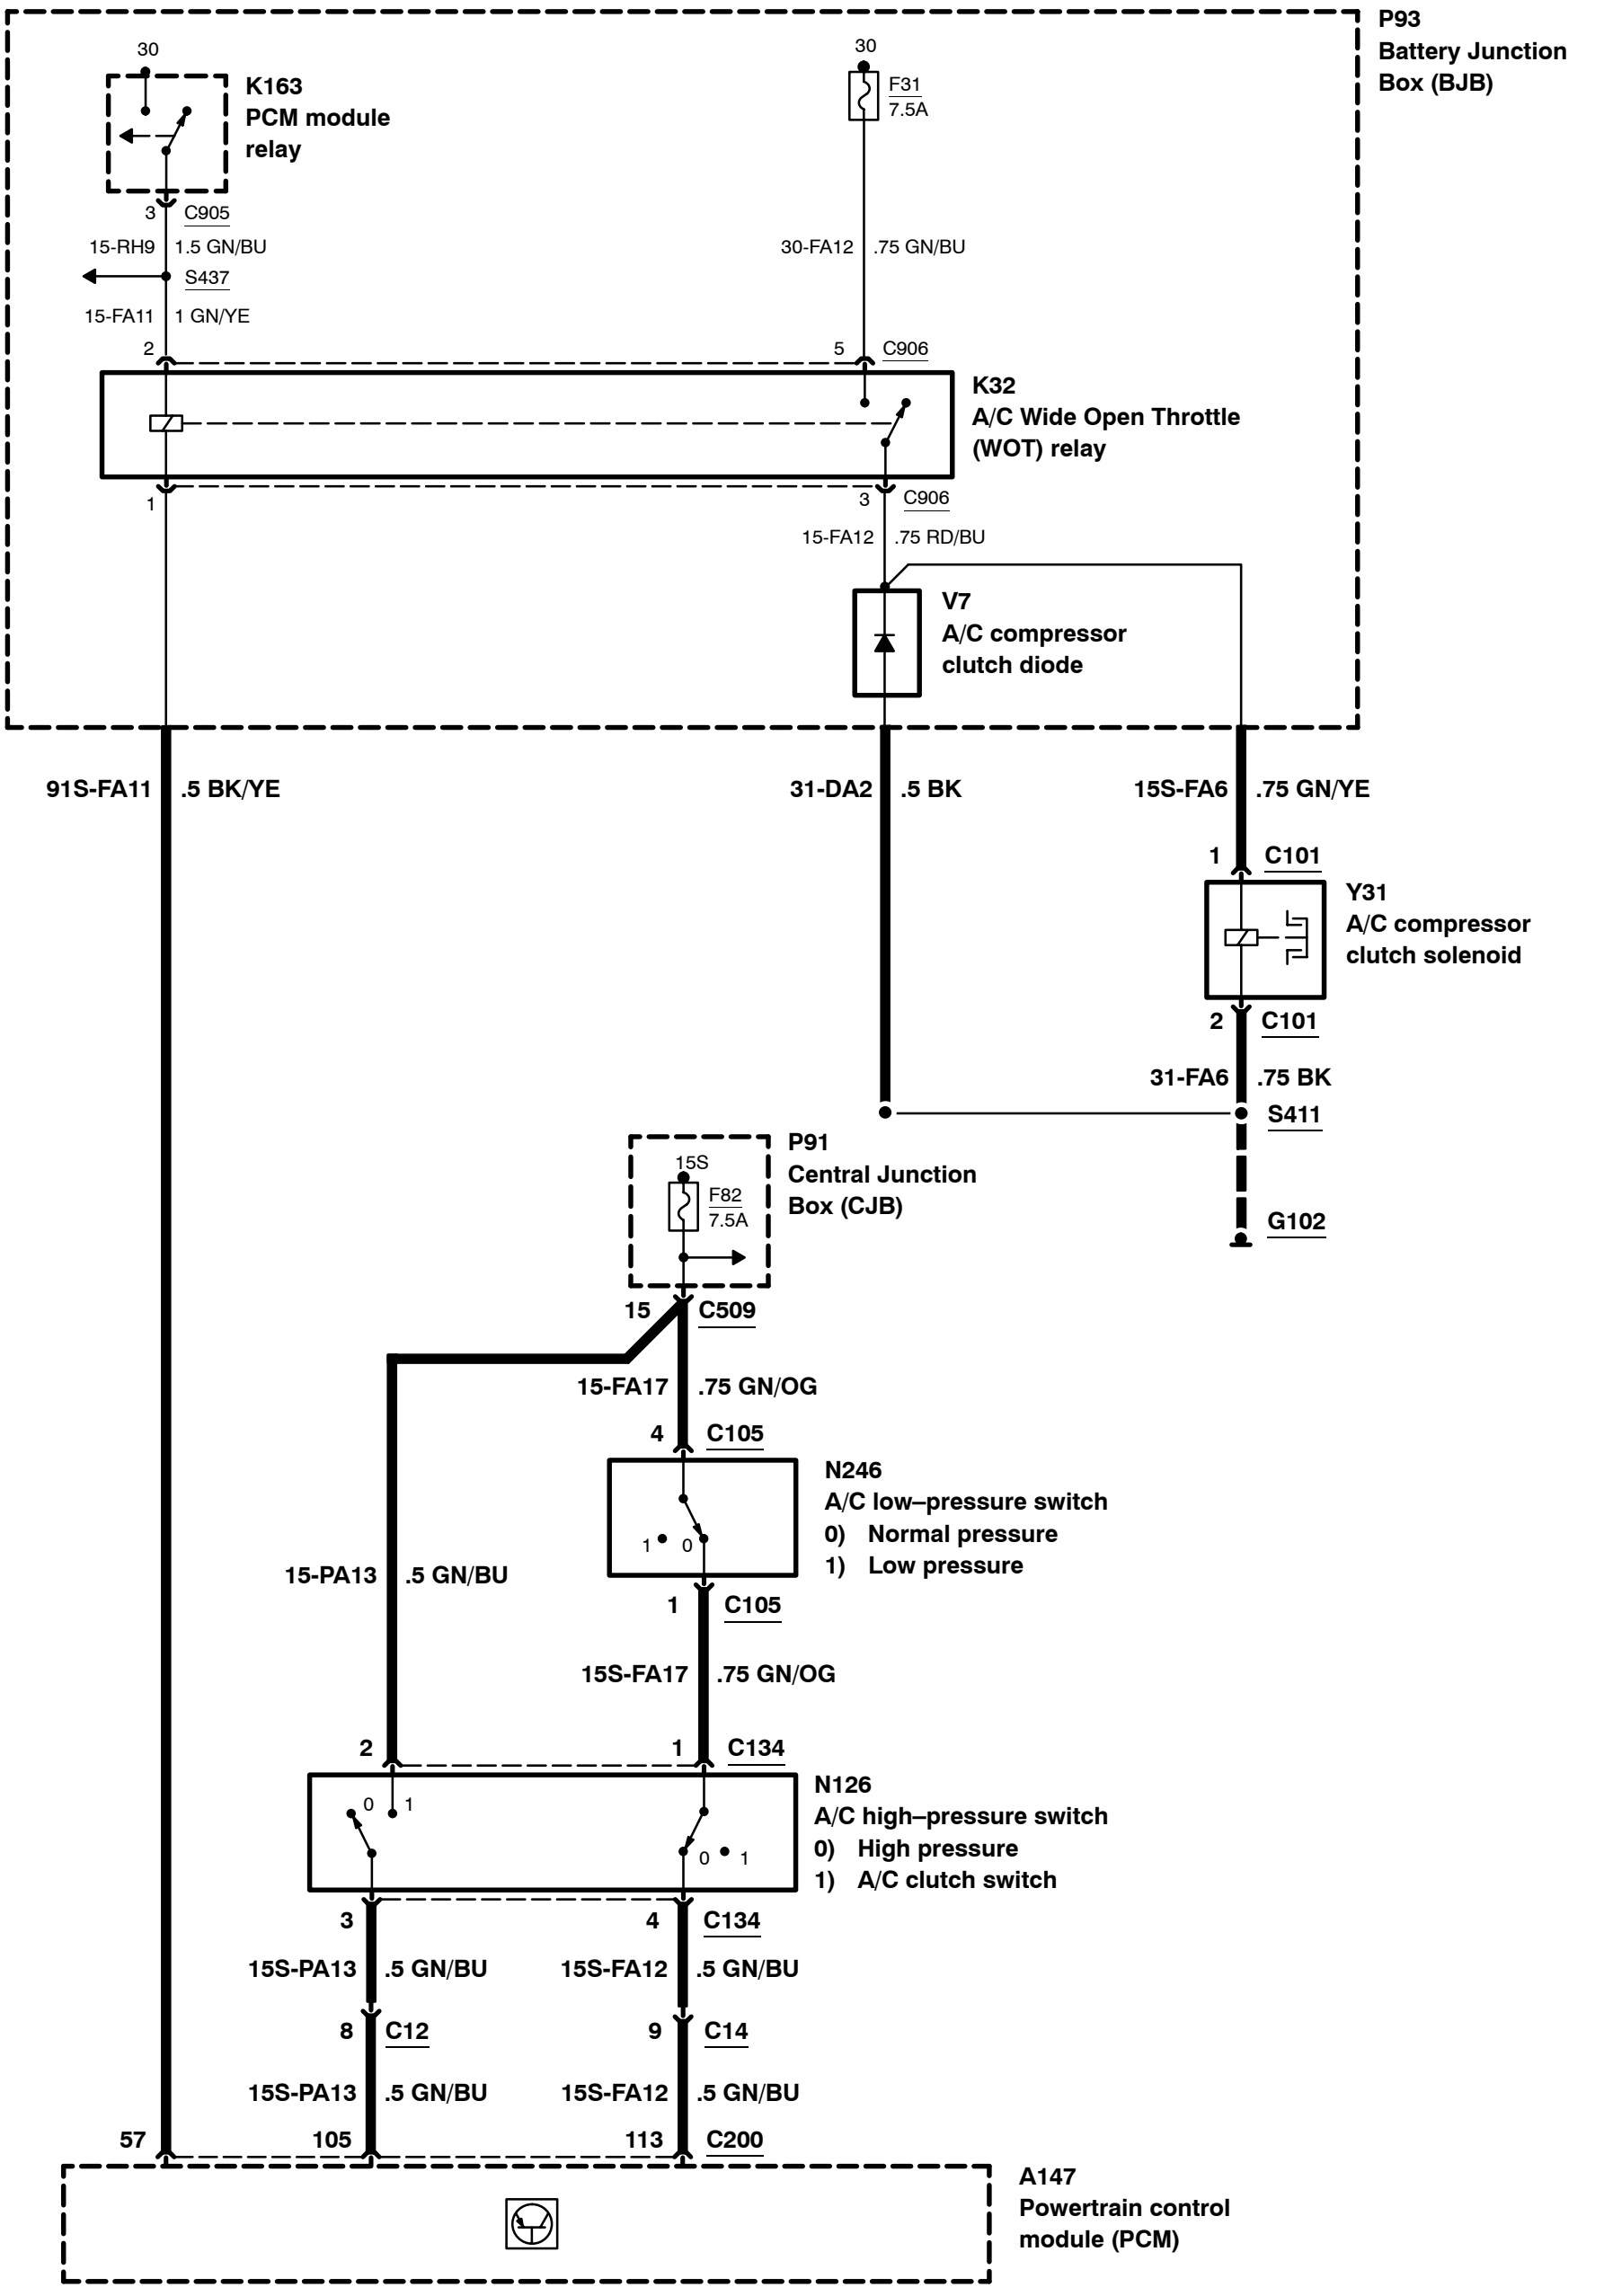

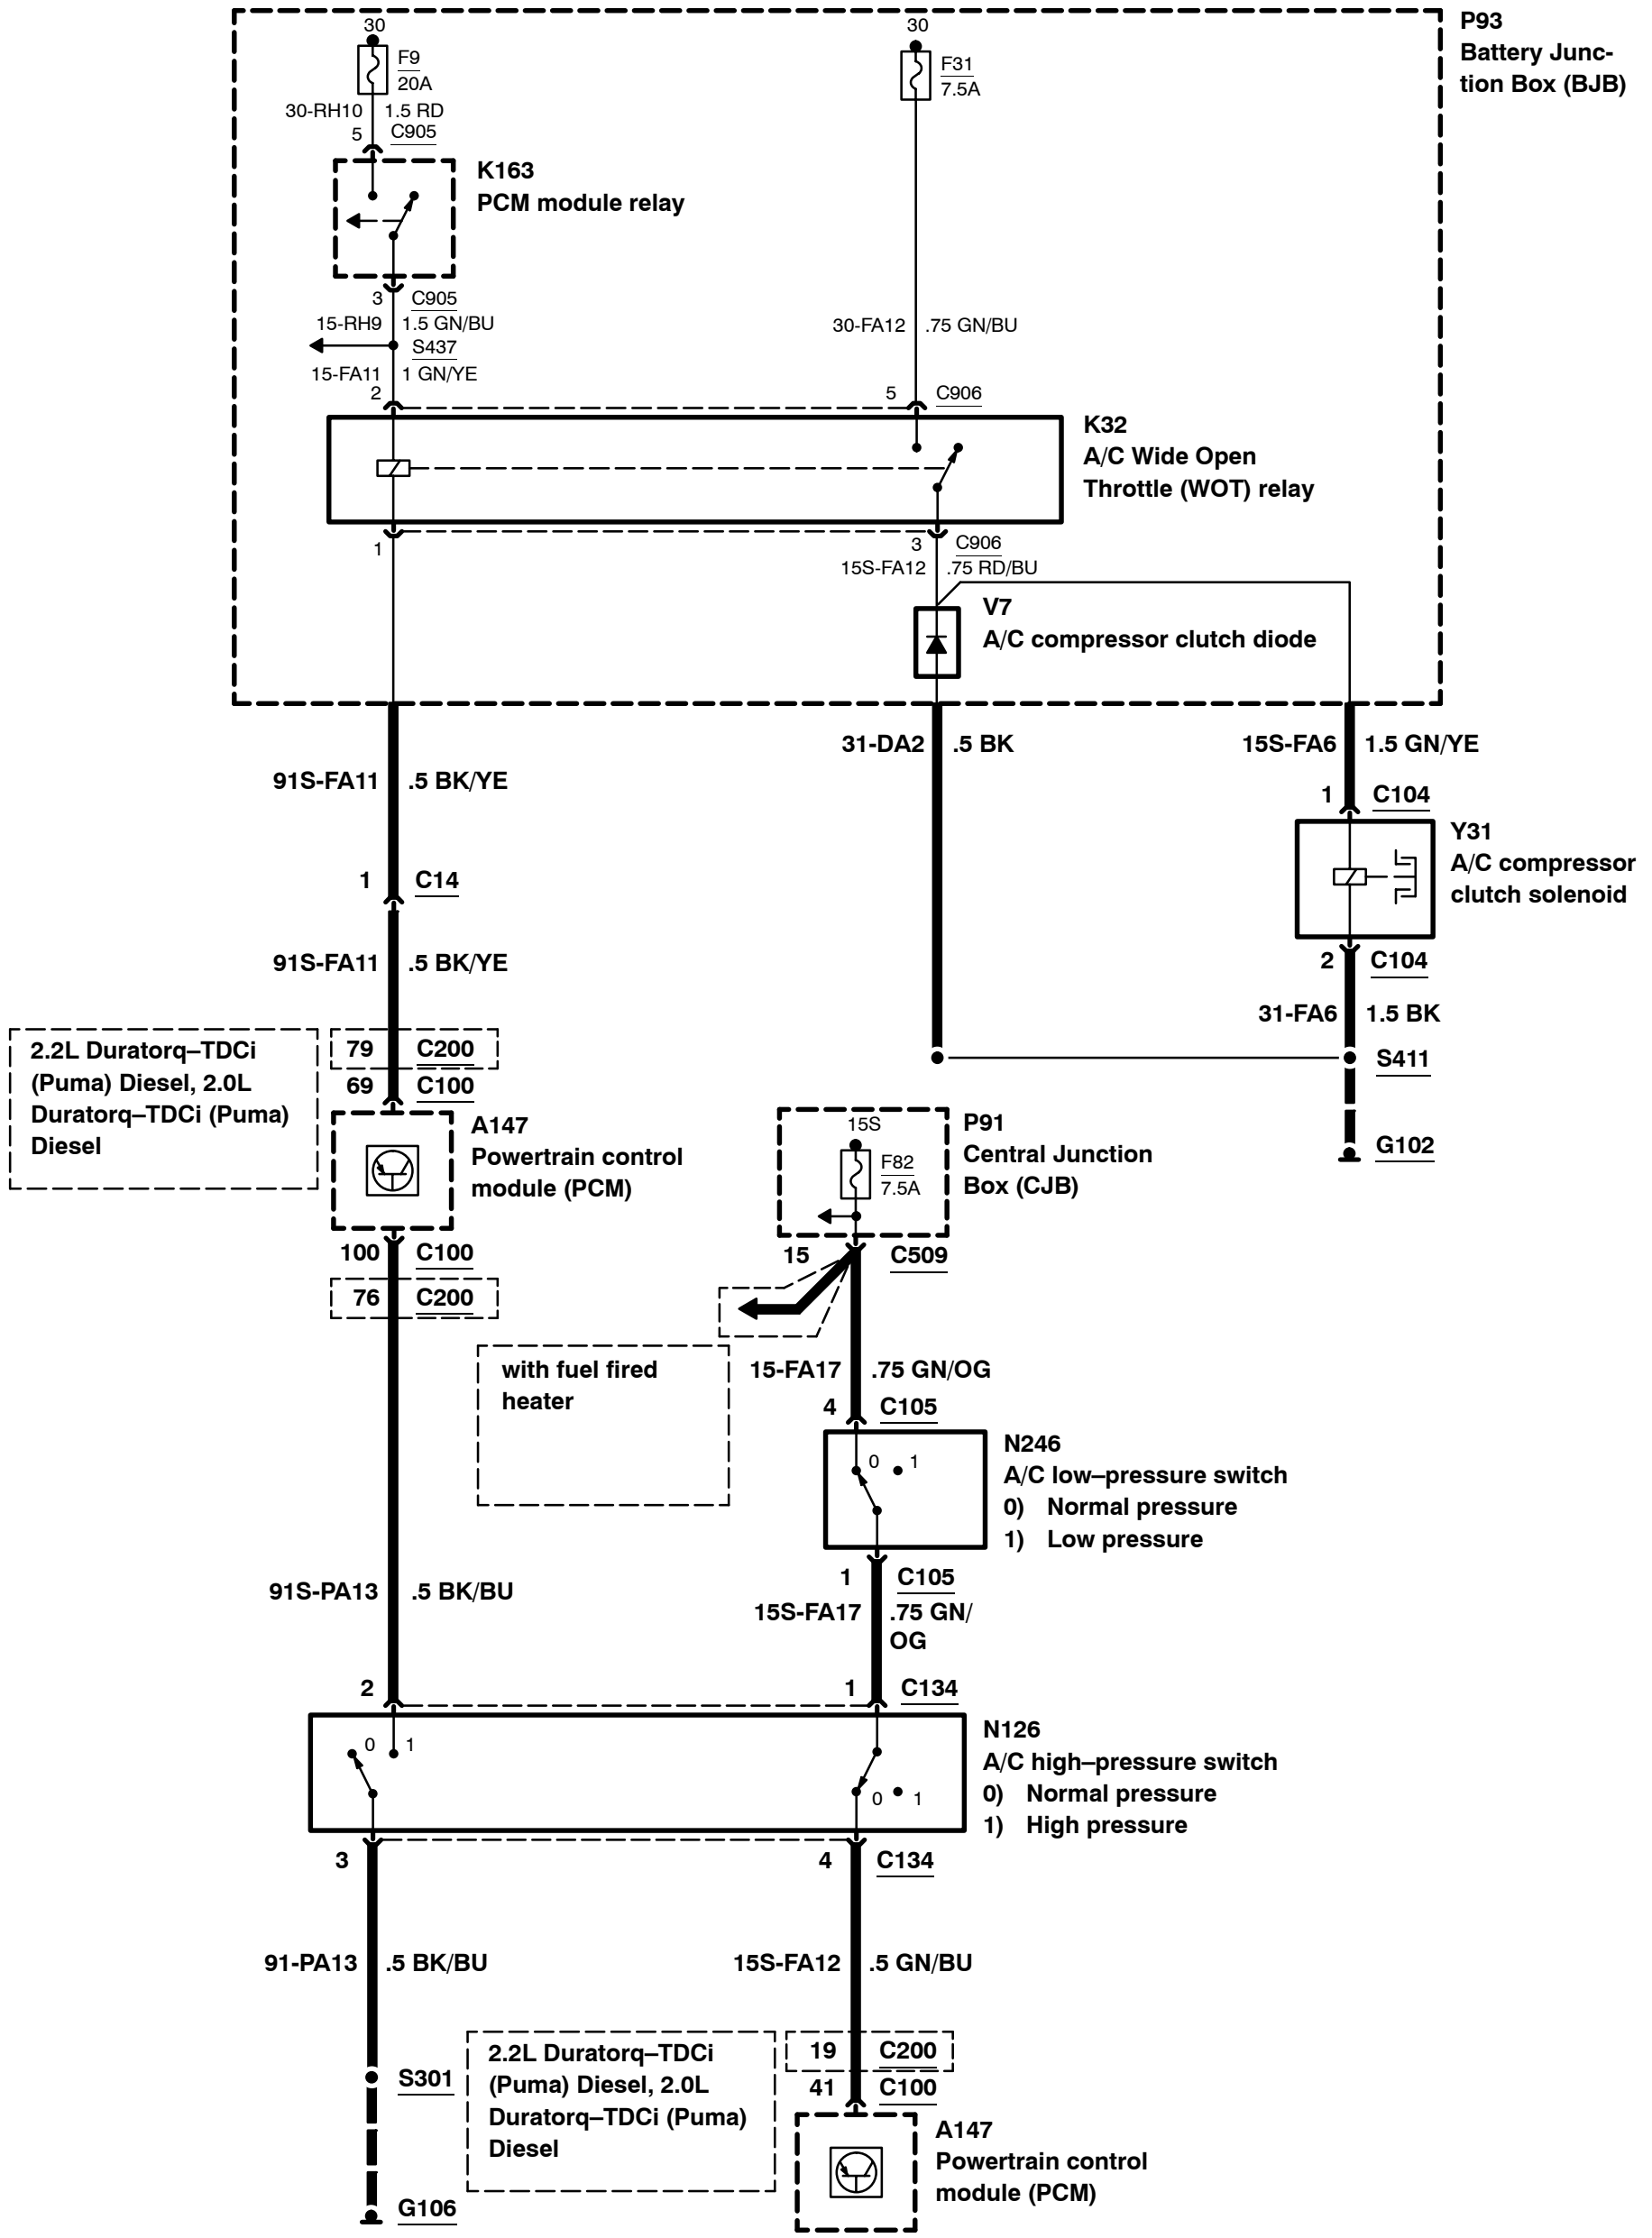

30
F9
20A
30-RH10
1.5 RD
5
C905
K163
PCM module relay
3
C905
15-RH9
1.5 GN/BU
S437
15-FA11
1 GN/YE
2
30
F31
7.5A
30-FA12
.75 GN/BU
5
C906
K32
A/C Wide Open
Throttle (WOT) relay
1
3
C906
15S-FA12
.75 RD/BU
V7
A/C compressor clutch diode
P93
Battery Junc-
tion Box (BJB)
91S-FA11
.5 BK/YE
1
C14
91S-FA11
.5 BK/YE
31-DA2
.5 BK
15S-FA6
1.5 GN/YE
1
C104
Y31
A/C compressor
clutch solenoid
2
C104
31-FA6
1.5 BK
S411
G102
2.2L Duratorq–TDCi
(Puma) Diesel, 2.0L
Duratorq–TDCi (Puma)
Diesel
79
C200
69
C100
A147
Powertrain control
module (PCM)
100
C100
76
C200
15S
F82
7.5A
P91
Central Junction
Box (CJB)
15
C509
with fuel fired
heater
15-FA17
.75 GN/OG
4
C105
N246
A/C low–pressure switch
0) Normal pressure
1) Low pressure
91S-PA13
.5 BK/BU
1
C105
15S-FA17
.75 GN/
OG
2
1
C134
N126
A/C high–pressure switch
0) Normal pressure
1) High pressure
3
4
C134
91-PA13
.5 BK/BU
15S-FA12
.5 GN/BU
S301
G106
2.2L Duratorq–TDCi
(Puma) Diesel, 2.0L
Duratorq–TDCi (Puma)
Diesel
19
C200
41
C100
A147
Powertrain control
module (PCM)

Air Conditioning

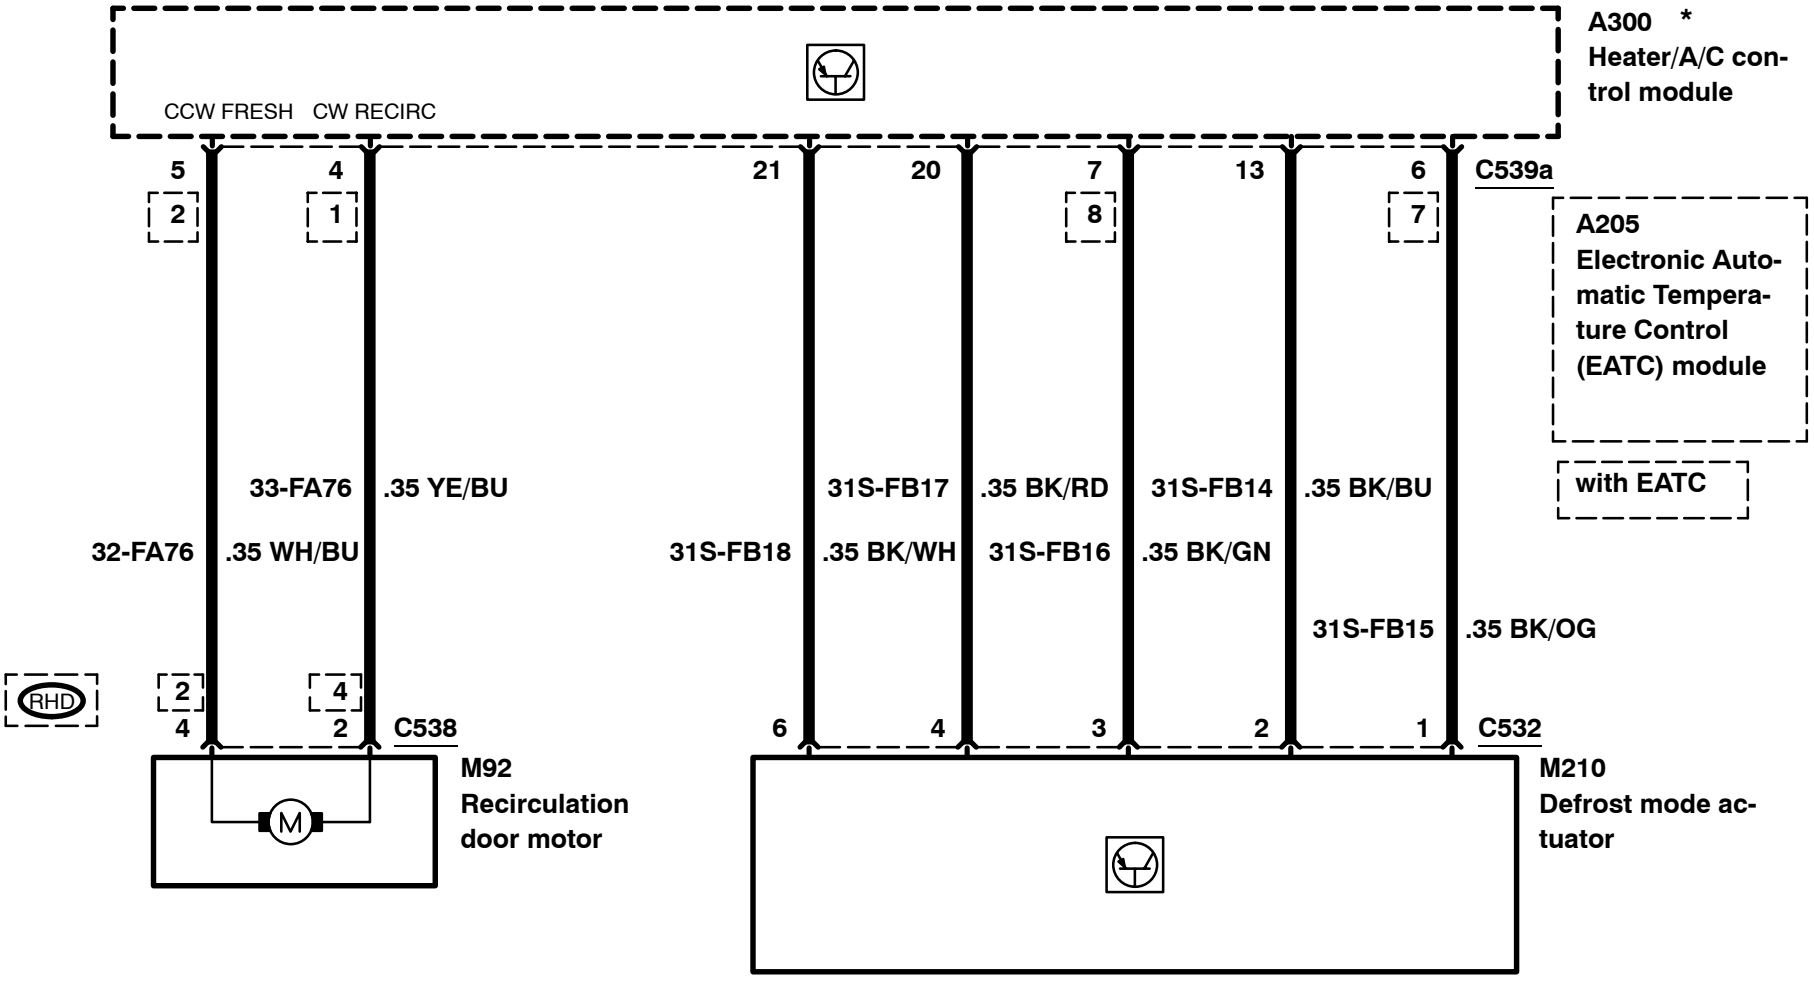


* before 04/2004


Air Conditioning

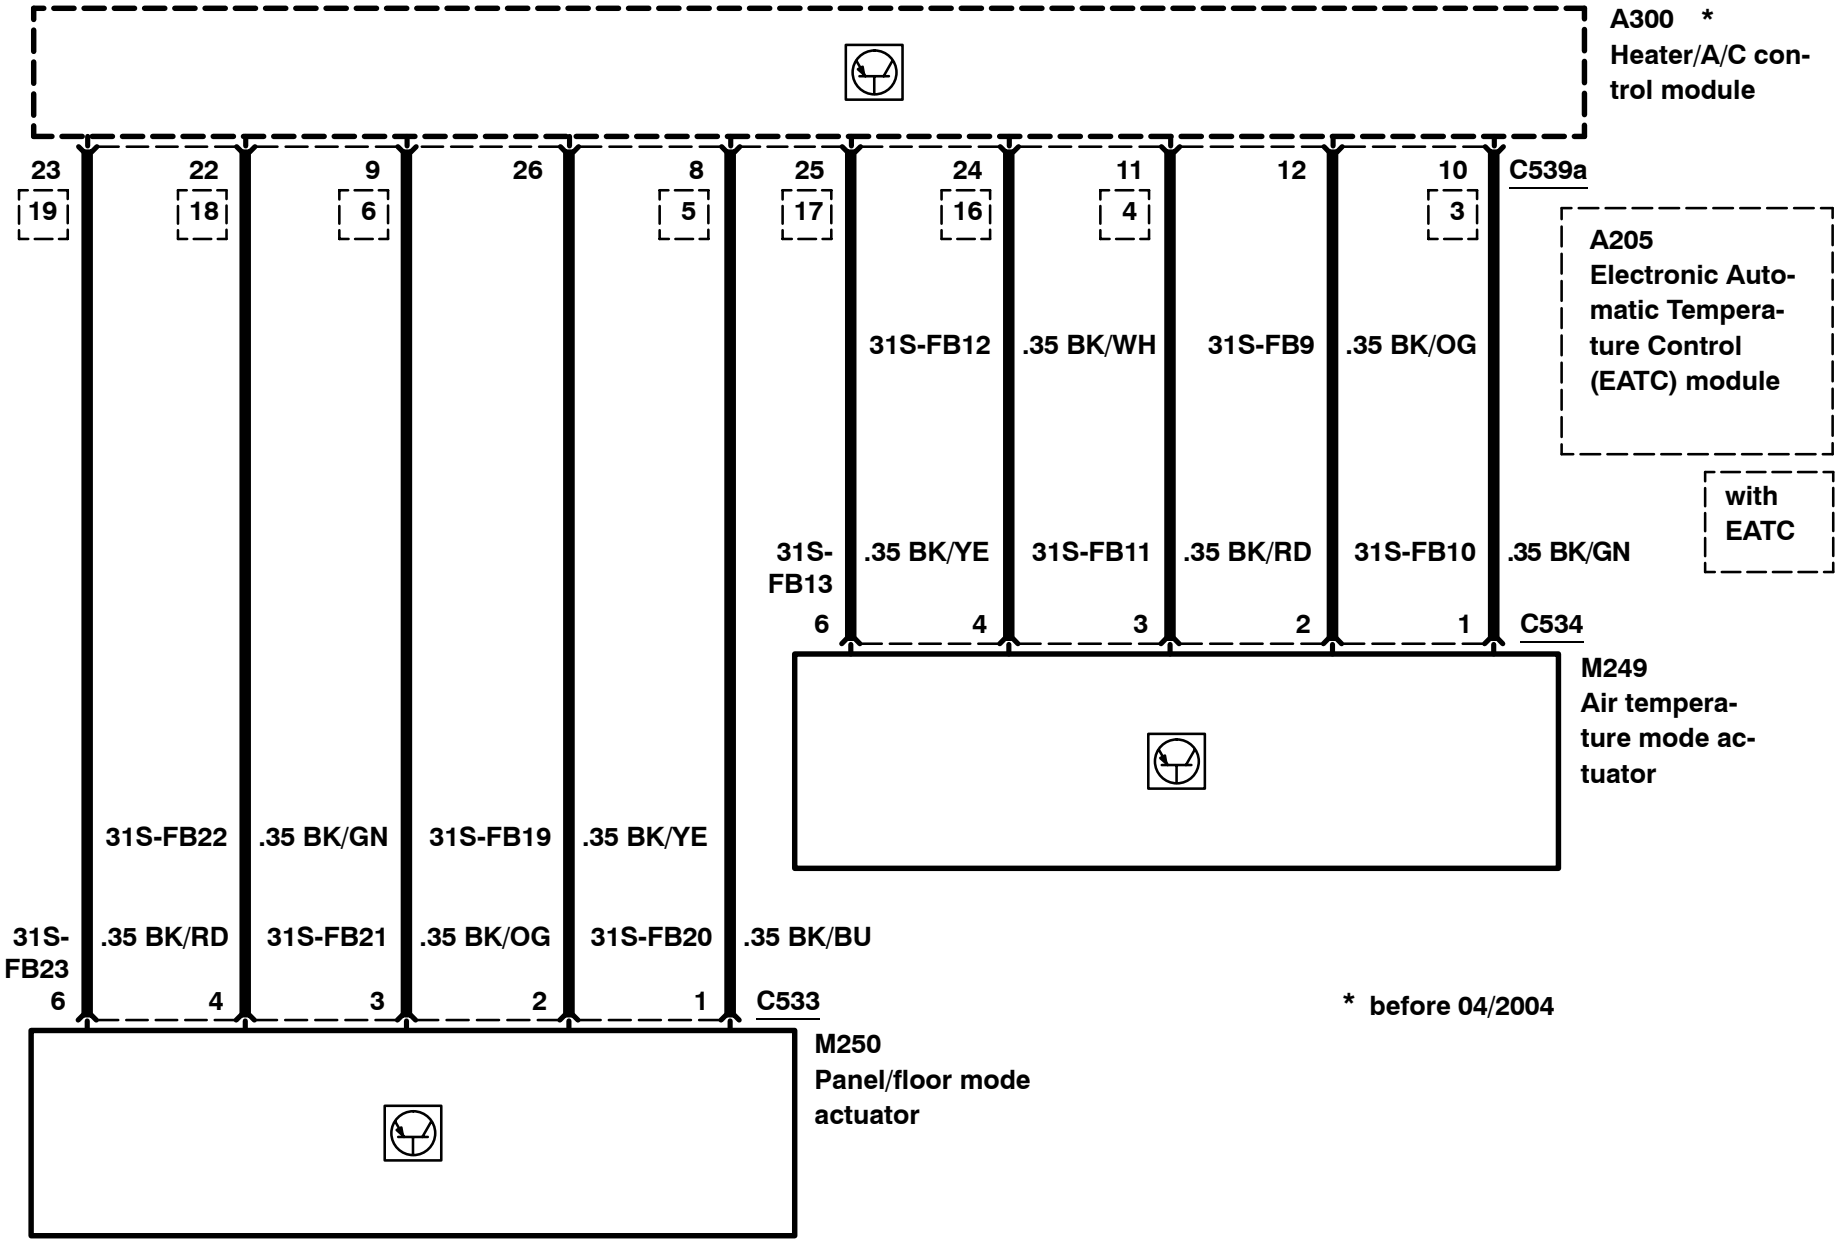


Air Conditioning – Manual A/C, before 04/2004

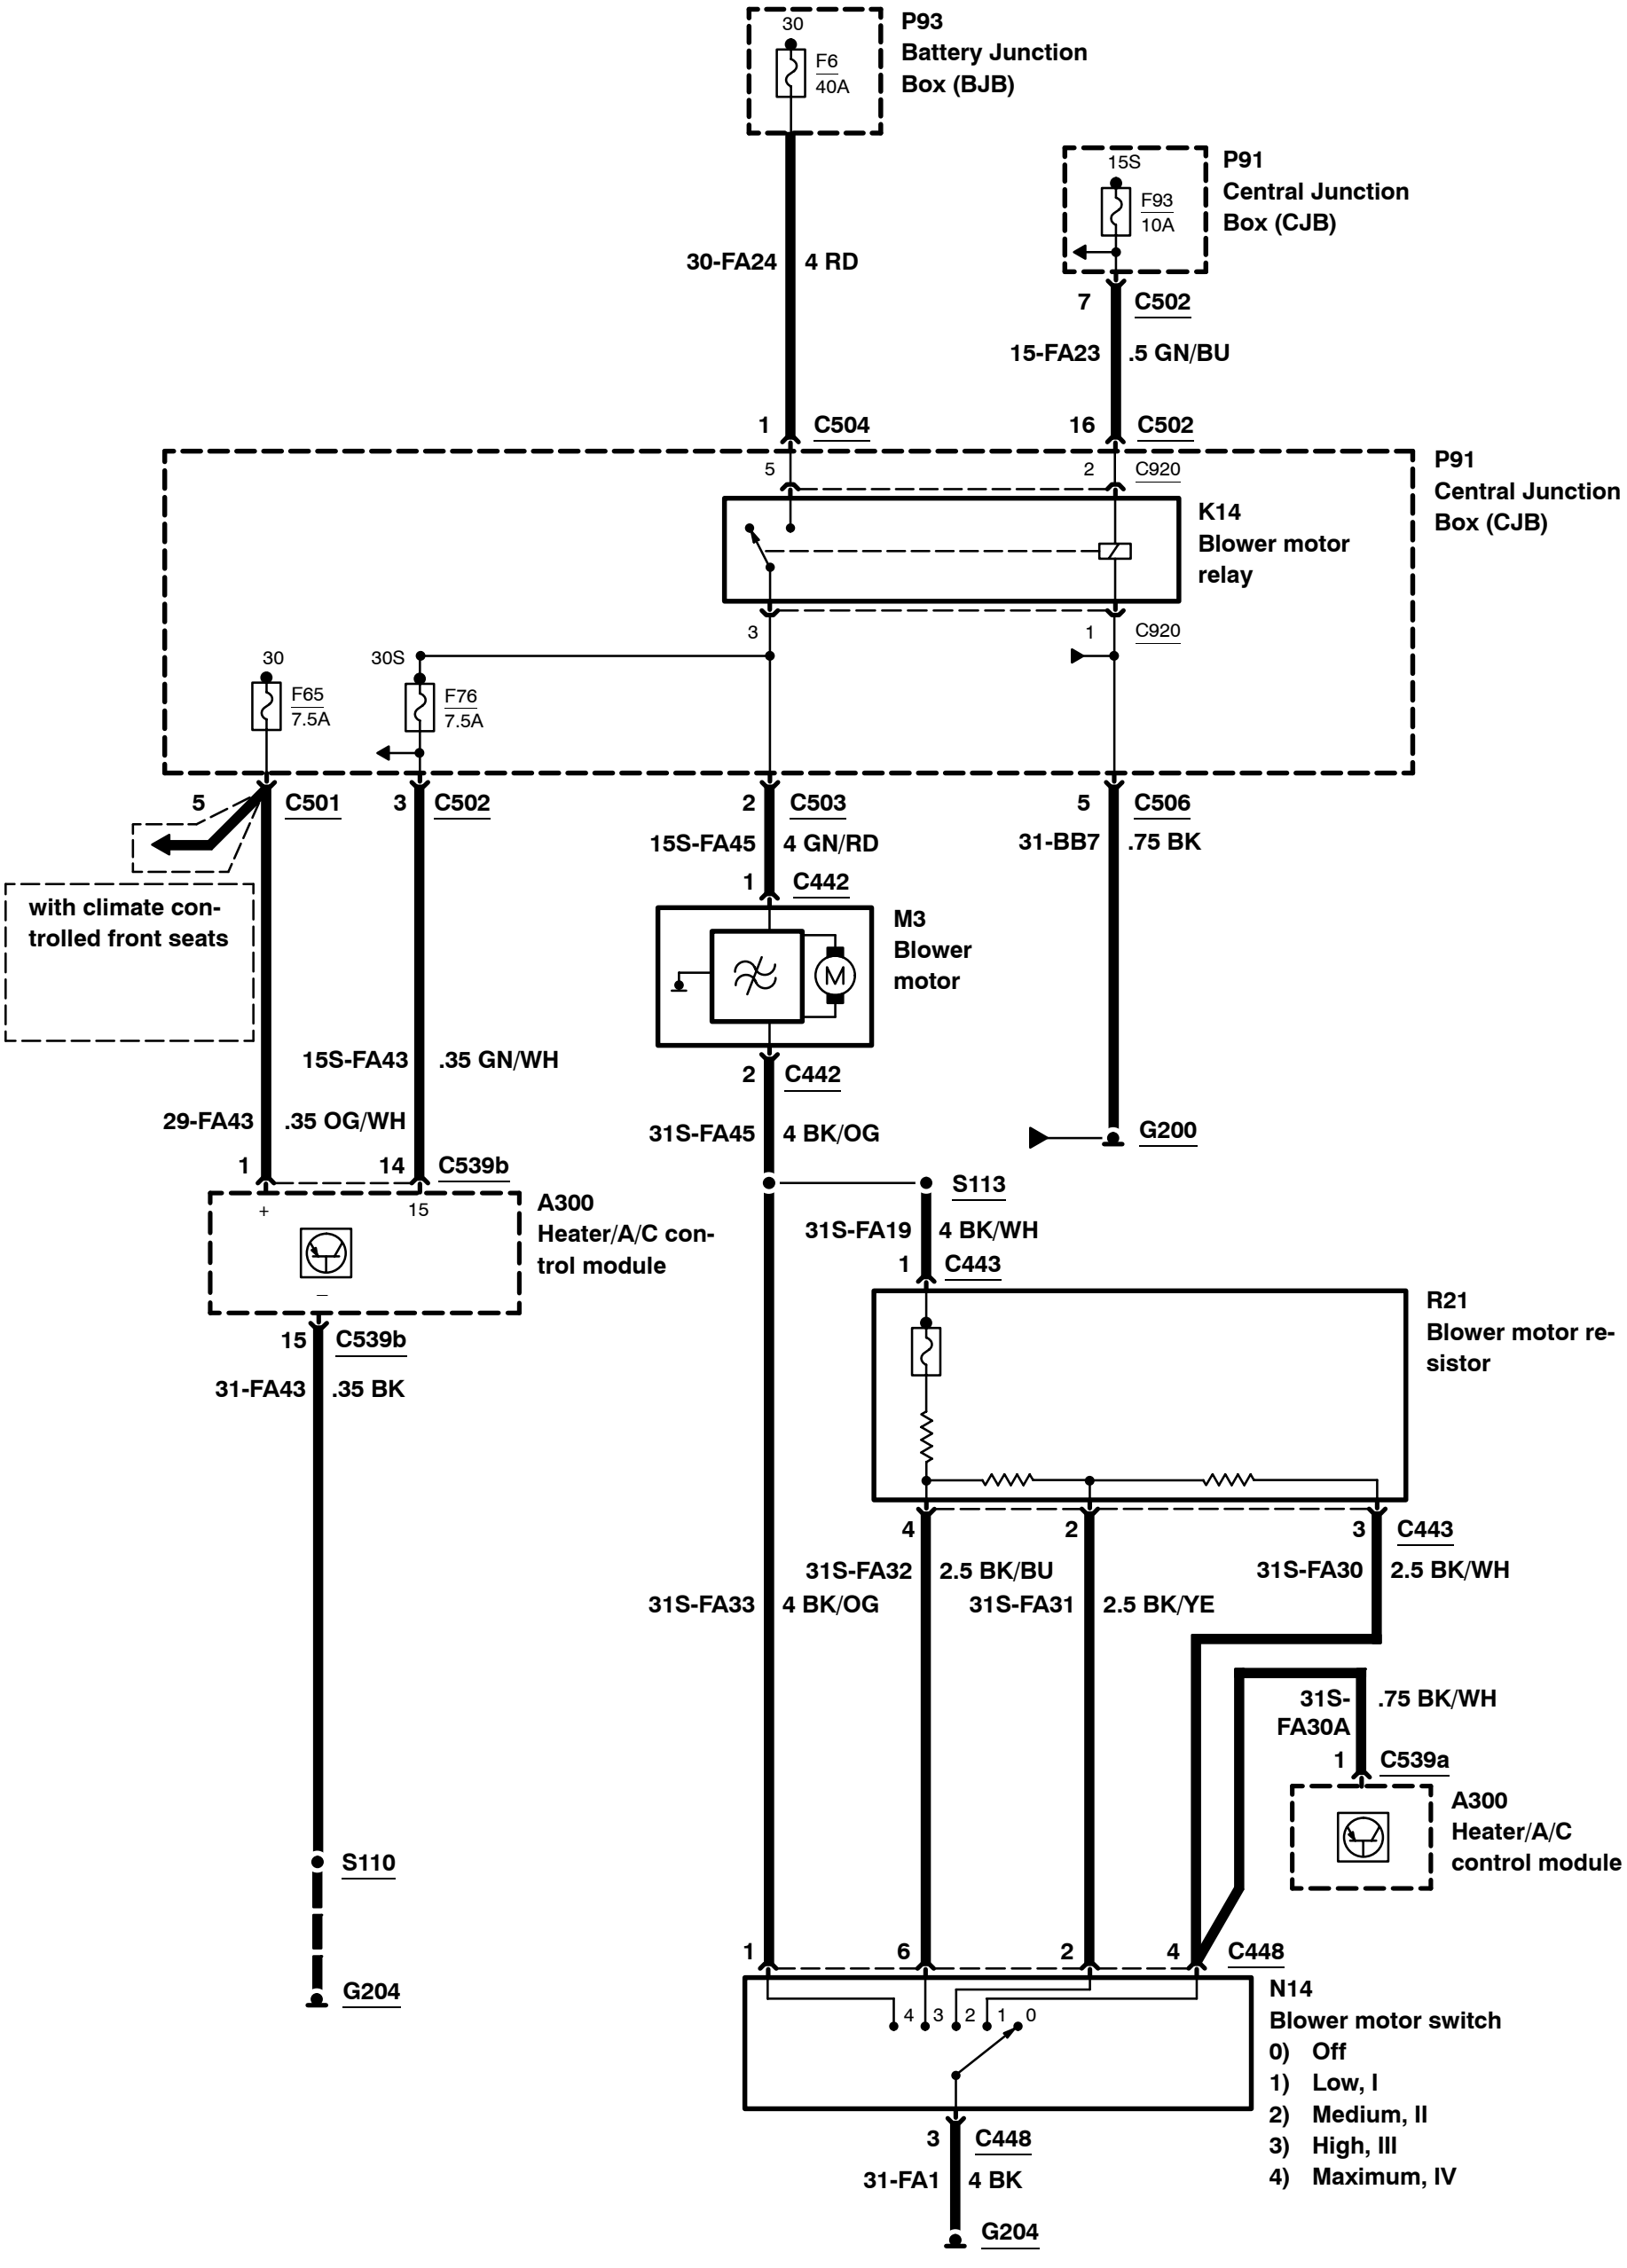


Air Conditioning – Manual A/C, before 04/2004

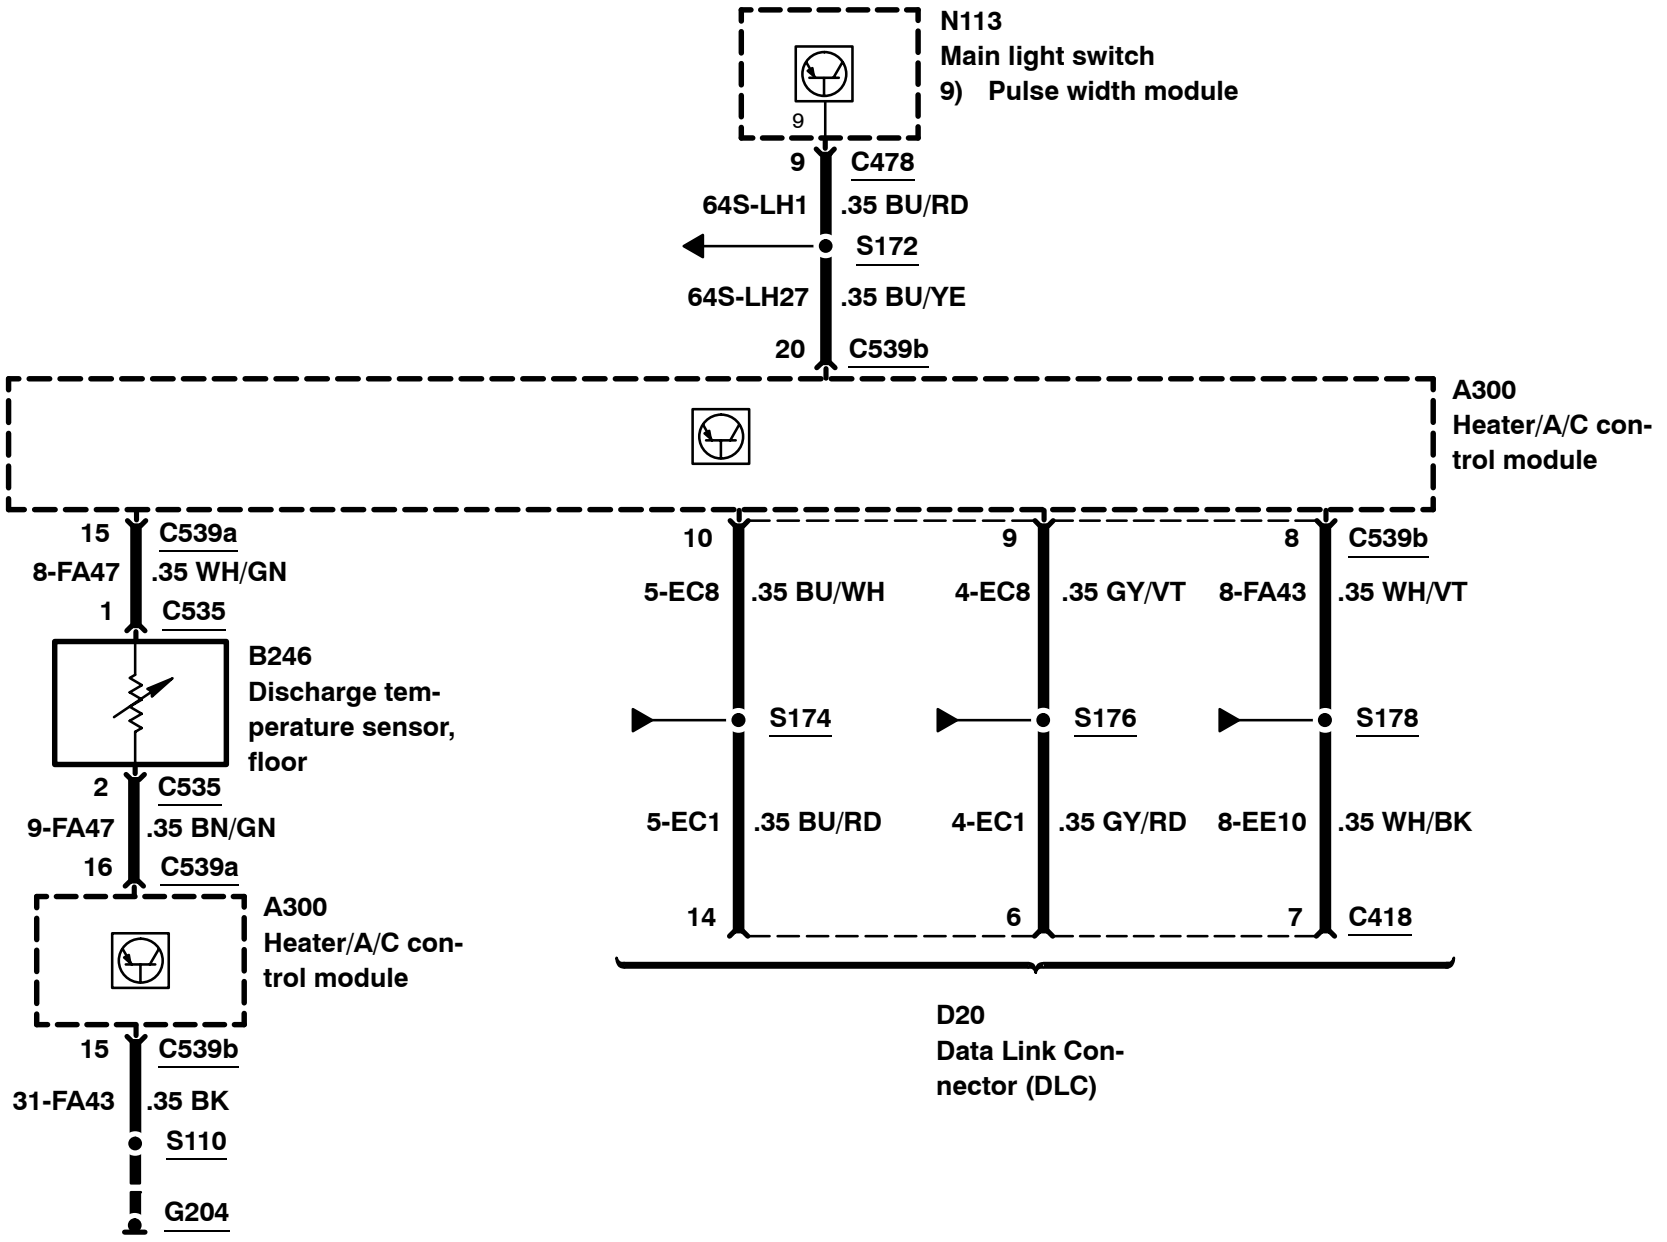


Air Conditioning – EATC, before 04/2004

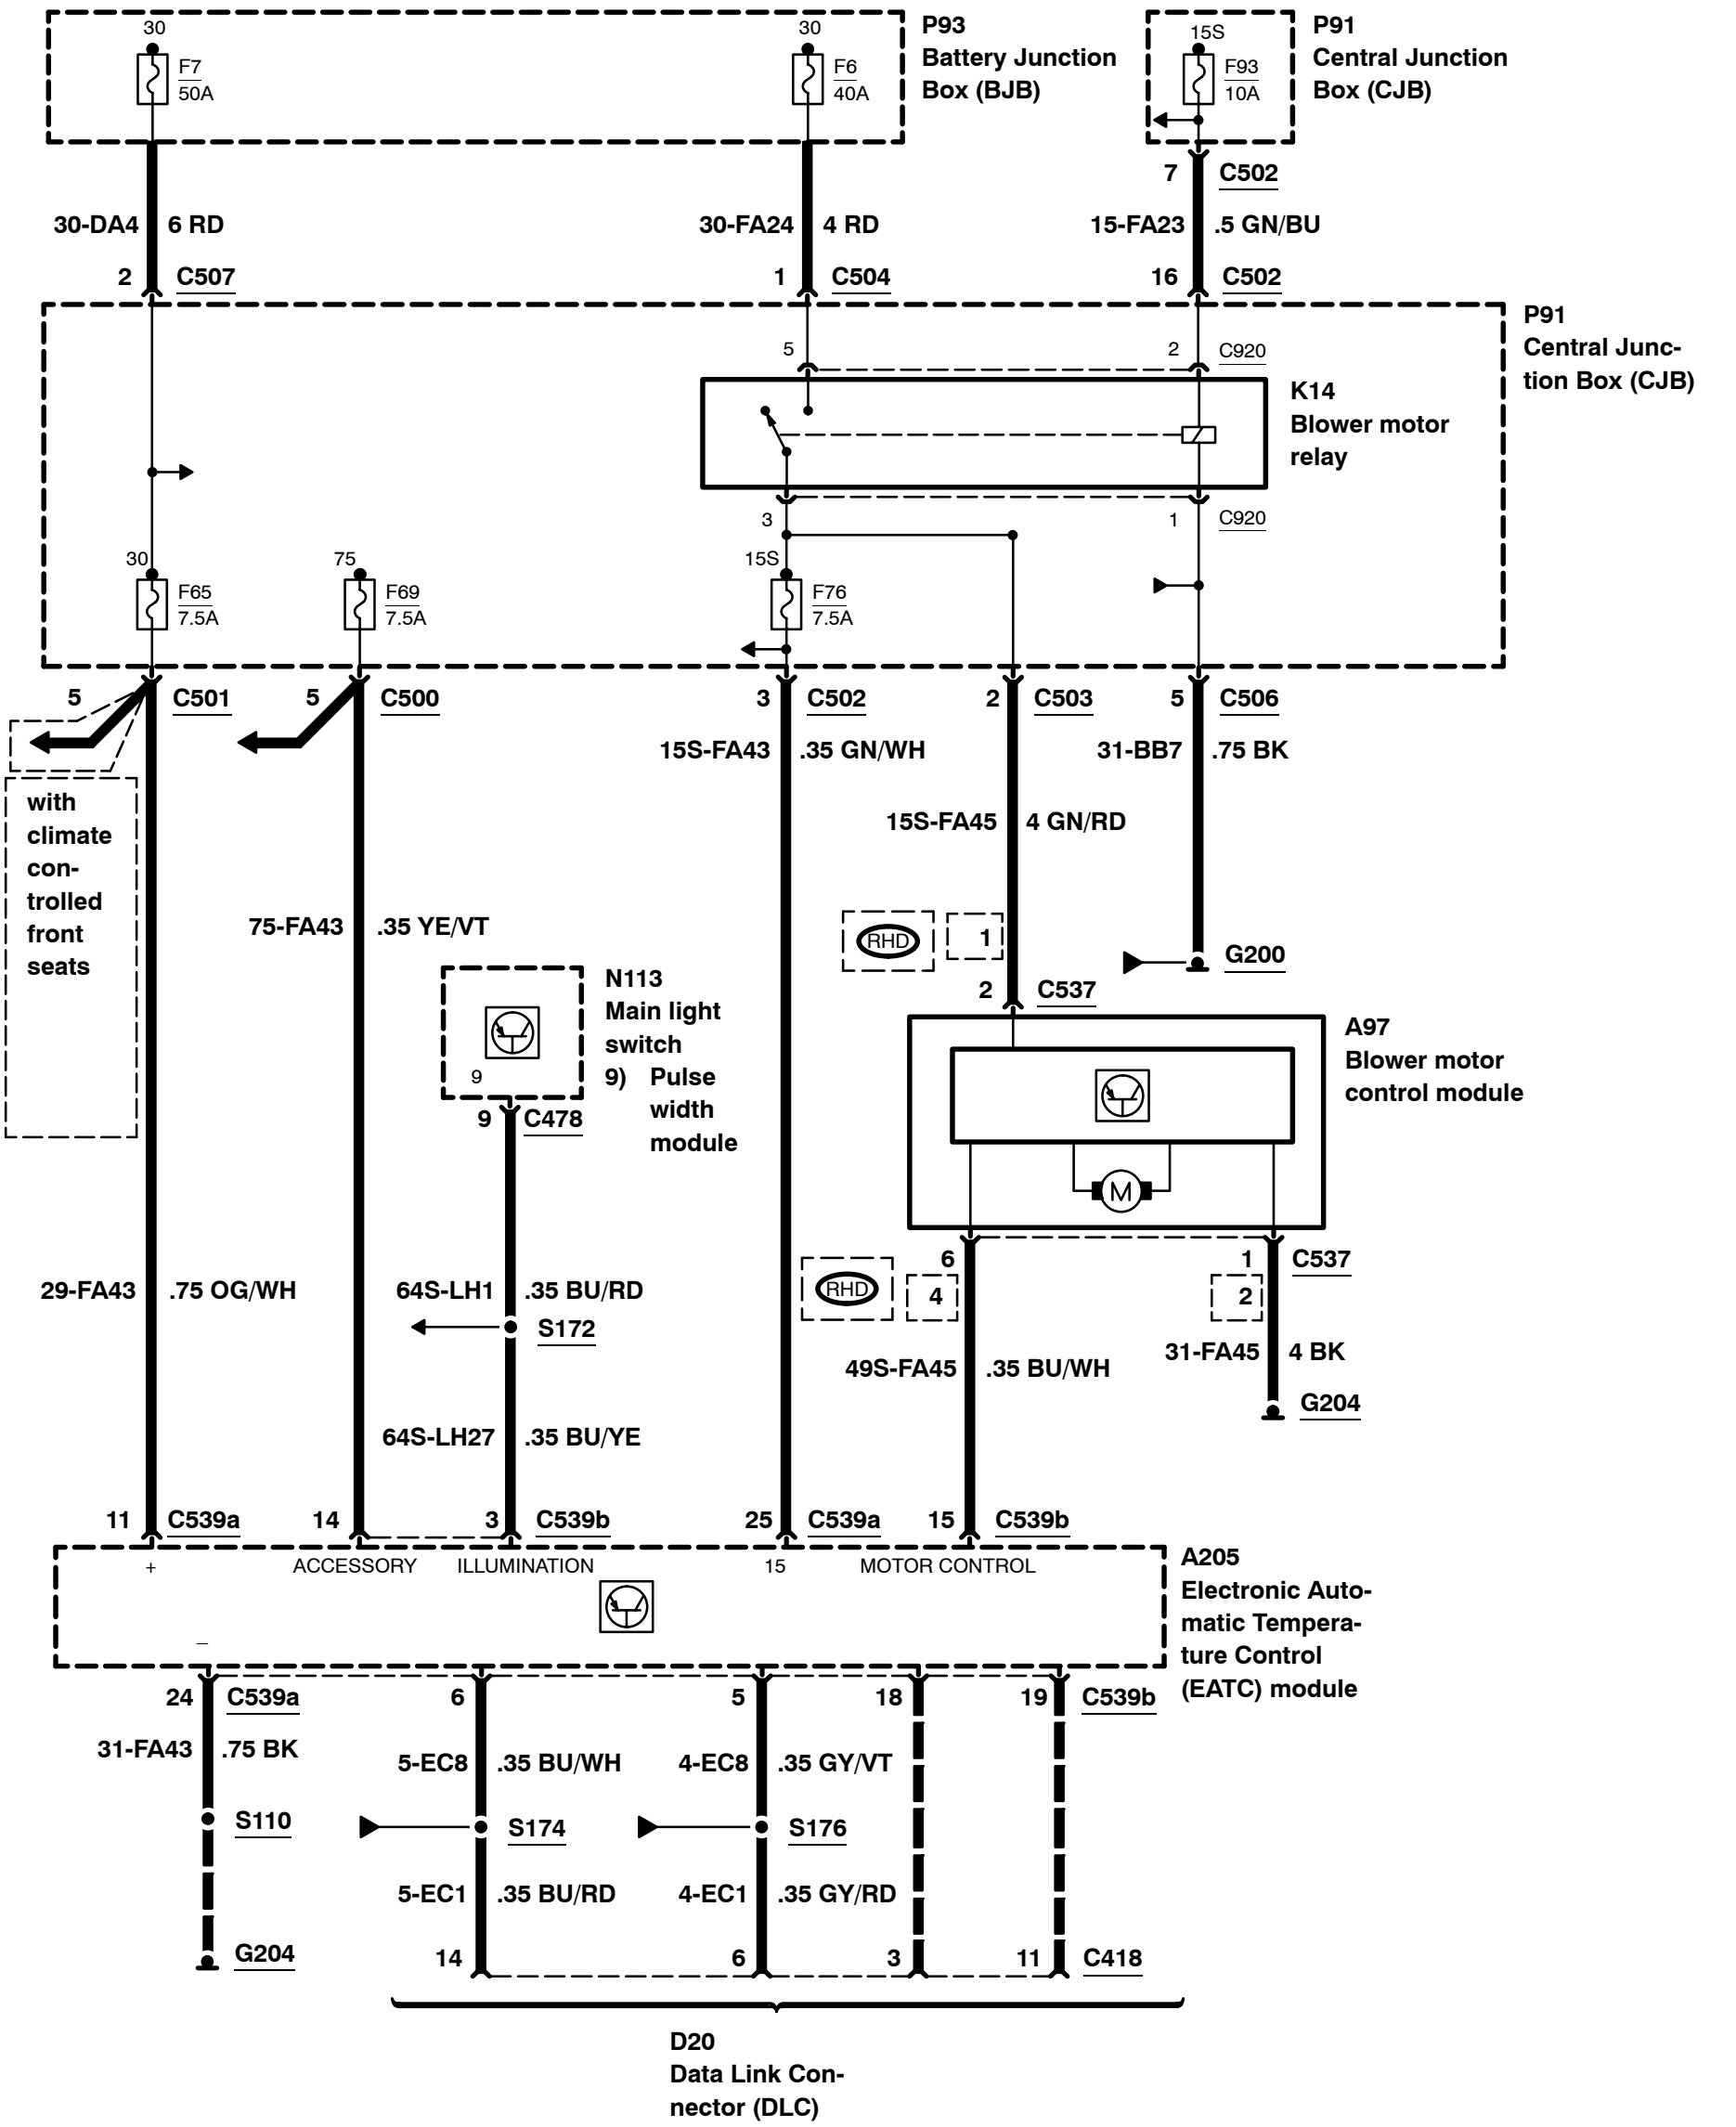


Air Conditioning – EATC, as of 04/2004

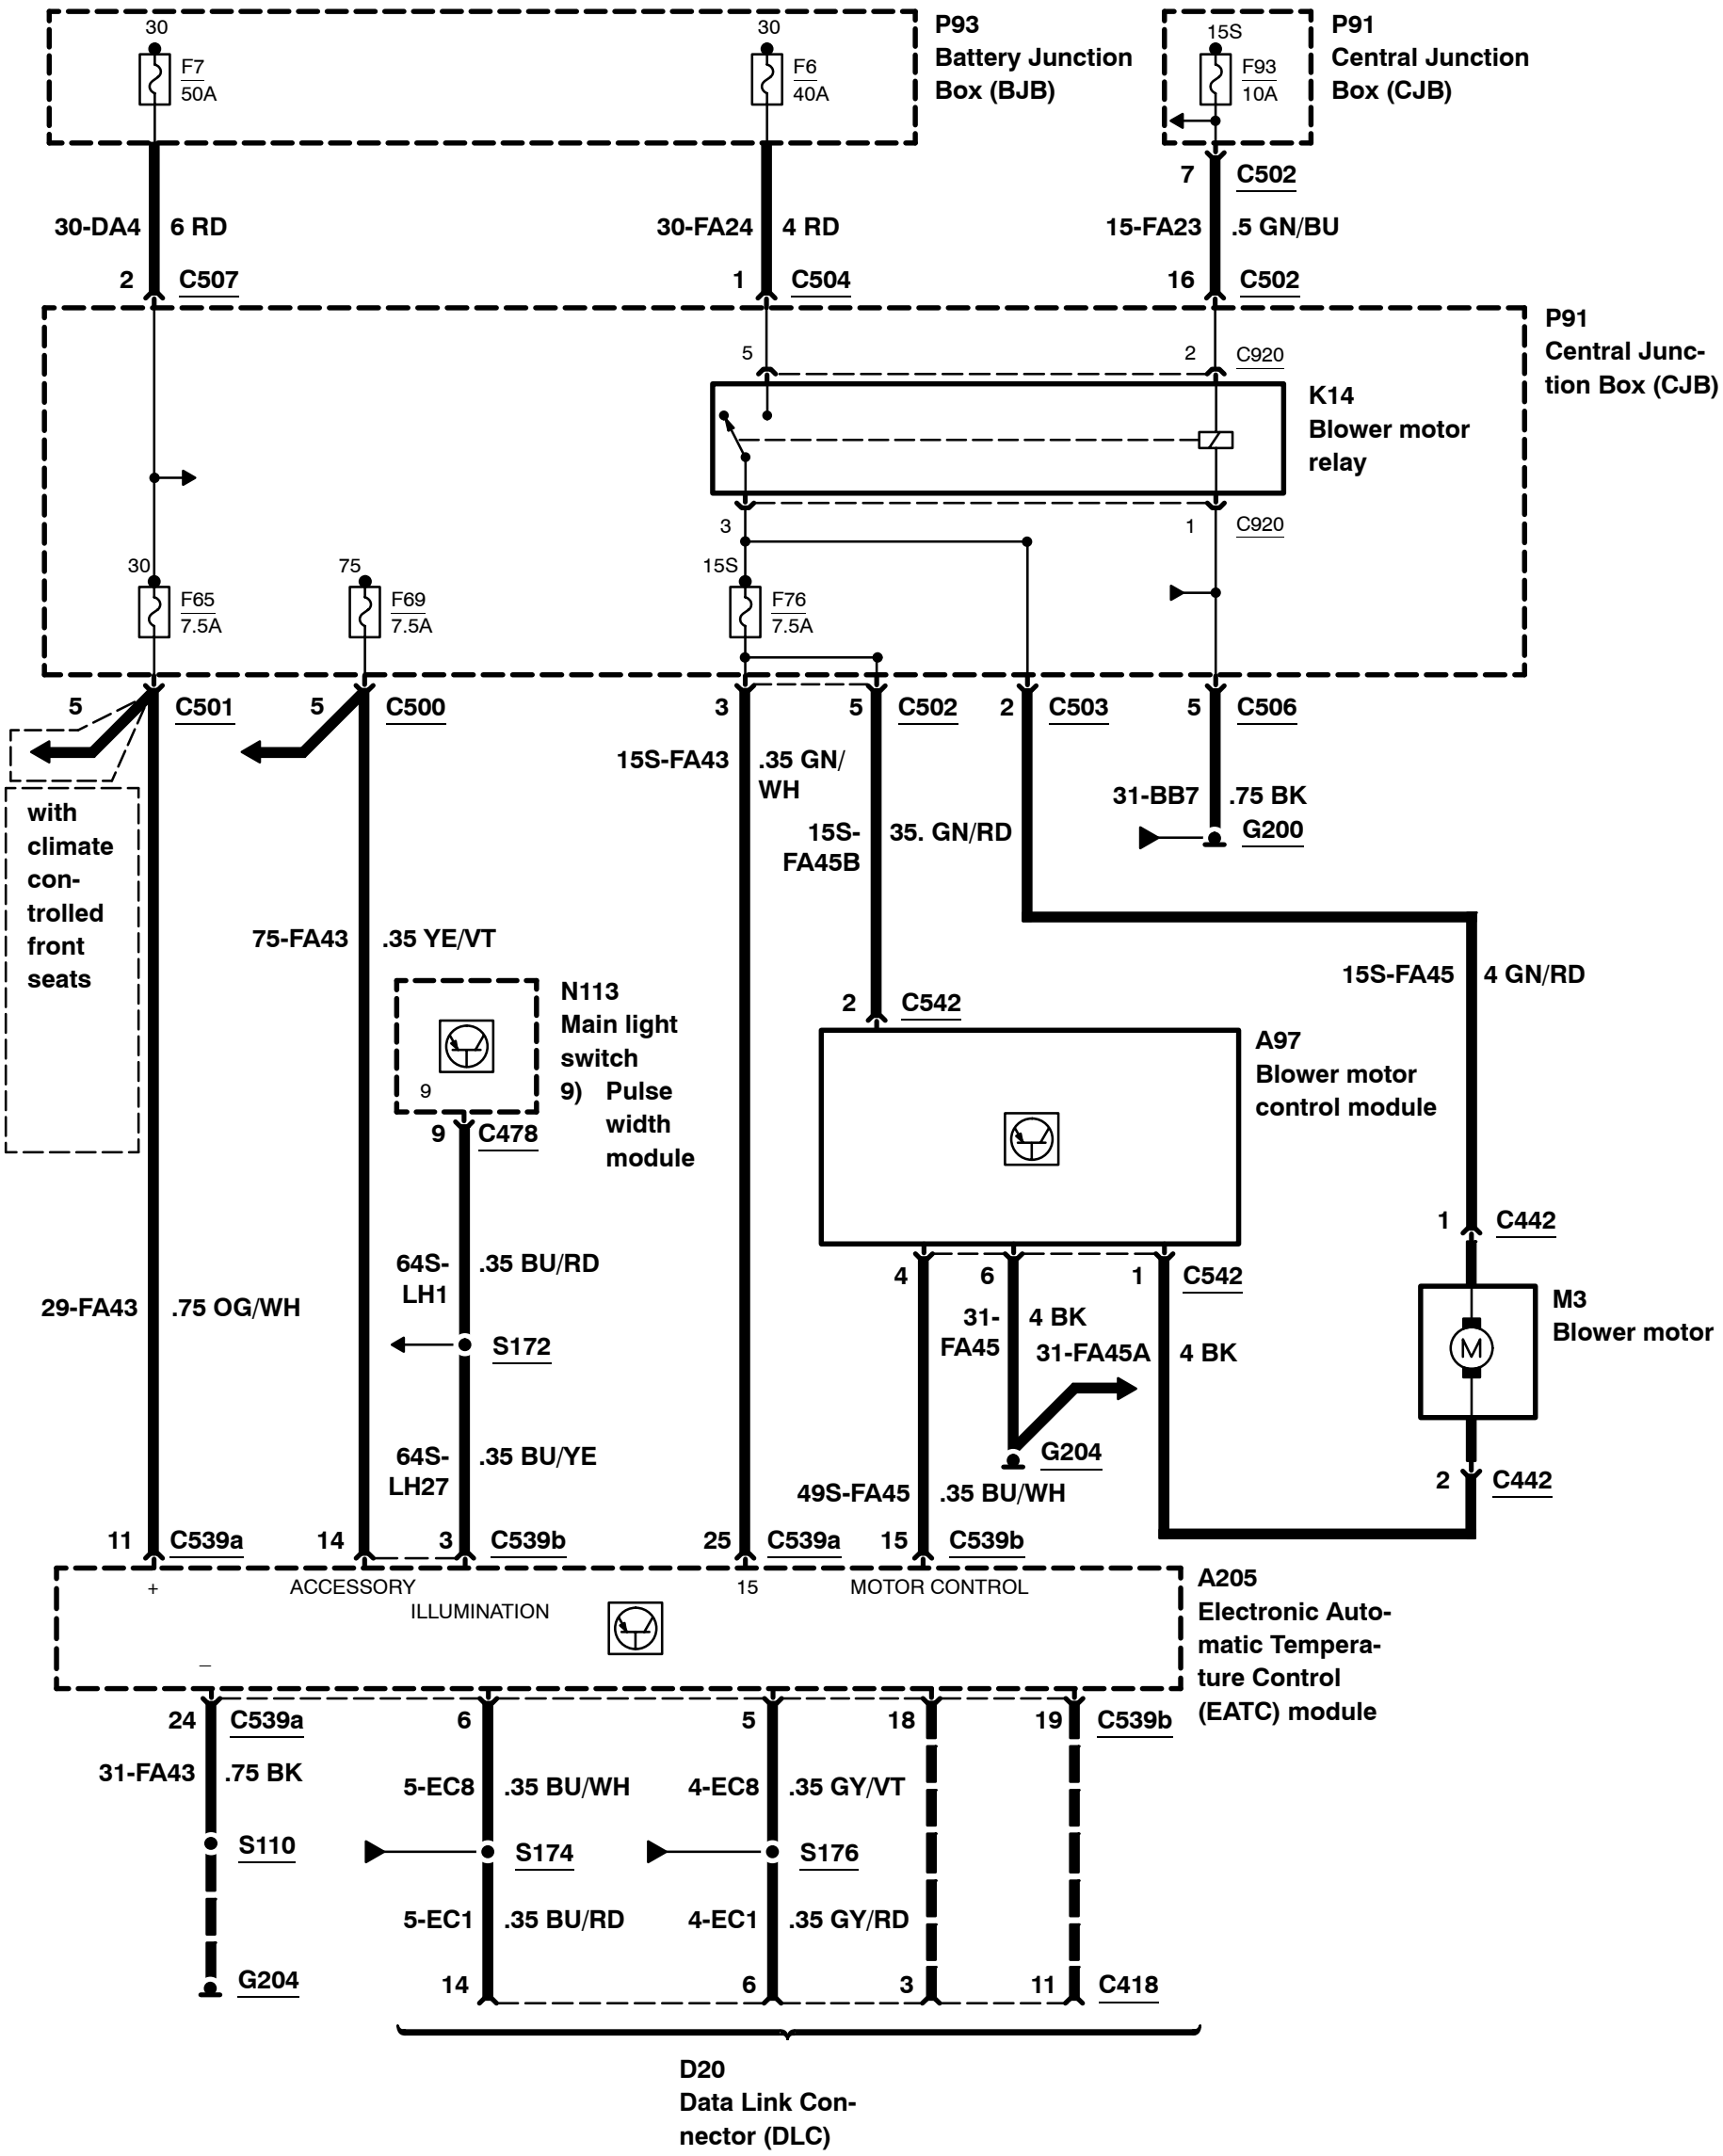


Air Conditioning – EATC

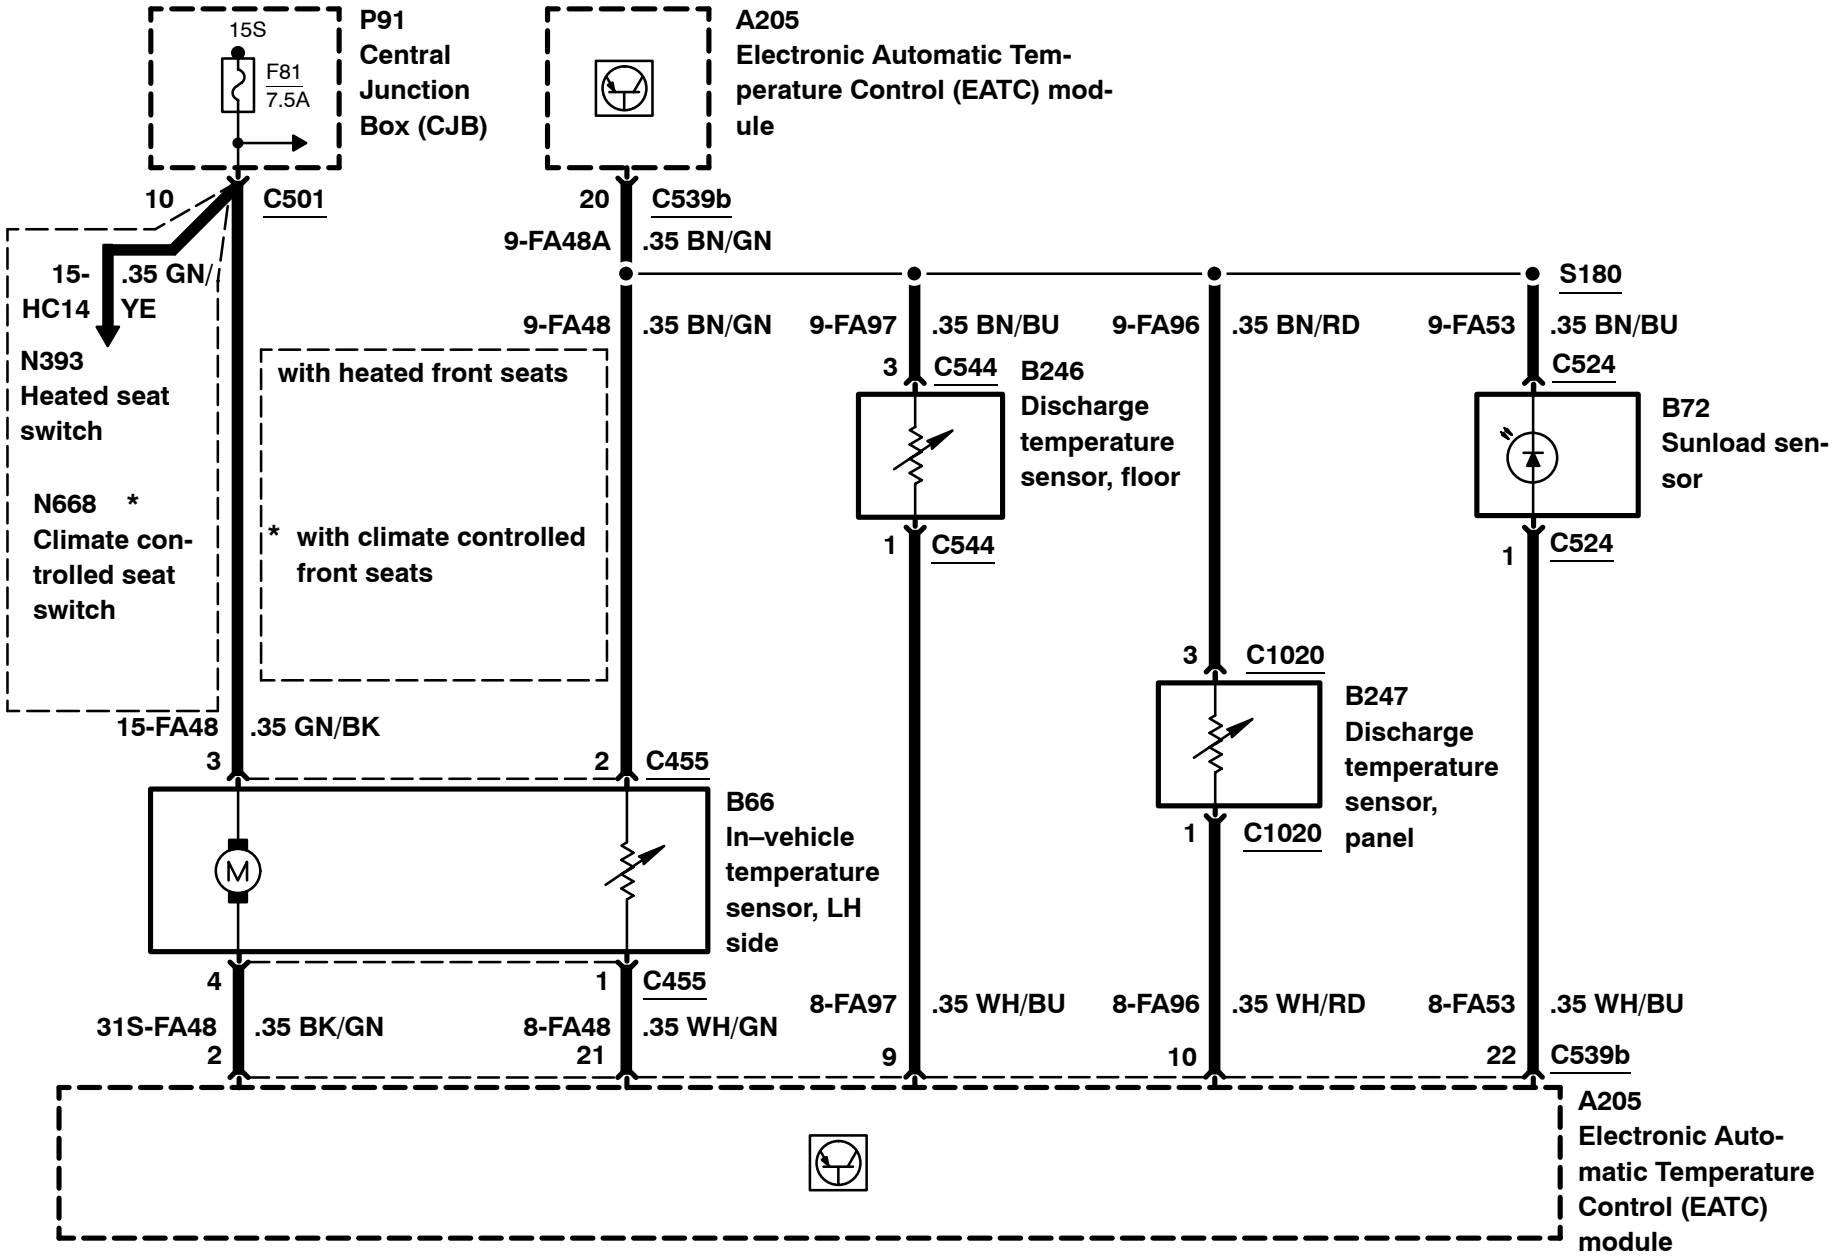


Instrument Cluster and Panel Illumination

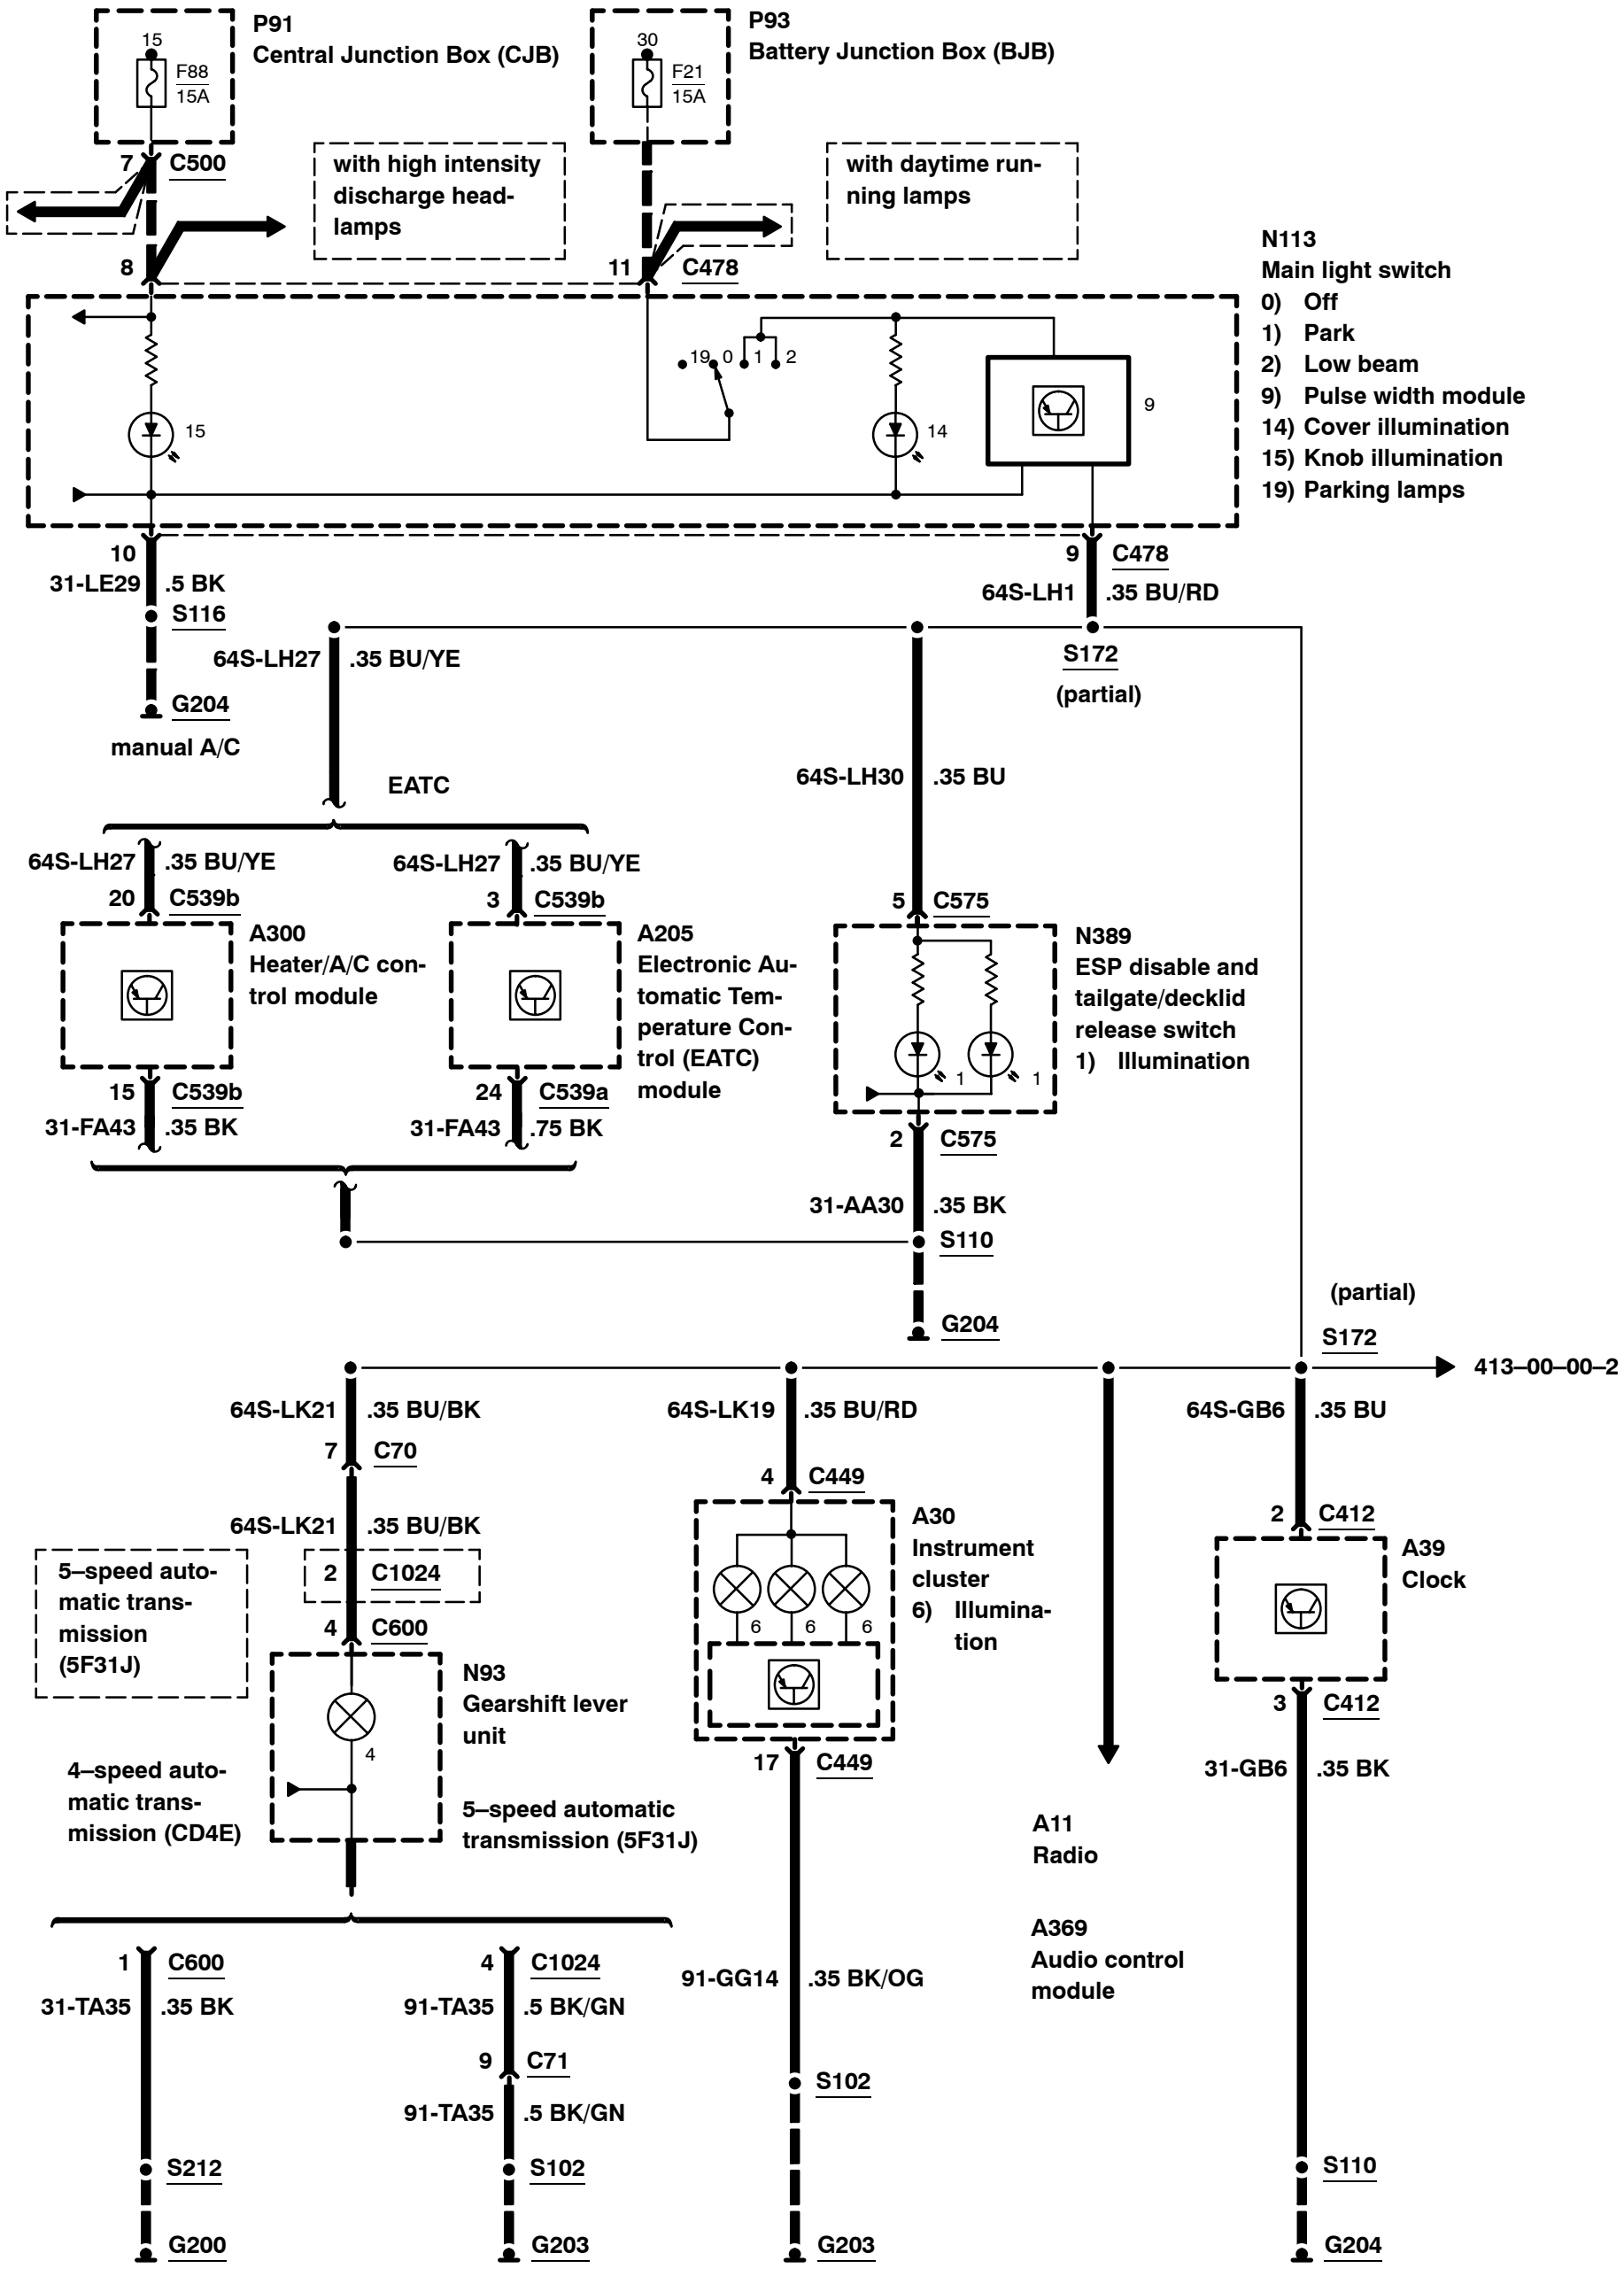


Instrument Cluster and Panel Illumination

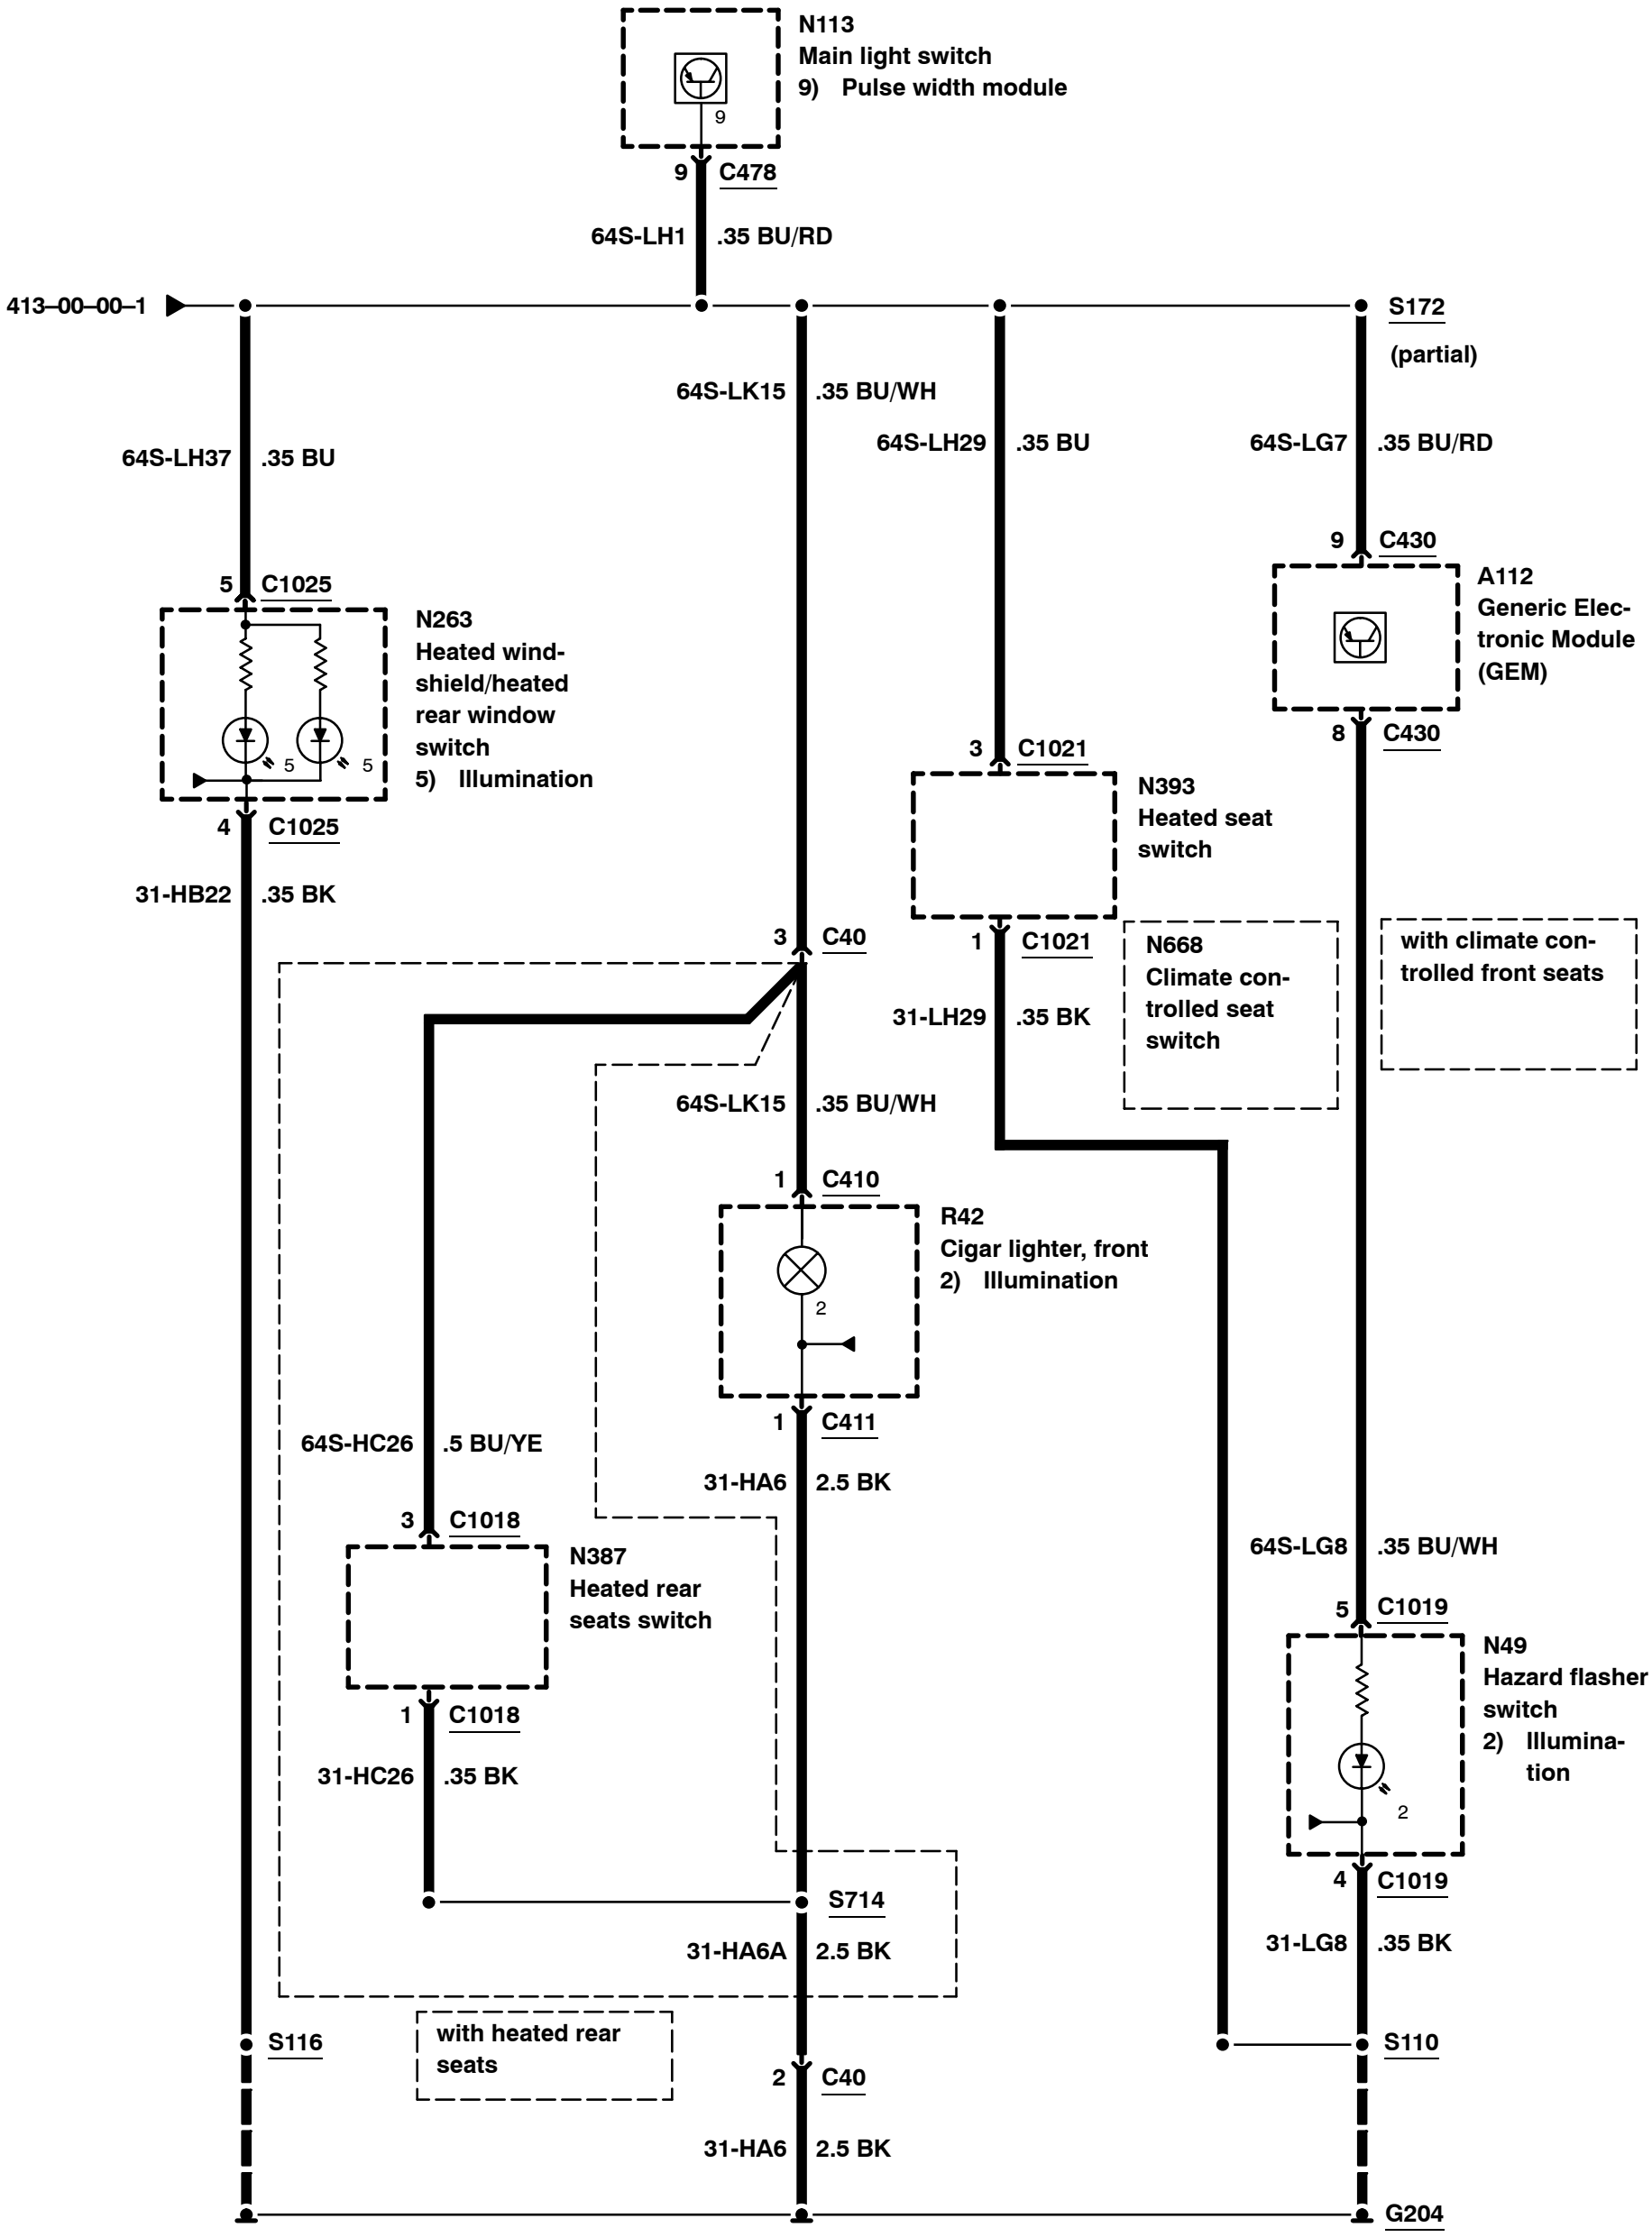

Instrument Cluster and Panel Illumination – LHD

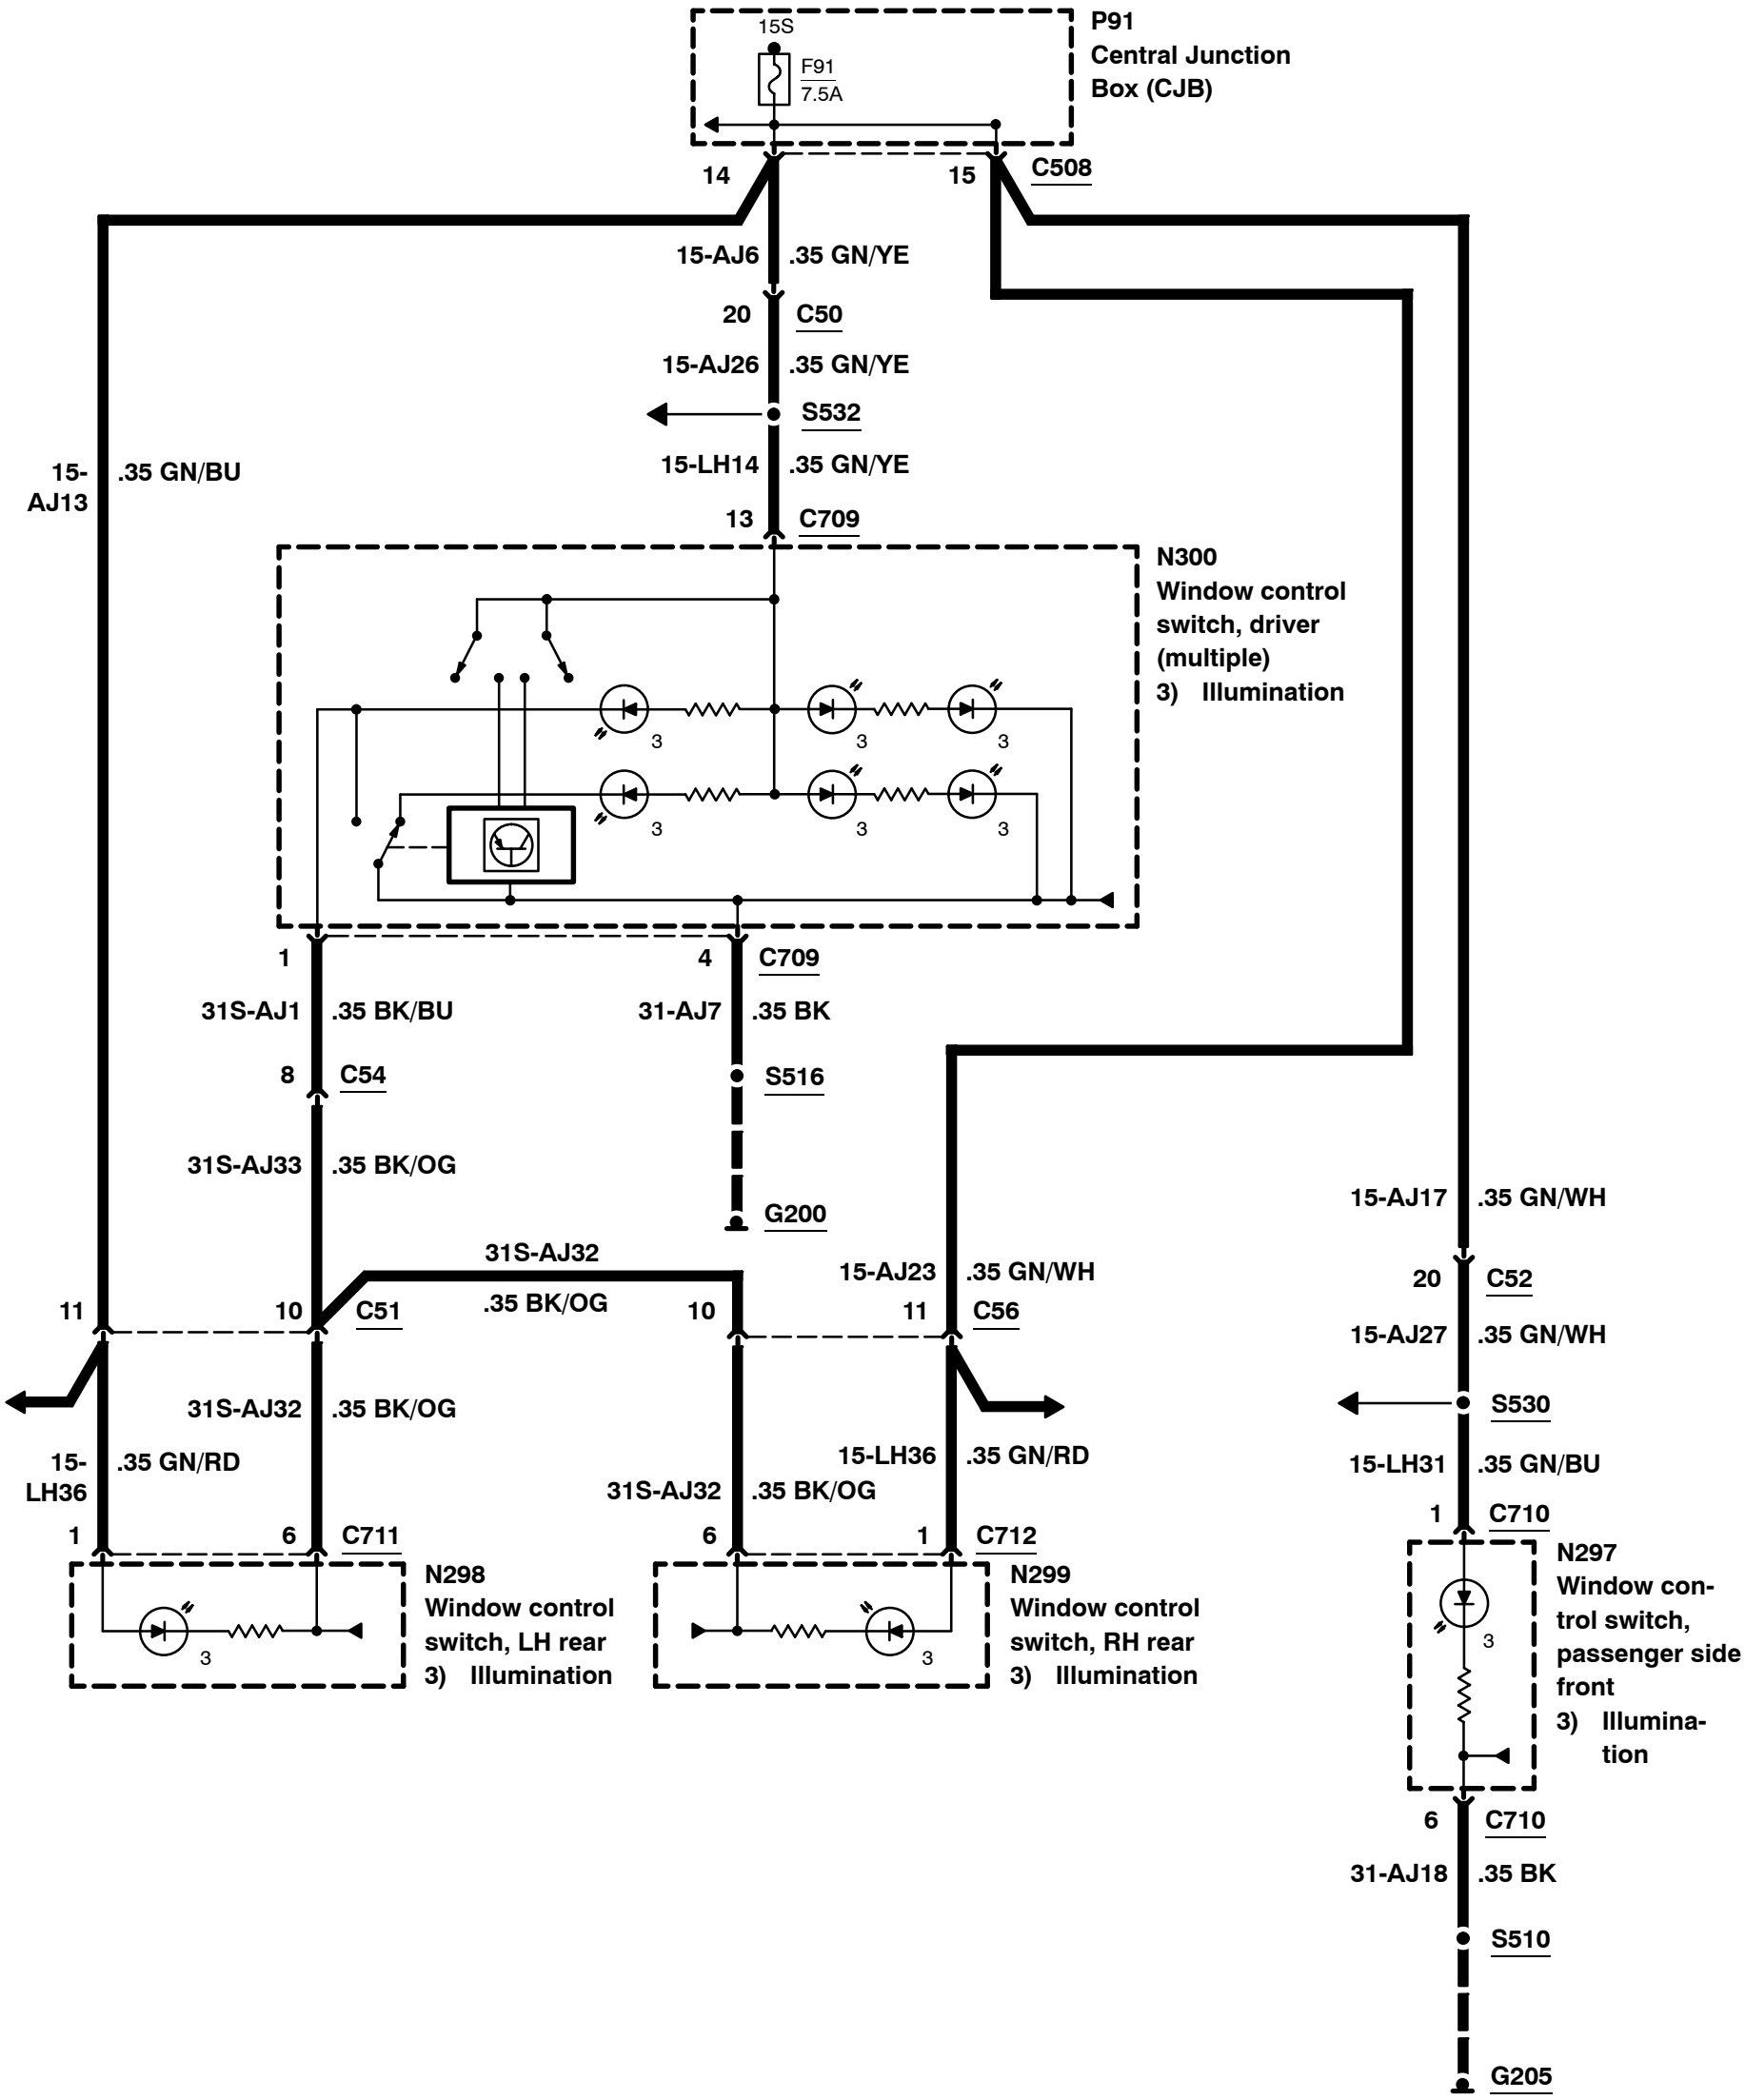


Instrument Cluster and Panel Illumination – RHD

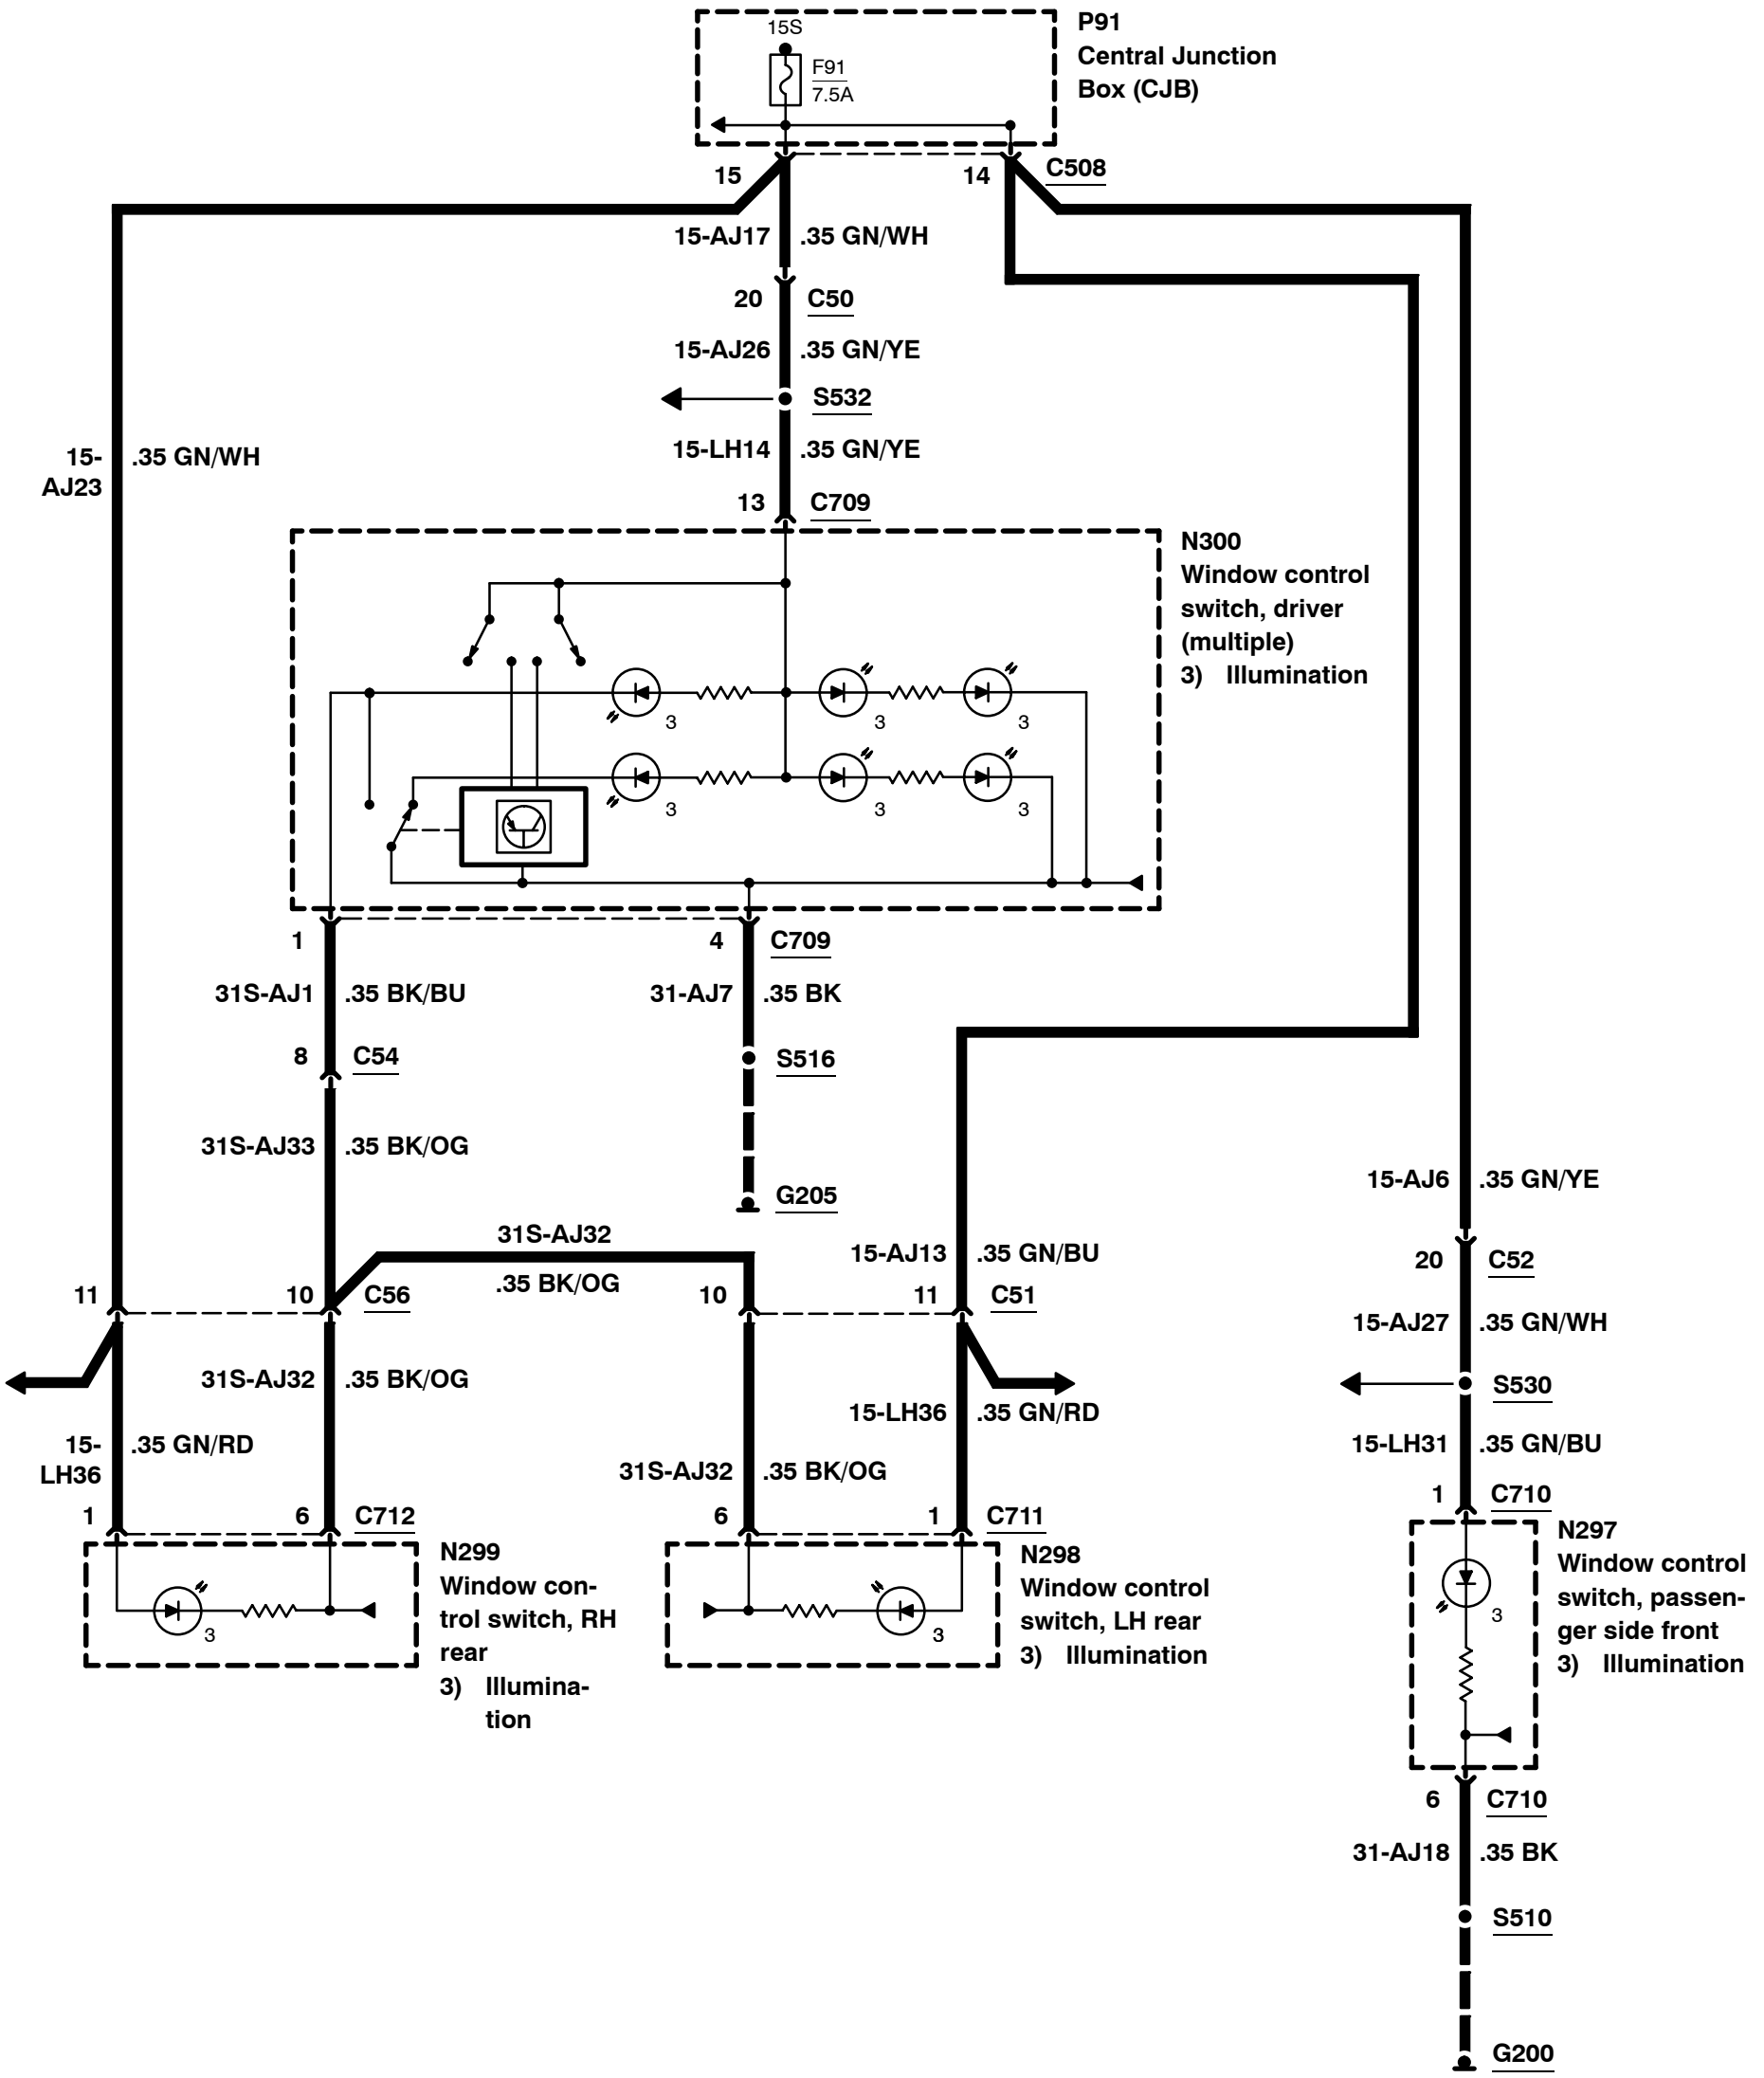


Instrument Cluster

Block diagram

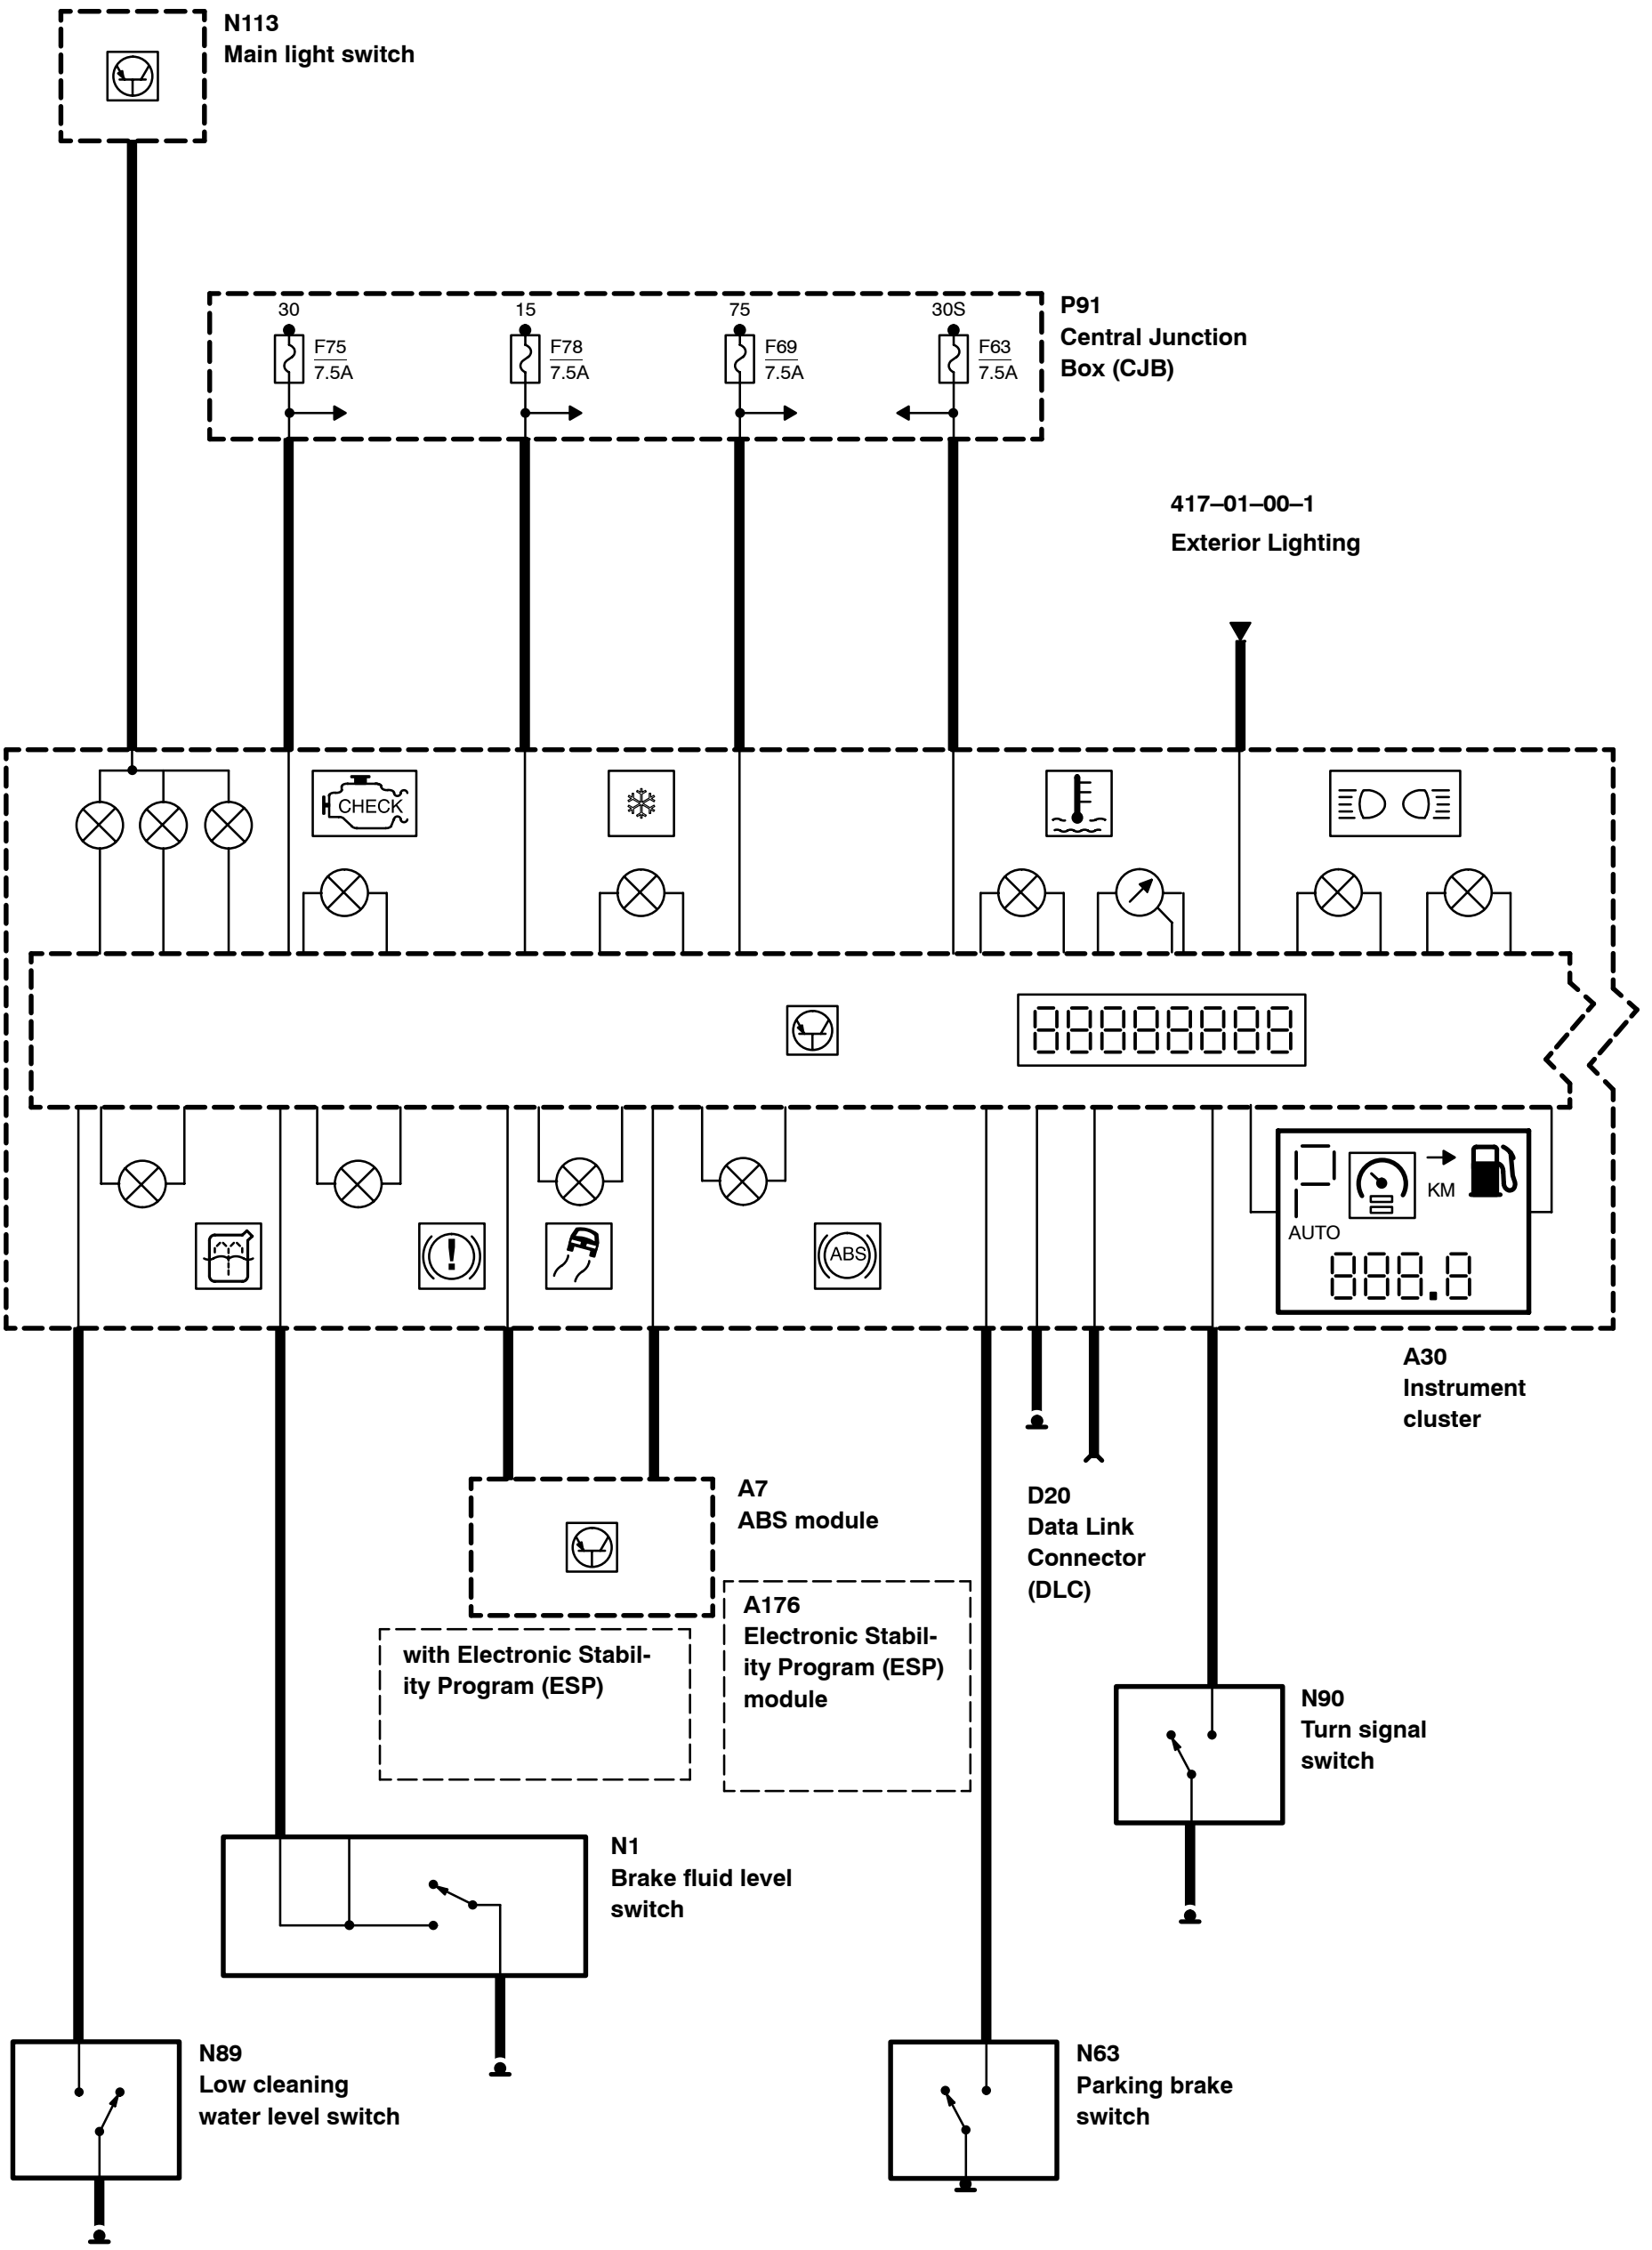


Instrument Cluster


Block diagram

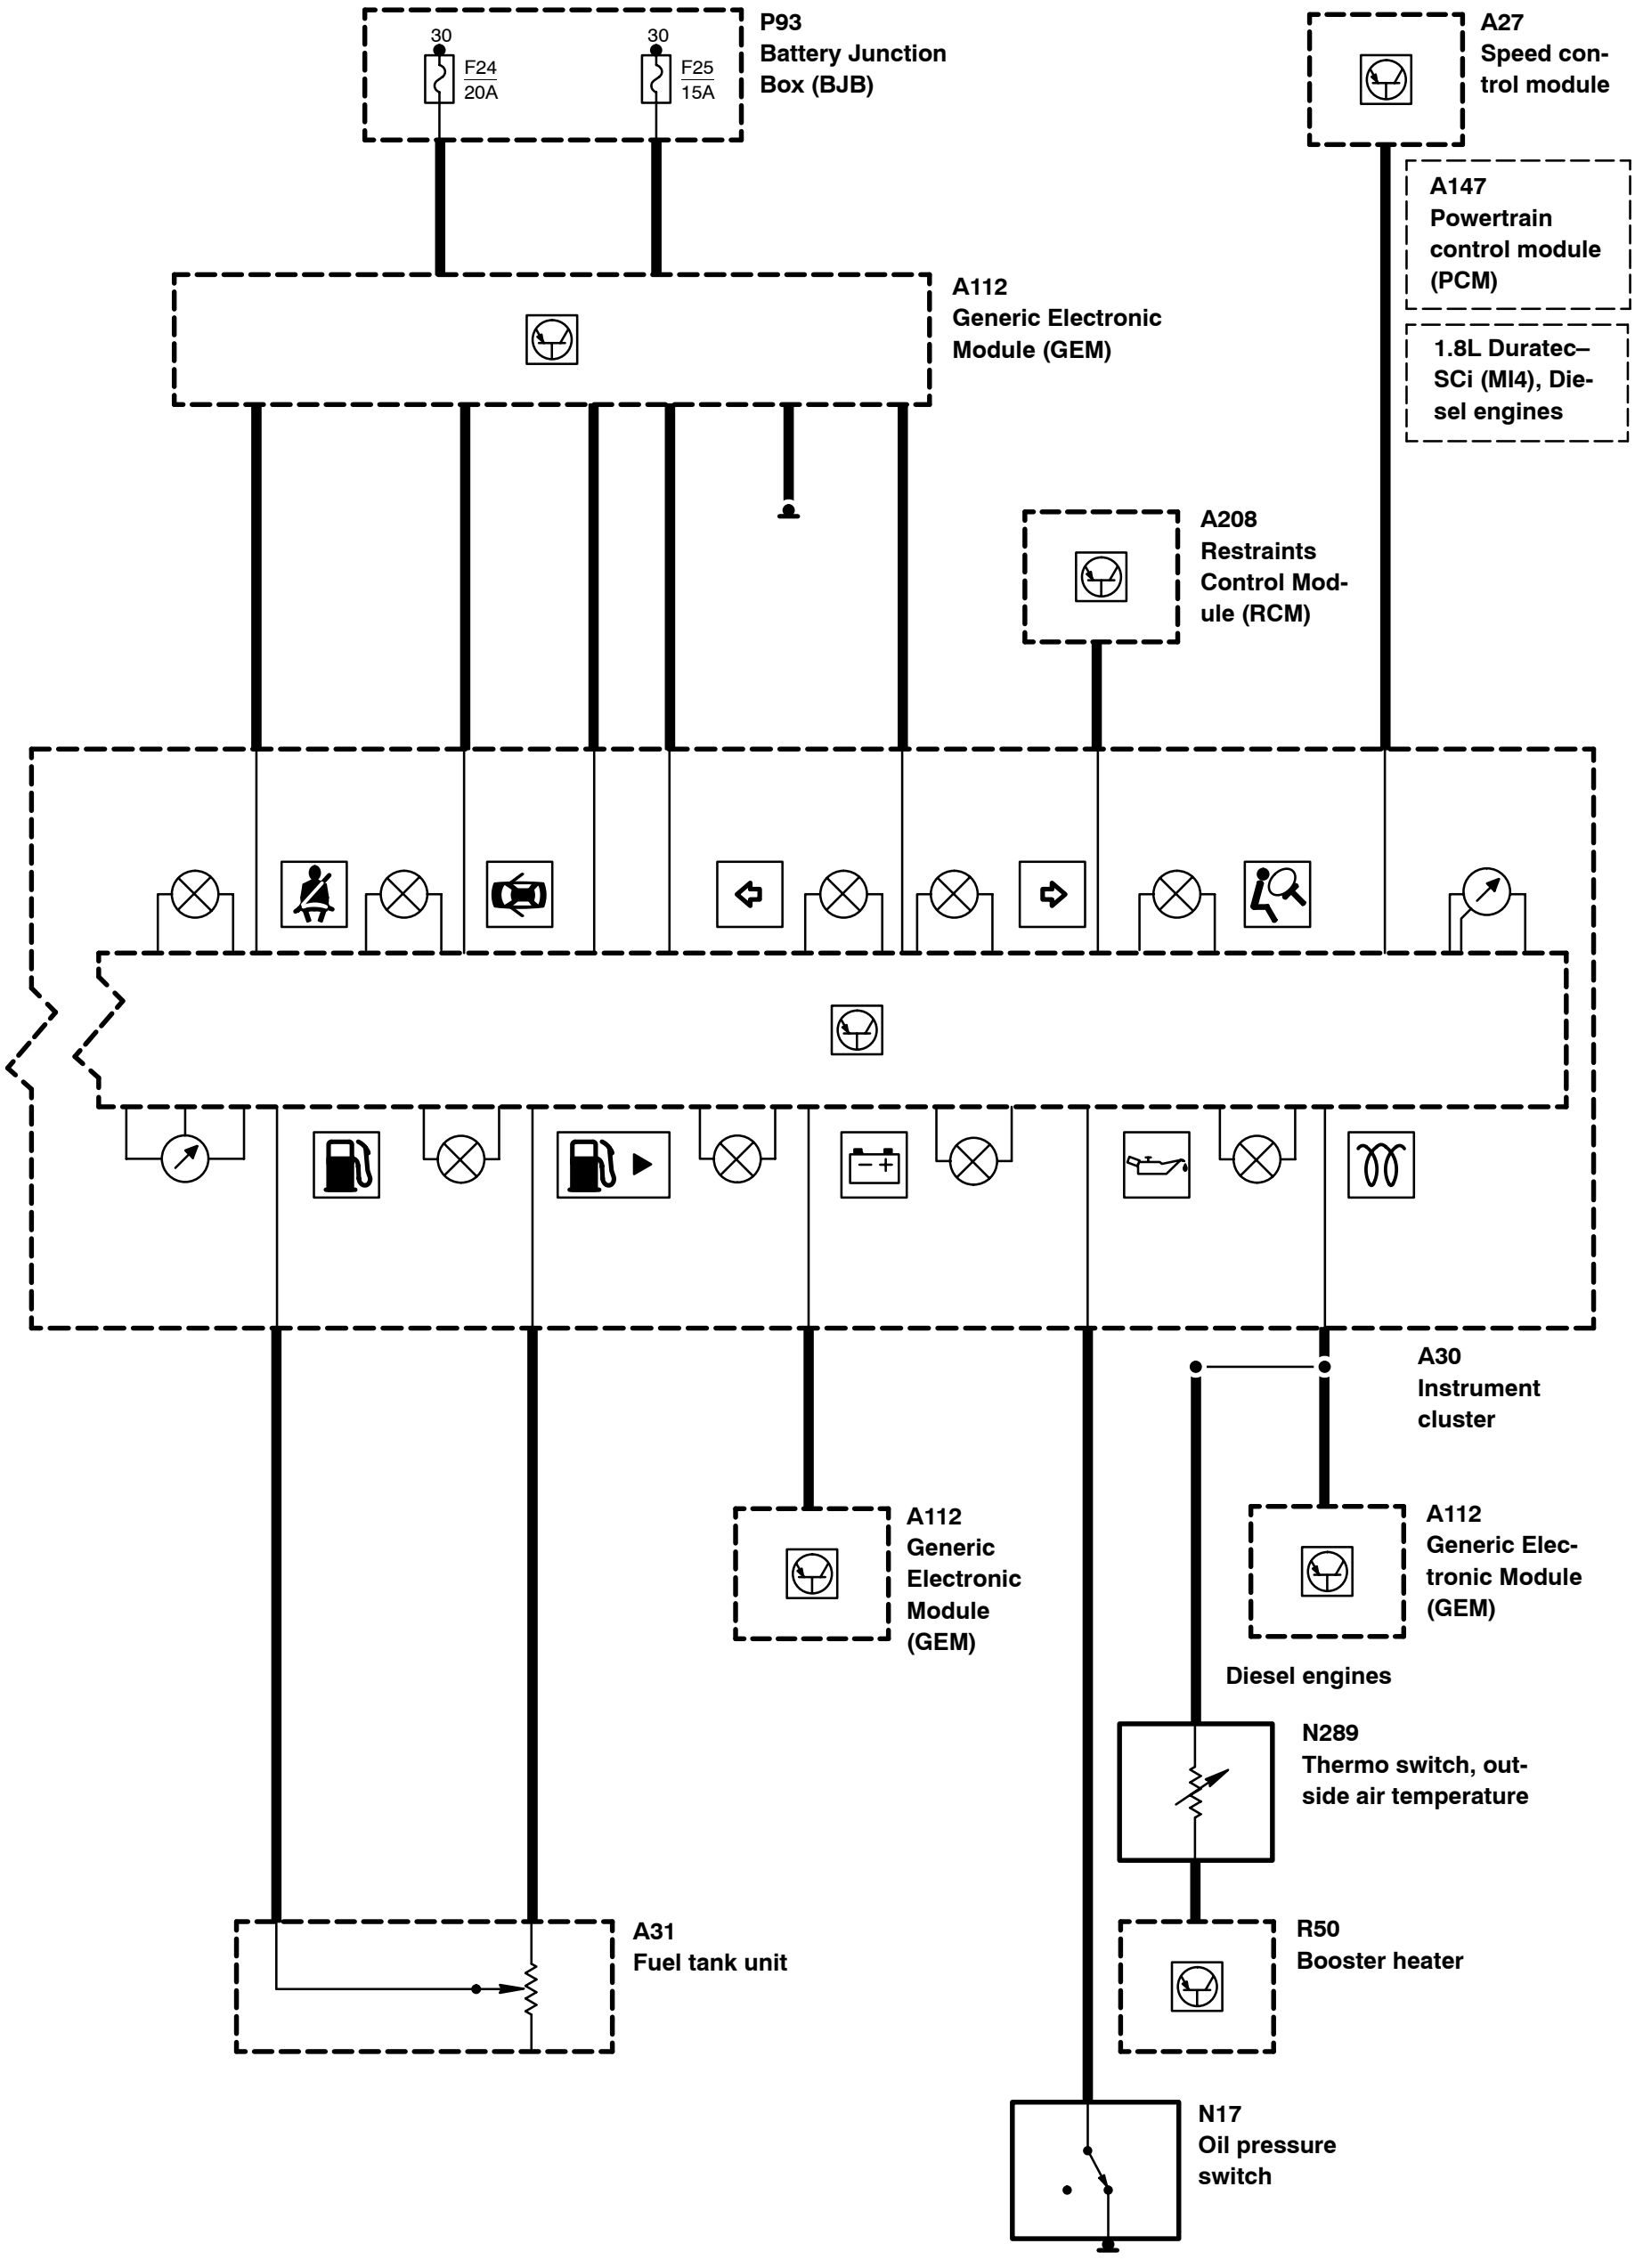


Instrument Cluster

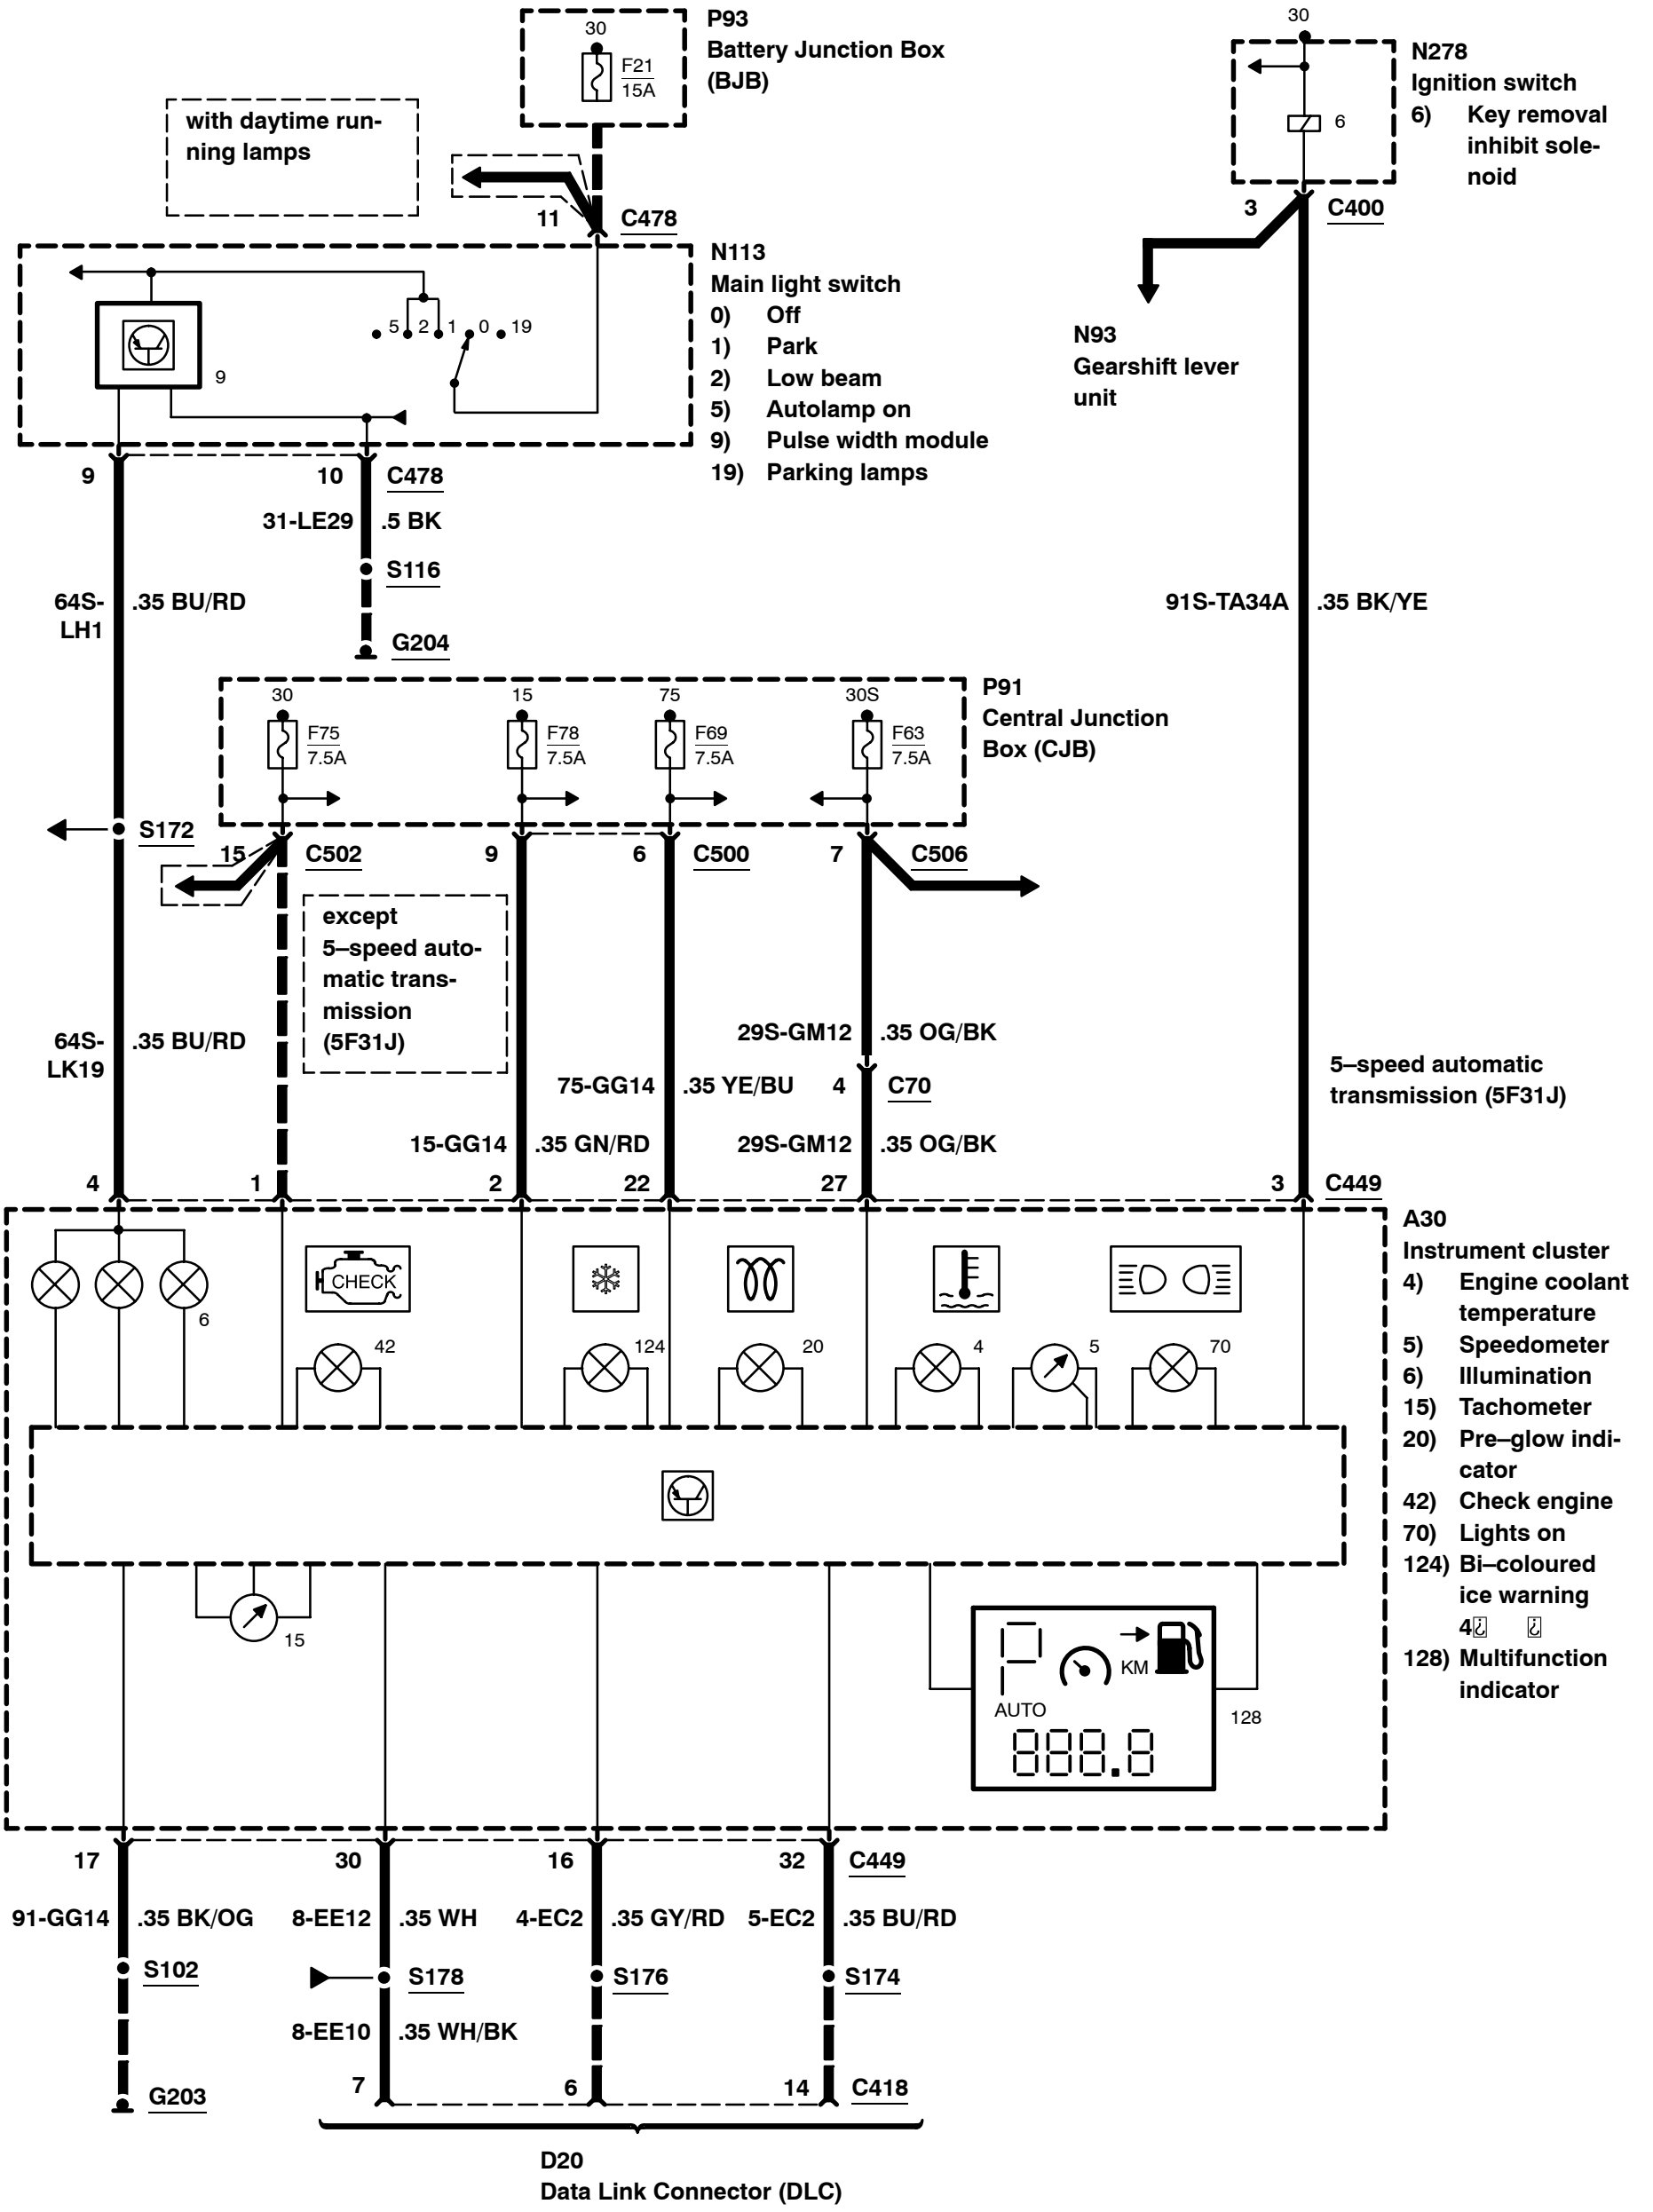


Instrument Cluster

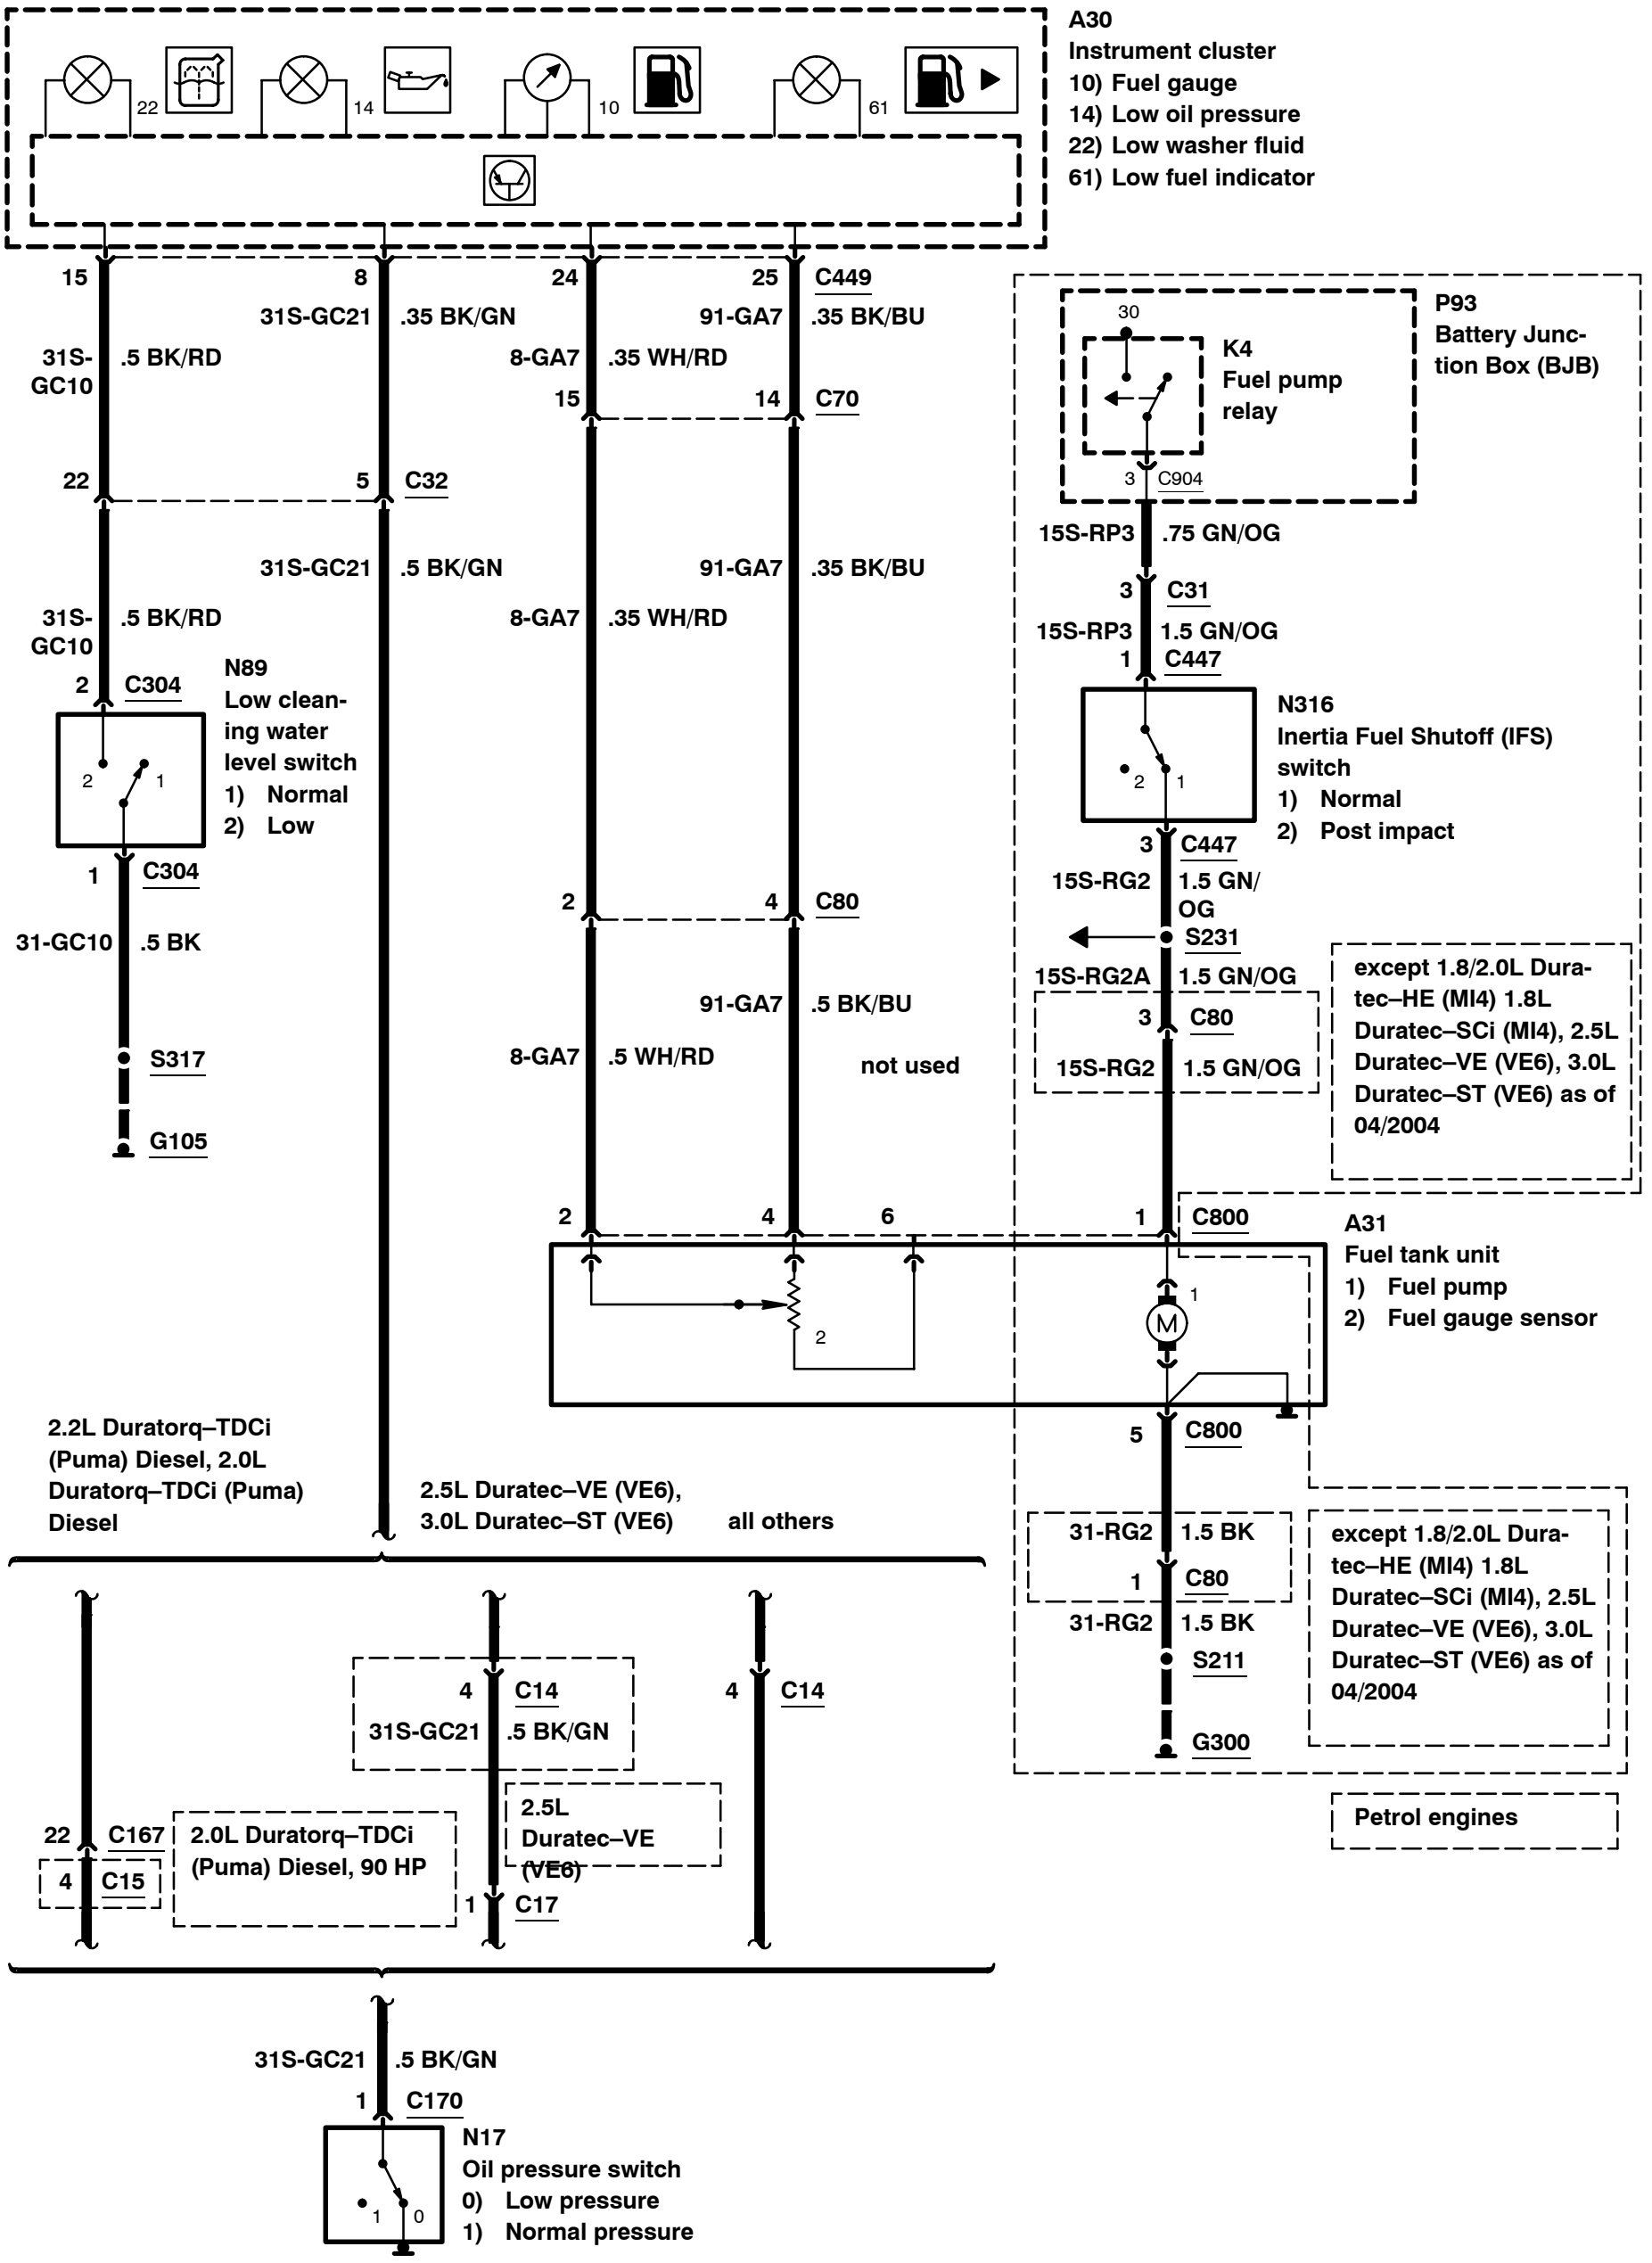


Instrument Cluster

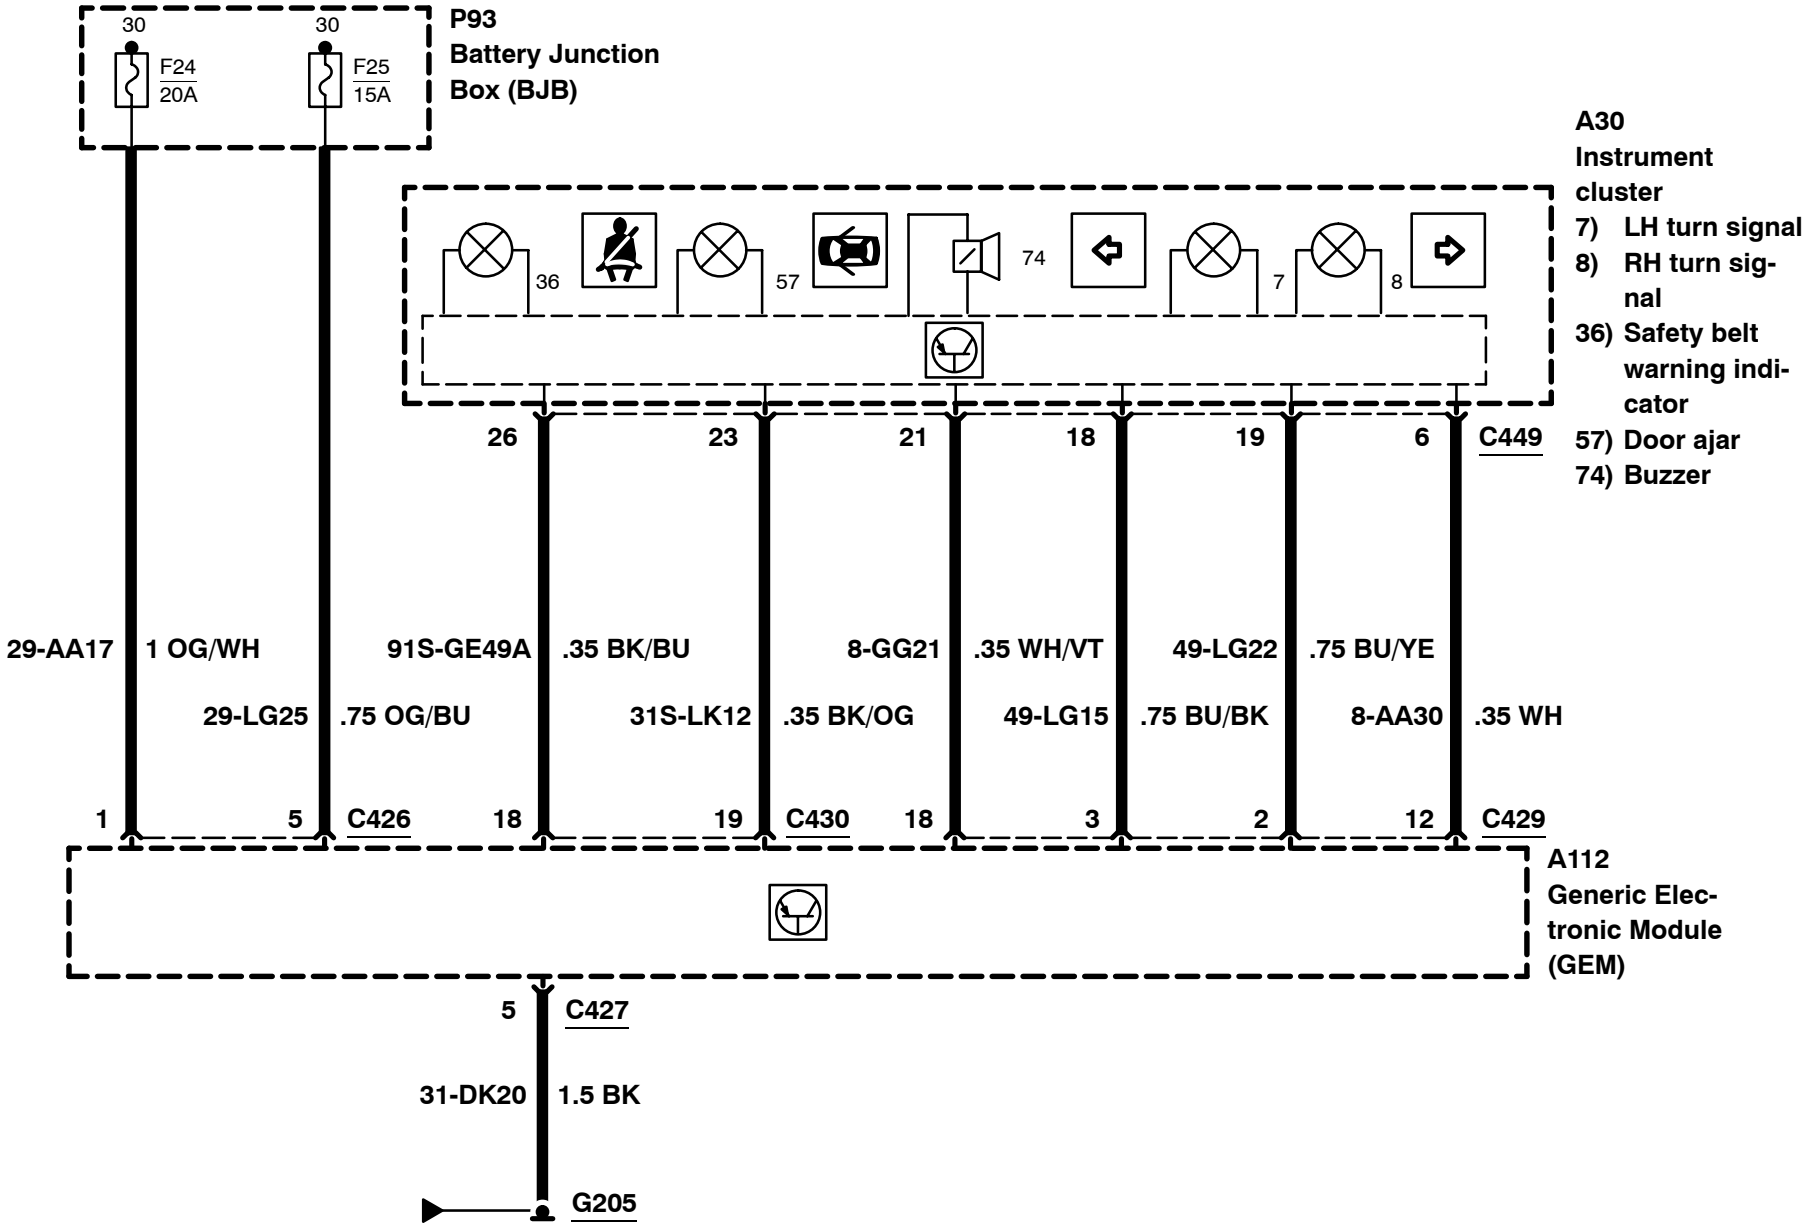


Instrument Cluster – before 08/2004

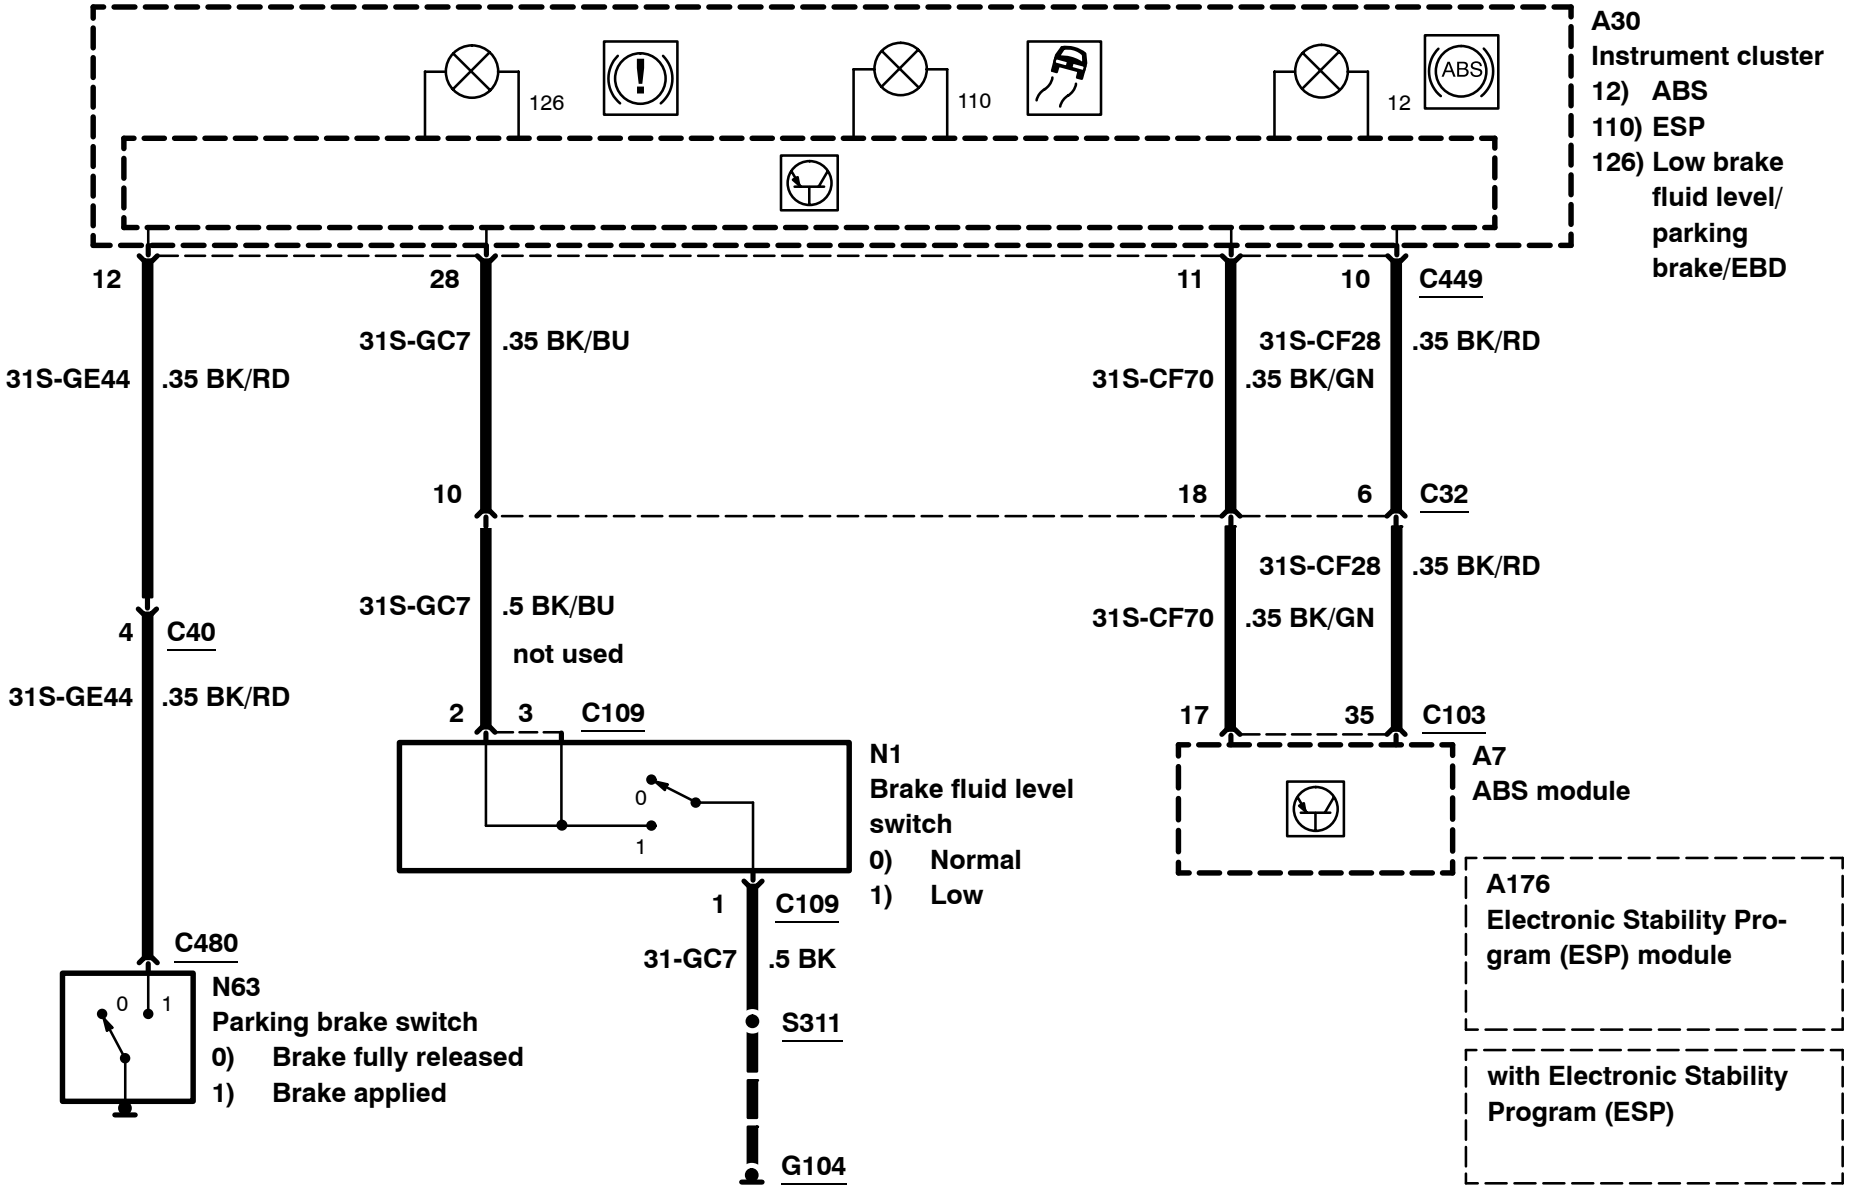


Instrument Cluster – as of 08/2004

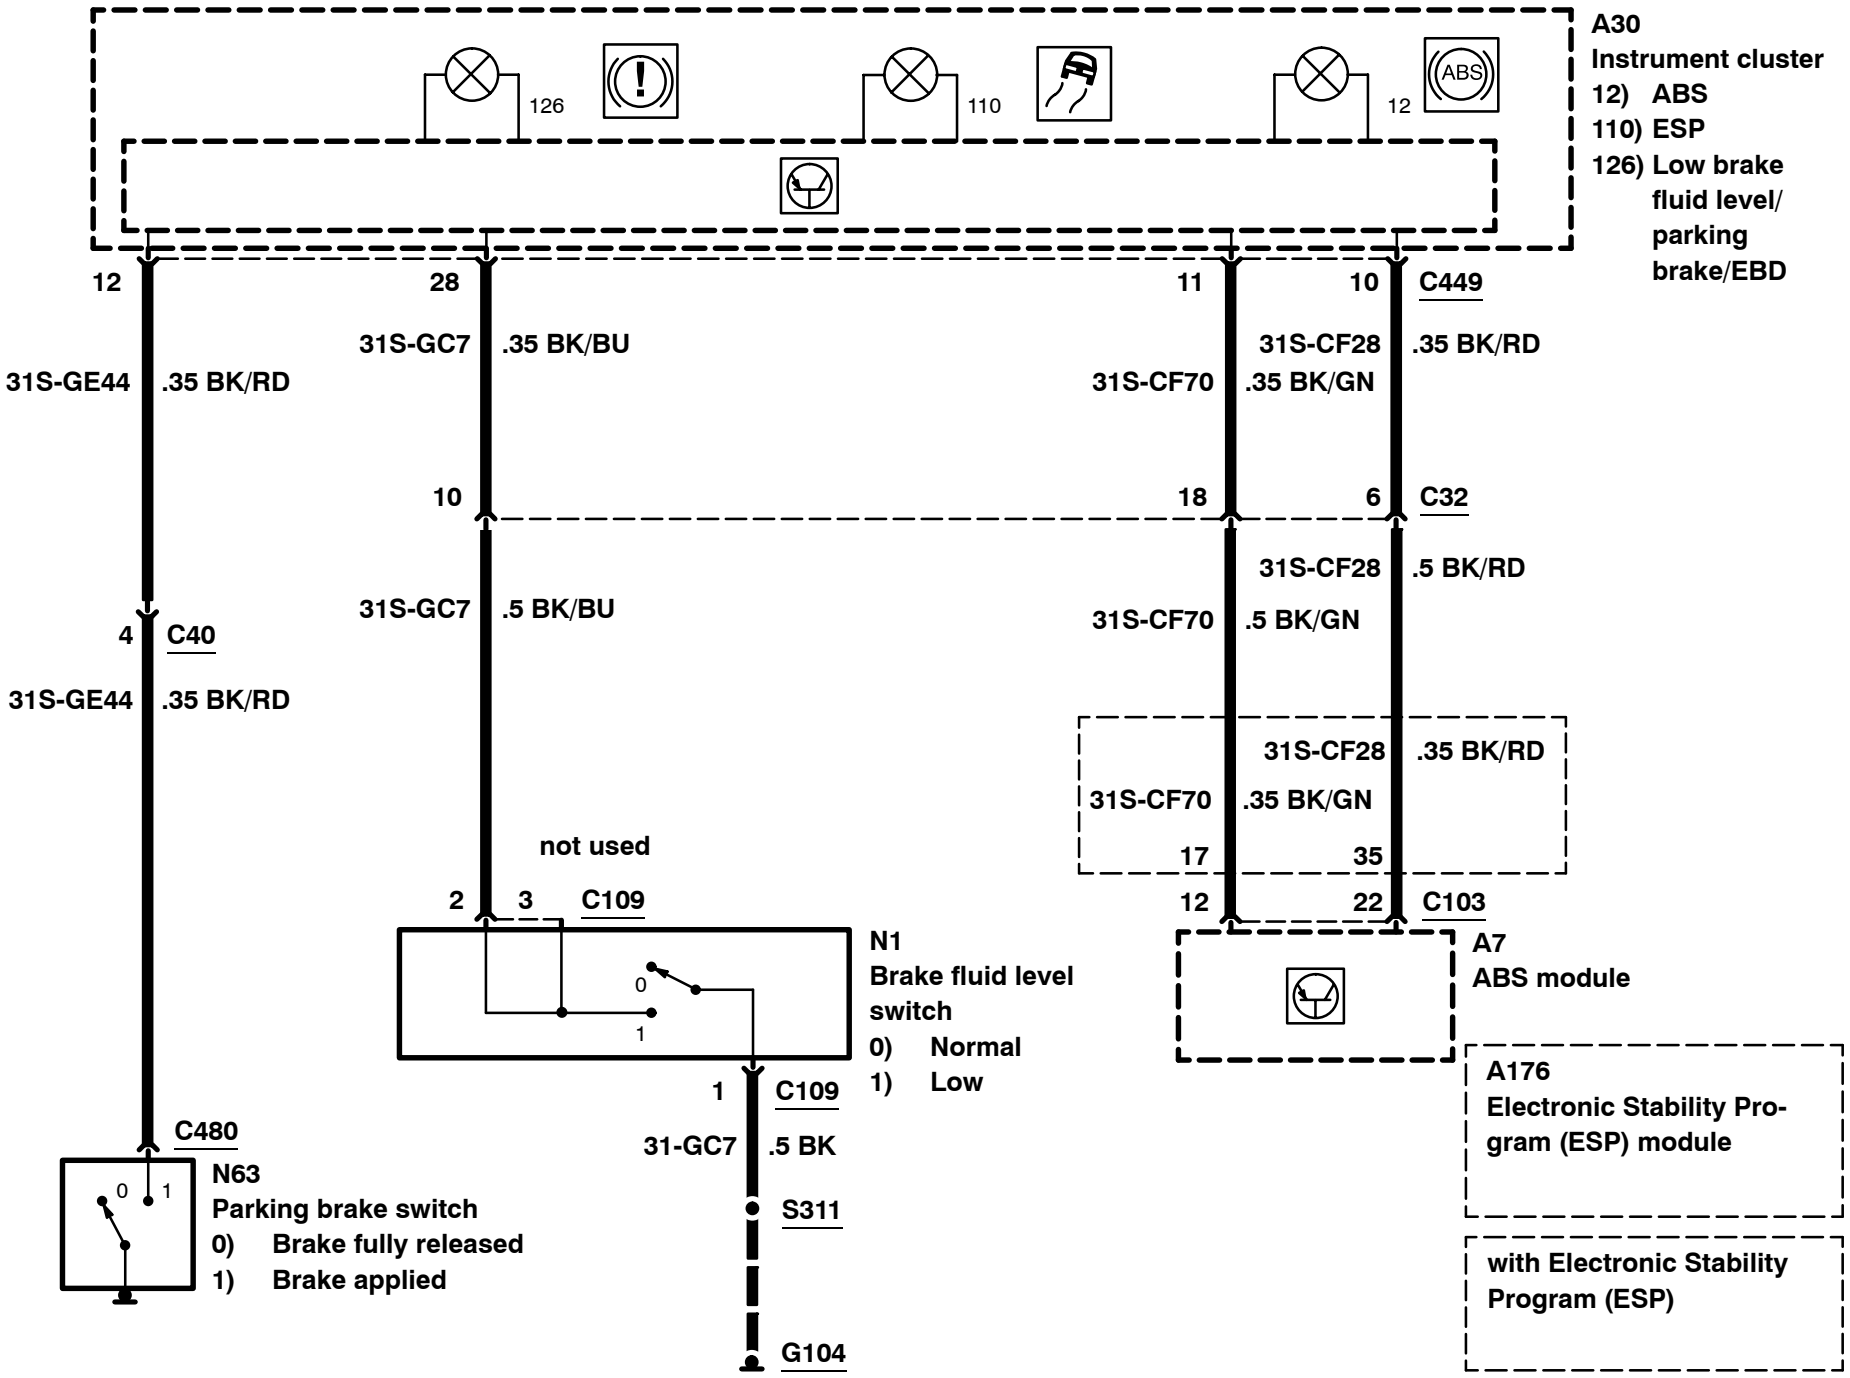


Instrument Cluster – Petrol engines

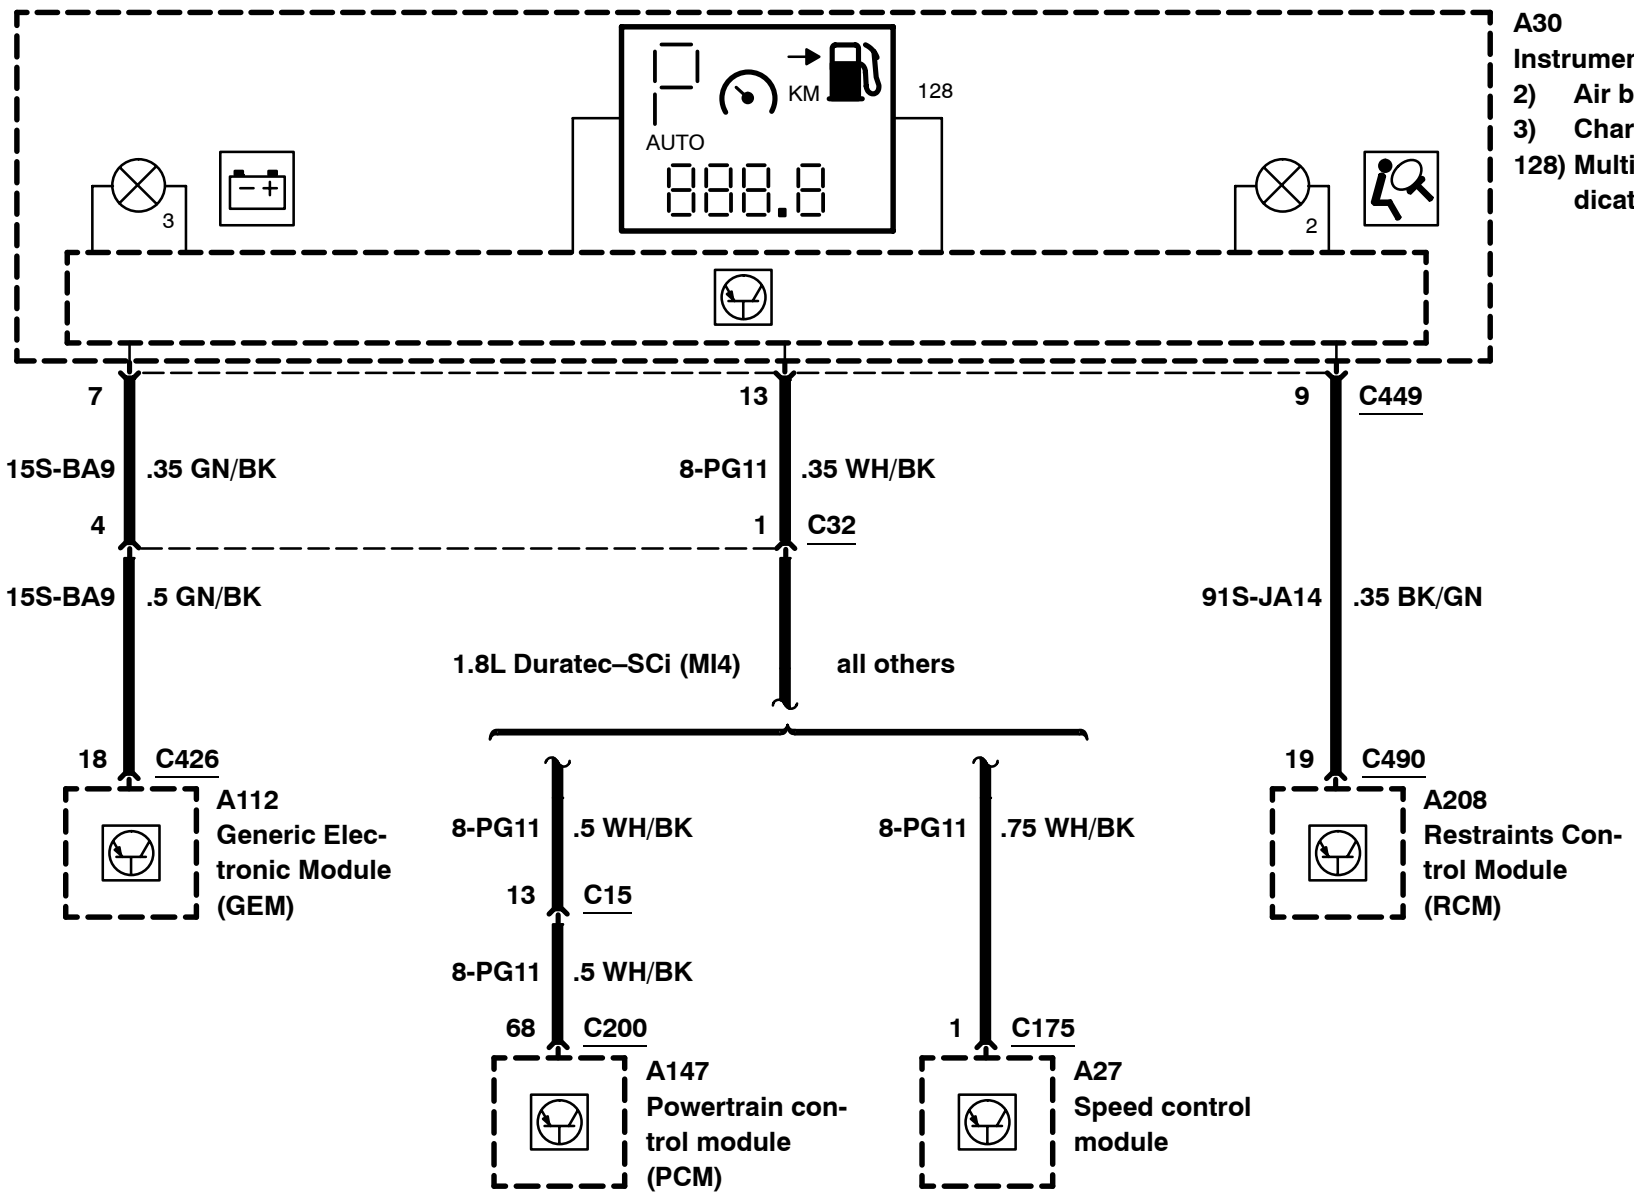


Instrument Cluster – Diesel engines

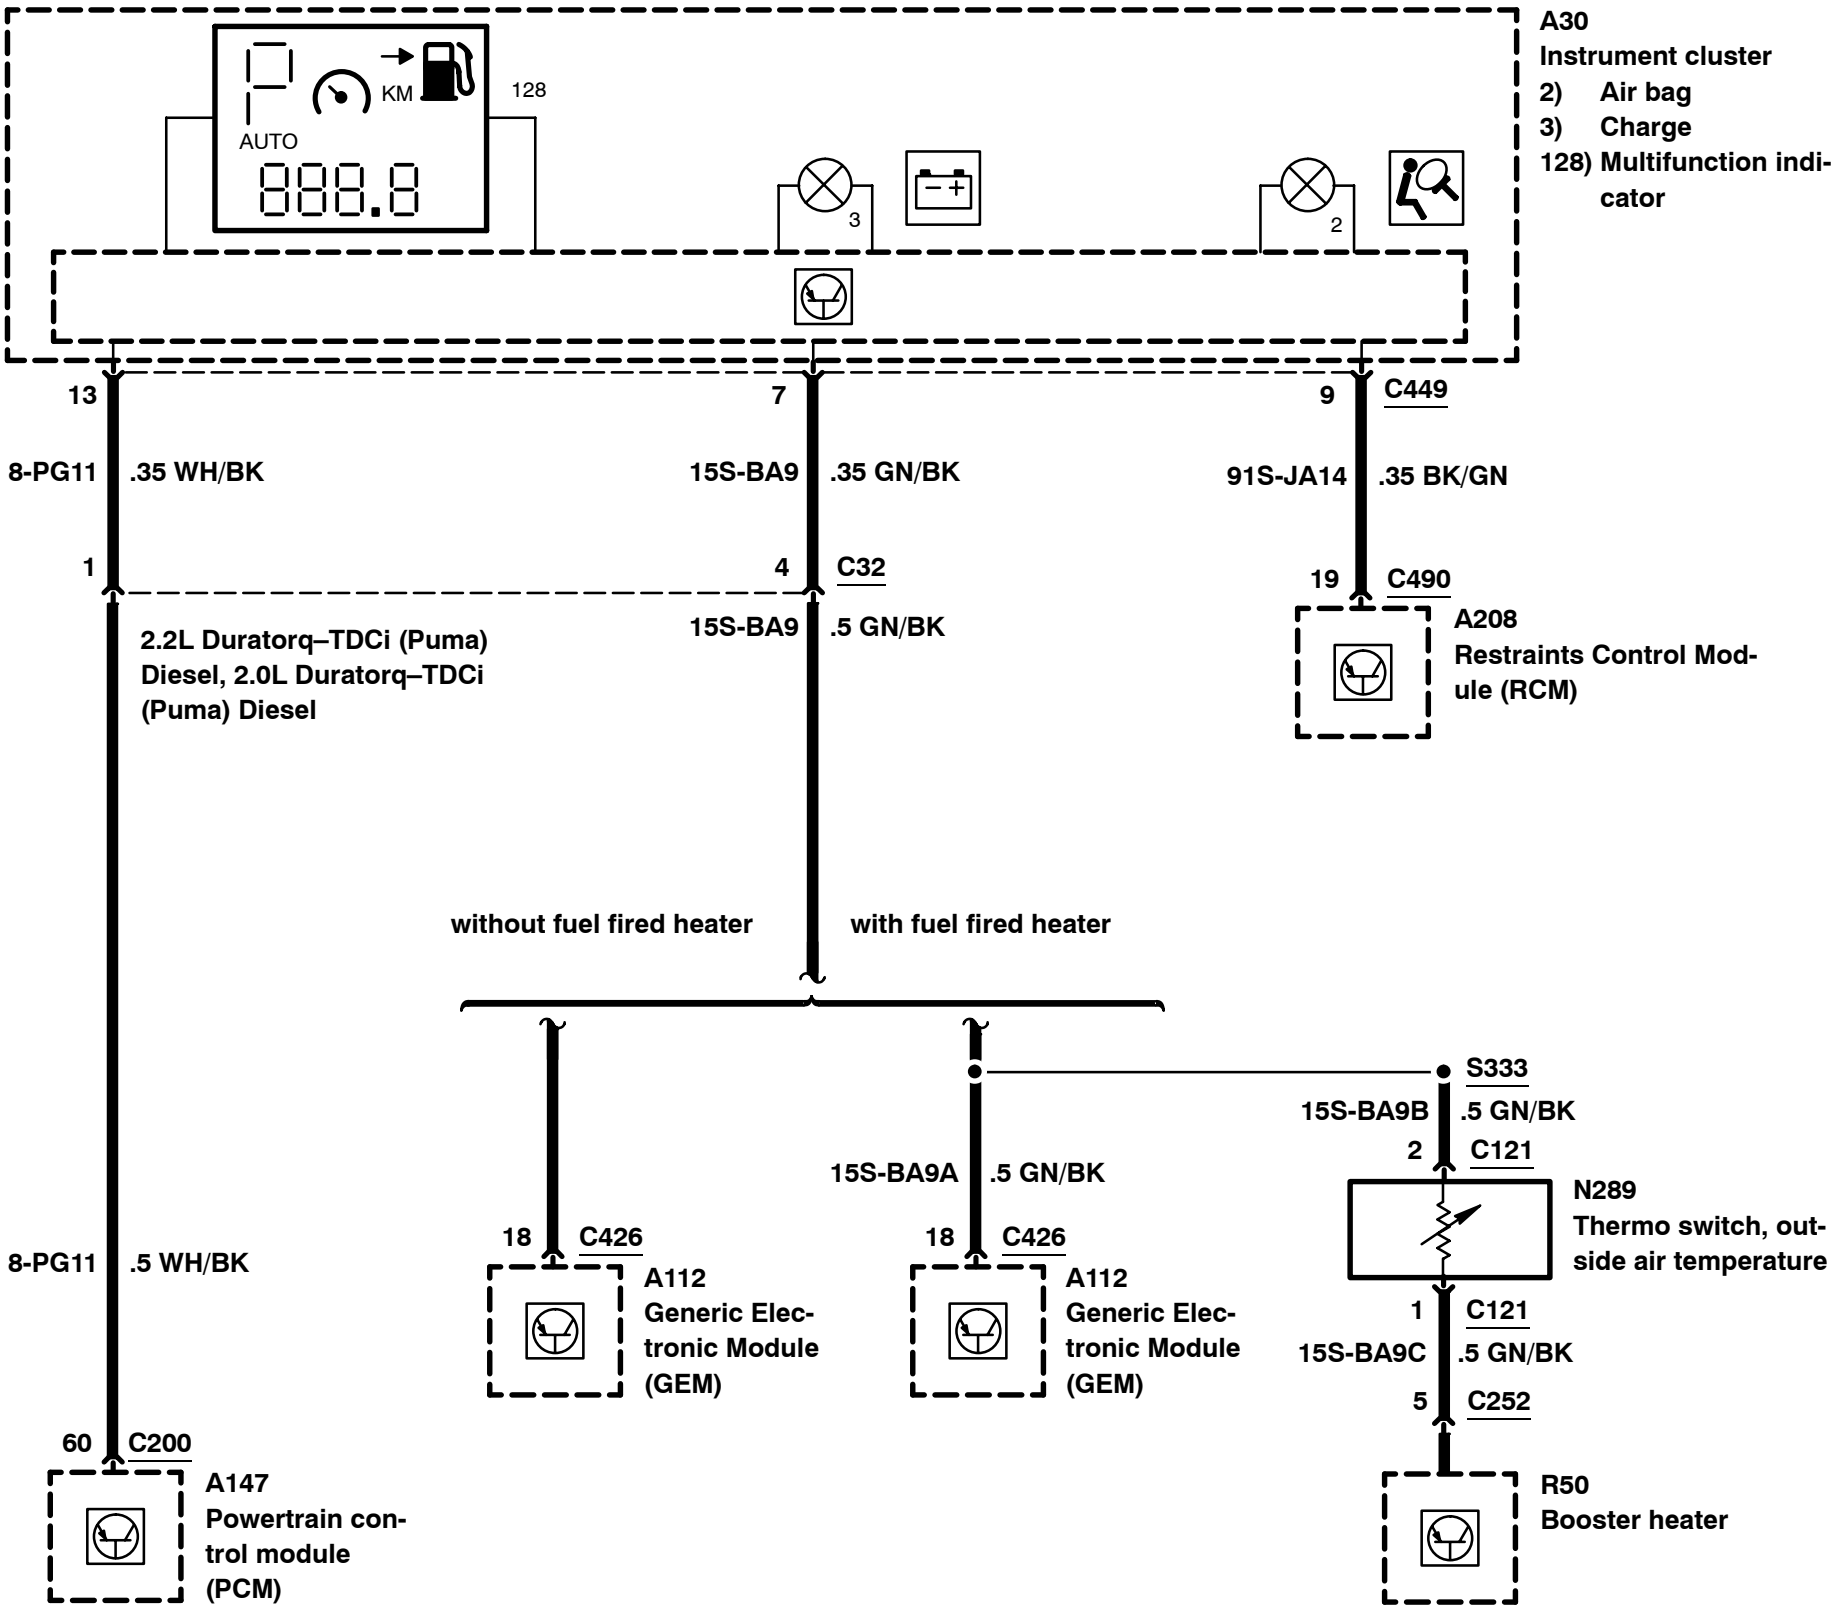


Instrument Cluster

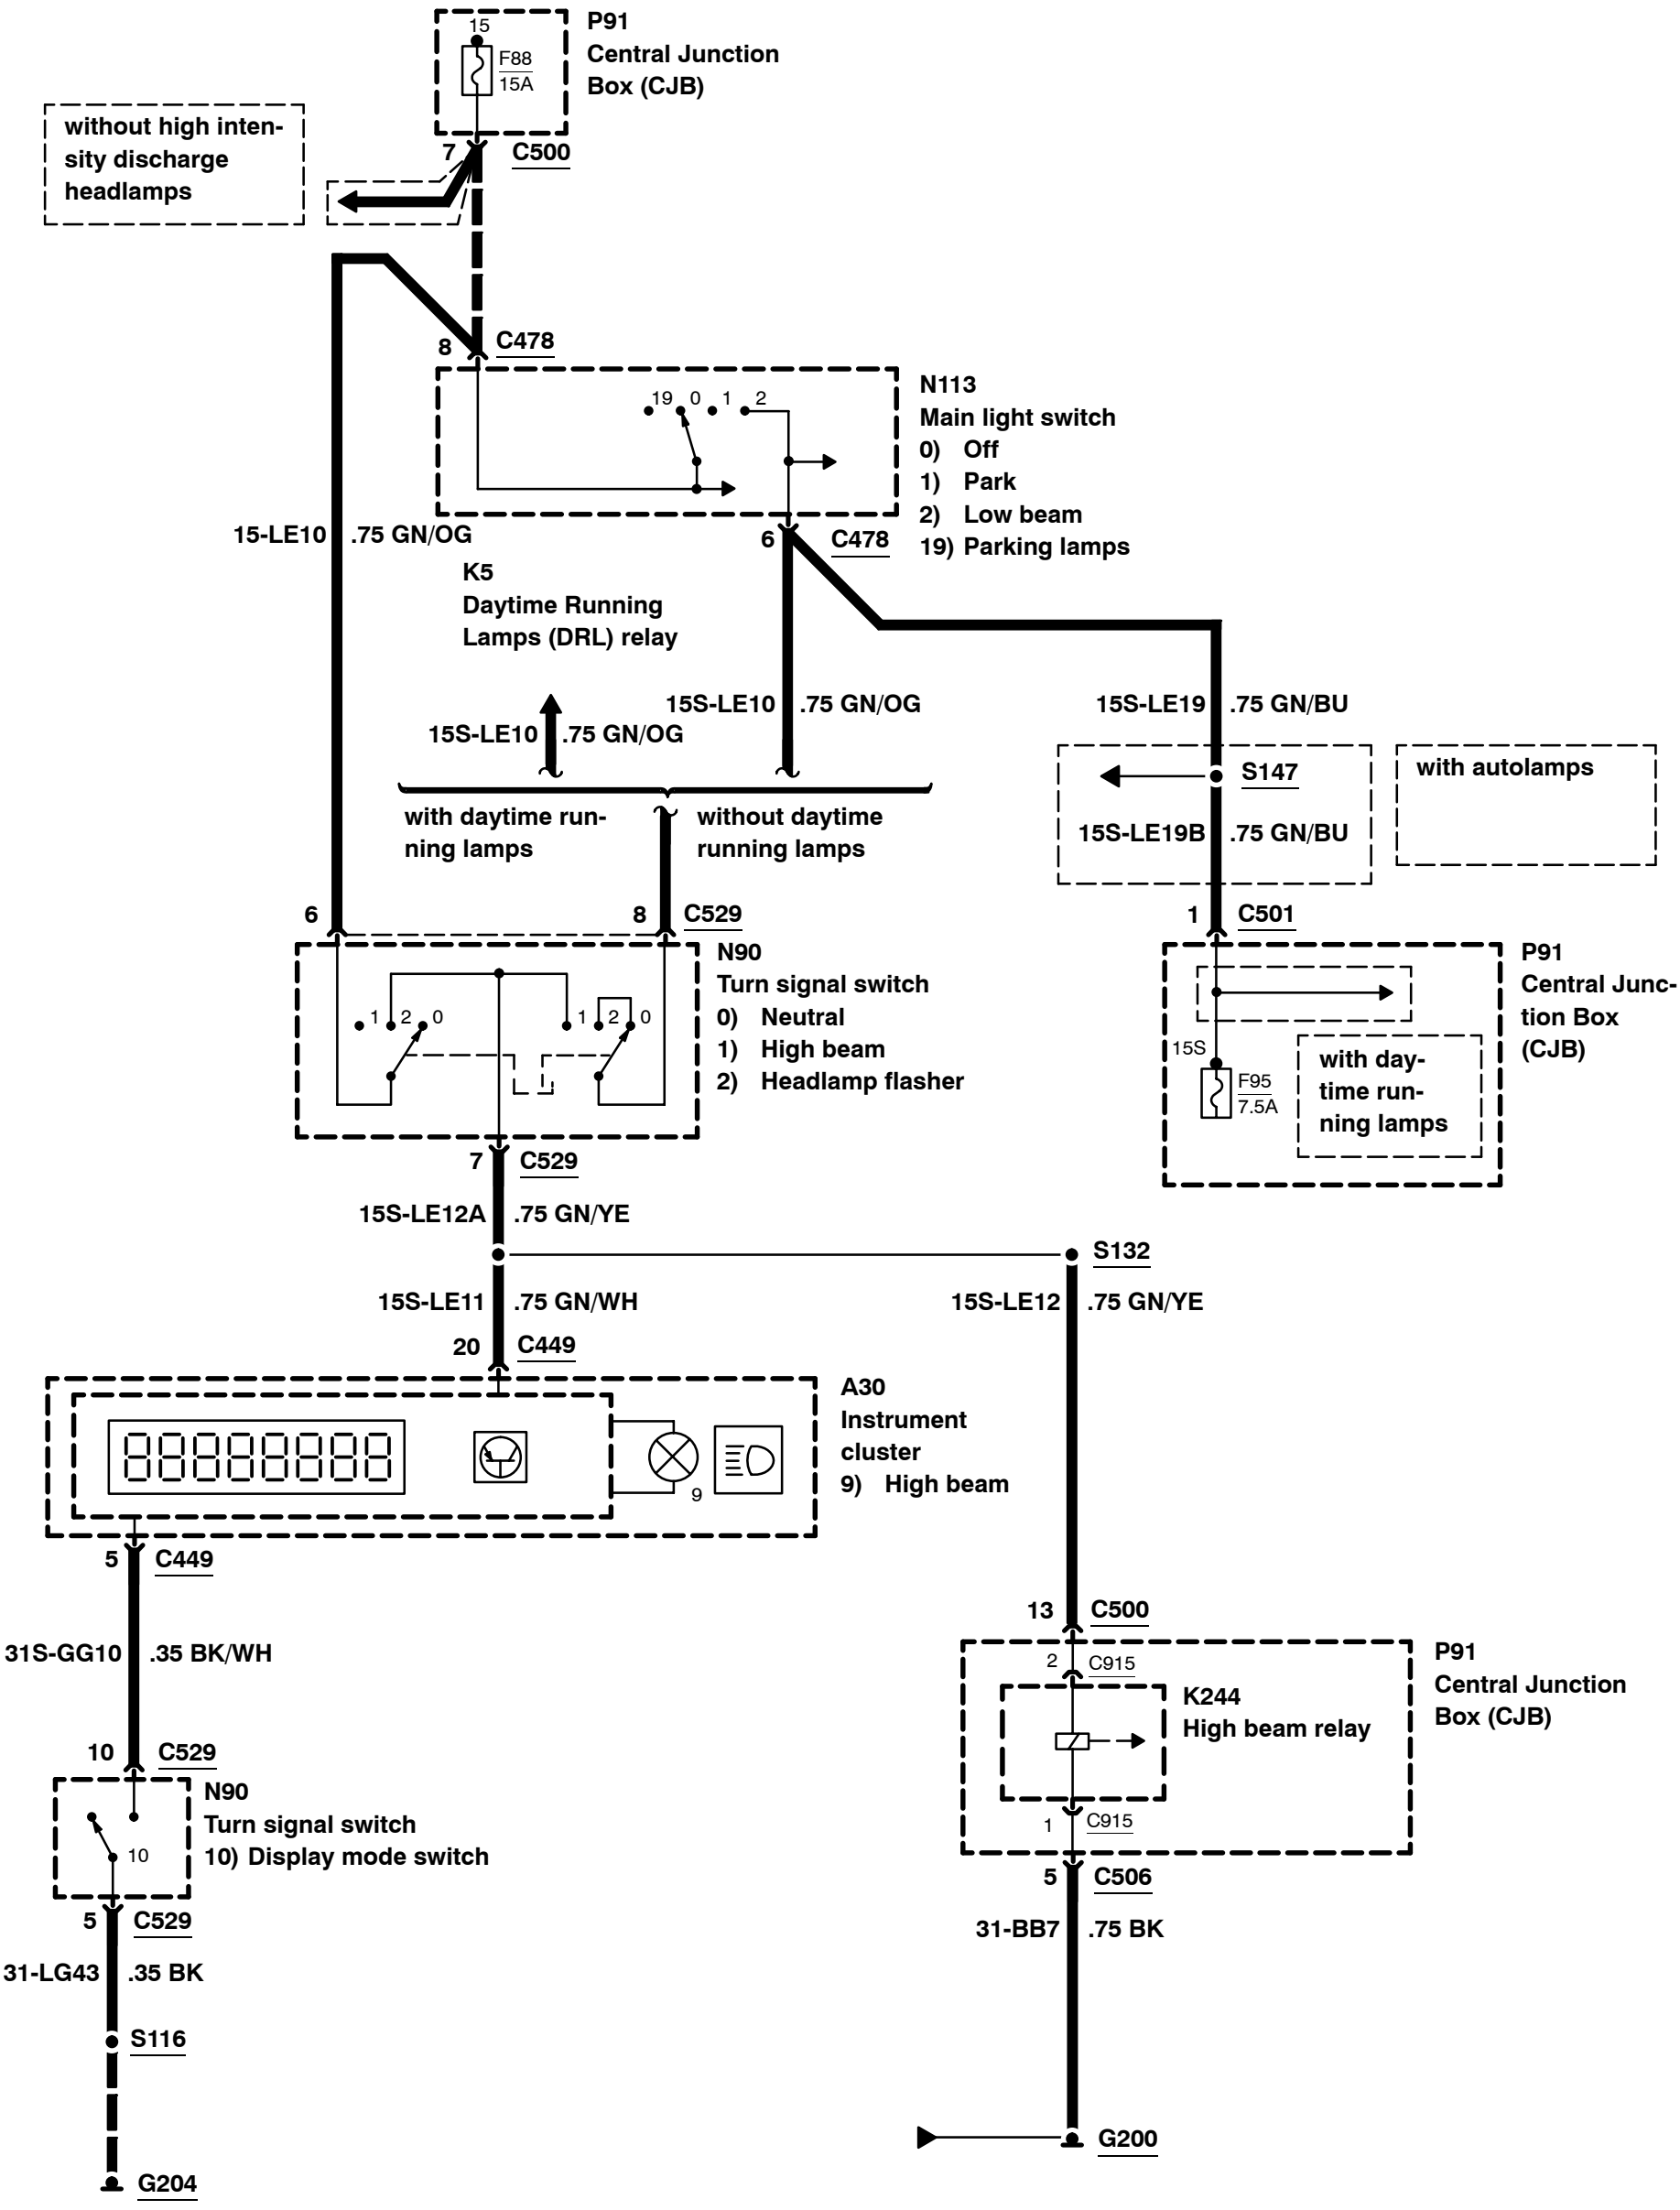


Horn

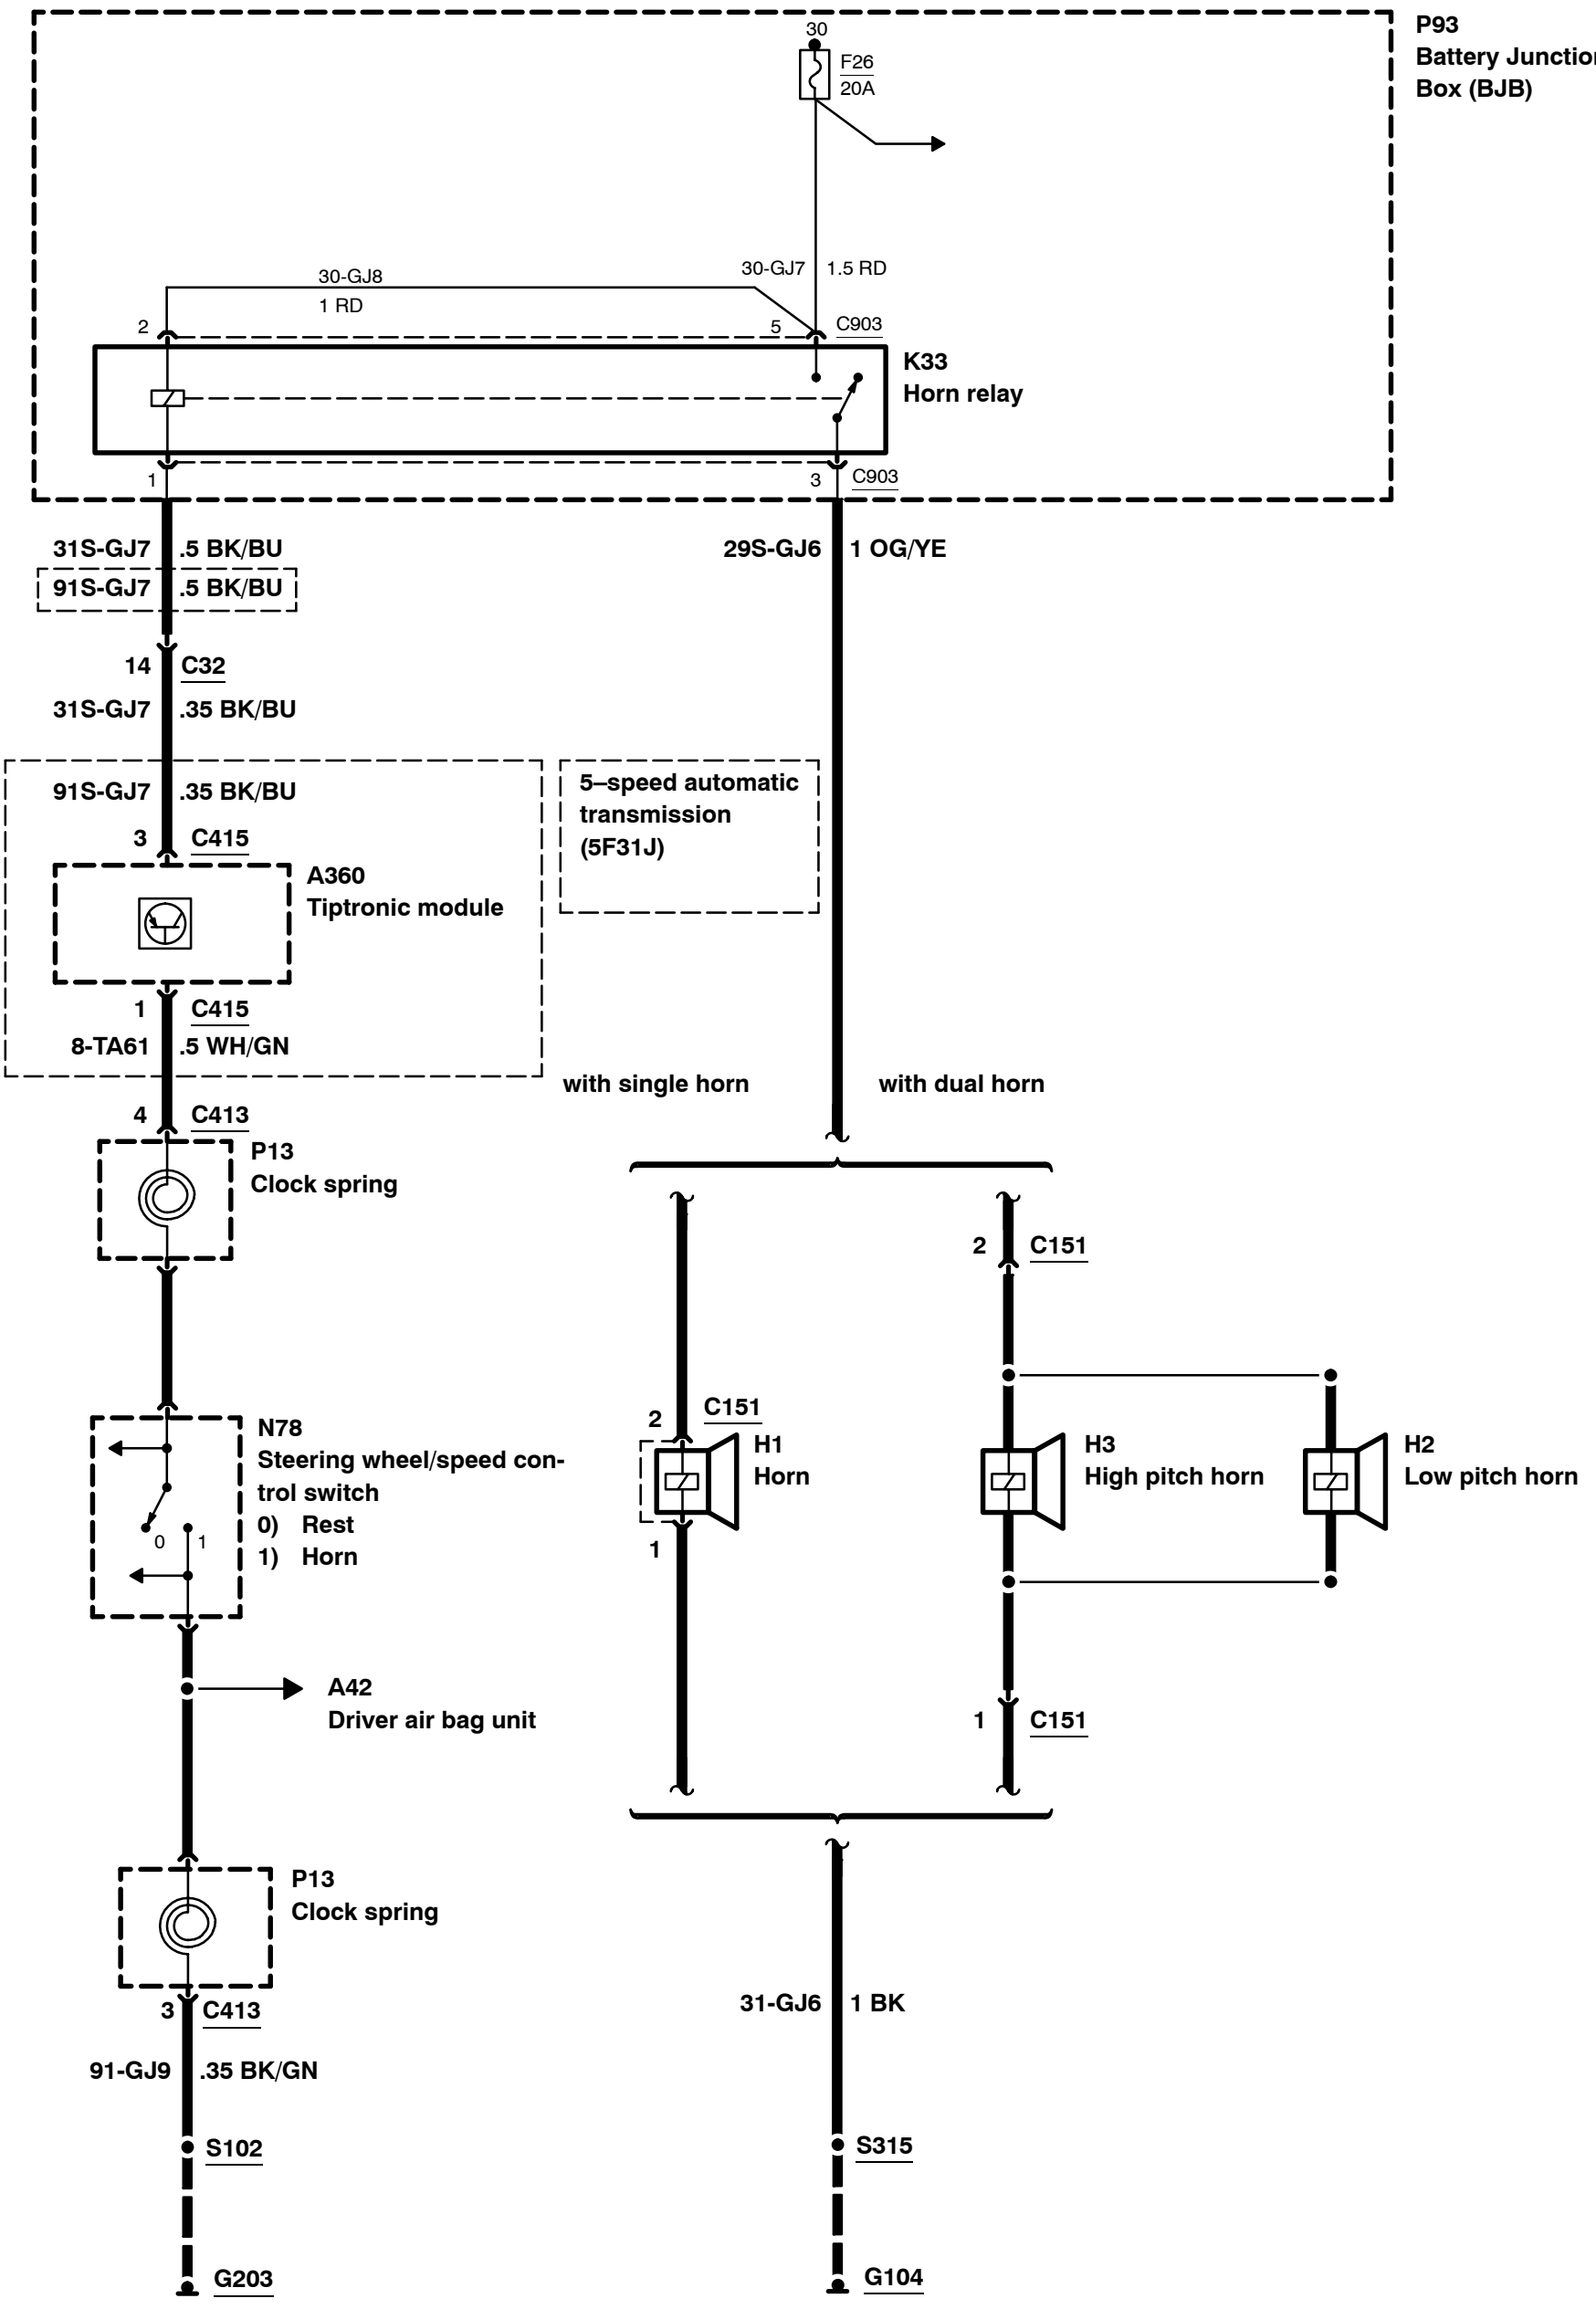
P93
Battery Junction Box (BJB)
30
F26
20A
30-GJ8
1 RD
30-GJ7
1.5 RD
2
5
C903
K33
Horn relay
1
3
C903
31S-GJ7 .5 BK/BU
91S-GJ7 .5 BK/BU
29S-GJ6 1 OG/YE
14 C32
31S-GJ7 .35 BK/BU
91S-GJ7 .35 BK/BU
3 C415
A360
Tiptronic module
1 C415
8-TA61 .5 WH/GN
5–speed automatic transmission (5F31J)
with single horn
with dual horn
4 C413
P13
Clock spring
N78
Steering wheel/speed control switch
0) Rest
1) Horn
0
1
A42
Driver air bag unit
2 C151
H1
Horn
H3
High pitch horn
H2
Low pitch horn
1 C151
P13
Clock spring
3 C413
91-GJ9 .35 BK/GN
S102
G203
31-GJ6 1 BK
S315
G104


Clock

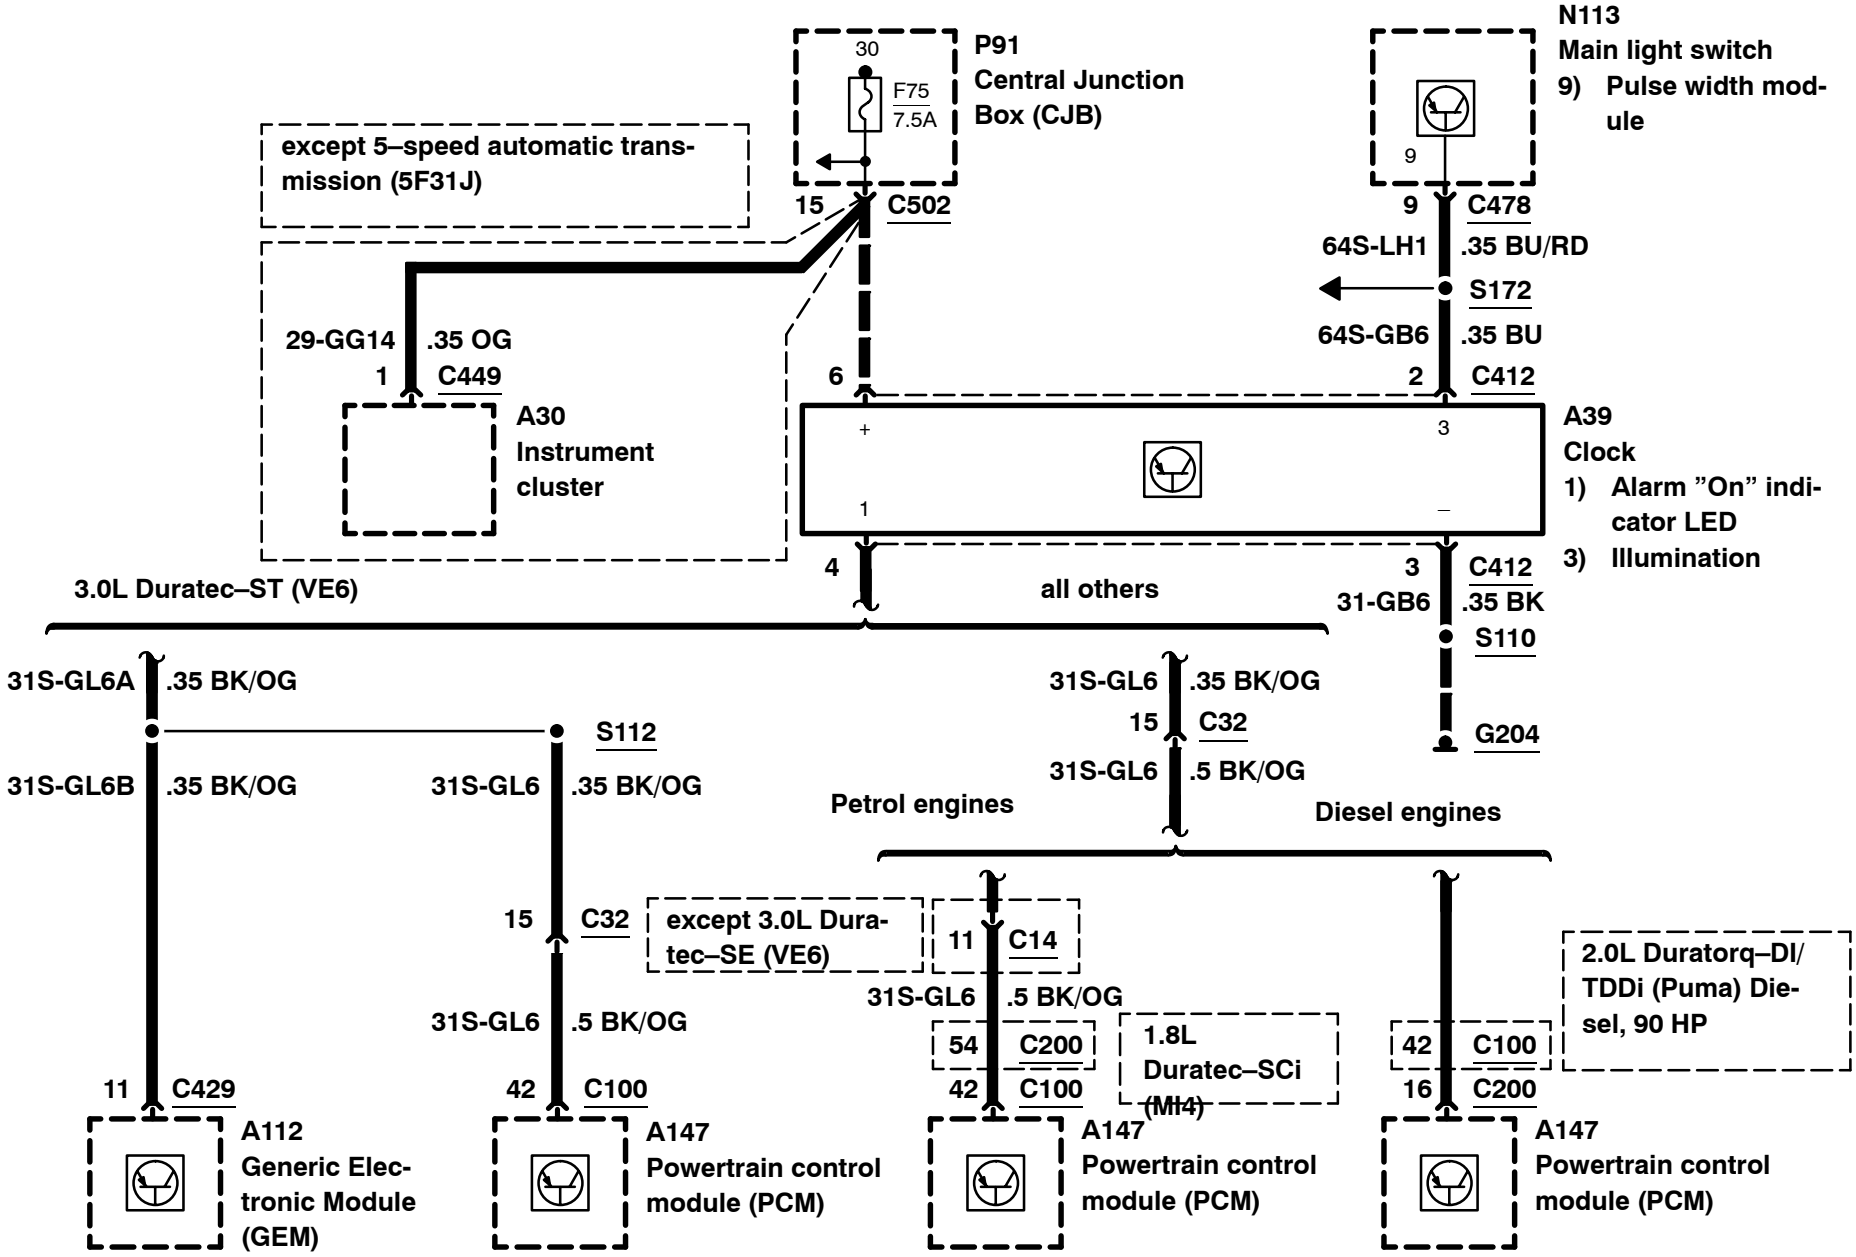
P91
Central Junction Box (CJB)
30
F75
7.5A
15
C502
except 5–speed automatic transmission (5F31J)
29-GG14
.35 OG
1
C449
A30
Instrument cluster
6
N113
Main light switch
9) Pulse width modulation
9
9
C478
64S-LH1
.35 BU/RD
S172
64S-GB6
.35 BU
2
C412
A39
Clock
1) Alarm "On" indicator LED
3) Illumination
+
1
3
–
4
3
C412
31-GB6
.35 BK
S110
G204
3.0L Duratec–ST (VE6)
all others
31S-GL6A
.35 BK/OG
31S-GL6B
.35 BK/OG
S112
31S-GL6
.35 BK/OG
31S-GL6
.35 BK/OG
15
C32
31S-GL6
.5 BK/OG
Petrol engines
Diesel engines
15
C32
except 3.0L Duratec–SE (VE6)
11
C14
31S-GL6
.5 BK/OG
54
C200
42
C100
1.8L Duratec–SCi (MI4)
42
C100
16
C200
2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
11
C429
A112
Generic Electronic Module (GEM)
A147
Powertrain control module (PCM)
A147
Powertrain control module (PCM)
A147
Powertrain control module (PCM)


Warning Devices – without daytime running lamps, without autolamps

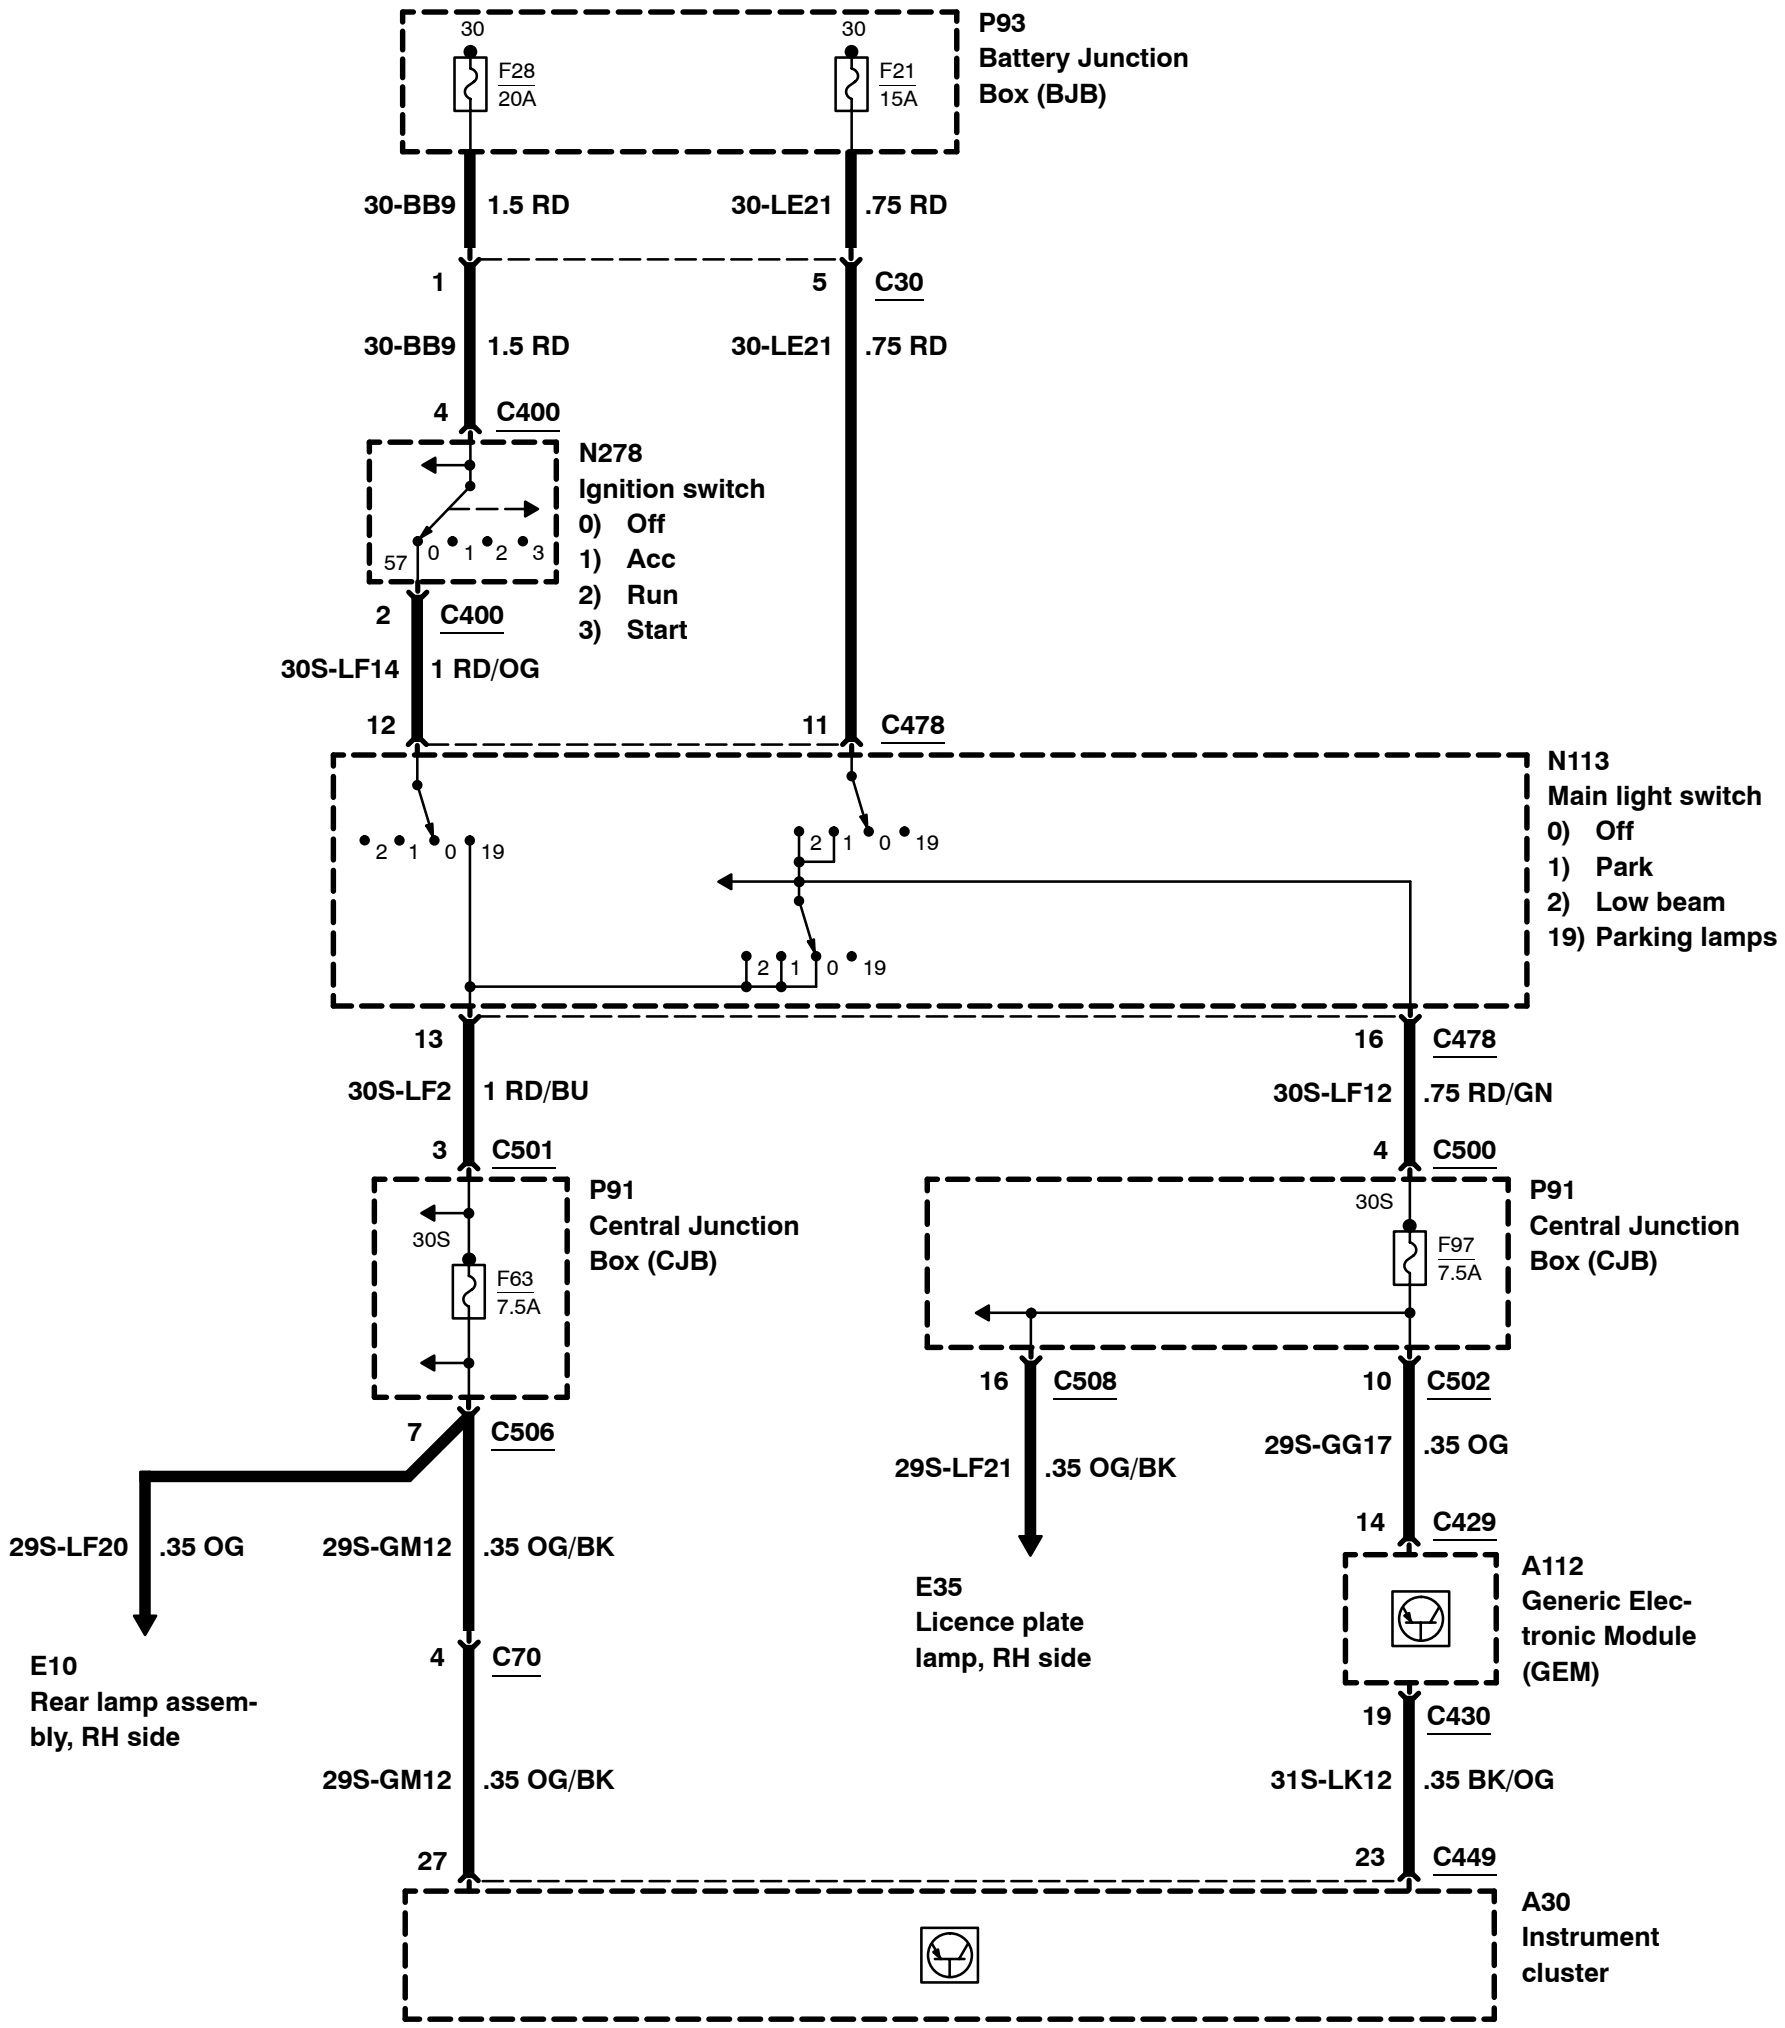


Warning Devices – with autolamps

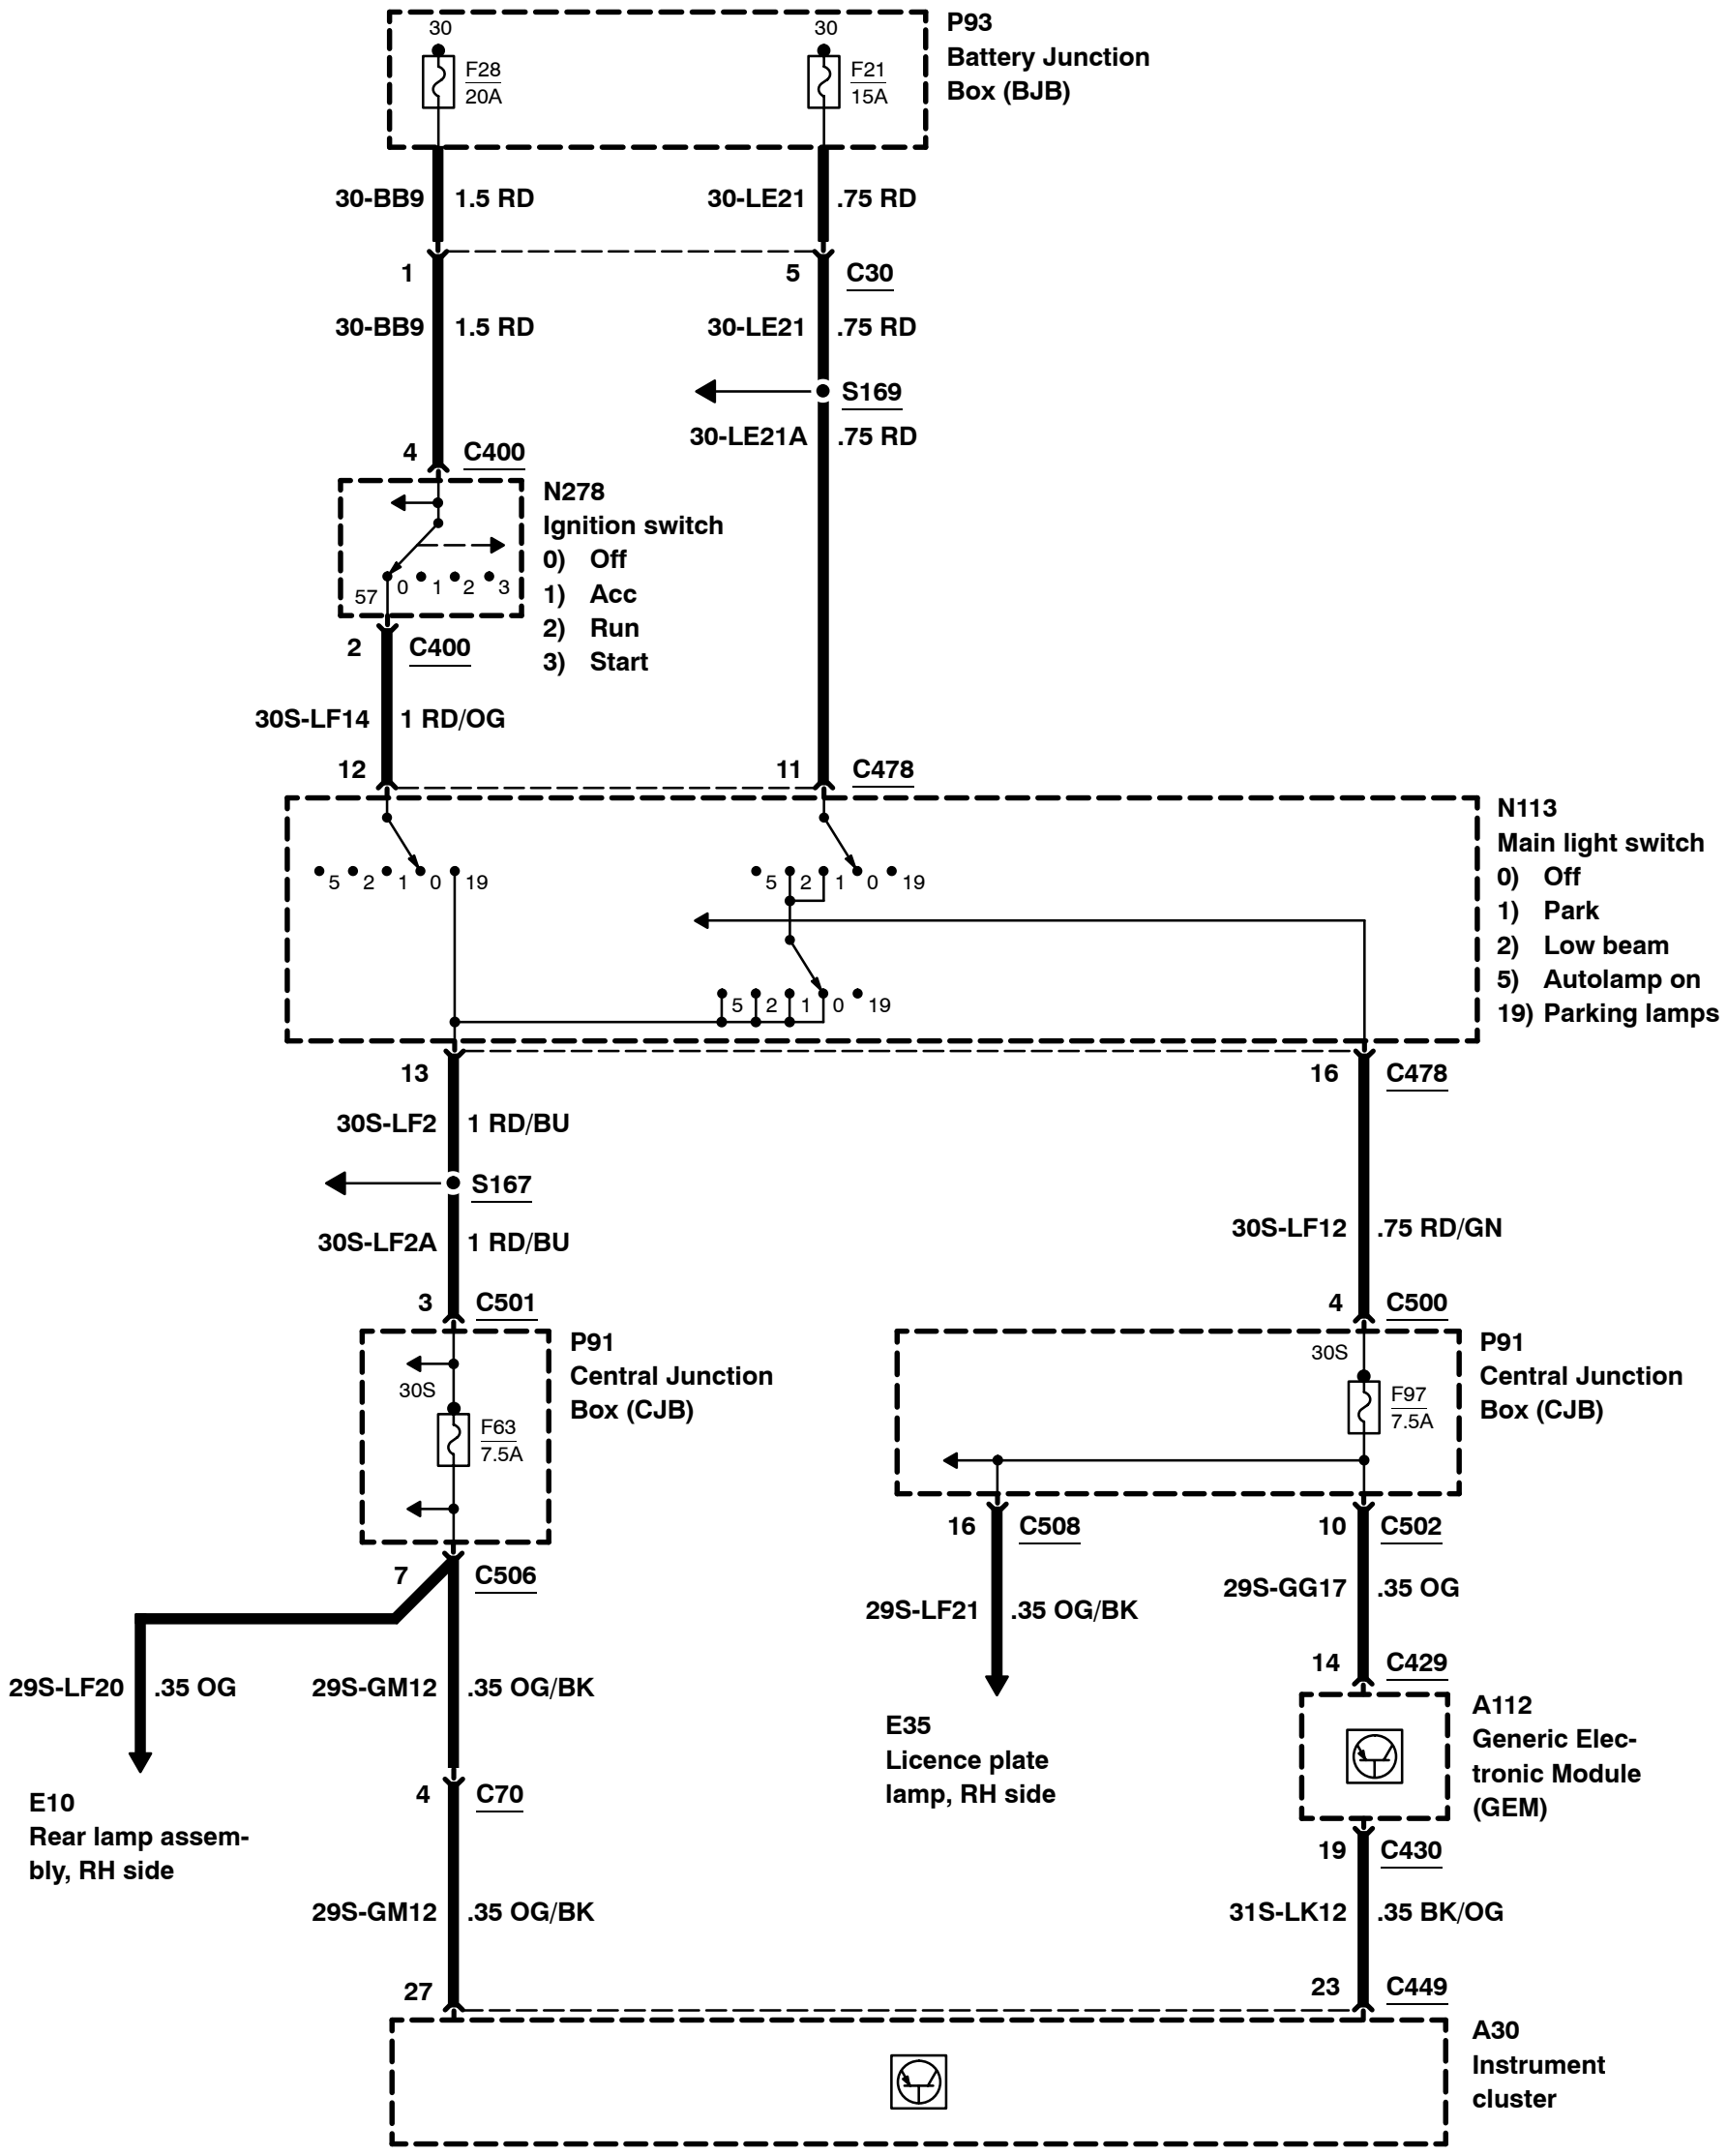


Warning Devices – with daytime running lamps

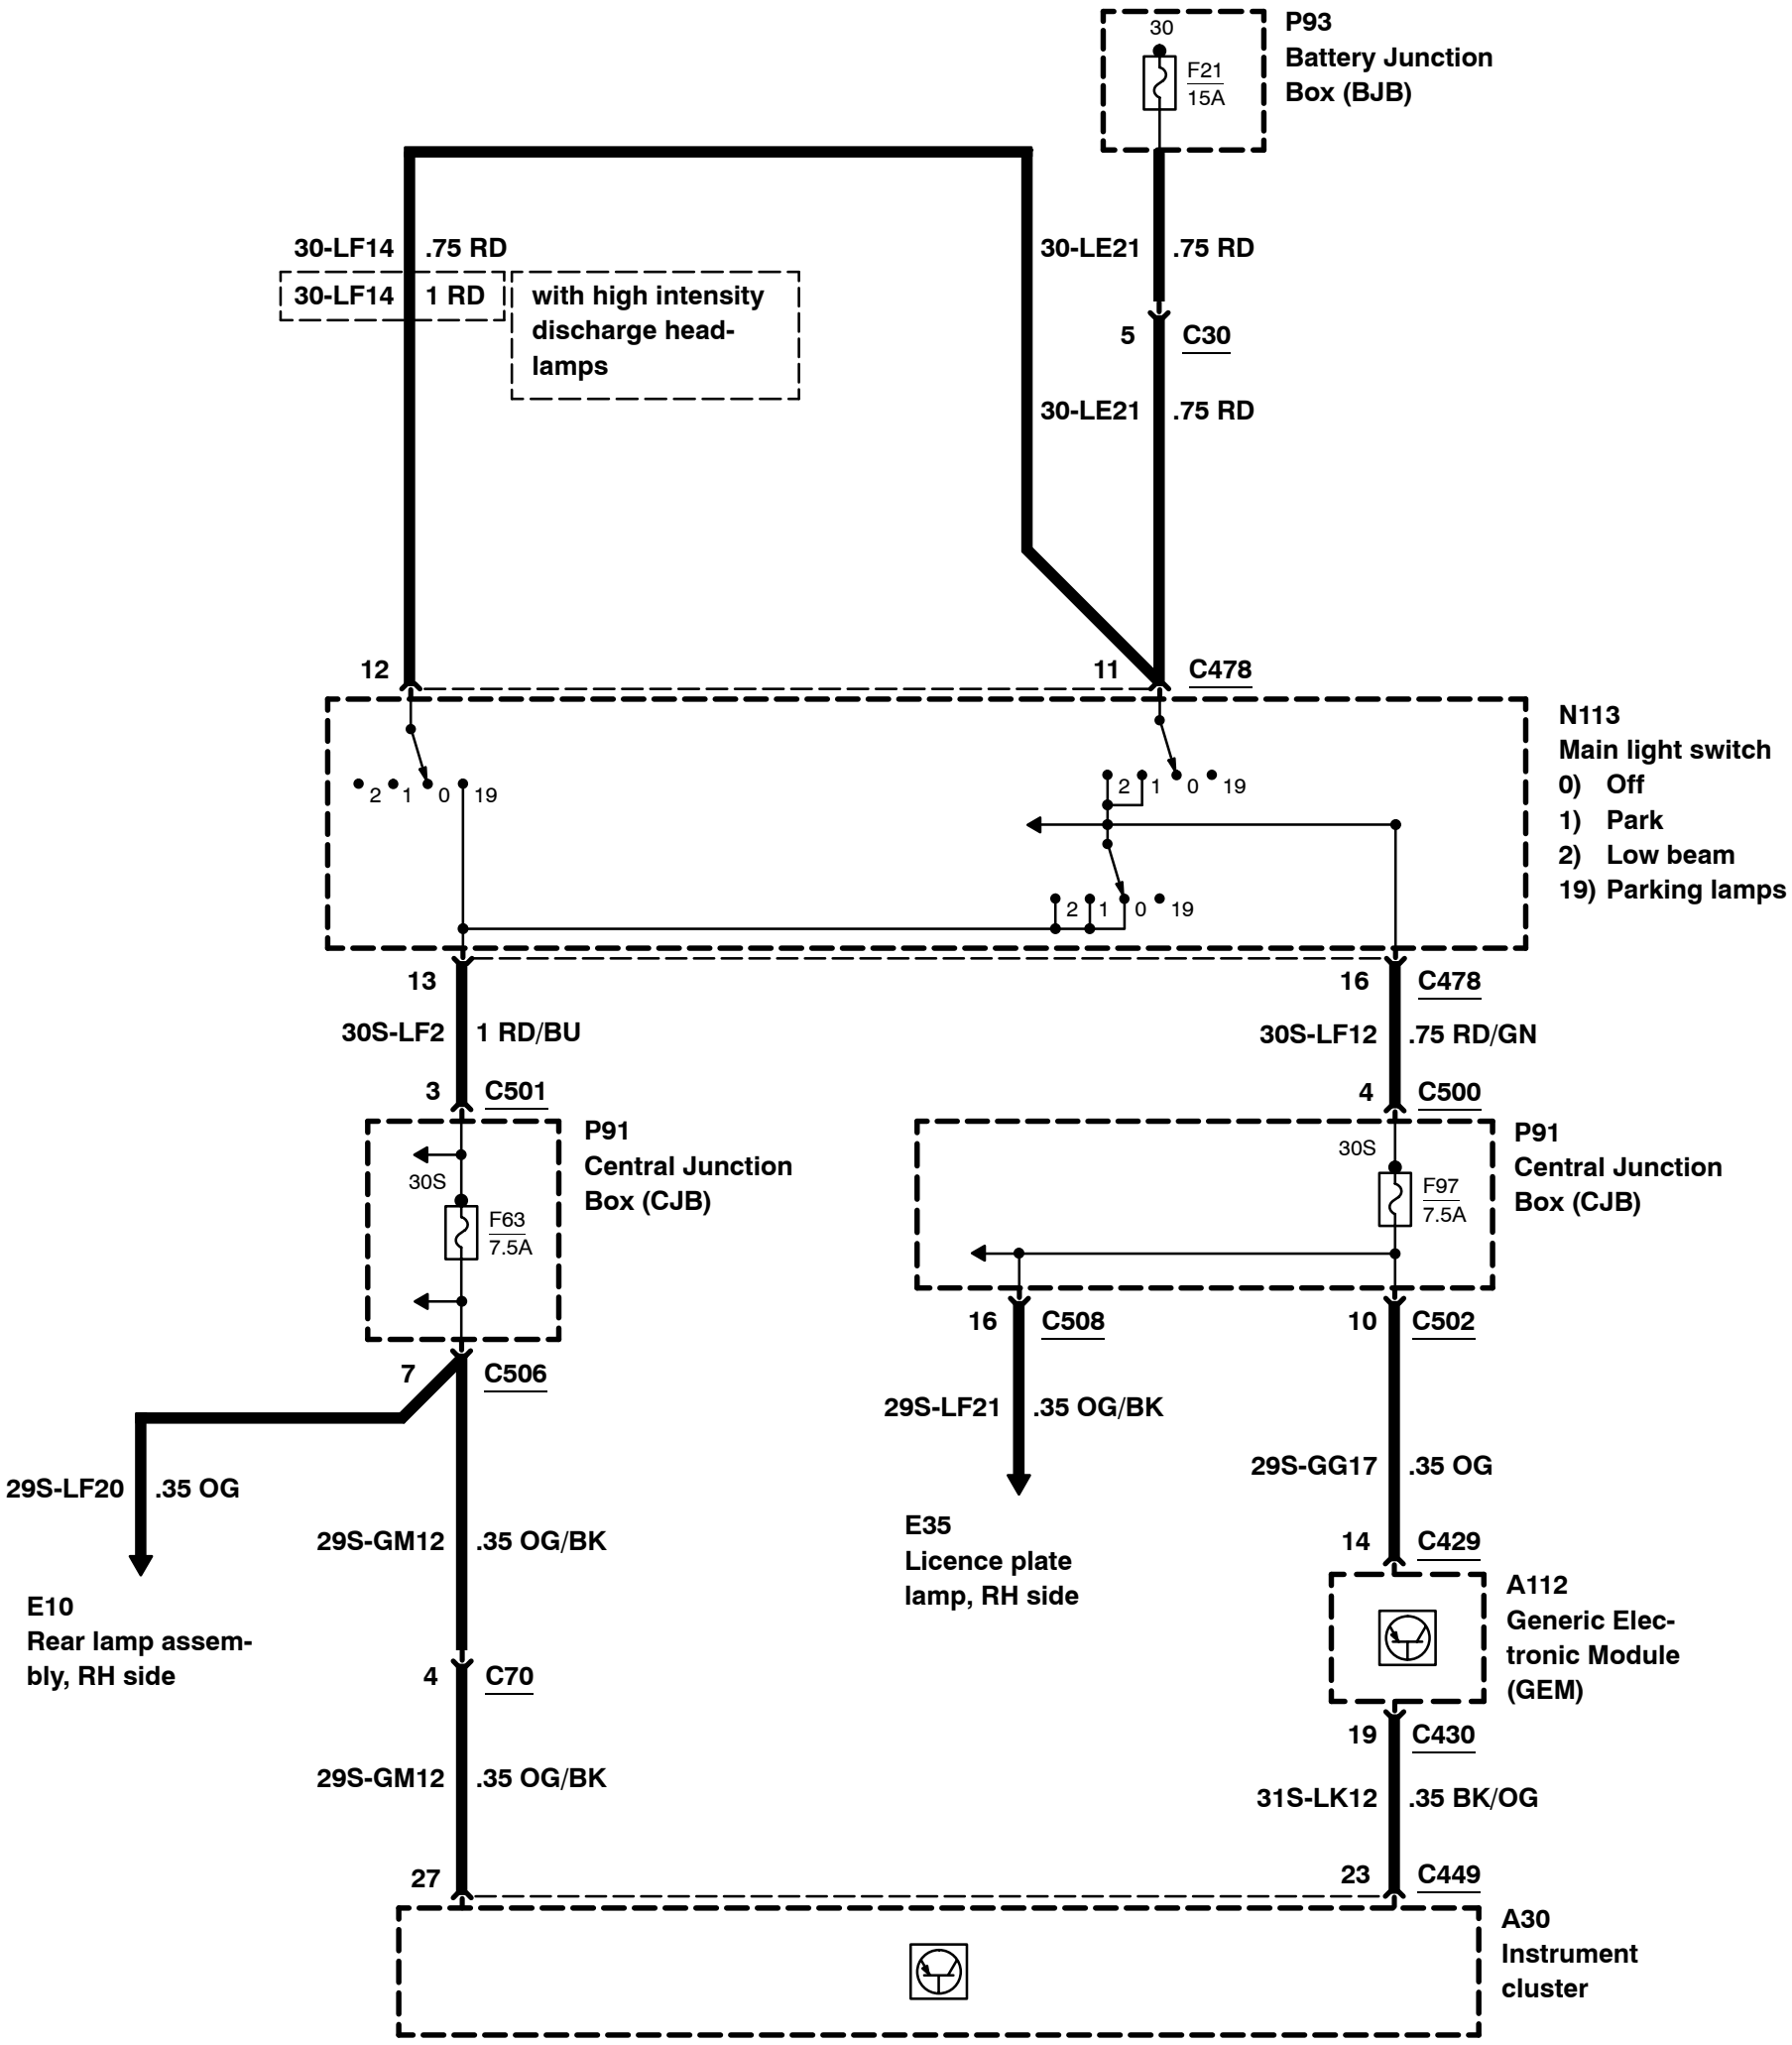


Warning Devices – LHD

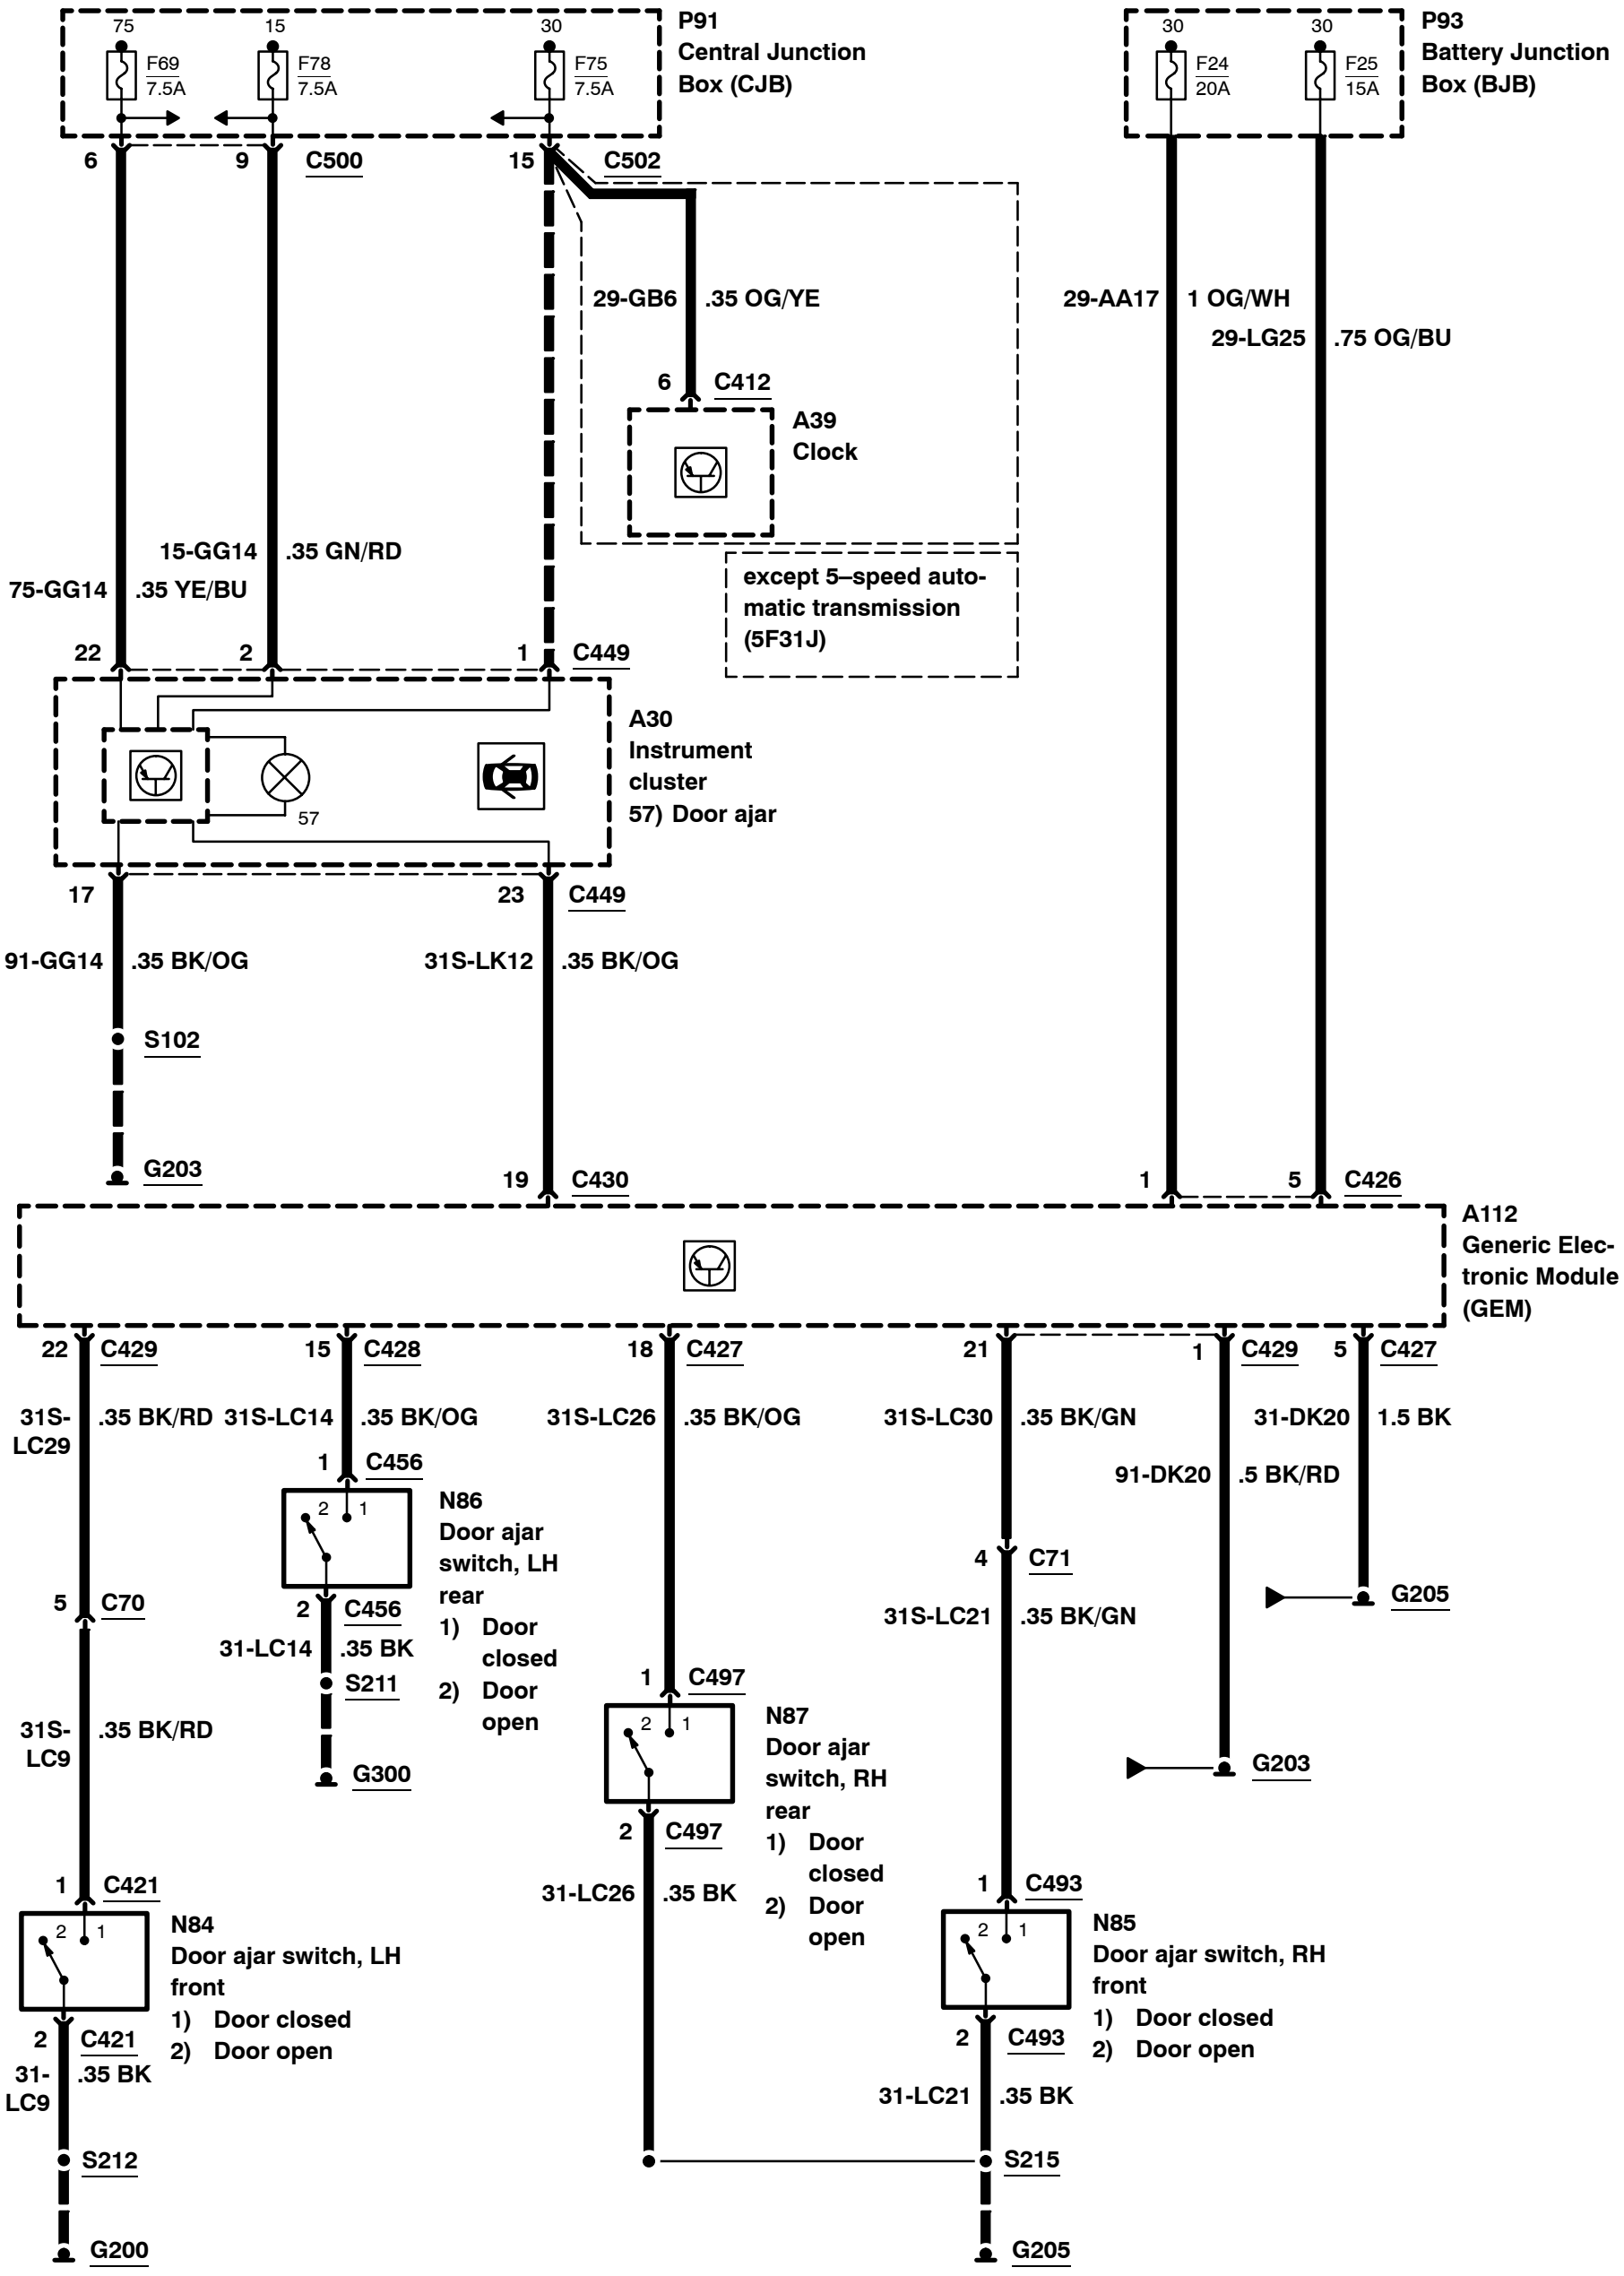


Warning Devices – RHD

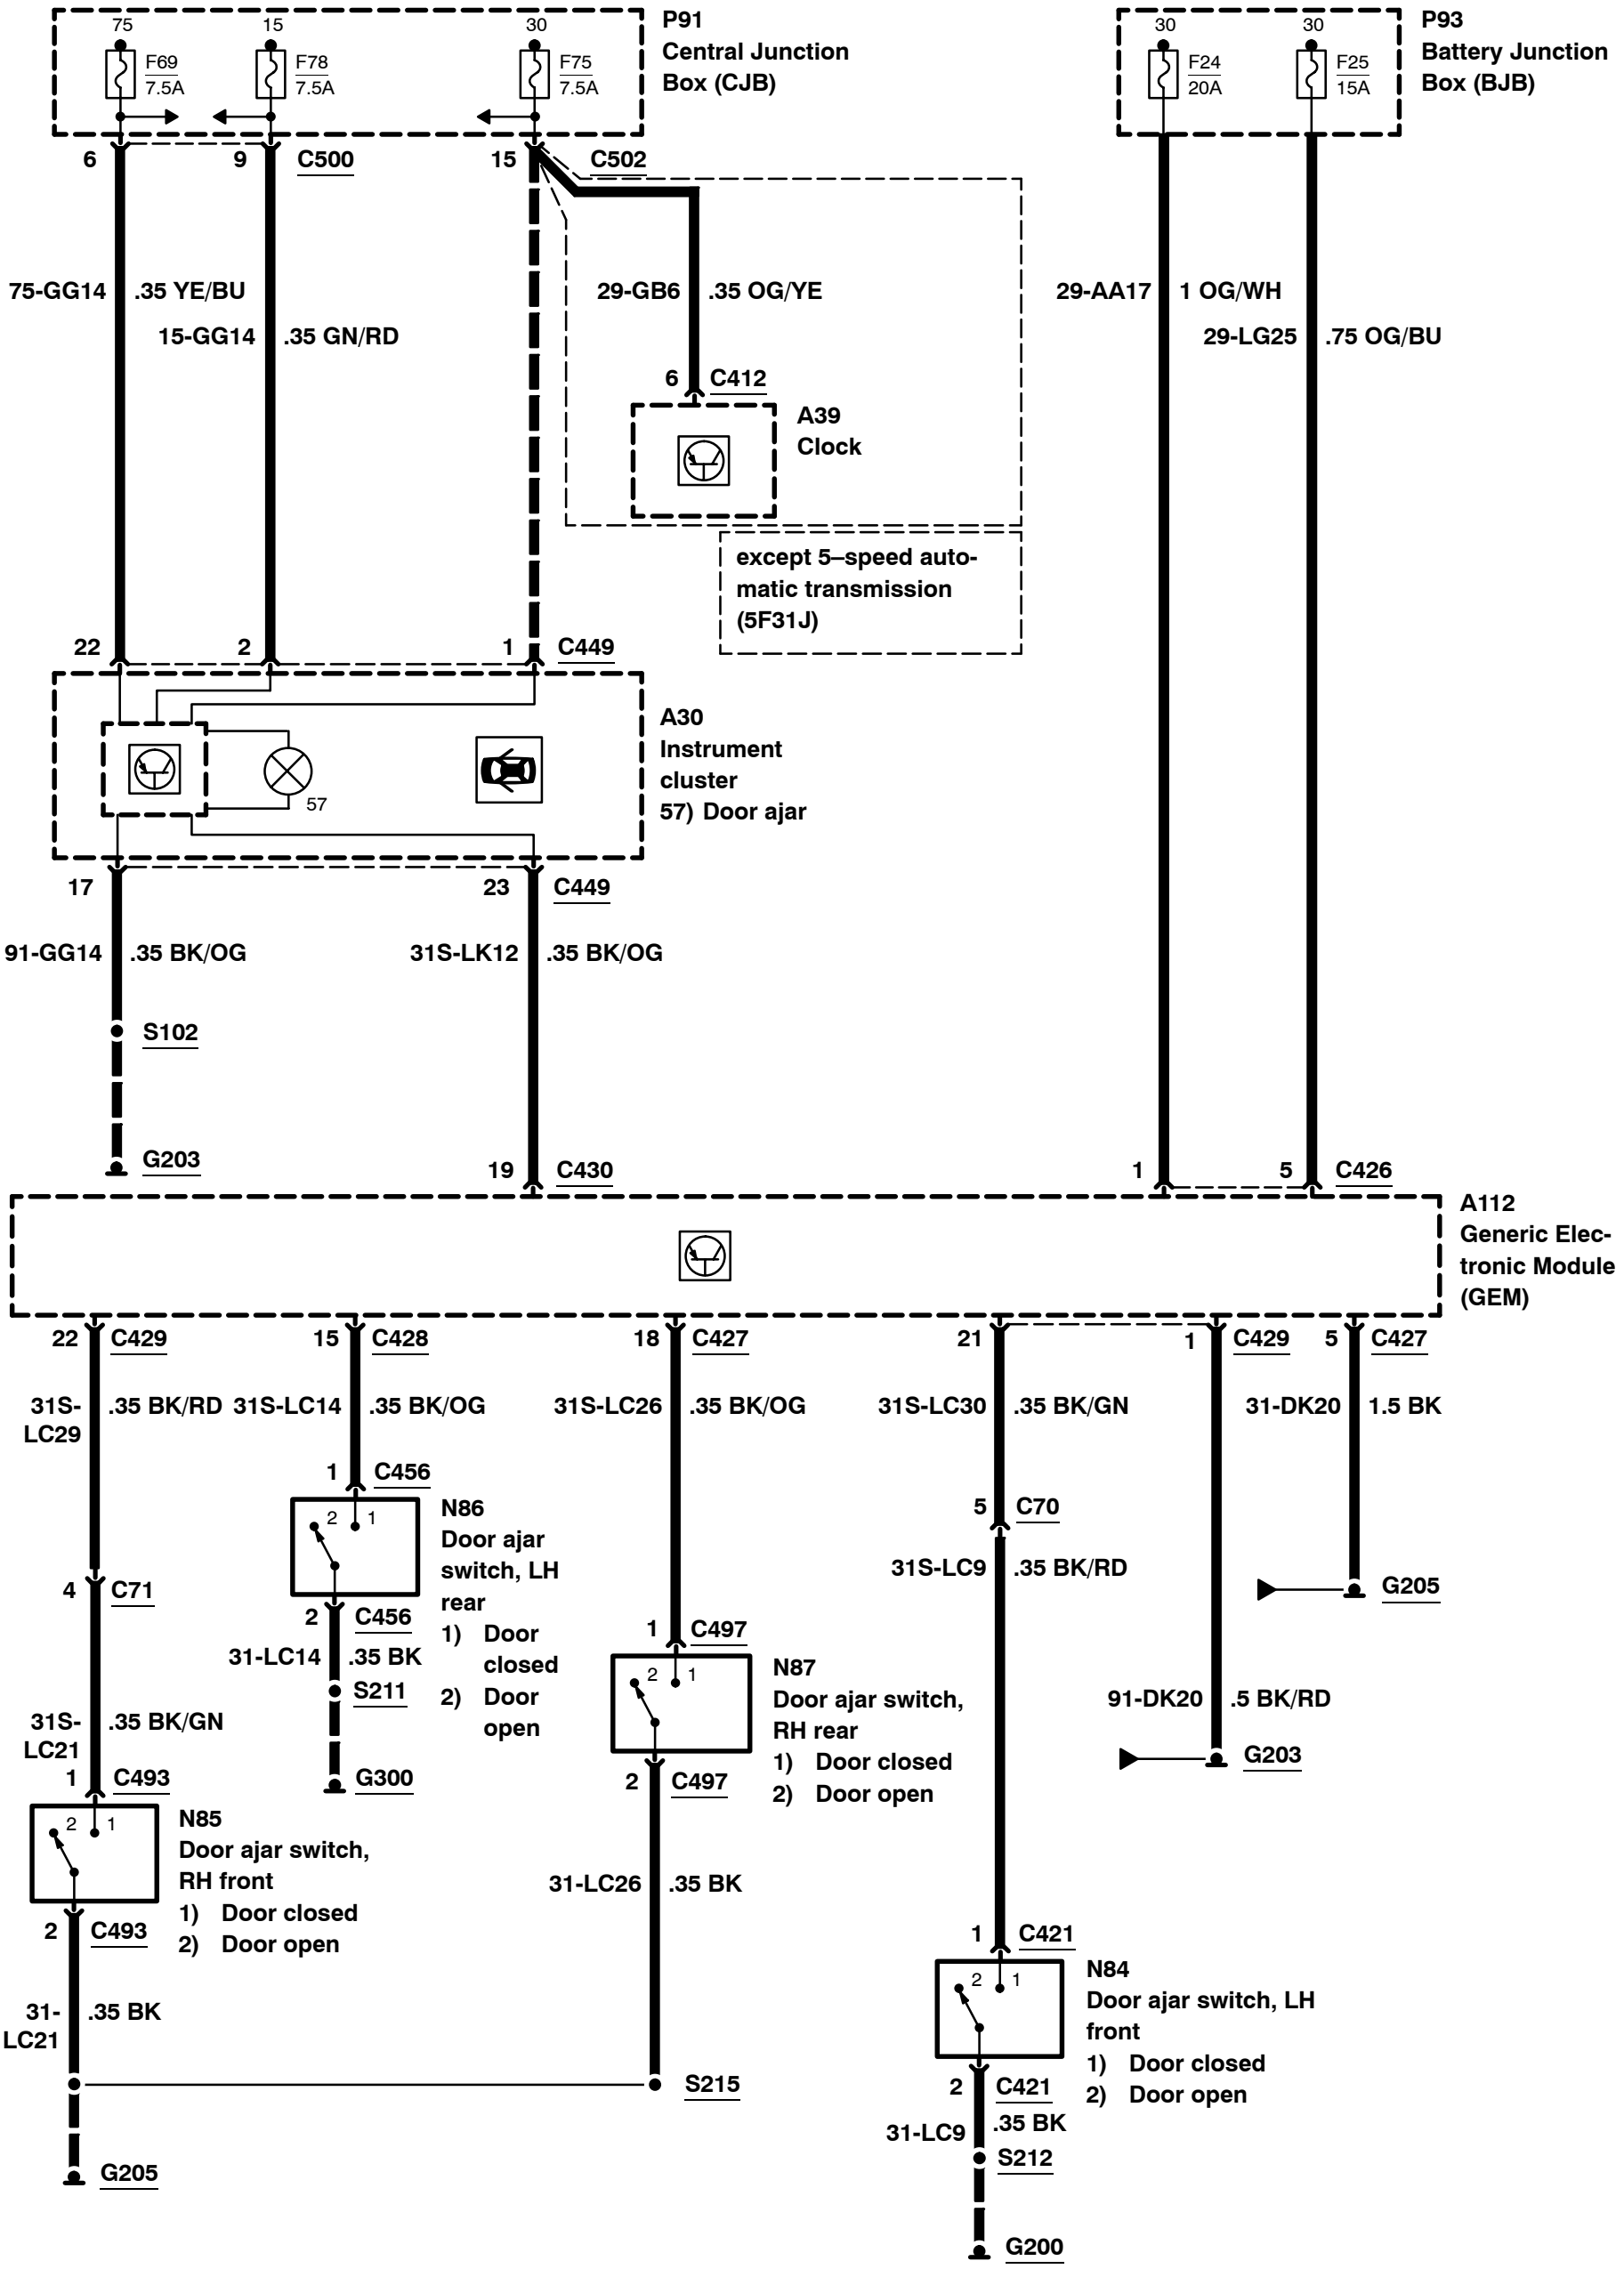


Warning Devices

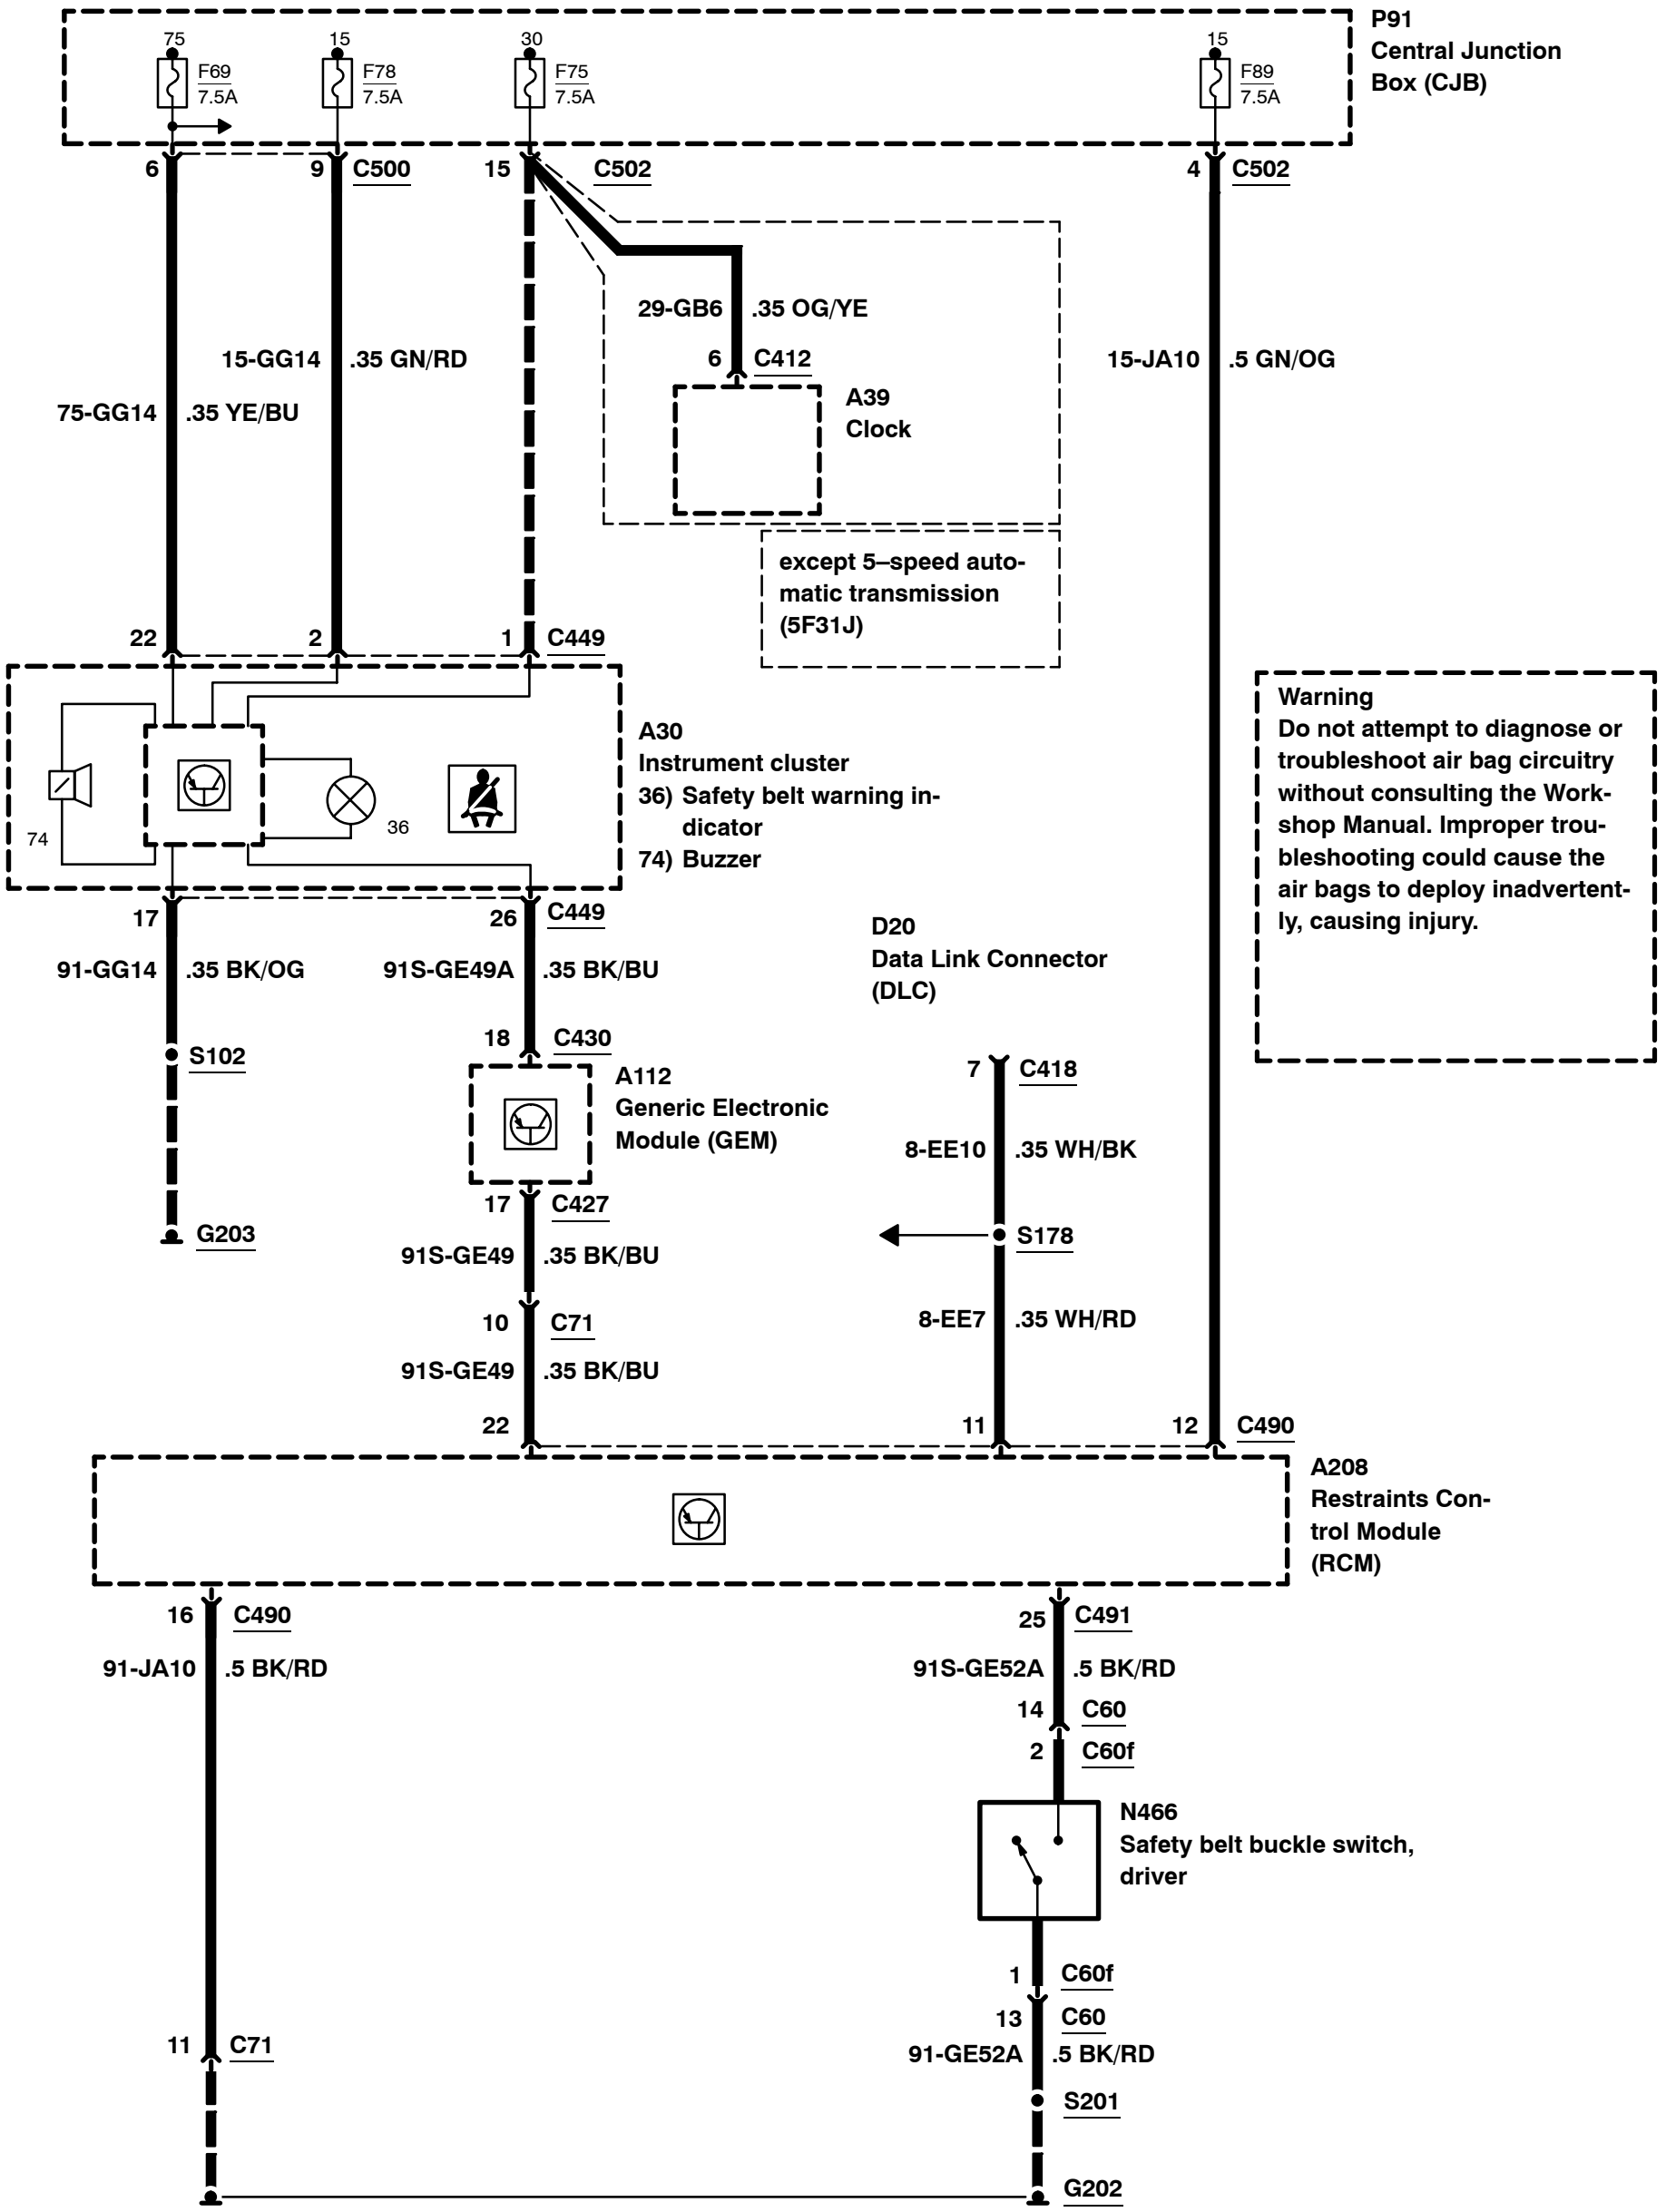


Warning Devices – Petrol engines

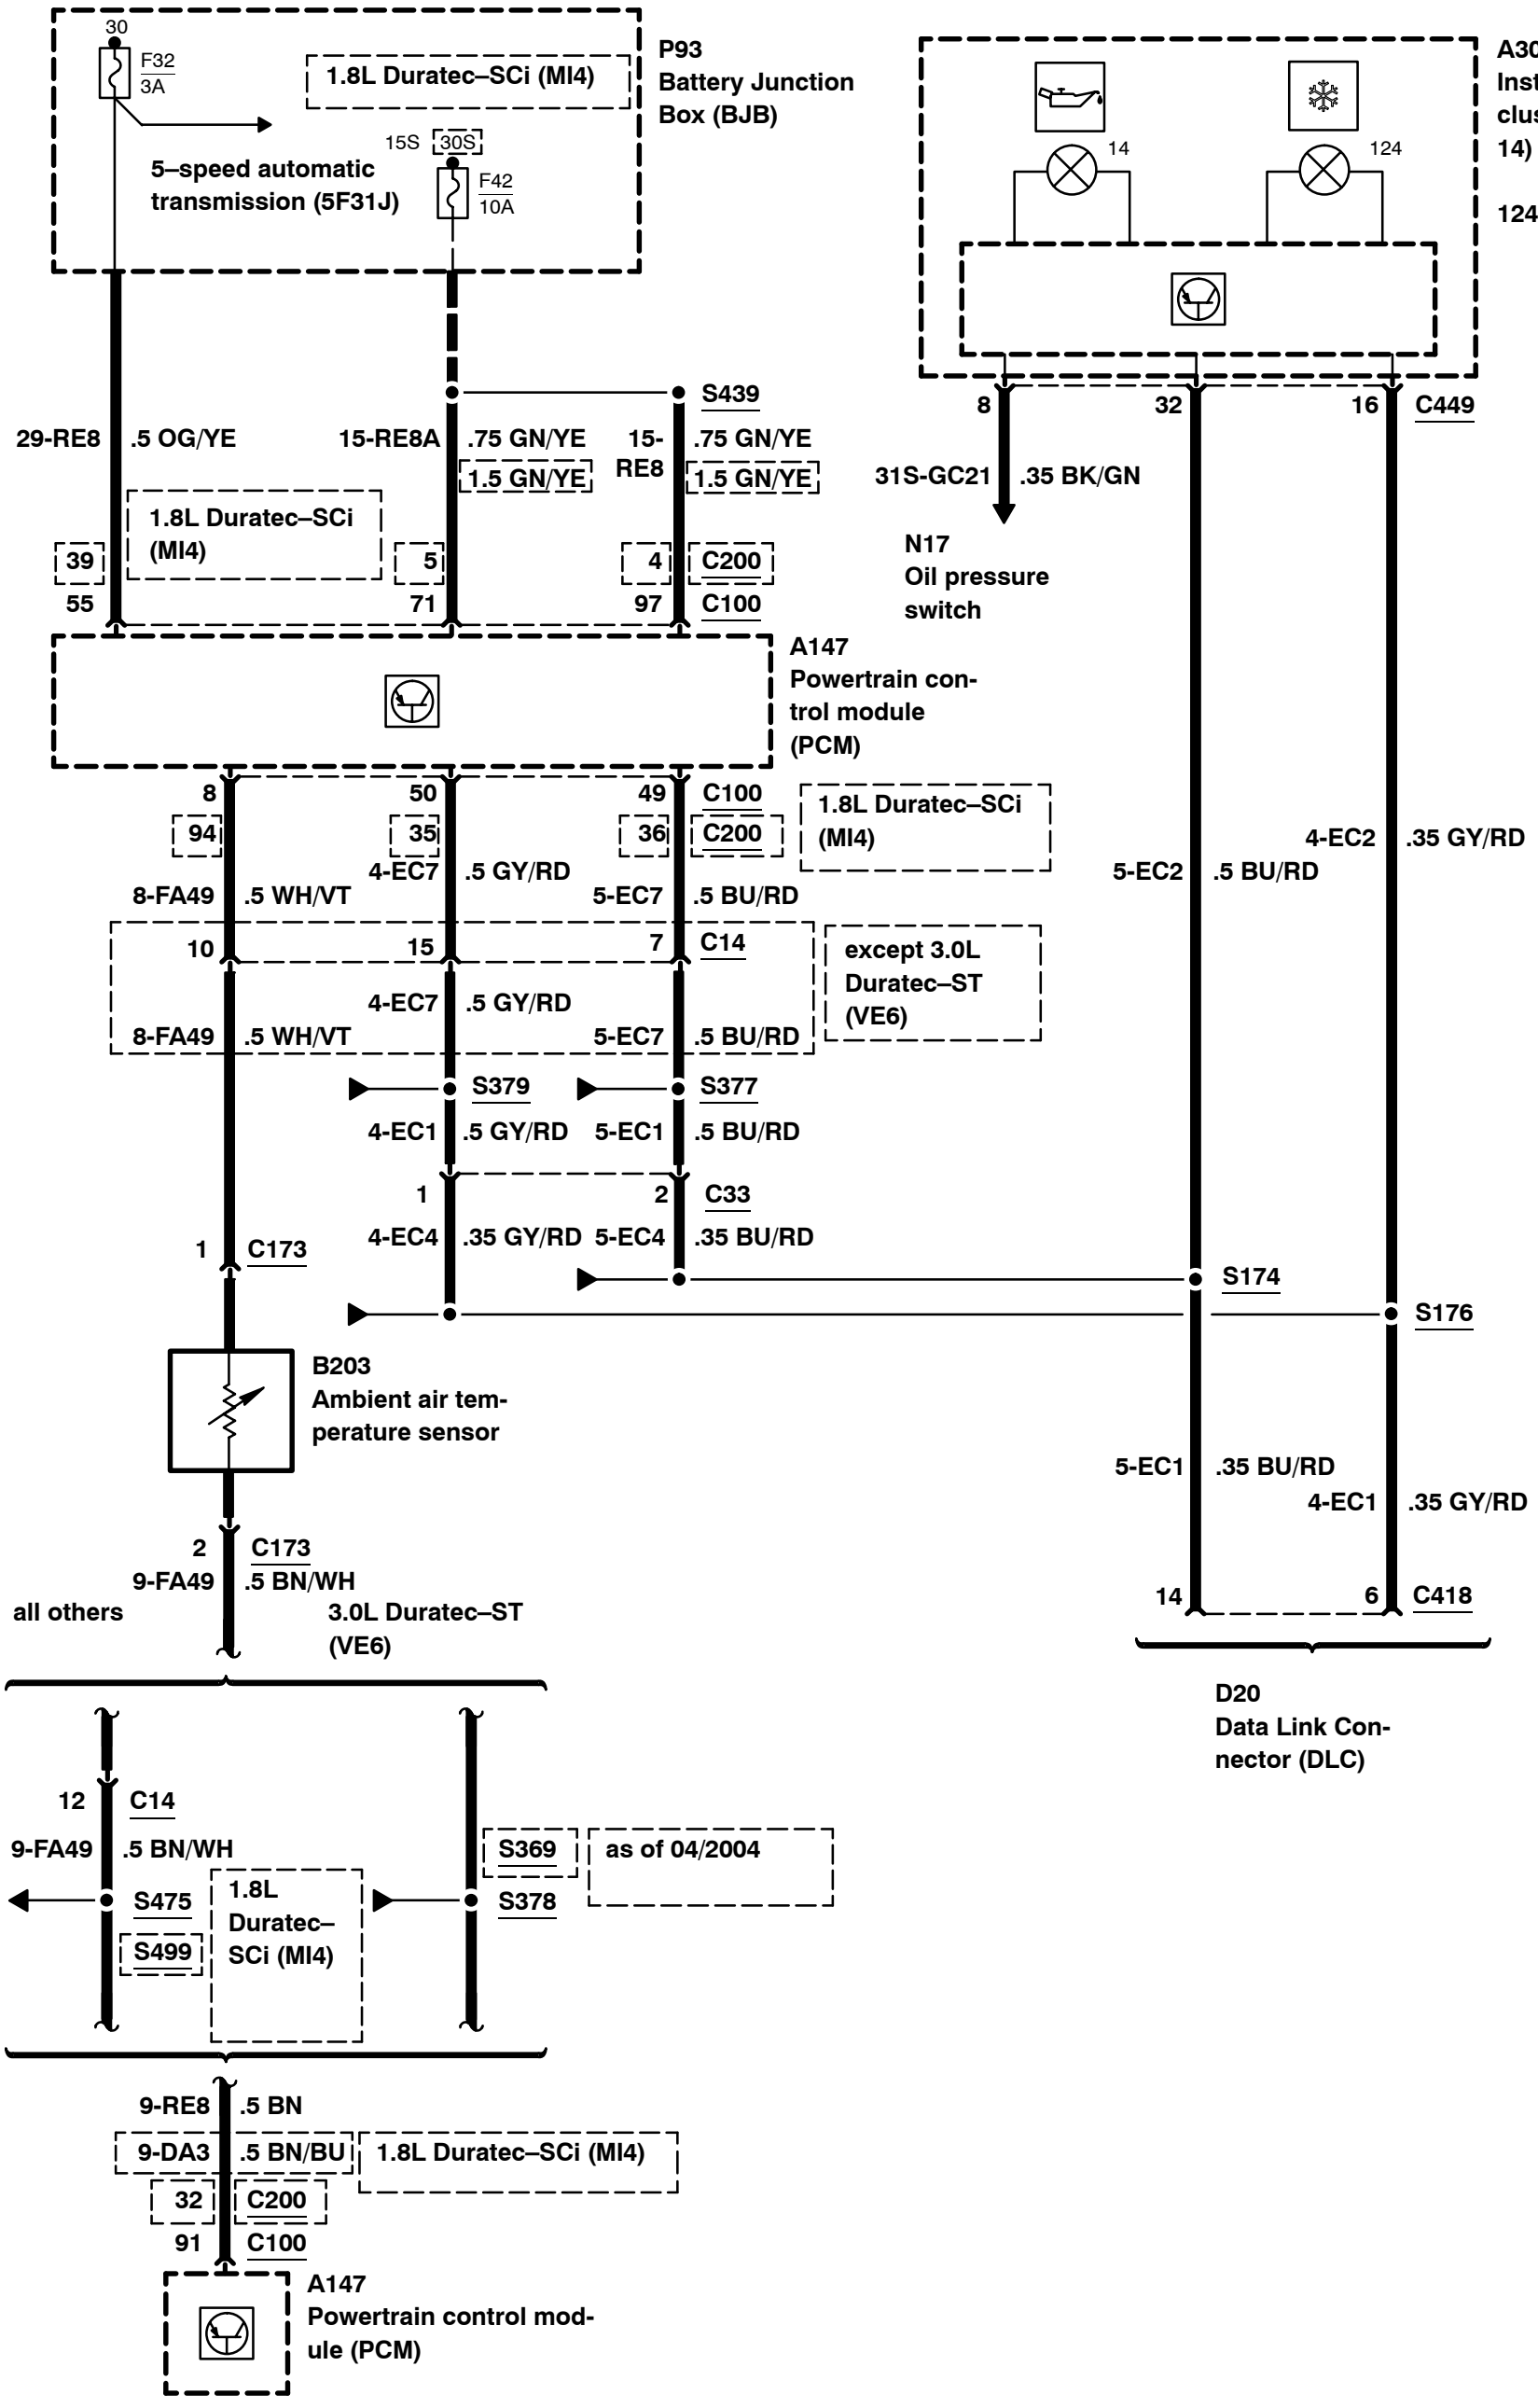


Warning Devices – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

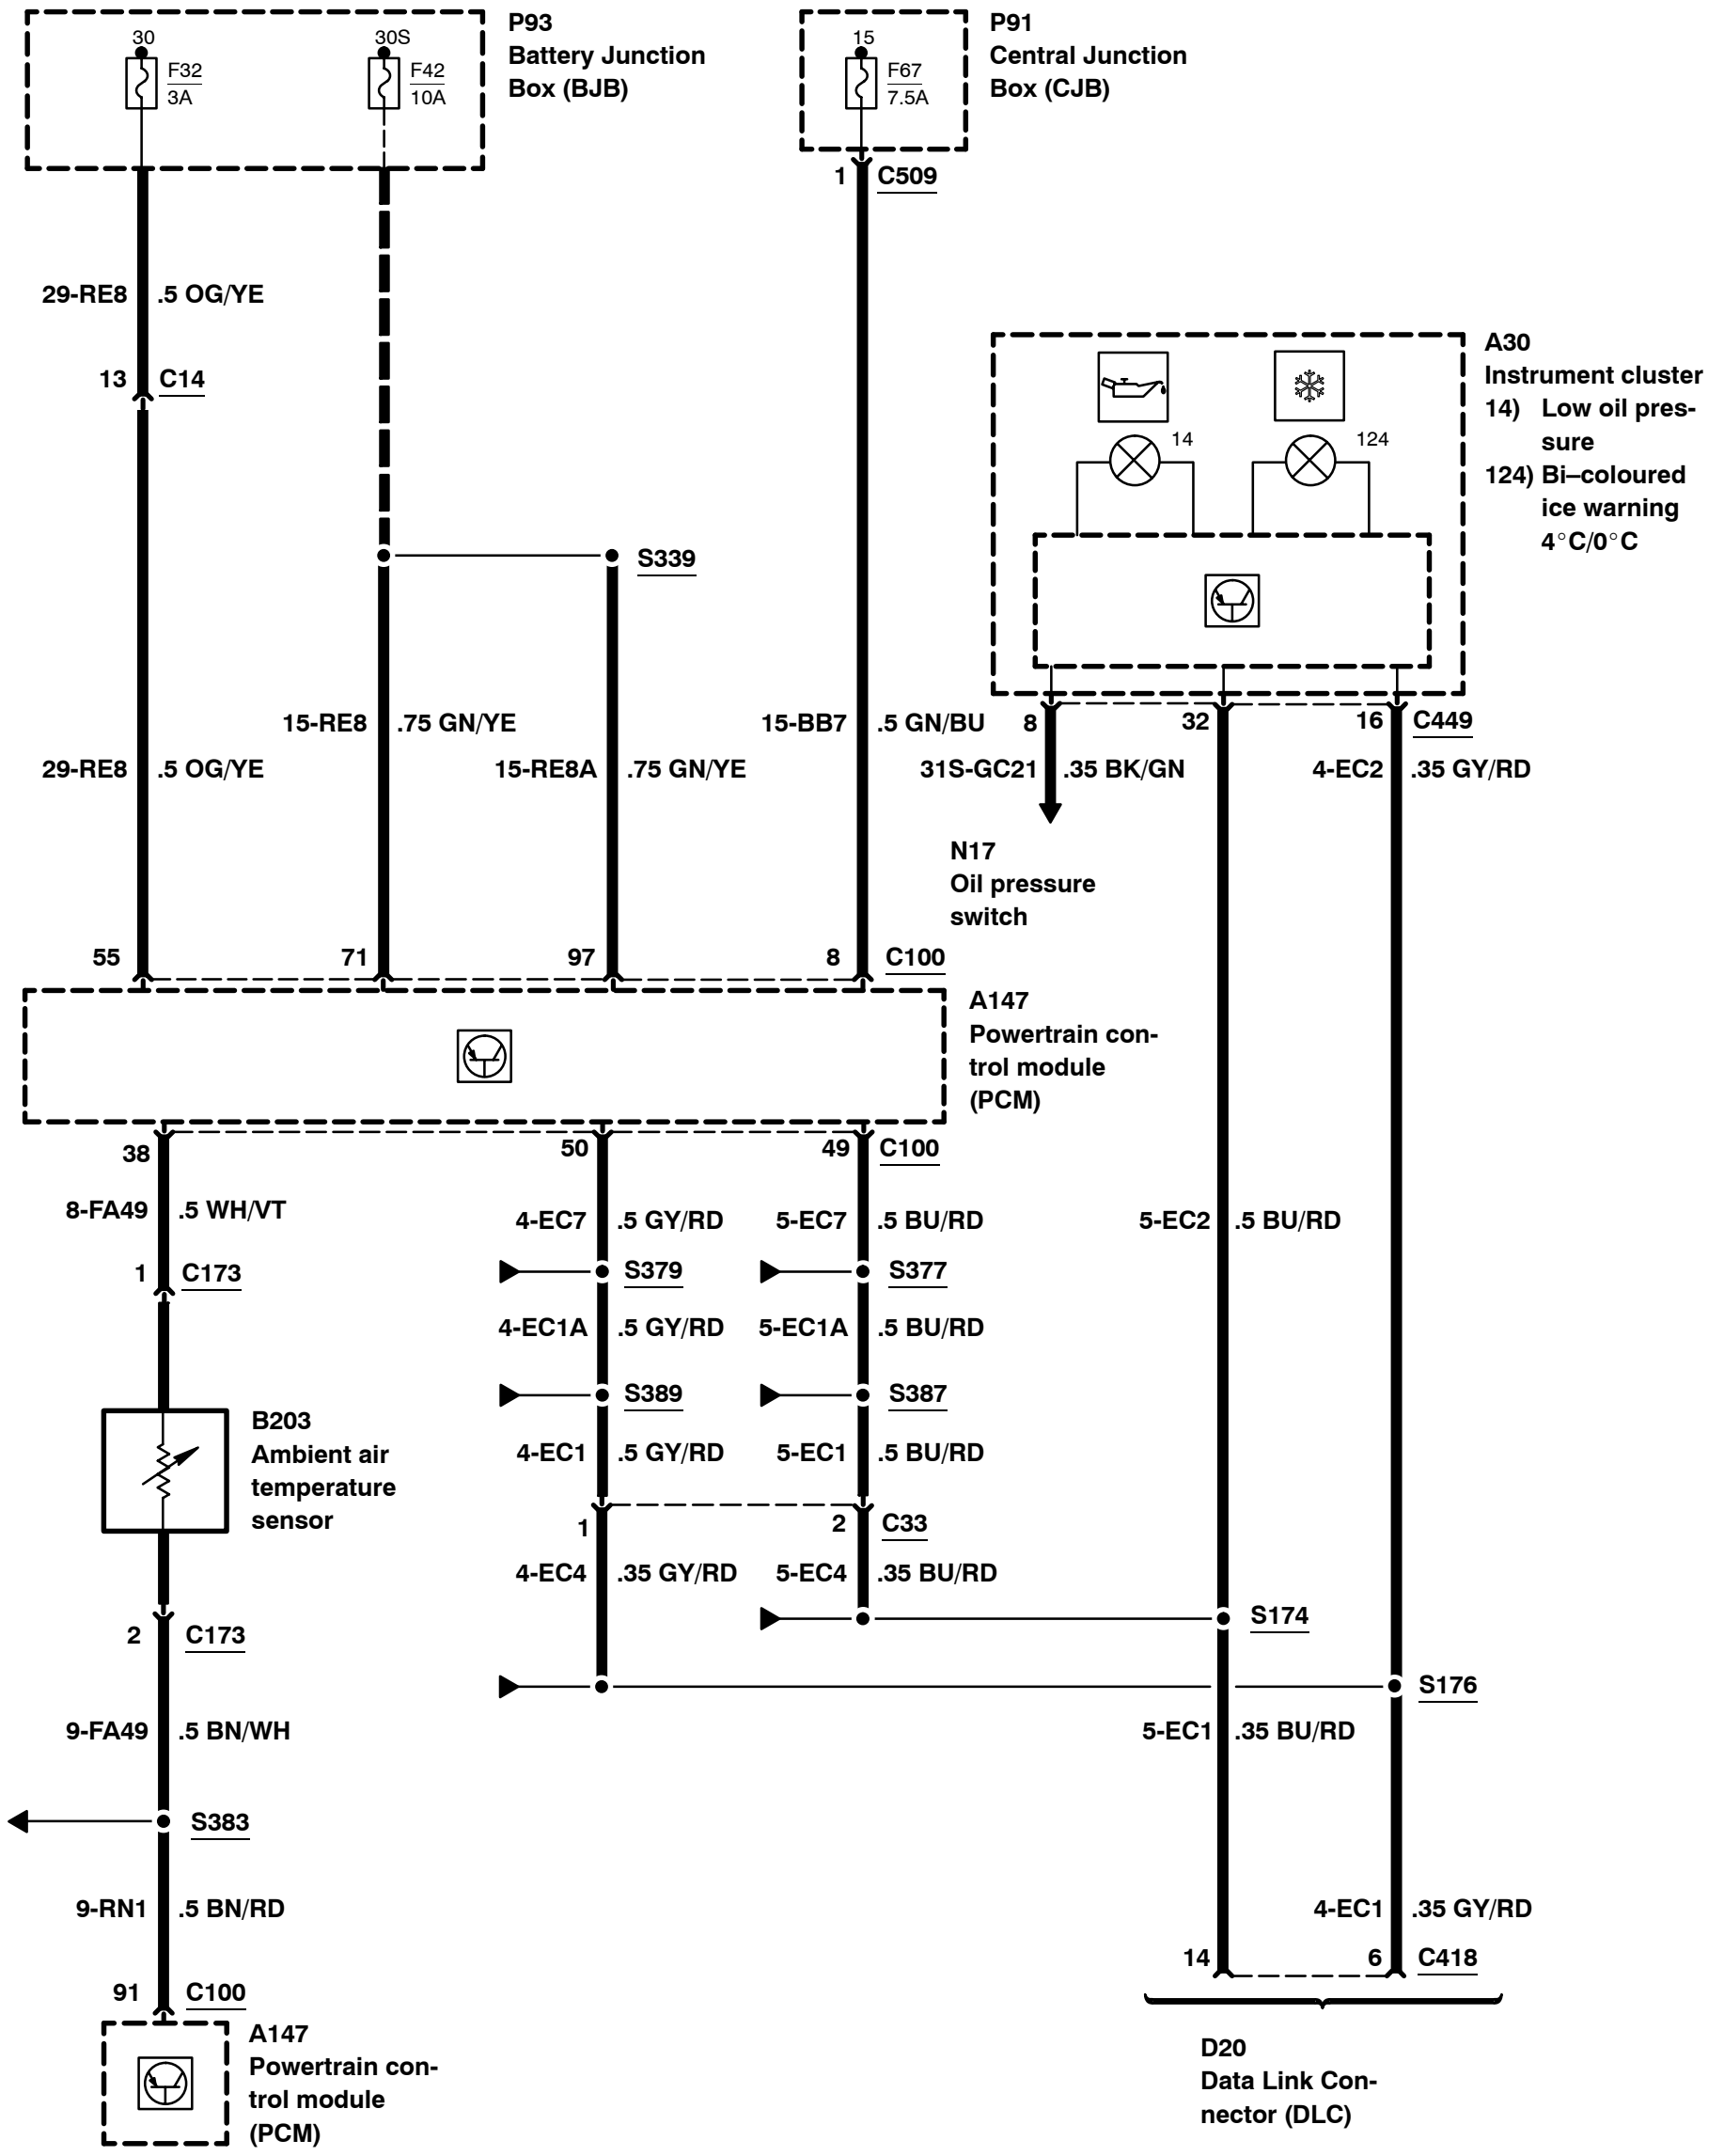


Warning Devices – 2.2L Duratorq–TDCi (Puma) Diesel

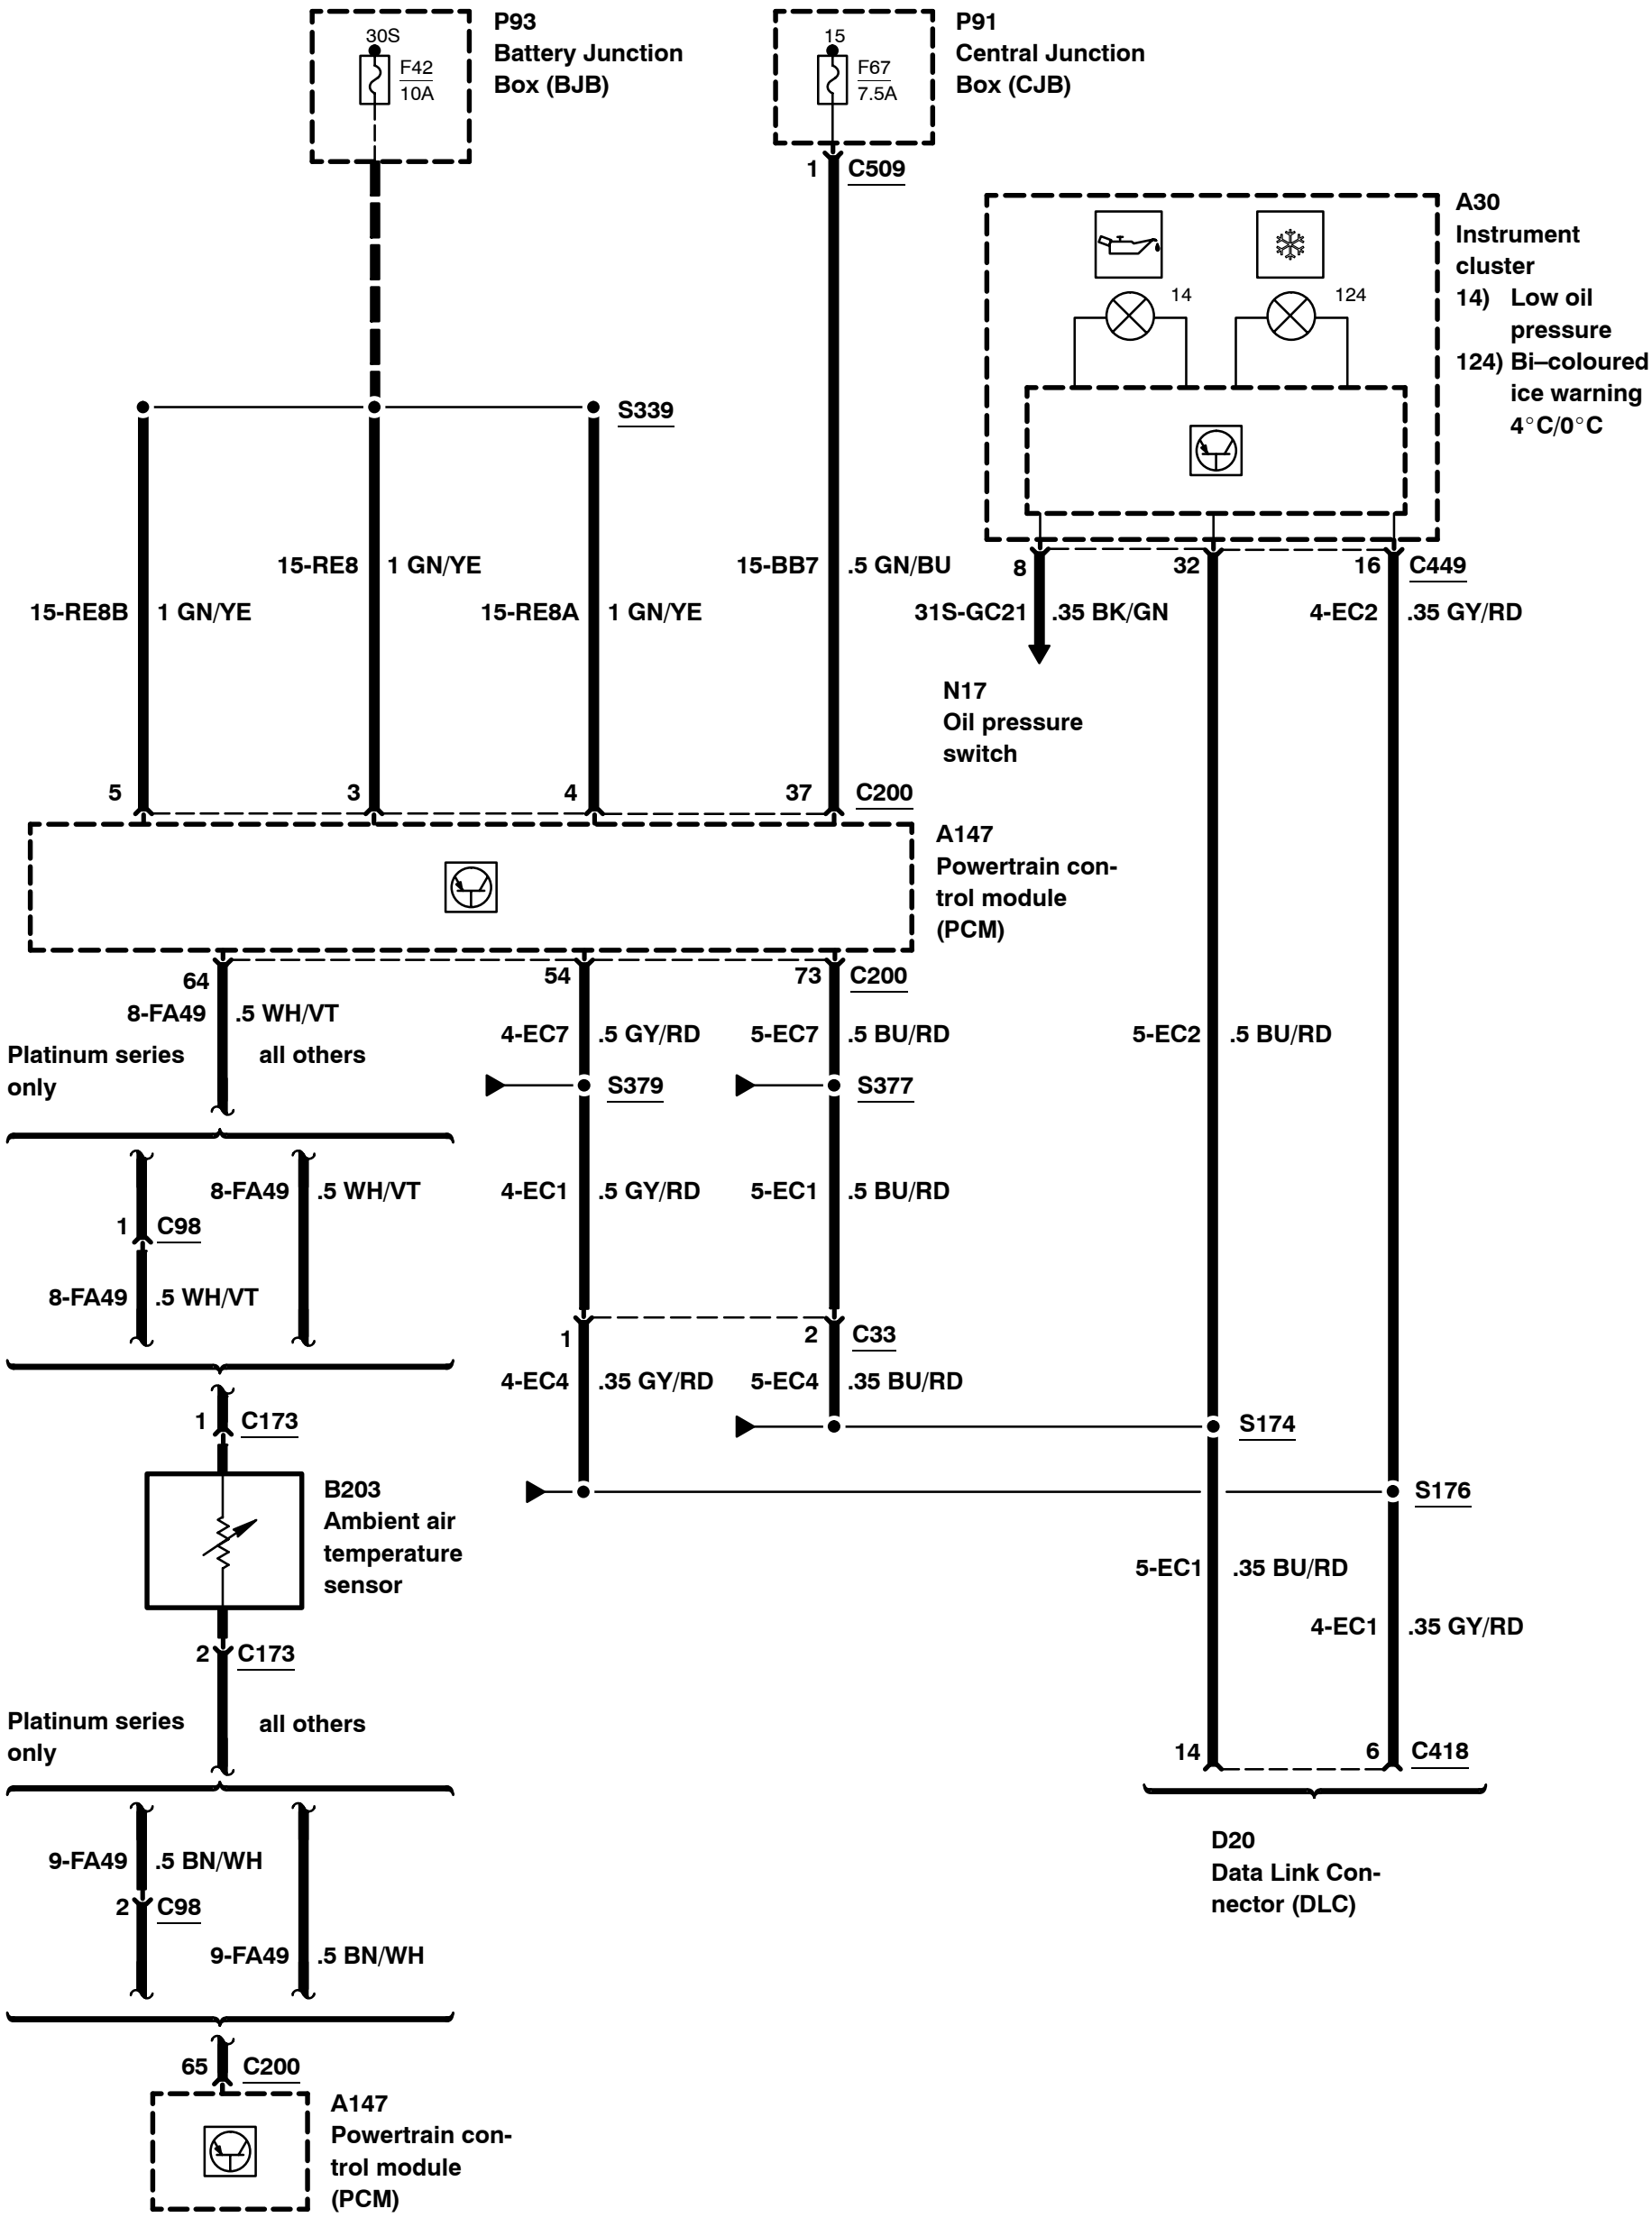


Warning Devices – 2.0L Duratorq–TDCi (Puma) Diesel

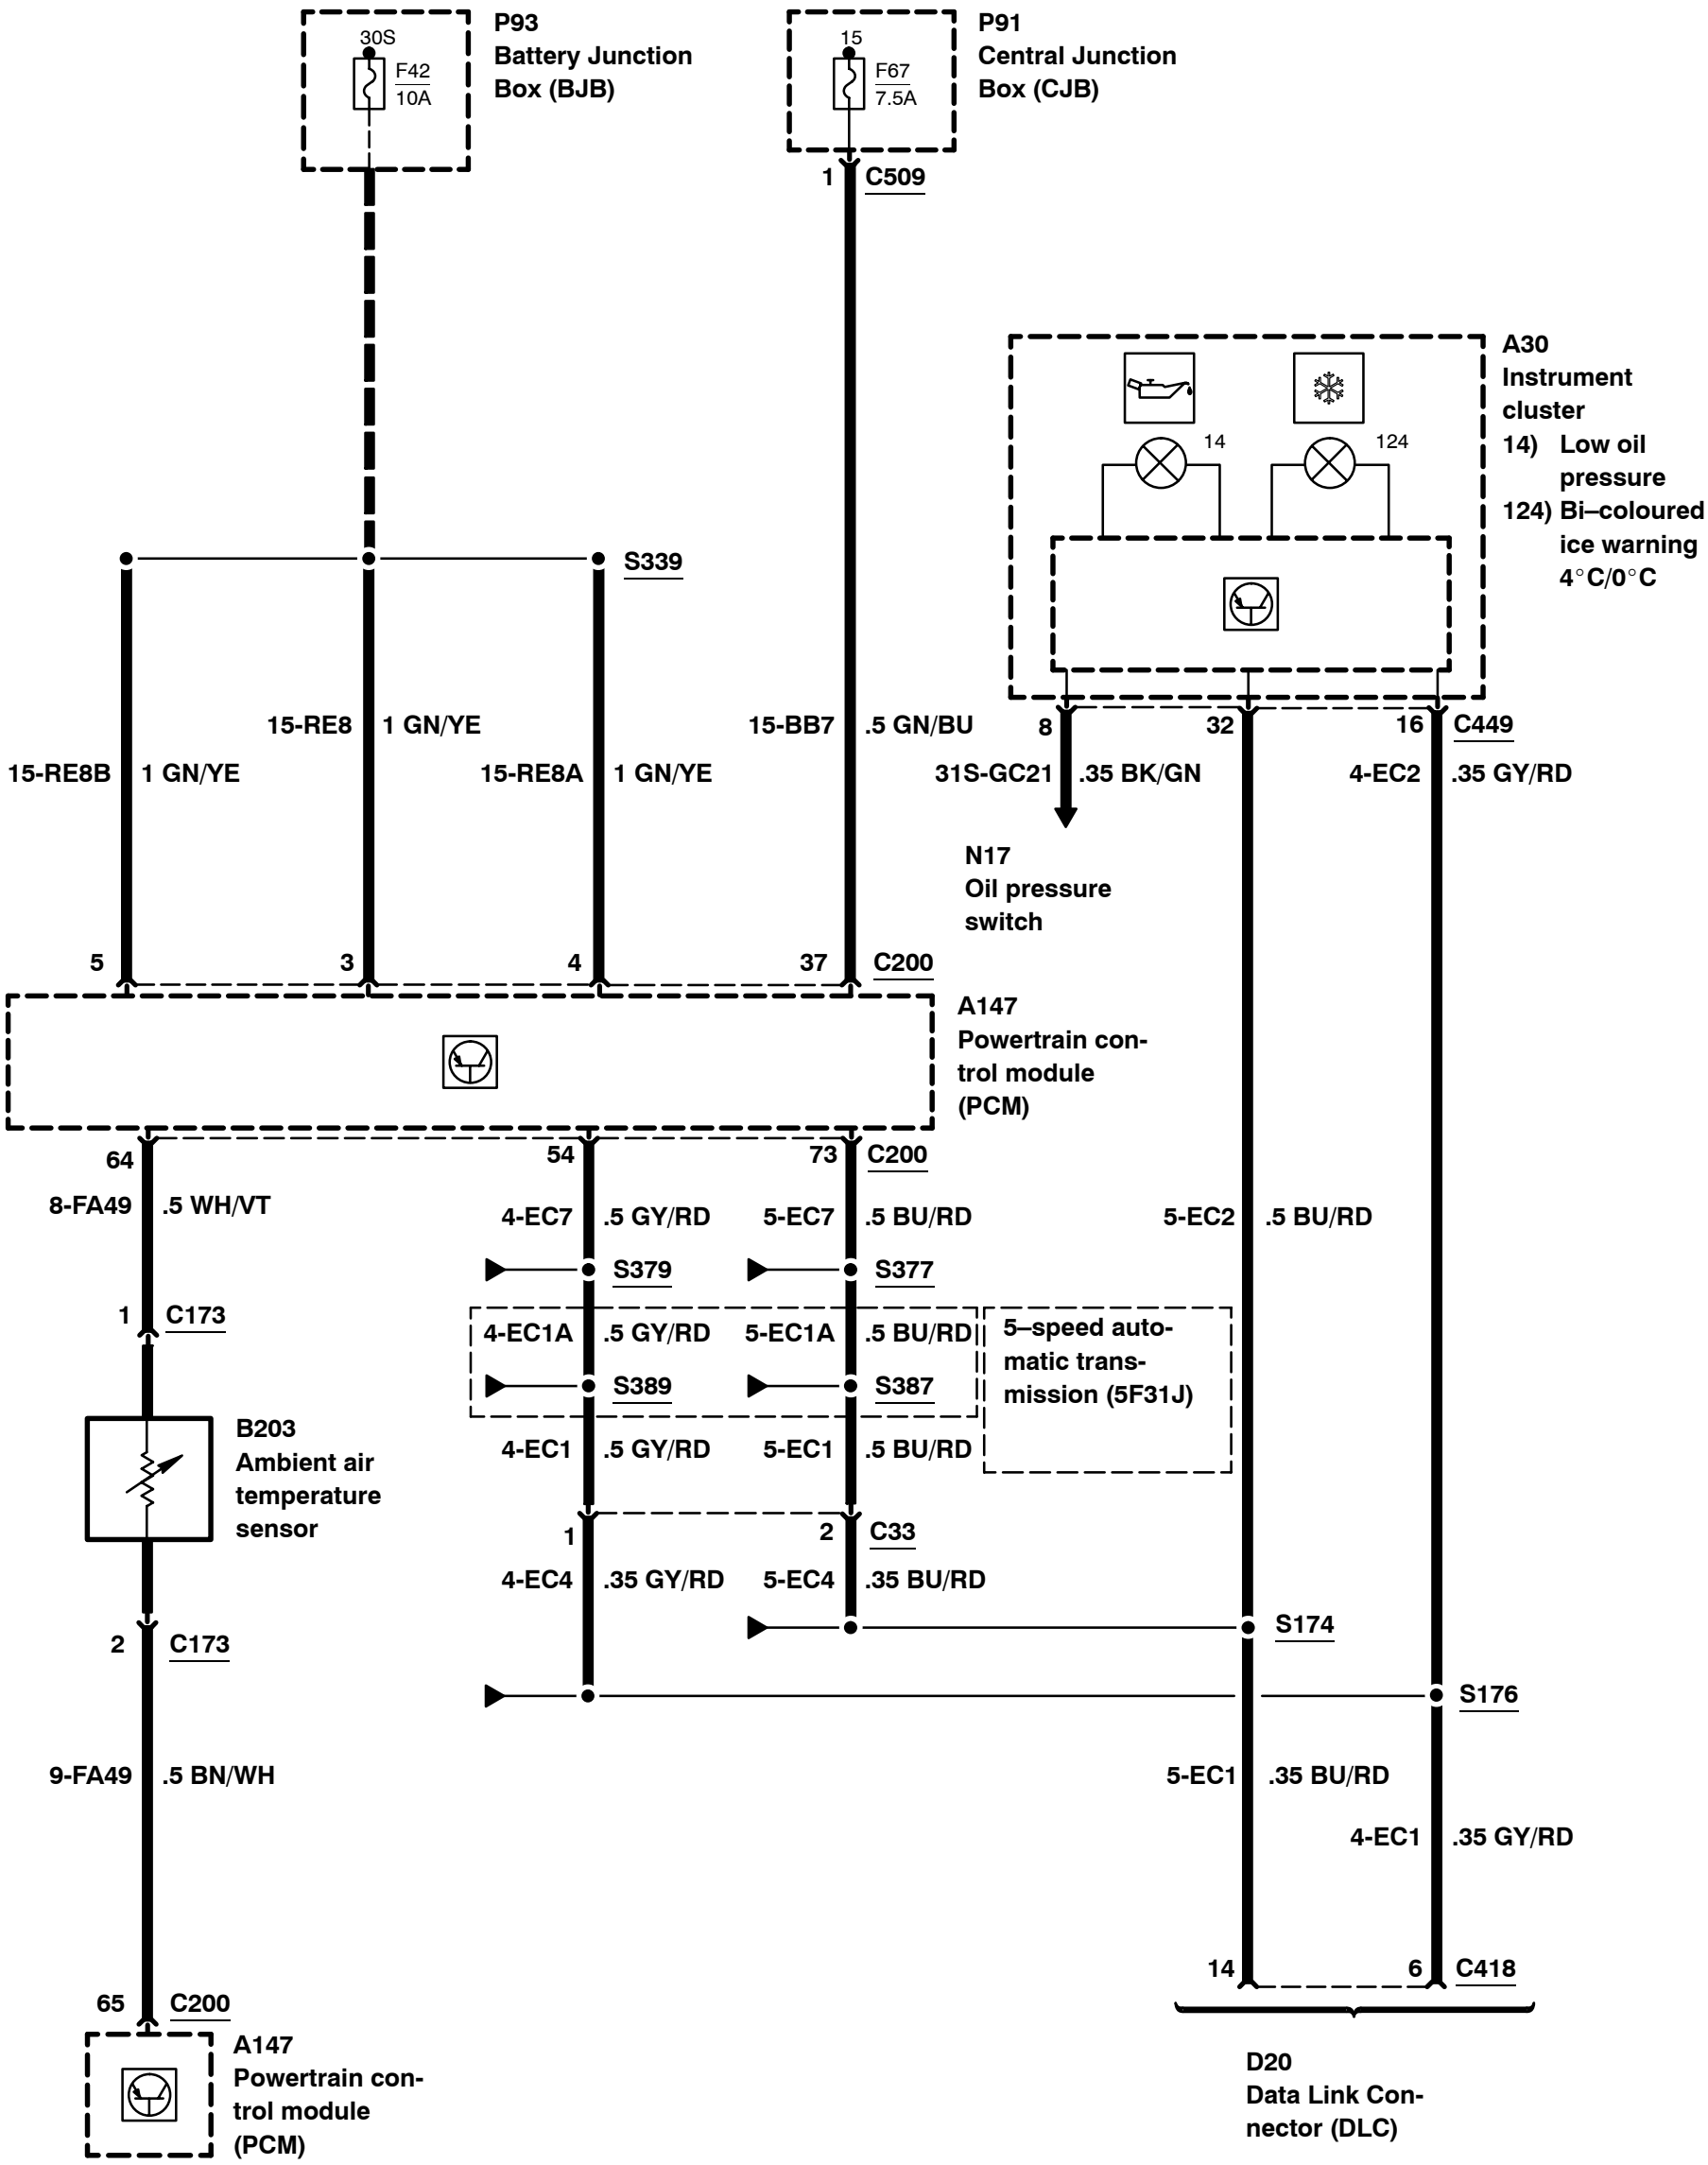


Parking Aid – Valeo, 4–door model/5–door model, before 01/2004

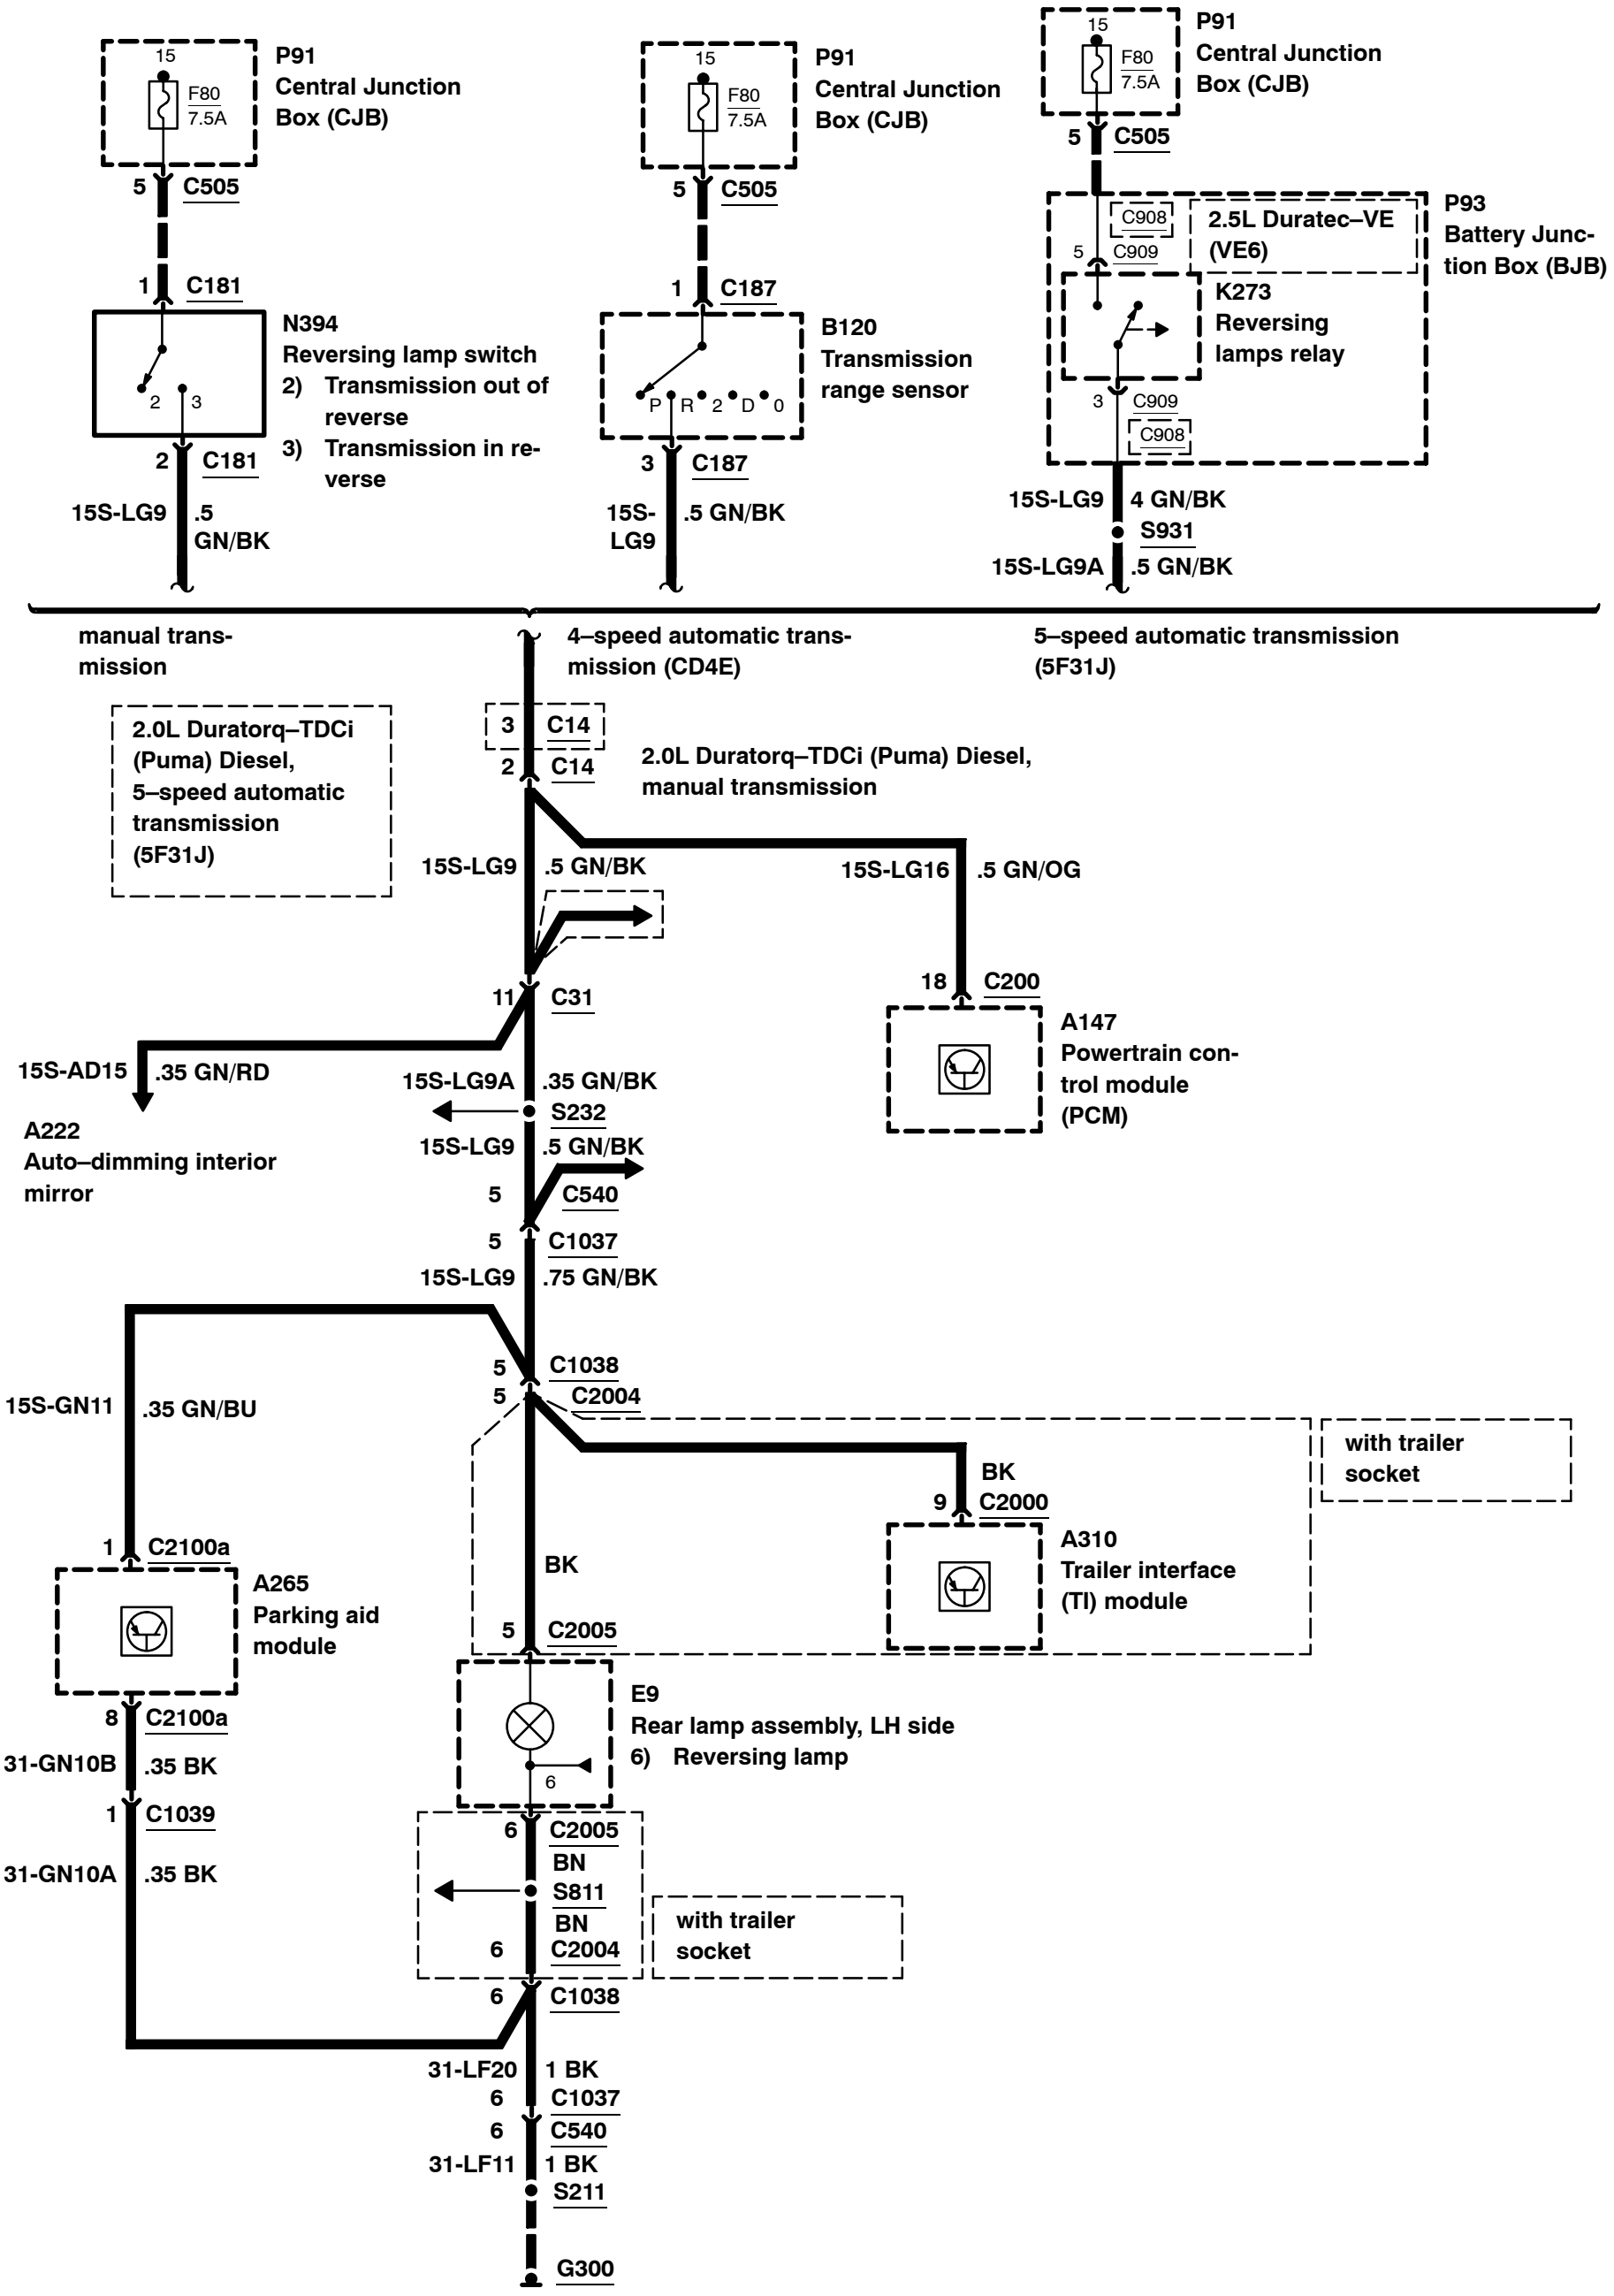


Parking Aid – Valeo, 4–door model/5–door model, as of 01/2004

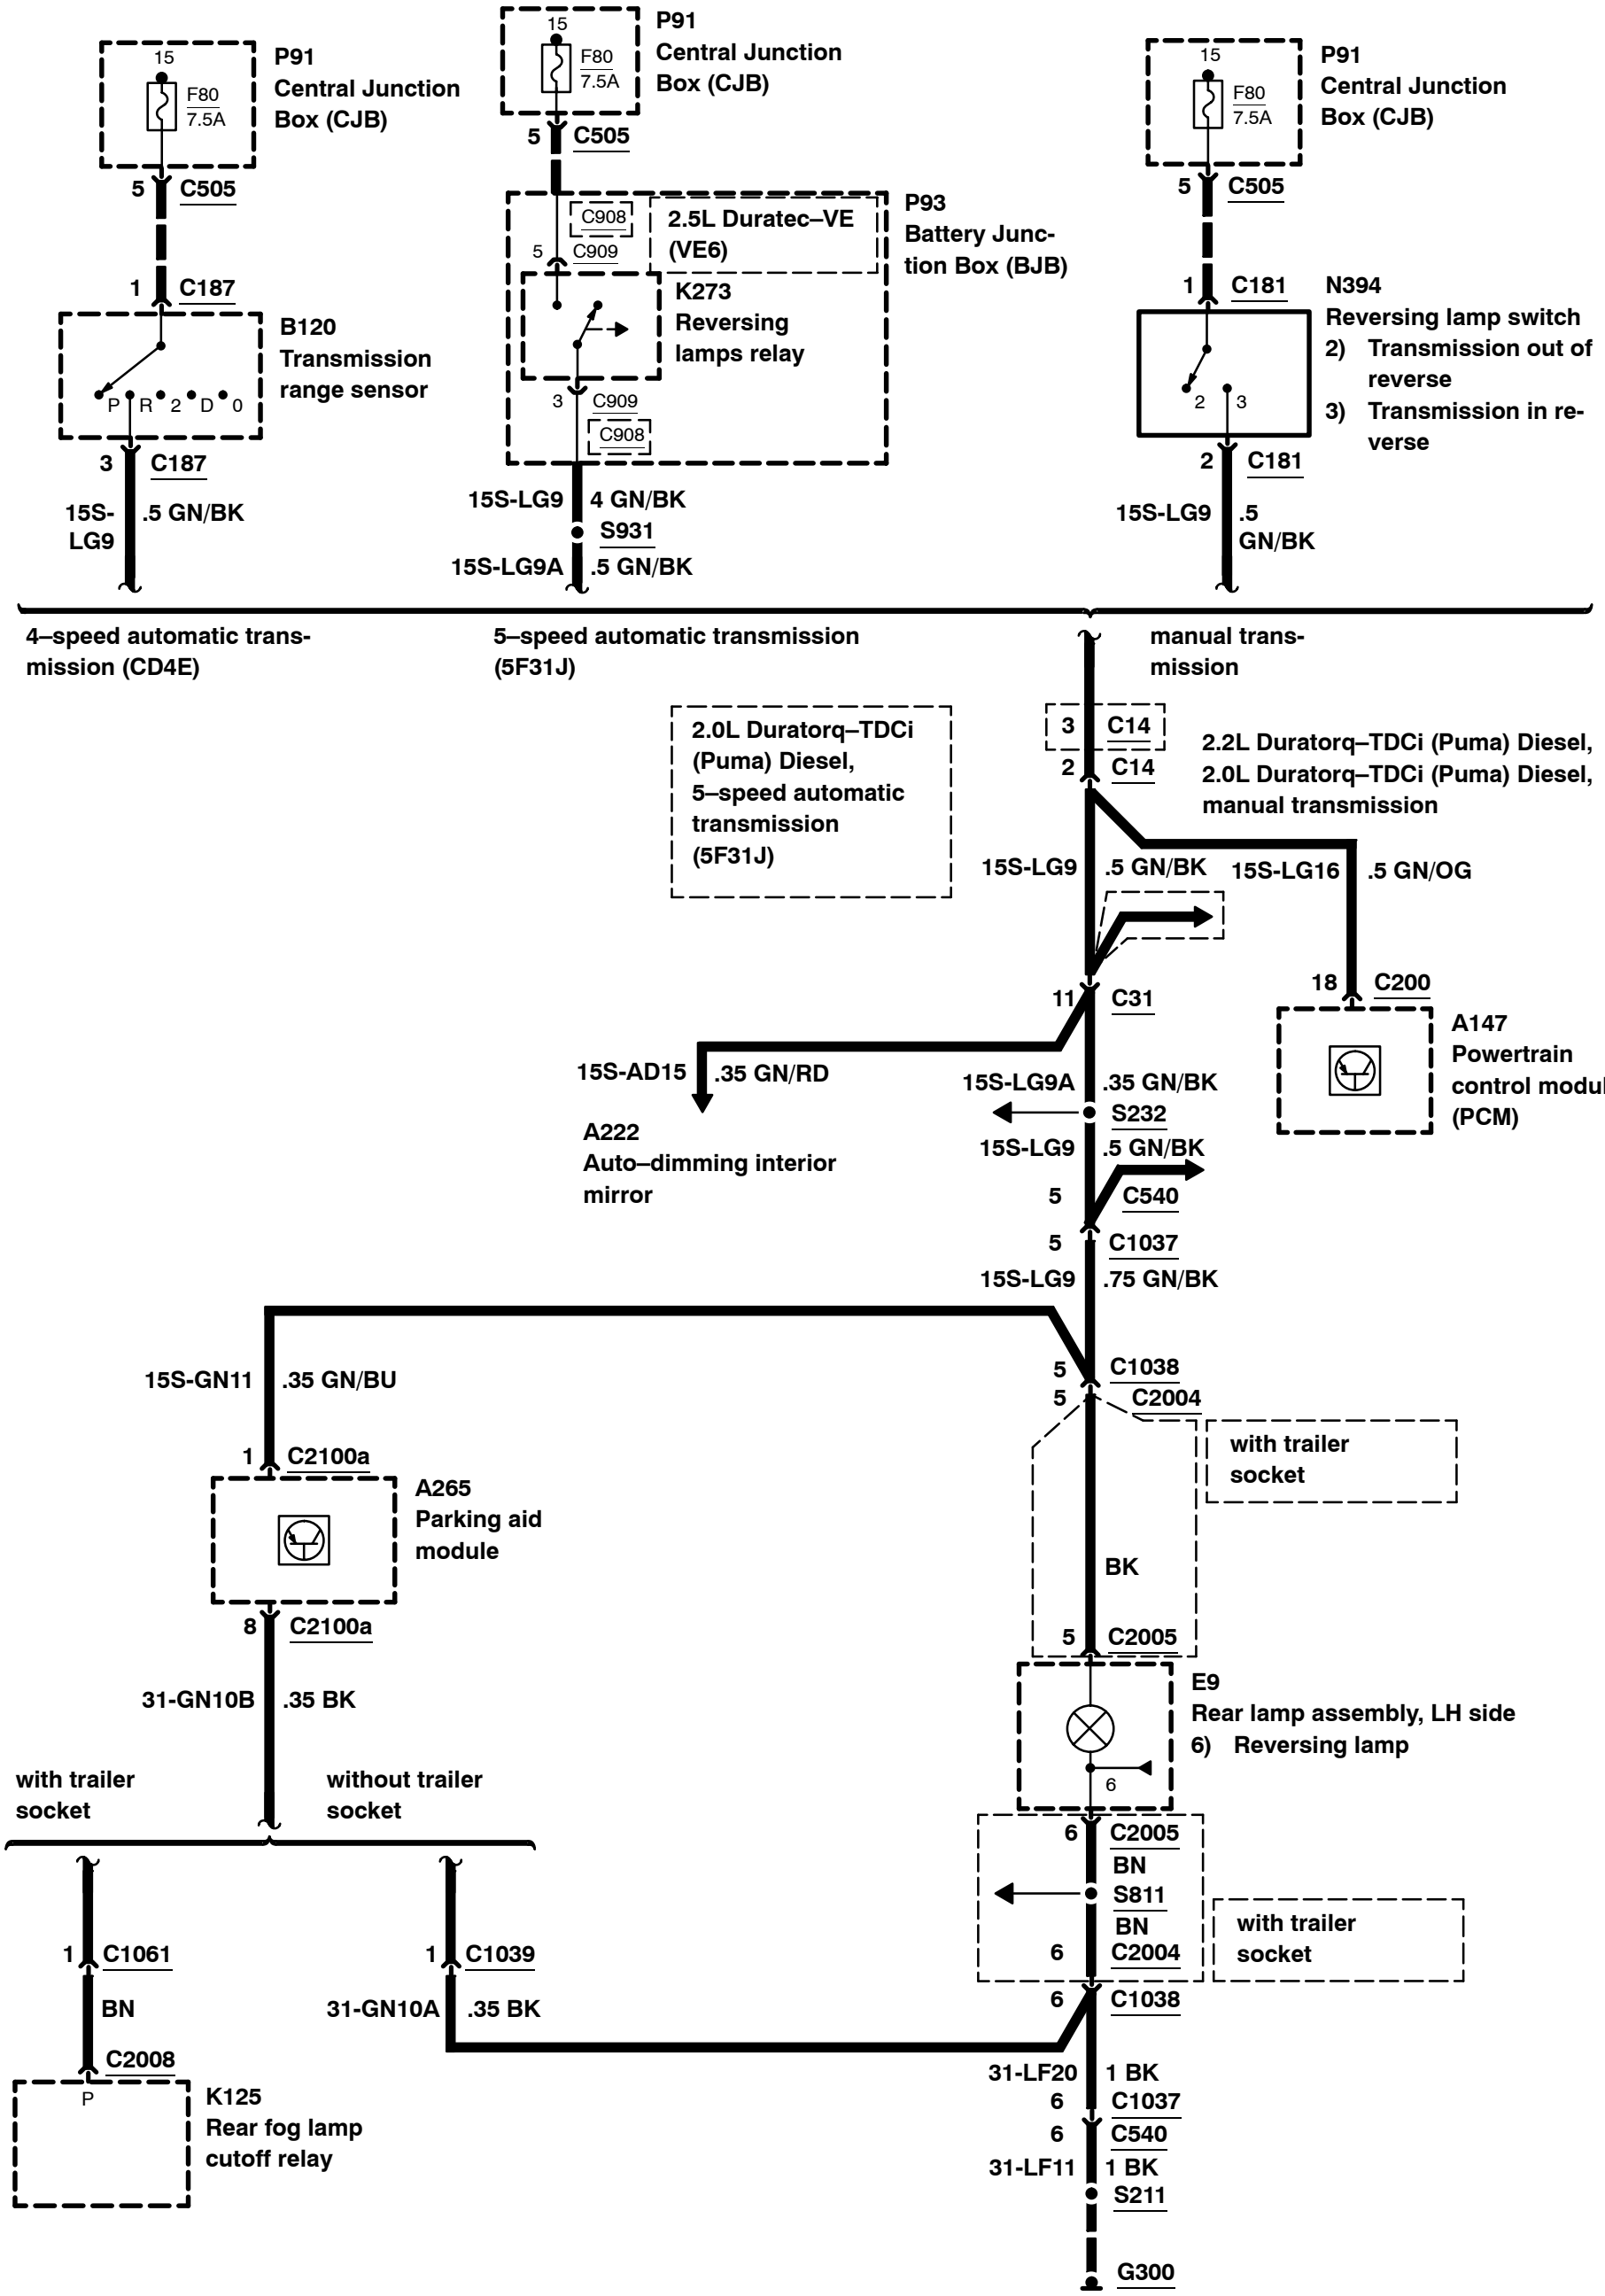


Parking Aid – Valeo, wagon, before 01/2004

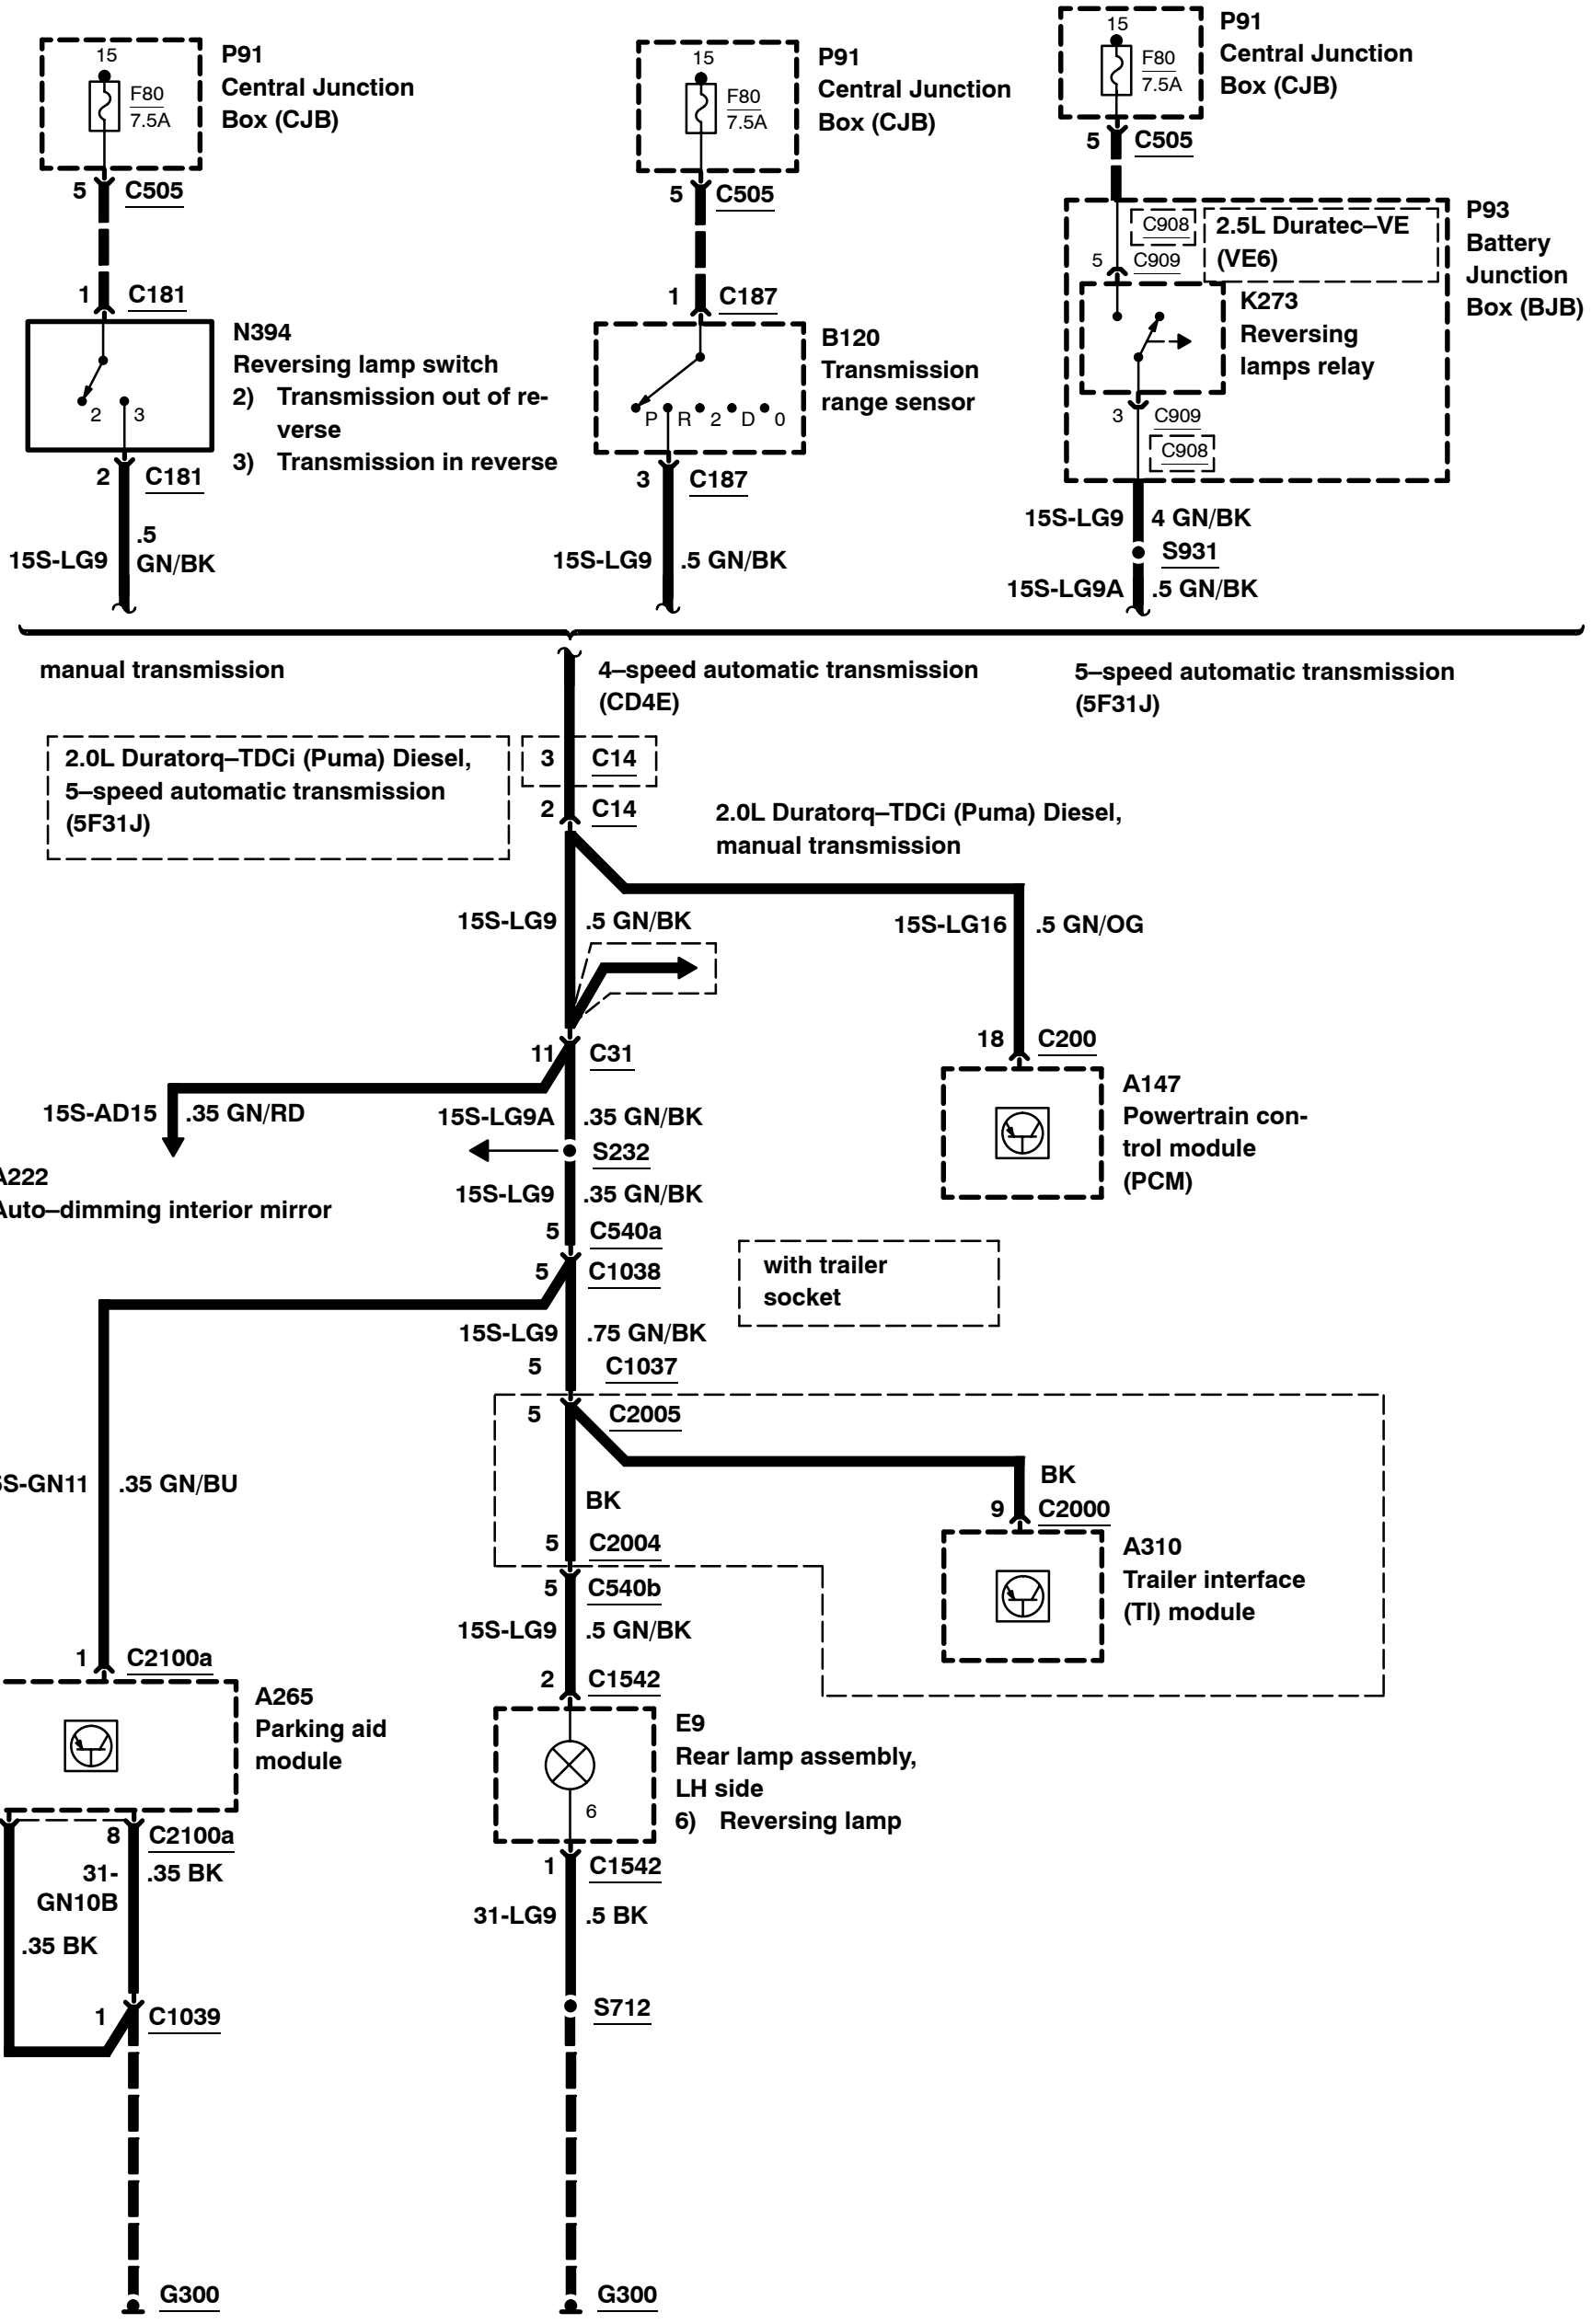


Parking Aid – Valeo, wagon, as of 01/2004

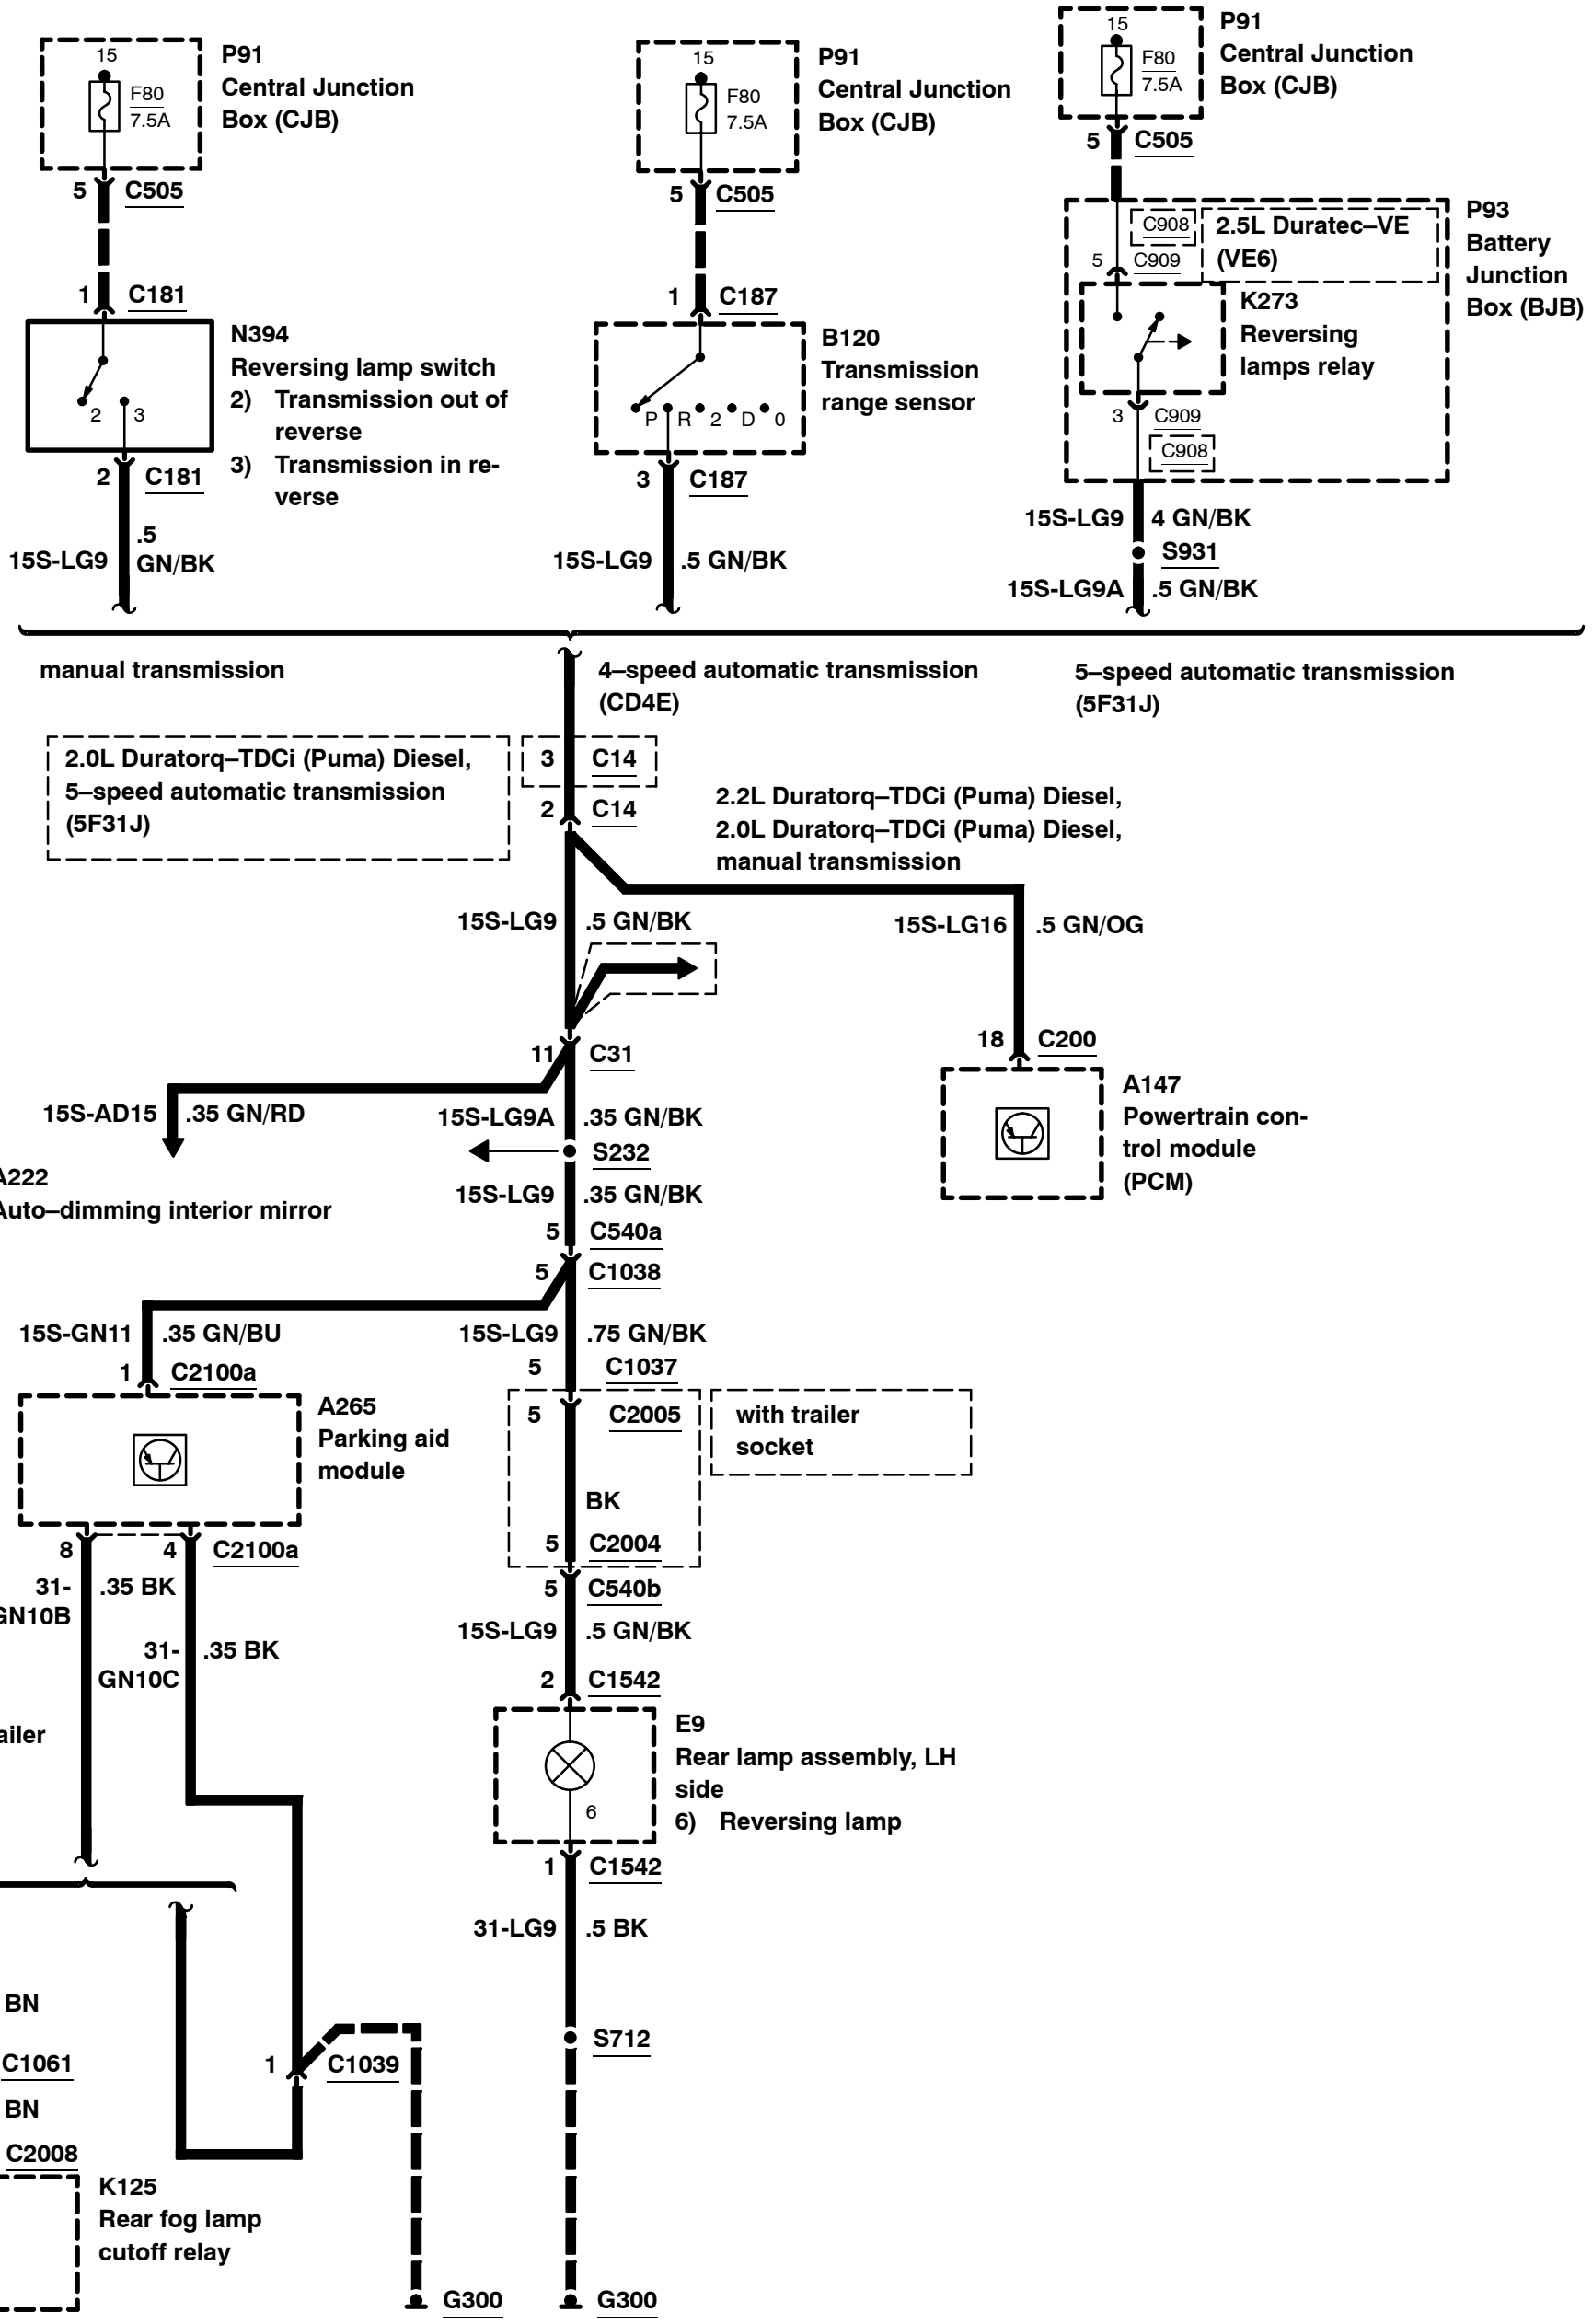


Parking Aid – Valeo

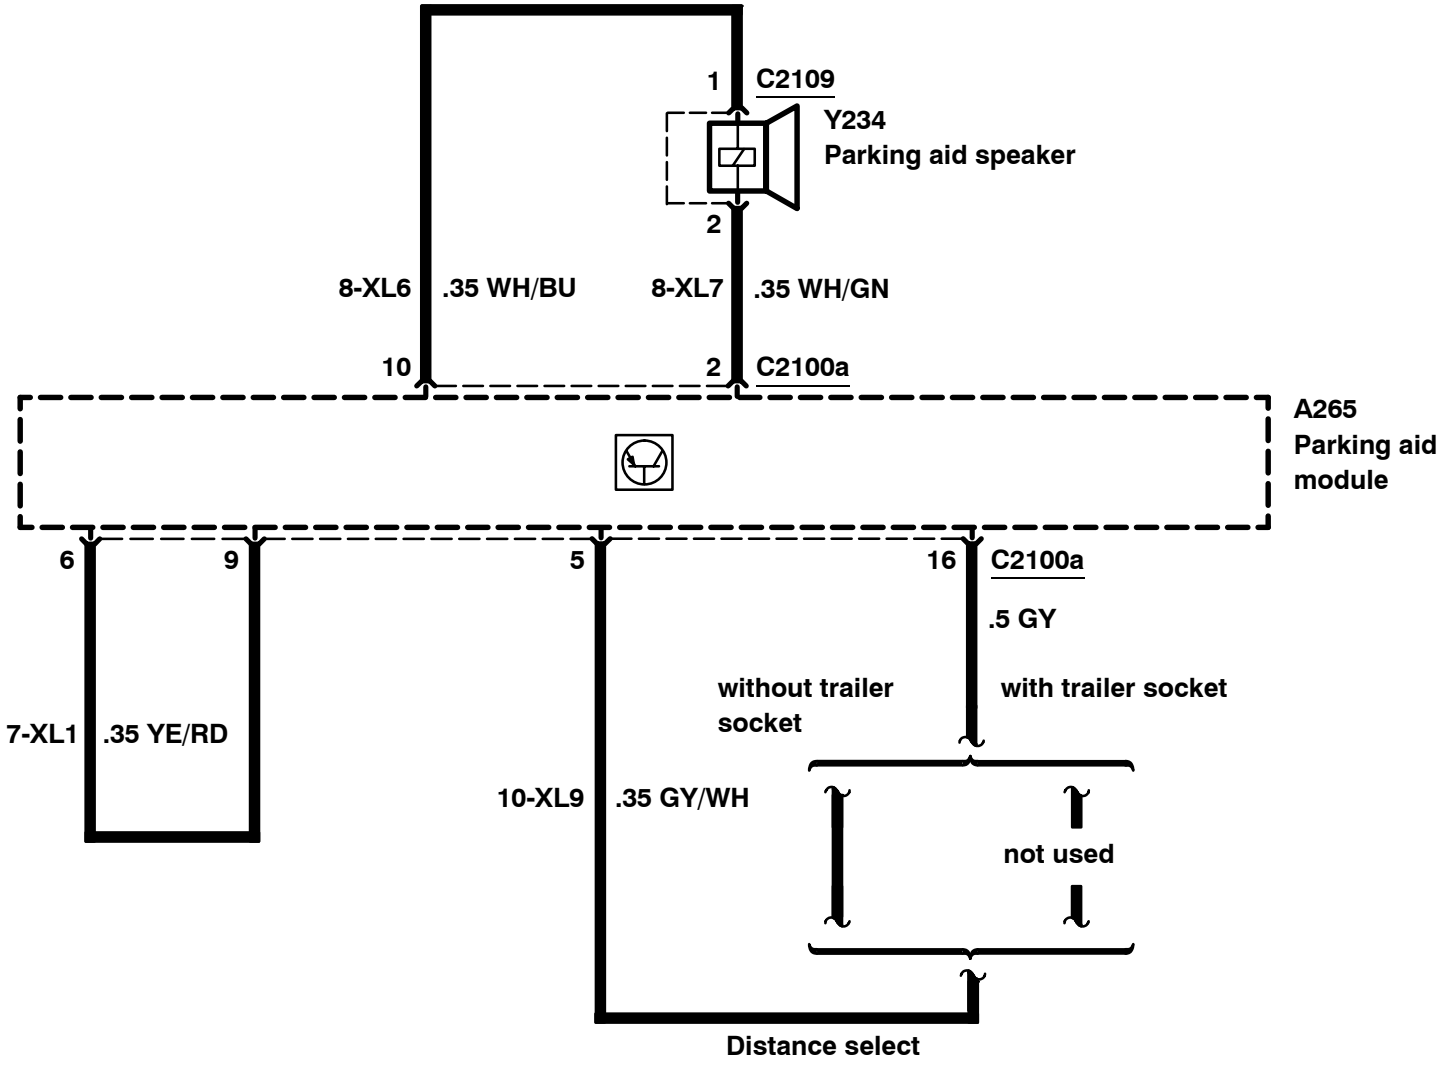


Parking Aid – Valeo

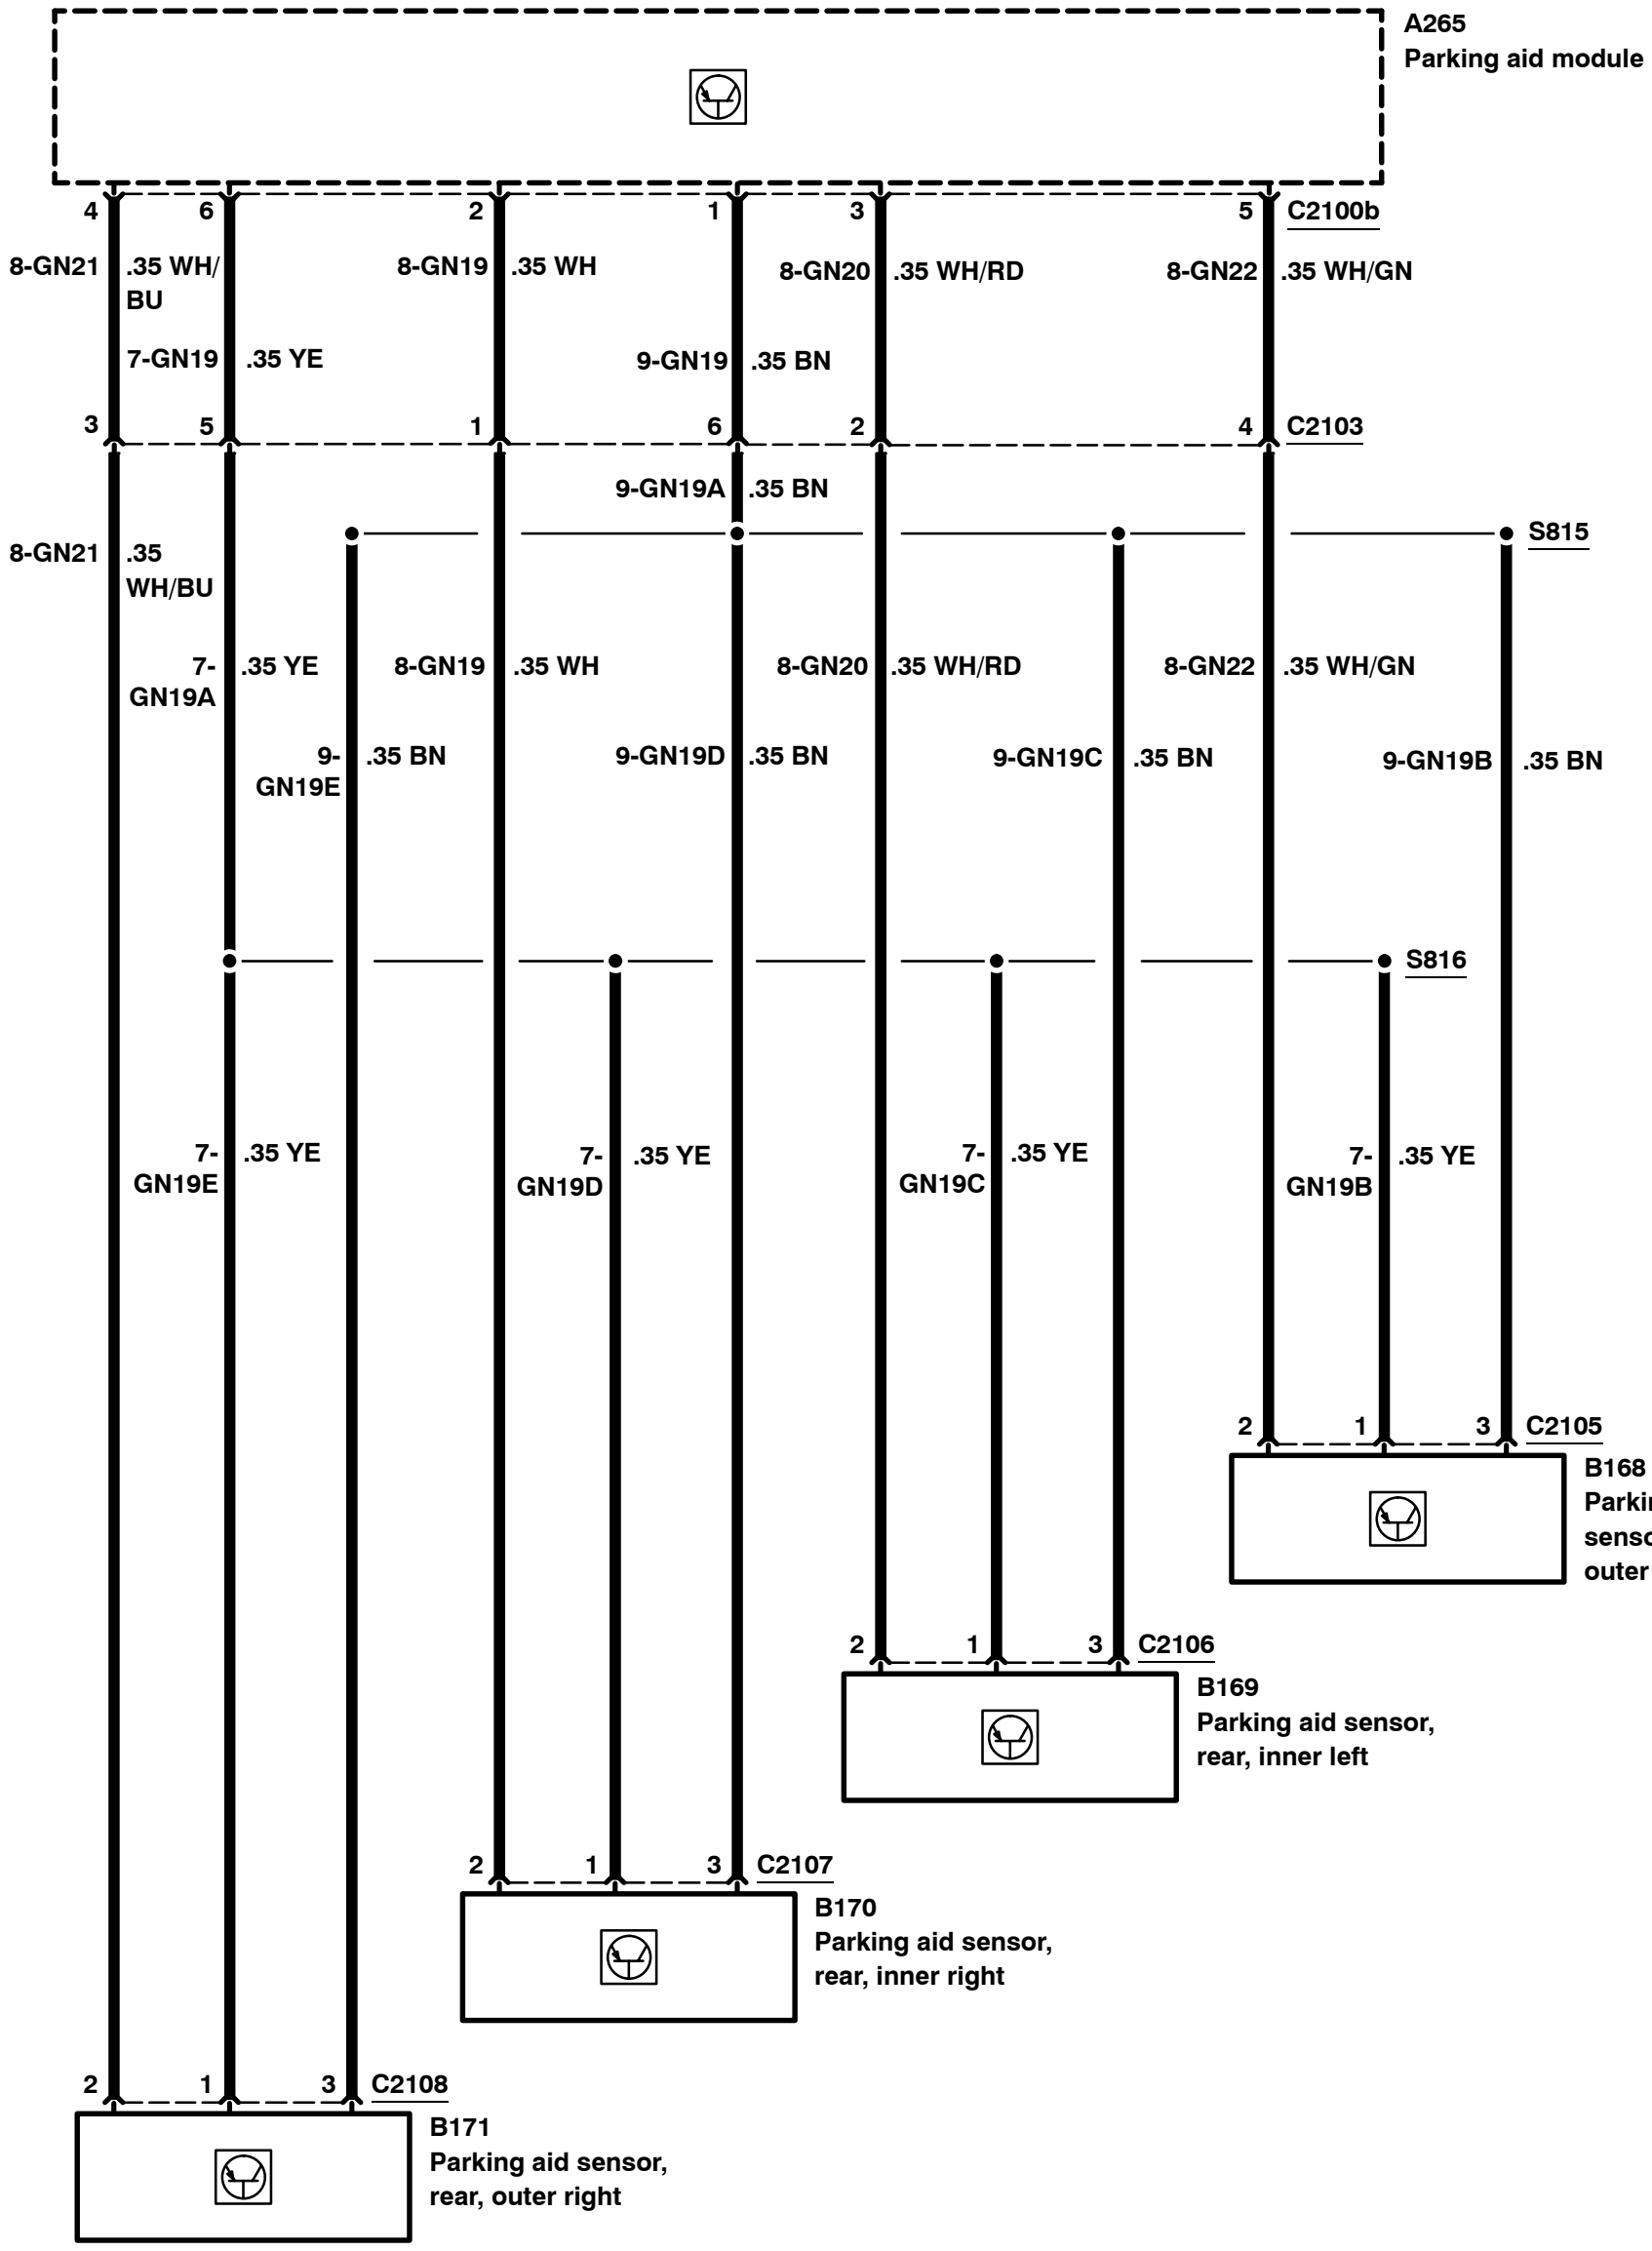


Parking Aid – Bosch, 4–door model/5–door model

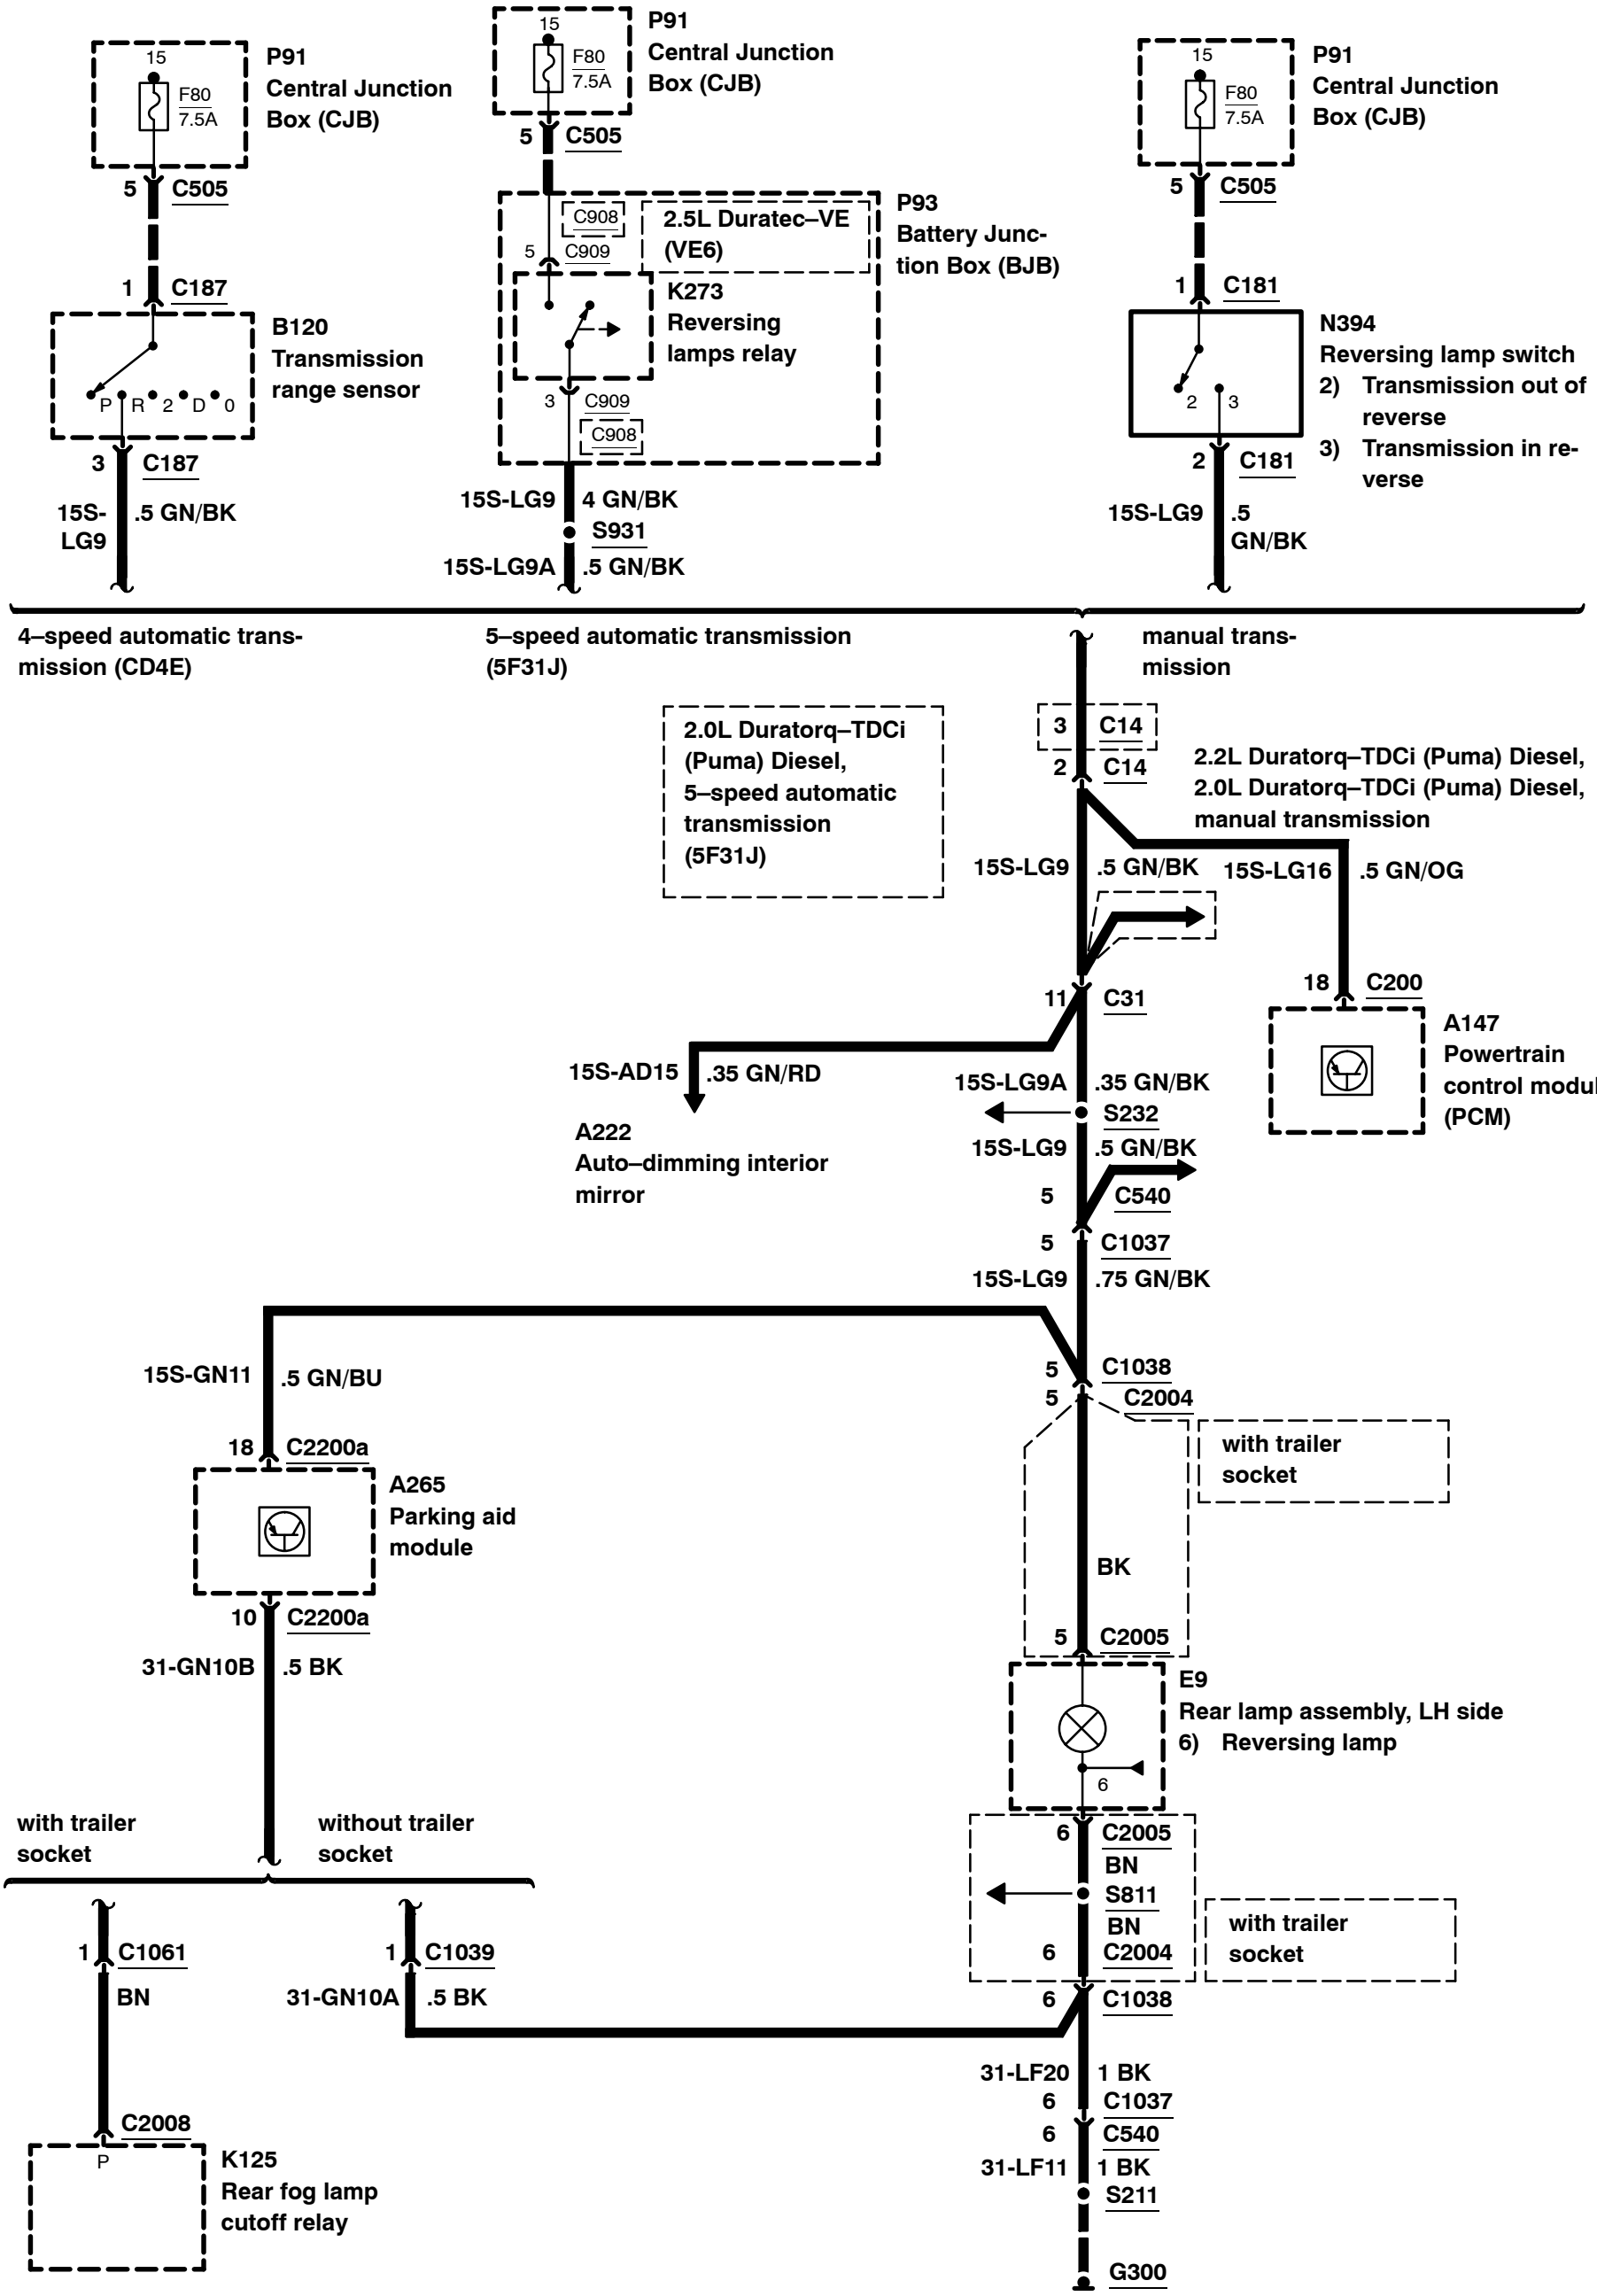


Parking Aid – Bosch, wagon

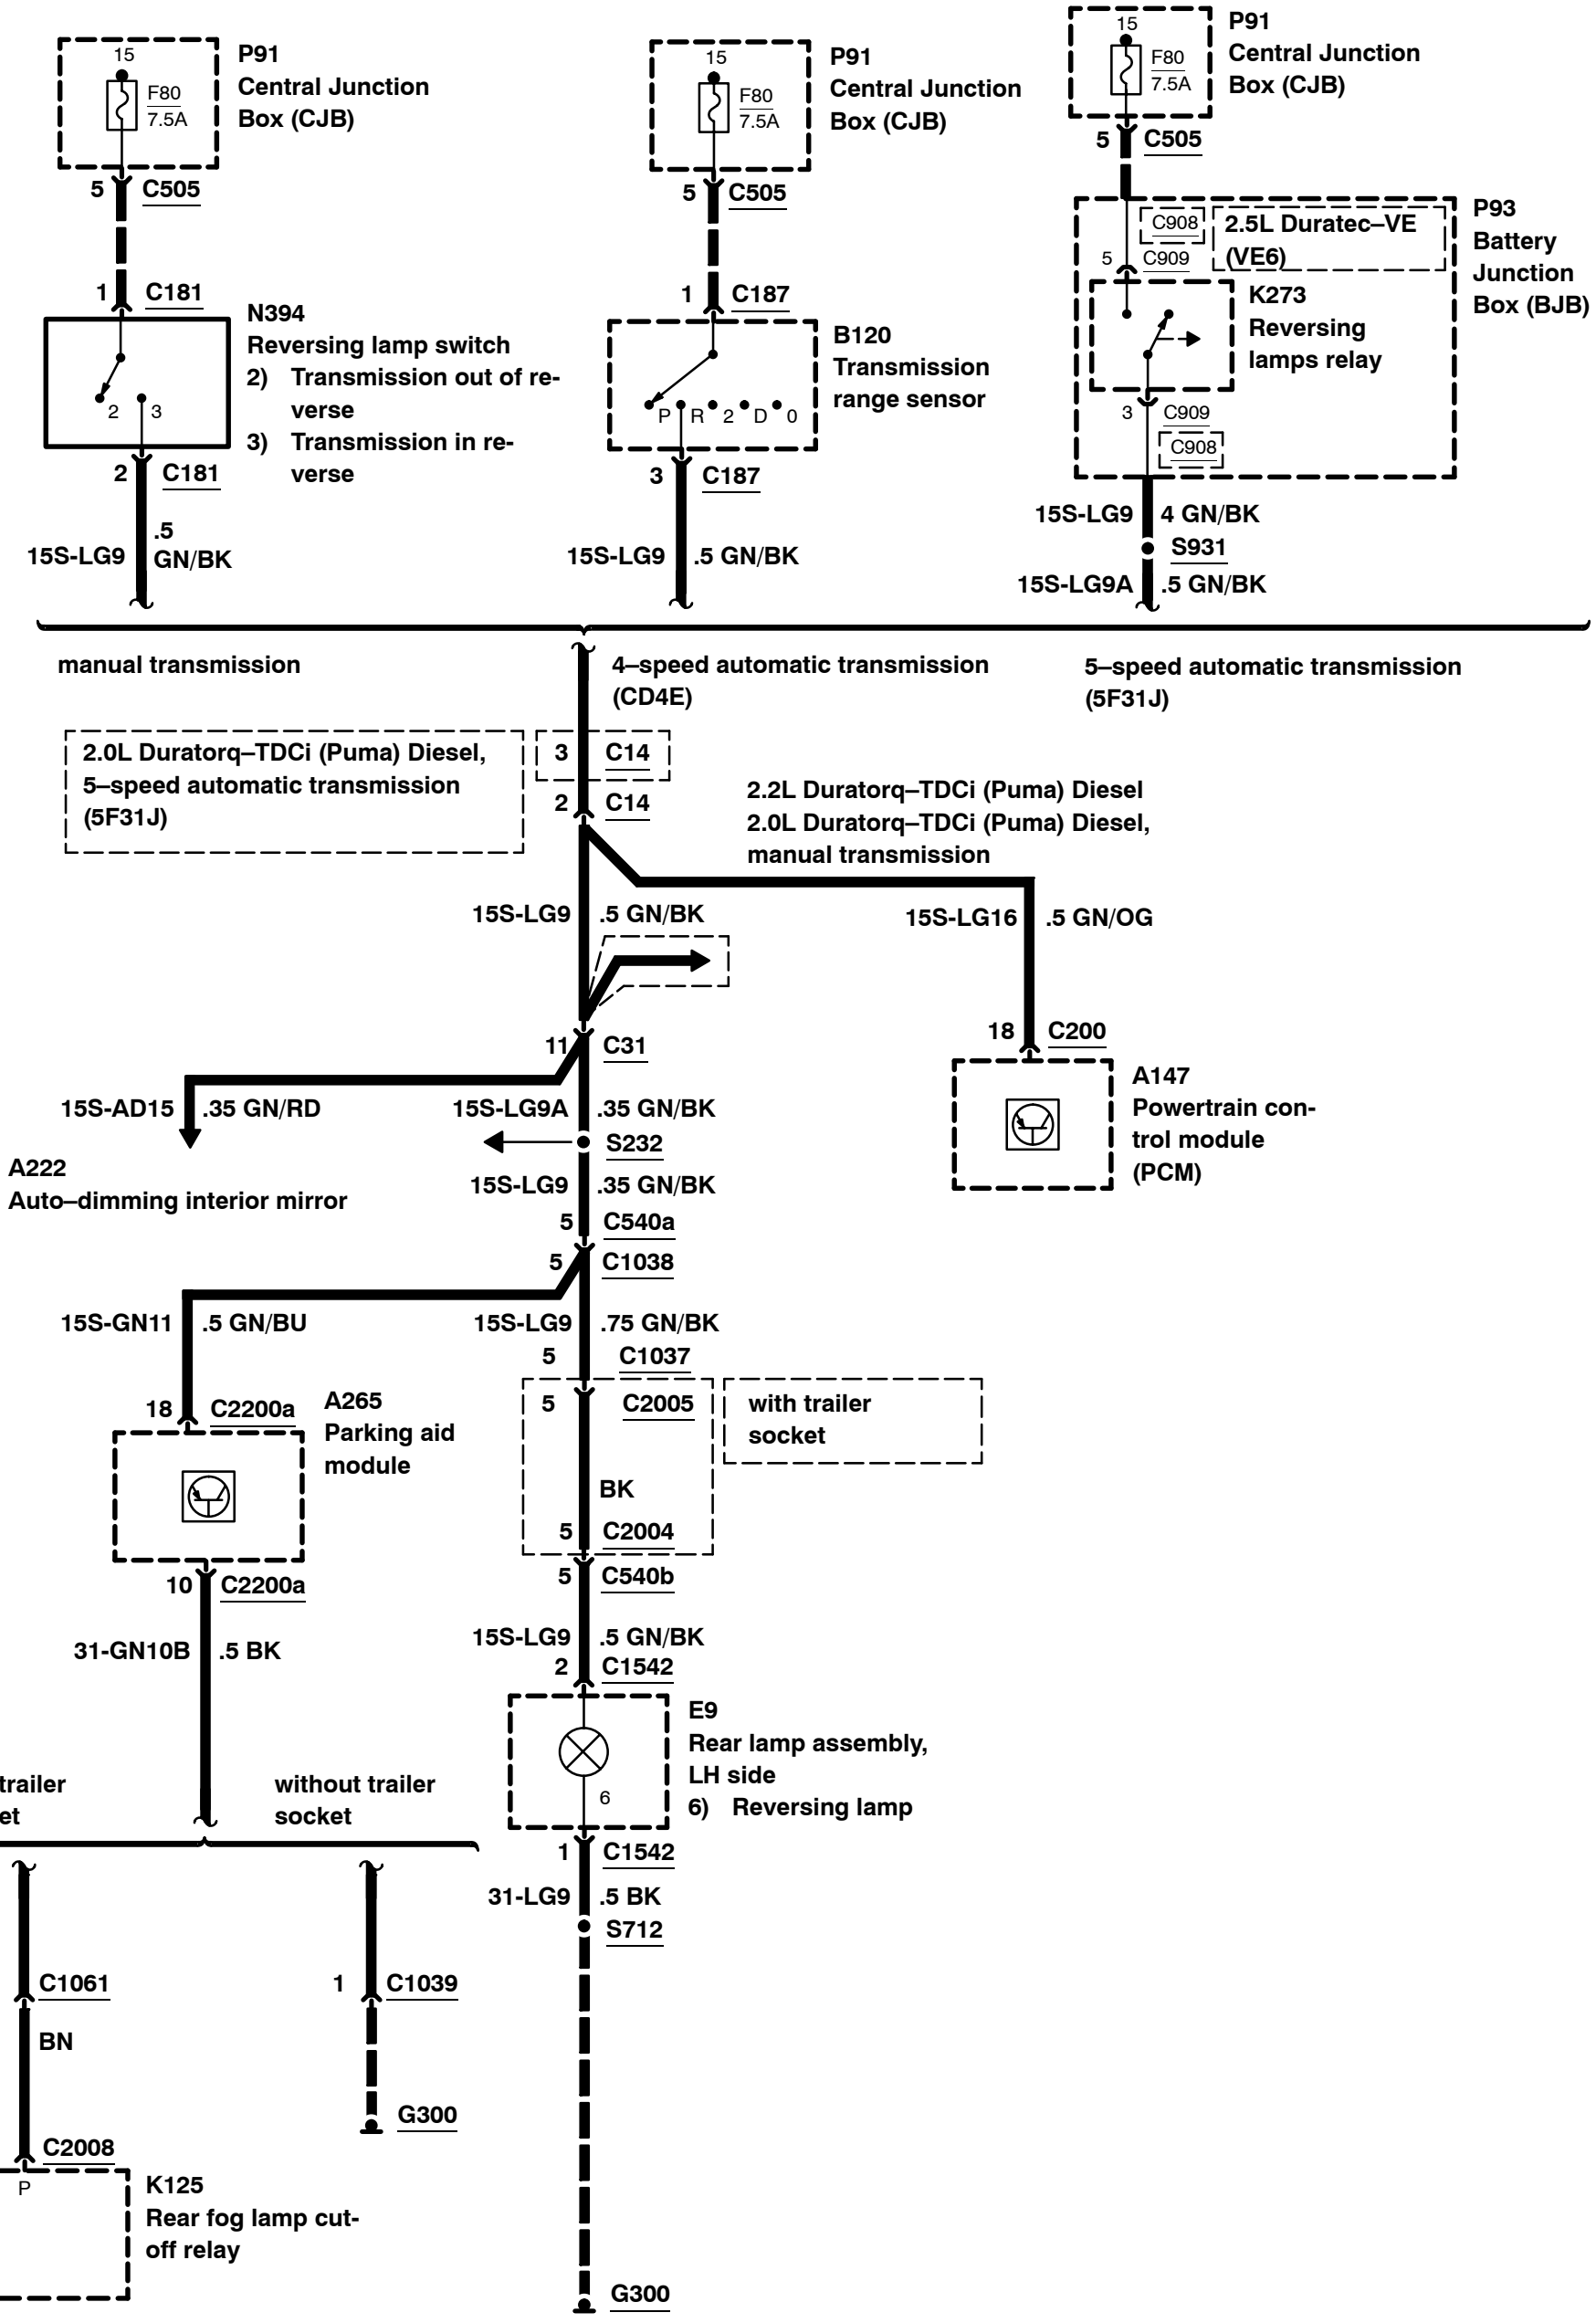


Parking Aid – Bosch

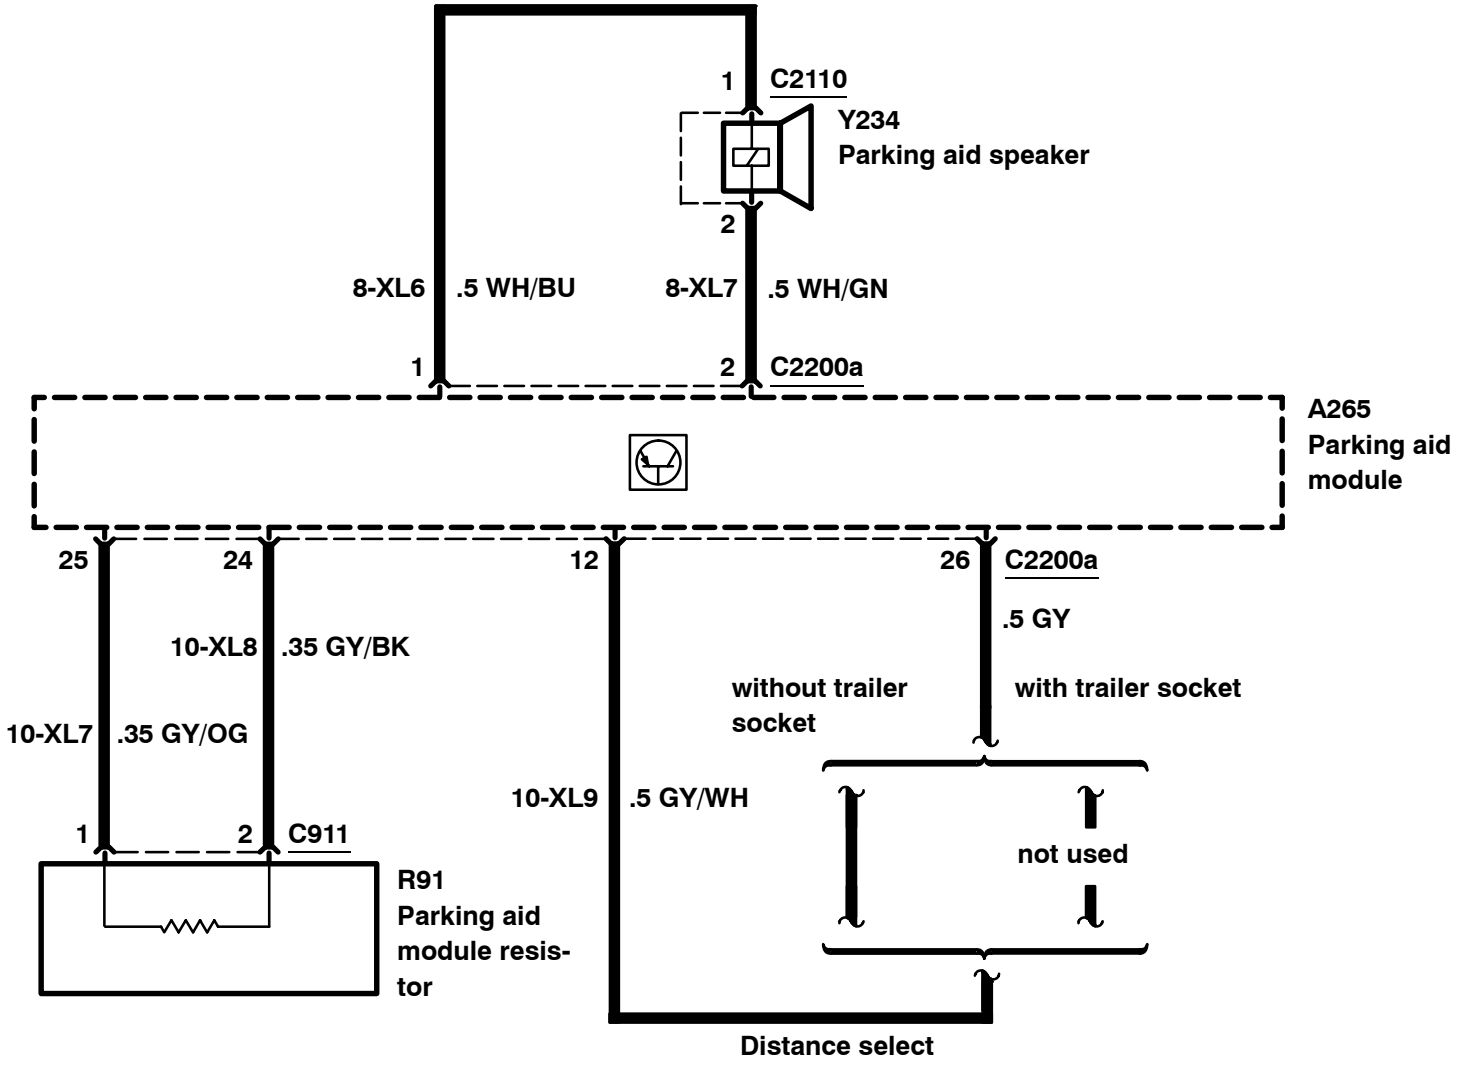


Parking Aid – Bosch

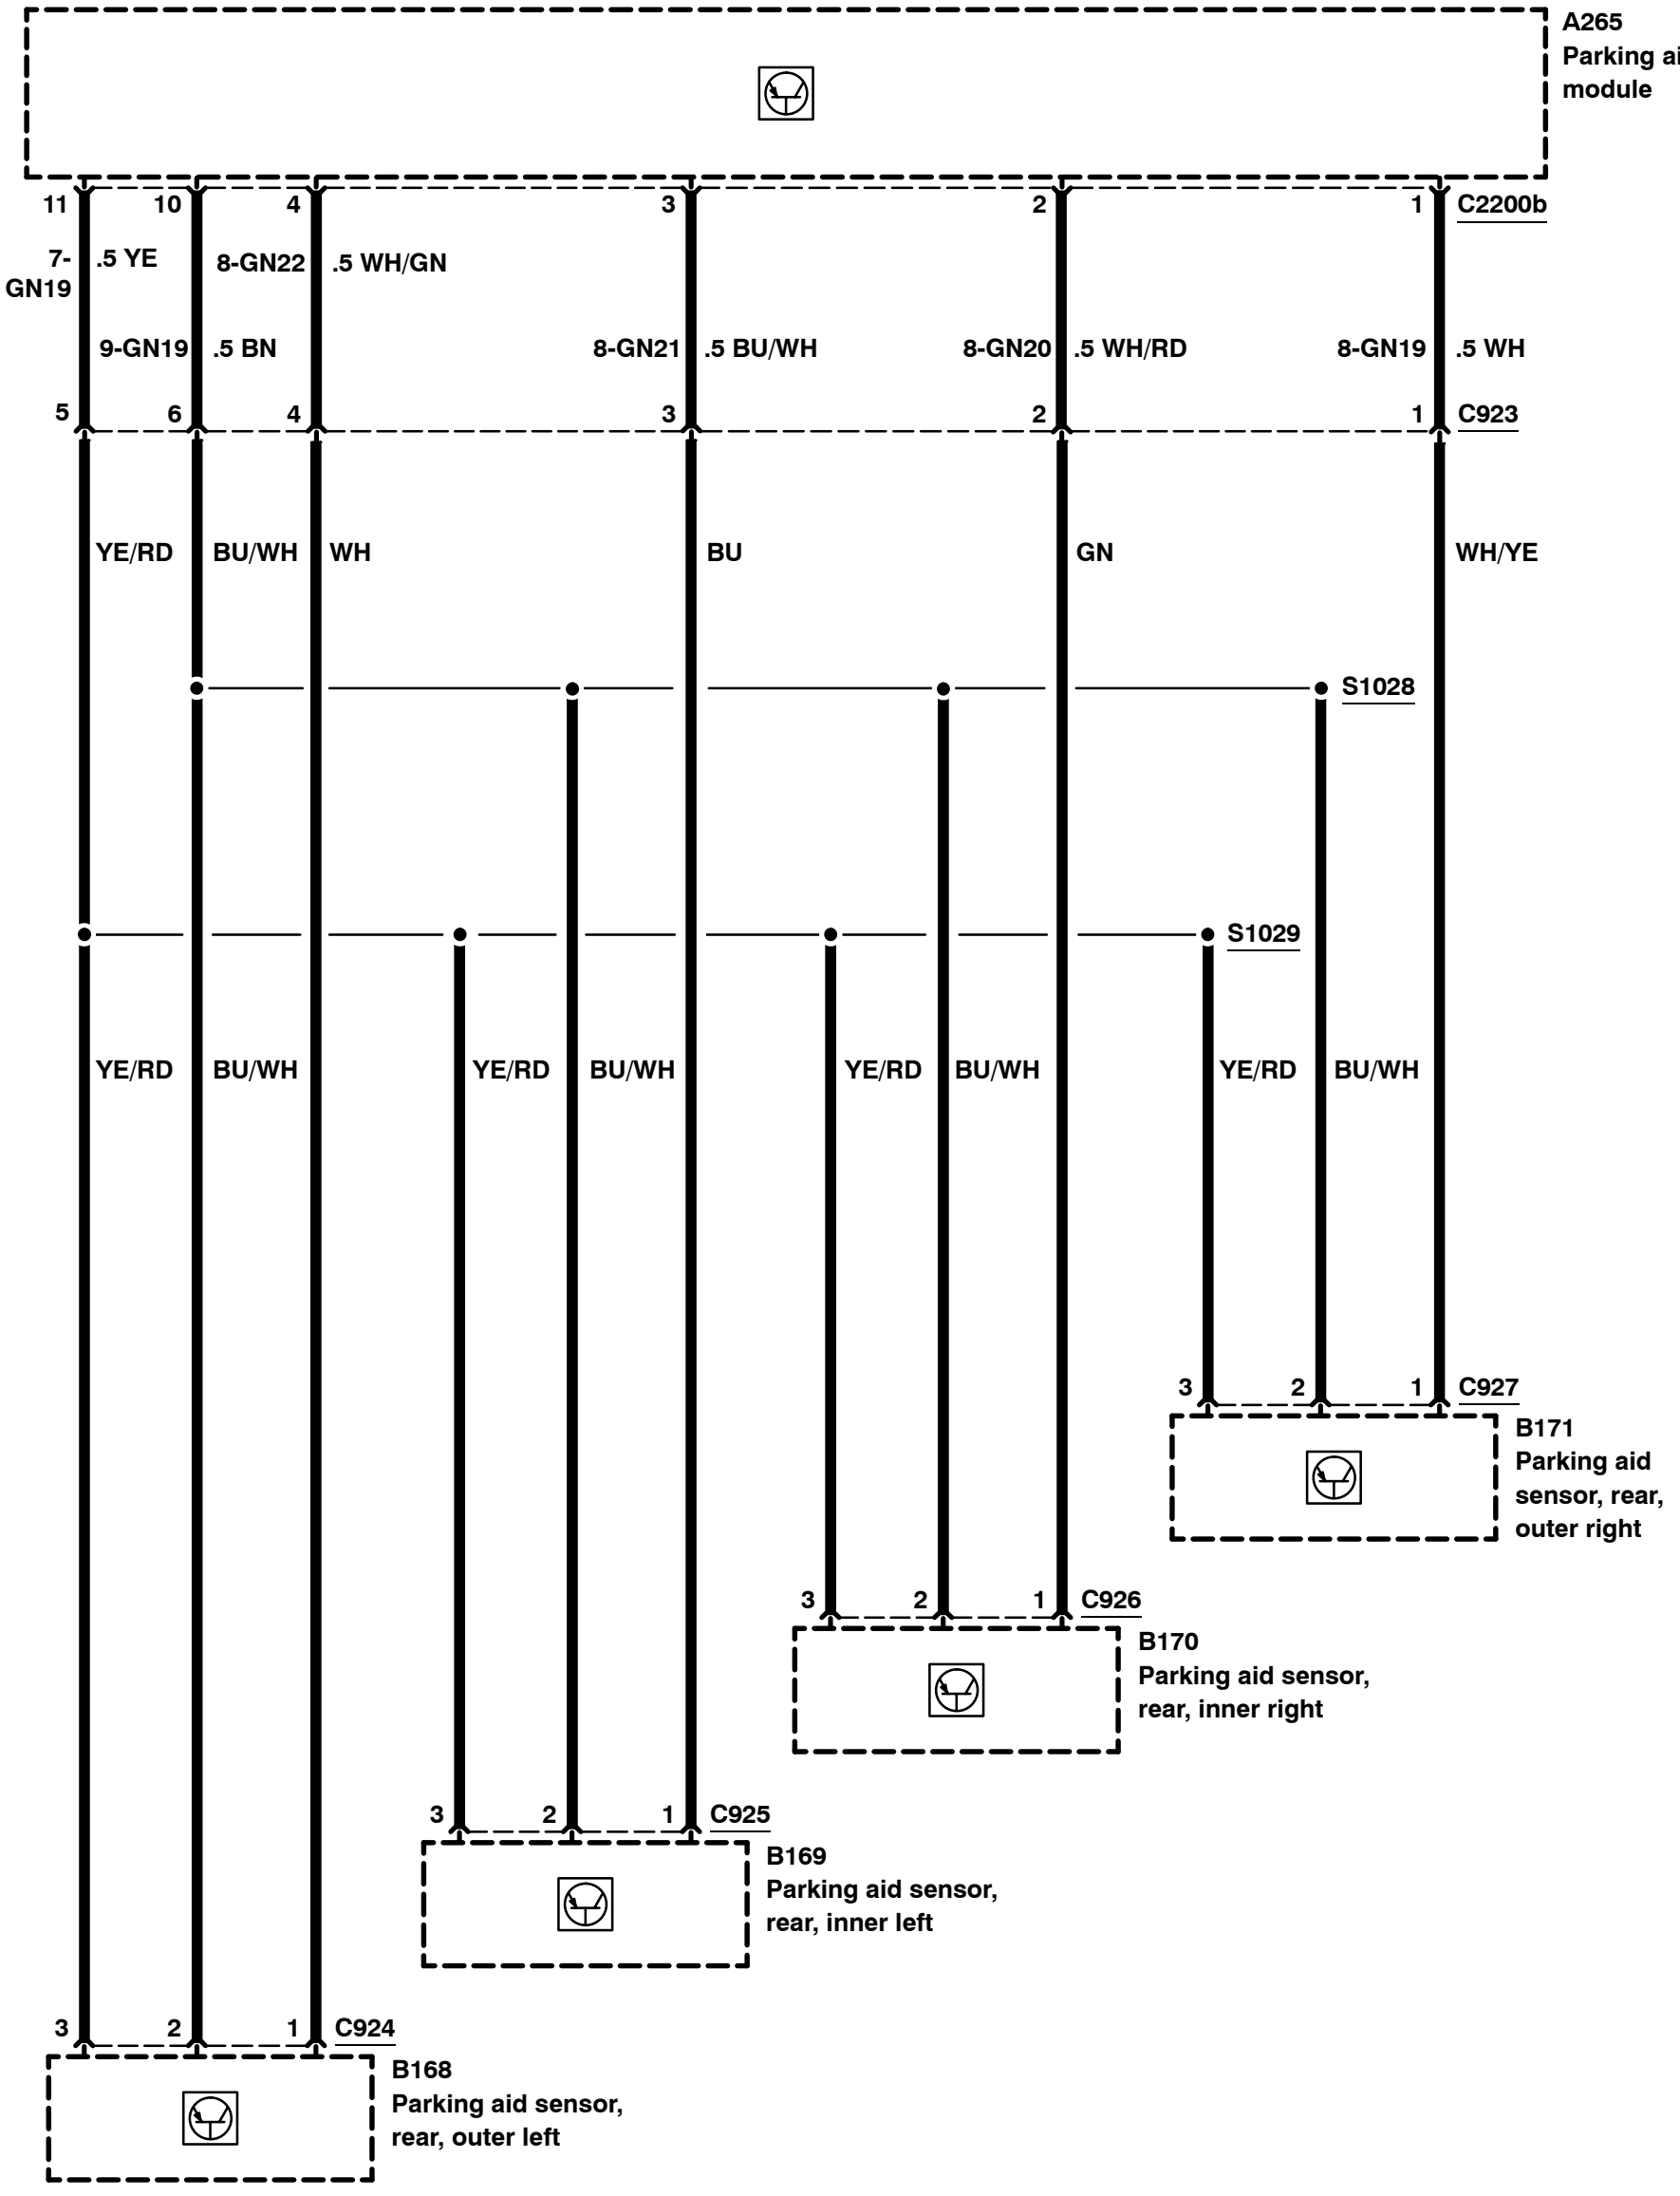


Generator and Regulator – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)

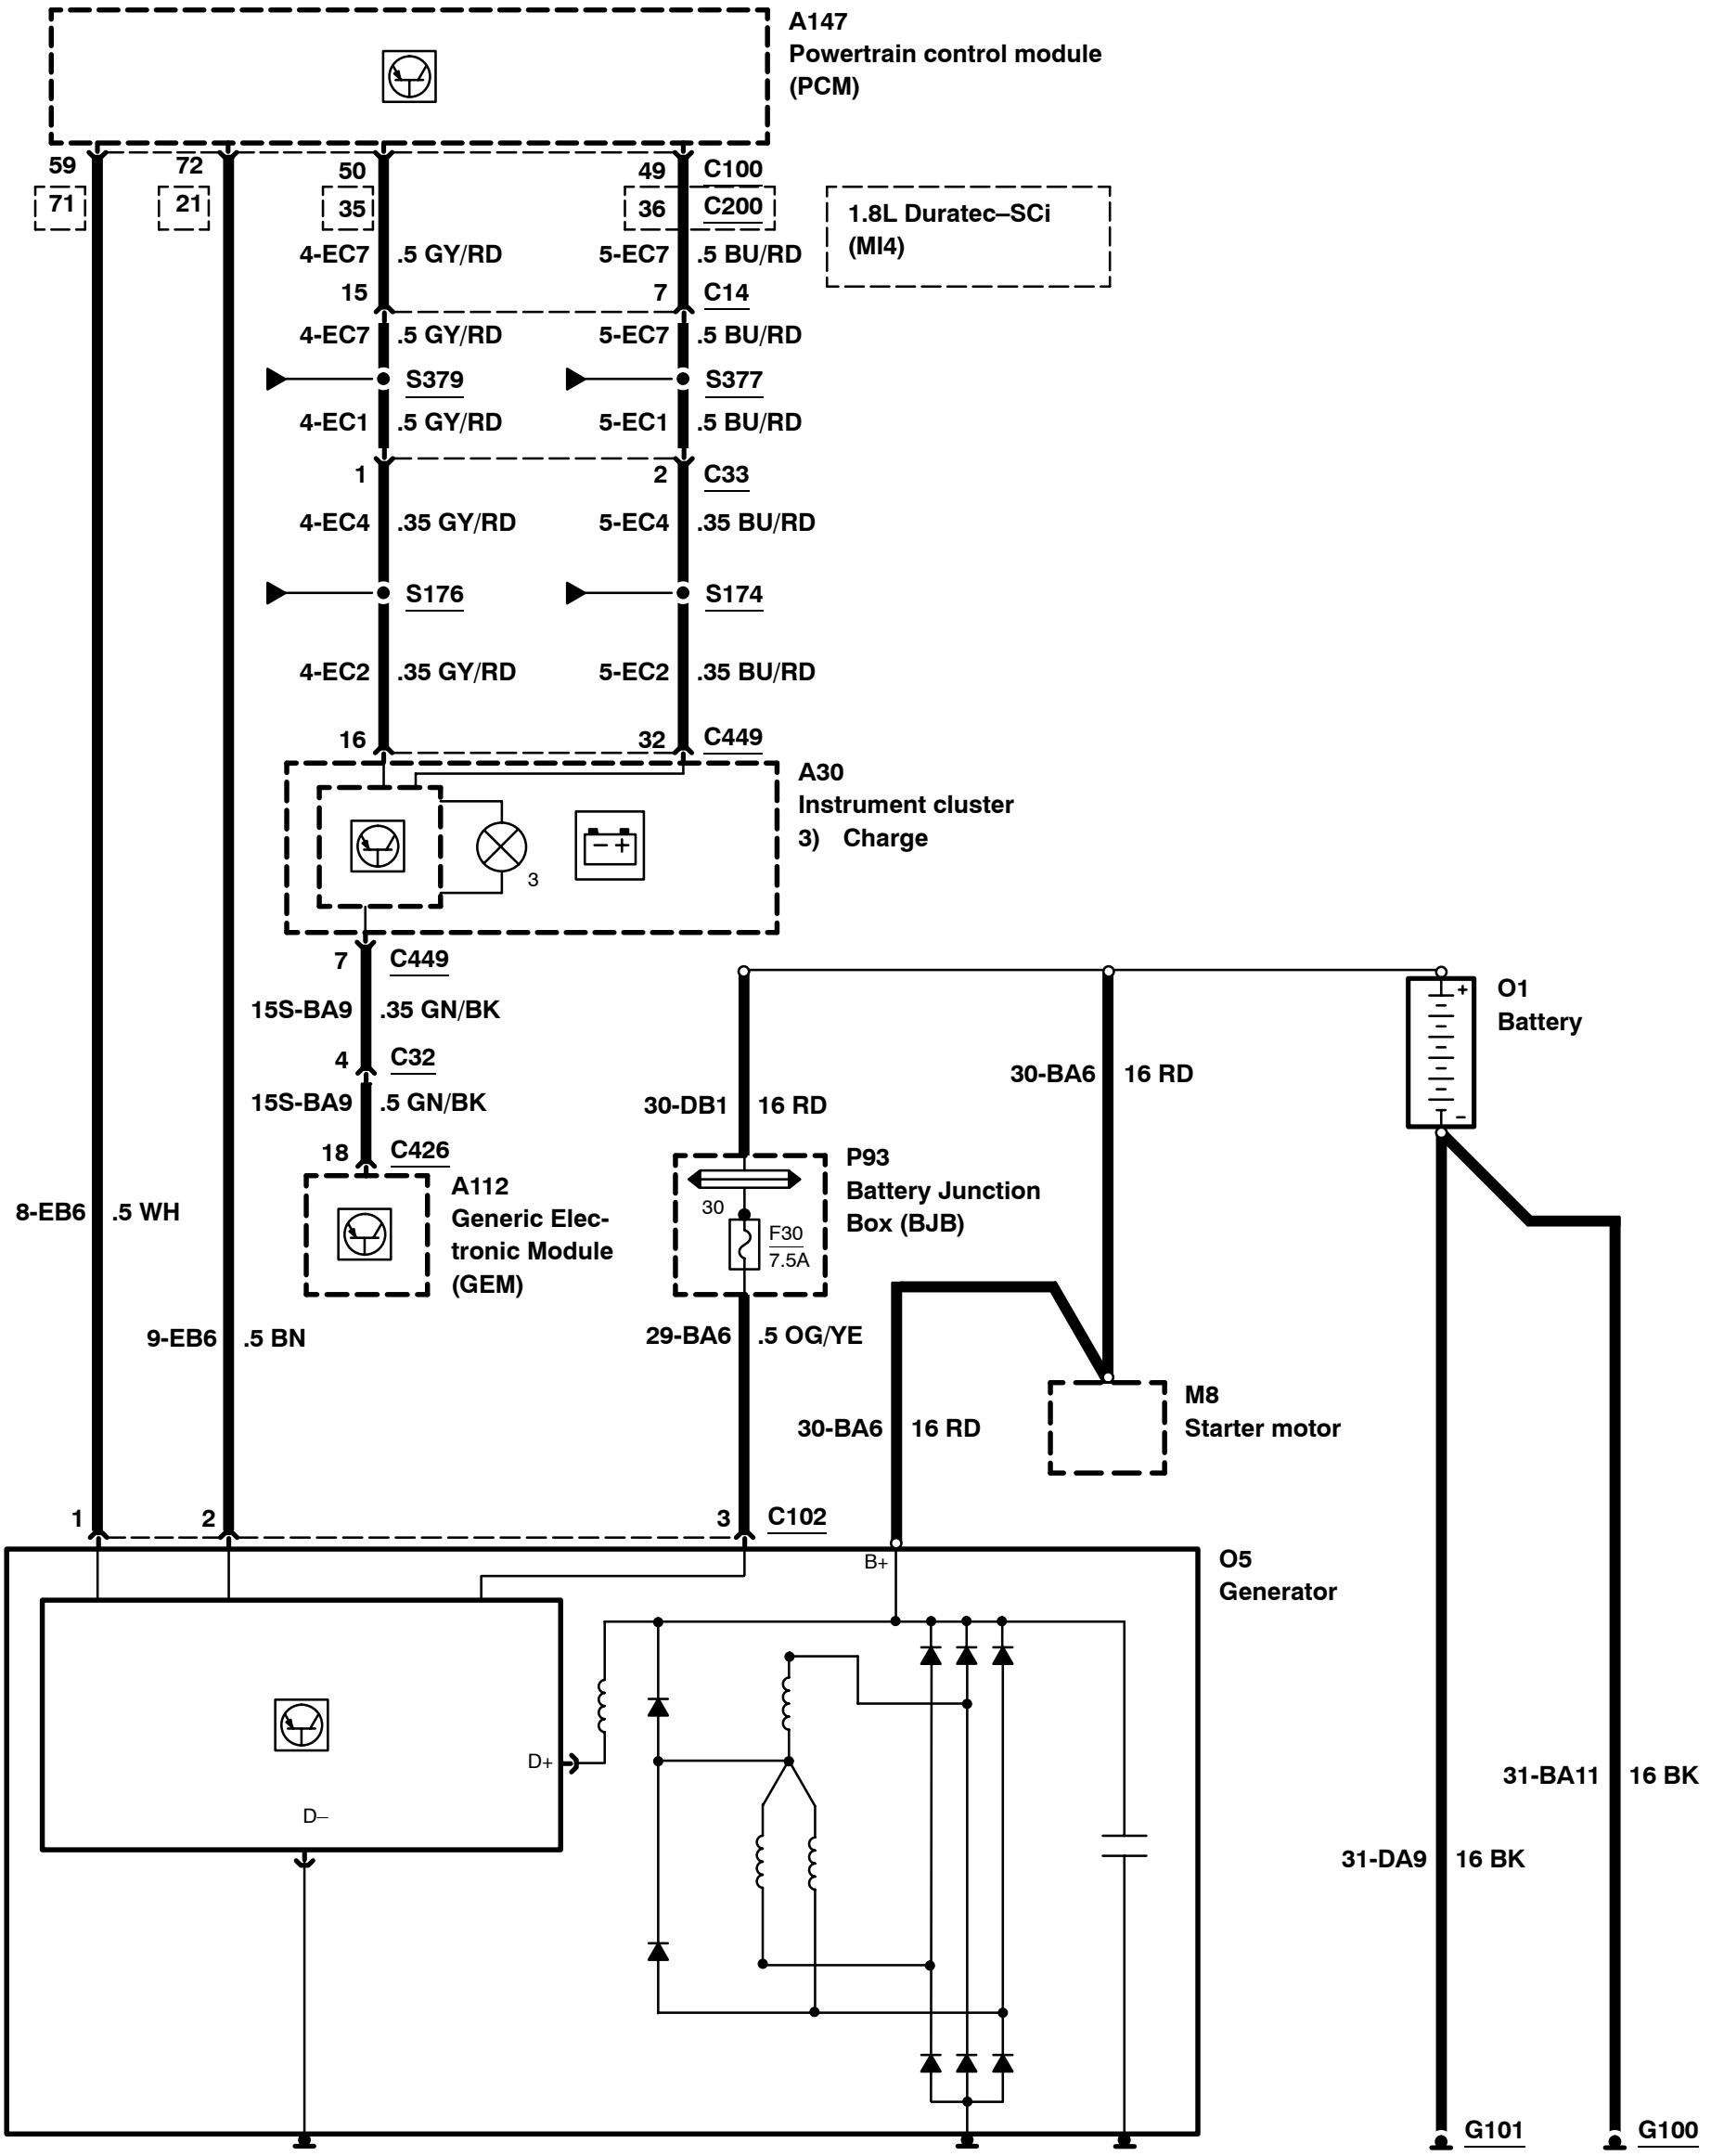


Generator and Regulator – 3.0L Duratec–SE (VE6)

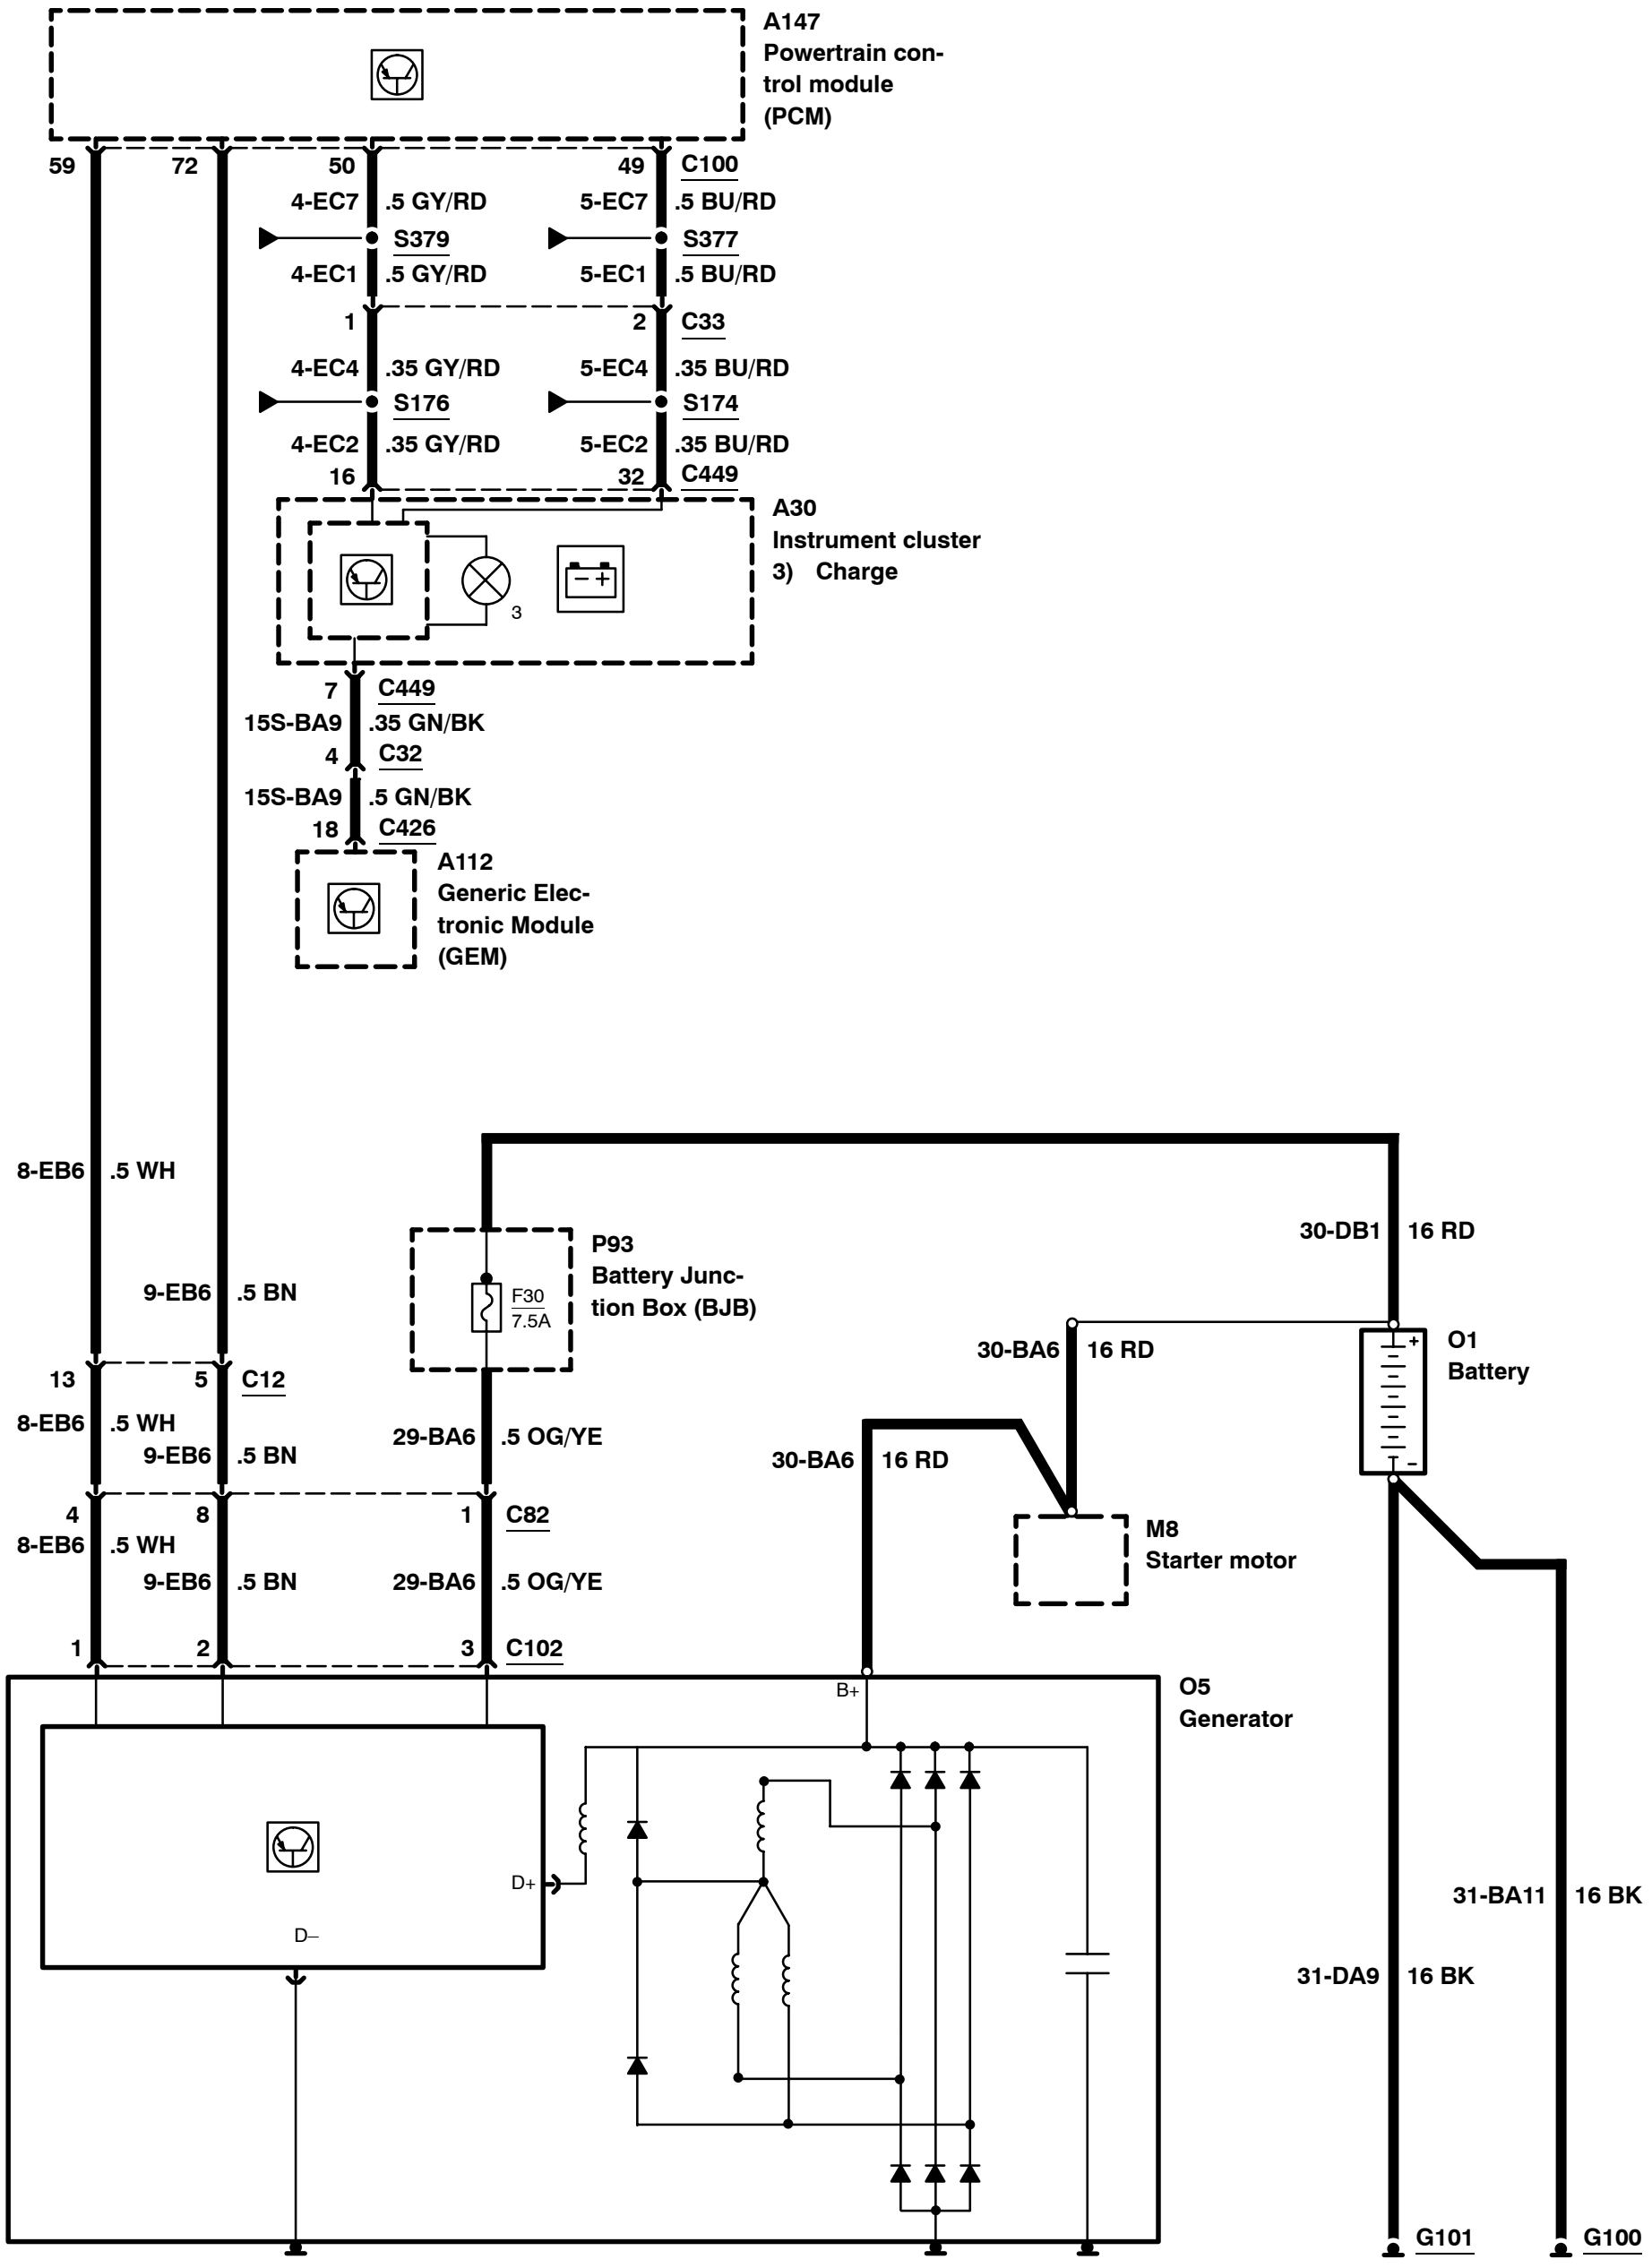


Generator and Regulator – 3.0L Duratec–ST (VE6)

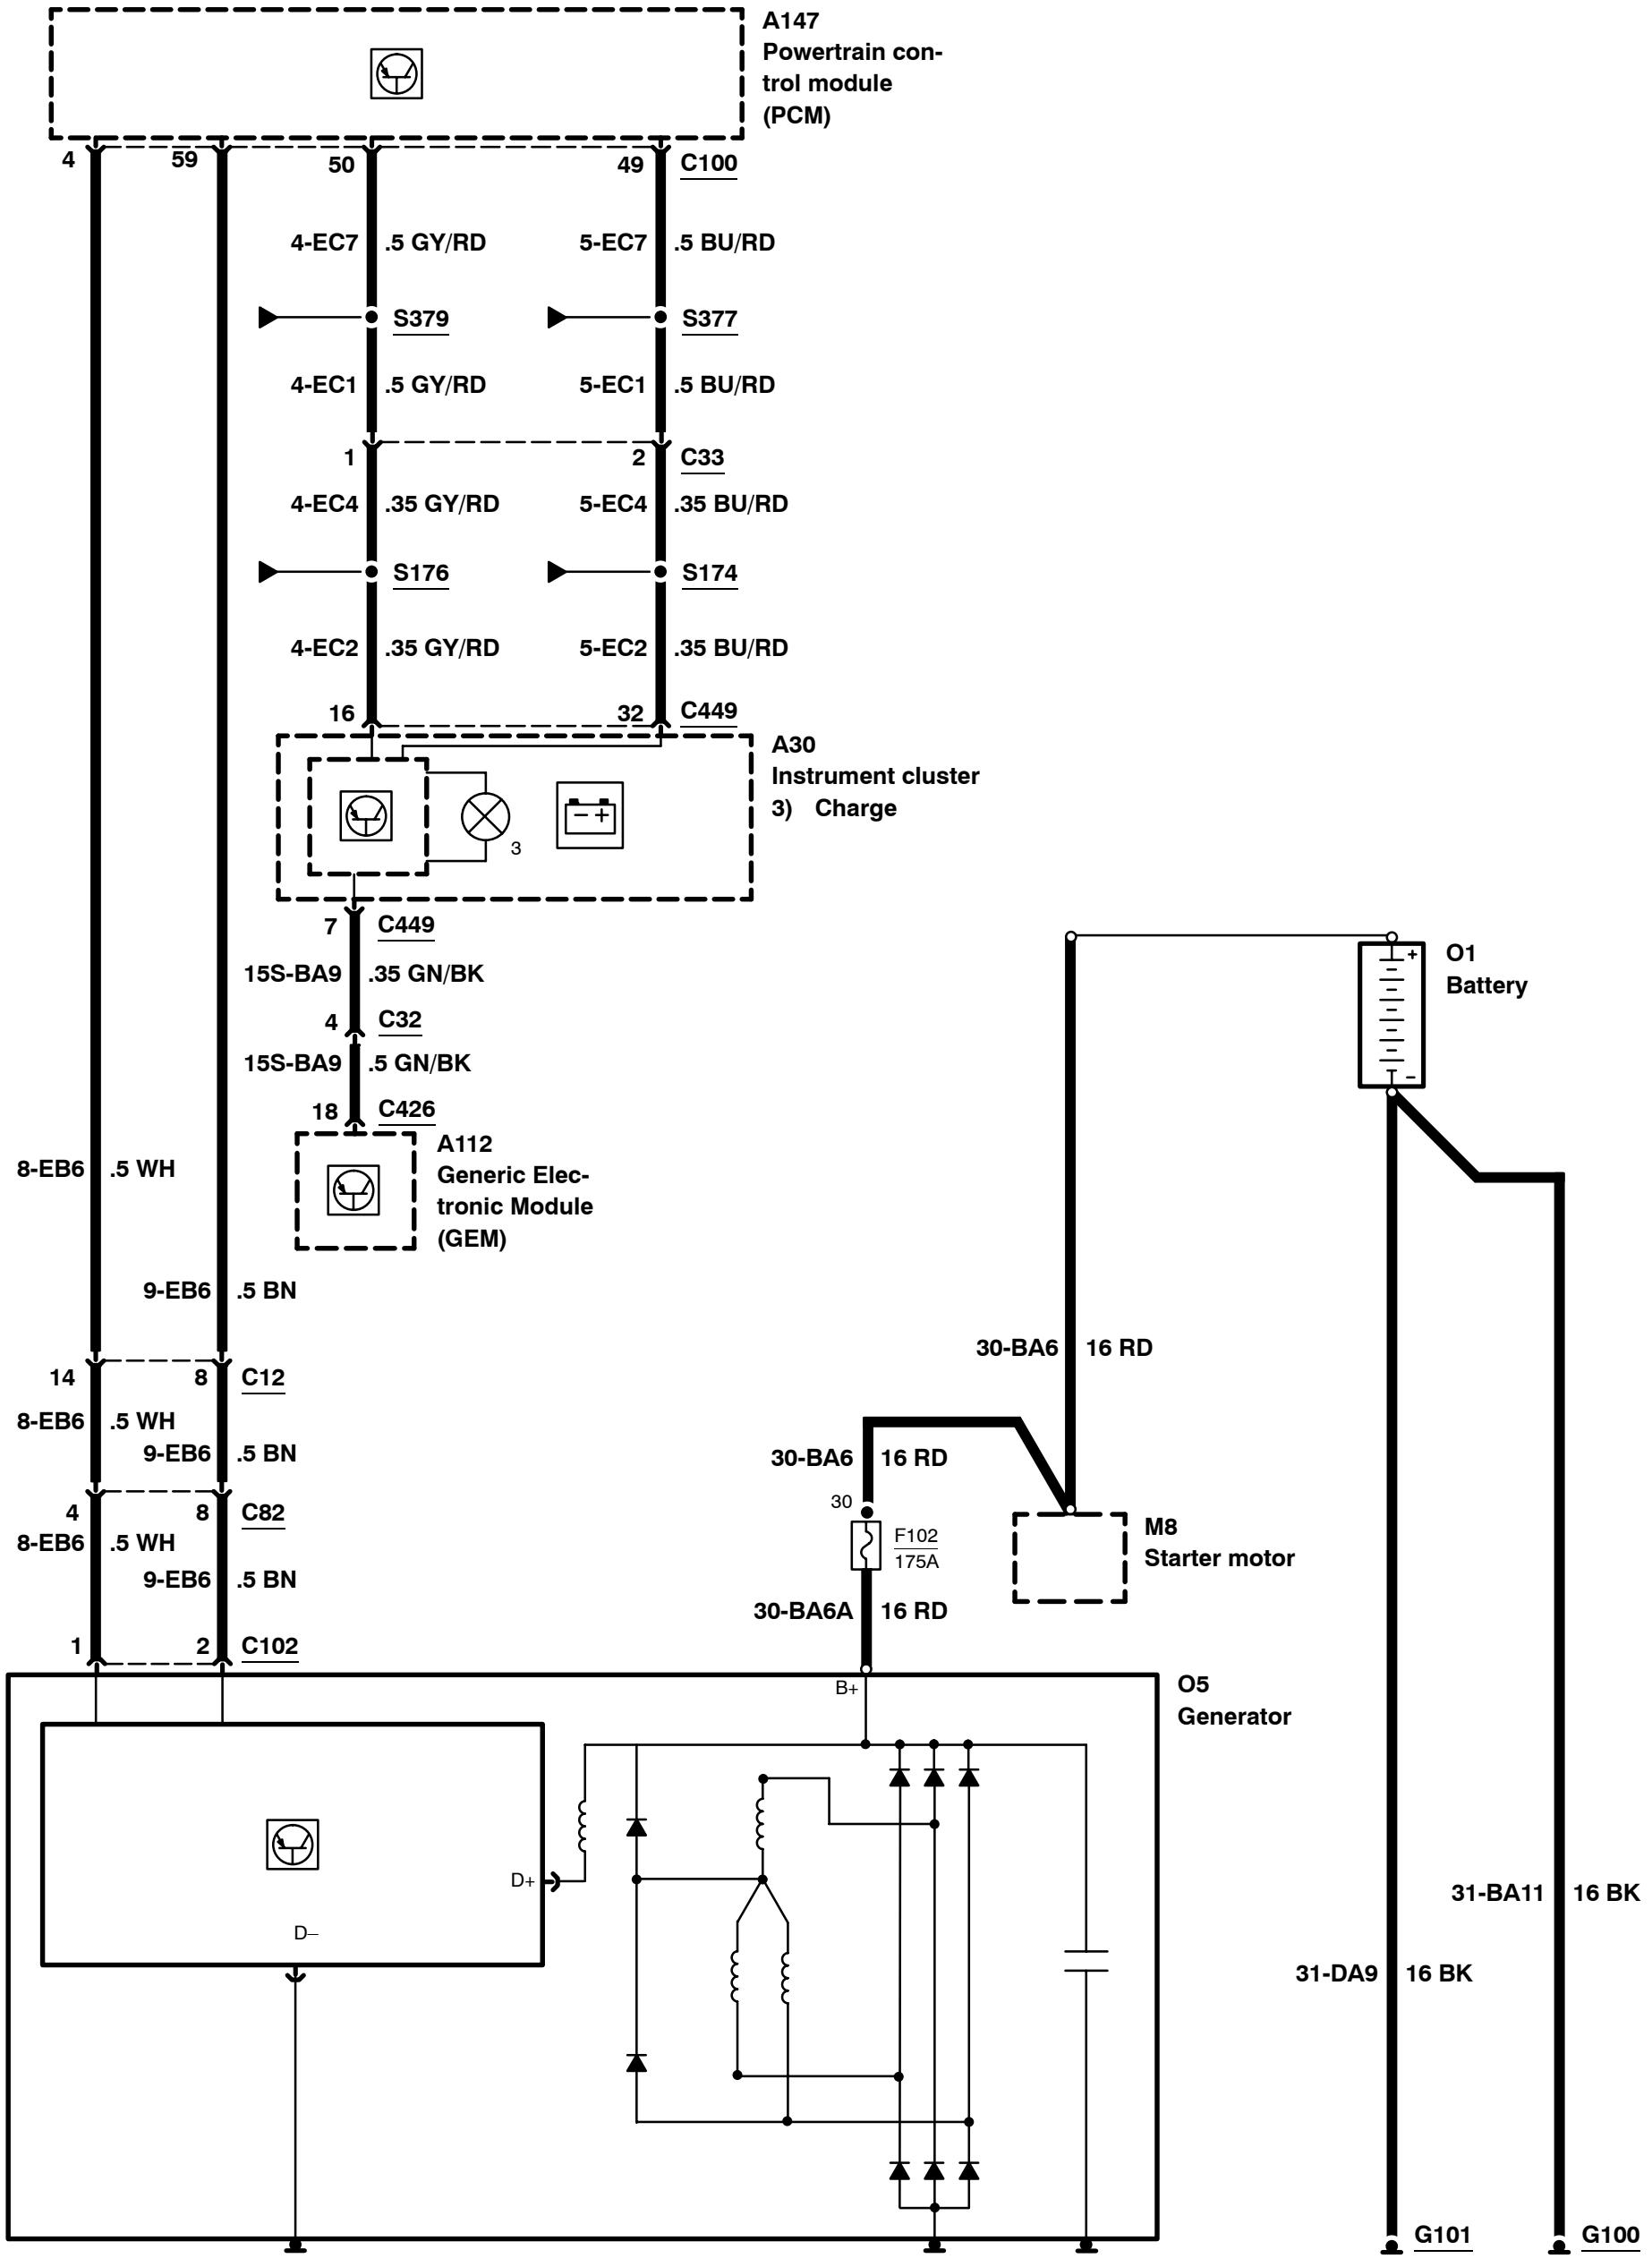


Generator and Regulator – Diesel engines

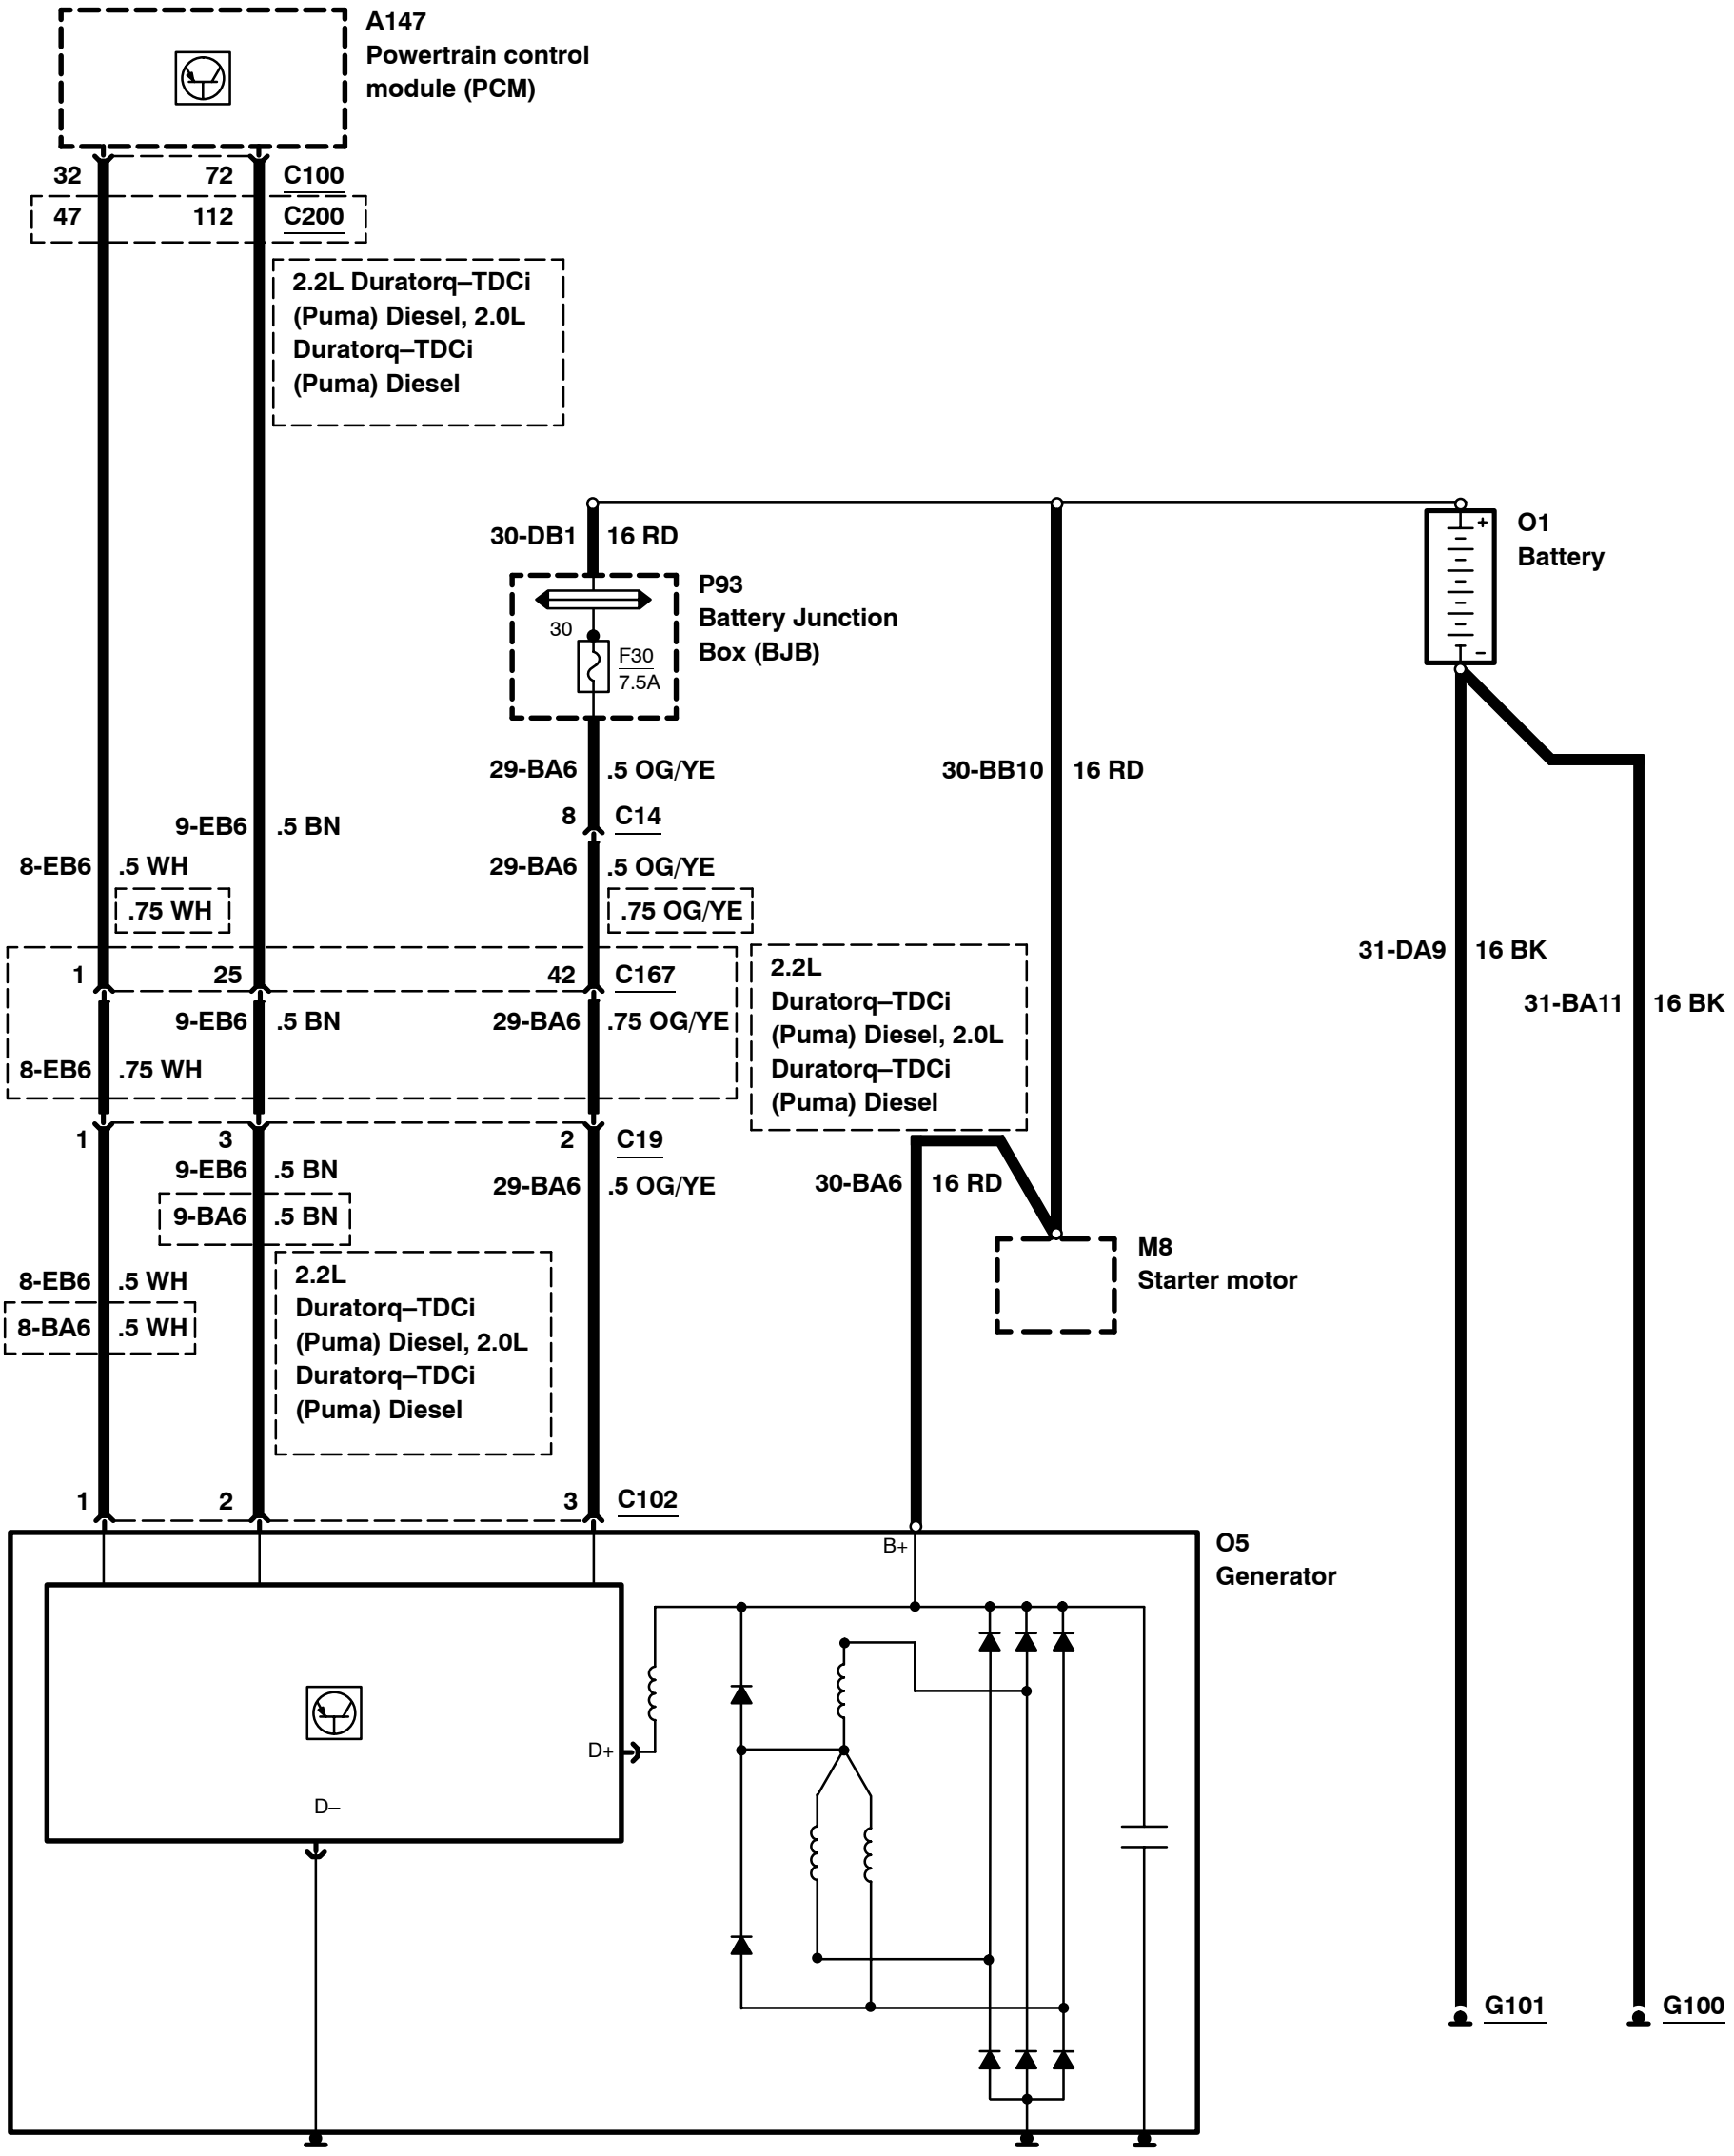

Generator and Regulator – Diesel engines

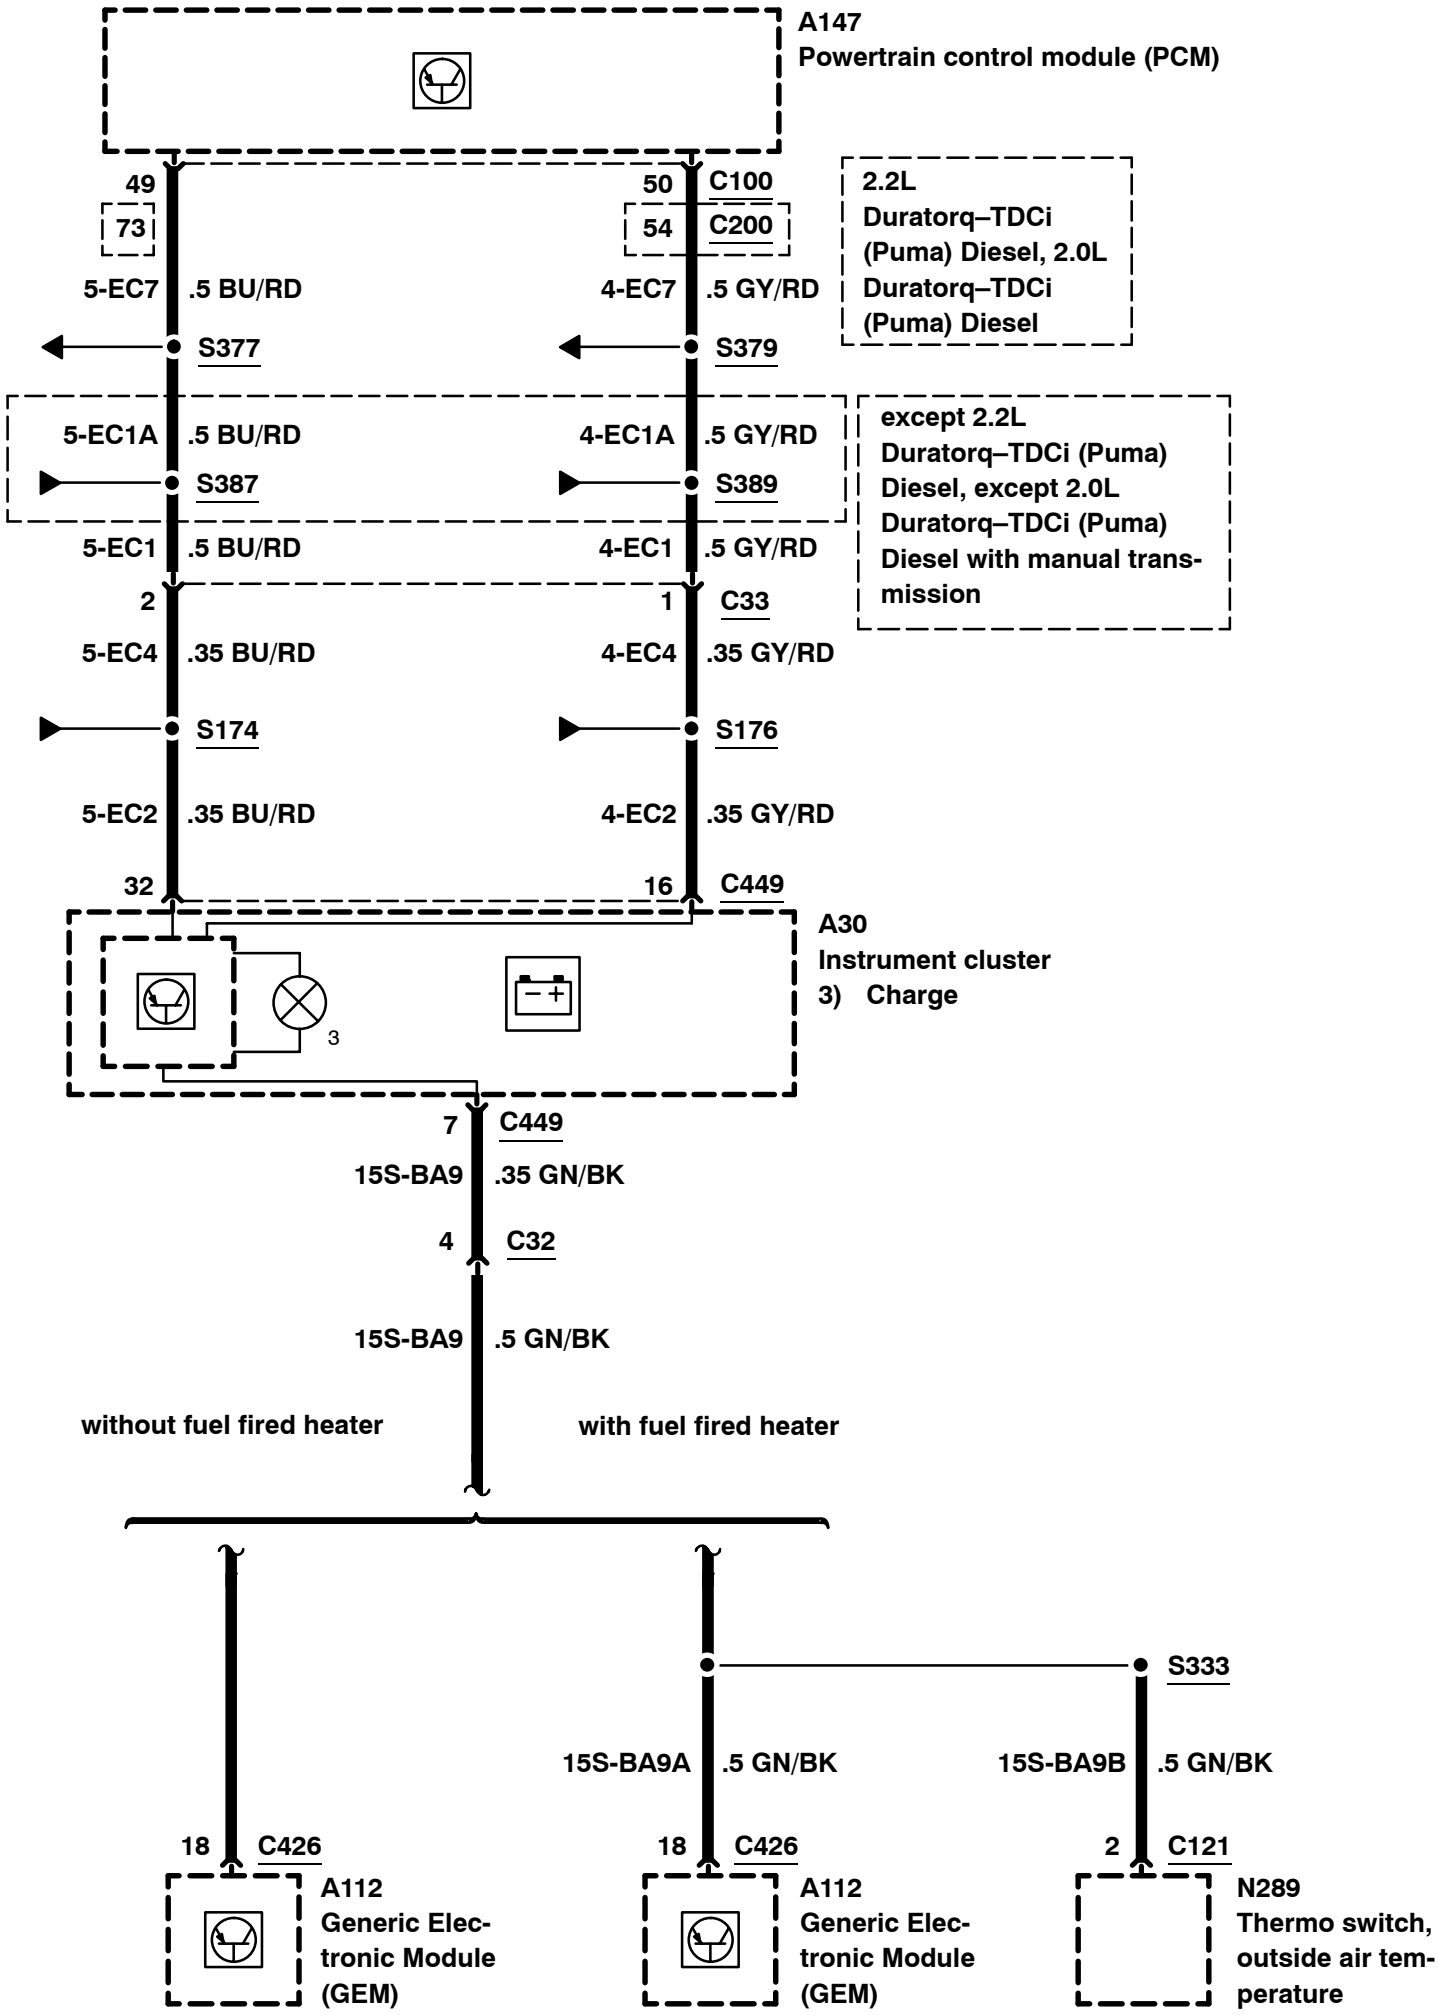


Audio Unit – Pre–equipment pack

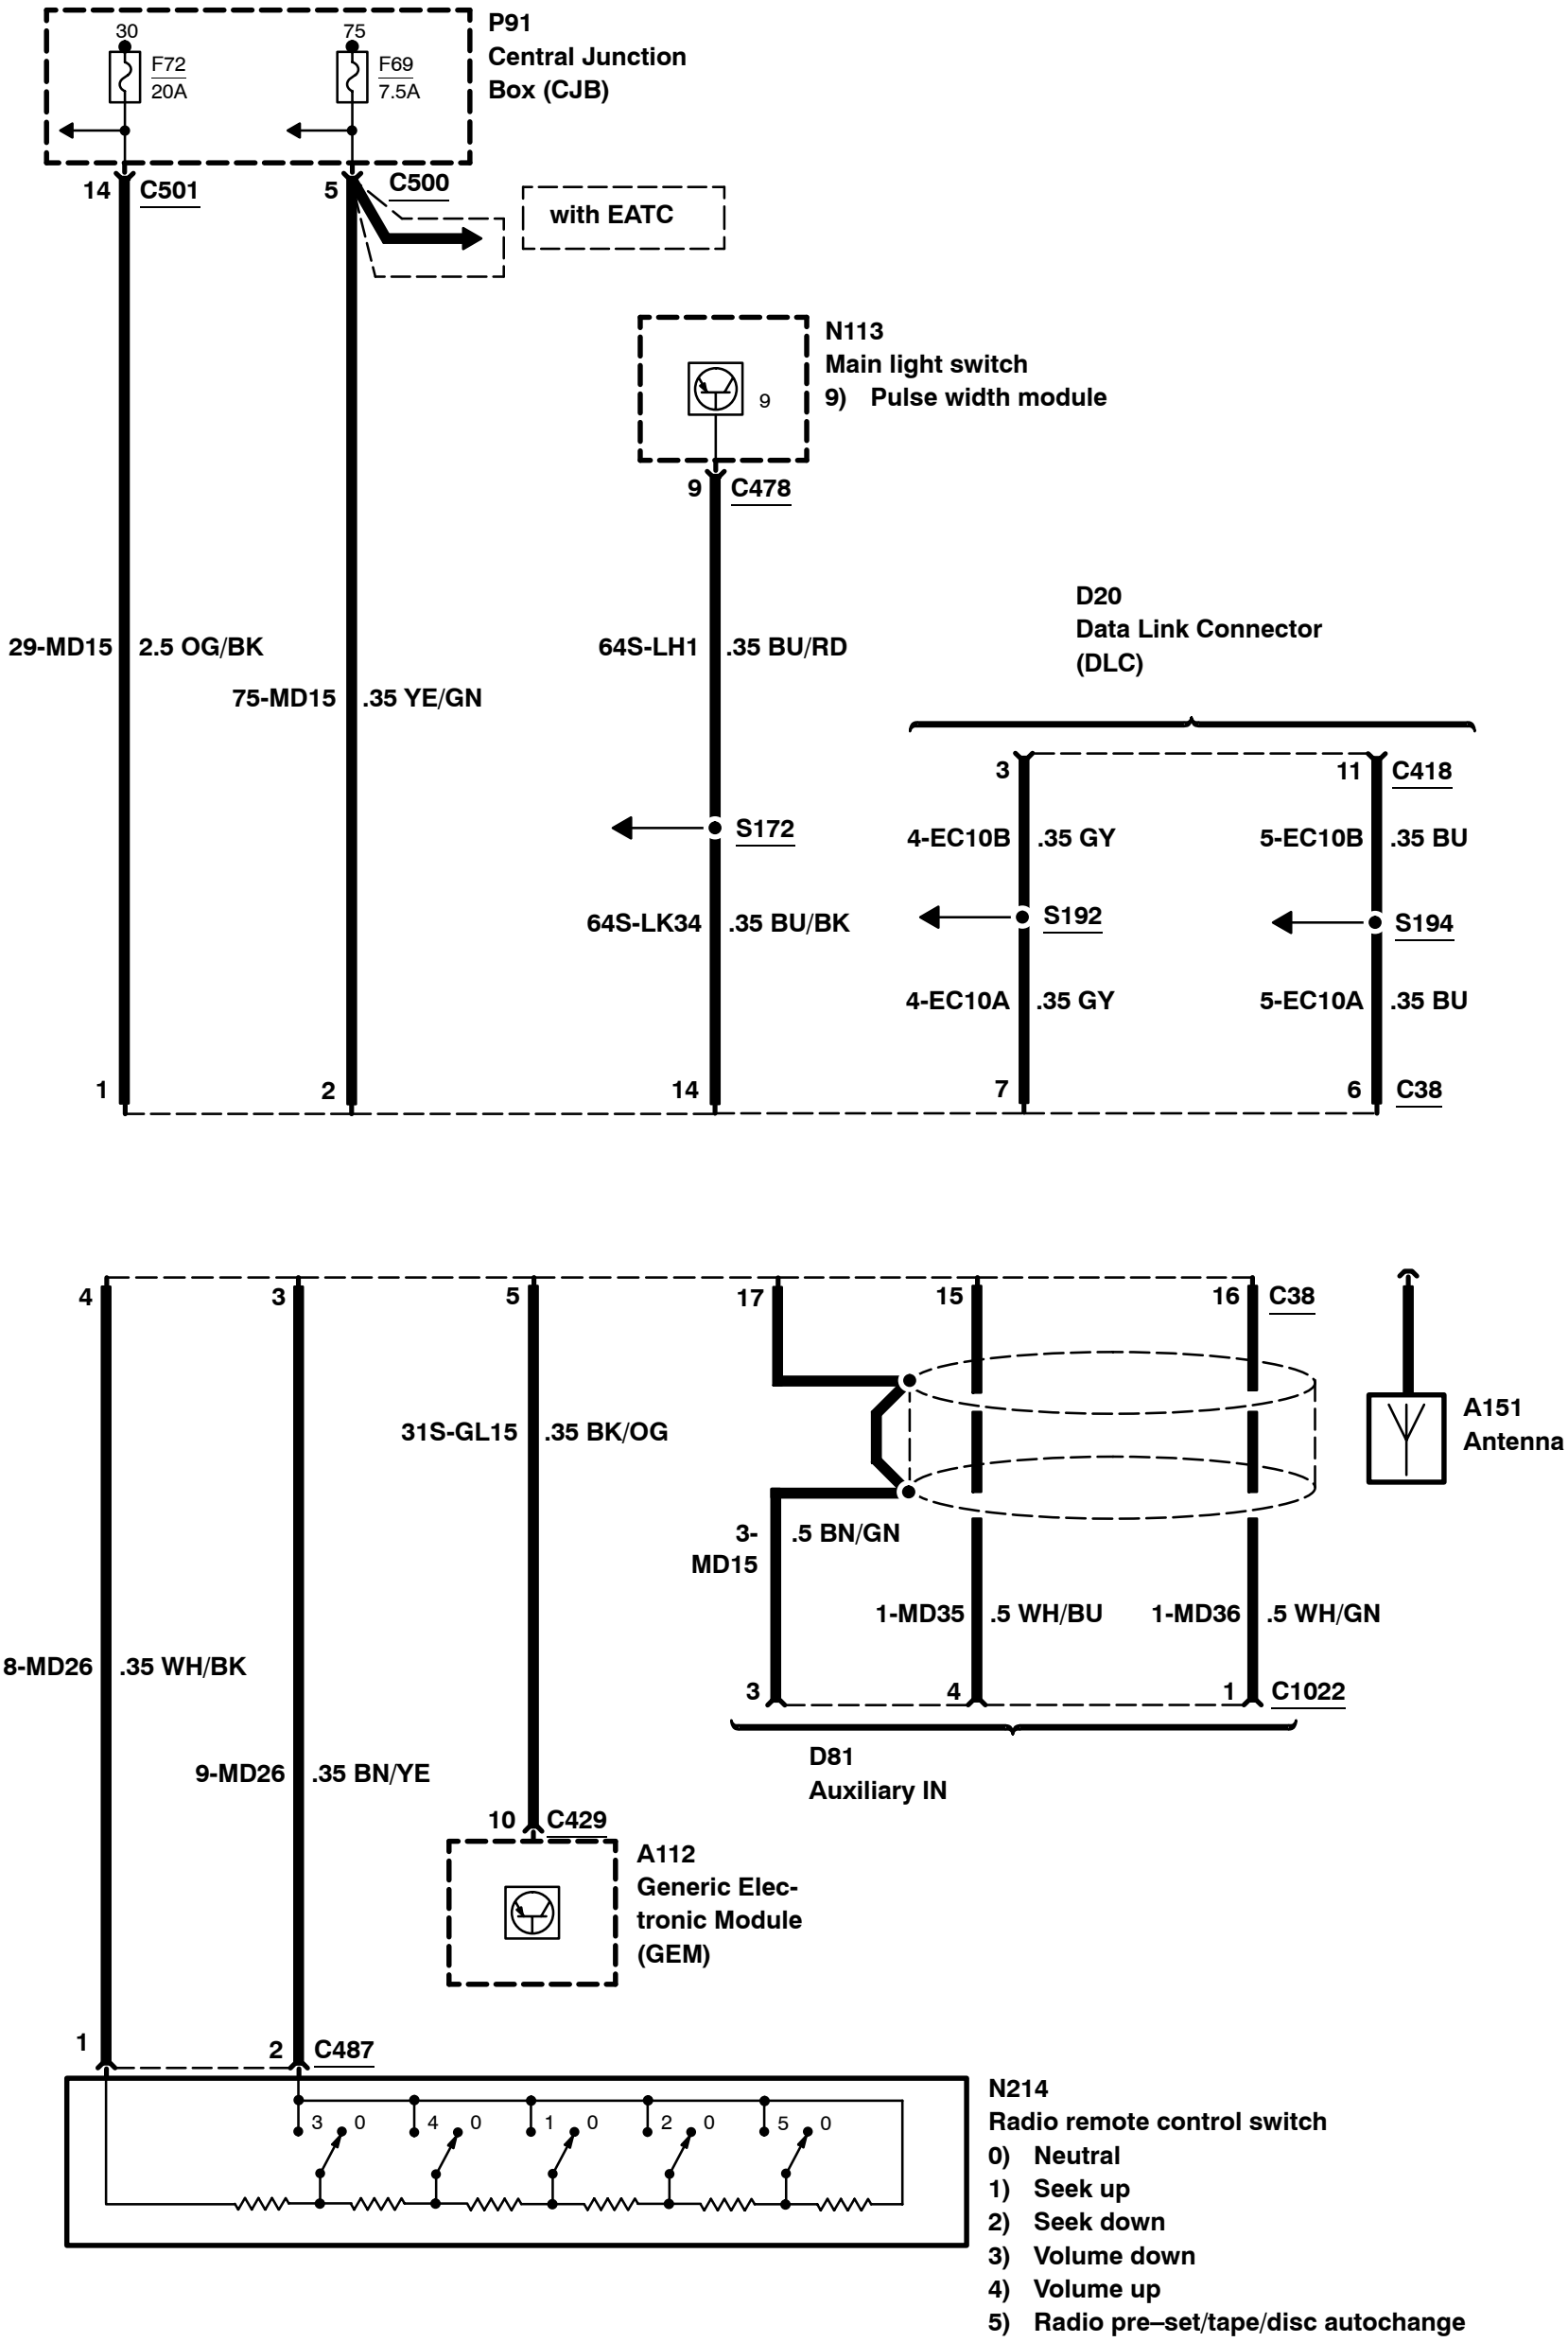


N214
Radio remote control switch
0) Neutral
1) Seek up
2) Seek down
3) Volume down
4) Volume up
5) Radio pre–set/tape/disc autochange


Audio Unit – Pre–equipment pack, Petrol engines

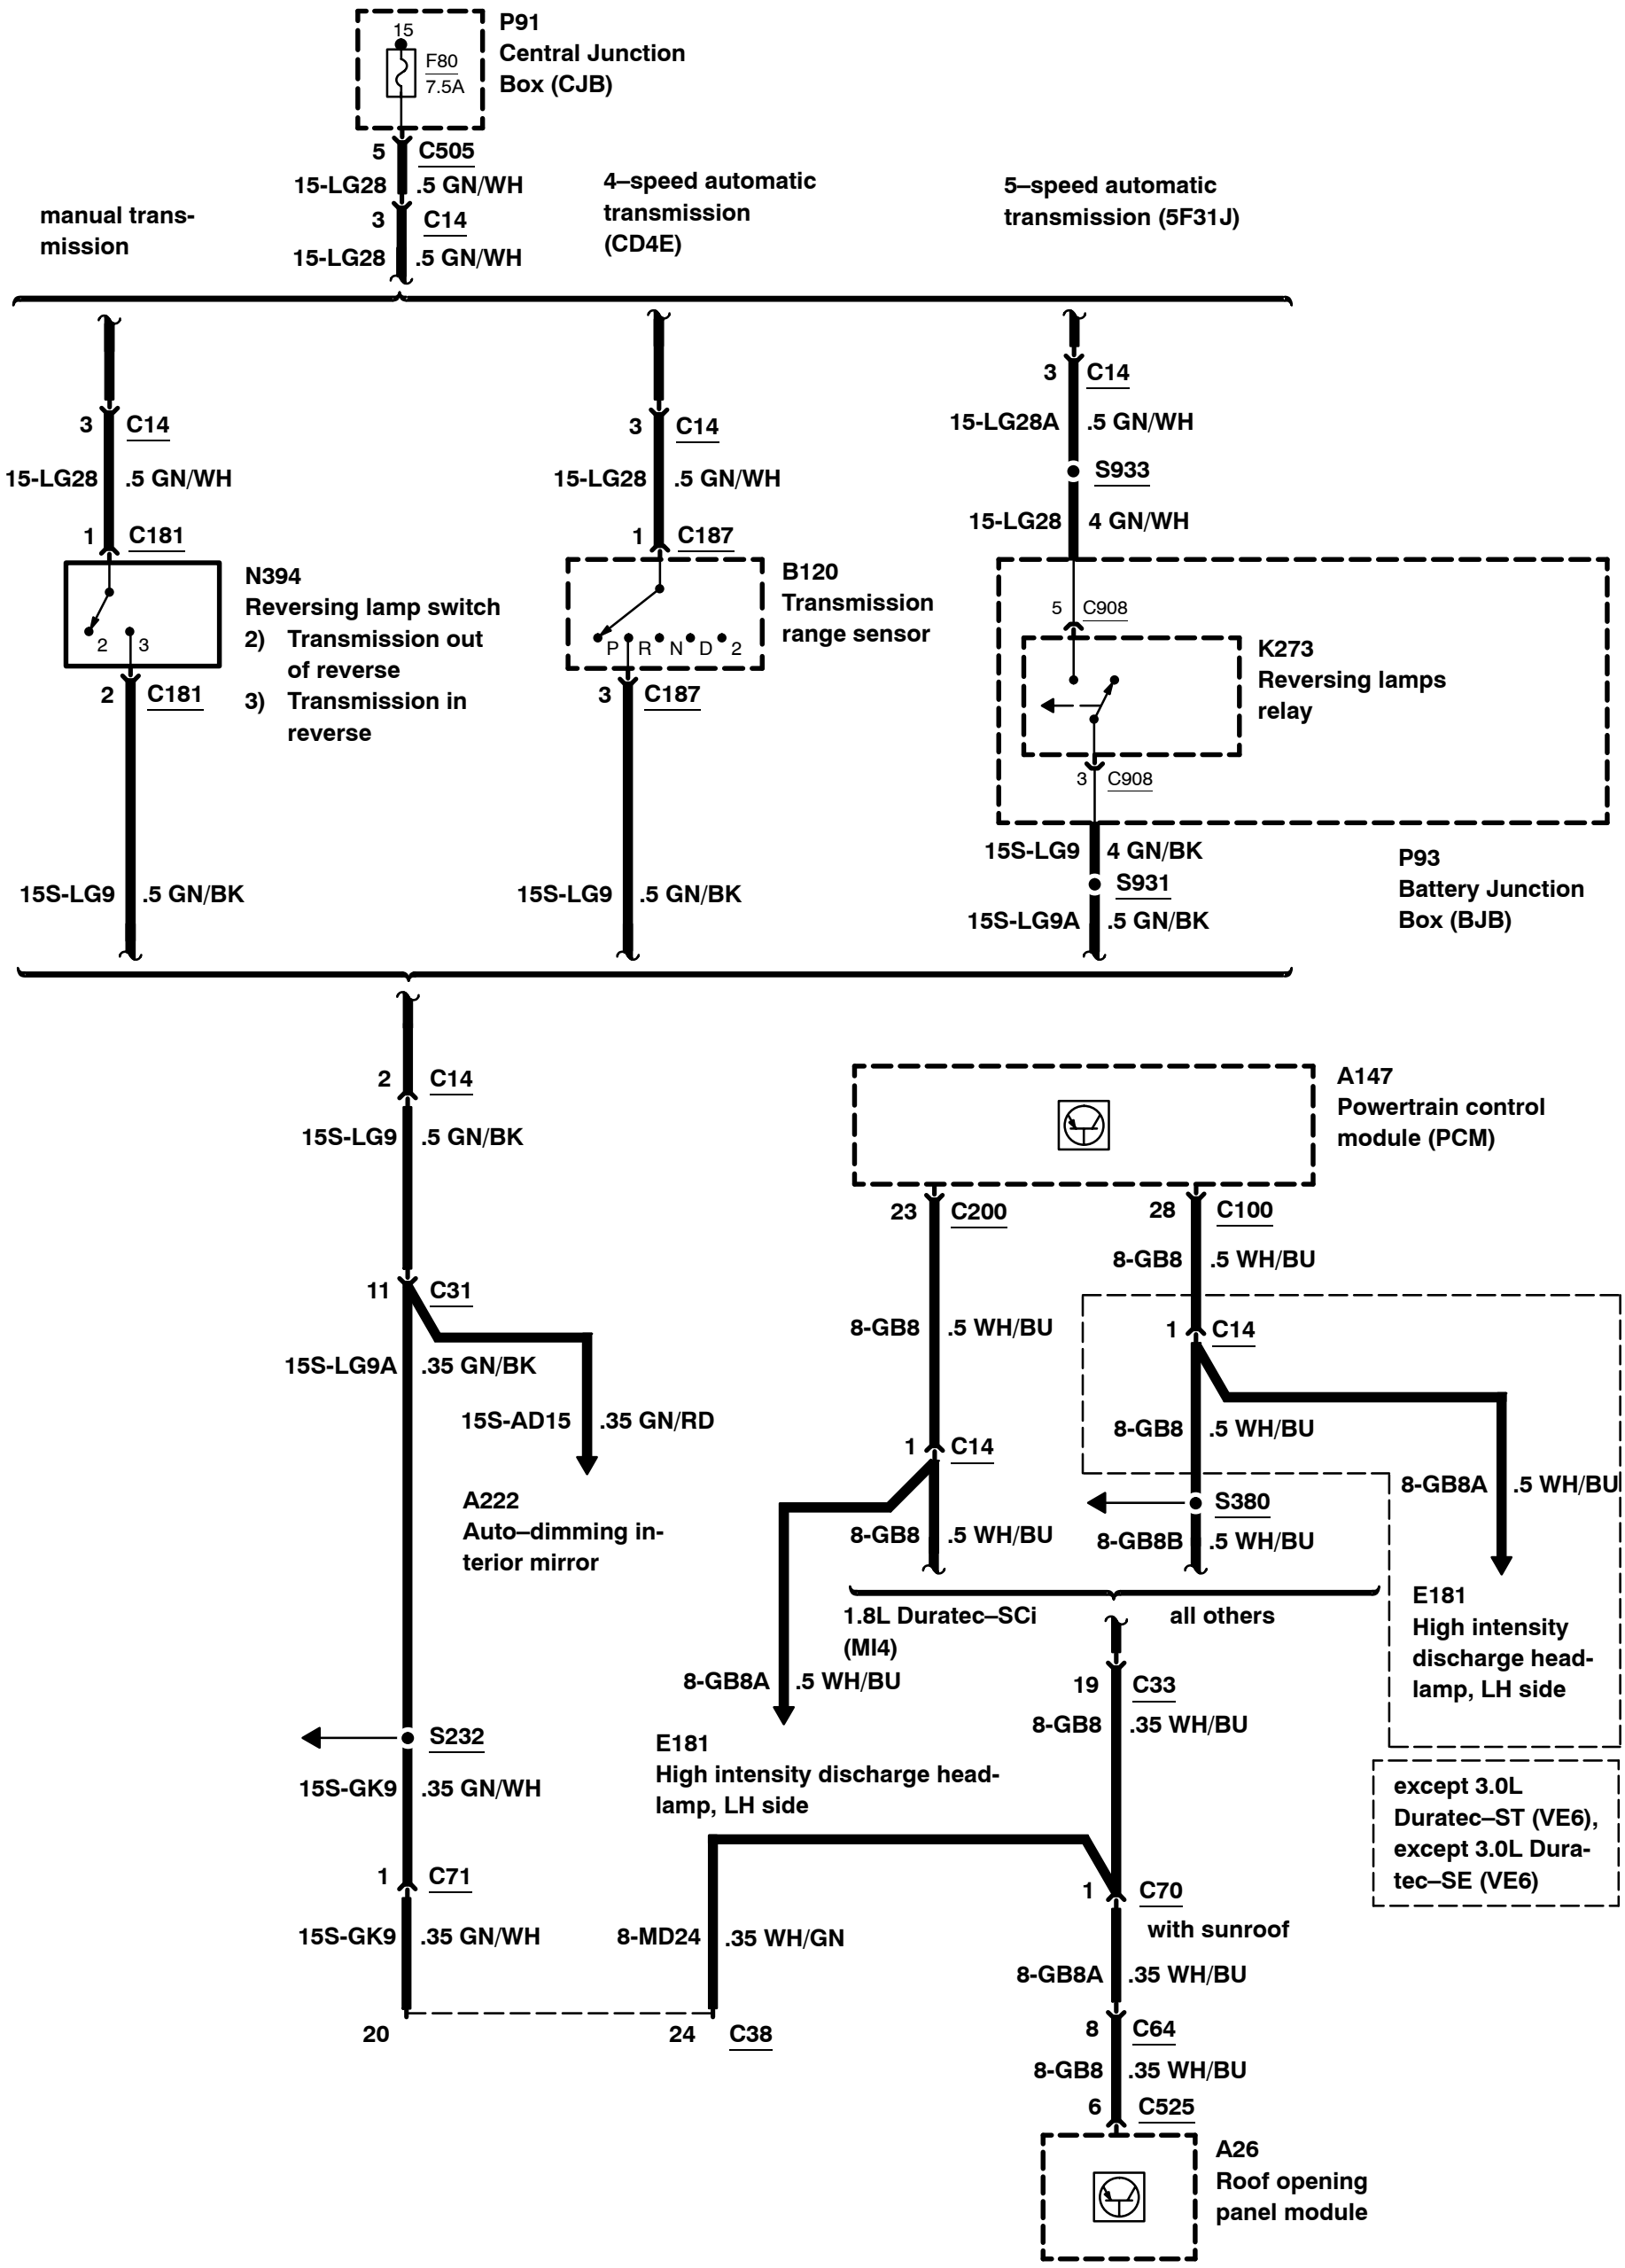


Audio Unit – Pre–equipment pack, Diesel engines

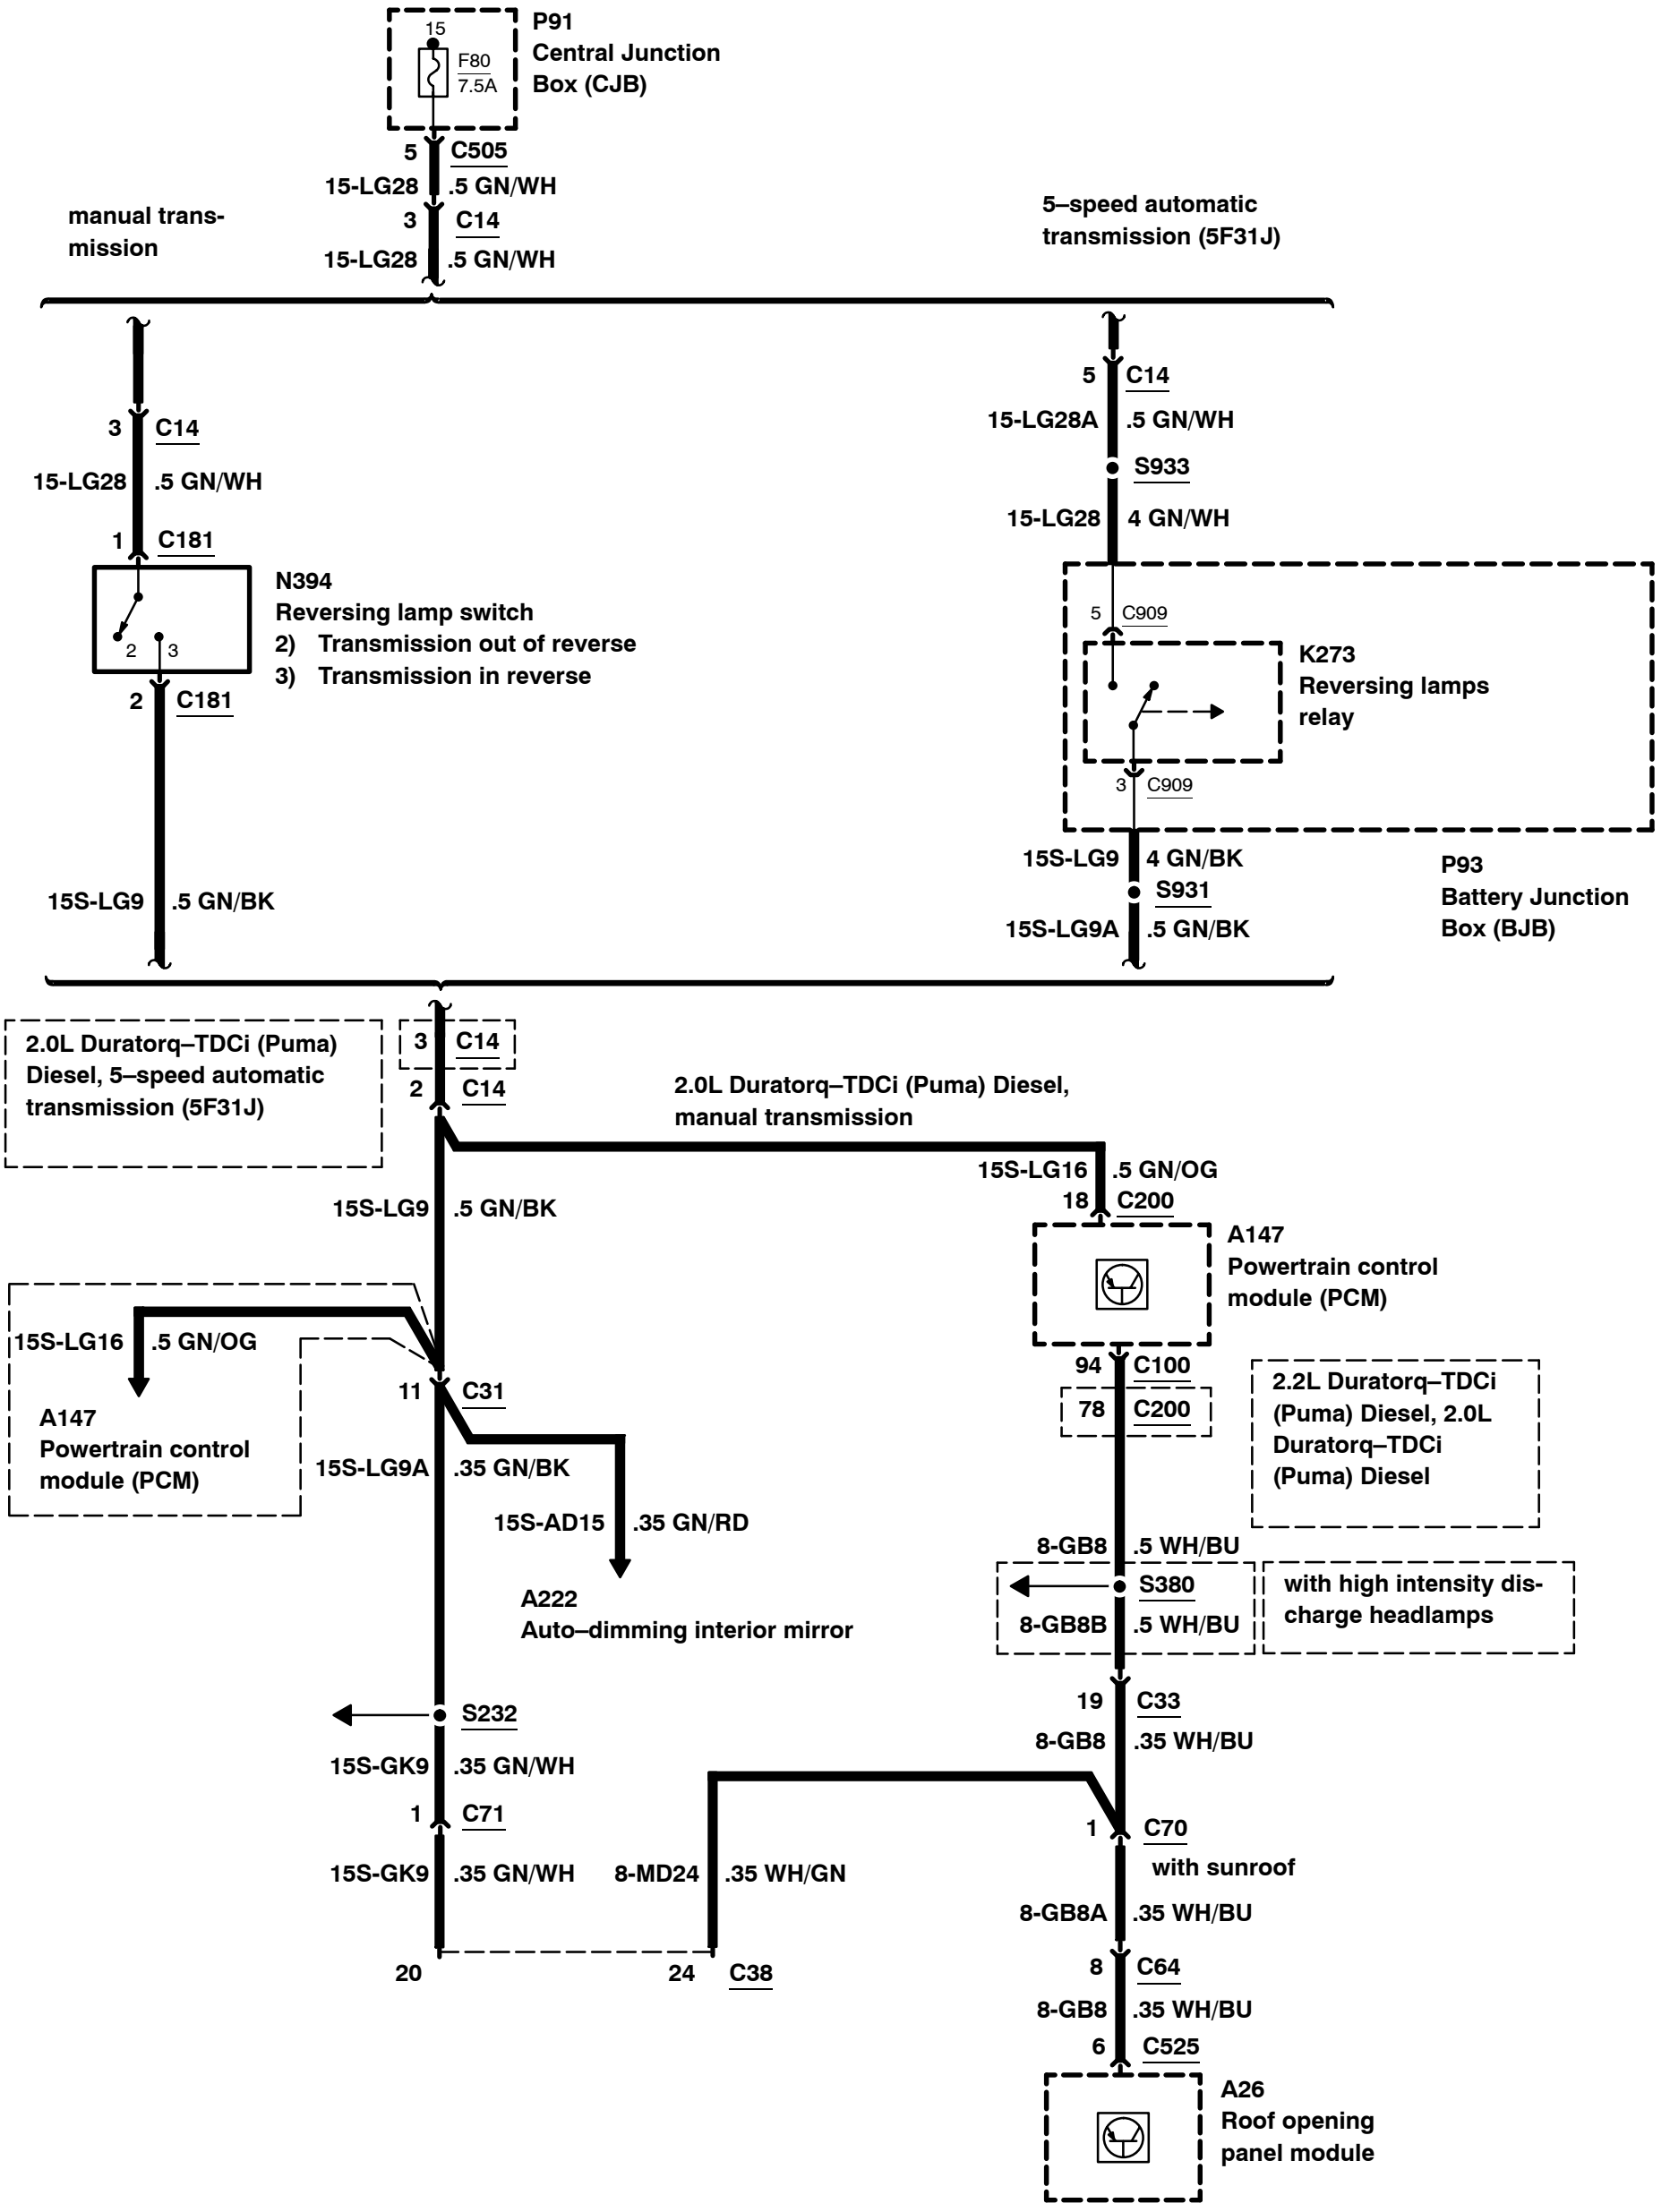


Audio Unit – without external CD changer and video system

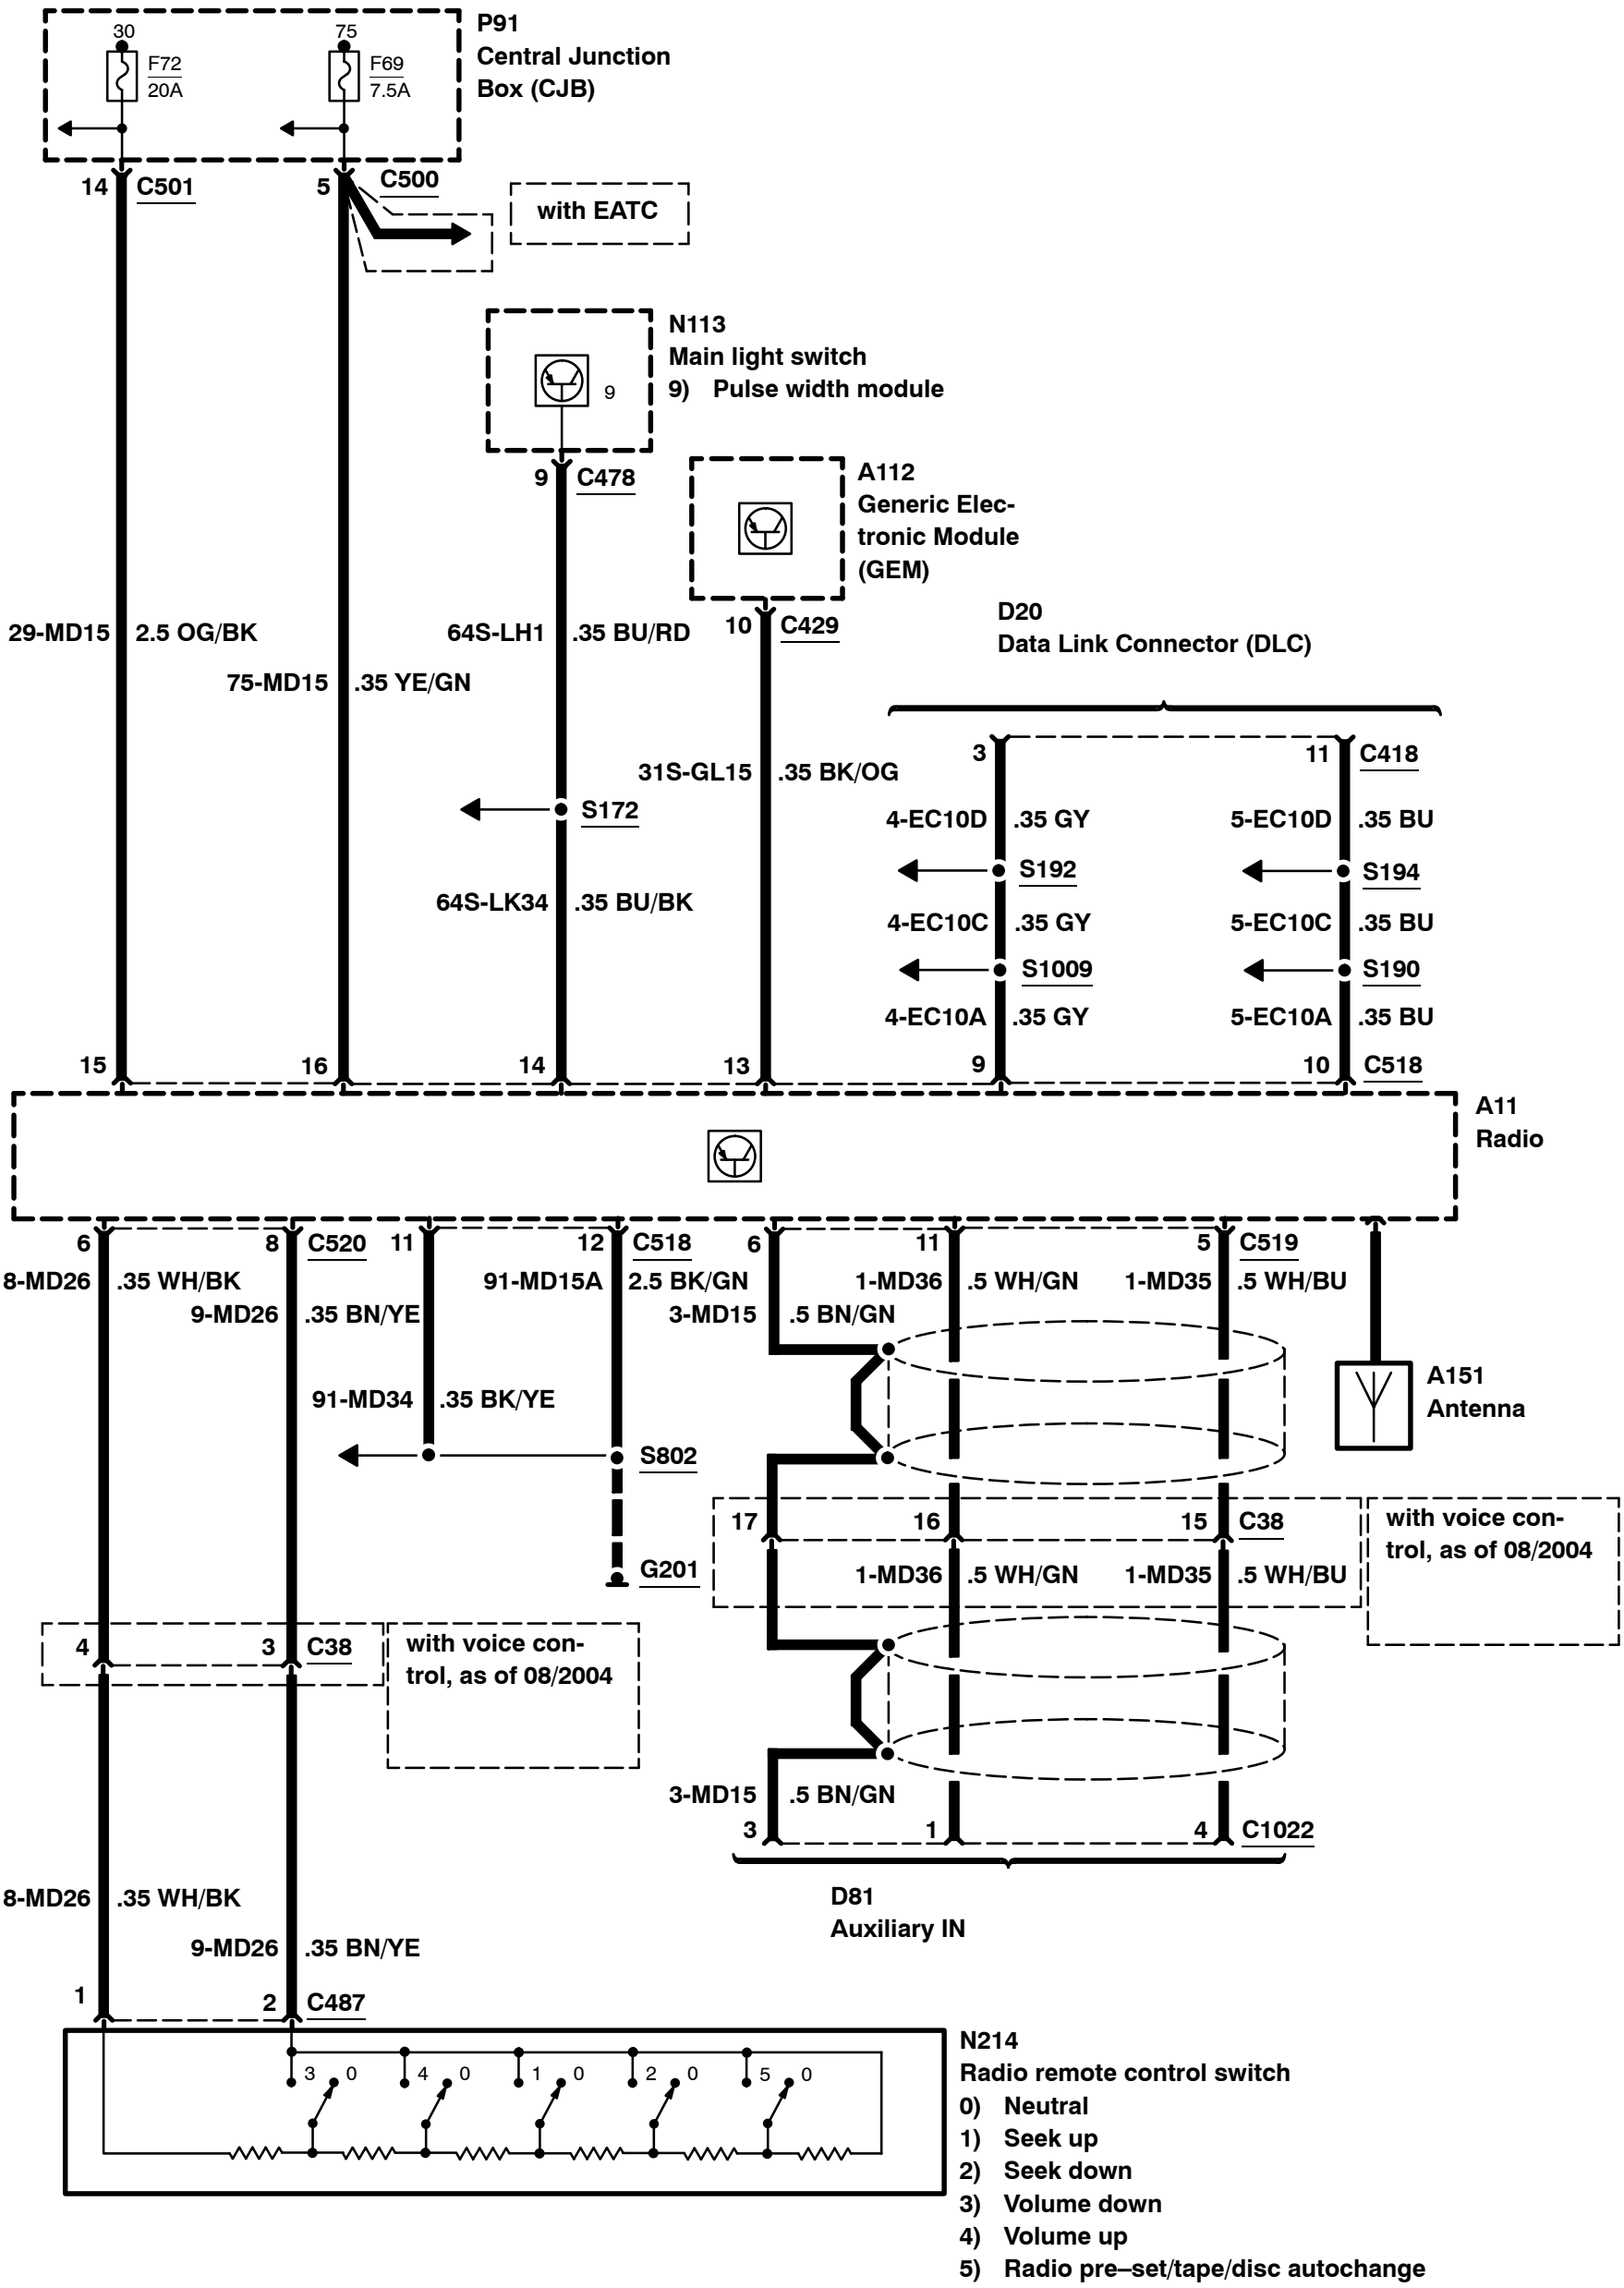


Audio Unit – with external CD changer and/or video system

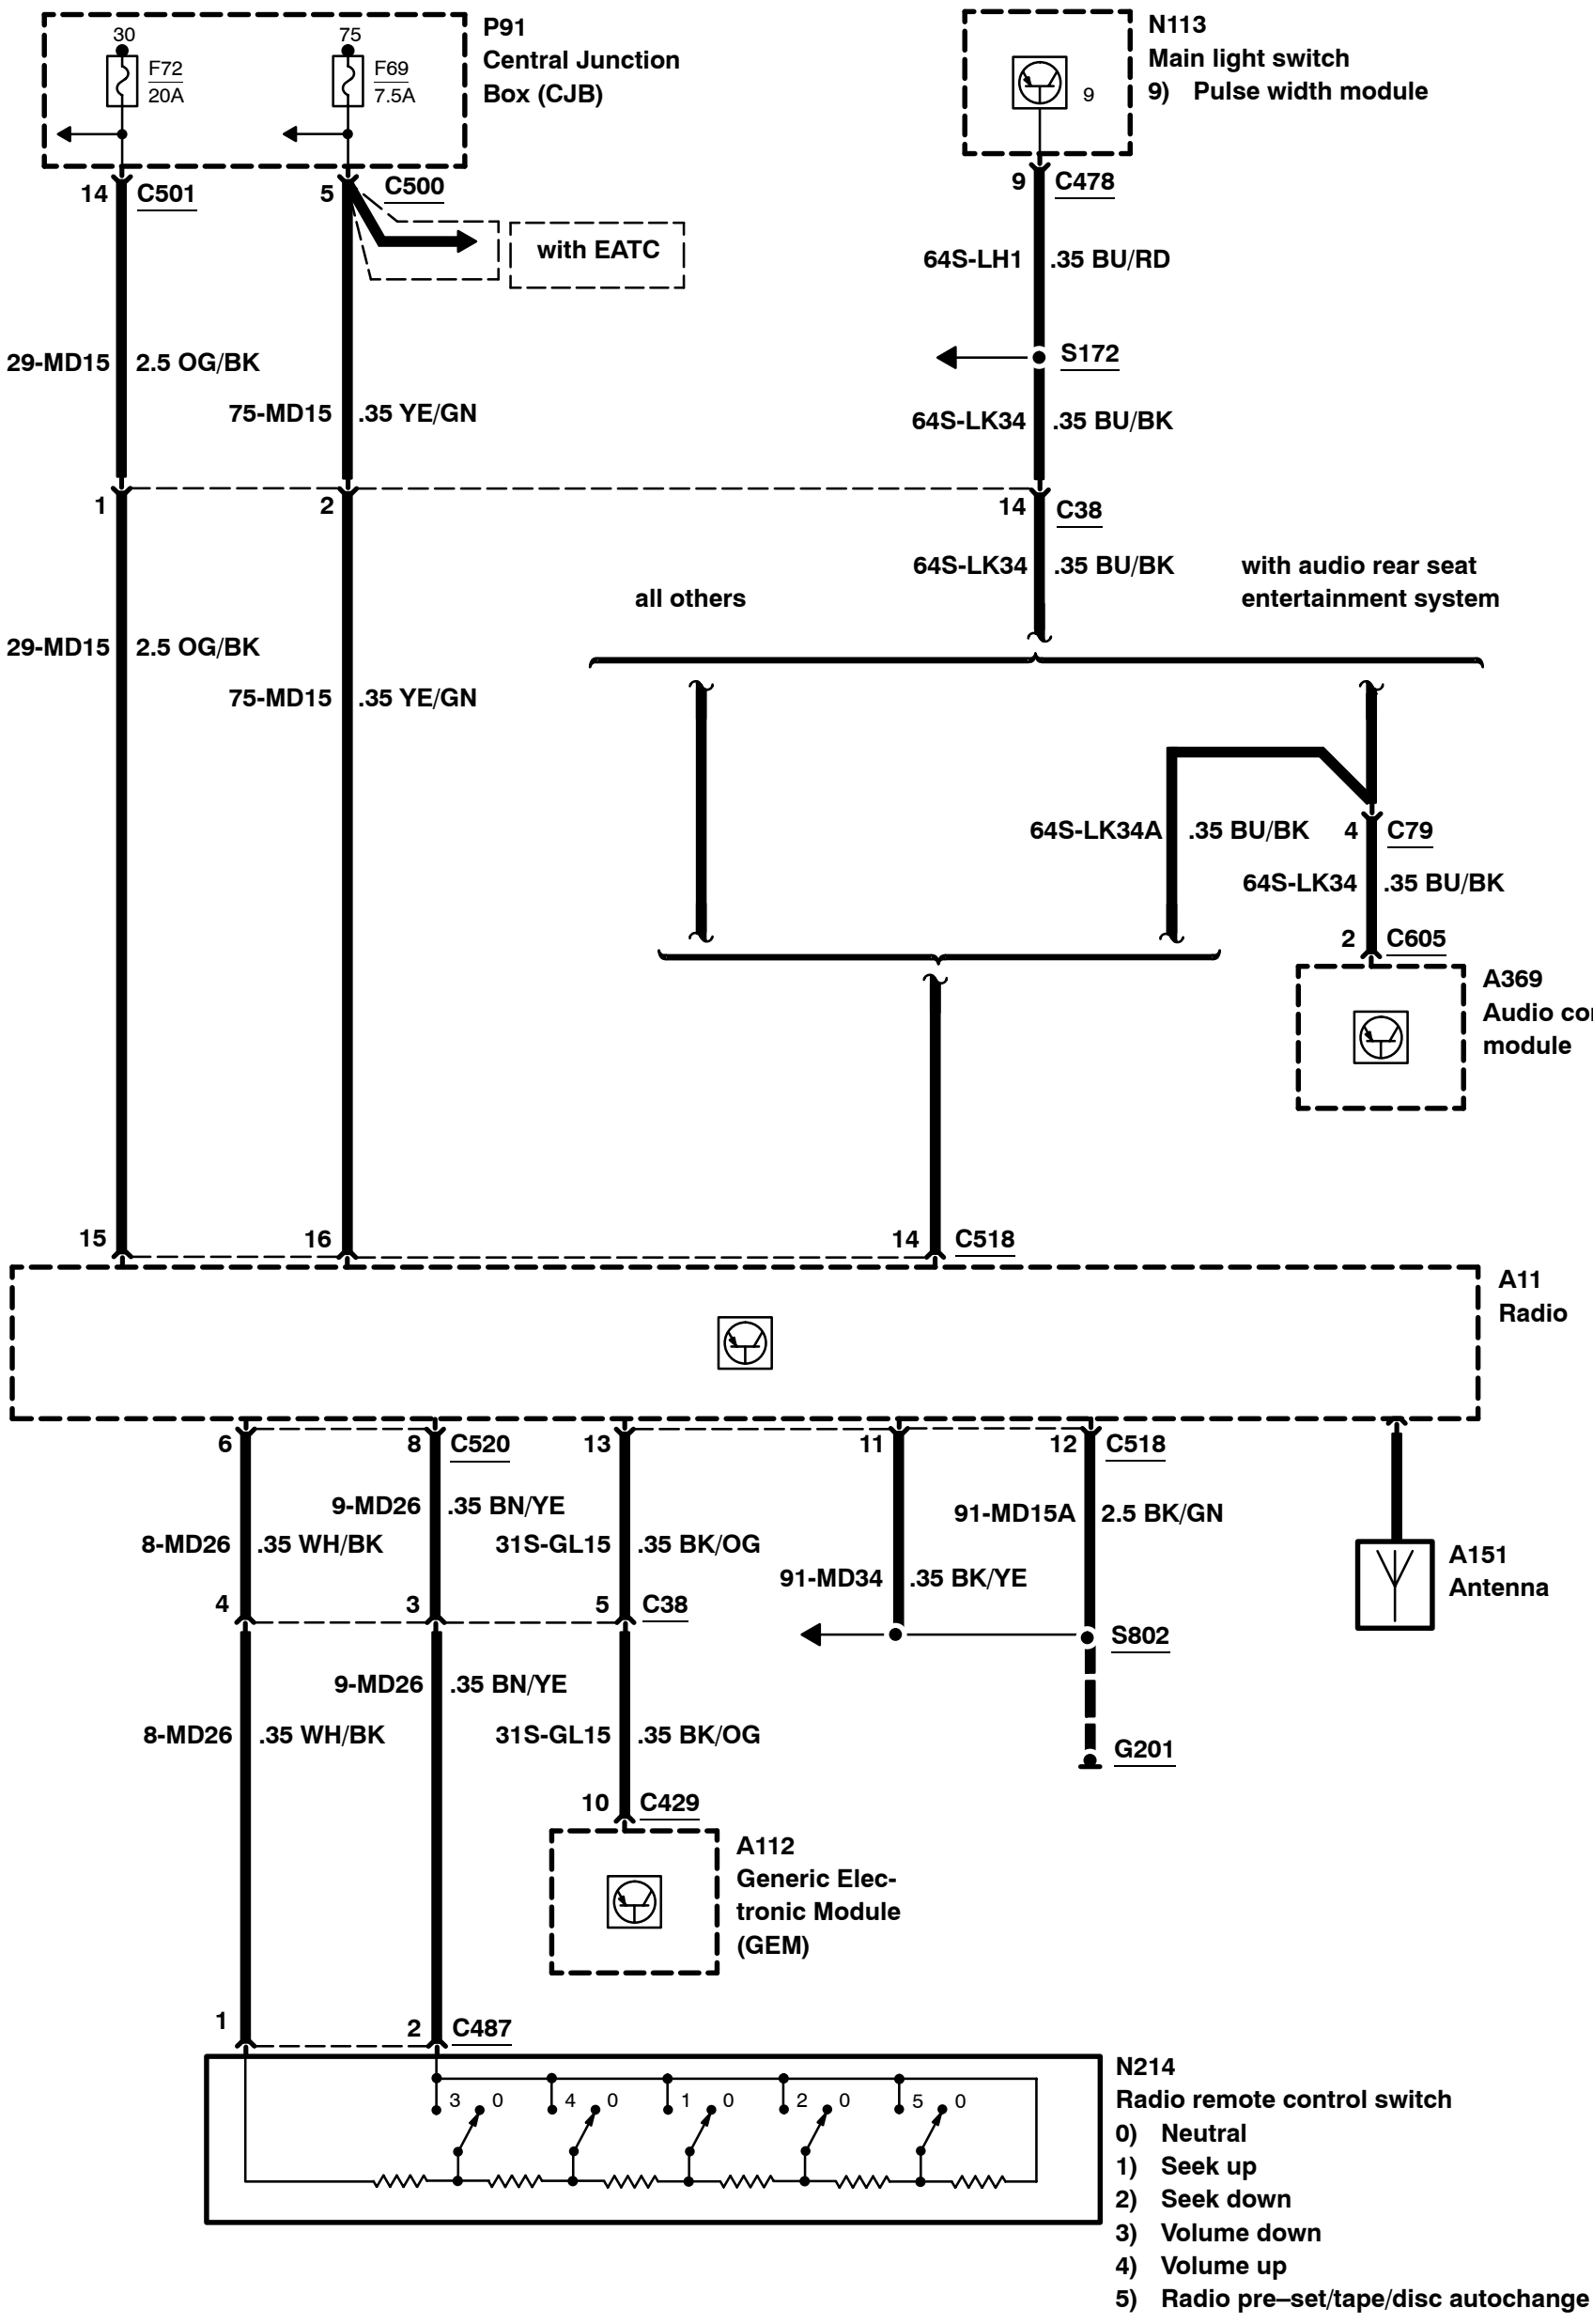


Audio Unit – with external CD changer

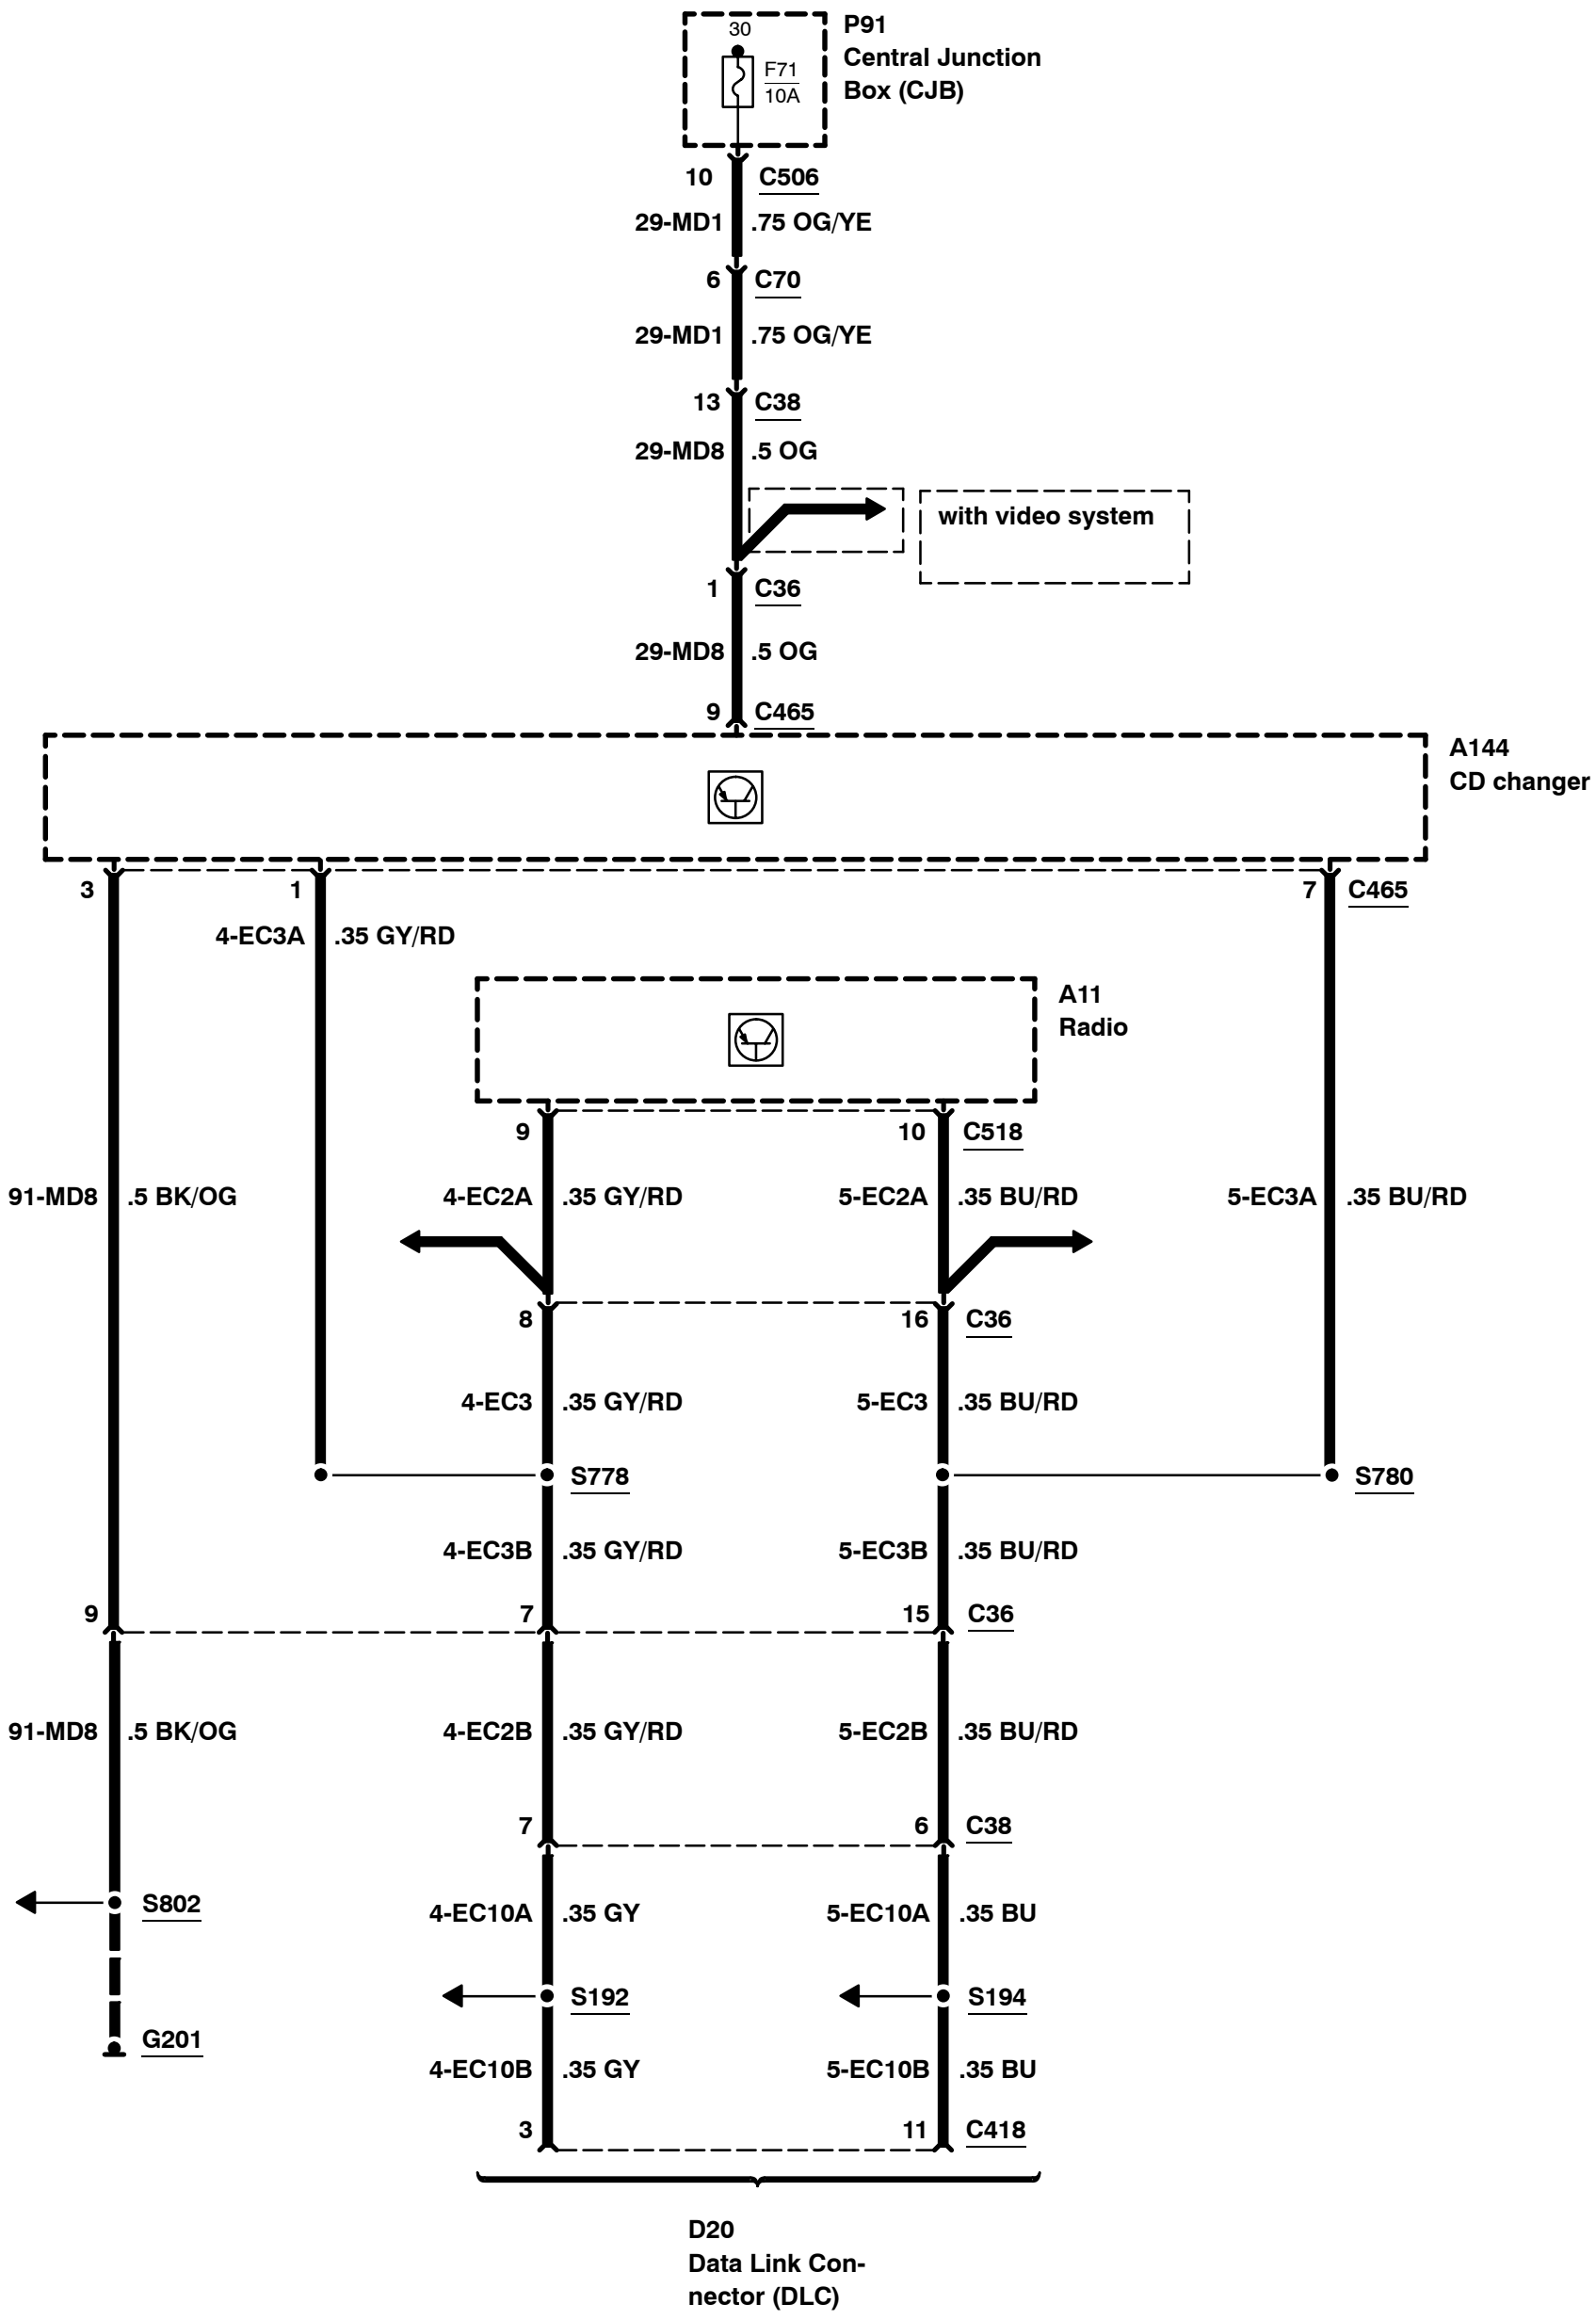


Audio Unit – with external CD changer

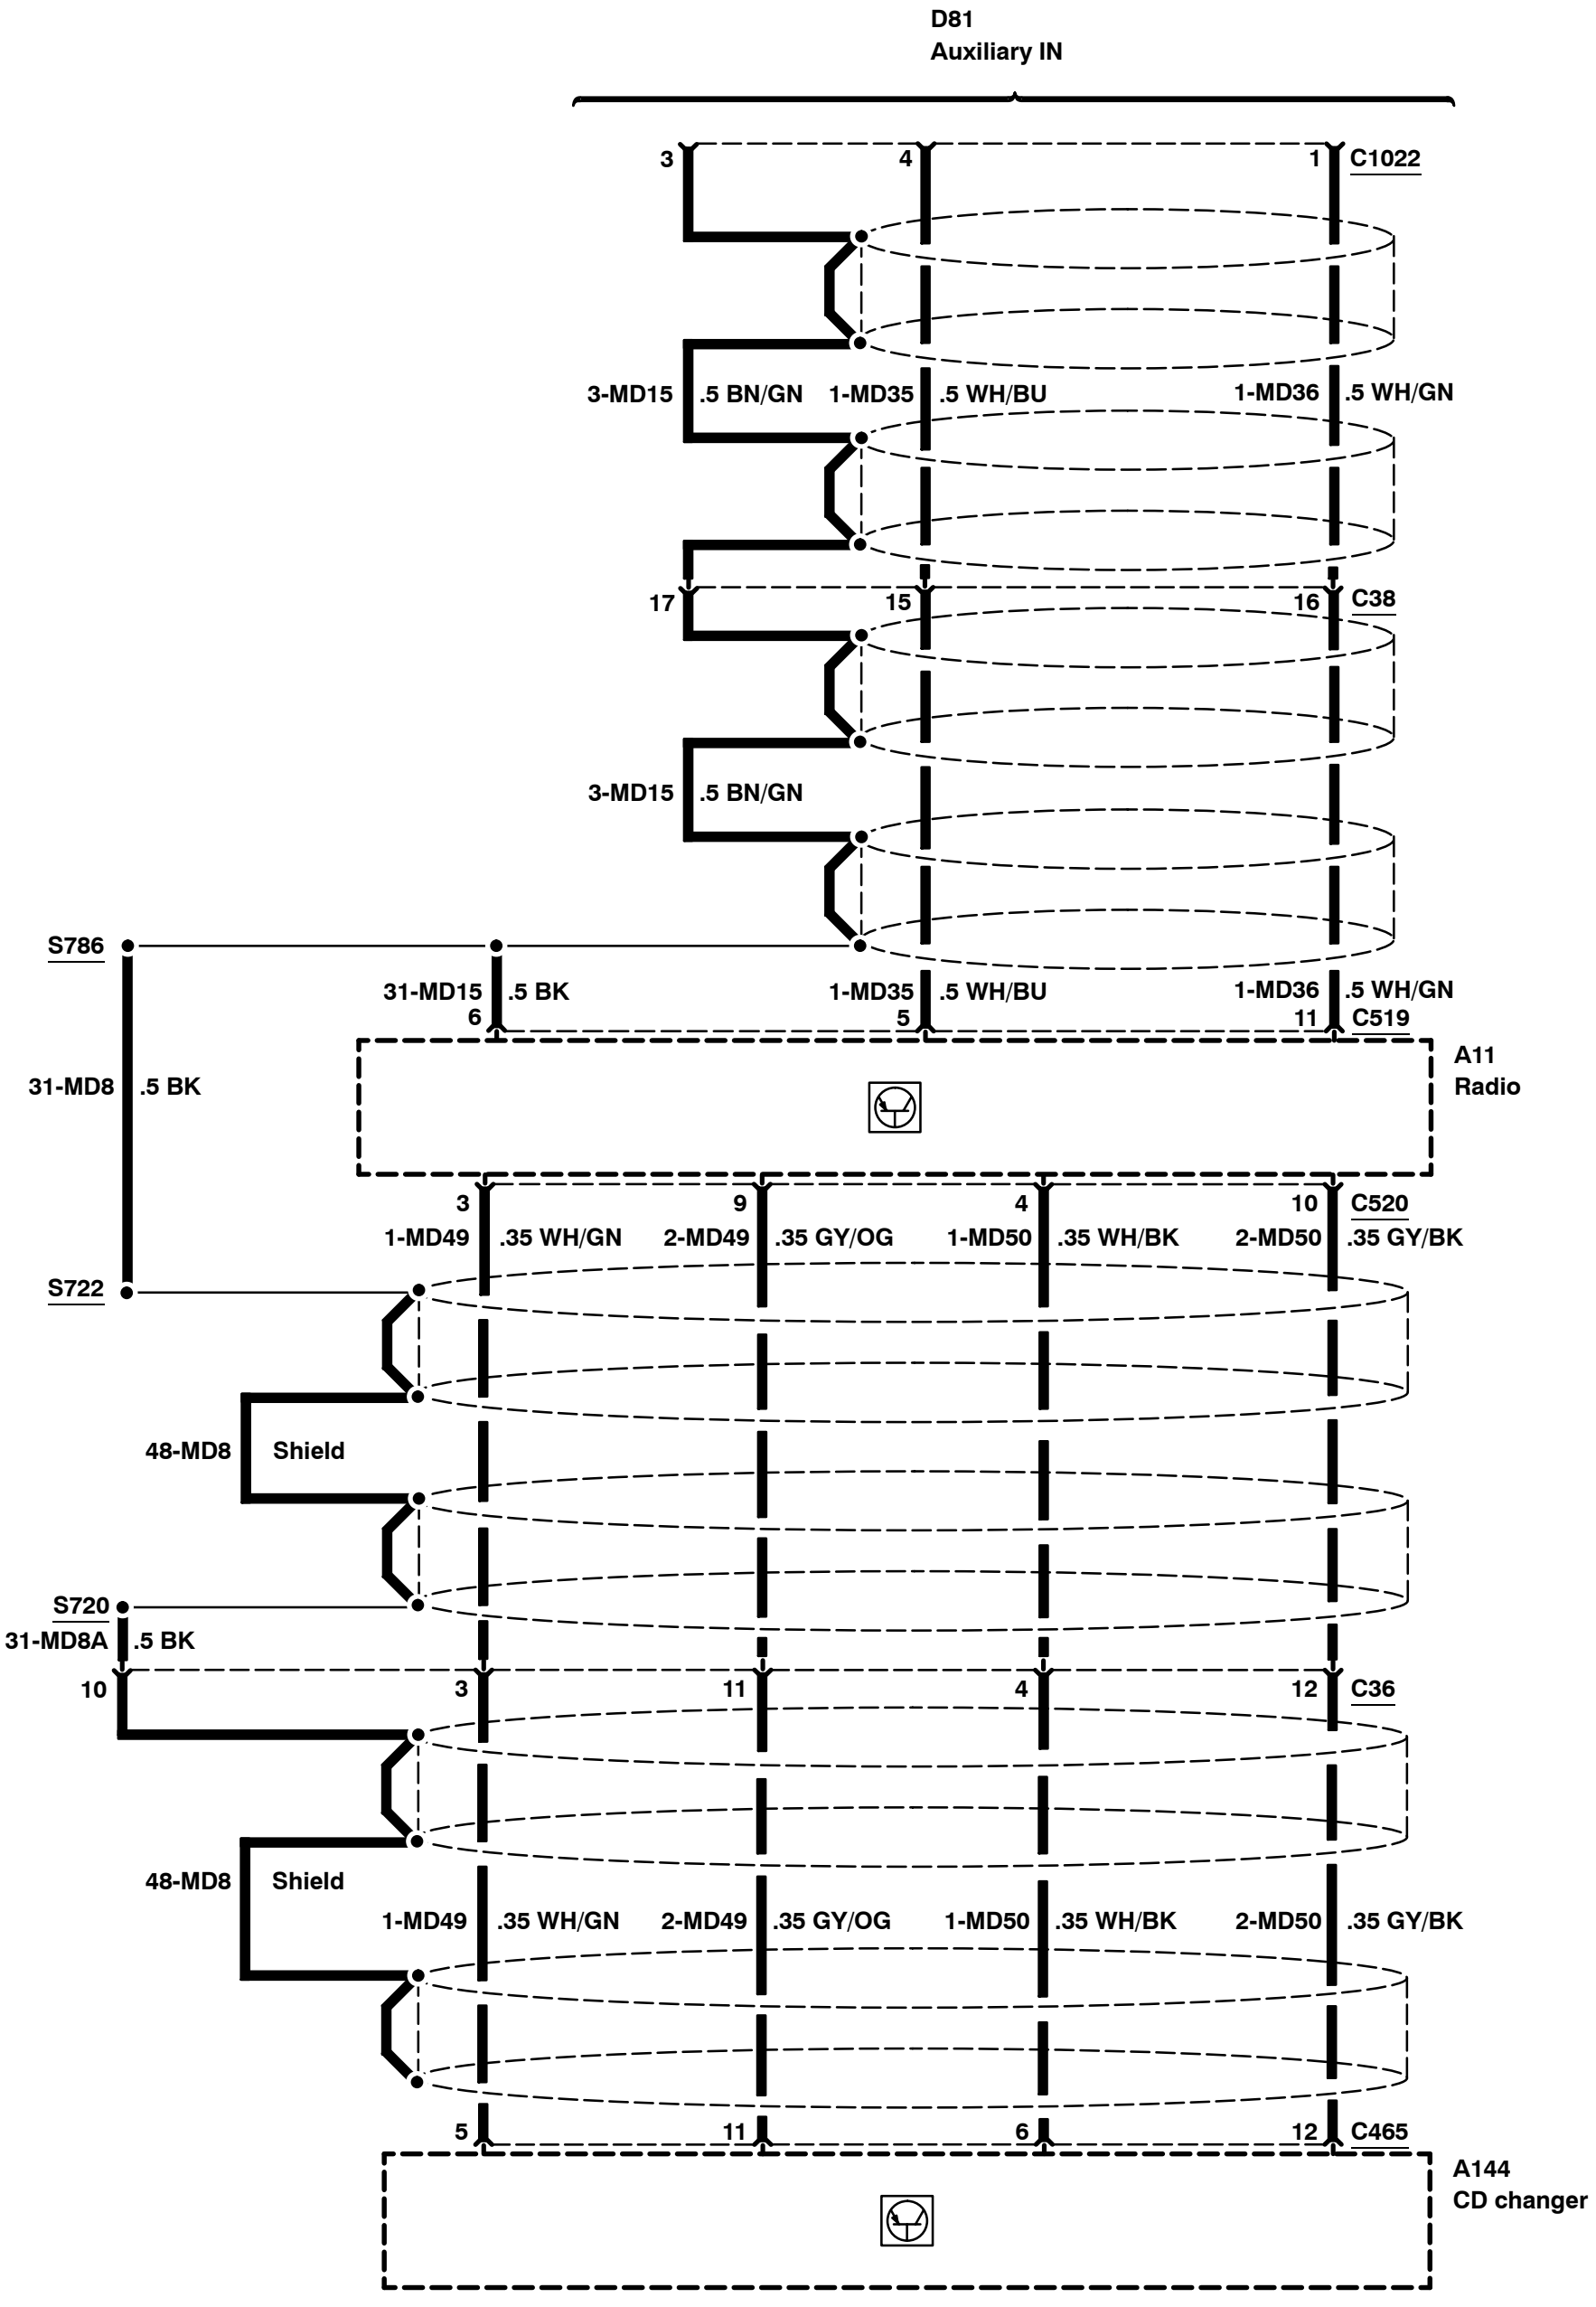


Audio Unit – with video system

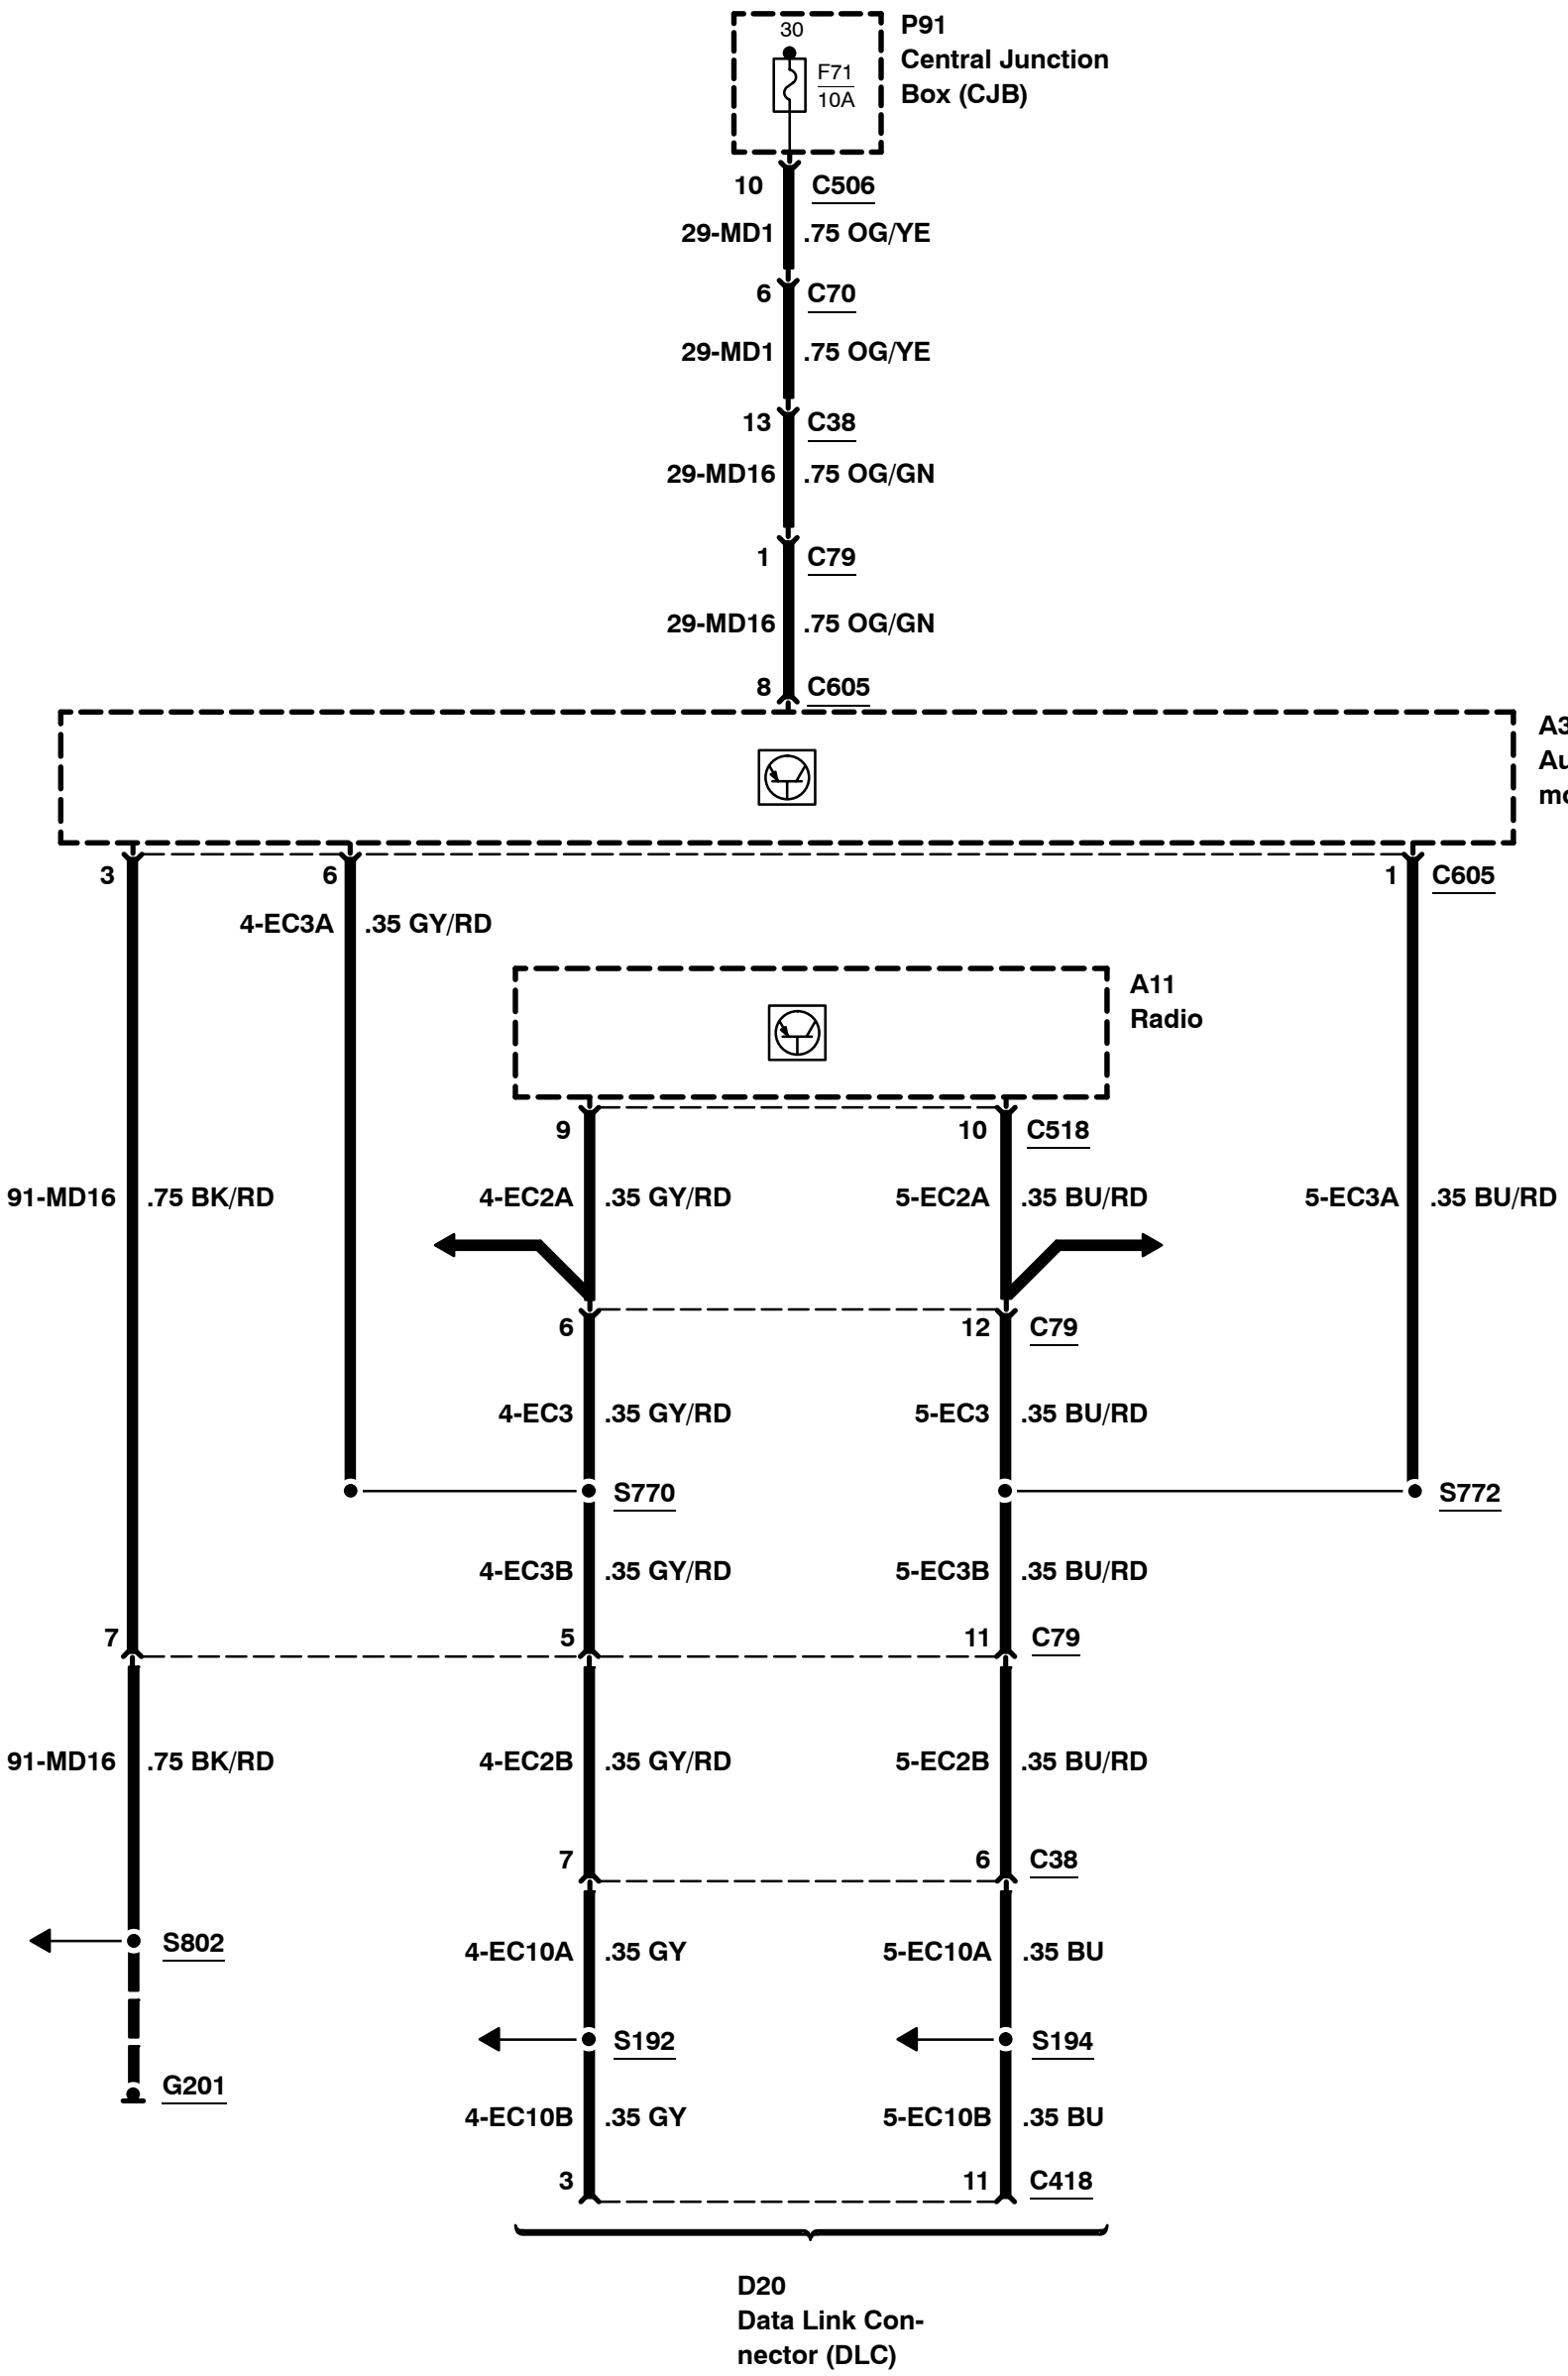


Audio Unit – with video system

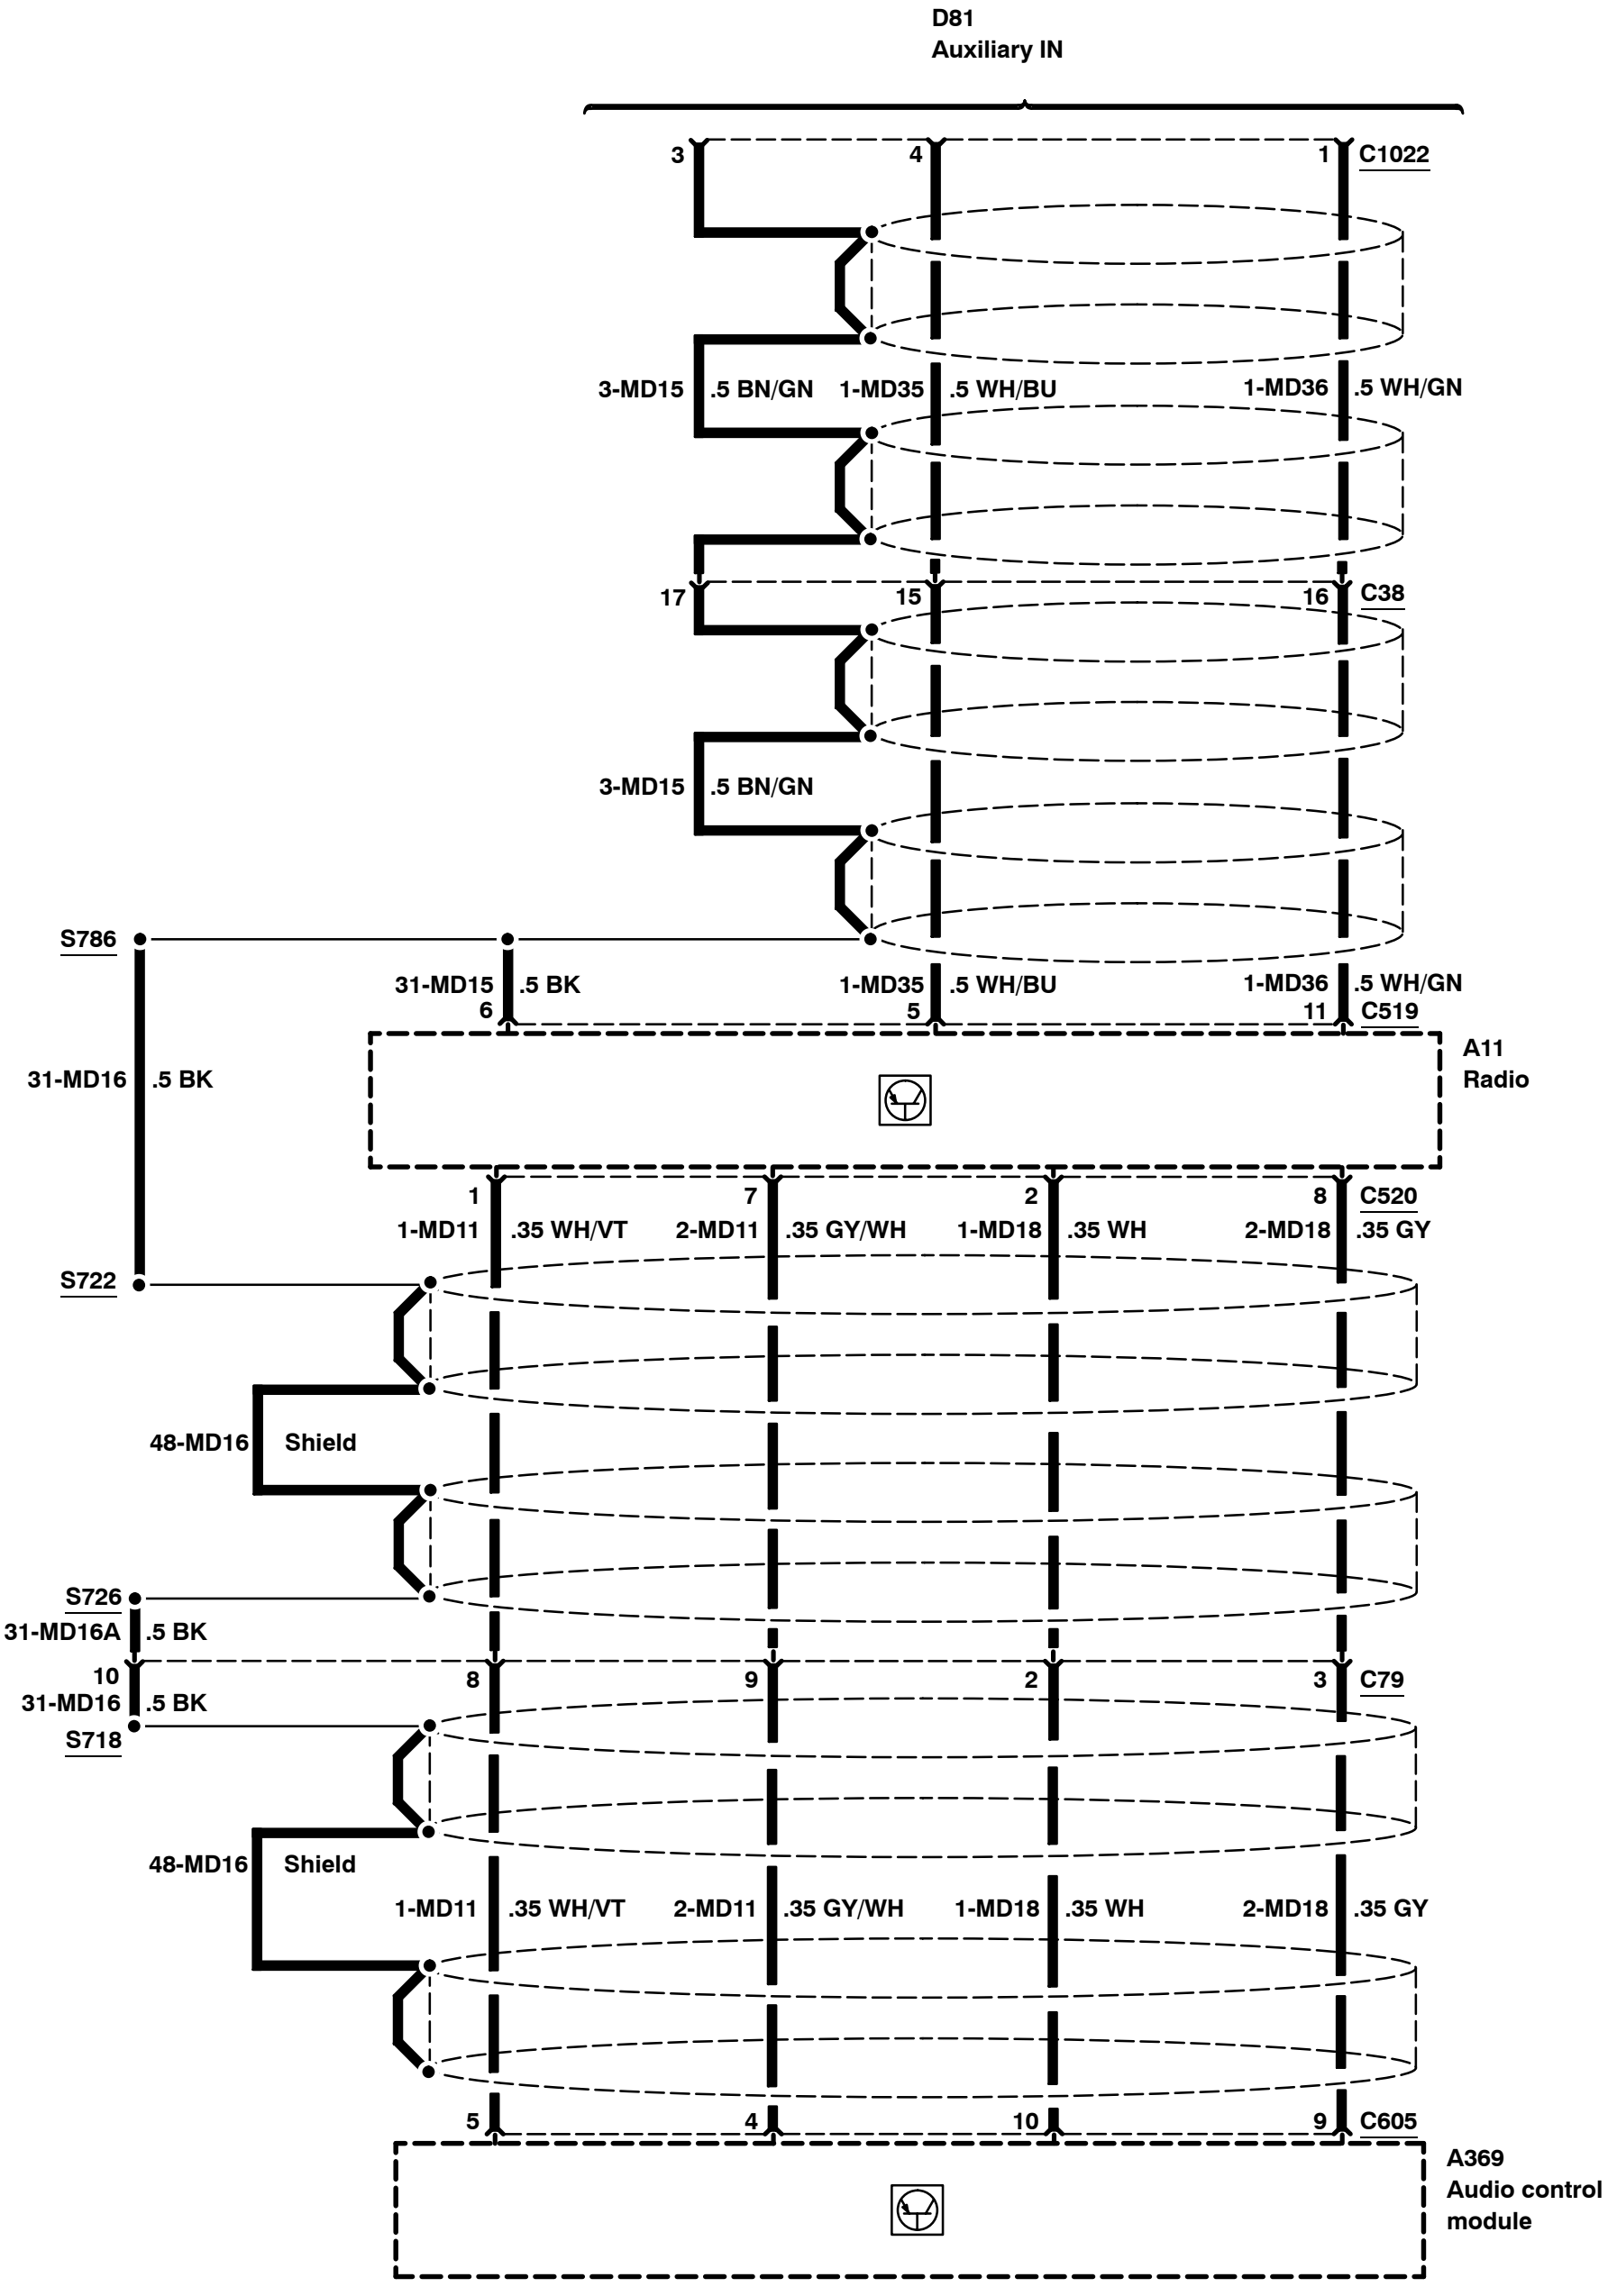


Audio Unit – Bluetooth voice control

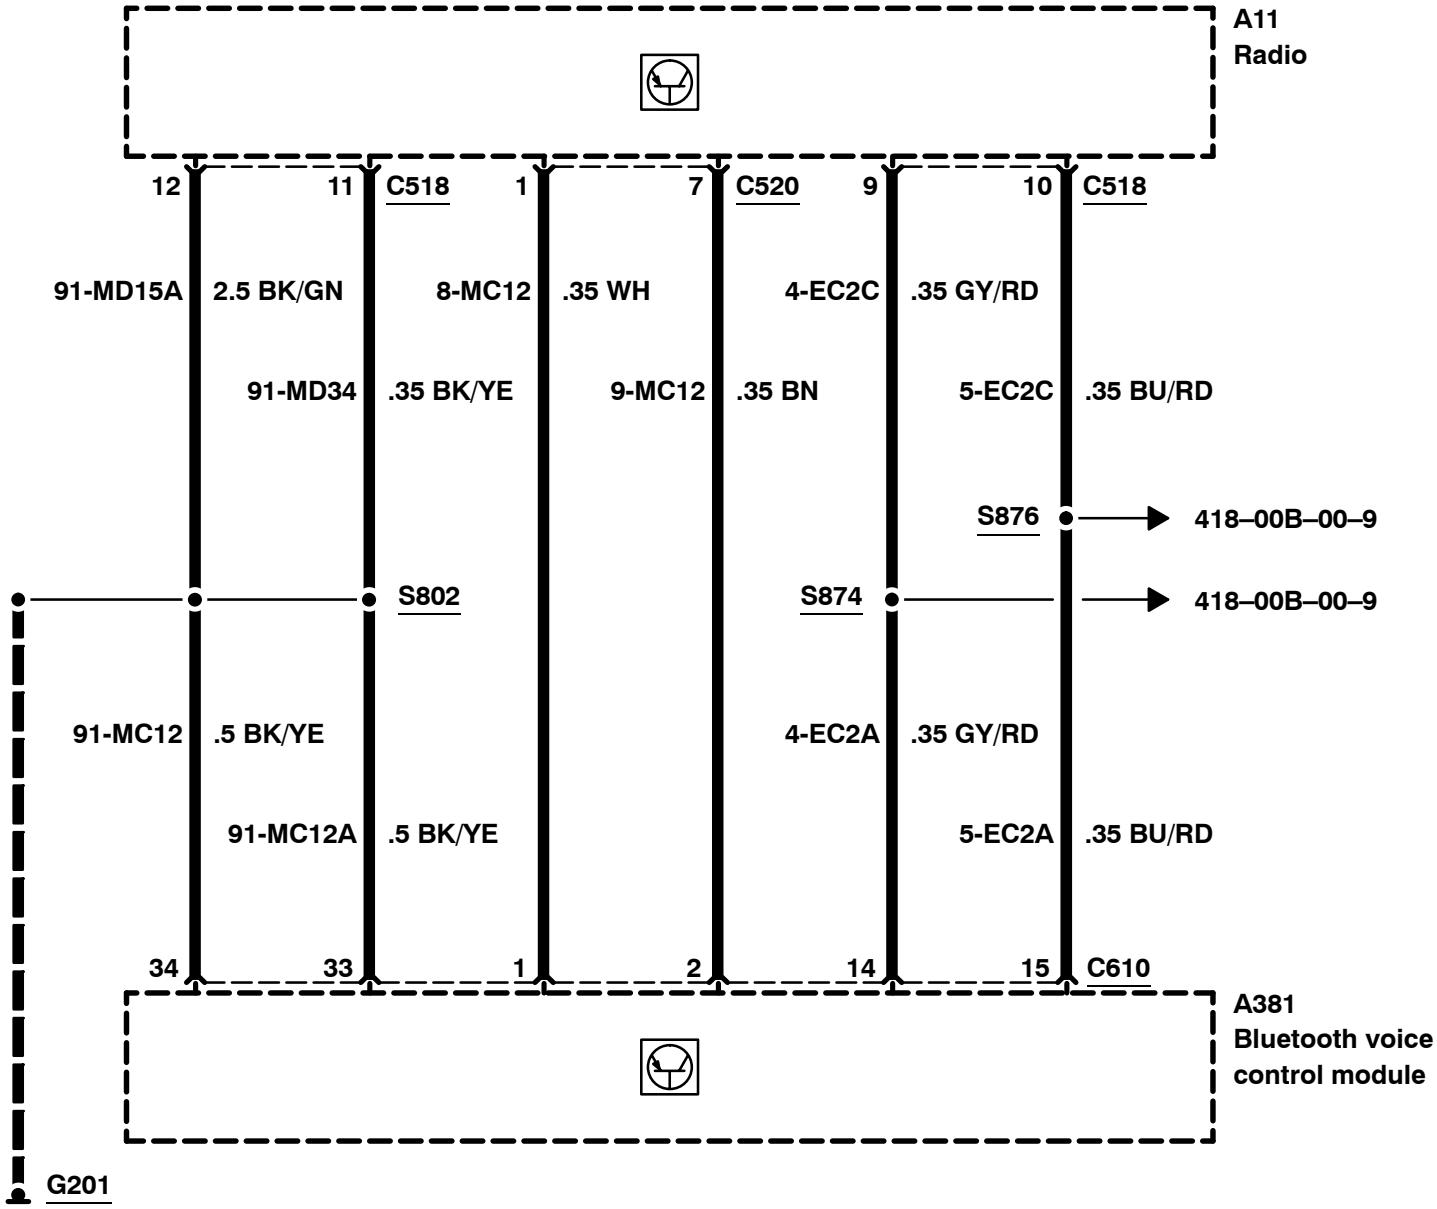


Speakers

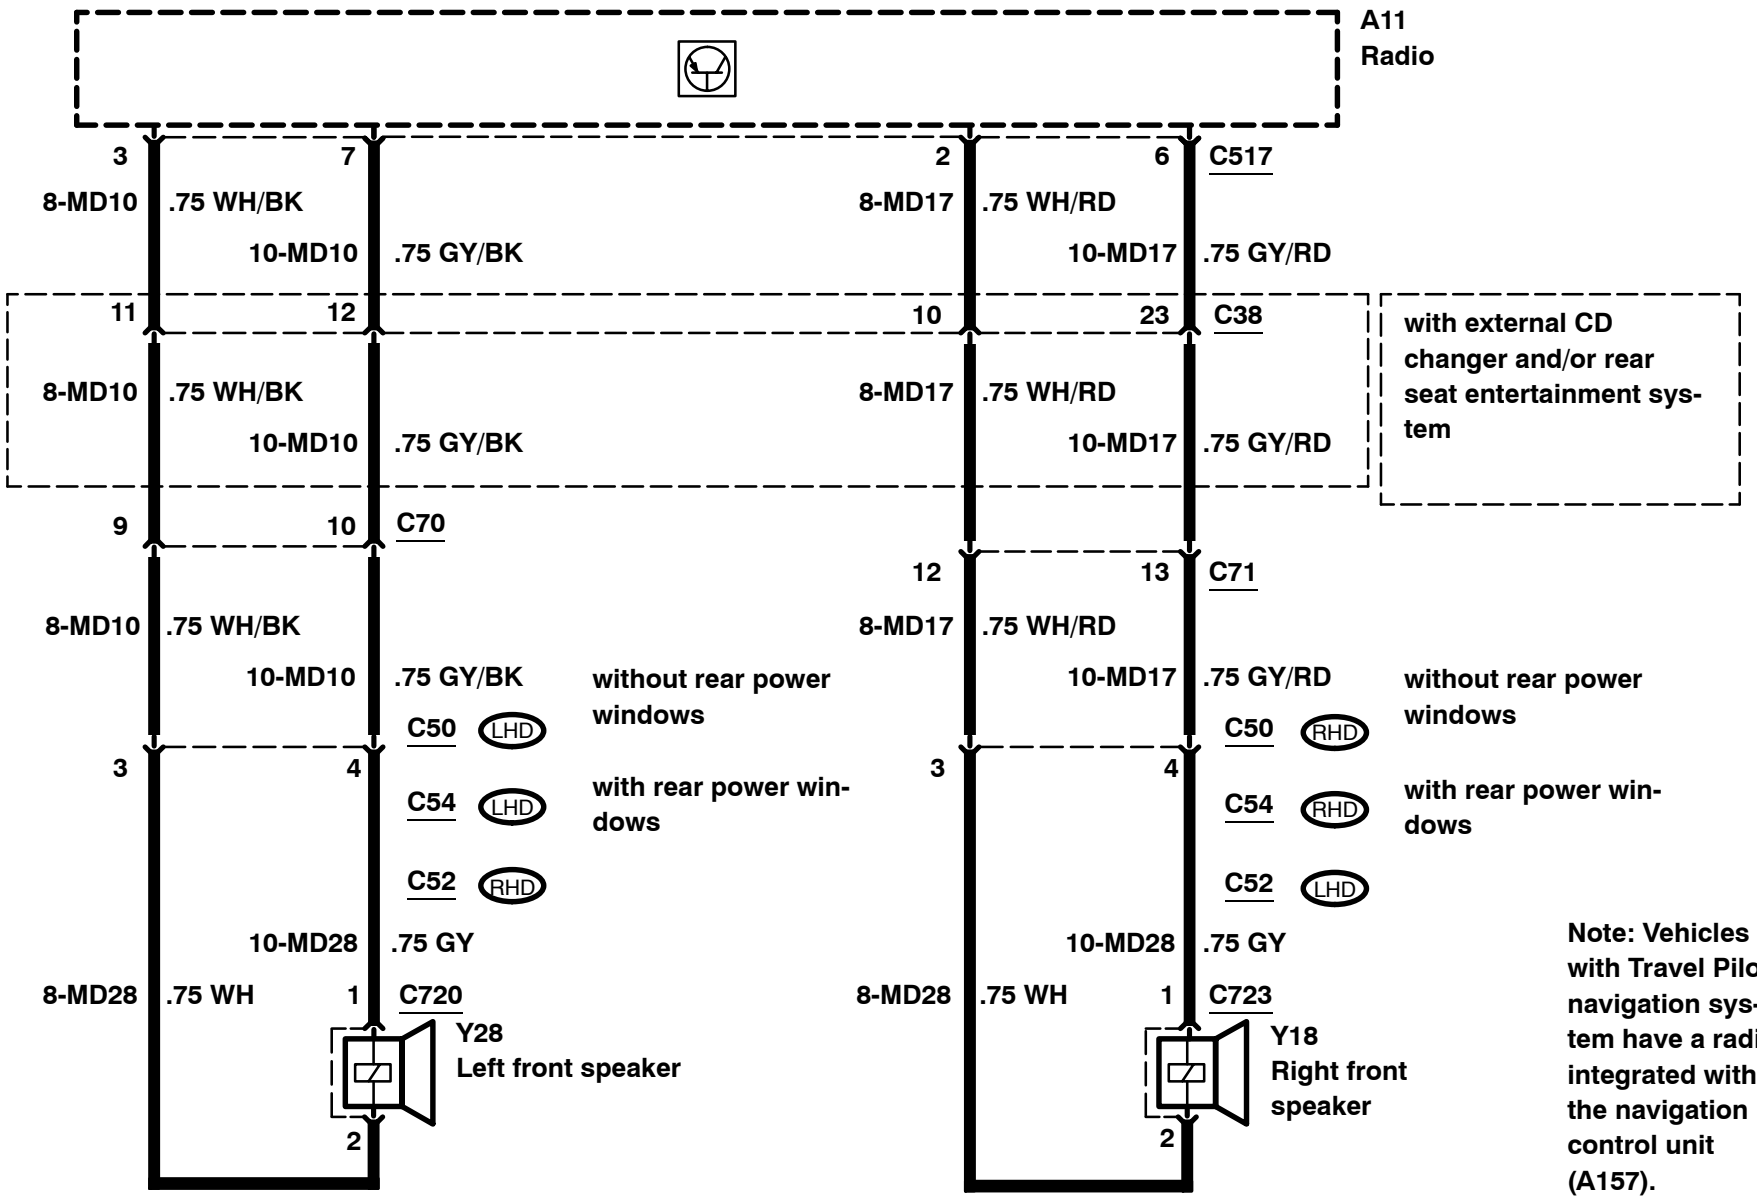
A11
Radio
3
7
8-MD10
.75 WH/BK
10-MD10
.75 GY/BK
2
6
C517
8-MD17
.75 WH/RD
10-MD17
.75 GY/RD
11
12
10
23
C38
with external CD changer and/or rear seat entertainment system
9
10
C70
12
13
C71
without rear power windows
C50
LHD
RHD
3
4
with rear power windows
C54
C52
10-MD28
.75 GY
8-MD28
.75 WH
1
C720
C723
Y28
Left front speaker
Y18
Right front speaker
2
Note: Vehicles with Travel Pilot navigation system have a radio integrated with the navigation control unit (A157).


Speakers

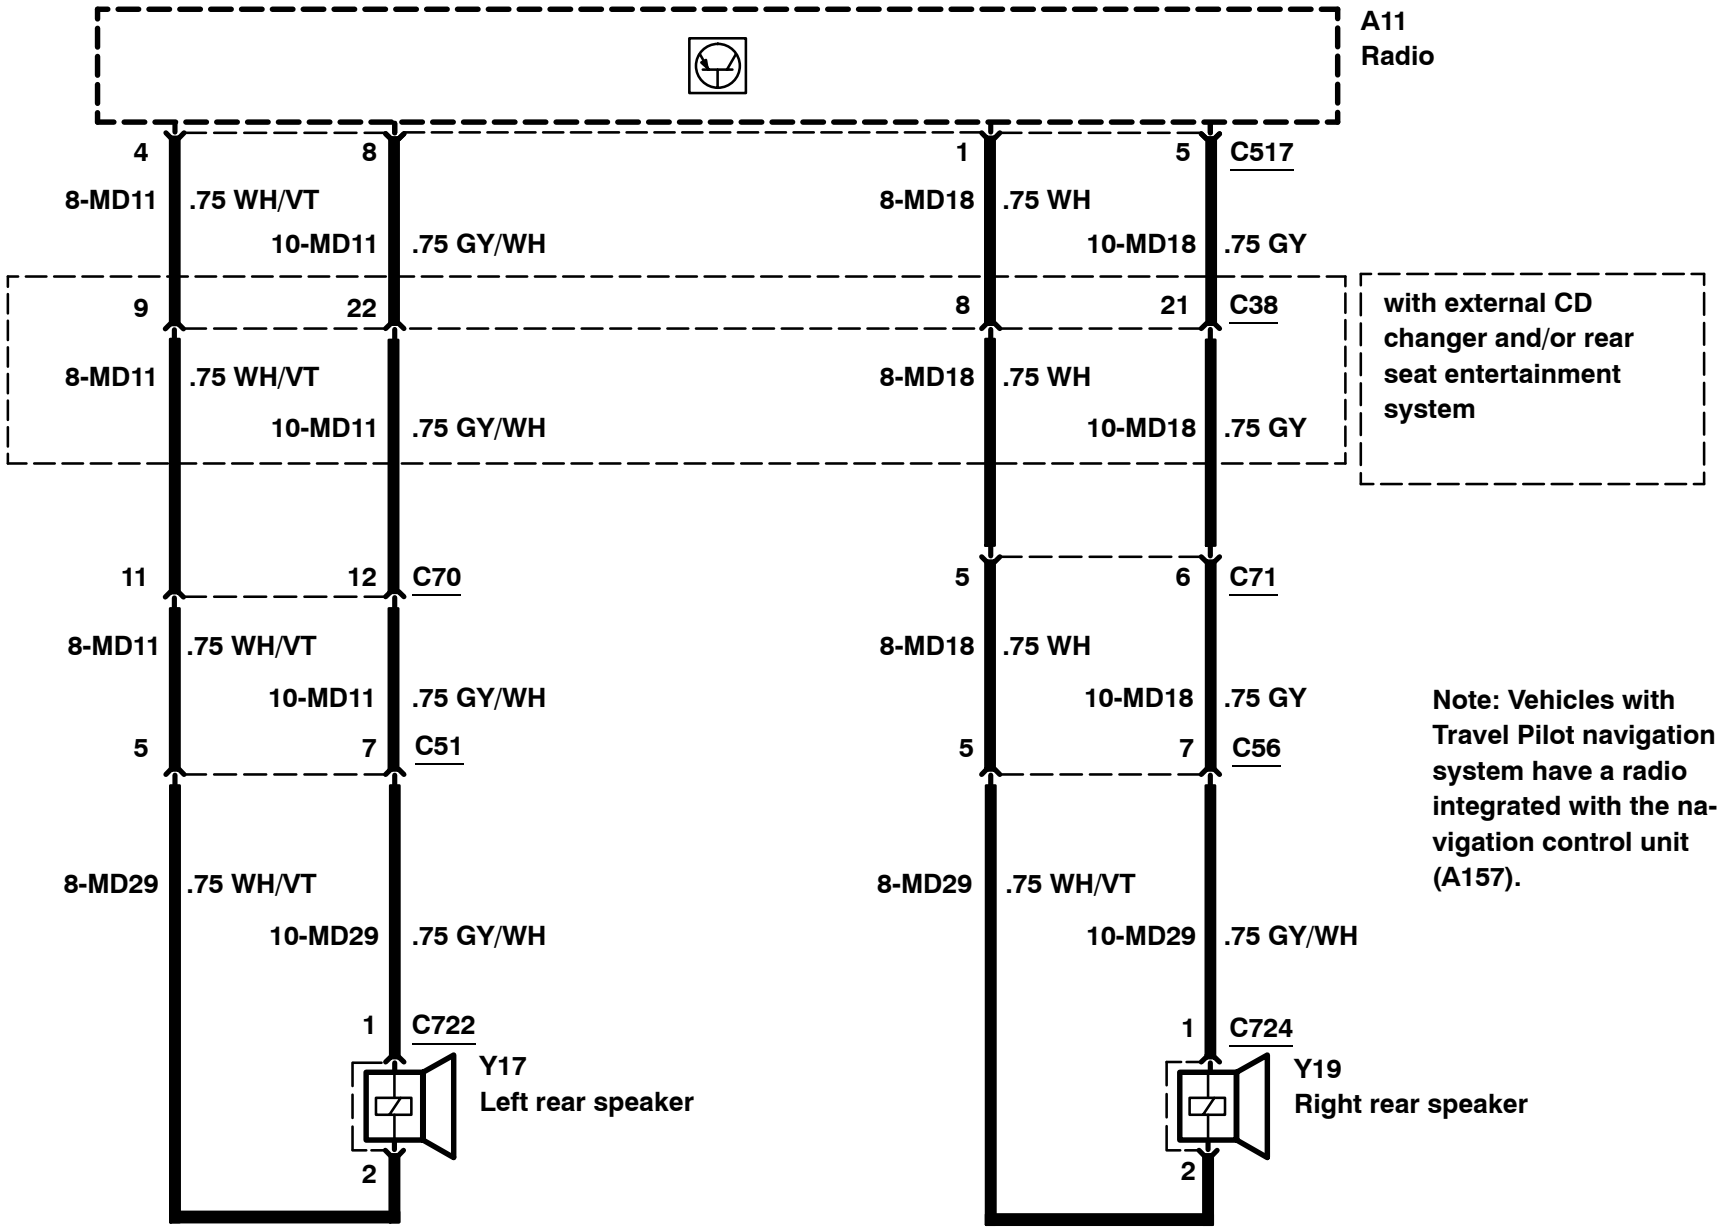
A11
Radio
4
8-MD11
.75 WH/VT
8
10-MD11
.75 GY/WH
1
8-MD18
.75 WH
5
C517
10-MD18
.75 GY
9
8-MD11
.75 WH/VT
22
10-MD11
.75 GY/WH
8
8-MD18
.75 WH
21
C38
10-MD18
.75 GY
with external CD changer and/or rear seat entertainment system
11
8-MD11
.75 WH/VT
12
C70
10-MD11
.75 GY/WH
5
8-MD18
.75 WH
6
C71
10-MD18
.75 GY
5
8-MD29
.75 WH/VT
7
C51
10-MD29
.75 GY/WH
5
8-MD29
.75 WH/VT
7
C56
10-MD29
.75 GY/WH
1
C722
Y17
Left rear speaker
2
1
C724
Y19
Right rear speaker
2
Note: Vehicles with Travel Pilot navigation system have a radio integrated with the navigation control unit (A157).


Video System – without DVD navigation system with touch screen

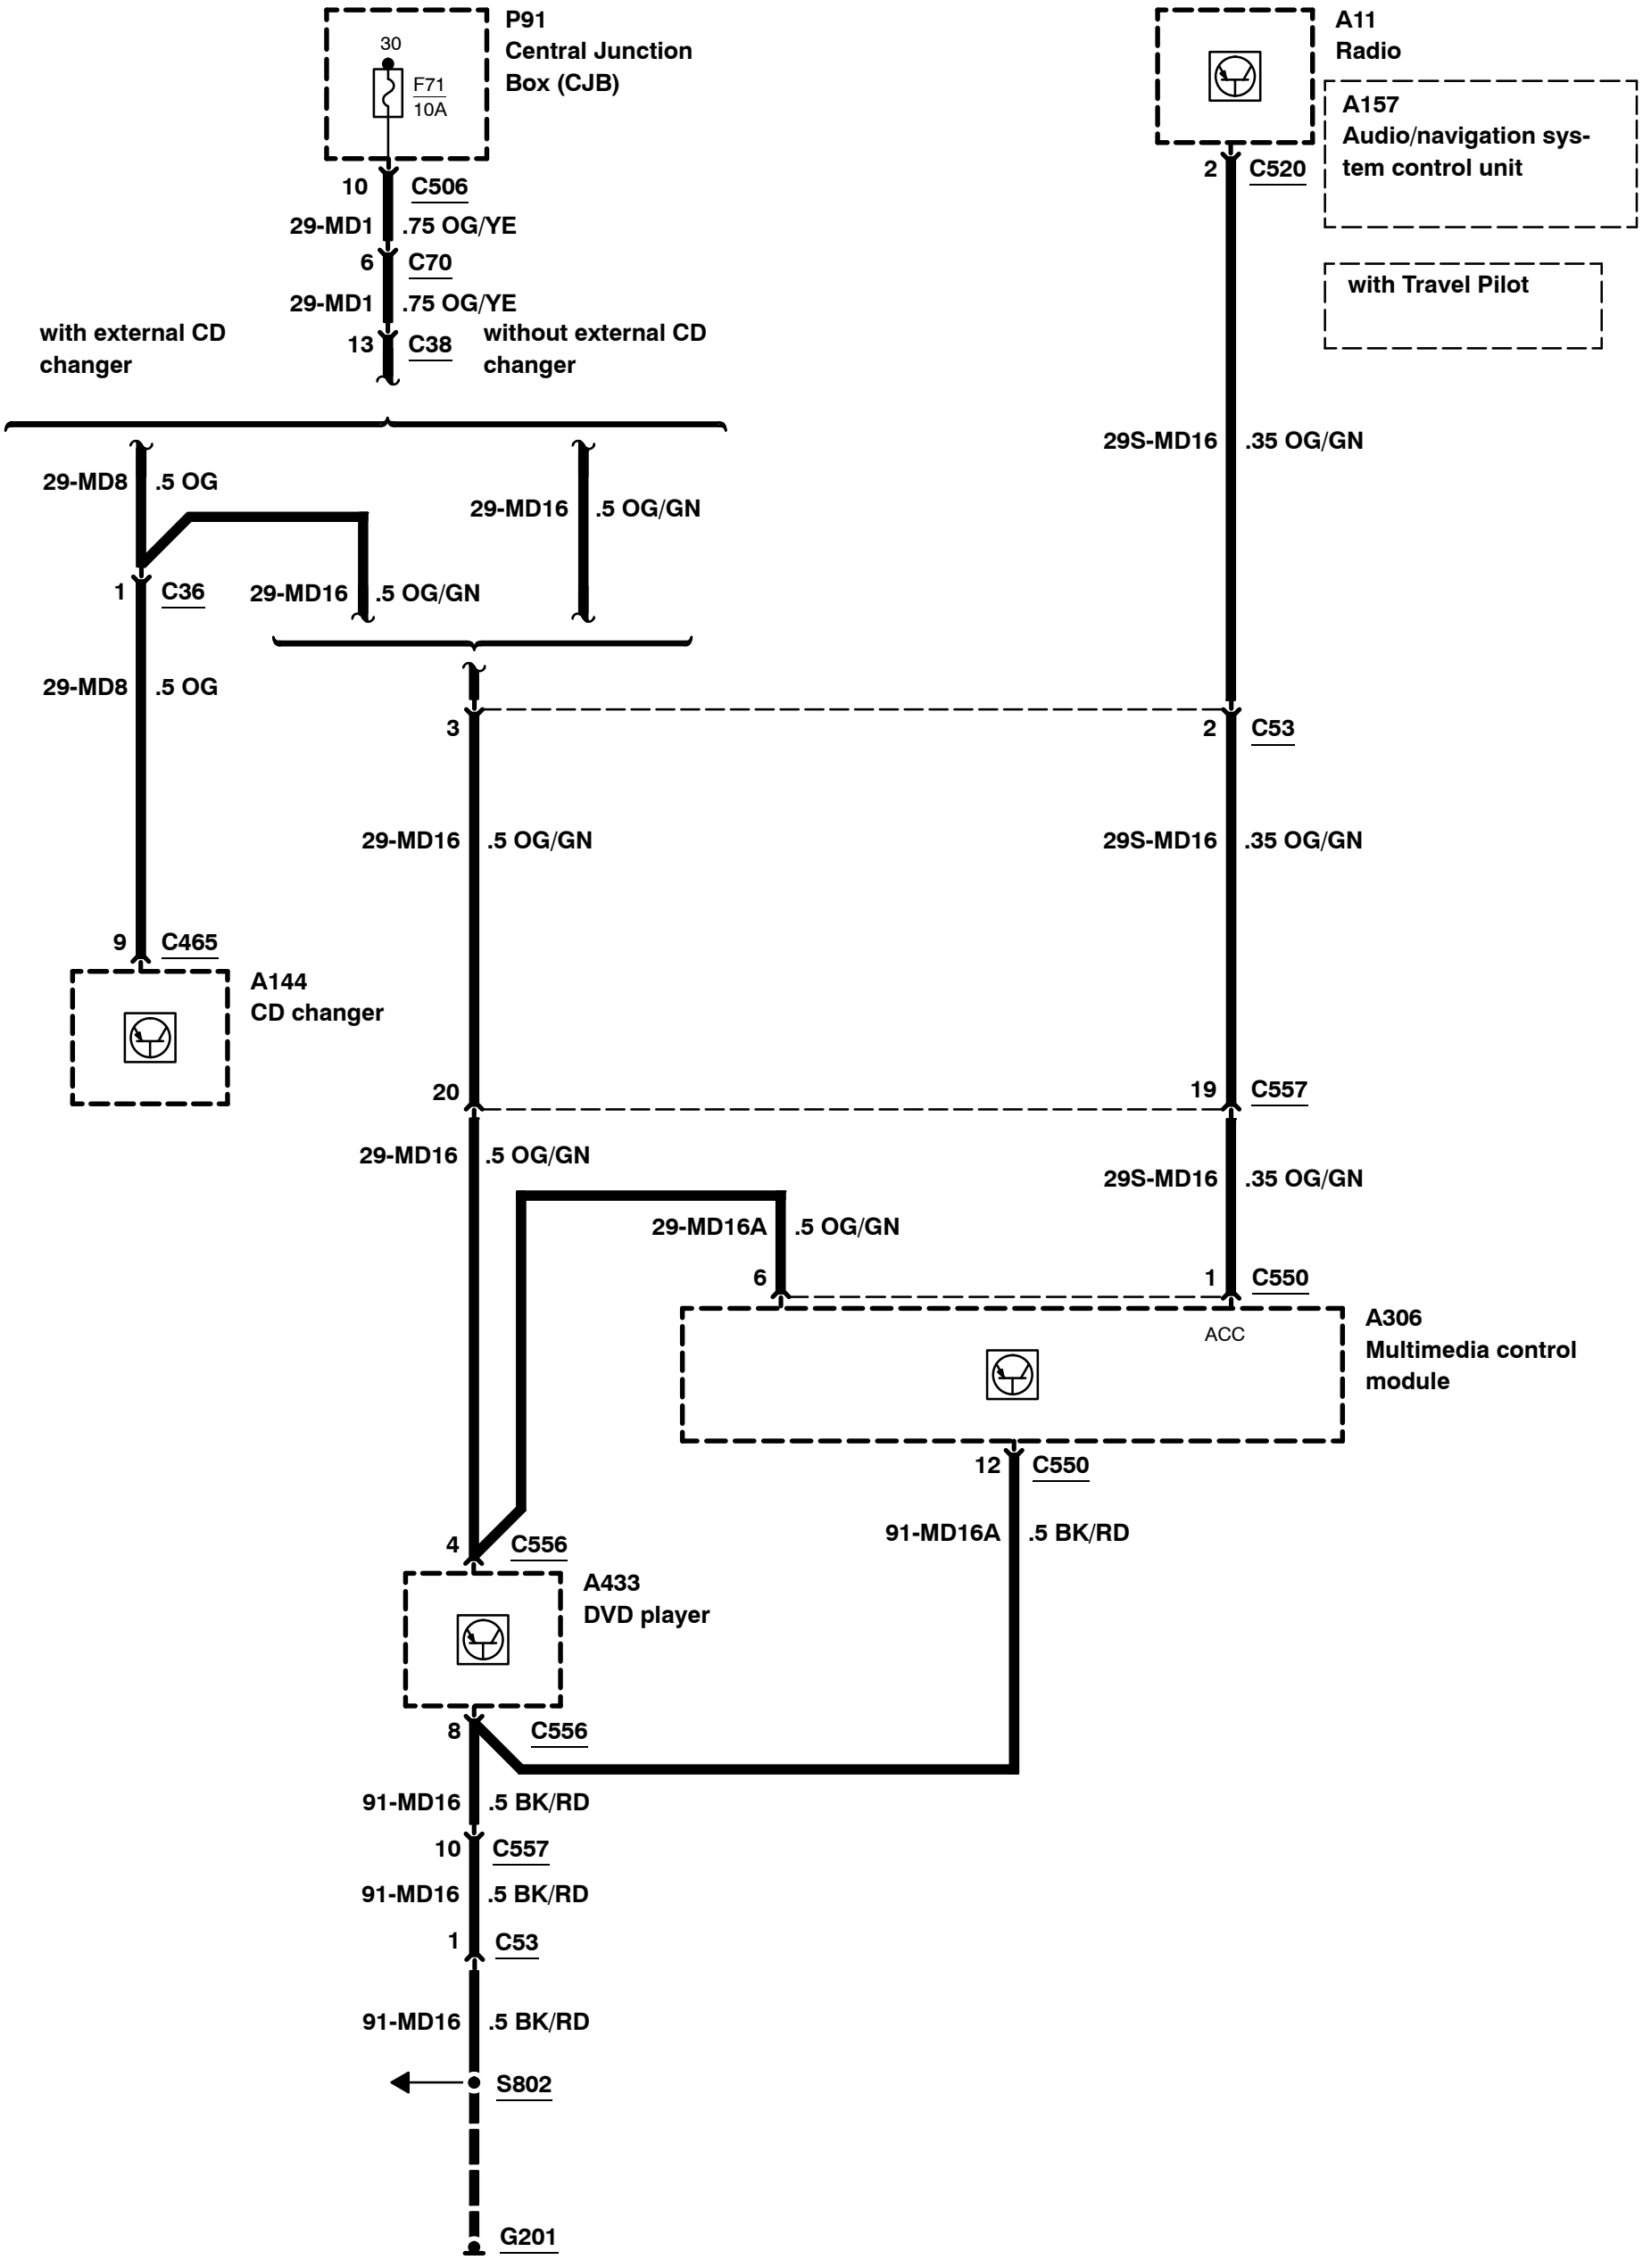


Video System – with DVD navigation system with touch screen

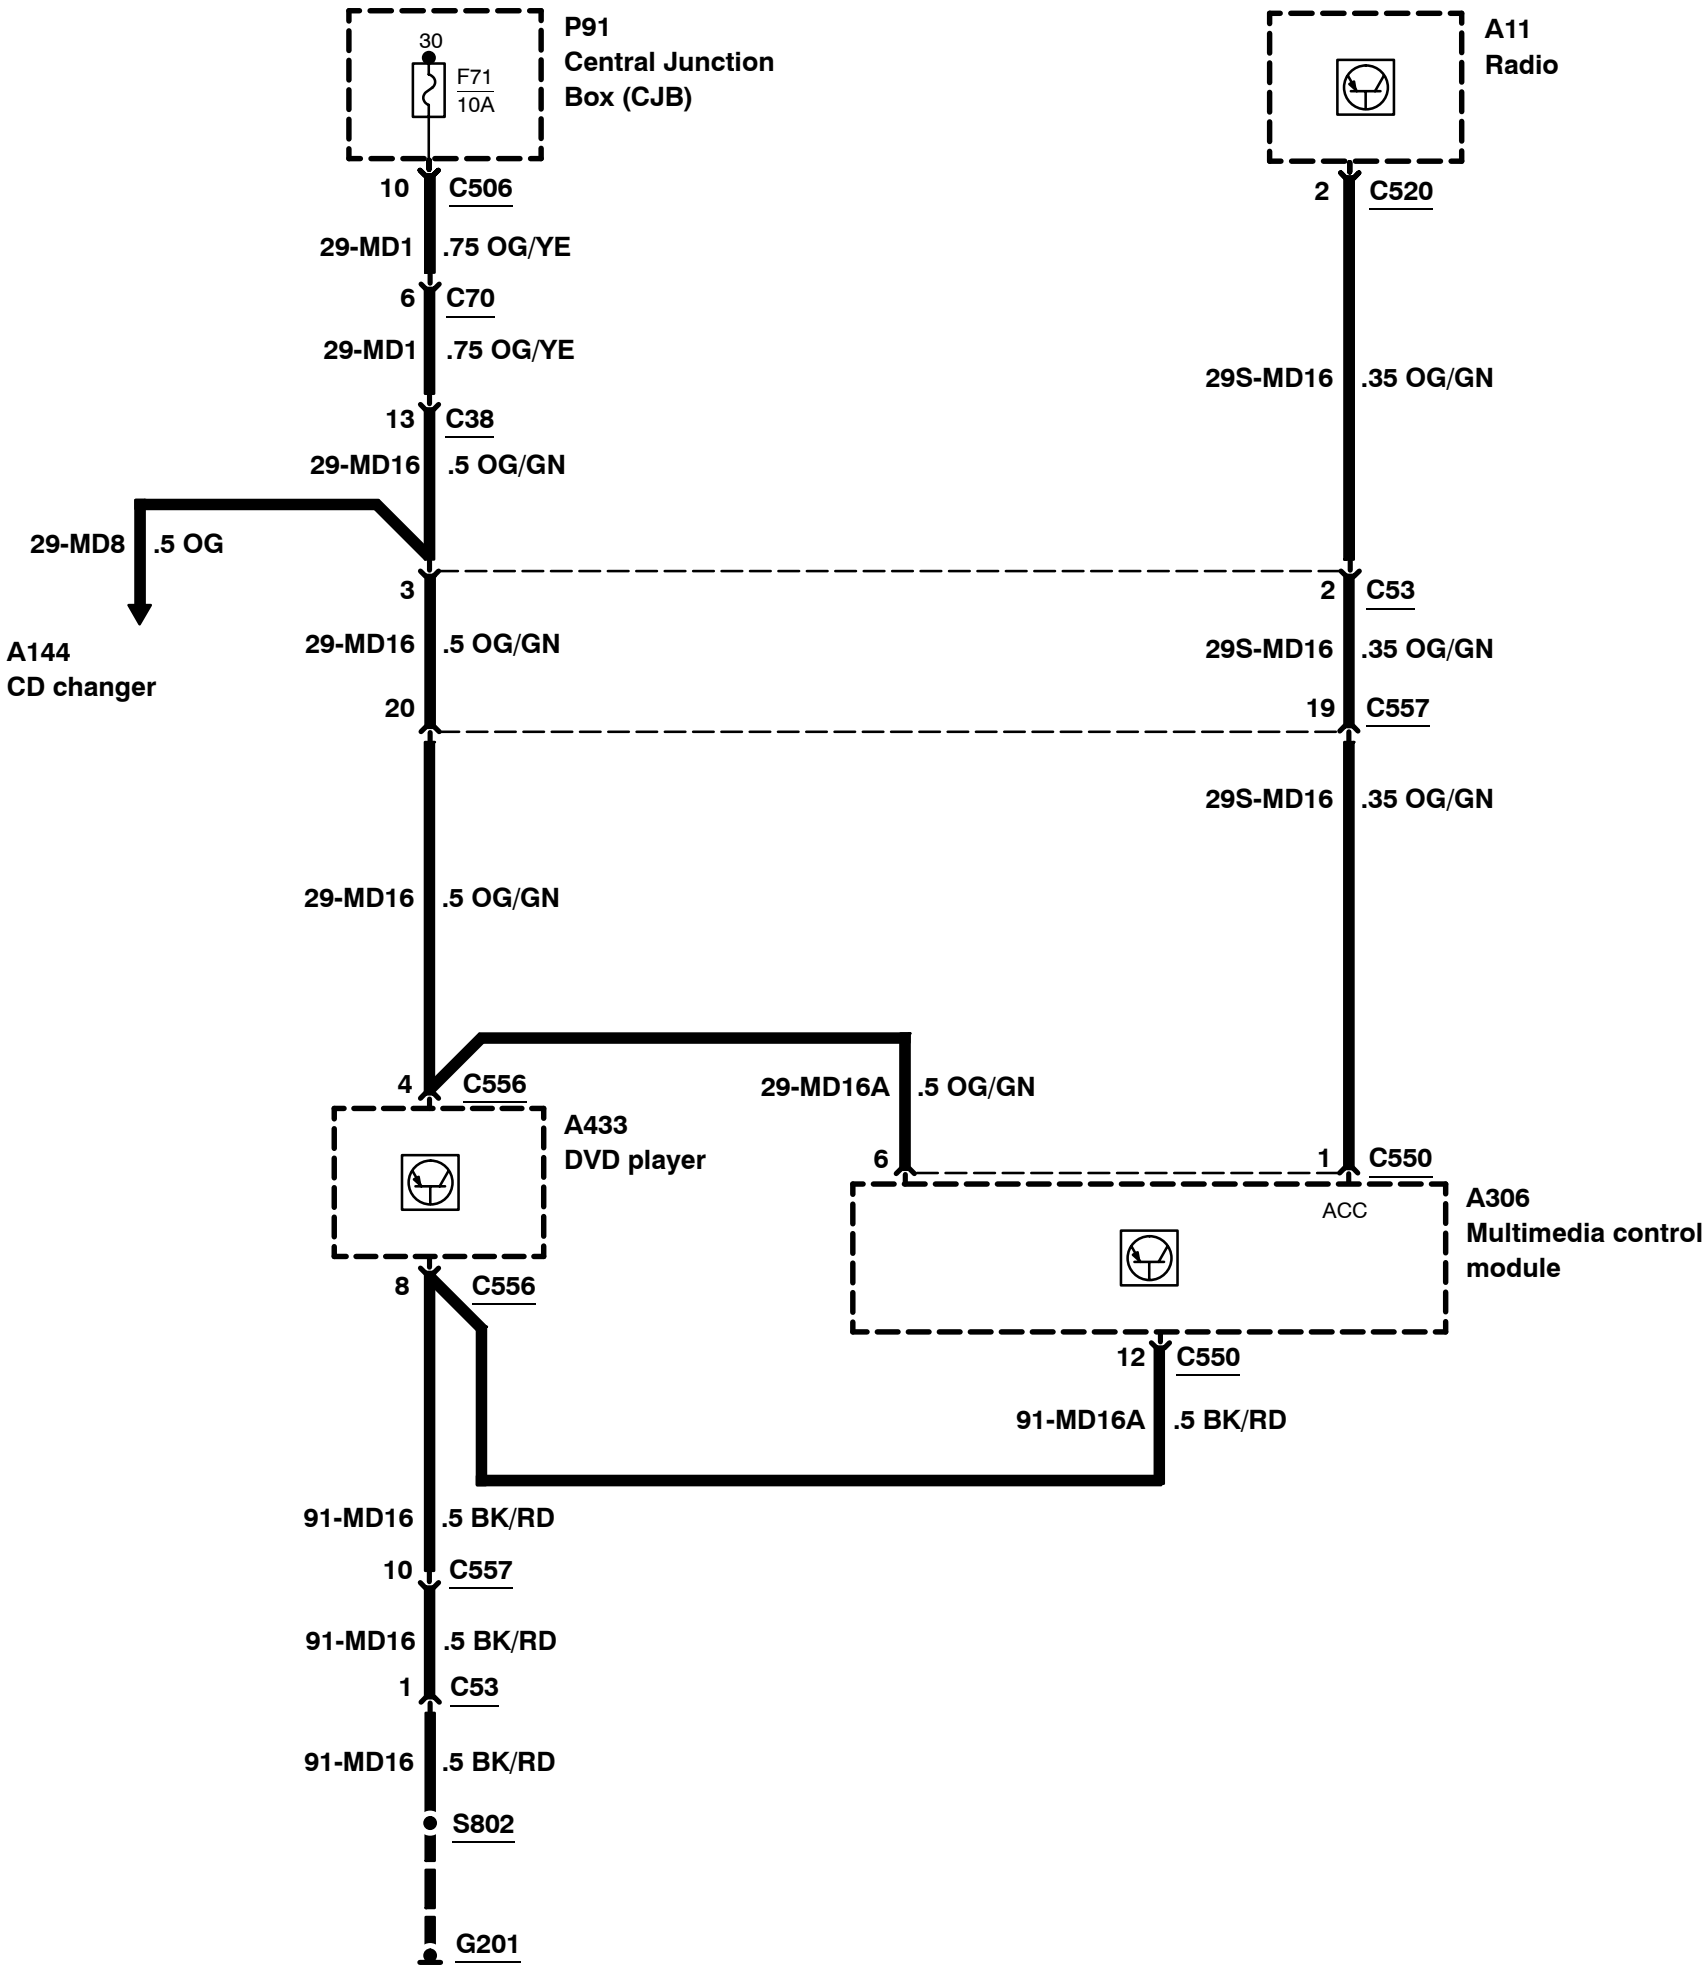


Video System

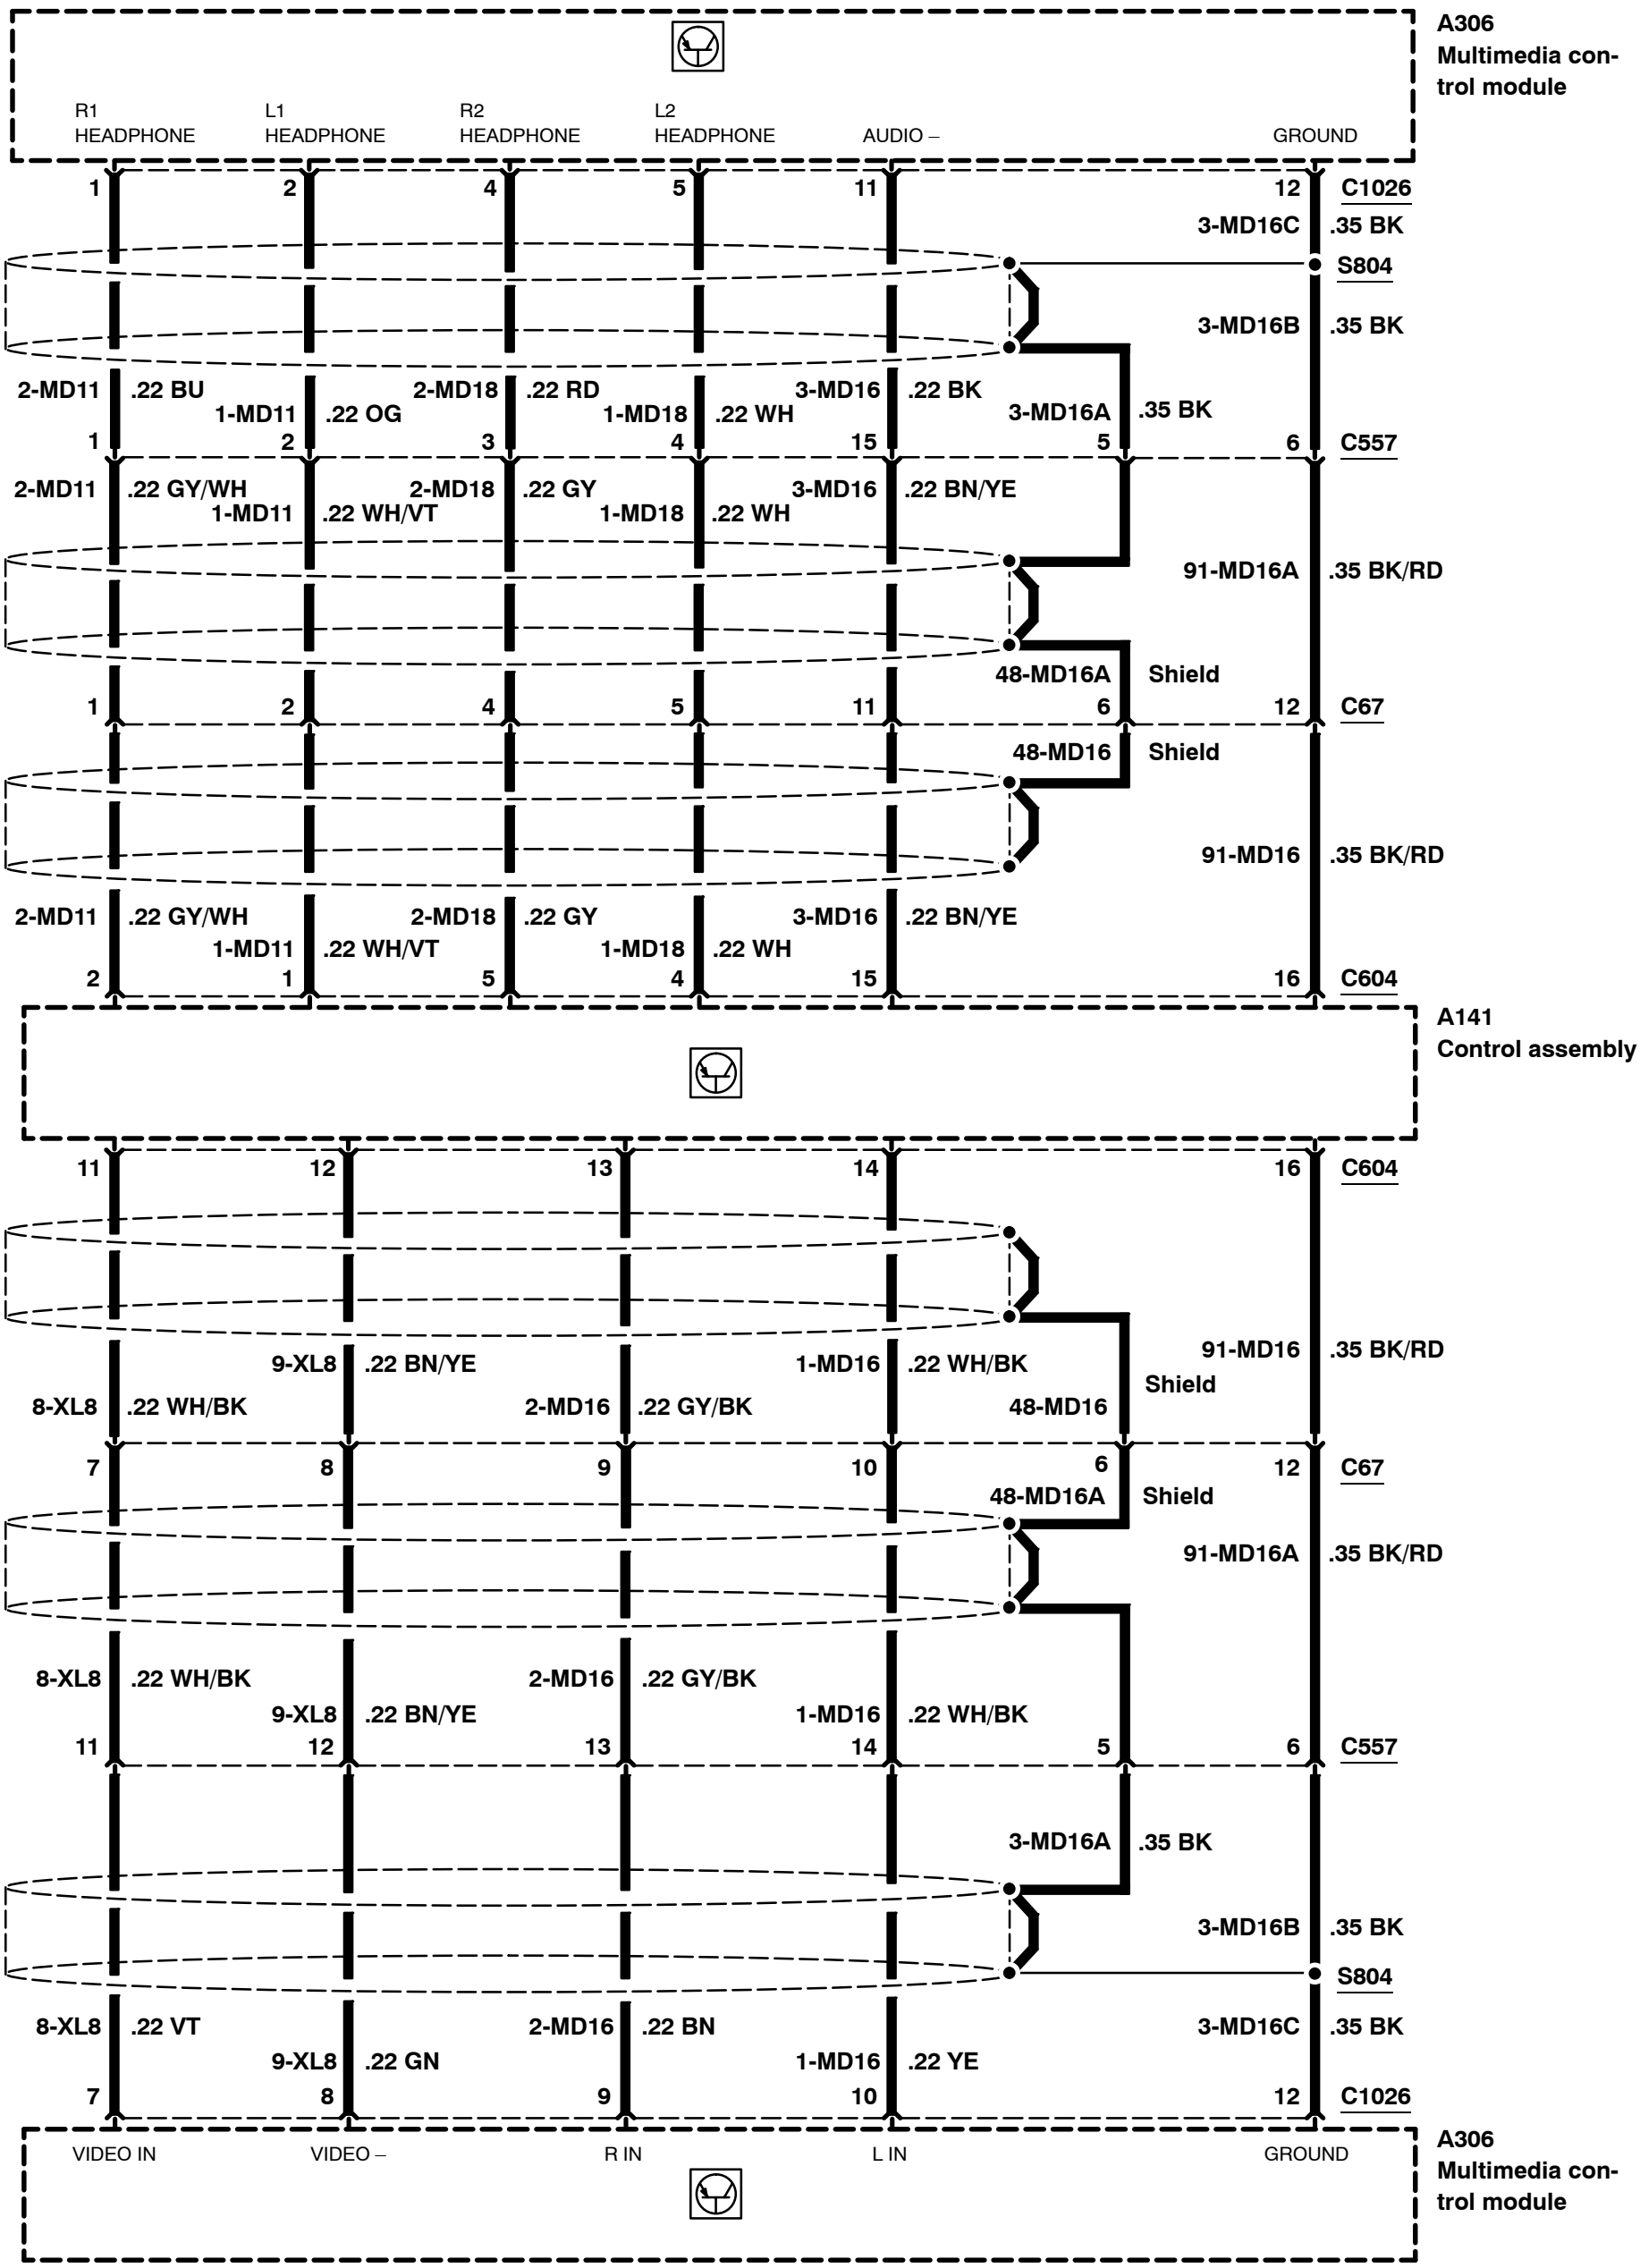


Video System

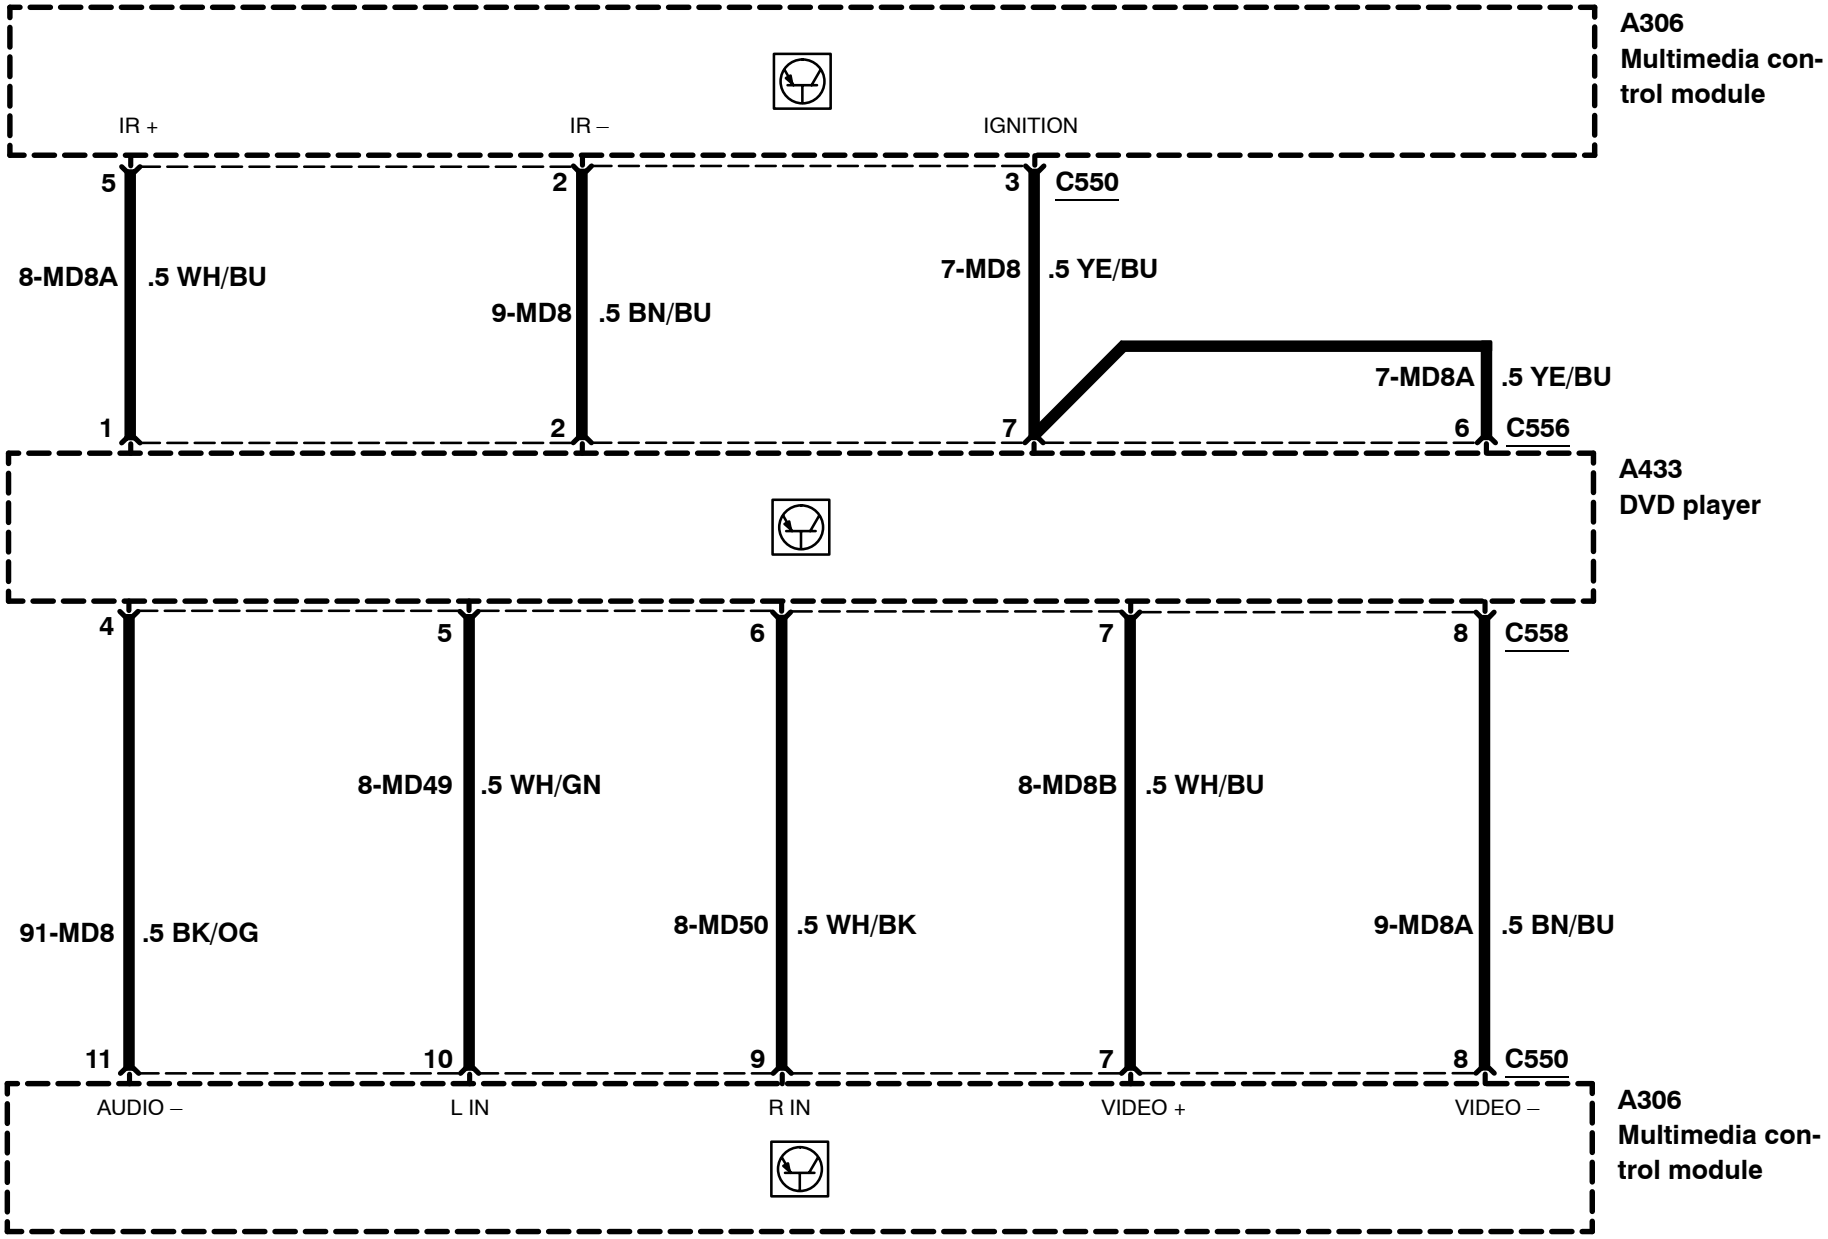


Video System

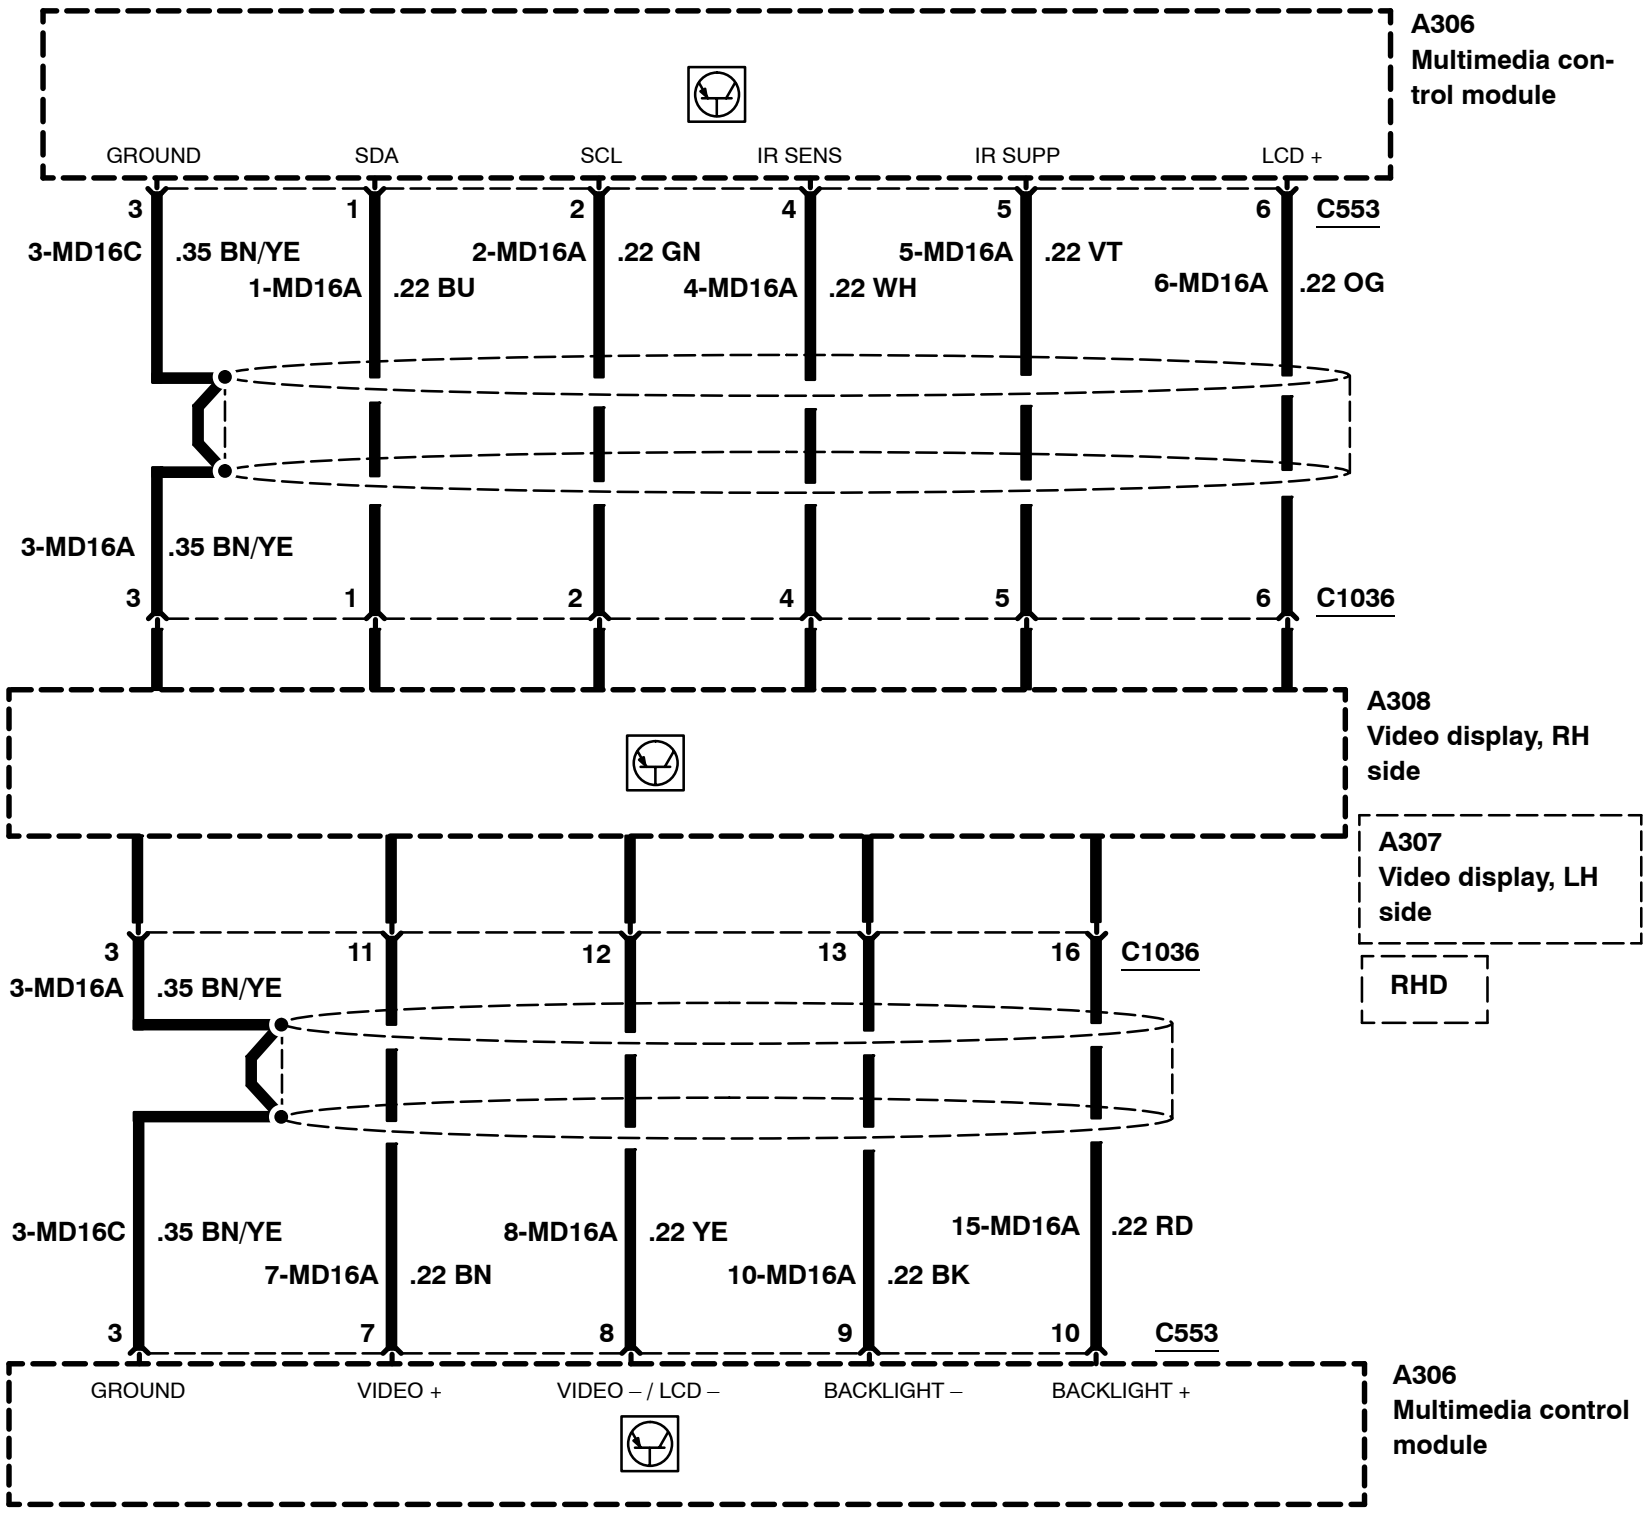


Video System

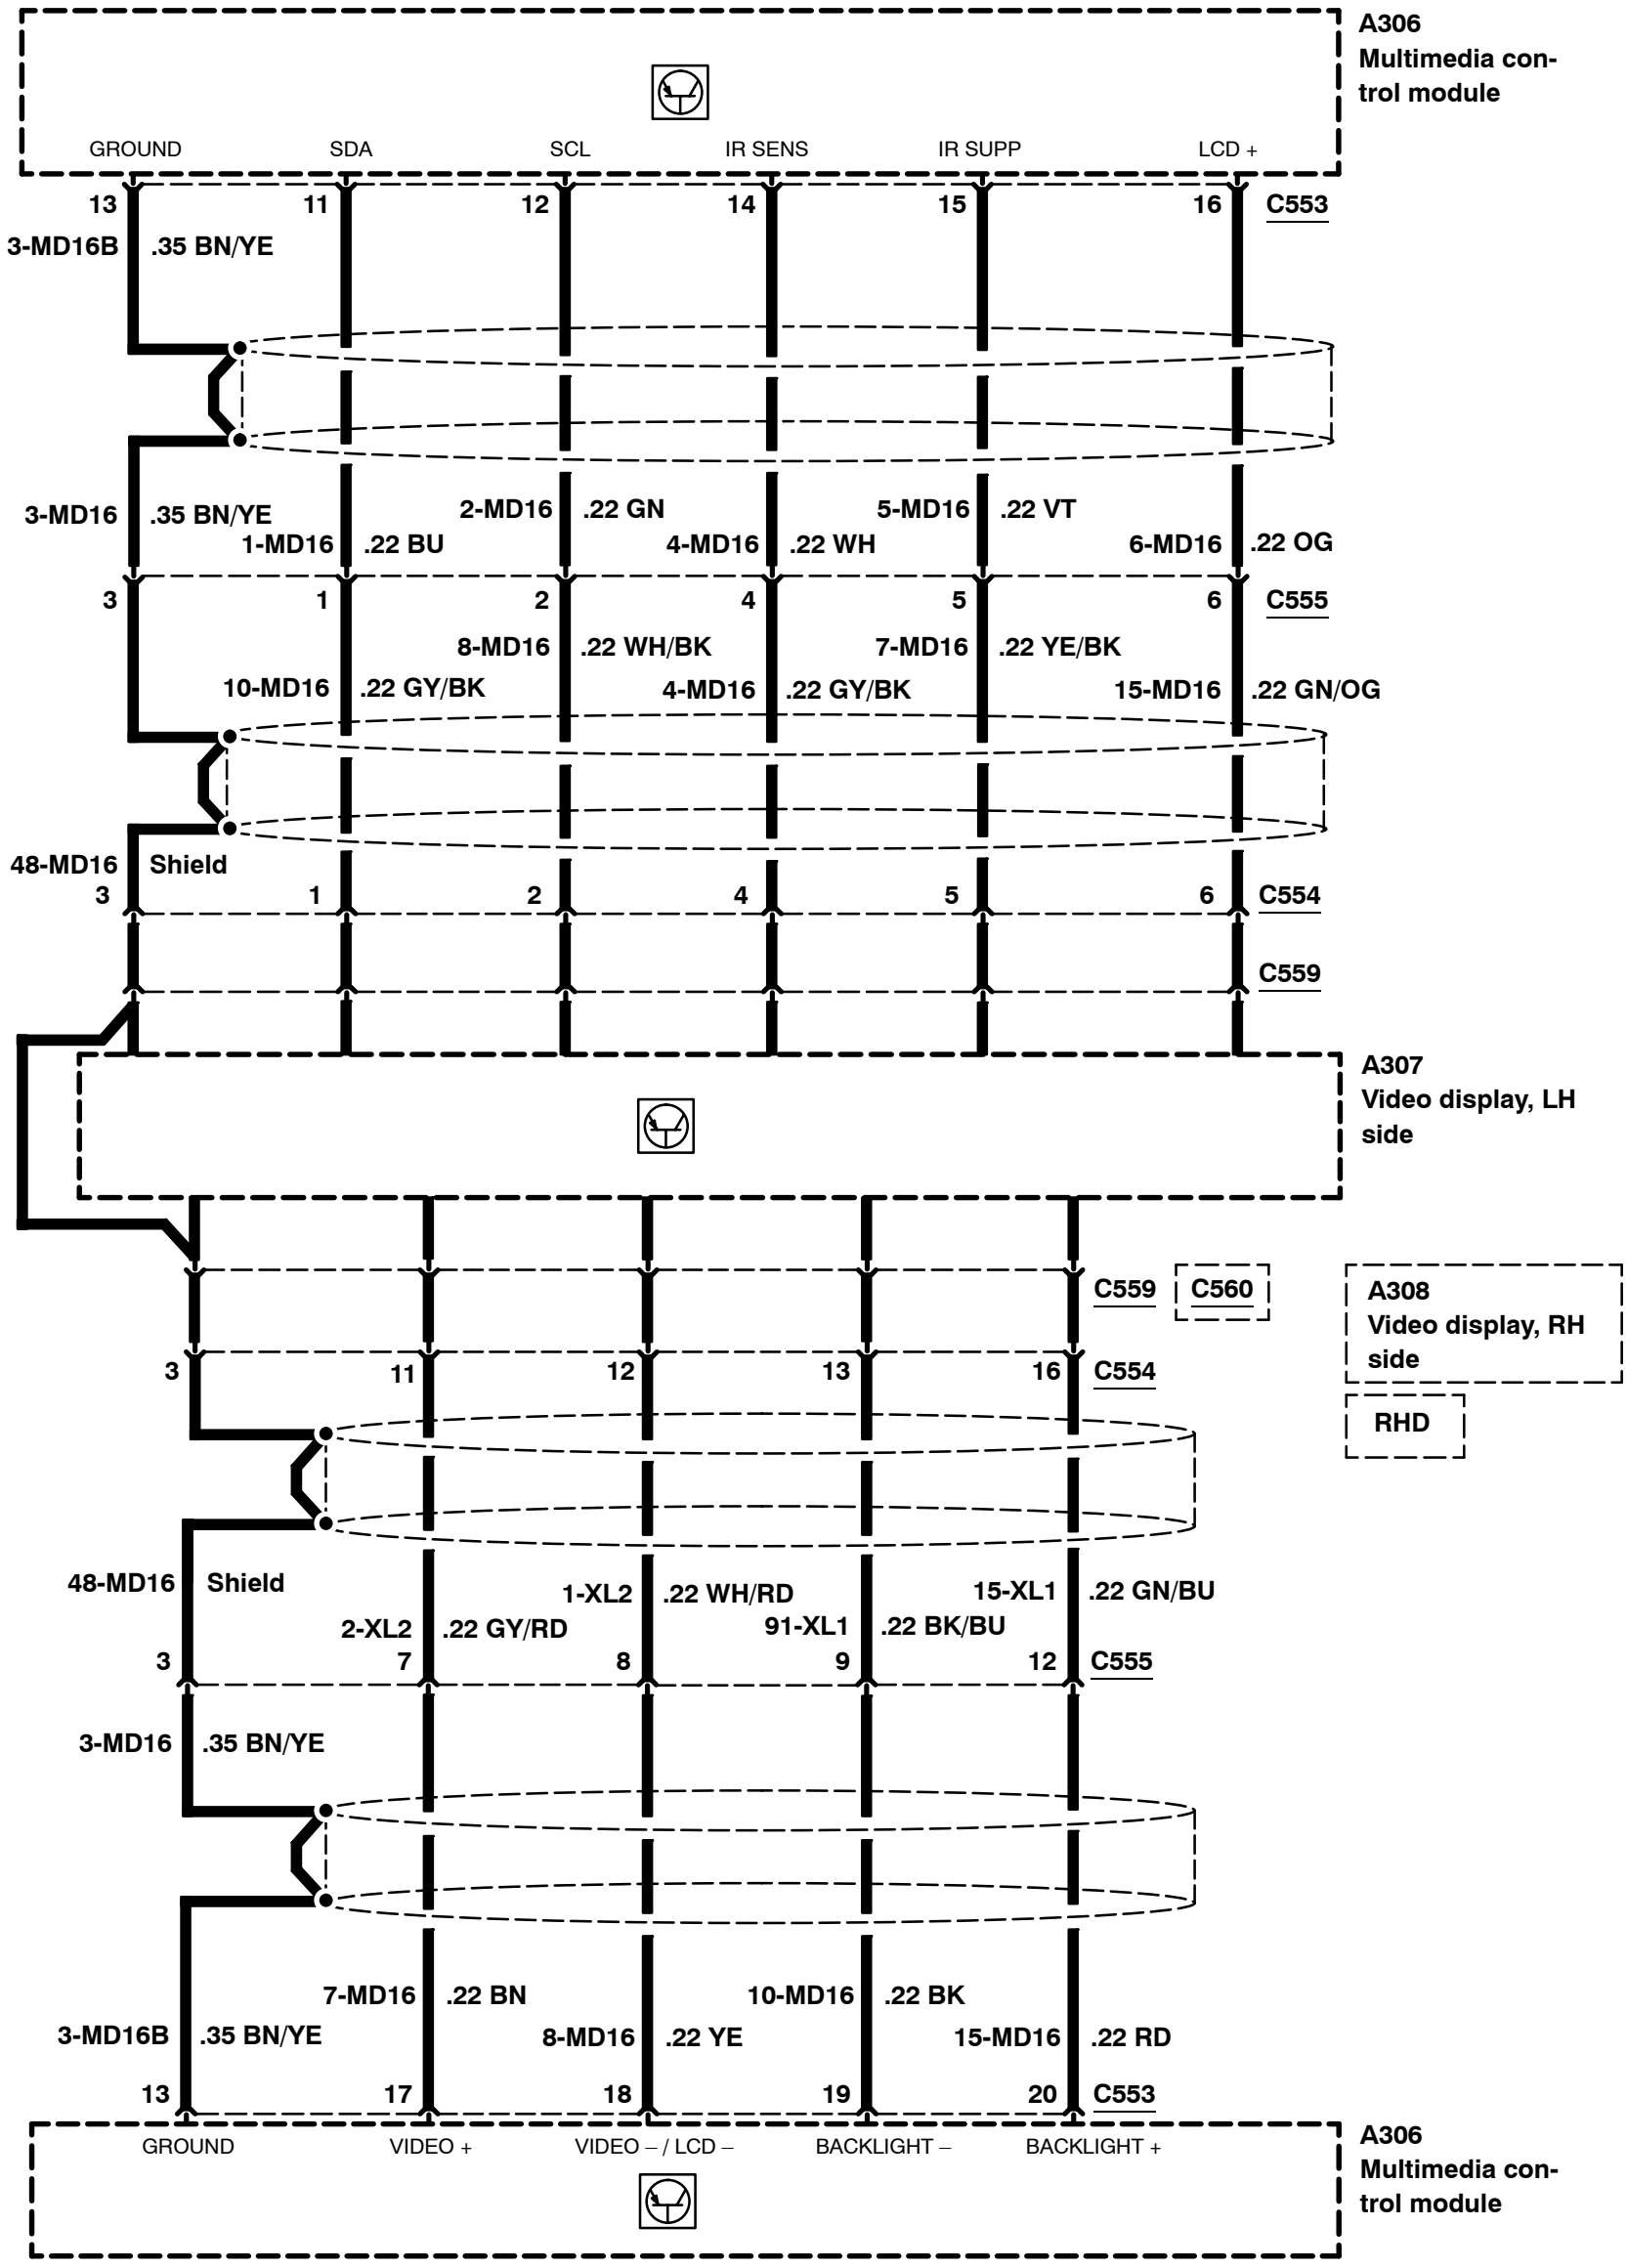


Exterior Lighting – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps

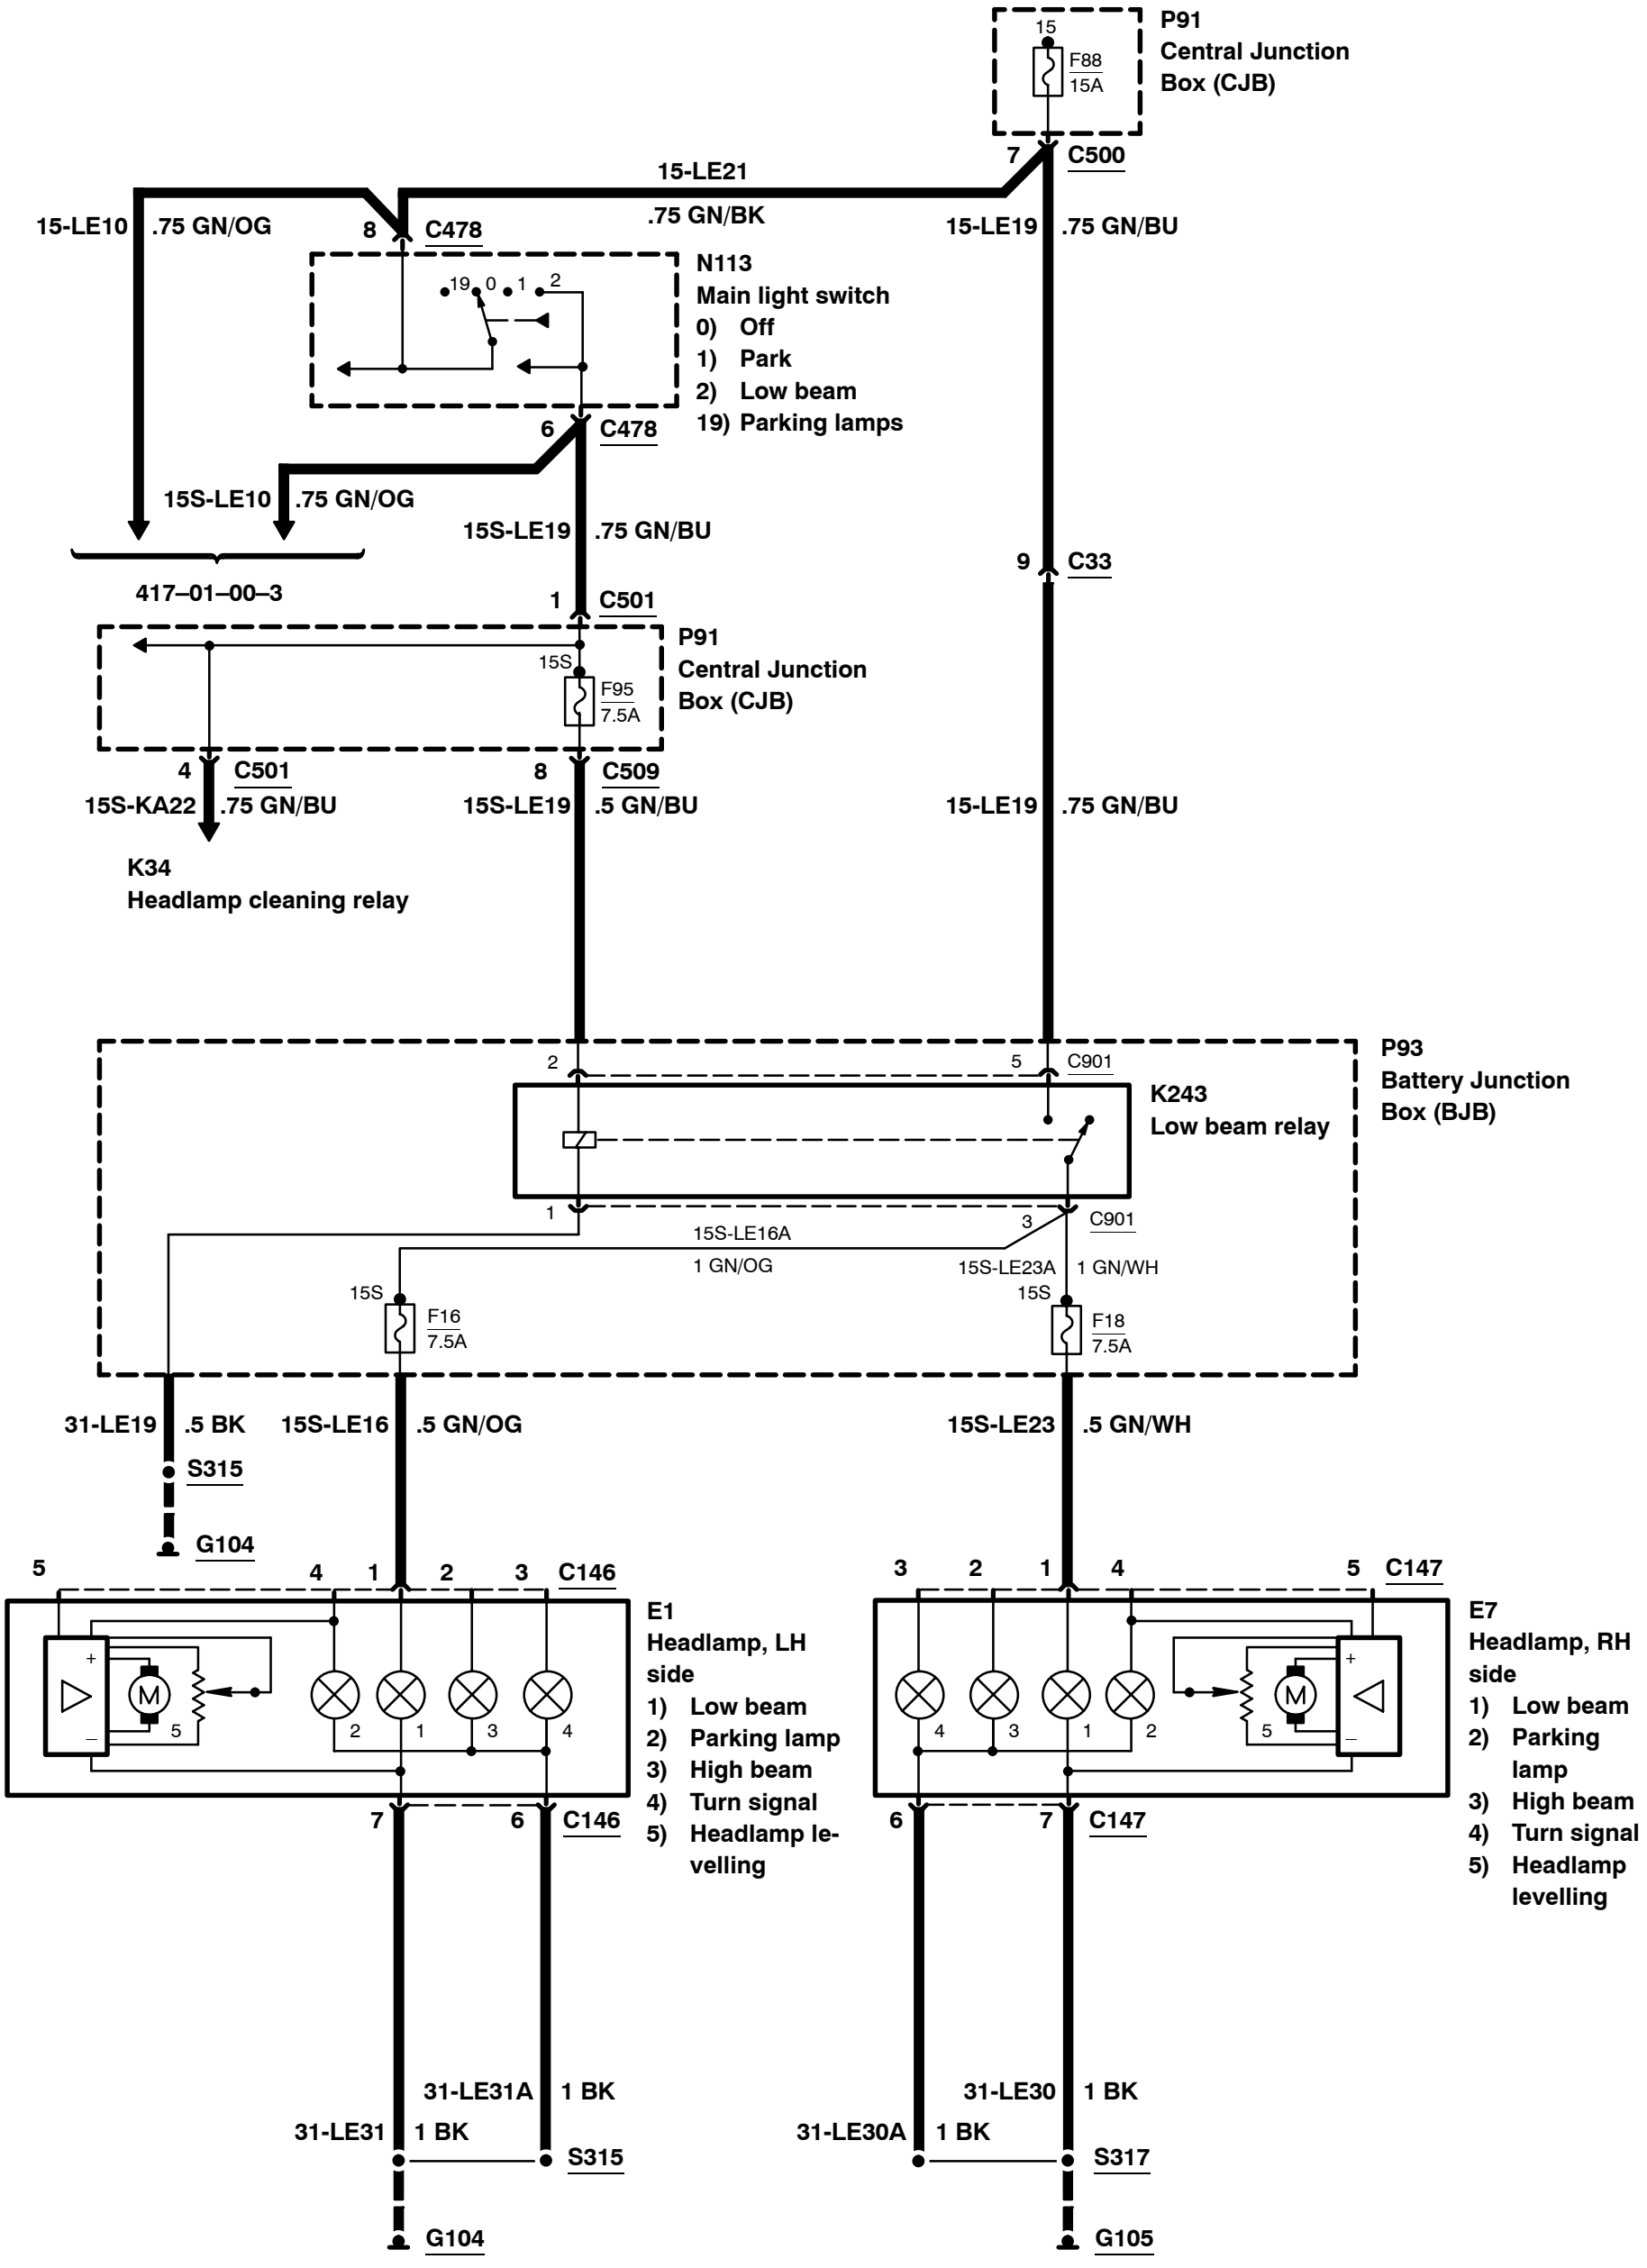

Exterior Lighting – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps

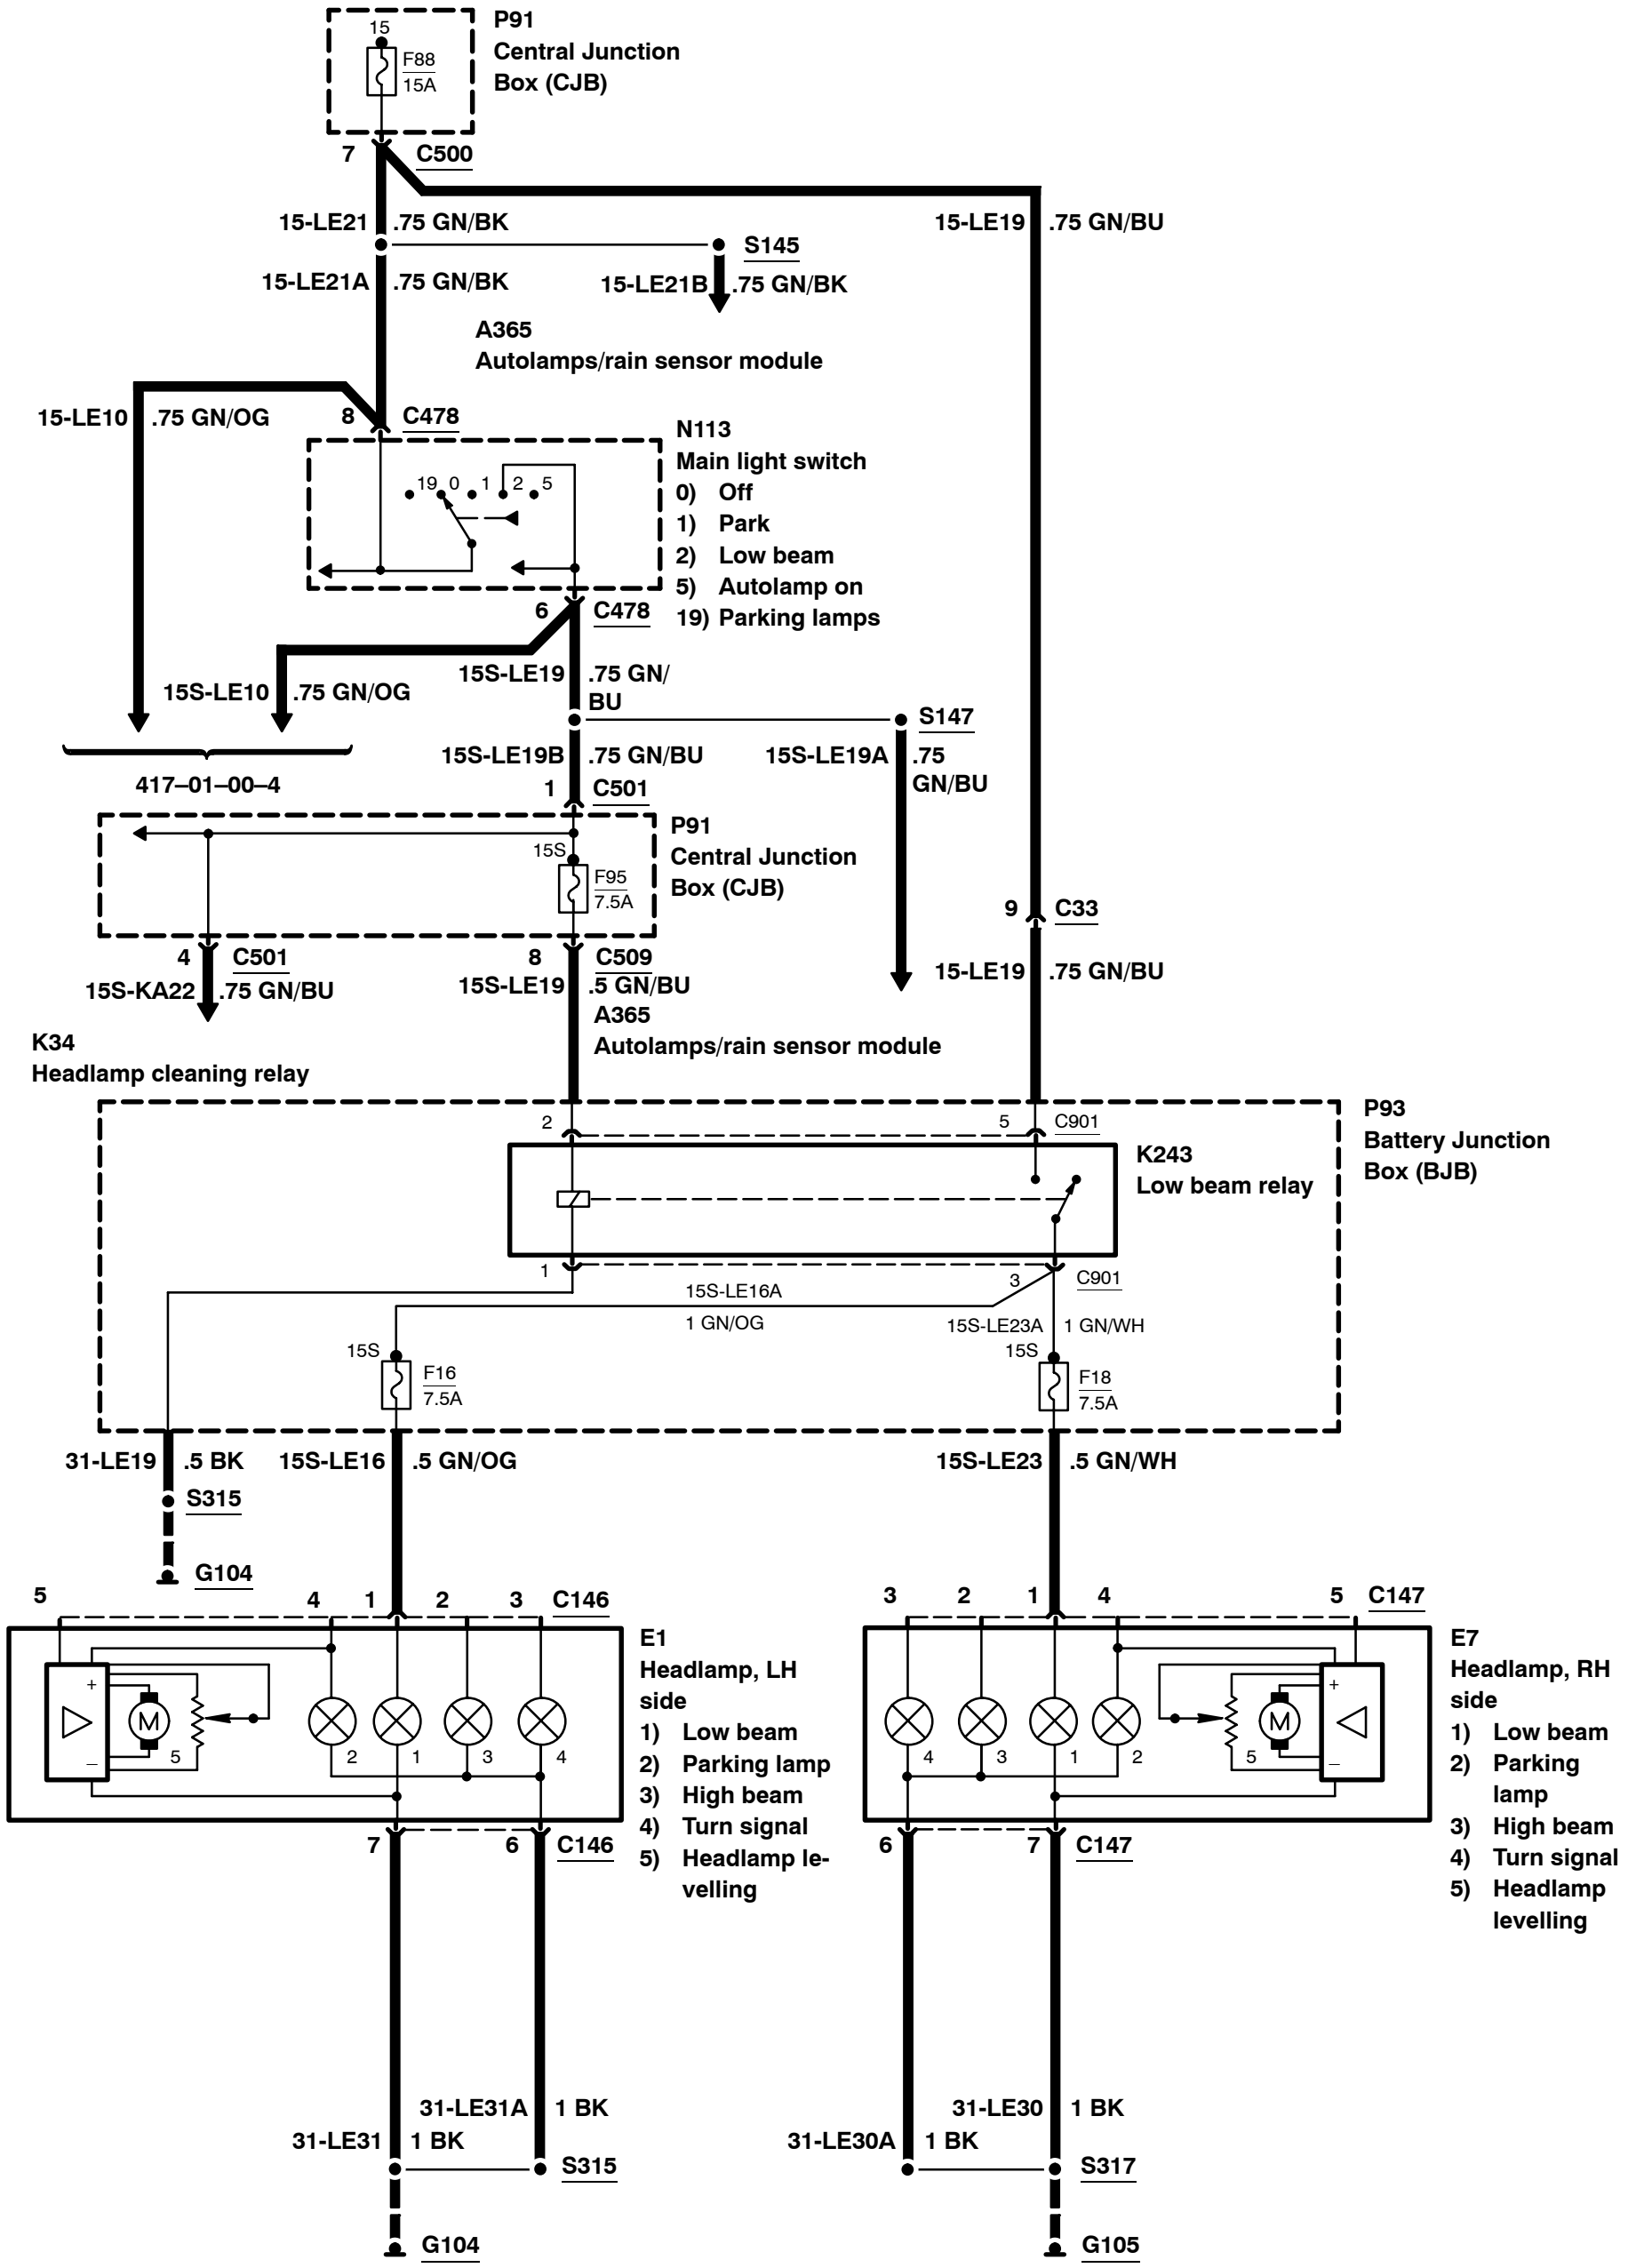


Exterior Lighting – Headlamps, High beam, without high intensity discharge headlamps, without autolamps

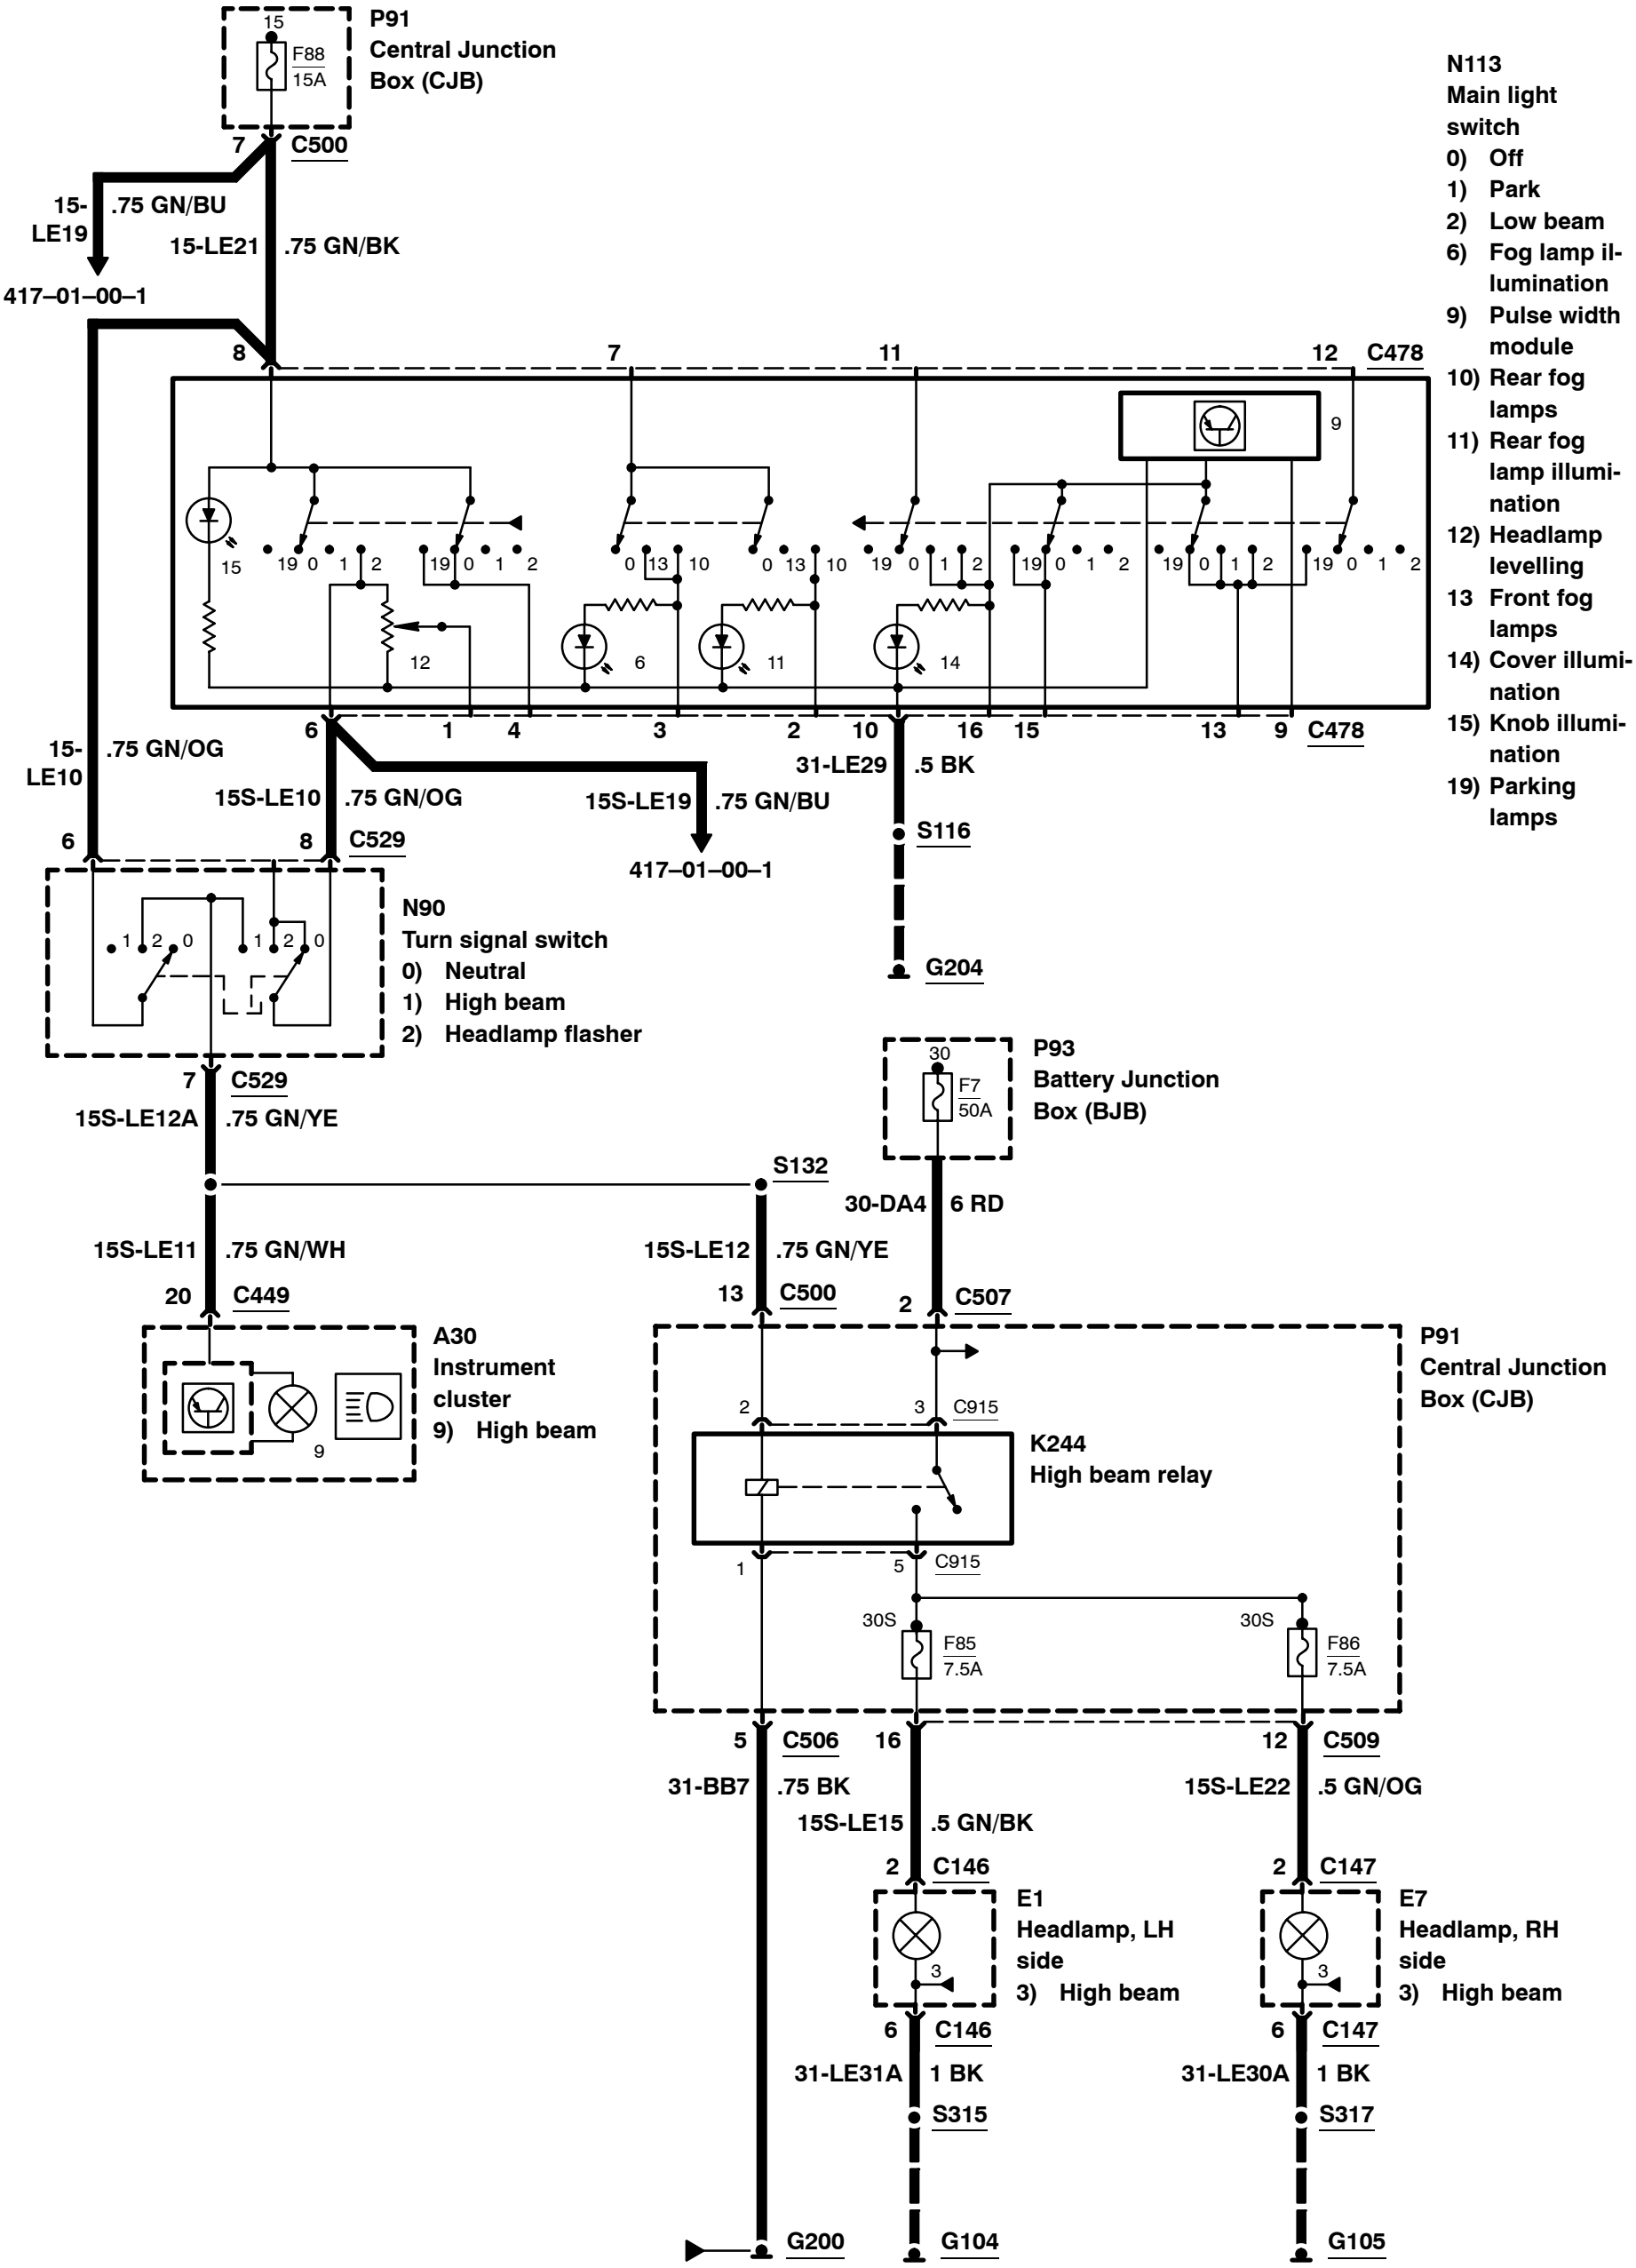


N113
Main light switch
0) Off
1) Park
2) Low beam
6) Fog lamp illumination
9) Pulse width module
10) Rear fog lamps
11) Rear fog lamp illumination
12) Headlamp levelling
13 Front fog lamps
14) Cover illumination
15) Knob illumination
19) Parking lamps

Exterior Lighting – Headlamps, High beam, without high intensity discharge headlamps, with autolamps

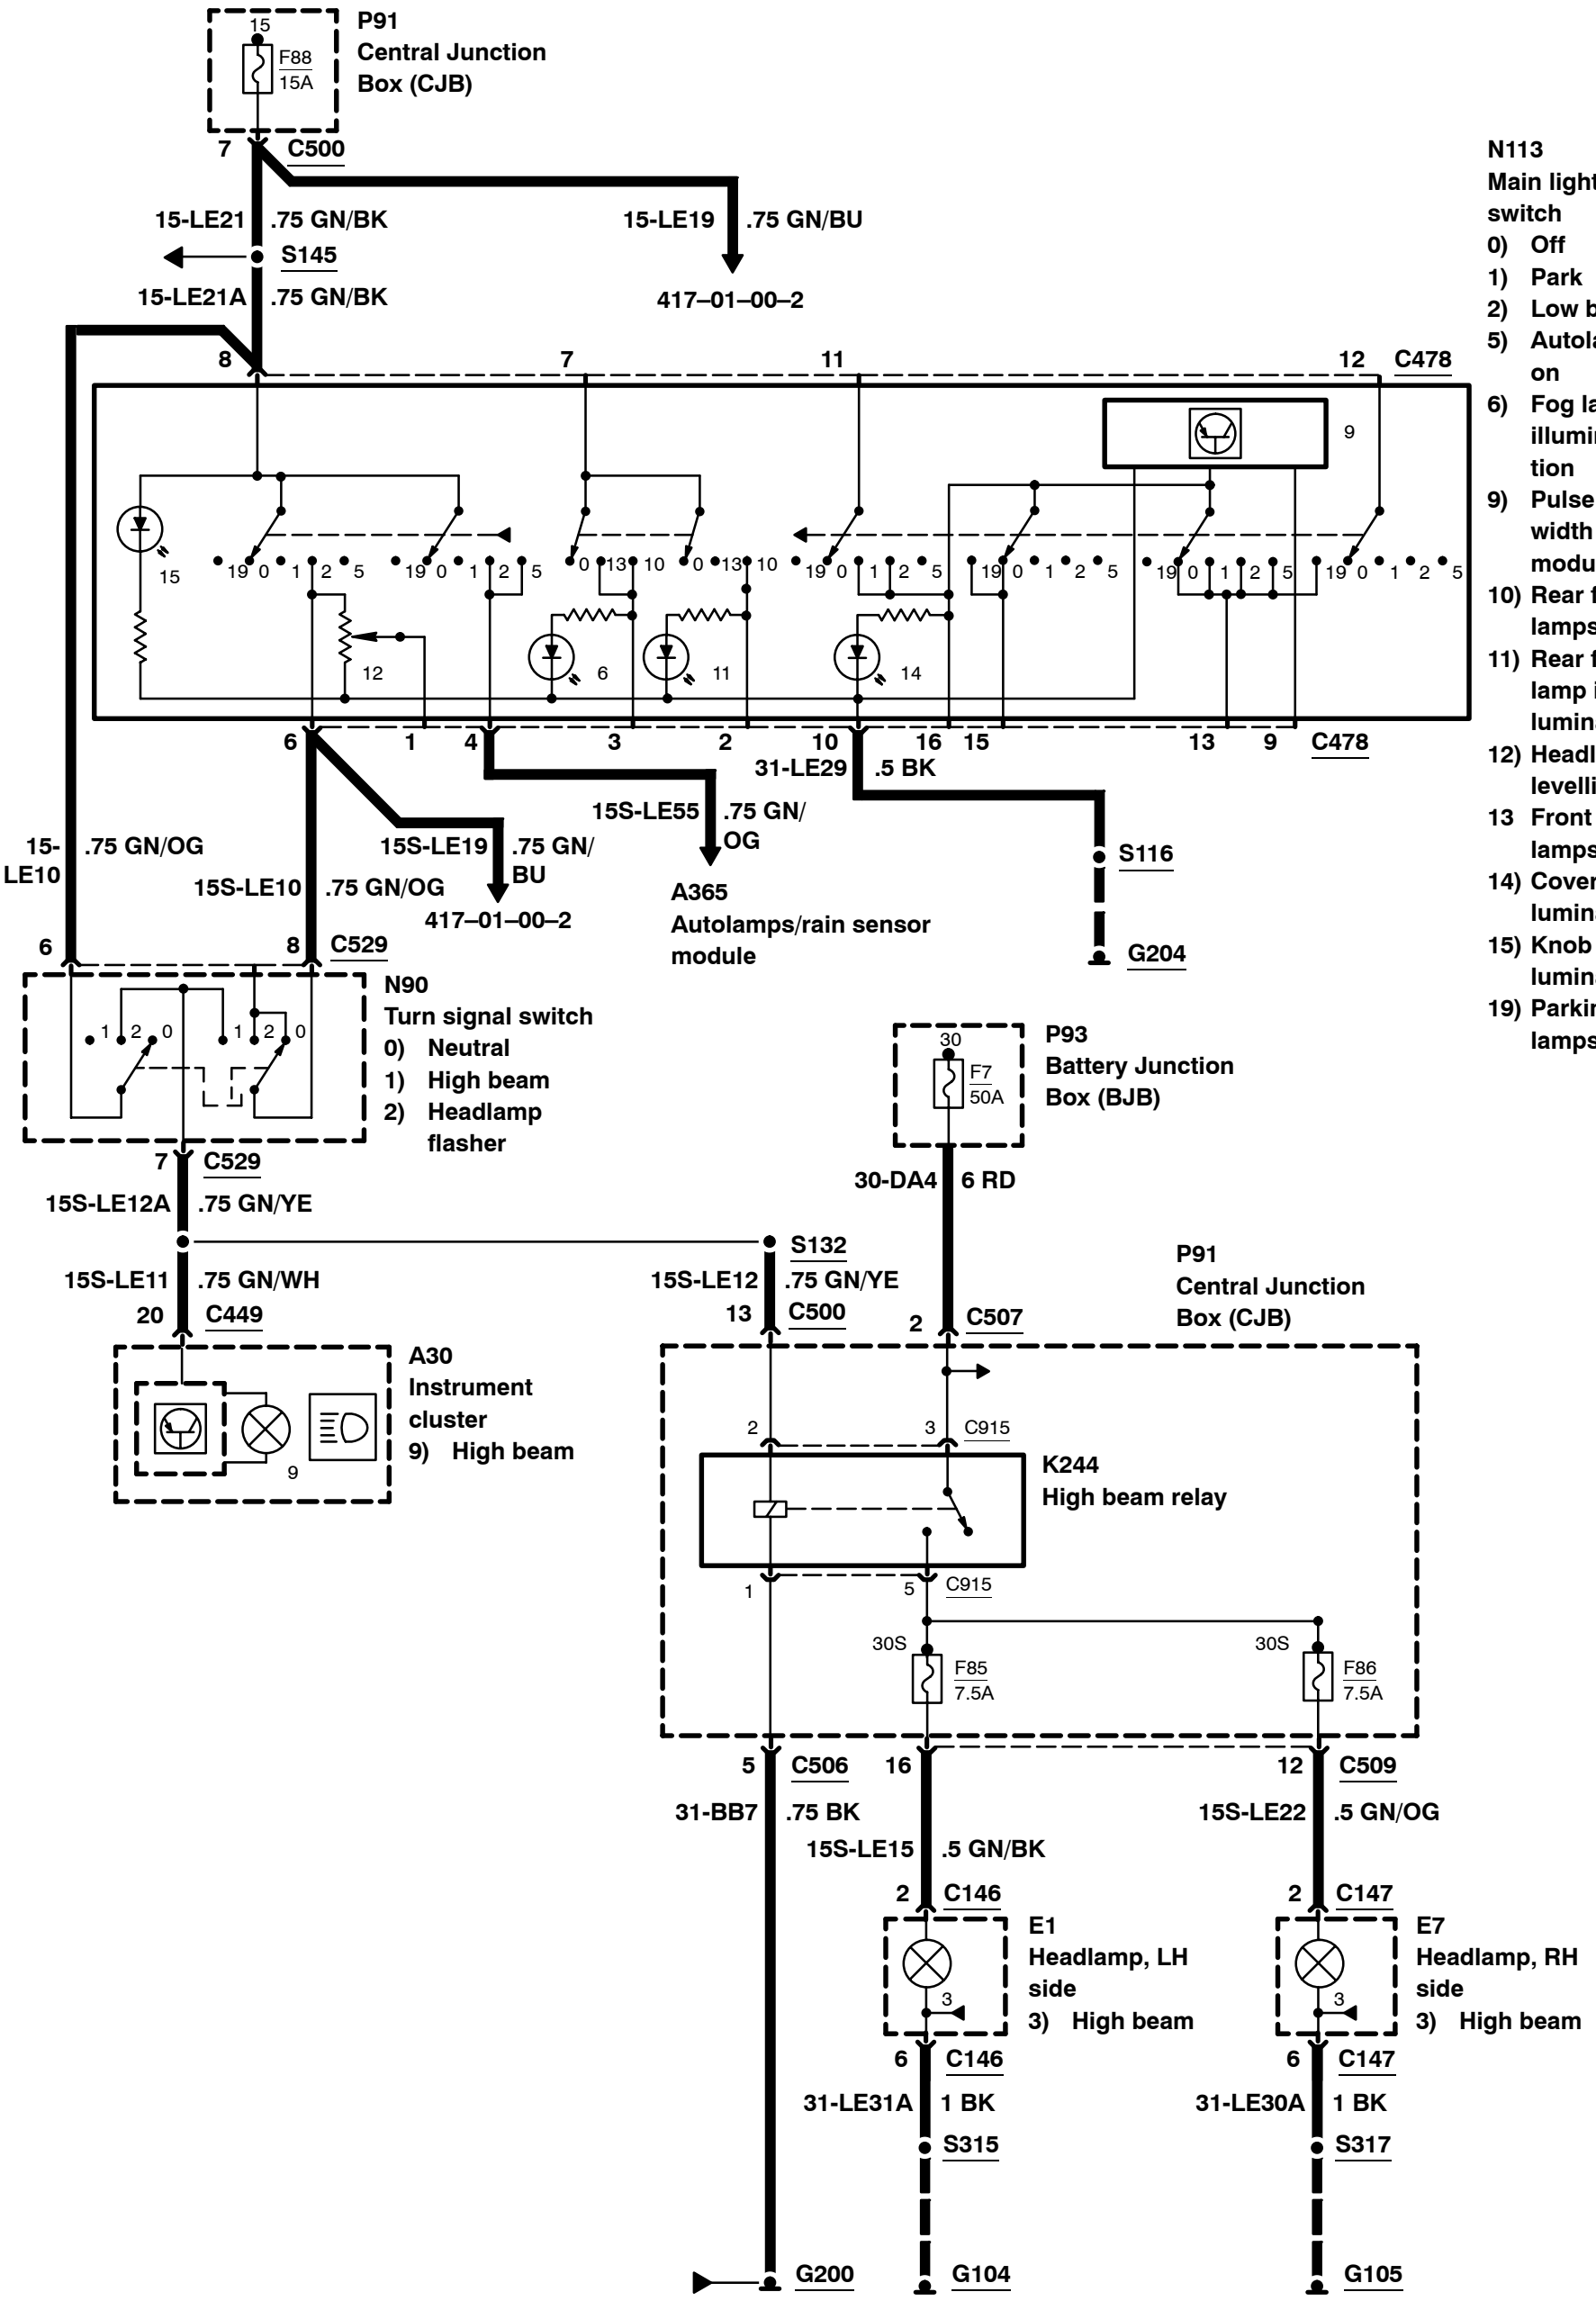


N113
Main light switch
0) Off
1) Park
2) Low beam
5) Autolamp on
6) Fog lamp illumination
9) Pulse width module
10) Rear fog lamps
11) Rear fog lamp illumination
12) Headlamp levelling
13 Front fog lamps
14) Cover illumination
15) Knob illumination
19) Parking lamps


Exterior Lighting – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps

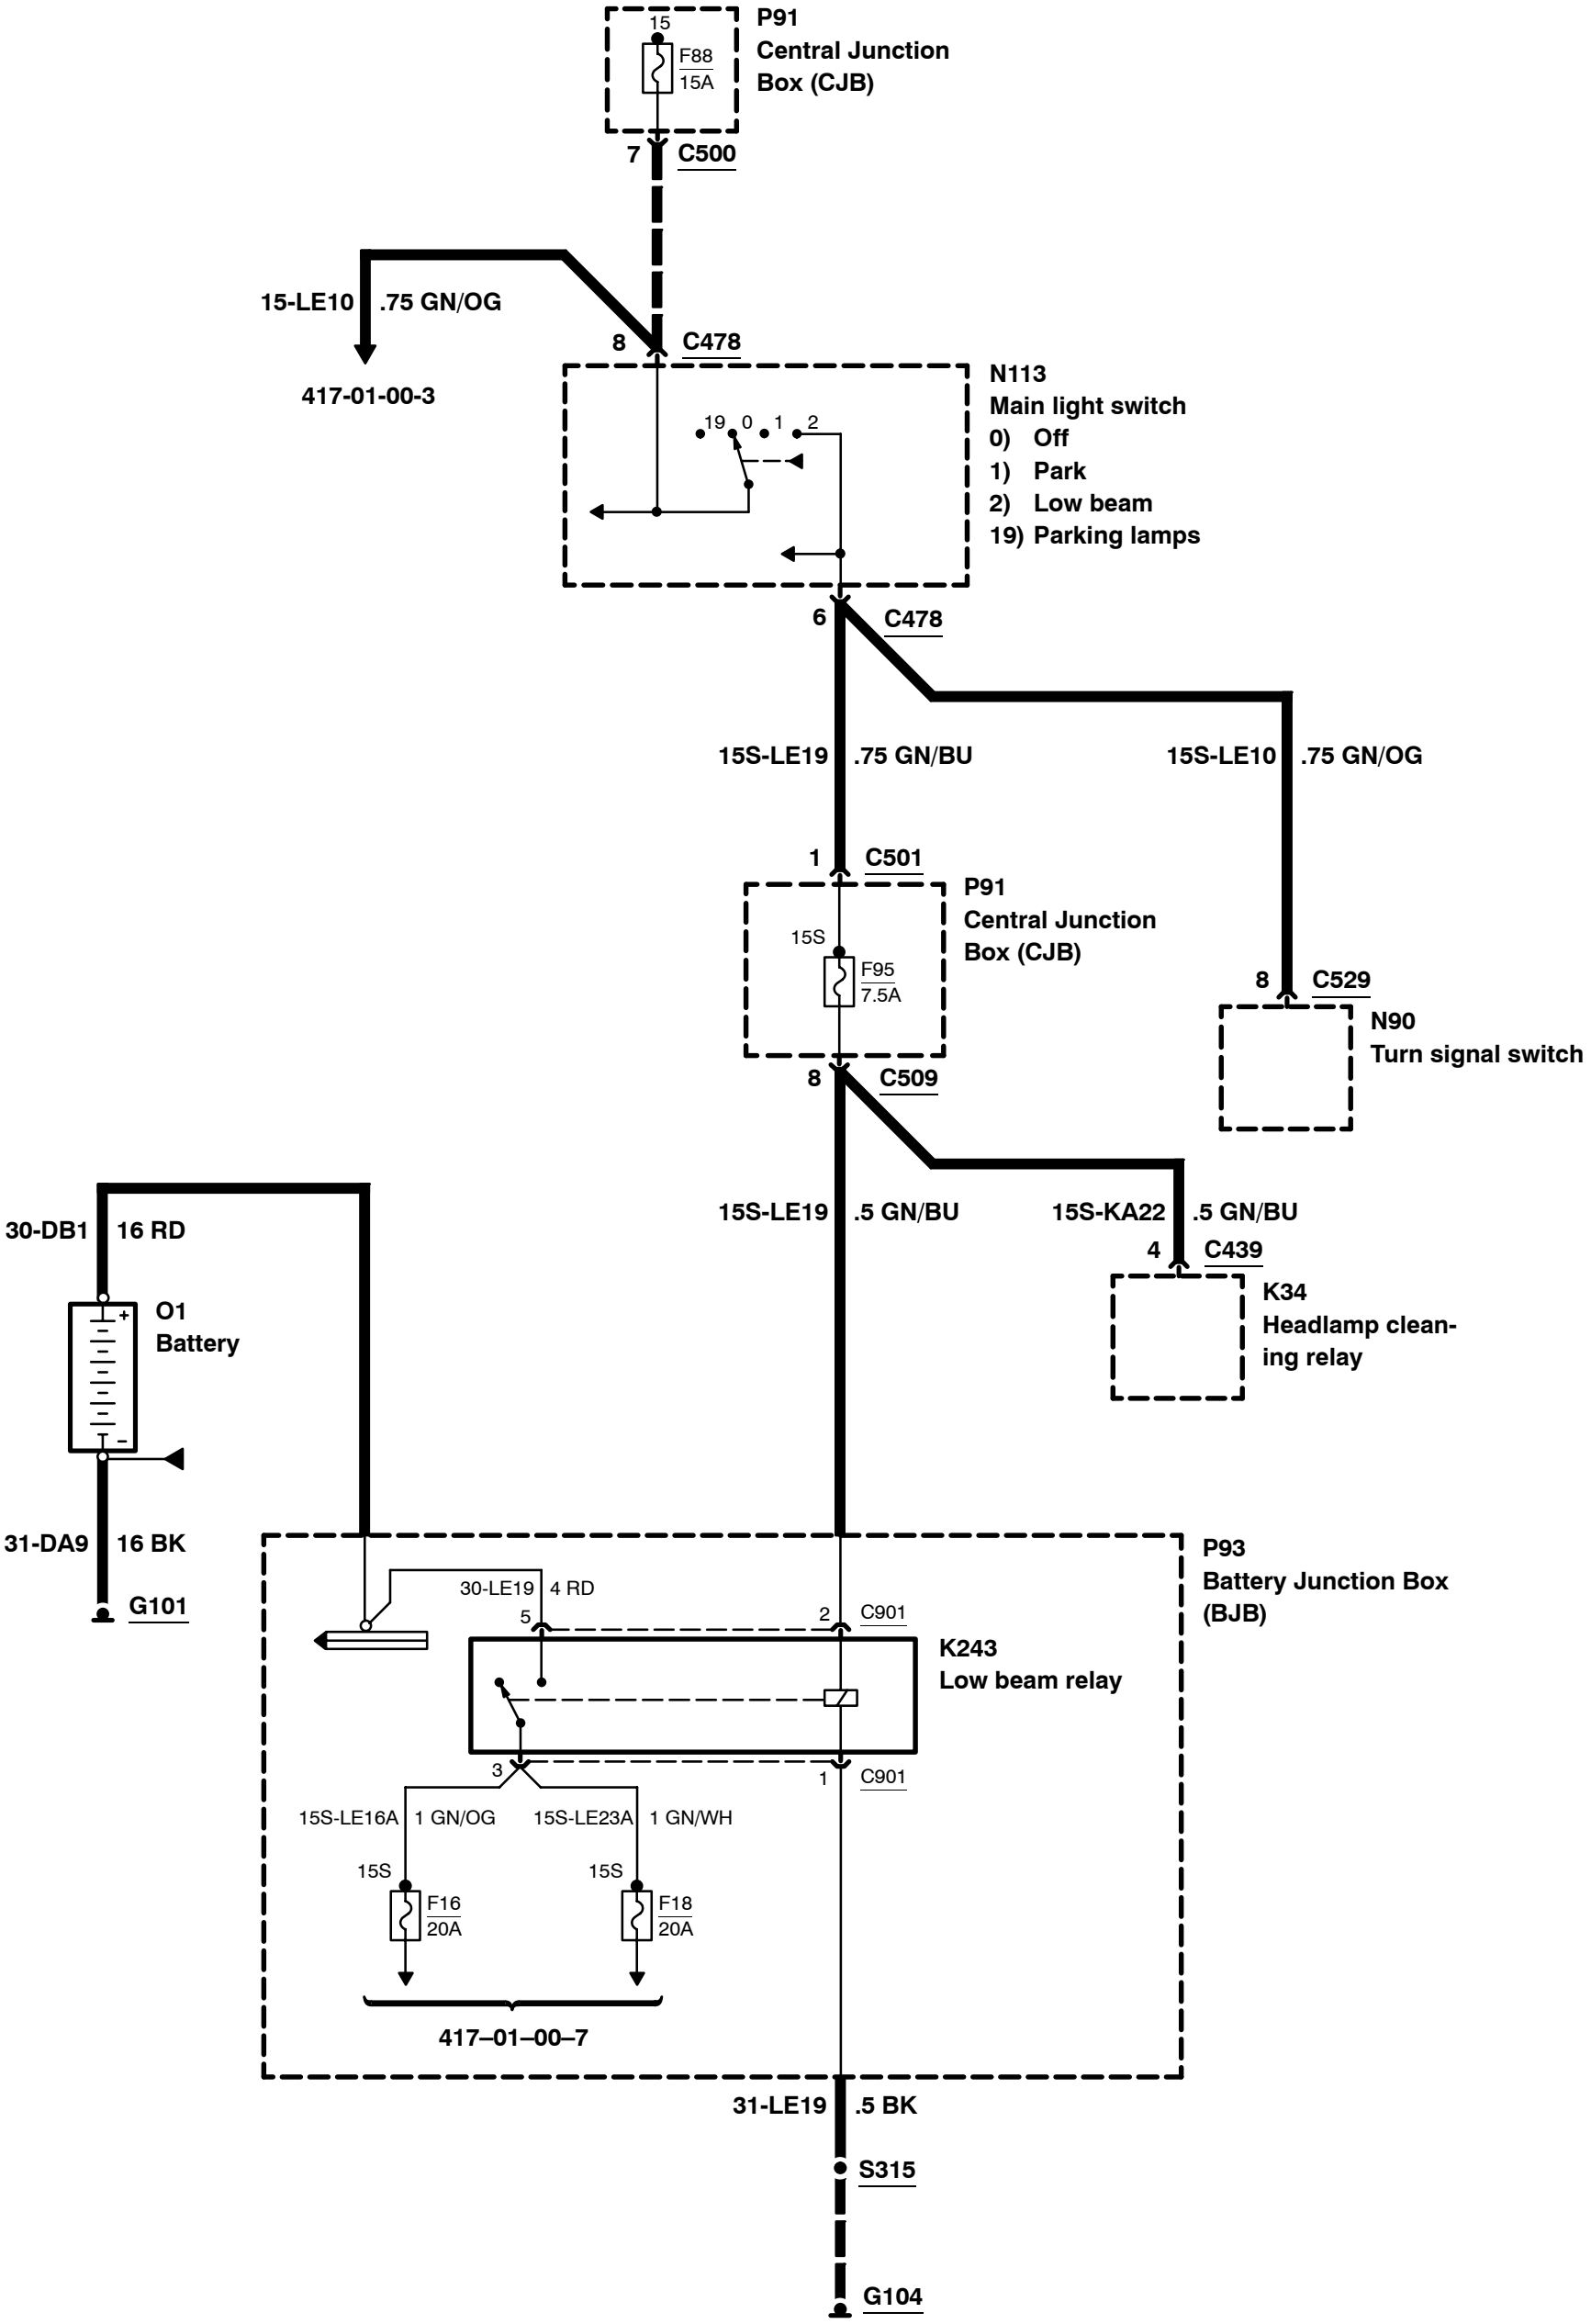


Exterior Lighting – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps

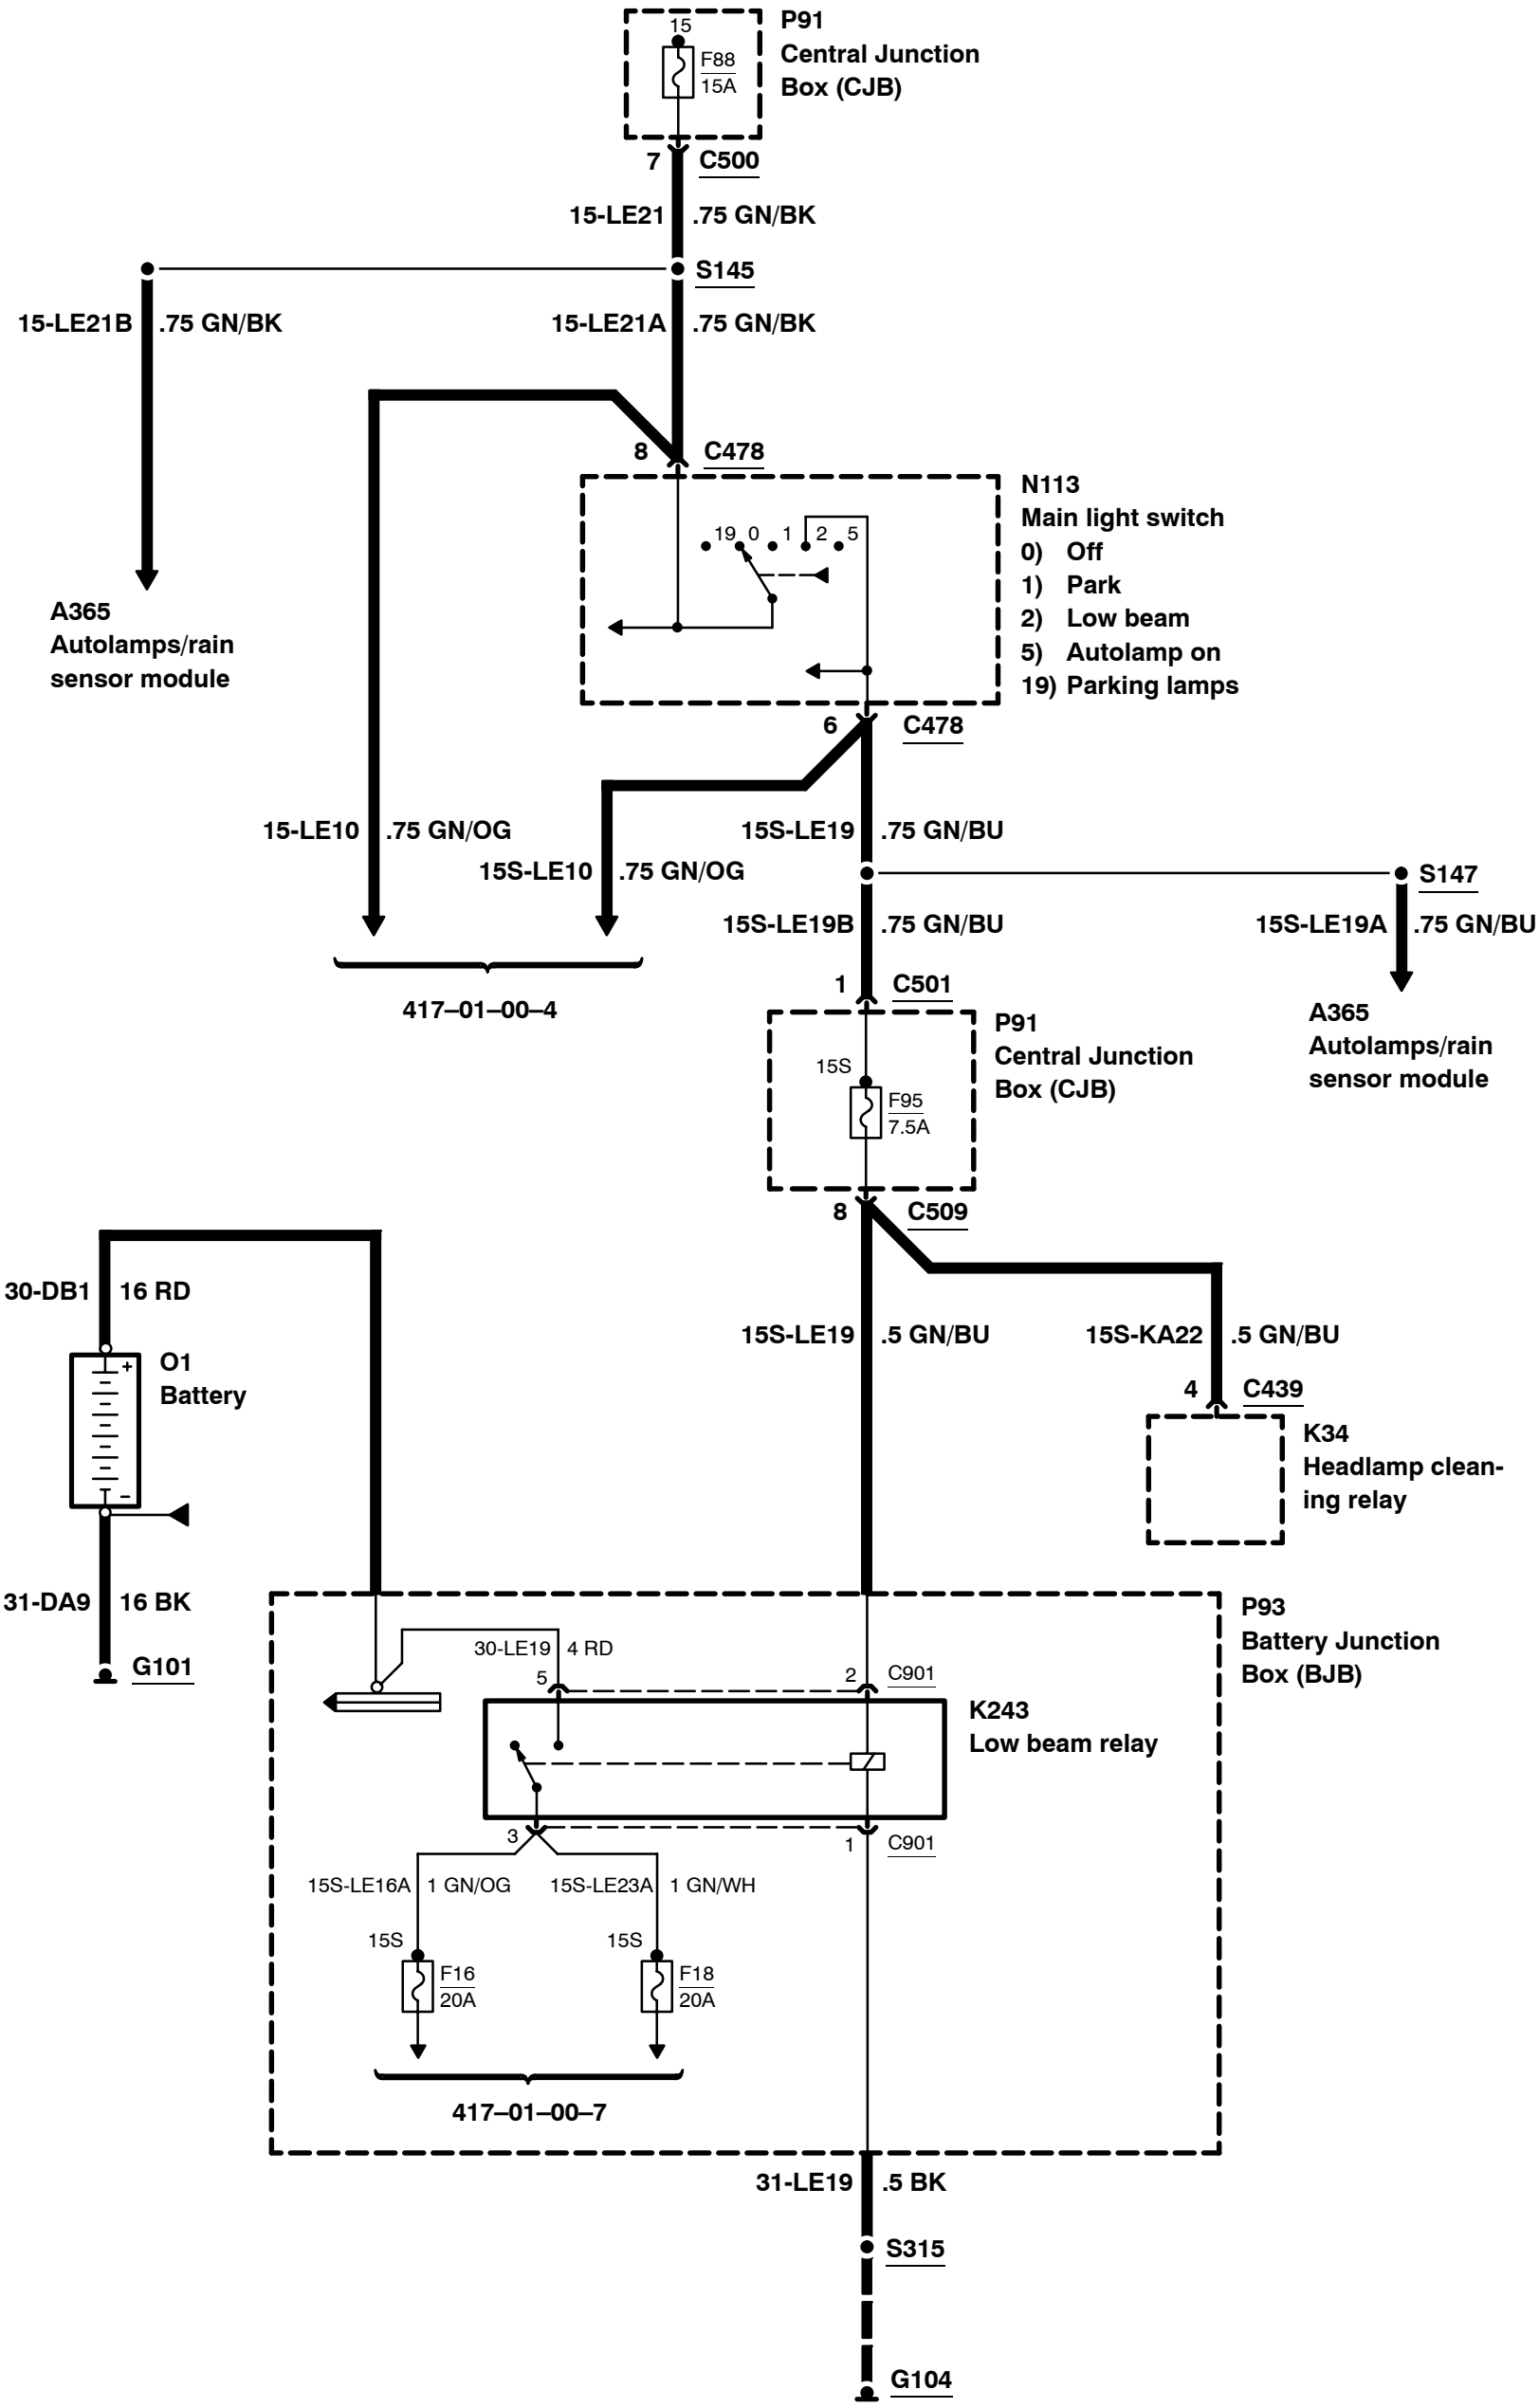

Exterior Lighting – Headlamps, Low beam, with high intensity discharge headlamps

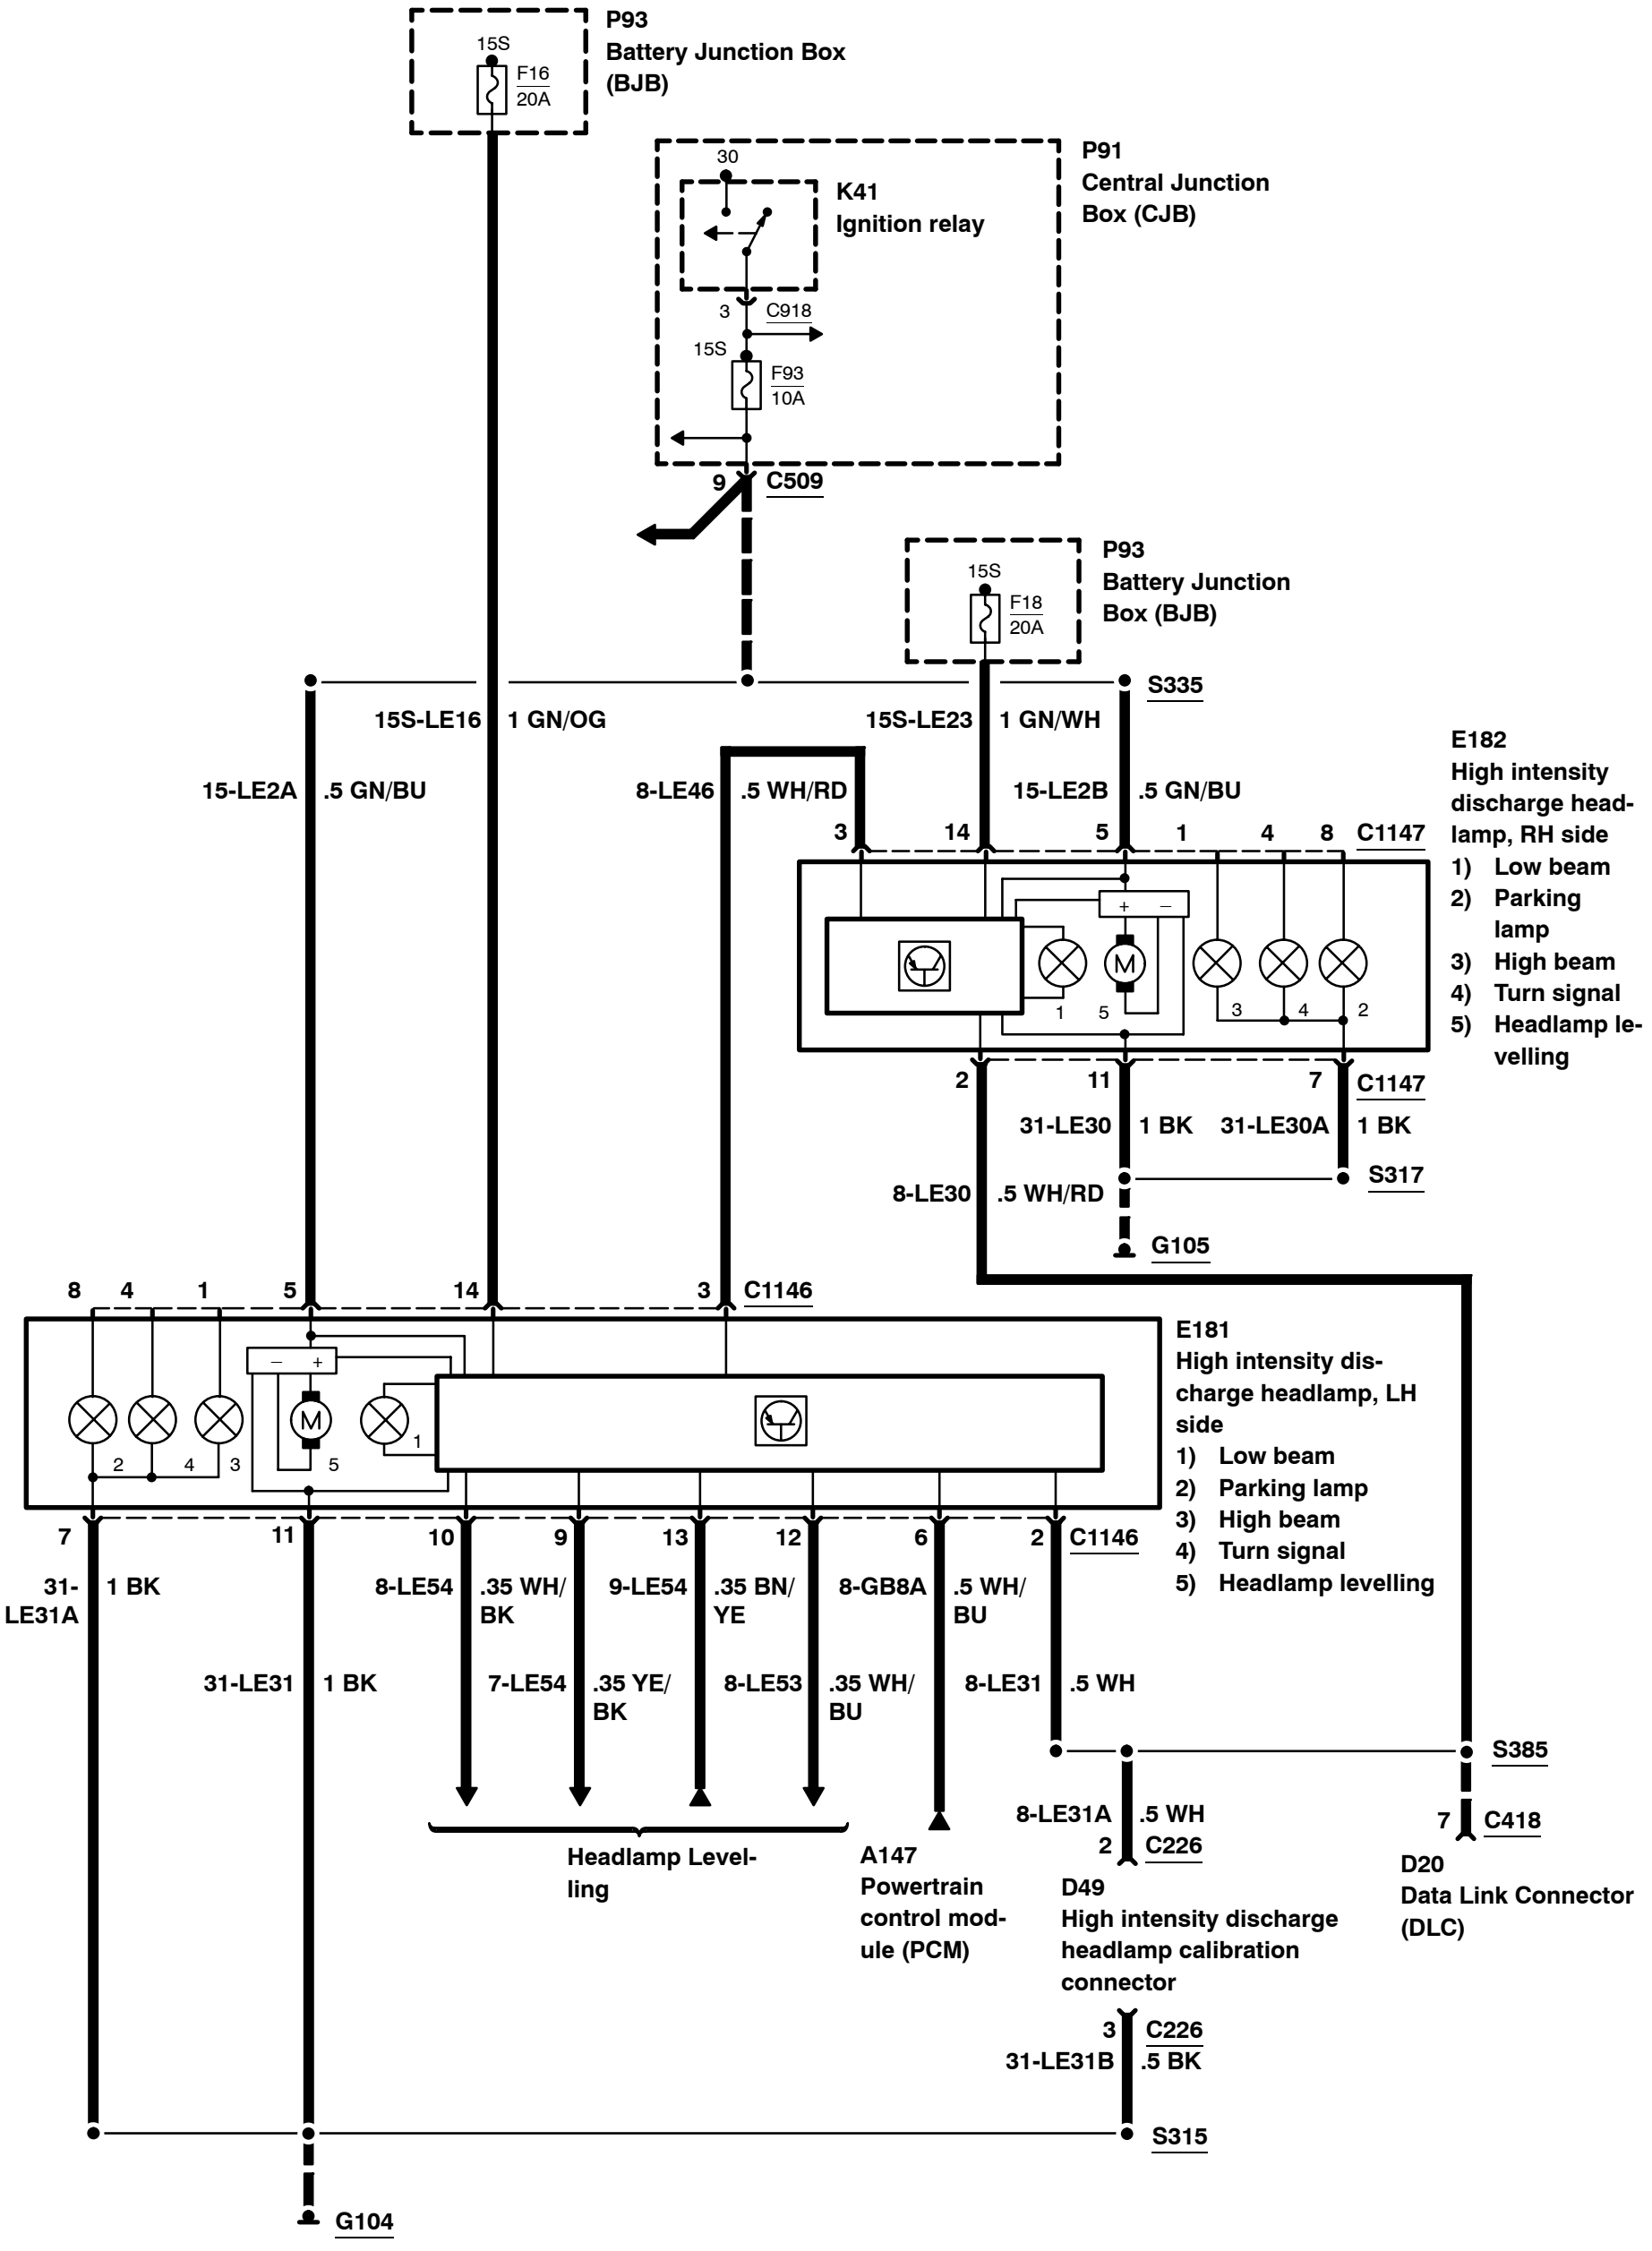


Exterior Lighting – Headlamps, High beam, with high intensity discharge headlamps, without autolamps

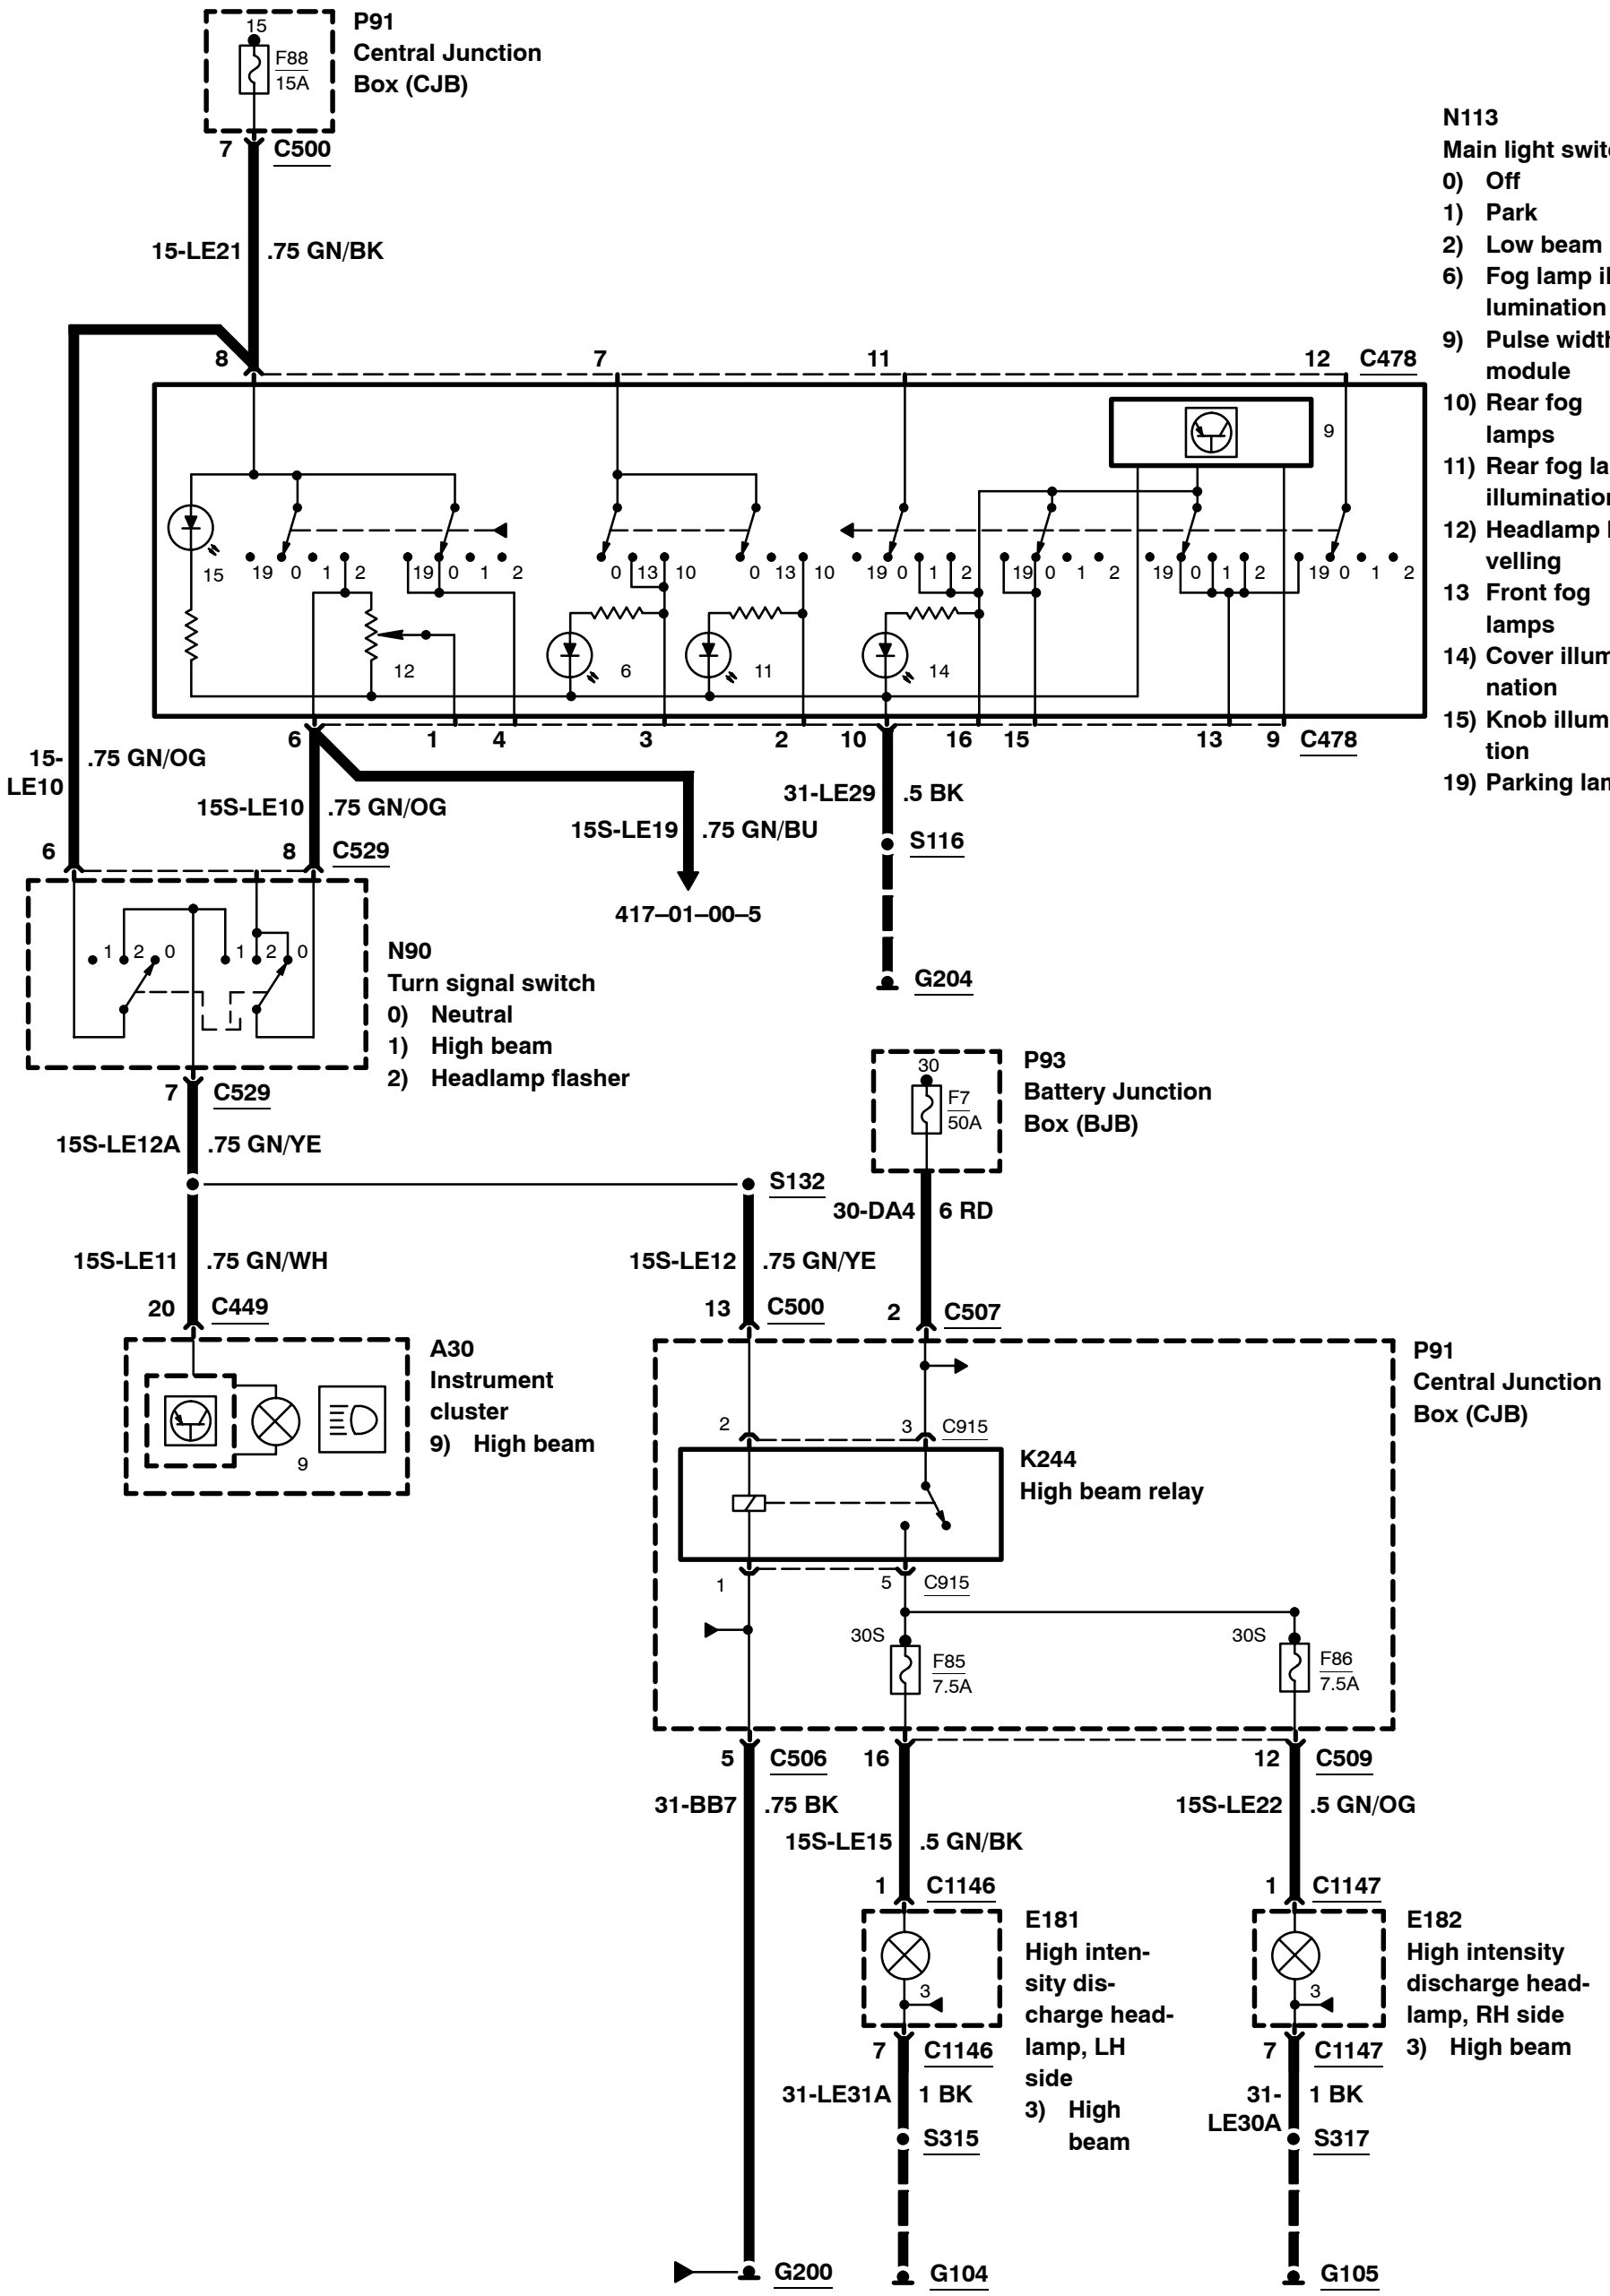


N113
Main light switch
0) Off
1) Park
2) Low beam
6) Fog lamp illumination
9) Pulse width module
10) Rear fog lamps
11) Rear fog lamp illumination
12) Headlamp levelling
13 Front fog lamps
14) Cover illumination
15) Knob illumination
19) Parking lamps


Exterior Lighting – Headlamps, High beam, with high intensity discharge headlamps, with autolamps

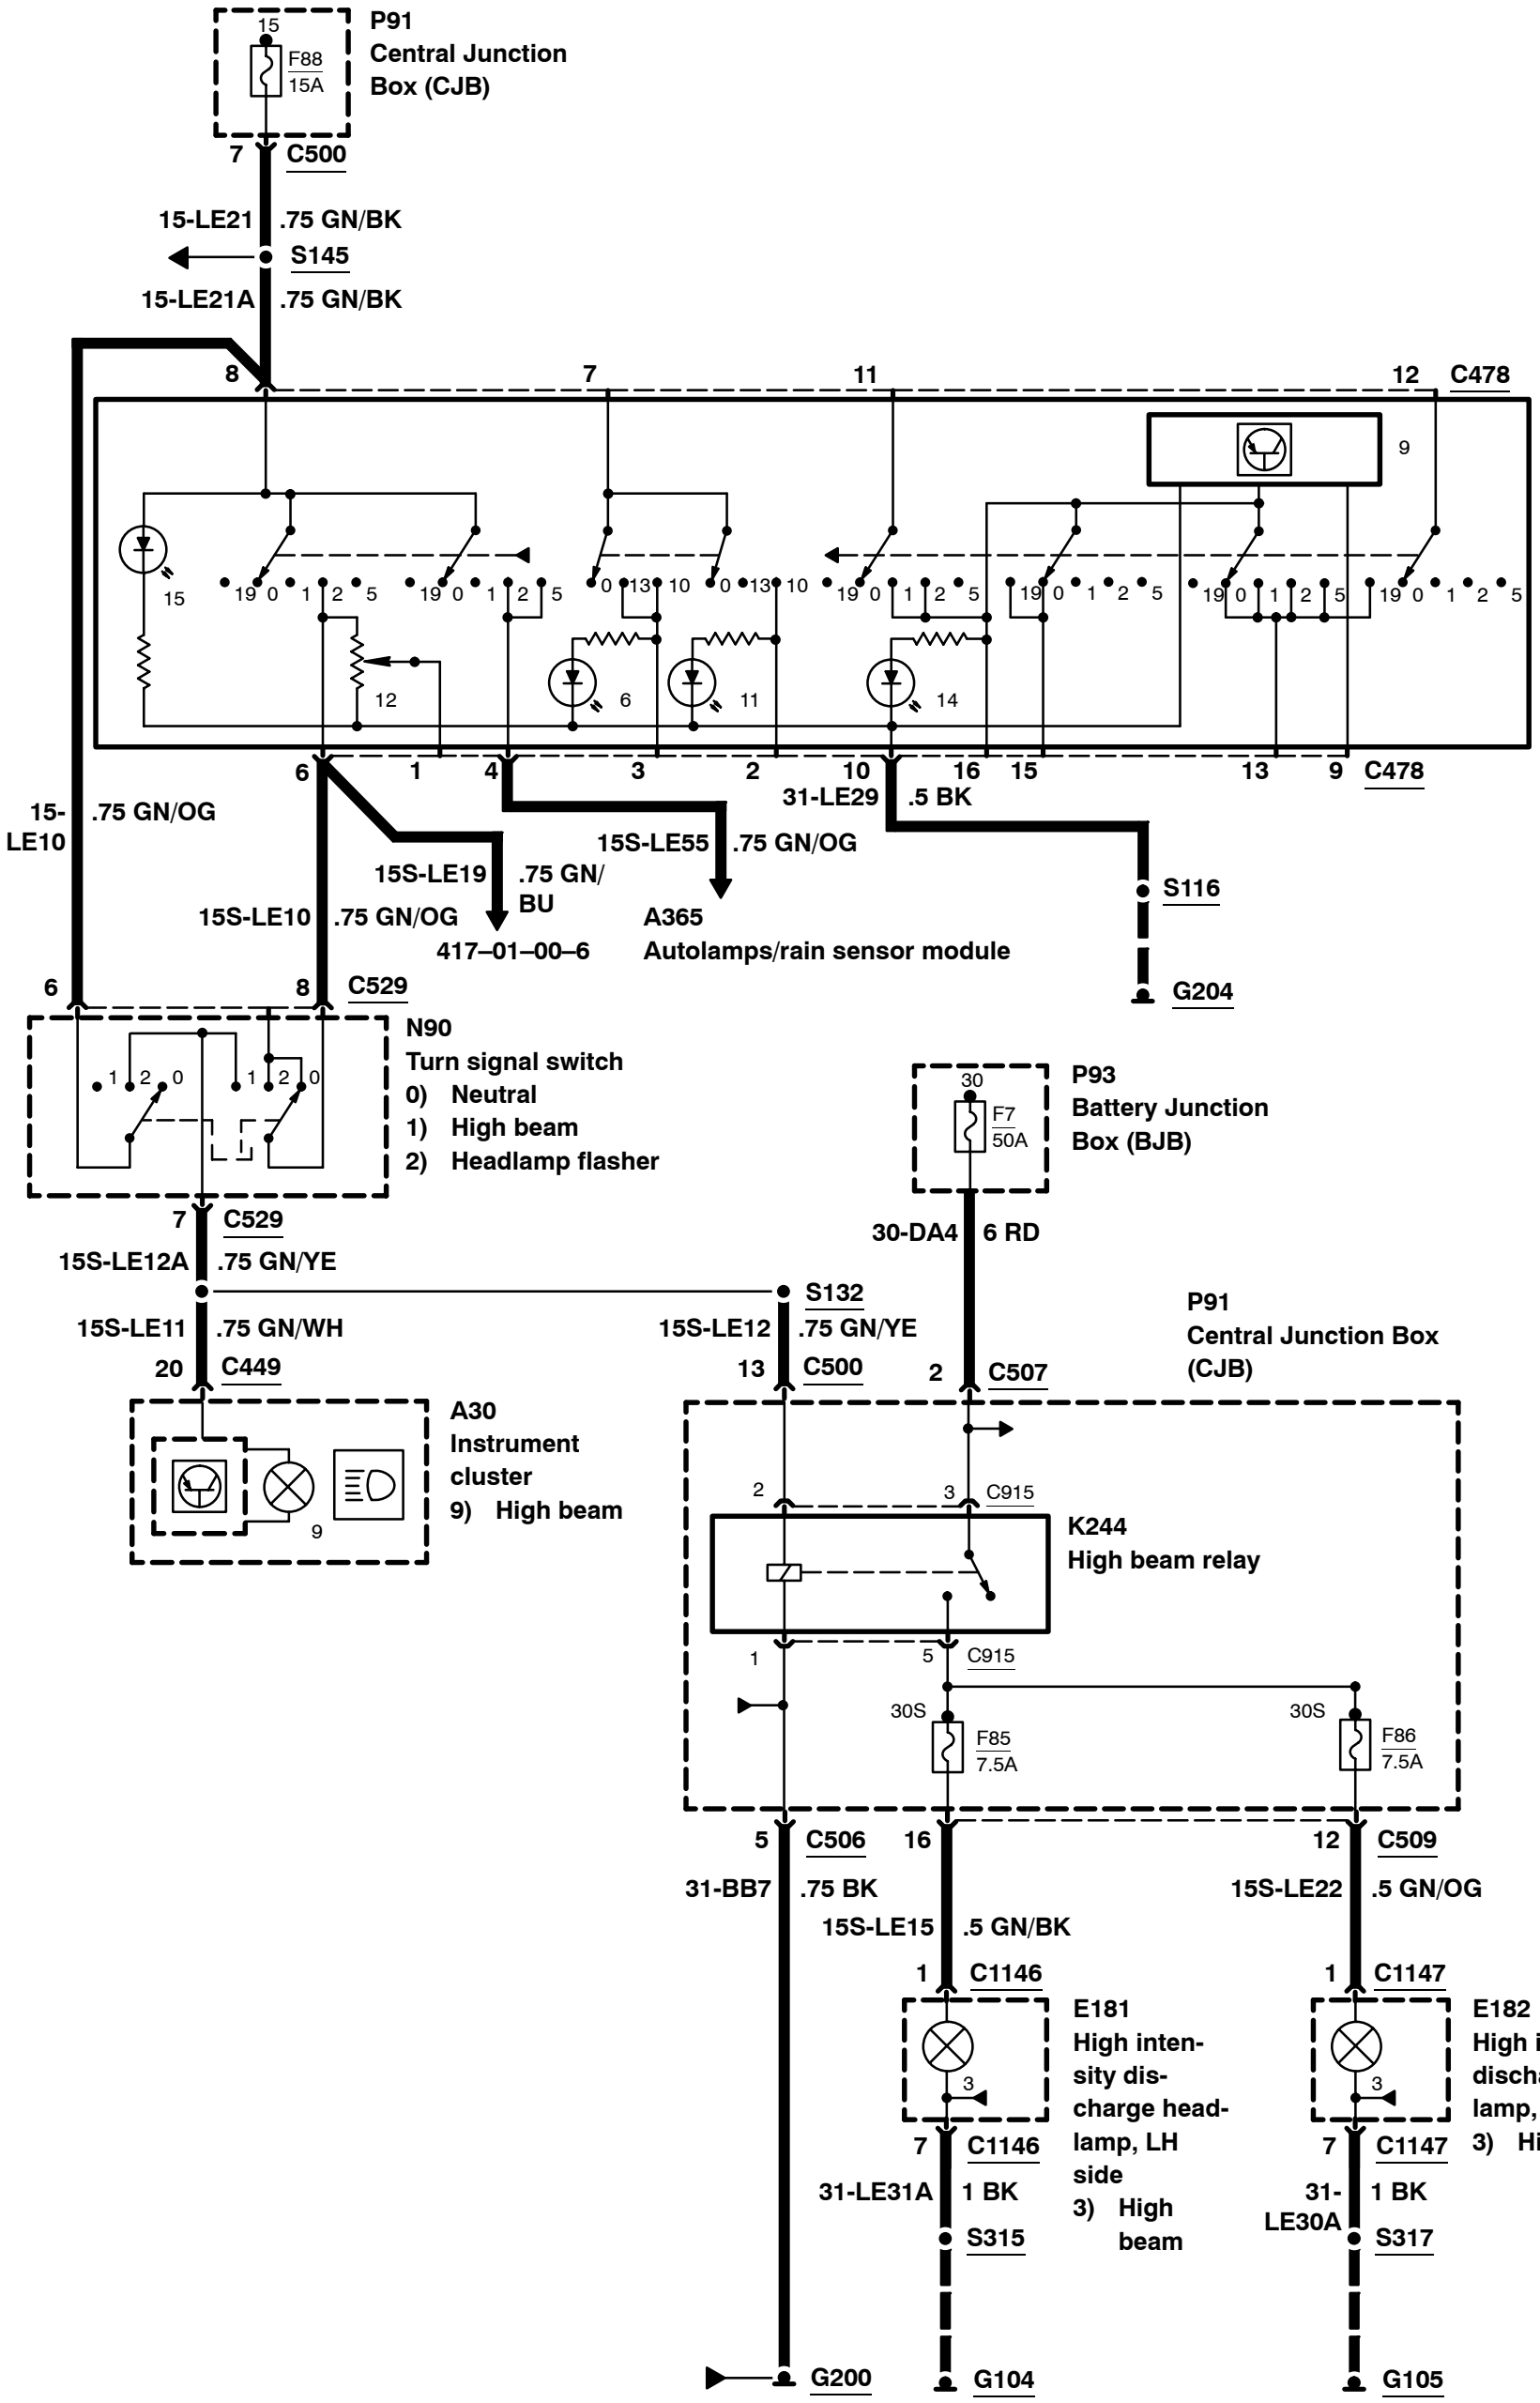


Exterior Lighting – Autolamps

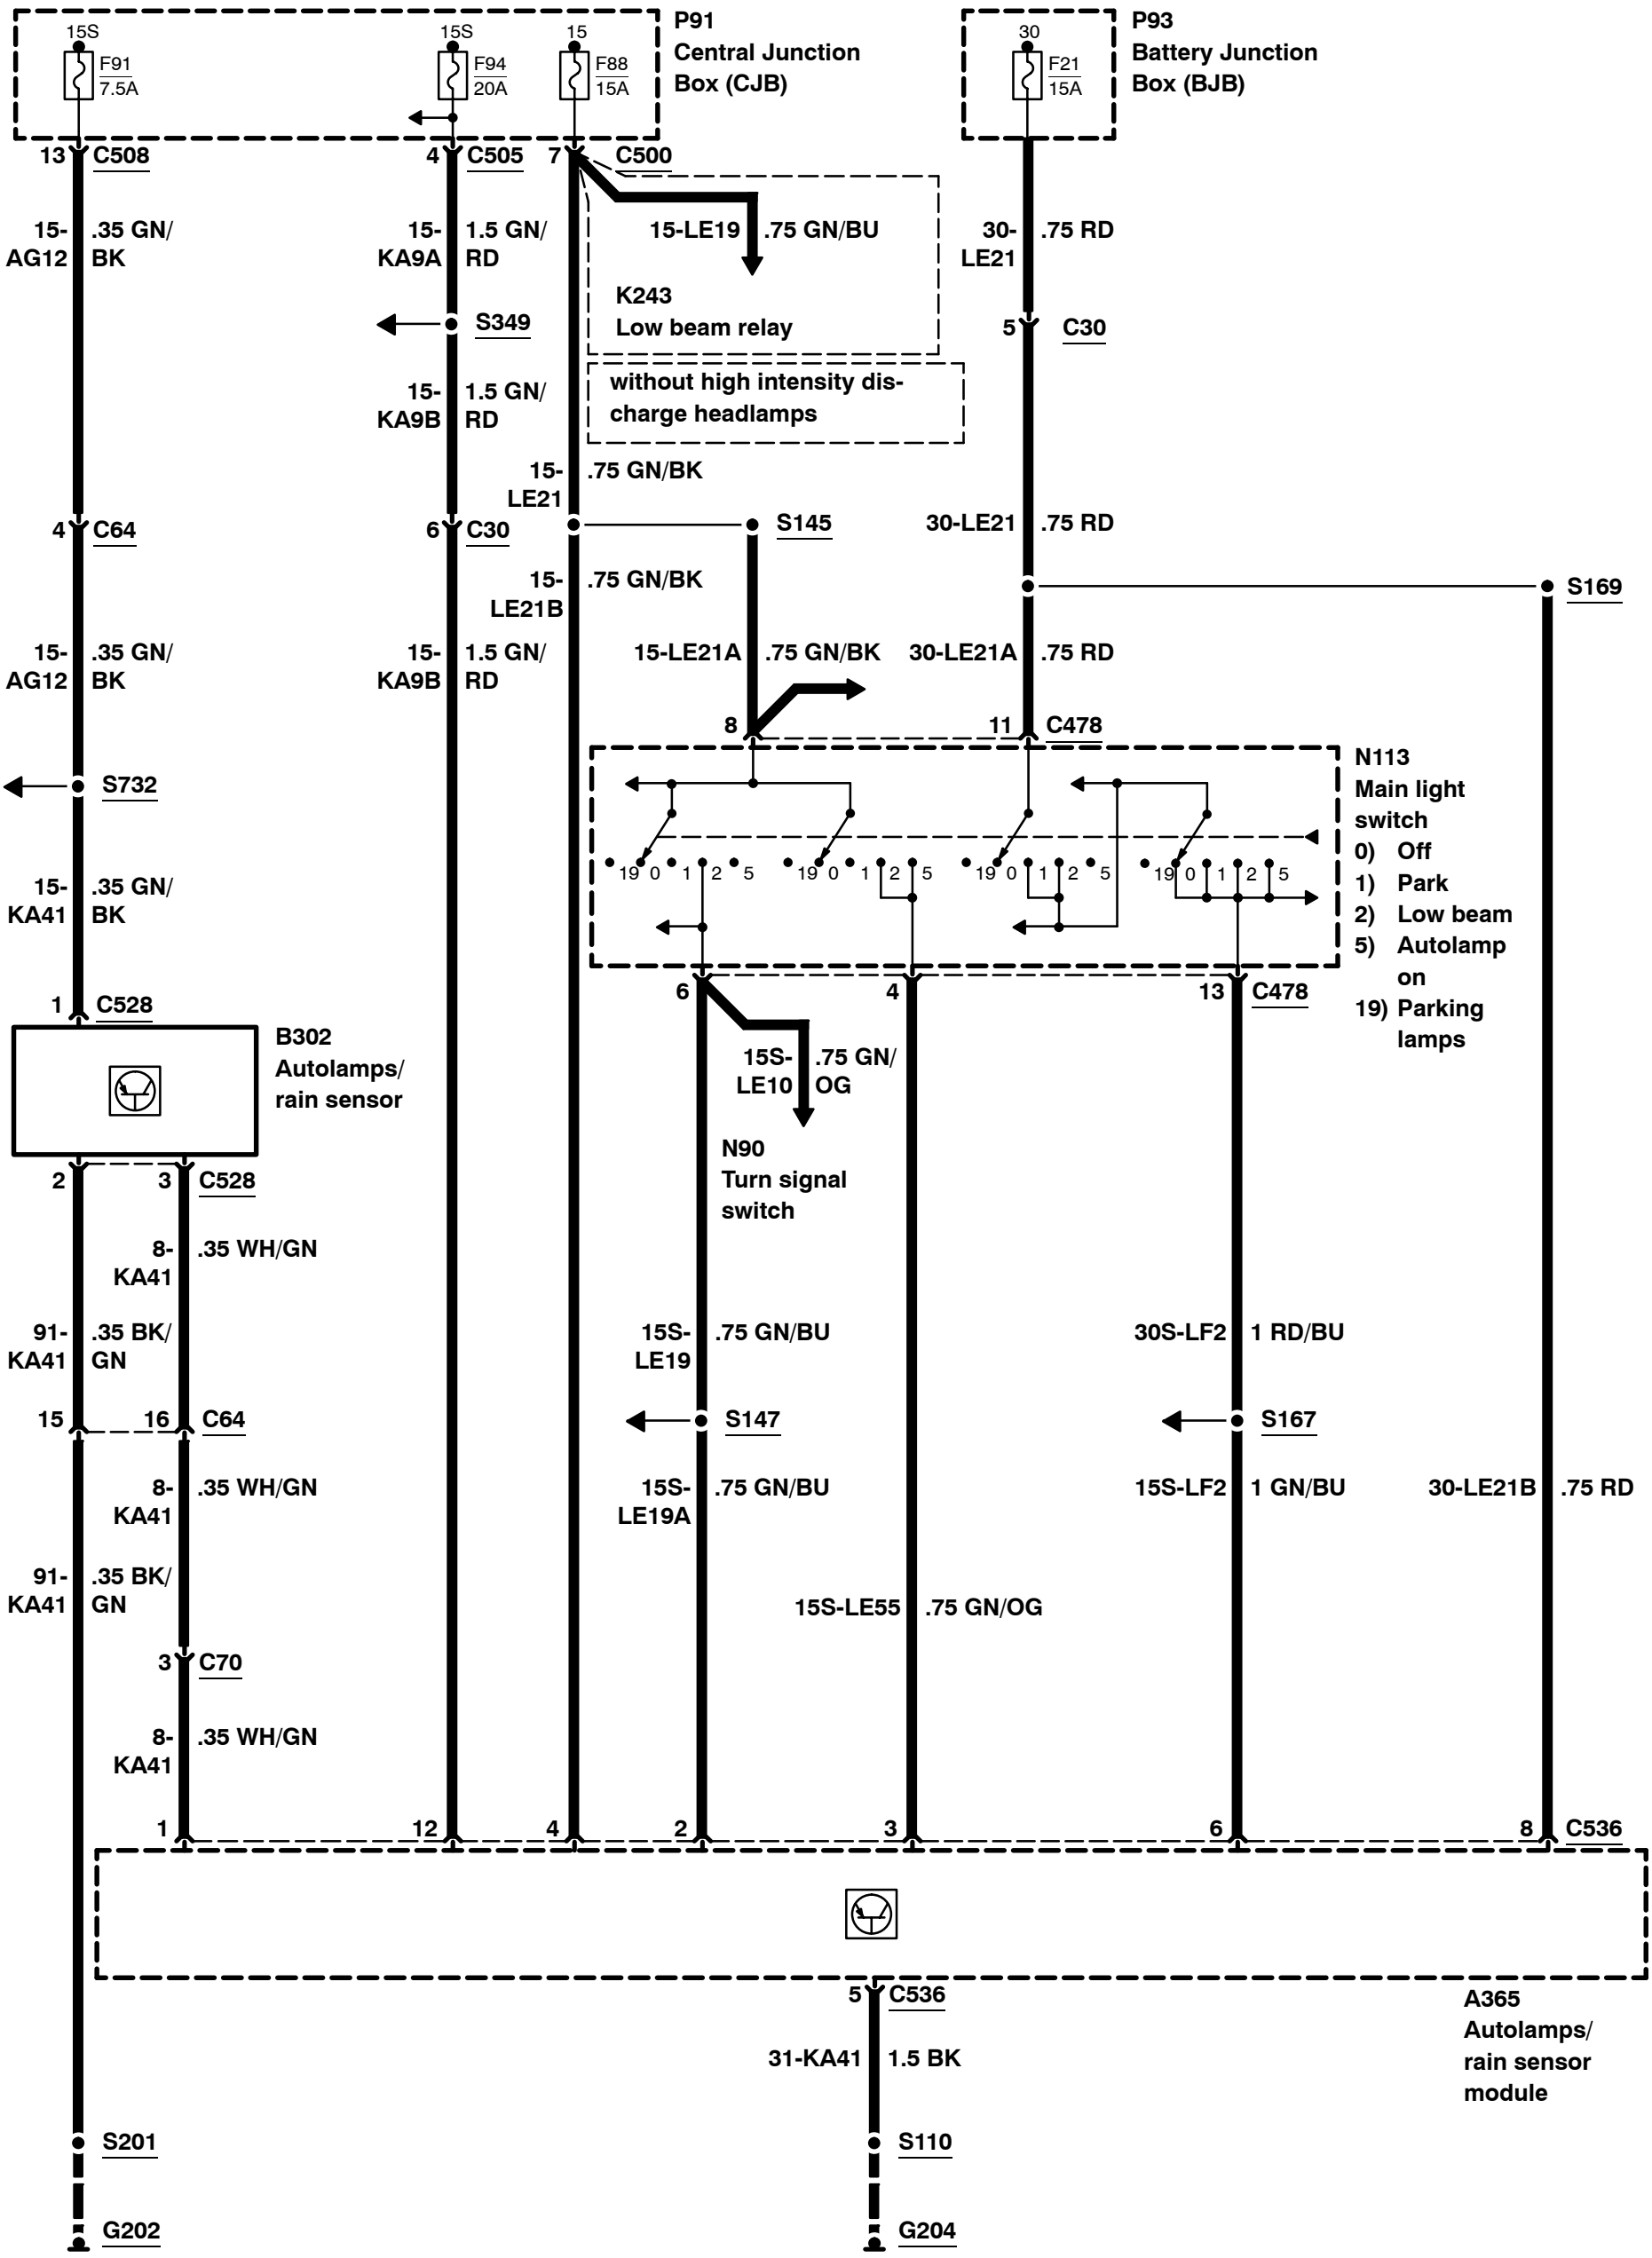


Exterior Lighting – Headlamp Levelling, without high intensity discharge headlamps

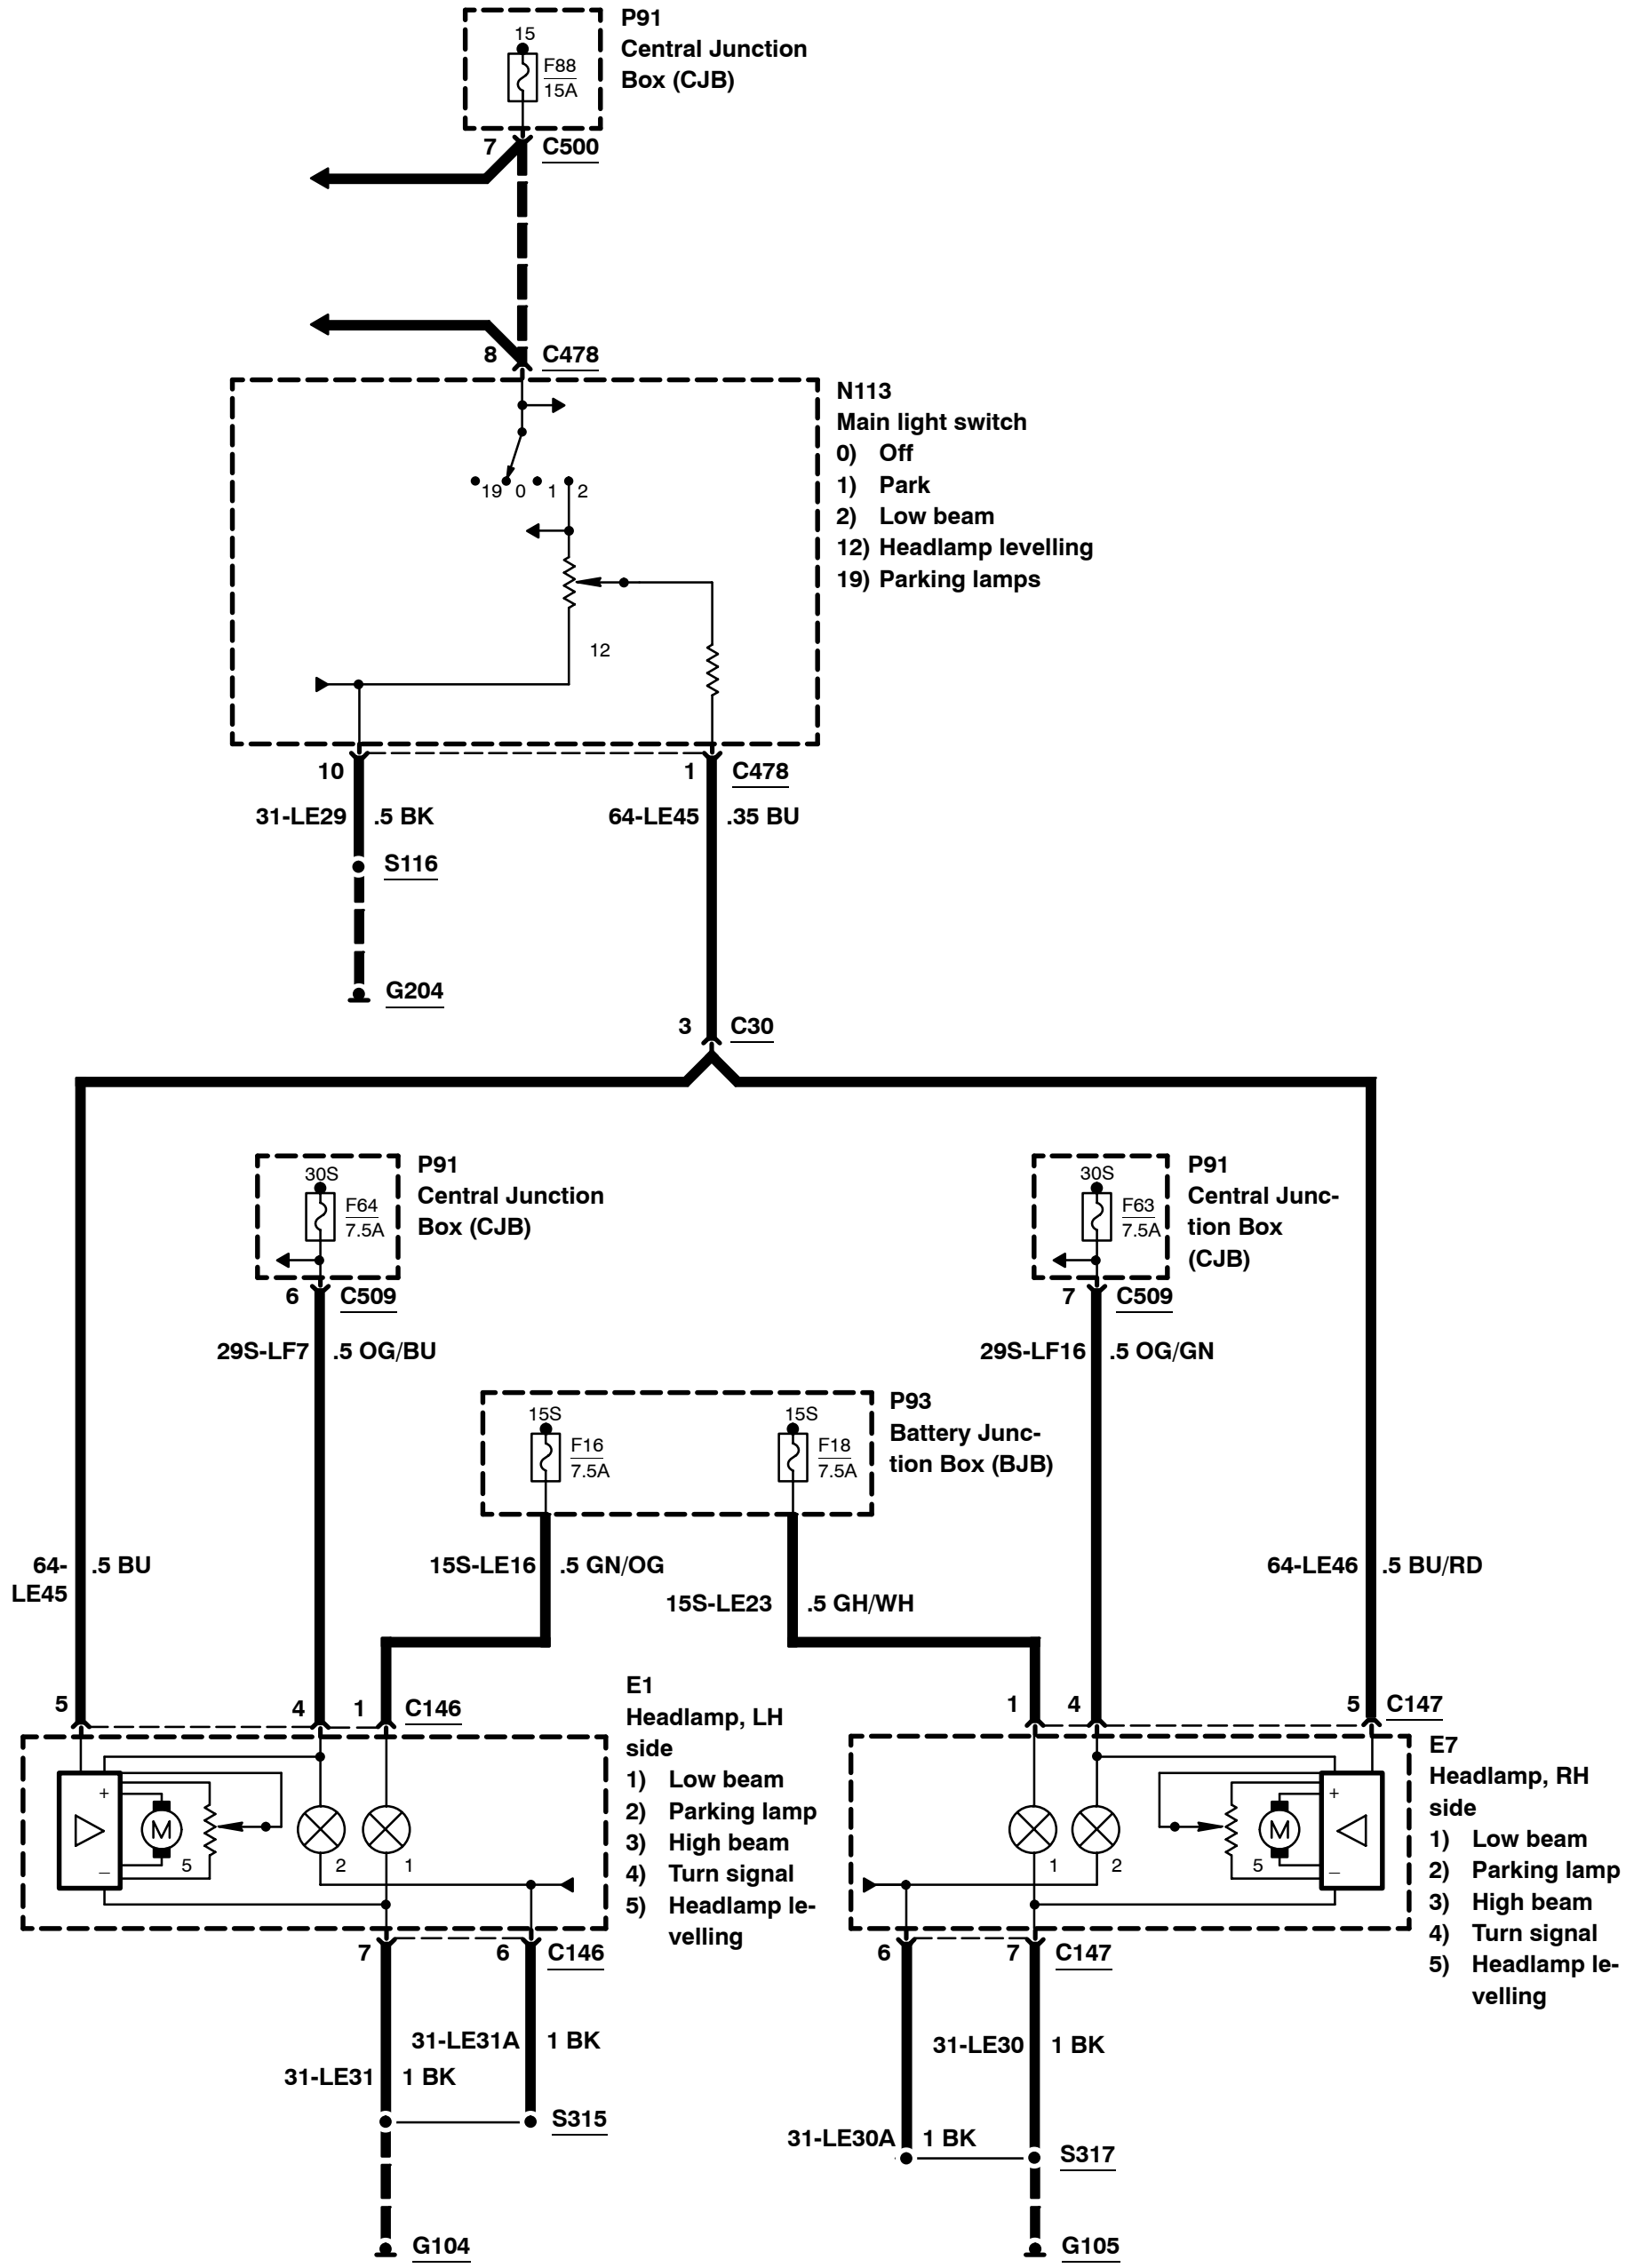


Exterior Lighting – Headlamp Levelling, with high intensity discharge headlamps

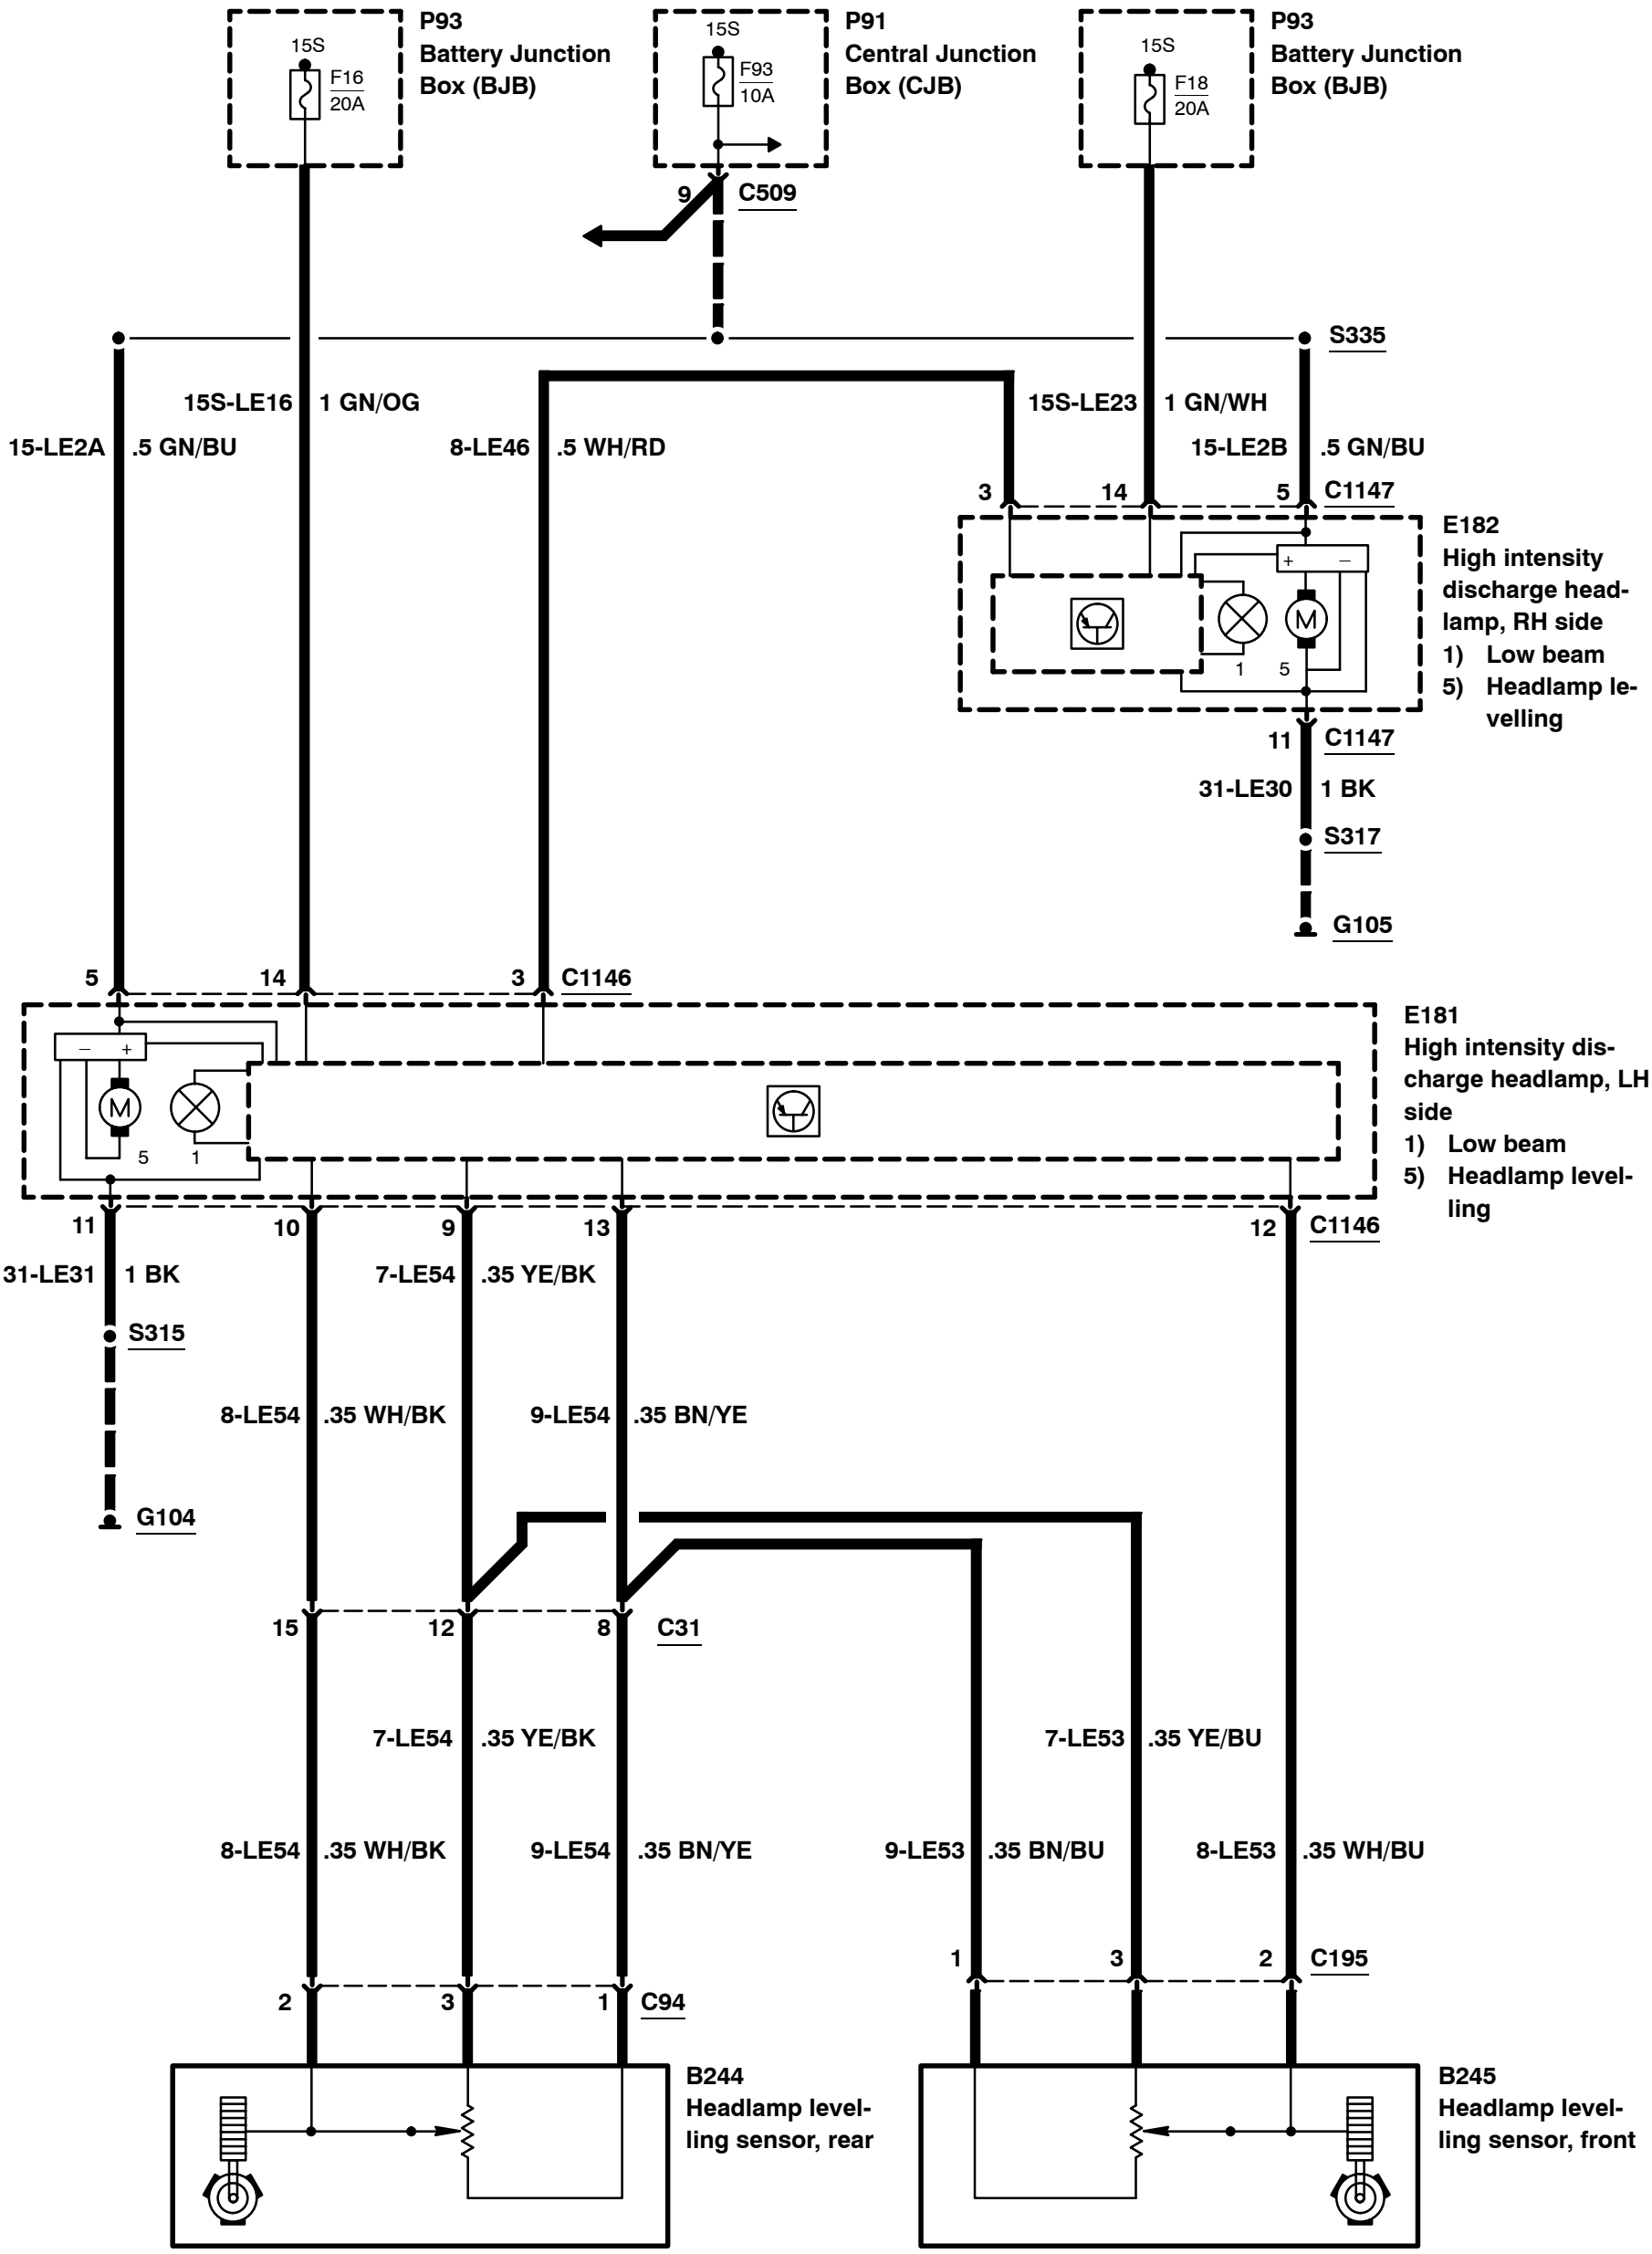


Exterior Lighting – Turn Signal and Hazard Lamps

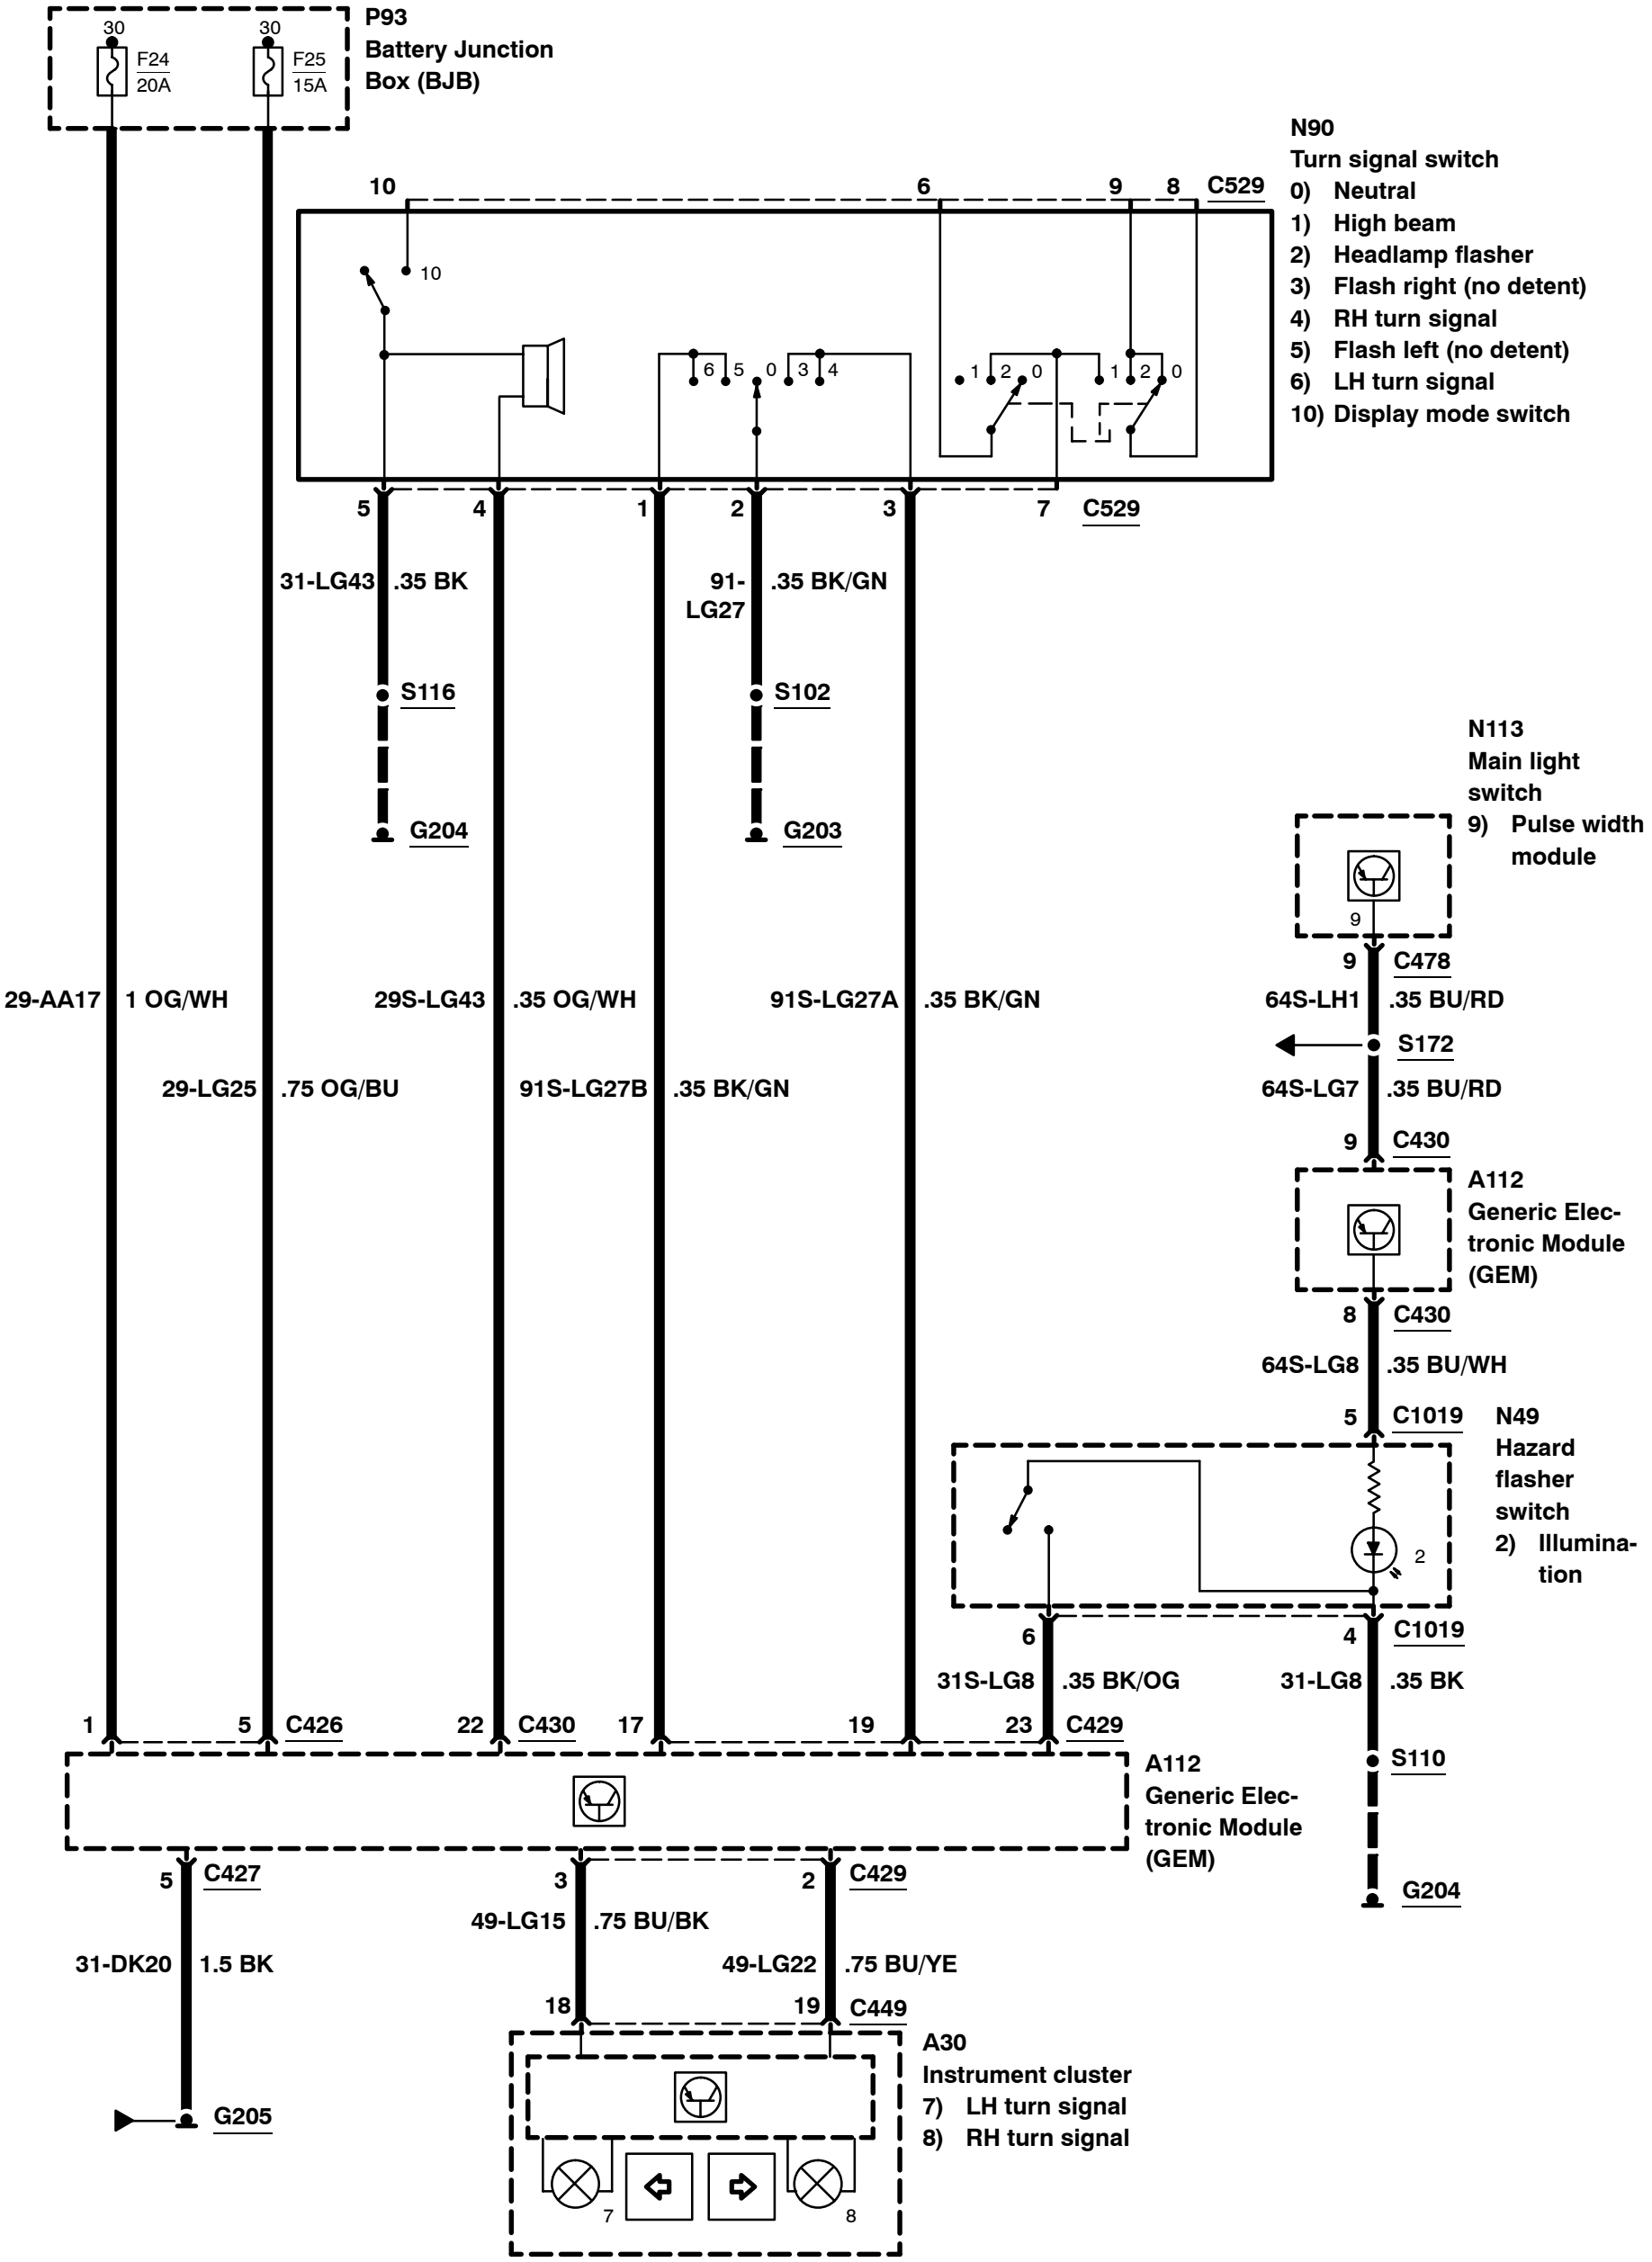


Exterior Lighting – Turn Signal and Hazard Lamps

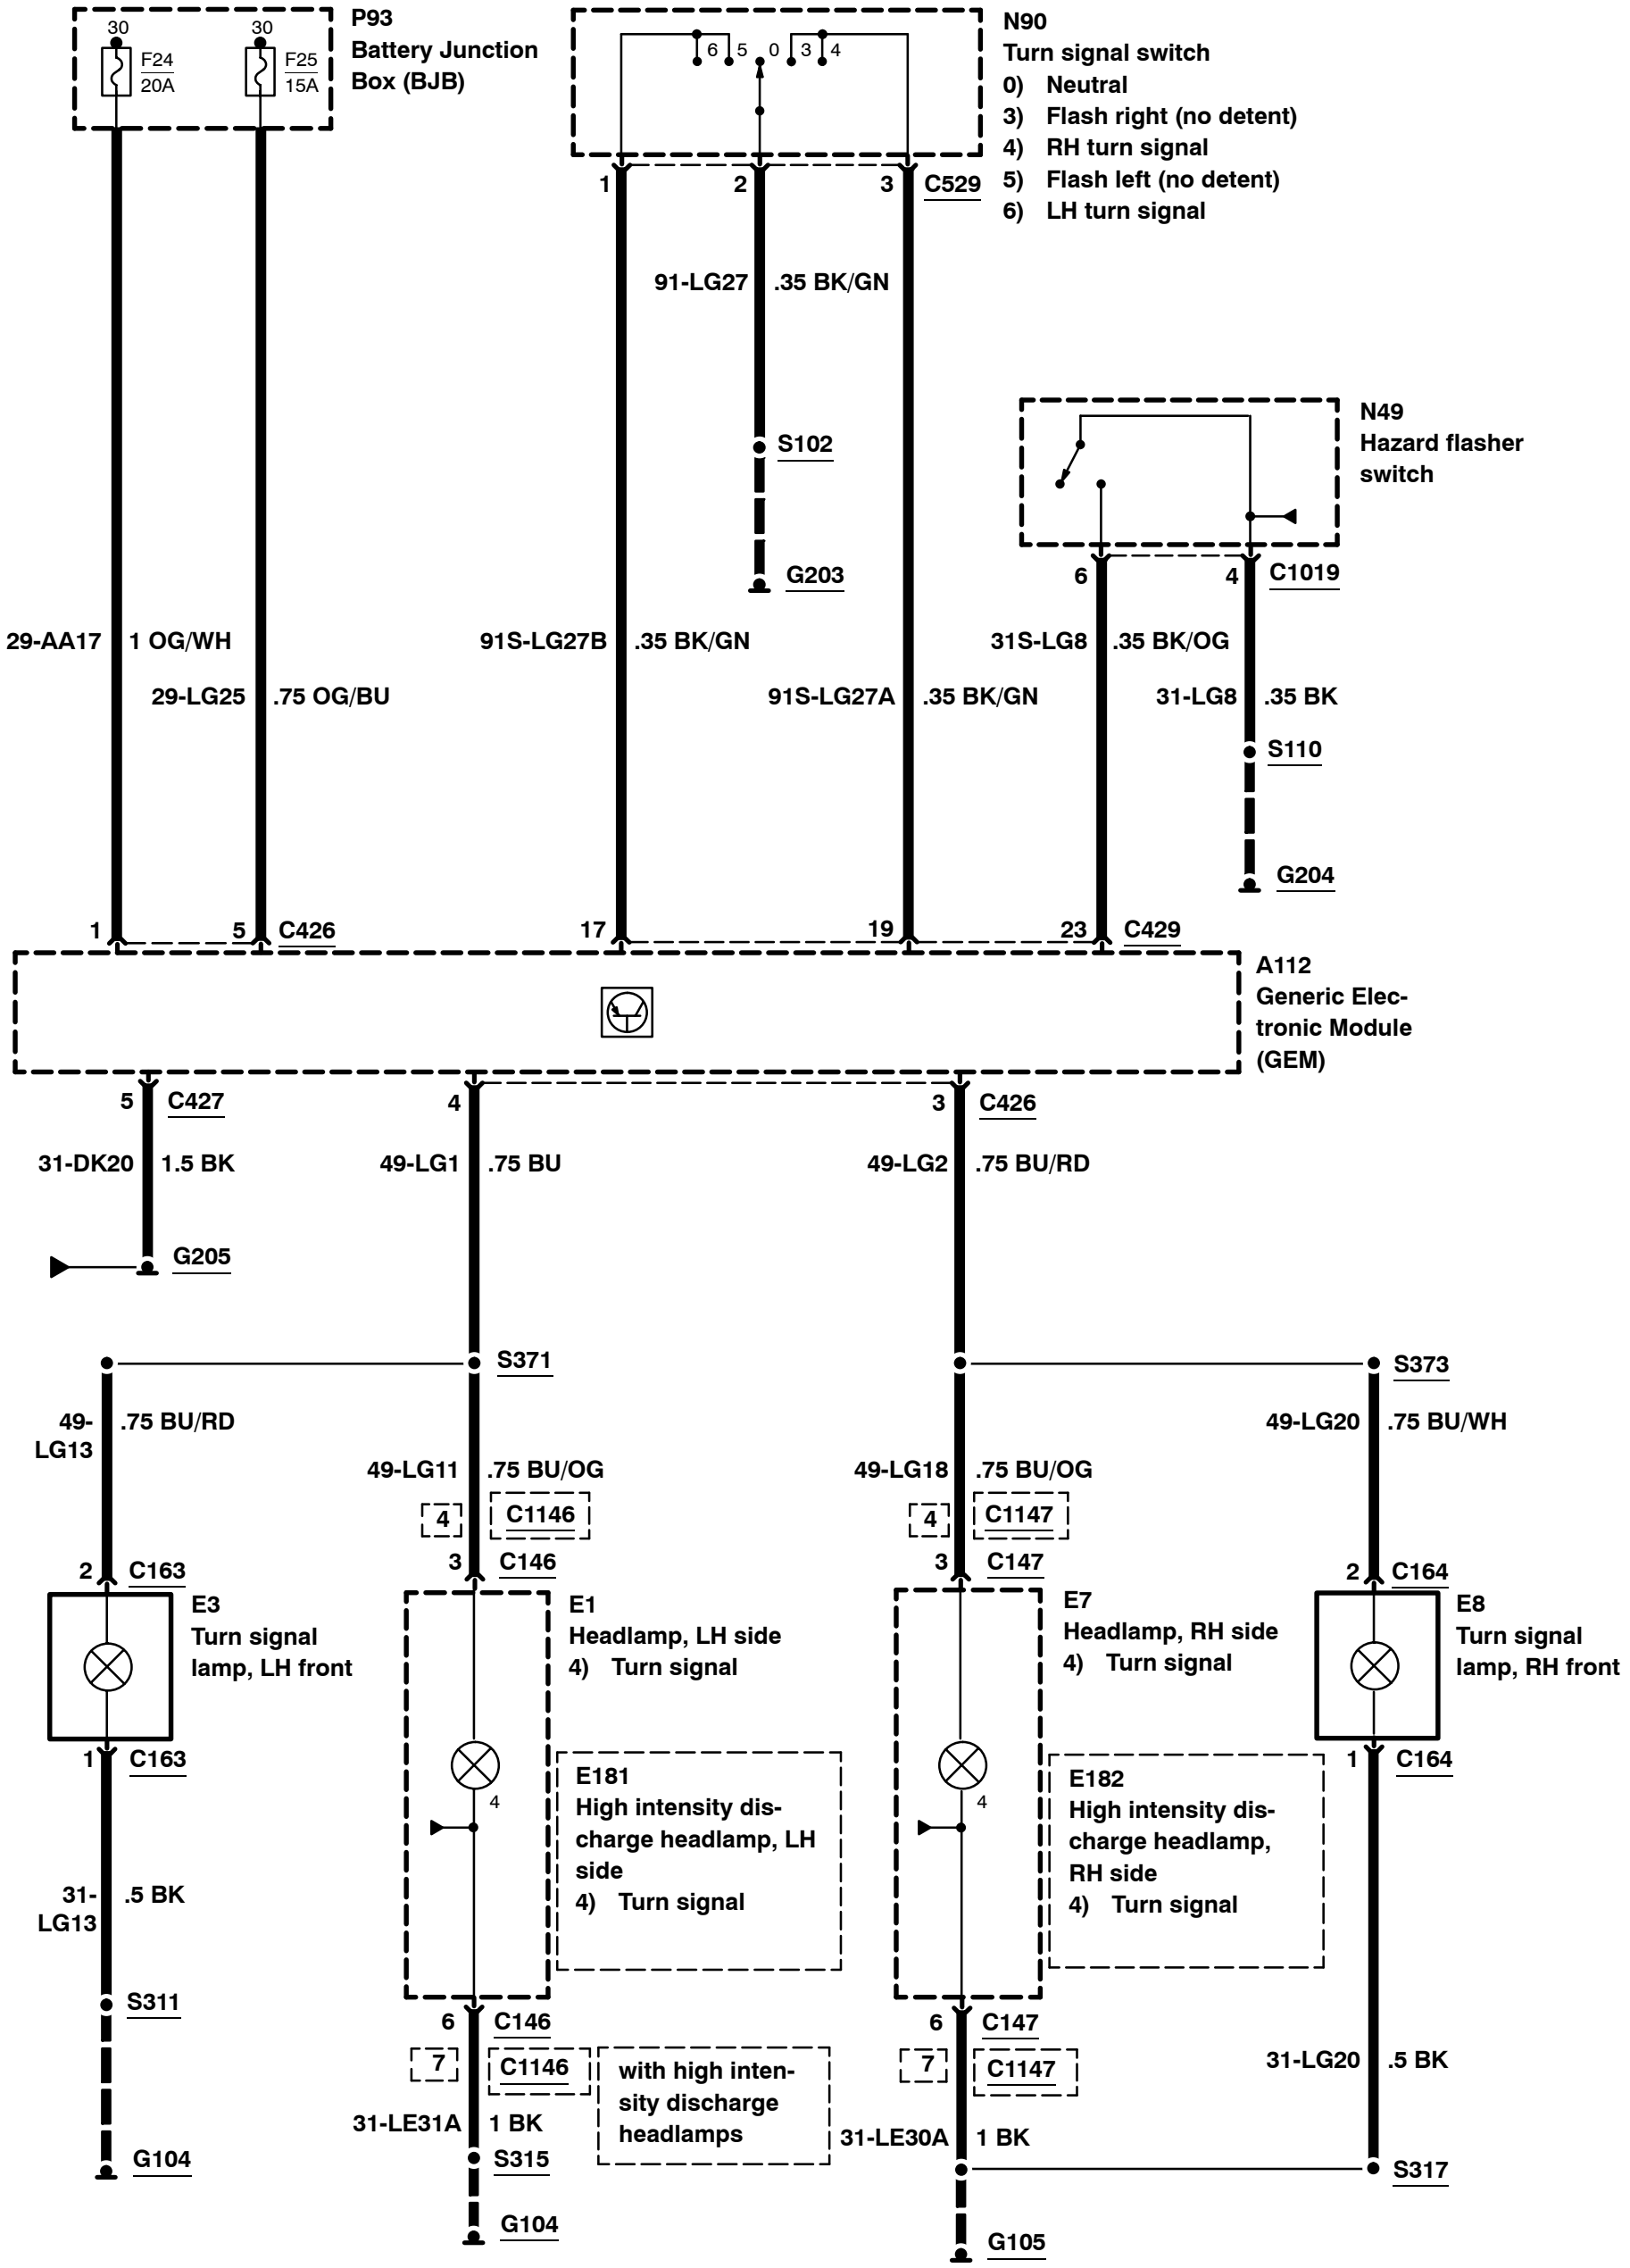


Exterior Lighting – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model

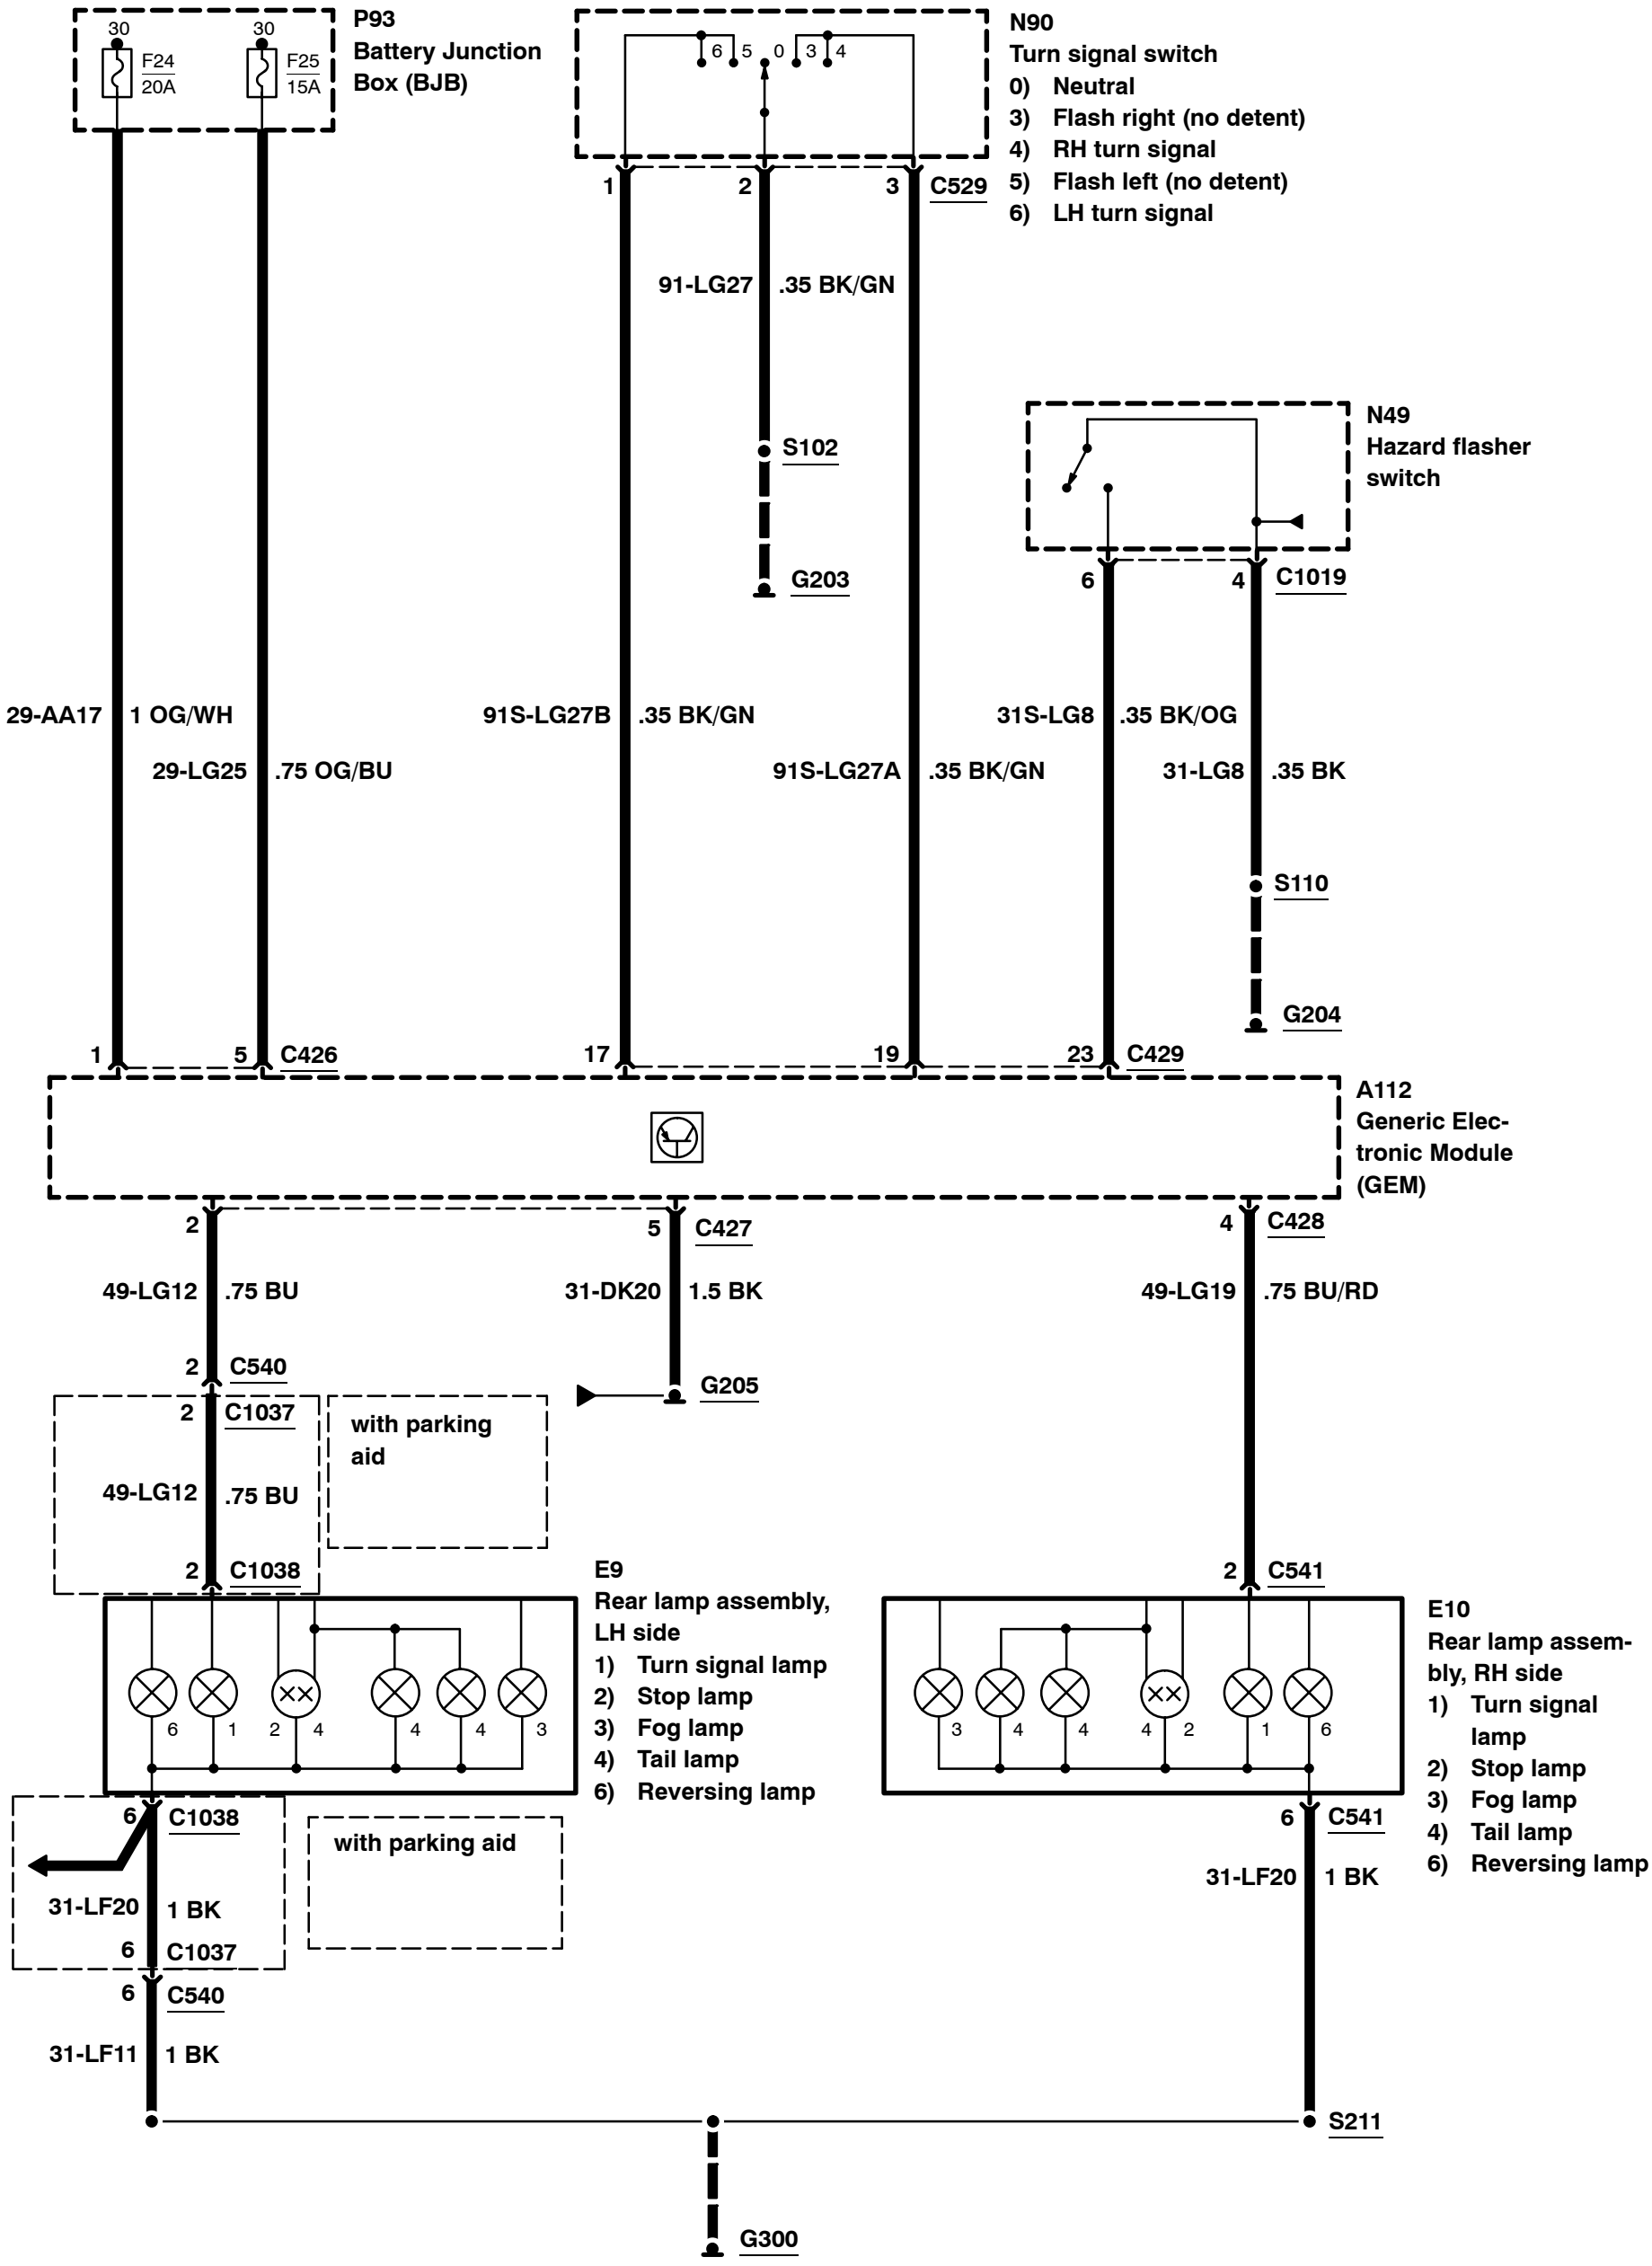


Exterior Lighting – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model

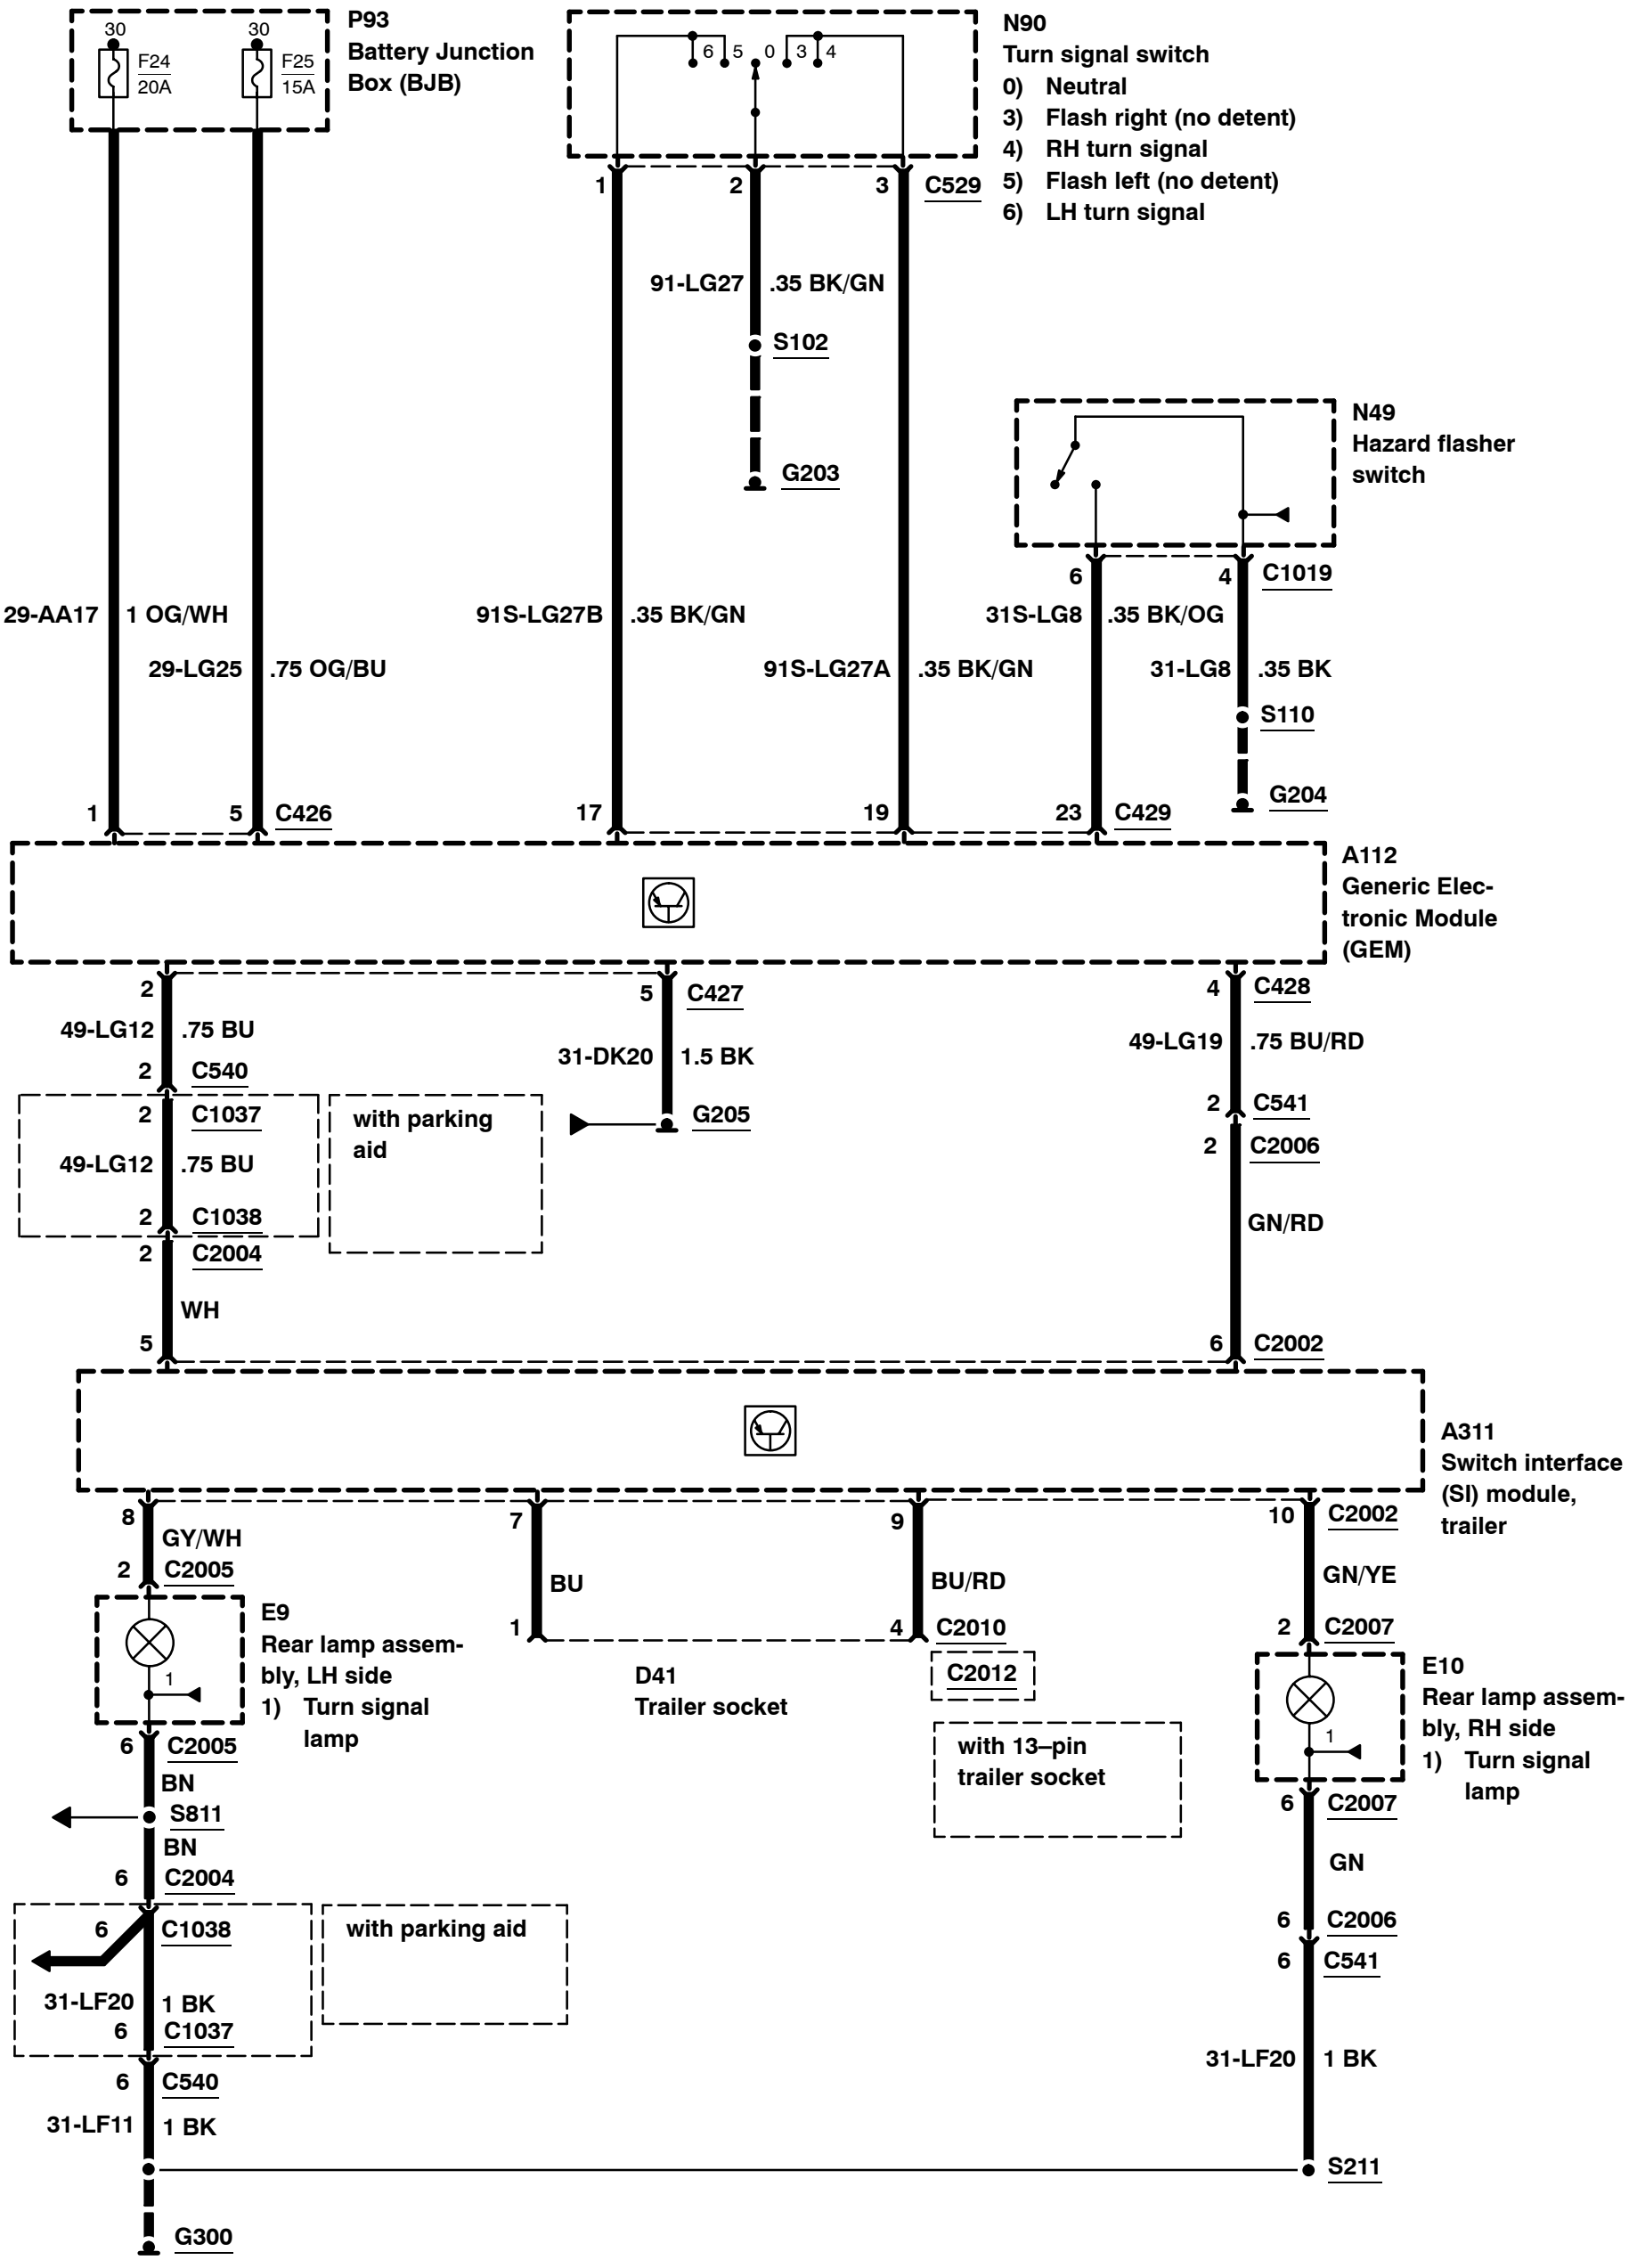


Exterior Lighting – Turn Signal and Hazard Lamps, without trailer socket, wagon

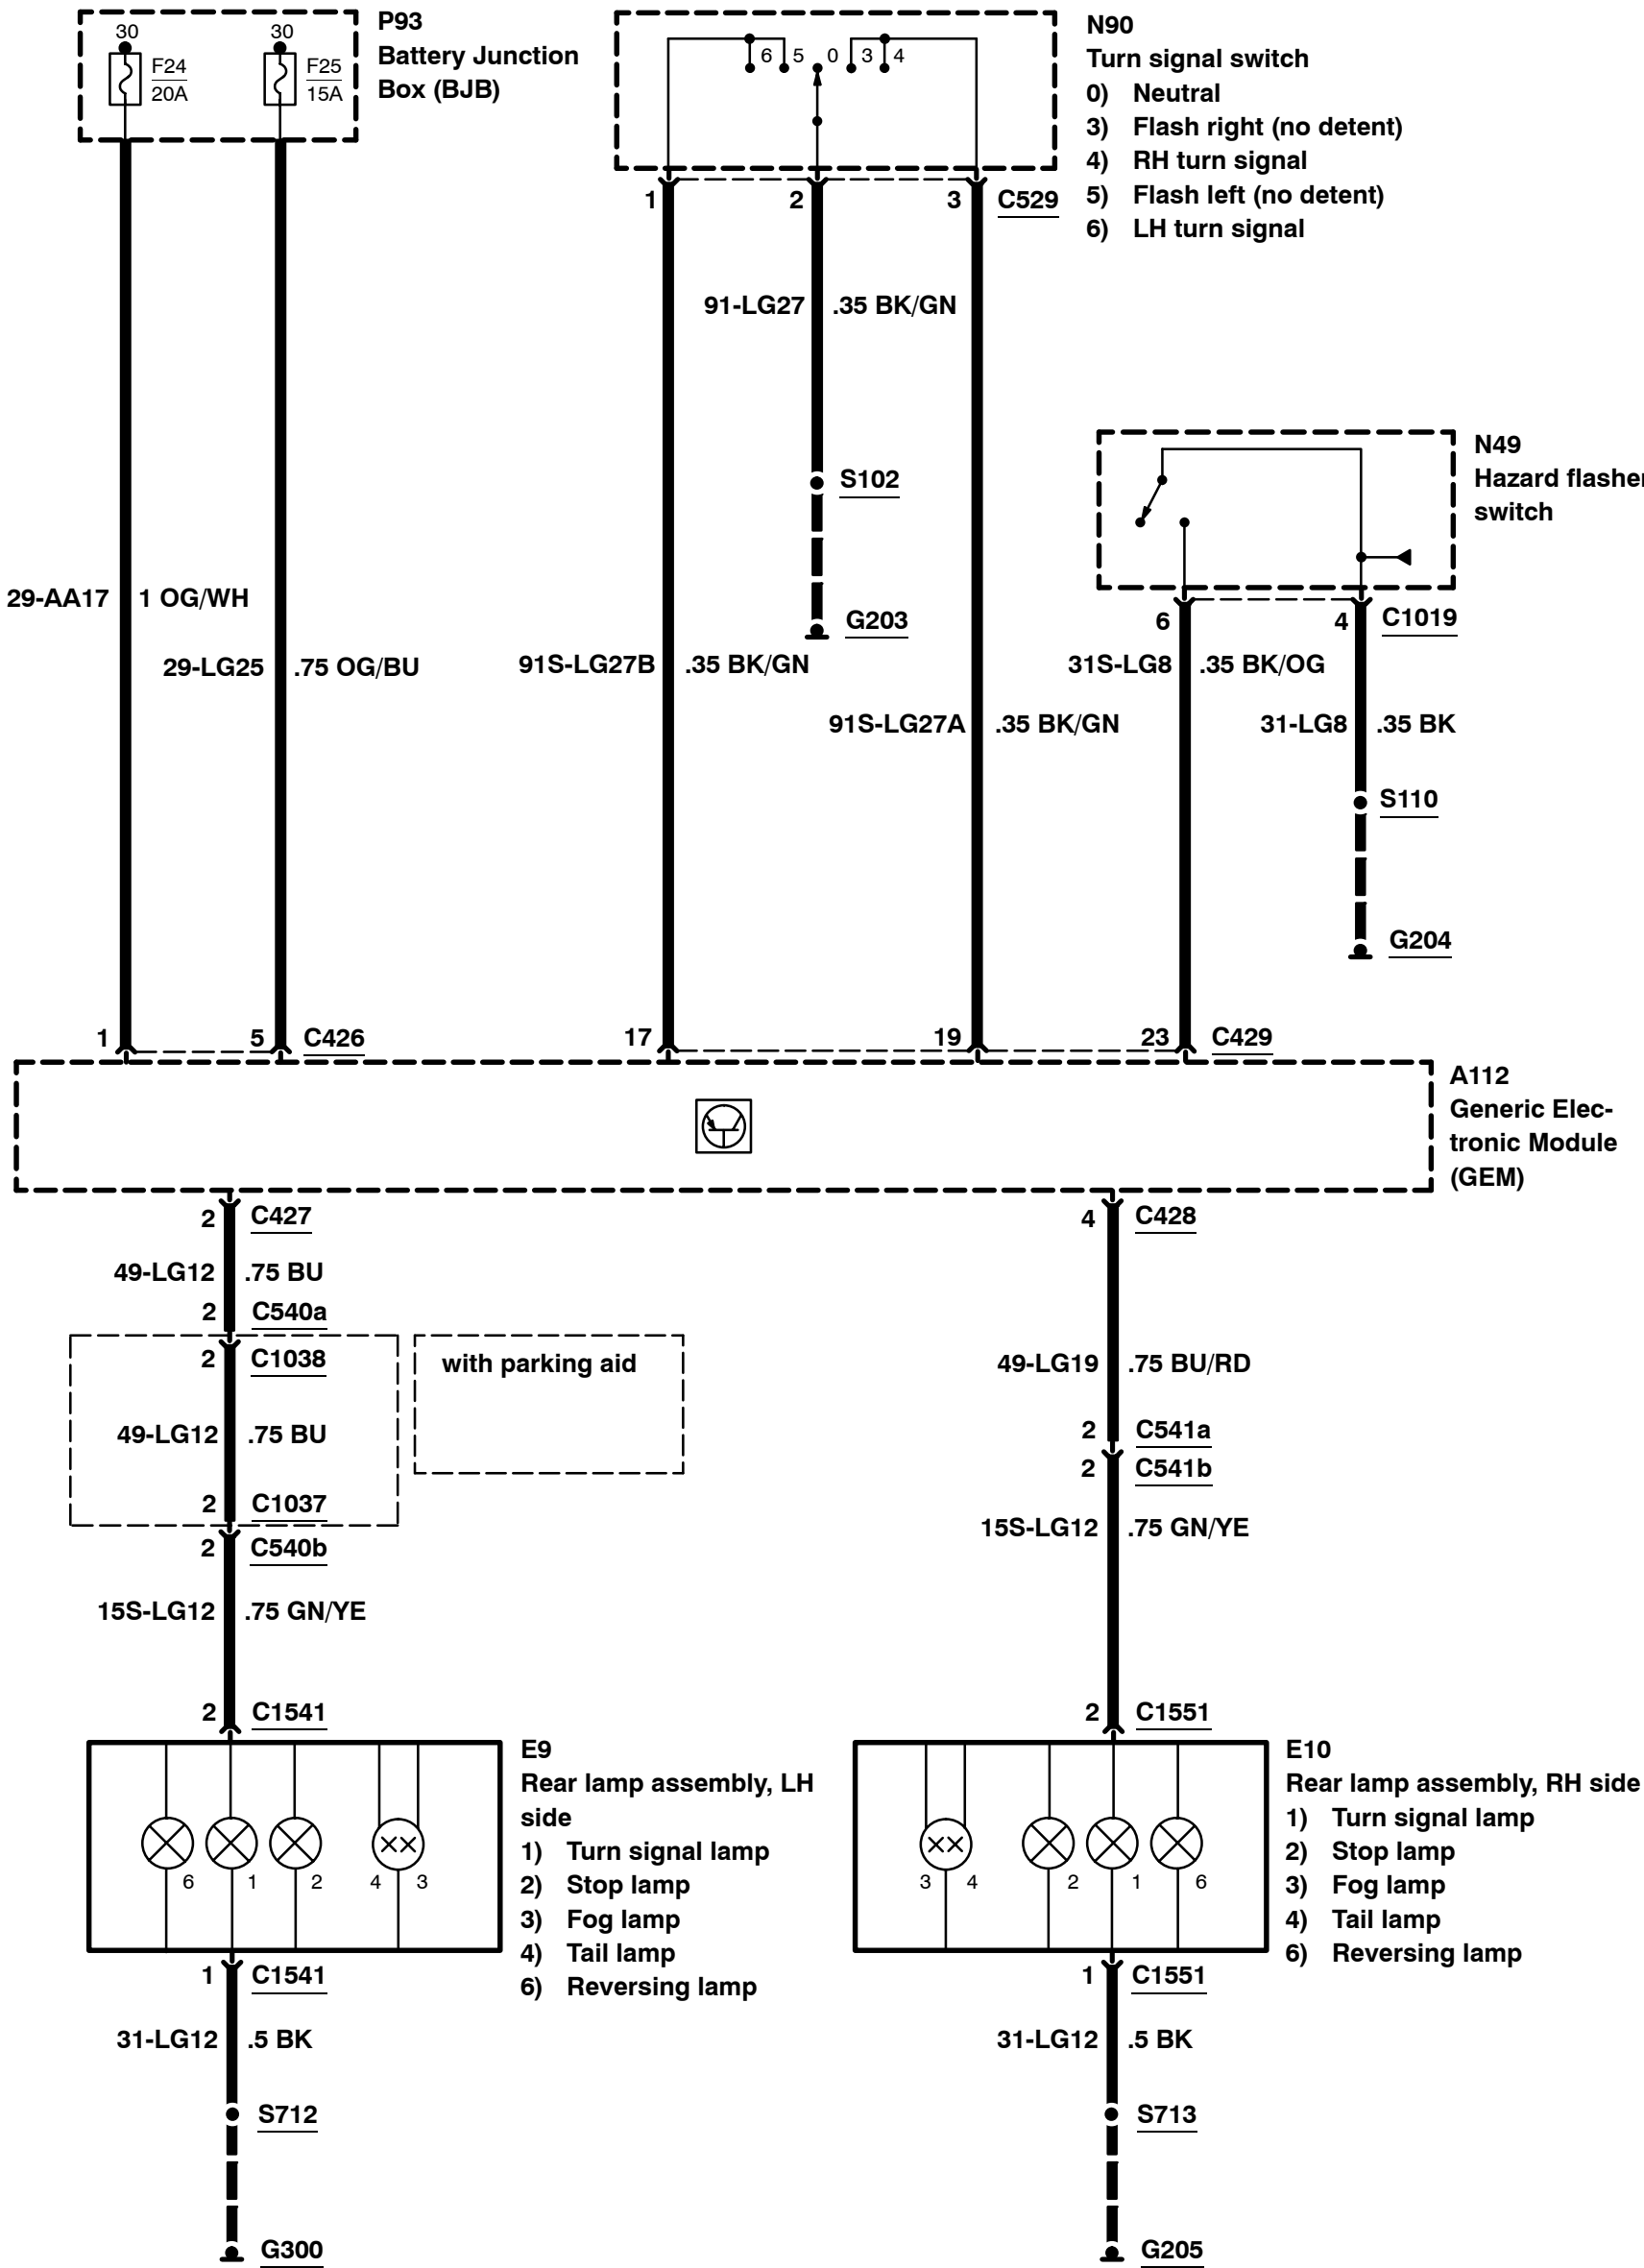


Exterior Lighting – Turn Signal and Hazard Lamps, with trailer socket, wagon

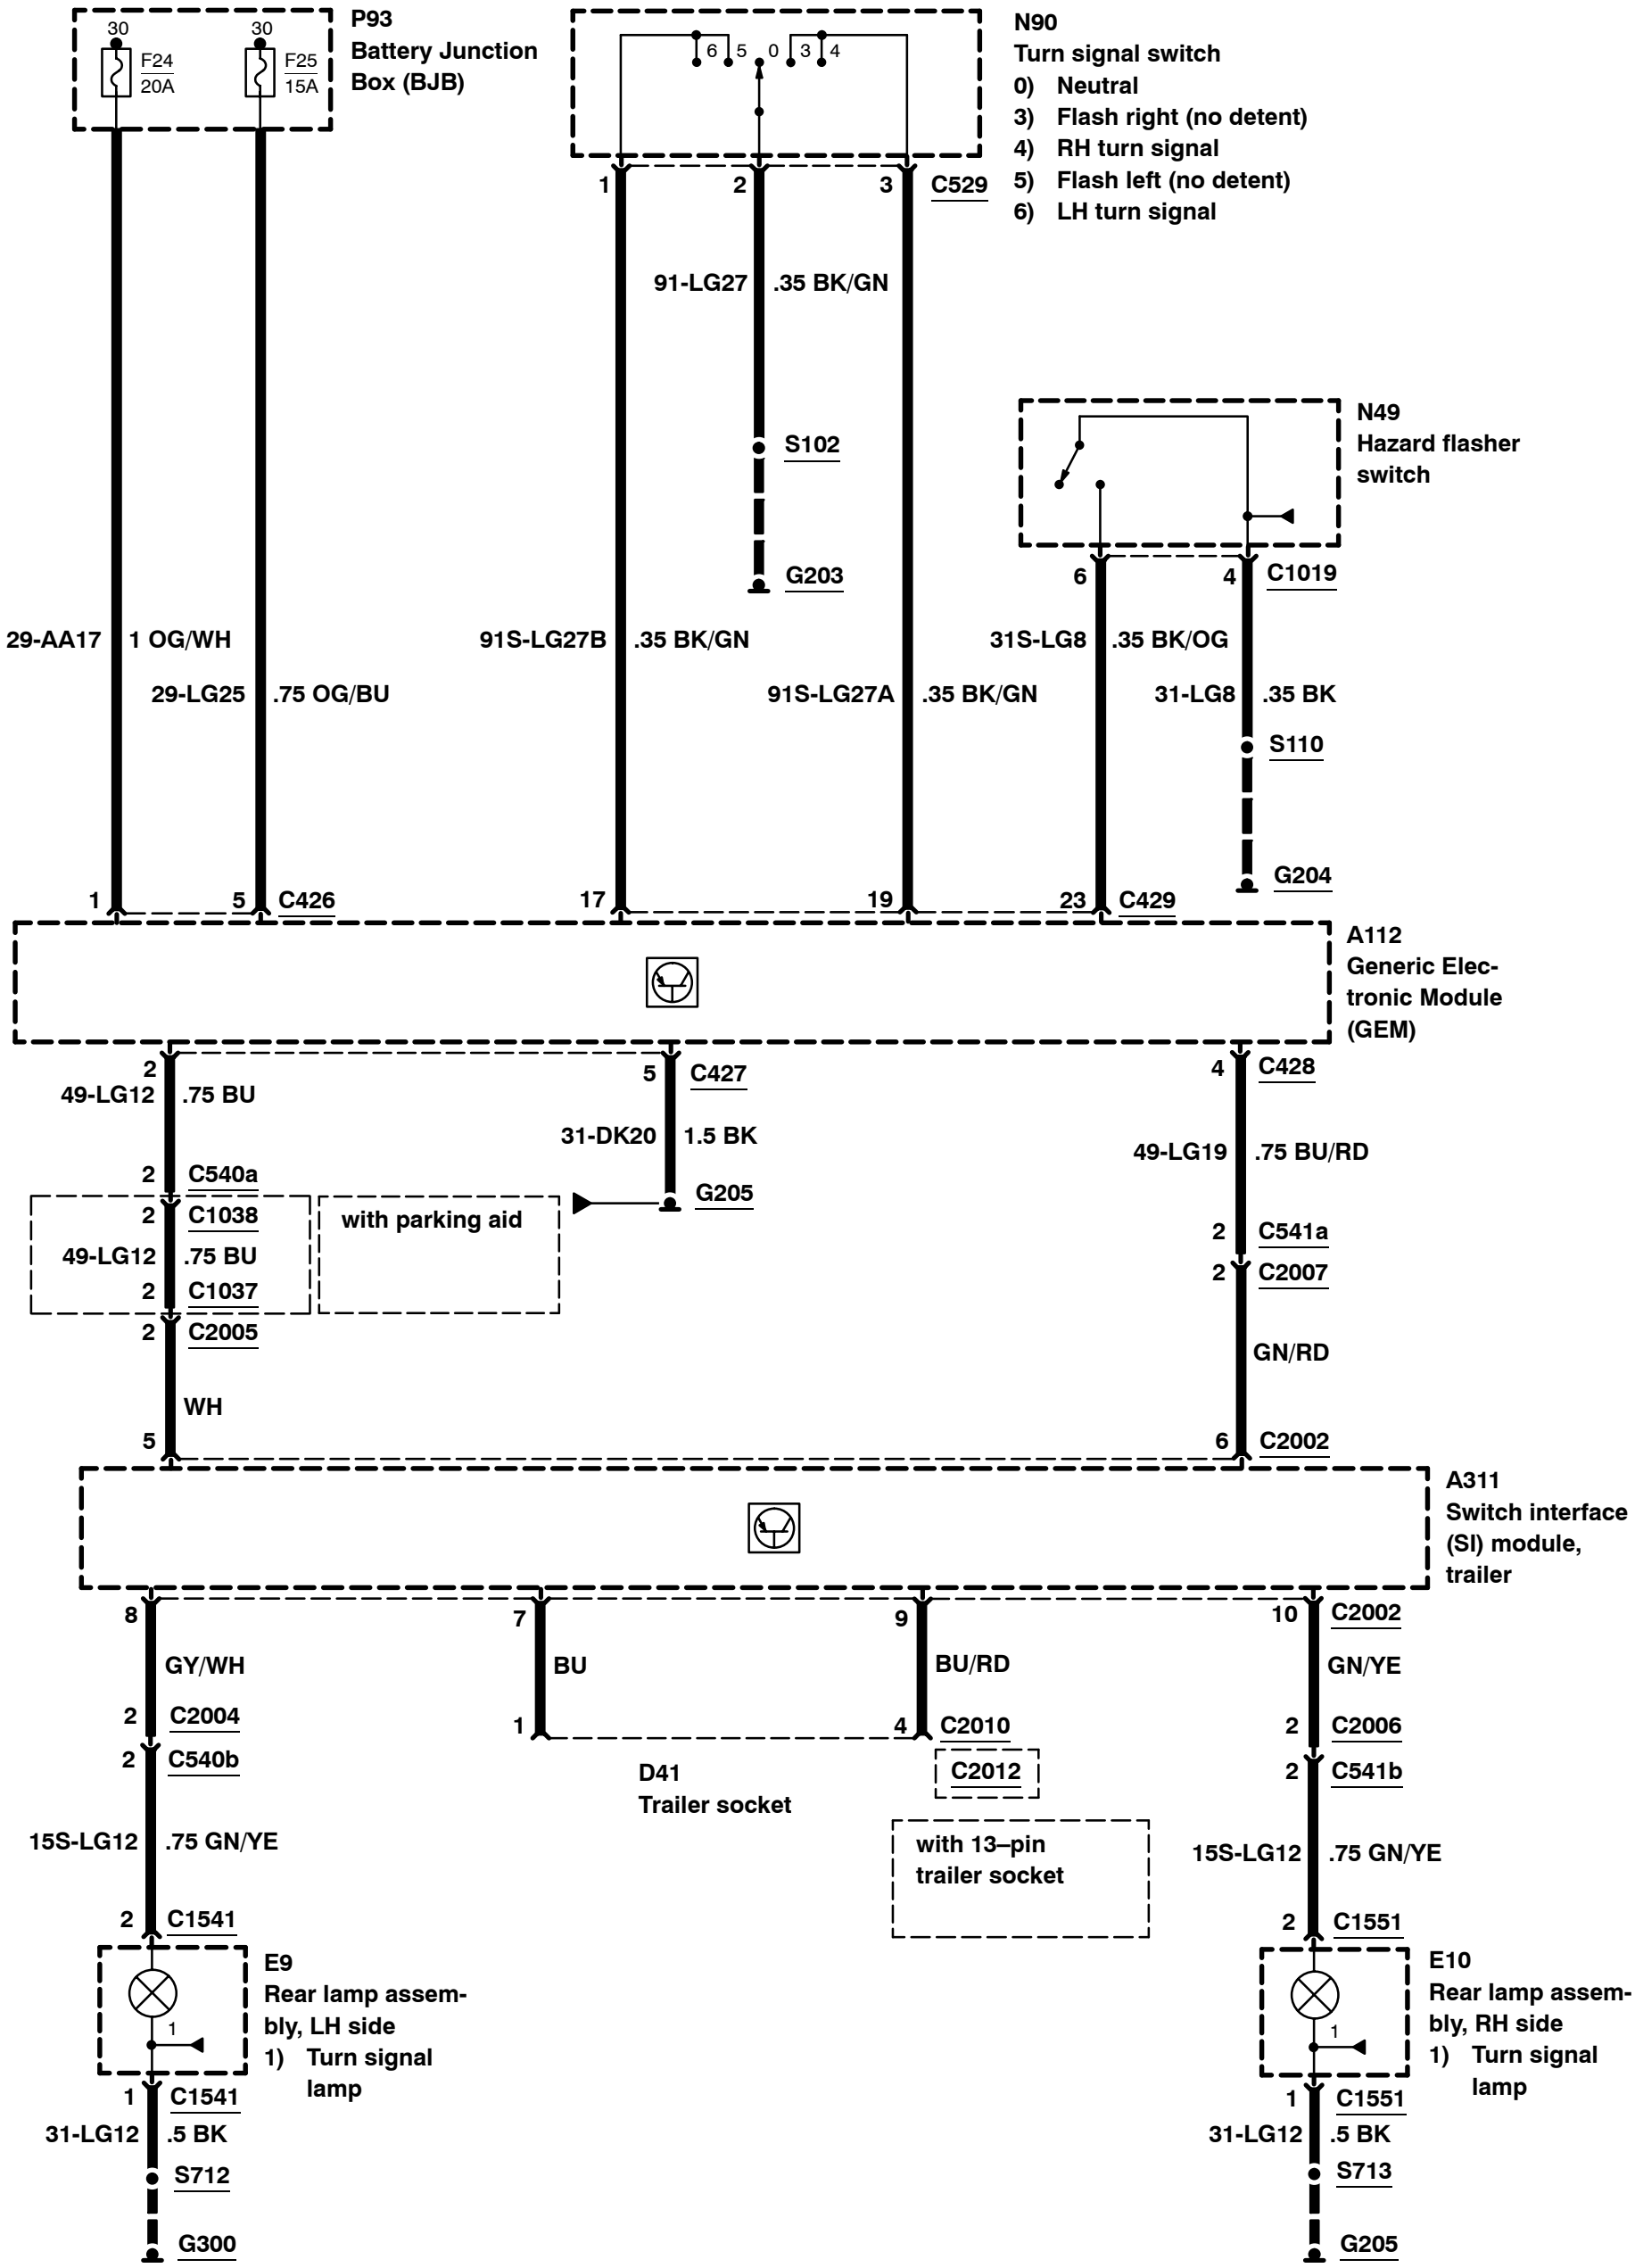


Exterior Lighting – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps

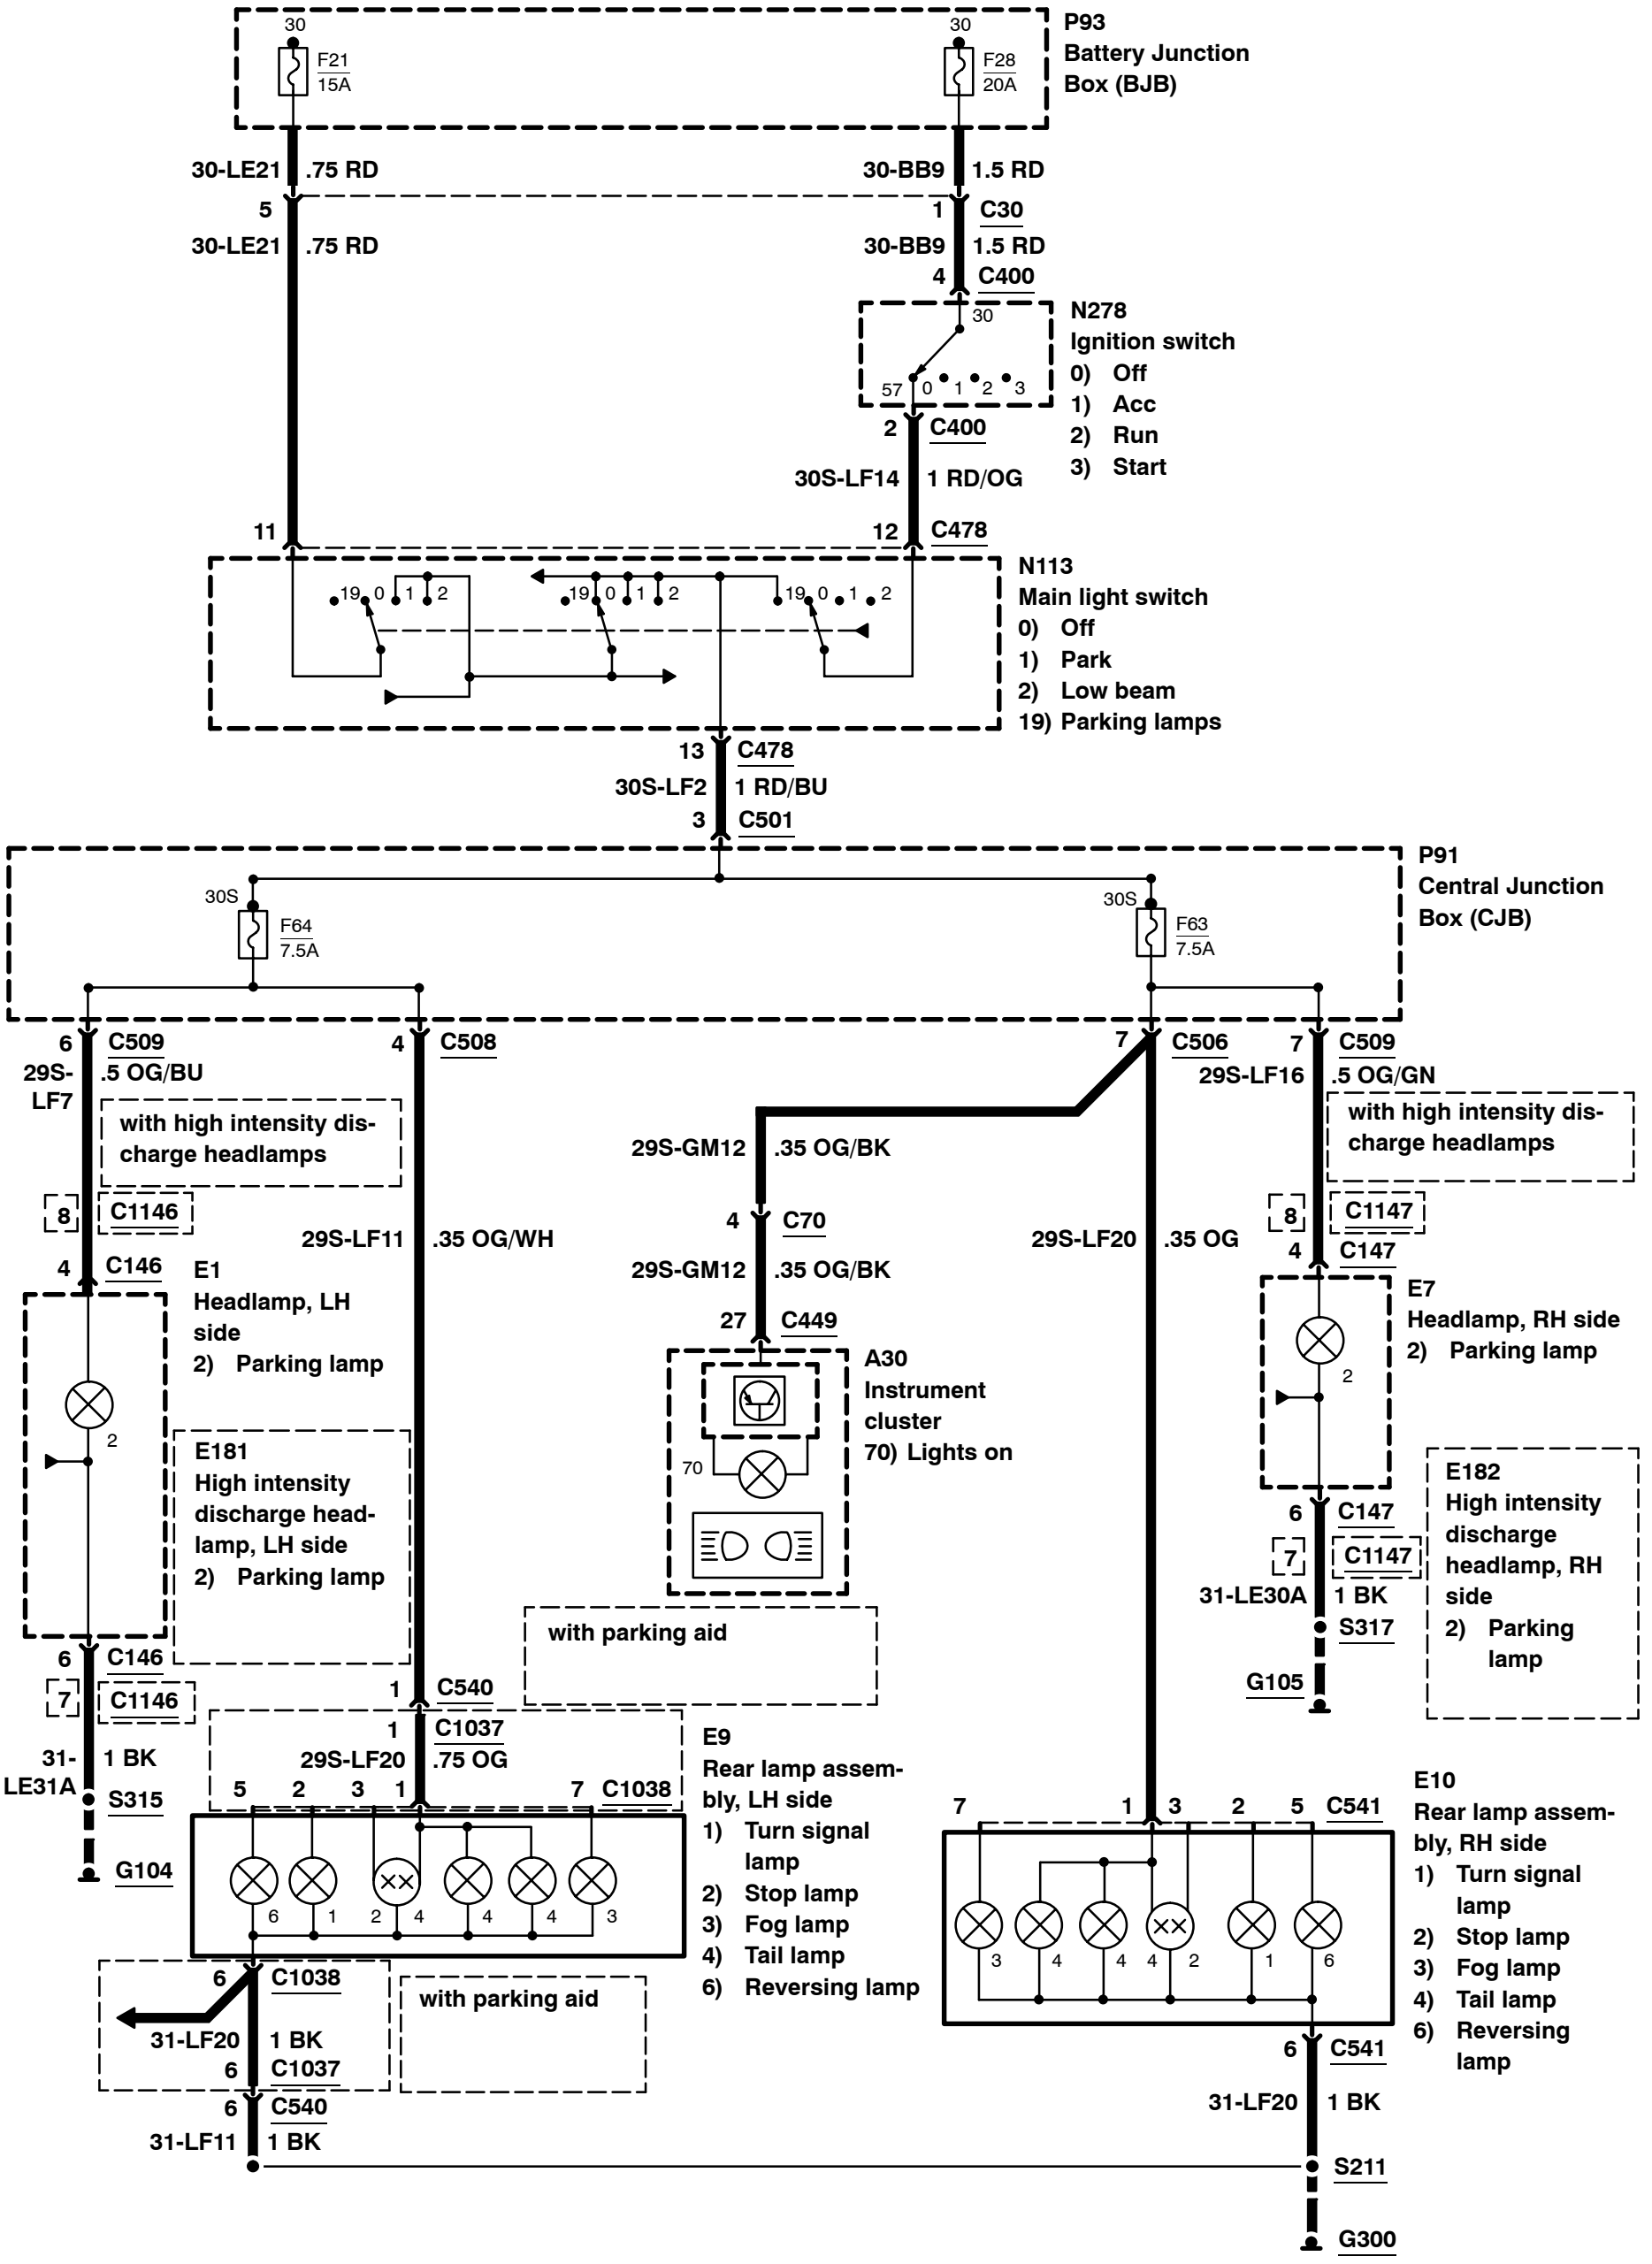


Exterior Lighting – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps

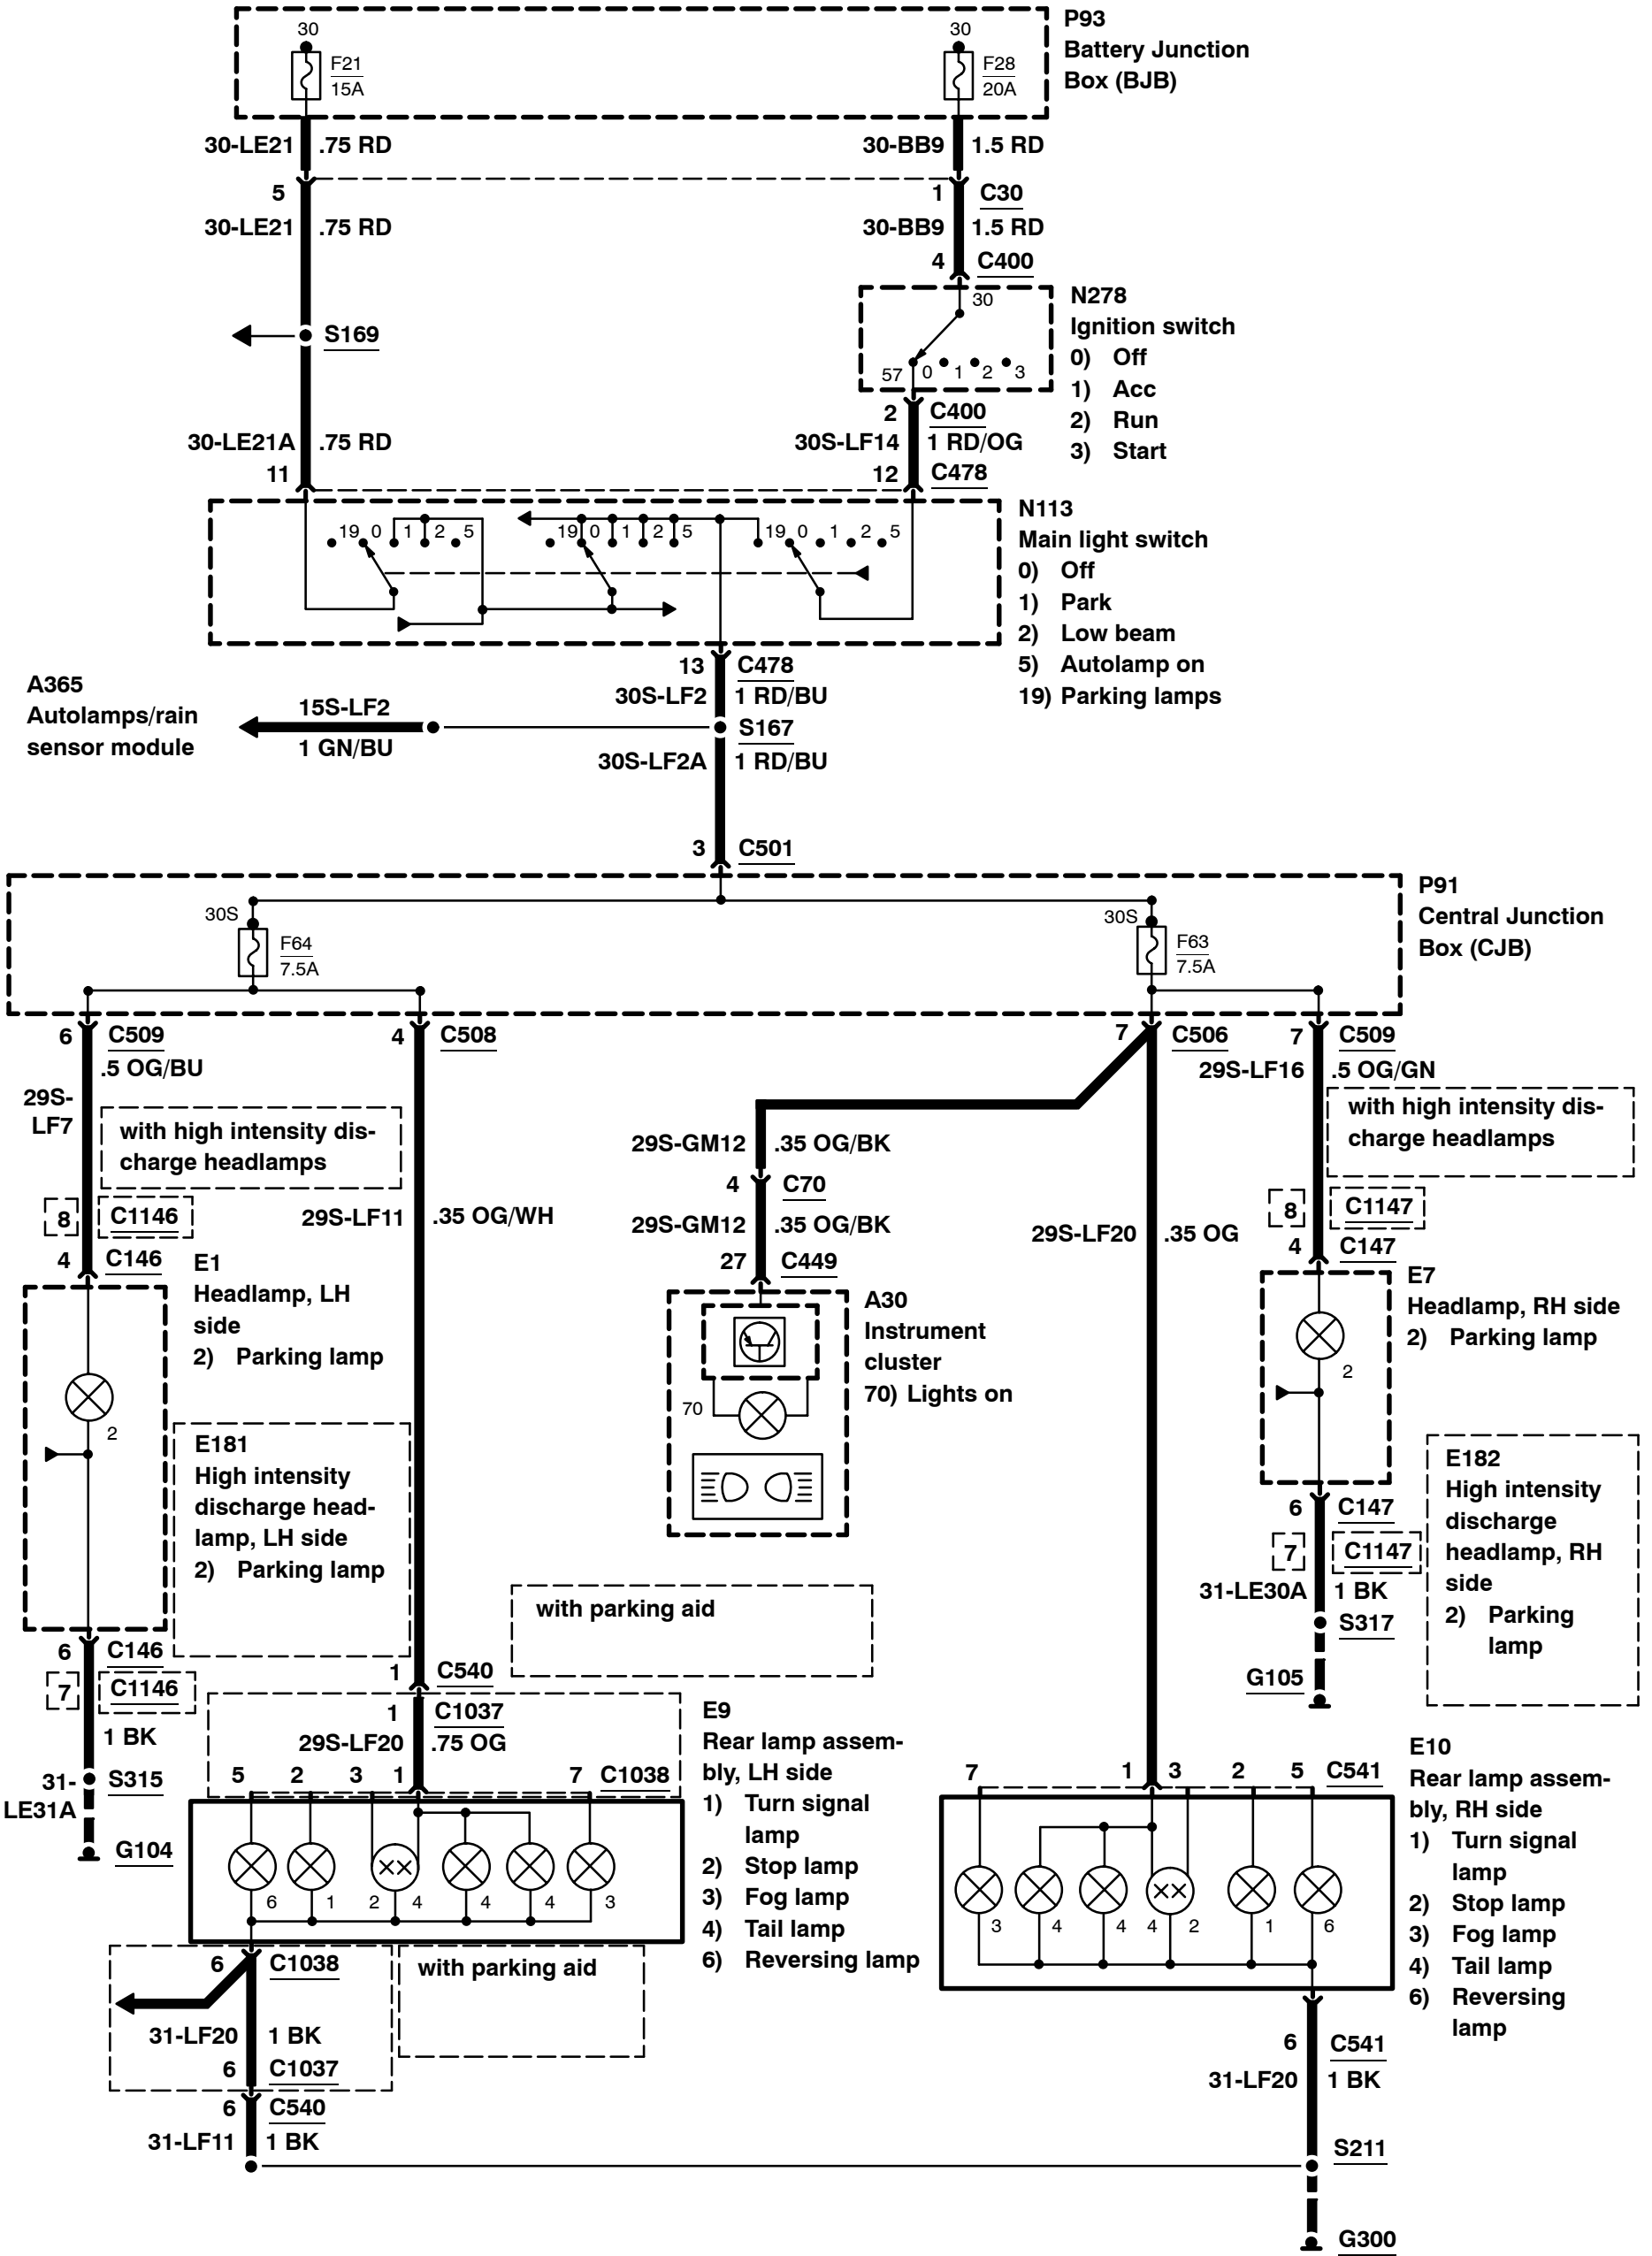


Exterior Lighting – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps

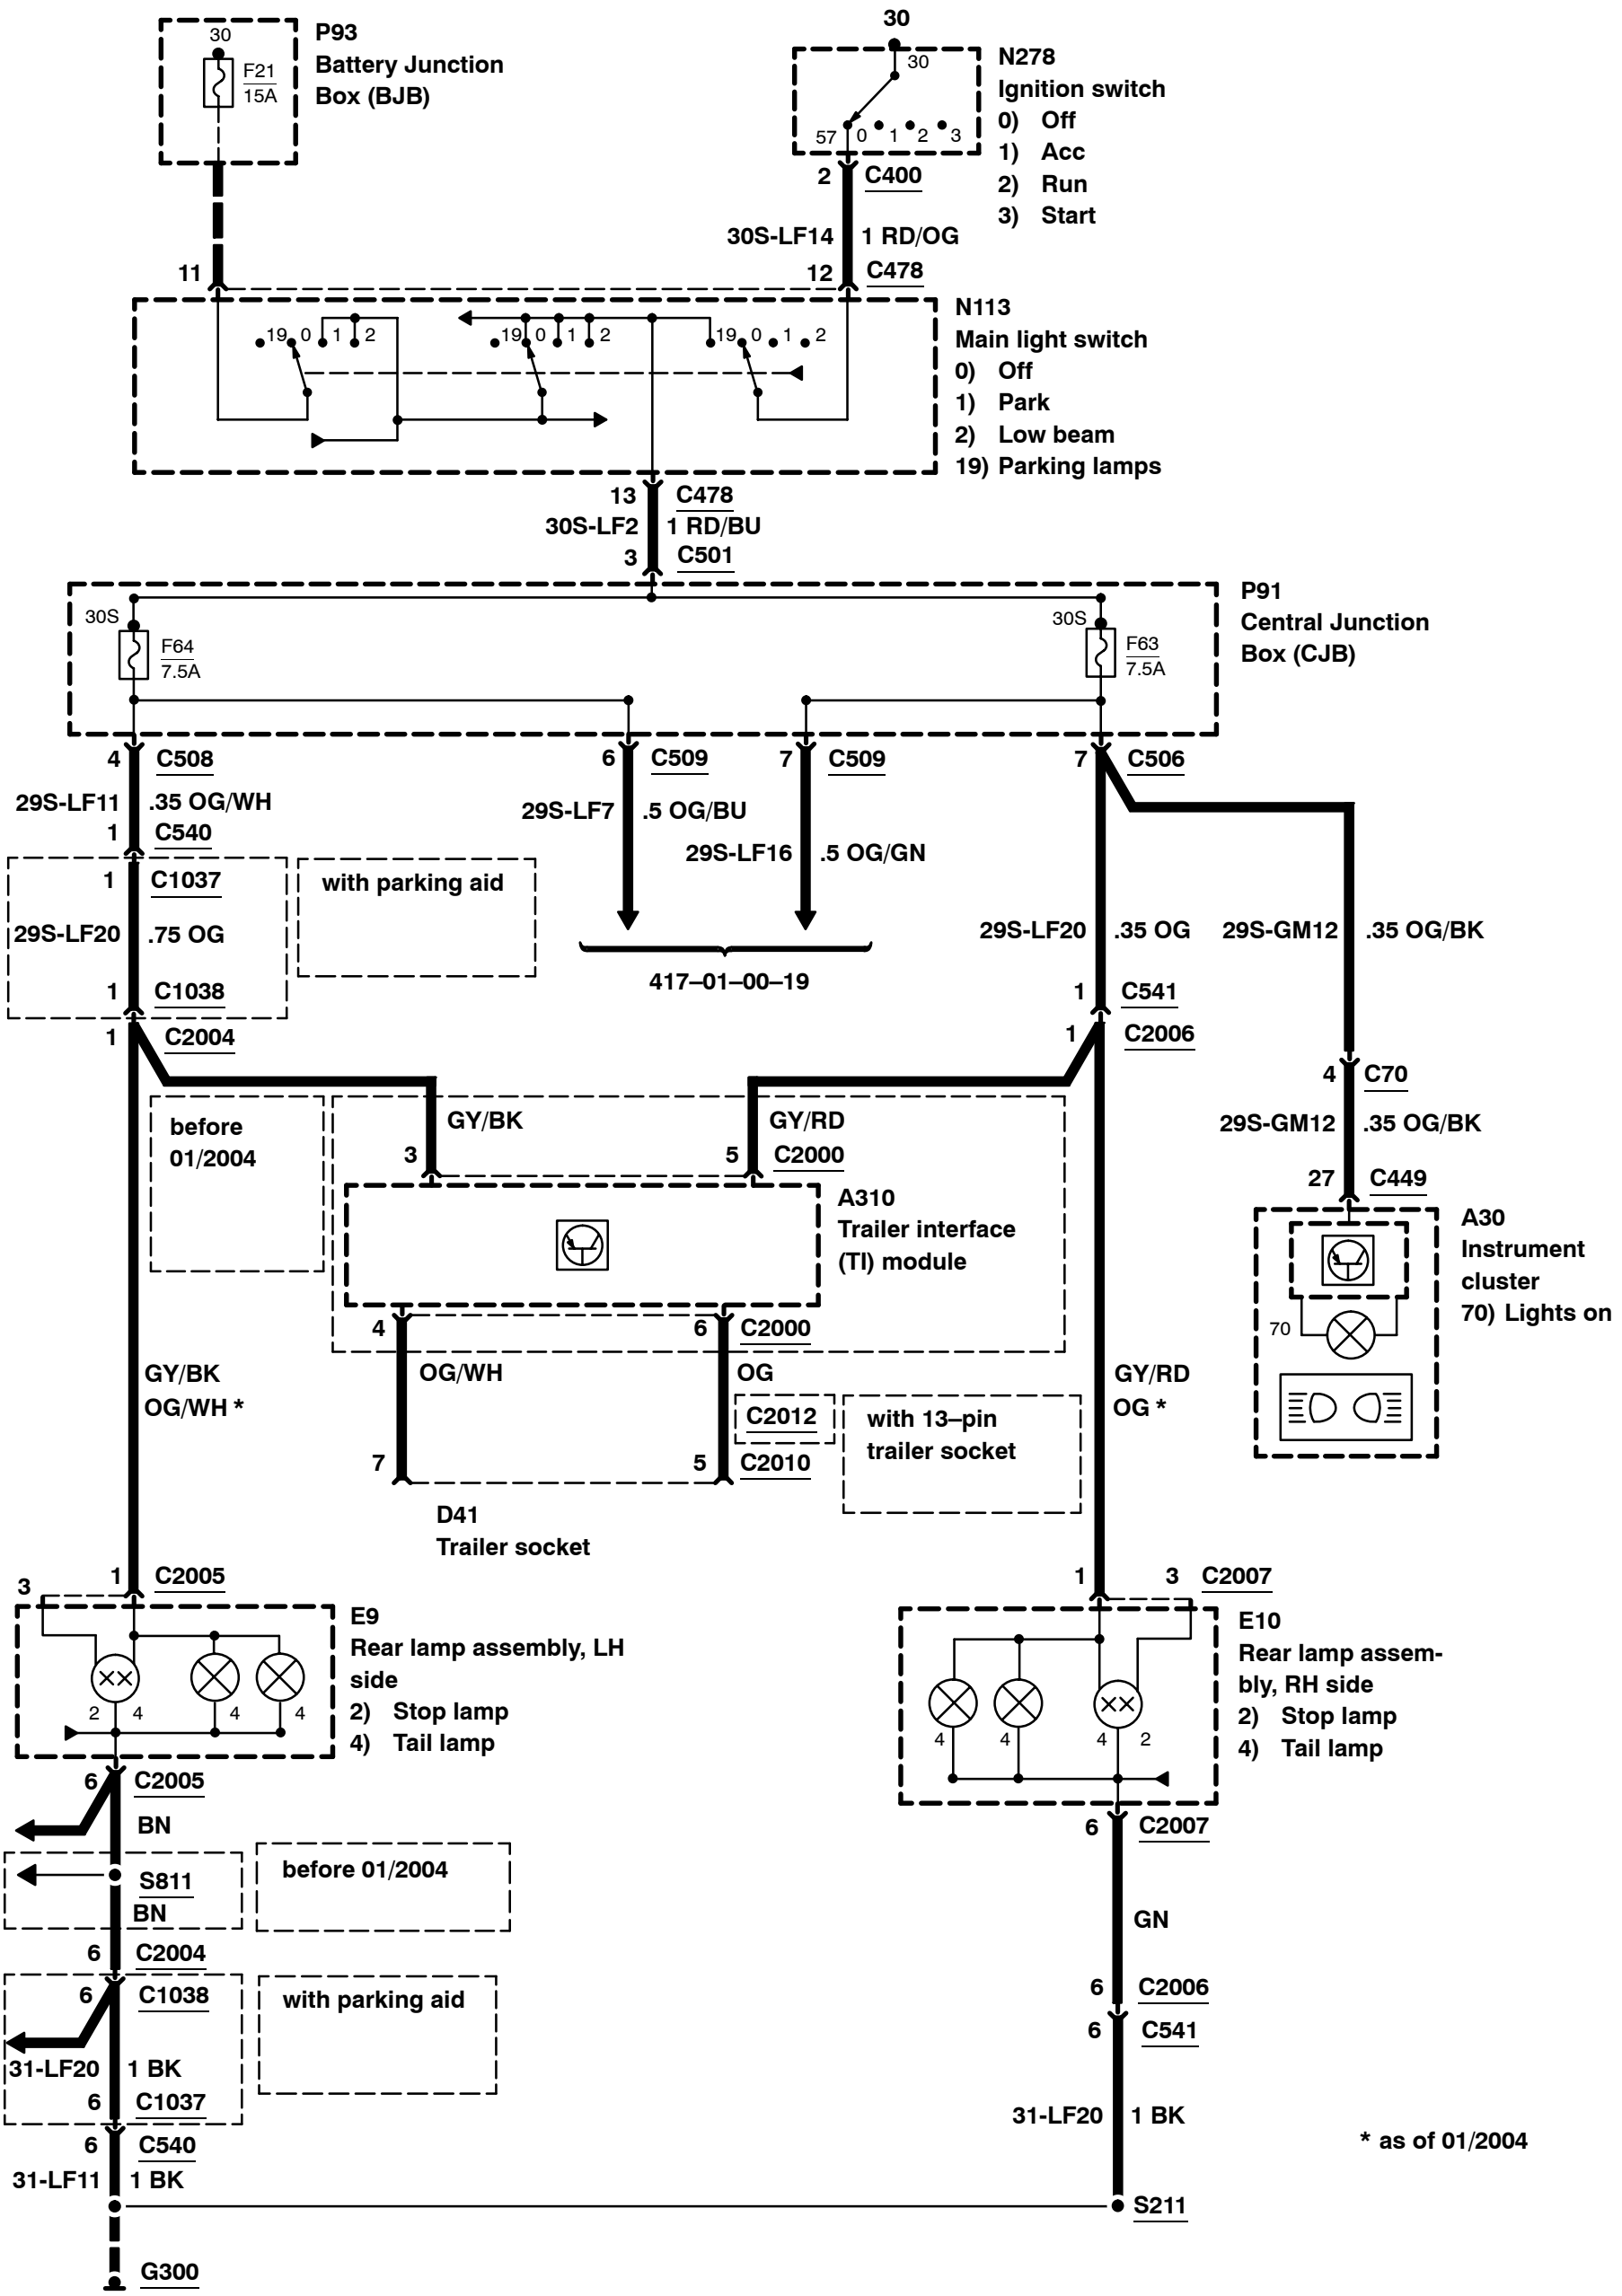


Exterior Lighting – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps

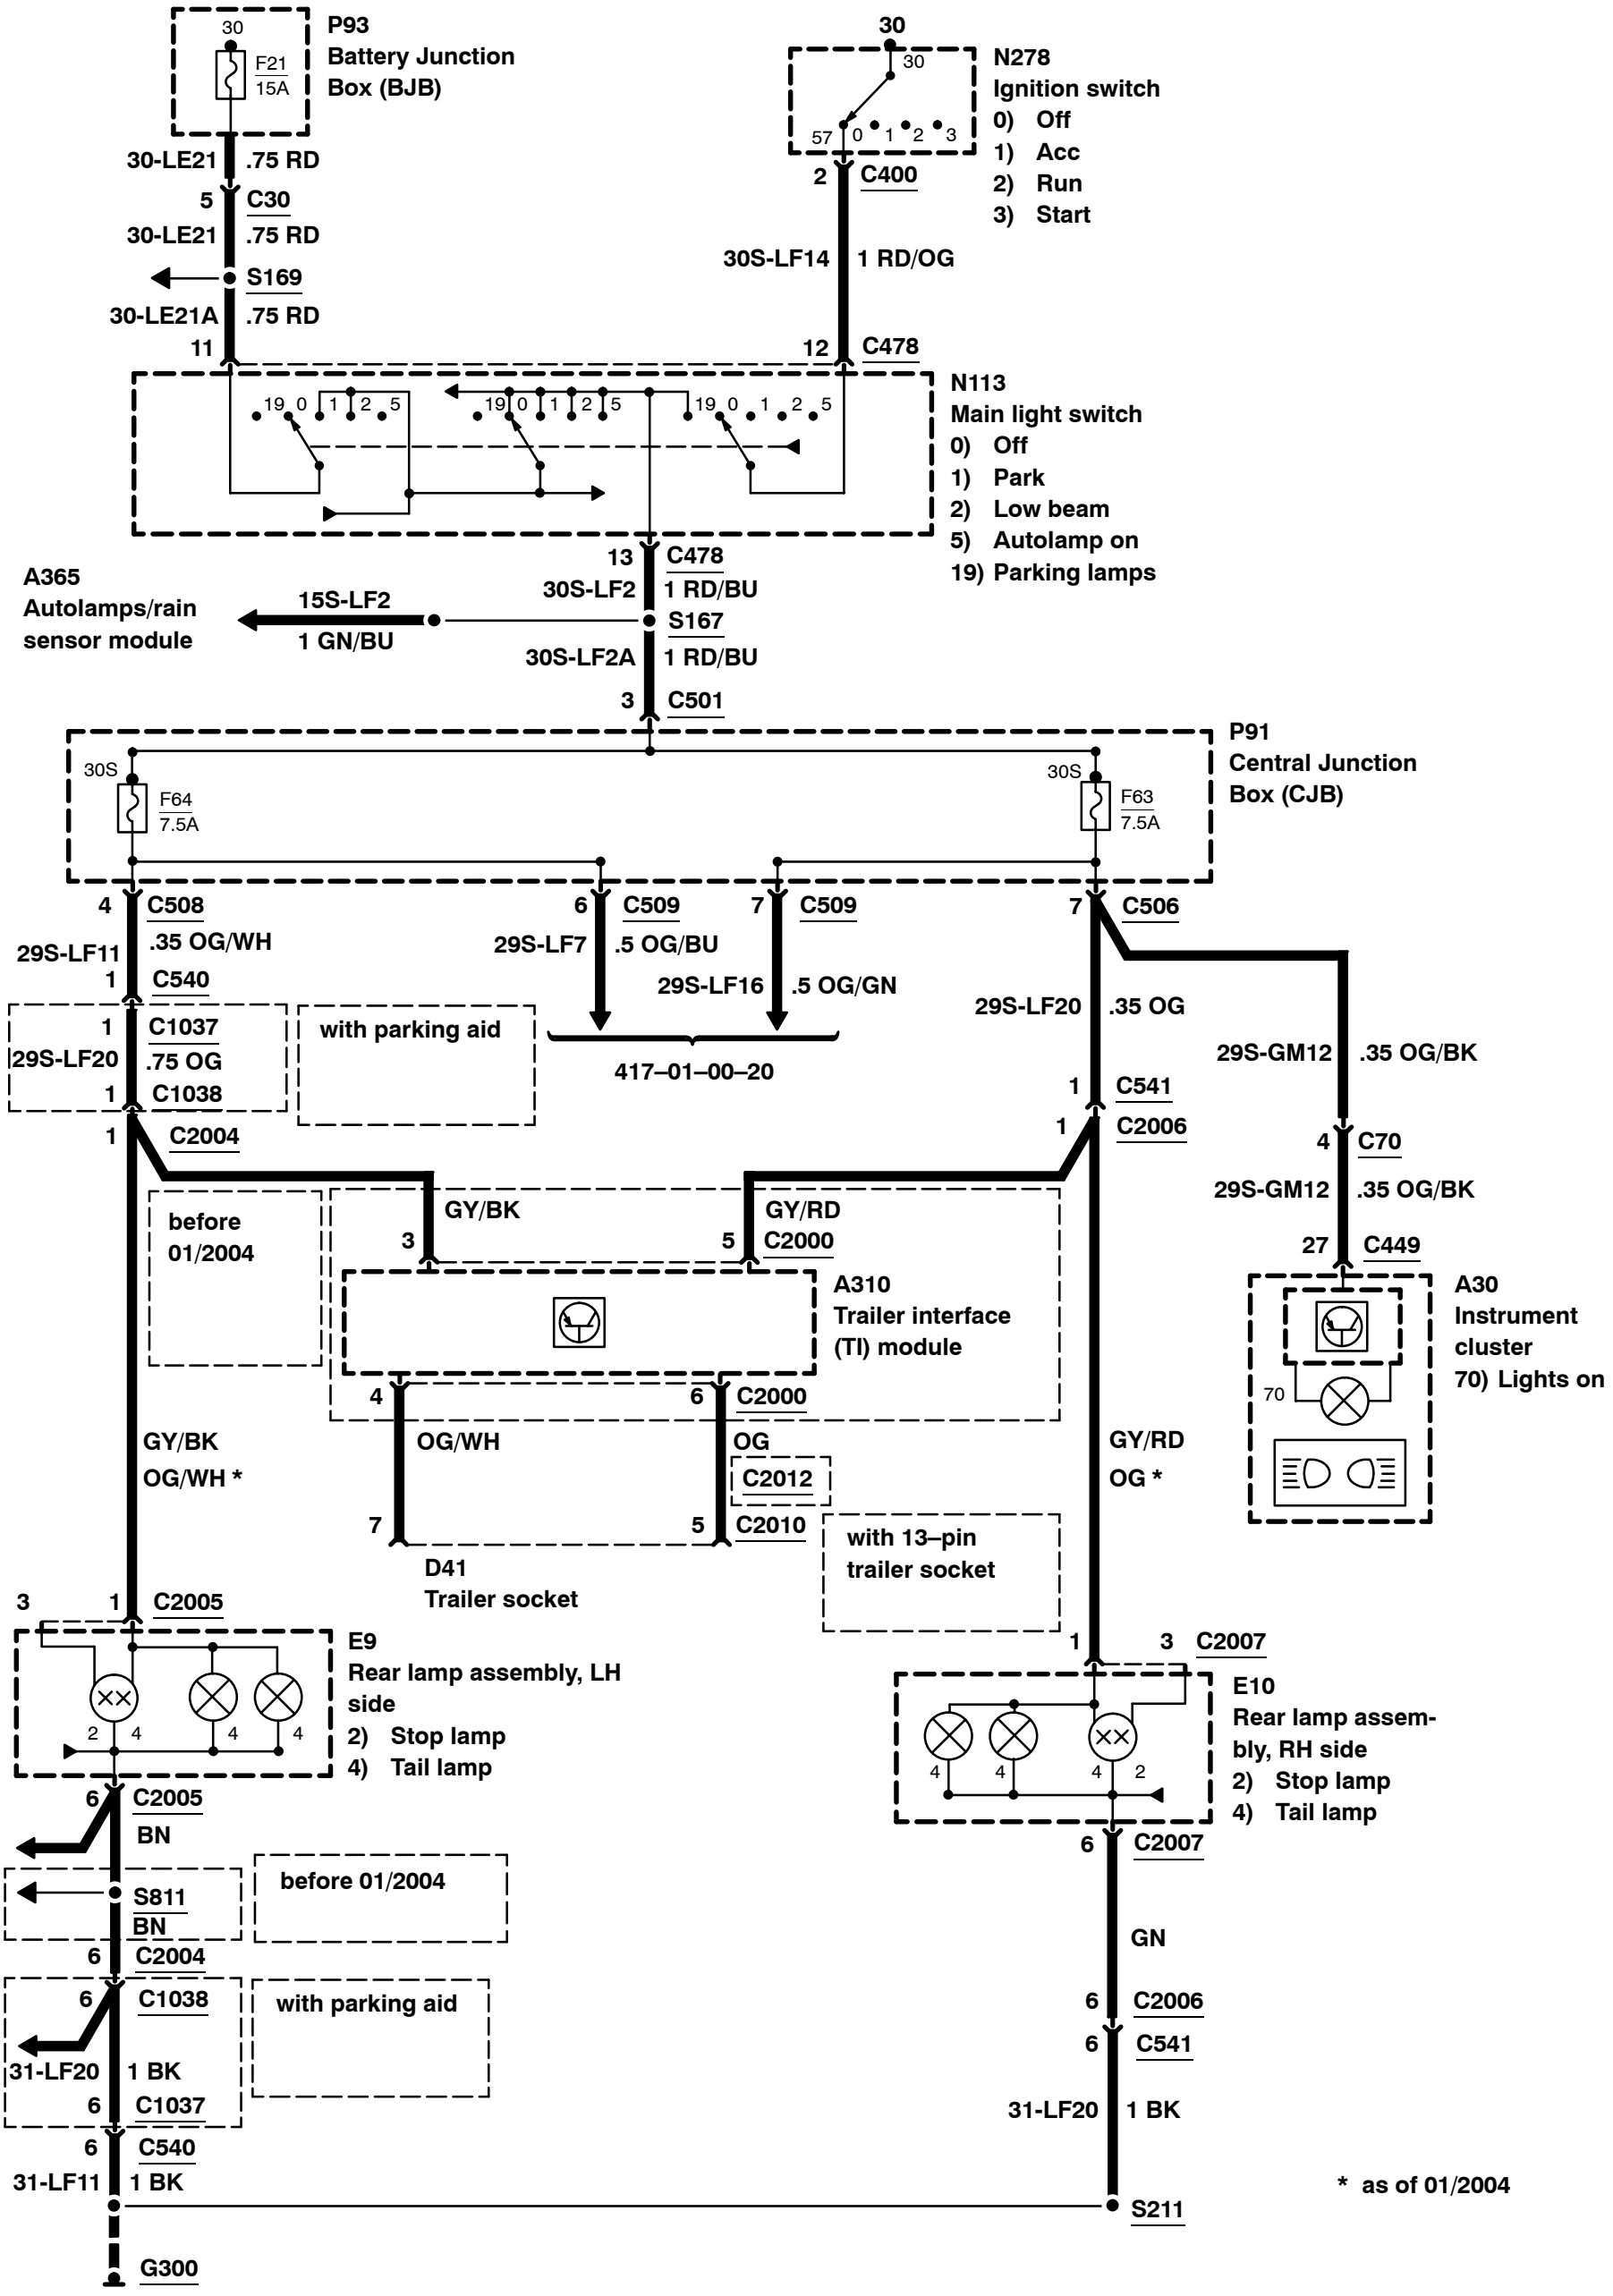


Exterior Lighting – Parking Lamps, without trailer socket, wagon, without auto-lamps

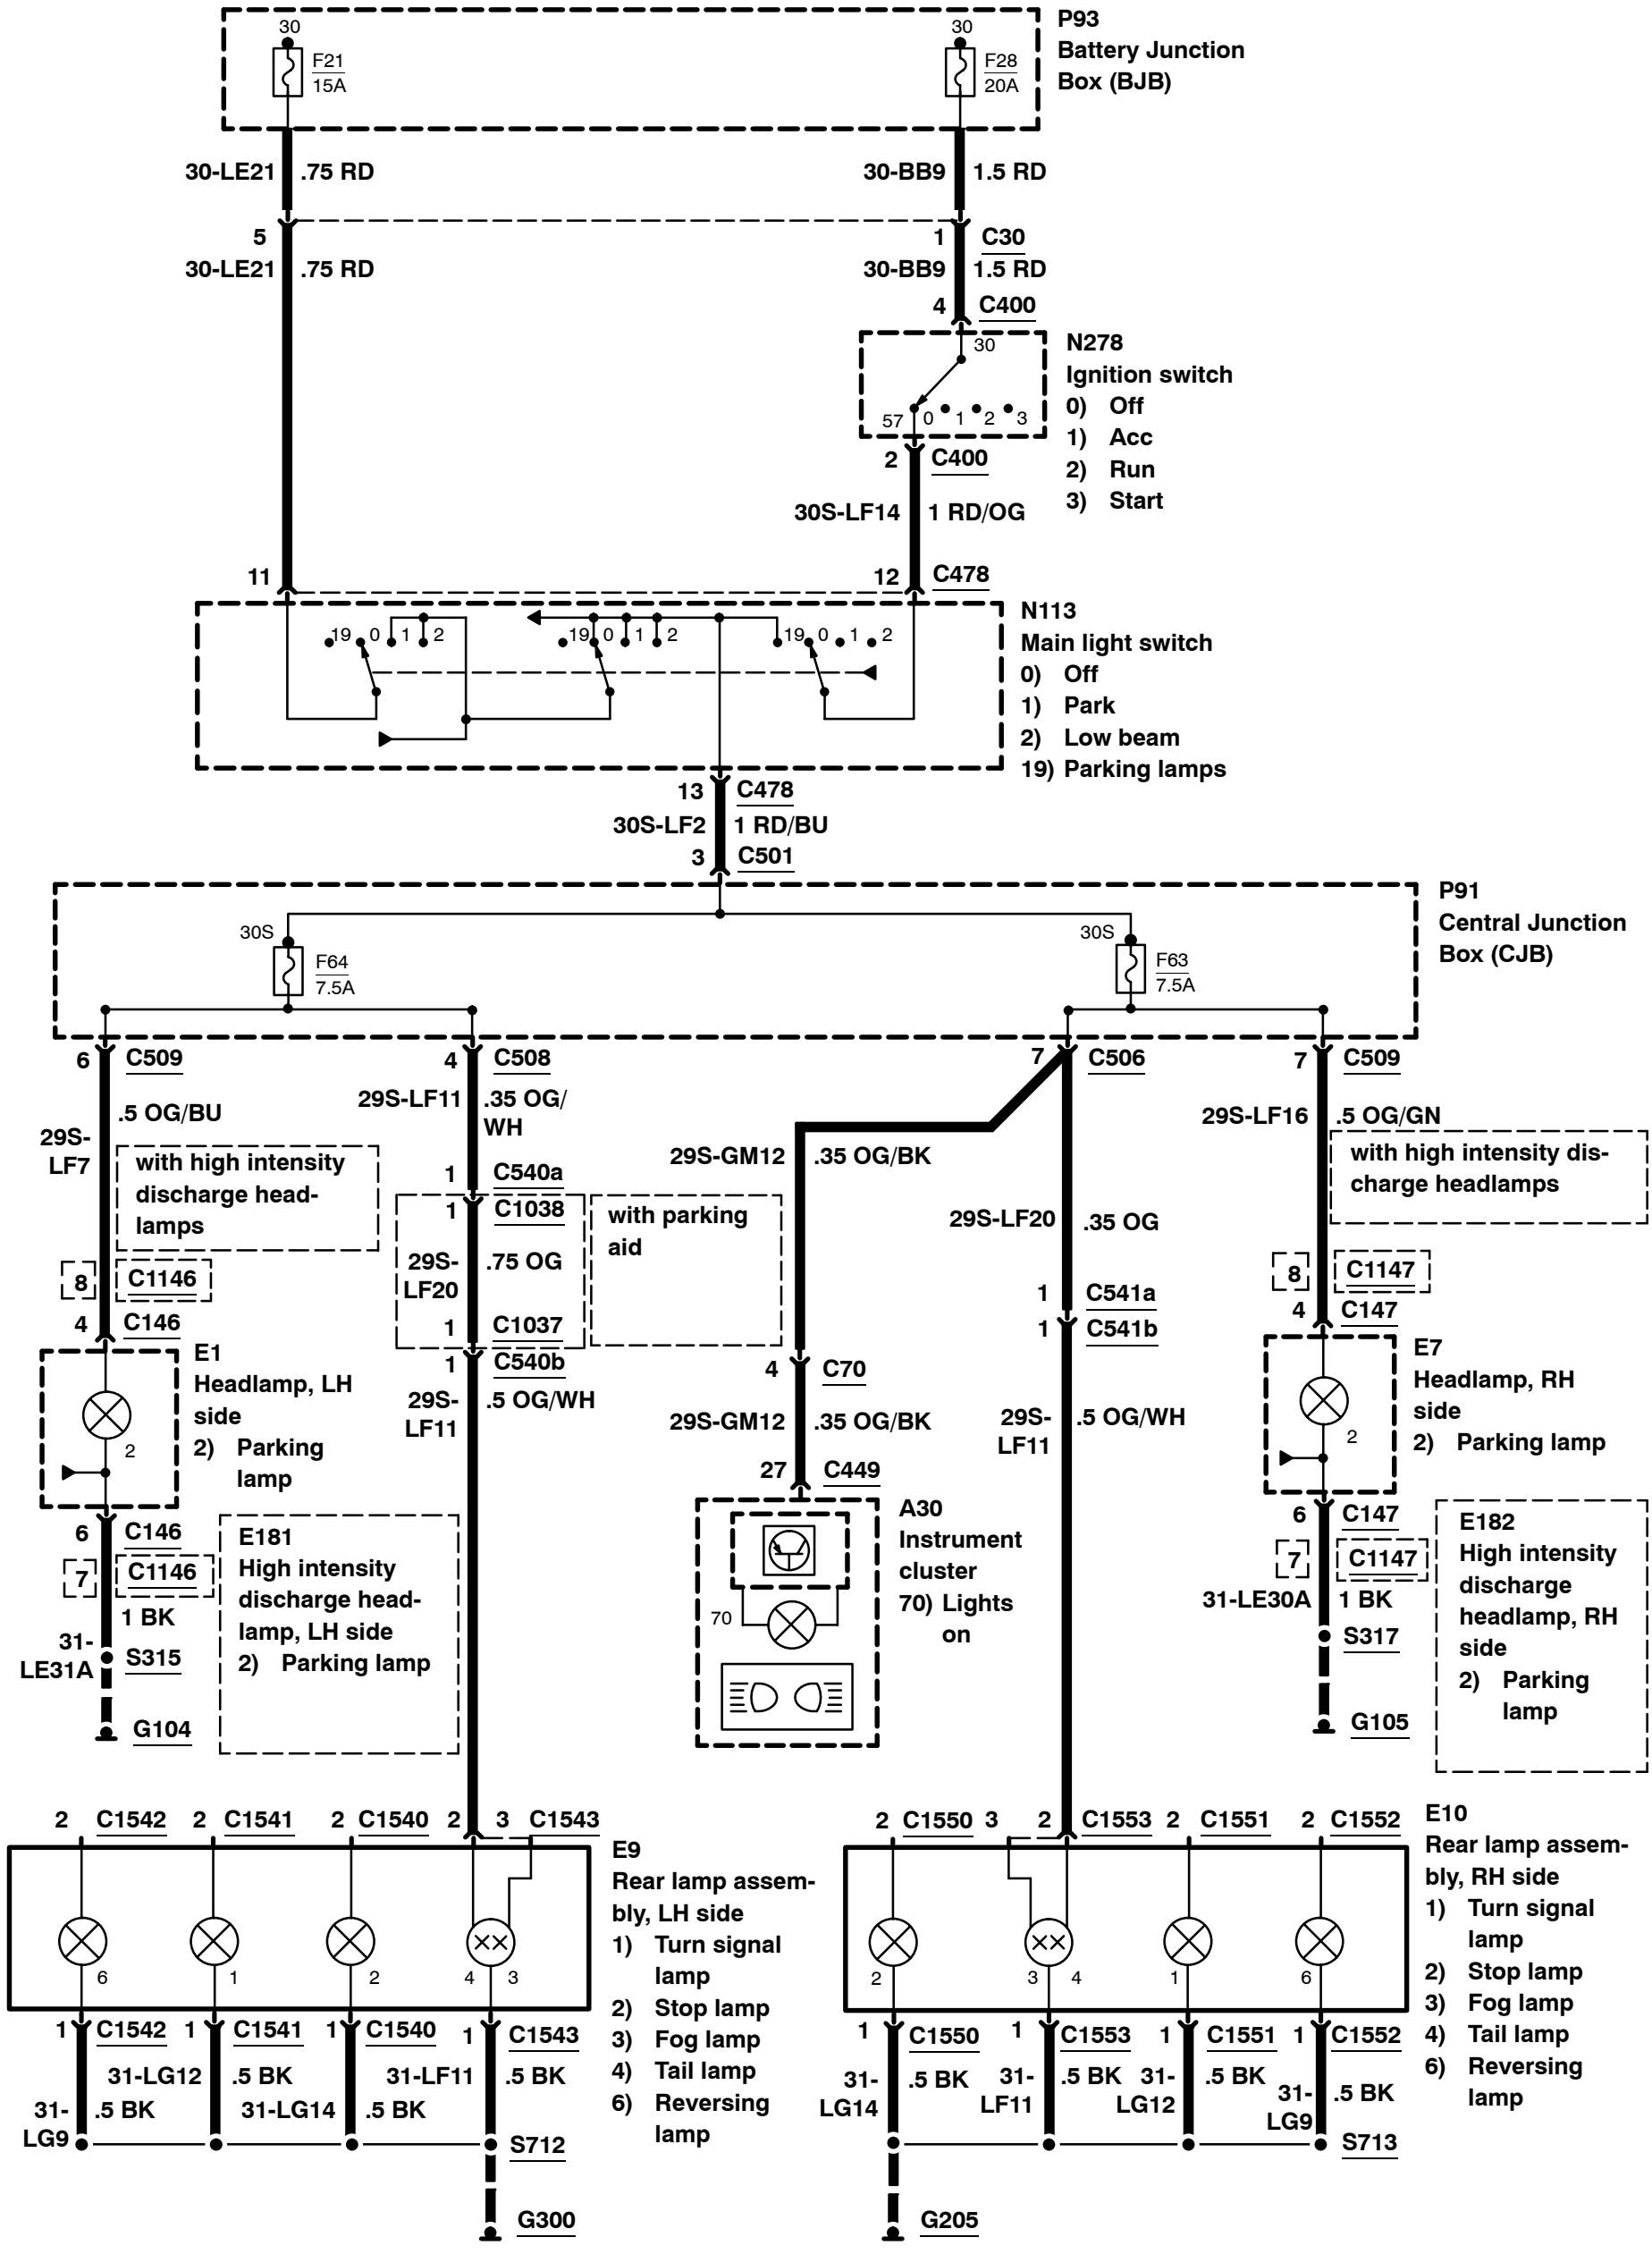


Exterior Lighting – Parking Lamps, without trailer socket, wagon, with auto-lamps

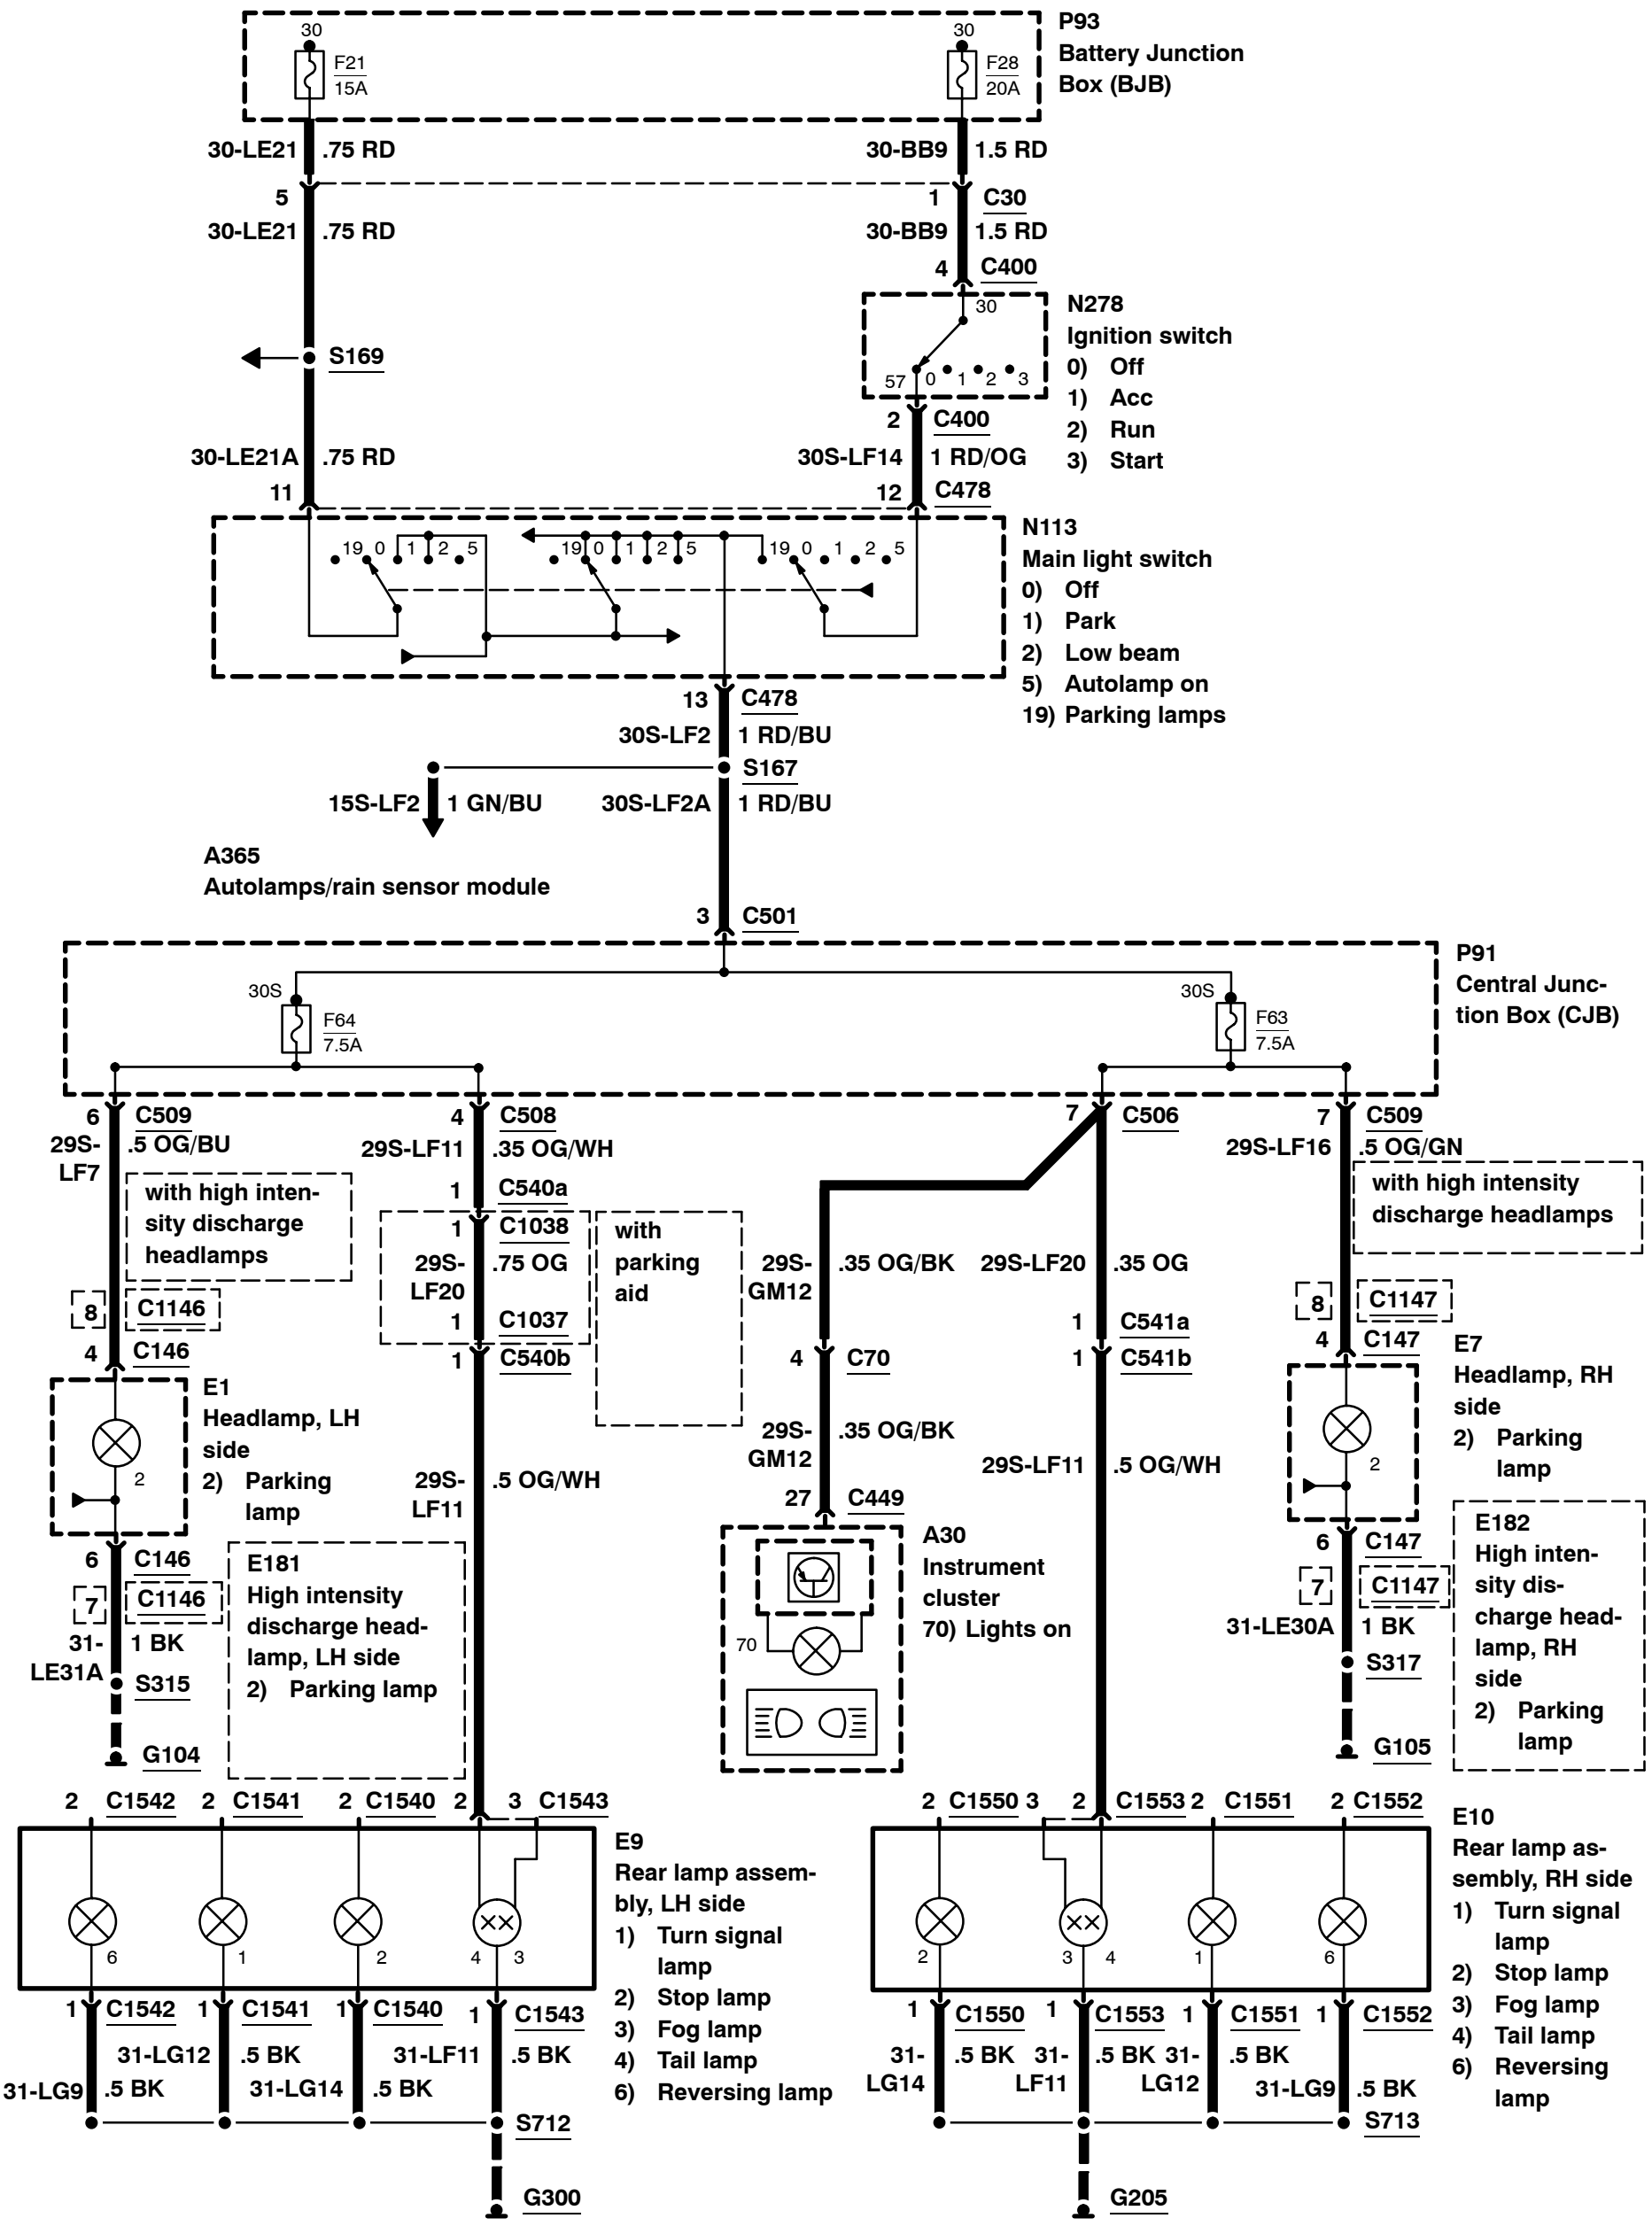

Exterior Lighting – Parking Lamps, with trailer socket, wagon, without auto-lamps

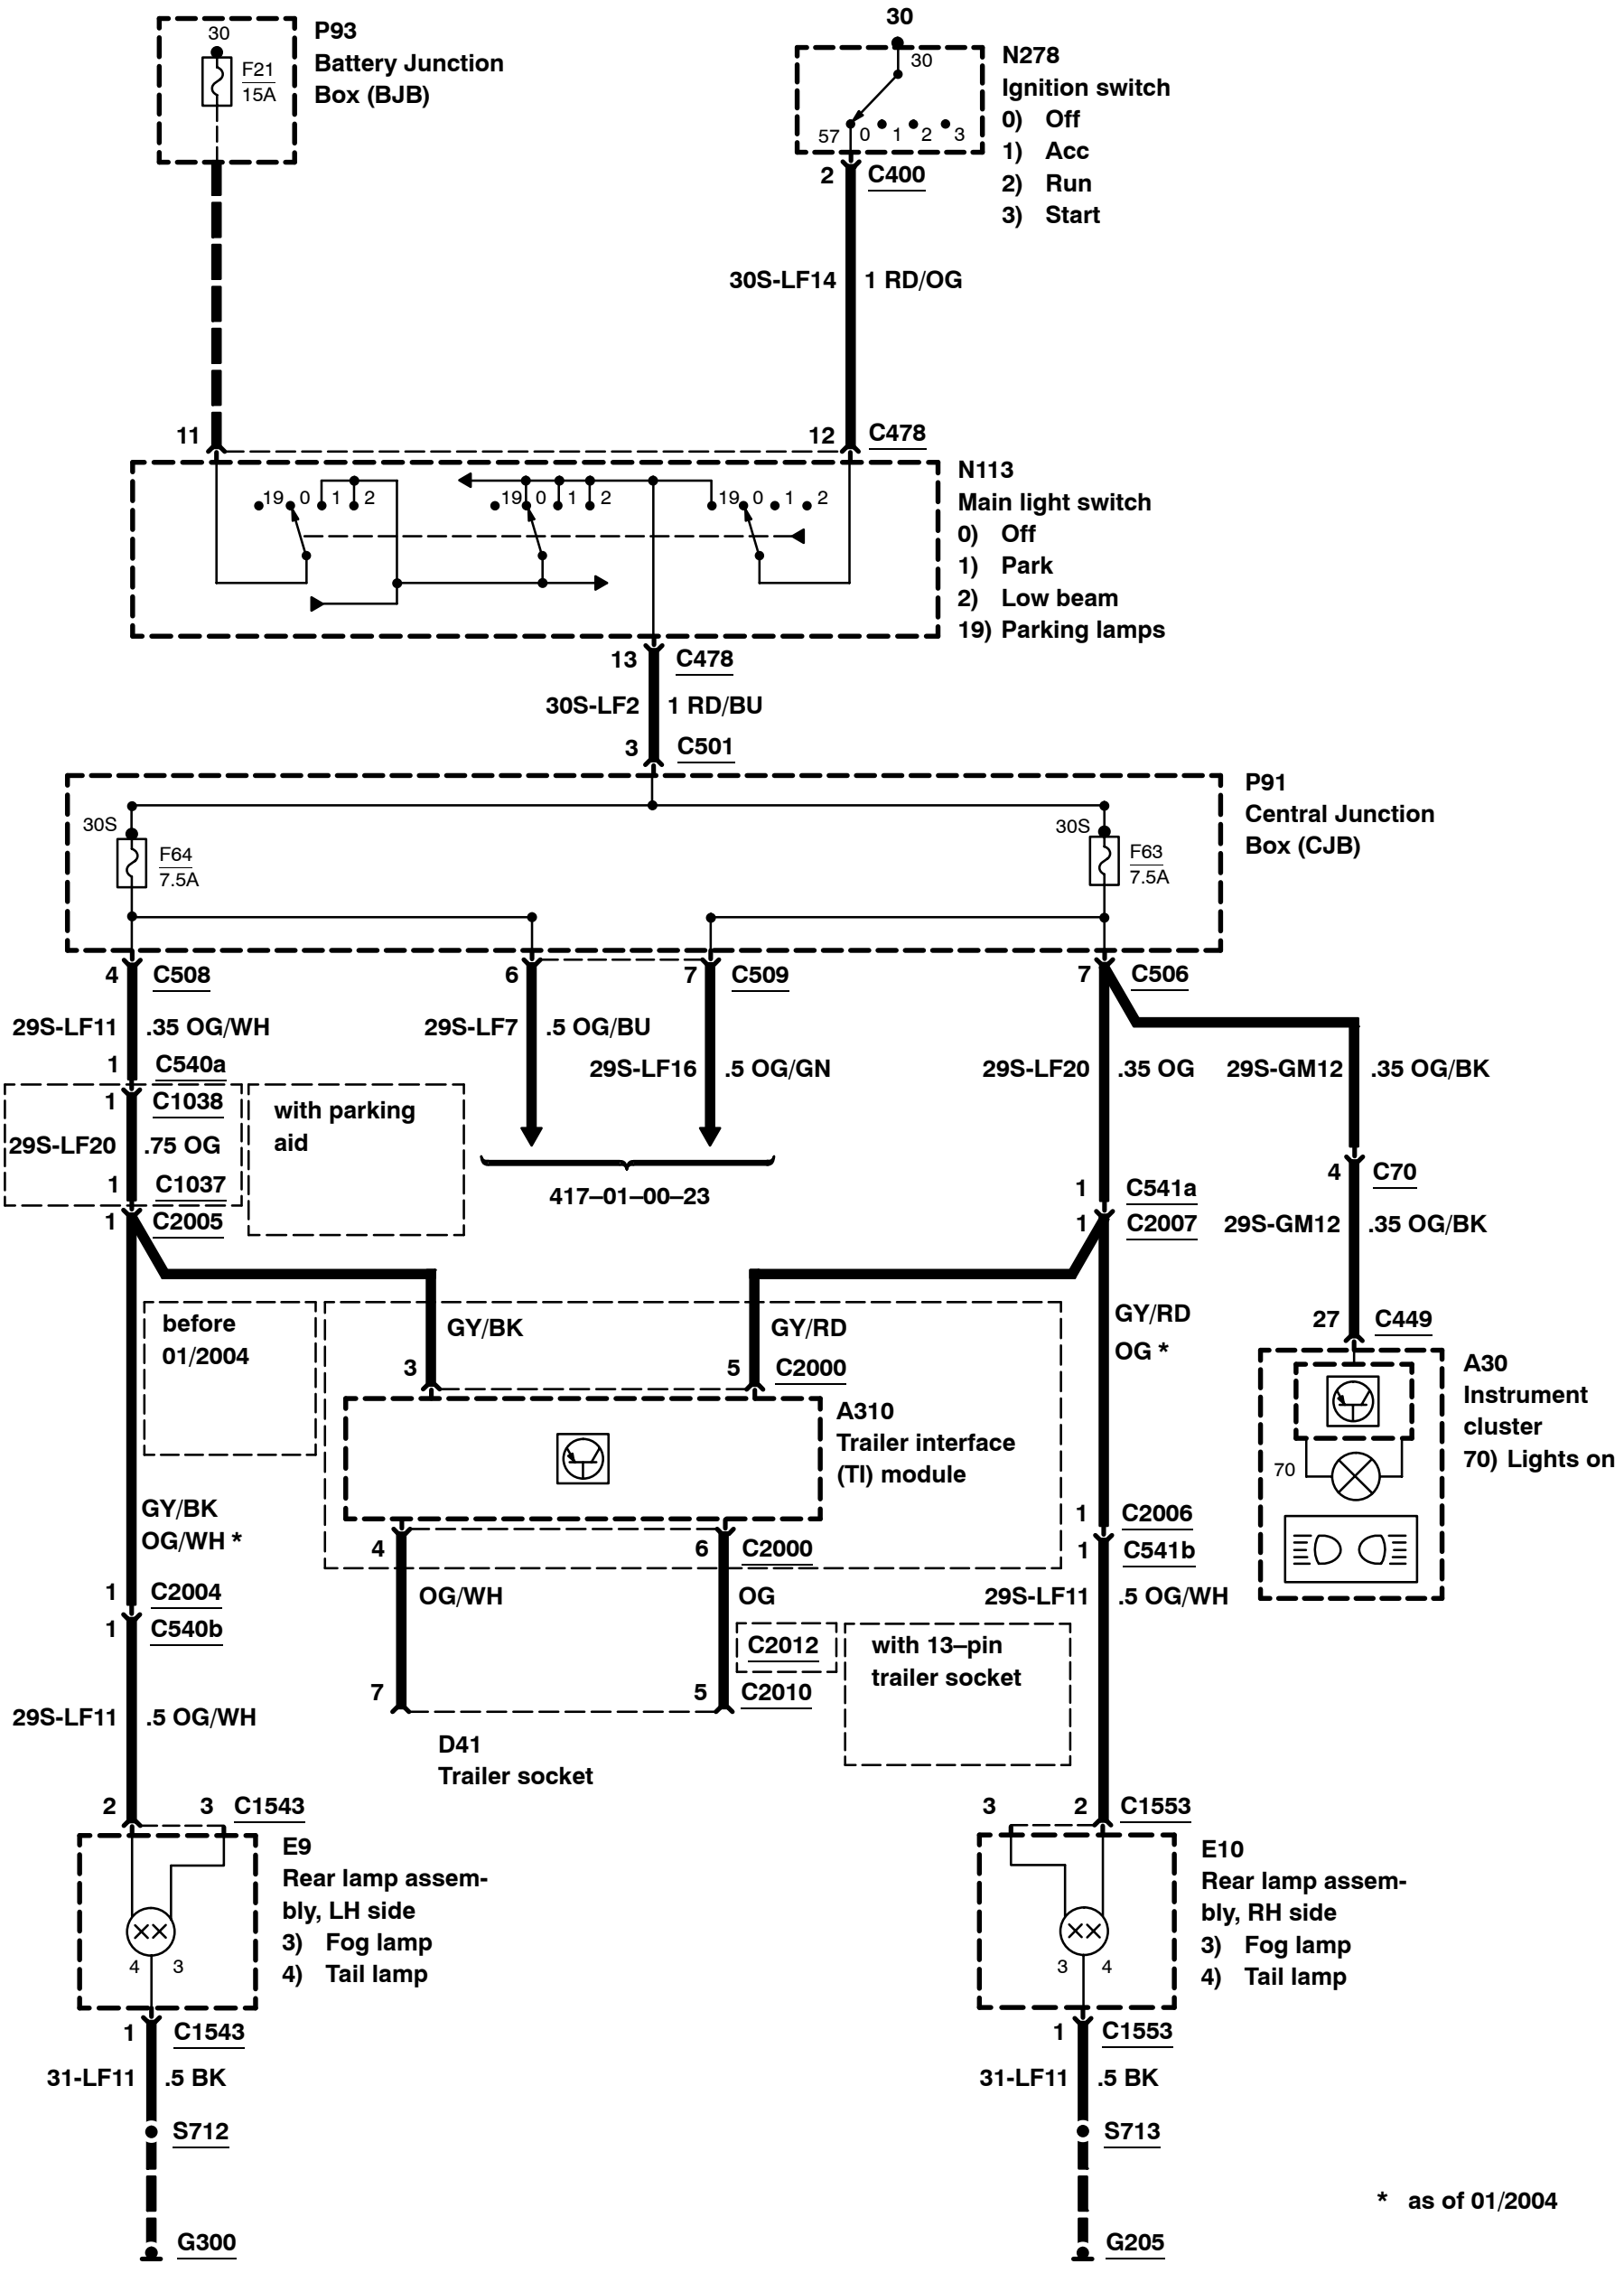


Exterior Lighting – Parking Lamps, with trailer socket, wagon, with autolamps

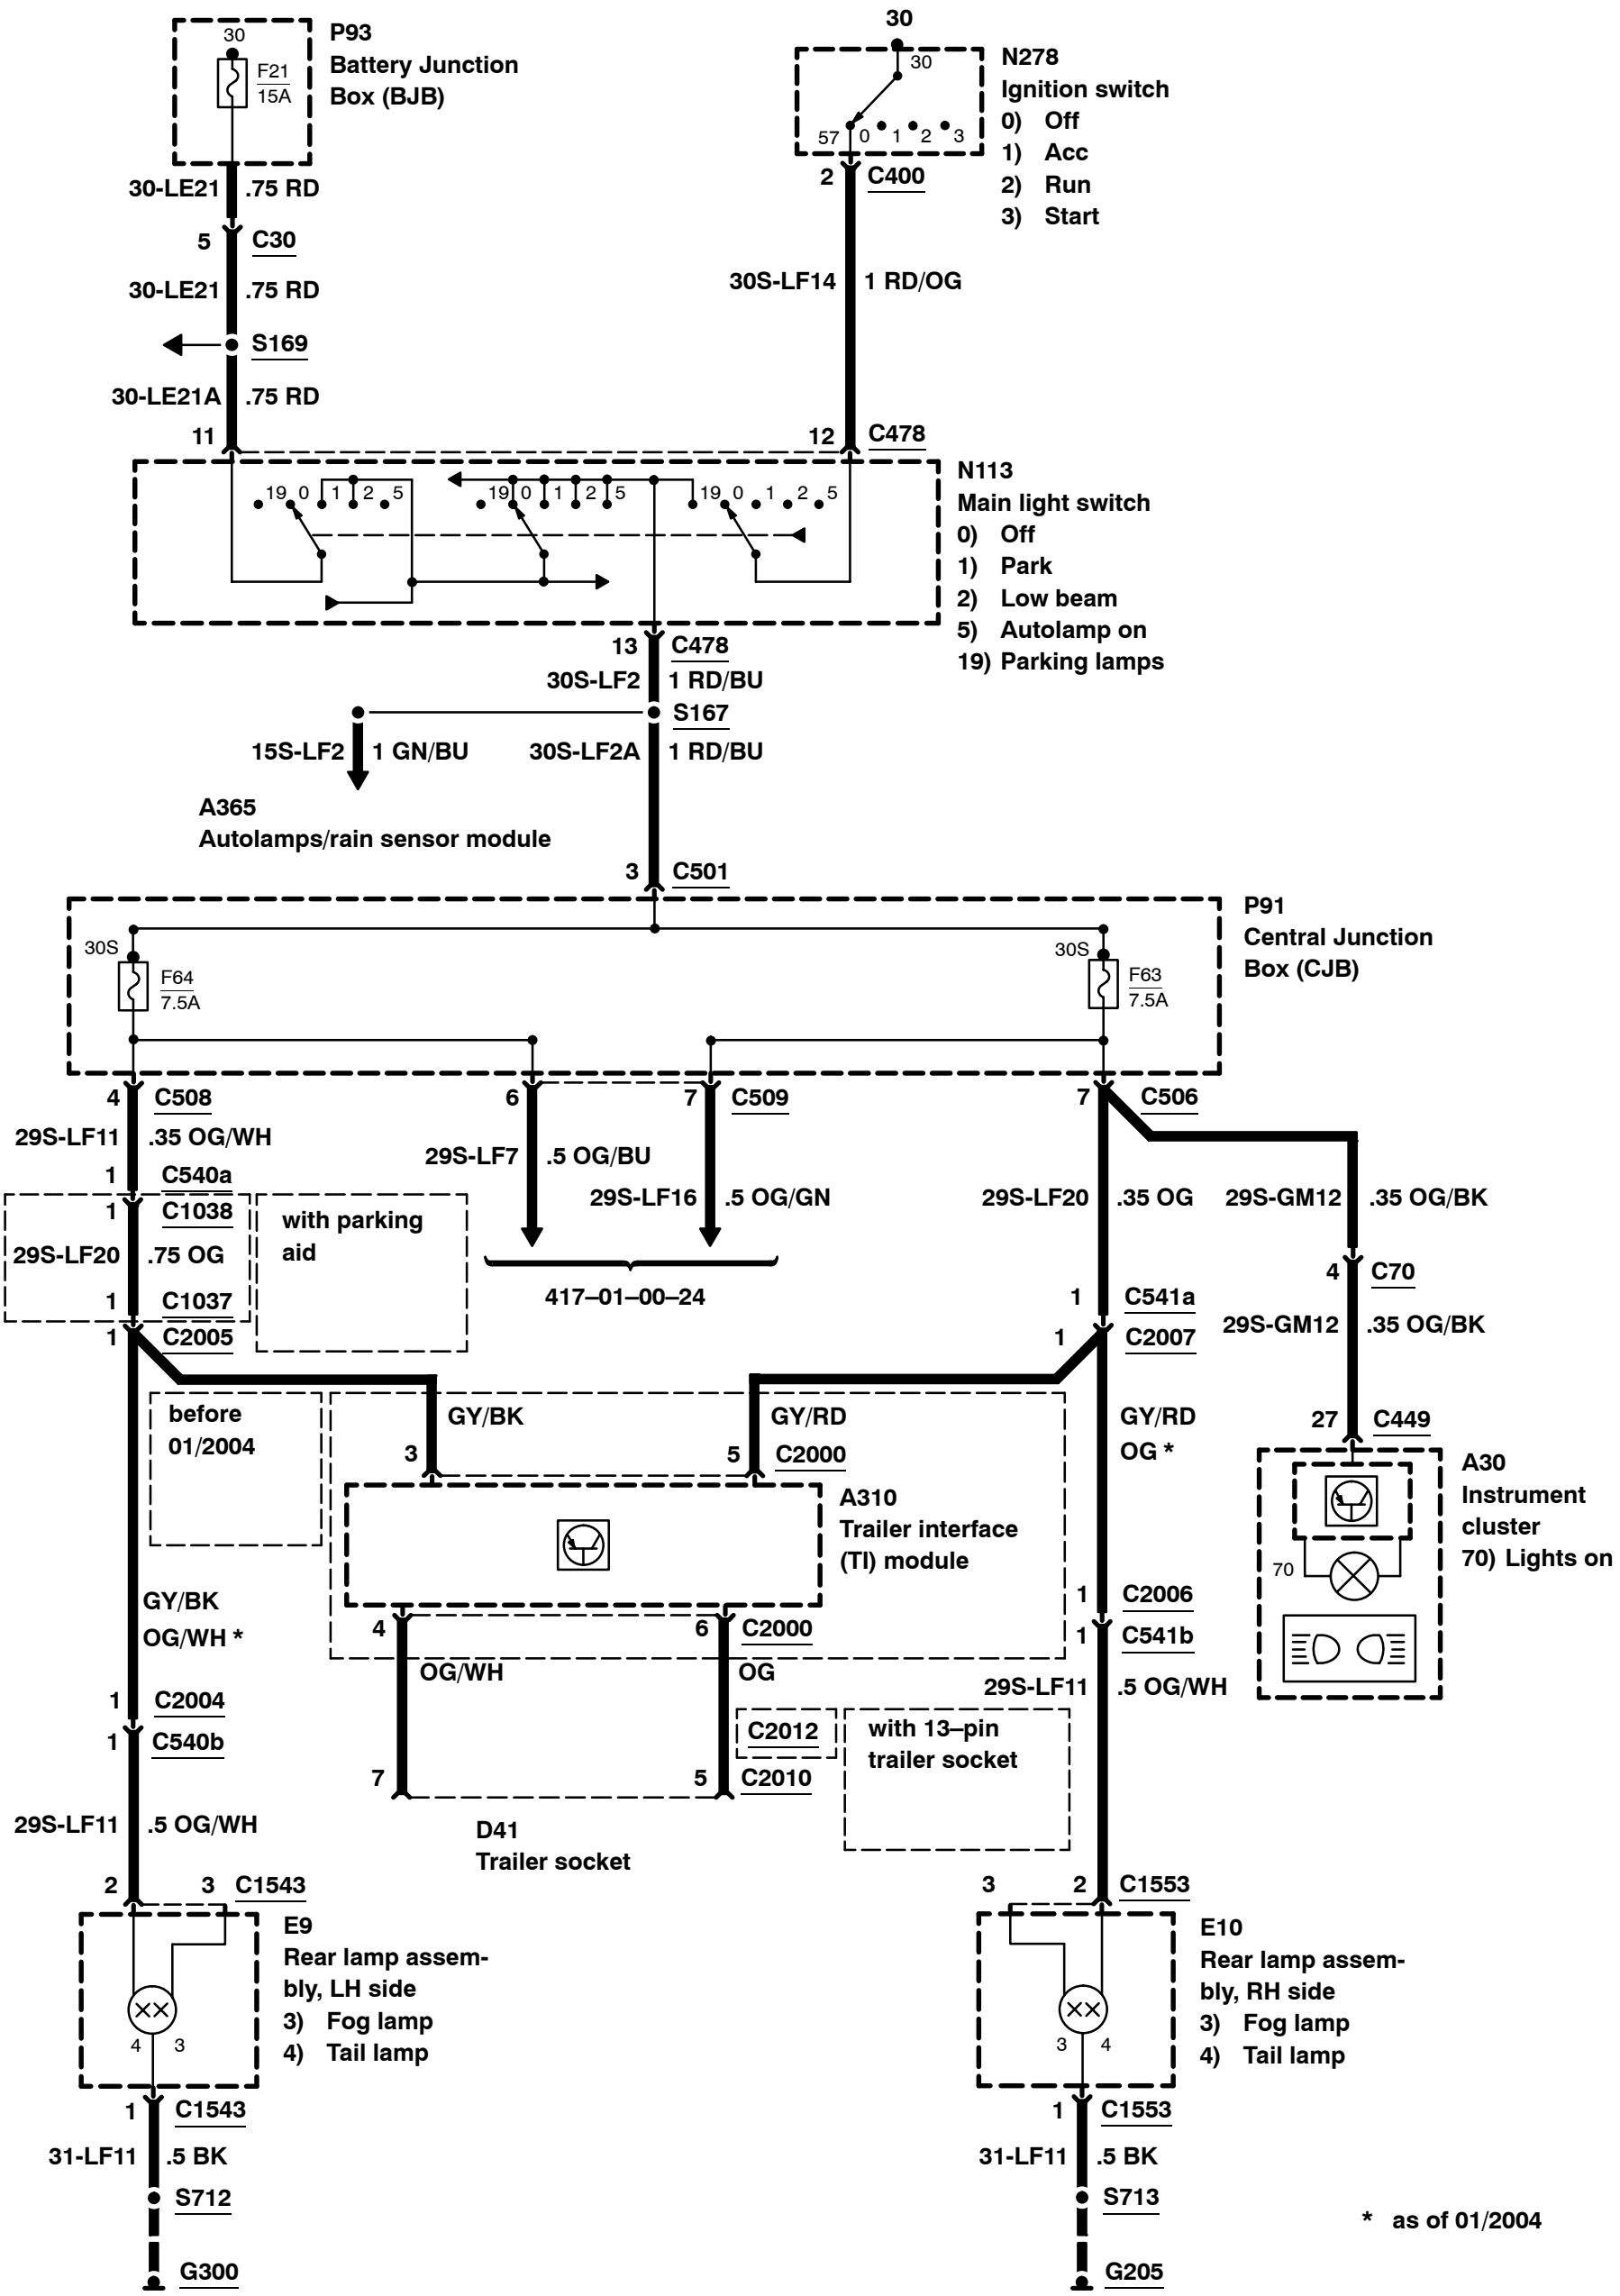


* as of 01/2004


Exterior Lighting – Stop Lamps, without trailer socket, 4–door model/5–door model

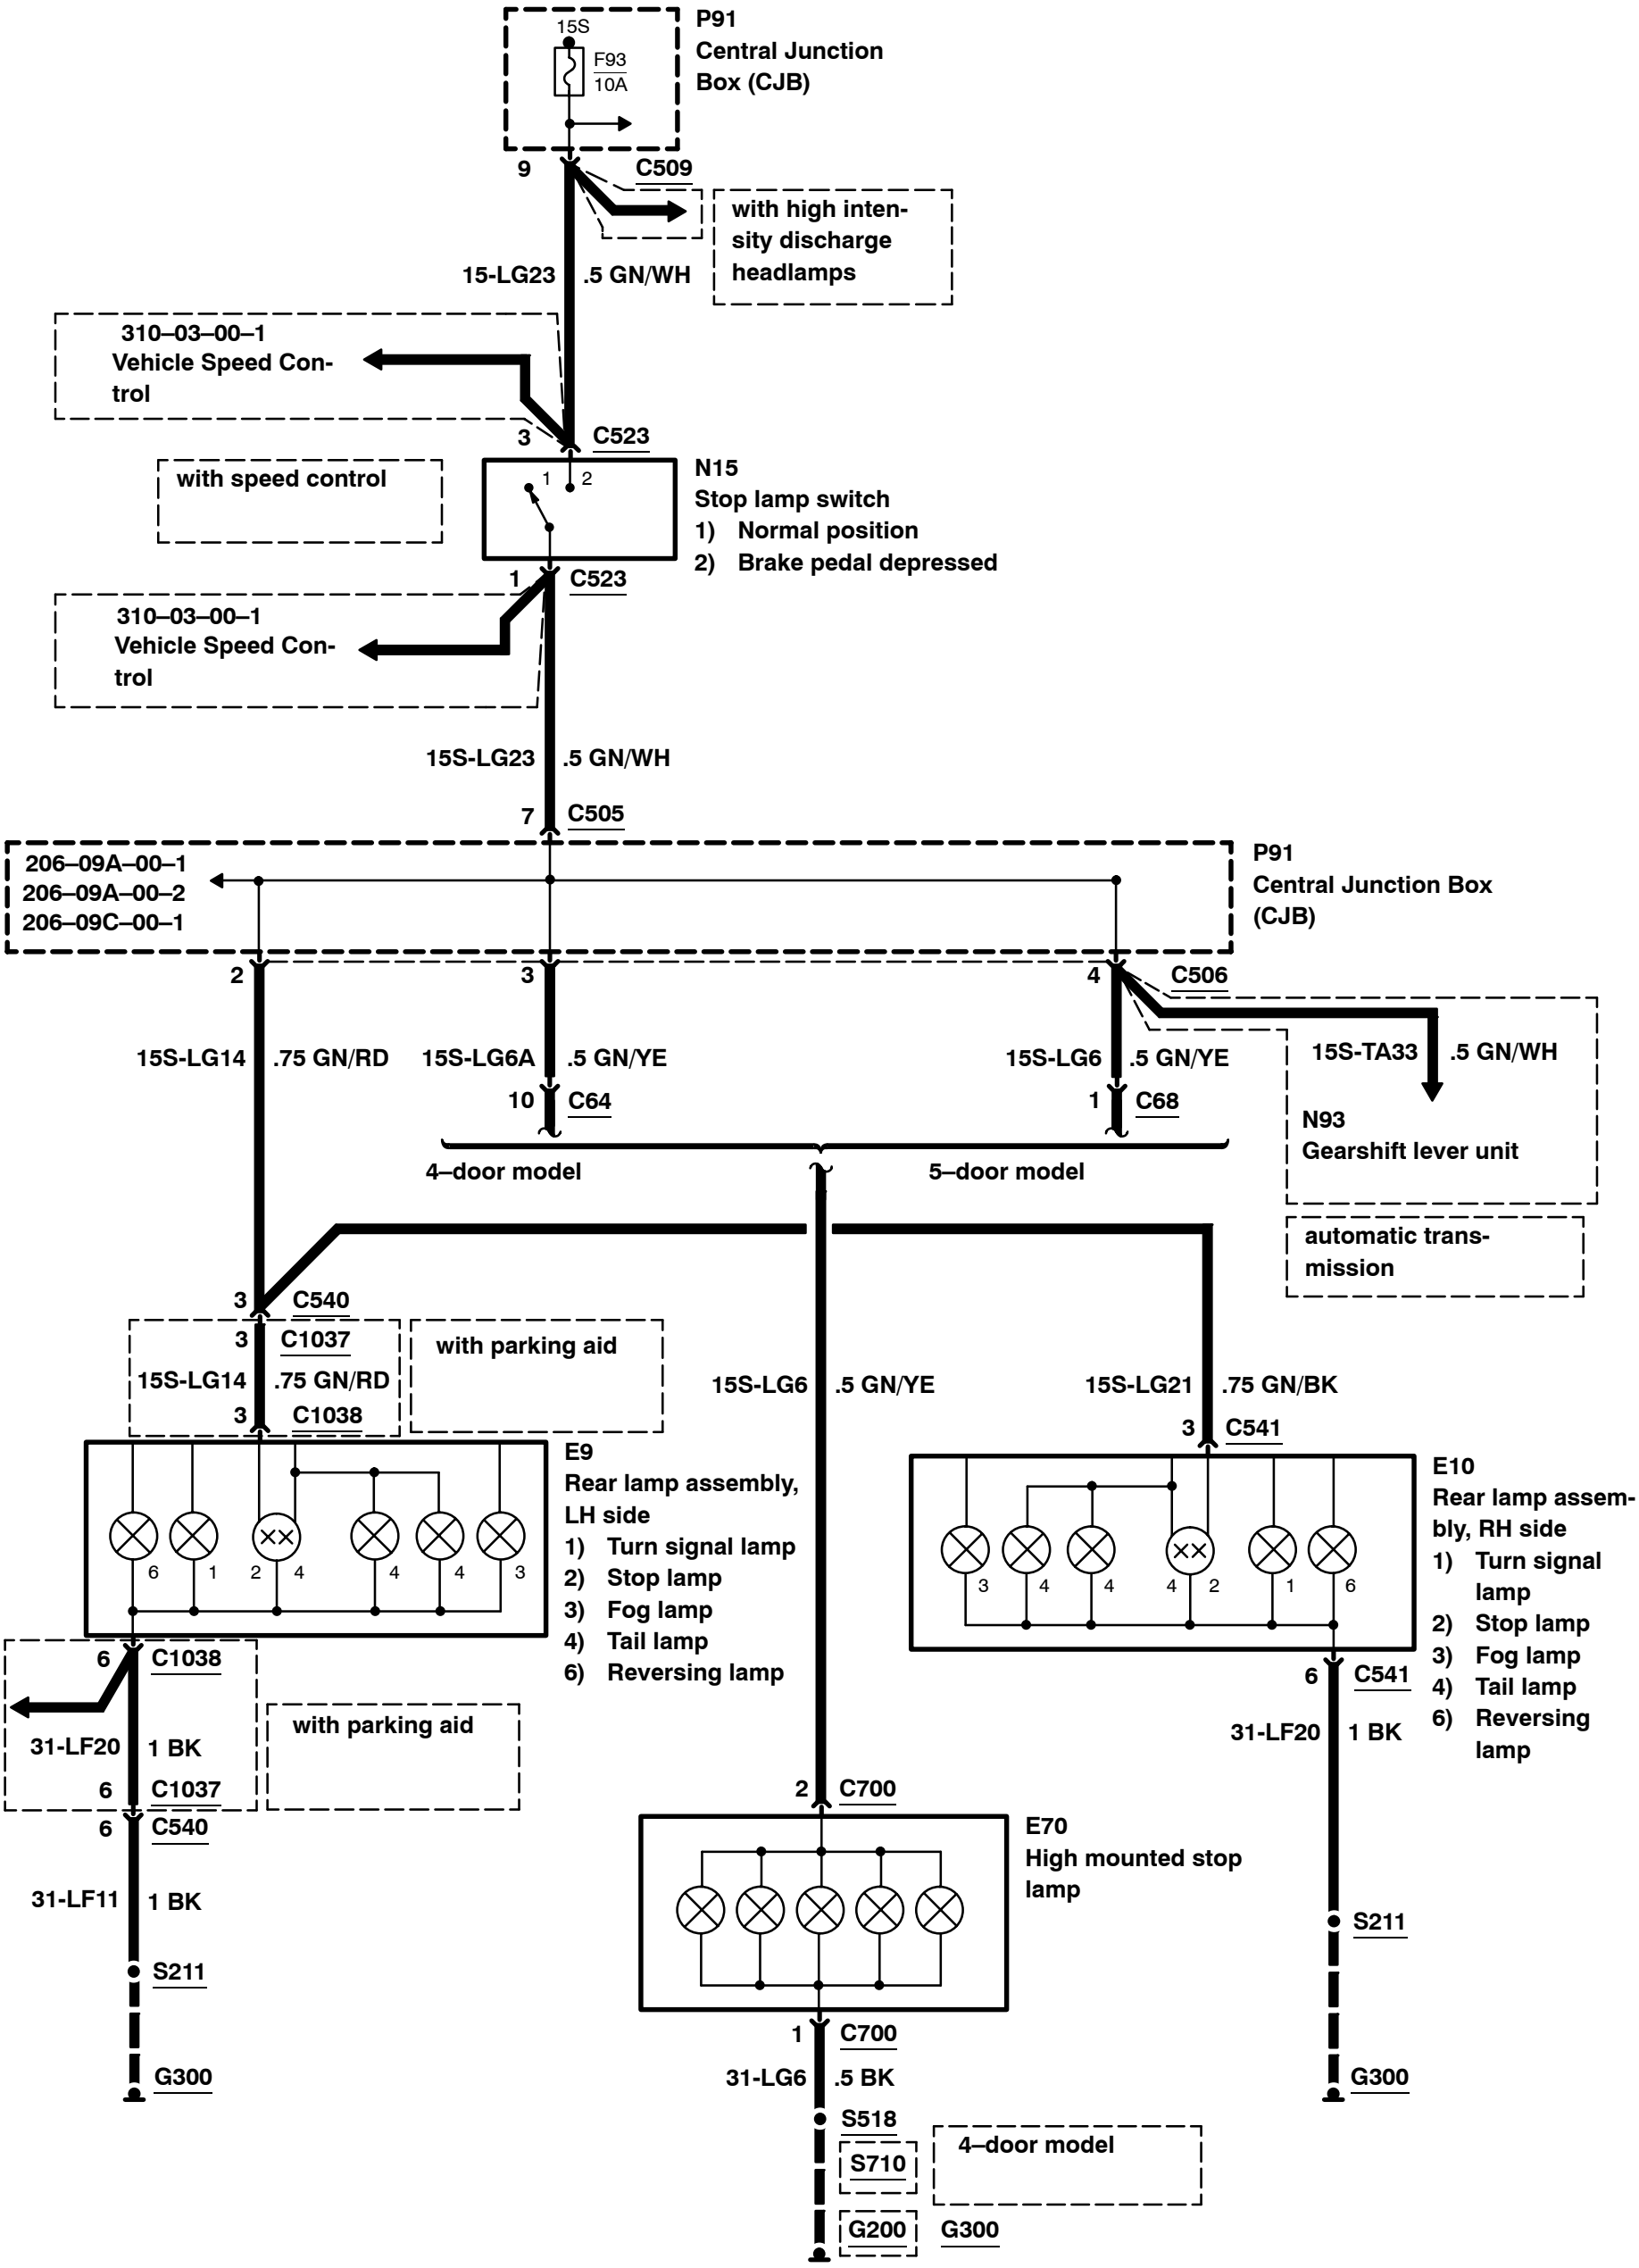


Exterior Lighting – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004

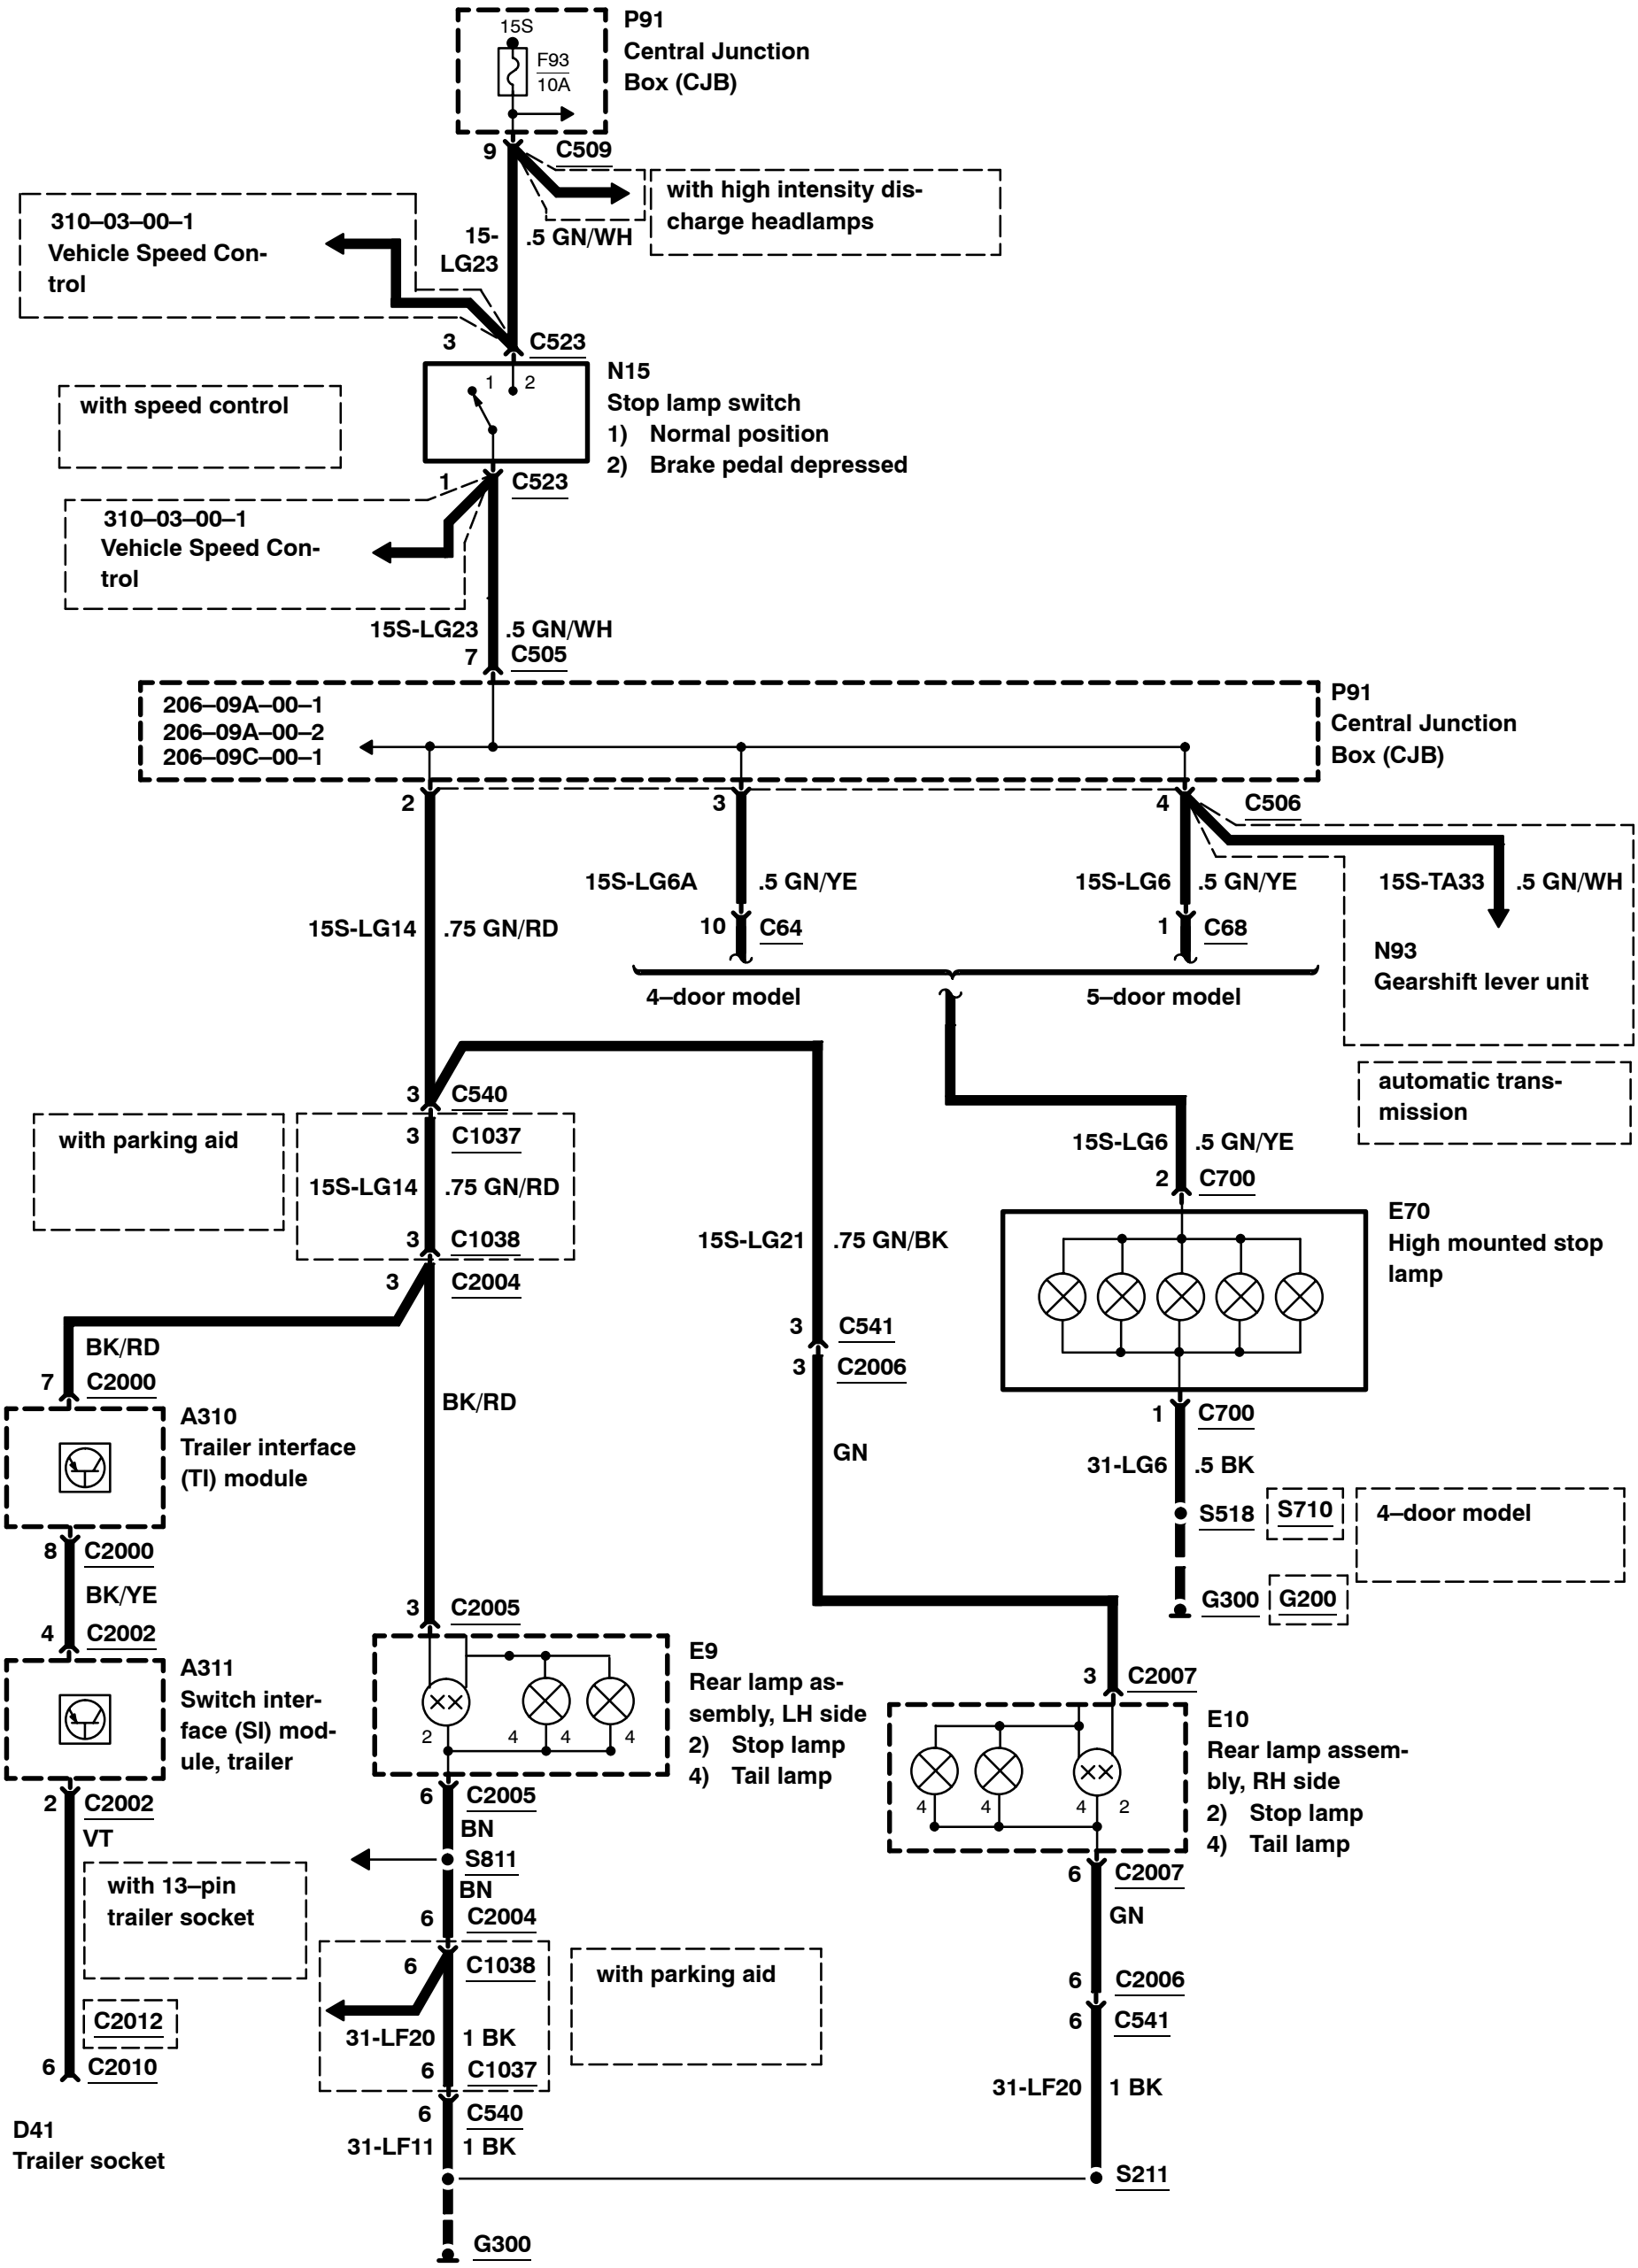


Exterior Lighting – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004

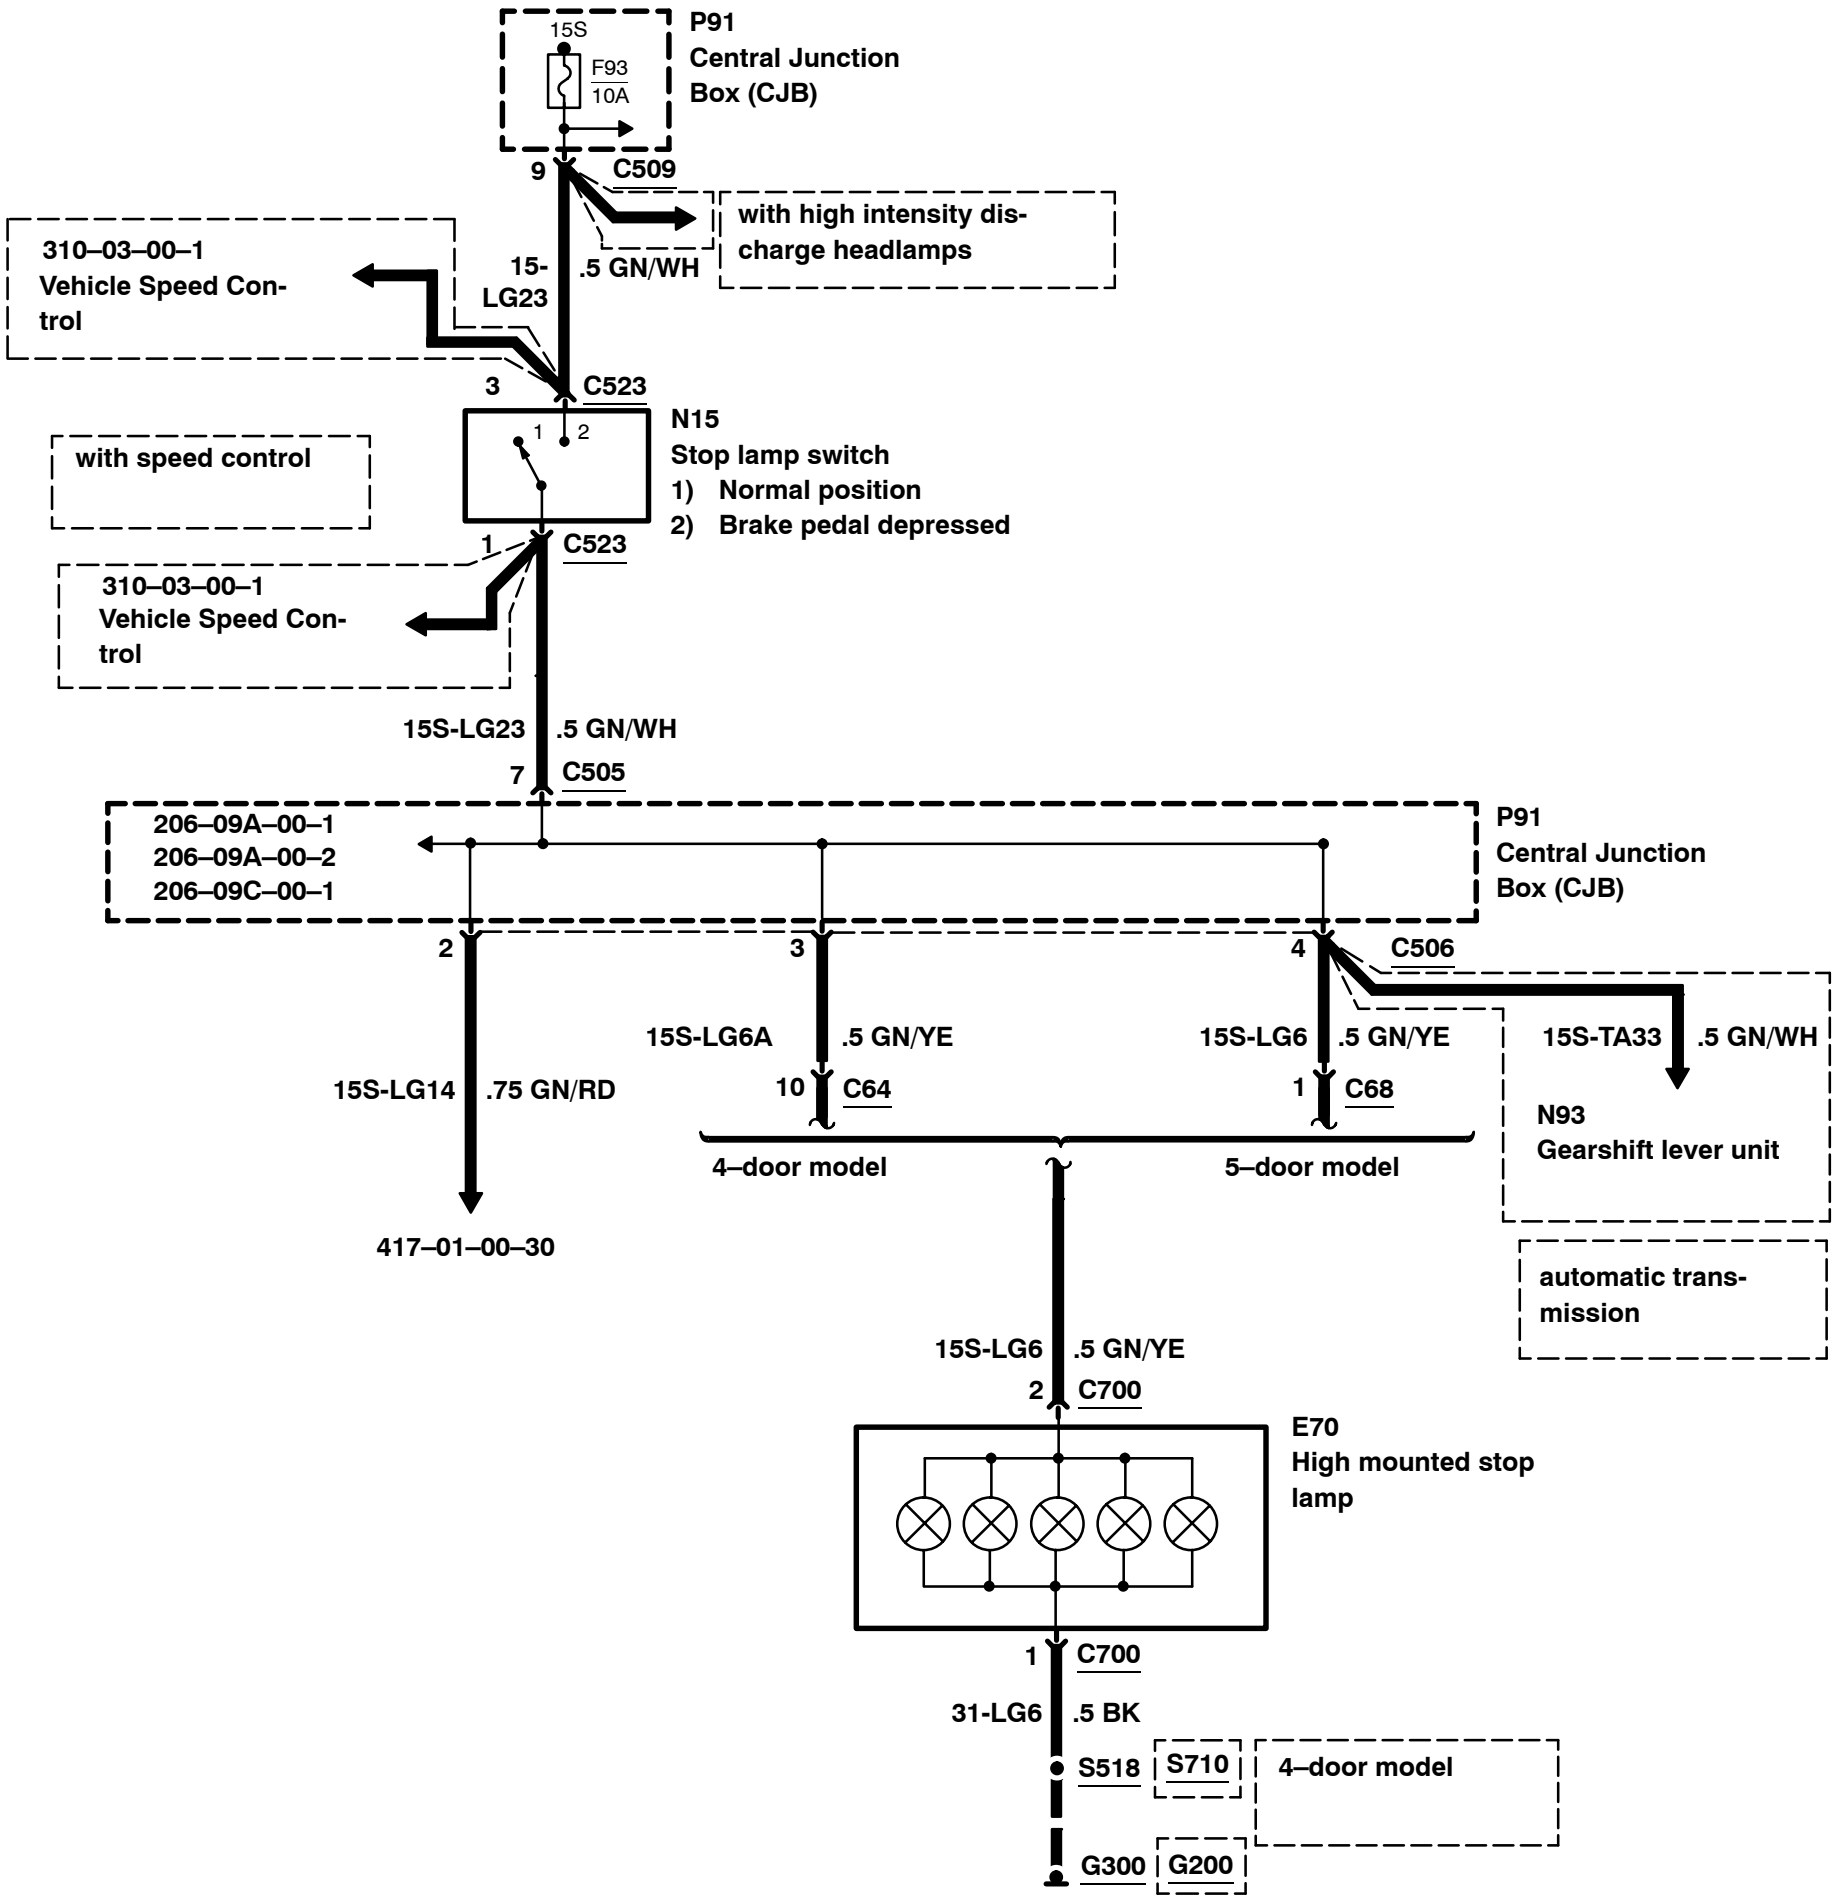


Exterior Lighting – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004

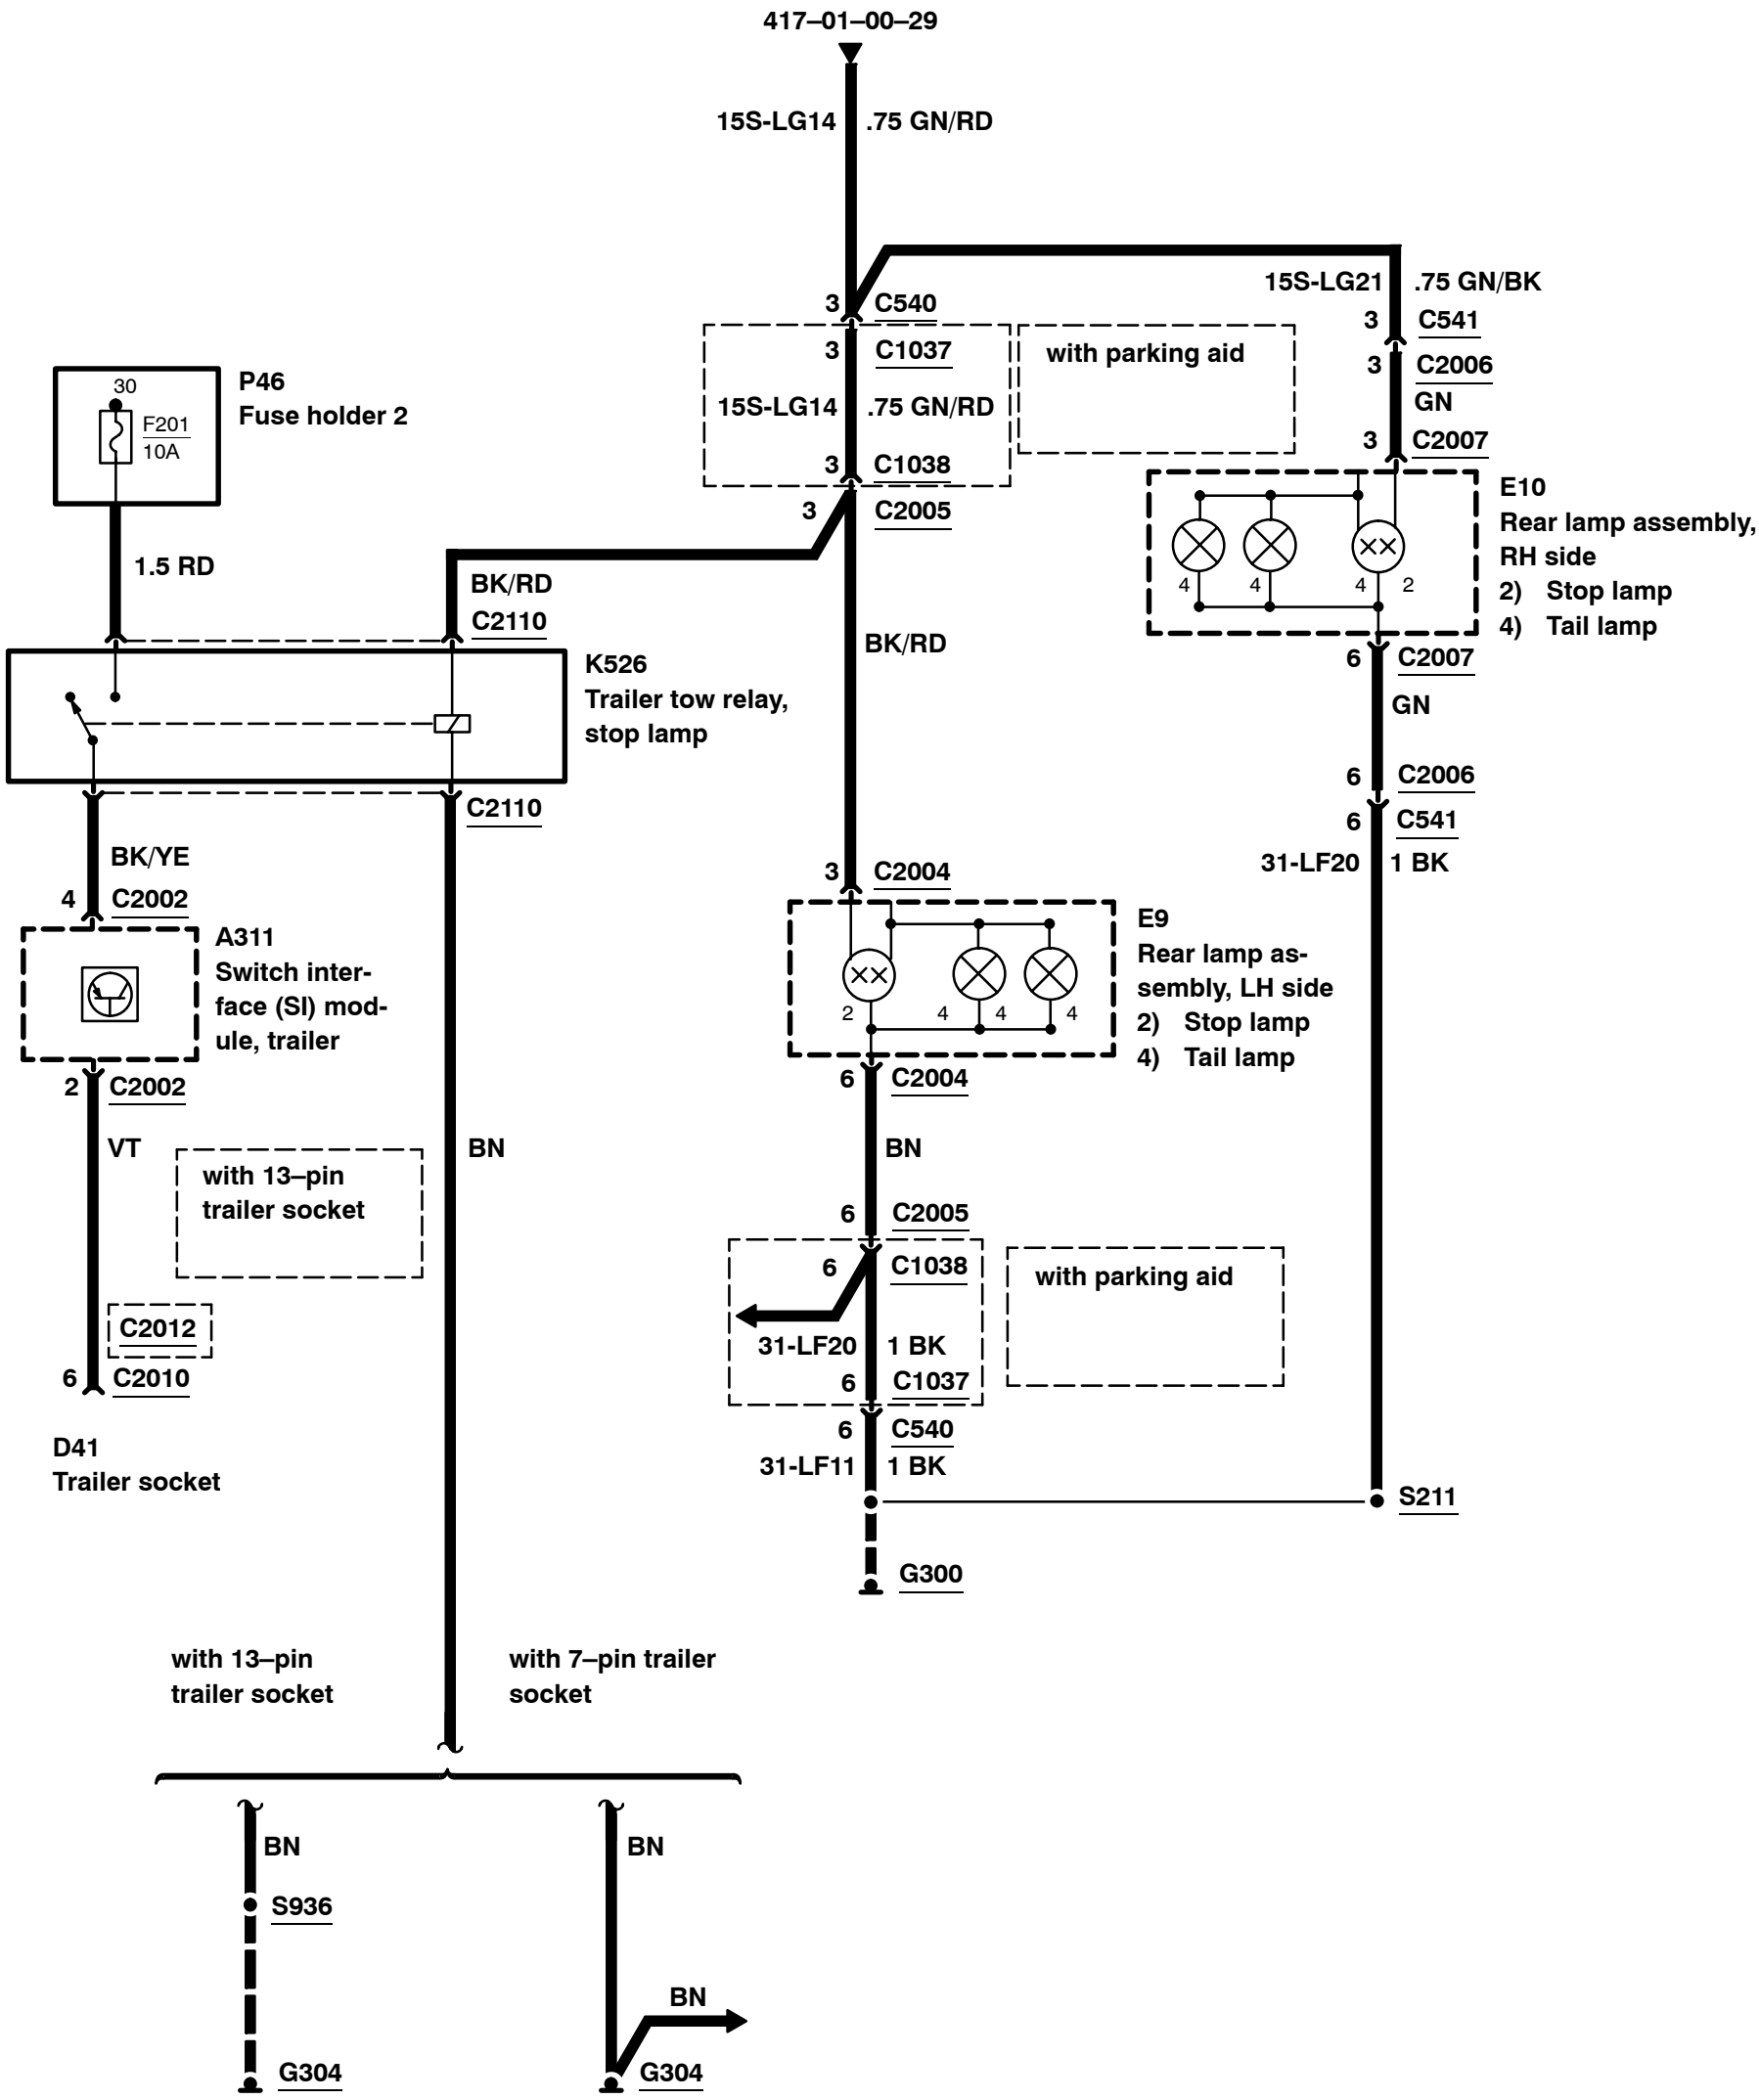


Exterior Lighting – Stop Lamps, without trailer socket, wagon

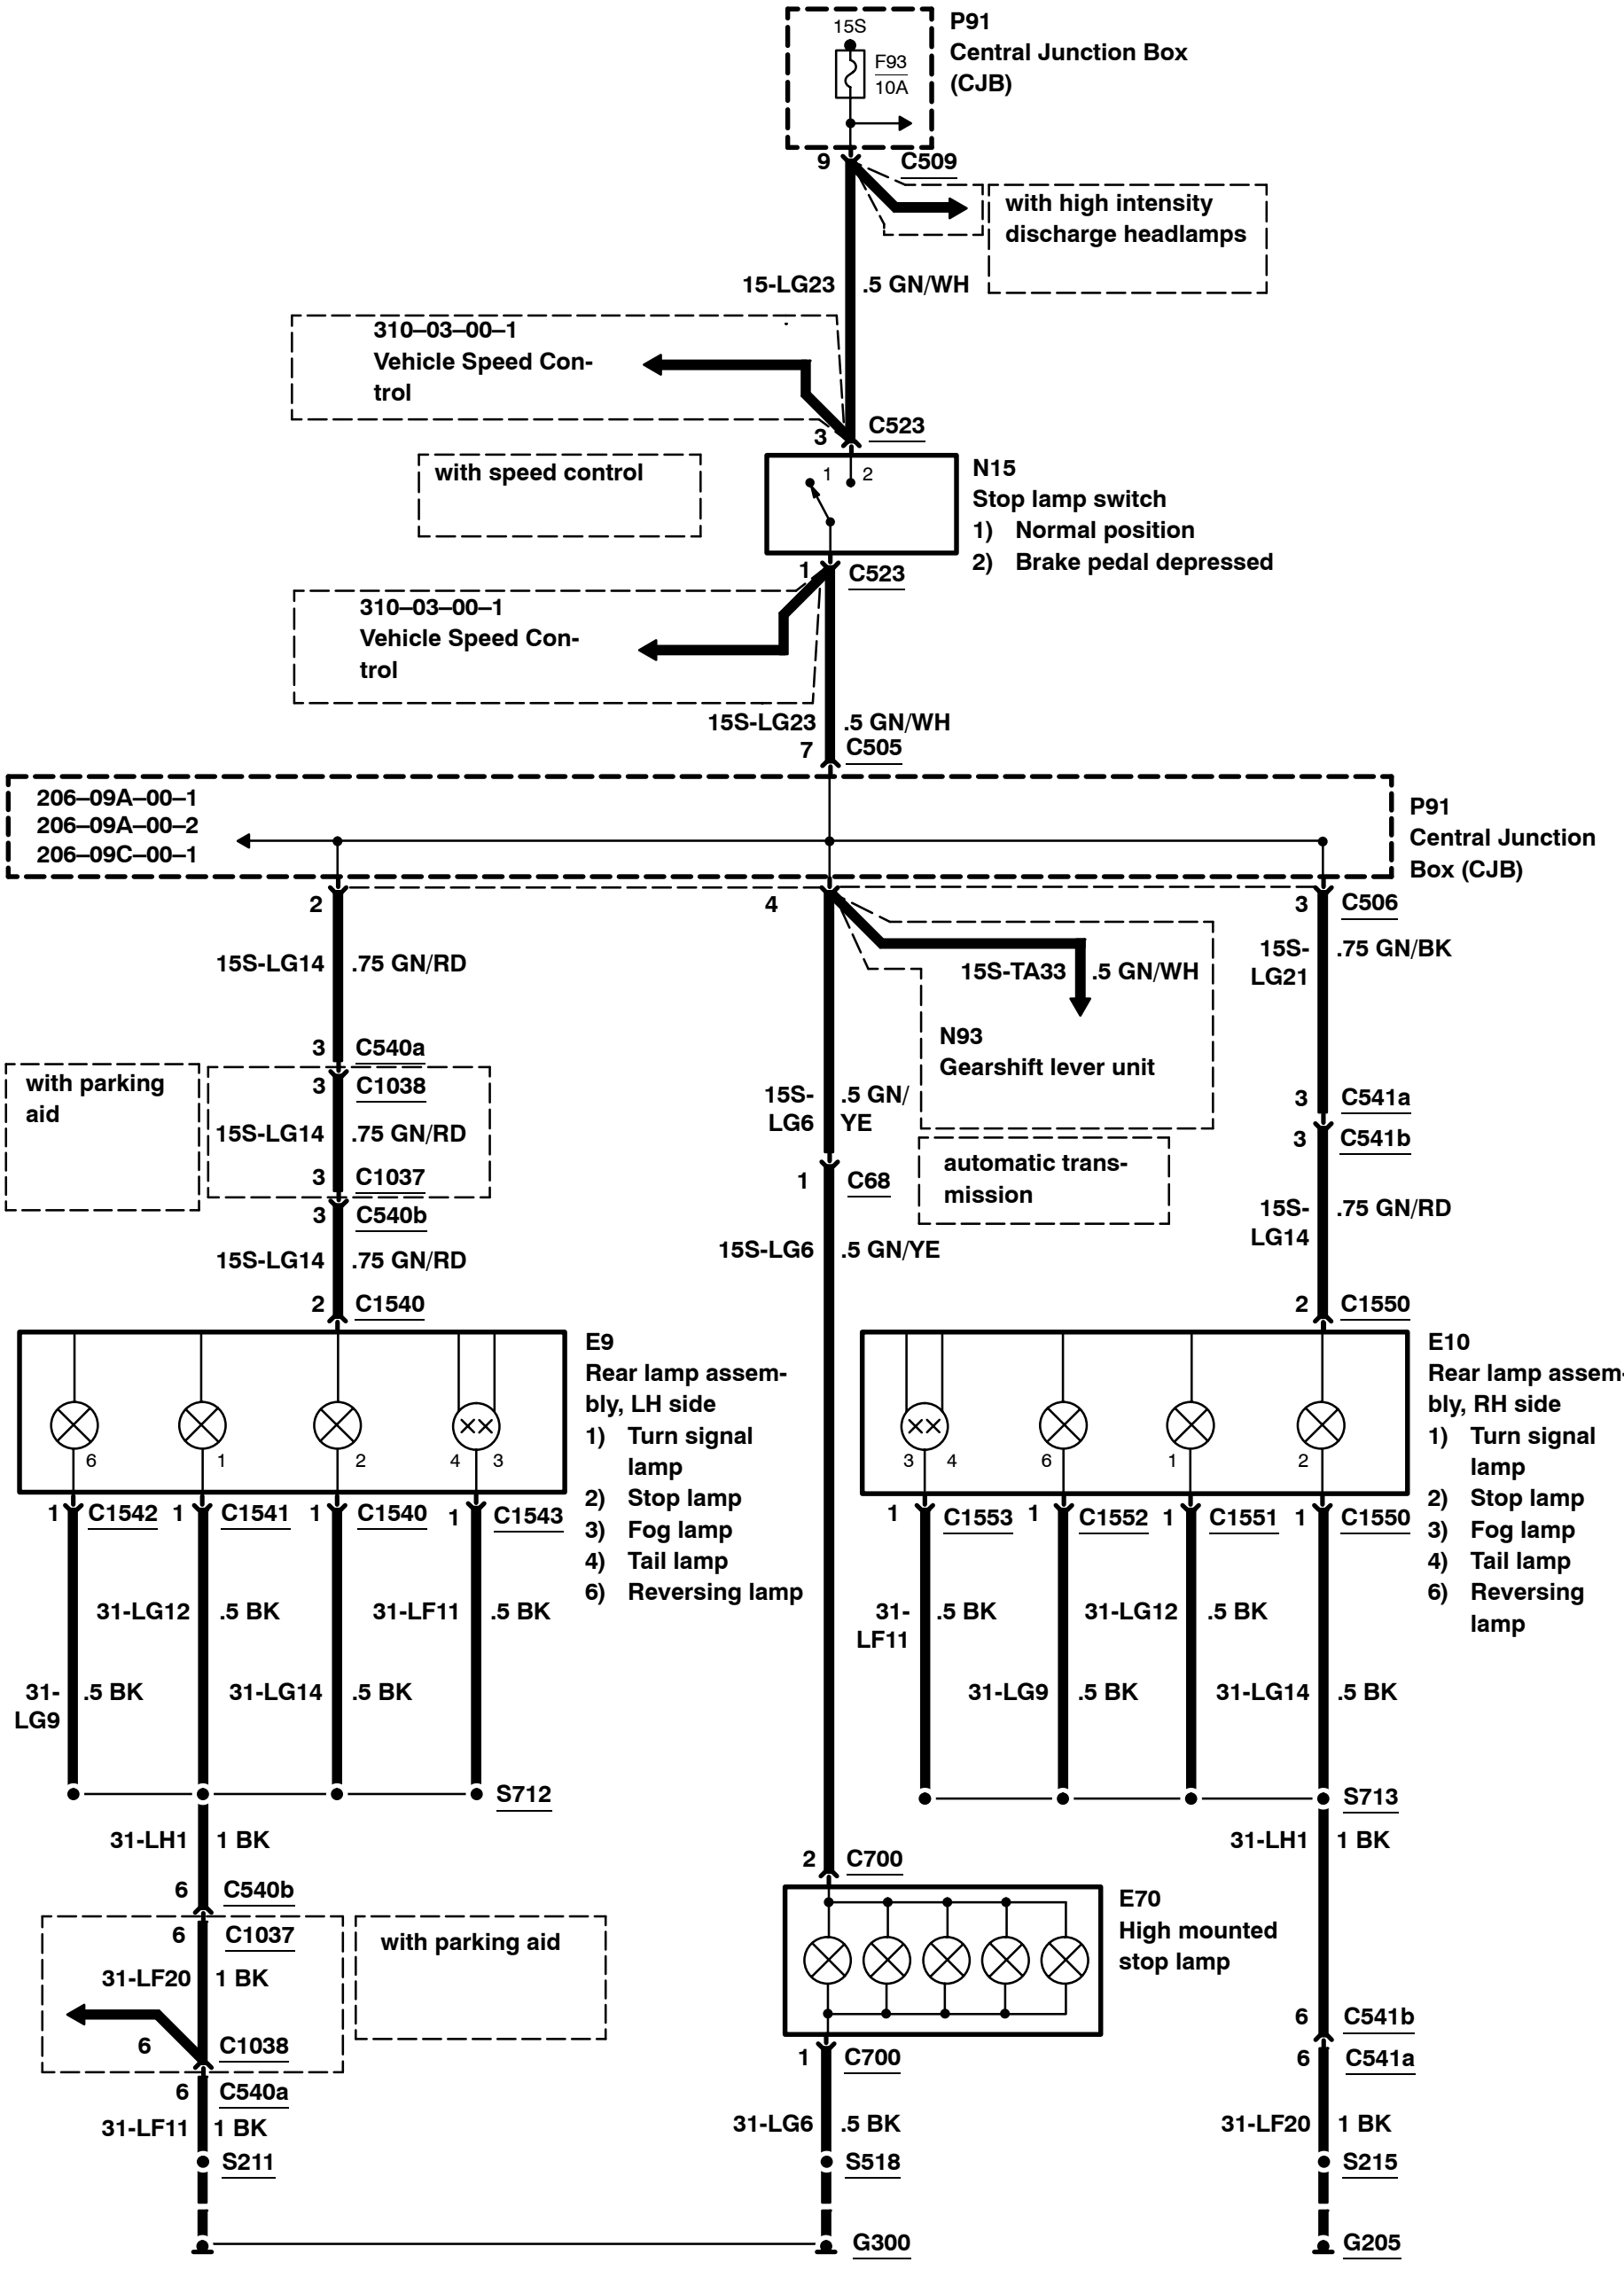


Exterior Lighting – Stop Lamps, with trailer socket, wagon, before 01/2004

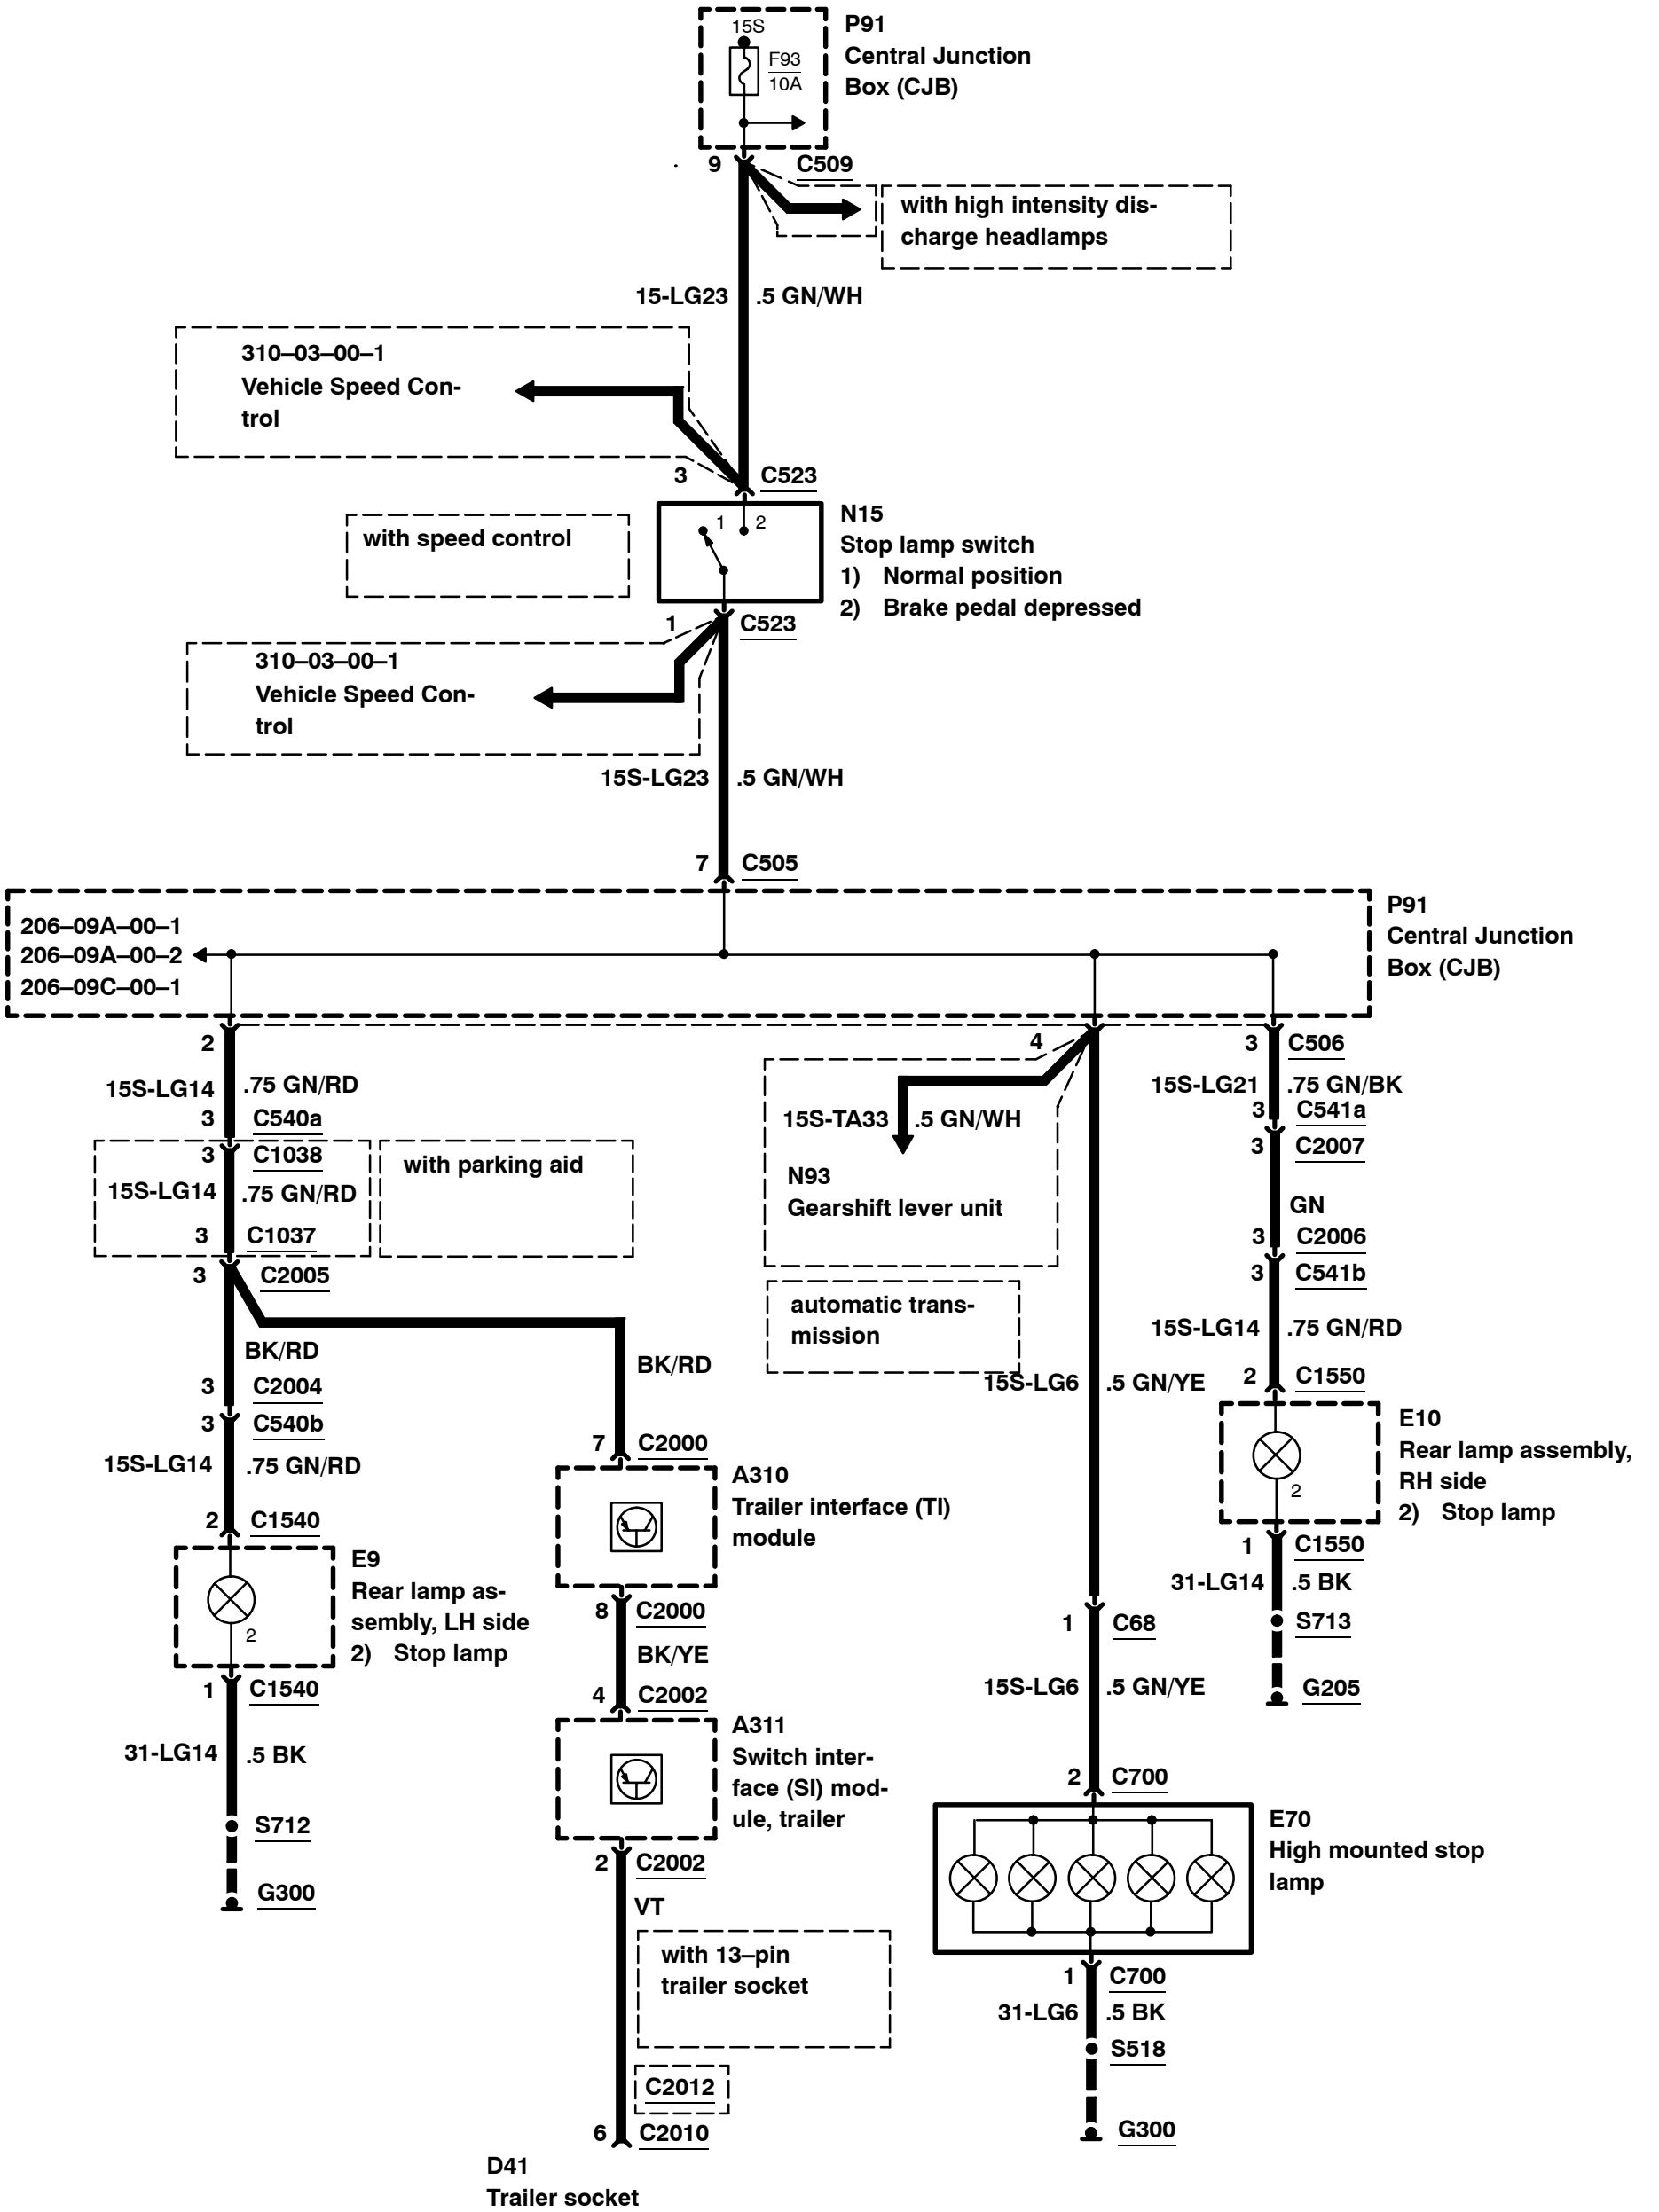


Exterior Lighting – Stop Lamps, with trailer socket, wagon, as of 01/2004

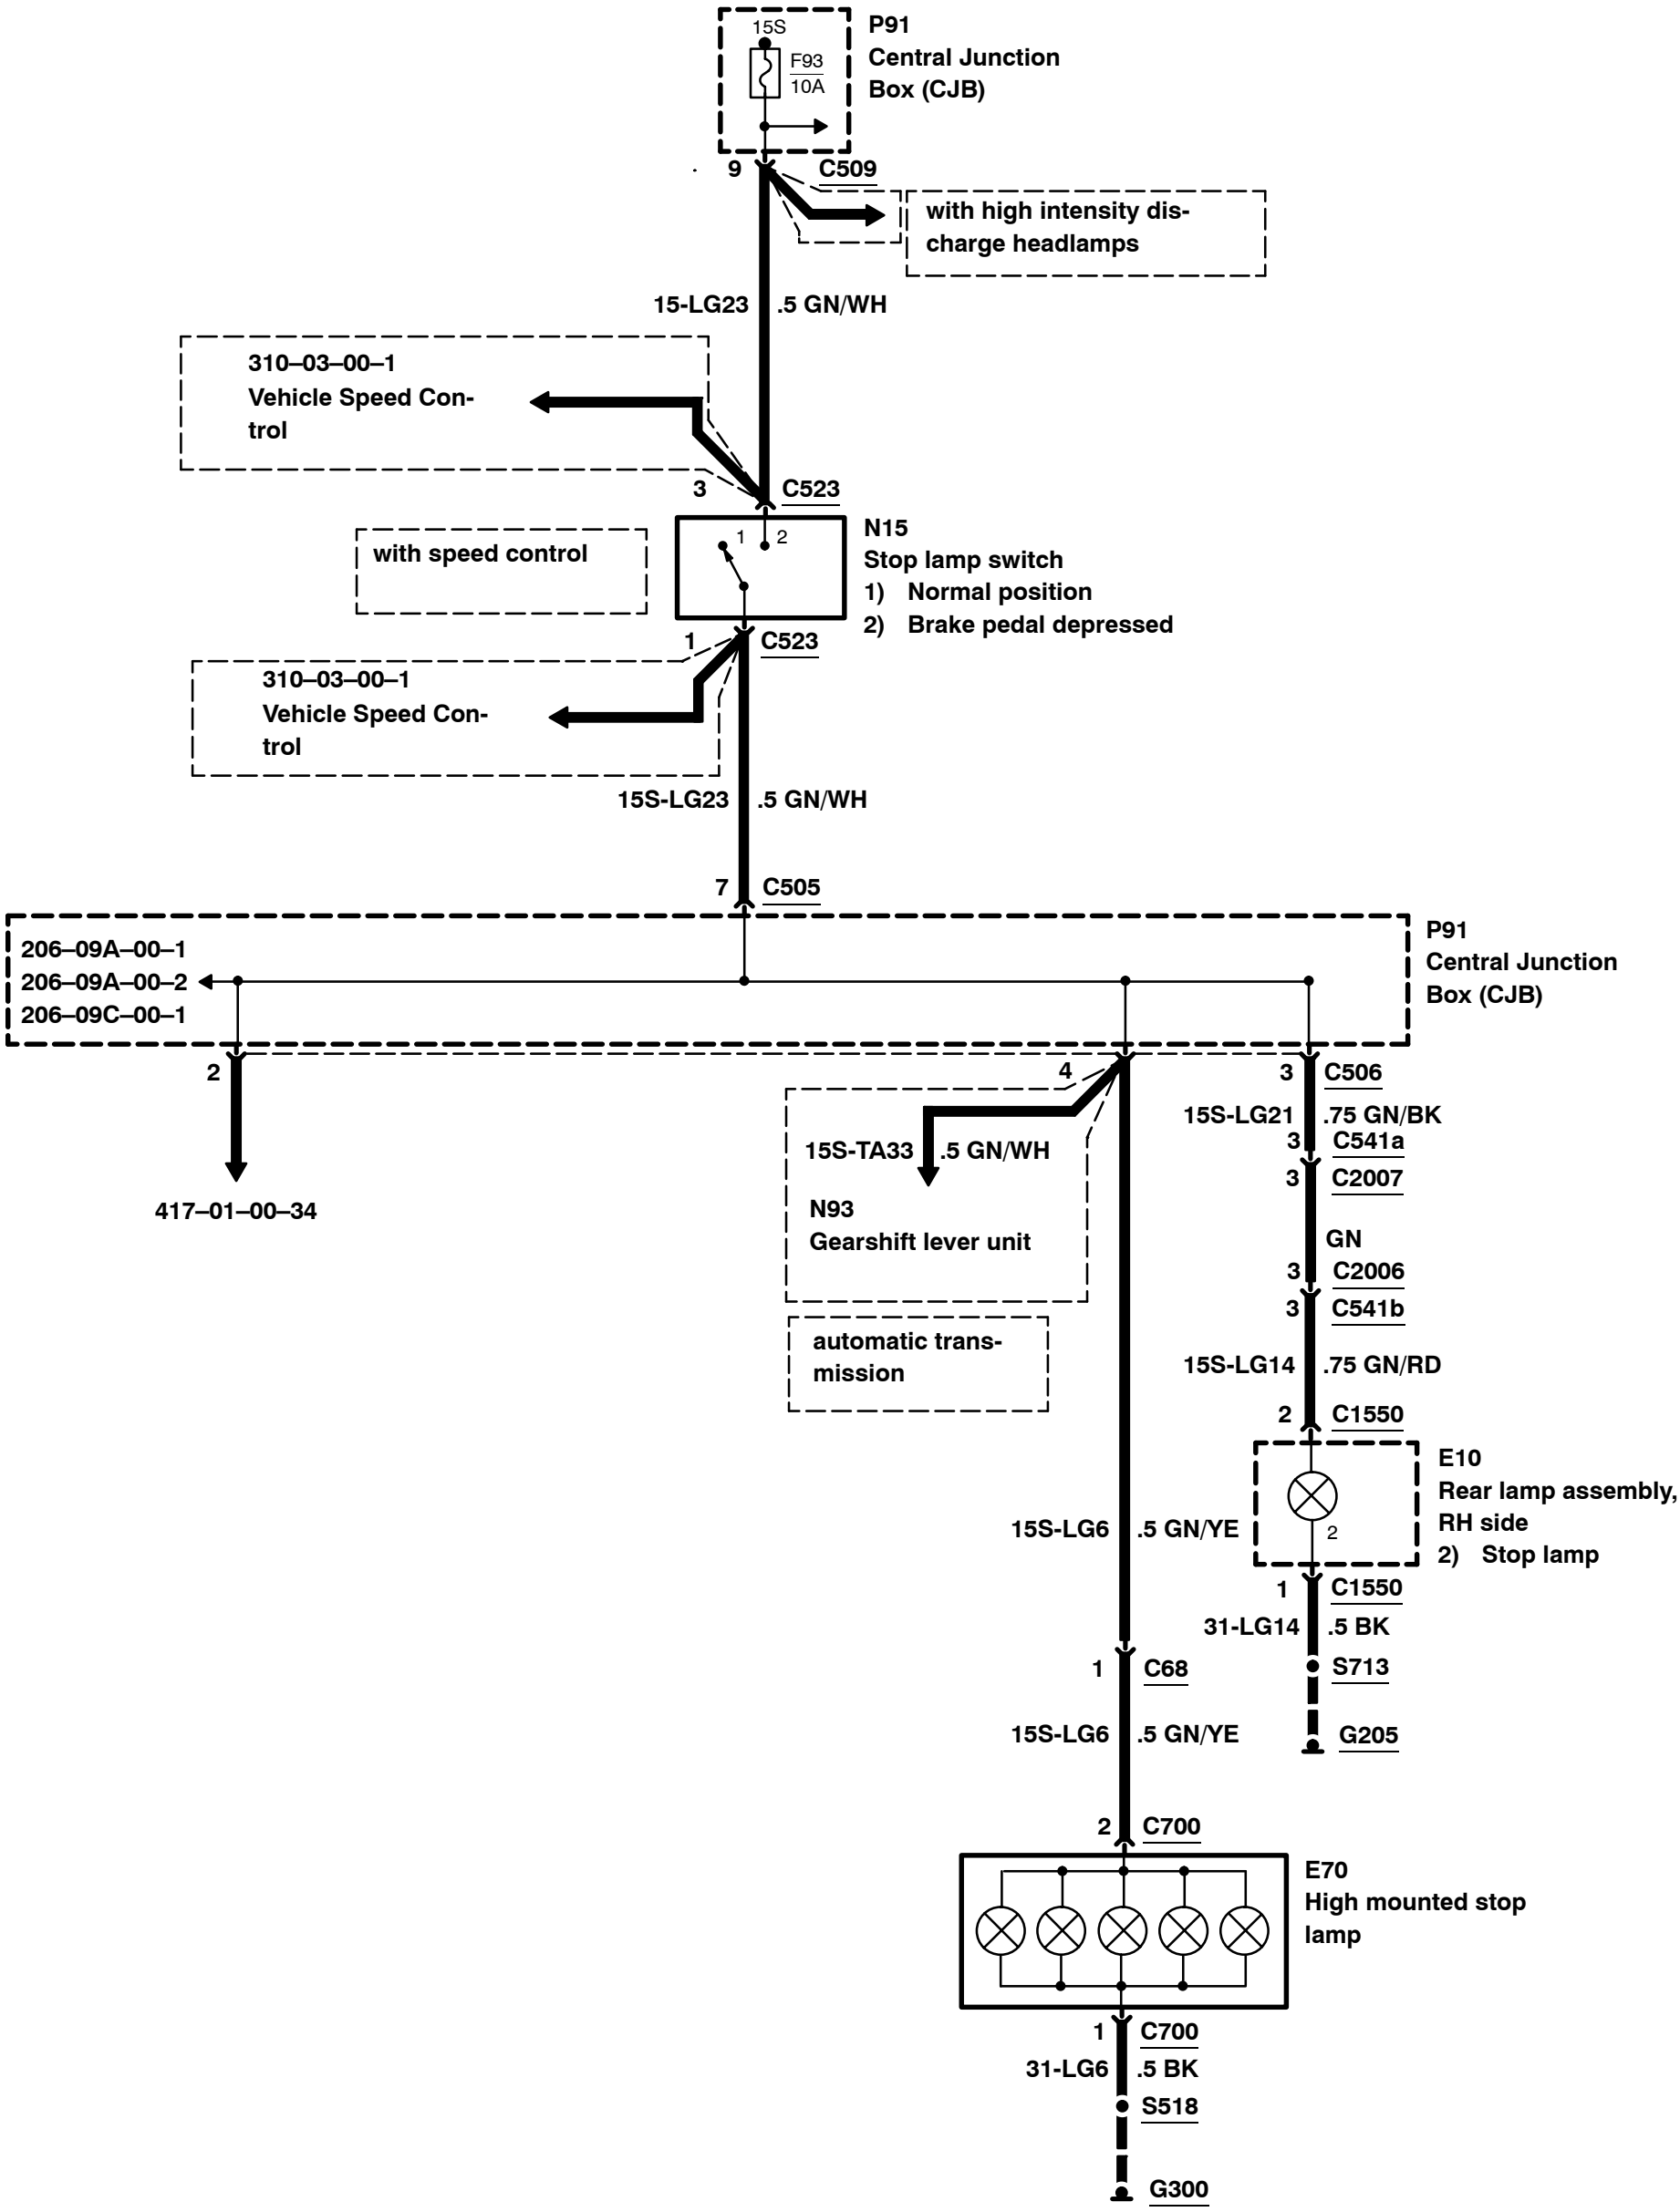


Exterior Lighting – Stop Lamps, with trailer socket, wagon, as of 01/2004

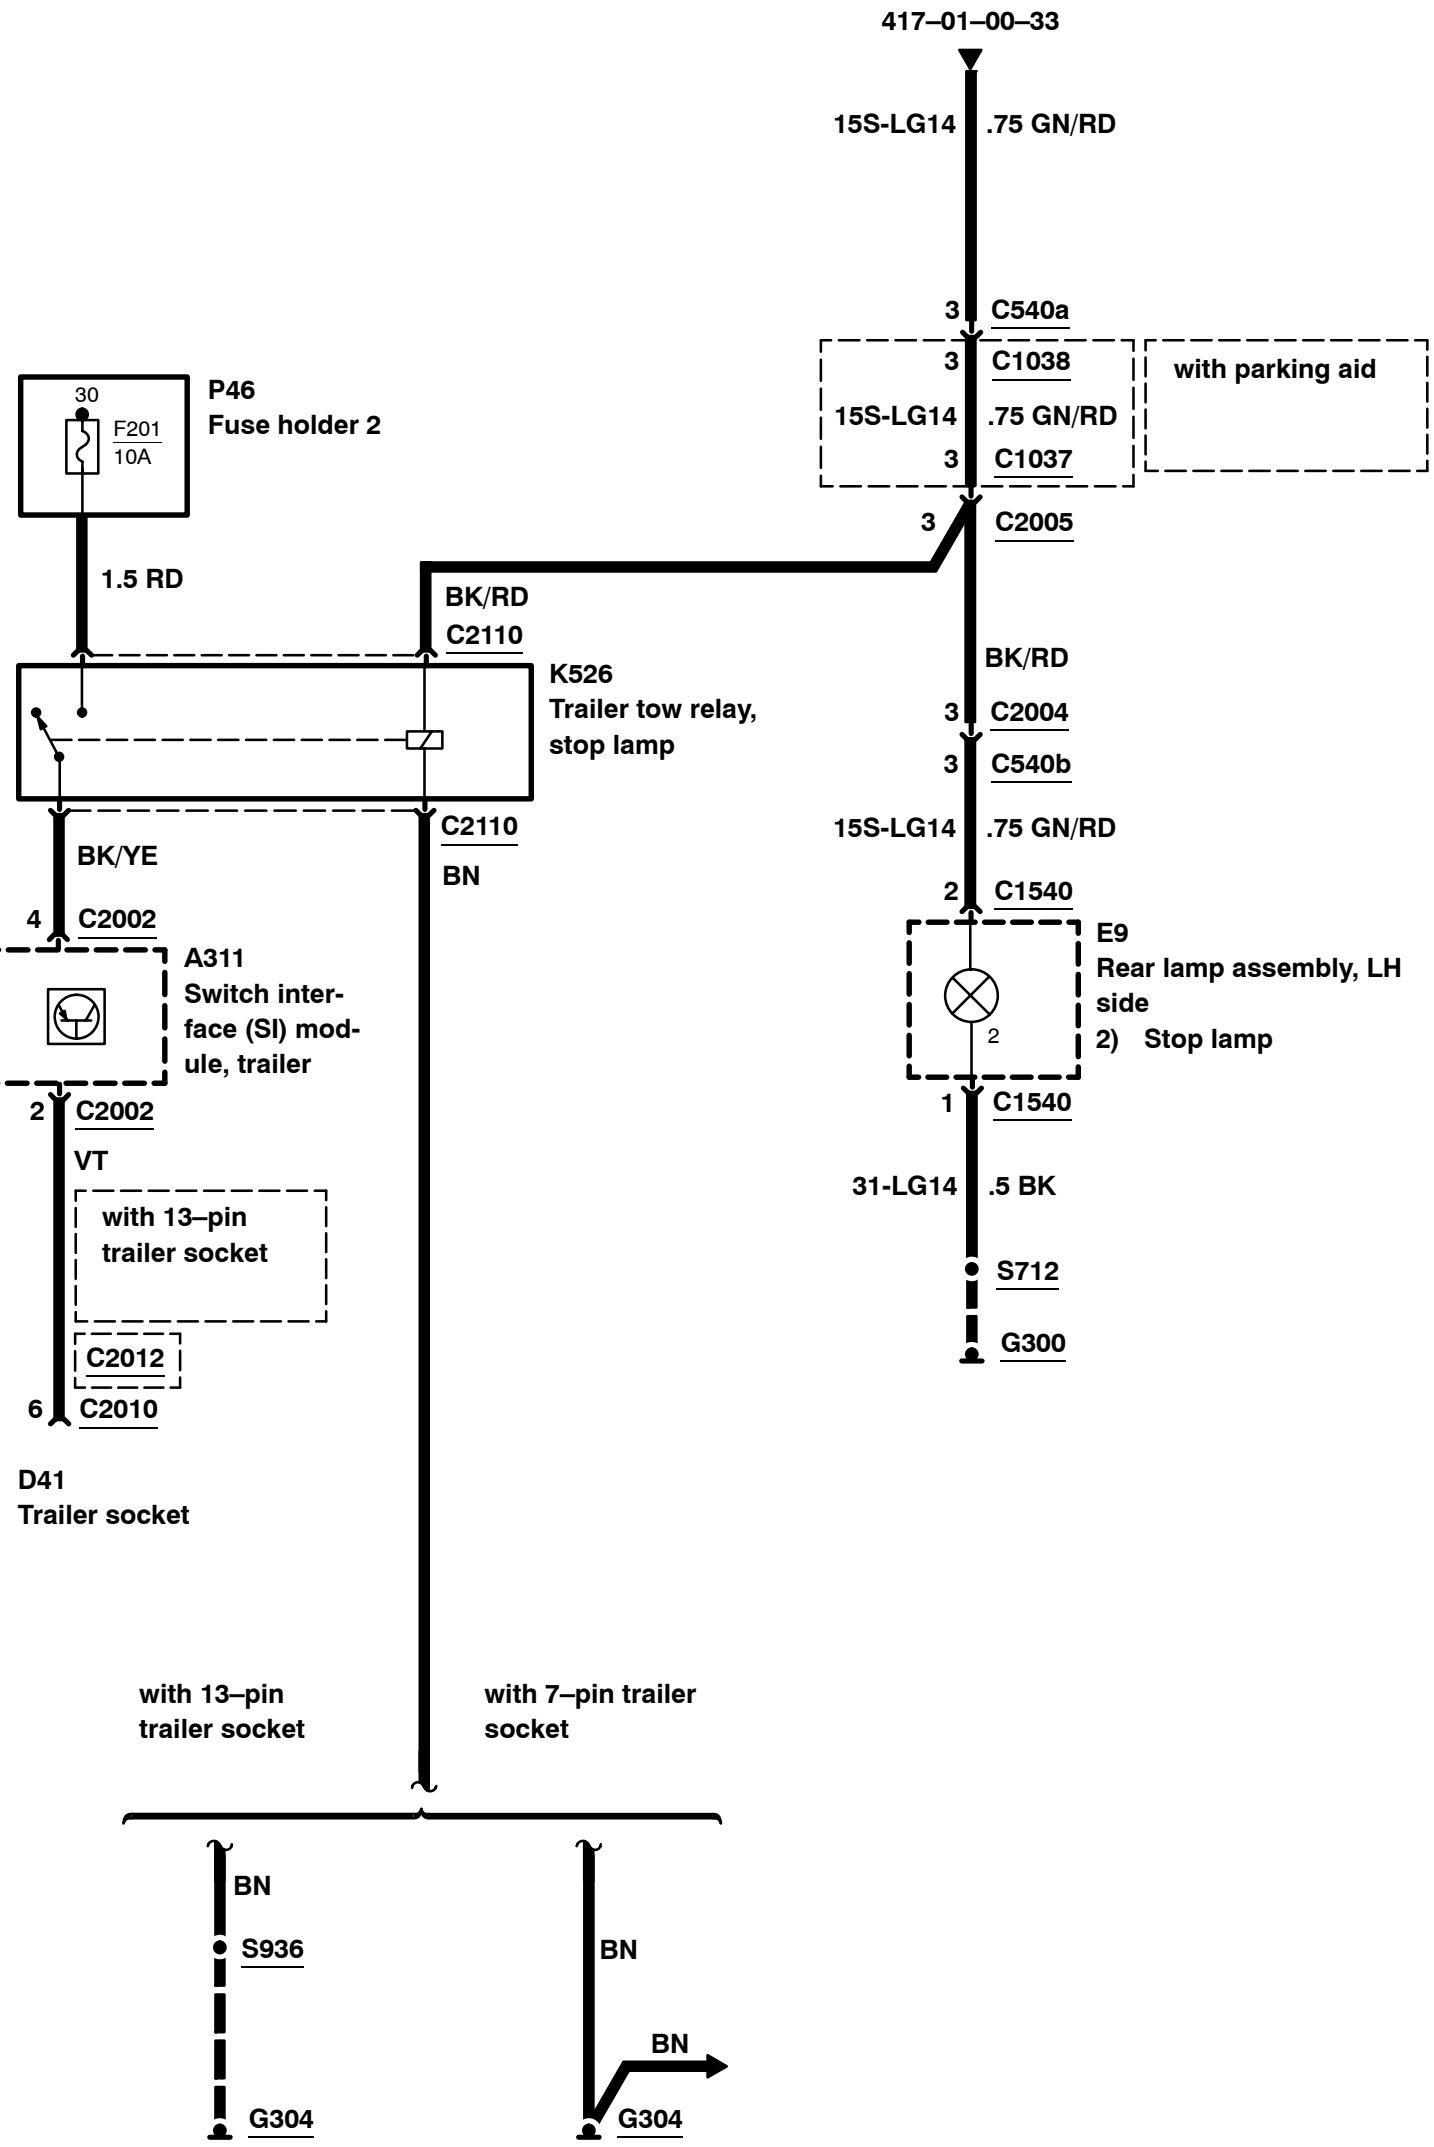


Exterior Lighting – Licence plate lamps

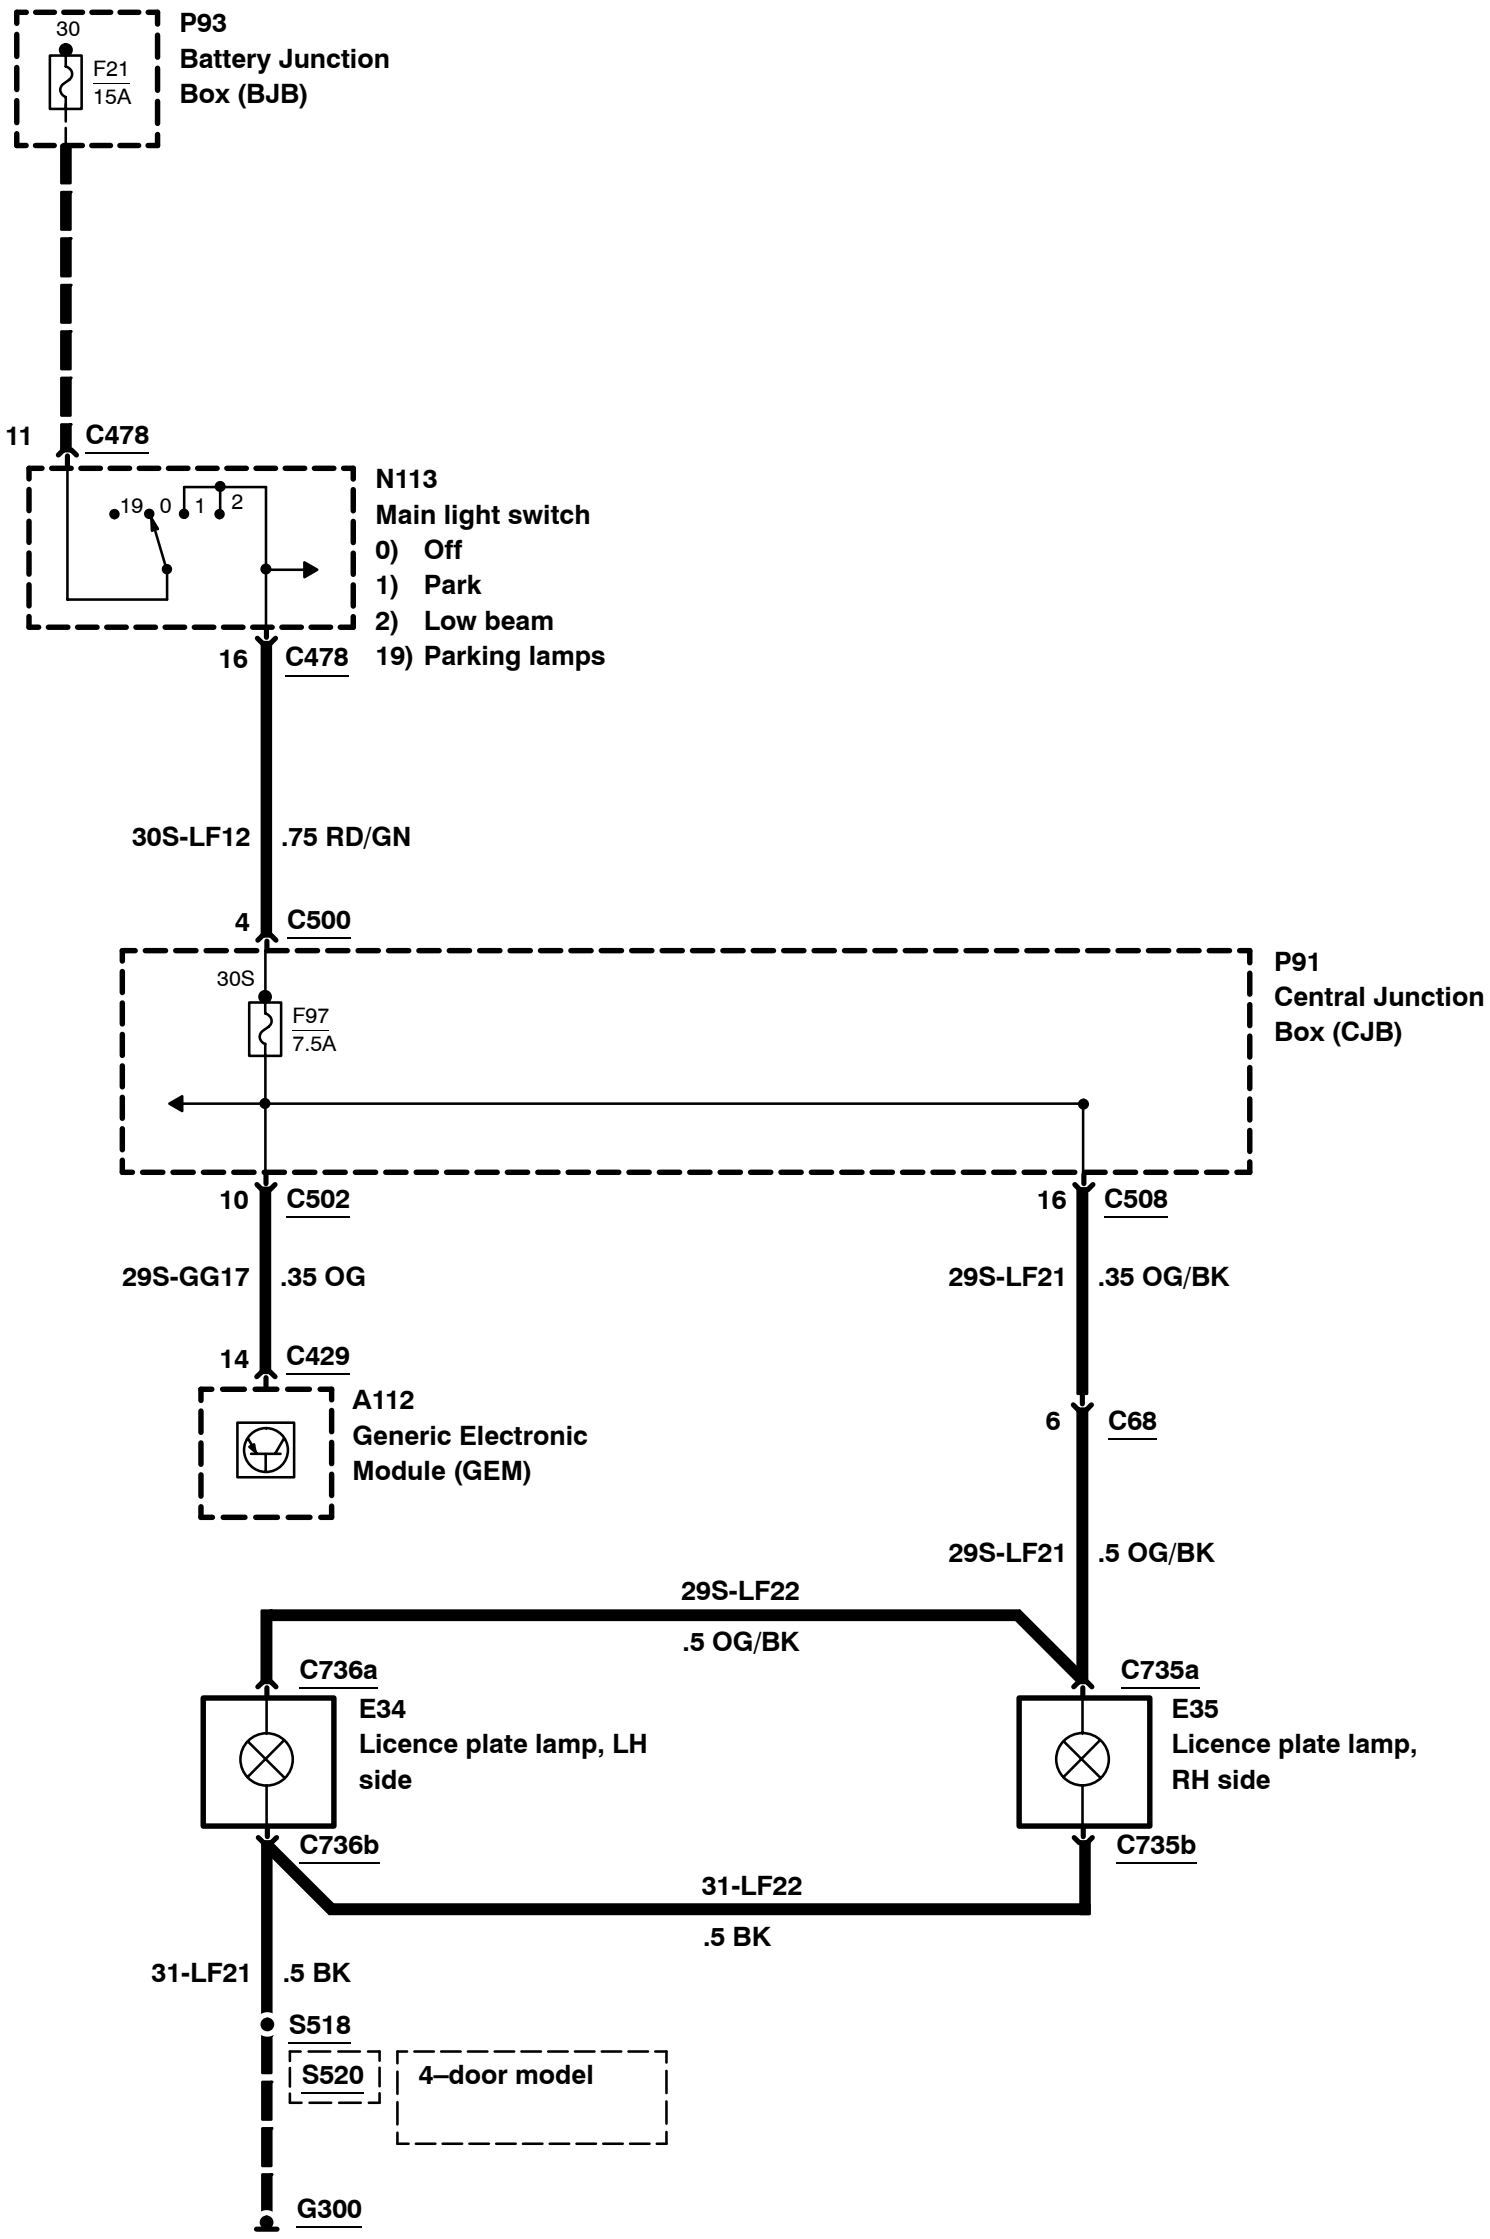


Exterior Lighting – Reversing lamps, without trailer socket, 4–door model/5–door model

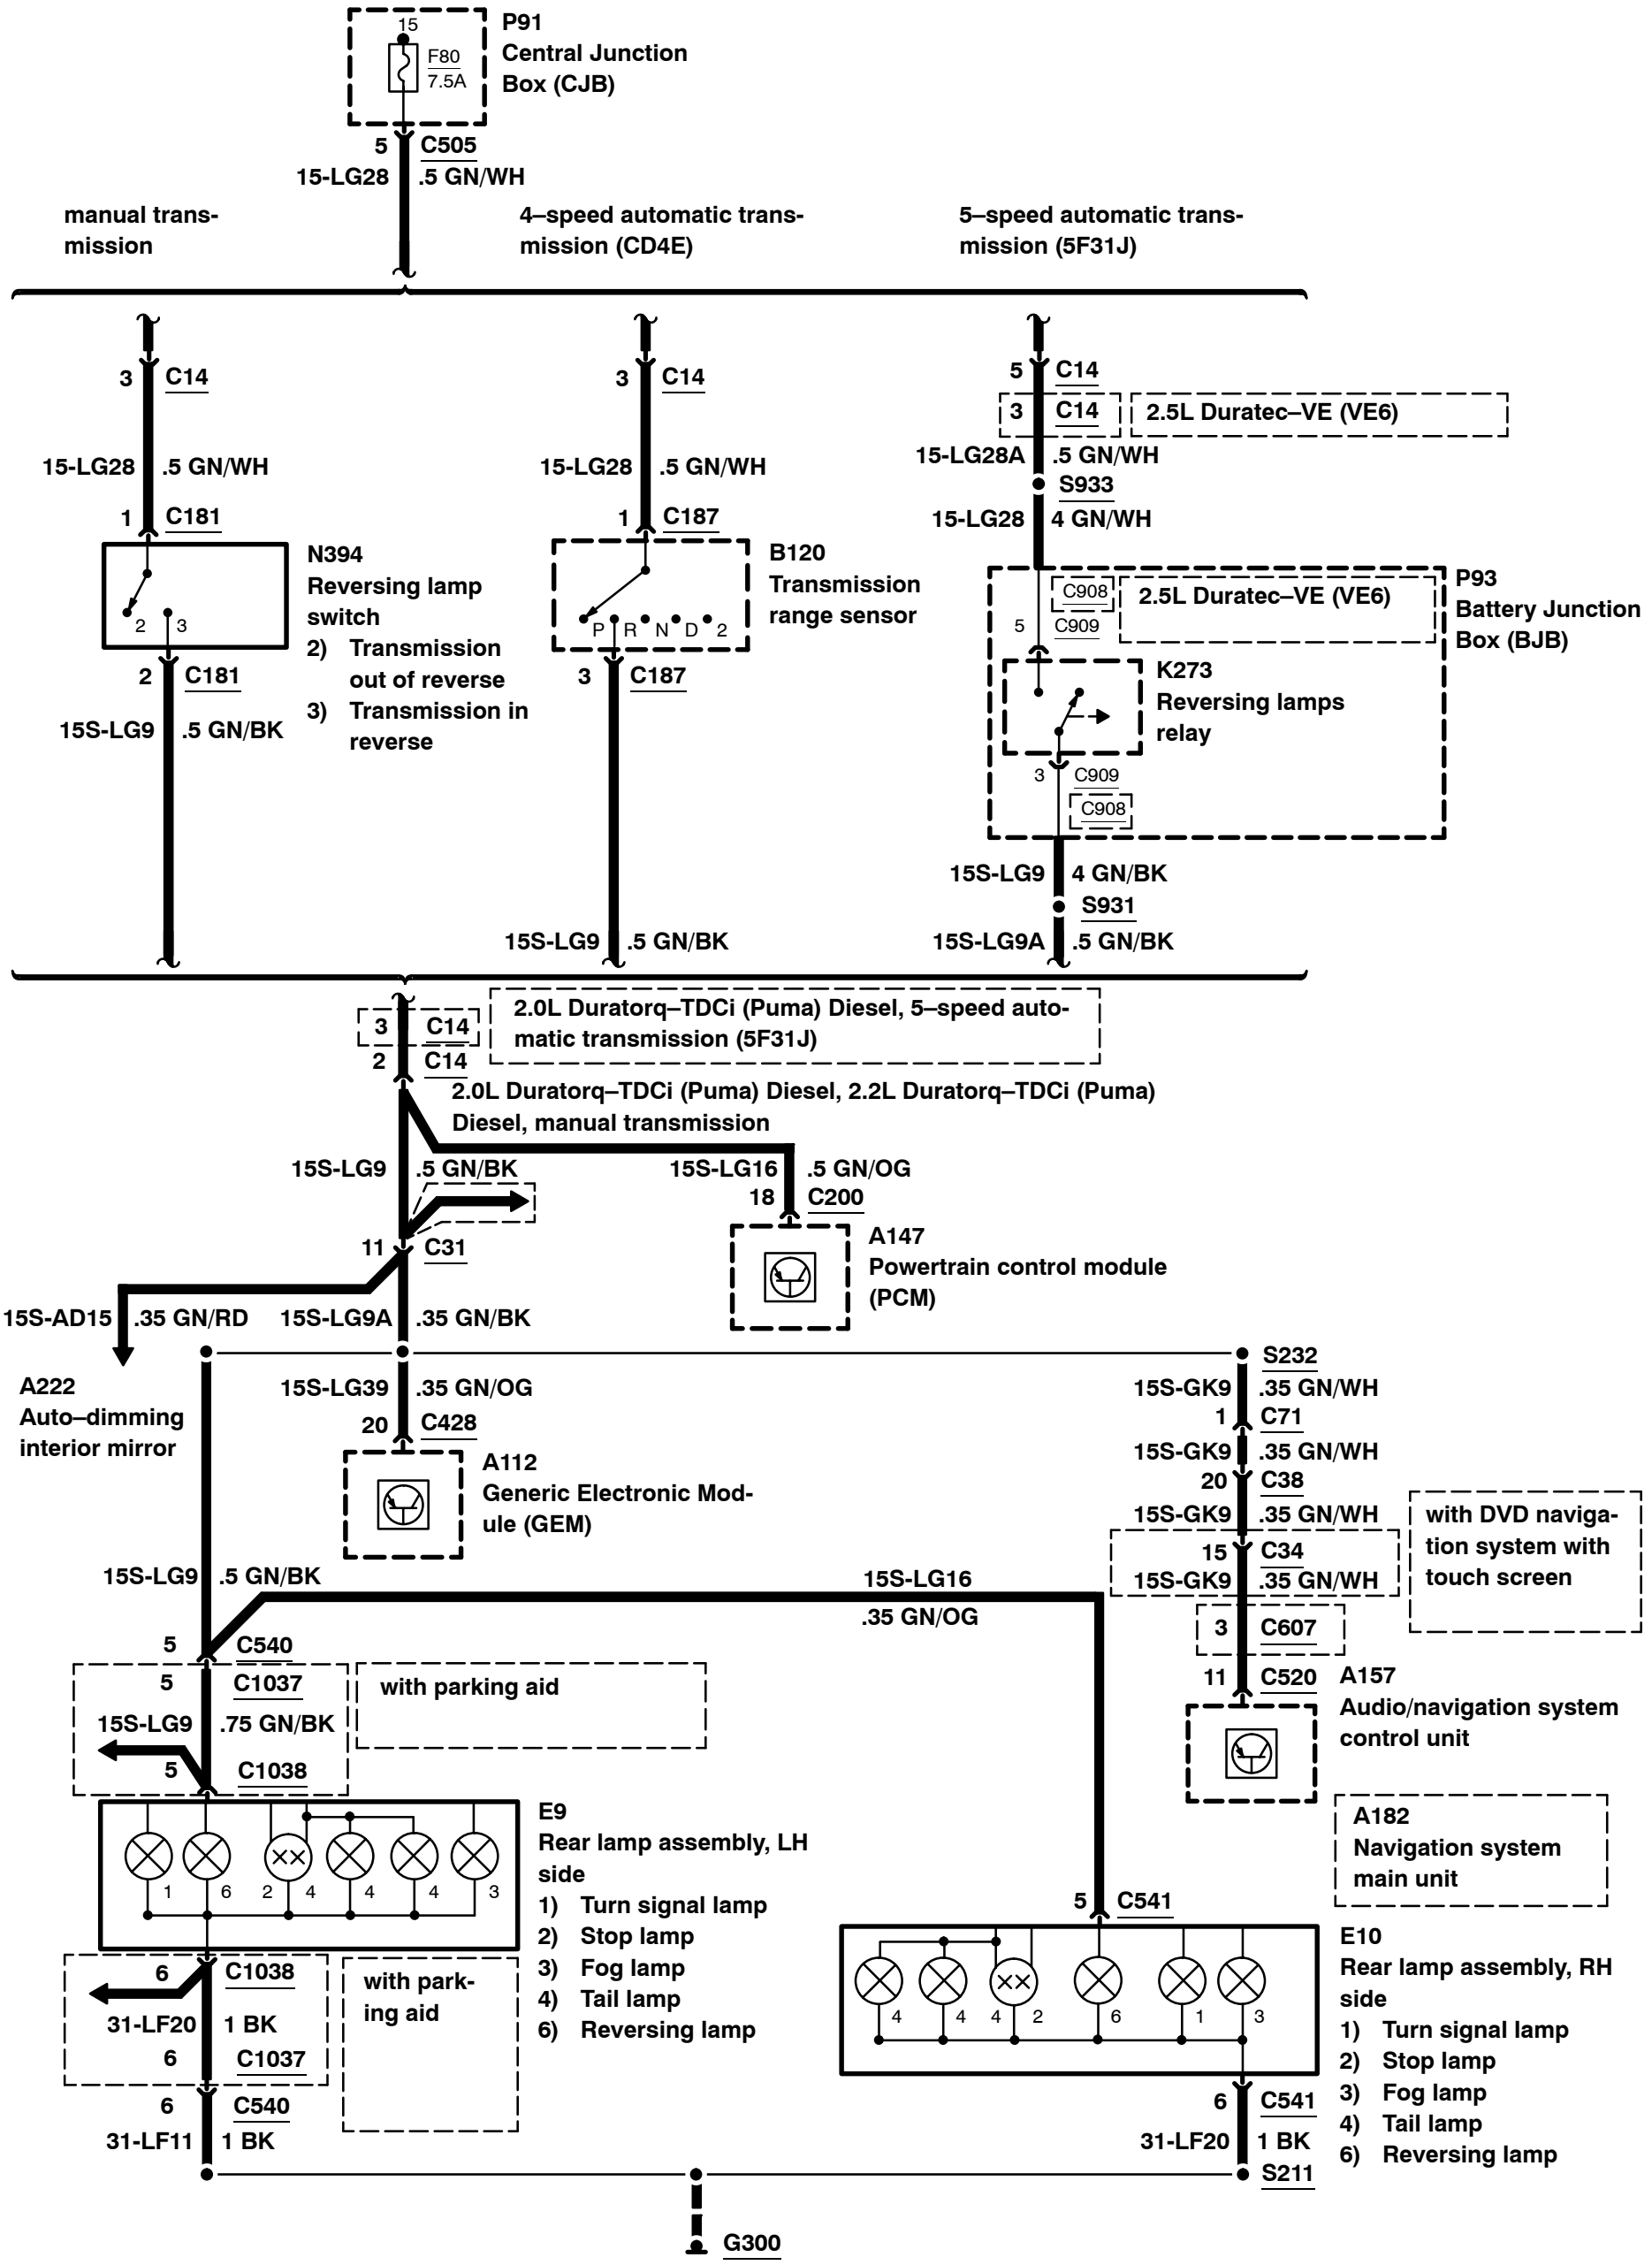


Exterior Lighting – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004

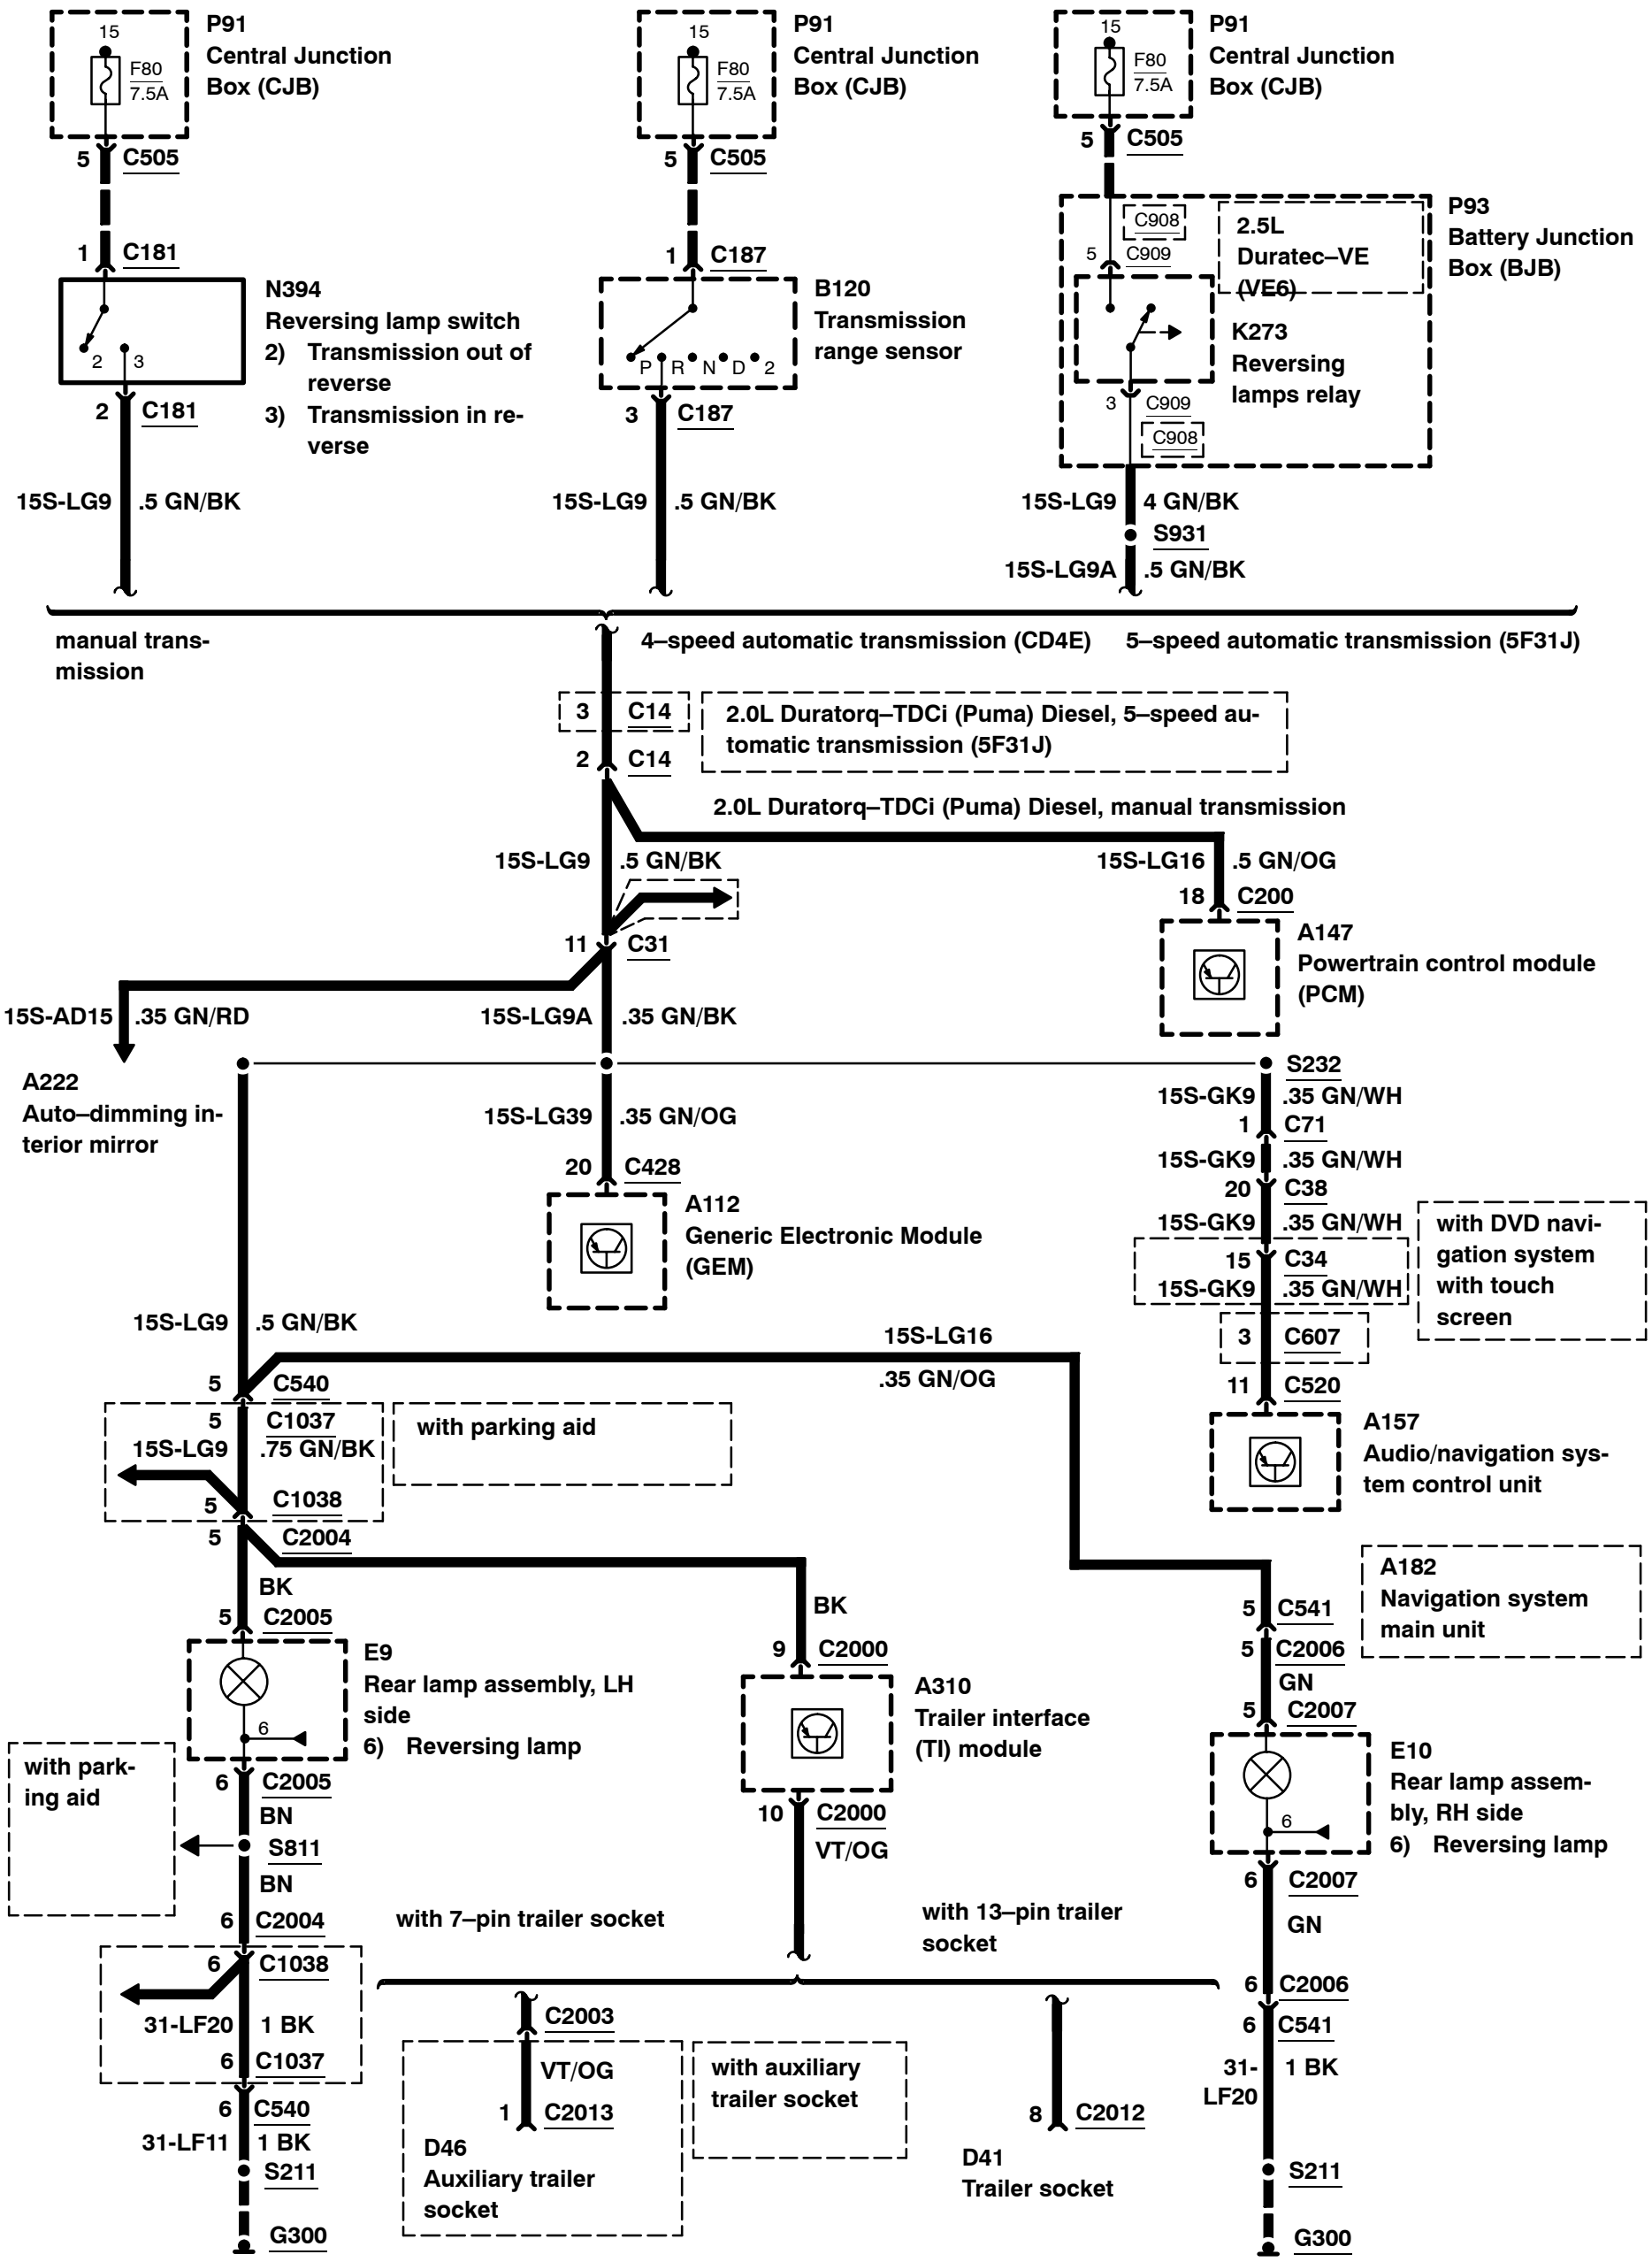


Exterior Lighting – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004

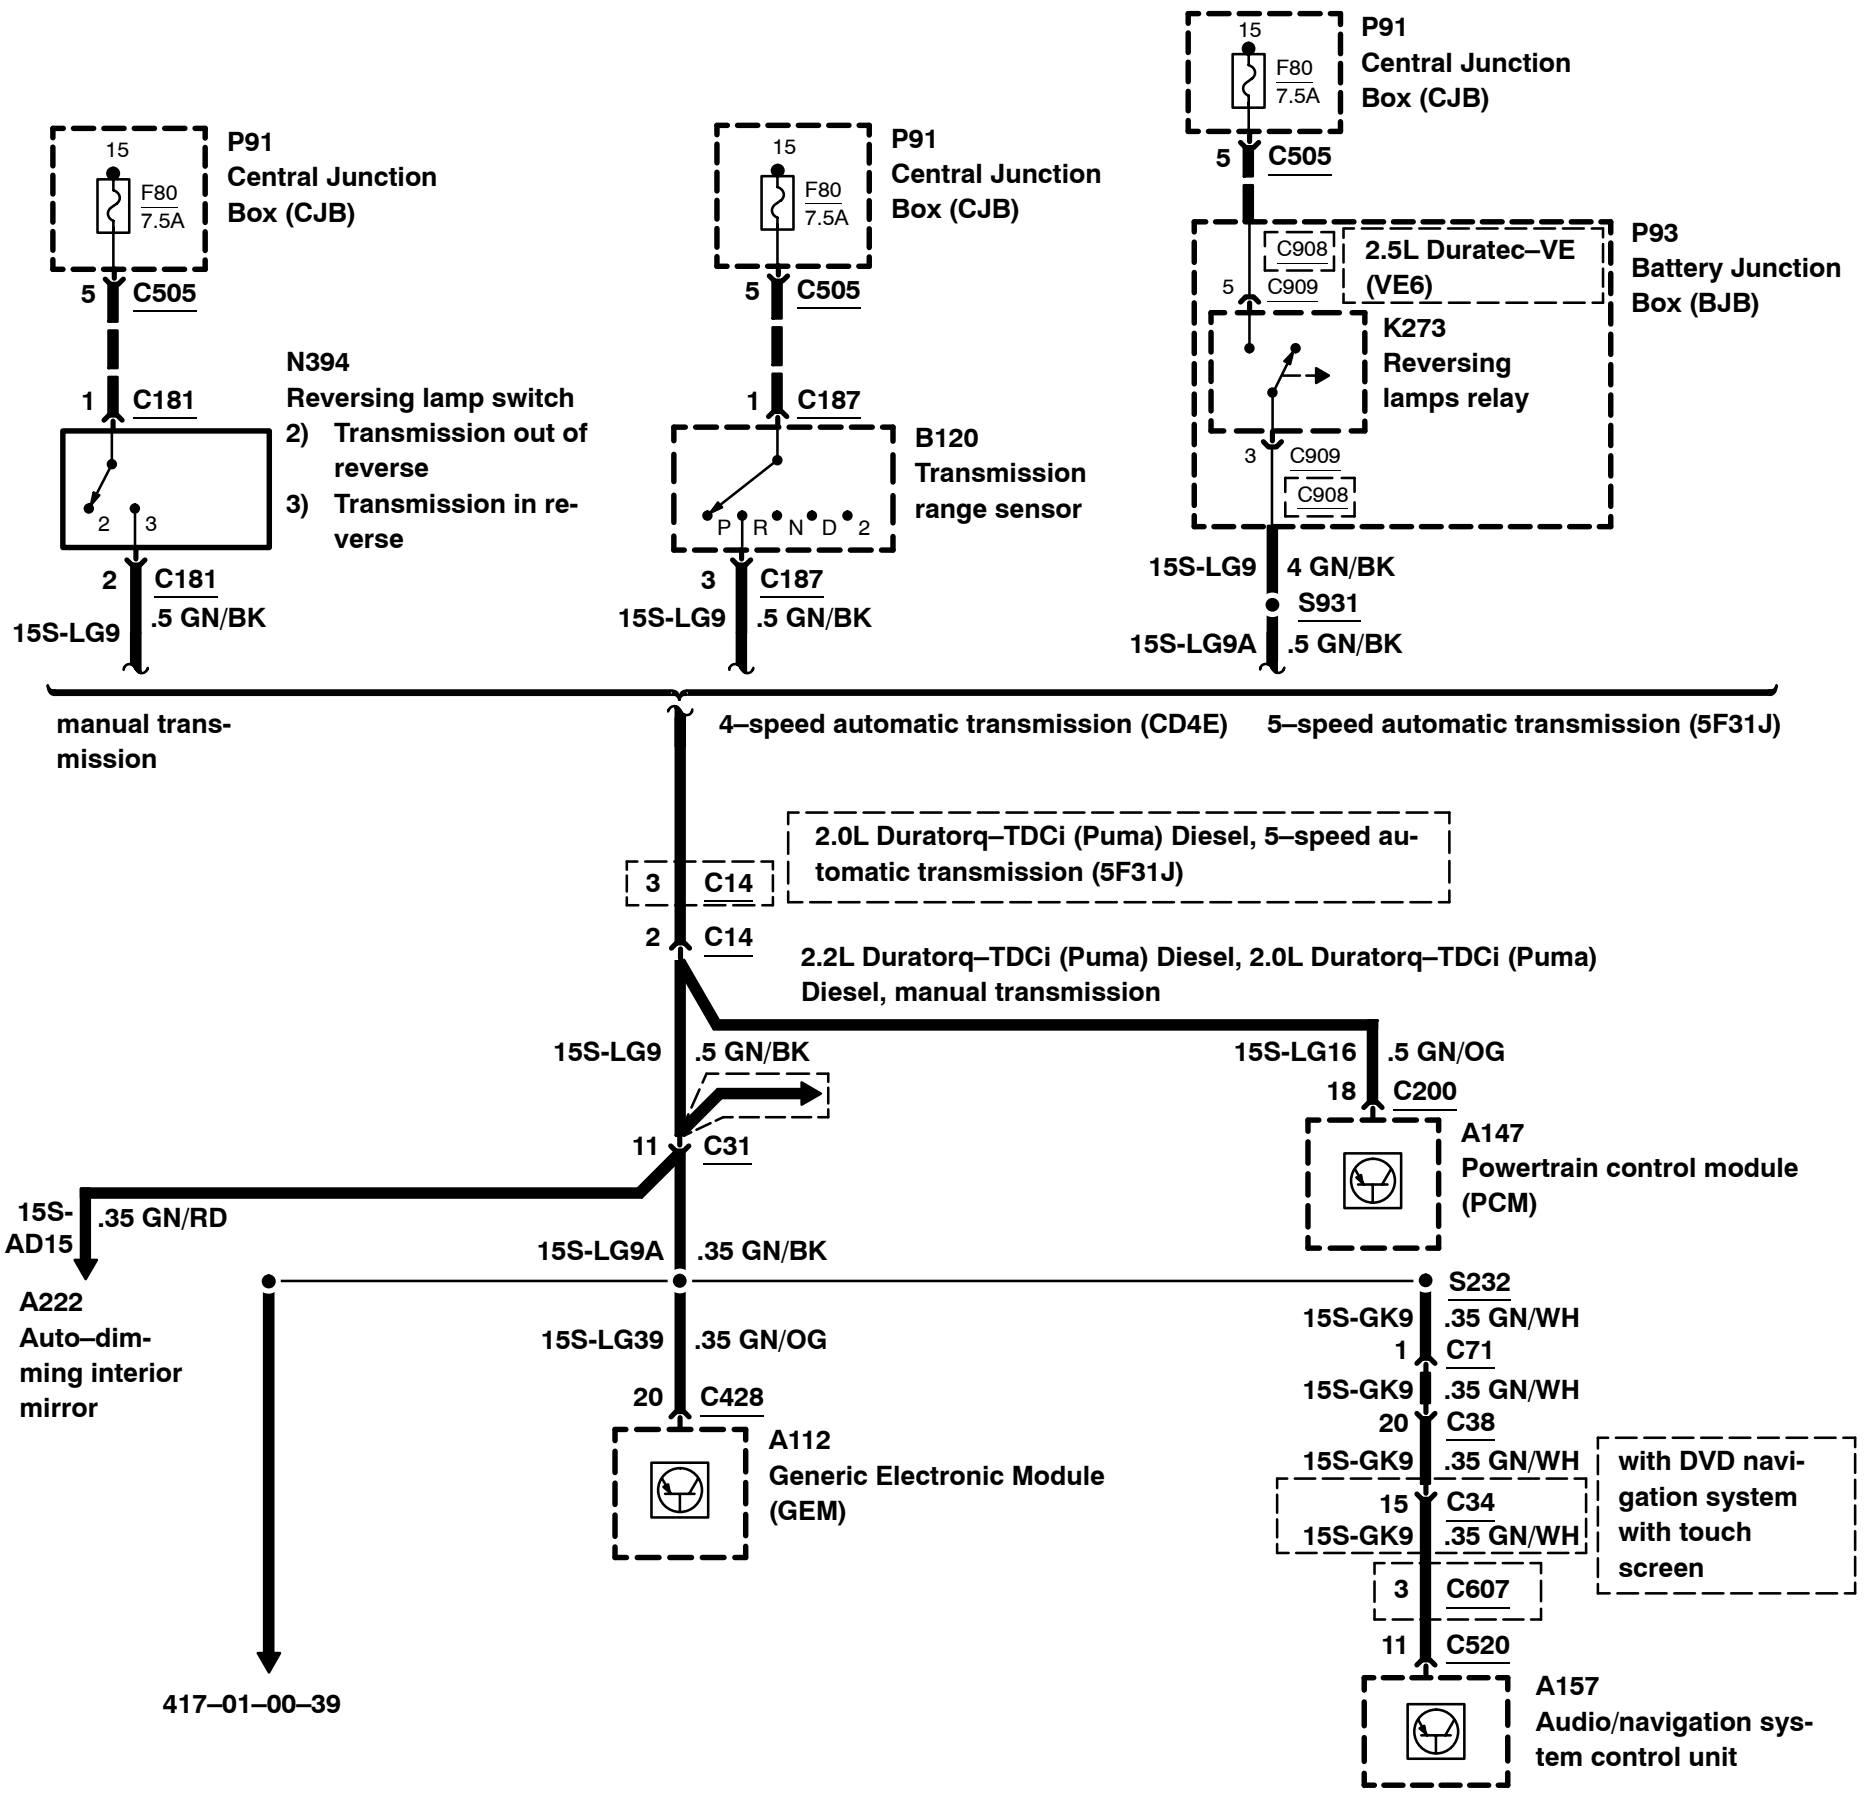


Exterior Lighting – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004

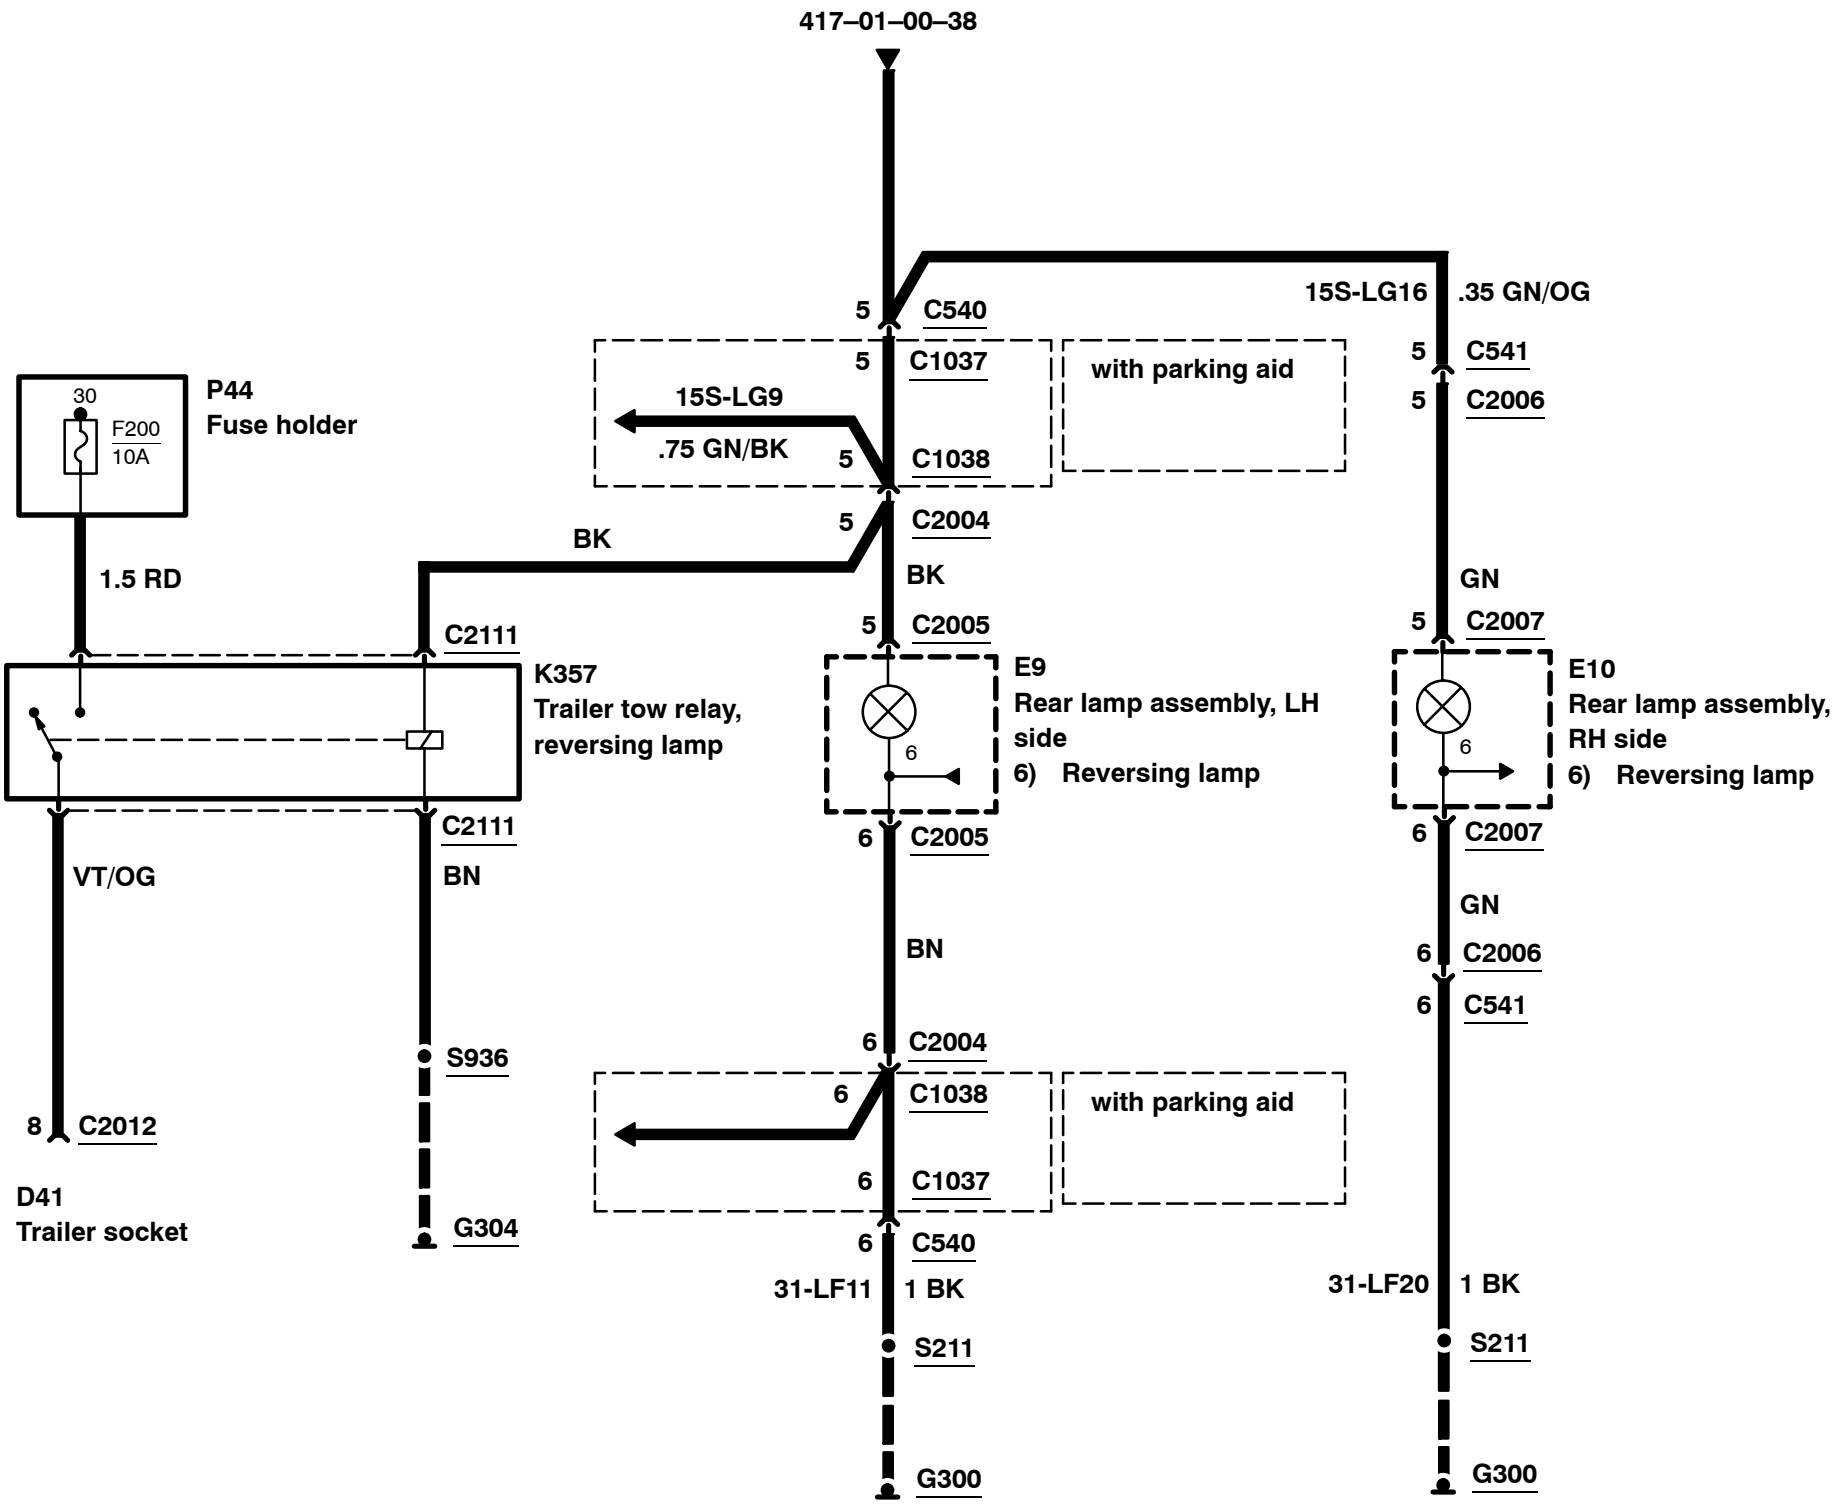


Exterior Lighting – Reversing lamps, without trailer socket, wagon

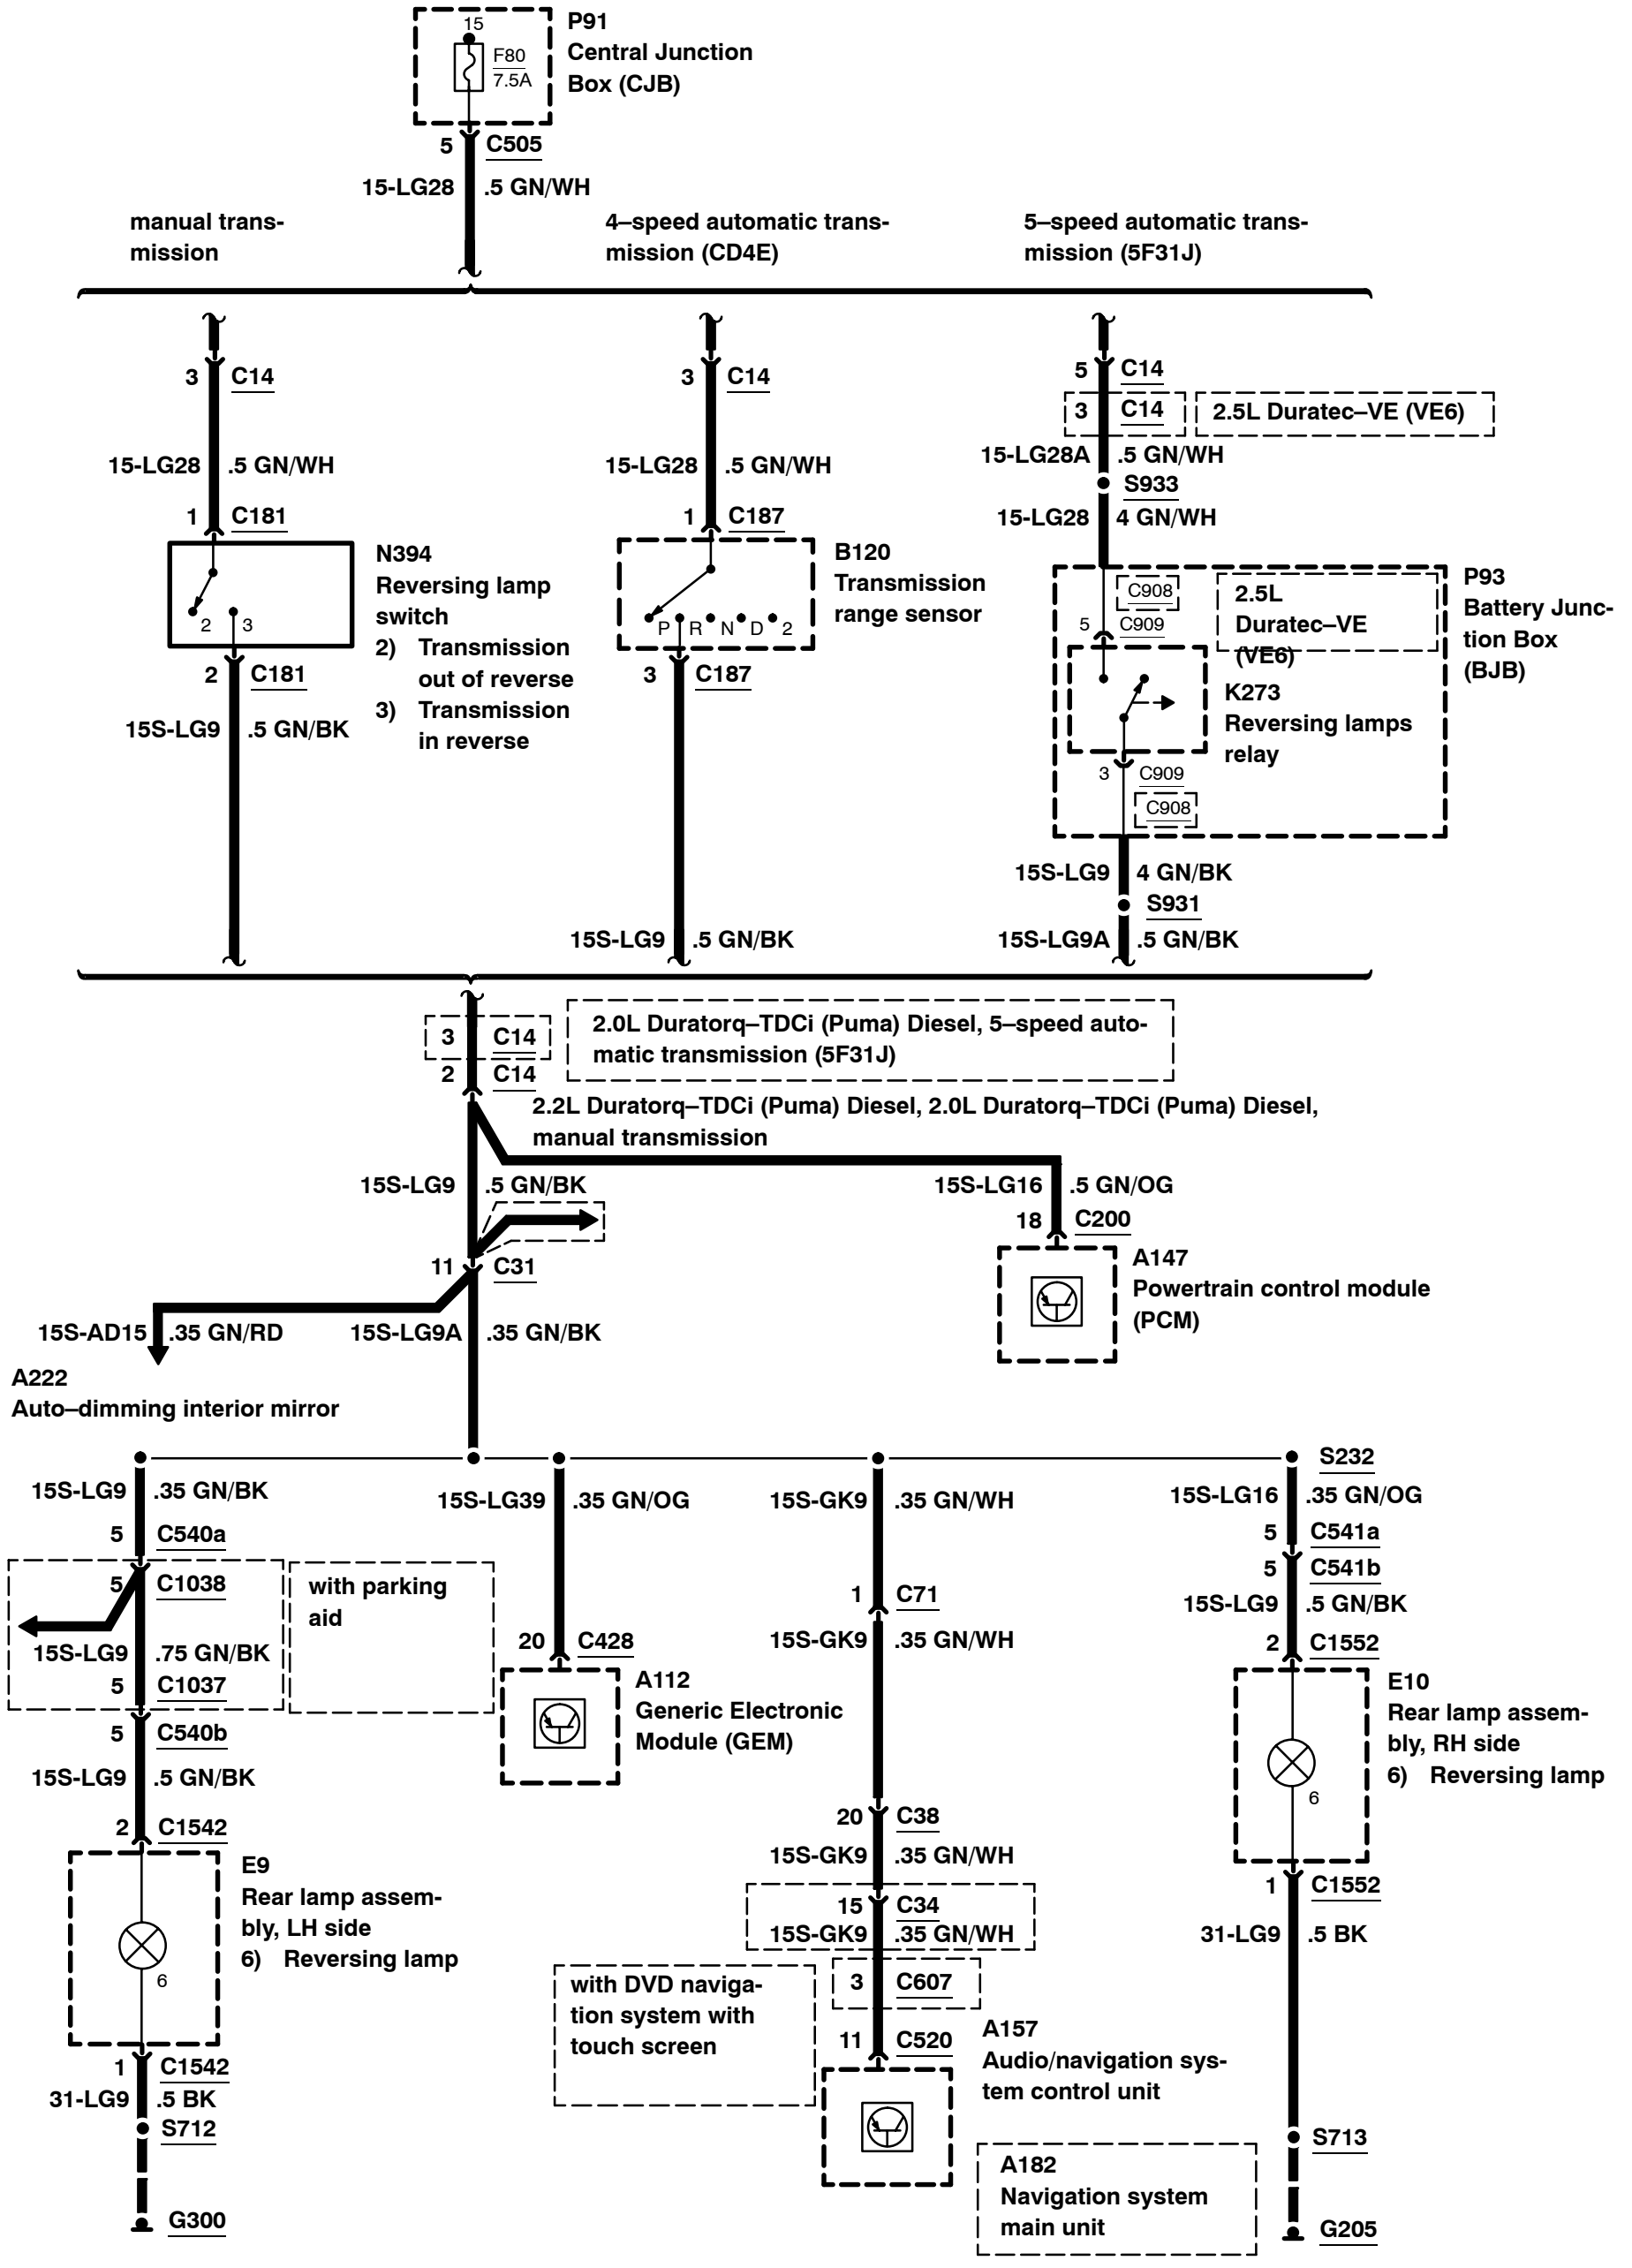


Exterior Lighting – Reversing lamps, with trailer socket, wagon, before 01/2004

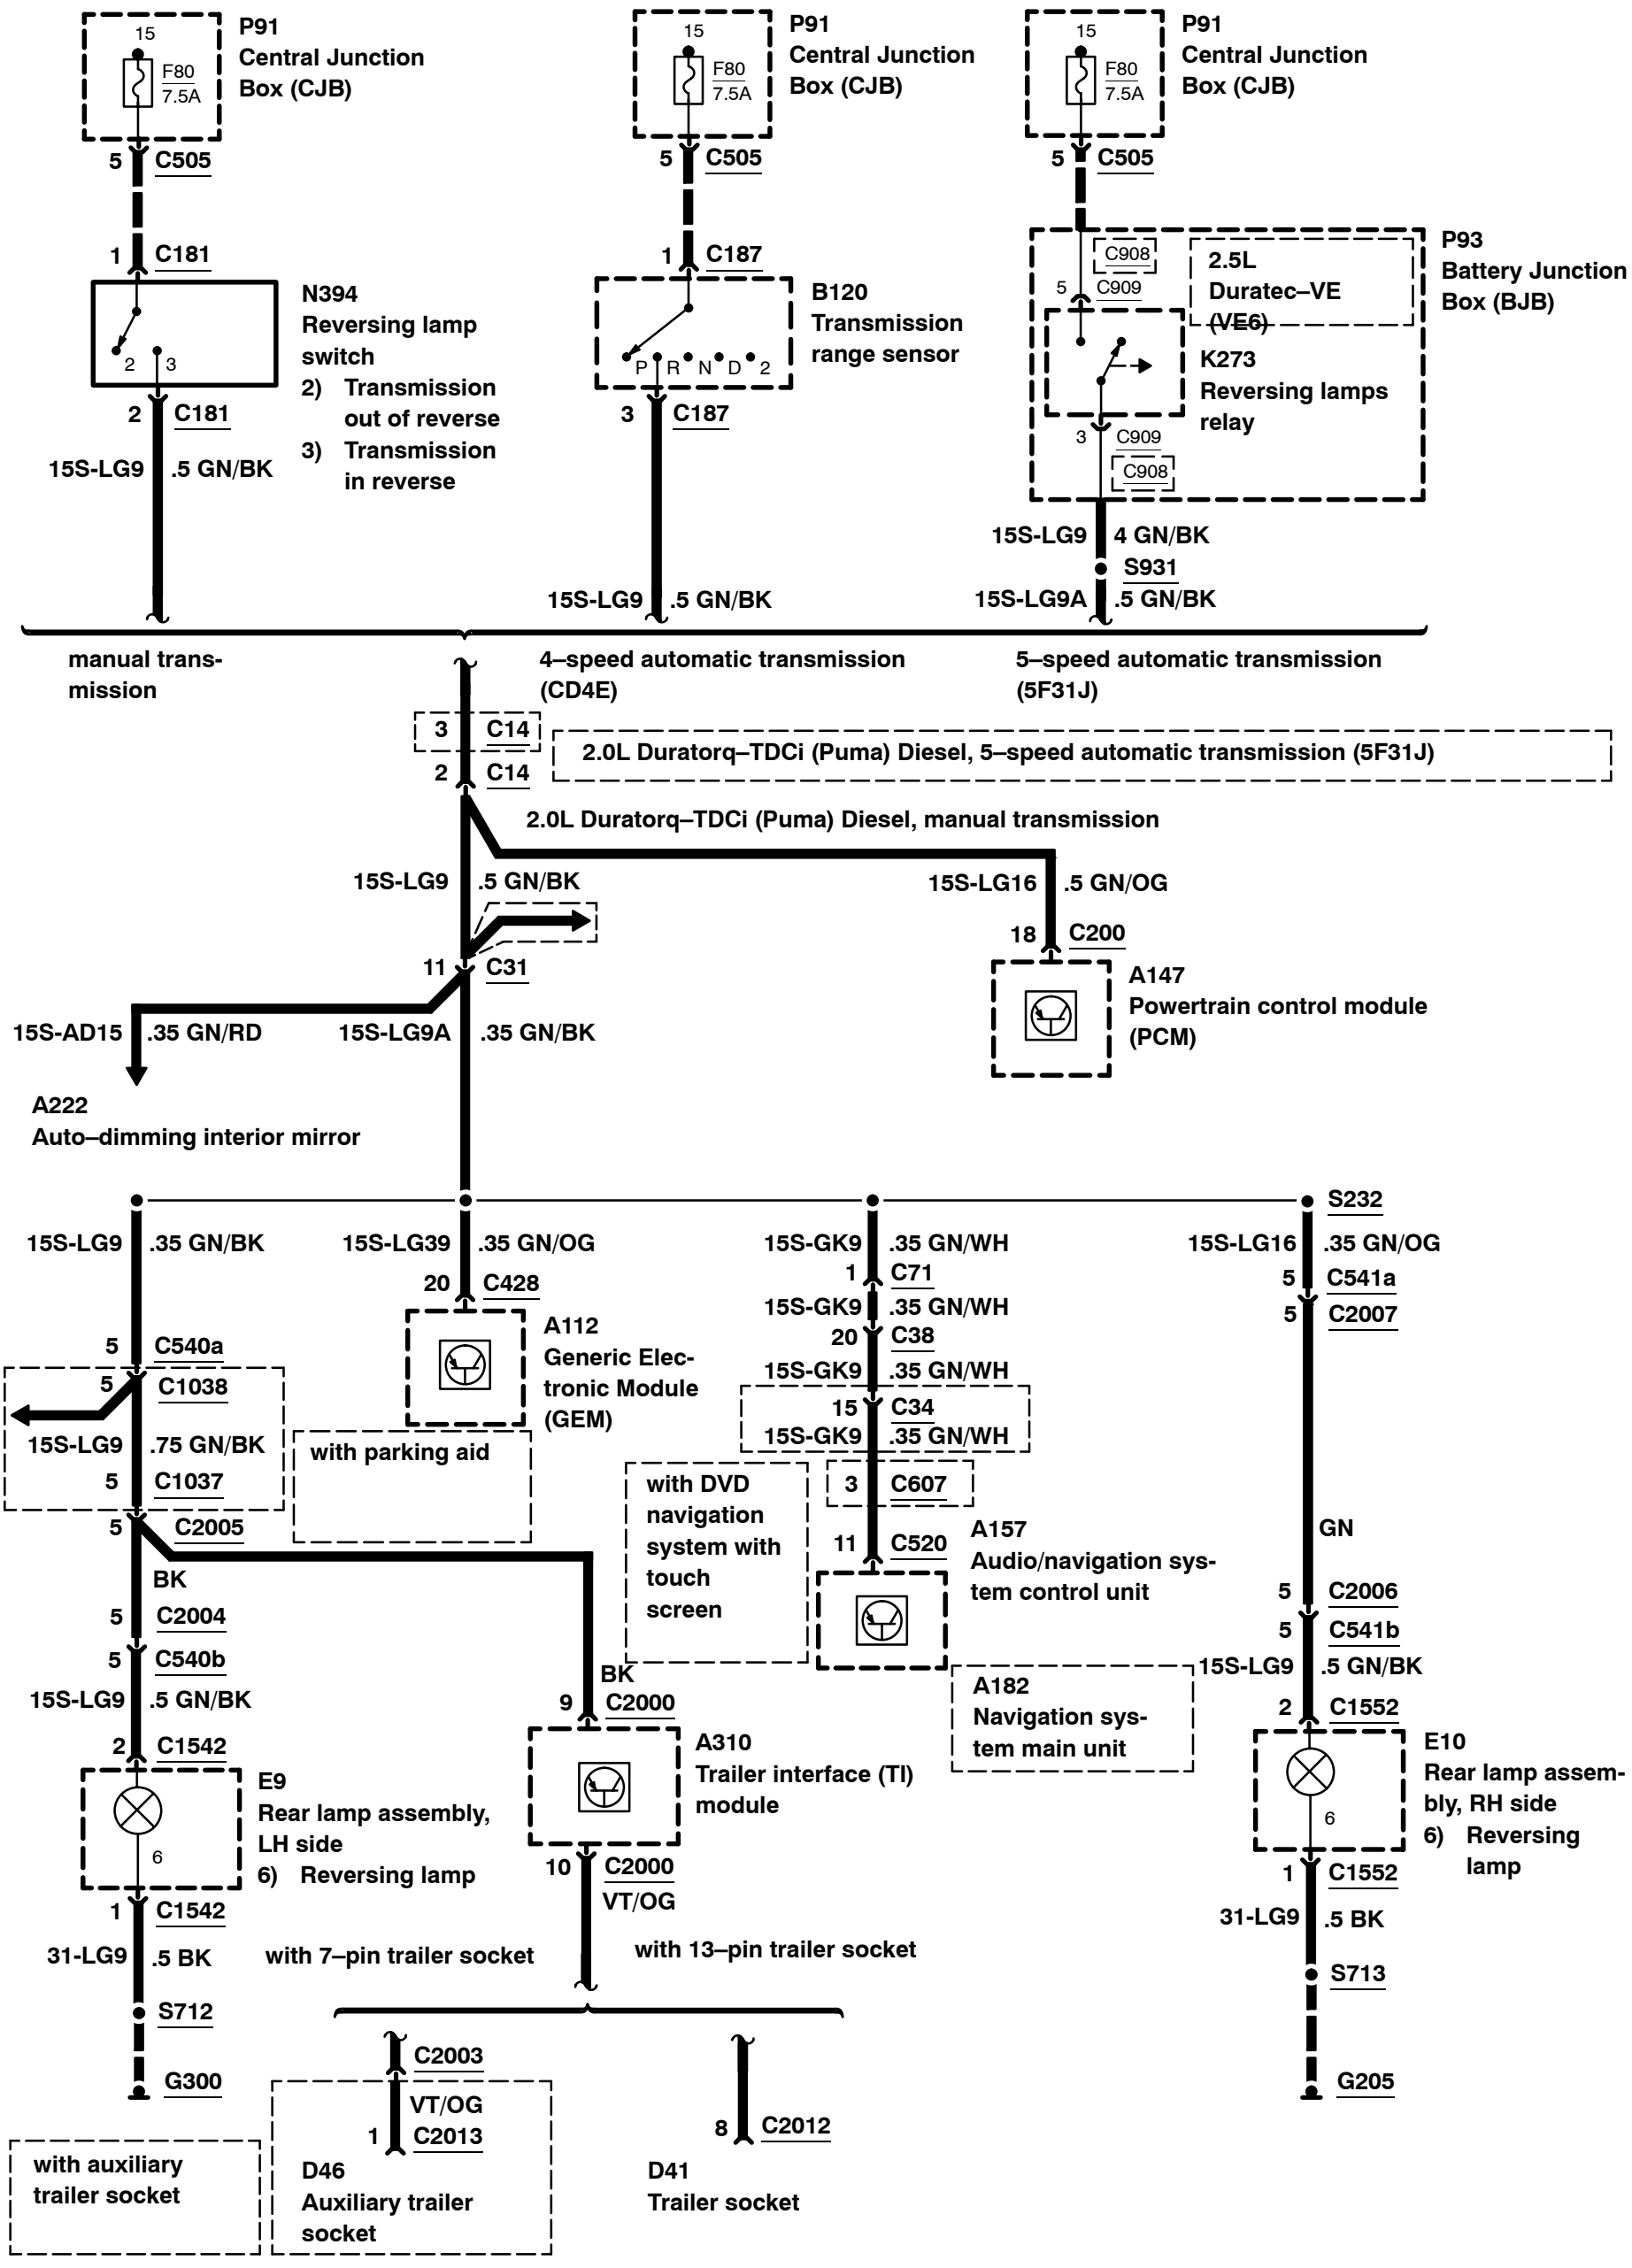


Exterior Lighting – Reversing lamps, with trailer socket, wagon, as of 01/2004

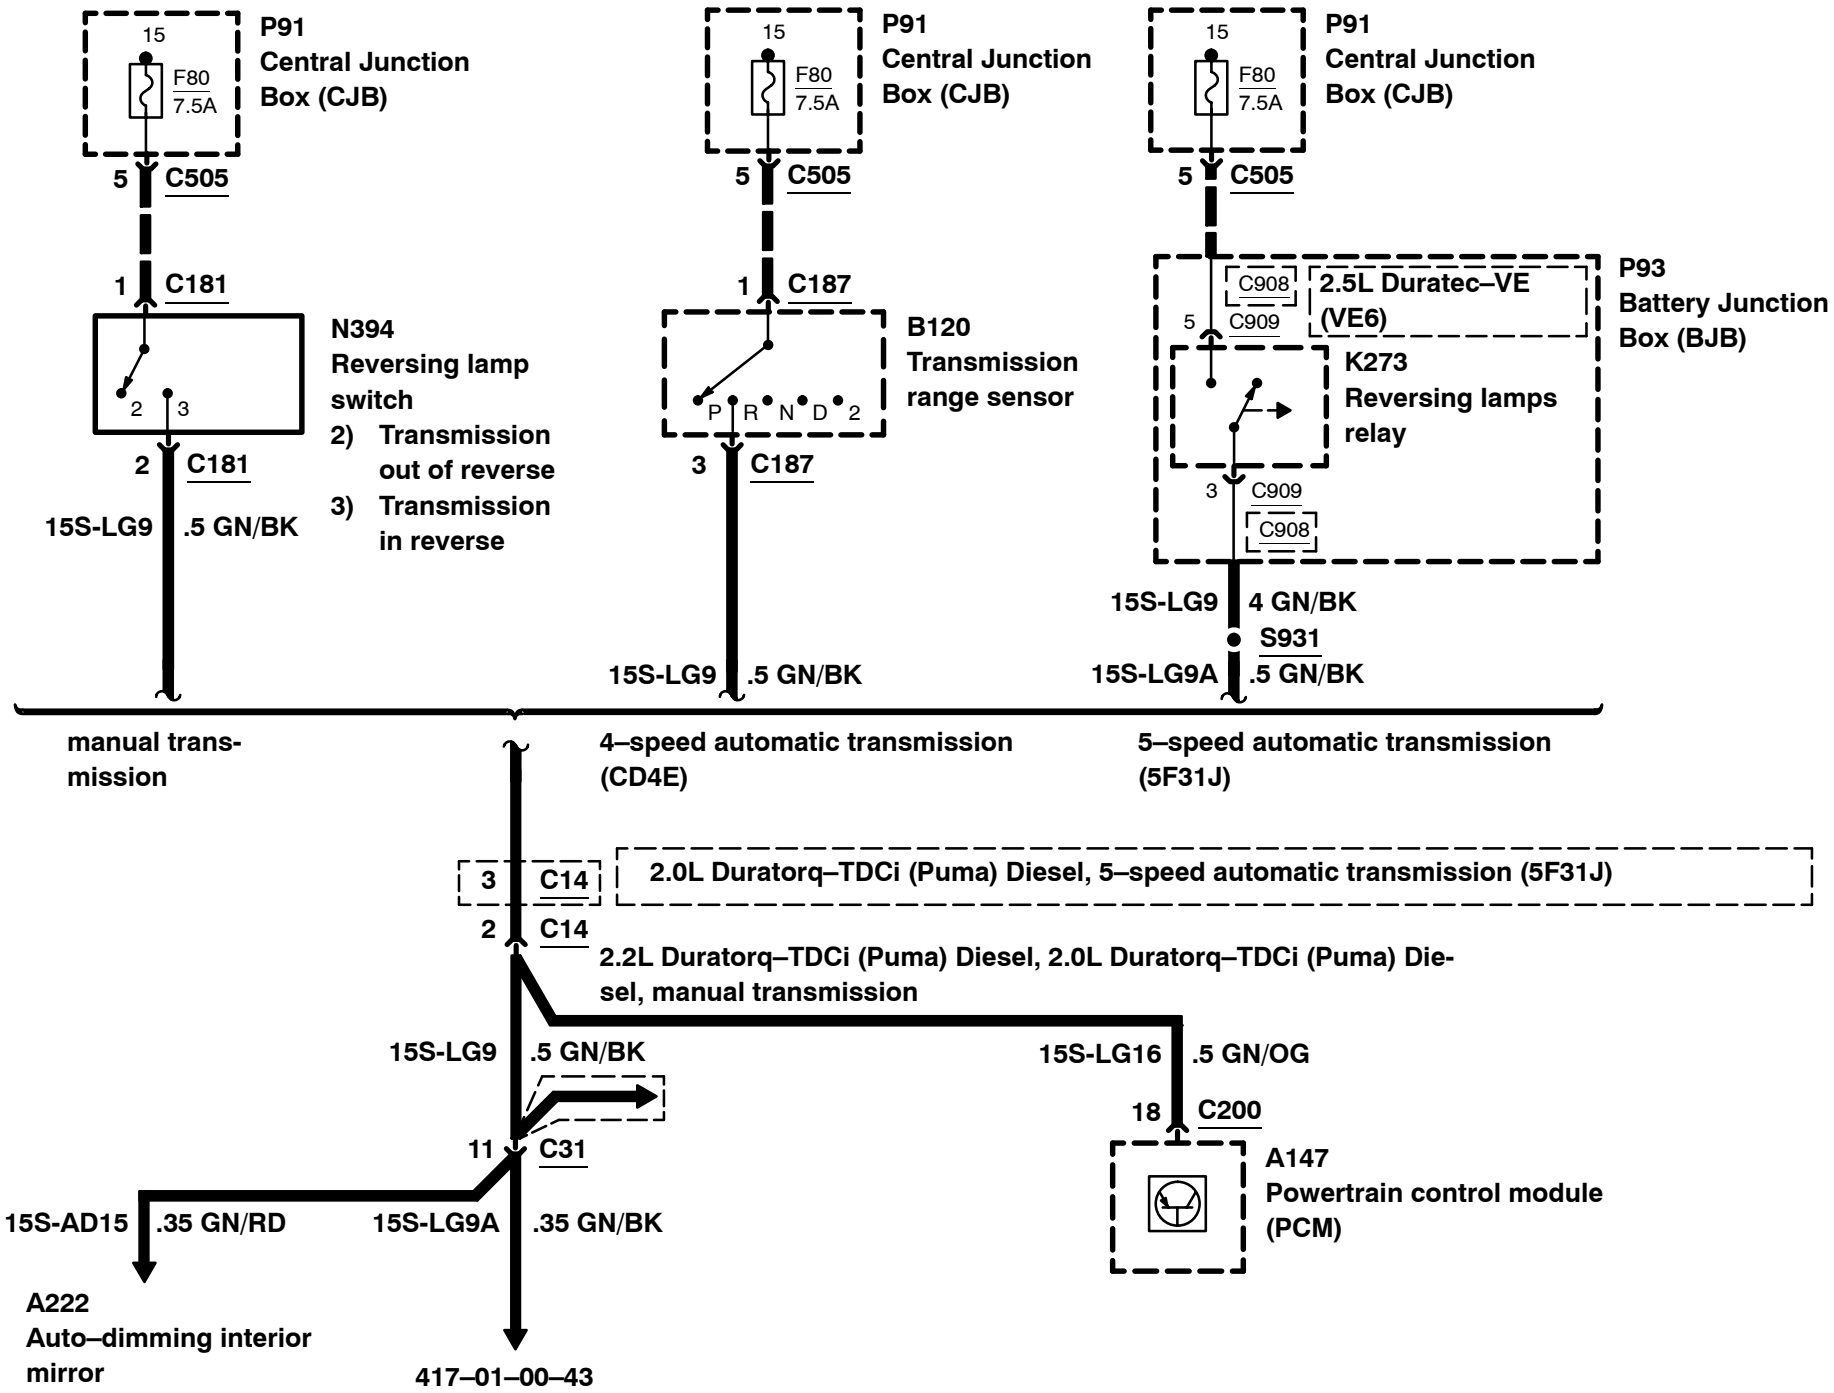


Exterior Lighting – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004

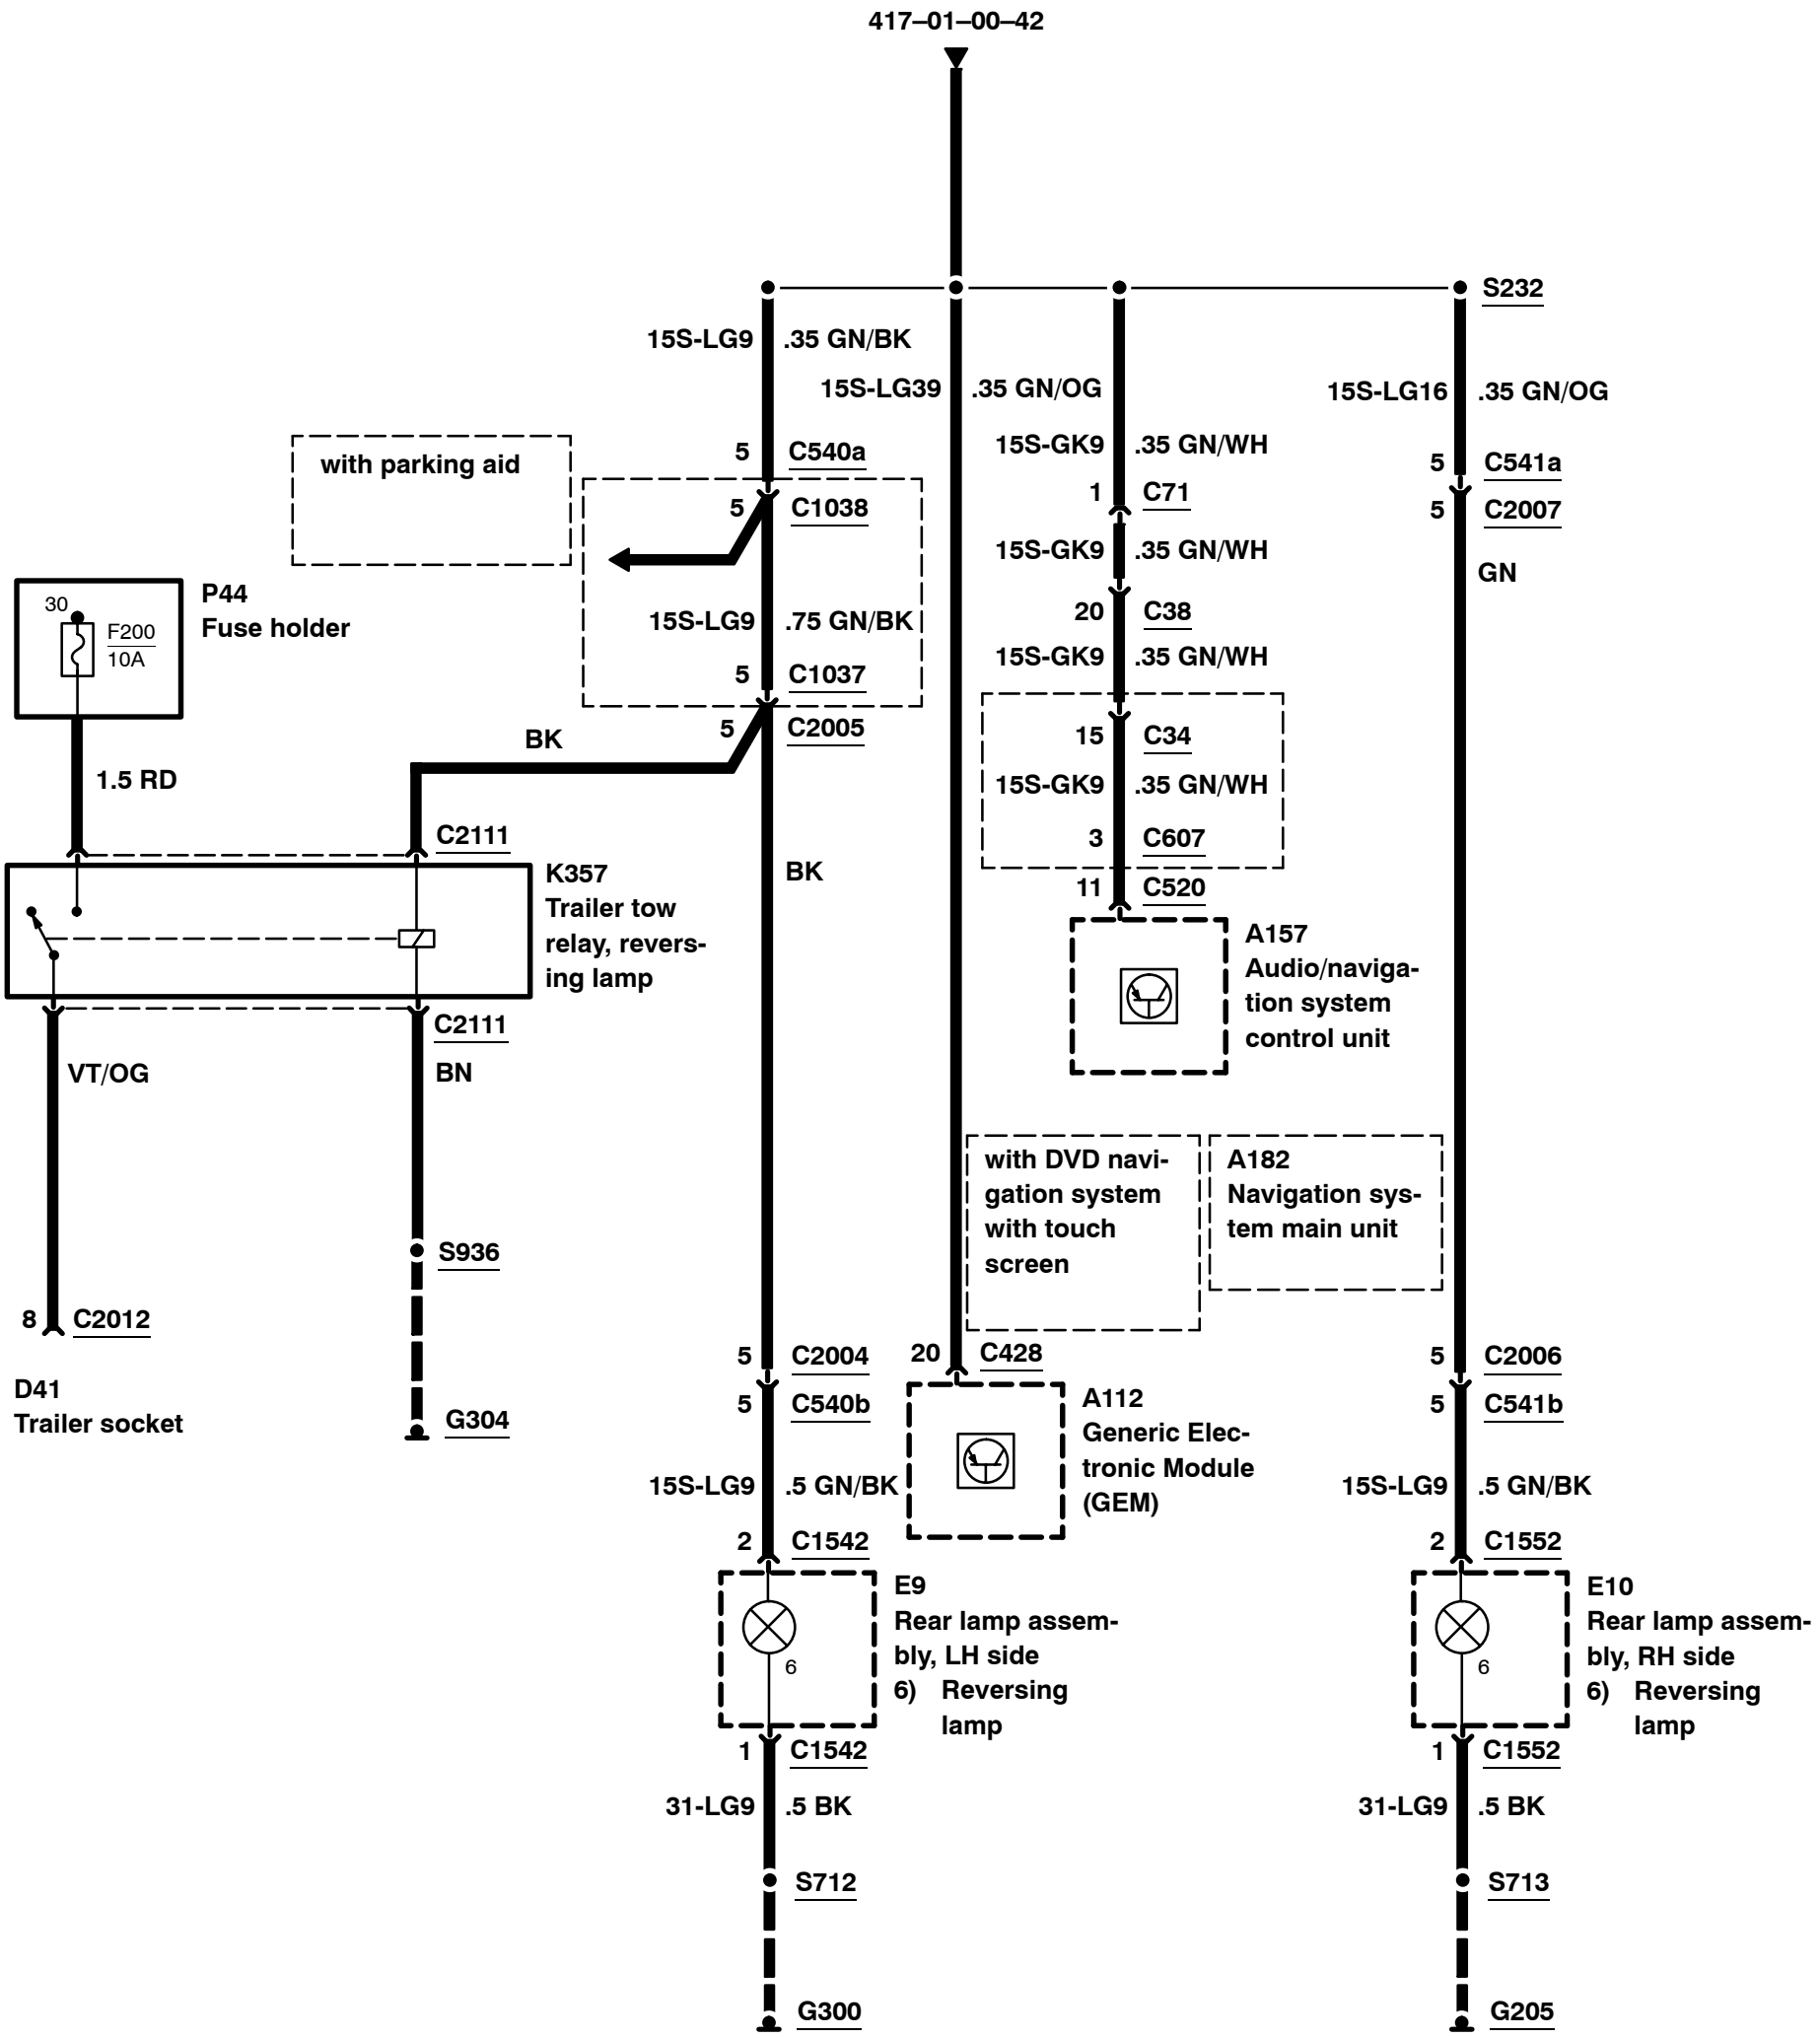


Exterior Lighting – Fog lamps, without trailer socket, 4–door model/5–door model

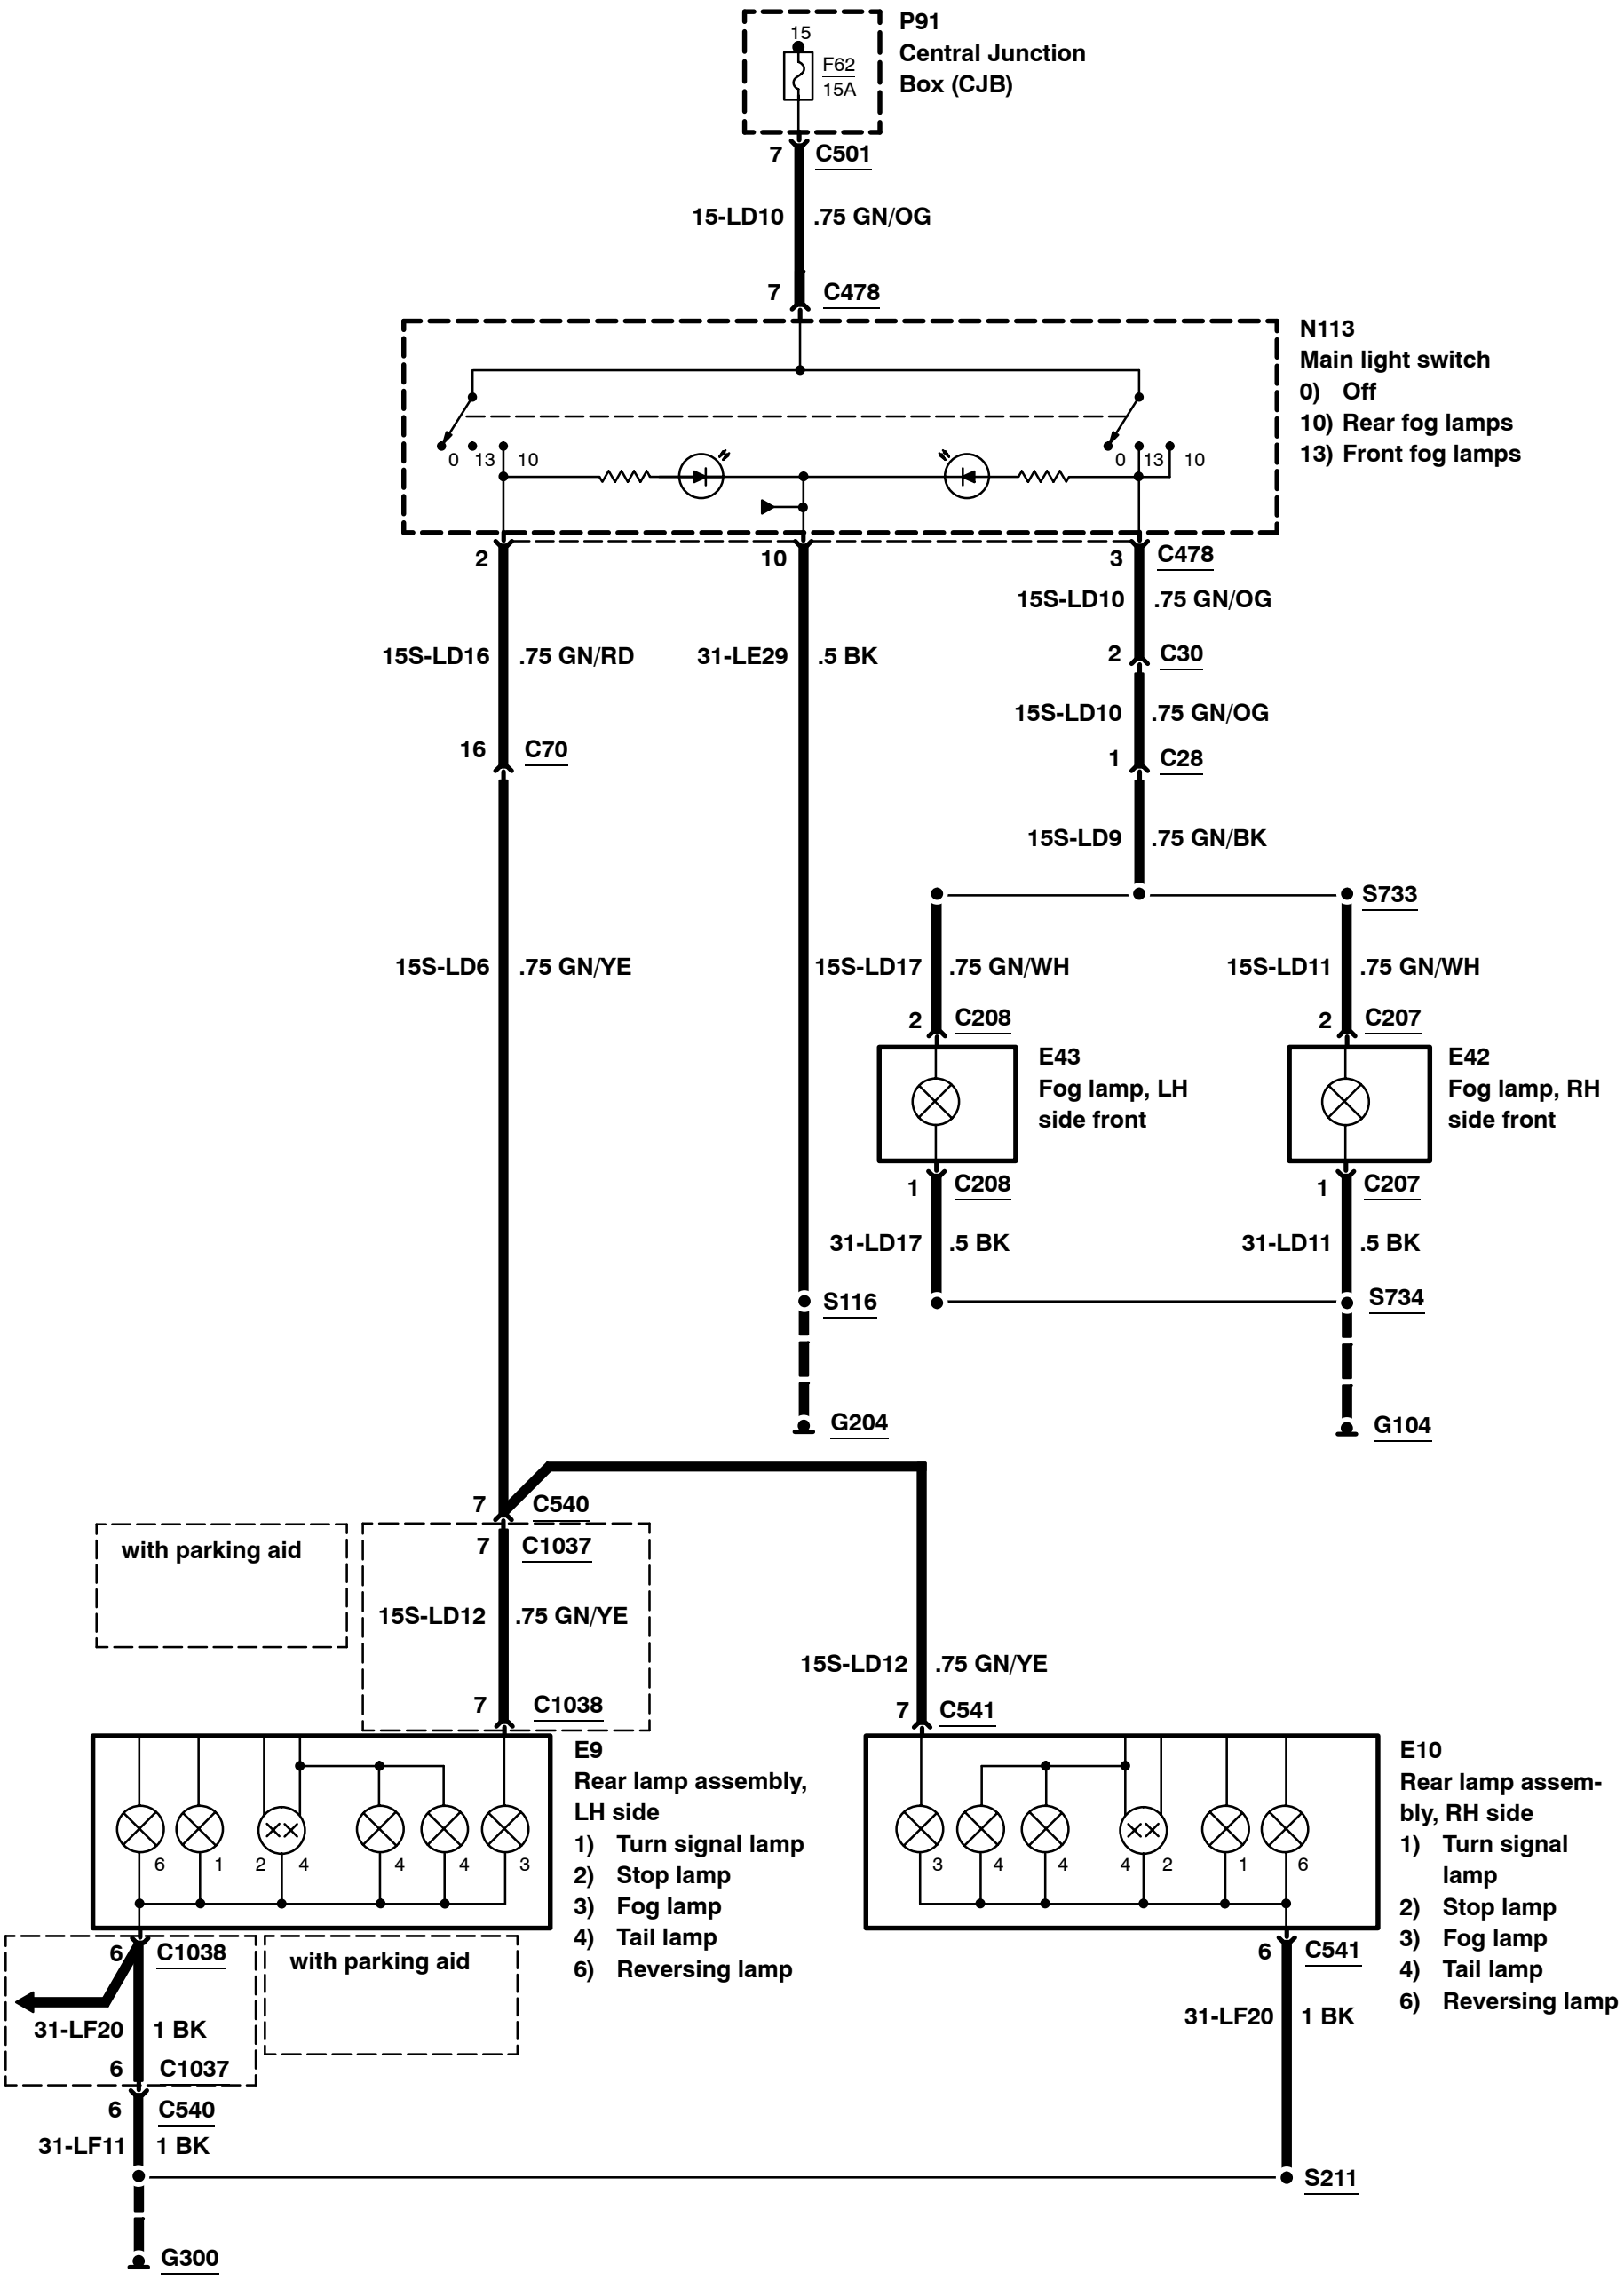


Exterior Lighting – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004

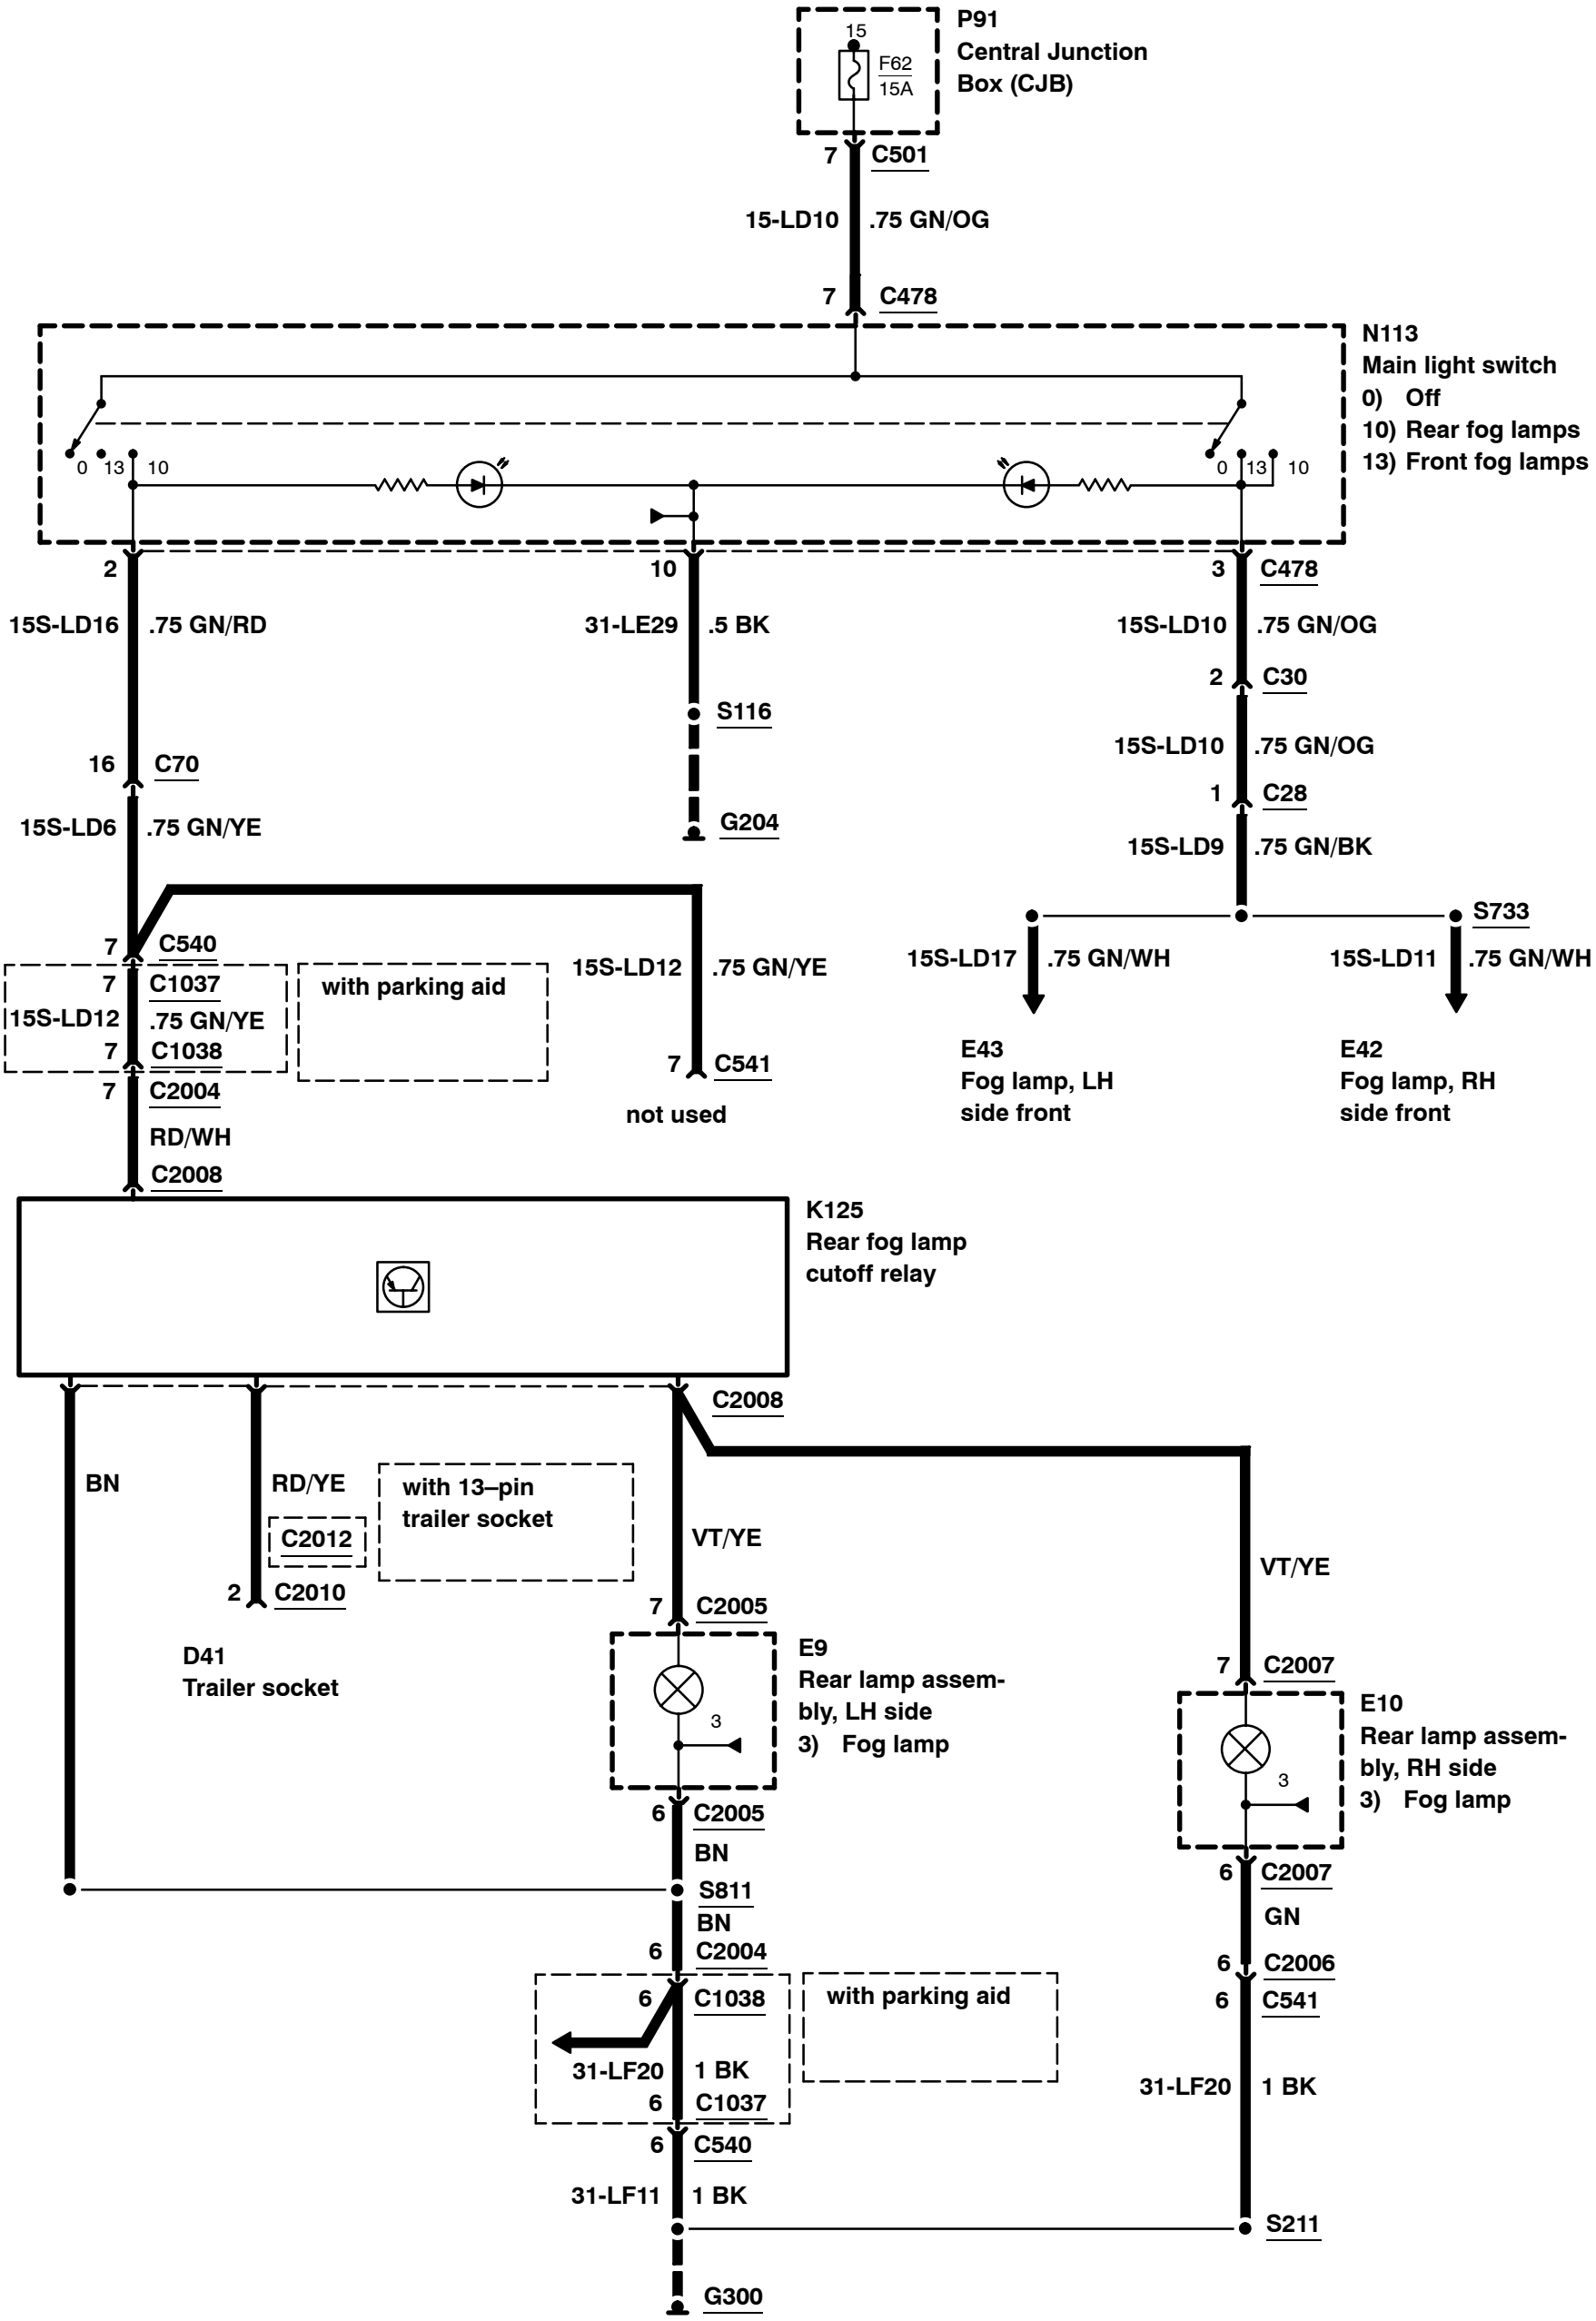


Exterior Lighting – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004

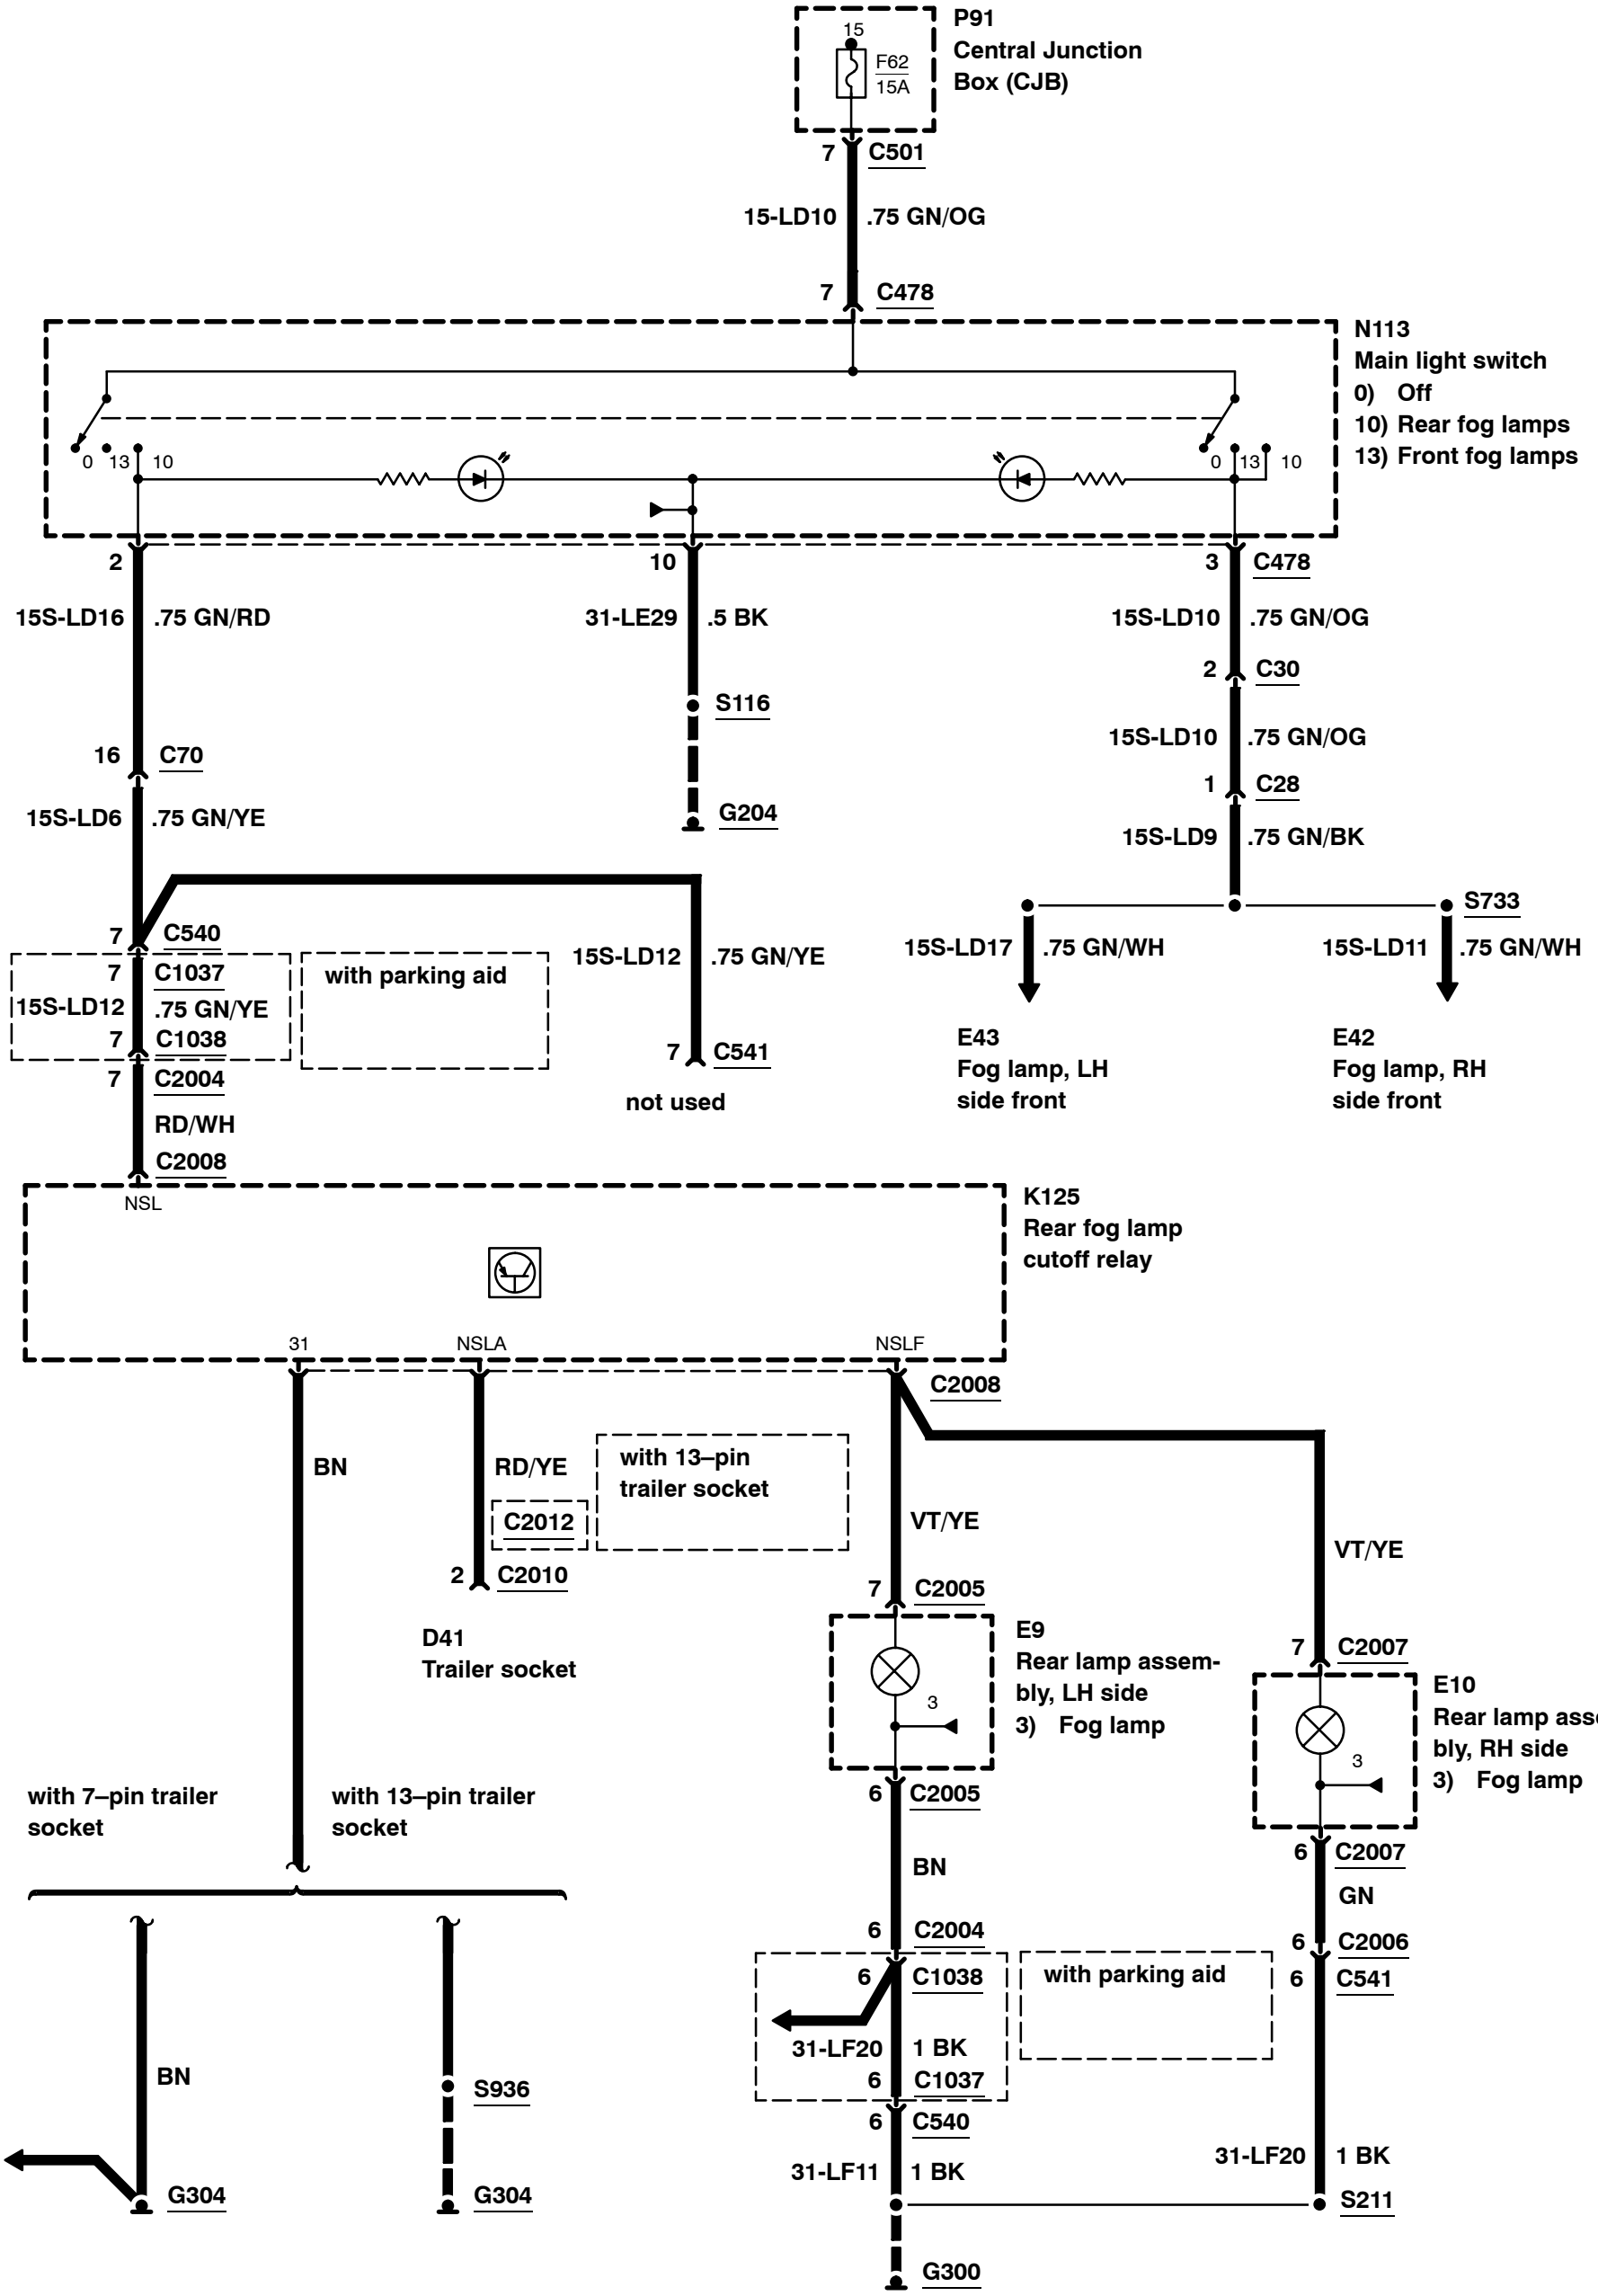


Exterior Lighting – Fog lamps, without trailer socket, wagon

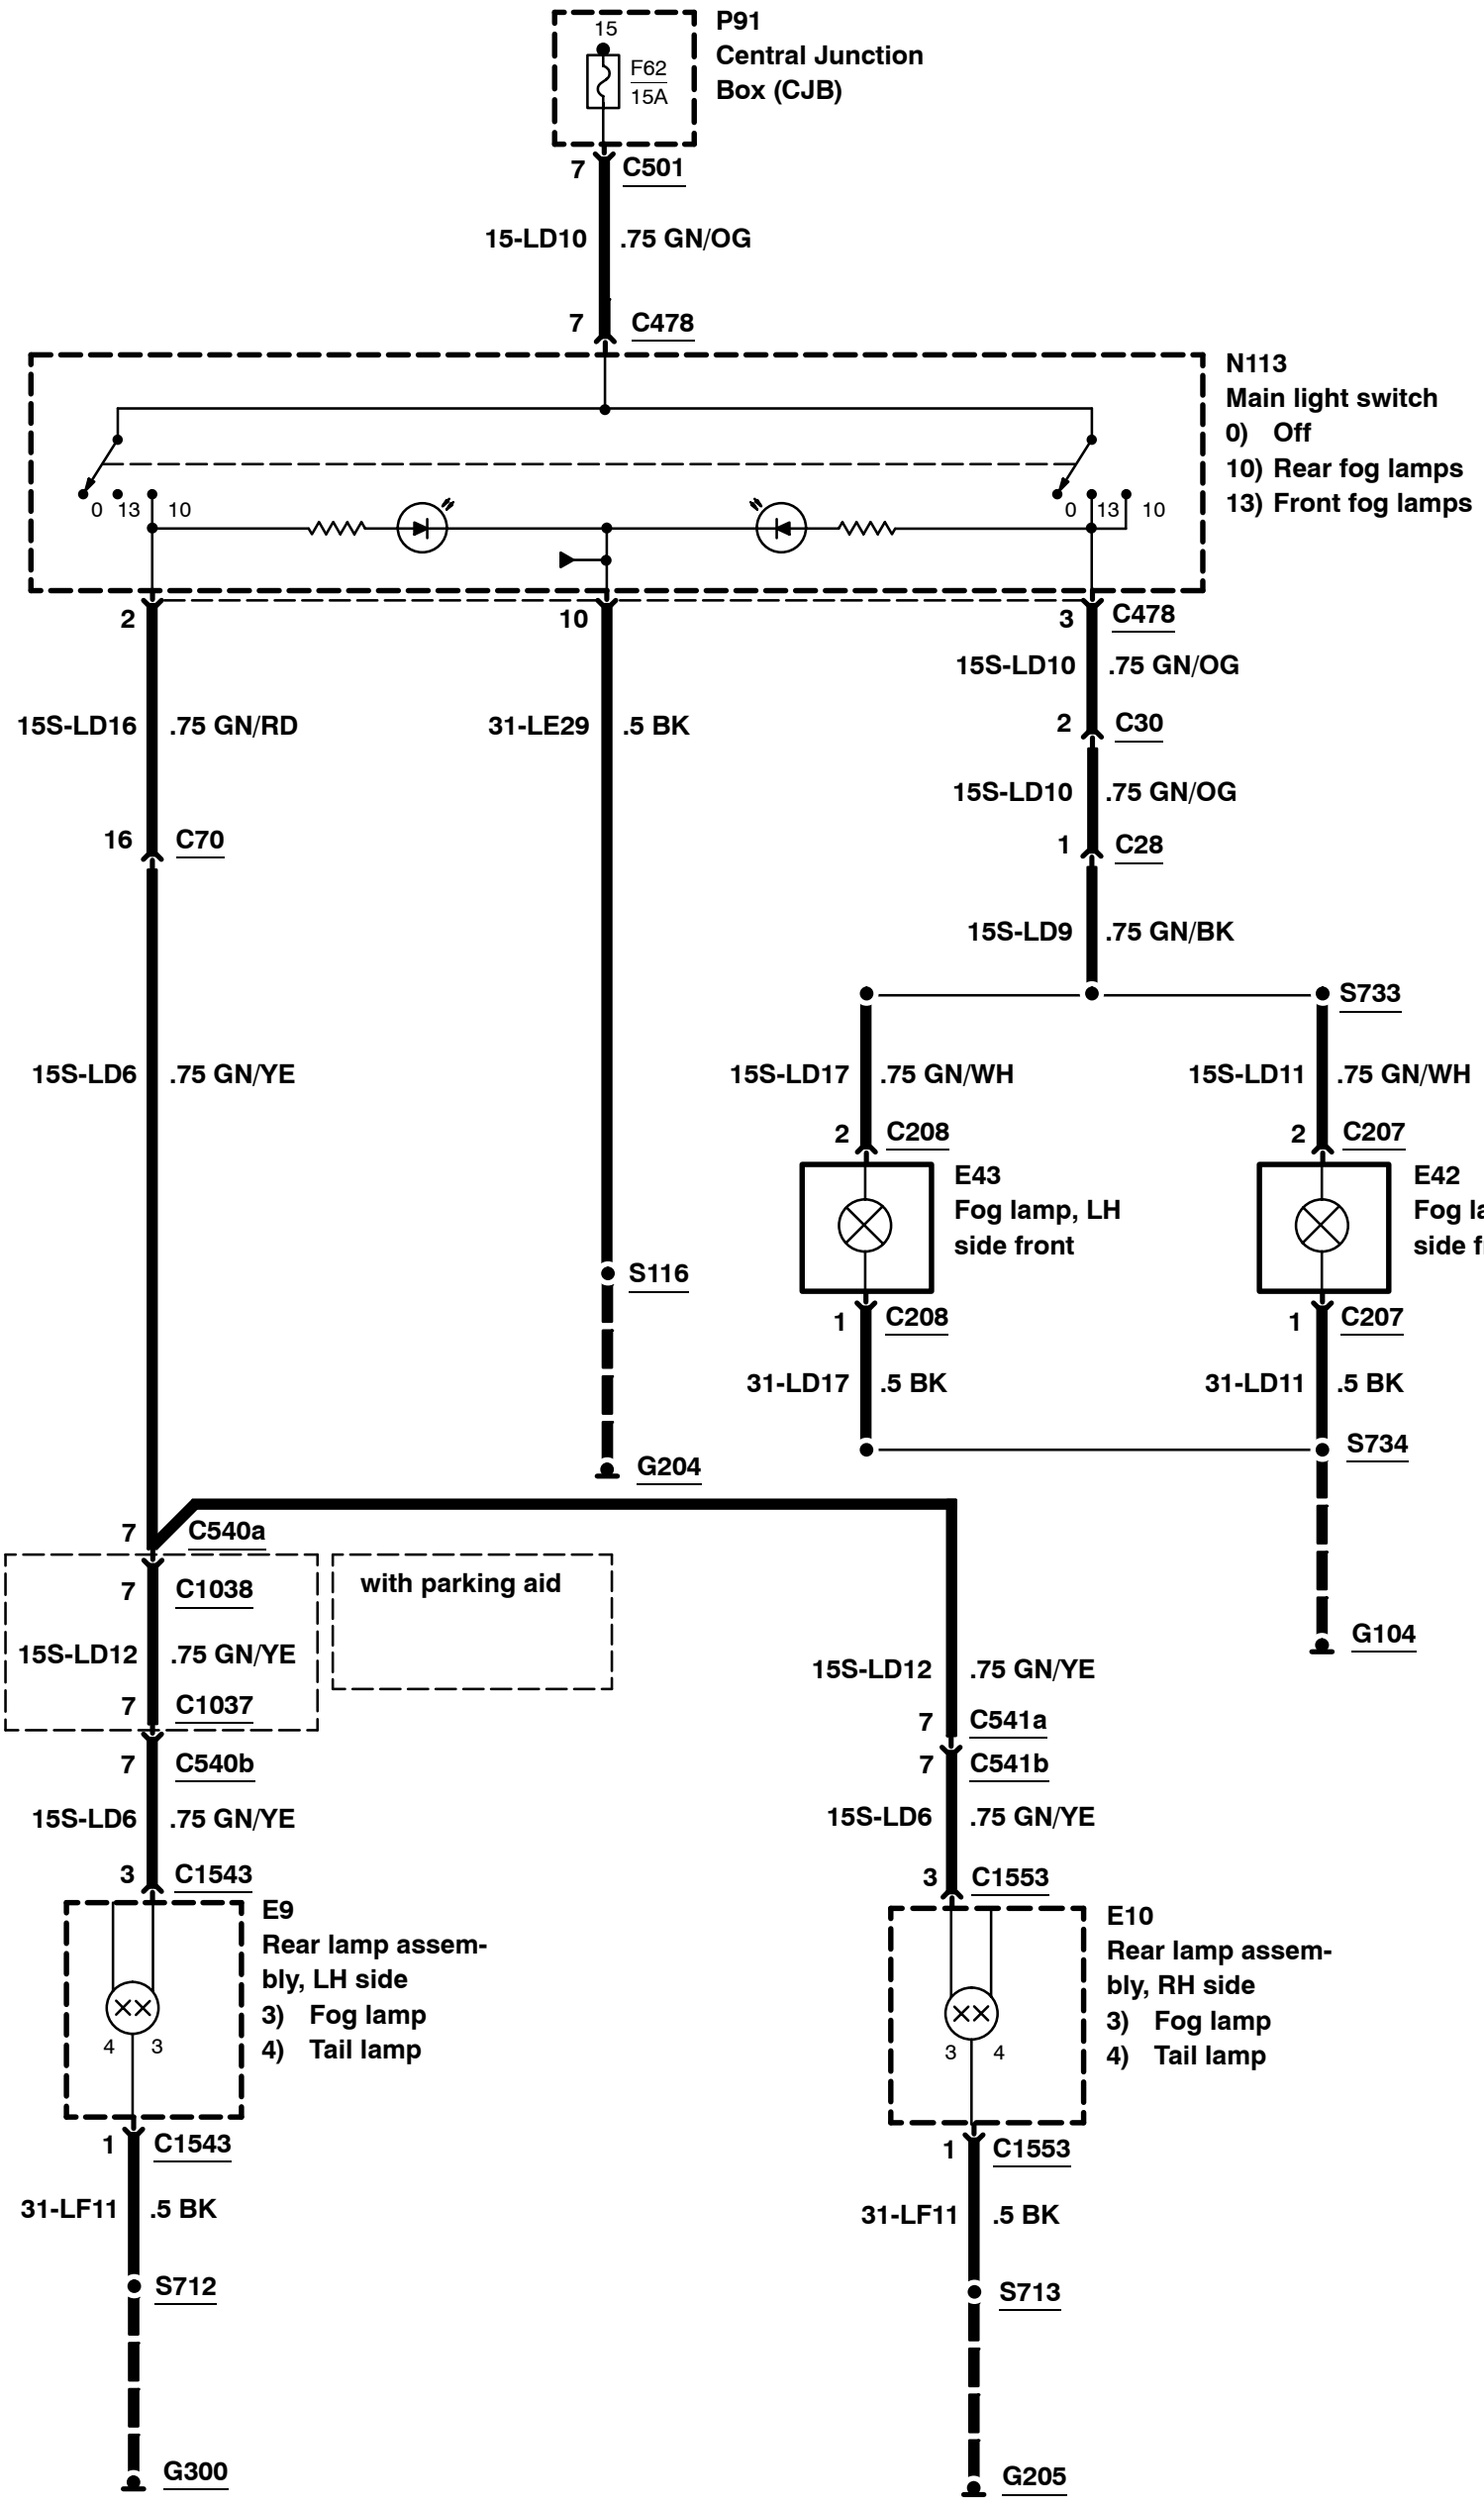


Exterior Lighting – Fog lamps, with trailer socket, wagon, before 01/2004

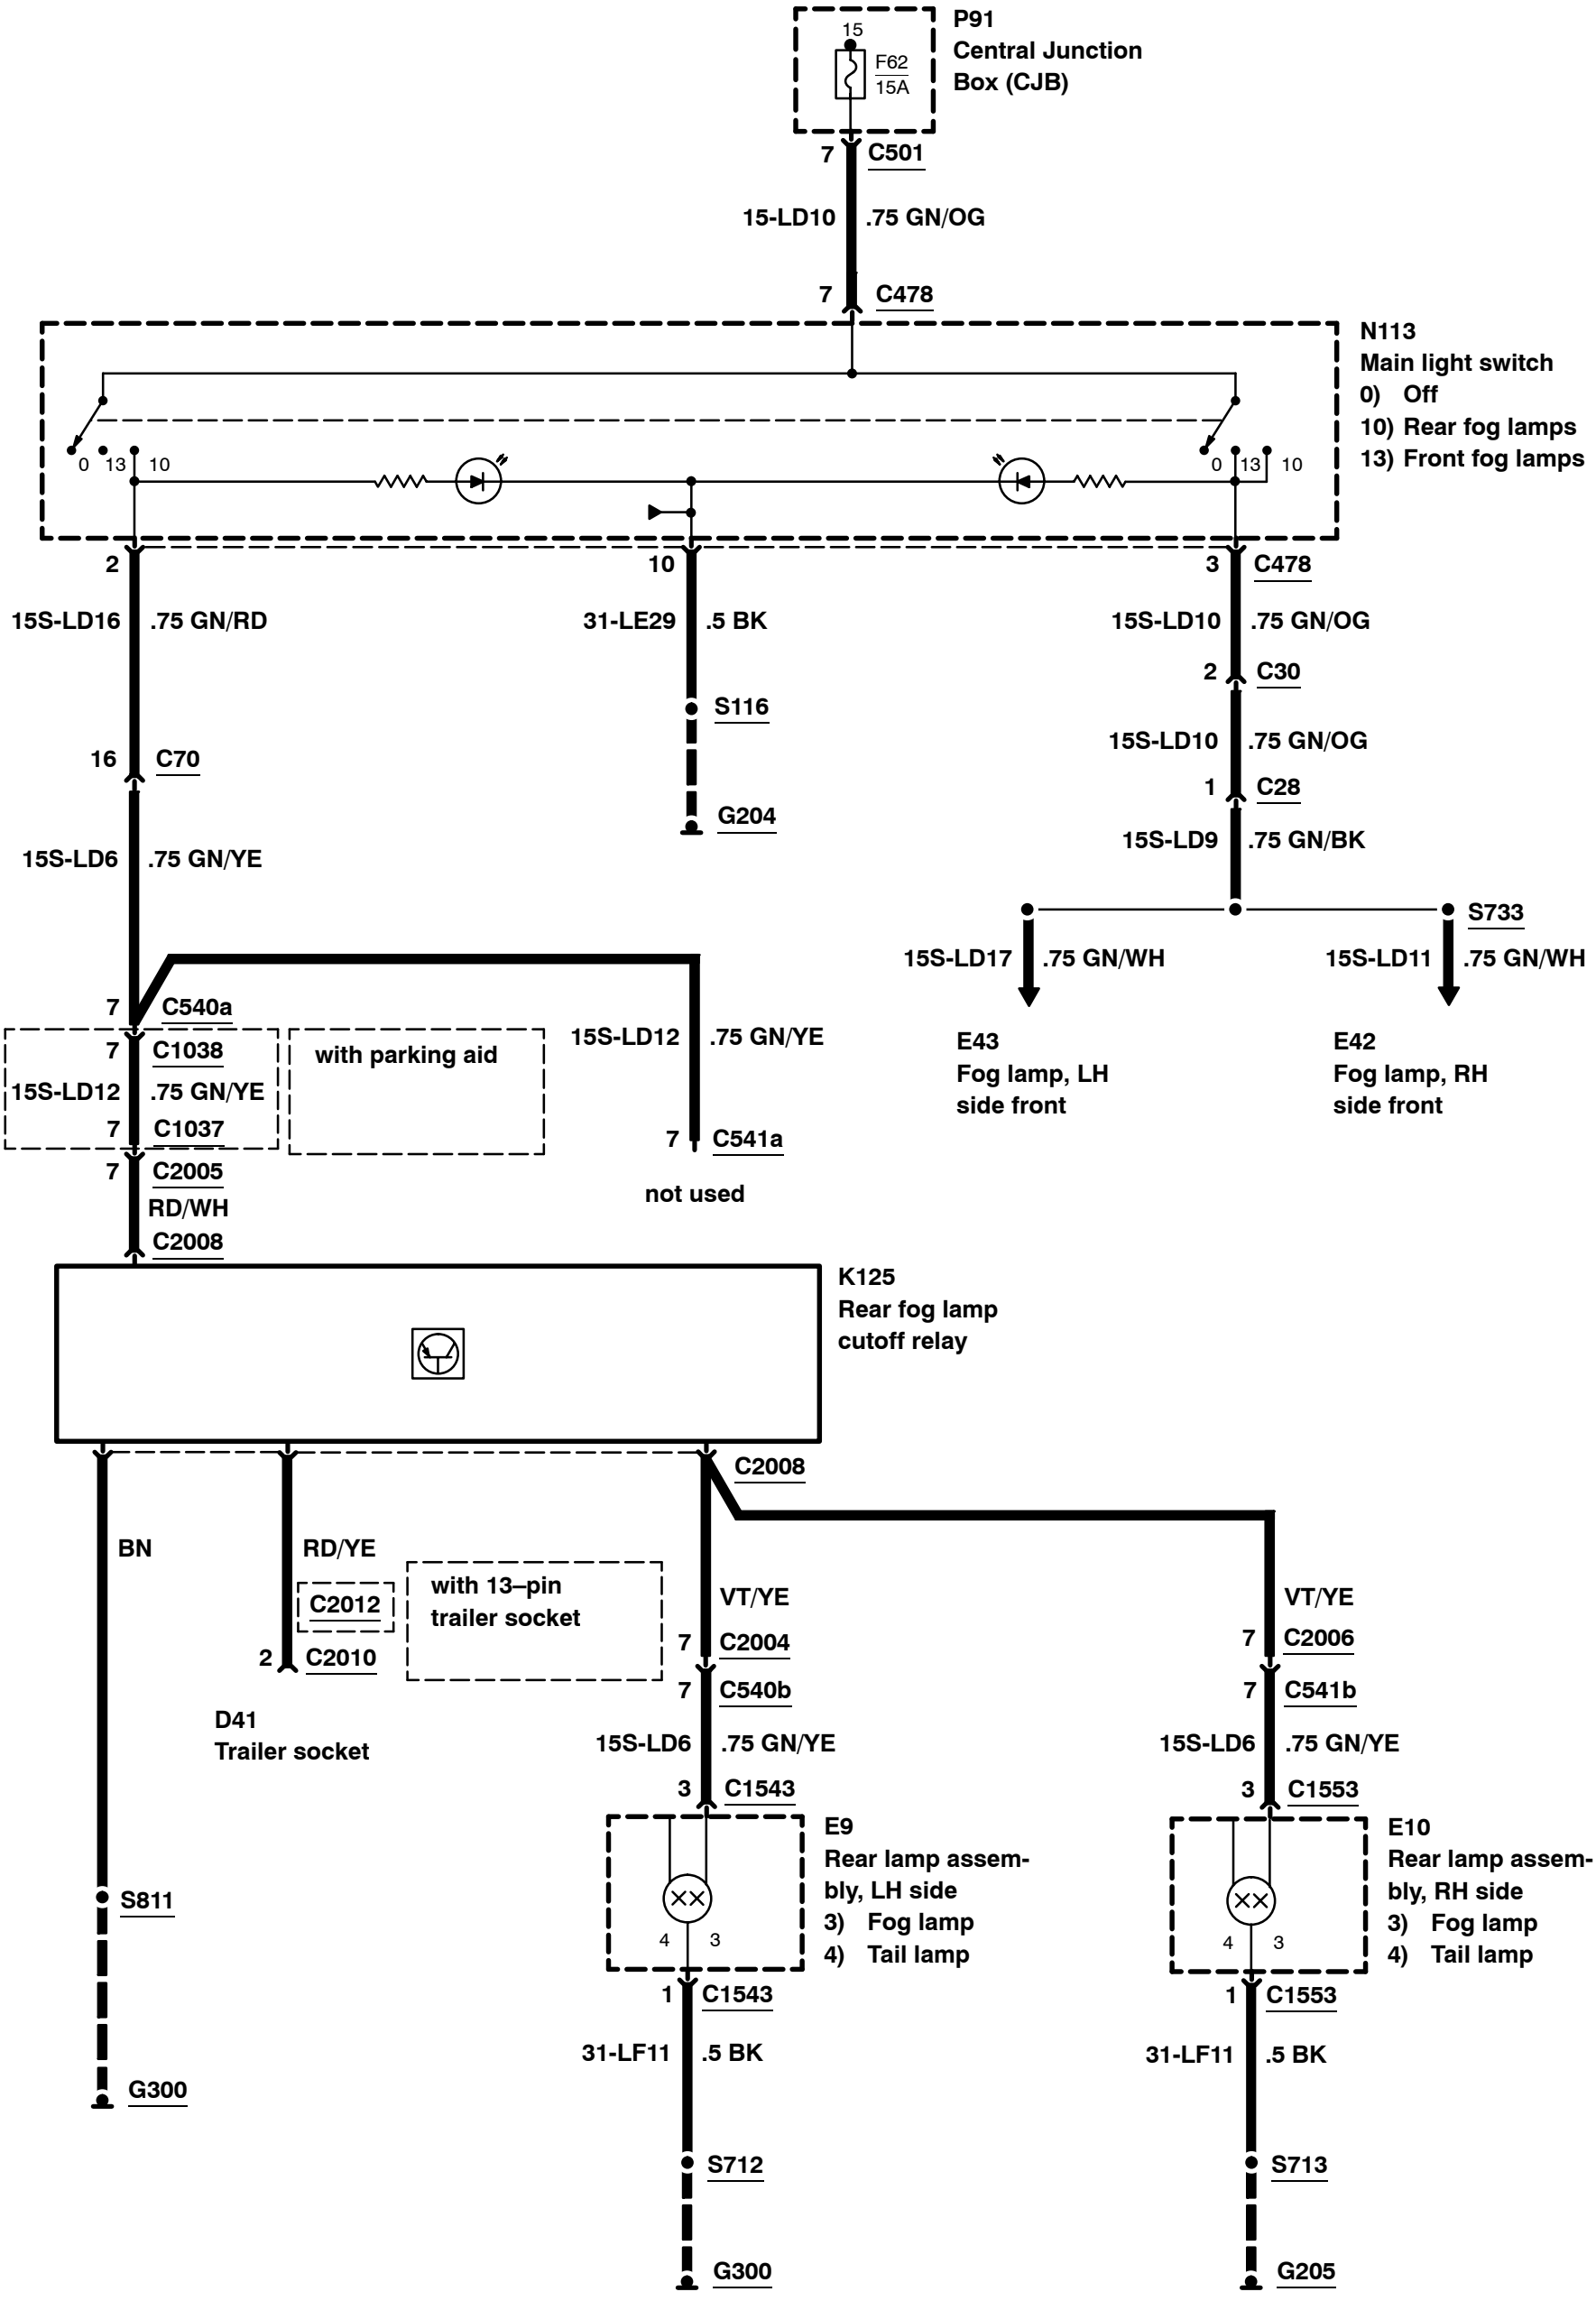


Exterior Lighting – Fog lamps, with trailer socket, wagon, as of 01/2004

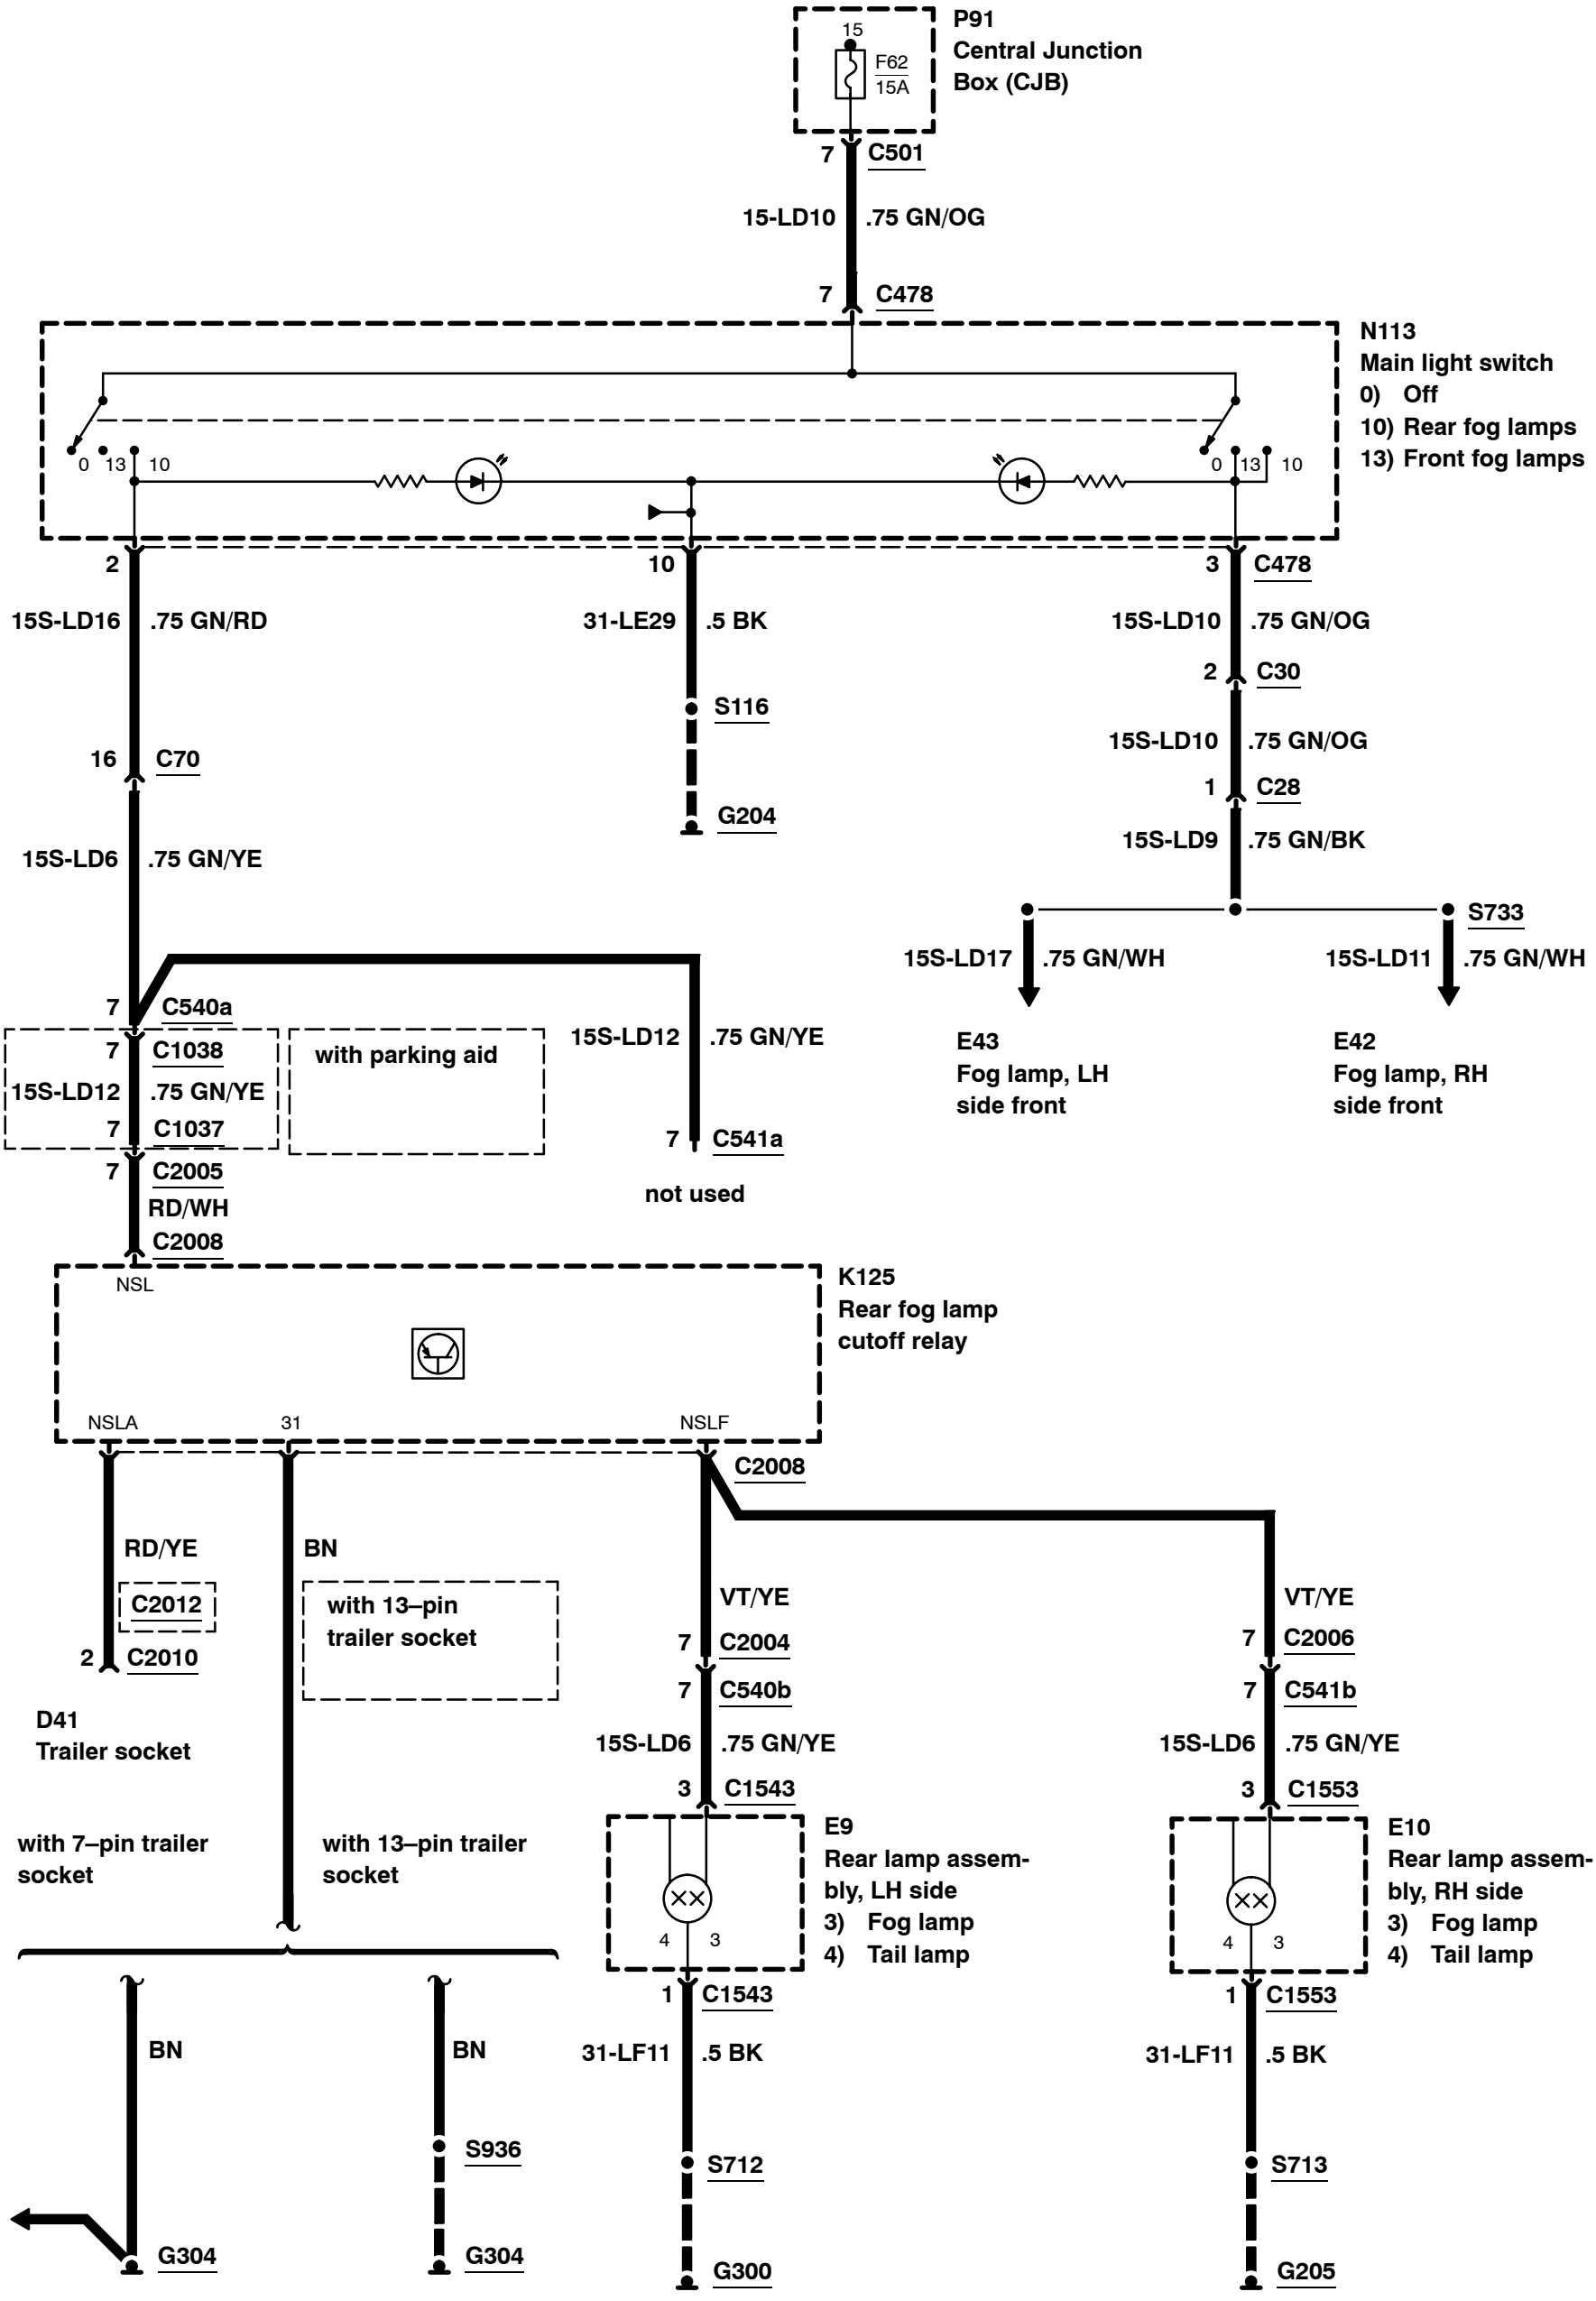


Exterior Lighting – Trailer socket, before 01/2004

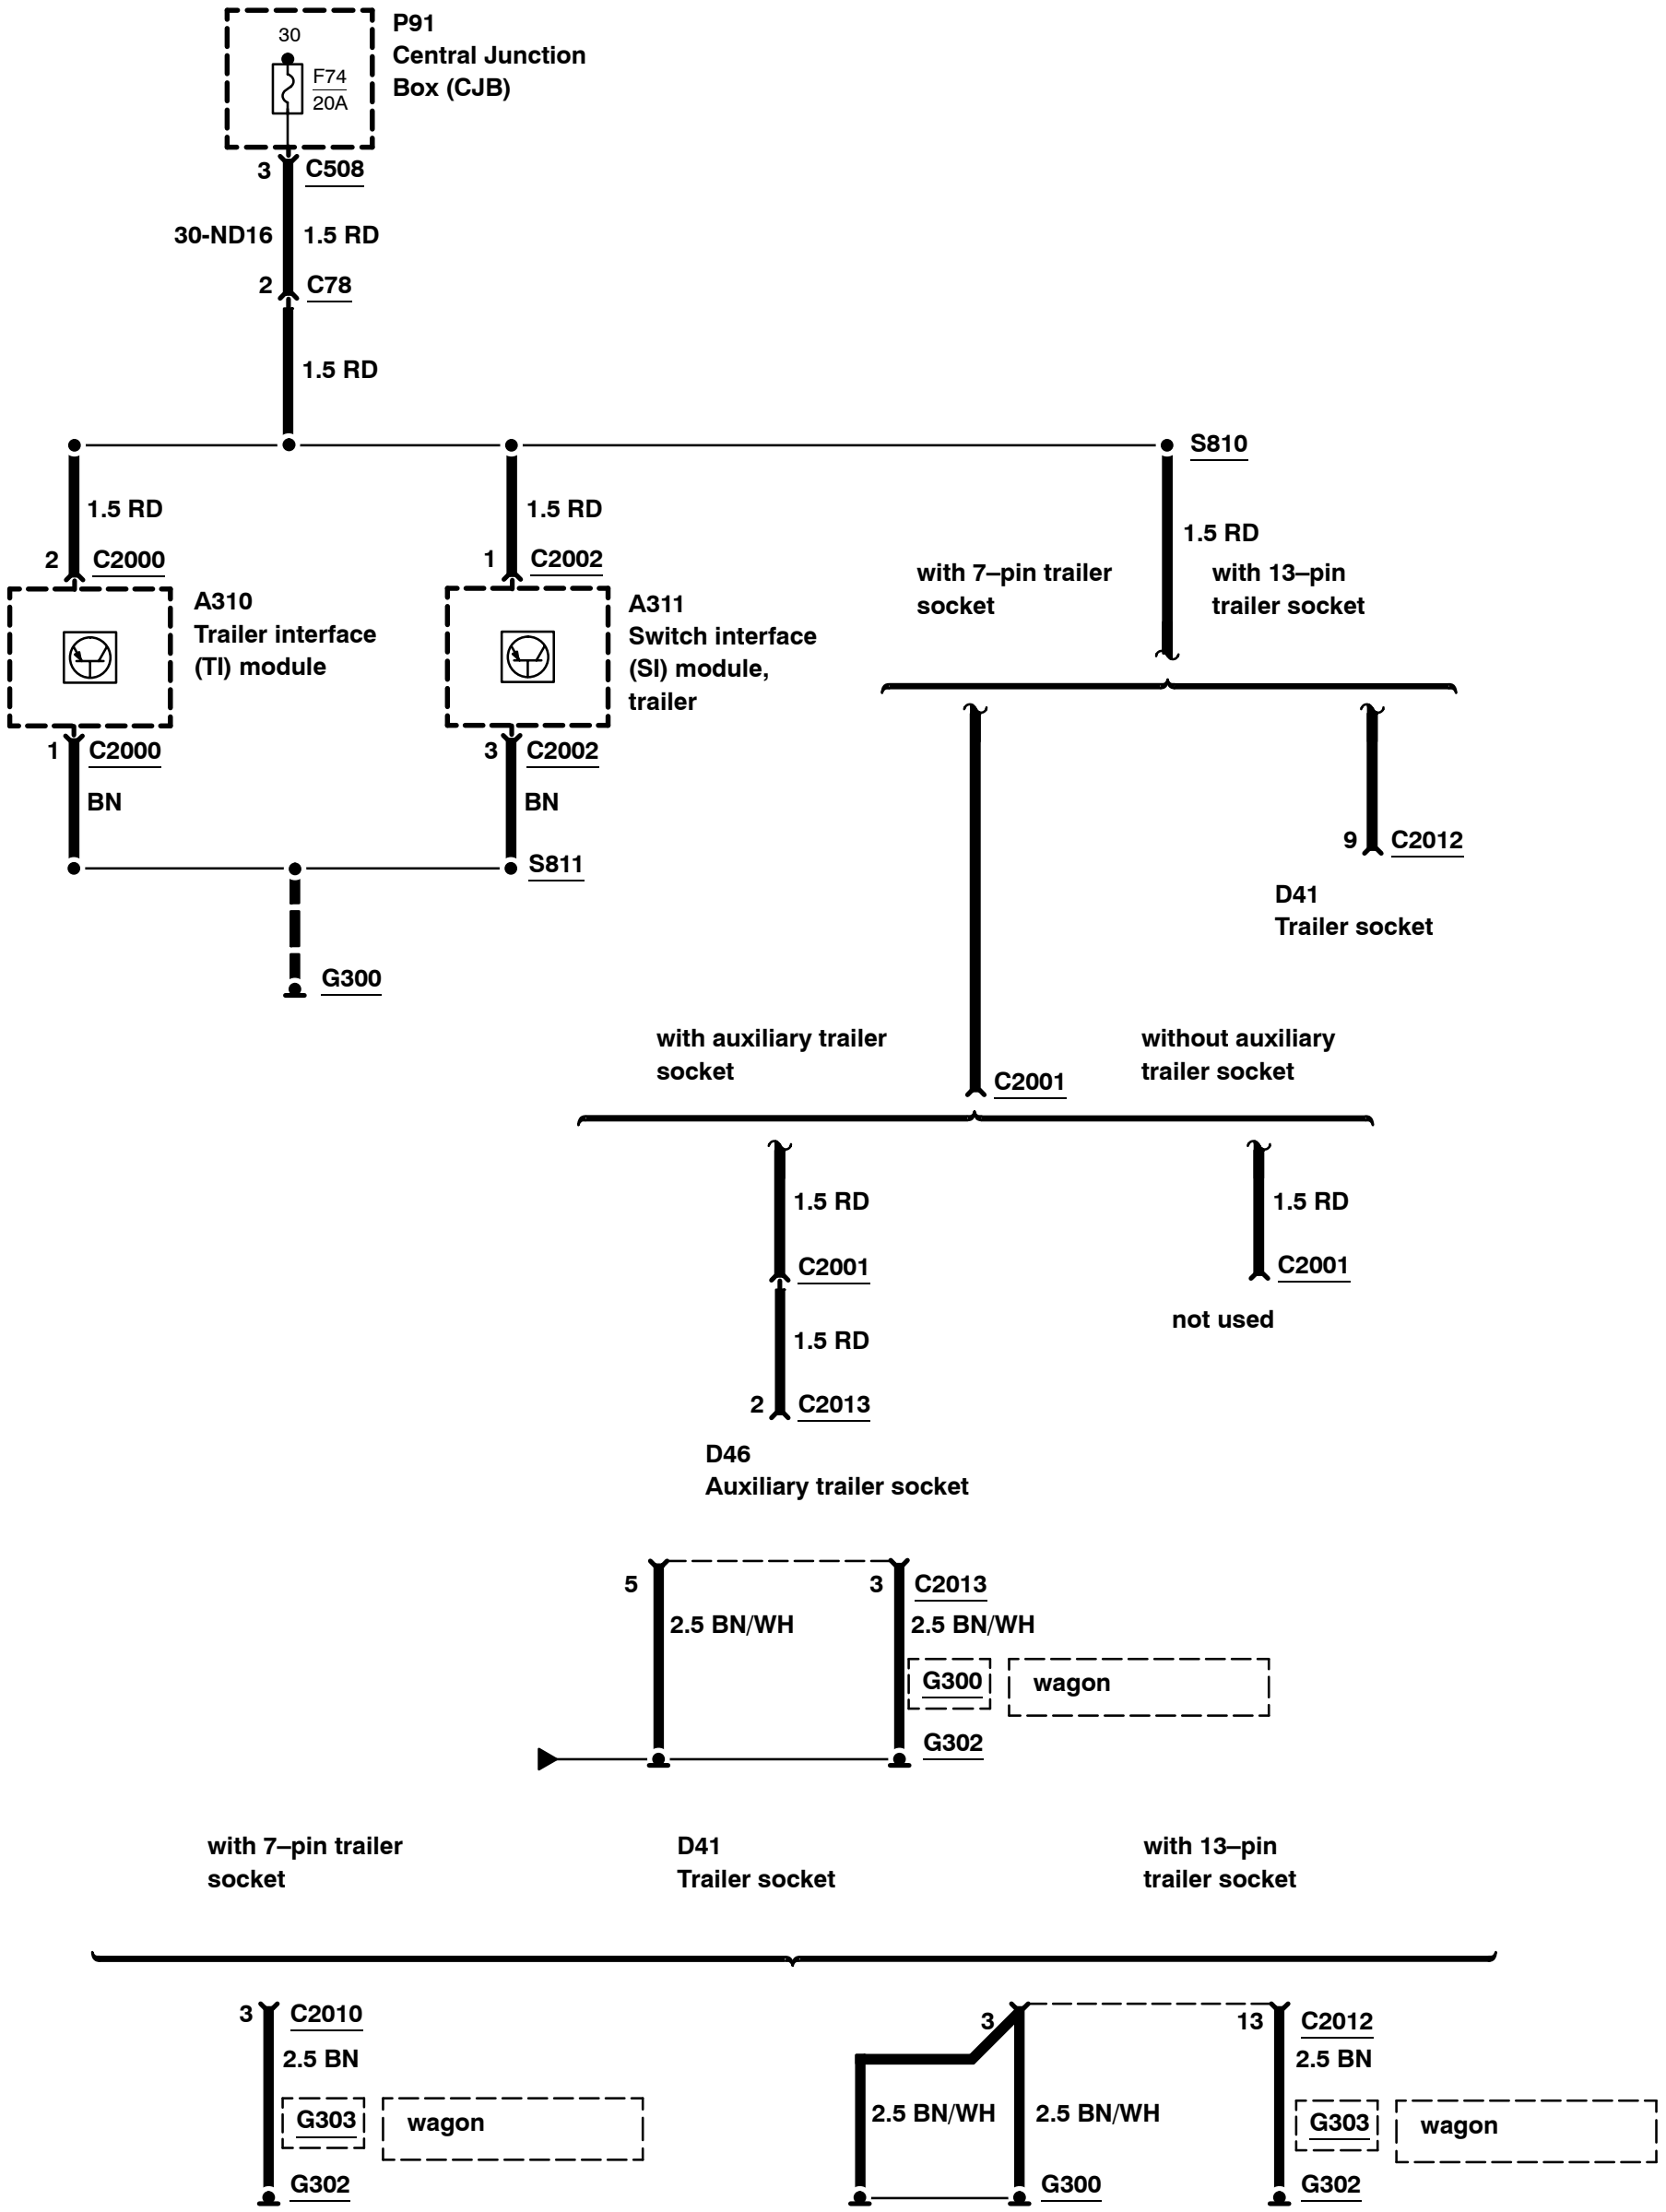


Exterior Lighting – Trailer socket, with 7–pin trailer socket, as of 01/2004

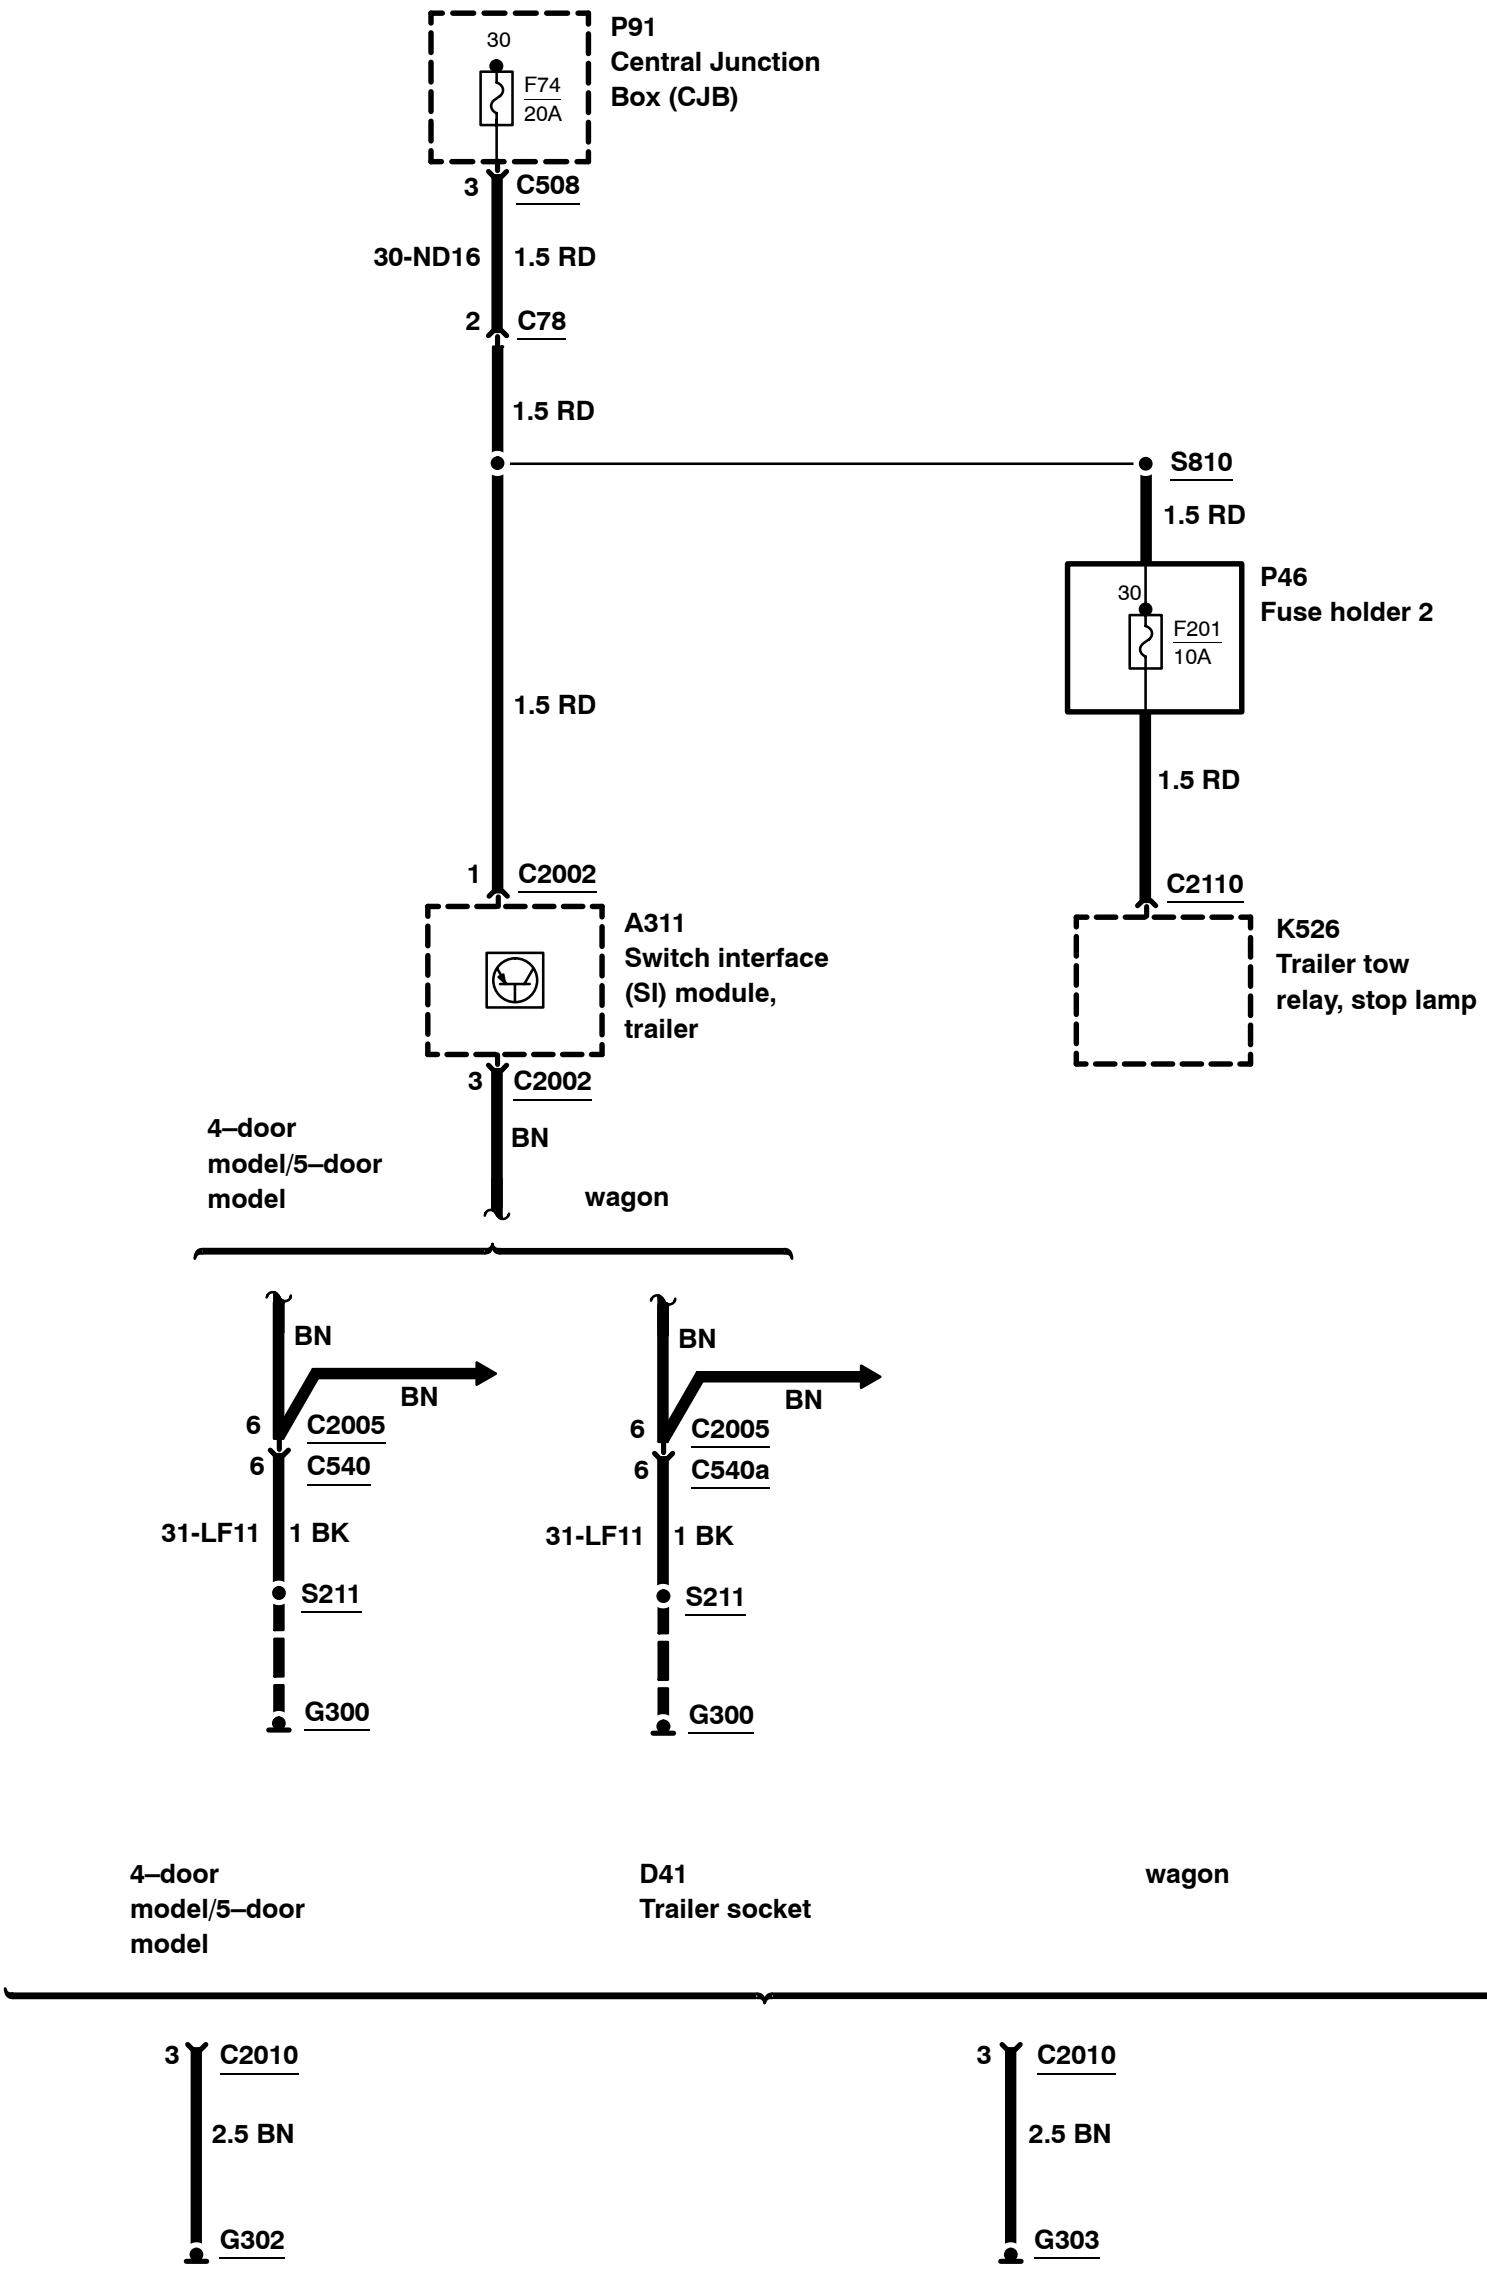


Exterior Lighting – Trailer socket, with 13–pin trailer socket, as of 01/2004

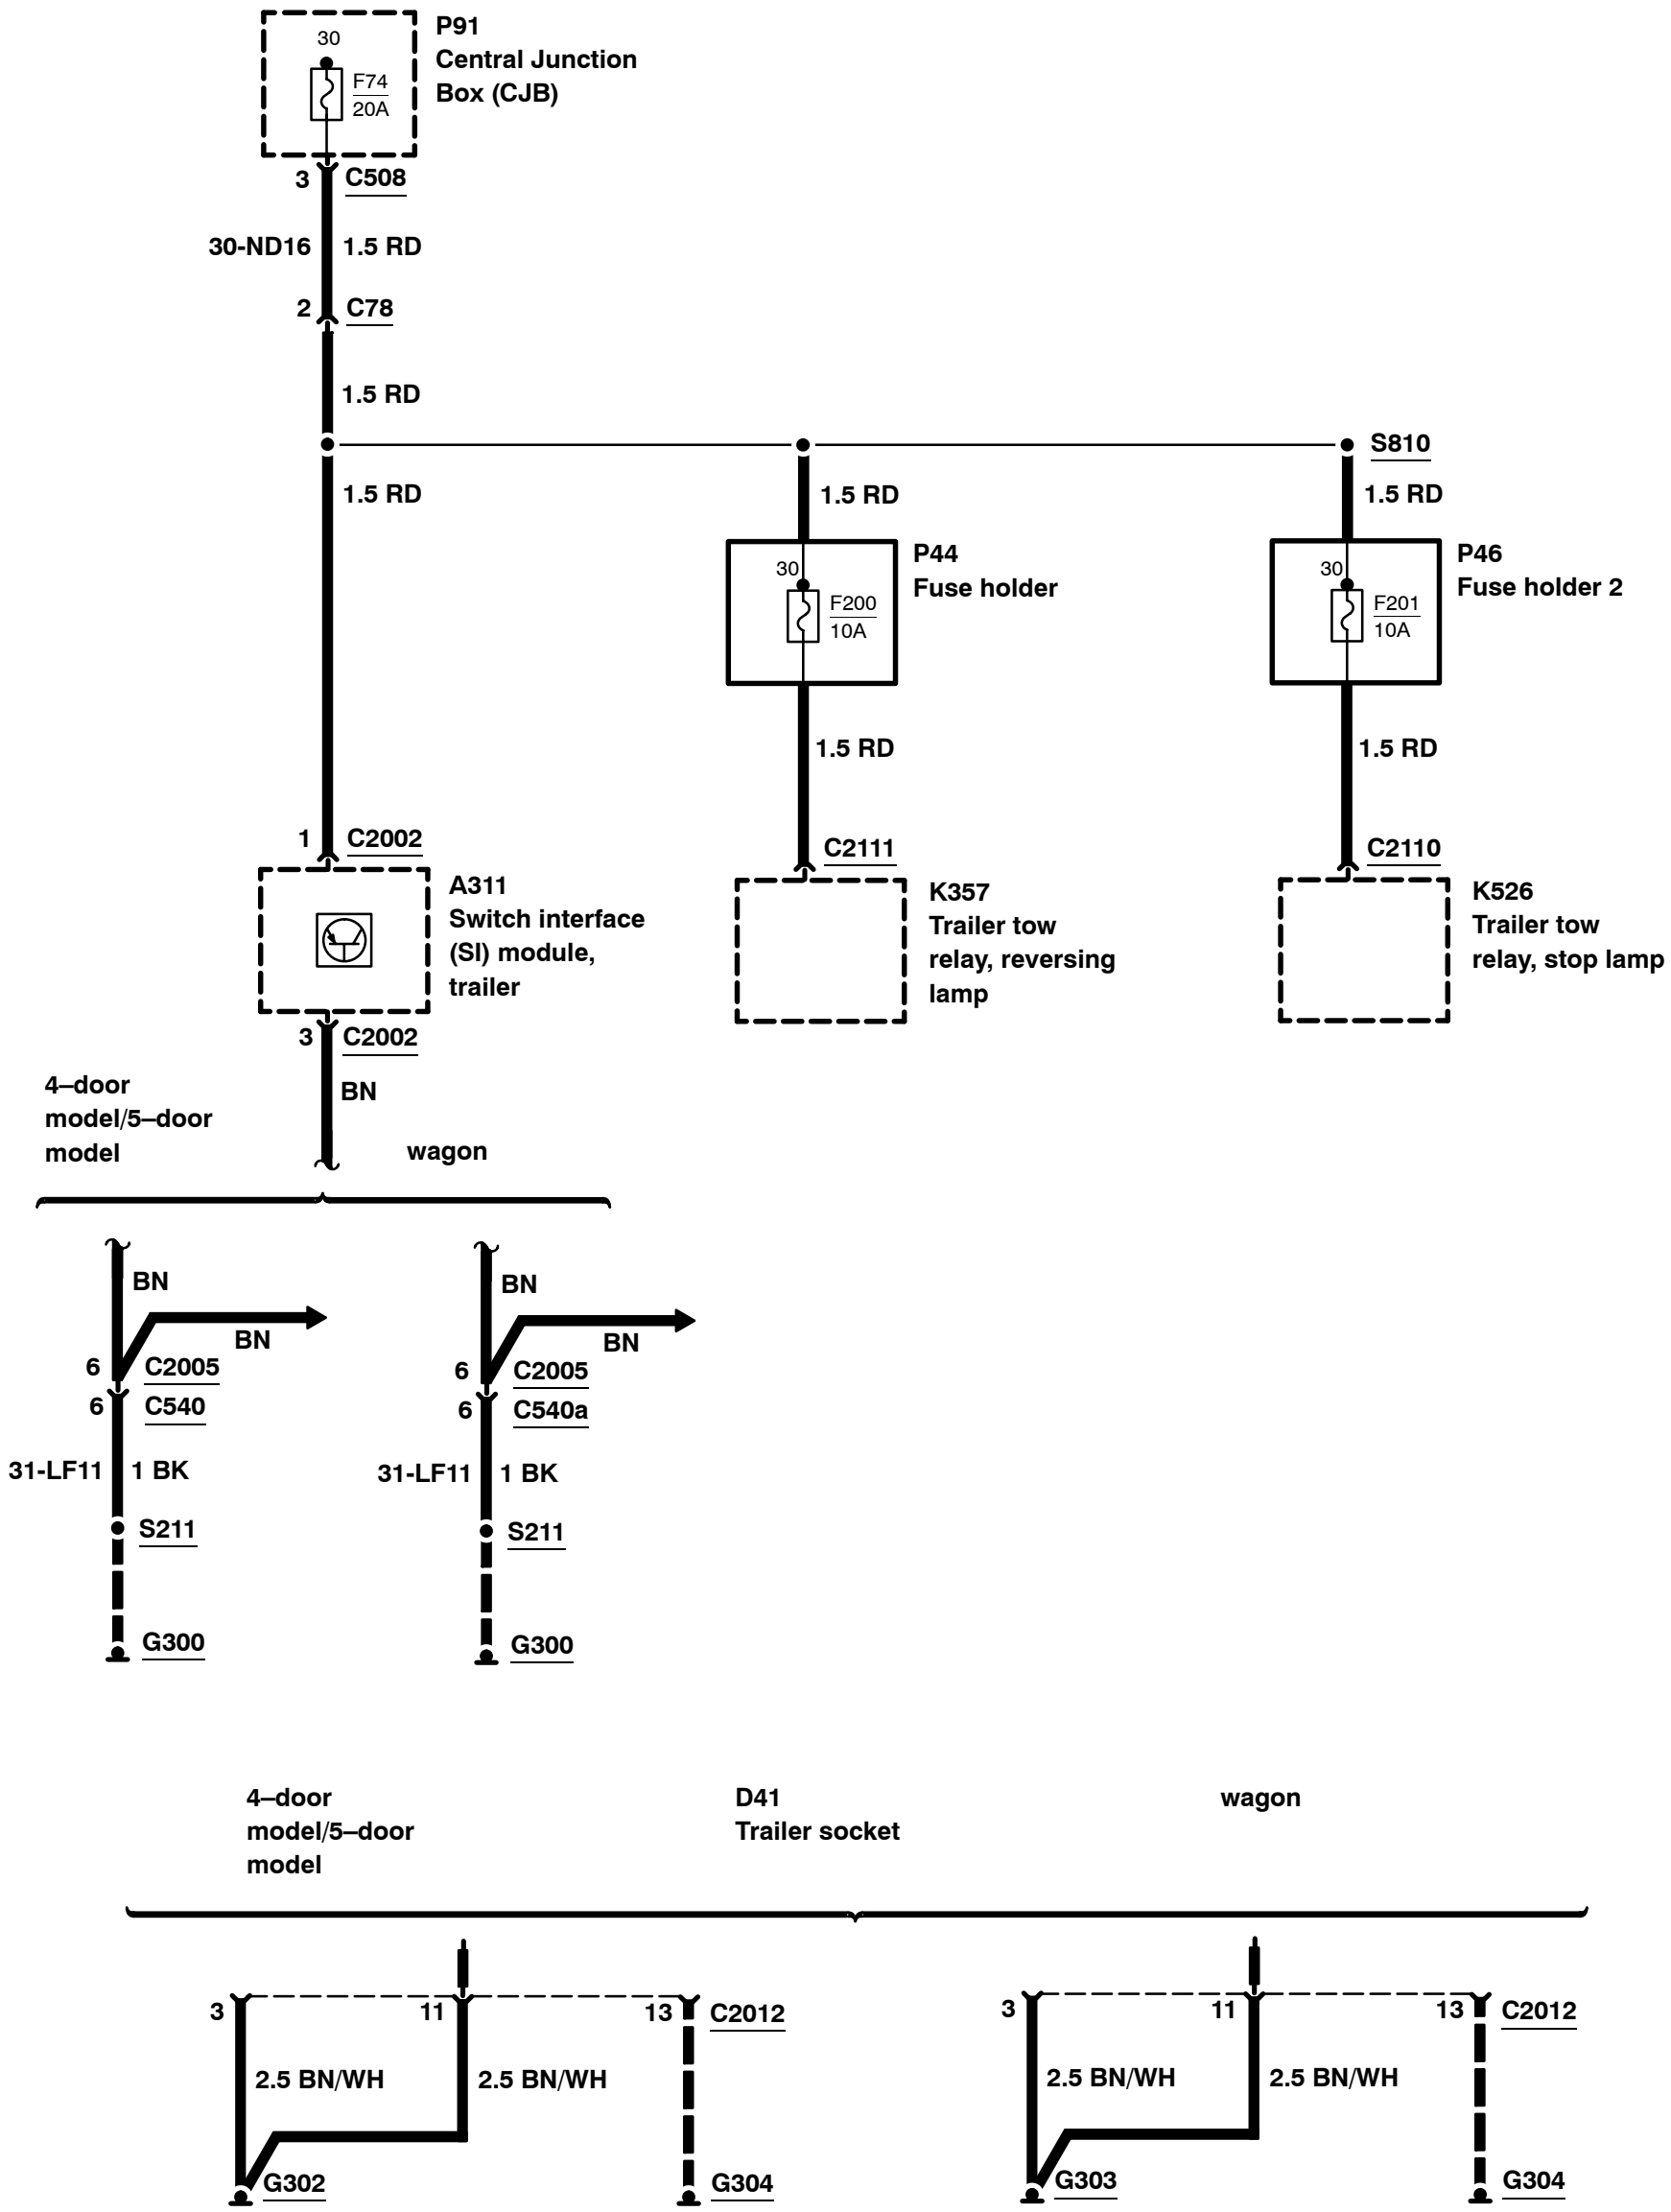


Exterior Lighting – Trailer socket, before 01/2004

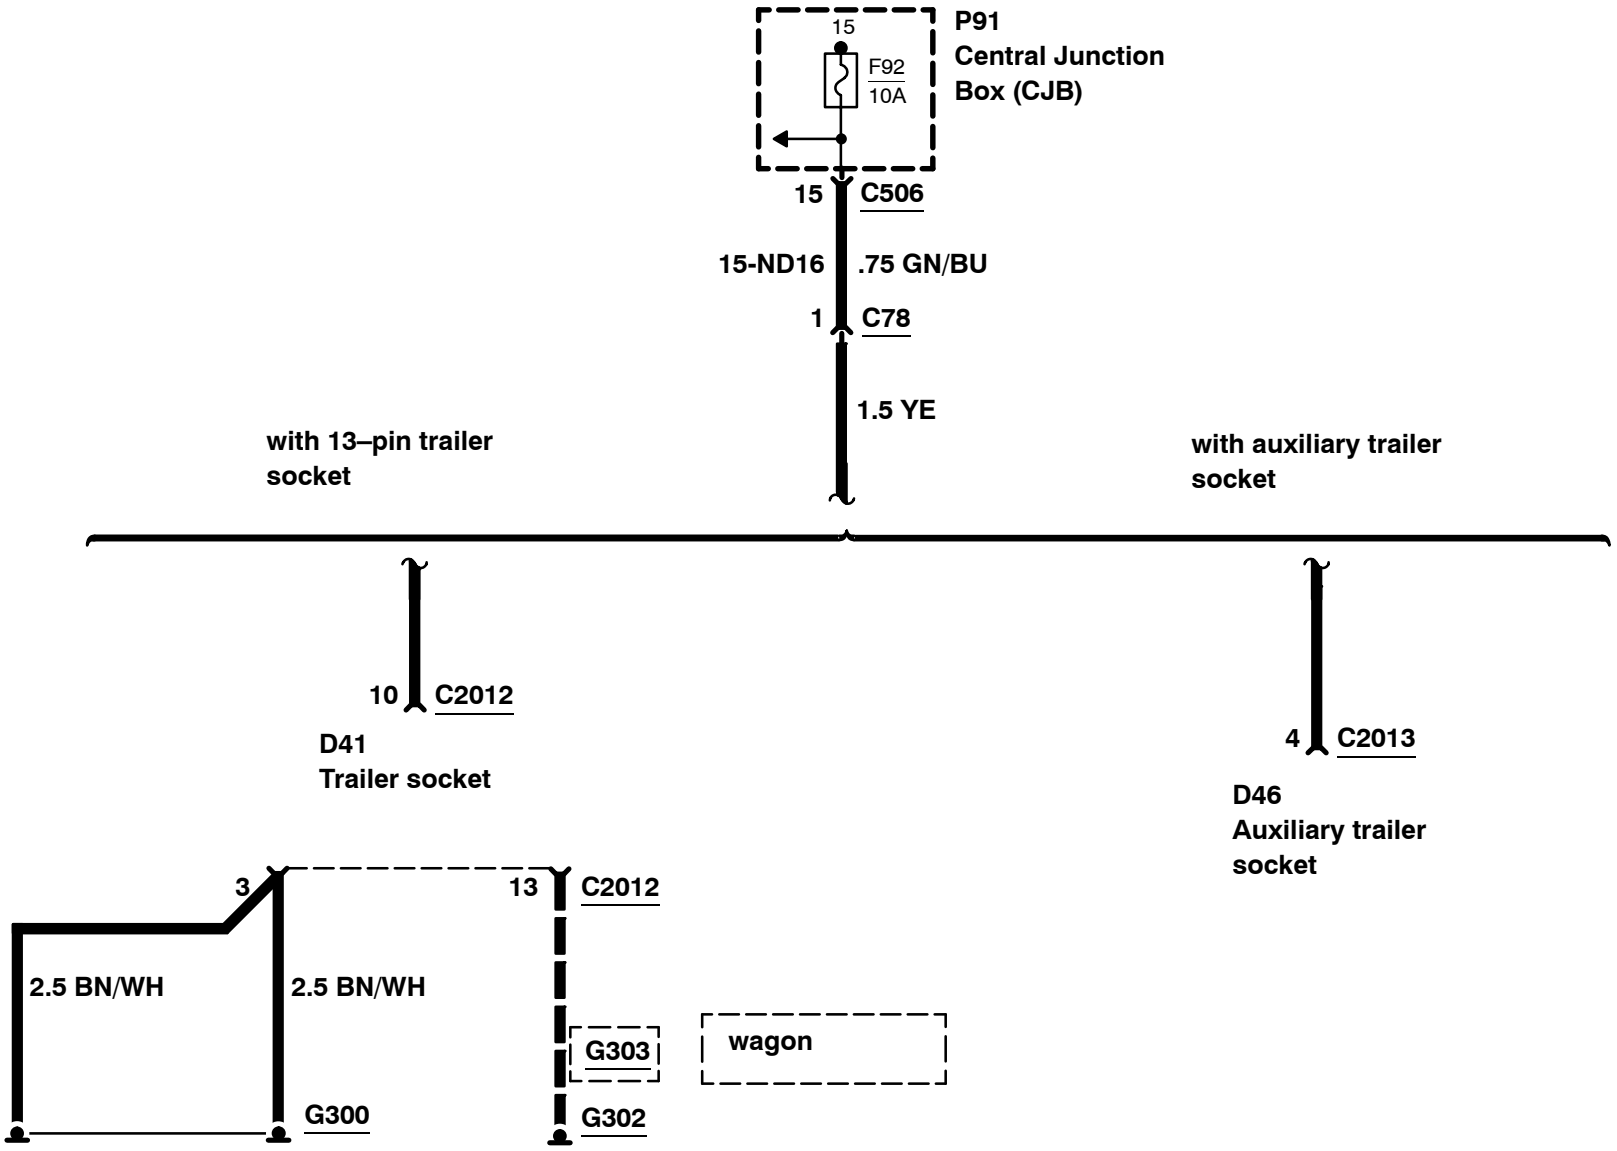


Interior Lighting

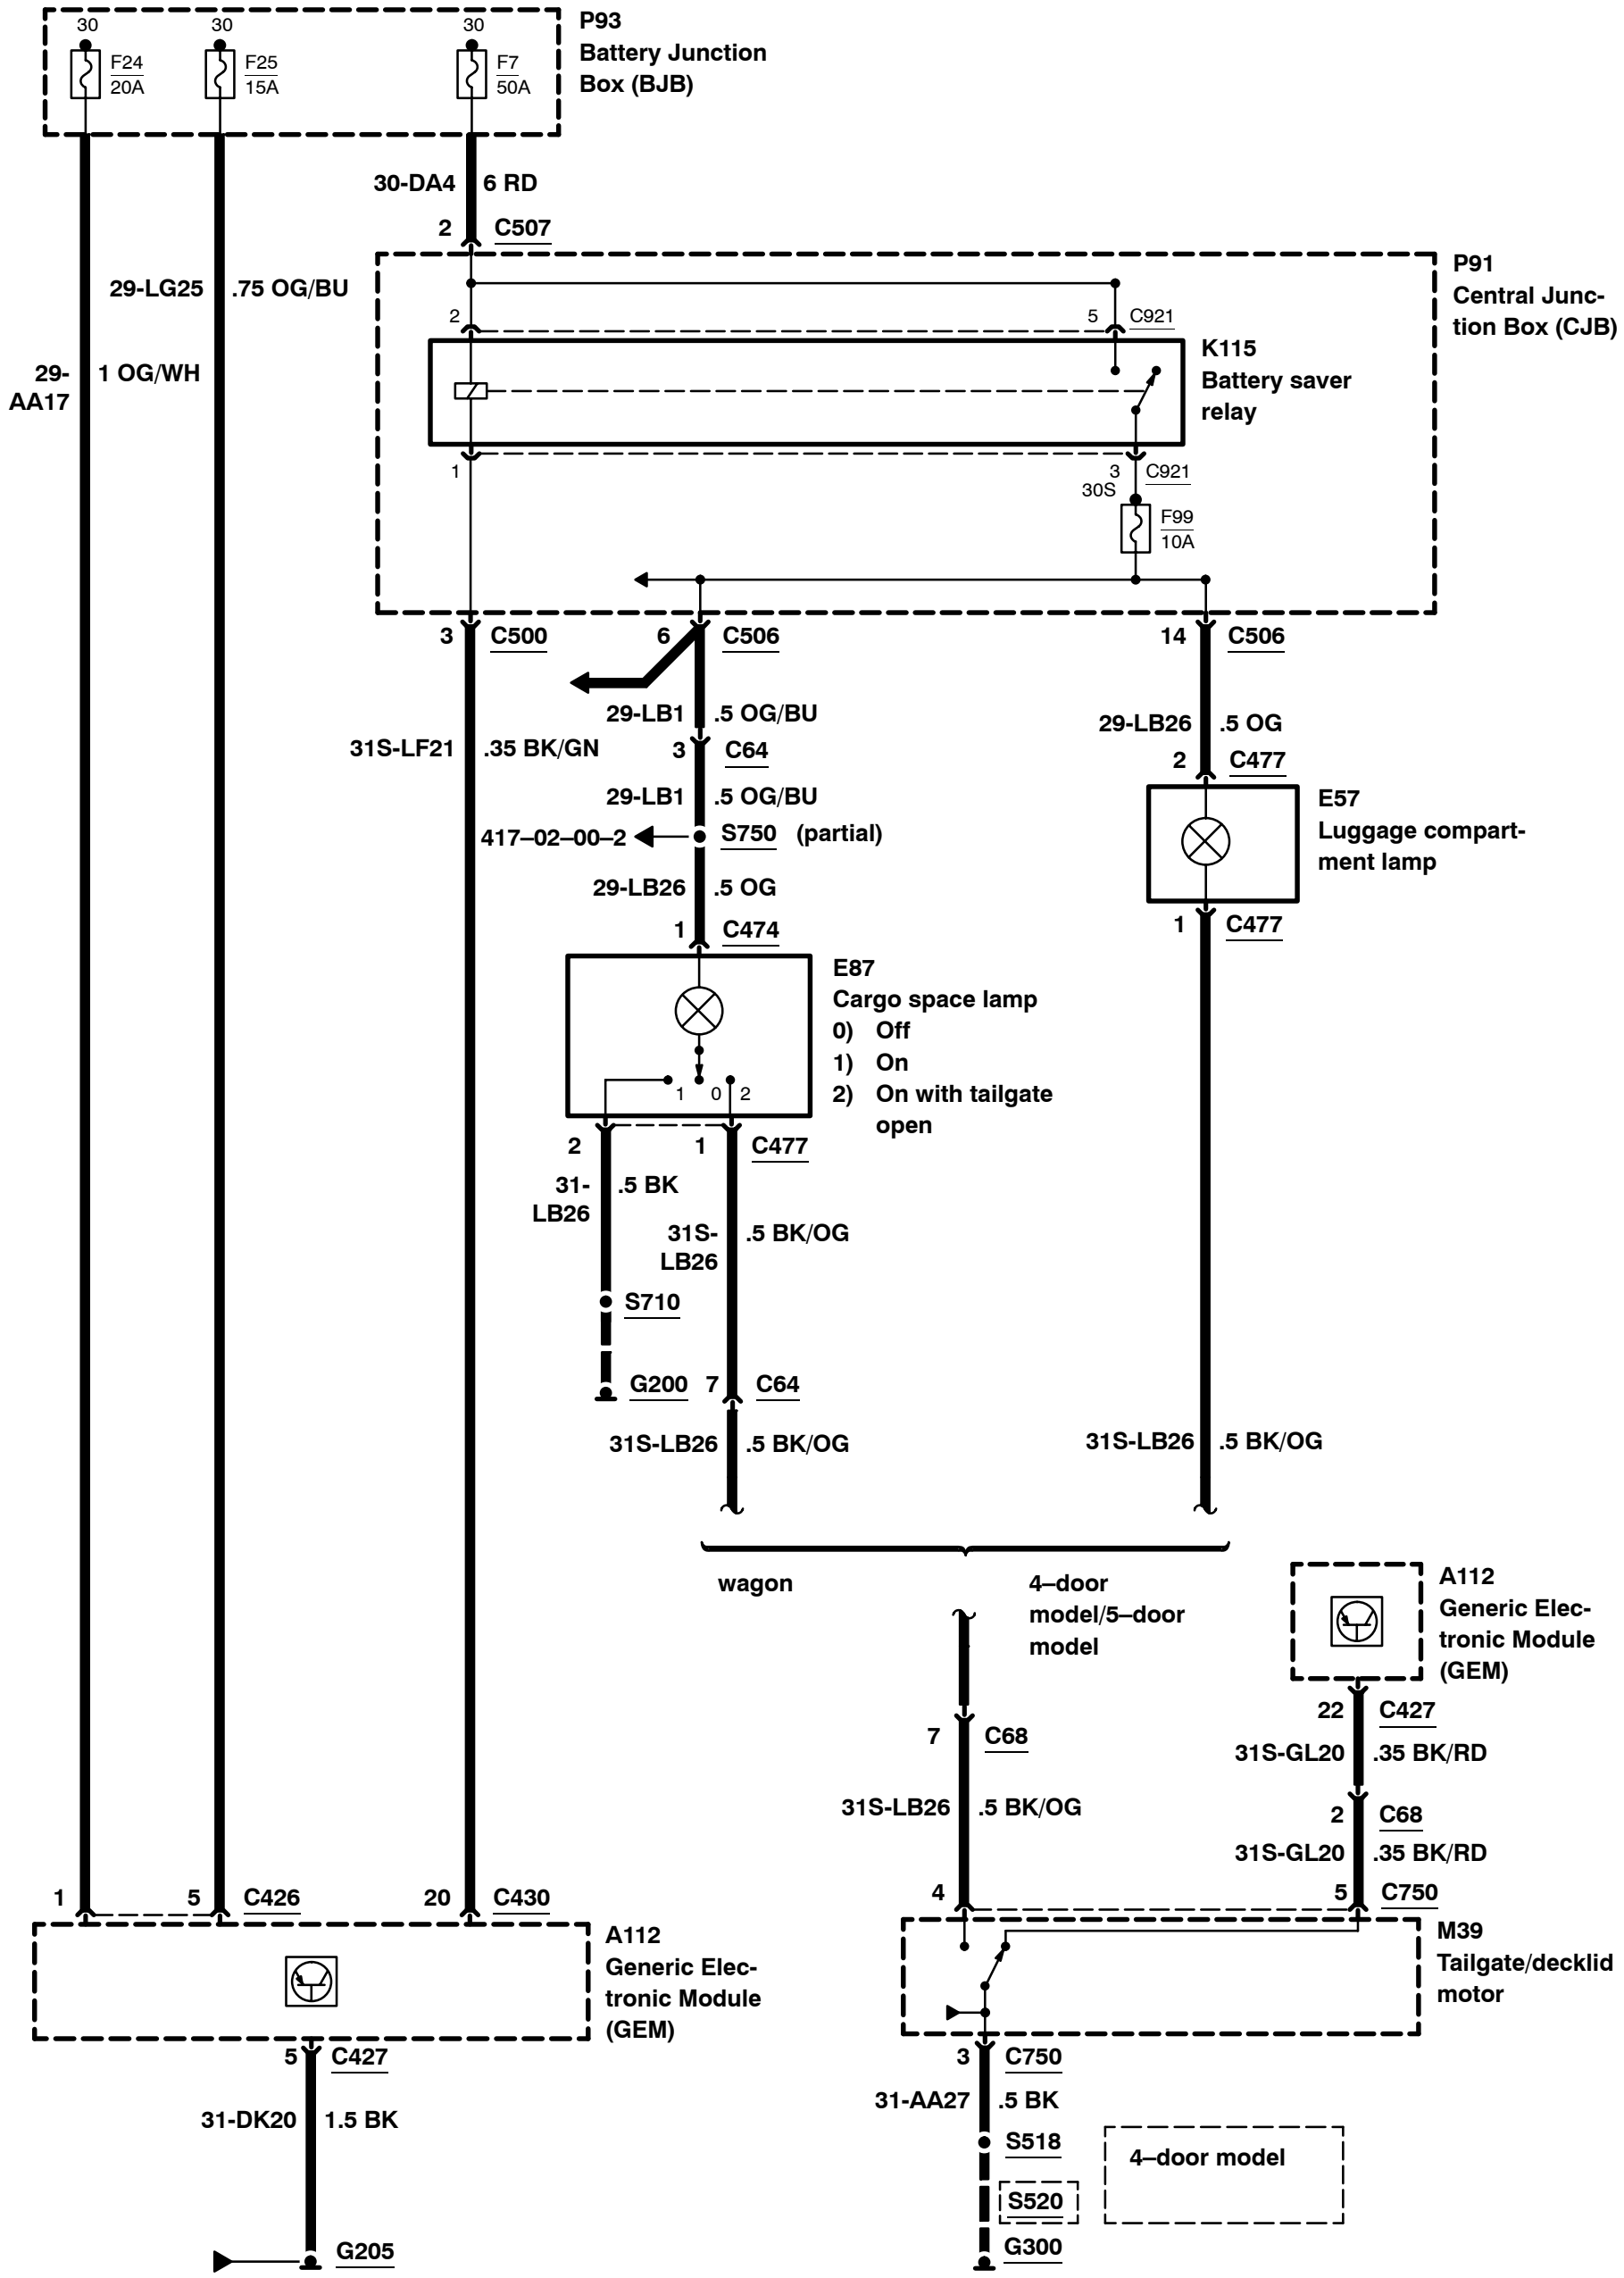


Interior Lighting

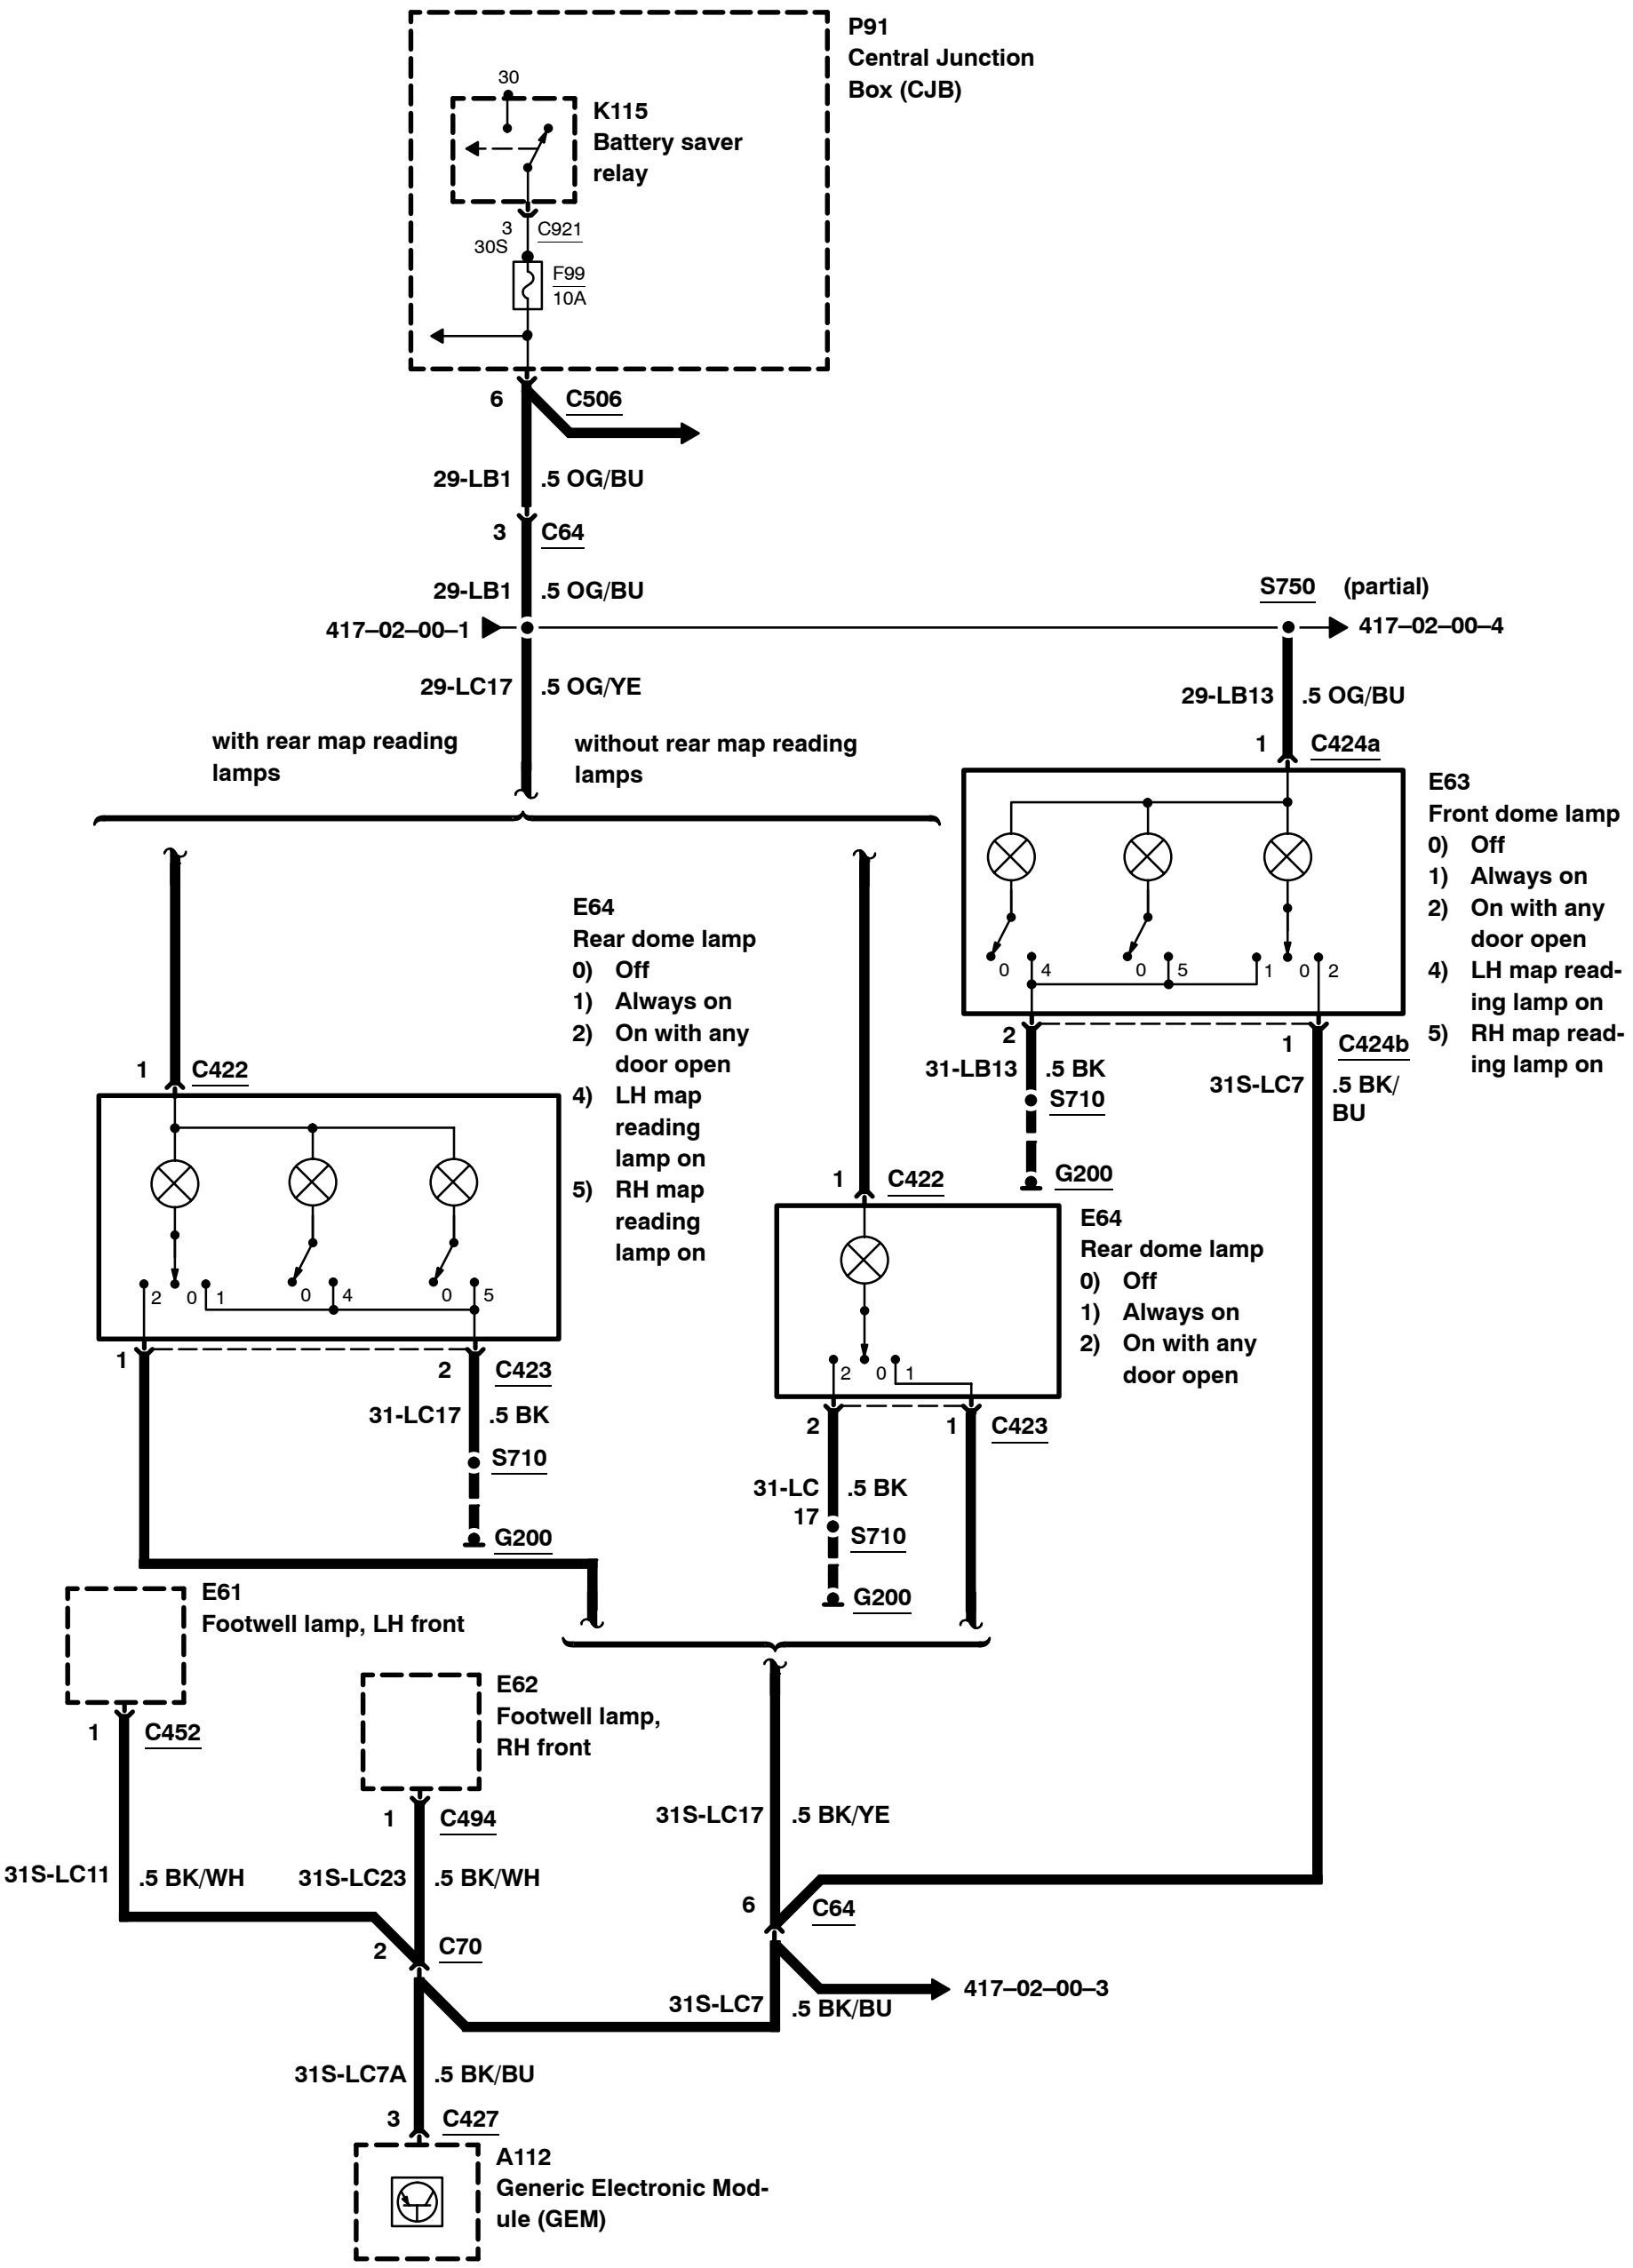


Interior Lighting

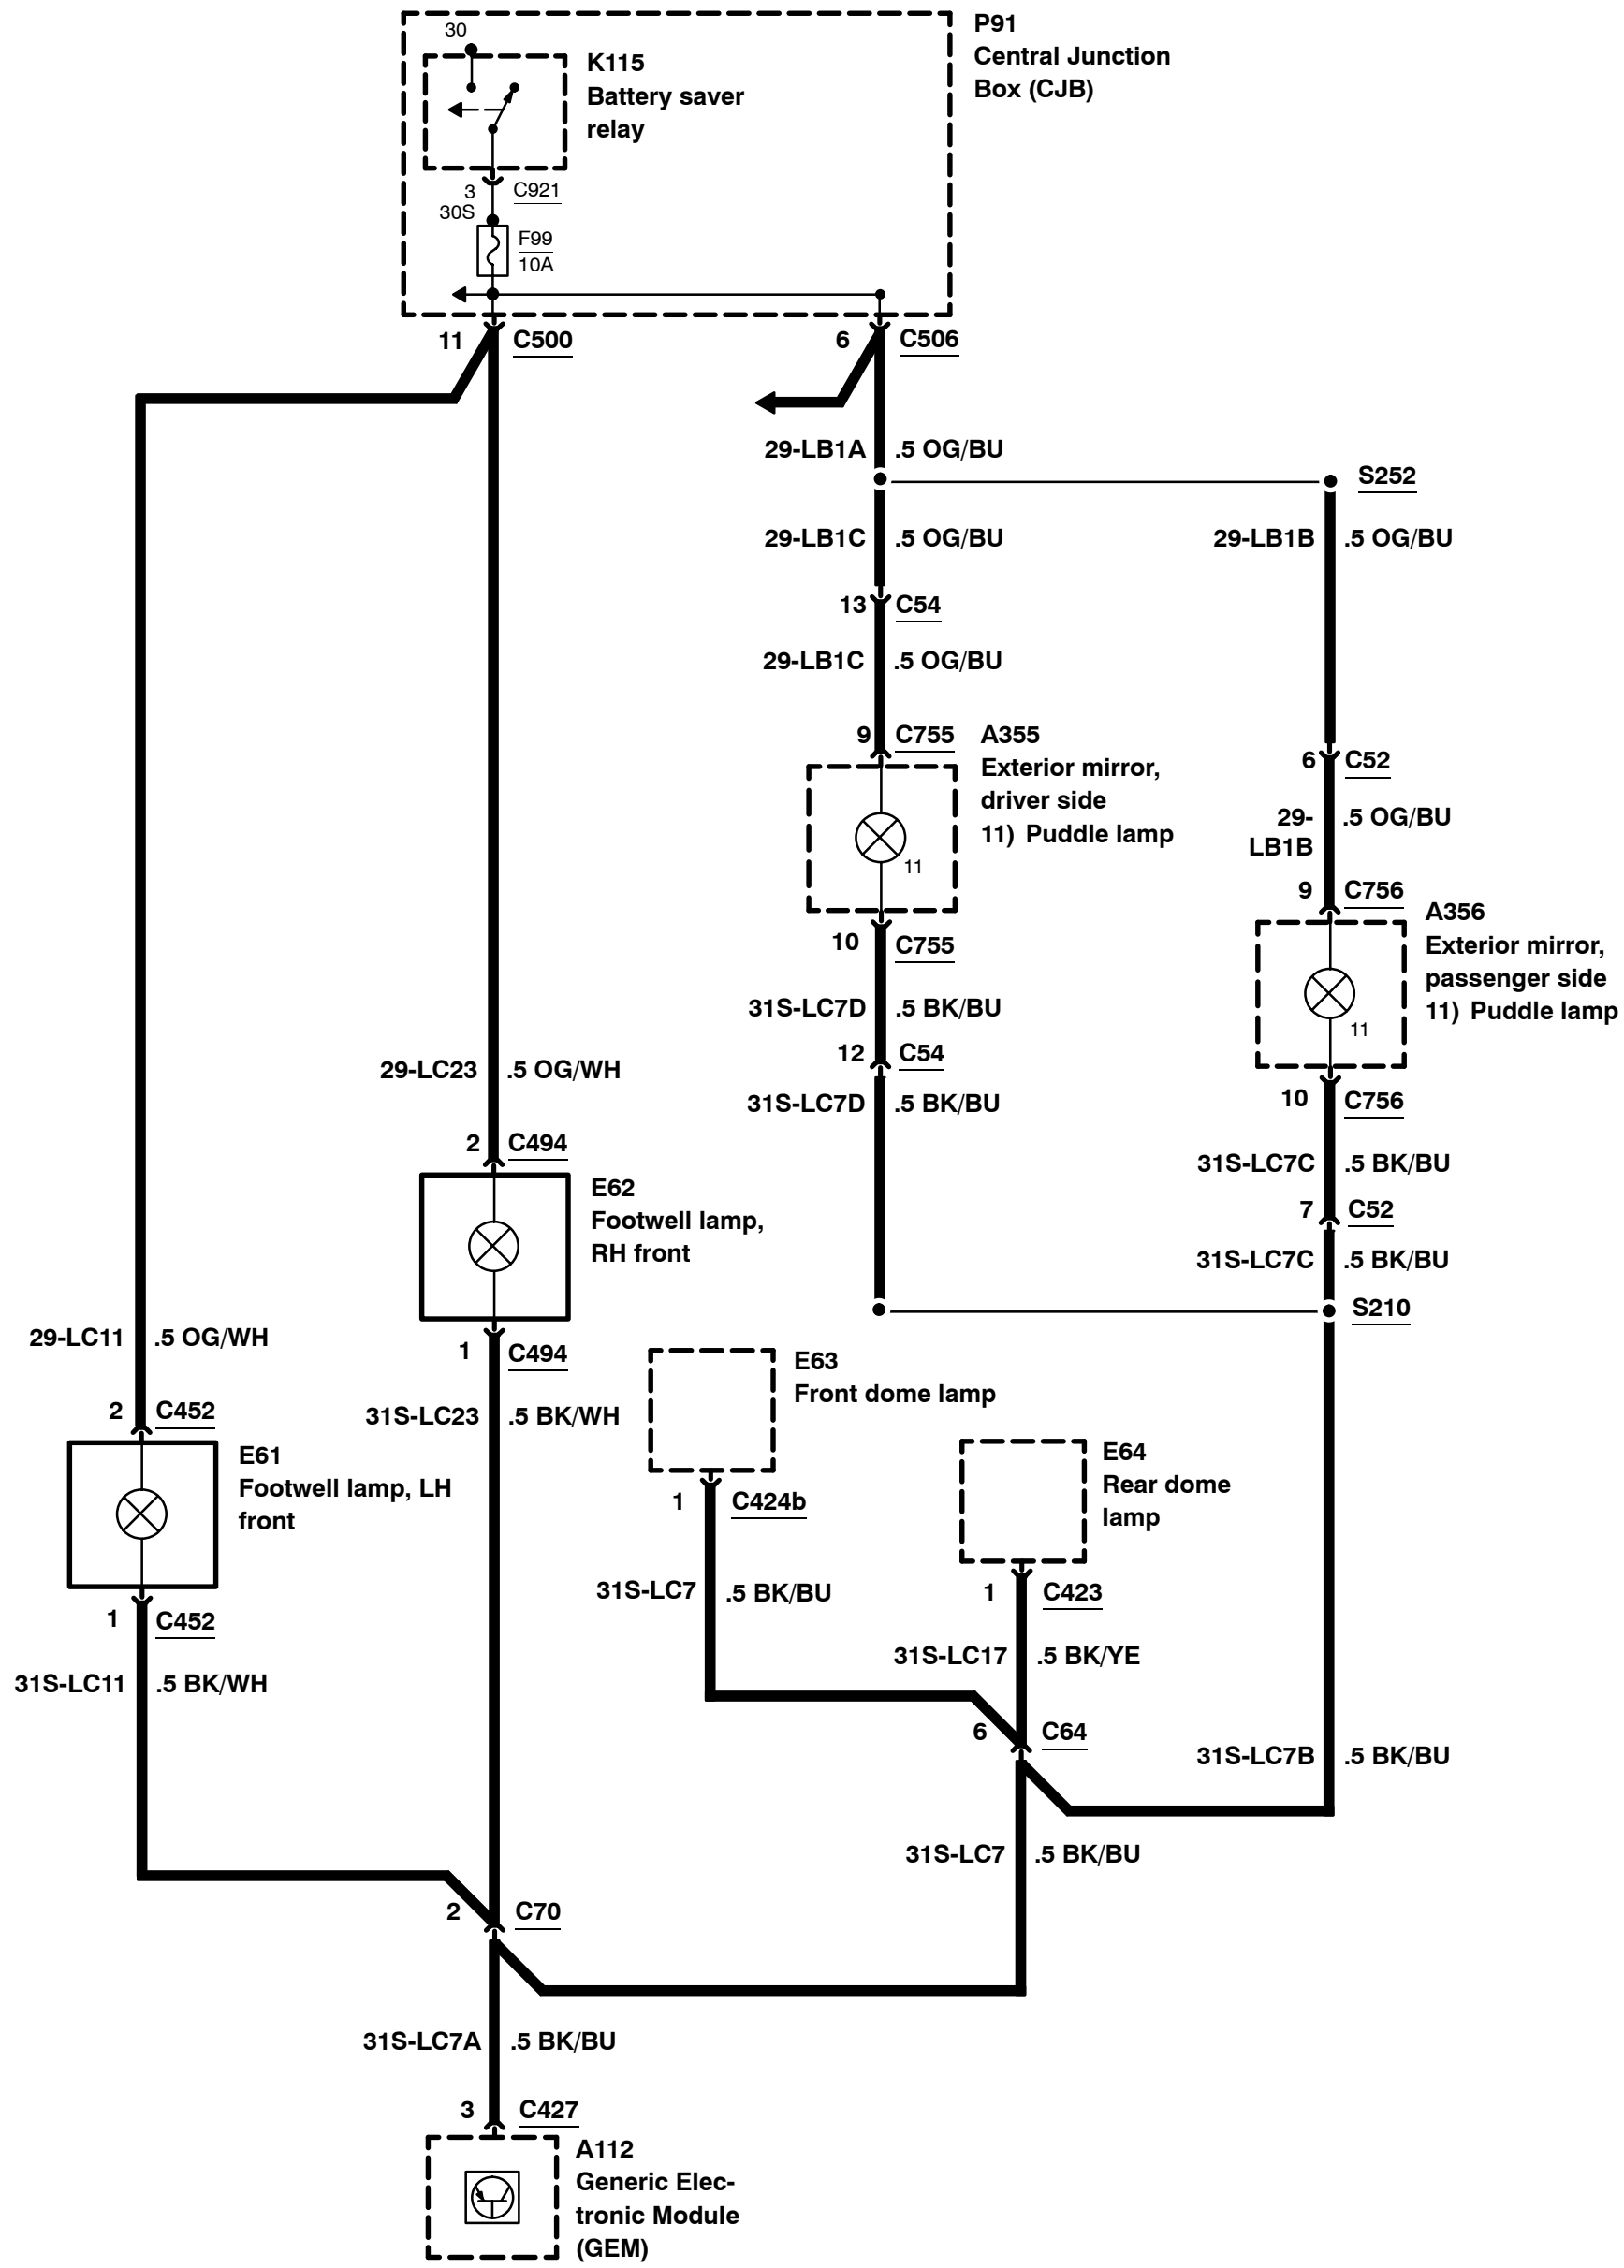


Interior Lighting

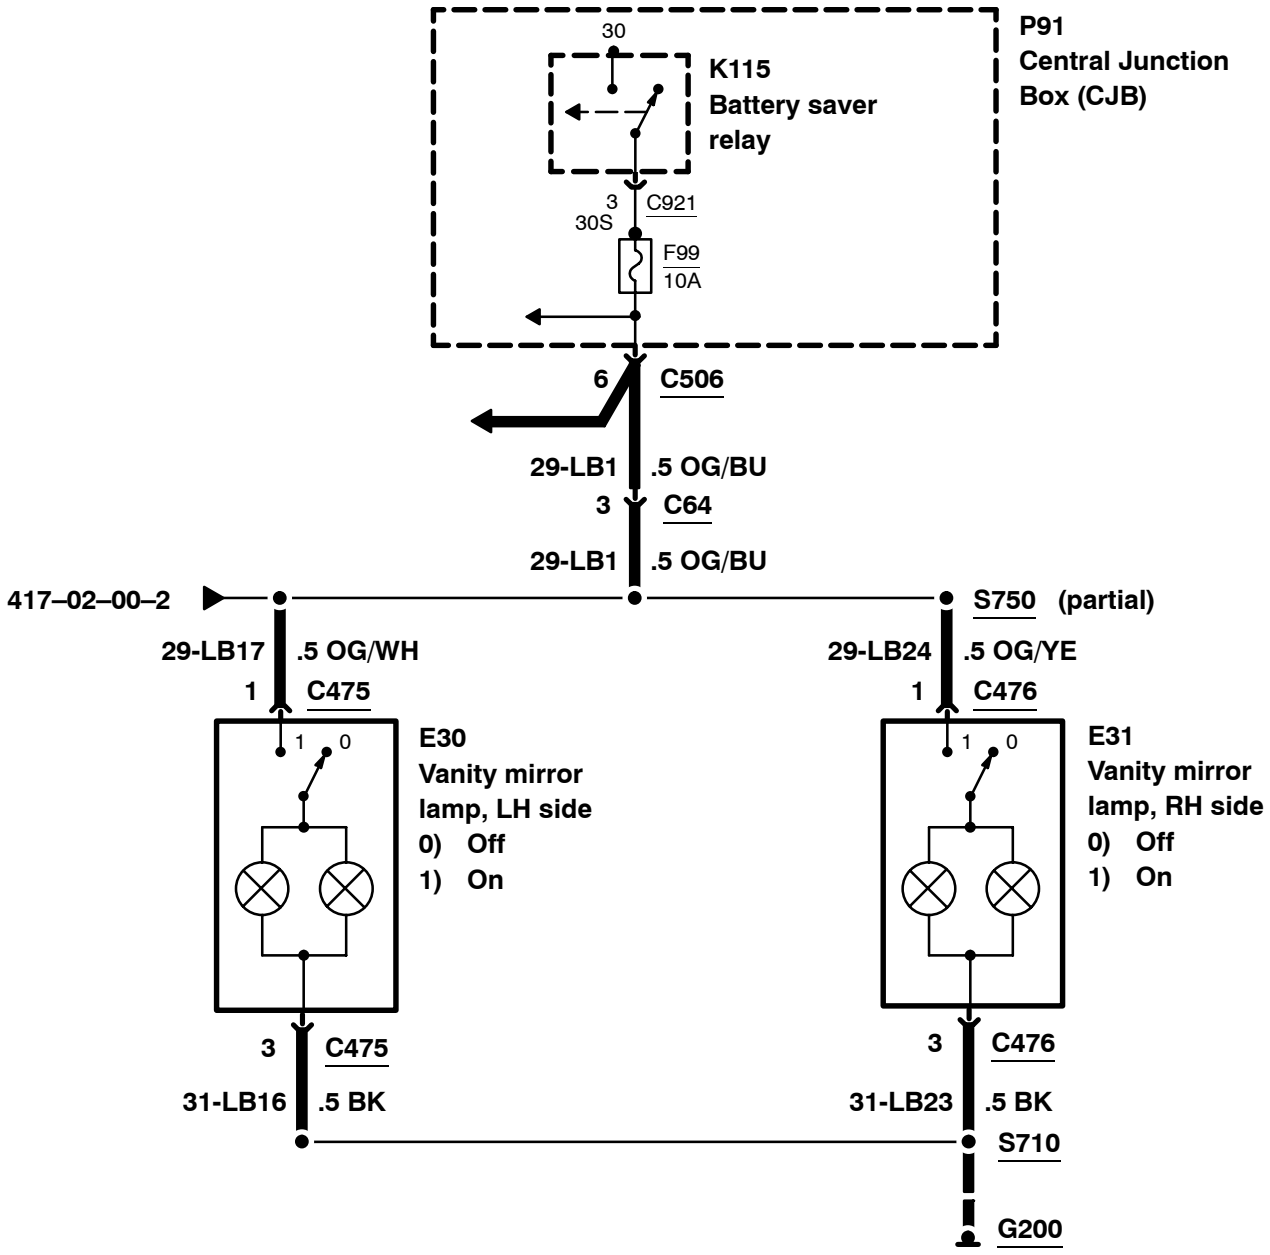


Interior Lighting

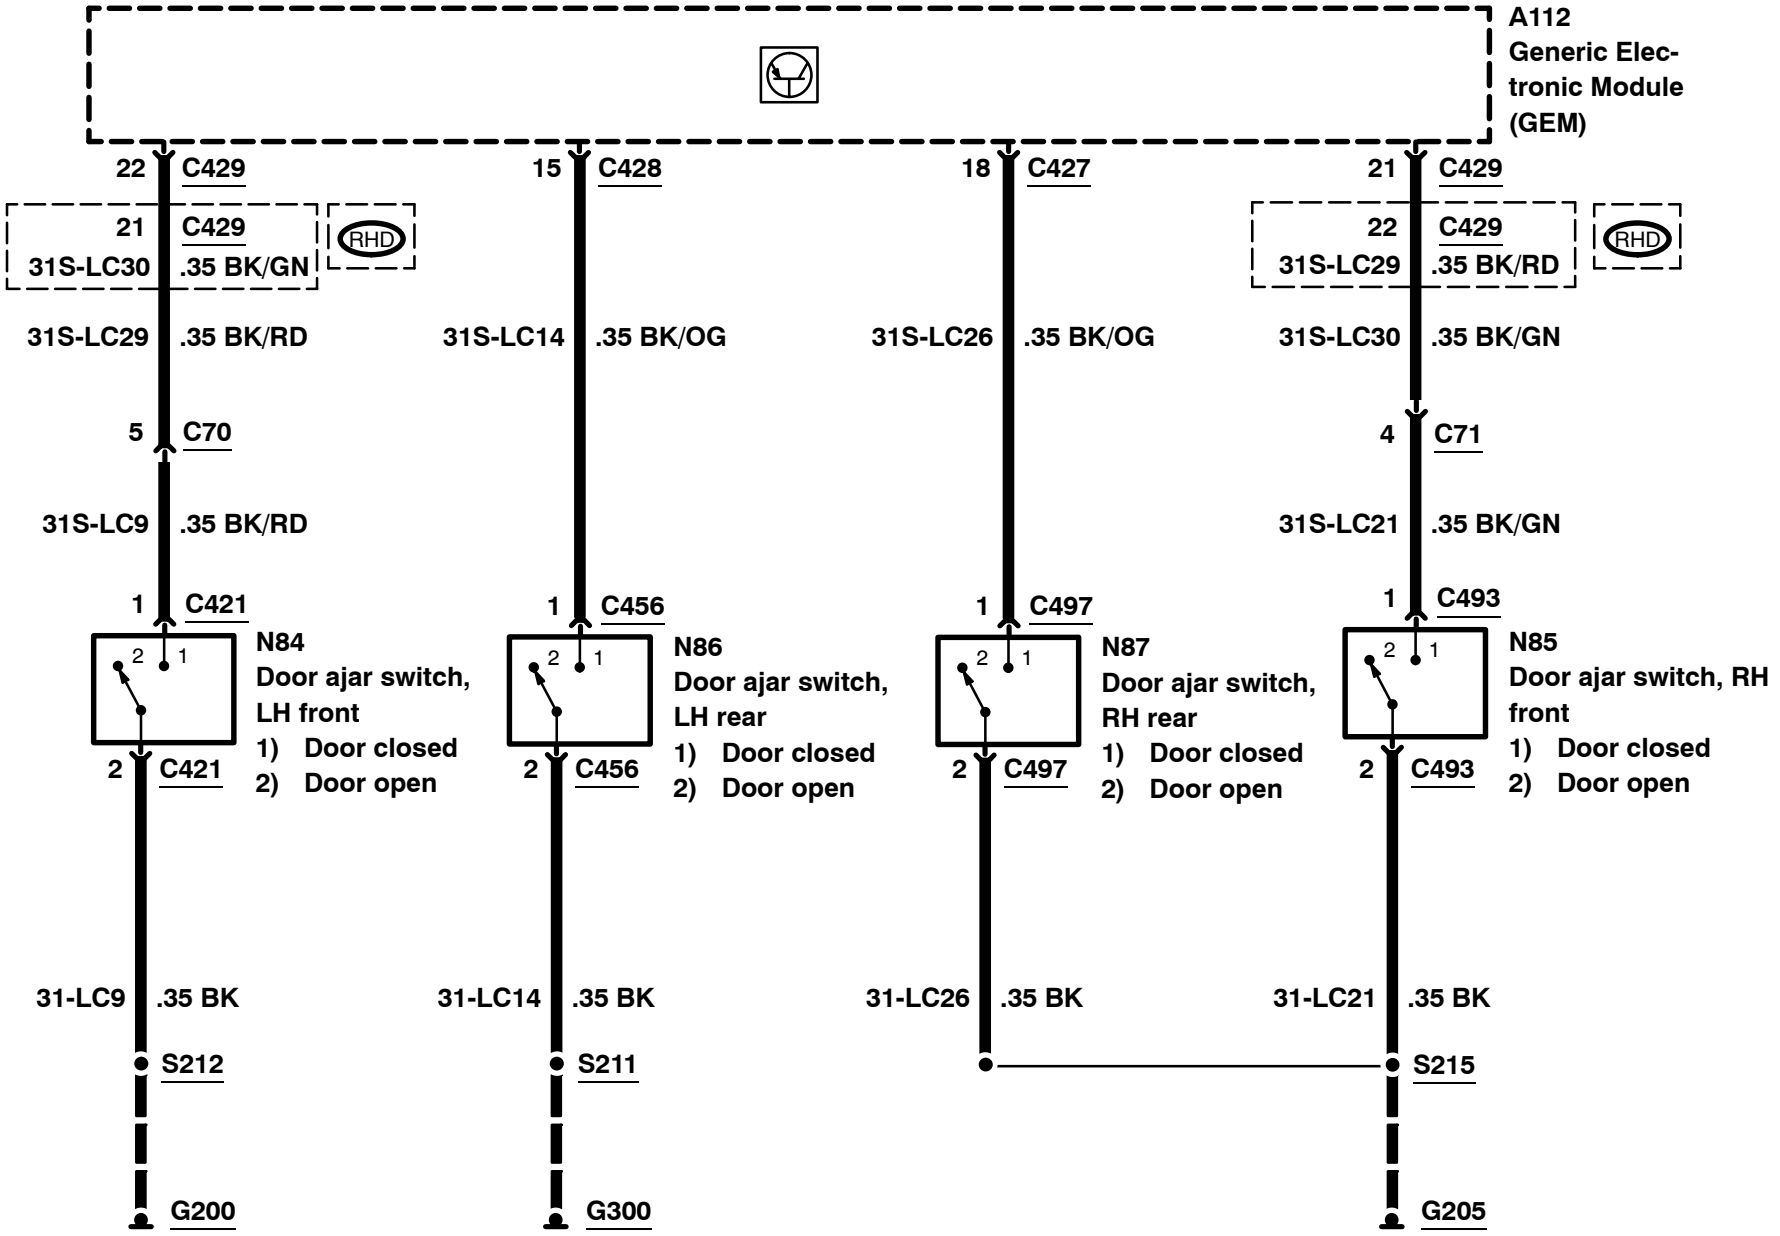


Interior Lighting

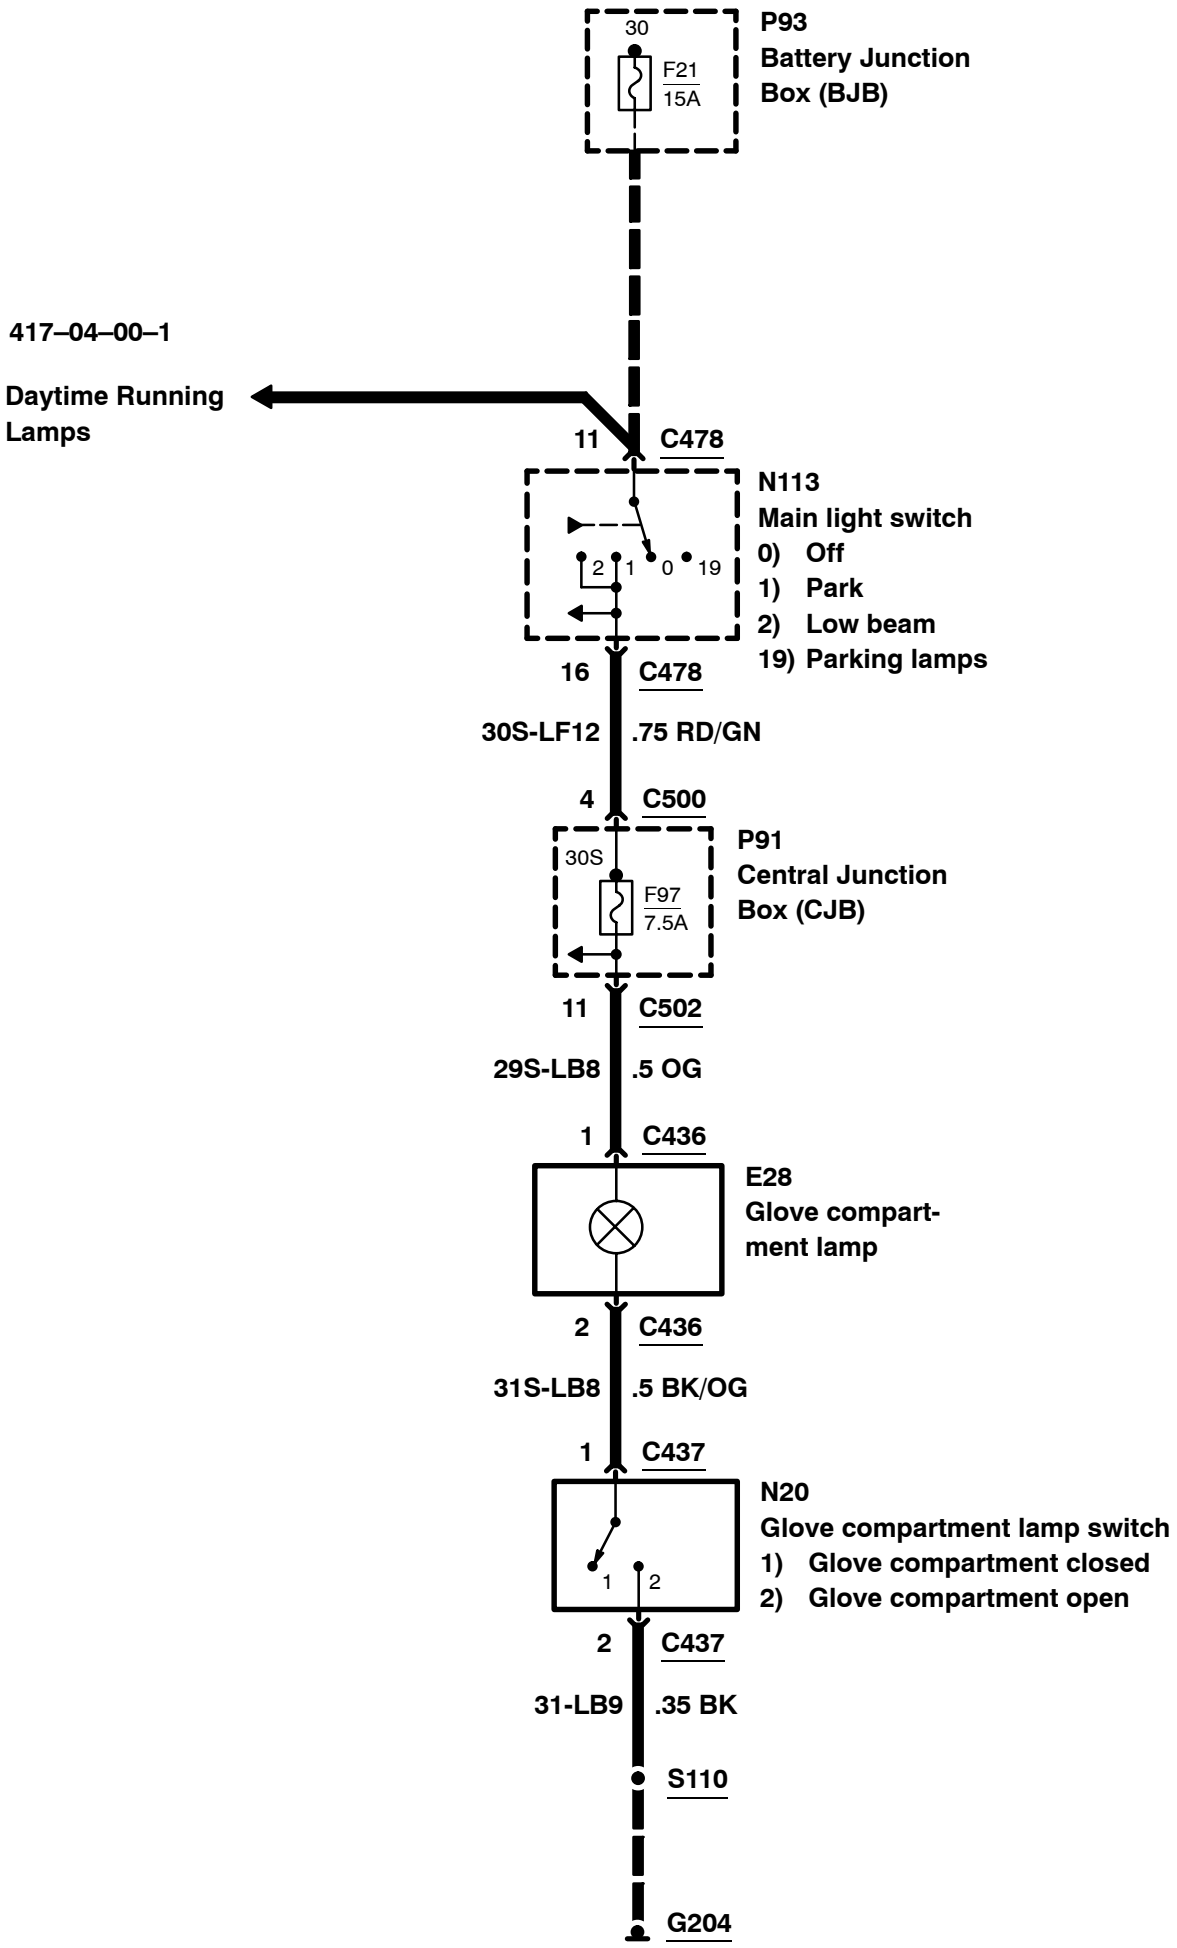


Daytime Running Lamps – Without high intensity discharge headlamps

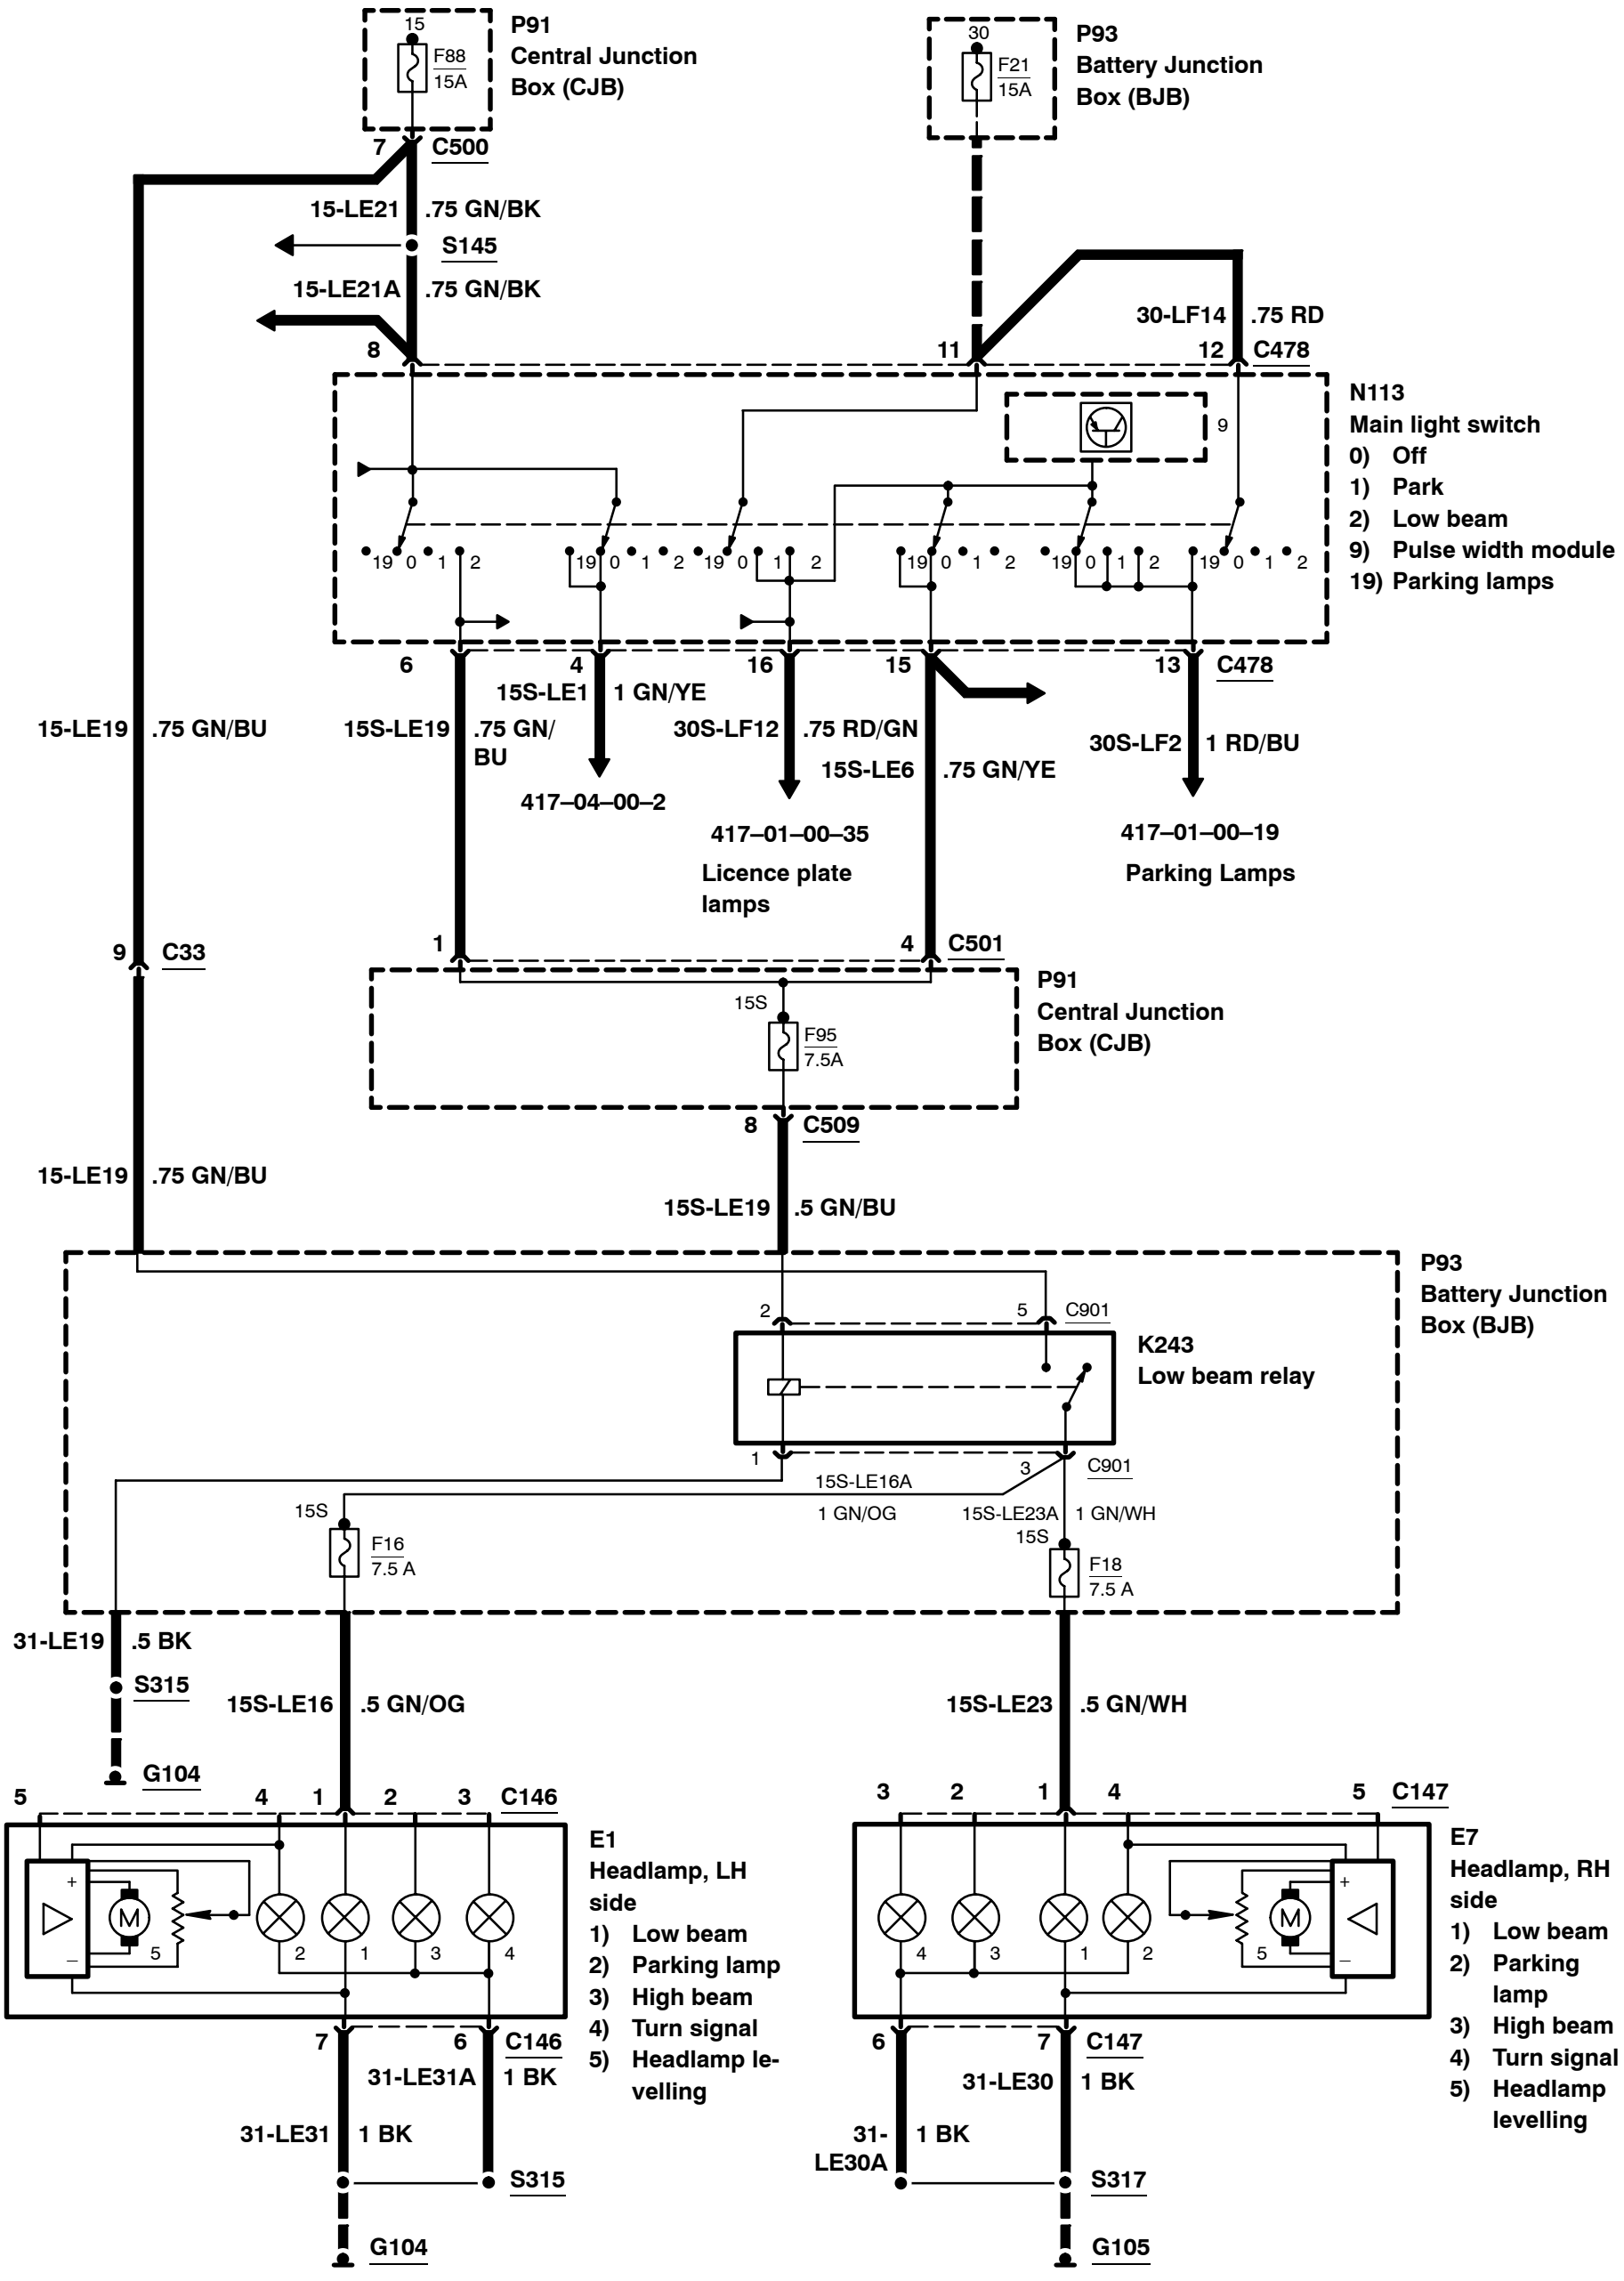


Daytime Running Lamps – without high intensity discharge headlamps

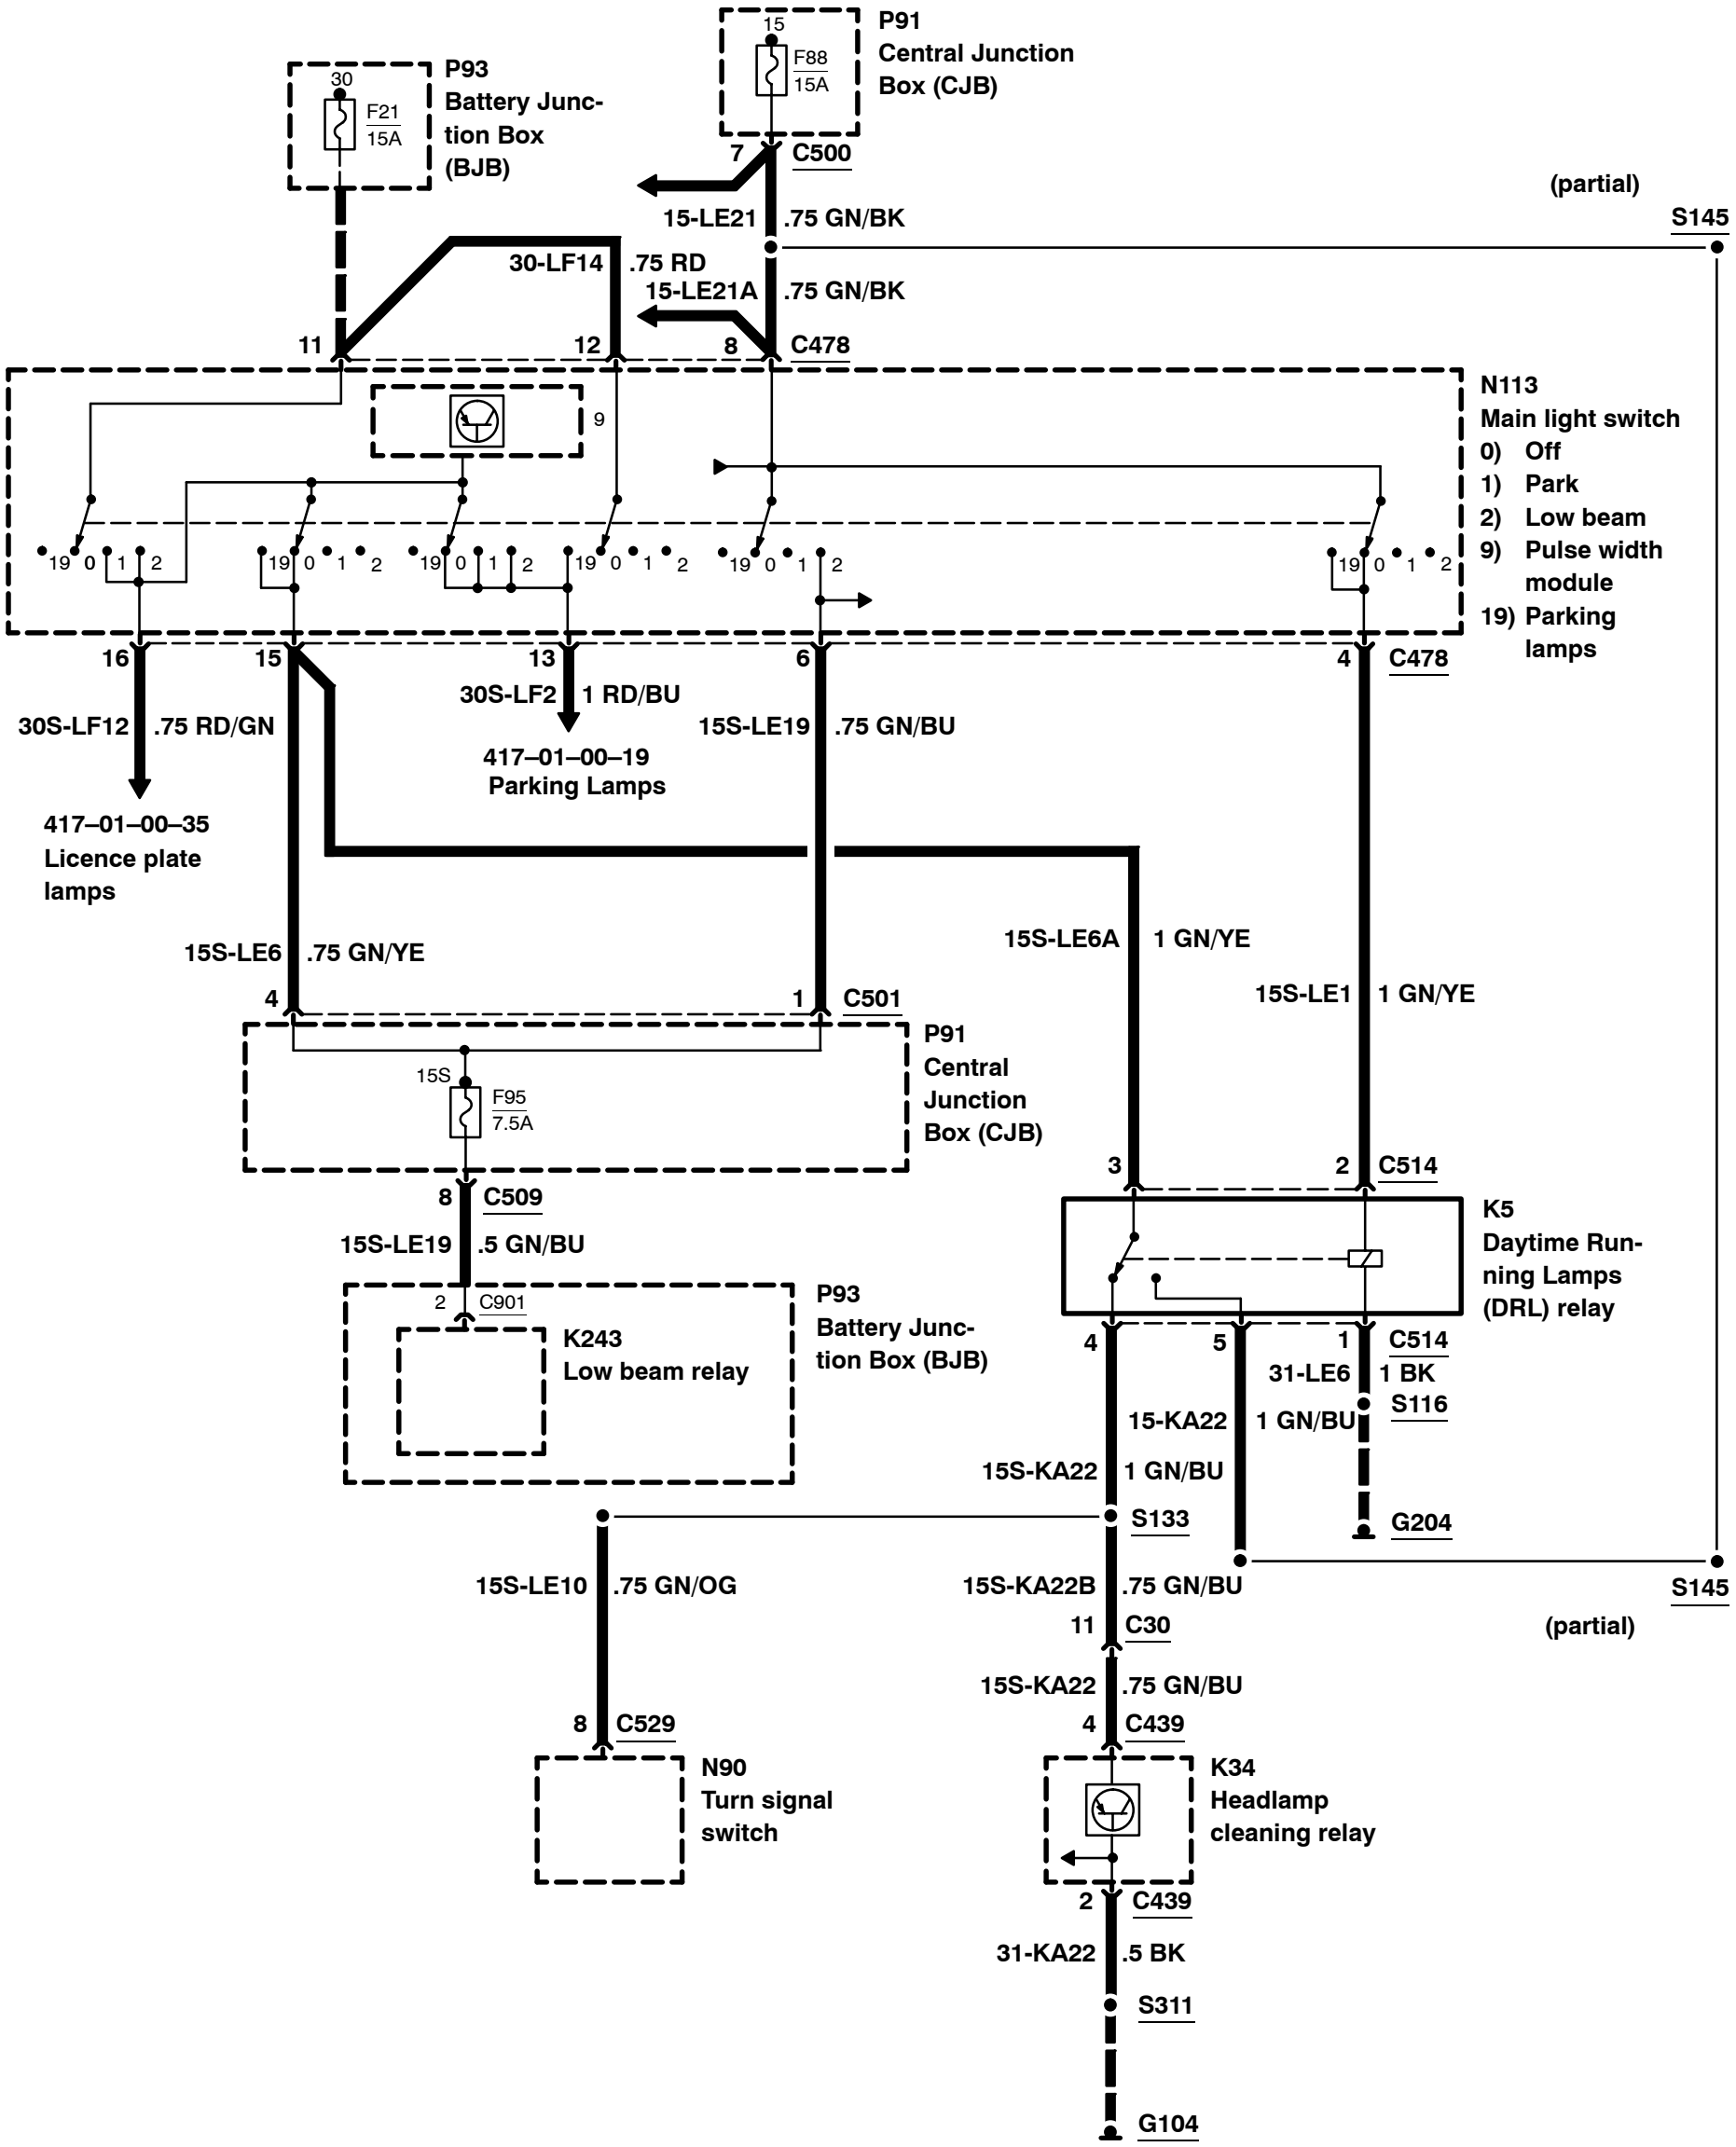


Daytime Running Lamps – With high intensity discharge headlamps

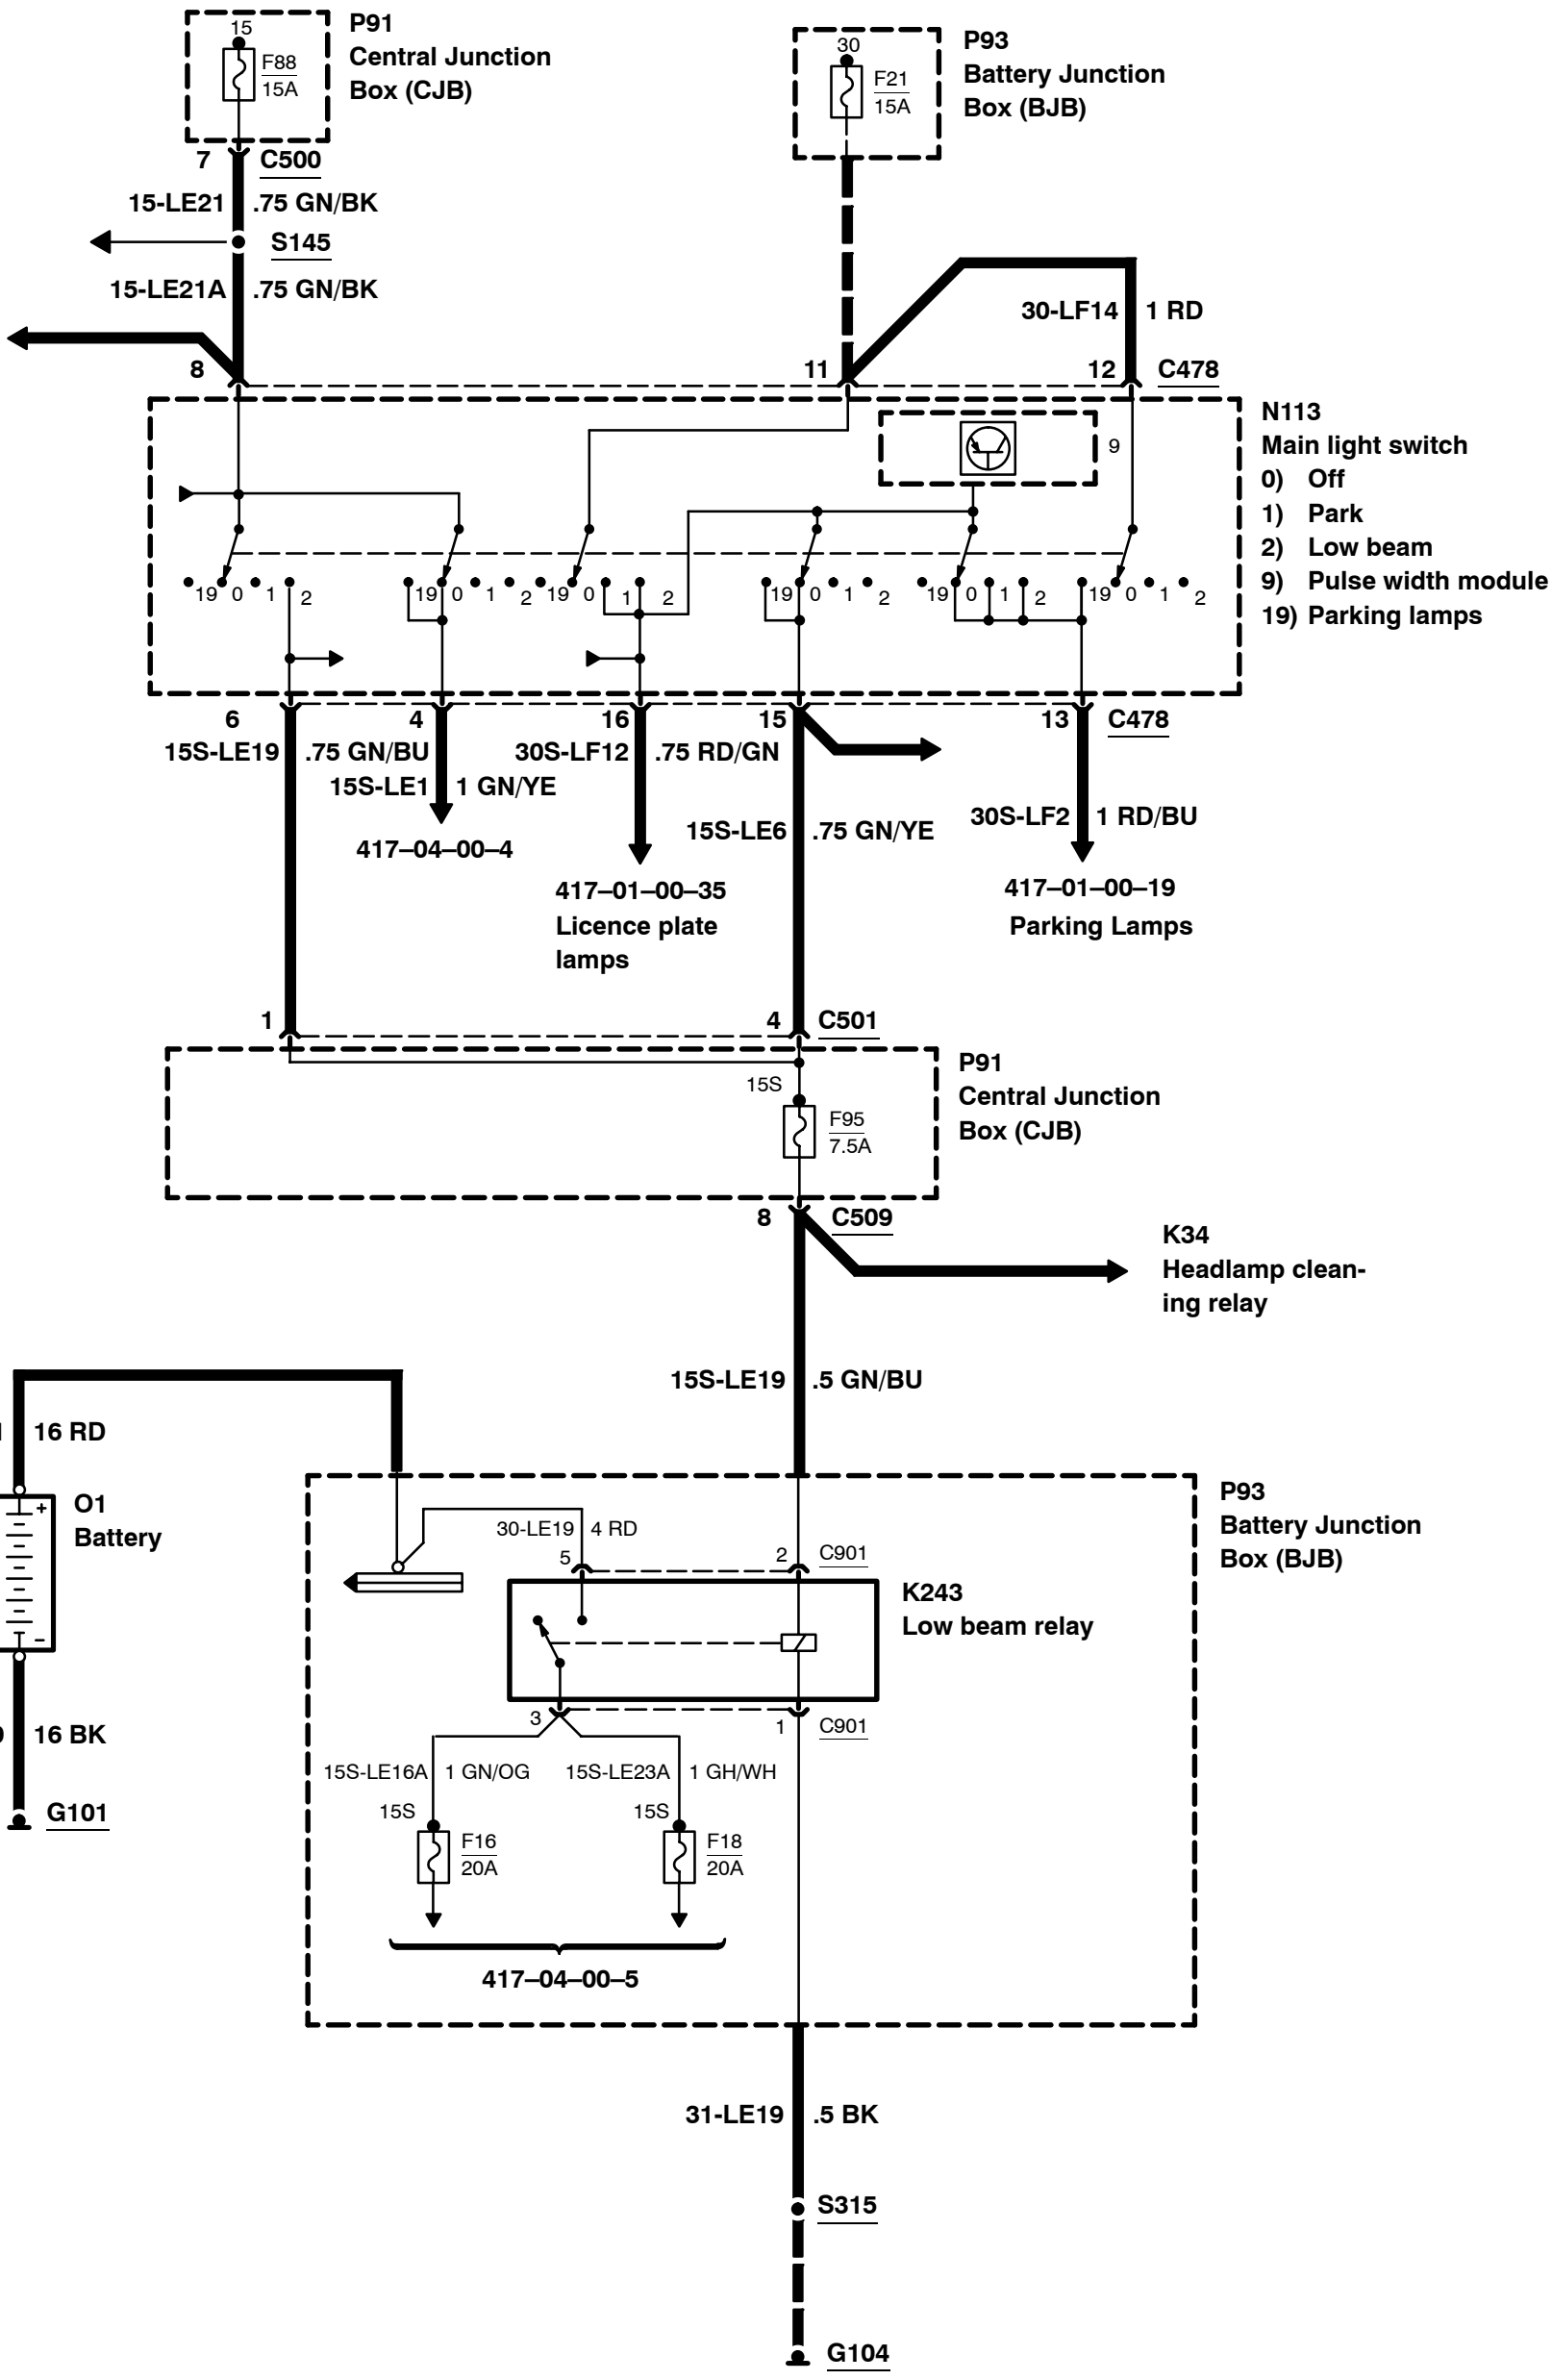


Daytime Running Lamps – with high intensity discharge headlamps

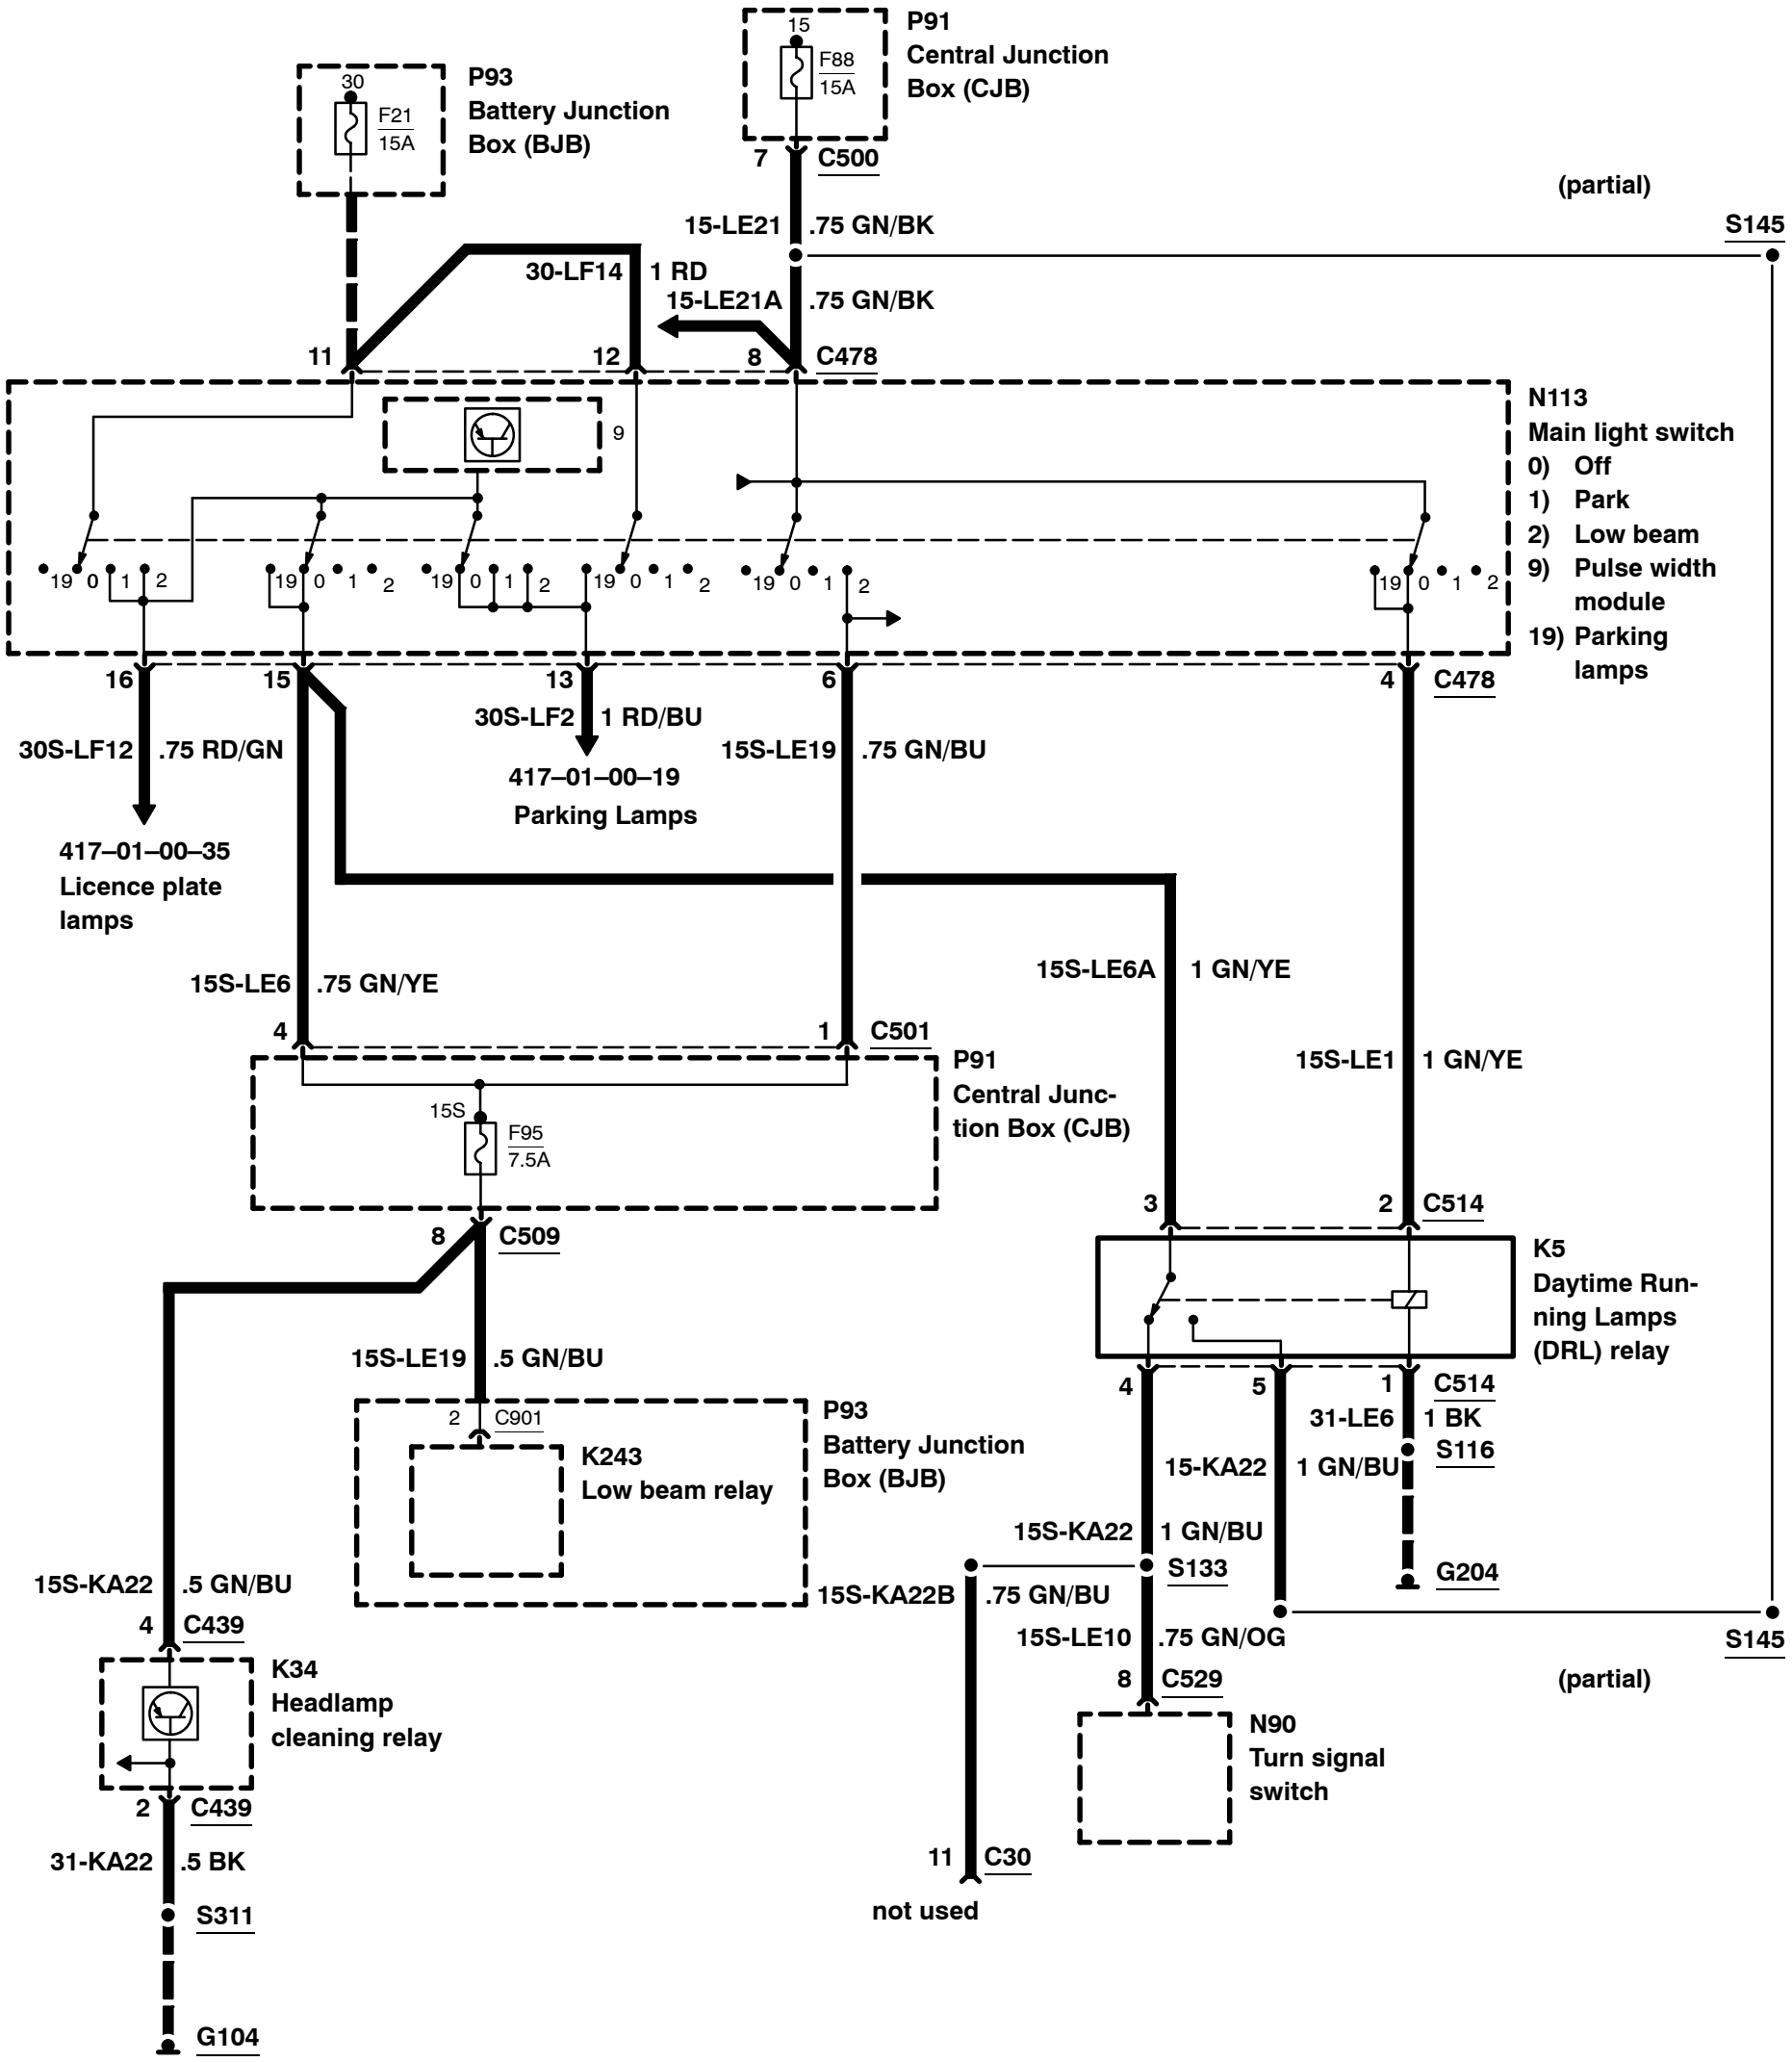


Daytime Running Lamps – With high intensity discharge headlamps

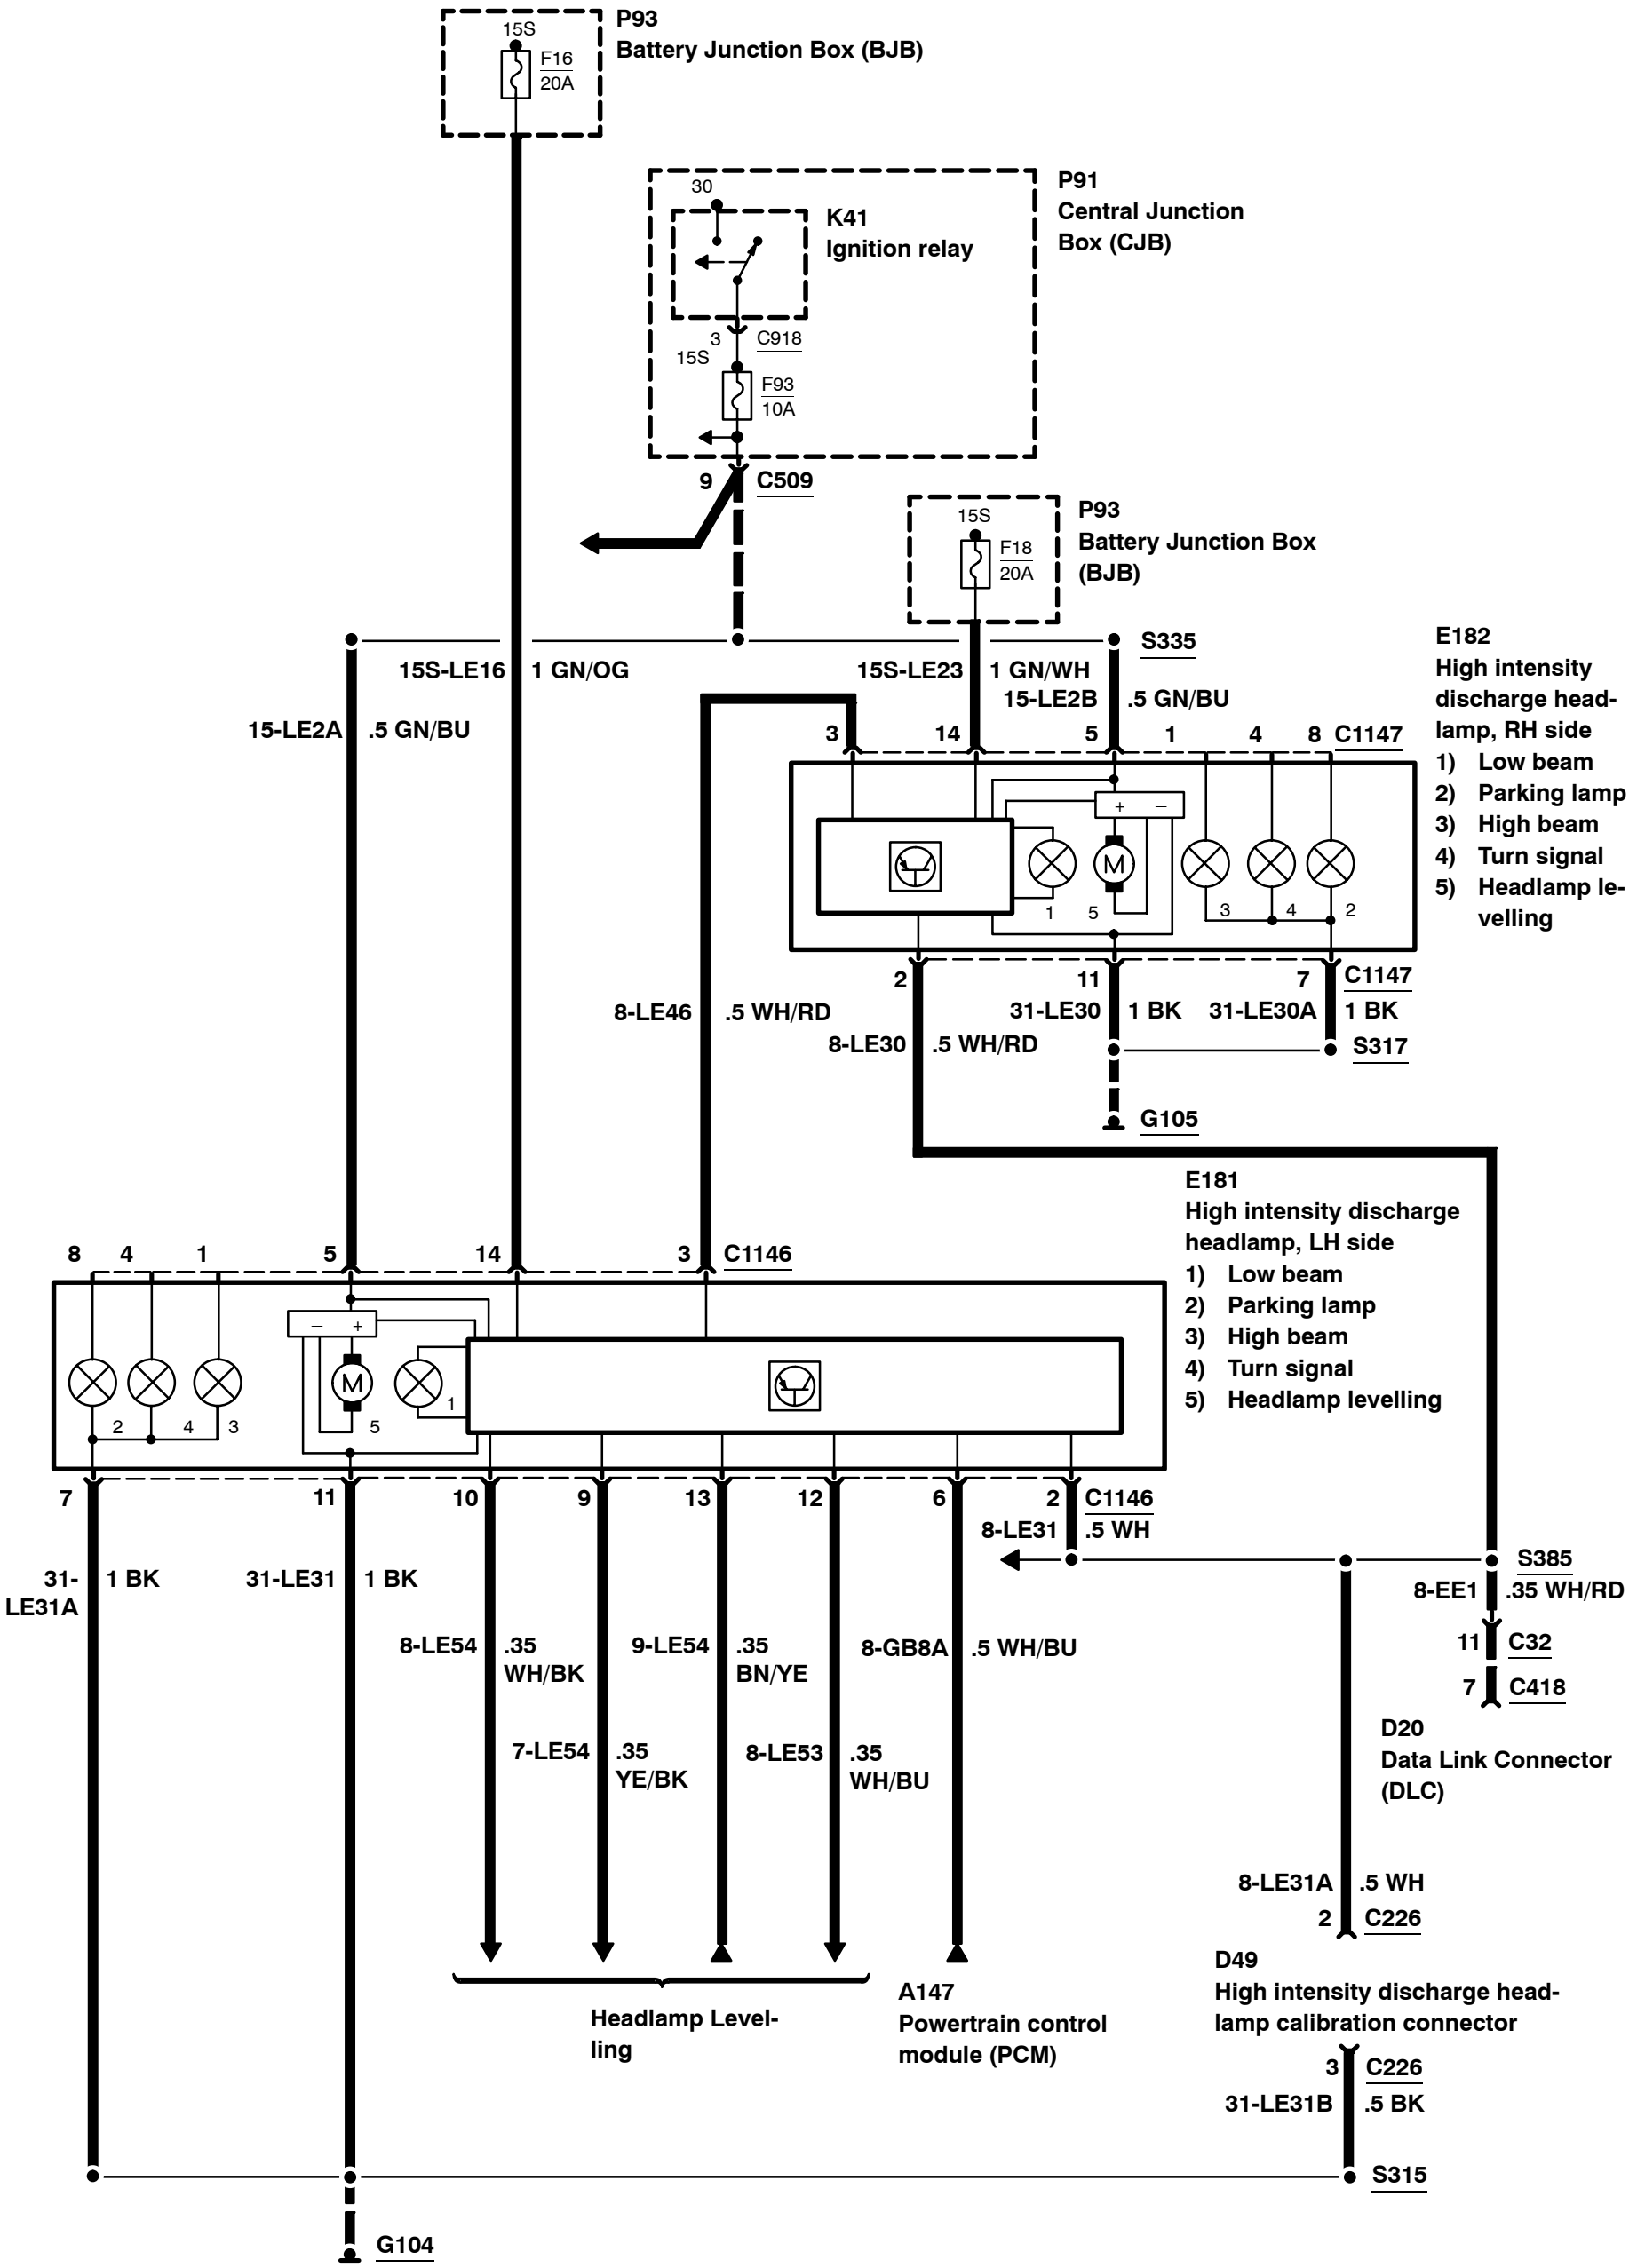


Daytime Running Lamps – without trailer socket, 4–door model/5–door model

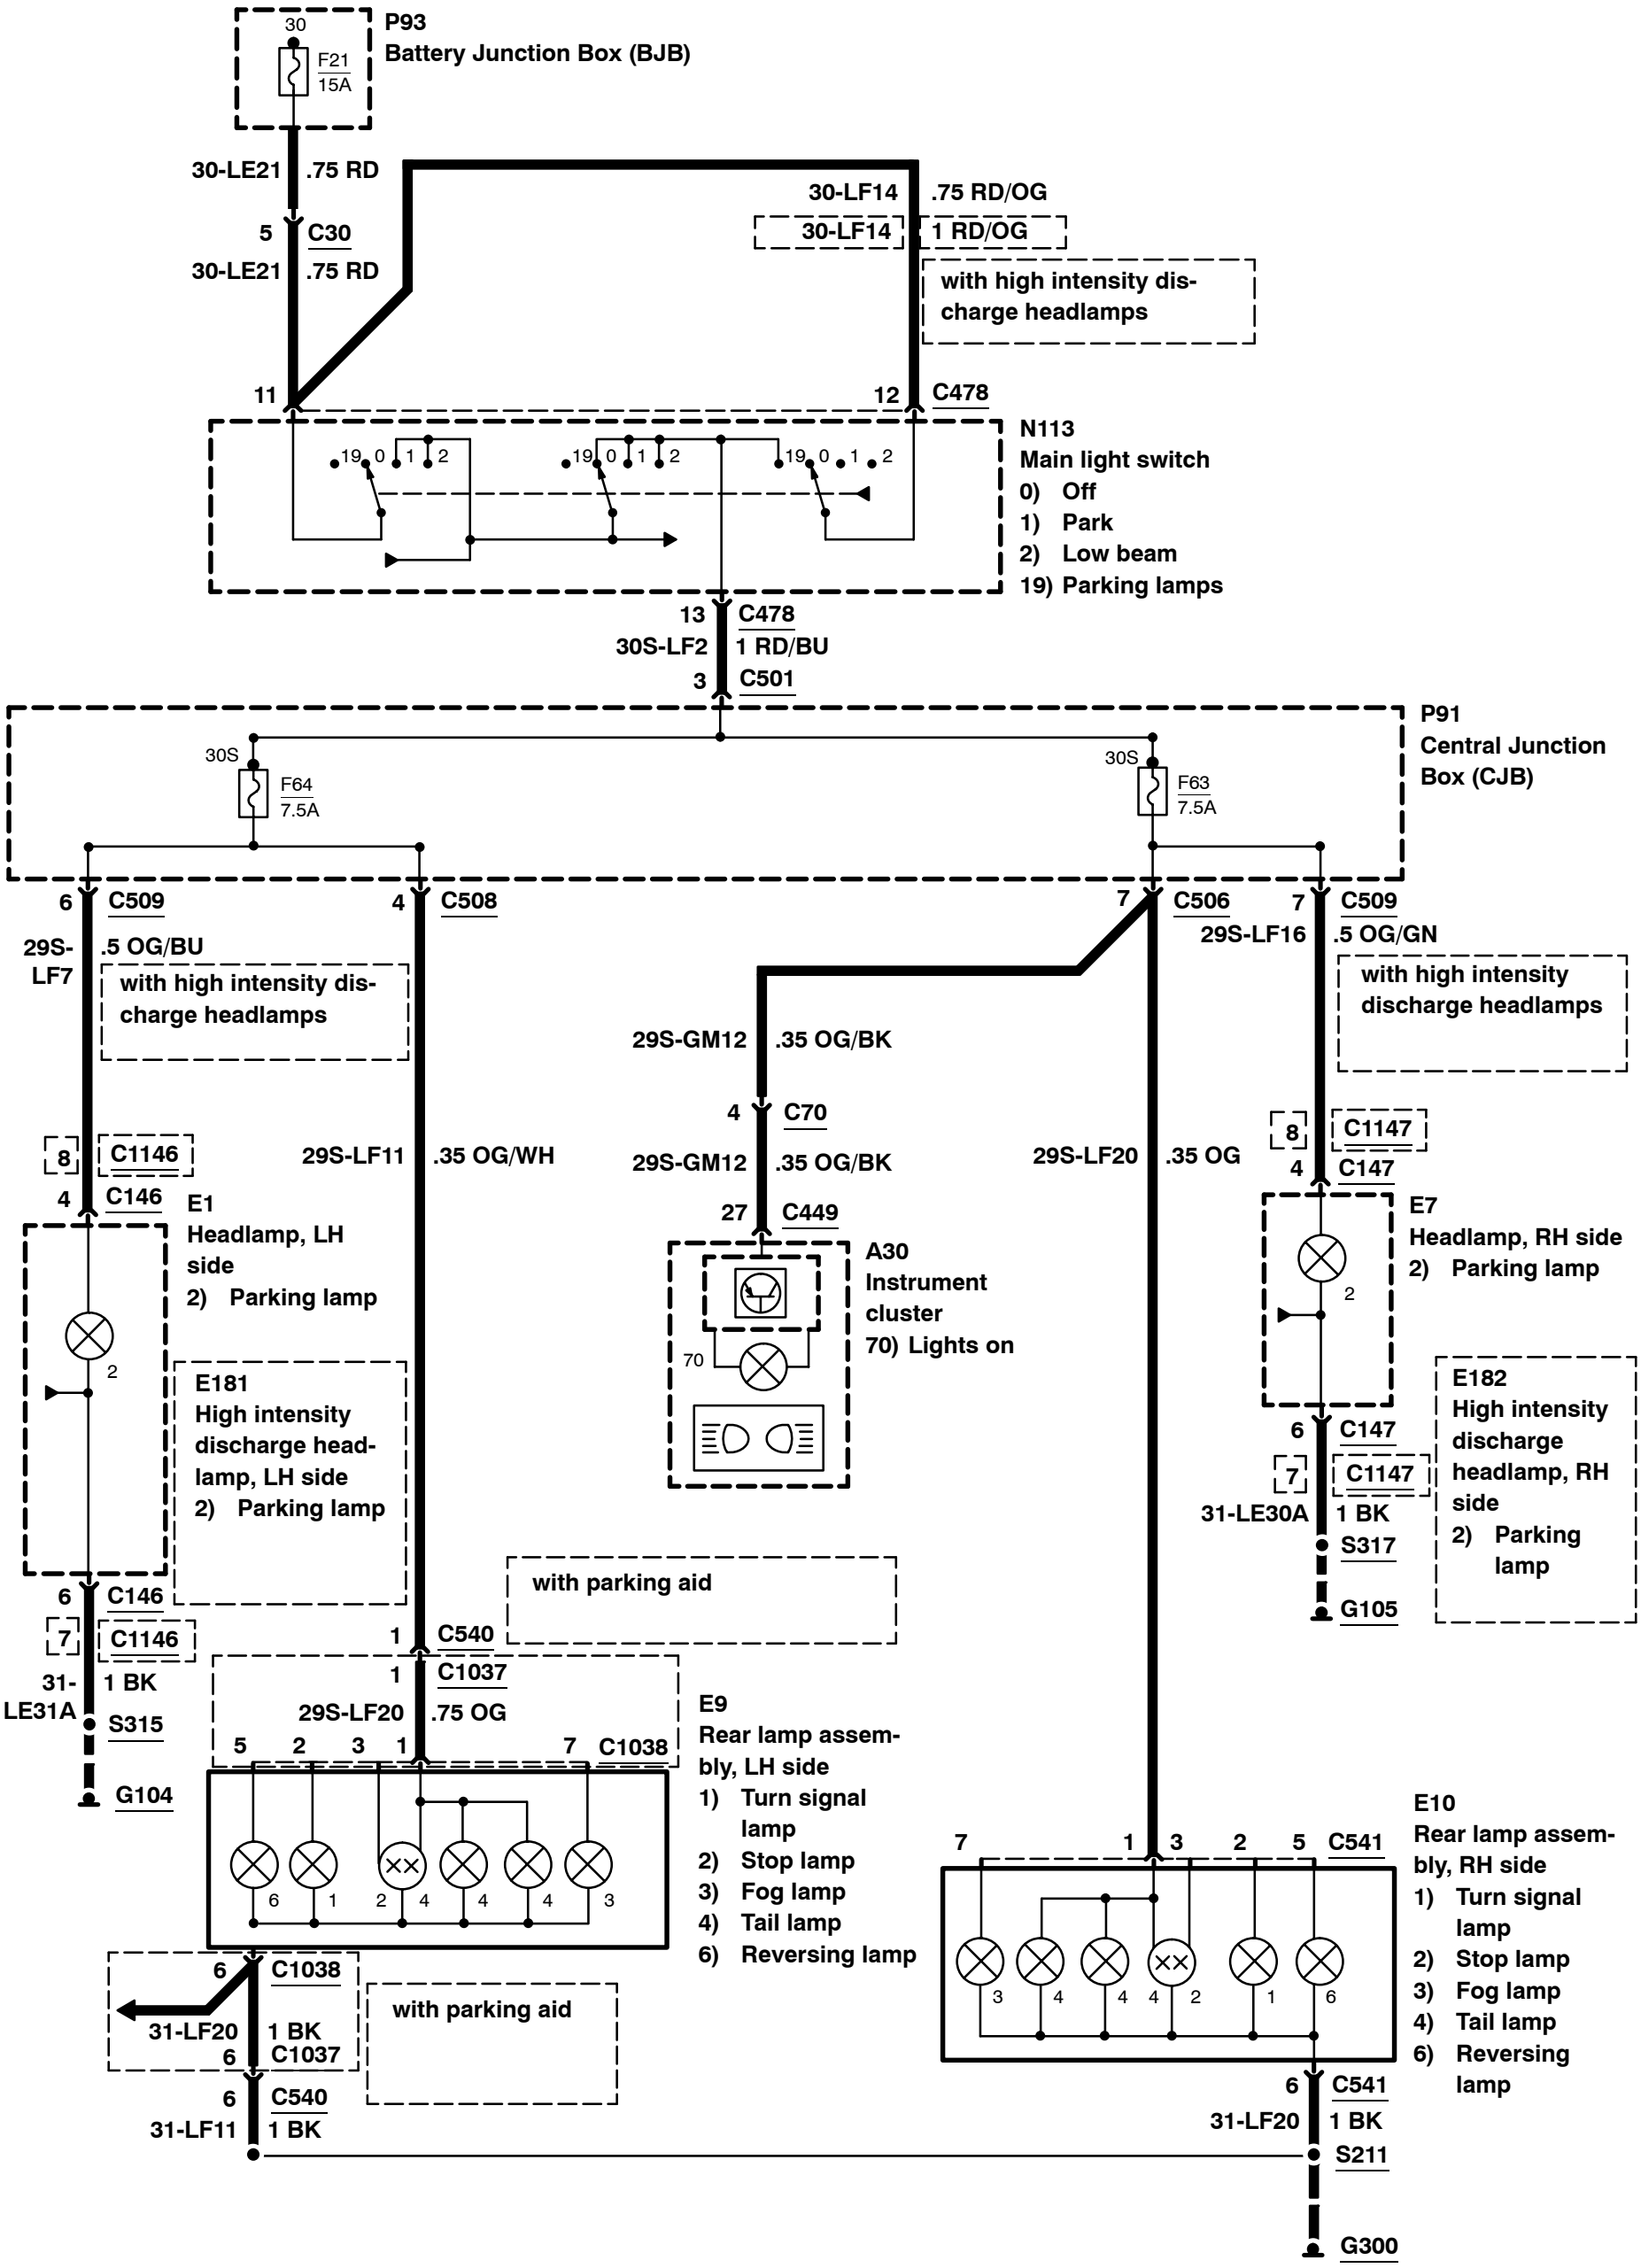


Daytime Running Lamps – without trailer socket, wagon

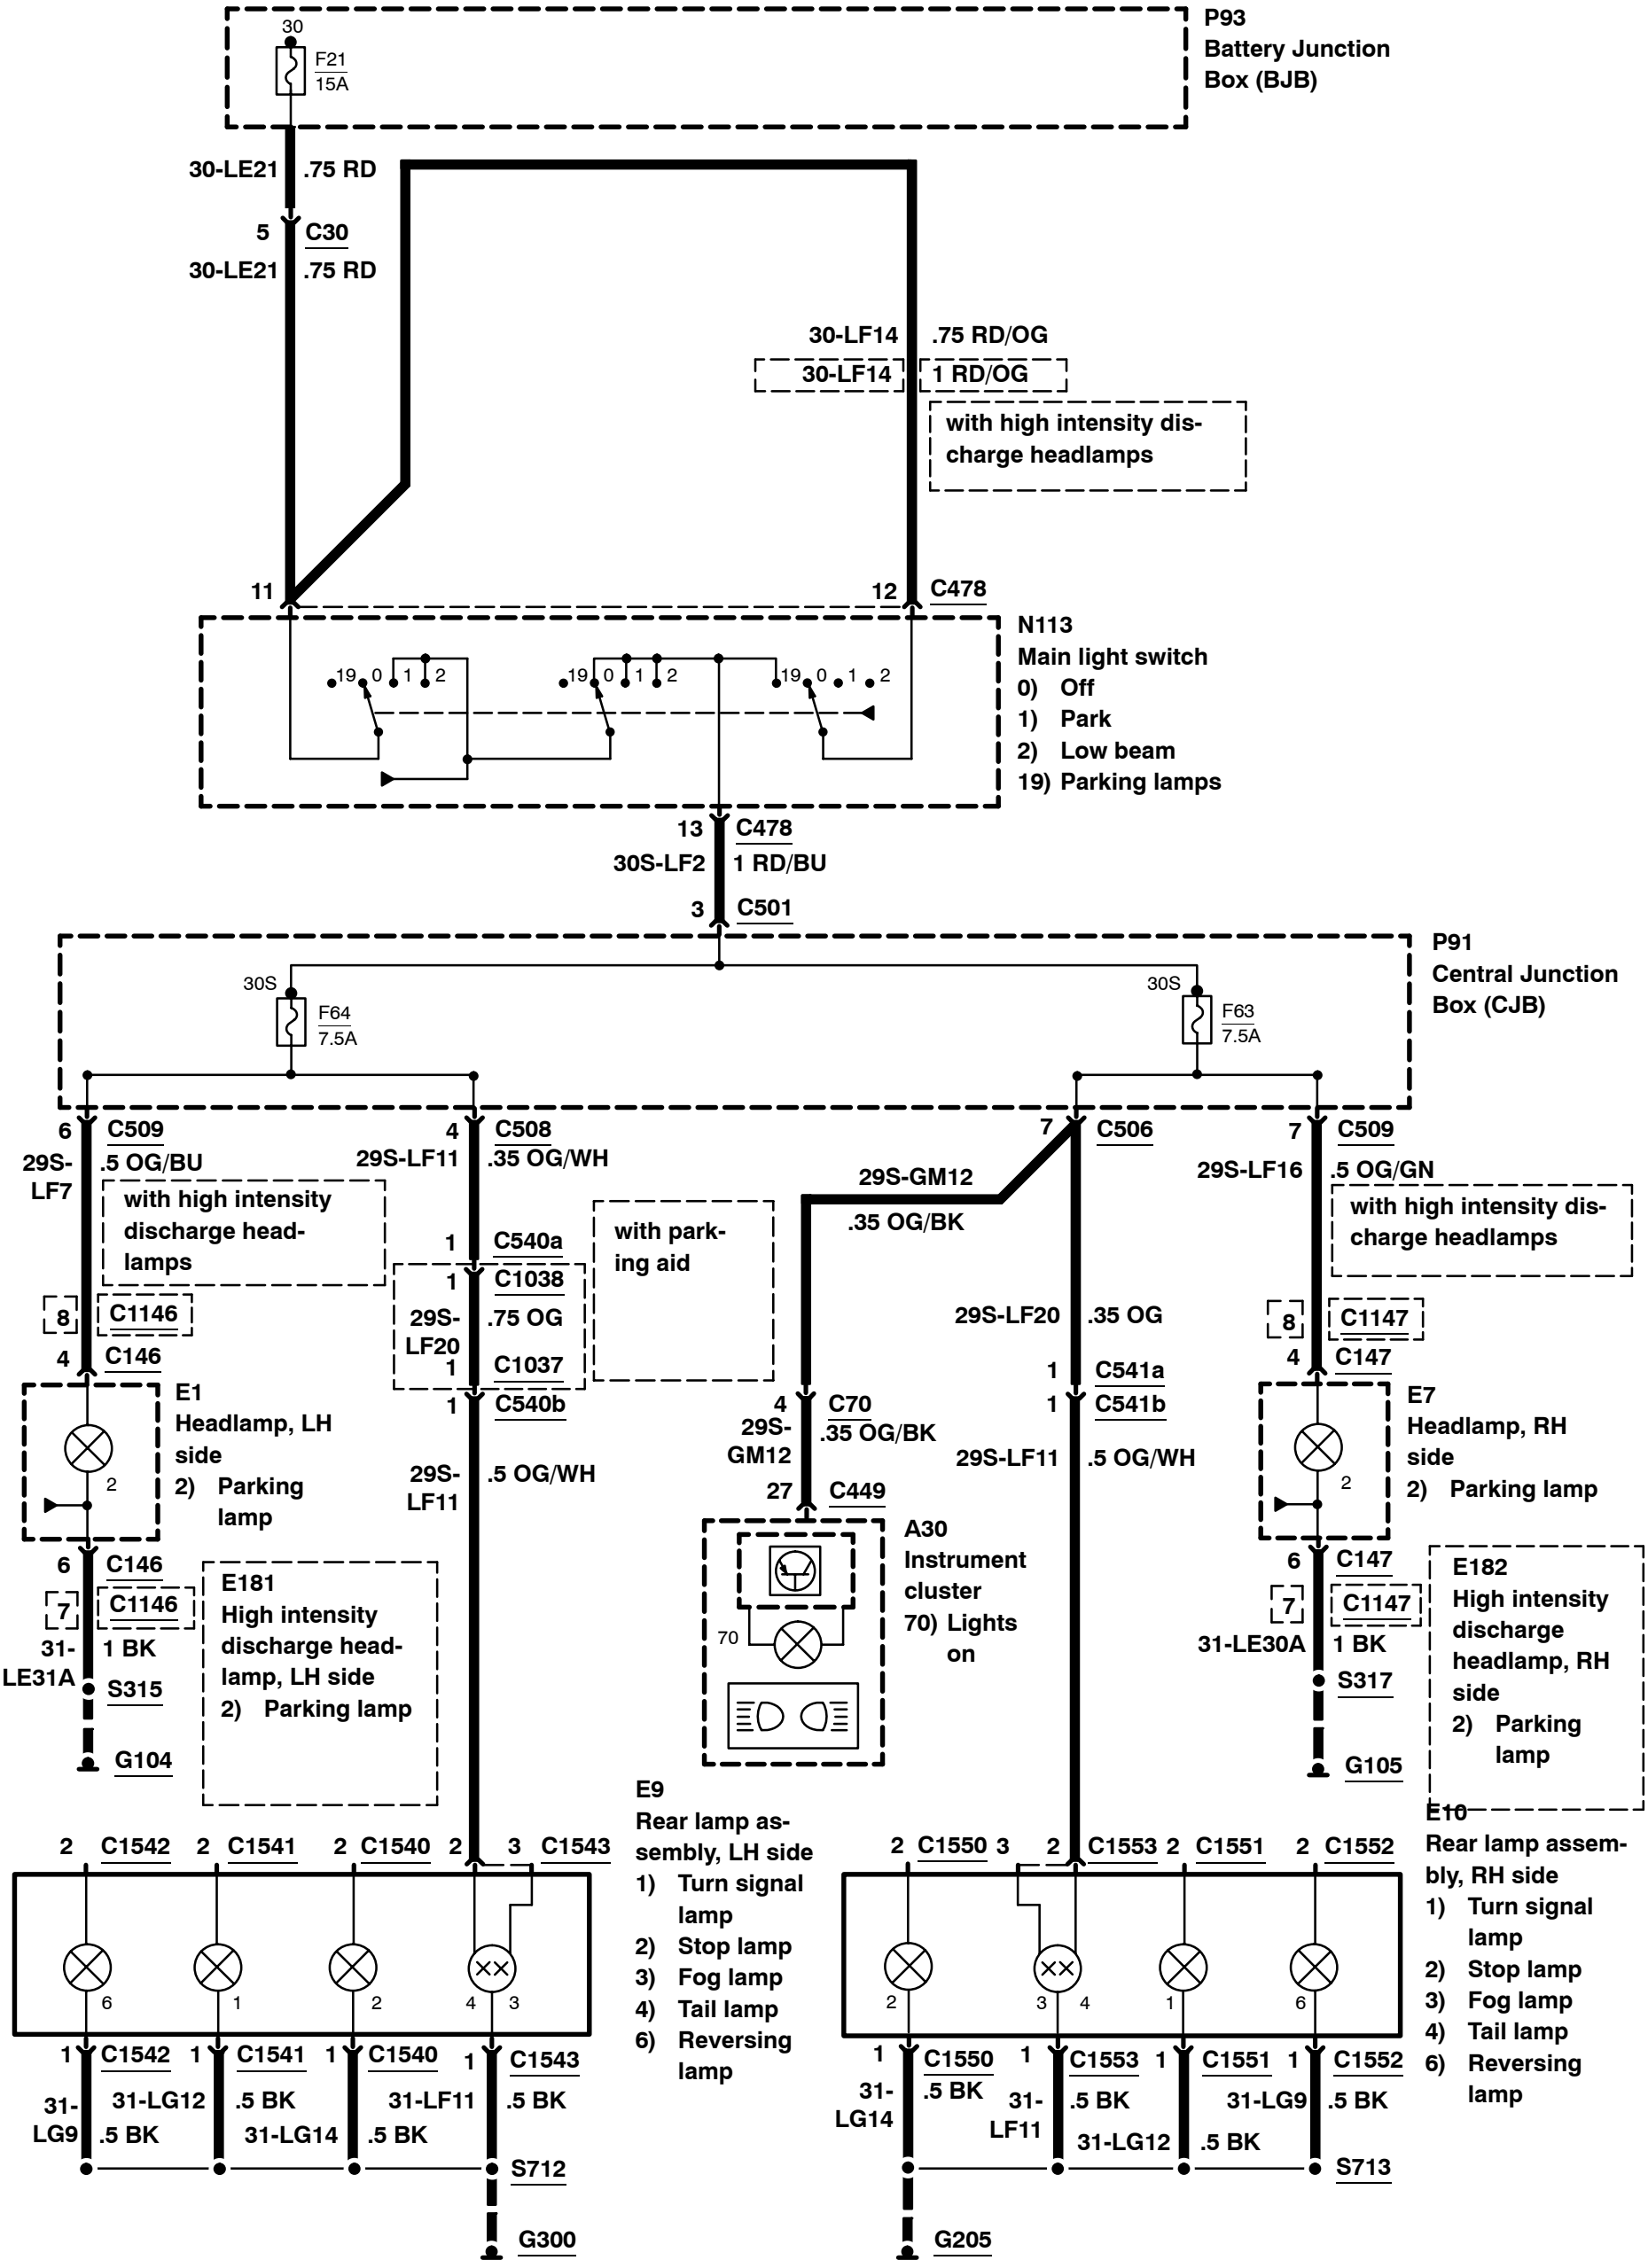


Daytime Running Lamps – with trailer socket, 4–door model/5–door model

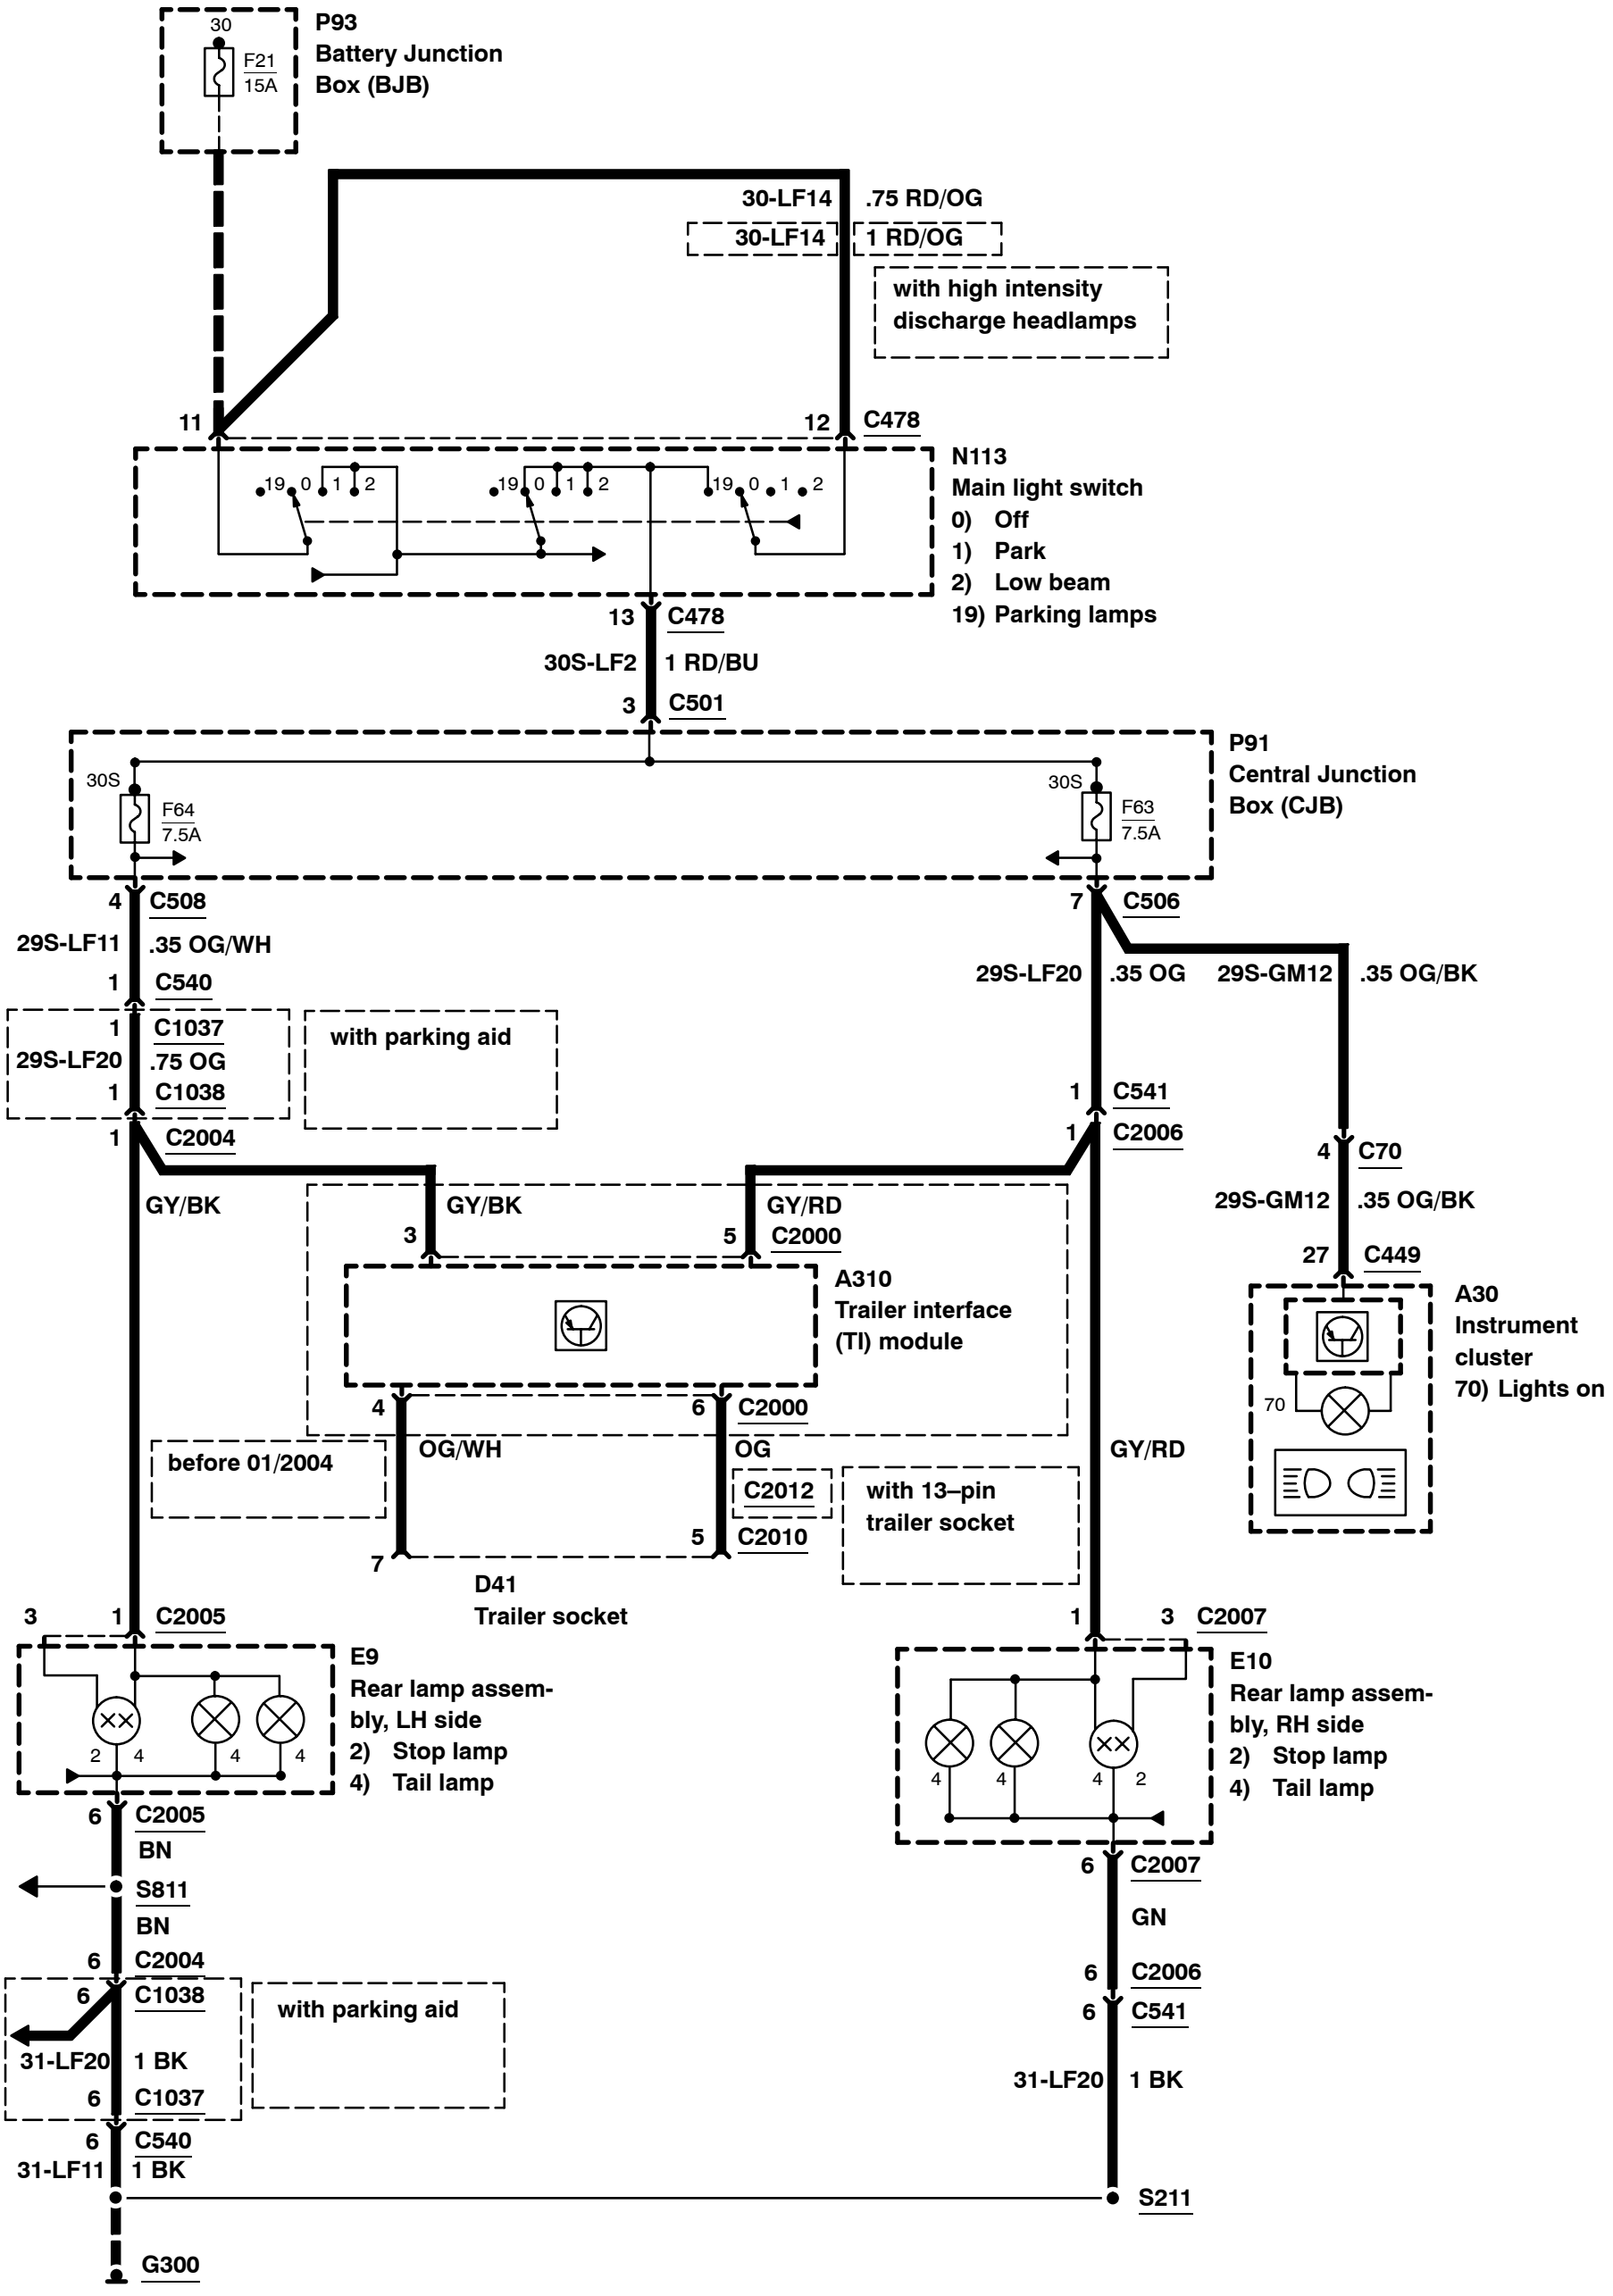


Daytime Running Lamps – with trailer socket, wagon

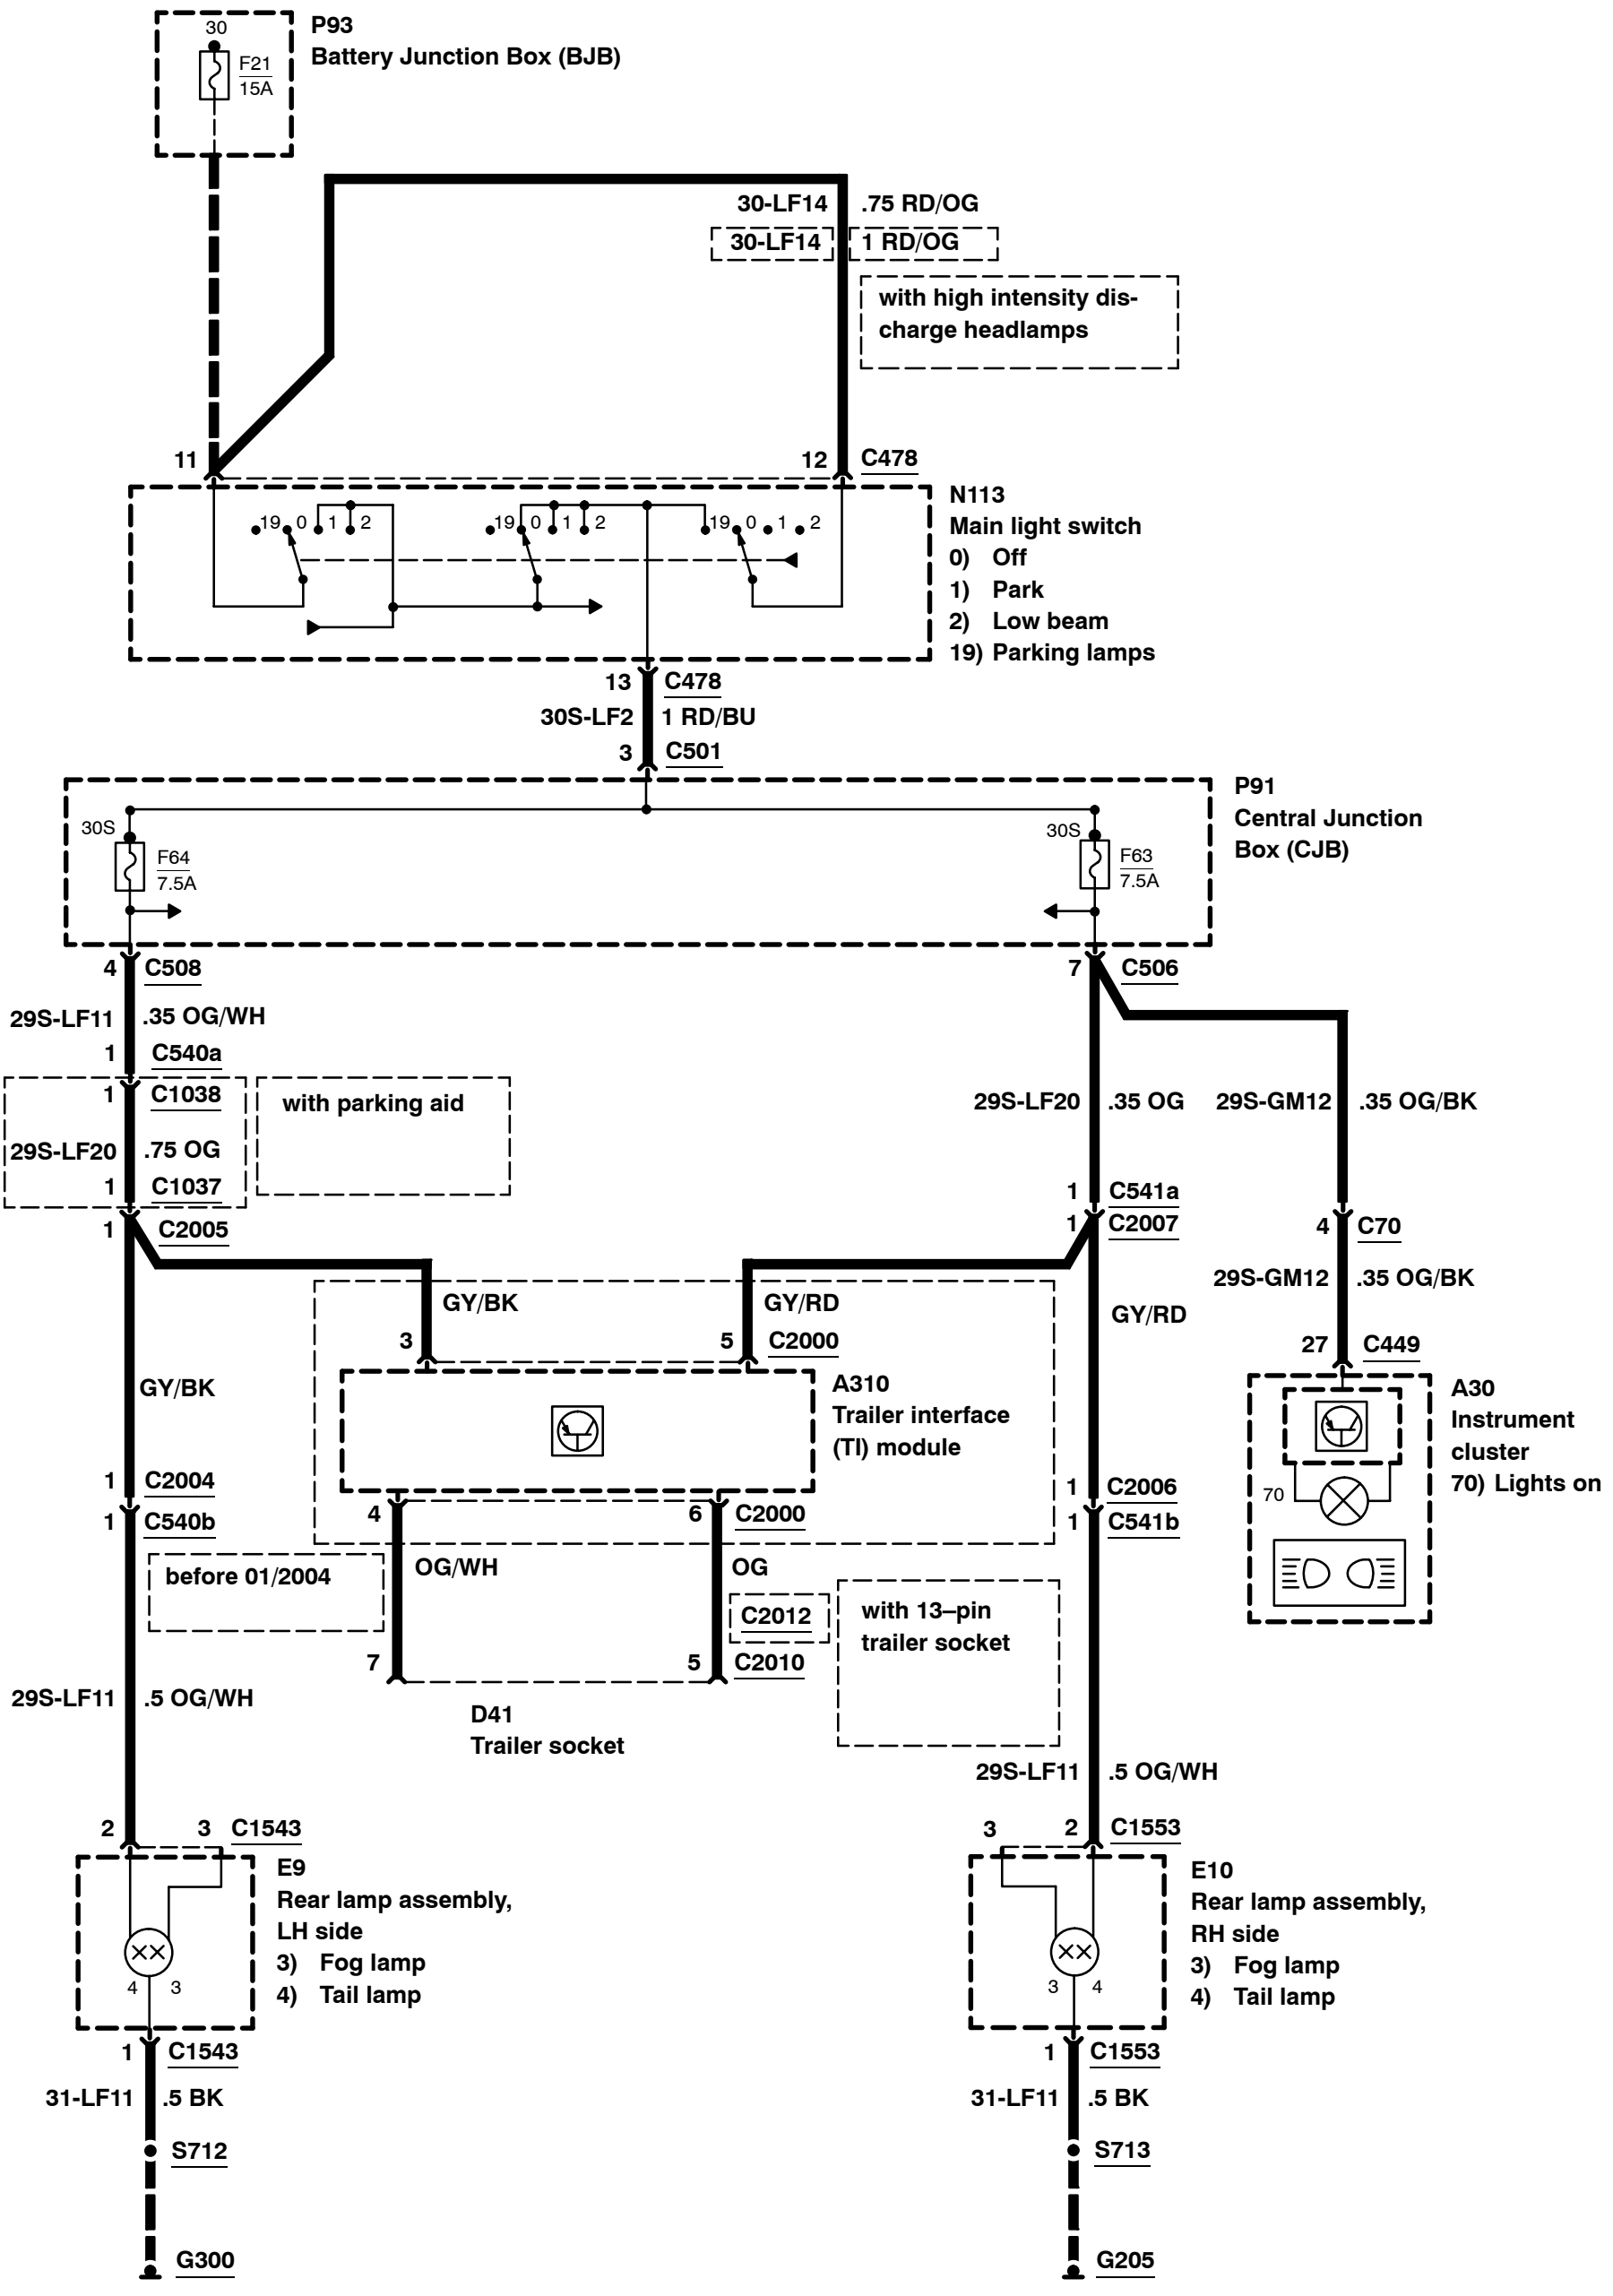


Module Communications Network, Diagnostic – Data link connector, pins 4, 5 and 16

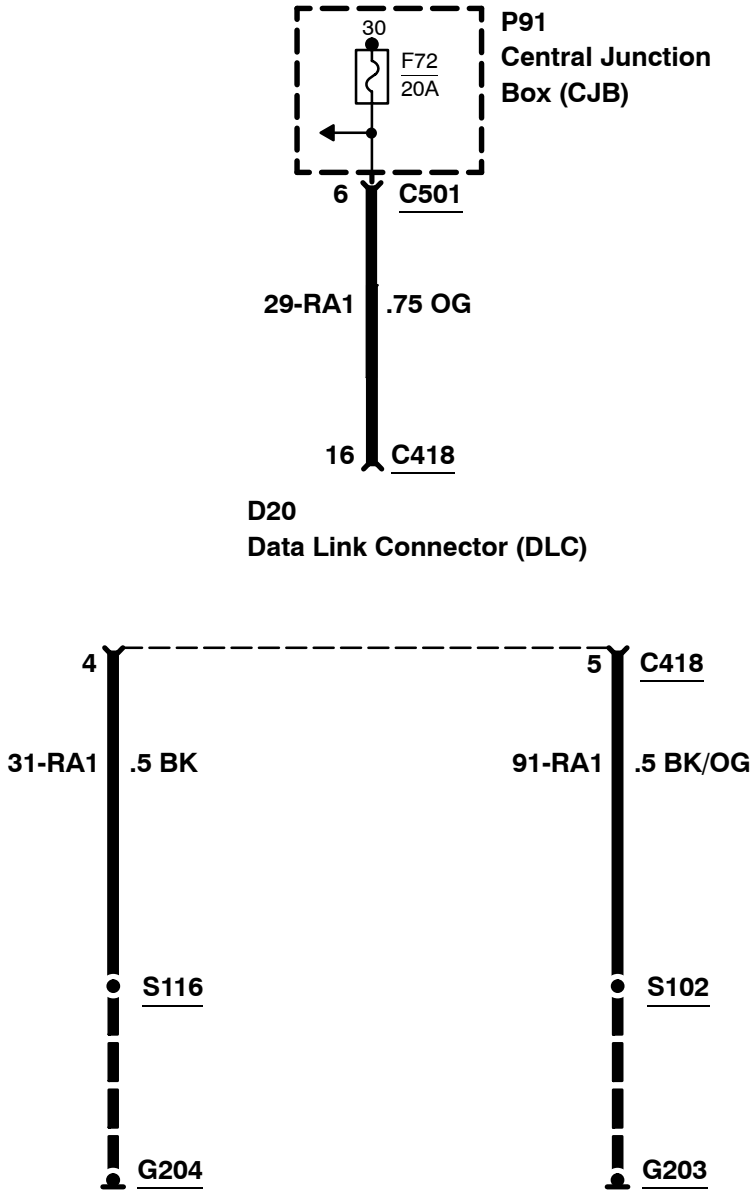


Module Communications Network, Diagnostic – Data link connector, pin 7

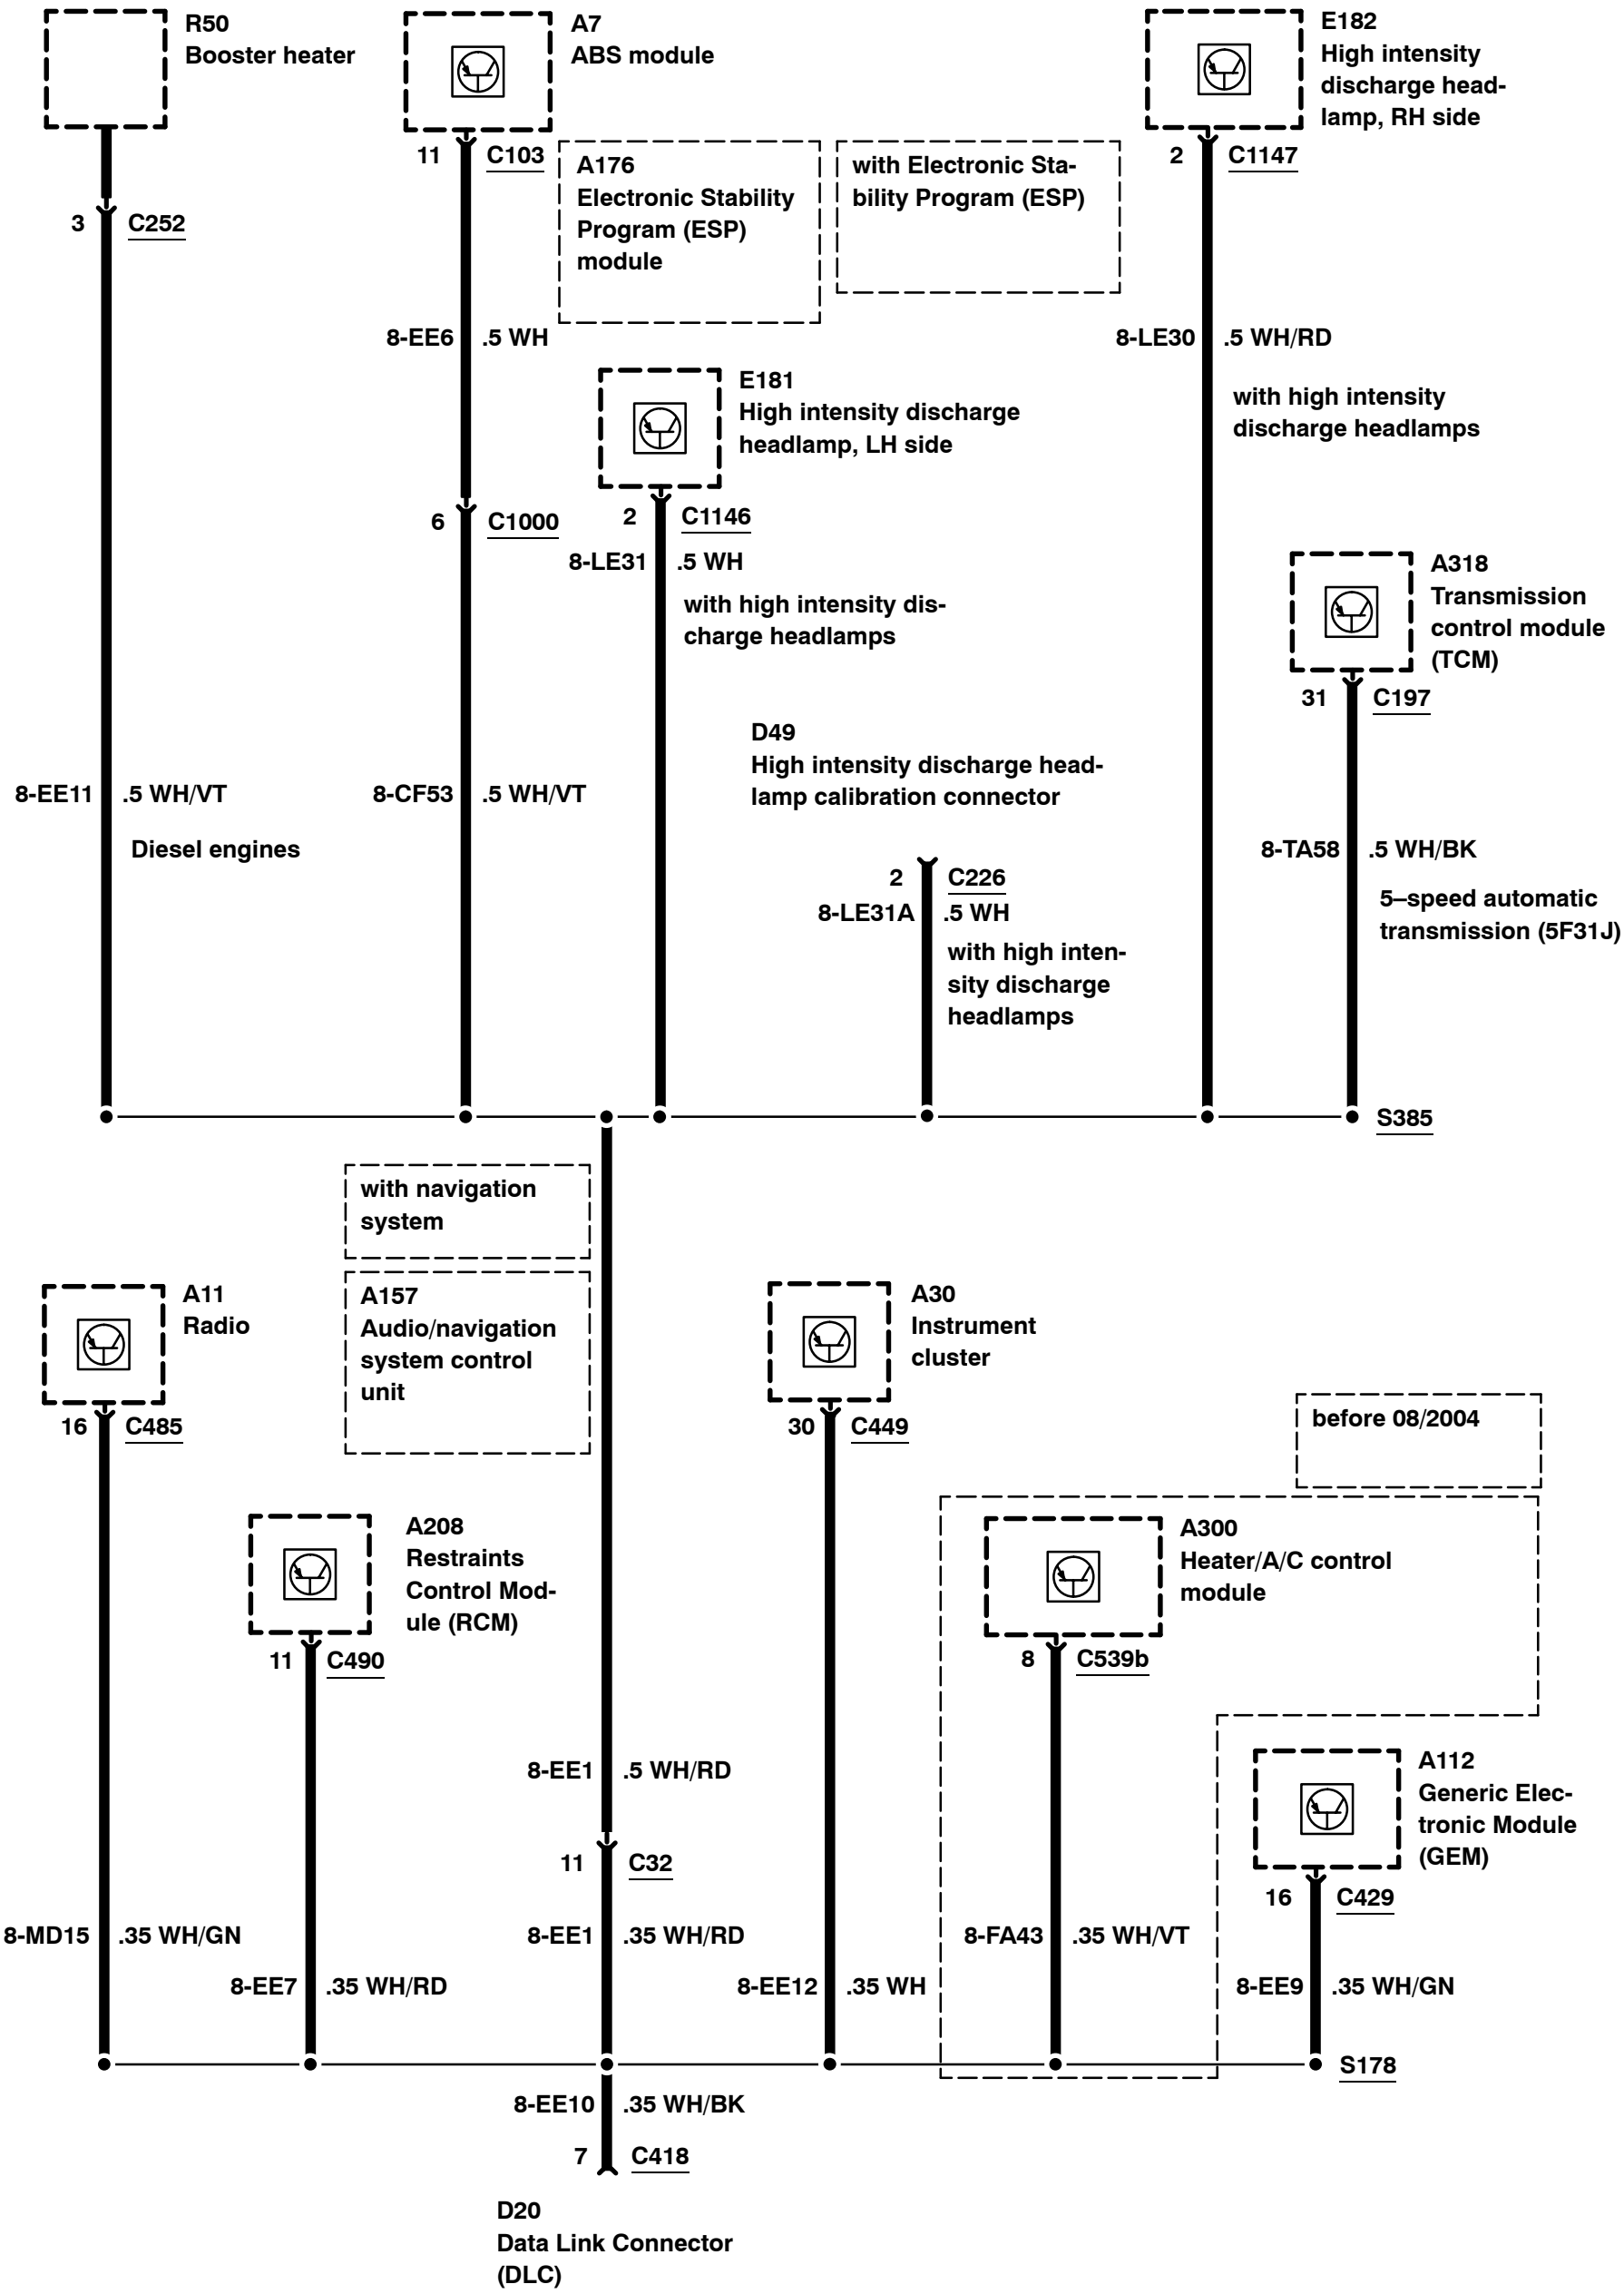


Module Communications Network, Diagnostic – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4)

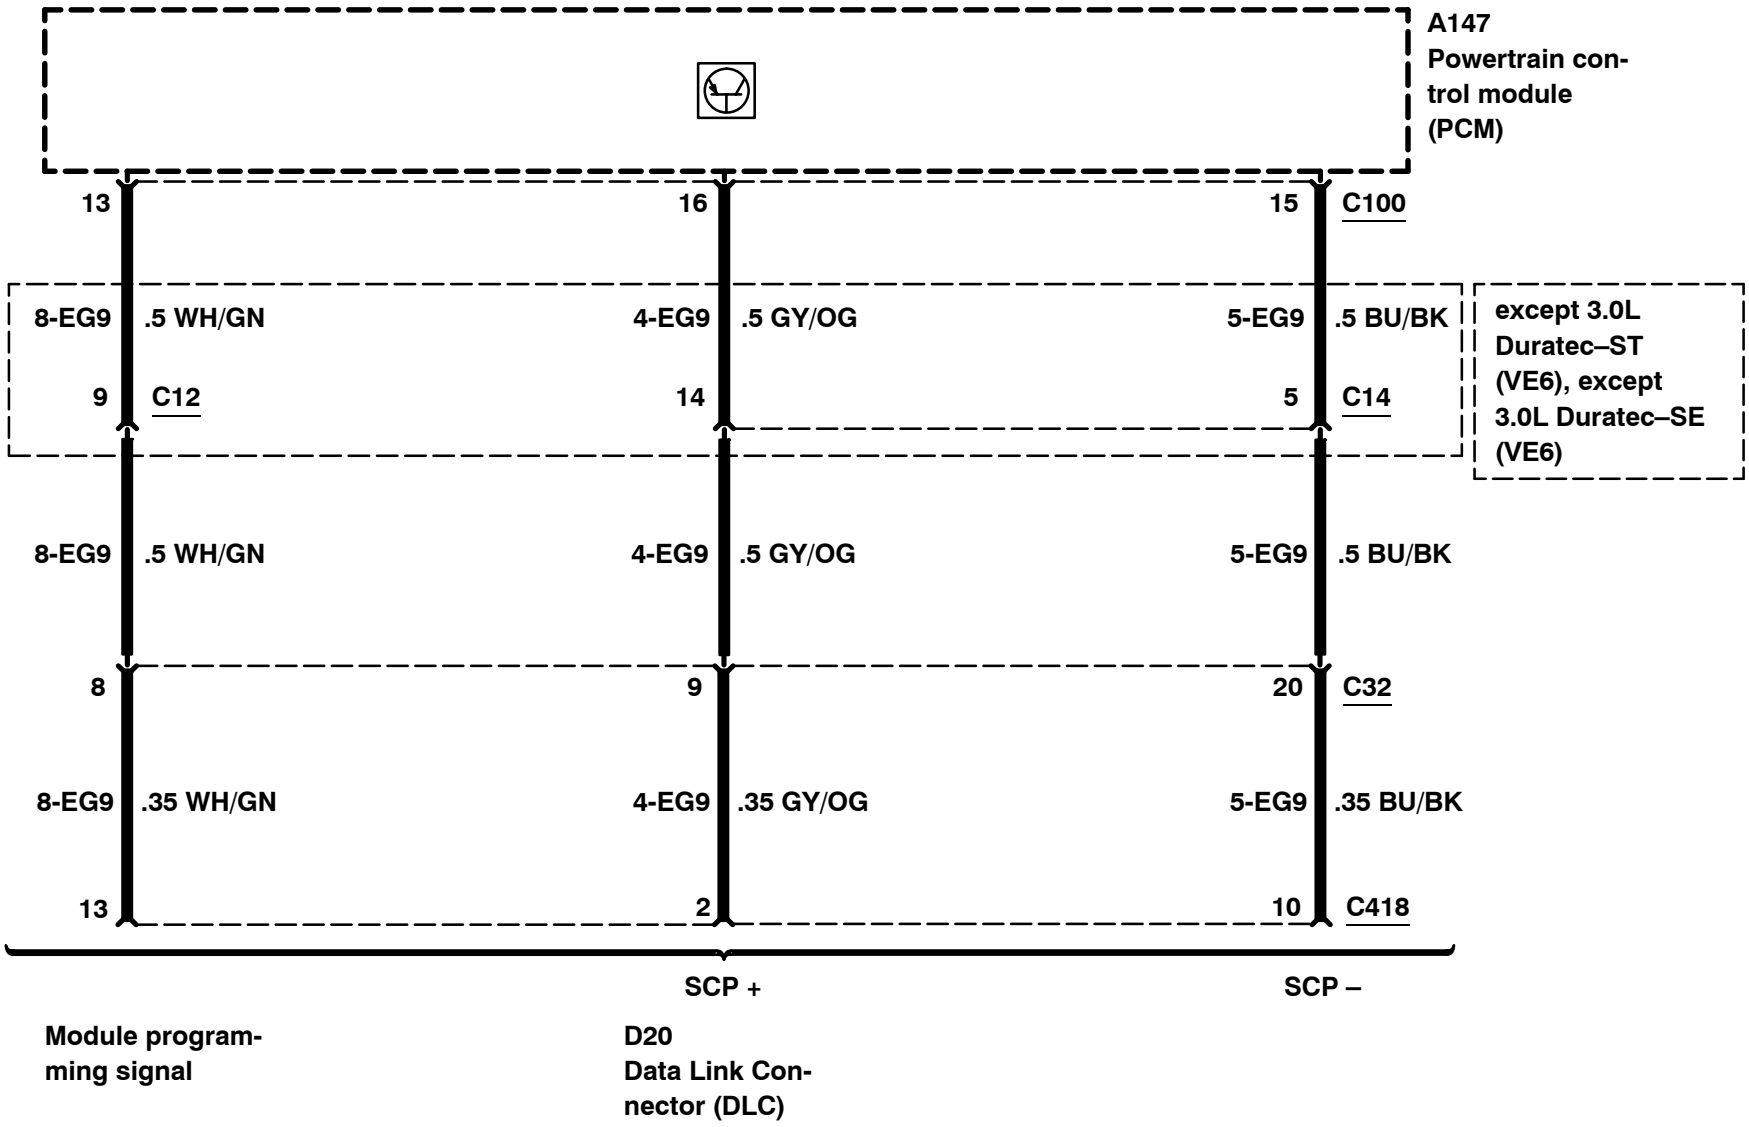


Module Communications Network, Diagnostic – Data link connector, pins 2, 10 and 13, Diesel engines, except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel

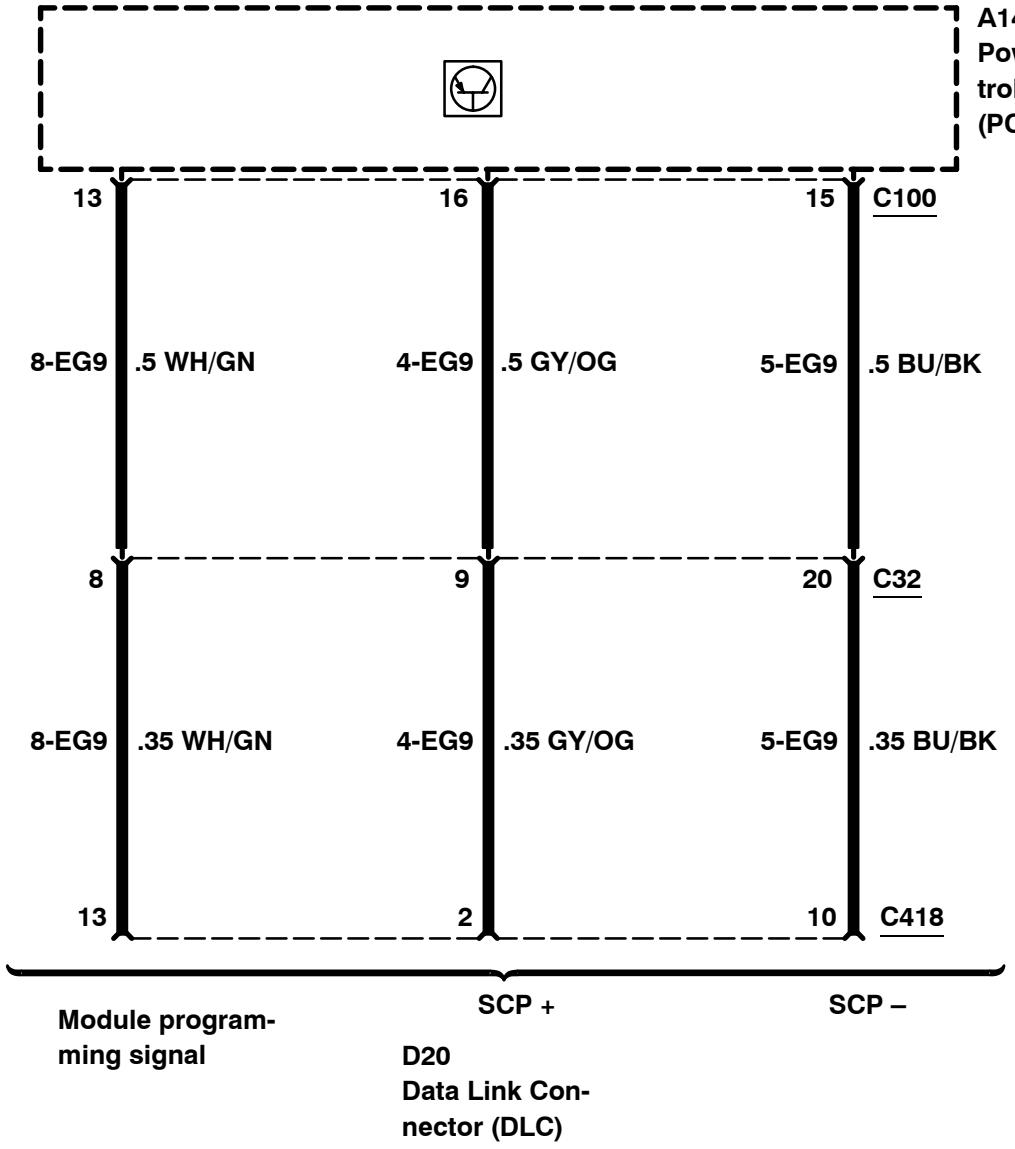


Module Communications Network, Diagnostic – Data link connector, pins 2 and 10, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

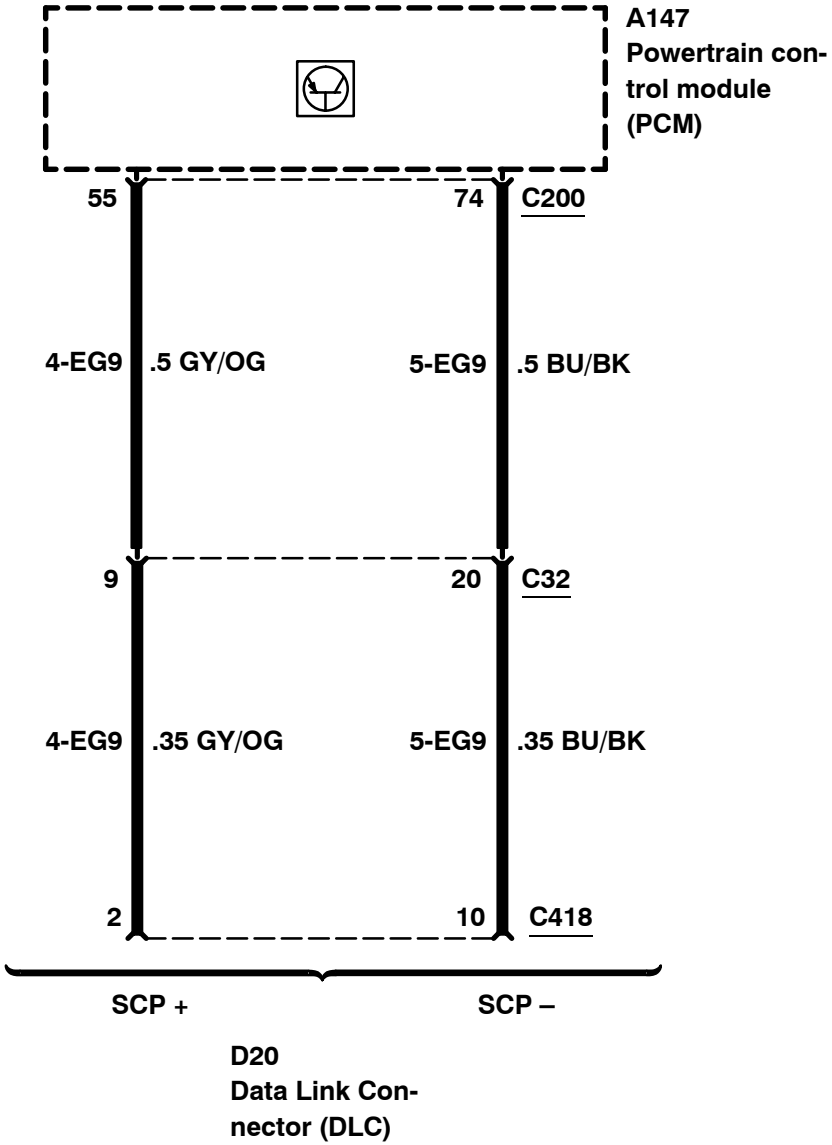

Module Communications Network, Diagnostic – Data link connector, pins 3 and 11, without external CD changer and video system

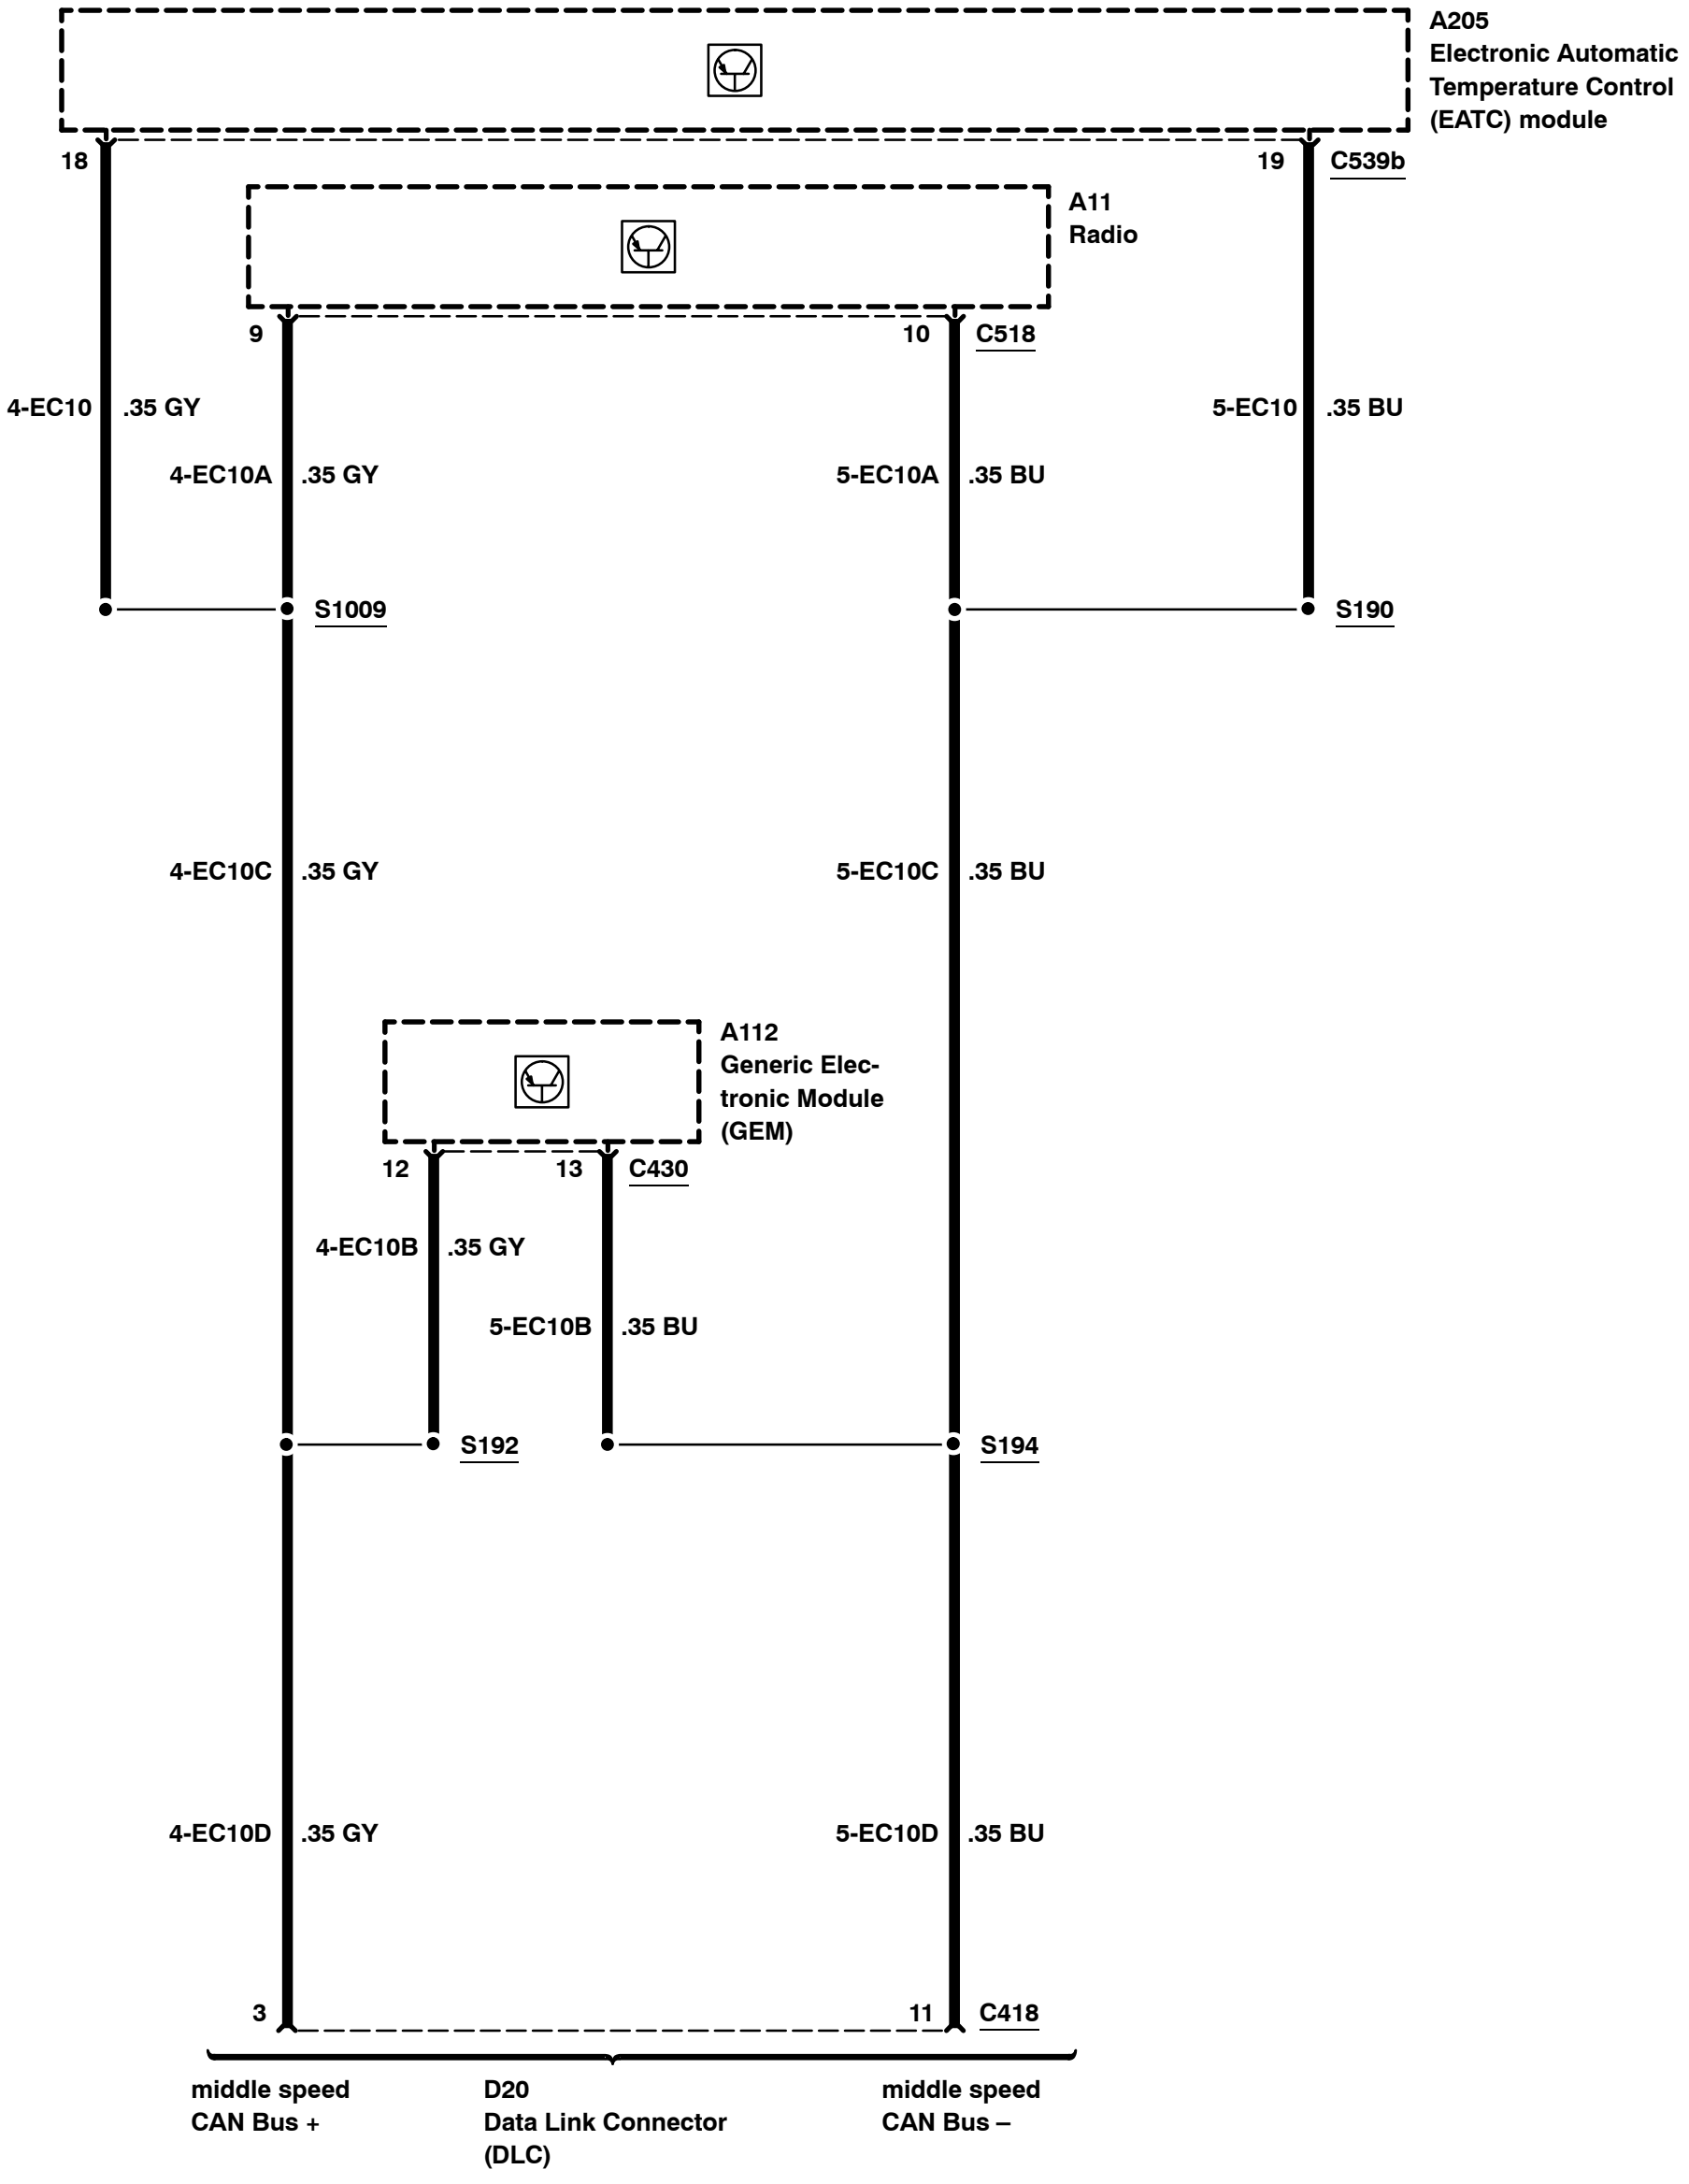


Module Communications Network, Diagnostic – Data link connector, pins 3 and 11, with external CD changer or video system

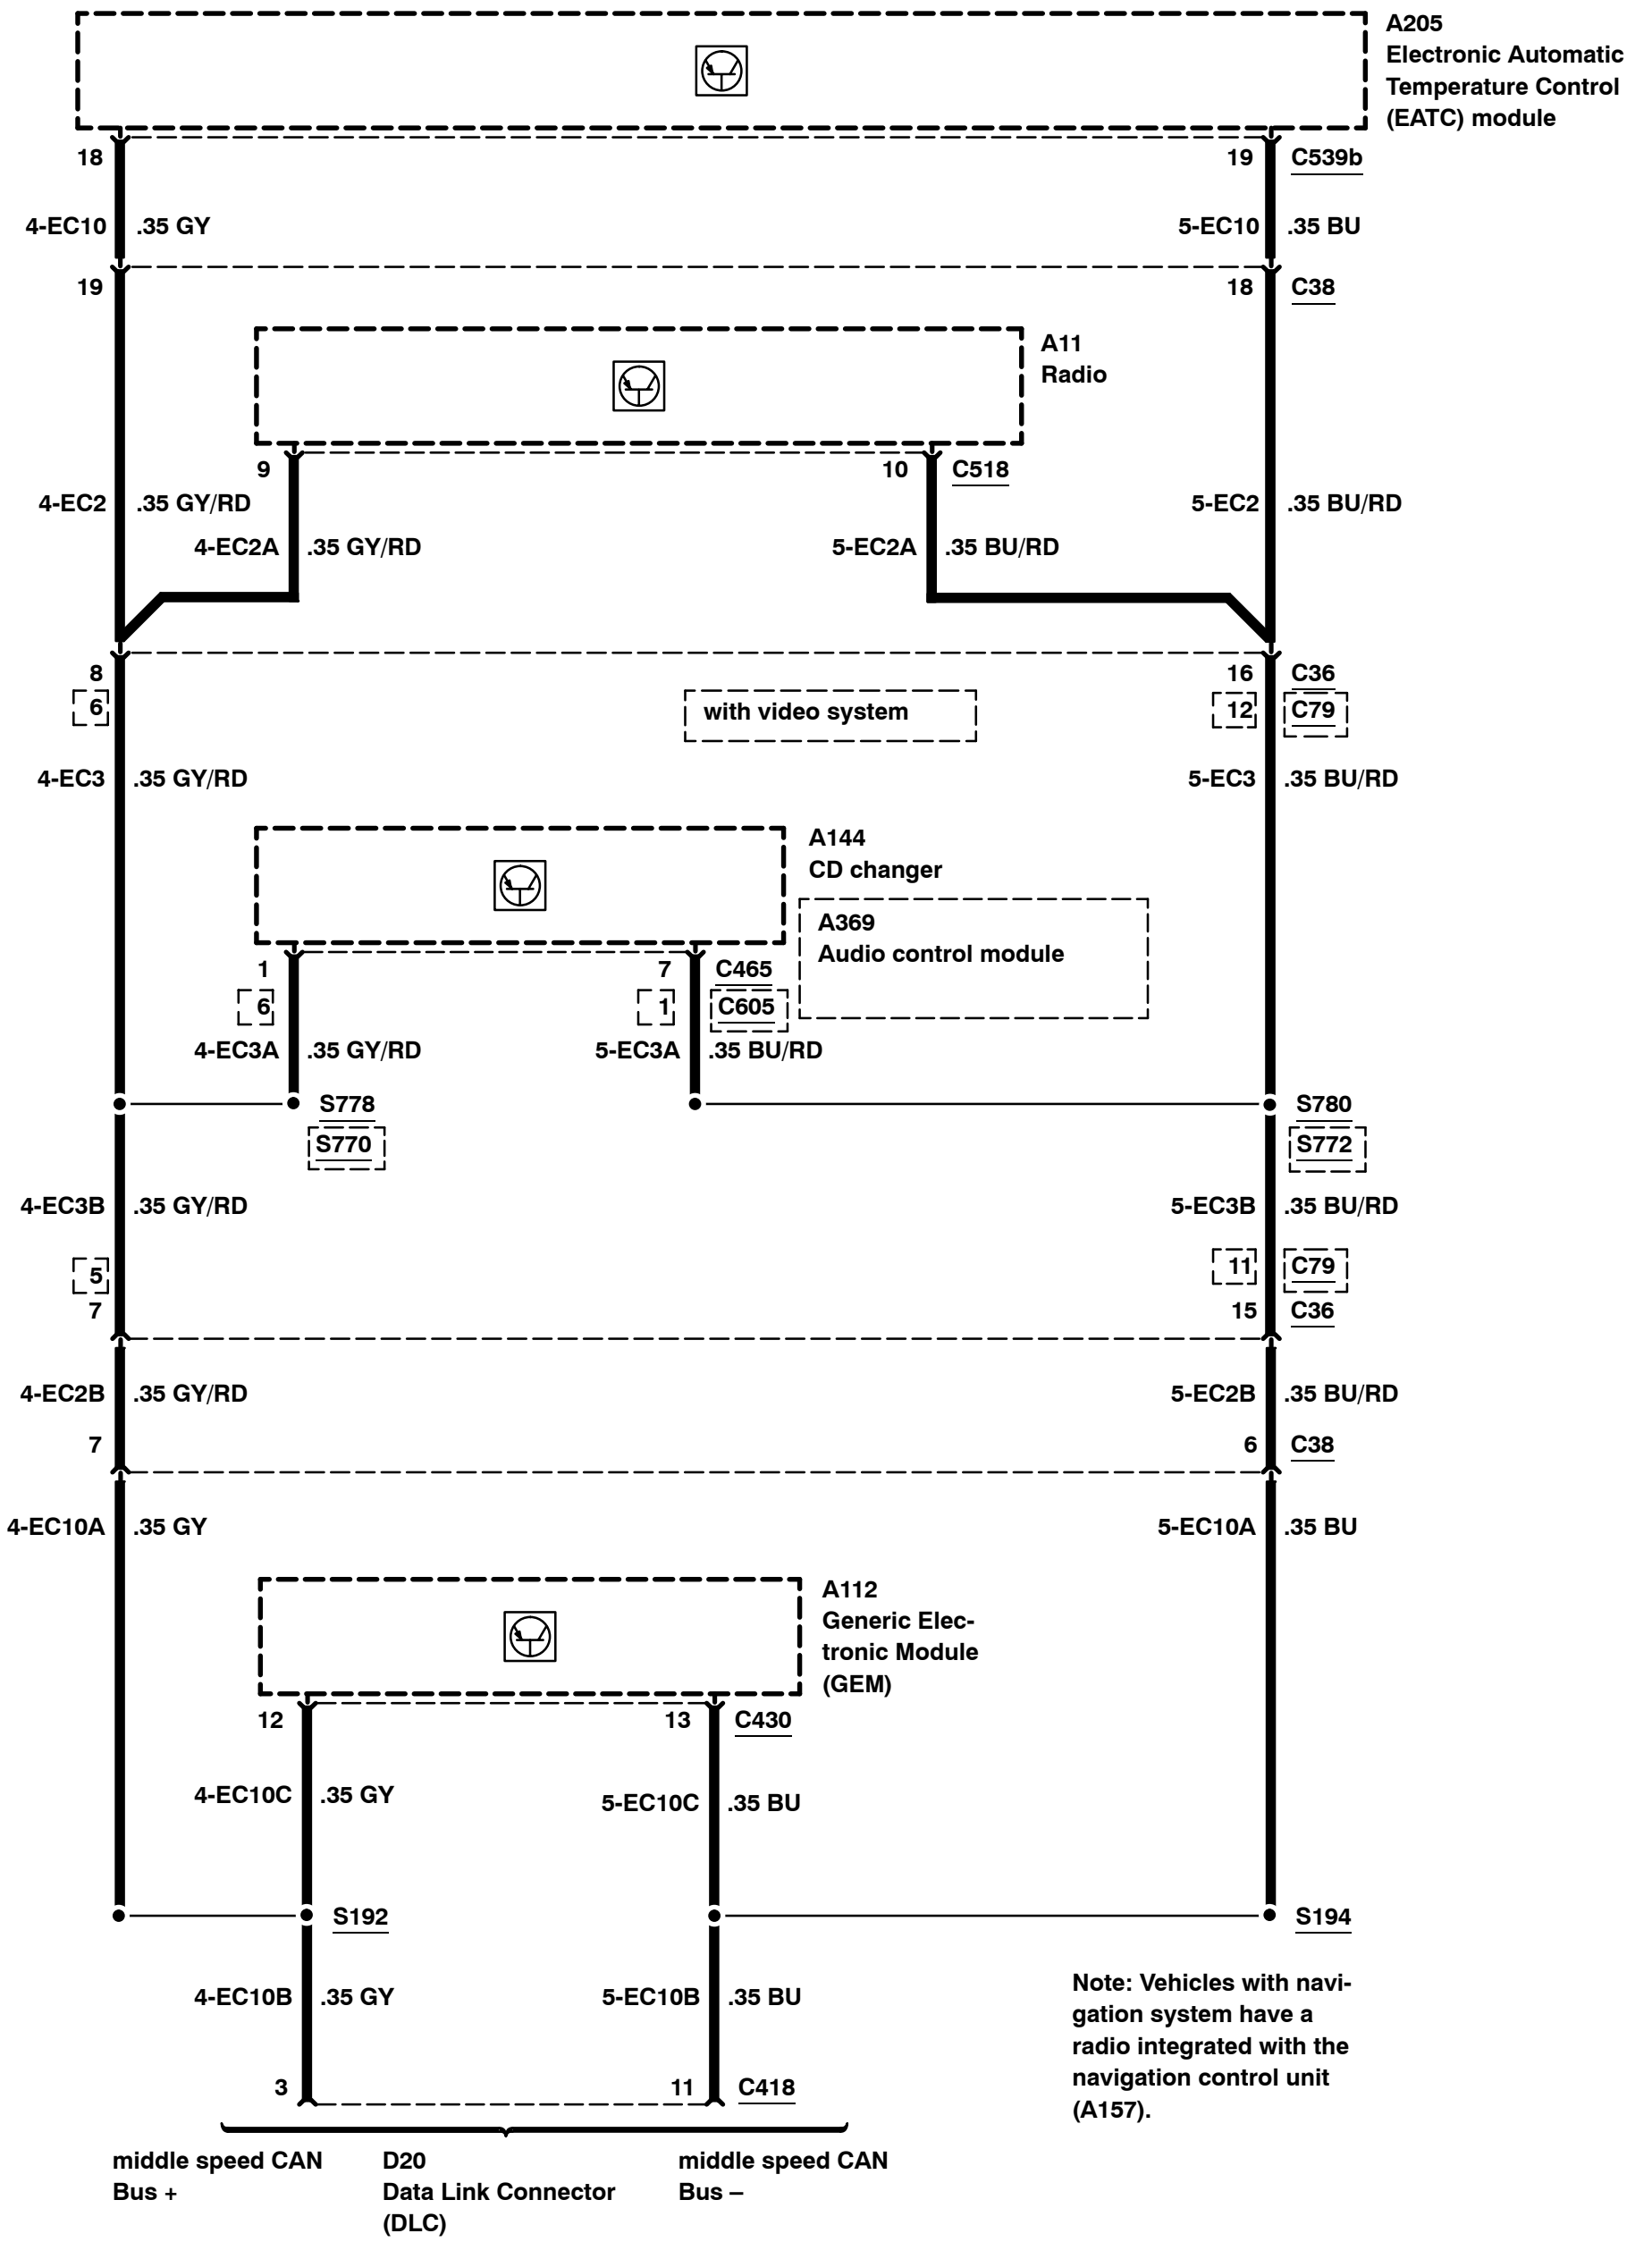


Note: Vehicles with navigation system have a radio integrated with the navigation control unit (A157).


Module Communications Network, Diagnostic – Data link connector, pins 3 and 11, with external CD changer and video system

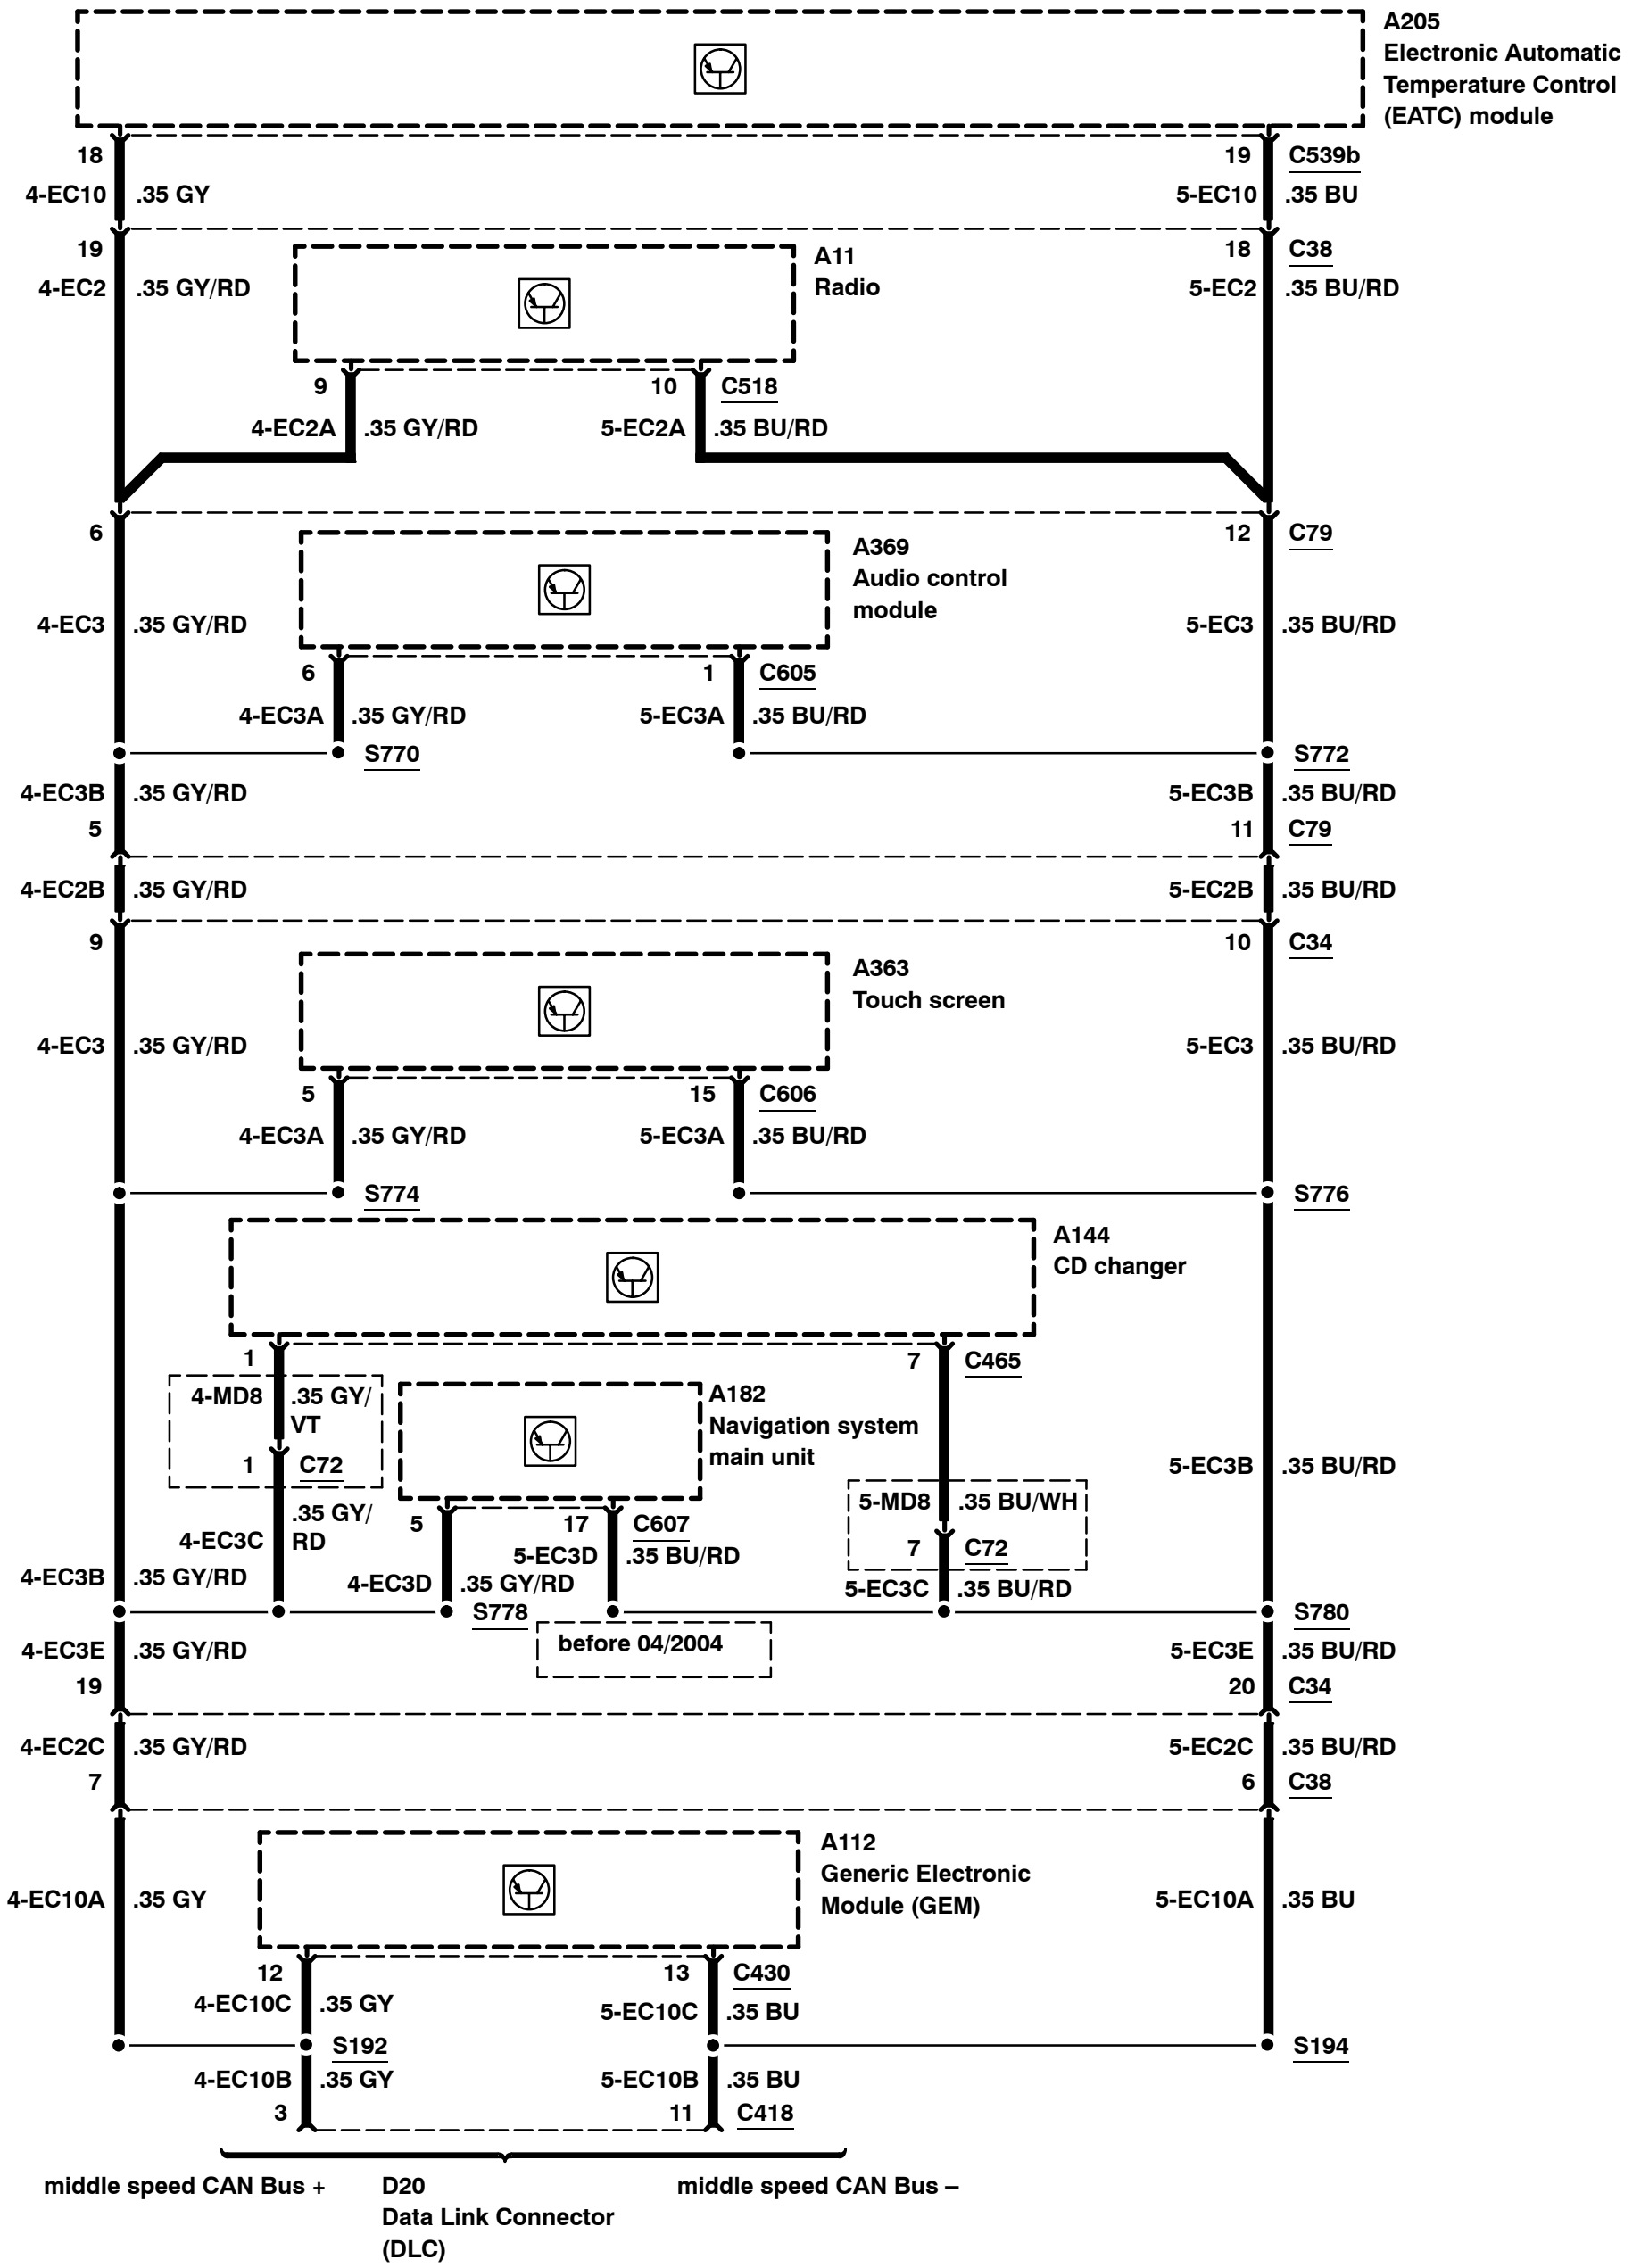


Module Communications Network, Diagnostic – Data link connector, pins 3 and 11, with voice control

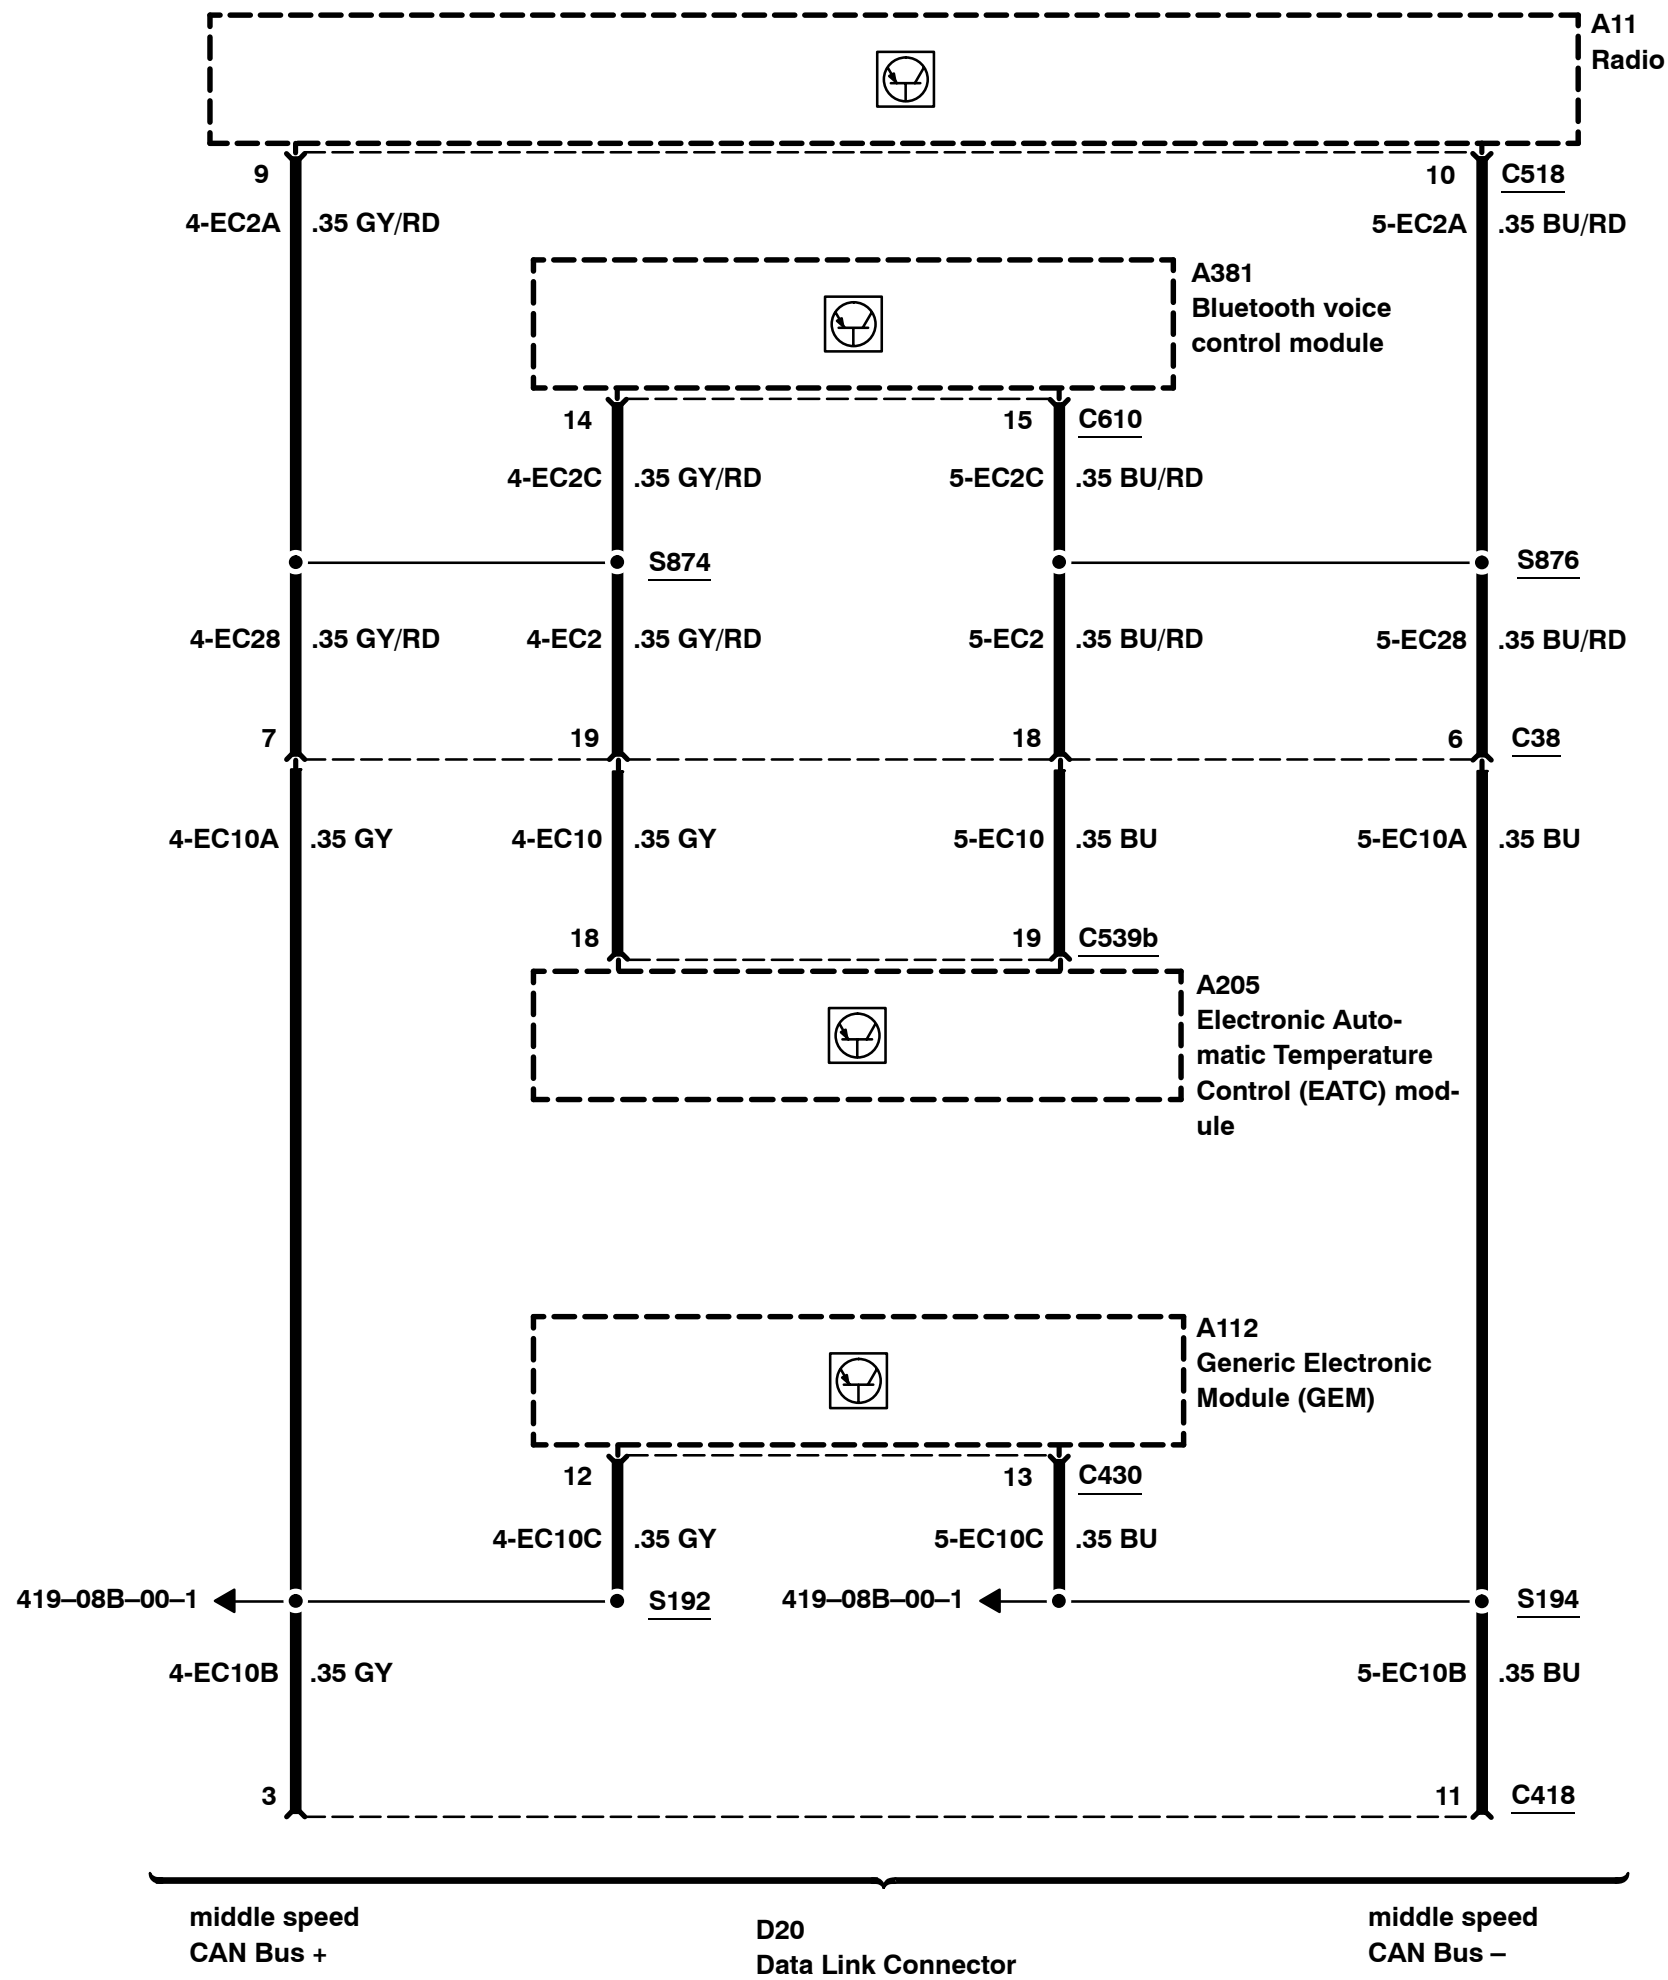


Module Communications Network, Diagnostic – Data link connector, pins 6 and 14, Petrol engines, before 08/2004

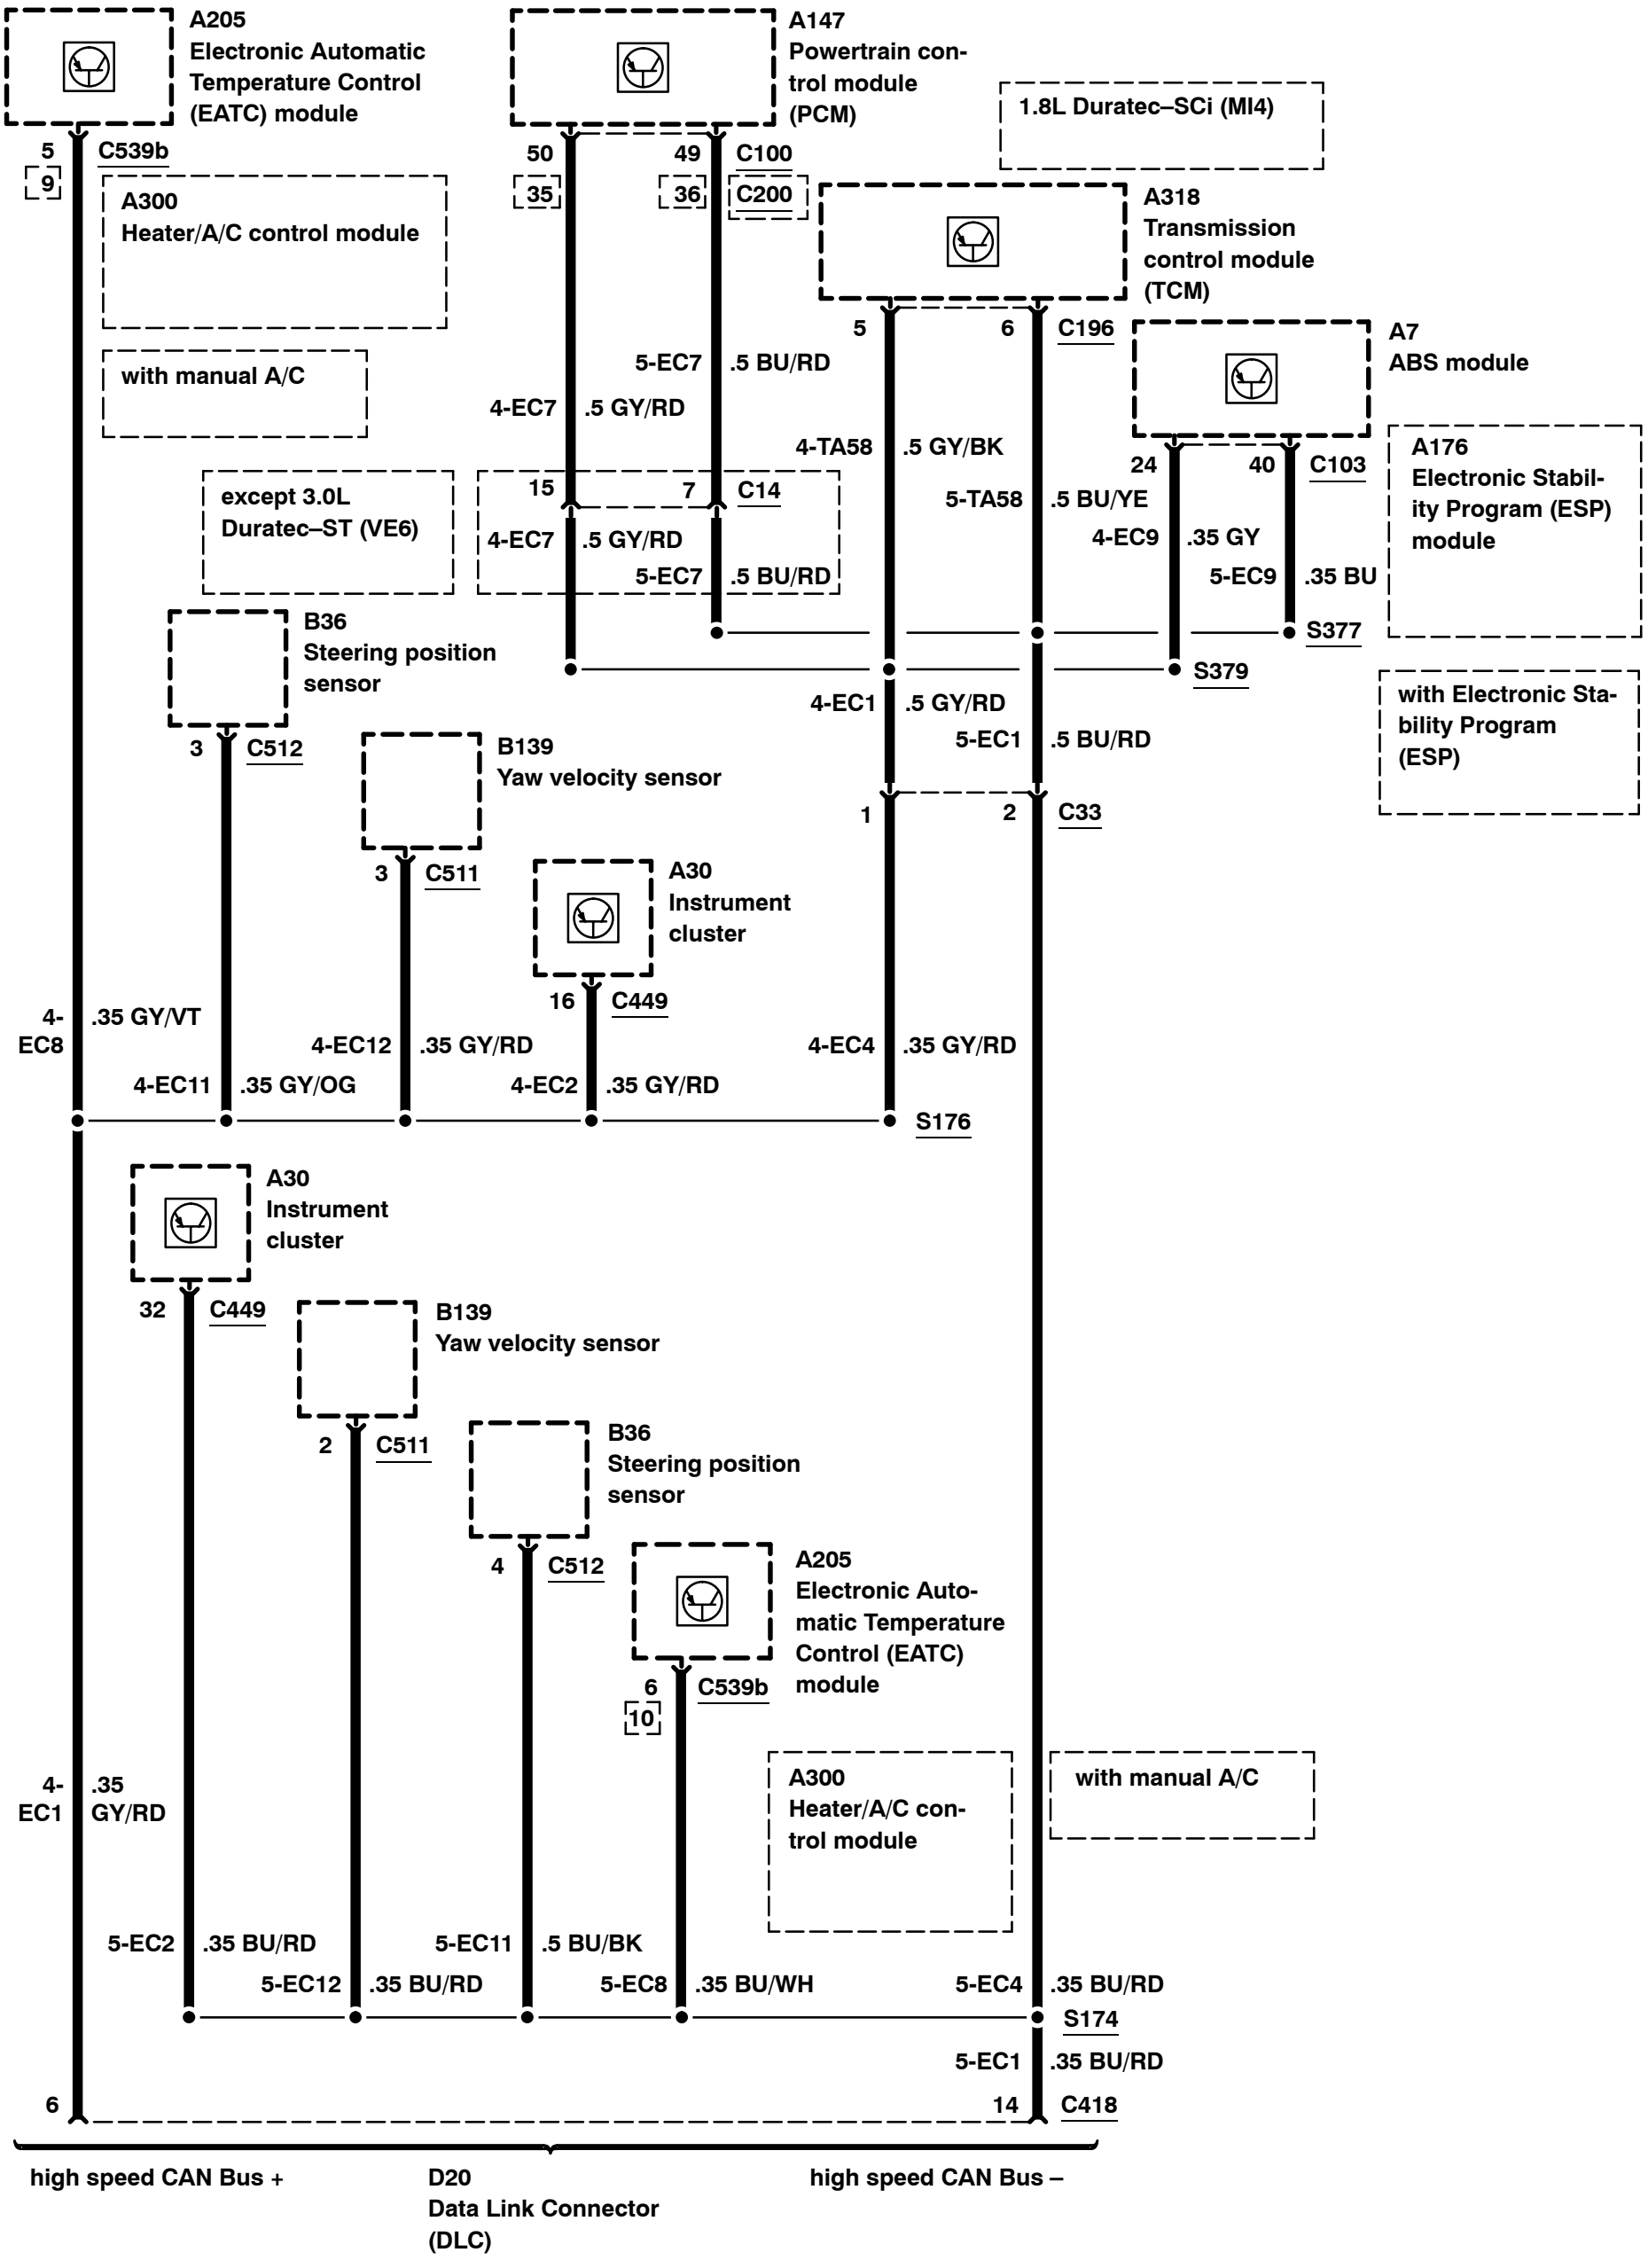


Module Communications Network, Diagnostic – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004

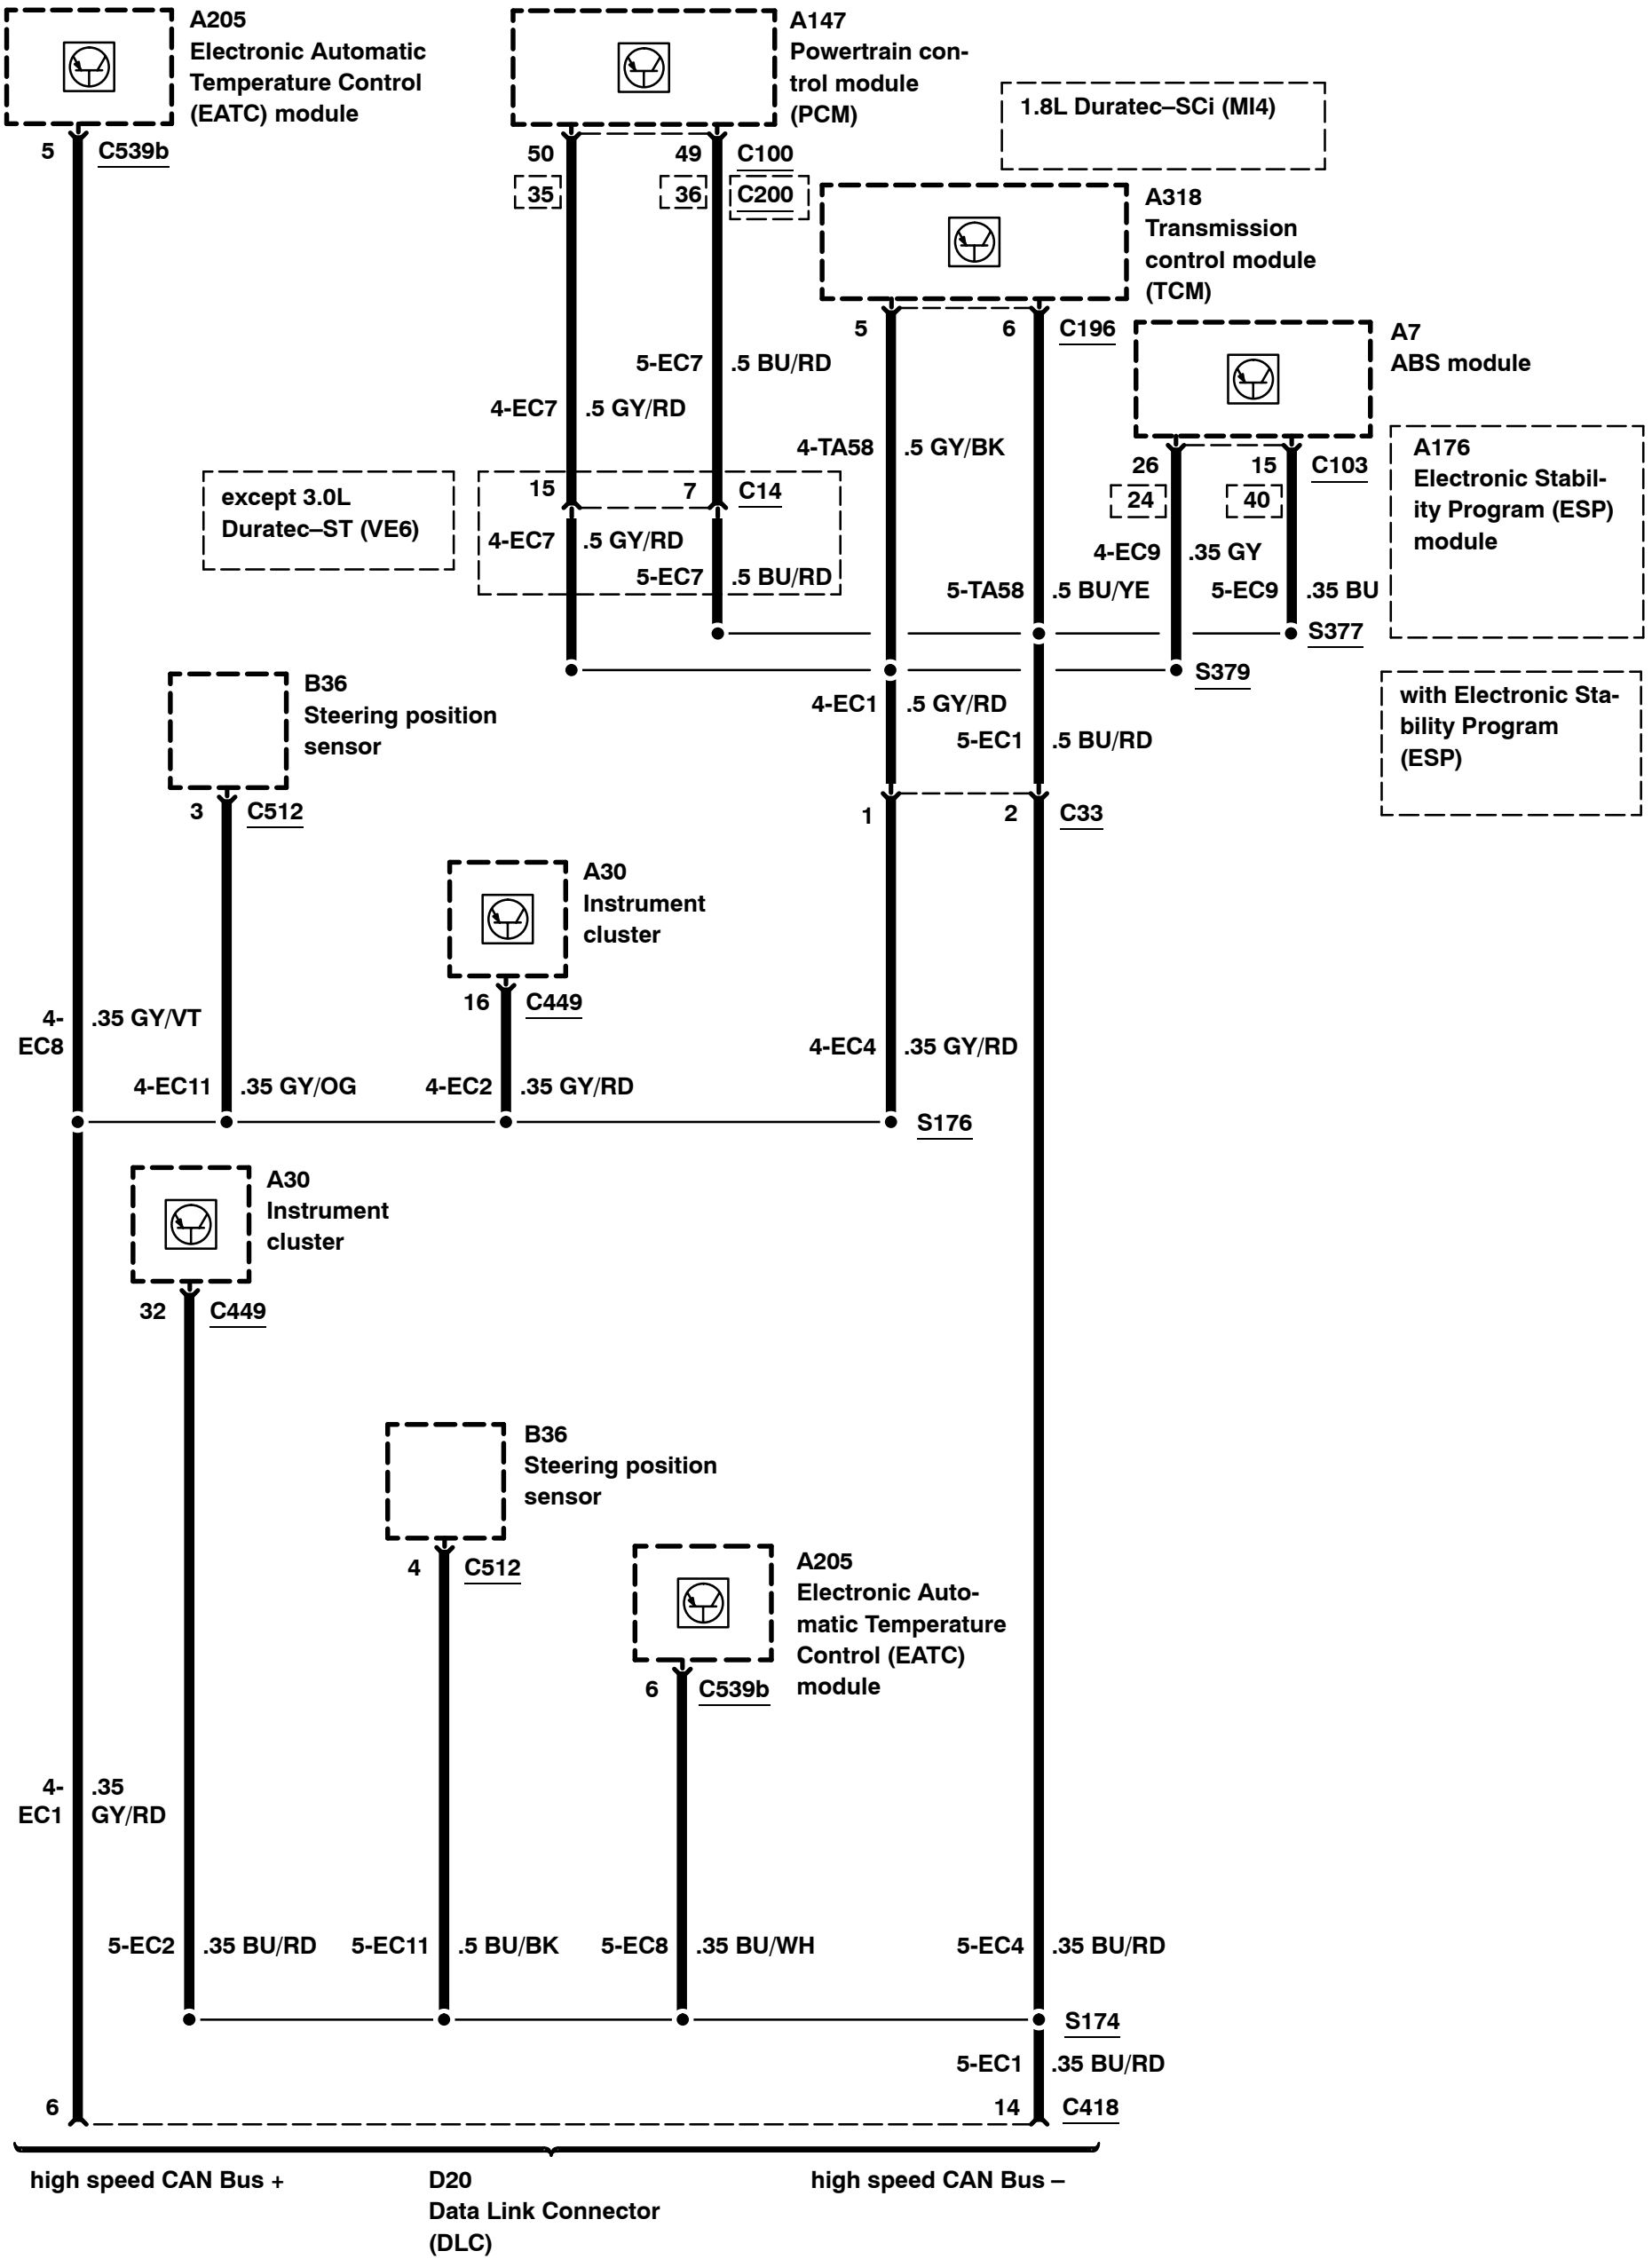


Module Communications Network, Diagnostic – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004

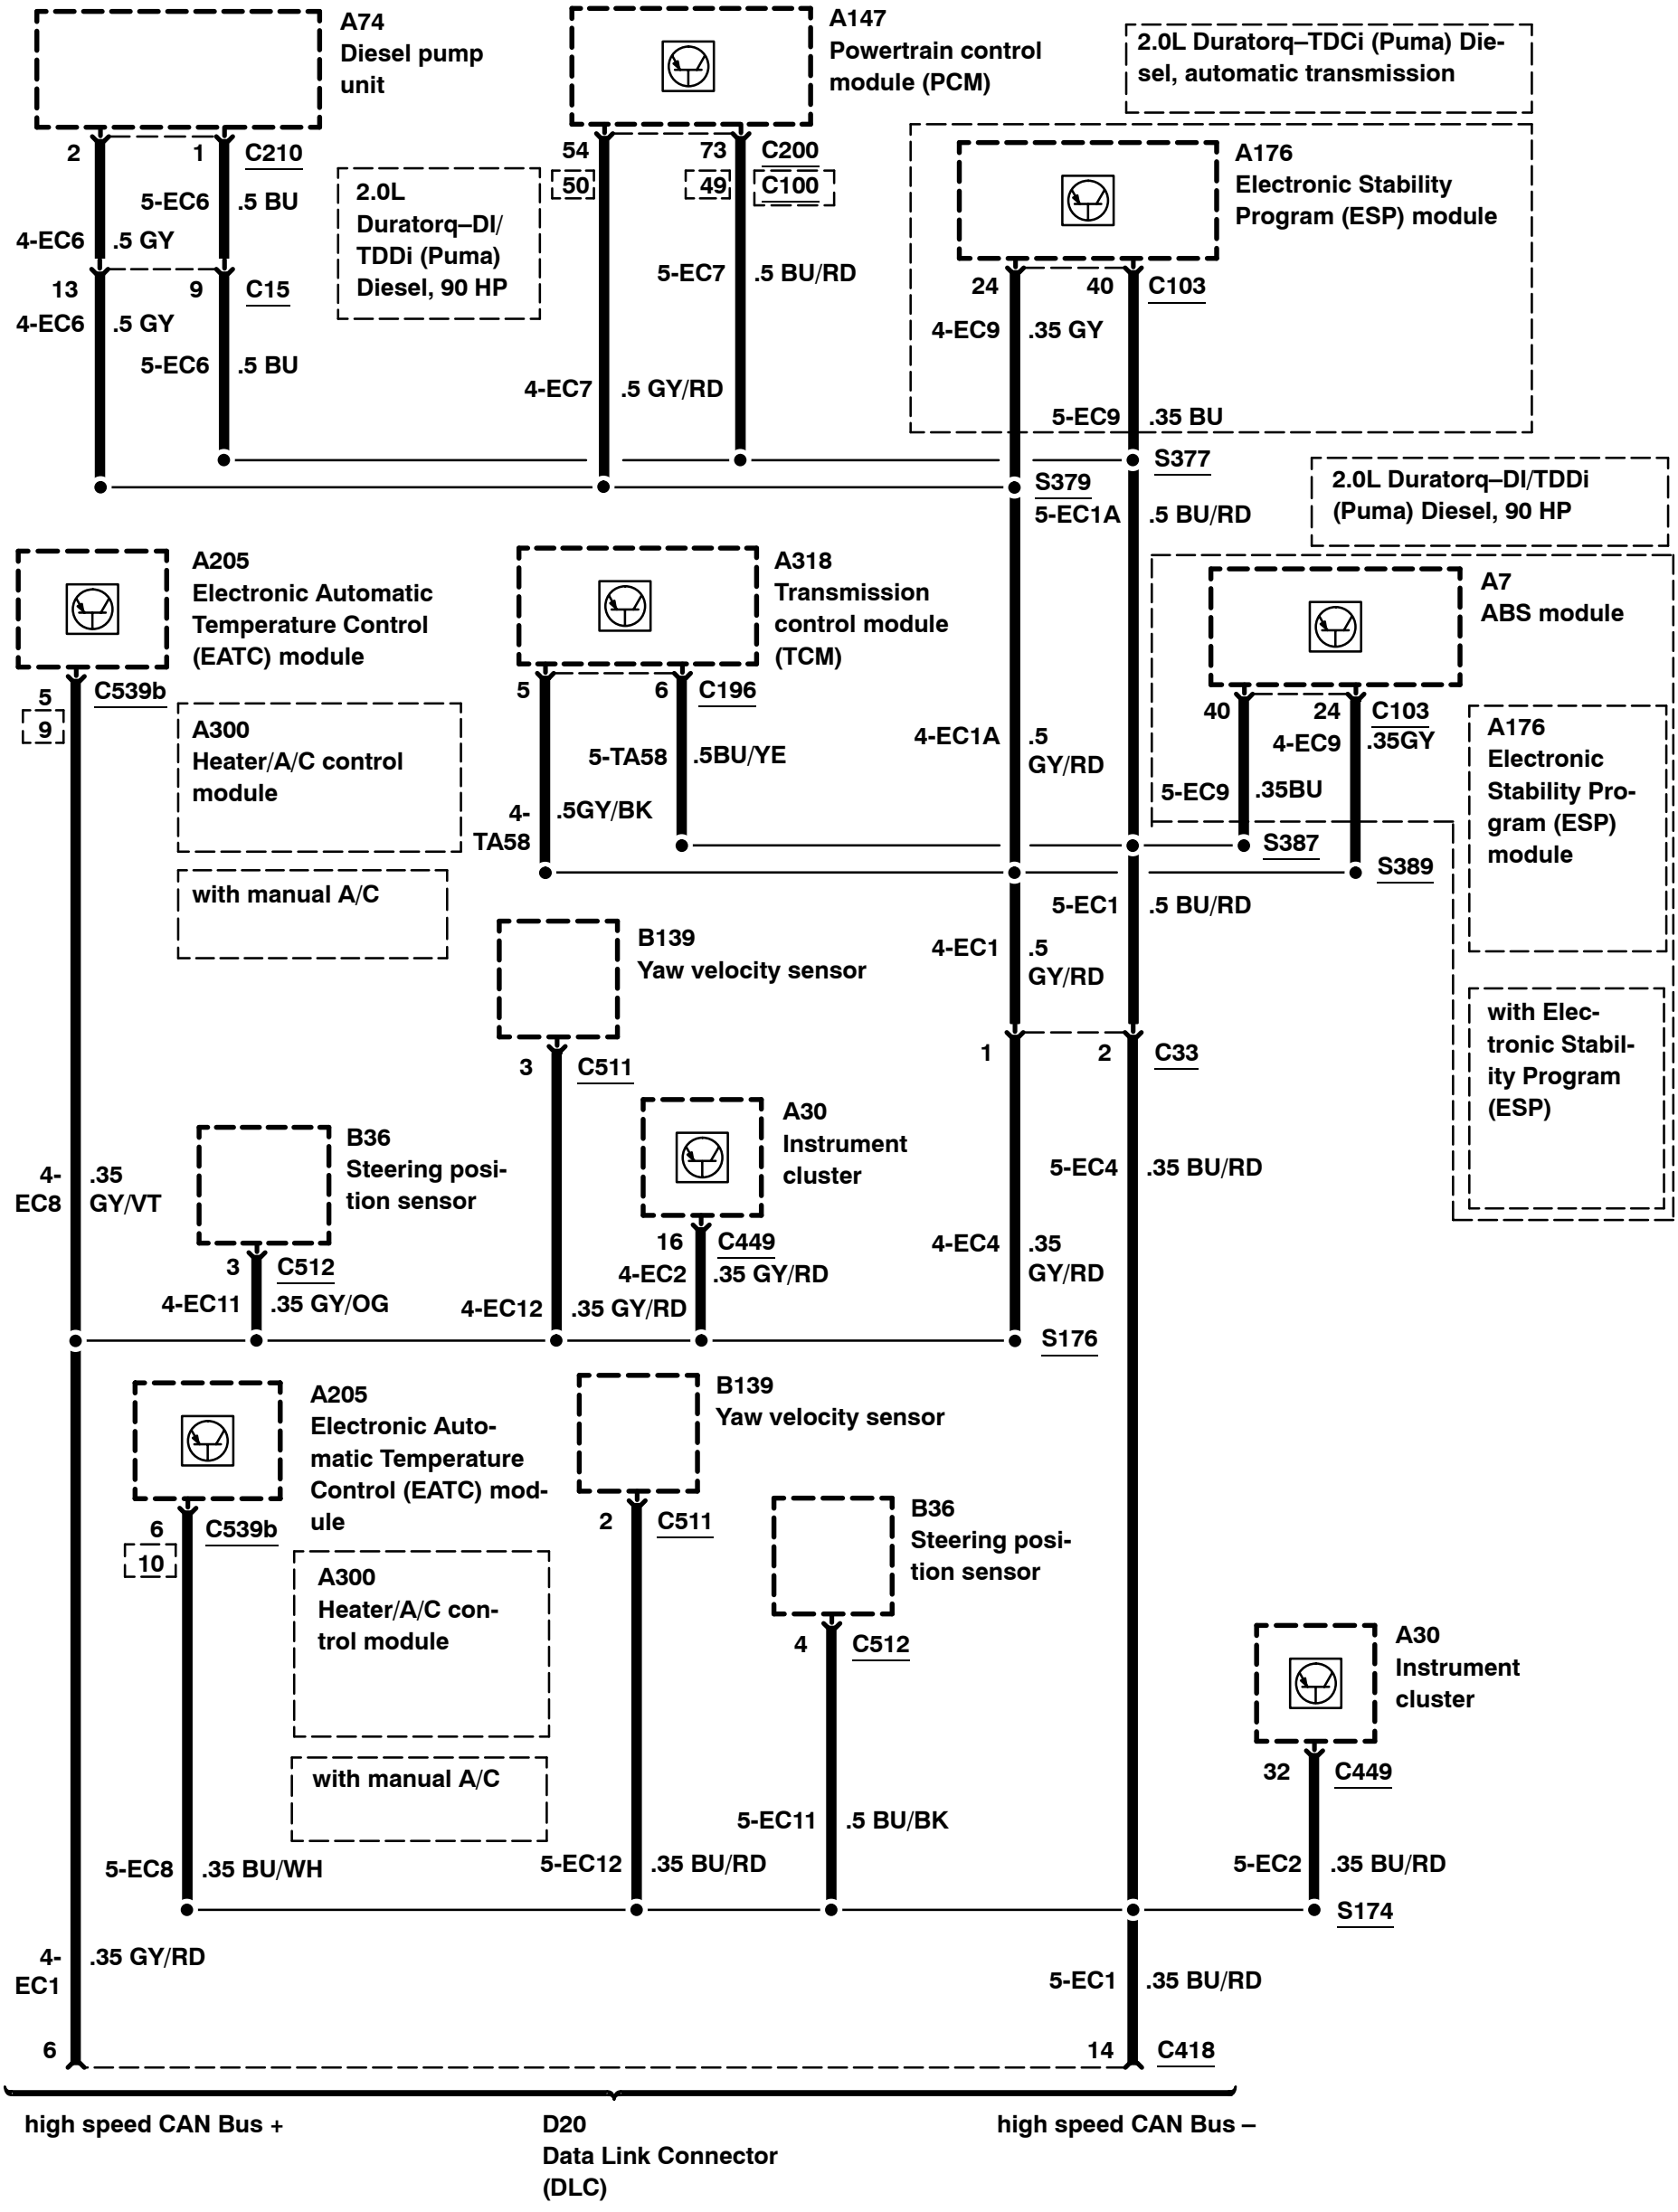


Module Communications Network, Diagnostic – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004

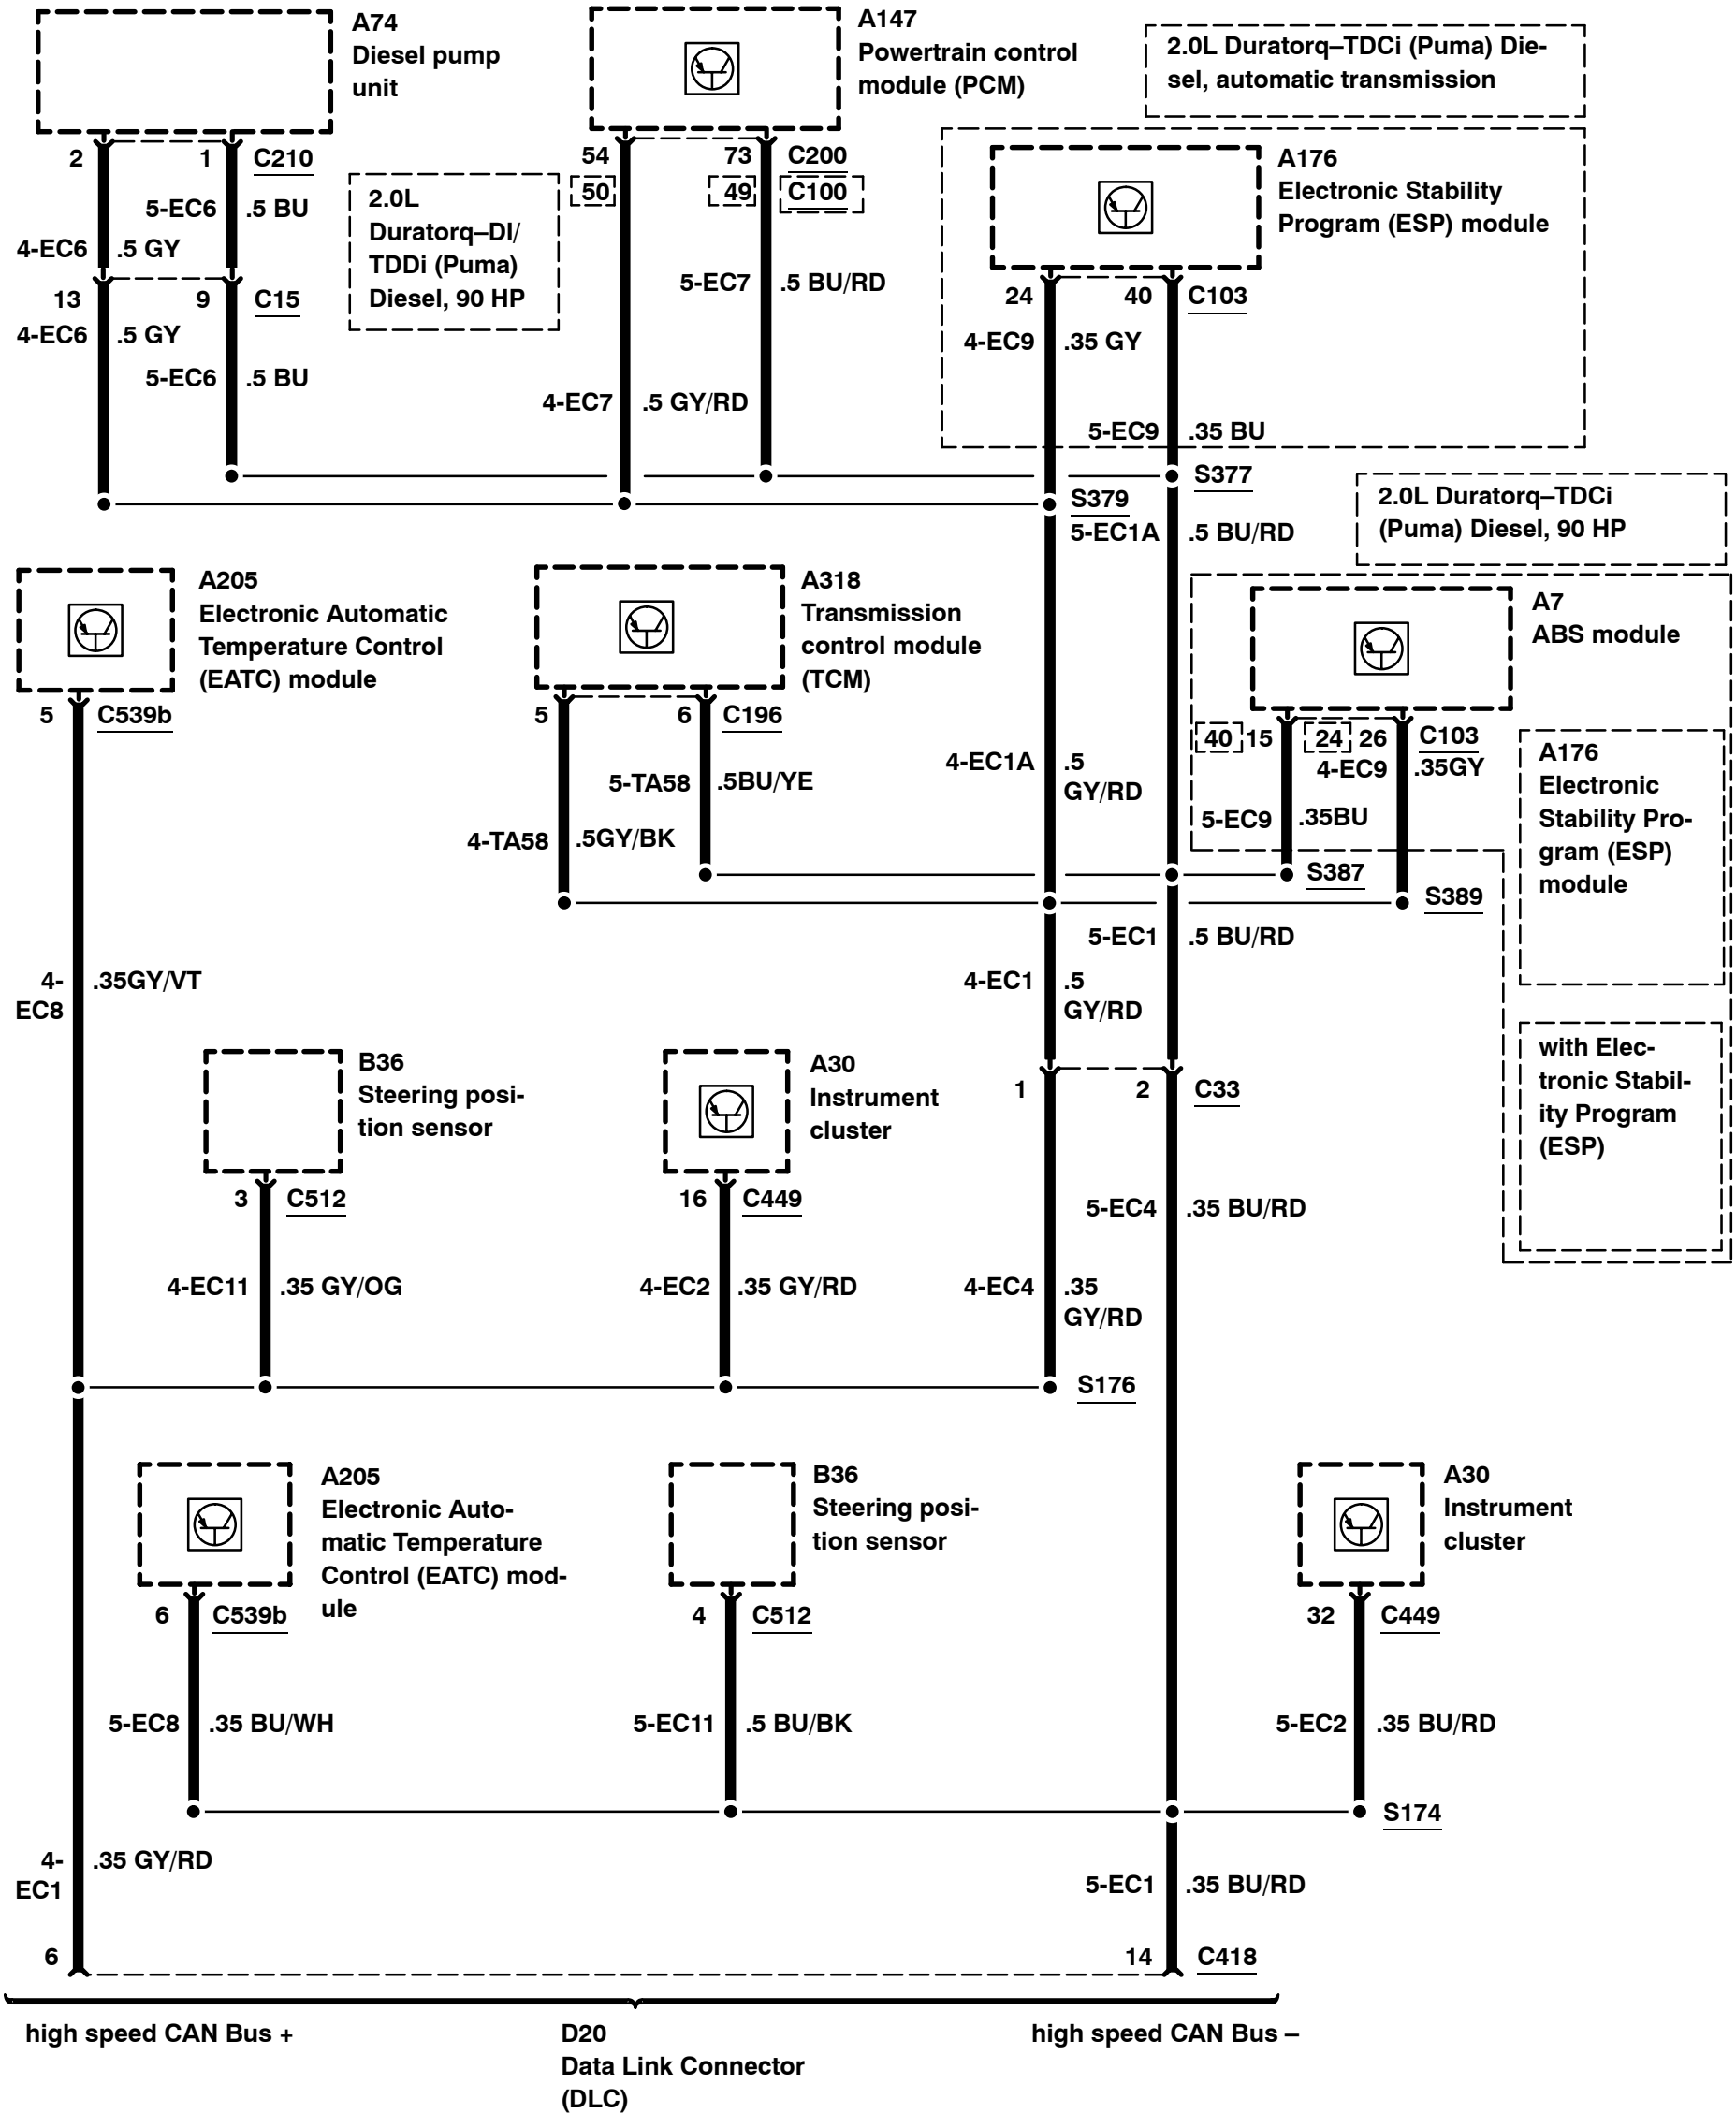


Module Communications Network, Diagnostic – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004

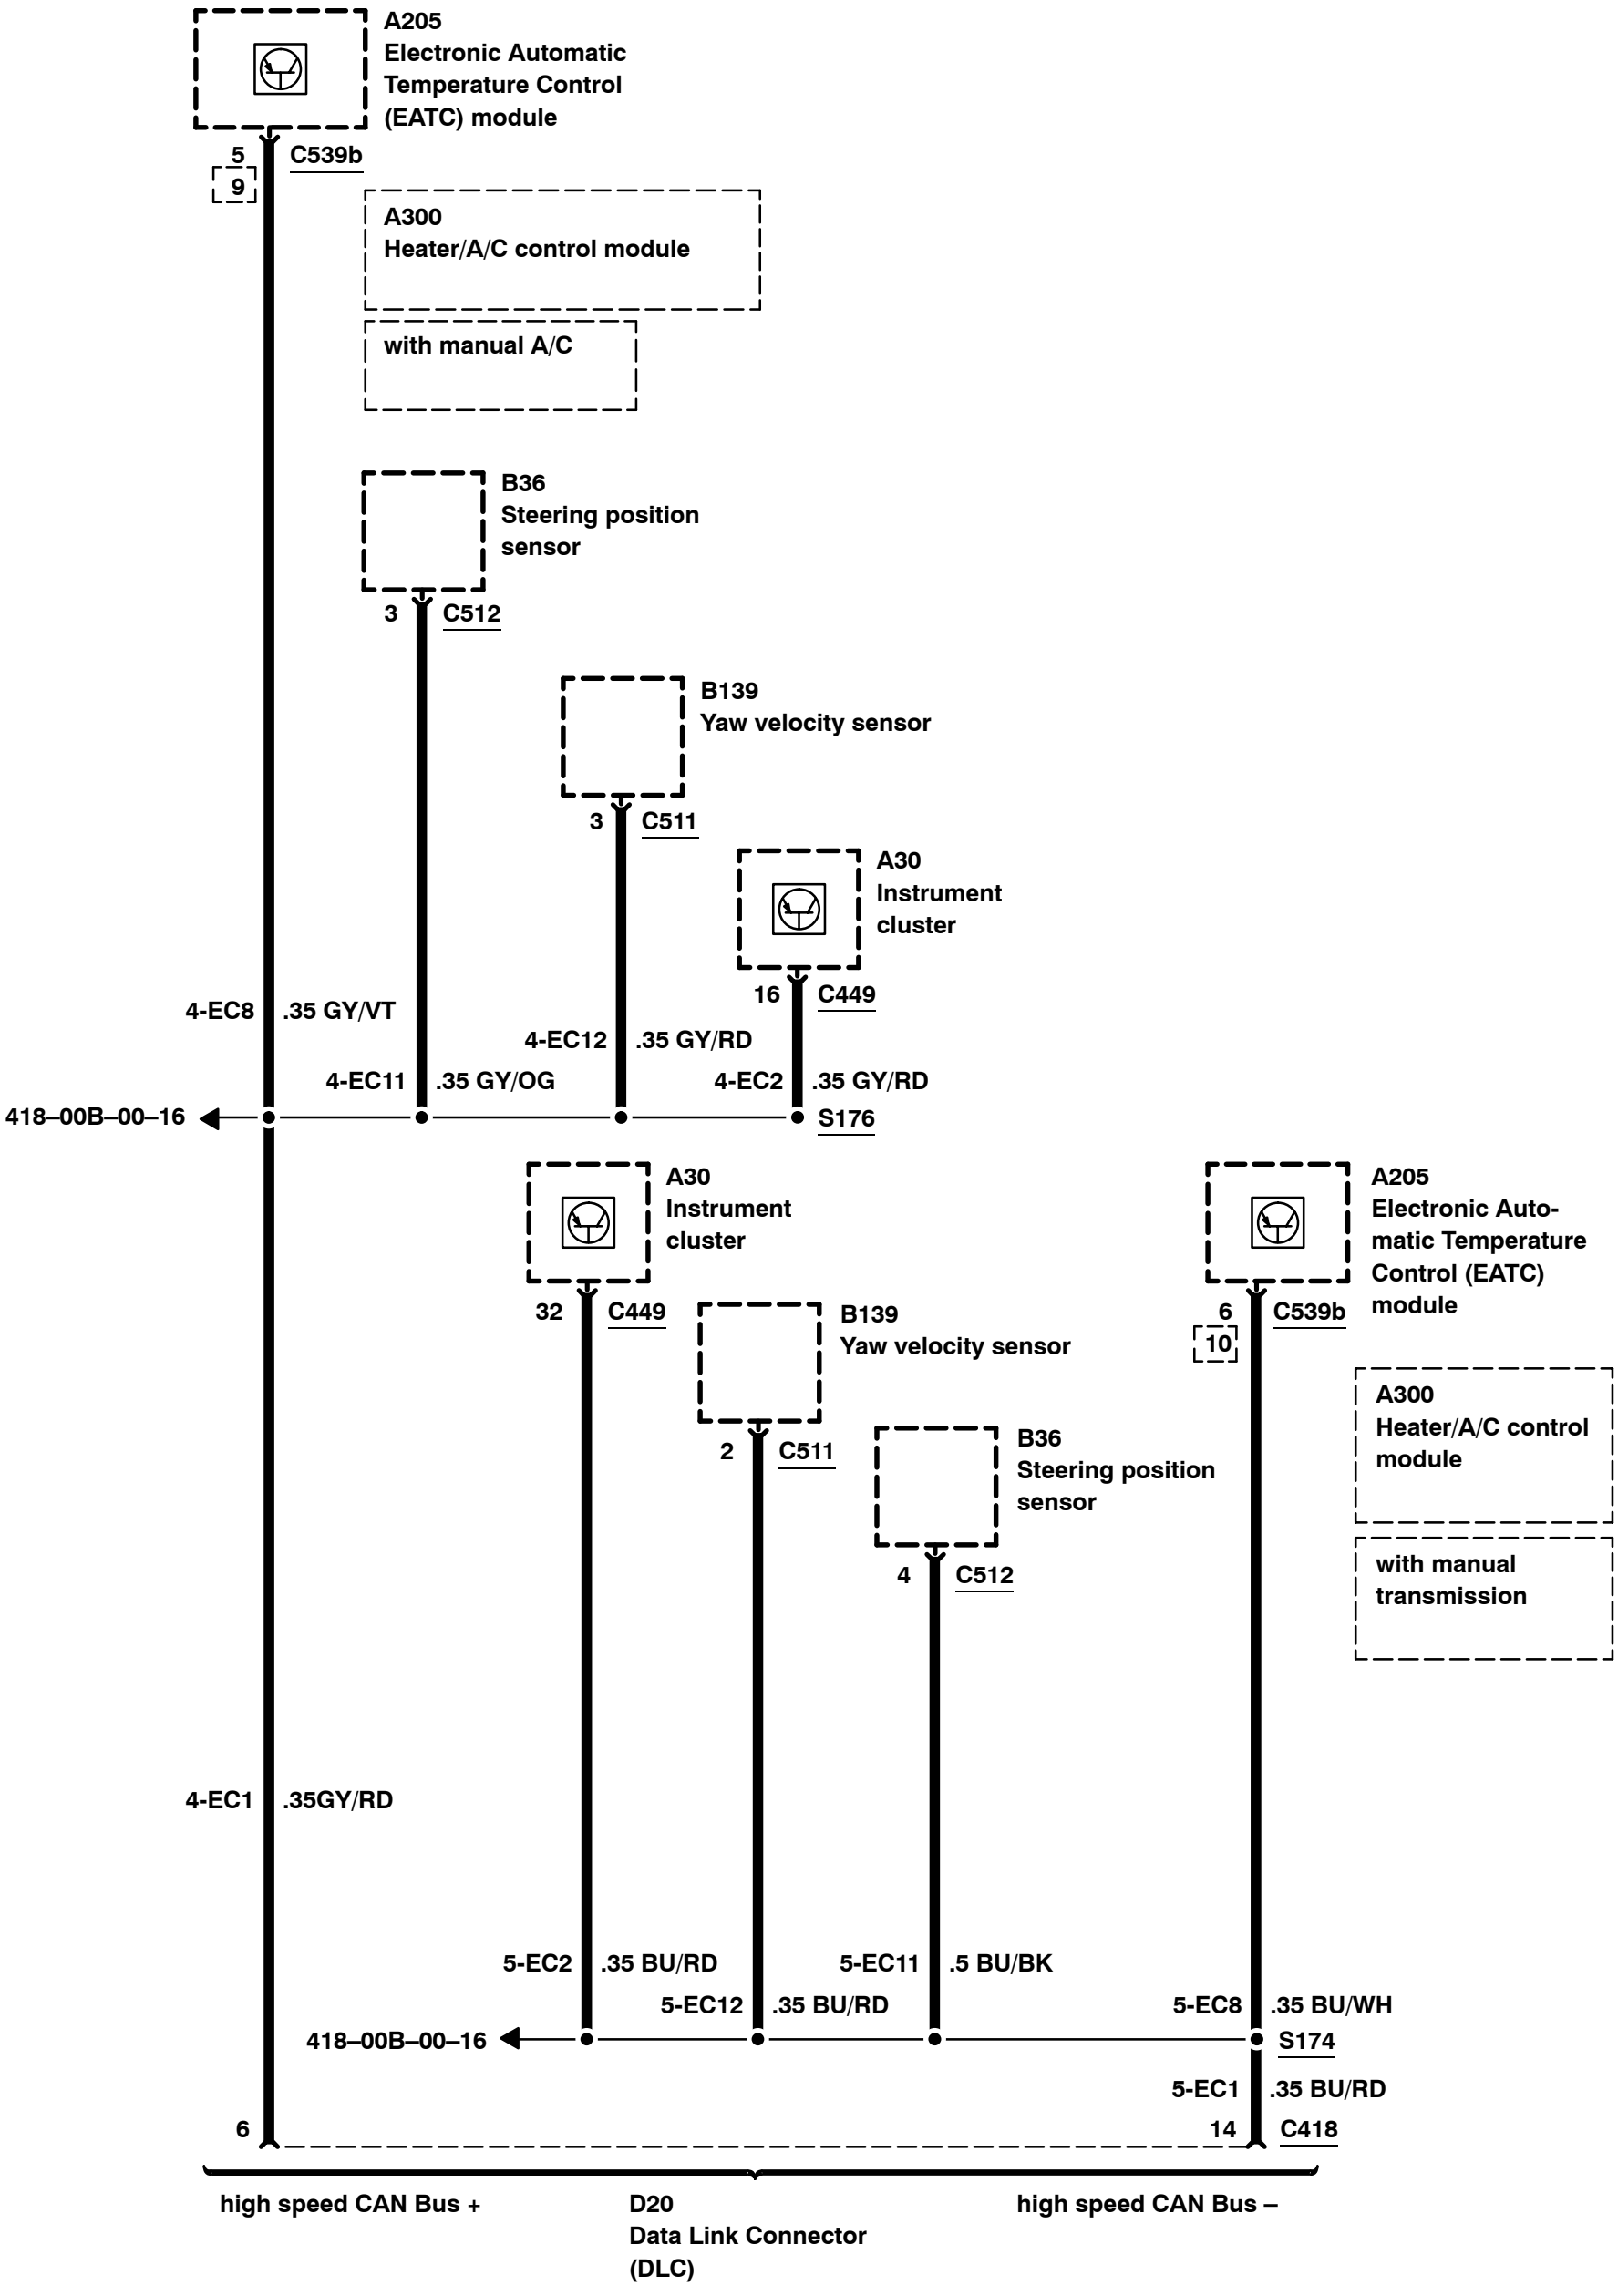


Module Communications Network, Diagnostic – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004

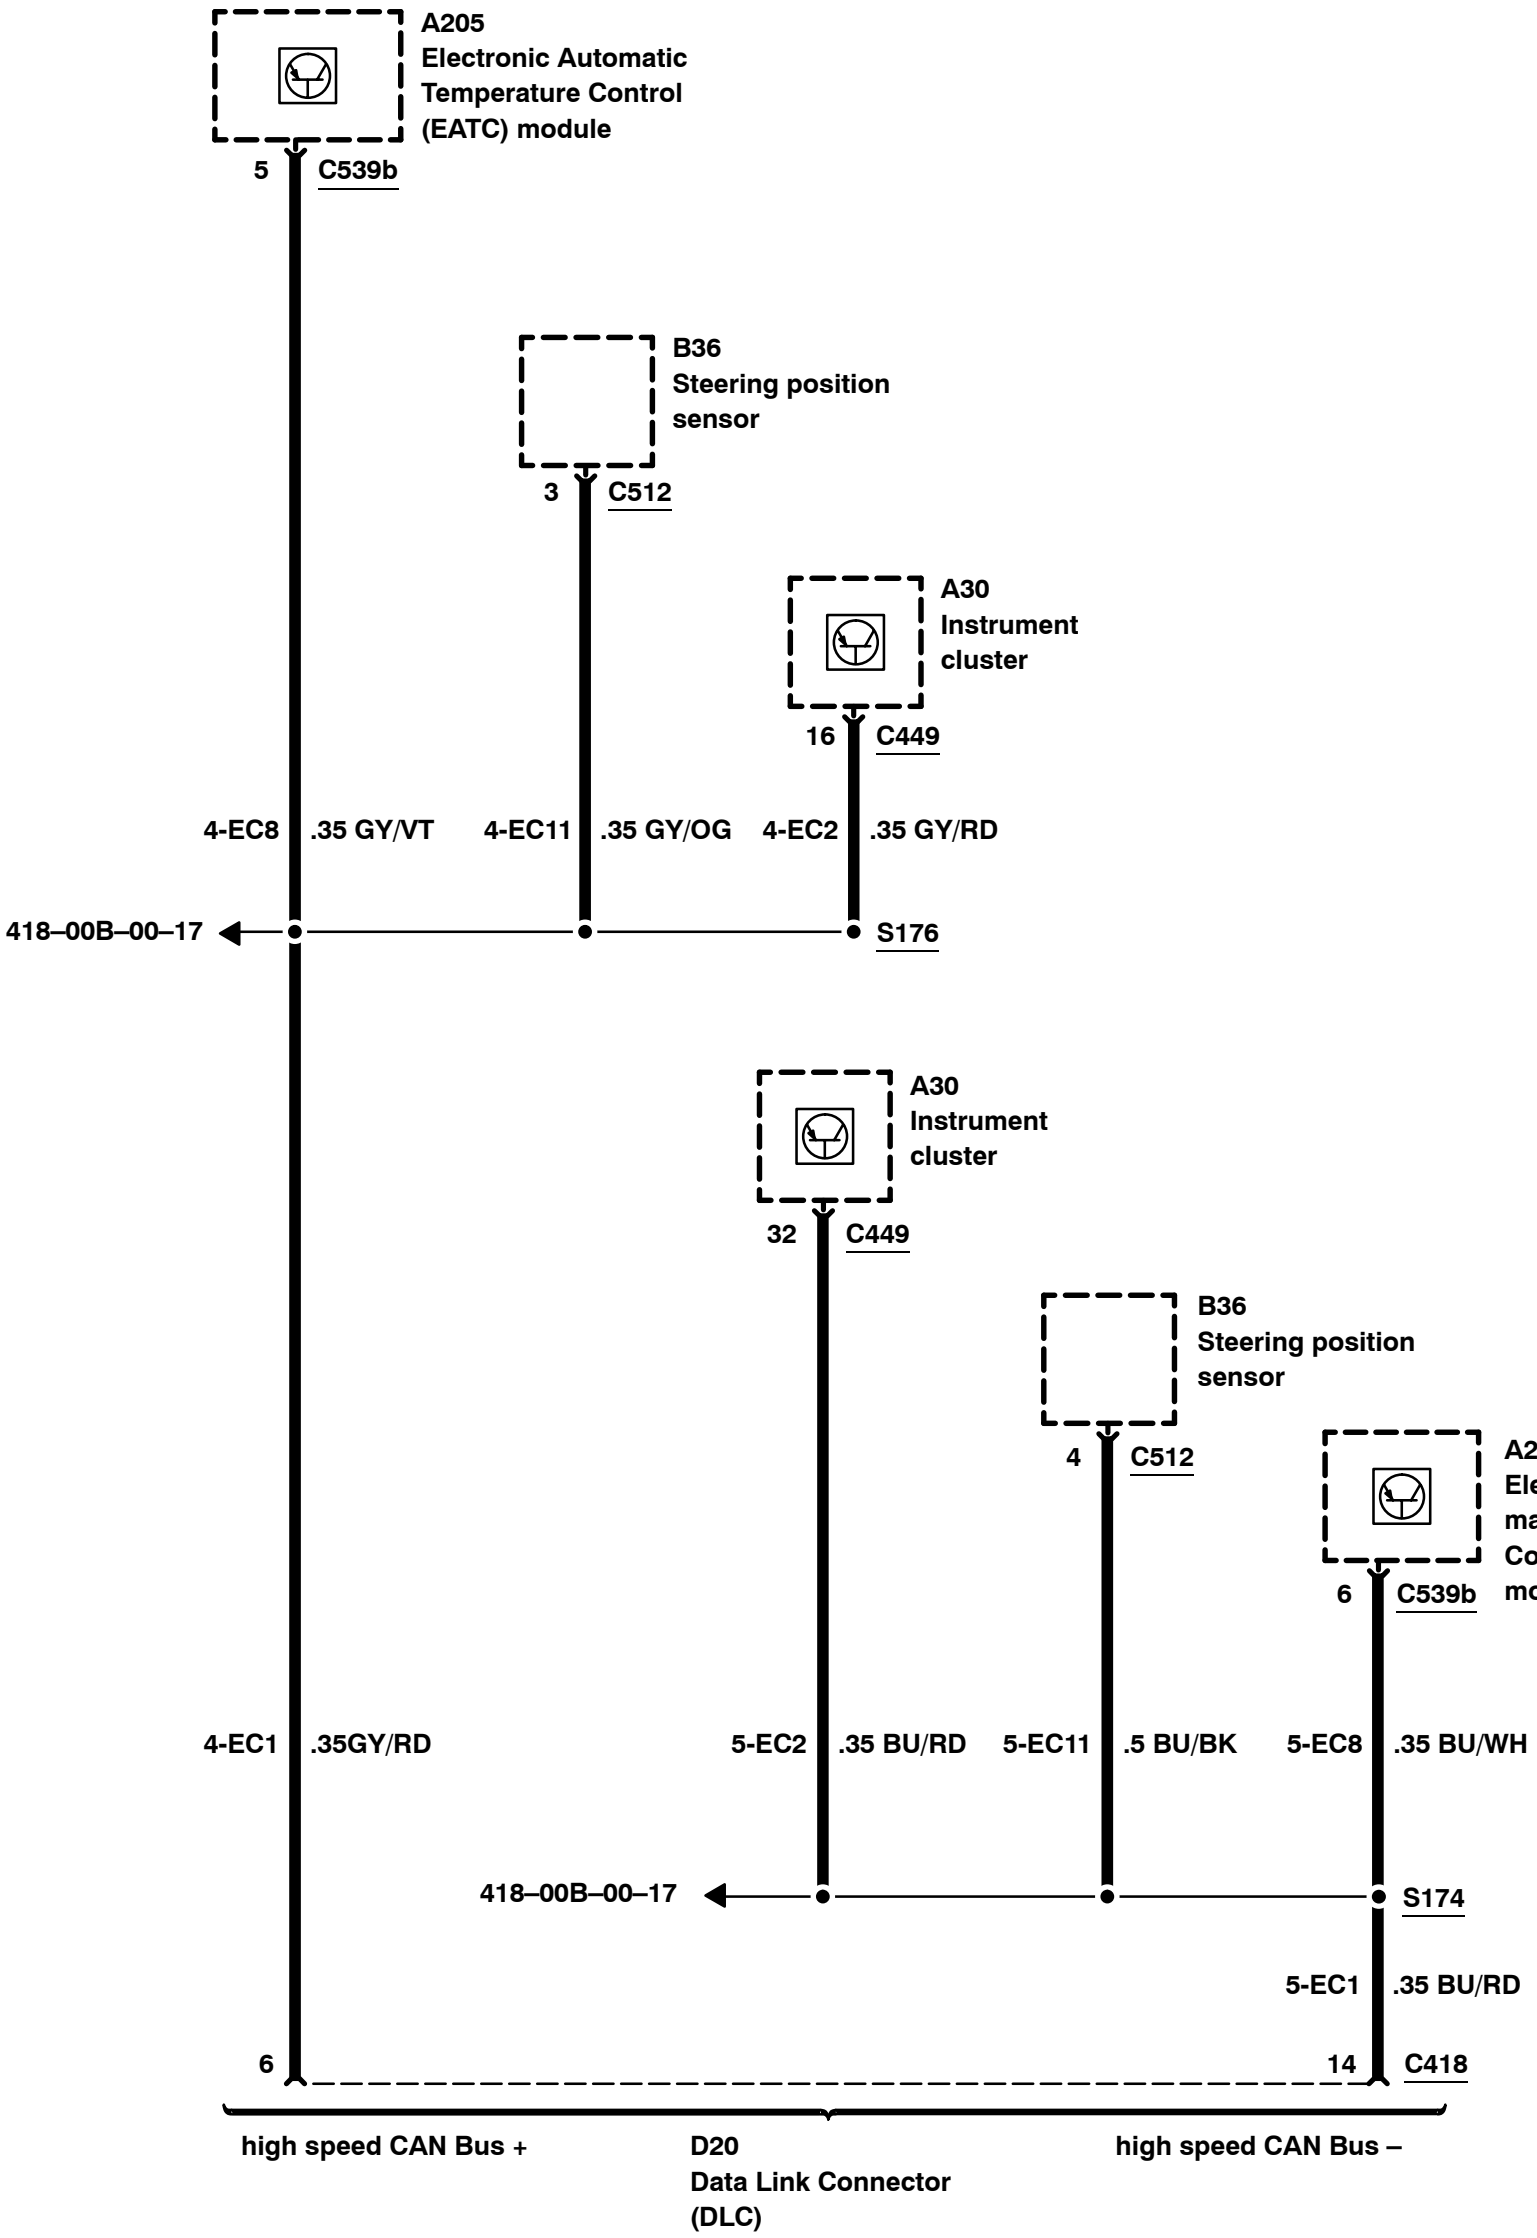

Module Communications Network, Diagnostic – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004

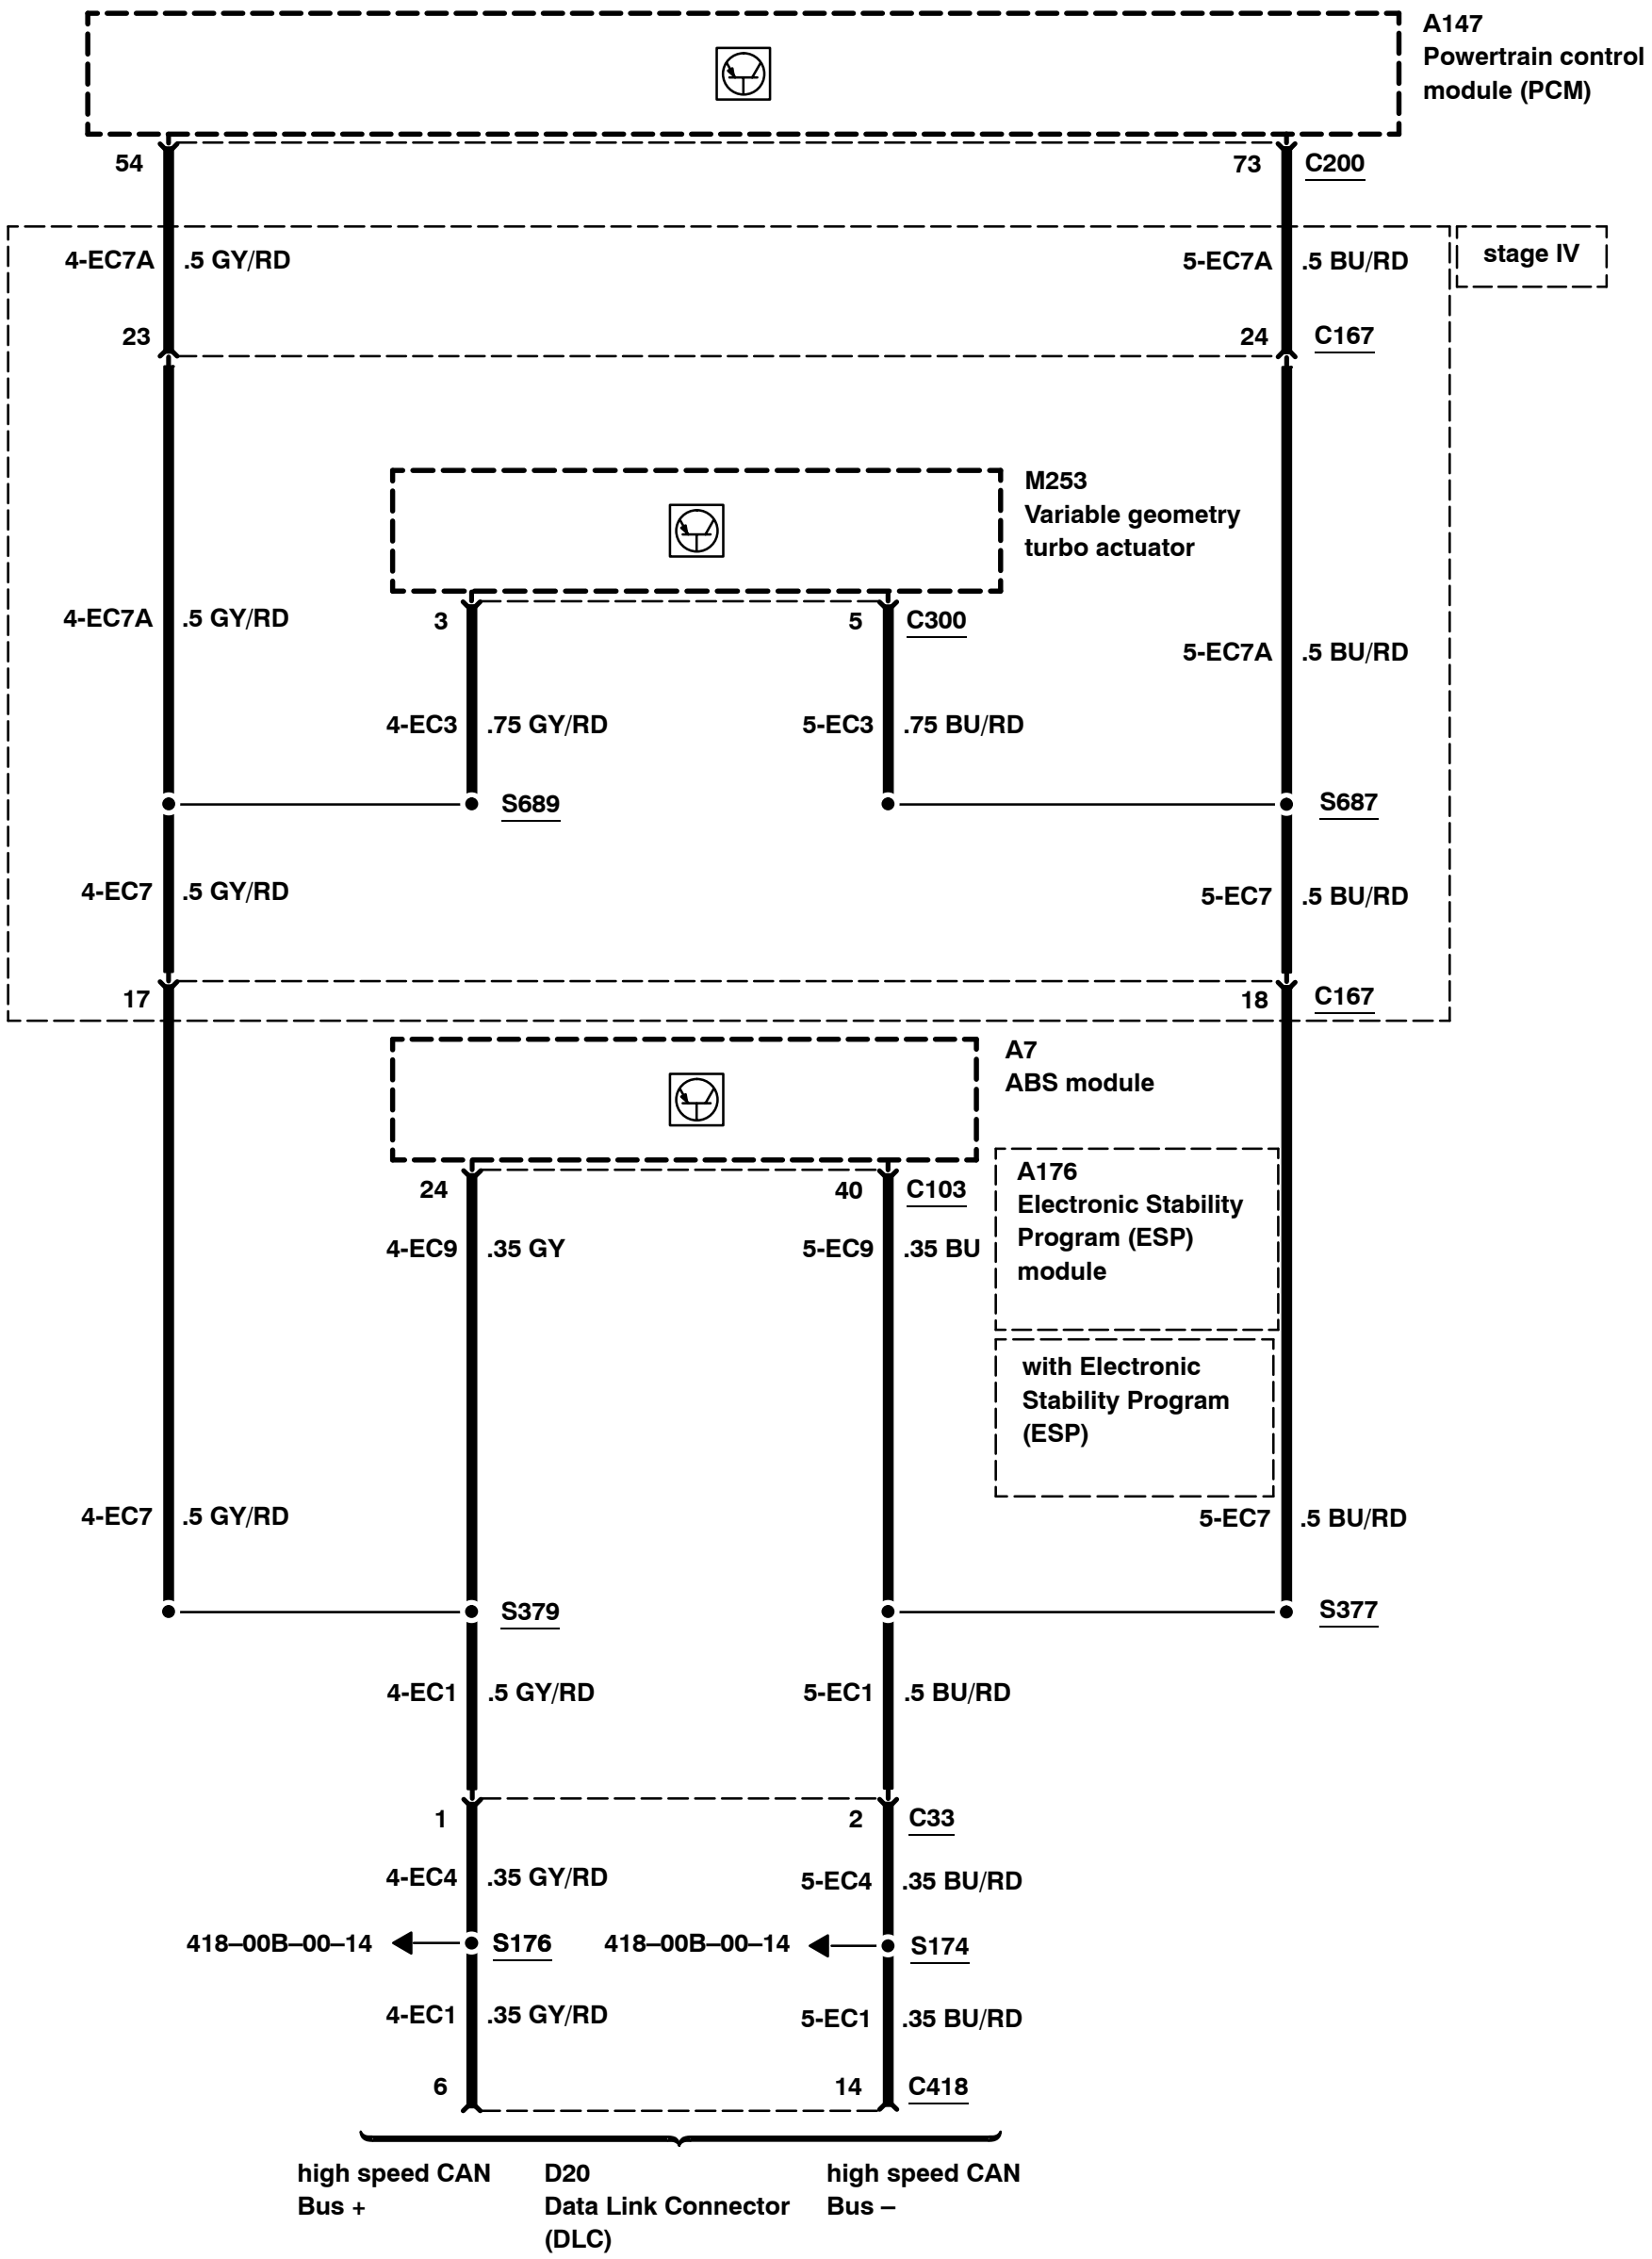


Module Communications Network, Diagnostic – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004

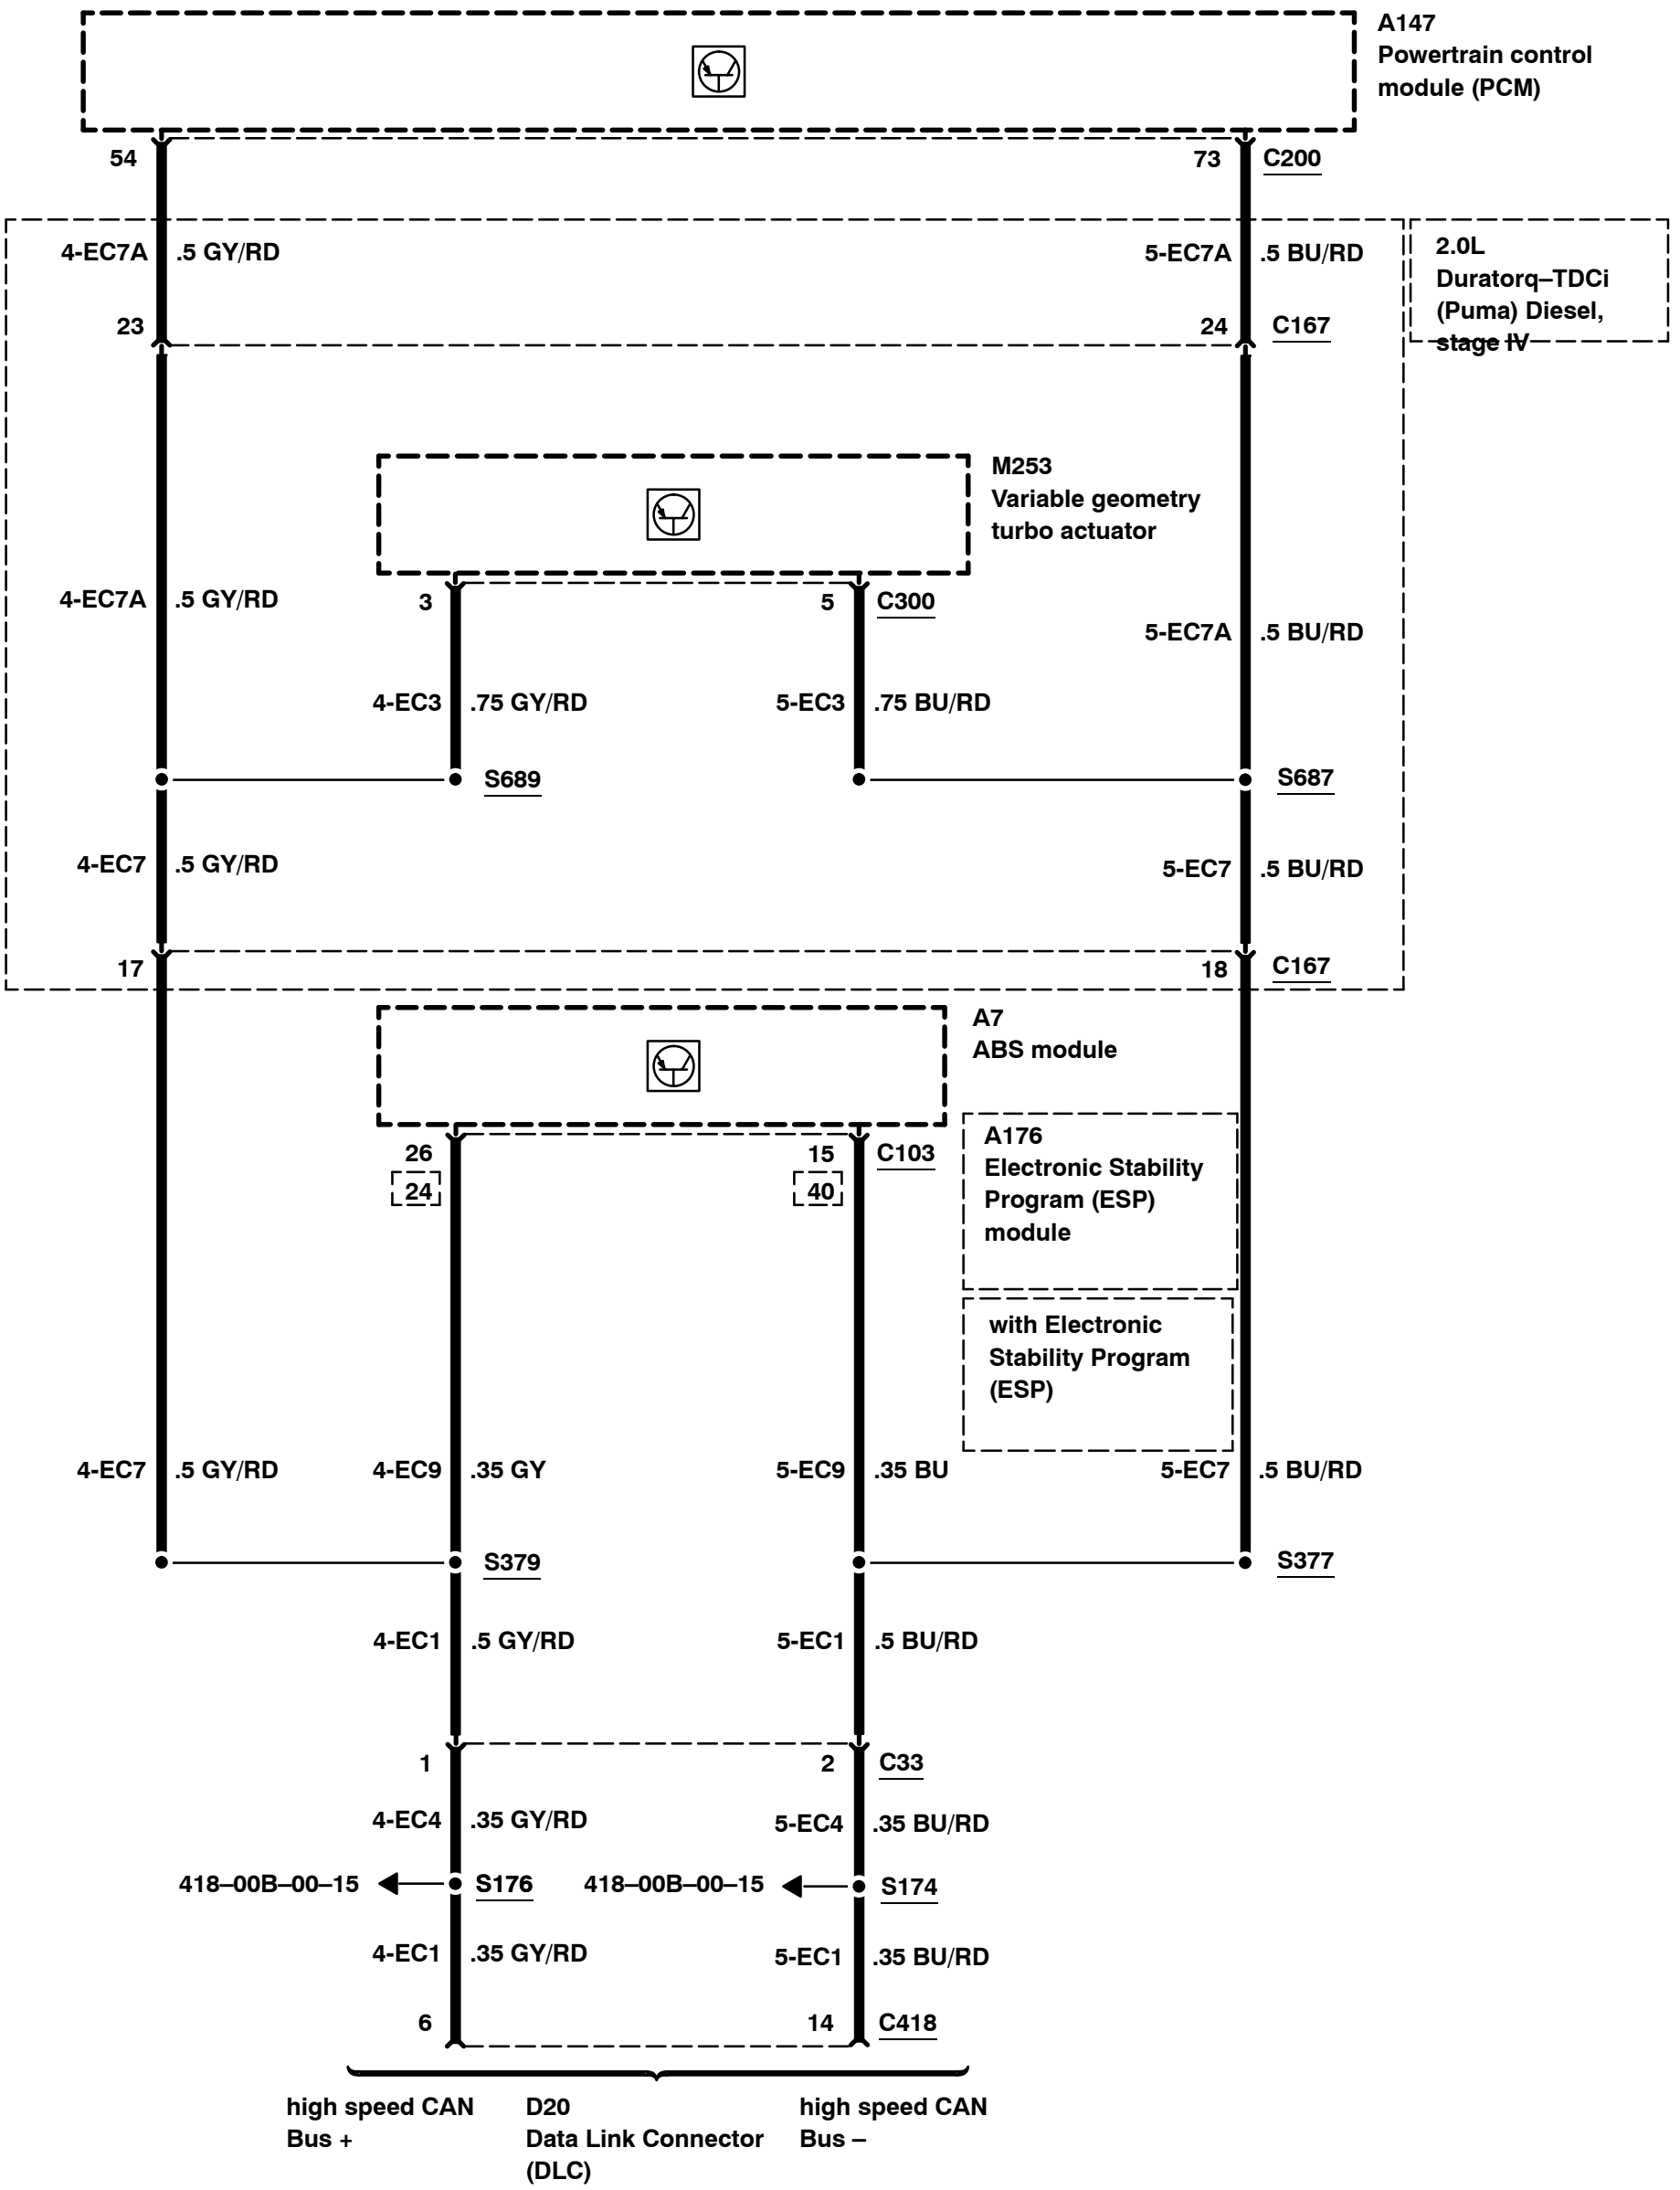

Module Communications Network, Diagnostic – Data Link Connector (DLC)


C418

F16016

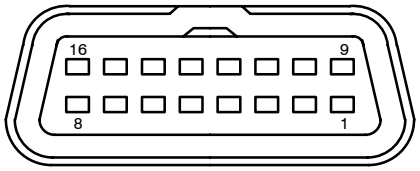


Pin number	Description	Wire colours
1		
2	SCP+	GY/OG
3	middle speed CAN Bus +	GY
4	Chassis Ground	BK
5	Signal Ground	BK/OG
6	high speed CAN Bus +	GY/RD
7	K–Line ISO 9141	WH/BK
8		
9		
10	SCP–	BU/BK
11	middle speed CAN Bus –	BU
12		
13	Module programming signal	WH/GN
14	high speed CAN Bus –	BU/RD
15		
16	Battery Power	OG


Anti–Theft – Active

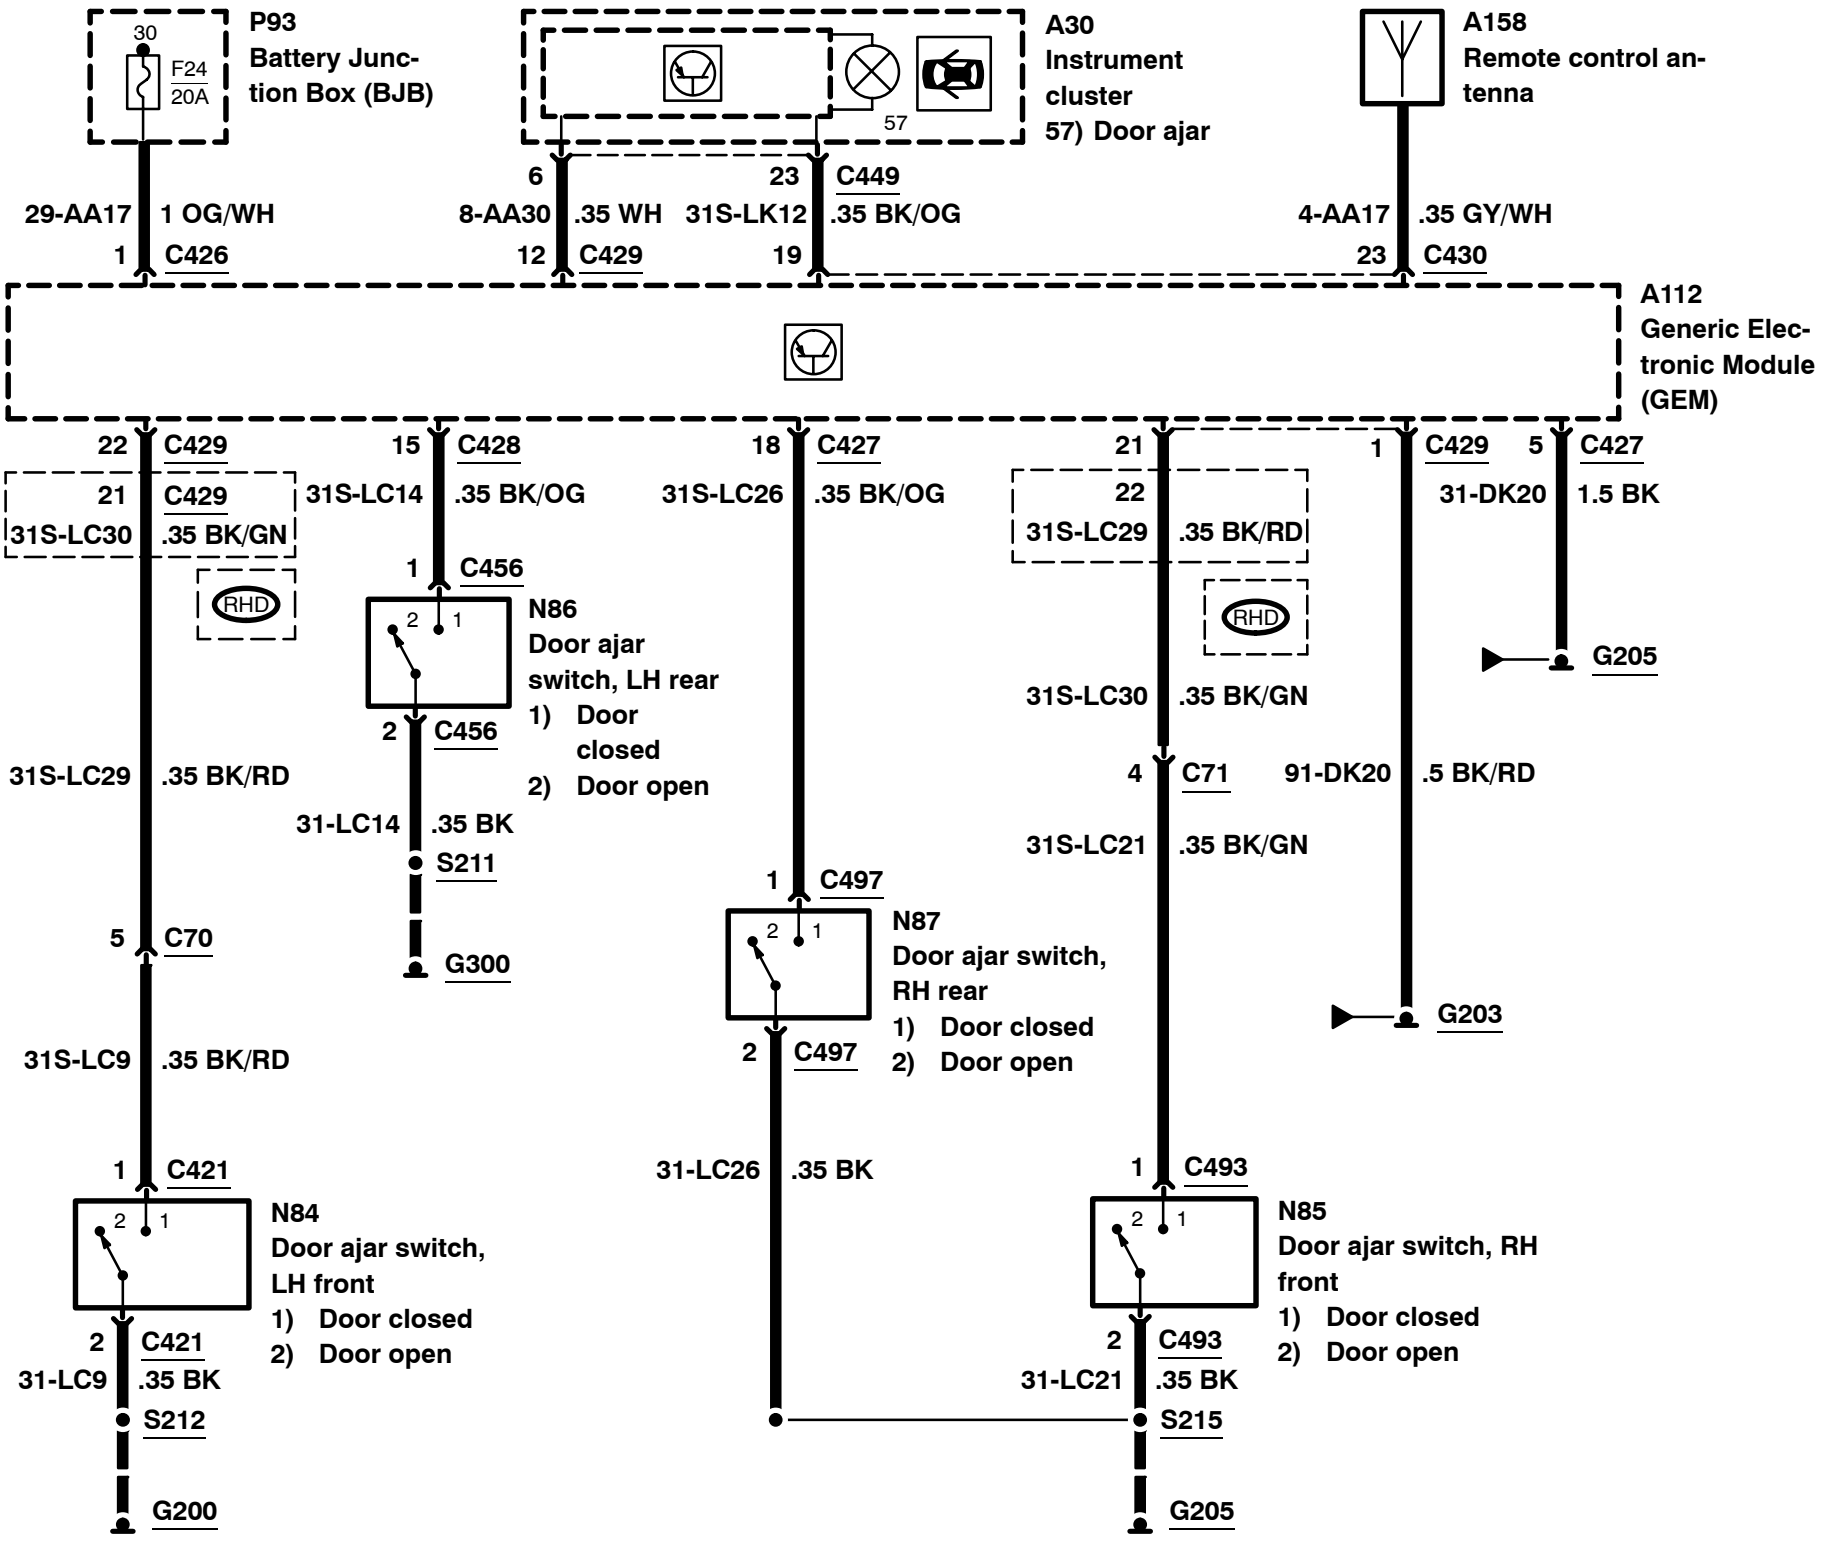


Anti–Theft – Active

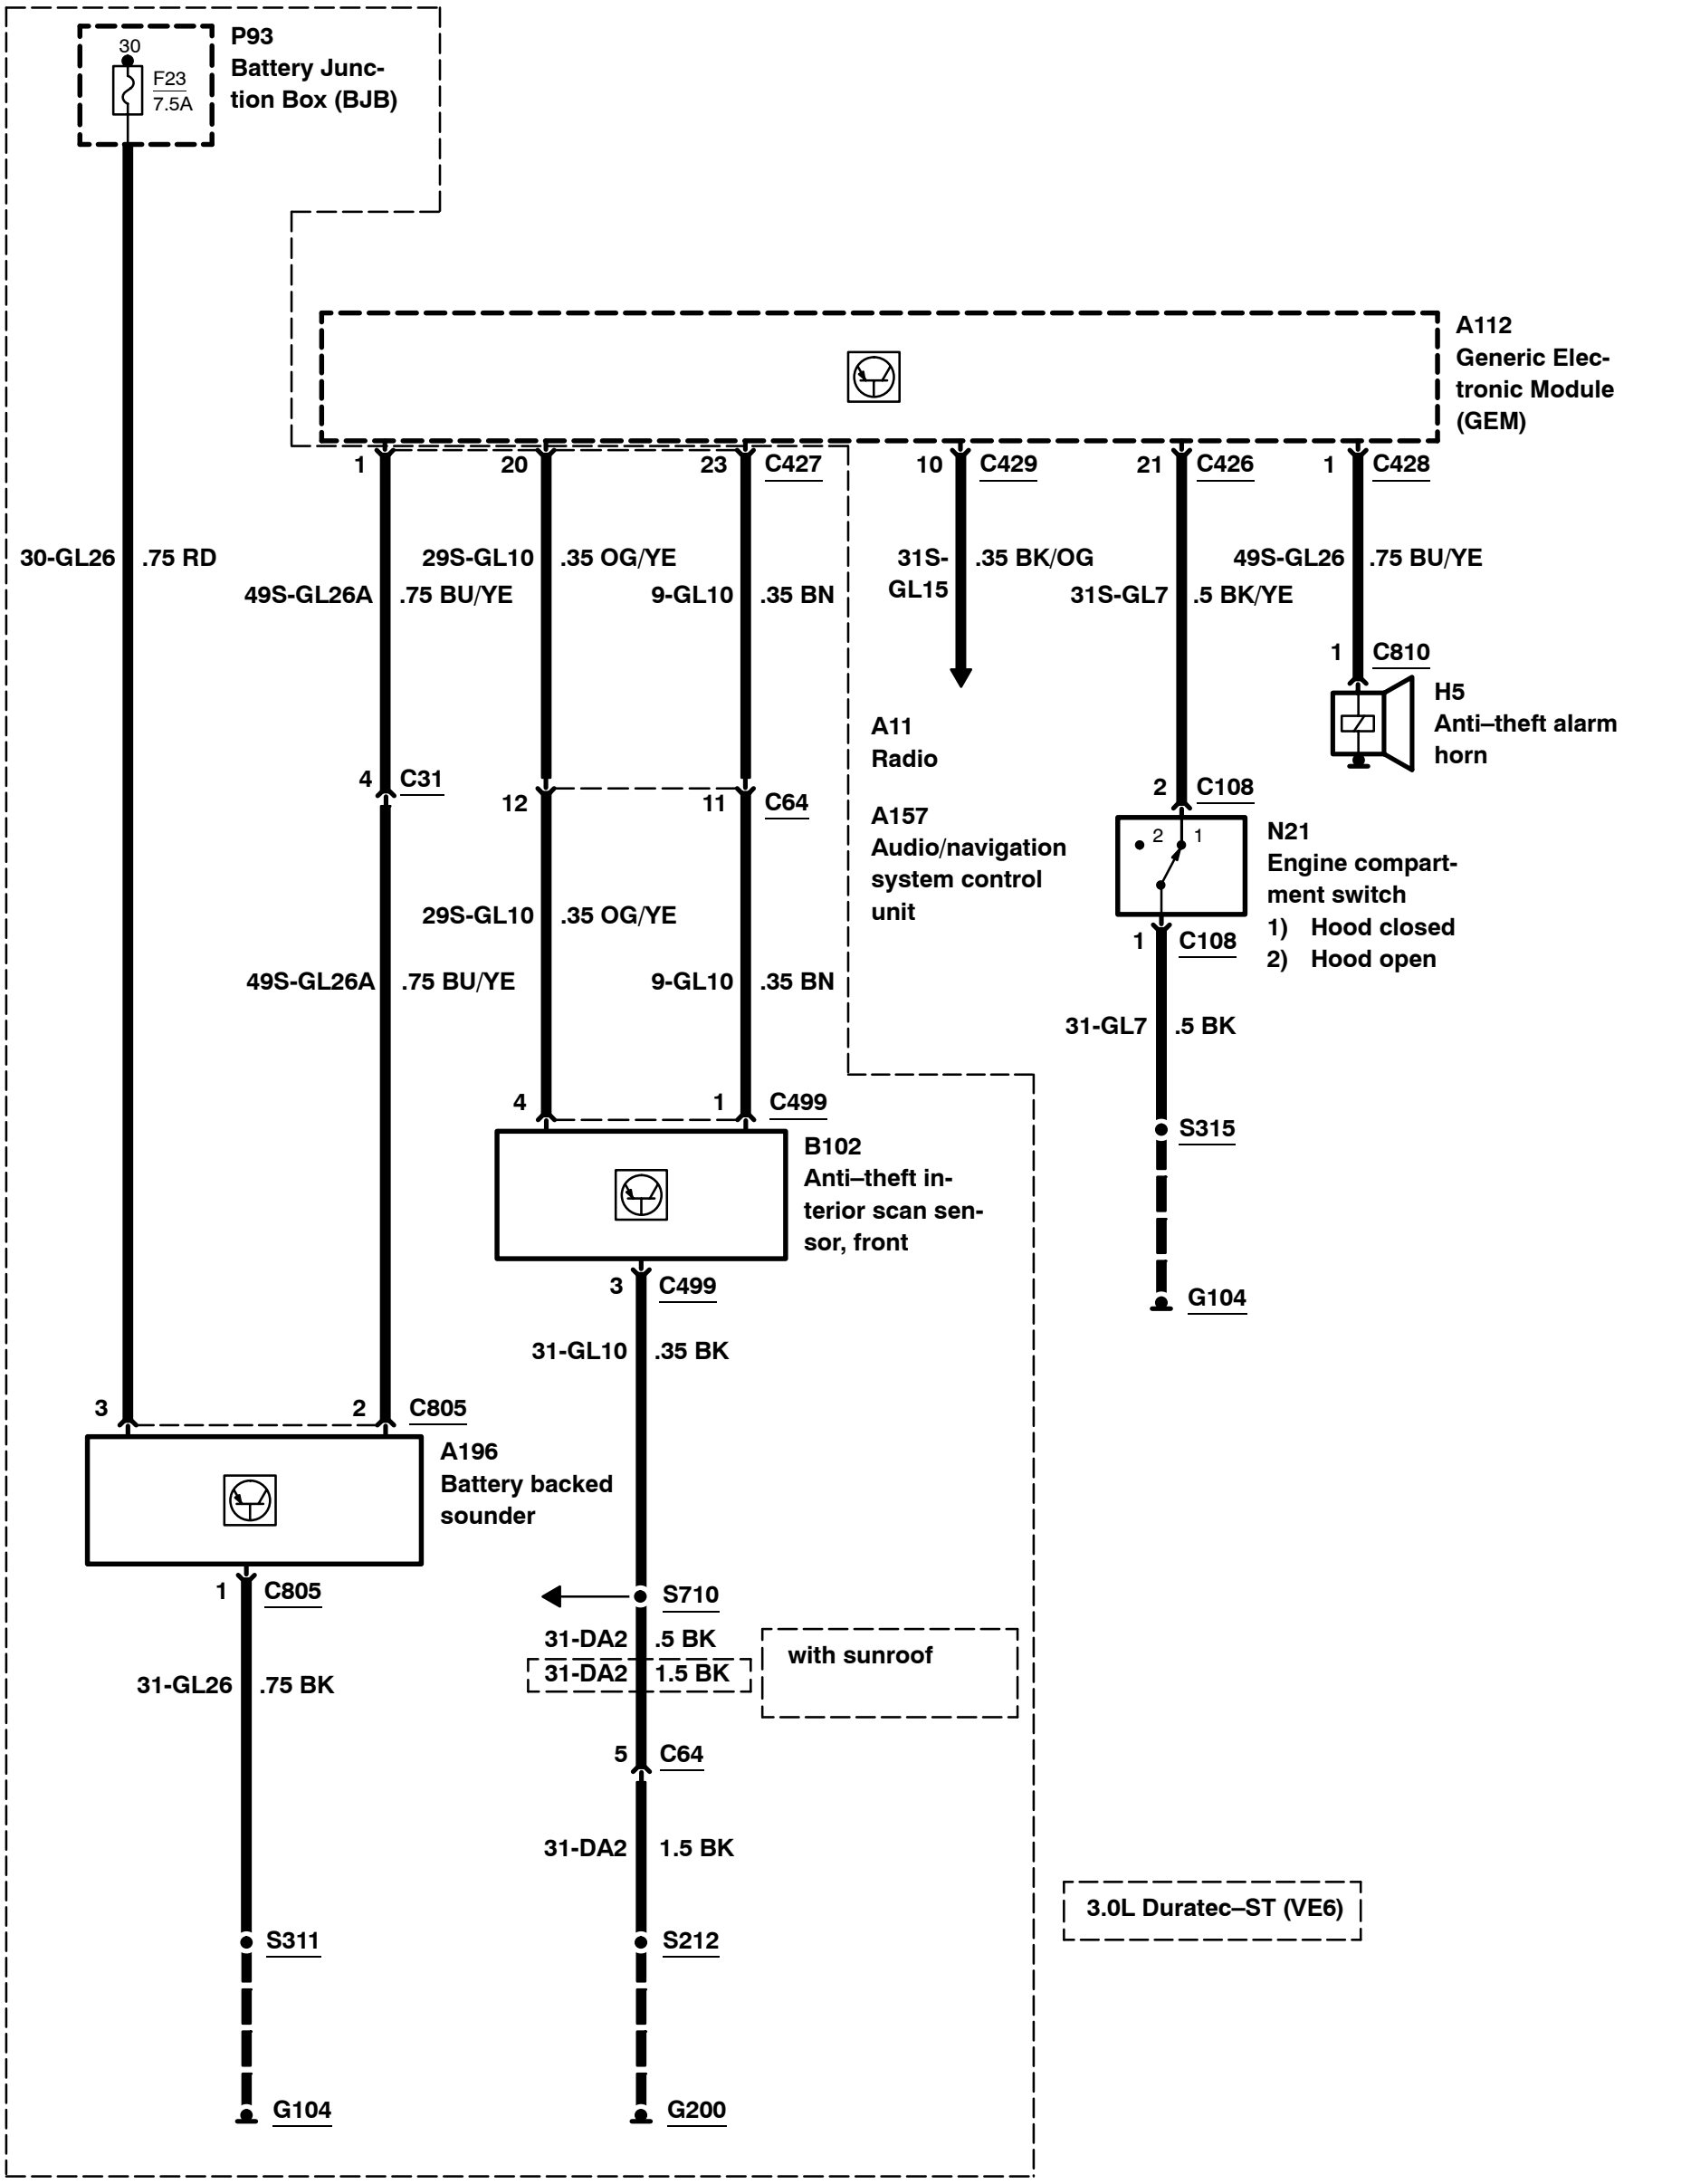


Anti–Theft – Active

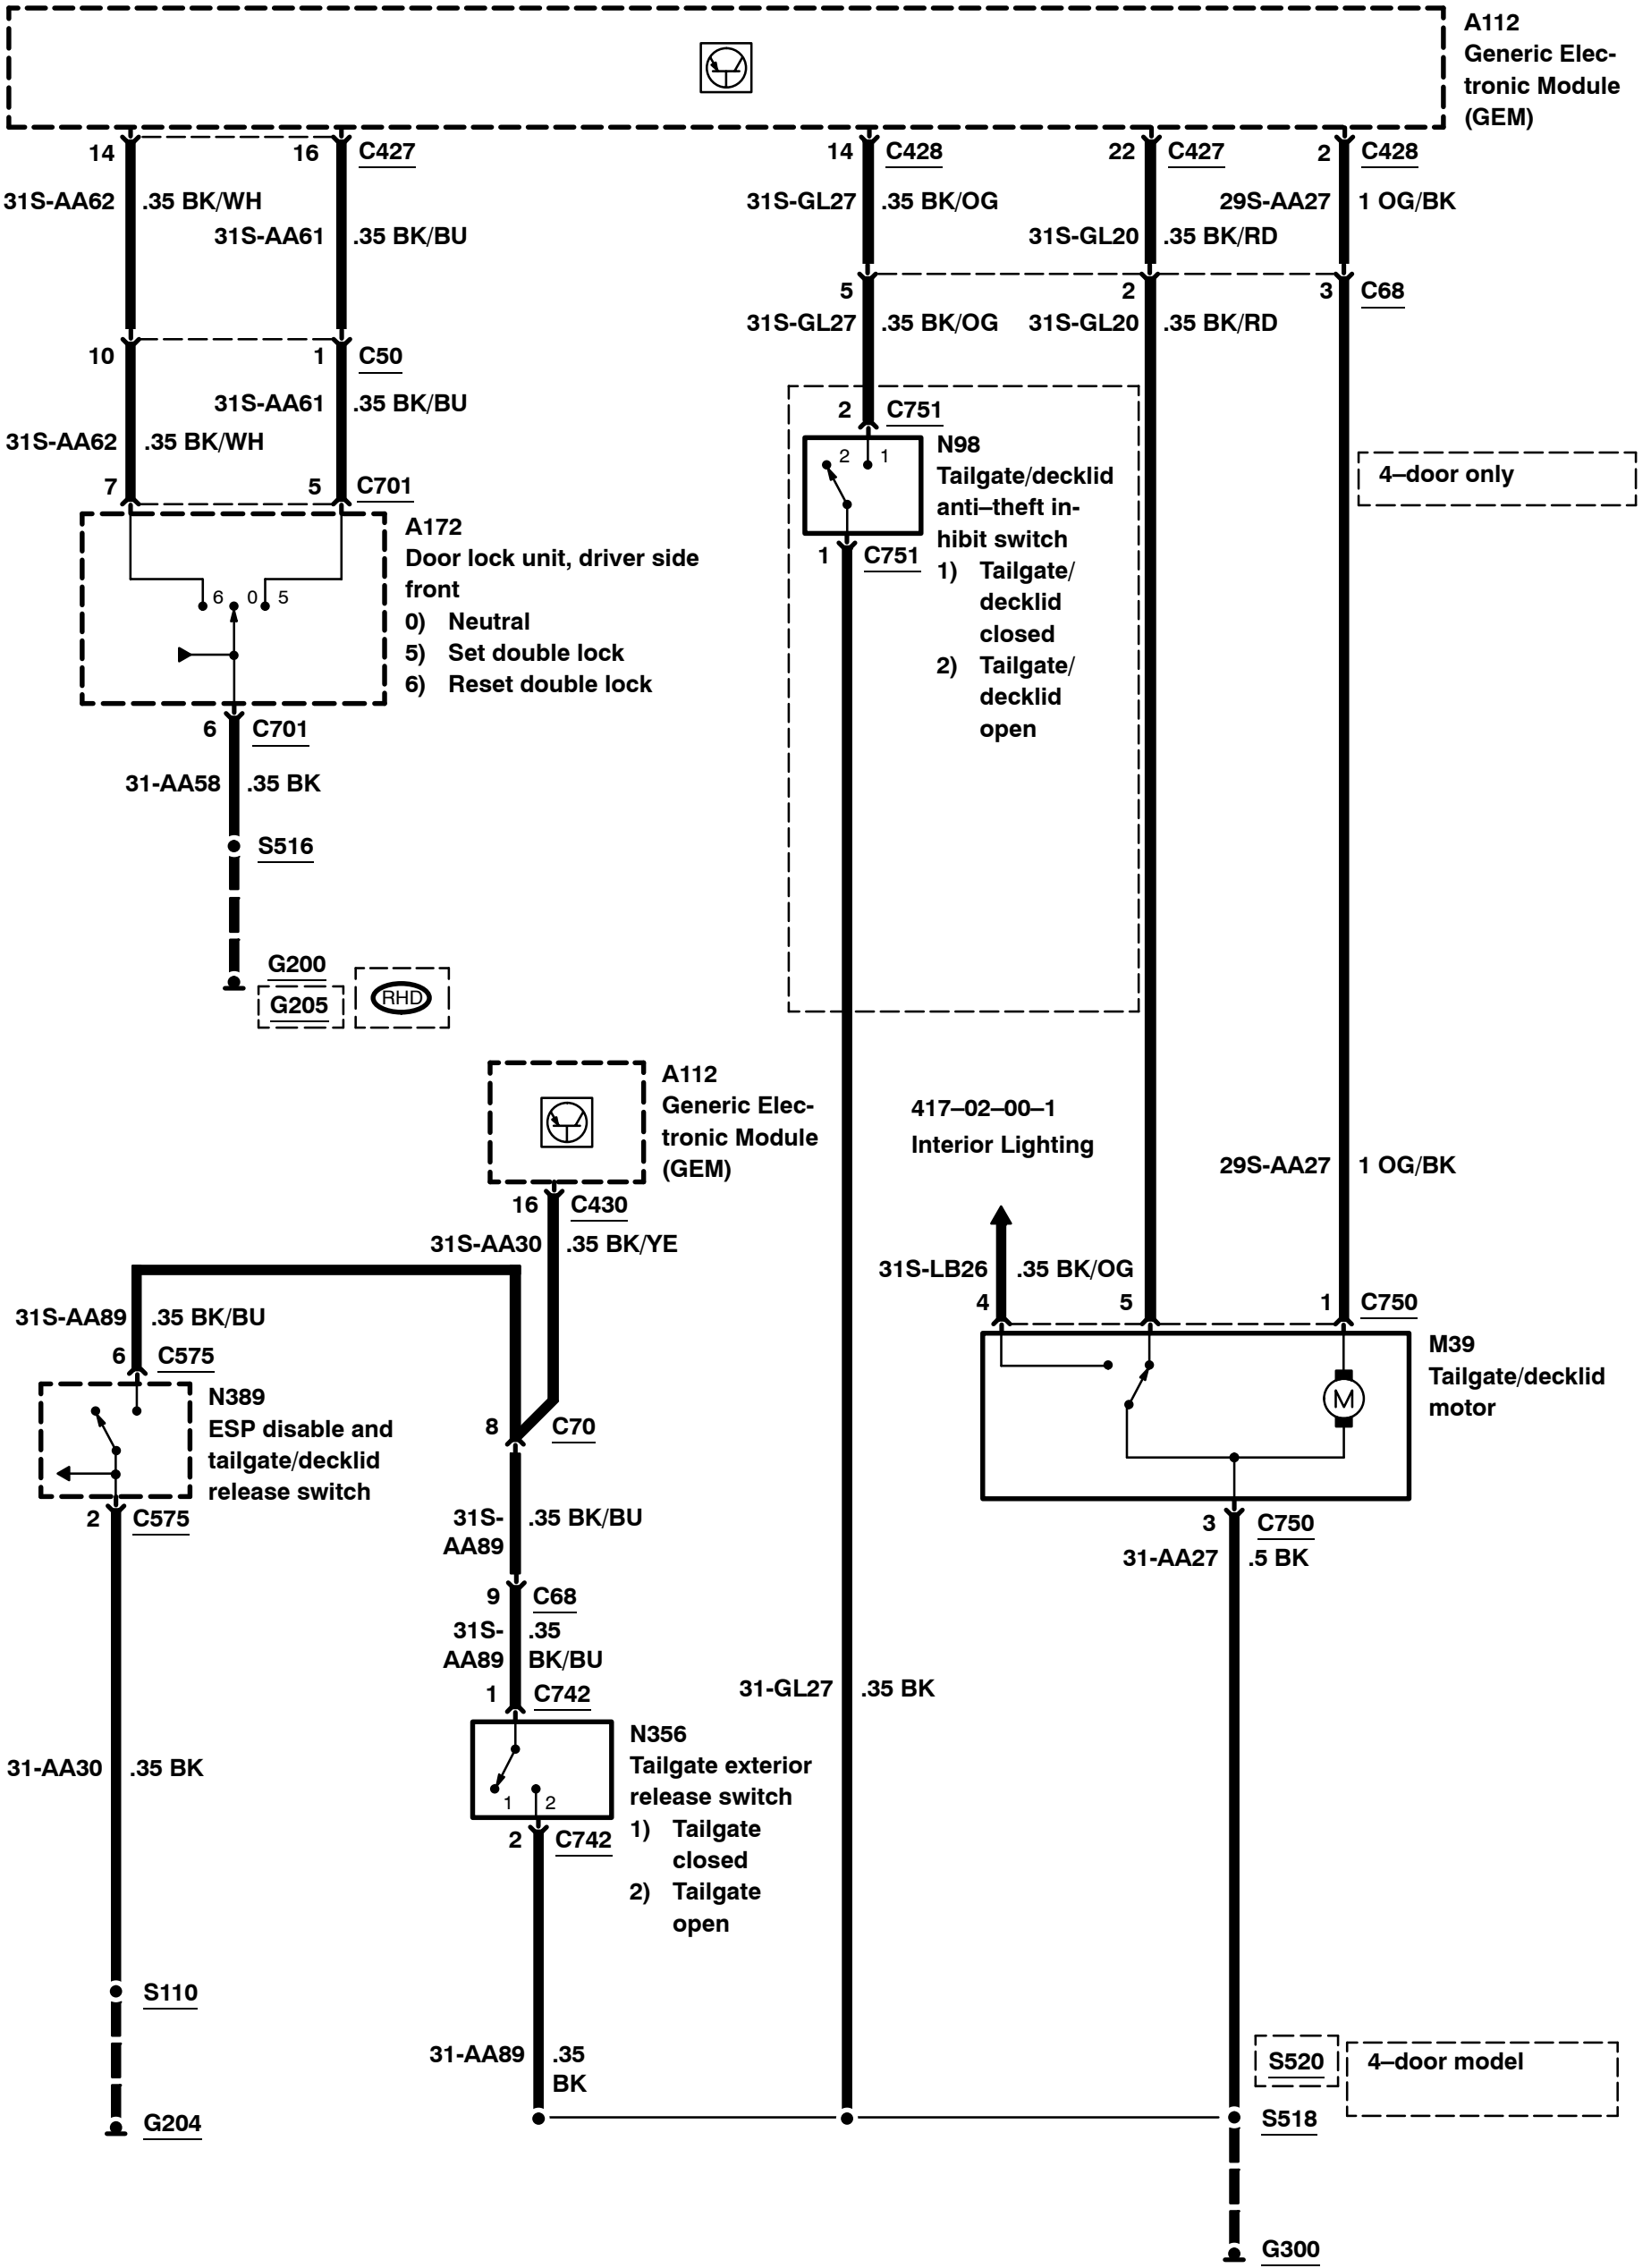


Anti–Theft – Passive – Petrol engines

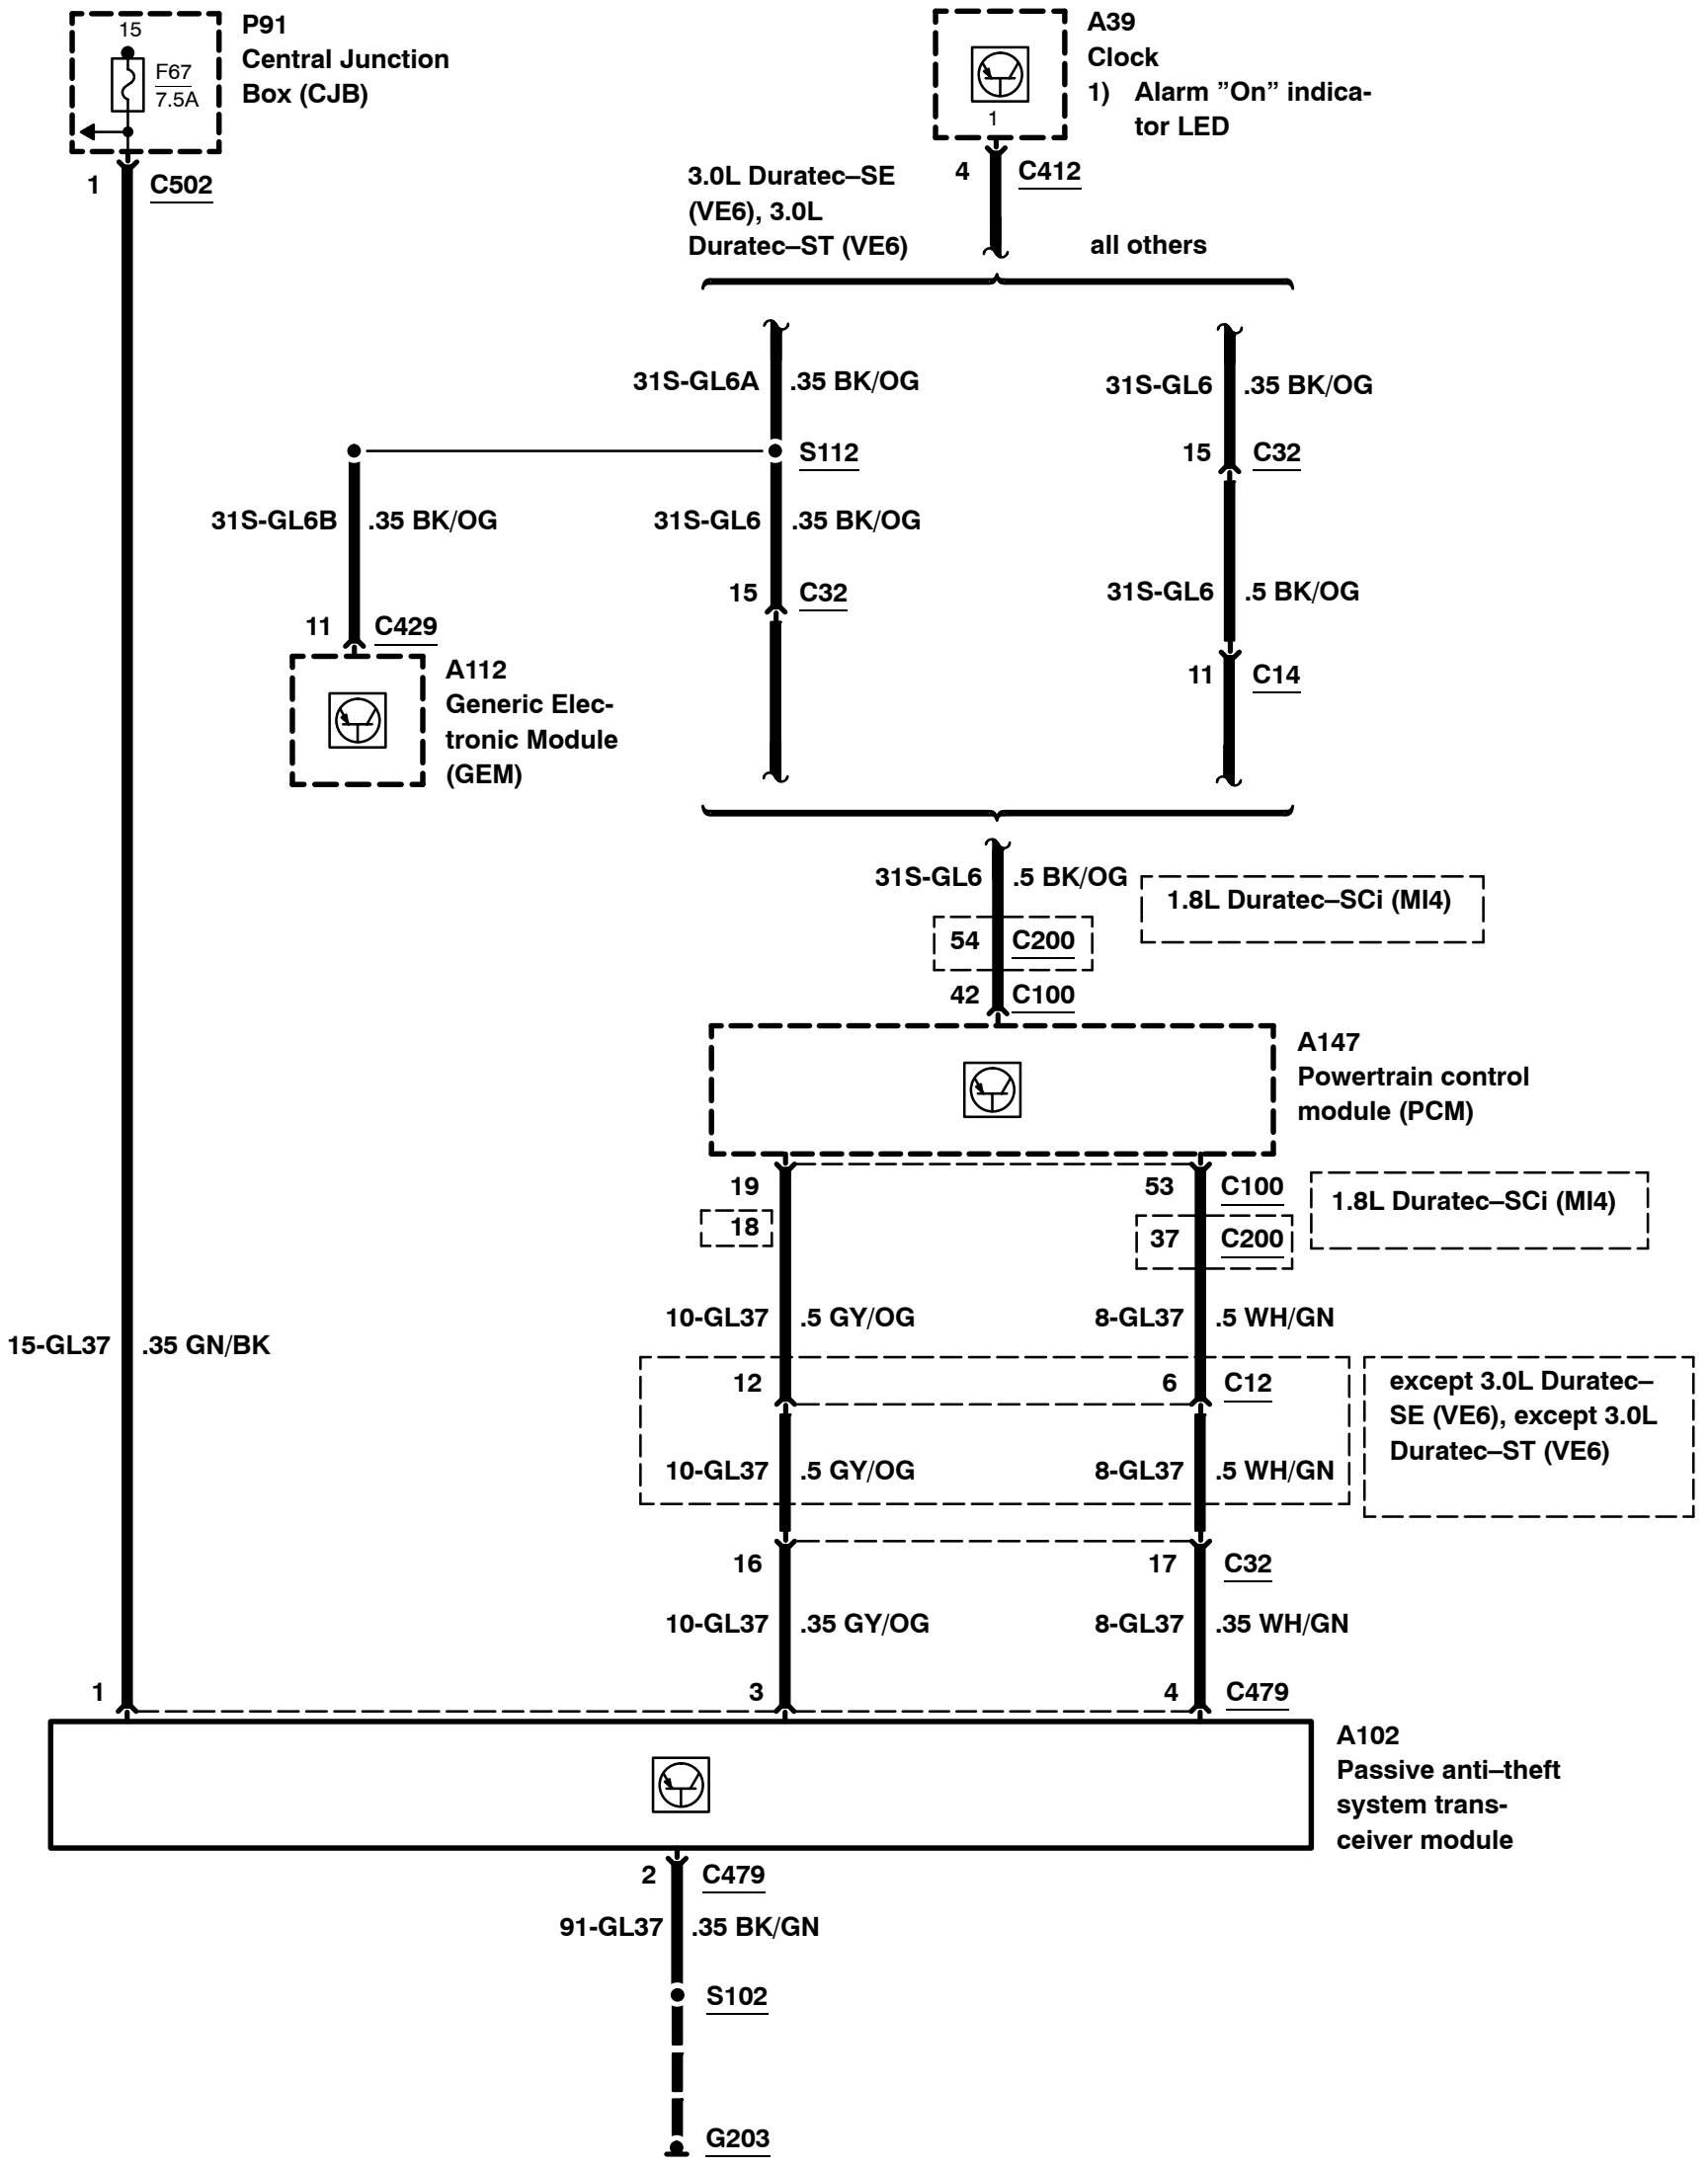


Anti–Theft – Passive – Diesel engines

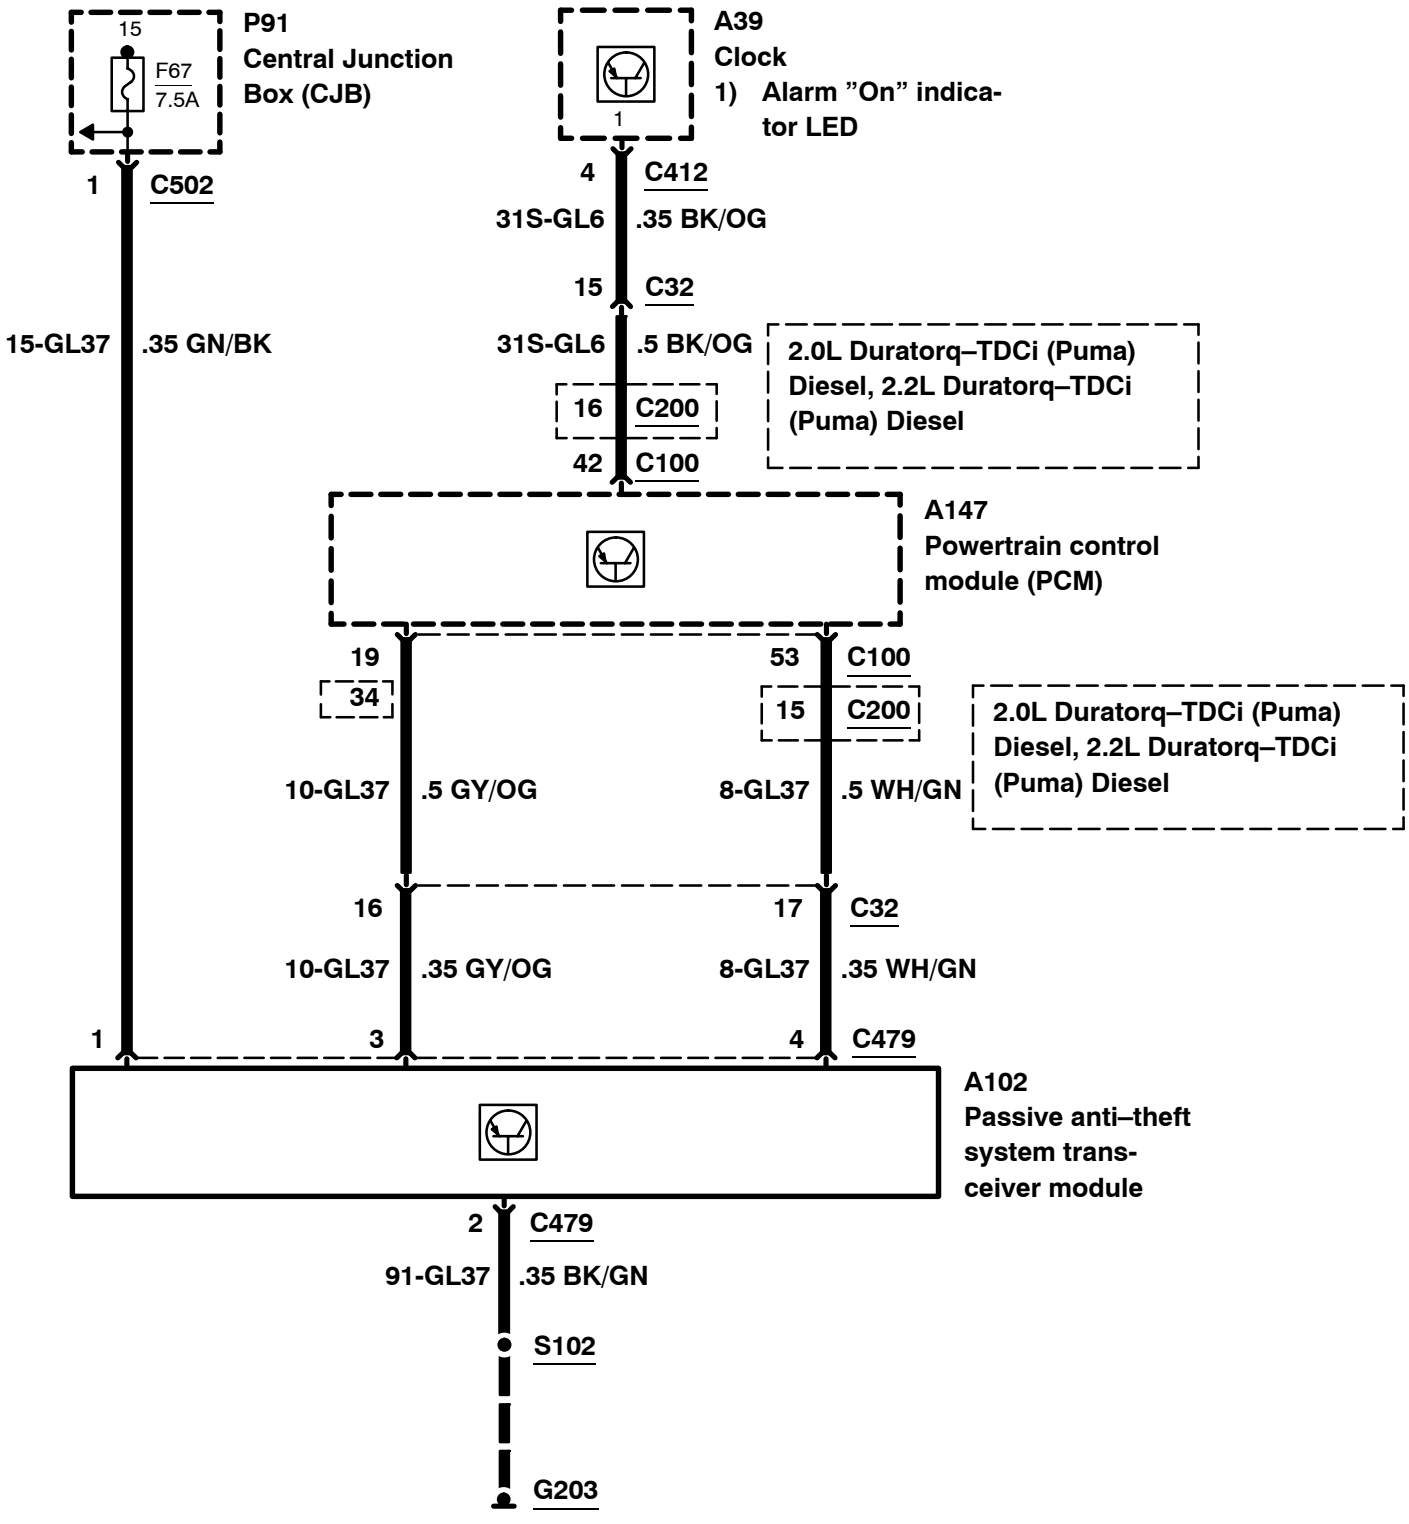

Anti–Theft – Passive

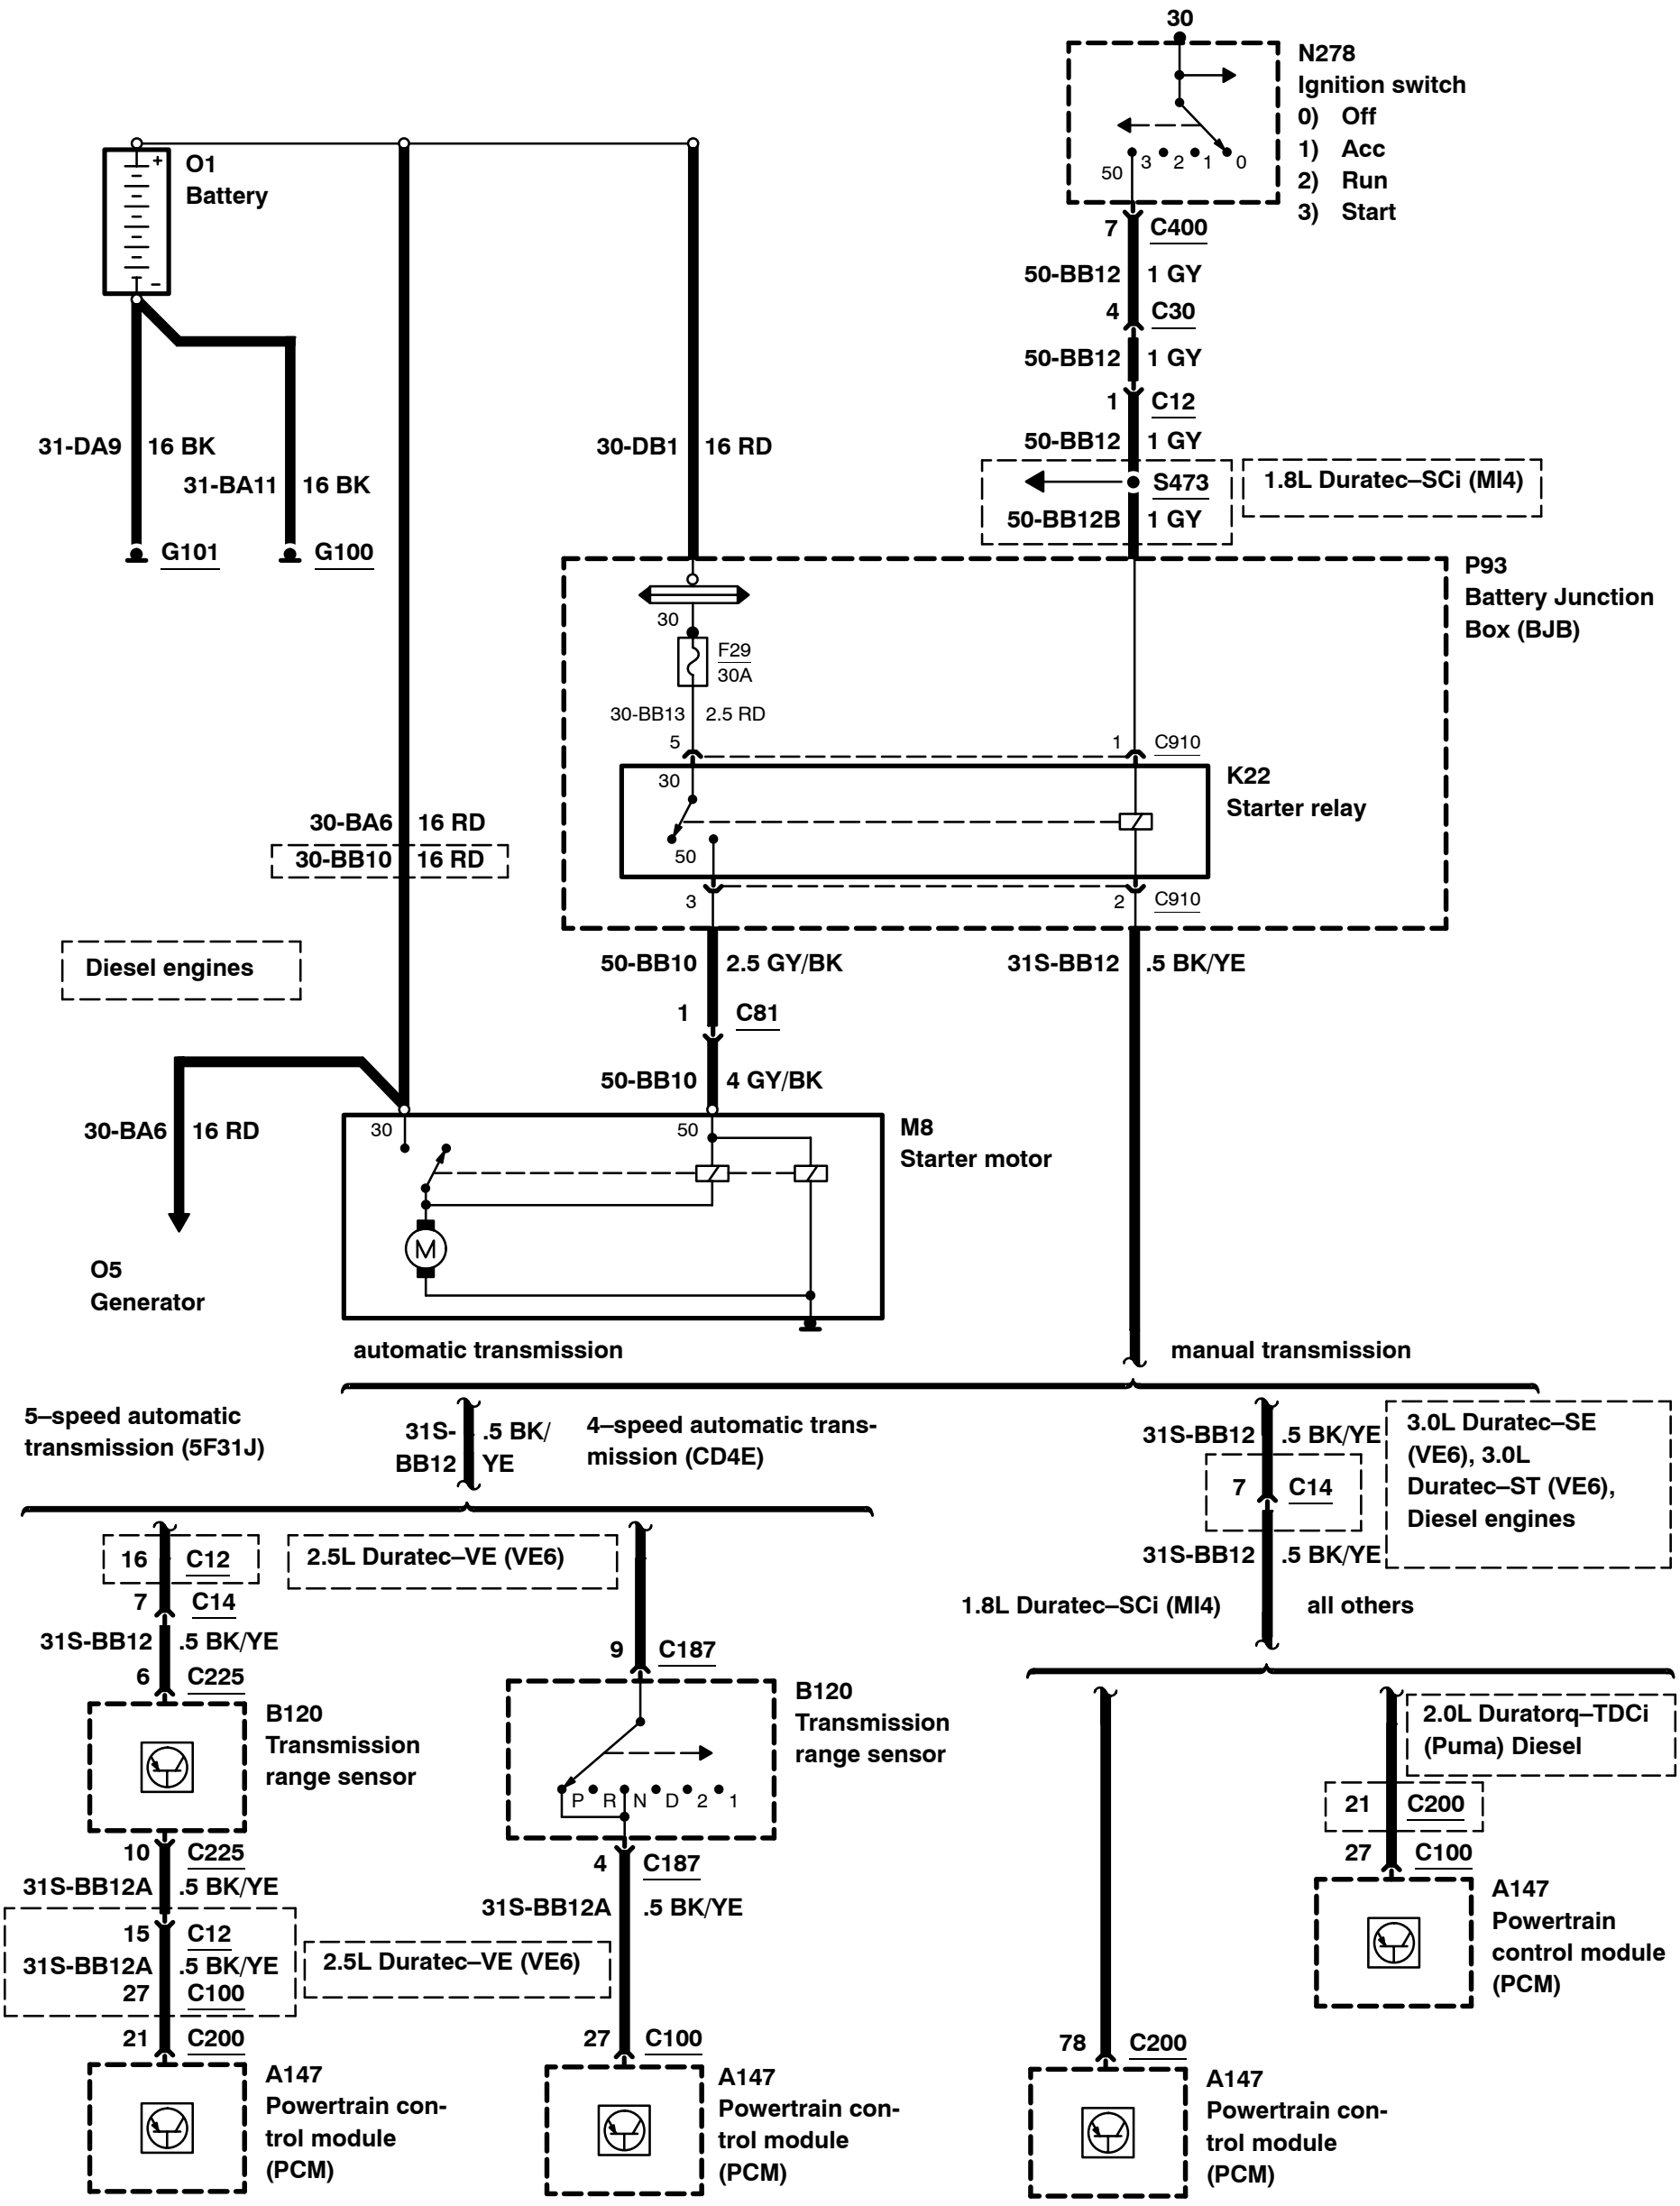


Vehicle Route Guidance/Navigation – Travel Pilot

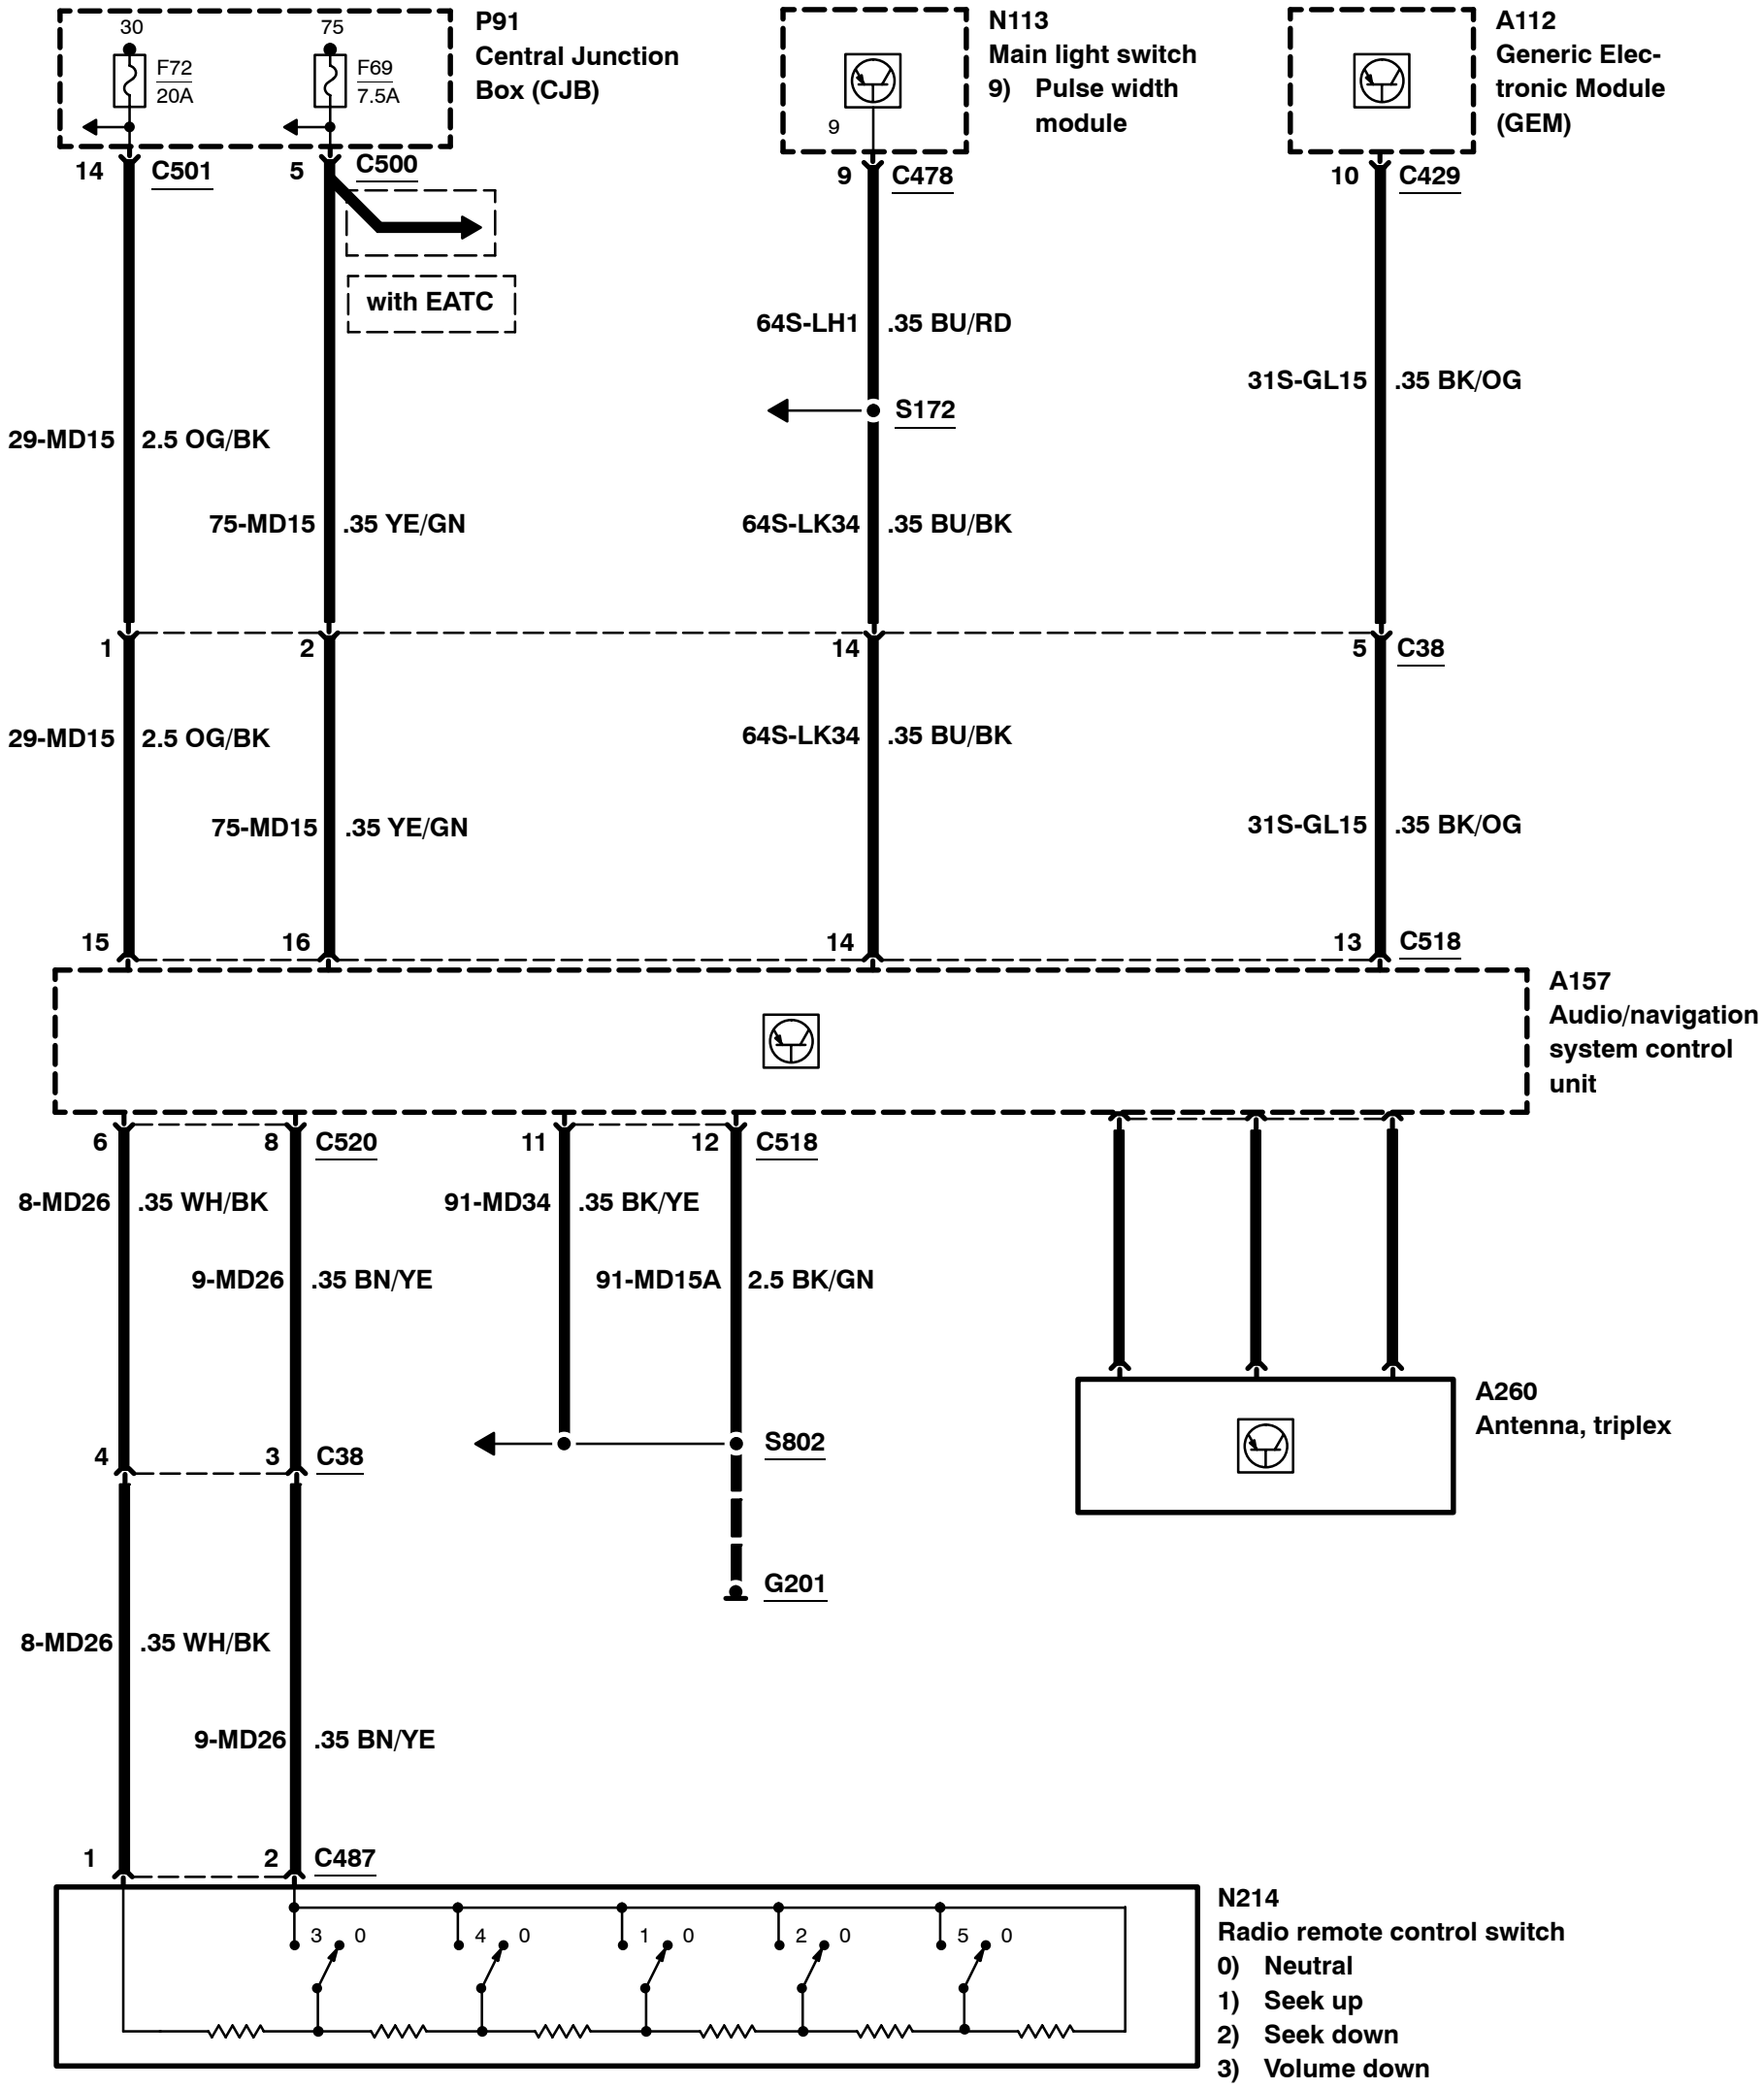


N214
Radio remote control switch

0) Neutral
1) Seek up
2) Seek down
3) Volume down
4) Volume up
5) Radio pre–set/tape/disc autochange


Vehicle Route Guidance/Navigation – Travel Pilot – Petrol engines

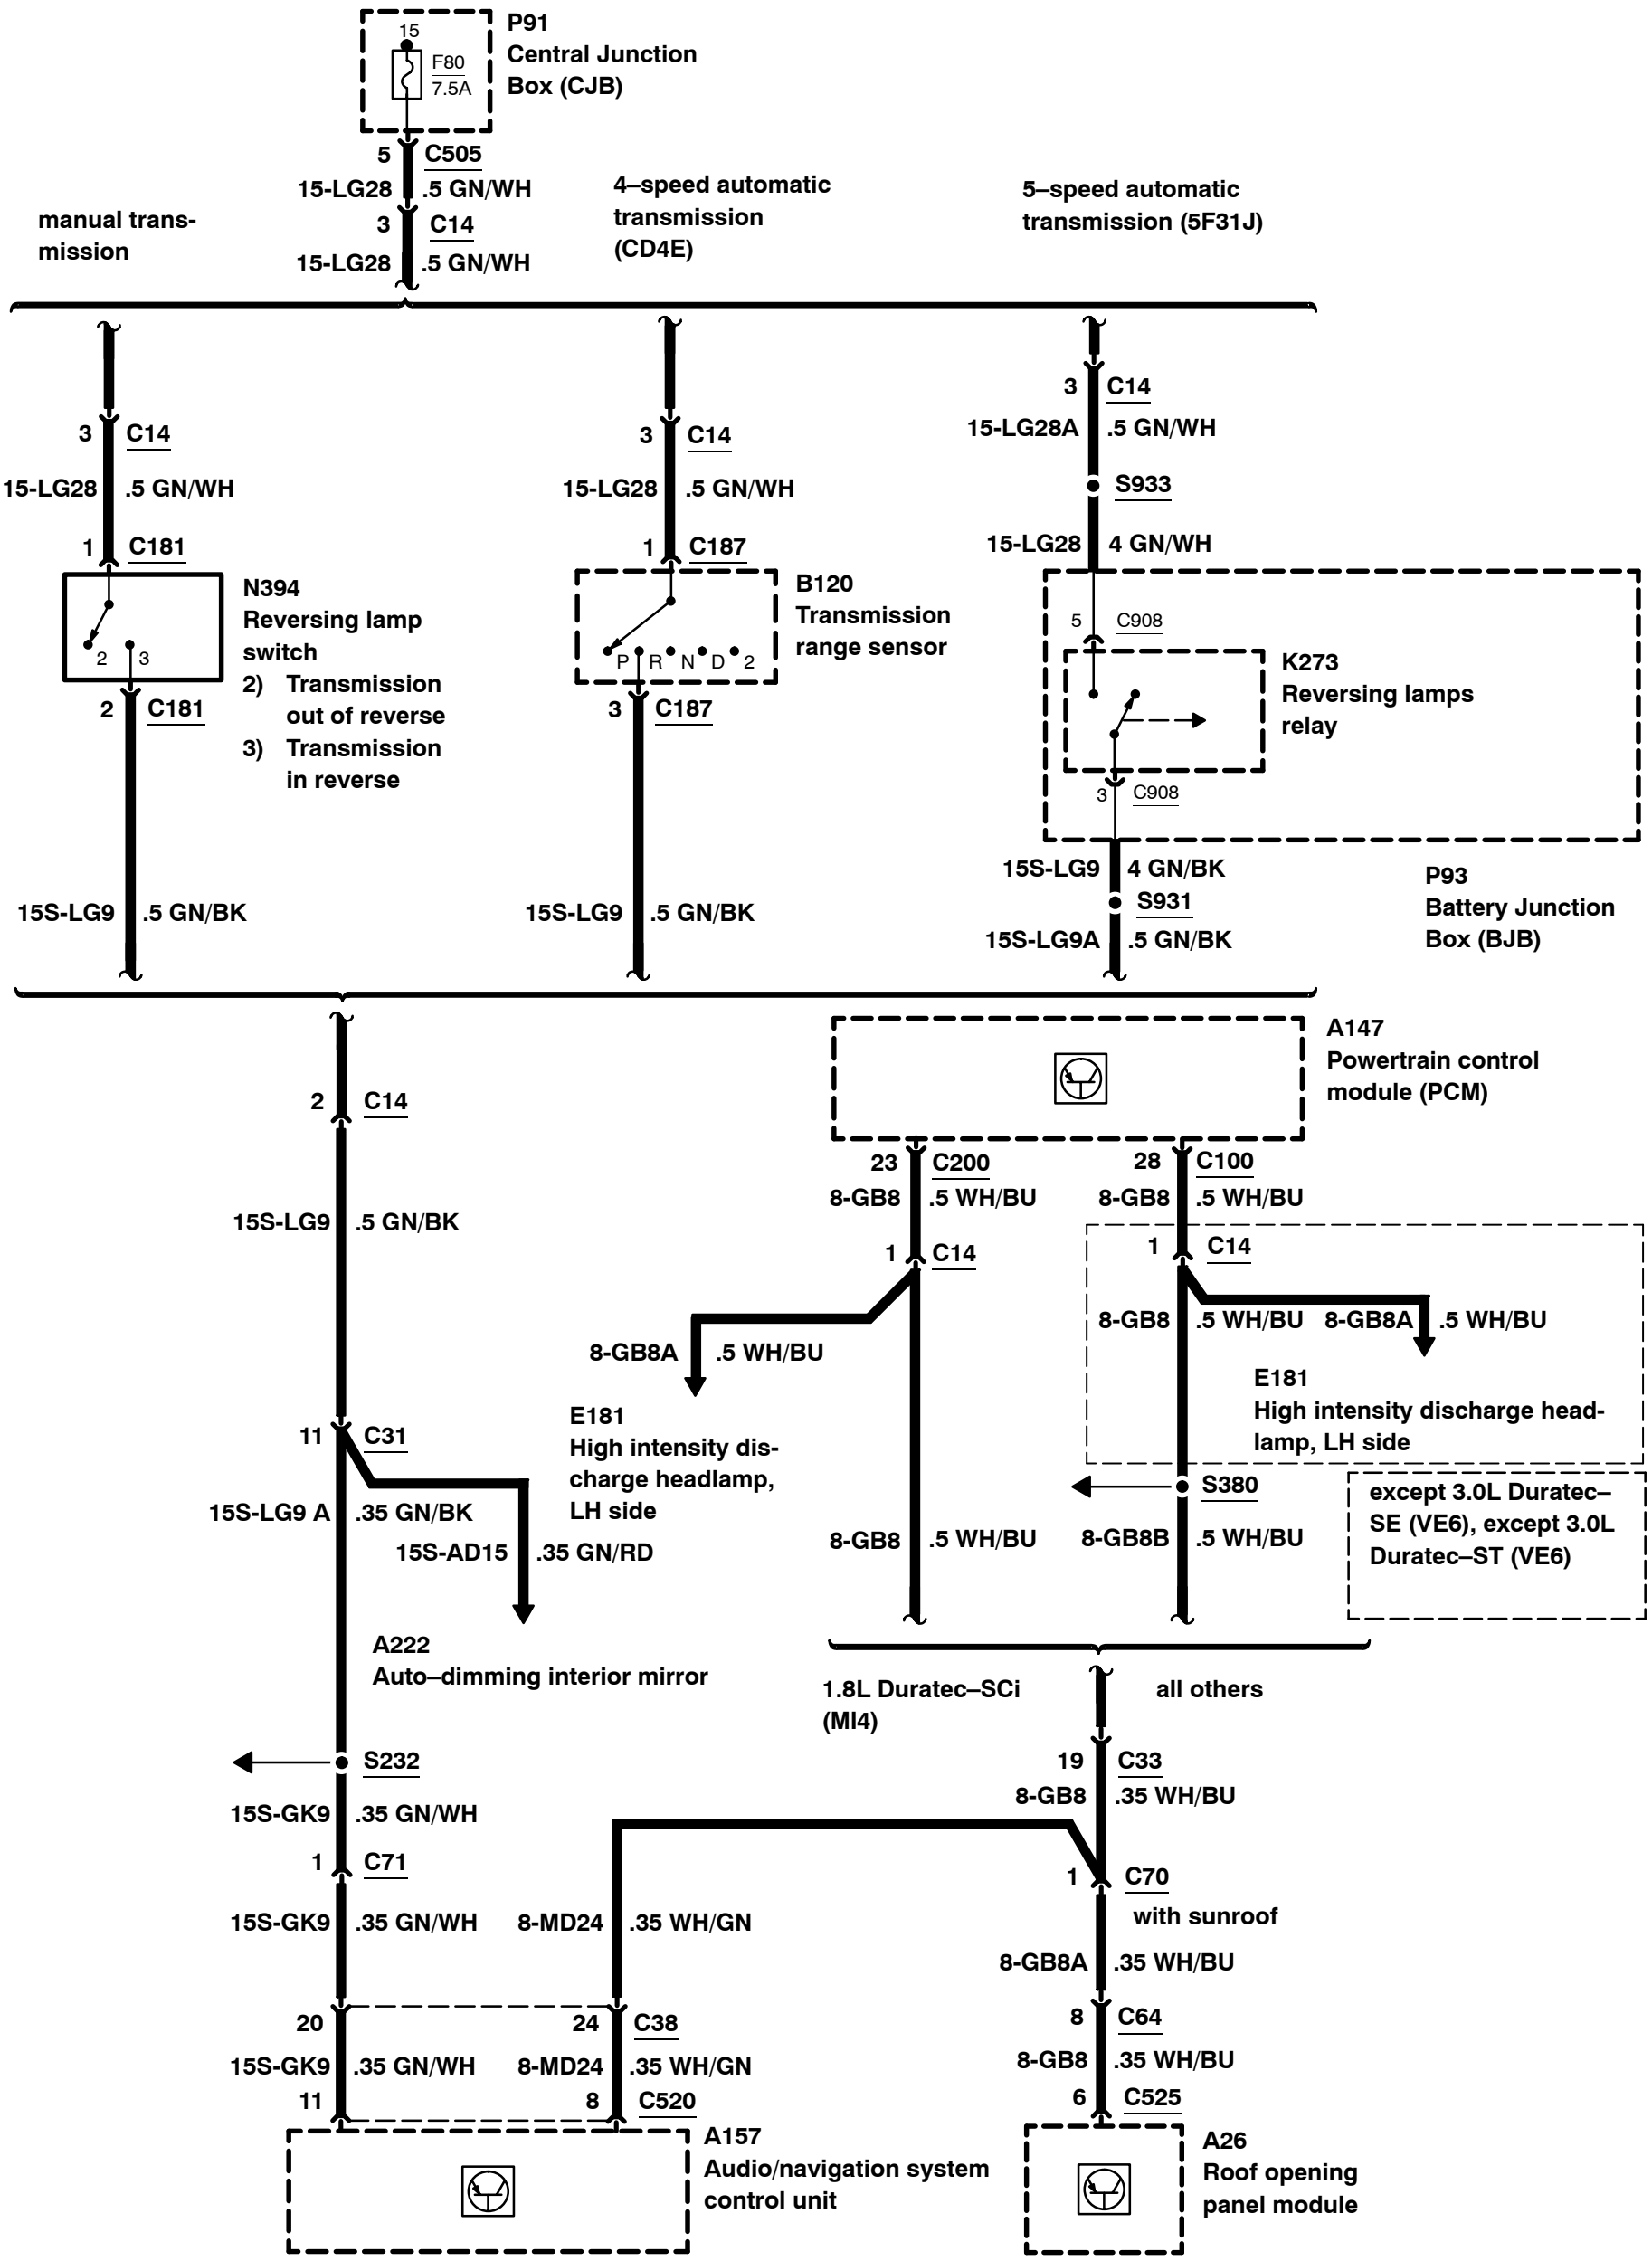


Vehicle Route Guidance/Navigation – Travel Pilot – Diesel engines

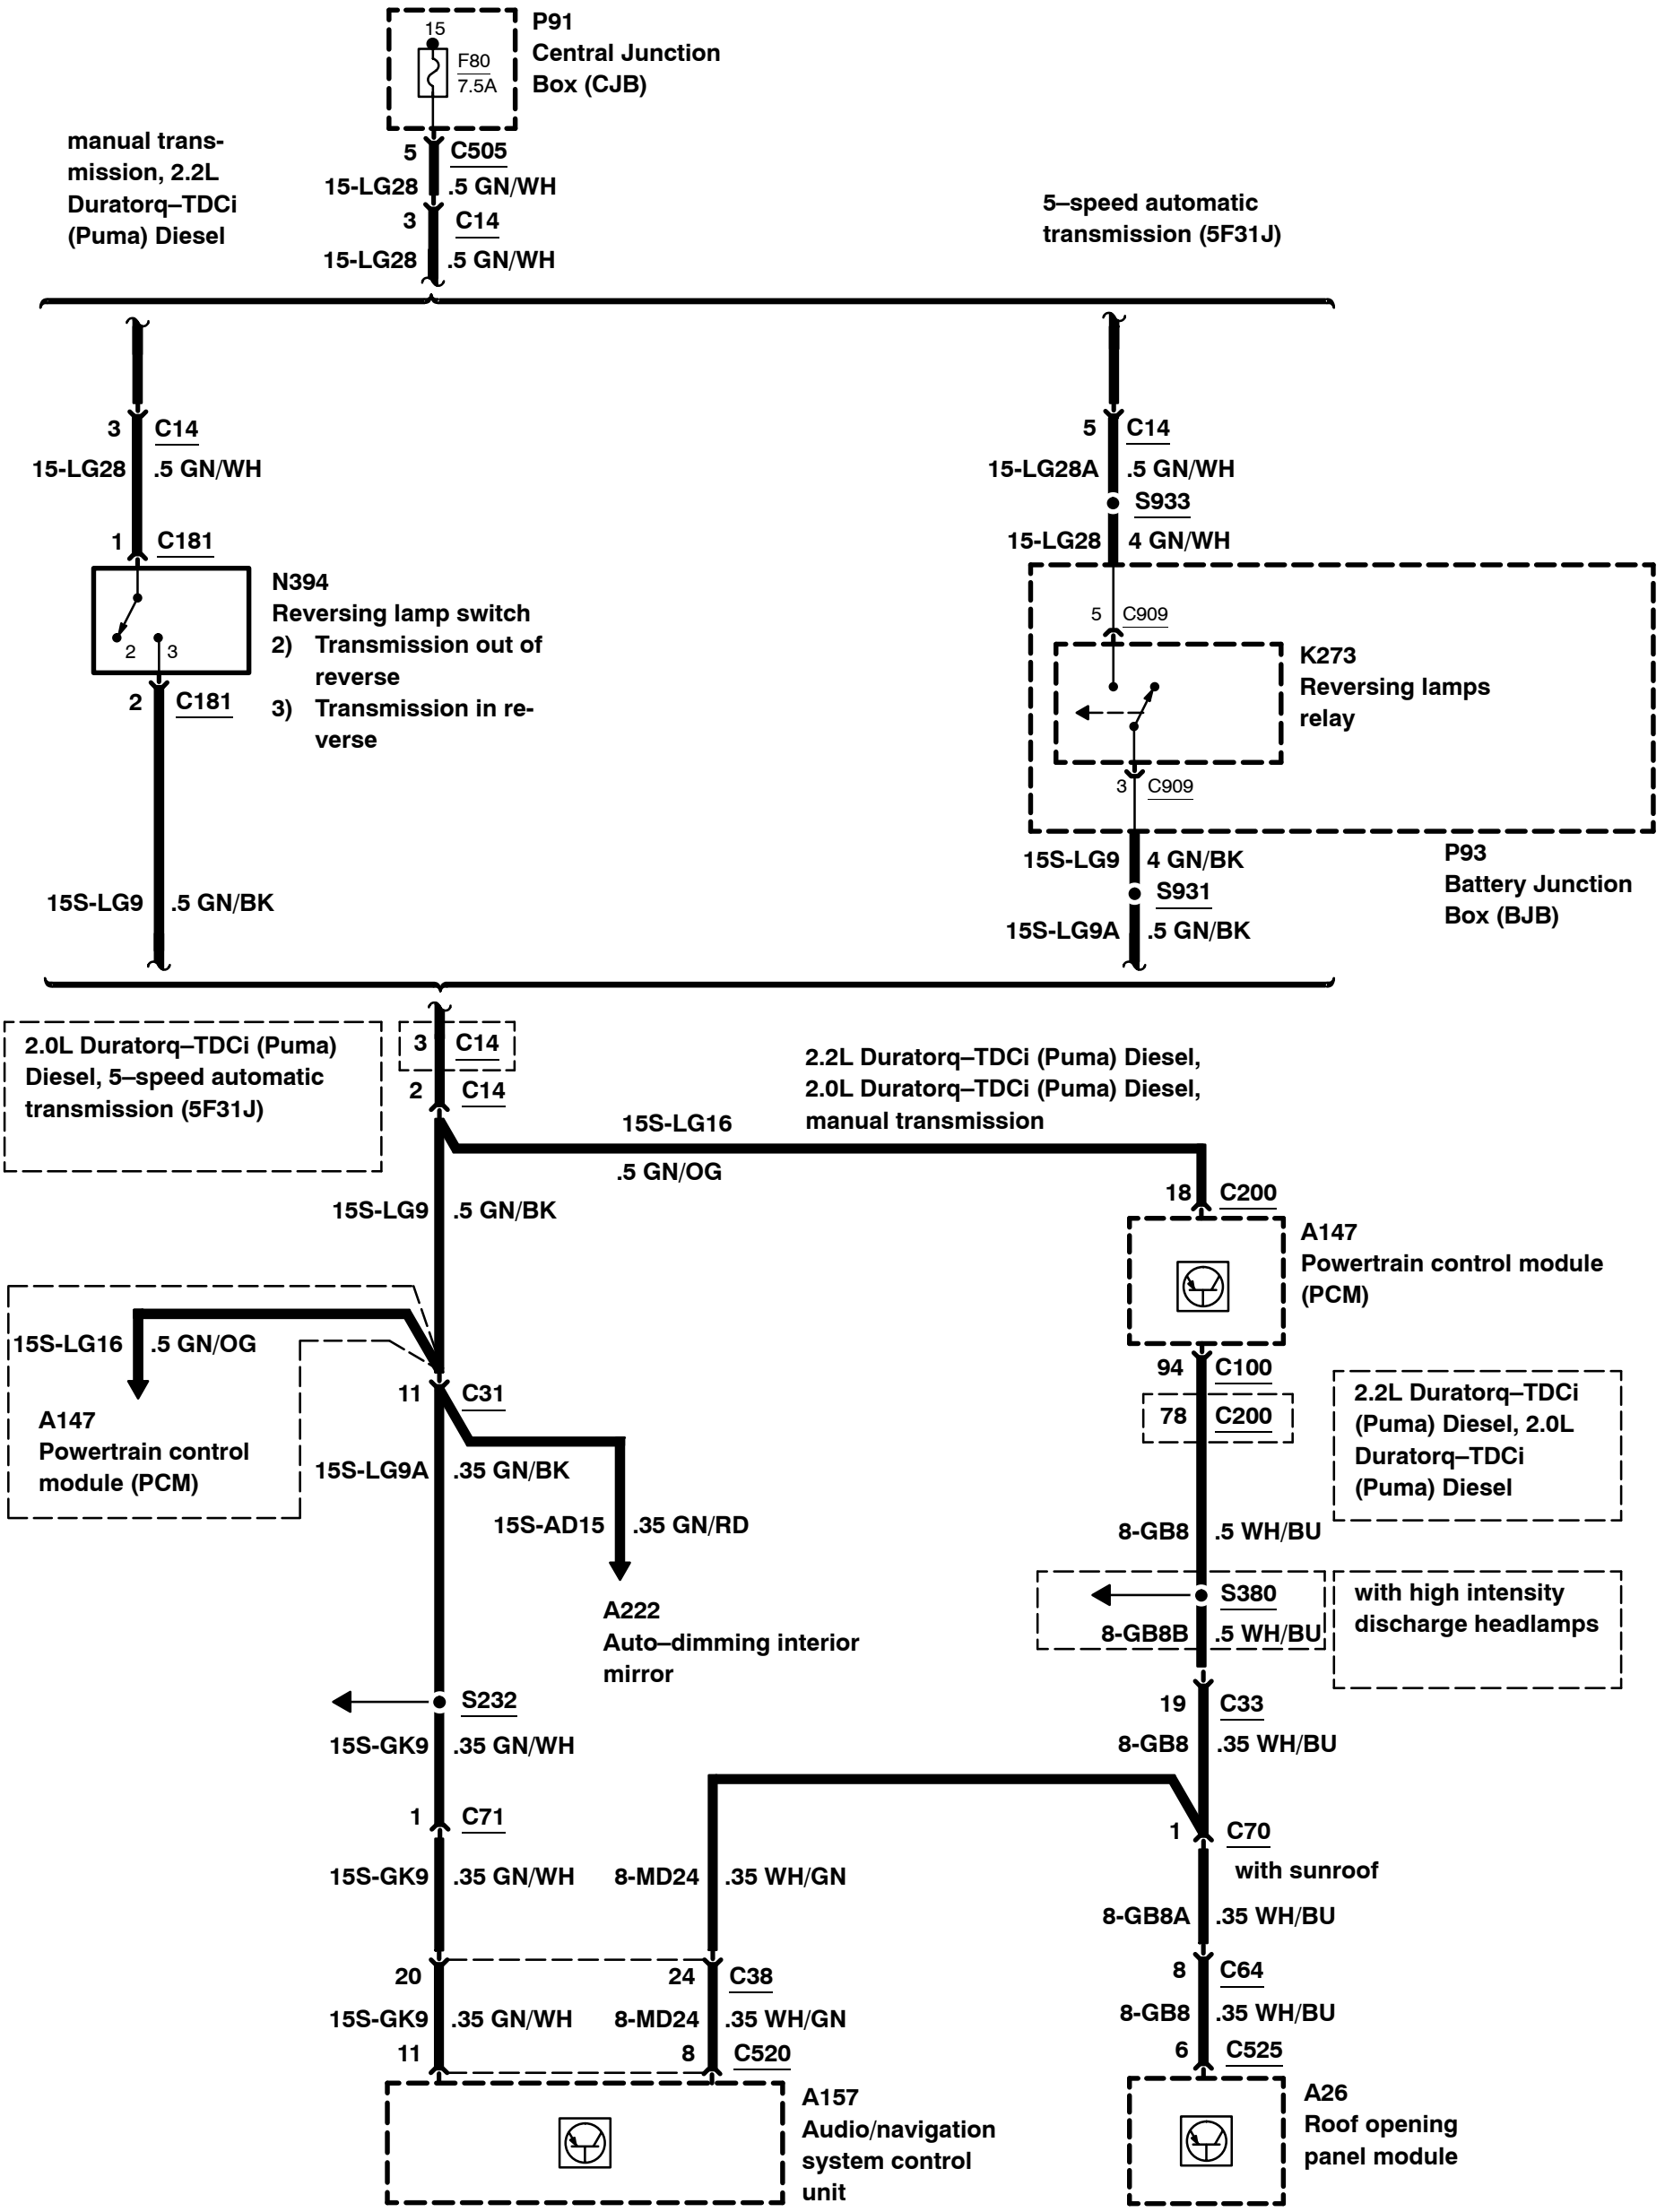


Vehicle Route Guidance/Navigation – Travel Pilot

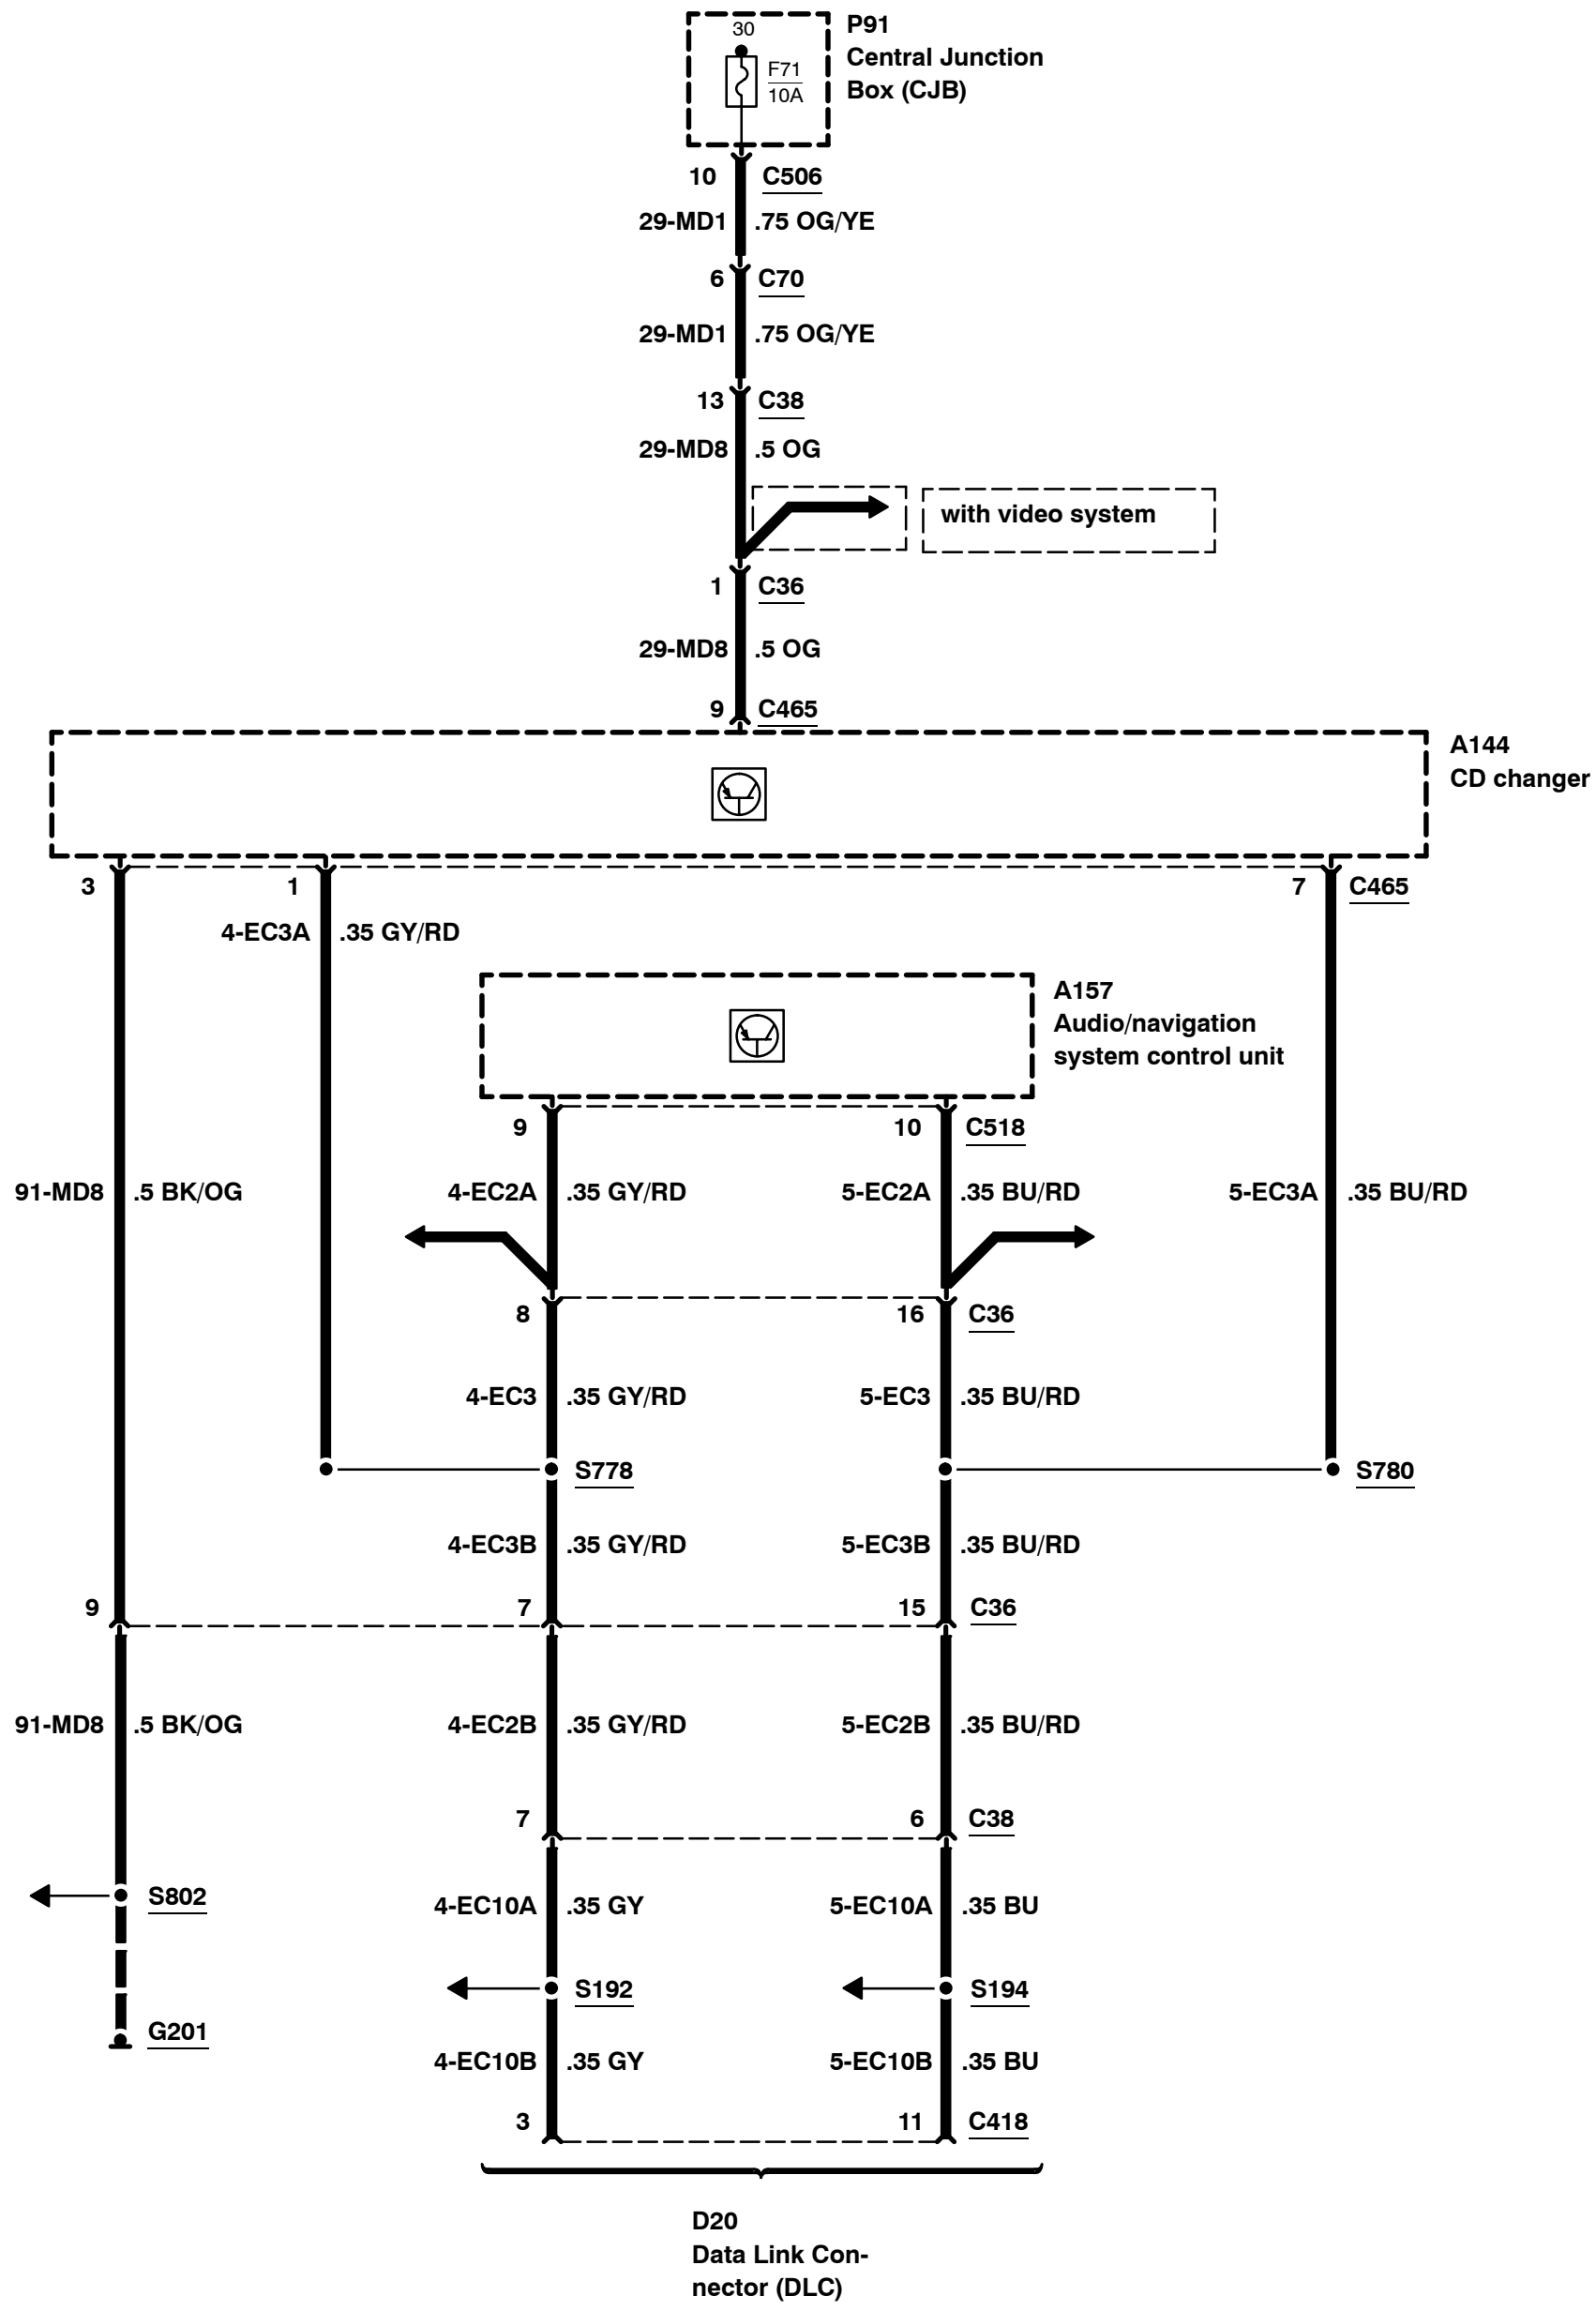


Vehicle Route Guidance/Navigation – Travel Pilot

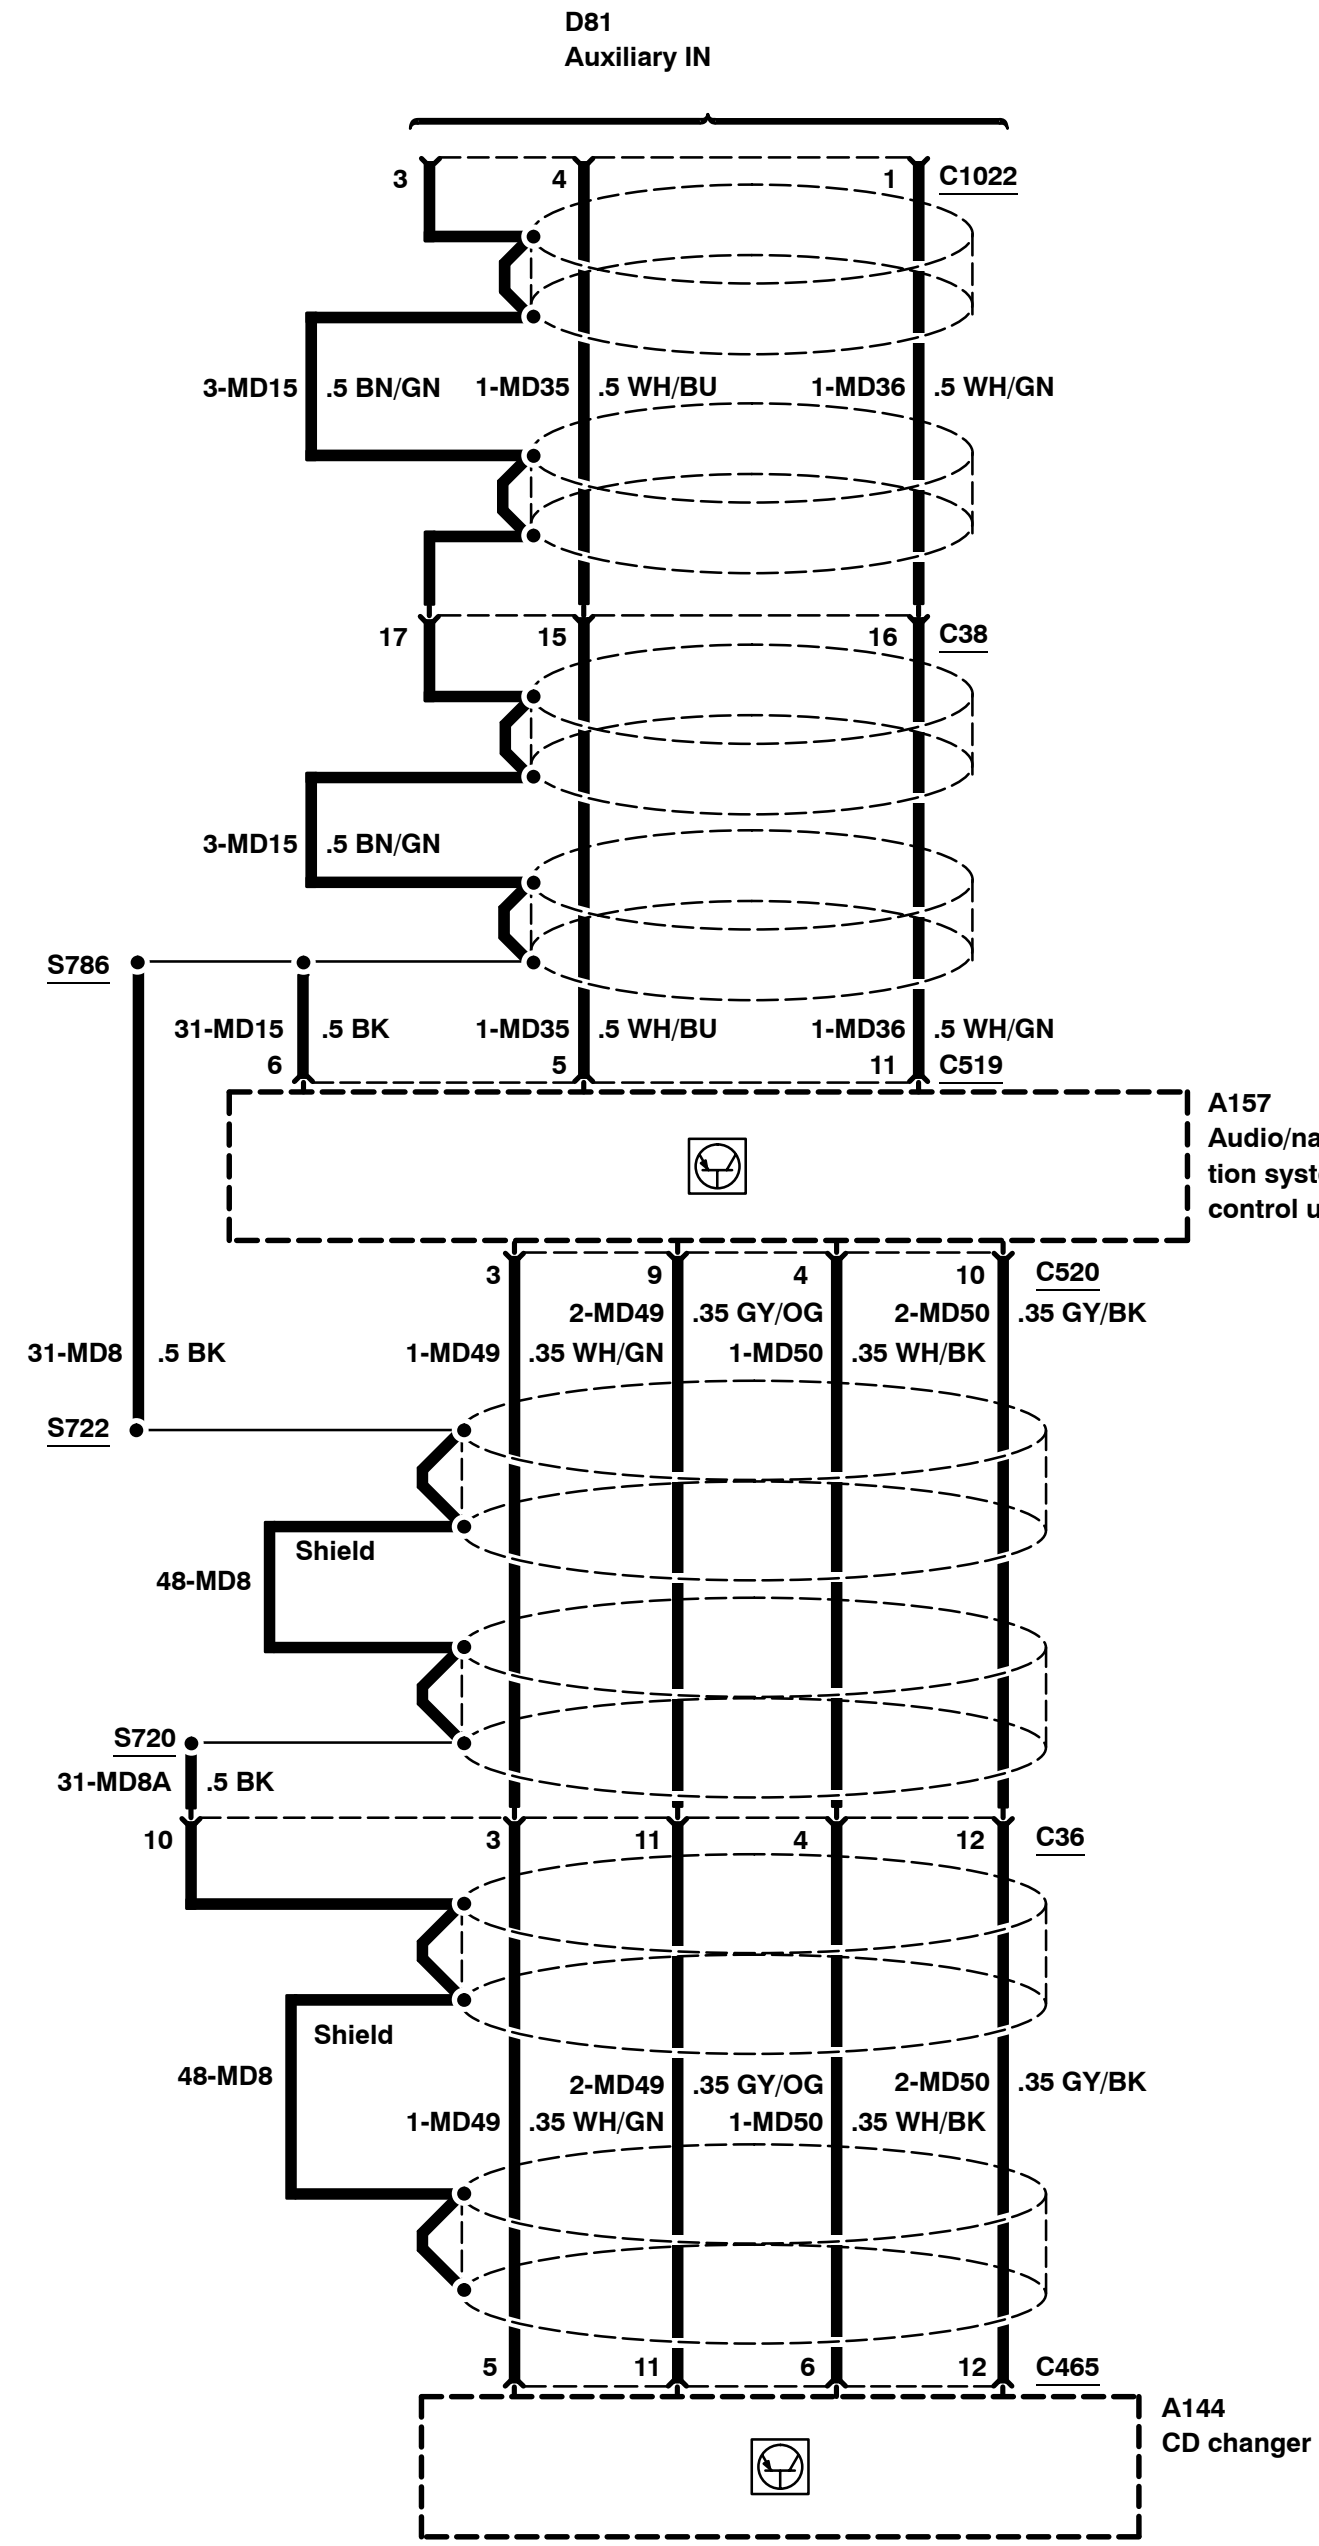


Vehicle Route Guidance/Navigation – DVD navigation system with touch screen

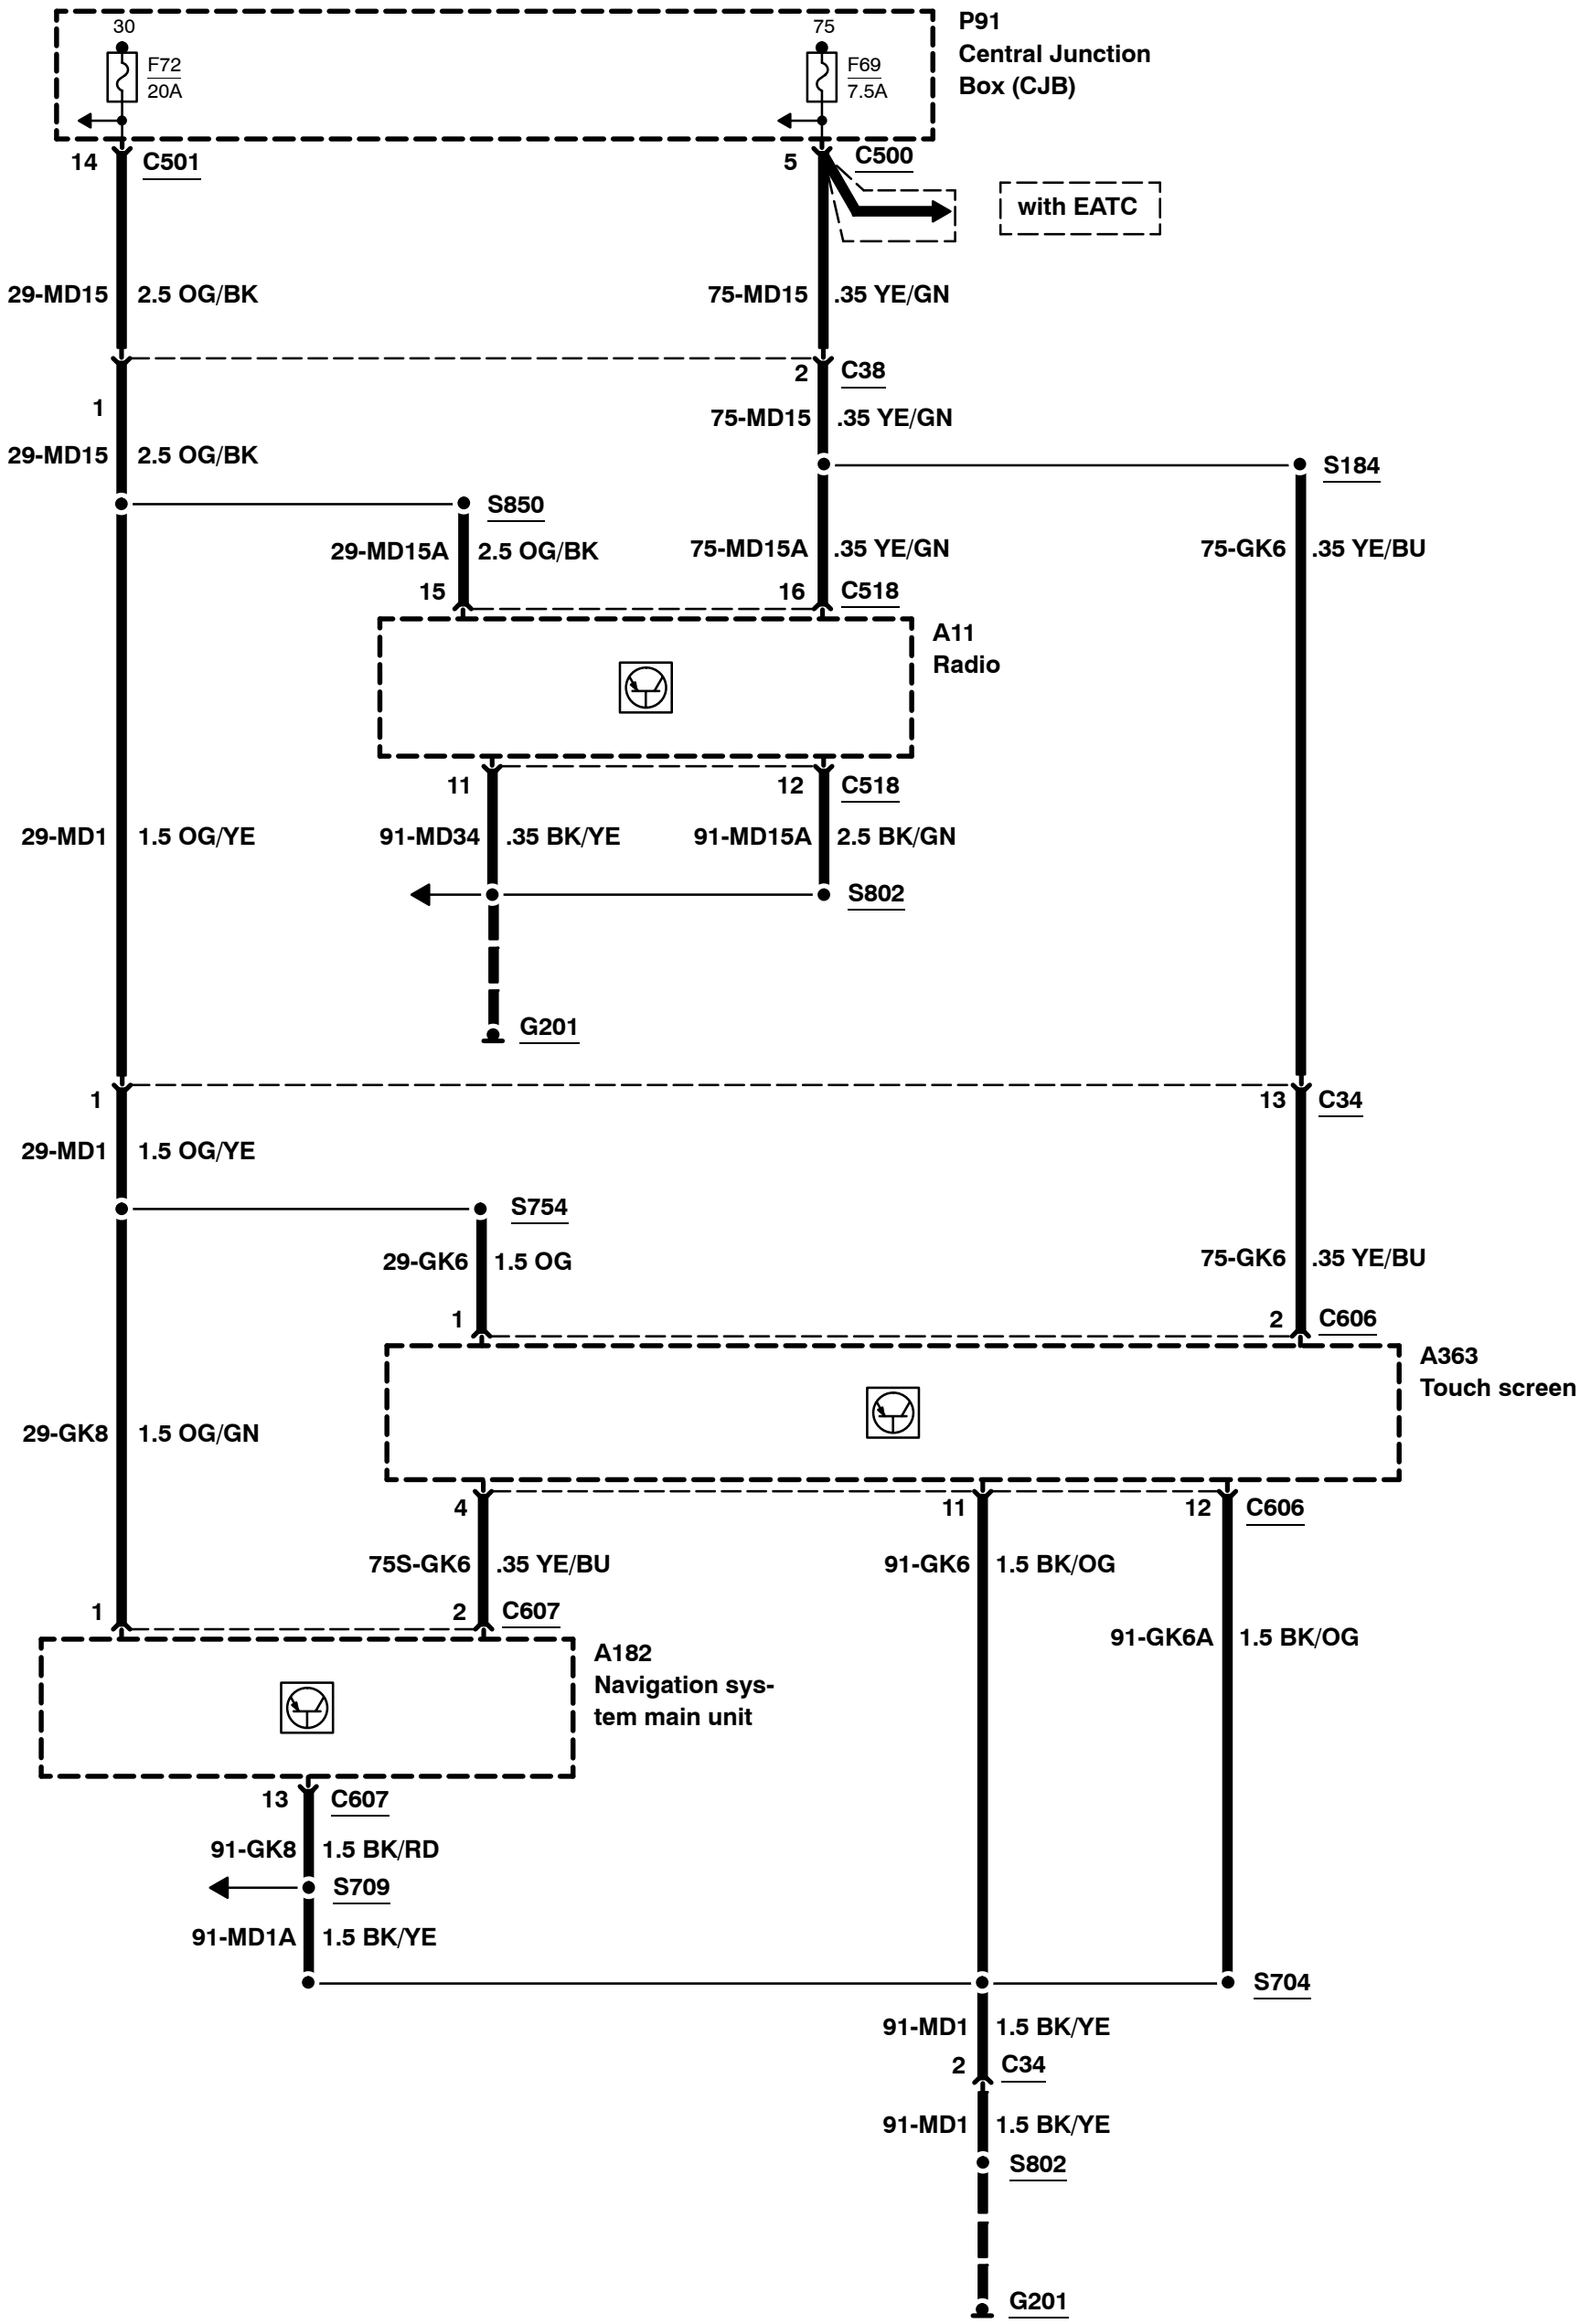


Vehicle Route Guidance/Navigation – DVD navigation system with touch screen

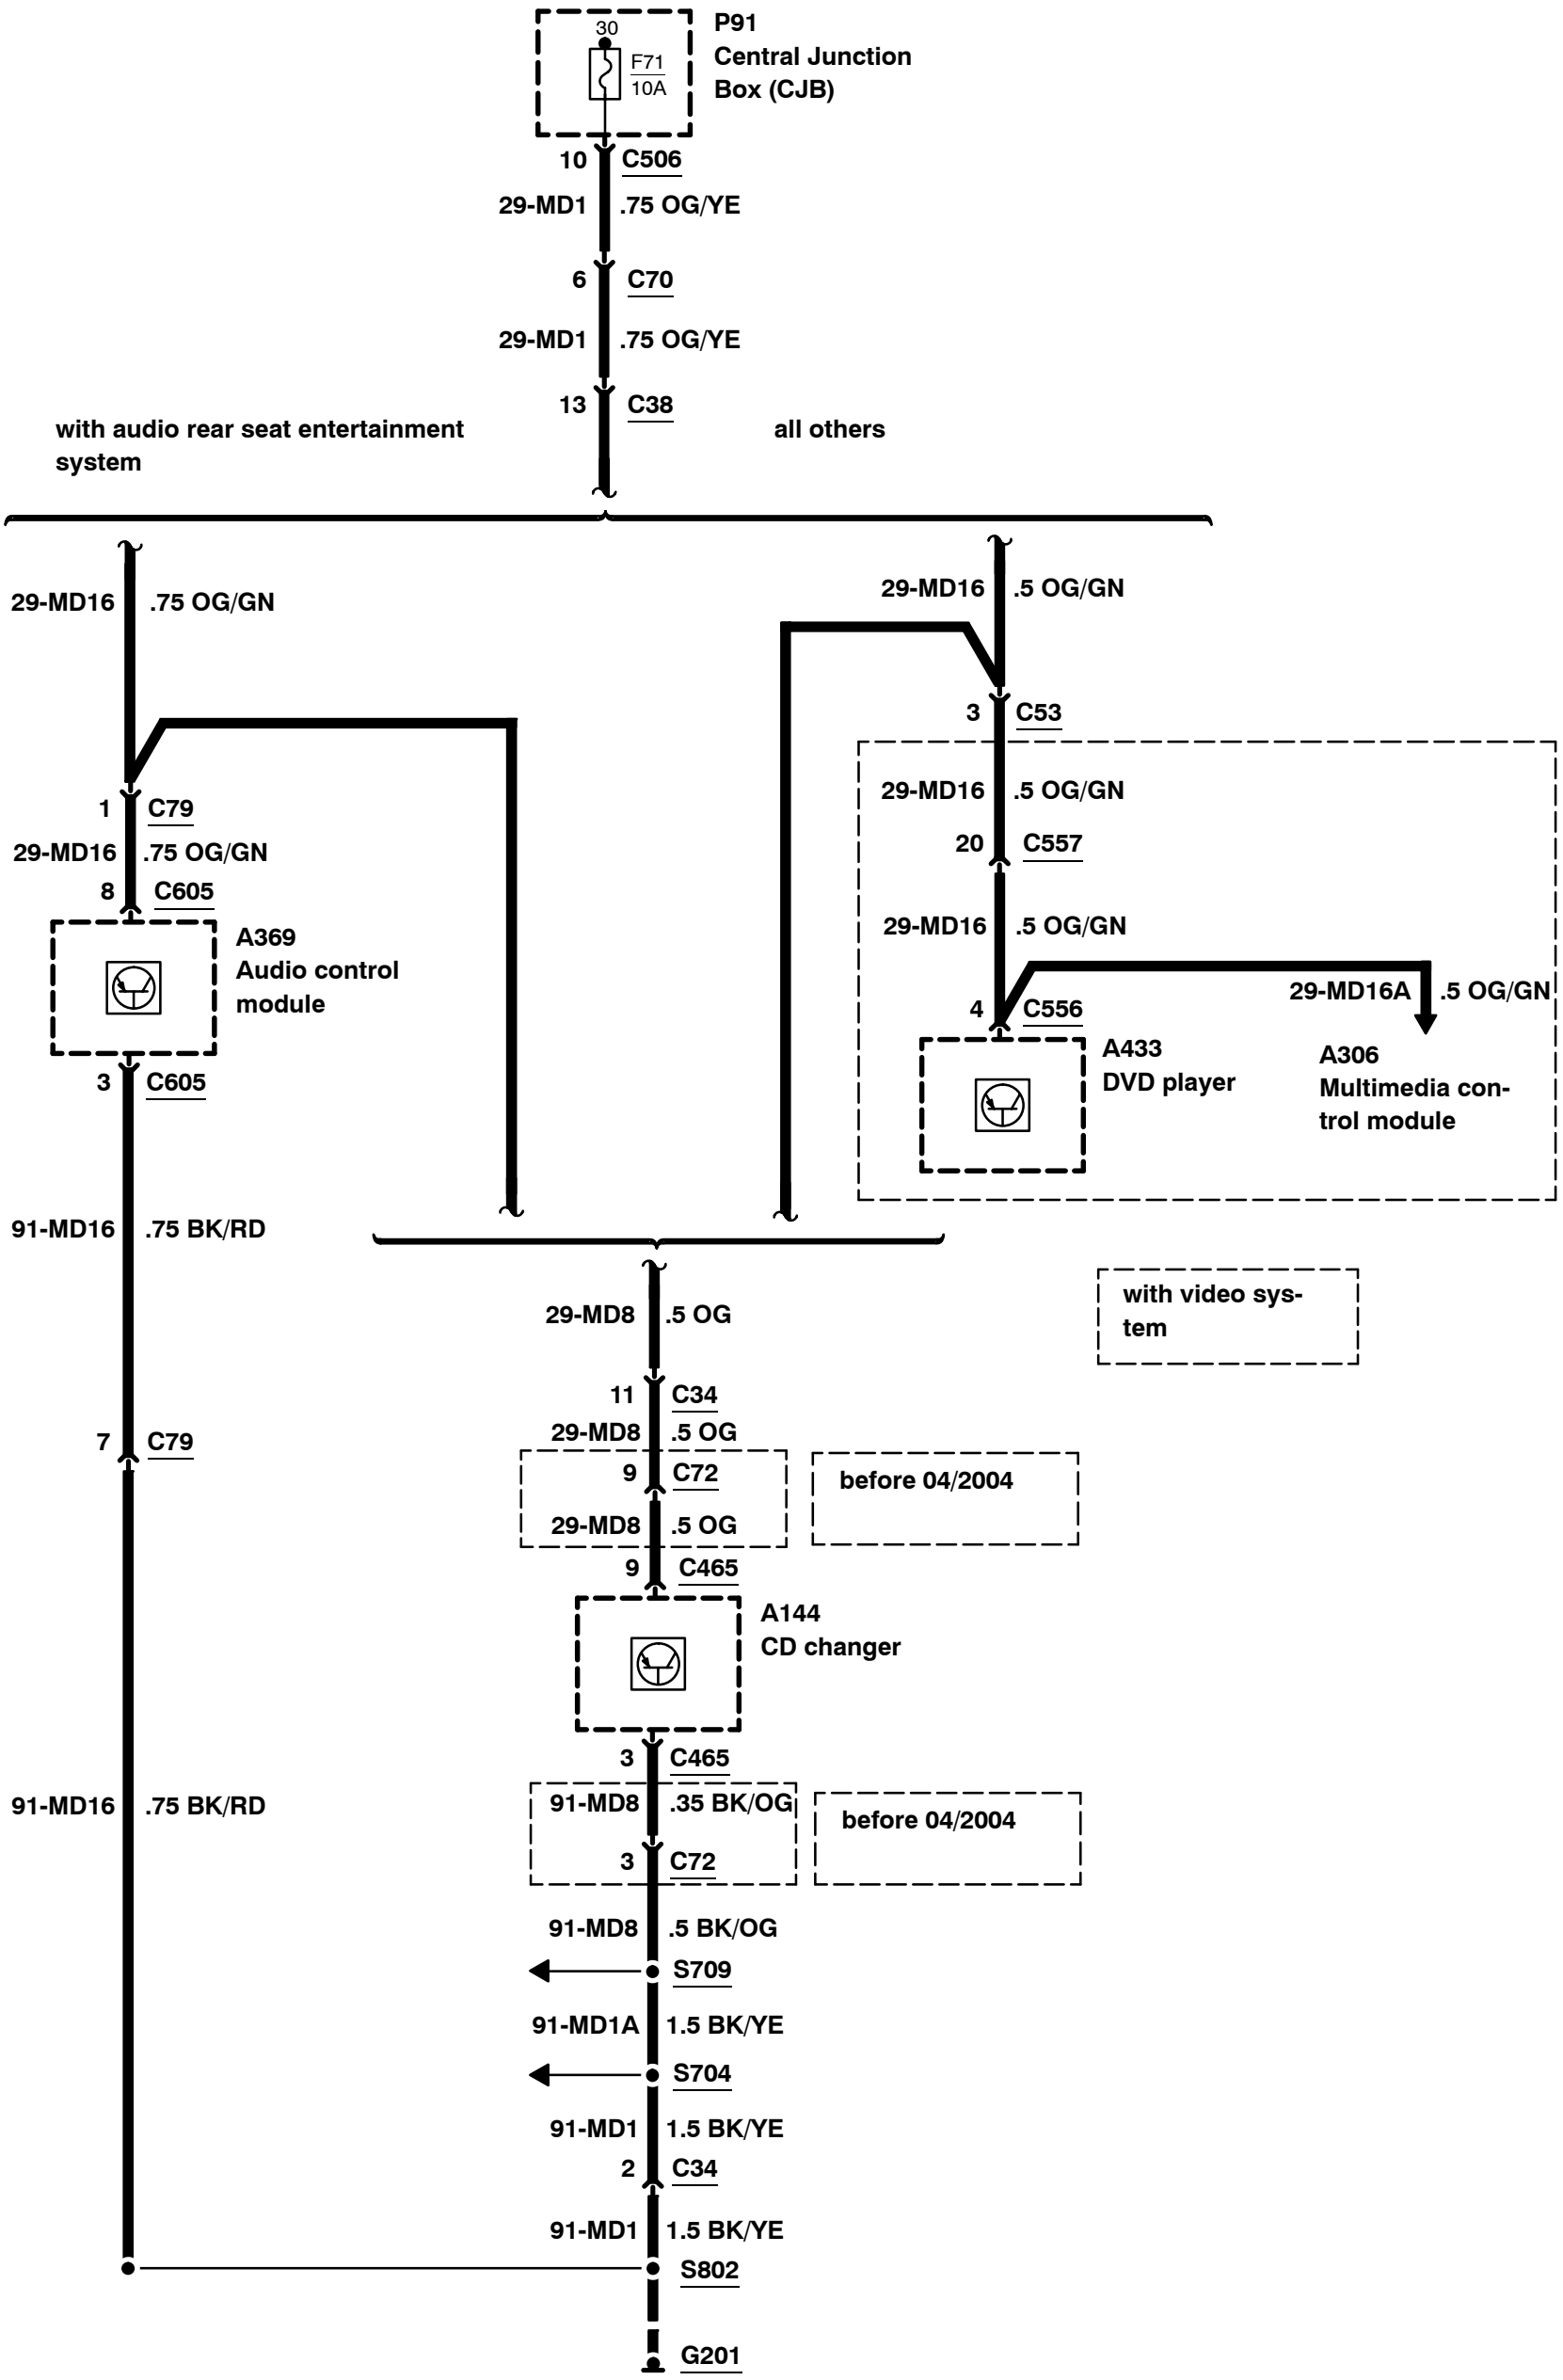


Vehicle Route Guidance/Navigation – DVD navigation system with touch screen

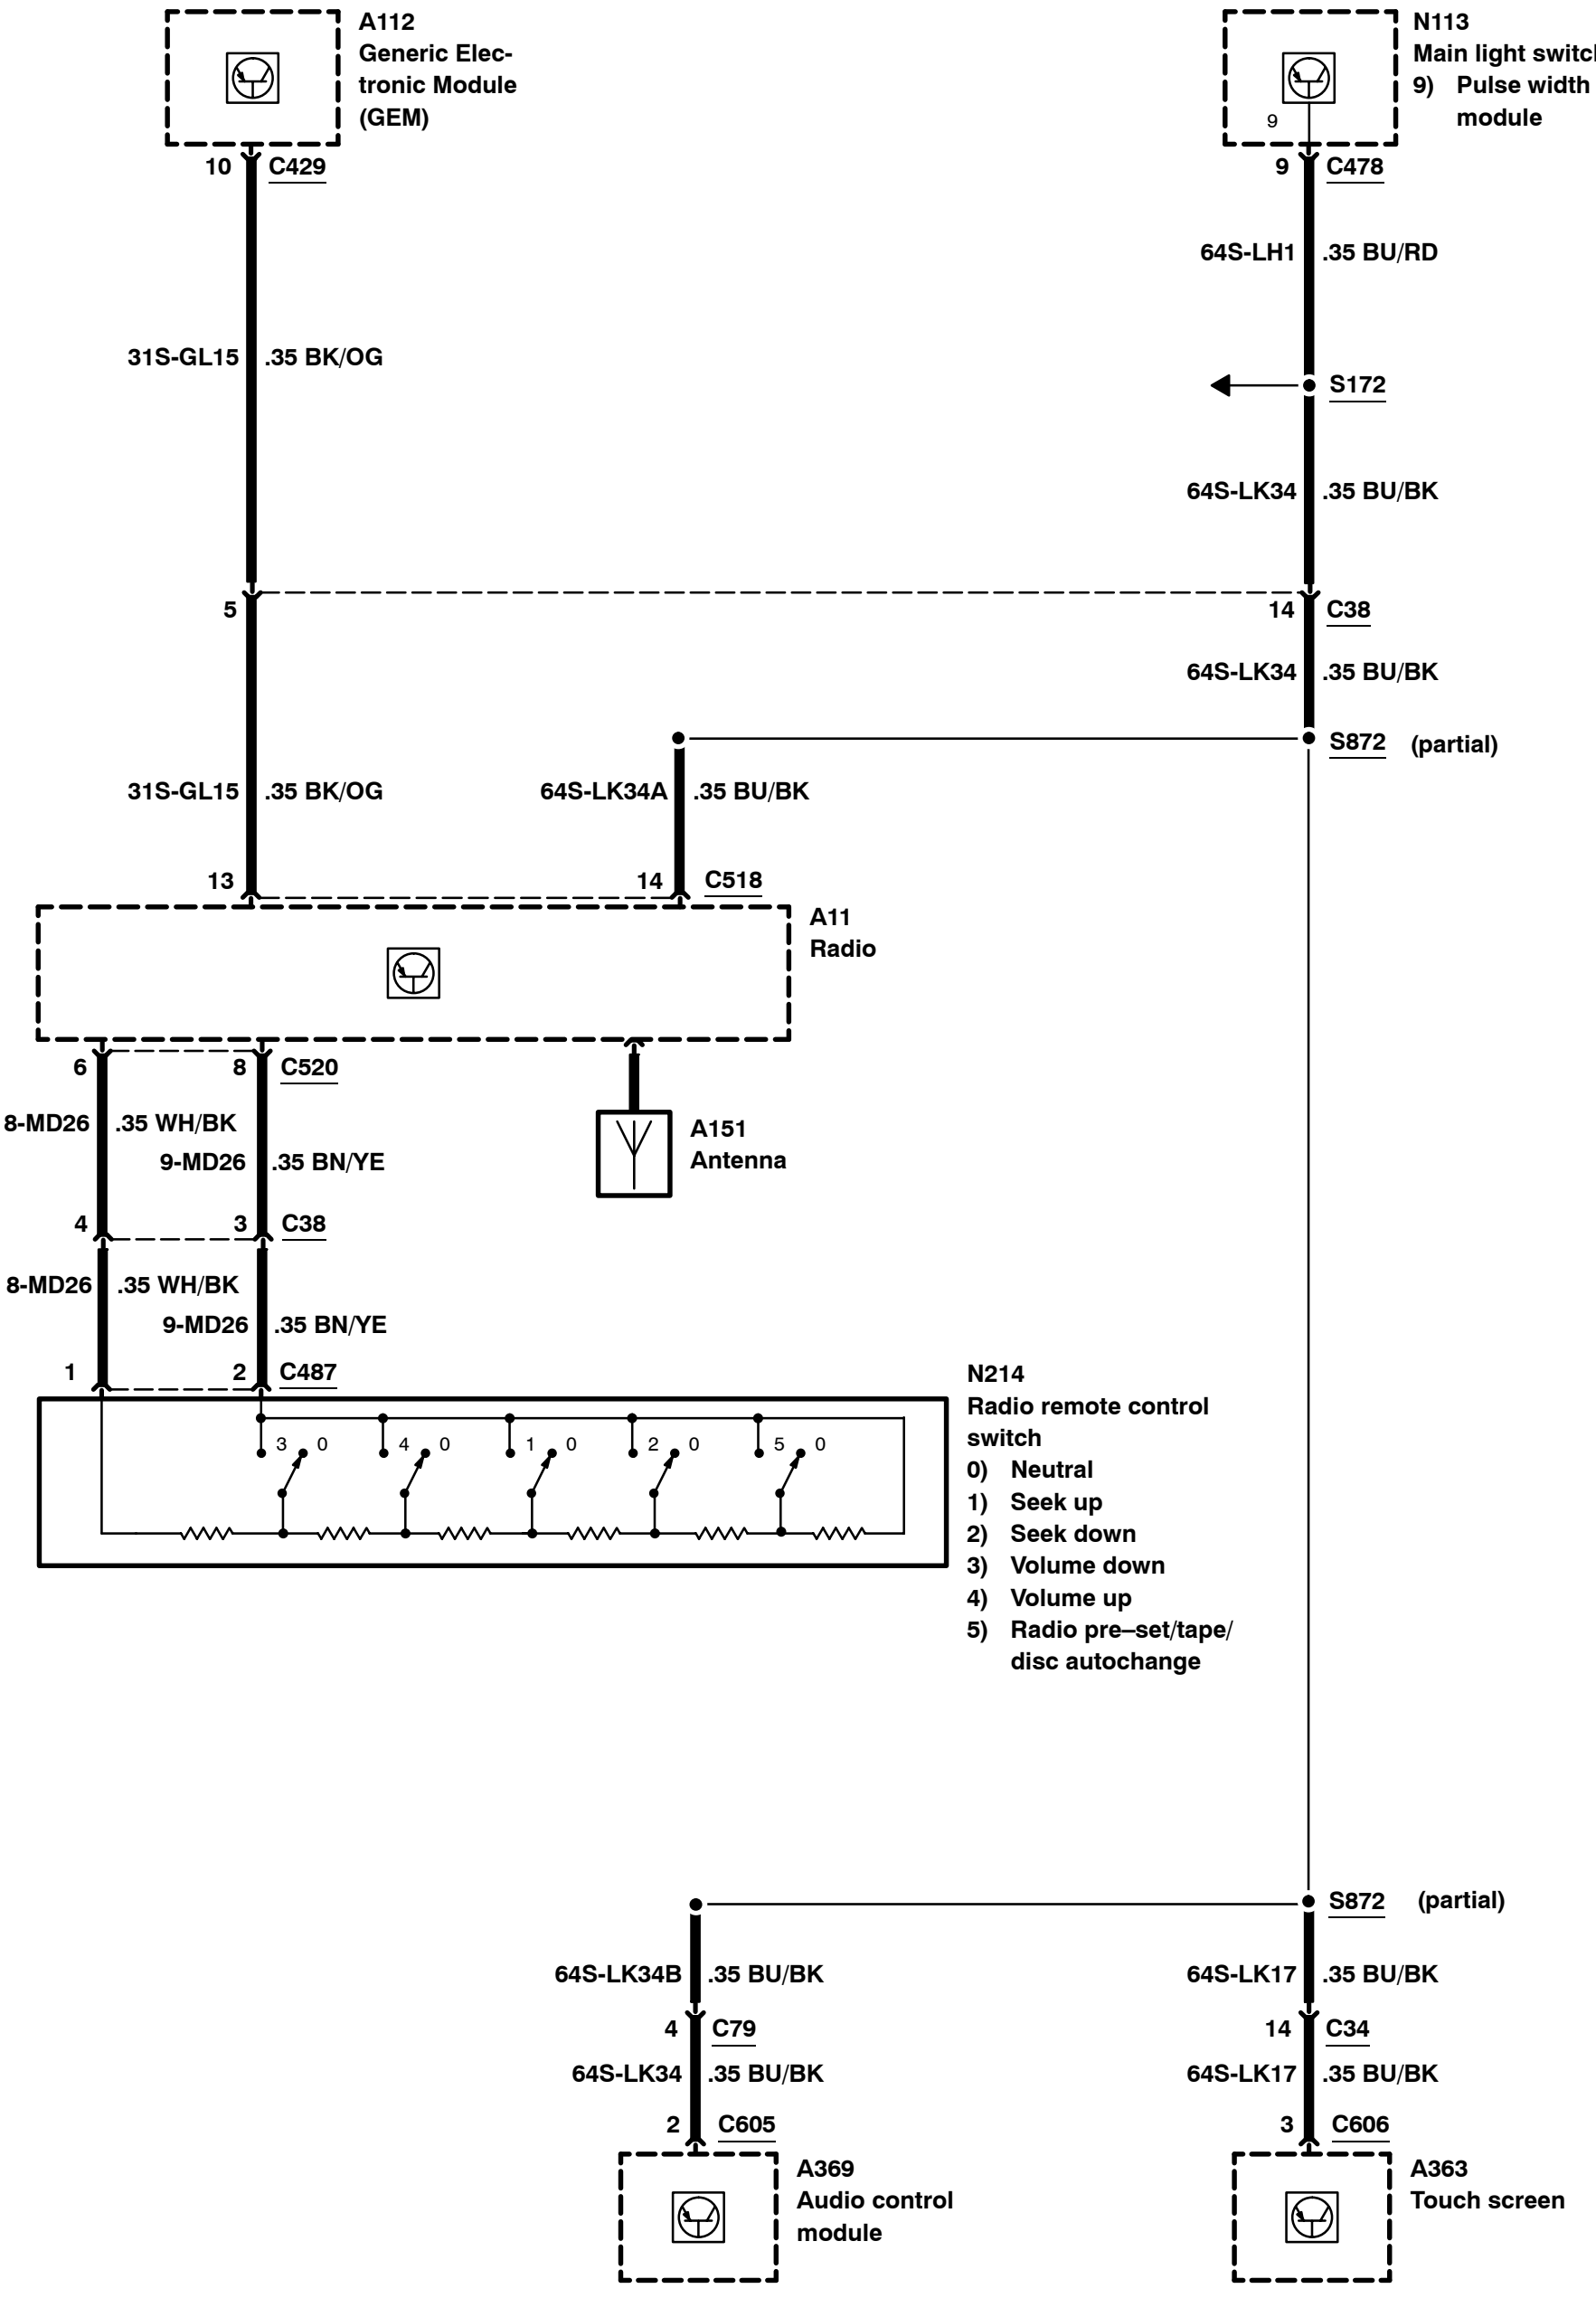


Vehicle Route Guidance/Navigation – DVD navigation system with touch screen

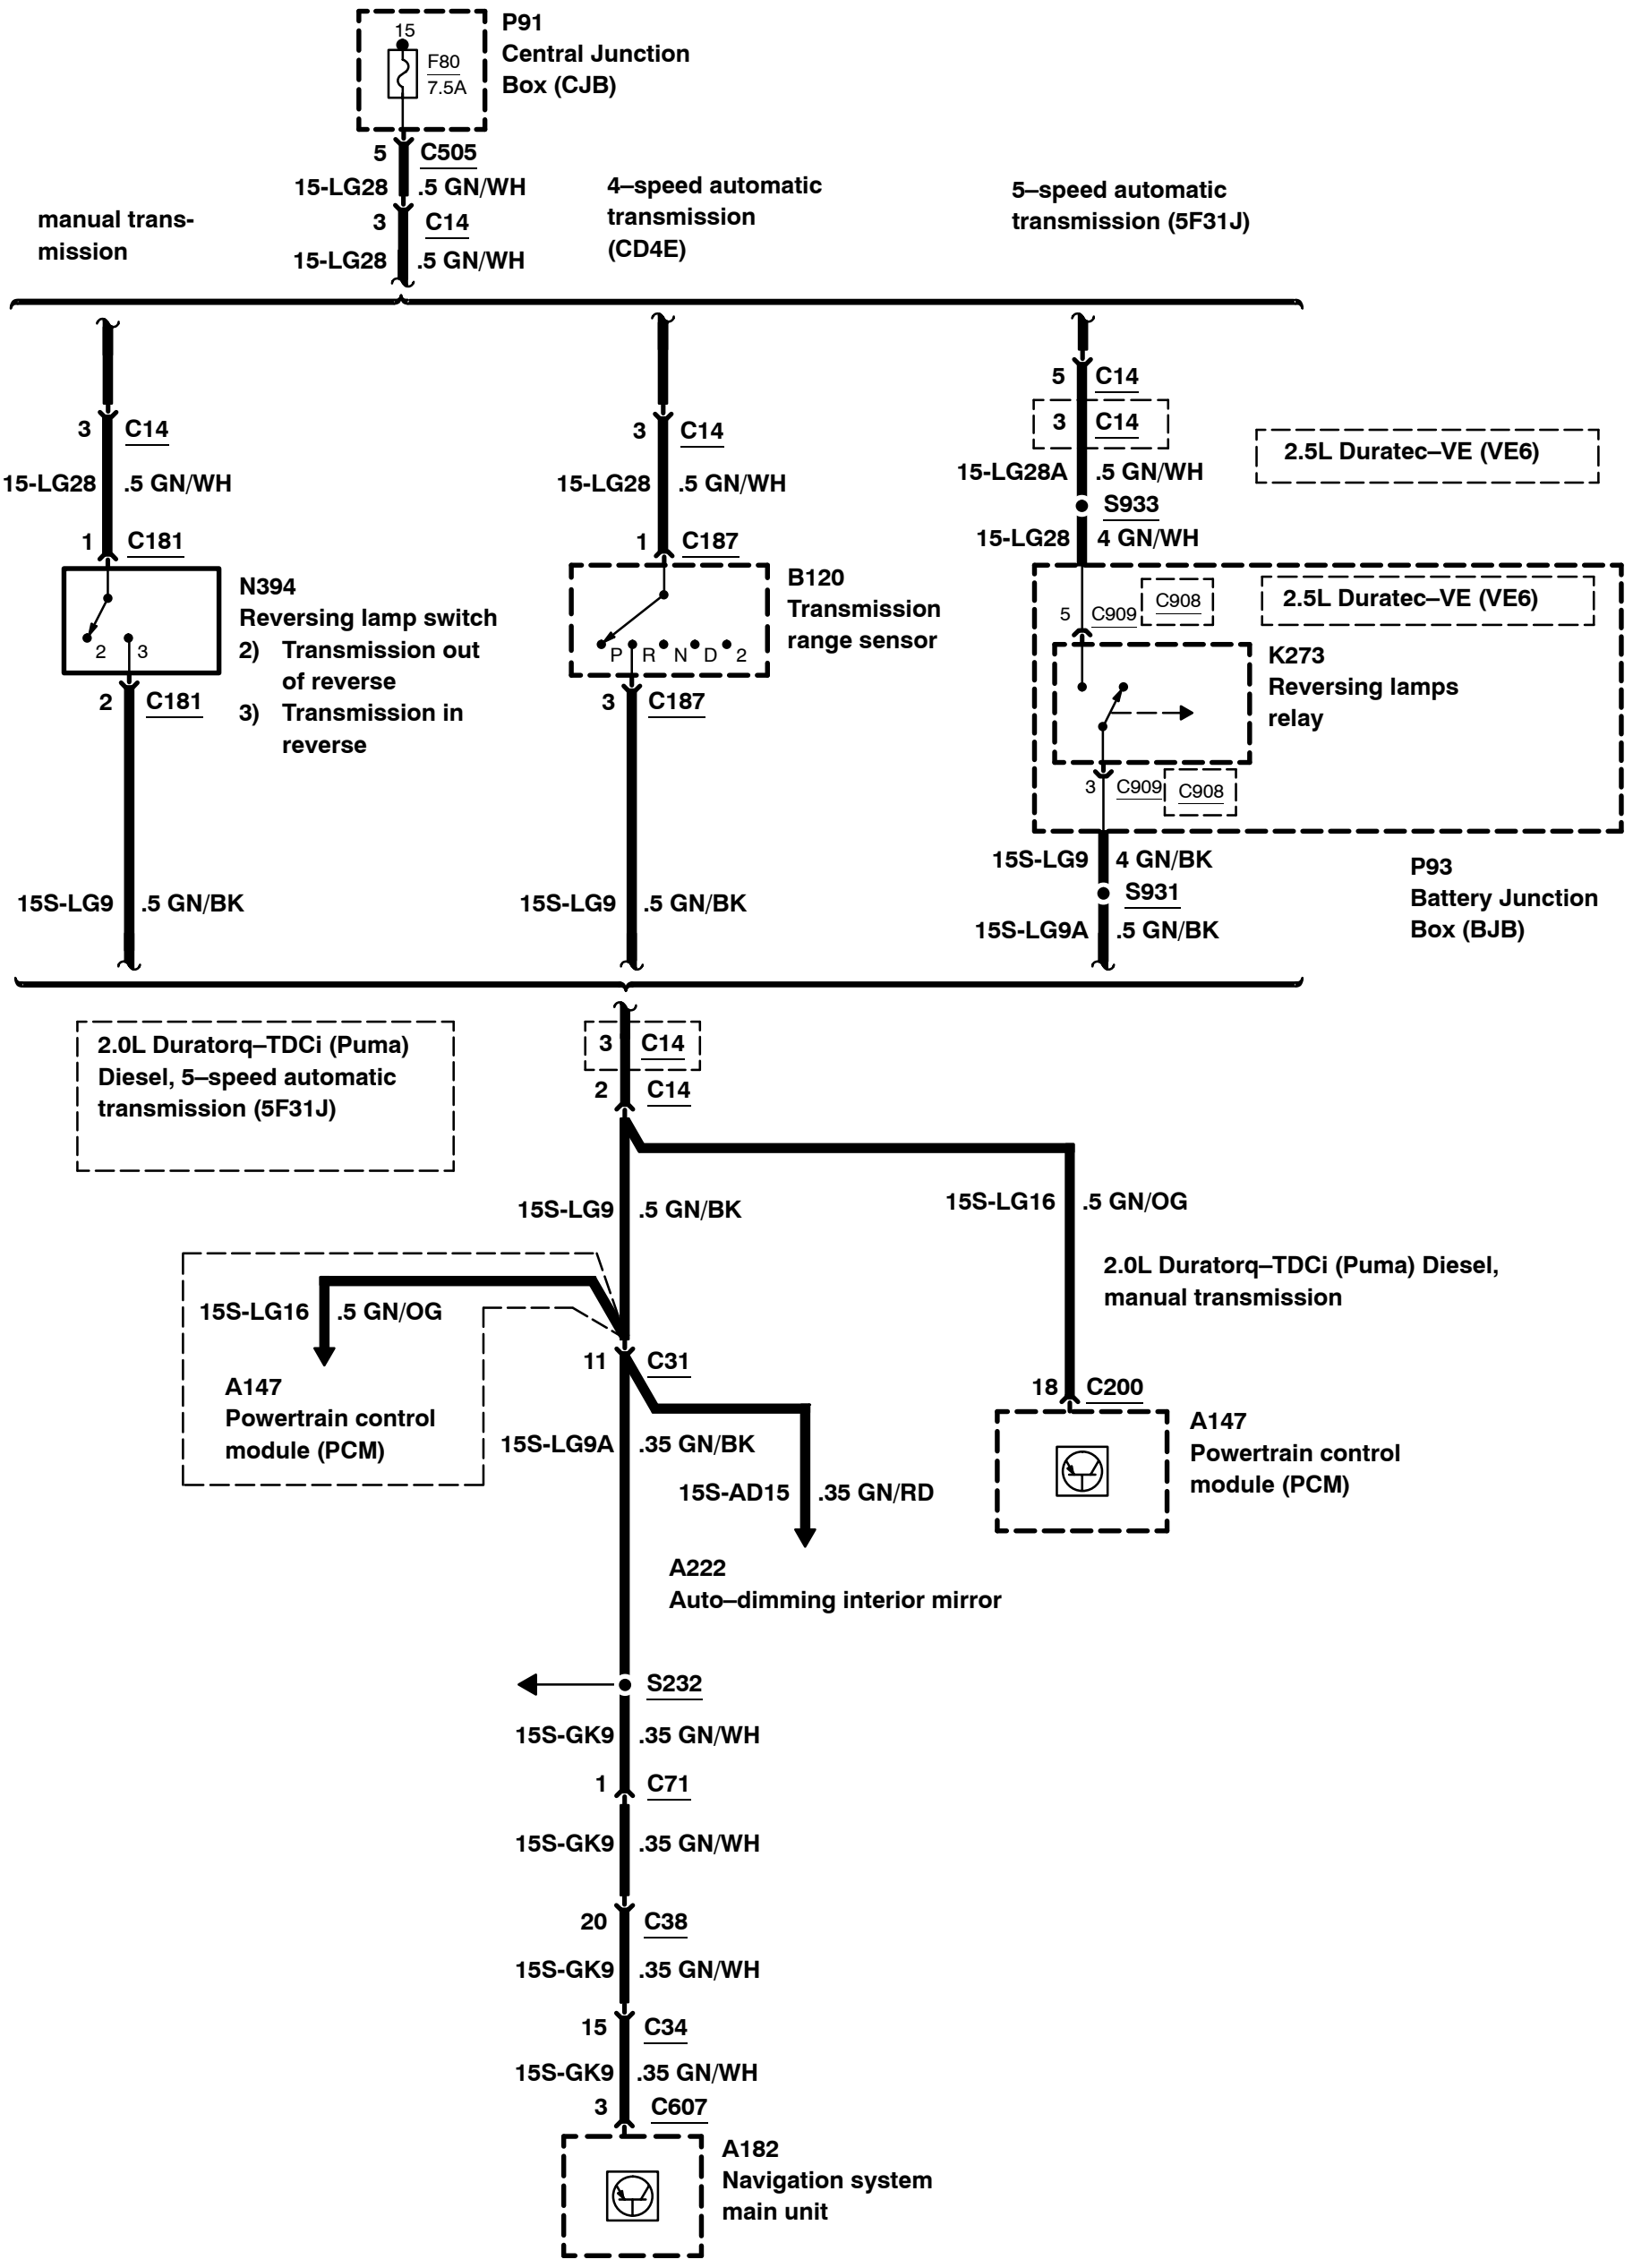


Vehicle Route Guidance/Navigation – DVD navigation system with touch screen

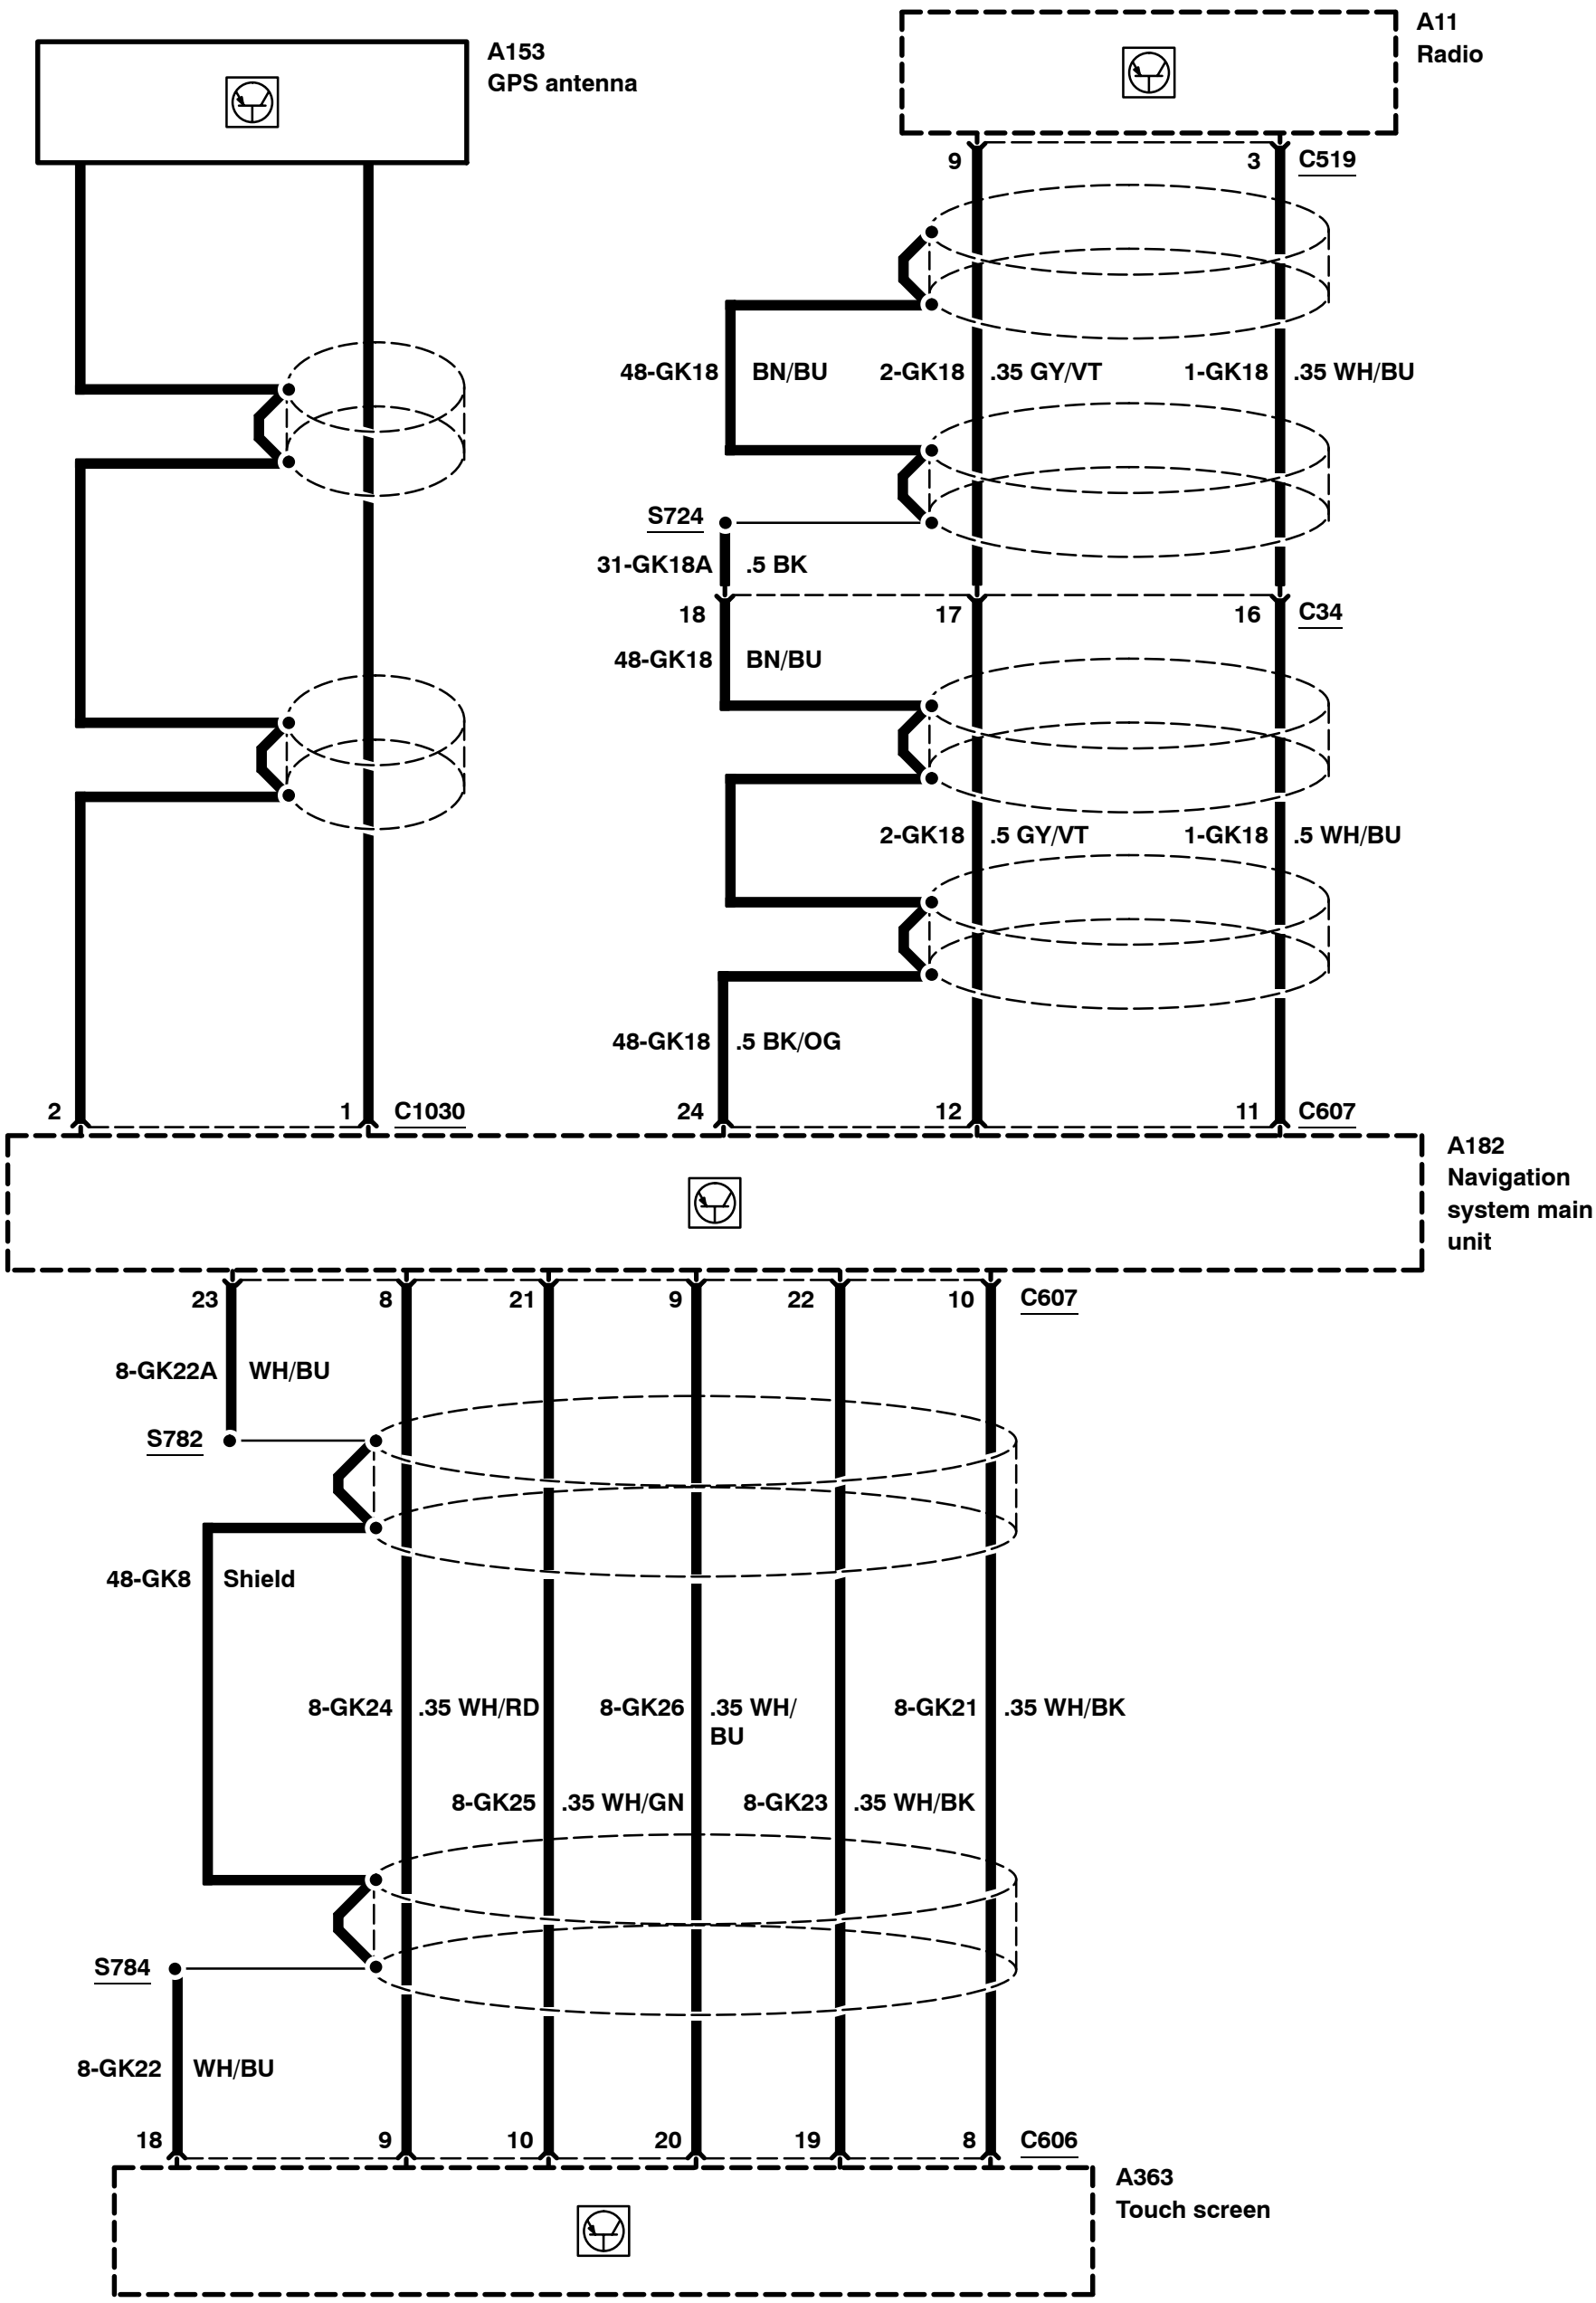


Vehicle Route Guidance/Navigation – DVD navigation system with touch screen

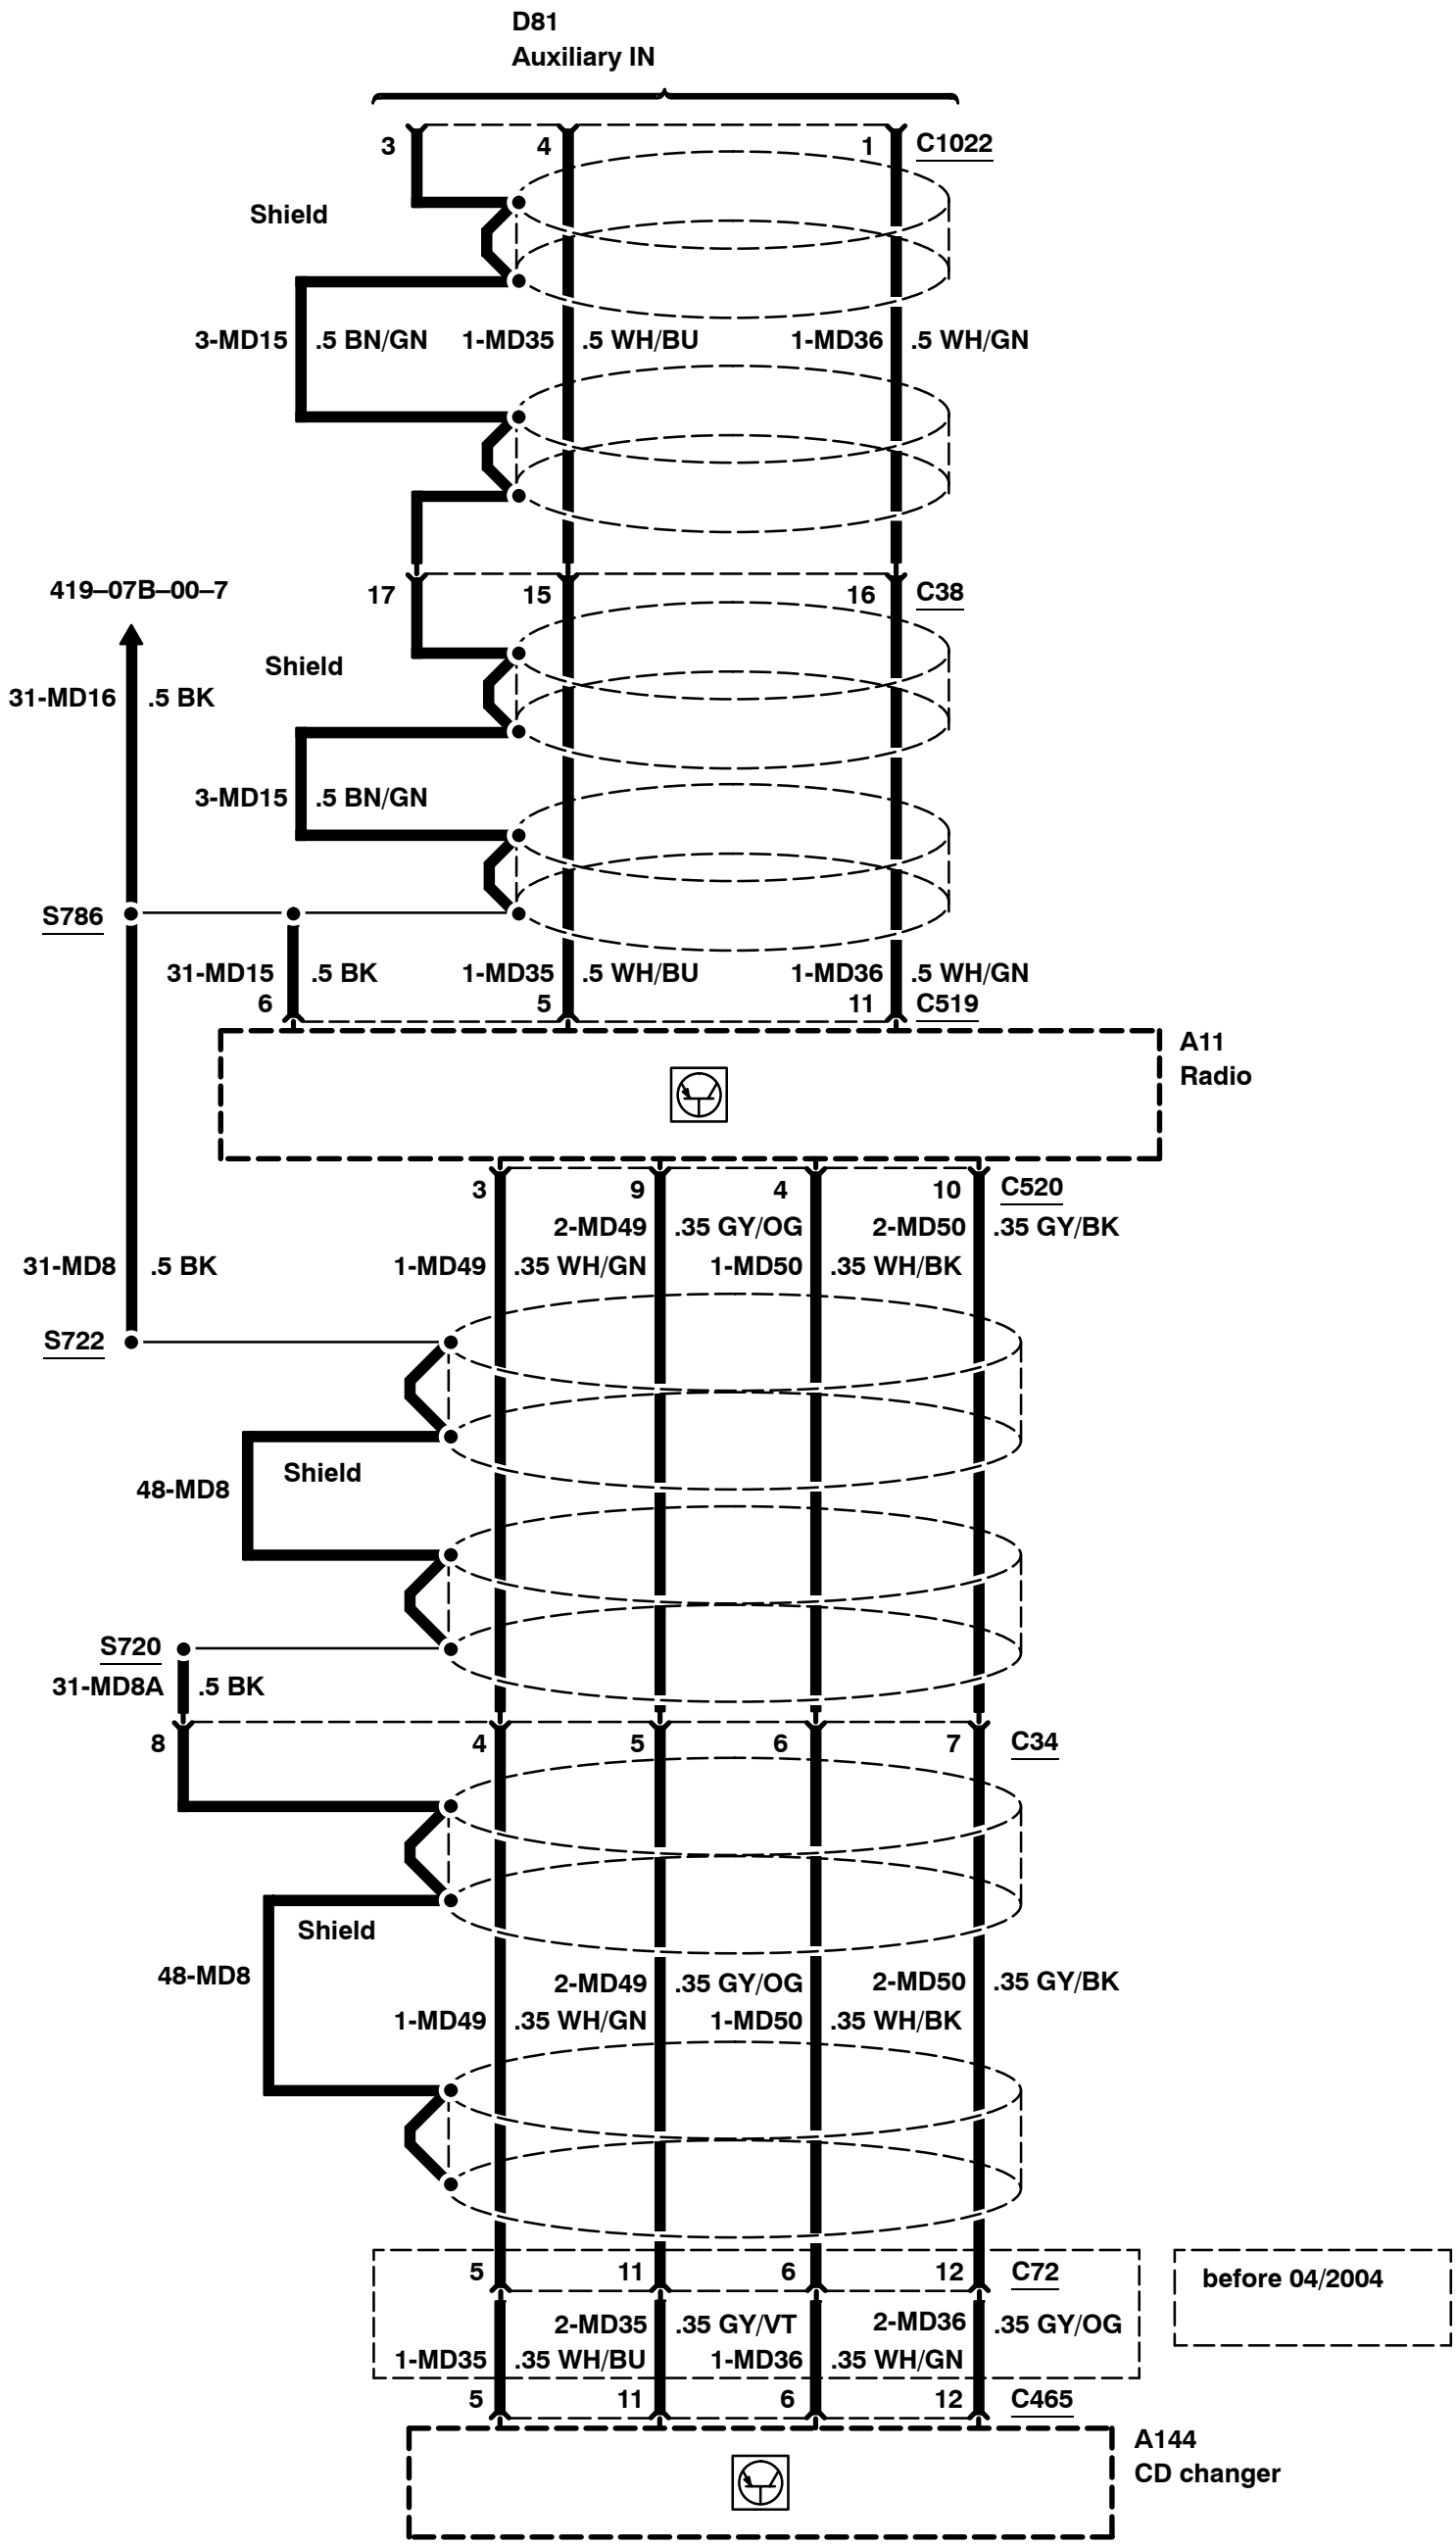


Vehicle Route Guidance/Navigation – DVD navigation system with touch screen, with video system

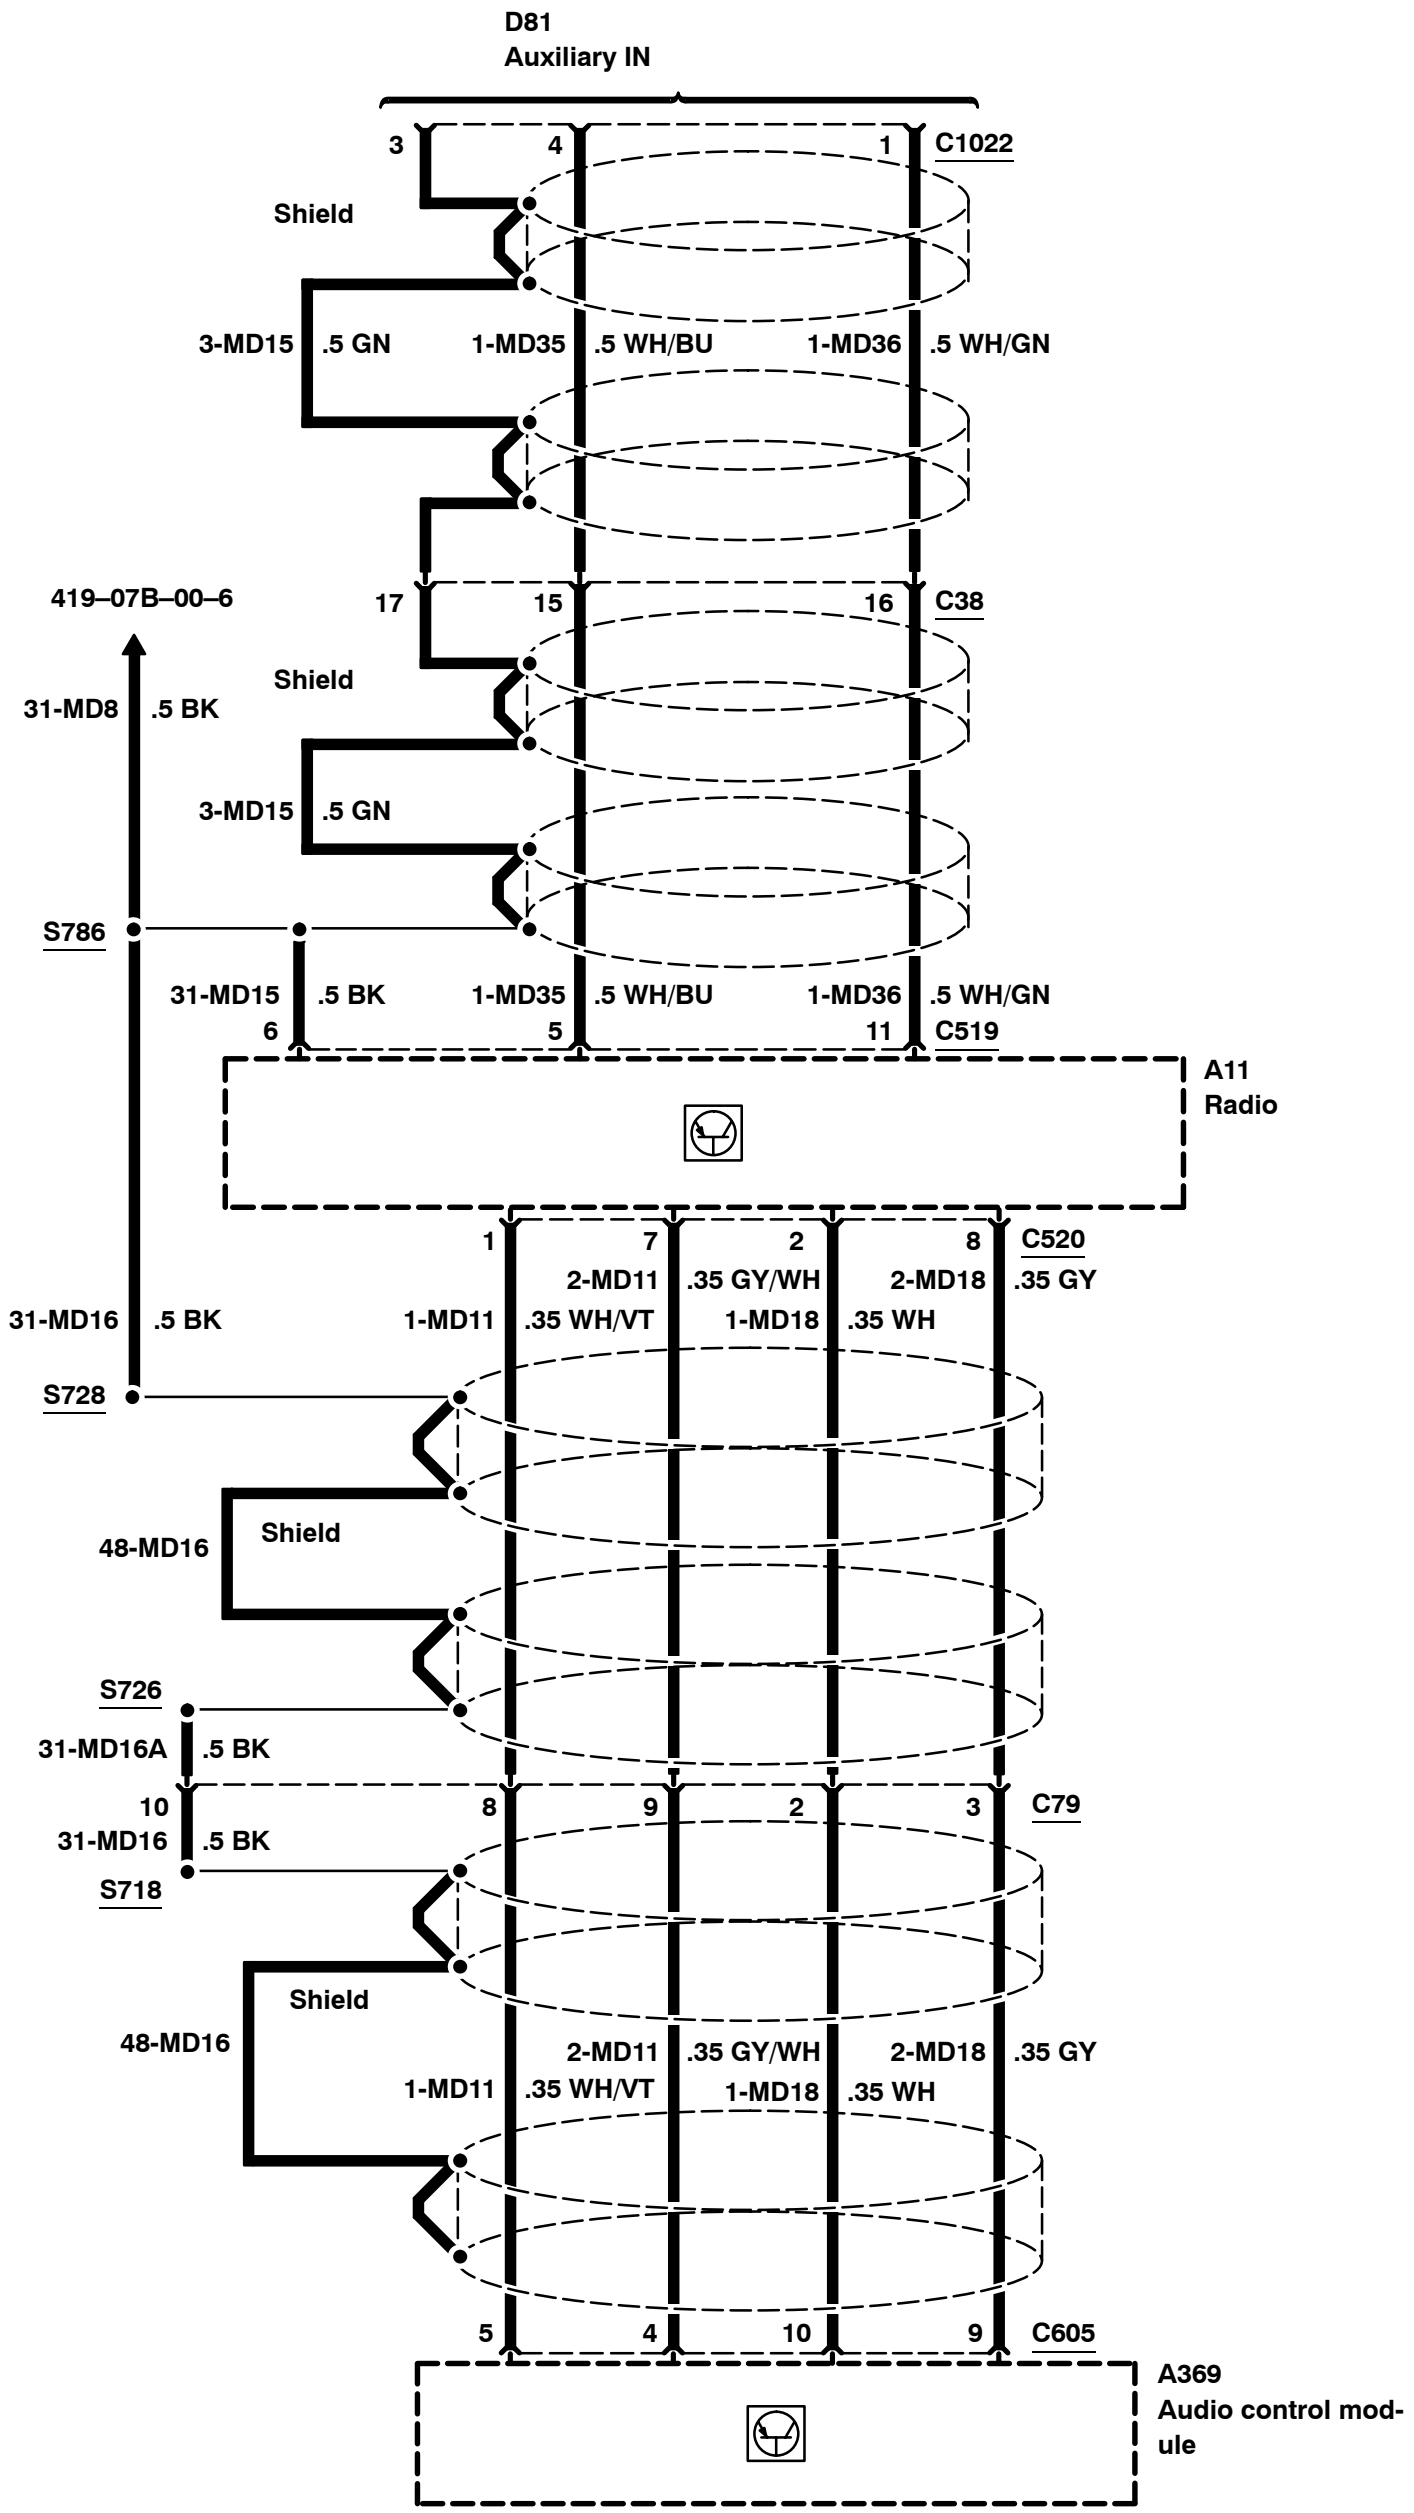


Vehicle Route Guidance/Navigation – DVD navigation system with touch screen

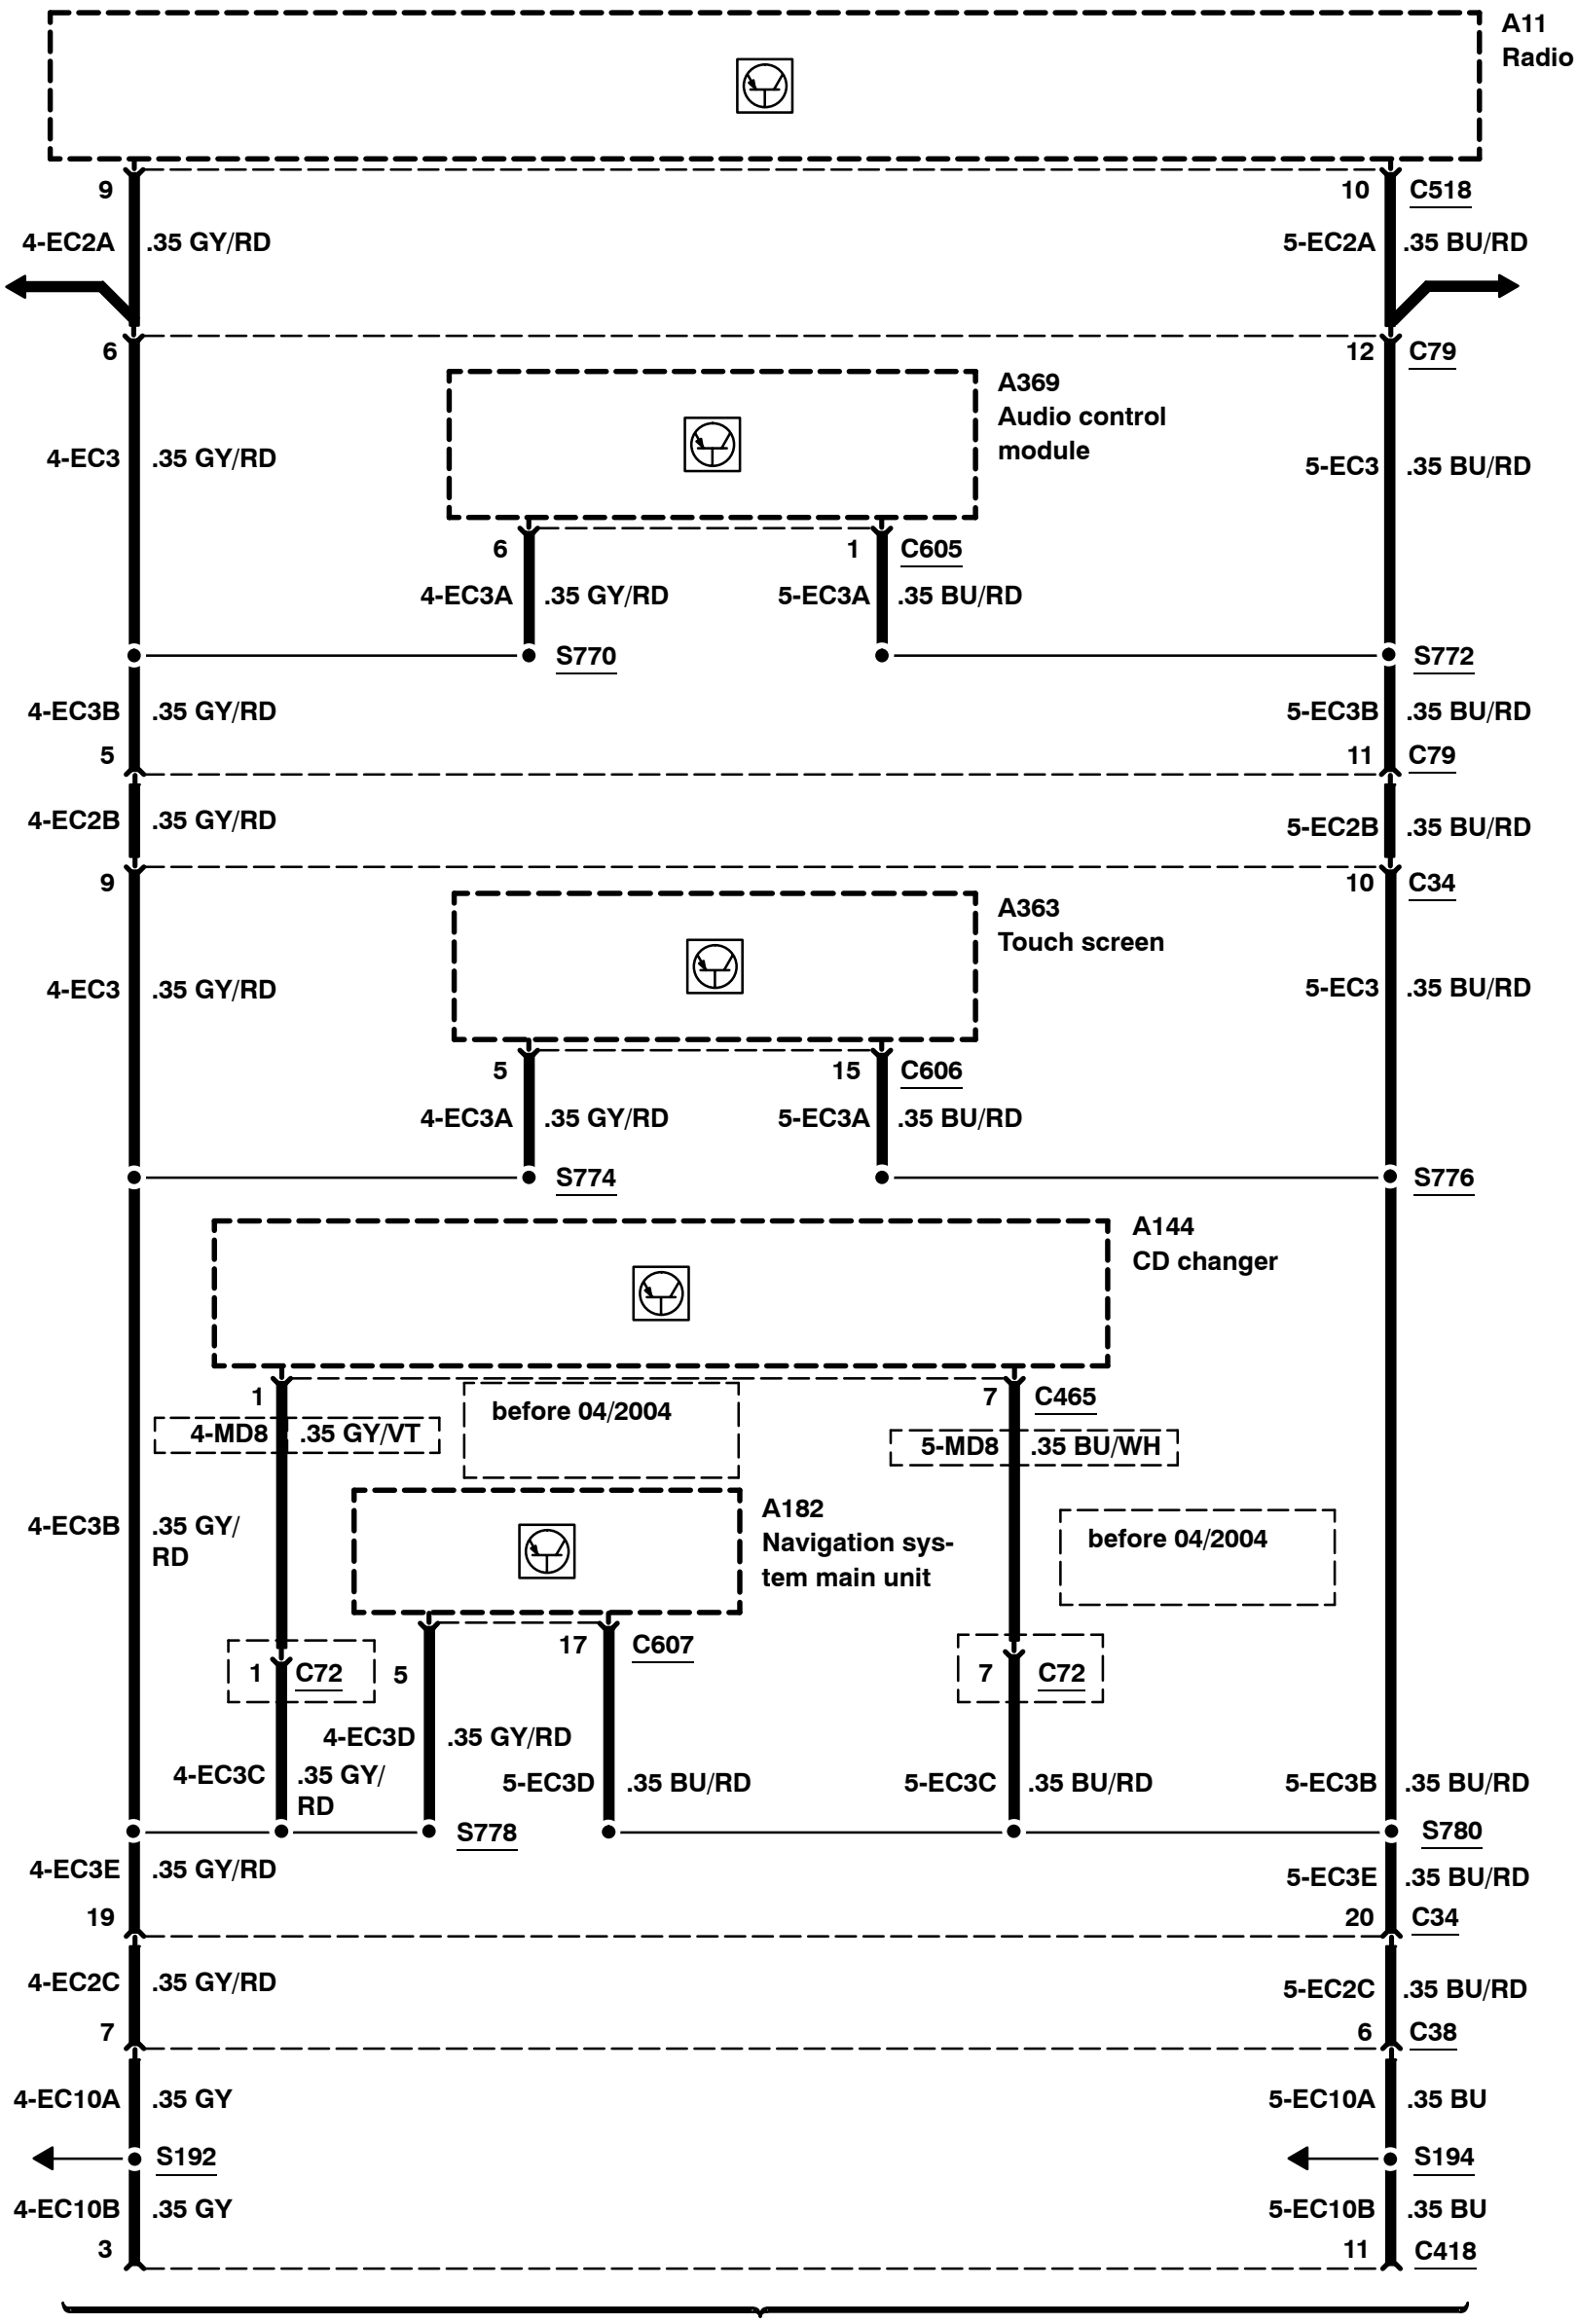


Cellular Phone – without external CD changer and video system

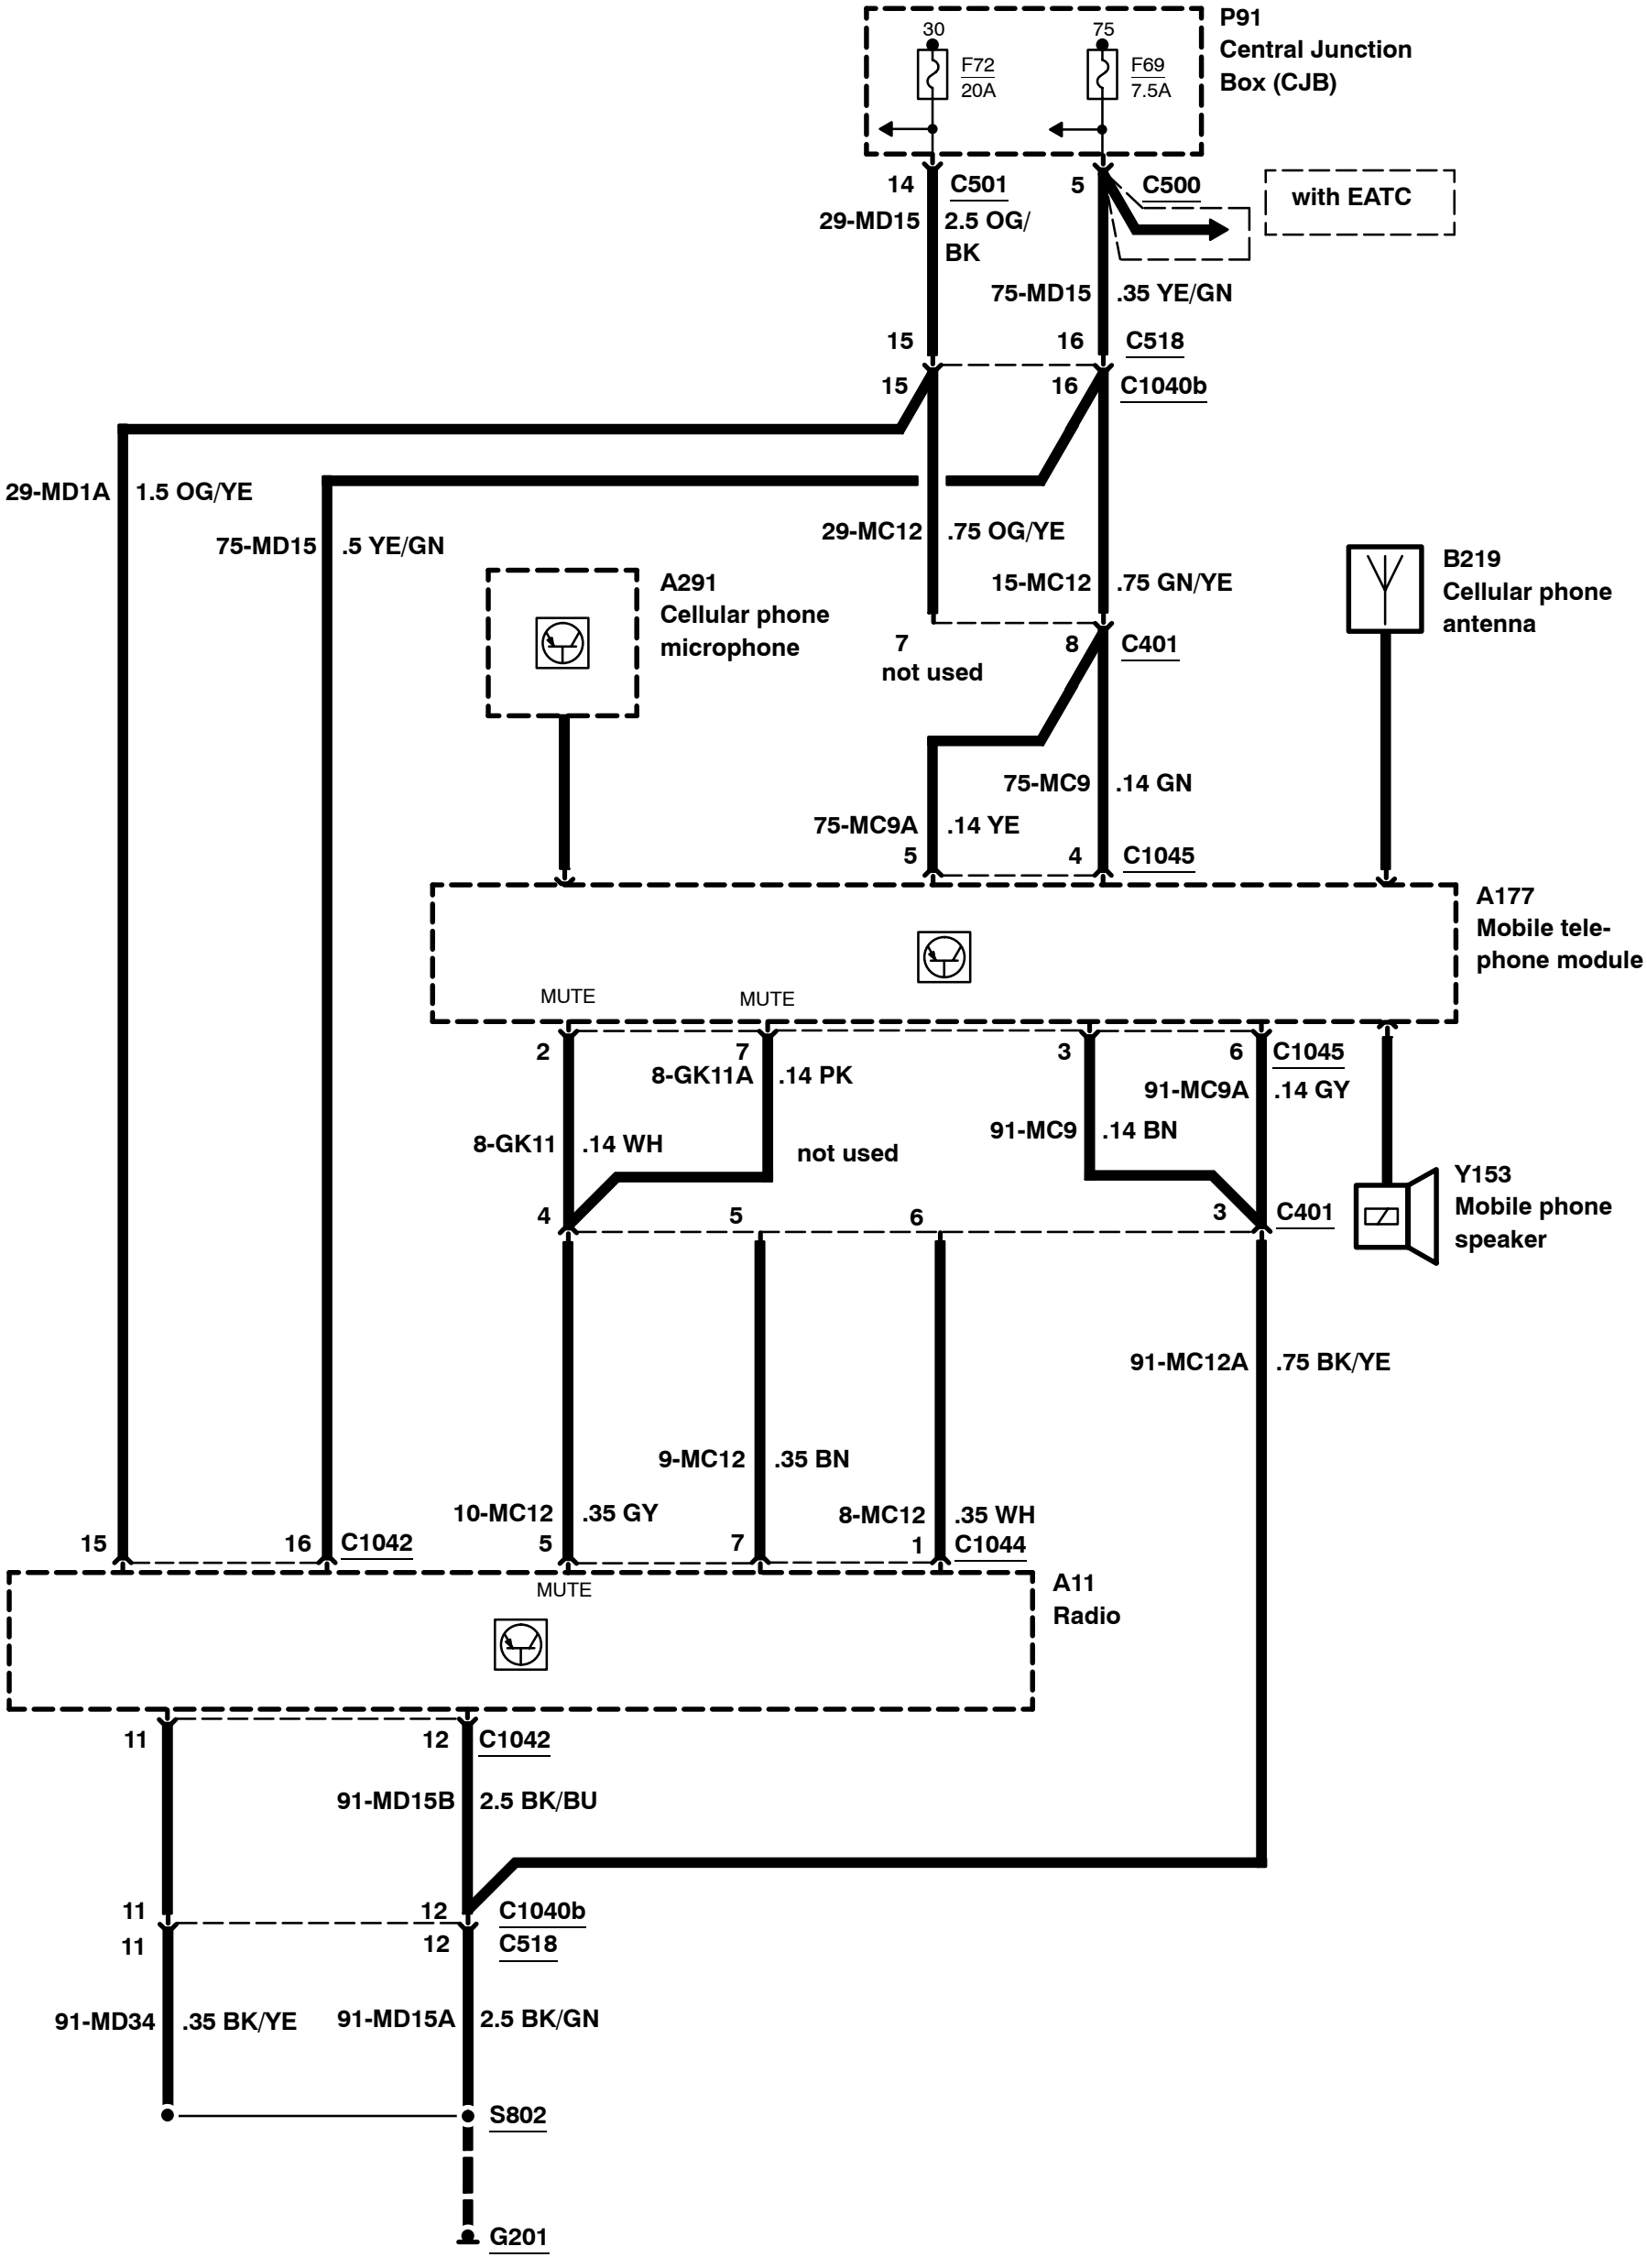


Cellular Phone – with external CD changer and/or video system

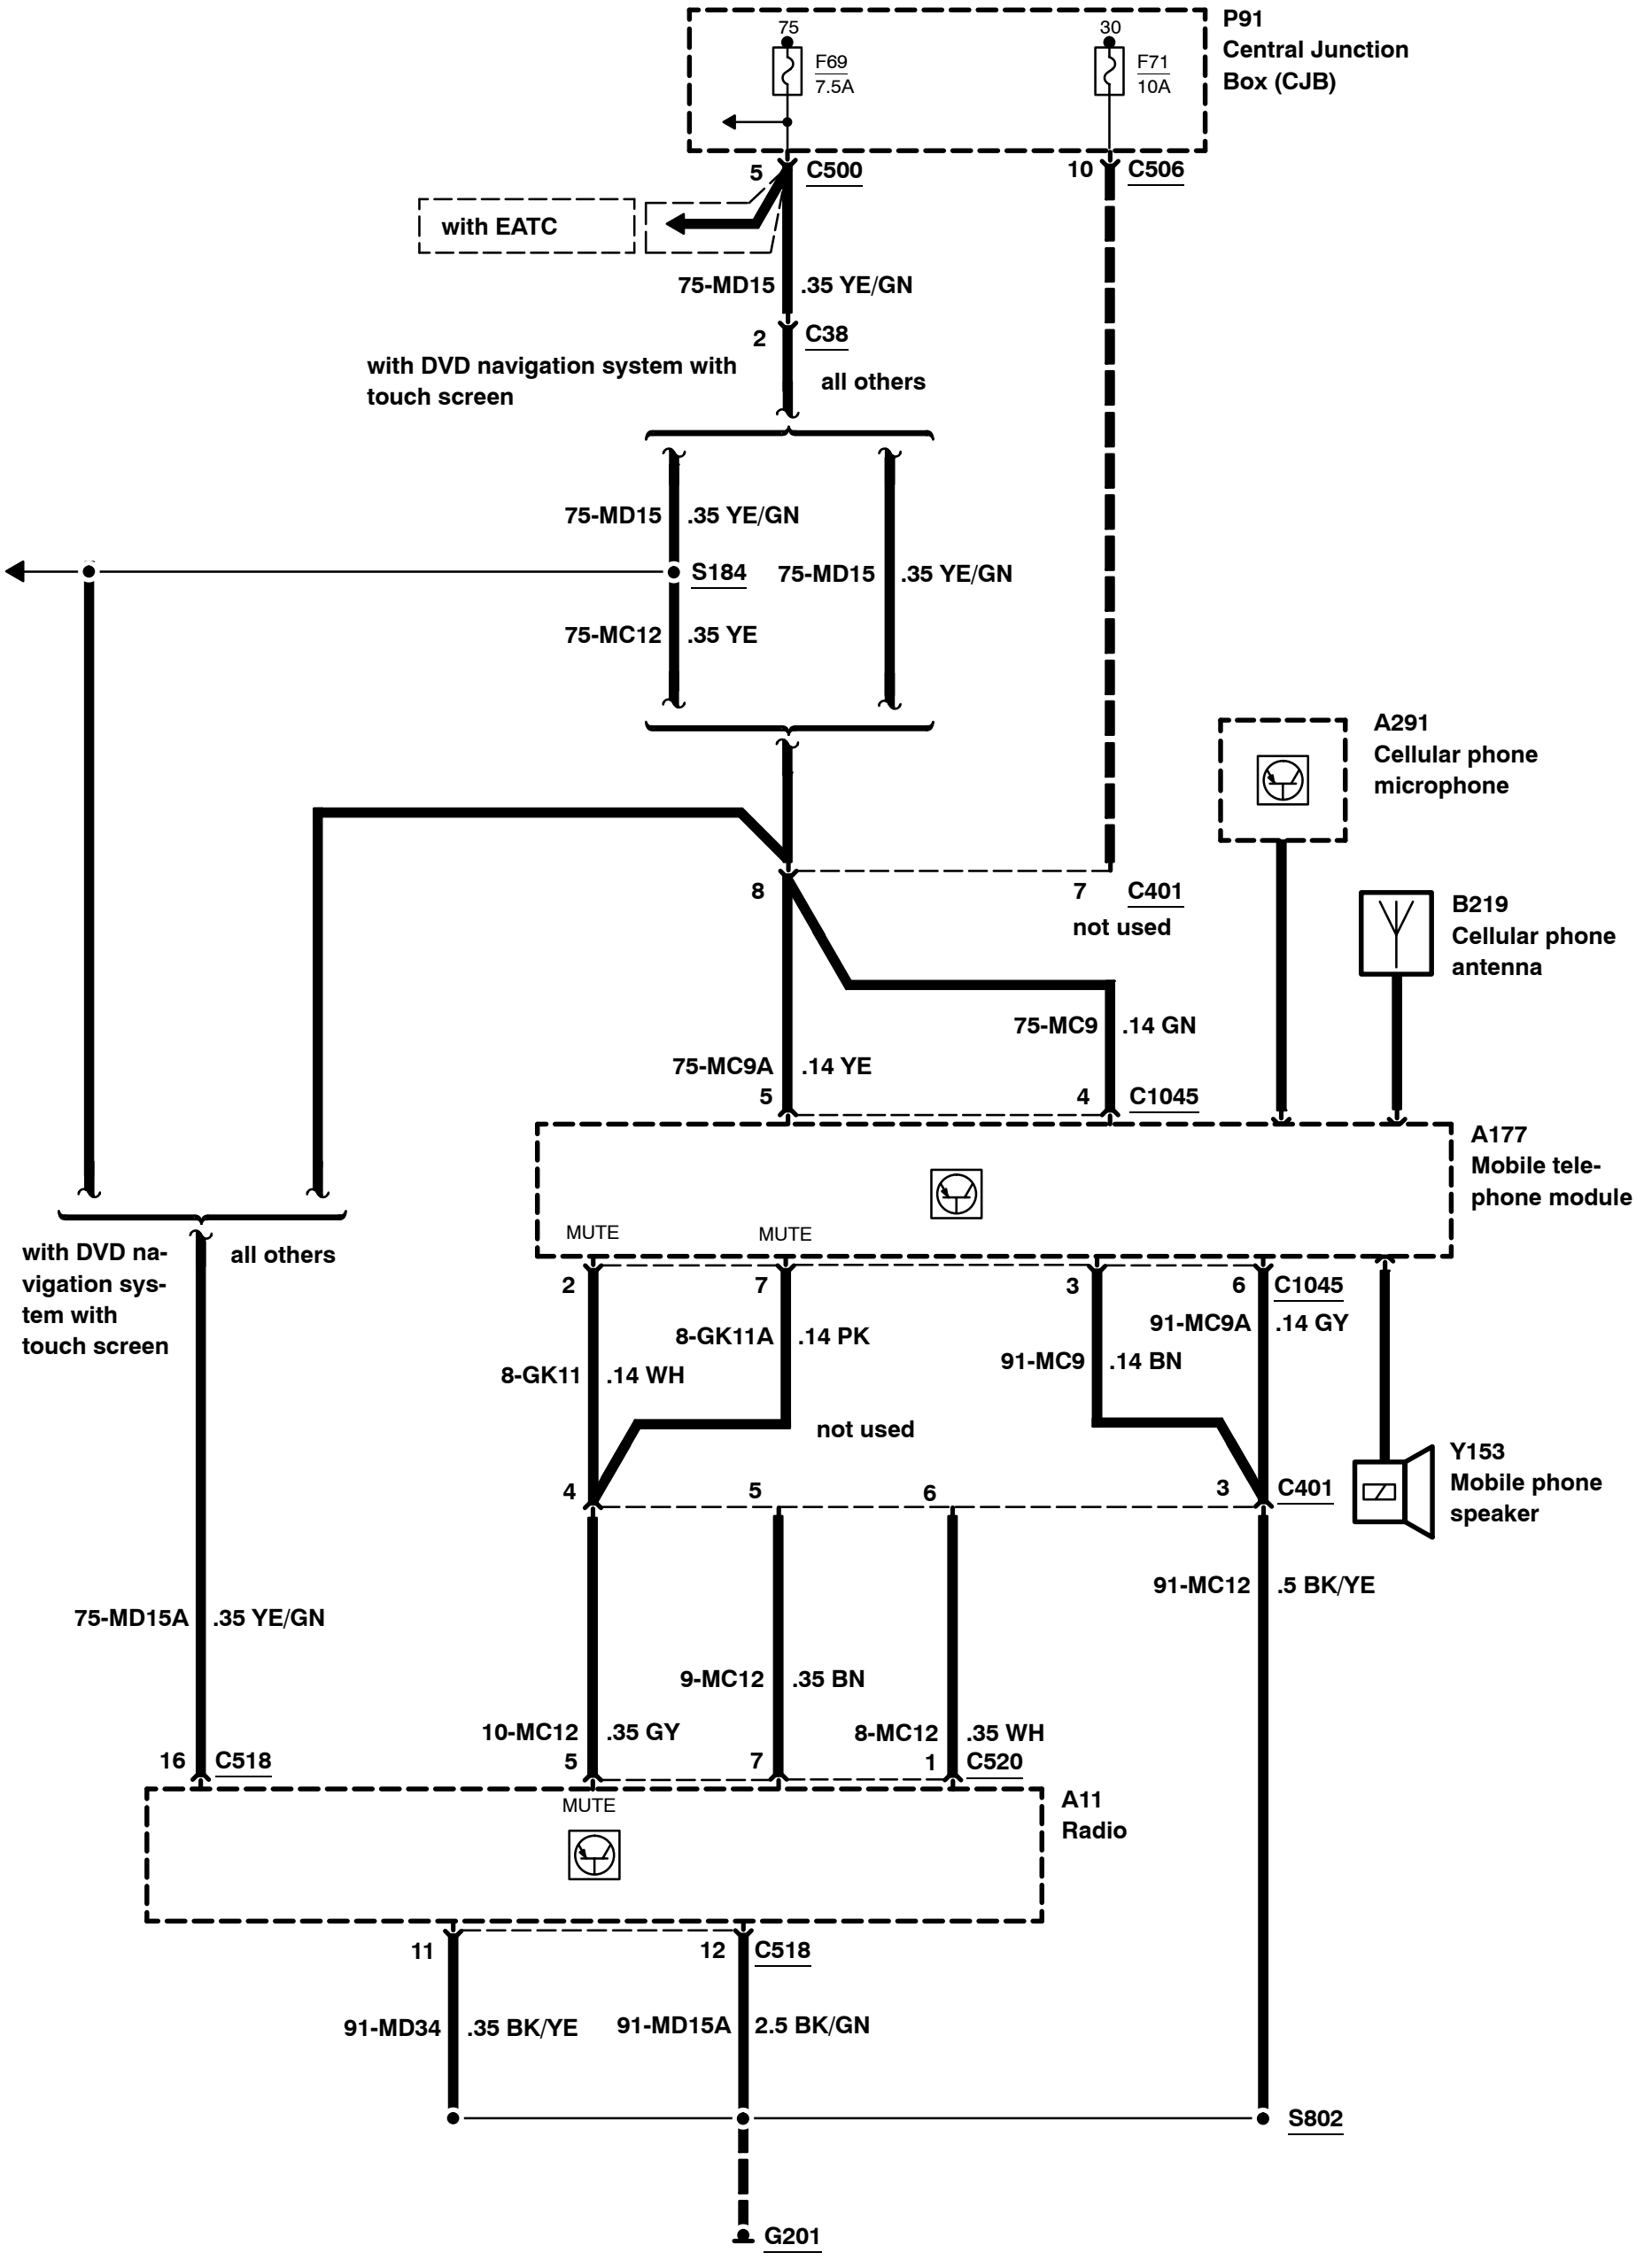


Cellular Phone – Bluetooth voice control

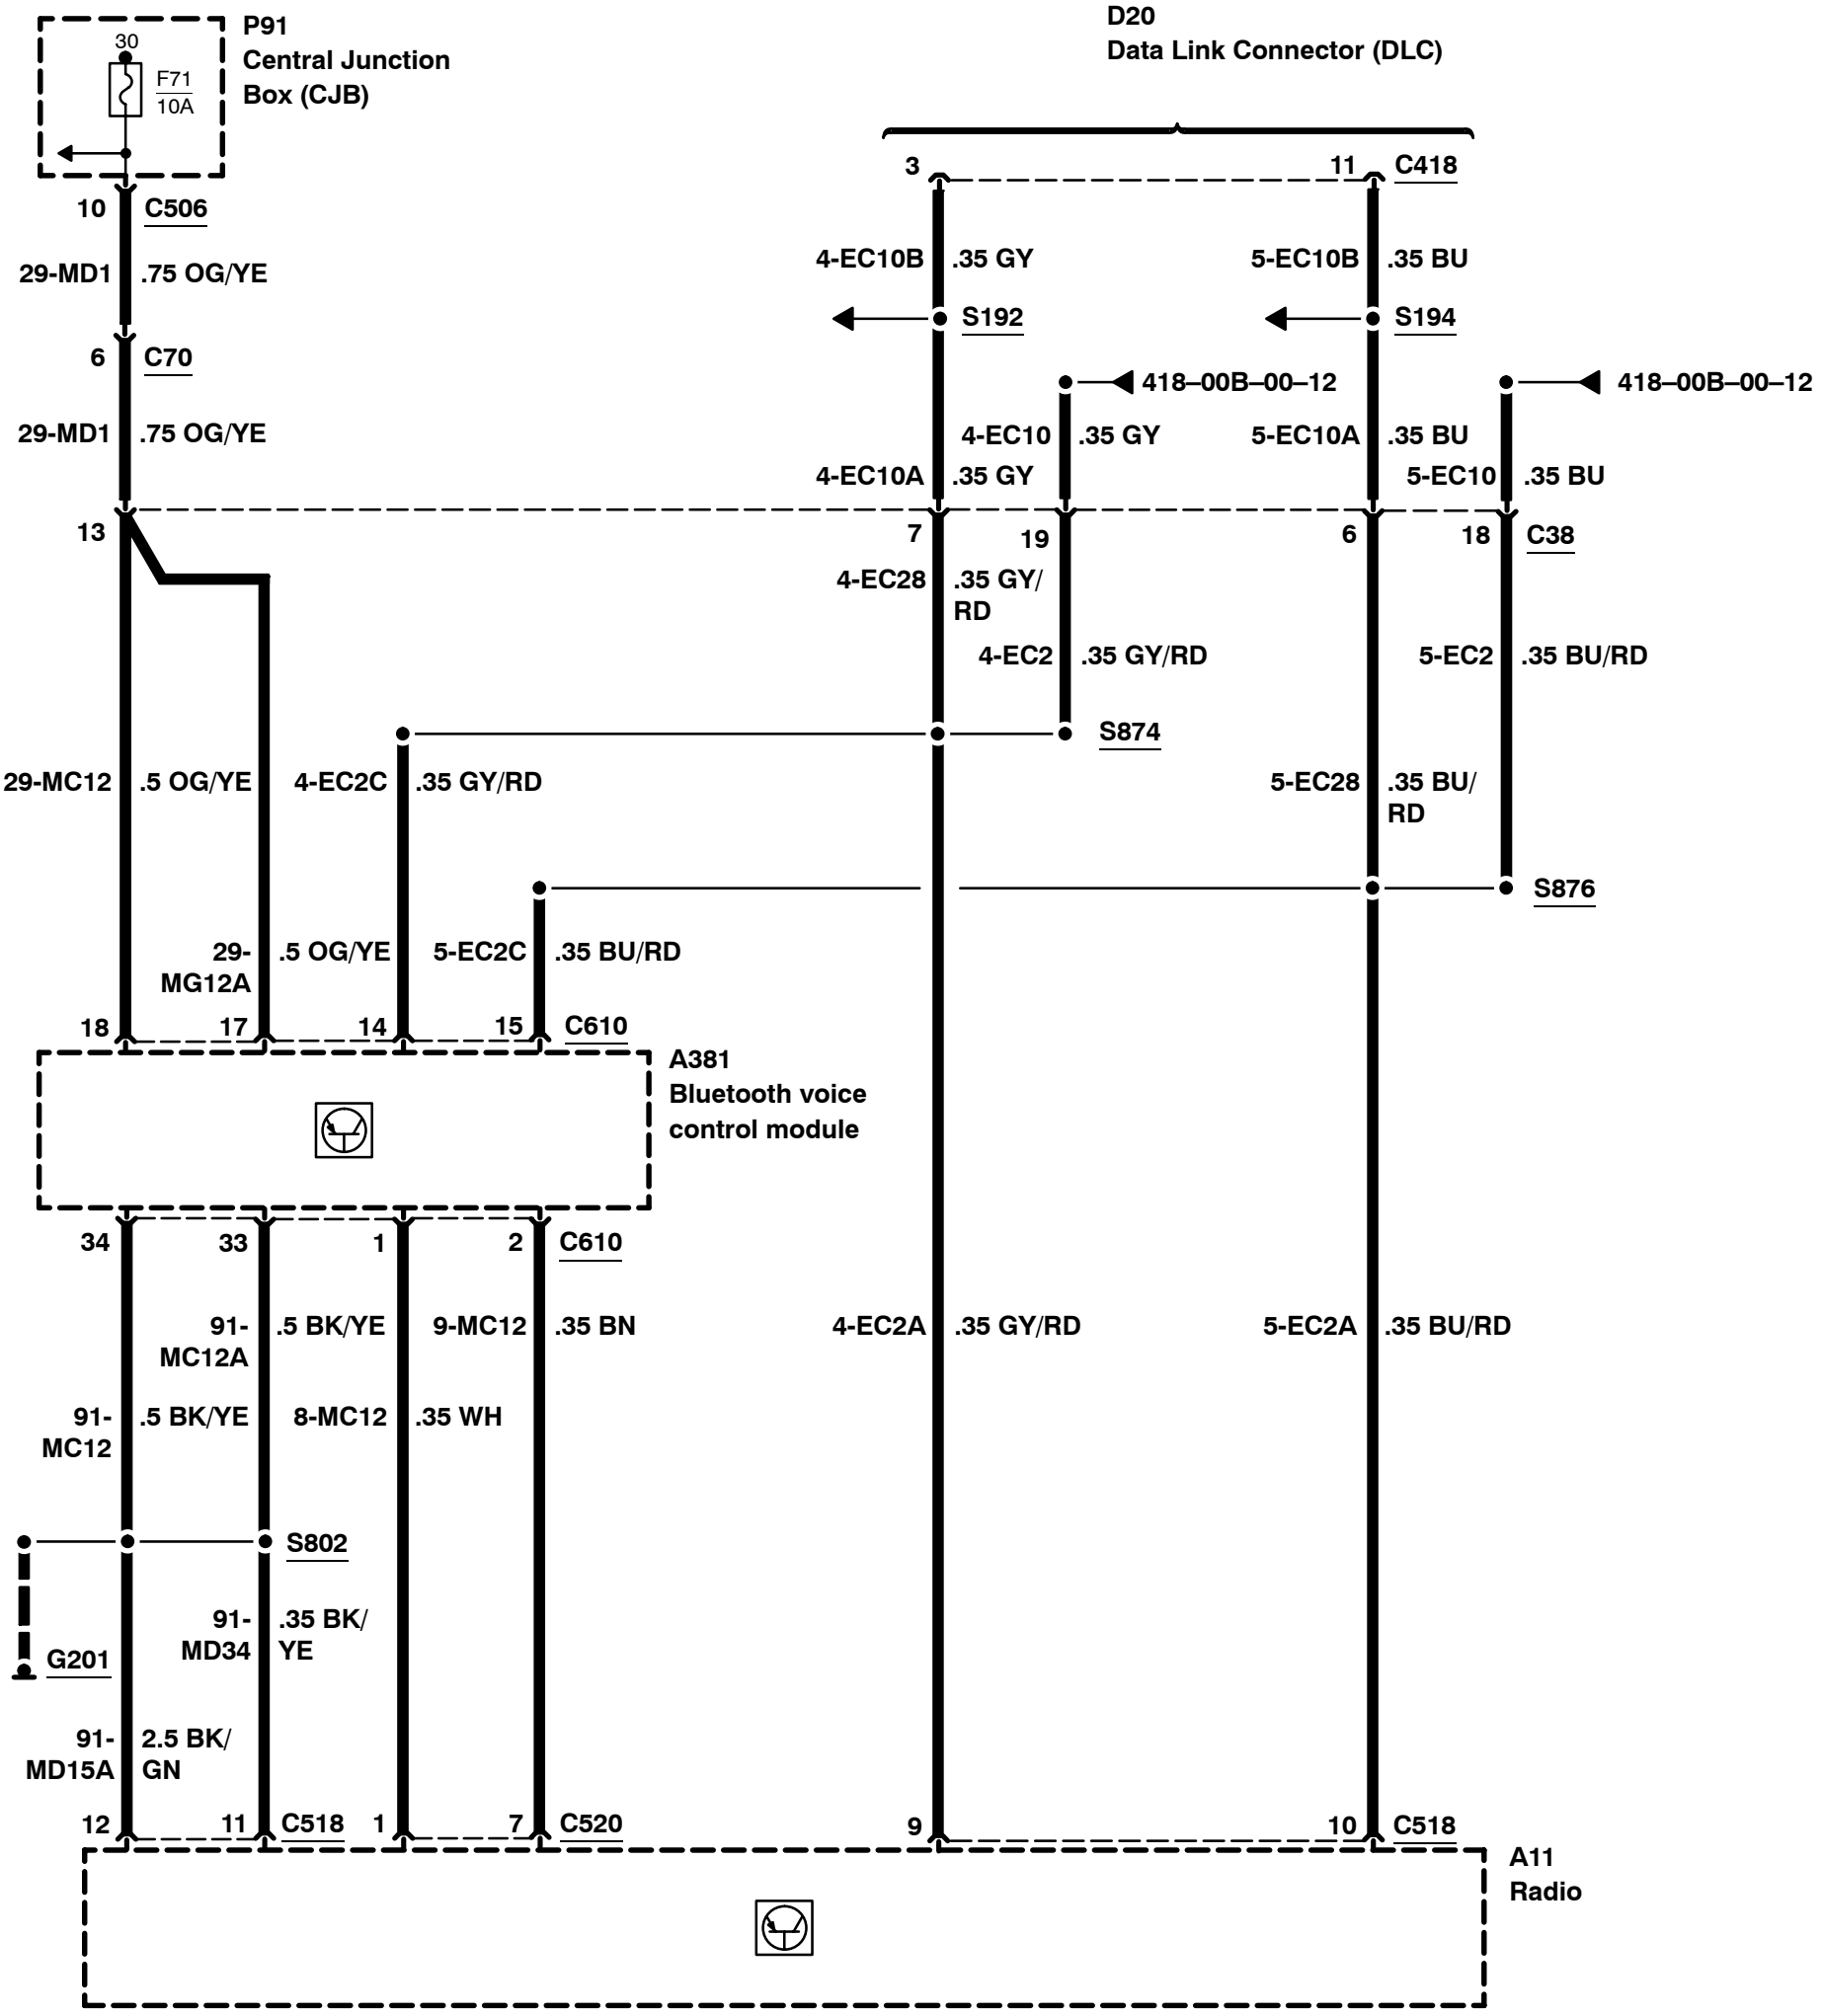


Cellular Phone – Bluetooth voice control

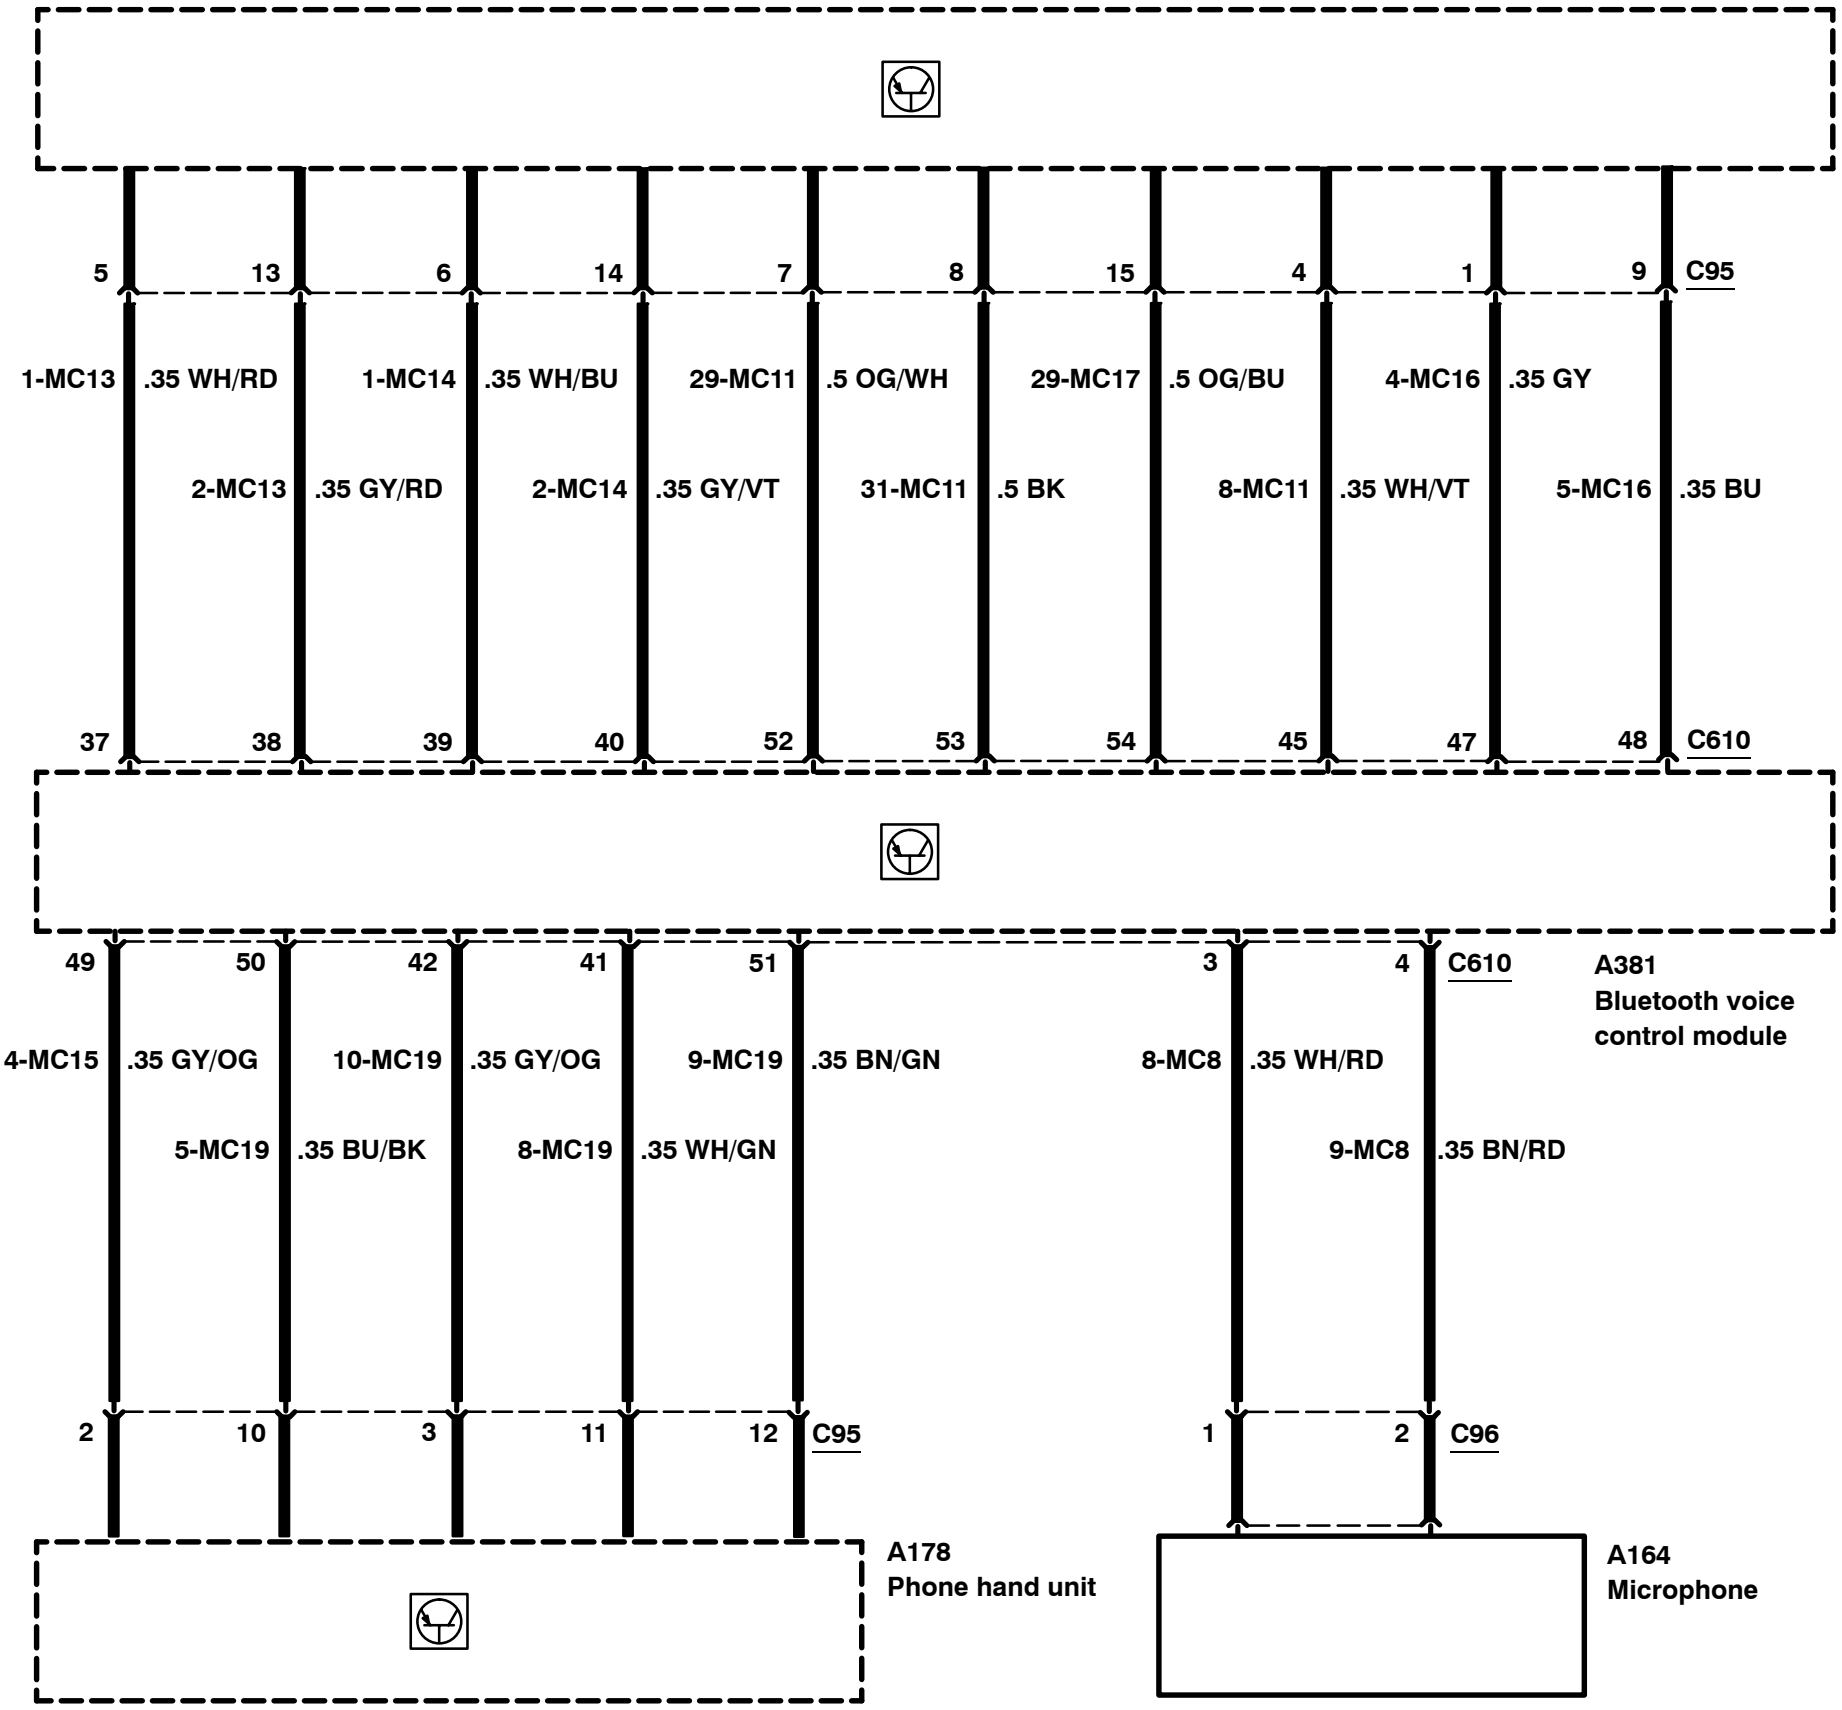


Multifunction Electronic Control Modules

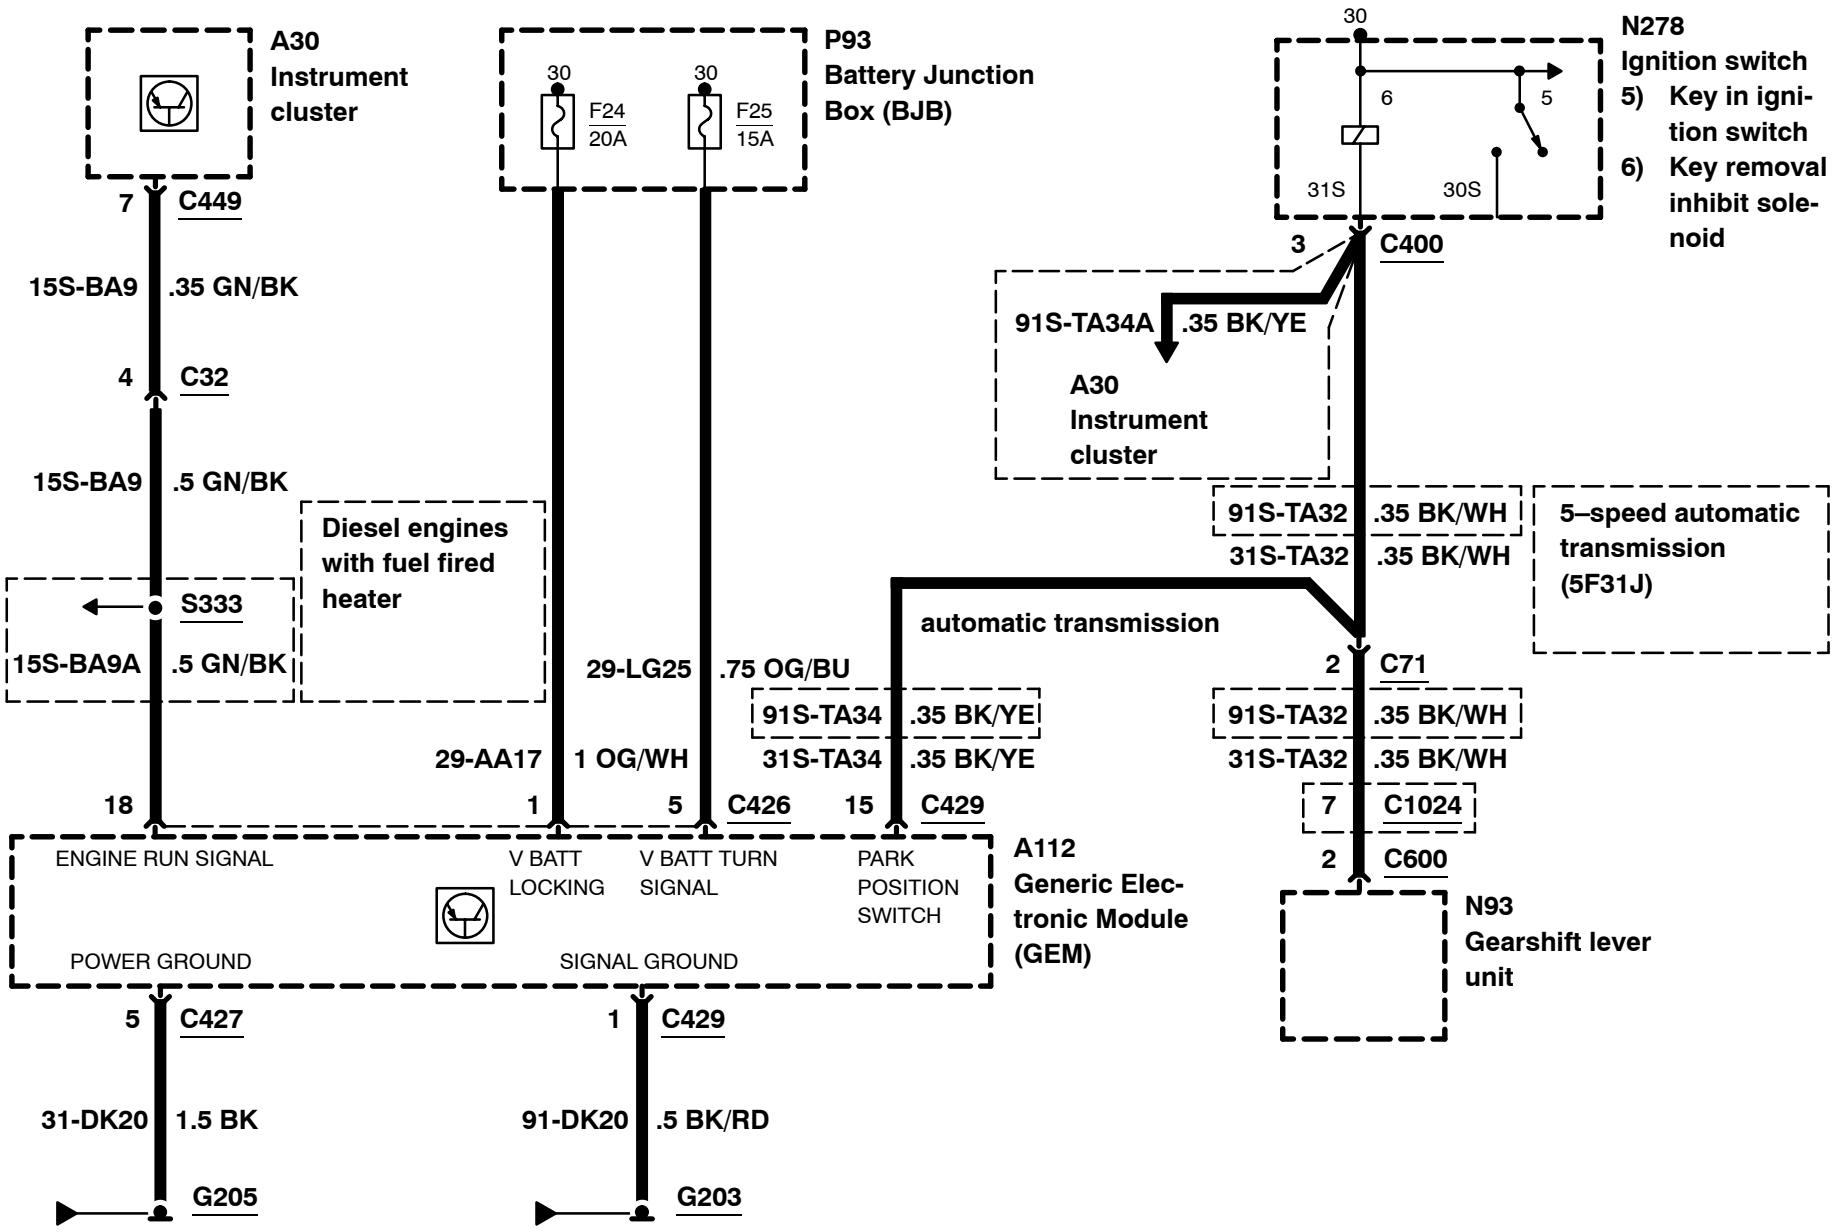


Multifunction Electronic Control Modules

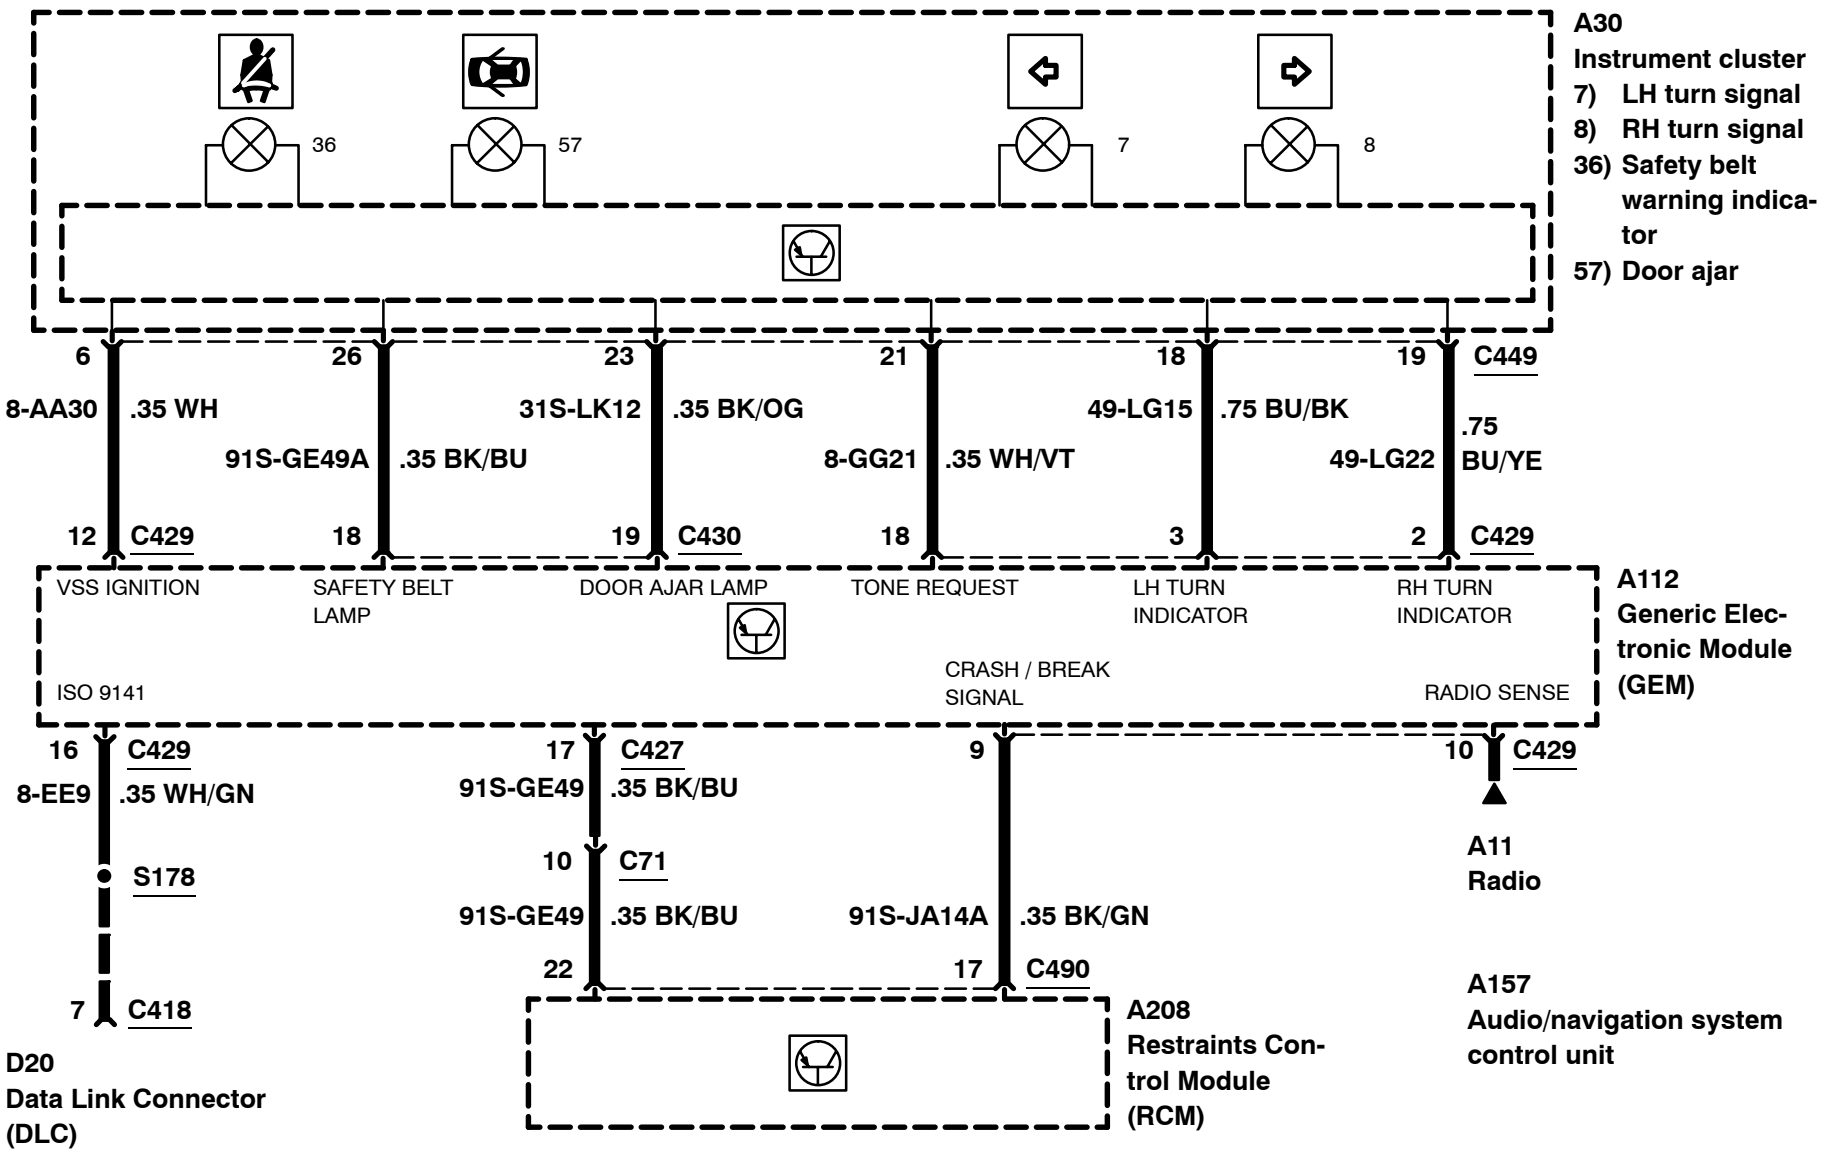


Multifunction Electronic Control Modules

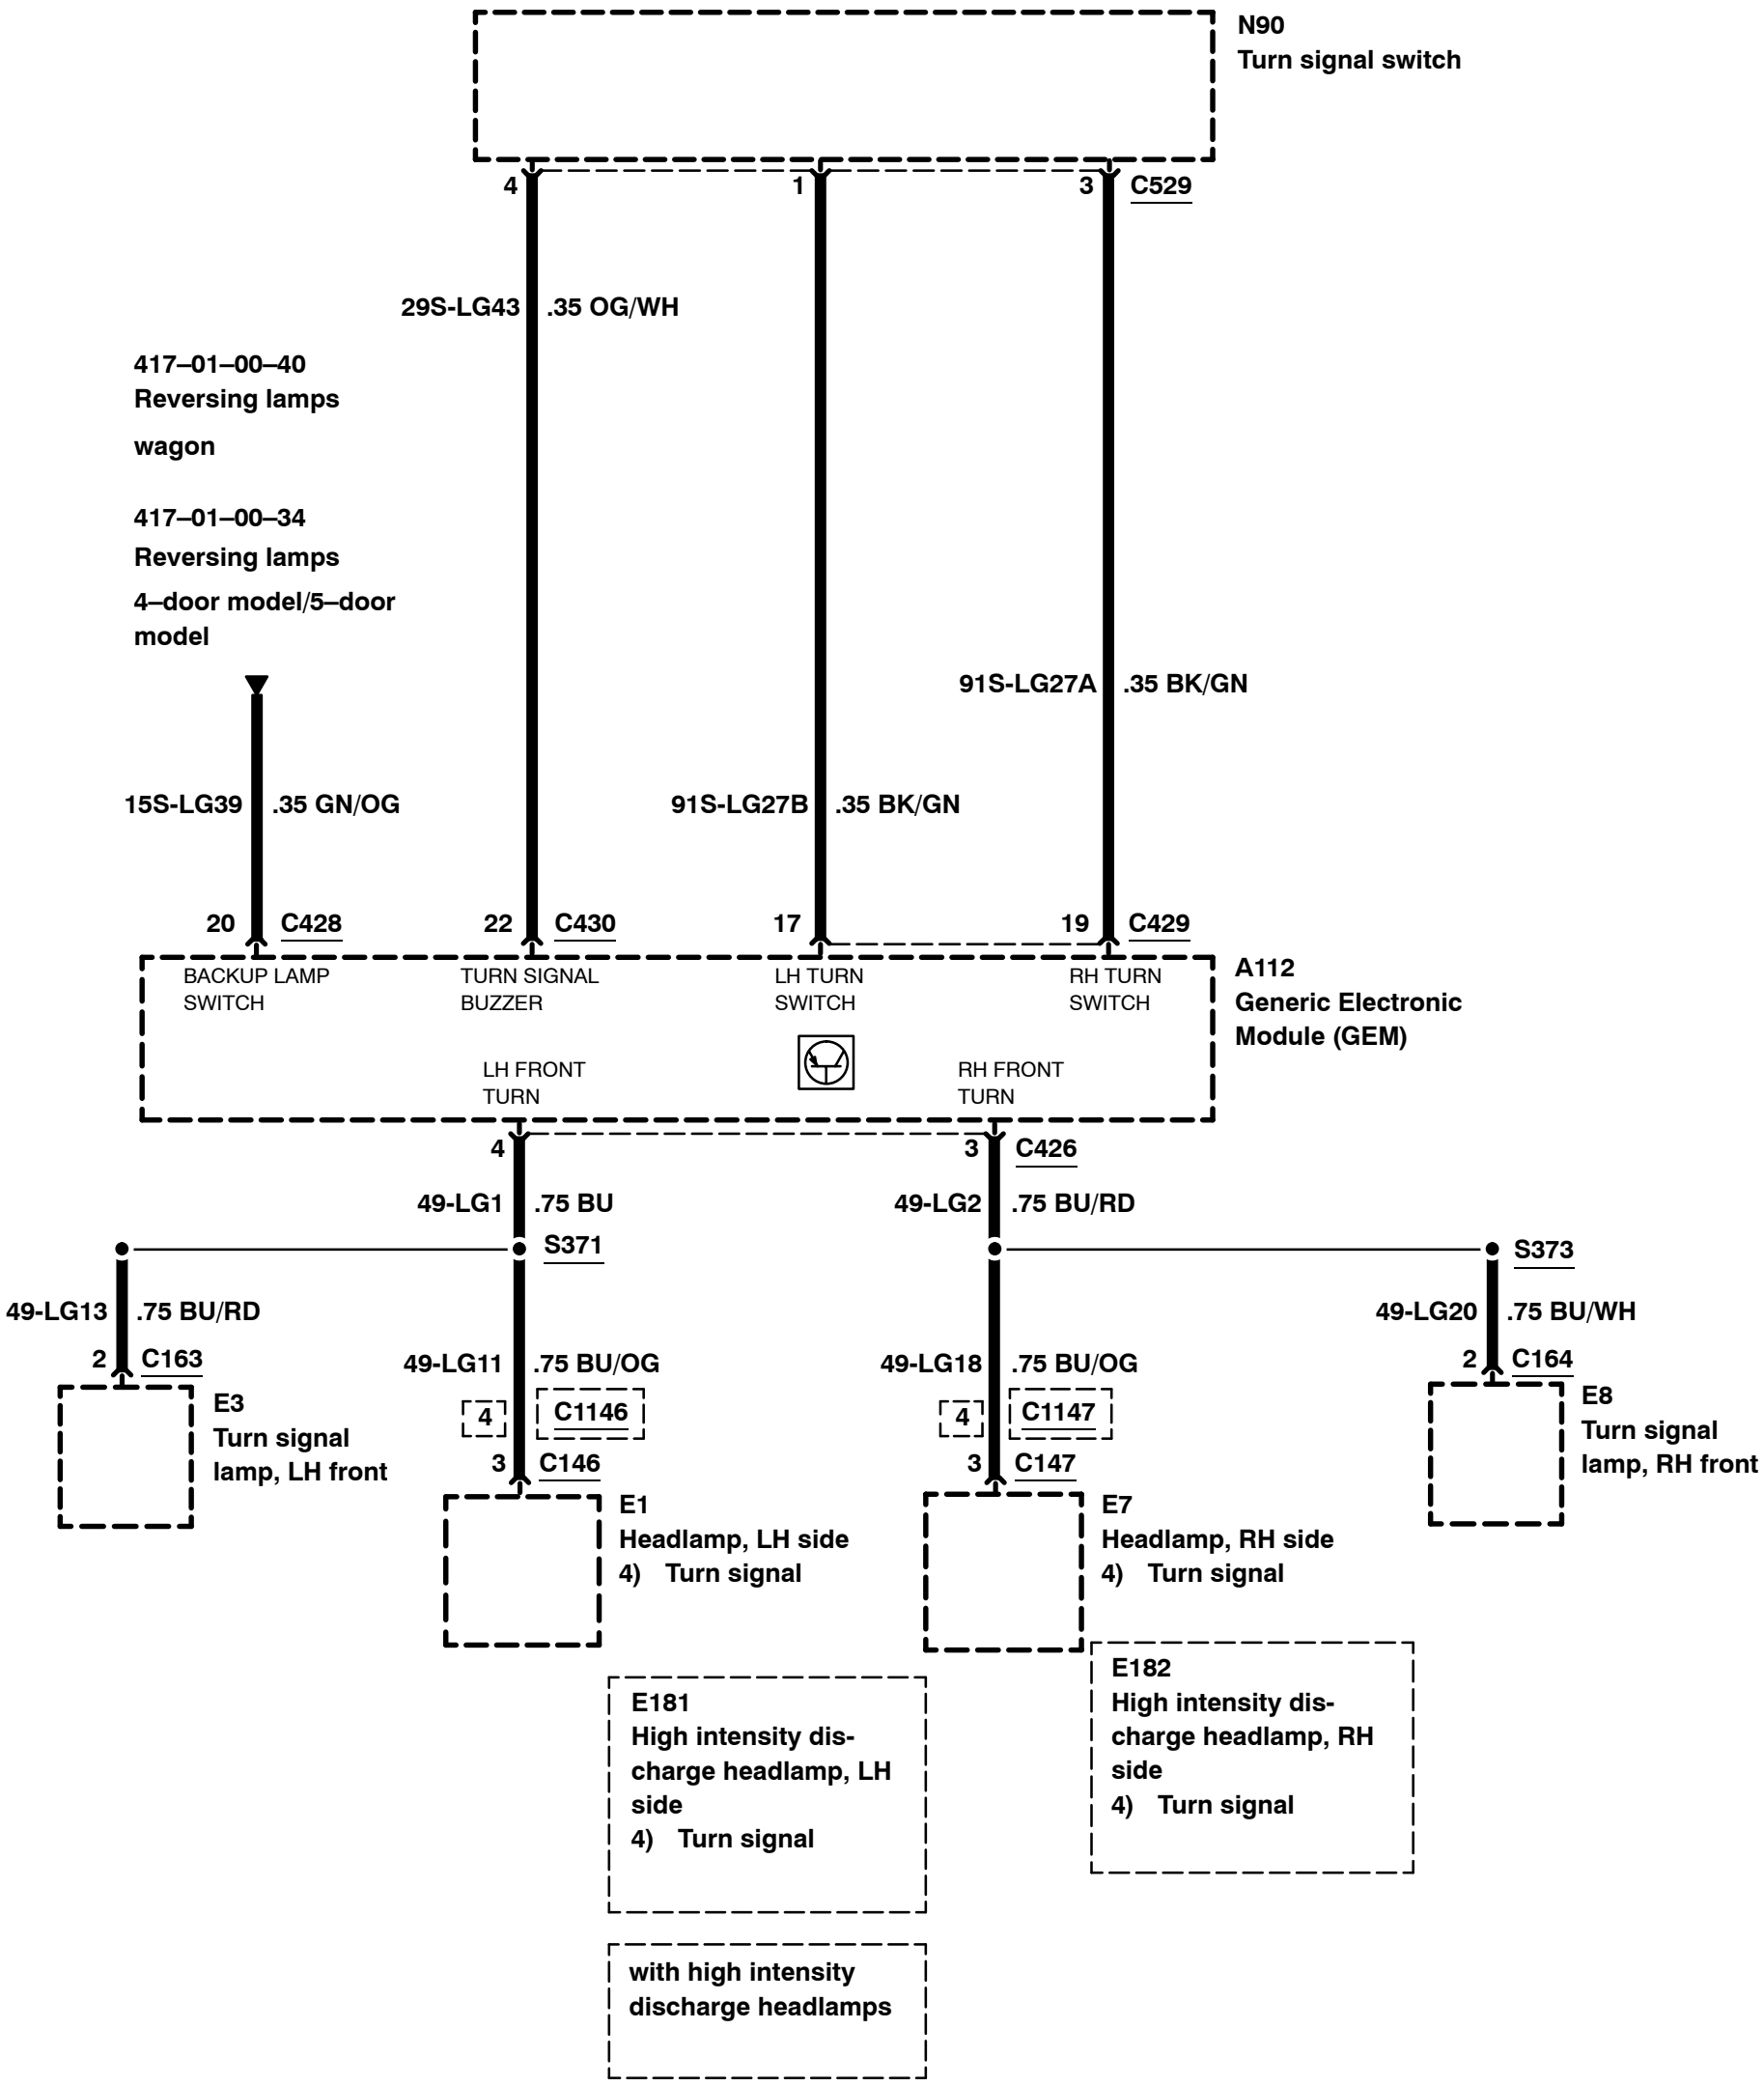


Multifunction Electronic Control Modules

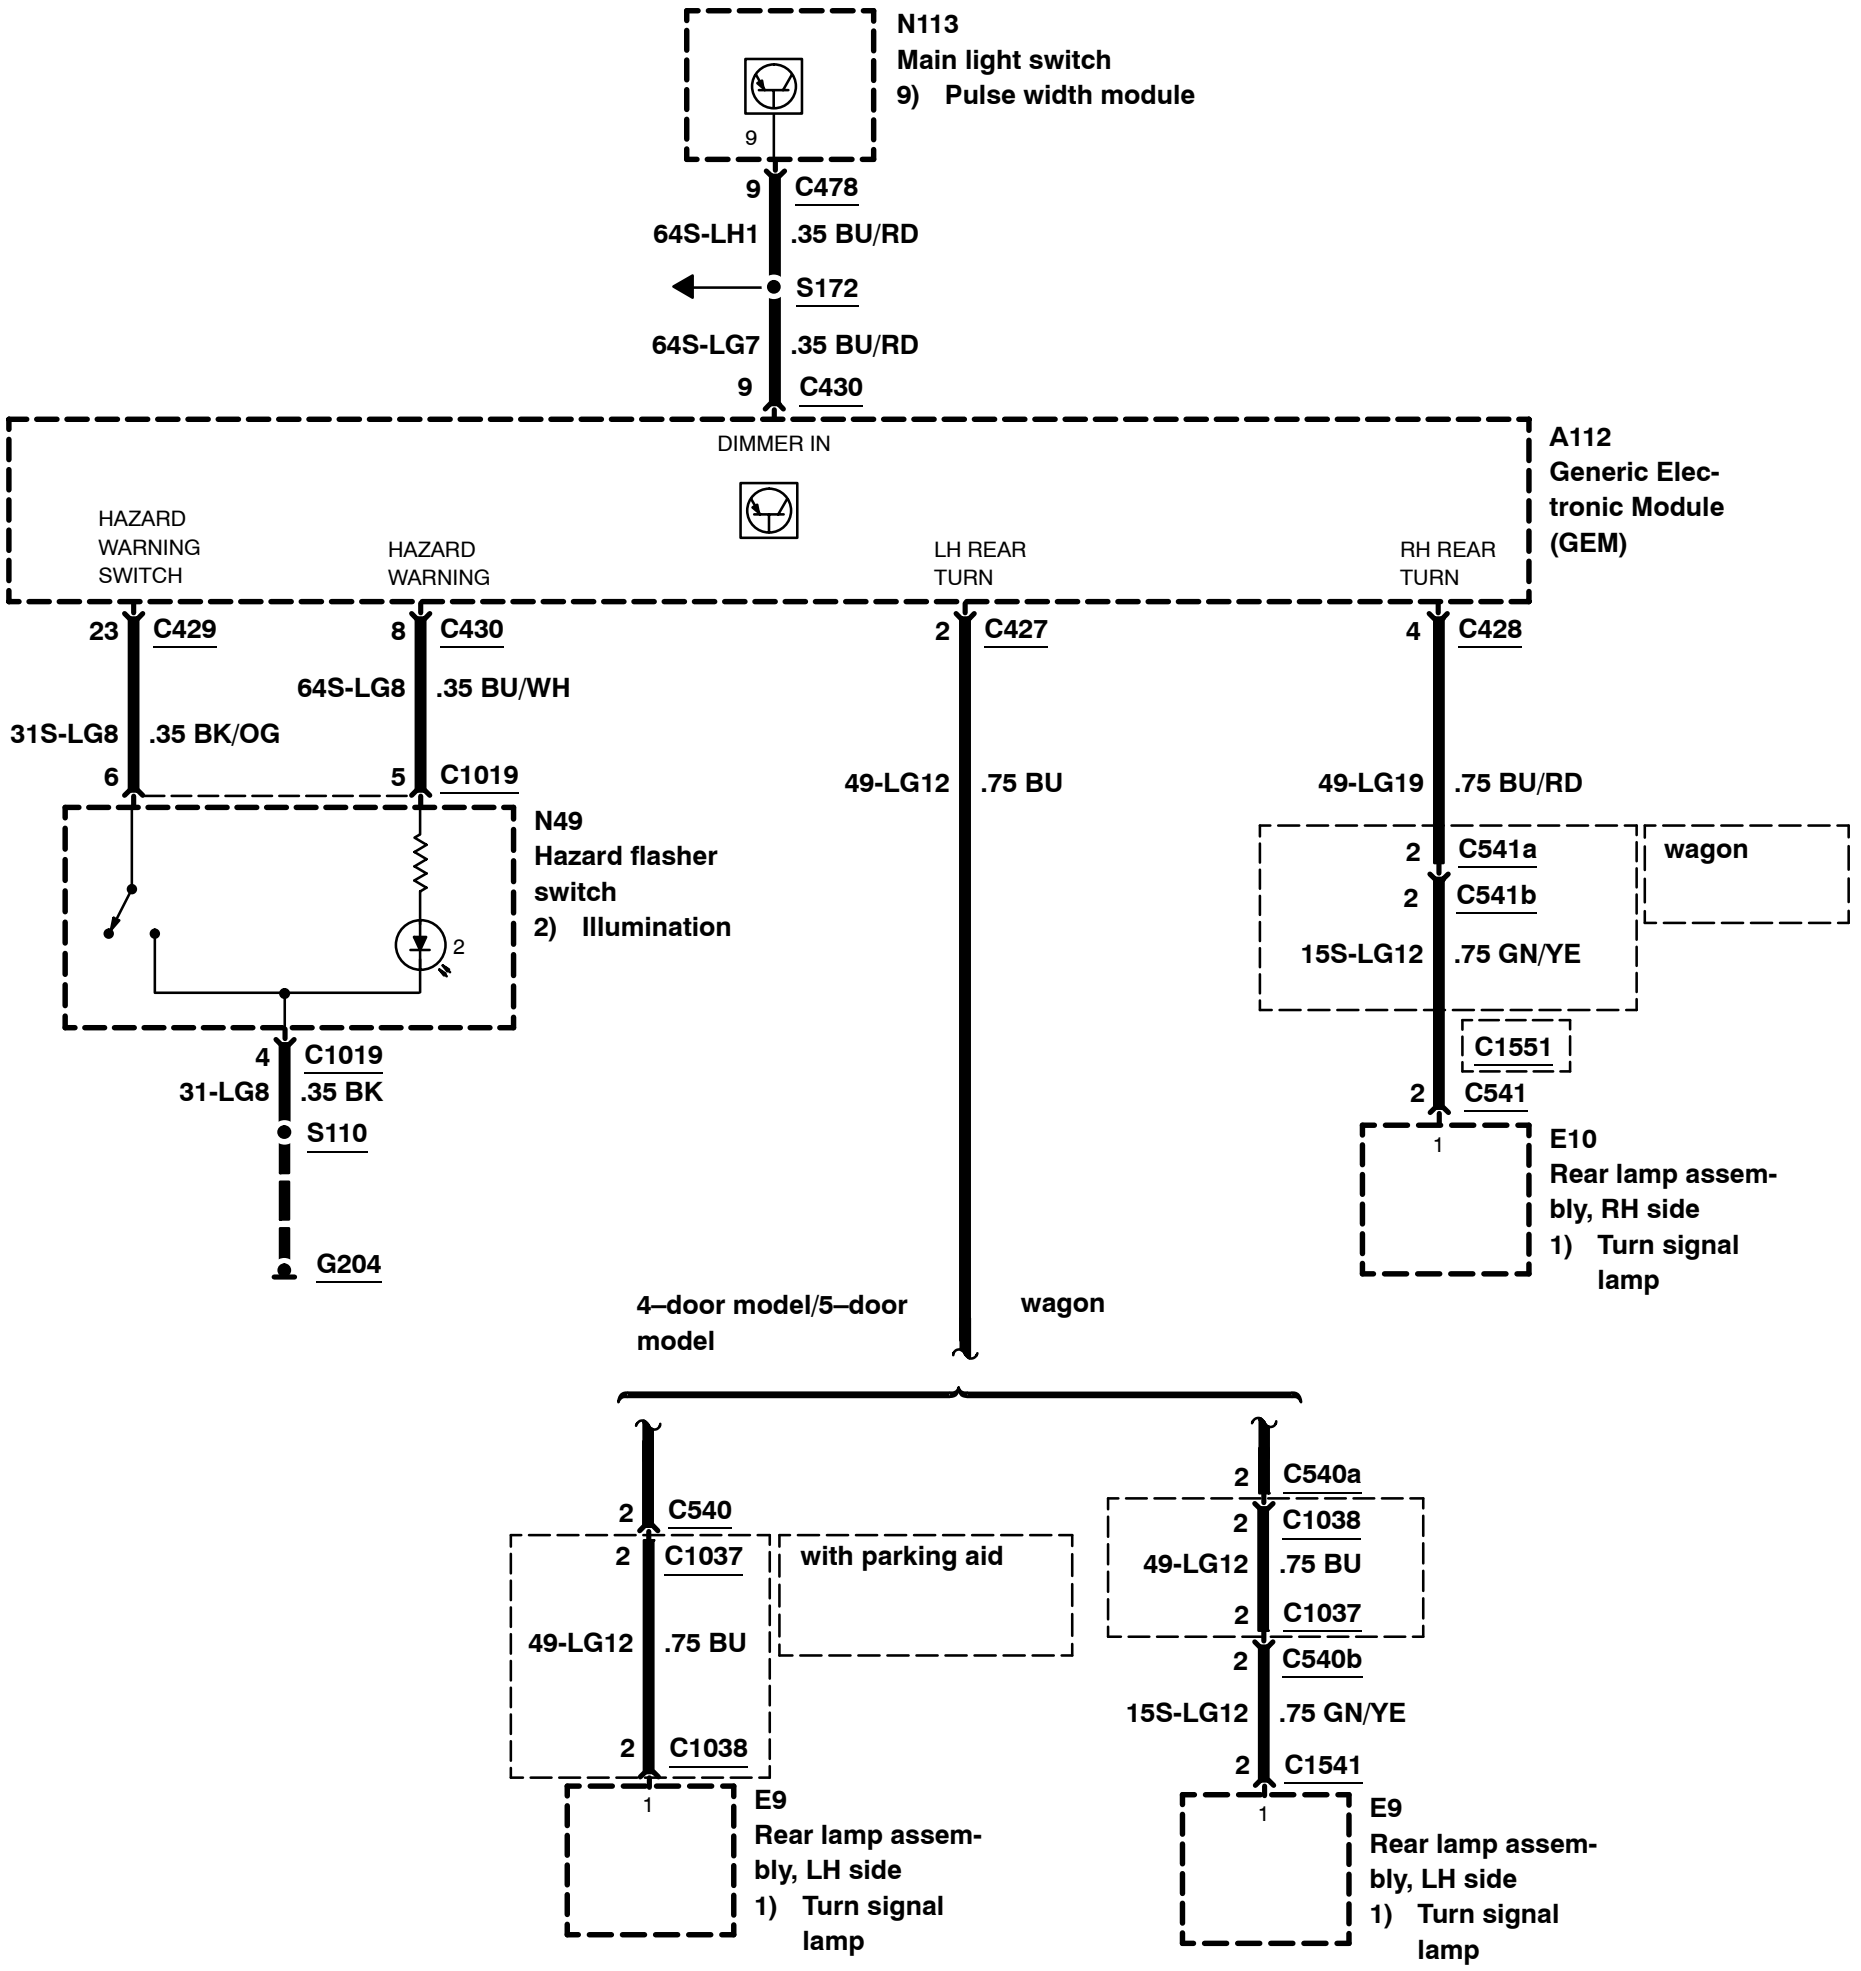


Multifunction Electronic Control Modules

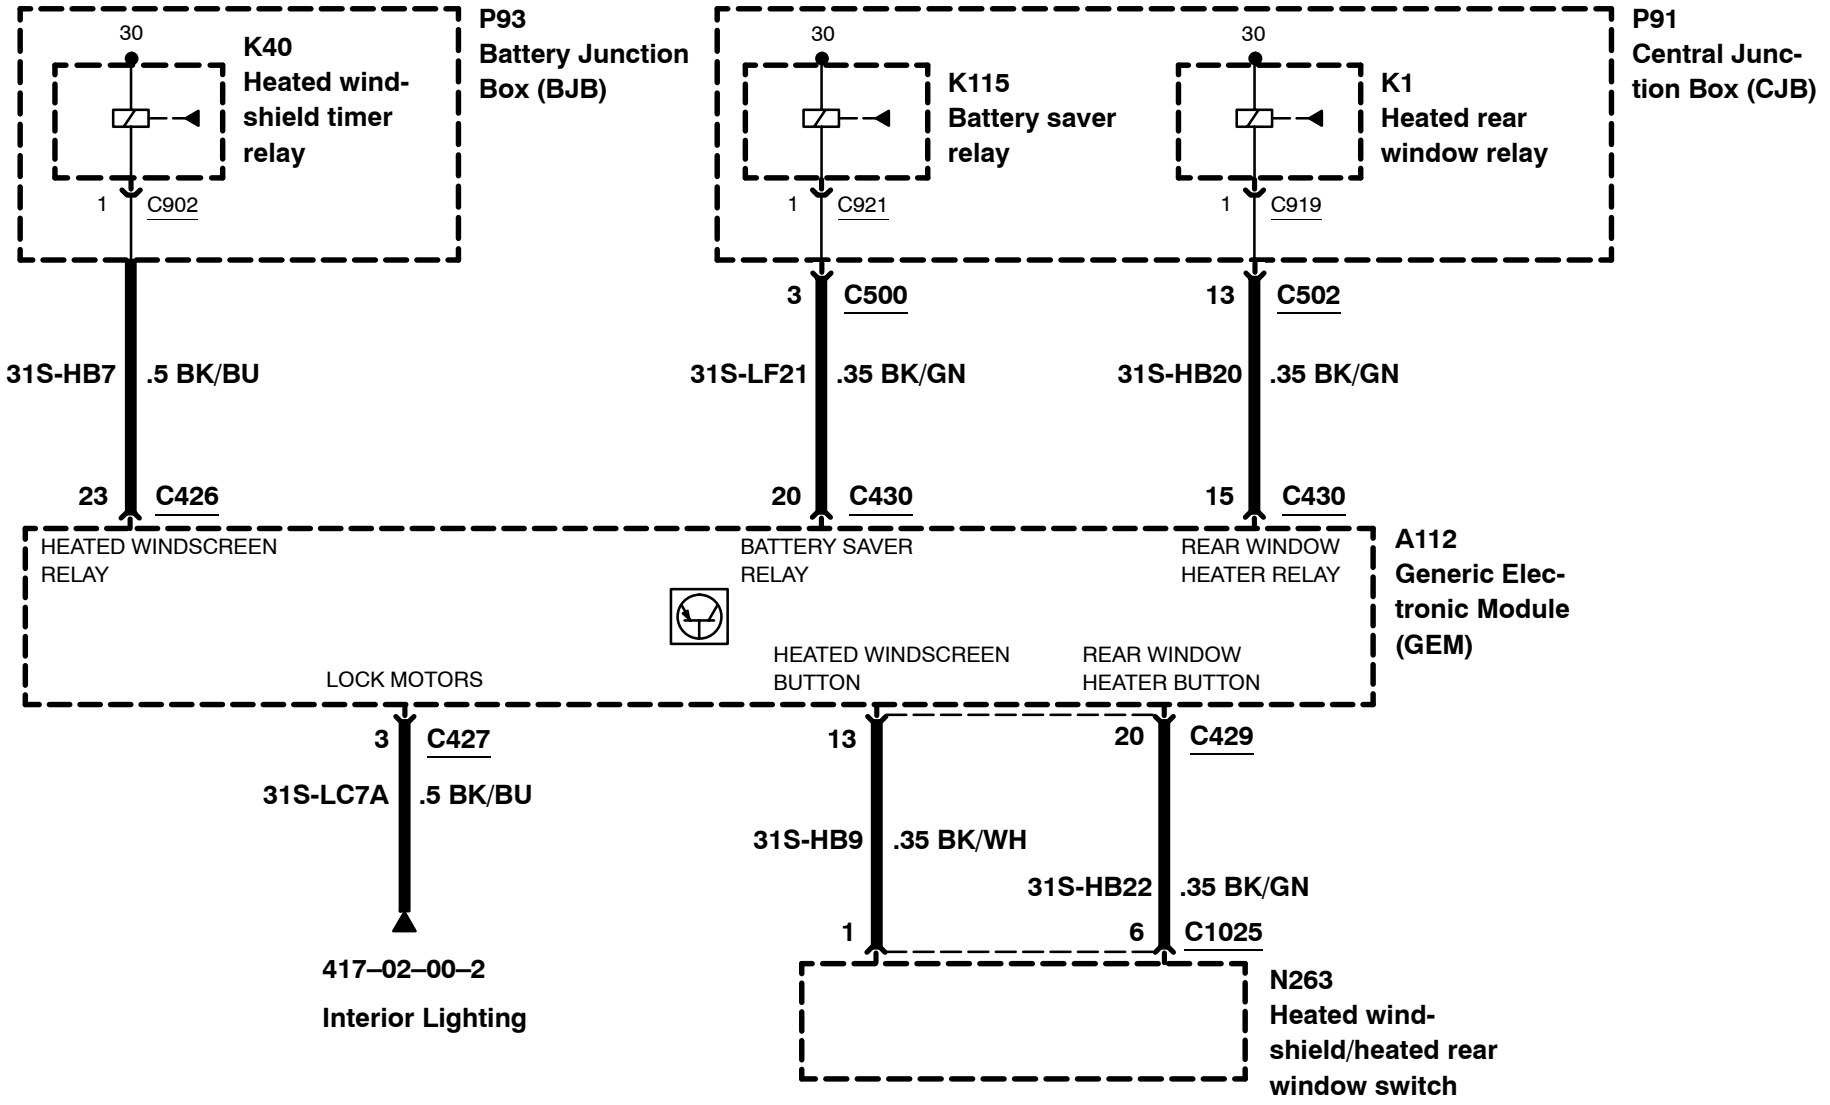


Multifunction Electronic Control Modules

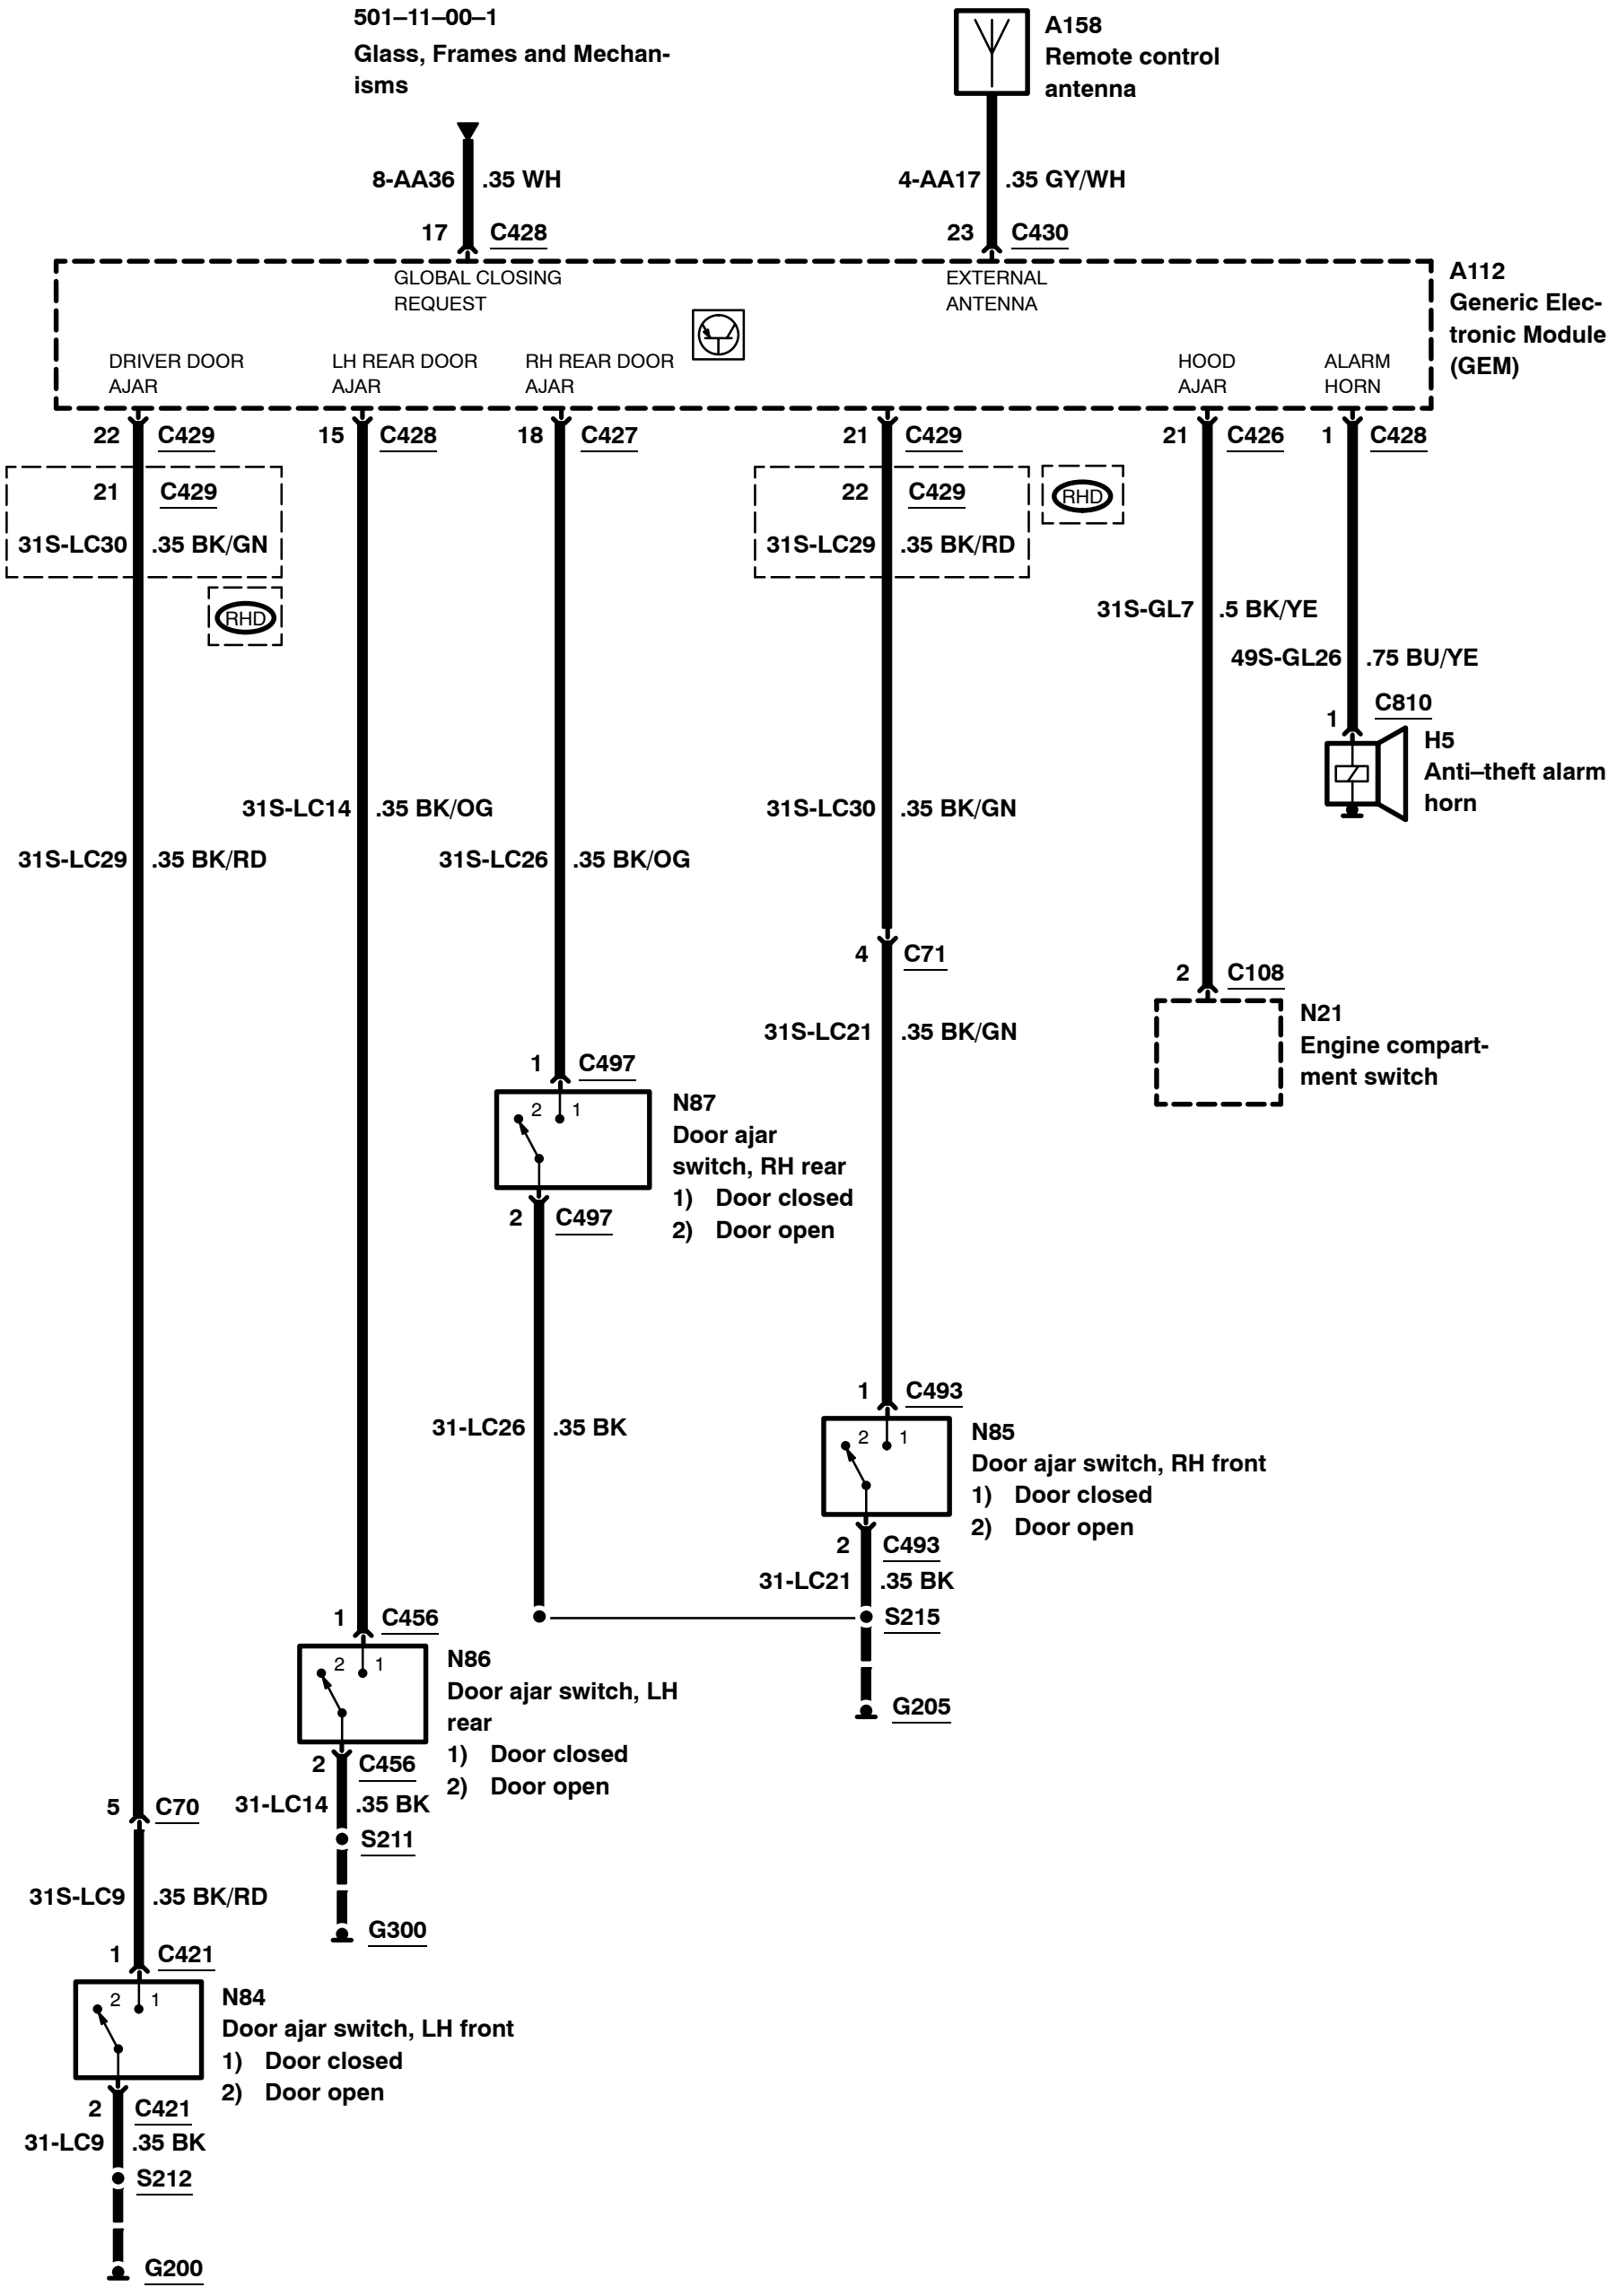


Multifunction Electronic Control Modules

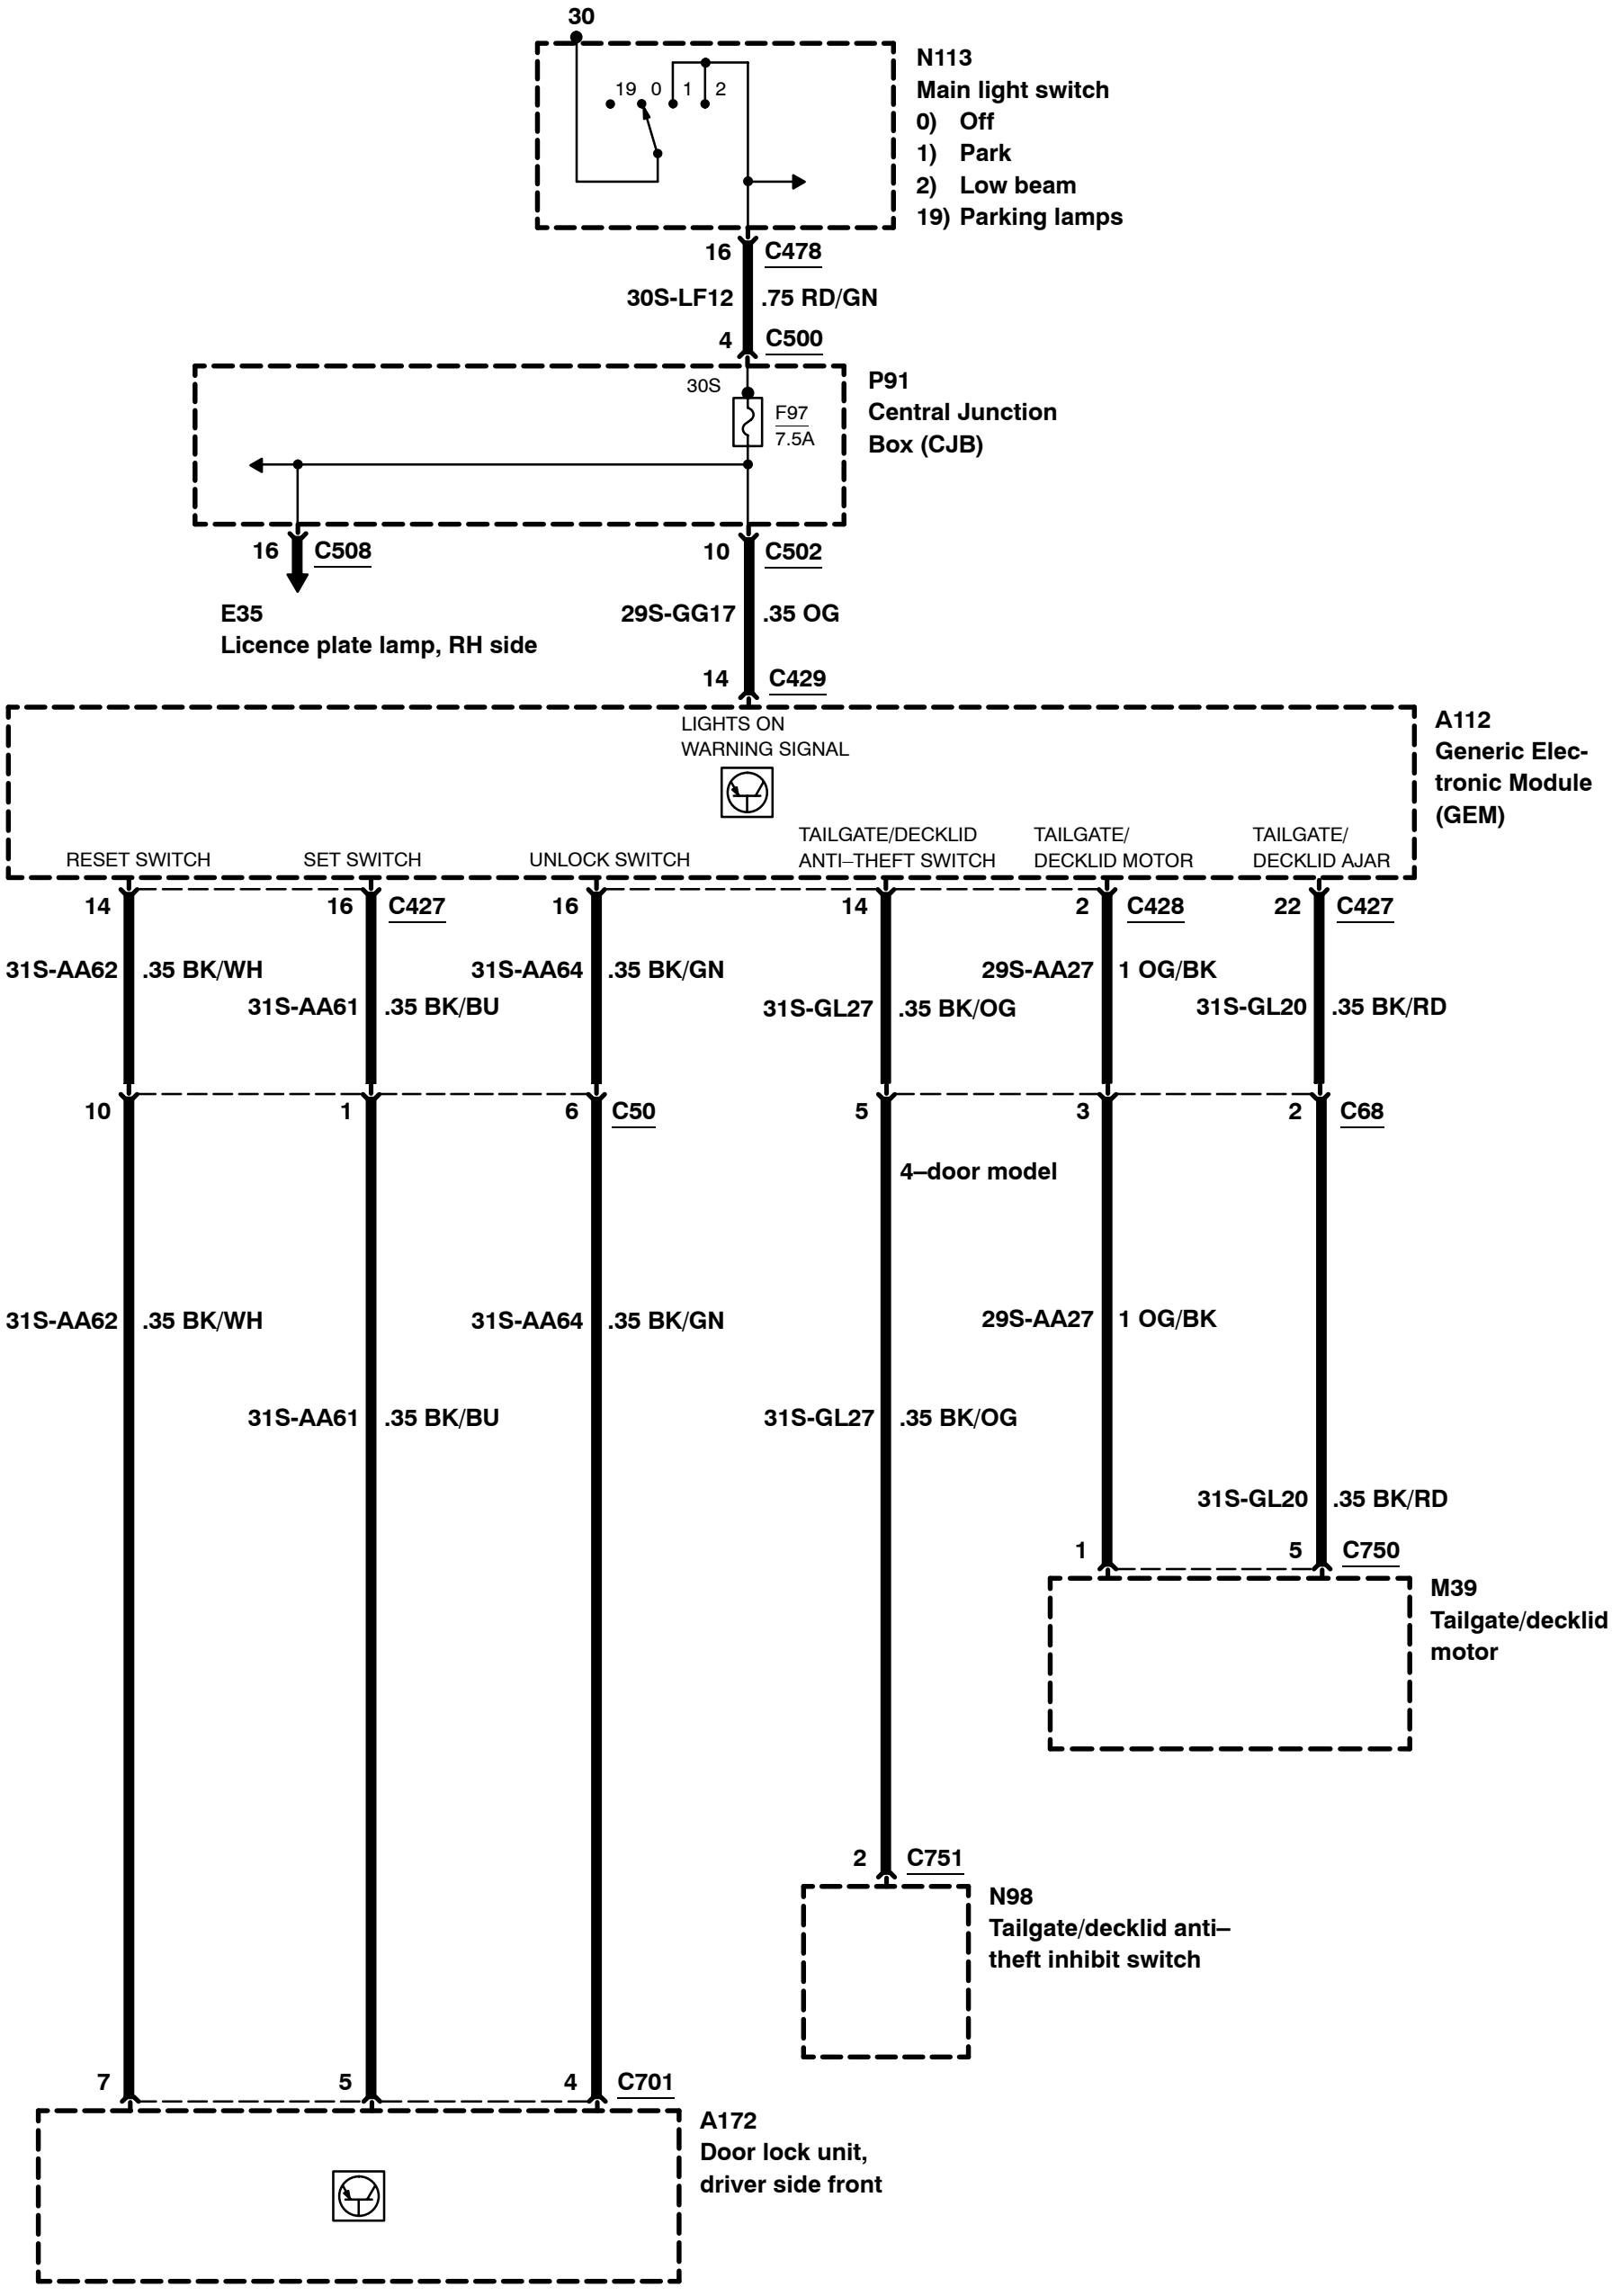


Multifunction Electronic Control Modules

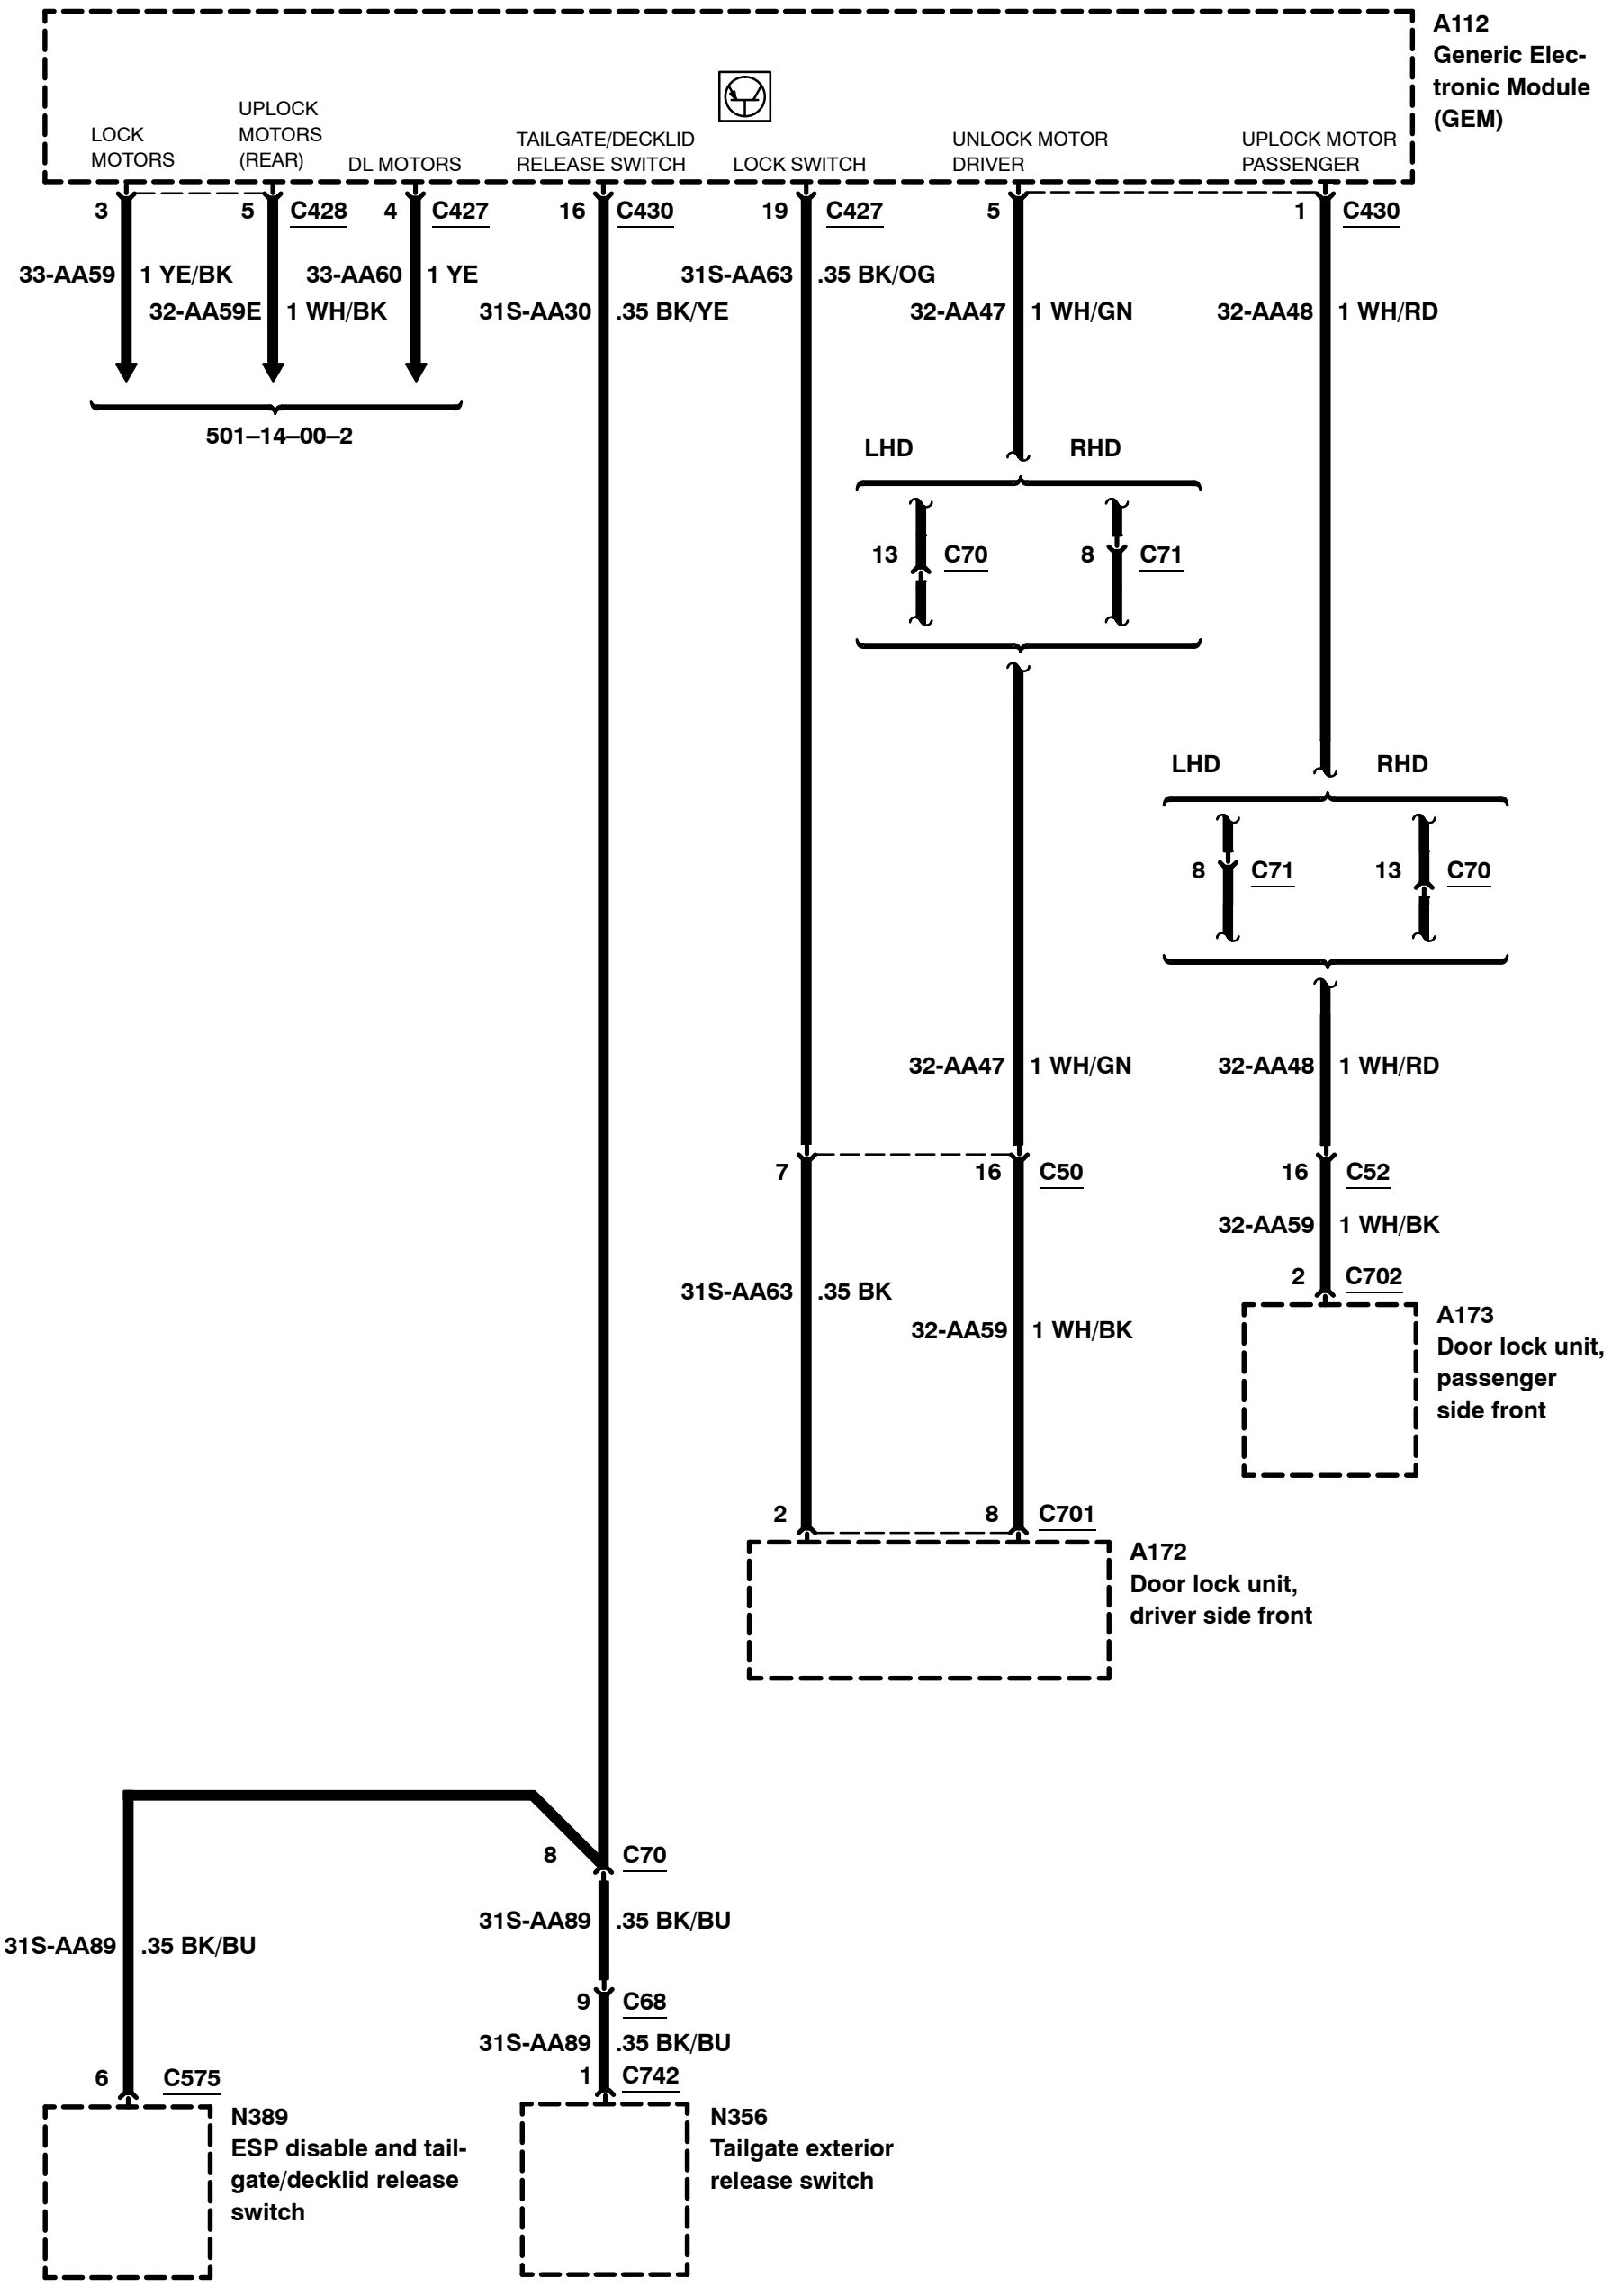


Multifunction Electronic Control Modules

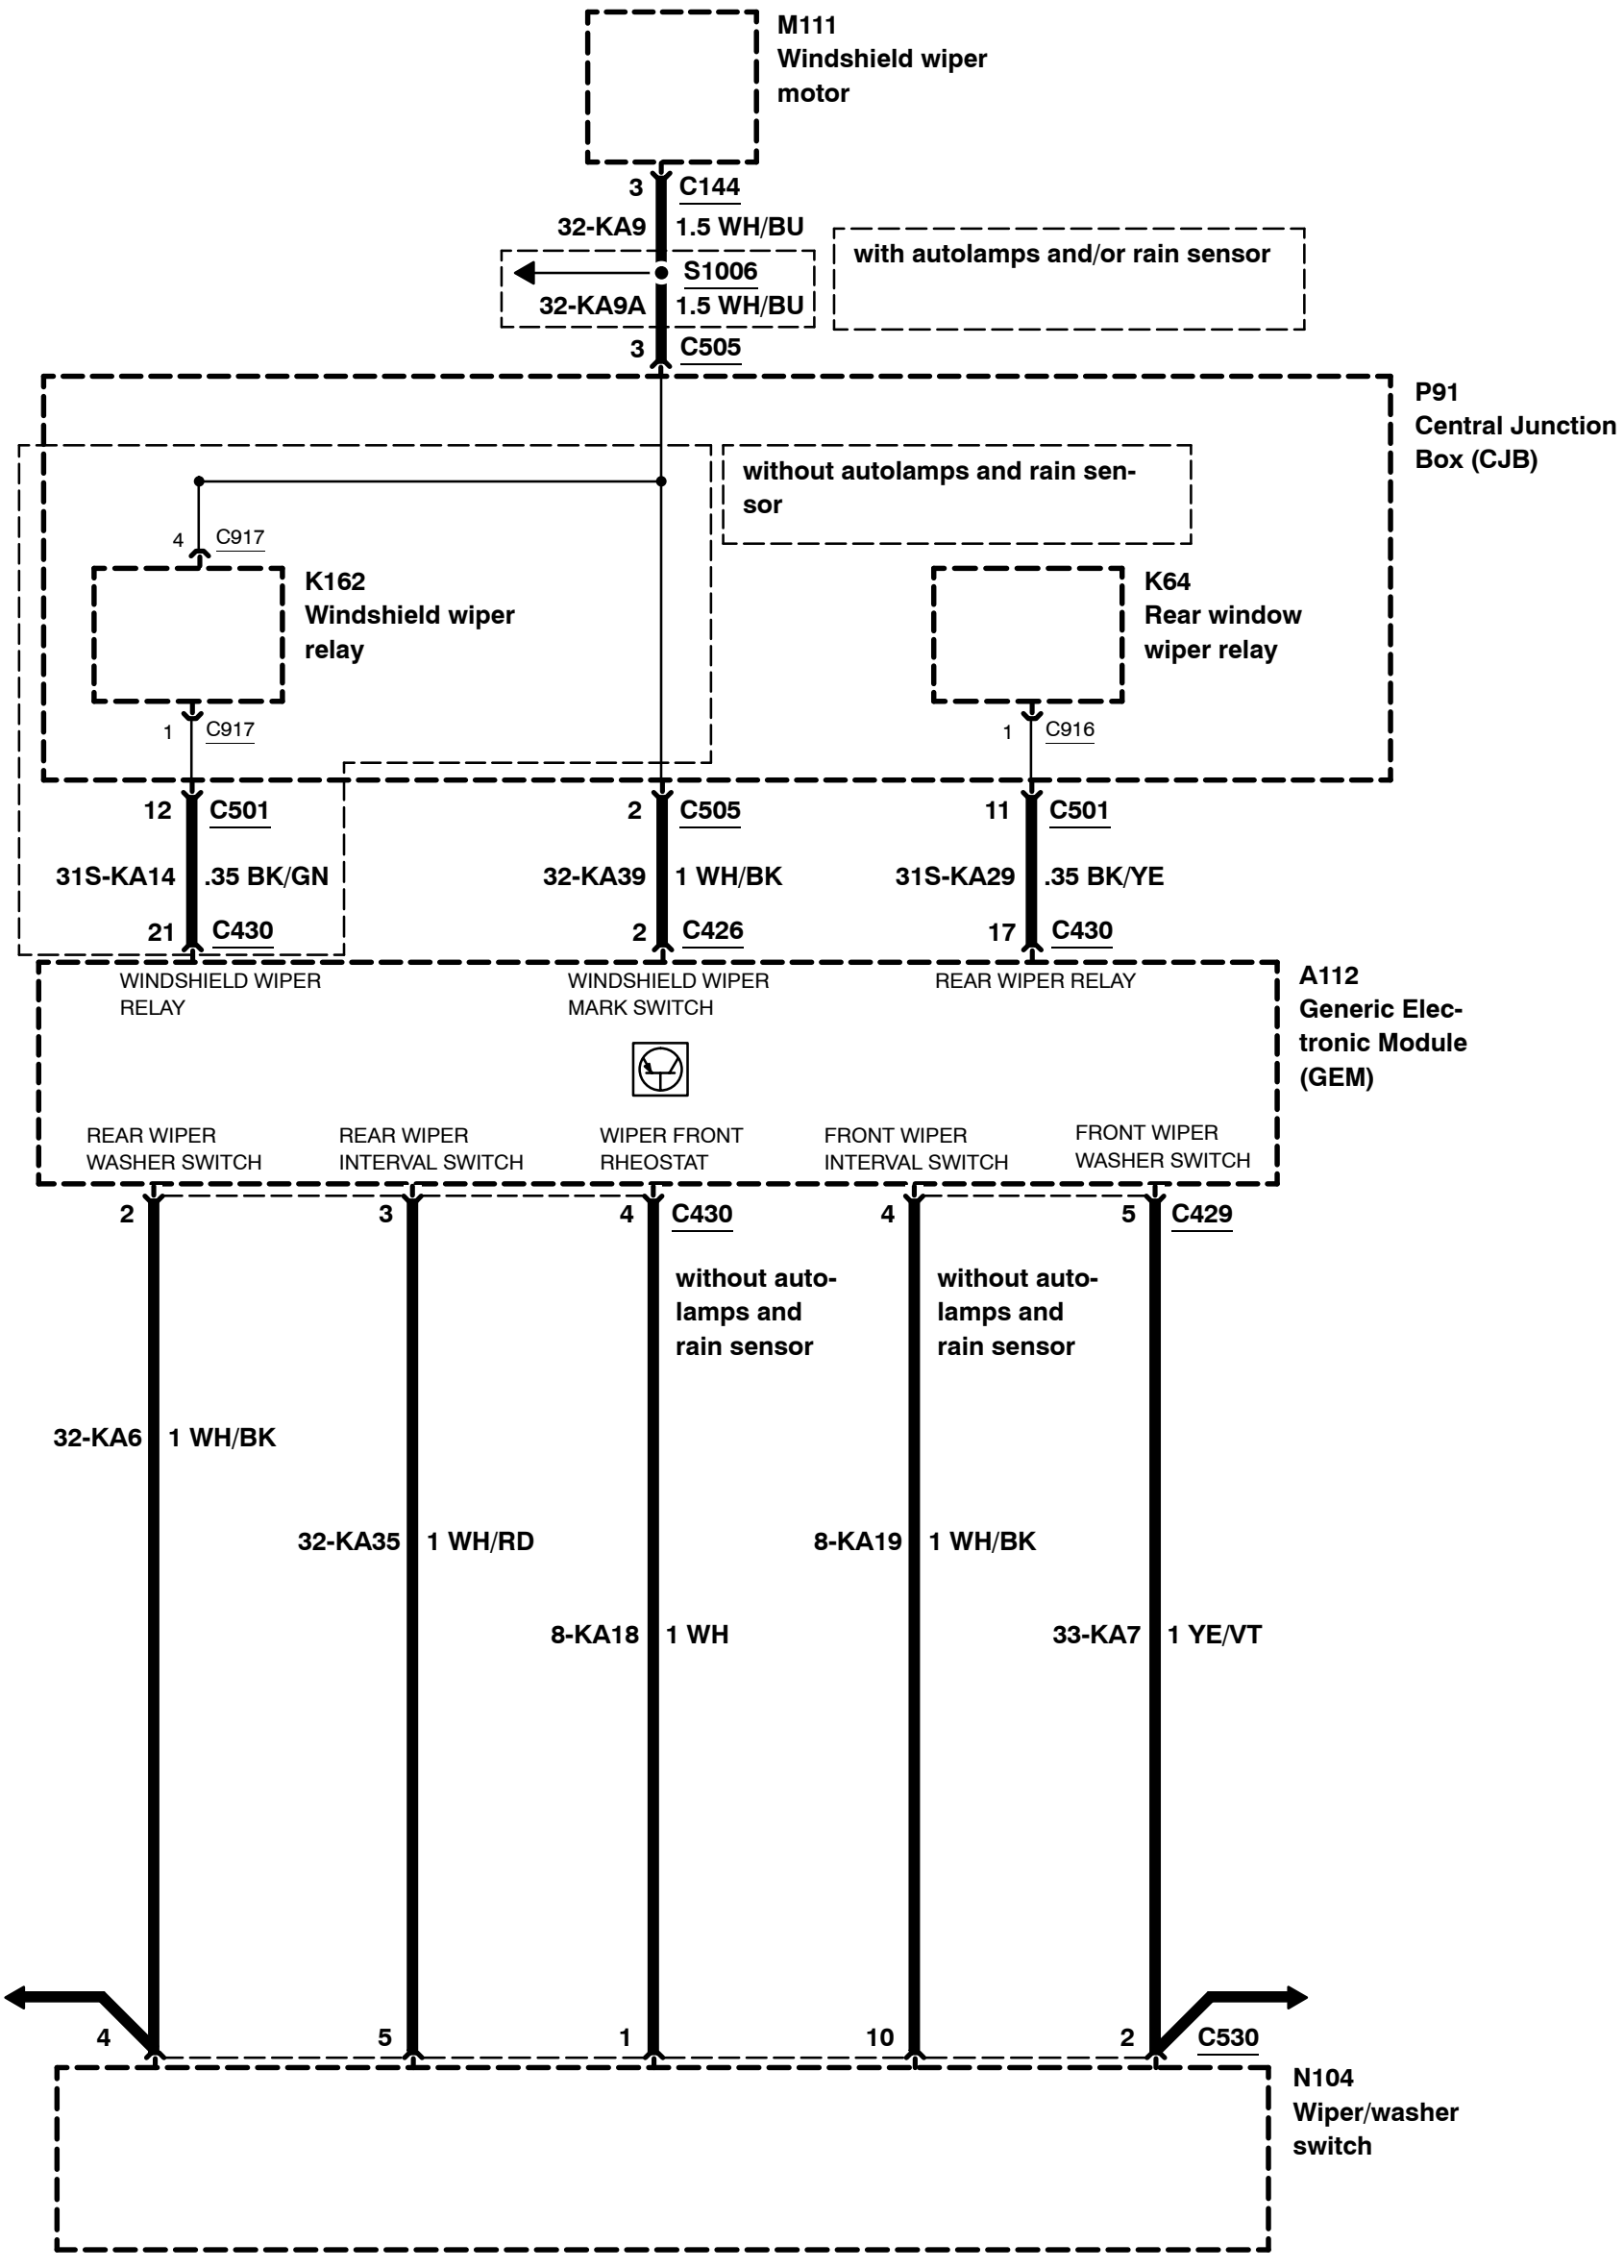


Rear View Mirrors

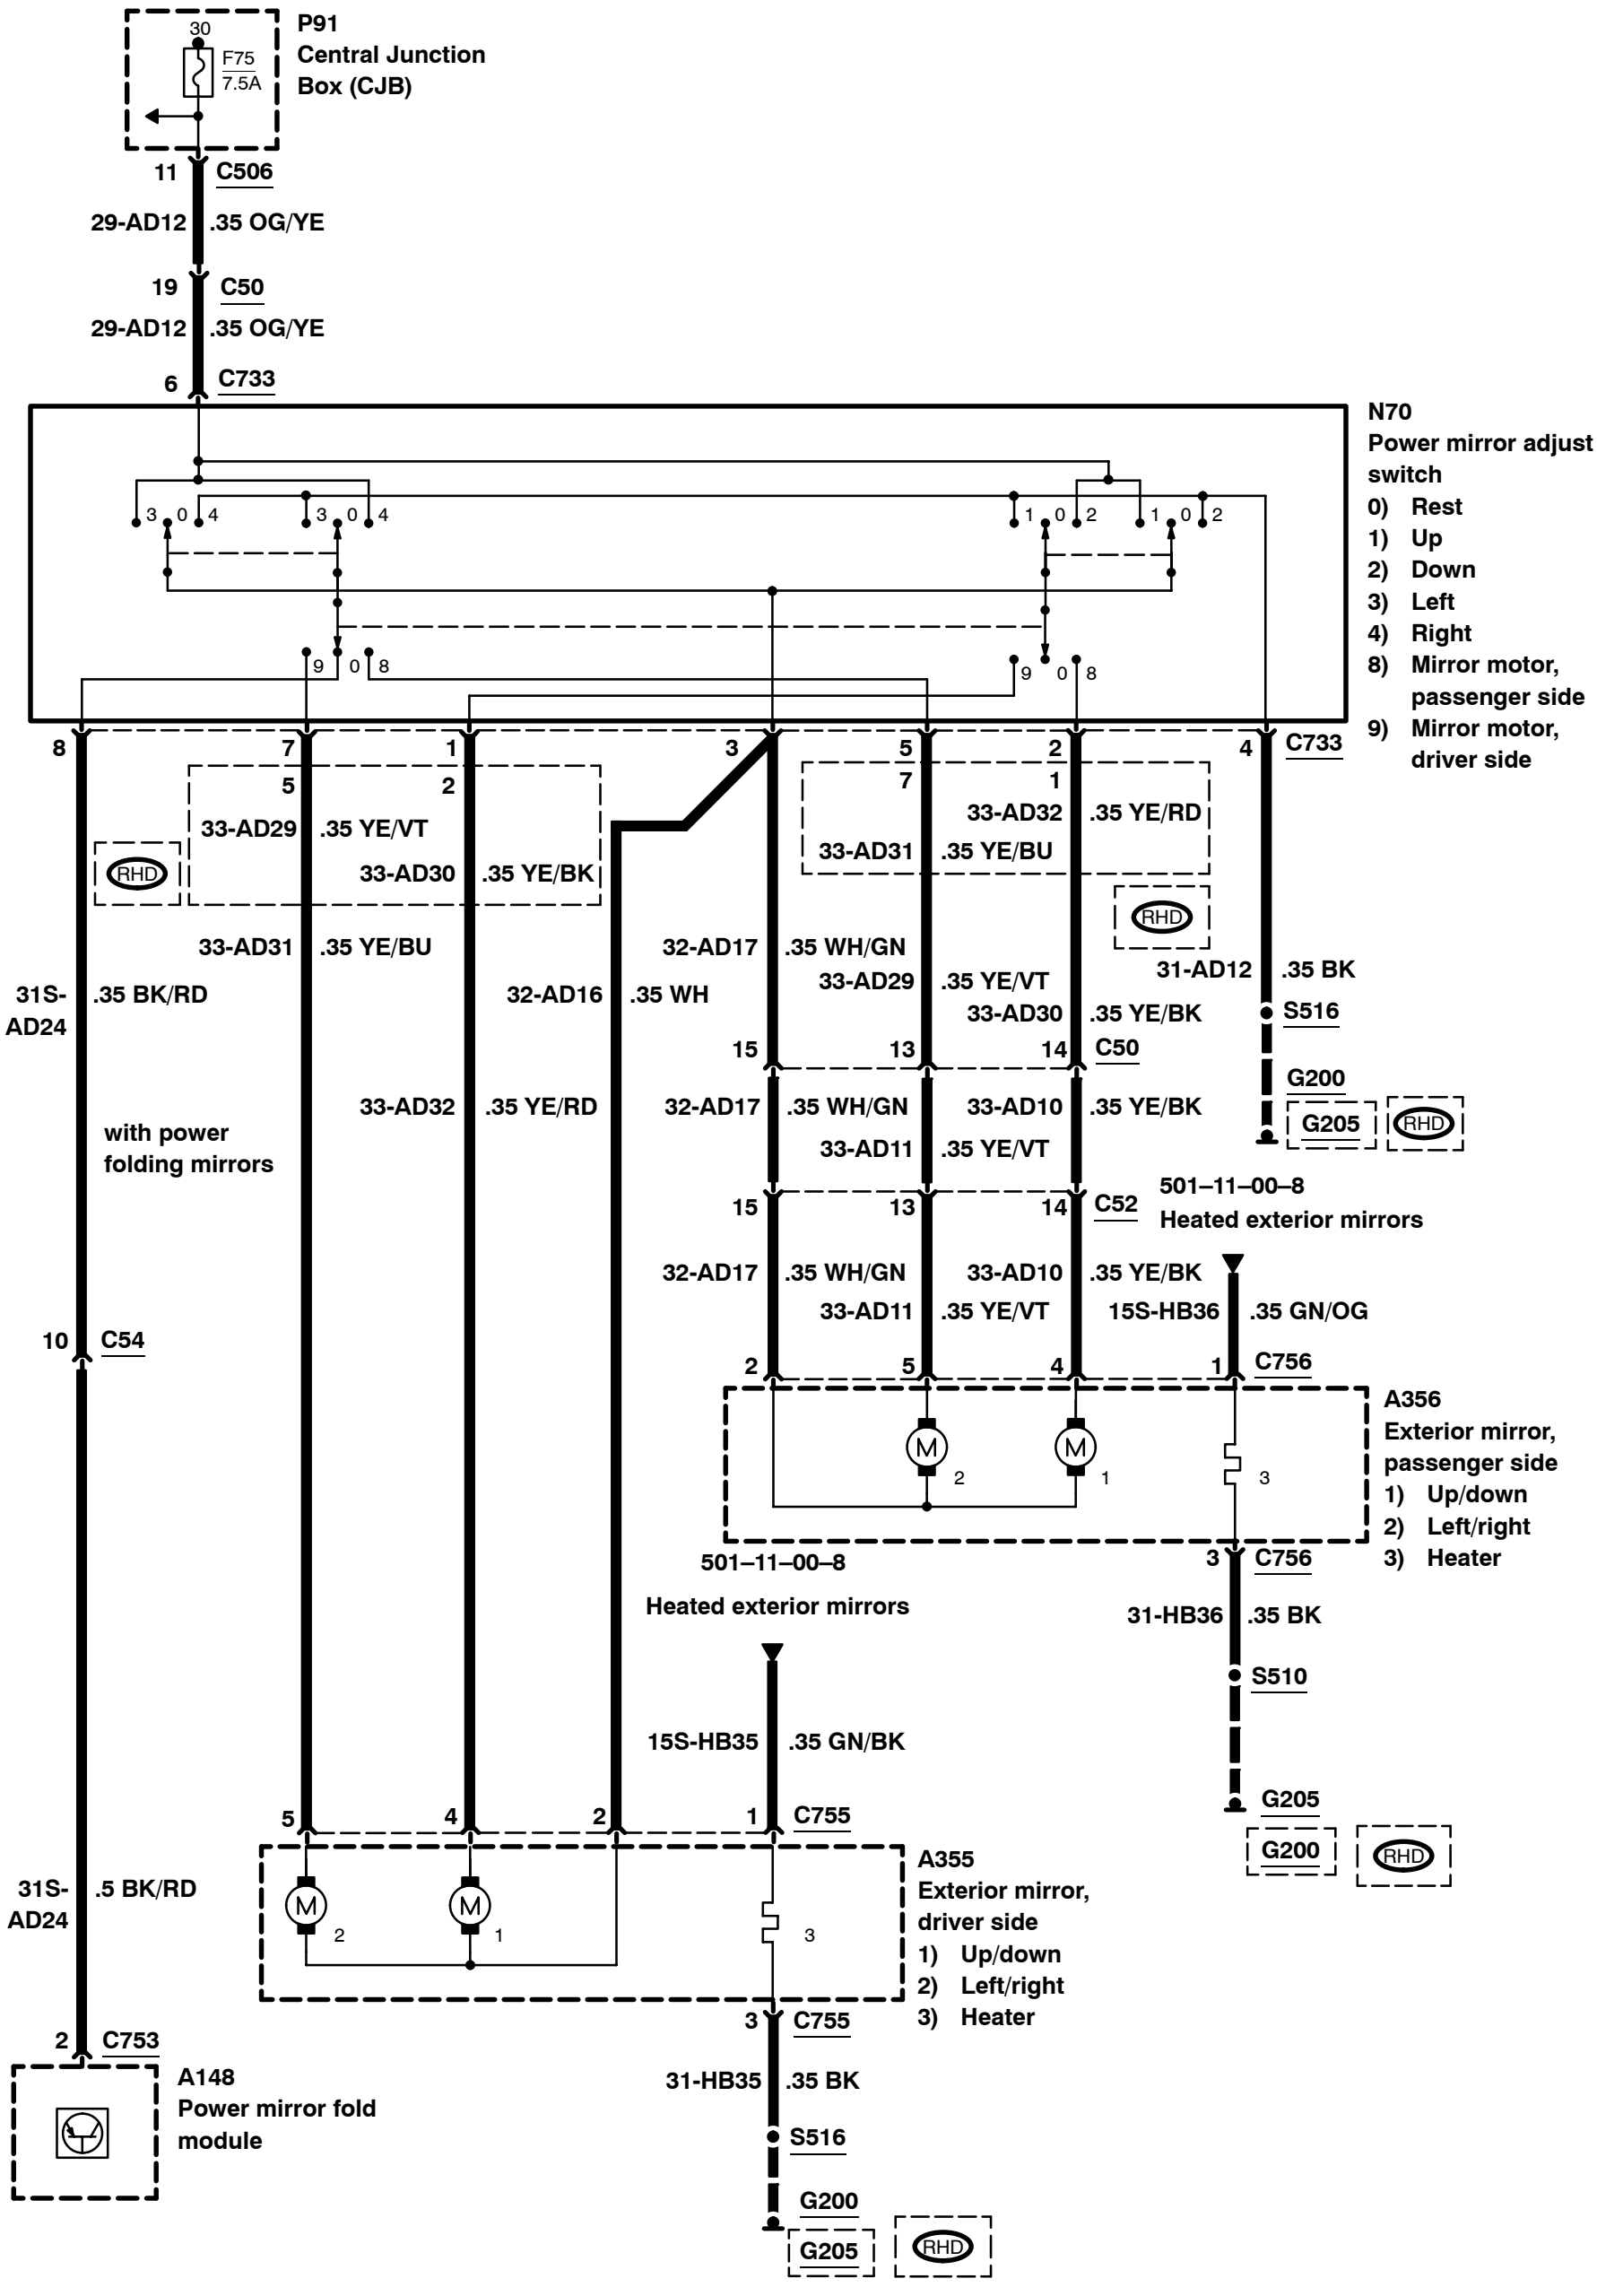


Rear View Mirrors – With power folding mirrors

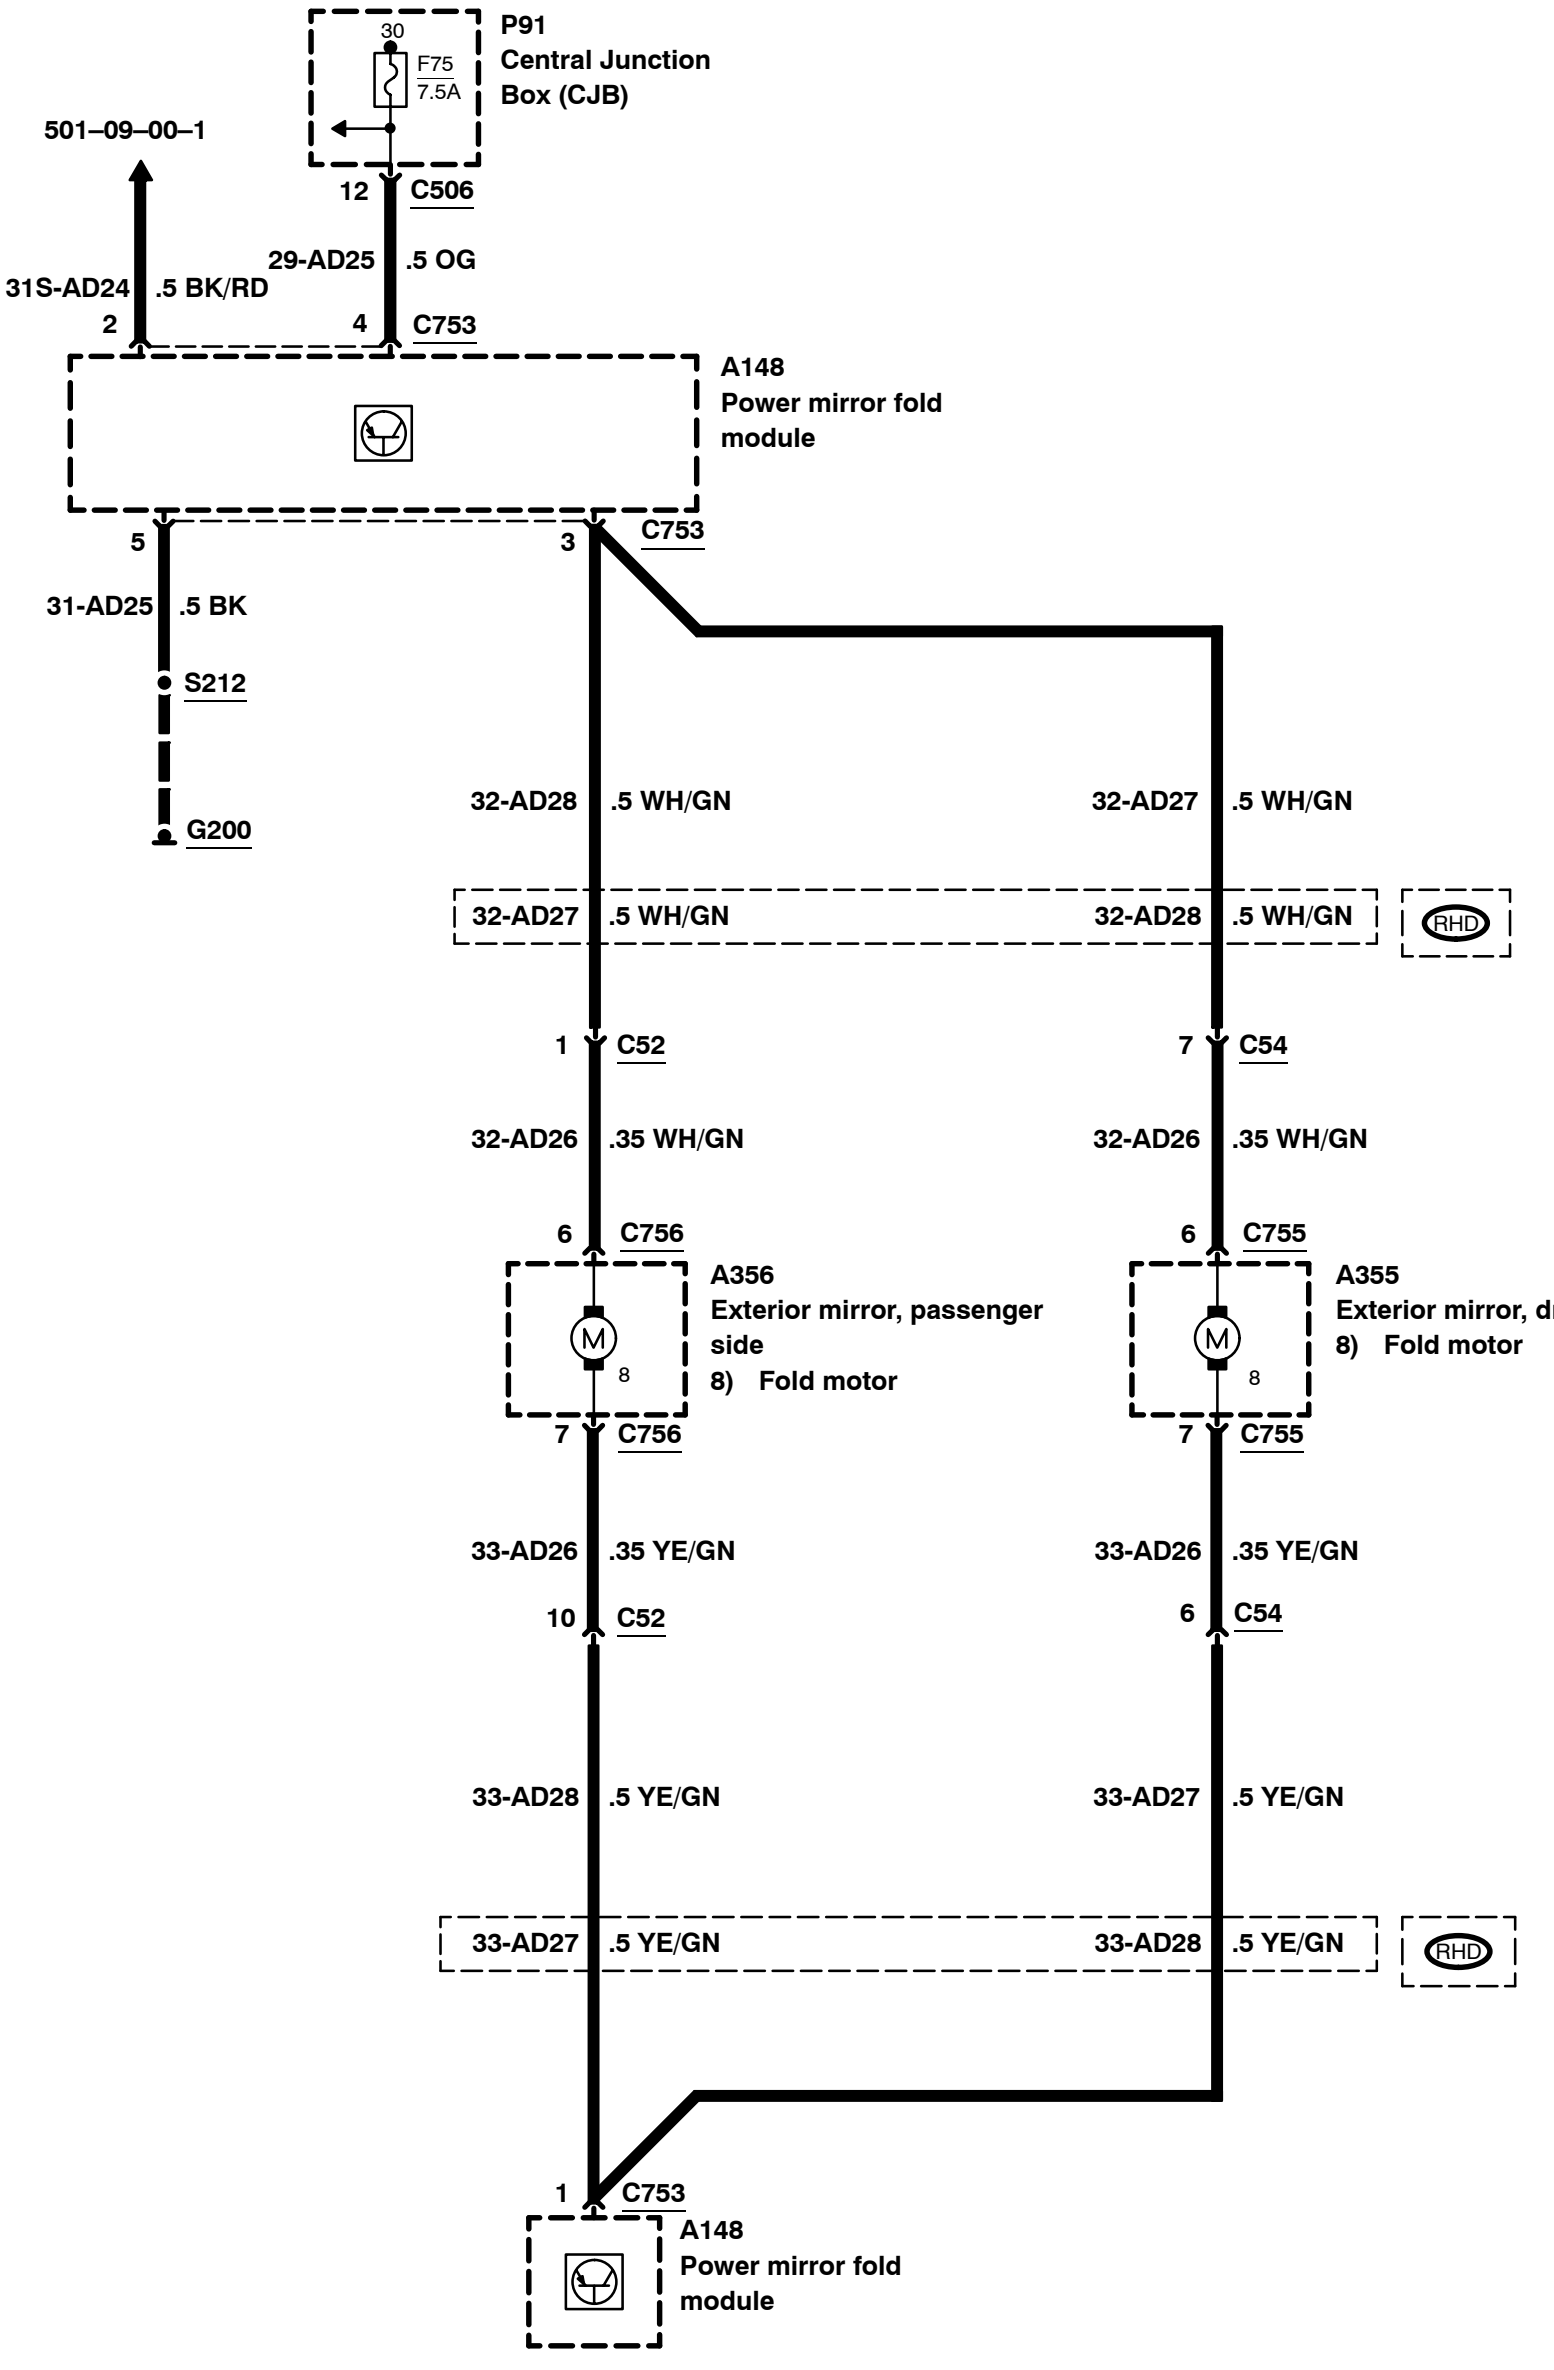


Rear View Mirrors – Auto–dimming interior mirror

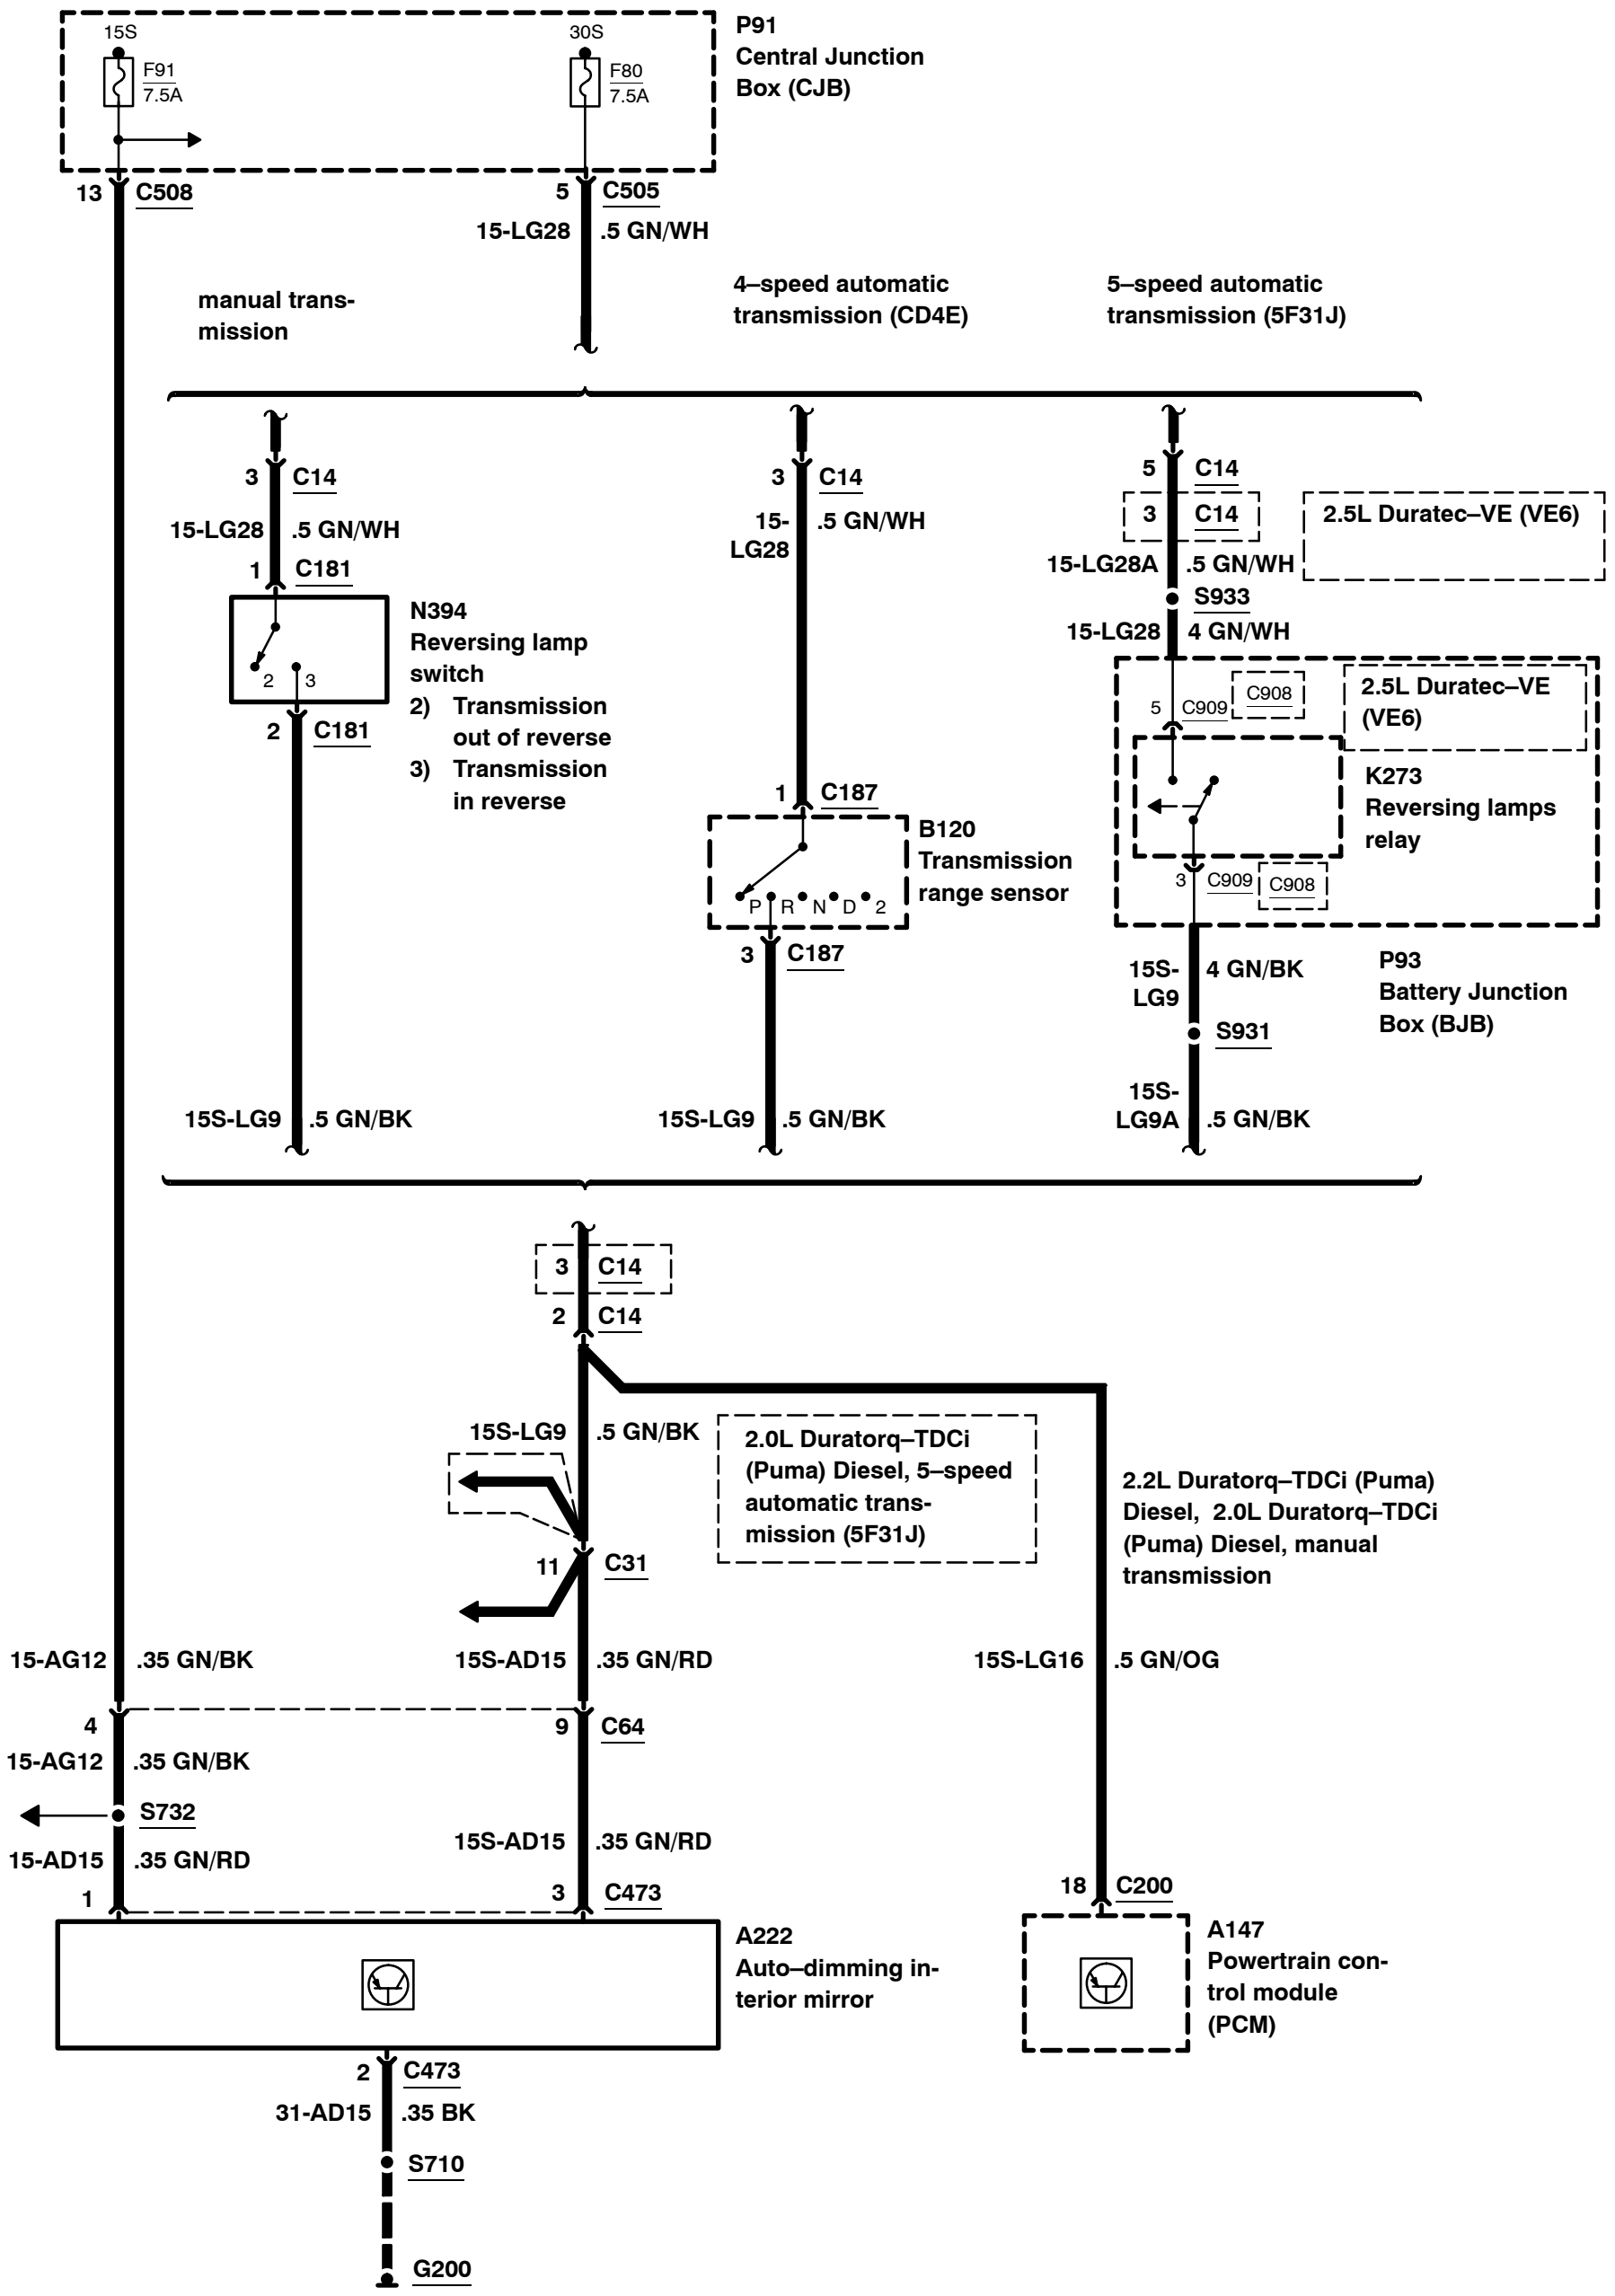


Seating – 2–way power seats

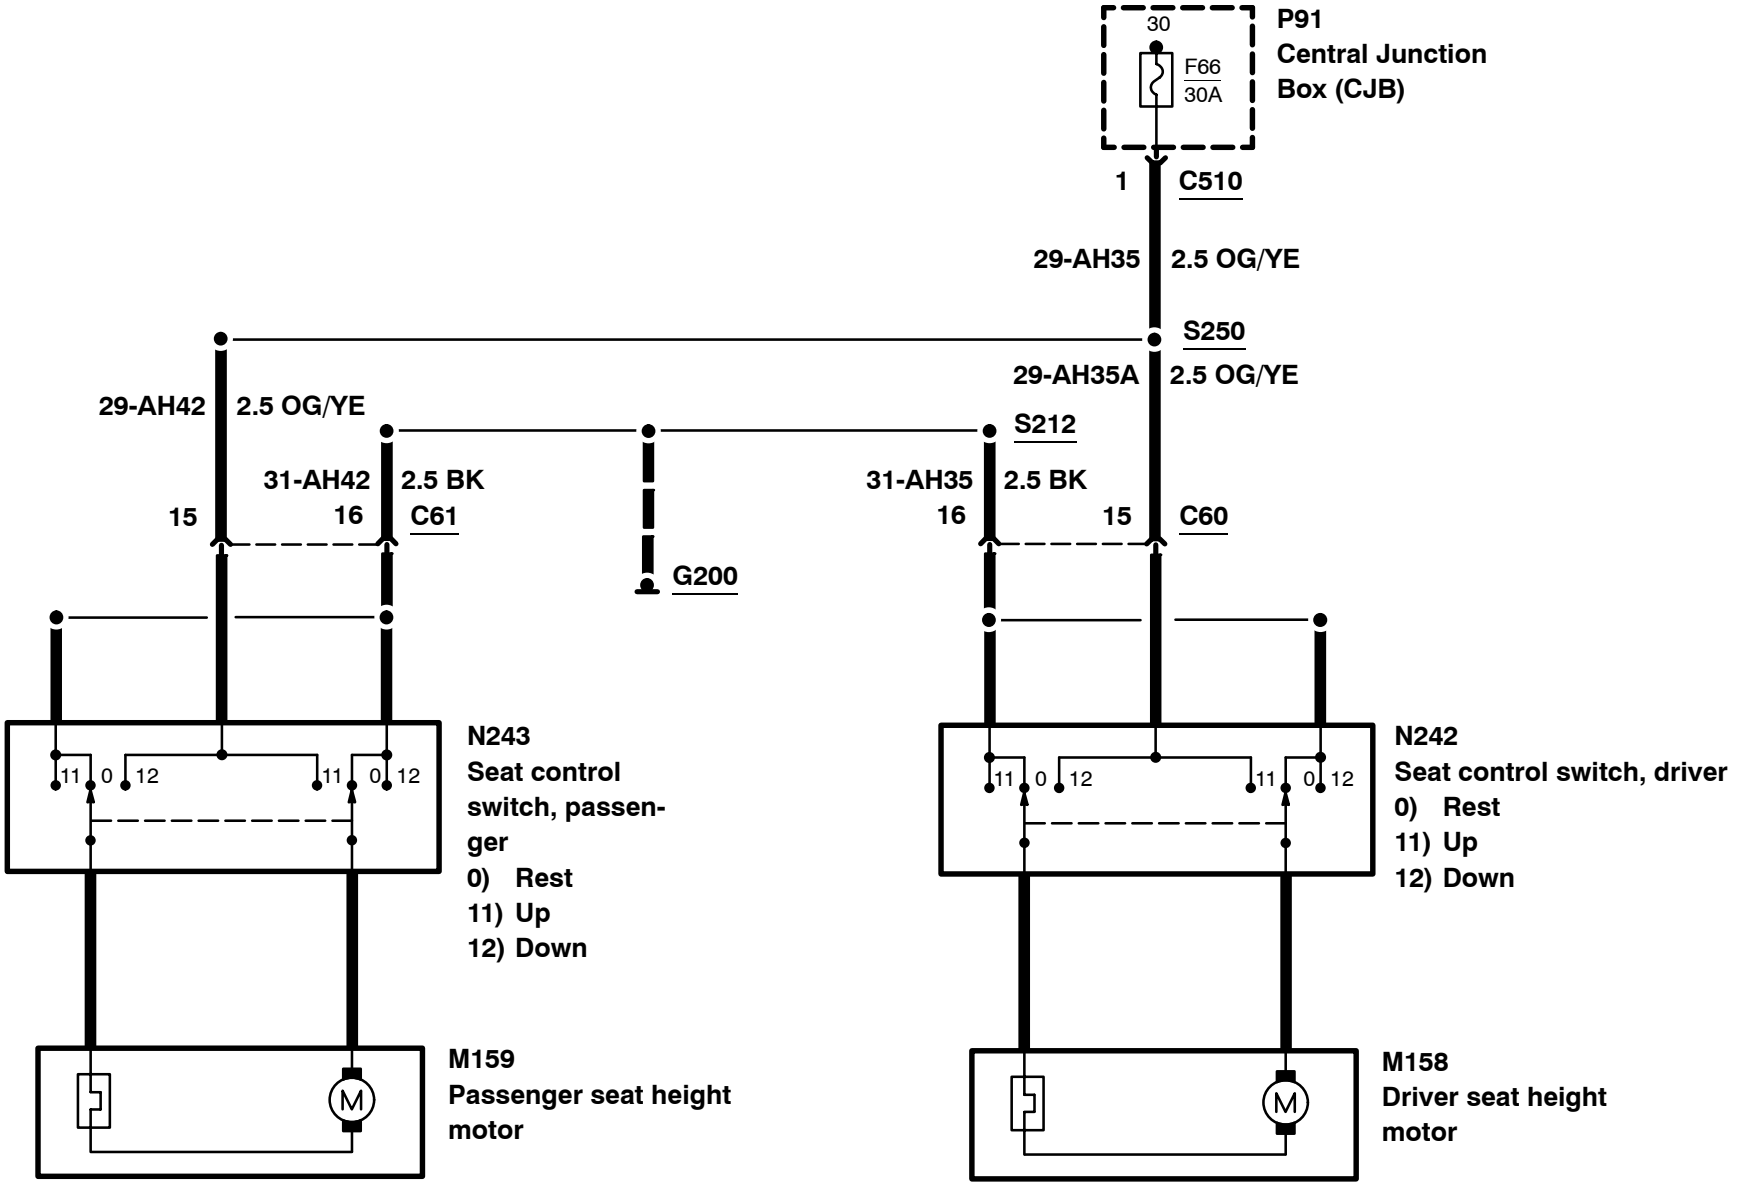


Seating – 8–way power seats

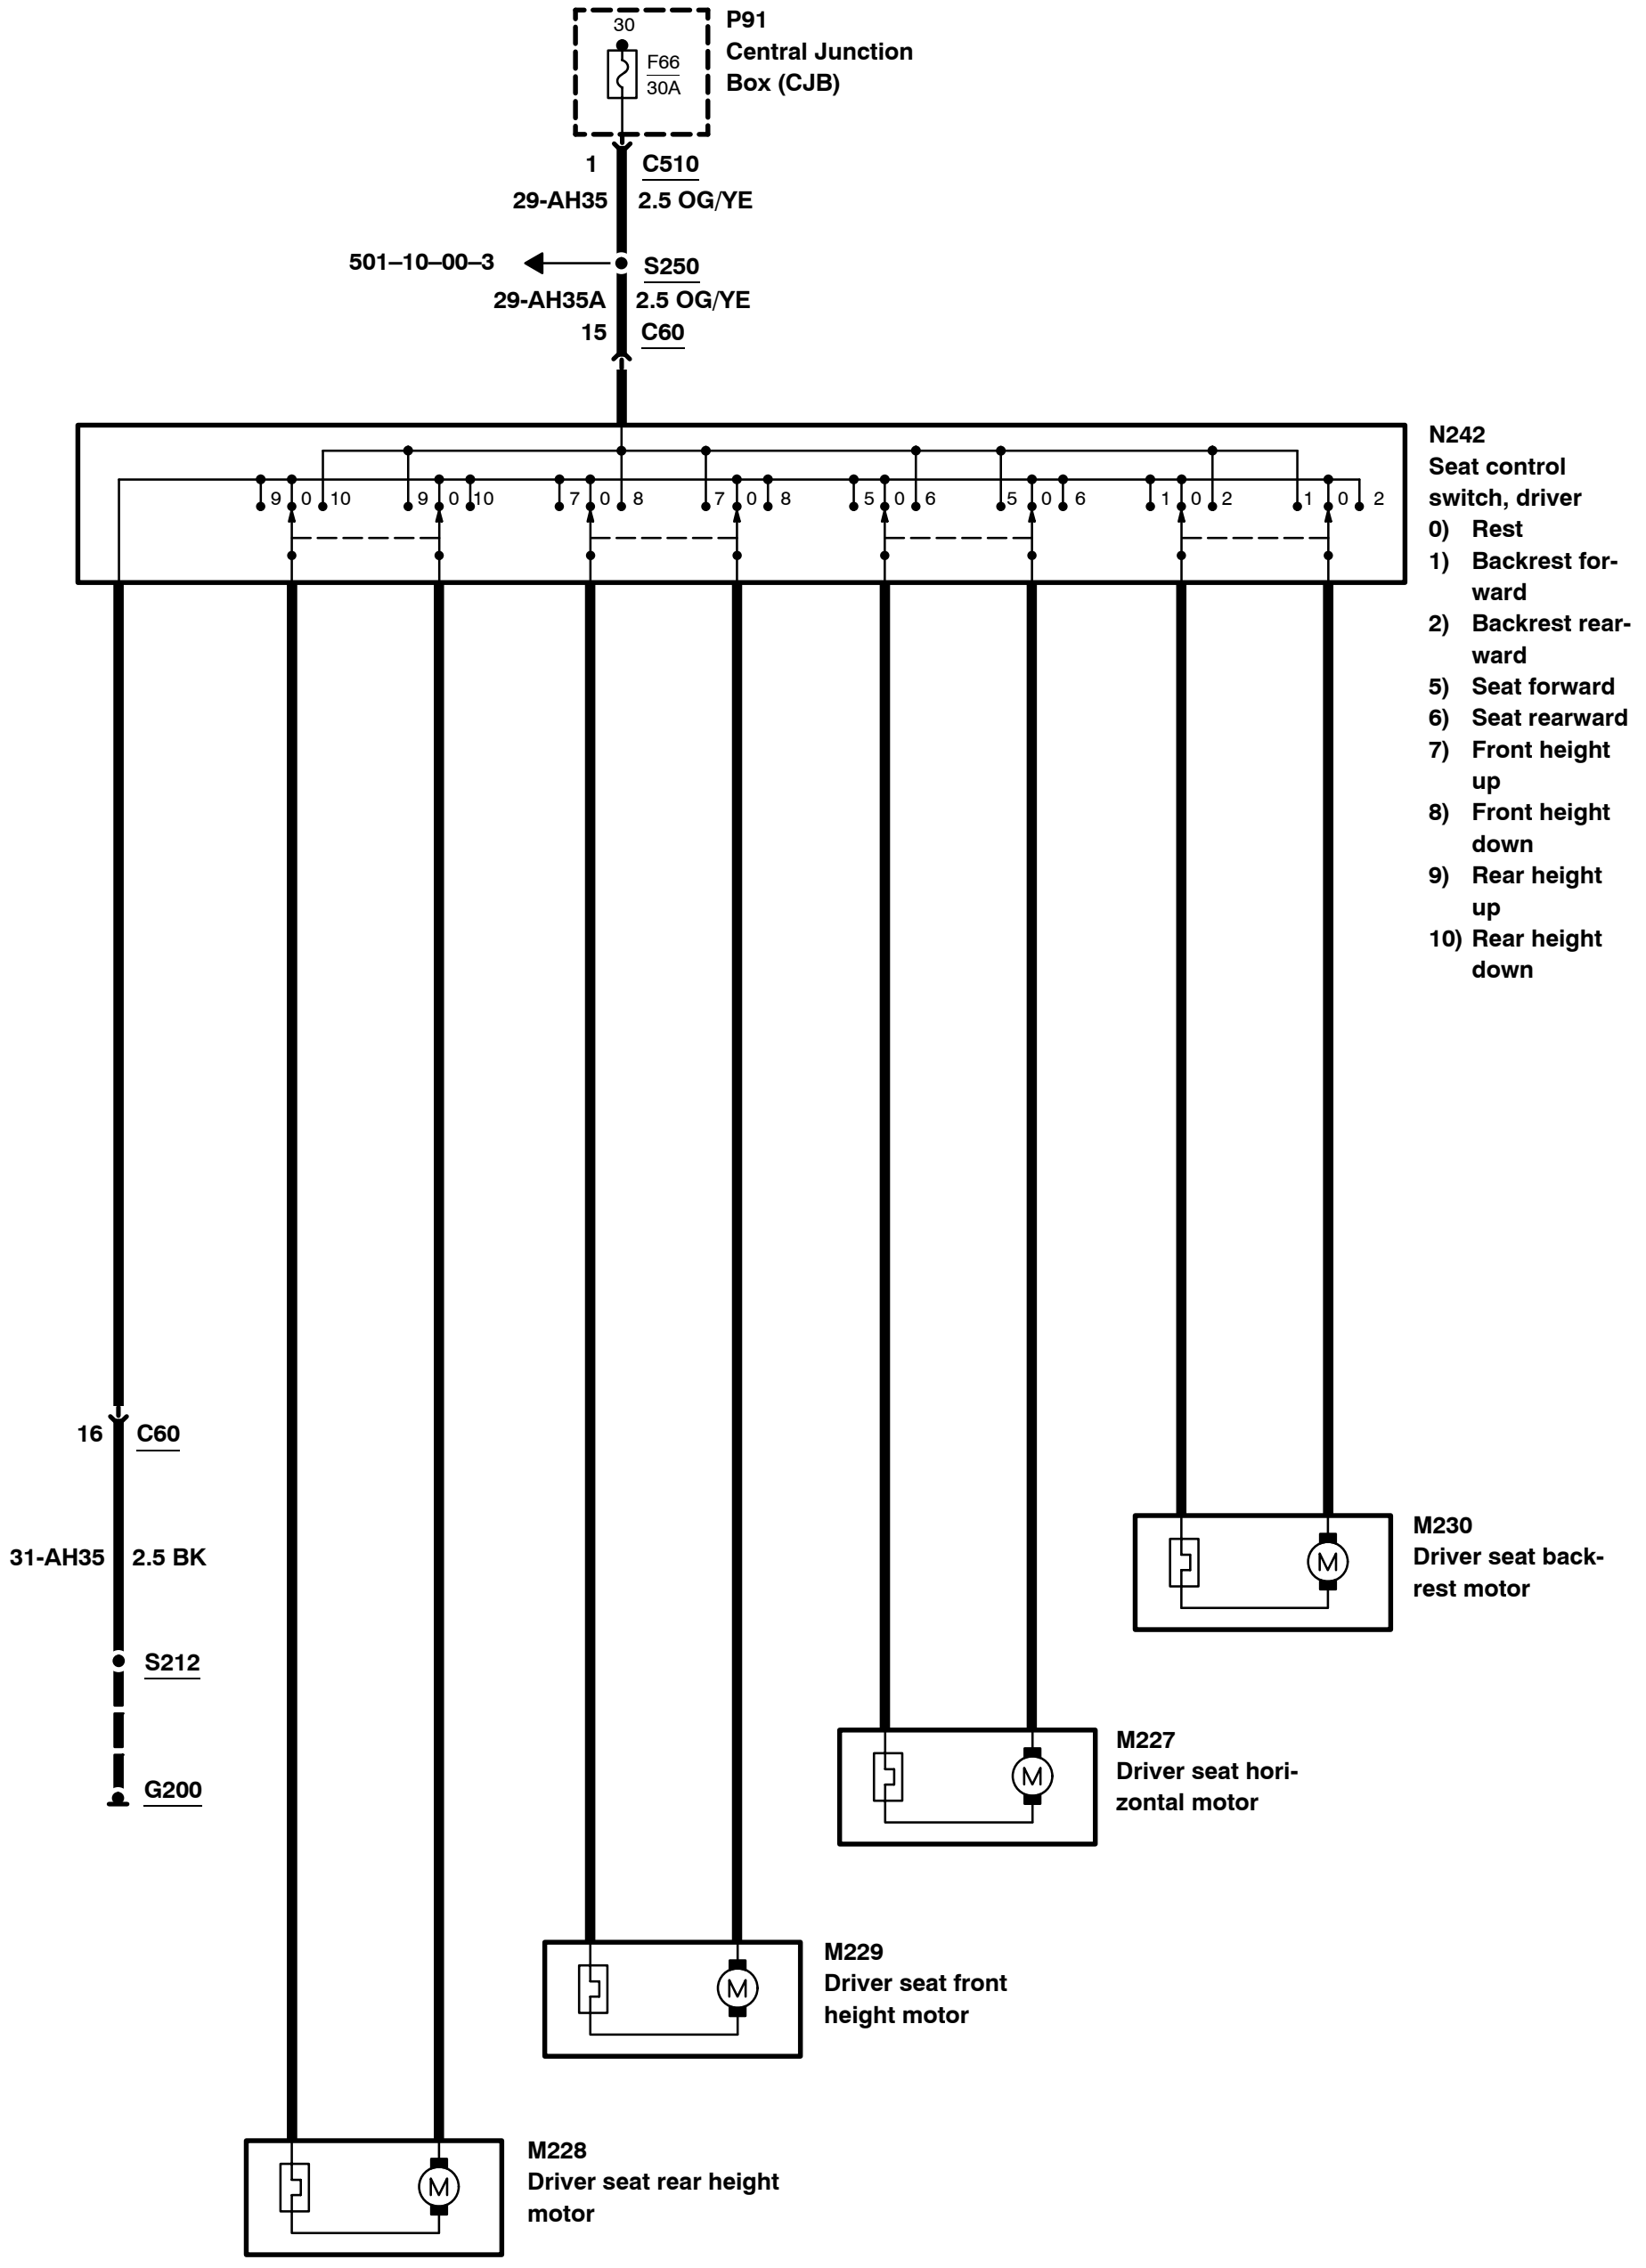


Seating – 8–way power seats

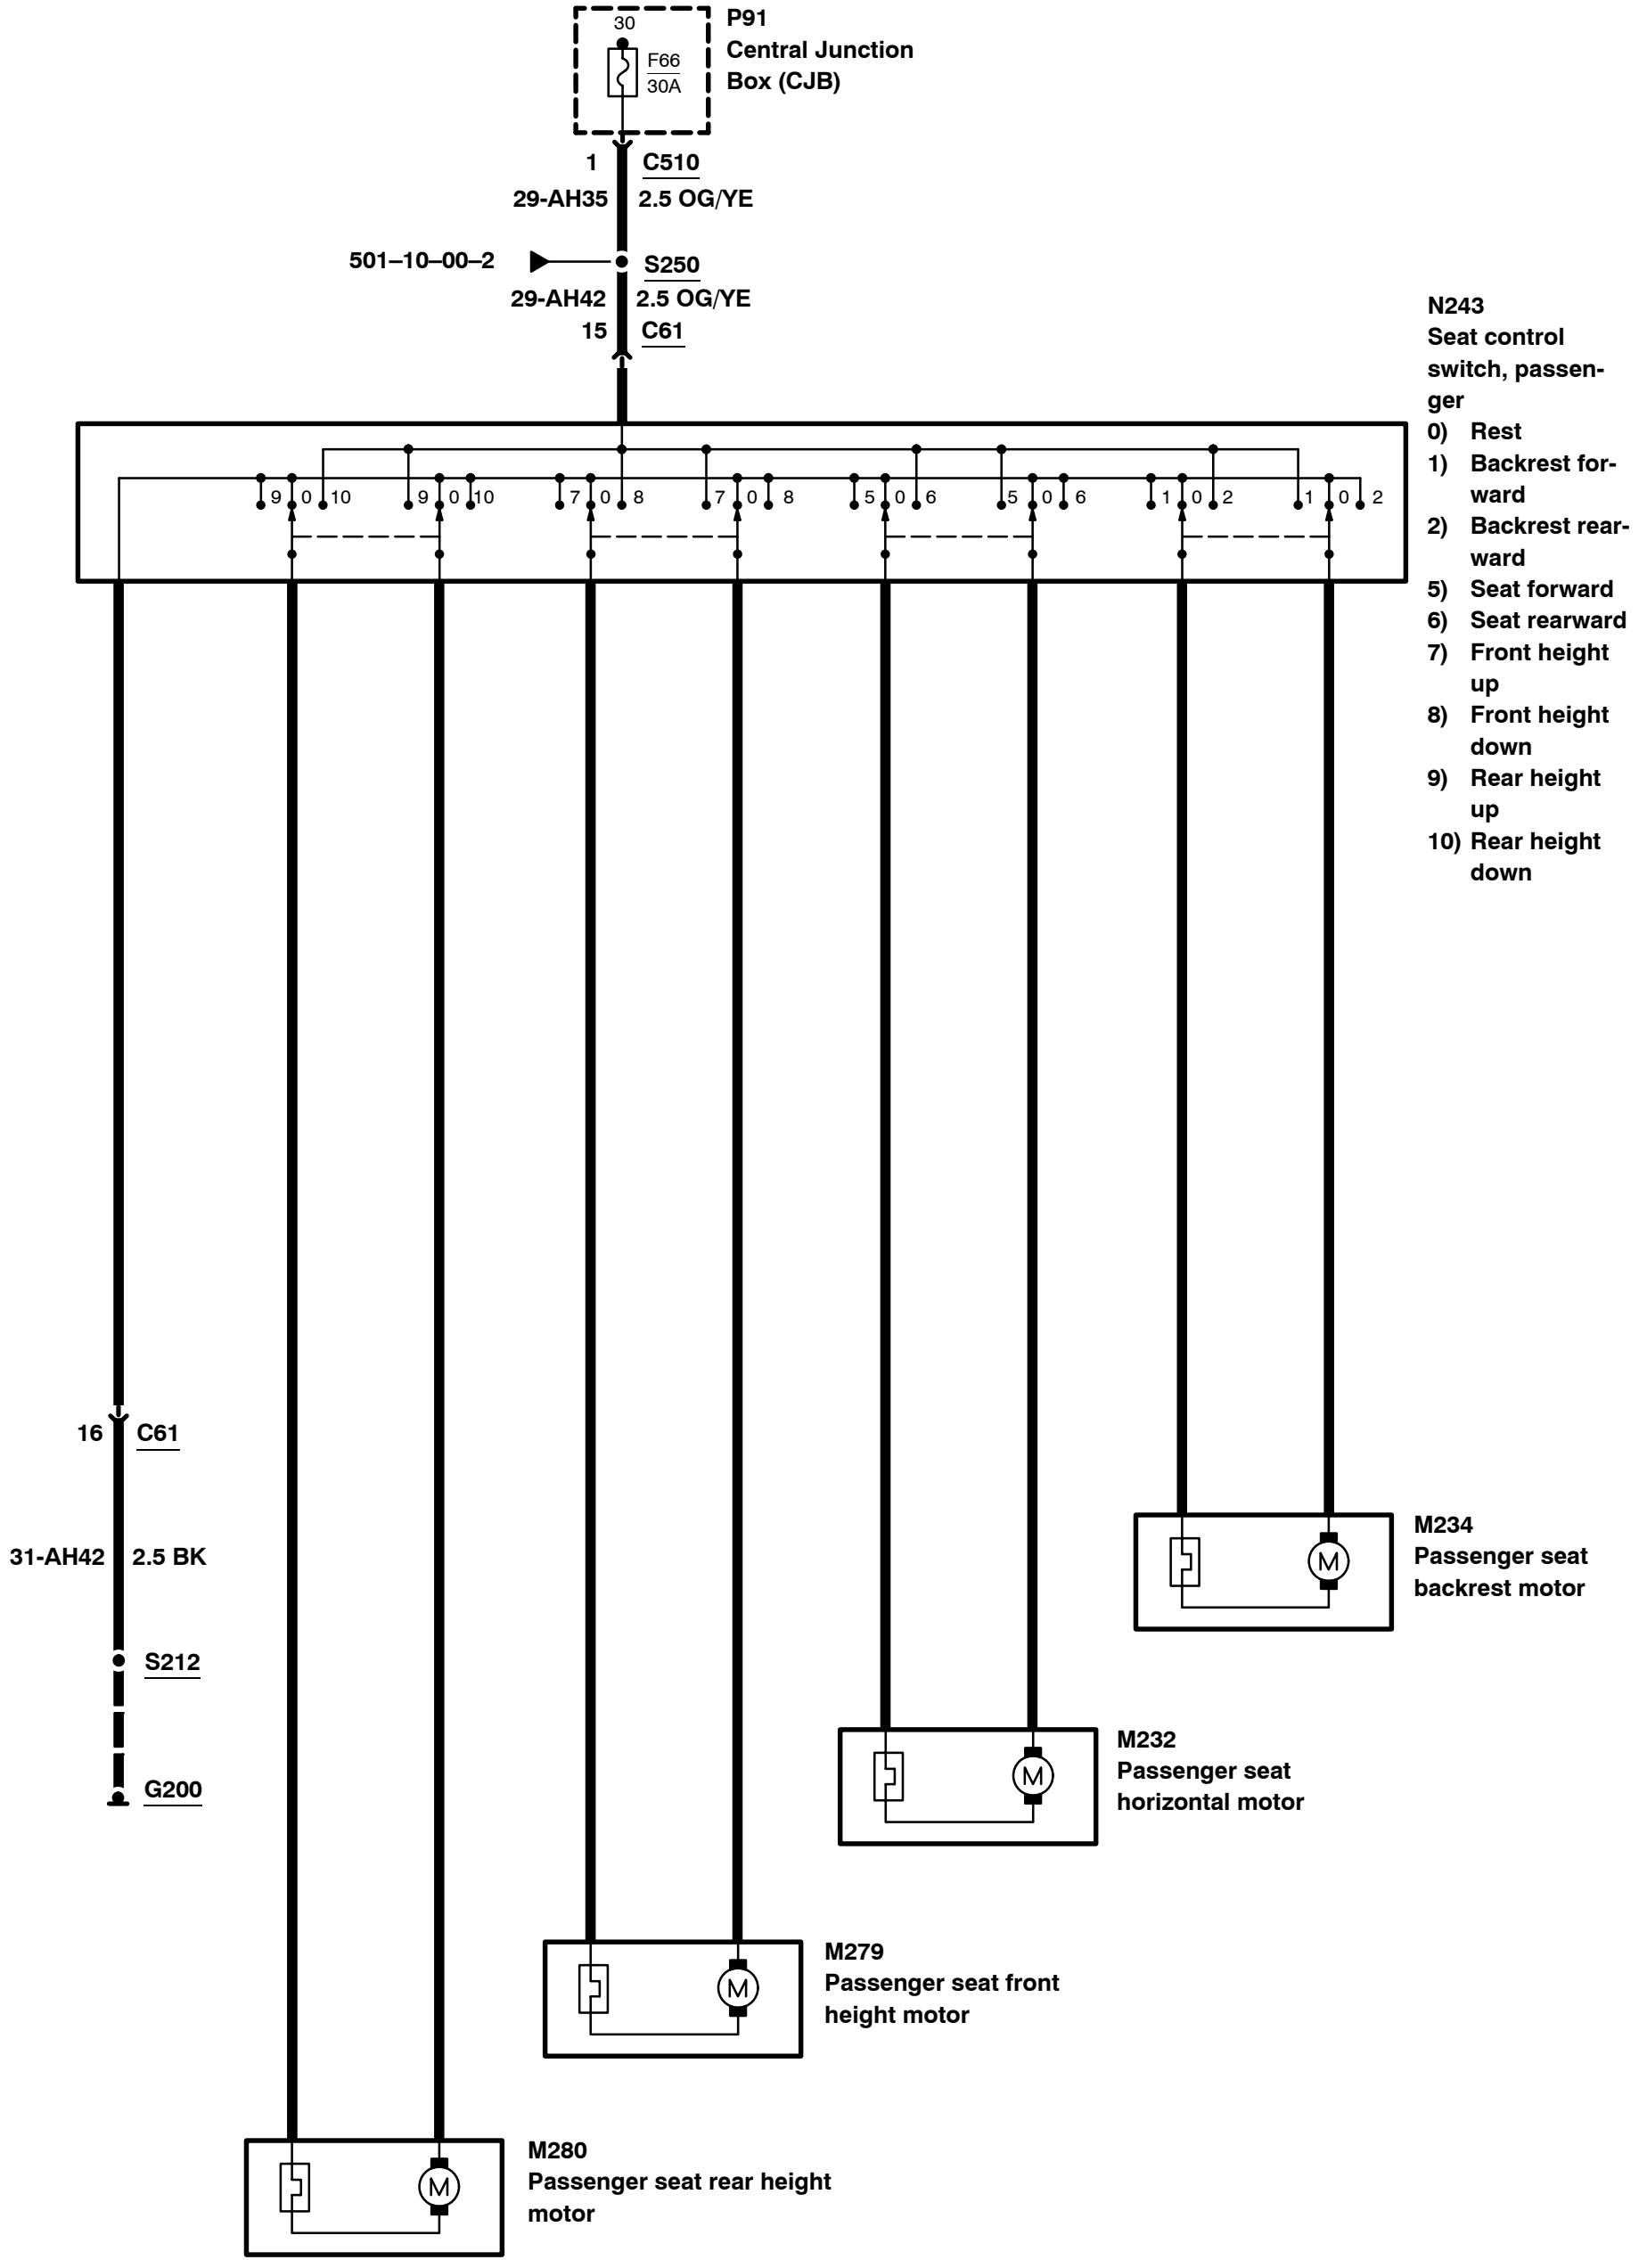


Seating – Heated front seats

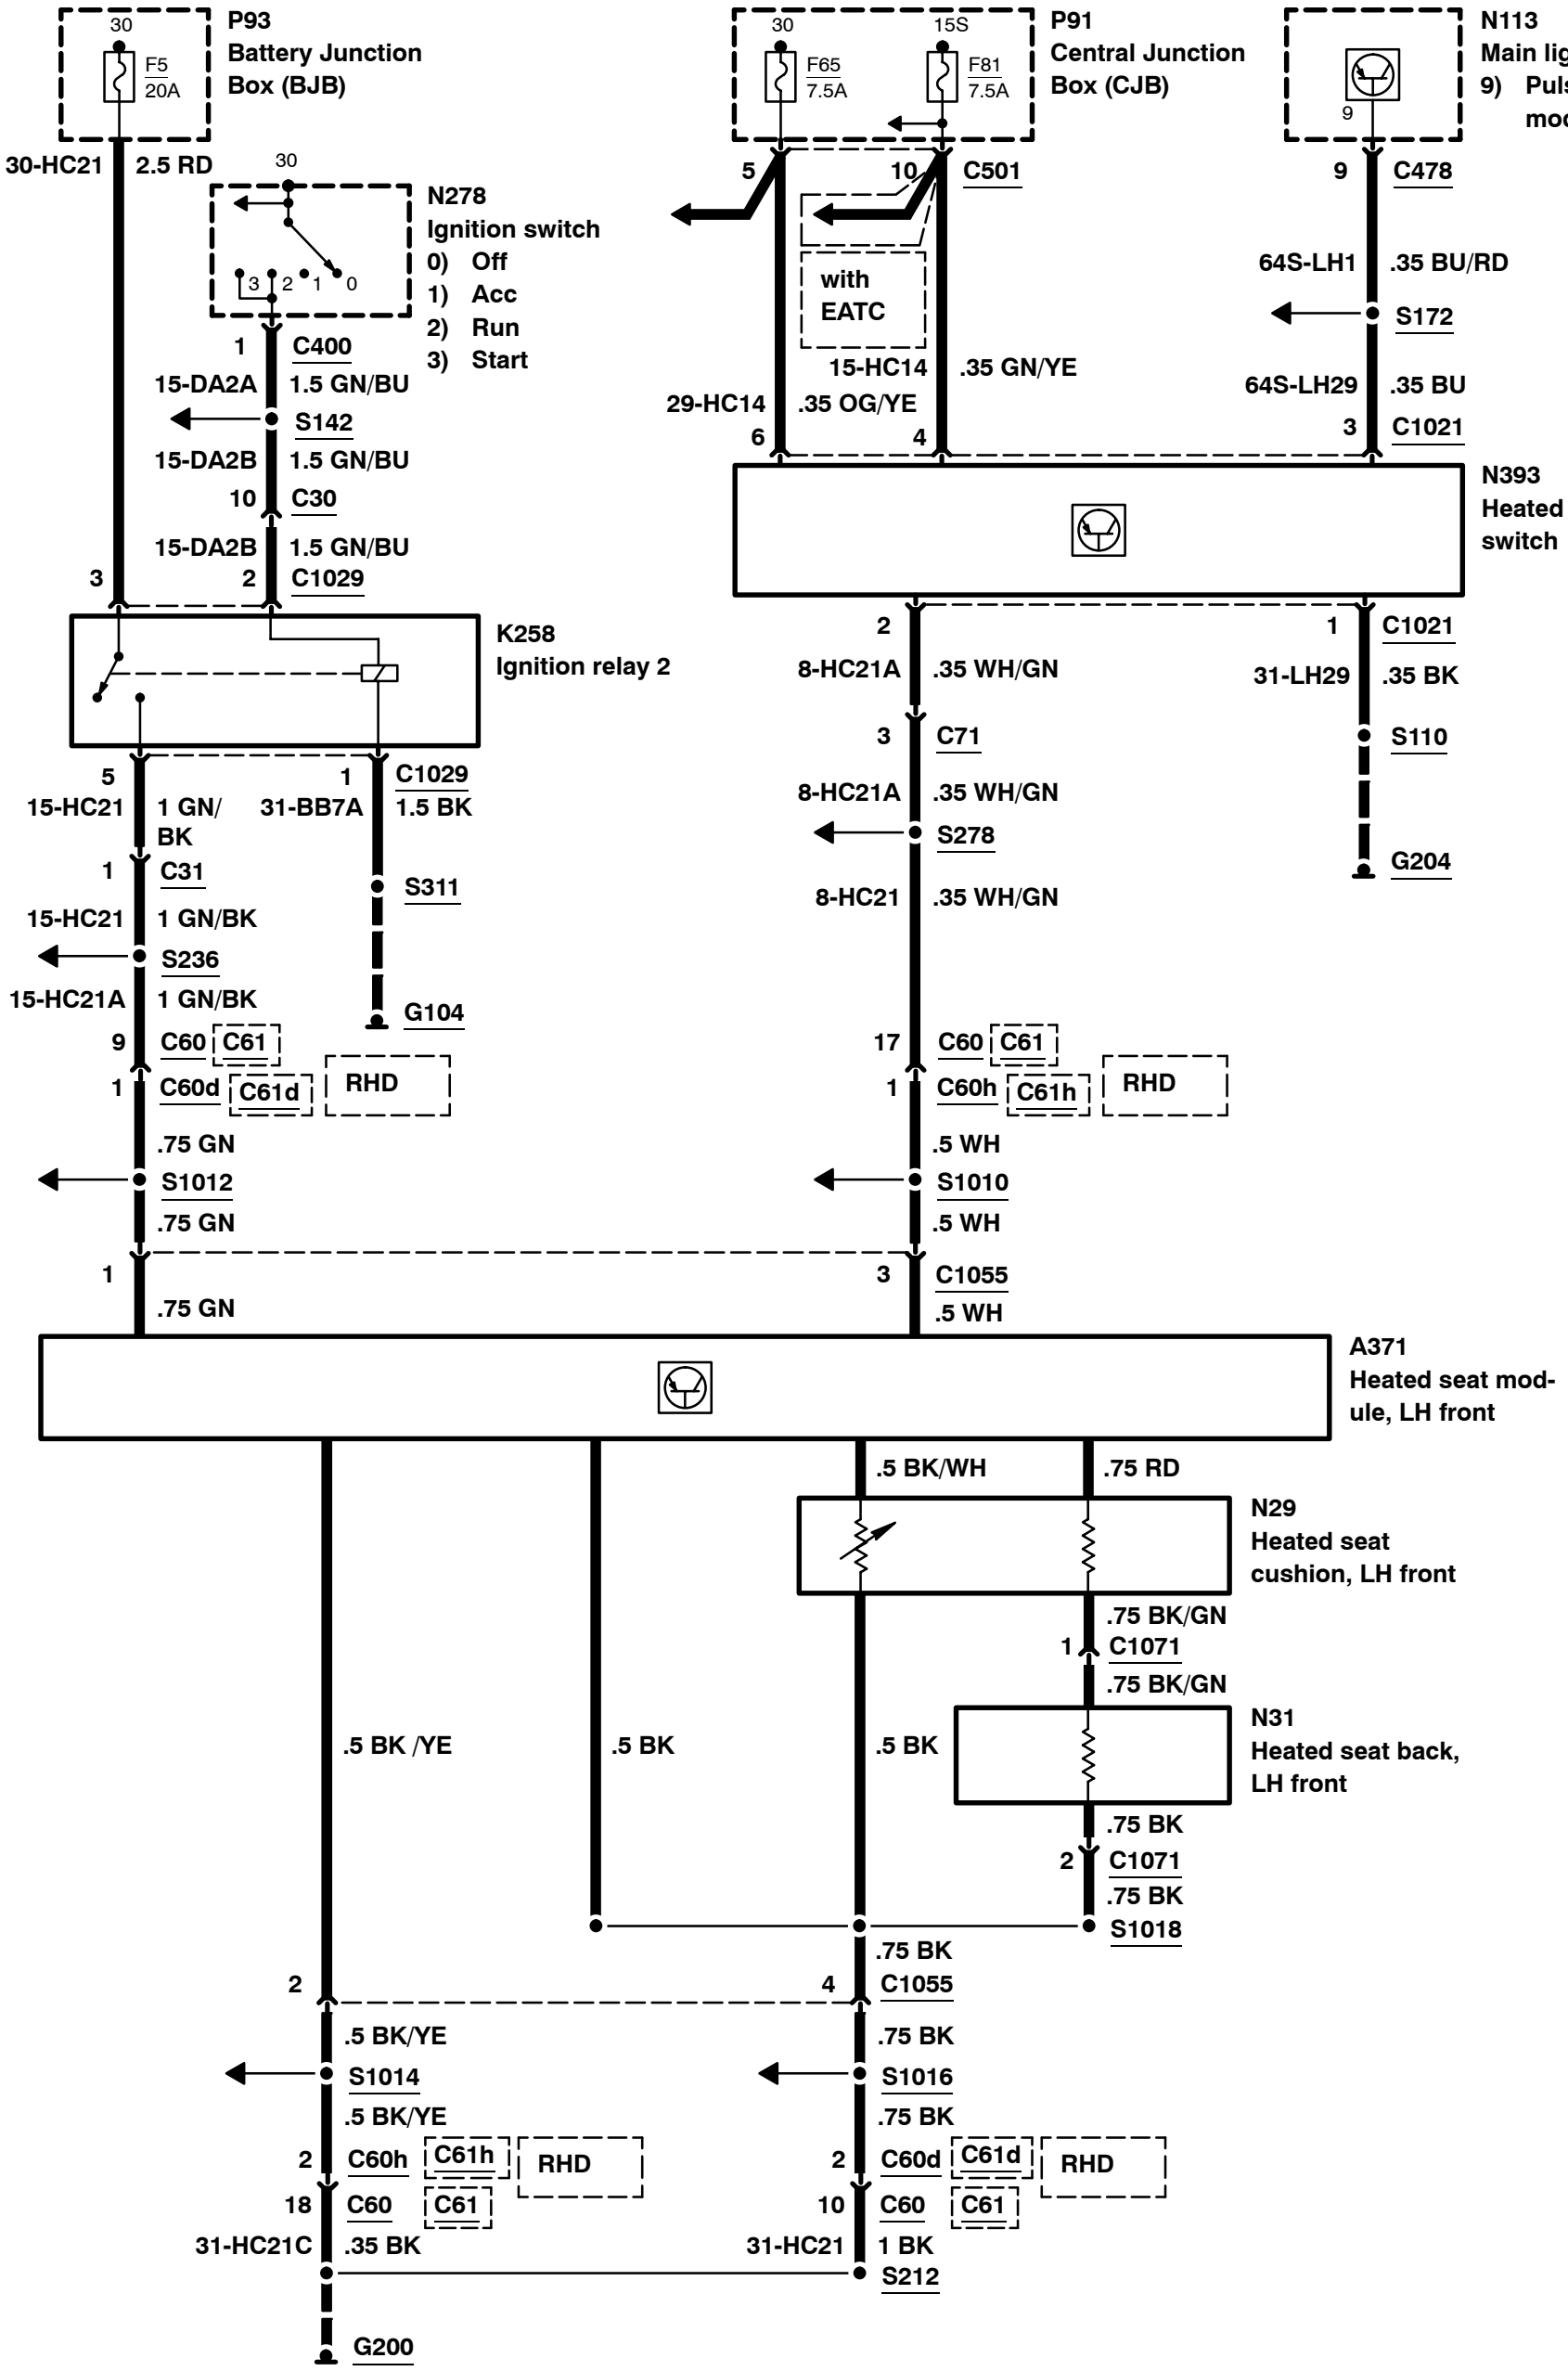


Seating – Heated front seats

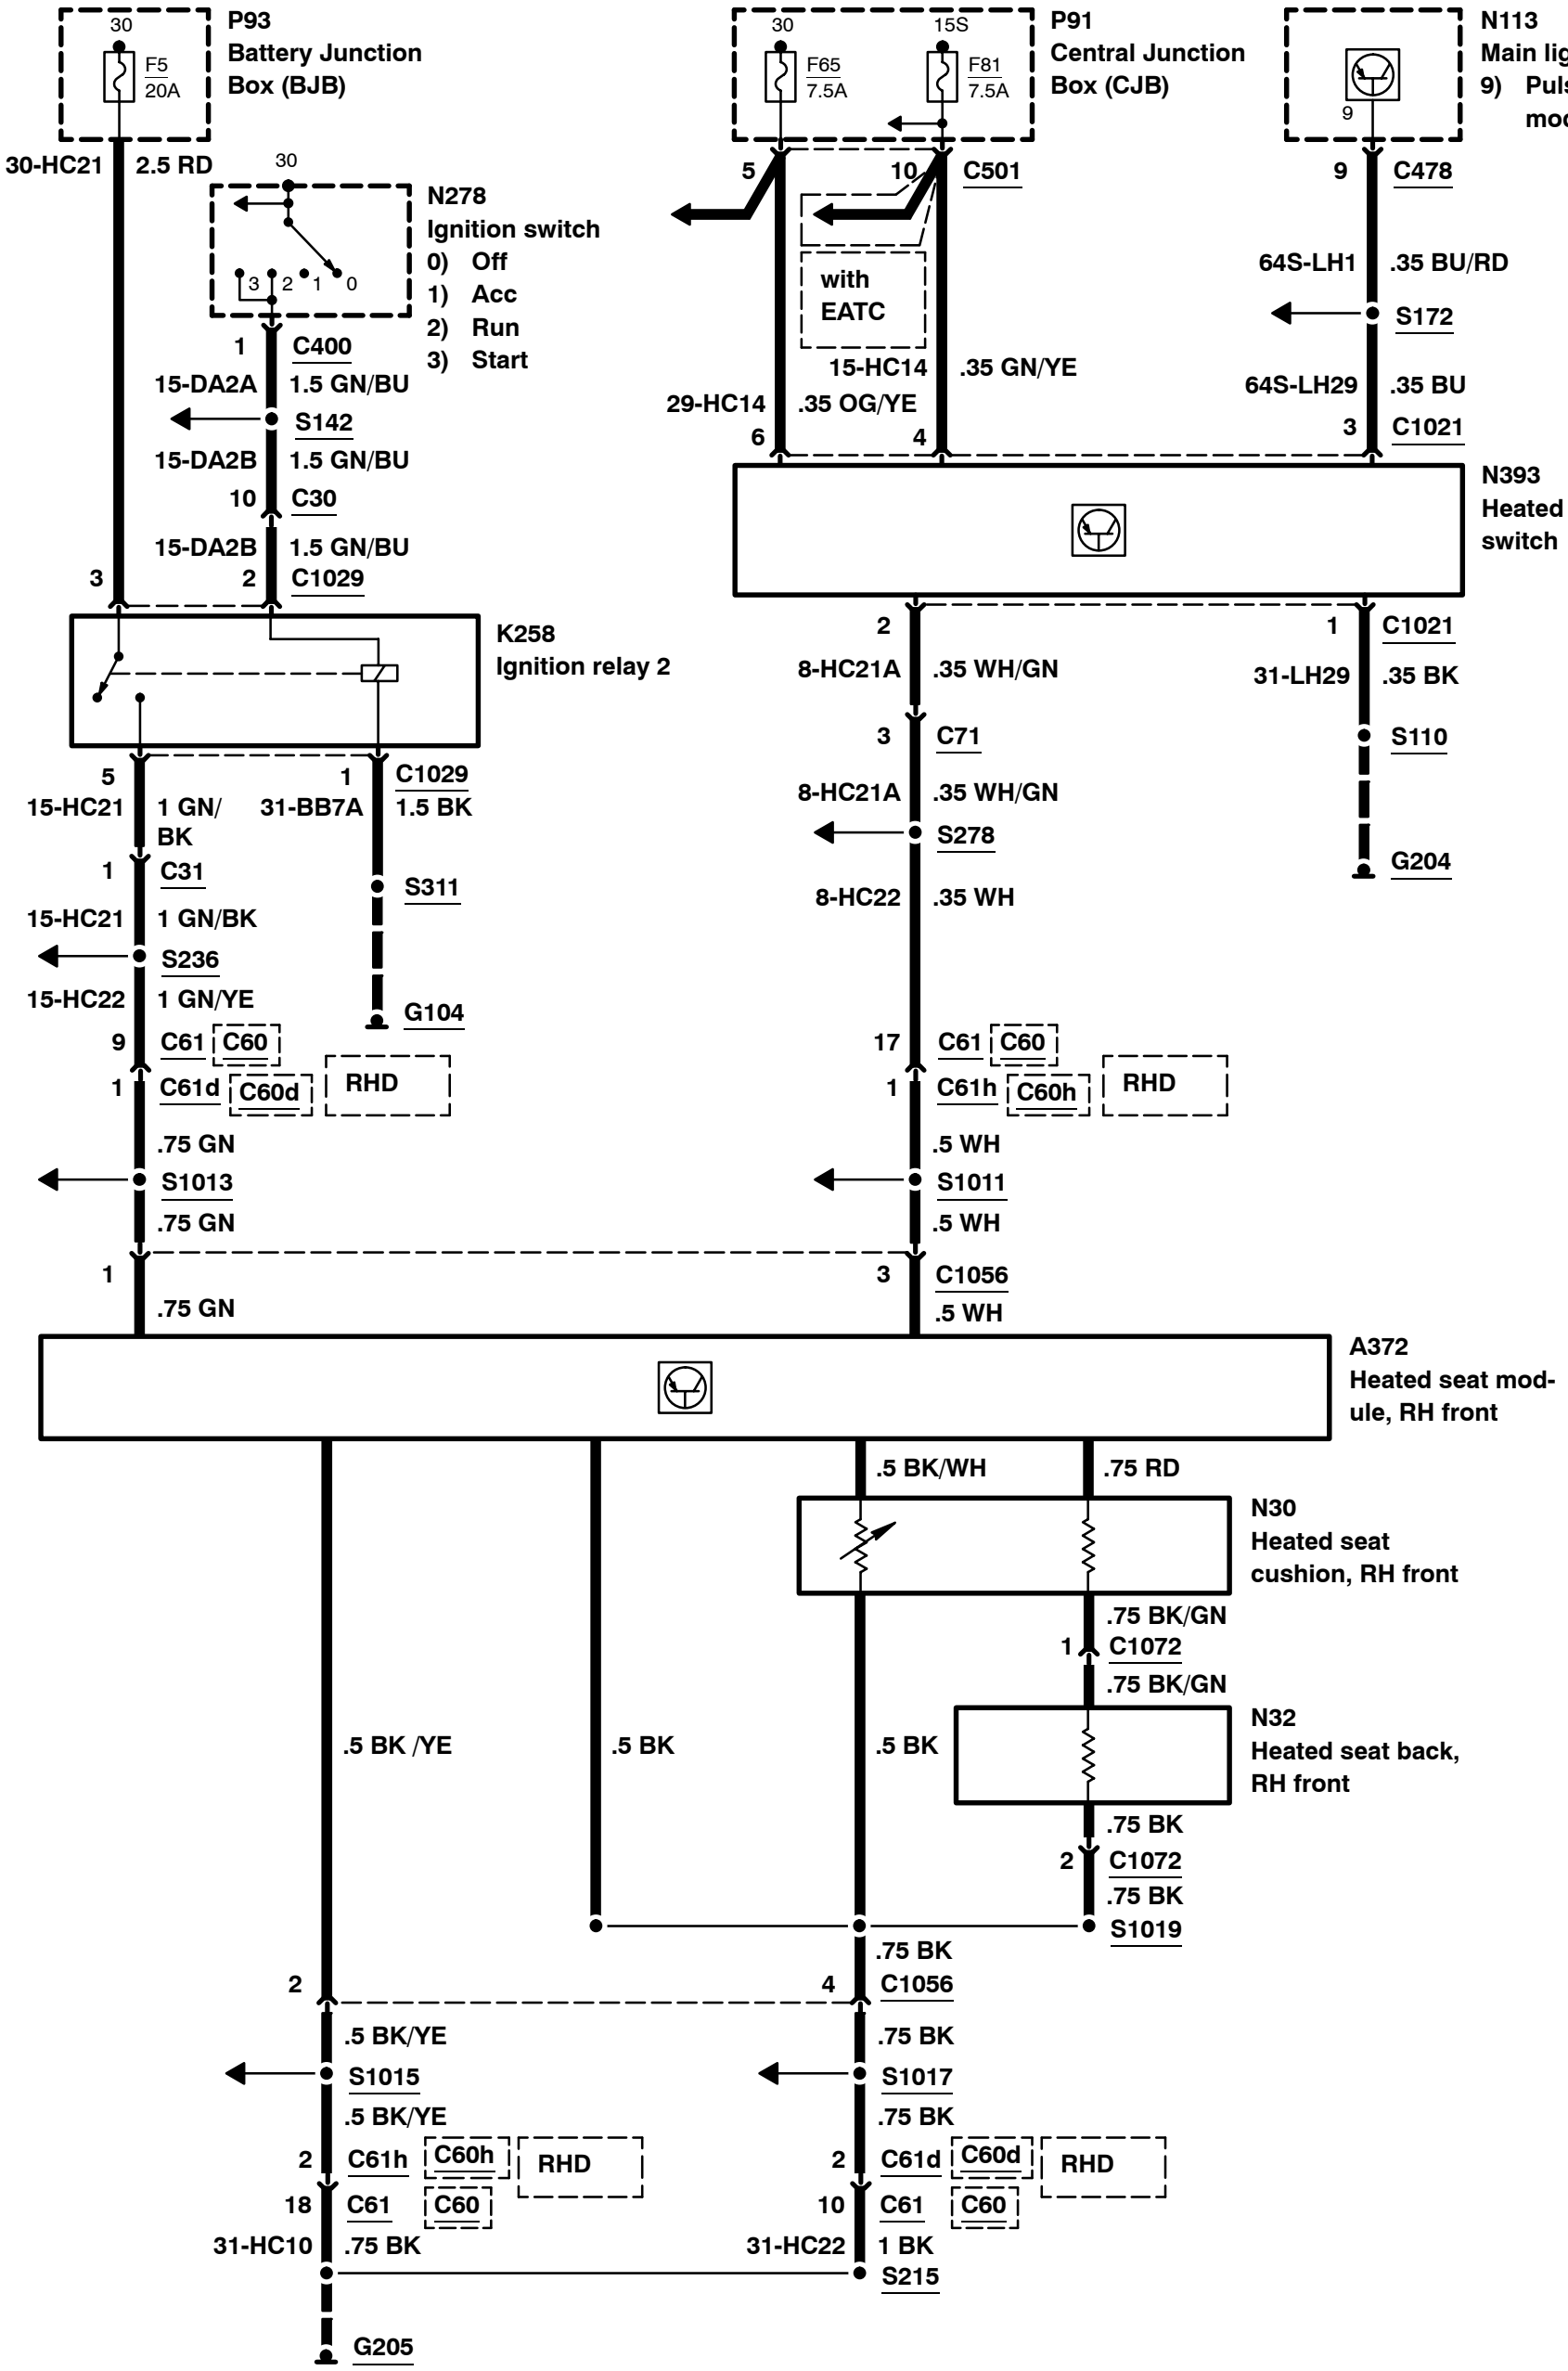


Seating – Climate controlled front seats

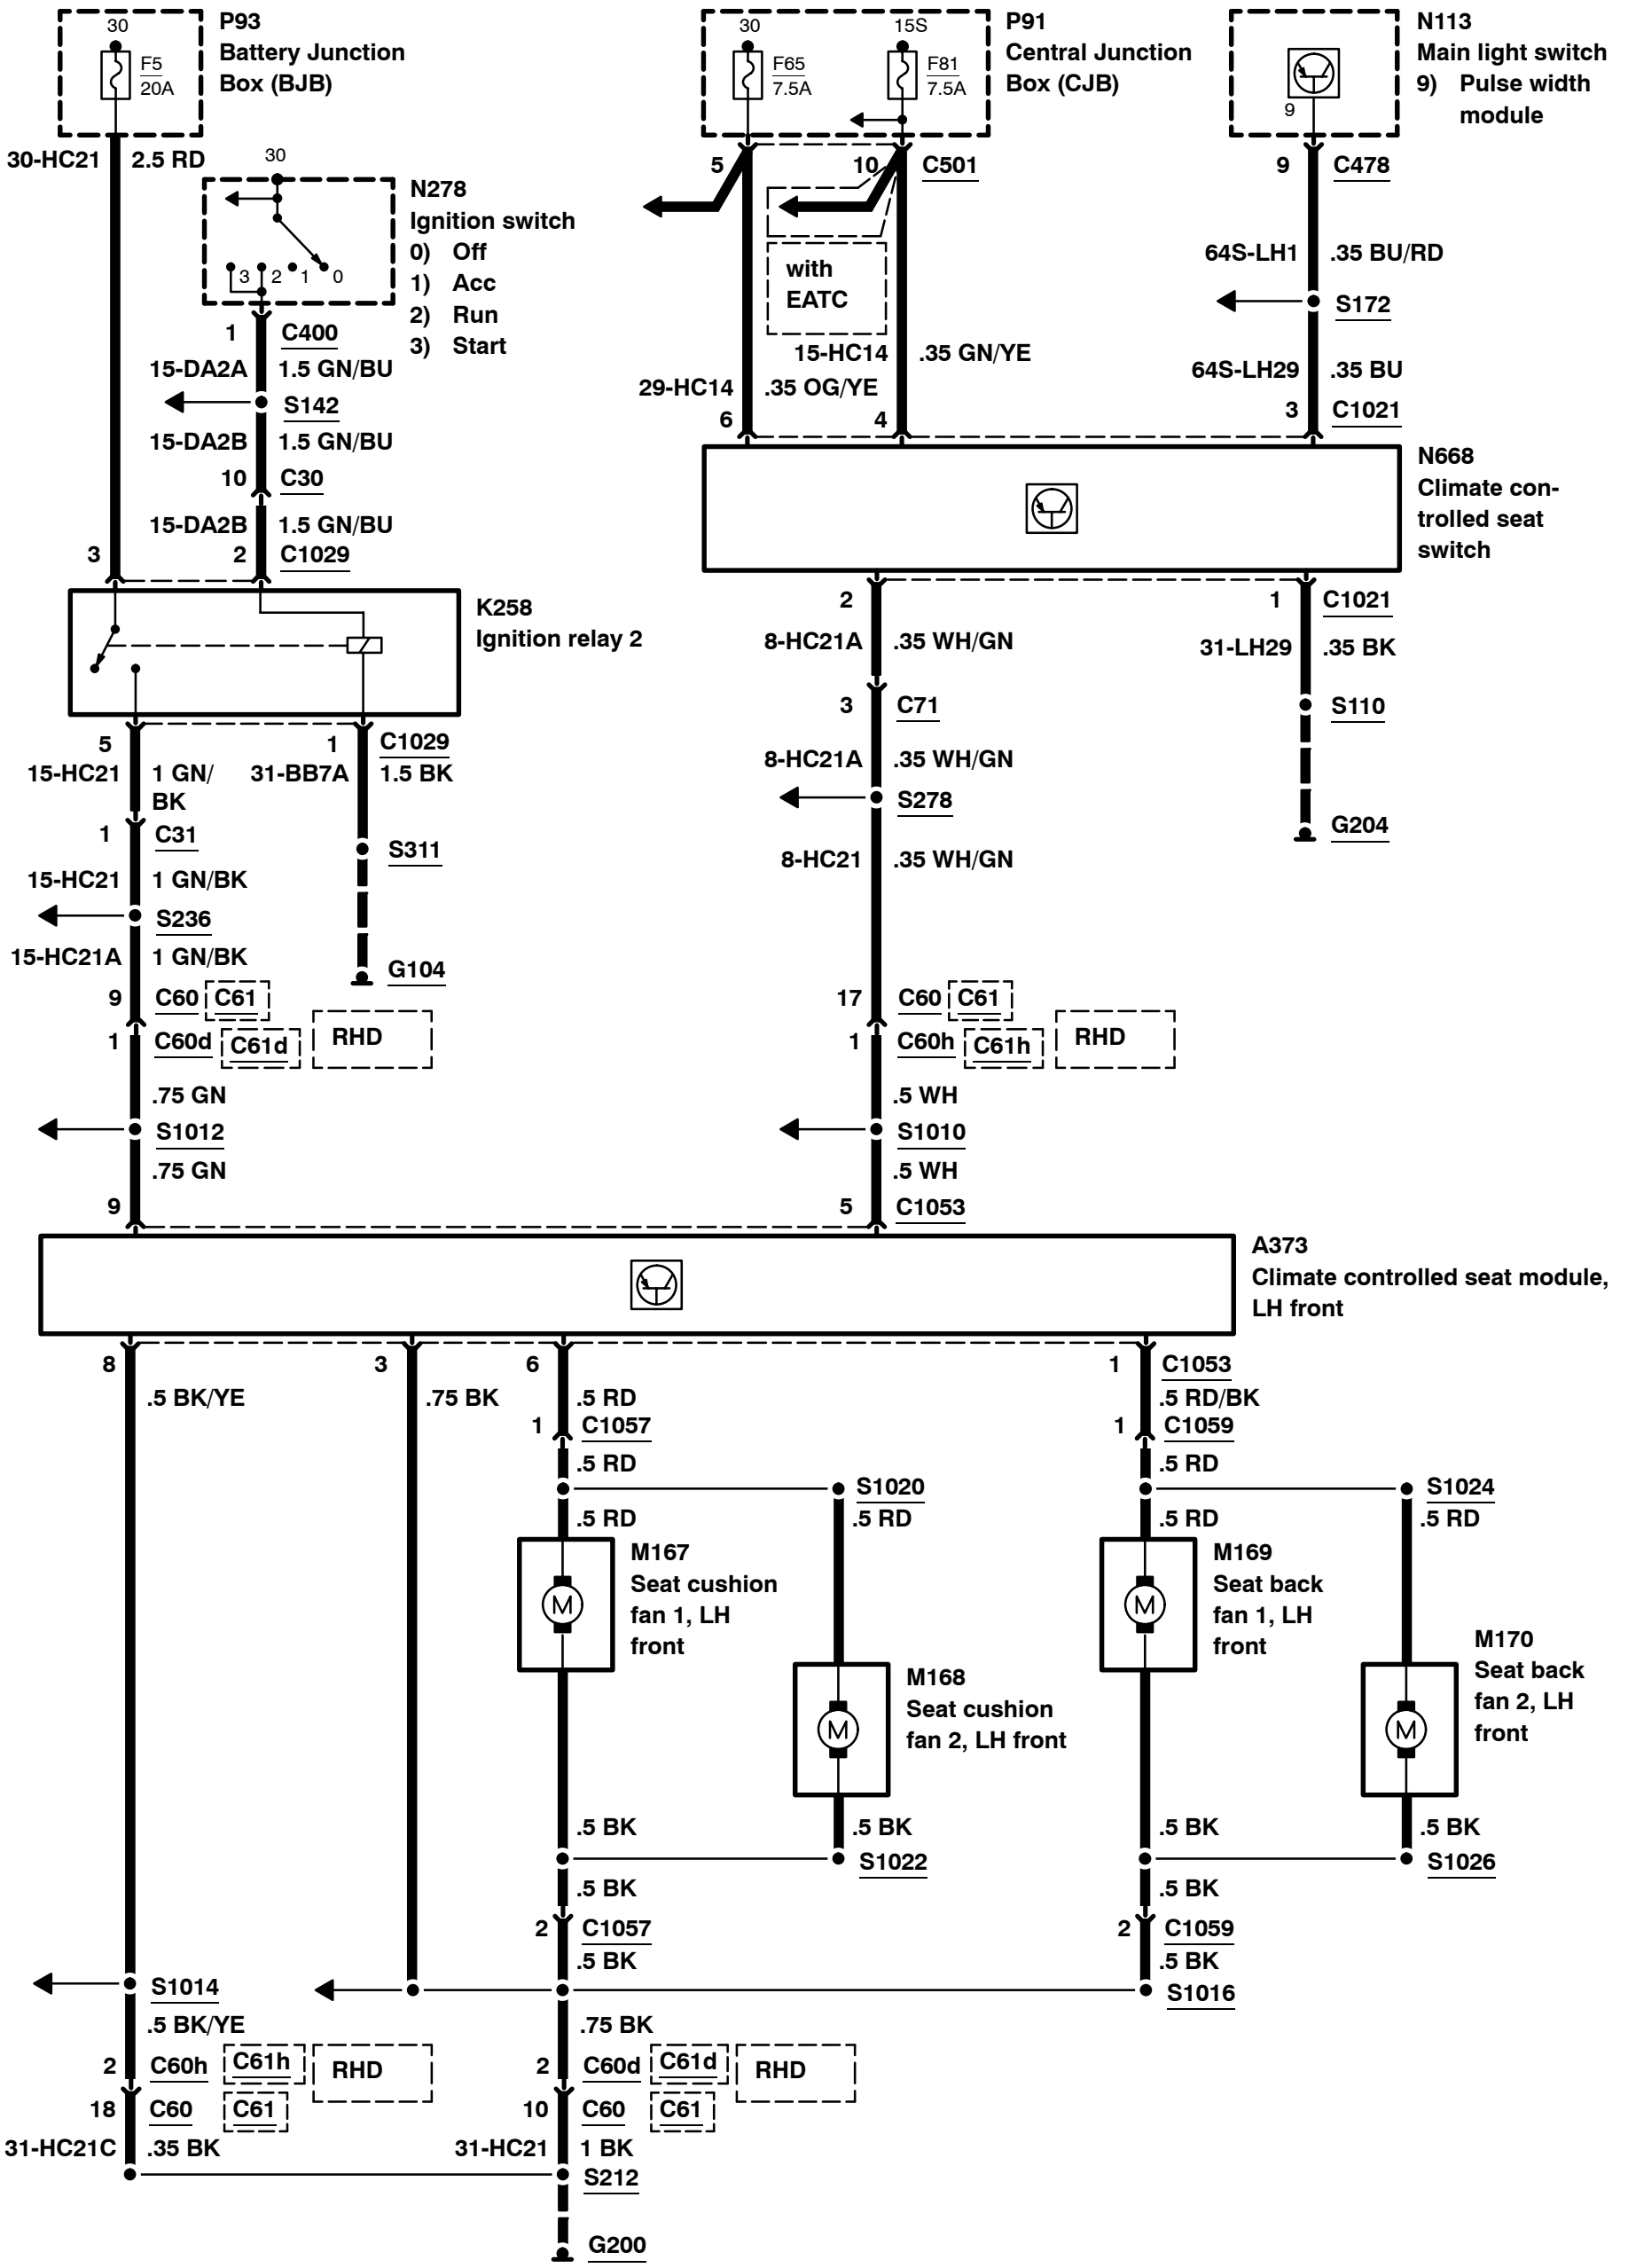


Seating – Climate controlled front seats

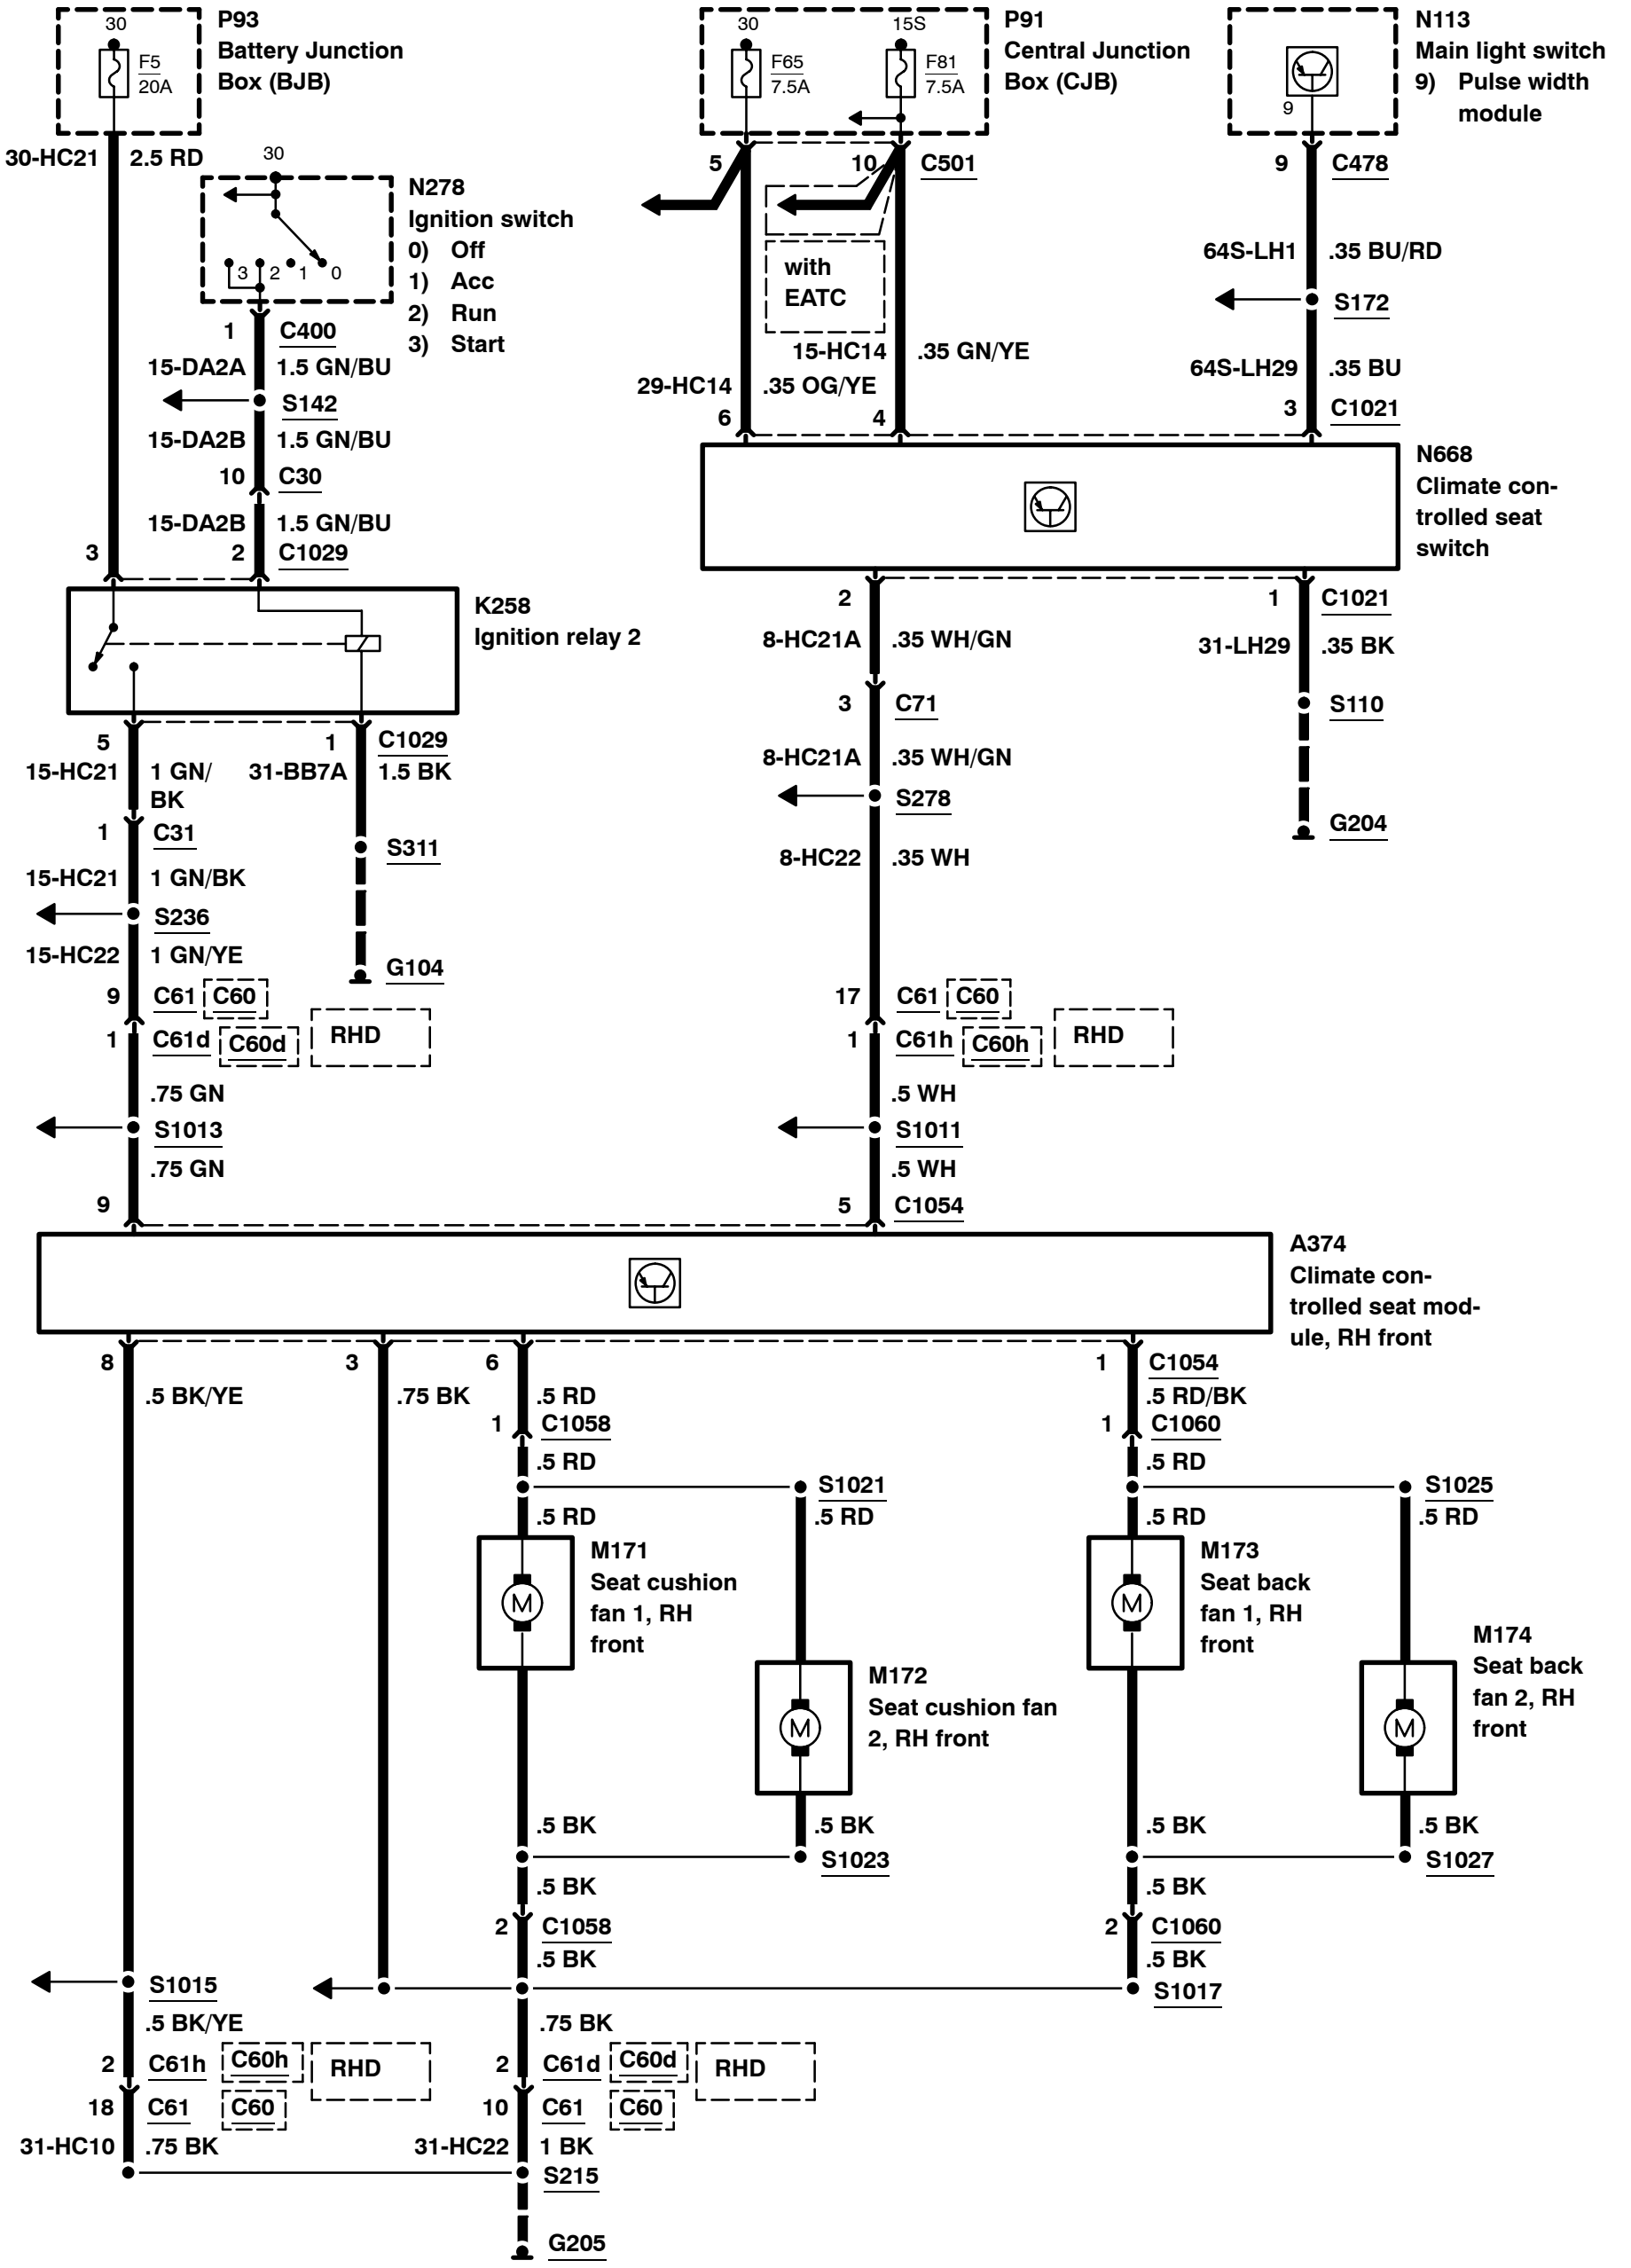


Seating – with heated rear seats

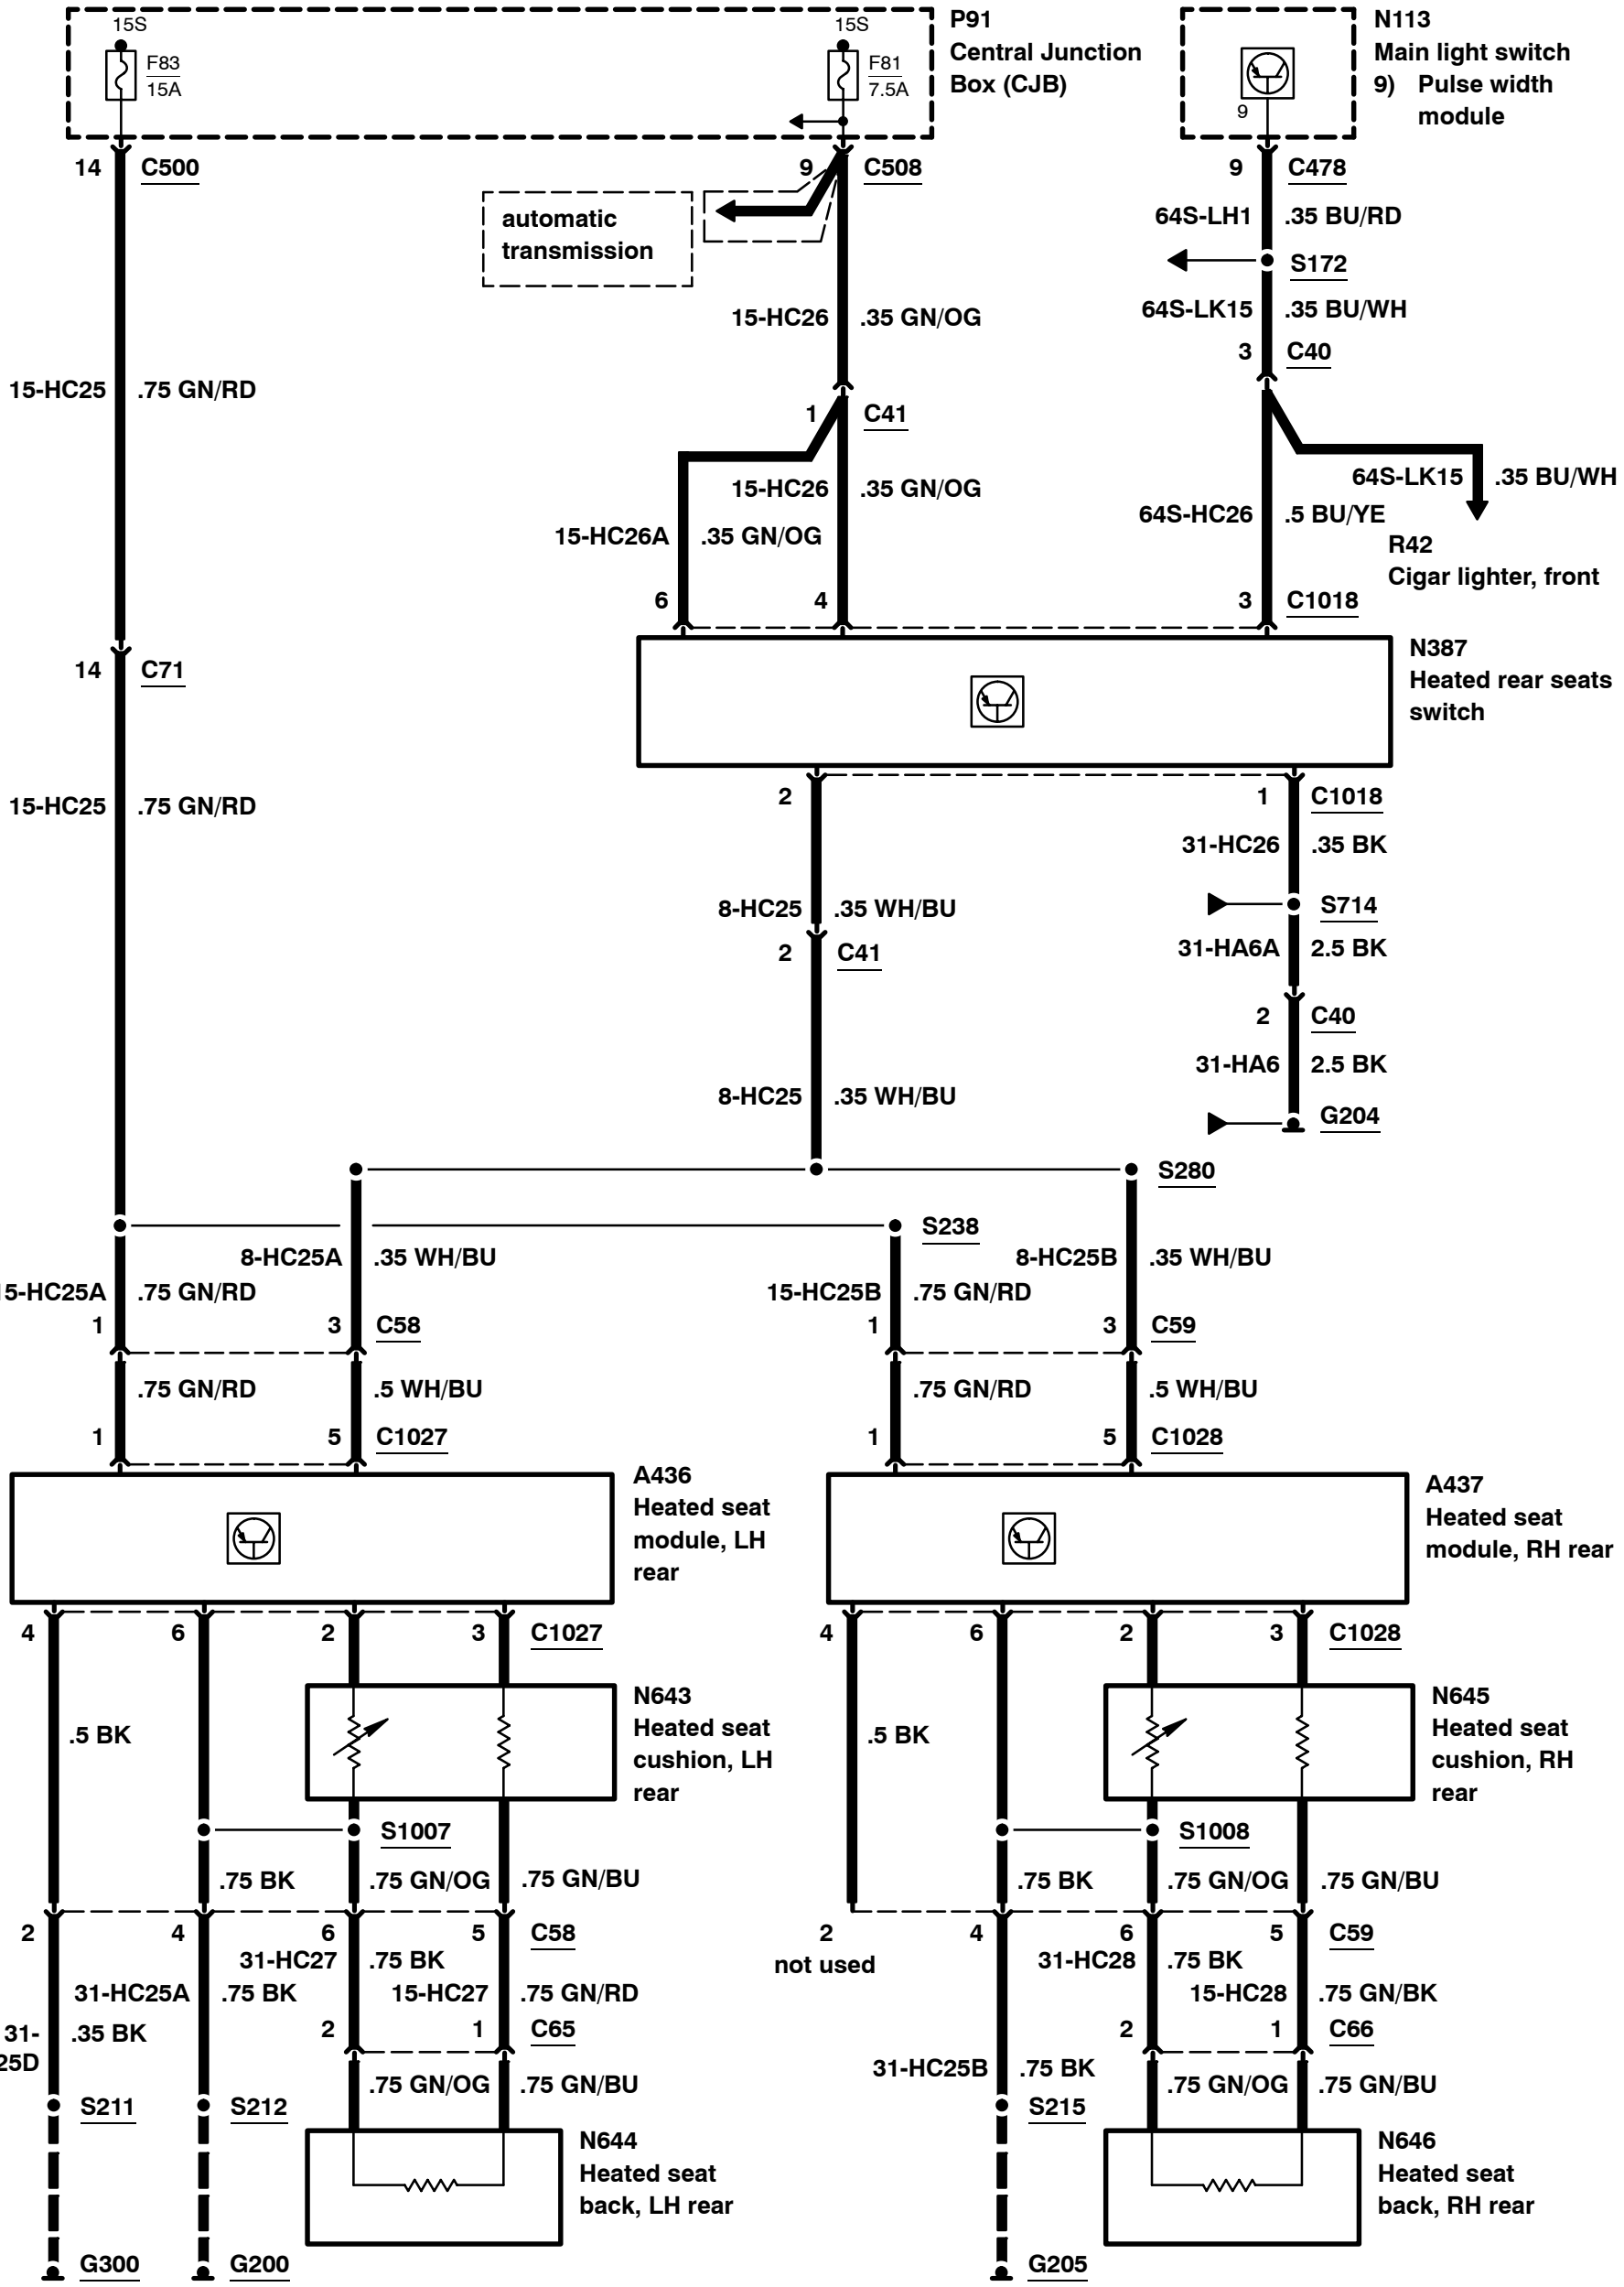


Glass, Frames and Mechanisms – Front power windows, Driver side

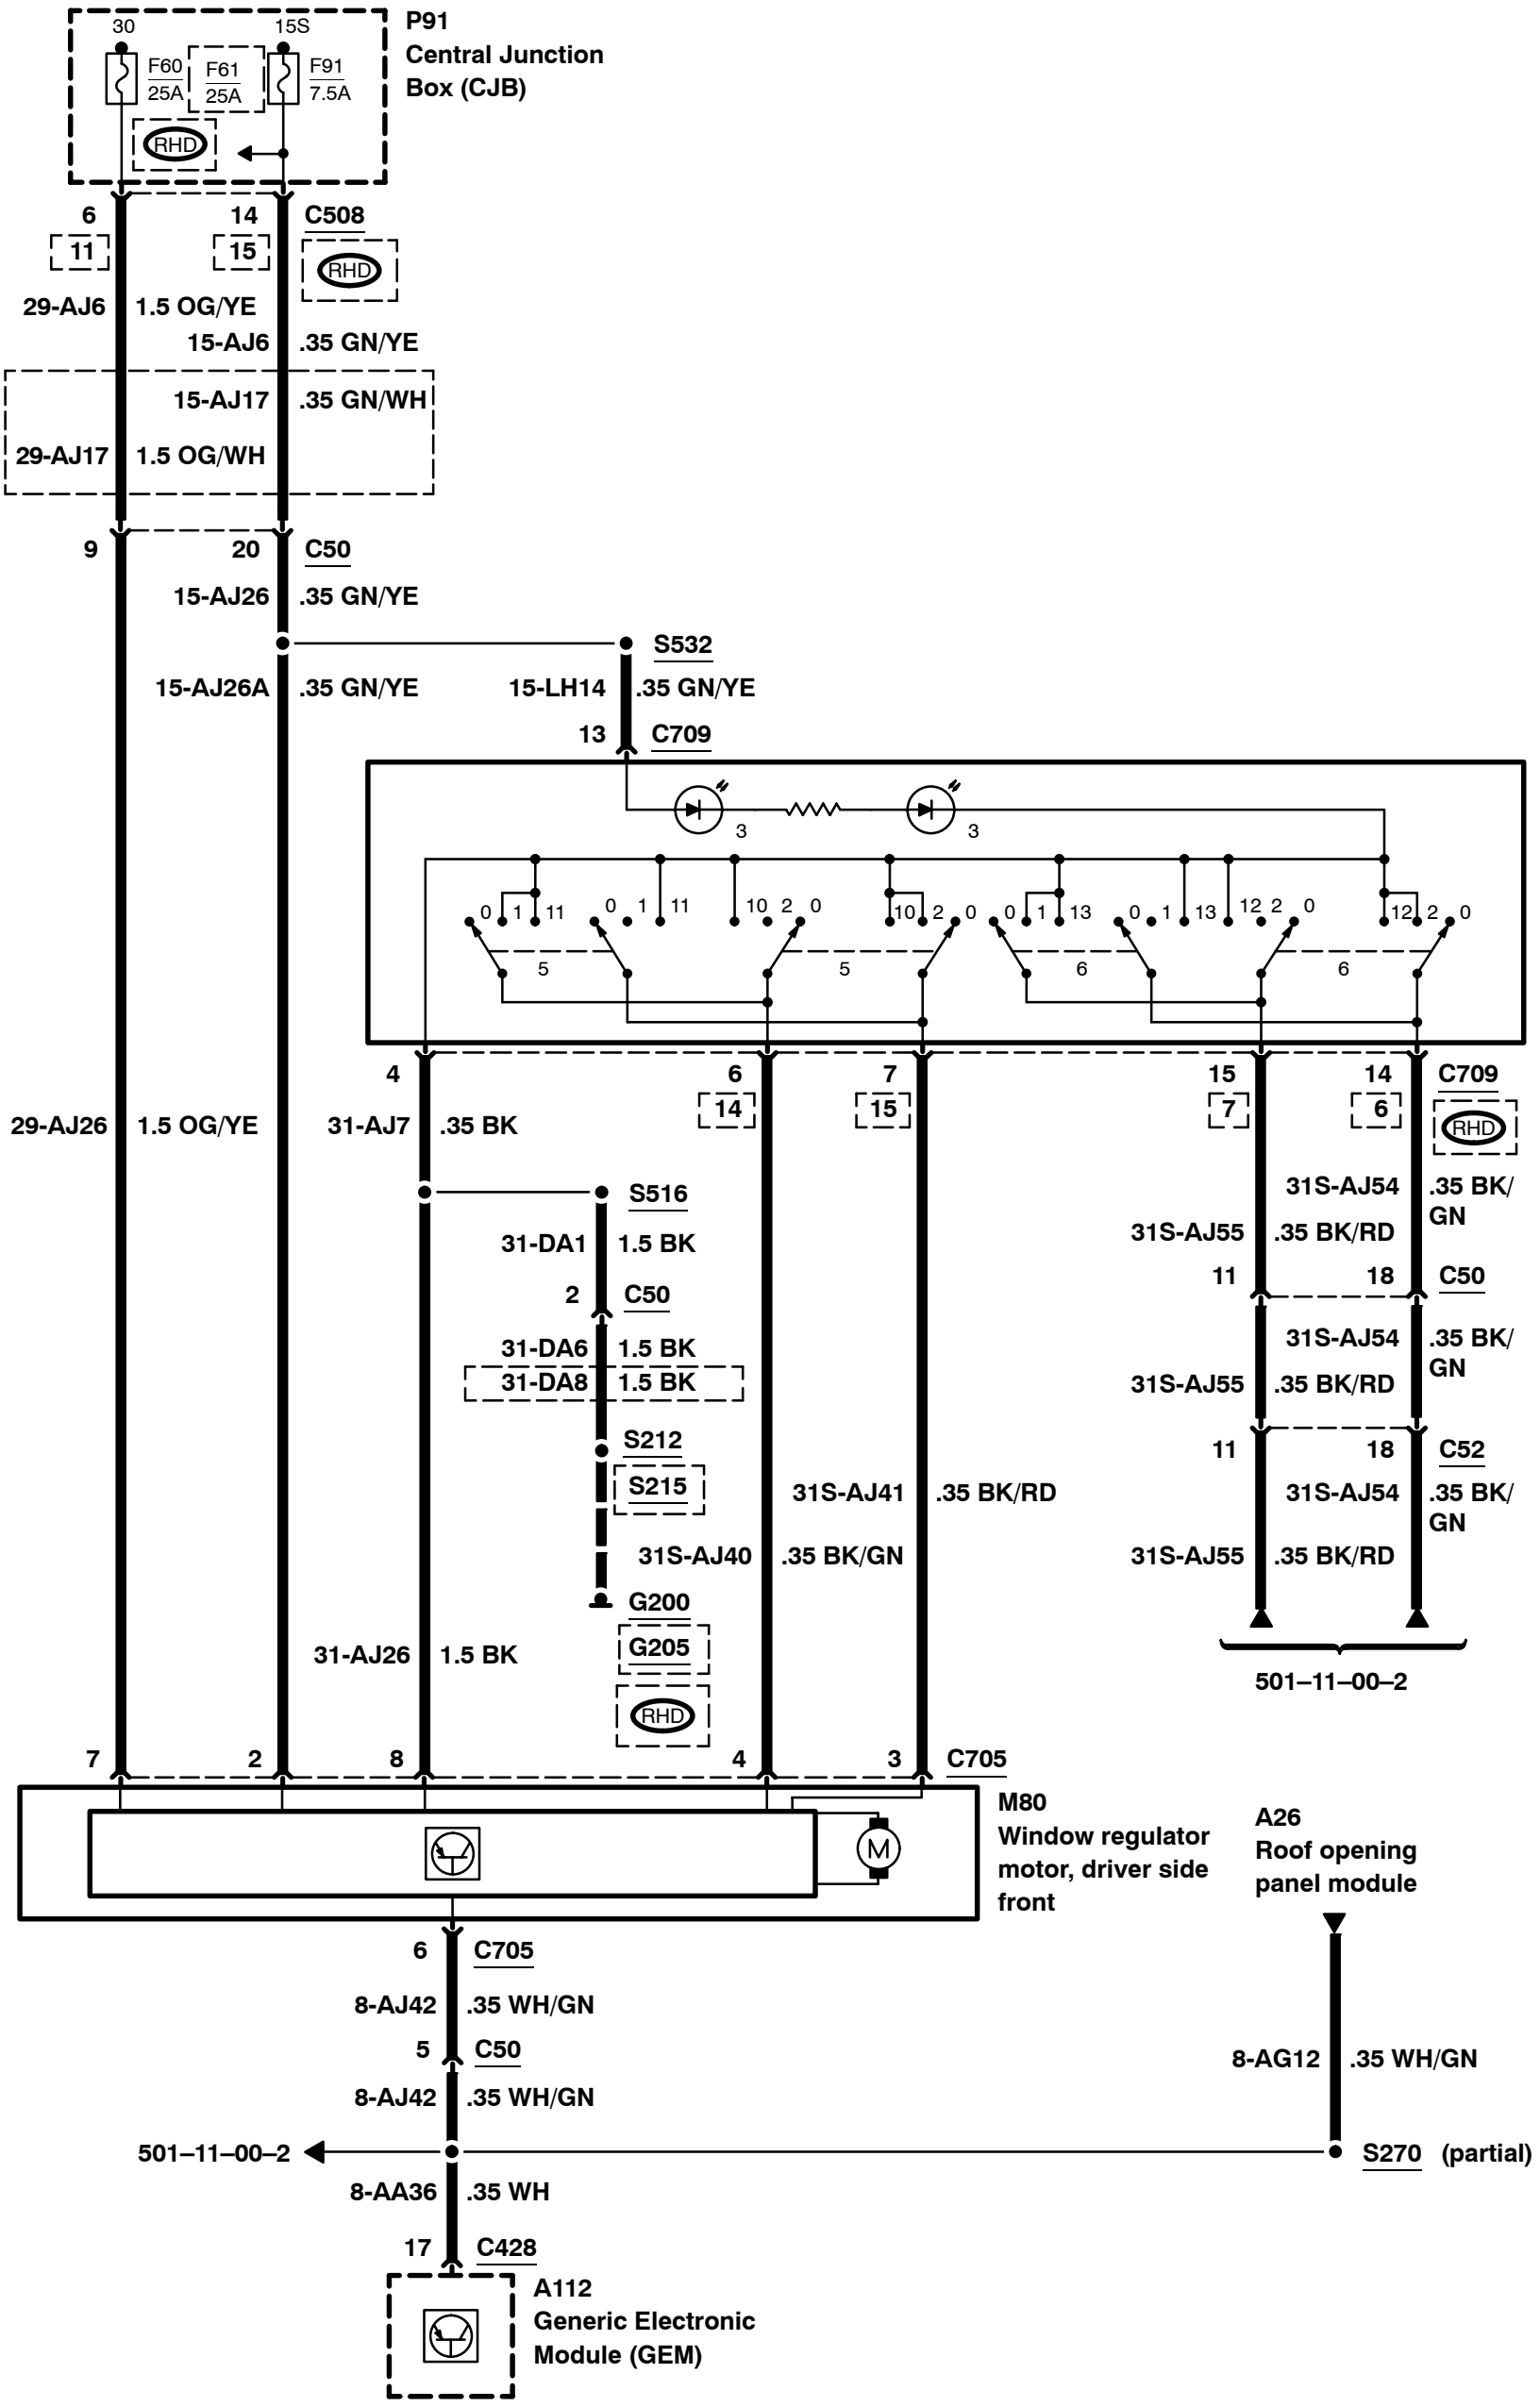


Glass, Frames and Mechanisms – Front power windows, Passenger side

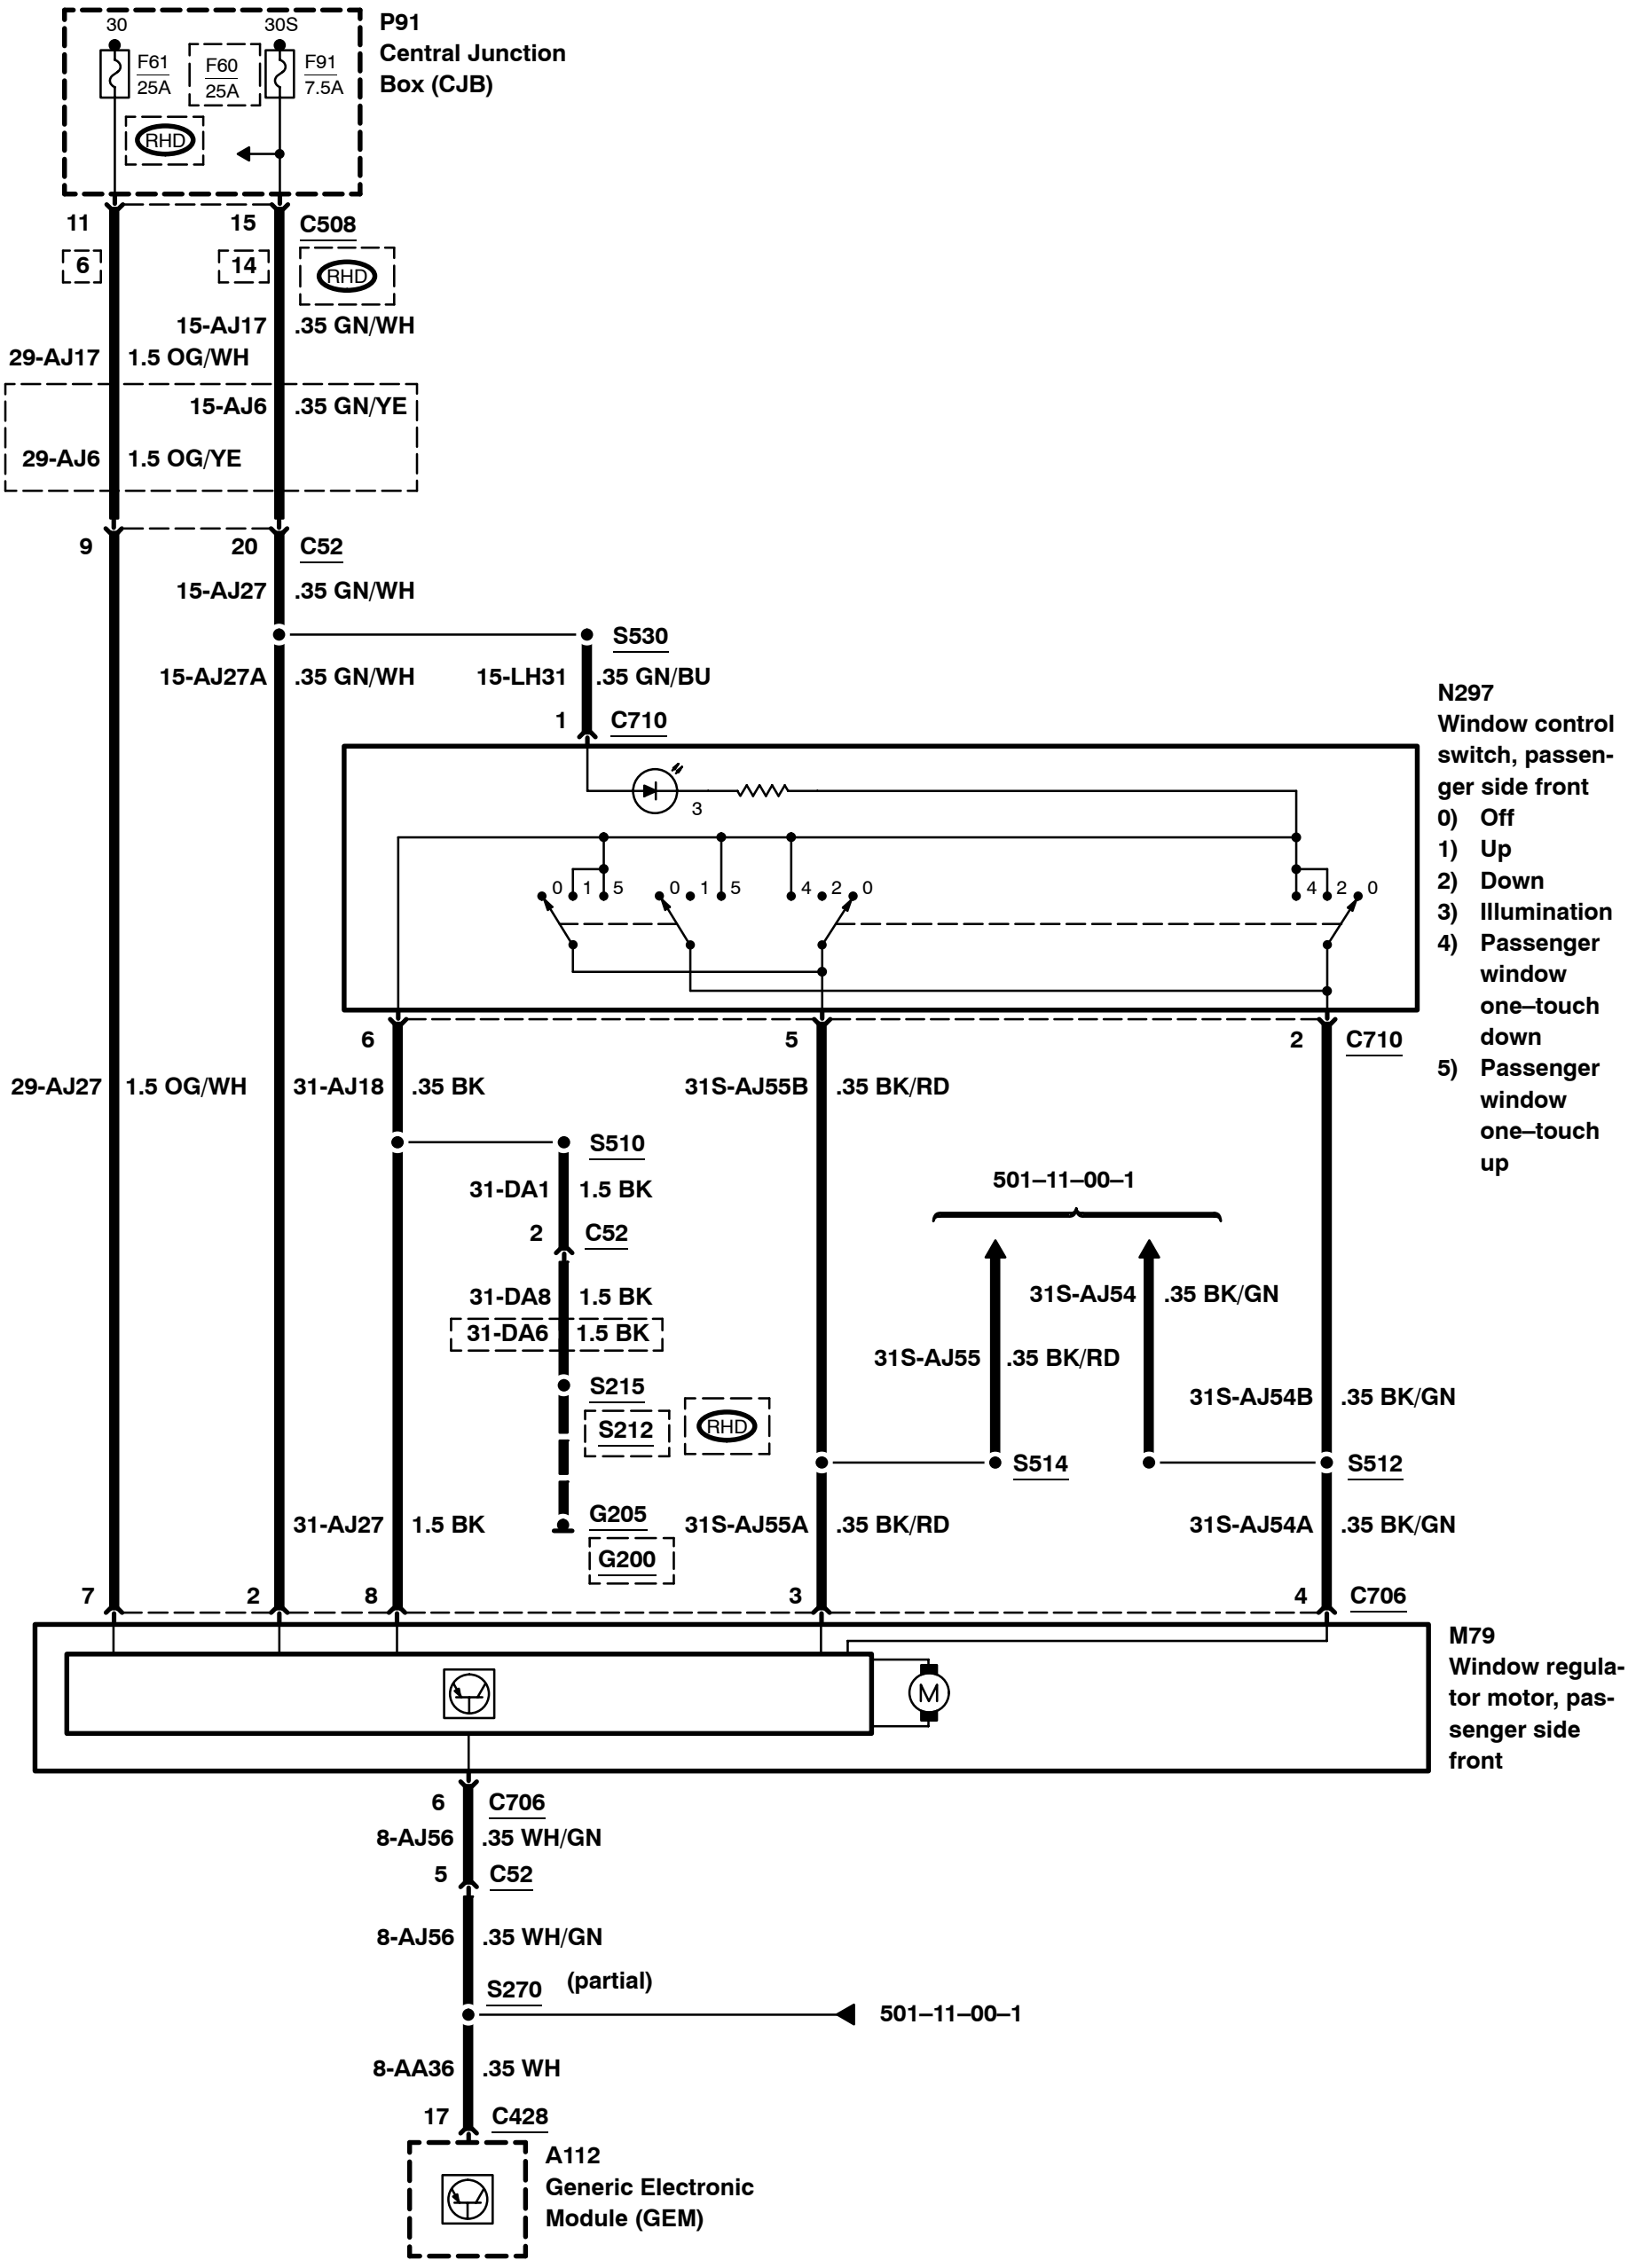


Glass, Frames and Mechanisms – front and rear power windows, Driver side front

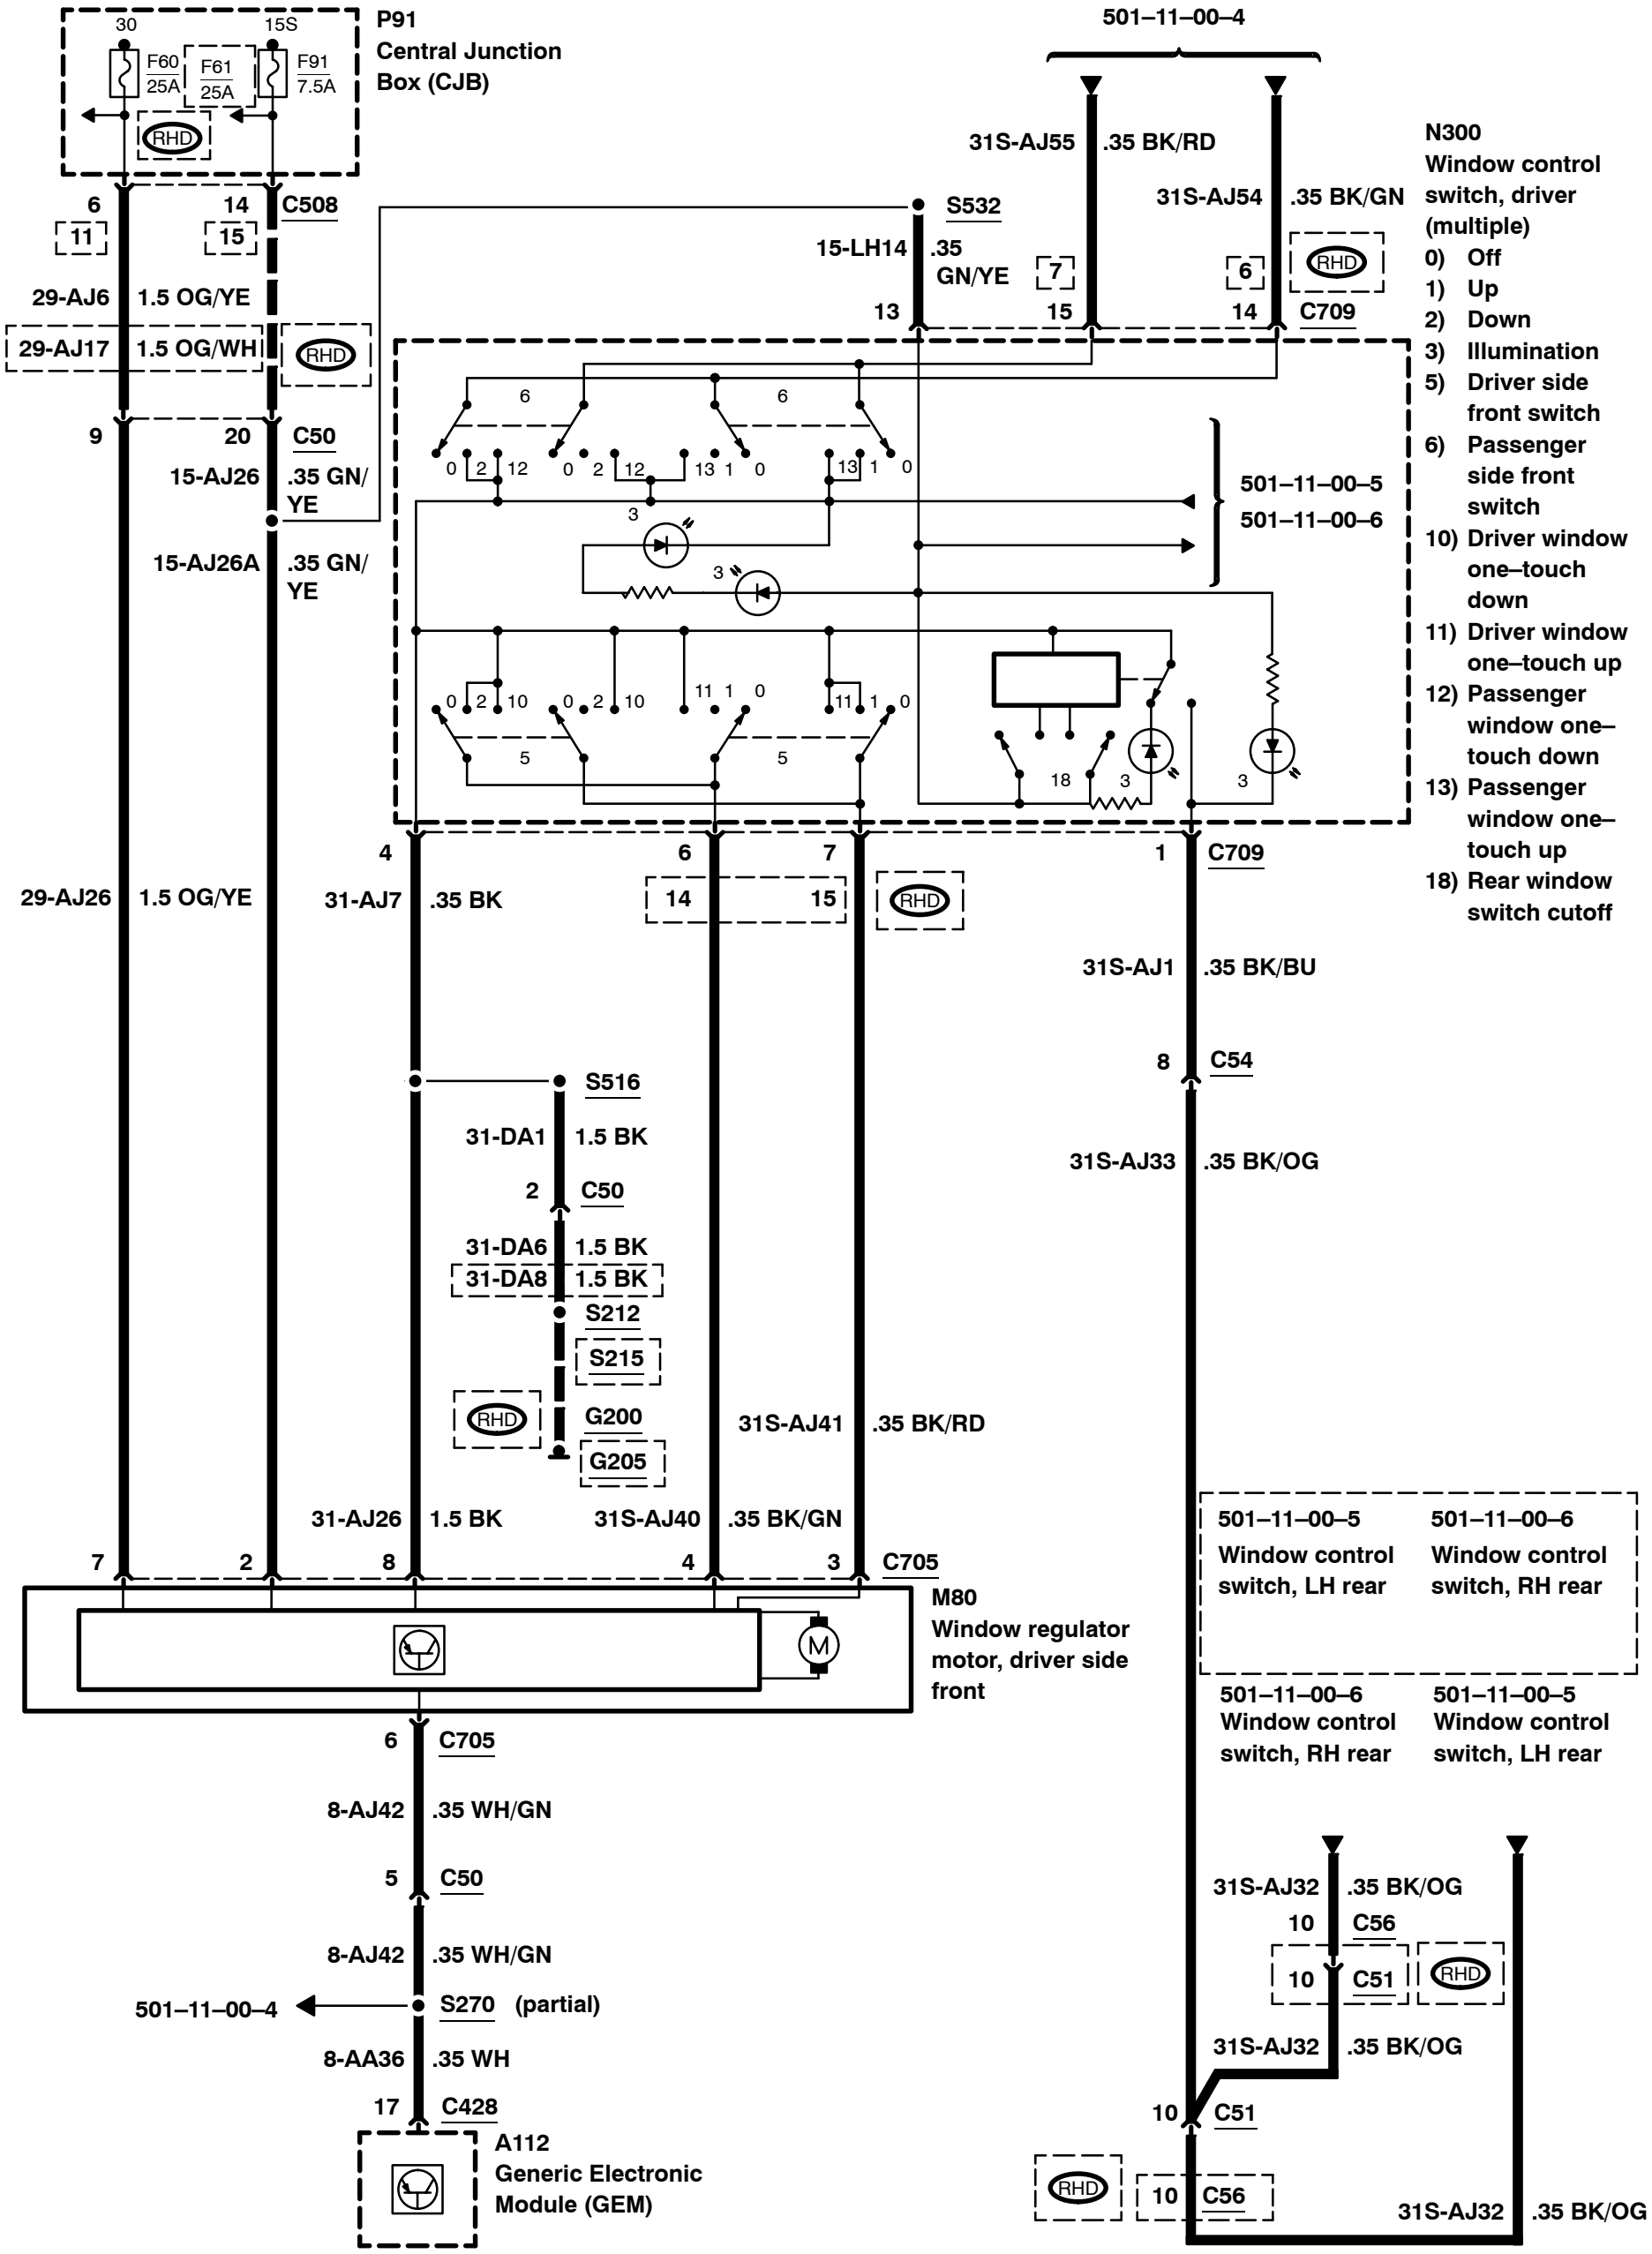


Glass, Frames and Mechanisms – front and rear power windows, Passenger side front

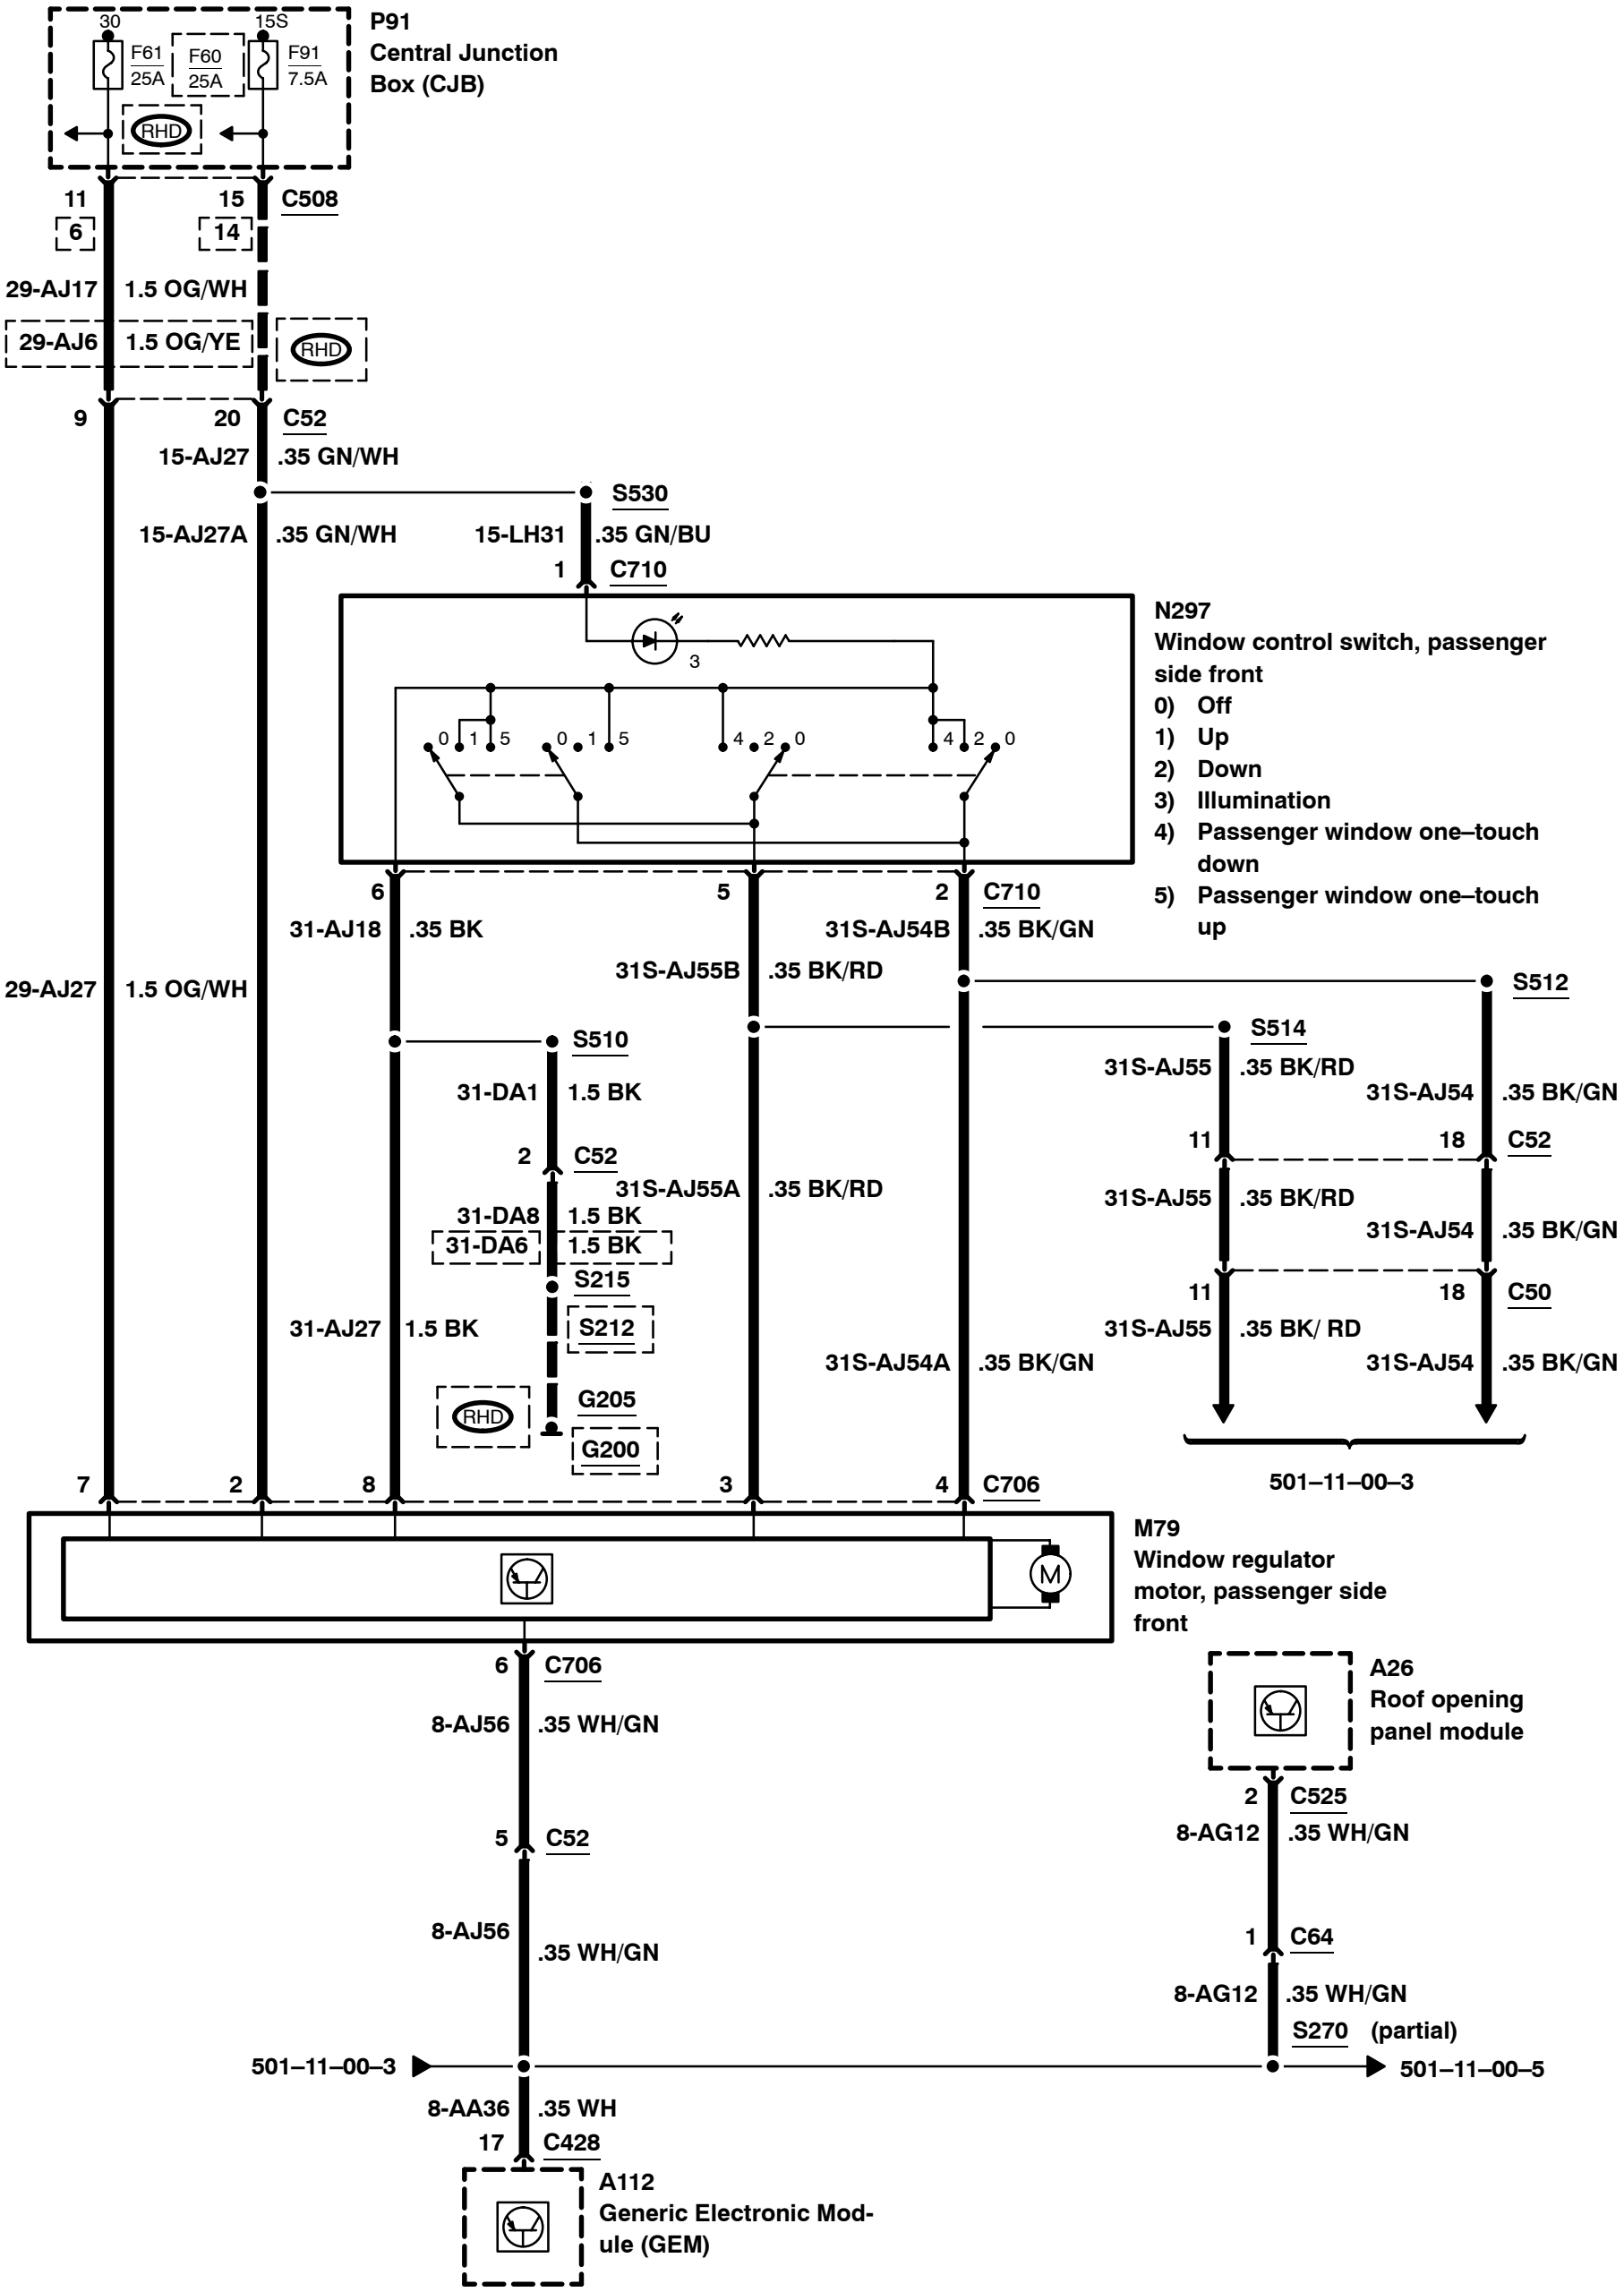


Glass, Frames and Mechanisms – front and rear power windows, LH rear door

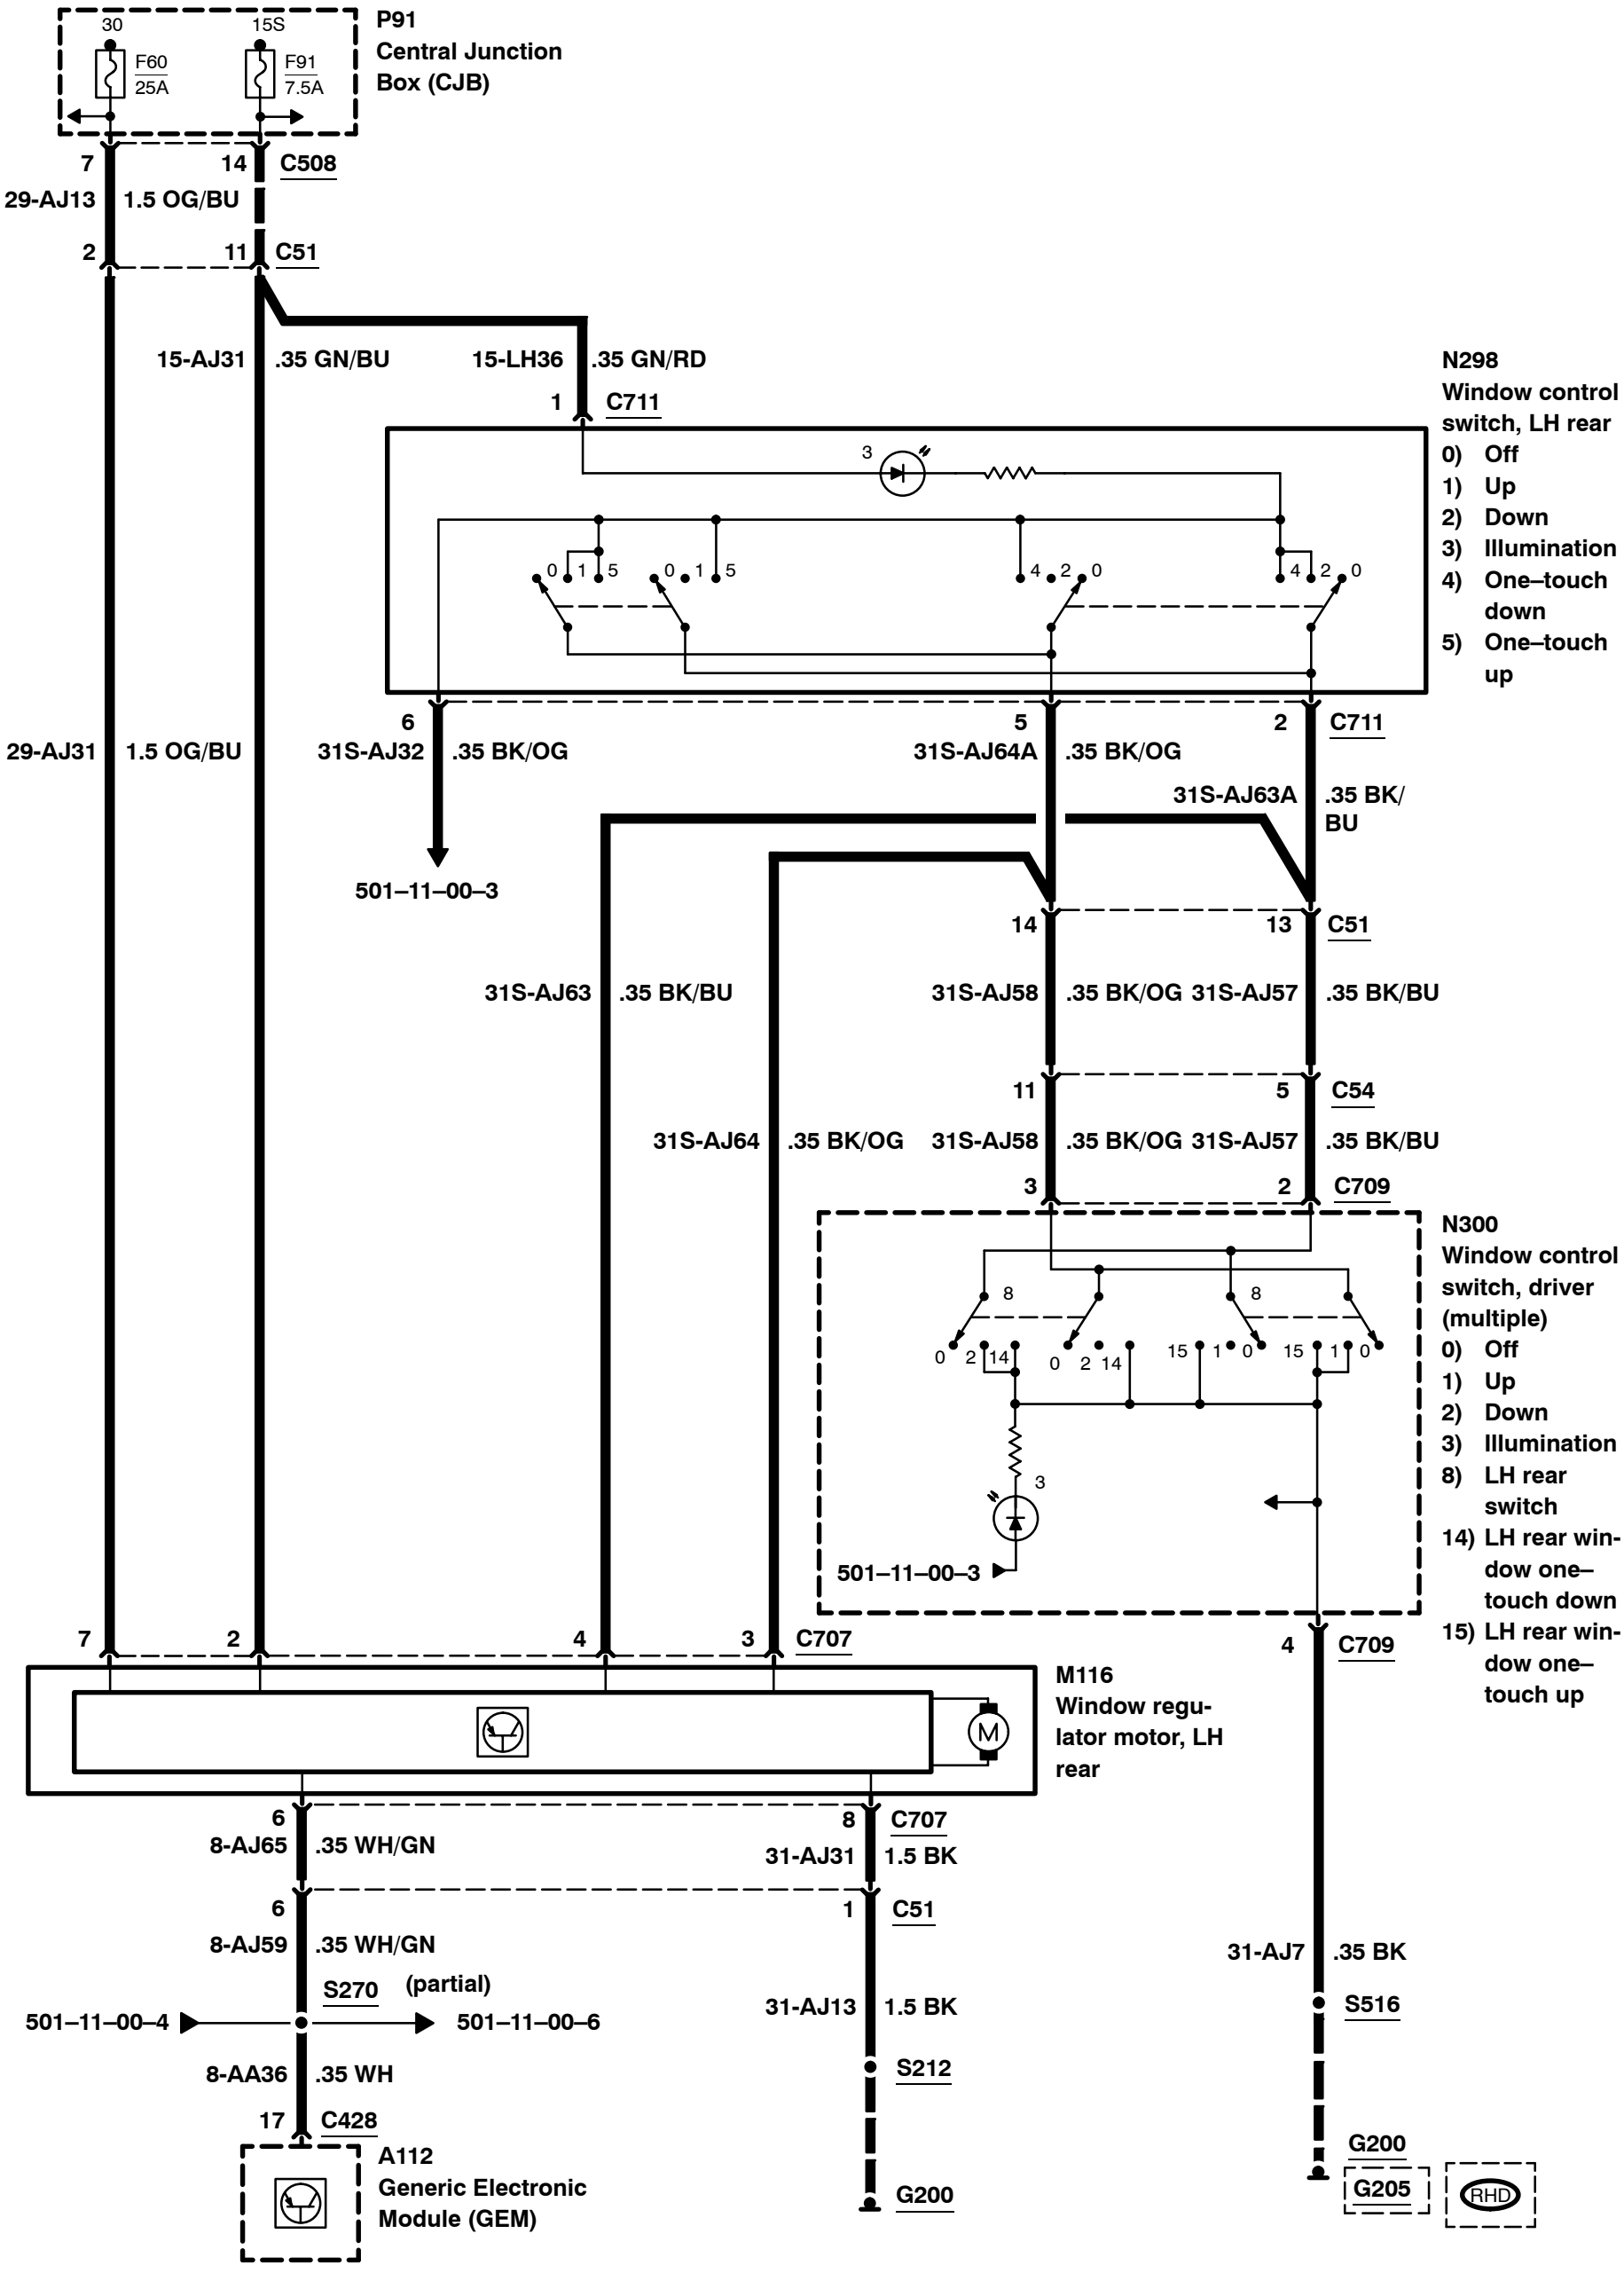


Glass, Frames and Mechanisms – front and rear power windows, RH rear door

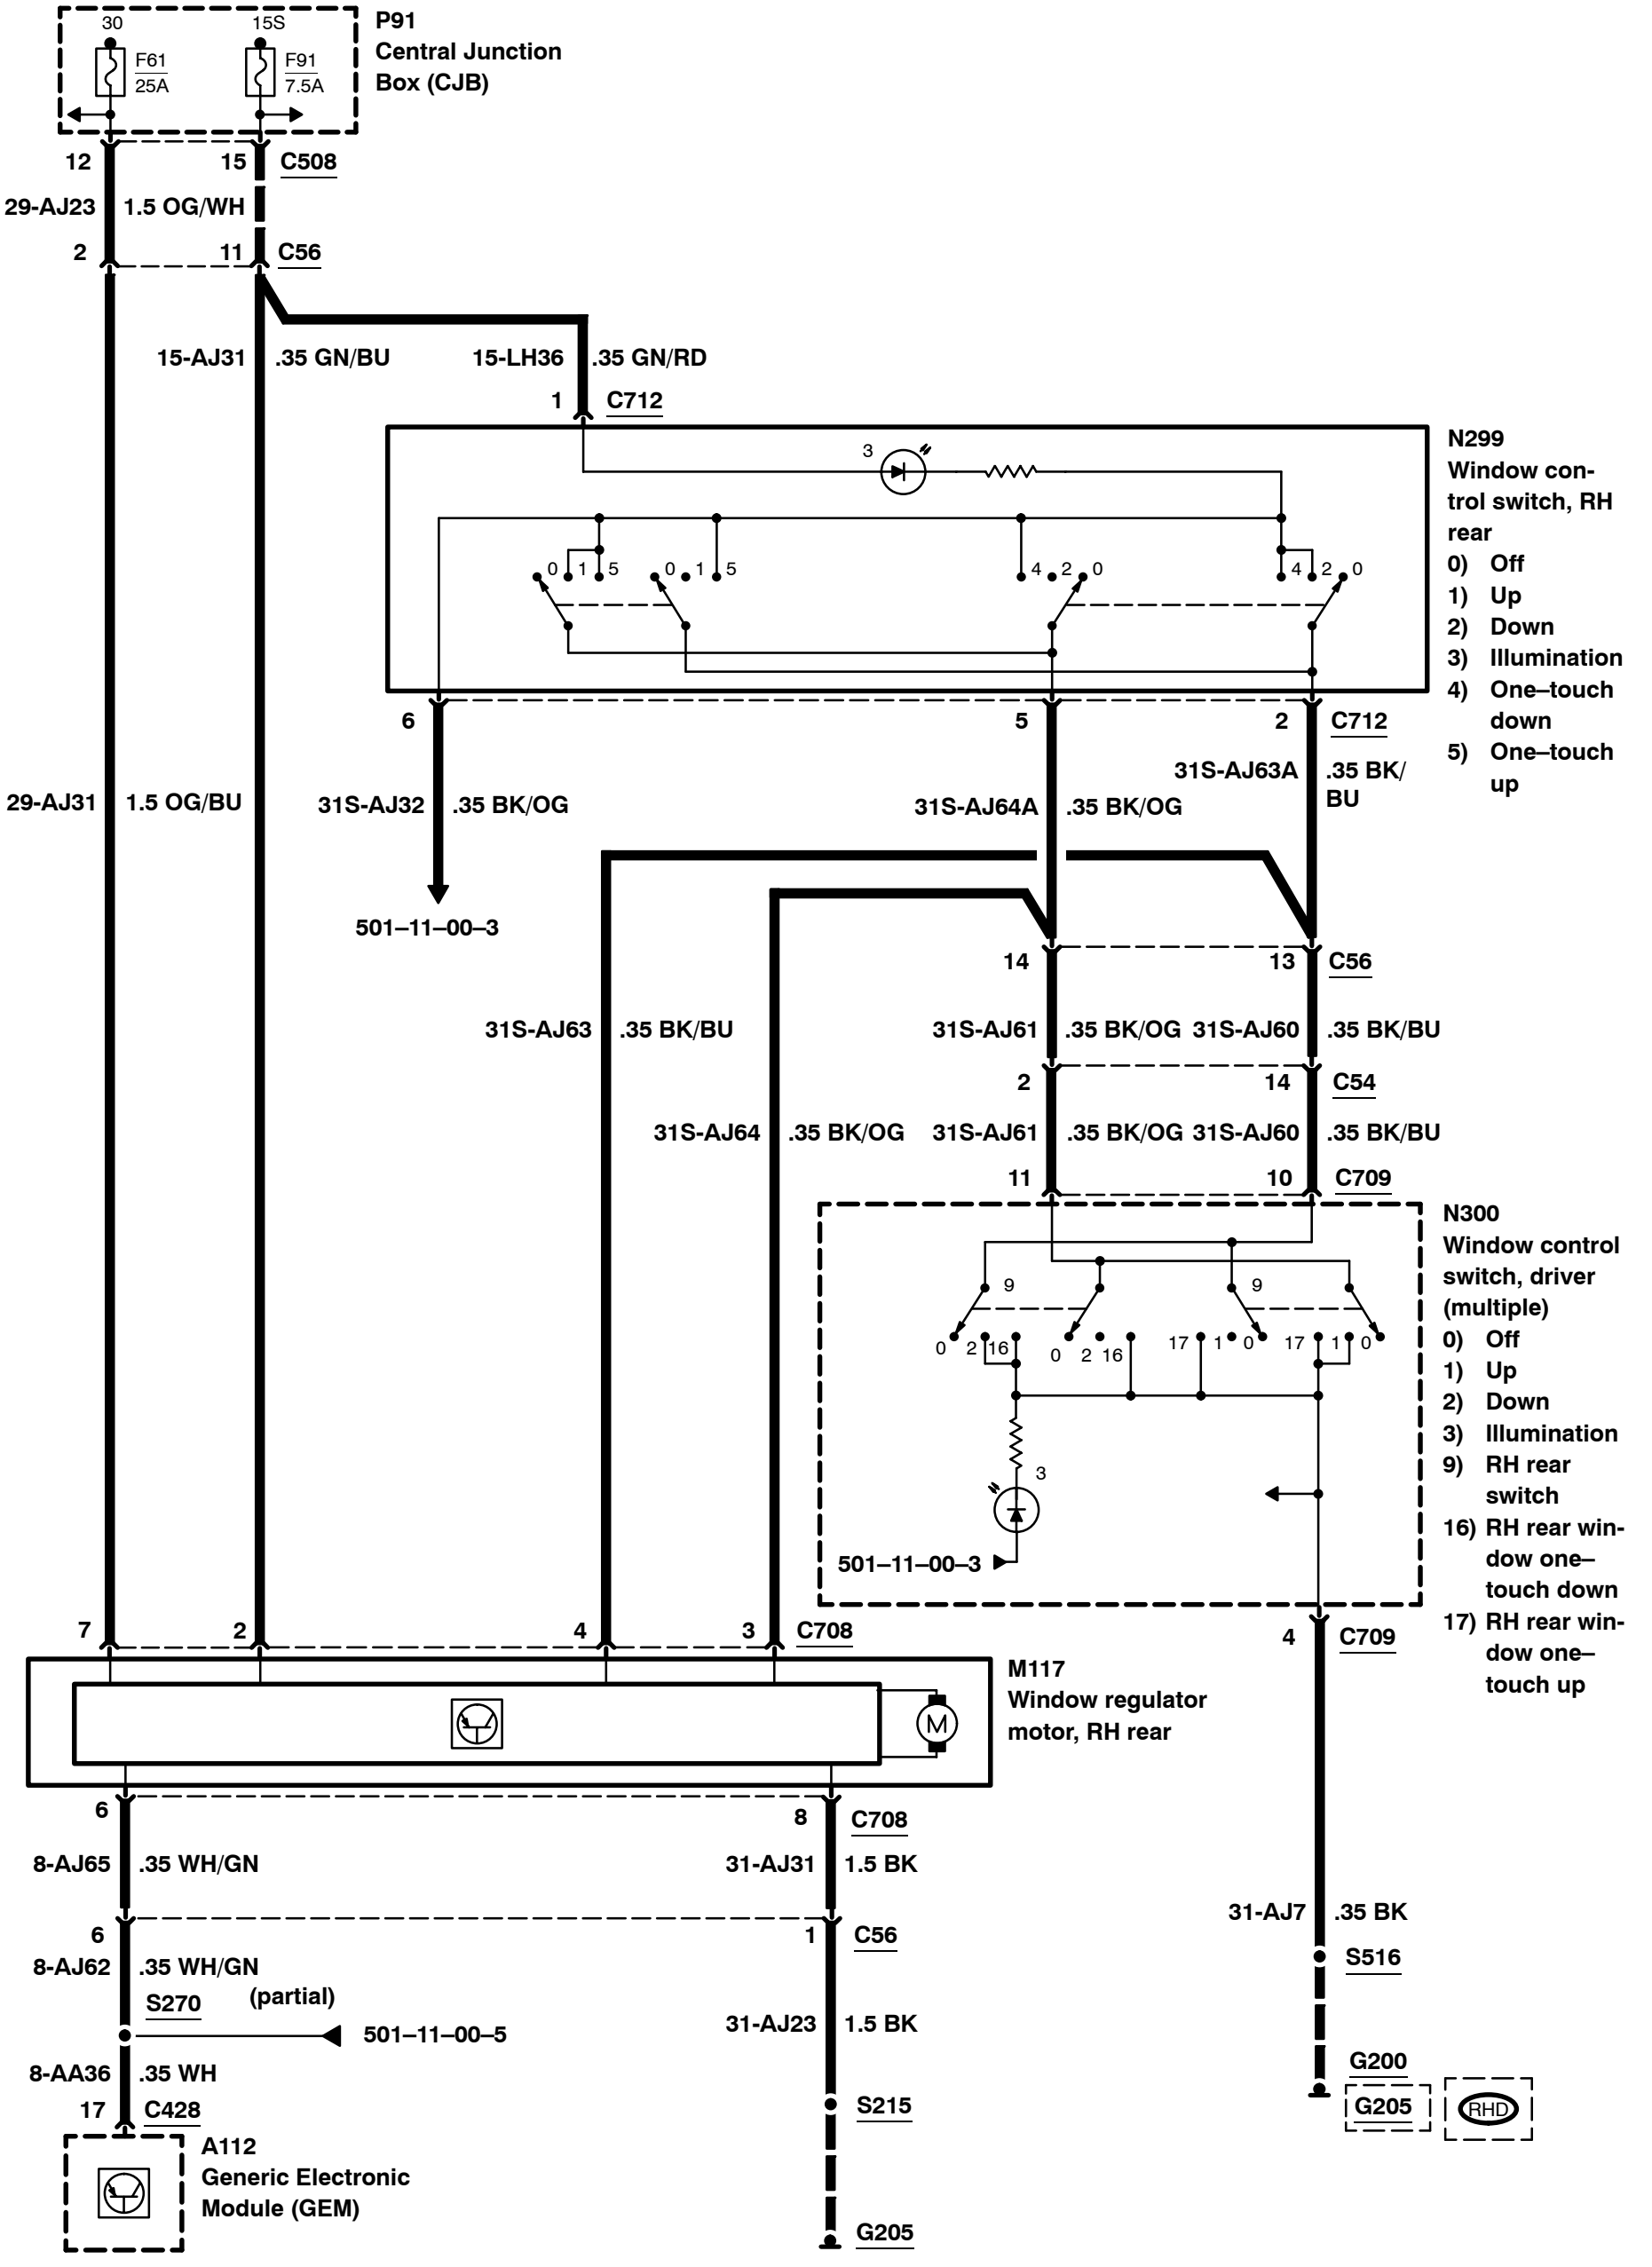


Glass, Frames and Mechanisms – Heated windshield

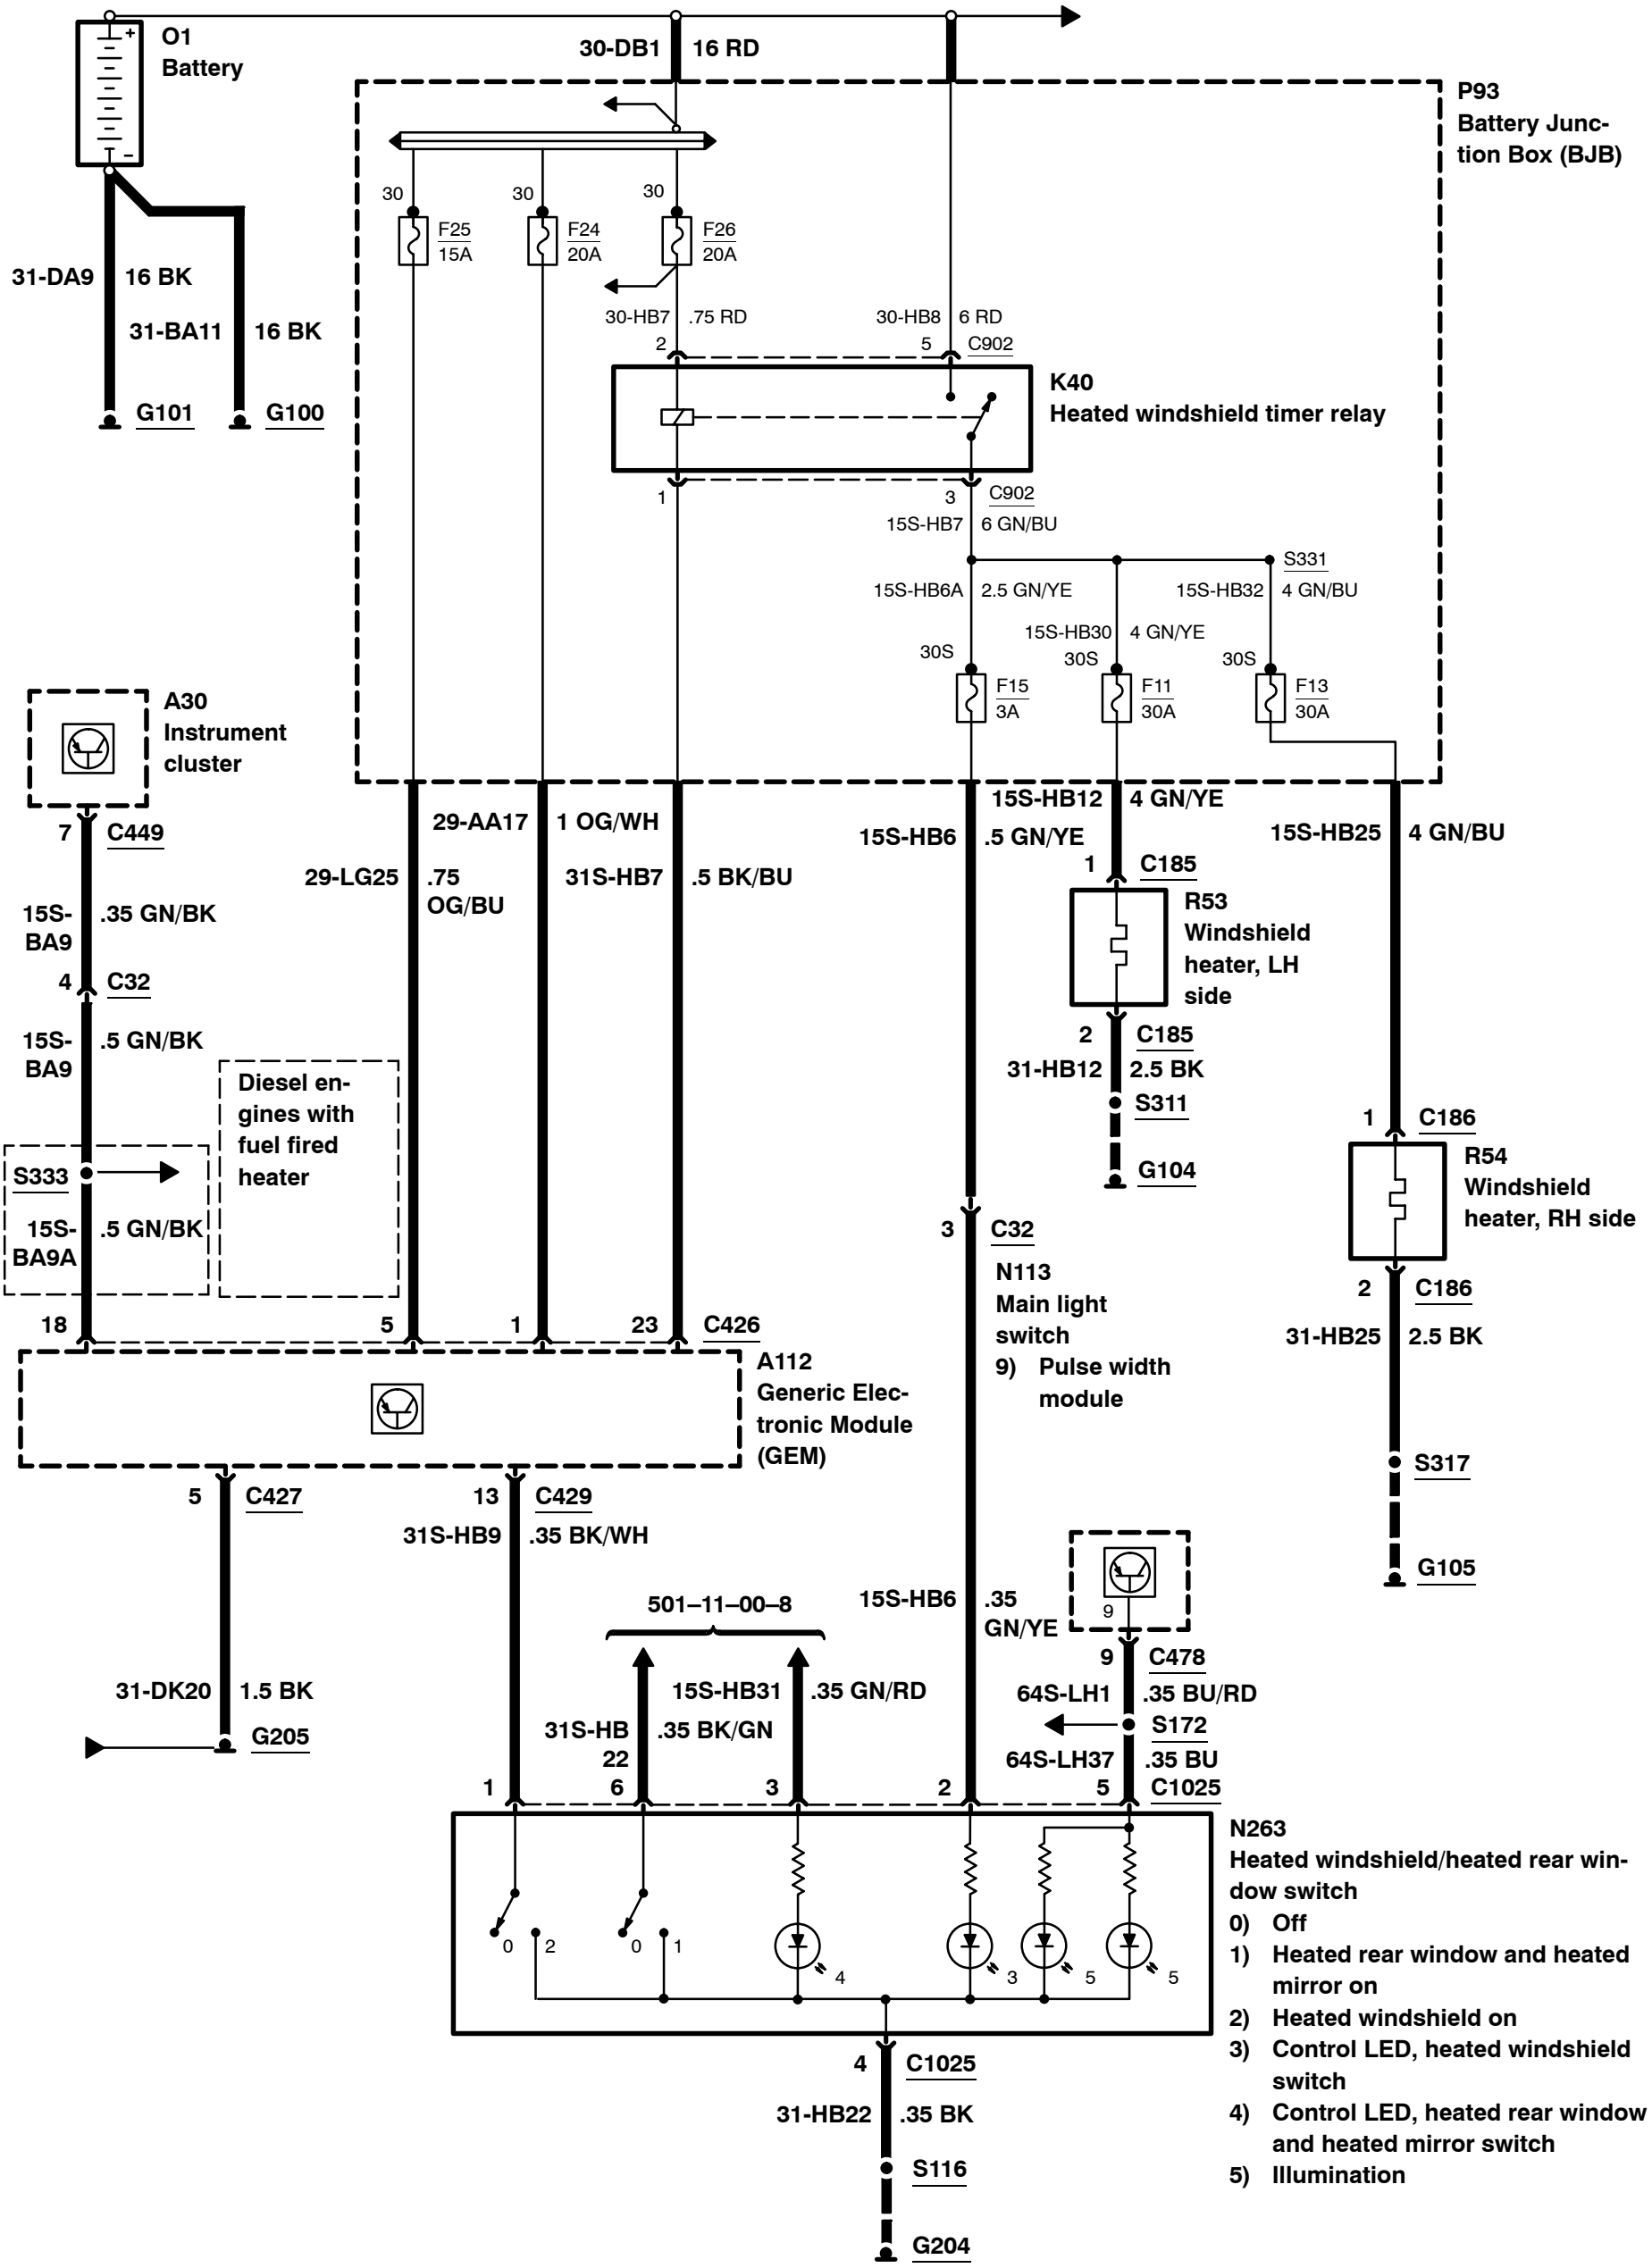


Glass, Frames and Mechanisms – Heated rear window, Heated exterior mirrors

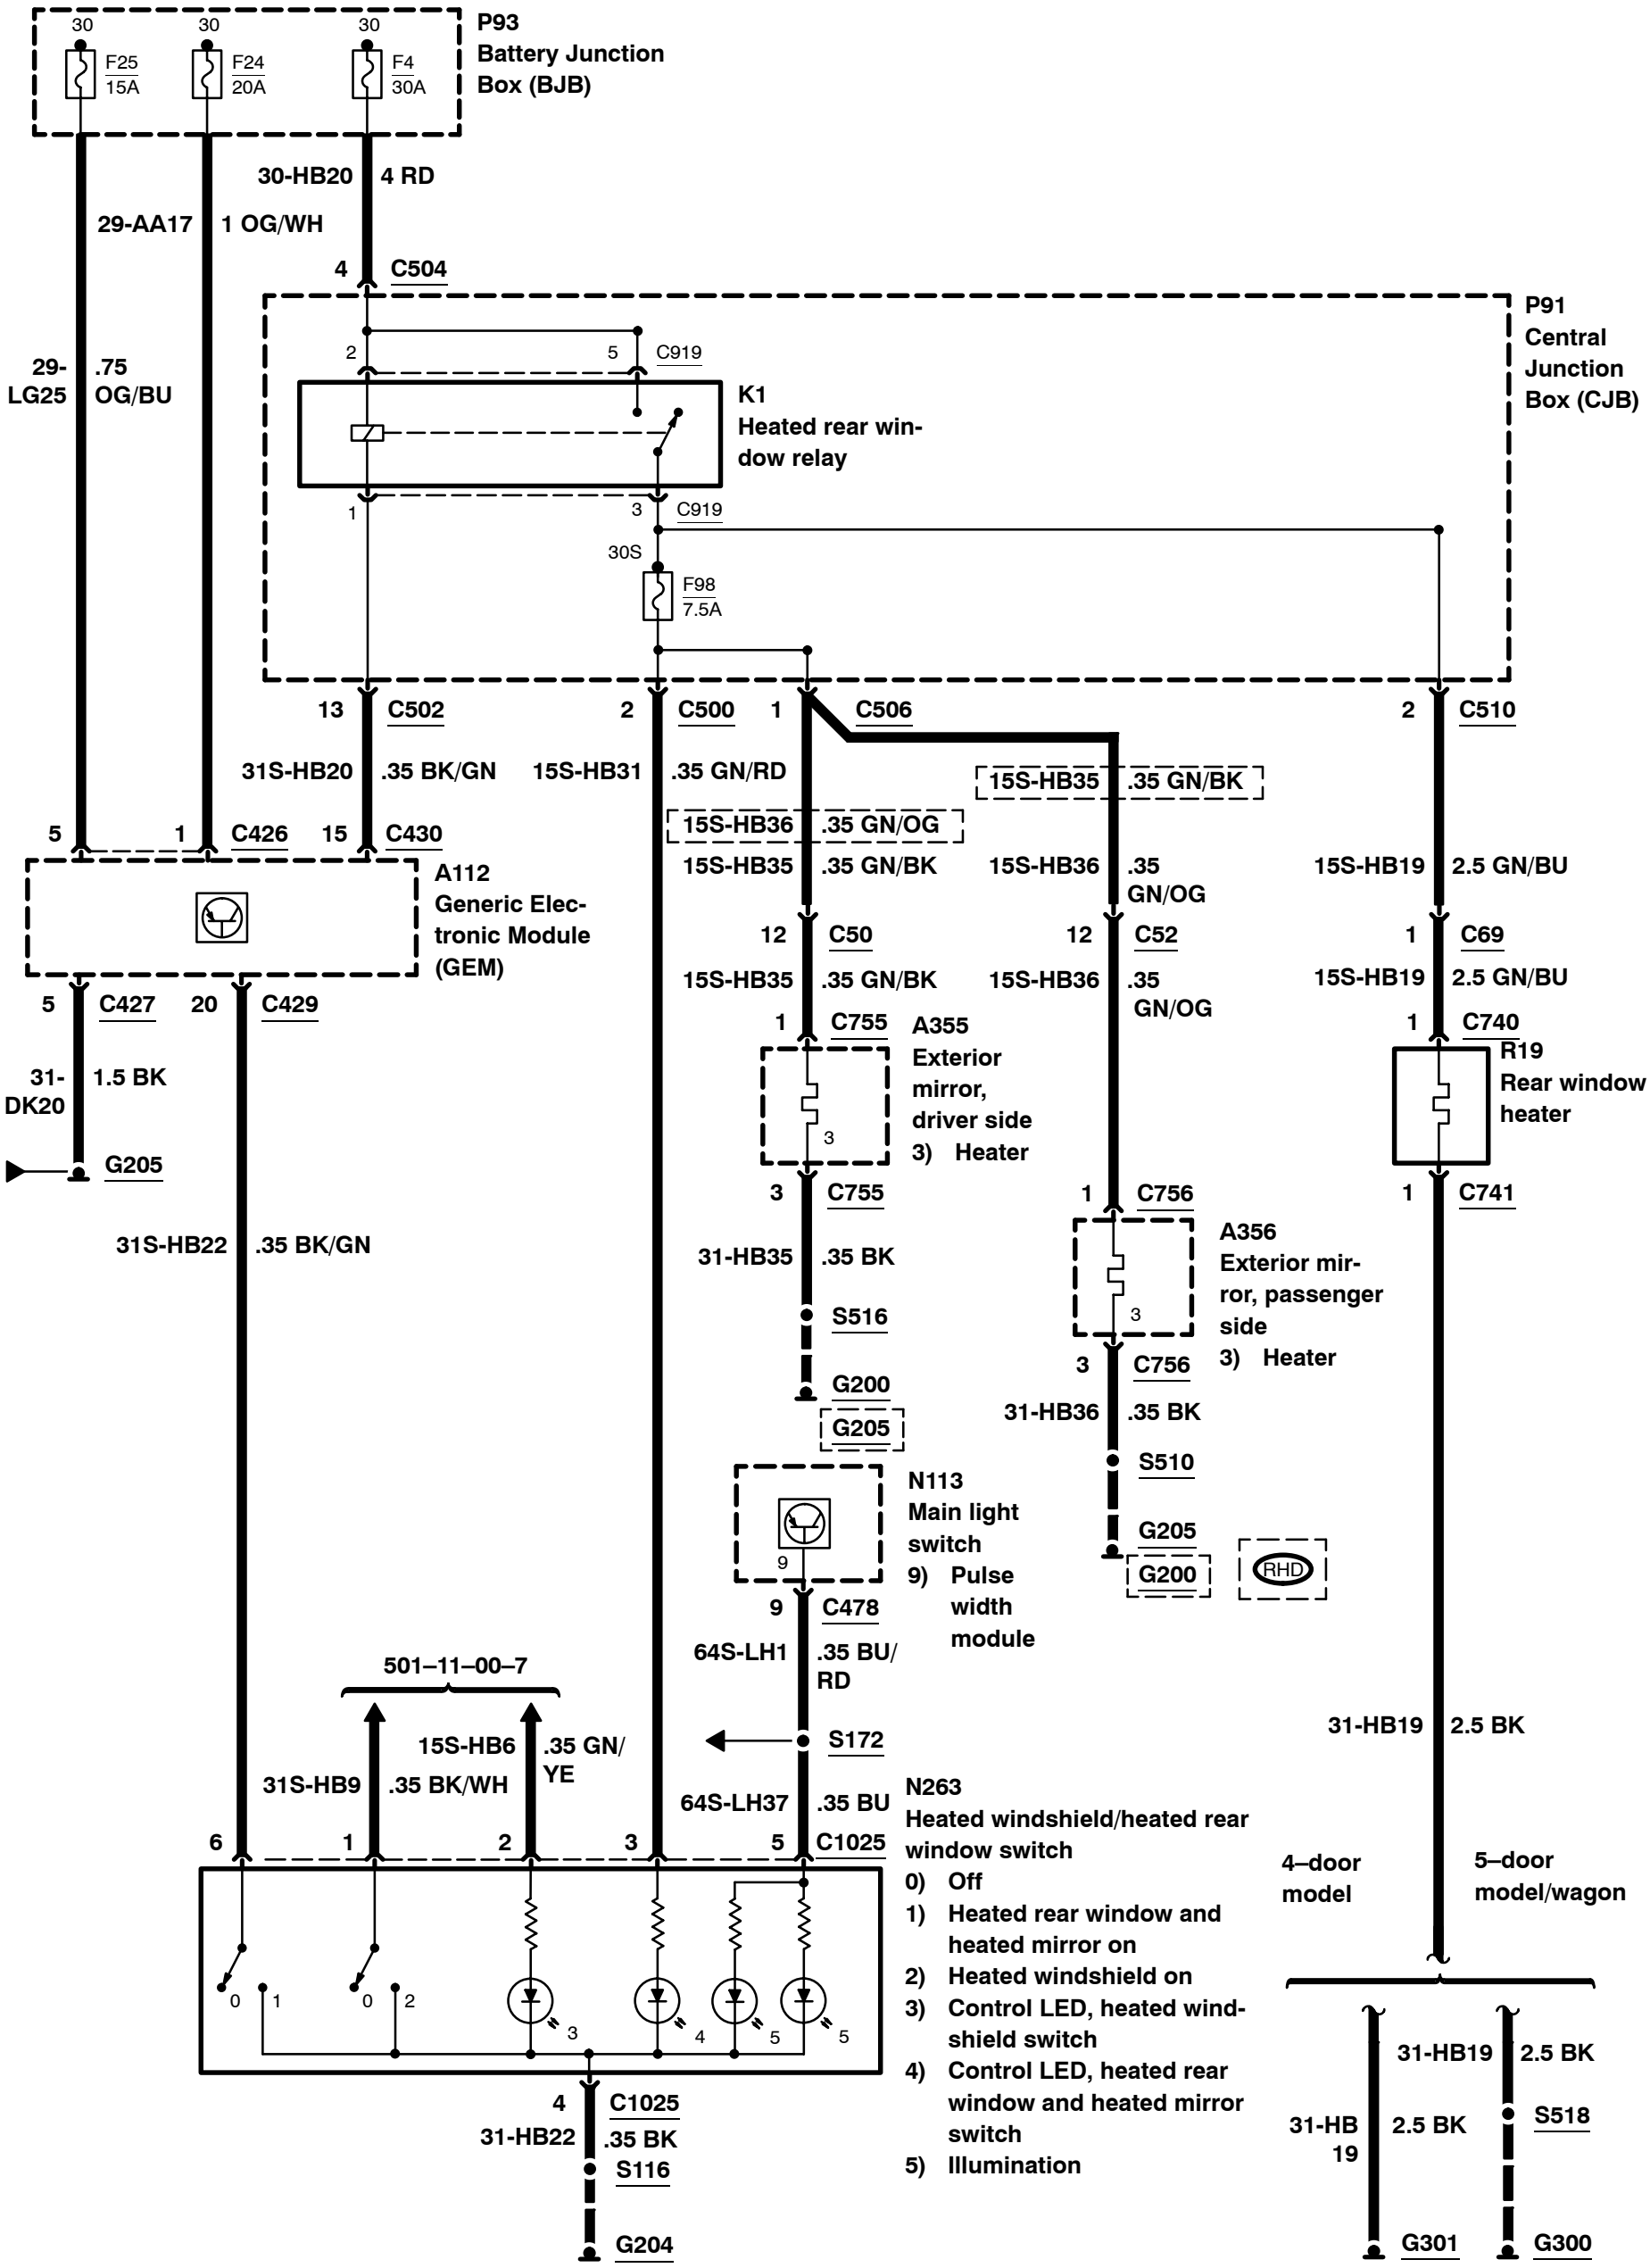


Instrument Panel and Console – Cigar lighter

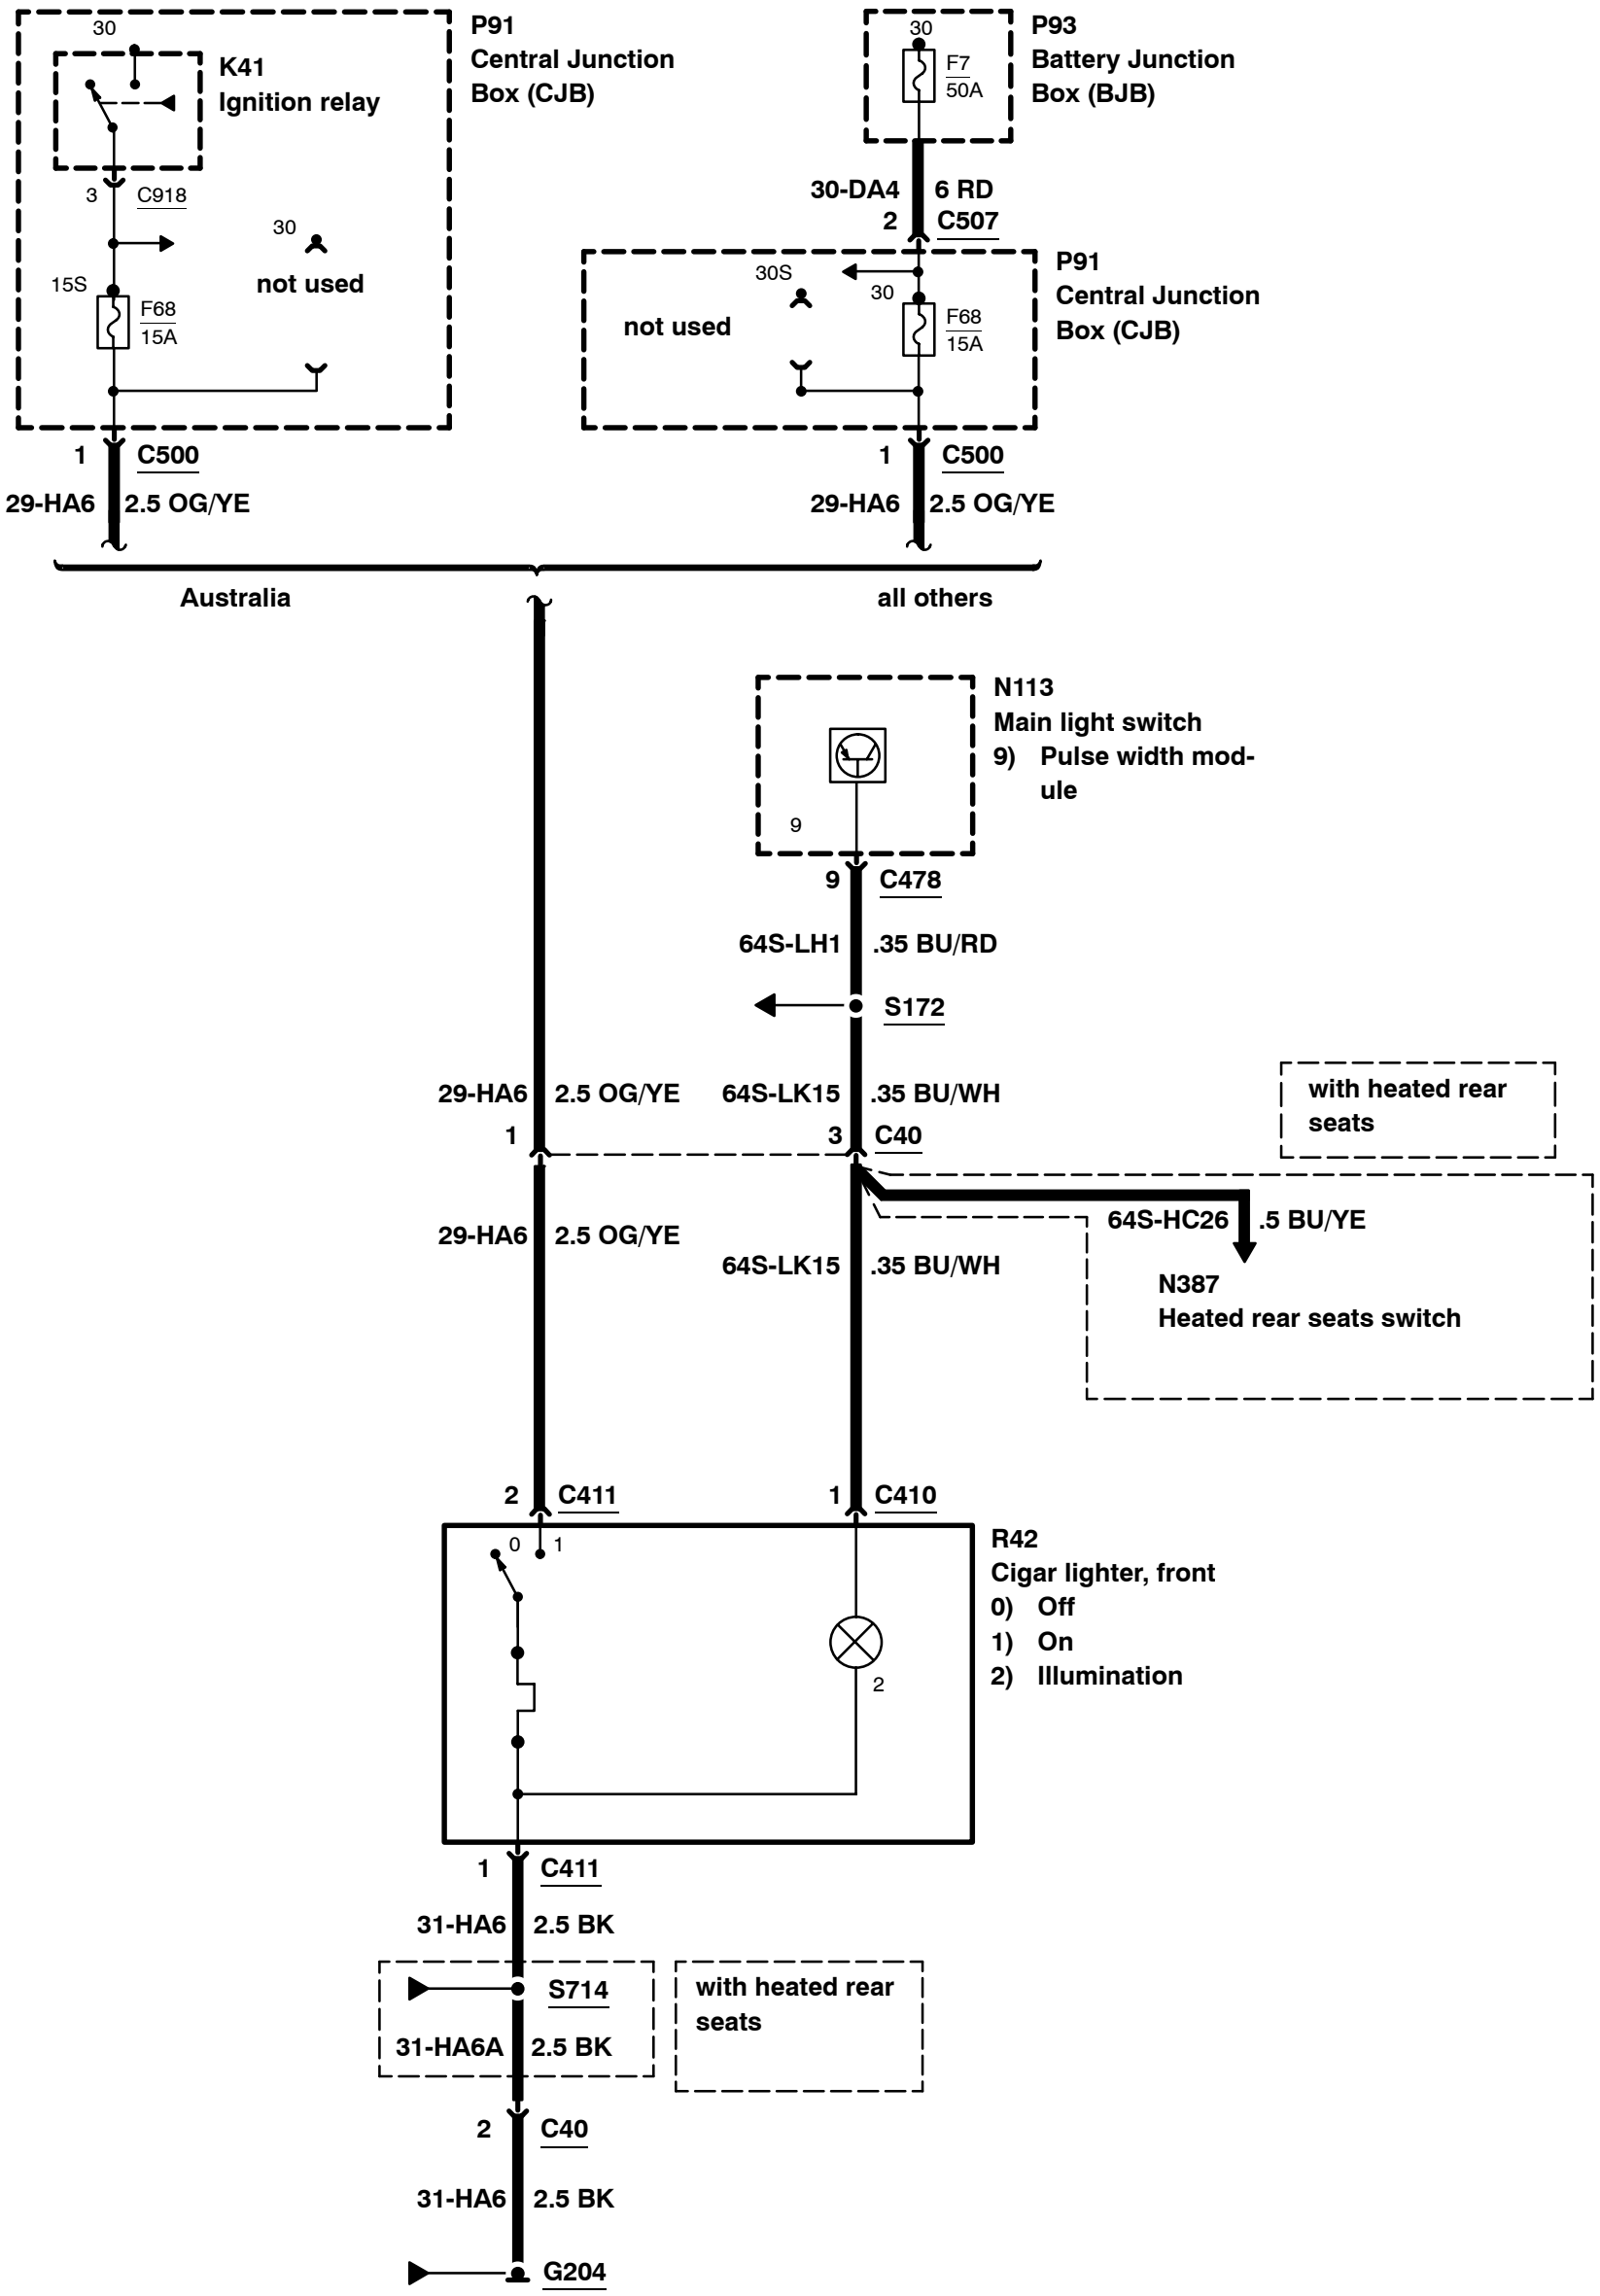


Instrument Panel and Console – Rear power point

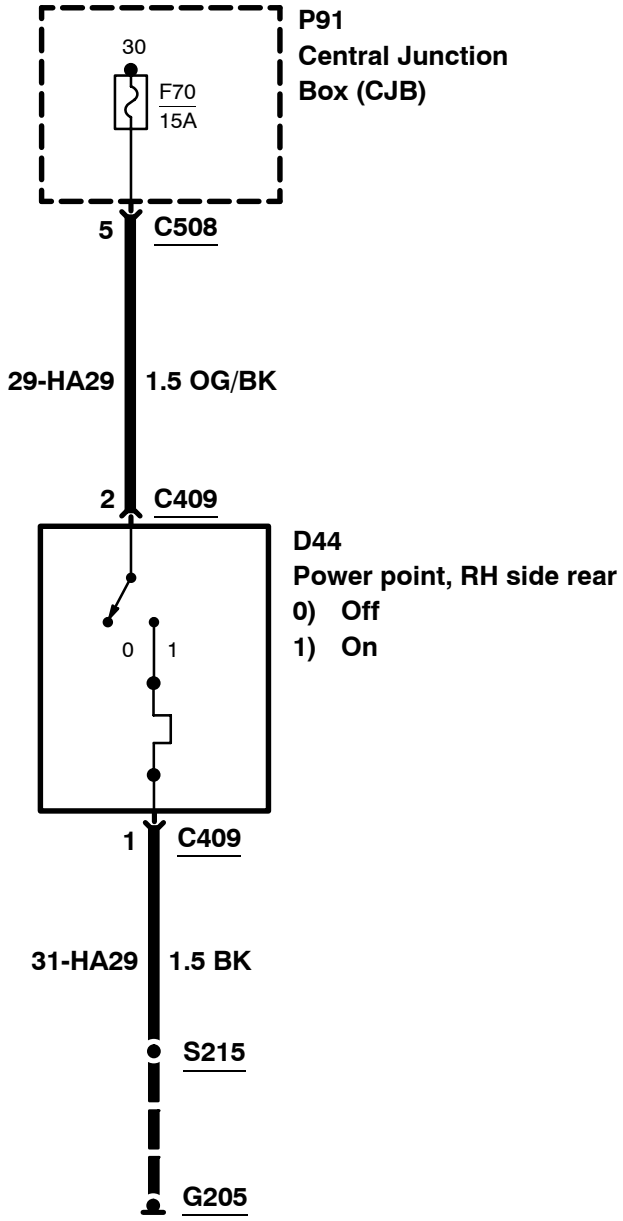


Handles, Locks, Latches and Entry Systems

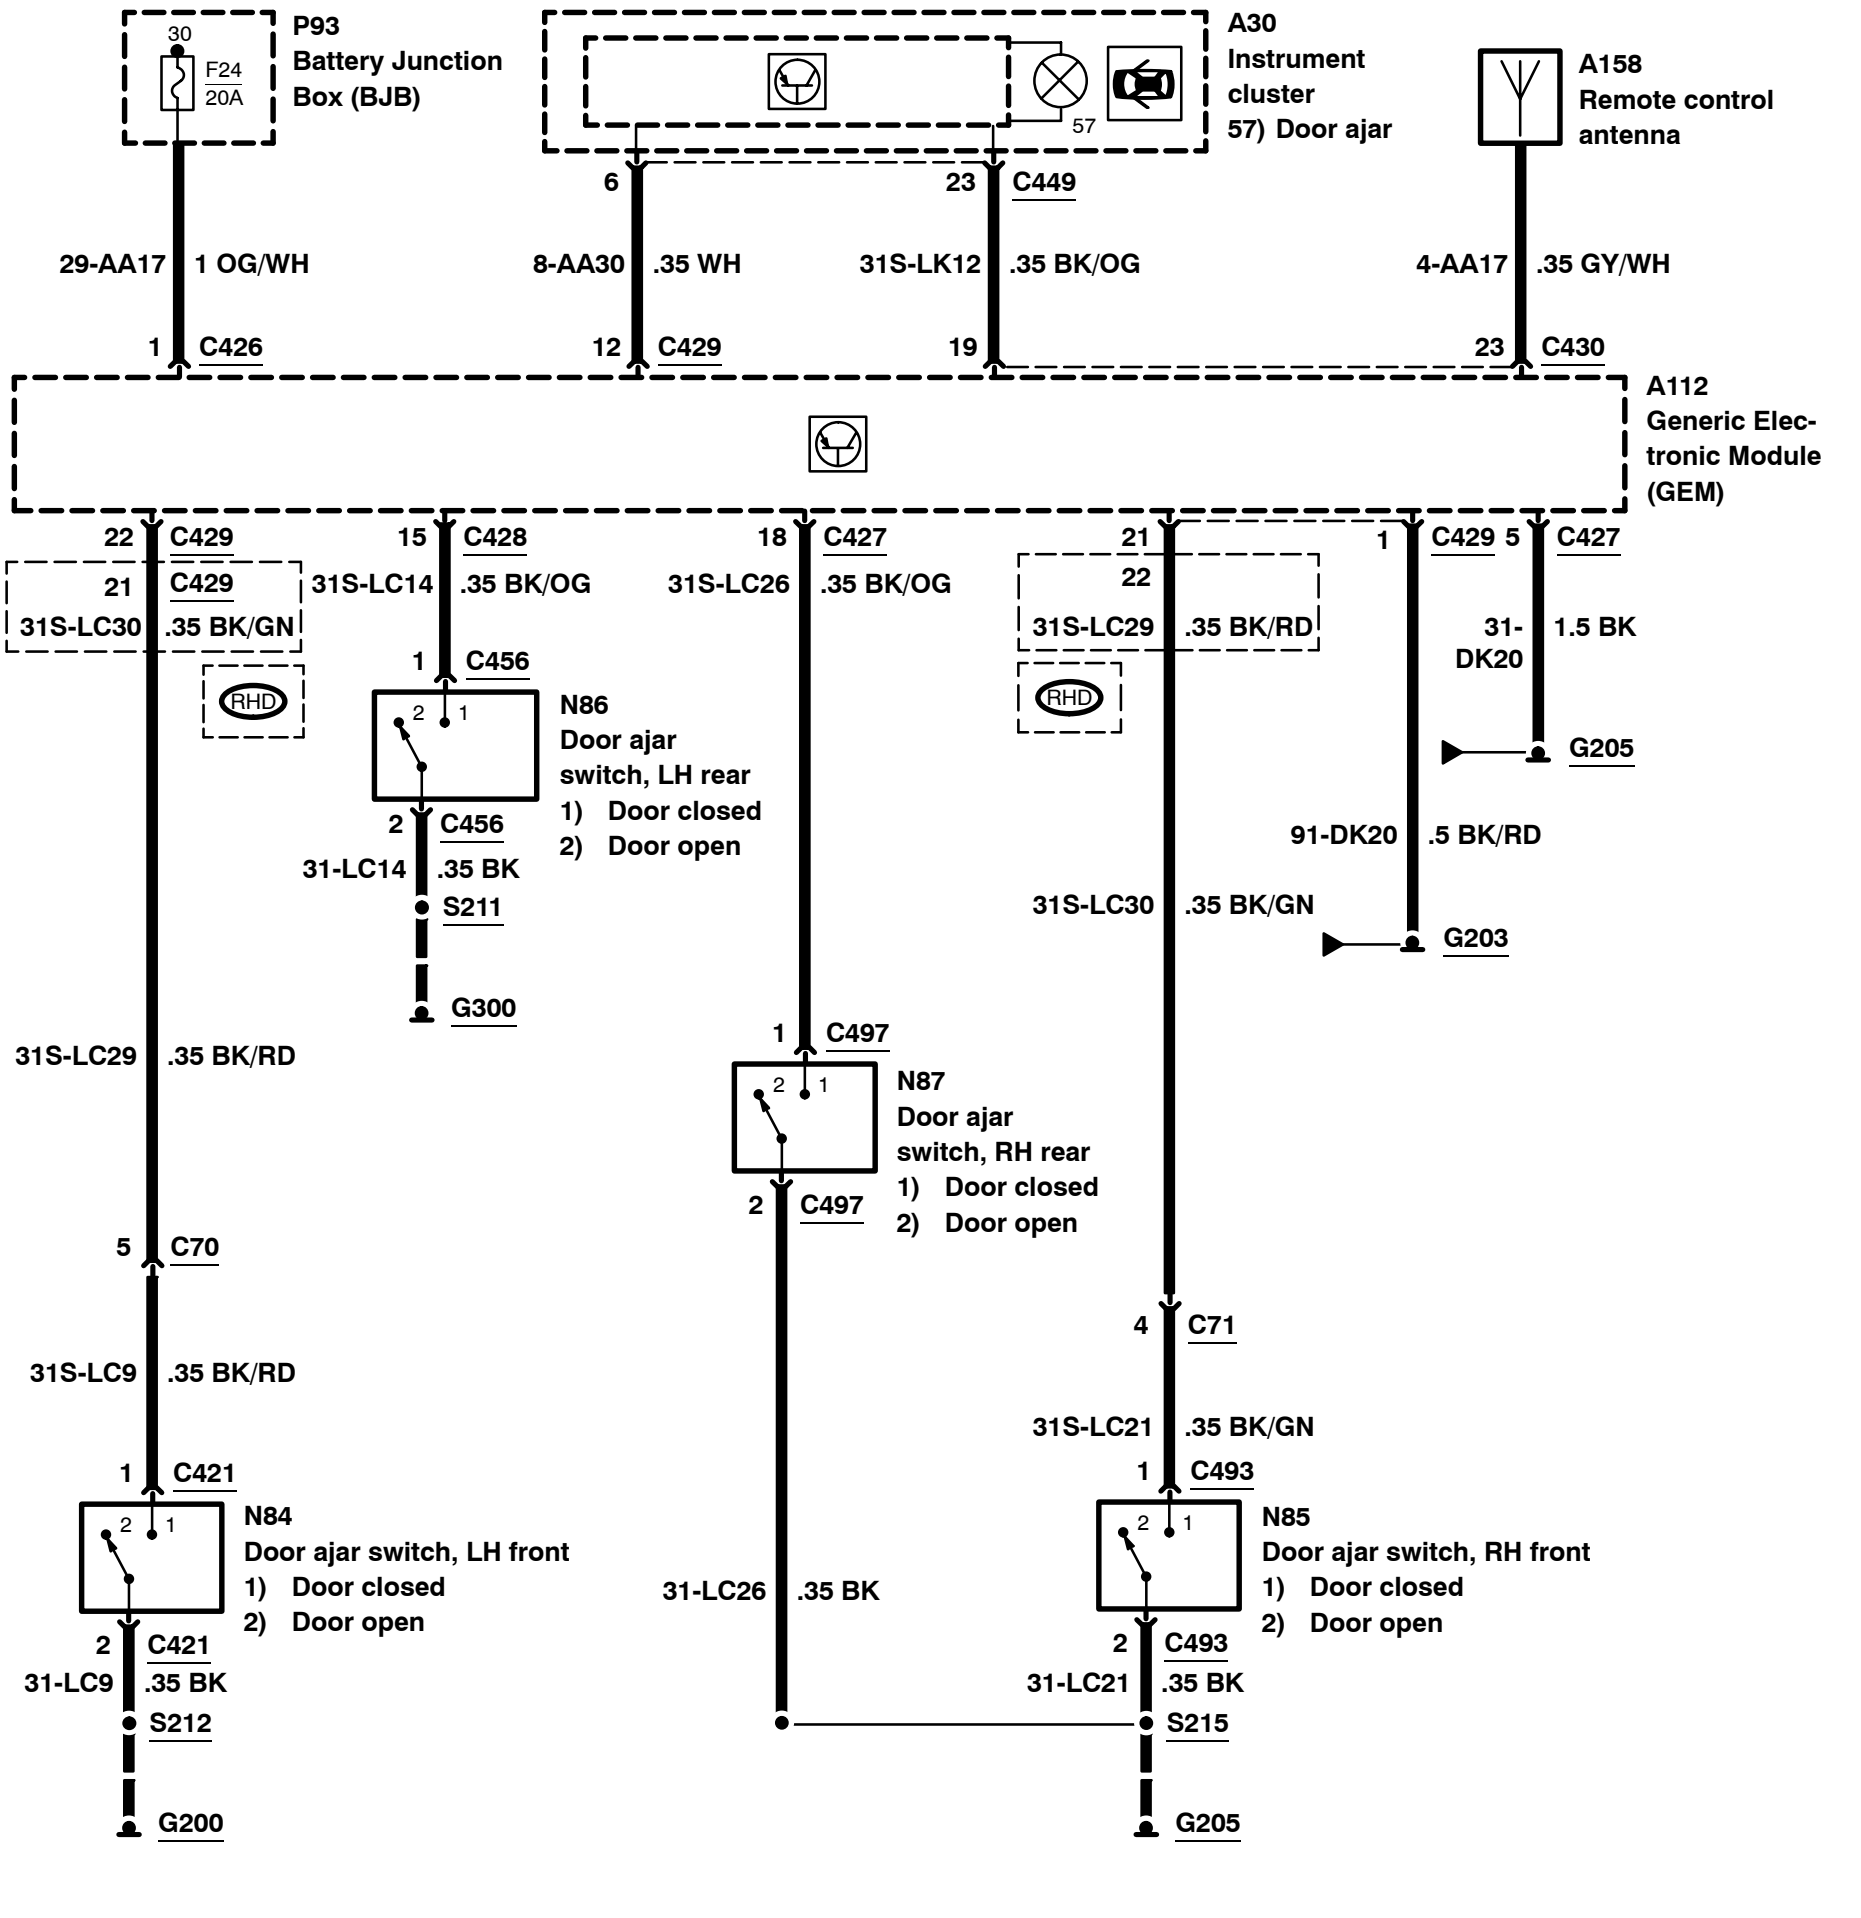


Handles, Locks, Latches and Entry Systems

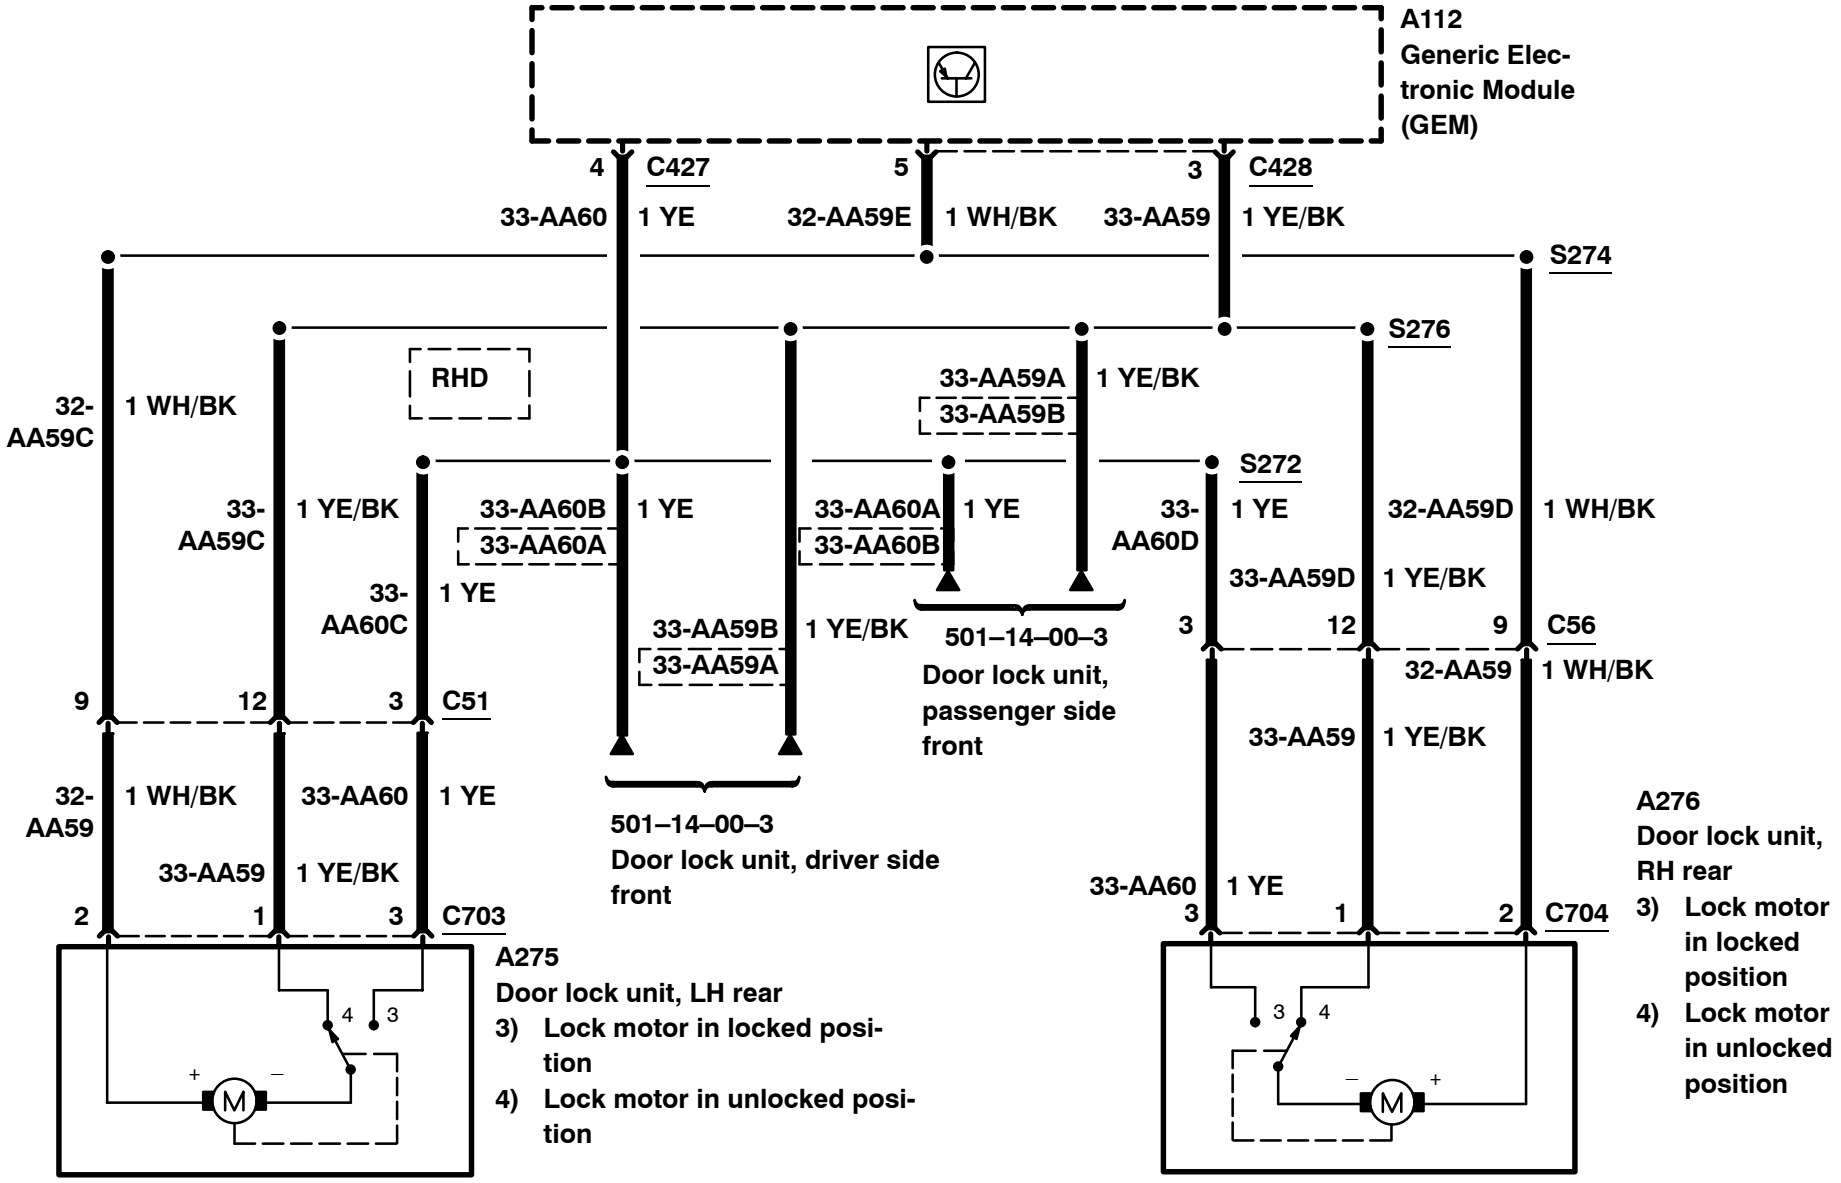


Handles, Locks, Latches and Entry Systems

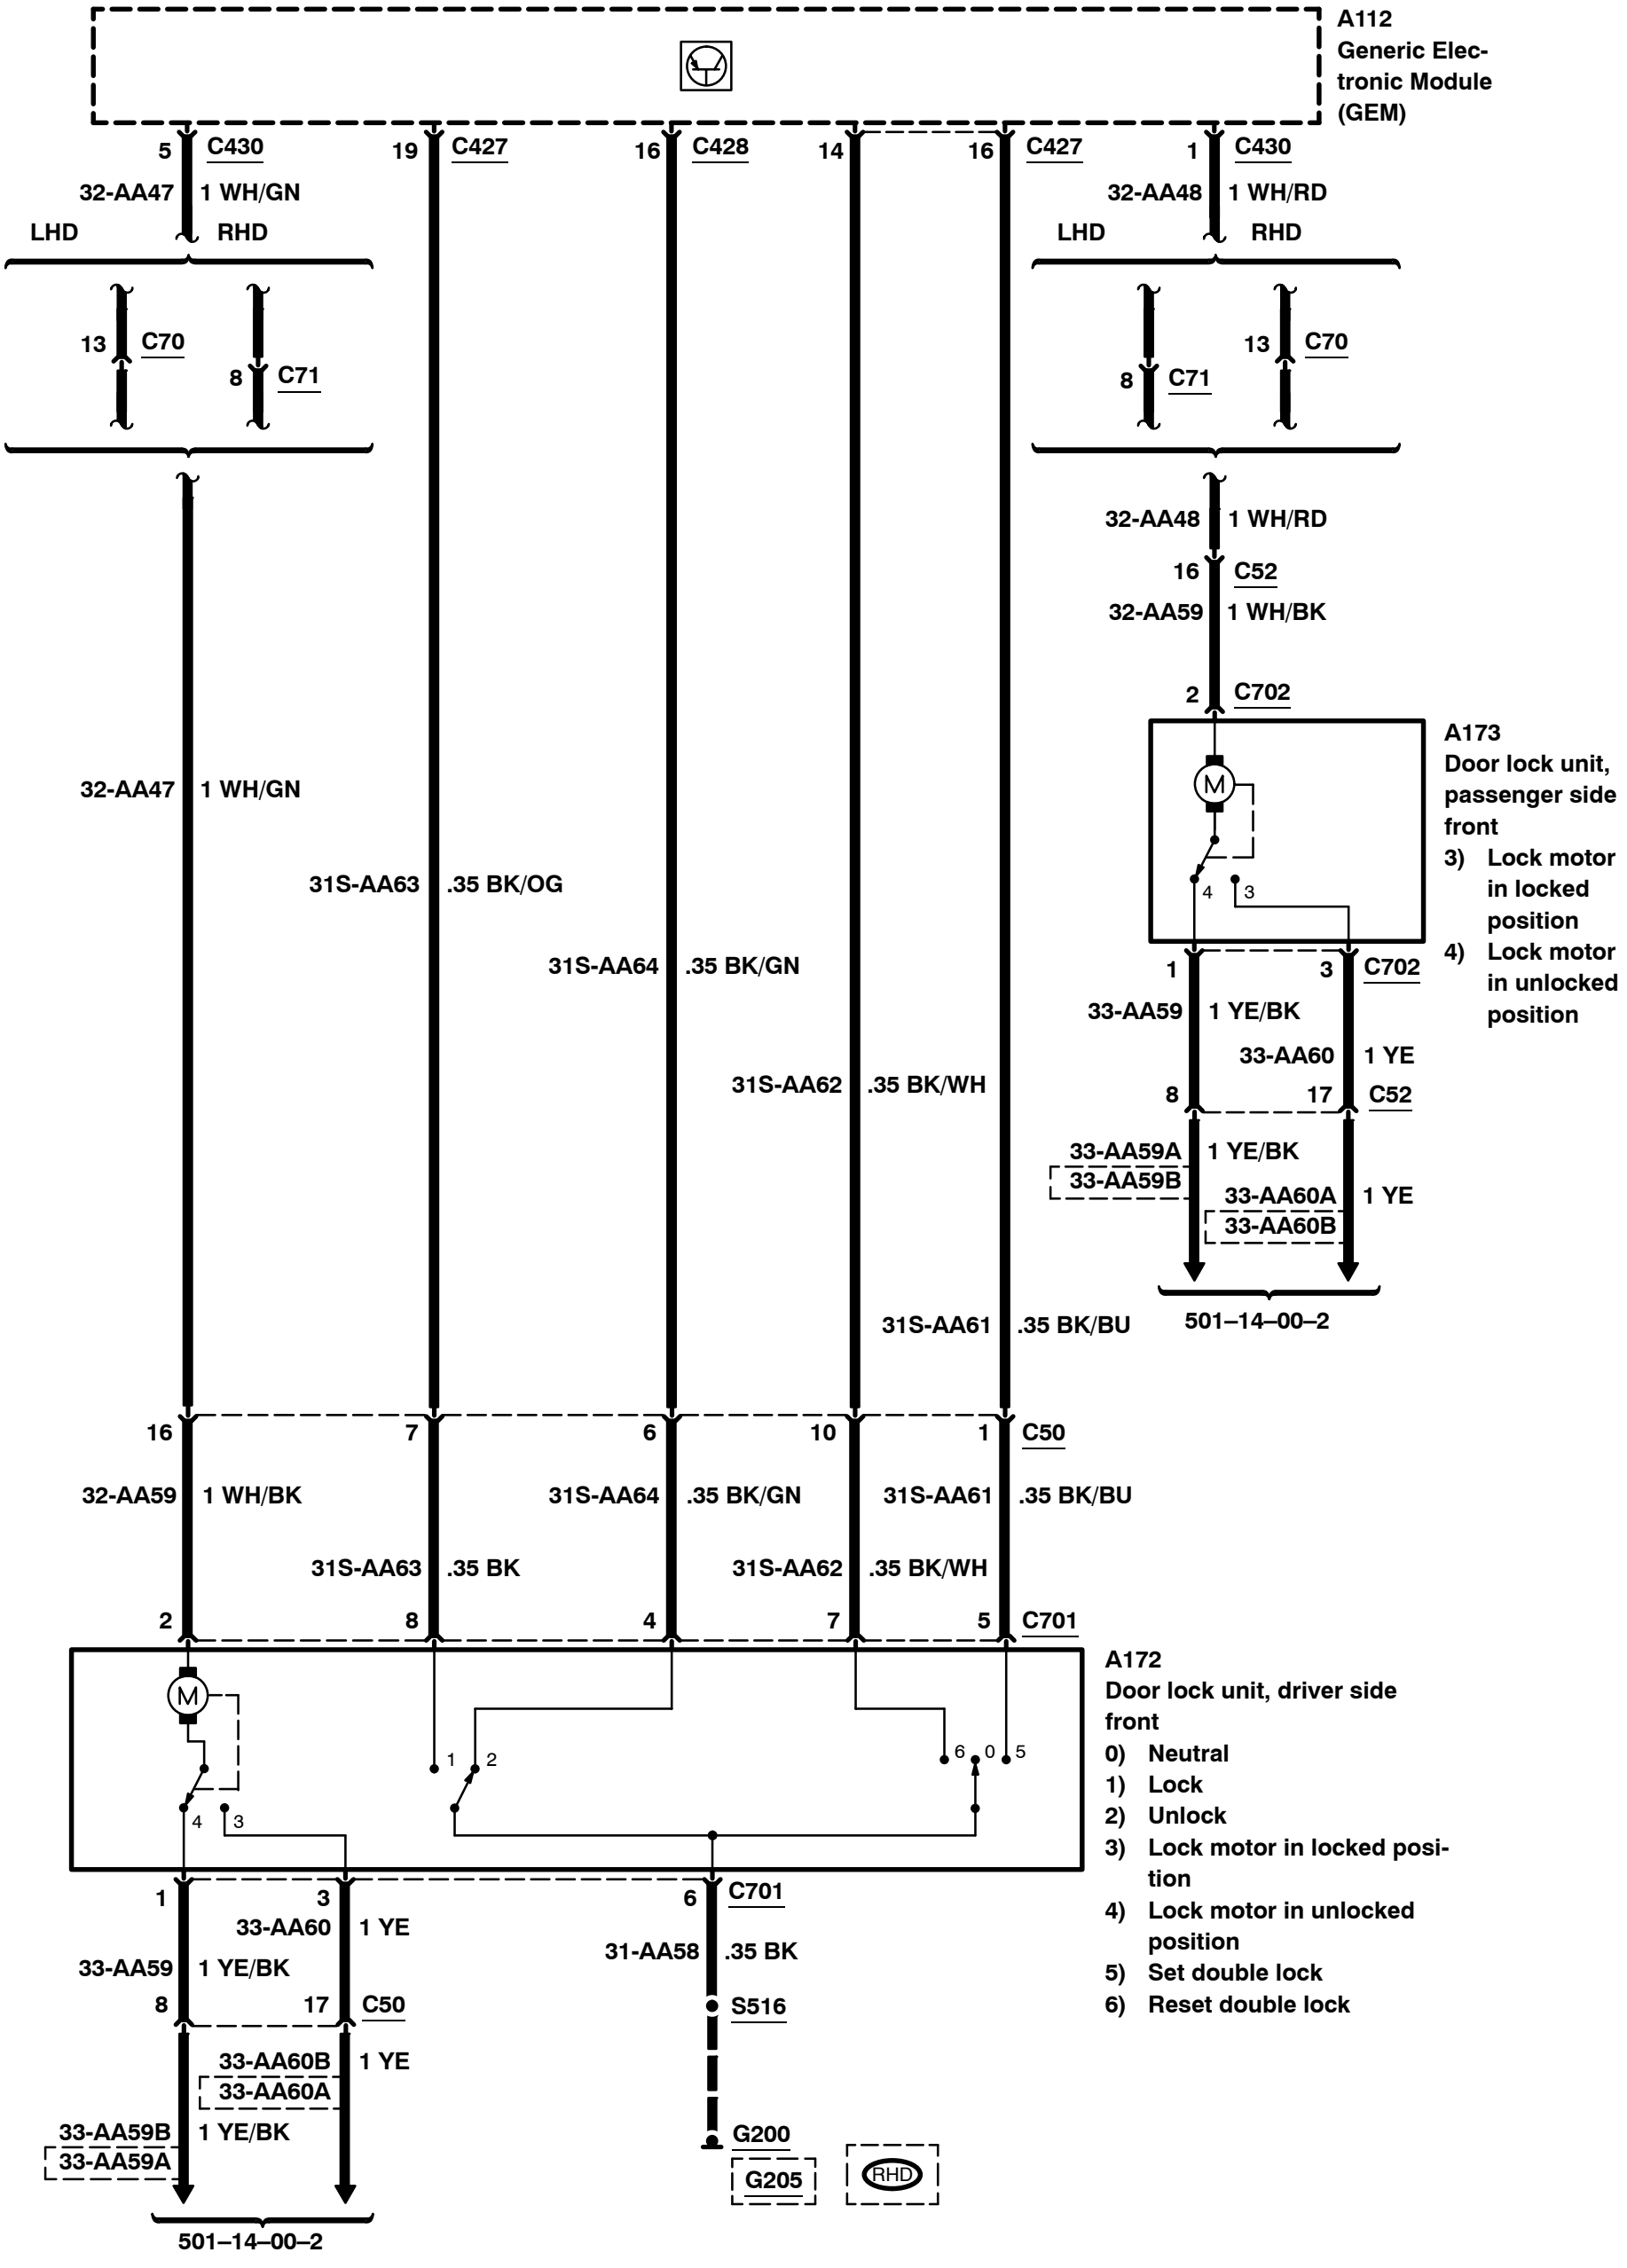


Handles, Locks, Latches and Entry Systems

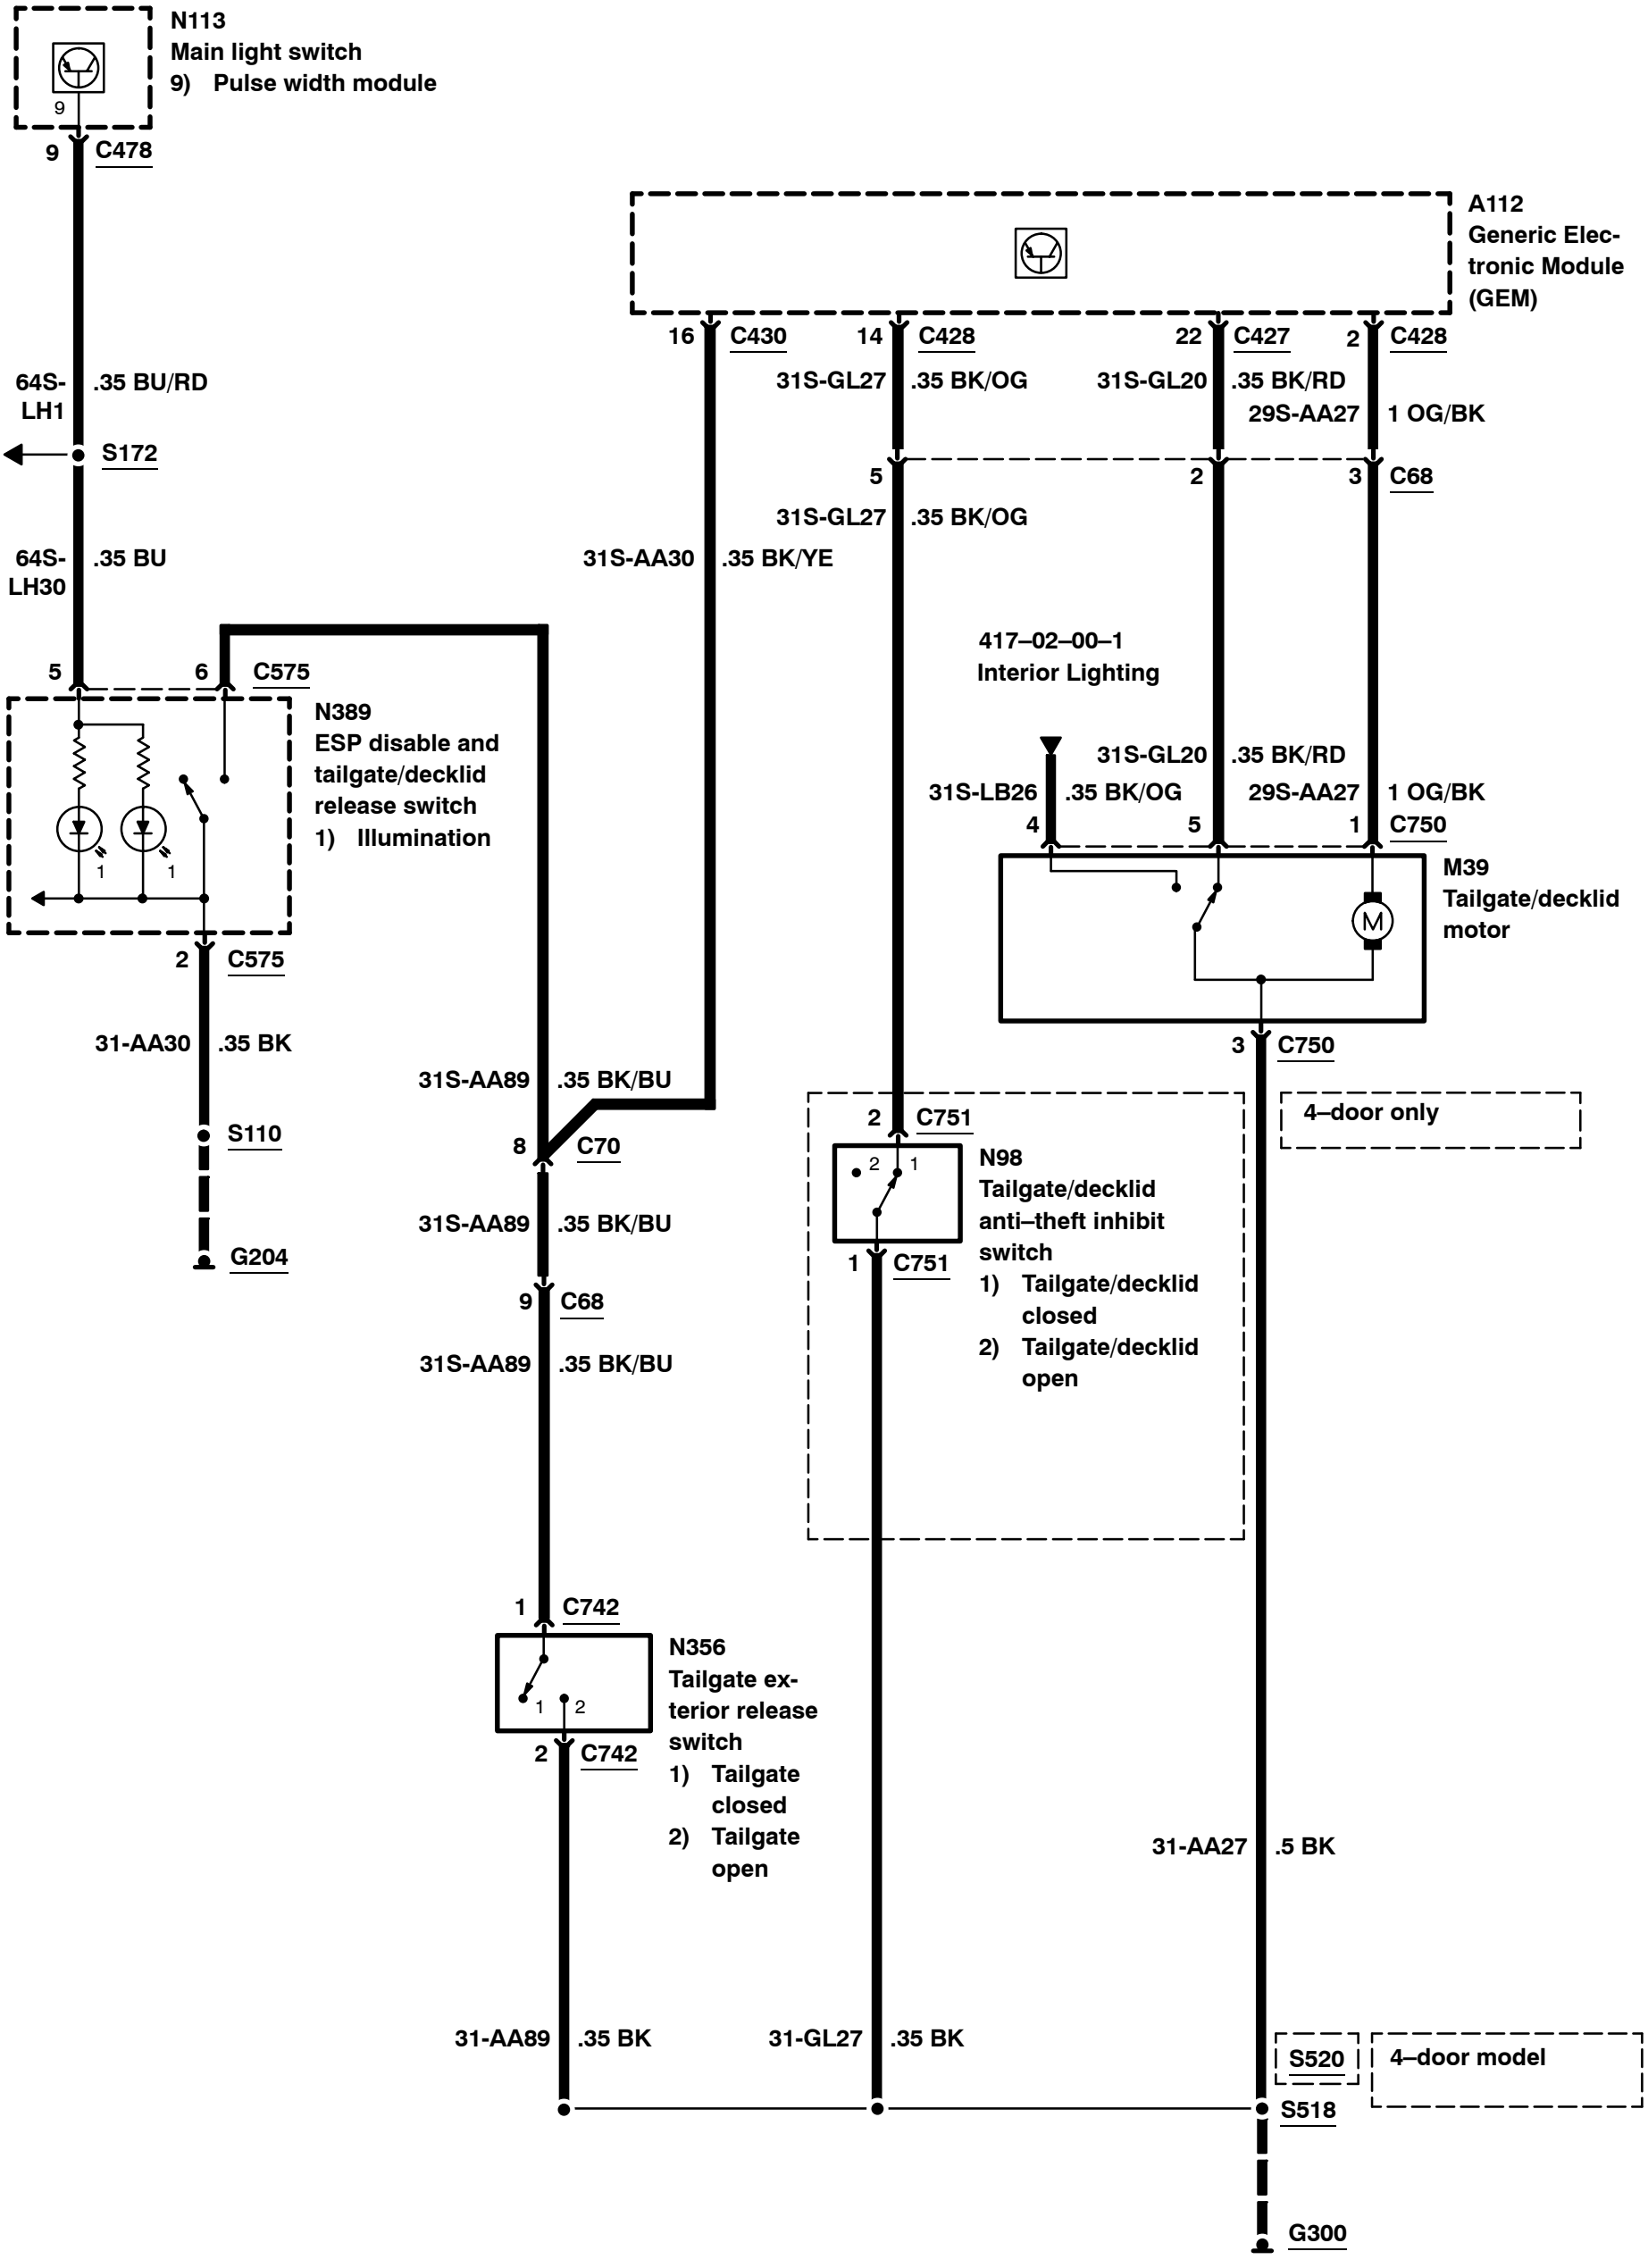


Wipers and Washers – with variable intermittent wipe

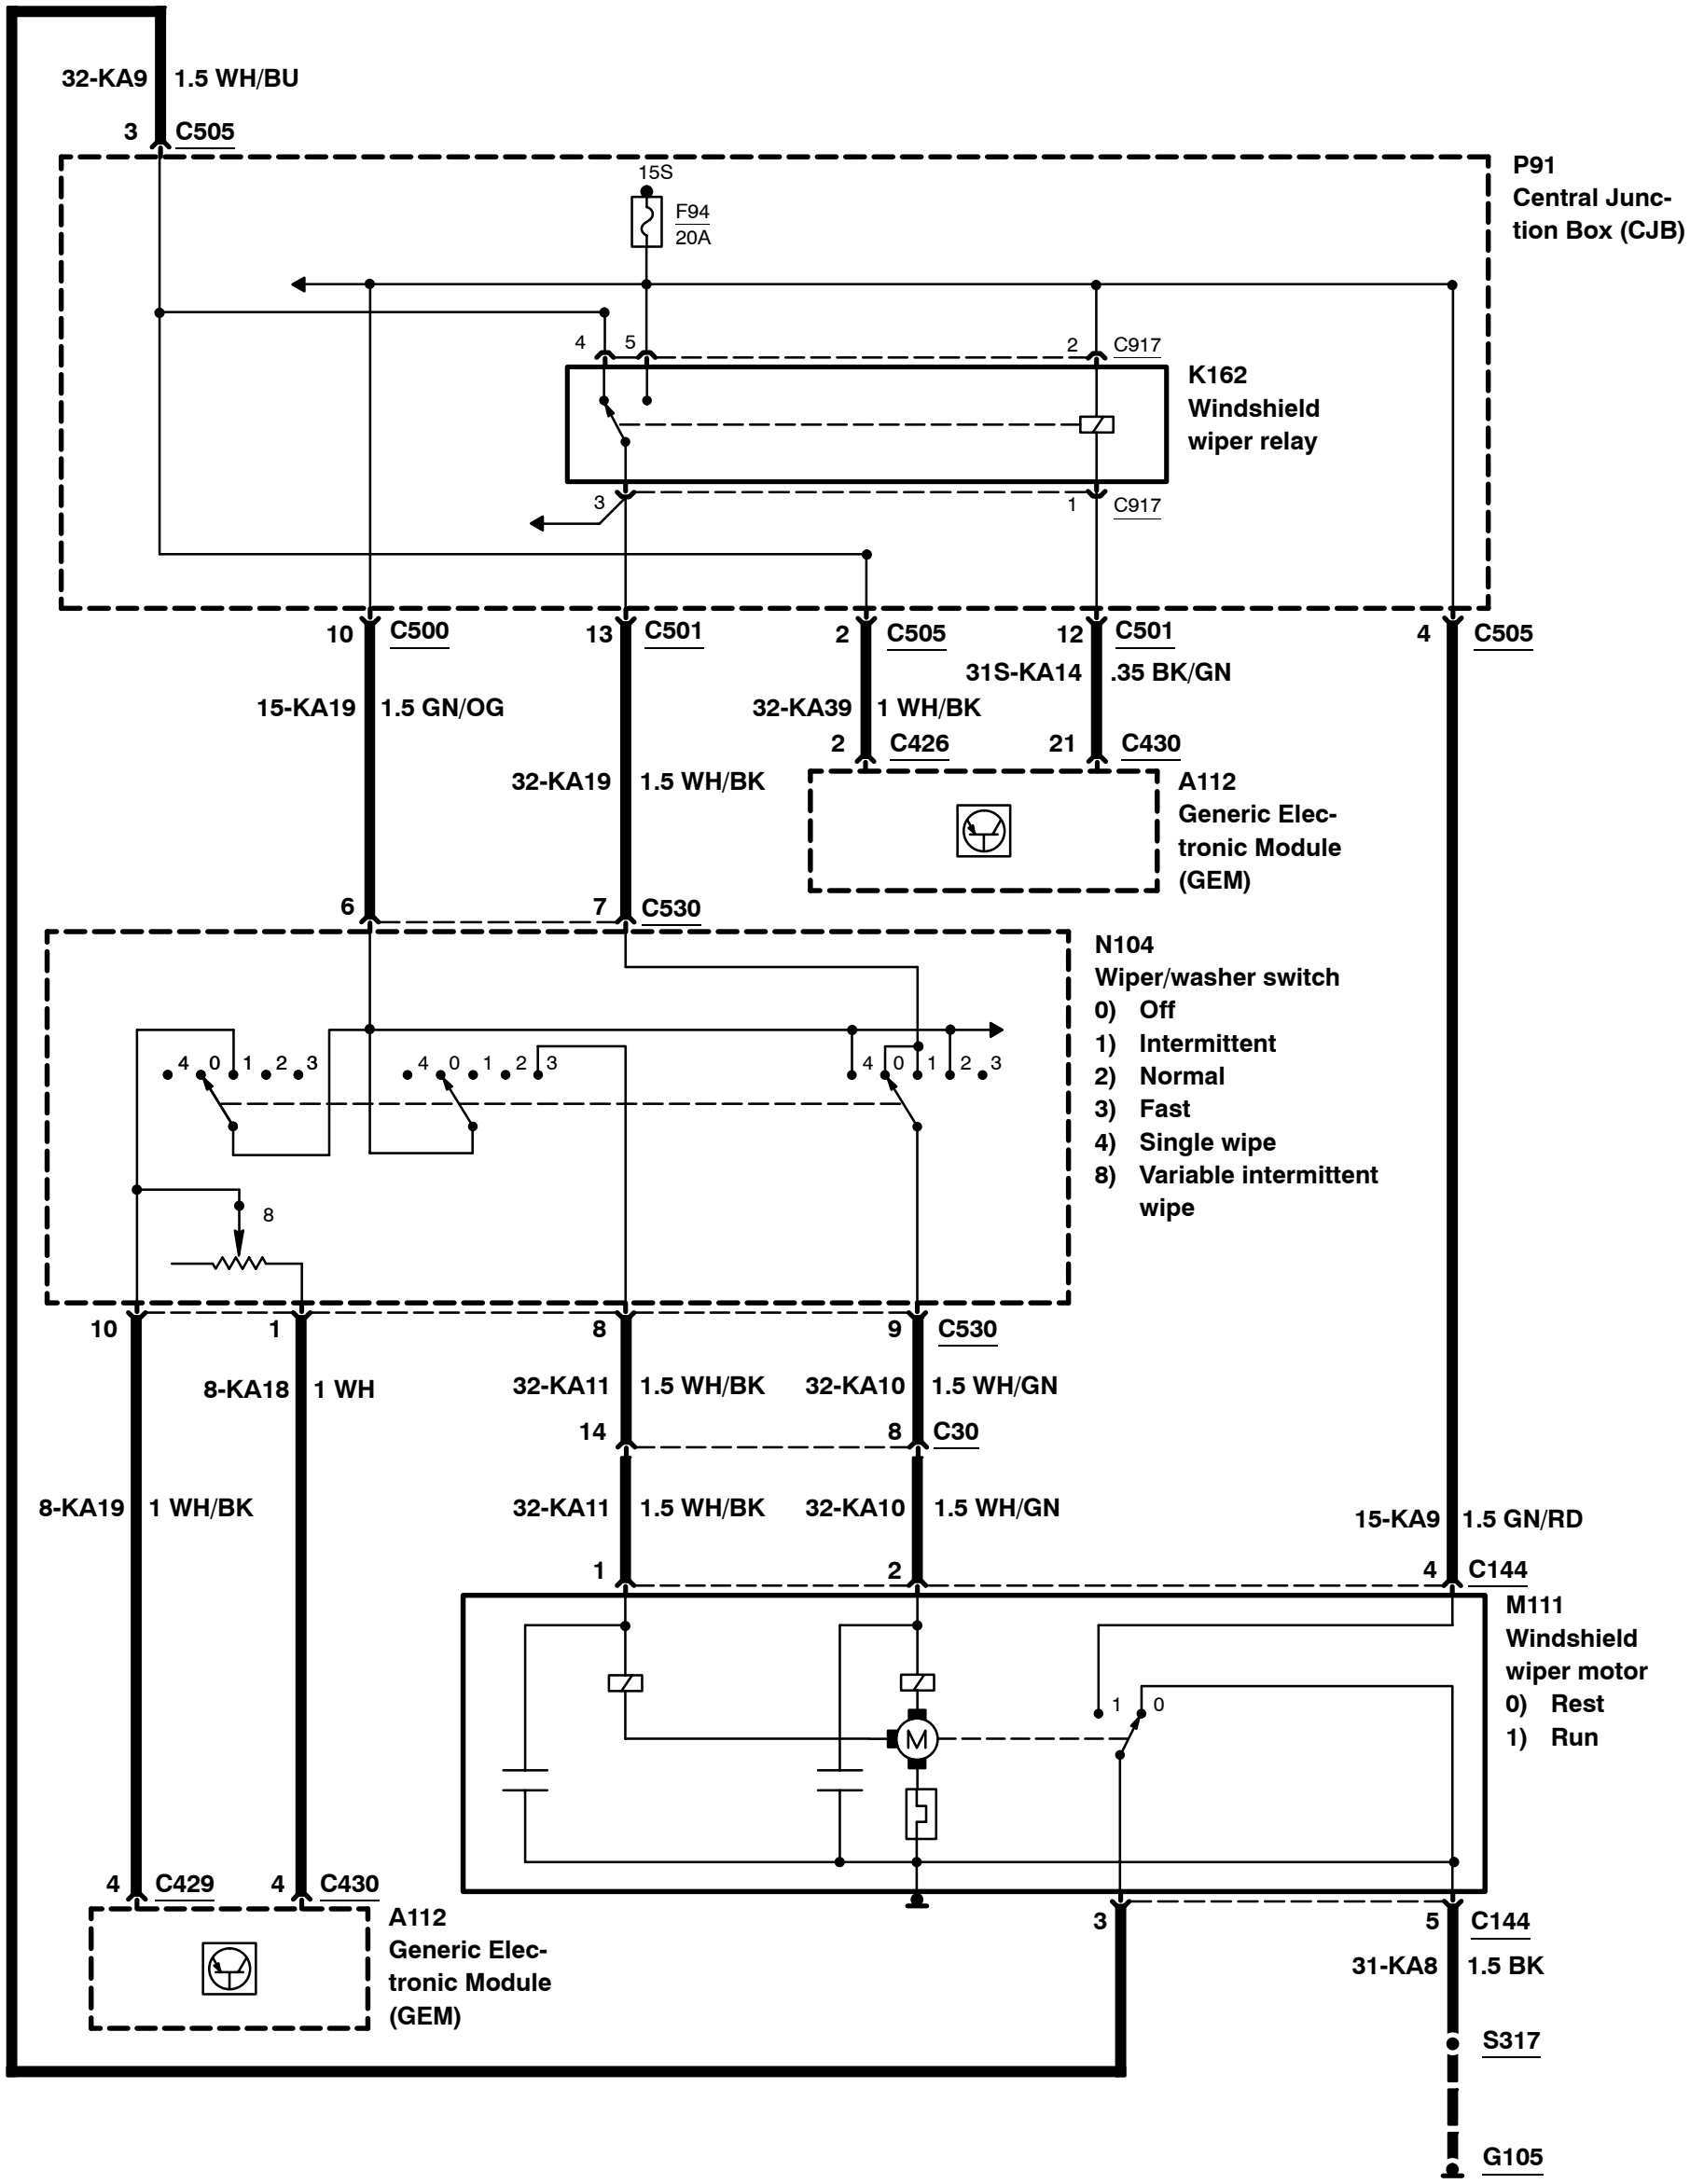


Wipers and Washers – with rain sensor

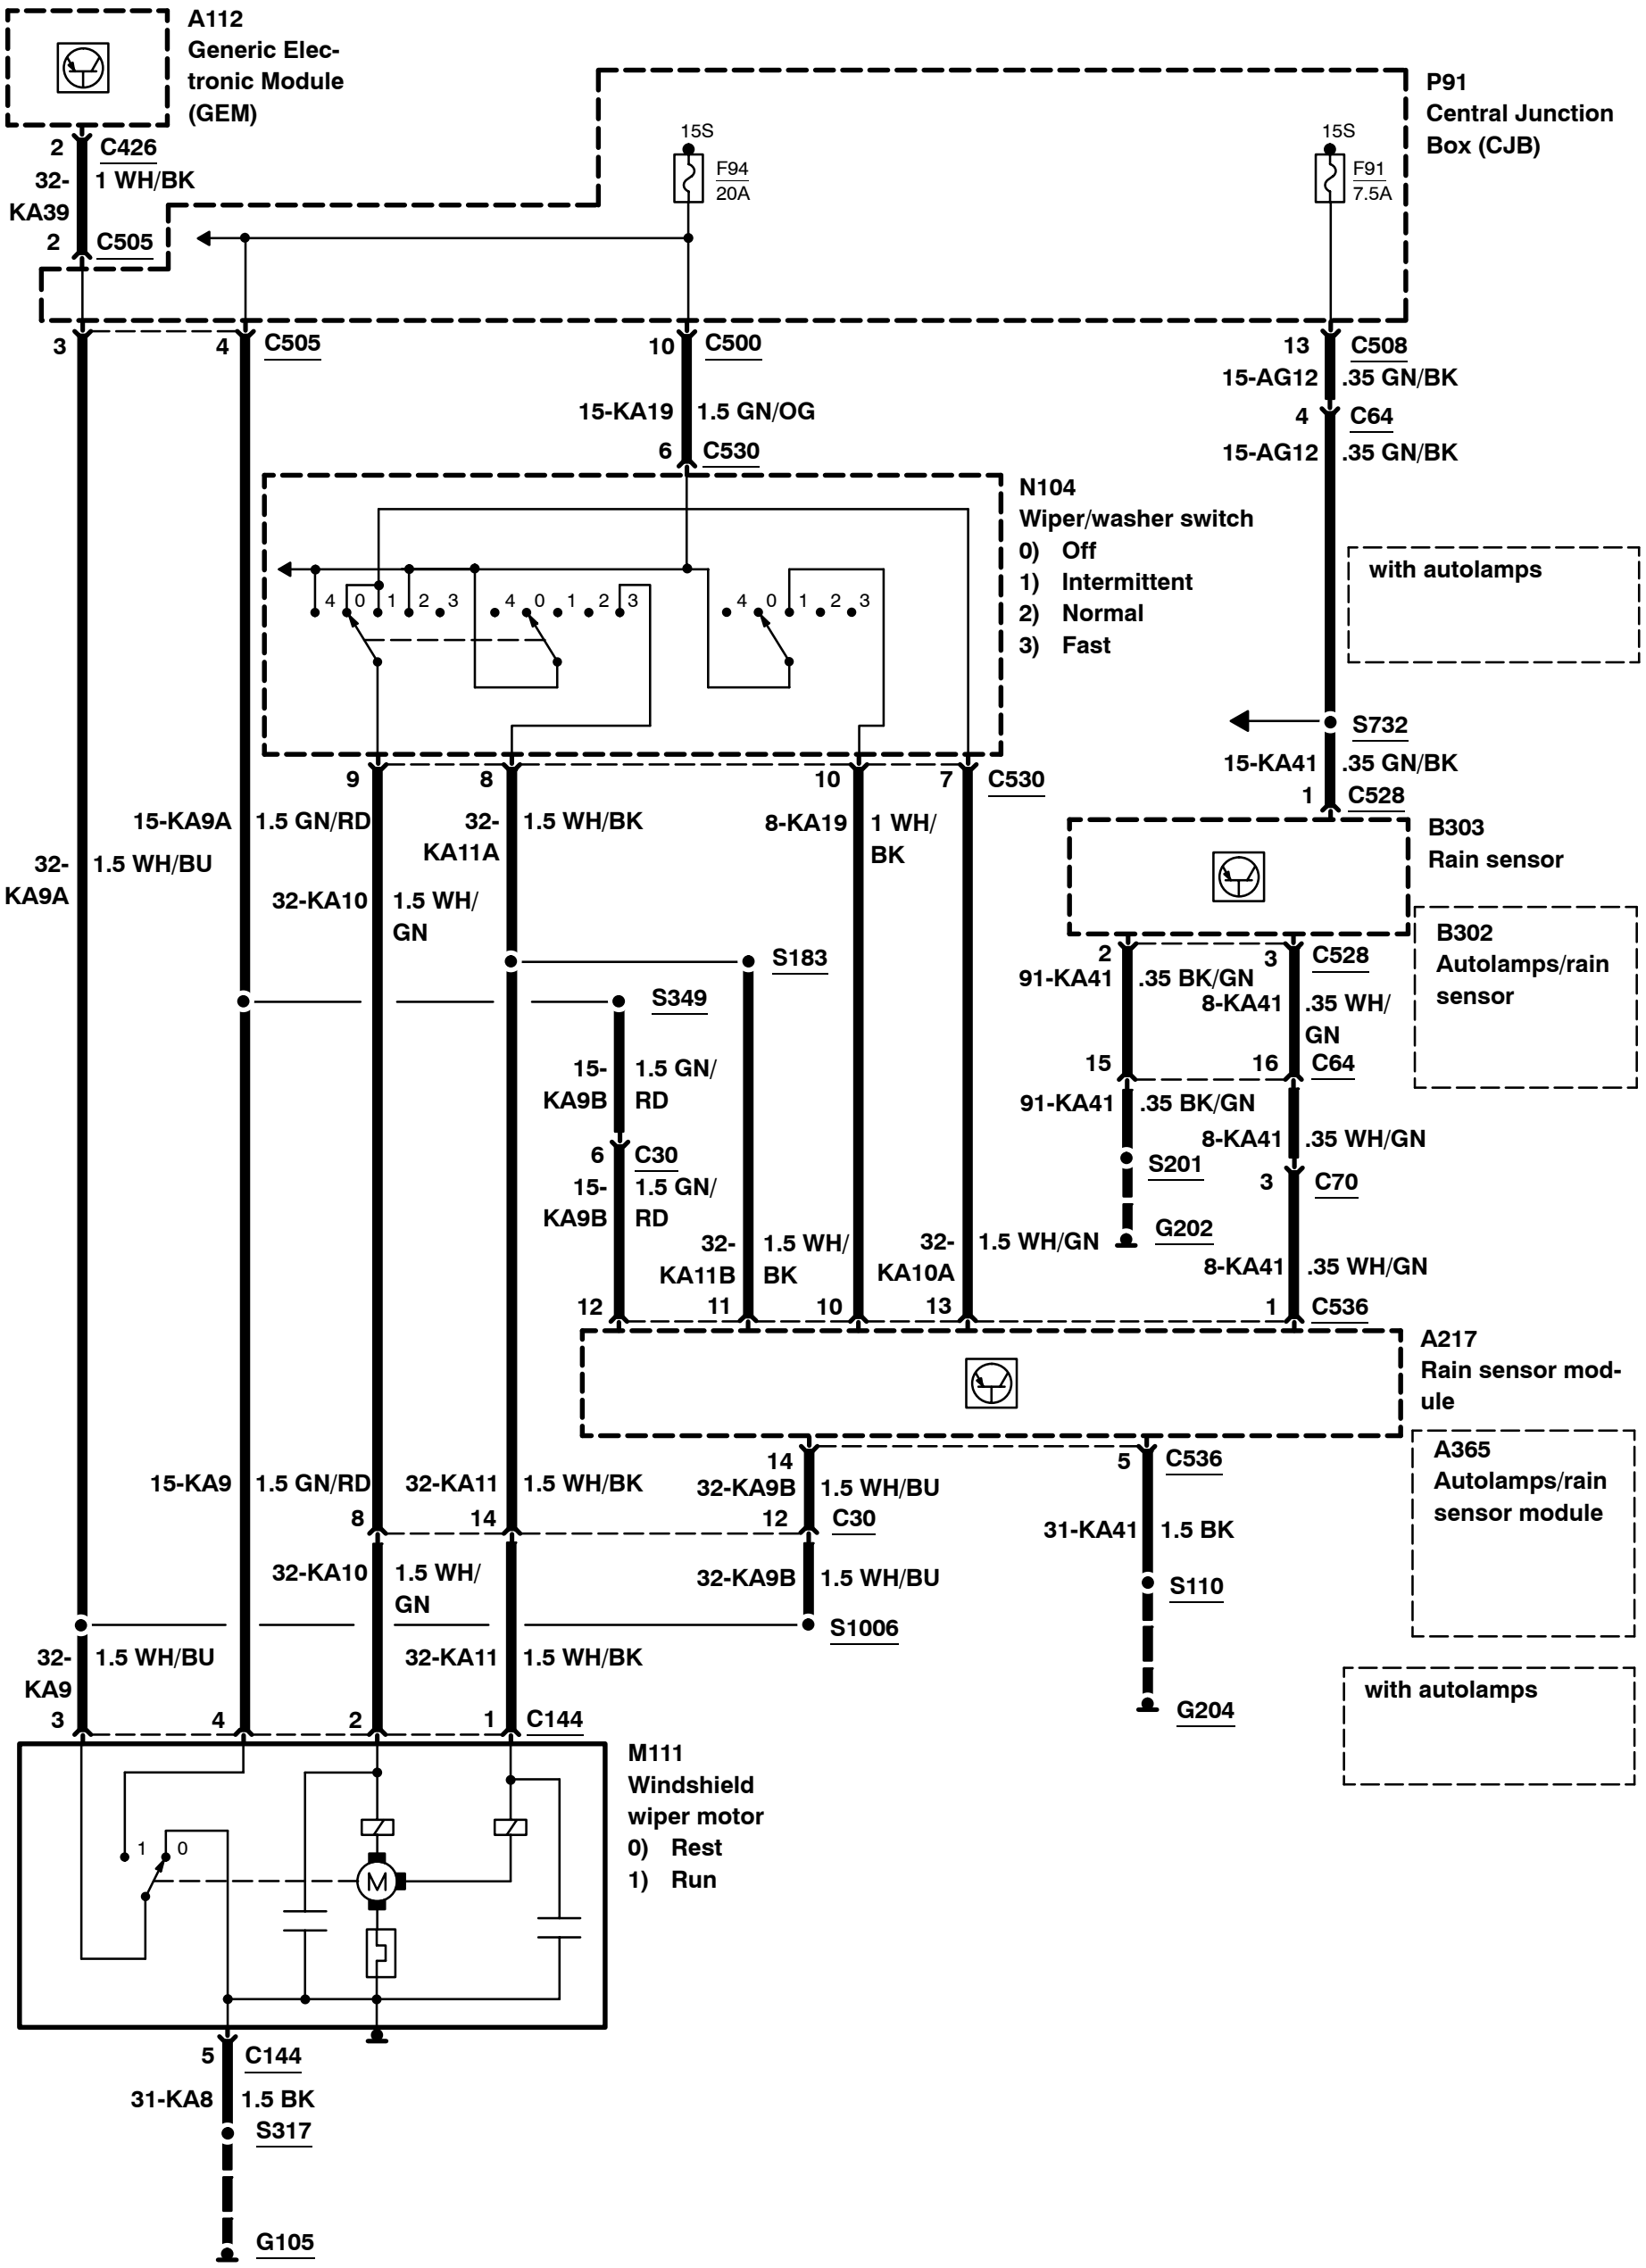


Wipers and Washers – Without rear window wiper, without headlamp washer

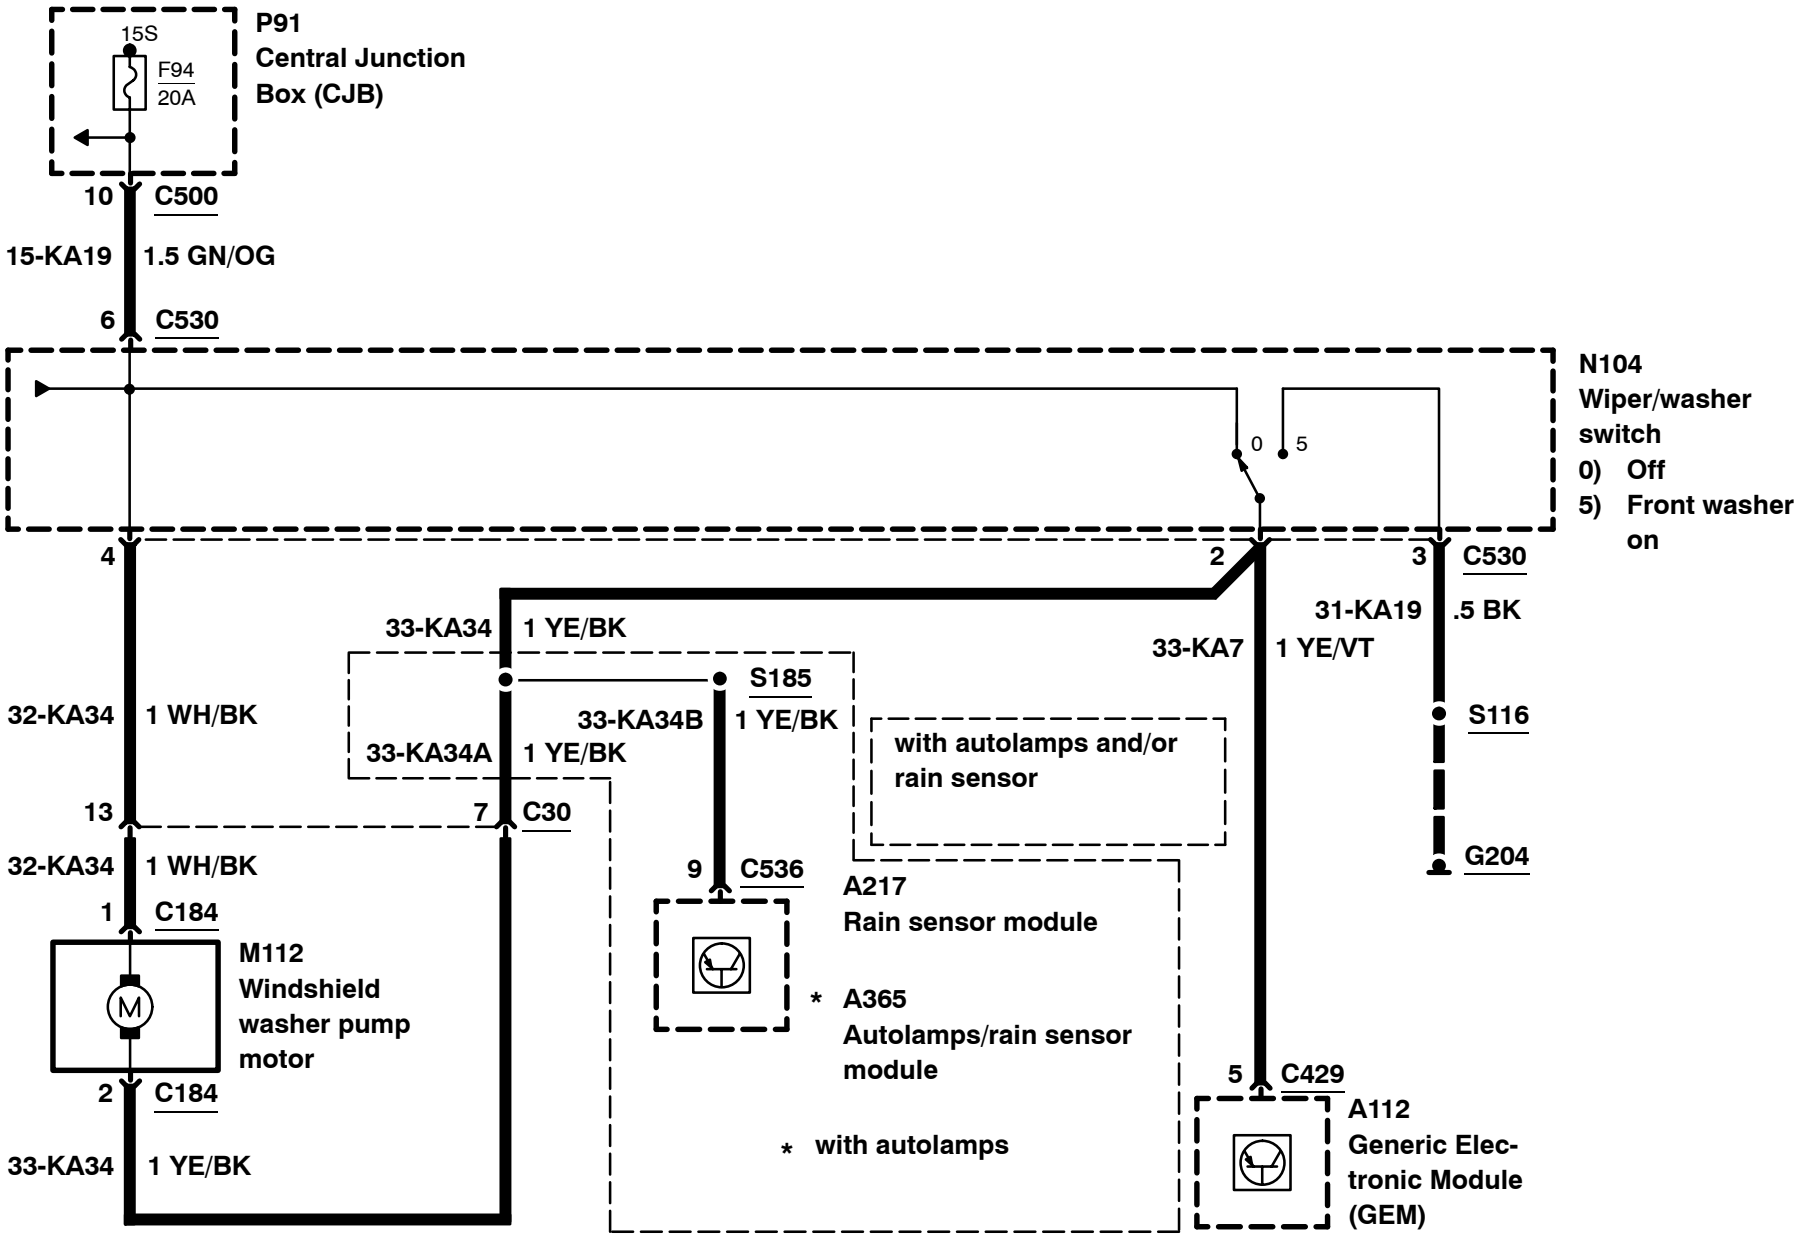


Wipers and Washers – Without rear window wiper, with headlamp washer

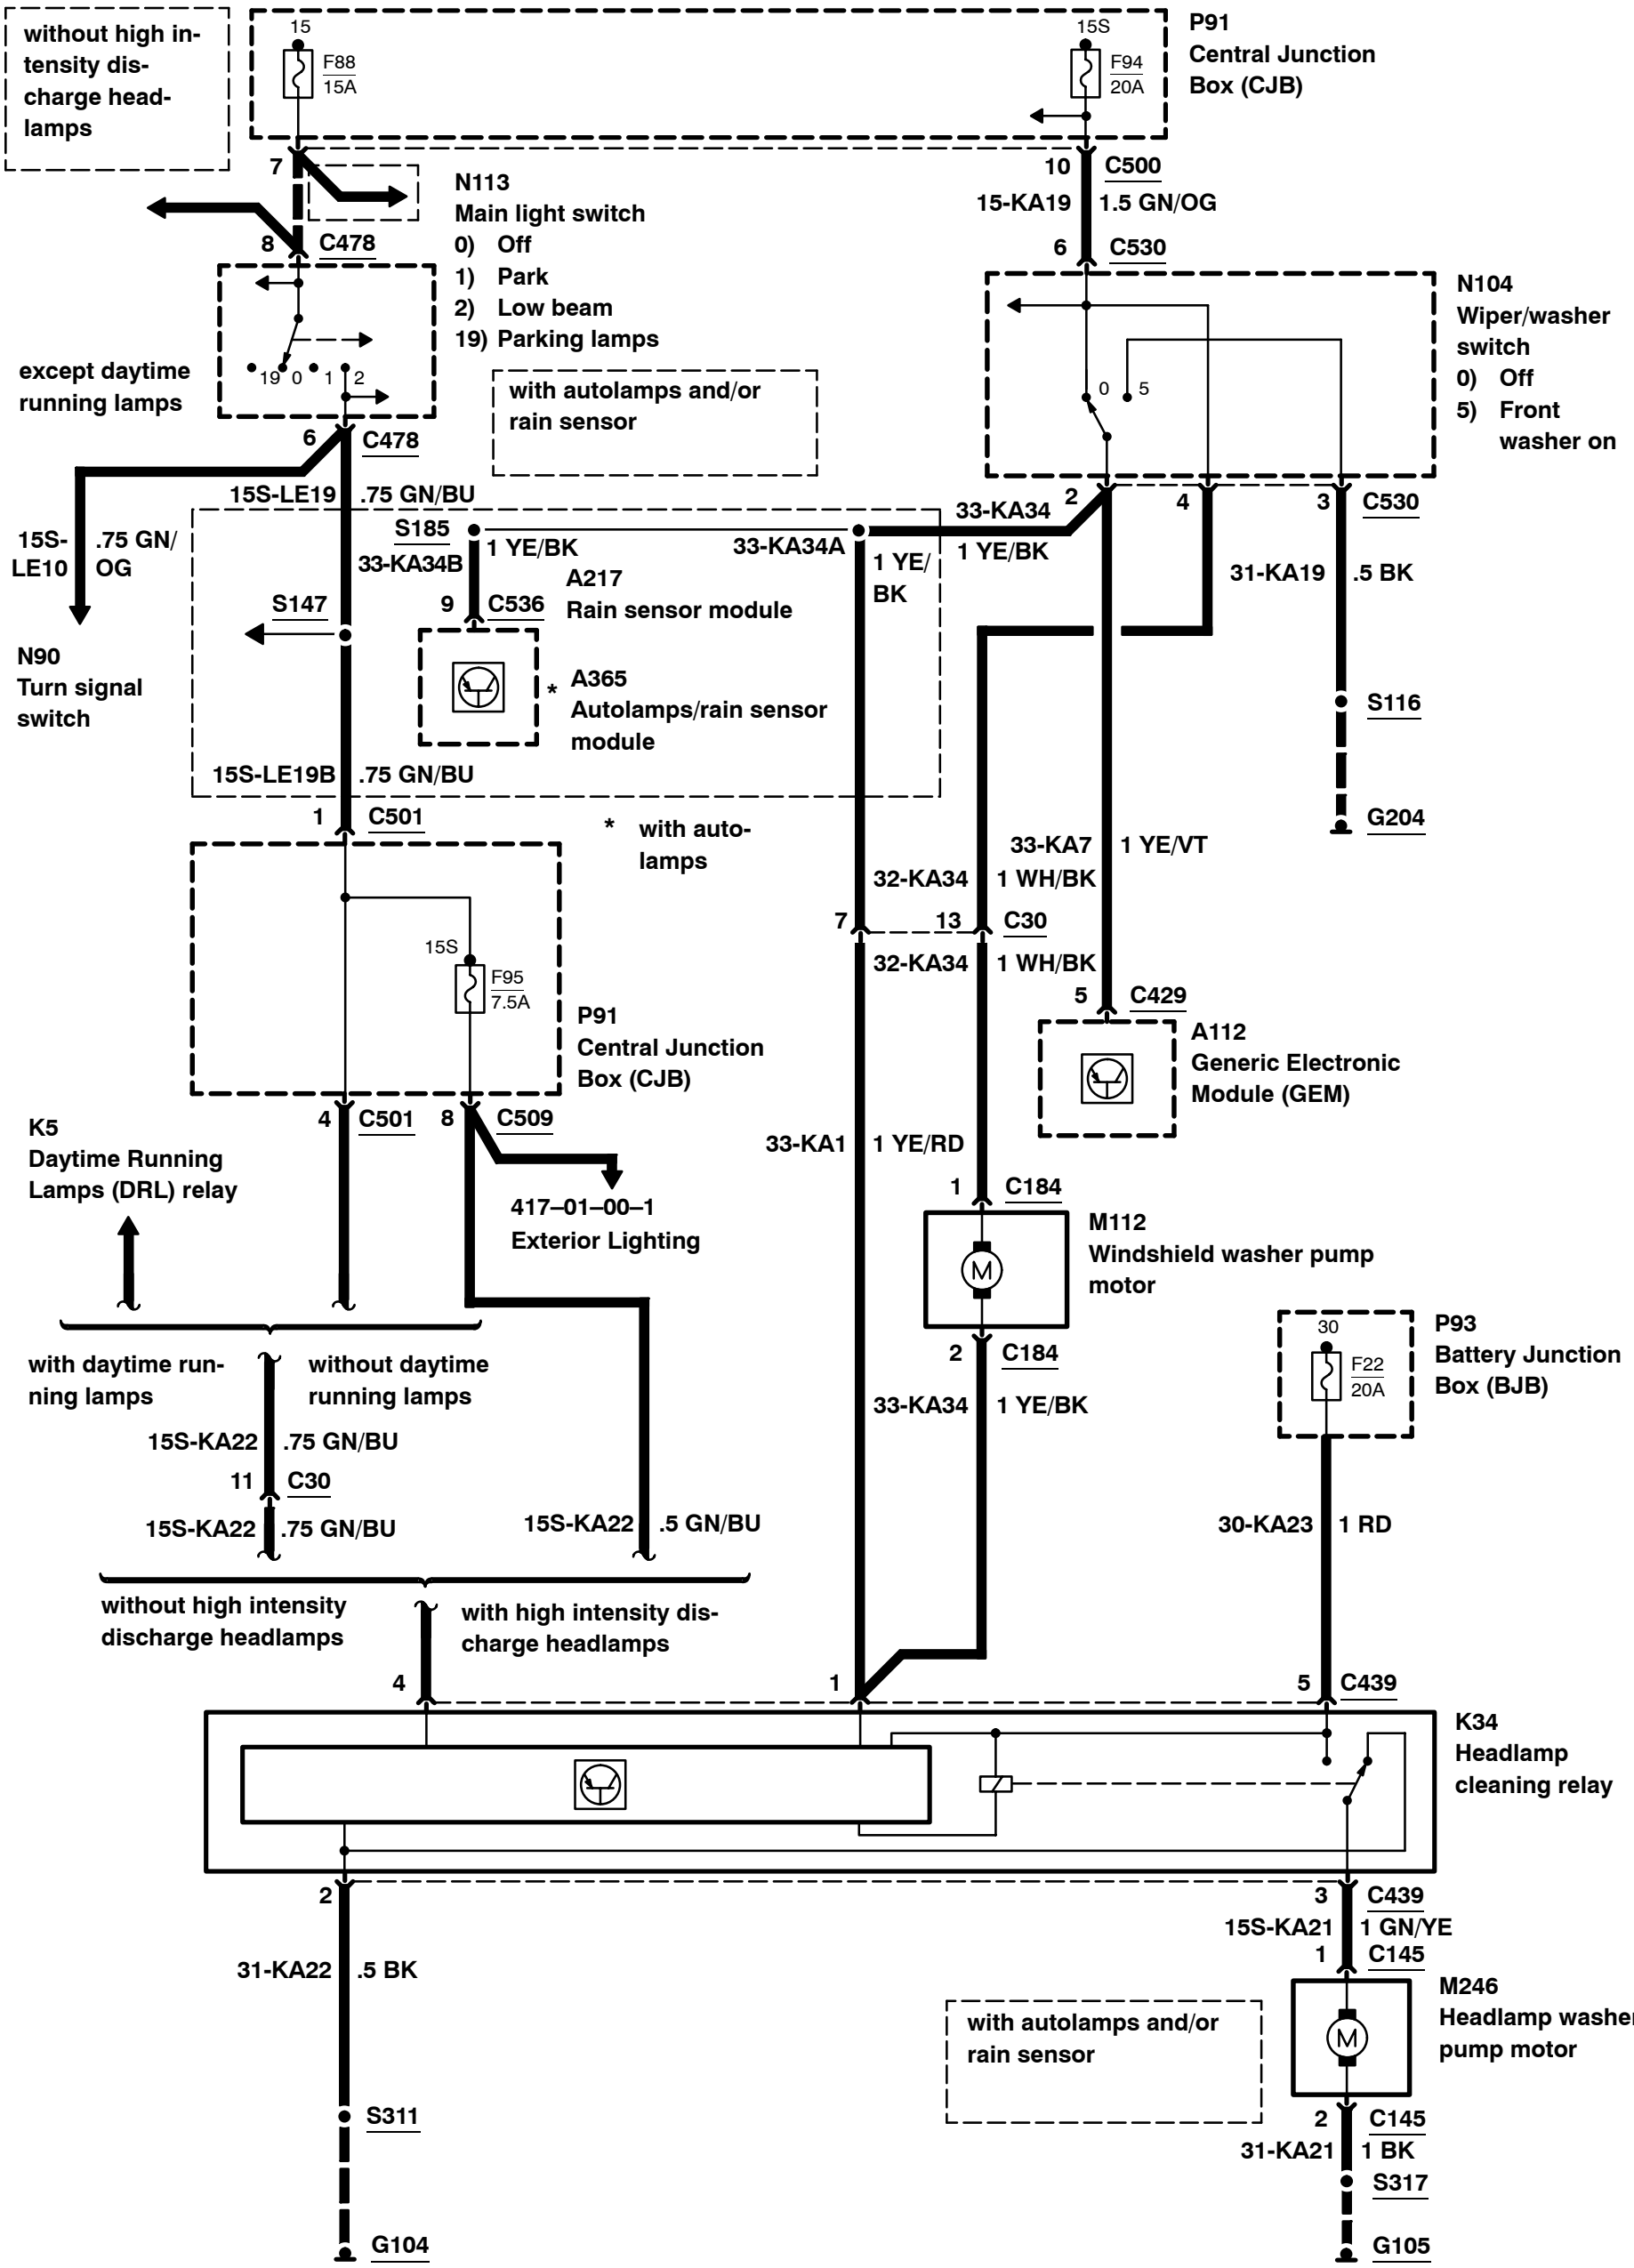


Wipers and Washers – With rear window wiper, without headlamp washer

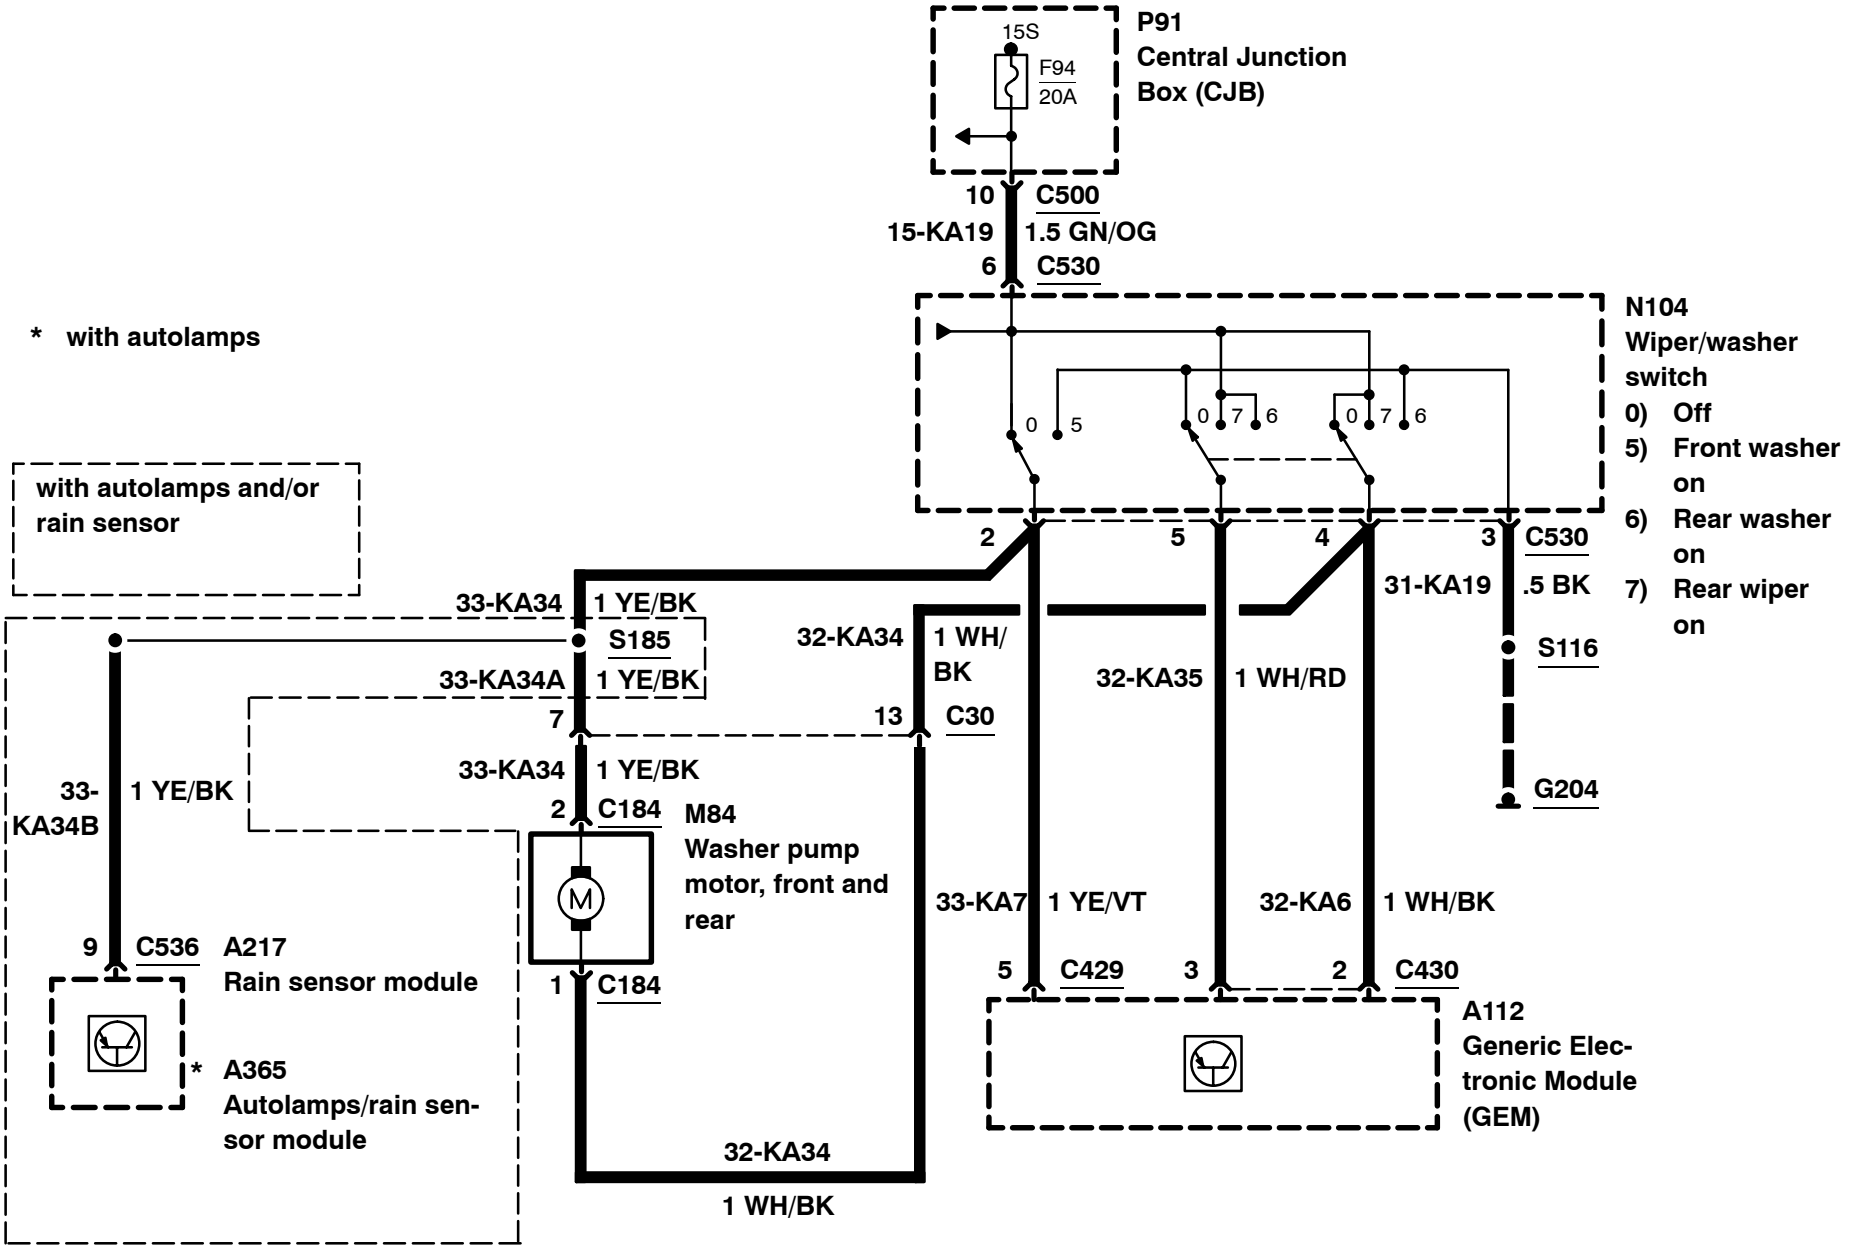


Wipers and Washers – With rear window wiper, with headlamp washer

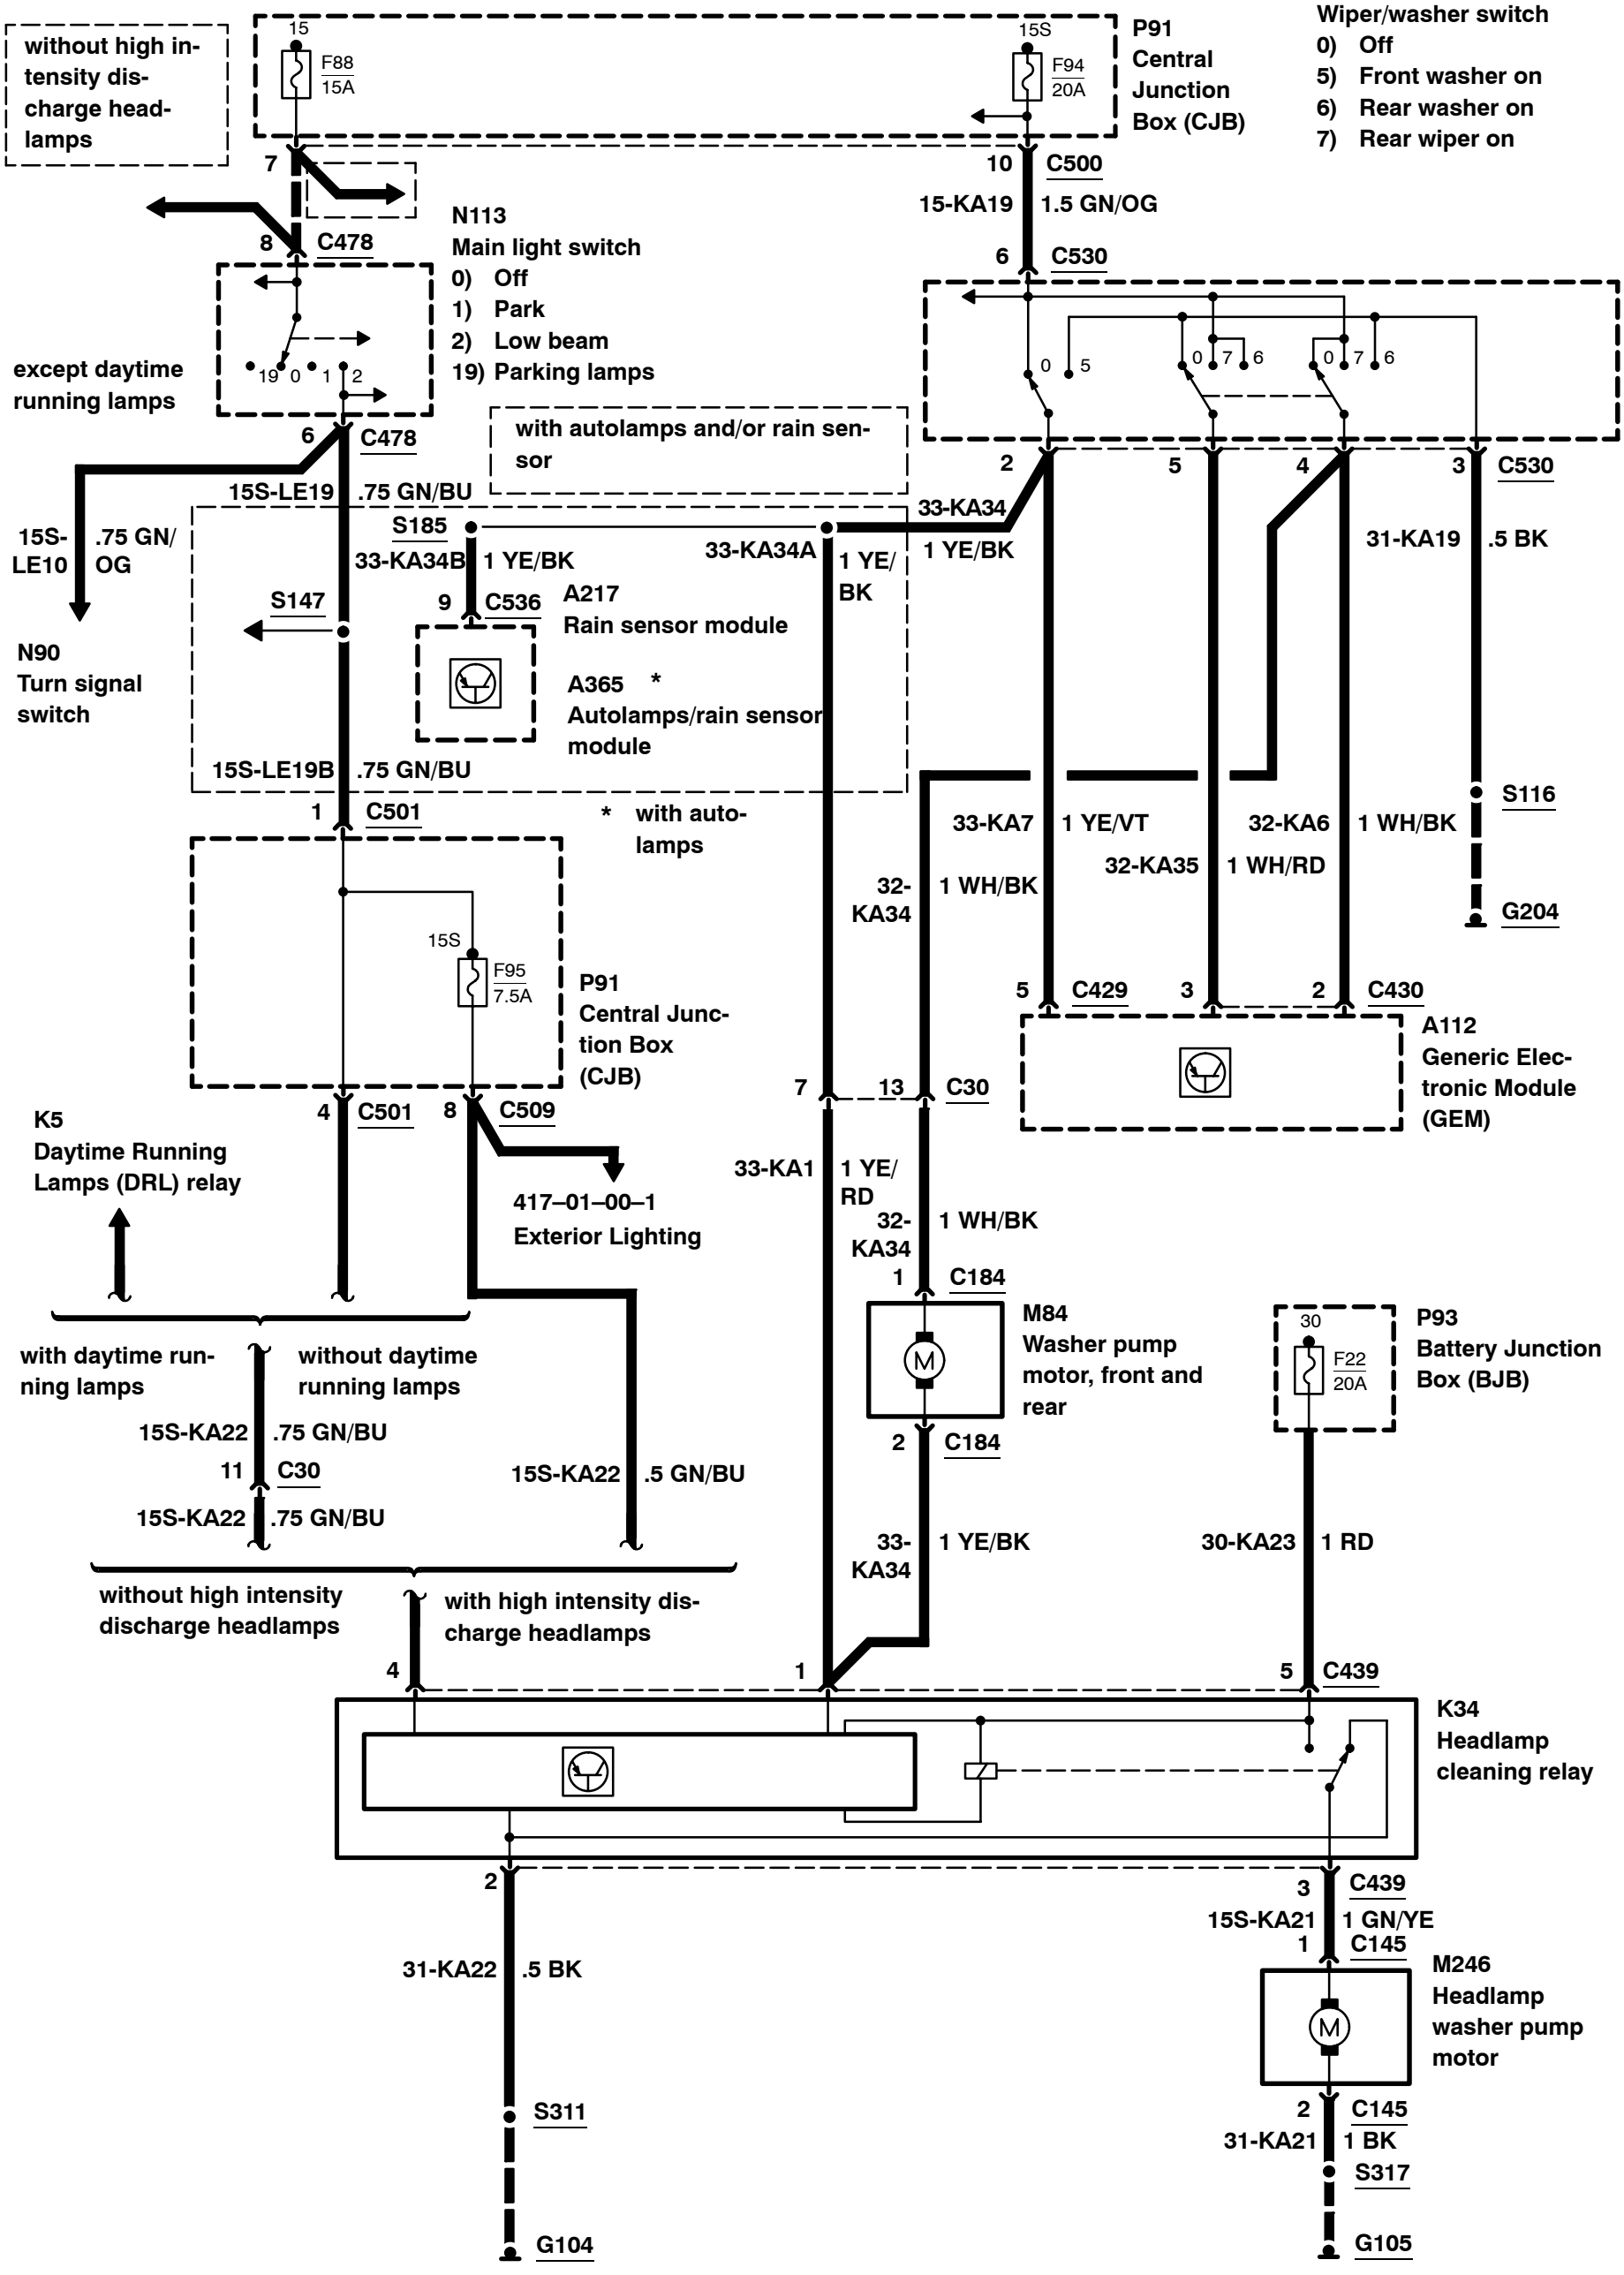


Wipers and Washers – With rear window wiper

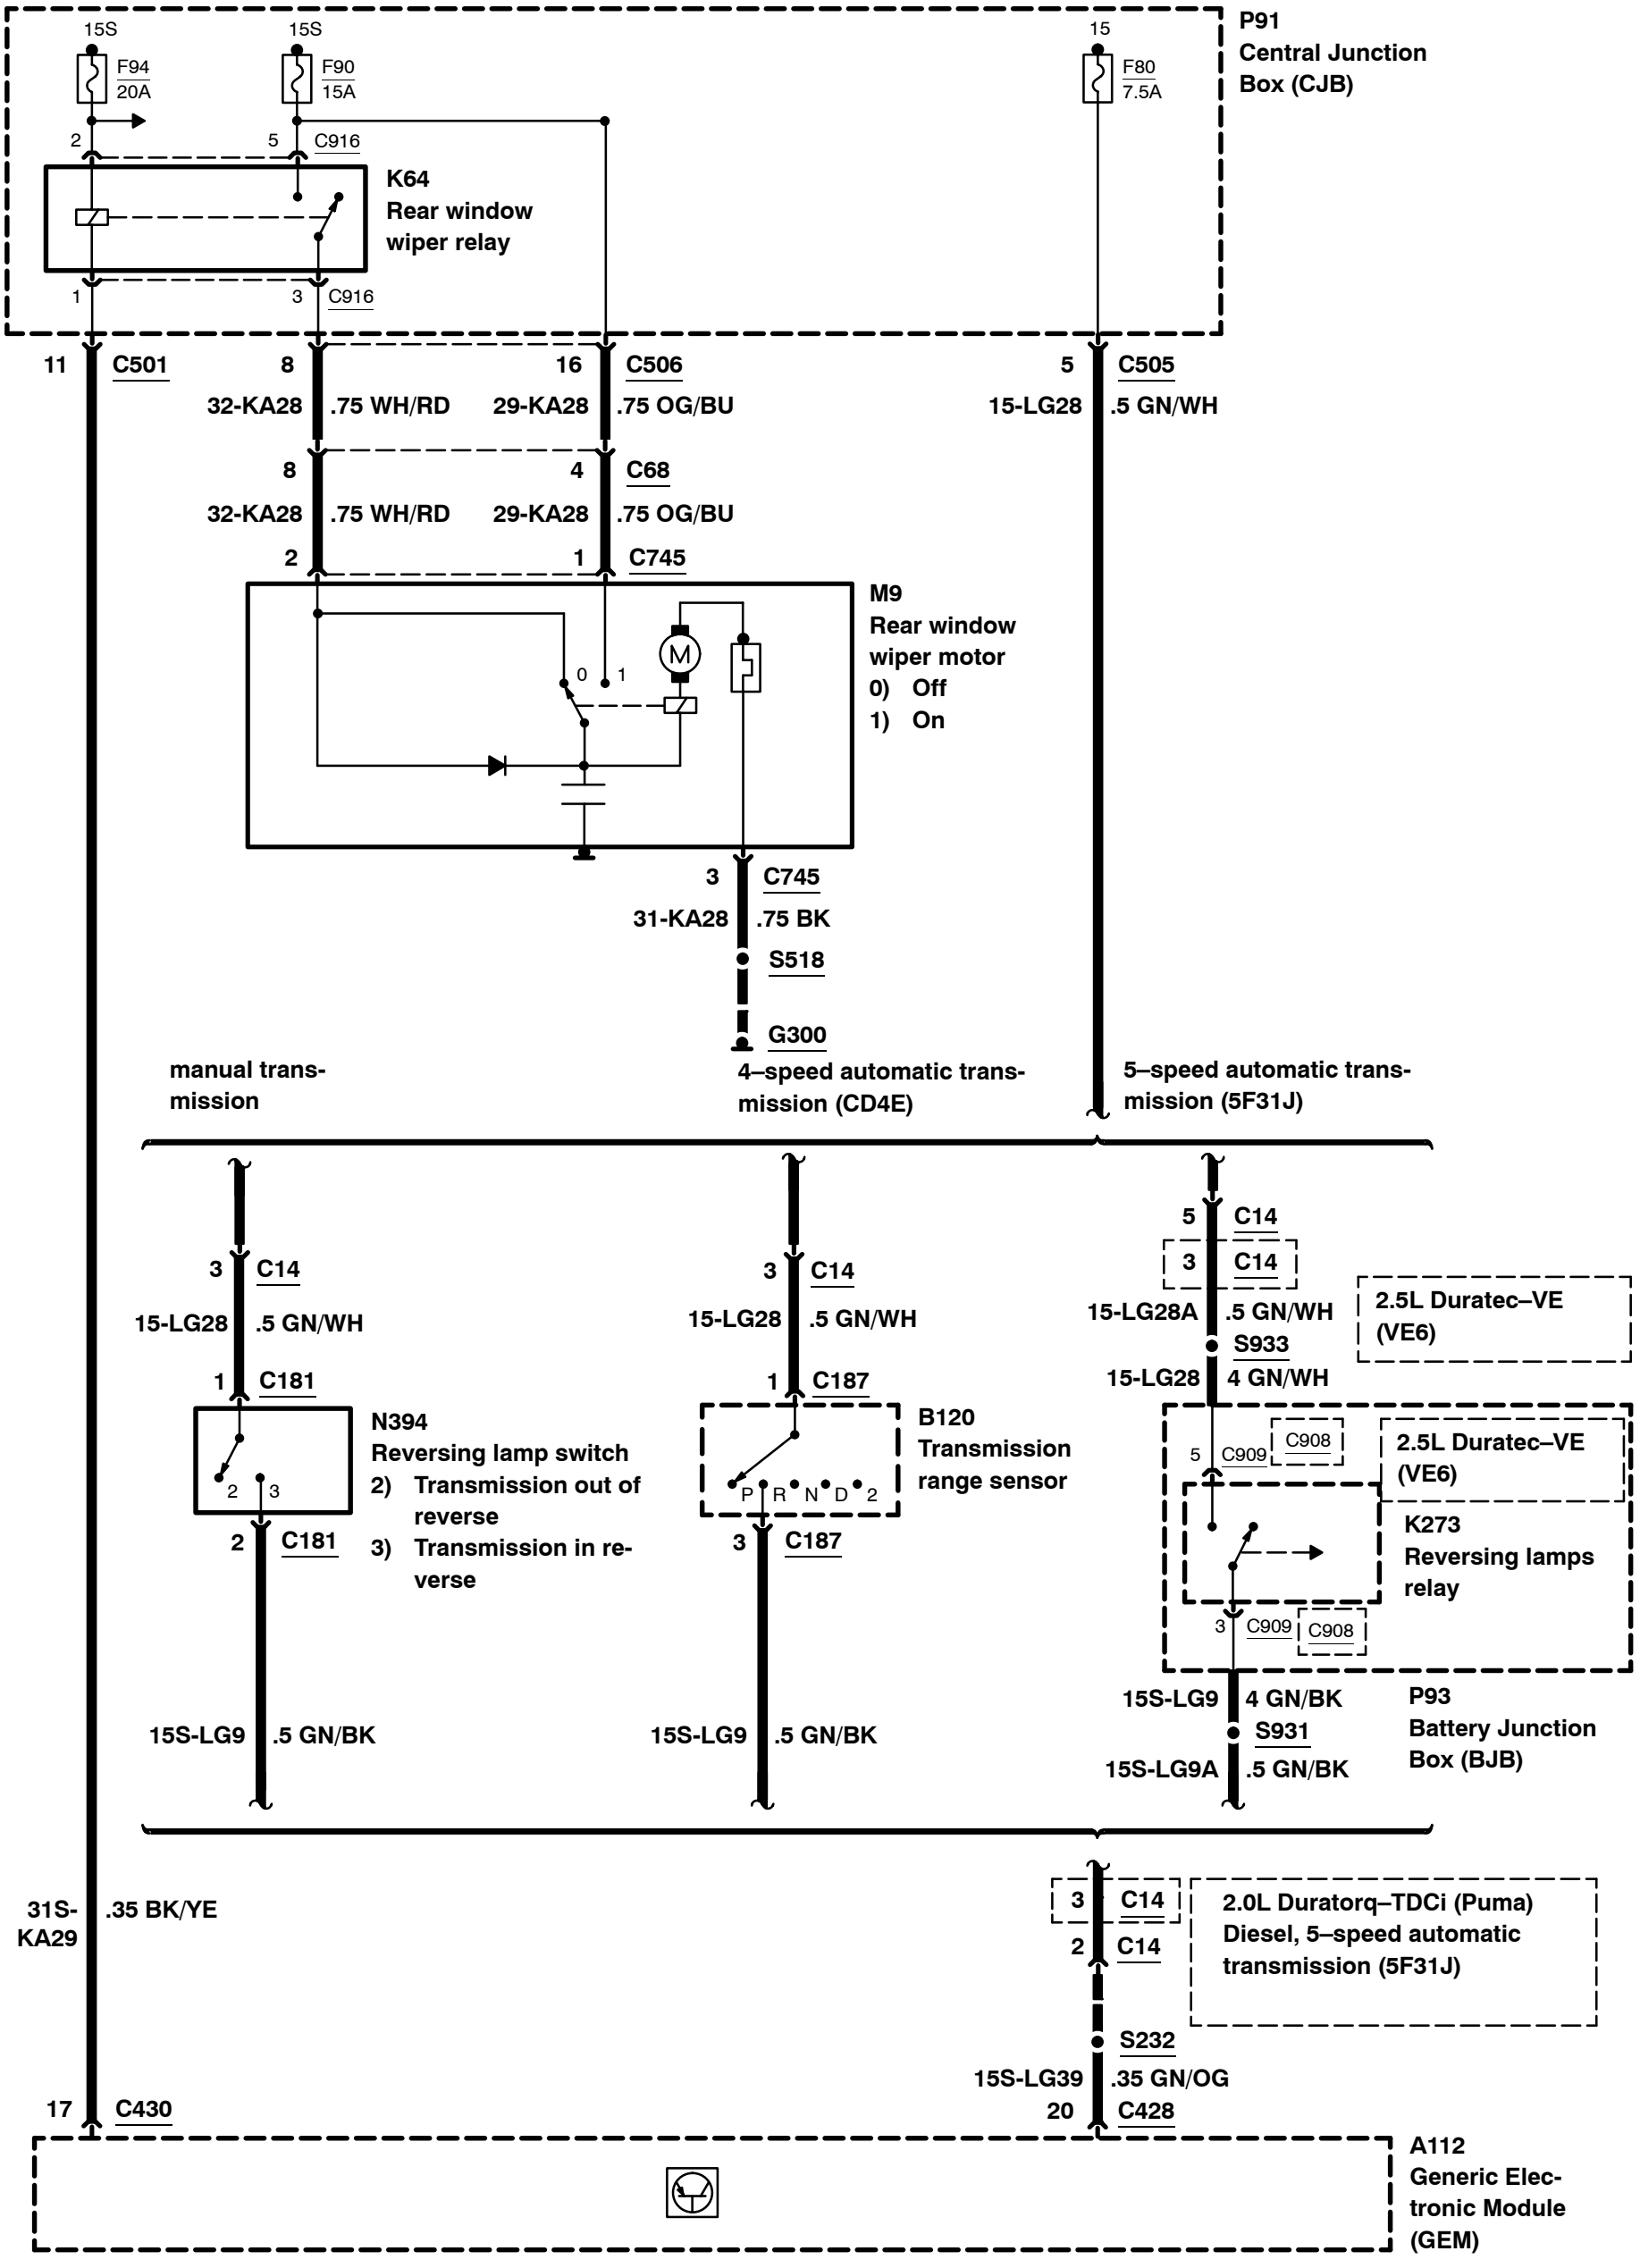


Wipers and Washers – with windshield washer jet heater

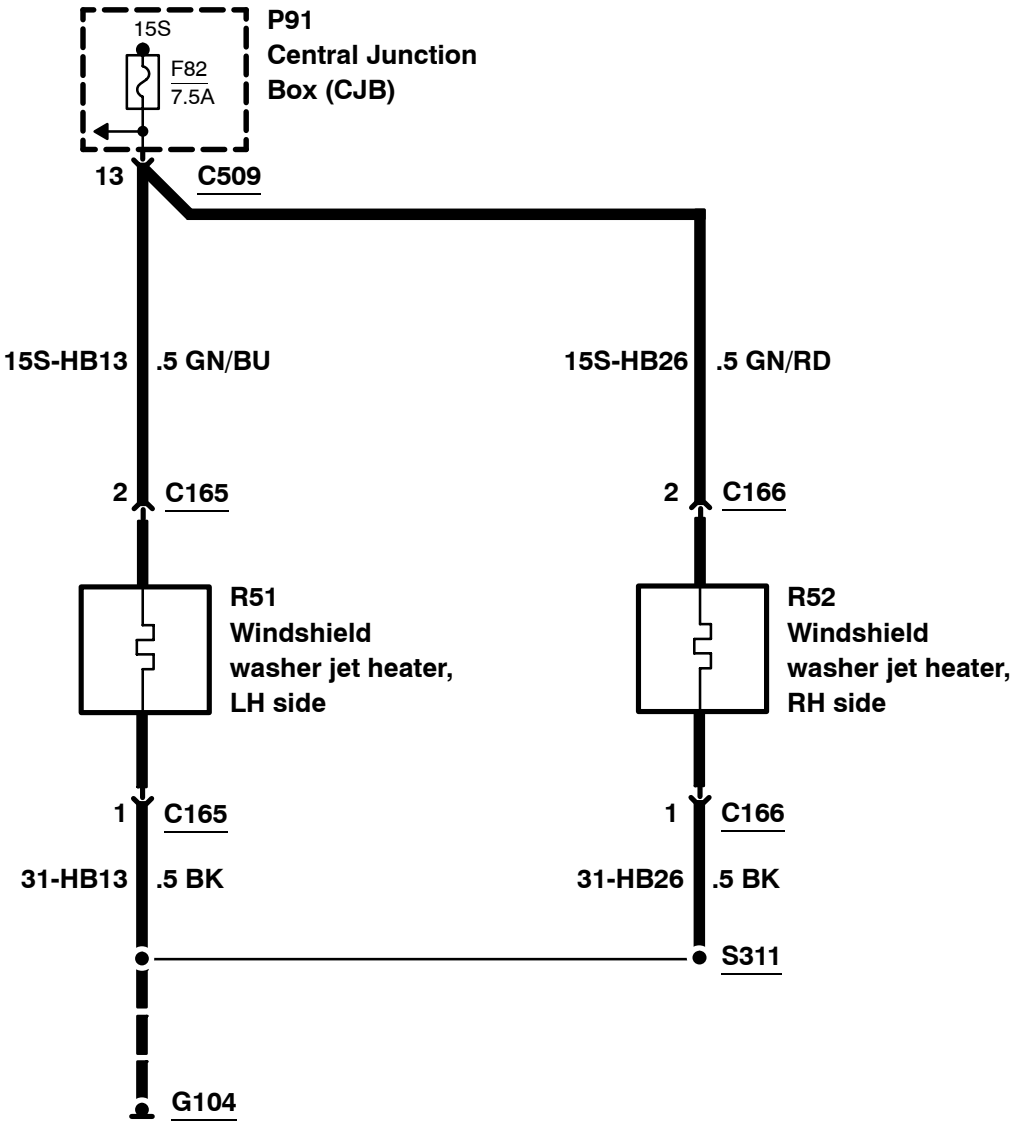


Roof Opening Panel – Petrol engines

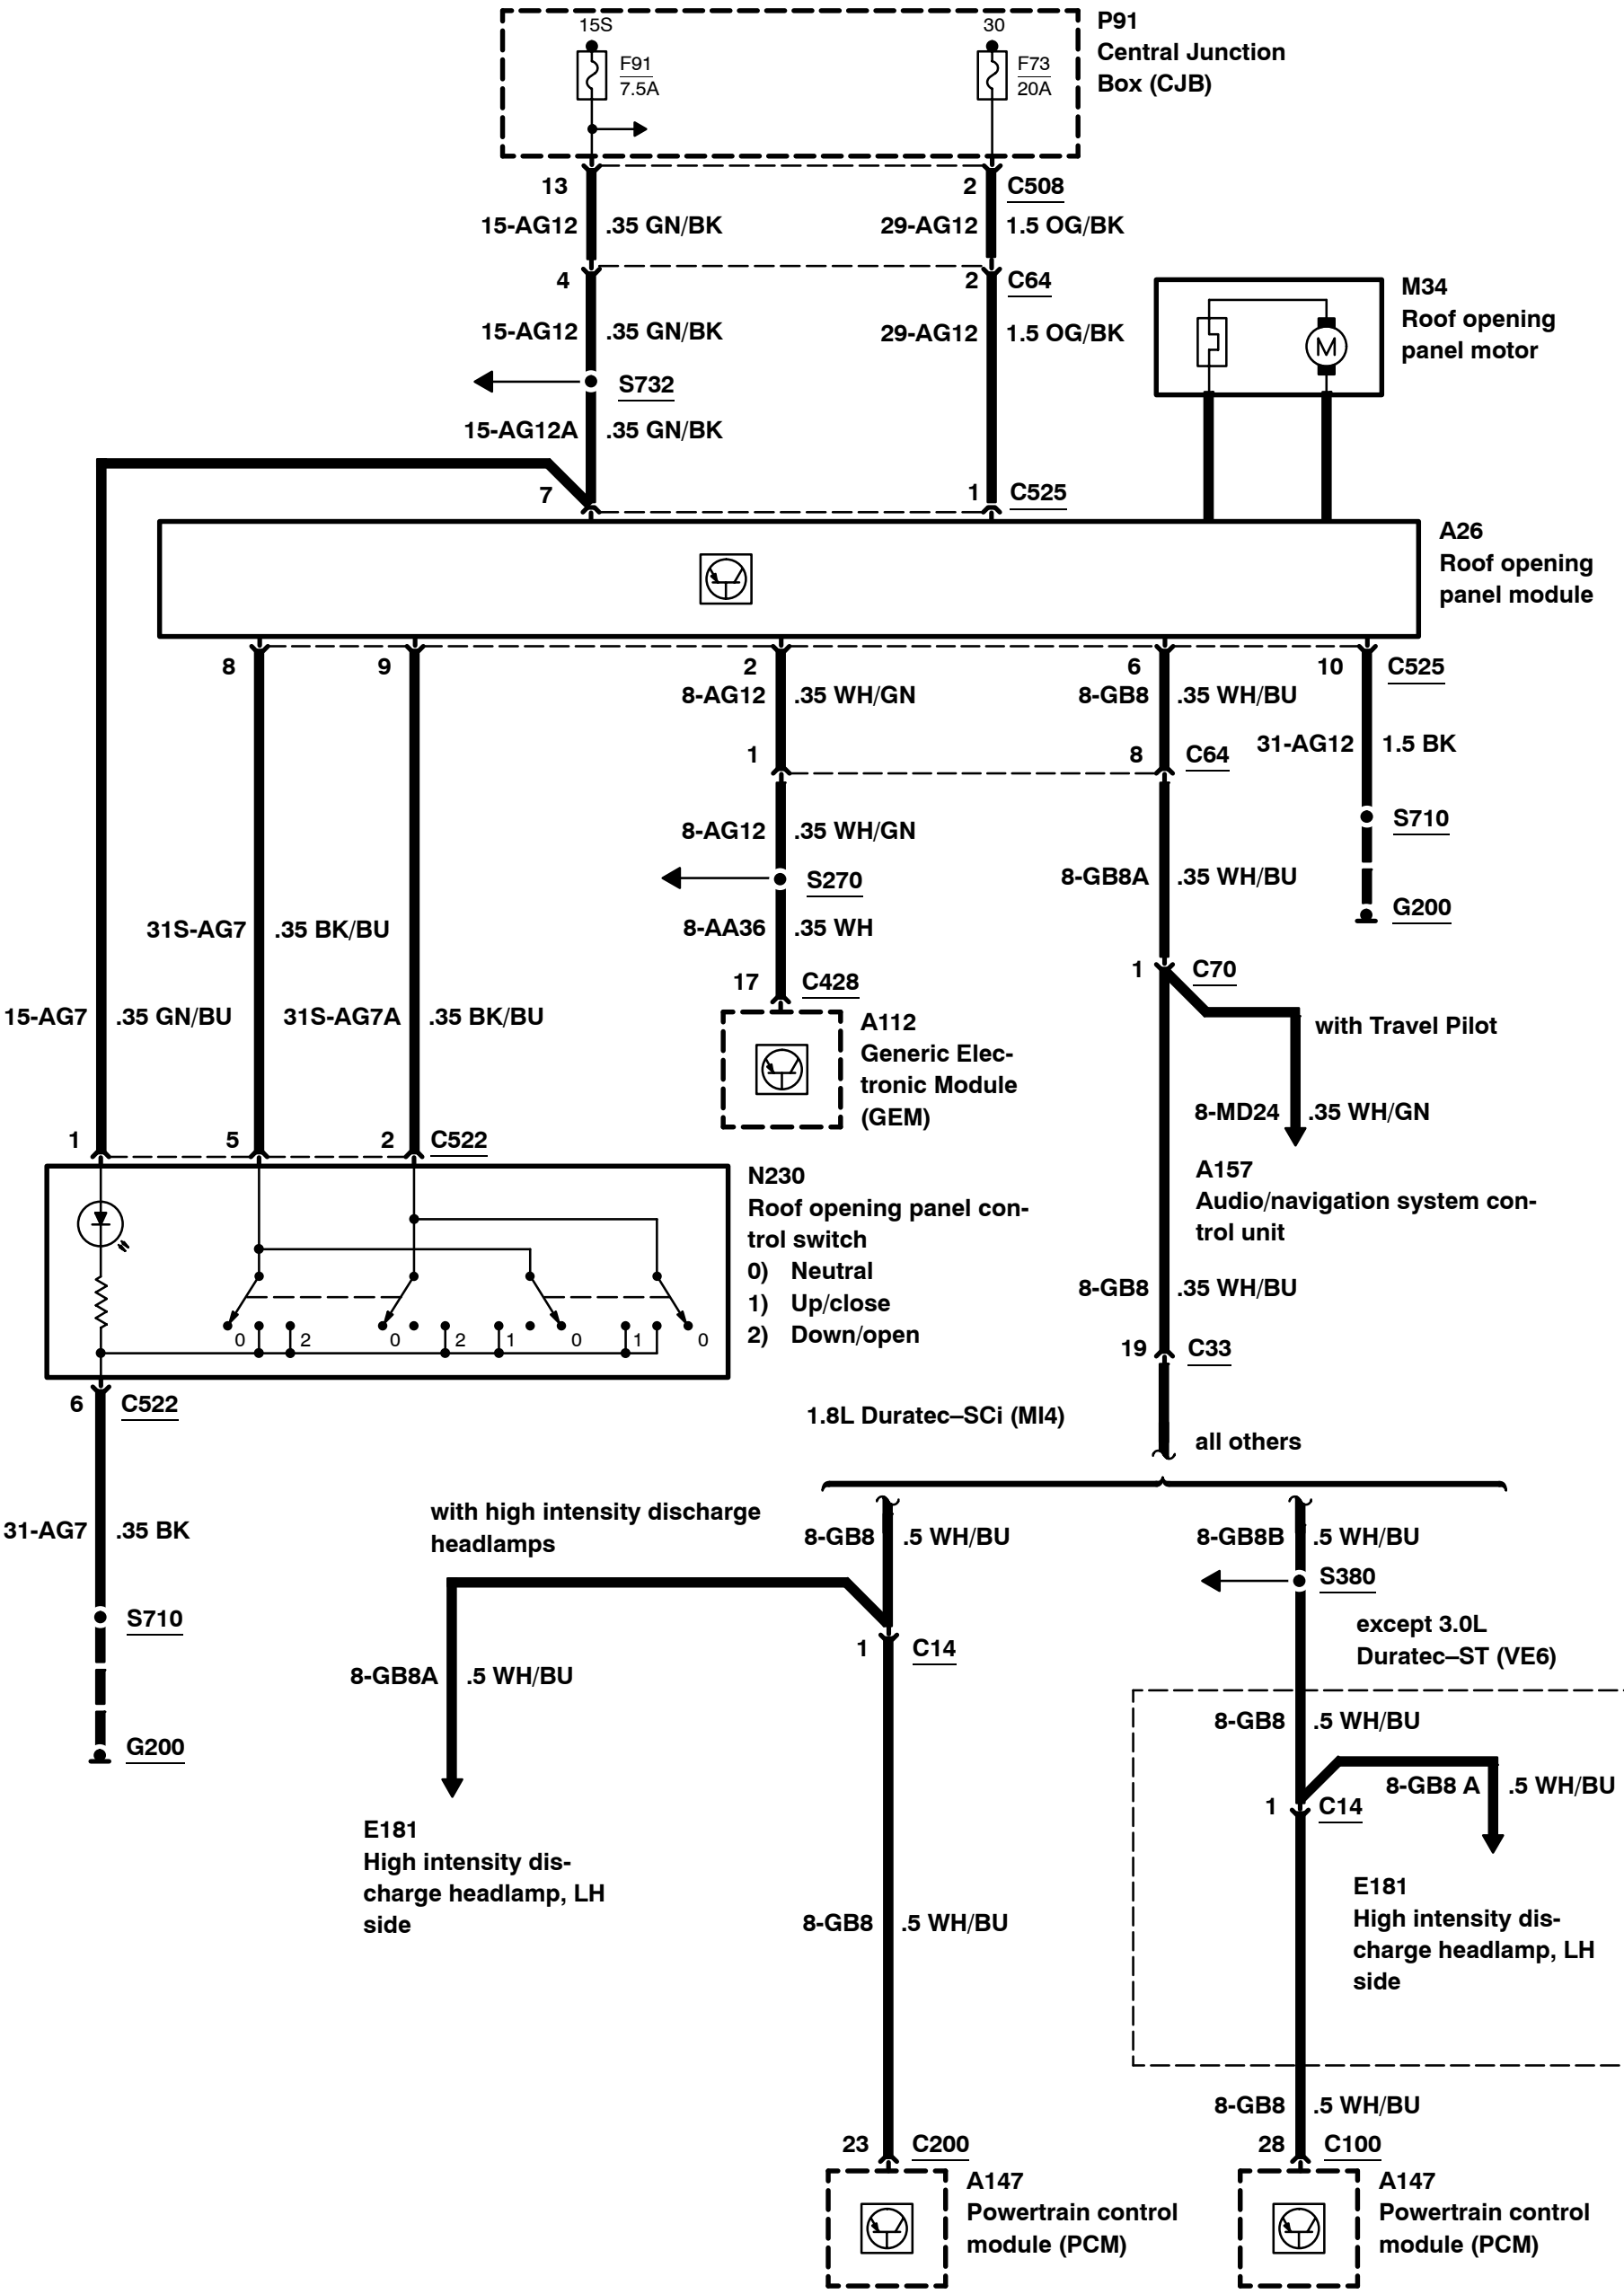


Roof Opening Panel – Diesel engines

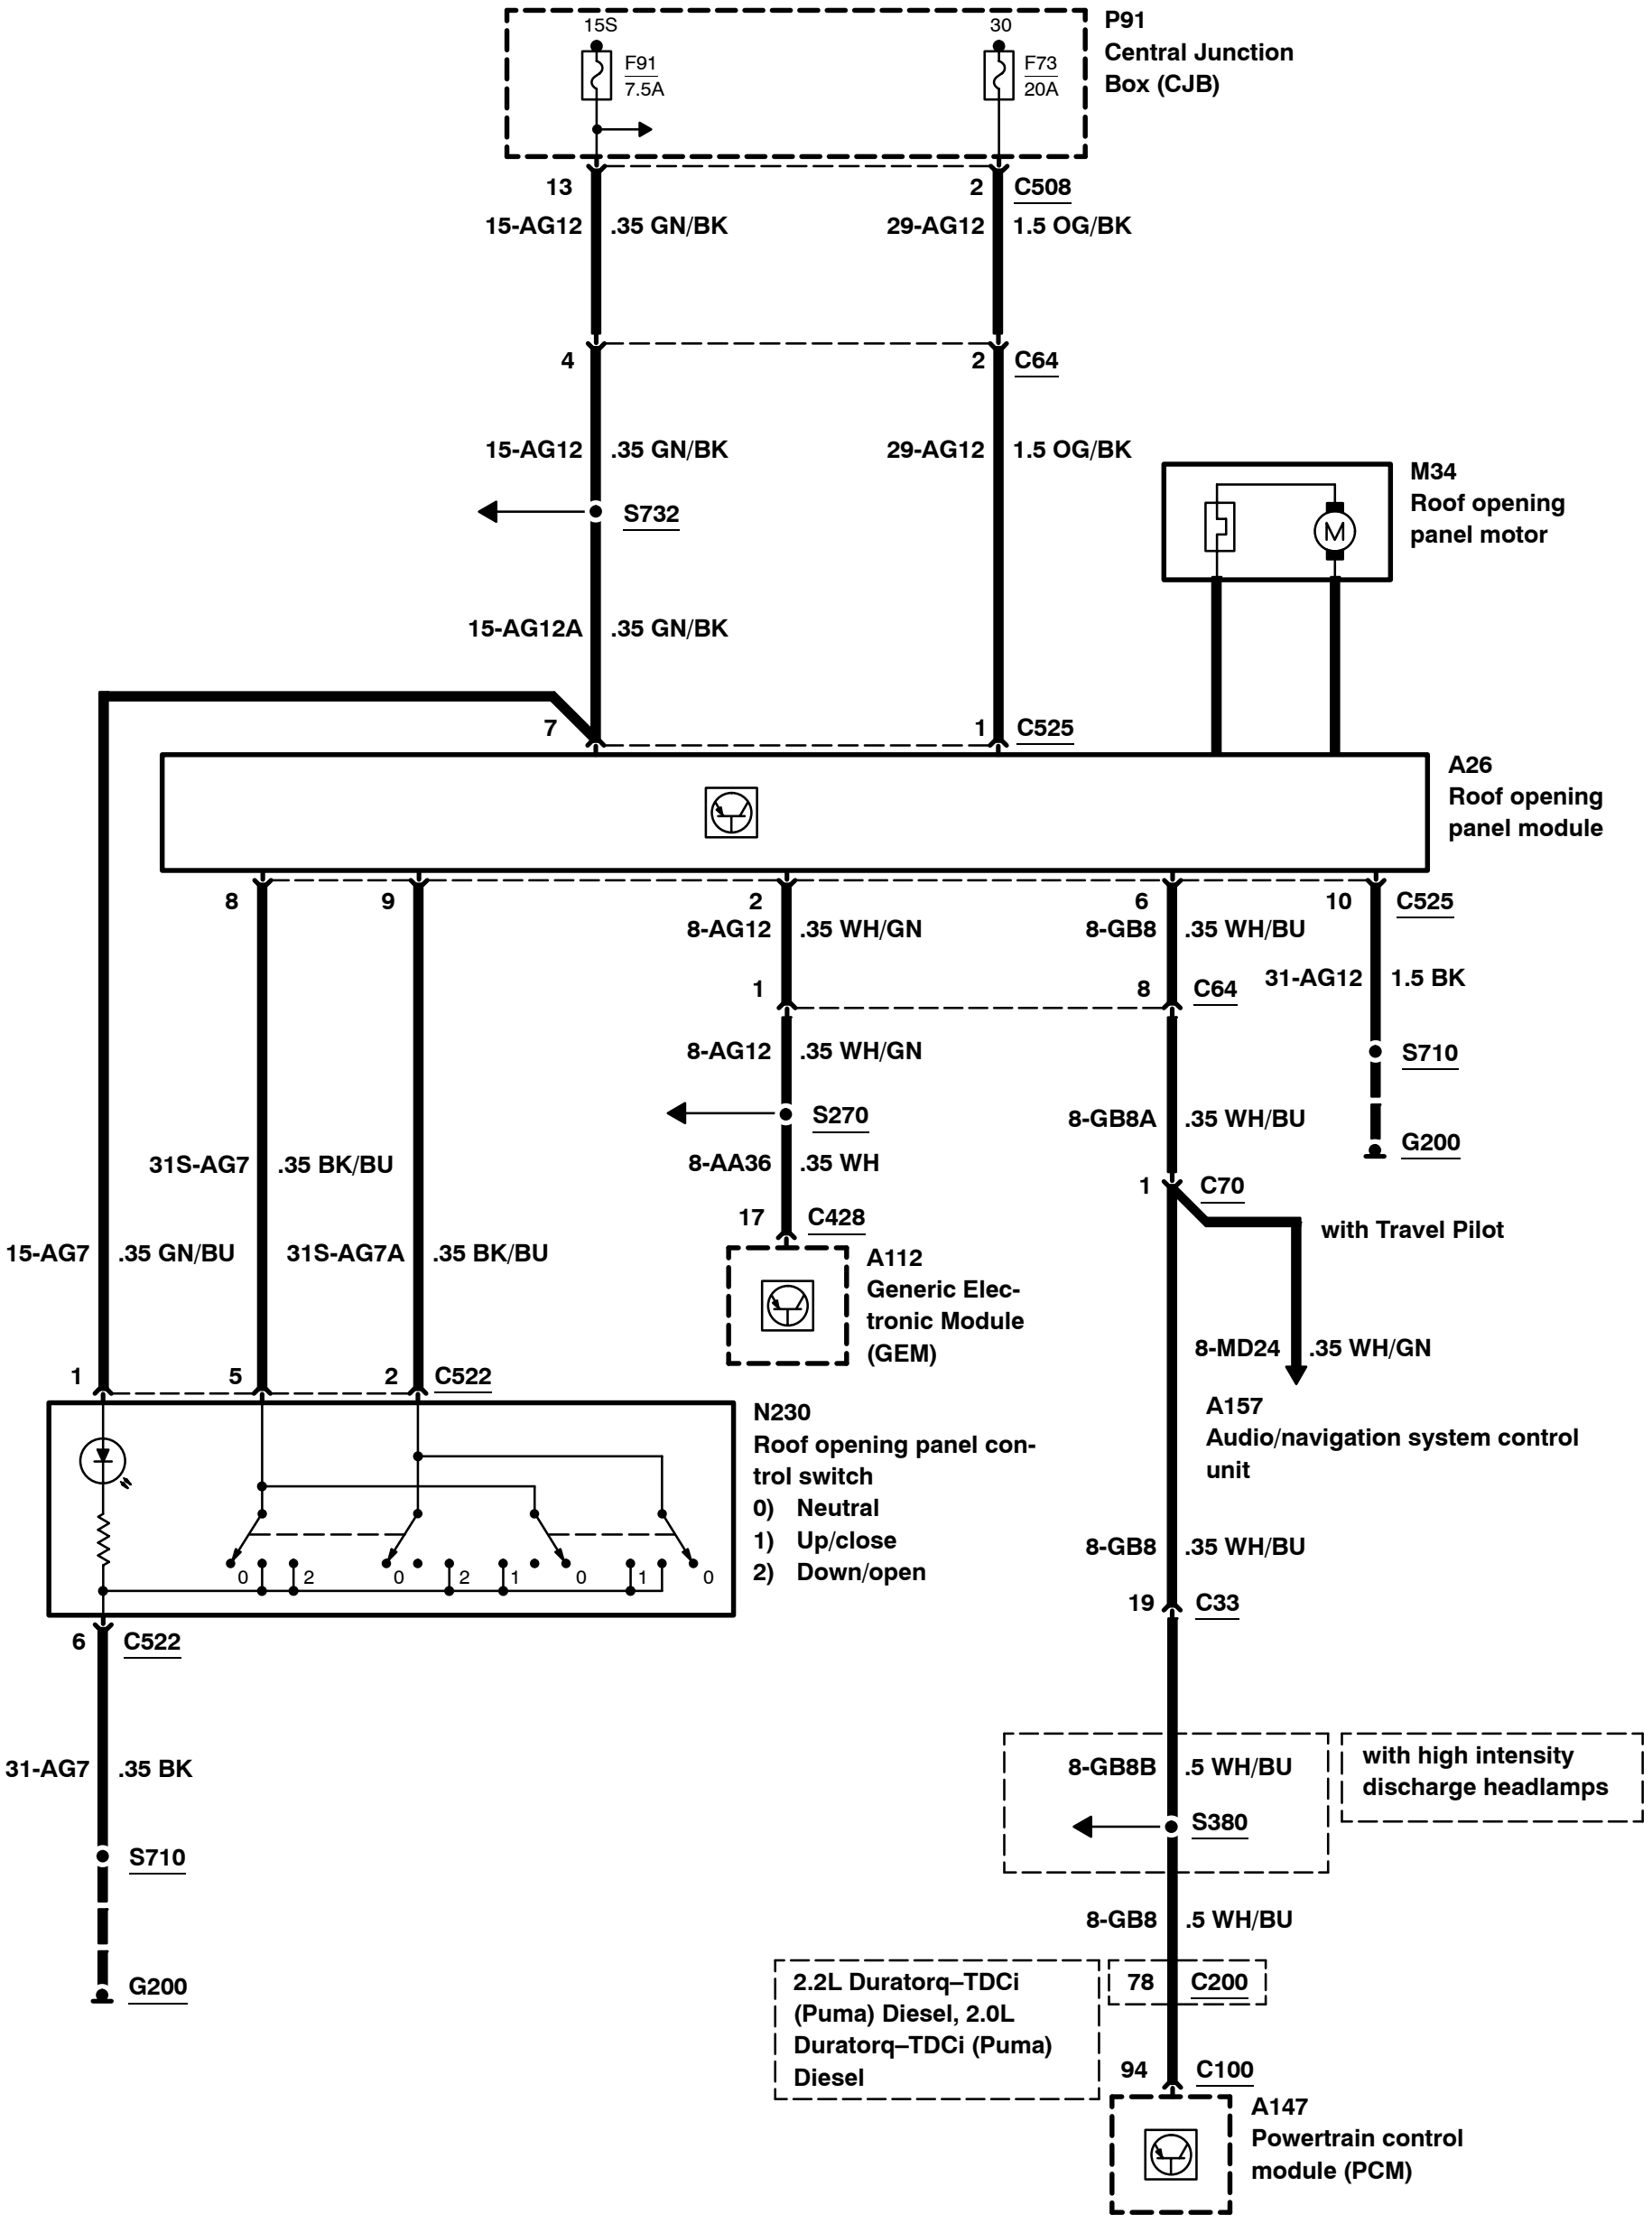


Occupant Restraints – Active

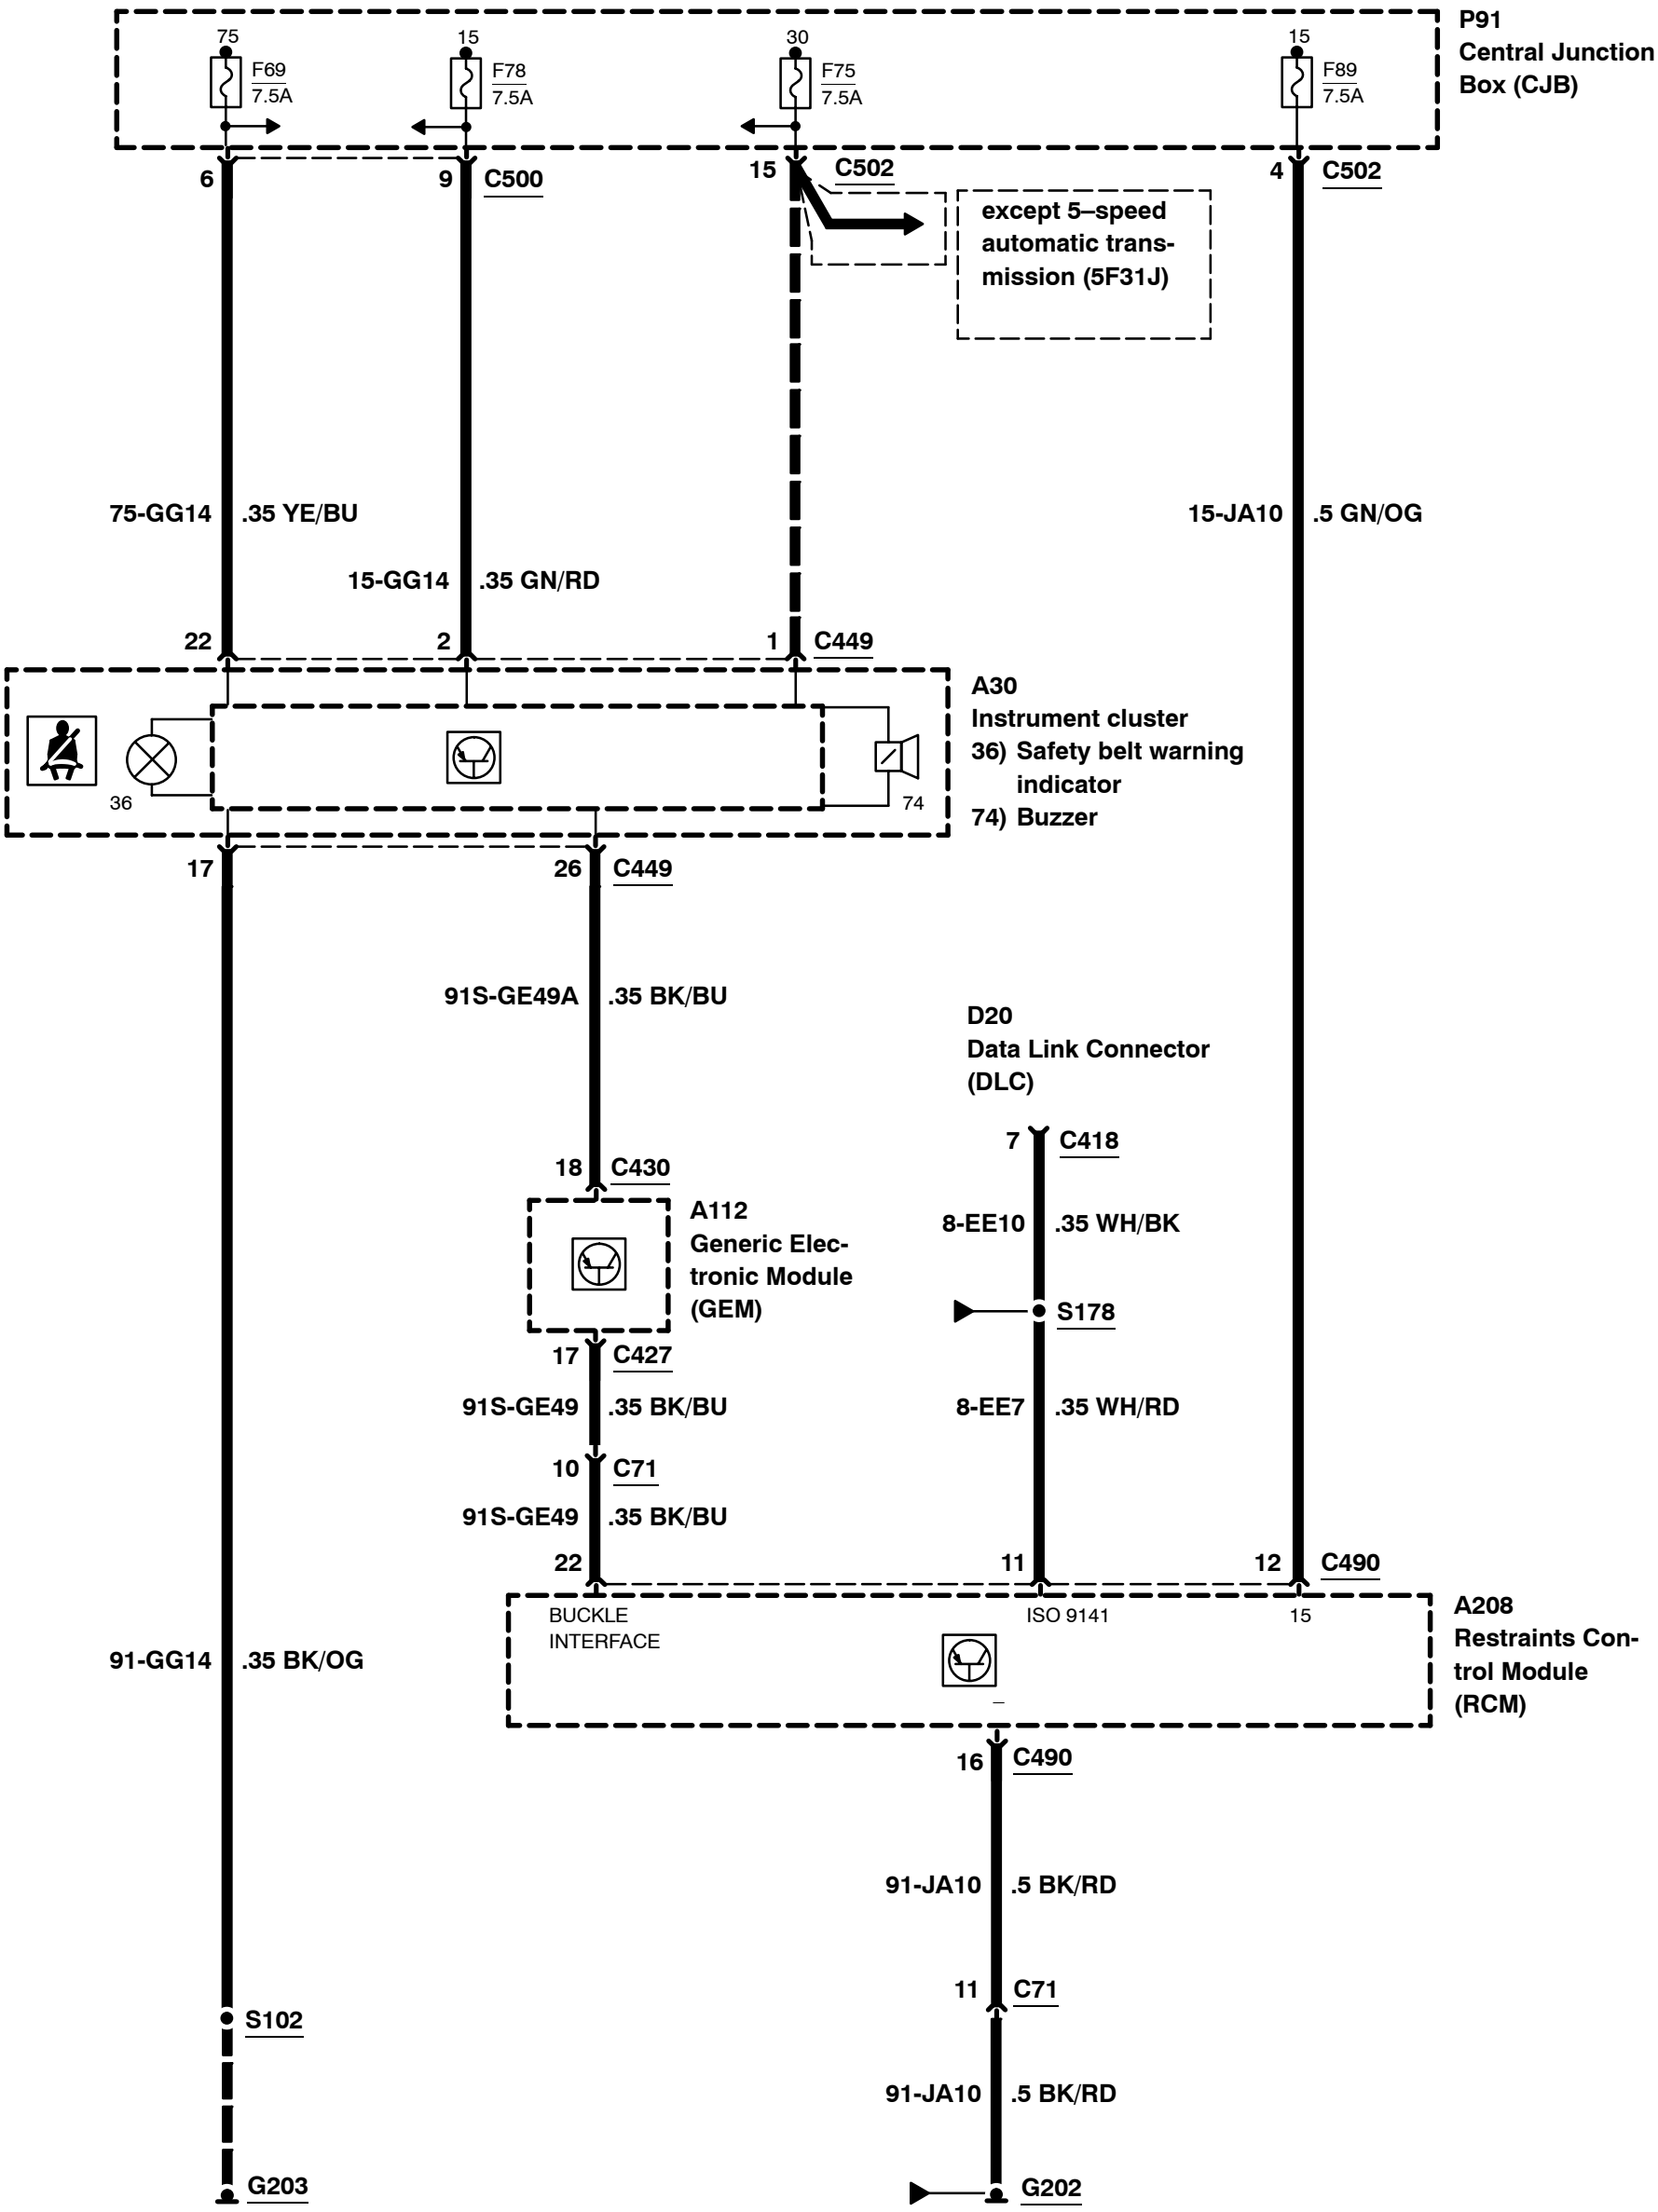


Occupant Restraints – Active

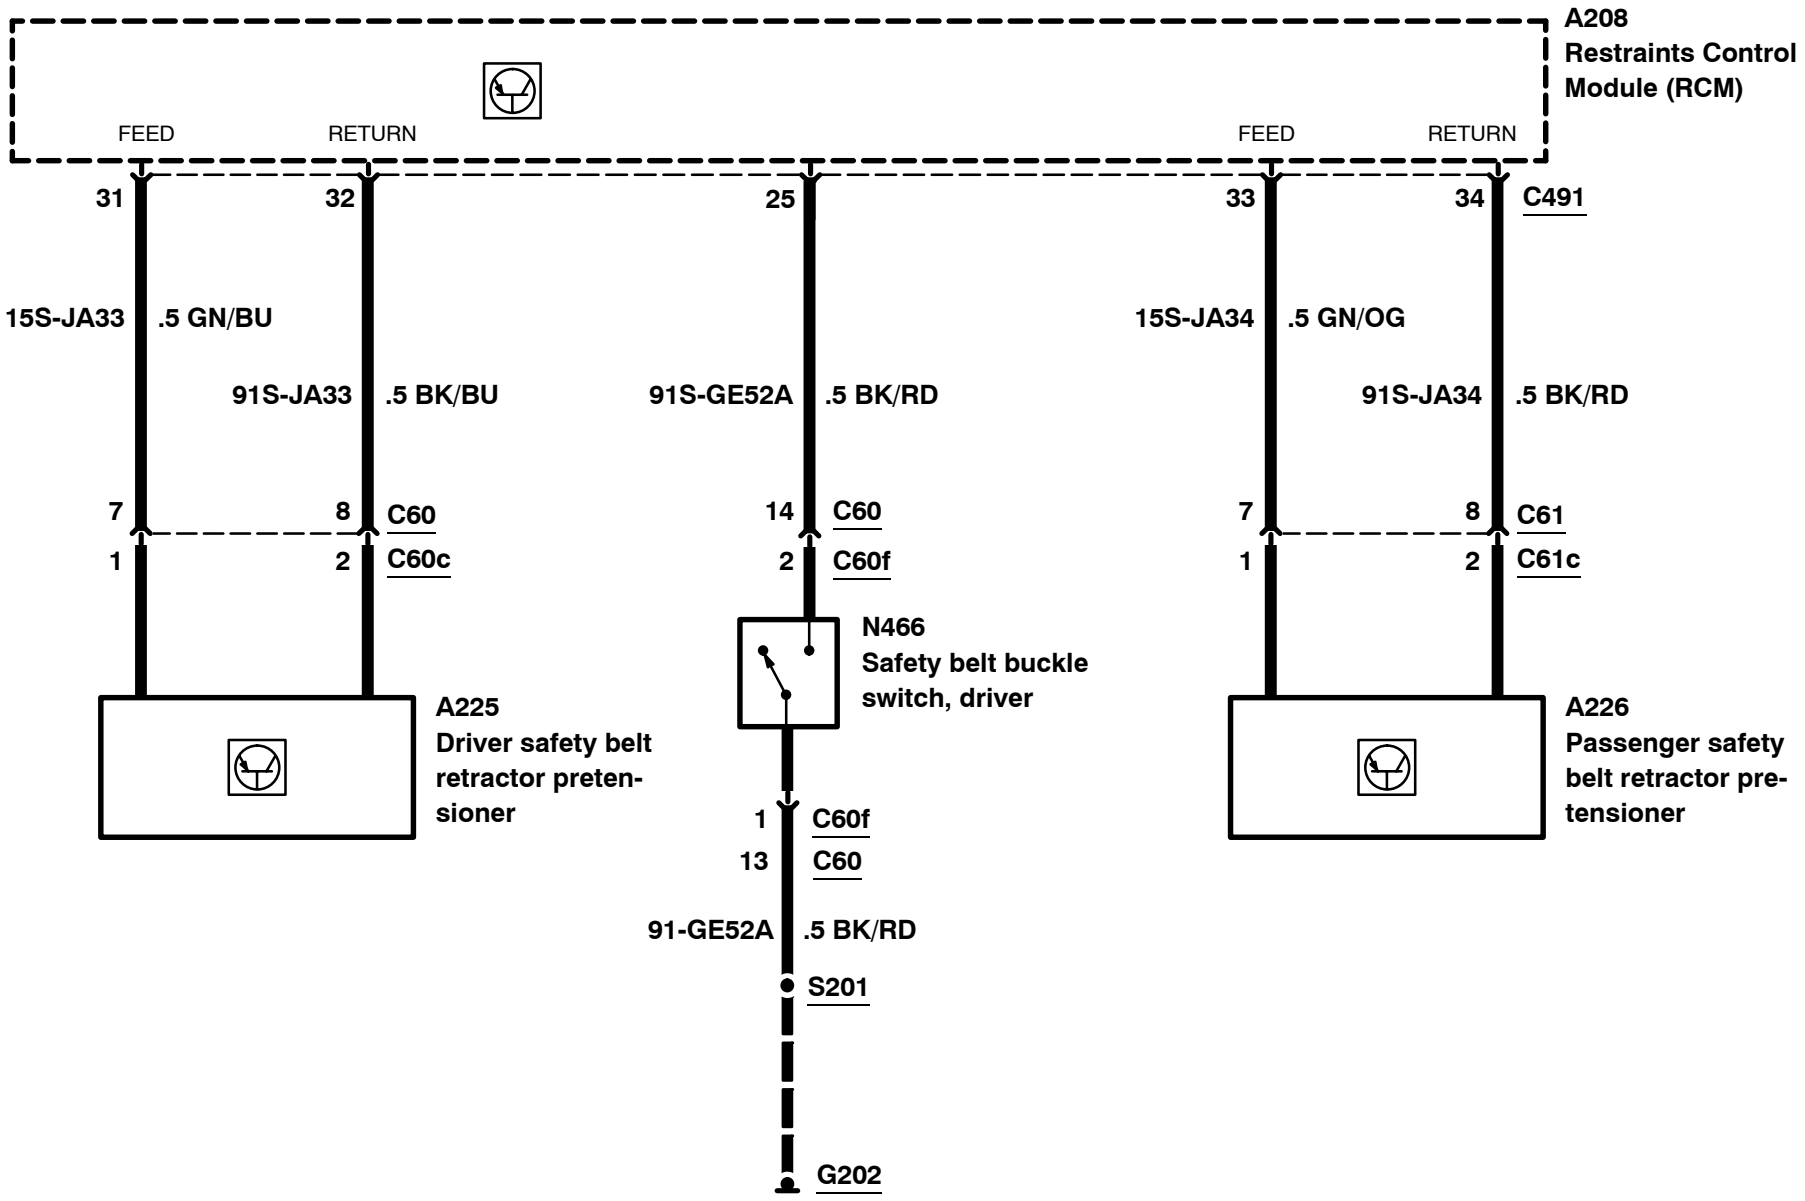


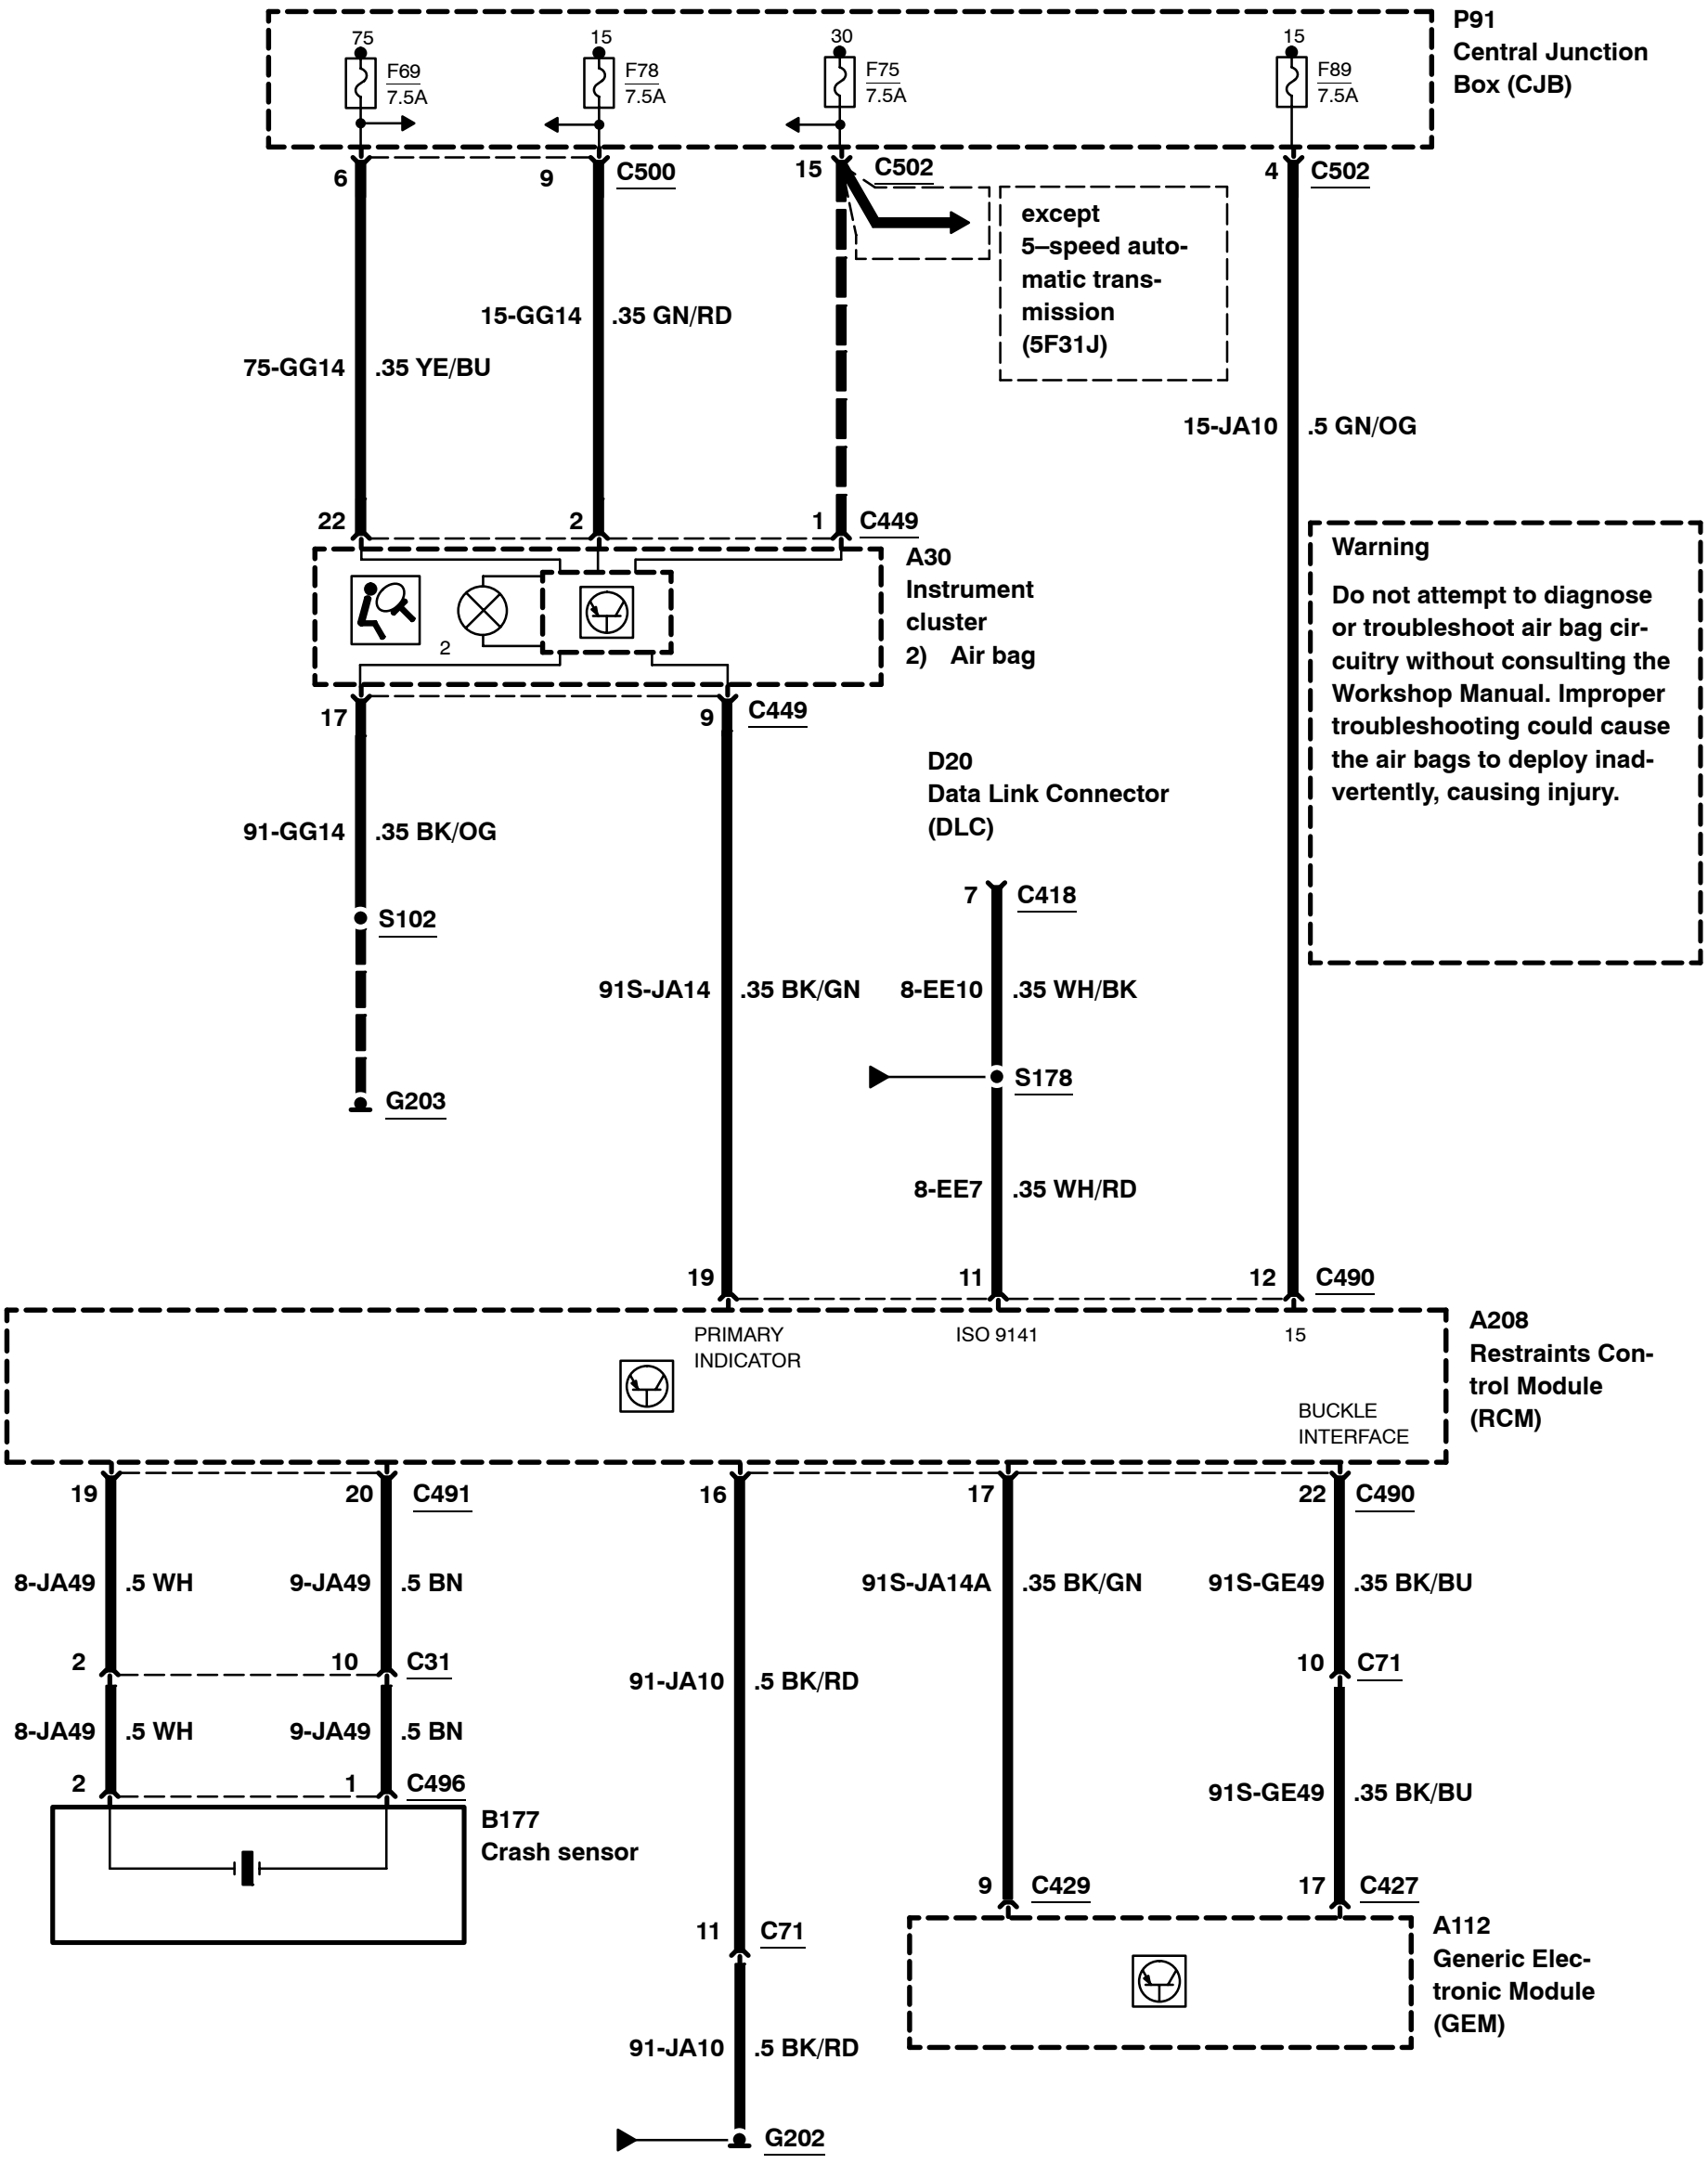
P91
Central Junction Box (CJB)
75
F69
7.5A
15
F78
7.5A
30
F75
7.5A
15
F89
7.5A
6
9
C500
15
C502
4
C502
except 5–speed automatic transmission (5F31J)
15-GG14 .35 GN/RD
75-GG14 .35 YE/BU
15-JA10 .5 GN/OG
22
2
1
C449
A30
Instrument cluster
2) Air bag
2
17
9
C449
D20
Data Link Connector (DLC)
91-GG14 .35 BK/OG
S102
G203
7
C418
91S-JA14 .35 BK/GN
8-EE10 .35 WH/BK
S178
8-EE7 .35 WH/RD
19
11
12
C490
PRIMARY INDICATOR
ISO 9141
15
BUCKLE INTERFACE
A208
Restraints Control Module (RCM)
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
19
20
C491
8-JA49 .5 WH
9-JA49 .5 BN
2
10
C31
8-JA49 .5 WH
9-JA49 .5 BN
2
1
C496
B177
Crash sensor
16
17
22
C490
91S-JA14A .35 BK/GN
91S-GE49 .35 BK/BU
91-JA10 .5 BK/RD
10
C71
91S-GE49 .35 BK/BU
9
C429
17
C427
A112
Generic Electronic Module (GEM)
11
C71
91-JA10 .5 BK/RD
G202


Occupant Restraints – Passive – Driver air bag

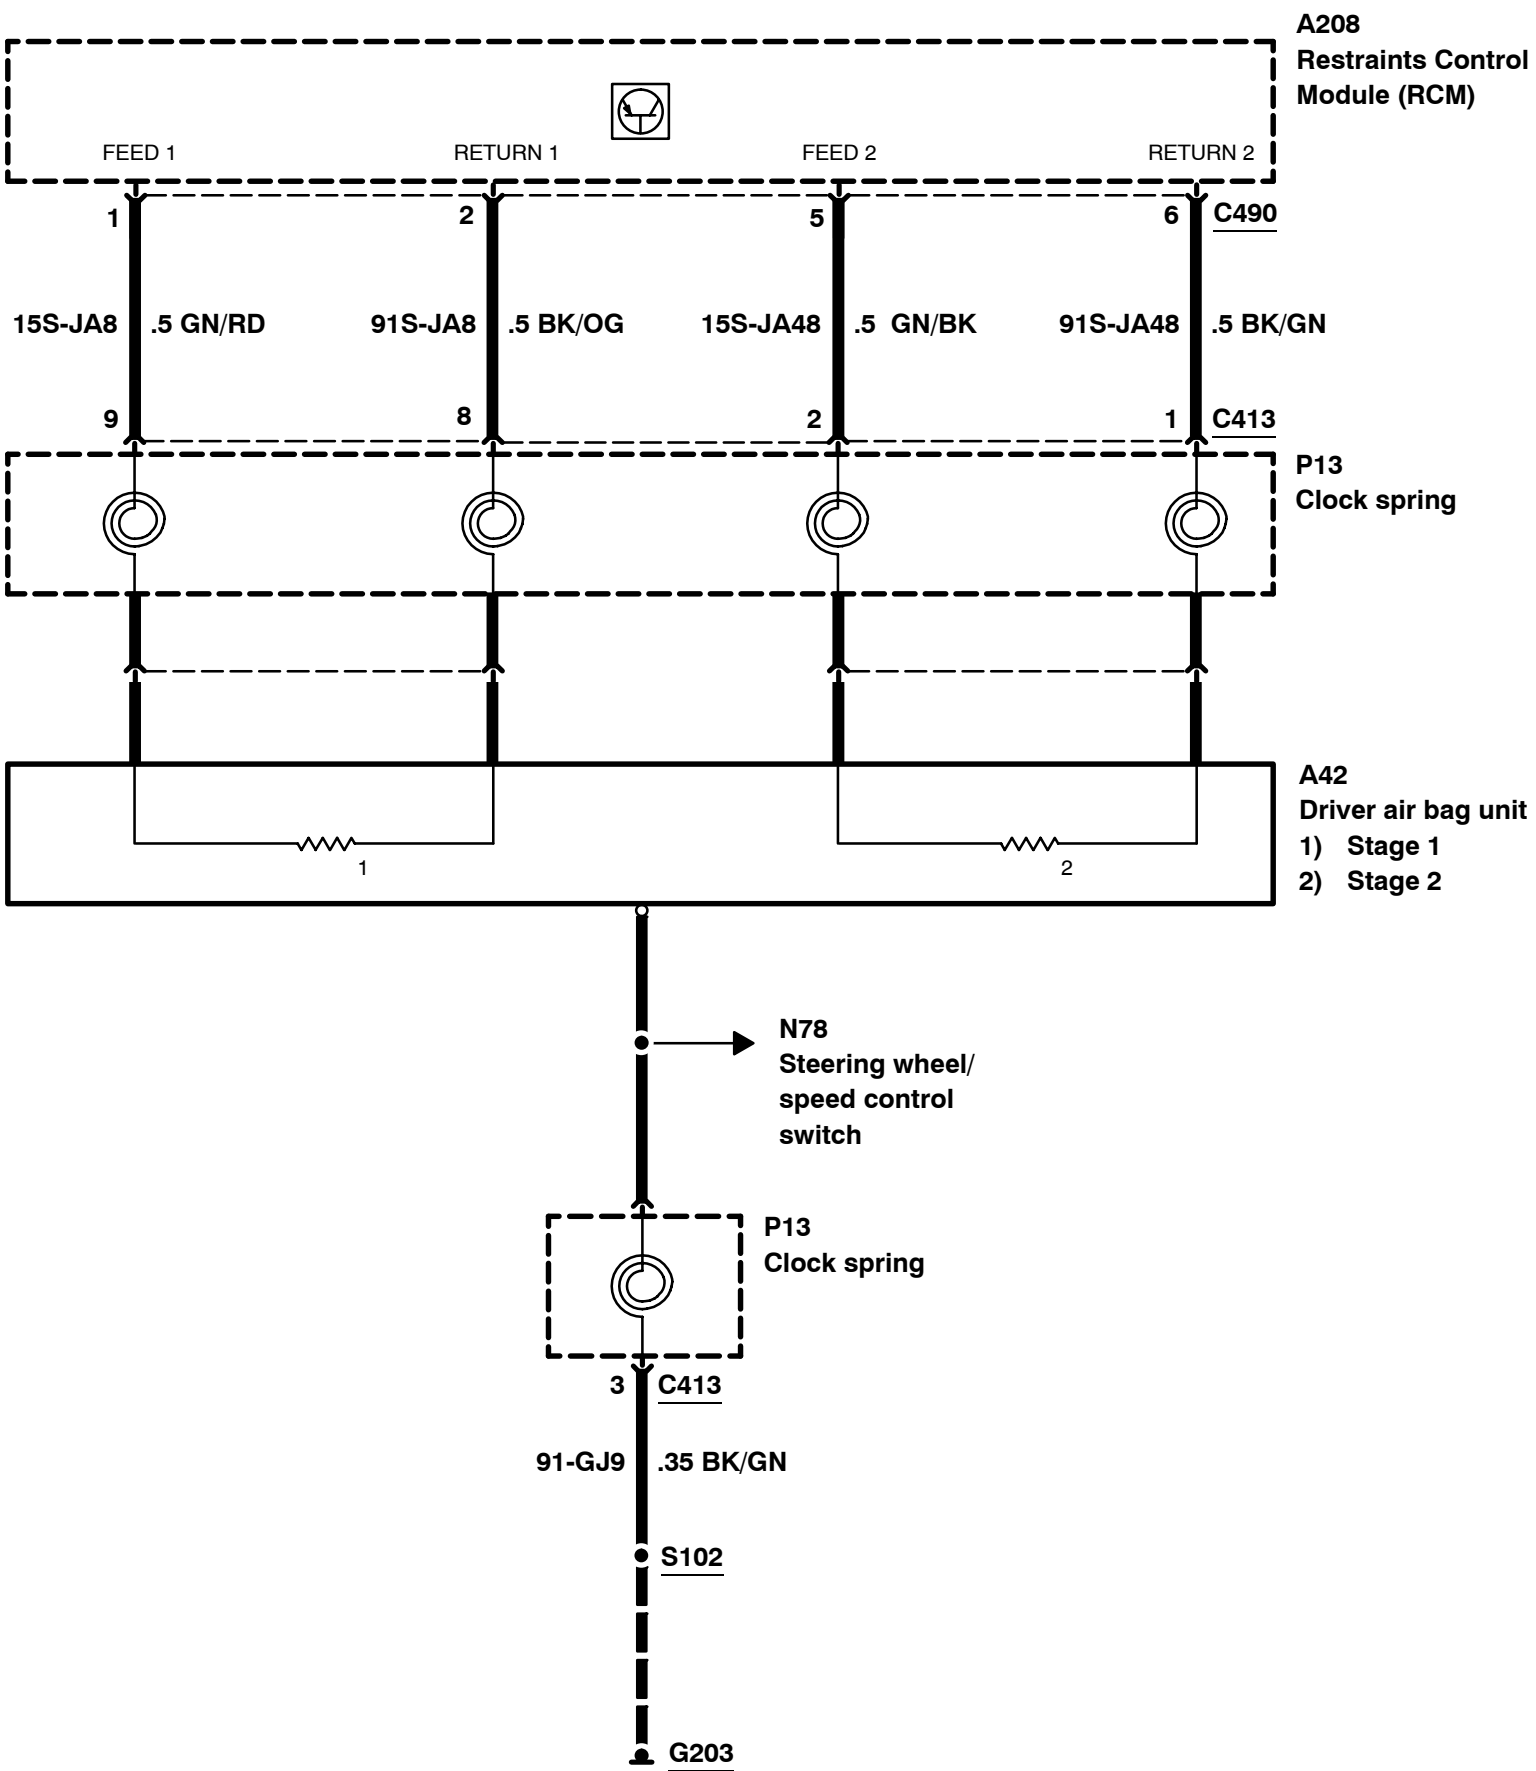


Occupant Restraints – Passive – Passenger air bag

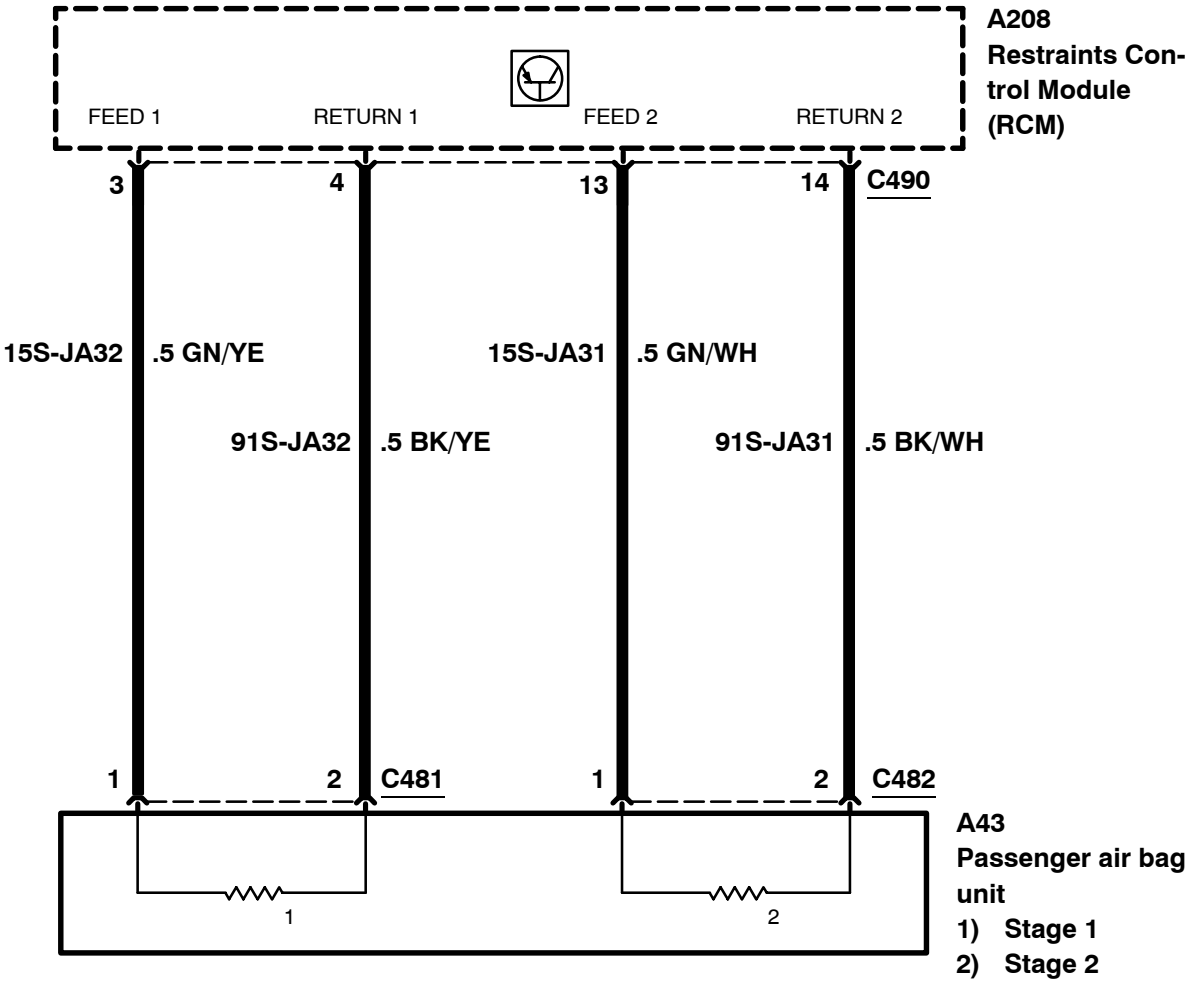


Occupant Restraints – Passive – with side head air bags

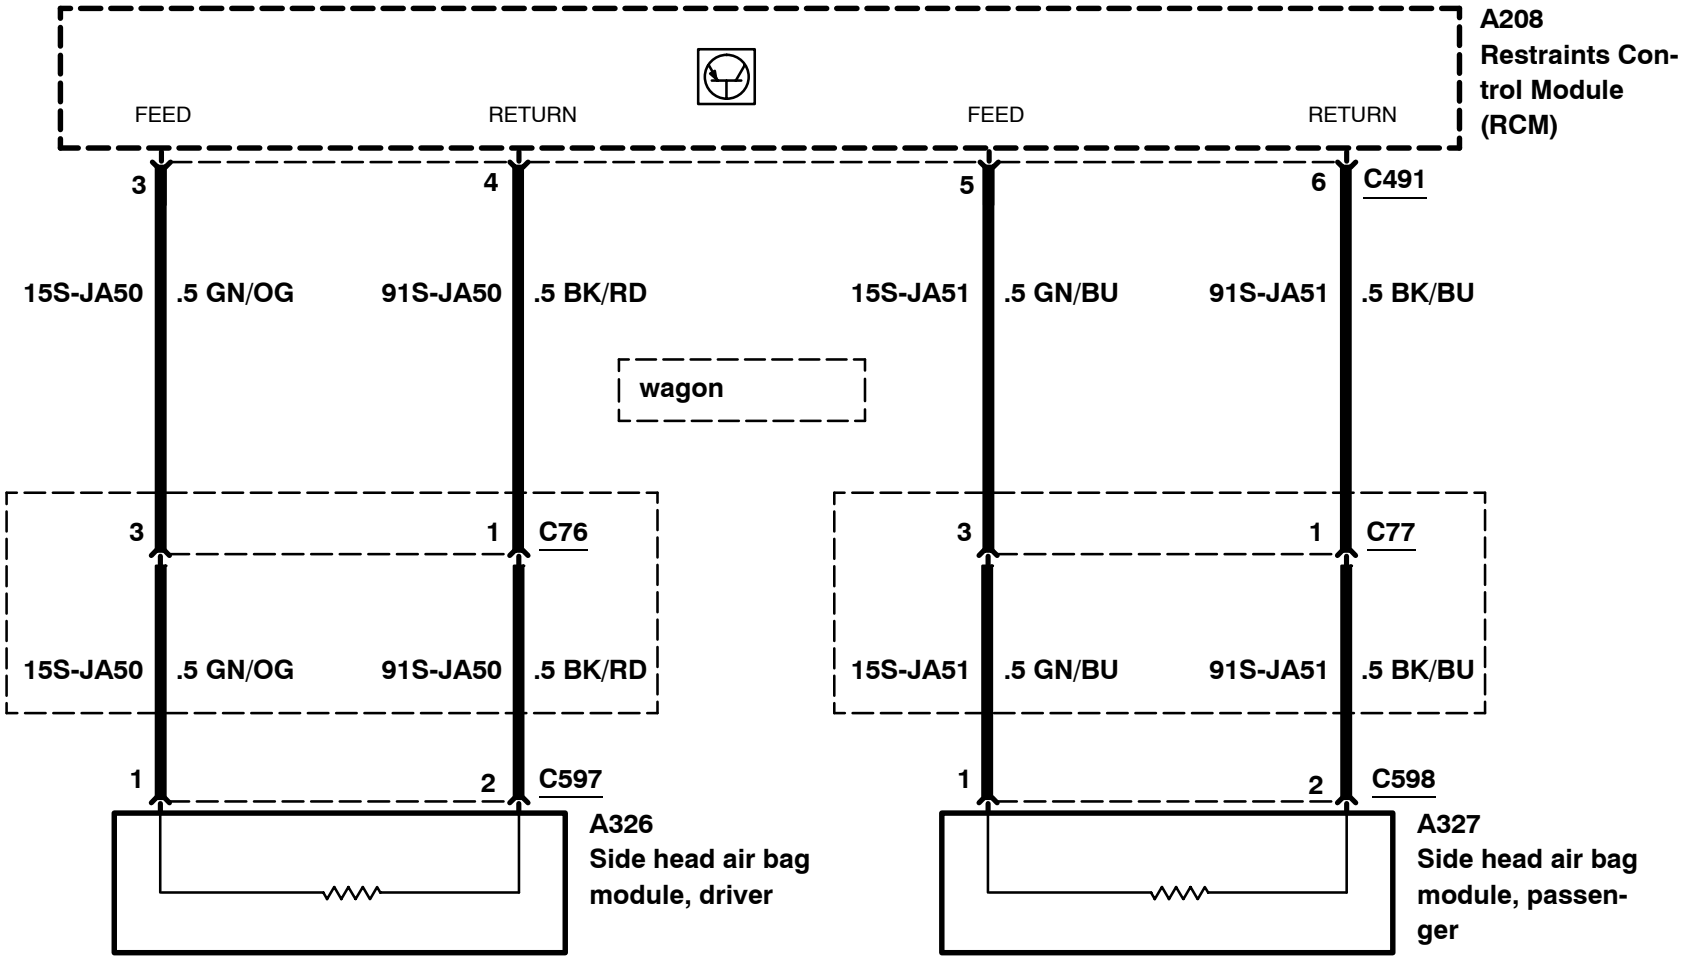


Occupant Restraints – Passive – Side air bag

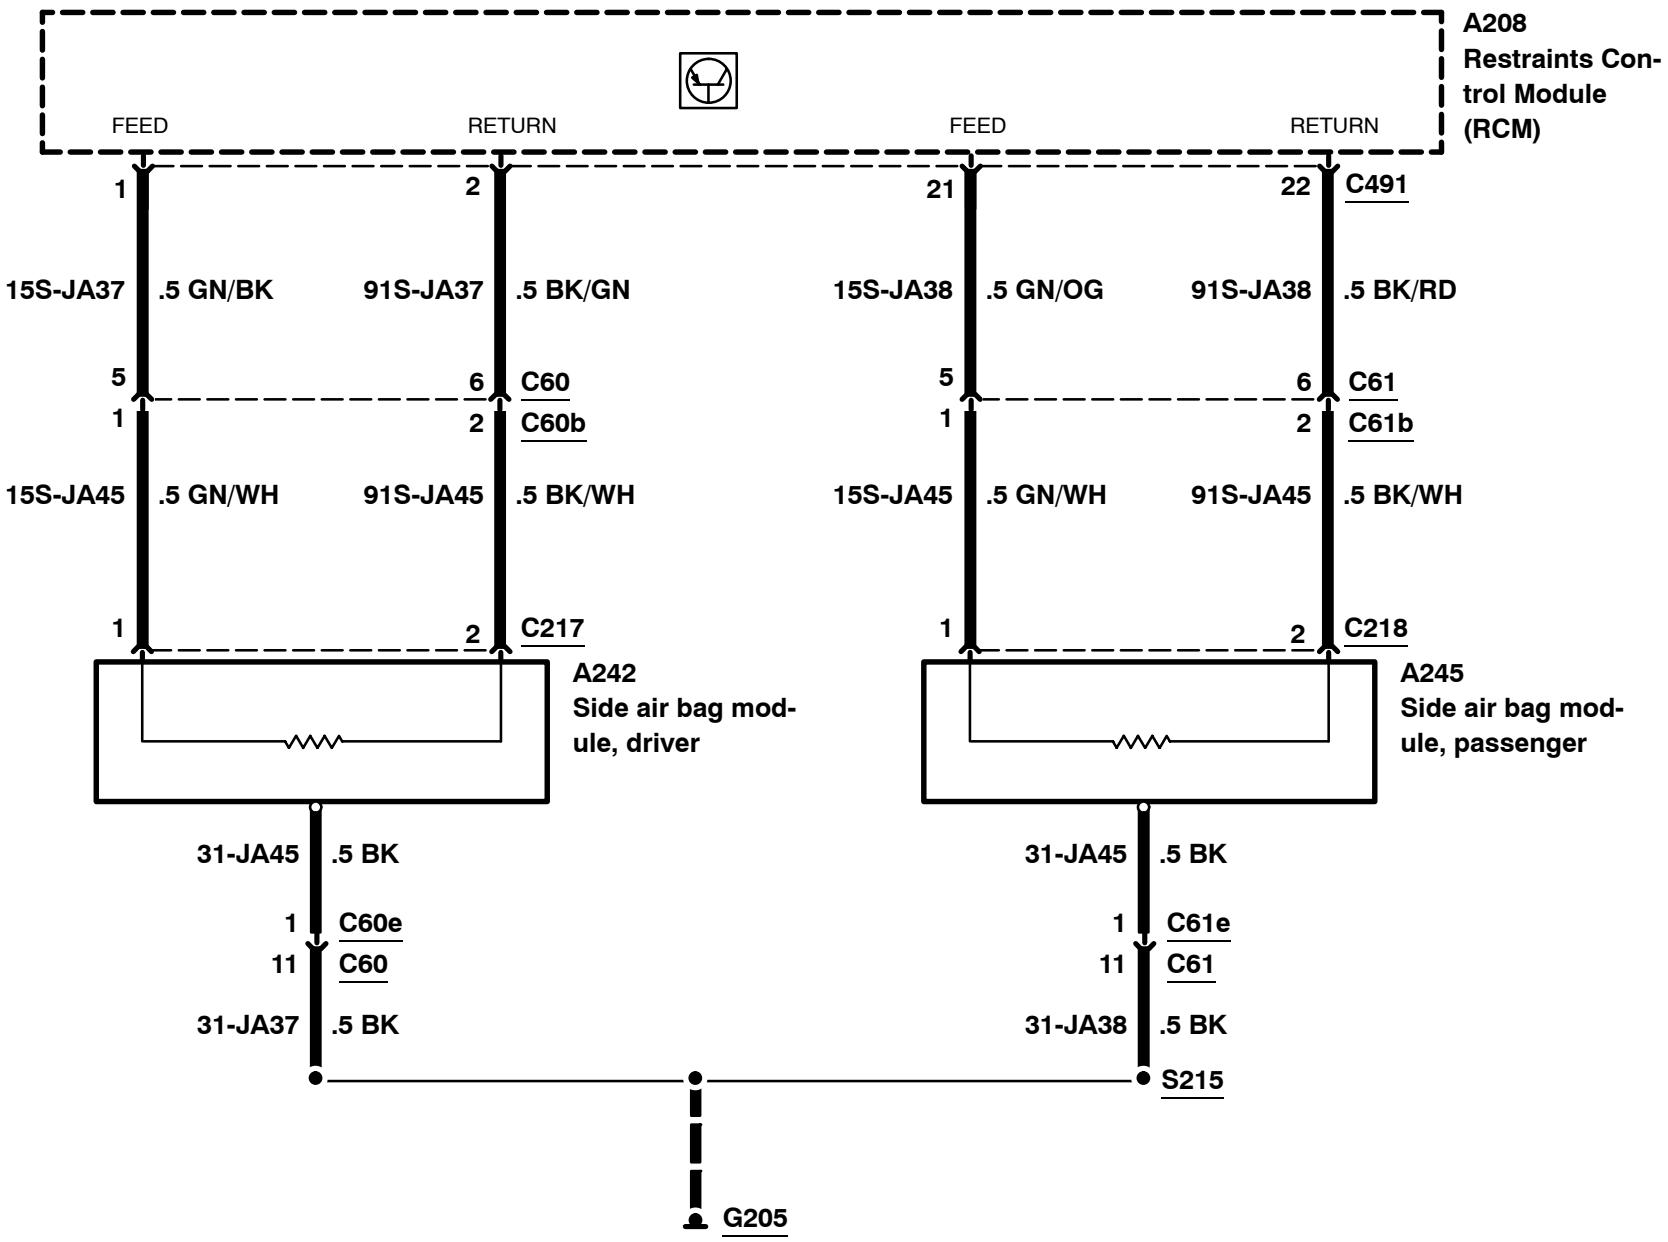

Occupant Restraints – Passive – Side air bag

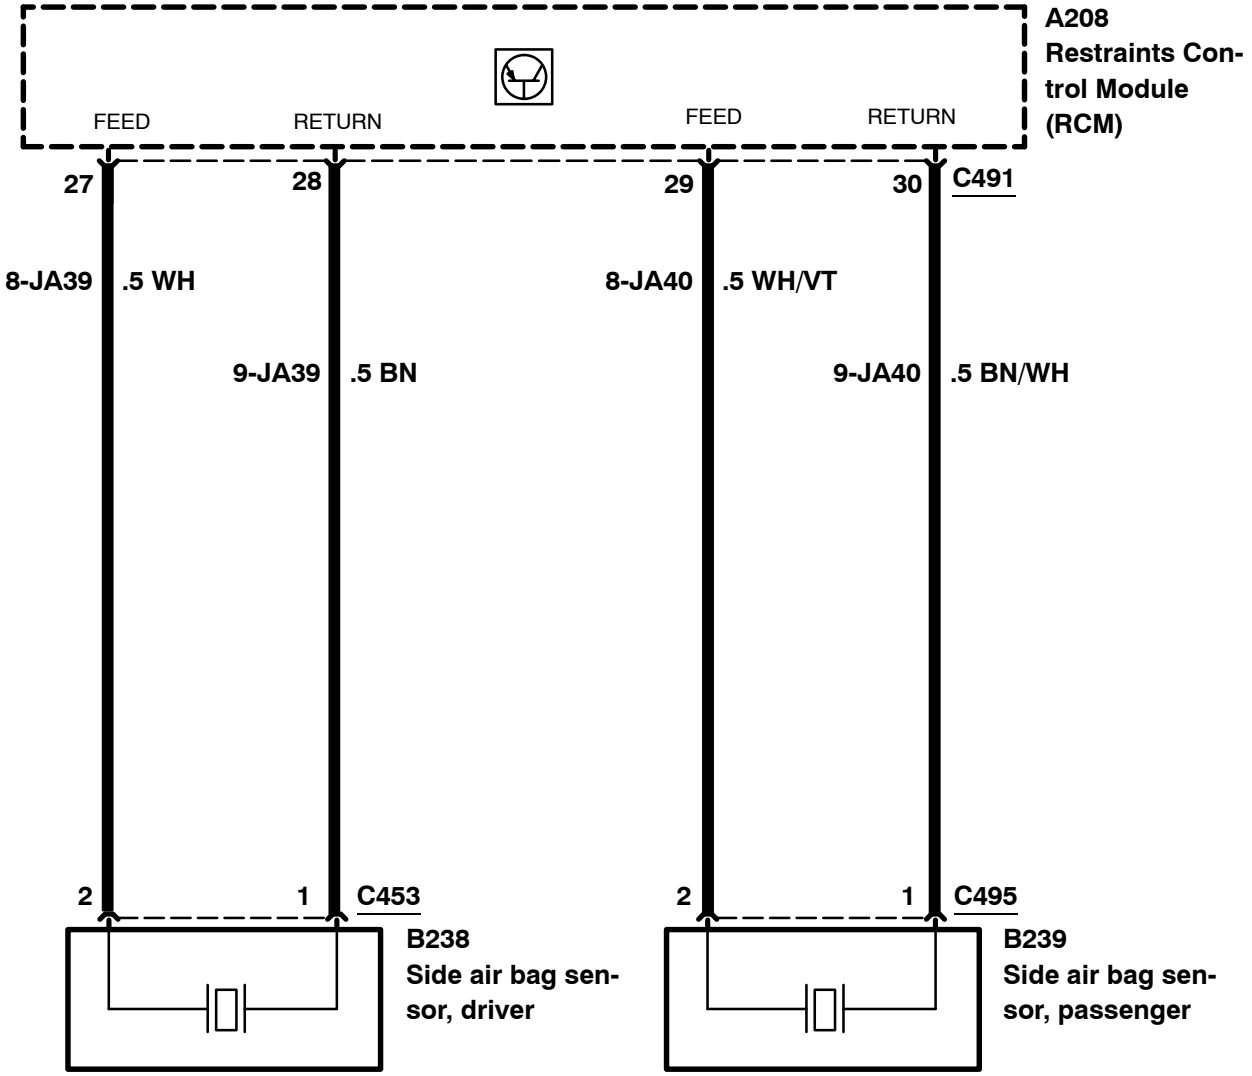

Fuse and Relay Information – Battery Junction Box (BJB), top

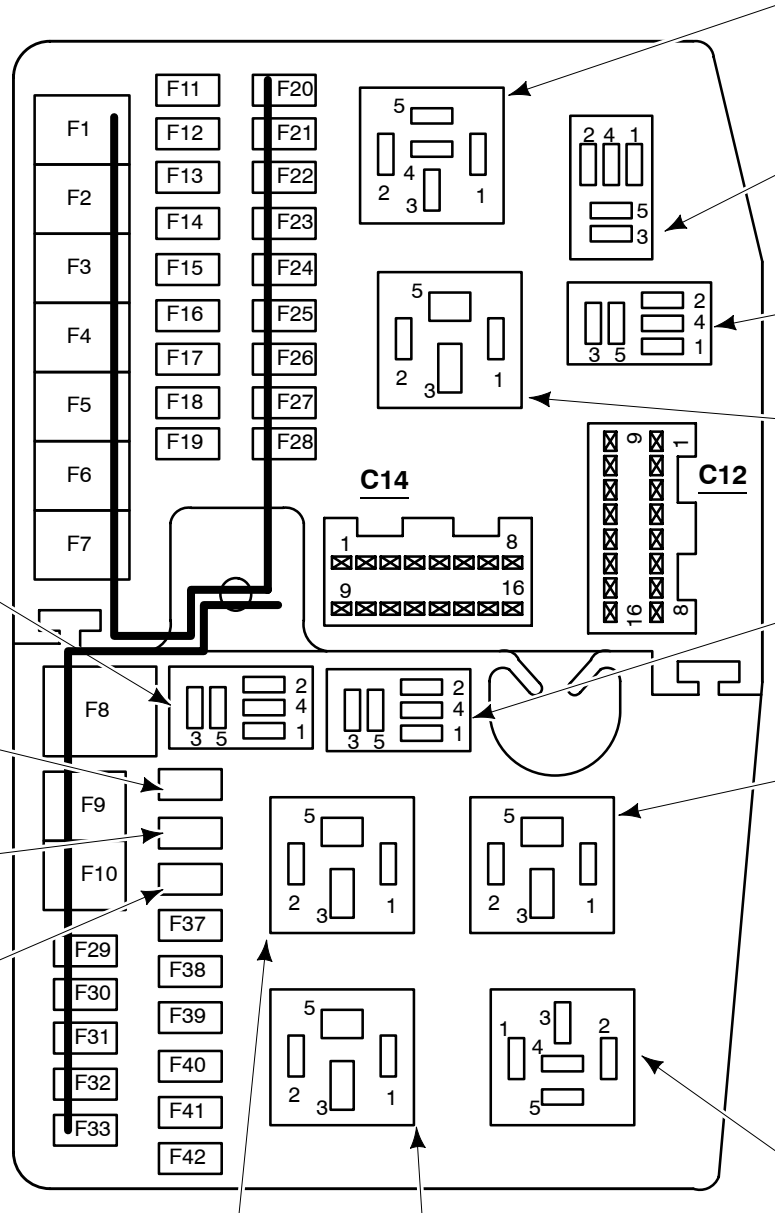

K243
Low beam relay

K33
Horn relay

Petrol engines

K4
Fuel pump relay

2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

K219
Injection pump power (IPP) relay

K40
Heated windshield timer relay

K32
A/C Wide Open Throttle (WOT) relay

Diesel engines

K70
Pre–glow relay Diesel

Petrol engines

K273
Reversing lamps relay

K22
Starter relay

K163
PCM module relay

V13
EEC Diode

V7
A/C compressor clutch diode

V33
Diode


K45
Cooling fan relay

K46
High speed cooling fan relay


Diesel engines

K273
Reversing lamps relay

Fuse and Relay Information – Central Junction Box (CJB), front

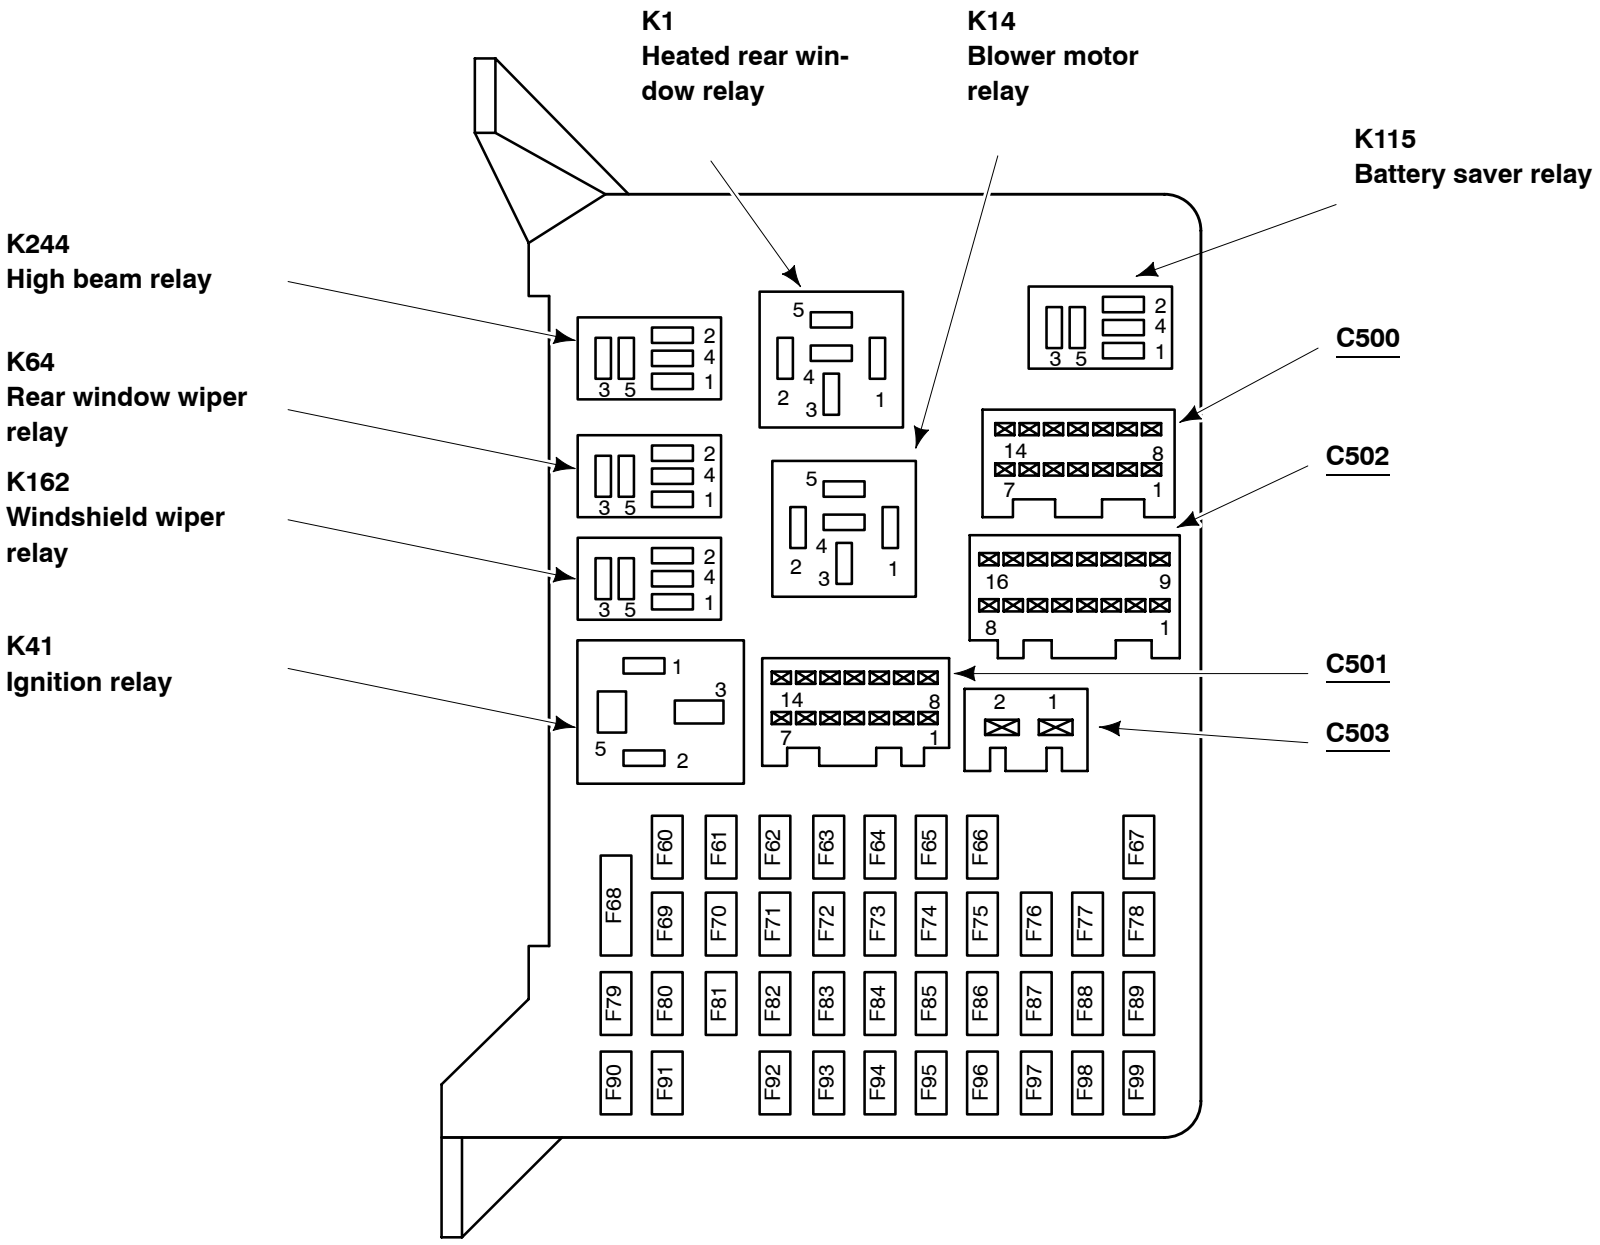

Fuse and Relay Information – Central Junction Box (CJB), rear

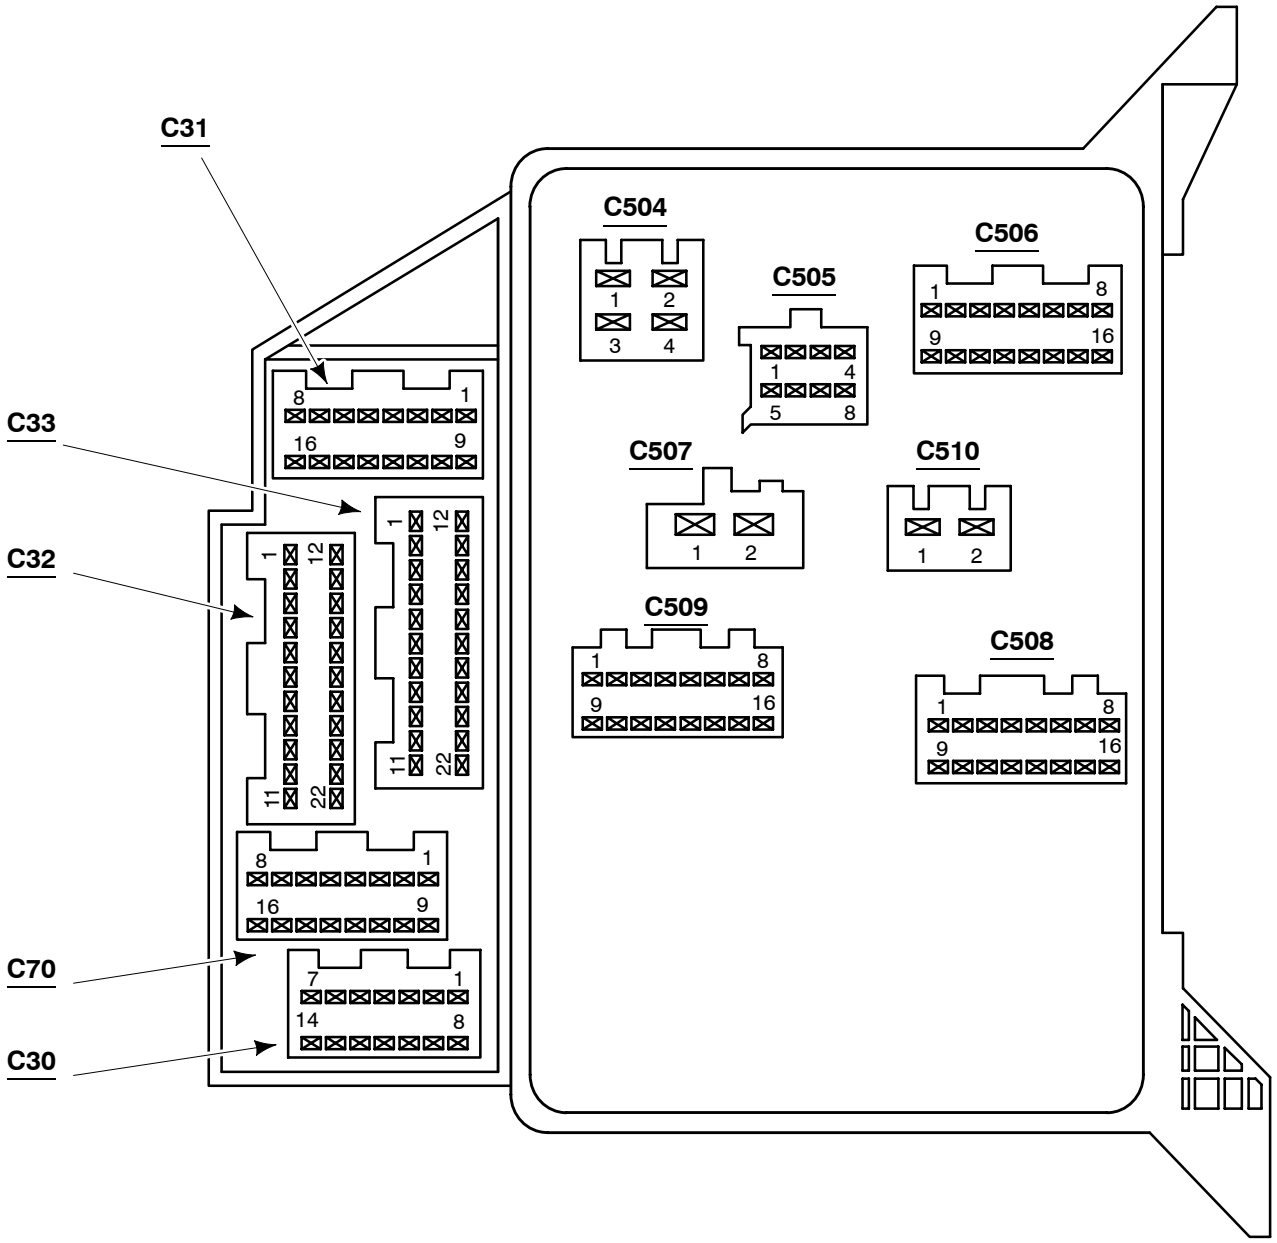

Battery Junction Box (BJB)

		Fuse number										
		1	2	3	4	5	6	7	8	9	10	11
		30A	50A	60A	30A	20A	40A	50A	60A	20A	40A	30A
206-09A-00	Anti–Lock Control	●										
206-09C-00	Anti–Lock Control – Traction Control and Stability Assist	●										
303-03A-00	Engine Cooling – 1.8L Duratec–SCi (MI4)										●	
303-03B-00	Engine Cooling – 1.8/2.0L Duratec–HE (MI4)										●	
303-03C-00	Engine Cooling – 2.5L Duratec–VE (VE6)								●			
303-03D-00	Engine Cooling – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)								●			
303-03E-00	Engine Cooling – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP								●			
303-03F-00	Engine Cooling – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel								●			
303-04A-00	Fuel Charging and Controls – 1.8L Duratec–SCi (MI4)									●		
303-04B-00	Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)									●		
303-04C-00	Fuel Charging and Controls – 2.5L Duratec–VE (VE6)											
303-04D-00	Fuel Charging and Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)											
303-04E-00	Fuel Charging and Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP											
303-04F-00	Fuel Charging and Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel									●		
303-06-00	Starting System											
303-07A-00	Engine Ignition – 1.8L Duratec–SCi (MI4)											
303-07B-00	Engine Ignition – 1.8/2.0L Duratec–HE (MI4)											
303-07C-00	Engine Ignition – 2.5L Duratec–VE (VE6)											
303-07D-00	Engine Ignition – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)											
303-07E-00	Glow Plug System – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP								●	●		
303-07F-00	Glow Plug System – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel								●	●		
303-14A-00	Electronic Engine Controls – 1.8L Duratec–SCi (MI4)									●		
303-14B-00	Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)									●		
303-14C-00	Electronic Engine Controls – 2.5L Duratec–VE (VE6)									●		
303-14D-00	Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)									●		
303-14E-00	Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP			●						●		
303-14F-00	Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel			●						●		
		1	2	3	4	5	6	7	8	9	10	11
		30A	50A	60A	30A	20A	40A	50A	60A	20A	40A	30A

Battery Junction Box (BJB)

Fuse number																			
12	**13**	**14**	**15**	**16**	**17**	**18**	**19**	**20**	**21**	**22**	**23**	**24**	**25**	**26**	**27**	**28**	**29**	**30**	**31**
	30A		3A	7.5A 20A	10A	7.5A 20A		20A	15A	20A	7.5A 20A	20A	15A	20A	15A	20A	30A	7.5A	7.5A
								●												206-09A-00
								●												206-09C-00
																				303-03A-00
																				303-03B-00
																				303-03C-00
																				303-03D-00
																				303-03E-00
																				303-03F-00
																				303-04A-00
																				303-04B-00
																				303-04C-00
																				303-04D-00
															●					303-04E-00
																				303-04F-00
																	●			303-06-00
																				303-07A-00
																				303-07B-00
																				303-07C-00
																				303-07D-00
																				303-07E-00
																				303-07F-00
															●				●	303-14A-00
															●				●	303-14B-00
															●				●	303-14C-00
															●				●	303-14D-00
															●					303-14E-00
																				303-14F-00
12	**13**	**14**	**15**	**16**	**17**	**18**	**19**	**20**	**21**	**22**	**23**	**24**	**25**	**26**	**27**	**28**	**29**	**30**	**31**
	30A		3A	7.5A 20A	10A	7.5A 20A		20A	15A	20A	7.5A 20A	20A	15A	20A	15A	20A	30A	7.5A	7.5A

Battery Junction Box (BJB)

		Fuse number										
		32	33	37	38	39	40	41	42			
		3A	7.5A	15A			7.5A	7.5A	10A 15A			
206-09A-00	Anti–Lock Control											
206-09C-00	Anti–Lock Control – Traction Control and Stability Assist											
303-03A-00	Engine Cooling – 1.8L Duratec–SCi (MI4)											
303-03B-00	Engine Cooling – 1.8/2.0L Duratec–HE (MI4)											
303-03C-00	Engine Cooling – 2.5L Duratec–VE (VE6)											
303-03D-00	Engine Cooling – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)											
303-03E-00	Engine Cooling – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP											
303-03F-00	Engine Cooling – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel											
303-04A-00	Fuel Charging and Controls – 1.8L Duratec–SCi (MI4)		●									
303-04B-00	Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)						●					
303-04C-00	Fuel Charging and Controls – 2.5L Duratec–VE (VE6)						●					
303-04D-00	Fuel Charging and Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)						●					
303-04E-00	Fuel Charging and Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP								●			
303-04F-00	Fuel Charging and Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel		●						●			
303-06-00	Starting System											
303-07A-00	Engine Ignition – 1.8L Duratec–SCi (MI4)											
303-07B-00	Engine Ignition – 1.8/2.0L Duratec–HE (MI4)											
303-07C-00	Engine Ignition – 2.5L Duratec–VE (VE6)											
303-07D-00	Engine Ignition – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)											
303-07E-00	Glow Plug System – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP											
303-07F-00	Glow Plug System – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel											
303-14A-00	Electronic Engine Controls – 1.8L Duratec–SCi (MI4)	●	●	●			●		●			
303-14B-00	Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)	●		●			●		●			
303-14C-00	Electronic Engine Controls – 2.5L Duratec–VE (VE6)	●		●			●		●			
303-14D-00	Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	●		●			●		●			
303-14E-00	Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	●	●				●		●			
303-14F-00	Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel		●				●	●	●			
		32	33	37	38	39	40	41	42			
		3A	7.5A	15A			7.5A	7.5A	10A 15A			

Battery Junction Box (BJB)

		Fuse number										
		1	2	3	4	5	6	7	8	9	10	11
		30A	50A	60A	30A	20A	40A	50A	60A	20A	40A	30A
307-01A-00	Automatic Transmission – 4–speed automatic transmission (CD4E)											
307-01B-00	Automatic Transmission – 5–speed automatic transmission (5F31J)									●		
310-03-00	Vehicle Speed Control											
412-02B–00	Auxiliary Heating			●								
412-03-00	Air Conditioning						●	●		●		
413-00-00	Instrument Cluster and Panel Illumination											
413-01-00	Instrument Cluster											
413-06-00	Horn											
413-07-00	Clock											
413-09-00	Warning Devices											
413-13A–00	Parking Aid – Valeo											
413-13B–00	Parking Aid – Bosch											
414-02-00	Generator and Regulator											
415-01-00	Audio Unit											
415-03-00	Speakers											
415-07-00	Video System											
417-01-00	Exterior Lighting							●				
417-02-00	Interior Lighting							●				
417-04-00	Daytime Running Lamps											
418-00-00	Module Communications Network, Diagnostic											
419-01A-00	Anti–Theft – Active											
419-01B-00	Anti–Theft – Passive											
419-07A-00	Vehicle Route Guidance/Navigation – Travel Pilot											
419-07B-00	Vehicle Route Guidance/Navigation – DVD navigation system with touch screen											
419-08A-00	Cellular Phone											
419-08B-00	Cellular Phone – Bluetooth voice control											
419-10-00	Multifunction Electronic Control Modules											
		1	2	3	4	5	6	7	8	9	10	11
		30A	50A	60A	30A	20A	40A	50A	60A	20A	40A	30A

Battery Junction Box (BJB)

Fuse number																		
12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
	30A		3A	7.5A 20A	10A	7.5A 20A		20A	15A	20A	7.5A 20A	20A	15A	20A	15A	20A	30A	7.5A	7.5A
					●														
											●								
																			●
									●										
									●			●	●						
														●					
									●			●	●			●			
																		●	
				●		●			●			●	●			●			
									●			●	●						
				●		●			●										
											●	●							
																	●		
												●	●						
12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
	30A		3A	7.5A 20A	10A	7.5A 20A		20A	15A	20A	7.5A 20A	20A	15A	20A	15A	20A	30A	7.5A	7.5A

	307-01A-00
	307-01B-00
	310-03-00
	412-02B-00
	412-03-00
	413-00-00
	413-01-00
	413-06-00
	413-07-00
	413-09-00
	413-13A-00
	413-13B-00
	414-02-00
	415-01-00
	415-03-00
	415-07-00
	417-01-00
	417-02-00
	417-04-00
	418-00-00
	419-01A-00
	419-01B-00
	419-07A-00
	419-07B-00
	419-08A-00
	419-08B-00
	419-10-00

Battery Junction Box (BJB)

		Fuse number										
		32	33	37	38	39	40	41	42			
		3A	7.5A	15A			7.5A	7.5A	10A 15A			
307-01A-00	Automatic Transmission – 4–speed automatic transmission (CD4E)								●			
307-01B-00	Automatic Transmission – 5–speed automatic transmission (5F31J)	●										
310-03-00	Vehicle Speed Control											
412-02B-00	Auxiliary Heating											
412-03-00	Air Conditioning											
413-00-00	Instrument Cluster and Panel Illumination											
413-01-00	Instrument Cluster											
413-06-00	Horn											
413-07-00	Clock											
413-09-00	Warning Devices	●							●			
413-13A-00	Parking Aid – Valeo											
413-13B-00	Parking Aid – Bosch											
414-02-00	Generator and Regulator											
415-01-00	Audio Unit											
415-03-00	Speakers											
415-07-00	Video System											
417-01-00	Exterior Lighting											
417-02-00	Interior Lighting											
417-04-00	Daytime Running Lamps											
418-00-00	Module Communications Network, Diagnostic											
419-01A-00	Anti–Theft – Active											
419-01B-00	Anti–Theft – Passive											
419-07A-00	Vehicle Route Guidance/Navigation – Travel Pilot											
419-07B-00	Vehicle Route Guidance/Navigation – DVD navigation system with touch screen											
419-08A-00	Cellular Phone											
419-08B-00	Cellular Phone – Bluetooth voice control											
419-10-00	Multifunction Electronic Control Modules											
		32	33	37	38	39	40	41	42			
		3A	7.5A	15A			7.5A	7.5A	10A 15A			

Battery Junction Box (BJB)

		Fuse number										
		1	2	3	4	5	6	7	8	9	10	11
		30A	50A	60A	30A	20A	40A	50A	60A	20A	40A	30A
501-09-00	Rear View Mirrors											
501-10-00	Seating					●						
501-11-00	Glass, Frames and Mechanisms				●							●
501-12-00	Instrument Panel and Console							●				
501-14-00	Handles, Locks, Latches and Entry Systems											
501-16-00	Wipers and Washers											
501-17-00	Roof Opening Panel											
501-20A-00	Occupant Restraints – Active											
501-20B-00	Occupant Restraints – Passive											
		1	2	3	4	5	6	7	8	9	10	11
		30A	50A	60A	30A	20A	40A	50A	60A	20A	40A	30A

Battery Junction Box (BJB)

Fuse number																		
12	**13**	**14**	**15**	**16**	**17**	**18**	**19**	**20**	**21**	**22**	**23**	**24**	**25**	**26**	**27**	**28**	**29**	**30**	**31**
	30A		3A	7.5A 20A	10A	7.5A 20A		20A	15A	20A	7.5A 20A	20A	15A	20A	15A	20A	30A	7.5A	7.5A
	●		●									●	●	●					
												●							
										●									
12	**13**	**14**	**15**	**16**	**17**	**18**	**19**	**20**	**21**	**22**	**23**	**24**	**25**	**26**	**27**	**28**	**29**	**30**	**31**
	30A		3A	7.5A 20A	10A	7.5A 20A		20A	15A	20A	*	20A	15A	20A	15A	20A	30A	7.5A	7.5A

	501-09-00
	501-10-00
	501-11-00
	501-12-00
	501-14-00
	501-16-00
	501-17-00
	501-20A-00
	501-20B-00

Battery Junction Box (BJB)

		Fuse number										
		32	**33**	**37**	**38**	**39**	**40**	**41**	**42**			
		3A	7.5A	15A			7.5A	7.5A	10A 15A			
501-09-00	Rear View Mirrors											
501-10-00	Seating											
501-11-00	Glass, Frames and Mechanisms											
501-12-00	Instrument Panel and Console											
501-14-00	Handles, Locks, Latches and Entry Systems											
501-16-00	Wipers and Washers											
501-17-00	Roof Opening Panel											
501-20A-00	Occupant Restraints – Active											
501-20B-00	Occupant Restraints – Passive											
		32	**33**	**37**	**38**	**39**	**40**	**41**	**42**			
		3A	7.5A	15A			7.5A	7.5A	10A 15A			

Central Junction Box (CJB)

		Fuse number										
		60	61	62	63	64	65	66	67	68	69	70
		25A	25A	15A	7.5A	7.5A	7.5A	30A	7.5A	15A	7.5A	15A
206-09A-00	Anti–Lock Control										●	
206-09C-00	Anti–Lock Control – Traction Control and Stability Assist										●	
303-03A-00	Engine Cooling – 1.8L Duratec–SCi (MI4)											
303-03B-00	Engine Cooling – 1.8/2.0L Duratec–HE (MI4)											
303-03C-00	Engine Cooling – 2.5L Duratec–VE (VE6)											
303-03D-00	Engine Cooling – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)											
303-03E-00	Engine Cooling – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP											
303-03F-00	Engine Cooling – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel											
303-04A-00	Fuel Charging and Controls – 1.8L Duratec–SCi (MI4)											
303-04B-00	Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)								●			
303-04C-00	Fuel Charging and Controls – 2.5L Duratec–VE (VE6)											
303-04D-00	Fuel Charging and Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)											
303-04E-00	Fuel Charging and Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP											
303-04F-00	Fuel Charging and Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel								●			
303-06-00	Starting System											
303-07A-00	Engine Ignition – 1.8L Duratec–SCi (MI4)								●			
303-07B-00	Engine Ignition – 1.8/2.0L Duratec–HE (MI4)								●			
303-07C-00	Engine Ignition – 2.5L Duratec–VE (VE6)								●			
303-07D-00	Engine Ignition – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)								●			
303-07E-00	Glow Plug System – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP											
303-07F-00	Glow Plug System – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel											
303-14A-00	Electronic Engine Controls – 1.8L Duratec–SCi (MI4)											
303-14B-00	Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)								●			
303-14C-00	Electronic Engine Controls – 2.5L Duratec–VE (VE6)								●			
303-14D-00	Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)								●			
303-14E-00	Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP								●			
303-14F-00	Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel								●			
		60	61	62	63	64	65	66	67	68	69	70
		25A	25A	15A	7.5A	7.5A	7.5A	30A	7.5A	15A	7.5A	15A

Central Junction Box (CJB)

Fuse number																					
71	**72**	**73**	**74**	**75**	**76**	**77**	**78**	**79**	**80**	**81**	**82**	**83**	**84**	**85**	**86**	**87**	**88**	**89**	**90**	**91**	**92**	**93**	
10A	20A	20A	20A	7.5A	7.5A	7.5A	7.5A		7.5A	7.5A	7.5A	15A	20A	7.5A	7.5A		15A	7.5A	15A	7.5A	10A	10A	
				●		●	●															●	206-09A-00
				●		●	●															●	206-09C-00
																							303-03A-00
																							303-03B-00
																							303-03C-00
																							303-03D-00
																							303-03E-00
																							303-03F-00
																							303-04A-00
																							303-04B-00
																							303-04C-00
																							303-04D-00
																							303-04E-00
																							303-04F-00
																							303-06-00
																							303-07A-00
																							303-07B-00
																							303-07C-00
																							303-07D-00
																							303-07E-00
																							303-07F-00
											●											●	303-14A-00
										●	●											●	303-14B-00
											●											●	303-14C-00
											●											●	303-14D-00
											●											●	303-14E-00
									●		●											●	303-14F-00
71	**72**	**73**	**74**	**75**	**76**	**77**	**78**	**79**	**80**	**81**	**82**	**83**	**84**	**85**	**86**	**87**	**88**	**89**	**90**	**91**	**92**	**93**	
10A	20A	20A	20A	7.5A	7.5A	7.5A	7.5A		7.5A	7.5A	7.5A	15A	20A	7.5A	7.5A		15A	7.5A	15A	7.5A	10A	10A	

Central Junction Box (CJB)

		Fuse number									
		94	95	96	97	98	99				
		20A	7.5A	7.5A	7.5A	7.5A	10A				
206-09A-00	Anti–Lock Control										
206-09C-00	Anti–Lock Control – Traction Control and Stability Assist										
303-03A-00	Engine Cooling – 1.8L Duratec–SCi (MI4)										
303-03B-00	Engine Cooling – 1.8/2.0L Duratec–HE (MI4)										
303-03C-00	Engine Cooling – 2.5L Duratec–VE (VE6)										
303-03D-00	Engine Cooling – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)										
303-03E-00	Engine Cooling – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP										
303-03F-00	Engine Cooling – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel										
303-04A-00	Fuel Charging and Controls – 1.8L Duratec–SCi (MI4)										
303-04B-00	Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)										
303-04C-00	Fuel Charging and Controls – 2.5L Duratec–VE (VE6)										
303-04D-00	Fuel Charging and Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)										
303-04E-00	Fuel Charging and Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP										
303-04F-00	Fuel Charging and Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel										
303-06-00	Starting System										
303-07A-00	Engine Ignition – 1.8L Duratec–SCi (MI4)										
303-07B-00	Engine Ignition – 1.8/2.0L Duratec–HE (MI4)										
303-07C-00	Engine Ignition – 2.5L Duratec–VE (VE6)										
303-07D-00	Engine Ignition – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)										
303-07E-00	Glow Plug System – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP										
303-07F-00	Glow Plug System – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel										
303-14A-00	Electronic Engine Controls – 1.8L Duratec–SCi (MI4)										
303-14B-00	Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)										
303-14C-00	Electronic Engine Controls – 2.5L Duratec–VE (VE6)										
303-14D-00	Electronic Engine Controls – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)										
303-14E-00	Electronic Engine Controls – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP										
303-14F-00	Electronic Engine Controls – 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel										
		94	95	96	97	98	99				
		20A	7.5A	7.5A	7.5A	7.5A	10A				

Central Junction Box (CJB)

		Fuse number										
		60	**61**	**62**	**63**	**64**	**65**	**66**	**67**	**68**	**69**	**70**
		25A	25A	15A	7.5A	7.5A	7.5A	30A	7.5A	15A	7.5A	15A
307-01A-00	Automatic Transmission – 4–speed automatic transmission (CD4E)											
307-01B-00	Automatic Transmission – 5–speed automatic transmission (5F31J)											
310-03-00	Vehicle Speed Control								●		●	
412-02B–00	Auxiliary Heating											
412-03-00	Air Conditioning						●				●	
413-00-00	Instrument Cluster and Panel Illumination											
413-01-00	Instrument Cluster				●						●	
413-06-00	Horn											
413-07-00	Clock											
413-09-00	Warning Devices				●				●		●	
413-13A–00	Parking Aid – Valeo											
413-13B–00	Parking Aid – Bosch											
414-02-00	Generator and Regulator											
415-01-00	Audio Unit										●	
415-03-00	Speakers											
415-07-00	Video System											
417-01-00	Exterior Lighting			●	●	●						
417-02-00	Interior Lighting											
417-04-00	Daytime Running Lamps				●	●						
418-00-00	Module Communications Network, Diagnostic											
419-01A-00	Anti–Theft – Active											
419-01B-00	Anti–Theft – Passive								●			
419-07A-00	Vehicle Route Guidance/Navigation – Travel Pilot										●	
419-07B-00	Vehicle Route Guidance/Navigation – DVD navigation system with touch screen										●	
419-08A-00	Cellular Phone										●	
419-08B-00	Cellular Phone – Bluetooth voice control										●	
419-10-00	Multifunction Electronic Control Modules											
		60	**61**	**62**	**63**	**64**	**65**	**66**	**67**	**68**	**69**	**70**
		25A	25A	15A	7.5A	7.5A	7.5A	30A	7.5A	15A	7.5A	15A

Central Junction Box (CJB)

Fuse number																						
71	**72**	**73**	**74**	**75**	**76**	**77**	**78**	**79**	**80**	**81**	**82**	**83**	**84**	**85**	**86**	**87**	**88**	**89**	**90**	**91**	**92**	**93**	
10A	20A	20A	20A	7.5A	7.5A	7.5A	7.5A		7.5A	7.5A	7.5A	15A	20A	7.5A	7.5A		15A	7.5A	15A	7.5A	10A	10A	
									●	●												●	307-01A-00
				●					●	●	●											●	307-01B-00
				●			●				●											●	310-03-00
											●												412-02B-00
					●					●	●											●	412-03-00
																	●			●			413-00-00
				●			●										●						413-01-00
																							413-06-00
				●																			413-07-00
				●			●											●					413-09-00
									●														413-13A-00
									●														413-13B-00
																							414-02-00
●	●								●														415-01-00
																							415-03-00
●																							415-07-00
			●						●					●	●		●			●	●	●	417-01-00
																							417-02-00
																	●					●	417-04-00
	●																						418-00-00
																							419-01A-00
																							419-01B-00
●	●								●														419-07A-00
●	●								●														419-07B-00
●	●																						419-08A-00
●	●																						419-08B-00
●																							419-10-00
71	**72**	**73**	**74**	**75**	**76**	**77**	**78**	**79**	**80**	**81**	**82**	**83**	**84**	**85**	**86**	**87**	**88**	**89**	**90**	**91**	**92**	**93**	
10A	20A	20A	20A	7.5A	7.5A	7.5A	7.5A		7.5A	7.5A	7.5A	15A	20A	7.5A	7.5A		15A	7.5A	15A	7.5A	10A	10A	

Central Junction Box (CJB)

		Fuse number									
		94	95	96	97	98	99				
		20A	7.5A	7.5A	7.5A	7.5A	10A				
307-01A-00	Automatic Transmission – 4–speed automatic transmission (CD4E)										
307-01B-00	Automatic Transmission – 5–speed automatic transmission (5F31J)										
310-03-00	Vehicle Speed Control										
412-02B-00	Auxiliary Heating										
412-03-00	Air Conditioning										
413-00-00	Instrument Cluster and Panel Illumination										
413-01-00	Instrument Cluster		●								
413-06-00	Horn										
413-07-00	Clock										
413-09-00	Warning Devices				●						
413-13A-00	Parking Aid – Valeo										
413-13B-00	Parking Aid – Bosch										
414-02-00	Generator and Regulator										
415-01-00	Audio Unit										
415-03-00	Speakers										
415-07-00	Video System										
417-01-00	Exterior Lighting	●	●		●						
417-02-00	Interior Lighting				●		●				
417-04-00	Daytime Running Lamps		●								
418-00-00	Module Communications Network, Diagnostic										
419-01A-00	Anti–Theft – Active										
419-01B-00	Anti–Theft – Passive										
419-07A-00	Vehicle Route Guidance/Navigation – Travel Pilot										
419-07B-00	Vehicle Route Guidance/Navigation – DVD navigation system with touch screen										
419-08A-00	Cellular Phone										
419-08B-00	Cellular Phone – Bluetooth voice control										
419-10-00	Multifunction Electronic Control Modules				●						
		94	95	96	97	98	99				
		20A	7.5A	7.5A	7.5A	7.5A	10A				

Central Junction Box (CJB)

		Fuse number										
		60	**61**	**62**	**63**	**64**	**65**	**66**	**67**	**68**	**69**	**70**
		25A	25A	15A	7.5A	7.5A	7.5A	30A	7.5A	15A	7.5A	15A
501-09-00	Rear View Mirrors											
501-10-00	Seating						●	●				
501-11-00	Glass, Frames and Mechanisms	●	●									
501-12-00	Instrument Panel and Console									●		●
501-14-00	Handles, Locks, Latches and Entry Systems											
501-16-00	Wipers and Washers											
501-17-00	Roof Opening Panel											
501-20A-00	Occupant Restraints – Active										●	
501-20B-00	Occupant Restraints – Passive										●	
		60	**61**	**62**	**63**	**64**	**65**	**66**	**67**	**68**	**69**	**70**
		25A	25A	15A	7.5A	7.5A	7.5A	30A	7.5A	15A	7.5A	15A


Central Junction Box (CJB)

Fuse number																					
71	**72**	**73**	**74**	**75**	**76**	**77**	**78**	**79**	**80**	**81**	**82**	**83**	**84**	**85**	**86**	**87**	**88**	**89**	**90**	**91**	**92**	**93**	
10A	20A	20A	20A	7.5A	7.5A	7.5A	7.5A		7.5A	7.5A	7.5A	15A	20A	7.5A	7.5A		15A	7.5A	15A	7.5A	10A	10A	
				●					●											●			501-09-00
										●		●											501-10-00
																				●			501-11-00
																							501-12-00
																							501-14-00
									●		●						●		●	●			501-16-00
		●																		●			501-17-00
				●			●											●					501-20A-00
				●			●											●					501-20B-00
71	**72**	**73**	**74**	**75**	**76**	**77**	**78**	**79**	**80**	**81**	**82**	**83**	**84**	**85**	**86**	**87**	**88**	**89**	**90**	**91**	**92**	**93**	
10A	20A	20A	20A	7.5A	7.5A	7.5A	7.5A		7.5A	7.5A	7.5A	15A	20A	7.5A	7.5A		15A	7.5A	15A	7.5A	10A	10A	


Central Junction Box (CJB)

		Fuse number							
		94	**95**	**96**	**97**	**98**	**99**		
		20A	7.5A	7.5A	7.5A	7.5A	10A		
501-09-00	Rear View Mirrors								
501-10-00	Seating								
501-11-00	Glass, Frames and Mechanisms					●			
501-12-00	Instrument Panel and Console								
501-14-00	Handles, Locks, Latches and Entry Systems								
501-16-00	Wipers and Washers	●	●						
501-17-00	Roof Opening Panel								
501-20A-00	Occupant Restraints – Active								
501-20B-00	Occupant Restraints – Passive								
		94	**95**	**96**	**97**	**98**	**99**		
		20A	7.5A	7.5A	7.5A	7.5A	10A		


Power Distribution

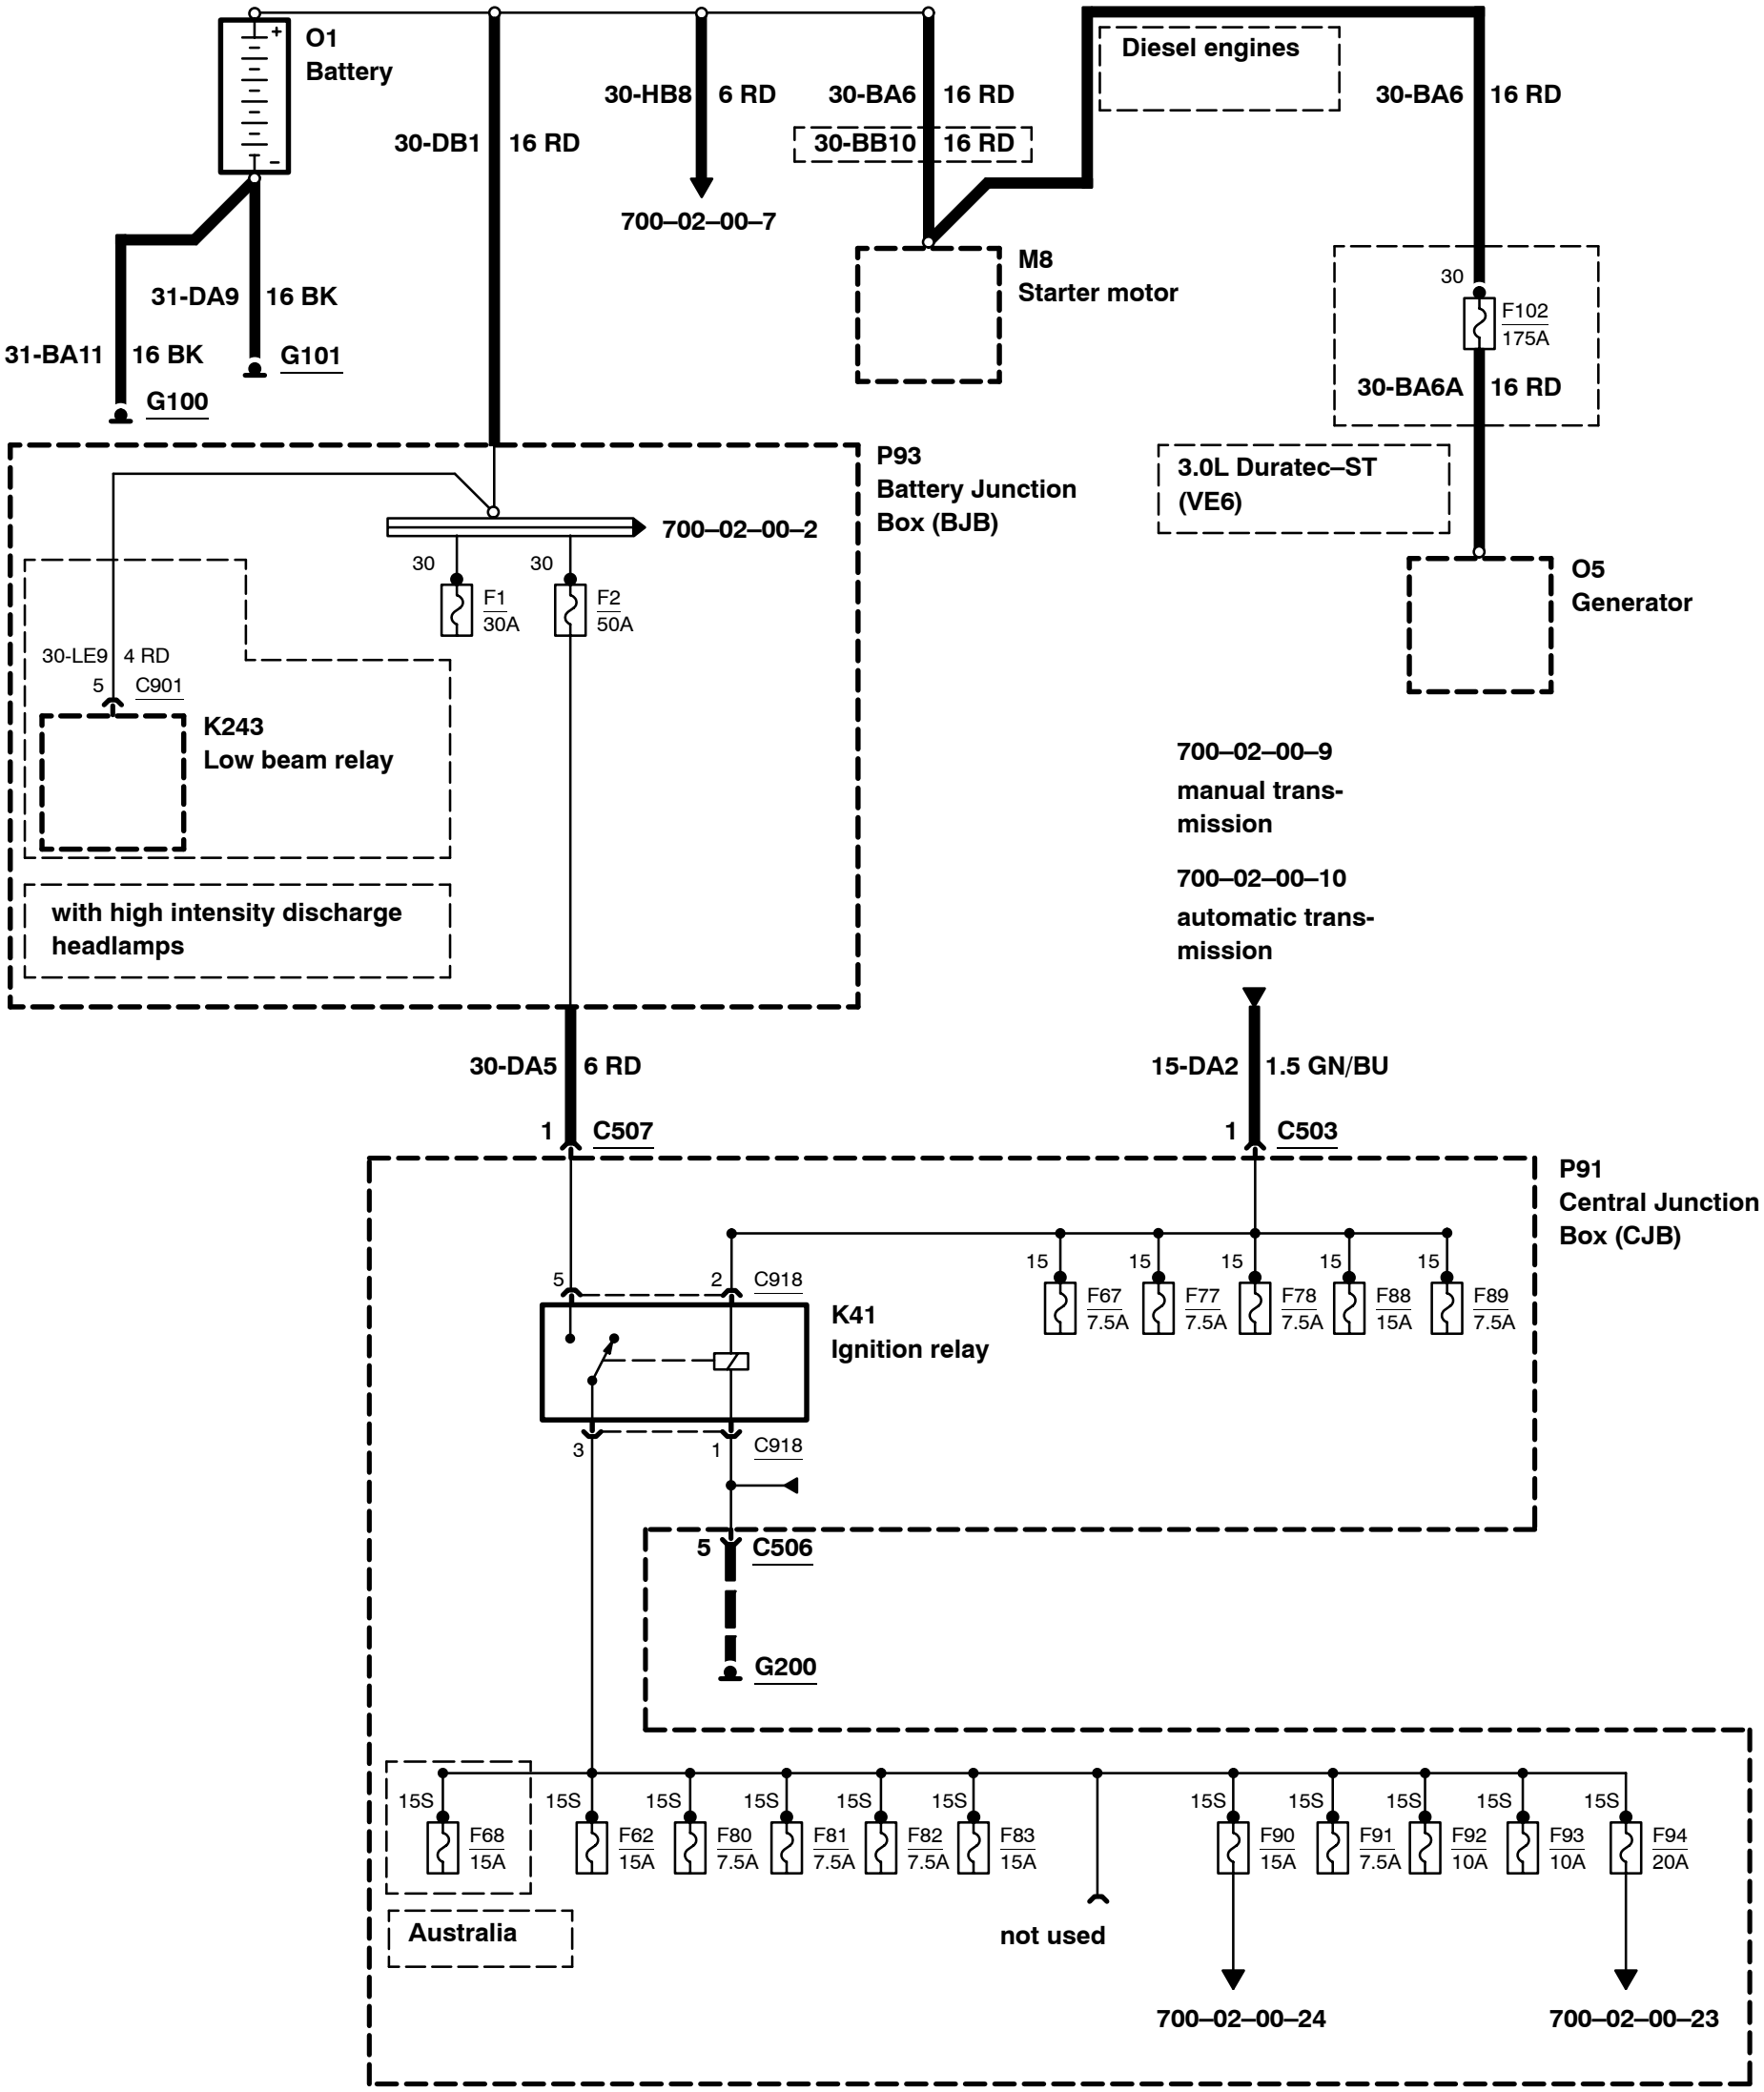


Power Distribution

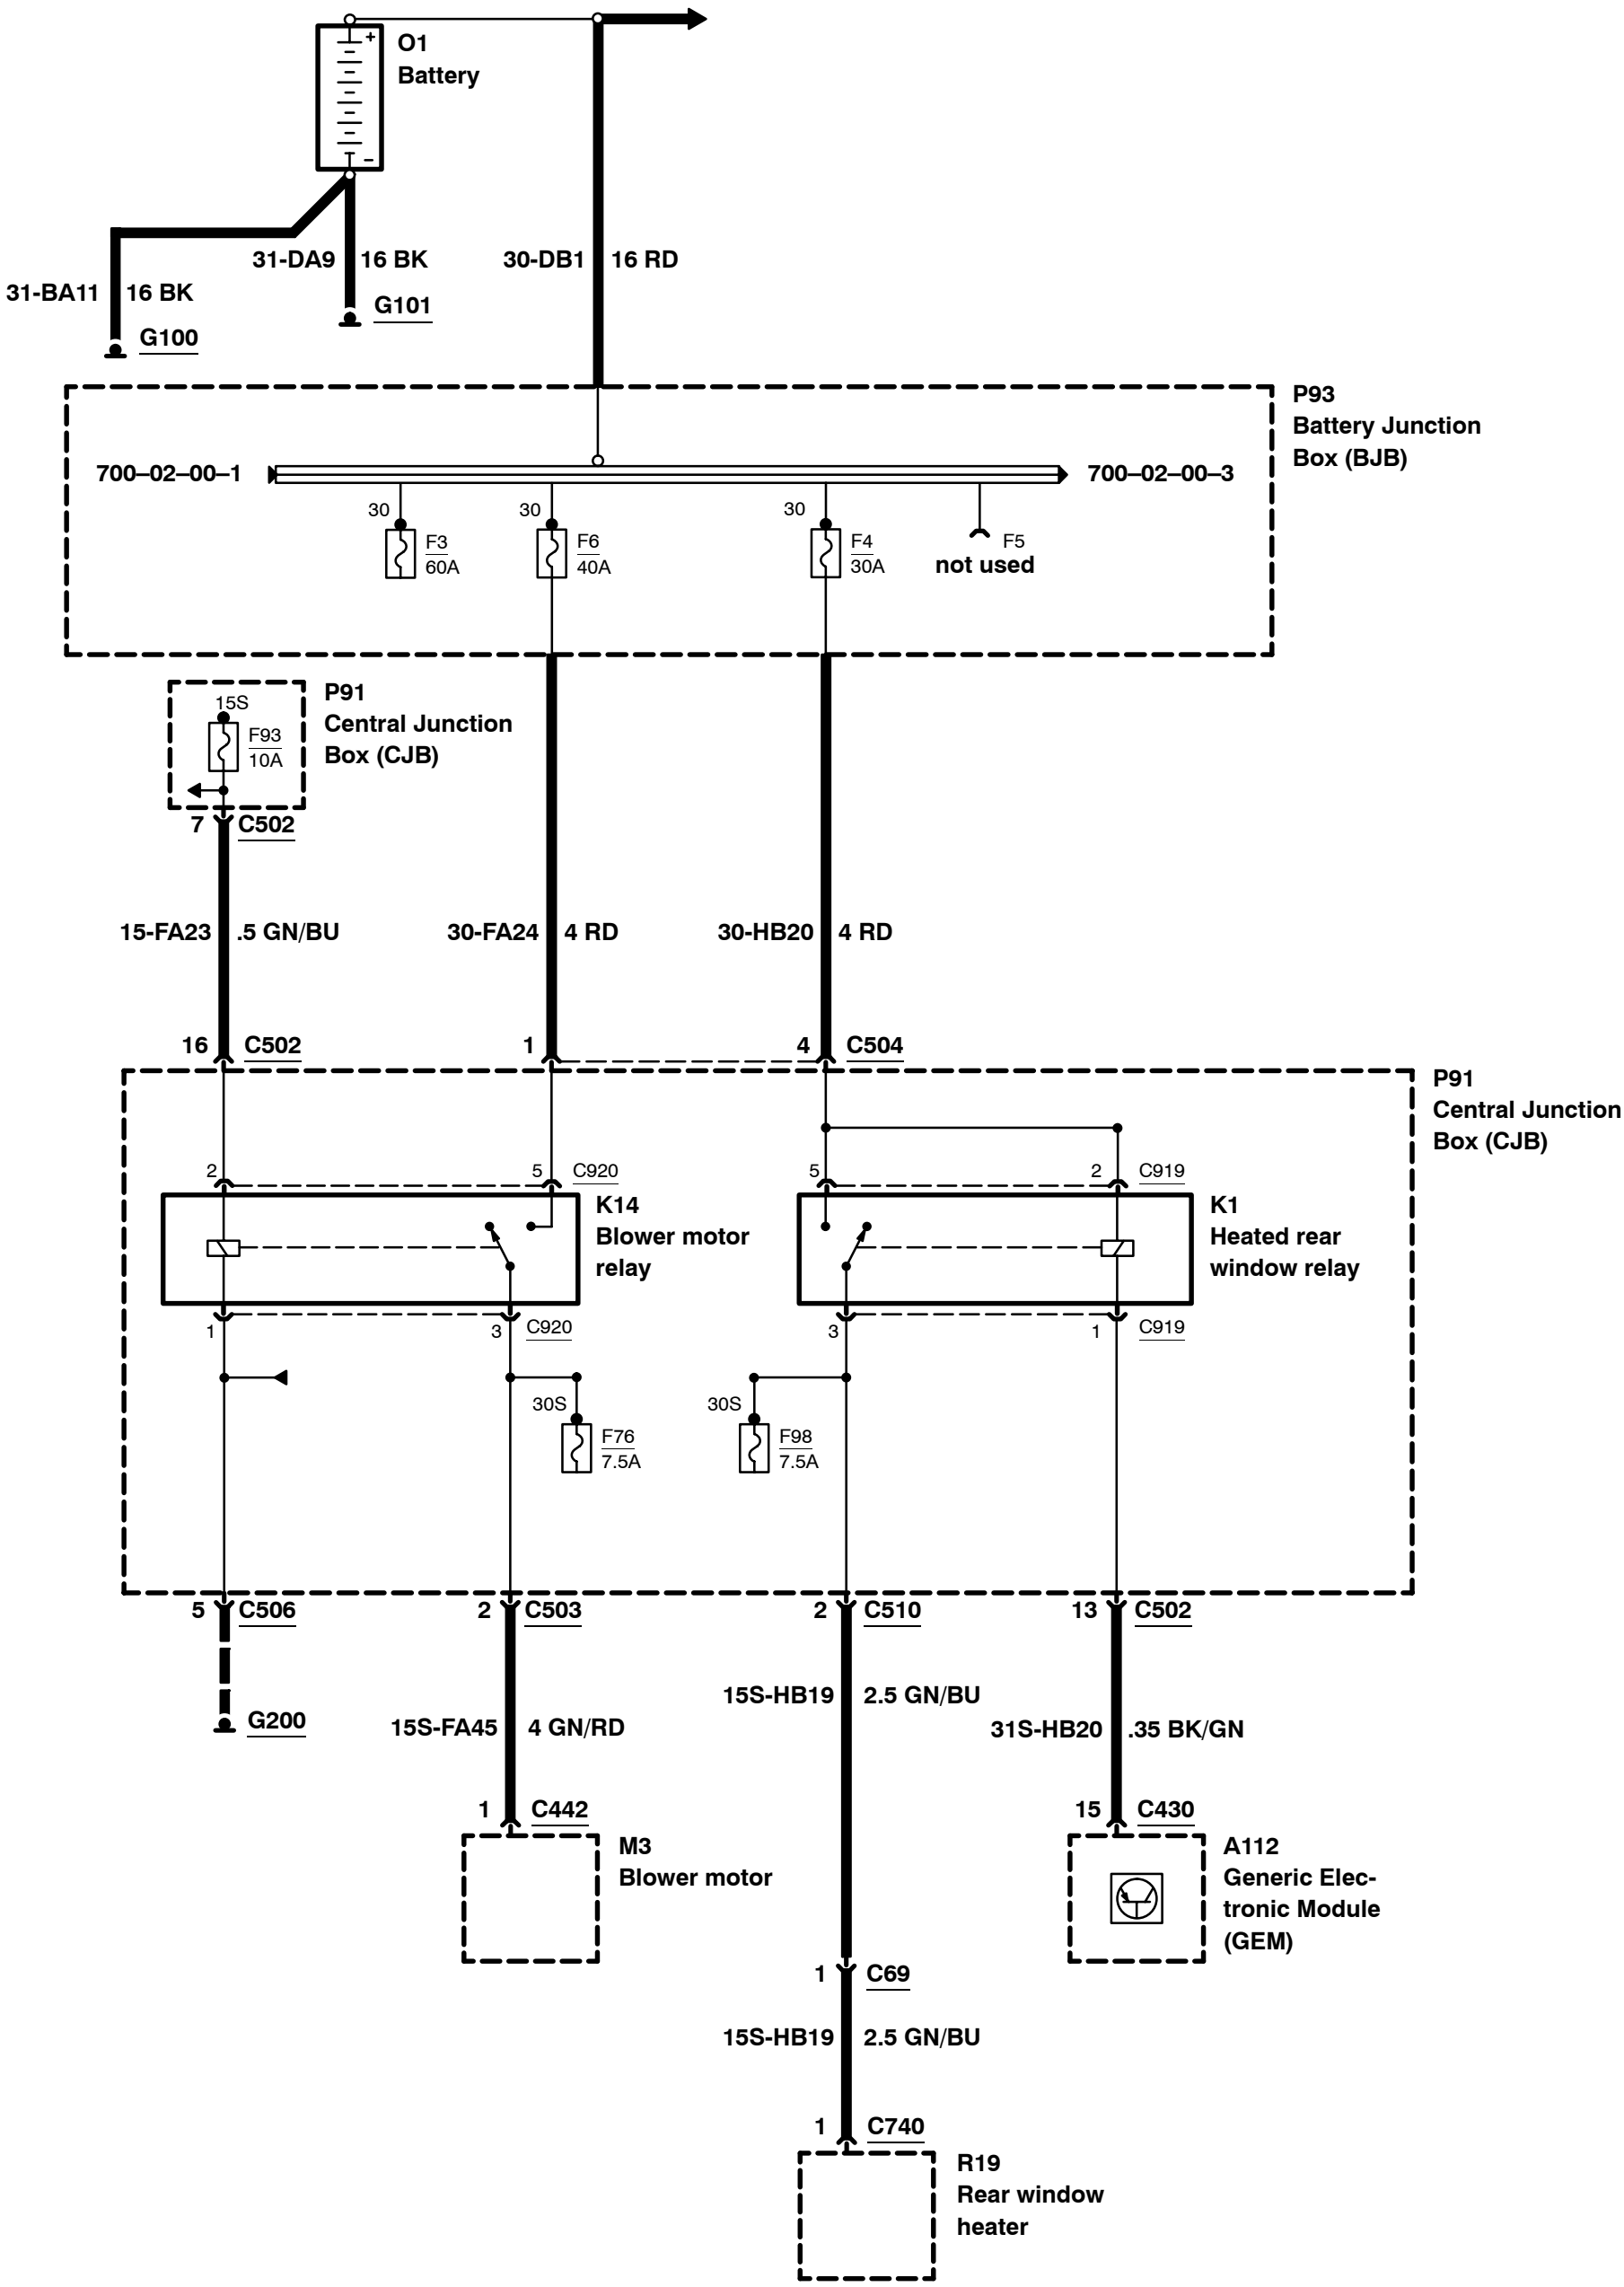


Power Distribution

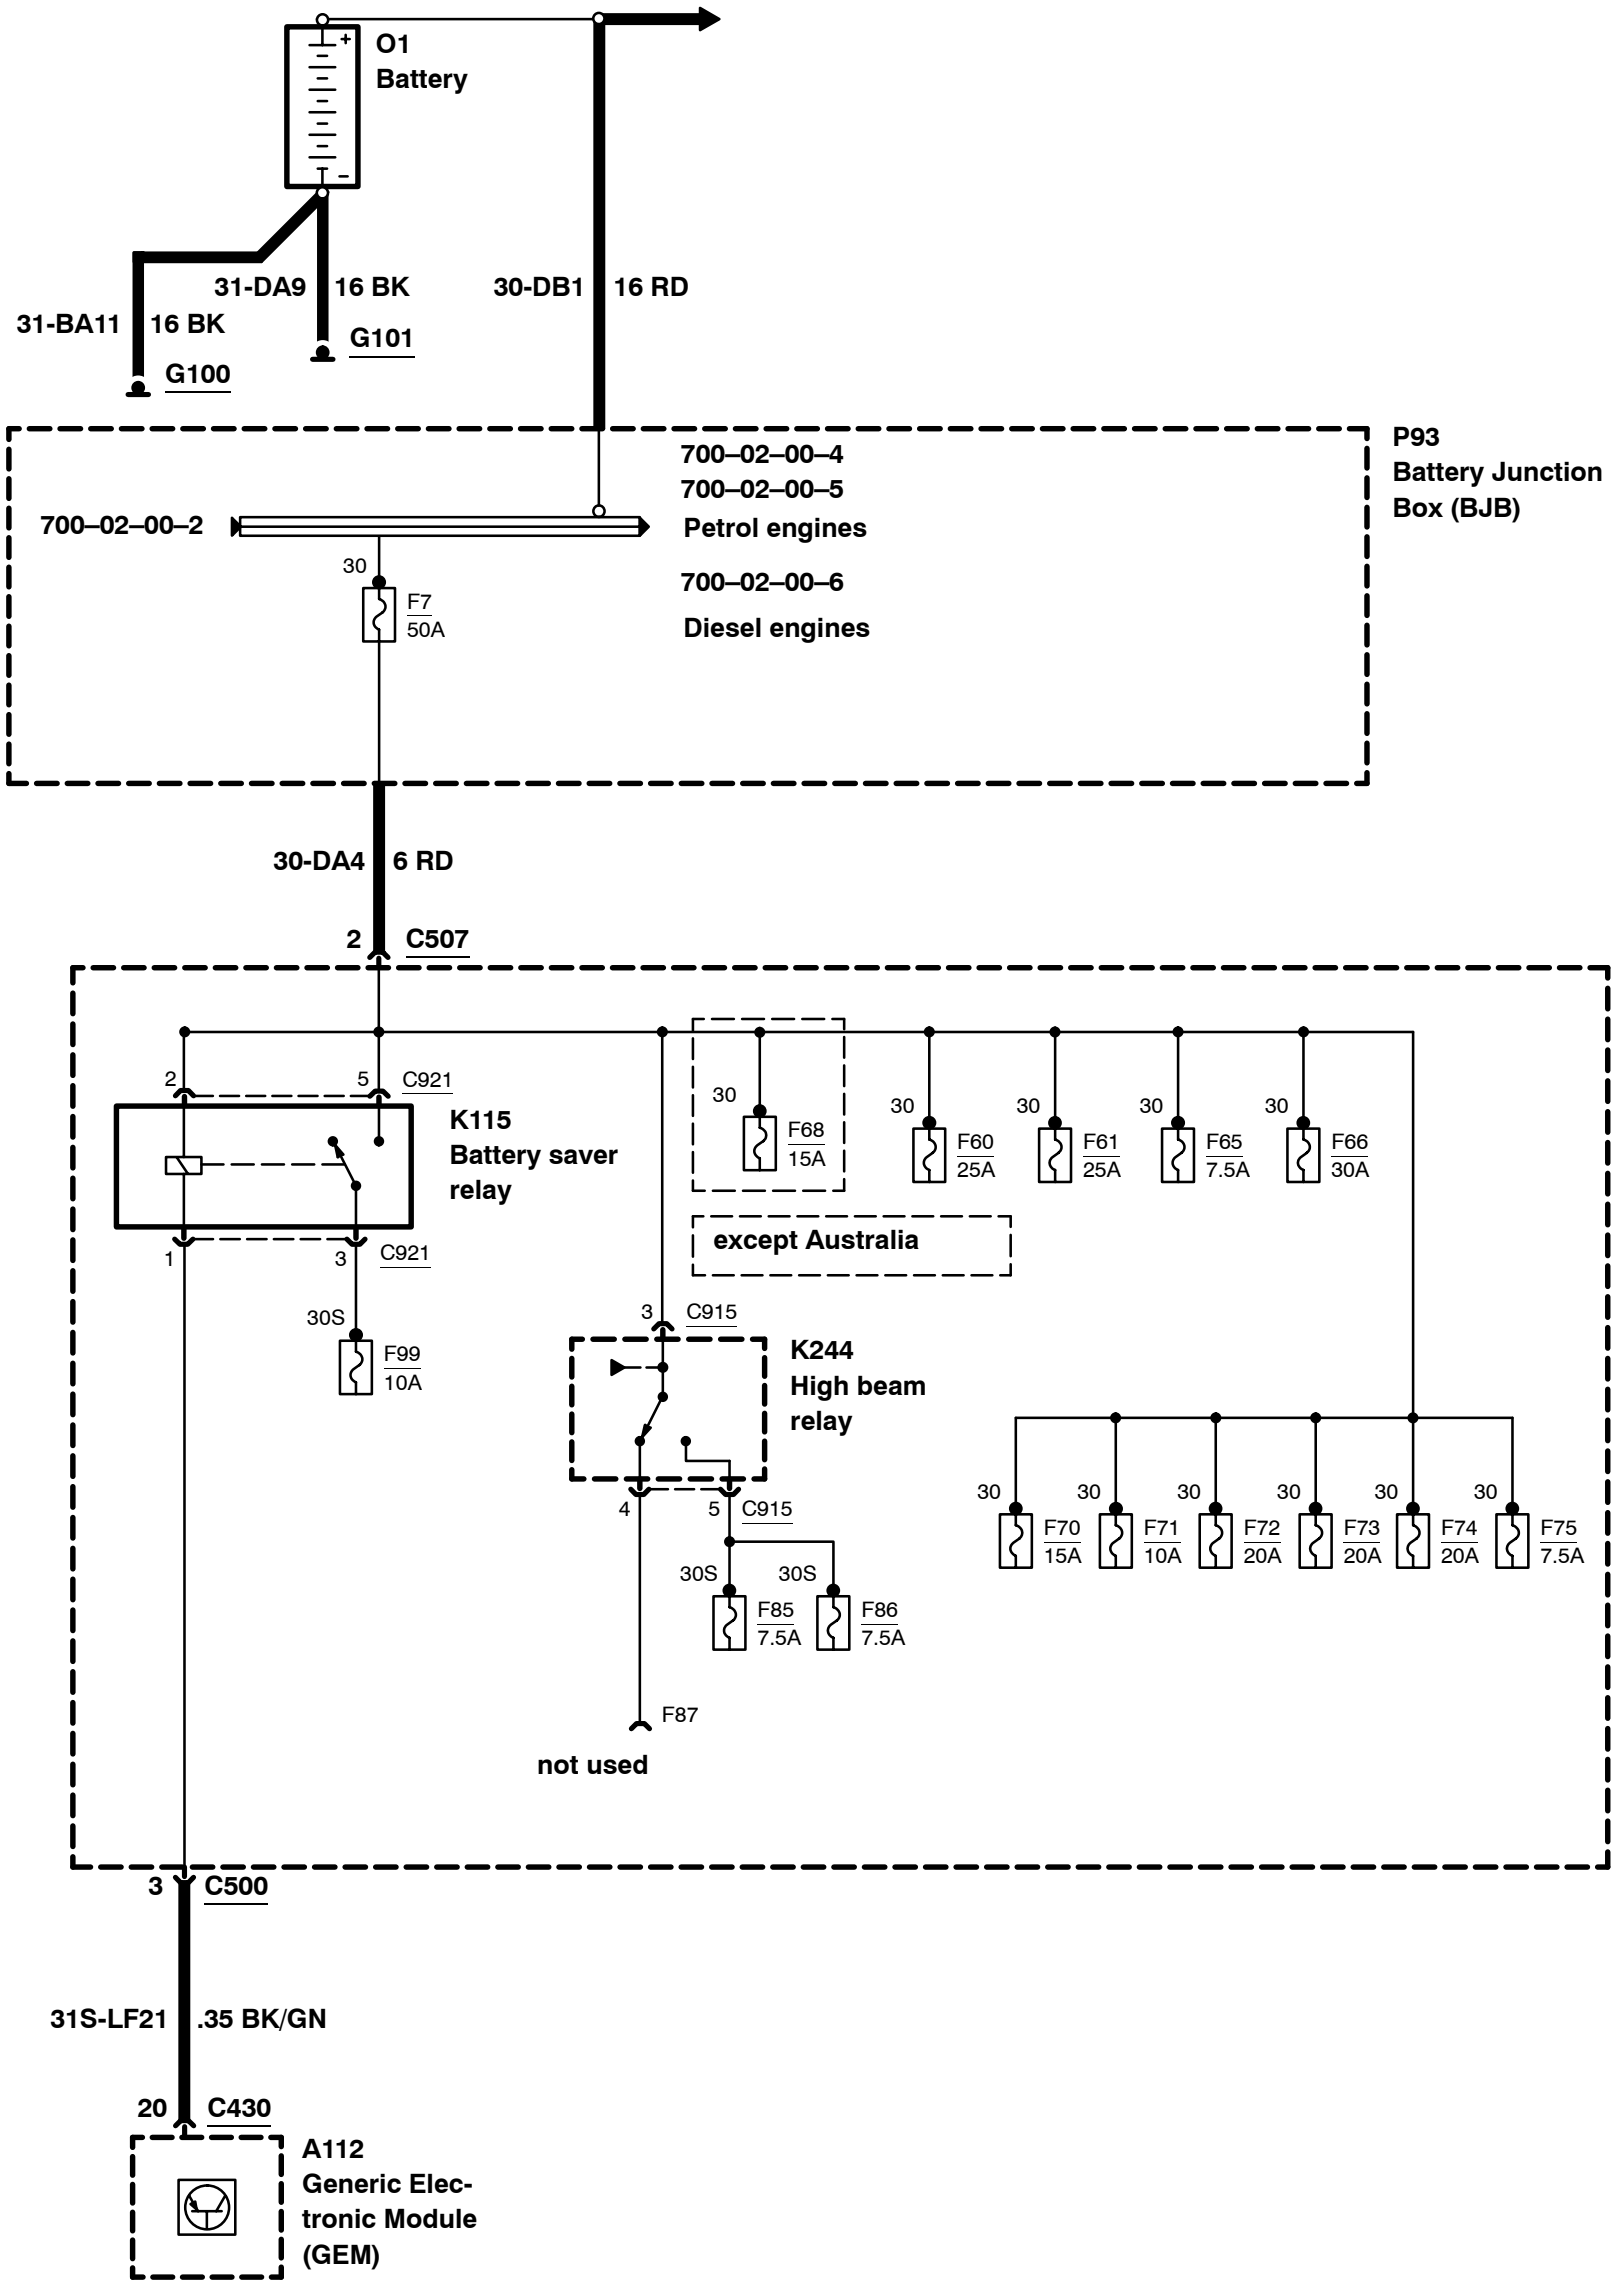


Power Distribution – Petrol engines, except 3.0L Duratec–SE (VE6)

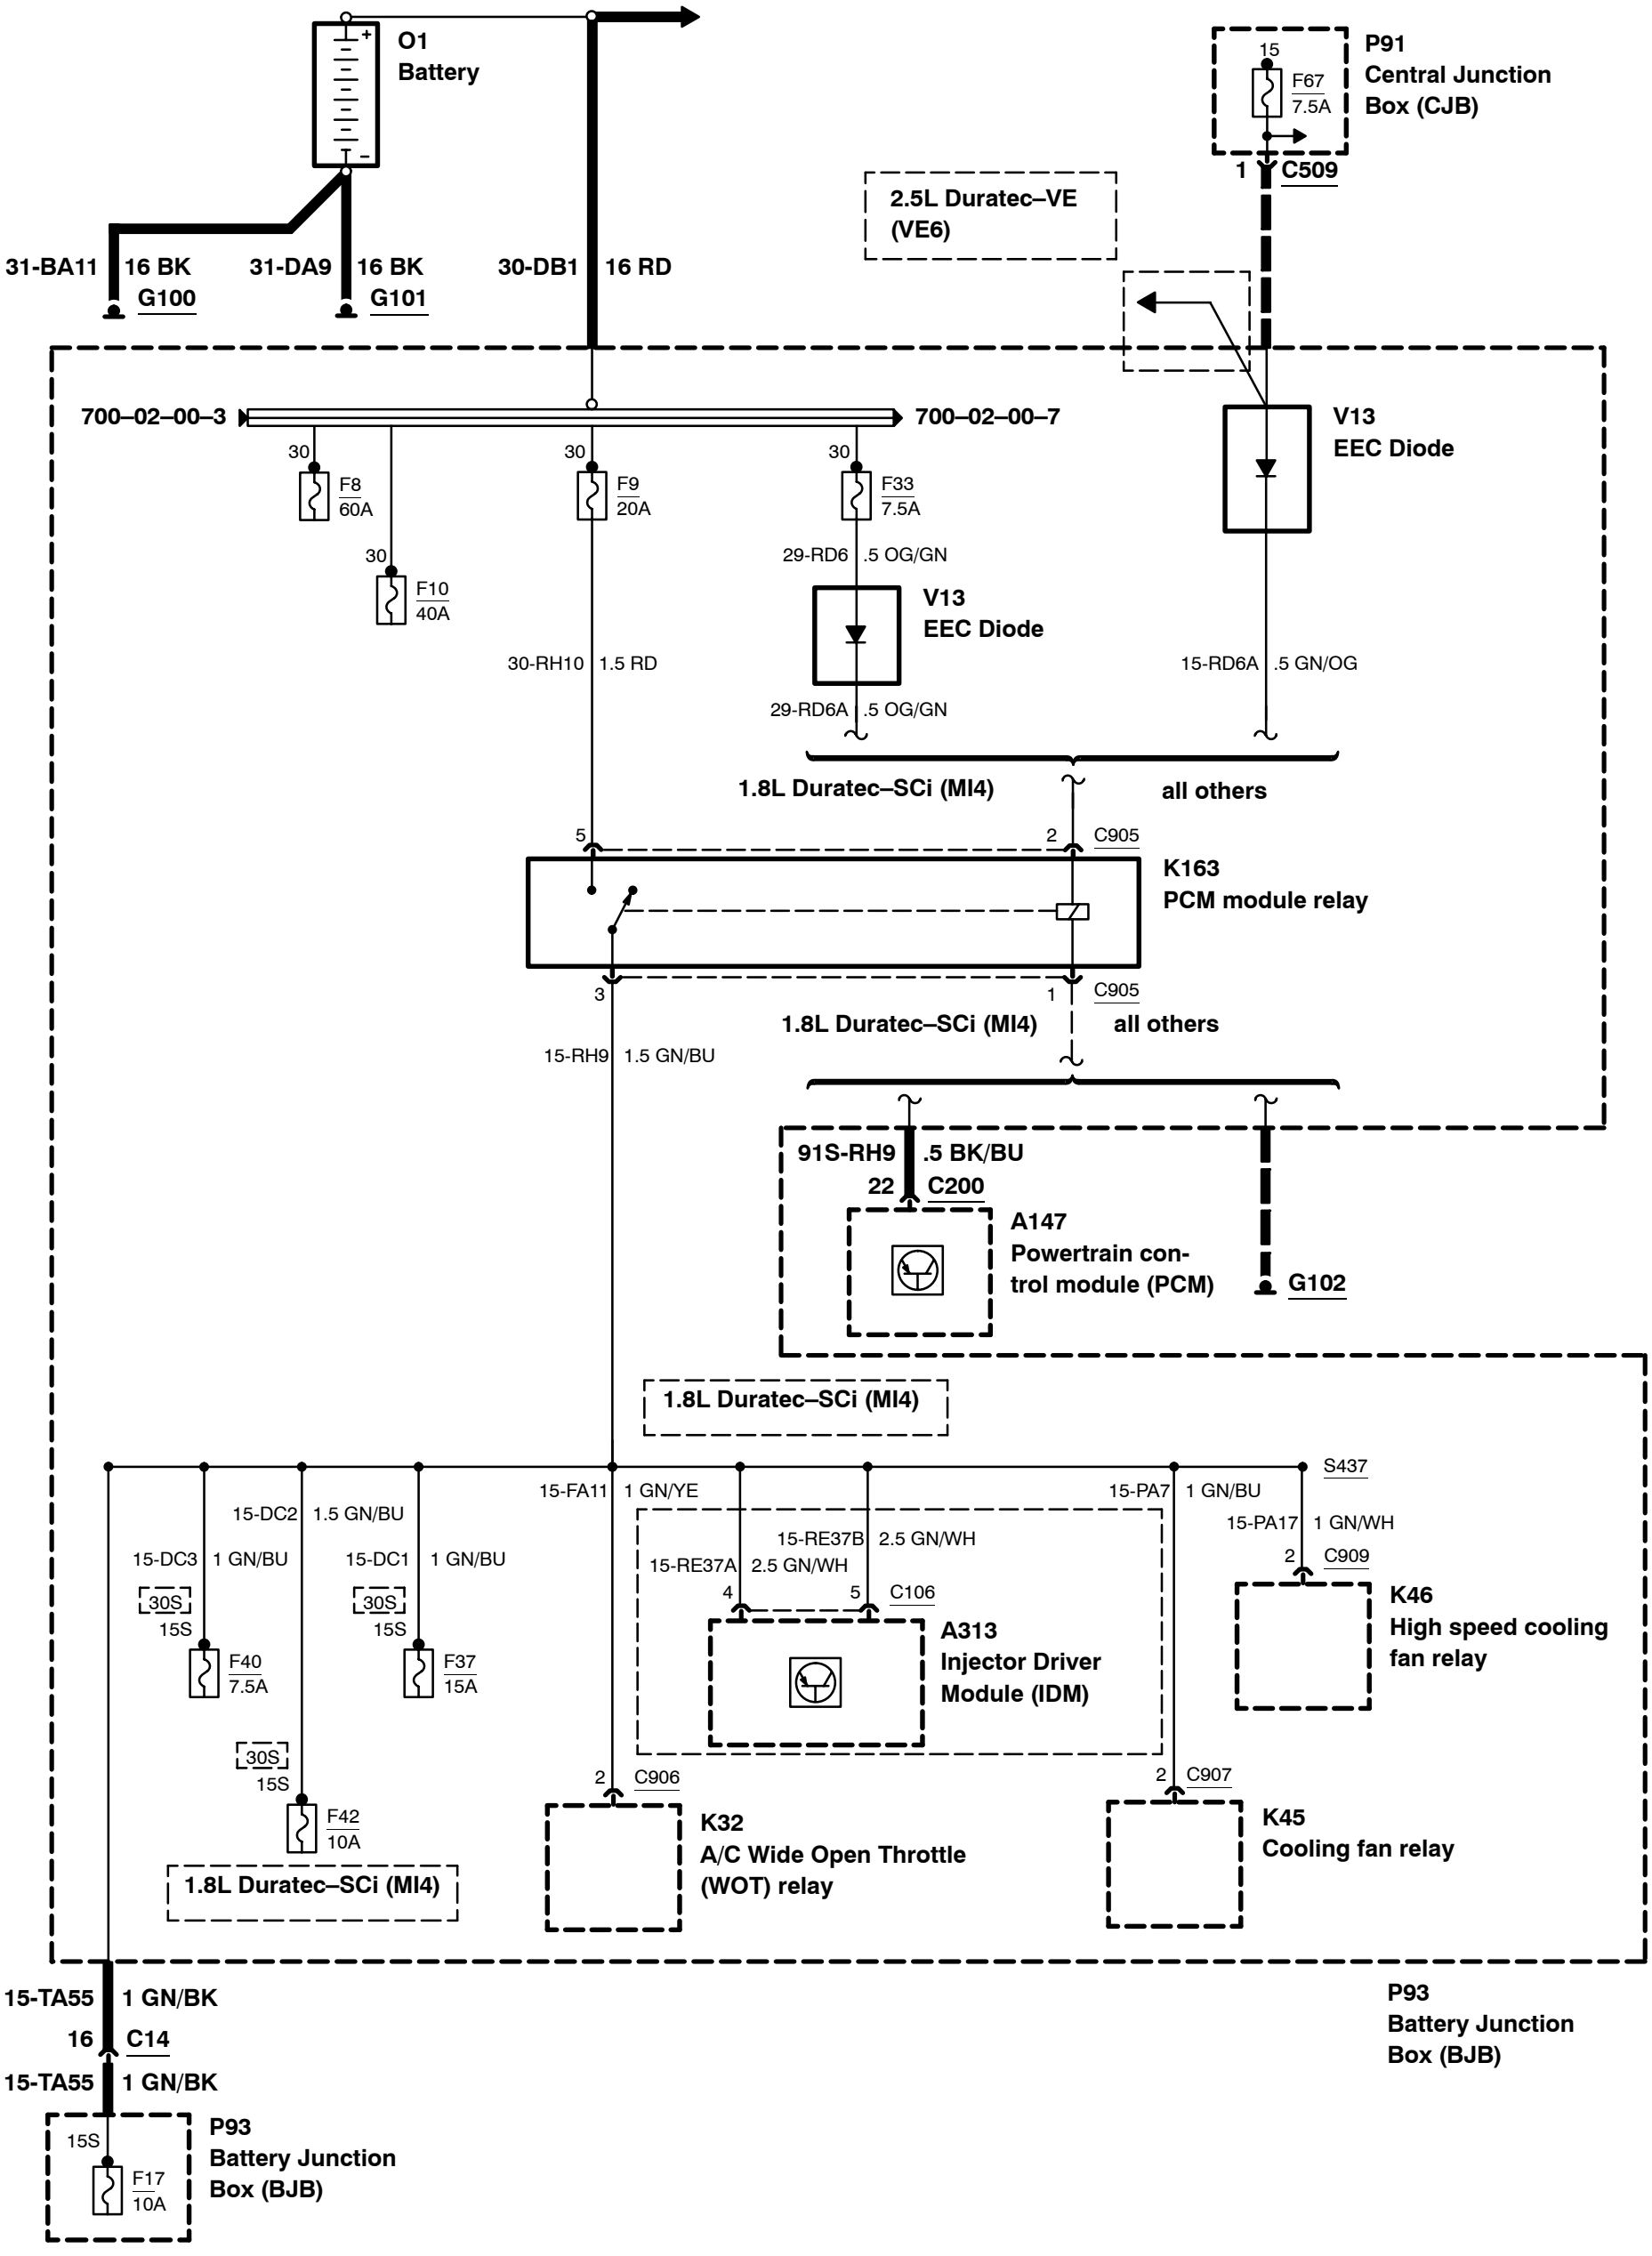


Power Distribution – 3.0L Duratec–SE (VE6)

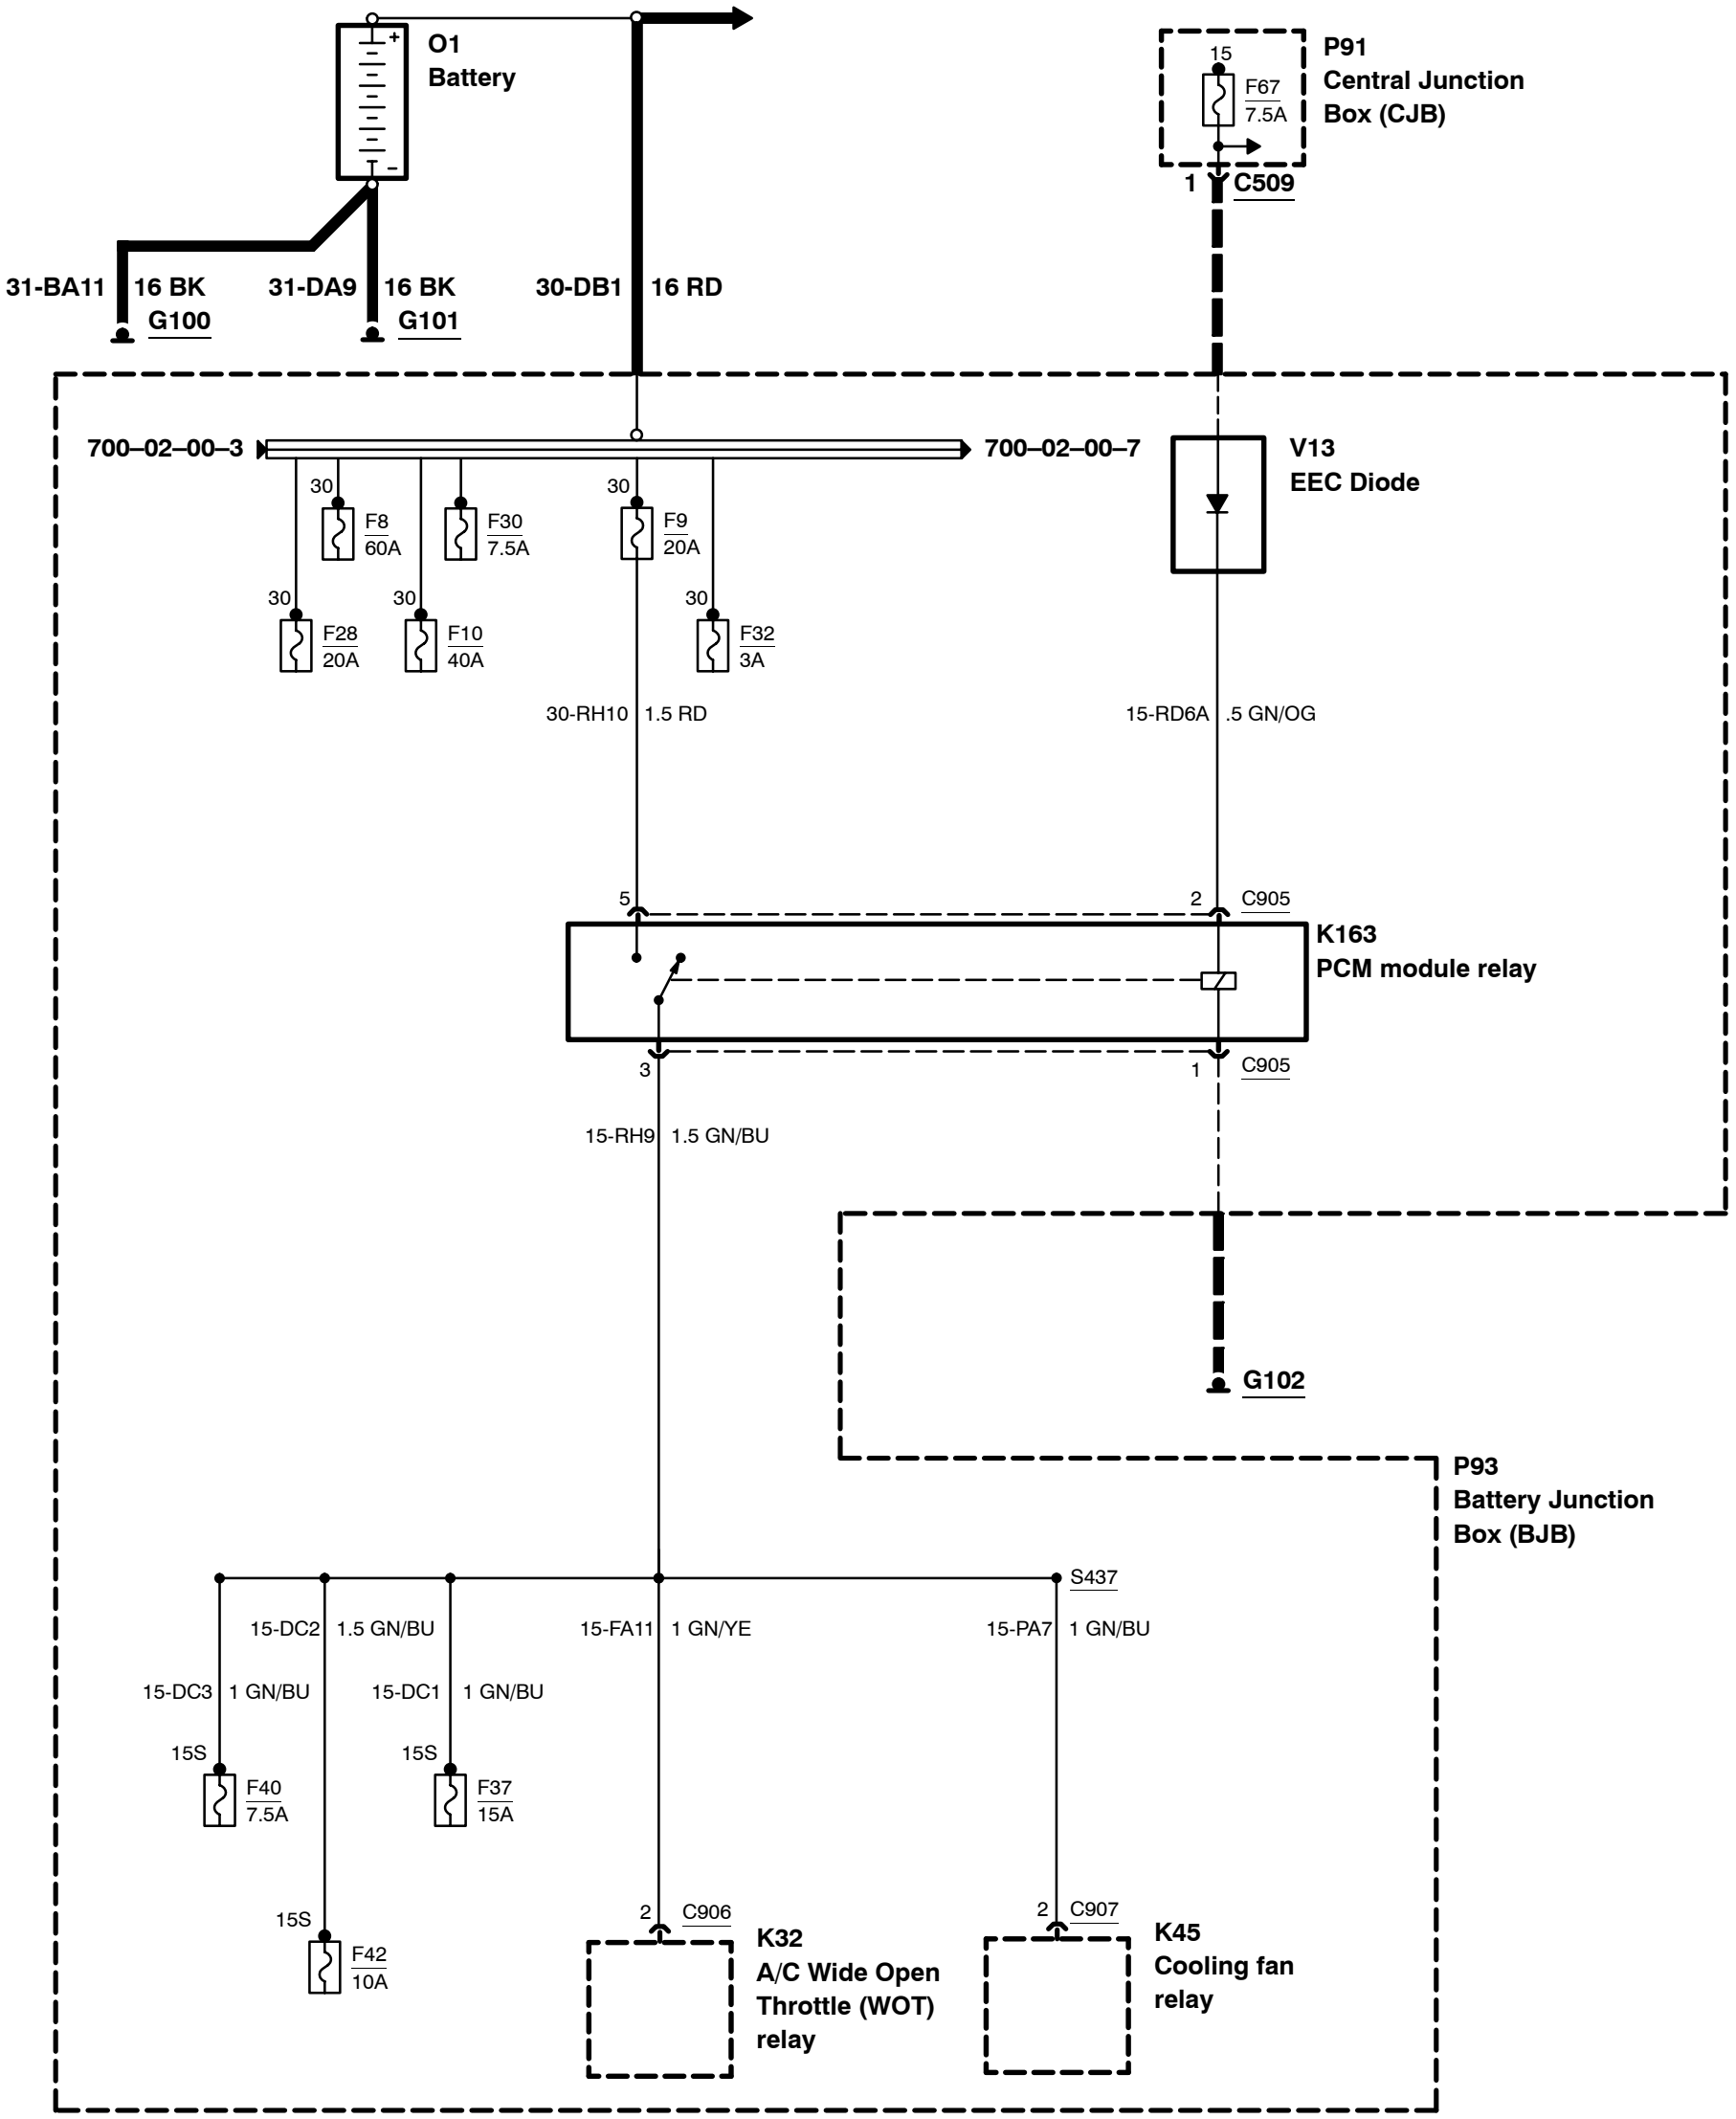


Power Distribution – Diesel engines

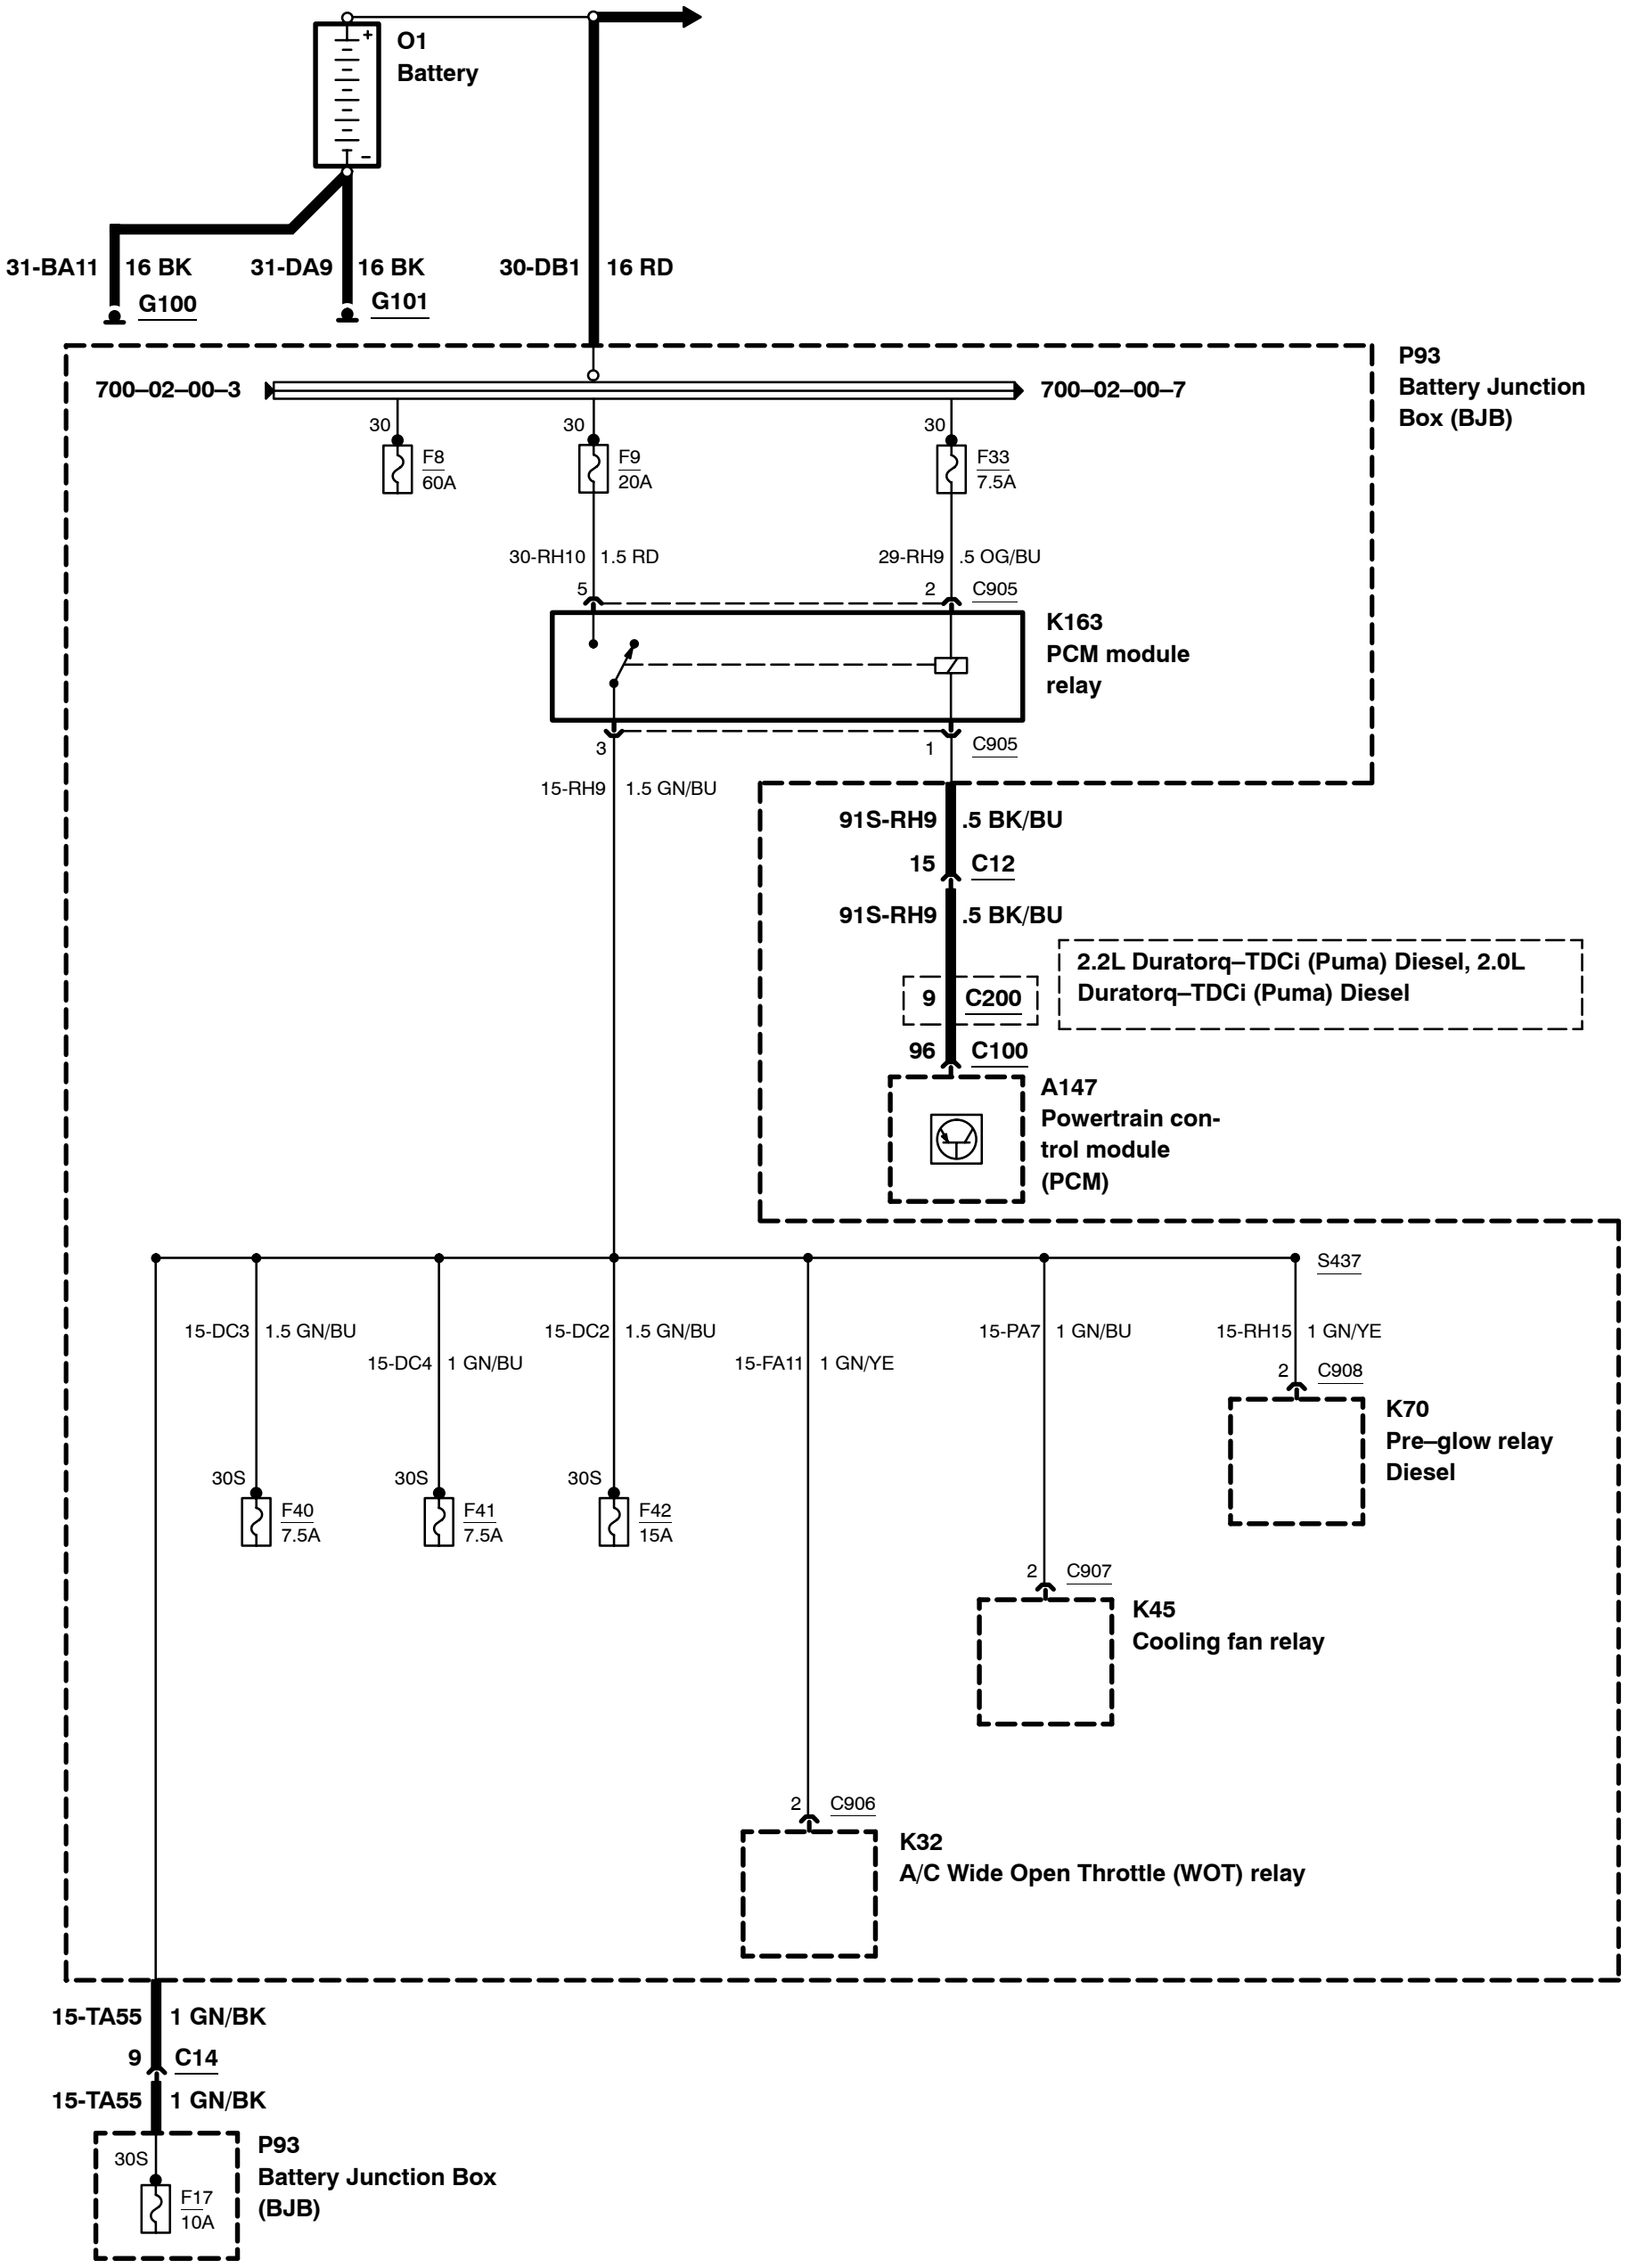


Power Distribution

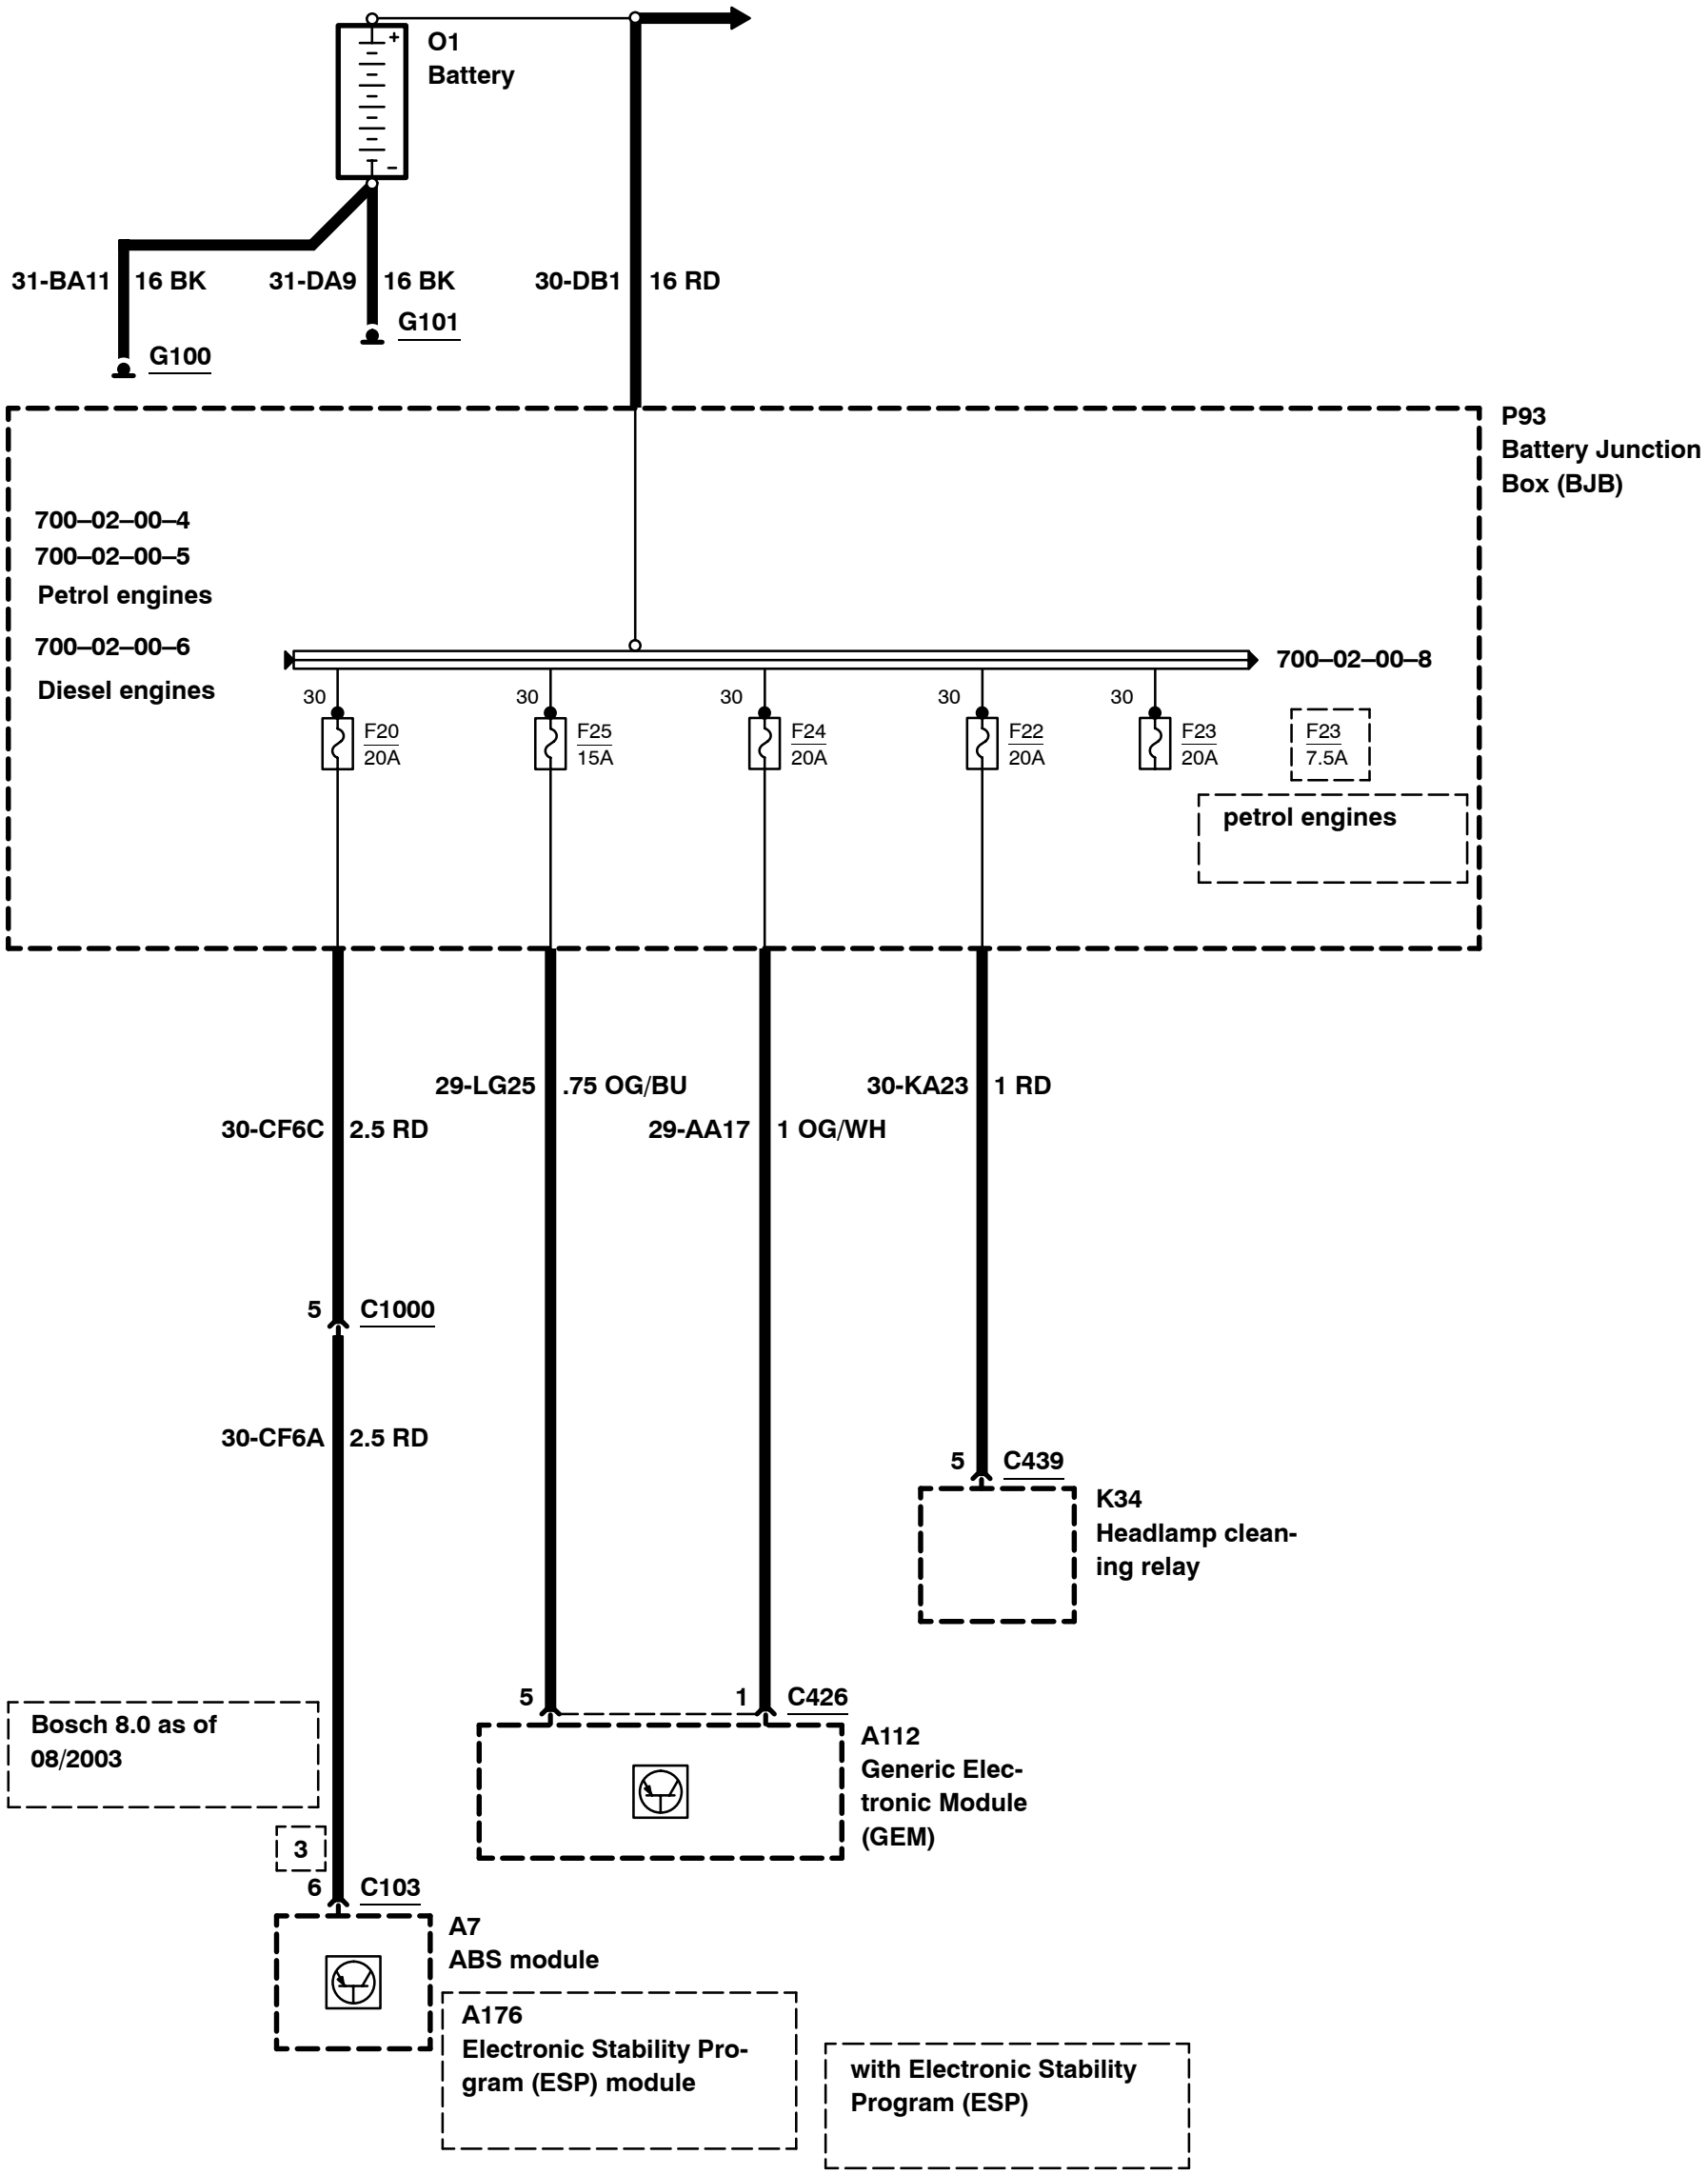


Power Distribution

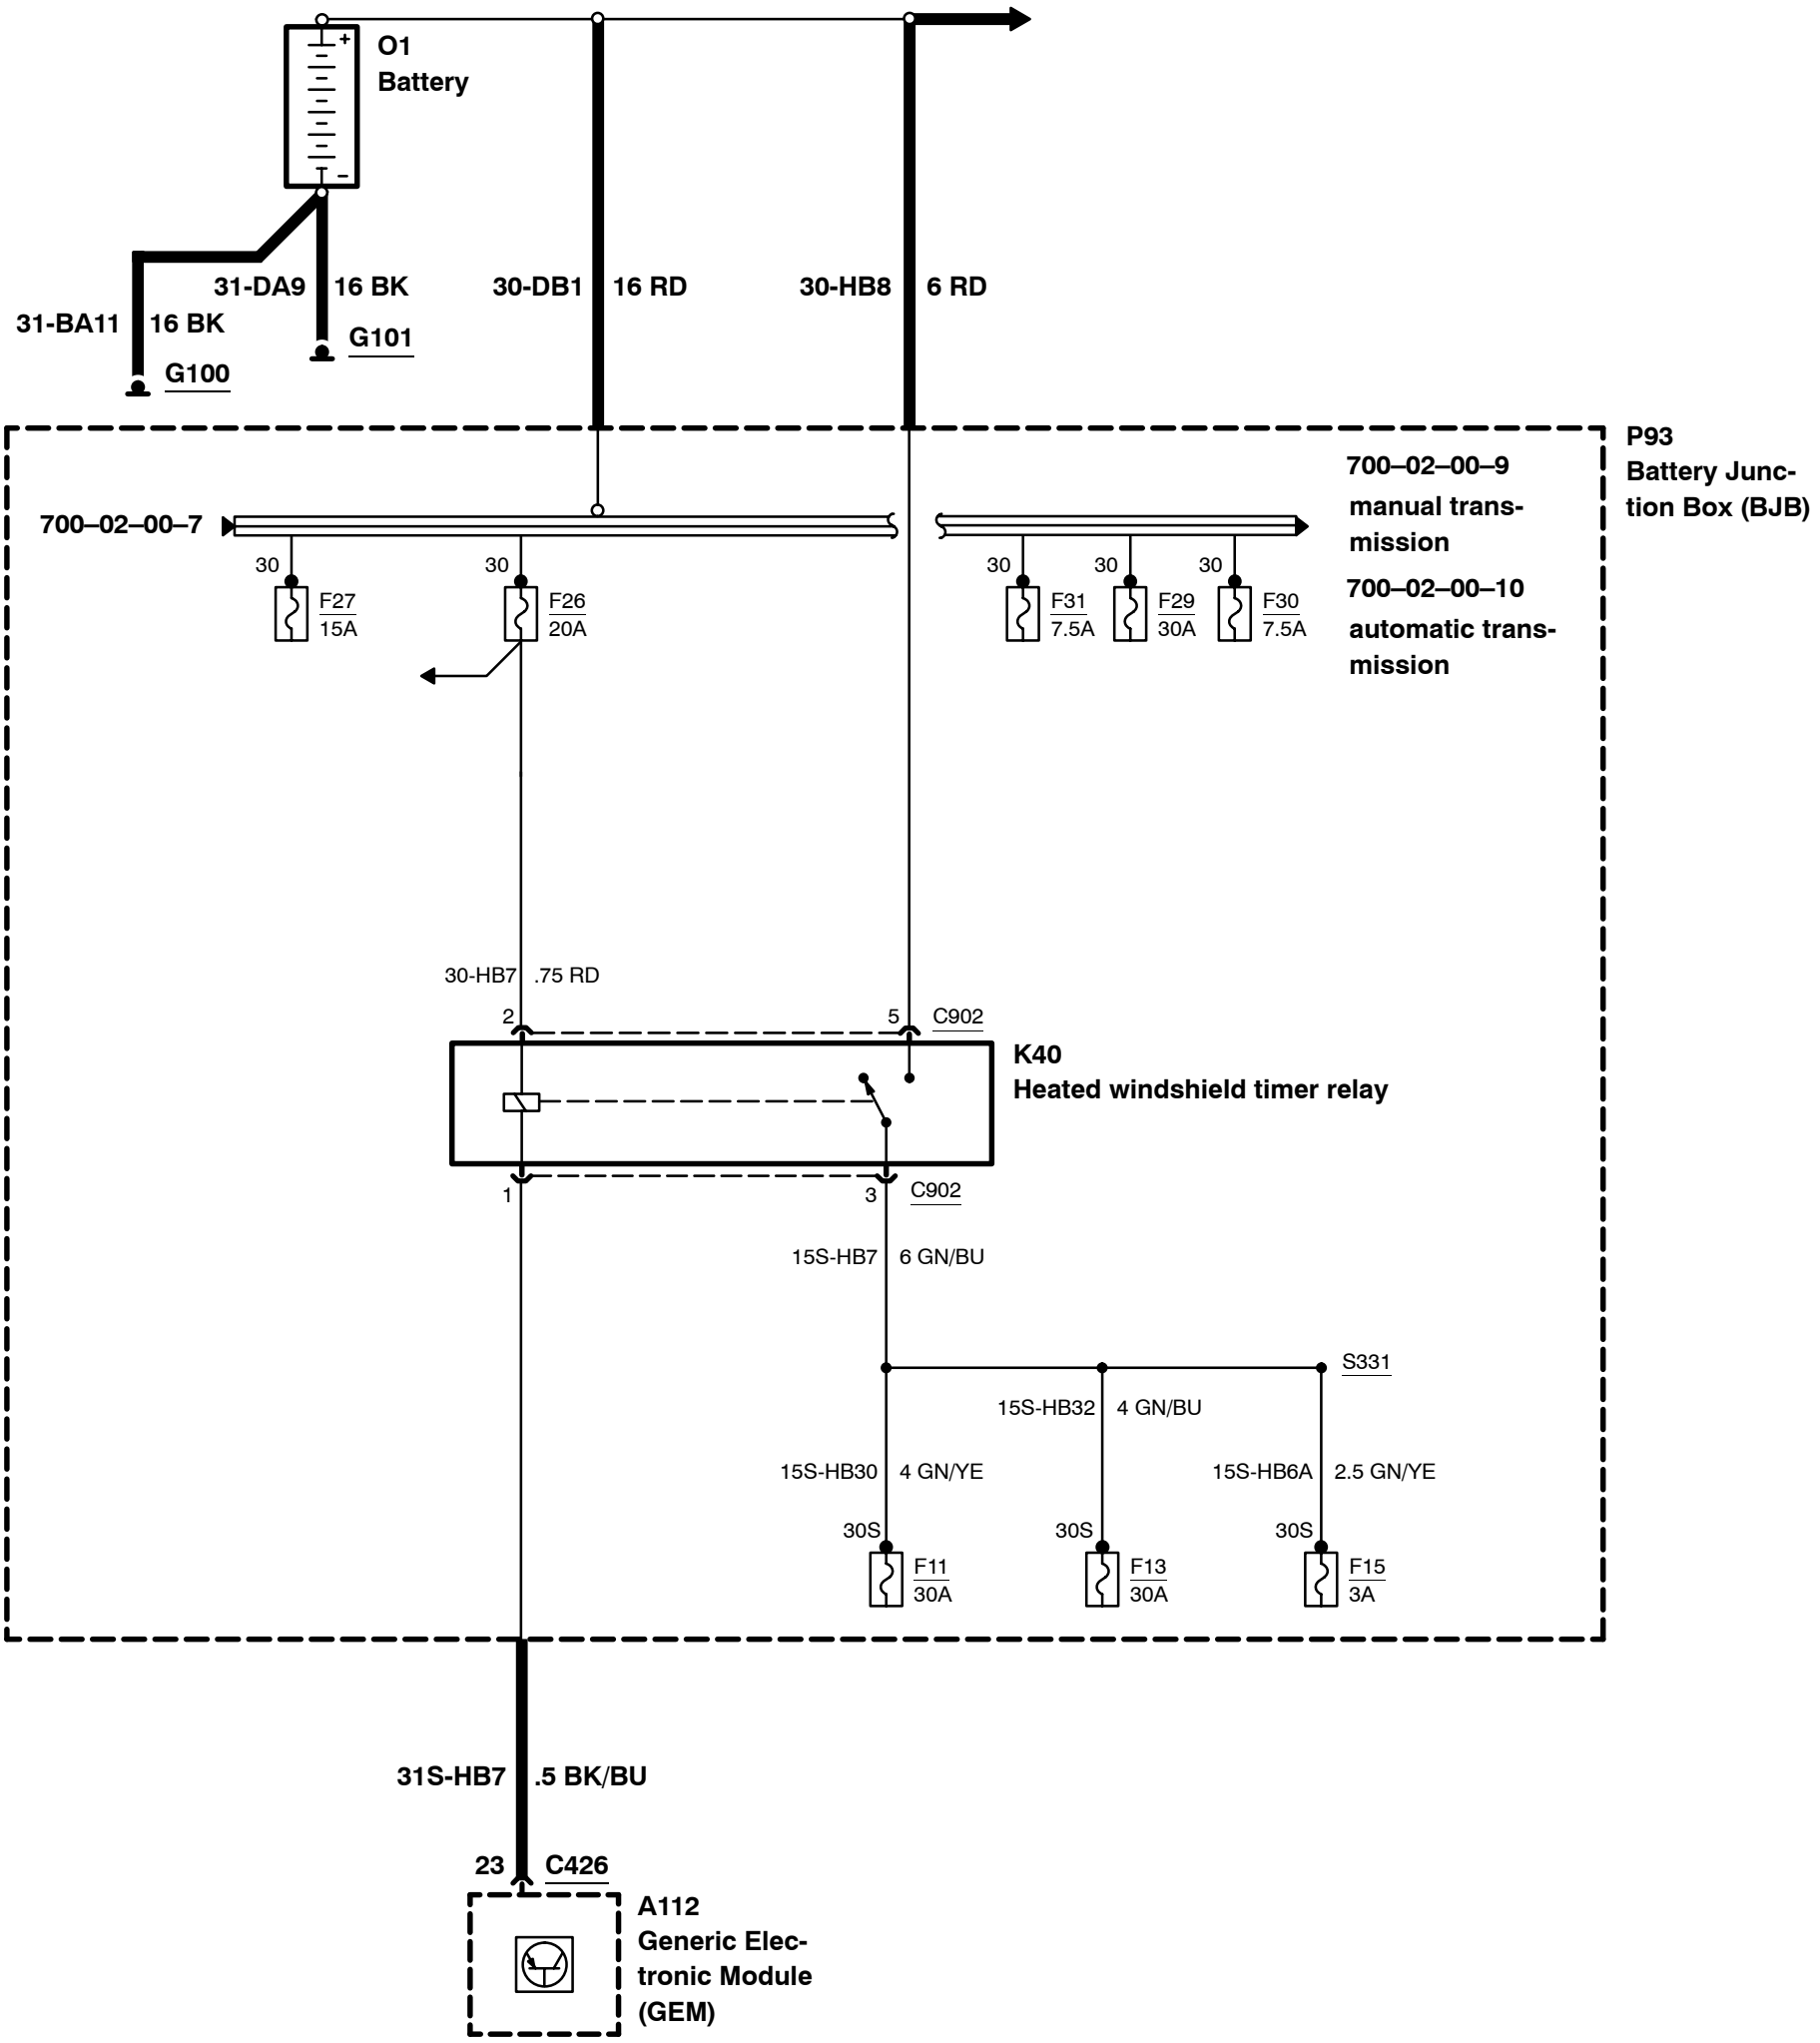


Power Distribution – Ignition switch manual transmission

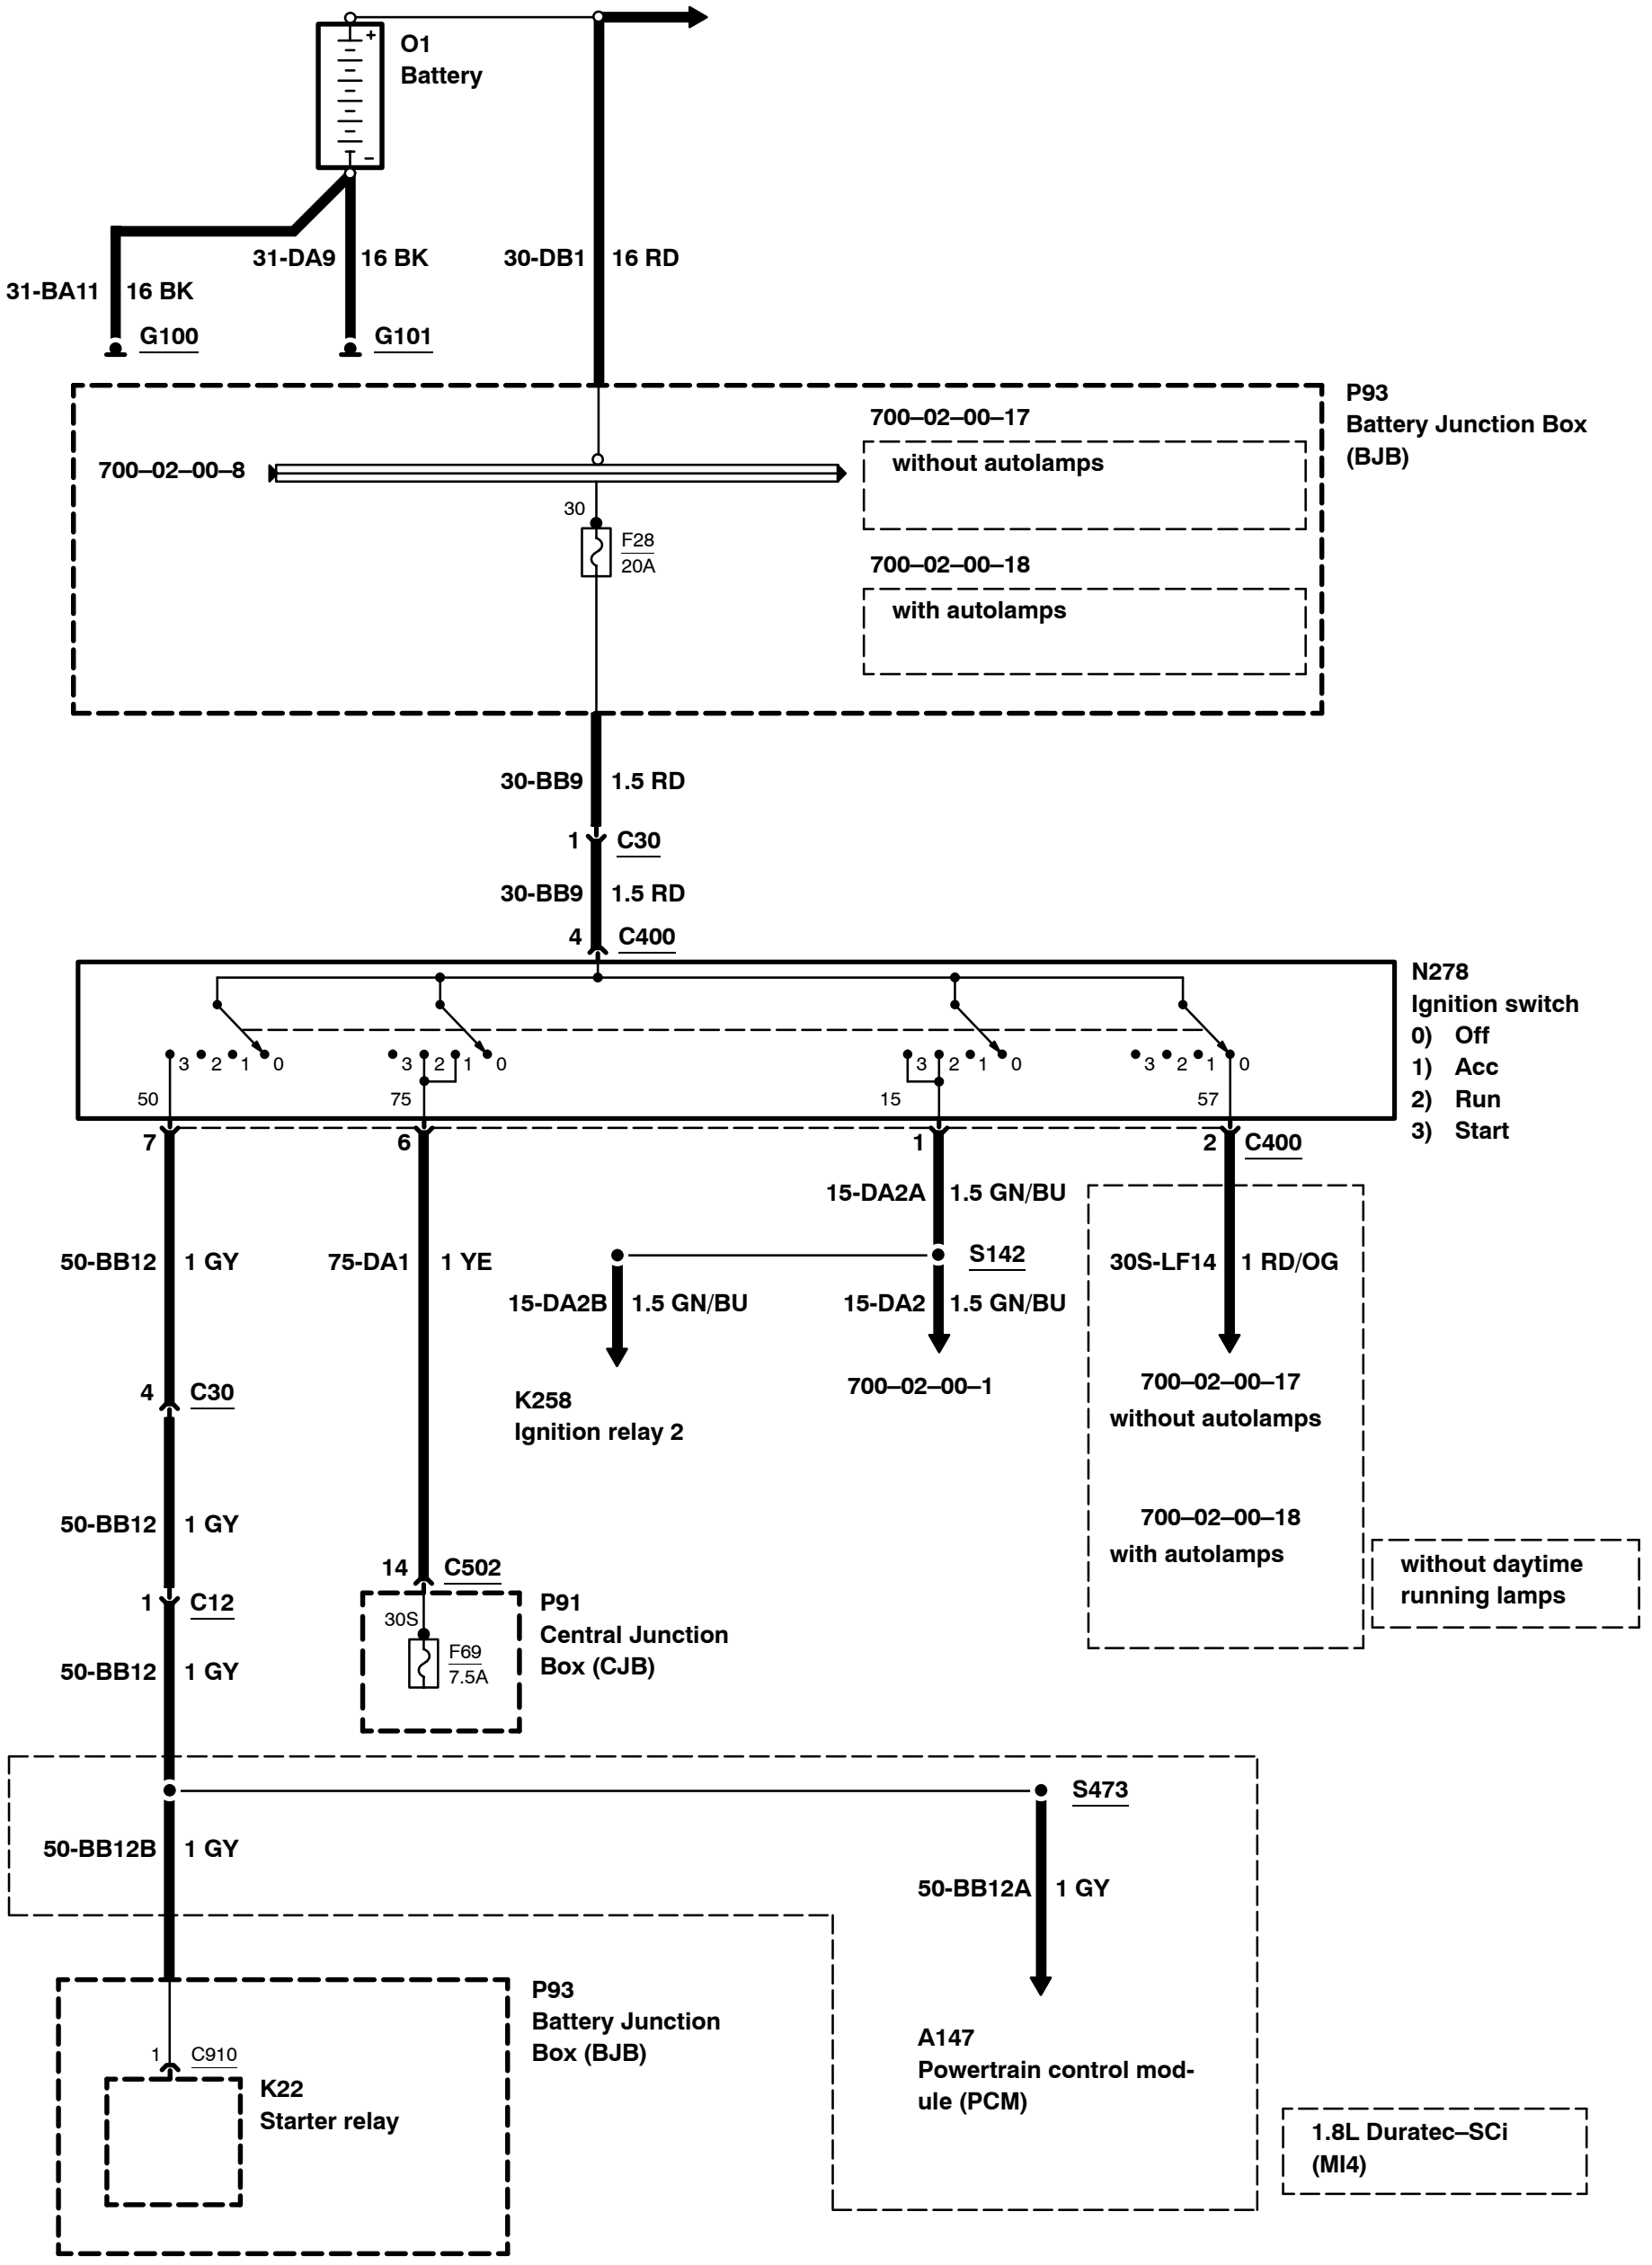


Power Distribution – Ignition switch automatic transmission

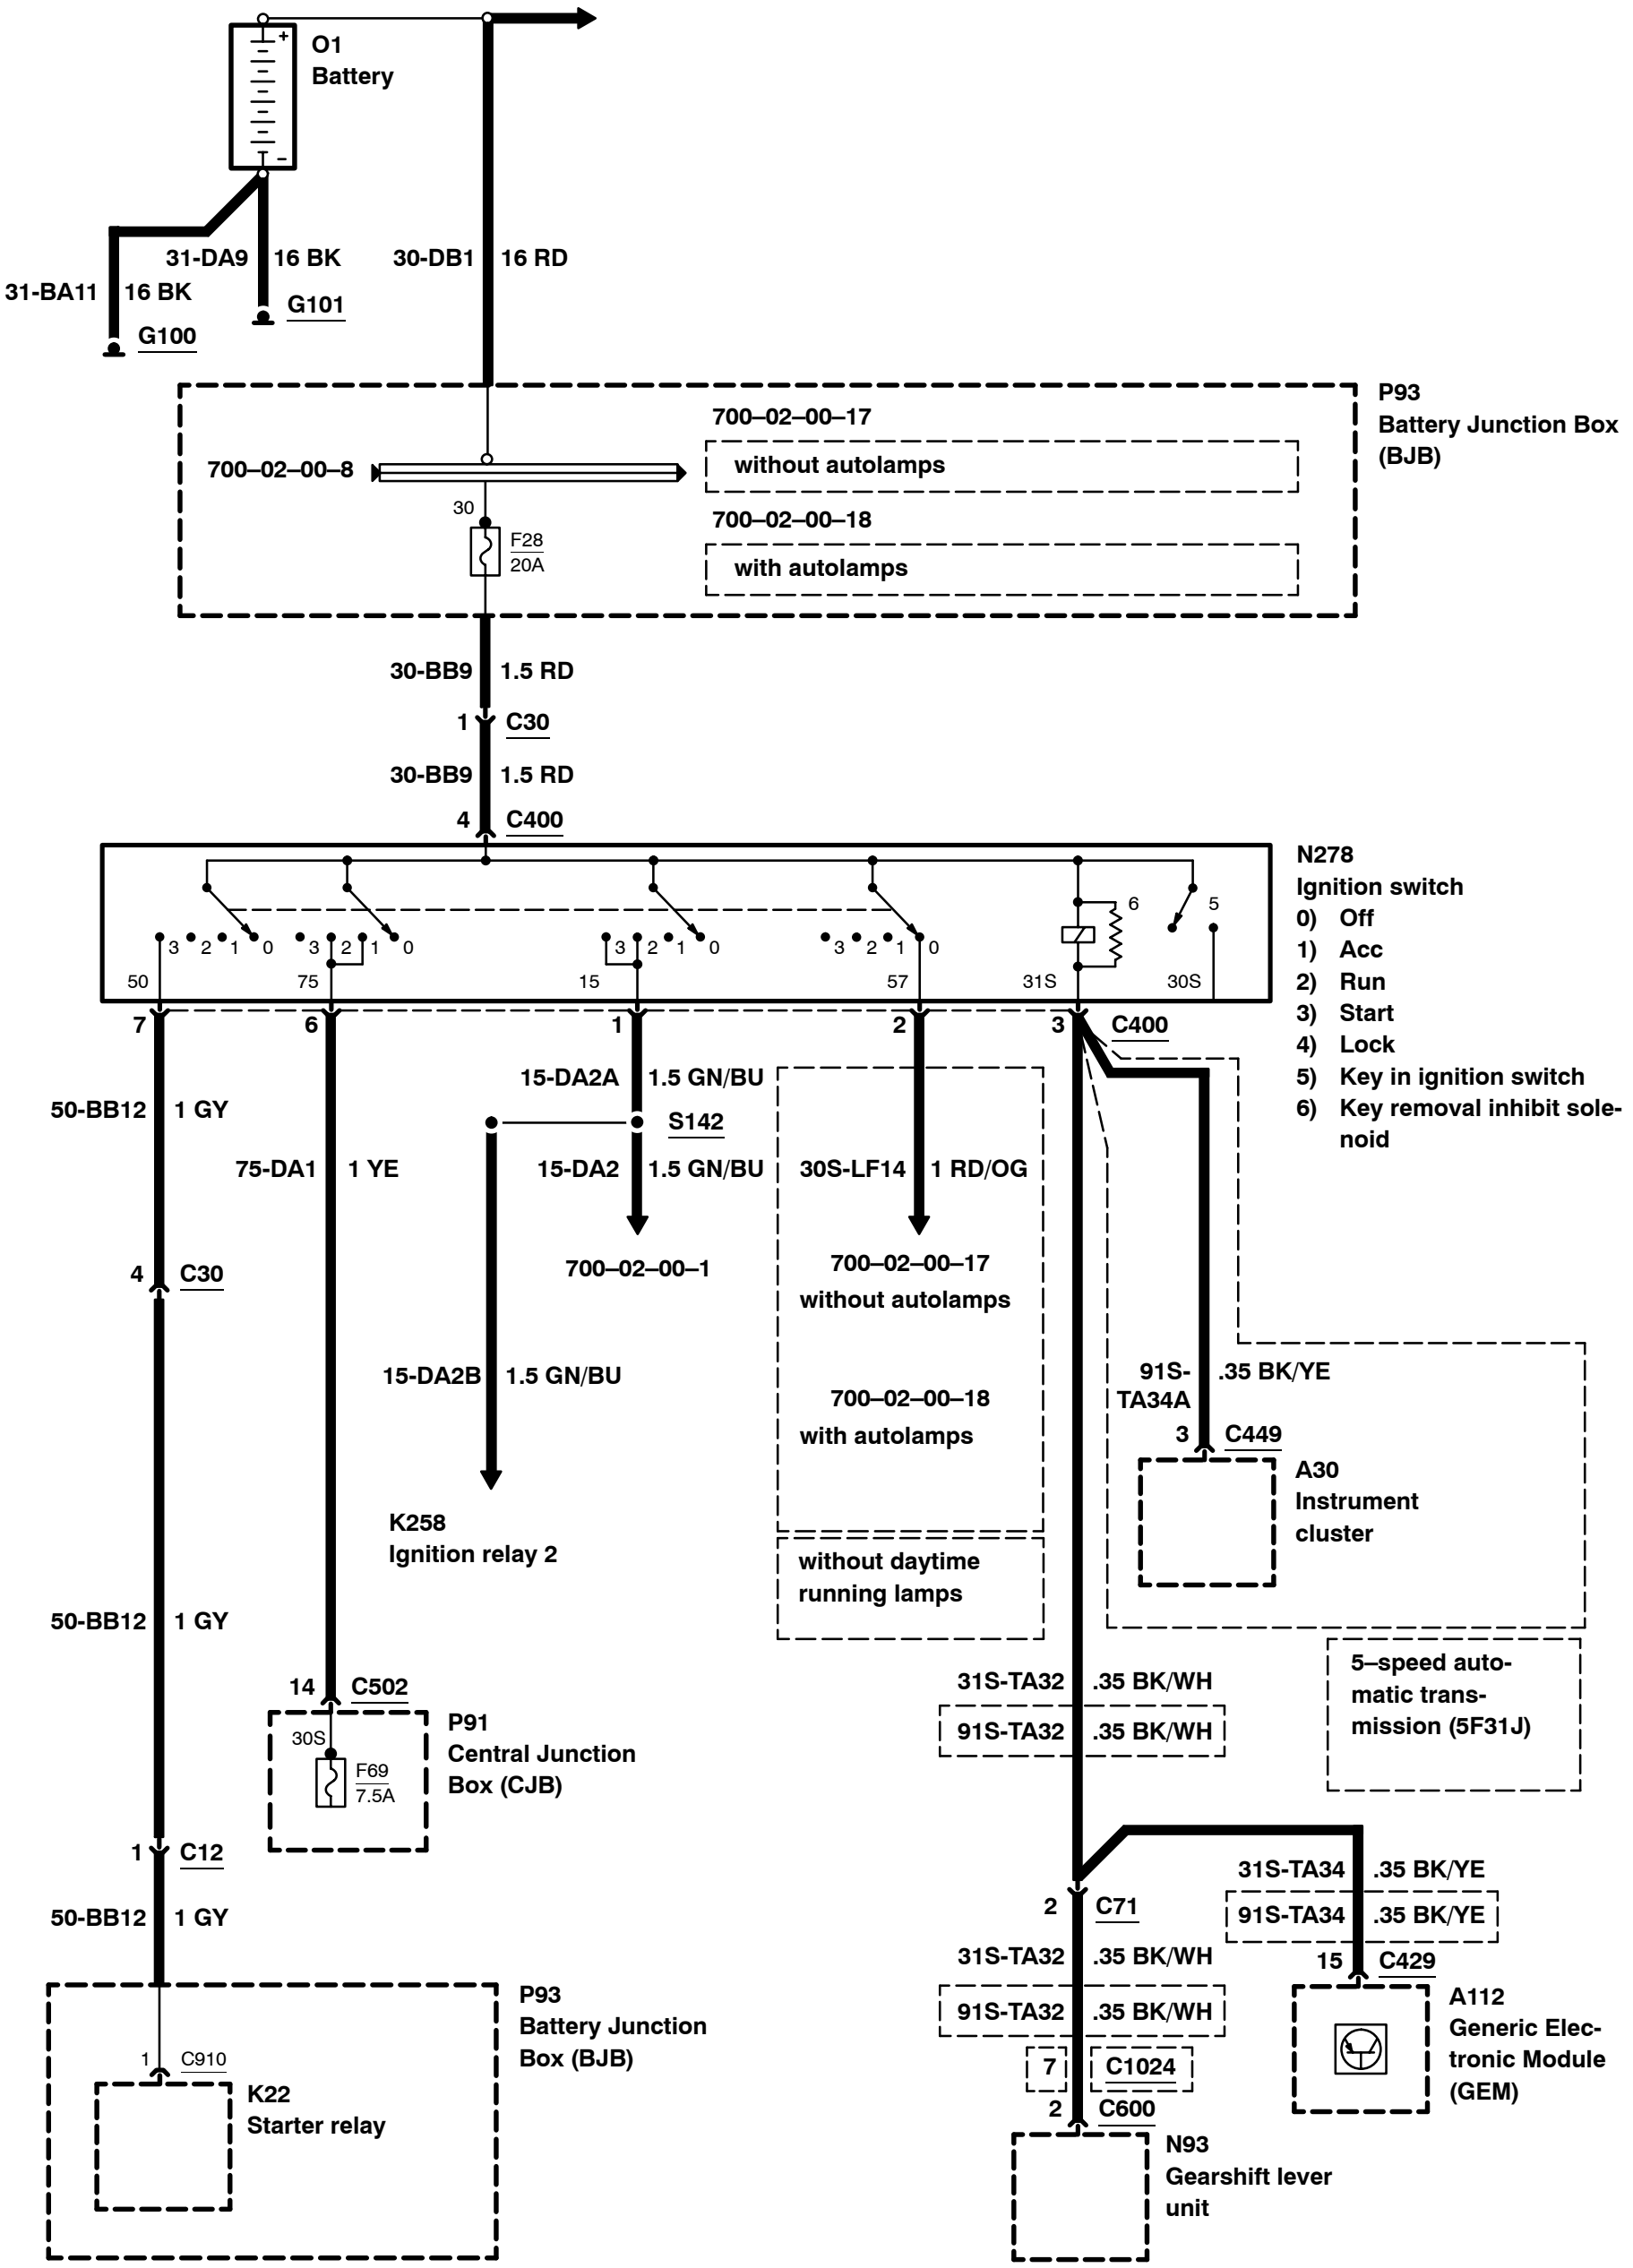


Power Distribution – Light switch, without daytime running lamps, without high intensity discharge headlamps

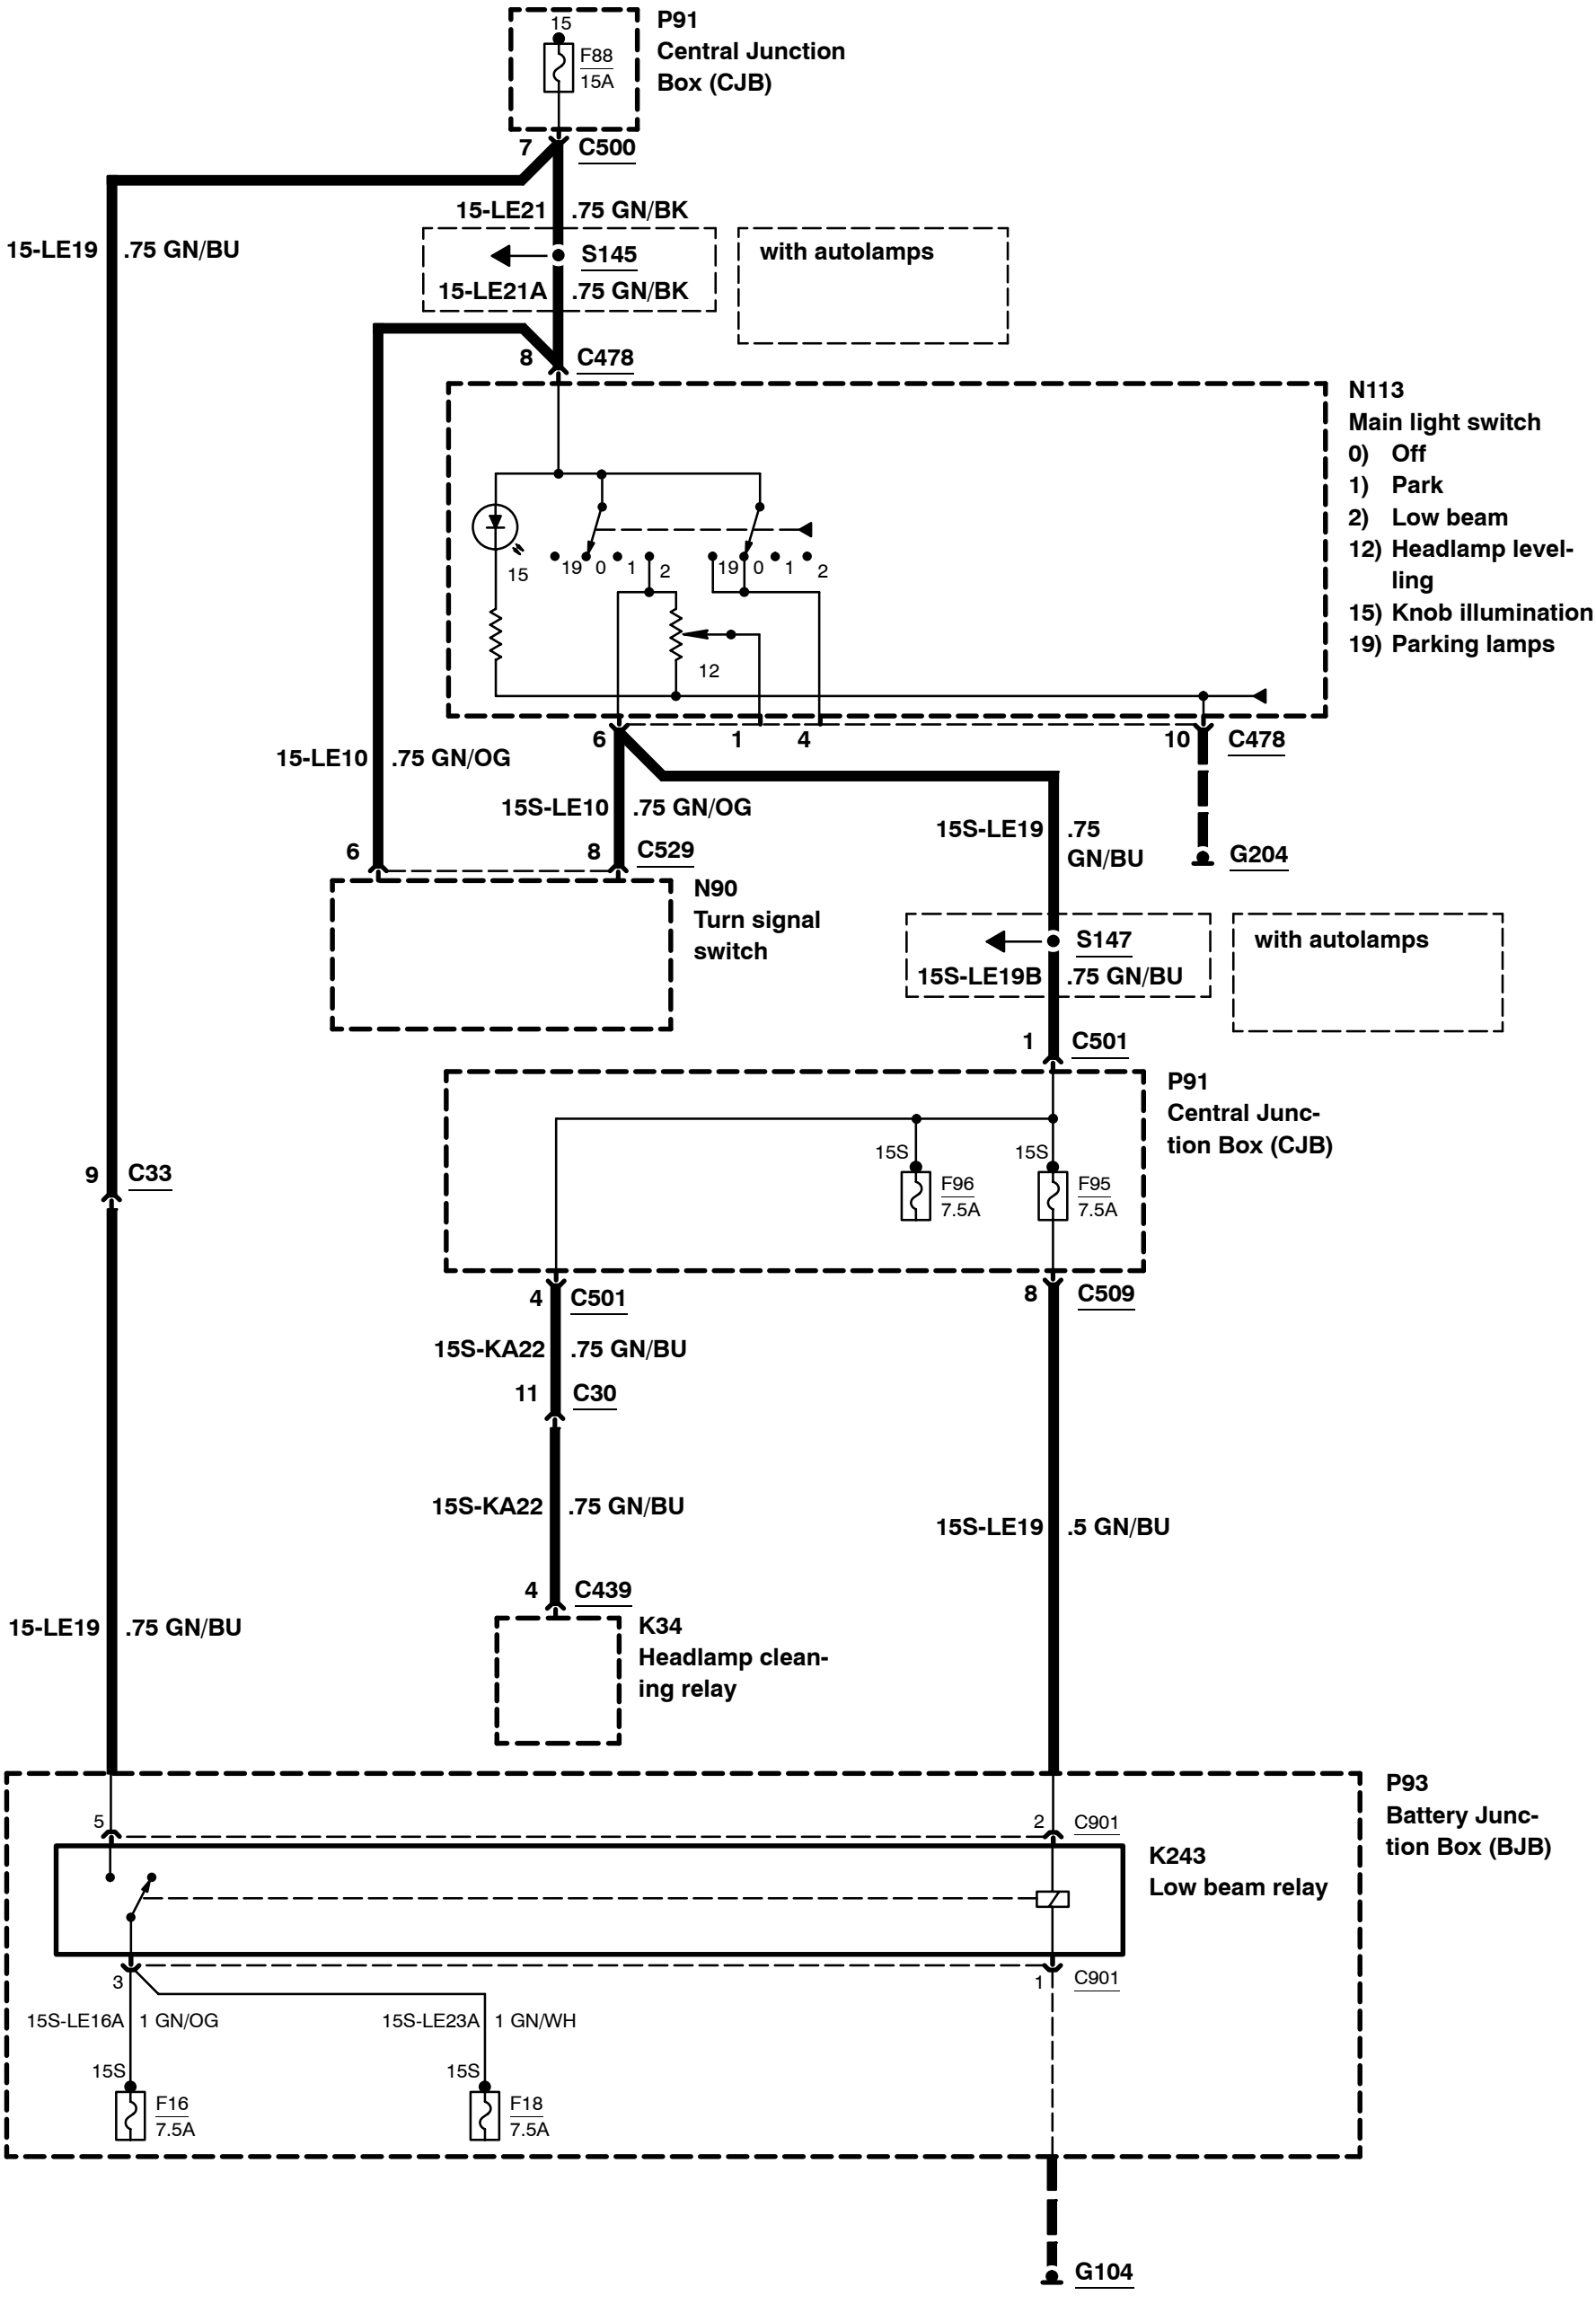


Power Distribution – Light switch, without daytime running lamps, with high intensity discharge headlamps

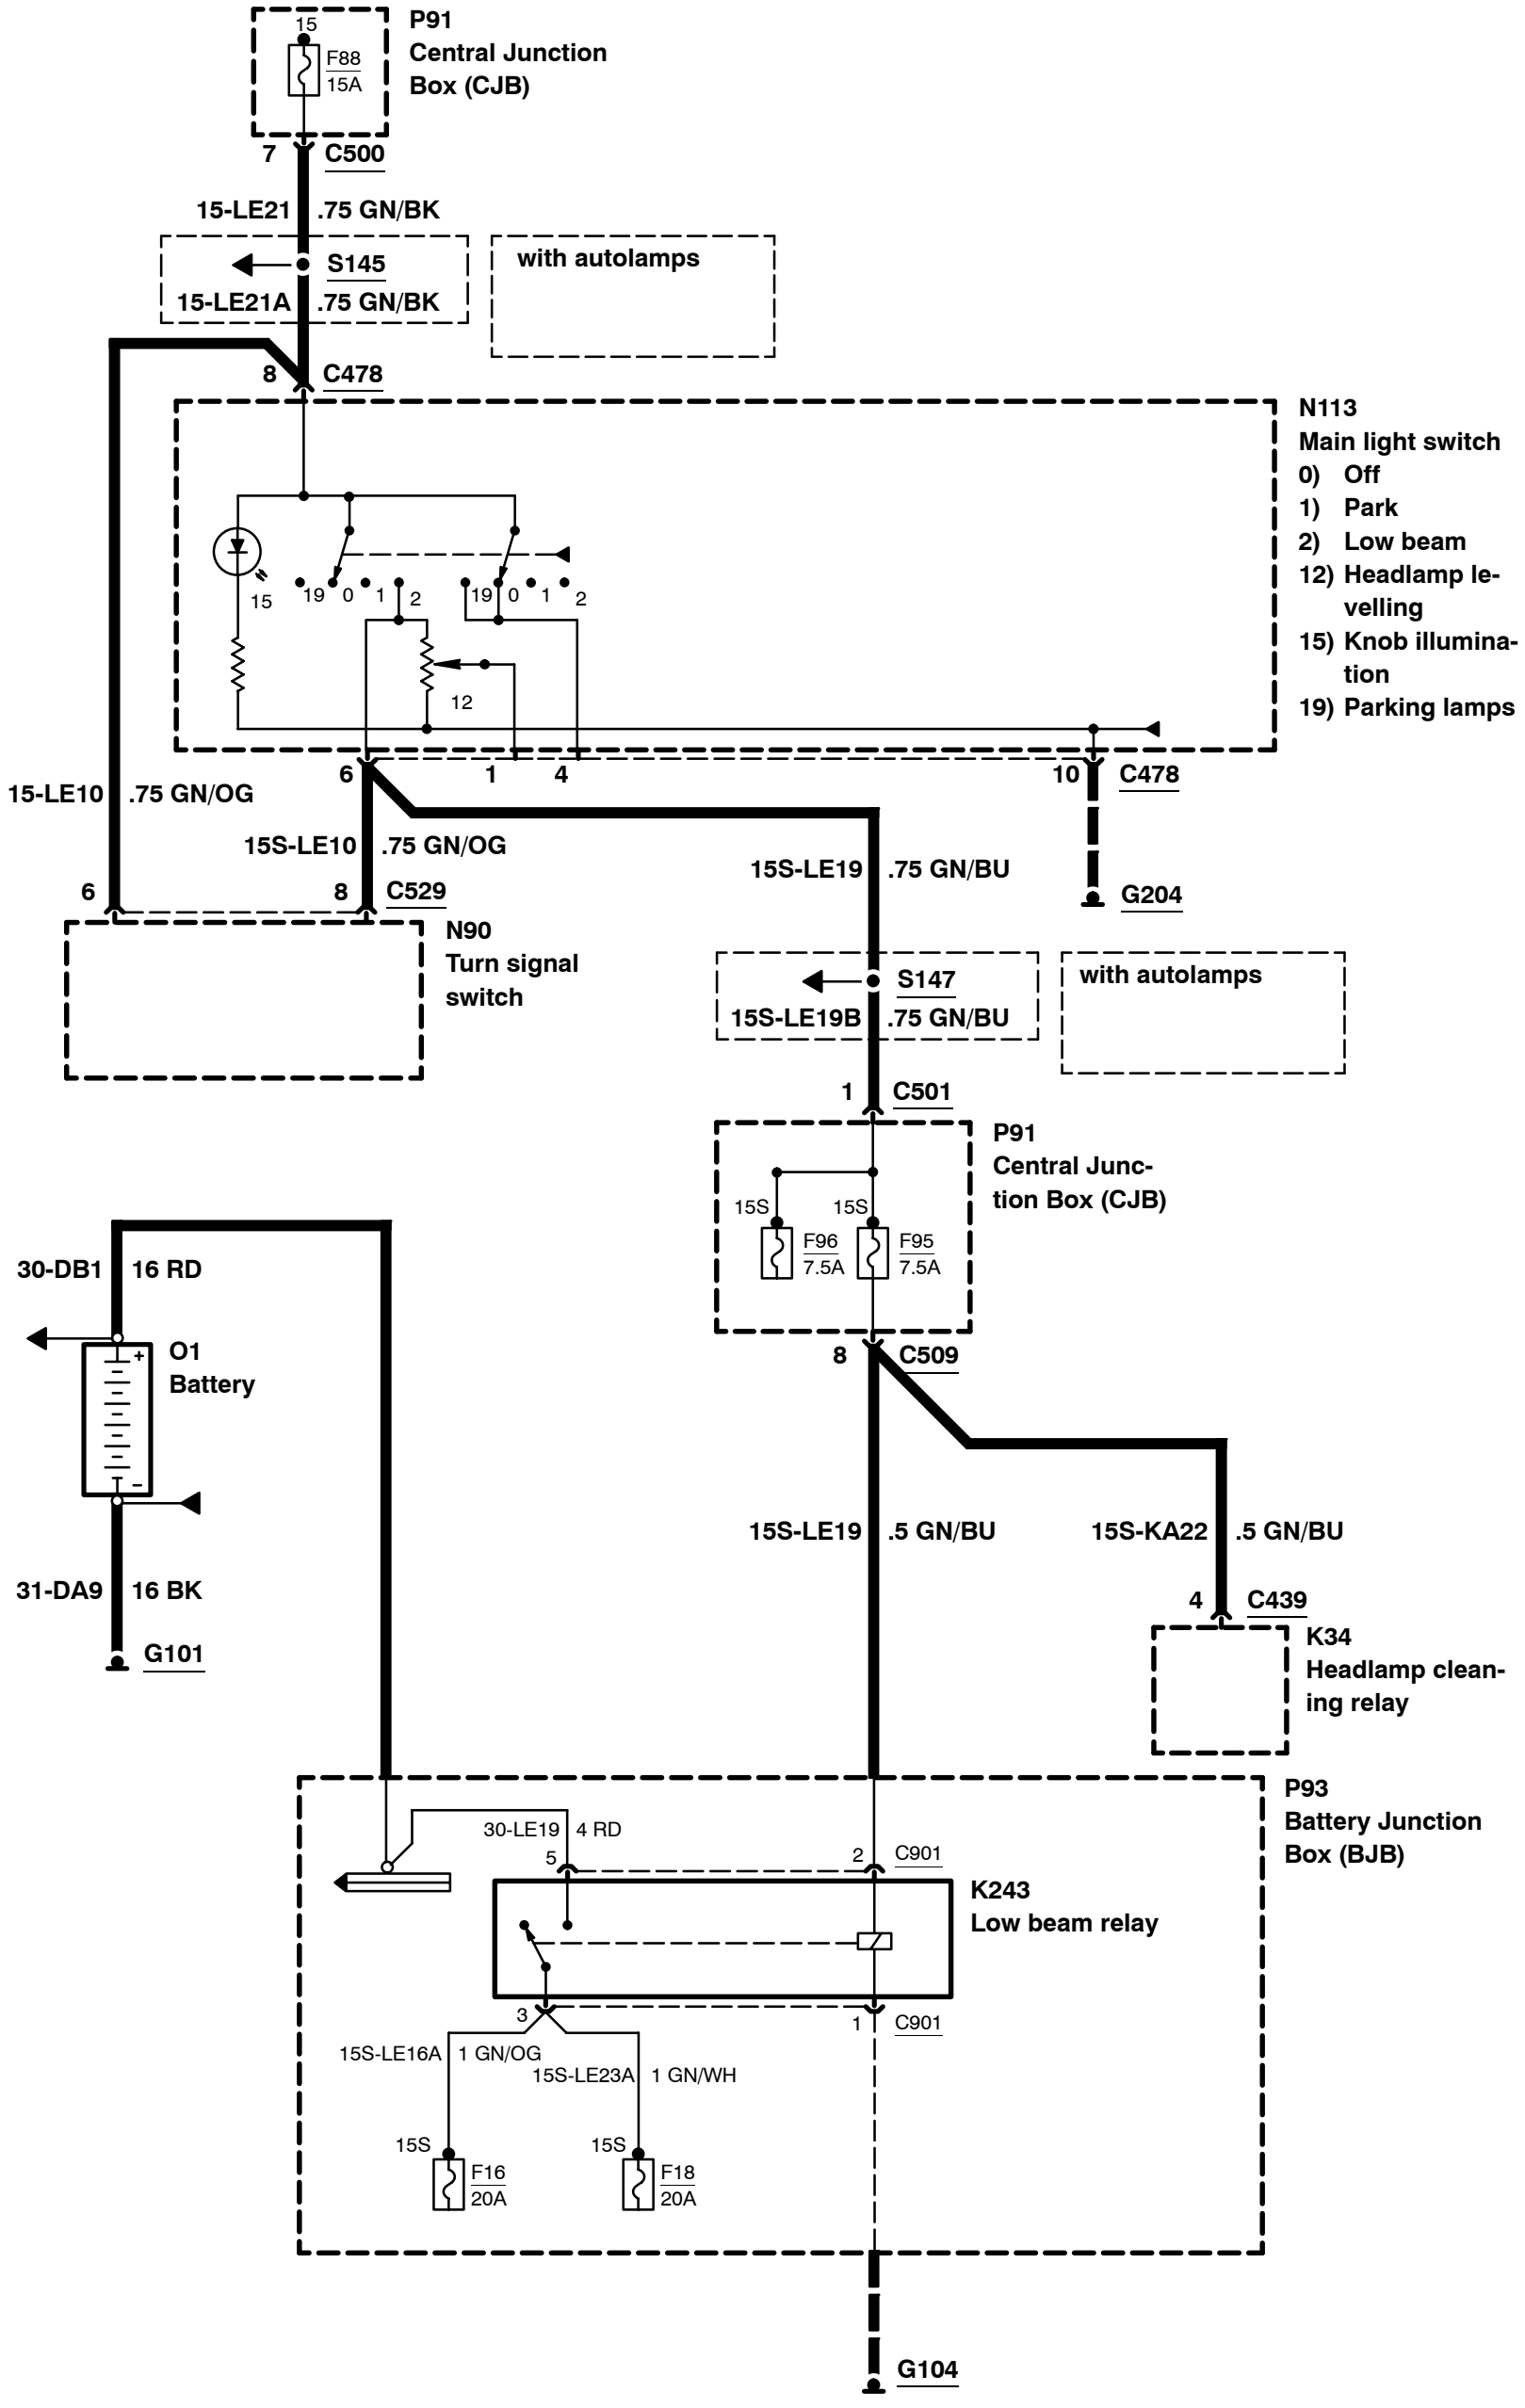


Power Distribution – Light switch, with daytime running lamps, without high intensity discharge headlamps

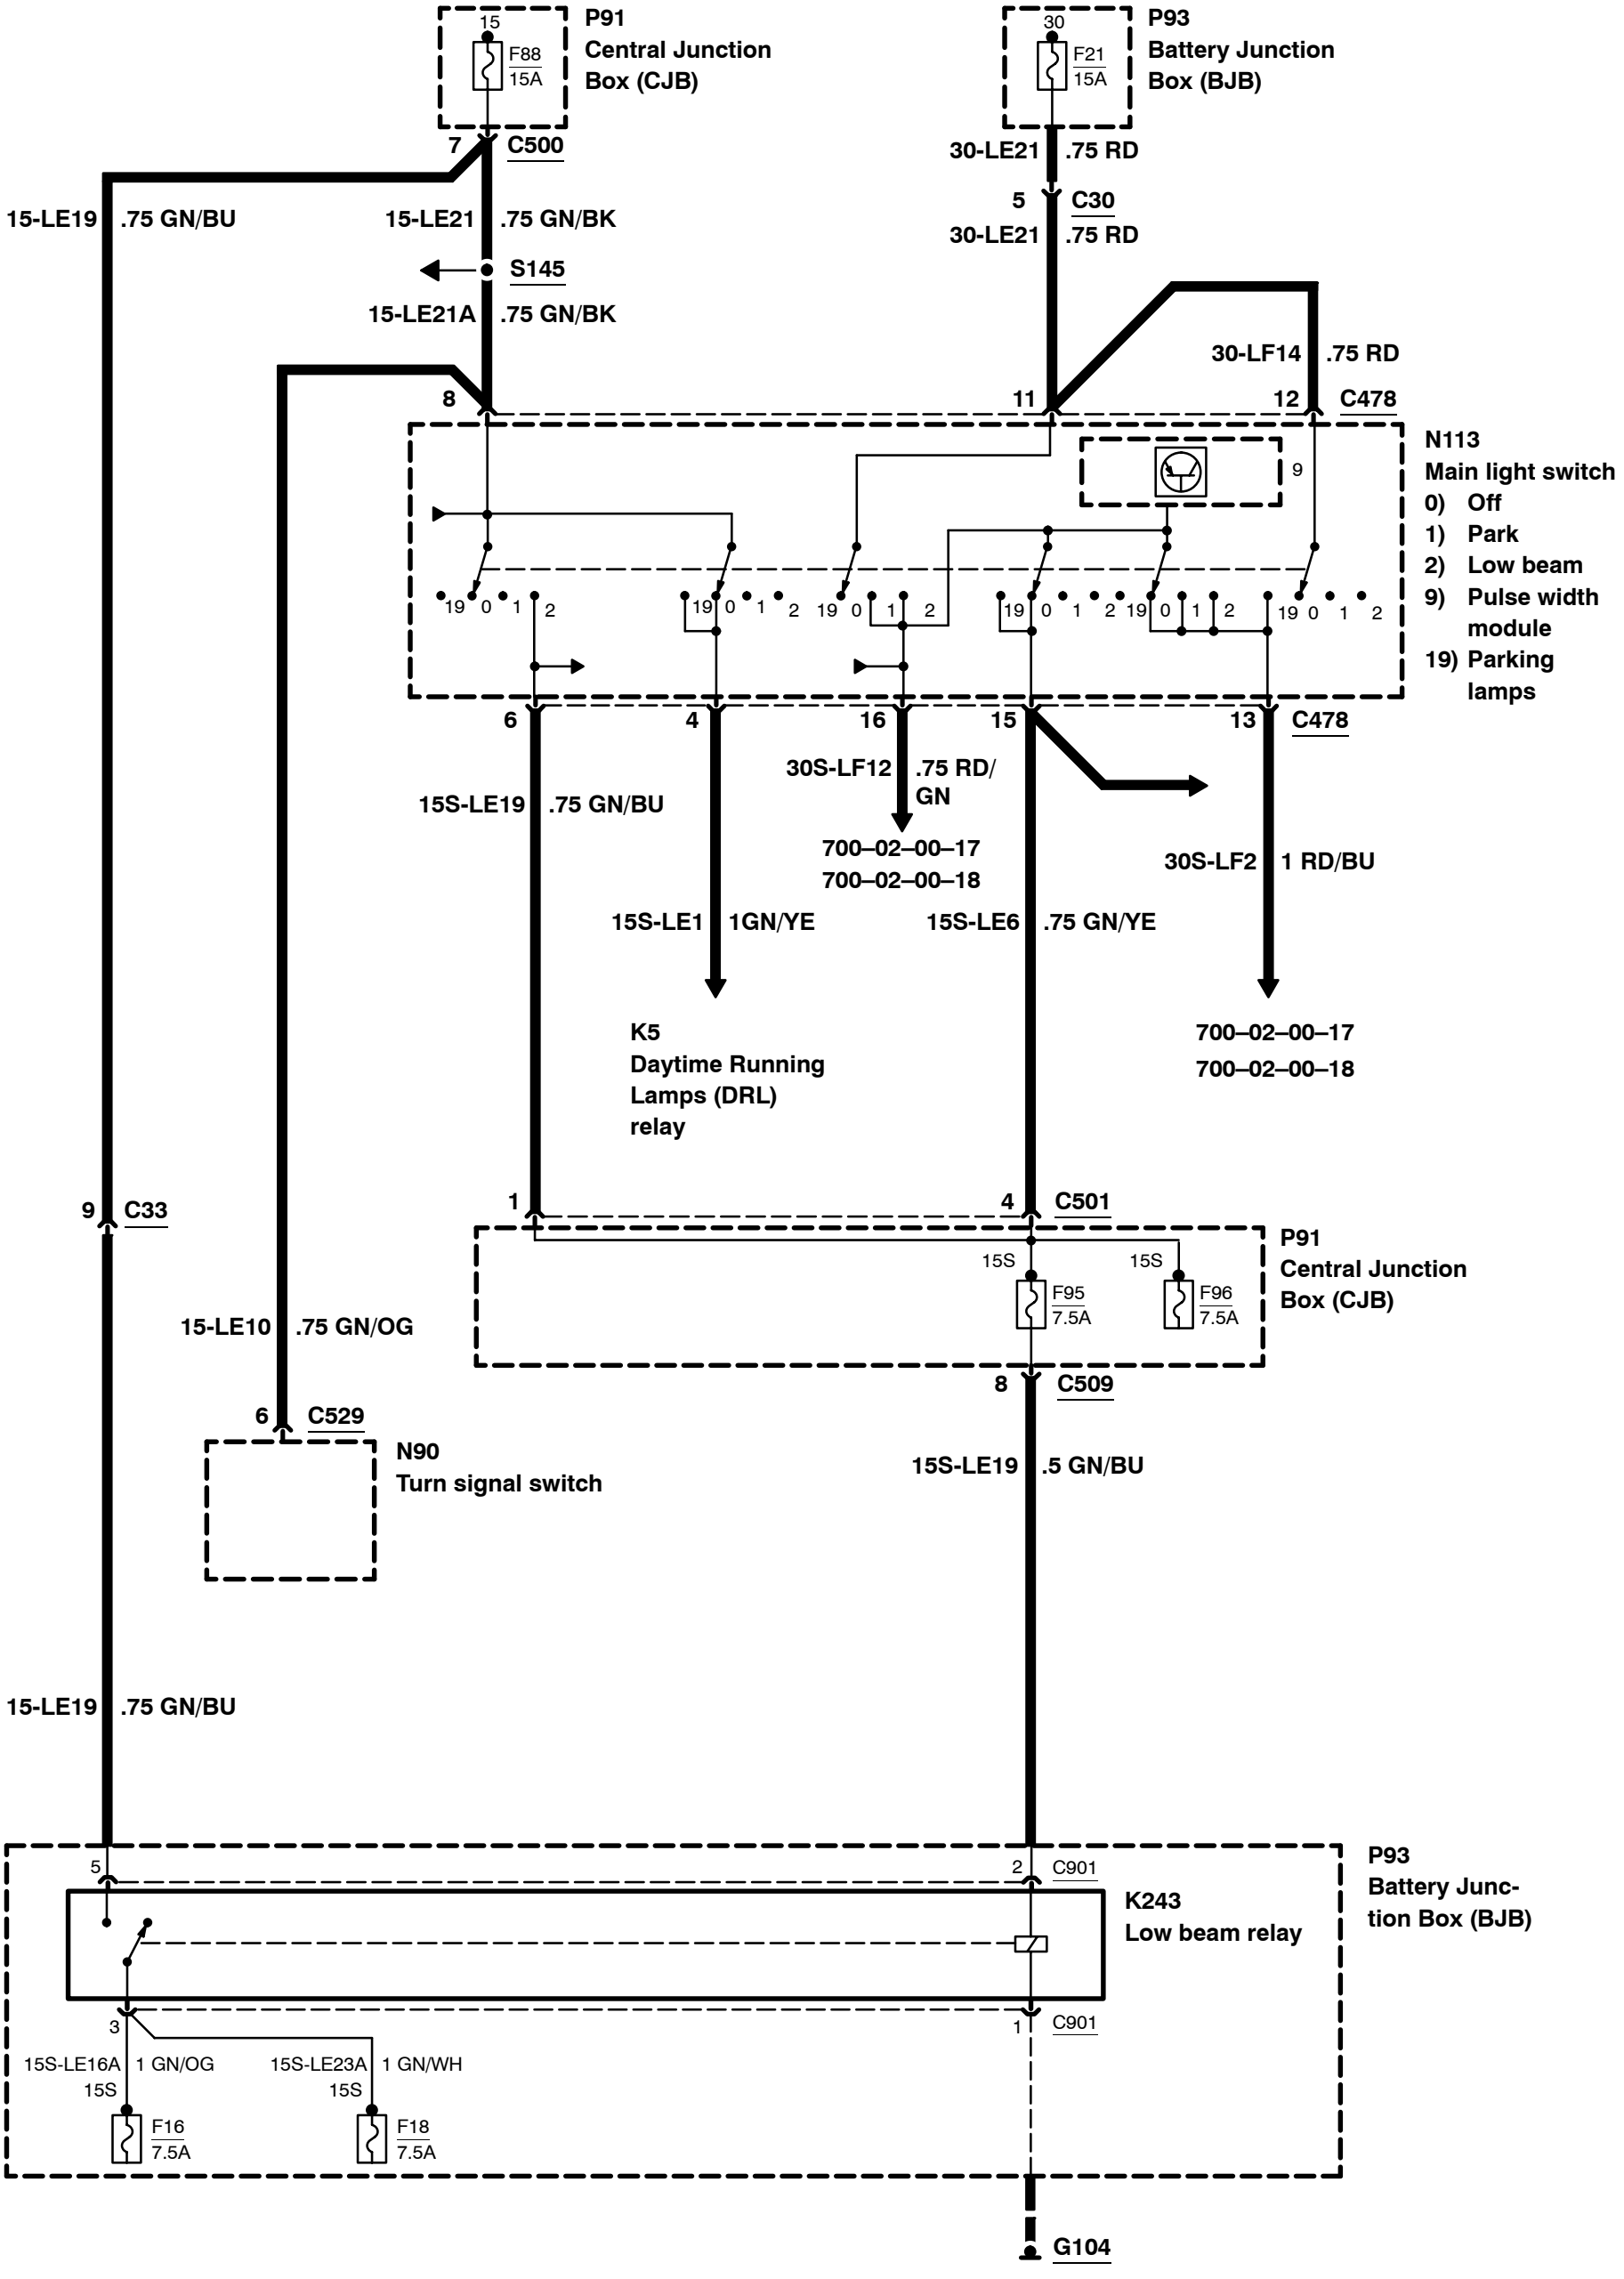


Power Distribution – Light switch, with daytime running lamps, with high intensity discharge headlamps

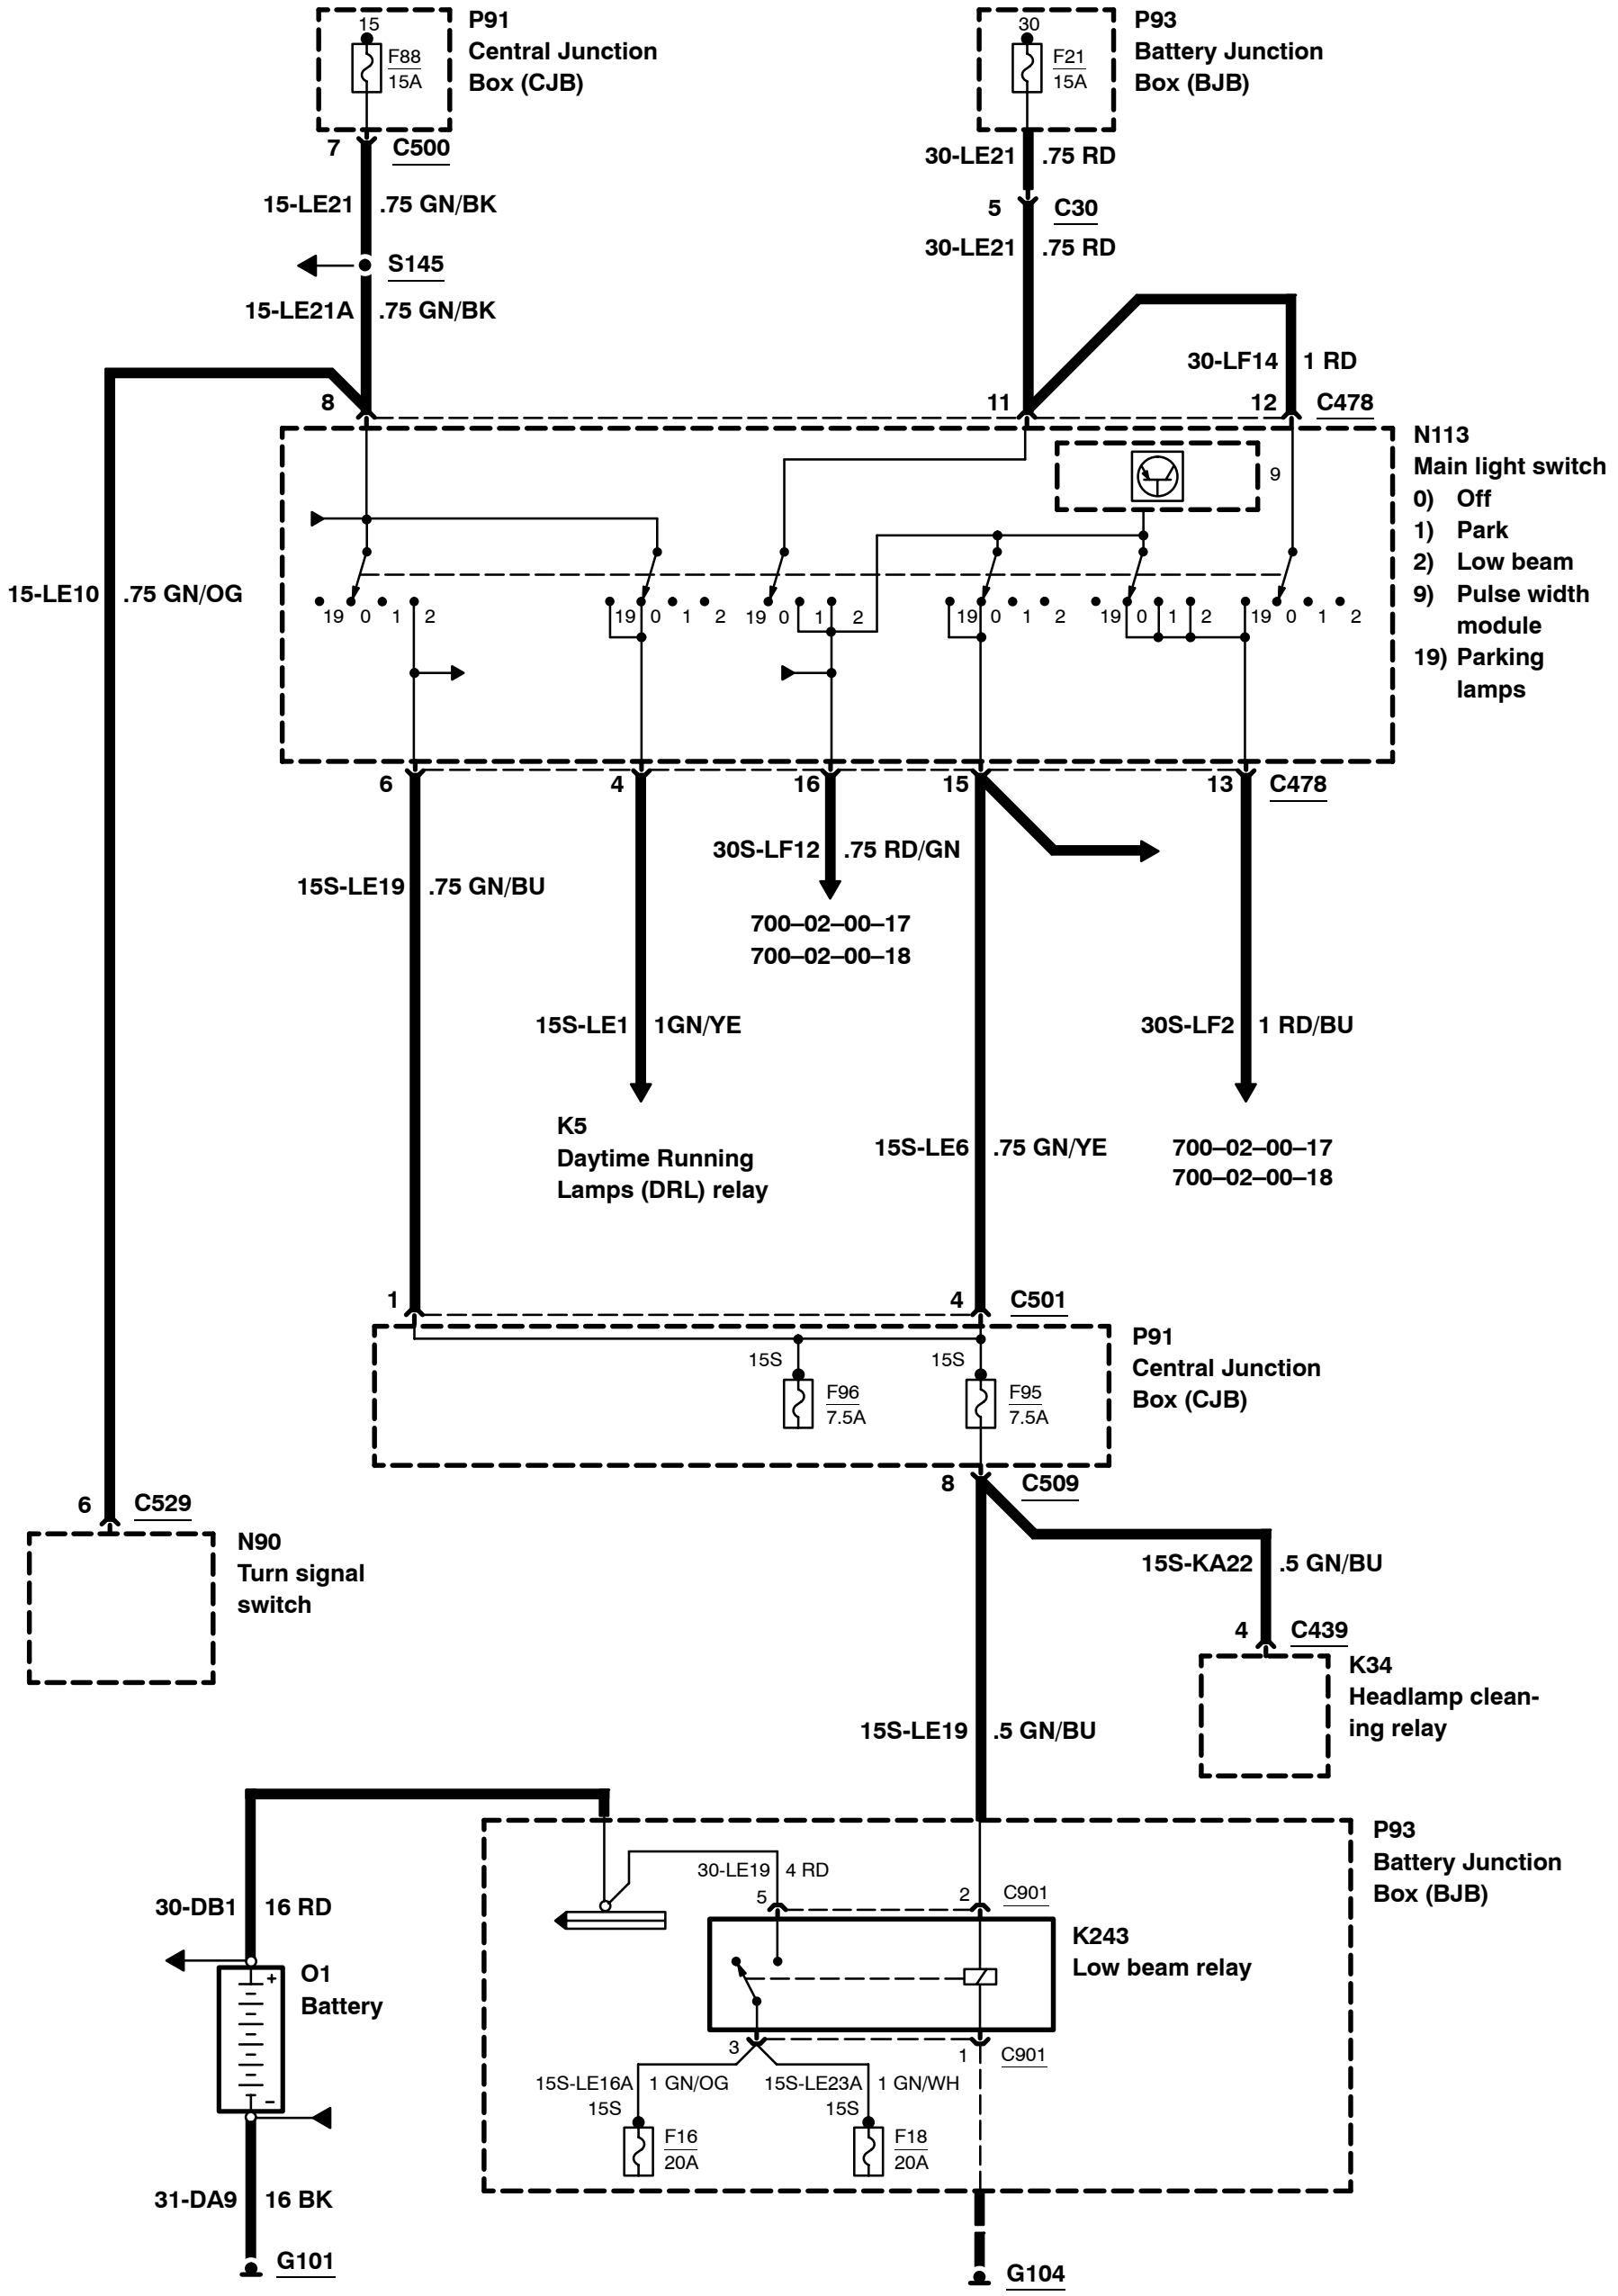


Power Distribution – Light switch, without autolamps

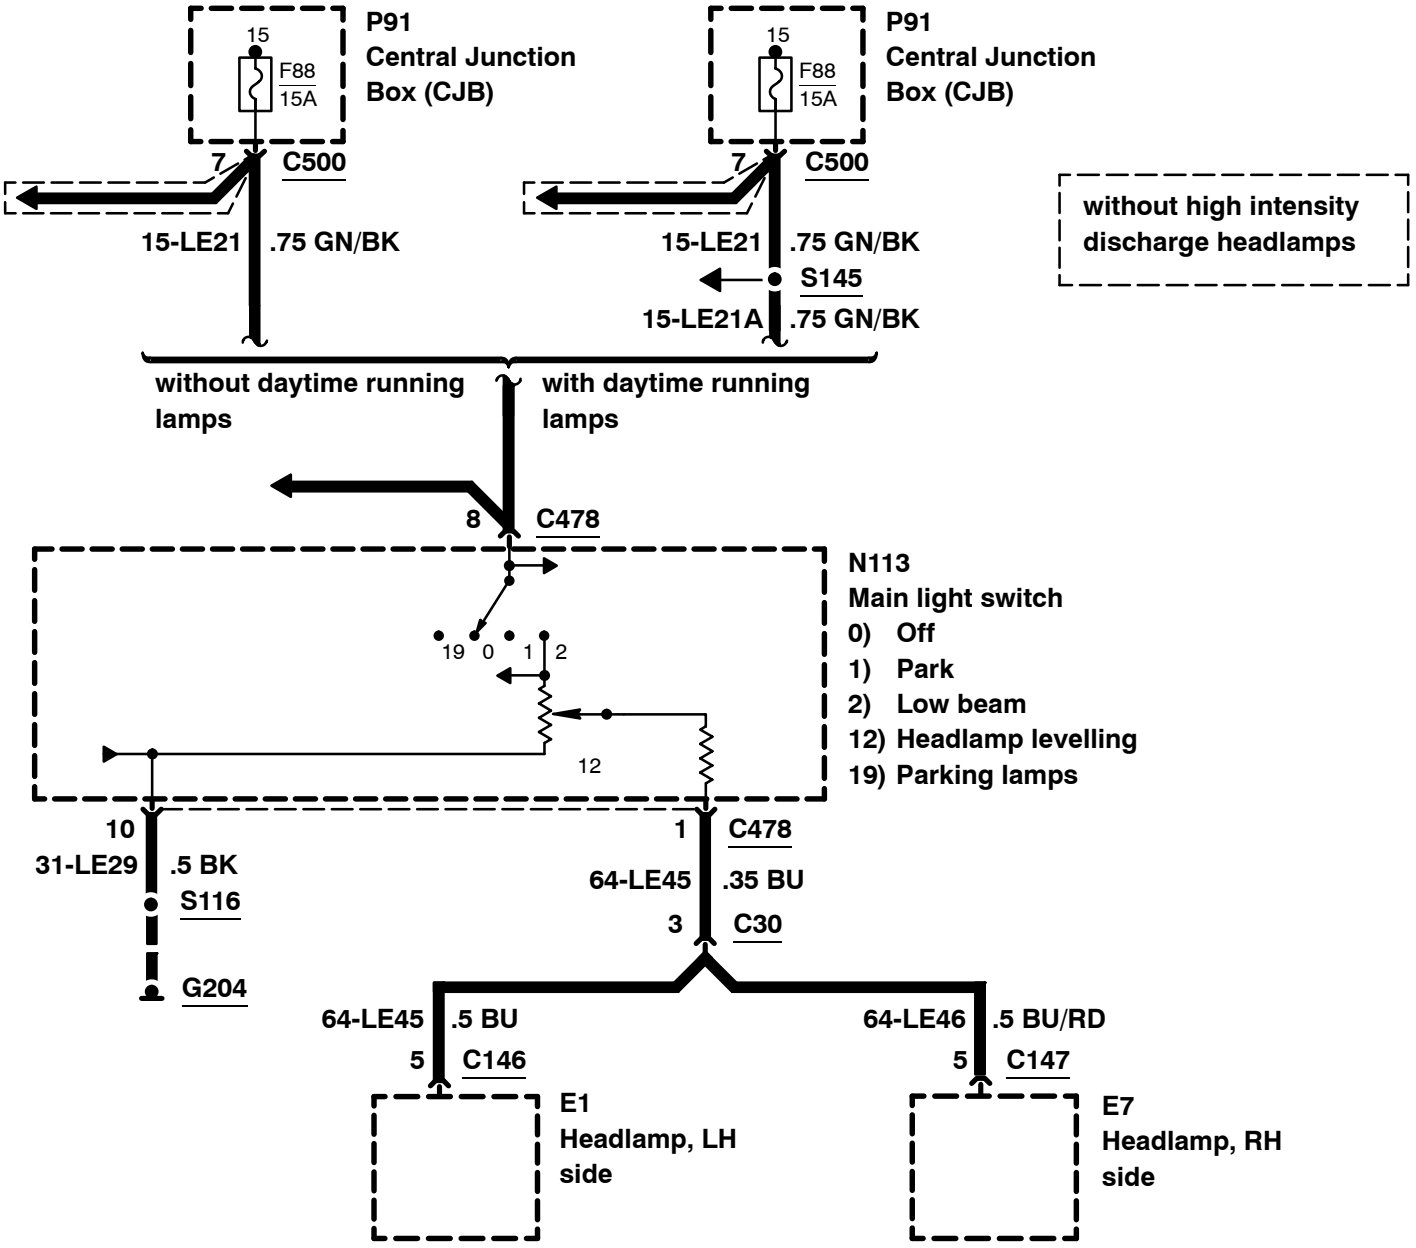


Power Distribution – Light switch, with autolamps

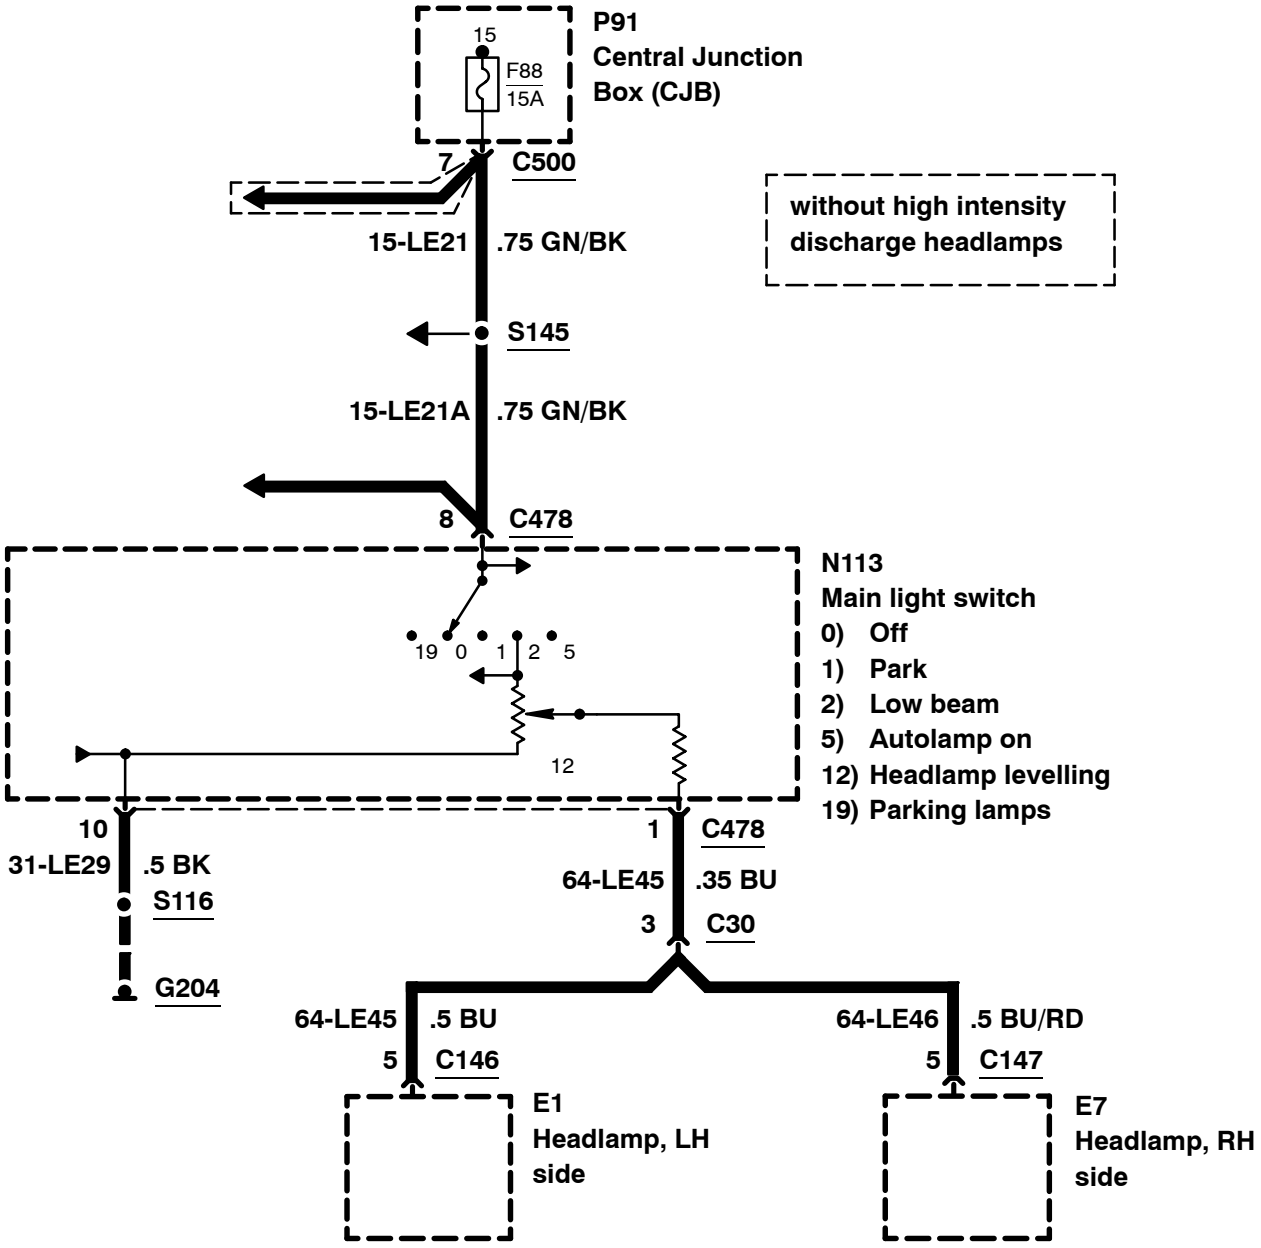


Power Distribution – Light switch, without autolamps

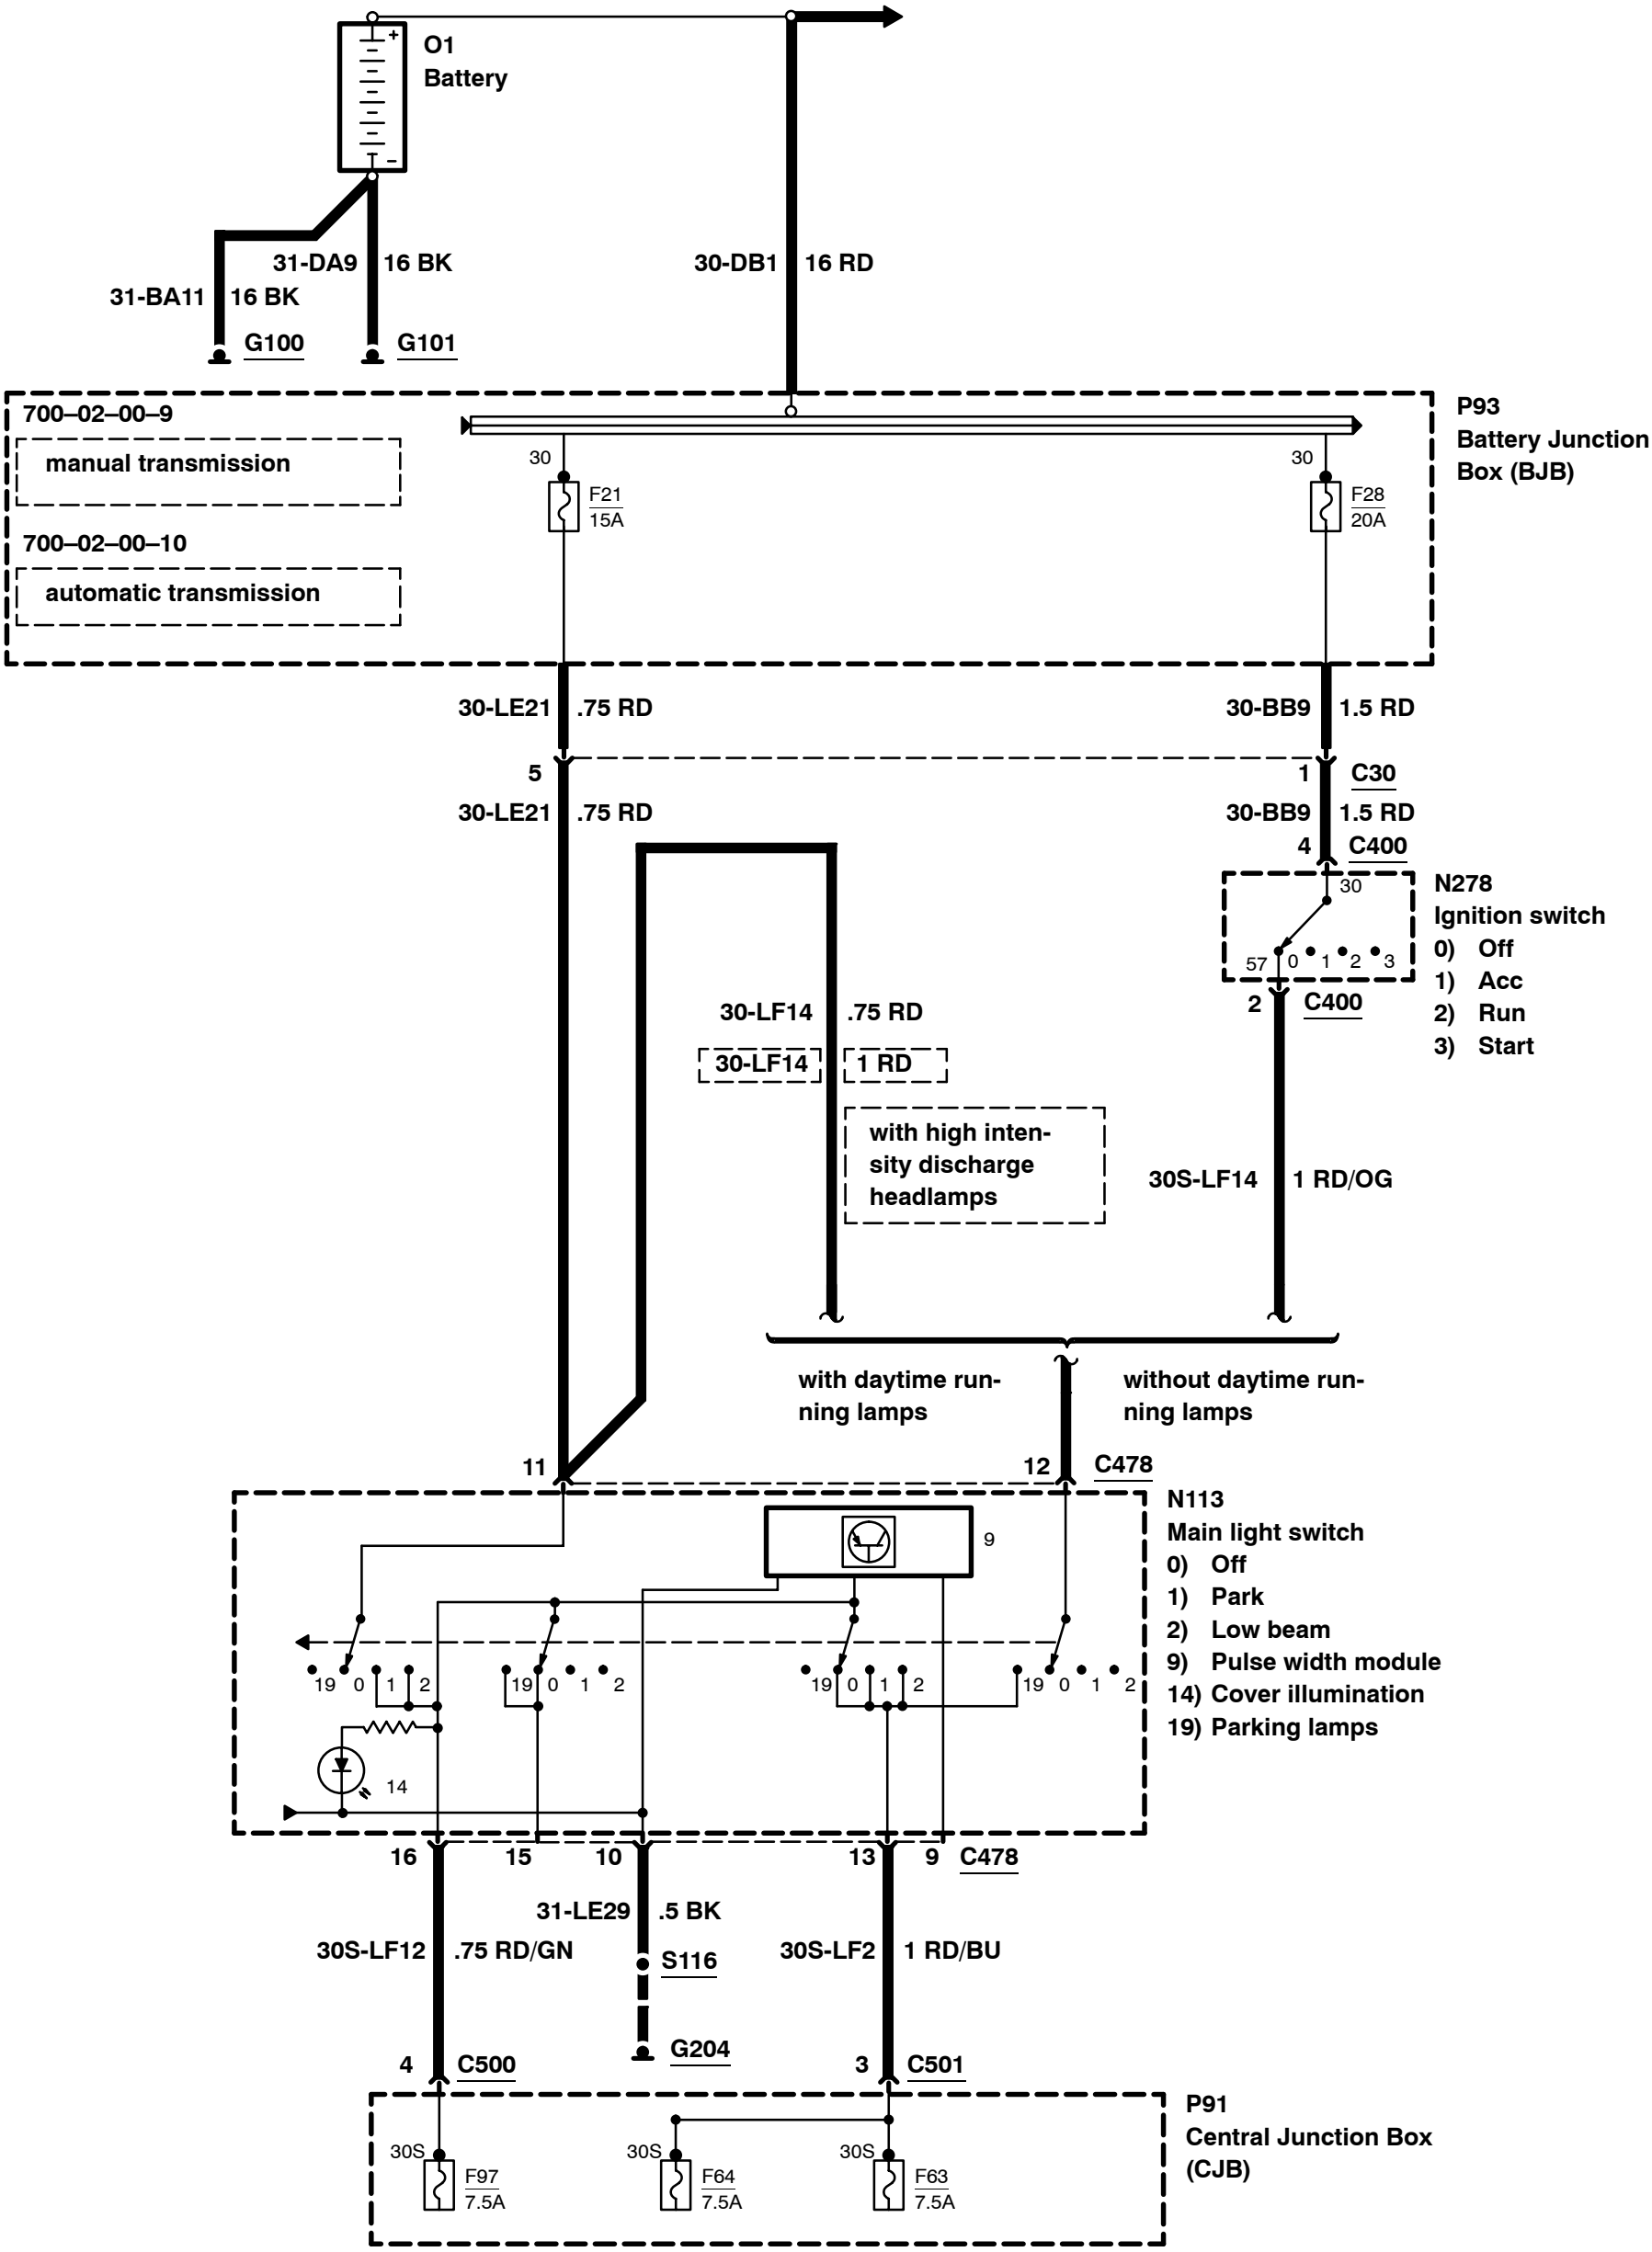


Power Distribution – Light switch, with autolamps

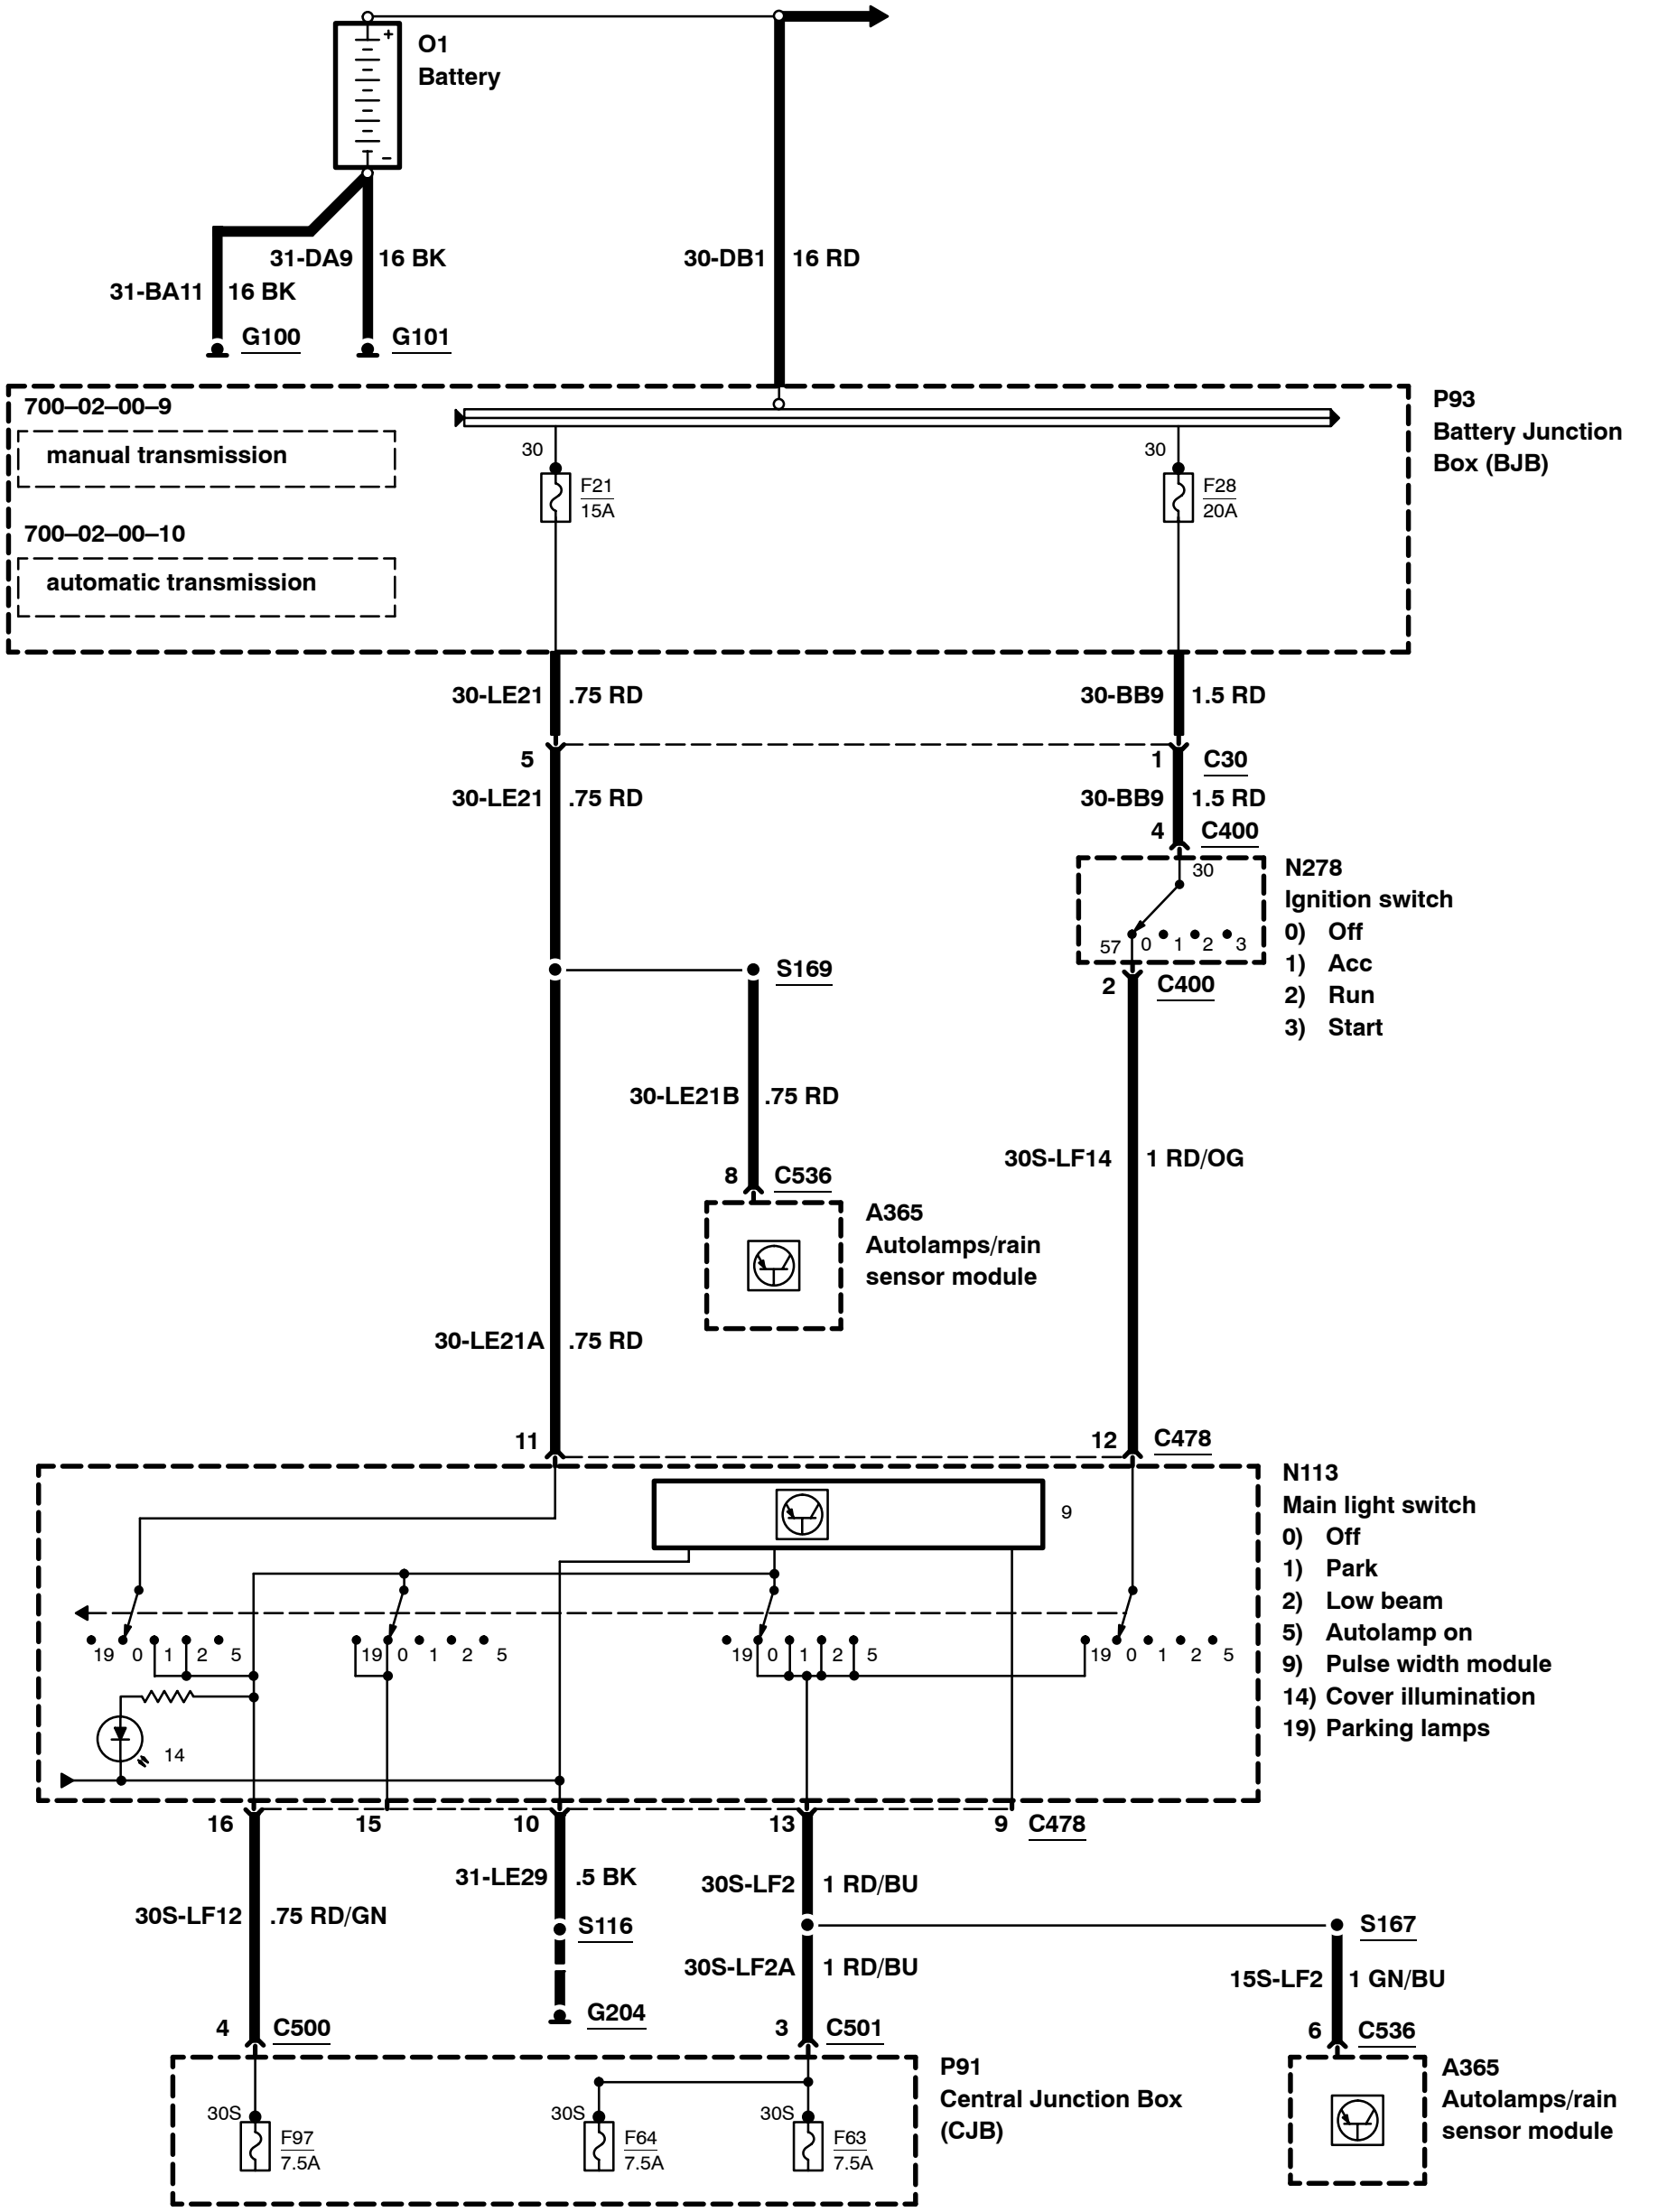


Power Distribution – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model

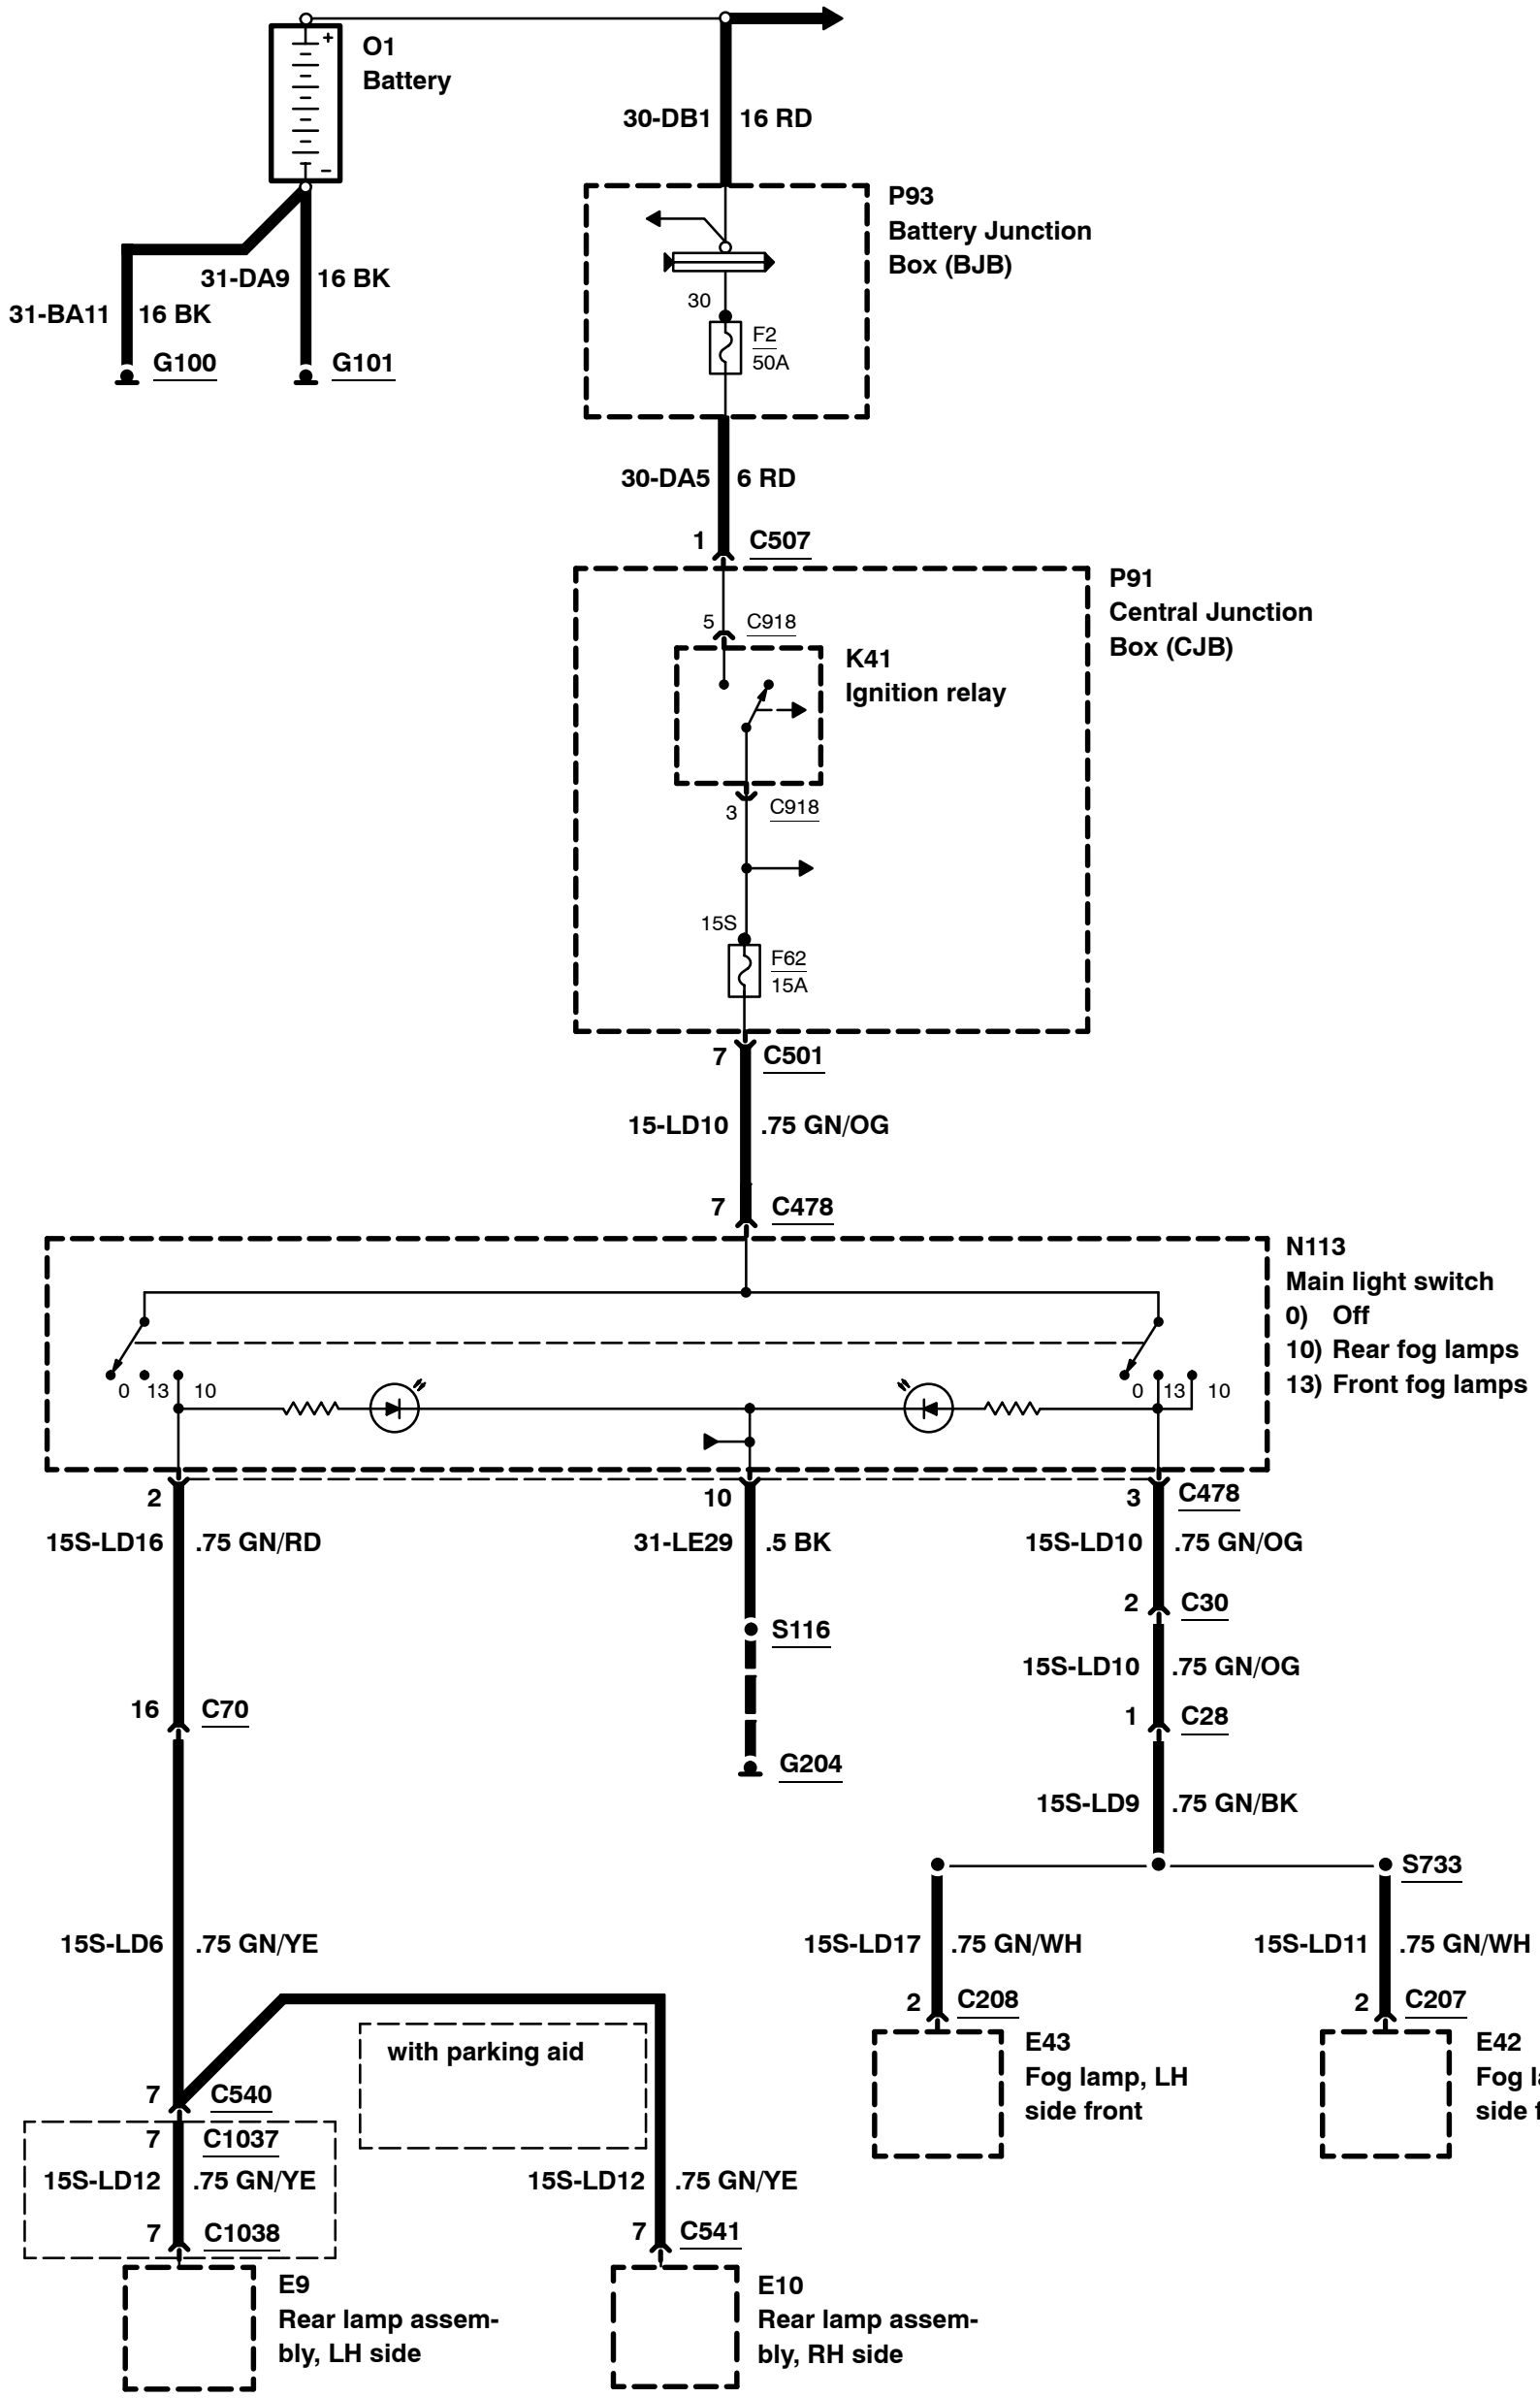


Power Distribution – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model

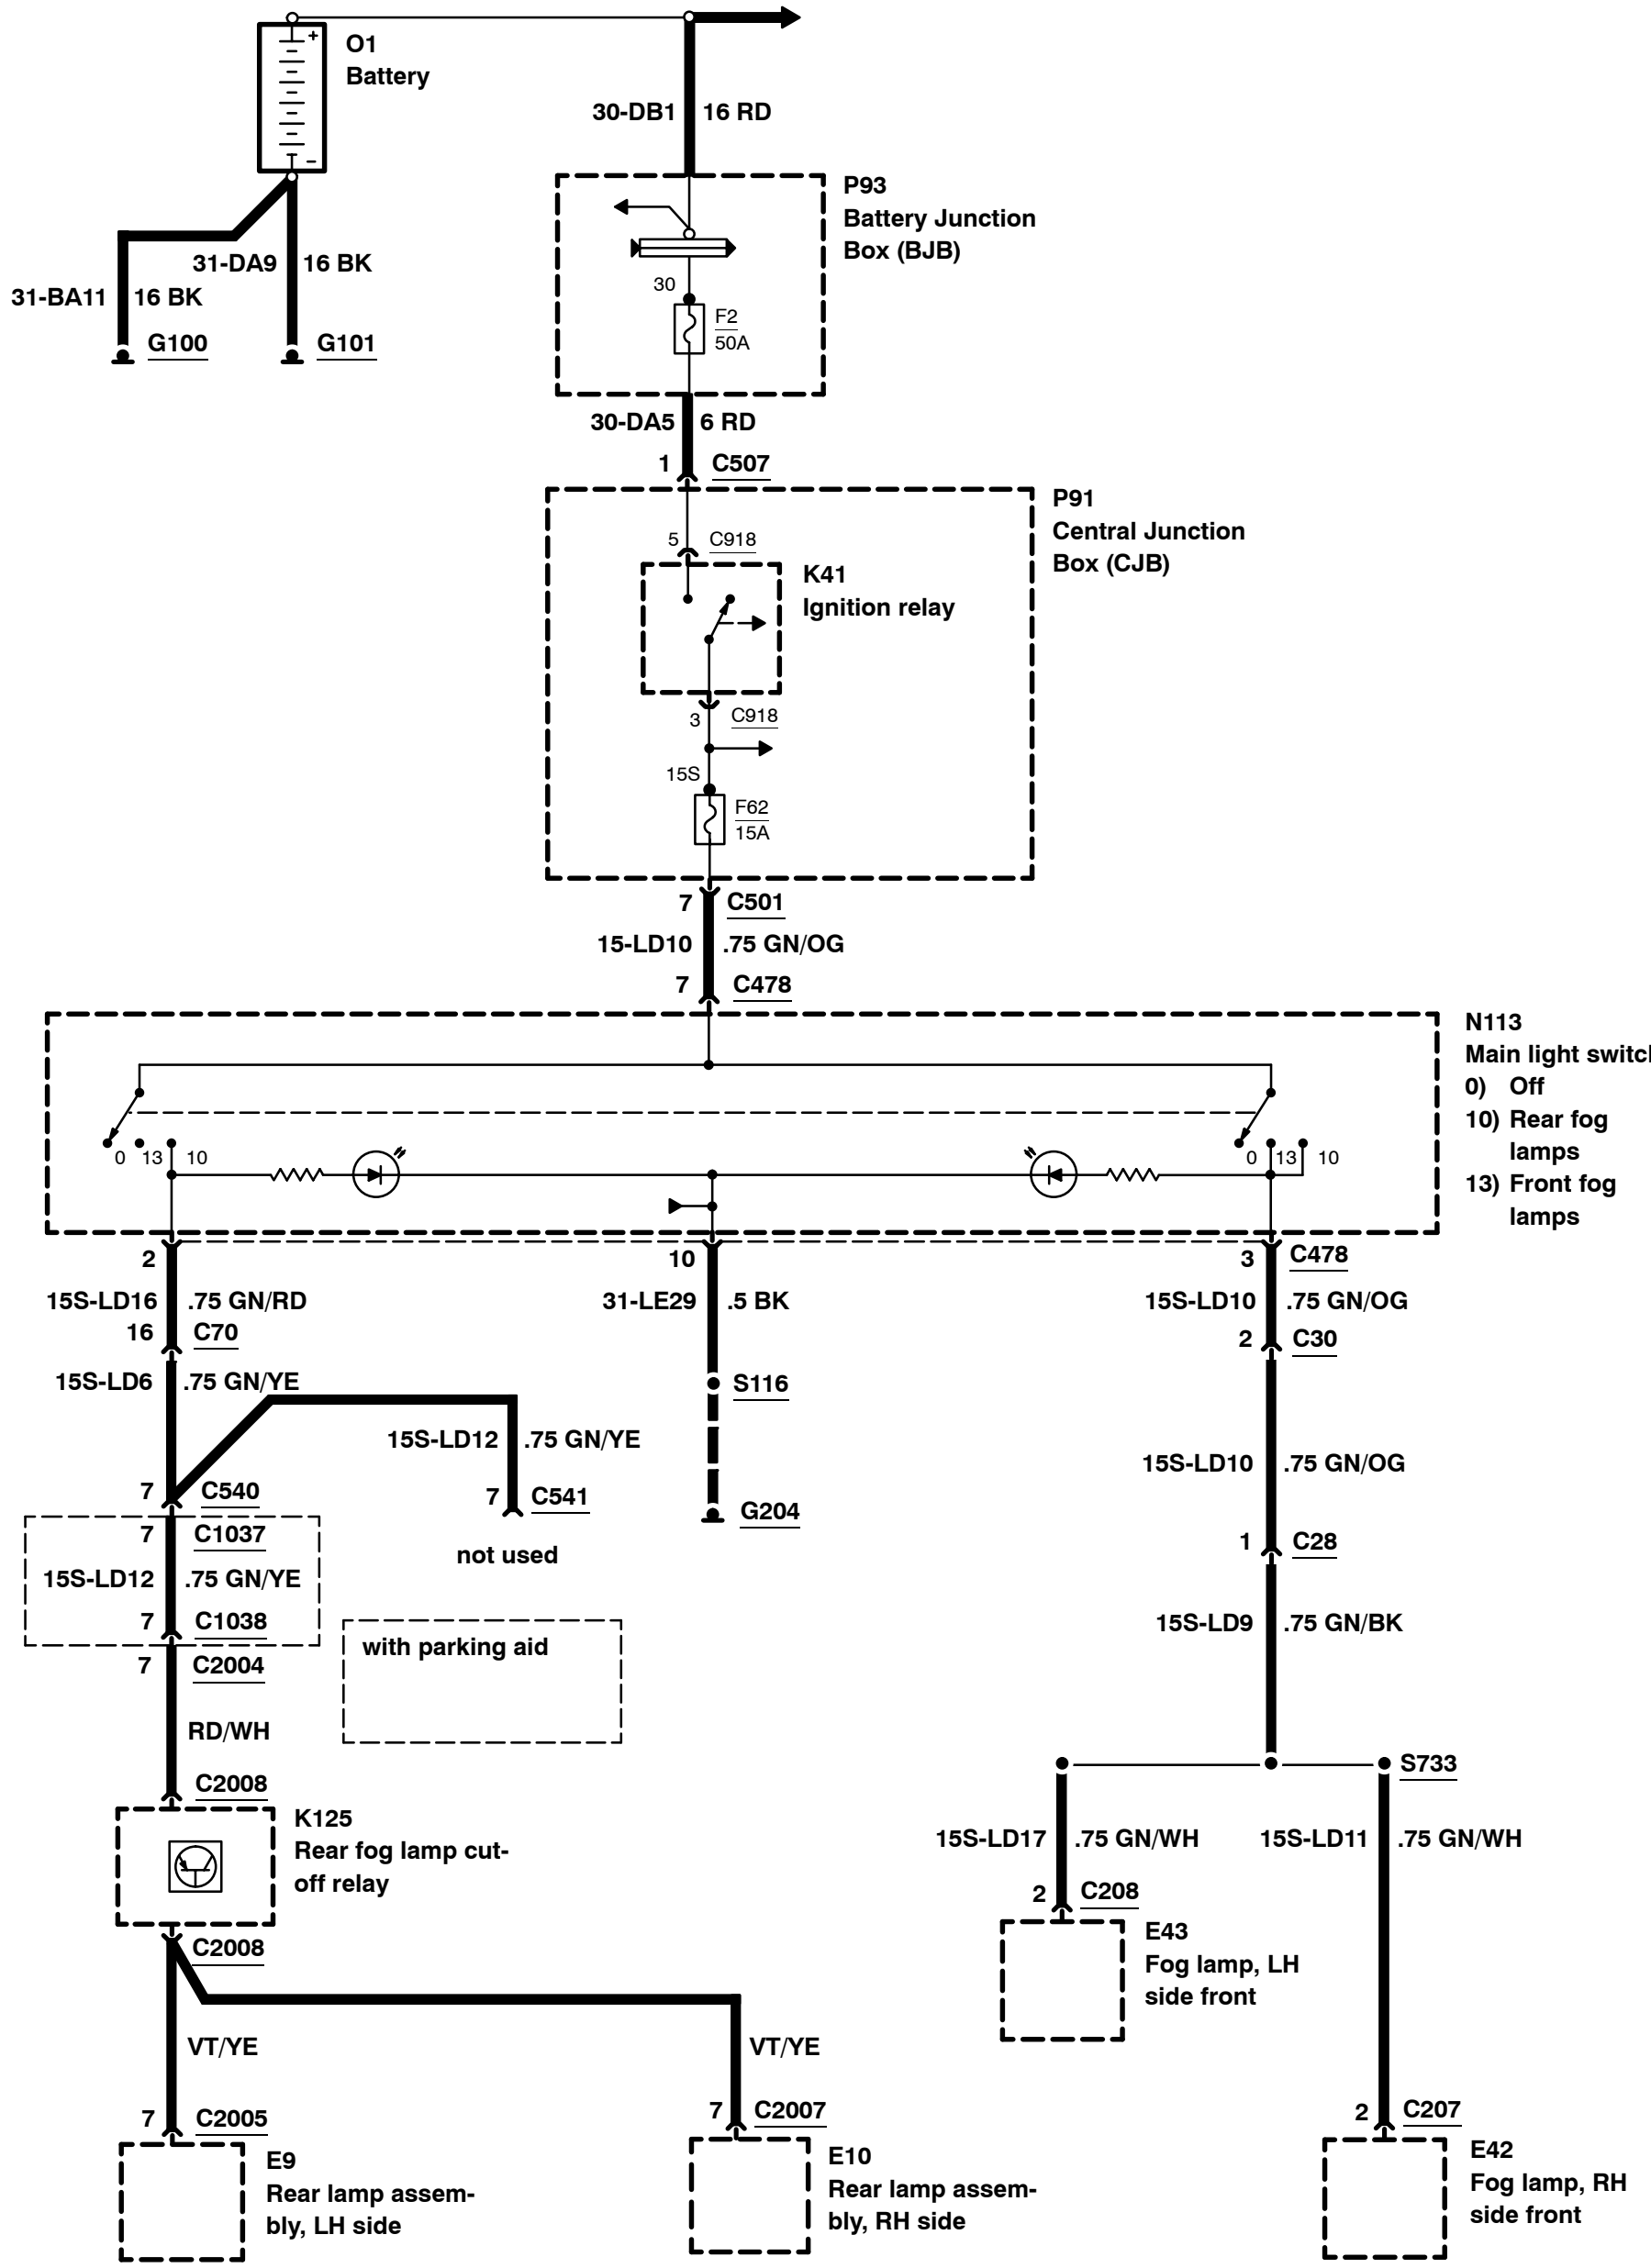


Power Distribution – Light switch, Fog lamps, without trailer socket, wagon

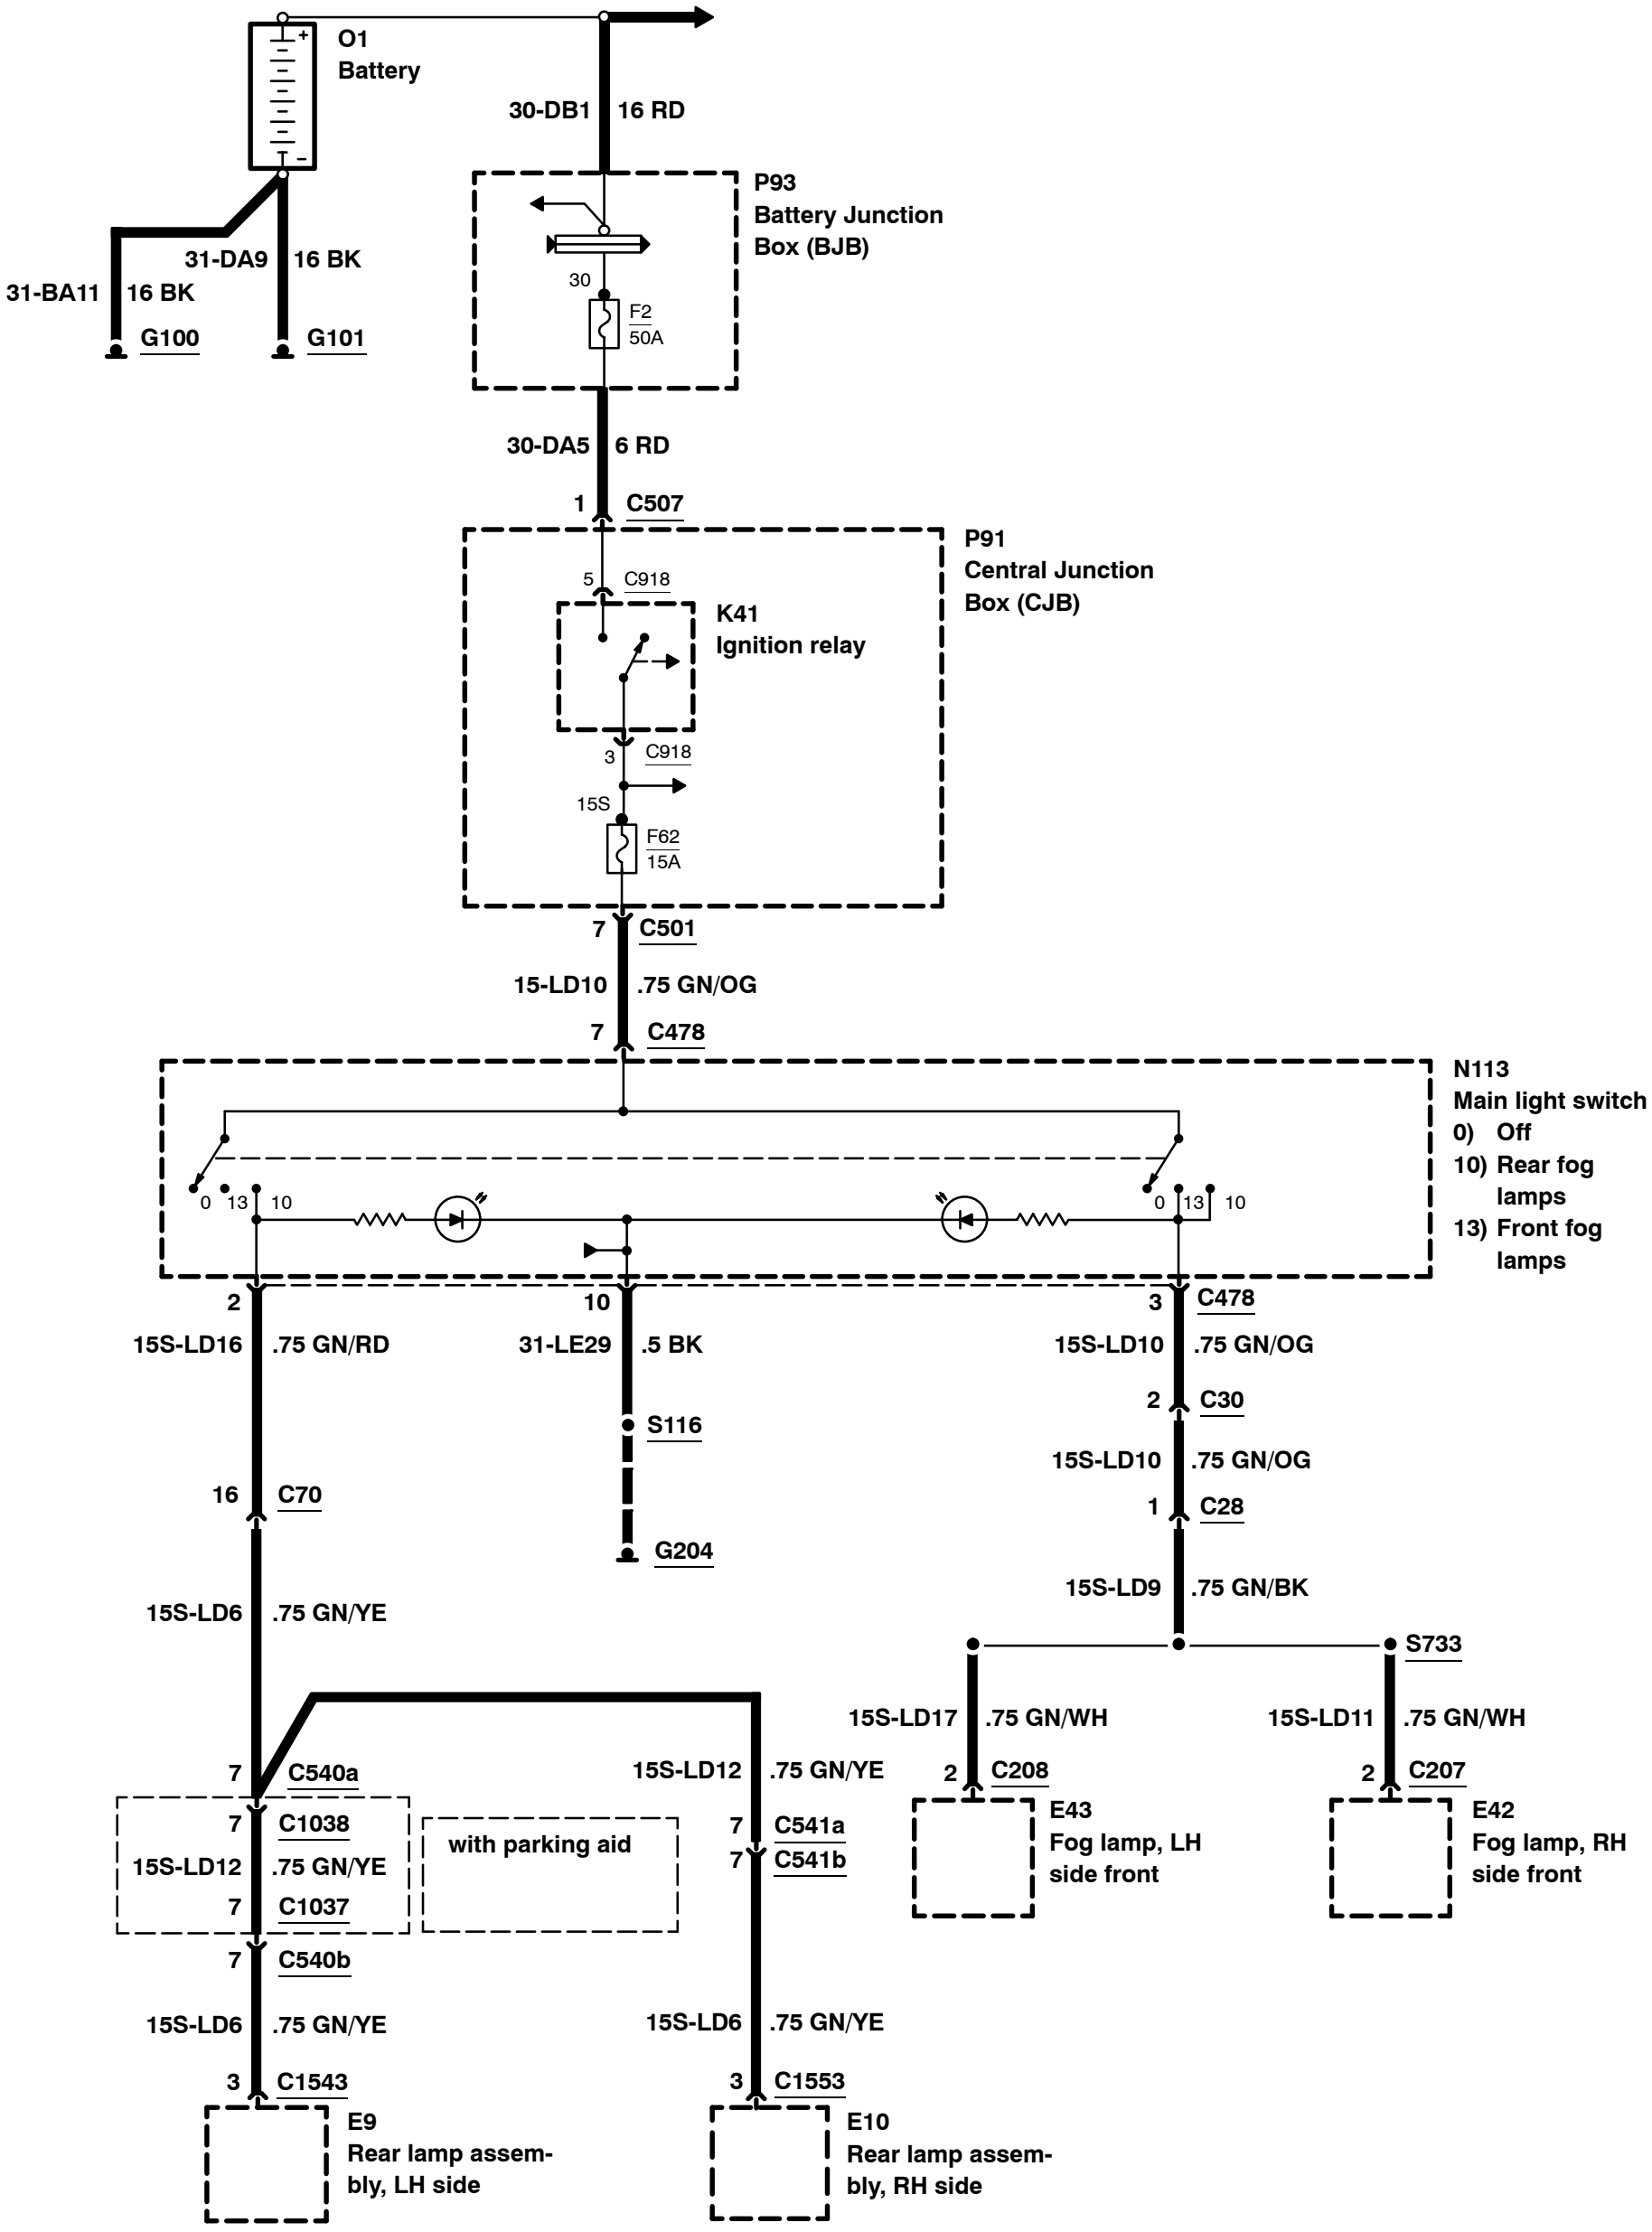


Power Distribution – Light switch, Fog lamps, with trailer socket, wagon

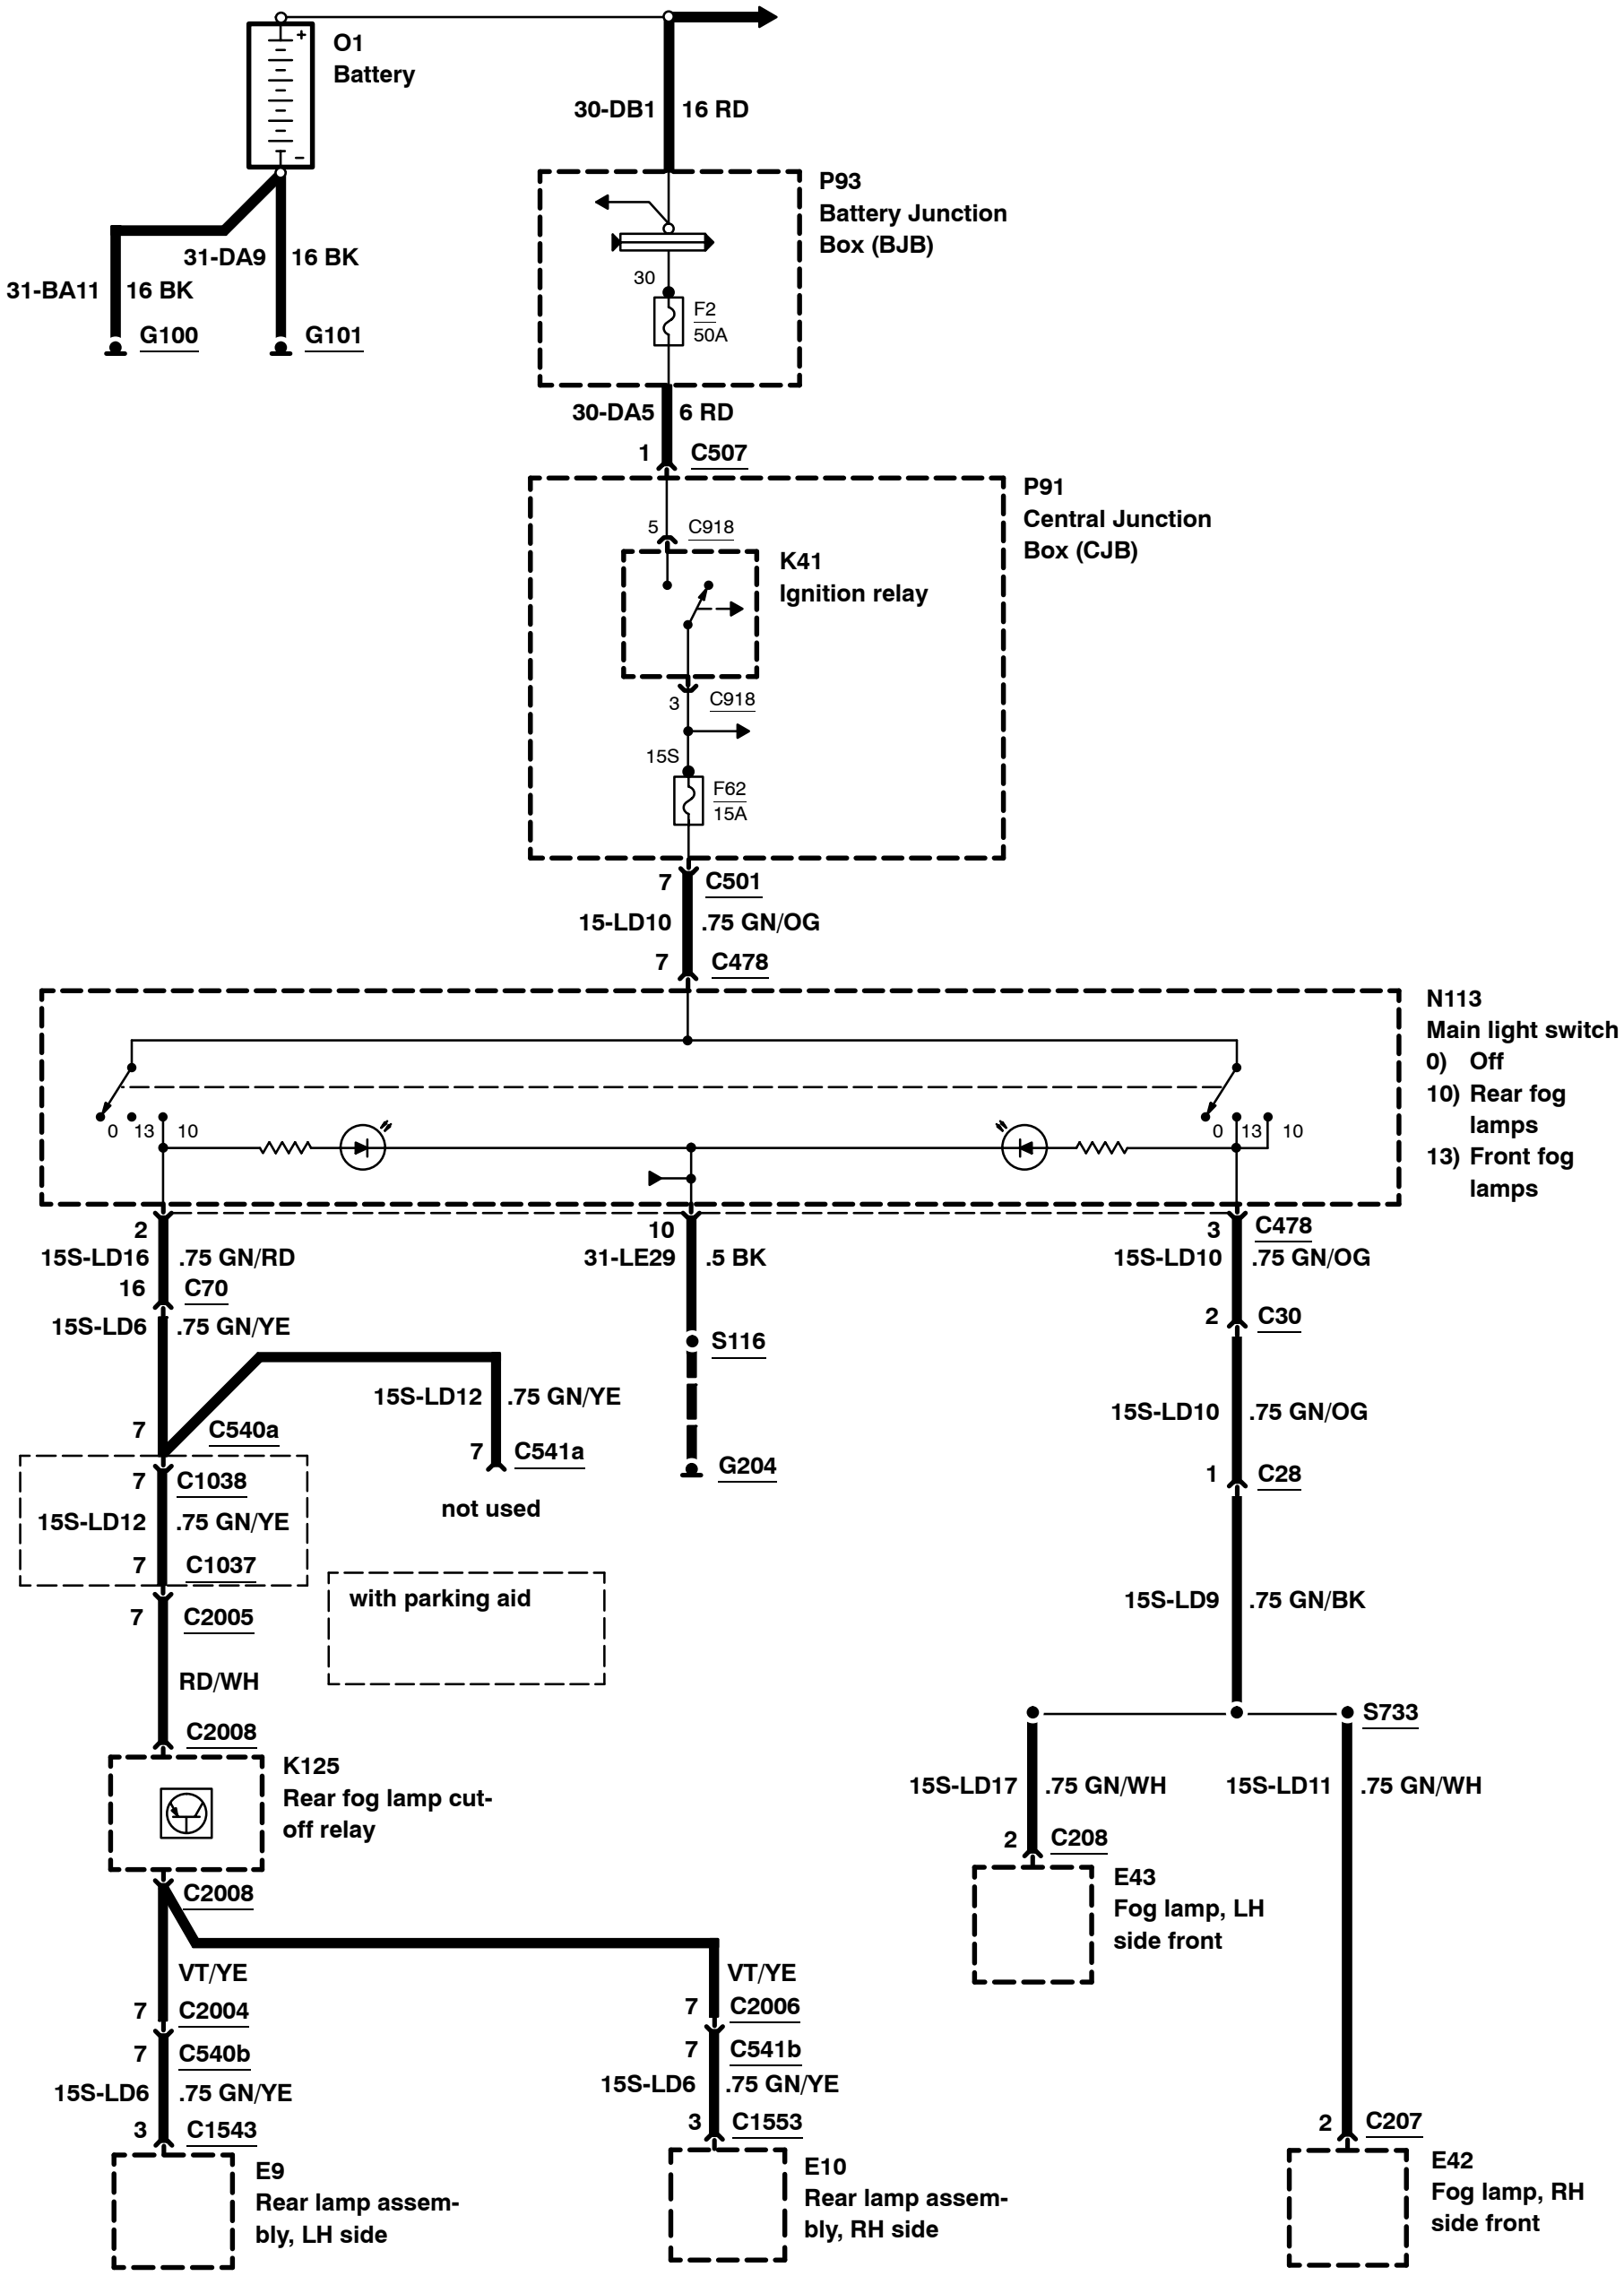


Power Distribution

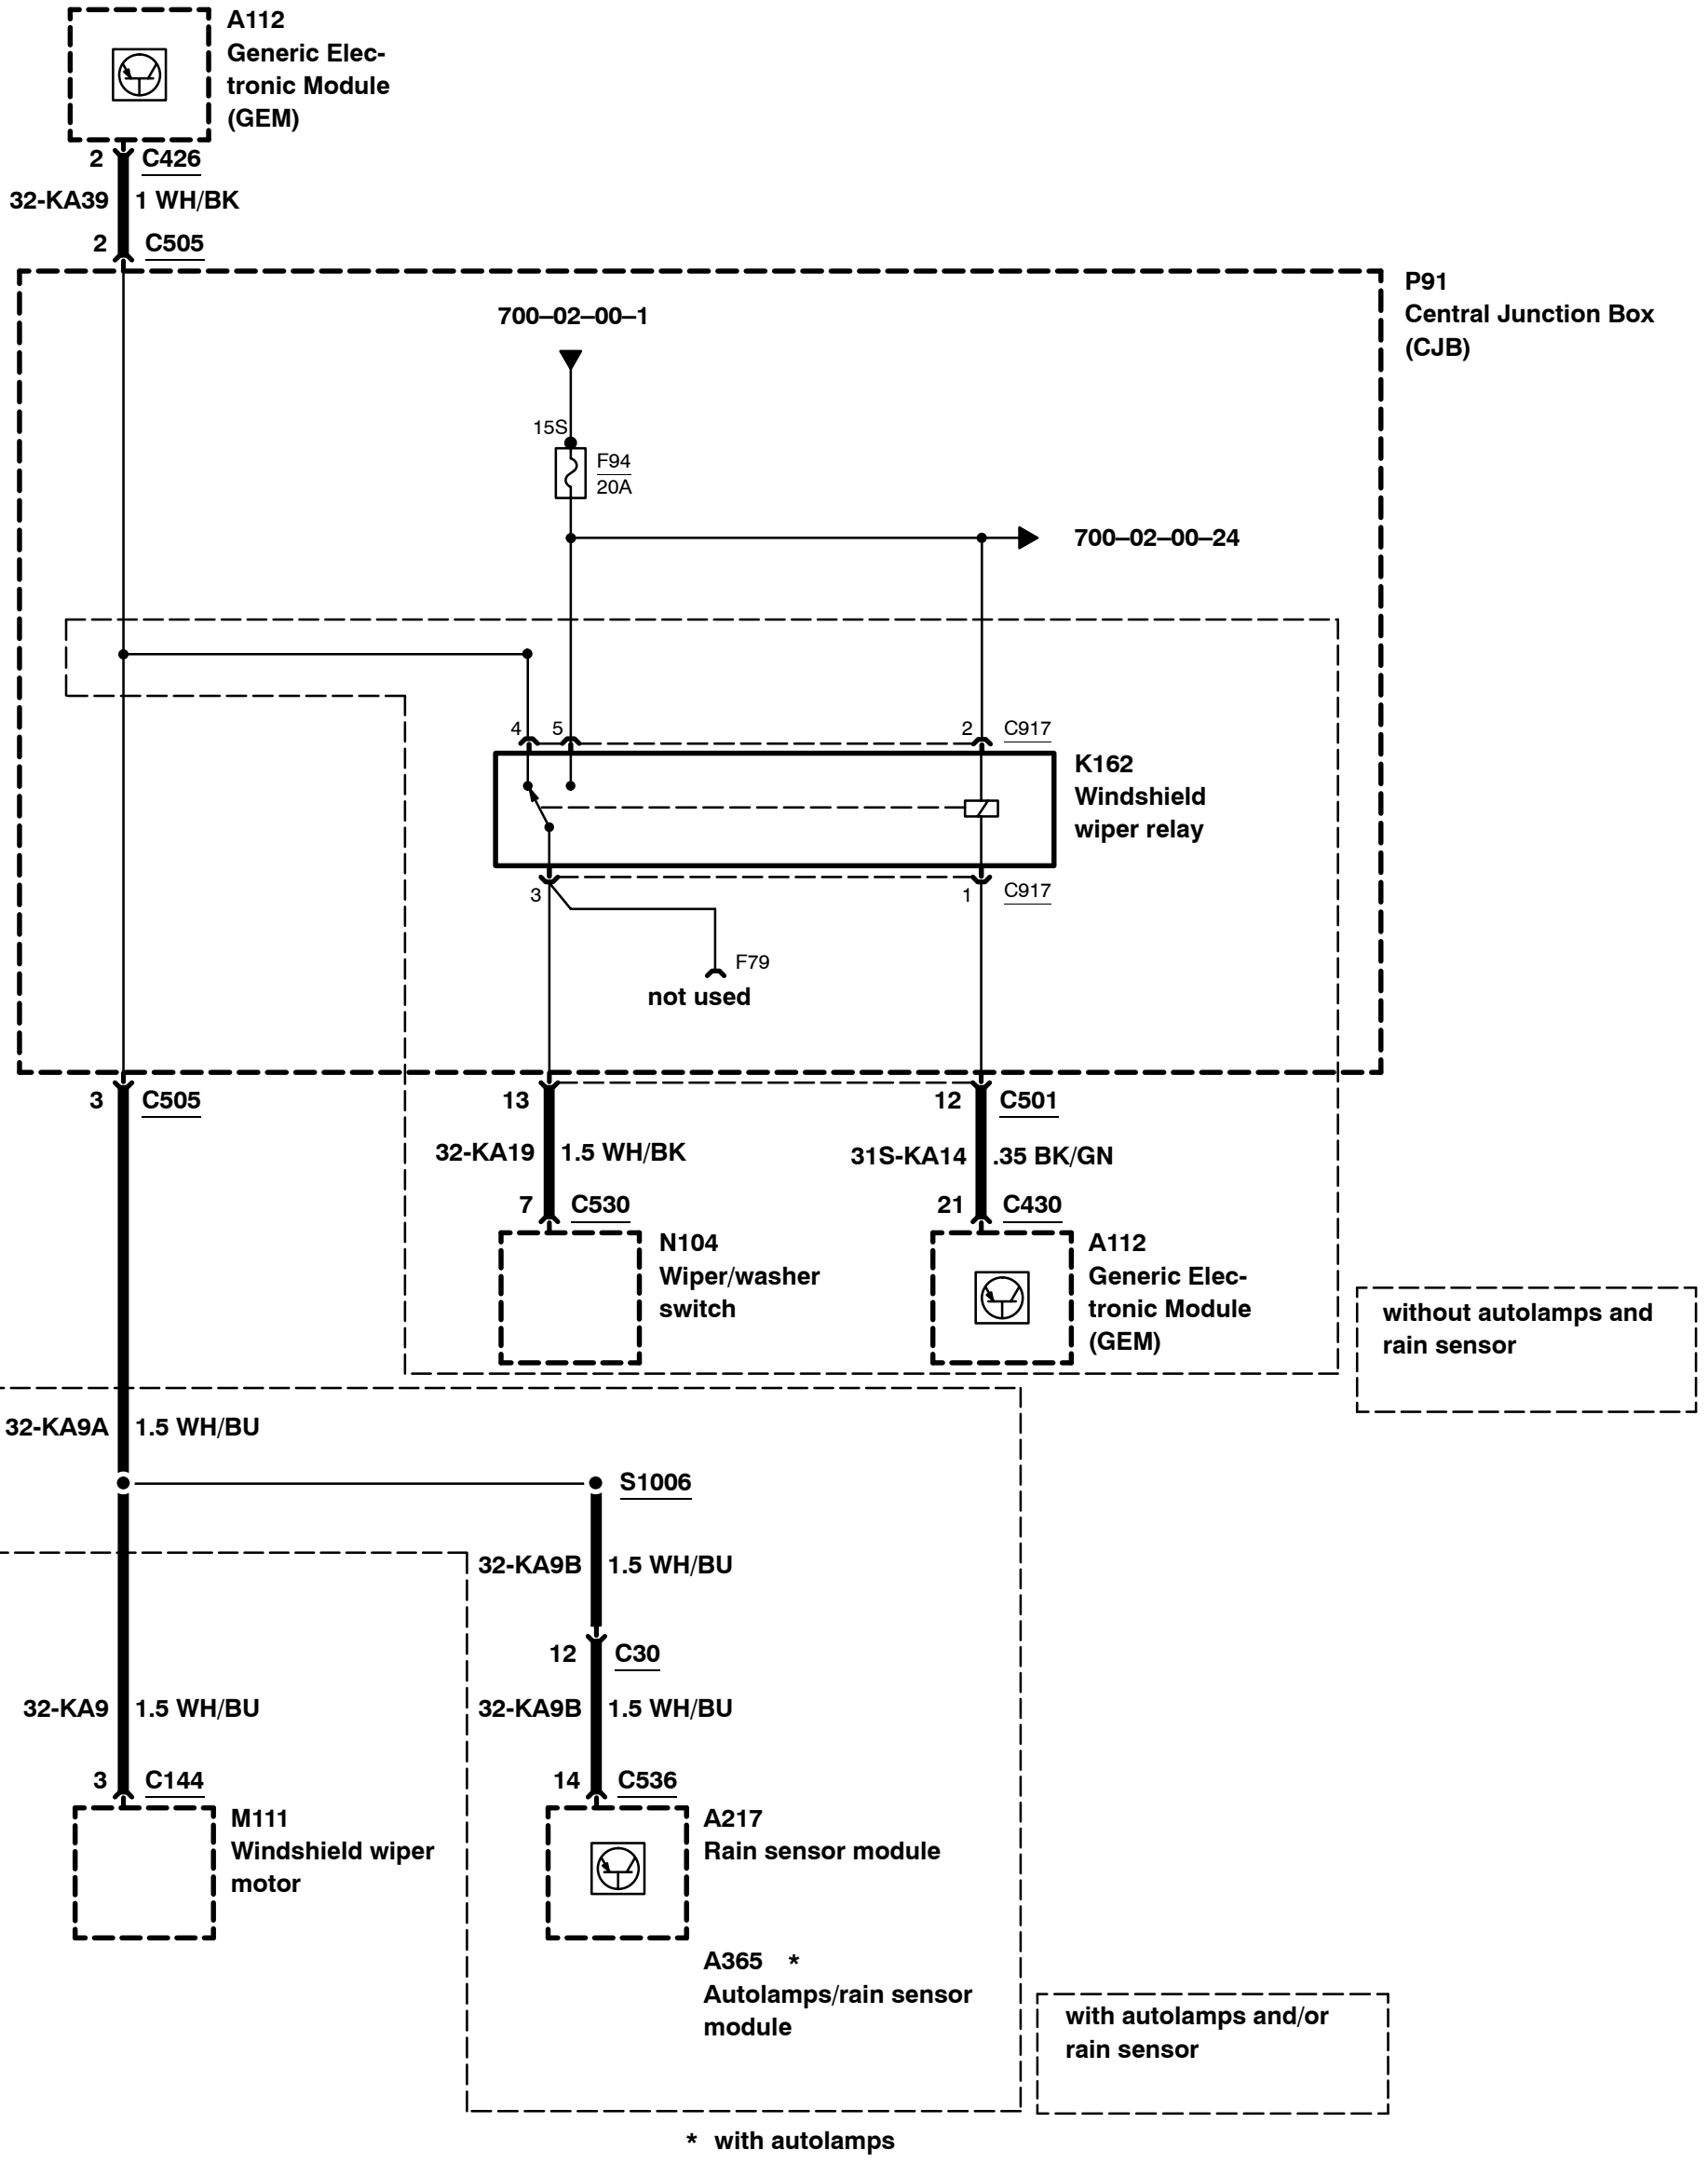


Power Distribution

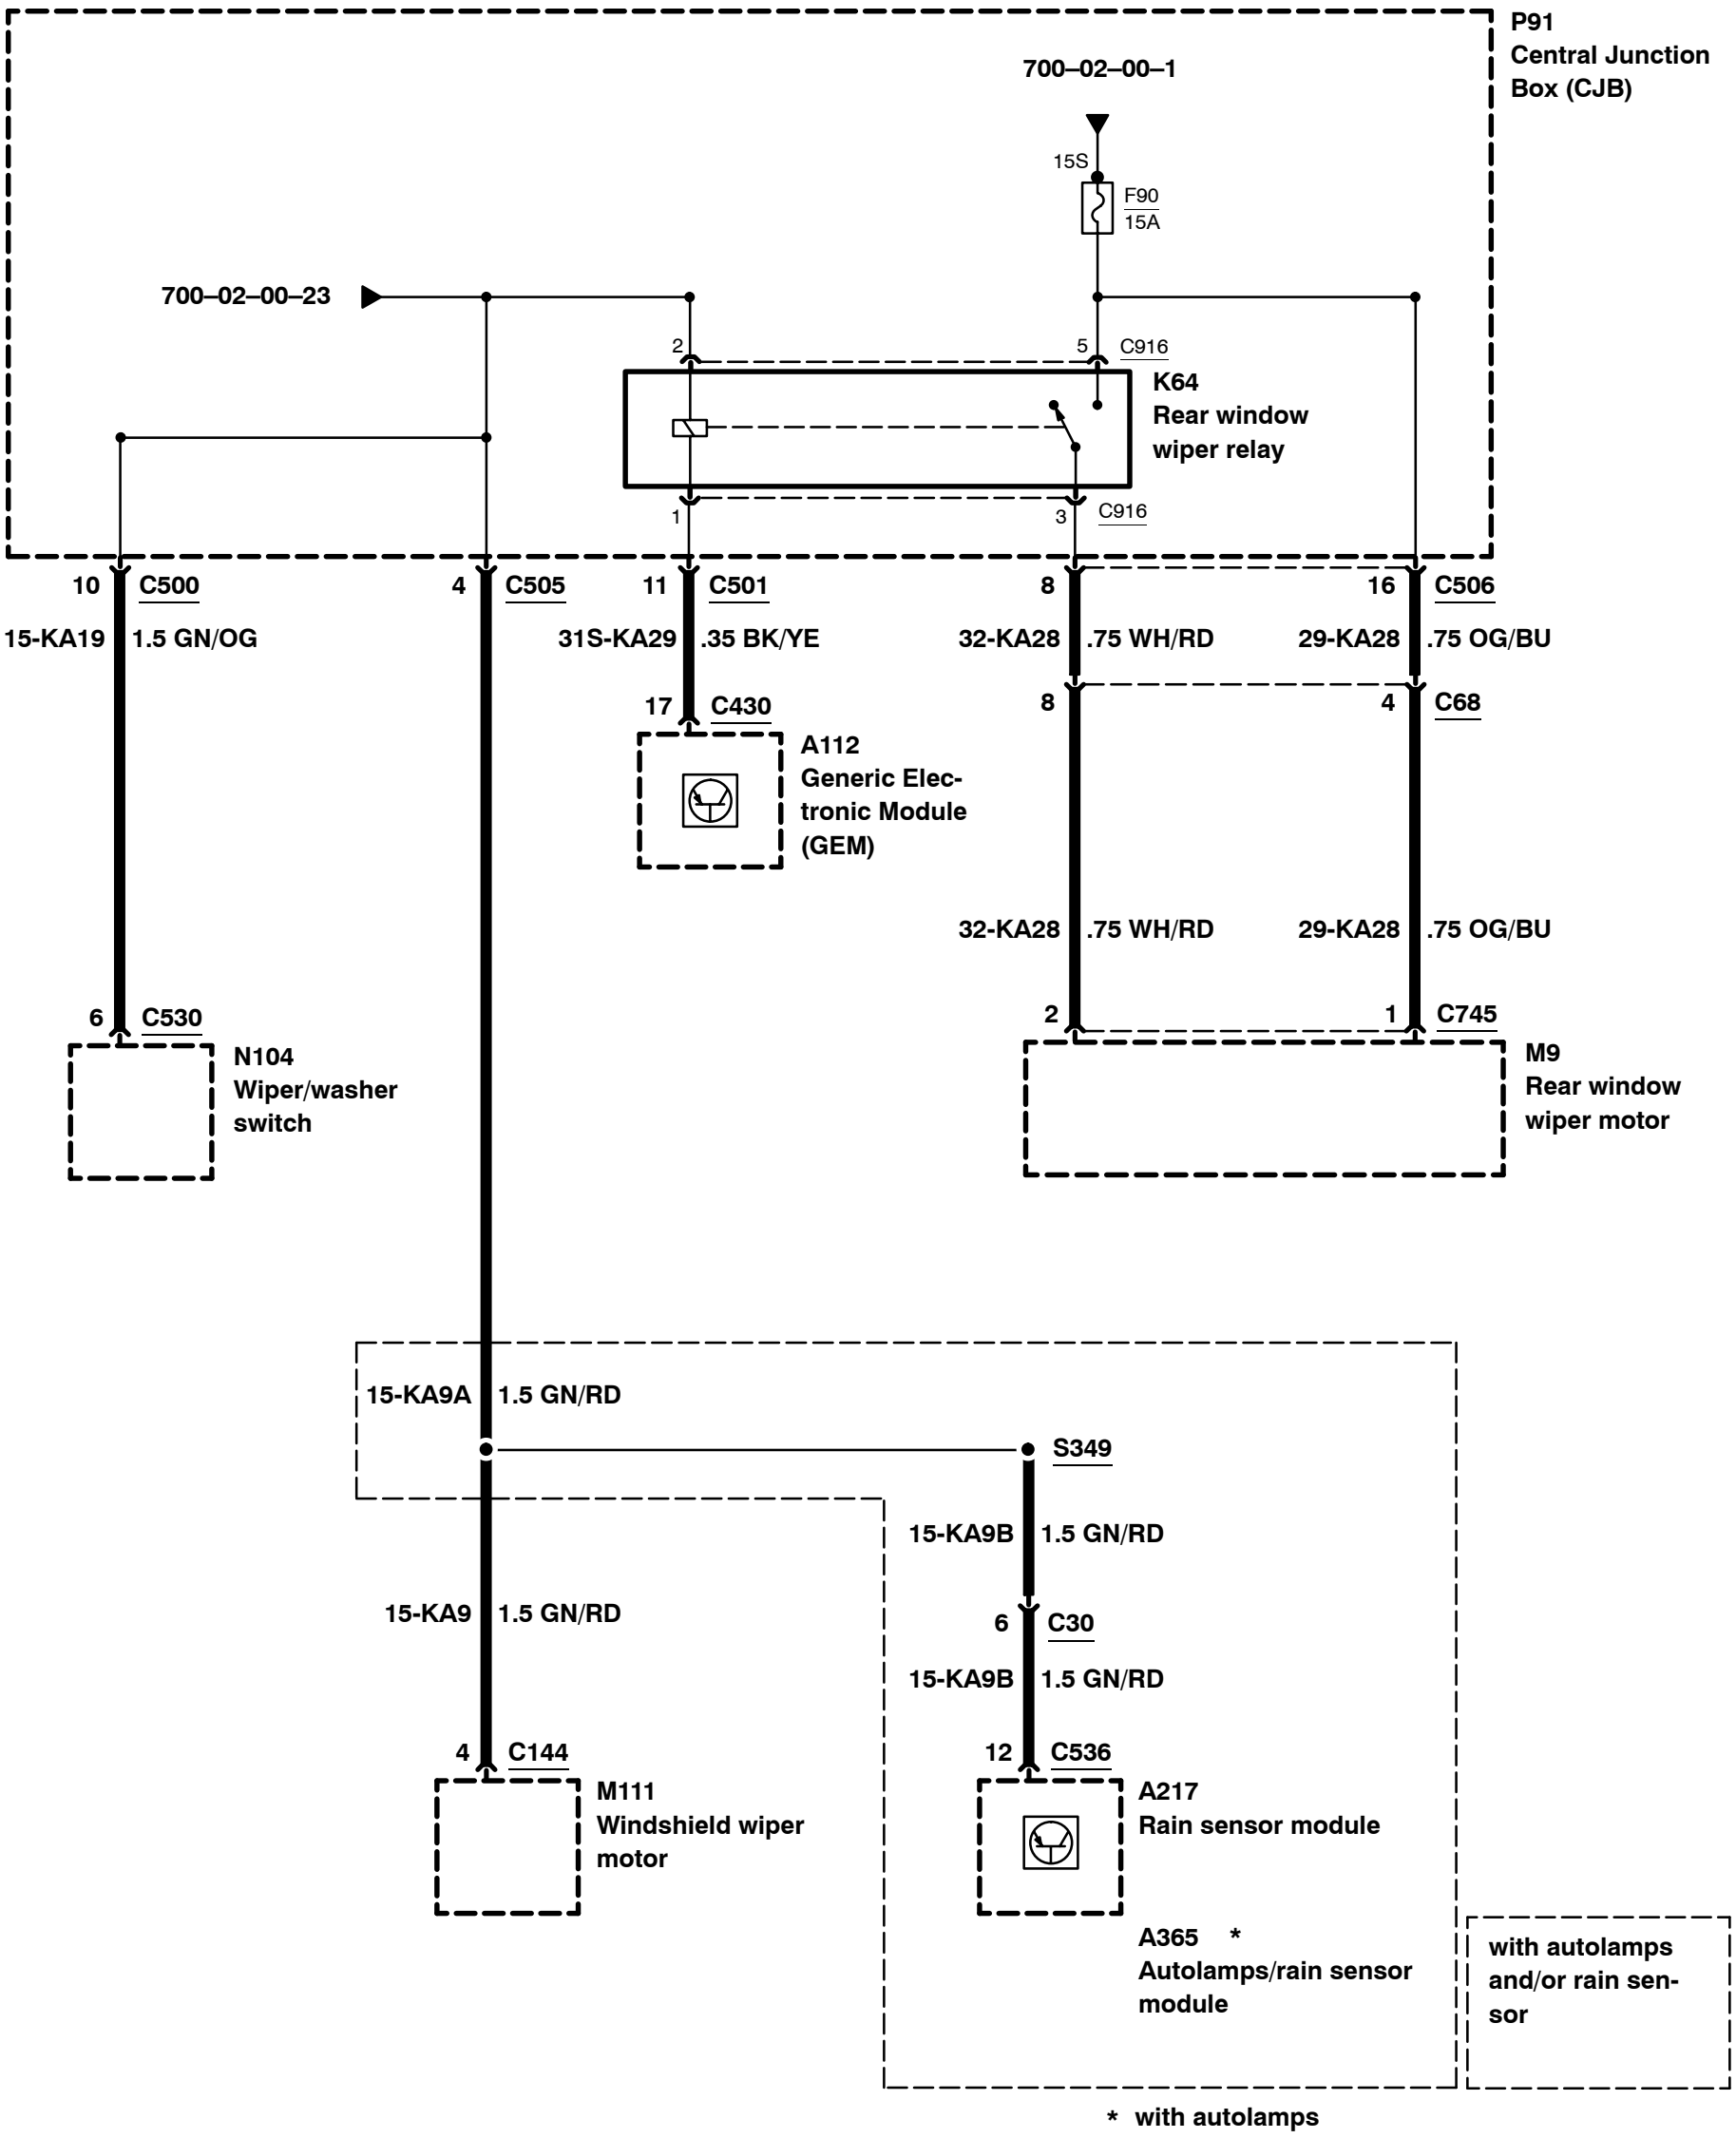


Fuse Details – F1, F2

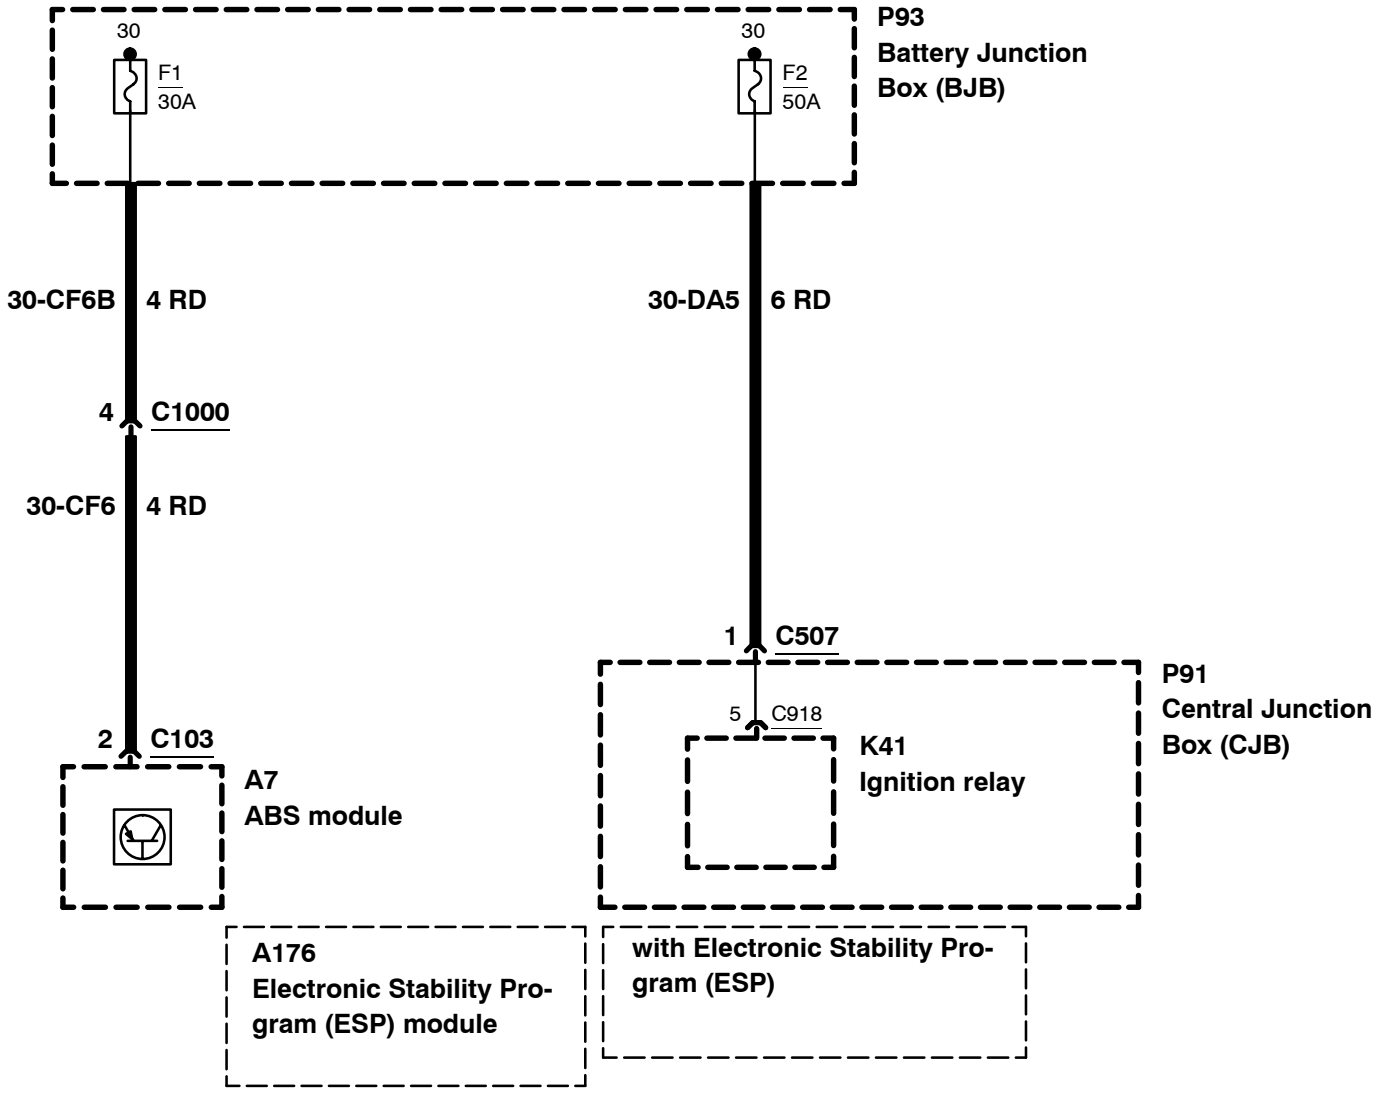


Fuse Details – F3, before 12/2003

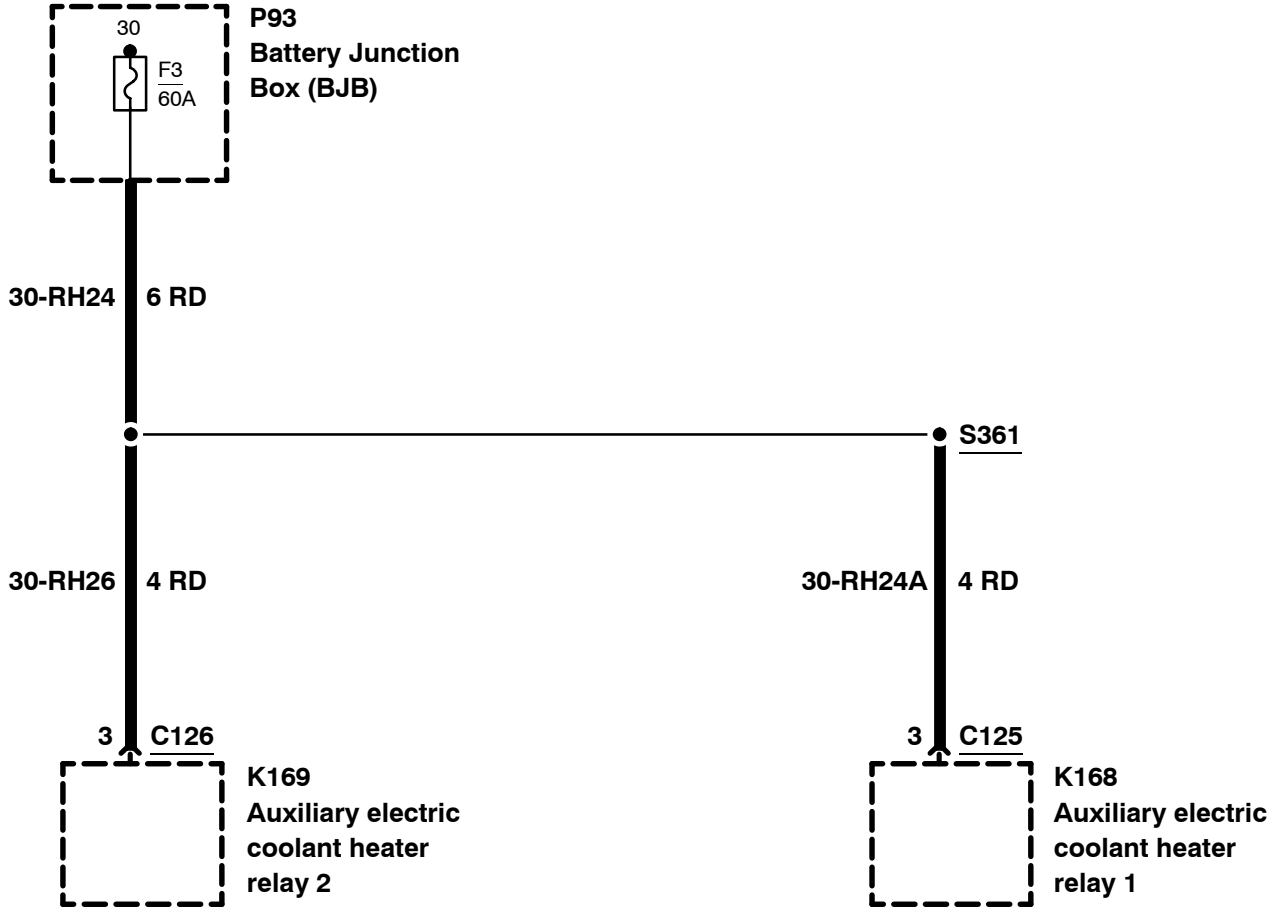


Fuse Details – F4, F5, F6

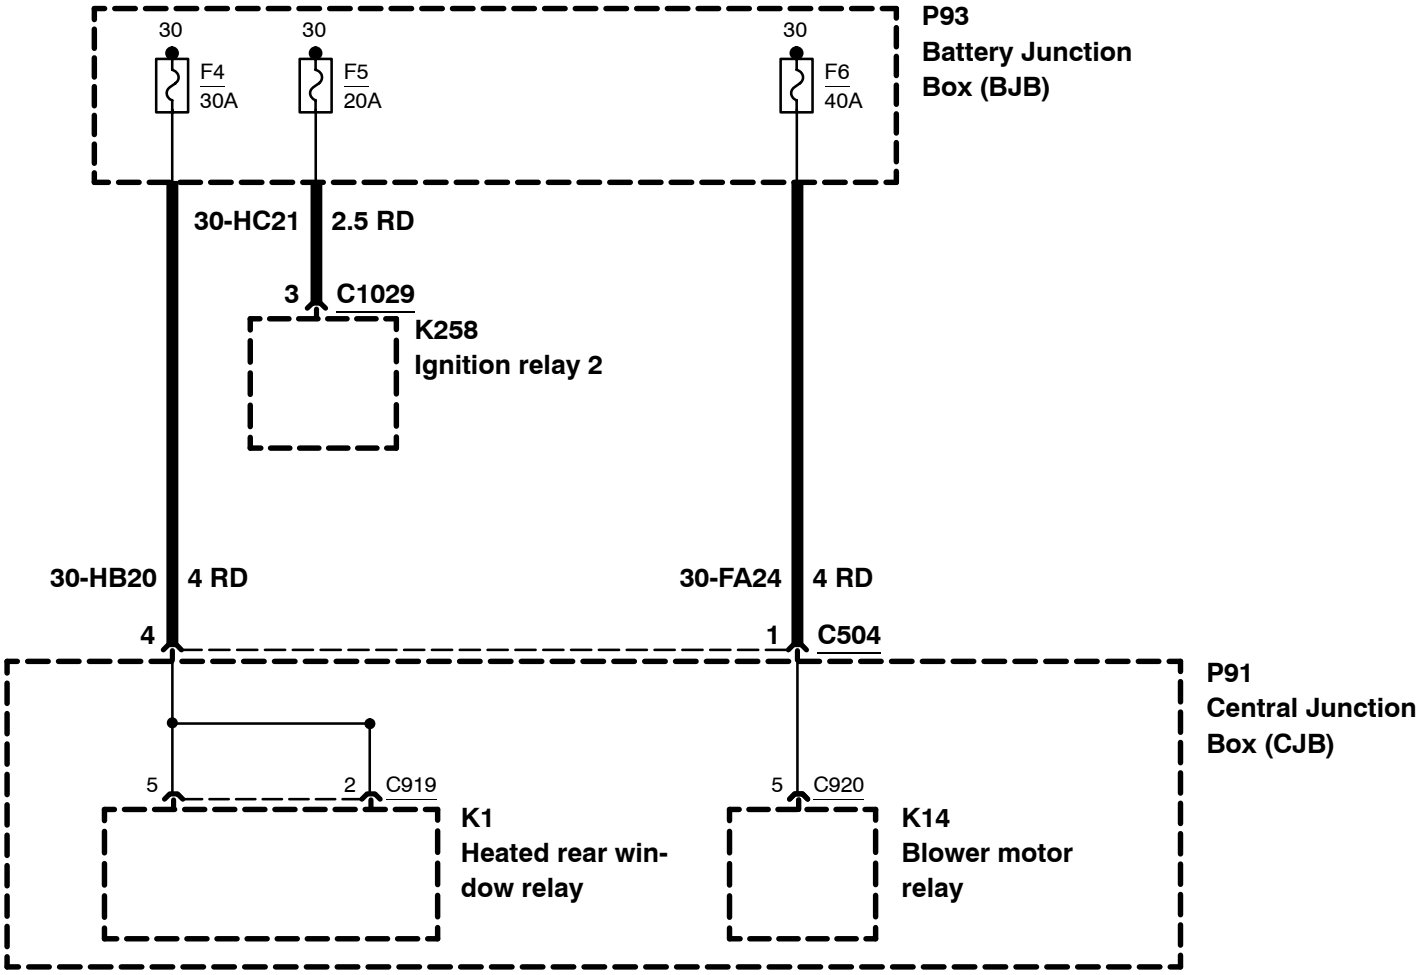


Fuse Details – F7

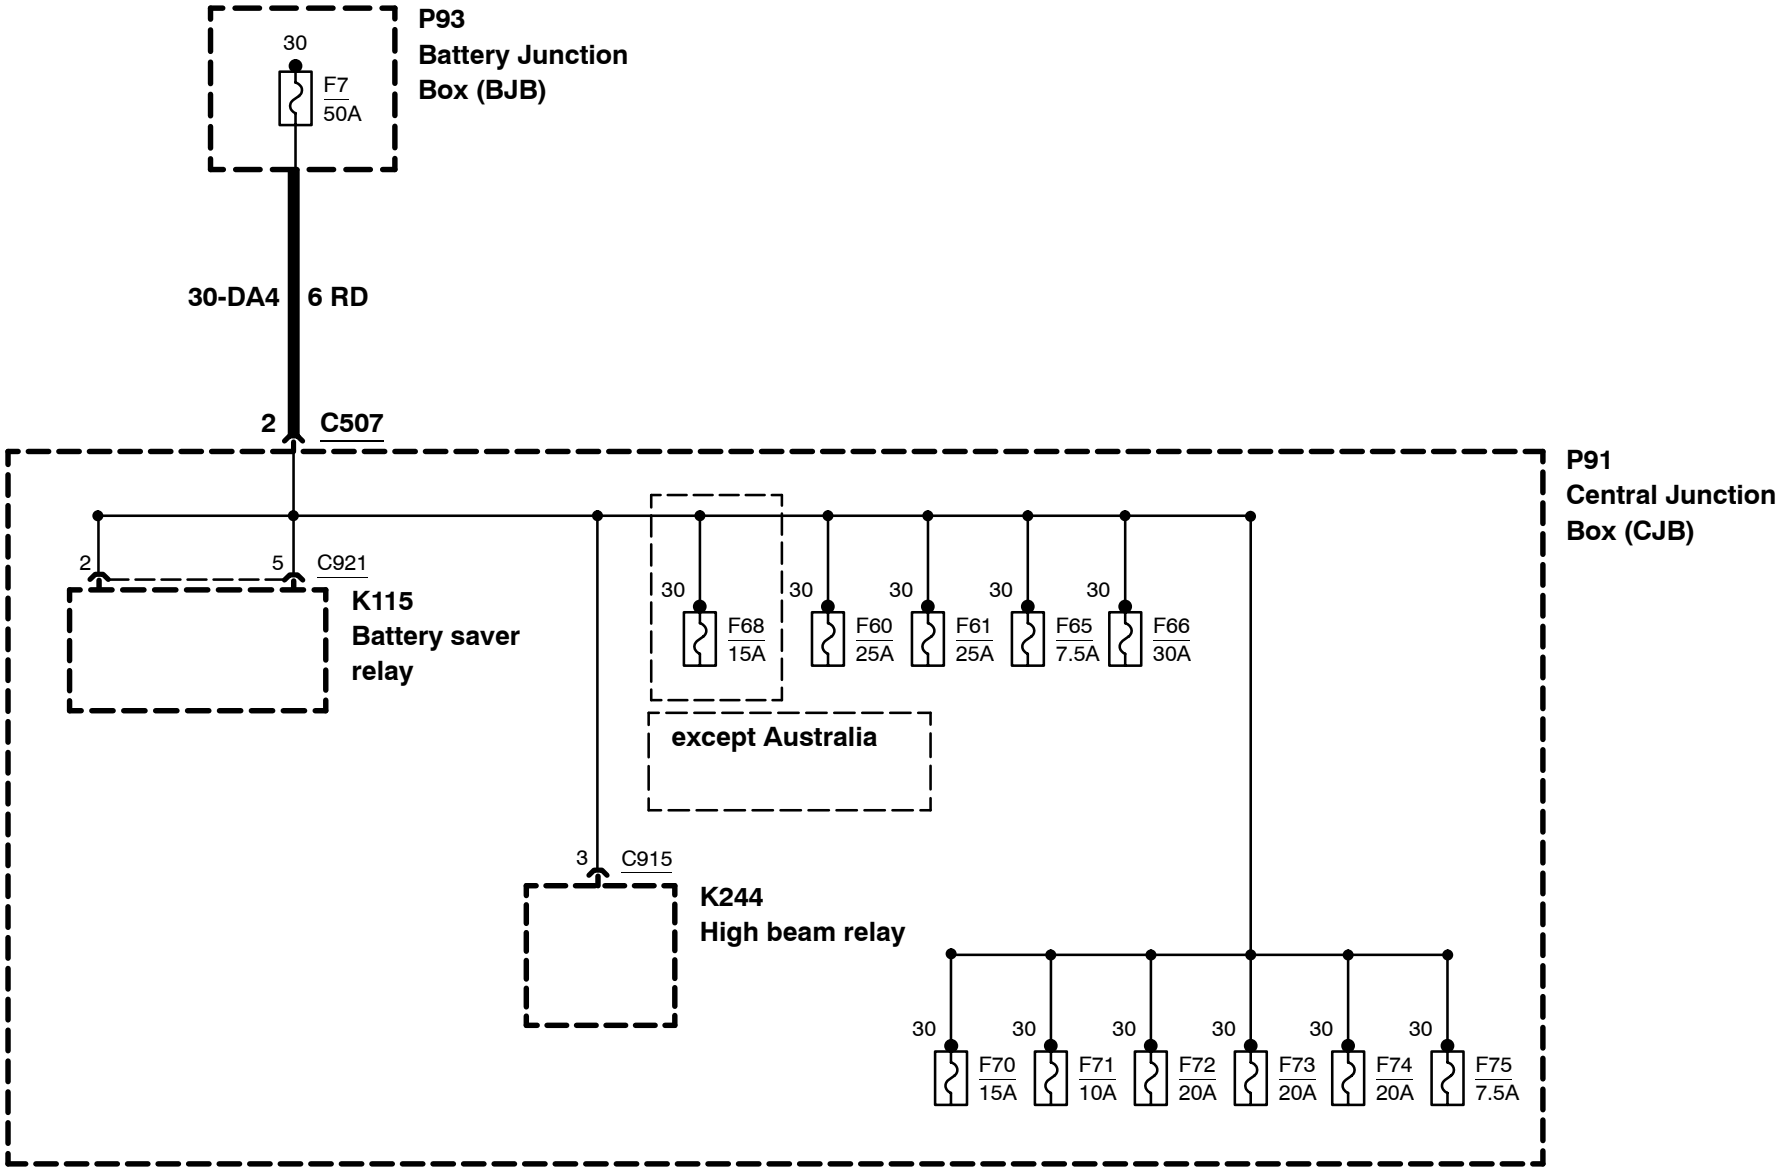


Fuse Details – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)

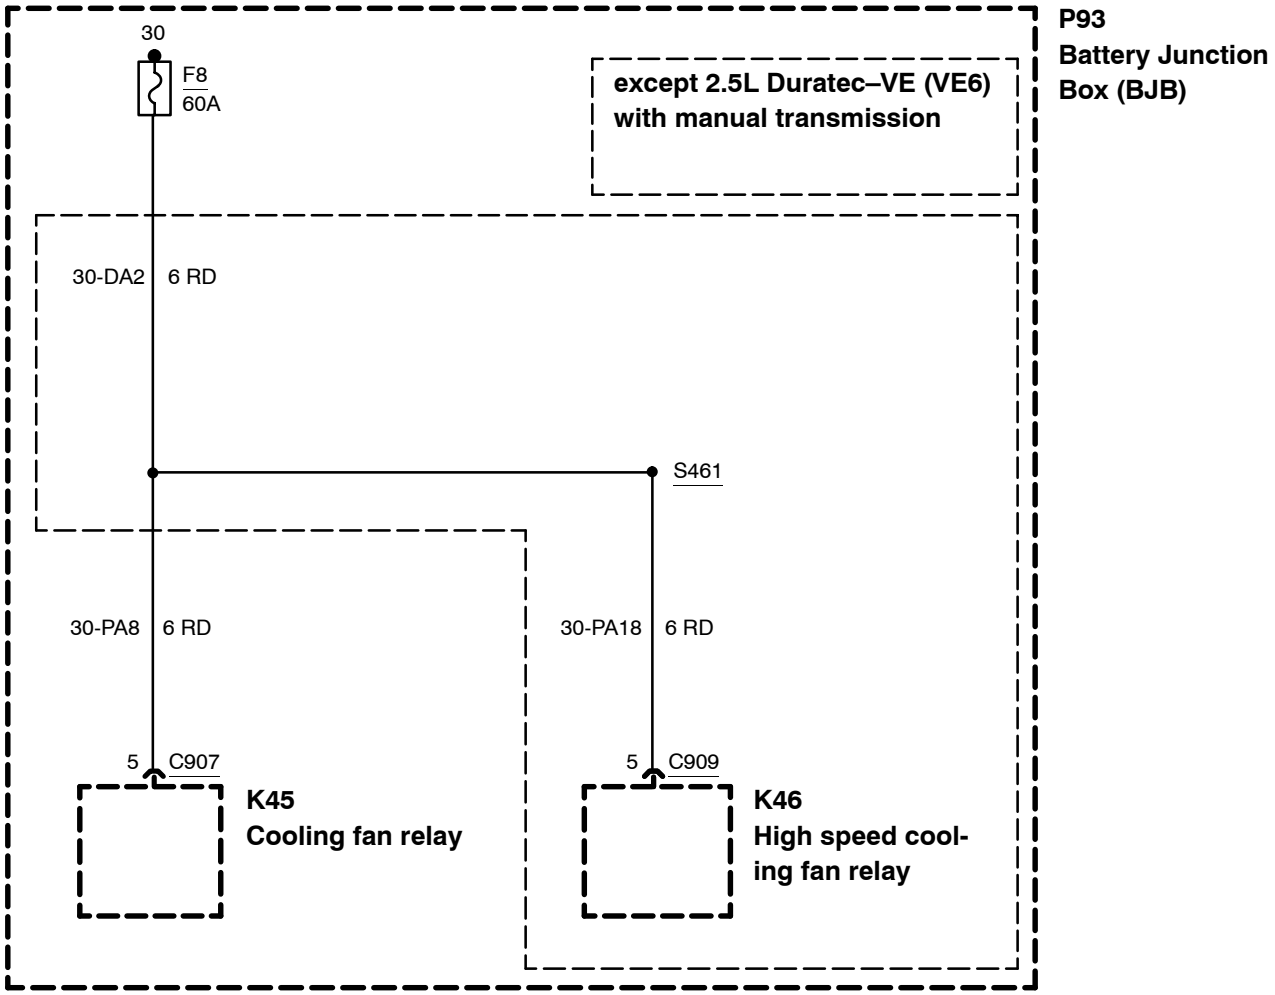


Fuse Details – F8, 3.0L Duratec–SE (VE6)

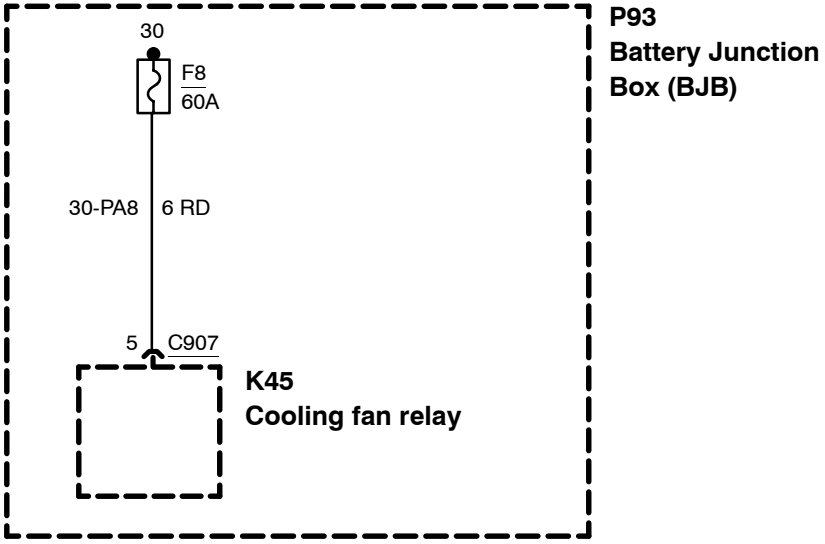


Fuse Details – F8, Diesel engines

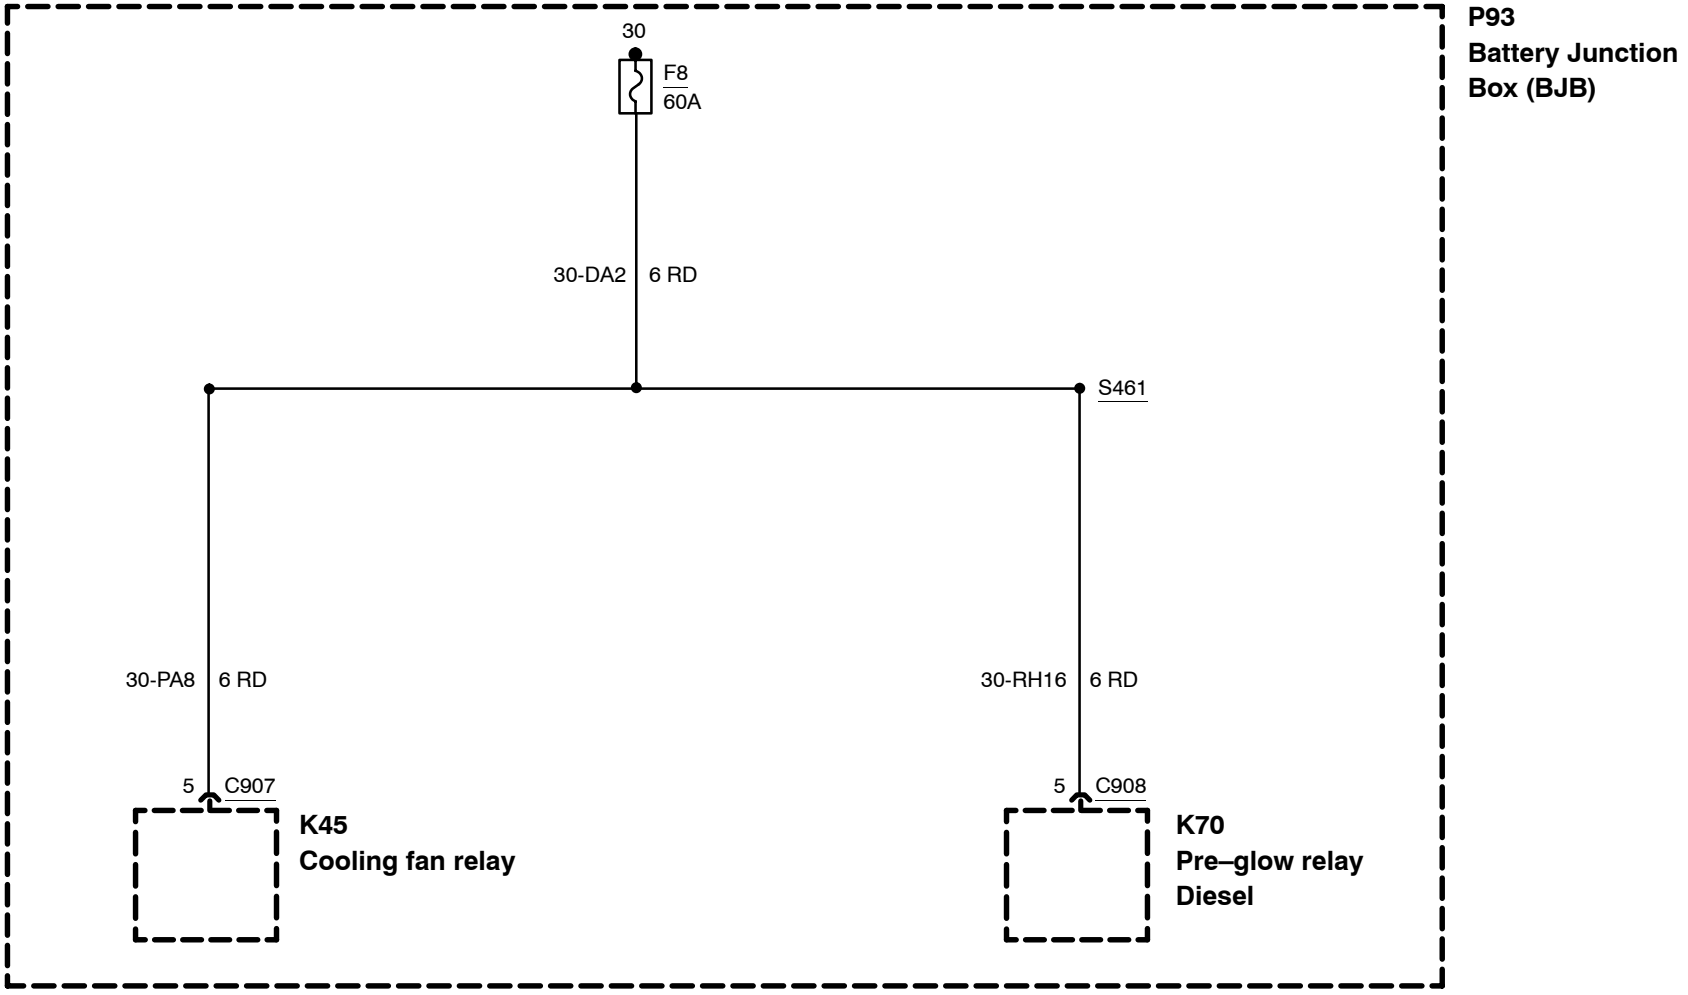


Fuse Details – F9

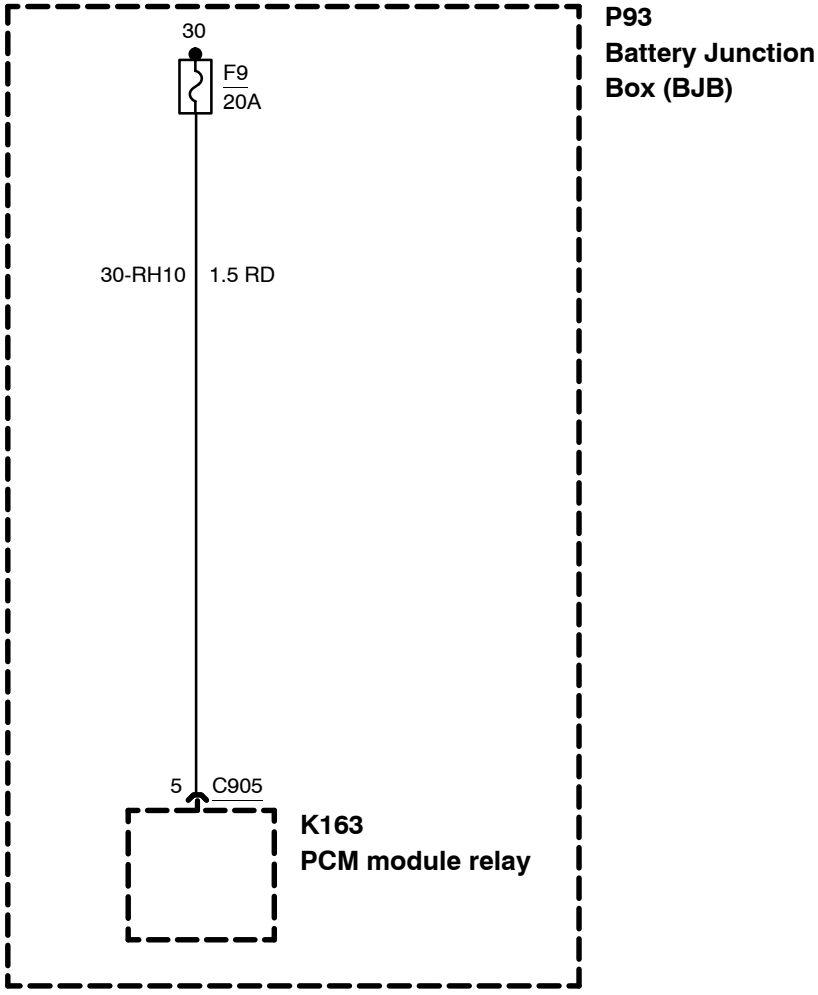

Fuse Details – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)

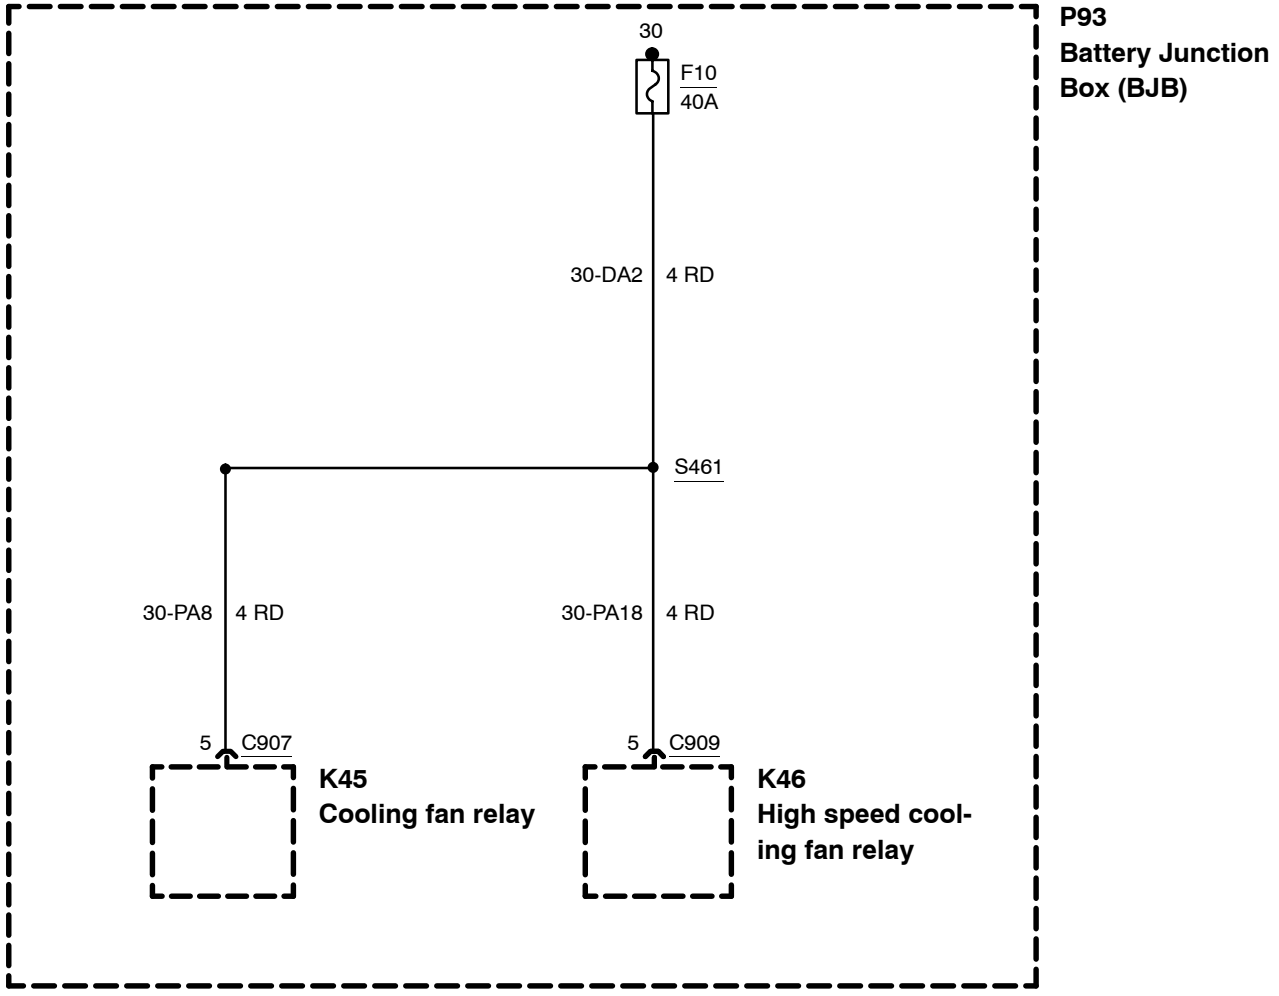


Fuse Details – F11, F13, F15

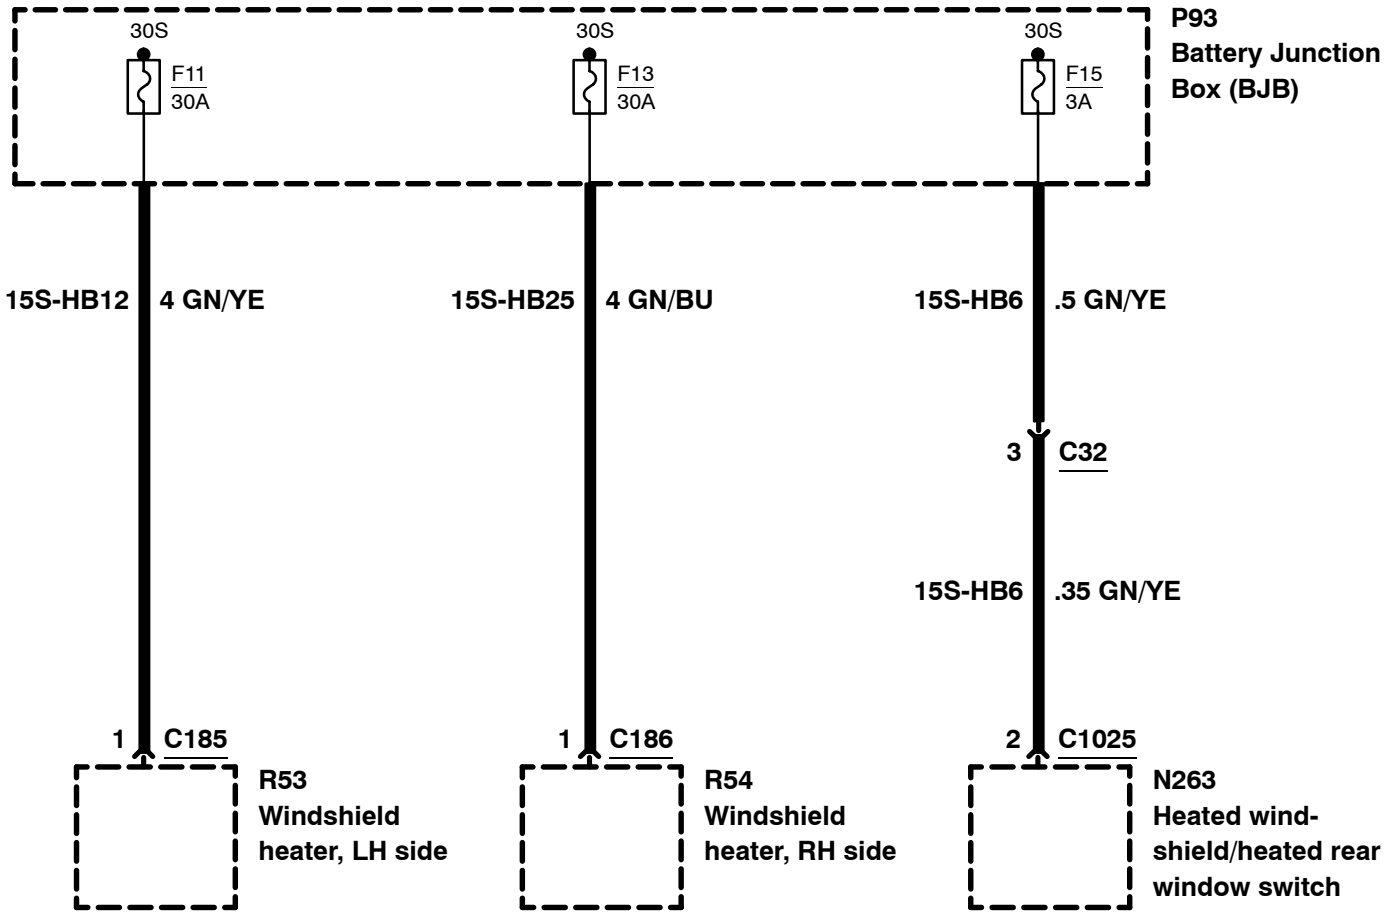


Fuse Details – F16


without high intensity discharge headlamps

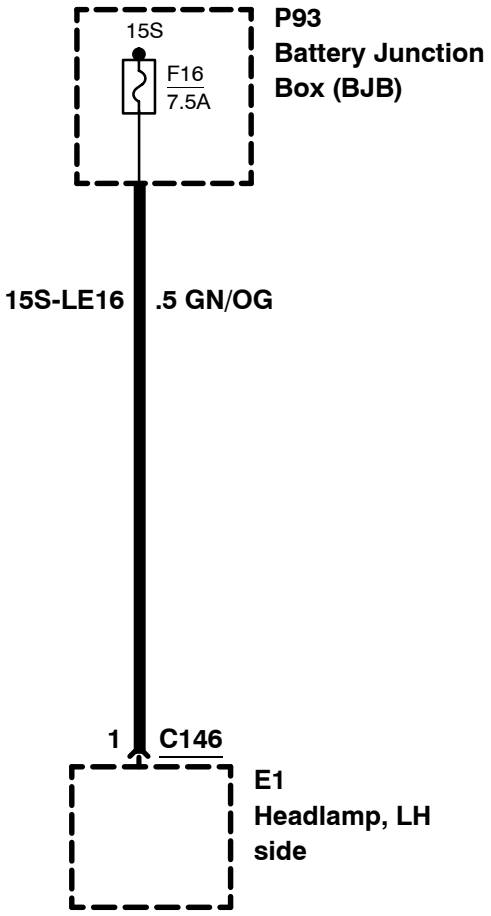


with high intensity discharge headlamps

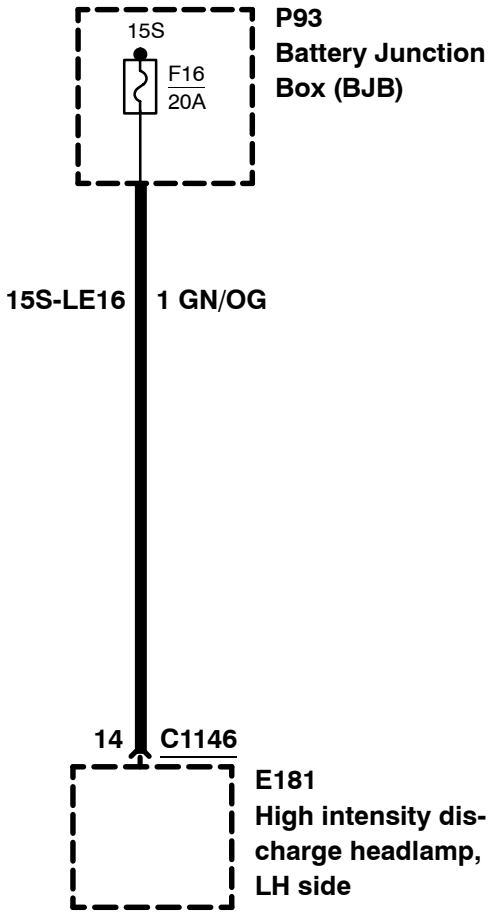


Fuse Details – F17

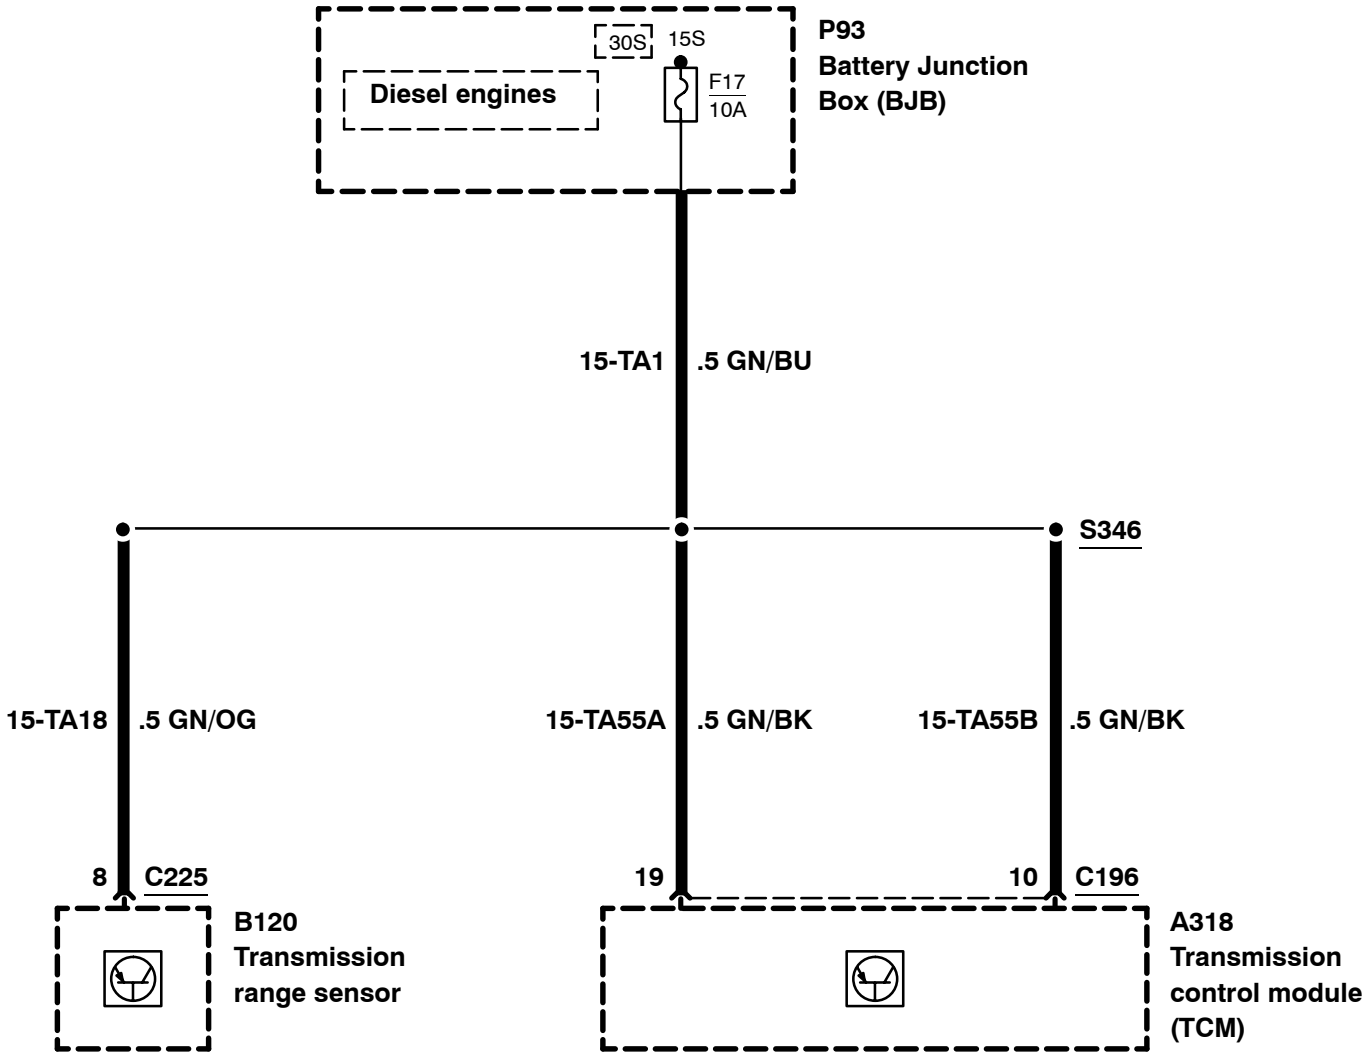


Fuse Details – F18

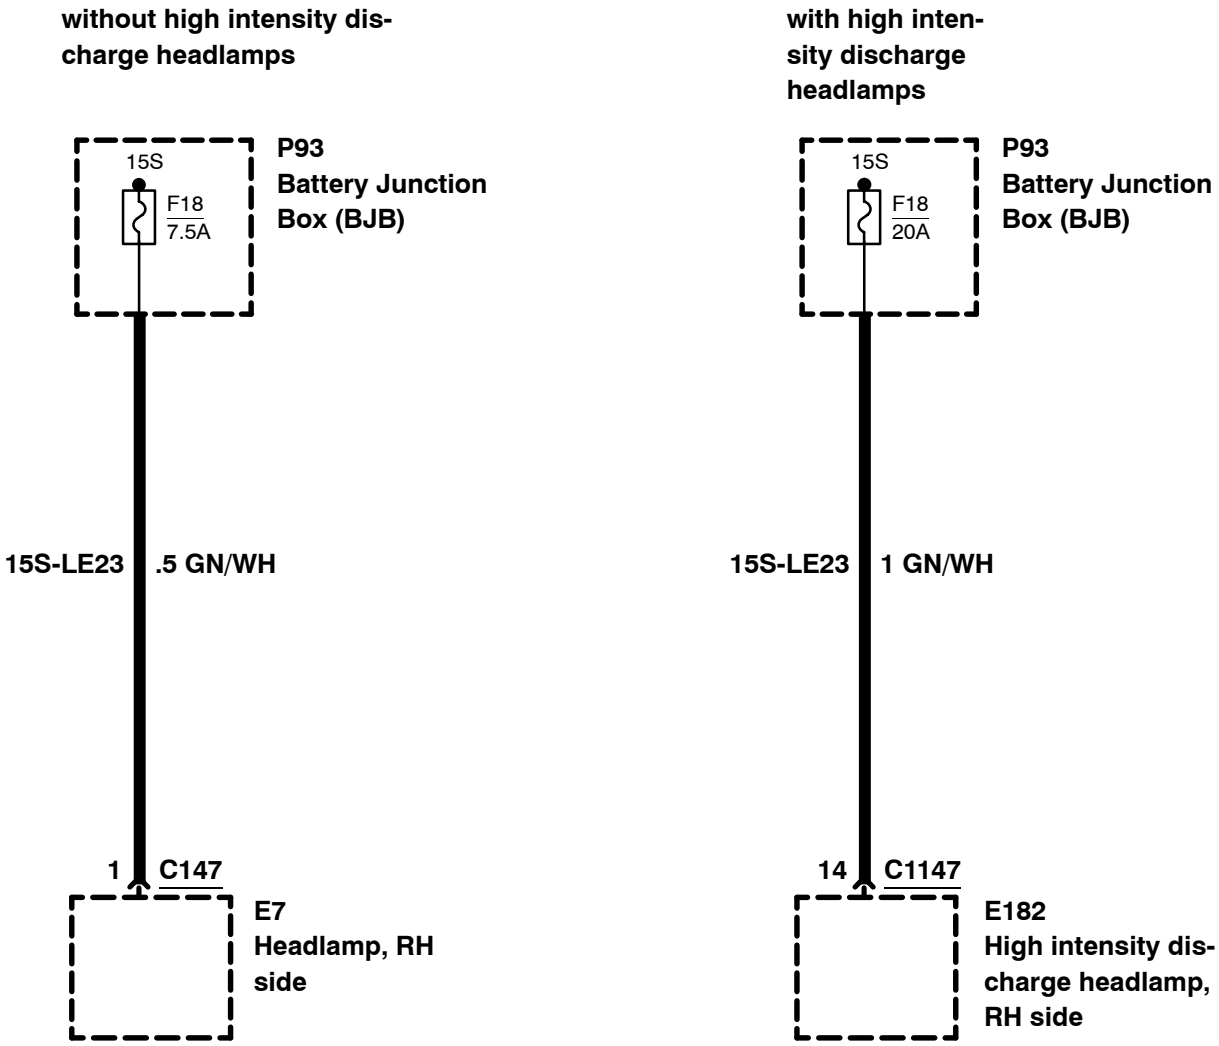


Fuse Details – F20, F21

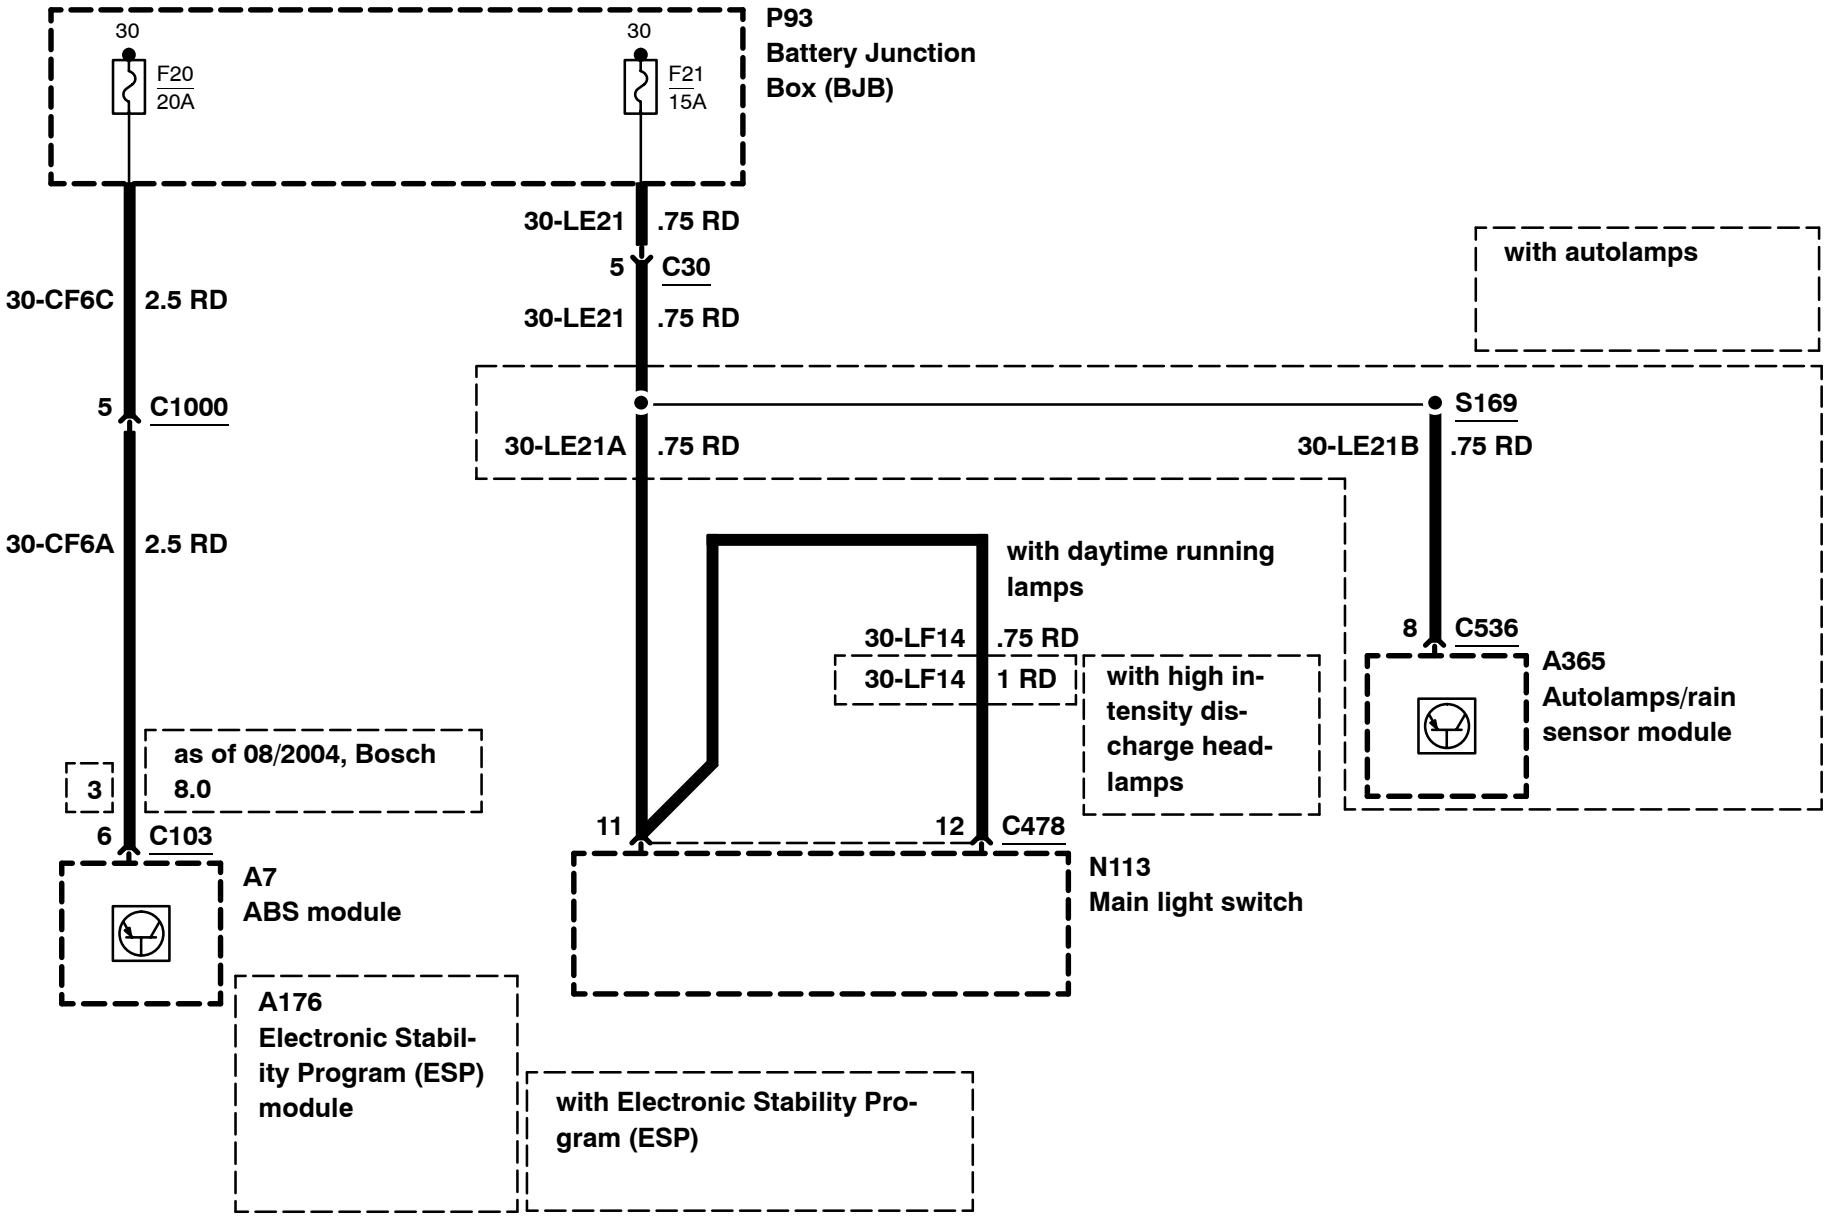


Fuse Details – F22, F23, petrol engines

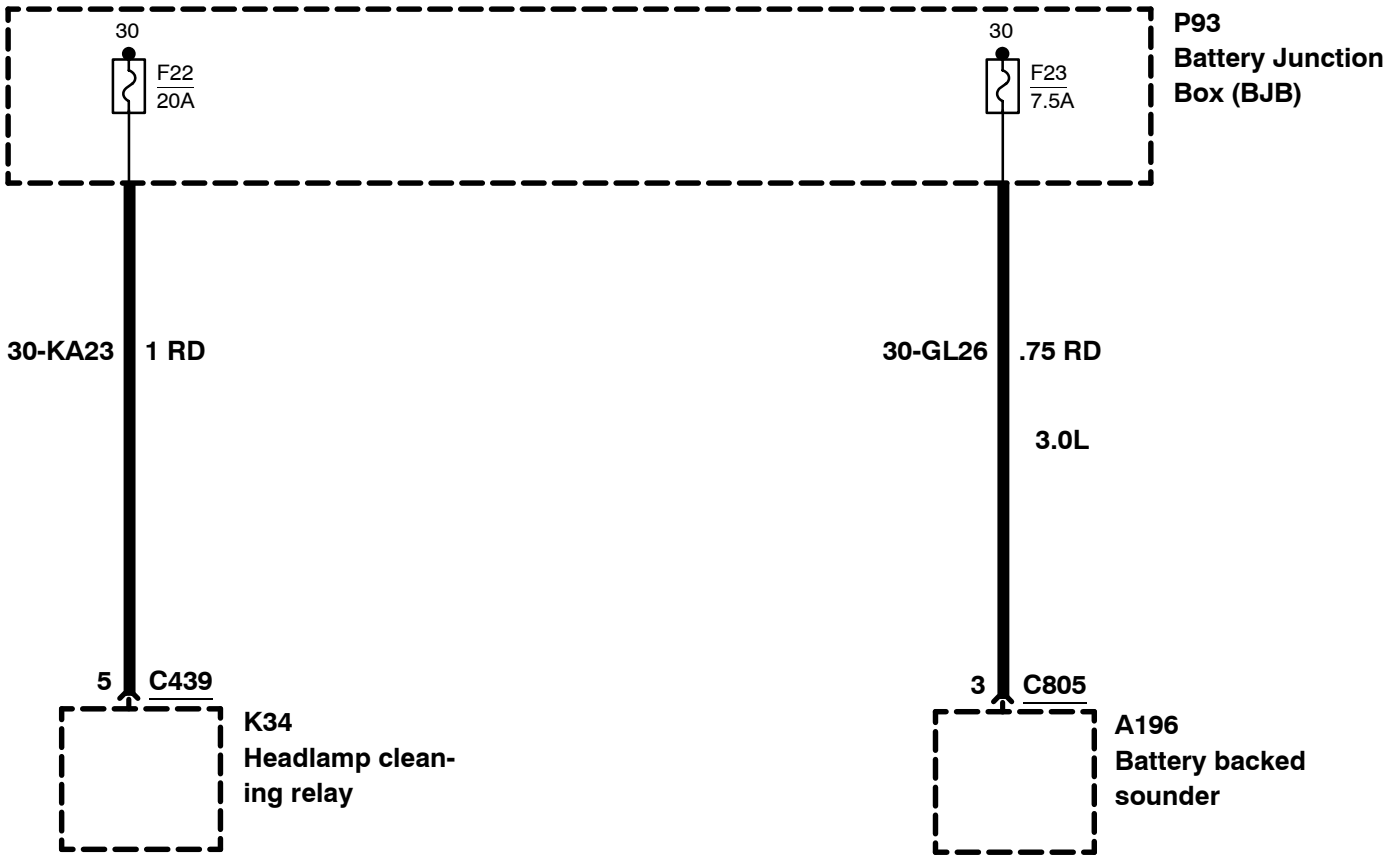


Fuse Details – F22, F23, Diesel engines

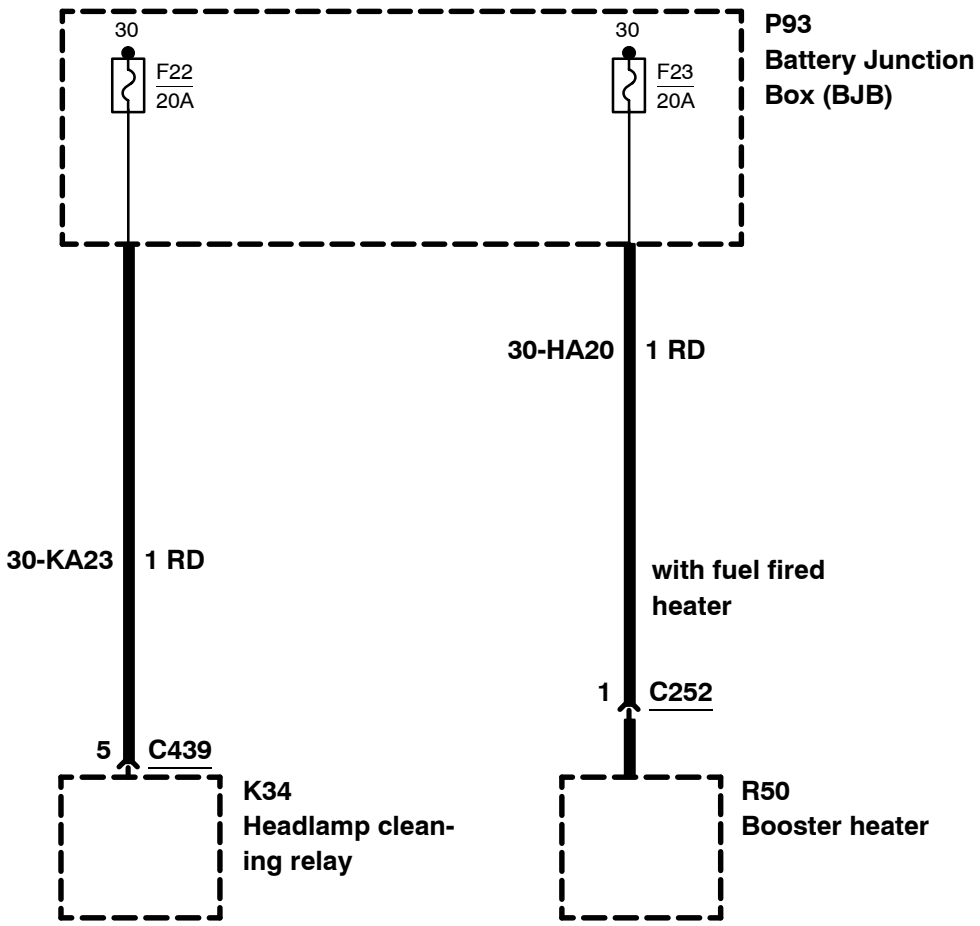


Fuse Details – F24, F25

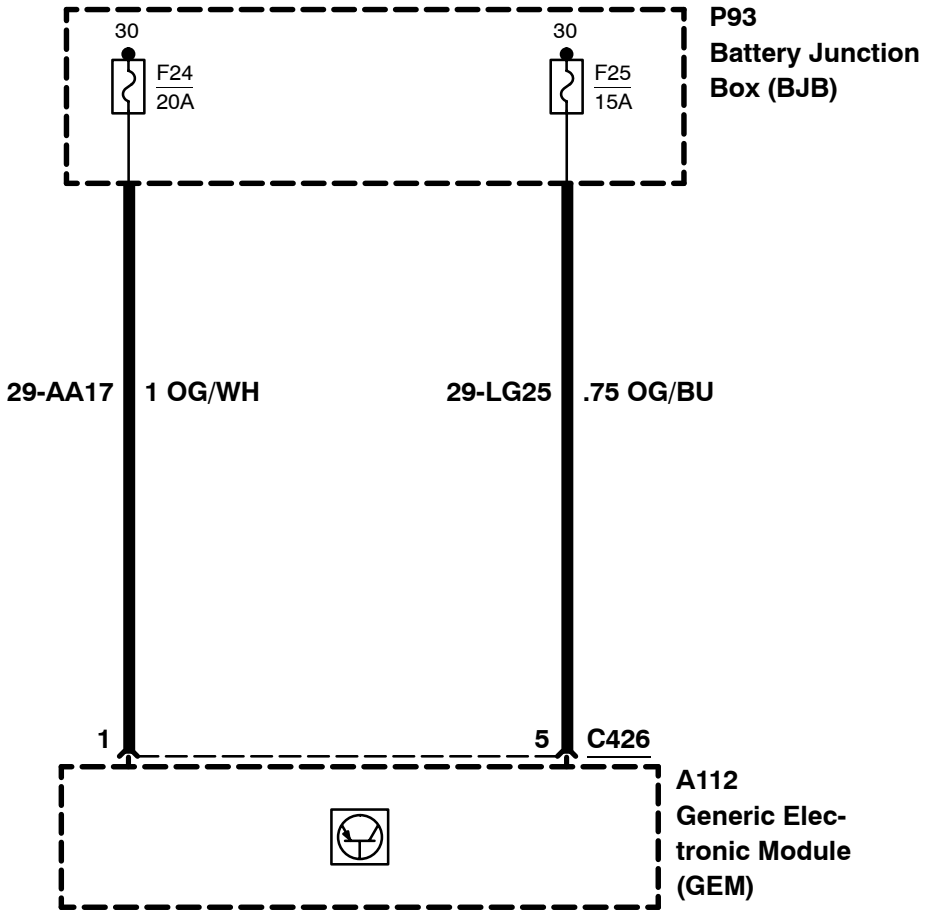


Fuse Details – F26

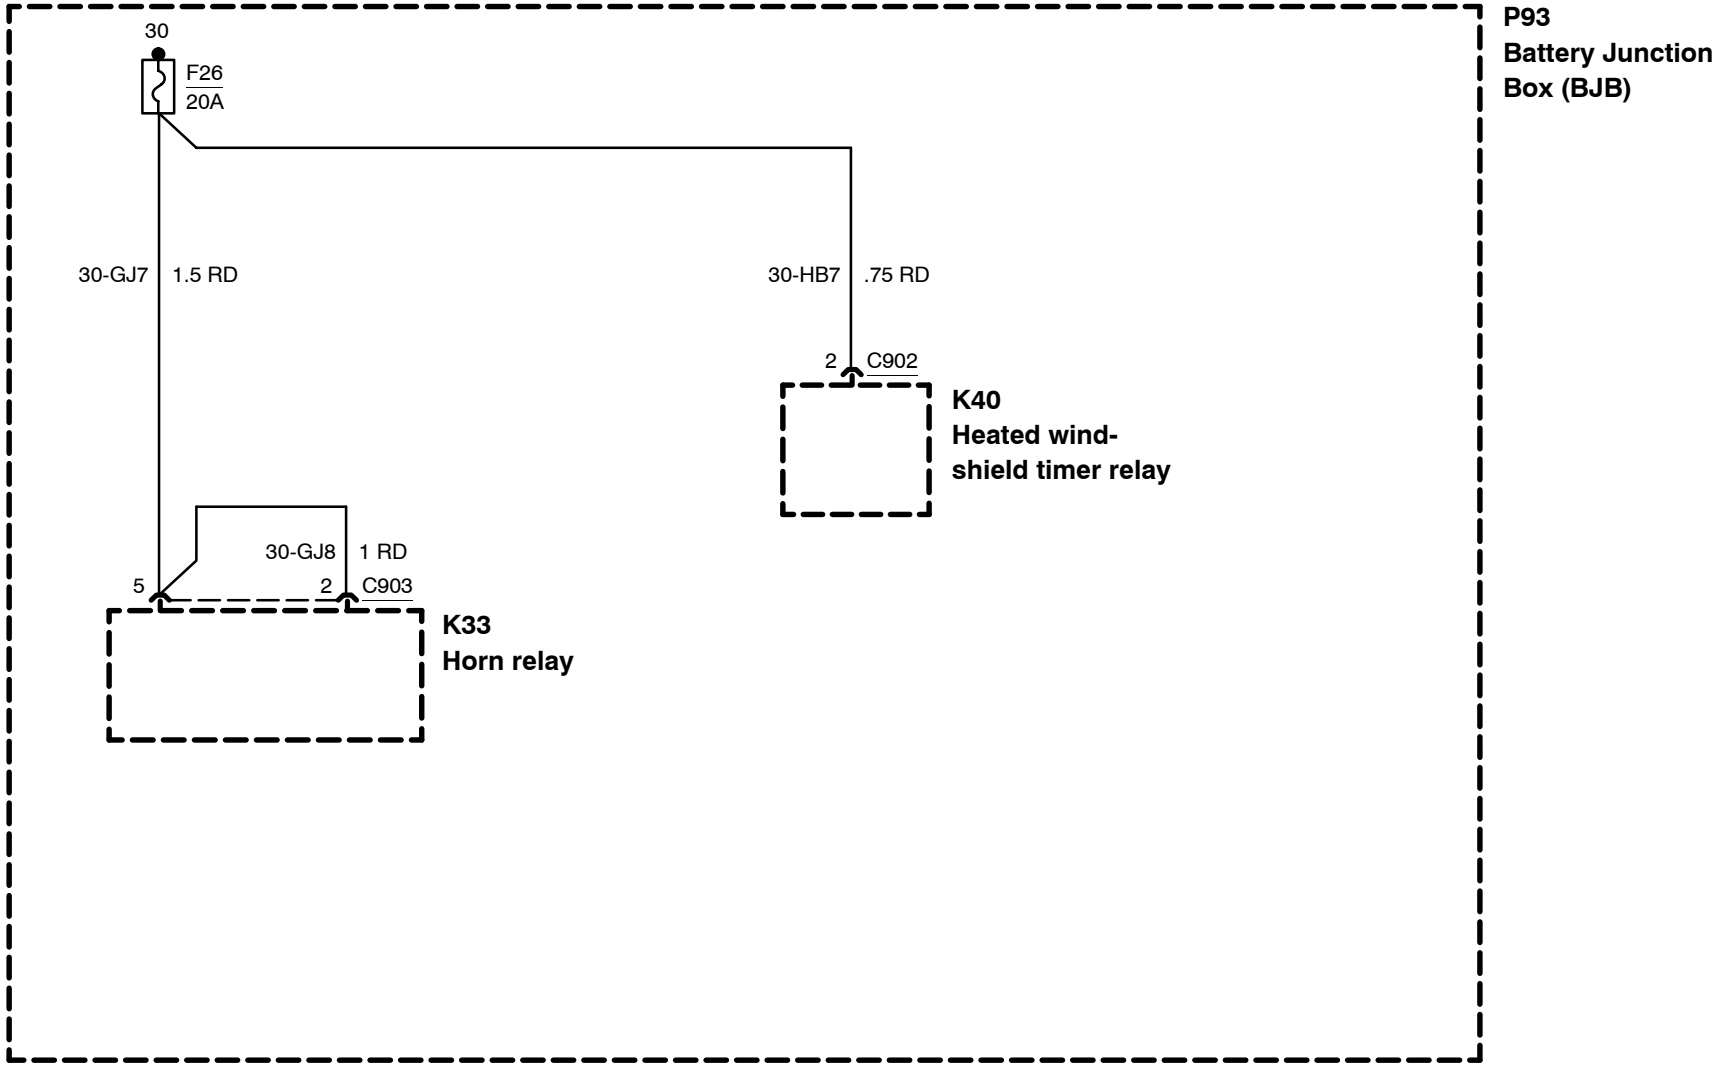


Fuse Details – F27

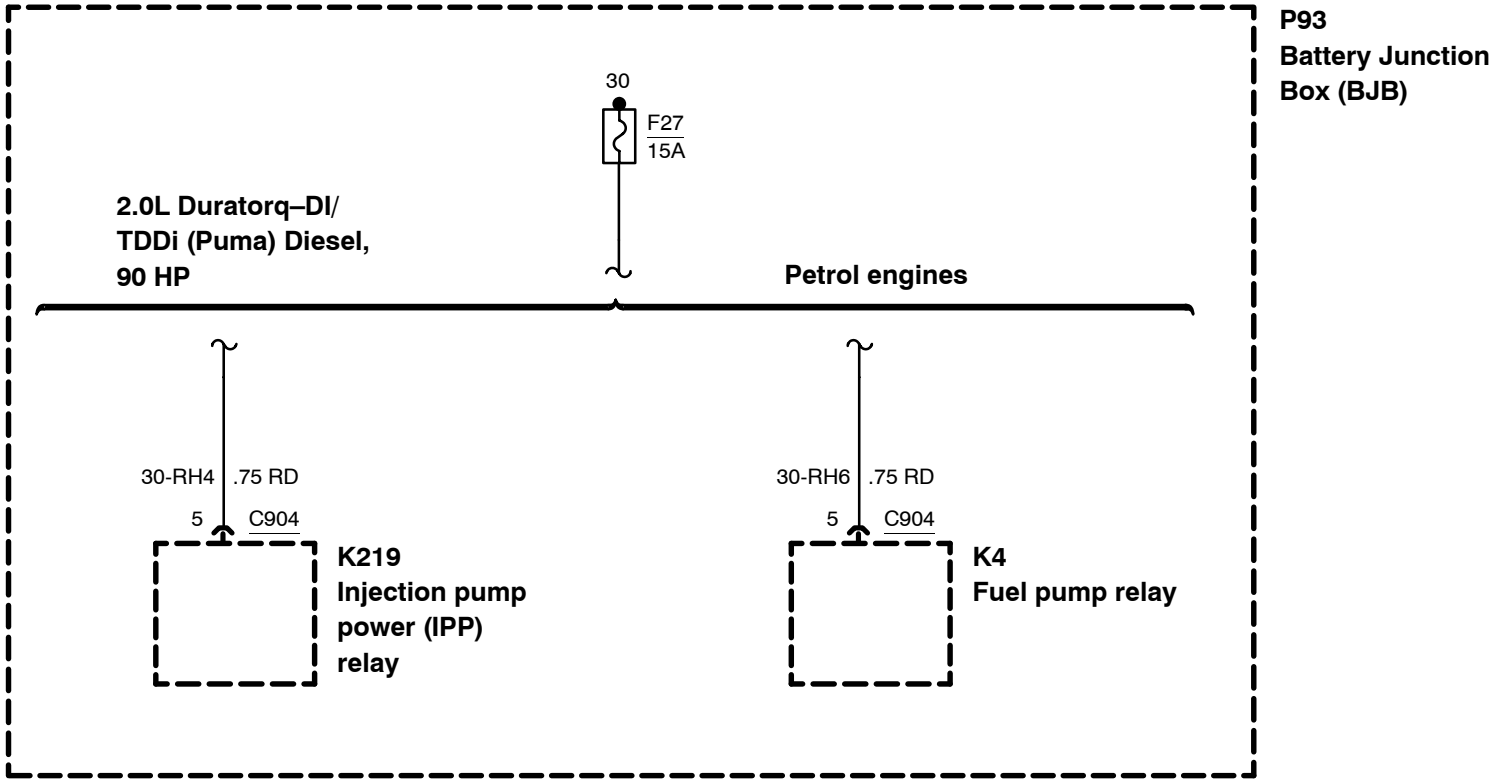


Fuse Details – F27, 3.0L Duratec–SE (VE6)

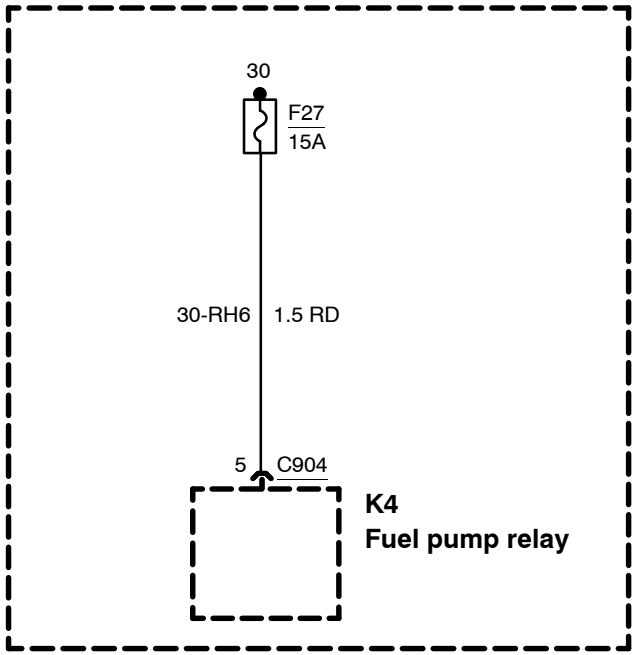


Fuse Details – F28, F29

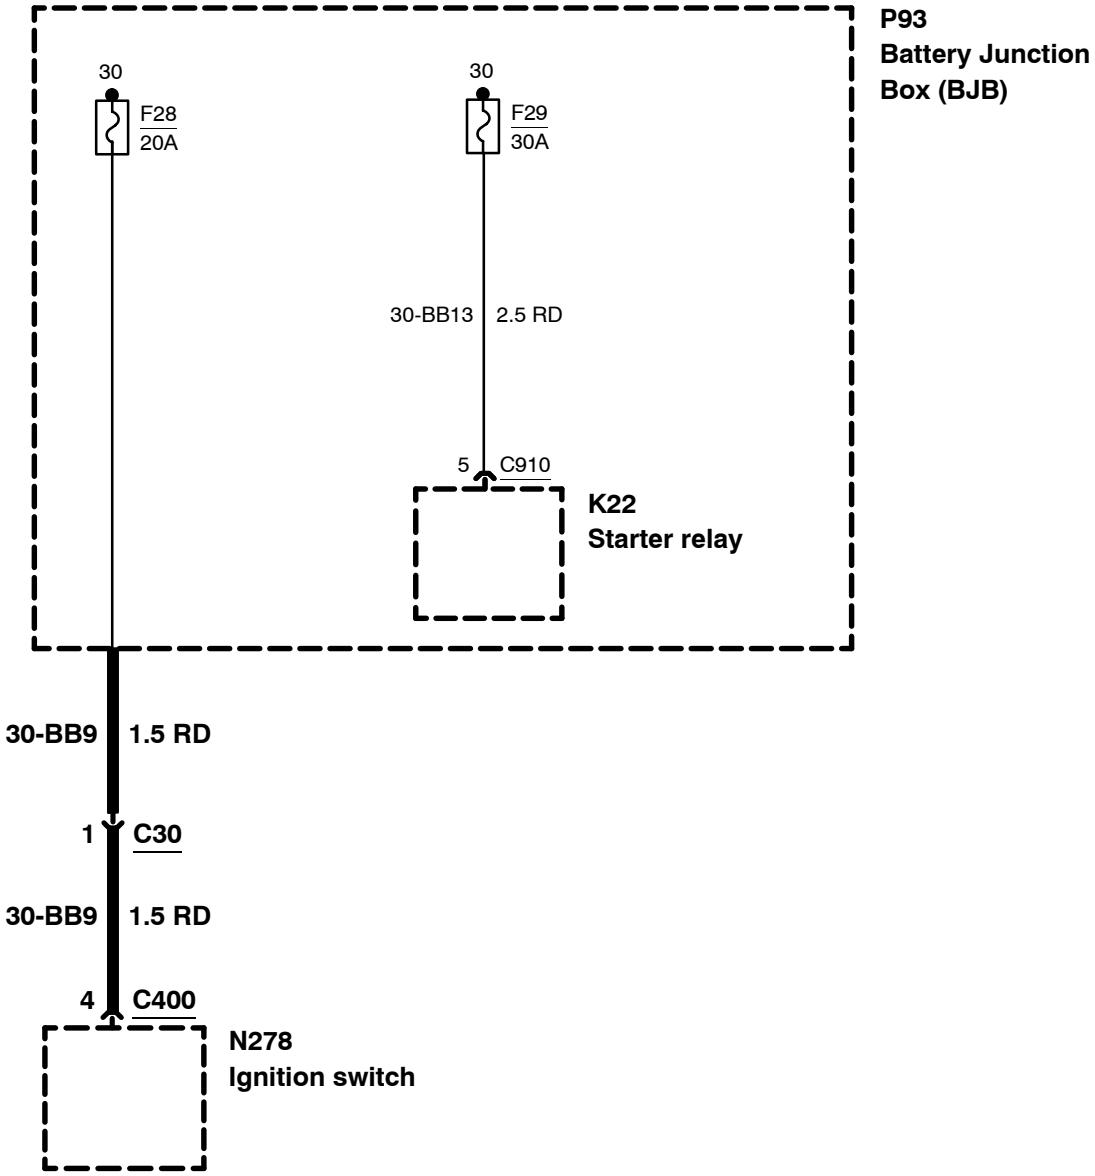


Fuse Details – F30, F31, F32, Petrol engines

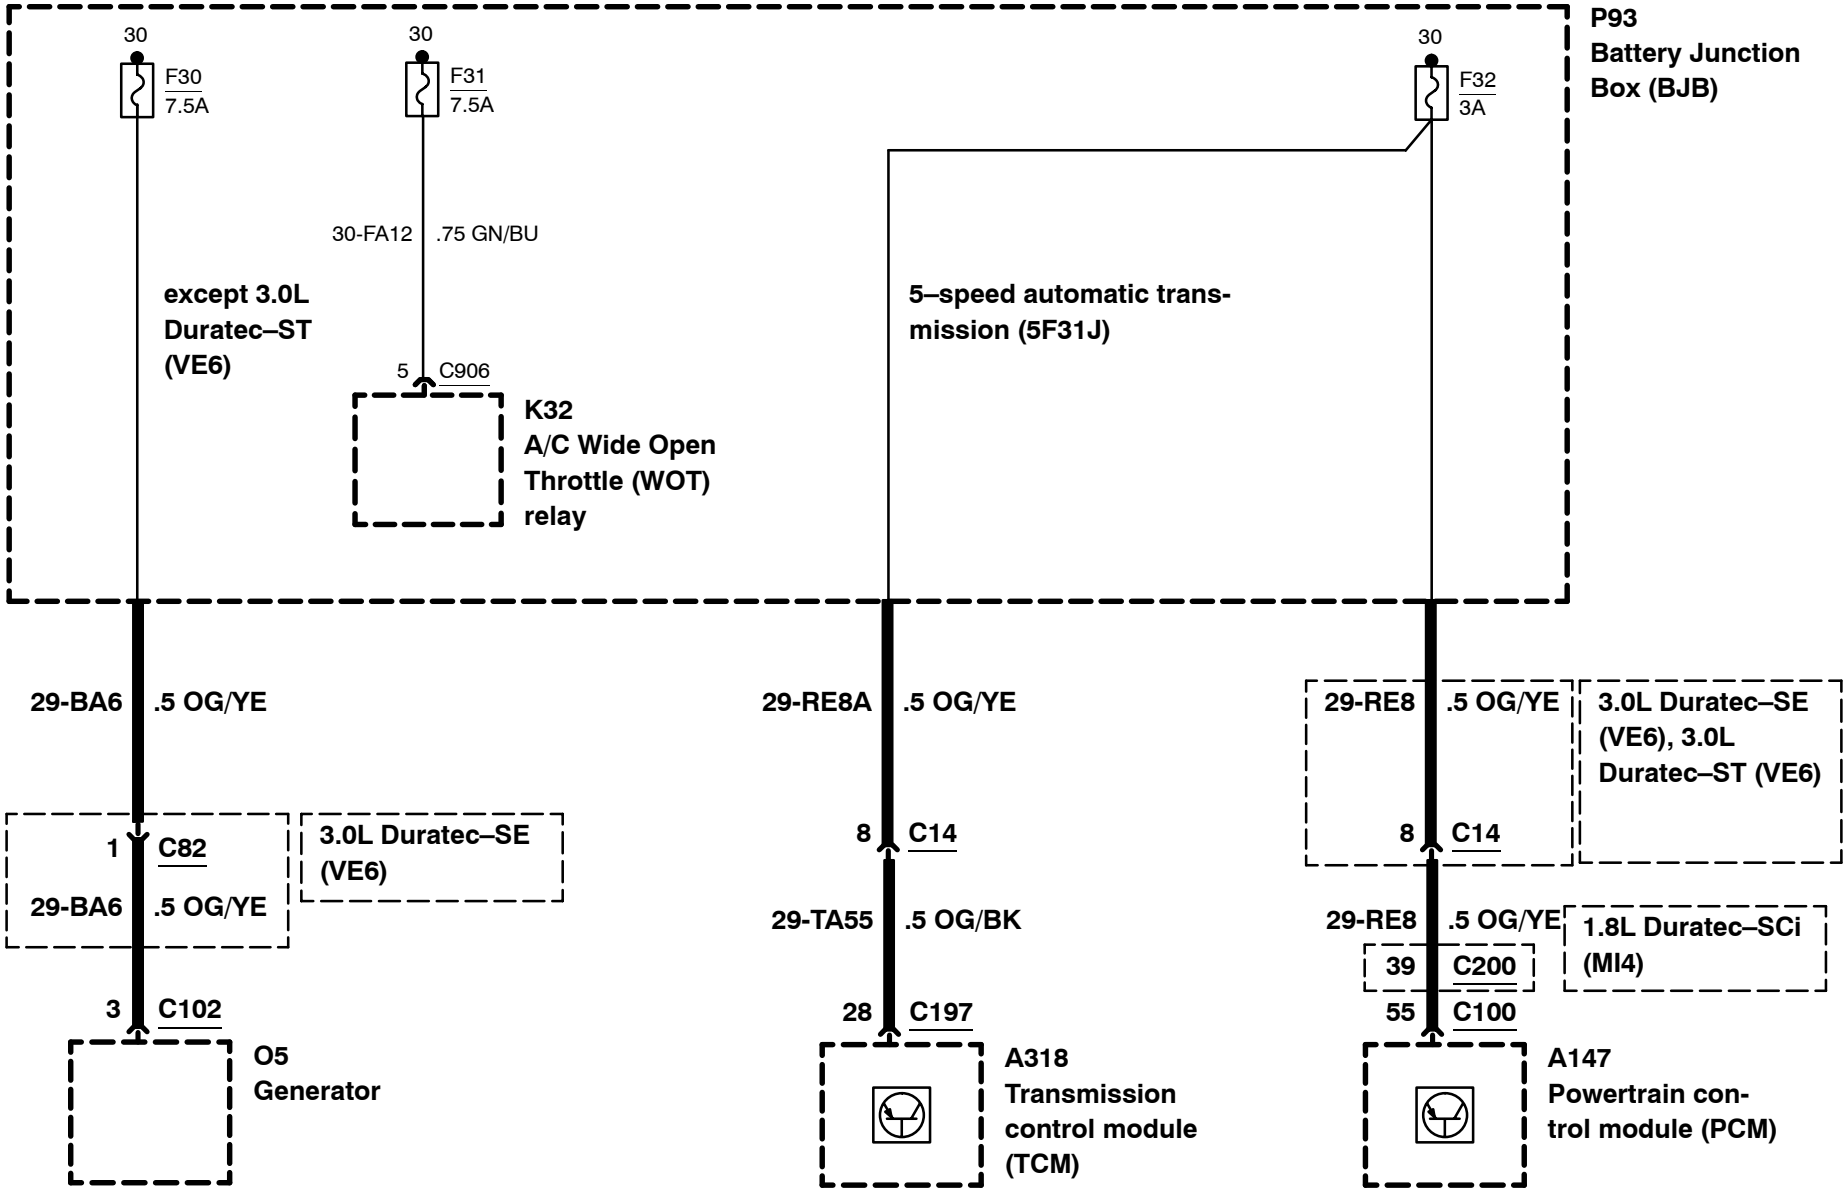


Fuse Details – F33, 1.8L Duratec–SCi (MI4)

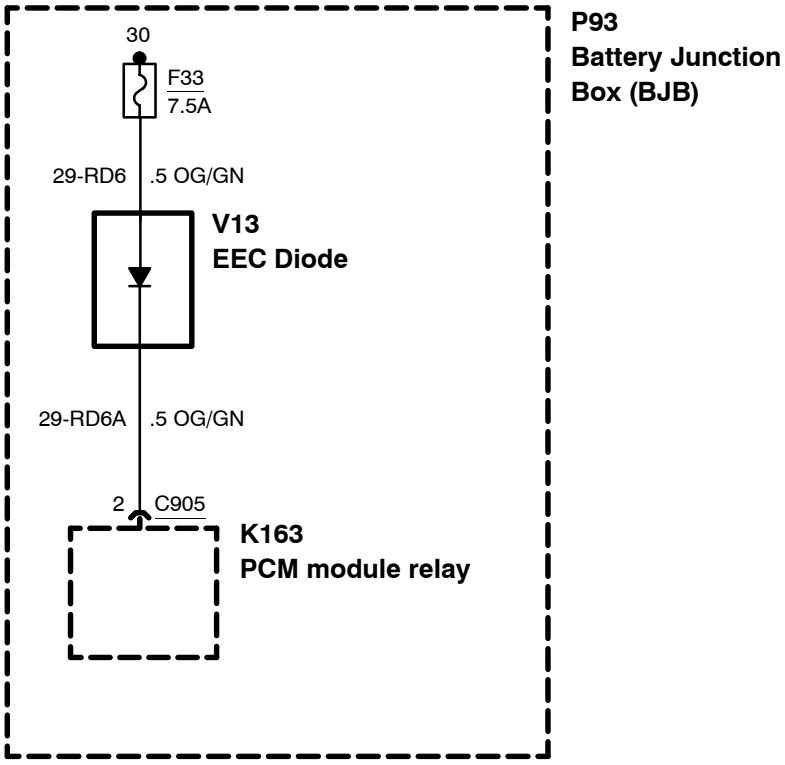


Fuse Details – F30, F31, F32, F33, Diesel engines

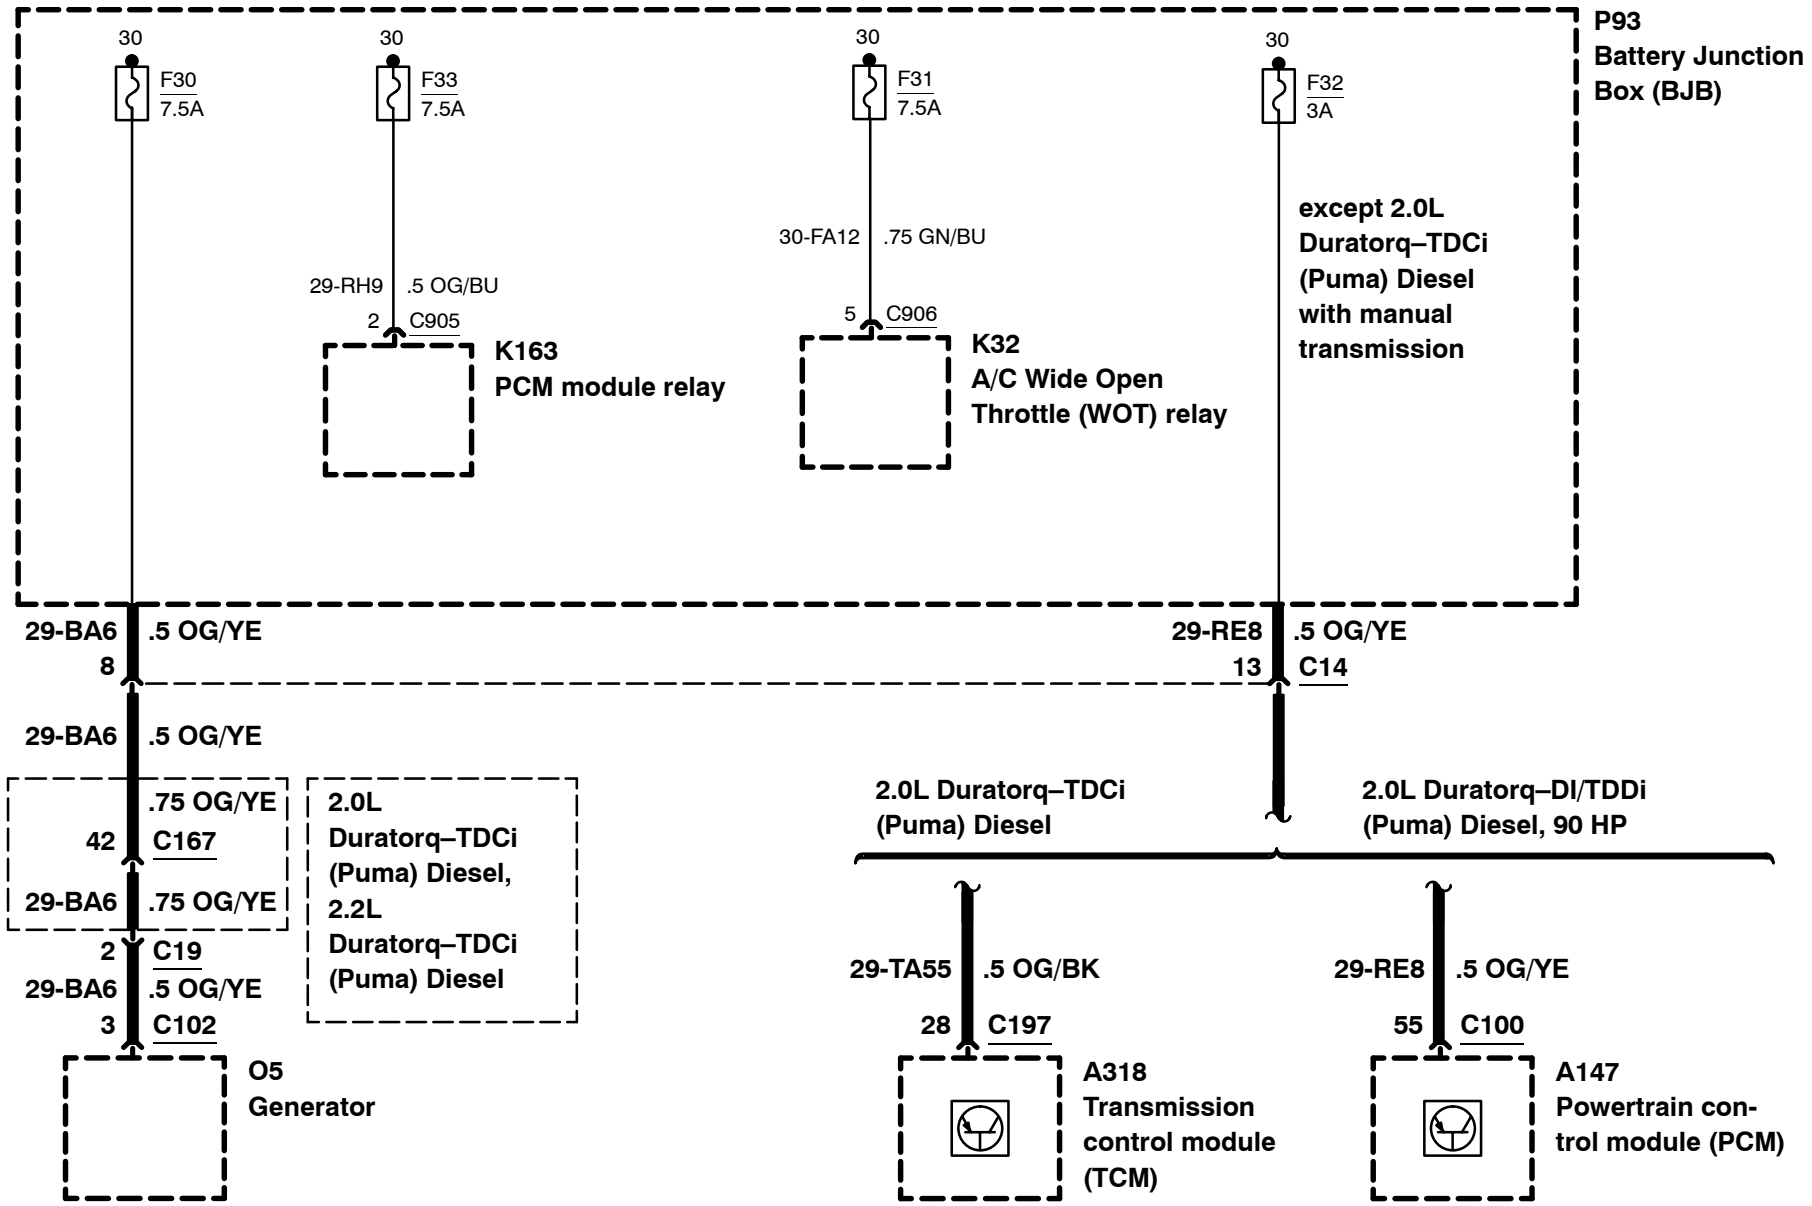


Fuse Details – F37, 1.8L Duratec–SCi (MI4)

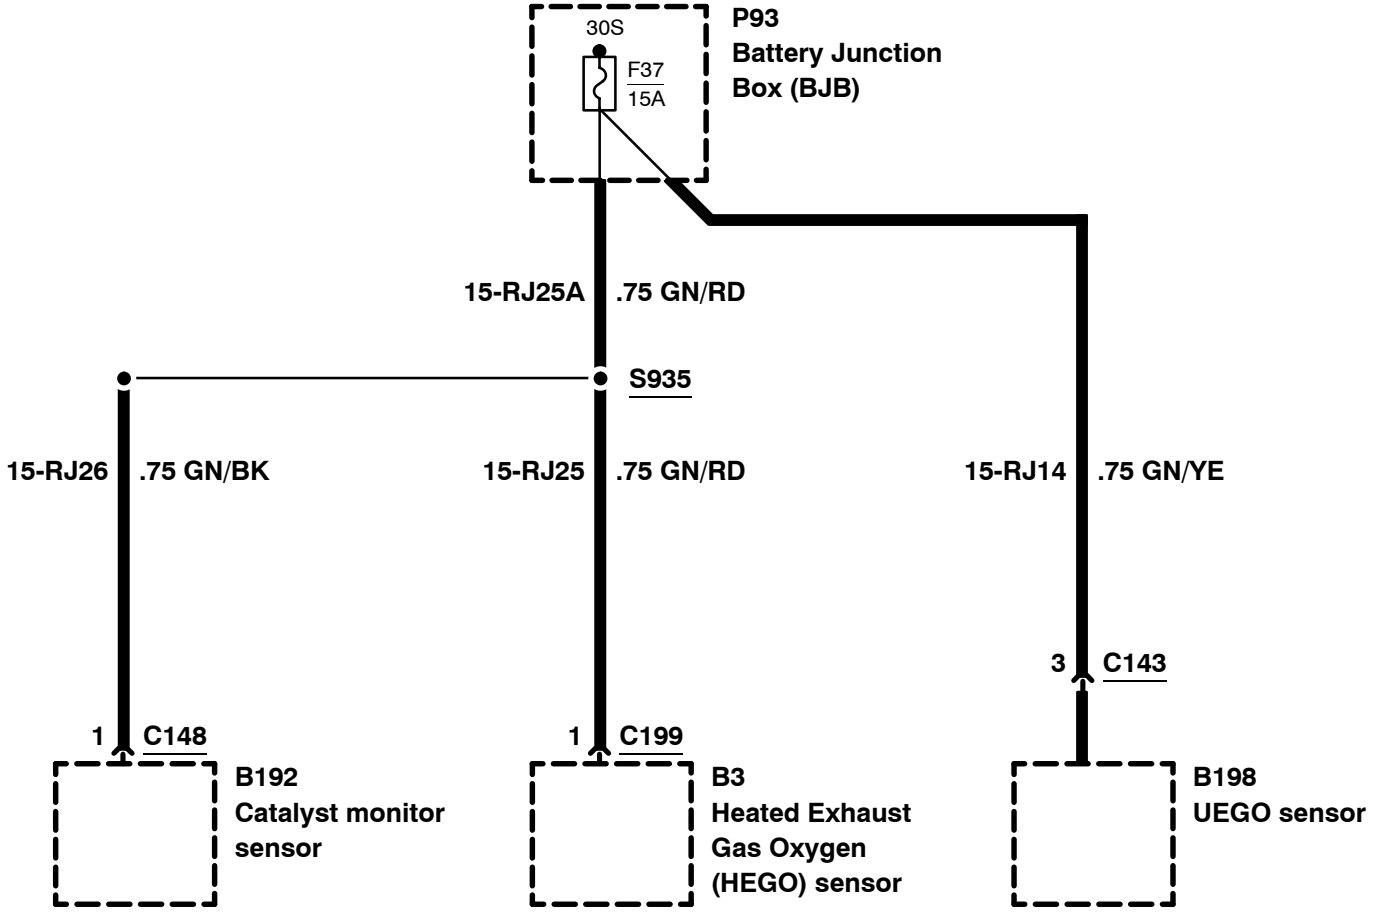


Fuse Details – F37, 1.8/2.0L Duratec–HE (MI4)

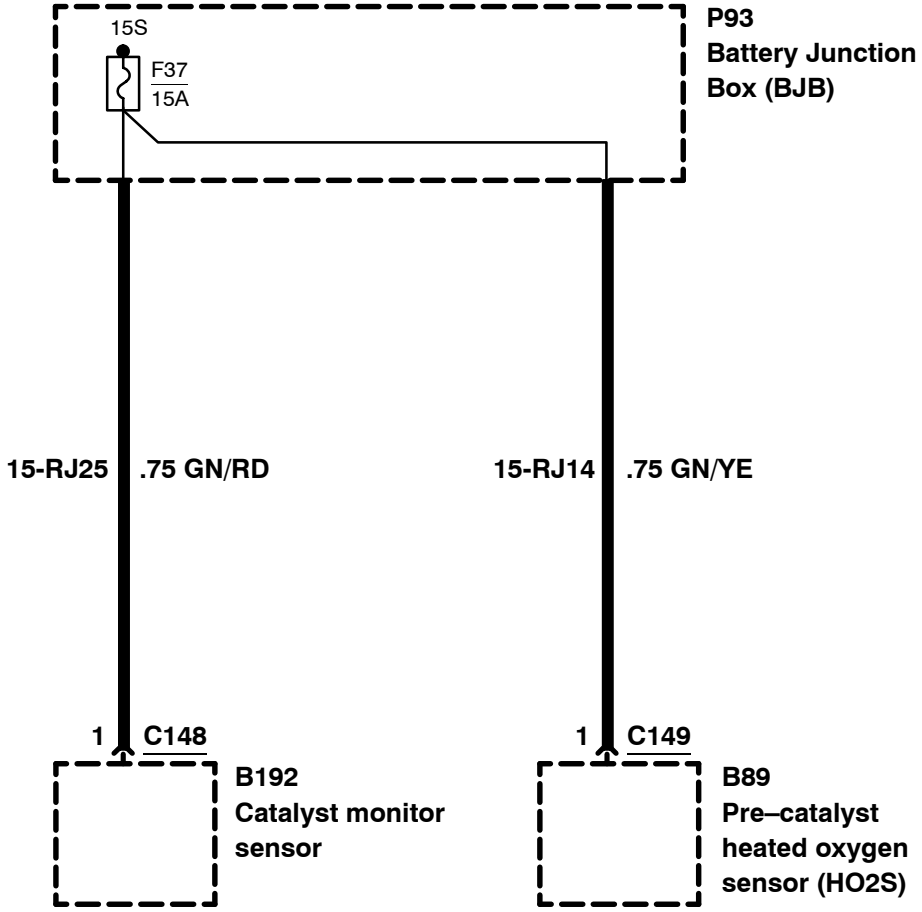


Fuse Details – F37, 2.5L Duratec–VE (VE6)

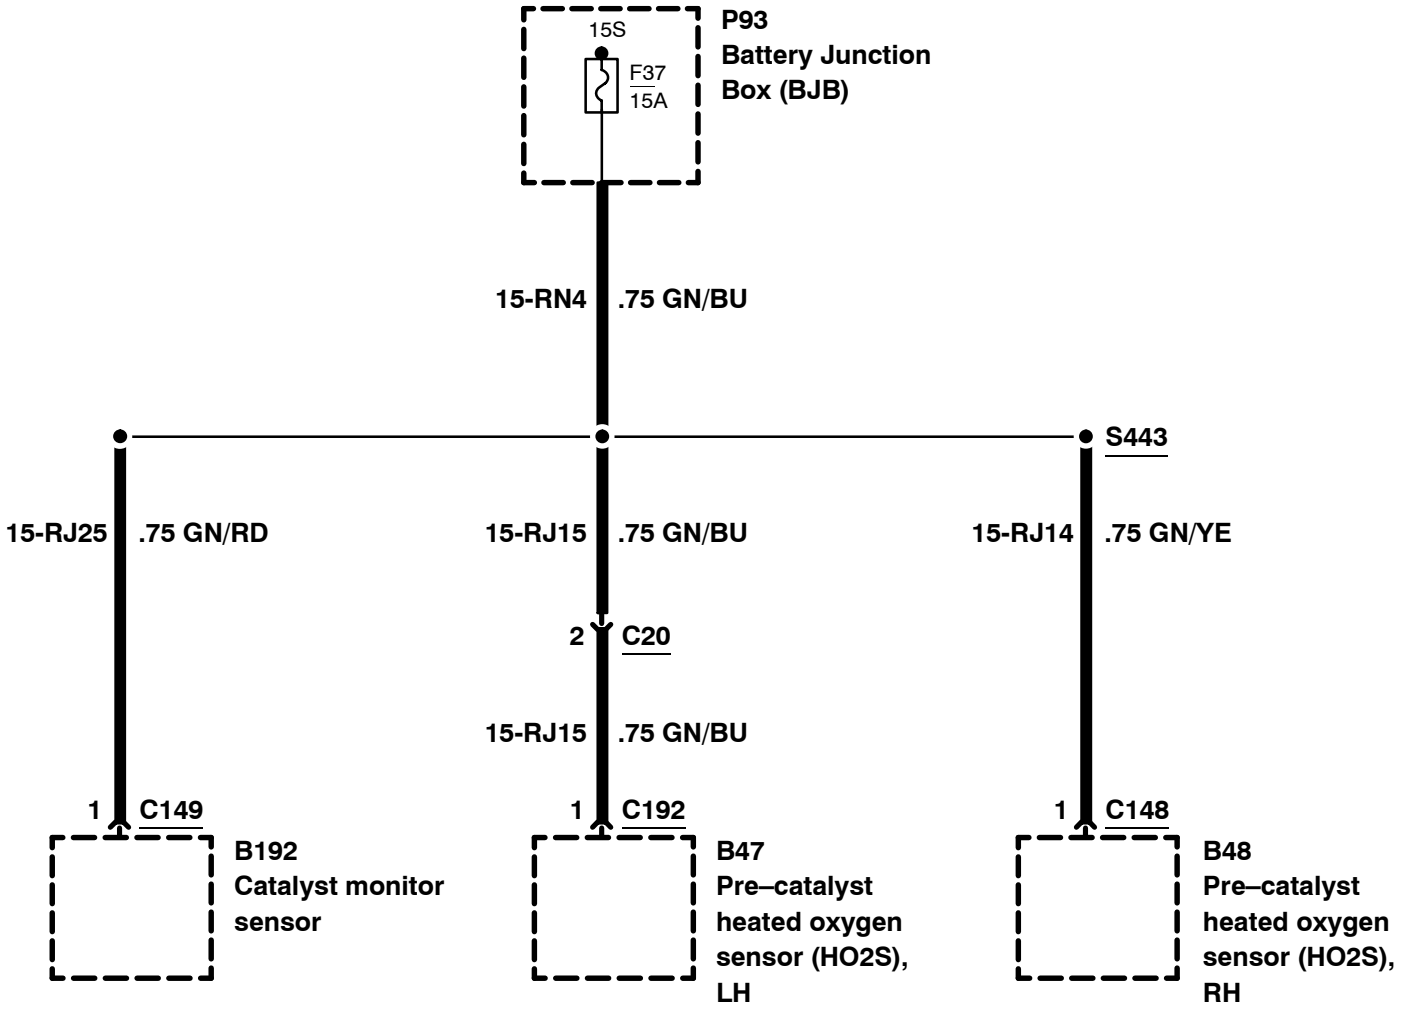


Fuse Details – F37, 3.0L Duratec–SE (VE6)

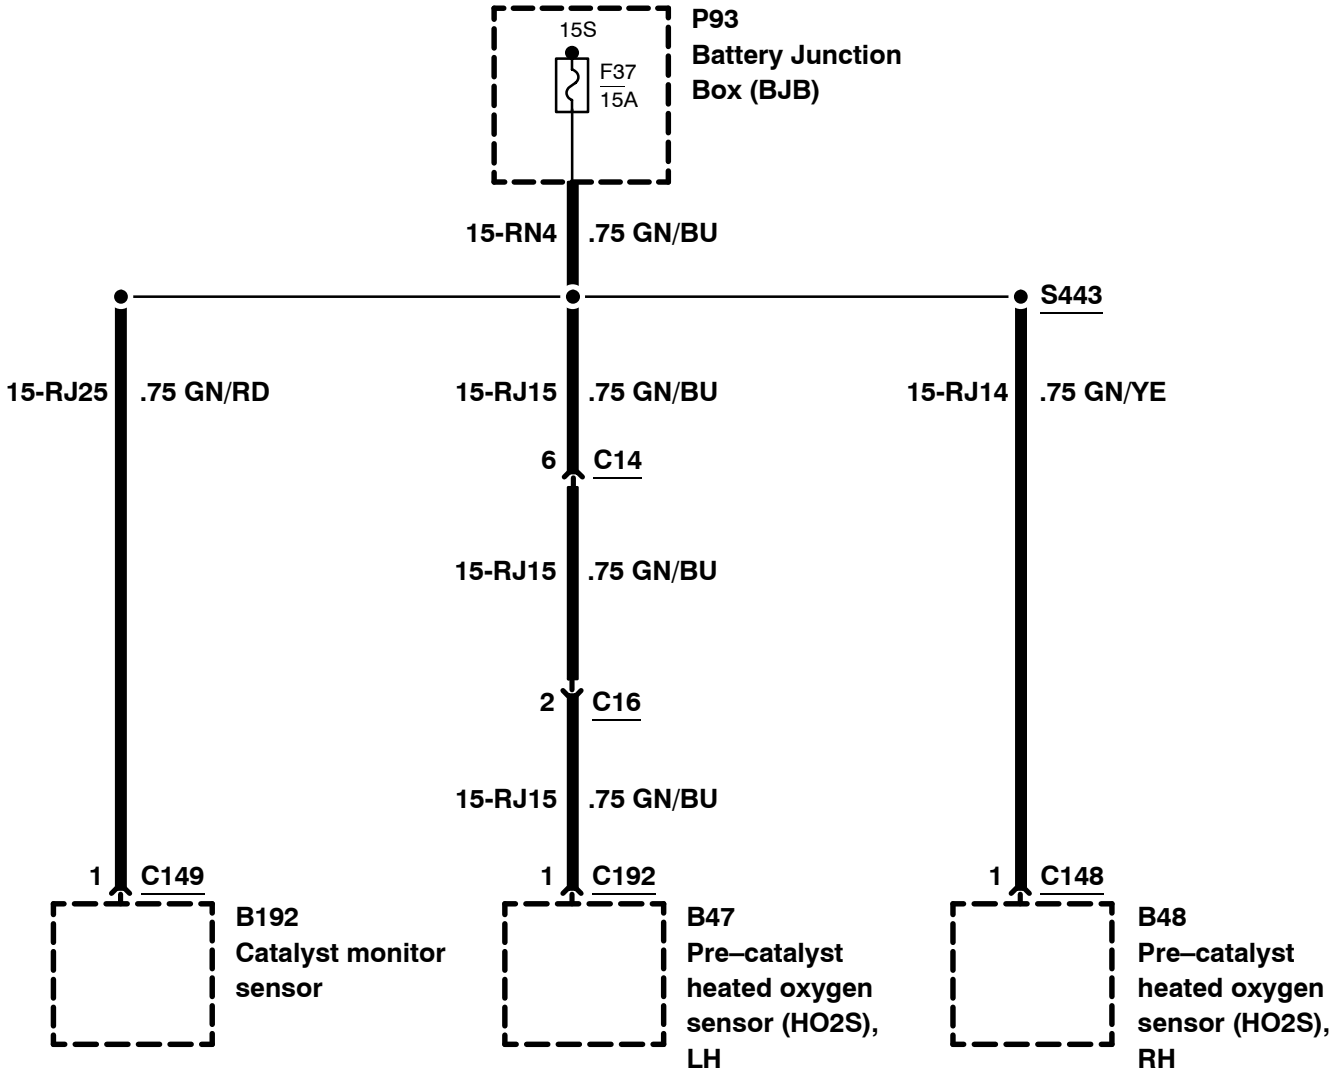


Fuse Details – F37, 3.0L Duratec–ST (VE6), before 04/2004

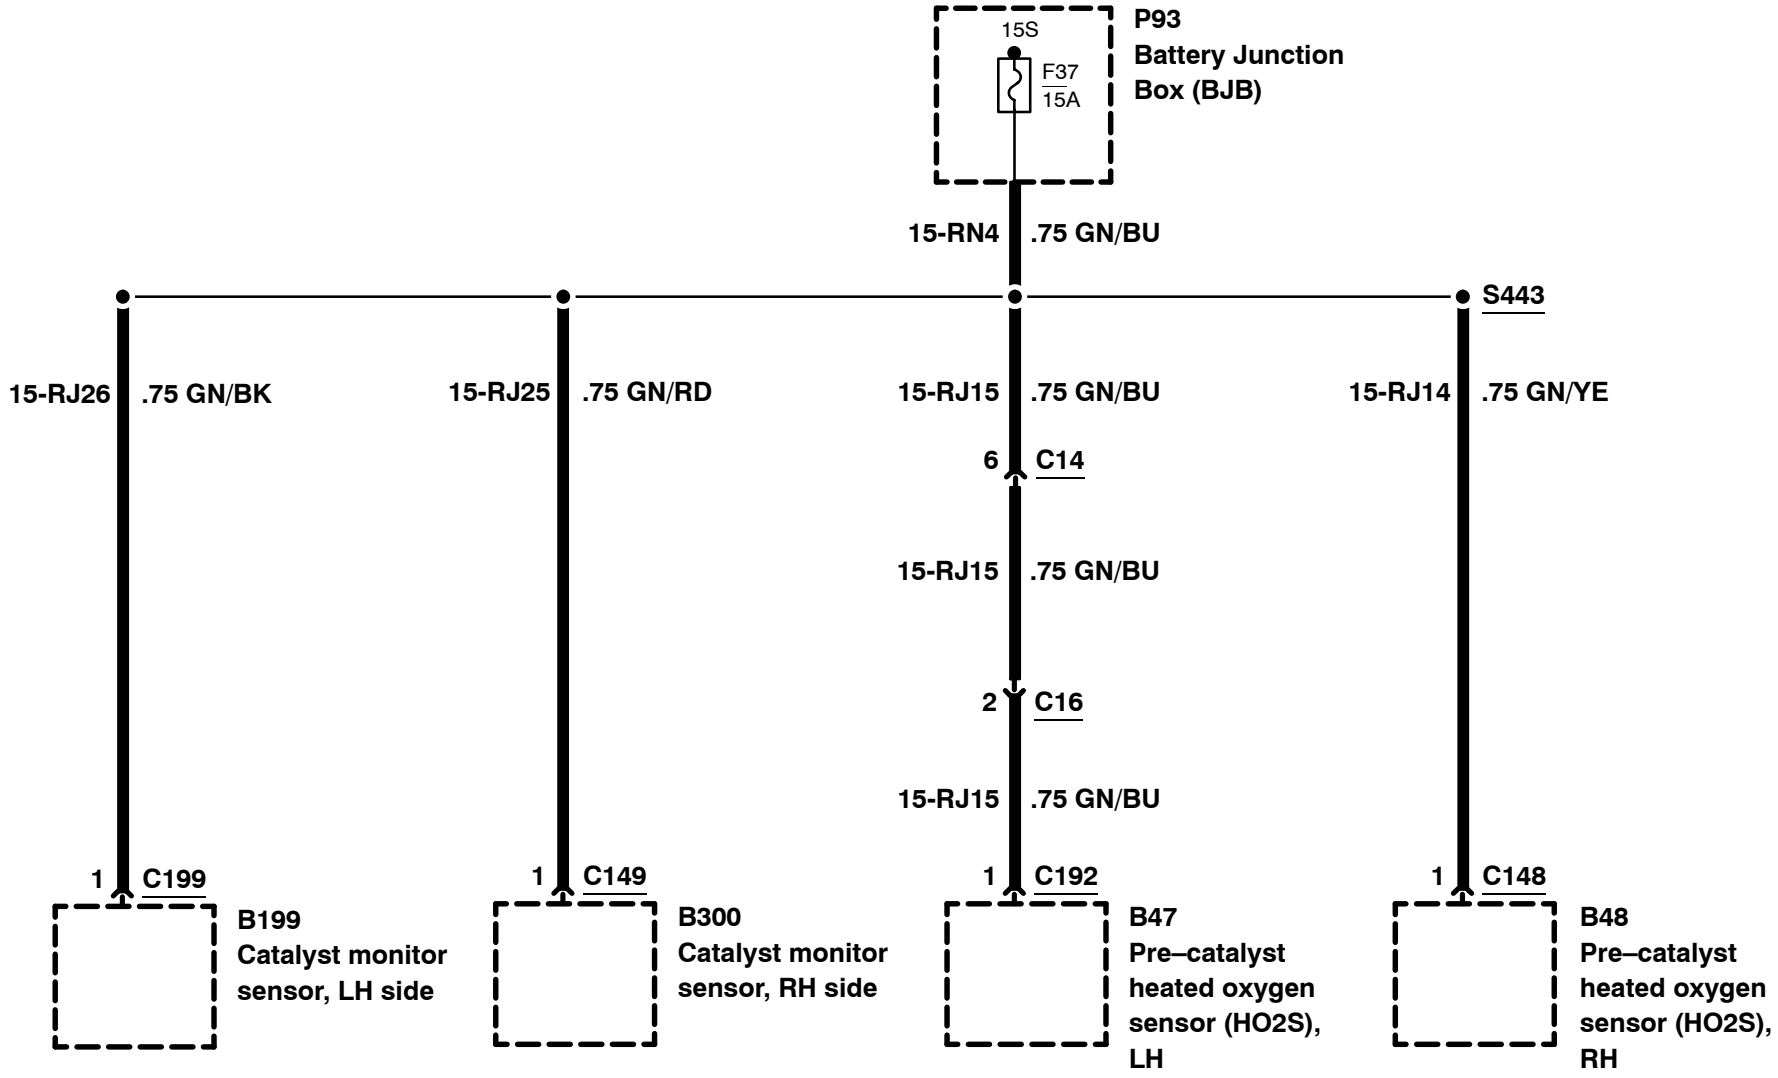


Fuse Details – F37, 3.0L Duratec–ST (VE6), as of 04/2004

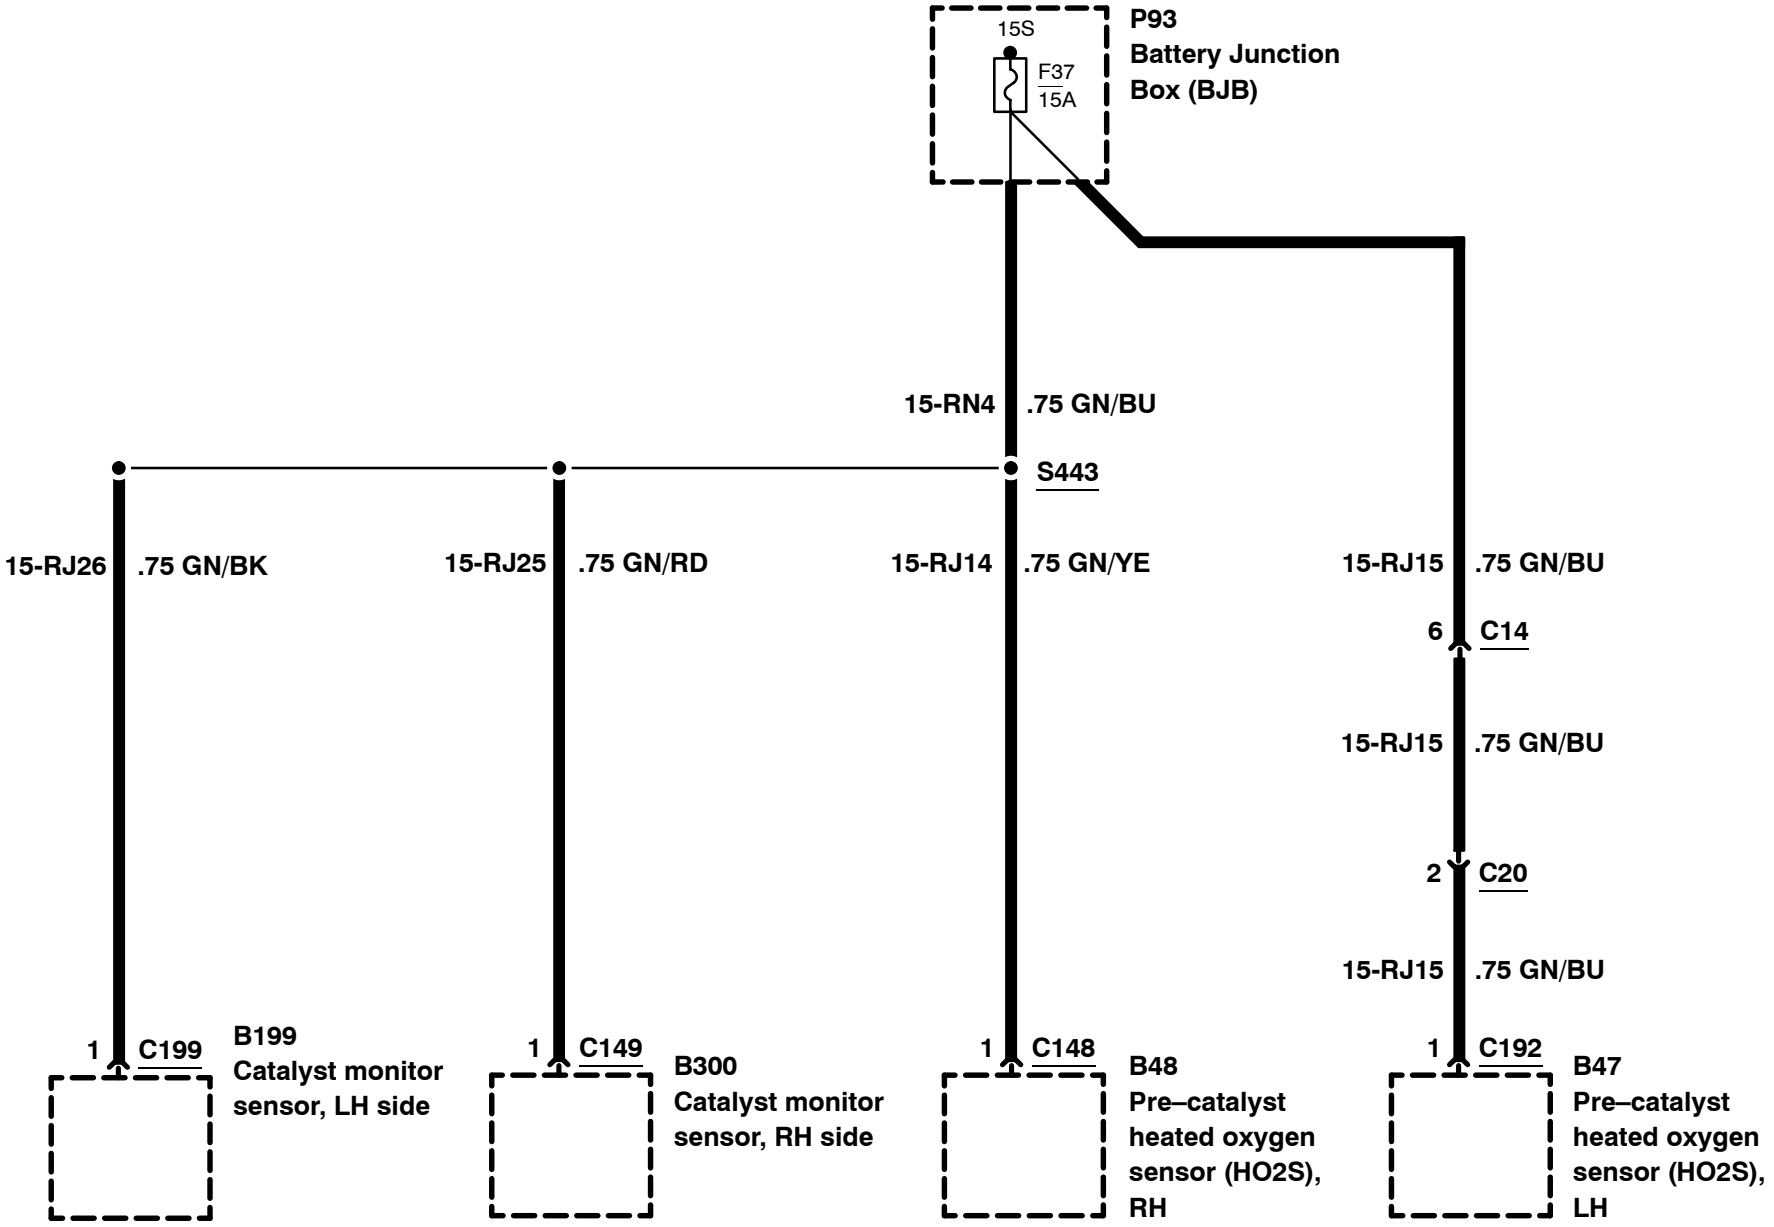


Fuse Details – F40, 1.8L Duratec–SCi (MI4)

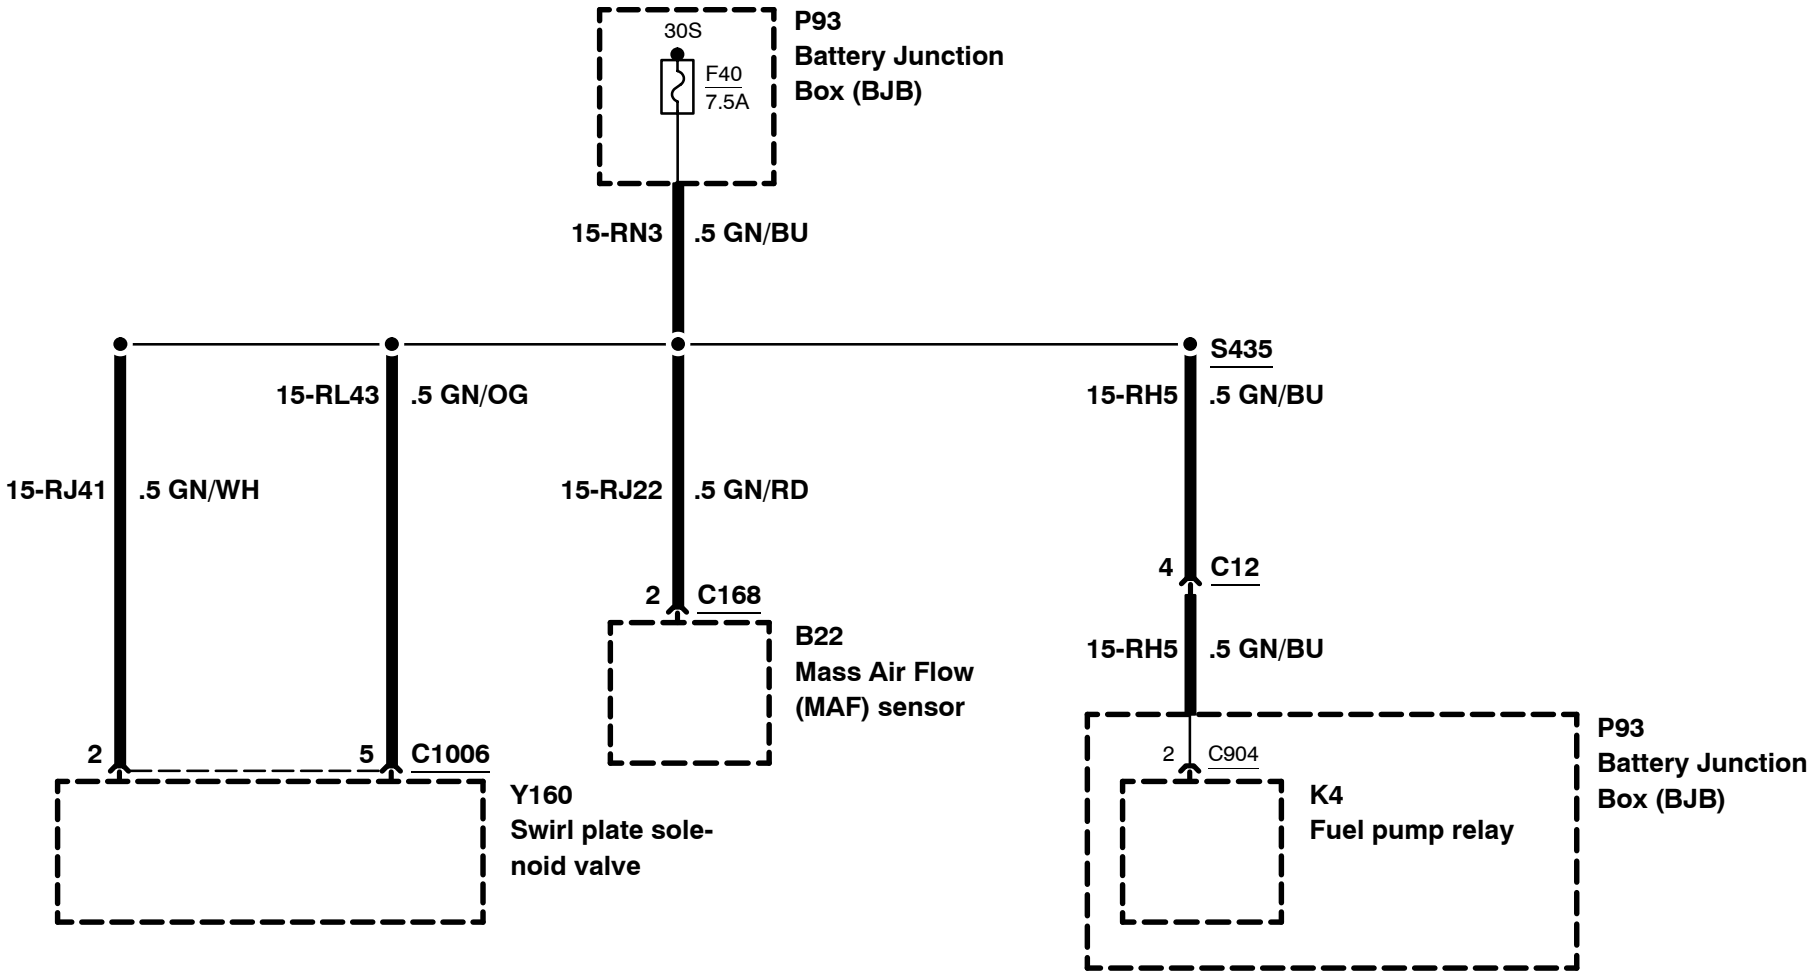


Fuse Details – F40, 1.8/2.0L Duratec–HE (MI4)

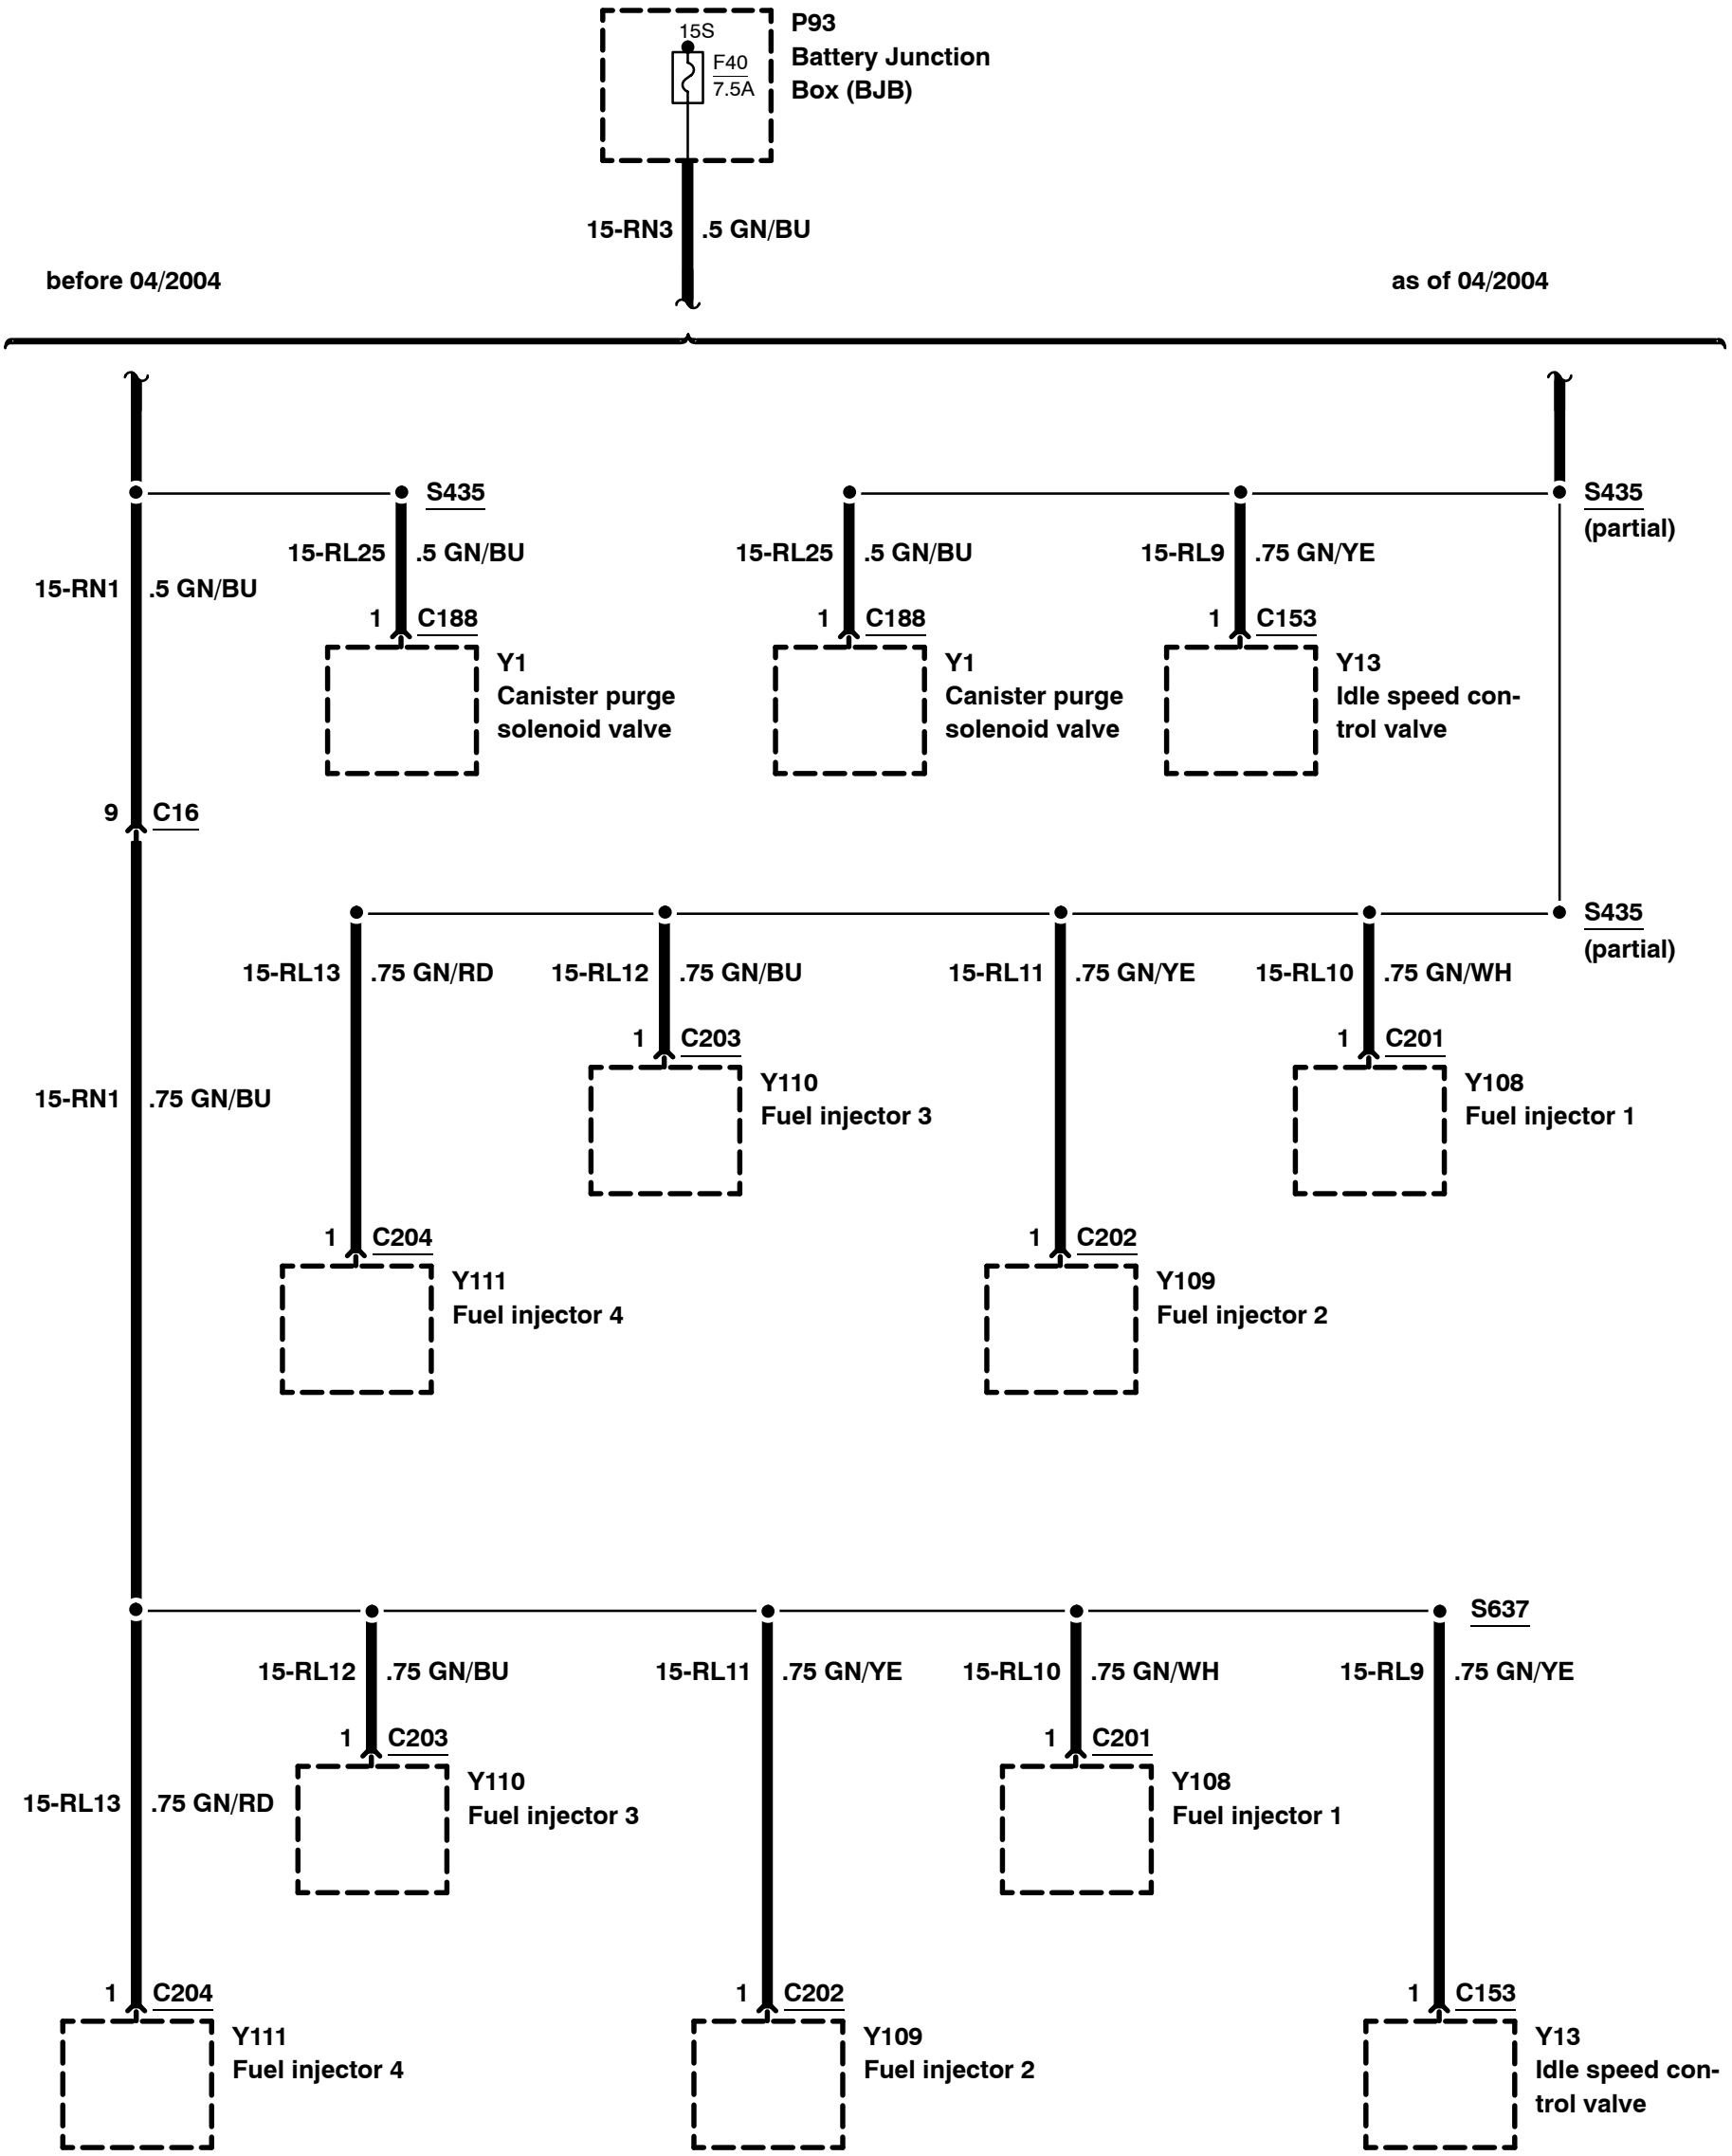


Fuse Details – F40, 2.5L Duratec–VE (VE6)

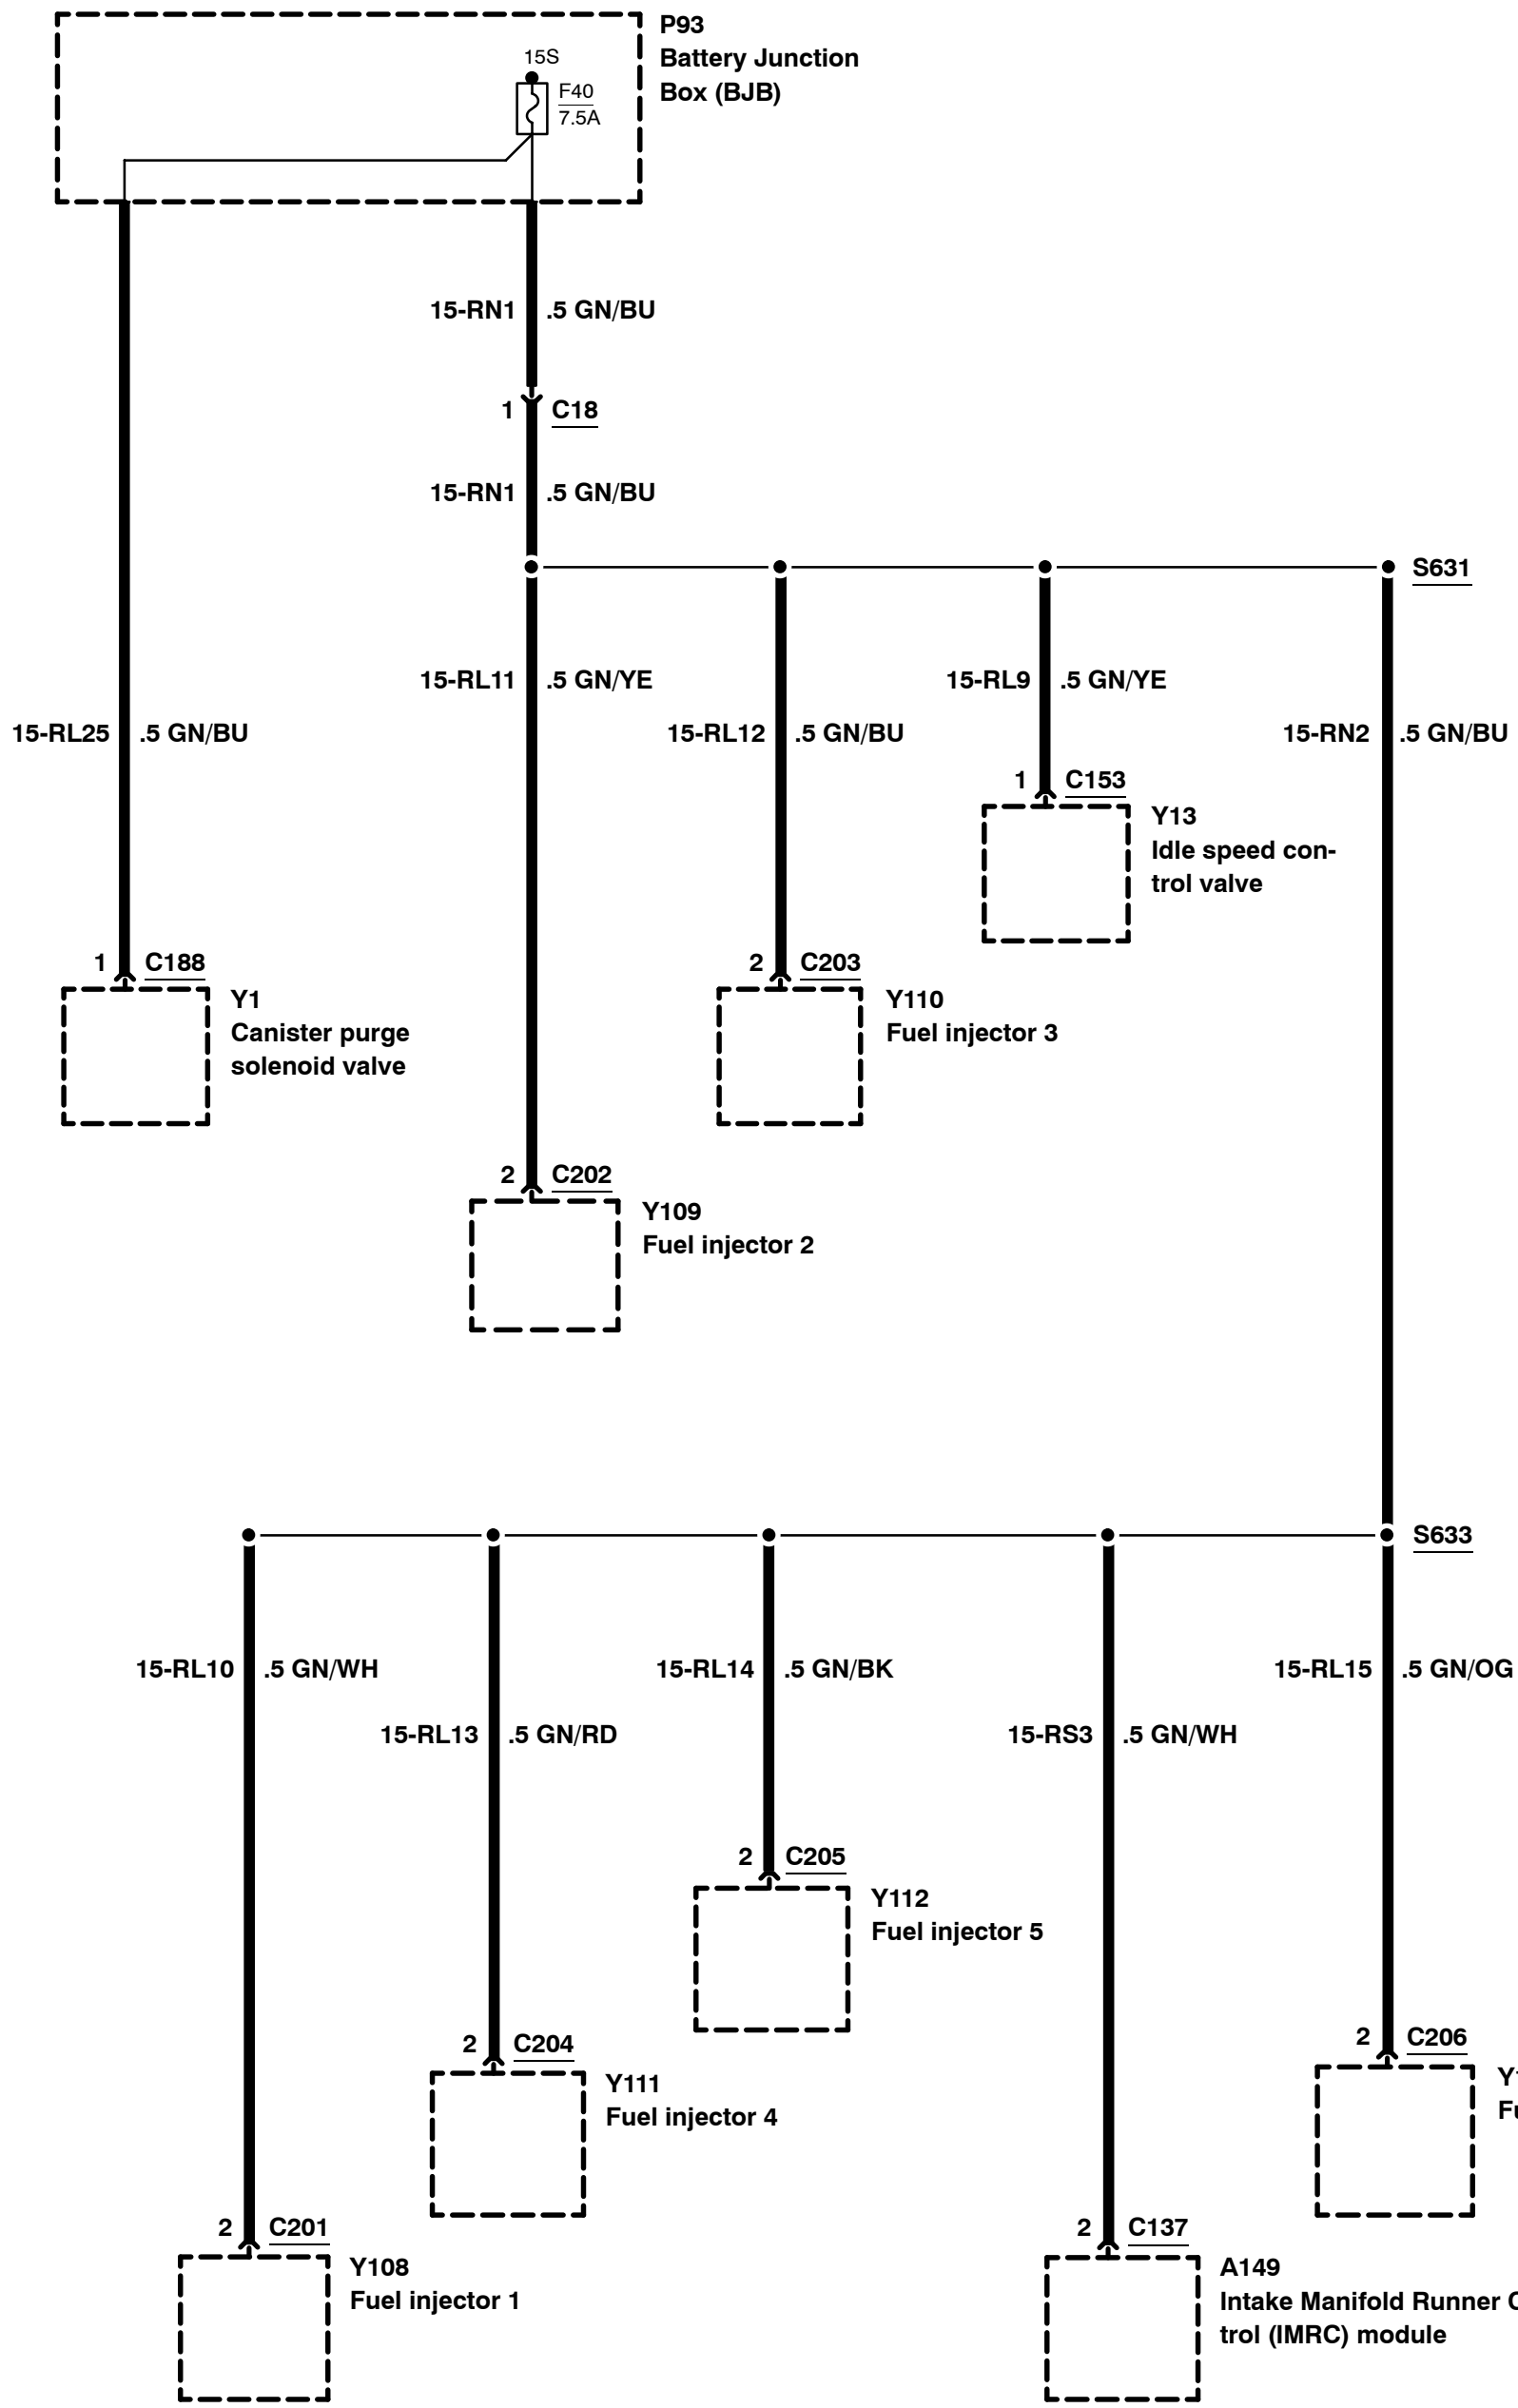


Fuse Details – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

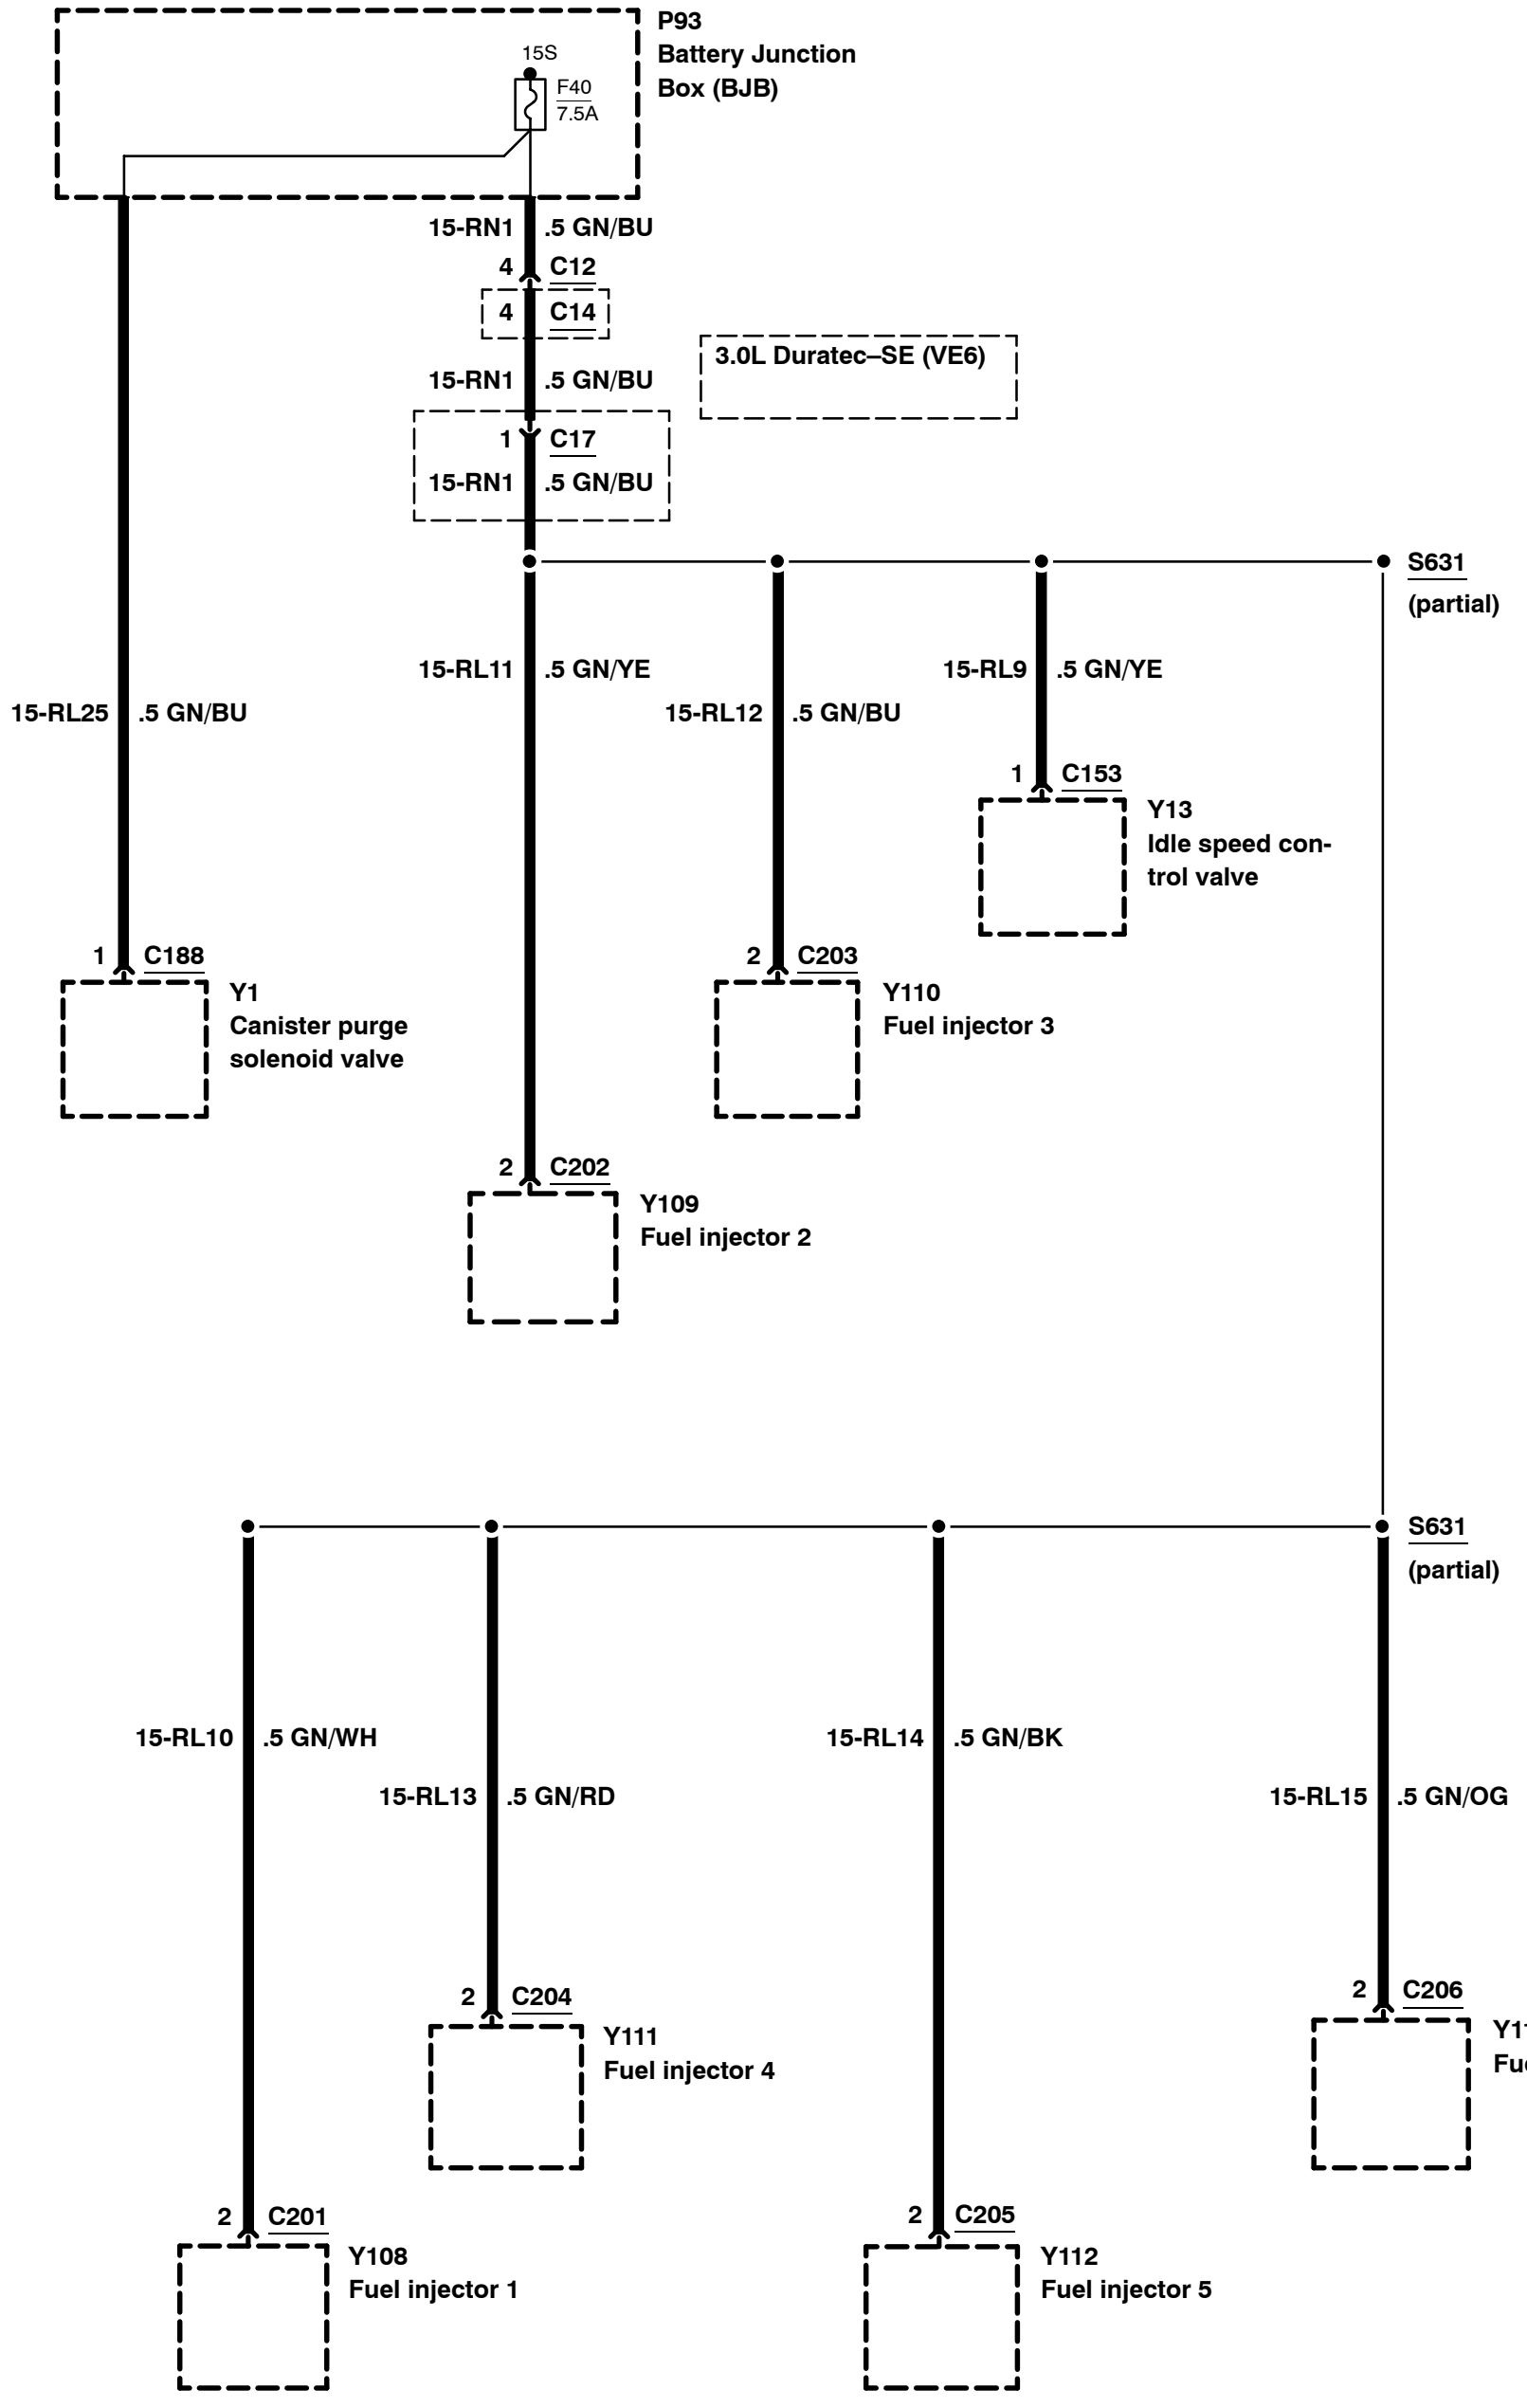


Fuse Details – F40, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

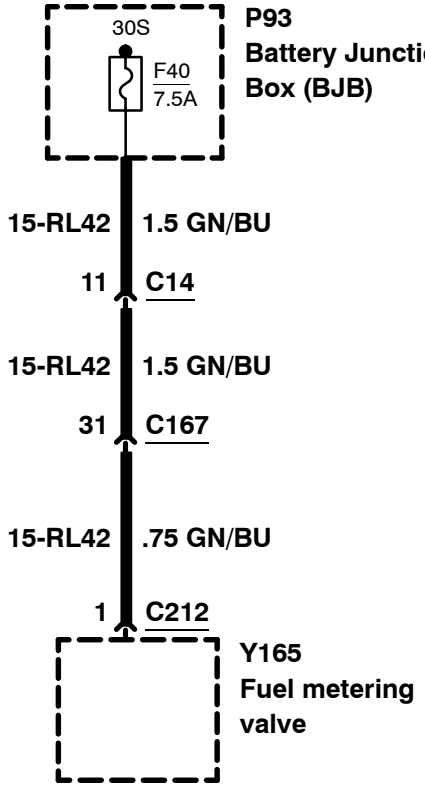


Fuse Details – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

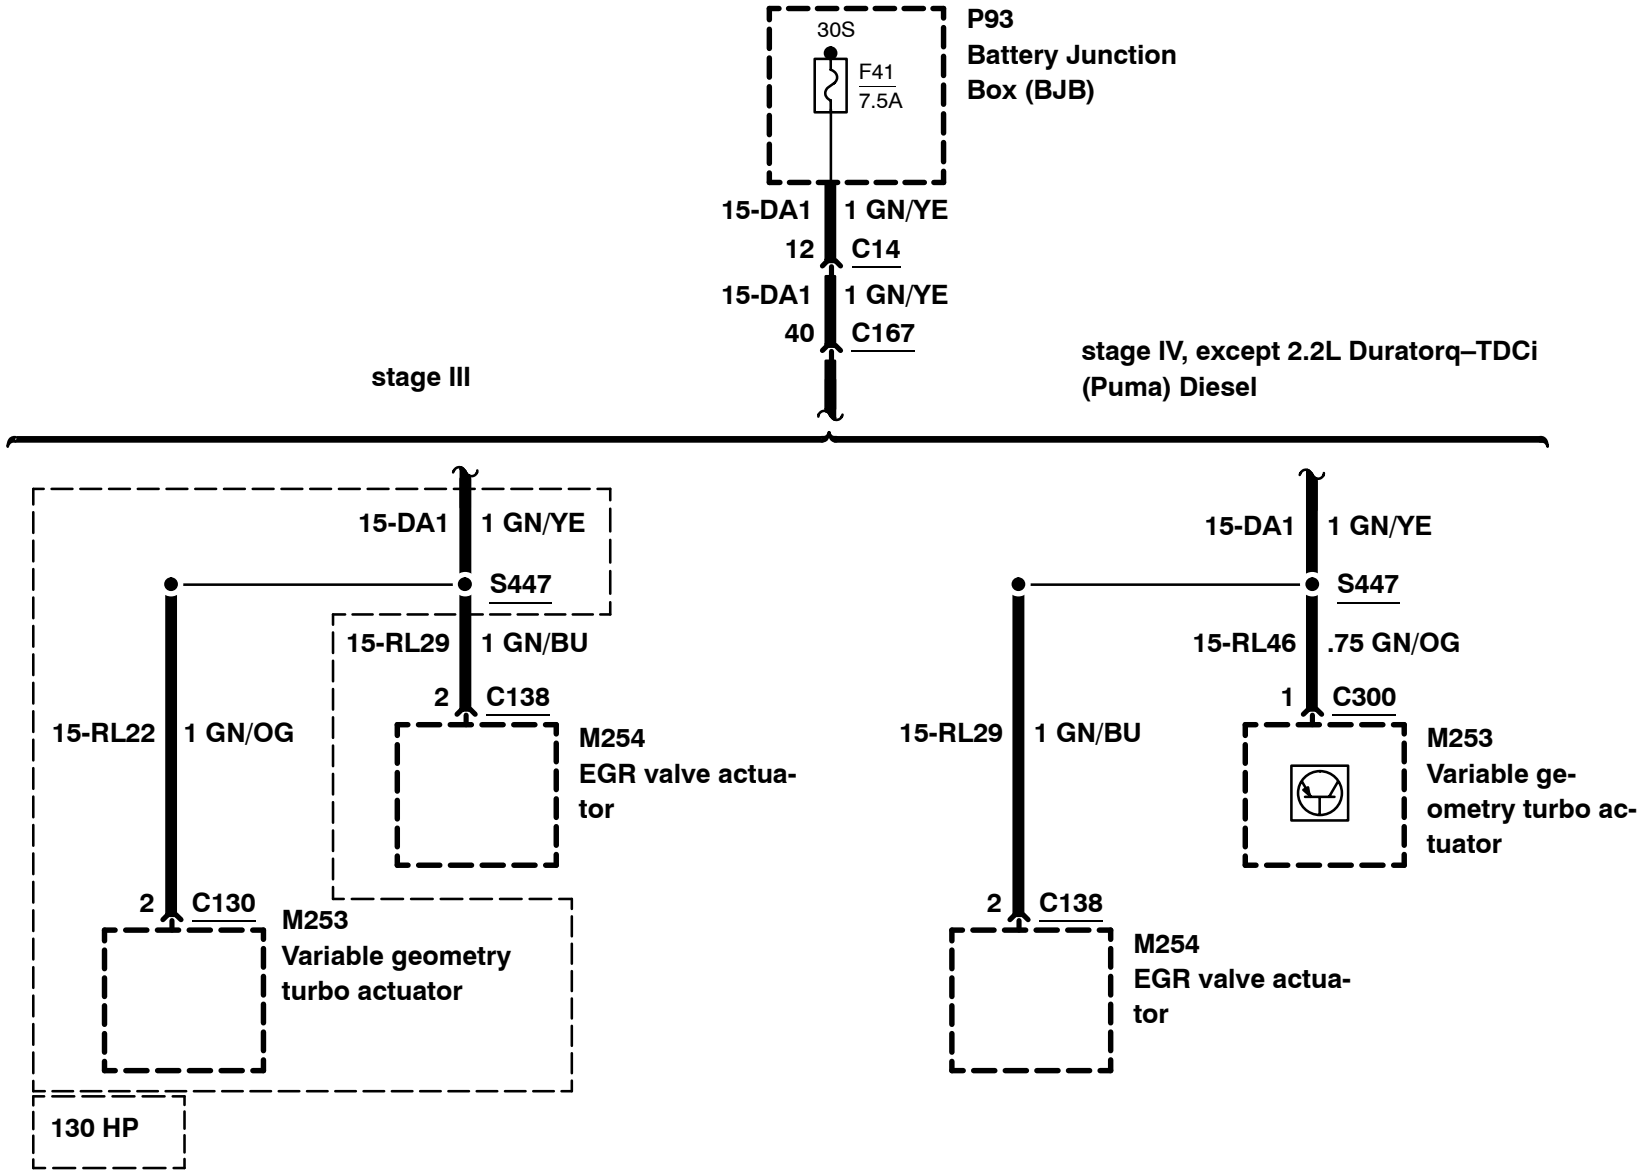


Fuse Details – F42, 1.8L Duratec–SCi (MI4)

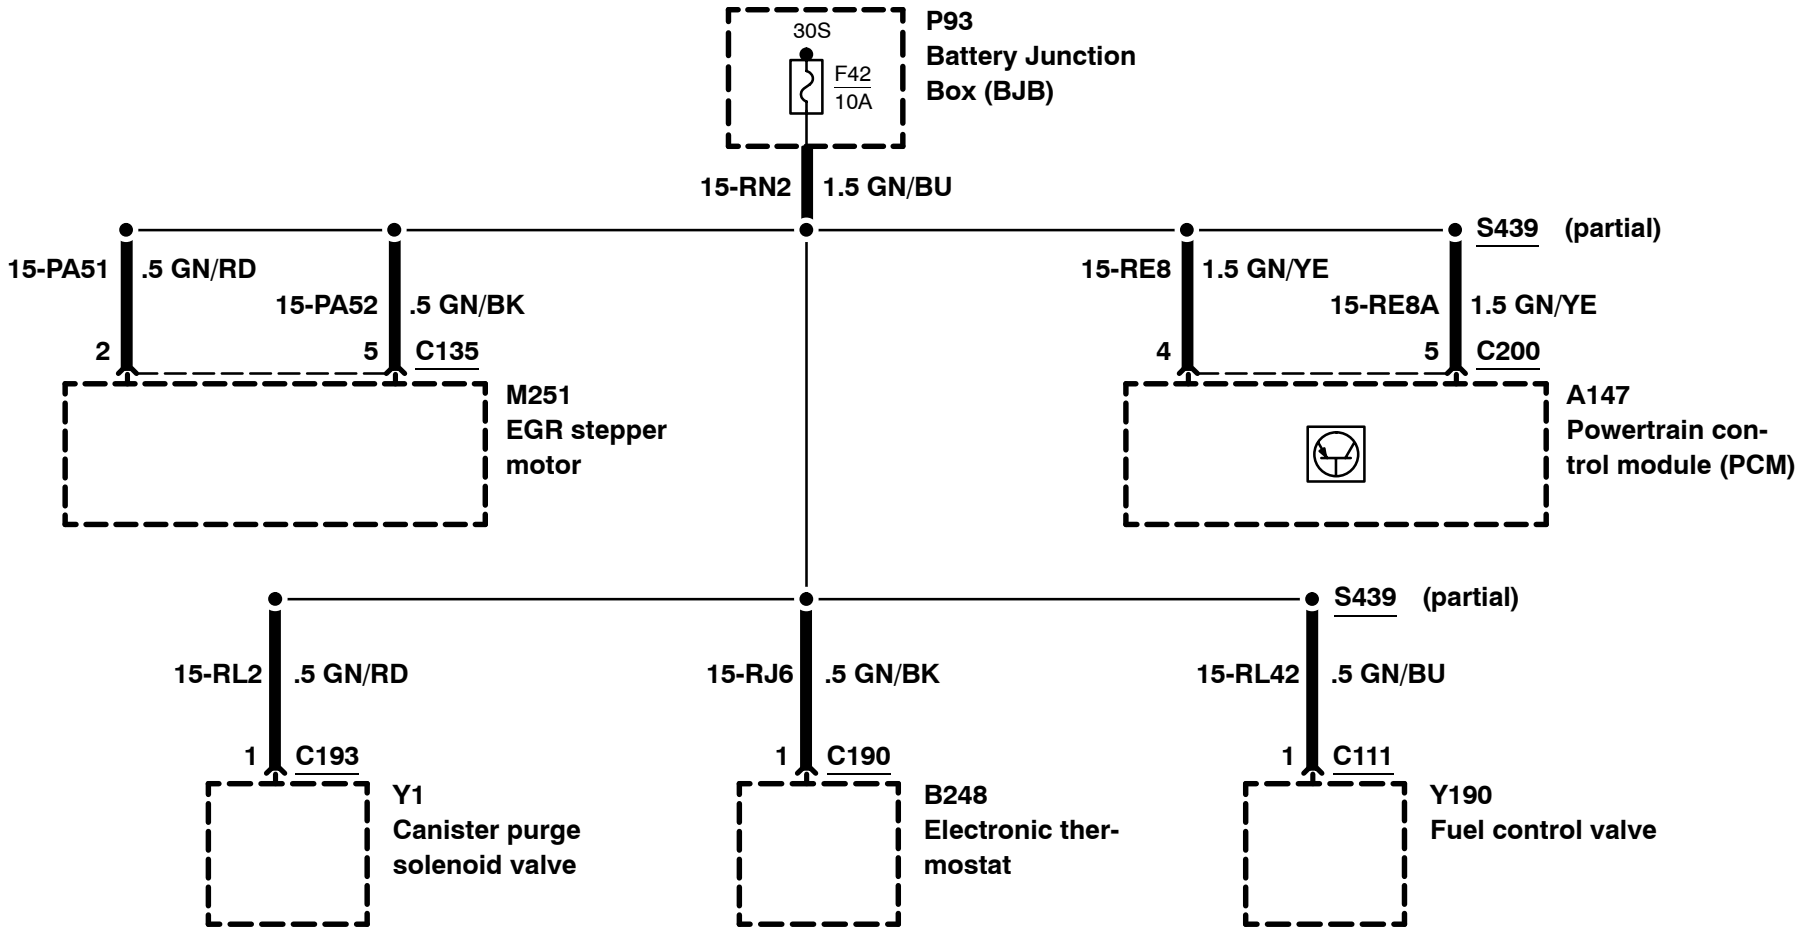


Fuse Details – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission

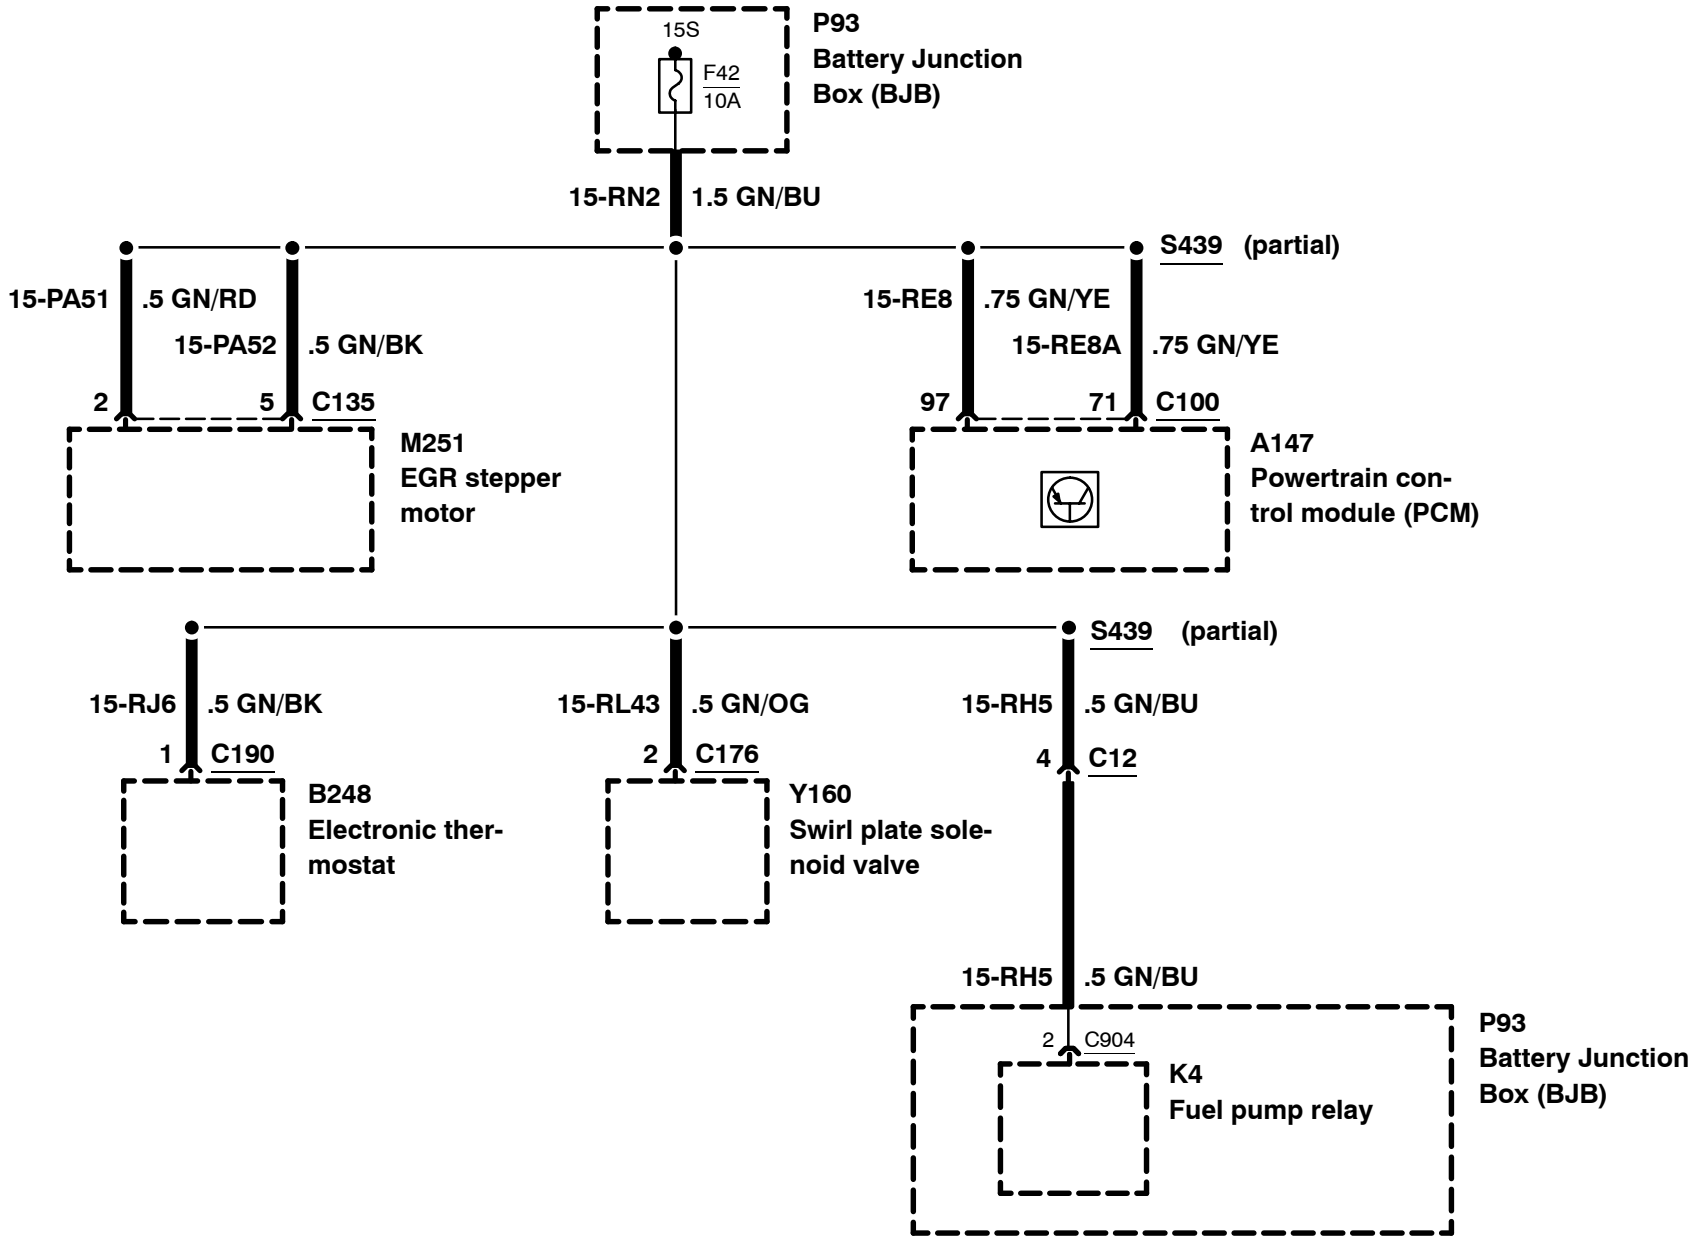


Fuse Details – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission

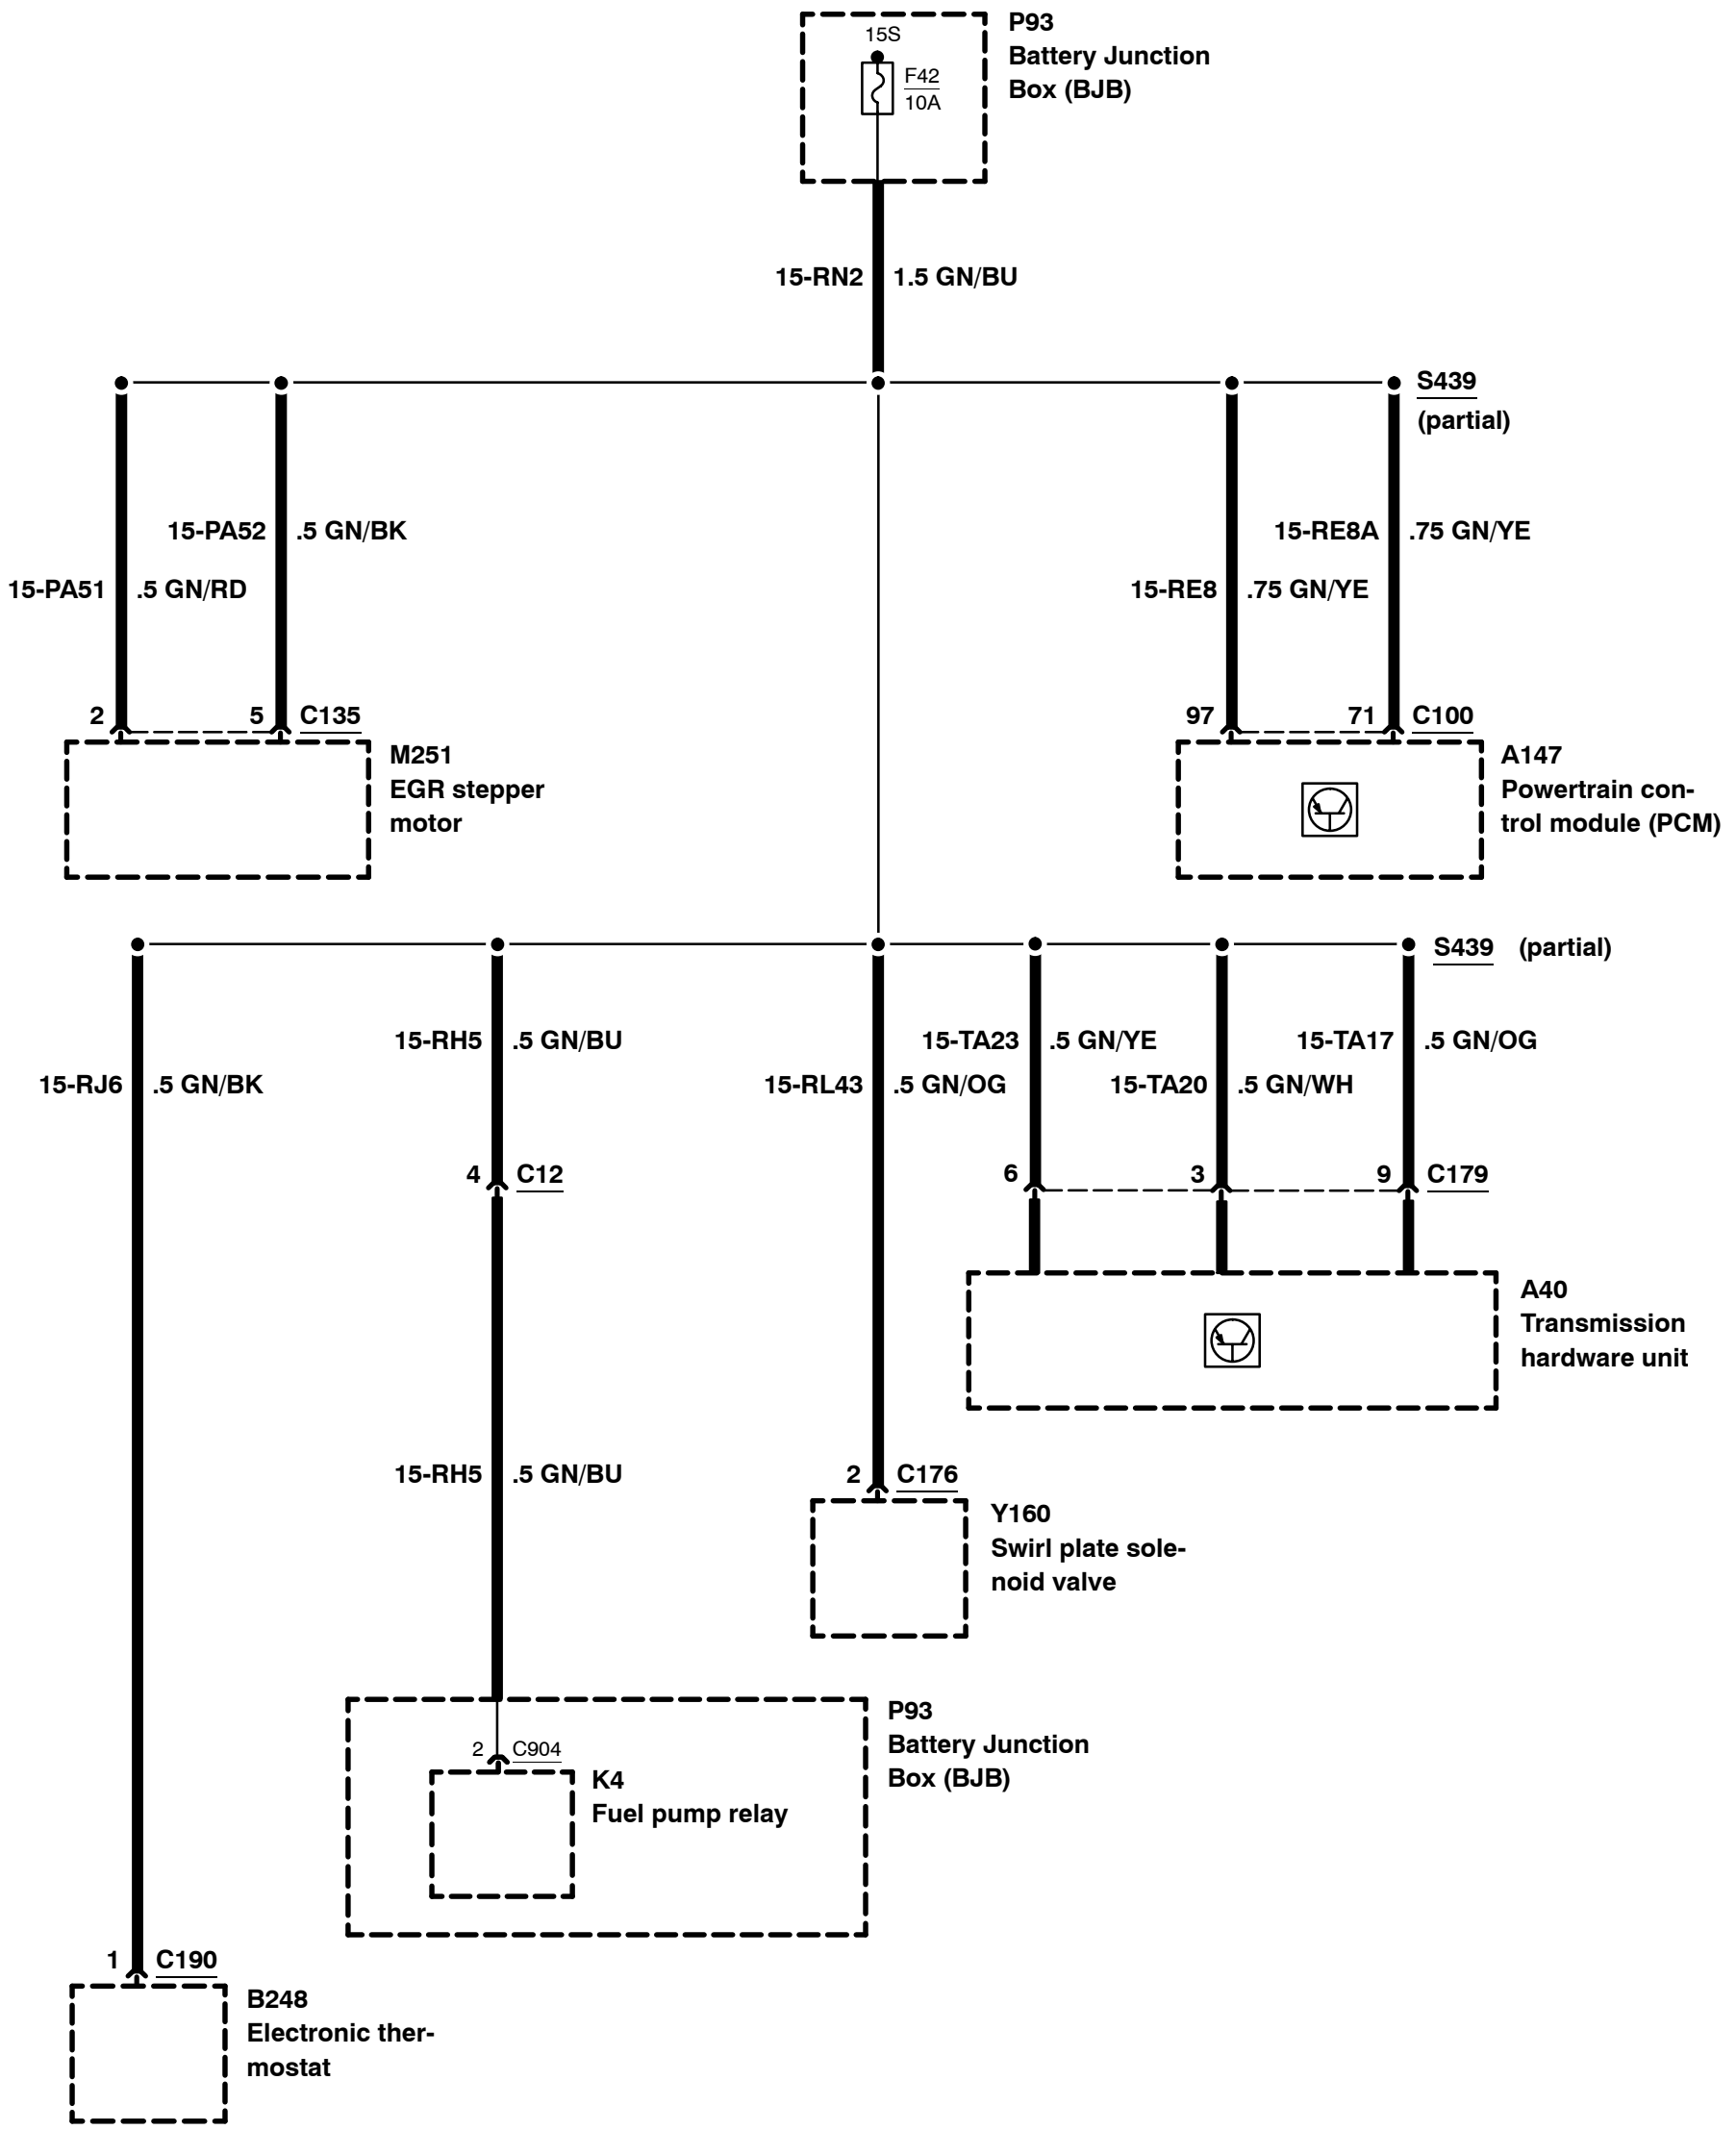


Fuse Details – F42, 2.5L Duratec–VE (VE6)

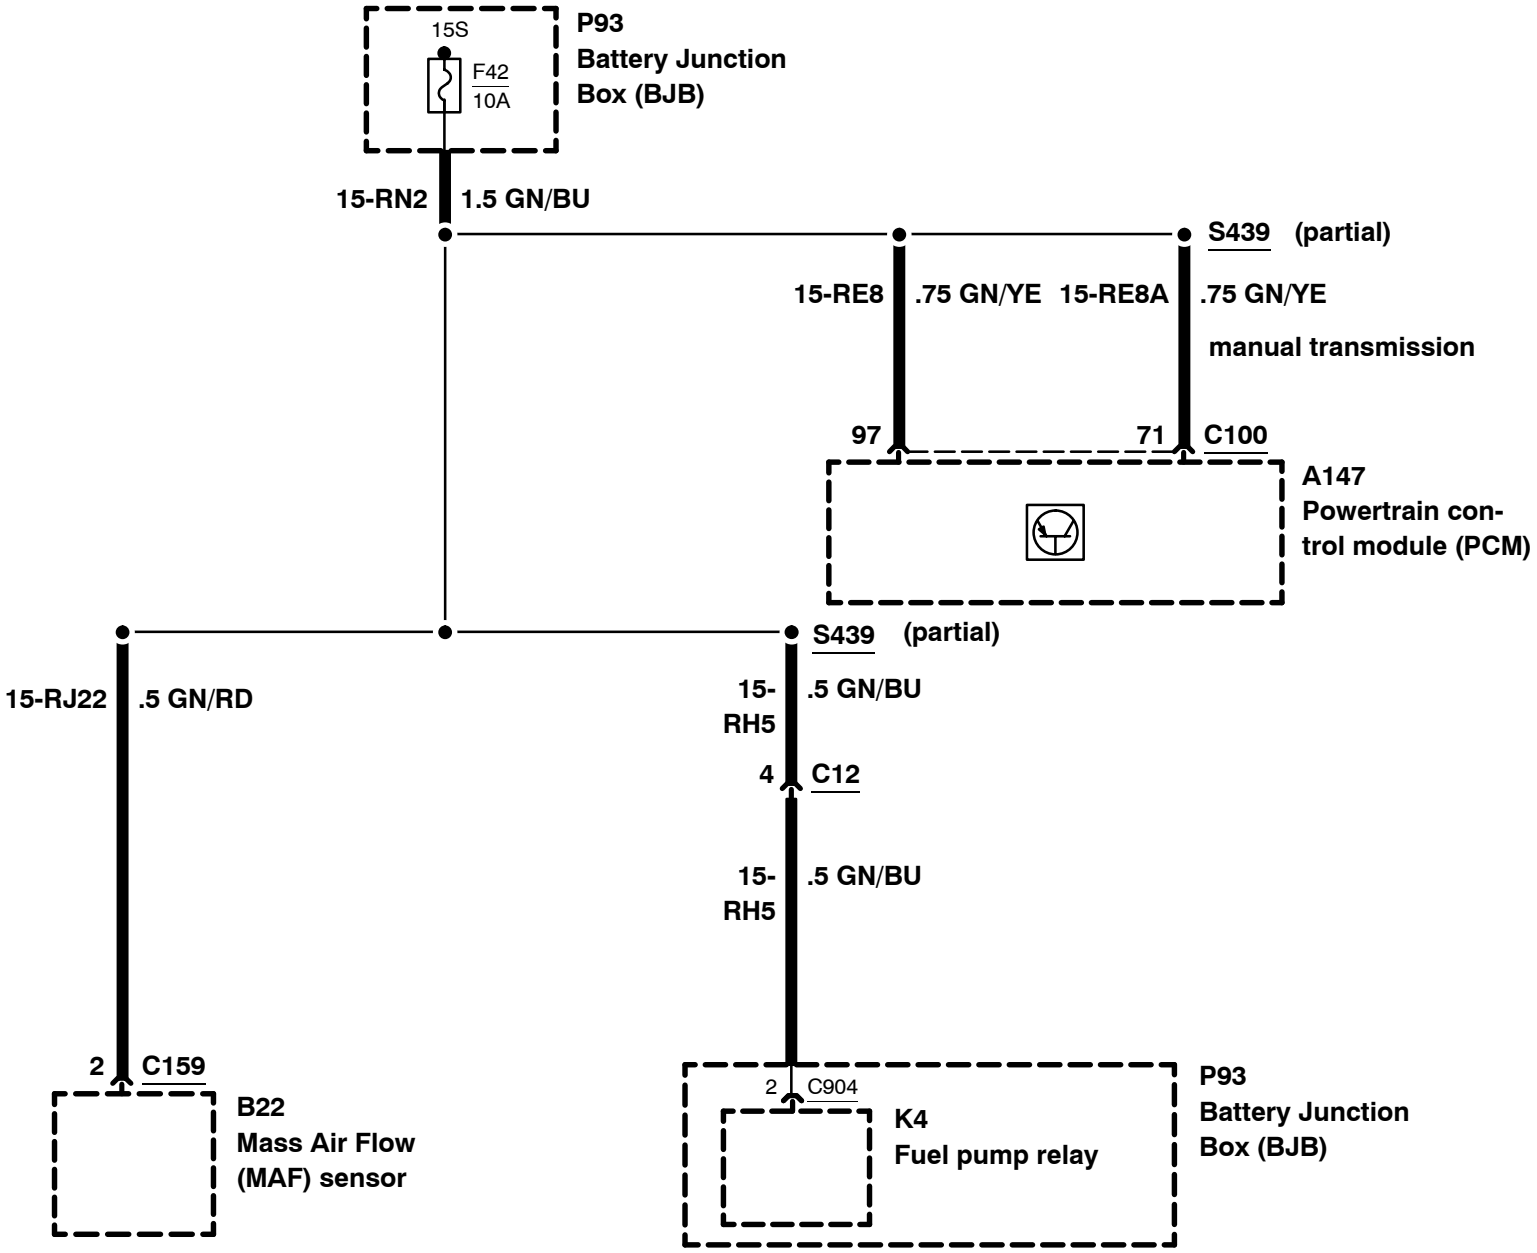


Fuse Details – F42, 3.0L Duratec–SE (VE6)

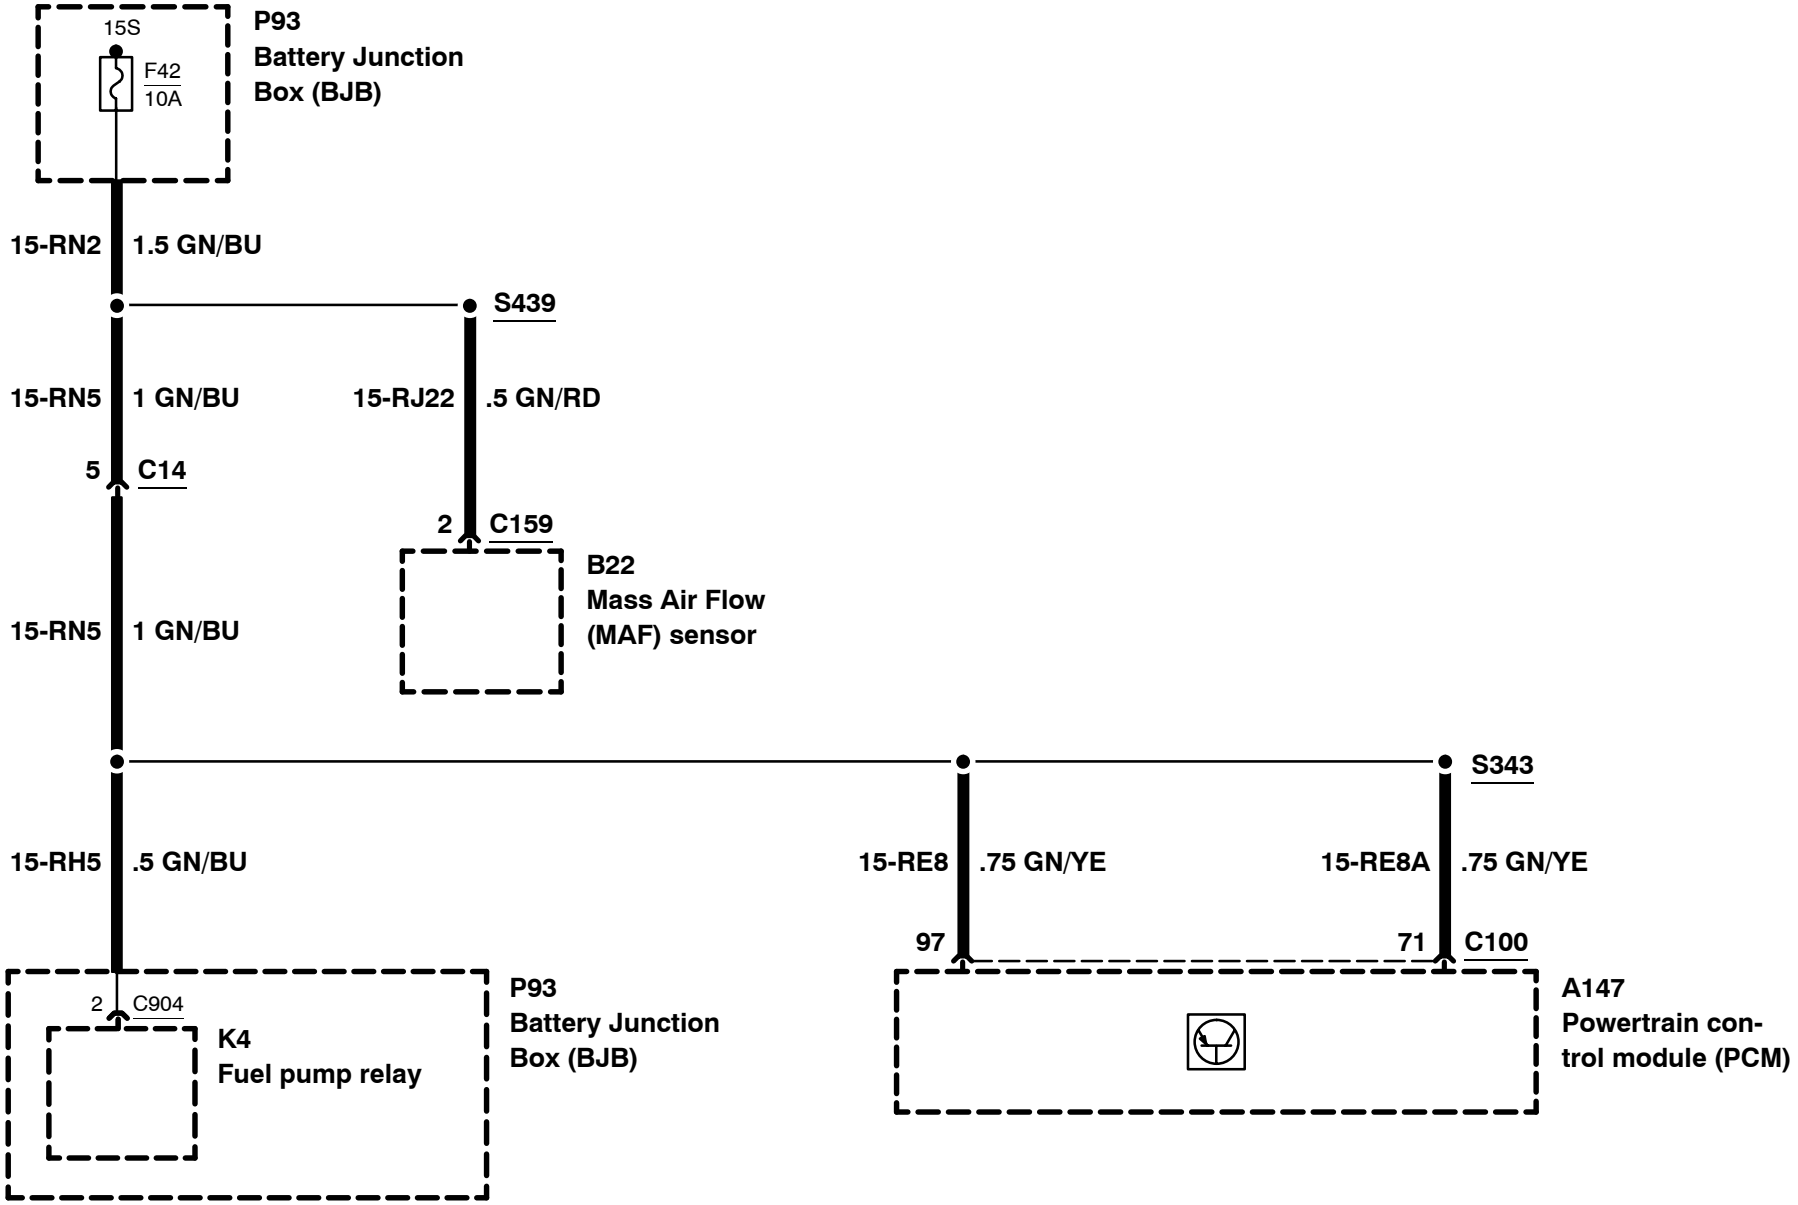


Fuse Details – F42, 3.0L Duratec–ST (VE6), before 04/2004

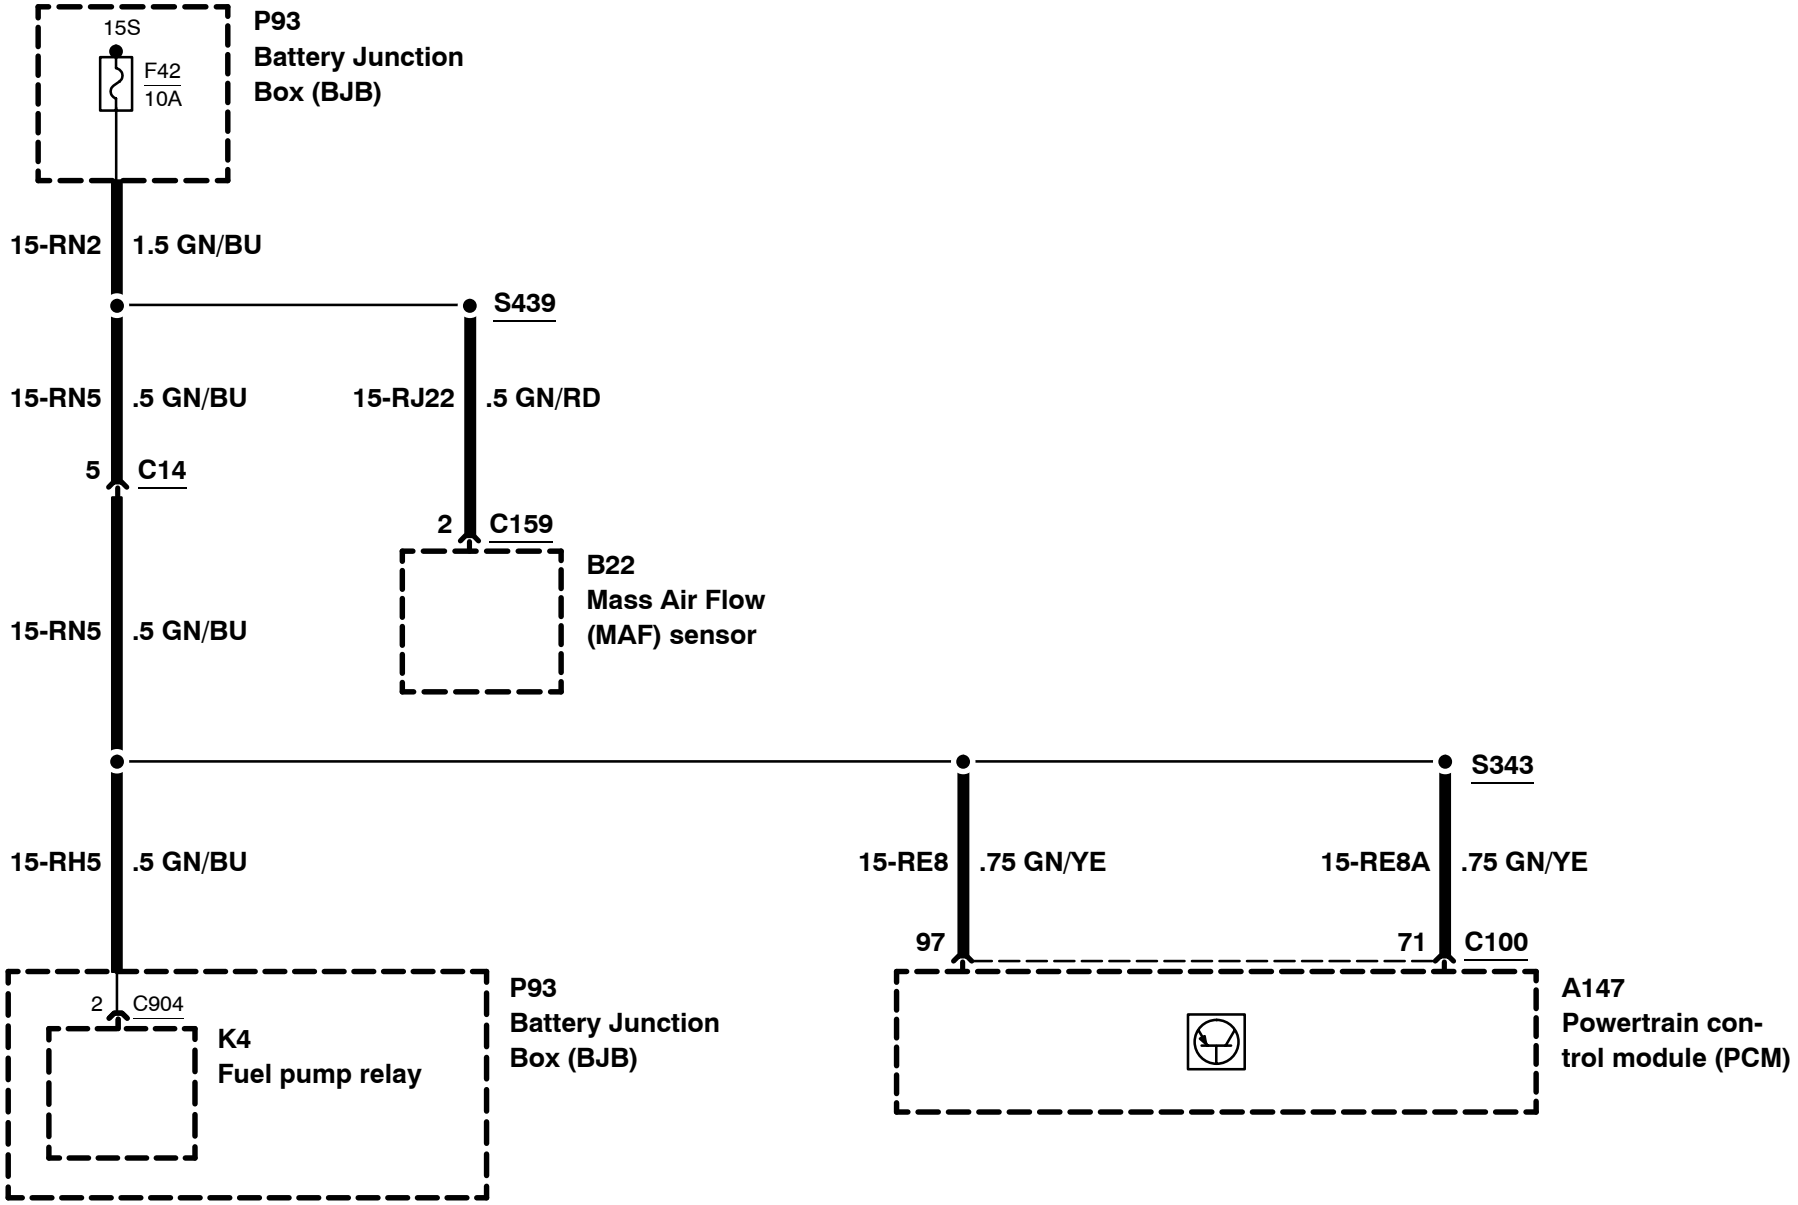


Fuse Details – F42, 3.0L Duratec–ST (VE6), as of 04/2004

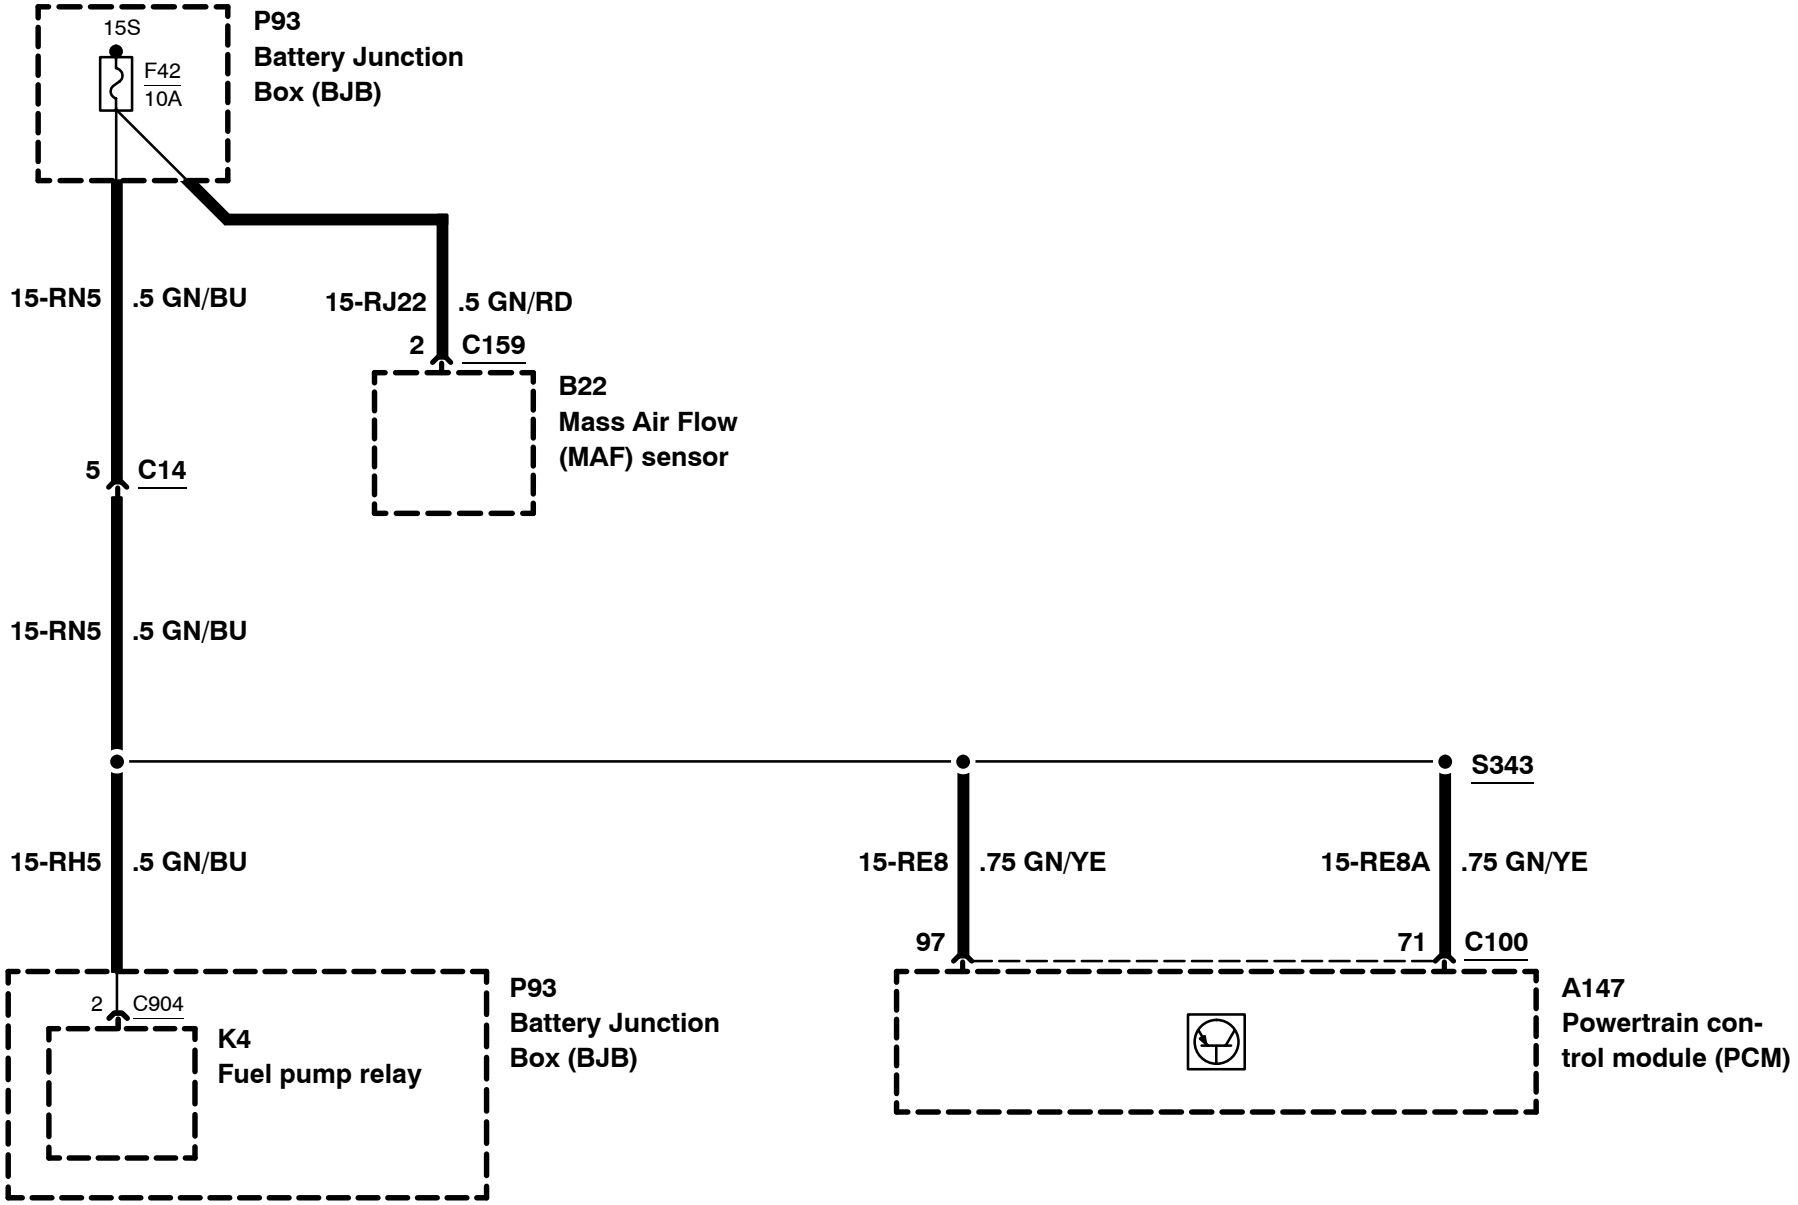


Fuse Details – F42, Diesel engines

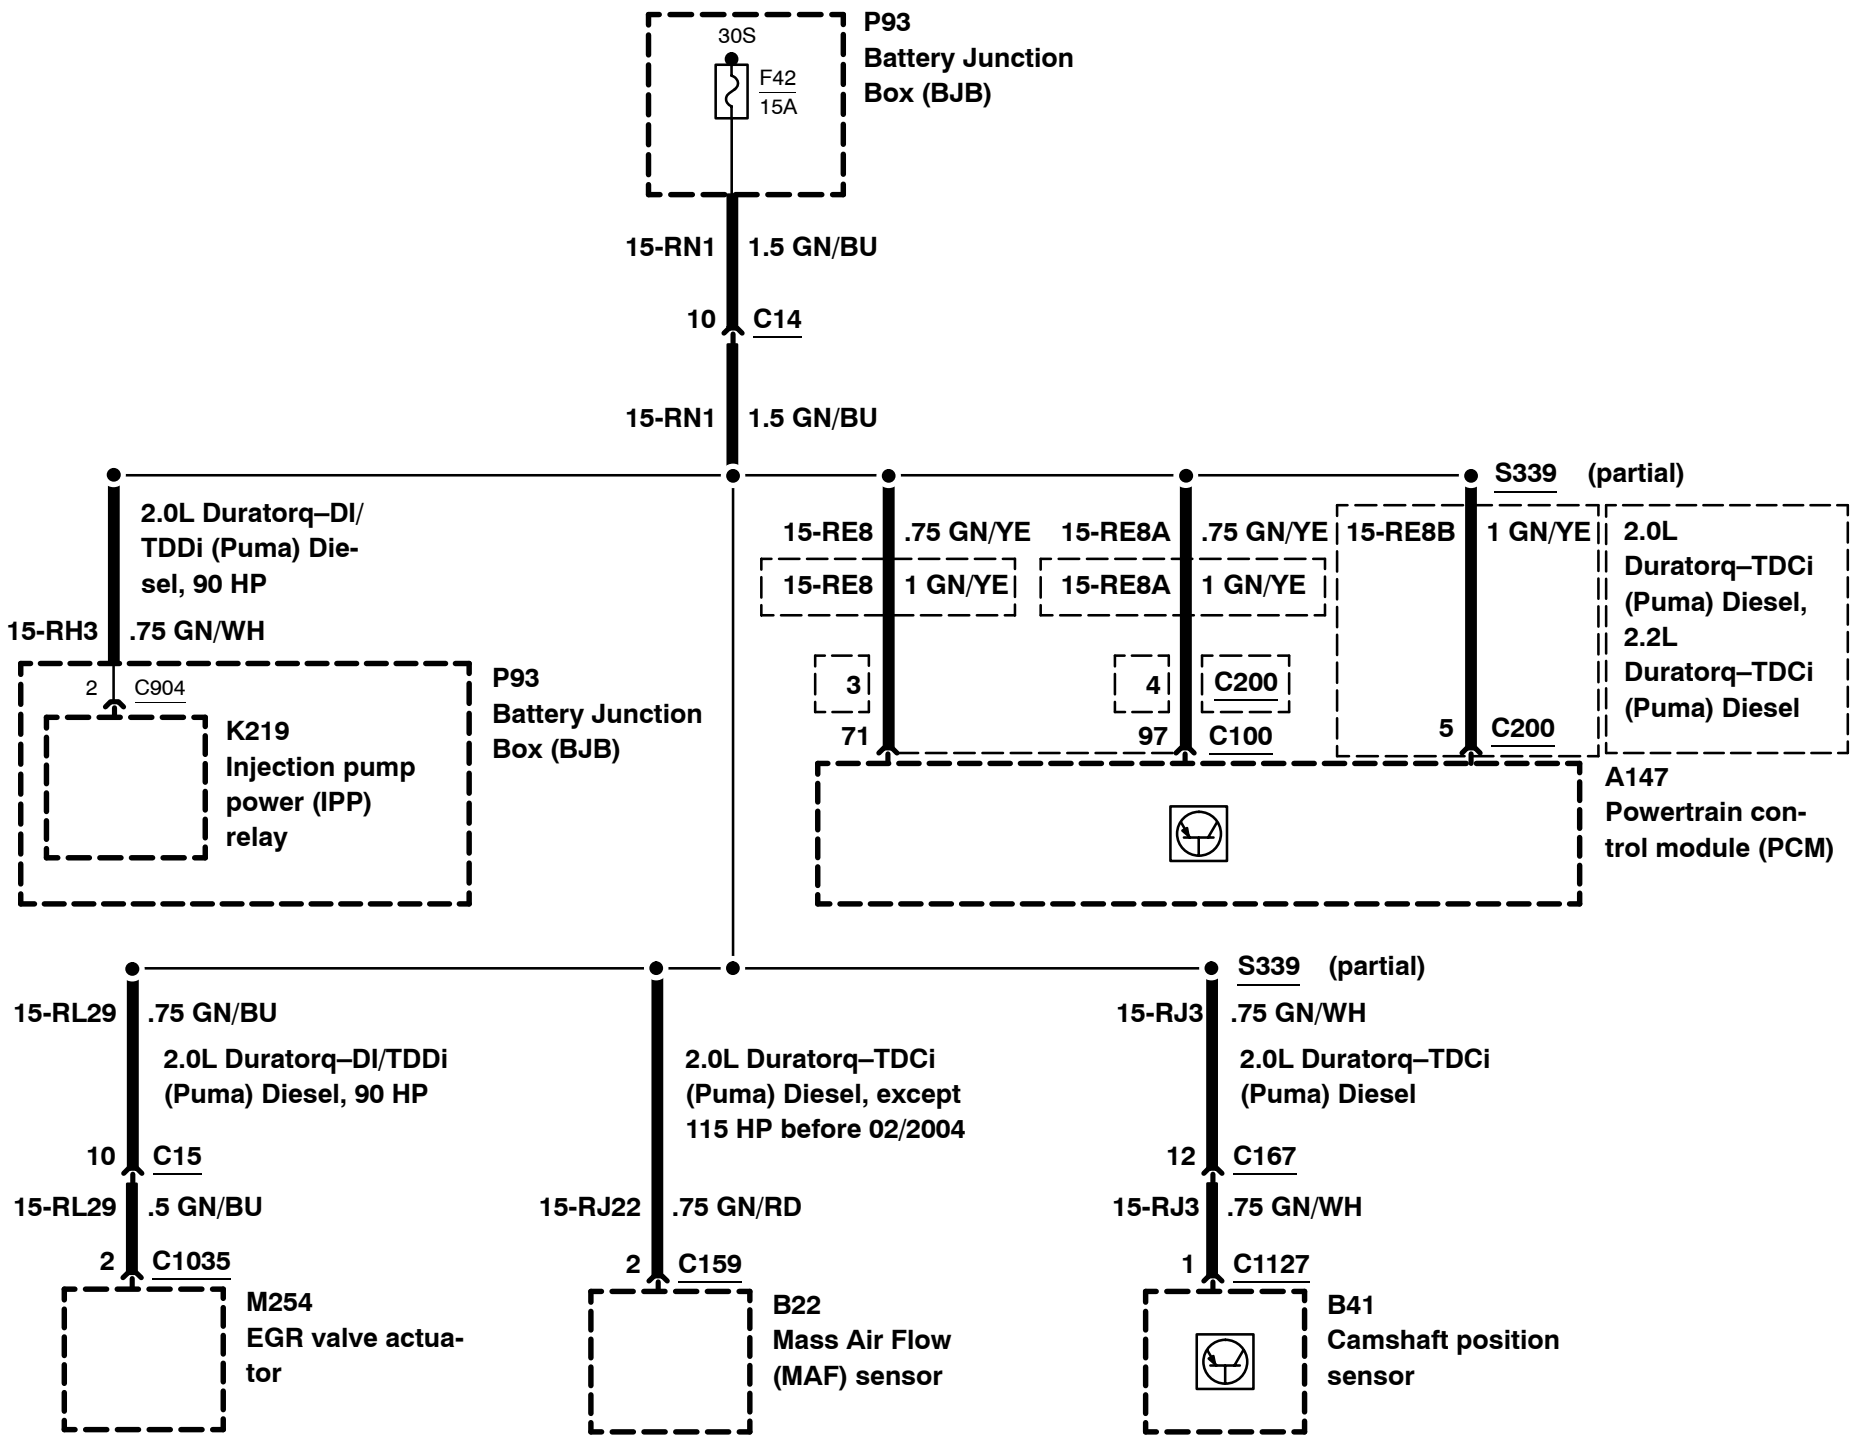


Fuse Details – F60

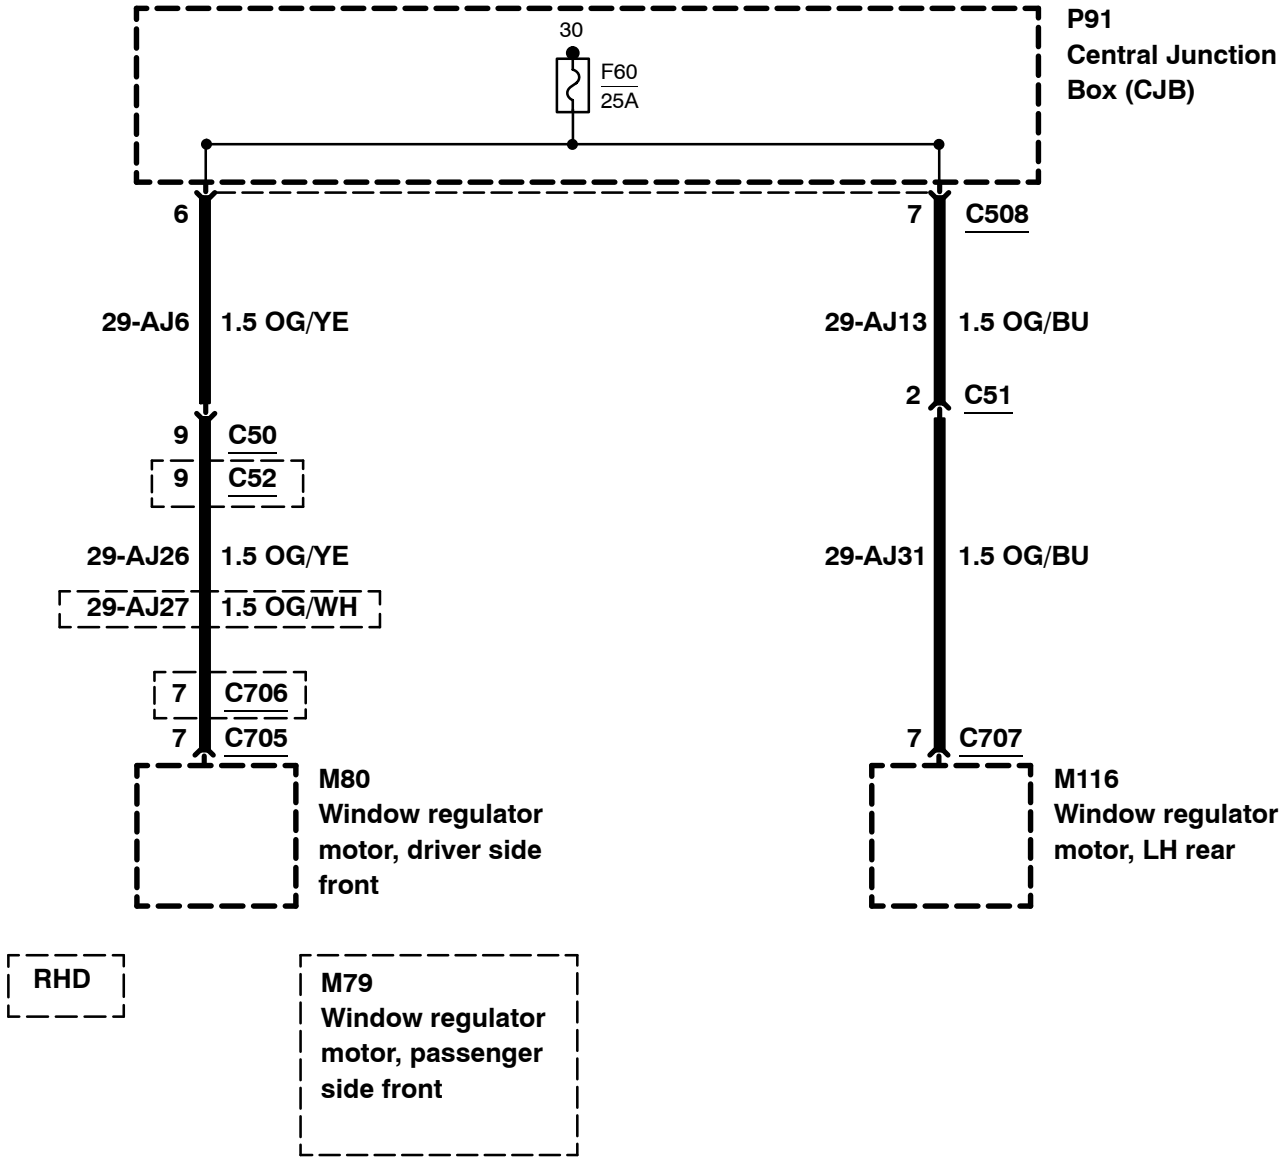


Fuse Details – F61

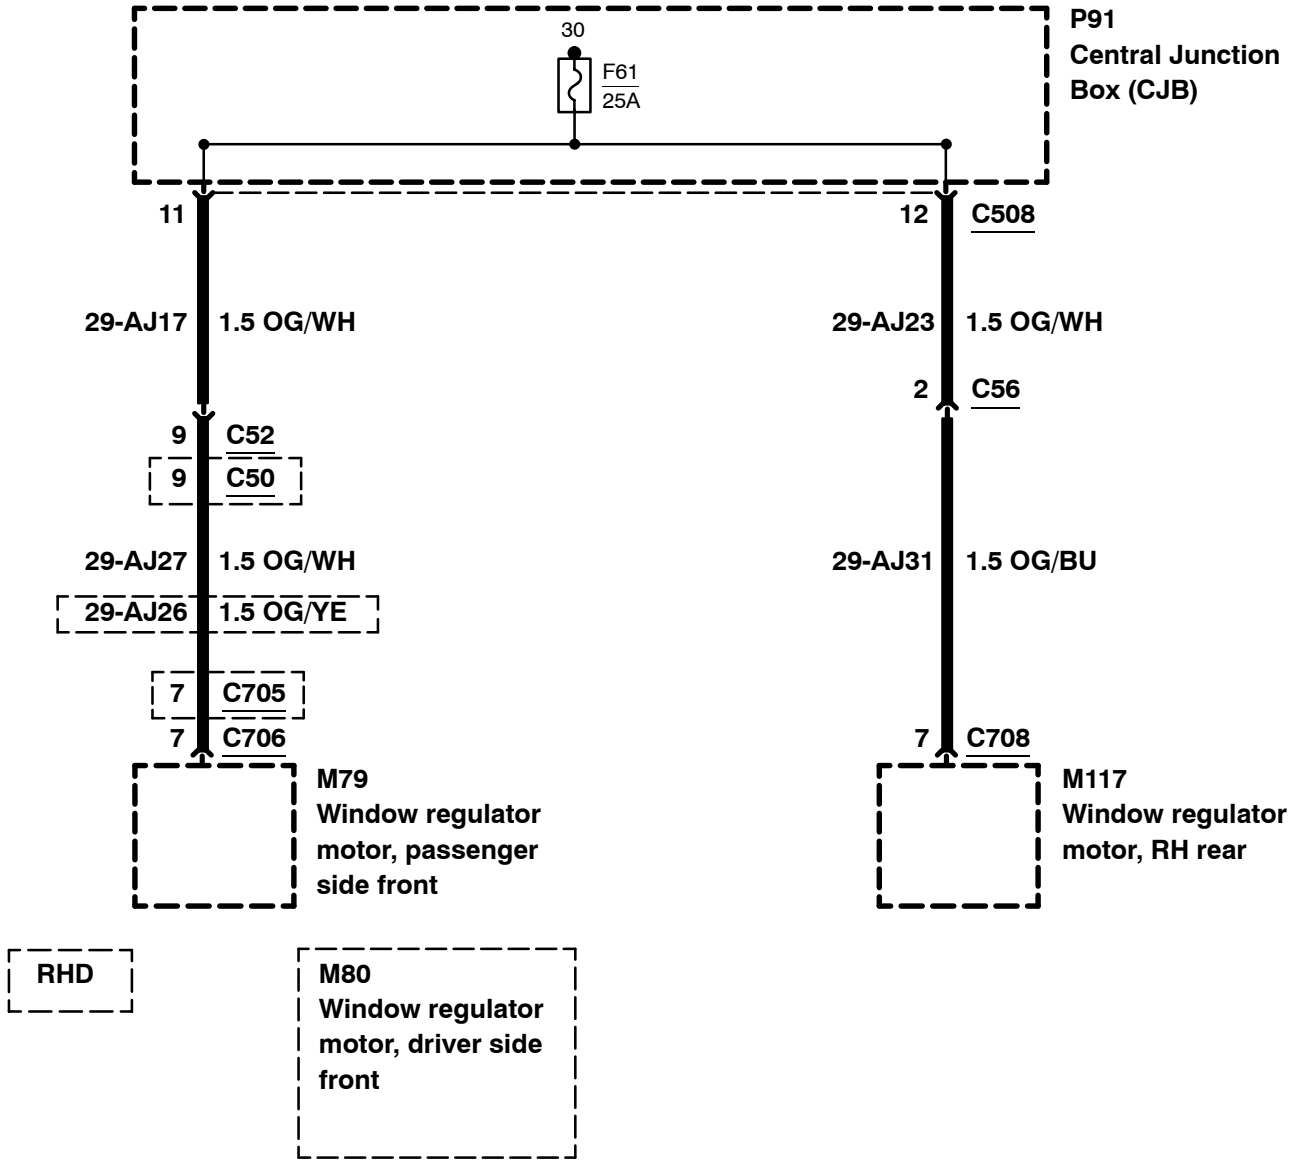


Fuse Details – F62

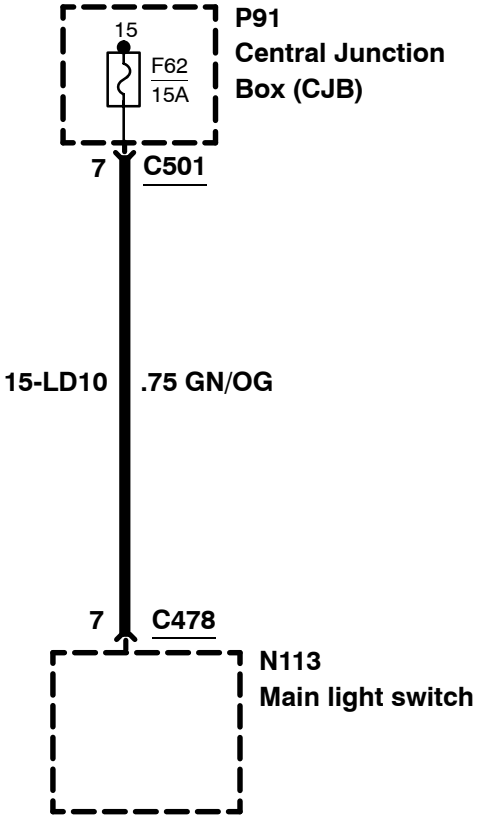


Fuse Details – F63, 4–door model/5–door model

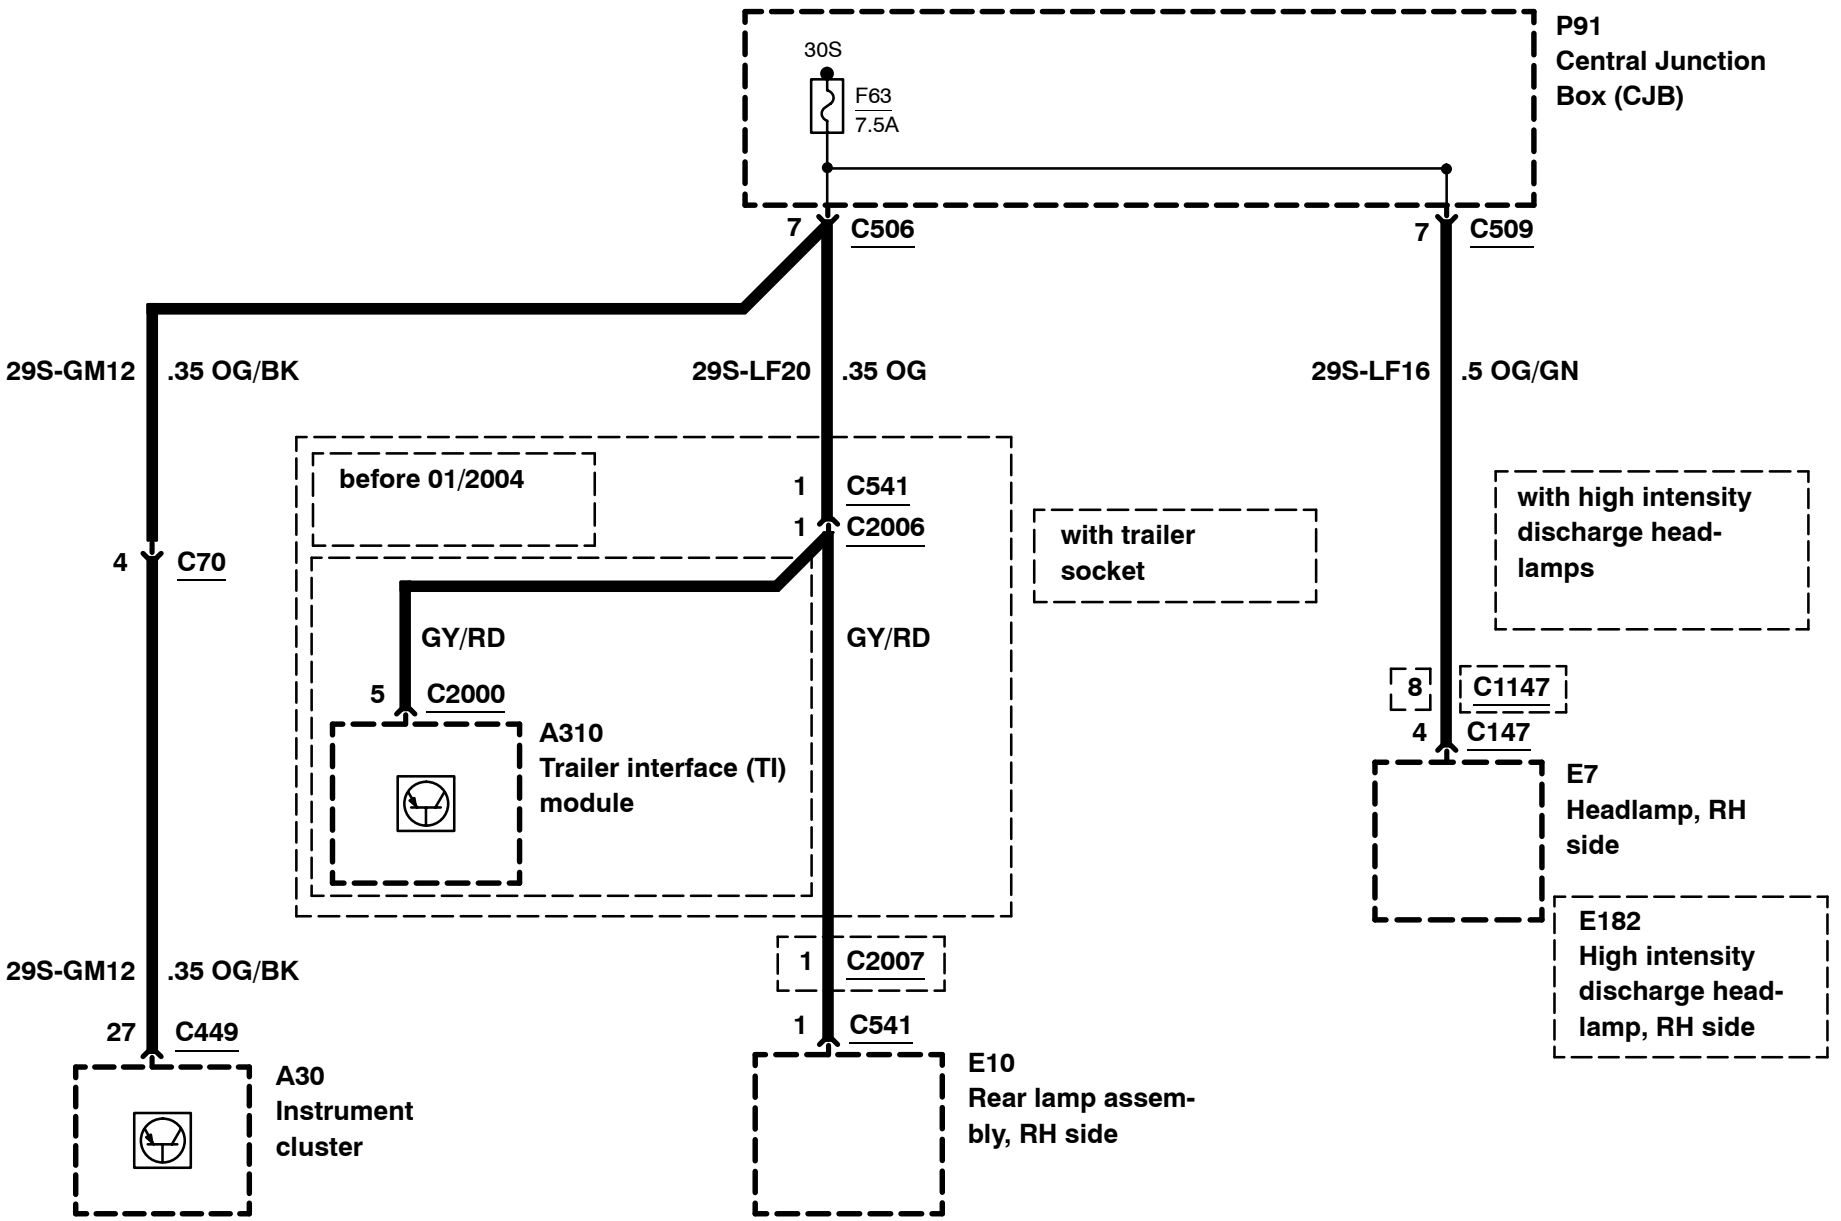


Fuse Details – F63, wagon

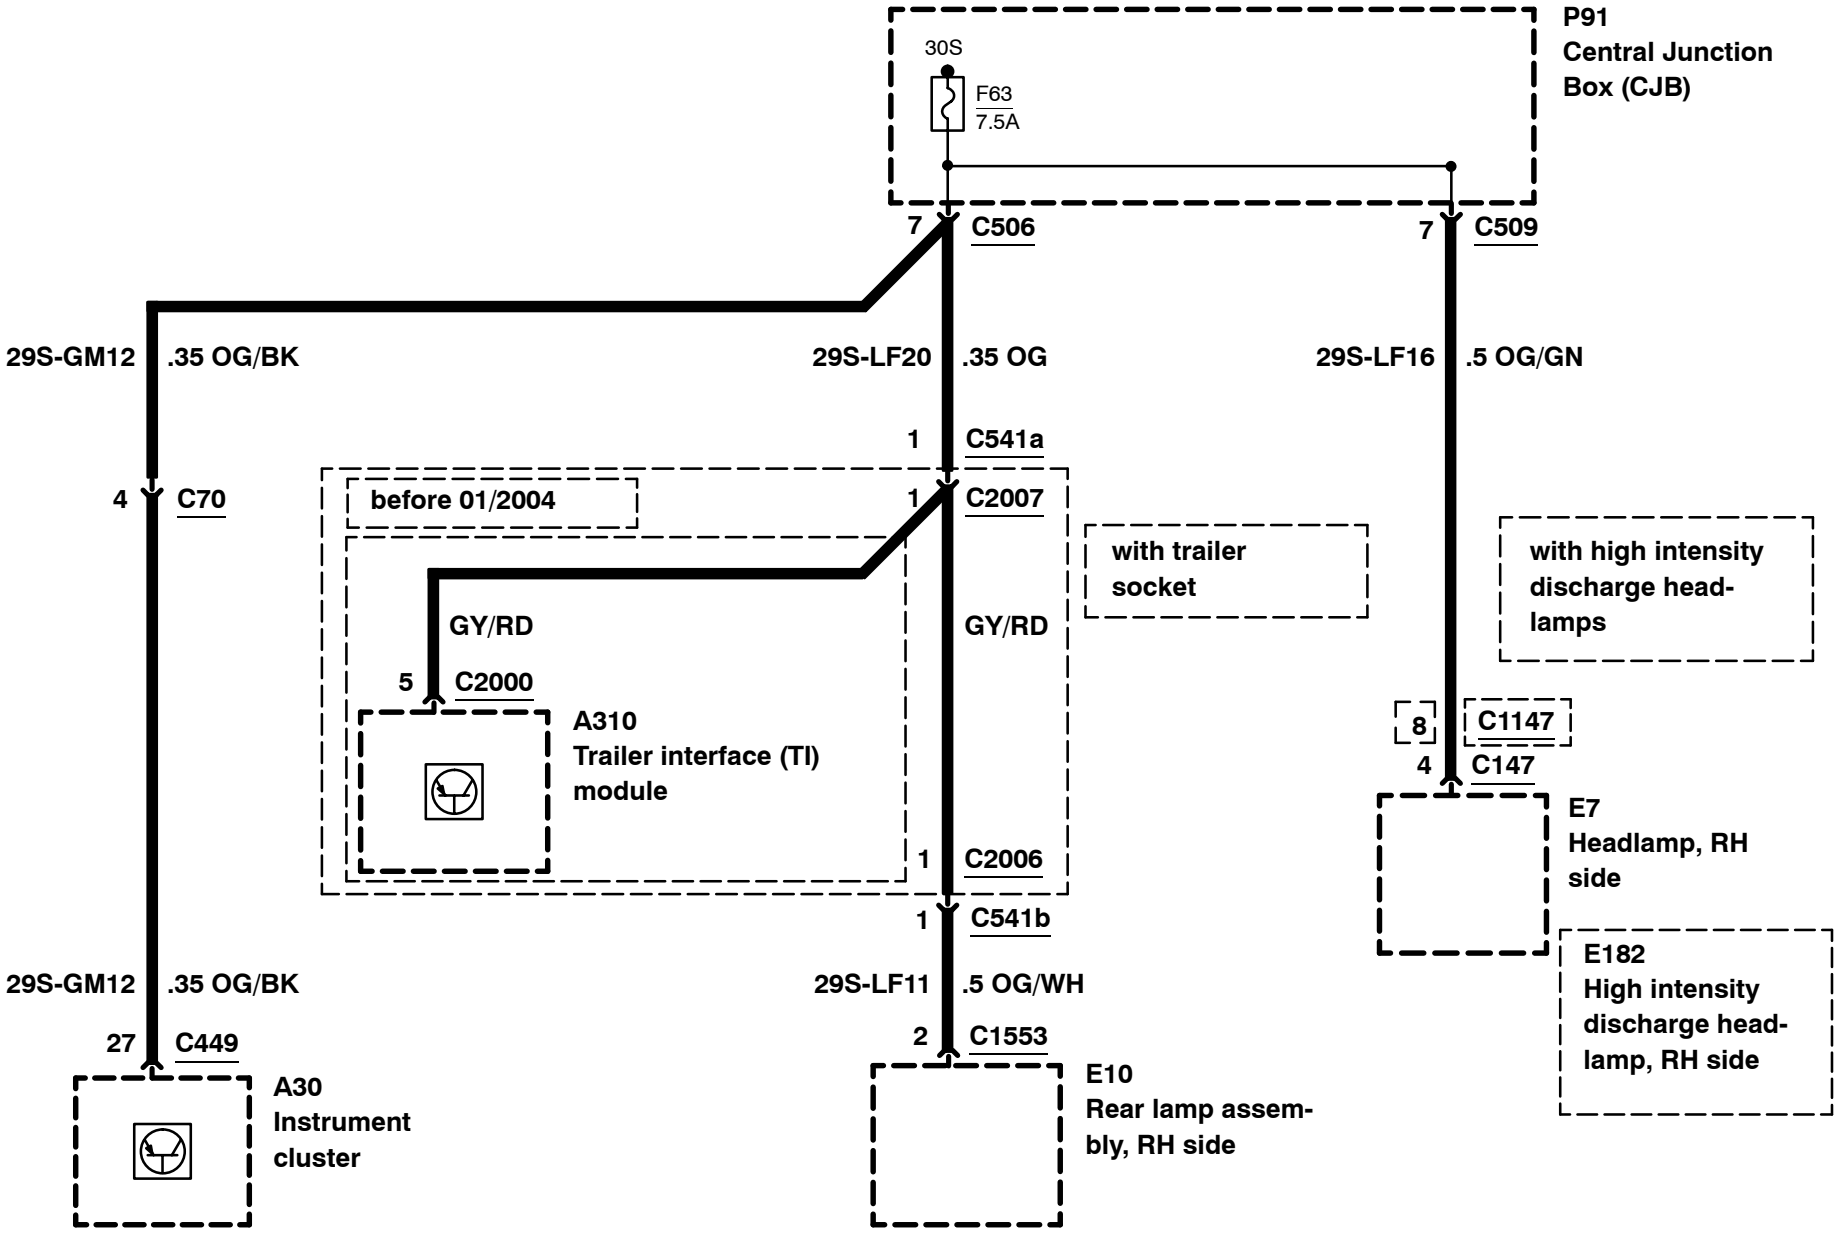


Fuse Details – F64, without trailer socket, 4–door model/5–door model

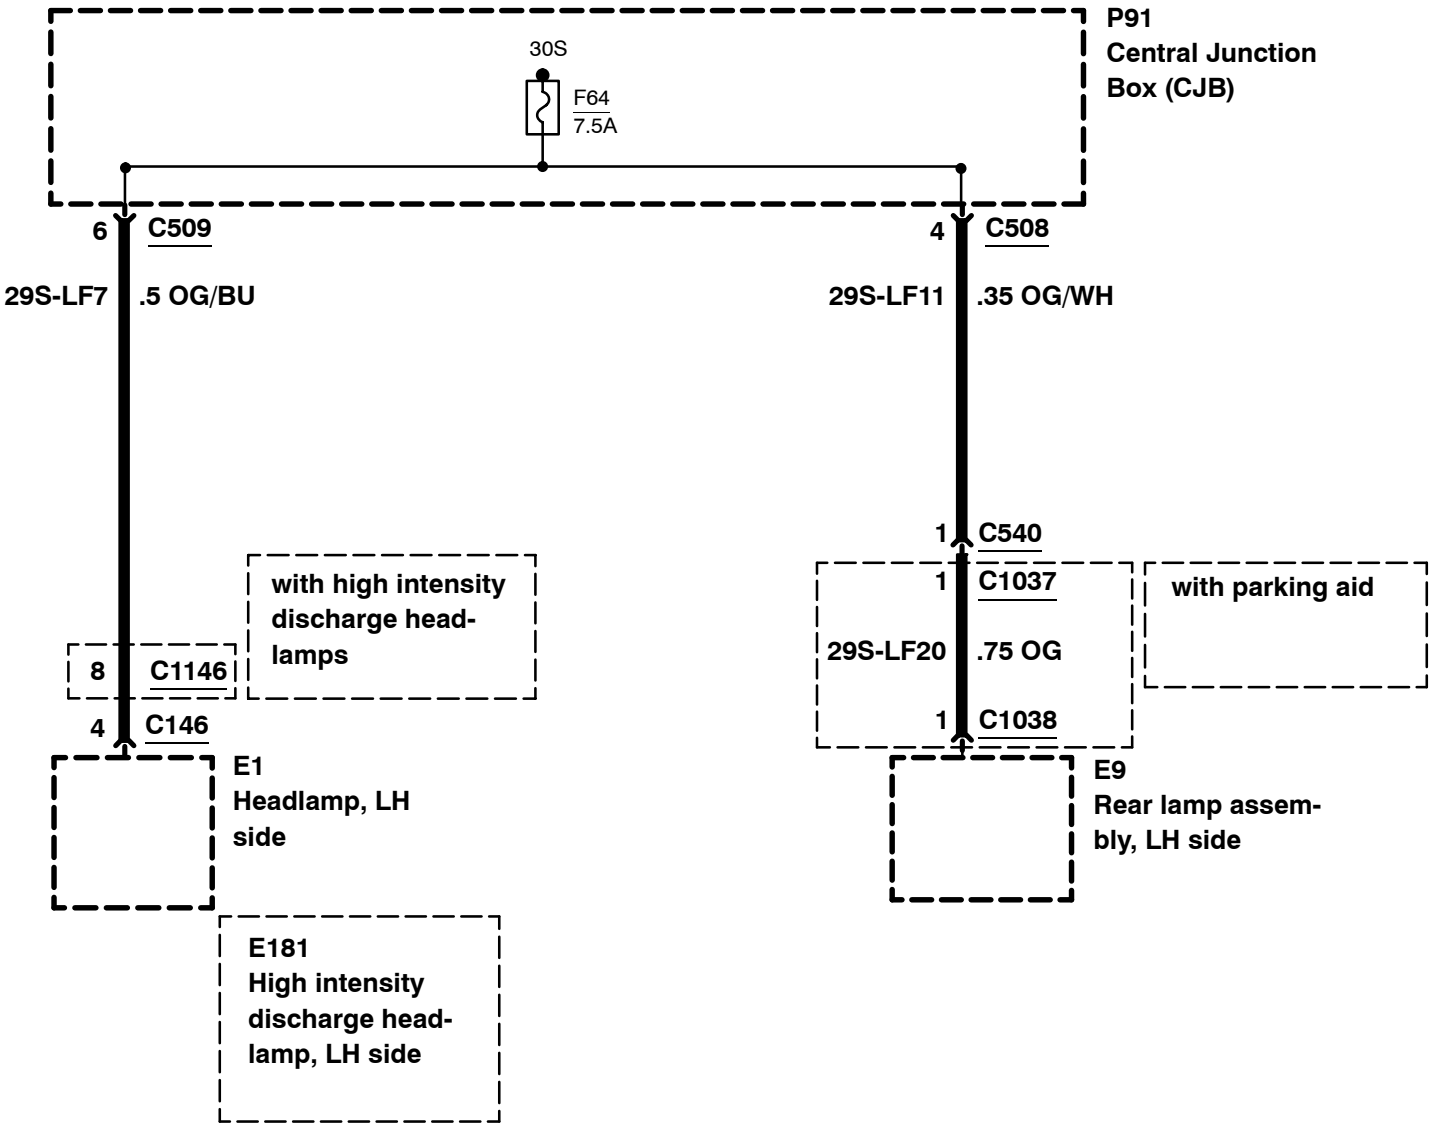


Fuse Details – F64, with trailer socket, 4–door model/5–door model

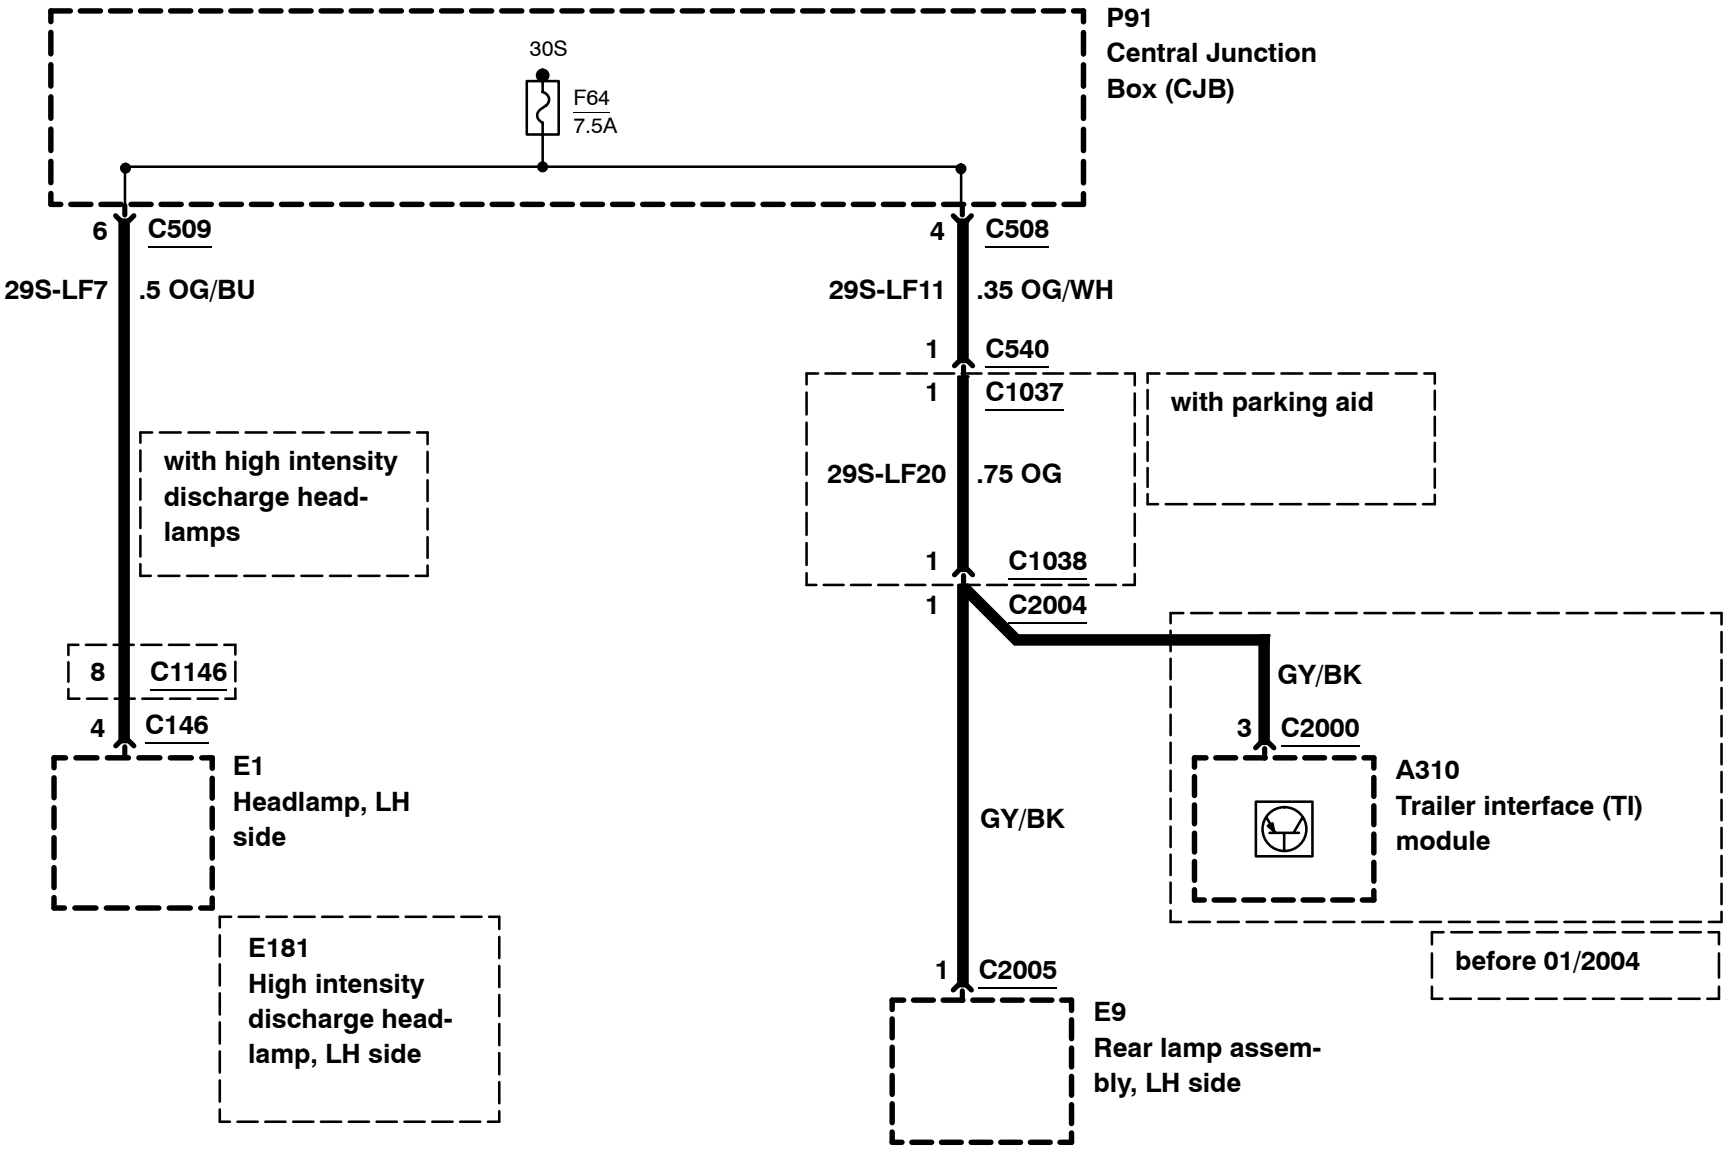


Fuse Details – F64, without trailer socket, wagon

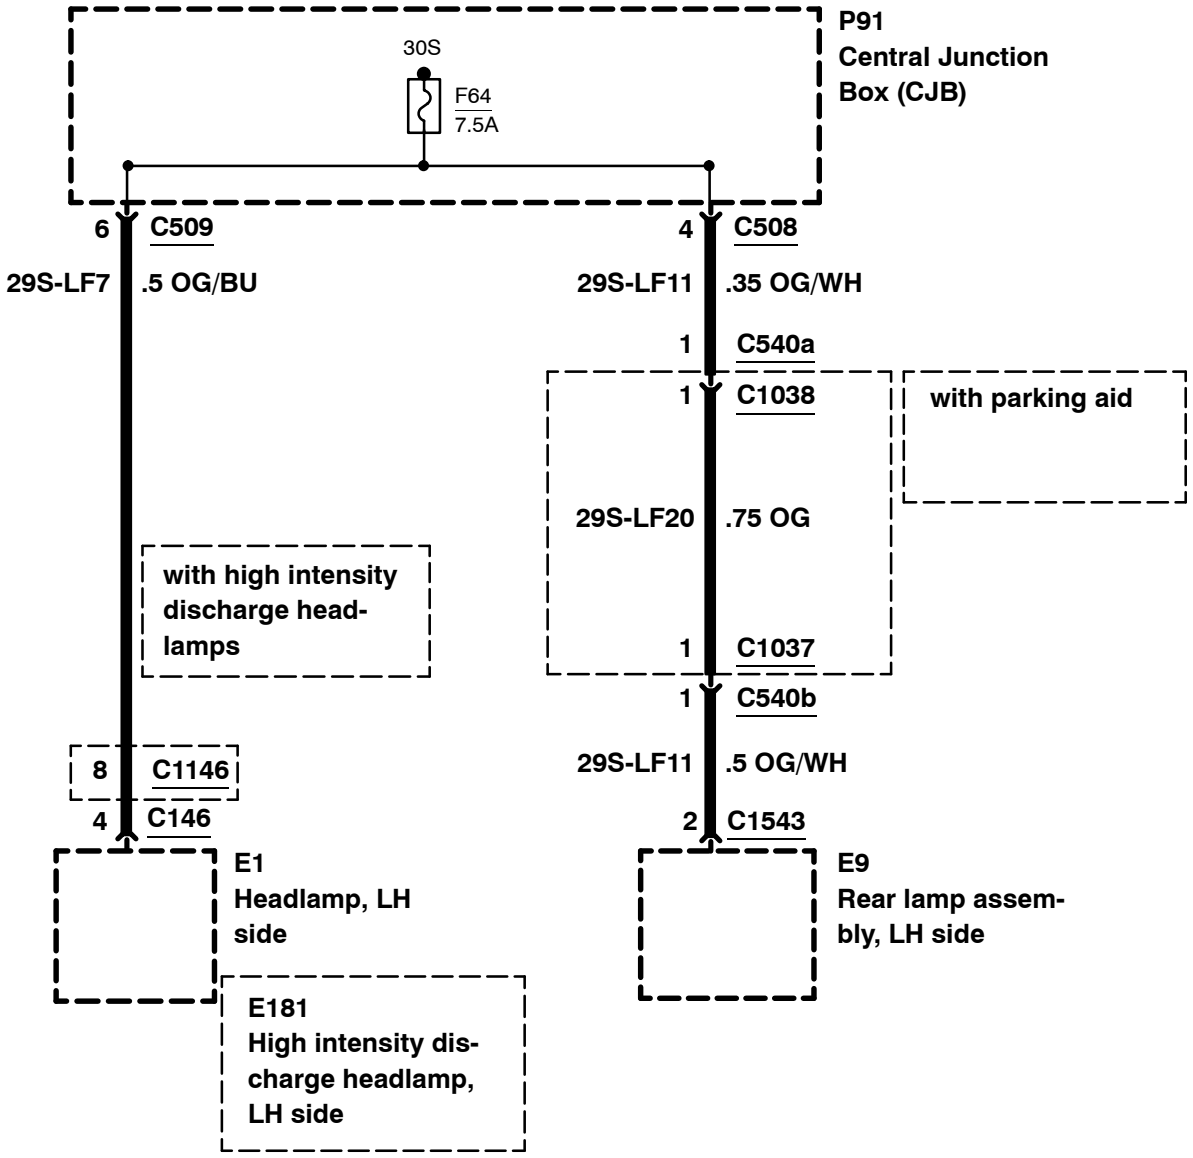


Fuse Details – F64, with trailer socket, wagon

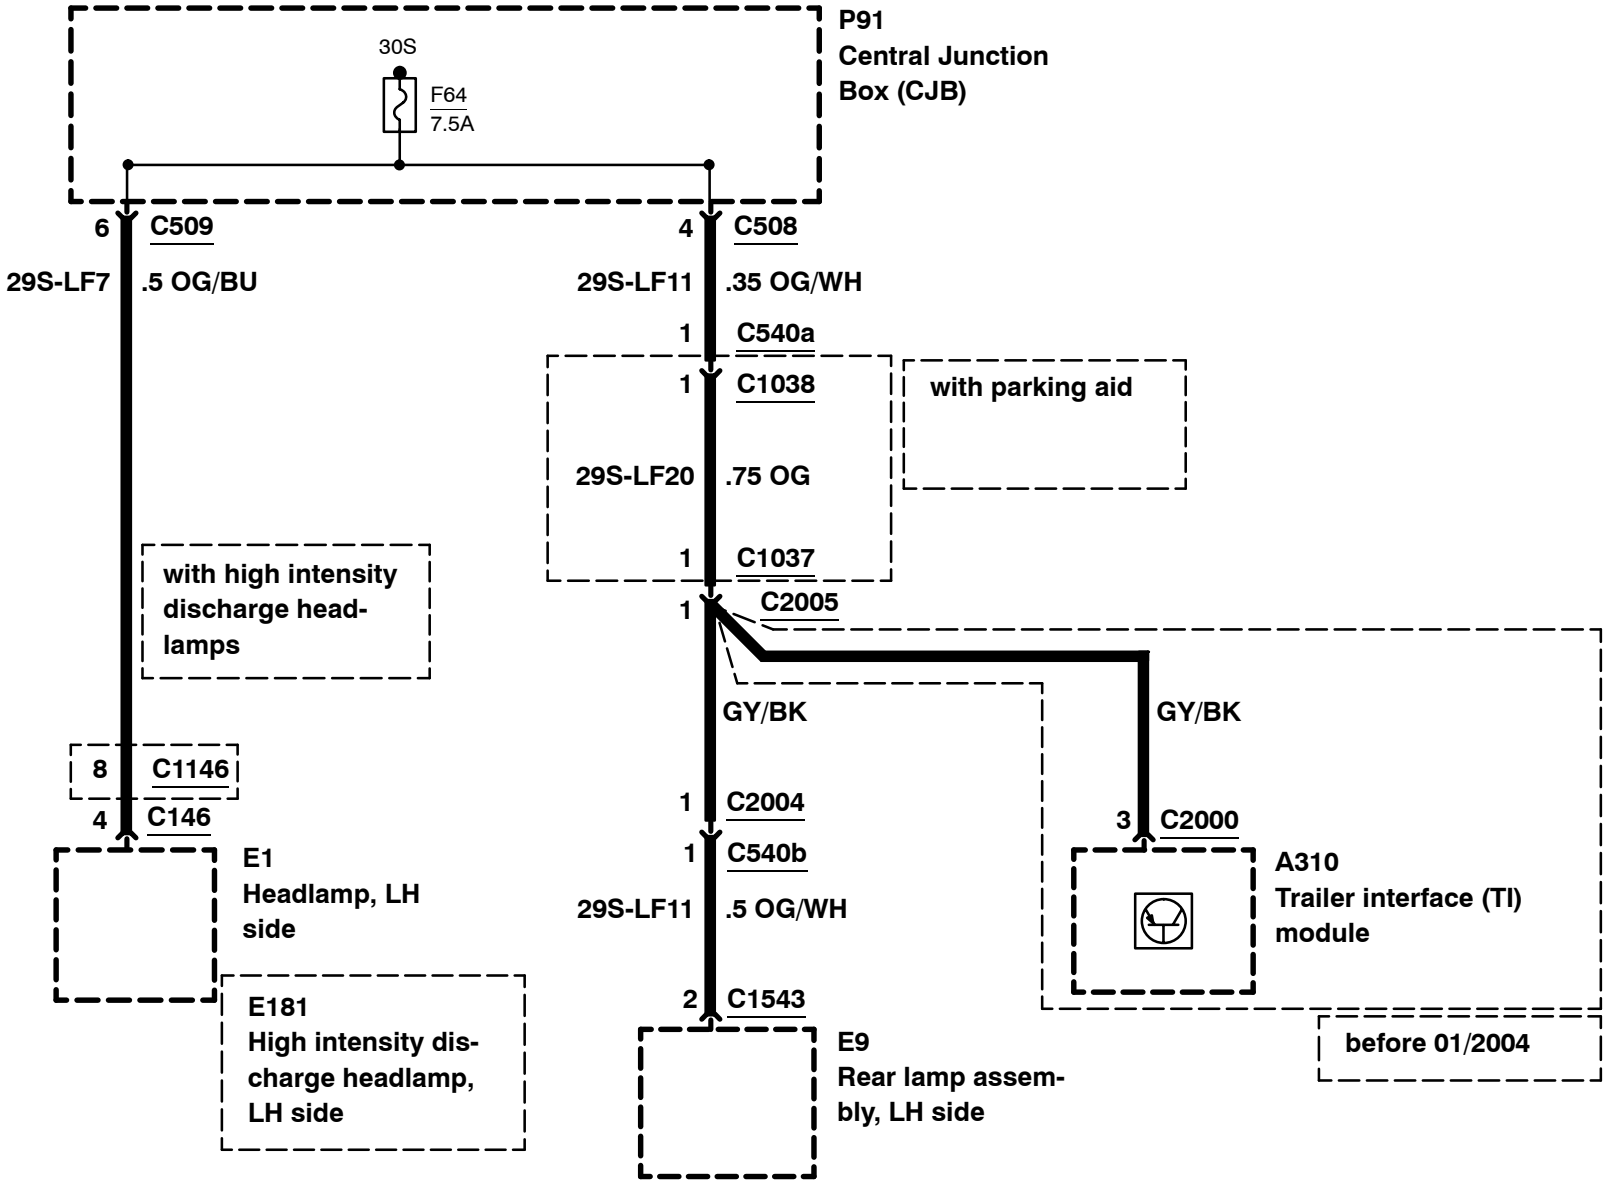


Fuse Details – F65, F66

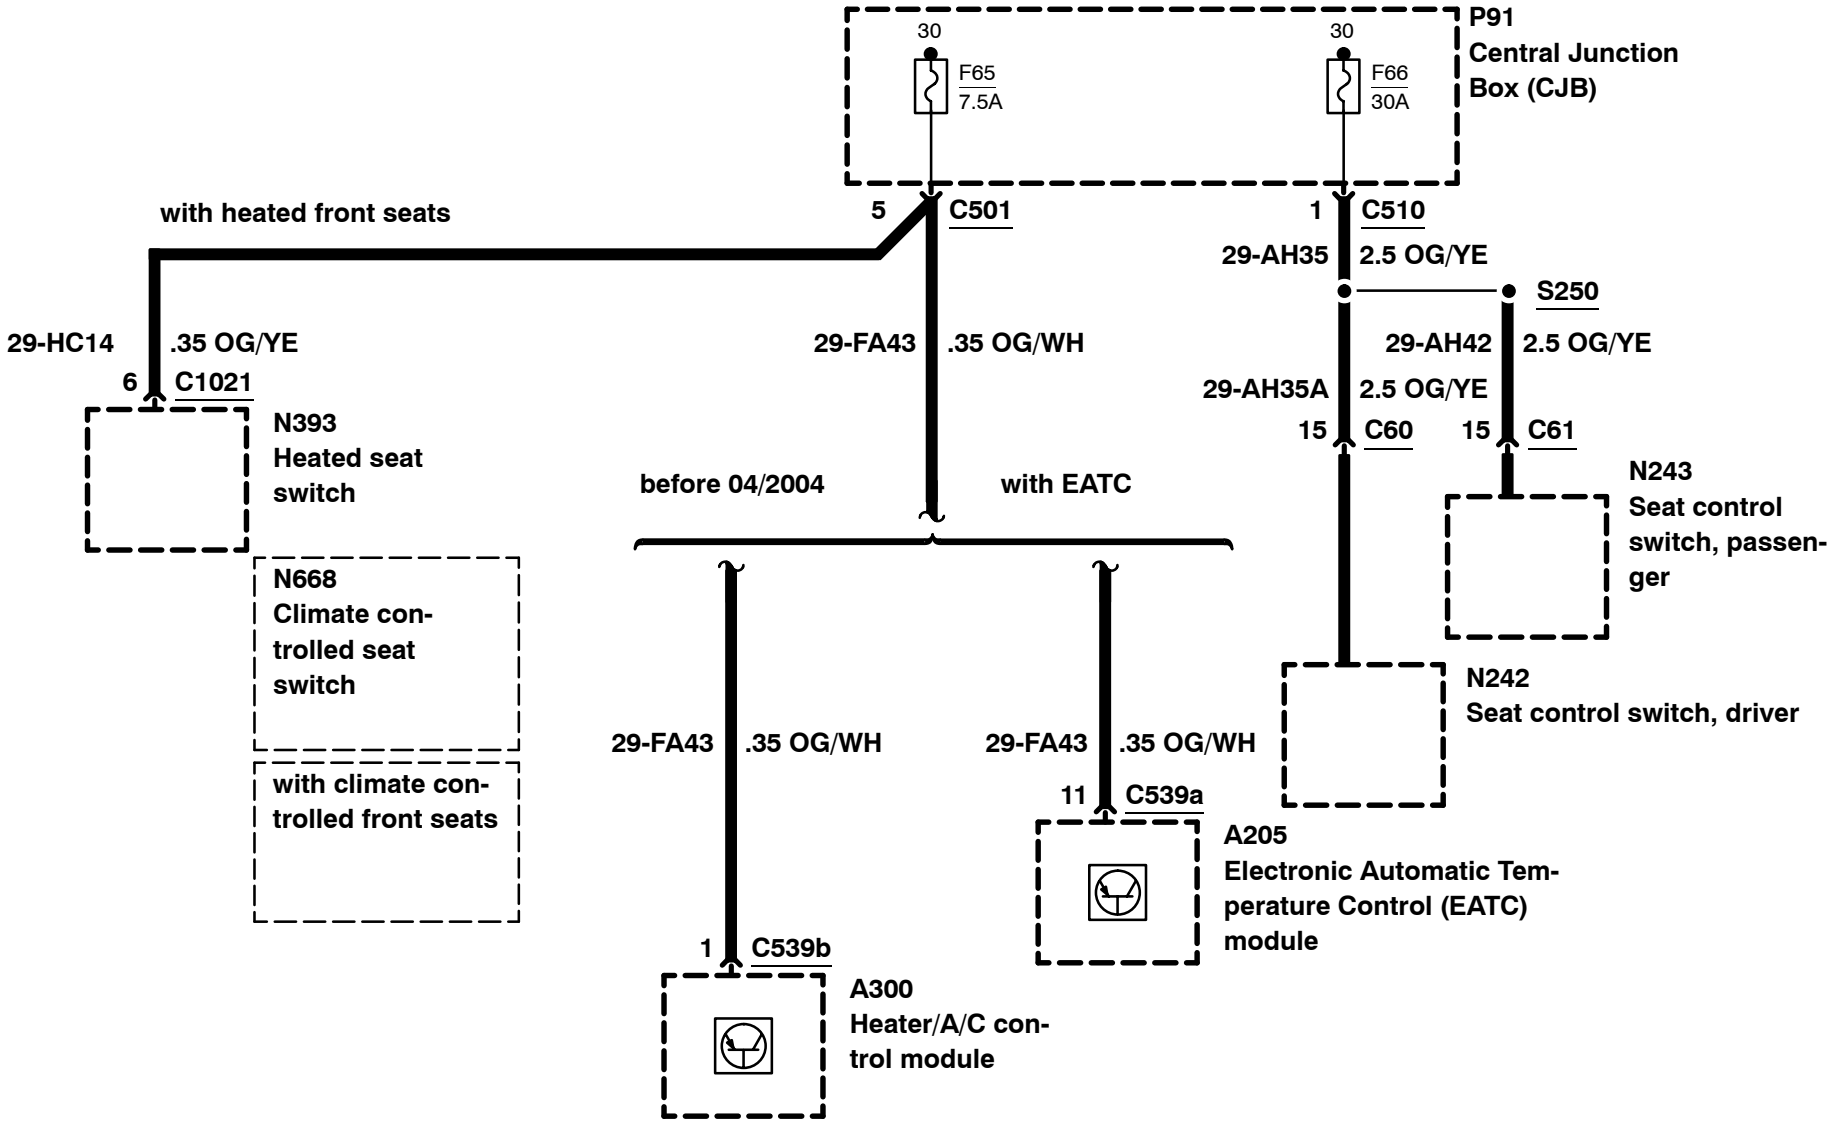


Fuse Details – F67, 1.8L Duratec–SCi (MI4)

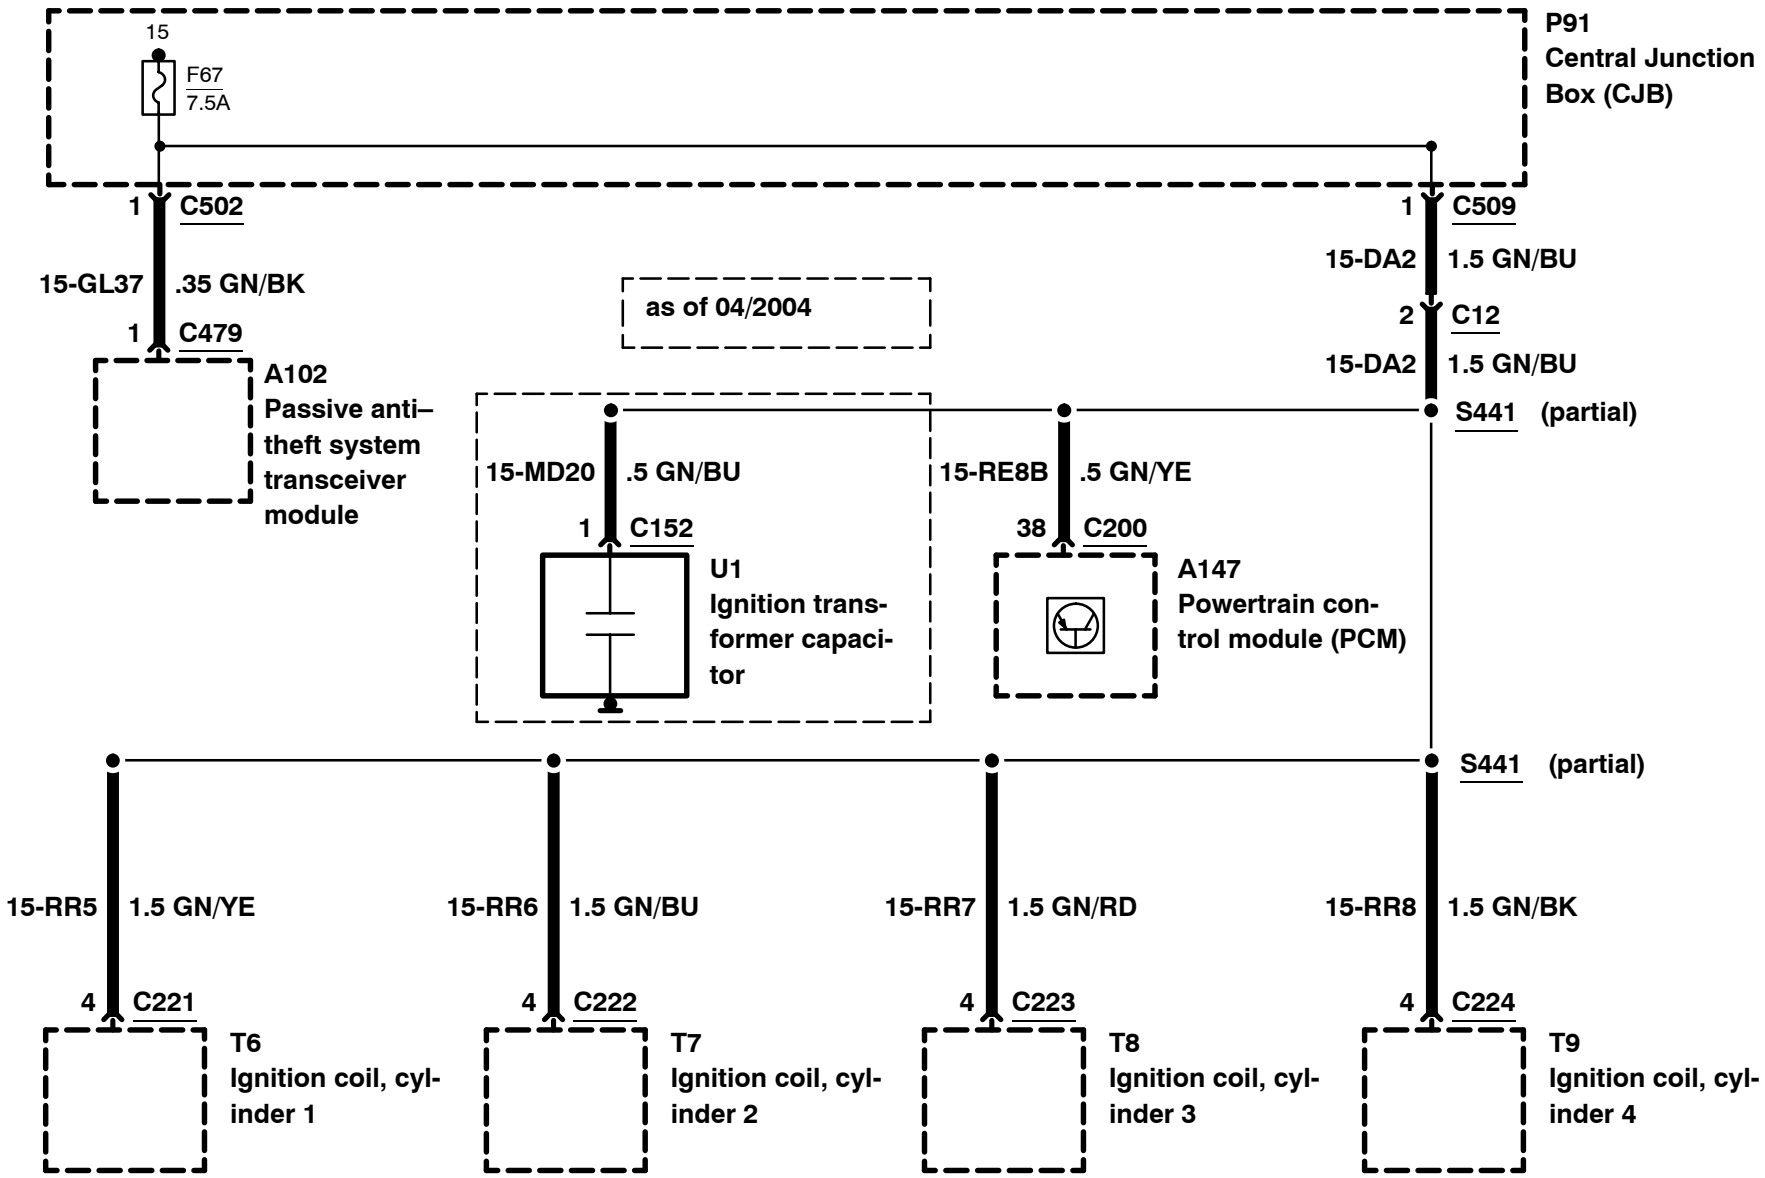


Fuse Details – F67, 1.8/2.0L Duratec–HE (MI4)

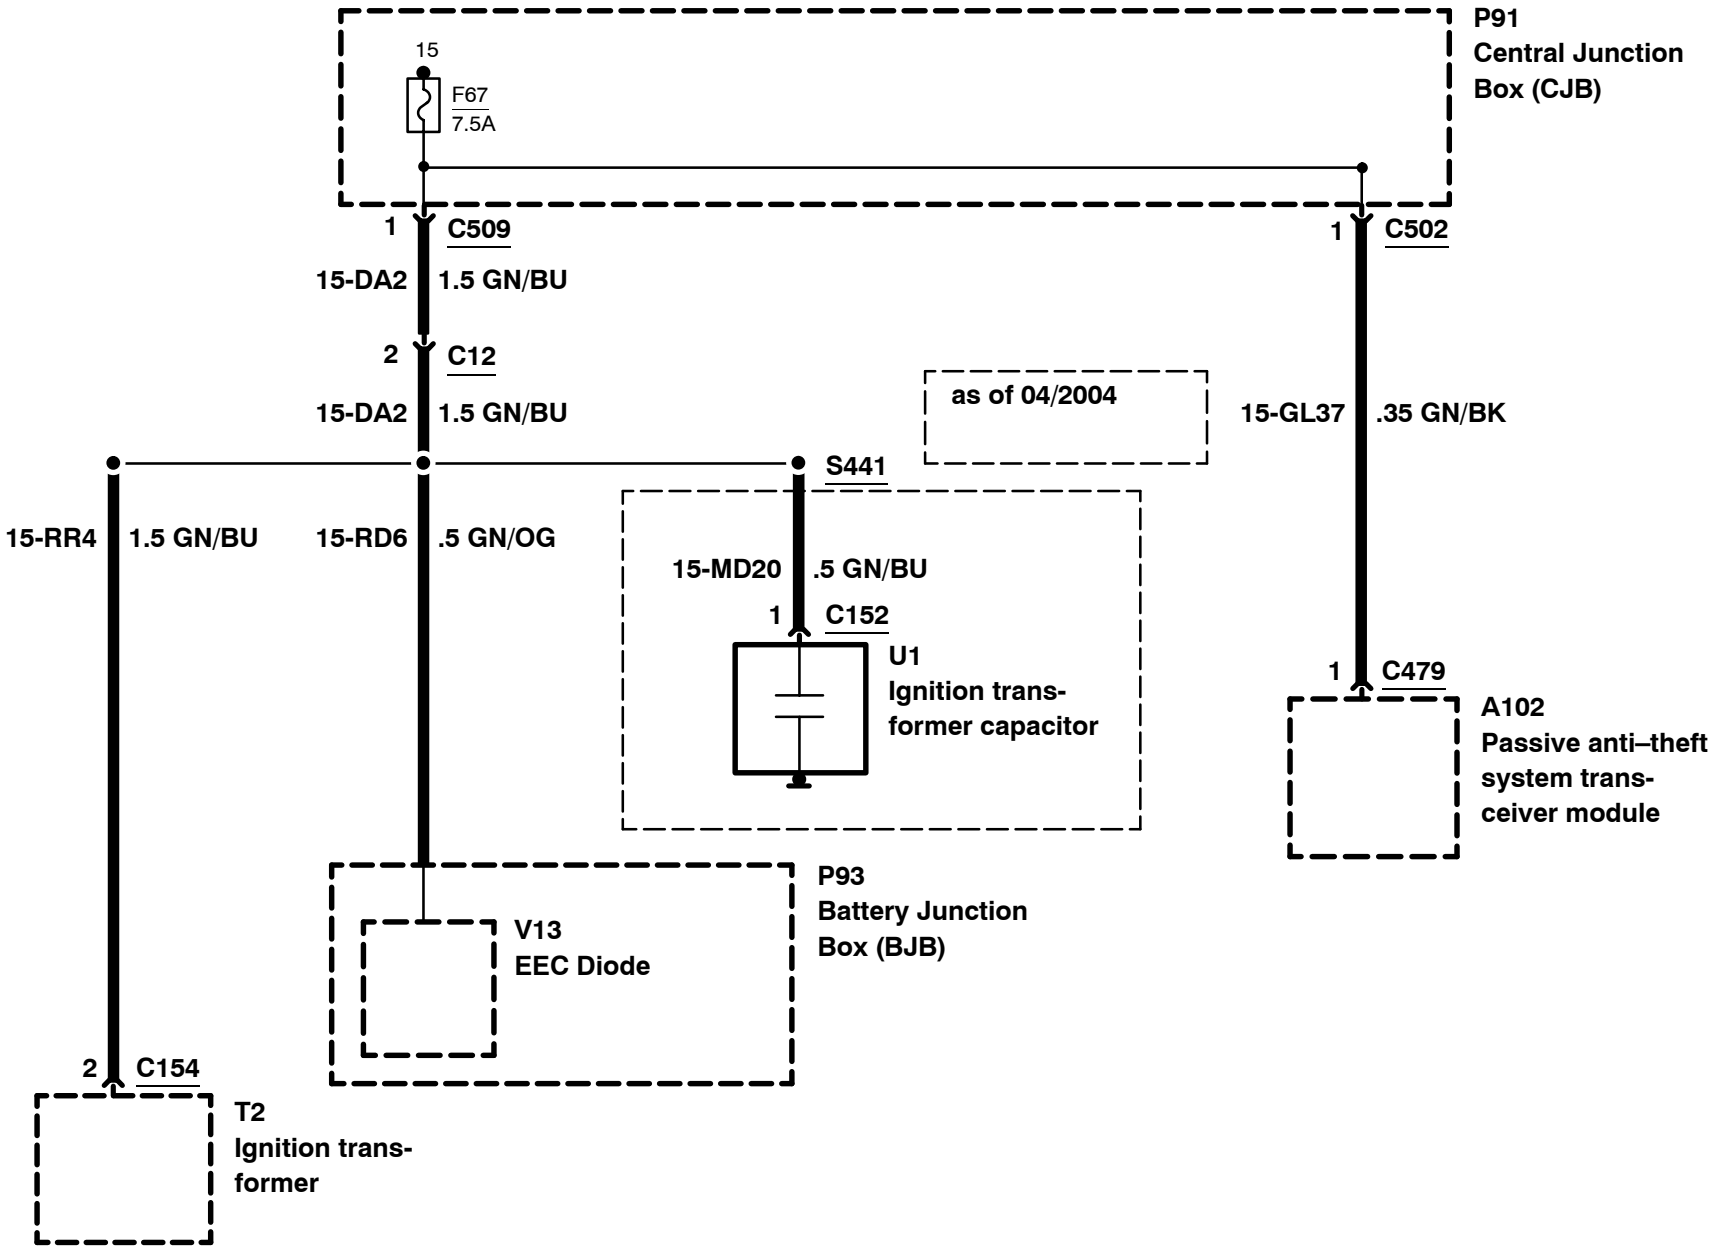


Fuse Details – F67, 2.5L Duratec–VE (VE6)

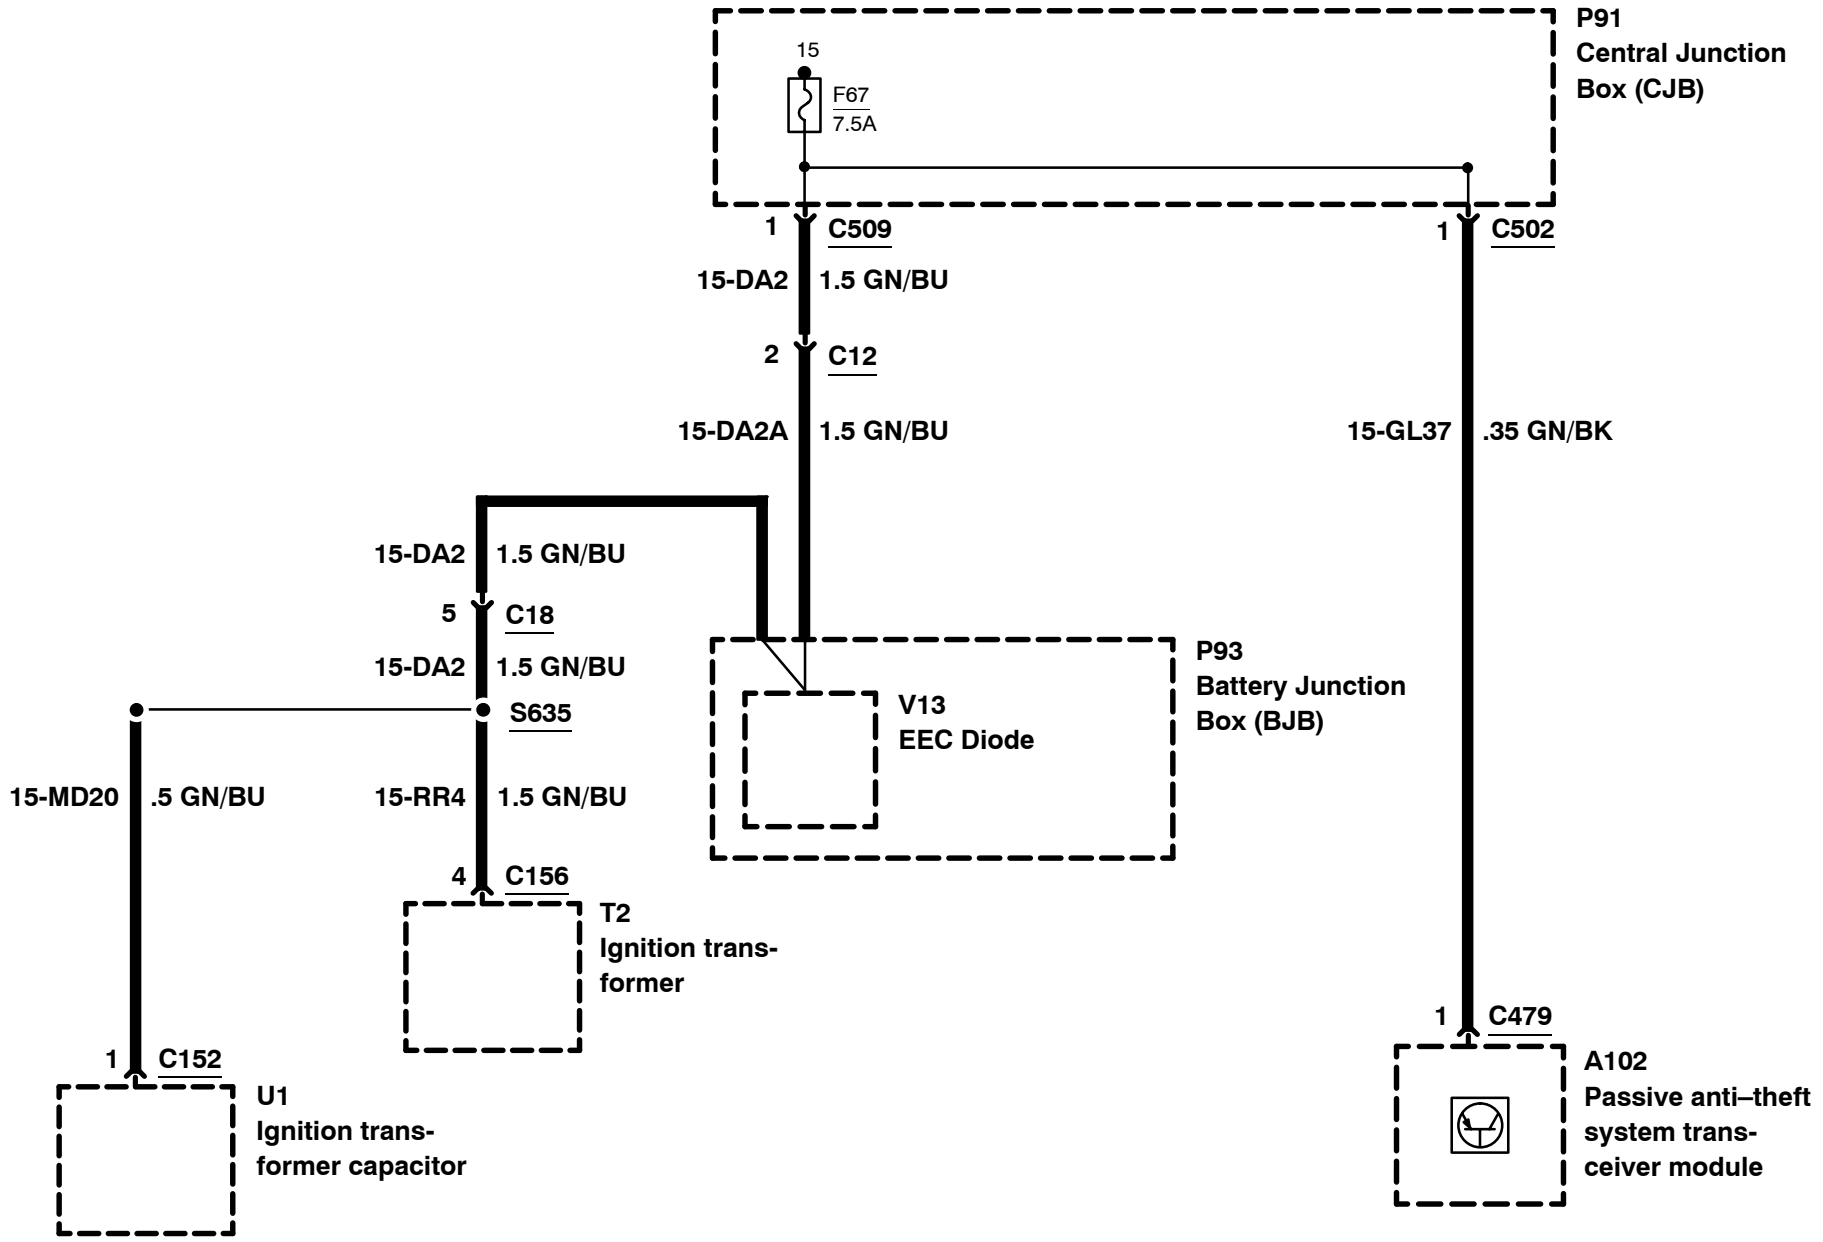


Fuse Details – F67, 3.0L Duratec–SE (VE6)

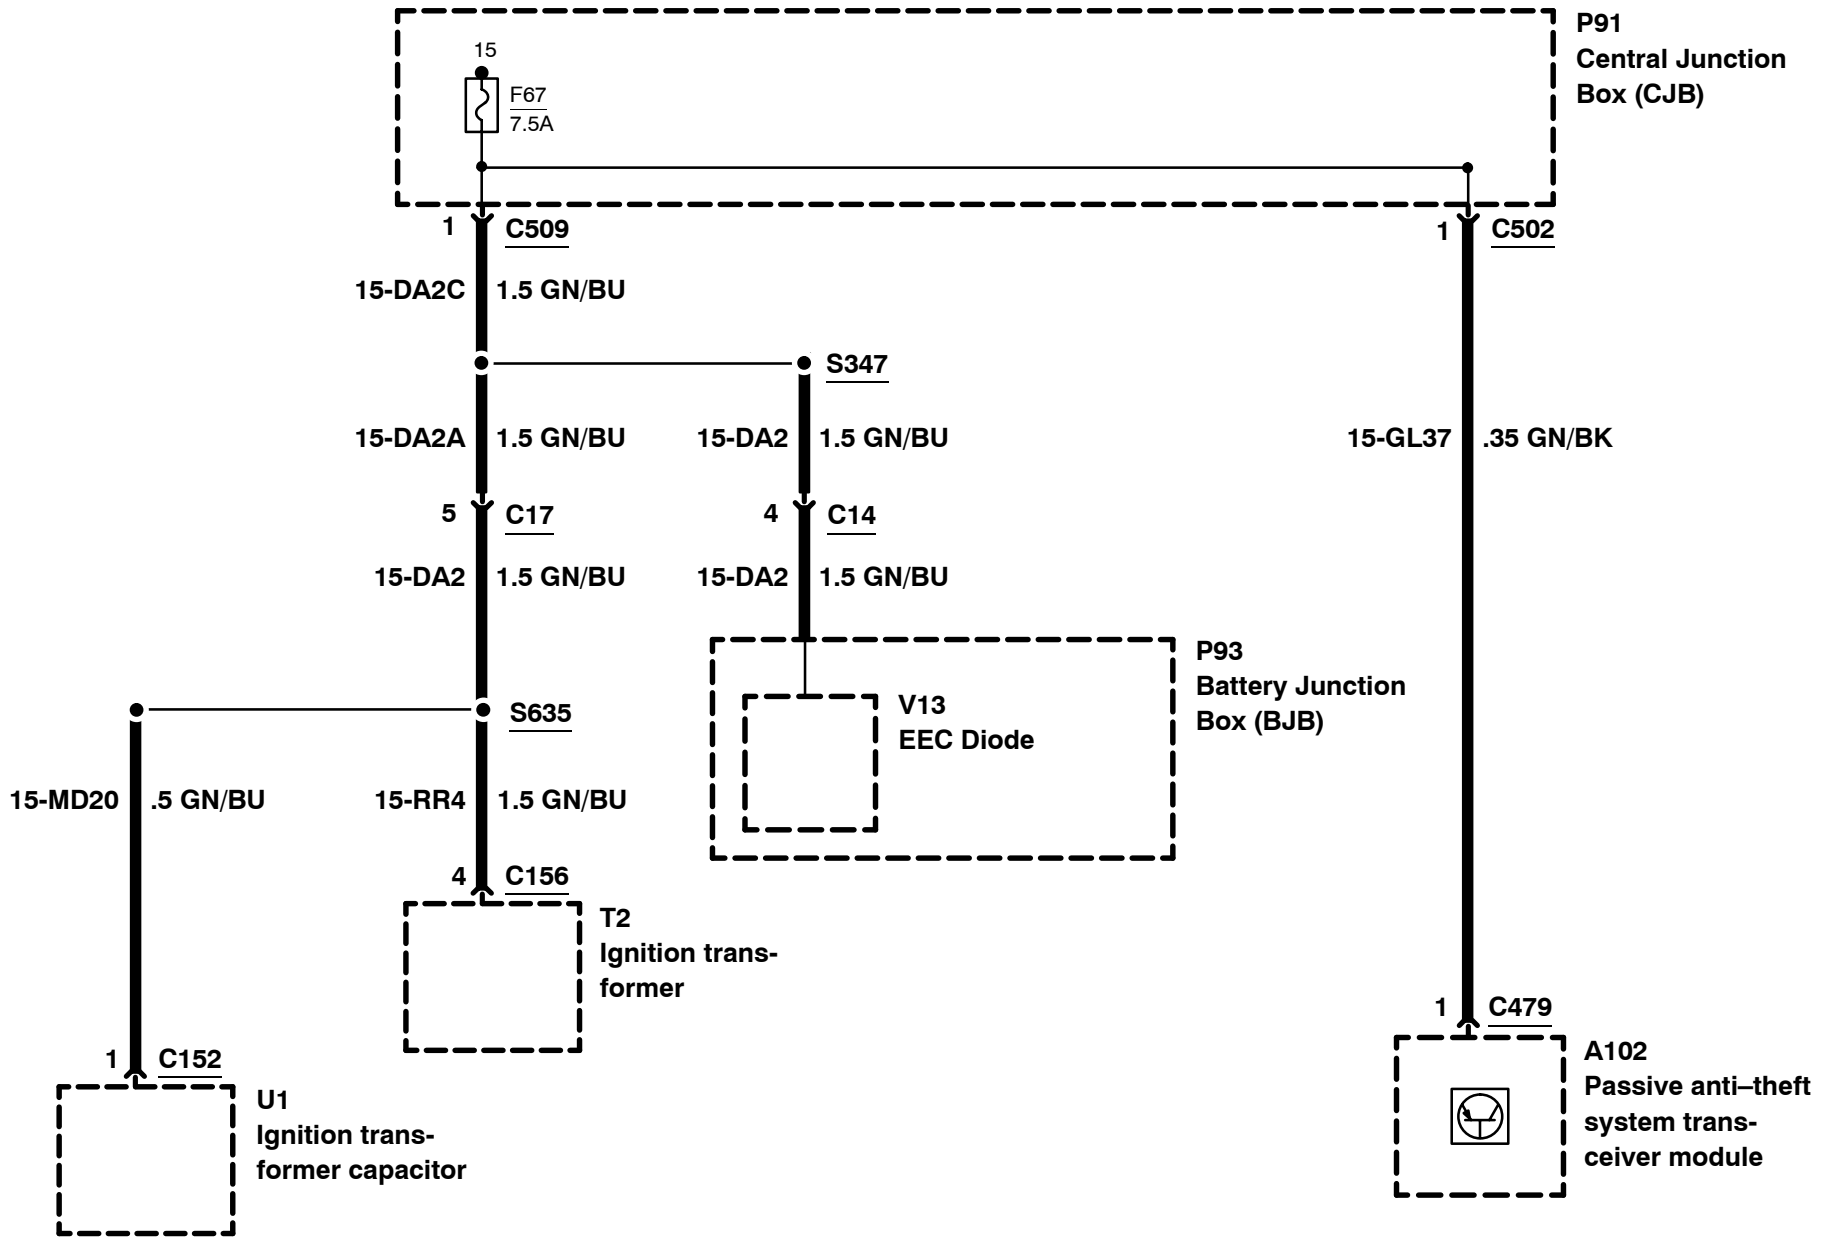


Fuse Details – F67, 3.0L Duratec–ST (VE6)

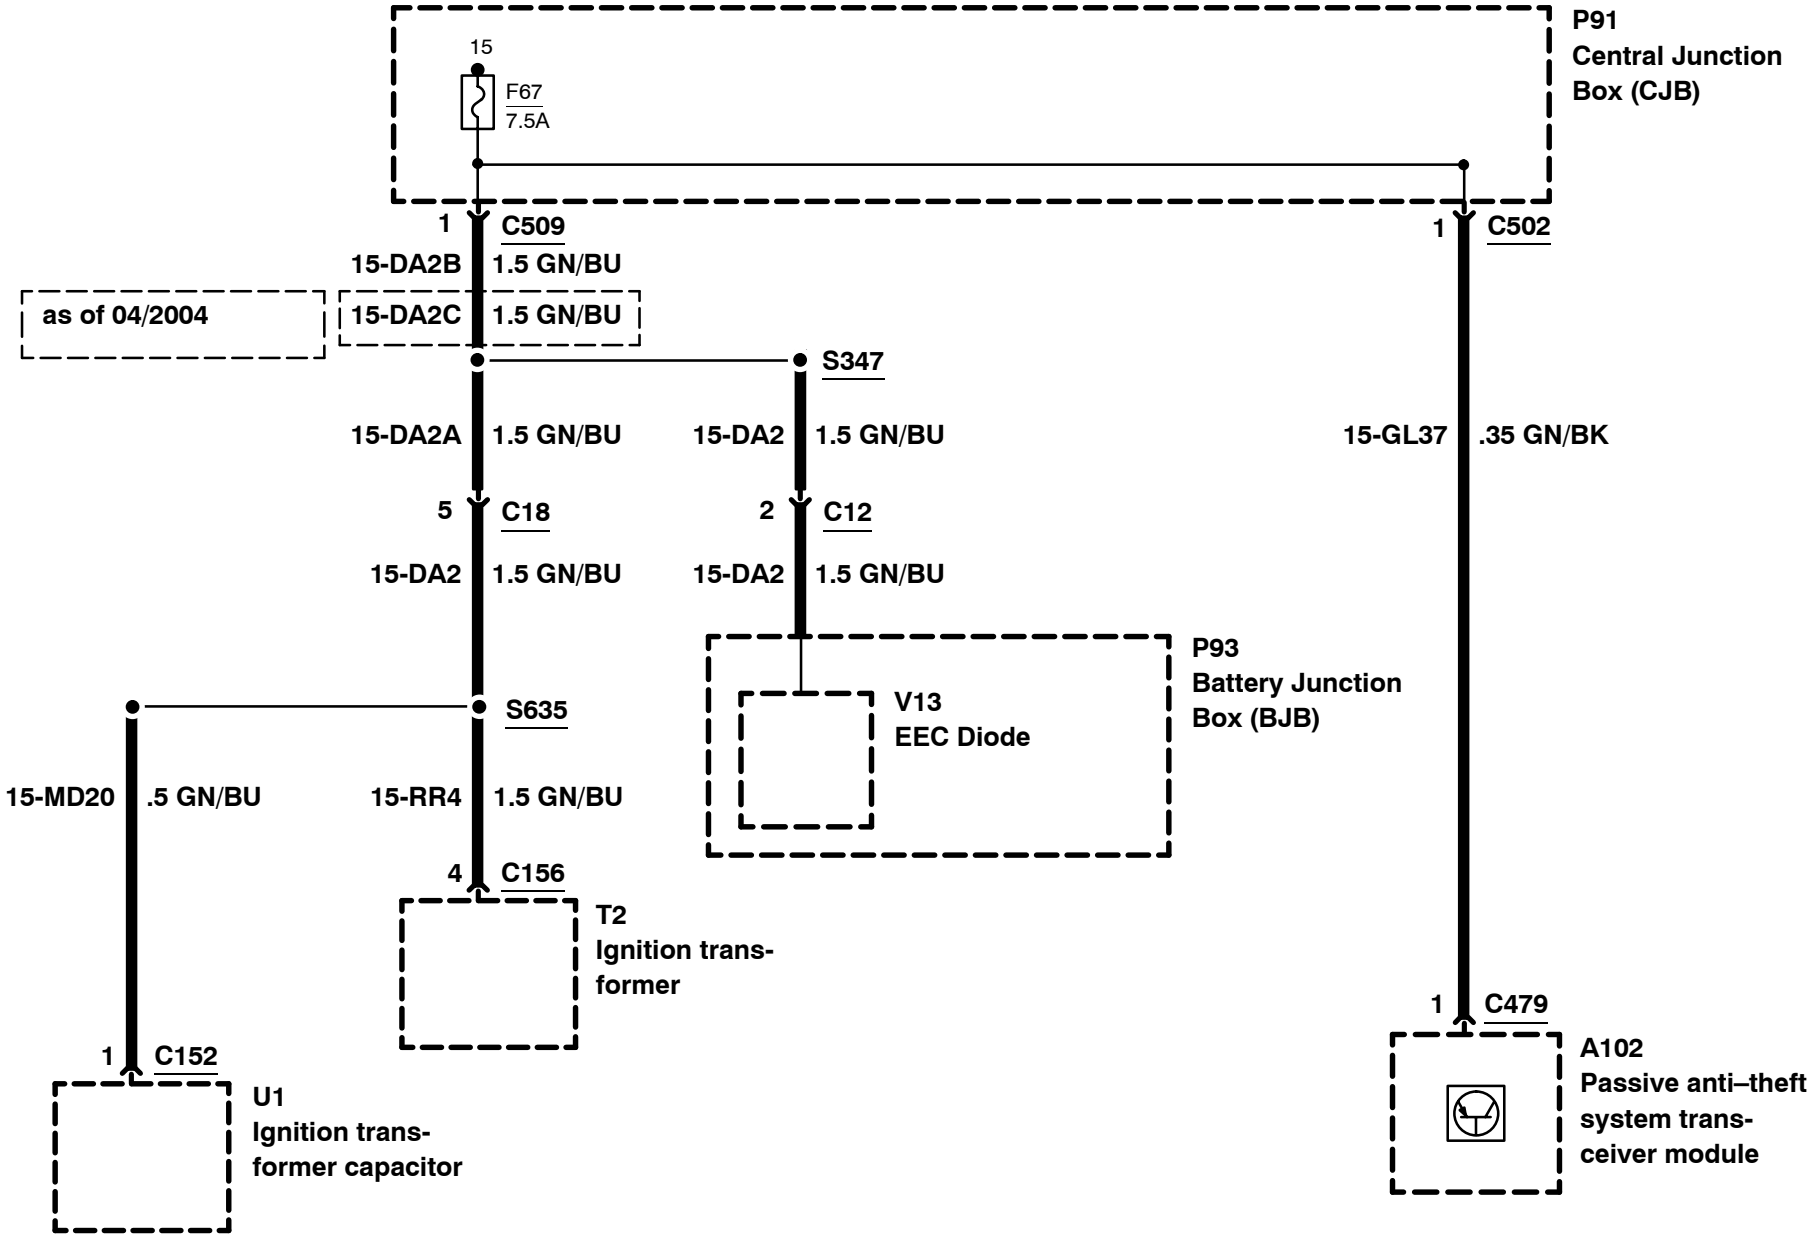


Fuse Details – F67, Diesel engines

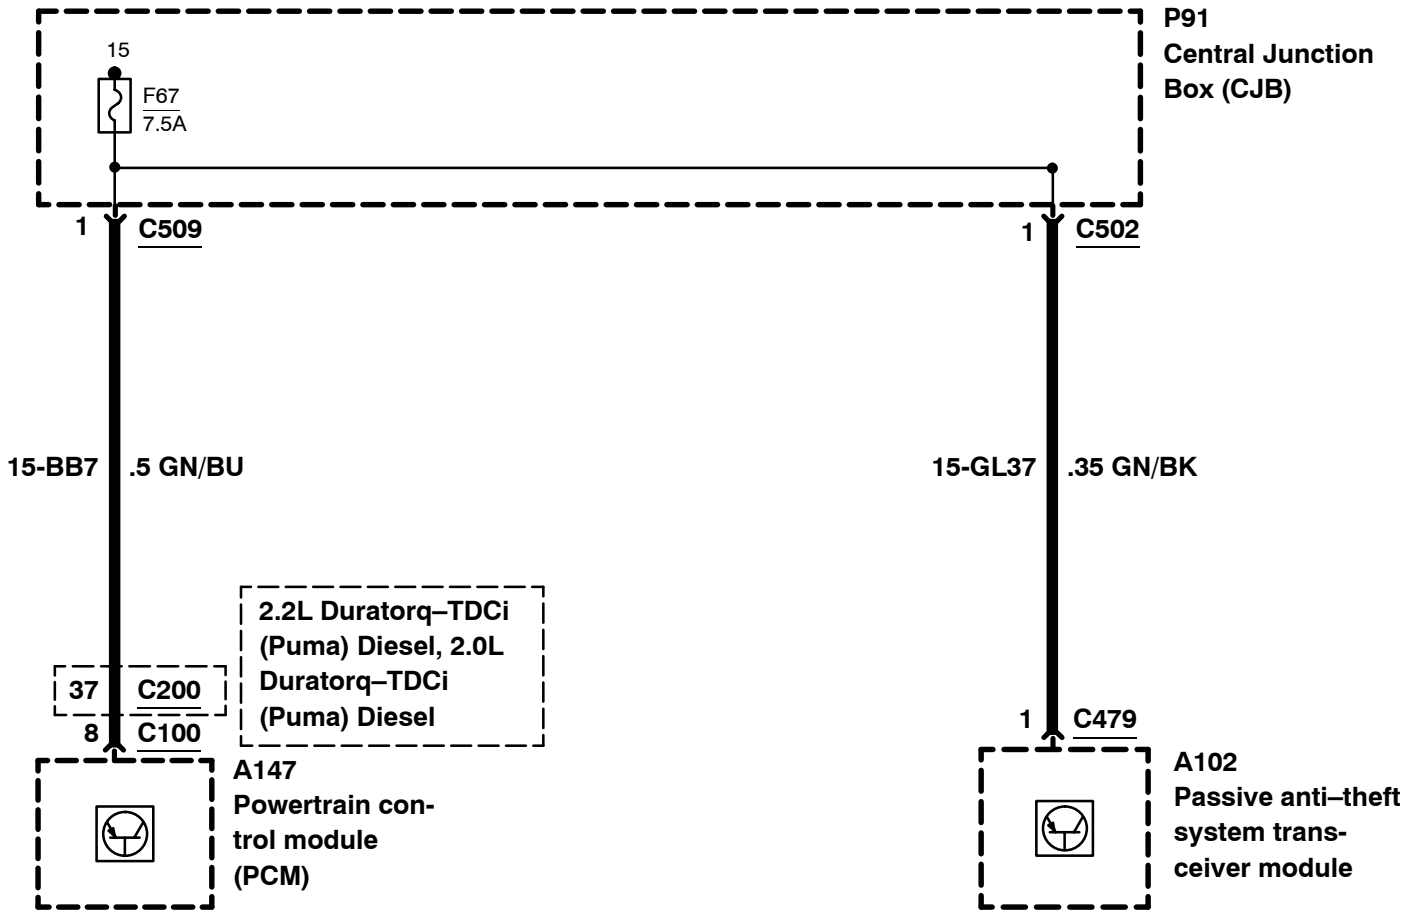


Fuse Details – F68

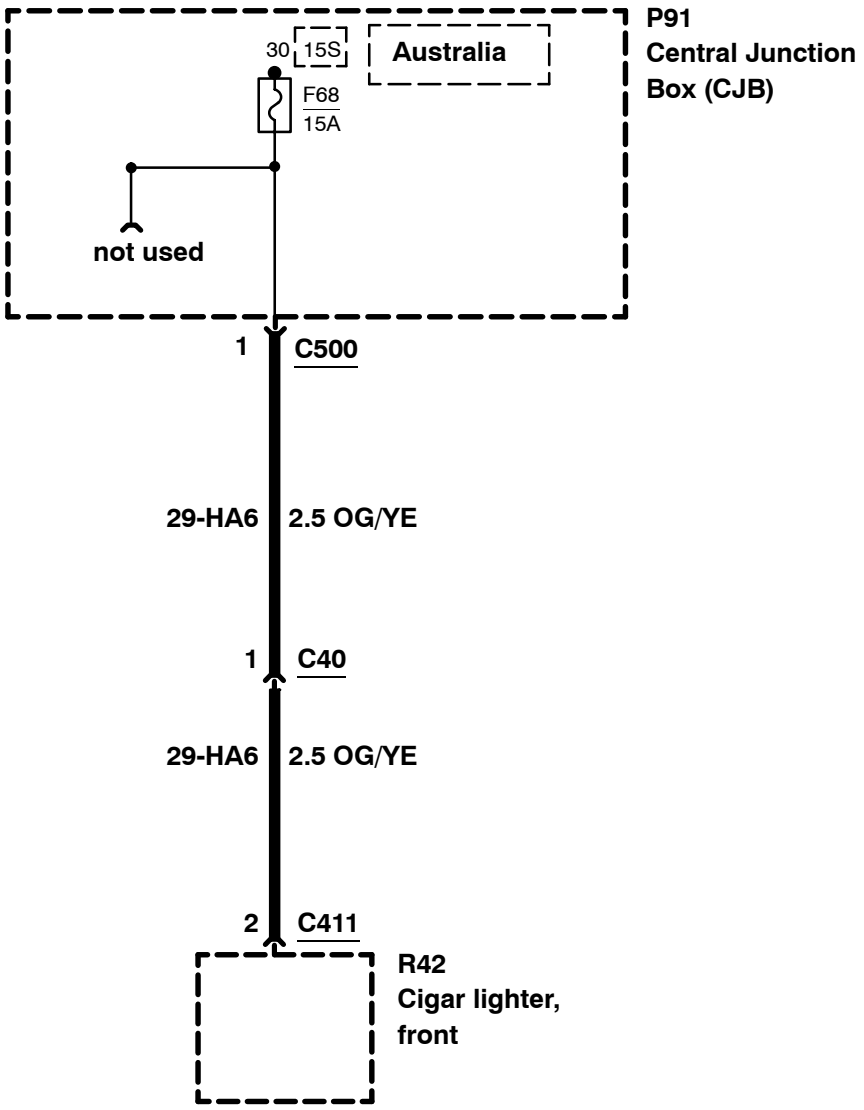


Fuse Details – F69, without external CD changer and video system

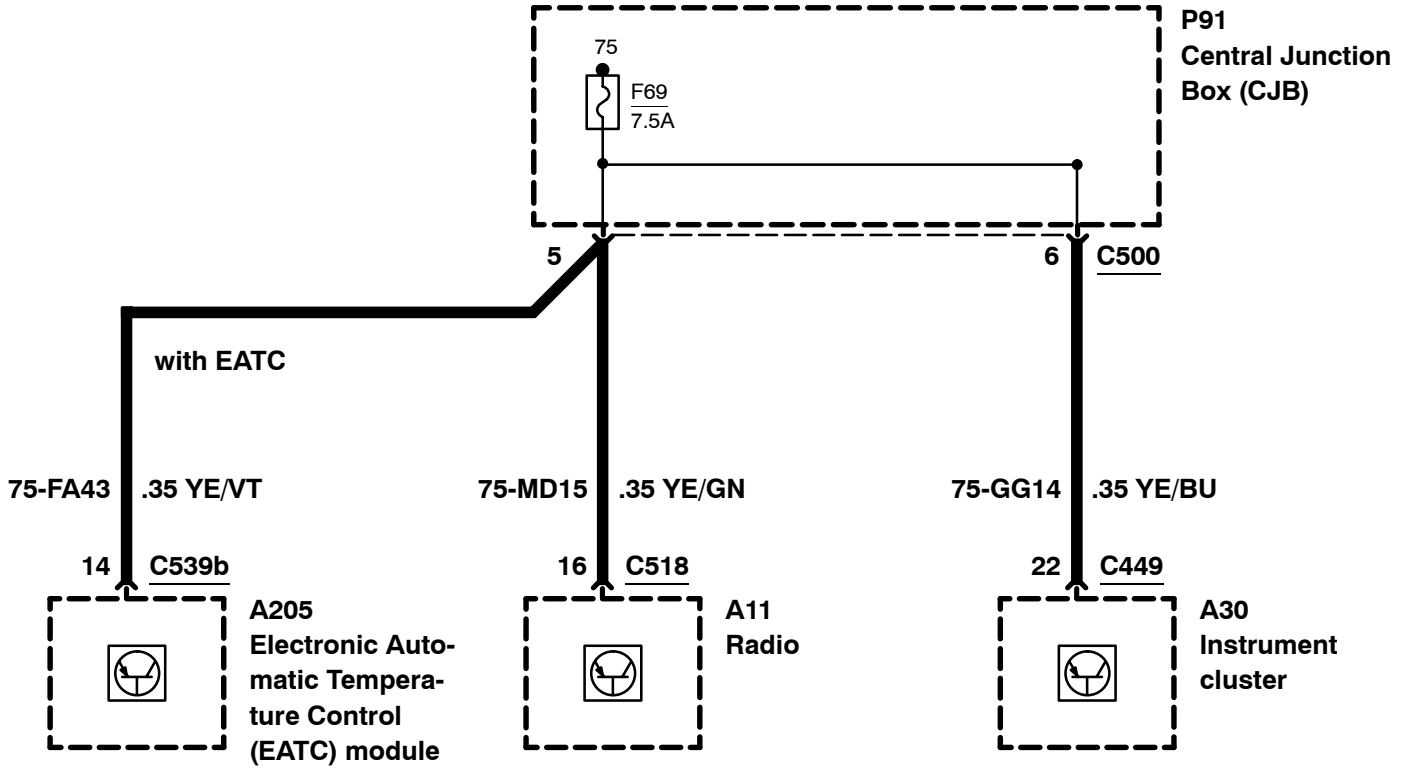


Fuse Details – F69, with external CD changer and/or video system

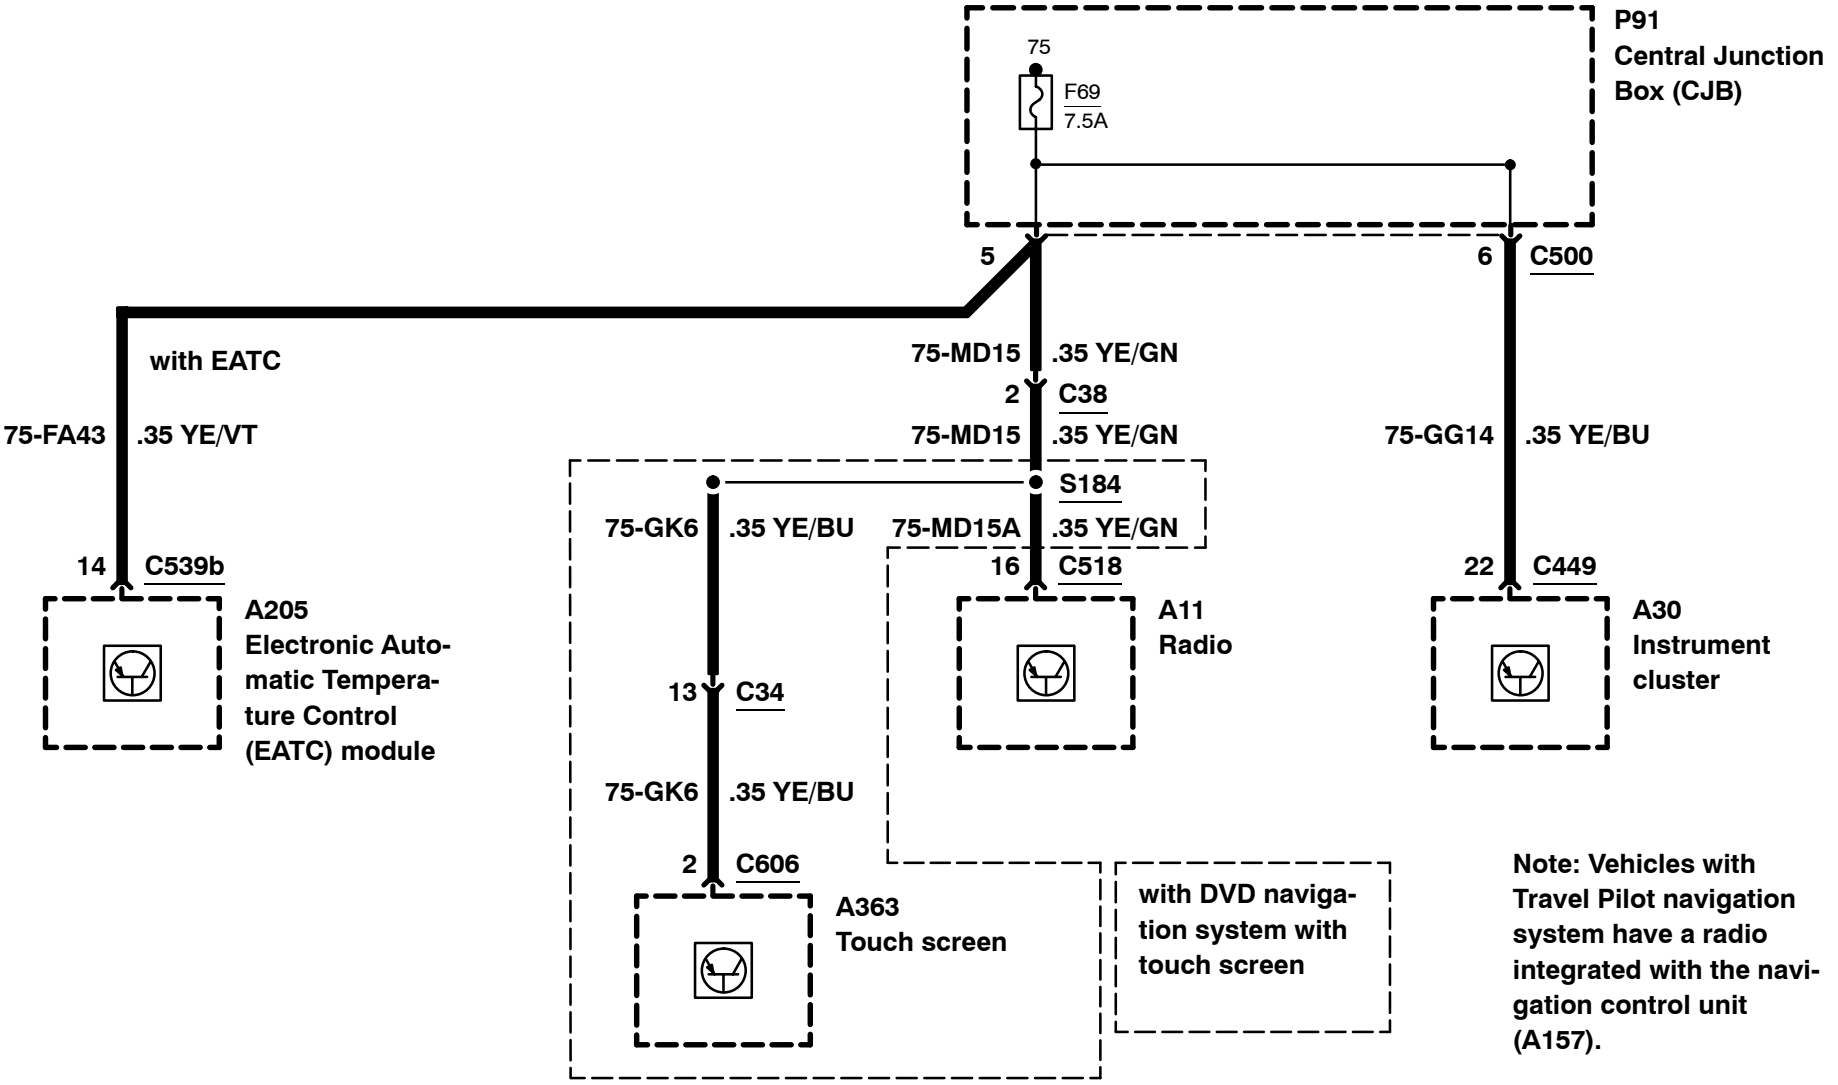


Fuse Details – F70

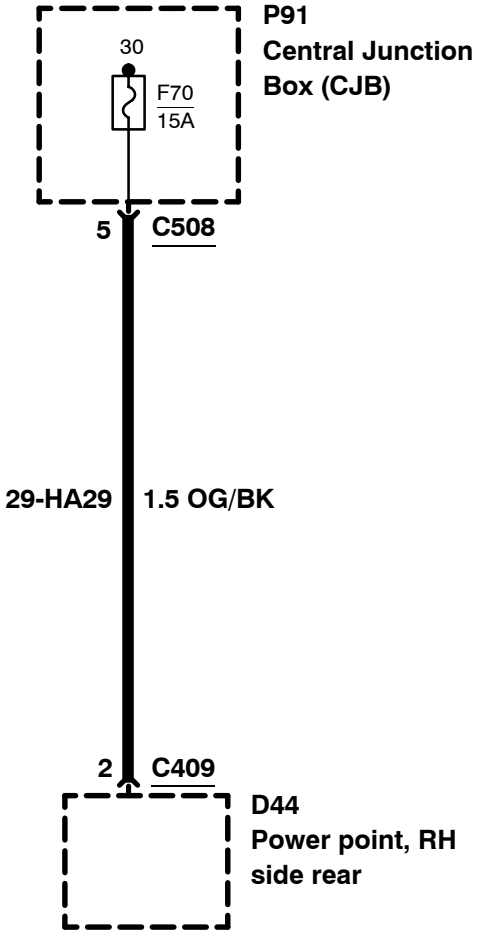


Fuse Details – F71, except DVD navigation system with touch screen, without video system

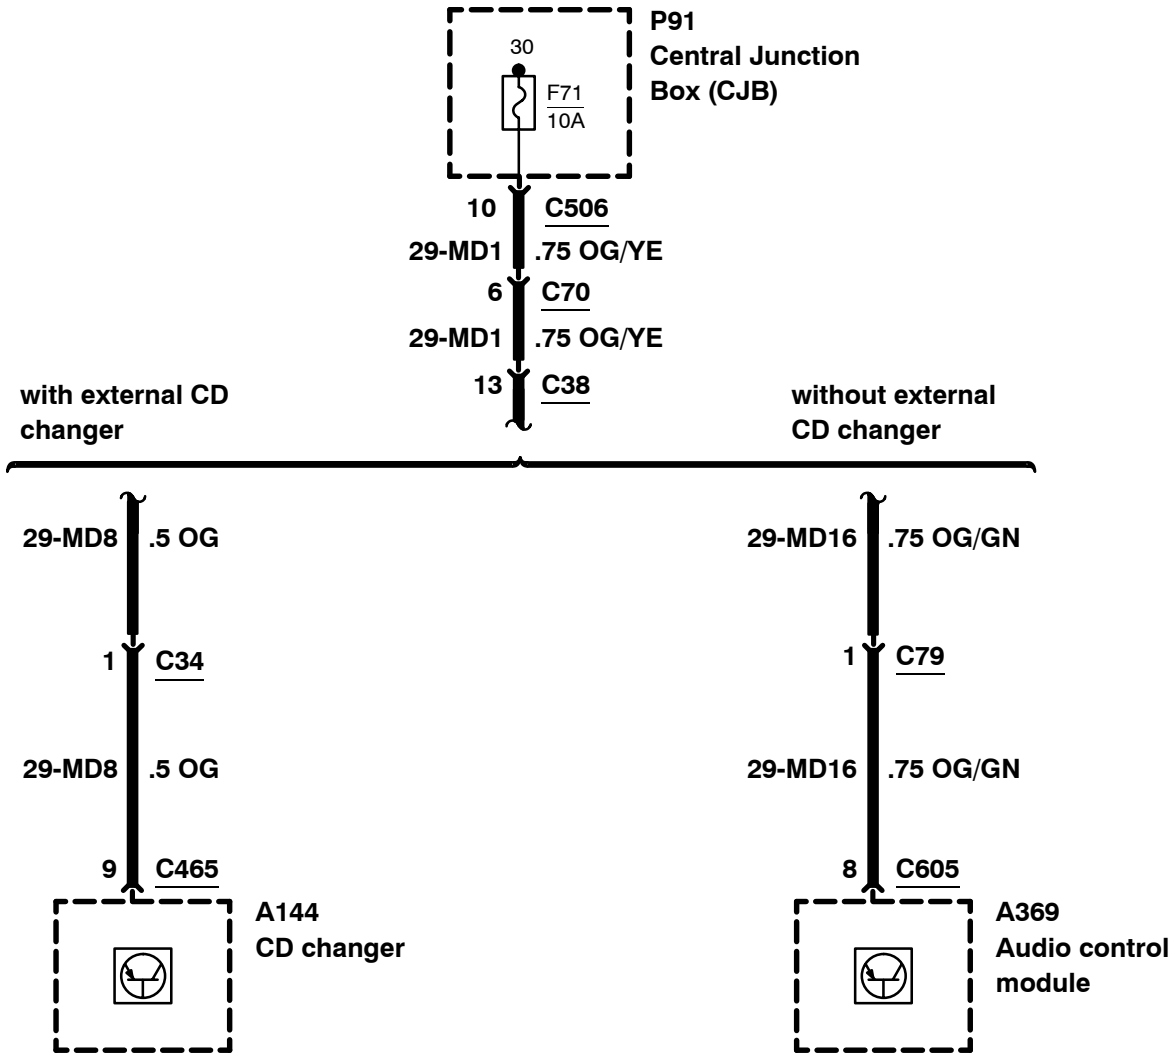


Fuse Details – F71, except DVD navigation system with touch screen, with video system

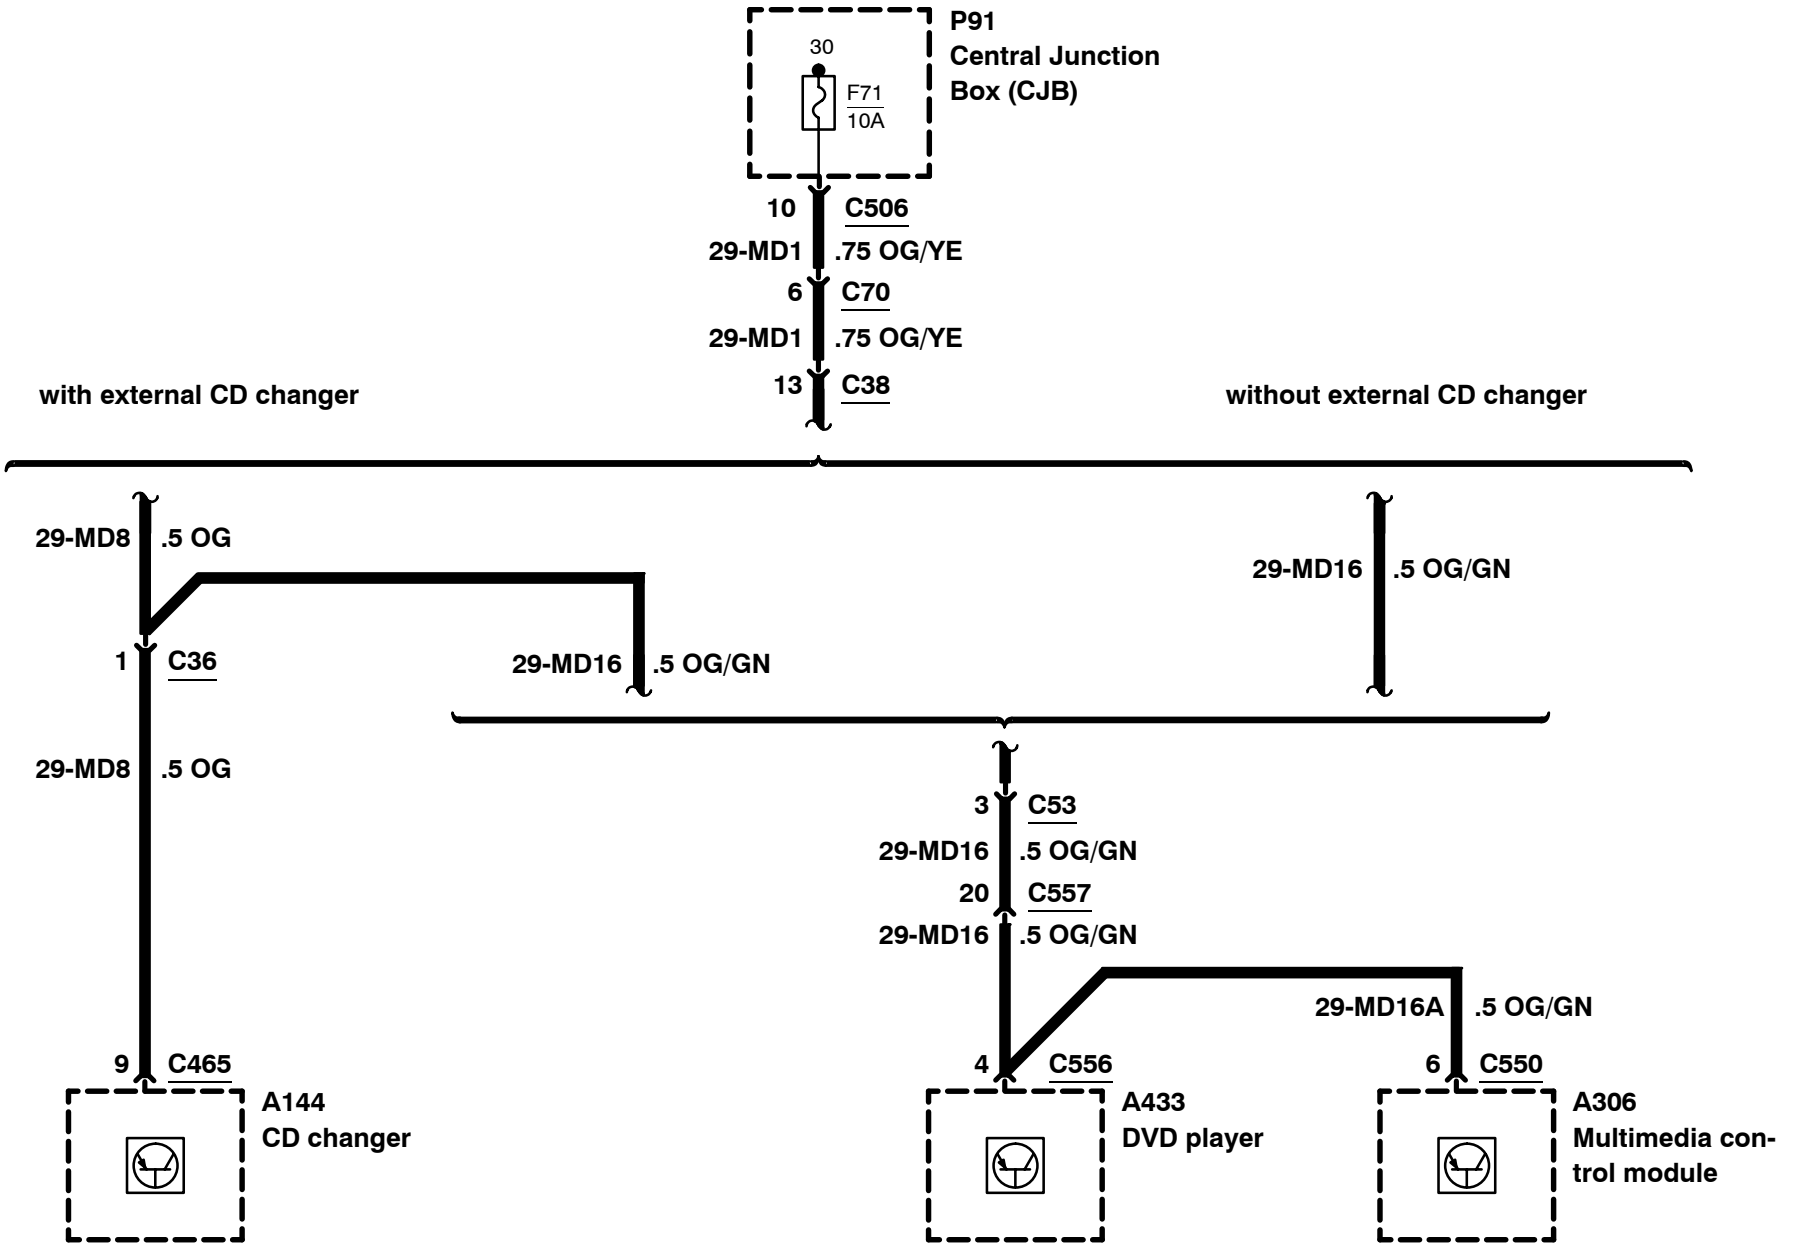


Fuse Details – F71, with DVD navigation system with touch screen

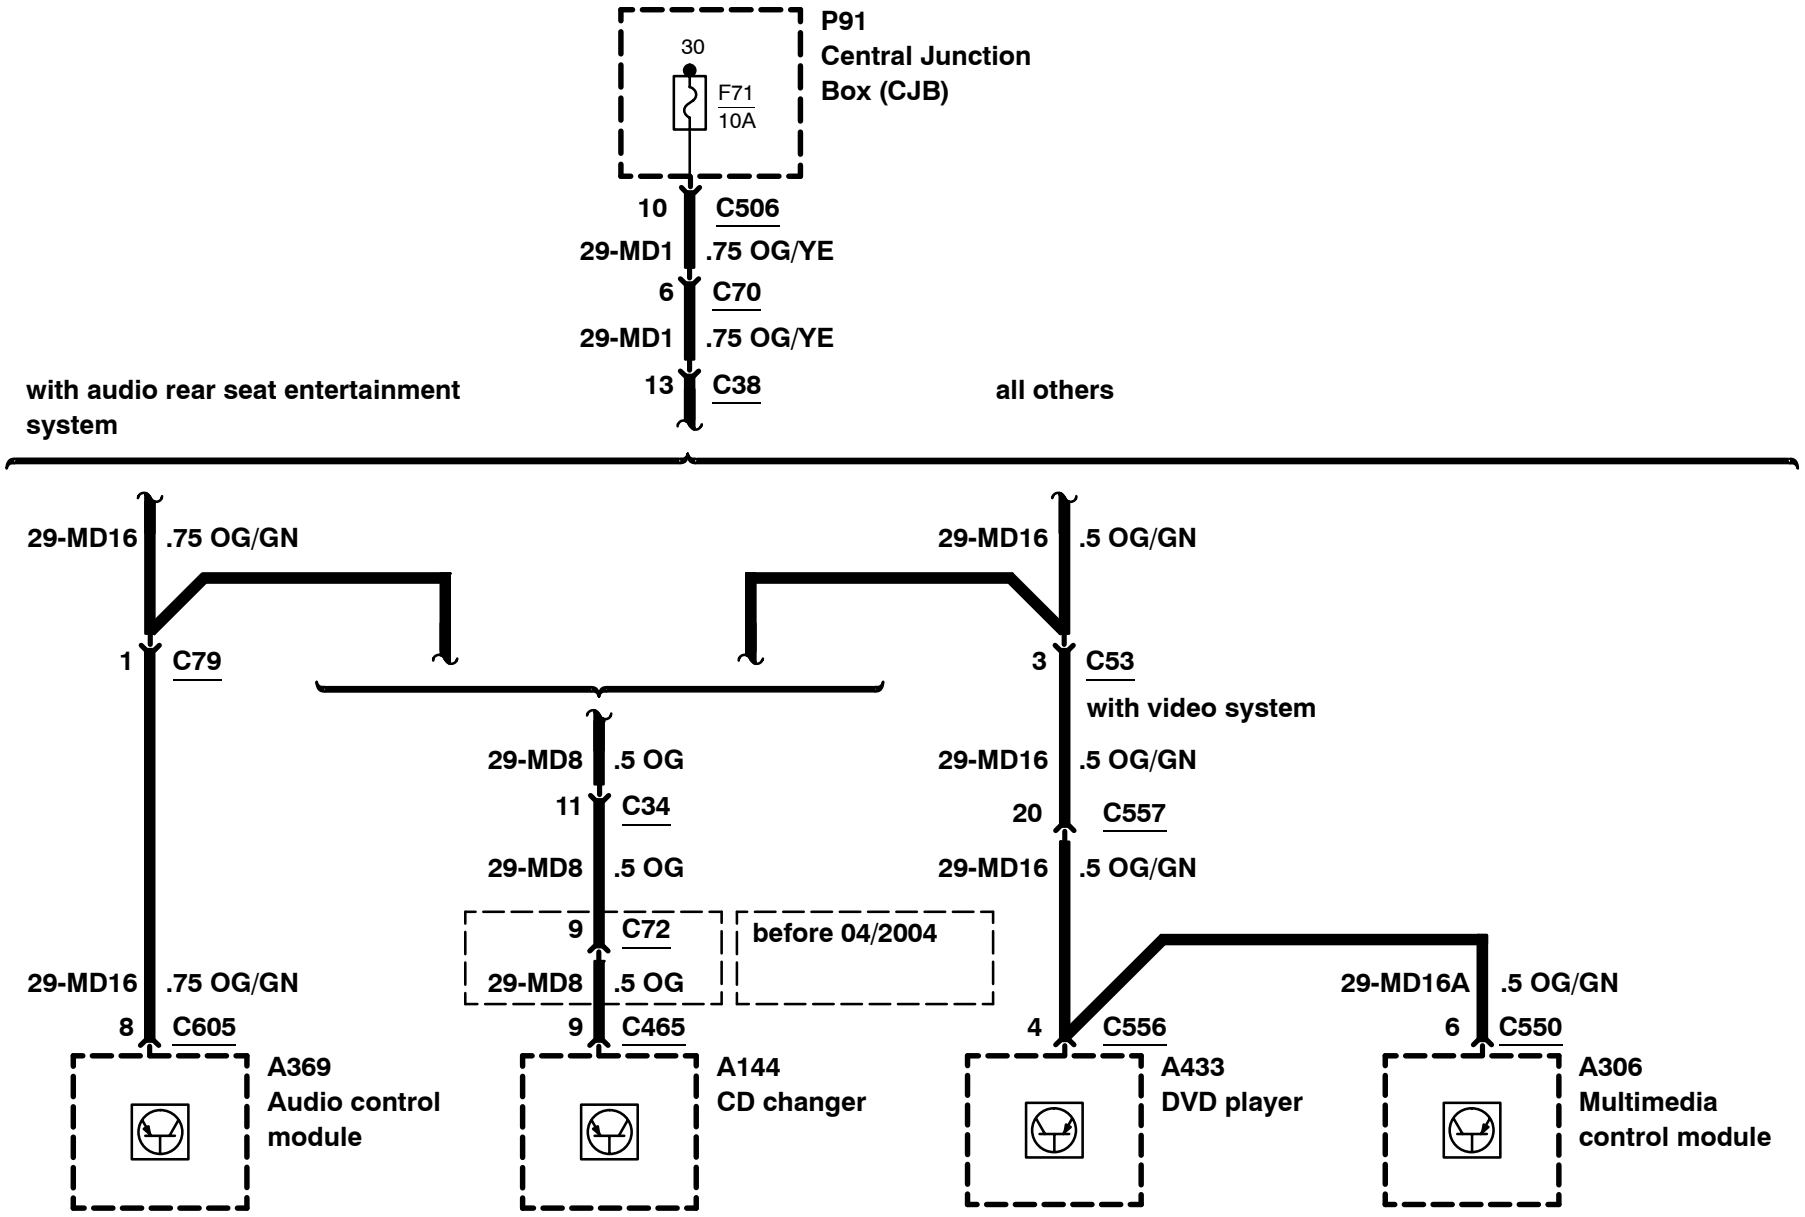


Fuse Details – F71, Bluetooth voice control

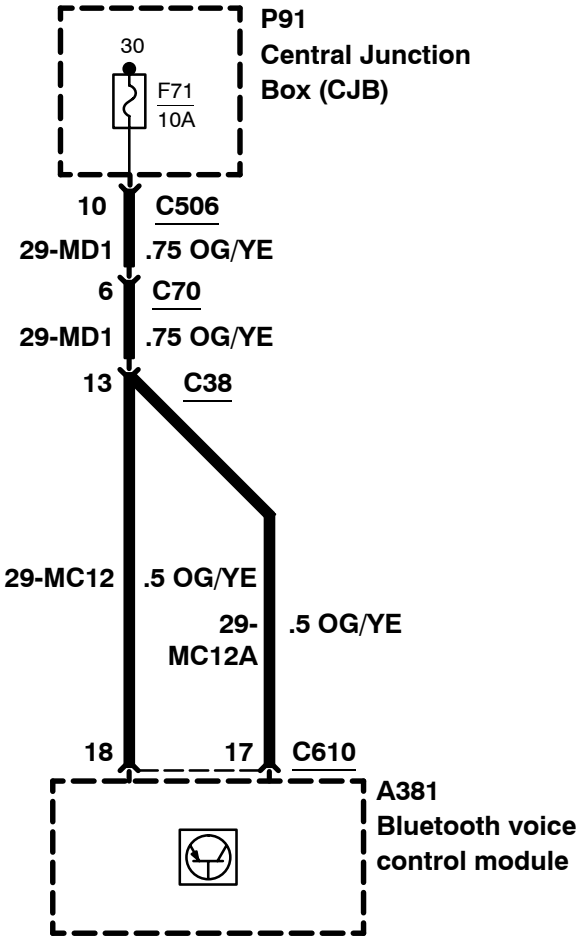

Fuse Details – F72, without external CD changer and video system

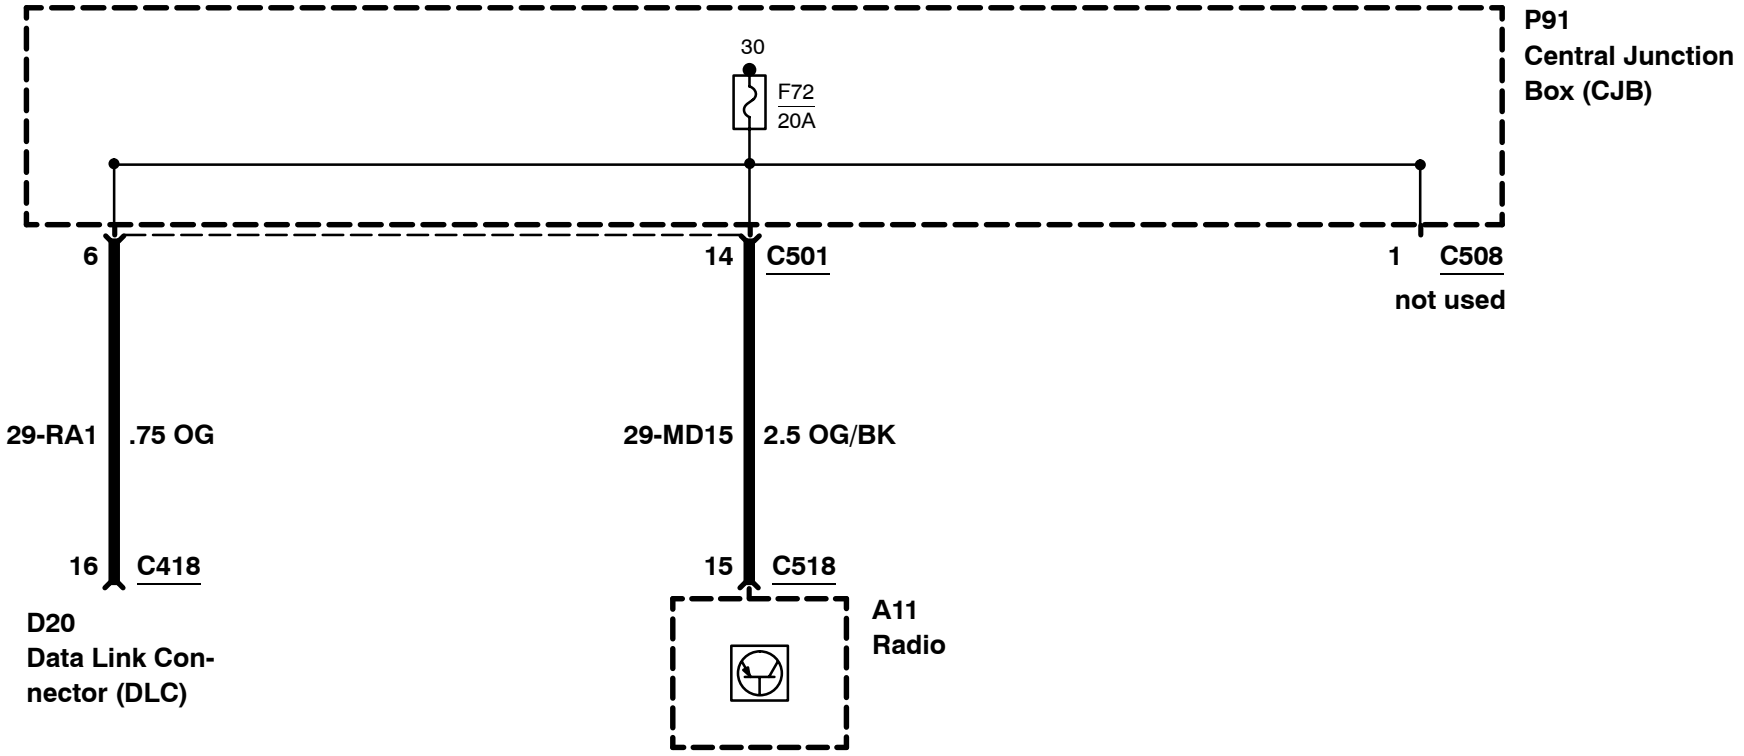


Fuse Details – F72, with external CD changer and/or video system

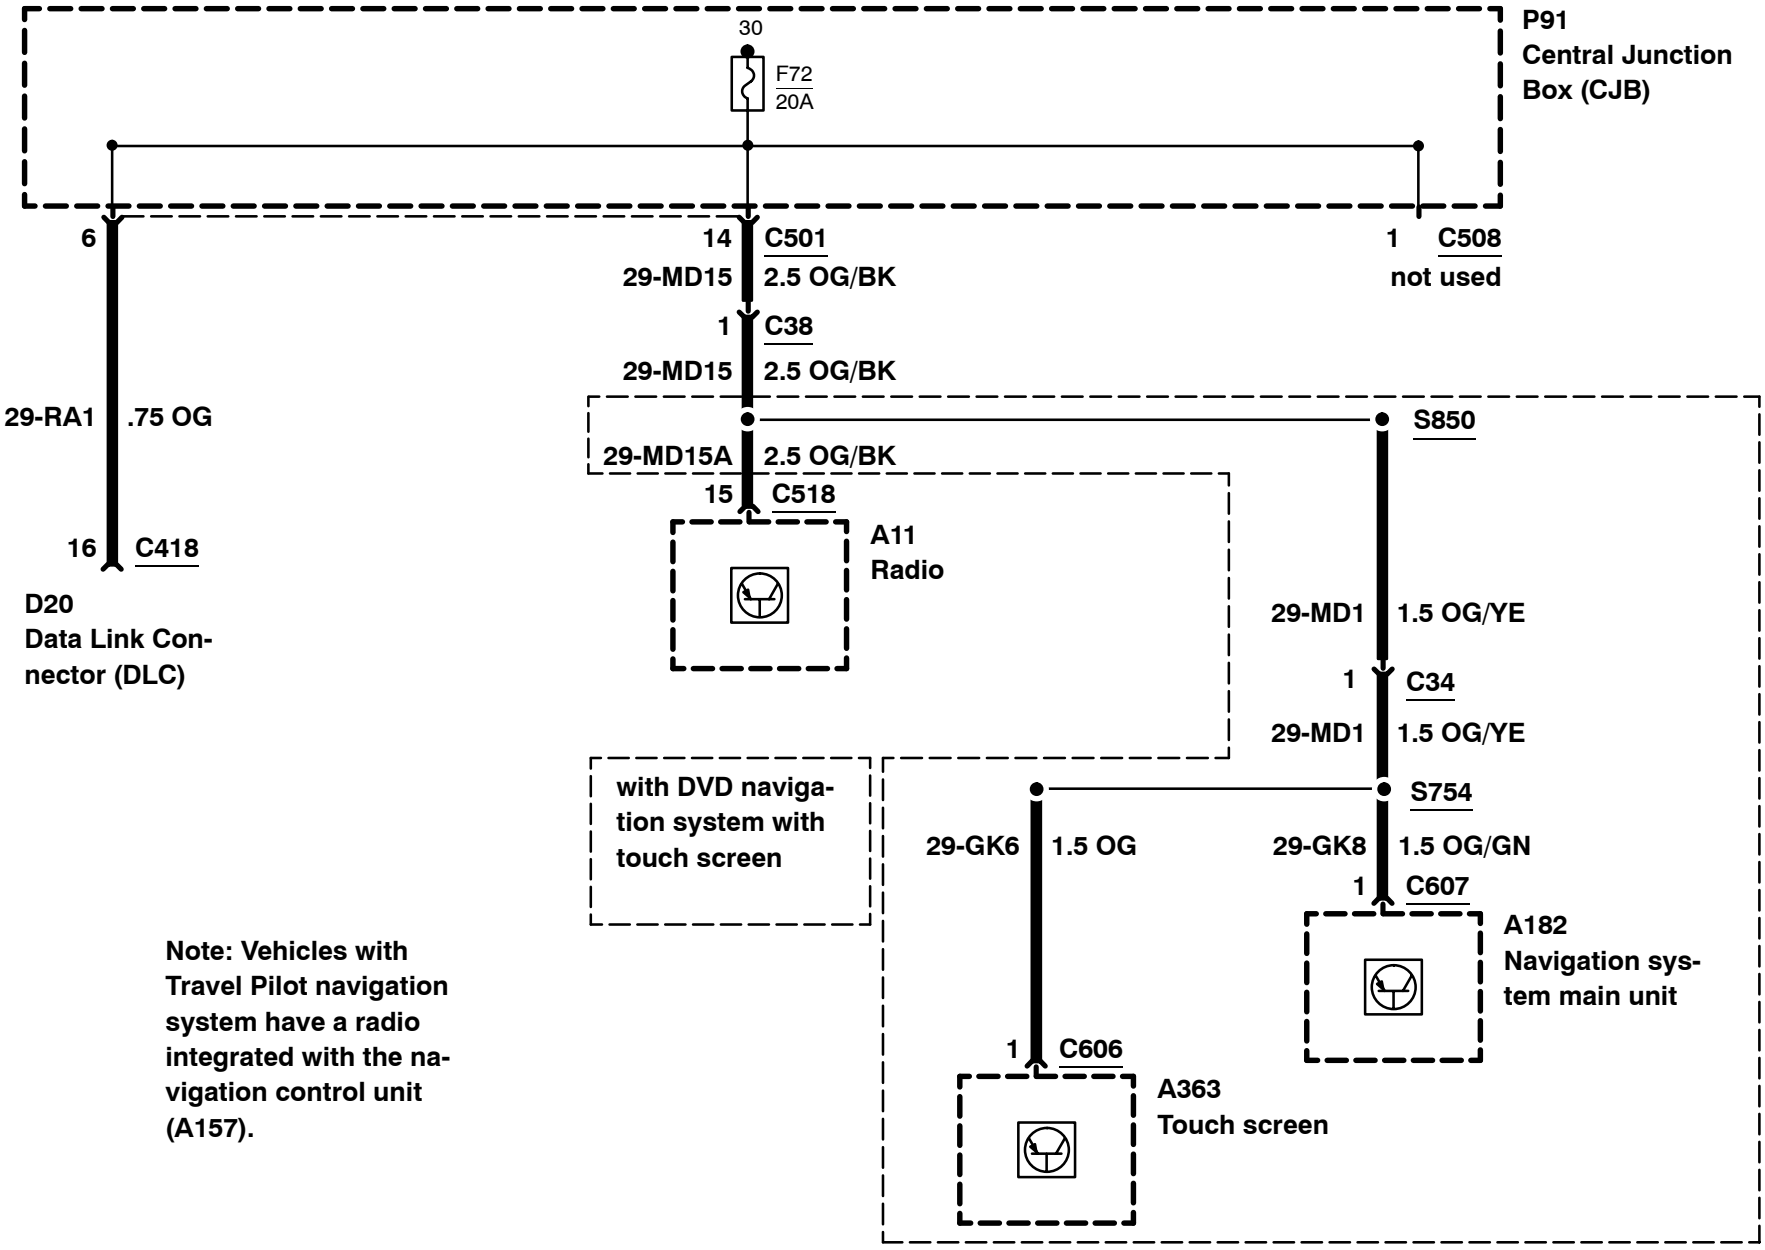


Fuse Details – F73




Fuse Details – F74, before 01/2004

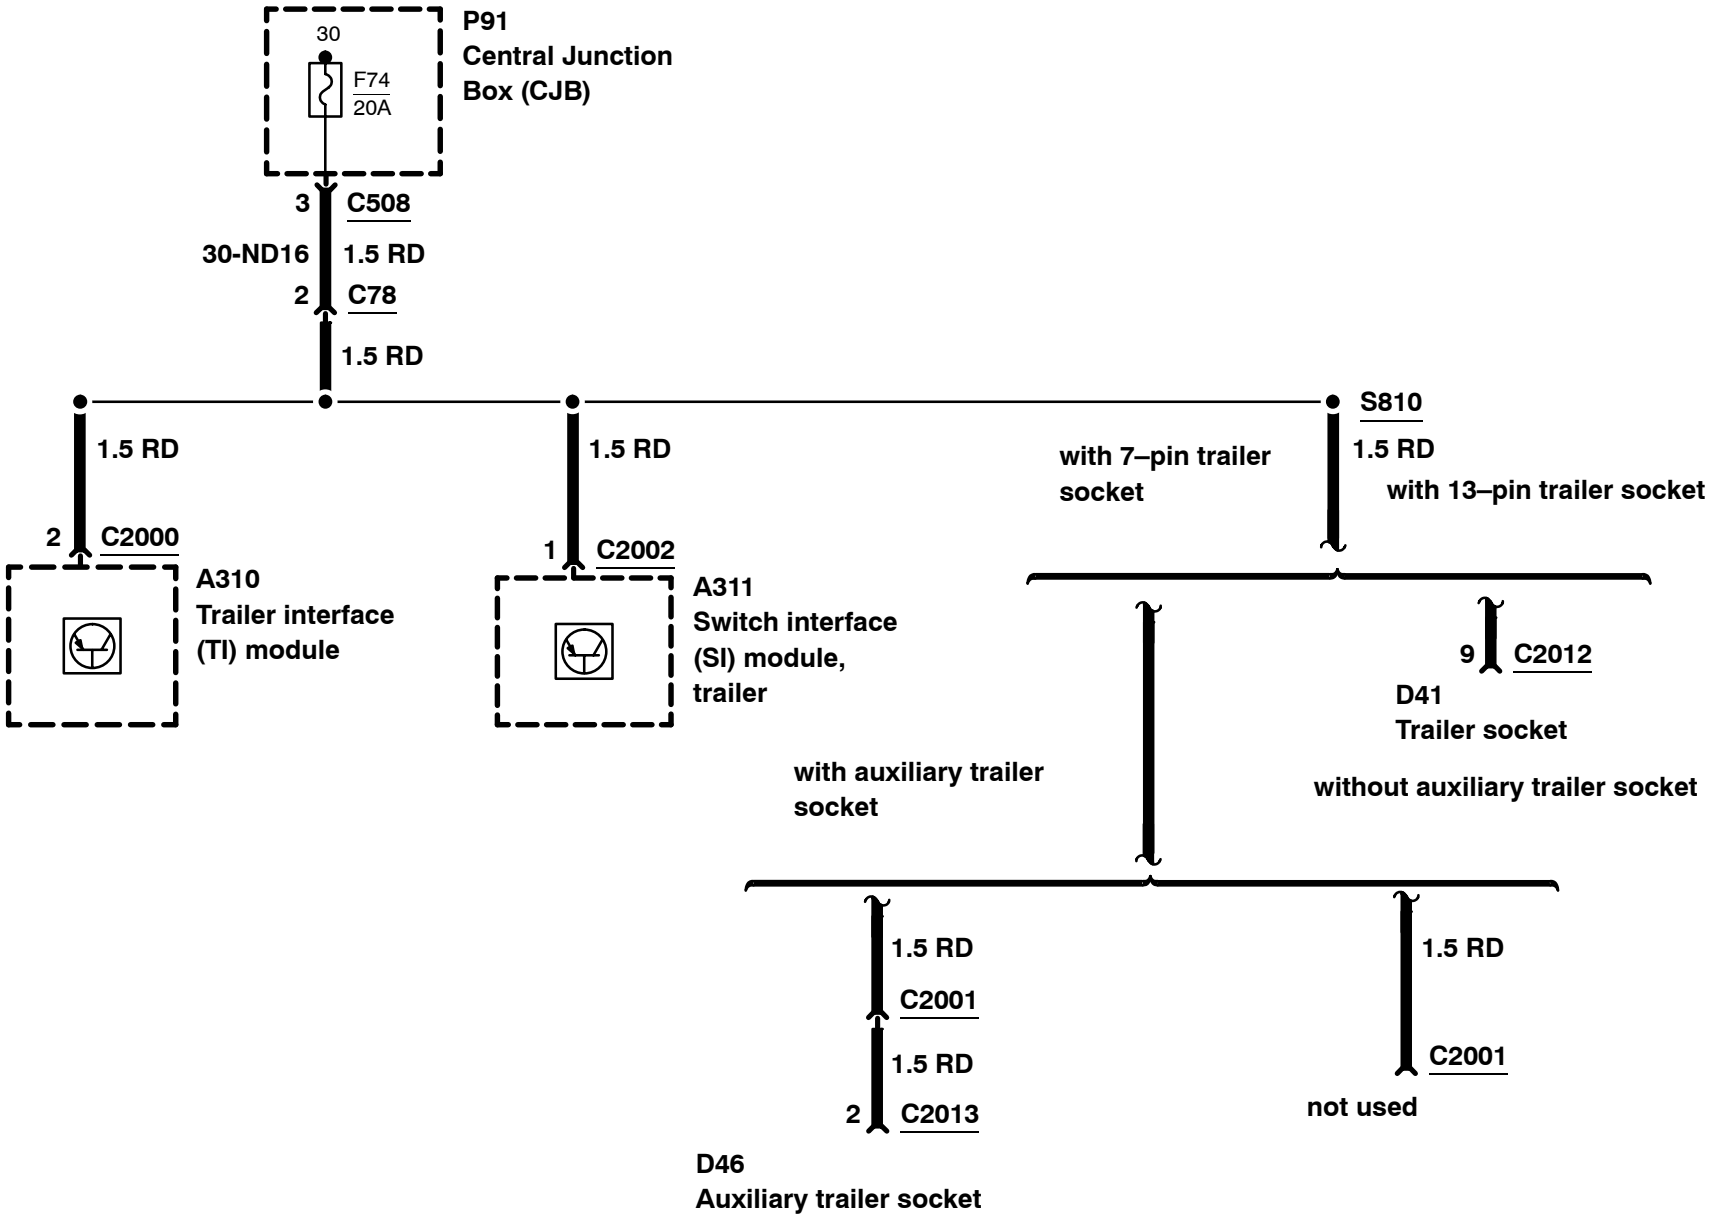


Fuse Details – F74, as of 01/2004, F201, with 7–pin trailer socket

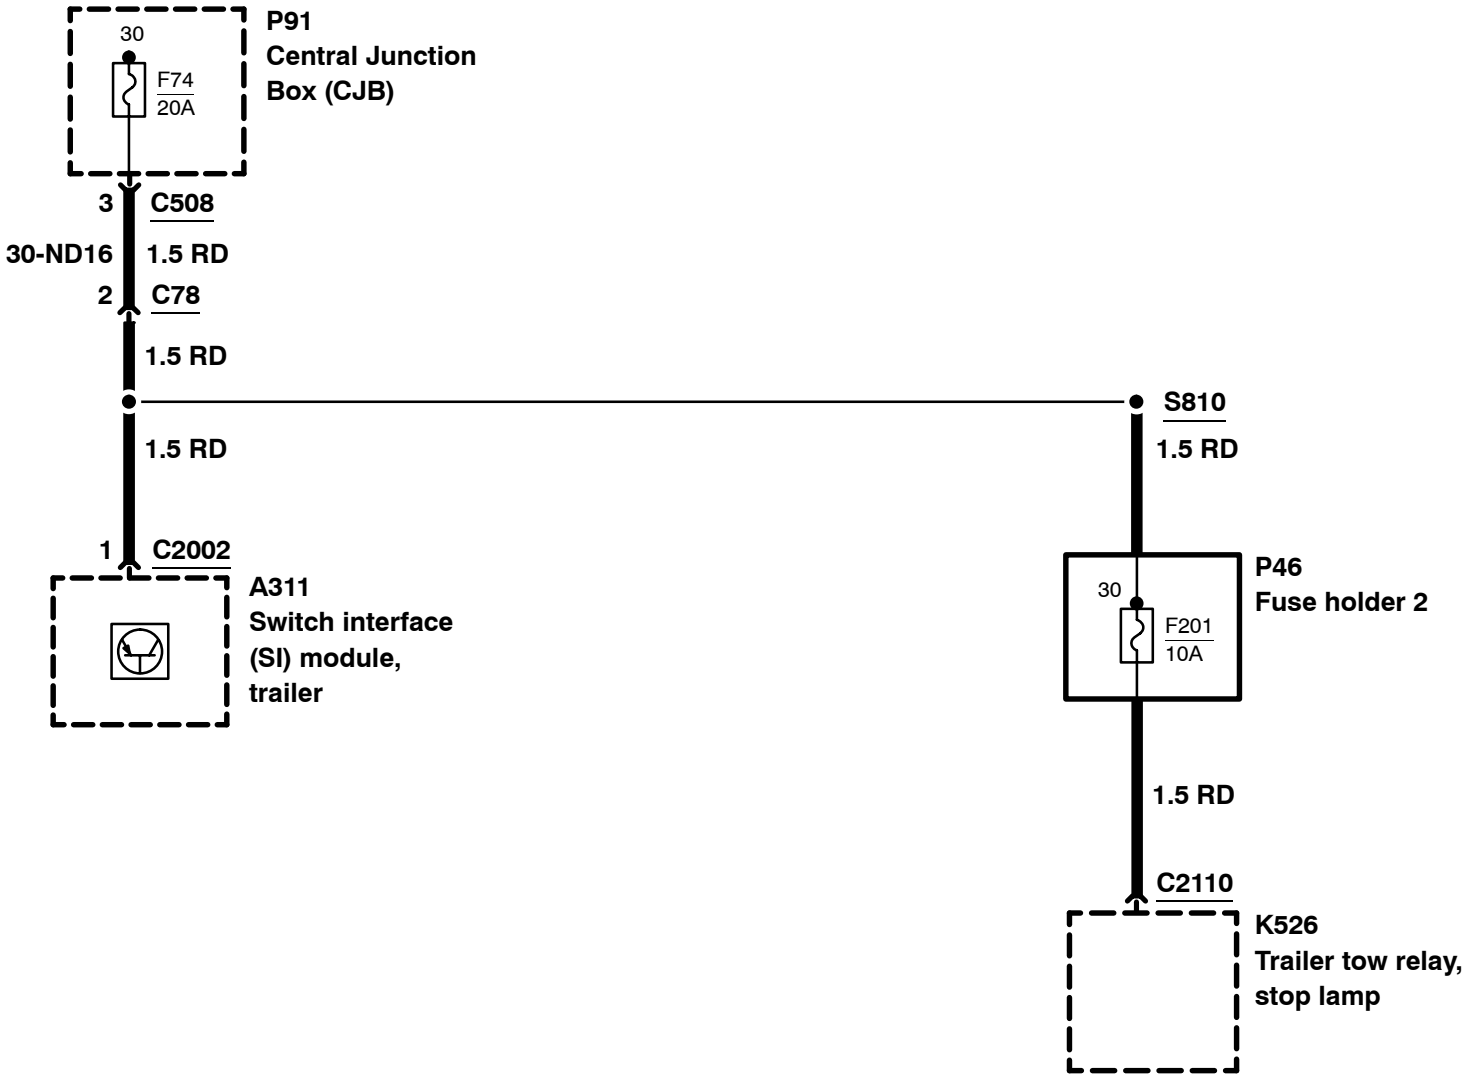


Fuse Details – F74, as of 01/2004, F200, F201, with 13–pin trailer socket

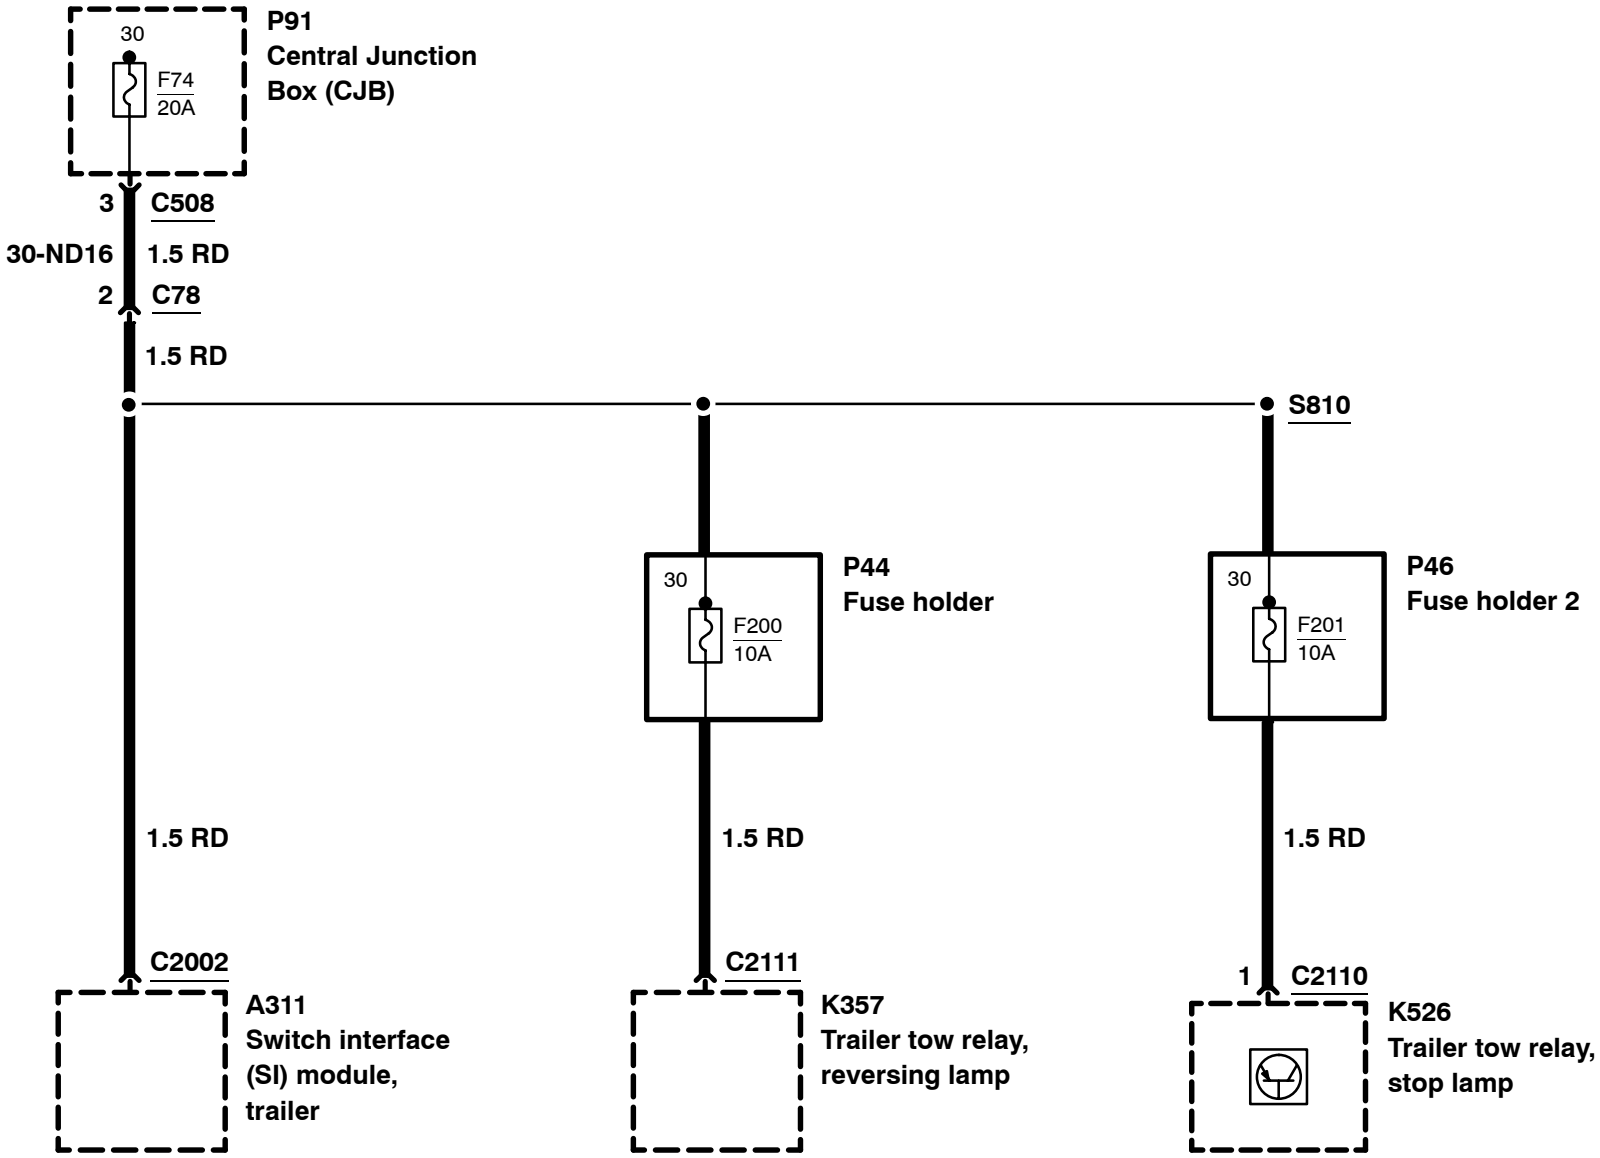


Fuse Details – F75, except 5–speed automatic transmission (5F31J)

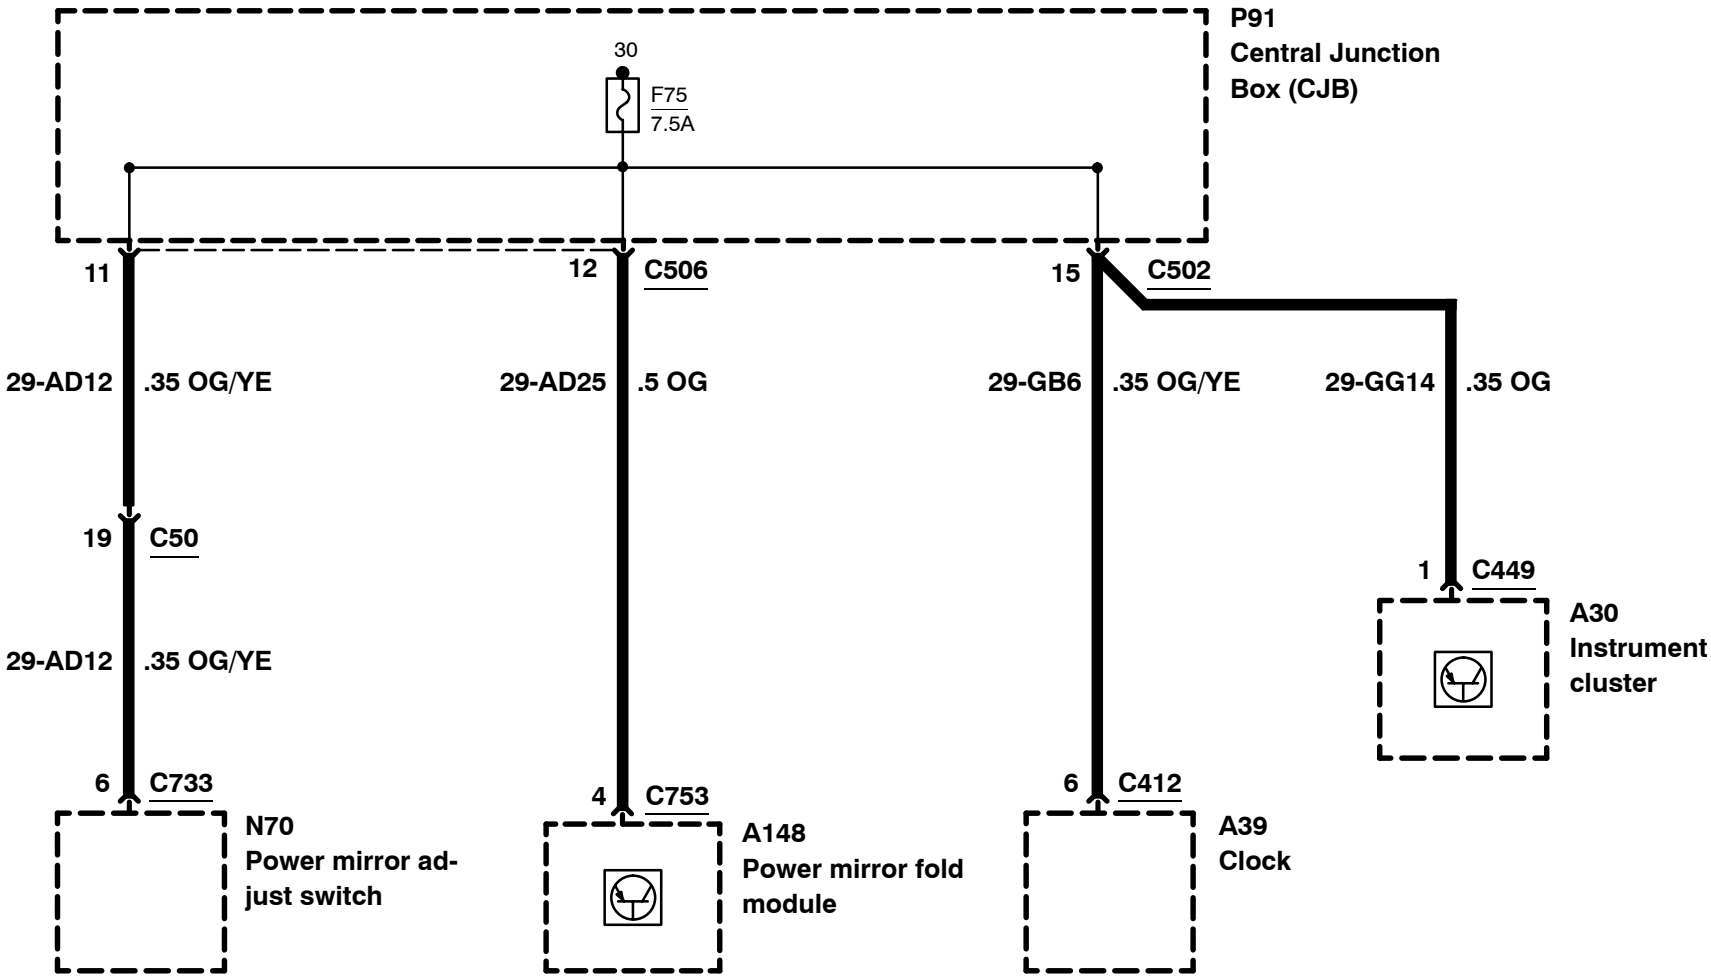


Fuse Details – F75, 5–speed automatic transmission (5F31J)

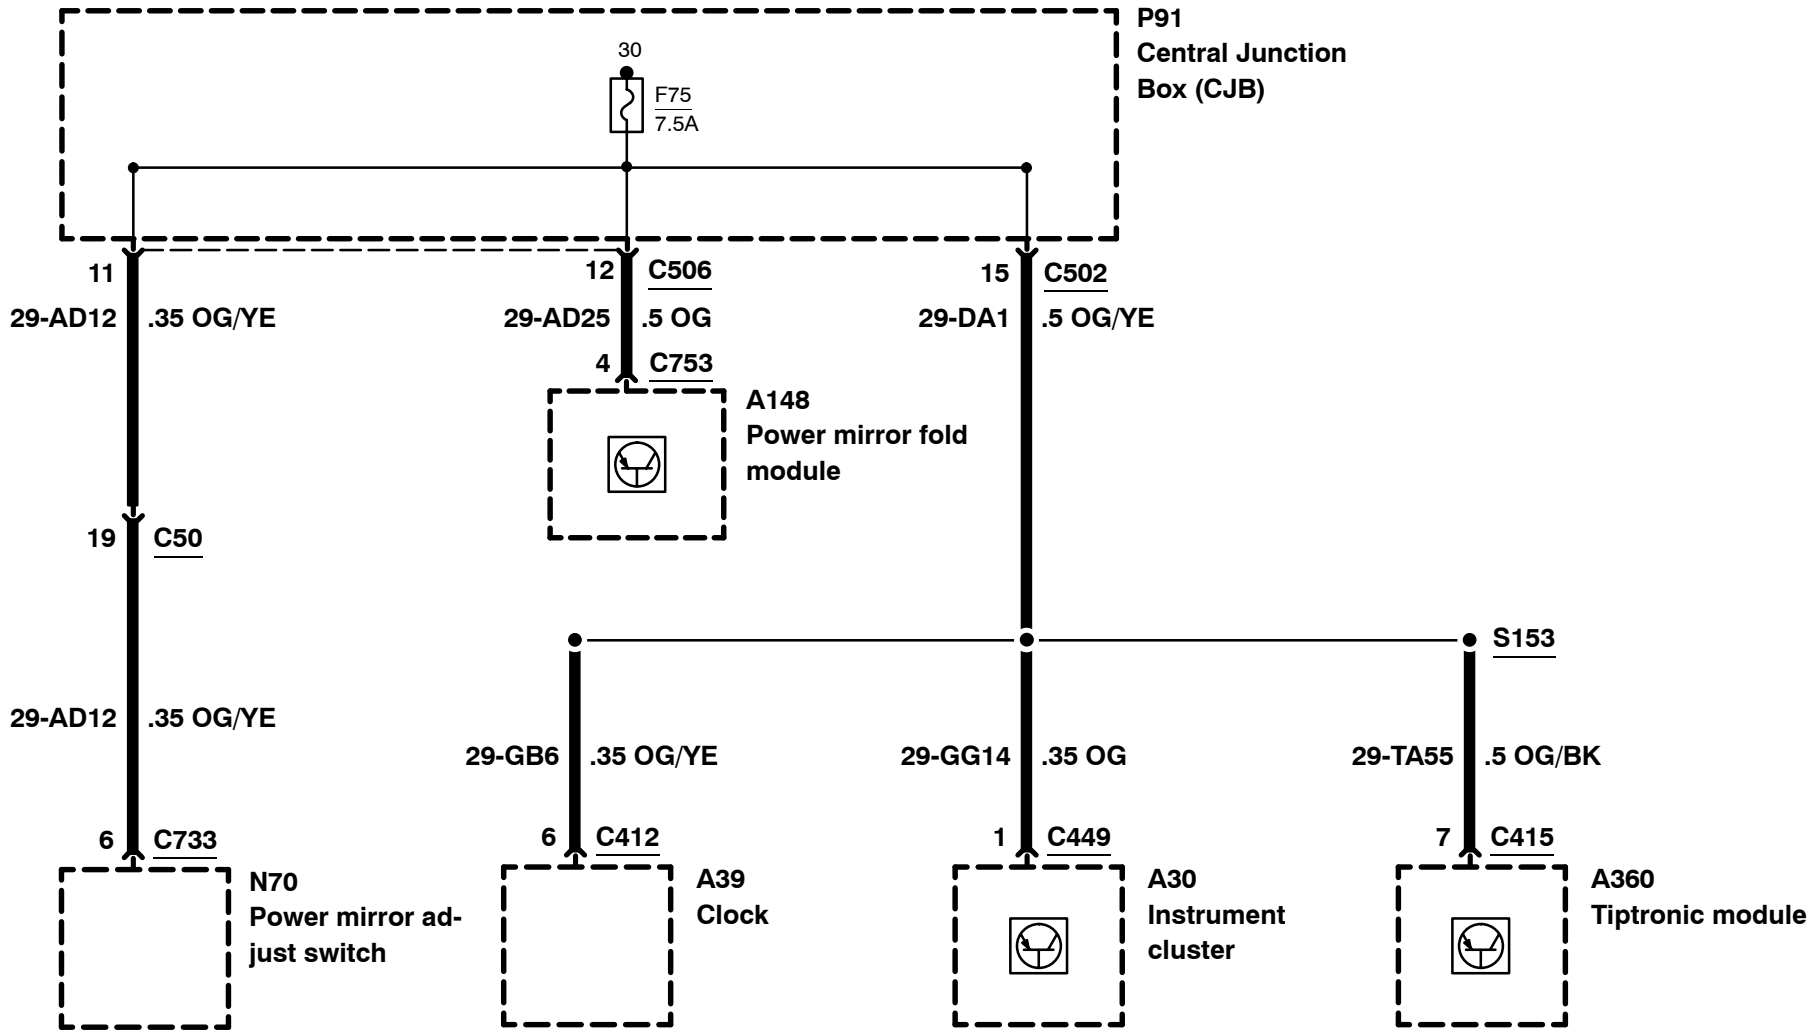


Fuse Details – F76, F77, before 04/2004

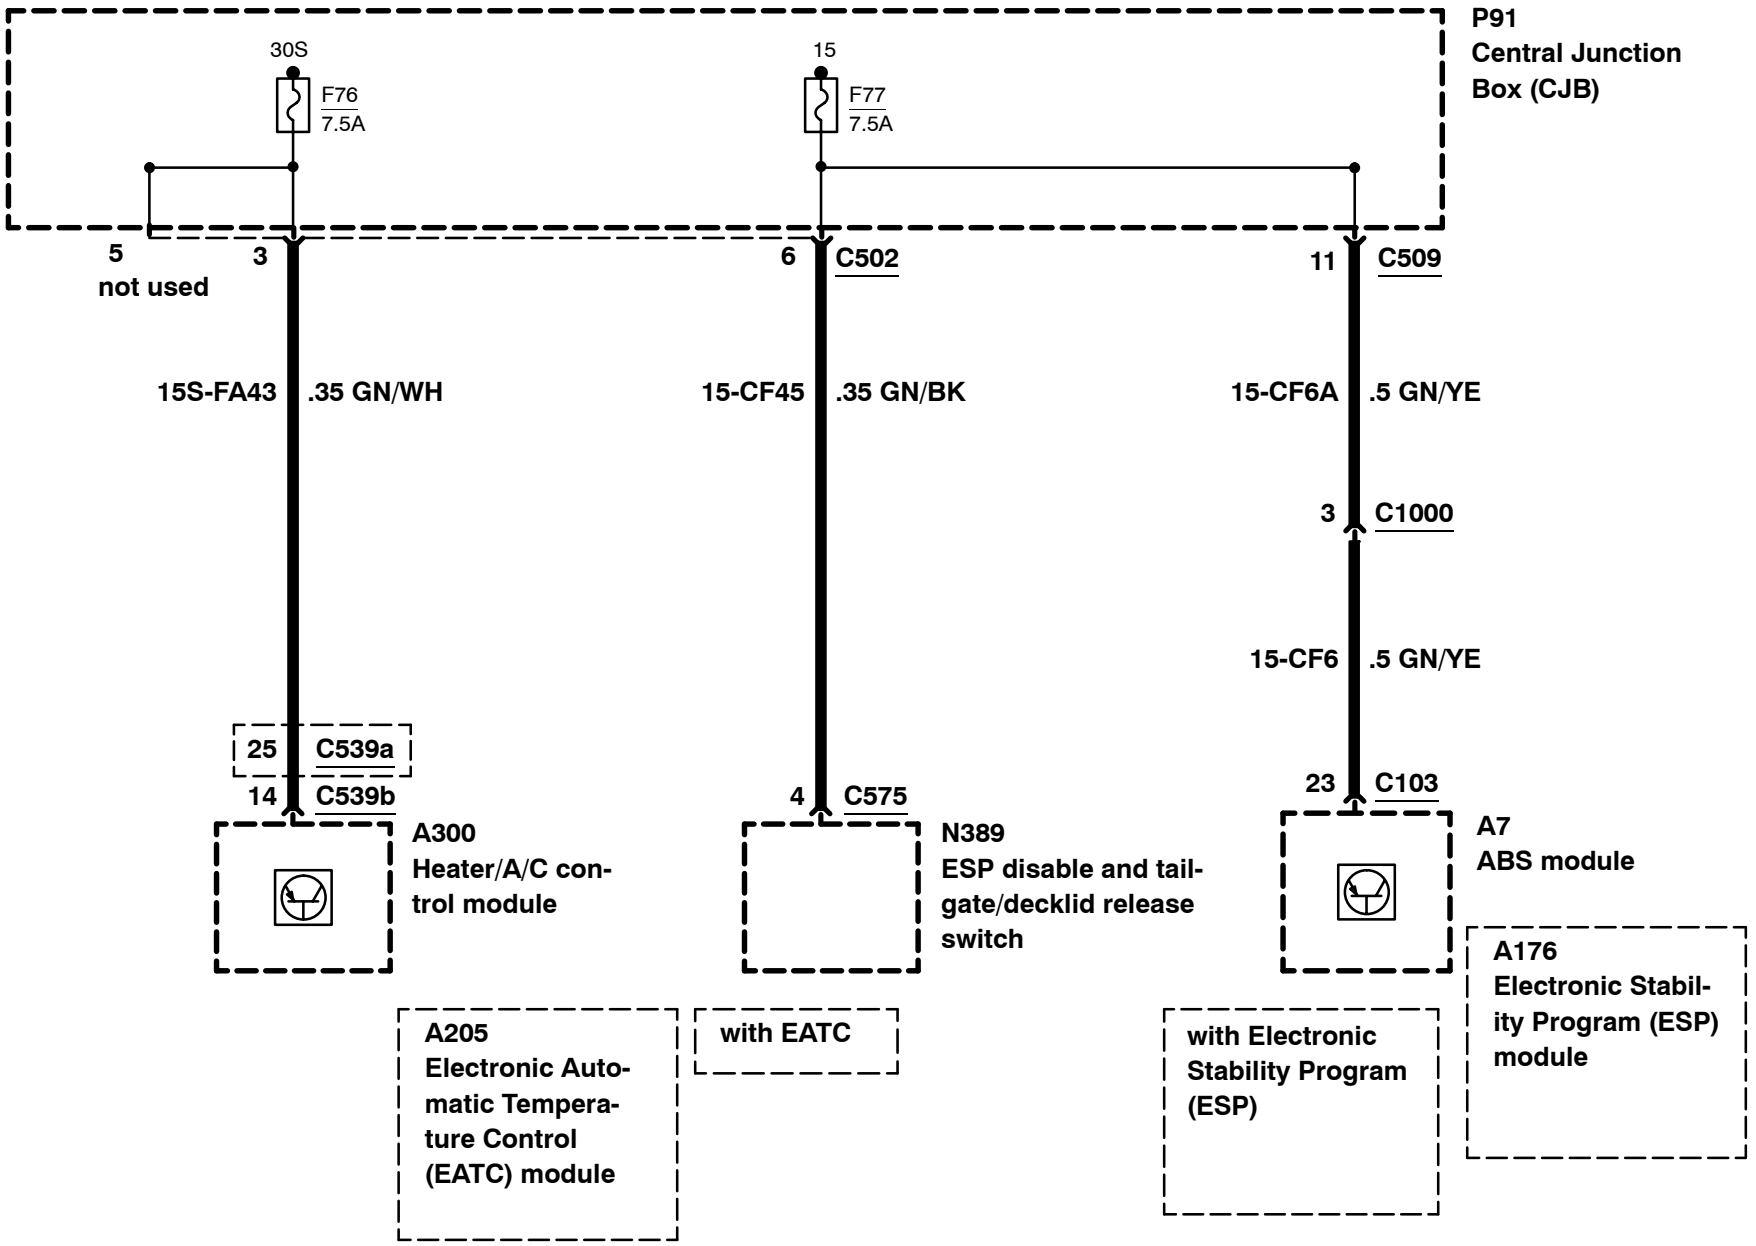


Fuse Details – F76, F77, as of 04/2004

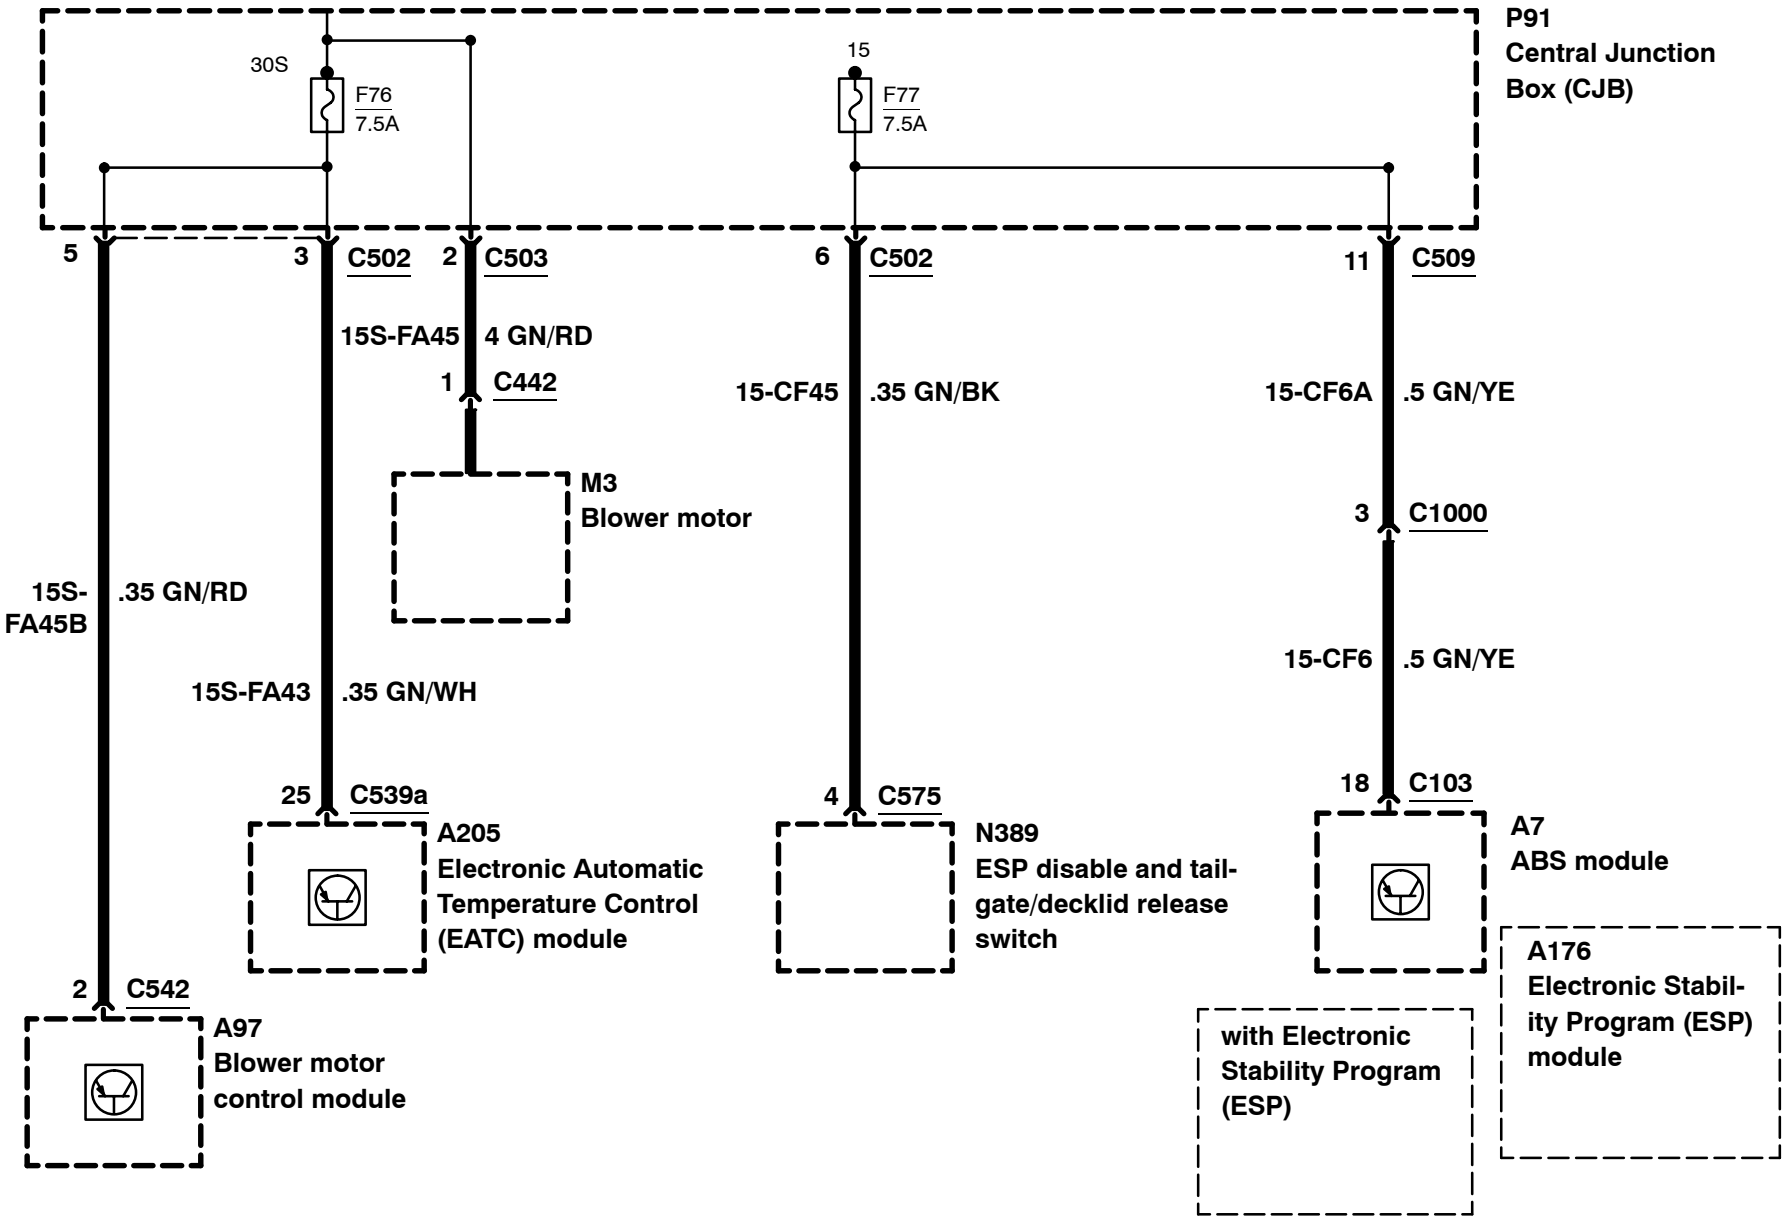


Fuse Details – F78, F80

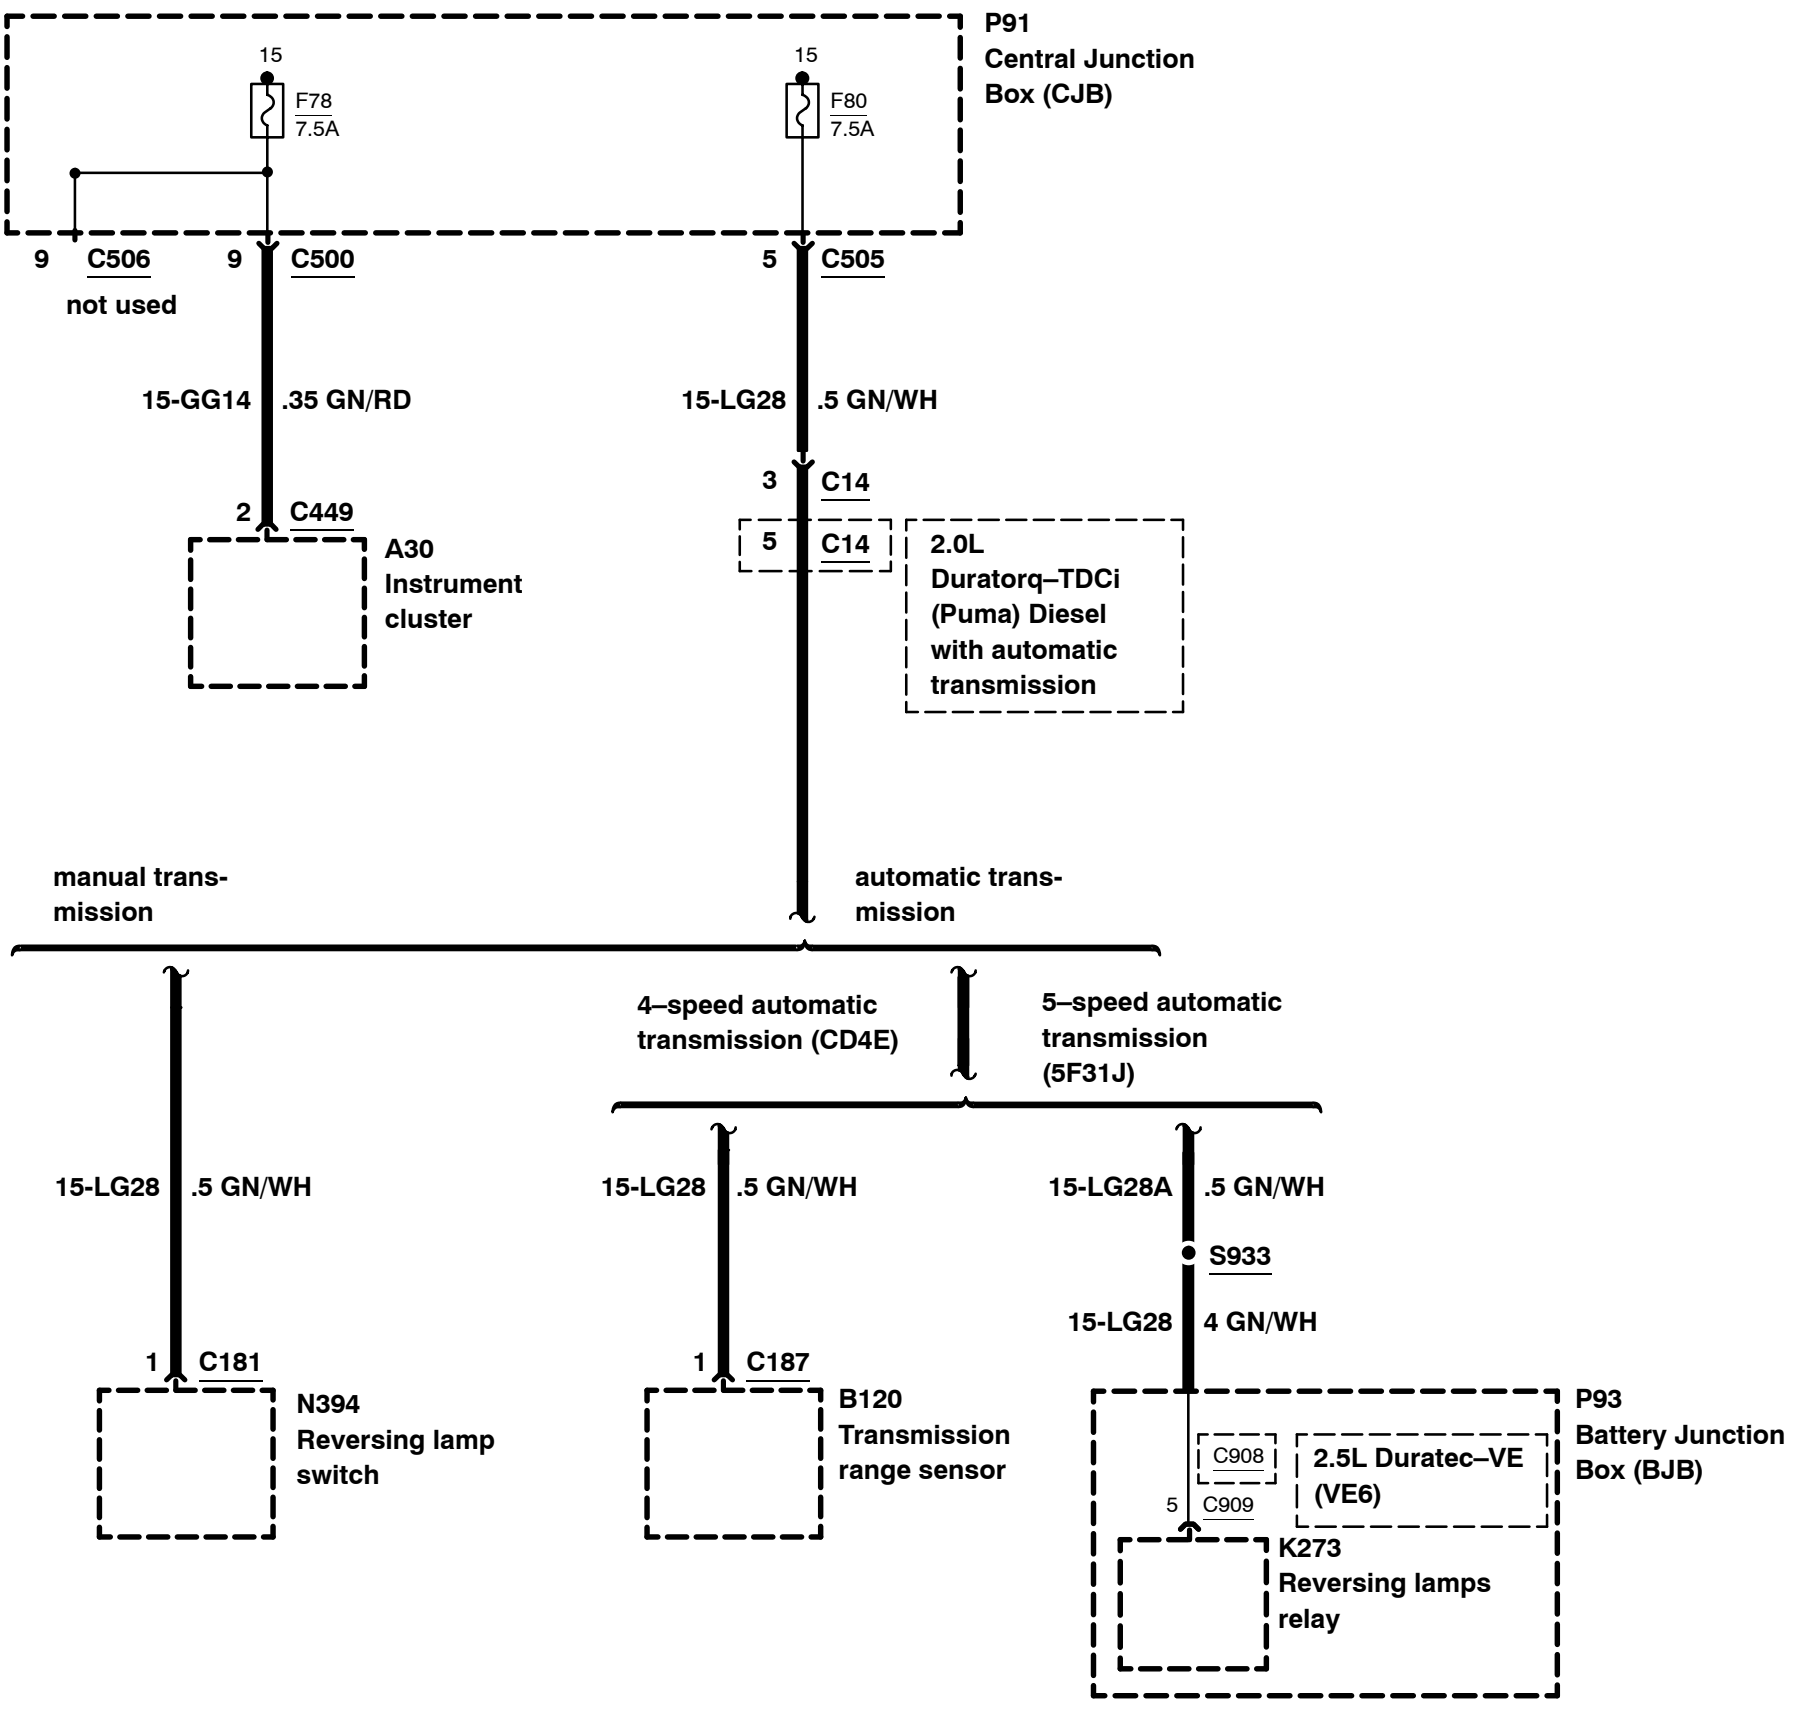


Fuse Details – F81

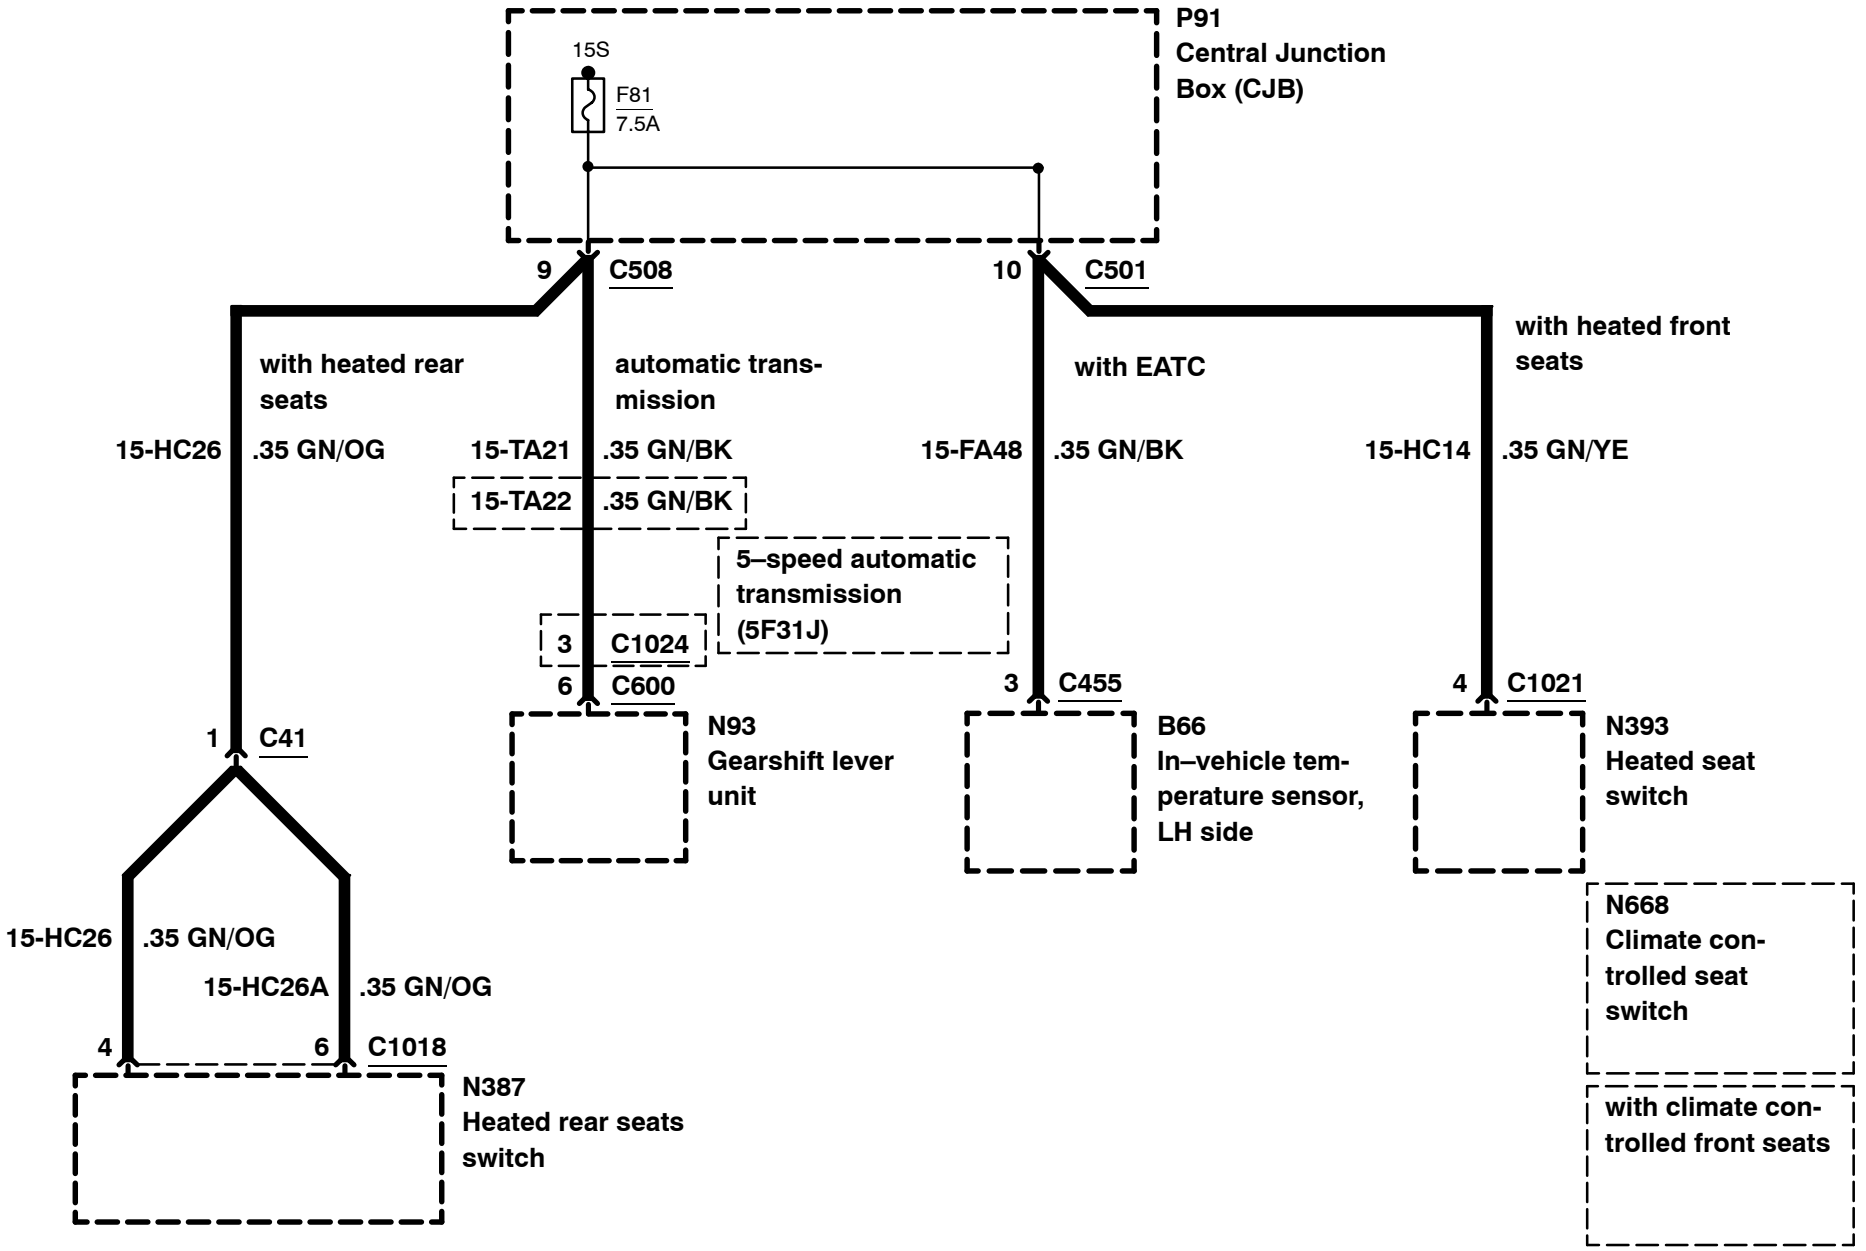


Fuse Details – F82, Petrol engines

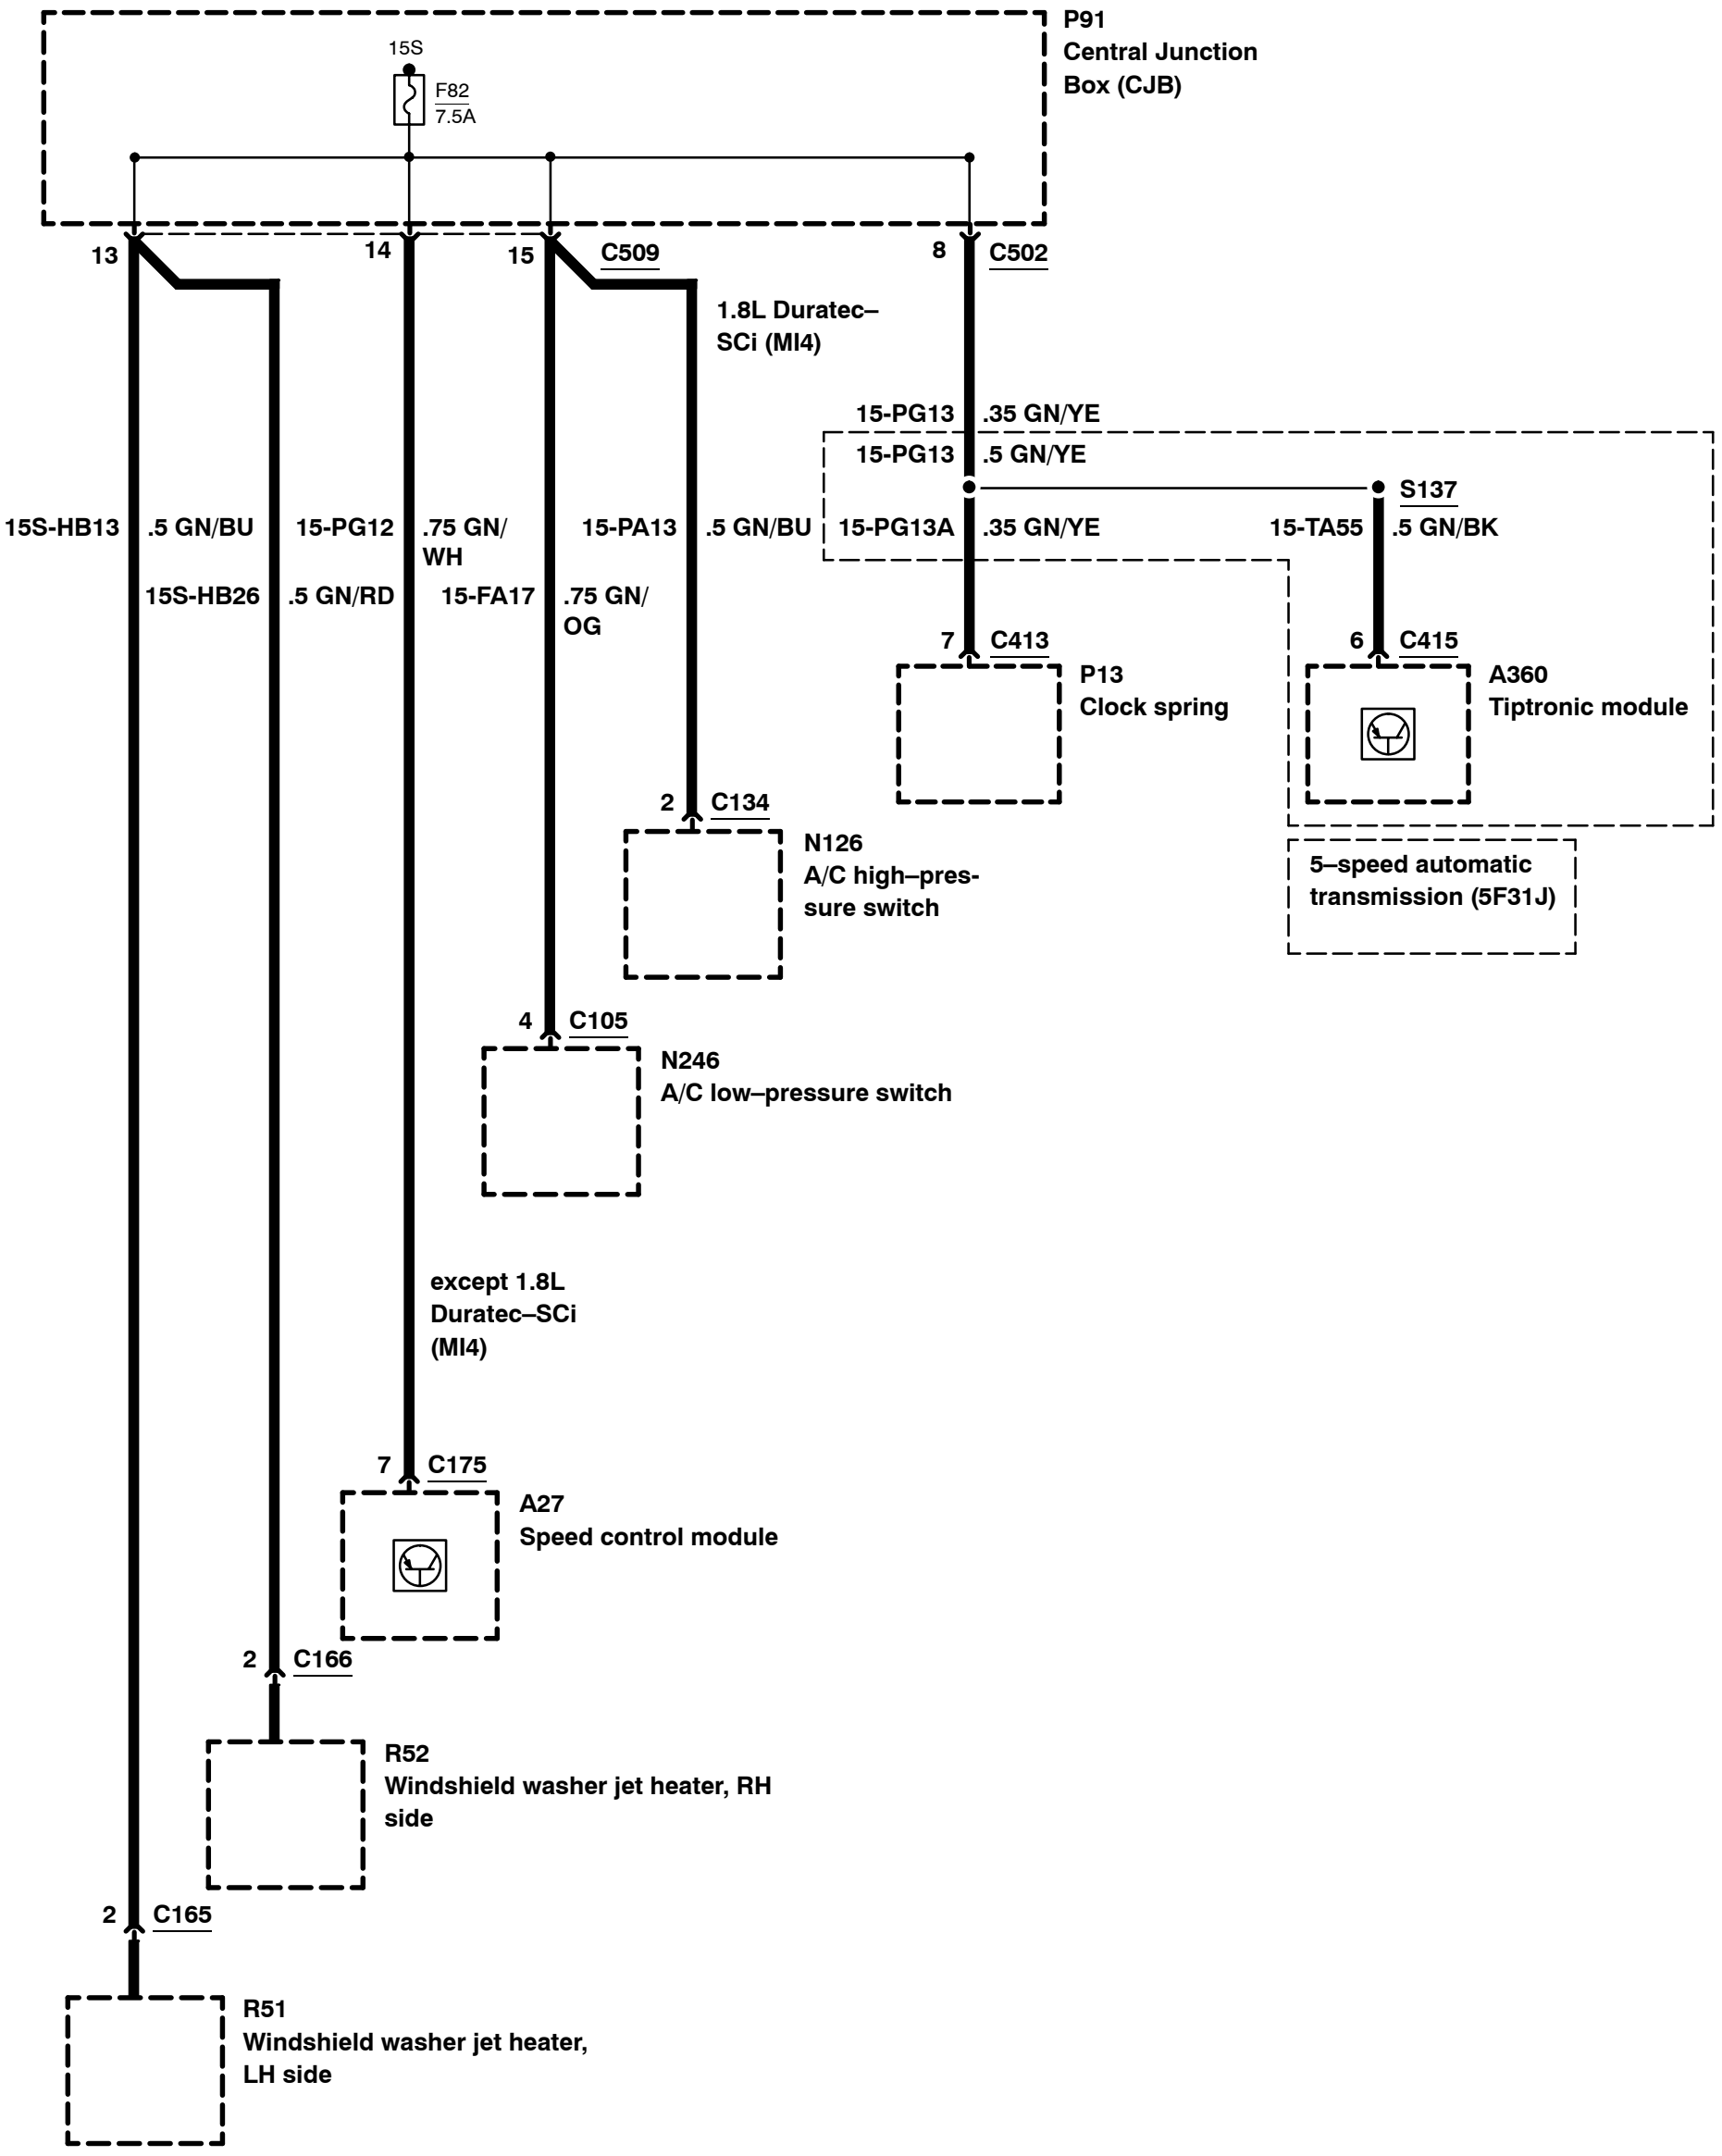


Fuse Details – F82, Diesel engines

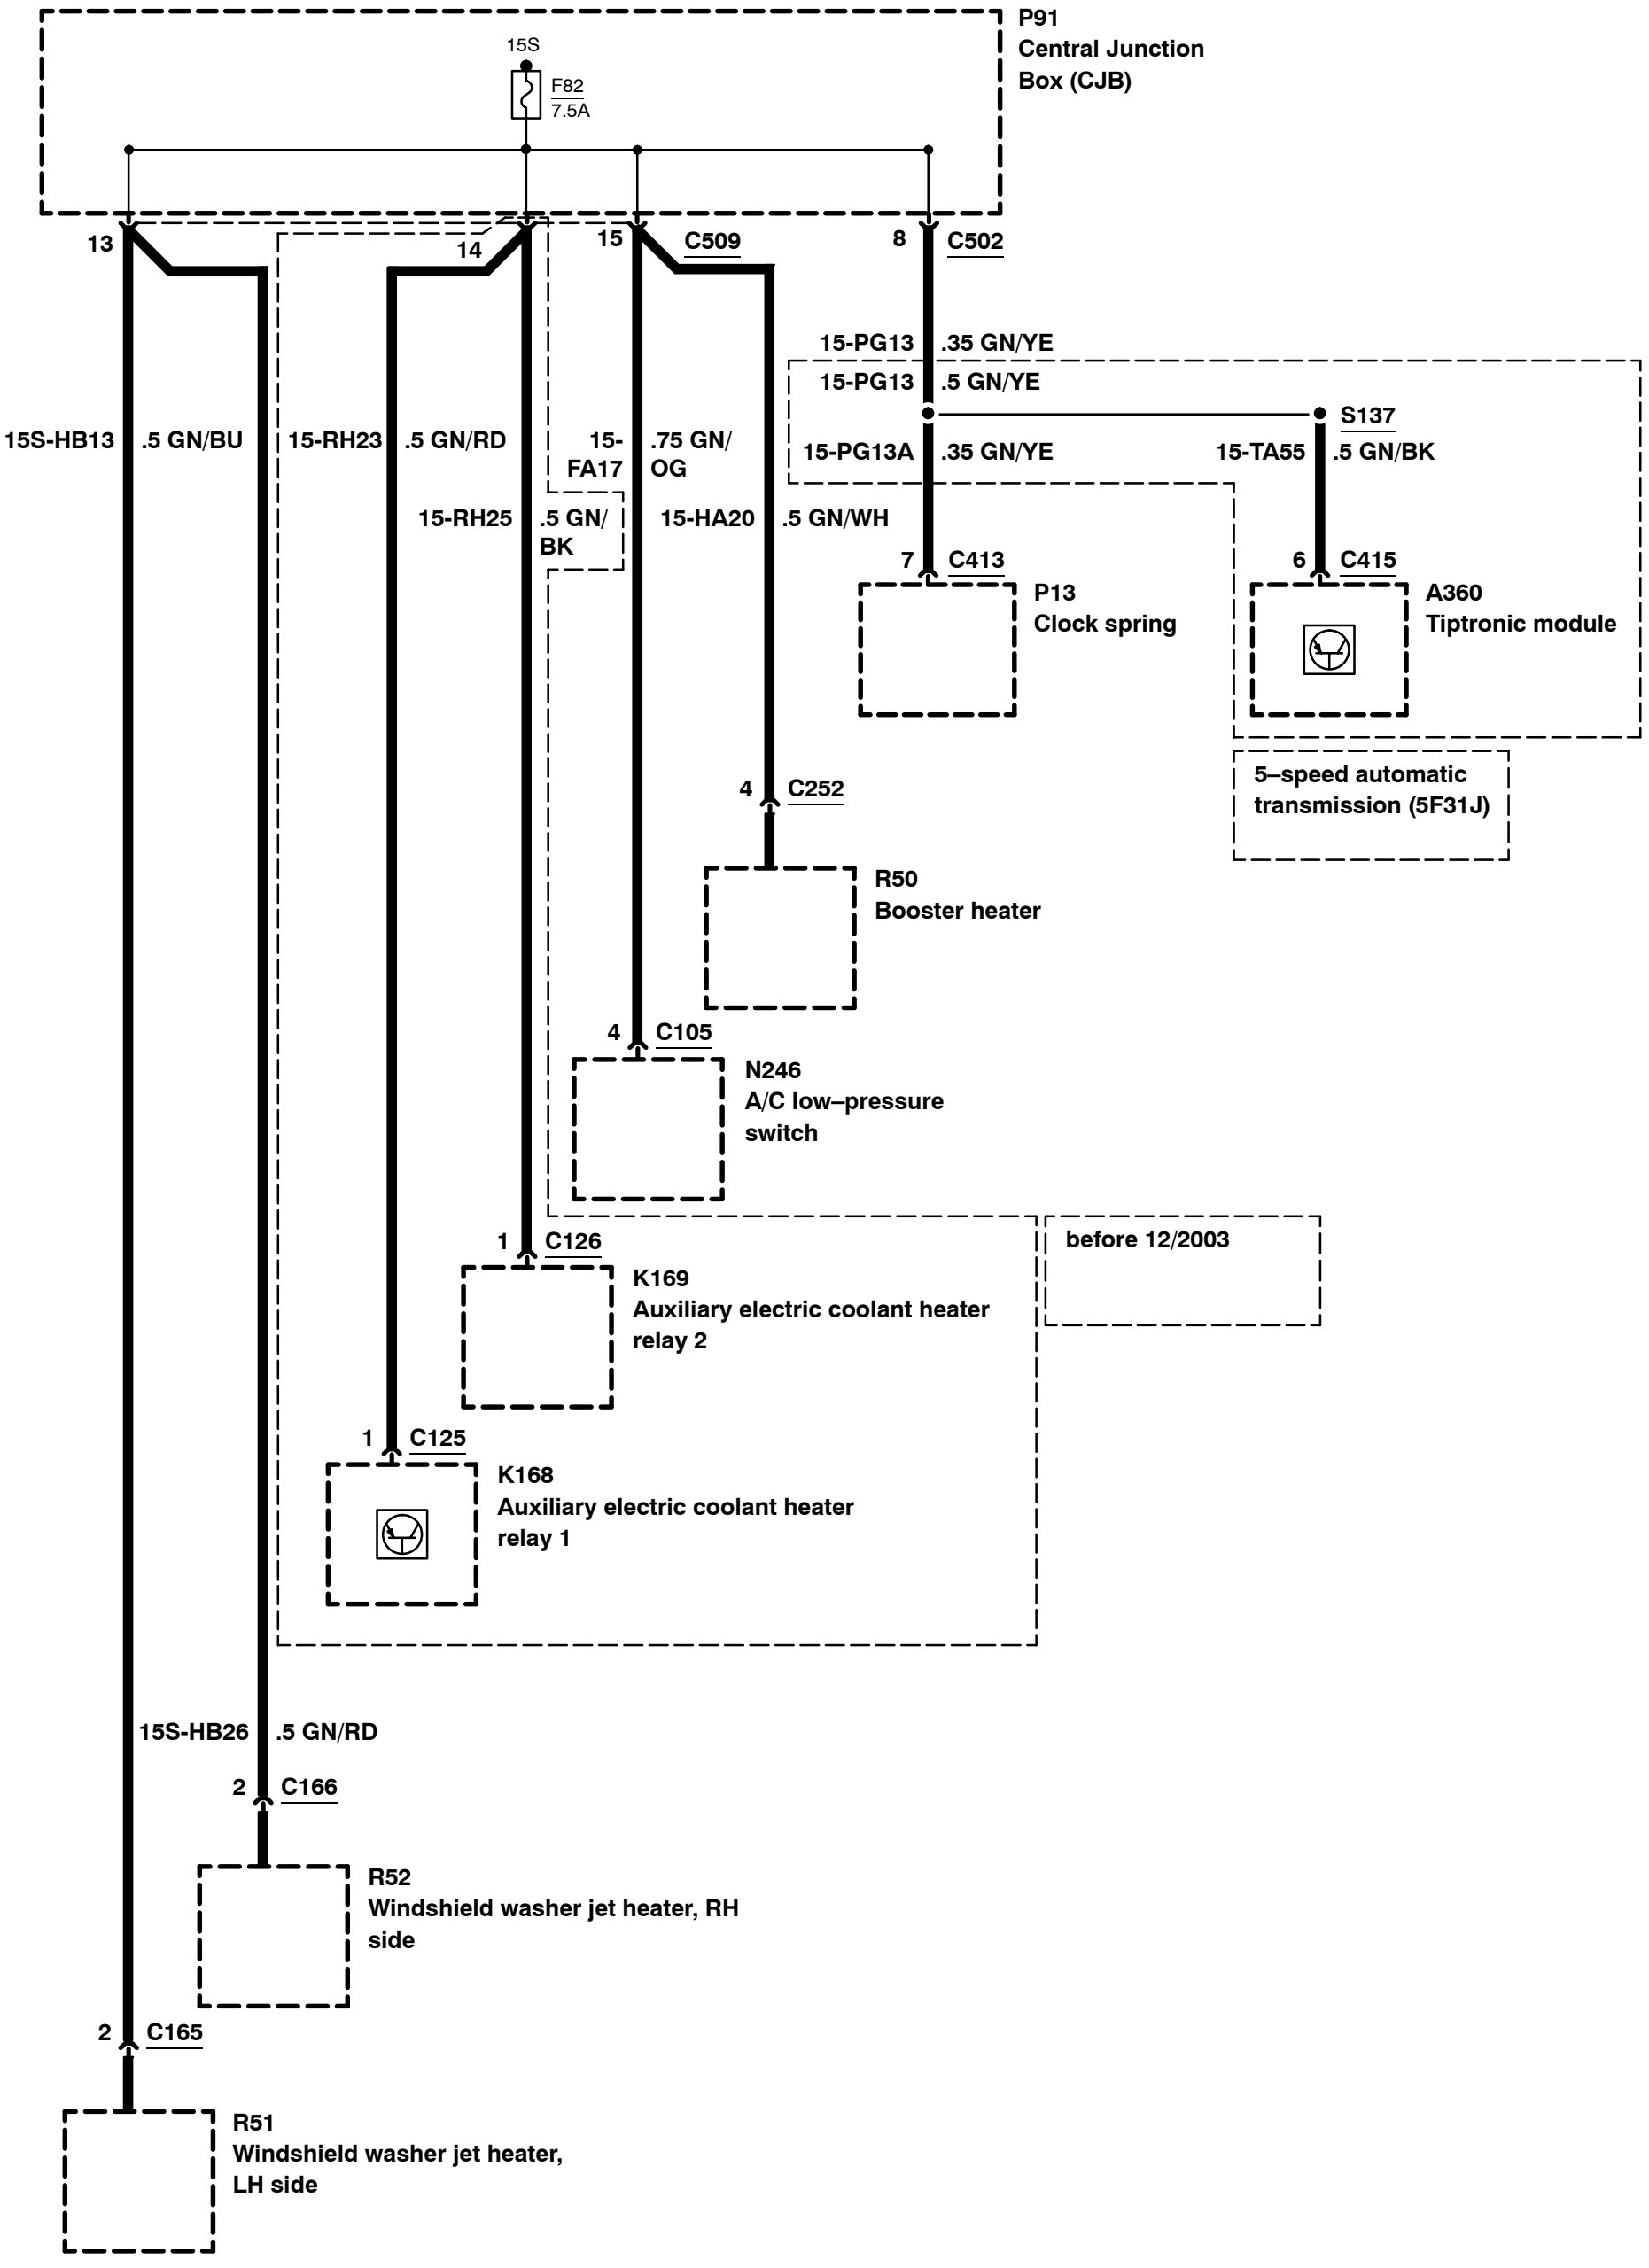


Fuse Details – F83

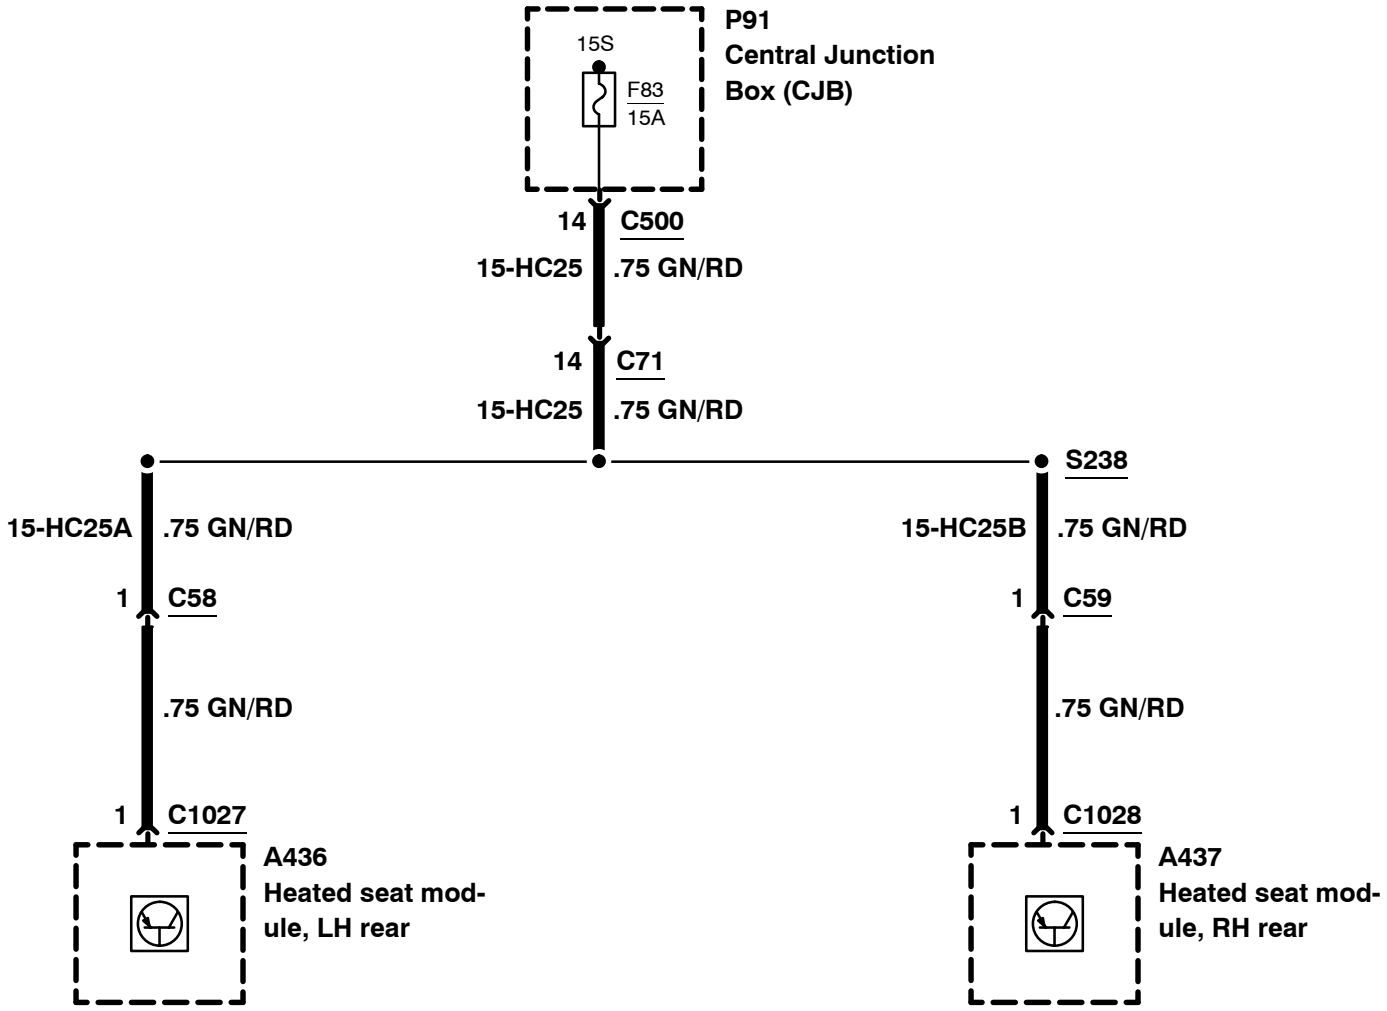


Fuse Details – F85, F86

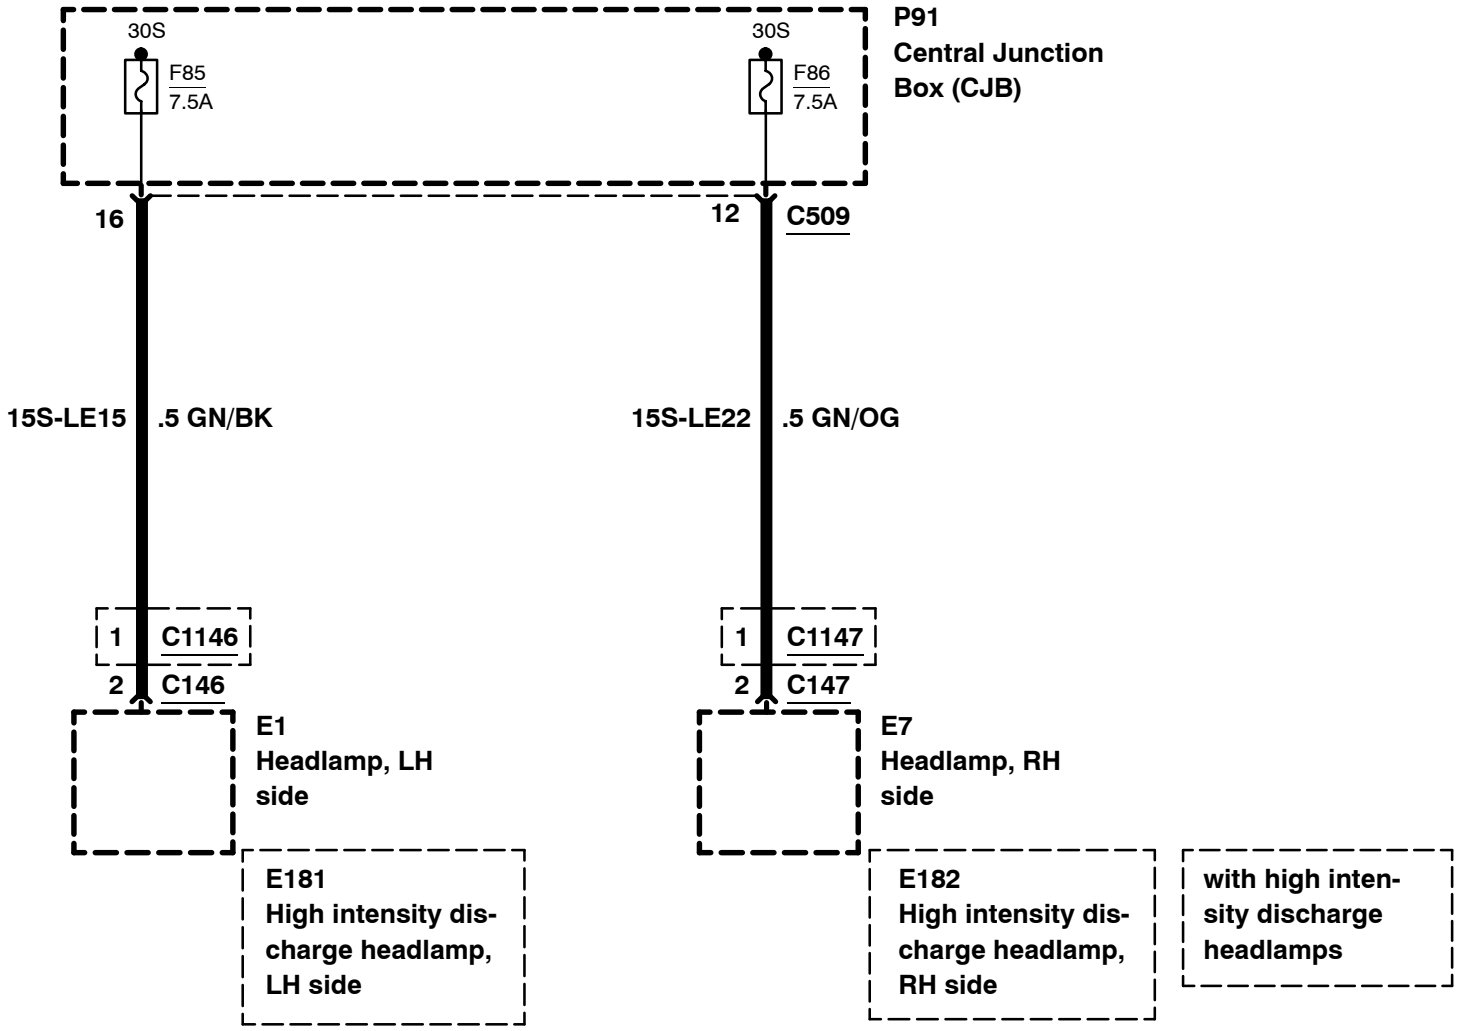


Fuse Details – F88, F89, without autolamps

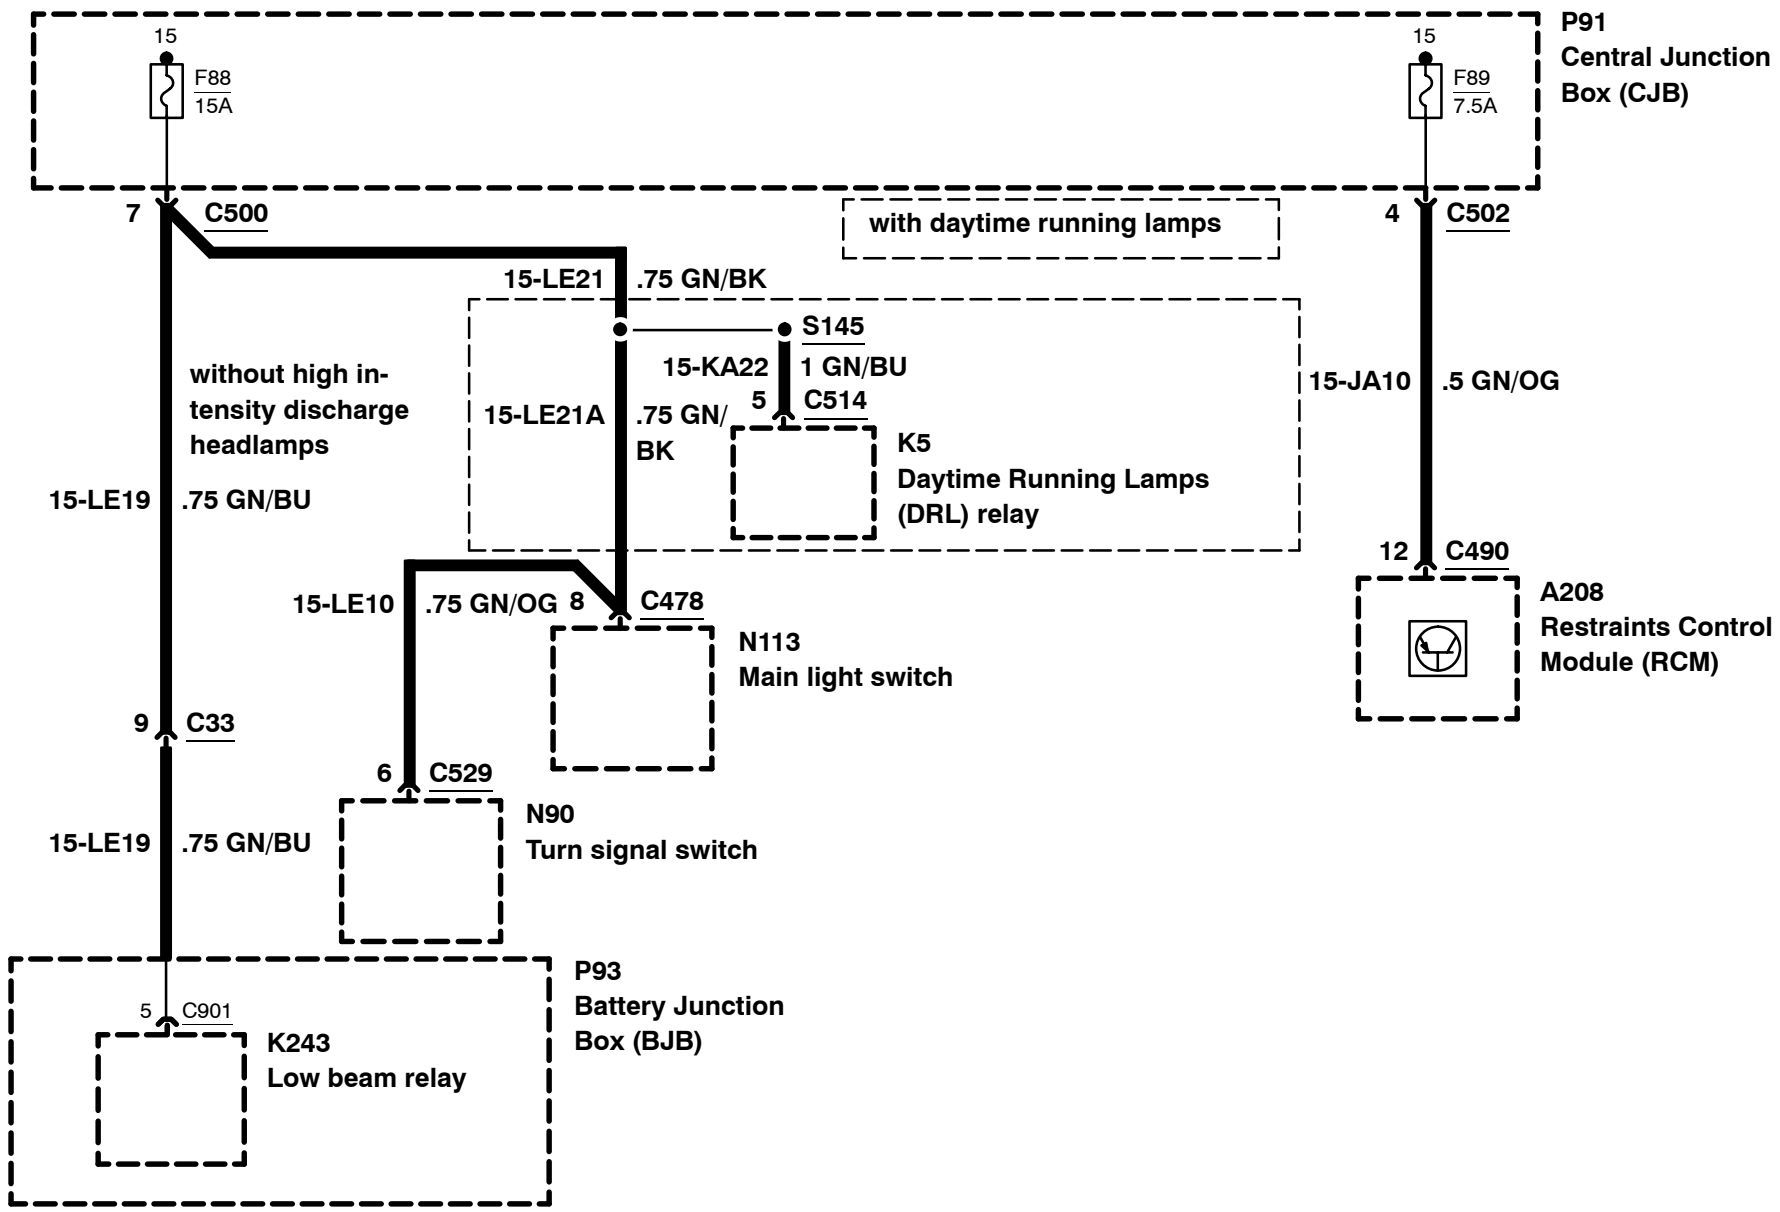


Fuse Details – F88, F89, with autolamps

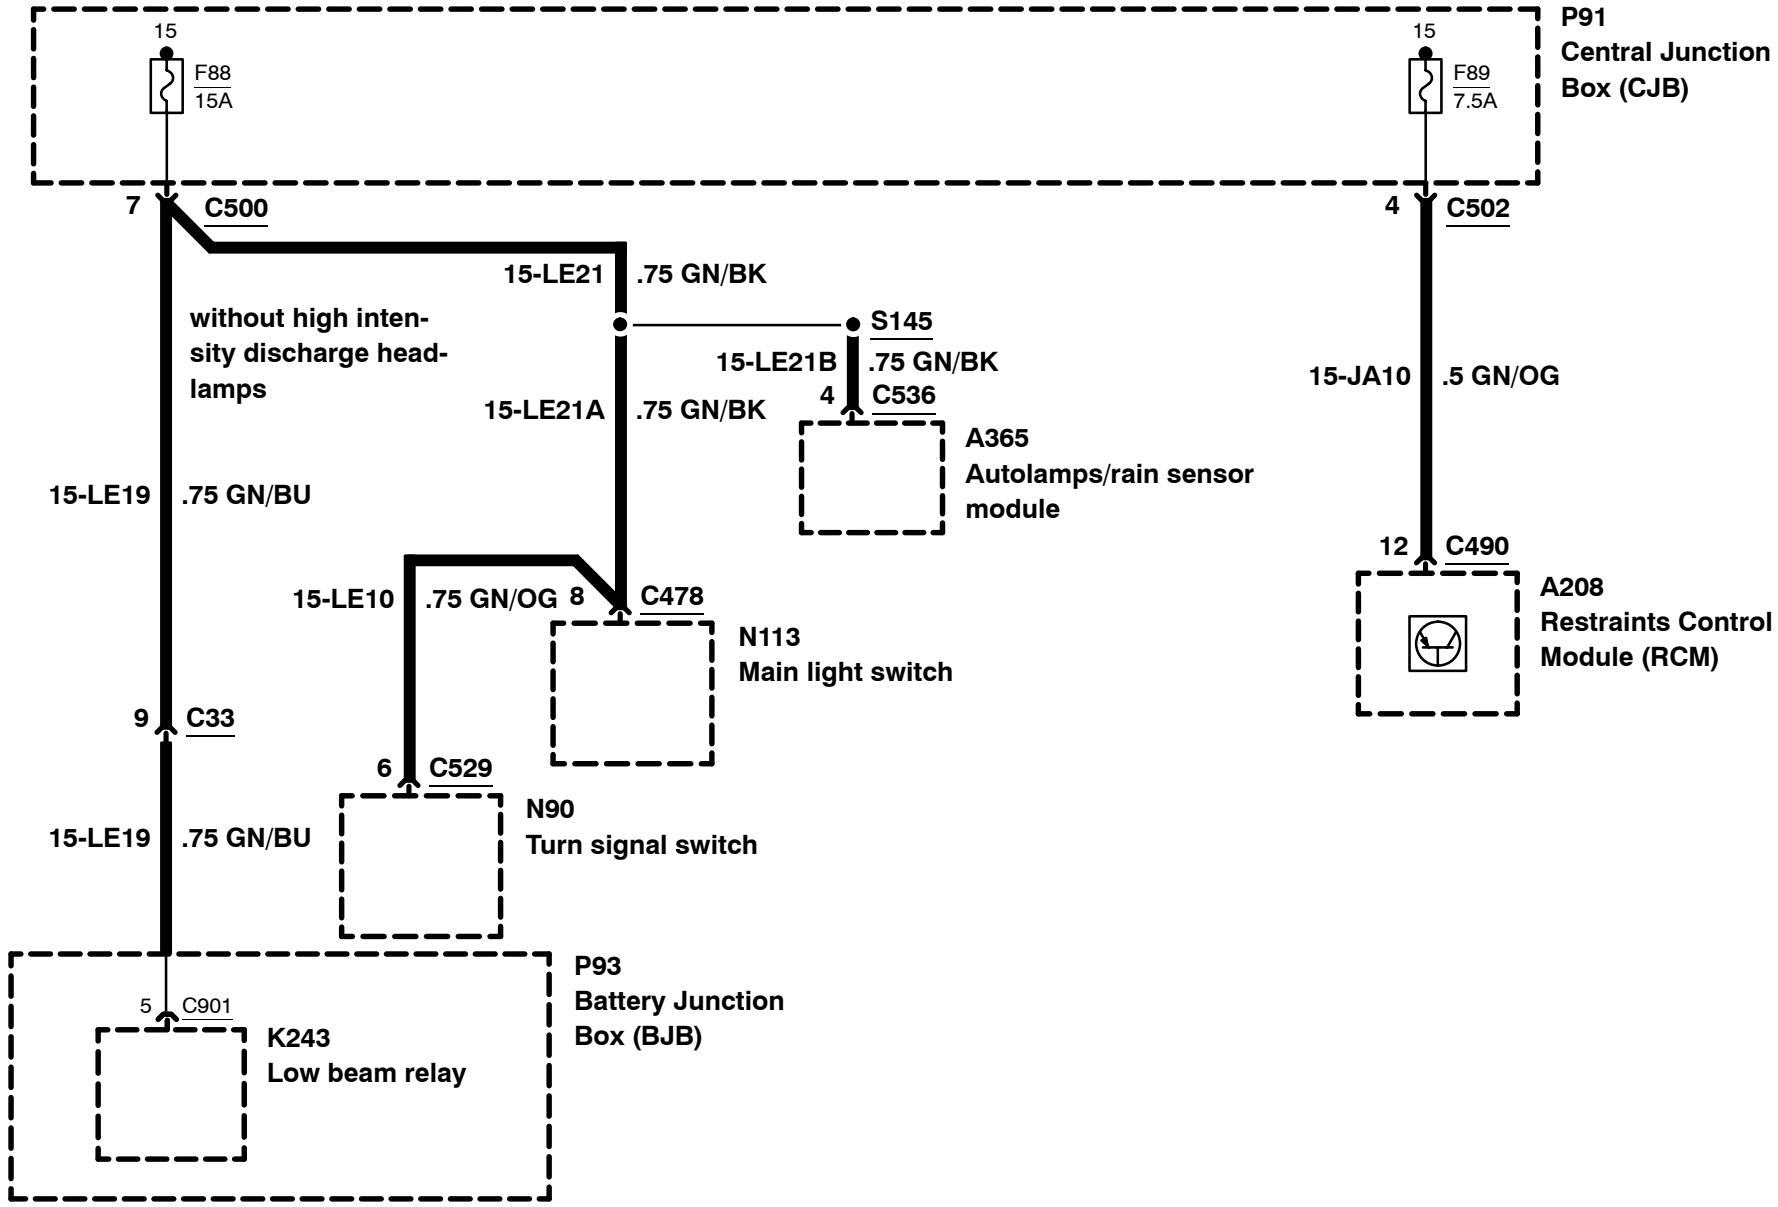


Fuse Details – F90

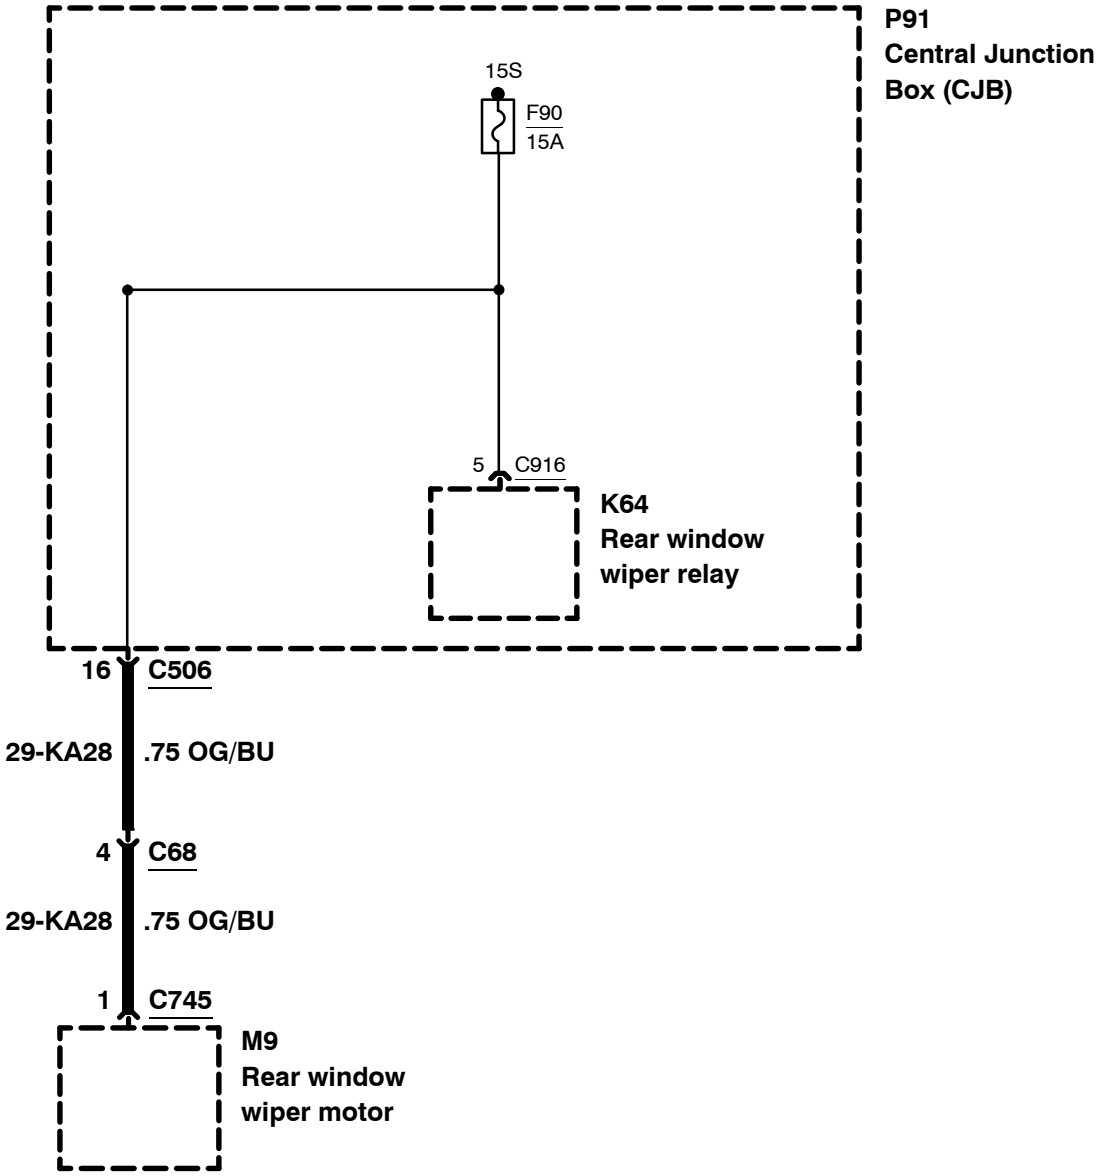


Fuse Details – F91, LHD

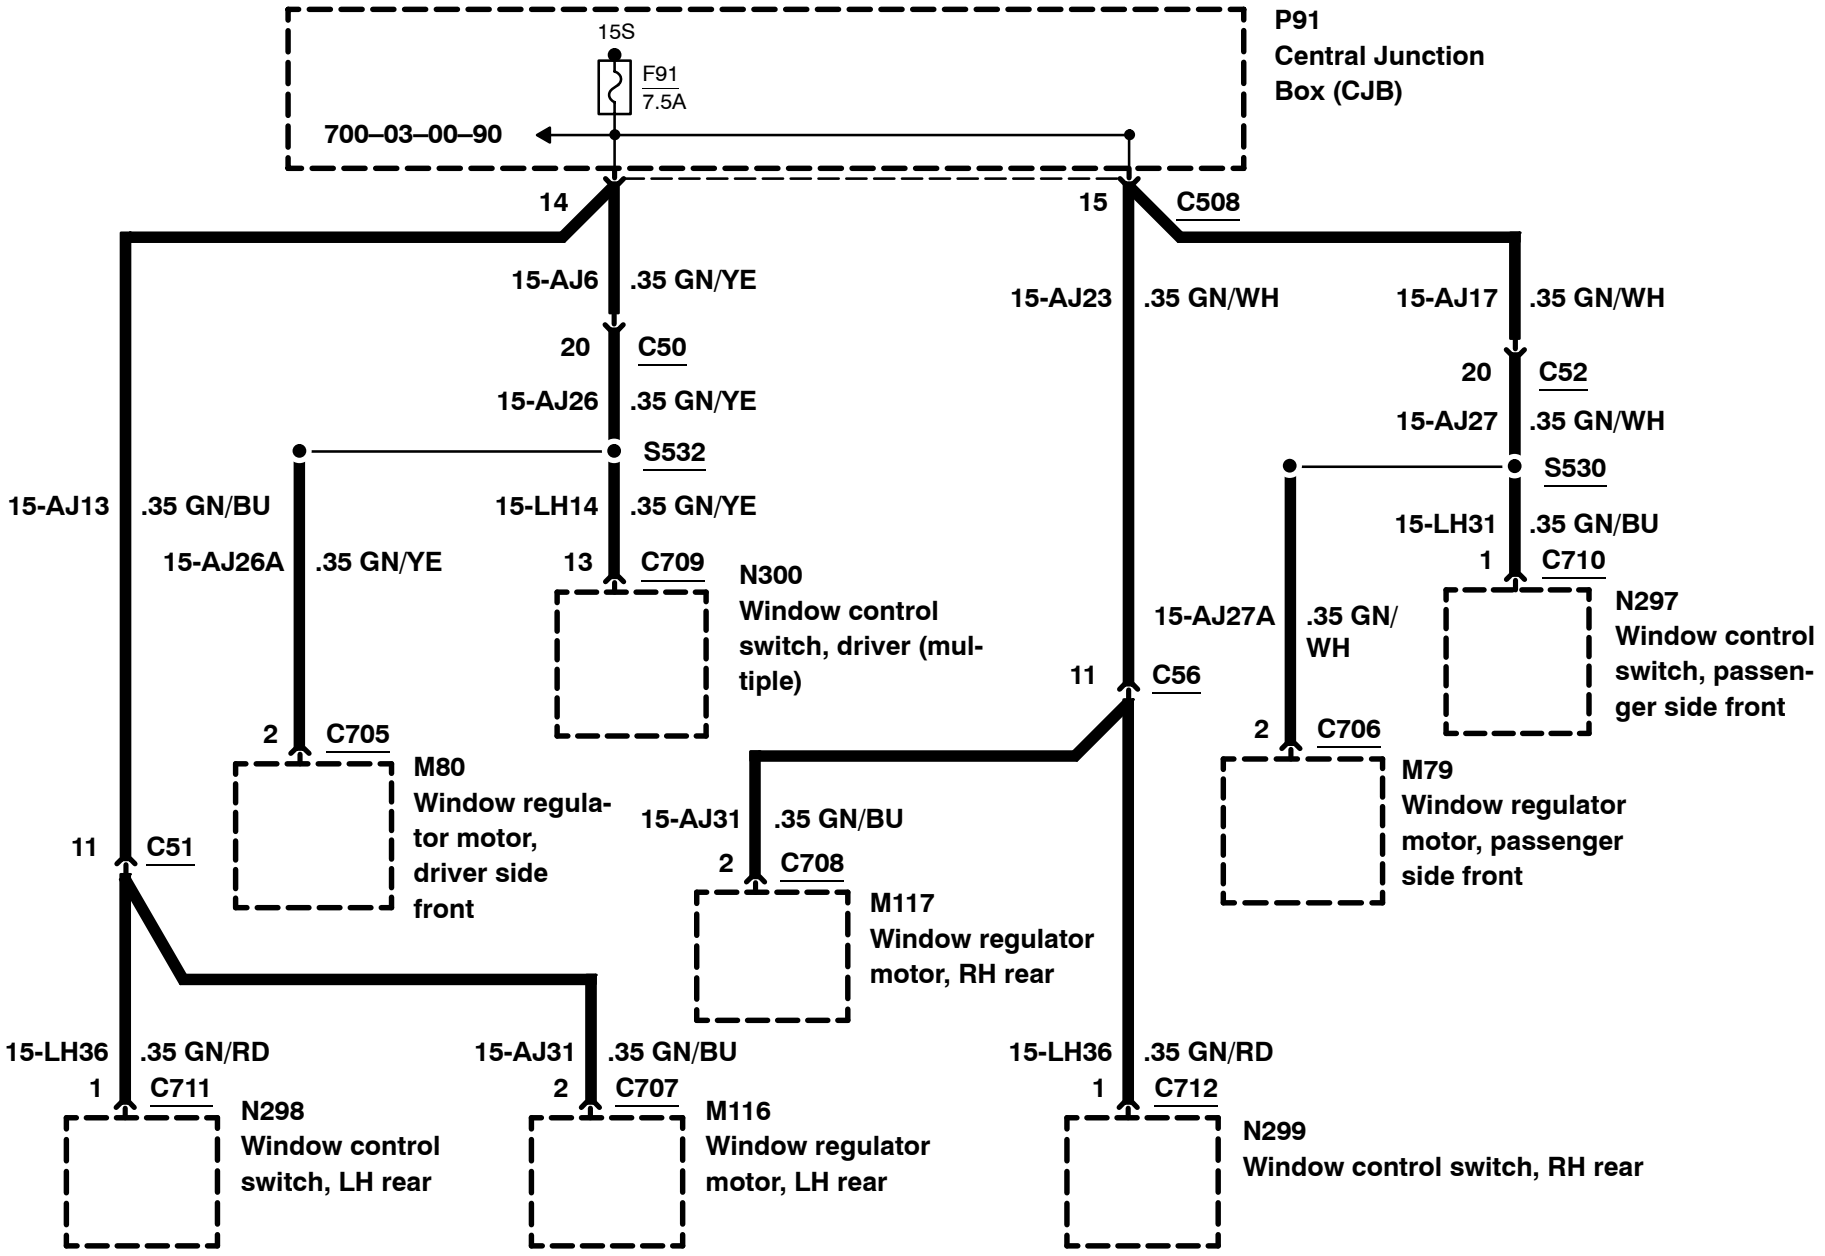


Fuse Details – F91, RHD

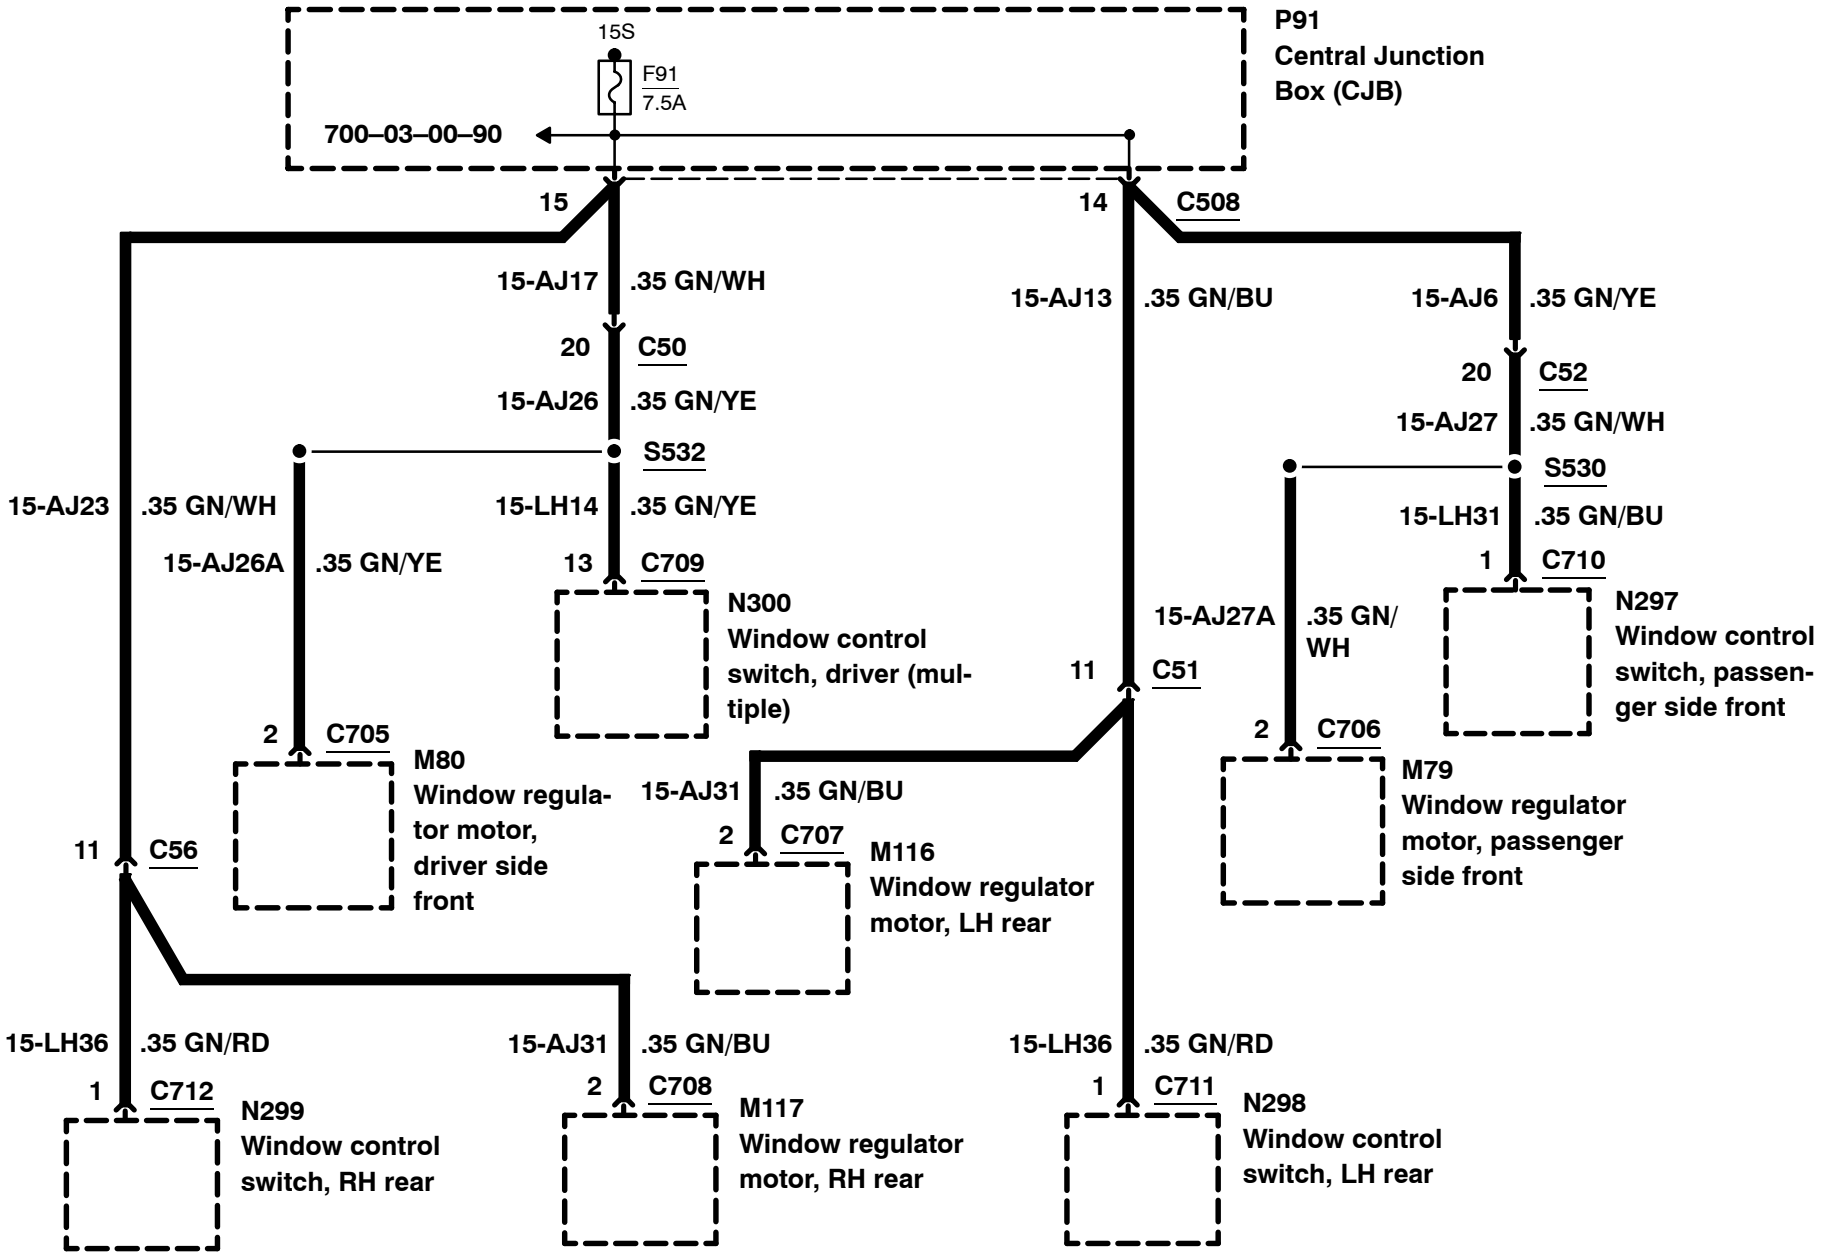


Fuse Details – F91

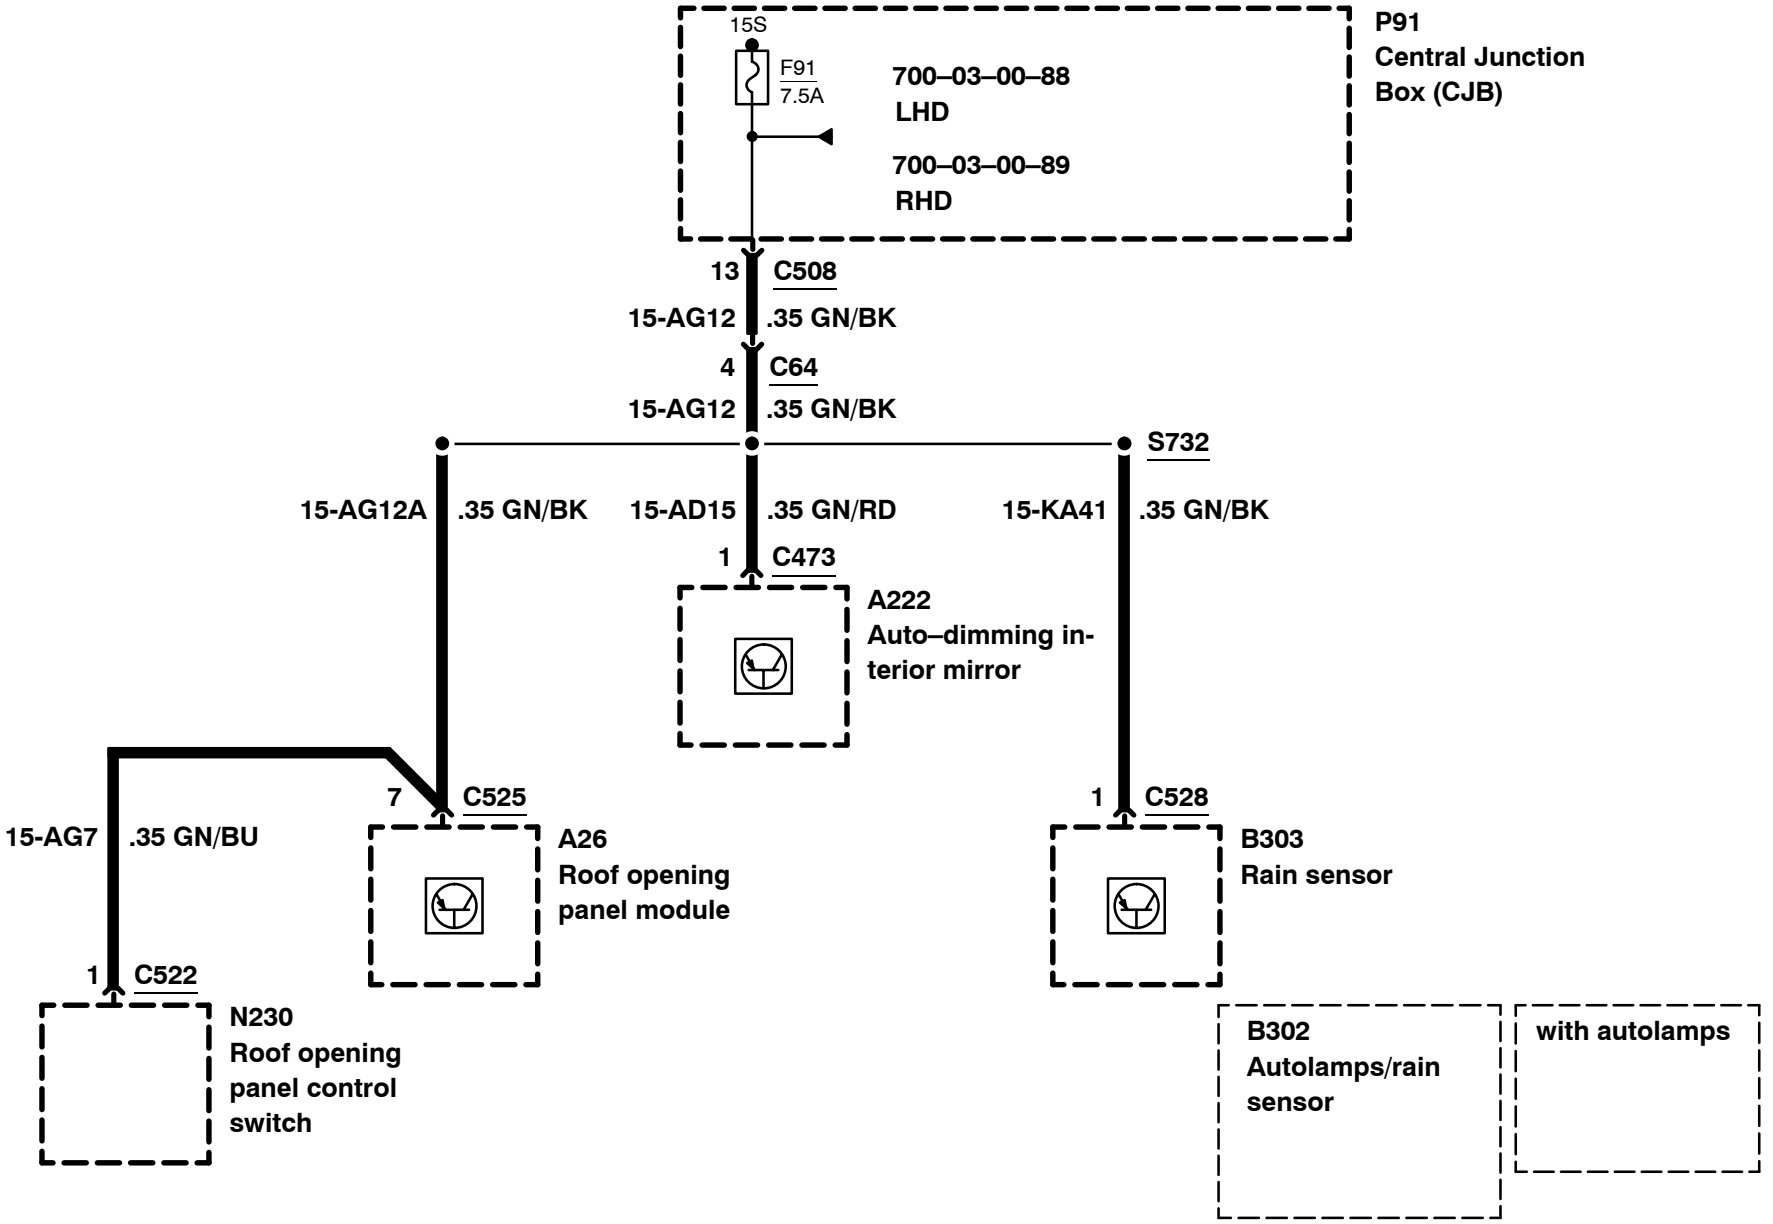


Fuse Details – F92, before 01/2004

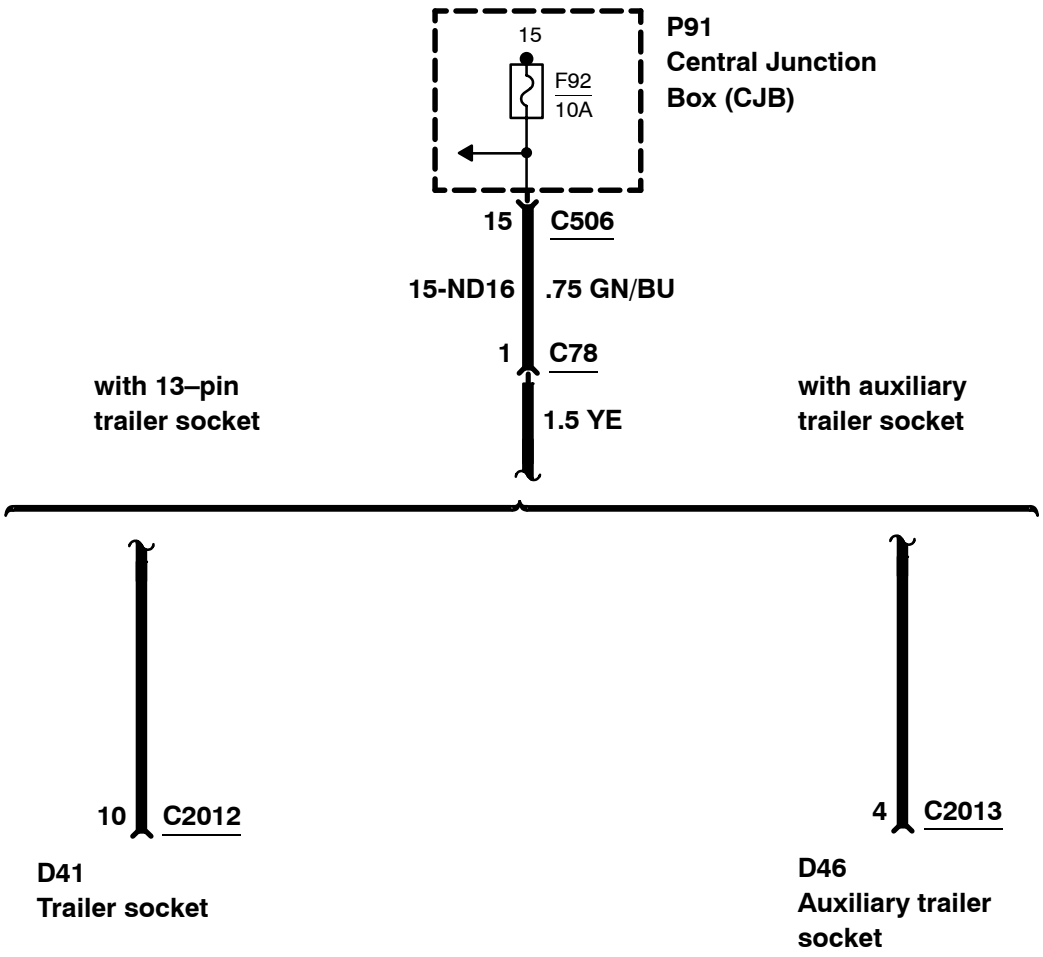


Fuse Details – F92, as of 01/2004, with trailer socket, with parking aid

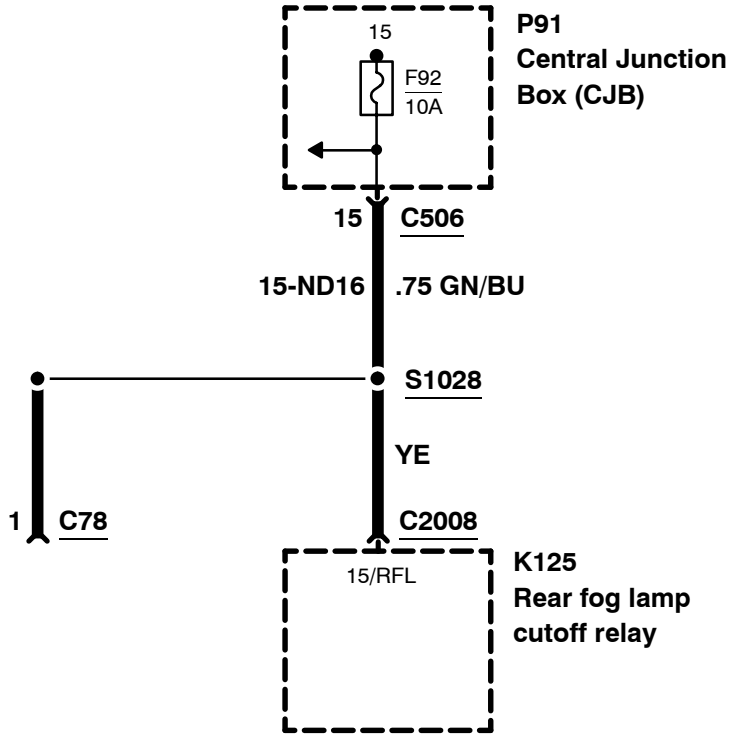


Fuse Details – F93

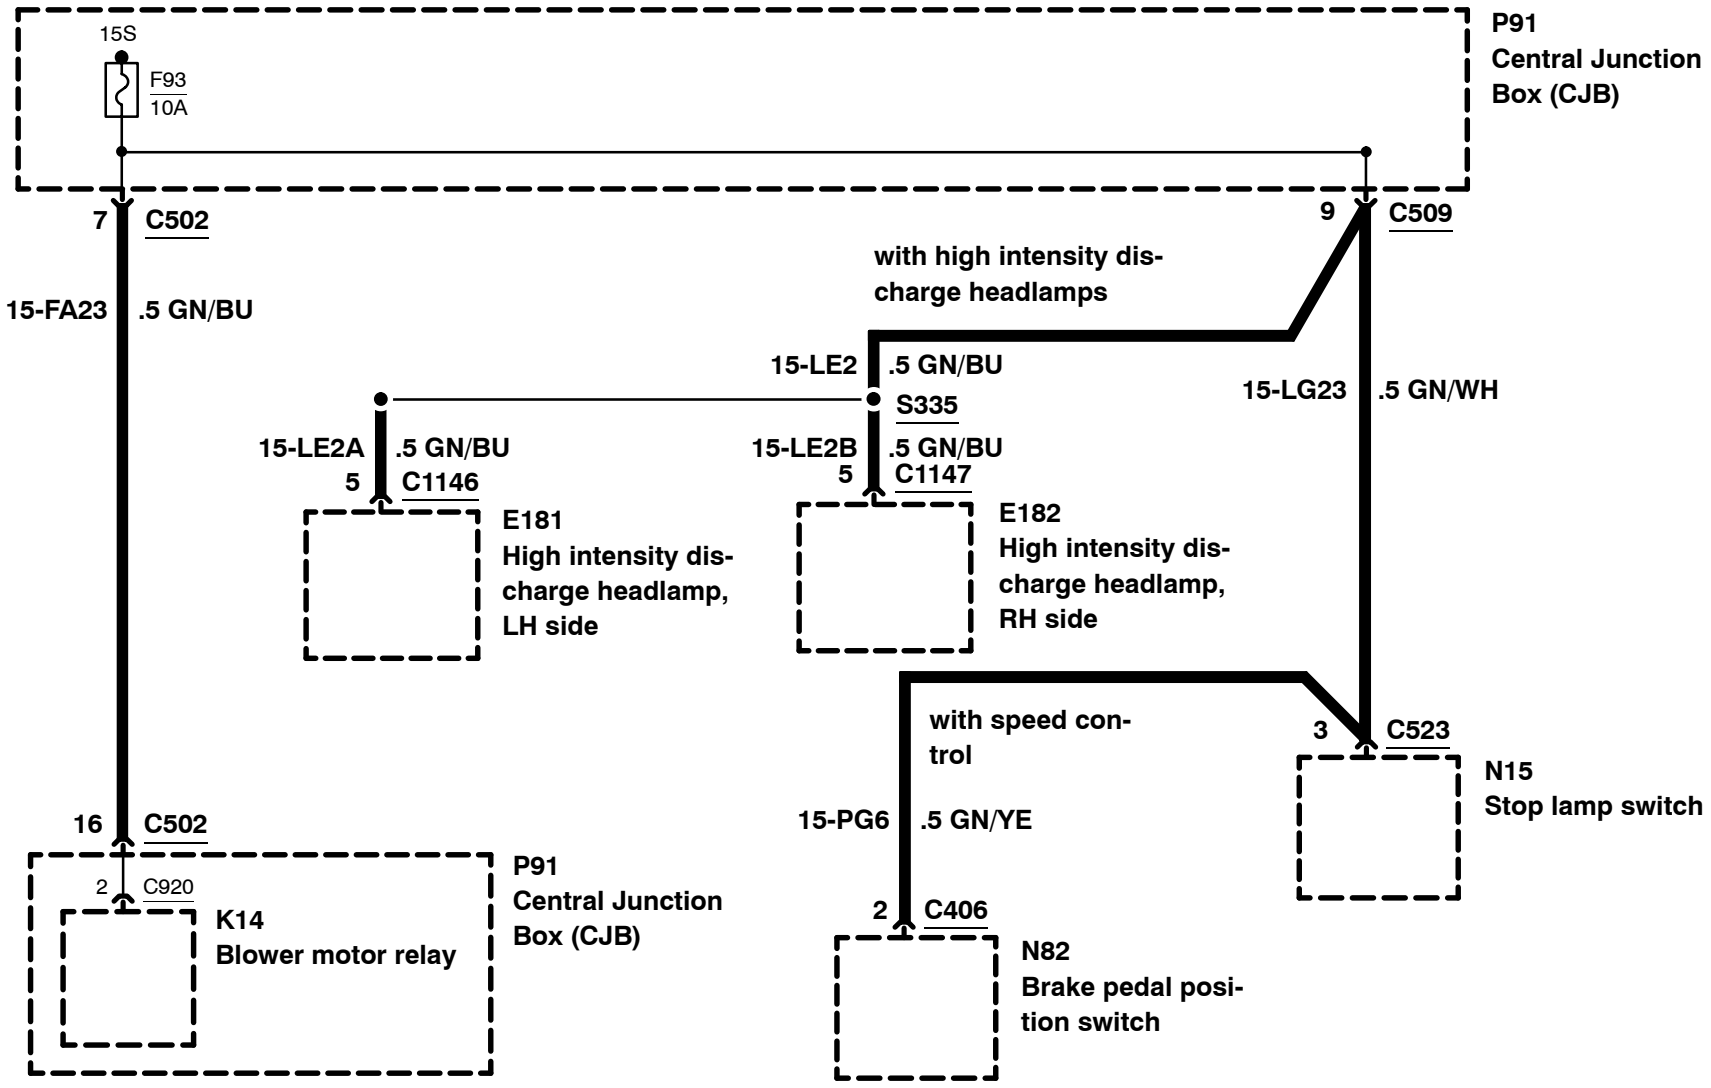


Fuse Details – F94

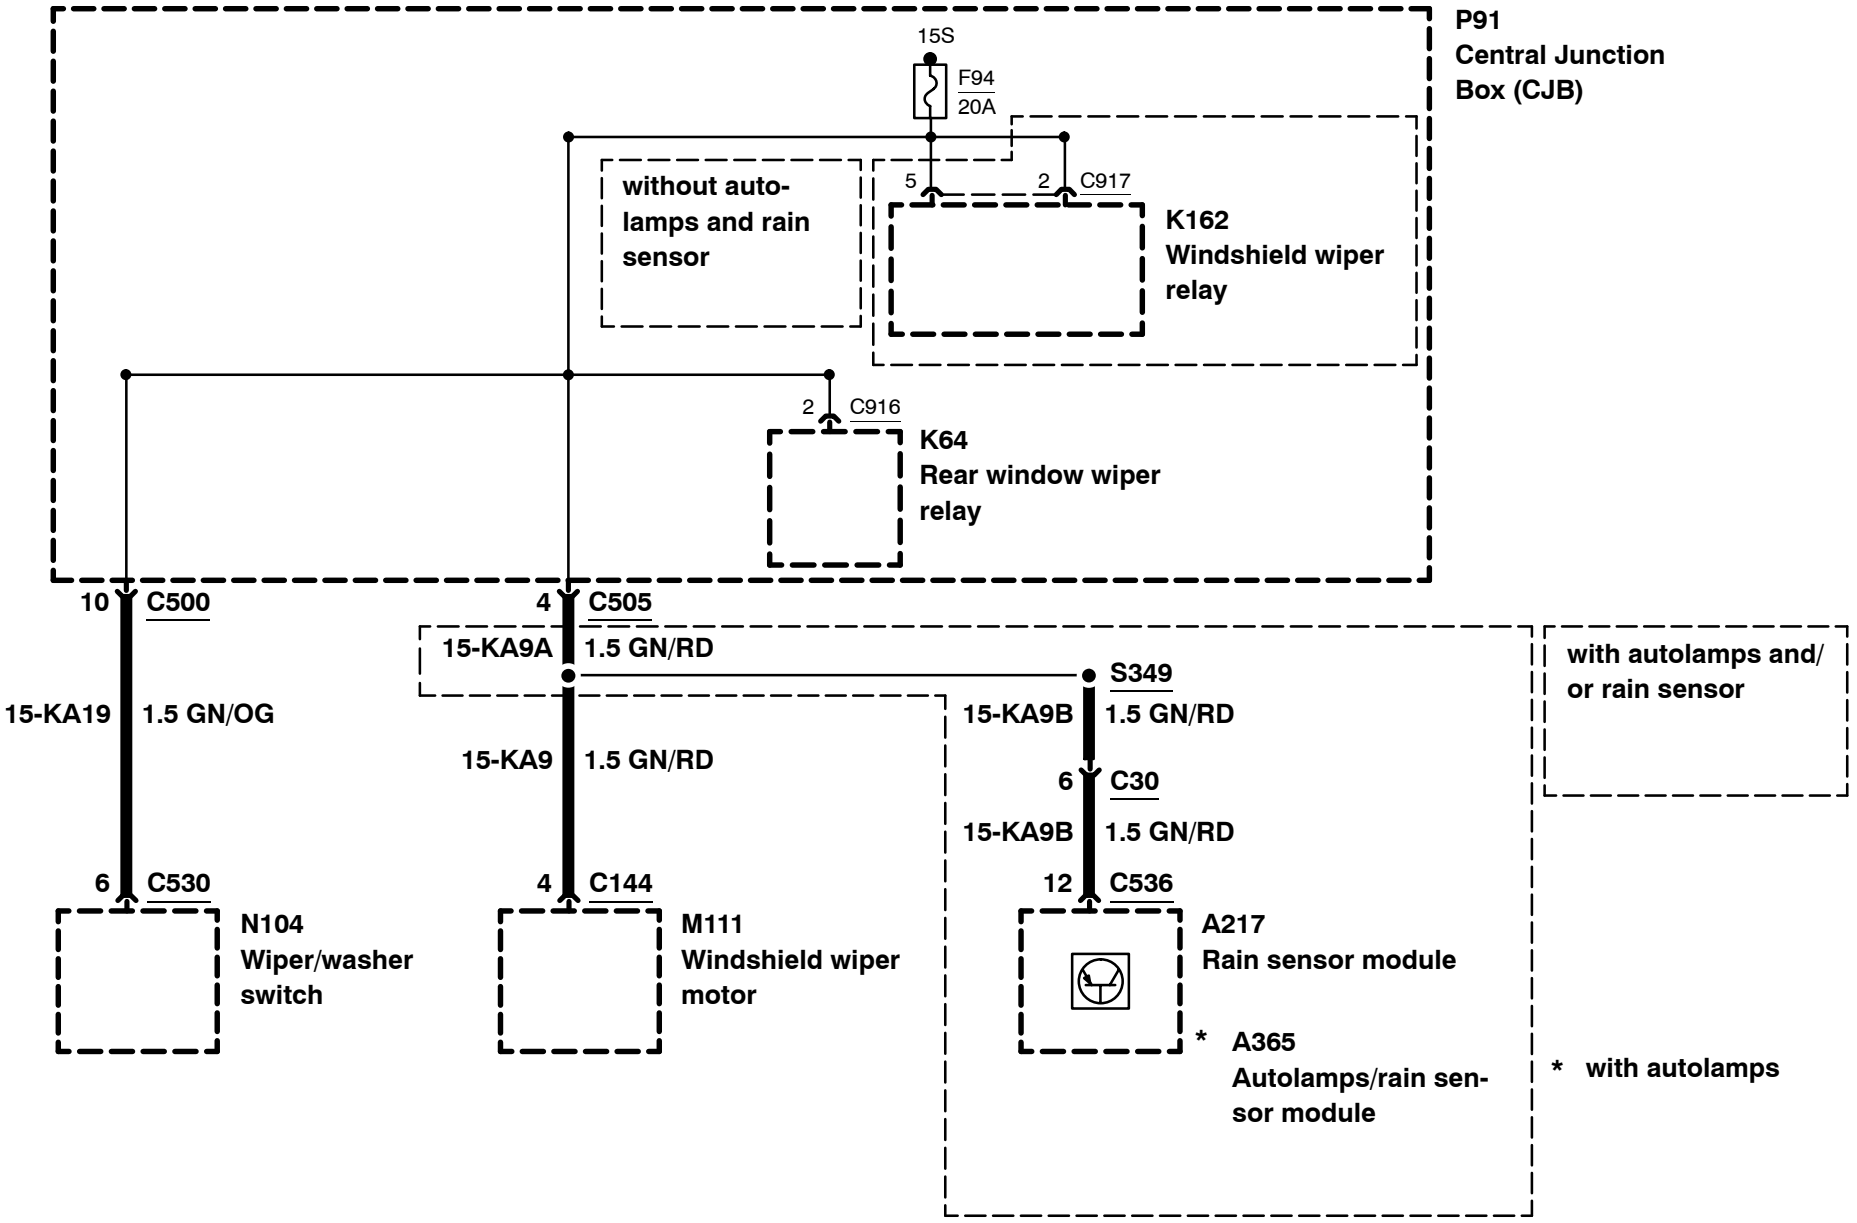


Fuse Details – F95, F96

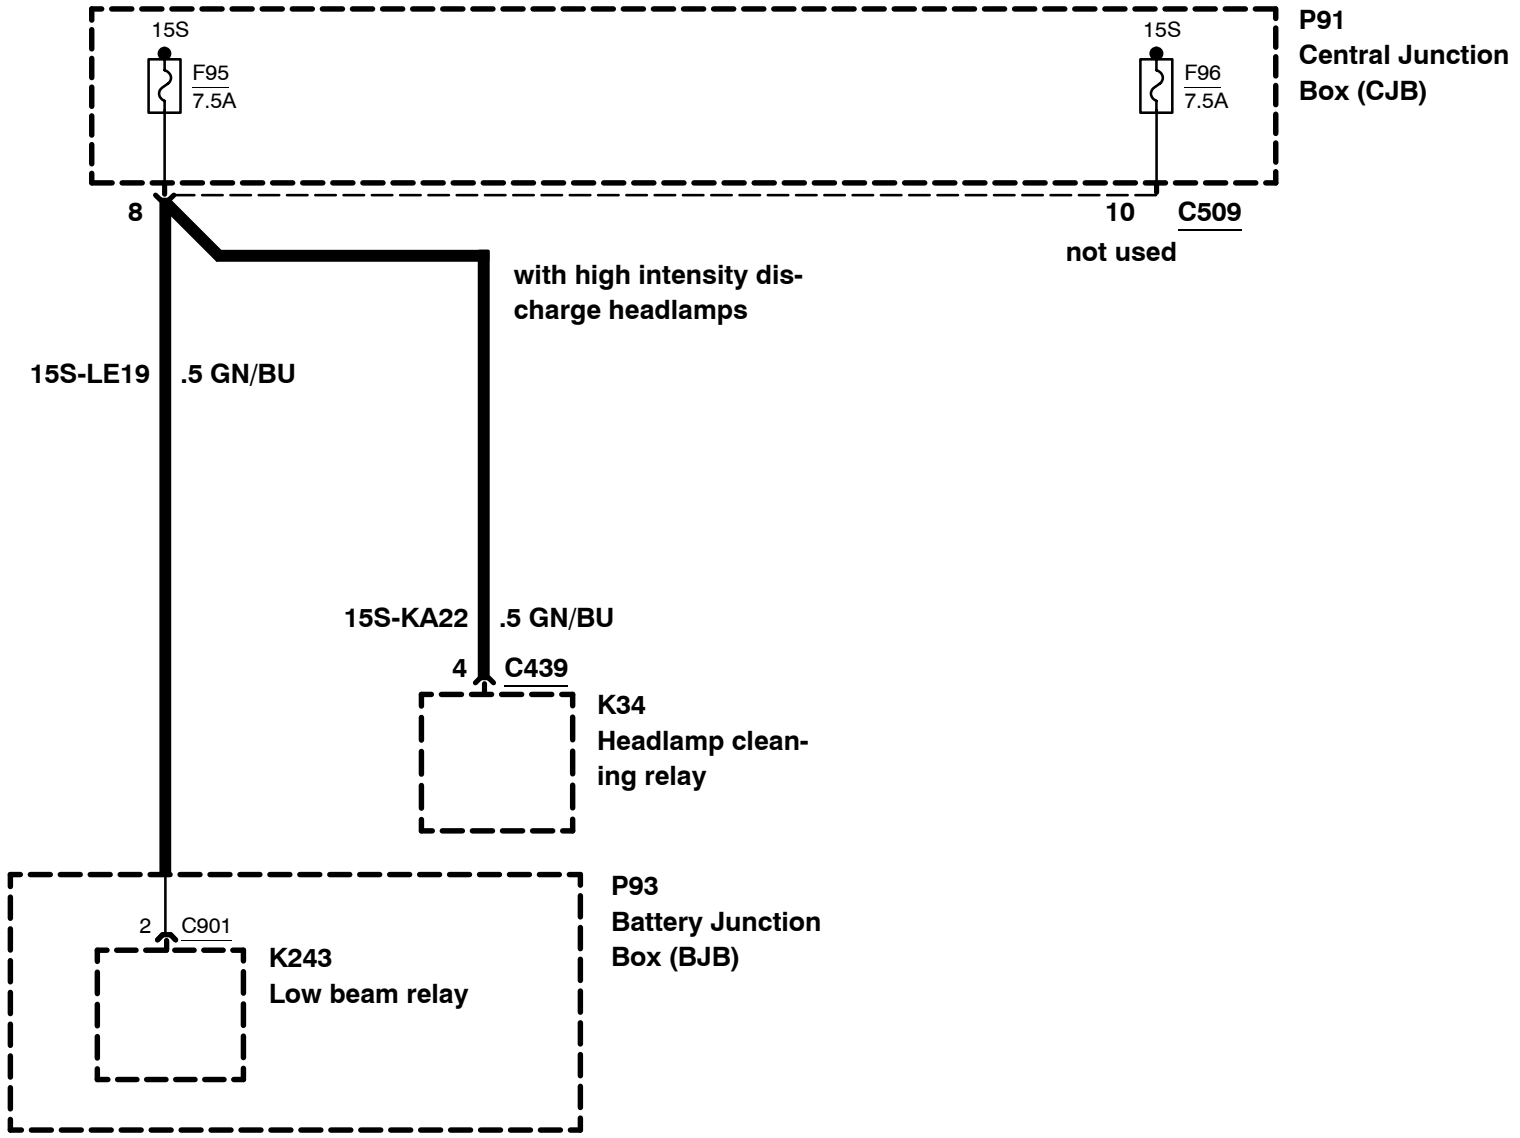


Fuse Details – F97

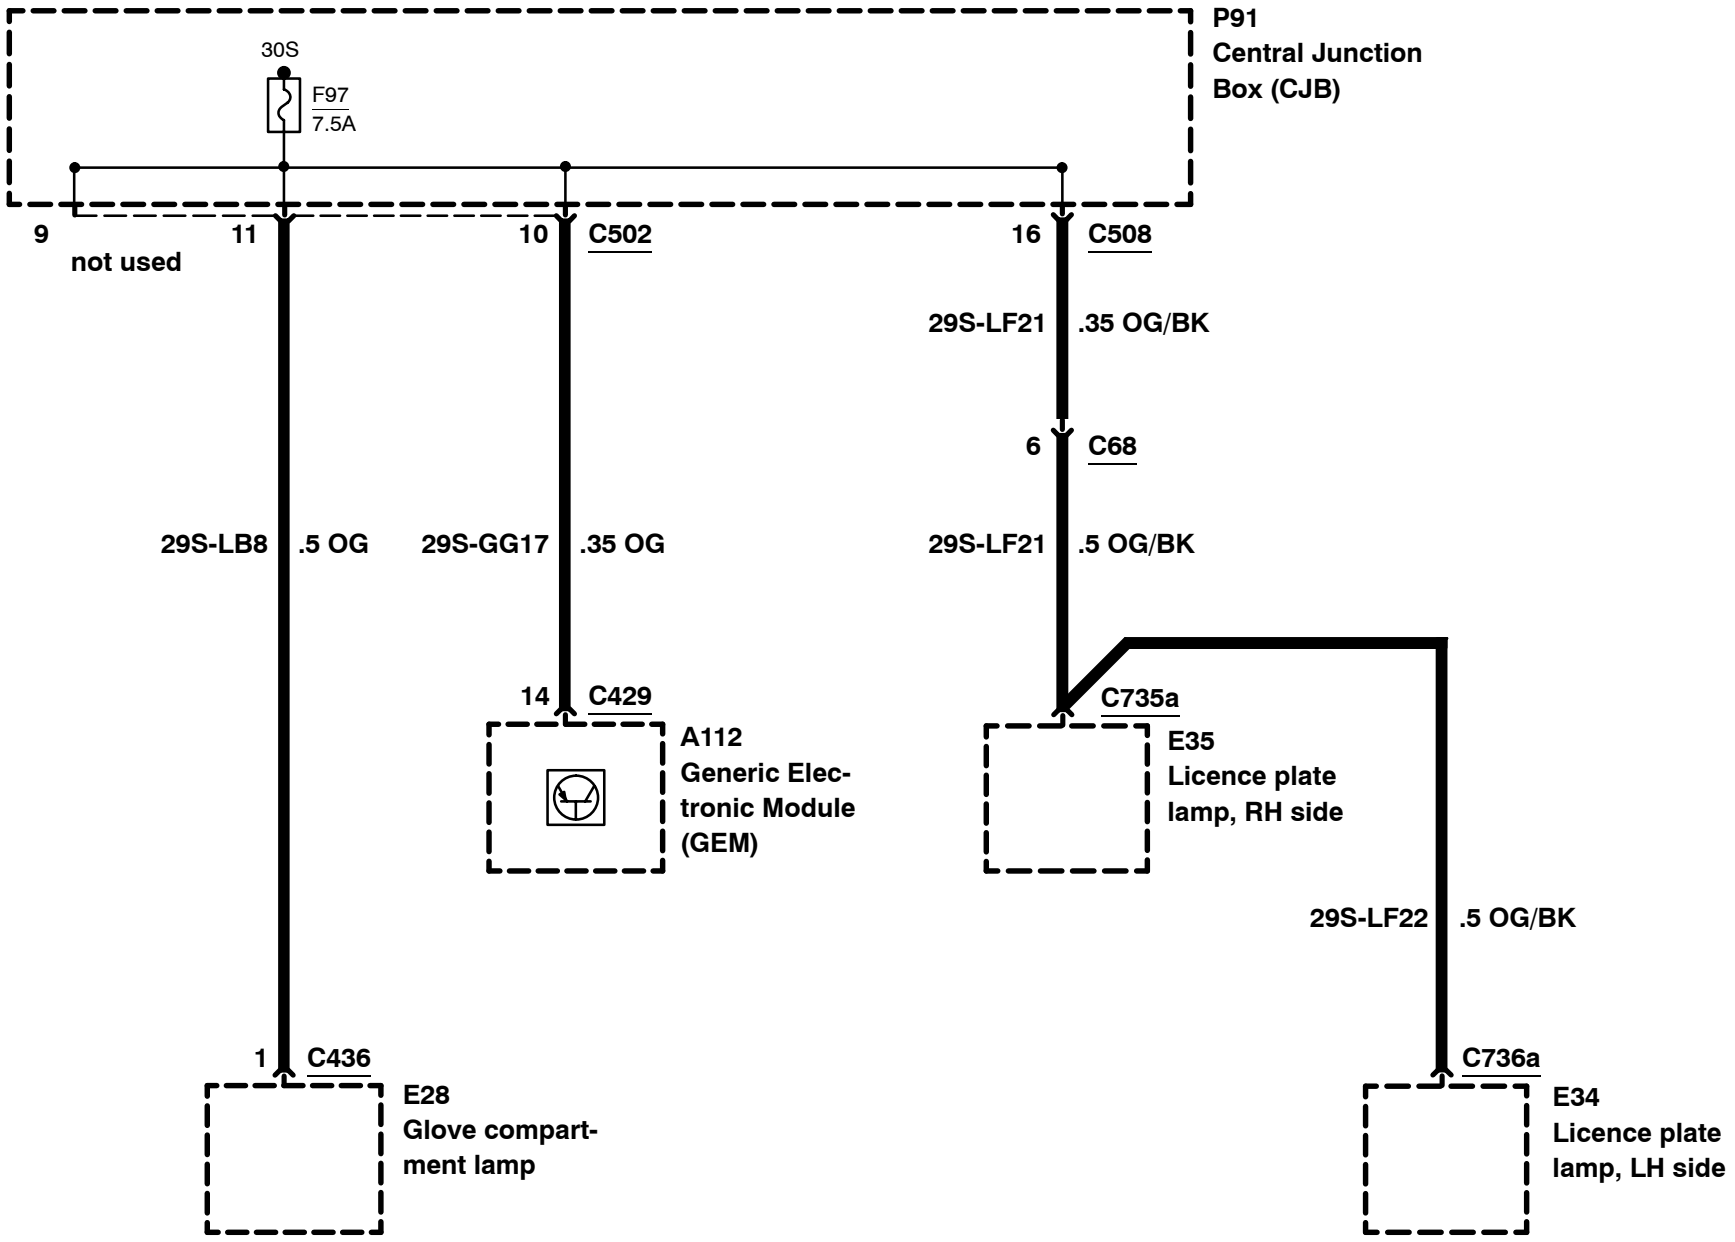


Fuse Details – F98

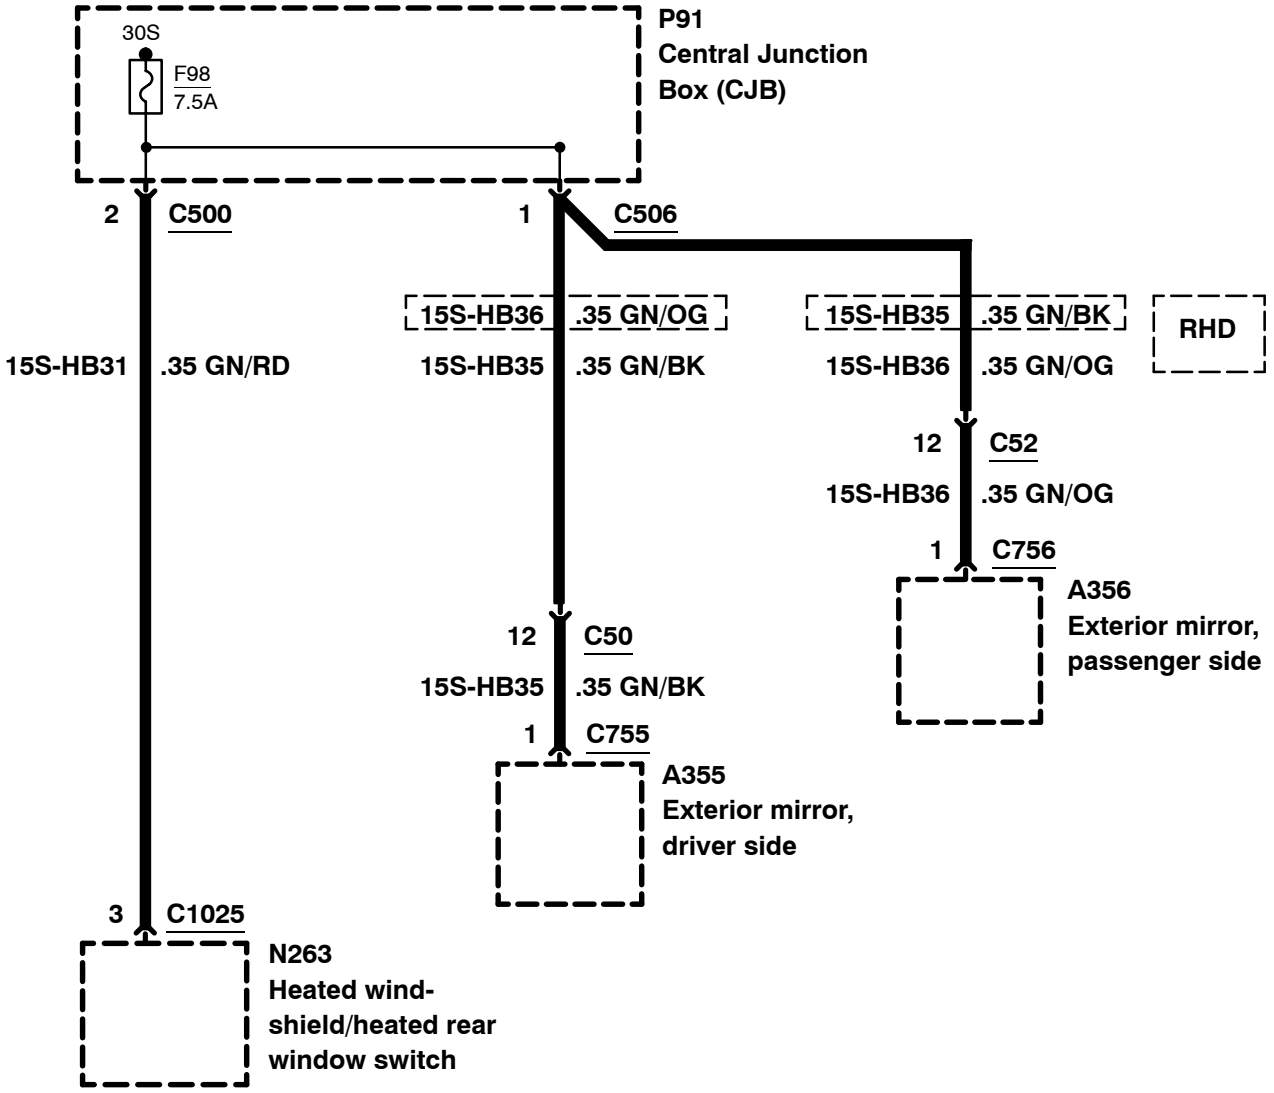


Fuse Details – F99, 4–door model/5–door model

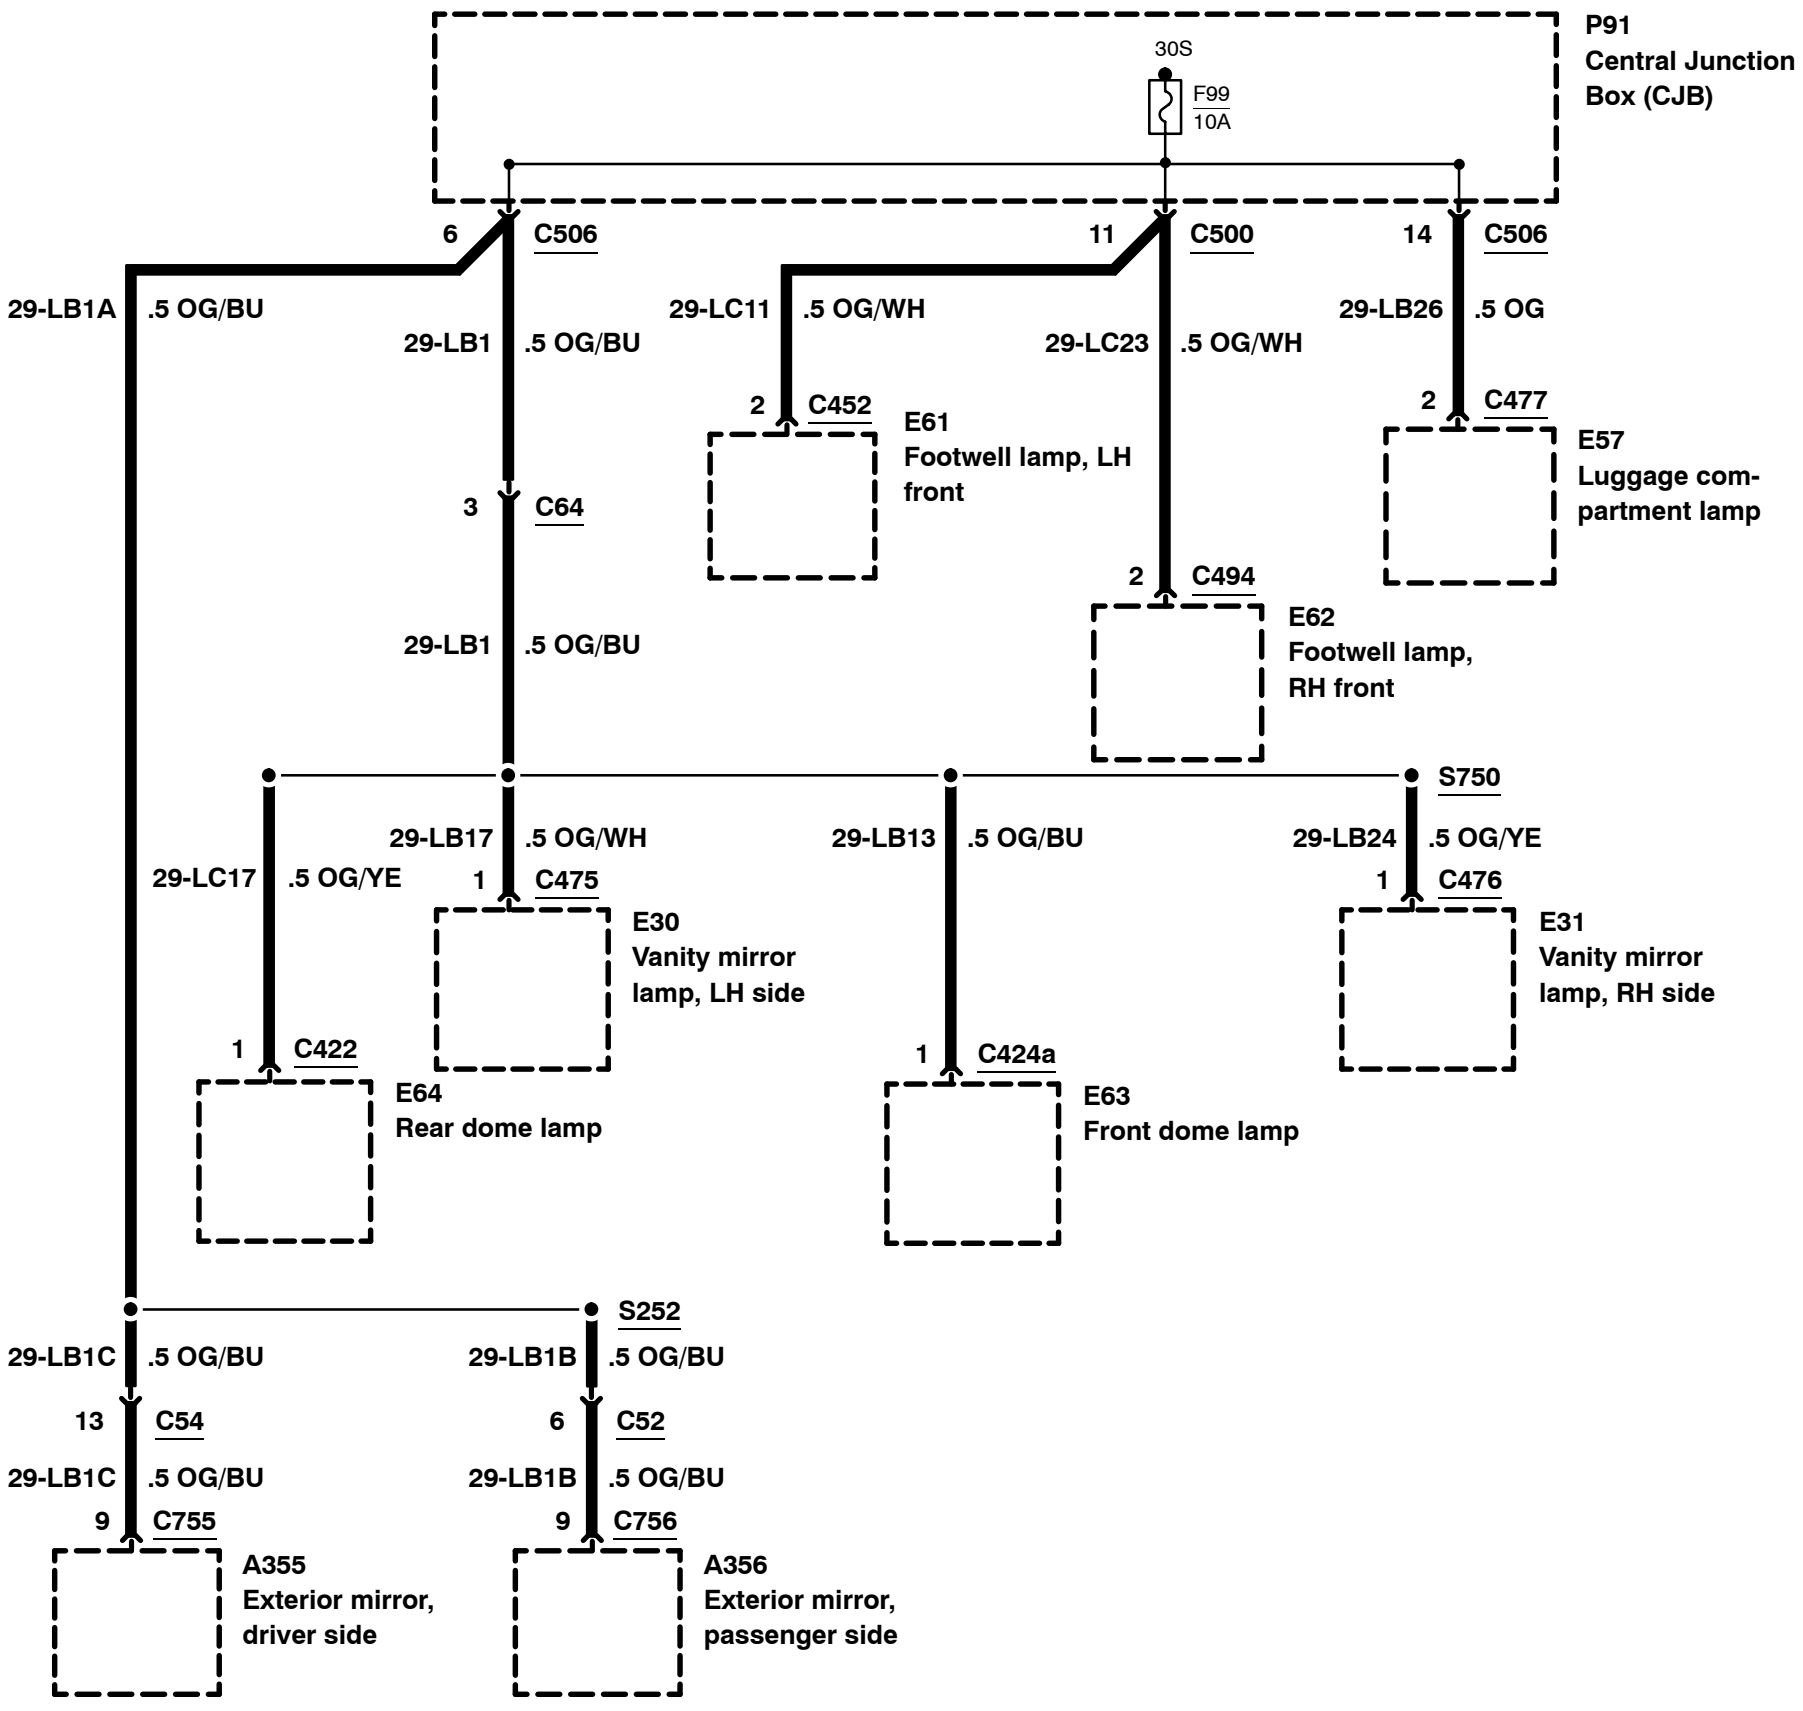

Fuse Details – F99, wagon

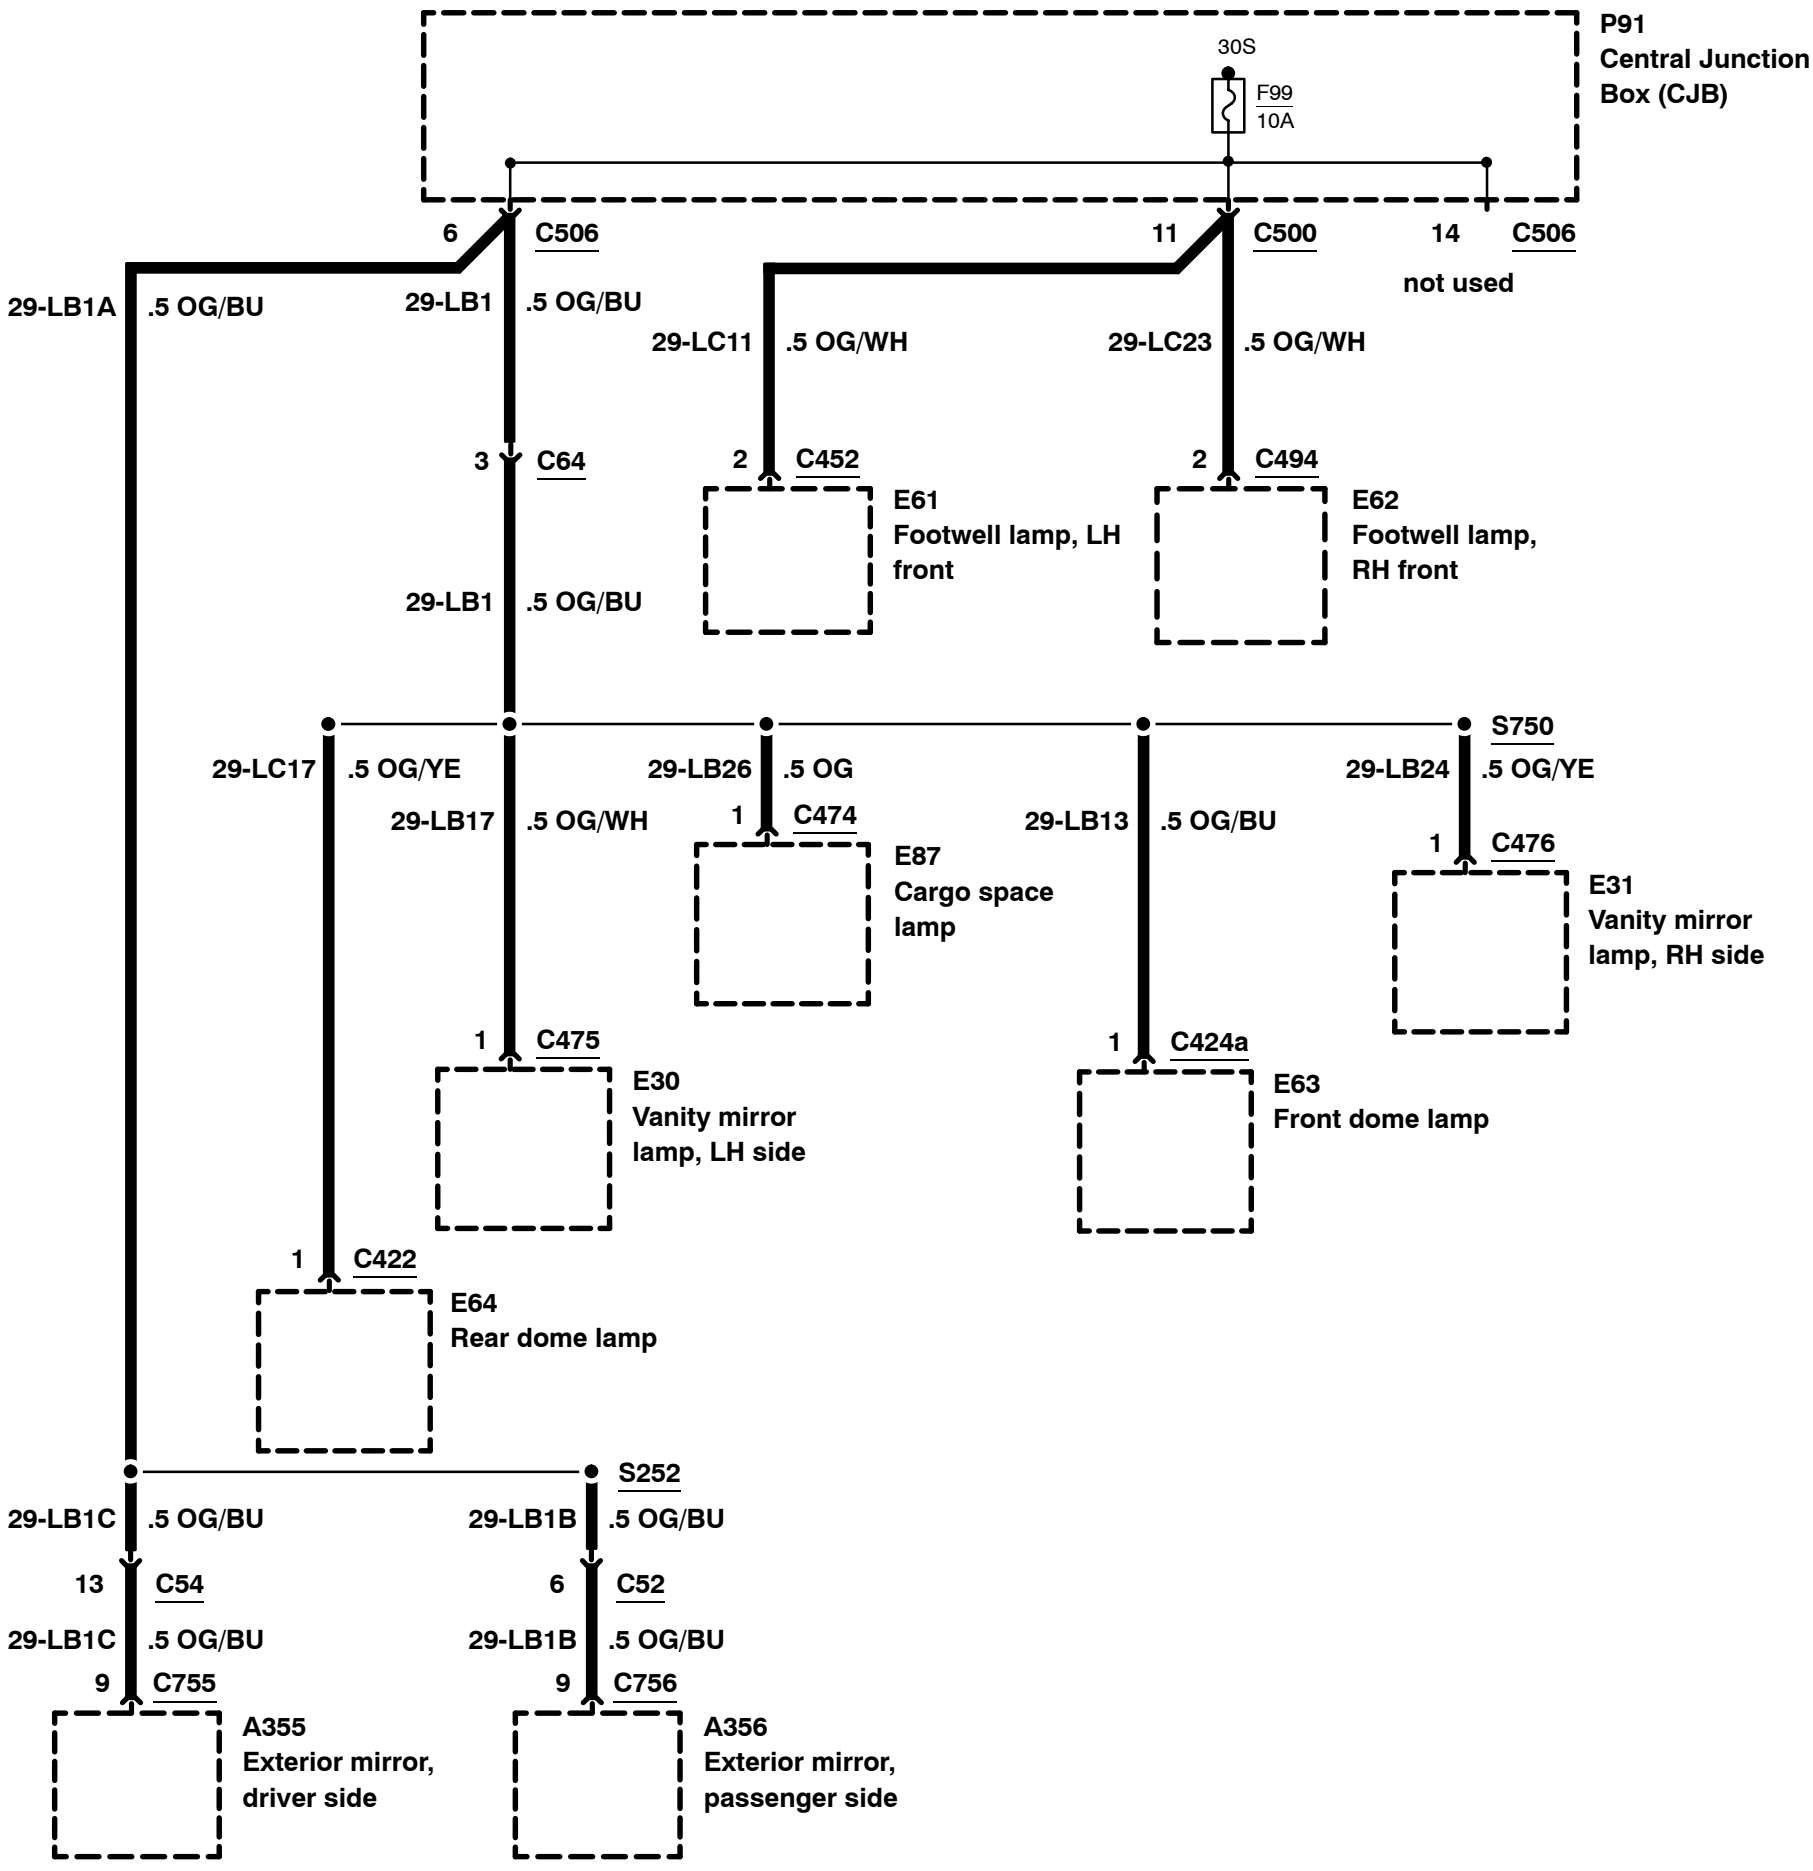


Fuse Details – F102, 3.0L Duratec–ST (VE6)

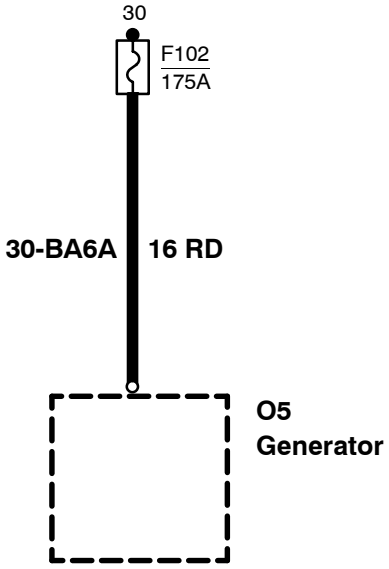


Fuse Details – F200, F201


with 7–pin trailer socket

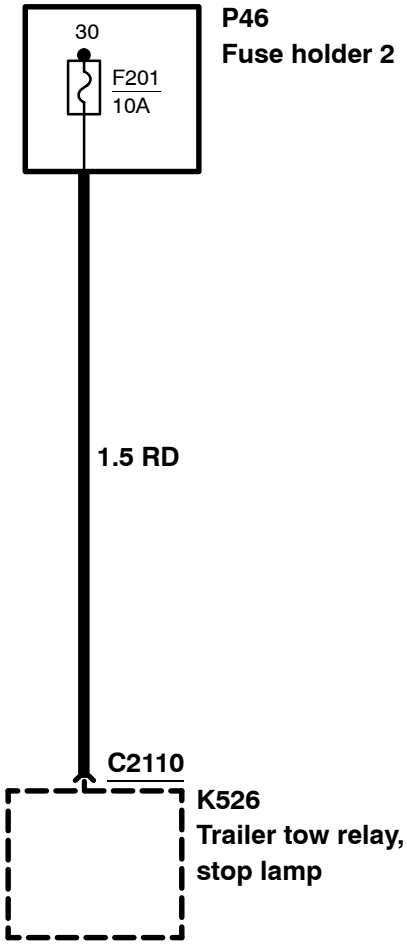


with 13–pin trailer socket

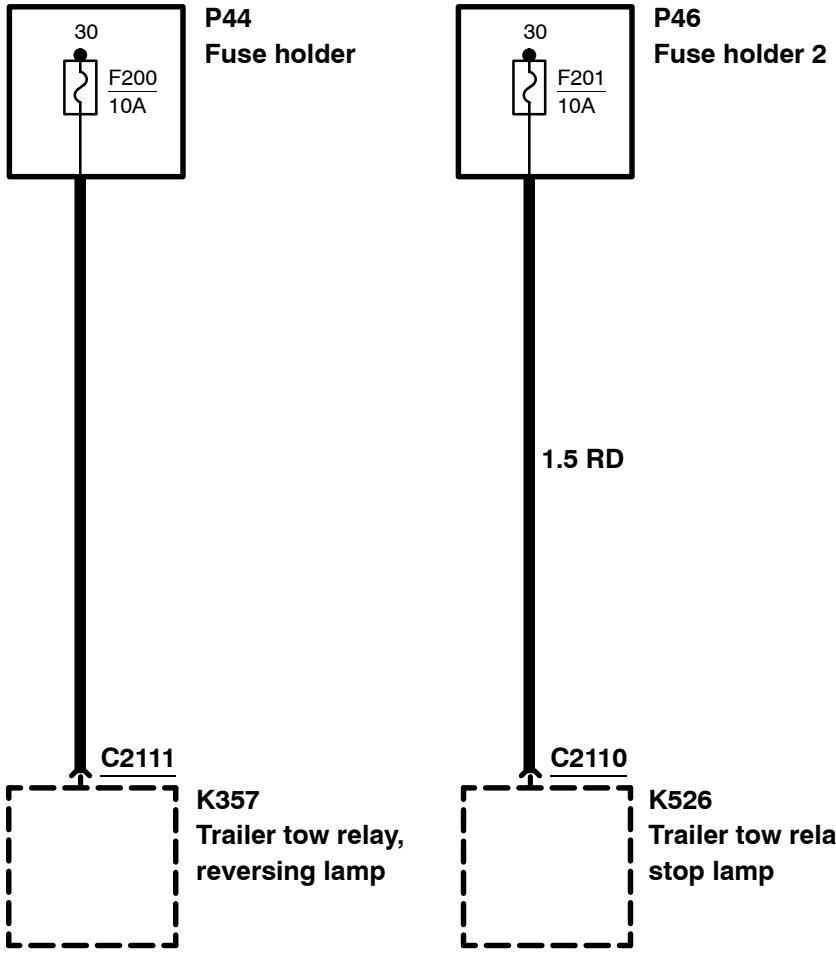


Ground Distribution – G100, G101

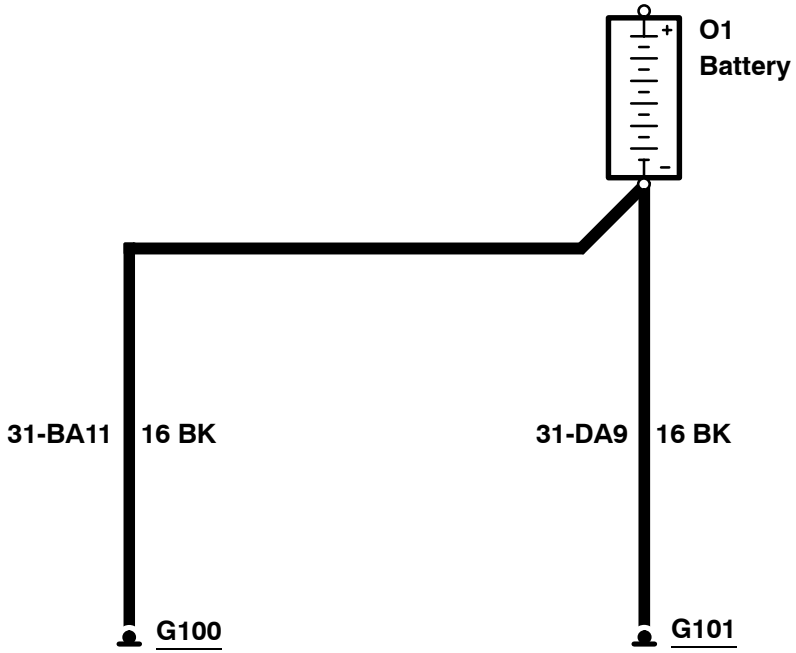


Ground Distribution – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)

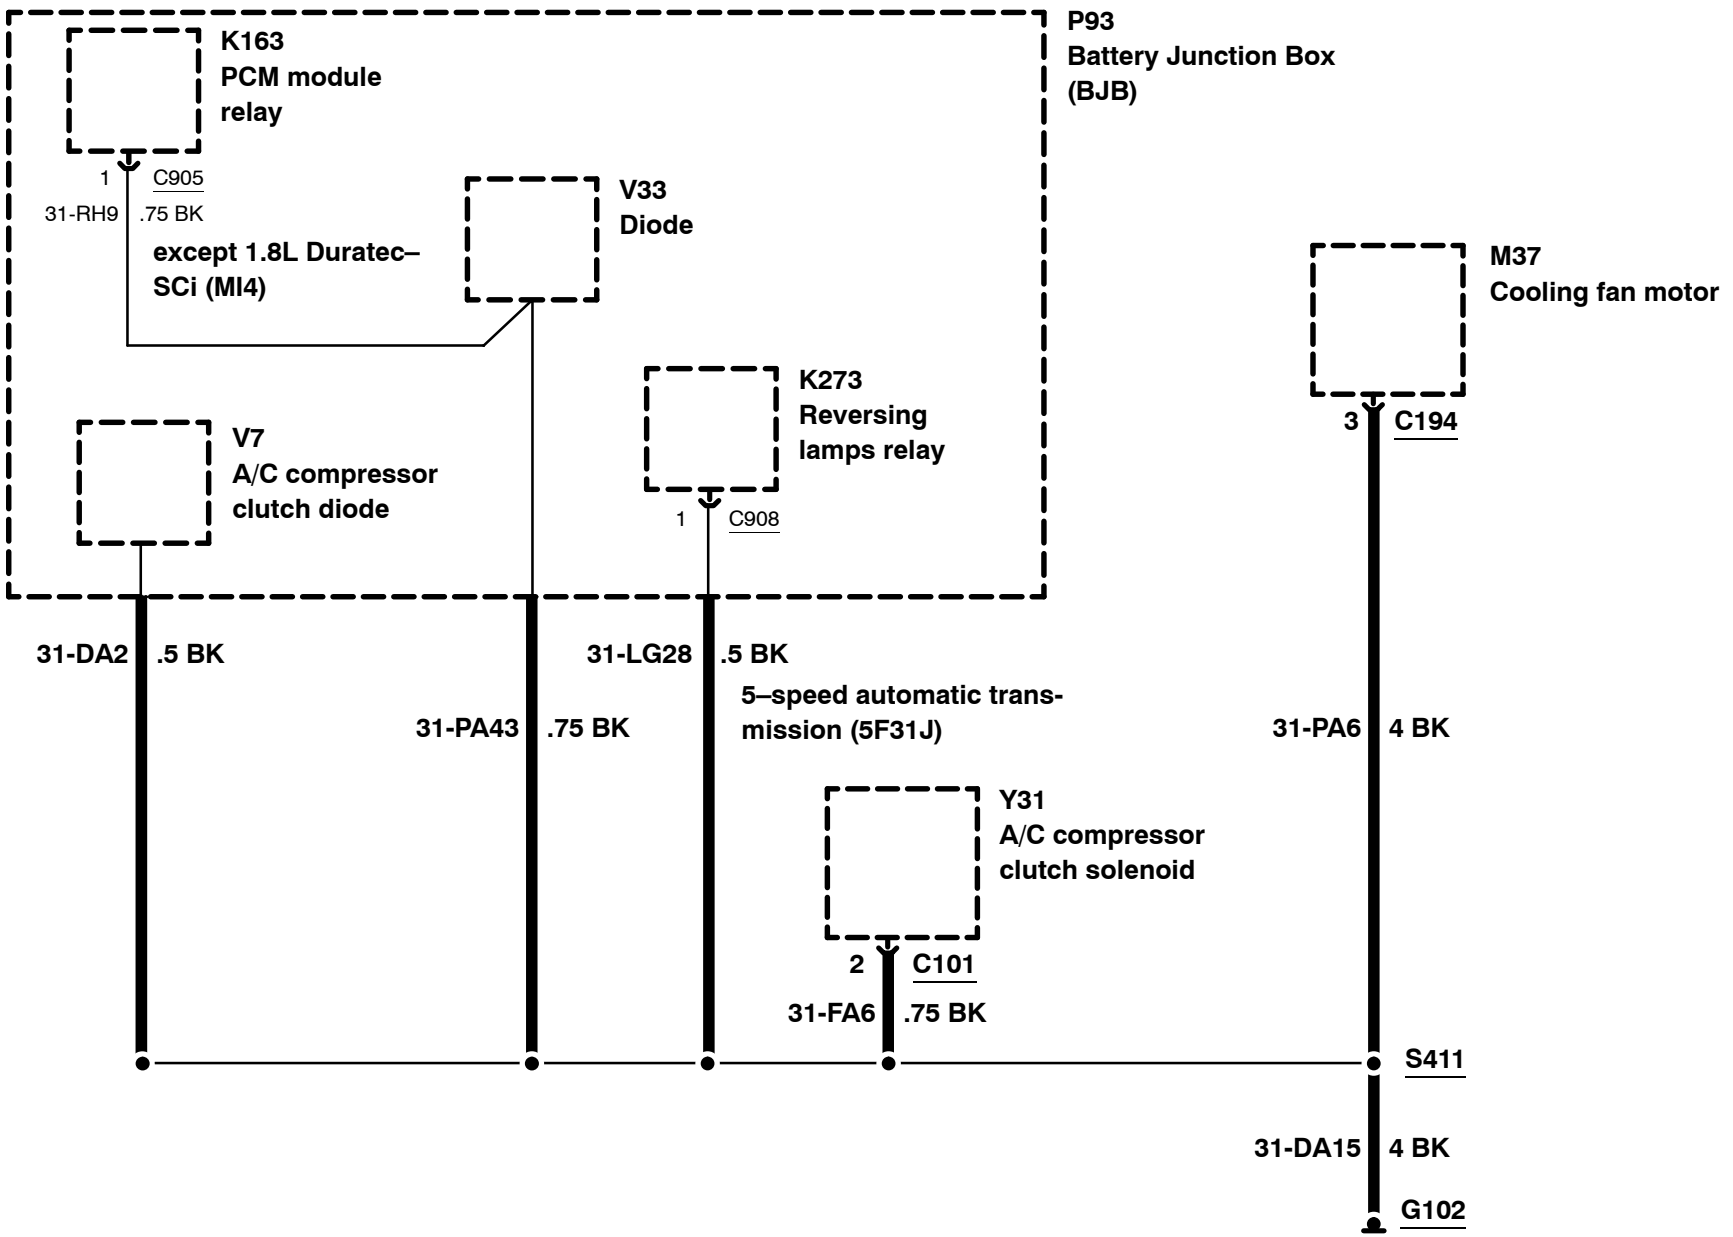


Ground Distribution – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)

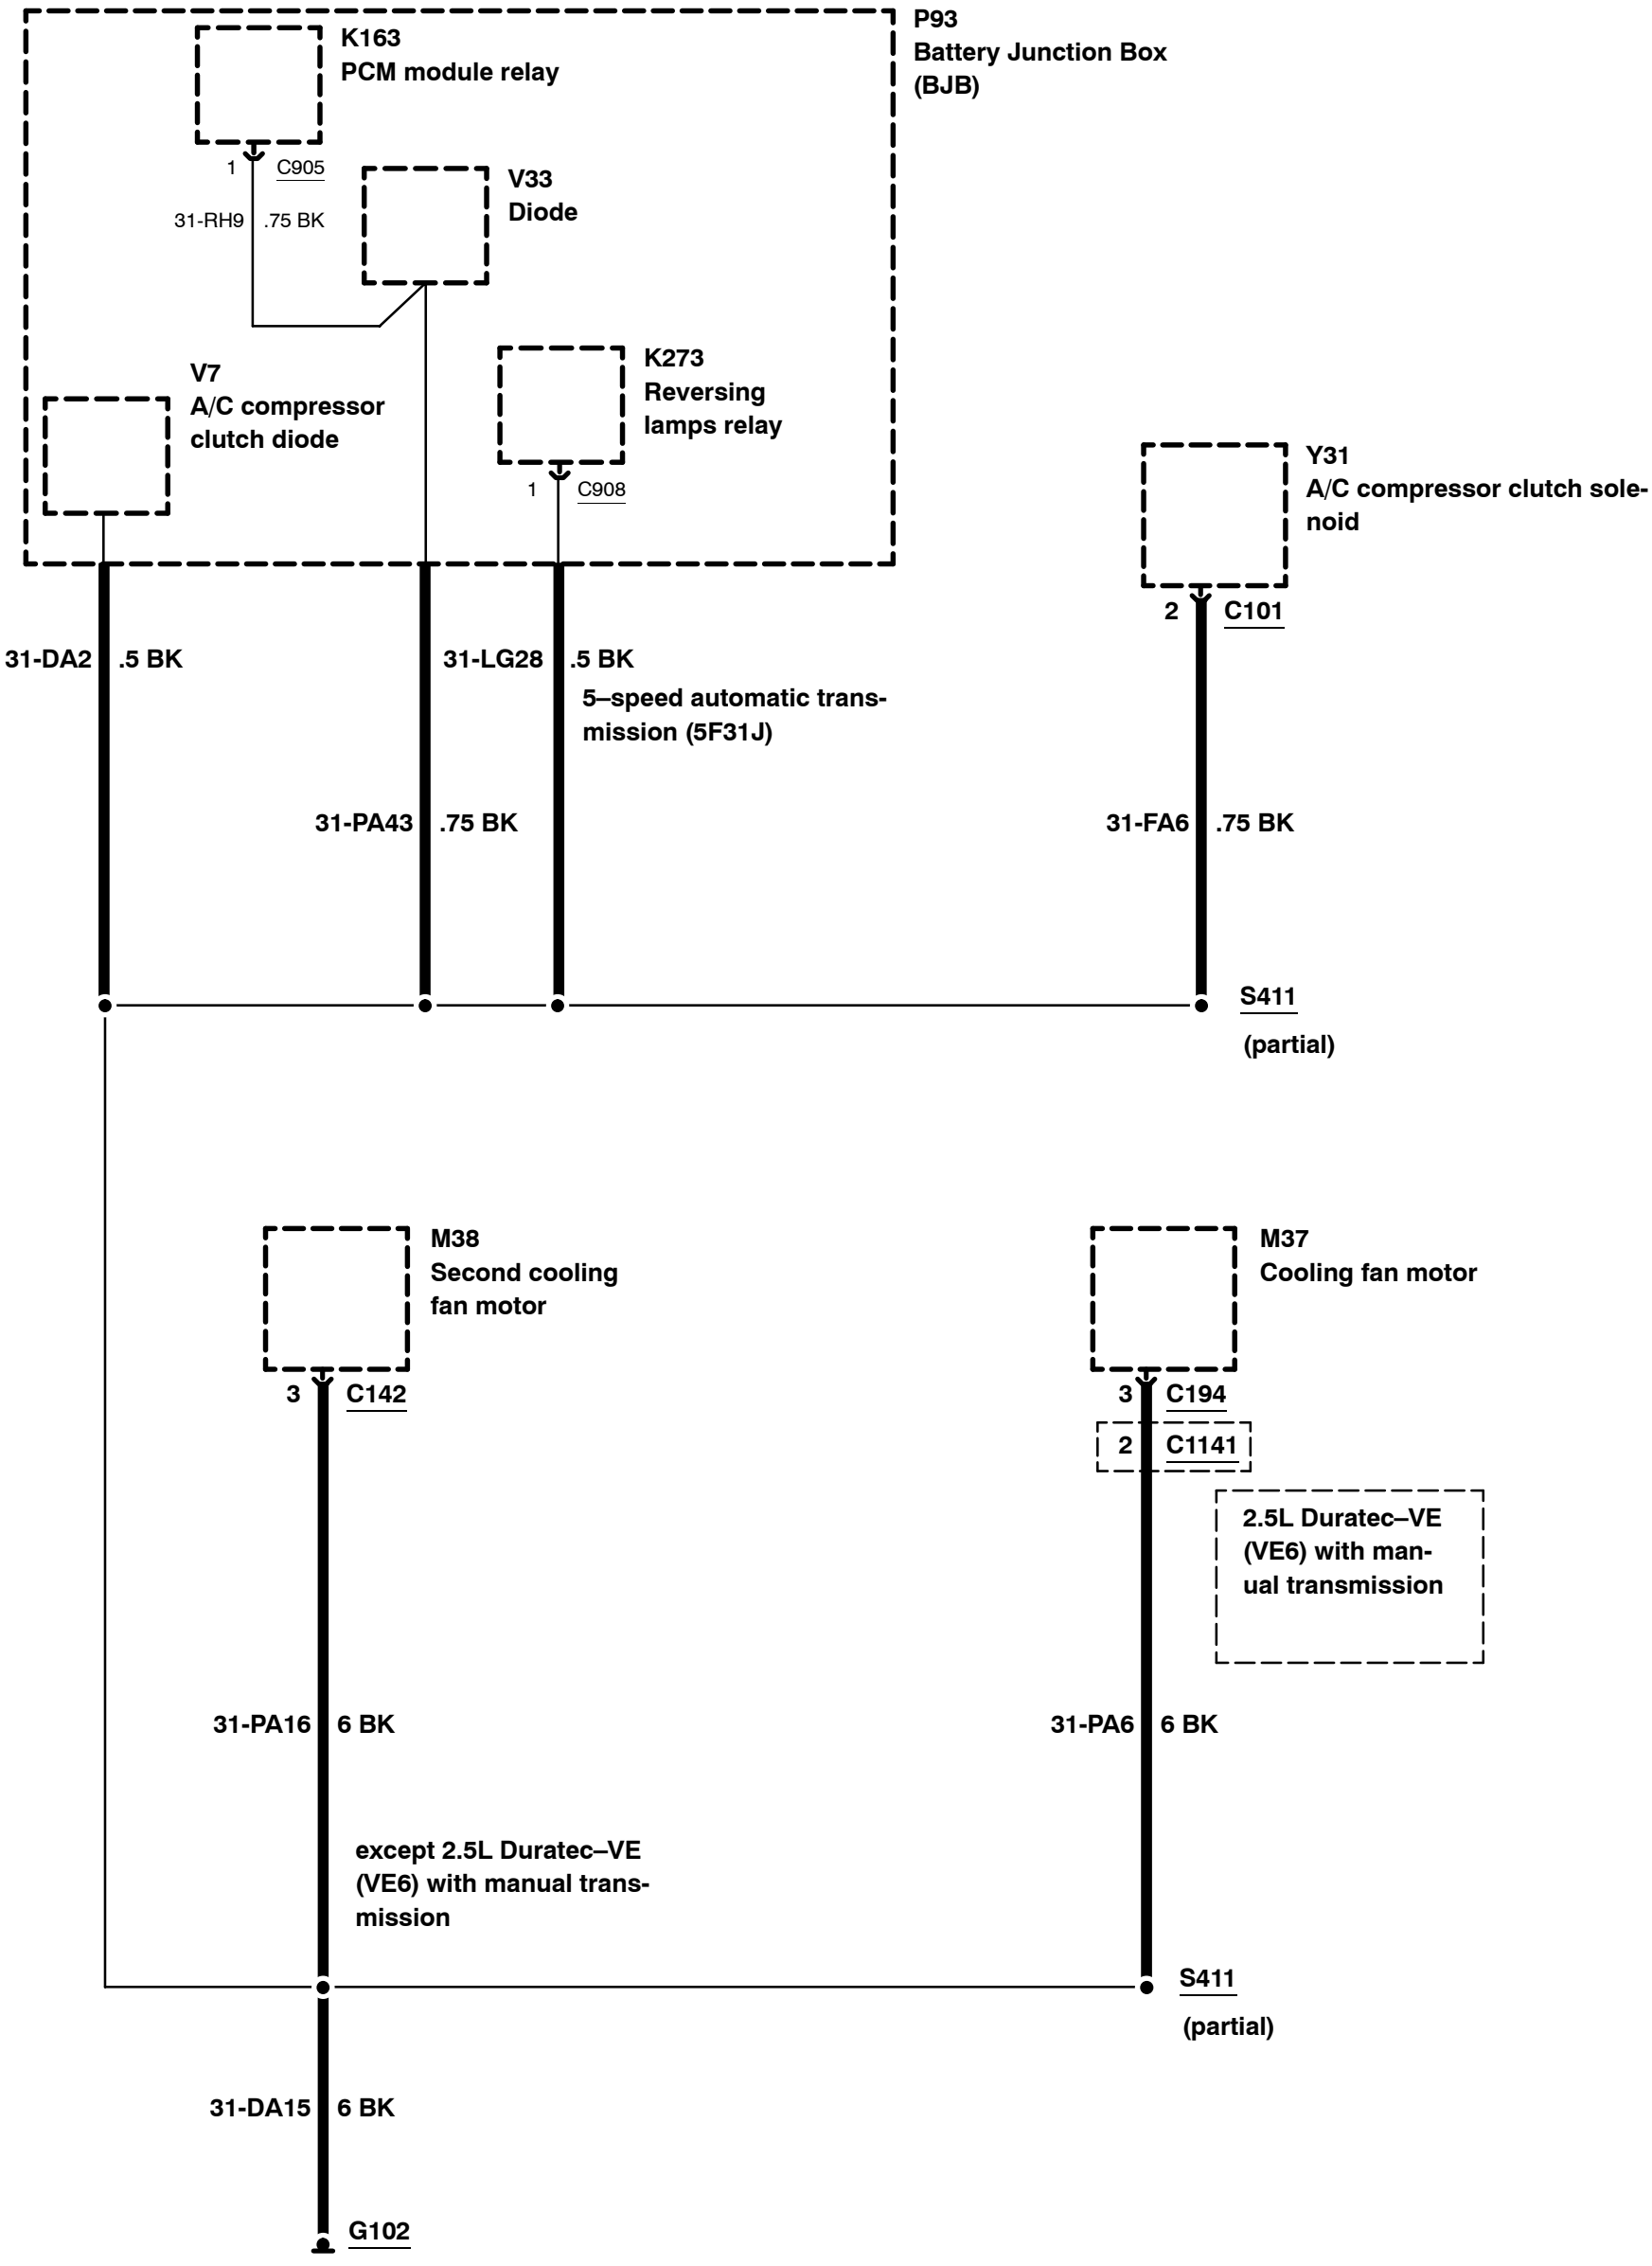


Ground Distribution – G102, 3.0L Duratec–SE (VE6)

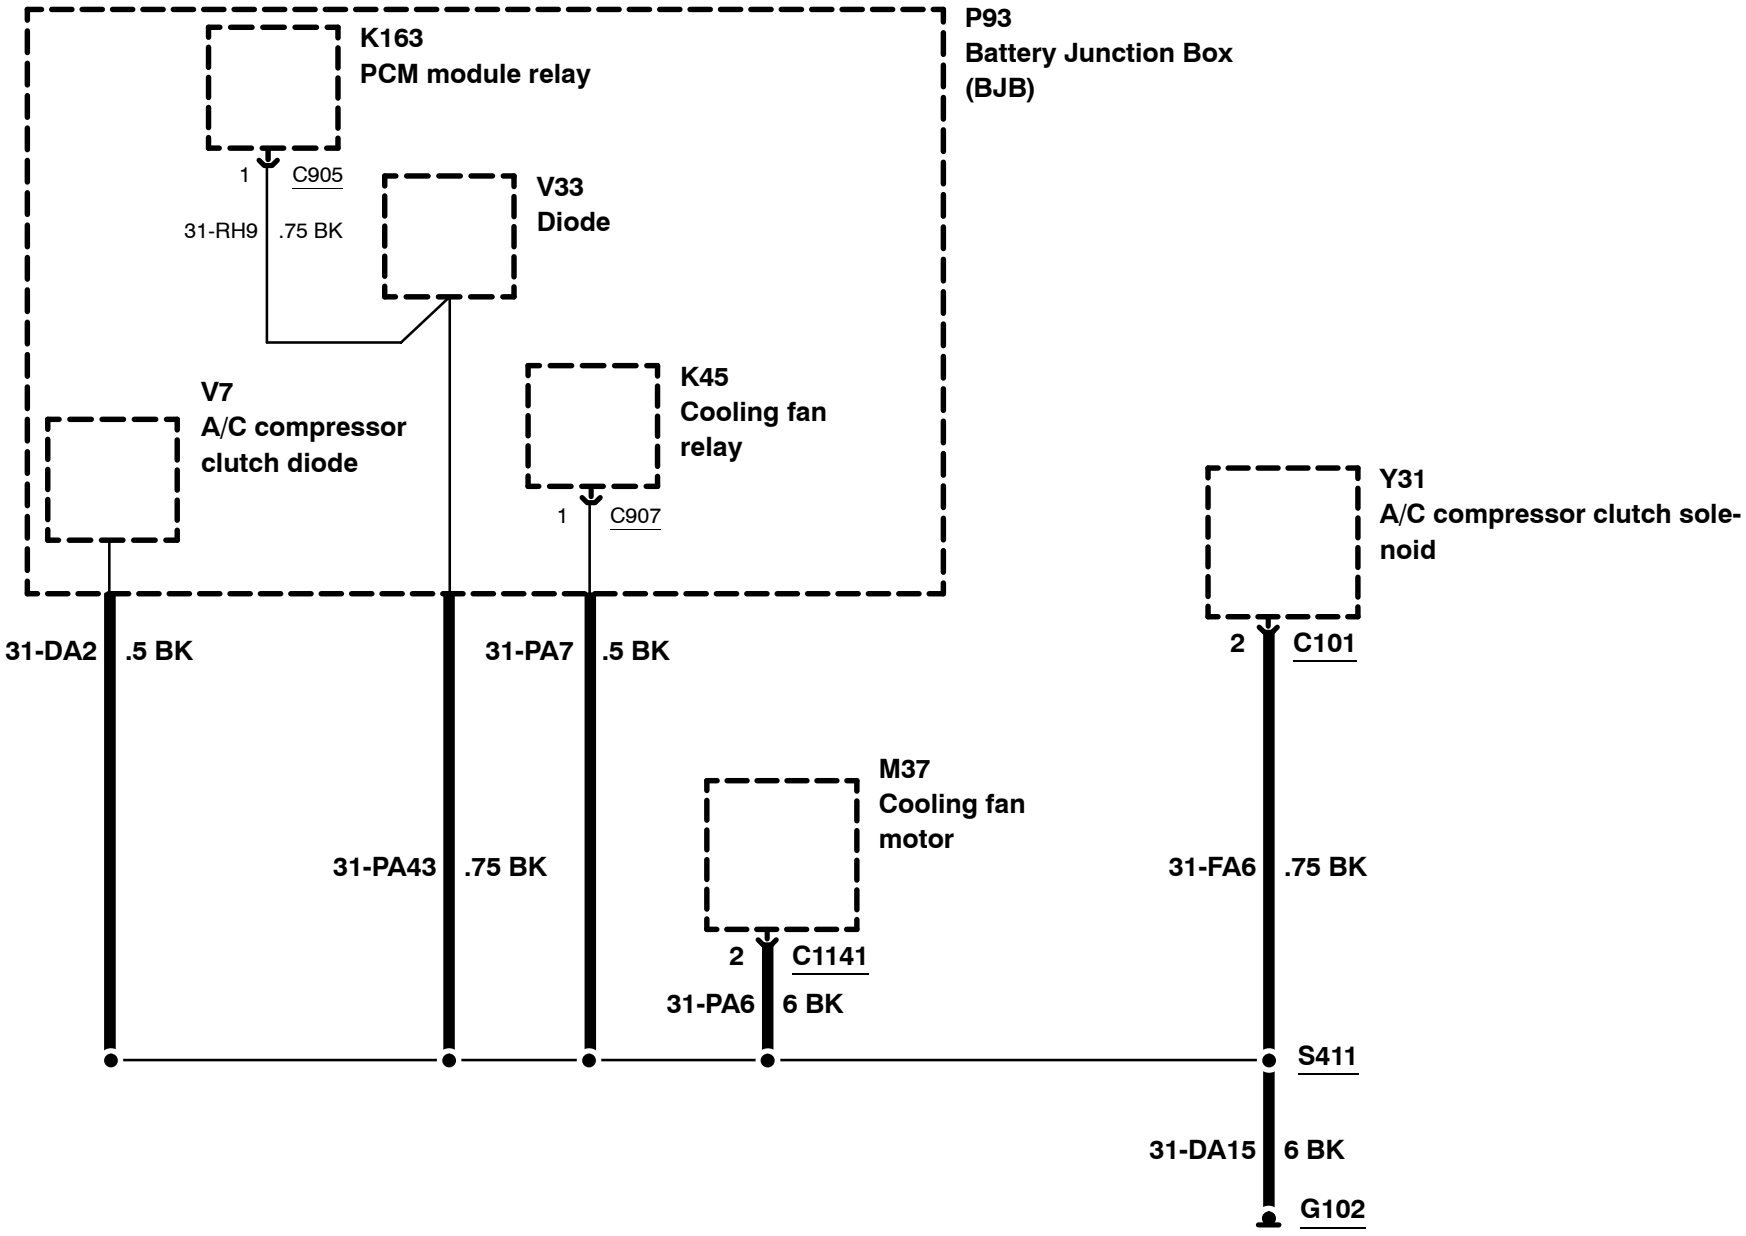


Ground Distribution – G102, Diesel engines

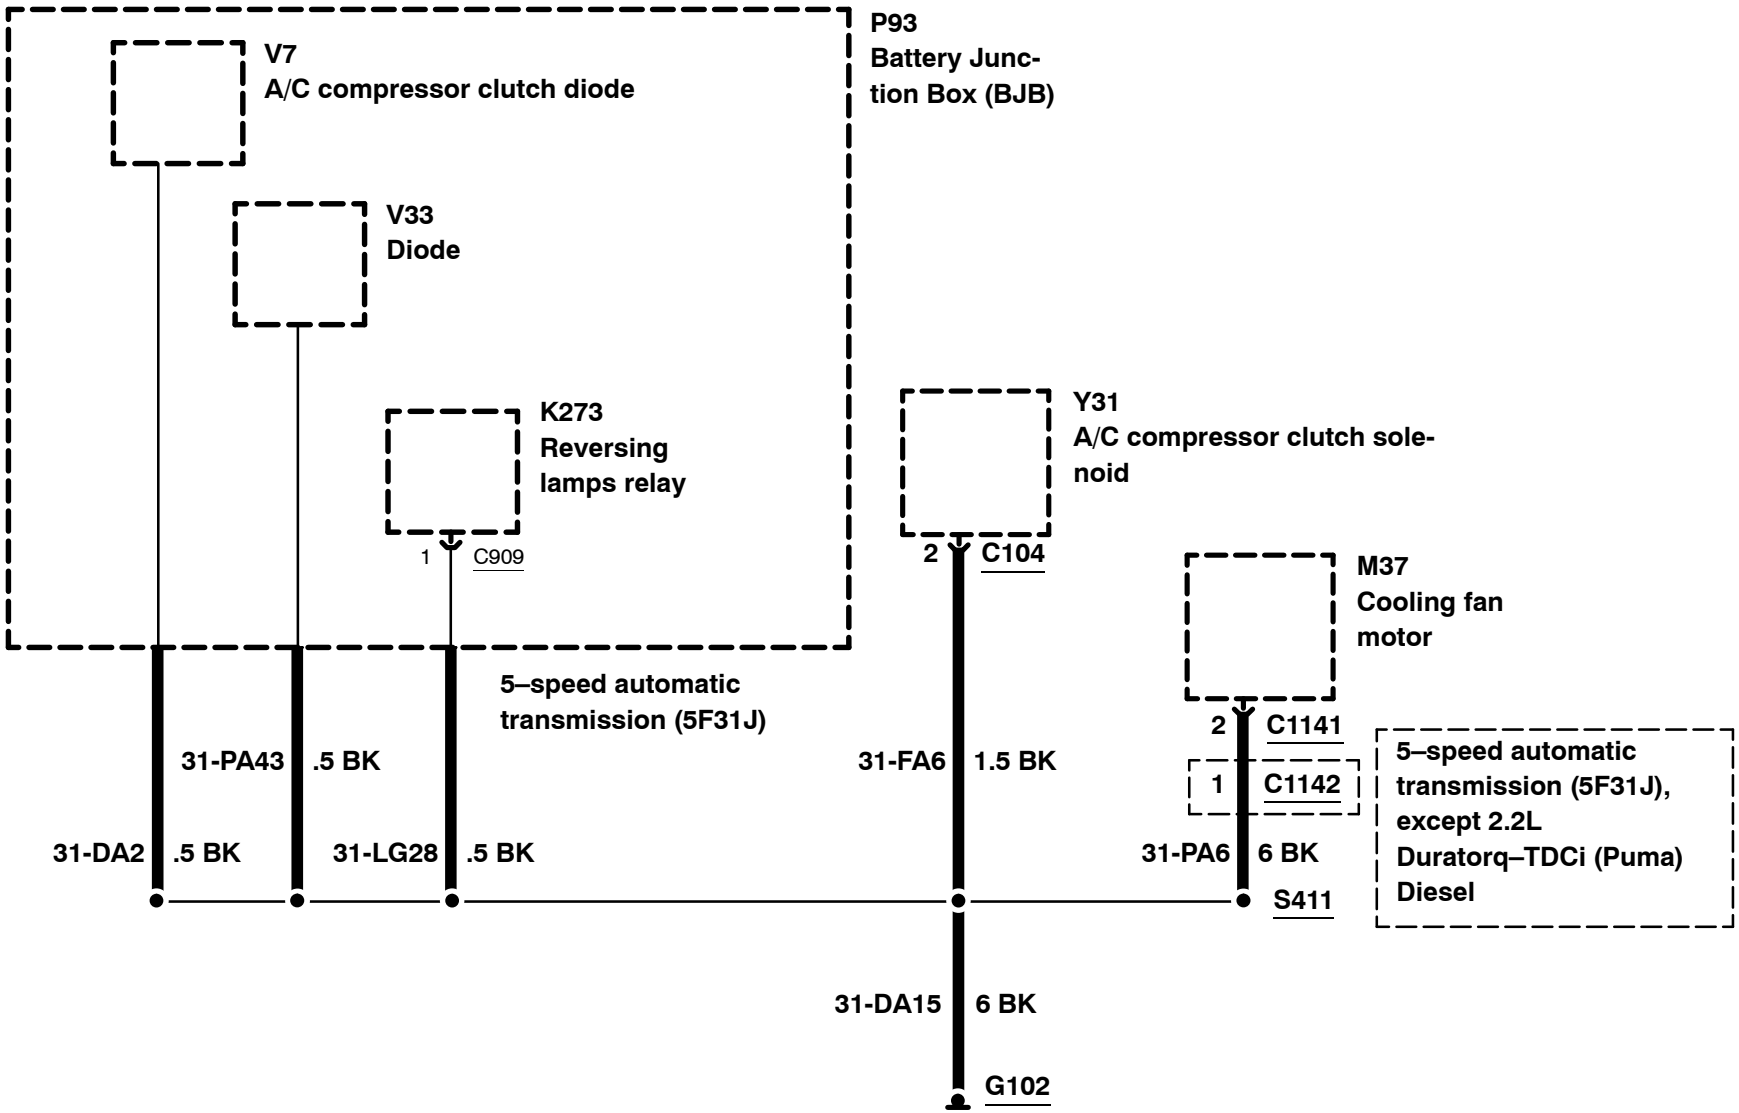


Ground Distribution – G103

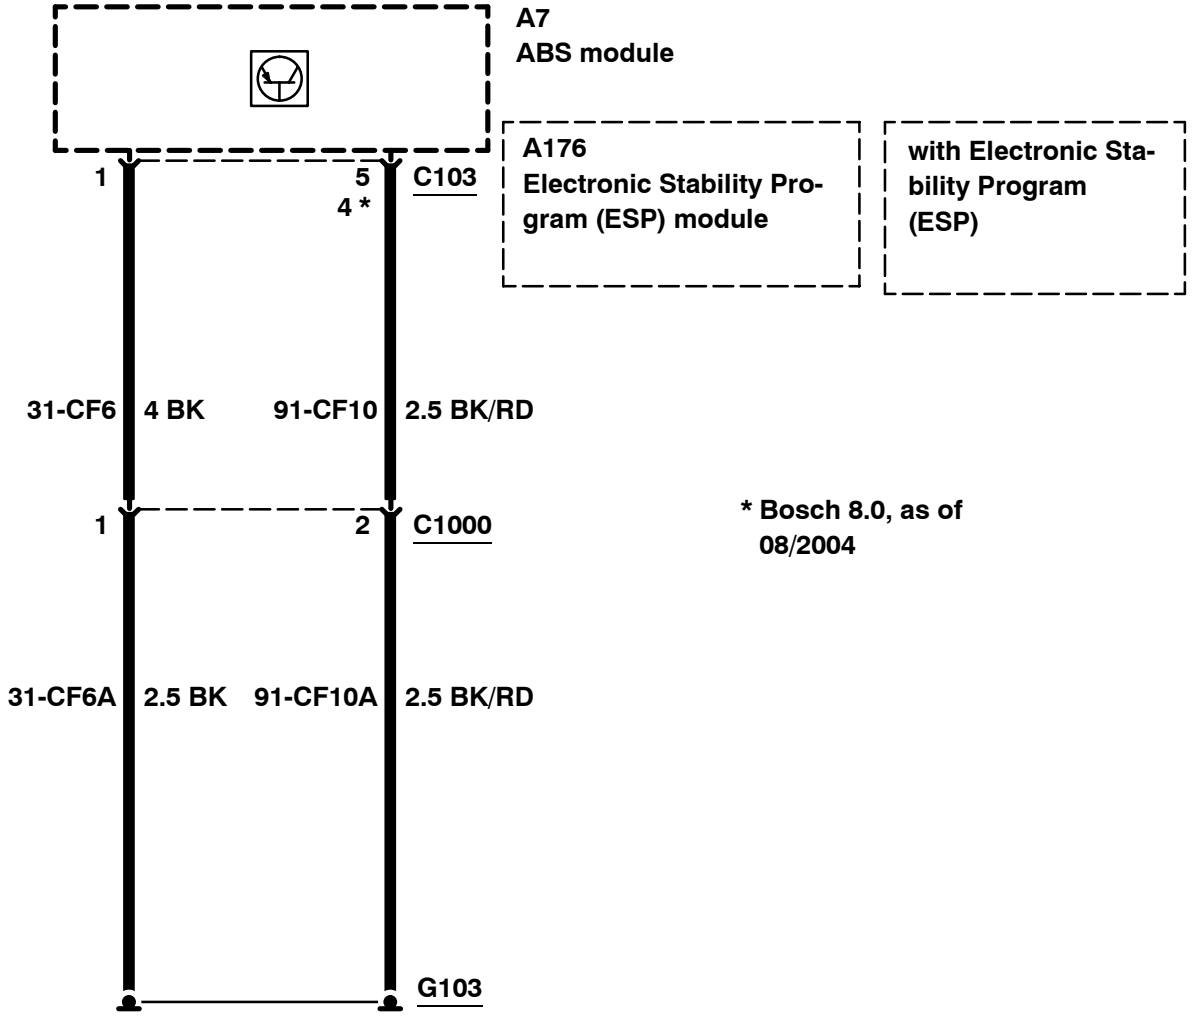


Ground Distribution – G104

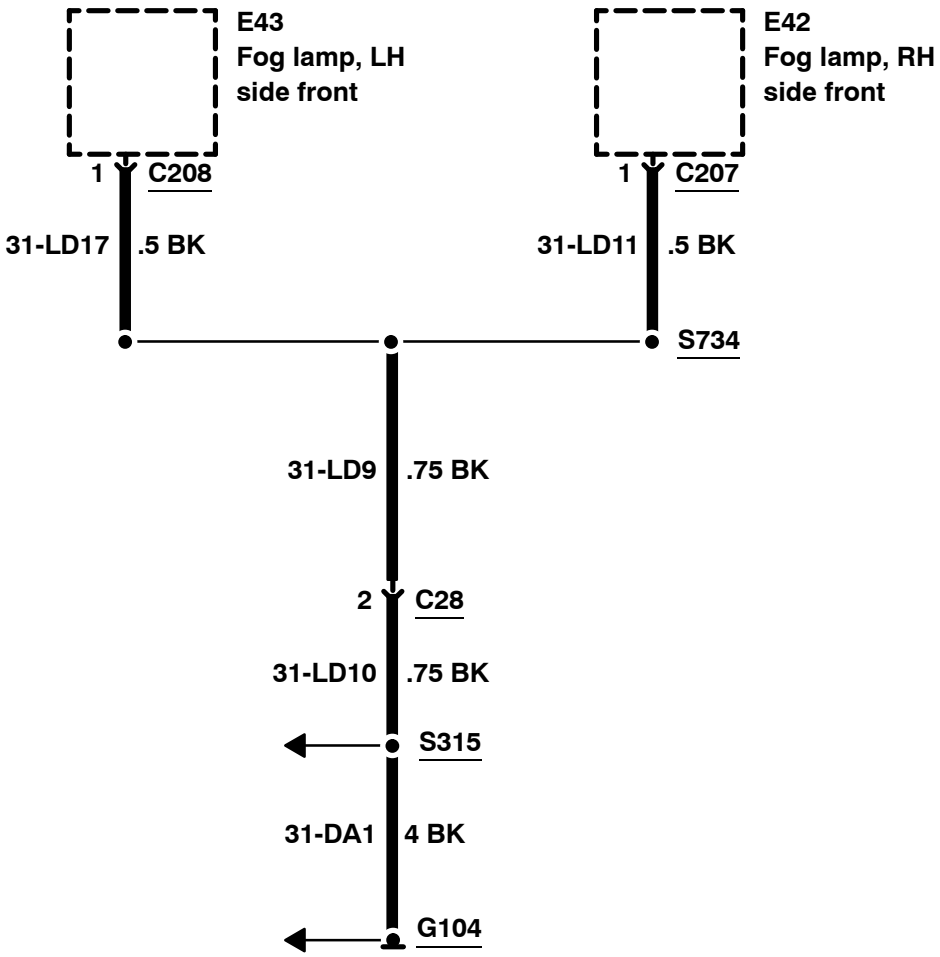


Ground Distribution – G104

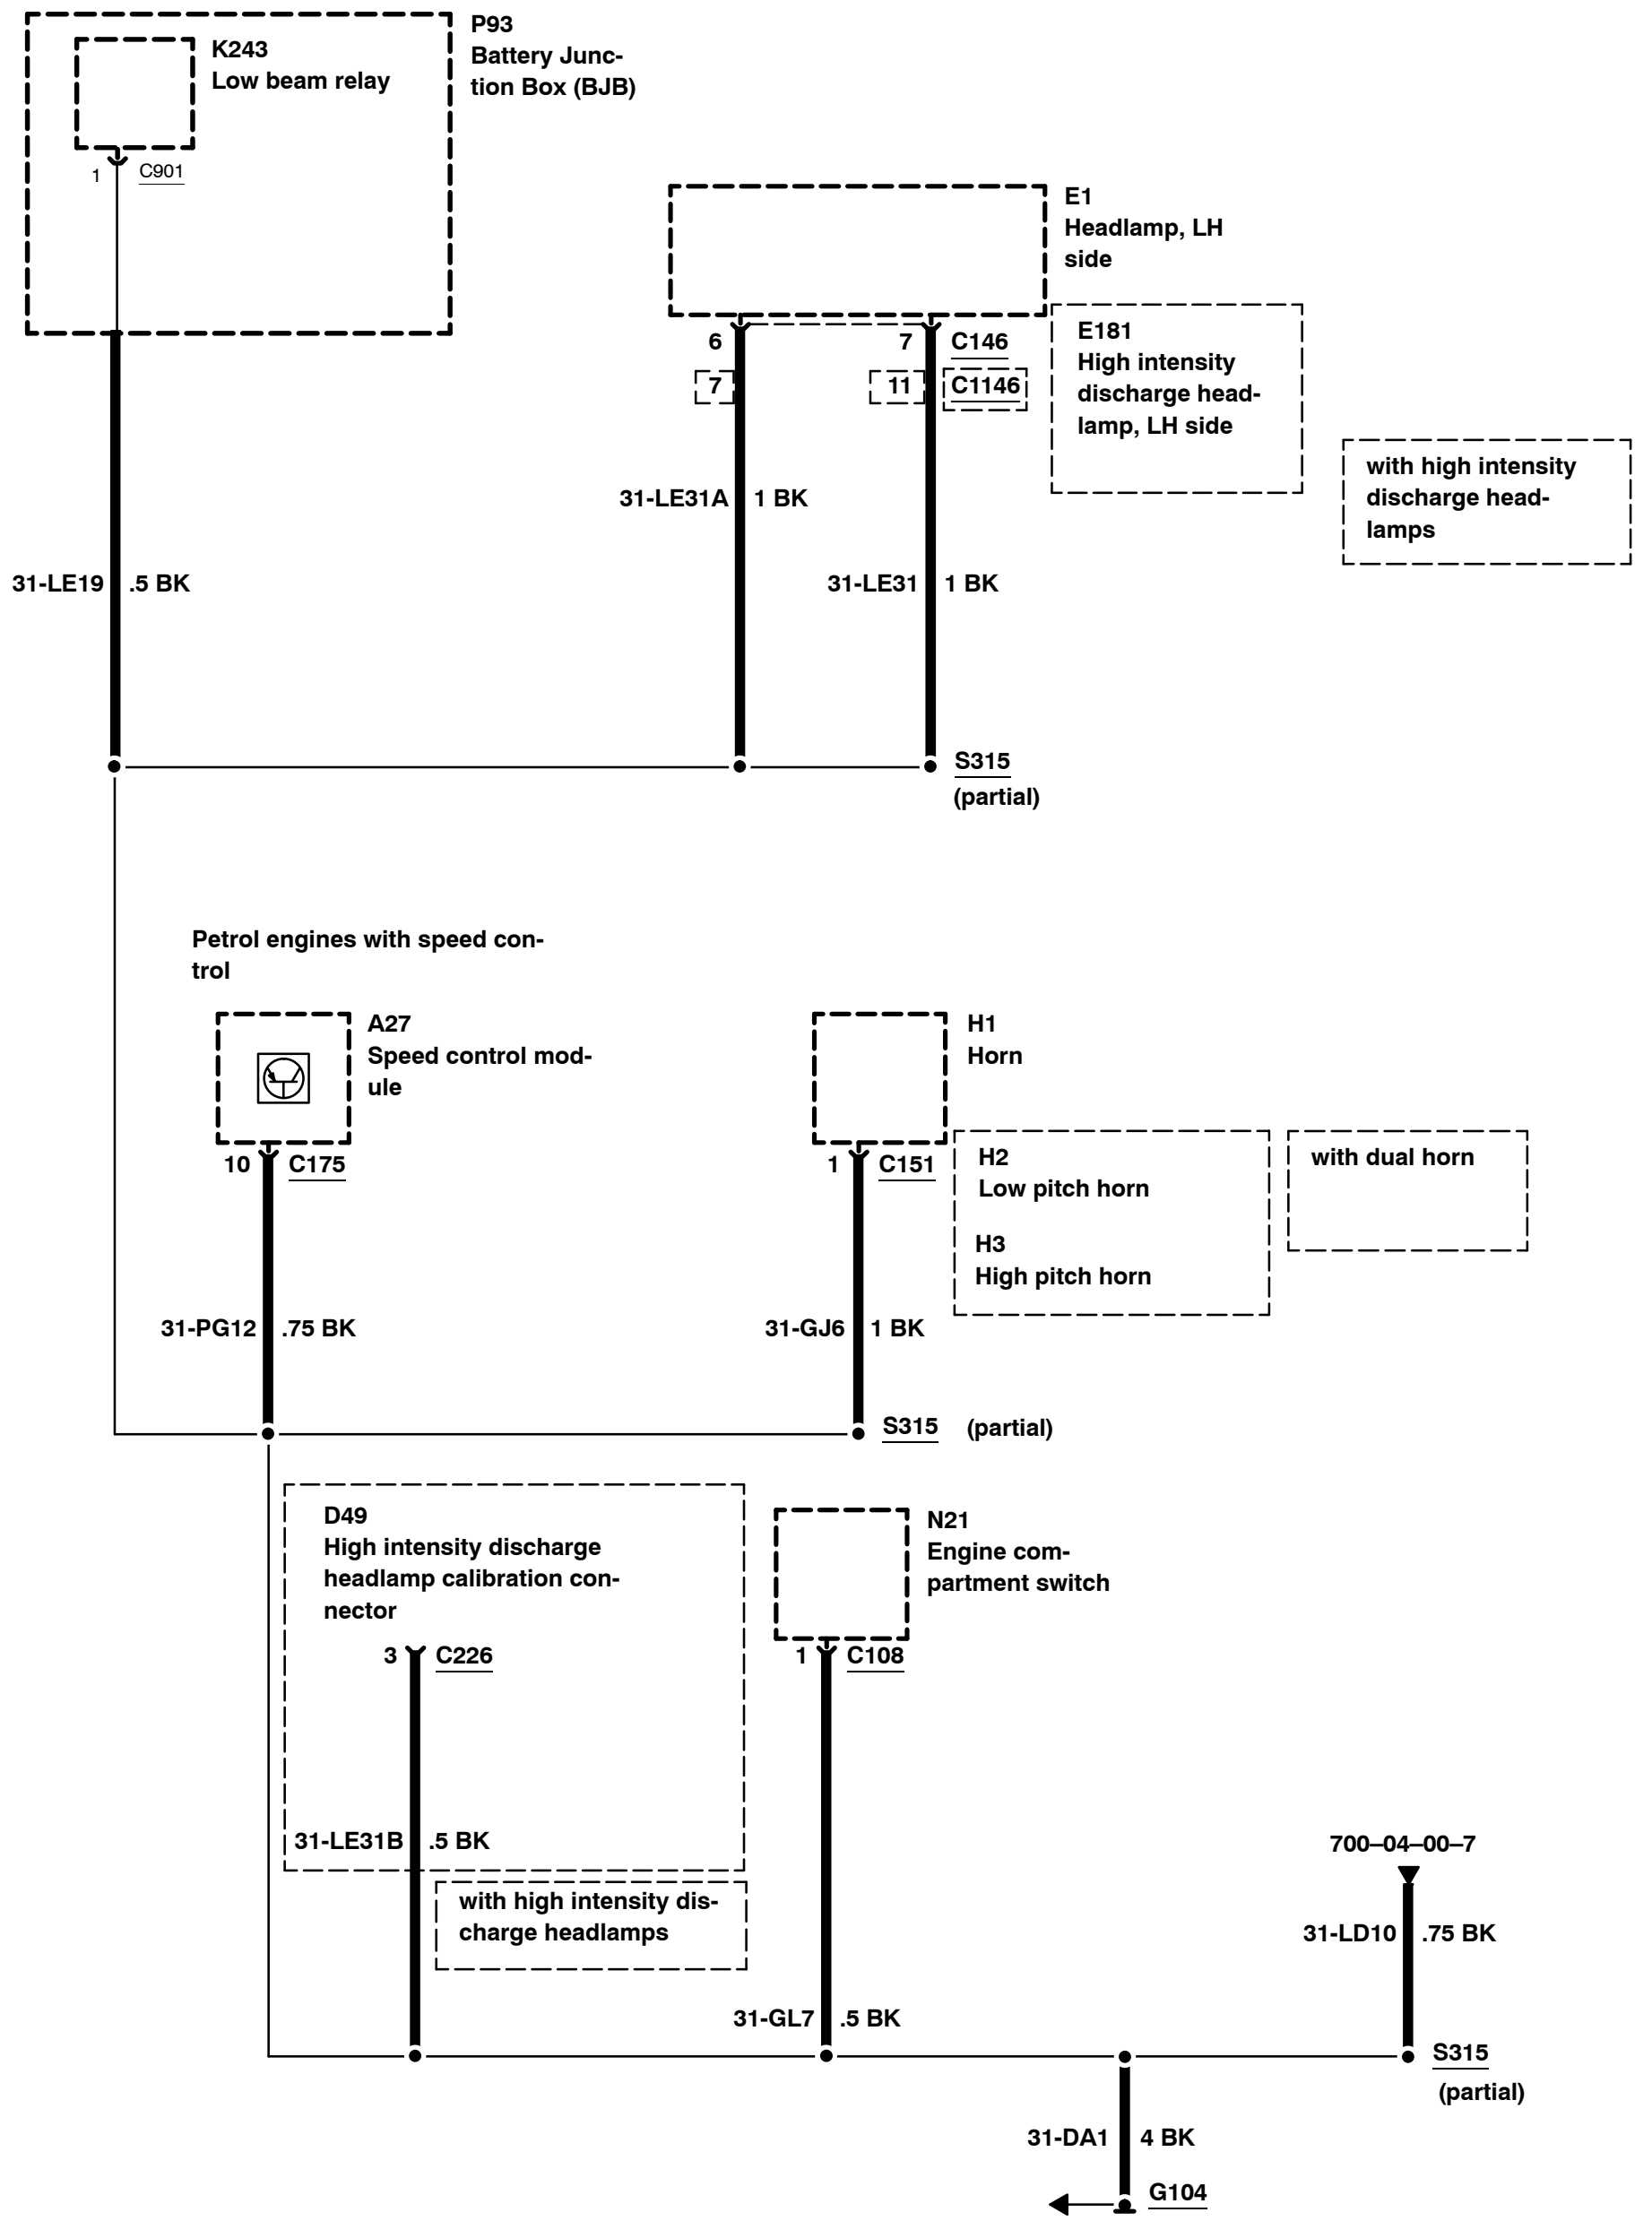


Ground Distribution – G104

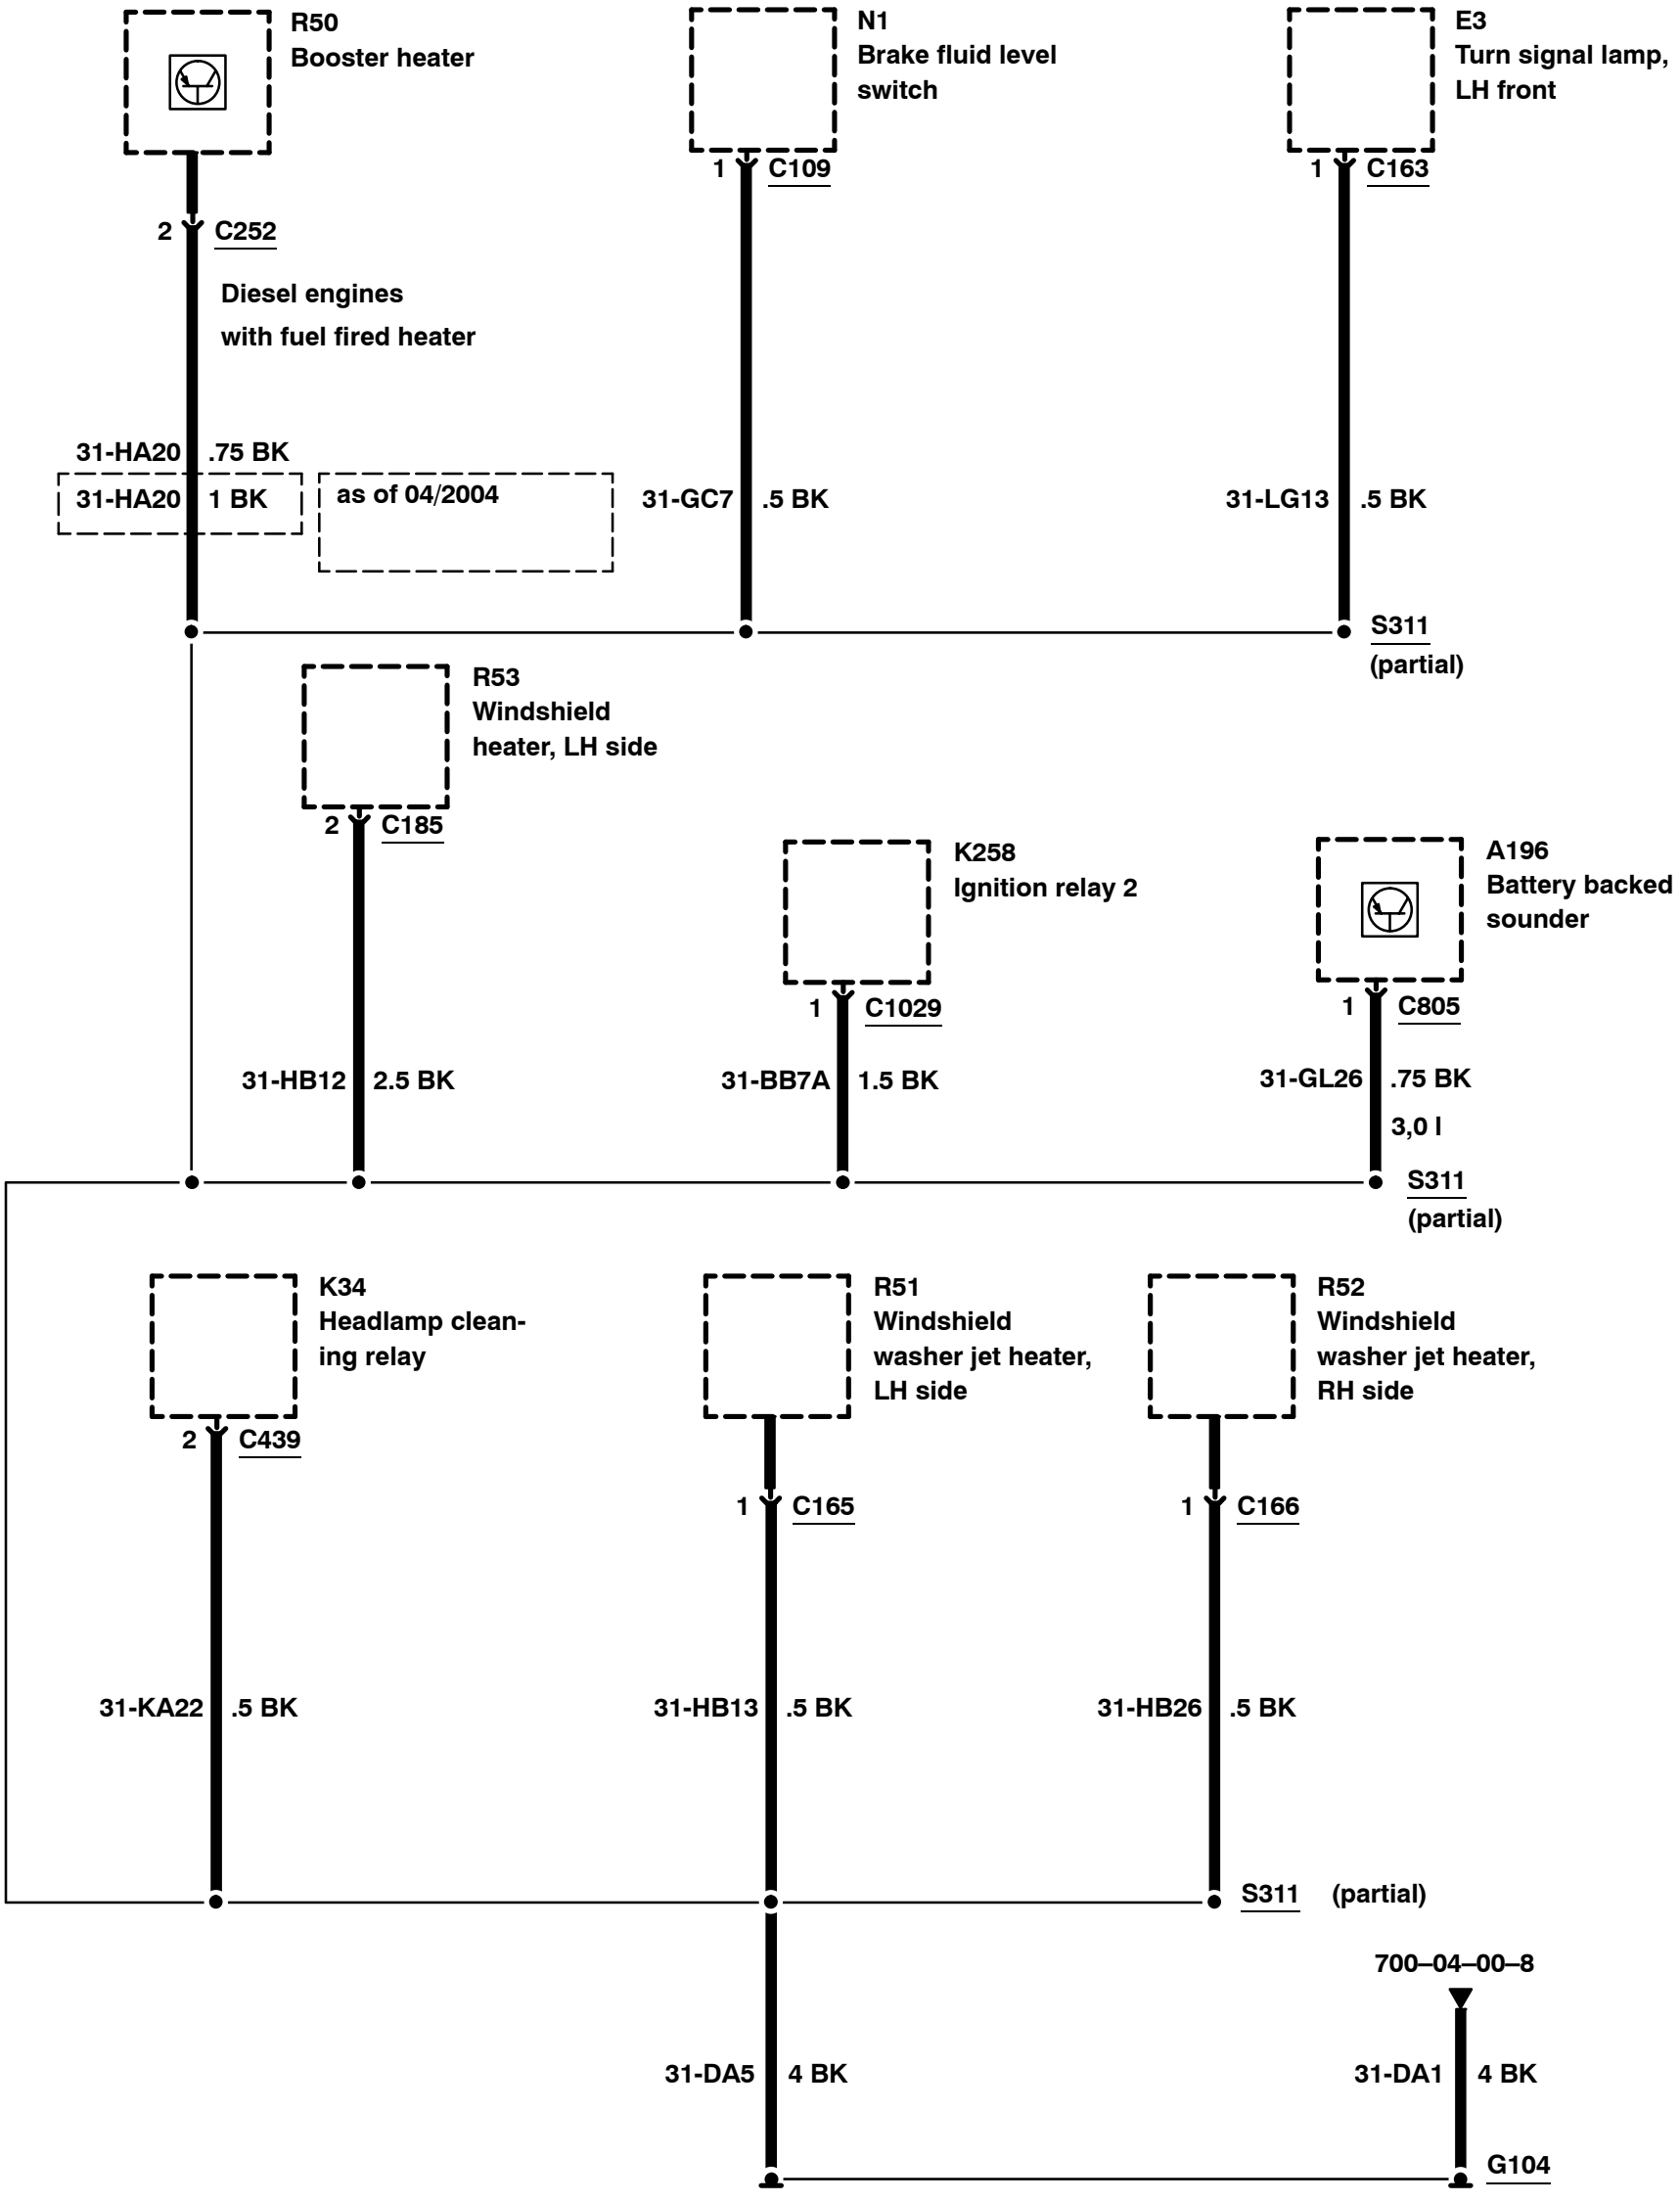


Ground Distribution – G105

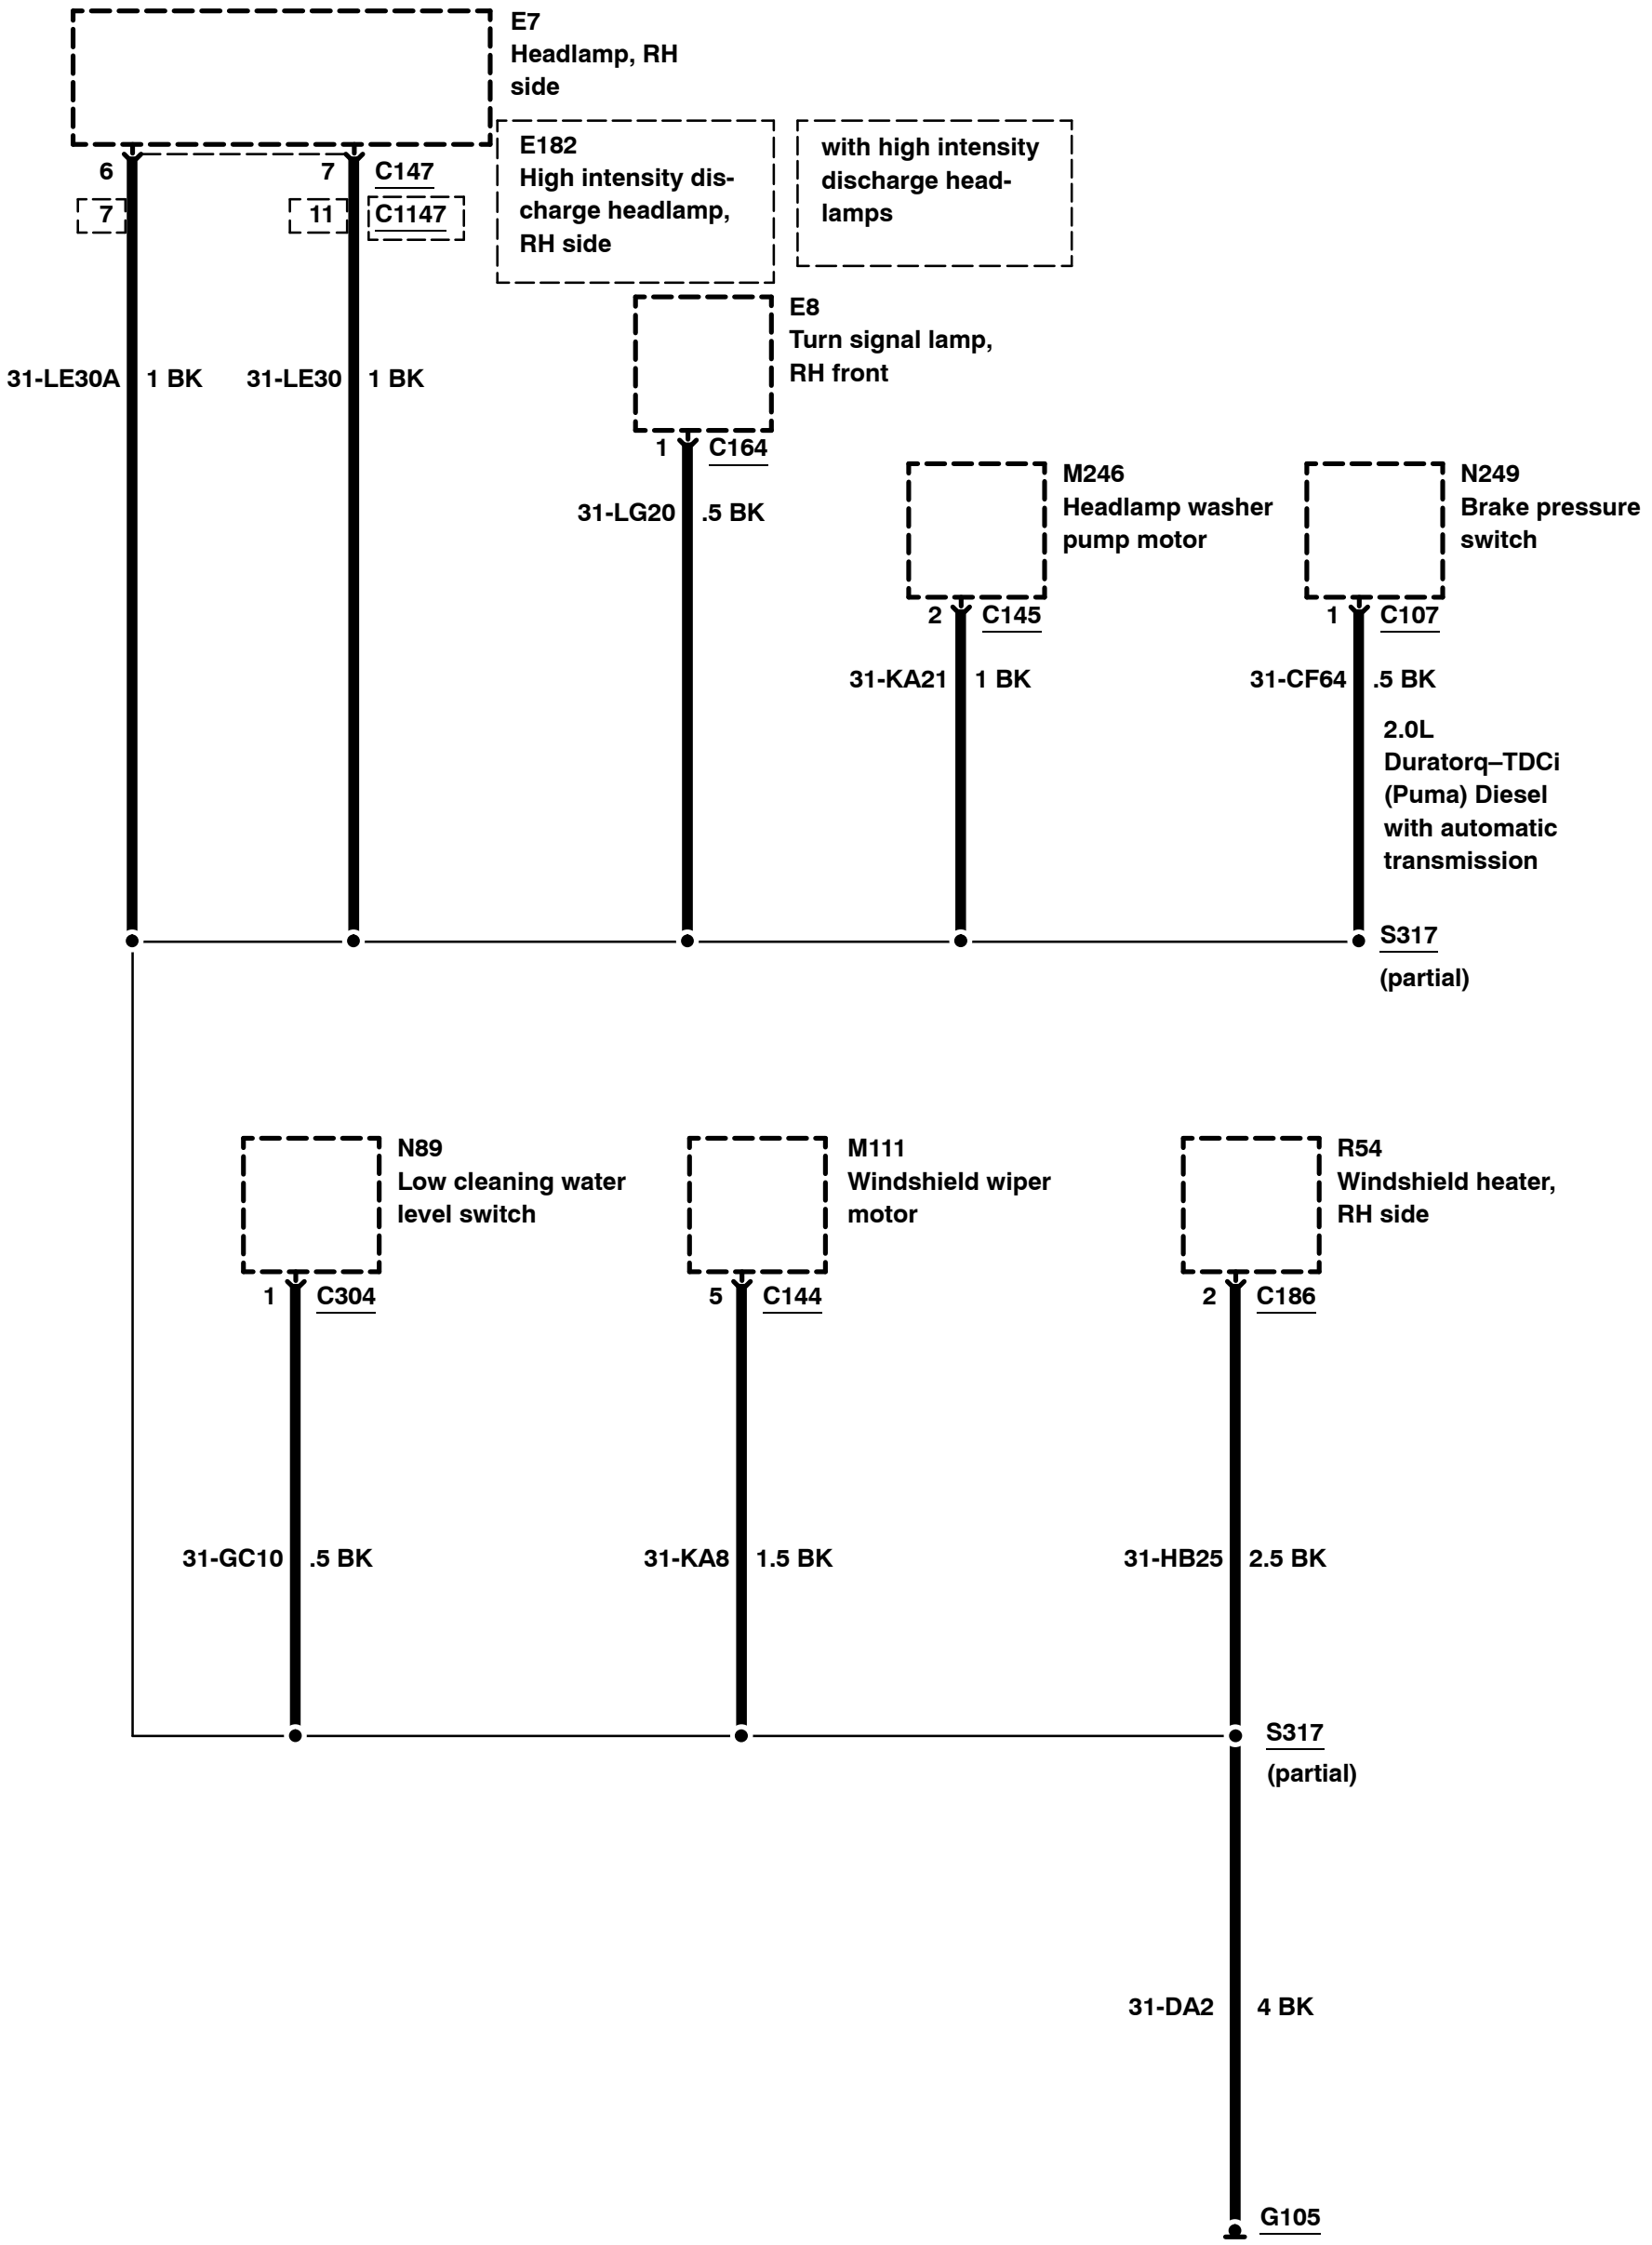


Ground Distribution – G106, 1.8L Duratec–SCi (MI4), before 04/2004

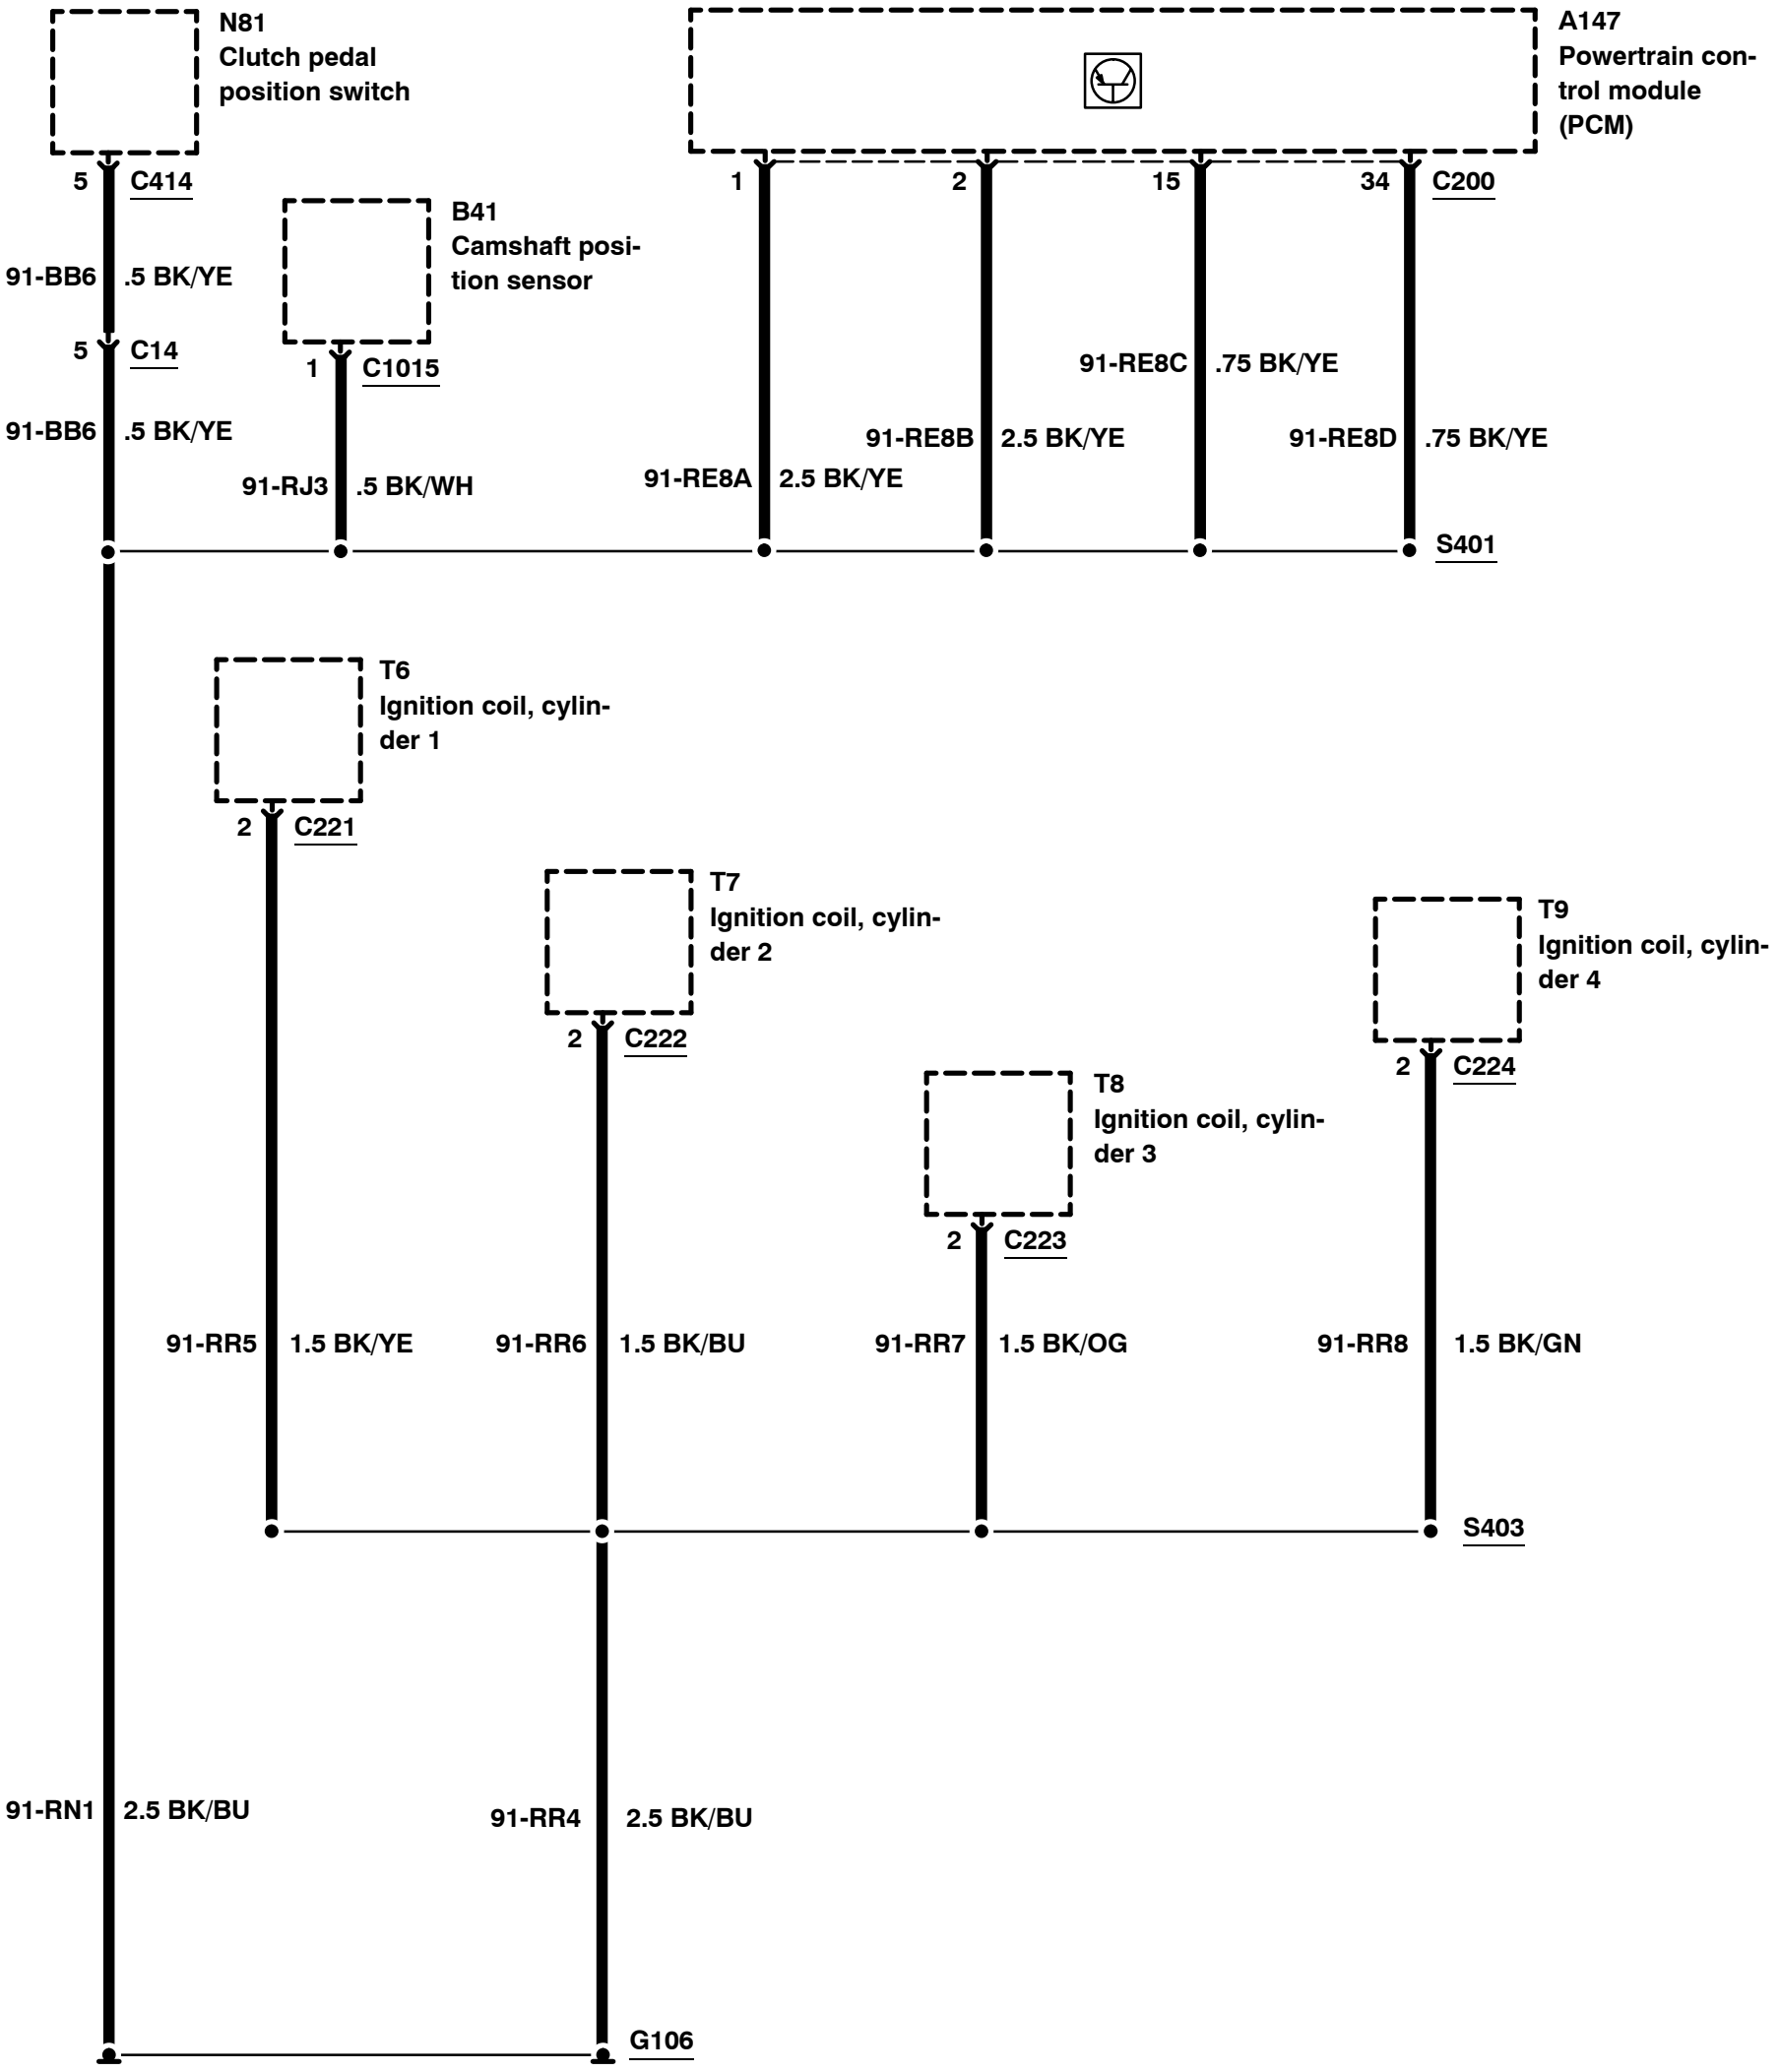


Ground Distribution – G106, 1.8L Duratec–SCi (MI4), as of 04/2004

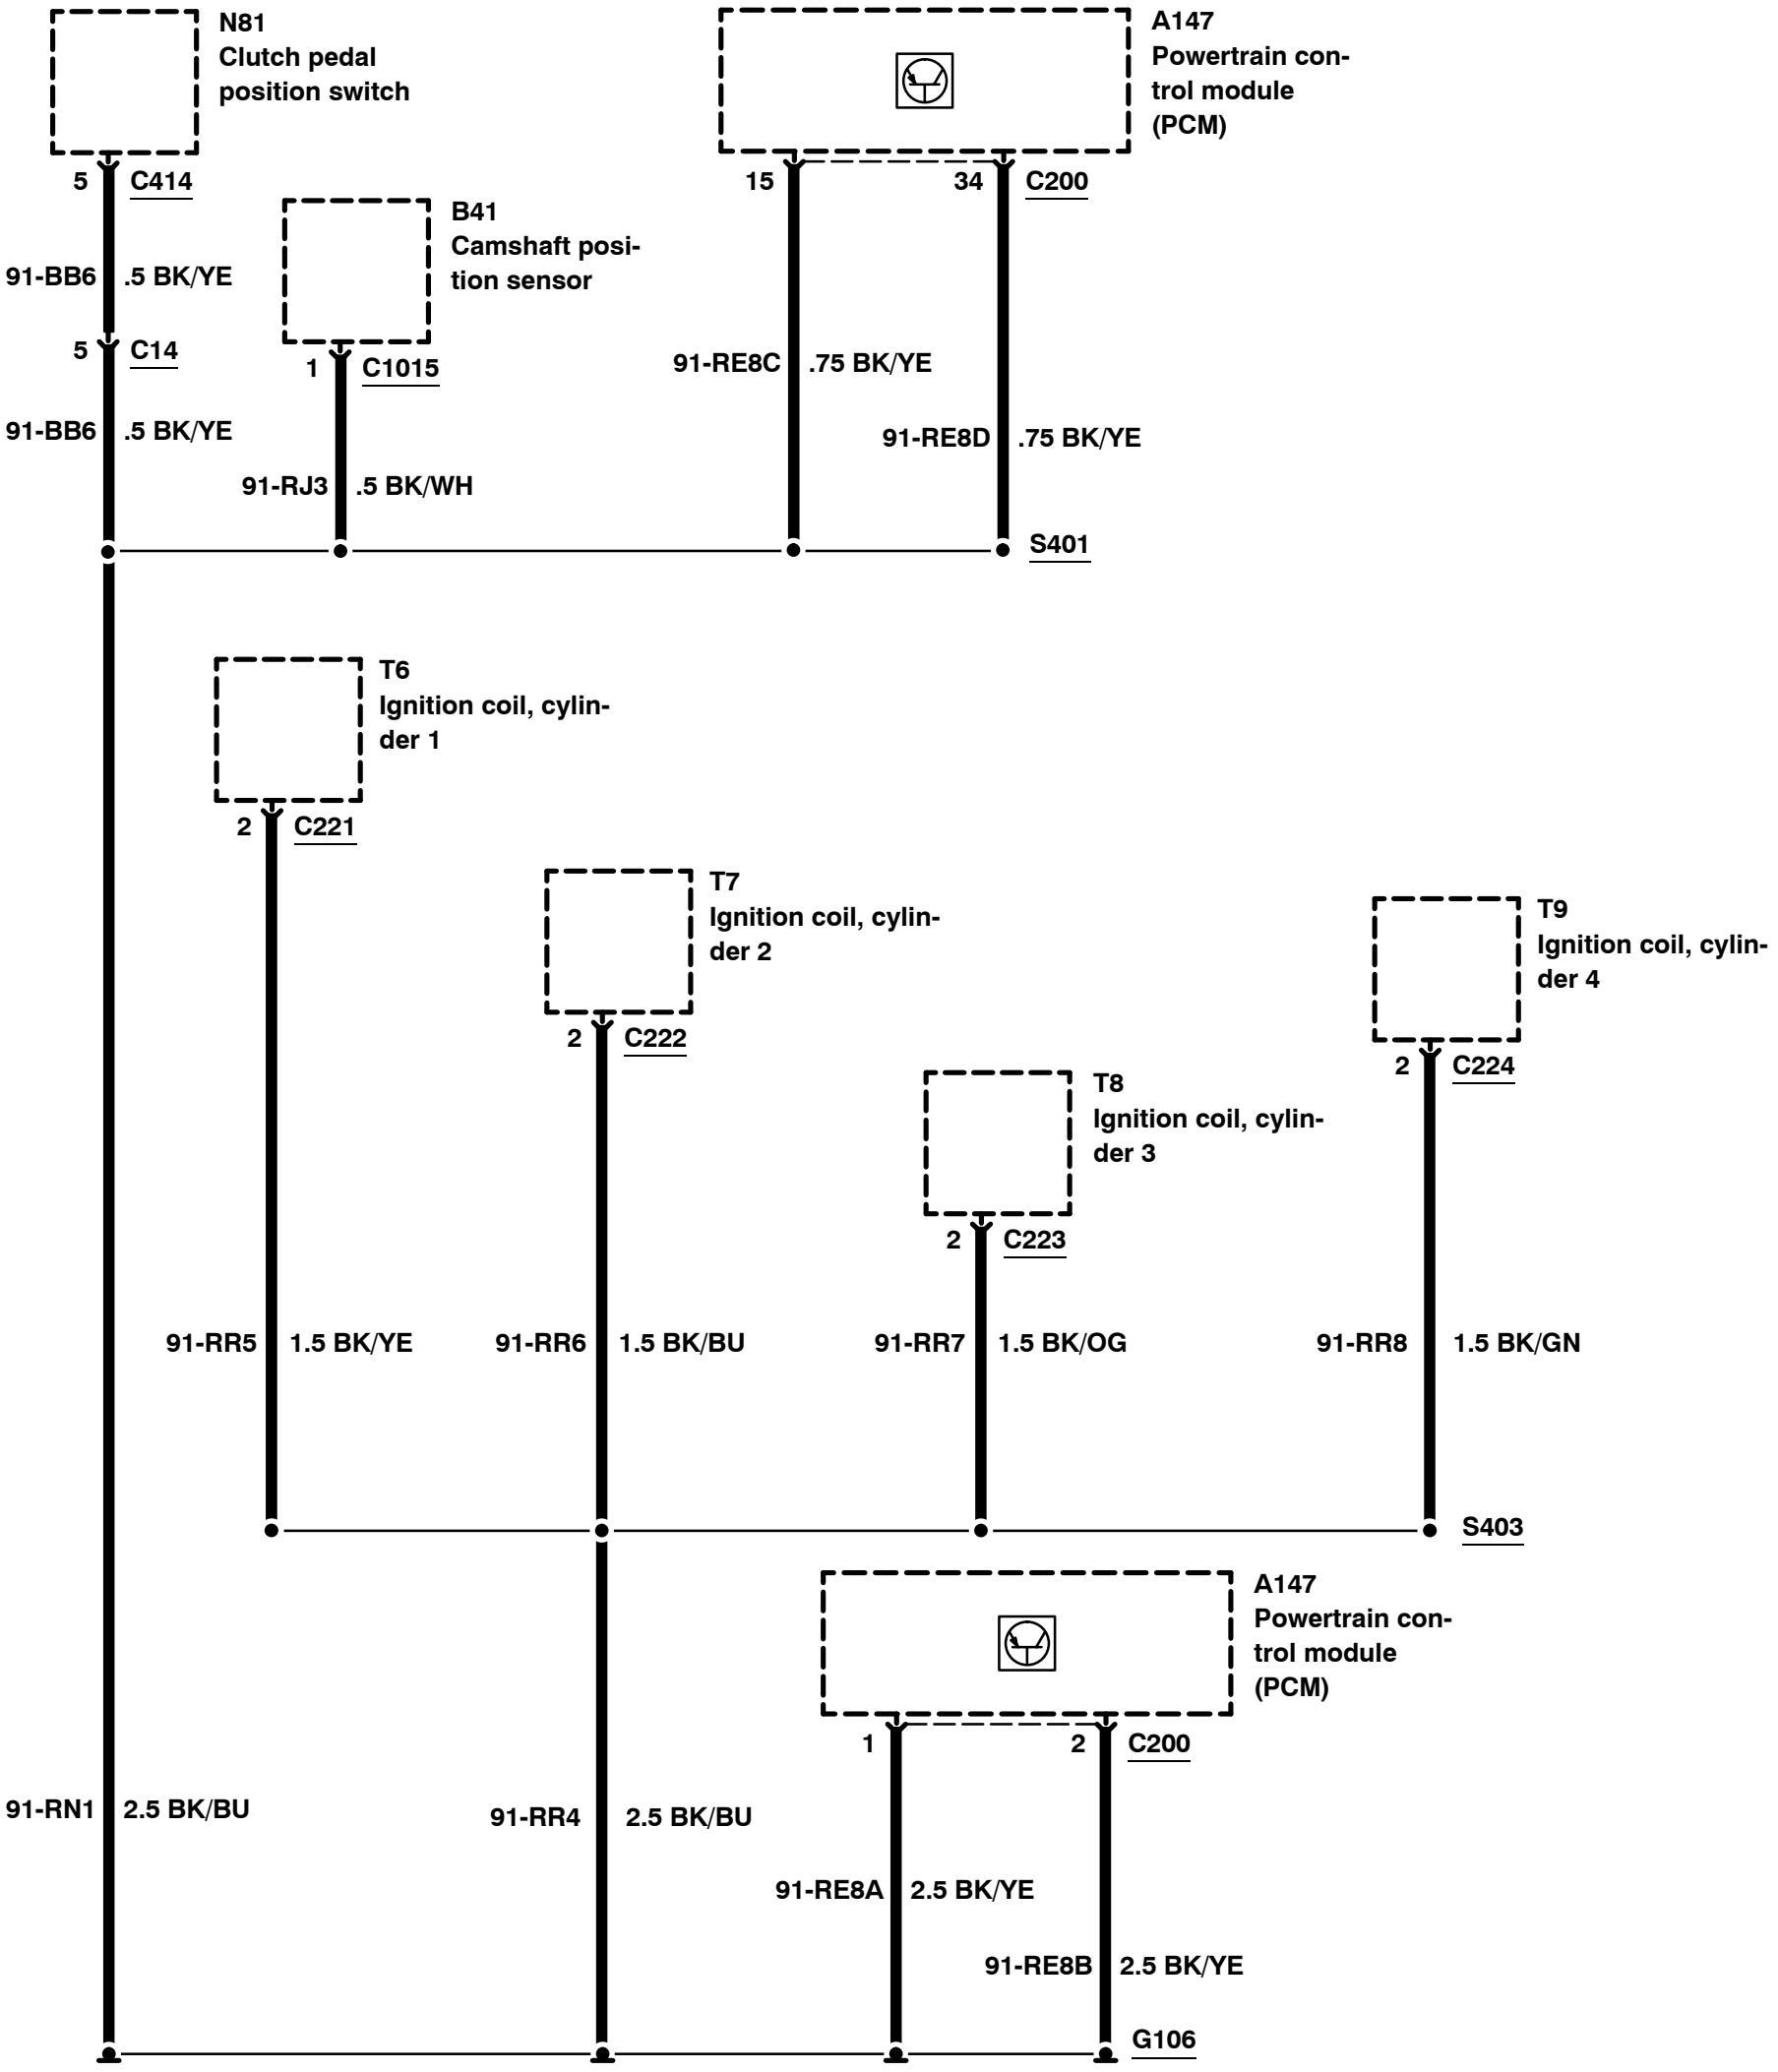


Ground Distribution – G106, 1.8/2.0L Duratec–HE (MI4)

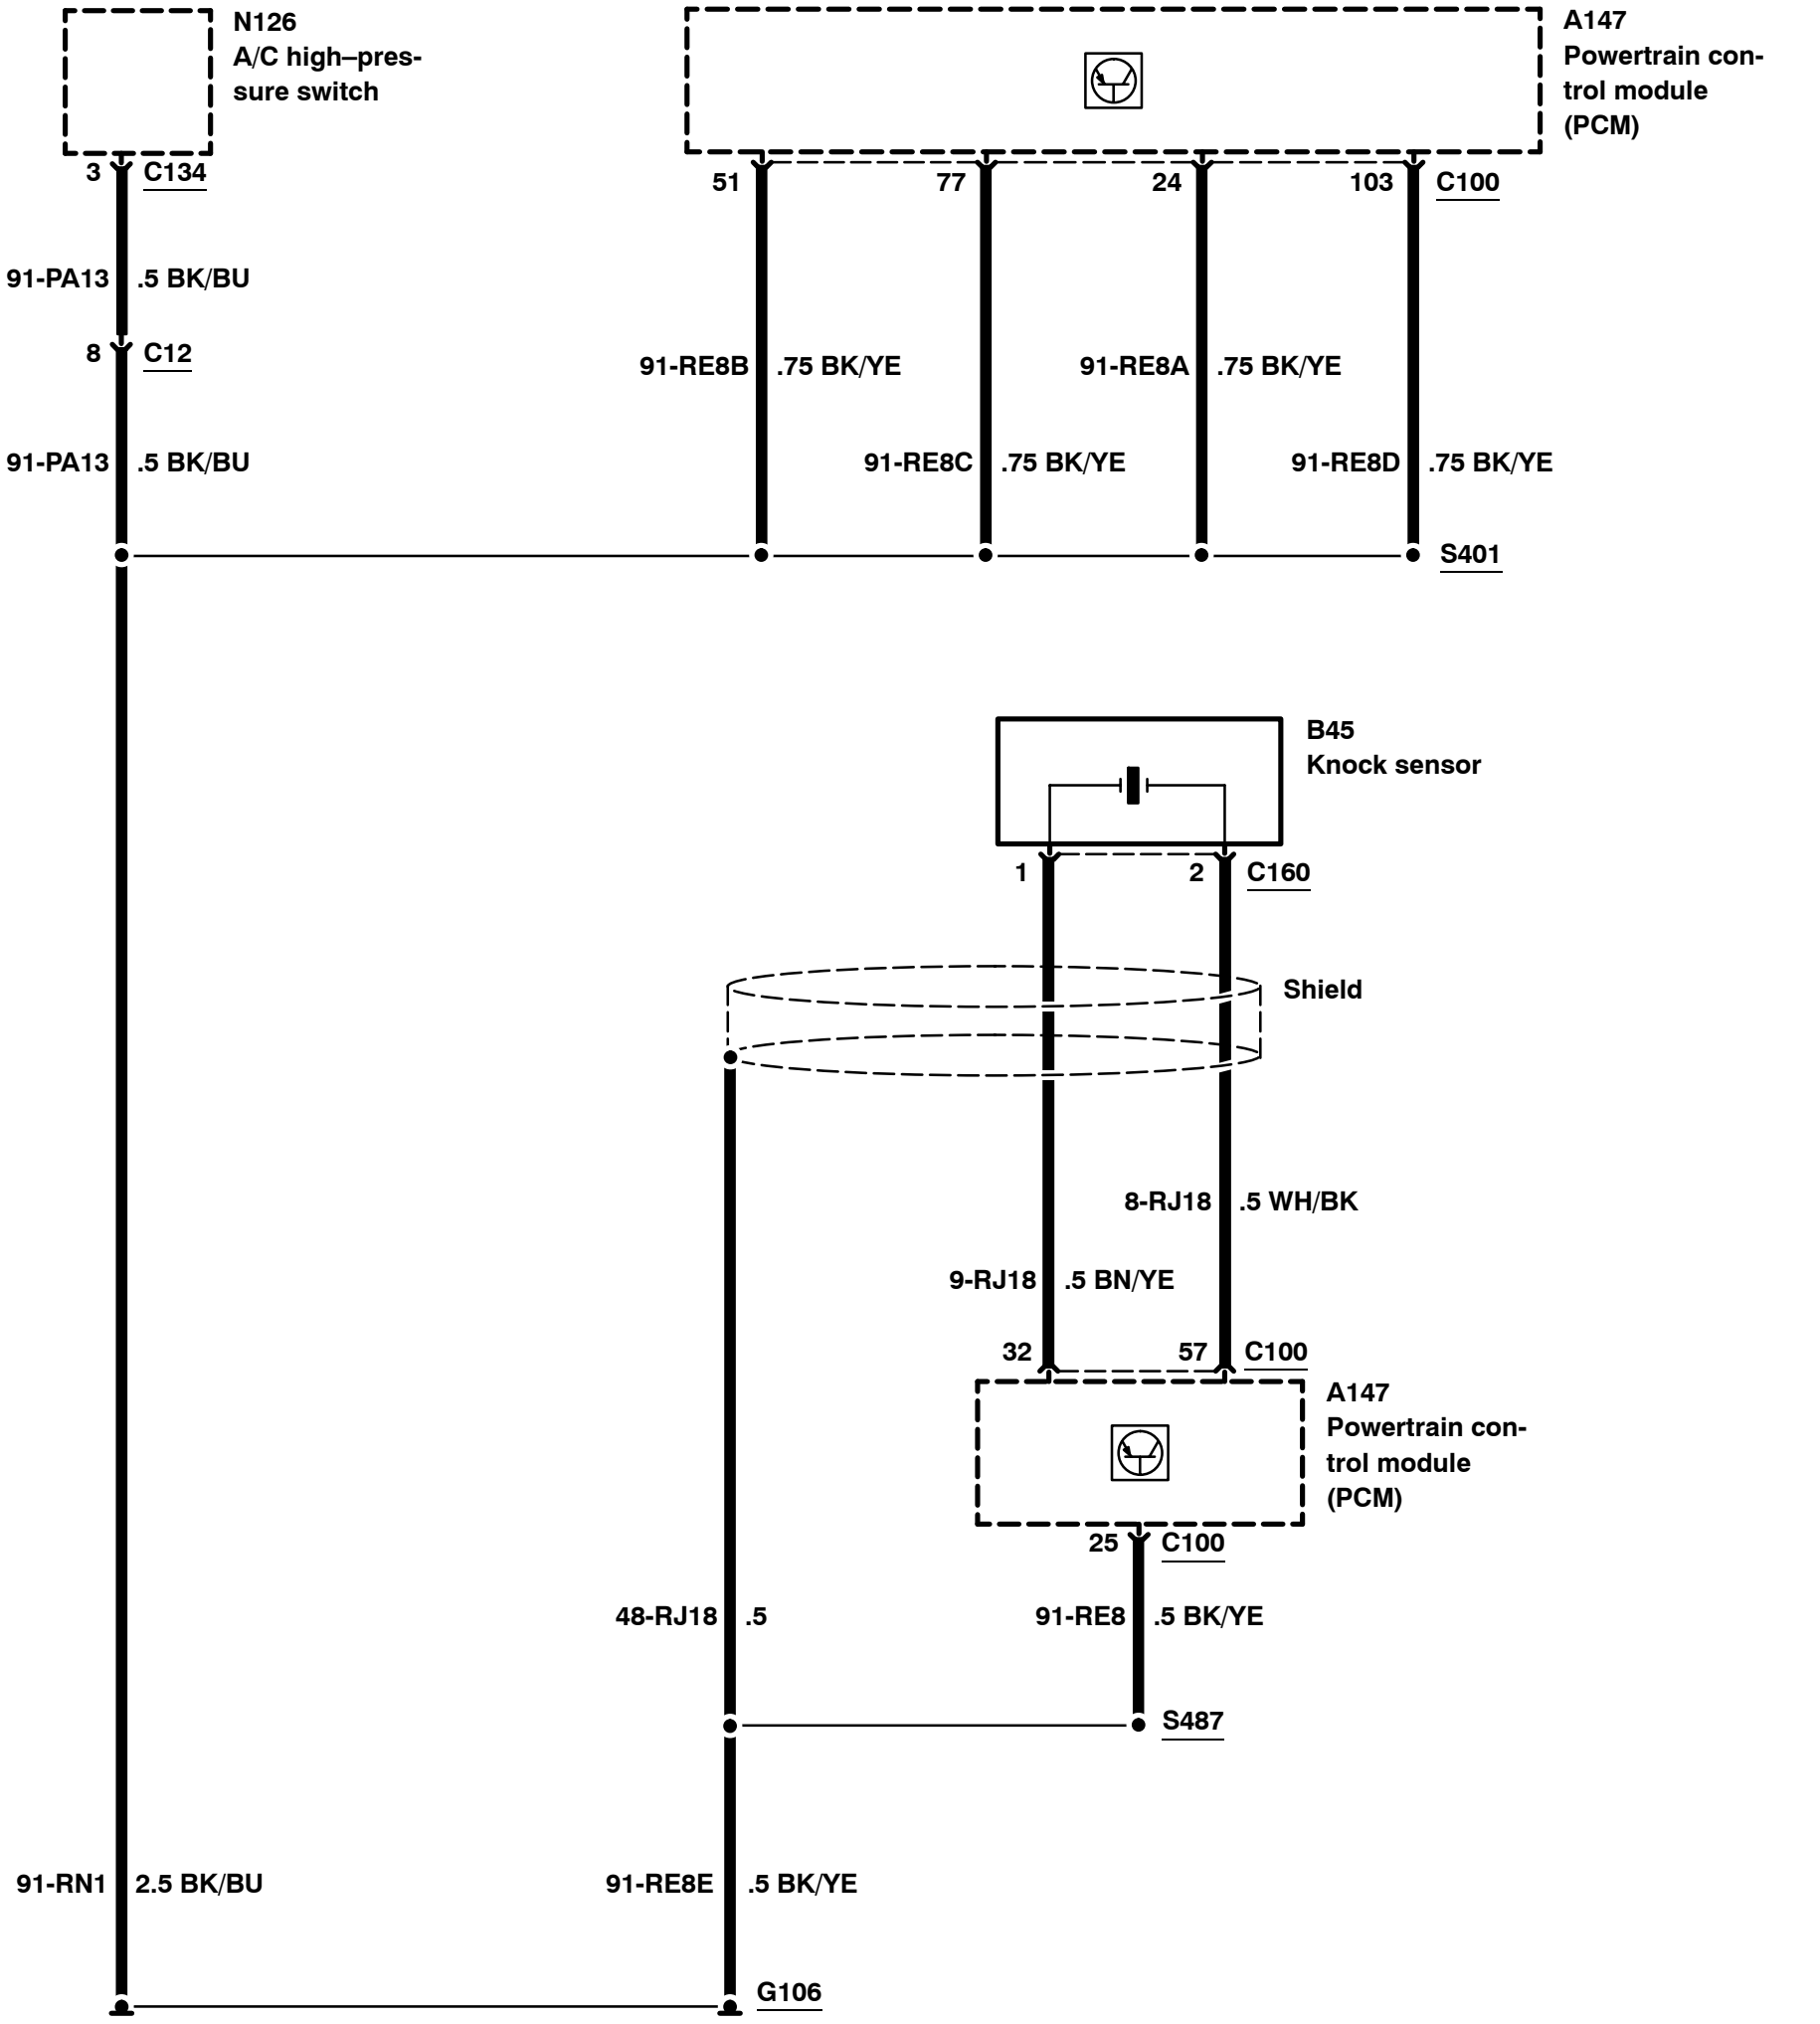


Ground Distribution – G106, 2.5L Duratec–VE (VE6)

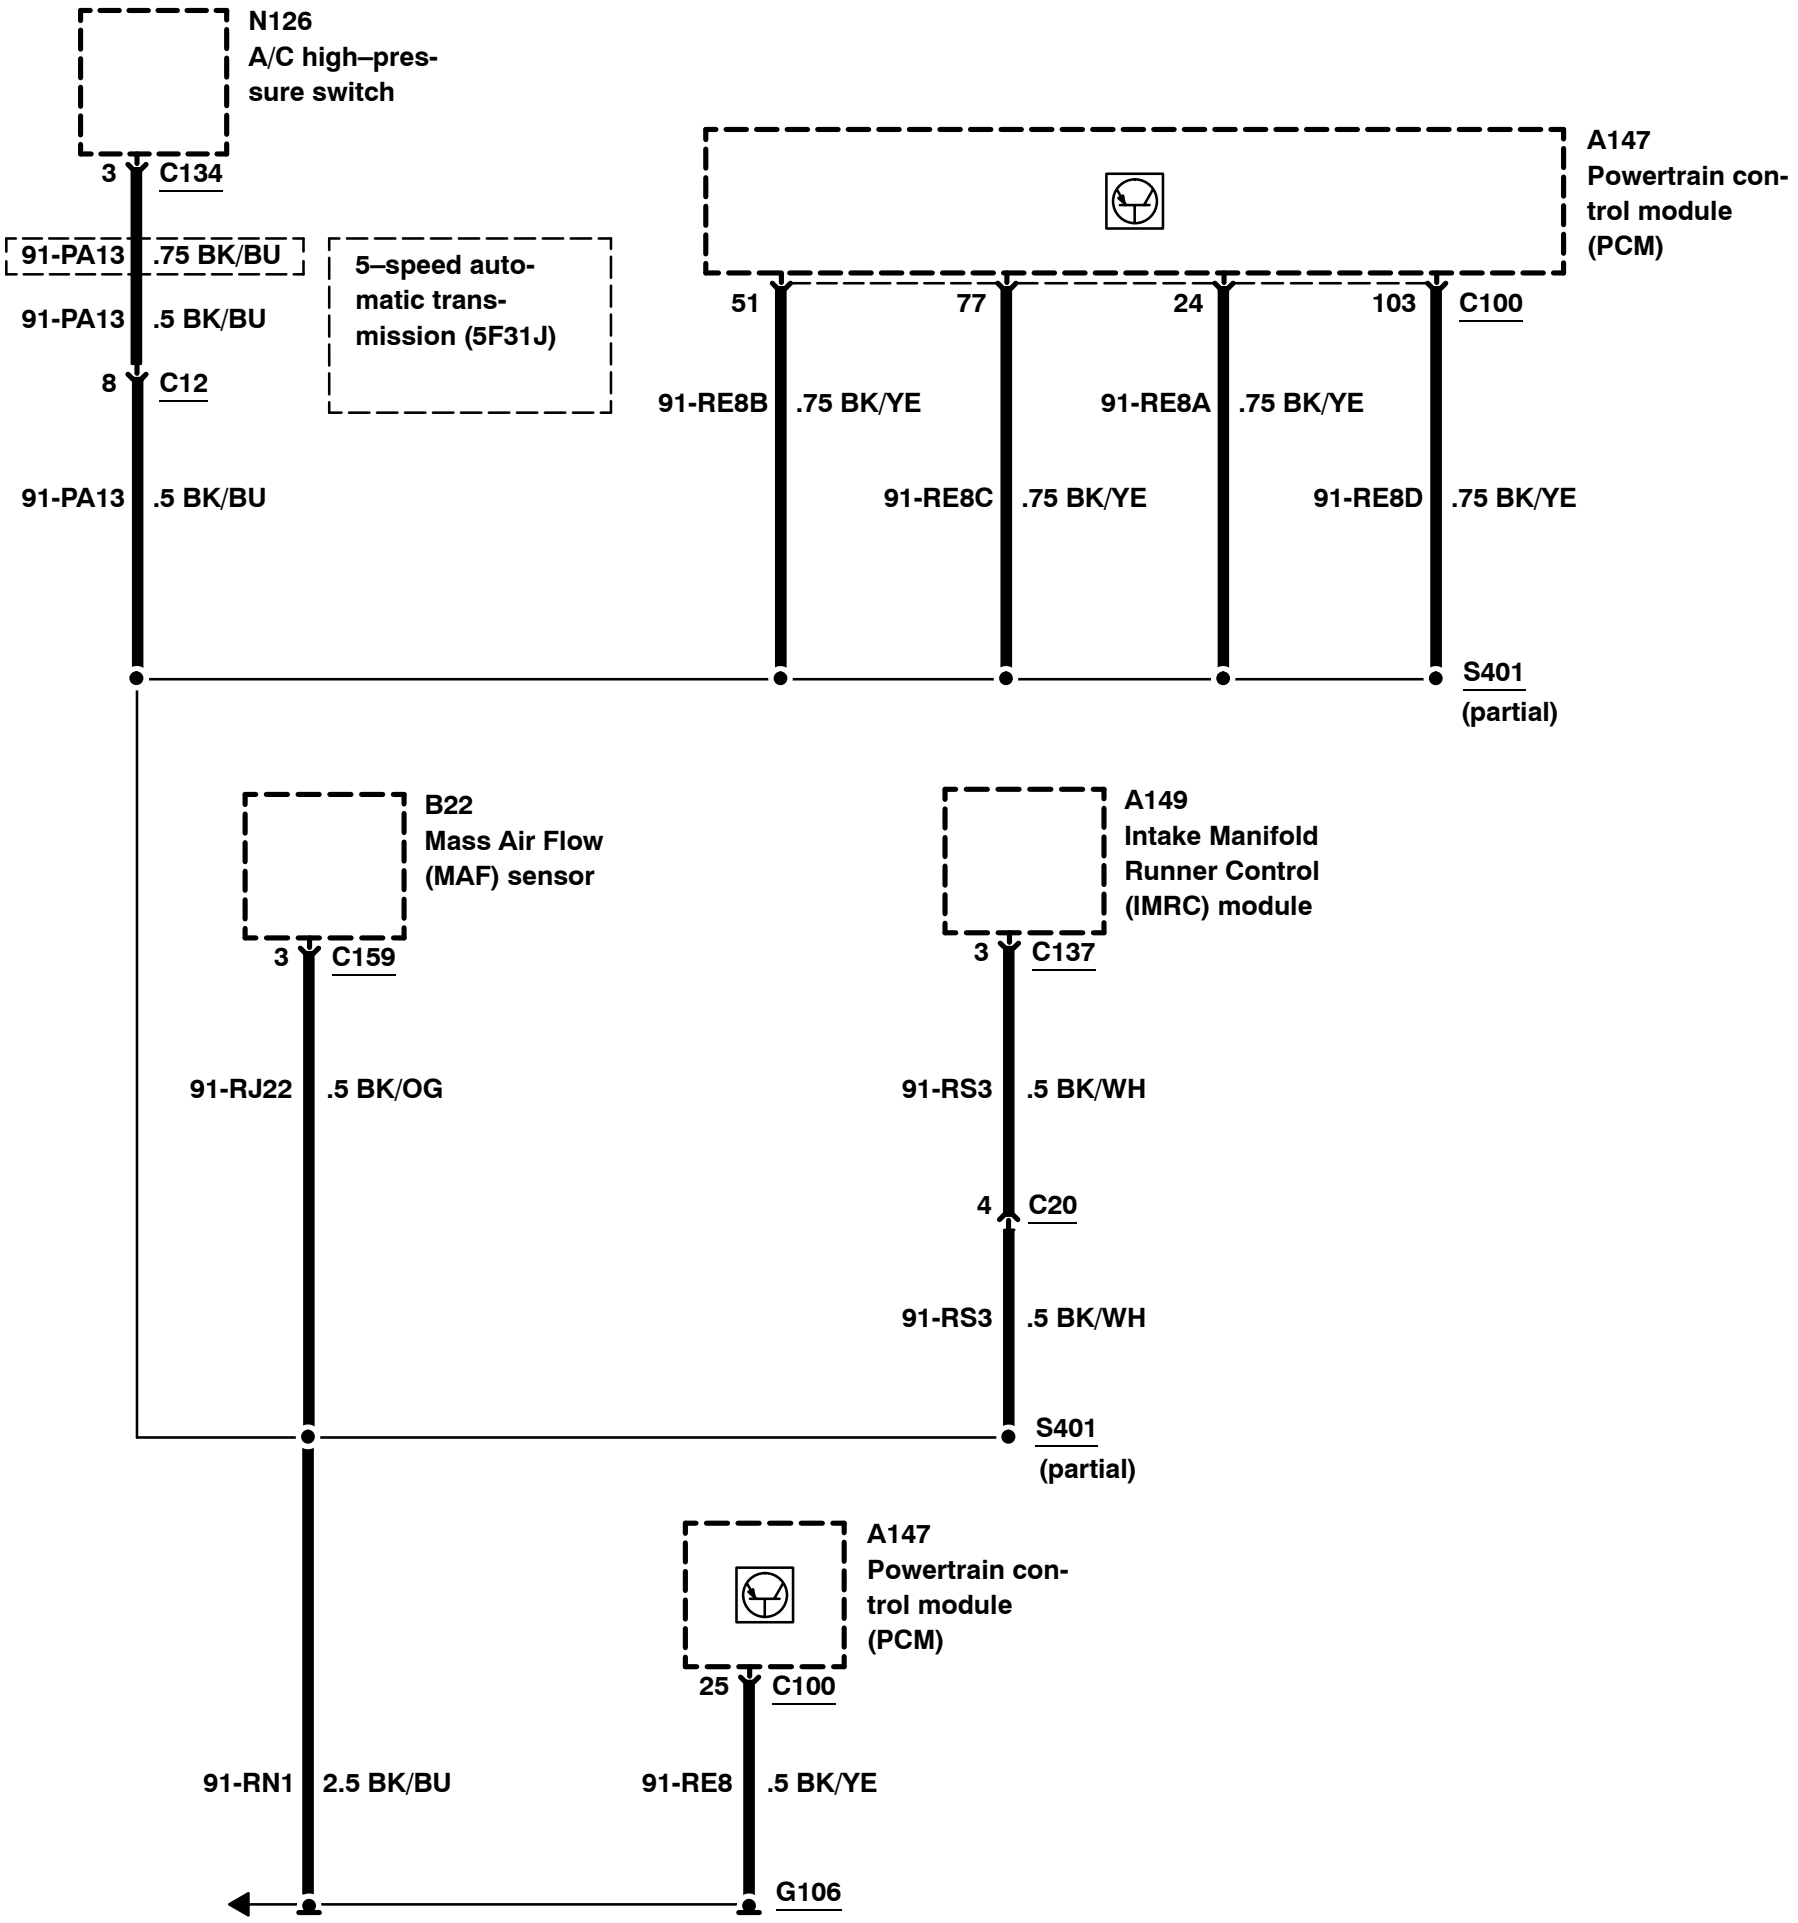


Ground Distribution – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

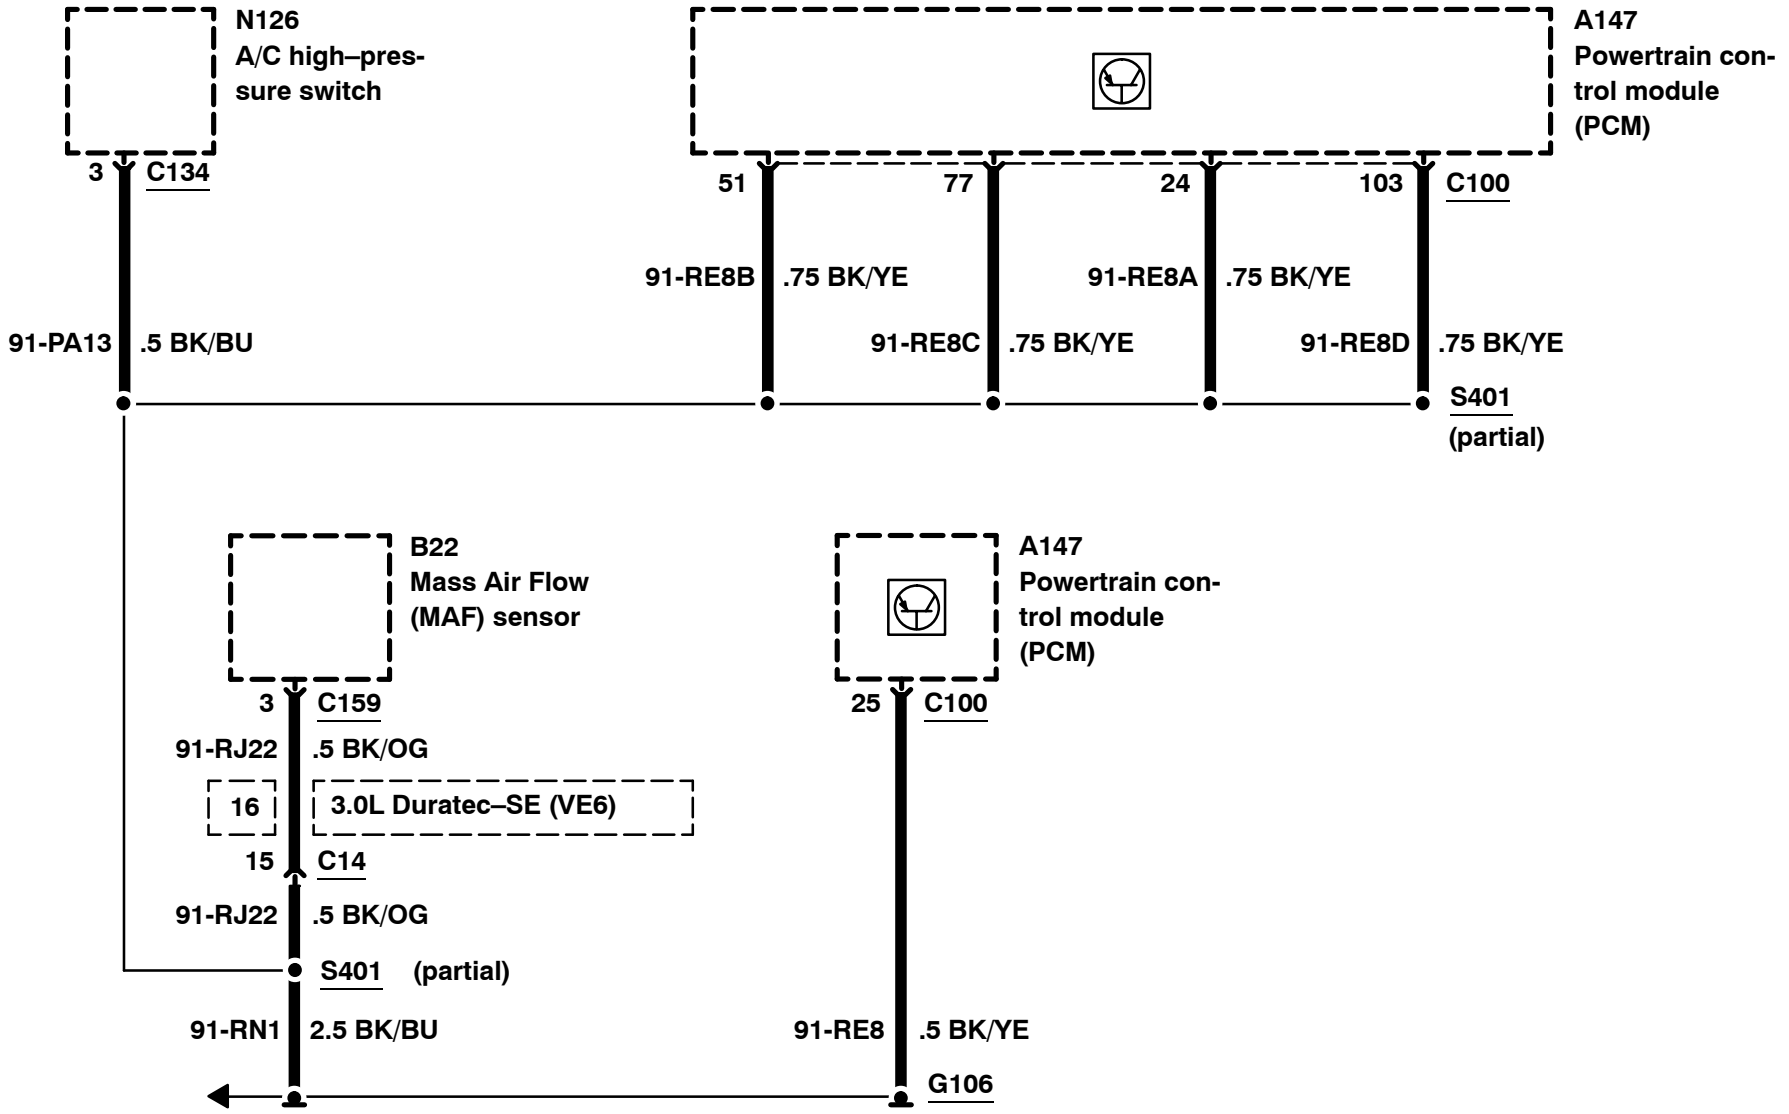


Ground Distribution – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

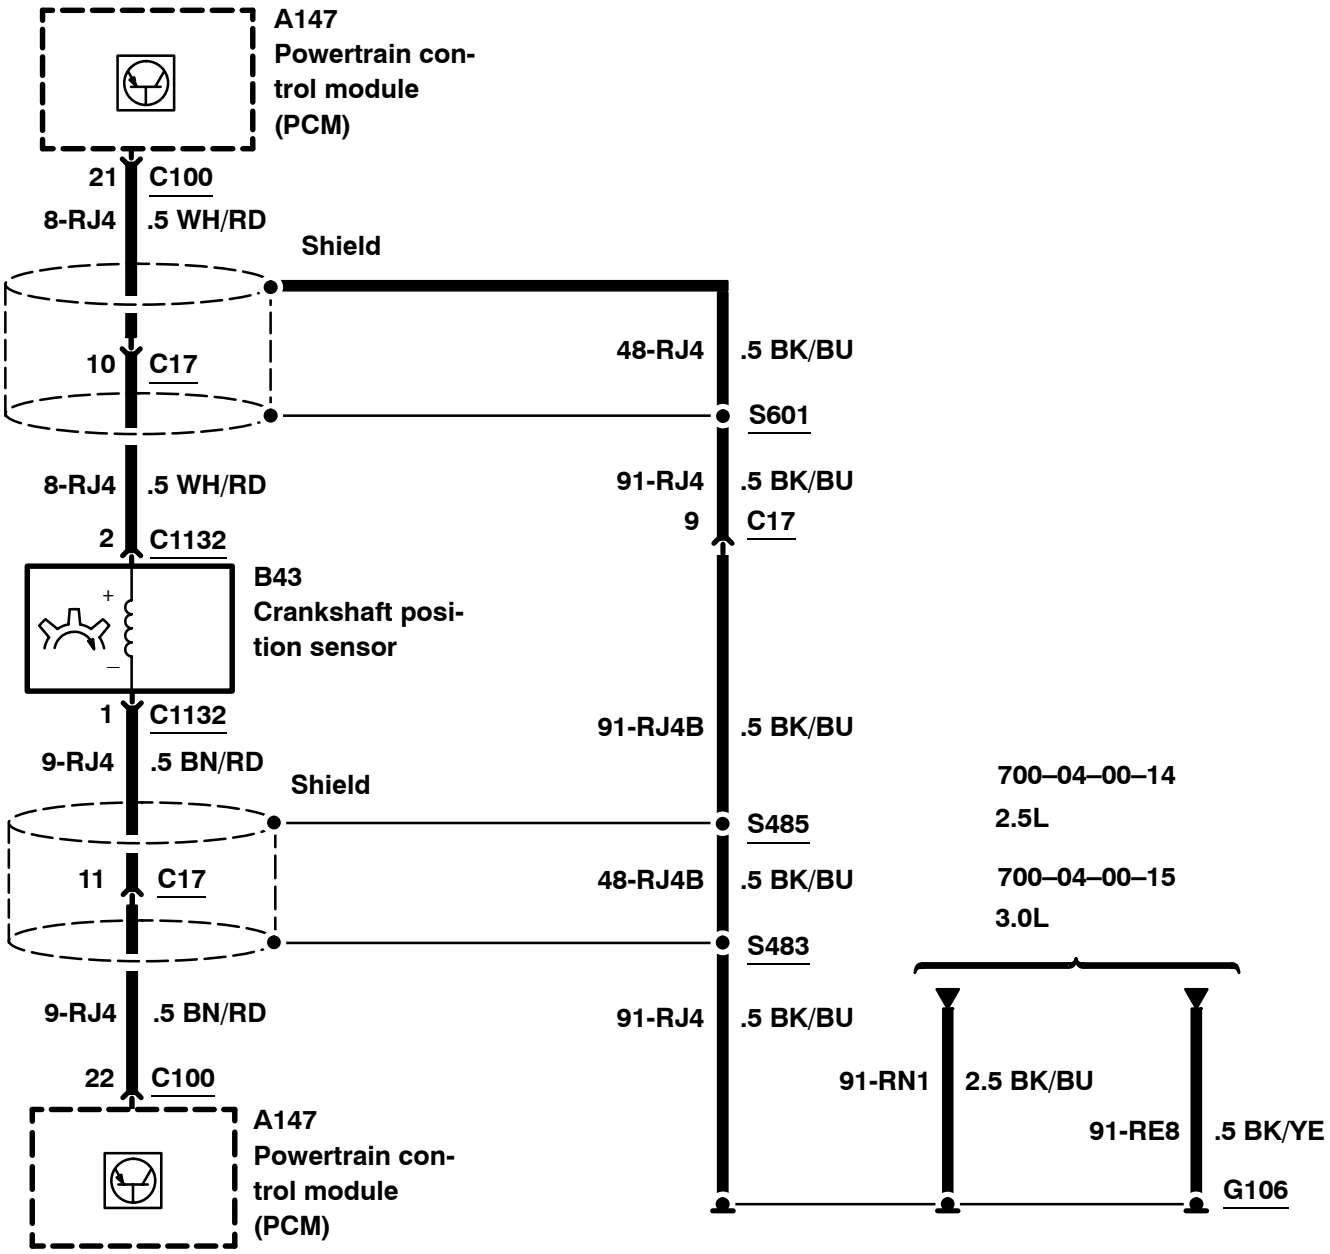


Ground Distribution – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

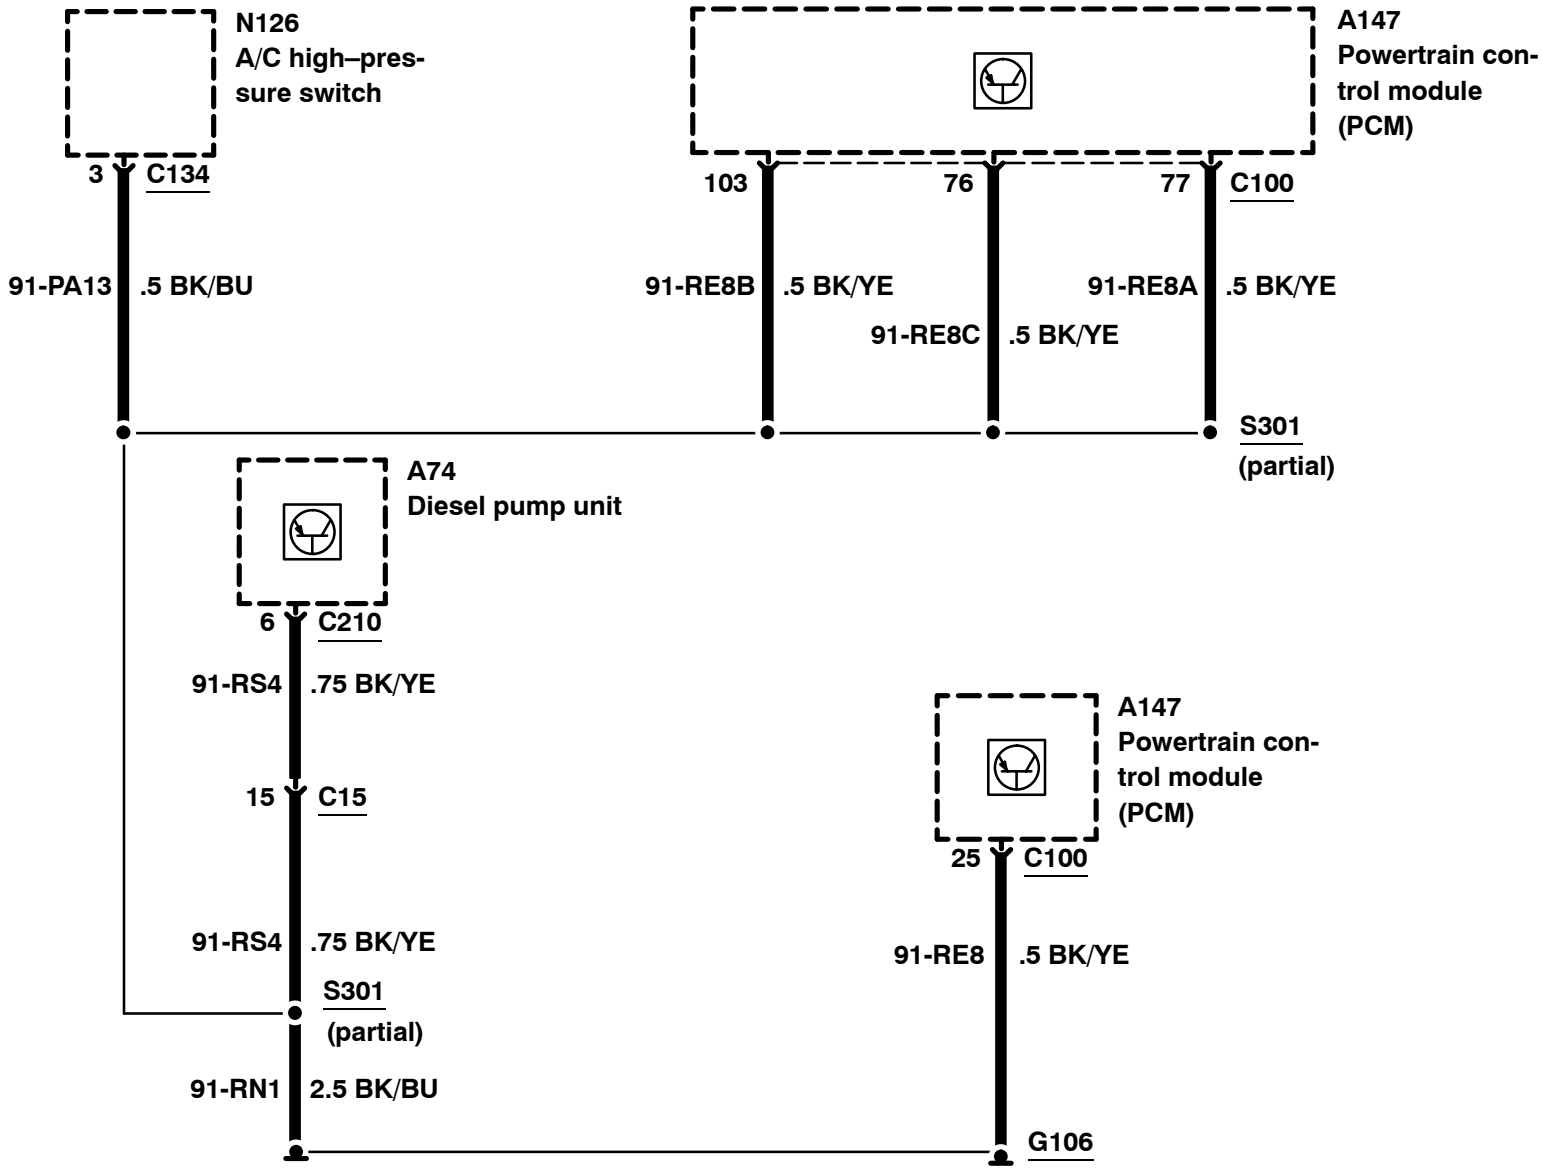


Ground Distribution – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

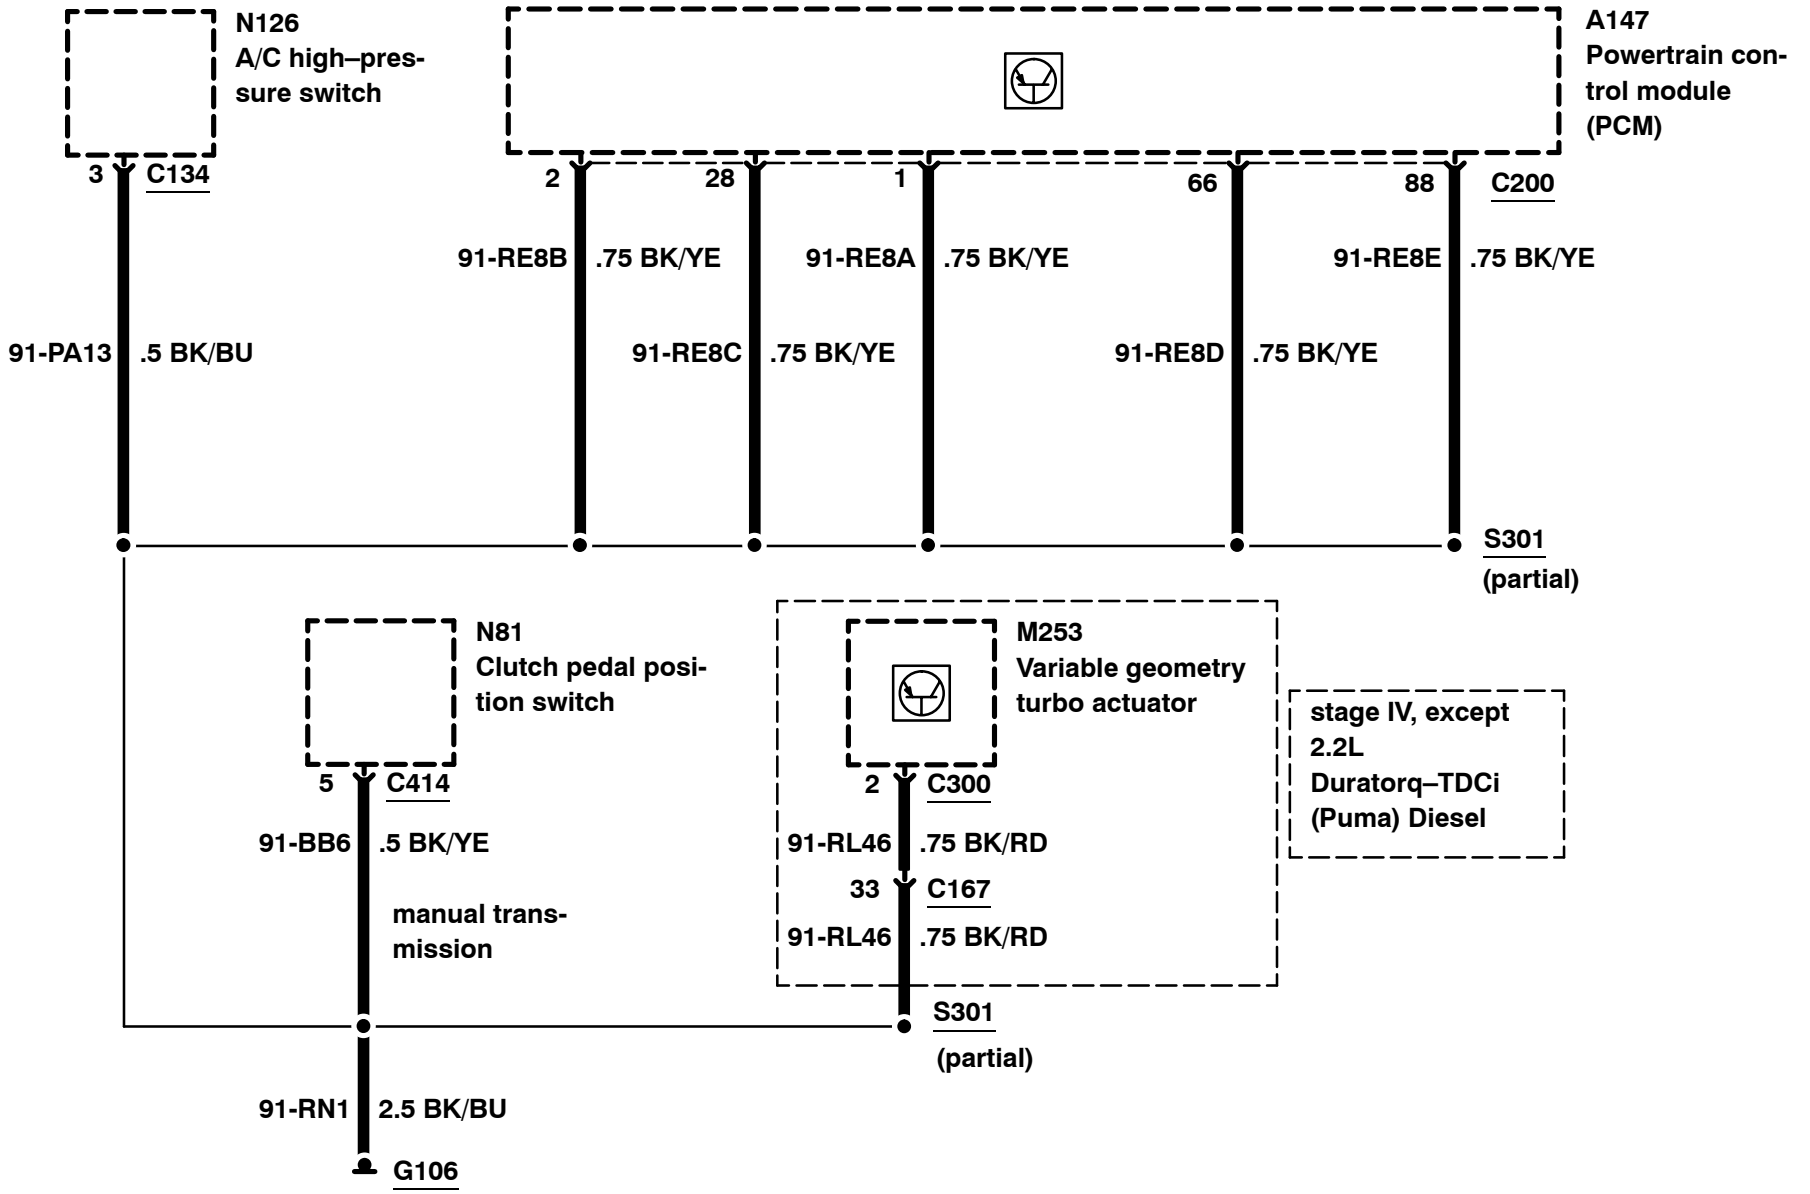


Ground Distribution – G107

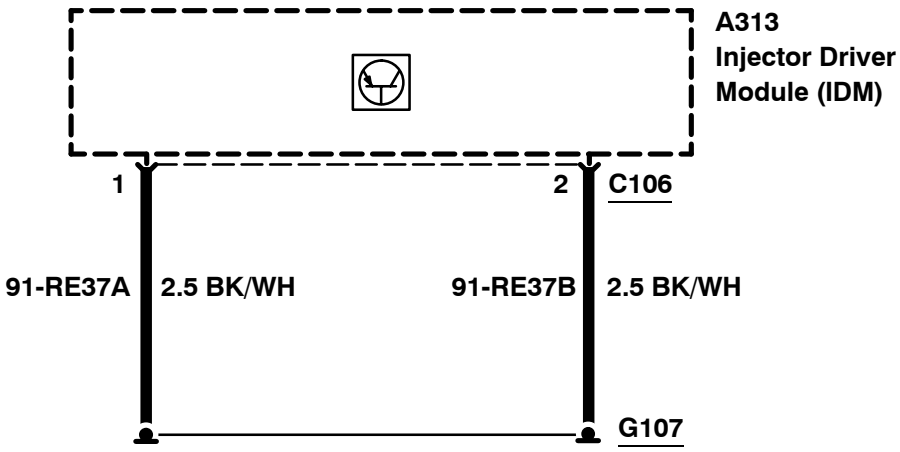


Ground Distribution – G109

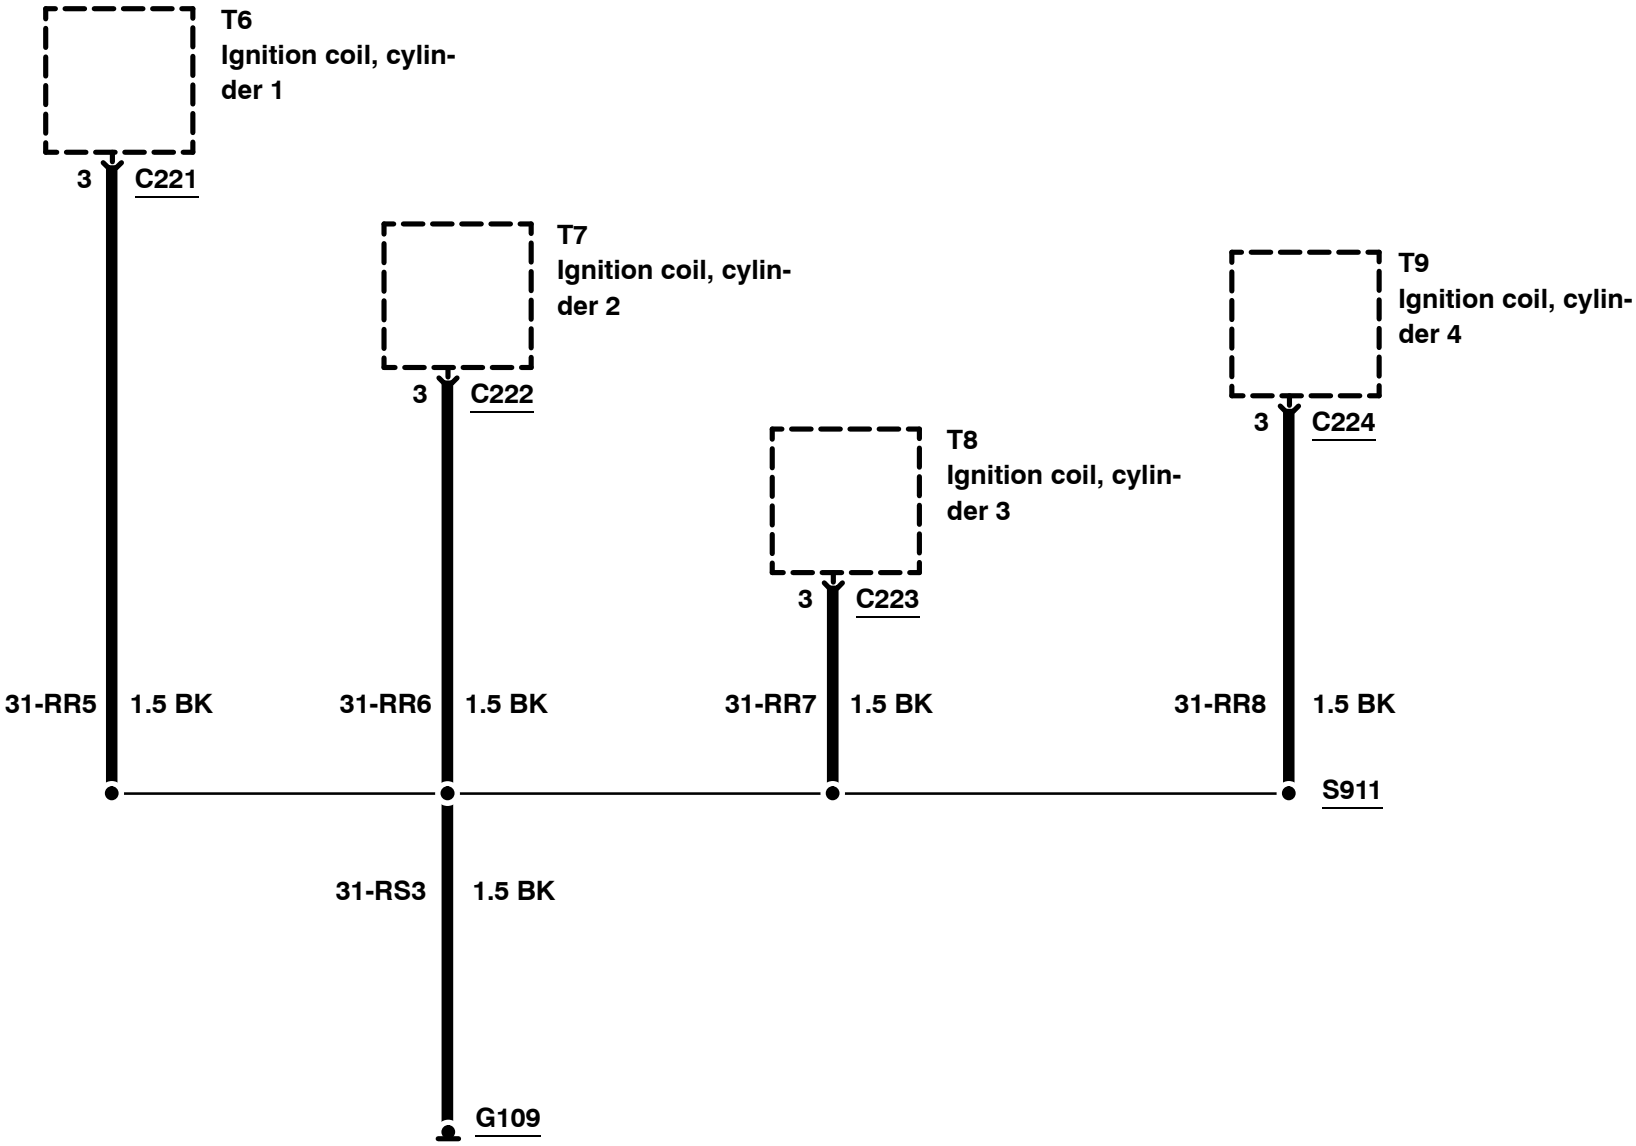


Ground Distribution – G200

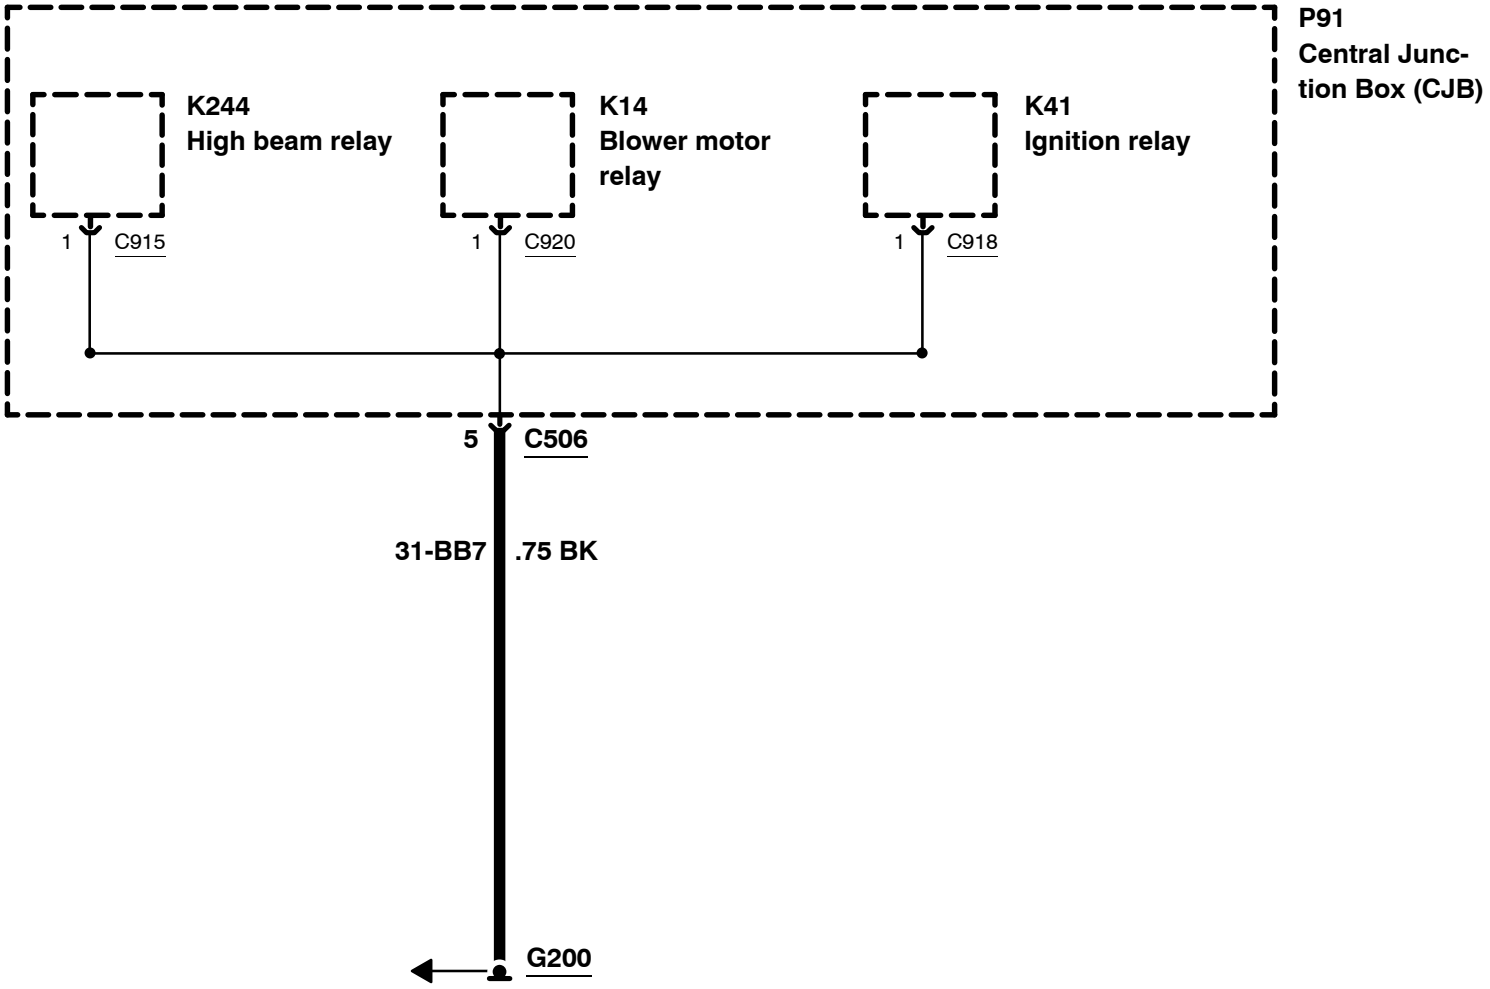


Ground Distribution – G200

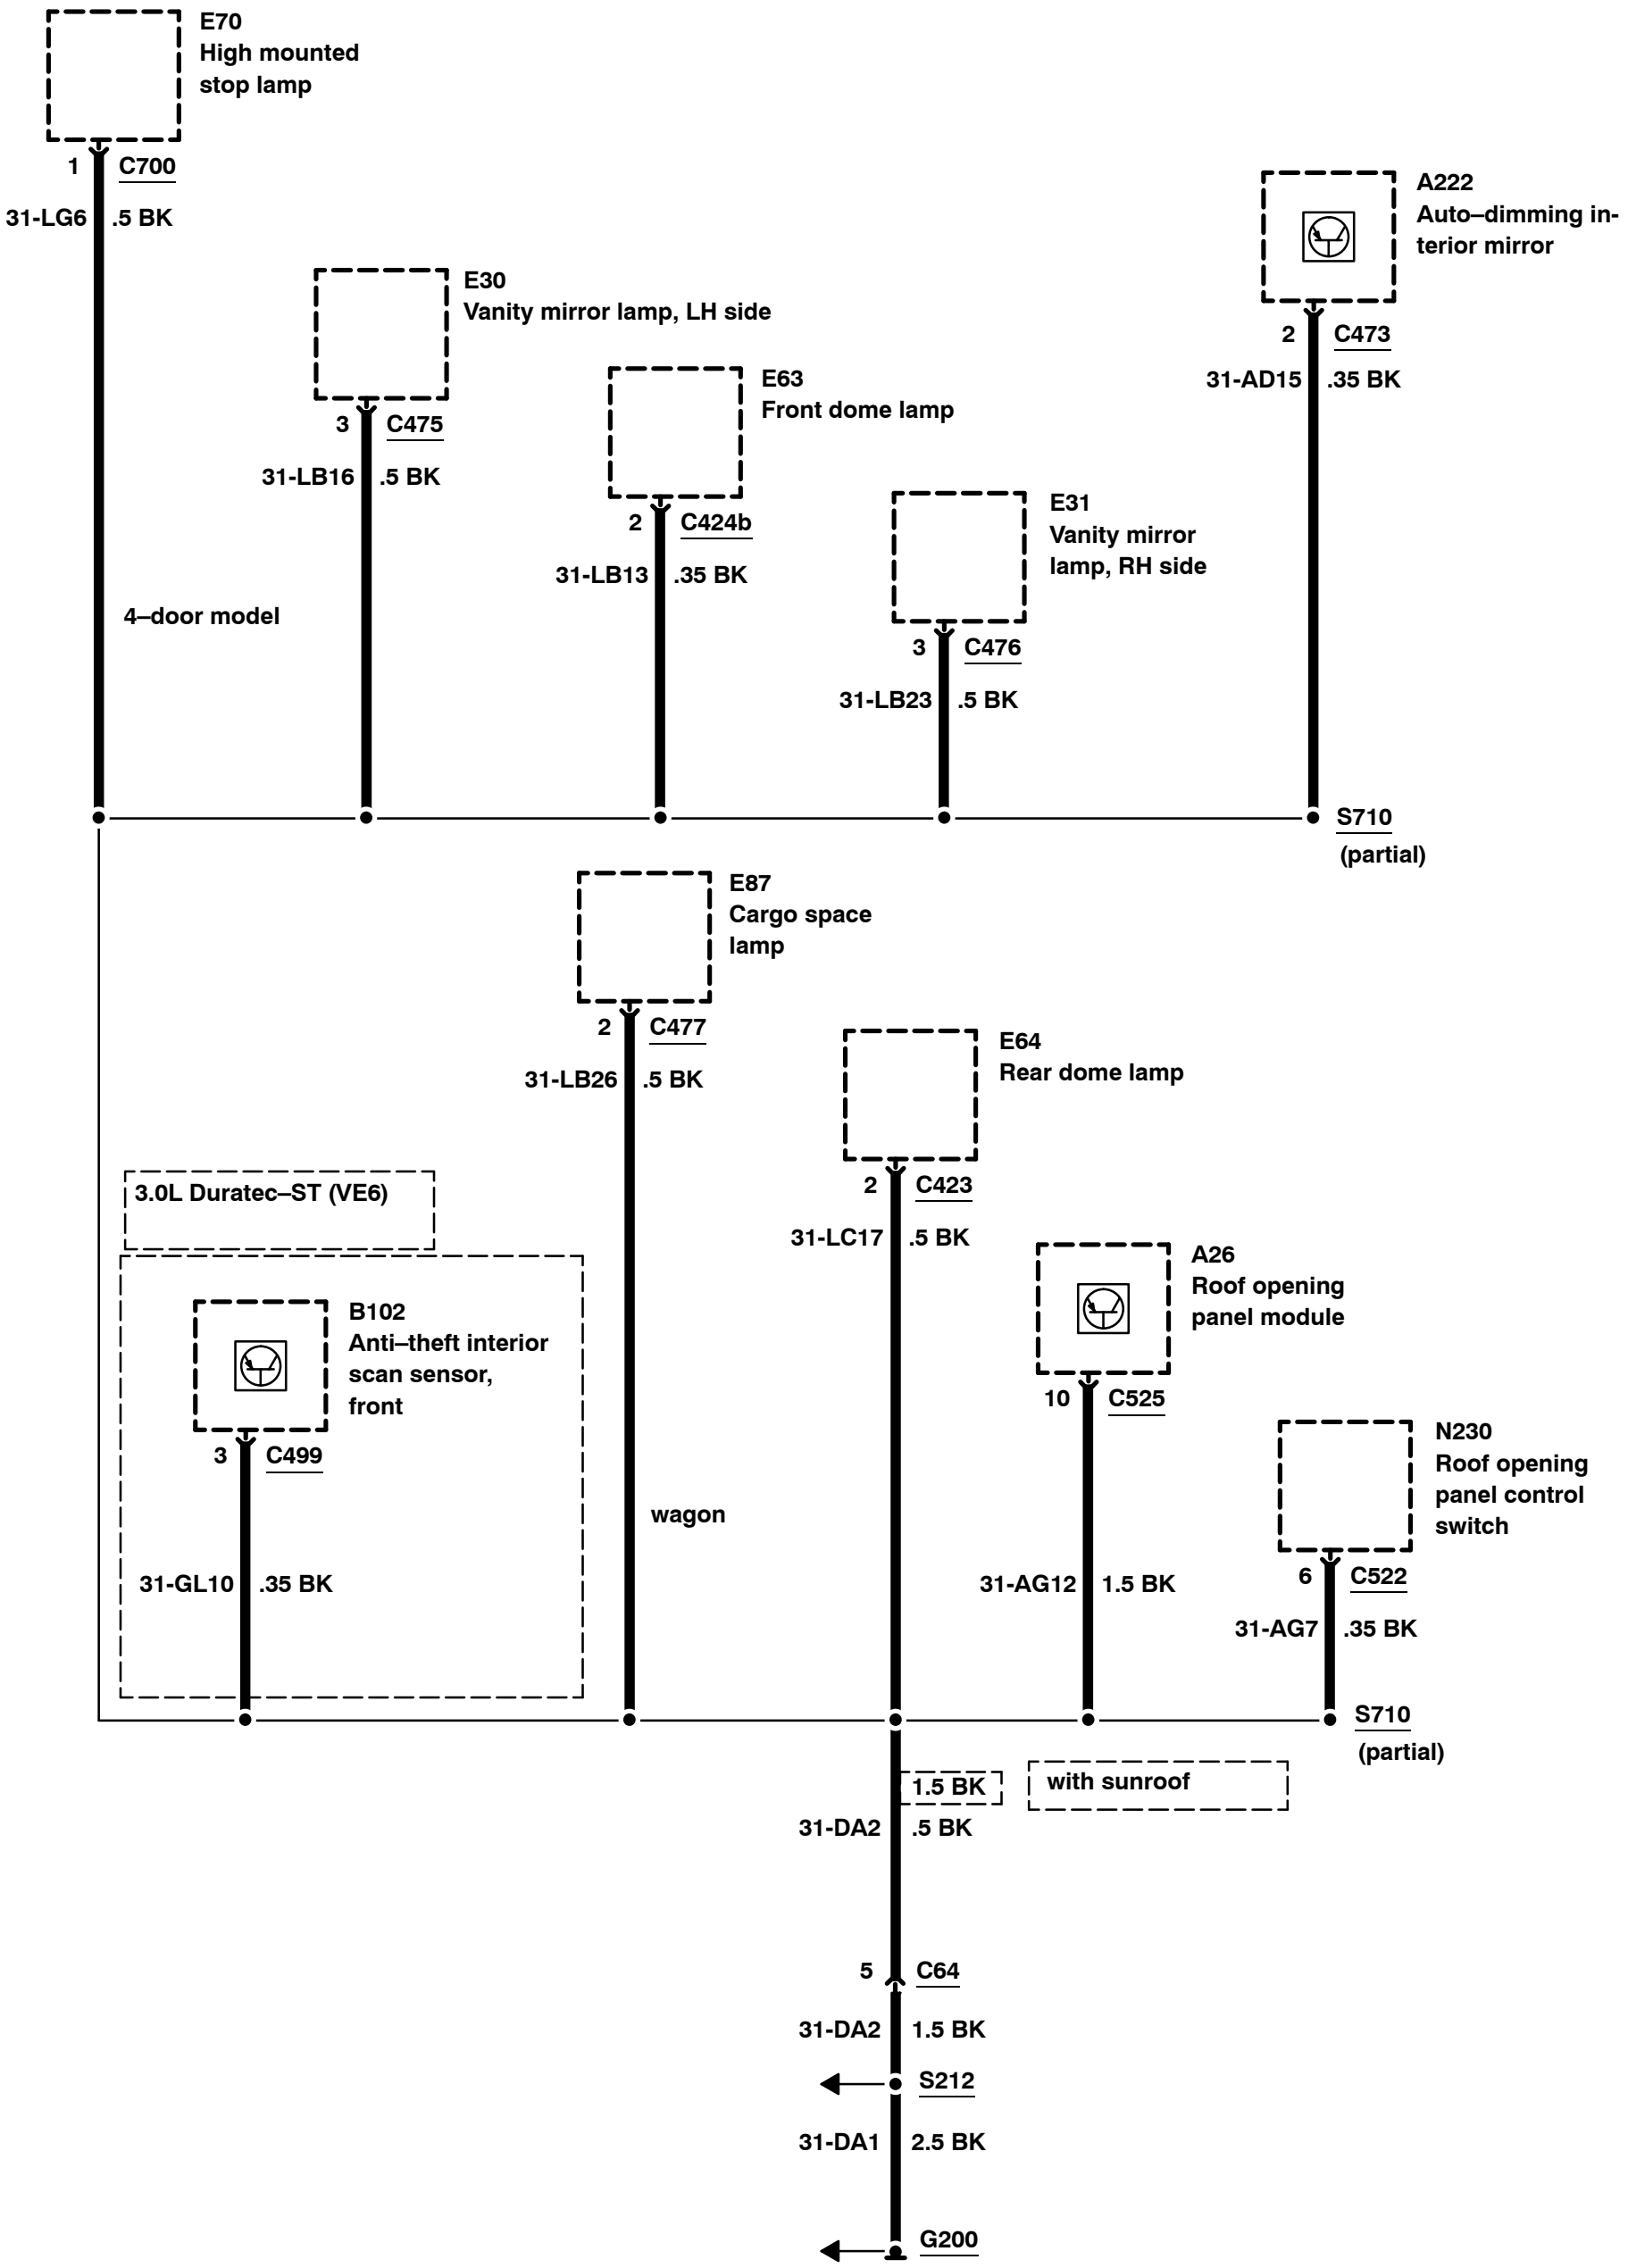


Ground Distribution – G200, LHD

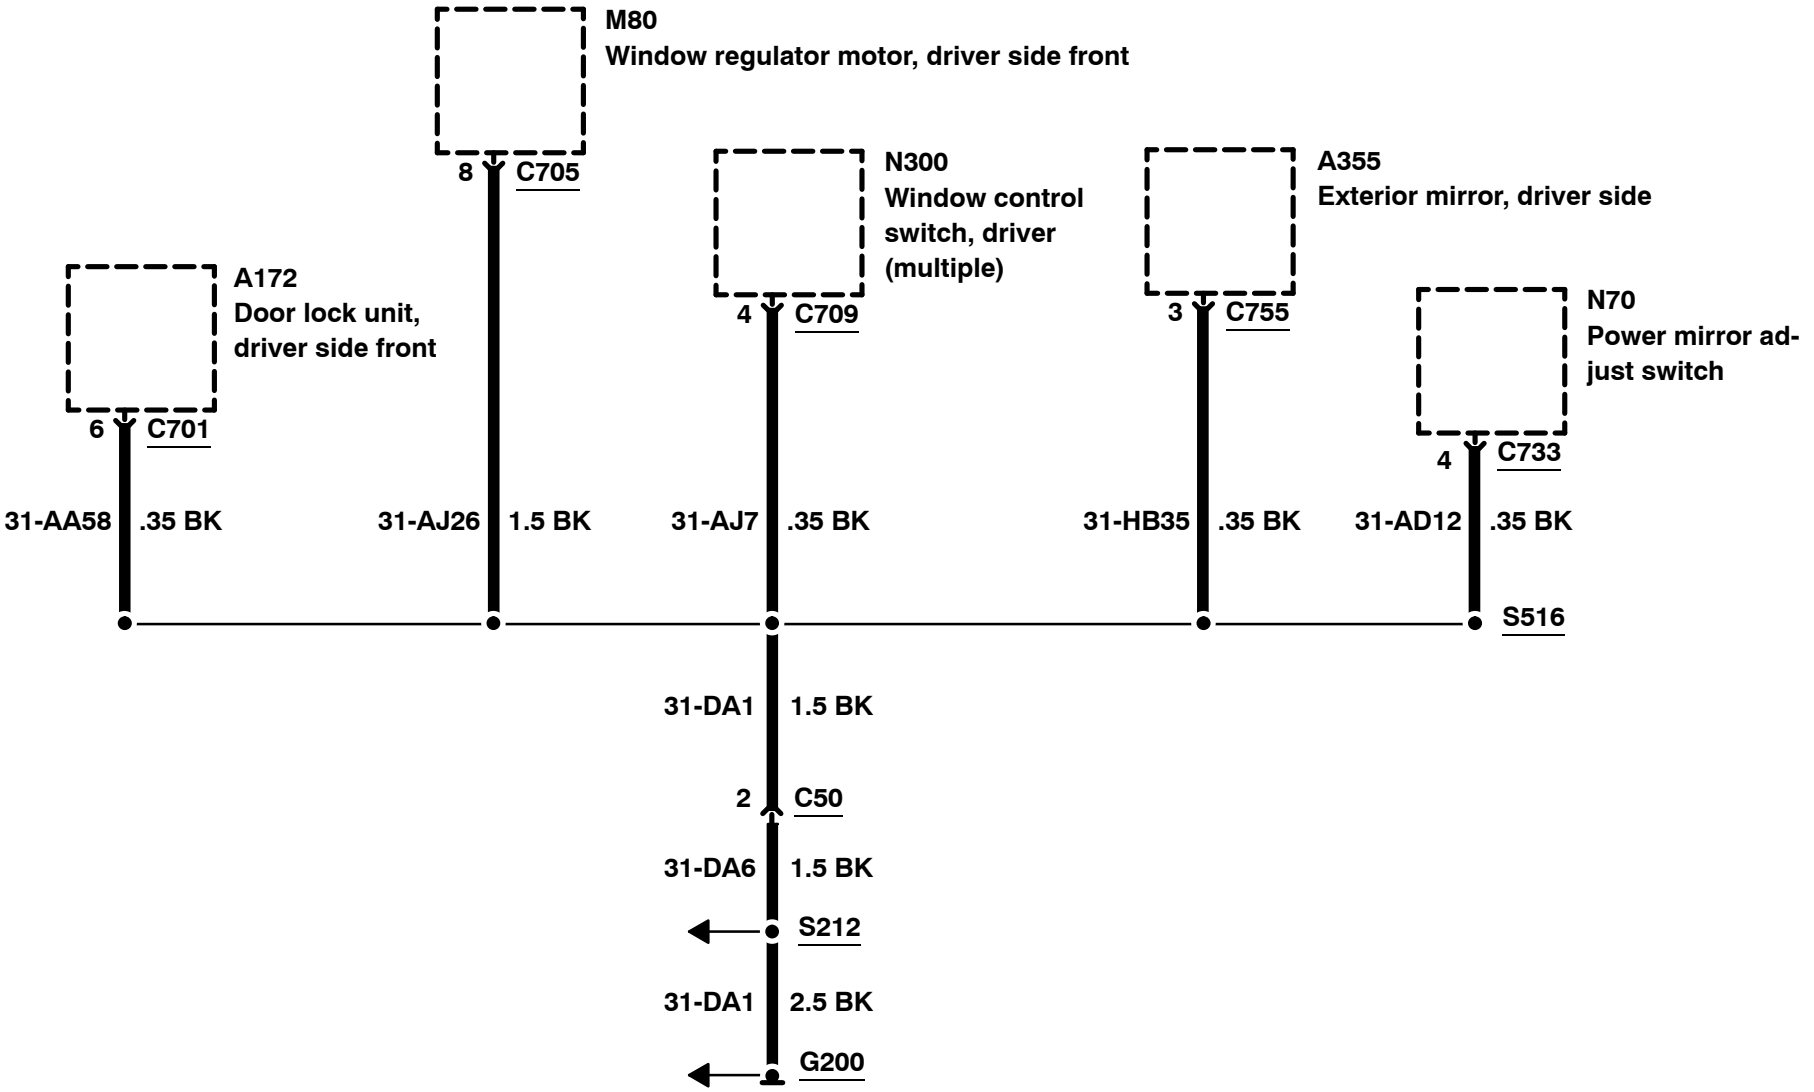


Ground Distribution – G200, RHD

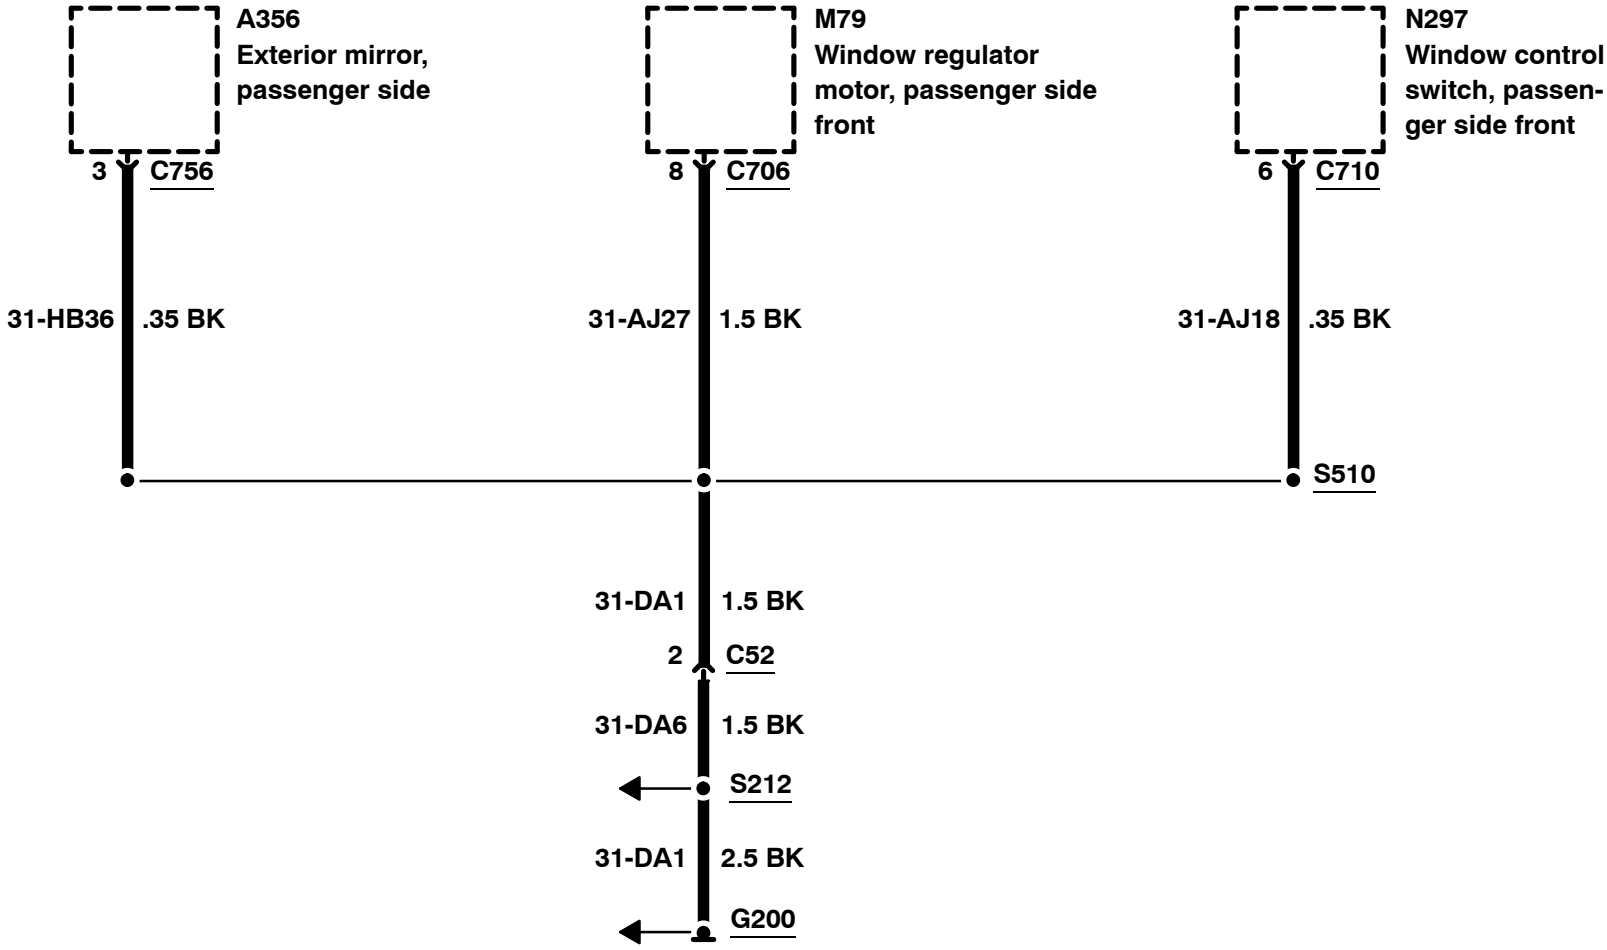


Ground Distribution – G200

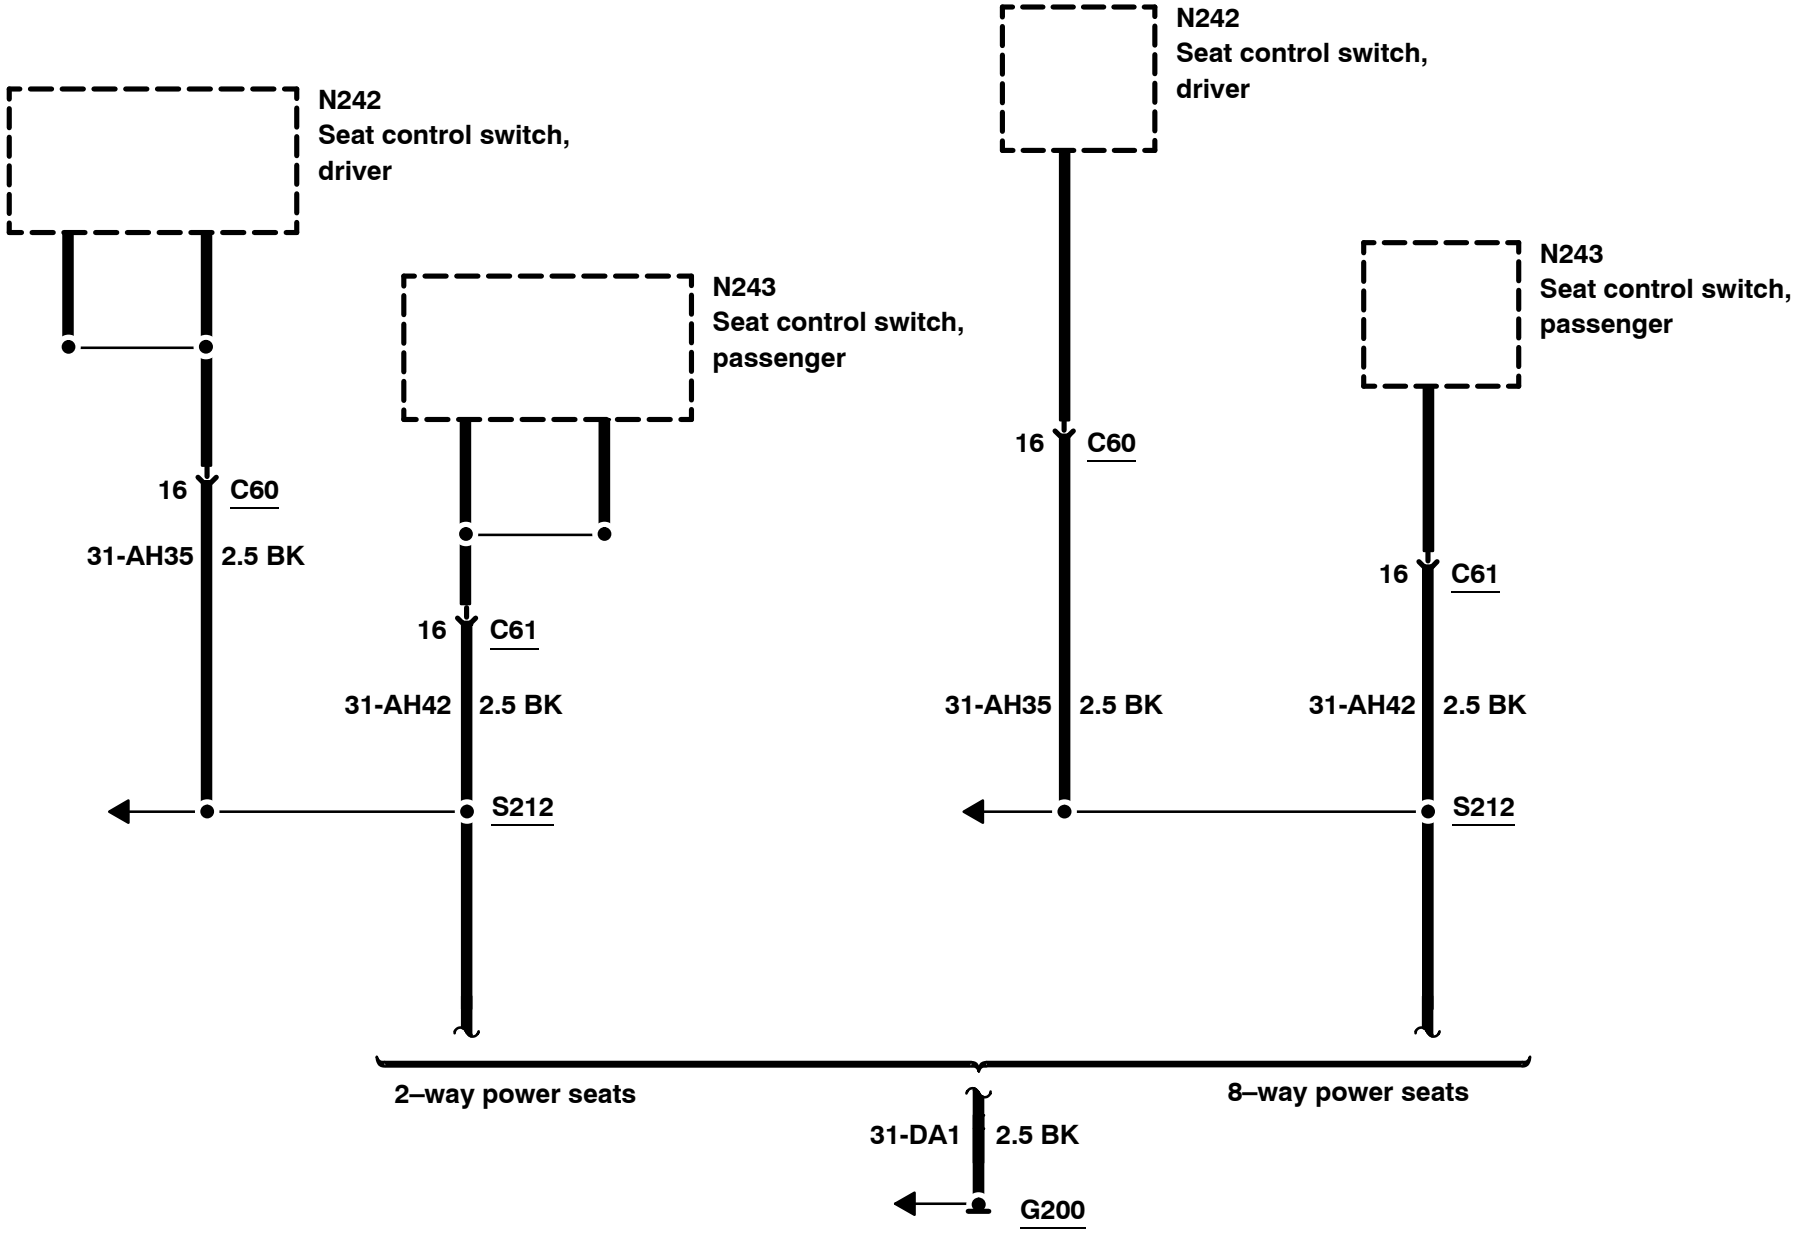


Ground Distribution – G200

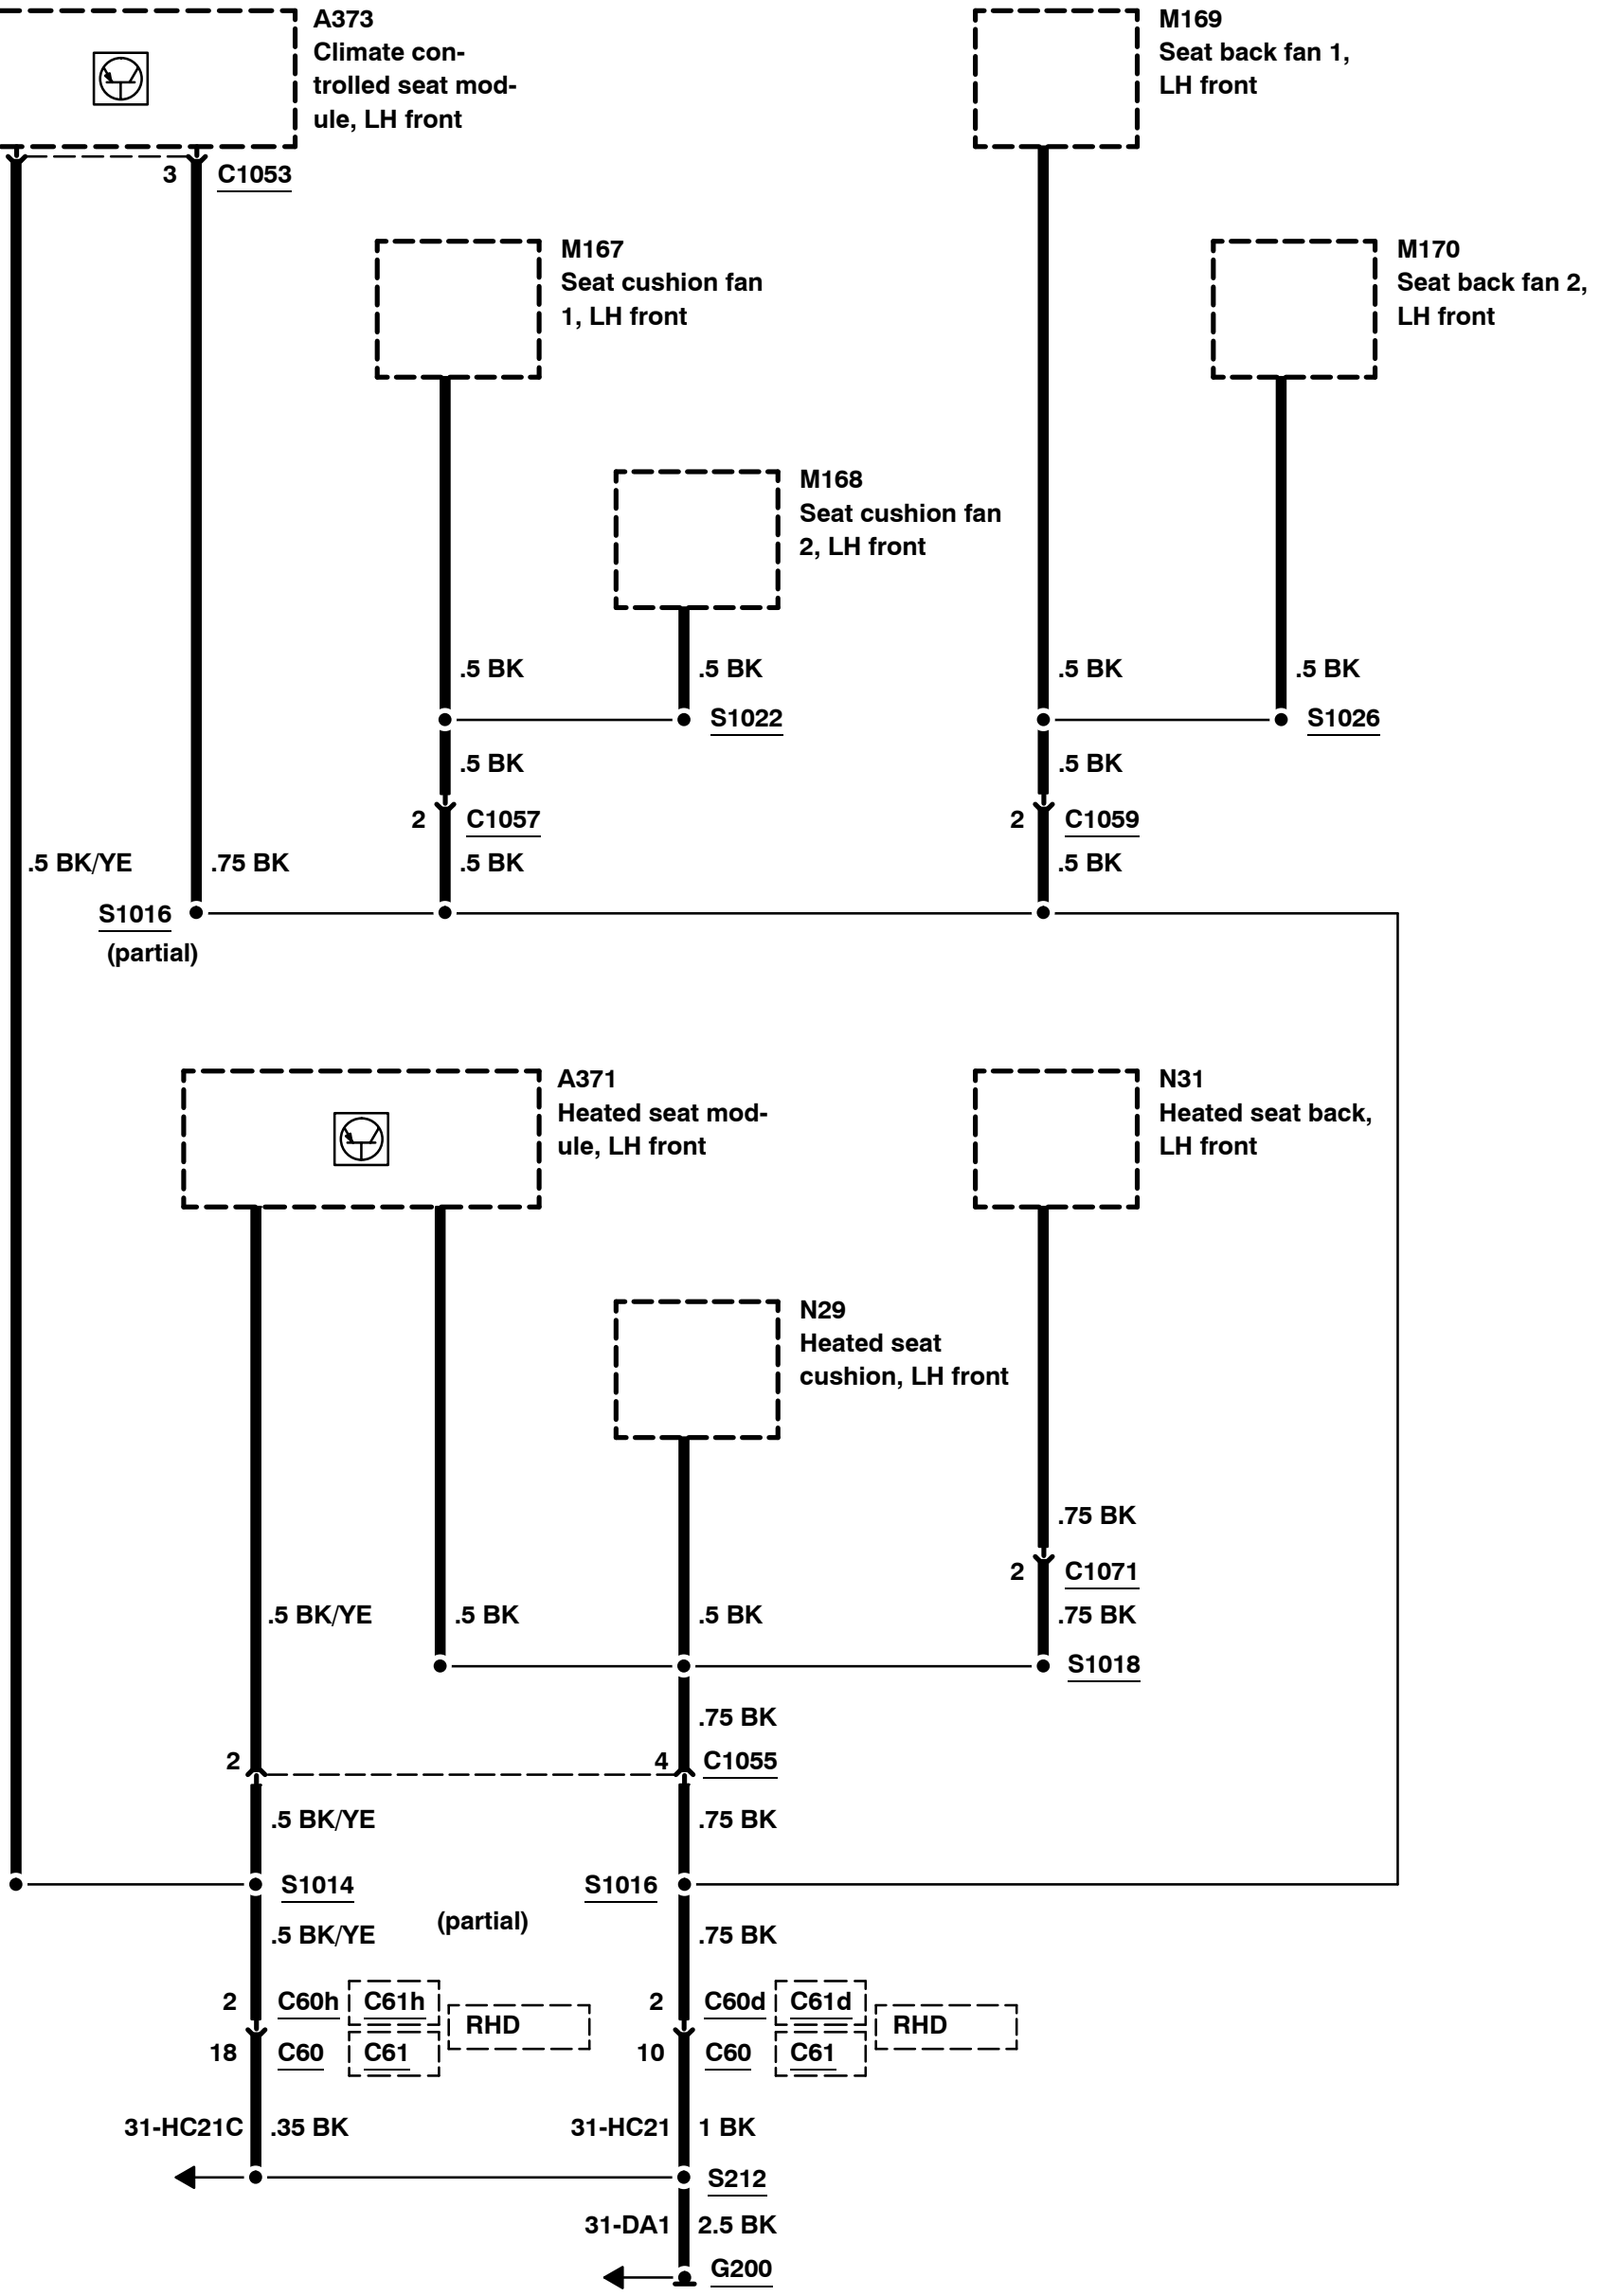


Ground Distribution – G200

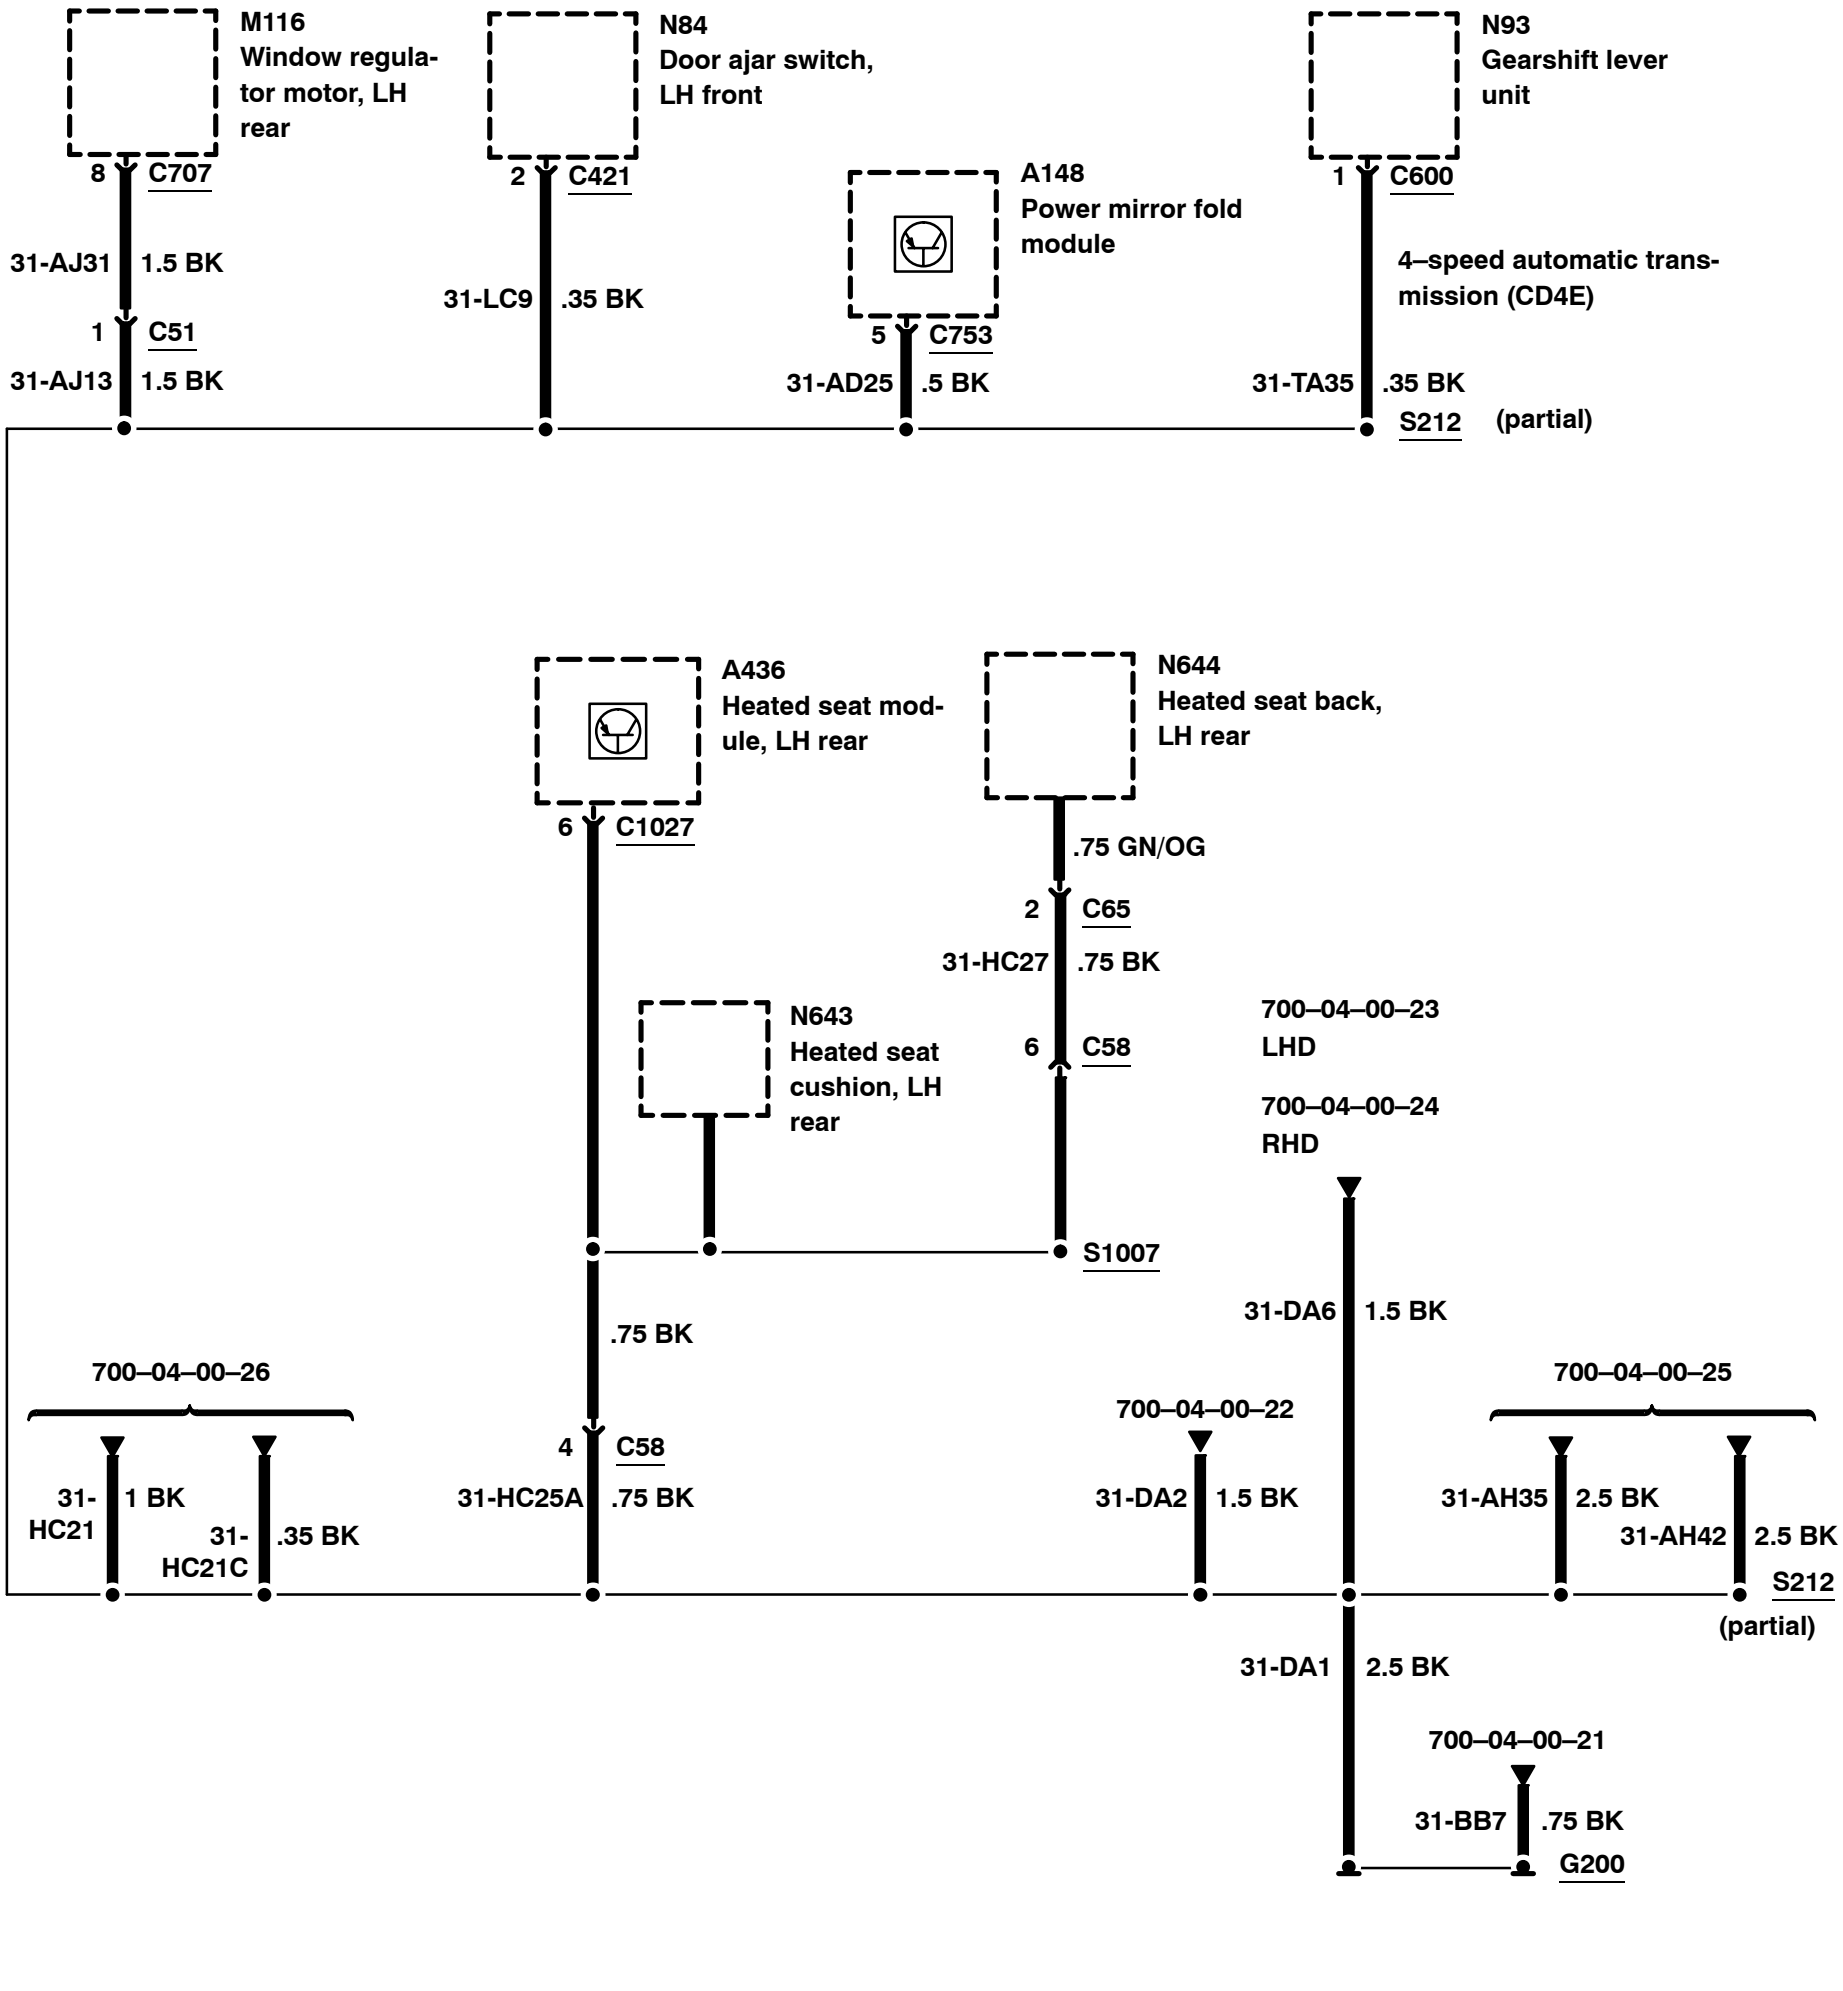


Ground Distribution – G201, except DVD navigation system with touch screen, before 04/2004

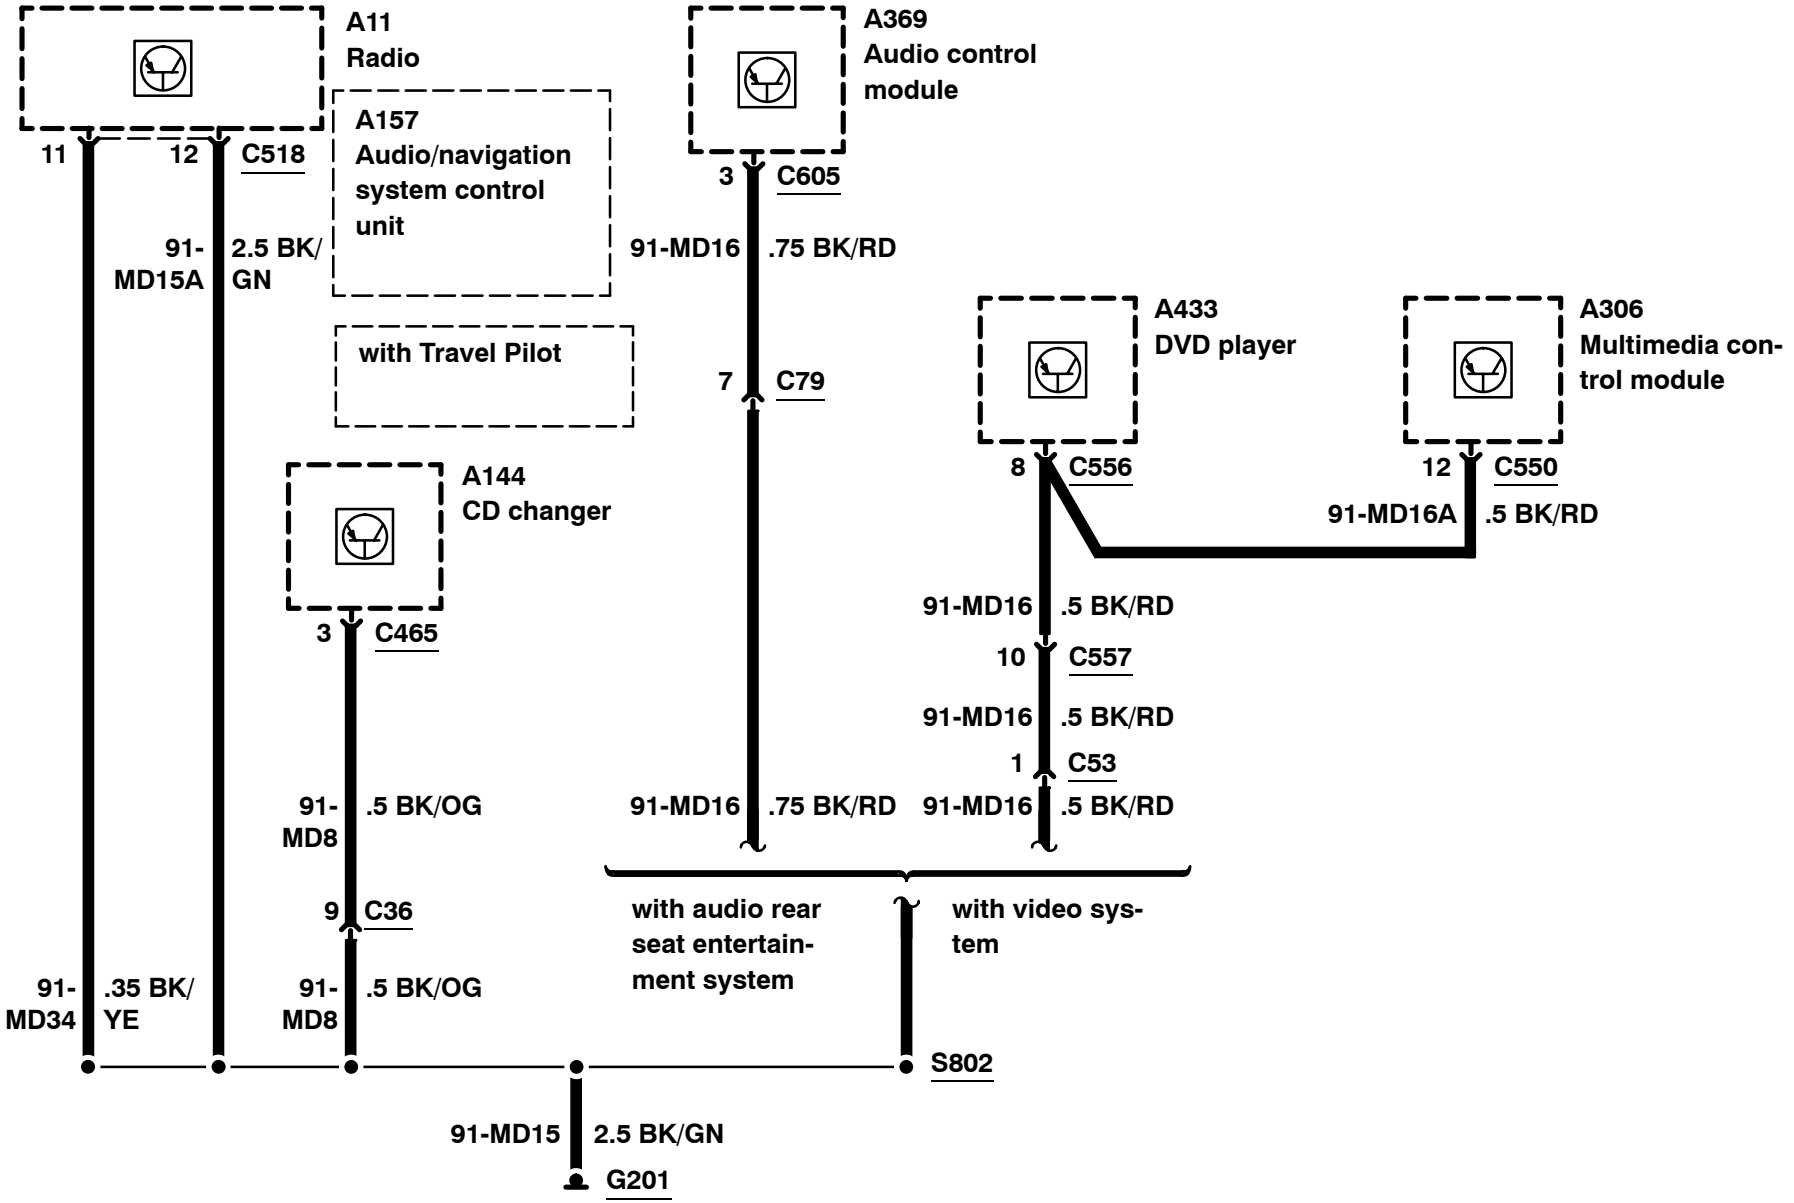


Ground Distribution – G201, except DVD navigation system with touch screen, as of 04/2004

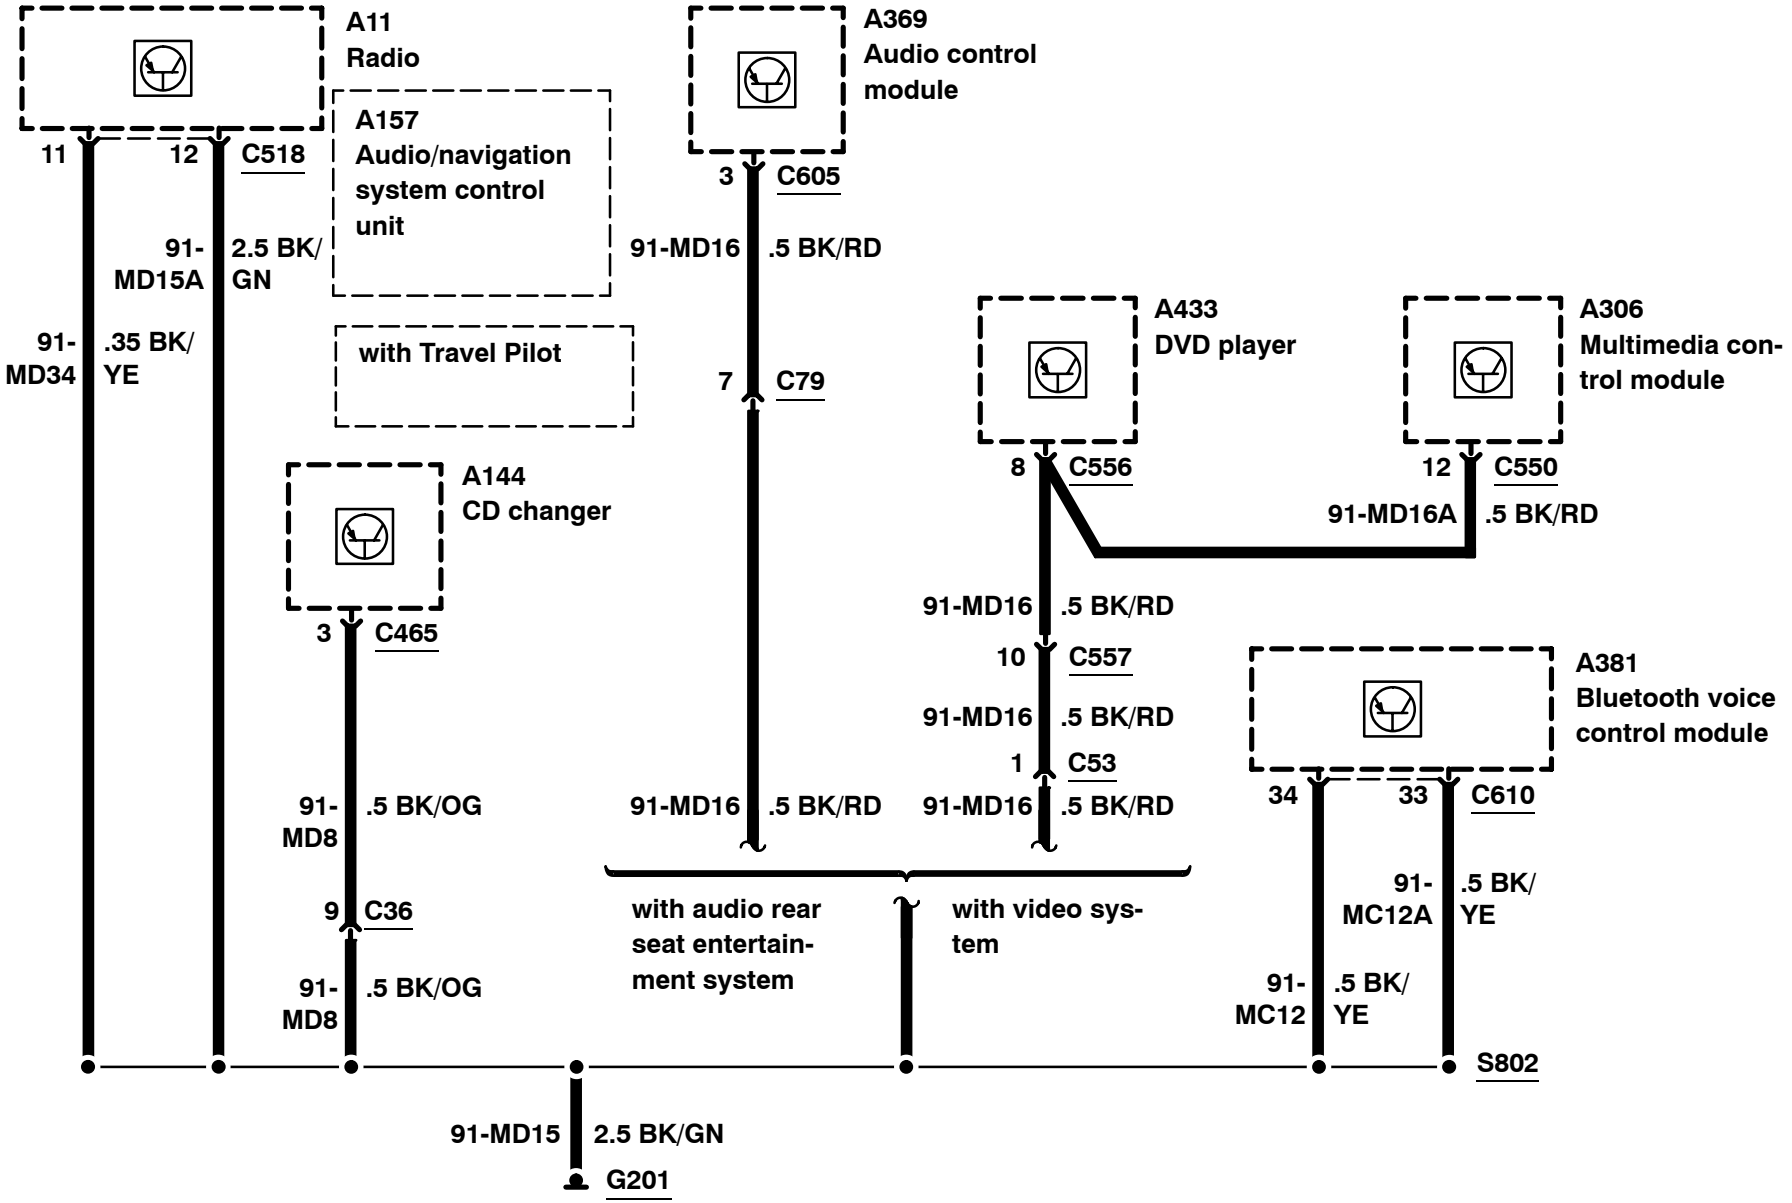


Ground Distribution – G201, with DVD navigation system with touch screen, before 04/2004

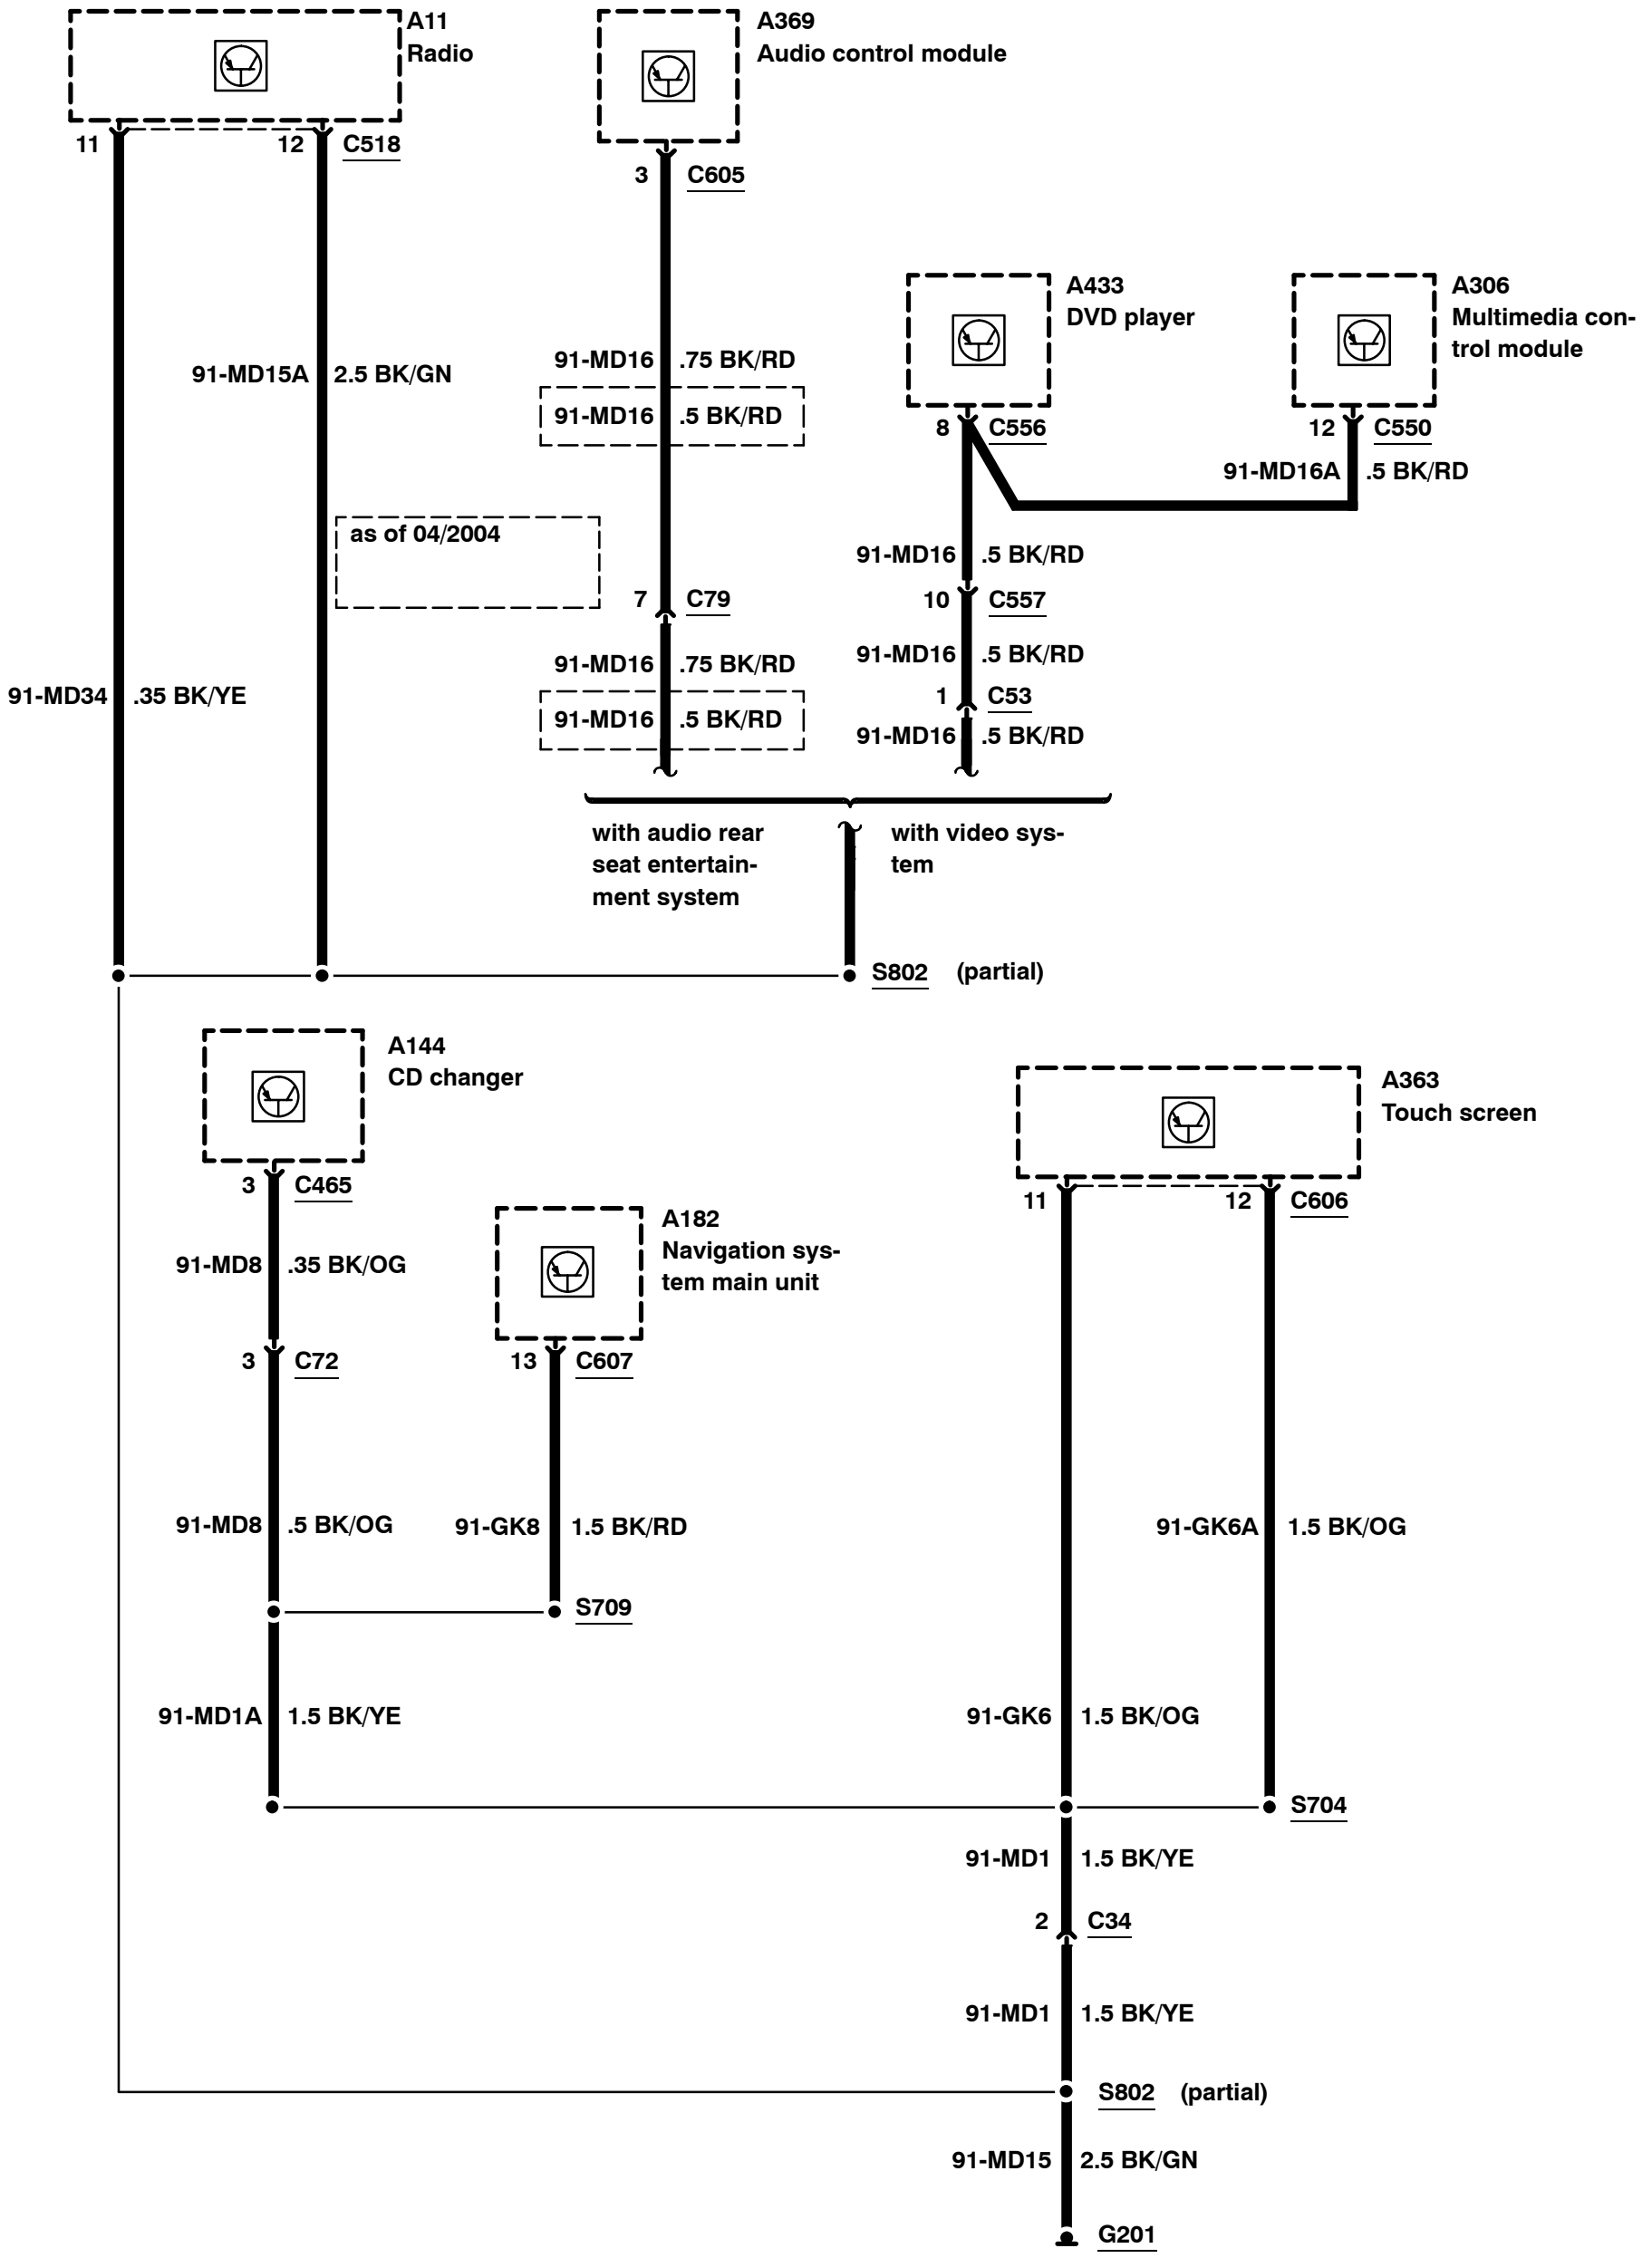


Ground Distribution – G202

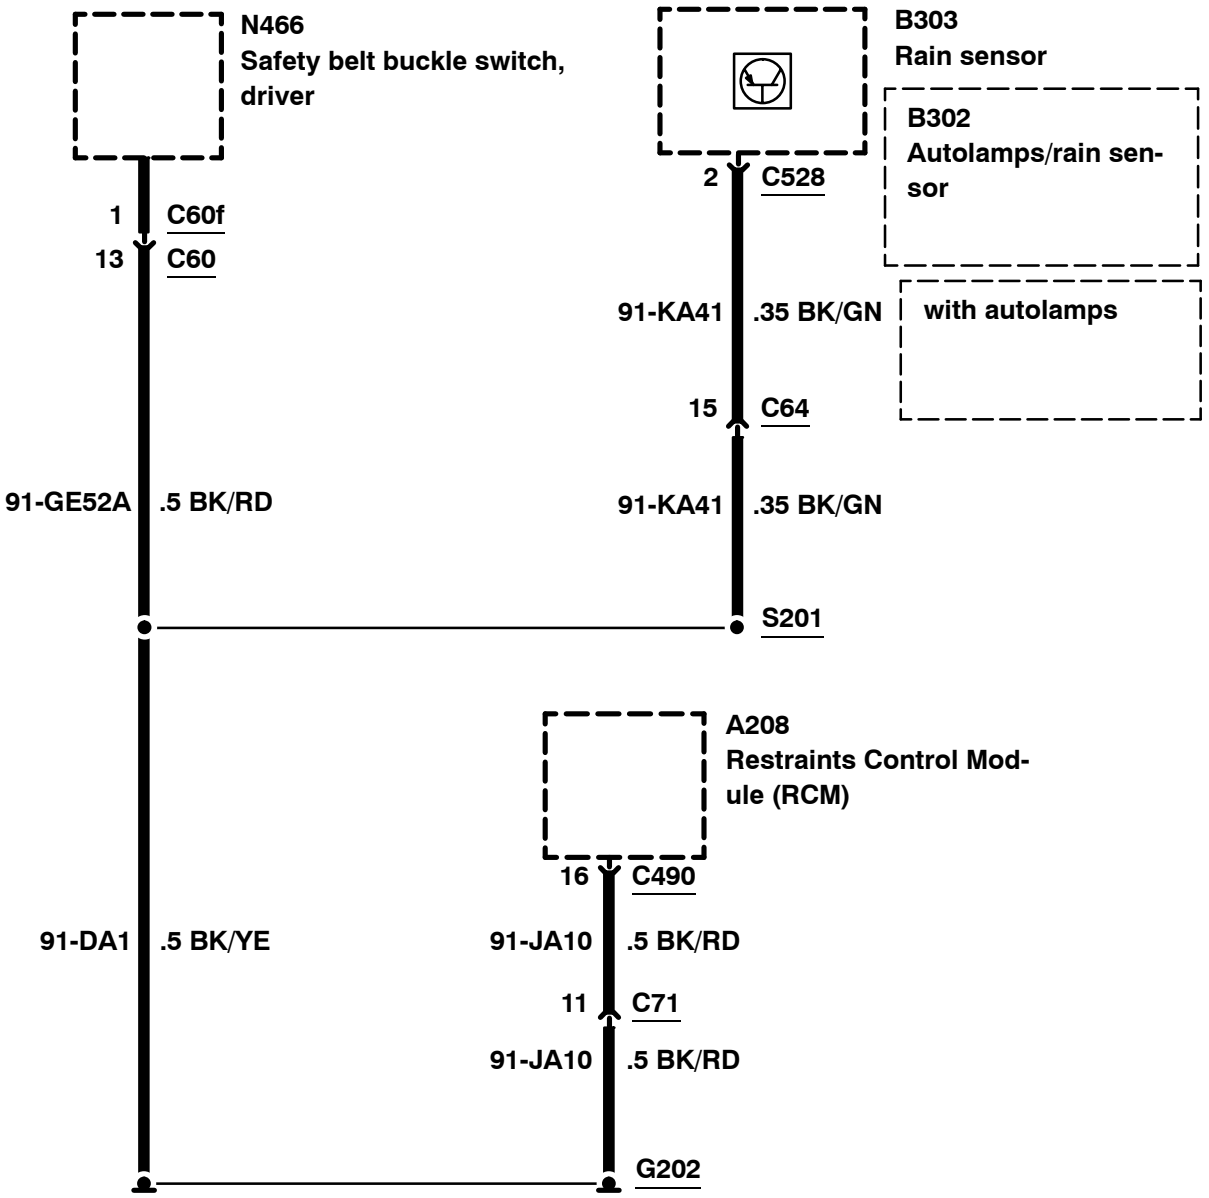


Ground Distribution – G203

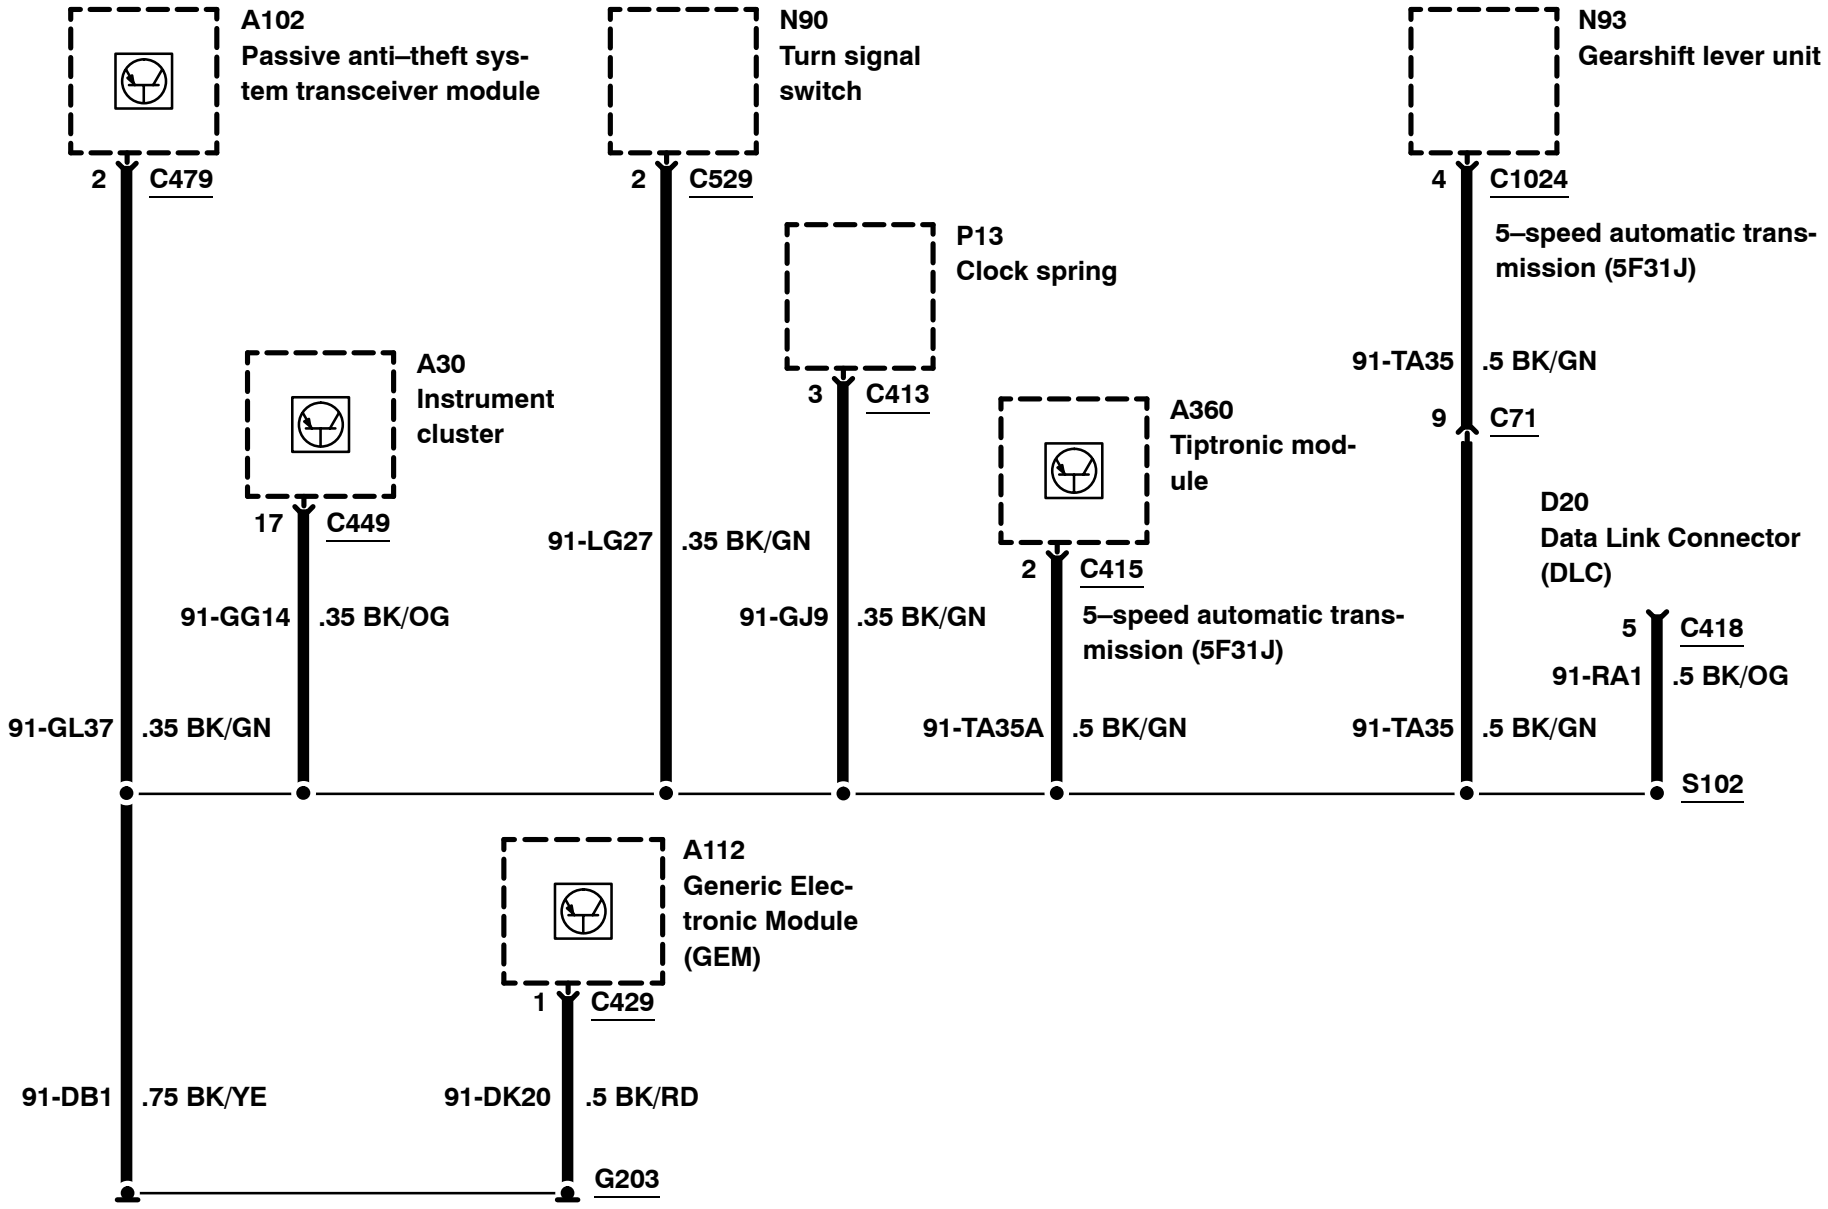


Ground Distribution – G204, before 04/2004

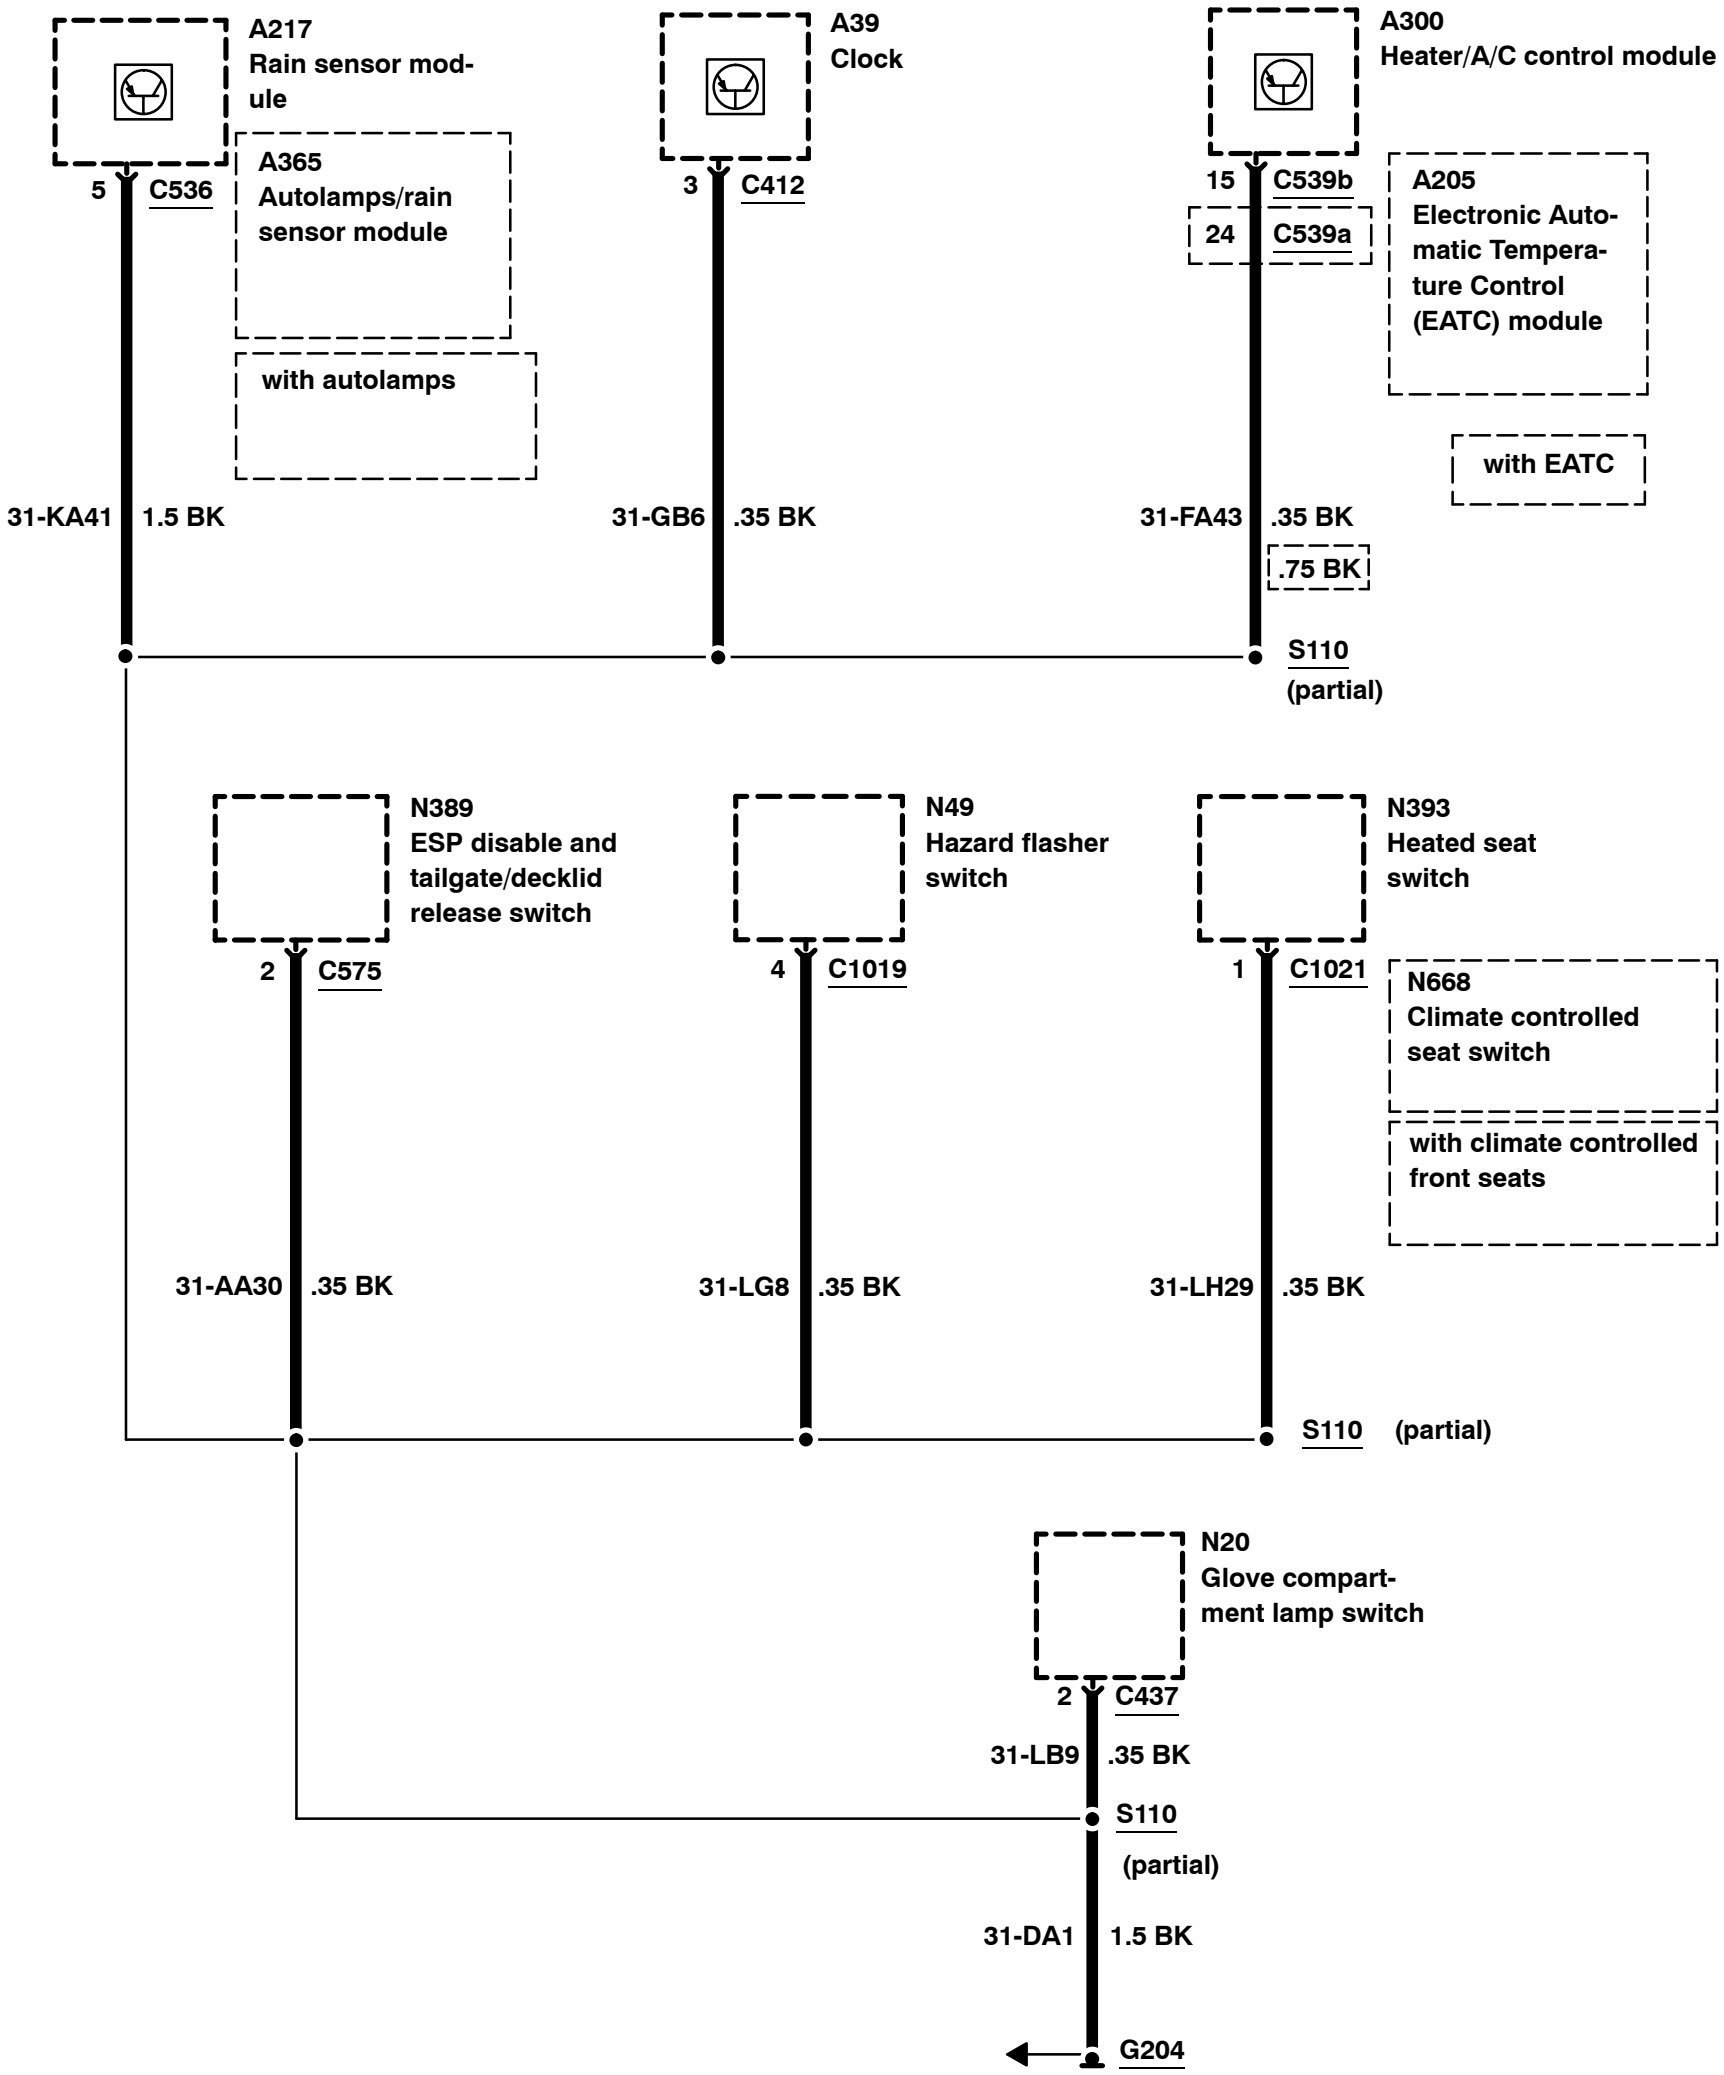


Ground Distribution – G204, as of 04/2004

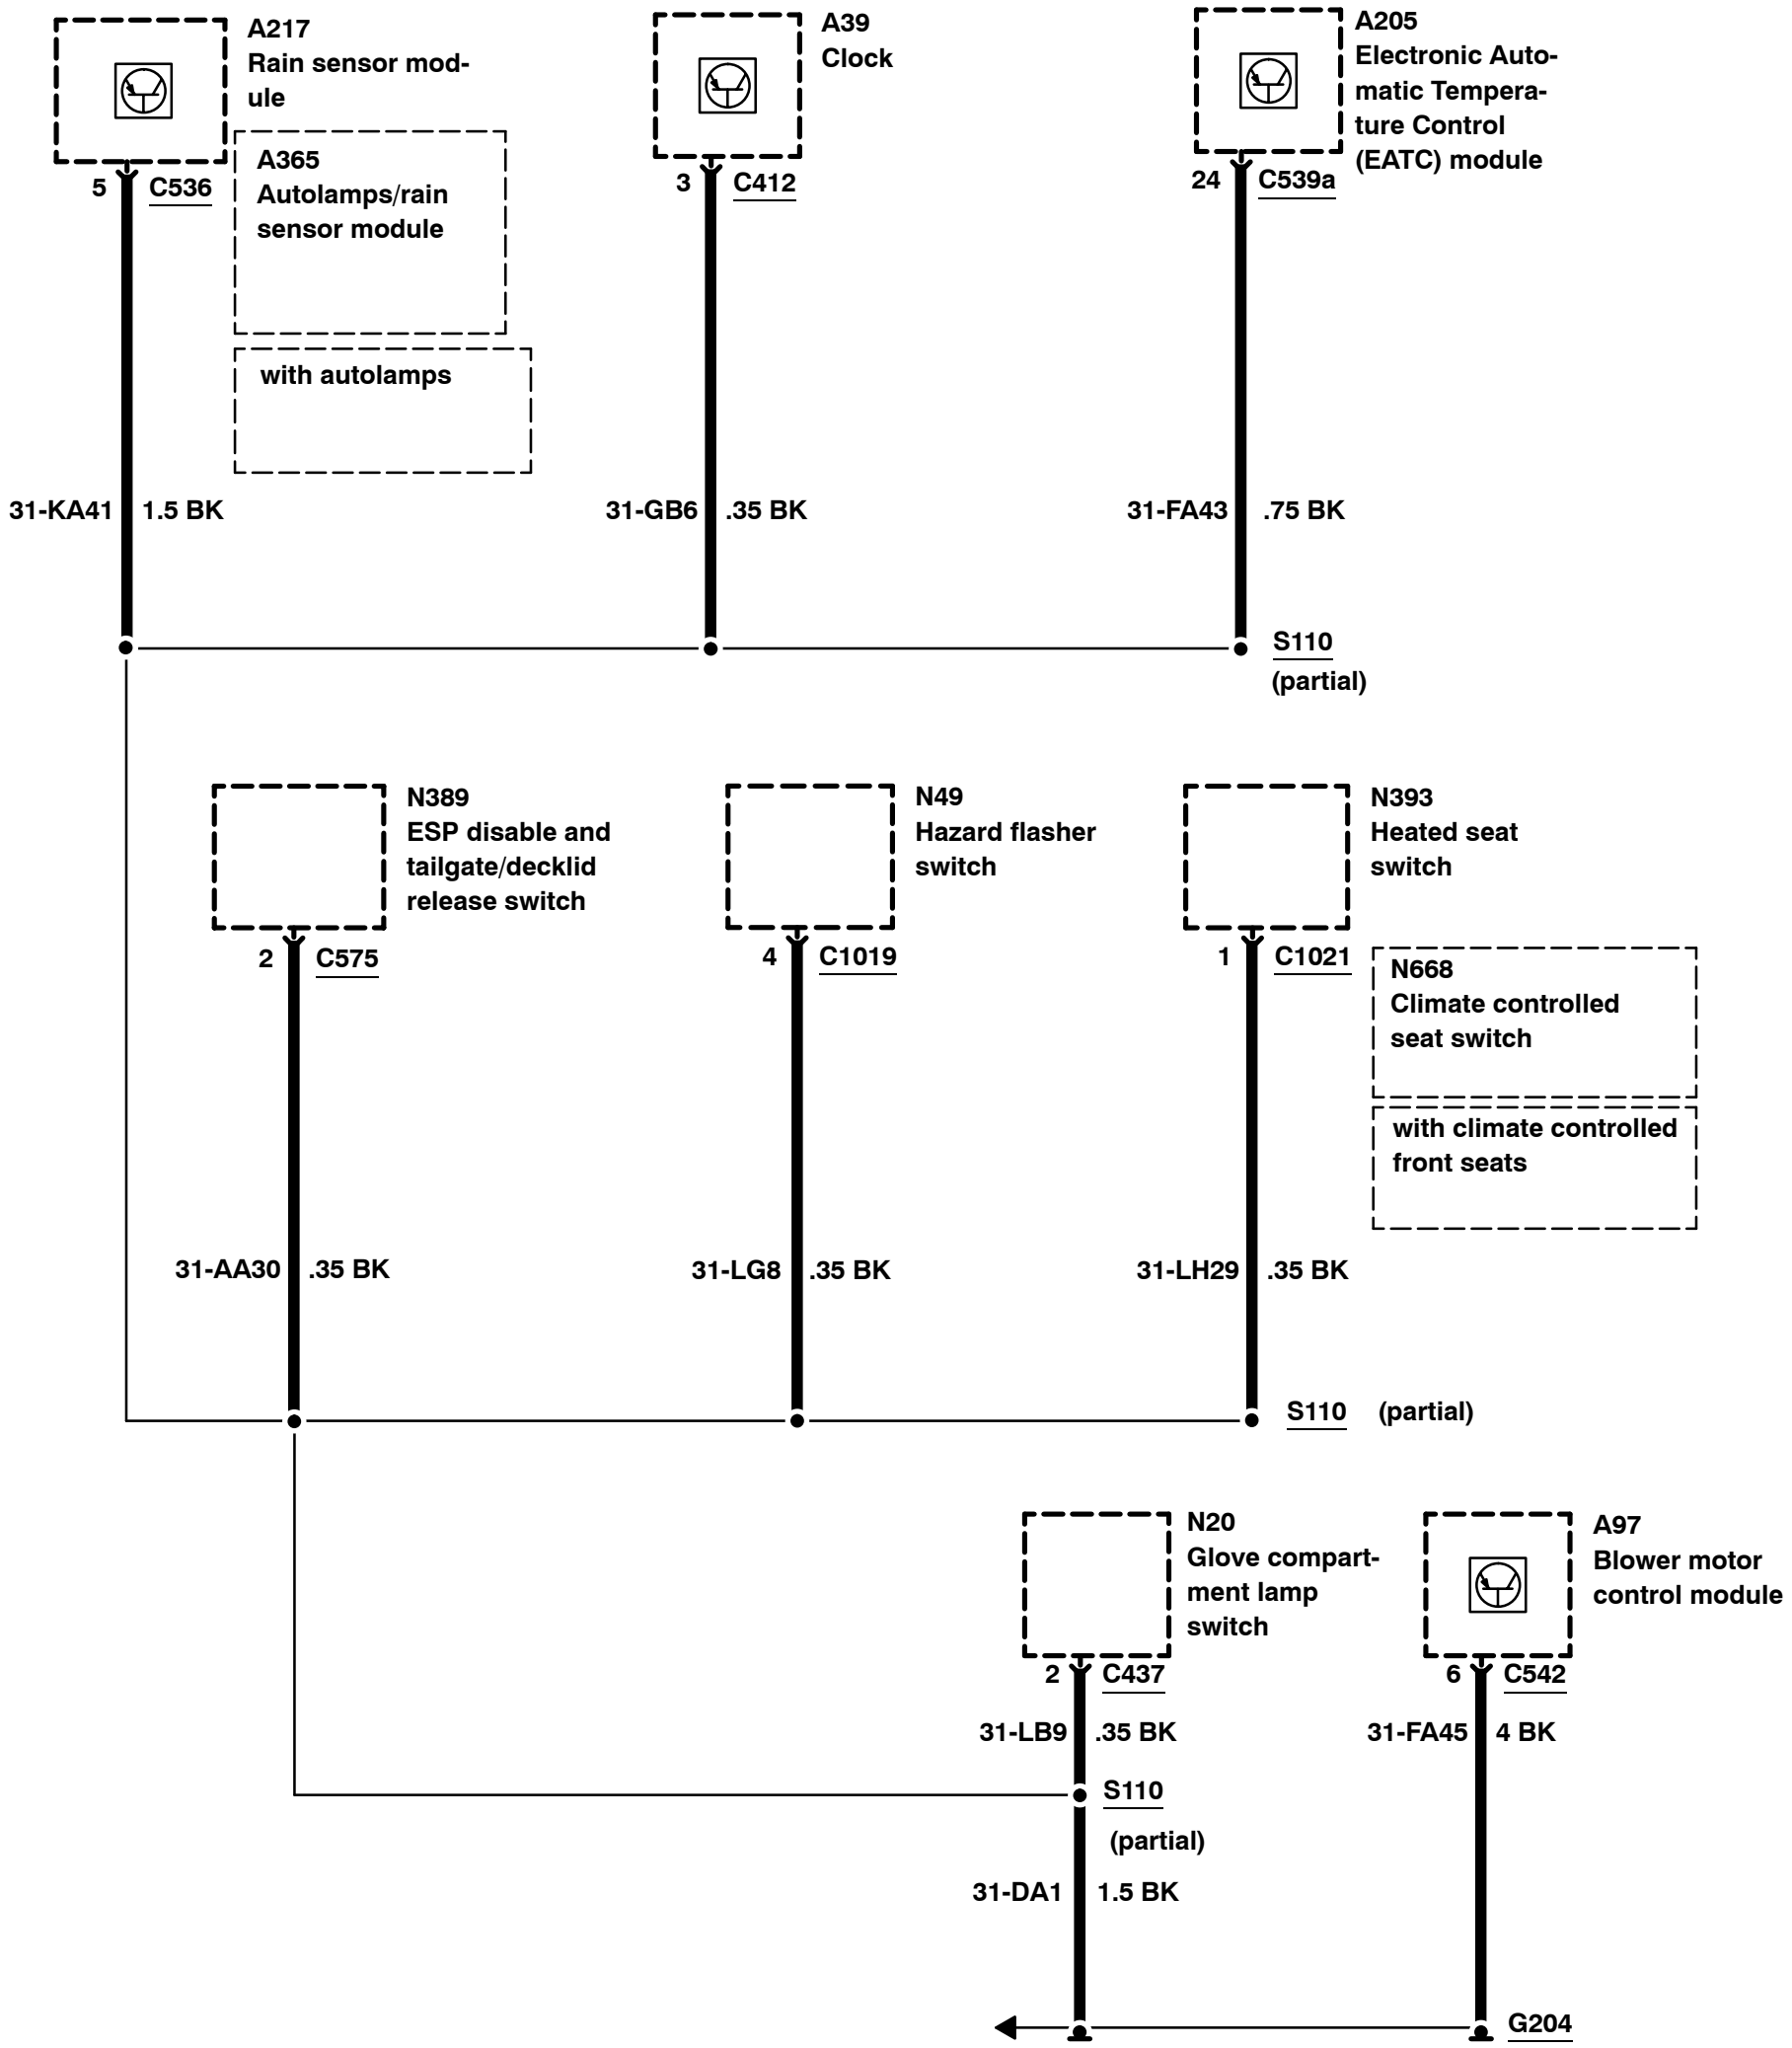


Ground Distribution – G204, before 04/2004

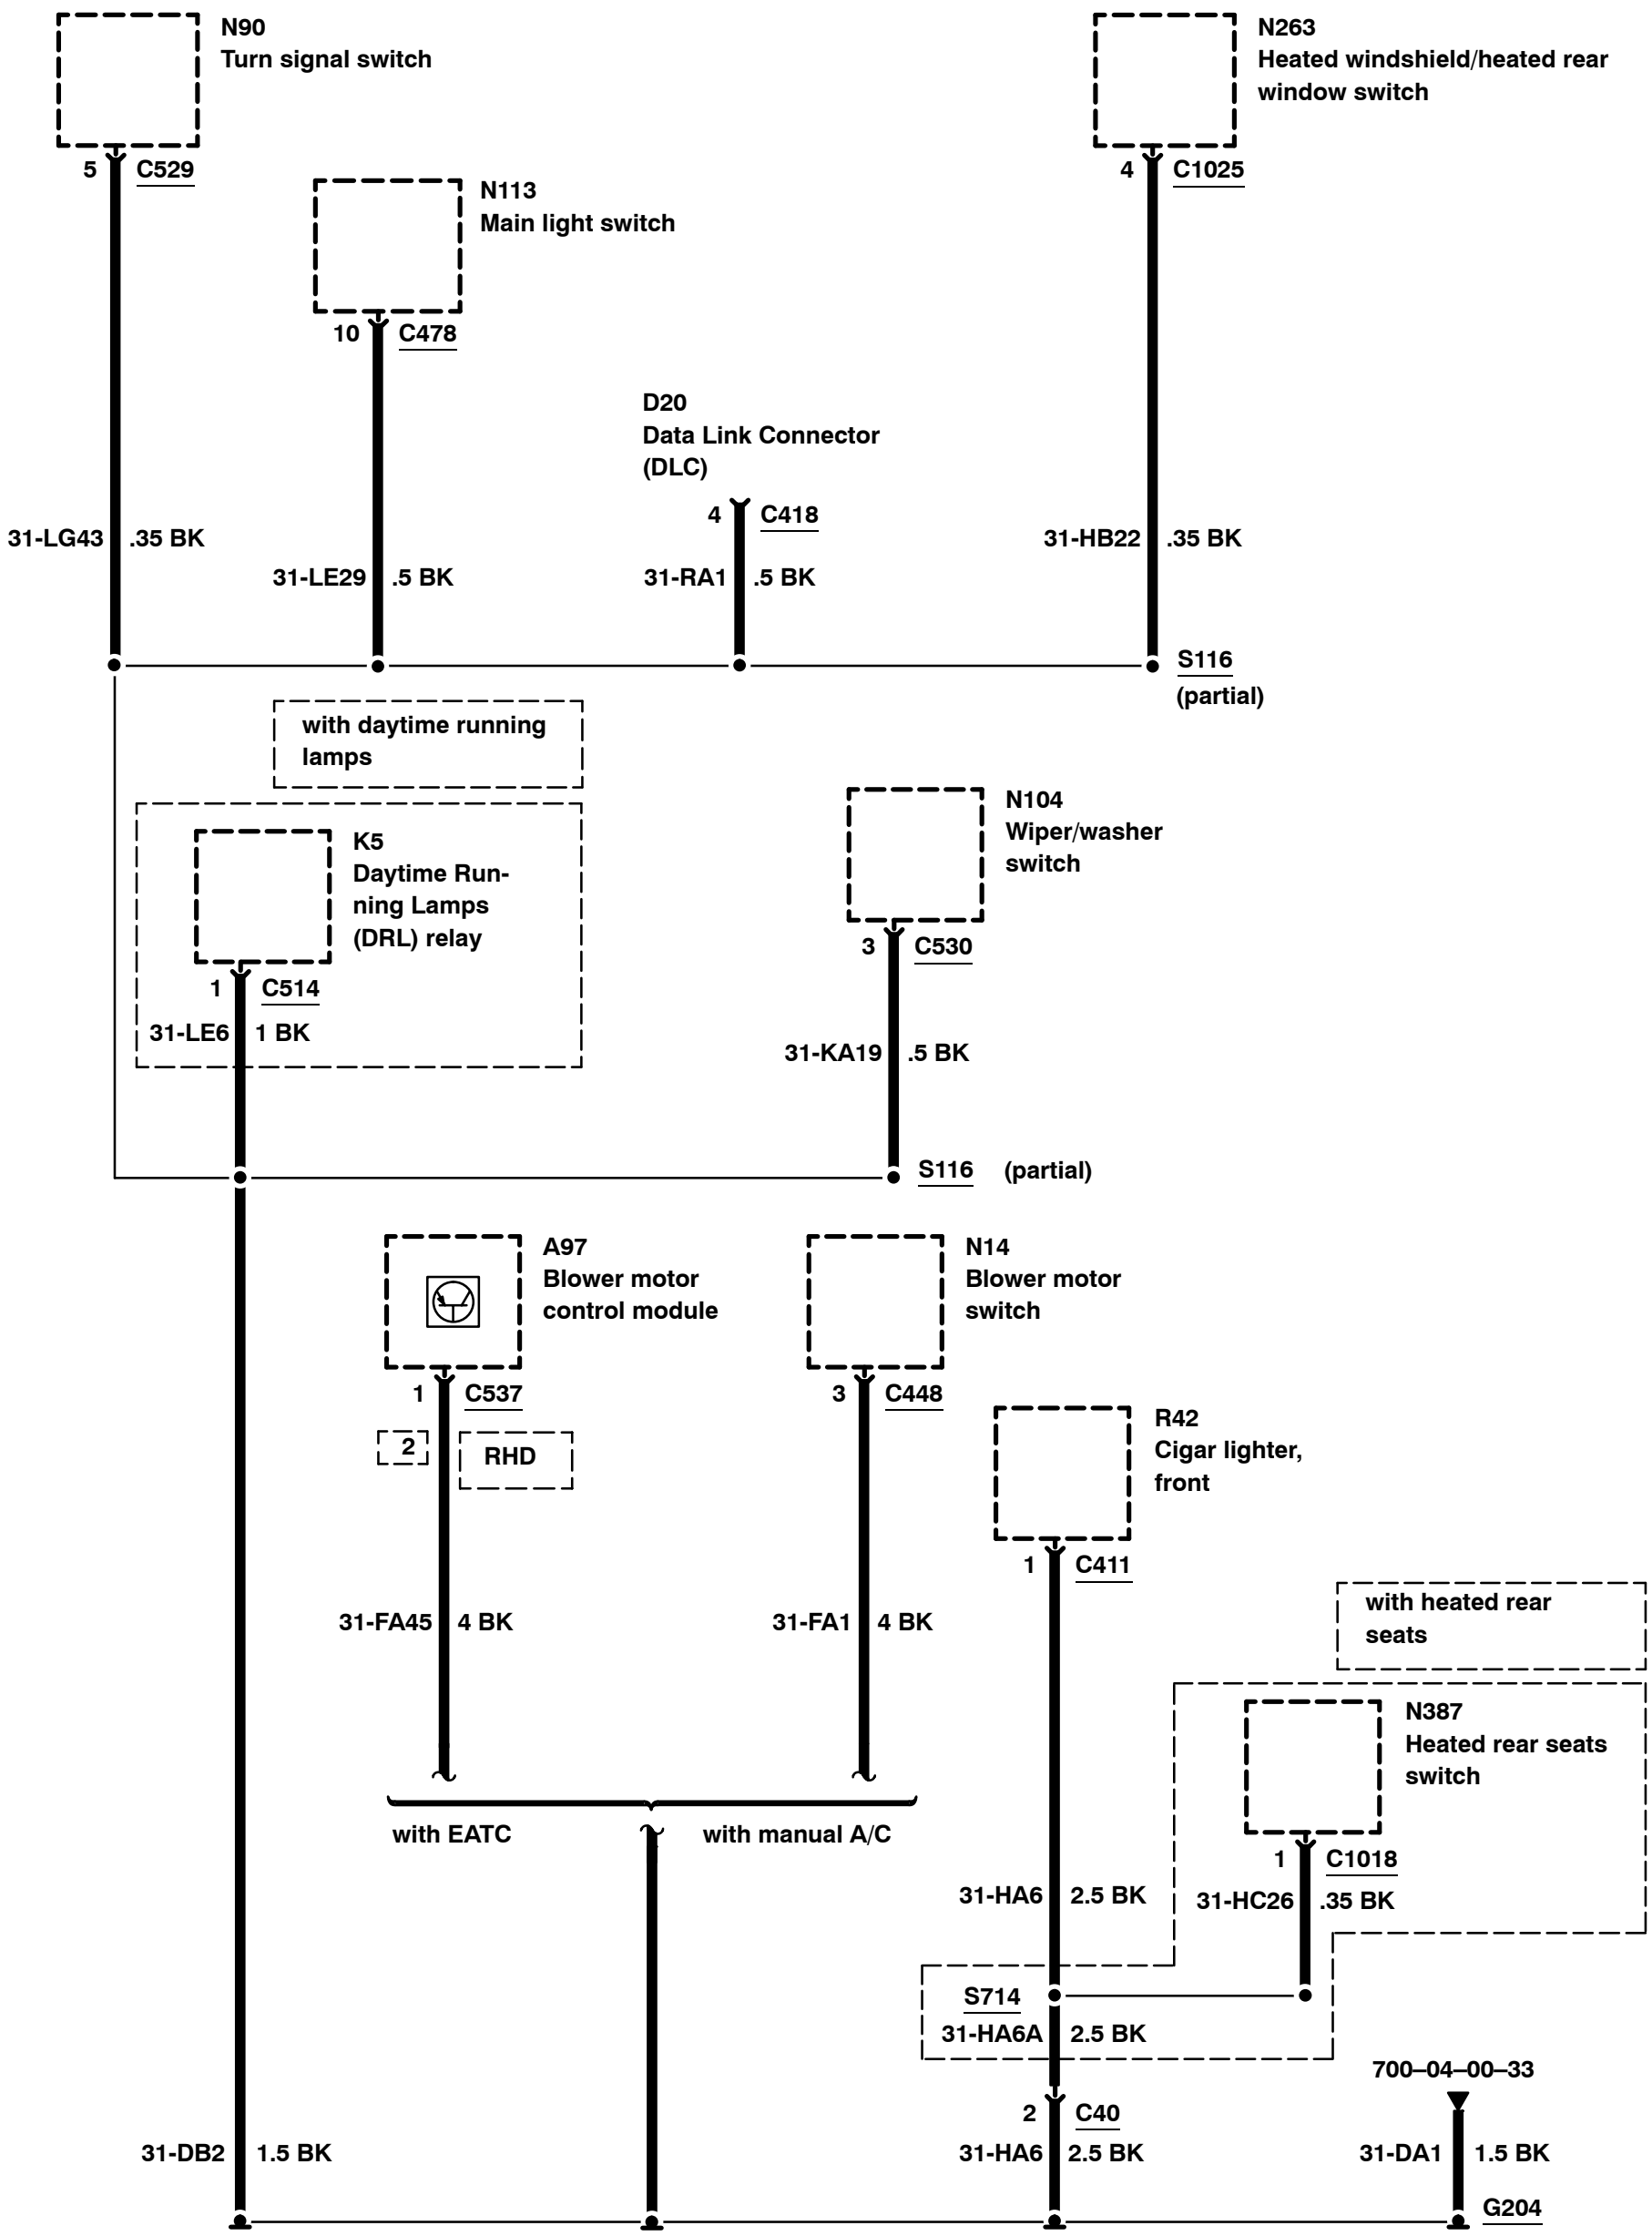


Ground Distribution – G204, as of 04/2004

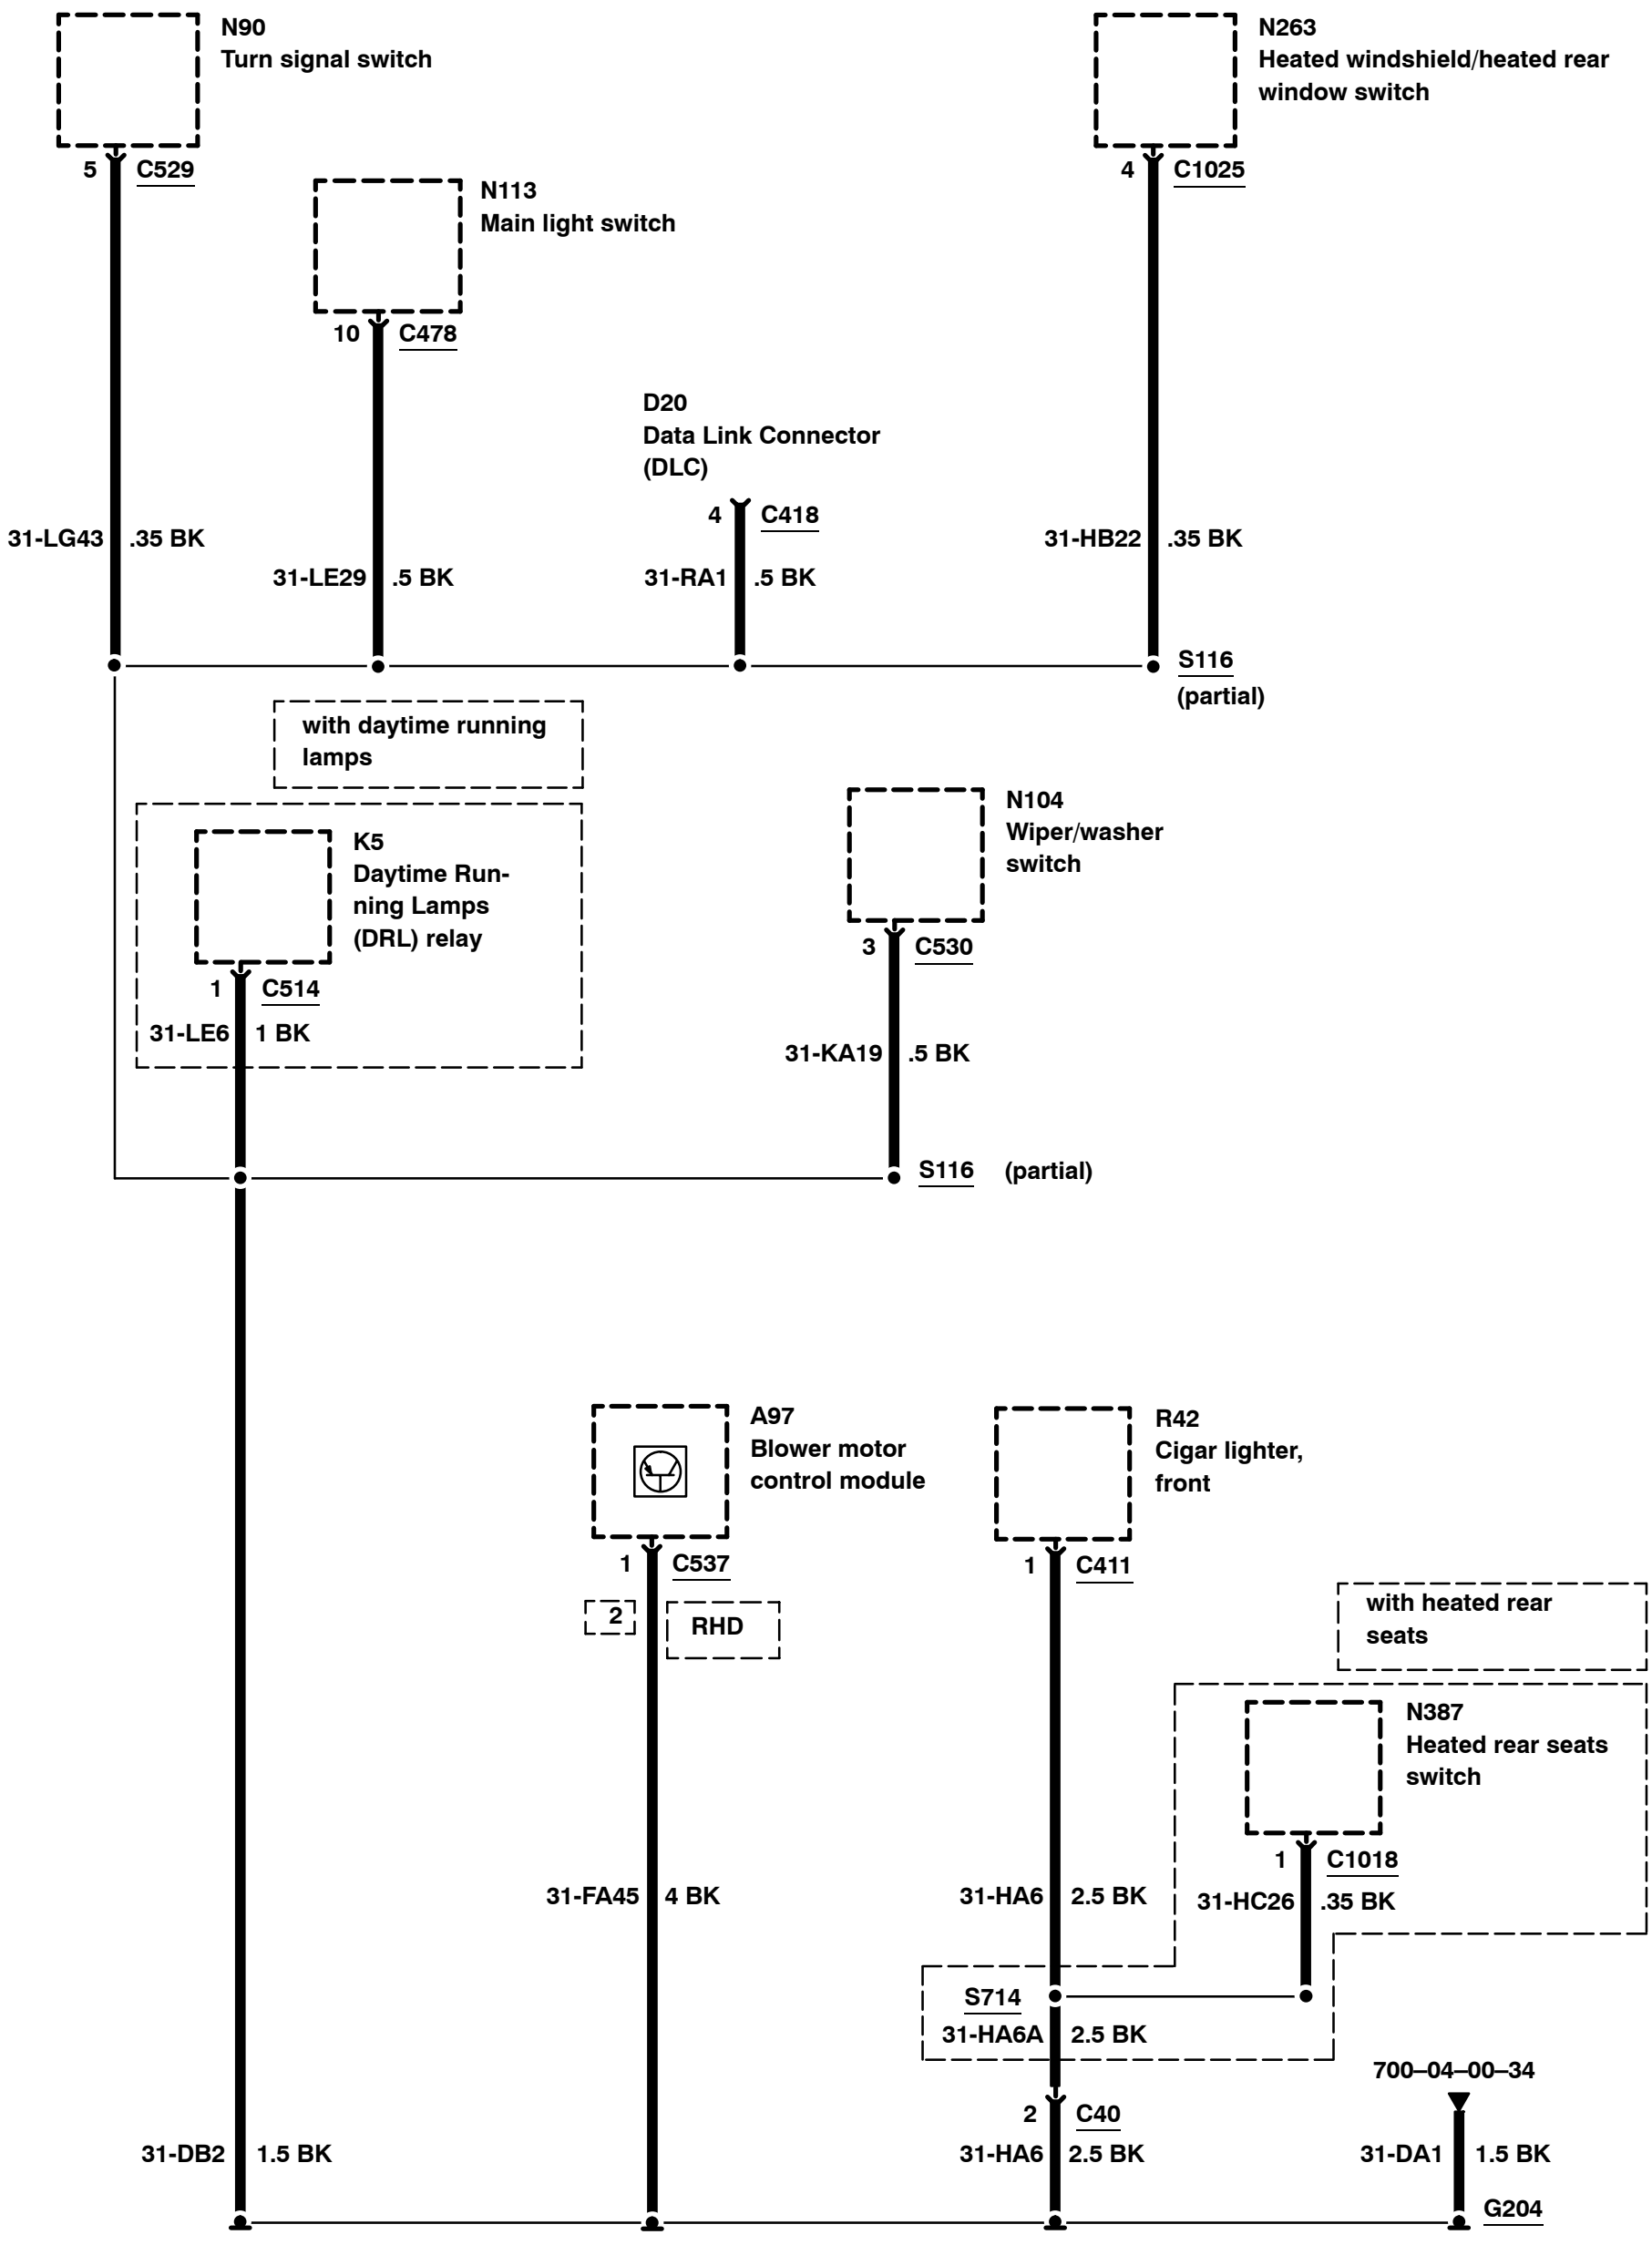


Ground Distribution – G205, LHD

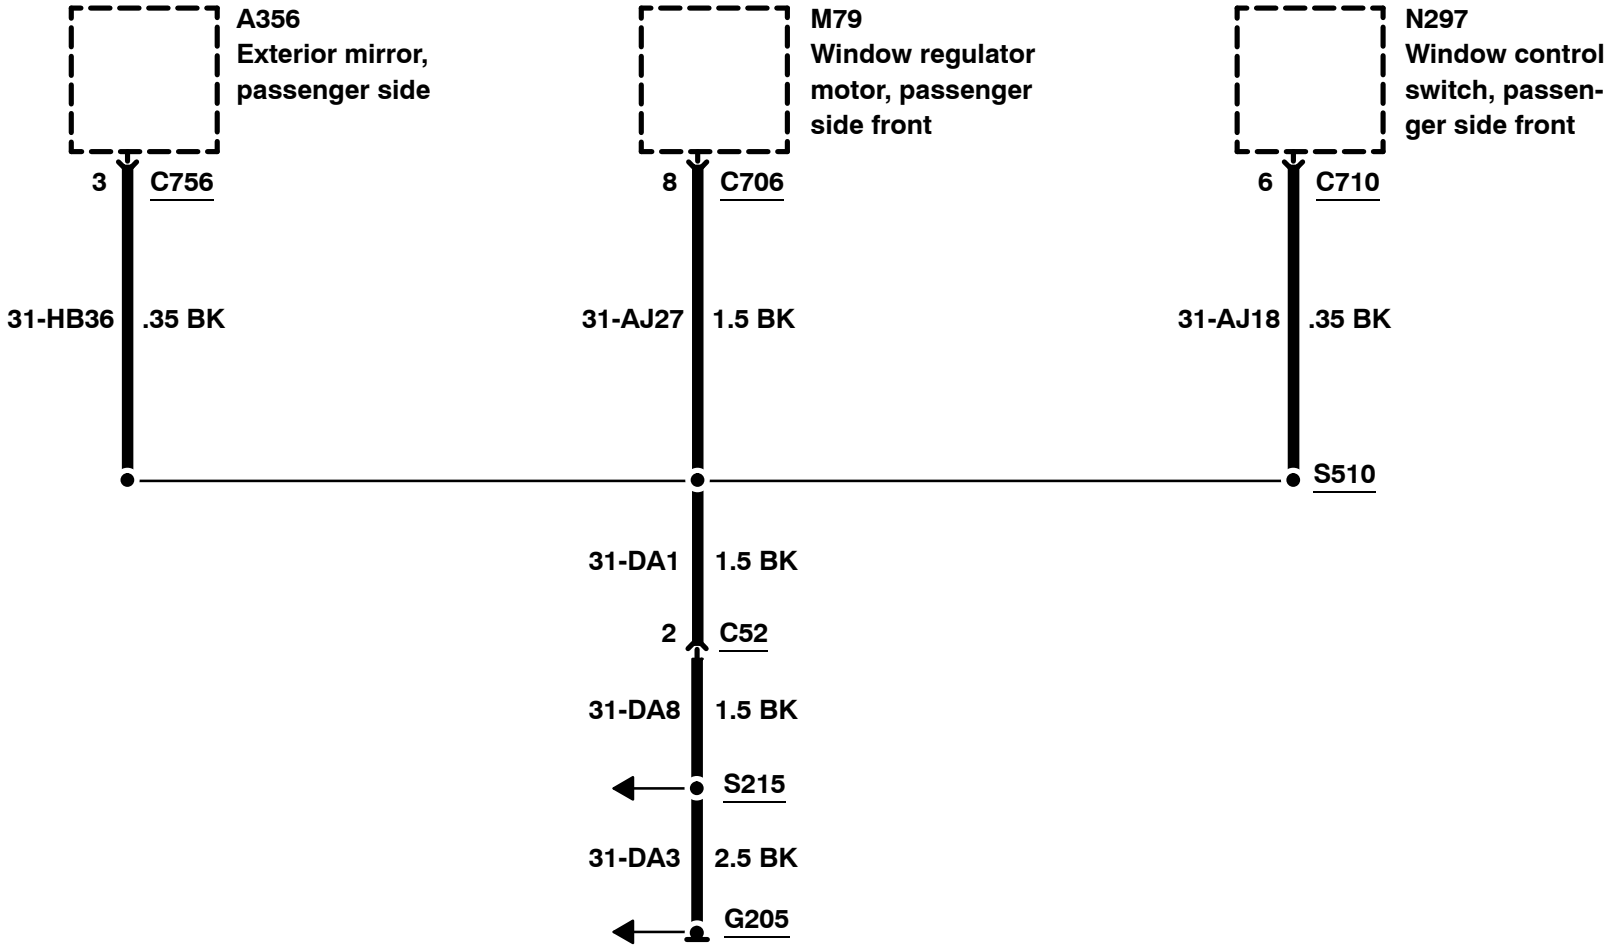


Ground Distribution – G205, RHD

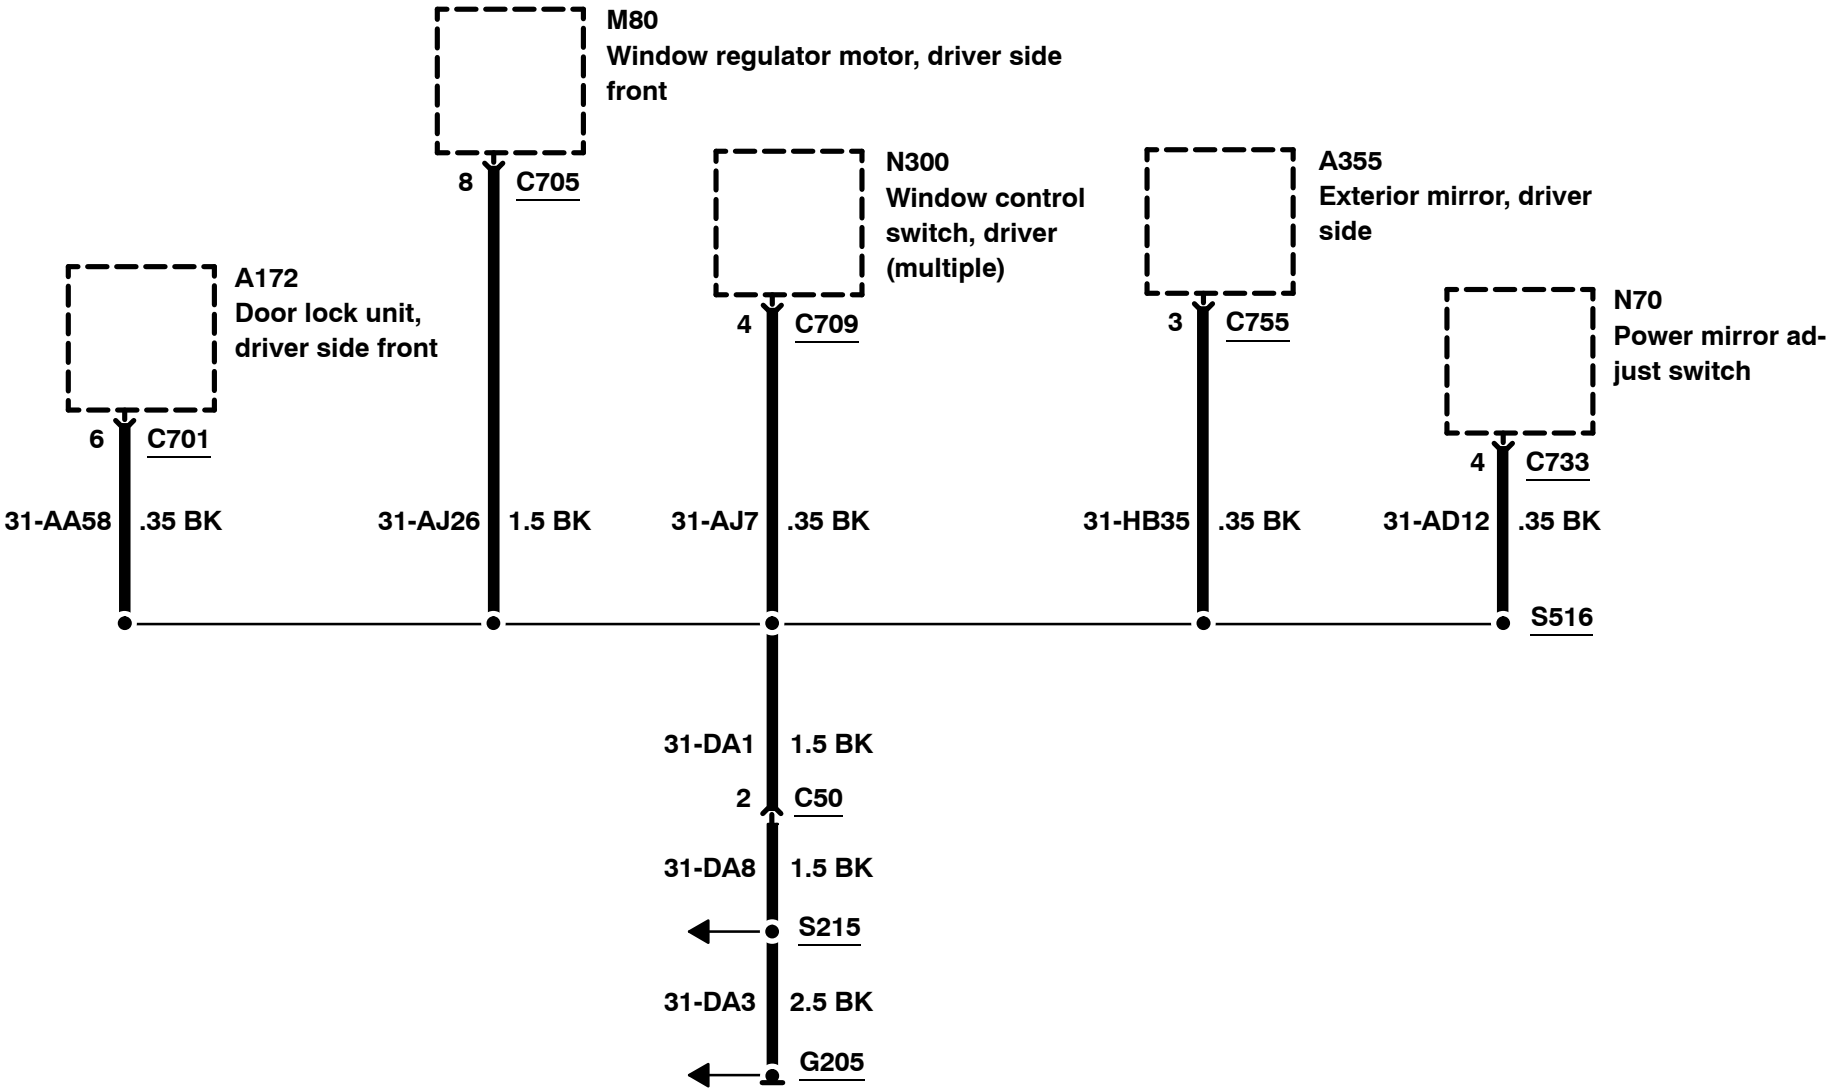


Ground Distribution – G205

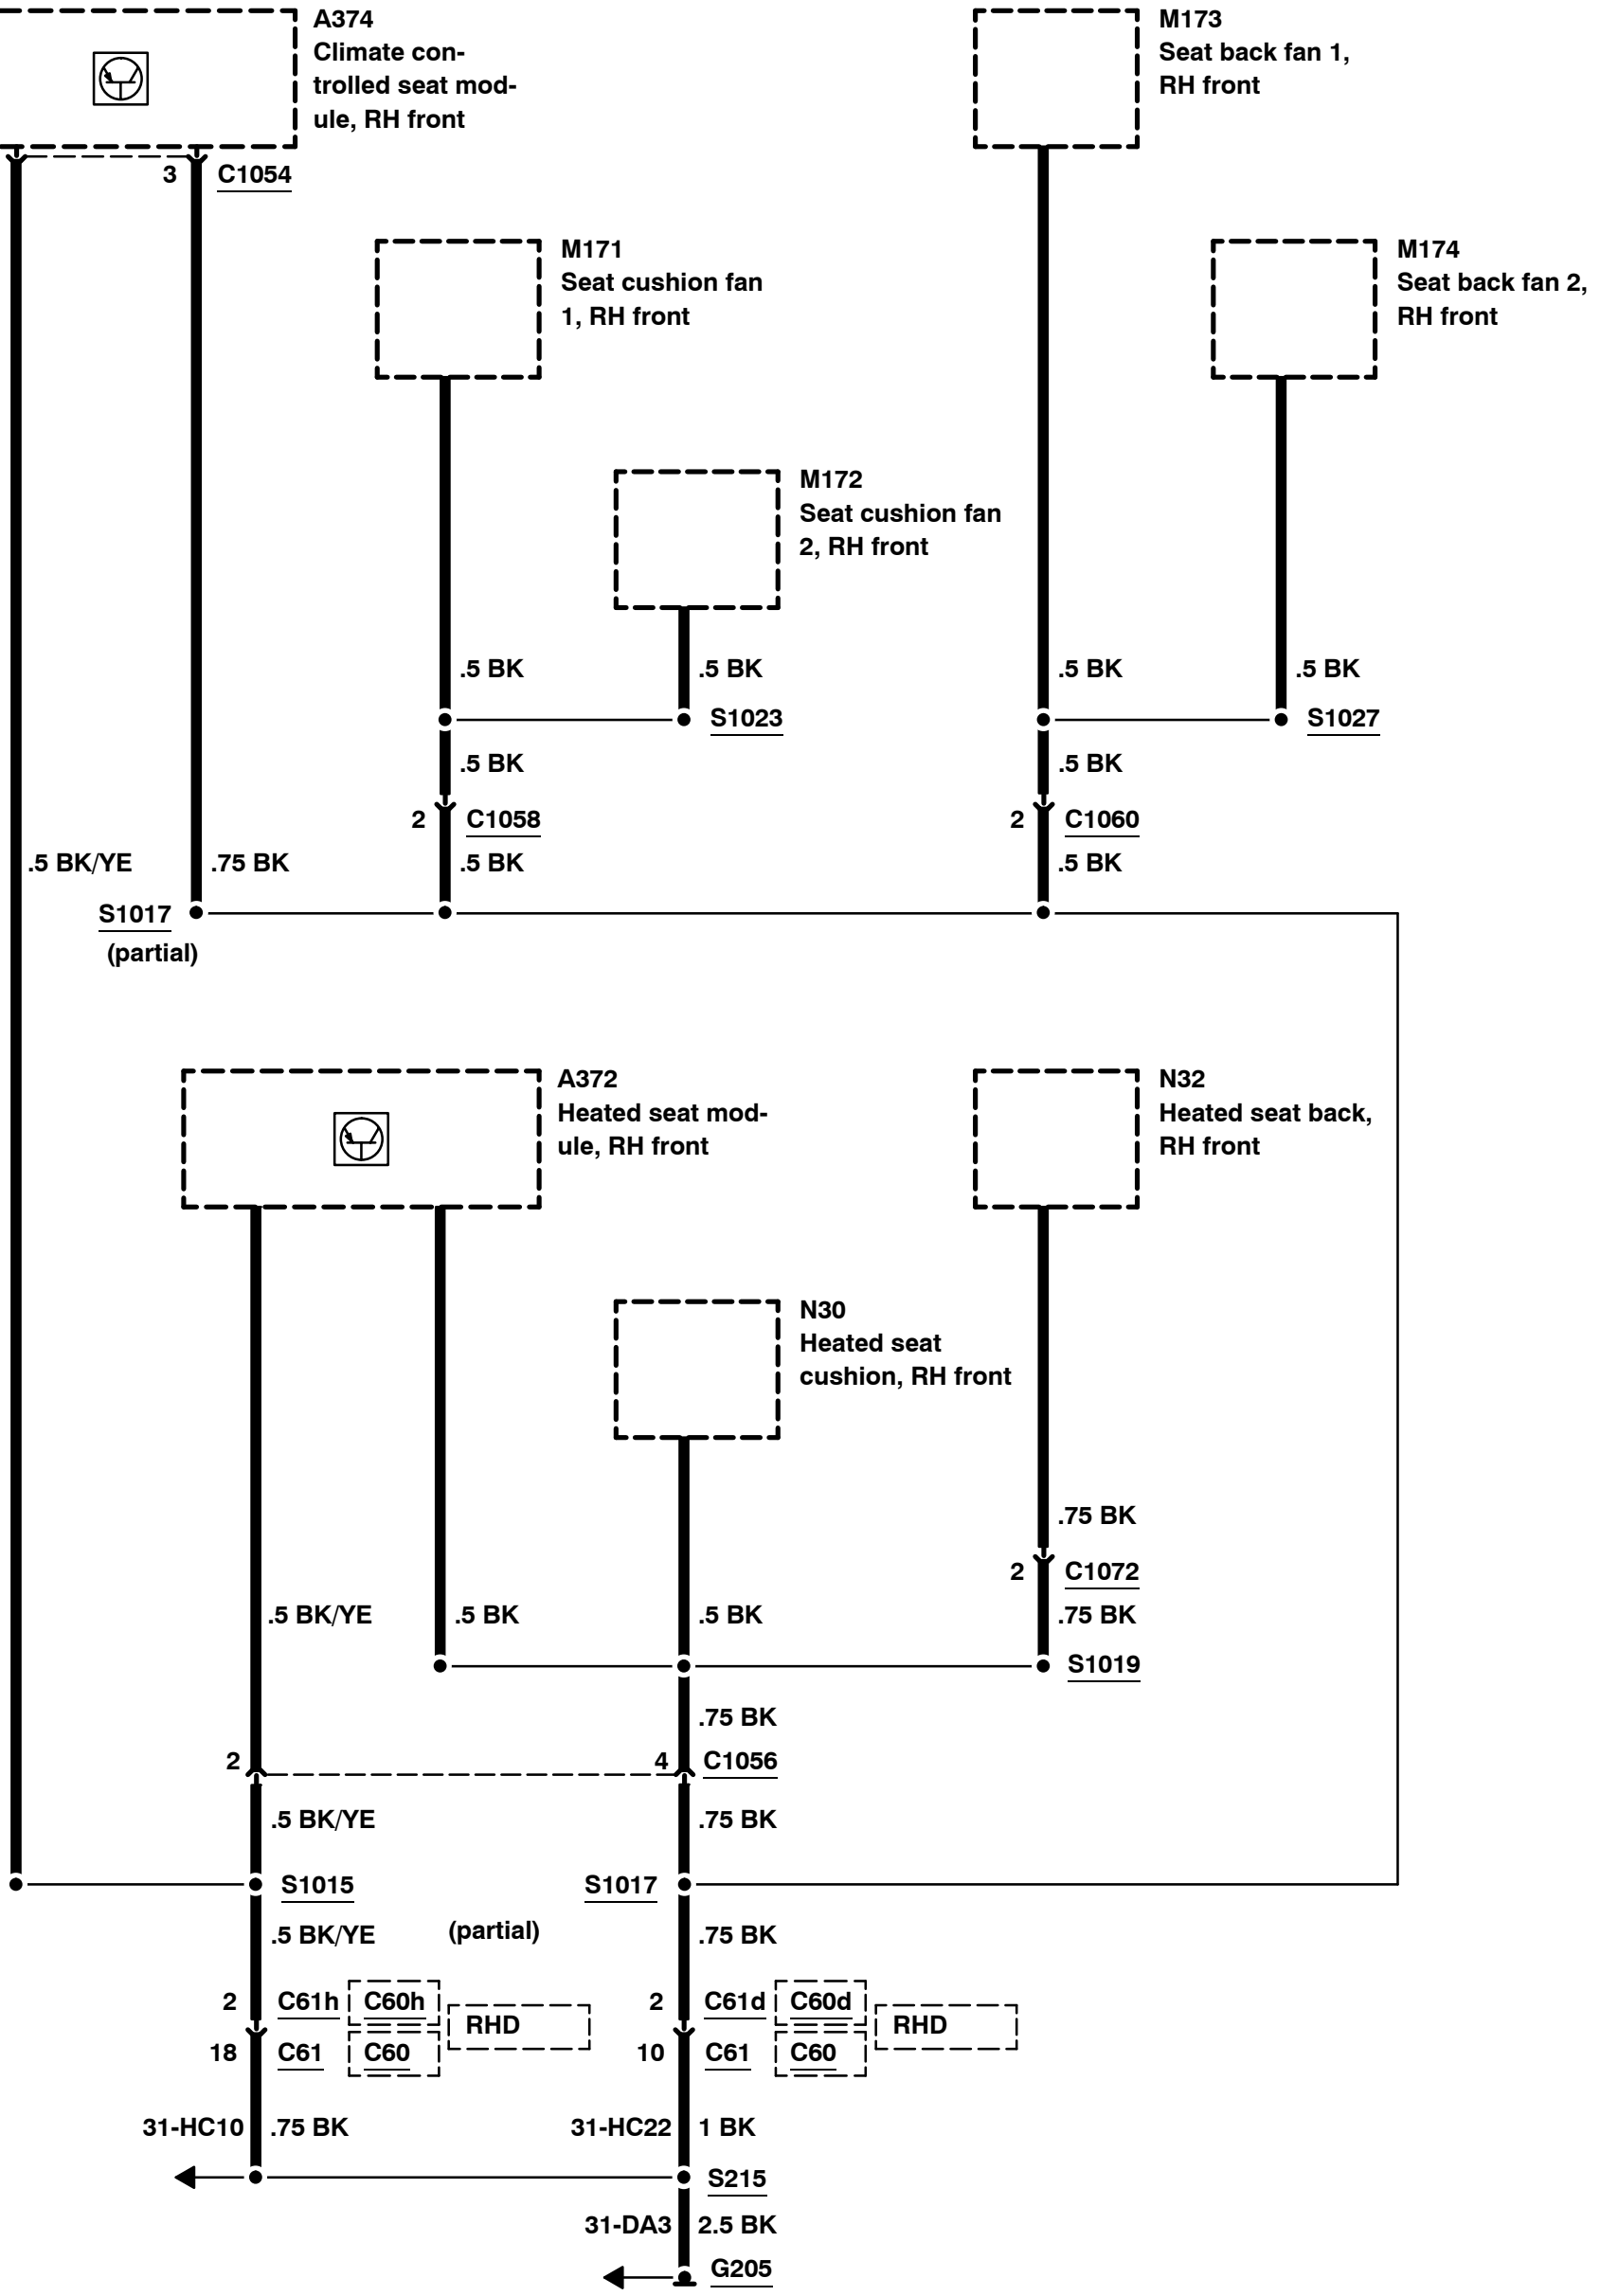


Ground Distribution – G205

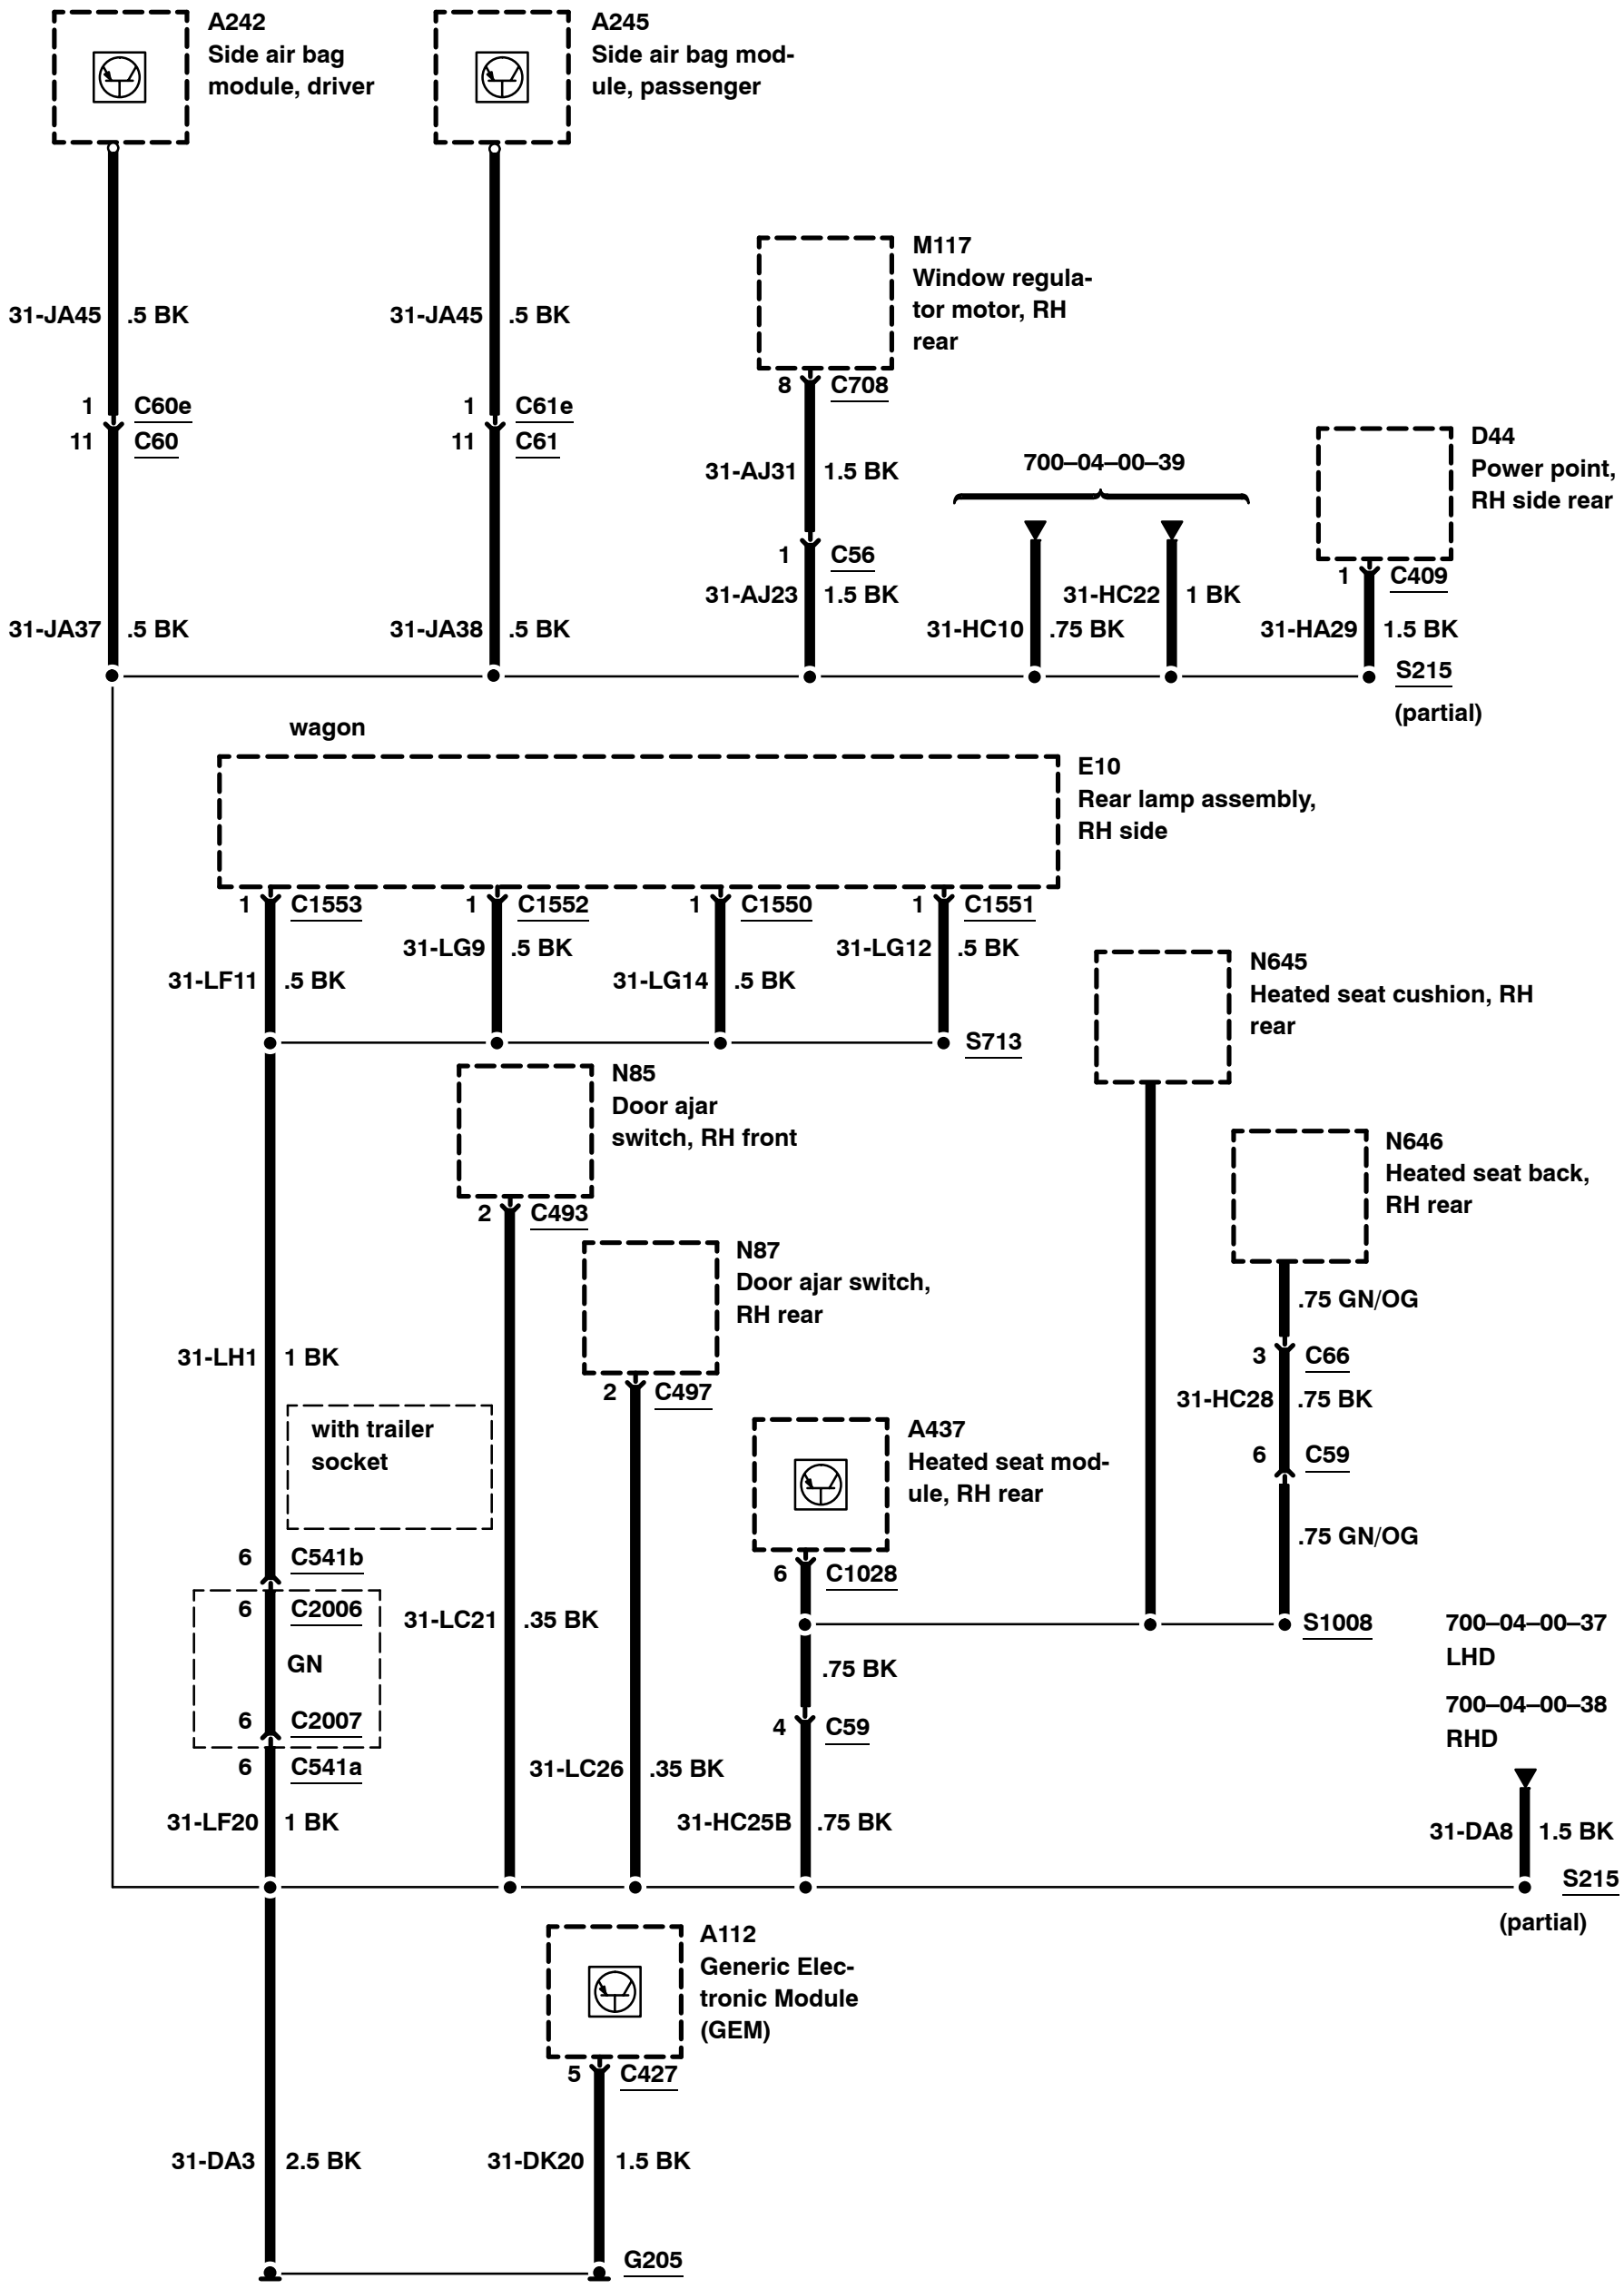


Ground Distribution – G300, 4–door model

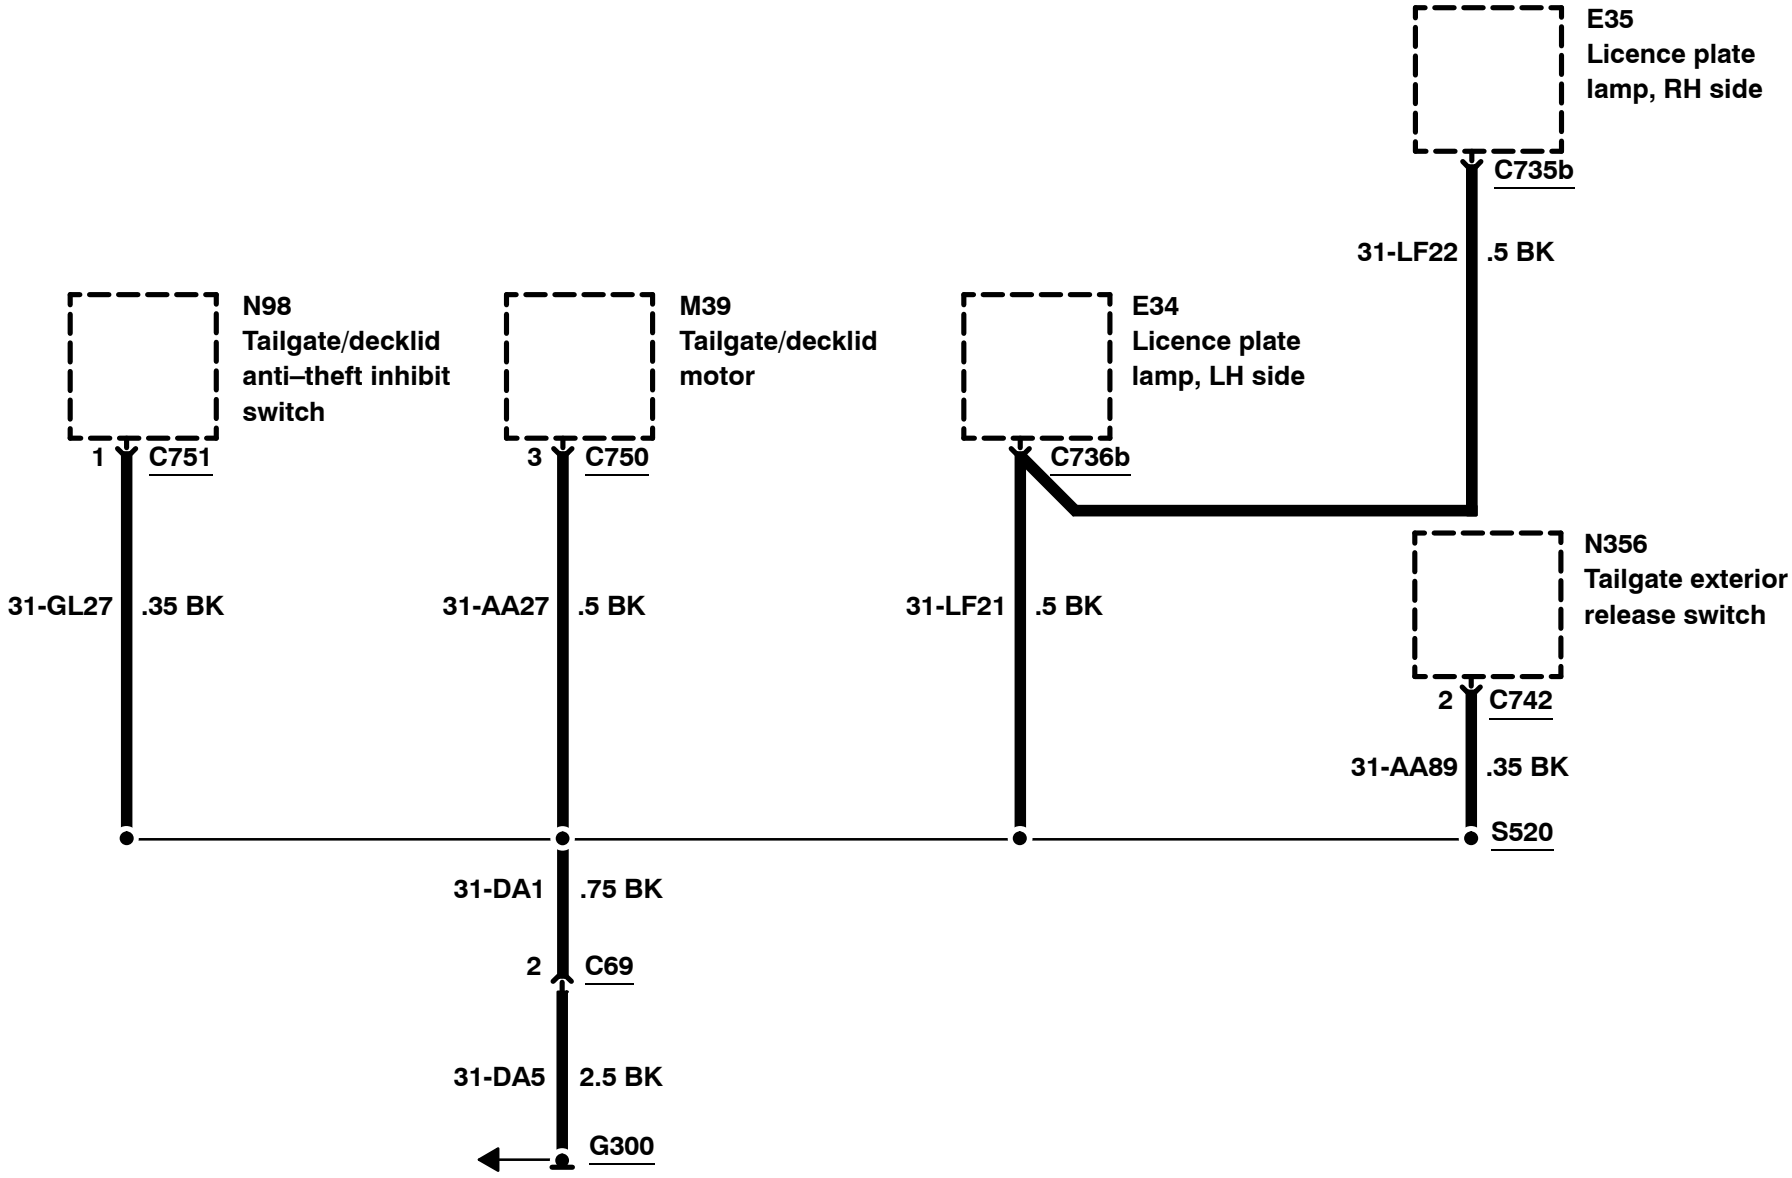


Ground Distribution – G300, 5–door model/wagon

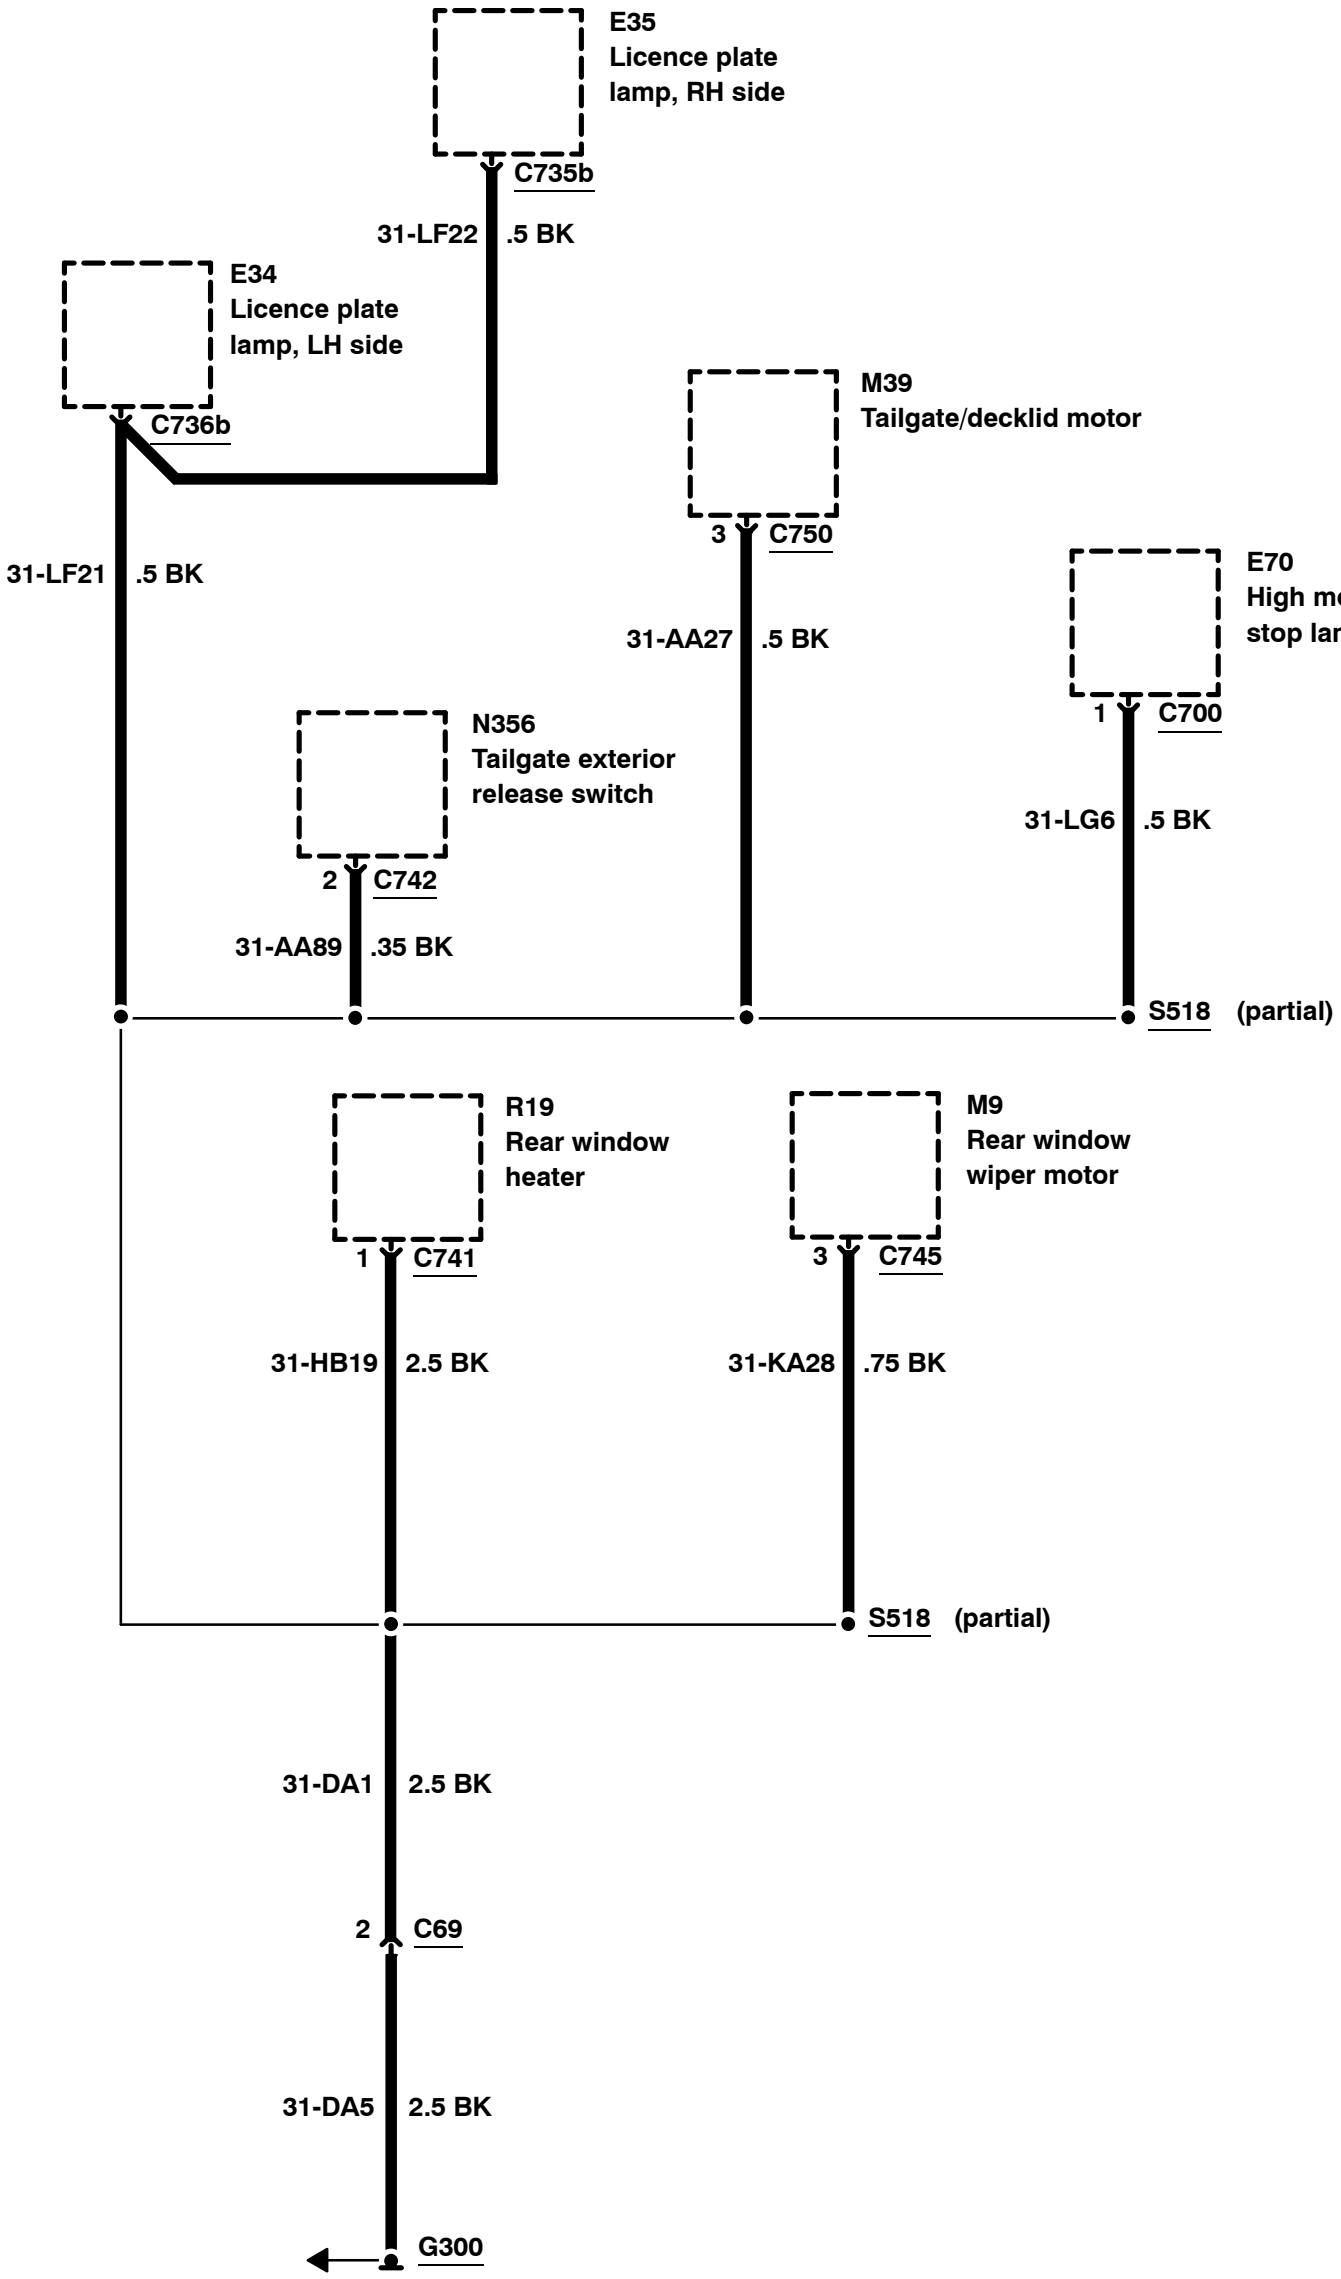


Ground Distribution – G300, without trailer socket, 4–door model/5–door model

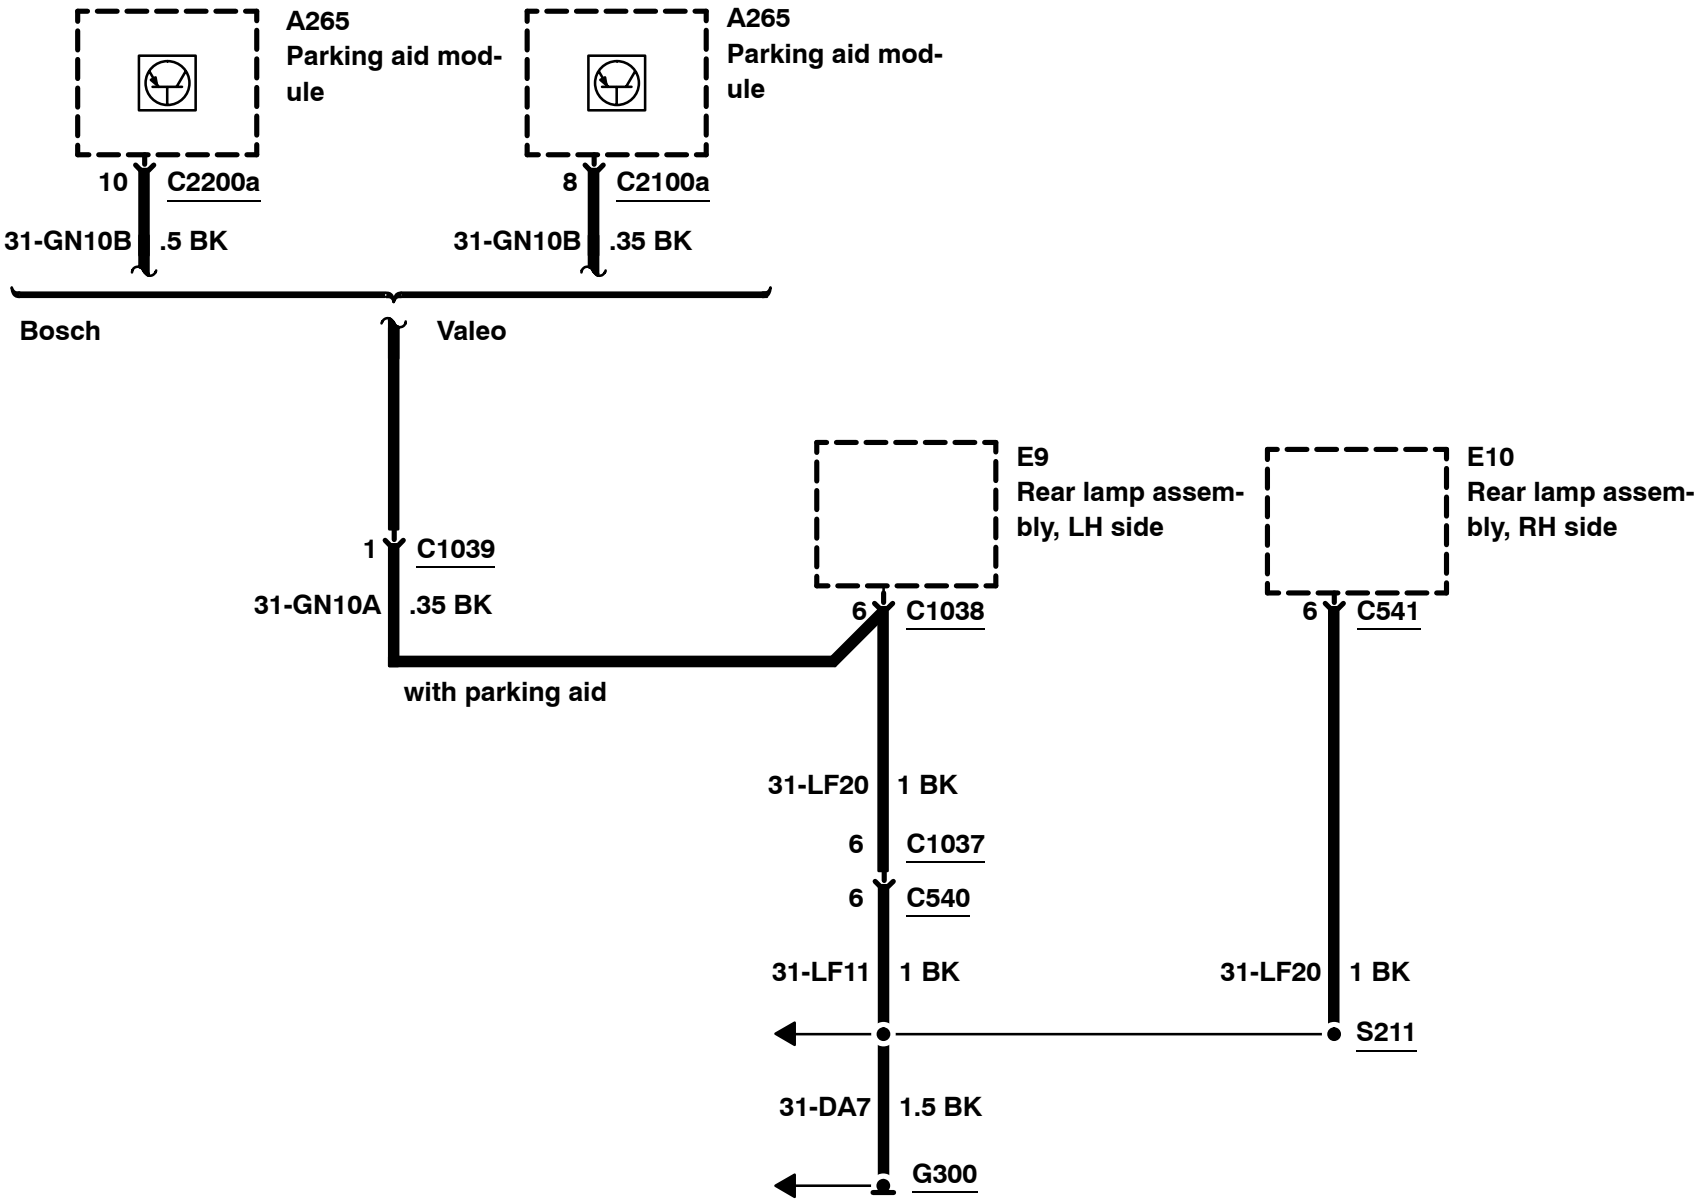


Ground Distribution – G300, with trailer socket, 4–door model/5–door model, before 01/2004

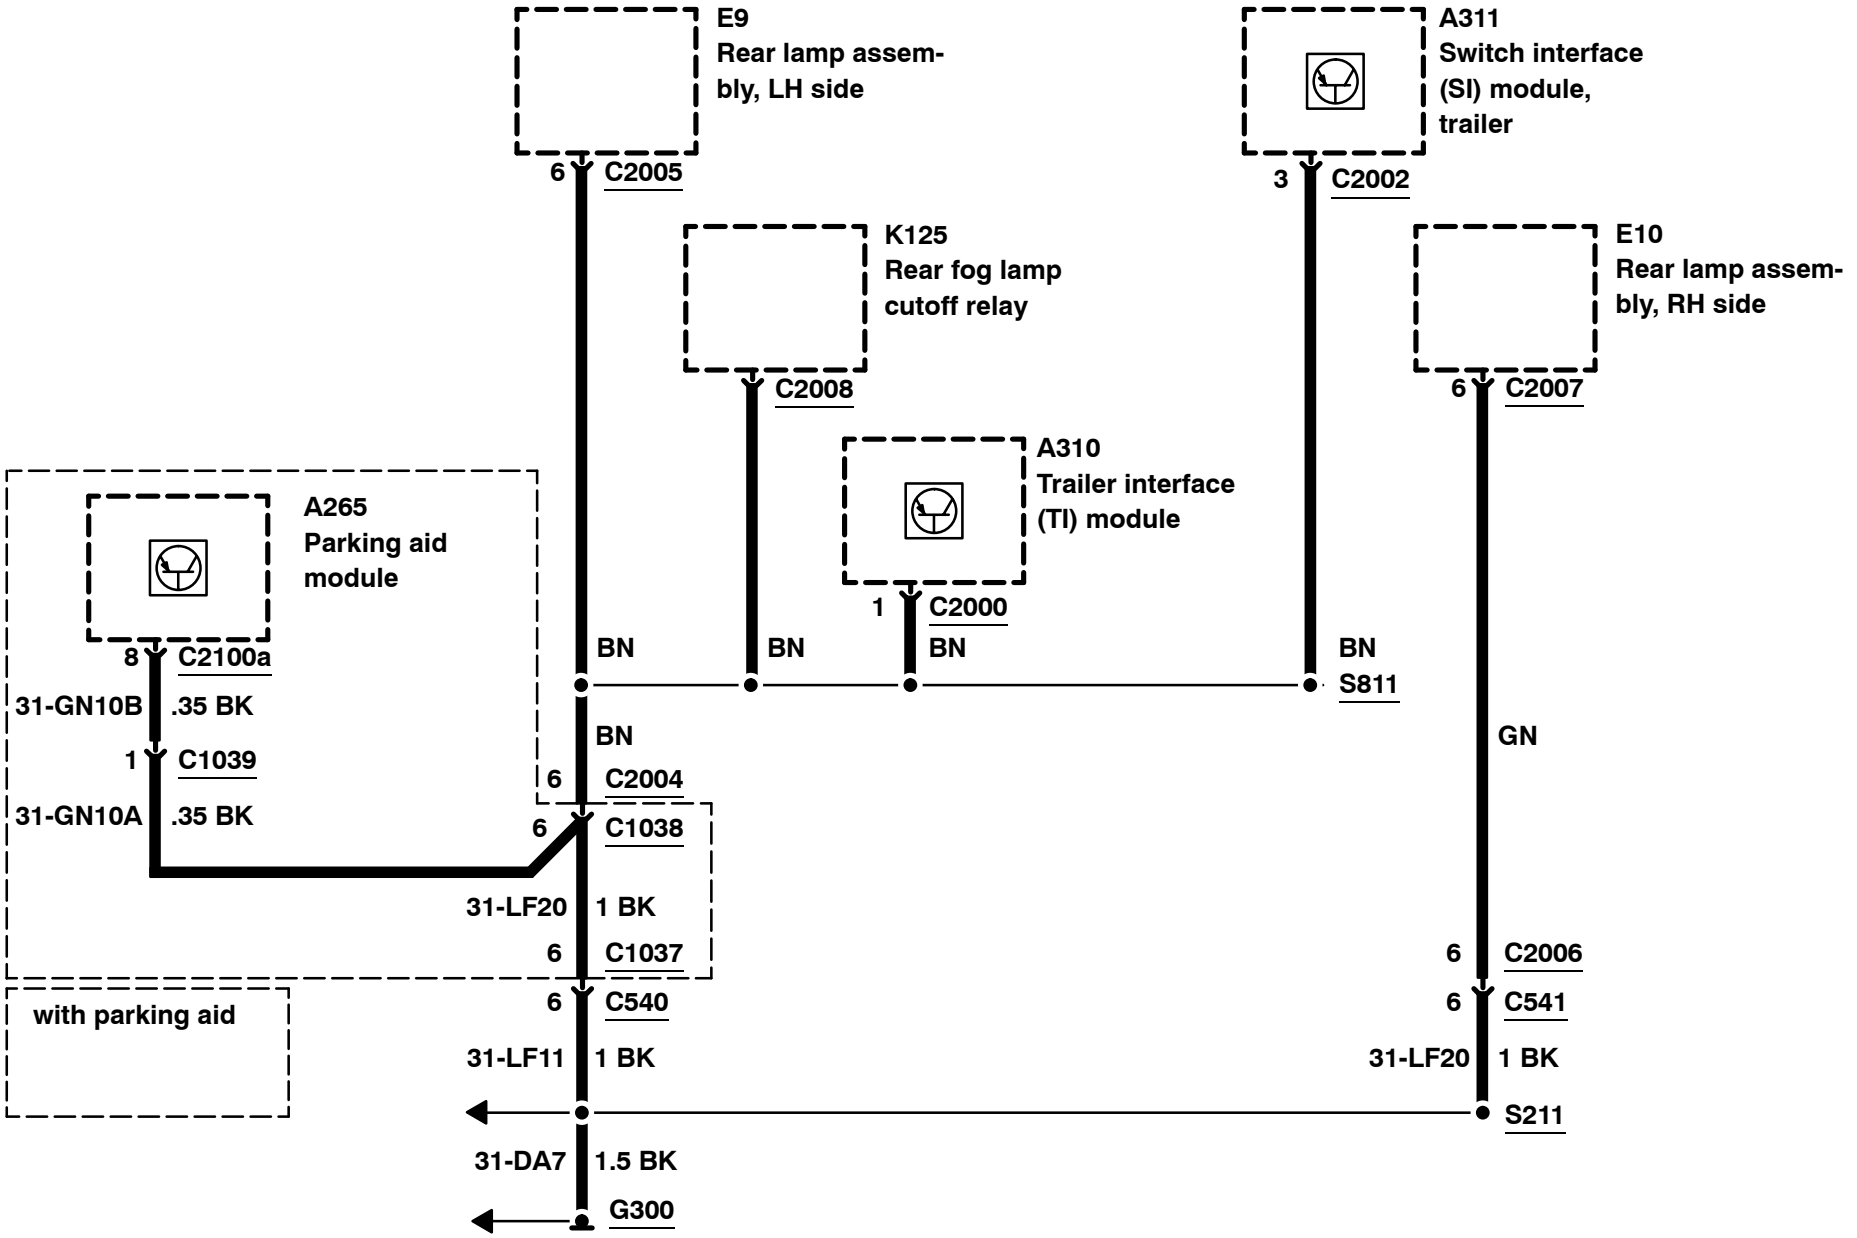


Ground Distribution – G300, with trailer socket, 4–door model/5–door model, as of 01/2004

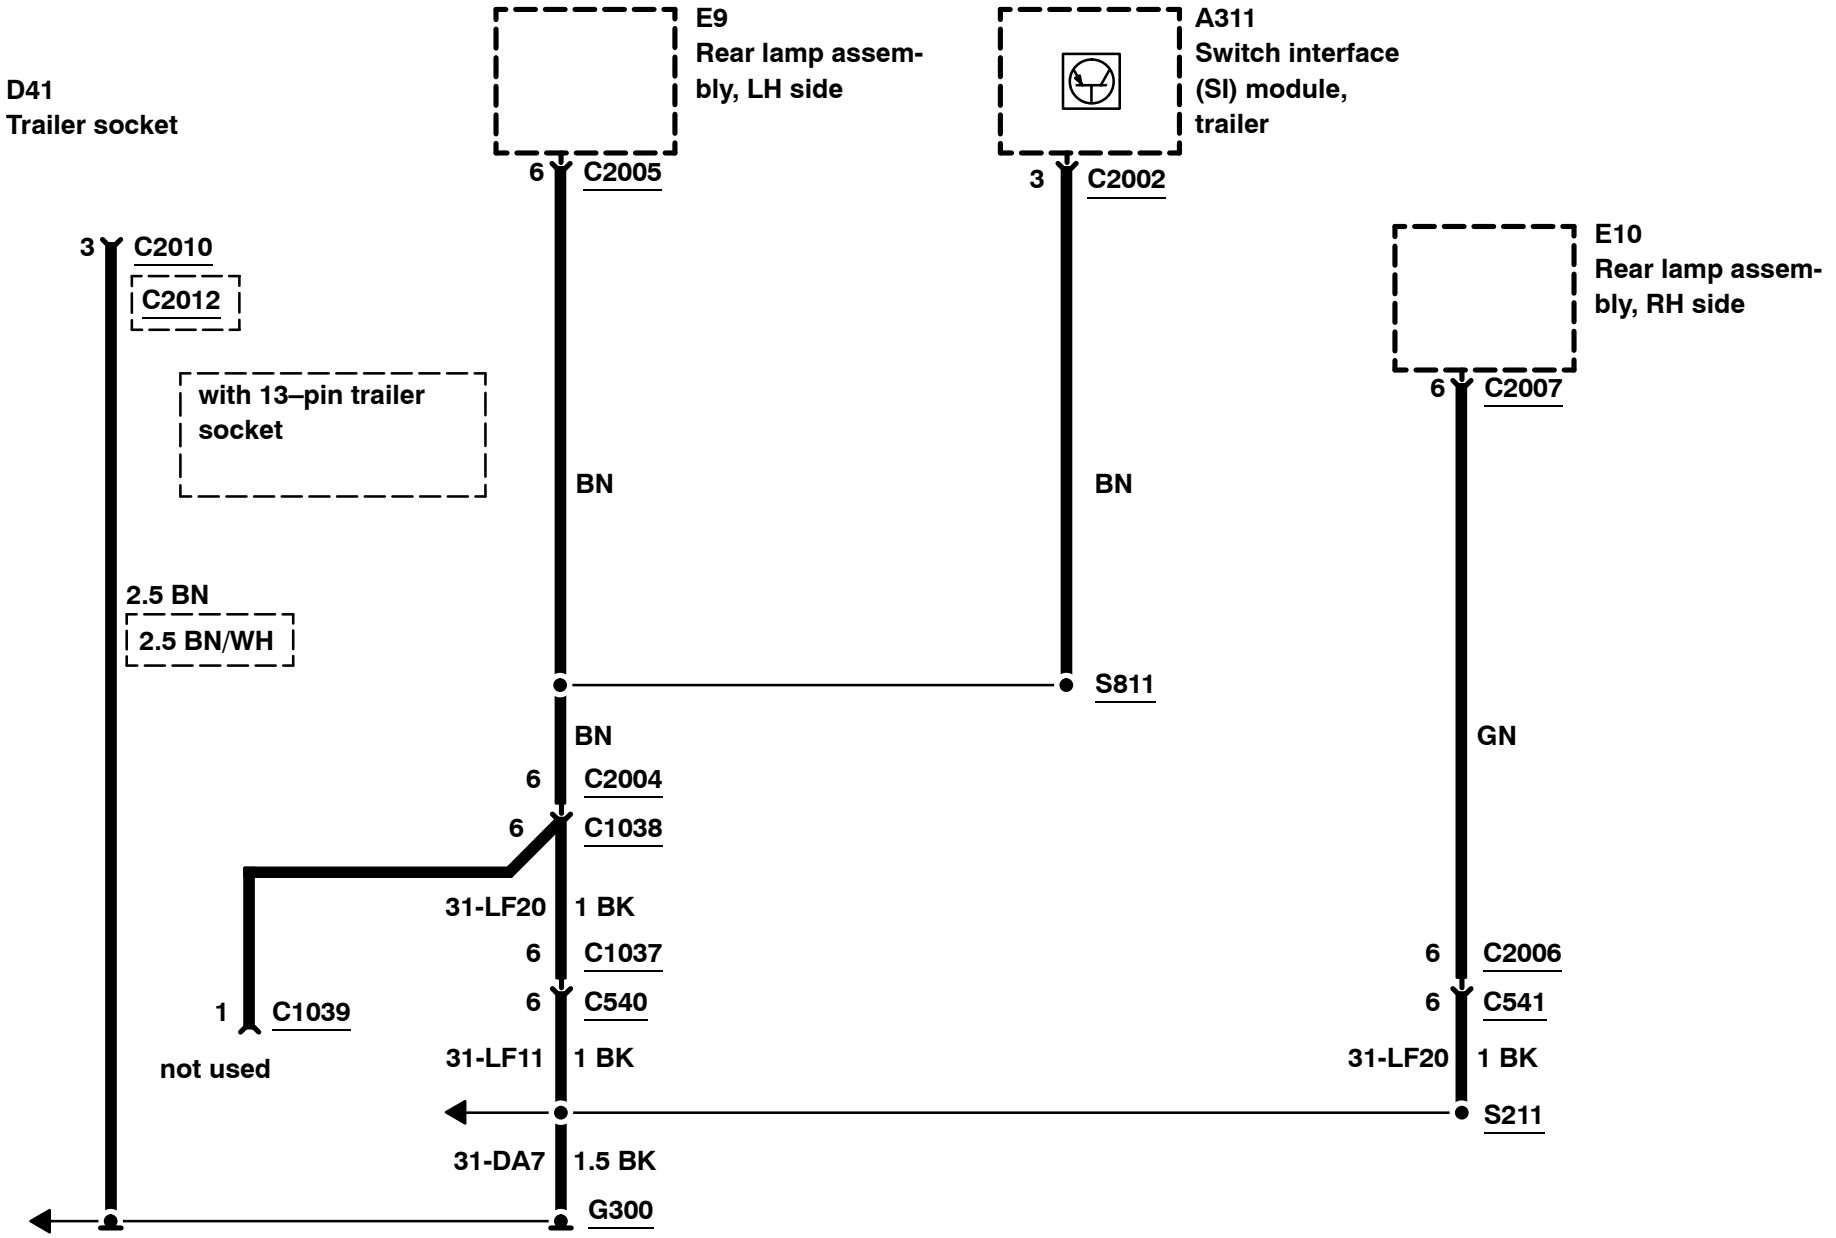


Ground Distribution – G300, without trailer socket, wagon

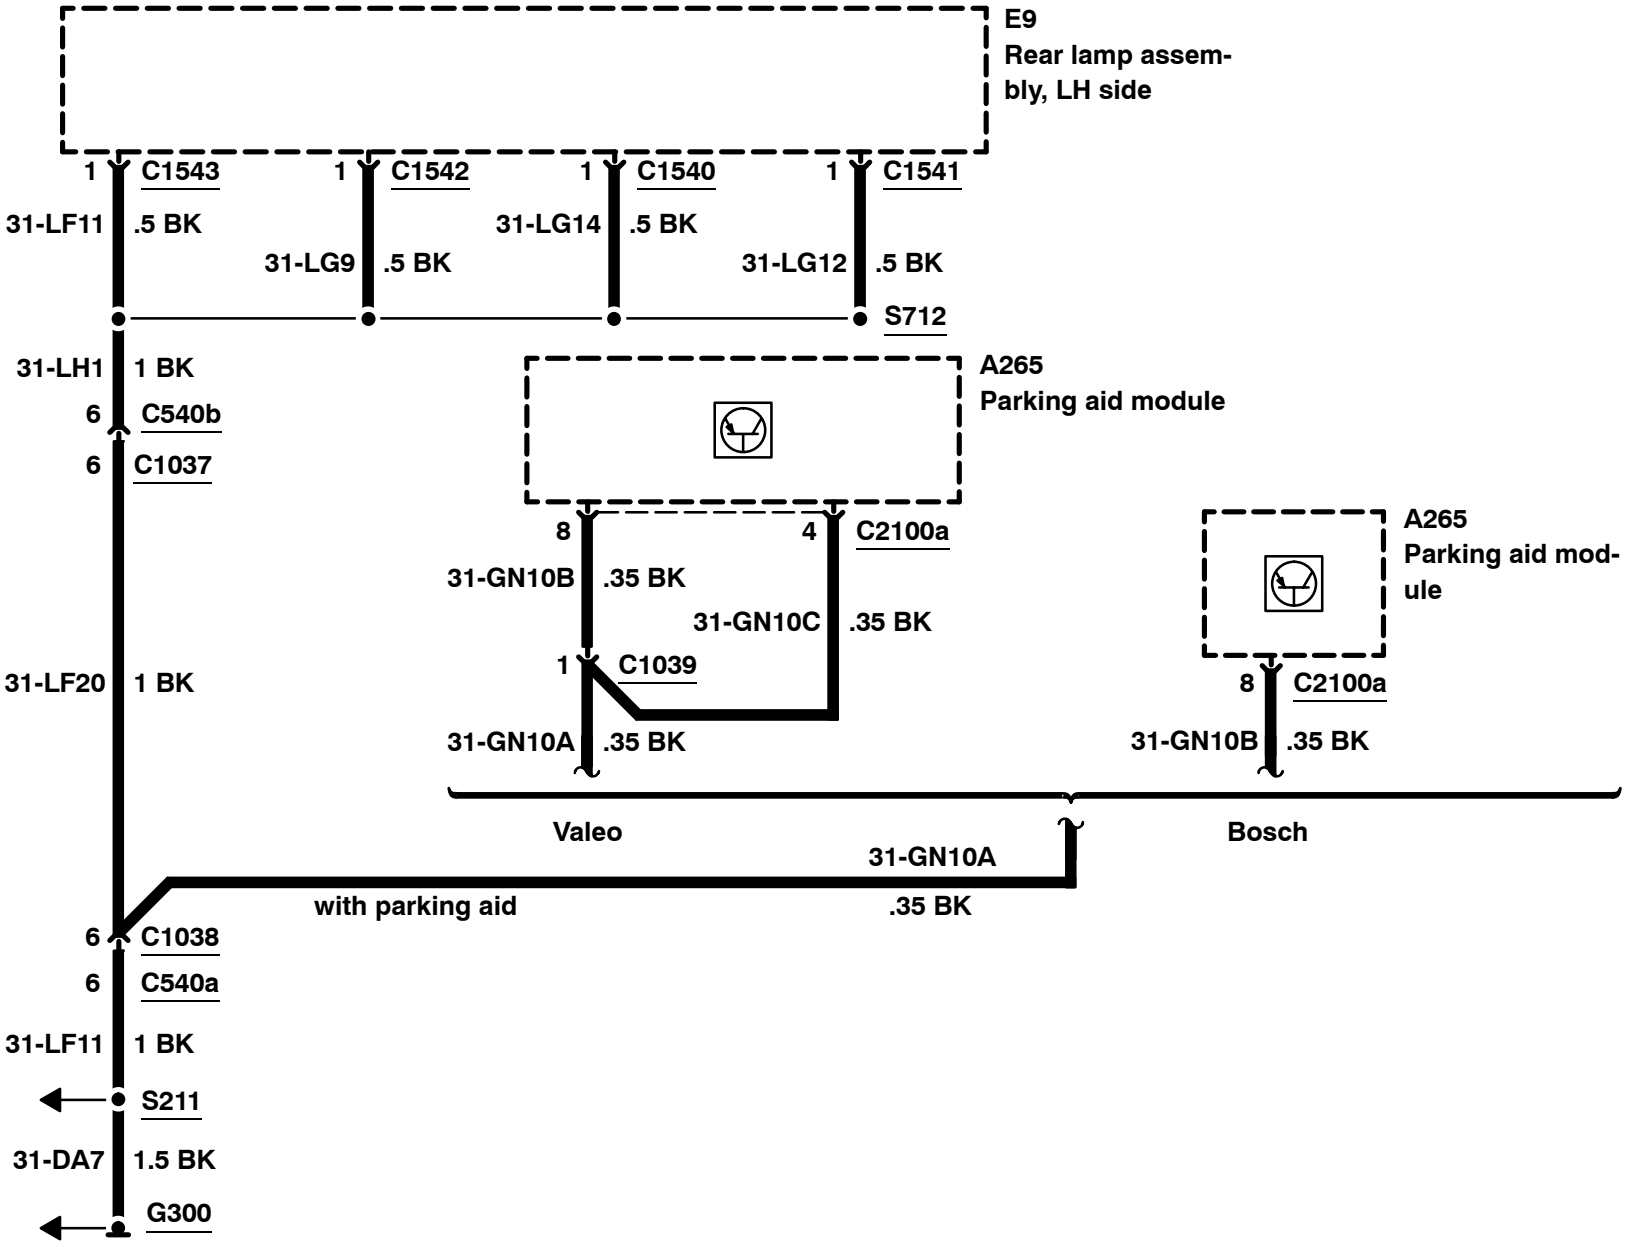


Ground Distribution – G300, with trailer socket, wagon, before 01/2004

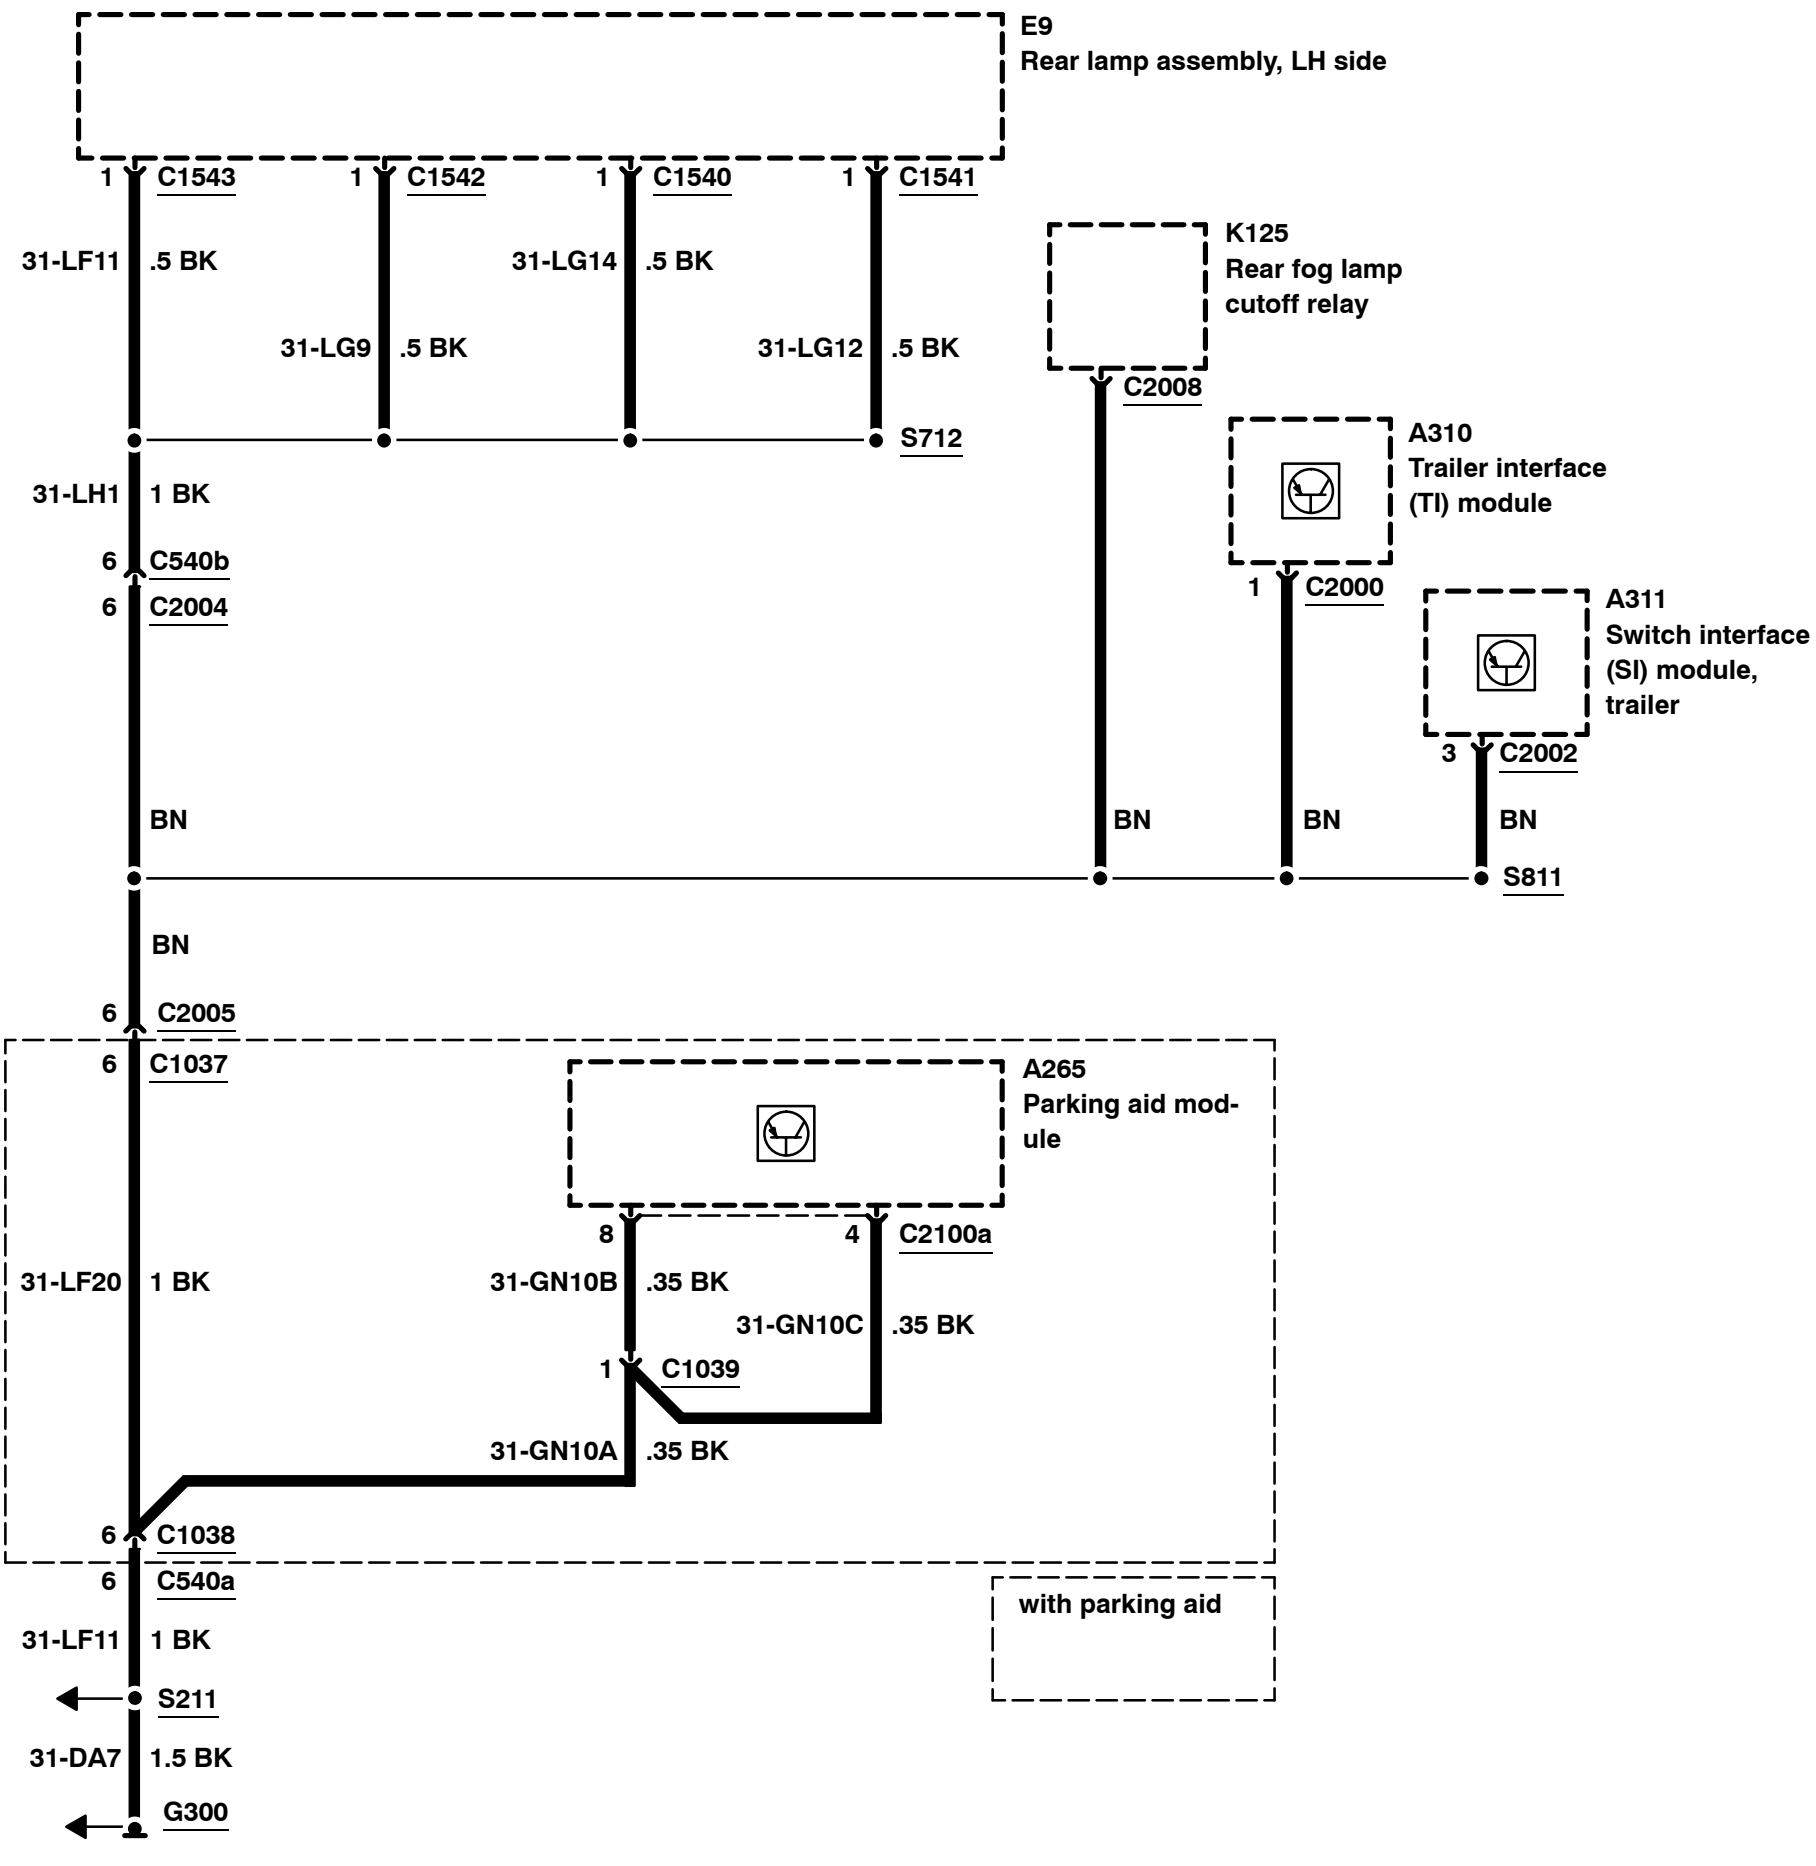


Ground Distribution – G300, with trailer socket, wagon, as of 01/2004

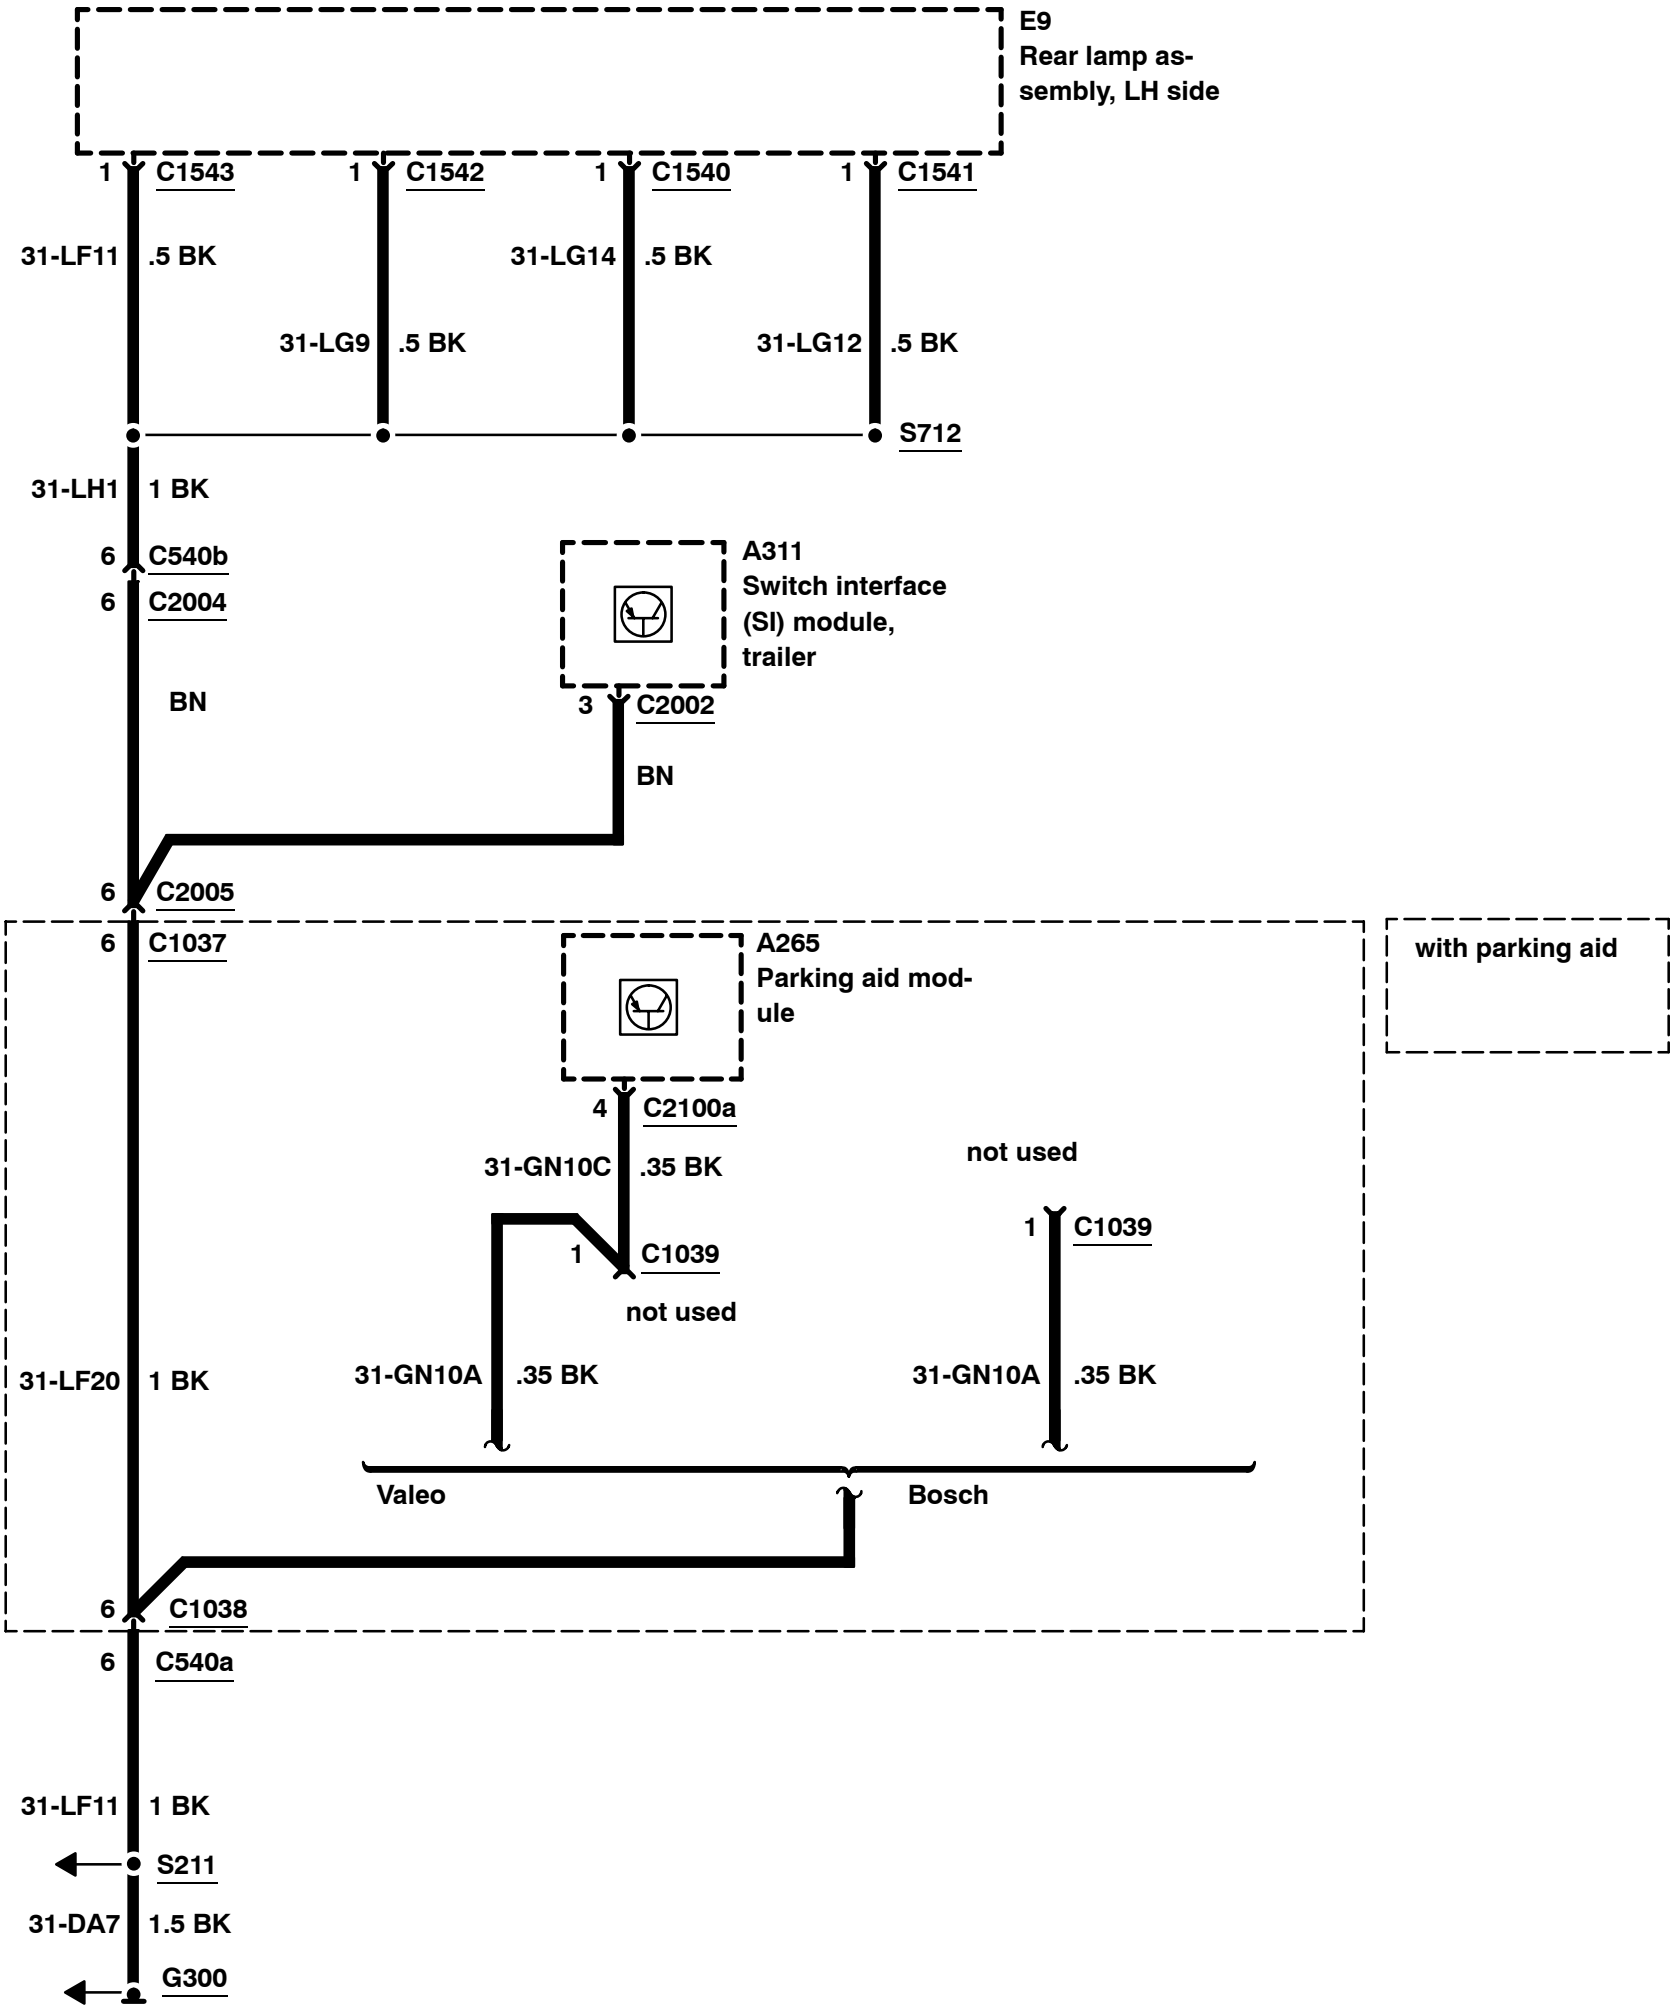


Ground Distribution – G300

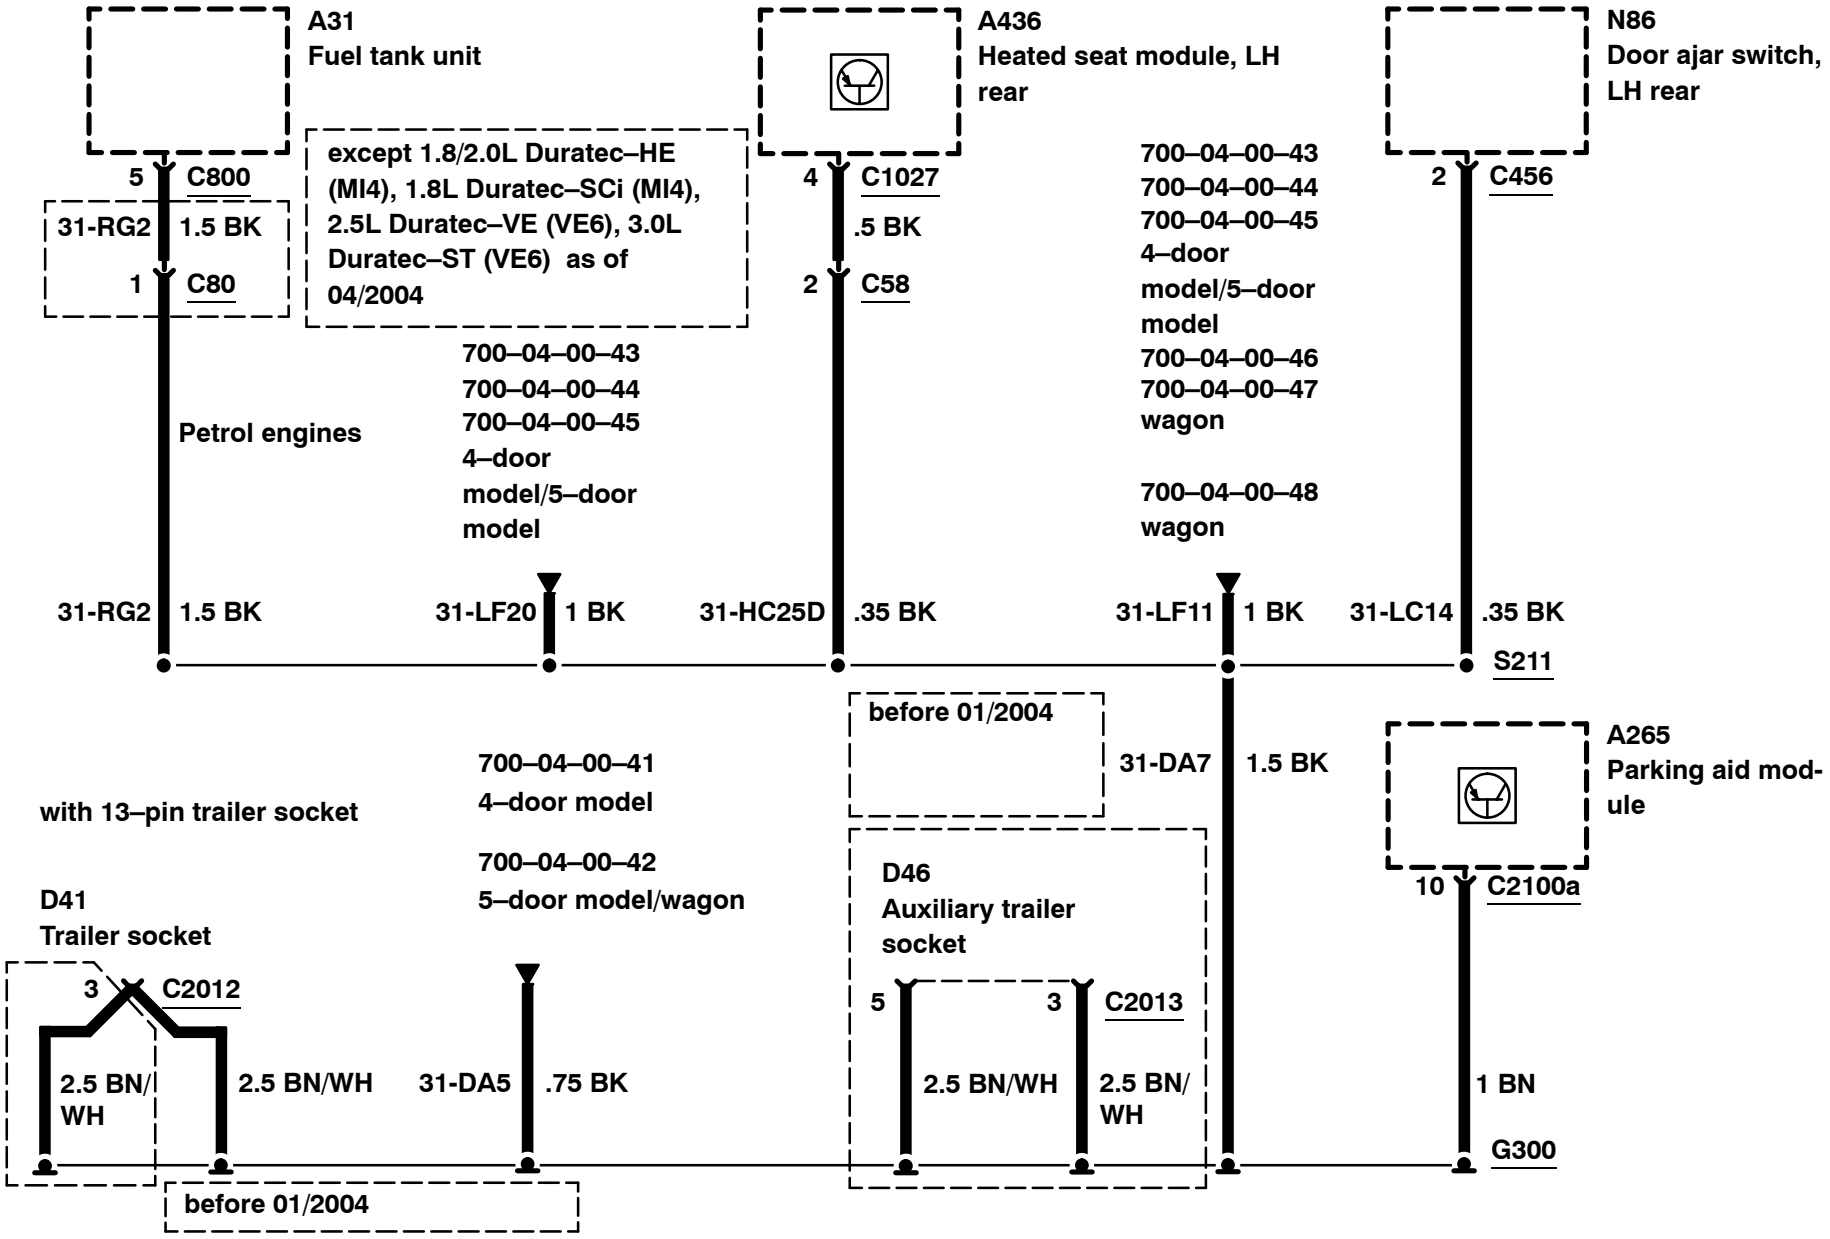

Ground Distribution – G301, 4–door model

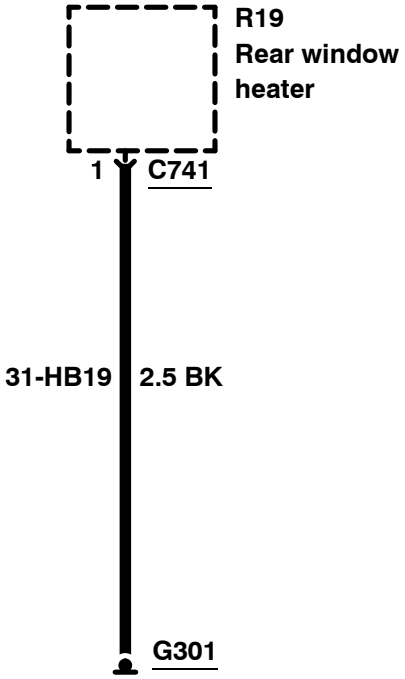


Ground Distribution – G302, G303, before 01/2004

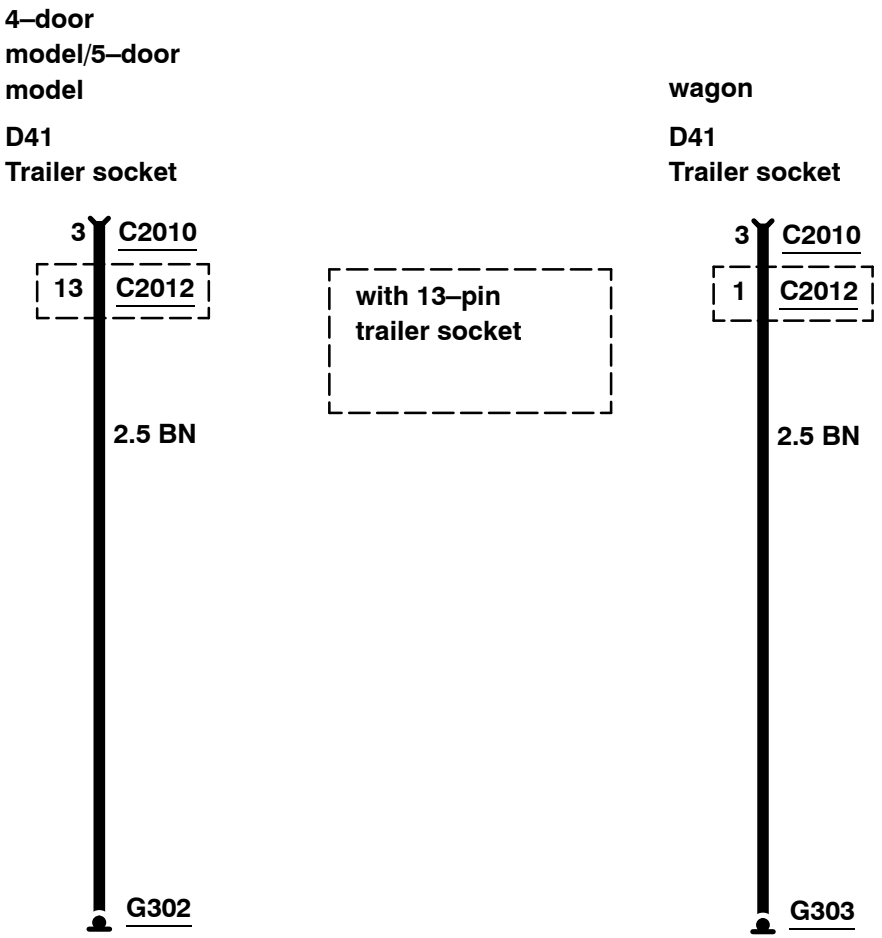

Ground Distribution – G302, G303, as of 01/2004

4–door model/5–door model


D41
Trailer socket

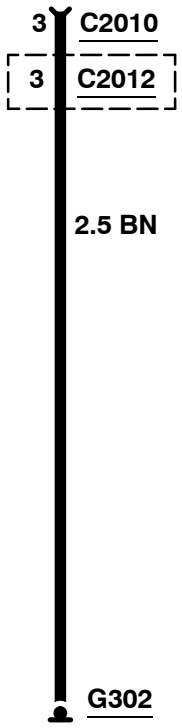


with 13–pin trailer socket

wagon


D41
Trailer socket

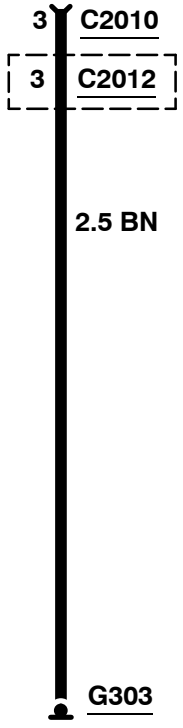

Ground Distribution – G304, with 7–pin trailer socket, as of 01/2004

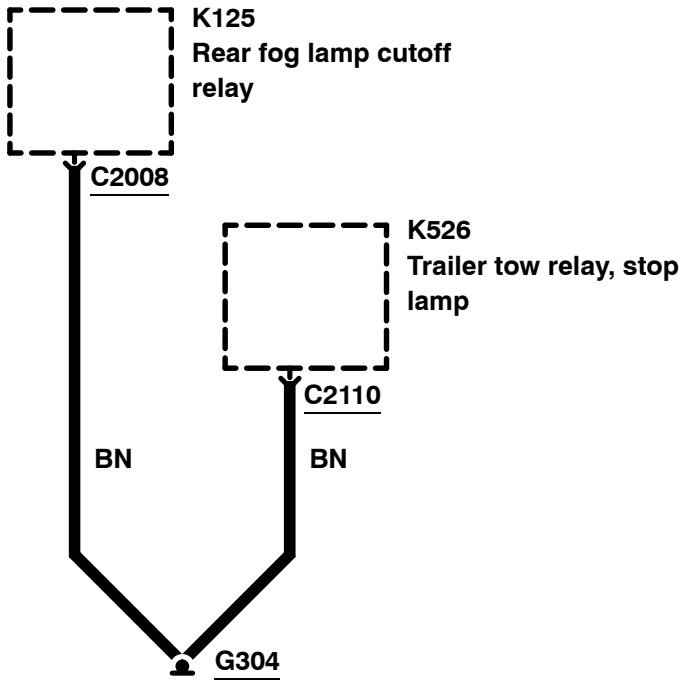

Ground Distribution – G304, with 13–pin trailer socket, as of 01/2004

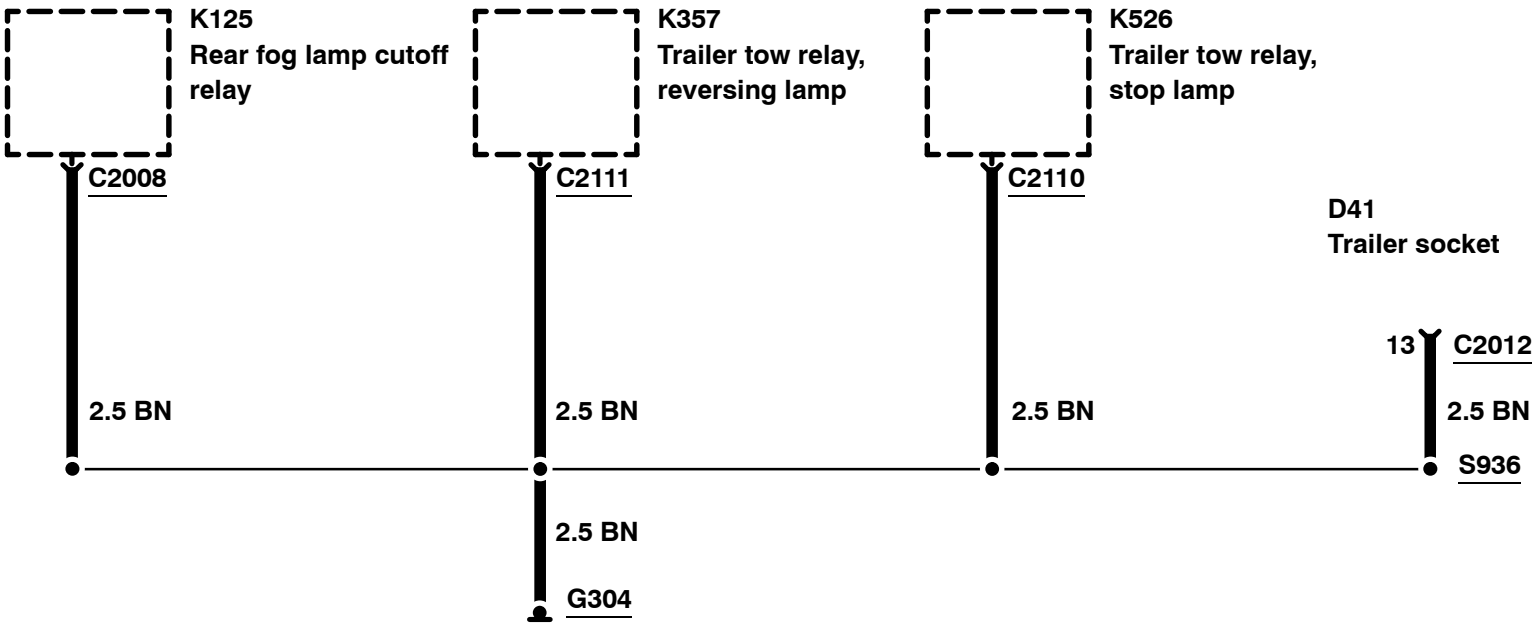

Components — Section 700–06–00

	Location	Page/coordinates
A7	ABS module engine compartment, bottom, LH side, rear – 1.8/2.0L Duratec–HE (MI4), automatic transmission	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – 1.8L Duratec–SCi (MI4)	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – 2.5L Duratec–VE (VE6)	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – 5–speed automatic transmission (5F31J), Petrol engines	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – before 08/2004	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – Data link connector, pin 7	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – F1, F2	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – F20, F21	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – F76, F77, before 04/2004	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – G103	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – Petrol engines, except 1.8L Duratec–SCi (MI4)	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear, 3.0L Duratec–ST (VE6)	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear	4 – D 2
A7	ABS module engine compartment, bottom, LH side, rear – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	6 – C 1
A7	ABS module engine compartment, bottom, LH side, rear – 5–speed automatic transmission (5F31J), Diesel engines	6 – C 1
A7	ABS module engine compartment, bottom, LH side, rear – Data link connector, pin 7	6 – C 1
A7	ABS module engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	6 – C 1

A7 ABS module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 6 – C 1
A7 ABS module
engine compartment, bottom, LH side, rear – Diesel engines . . . . . 6 – C 1
A7 ABS module
engine compartment, bottom, LH side, rear – F1, F2 . . . . . 6 – C 1
A7 ABS module
engine compartment, bottom, LH side, rear – F20, F21 . . . . . 6 – C 1
A7 ABS module
engine compartment, bottom, LH side, rear – G103 . . . . . 6 – C 1
A7 ABS module
engine compartment, bottom, LH side, rear . . . . . 6 – C 1
A7 ABS module
engine compartment, bottom, LH side, rear – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 81 – C 2
A7 ABS module
engine compartment, bottom, LH side, rear – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 81 – C 2
A7 ABS module
engine compartment, bottom, LH side, rear – as of 08/2004 . . . . . 81 – C 2
A7 ABS module
engine compartment, bottom, LH side, rear – Bosch 8.0 . . . . . 81 – C 2
A7 ABS module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004 . . . . . 81 – C 2
A7 ABS module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 81 – C 2
A7 ABS module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 81 – C 2
A7 ABS module
engine compartment, bottom, LH side, rear – F76, F77, as of 04/2004 . . . . . 81 – C 2
A11 Radio
dash panel, centre console – Bluetooth voice control . . . . . 23 – D 2
A11 Radio
dash panel, centre console – Data link connector, pin 7 . . . . . 23 – D 2
A11 Radio
dash panel, centre console – Data link connector, pins 3 and 11, with external CD changer and video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – Data link connector, pins 3 and 11, with external CD changer or video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – Data link connector, pins 3 and 11, with voice control . . . . . 23 – D 2

A11 Radio
dash panel, centre console – Data link connector, pins 3 and 11, without external CD changer and video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – DVD navigation system with touch screen . . . . . 23 – D 2
A11 Radio
dash panel, centre console – DVD navigation system with touch screen – with video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – F69, with external CD changer and/or video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – F69, without external CD changer and video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – F72, with external CD changer and/or video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – F72, without external CD changer and video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – G201, except DVD navigation system with touch screen, as of 04/2004 . . . . . 23 – D 2
A11 Radio
dash panel, centre console – G201, except DVD navigation system with touch screen, before 04/2004 . . . . . 23 – D 2
A11 Radio
dash panel, centre console – G201, with DVD navigation system with touch screen, before 04/2004 . . . . . 23 – D 2
A11 Radio
dash panel, centre console – with DVD navigation system with touch screen . . . . . 23 – D 2
A11 Radio
dash panel, centre console – with external CD changer . . . . . 23 – D 2
A11 Radio
dash panel, centre console – with external CD changer and/or video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – with video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console – without DVD navigation system with touch screen . . . . . 23 – D 2
A11 Radio
dash panel, centre console – without external CD changer and video system . . . . . 23 – D 2
A11 Radio
dash panel, centre console . . . . . 23 – D 2
A11 Radio
dash panel, centre console – Data link connector, pin 7 . . . . . 25 – C 2
A11 Radio
dash panel, centre console – DVD navigation system with touch screen . . . . . 25 – C 2
A11 Radio
dash panel, centre console – with DVD navigation system with touch screen . . . . . 25 – C 2
A11 Radio
dash panel, centre console – with external CD changer . . . . . 25 – C 2
A11 Radio
dash panel, centre console – without DVD navigation system with touch screen . . . . . 25 – C 2

A11	Radio dash panel, centre	25 – C 2
A26	Roof opening panel module roof, front, centre – 1.8/2.0L Duratec–HE (MI4)	21 – E 5
A26	Roof opening panel module roof, front, centre – 1.8L Duratec–SCi (MI4)	21 – E 5
A26	Roof opening panel module roof, front, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	21 – E 5
A26	Roof opening panel module roof, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel	21 – E 5
A26	Roof opening panel module roof, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	21 – E 5
A26	Roof opening panel module roof, front, centre – 2.5L Duratec–VE (VE6)	21 – E 5
A26	Roof opening panel module roof, front, centre – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	21 – E 5
A26	Roof opening panel module roof, front, centre – 3.0L Duratec–ST (VE6)	21 – E 5
A26	Roof opening panel module roof, front, centre – Diesel engines	21 – E 5
A26	Roof opening panel module roof, front, centre – F73	21 – E 5
A26	Roof opening panel module roof, front, centre – F91	21 – E 5
A26	Roof opening panel module roof, front, centre – front and rear power windows, Passenger side front	21 – E 5
A26	Roof opening panel module roof, front, centre – Front power windows, Driver side	21 – E 5
A26	Roof opening panel module roof, front, centre – G200	21 – E 5
A26	Roof opening panel module roof, front, centre – Petrol engines	21 – E 5
A26	Roof opening panel module roof, front, centre – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	21 – E 5
A26	Roof opening panel module roof, front, centre – Pre–equipment pack, Diesel engines	21 – E 5
A26	Roof opening panel module roof, front, centre – Pre–equipment pack, Petrol engines	21 – E 5
A27	Speed control module engine compartment, rear, LH side – 1.8/2.0L Duratec–HE (MI4)	4 – A 1
A27	Speed control module engine compartment, rear, LH side – 1.8/2.0L Duratec–HE (MI4), manual transmission	4 – A 1
A27	Speed control module engine compartment, rear, LH side – 2.5L Duratec–VE (VE6)	4 – A 1
A27	Speed control module engine compartment, rear, LH side – 2.5L Duratec–VE (VE6), manual transmission	4 – A 1

A27	Speed control module engine compartment, rear, LH side – 3.0L Duratec–SE (VE6)	4 – A 1
A27	Speed control module engine compartment, rear, LH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – A 1
A27	Speed control module engine compartment, rear, LH side – 3.0L Duratec–ST (VE6)	4 – A 1
A27	Speed control module engine compartment, rear, LH side – F82, Petrol engines	4 – A 1
A27	Speed control module engine compartment, rear, LH side – G104	4 – A 1
A27	Speed control module engine compartment, rear, LH side – Petrol engines	4 – A 1
A27	Speed control module engine compartment, rear, LH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	4 – A 1
A27	Speed control module engine compartment, rear, LH side – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	4 – A 1
A27	Speed control module engine compartment, rear, LH side	4 – A 1
A30	Instrument cluster dash panel, driver side – 1.8L Duratec–SCi (MI4), as of 04/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – 1.8L Duratec–SCi (MI4), before 04/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	23 – E 4
A30	Instrument cluster dash panel, driver side – 2.0L Duratorq–TDCi (Puma) Diesel	23 – E 4
A30	Instrument cluster dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel	23 – E 4
A30	Instrument cluster dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	23 – E 4
A30	Instrument cluster dash panel, driver side – 3.0L Duratec–SE (VE6)	23 – E 4
A30	Instrument cluster dash panel, driver side – 3.0L Duratec–ST (VE6)	23 – E 4
A30	Instrument cluster dash panel, driver side – 5–speed automatic transmission (5F31J)	23 – E 4
A30	Instrument cluster dash panel, driver side – as of 08/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – before 08/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – Bosch 8.0	23 – E 4
A30	Instrument cluster dash panel, driver side – Data link connector, pin 7	23 – E 4
A30	Instrument cluster dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	23 – E 4

A30	Instrument cluster dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – Diesel engines	23 – E 4
A30	Instrument cluster dash panel, driver side – Diesel engines, with fuel fired heater	23 – E 4
A30	Instrument cluster dash panel, driver side – Diesel engines, with fuel fired heater, as of 08/2004	23 – E 4
A30	Instrument cluster dash panel, driver side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	23 – E 4
A30	Instrument cluster dash panel, driver side – F63, 4–door model/5–door model	23 – E 4
A30	Instrument cluster dash panel, driver side – F63, wagon	23 – E 4
A30	Instrument cluster dash panel, driver side – F69, with external CD changer and/or video system	23 – E 4
A30	Instrument cluster dash panel, driver side – F69, without external CD changer and video system	23 – E 4
A30	Instrument cluster dash panel, driver side – F75, 5–speed automatic transmission (5F31J)	23 – E 4
A30	Instrument cluster dash panel, driver side – F75, except 5–speed automatic transmission (5F31J)	23 – E 4
A30	Instrument cluster dash panel, driver side – F78, F80	23 – E 4
A30	Instrument cluster dash panel, driver side – G203	23 – E 4
A30	Instrument cluster dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	23 – E 4
A30	Instrument cluster dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	23 – E 4
A30	Instrument cluster dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	23 – E 4
A30	Instrument cluster dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	23 – E 4

A30 Instrument cluster
dash panel, driver side – Heated windshield . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Ignition switch automatic transmission . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – LHD . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Parking Lamps, with trailer socket, wagon, with autolamps . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Parking Lamps, with trailer socket, wagon, without autolamps . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Parking Lamps, without trailer socket, wagon, with autolamps . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Parking Lamps, without trailer socket, wagon, without autolamps 23 – E 4
A30 Instrument cluster
dash panel, driver side – Petrol engines . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – Turn Signal and Hazard Lamps . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – with autolamps . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – with daytime running lamps . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – with trailer socket, 4–door model/5–door model . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – with trailer socket, wagon . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – without daytime running lamps, without autolamps . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – without trailer socket, 4–door model/5–door model . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – without trailer socket, wagon . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side . . . . . 23 – E 4
A30 Instrument cluster
dash panel, driver side – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 25 – C 5

A30 Instrument cluster
dash panel, driver side – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – 3.0L Duratec–SE (VE6) . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – 3.0L Duratec–ST (VE6) . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – 5–speed automatic transmission (5F31J) . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – as of 08/2004 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Data link connector, pin 7 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 25 – C 5
A30 Instrument cluster
dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 25 – C 5
A30 Instrument cluster
dash panel, driver side – Diesel engines . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Diesel engines, with fuel fired heater . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Diesel engines, with fuel fired heater, as of 08/2004 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) . 25 – C 5
A30 Instrument cluster
dash panel, driver side – F63, 4–door model/5–door model . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – F63, wagon . . . . . 25 – C 5

A30 Instrument cluster
dash panel, driver side – F75, 5–speed automatic transmission (5F31J) . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – F75, except 5–speed automatic transmission (5F31J) . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – F78, F80 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – G203 . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Heated windshield . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Ignition switch automatic transmission . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Parking Lamps, with trailer socket, wagon, with autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Parking Lamps, with trailer socket, wagon, without autolamps . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Parking Lamps, without trailer socket, wagon, with autolamps . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Parking Lamps, without trailer socket, wagon, without autolamps 25 – C 5
A30 Instrument cluster
dash panel, driver side – Petrol engines . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – RHD . . . . . 25 – C 5

A30 Instrument cluster
dash panel, driver side – Turn Signal and Hazard Lamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – with autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – with daytime running lamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – with trailer socket, 4–door model/5–door model . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – with trailer socket, wagon . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – without daytime running lamps, without autolamps . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – without trailer socket, 4–door model/5–door model . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side – without trailer socket, wagon . . . . . 25 – C 5
A30 Instrument cluster
dash panel, driver side . . . . . 25 – C 5
A31 Fuel tank unit
vehicle underbody, on fuel tank – 1.8/2.0L Duratec–HE (MI4) . . . . . 53 – B 4
A31 Fuel tank unit
vehicle underbody, on fuel tank – 1.8L Duratec–SCi (MI4) . . . . . 53 – B 4
A31 Fuel tank unit
vehicle underbody, on fuel tank – 2.5L Duratec–VE (VE6) . . . . . 53 – B 4
A31 Fuel tank unit
vehicle underbody, on fuel tank – 3.0L Duratec–SE (VE6) . . . . . 53 – B 4
A31 Fuel tank unit
vehicle underbody, on fuel tank – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 53 – B 4
A31 Fuel tank unit
vehicle underbody, on fuel tank – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 53 – B 4
A31 Fuel tank unit
vehicle underbody, on fuel tank – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 53 – B 4
A31 Fuel tank unit
vehicle underbody, on fuel tank – G300 . . . . . 53 – B 4
A31 Fuel tank unit
vehicle underbody, on fuel tank . . . . . 53 – B 4
A39 Clock
dash panel, centre – 1.8/2.0L Duratec–HE (MI4) . . . . . 23 – E 5
A39 Clock
dash panel, centre – 1.8L Duratec–SCi (MI4) . . . . . 23 – E 5
A39 Clock
dash panel, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 23 – E 5
A39 Clock
dash panel, centre – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 23 – E 5
A39 Clock
dash panel, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 23 – E 5
A39 Clock
dash panel, centre – 2.5L Duratec–VE (VE6) . . . . . 23 – E 5

A39 Clock
dash panel, centre – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 23 – E 5
A39 Clock
dash panel, centre – Diesel engines . . . . . 23 – E 5
A39 Clock
dash panel, centre – F75, 5–speed automatic transmission (5F31J) . . . . . 23 – E 5
A39 Clock
dash panel, centre – F75, except 5–speed automatic transmission (5F31J) . . . . . 23 – E 5
A39 Clock
dash panel, centre – G204, as of 04/2004 . . . . . 23 – E 5
A39 Clock
dash panel, centre – G204, before 04/2004 . . . . . 23 – E 5
A39 Clock
dash panel, centre – LHD . . . . . 23 – E 5
A39 Clock
dash panel, centre – Petrol engines . . . . . 23 – E 5
A39 Clock
dash panel, centre . . . . . 23 – E 5
A39 Clock
dash panel, centre – 1.8/2.0L Duratec–HE (MI4) . . . . . 25 – E 5
A39 Clock
dash panel, centre – 1.8L Duratec–SCi (MI4) . . . . . 25 – E 5
A39 Clock
dash panel, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 25 – E 5
A39 Clock
dash panel, centre – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – E 5
A39 Clock
dash panel, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – E 5
A39 Clock
dash panel, centre – 2.5L Duratec–VE (VE6) . . . . . 25 – E 5
A39 Clock
dash panel, centre – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 25 – E 5
A39 Clock
dash panel, centre – Diesel engines . . . . . 25 – E 5
A39 Clock
dash panel, centre – F75, 5–speed automatic transmission (5F31J) . . . . . 25 – E 5
A39 Clock
dash panel, centre – F75, except 5–speed automatic transmission (5F31J) . . . . . 25 – E 5
A39 Clock
dash panel, centre – G204, as of 04/2004 . . . . . 25 – E 5
A39 Clock
dash panel, centre – G204, before 04/2004 . . . . . 25 – E 5
A39 Clock
dash panel, centre – Petrol engines . . . . . 25 – E 5
A39 Clock
dash panel, centre – RHD . . . . . 25 – E 5
A39 Clock
dash panel, centre . . . . . 25 – E 5

A40	Transmission hardware unit transmission – 1.8/2.0L Duratec–HE (MI4)	61 – E 3
A40	Transmission hardware unit transmission – 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – E 3
A40	Transmission hardware unit transmission – 4–speed automatic transmission (CD4E)	61 – E 3
A40	Transmission hardware unit transmission – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – E 3
A40	Transmission hardware unit transmission – 5–speed automatic transmission (5F31J)	
A42	Driver air bag unit in steering wheel – 5–speed automatic transmission (5F31J)	37 – F 2
A42	Driver air bag unit in steering wheel – Driver air bag	37 – F 2
A42	Driver air bag unit in steering wheel	37 – F 2
A43	Passenger air bag unit dash panel, in glove compartment – Passenger air bag	23 – C 5
A43	Passenger air bag unit dash panel, in glove compartment – Passenger air bag	25 – E 4
A74	Diesel pump unit engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – A 4
A74	Diesel pump unit engine – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – A 4
A74	Diesel pump unit engine – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	
A74	Diesel pump unit engine – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	
A97	Blower motor control module engine – EATC, as of 04/2004	
A97	Blower motor control module engine – EATC, before 04/2004	
A97	Blower motor control module engine – F76, F77, as of 04/2004	
A97	Blower motor control module engine – G204, as of 04/2004	
A97	Blower motor control module engine – G204, before 04/2004	
A97	Blower motor control module engine – with EATC, as of 04/2004	
A97	Blower motor control module engine – with EATC, before 04/2004	
A102	Passive anti–theft system transceiver module on steering column – 1.8/2.0L Duratec–HE (MI4)	37 – D 3
A102	Passive anti–theft system transceiver module on steering column – 1.8L Duratec–SCi (MI4)	37 – D 3

A102 Passive anti–theft system transceiver module on steering column – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – 2.5L Duratec–VE (VE6) . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – Diesel engines . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – F67, 1.8/2.0L Duratec–HE (MI4) . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – F67, 1.8L Duratec–SCi (MI4) . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – F67, 2.5L Duratec–VE (VE6) . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – F67, 3.0L Duratec–SE (VE6) . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – F67, 3.0L Duratec–ST (VE6) . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – F67, Diesel engines . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – G203 . . . . . 37 – D 3
A102 Passive anti–theft system transceiver module on steering column – Petrol engines . . . . . 37 – D 3
A112 Generic Electronic Module (GEM) RH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . 17 – B 2
A112 Generic Electronic Module (GEM) RH A–pillar – 3.0L Duratec–SE (VE6) . . . . . 17 – B 2
A112 Generic Electronic Module (GEM) RH A–pillar – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 17 – B 2
A112 Generic Electronic Module (GEM) RH A–pillar – 3.0L Duratec–ST (VE6) . . . . . 17 – B 2
A112 Generic Electronic Module (GEM) RH A–pillar – 4–speed automatic transmission (CD4E) . . . . . 17 – B 2
A112 Generic Electronic Module (GEM) RH A–pillar – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . 17 – B 2
A112 Generic Electronic Module (GEM) RH A–pillar – 4–speed automatic transmission (CD4E), wagon . . . . . 17 – B 2
A112 Generic Electronic Module (GEM) RH A–pillar – 5–speed automatic transmission (5F31J) . . . . . 17 – B 2
A112 Generic Electronic Module (GEM) RH A–pillar – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . 17 – B 2
A112 Generic Electronic Module (GEM) RH A–pillar – 5–speed automatic transmission (5F31J), wagon . . . . . 17 – B 2

A112 Generic Electronic Module (GEM)
RH A–pillar – Data link connector, pin 7 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Data link connector, pins 3 and 11, with external CD changer and video system . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Data link connector, pins 3 and 11, with external CD changer or video system . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Data link connector, pins 3 and 11, with voice control . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Data link connector, pins 3 and 11, without external CD changer and video system . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Diesel engines . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Diesel engines, with fuel fired heater . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Diesel engines, with fuel fired heater, as of 08/2004 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – DVD navigation system with touch screen . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – F24, F25 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – F97 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – front and rear power windows, Driver side front . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – front and rear power windows, LH rear door . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – front and rear power windows, Passenger side front . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – front and rear power windows, RH rear door . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Front power windows, Driver side . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Front power windows, Passenger side . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – G203 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – G205 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Heated rear window, Heated exterior mirrors . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Heated windshield . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Ignition switch automatic transmission . . . . . 17 – B 2

A112 Generic Electronic Module (GEM)
RH A–pillar – LHD . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Licence plate lamps . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Petrol engines . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Pre–equipment pack . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Reversing lamps, without trailer socket, wagon . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – RHD . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Turn Signal and Hazard Lamps . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – with autolamps . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – with daytime running lamps . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – with external CD changer and/or video system . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – with rain sensor . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – With rear window wiper . . . . . 17 – B 2
A112 Generic Electronic Module (GEM)
RH A–pillar – With rear window wiper, with headlamp washer . . . . . 17 – B 2

A112	Generic Electronic Module (GEM) RH A–pillar – With rear window wiper, without headlamp washer	17 – B 2
A112	Generic Electronic Module (GEM) RH A–pillar – with variable intermittent wipe	17 – B 2
A112	Generic Electronic Module (GEM) RH A–pillar – without daytime running lamps, without autolamps	17 – B 2
A112	Generic Electronic Module (GEM) RH A–pillar – without external CD changer and video system	17 – B 2
A112	Generic Electronic Module (GEM) RH A–pillar – Without rear window wiper, with headlamp washer	17 – B 2
A112	Generic Electronic Module (GEM) RH A–pillar – Without rear window wiper, without headlamp washer	17 – B 2
A112	Generic Electronic Module (GEM) RH A–pillar	17 – B 2
A141	Control assembly centre console	
A144	CD changer in luggage compartment, LH side – Data link connector, pins 3 and 11, with external CD changer and video system	
A144	CD changer in loading space, LH side – Data link connector, pins 3 and 11, with external CD changer and video system	
A144	CD changer in luggage compartment, LH side – Data link connector, pins 3 and 11, with external CD changer or video system	
A144	CD changer in loading space, LH side – Data link connector, pins 3 and 11, with external CD changer or video system	
A144	CD changer in luggage compartment, LH side – DVD navigation system with touch screen	
A144	CD changer in loading space, LH side – DVD navigation system with touch screen	
A144	CD changer in luggage compartment, LH side – F71, except DVD navigation system with touch screen, with video system	
A144	CD changer in loading space, LH side – F71, except DVD navigation system with touch screen, with video system	
A144	CD changer in luggage compartment, LH side – F71, except DVD navigation system with touch screen, without video system	
A144	CD changer in loading space, LH side – F71, except DVD navigation system with touch screen, without video system	
A144	CD changer in luggage compartment, LH side – F71, with DVD navigation system with touch screen	
A144	CD changer in loading space, LH side – F71, with DVD navigation system with touch screen	

A144 CD changer
in luggage compartment, LH side – G201, except DVD navigation system with touch screen, as of 04/2004

A144 CD changer
in loading space, LH side – G201, except DVD navigation system with touch screen, as of 04/2004

A144 CD changer
in luggage compartment, LH side – G201, except DVD navigation system with touch screen, before 04/2004

A144 CD changer
in loading space, LH side – G201, except DVD navigation system with touch screen, before 04/2004

A144 CD changer
in luggage compartment, LH side – G201, with DVD navigation system with touch screen, before 04/2004

A144 CD changer
in loading space, LH side – G201, with DVD navigation system with touch screen, before 04/2004

A144 CD changer
in luggage compartment, LH side – with DVD navigation system with touch screen

A144 CD changer
in loading space, LH side – with DVD navigation system with touch screen

A144 CD changer
in luggage compartment, LH side – with external CD changer

A144 CD changer
in loading space, LH side – with external CD changer

A144 CD changer
in luggage compartment, LH side – without DVD navigation system with touch screen

A144 CD changer
in loading space, LH side – without DVD navigation system with touch screen

A144 CD changer
in luggage compartment, LH side

A144 CD changer
in loading space, LH side

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 1.8/2.0L Duratec–HE (MI4) . . . . . 3 – D 1

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 3 – D 1

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 3 – D 1

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 1.8L Duratec–SCi (MI4) . . . . . 3 – D 1

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.5L Duratec–VE (VE6) . . . . . 3 – D 1

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.5L Duratec–VE (VE6), manual transmission . . . . . 3 – D 1

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.5L Duratec–VE (VE6),automatic transmission . . . . . 3 – D 1

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.5L Duratec–VE (VE6),manual transmission . . . . . 3 – D 1

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 3.0L Duratec–ST (VE6) . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 4–speed automatic transmission (CD4E) . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 4–speed automatic transmission (CD4E), wagon . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), Petrol engines . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), wagon . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Auto–dimming interior mirror . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – DVD navigation system with touch screen . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F30, F31, F32, Petrol engines . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F42, 1.8L Duratec–SCi (MI4) . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F42, 2.5L Duratec–VE (VE6) . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F67, 1.8L Duratec–SCi (MI4) . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – G106, 1.8/2.0L Duratec–HE (MI4) . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – G106, 2.5L Duratec–VE (VE6) . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Ignition switch manual transmission . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Petrol engines . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 3 – D 1

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6) . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Pre–equipment pack, Petrol engines . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, with trailer socket, wagon, as of 01/2004 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, without trailer socket, wagon . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Valeo, wagon, as of 01/2004 . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Valeo, wagon, before 01/2004 . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – With high intensity discharge headlamps . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side . . . . . 3 – D 1
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), Diesel engines . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), wagon . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Auto–dimming interior mirror . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Diesel engines . . . . . 5 – D 5

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – DVD navigation system with touch screen . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F30, F31, F32, F33, Diesel engines . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F42, Diesel engines . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F67, Diesel engines . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Ignition switch manual transmission . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Pre–equipment pack, Diesel engines . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, with trailer socket, wagon, as of 01/2004 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Reversing lamps, without trailer socket, wagon . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Valeo, wagon, as of 01/2004 . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Valeo, wagon, before 01/2004 . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – With high intensity discharge headlamps . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side . . . . . 5 – D 5
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 1.8L Duratec–SCi (MI4), as of 04/2004
A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 1.8L Duratec–SCi (MI4), before 04/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 3.0L Duratec–SE (VE6)

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 3.0L Duratec–ST (VE6), as of 04/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – 3.0L Duratec–ST (VE6), before 04/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Bosch 8.0

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Bosch, 4–door model/5–door model

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Bosch, wagon

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Data link connector, pins 2 and 10, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Data link connector, pins 2, 10 and 13, Diesel engines, except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Diesel engines, With electric coolant heater, before 12/2003

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F42, 3.0L Duratec–SE (VE6)

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F42, 3.0L Duratec–ST (VE6), as of 04/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – F42, 3.0L Duratec–ST (VE6), before 04/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – G106, 1.8L Duratec–SCi (MI4), as of 04/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – G106, 1.8L Duratec–SCi (MI4), before 04/2004

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

A147 Powertrain control module (PCM)
on engine bulkhead, RH side – Petrol engines, except 3.0L Duratec–SE (VE6)

A148 Power mirror fold module
LH A–pillar, centre – F75, 5–speed automatic transmission (5F31J) . . . . . 16 – B 3

A148 Power mirror fold module
LH A–pillar, centre – F75, except 5–speed automatic transmission (5F31J) . . . . . 16 – B 3

A148 Power mirror fold module
LH A–pillar, centre – G200 . . . . . 16 – B 3

A148 Power mirror fold module
LH A–pillar, centre – With power folding mirrors . . . . . 16 – B 3

A148 Power mirror fold module
LH A–pillar, centre . . . . . 16 – B 3

A149 Intake Manifold Runner Control (IMRC) module
engine – 2.5L Duratec–VE (VE6) . . . . . 63 – A 5

A149 Intake Manifold Runner Control (IMRC) module
engine – F40, 2.5L Duratec–VE (VE6) . . . . . 63 – A 5

A149 Intake Manifold Runner Control (IMRC) module
engine – G106, 2.5L Duratec–VE (VE6) . . . . . 63 – A 5

A149 Intake Manifold Runner Control (IMRC) module
engine – 2.5L Duratec–VE (VE6) . . . . . 65 – B 5

A149 Intake Manifold Runner Control (IMRC) module
engine – F40, 2.5L Duratec–VE (VE6) . . . . . 65 – B 5
A149 Intake Manifold Runner Control (IMRC) module
engine – G106, 2.5L Duratec–VE (VE6) . . . . . 65 – B 5
A151 Antenna
roof – DVD navigation system with touch screen . . . . . 22 – D 5
A151 Antenna
roof – Pre–equipment pack . . . . . 22 – D 5
A151 Antenna
roof – with external CD changer and/or video system . . . . . 22 – D 5
A151 Antenna
roof – without external CD changer and video system . . . . . 22 – D 5
A153 GPS antenna
roof – DVD navigation system with touch screen . . . . . 22 – E 4
A157 Audio/navigation system control unit
dash panel, centre console – 1.8/2.0L Duratec–HE (MI4) . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 1.8L Duratec–SCi (MI4) . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 2.5L Duratec–VE (VE6) . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 3.0L Duratec–ST (VE6) . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 4–speed automatic transmission (CD4E), wagon . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 5–speed automatic transmission (5F31J), wagon . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Data link connector, pin 7 . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Diesel engines . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – G201, except DVD navigation system with touch screen, as of 04/2004 . . . . . 23 – D 2

A157 Audio/navigation system control unit
dash panel, centre console – G201, except DVD navigation system with touch screen, before 04/2004 . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Petrol engines . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6) . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004 . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, with trailer socket, wagon, before 01/2004 . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, without trailer socket, wagon . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – without DVD navigation system with touch screen . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console . . . . . 23 – D 2
A157 Audio/navigation system control unit
dash panel, centre console – 1.8/2.0L Duratec–HE (MI4) . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 1.8L Duratec–SCi (MI4) . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 2.5L Duratec–VE (VE6) . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 3.0L Duratec–ST (VE6) . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 25 – C 2

A157 Audio/navigation system control unit
dash panel, centre console – 4–speed automatic transmission (CD4E), wagon . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – 5–speed automatic transmission (5F31J), wagon . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Data link connector, pin 7 . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Diesel engines . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – G201, except DVD navigation system with touch screen, as of 04/2004 . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – G201, except DVD navigation system with touch screen, before 04/2004 . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Petrol engines . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6) . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004 . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, with trailer socket, wagon, before 01/2004 . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – Reversing lamps, without trailer socket, wagon . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console – without DVD navigation system with touch screen . . . . . 25 – C 2
A157 Audio/navigation system control unit
dash panel, centre console . . . . . 25 – C 2
A158 Remote control antenna
LH A–pillar
A164 Microphone
centre console – Bluetooth voice control
A172 Door lock unit, driver side front
in bottom of LH front door – G200, LHD . . . . . 38 – E 3
A172 Door lock unit, driver side front
in bottom of LH front door – G205, RHD . . . . . 38 – E 3

A172	Door lock unit, driver side front in bottom of LH front door	38 – E 3
A173	Door lock unit, passenger side front in passenger's door	38 – E 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – 1.8/2.0L Duratec–HE (MI4), automatic transmission	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – 1.8L Duratec–SCi (MI4)	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – 2.5L Duratec–VE (VE6)	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – 5–speed automatic transmission (5F31J), Petrol engines	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – as of 08/2004	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – before 08/2004	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – Data link connector, pin 7	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	4 – D 2
A176	Electronic Stability Program (ESP) module engine compartment, bottom, LH side, rear – F1, F2	4 – D 2

A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – F20, F21 . . . . . 4 – D 2
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – F76, F77, as of 04/2004 . . . . . 4 – D 2
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – F76, F77, before 04/2004 . . . . . 4 – D 2
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – G103 . . . . . 4 – D 2
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 4 – D 2
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 4 – D 2
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear . . . . . 4 – D 2
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – 5–speed automatic transmission (5F31J), Diesel engines . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – as of 08/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – before 08/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Data link connector, pin 7 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 6 – C 1

A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Diesel engines . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – F1, F2 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – F20, F21 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – F76, F77, as of 04/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – F76, F77, before 04/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – G103 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 6 – C 1
A176 Electronic Stability Program (ESP) module
engine compartment, bottom, LH side, rear . . . . . 6 – C 1
A177 Mobile telephone module
under dash panel – with external CD changer and/or video system
A177 Mobile telephone module
under dash panel – without external CD changer and video system
A178 Phone hand unit
under dash panel – Bluetooth voice control
A182 Navigation system main unit
in luggage compartment, LH side – 4–speed automatic transmission (CD4E), 4–door model/5–door model
A182 Navigation system main unit
in loading space, LH side – 4–speed automatic transmission (CD4E), wagon
A182 Navigation system main unit
in luggage compartment, LH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model
A182 Navigation system main unit
in loading space, LH side – 5–speed automatic transmission (5F31J), wagon
A182 Navigation system main unit
in loading space, LH side – Data link connector, pins 3 and 11, with external CD changer and video system
A182 Navigation system main unit
in luggage compartment, LH side – DVD navigation system with touch screen
A182 Navigation system main unit
in loading space, LH side – DVD navigation system with touch screen
A182 Navigation system main unit
in loading space, LH side – F72, with external CD changer and/or video system

A182 Navigation system main unit
in loading space, LH side – G201, with DVD navigation system with touch screen, before 04/2004
A182 Navigation system main unit
in loading space, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
A182 Navigation system main unit
in loading space, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
A182 Navigation system main unit
in loading space, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004
A182 Navigation system main unit
in luggage compartment, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model
A182 Navigation system main unit
in loading space, LH side – Reversing lamps, without trailer socket, wagon
A196 Battery backed sounder
on engine bulkhead, centre – F22, F23, petrol engines . . . . . 4 – C 5
A196 Battery backed sounder
on engine bulkhead, centre – G104 . . . . . 4 – C 5
A196 Battery backed sounder
on engine bulkhead, centre . . . . . 4 – C 5
A205 Electronic Automatic Temperature Control (EATC) module
behind dash panel, centre – Data link connector, pins 3 and 11, with external CD changer and video system . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module
behind dash panel, centre – Data link connector, pins 3 and 11, with external CD changer or video system . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module
behind dash panel, centre – Data link connector, pins 3 and 11, with voice control . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module
behind dash panel, centre – Data link connector, pins 3 and 11, without external CD changer and video system . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module
behind dash panel, centre – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004 . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module
behind dash panel, centre – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module
behind dash panel, centre – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module
behind dash panel, centre – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module
behind dash panel, centre – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 27 – D 4

A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – EATC . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – EATC, as of 04/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – EATC, before 04/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – F65, F66 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – F69, with external CD changer and/or video system . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – F69, without external CD changer and video system . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – F76, F77, as of 04/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – F76, F77, before 04/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – G204, as of 04/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – G204, before 04/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – with EATC, as of 04/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre – with EATC, before 04/2004 . . . . . 27 – D 4
A205 Electronic Automatic Temperature Control (EATC) module behind dash panel, centre . . . . . 27 – D 4
A208 Restraints Control Module (RCM) centre console – Data link connector, pin 7 . . . . . 40 – C 4
A208 Restraints Control Module (RCM) centre console – Diesel engines . . . . . 40 – C 4
A208 Restraints Control Module (RCM) centre console – Driver air bag . . . . . 40 – C 4
A208 Restraints Control Module (RCM) centre console – F88, F89, with autolamps . . . . . 40 – C 4
A208 Restraints Control Module (RCM) centre console – F88, F89, without autolamps . . . . . 40 – C 4
A208 Restraints Control Module (RCM) centre console – G202 . . . . . 40 – C 4
A208 Restraints Control Module (RCM) centre console – Passenger air bag . . . . . 40 – C 4
A208 Restraints Control Module (RCM) centre console – Petrol engines . . . . . 40 – C 4
A208 Restraints Control Module (RCM) centre console – Side air bag . . . . . 40 – C 4
A208 Restraints Control Module (RCM) centre console – with side head air bags . . . . . 40 – C 4

A208	Restraints Control Module (RCM) centre console	40 – C 4
A217	Rain sensor module behind dash panel – F94	40 – C 4
A217	Rain sensor module behind dash panel – G204, as of 04/2004	40 – C 4
A217	Rain sensor module behind dash panel – G204, before 04/2004	40 – C 4
A217	Rain sensor module behind dash panel – with rain sensor	40 – C 4
A217	Rain sensor module behind dash panel – With rear window wiper, with headlamp washer	40 – C 4
A217	Rain sensor module behind dash panel – With rear window wiper, without headlamp washer	40 – C 4
A217	Rain sensor module behind dash panel – Without rear window wiper, with headlamp washer	40 – C 4
A217	Rain sensor module behind dash panel – Without rear window wiper, without headlamp washer	40 – C 4
A217	Rain sensor module behind dash panel	40 – C 4
A222	Auto–dimming interior mirror roof, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – 4–speed automatic transmission (CD4E), 4–door model/5–door model	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – 4–speed automatic transmission (CD4E), wagon	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – 5–speed automatic transmission (5F31J), 4–door model/5–door model	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – 5–speed automatic transmission (5F31J), wagon	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – Auto–dimming interior mirror	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – Bosch, 4–door model/5–door model	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – Bosch, wagon	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – Diesel engines	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – DVD navigation system with touch screen	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – F91	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – G200	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – Petrol engines	21 – C 1
A222	Auto–dimming interior mirror roof, front, centre – Pre–equipment pack, Diesel engines	21 – C 1

A222 Auto–dimming interior mirror
roof, front, centre – Pre–equipment pack, Petrol engines . . . . . 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Reversing lamps, without trailer socket, 4–door model/5–door model 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Reversing lamps, without trailer socket, wagon . . . . . 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Valeo, wagon, as of 01/2004 . . . . . 21 – C 1
A222 Auto–dimming interior mirror
roof, front, centre – Valeo, wagon, before 01/2004 . . . . . 21 – C 1
A225 Driver safety belt retractor pretensioner
driver's seat . . . . . 41 – B 1
A225 Driver safety belt retractor pretensioner
driver's seat . . . . . 43 – E 2
A226 Passenger safety belt retractor pretensioner
passenger's seat . . . . . 42 – E 1
A226 Passenger safety belt retractor pretensioner
passenger's seat . . . . . 44 – B 1
A242 Side air bag module, driver
driver's seat – G205 . . . . . 41 – D 3
A242 Side air bag module, driver
driver's seat – Side air bag . . . . . 41 – D 3
A242 Side air bag module, driver
driver's seat – G205 . . . . . 43 – C 3
A242 Side air bag module, driver
driver's seat – Side air bag . . . . . 43 – C 3
A245 Side air bag module, passenger
passenger's seat – G205 . . . . . 42 – B 2
A245 Side air bag module, passenger
passenger's seat – Side air bag . . . . . 42 – B 2
A245 Side air bag module, passenger
passenger's seat – G205 . . . . . 44 – D 3
A245 Side air bag module, passenger
passenger's seat – Side air bag . . . . . 44 – D 3
A260 Antenna, triplex
in tailgate, top, centre

A265 Parking aid module
behind luggage compartment lining, LH side, 4–door model – Bosch . . . . . 47 – B 5
A265 Parking aid module
behind luggage compartment lining, LH side, 4–door model – Bosch, 4–door model/5–door model . . . . . 47 – B 5
A265 Parking aid module
behind luggage compartment lining, LH side, 4–door model – G300 . . . . . 47 – B 5
A265 Parking aid module
behind luggage compartment lining, LH side, 4–door model – G300, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 47 – B 5
A265 Parking aid module
behind luggage compartment lining, LH side, 4–door model – G300, without trailer socket, 4–door model/5–door model . . . . . 47 – B 5
A265 Parking aid module
behind luggage compartment lining, LH side, 4–door model – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 47 – B 5
A265 Parking aid module
behind luggage compartment lining, LH side, 4–door model – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 47 – B 5
A265 Parking aid module
behind luggage compartment lining, LH side, 5–door model – Bosch . . . . . 49 – C 5
A265 Parking aid module
behind luggage compartment lining, LH side, 5–door model – Bosch, 4–door model/5–door model . . . . . 49 – C 5
A265 Parking aid module
behind luggage compartment lining, LH side, 5–door model – G300 . . . . . 49 – C 5
A265 Parking aid module
behind luggage compartment lining, LH side, 5–door model – G300, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 49 – C 5
A265 Parking aid module
behind luggage compartment lining, LH side, 5–door model – G300, without trailer socket, 4–door model/5–door model . . . . . 49 – C 5
A265 Parking aid module
behind luggage compartment lining, LH side, 5–door model – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 49 – C 5
A265 Parking aid module
behind luggage compartment lining, LH side, 5–door model – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 49 – C 5
A265 Parking aid module
behind loading space lining, LH side, wagon – G300 . . . . . 51 – D 2
A265 Parking aid module
behind luggage compartment lining, LH side, 4–door model – G300, with trailer socket, wagon, before 01/2004 . . . . . 51 – D 2
A265 Parking aid module
behind loading space lining, LH side, wagon – G300, without trailer socket, wagon . . . . . 51 – D 2
A265 Parking aid module
behind loading space lining, LH side, wagon – Valeo, wagon, before 01/2004 . . . . . 51 – D 2
A265 Parking aid module
behind loading space lining, LH side, wagon – Bosch

A265 Parking aid module
behind loading space lining, LH side, wagon – Bosch, wagon

A265 Parking aid module
behind loading space lining, LH side, wagon – G300, with trailer socket, wagon, as of 01/2004

A265 Parking aid module
behind luggage compartment lining, LH side, 4–door model – Valeo

A265 Parking aid module
behind luggage compartment lining, LH side, 5–door model – Valeo

A265 Parking aid module
behind loading space lining, LH side, wagon – Valeo

A265 Parking aid module
behind loading space lining, LH side, wagon – Valeo, wagon, as of 01/2004

A275 Door lock unit, LH rear
in LH rear door . . . . . 39 – E 3

A276 Door lock unit, RH rear
in RH rear door . . . . . 39 – E 3

A291 Cellular phone microphone
dash panel, driver side – with external CD changer and/or video system

A291 Cellular phone microphone
dash panel, driver side – without external CD changer and video system

A300 Heater/A/C control module
behind dash panel, centre – Data link connector, pin 7 . . . . . 27 – D 4

A300 Heater/A/C control module
behind dash panel, centre – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004 . . . . . 27 – D 4

A300 Heater/A/C control module
behind dash panel, centre – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 27 – D 4

A300 Heater/A/C control module
behind dash panel, centre – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 27 – D 4

A300 Heater/A/C control module
behind dash panel, centre – F65, F66 . . . . . 27 – D 4

A300 Heater/A/C control module
behind dash panel, centre – F76, F77, before 04/2004 . . . . . 27 – D 4

A300 Heater/A/C control module
behind dash panel, centre – G204, before 04/2004 . . . . . 27 – D 4

A300 Heater/A/C control module
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 27 – D 4

A300 Heater/A/C control module
behind dash panel, centre . . . . . 27 – D 4

A306 Multimedia control module
under passenger's seat – DVD navigation system with touch screen

A306 Multimedia control module
under passenger's seat – F71, except DVD navigation system with touch screen, with video system

A306 Multimedia control module
under passenger's seat – F71, with DVD navigation system with touch screen

A306 Multimedia control module
under passenger's seat – G201, except DVD navigation system with touch screen, as of 04/2004

A306 Multimedia control module
under passenger's seat – G201, except DVD navigation system with touch screen, before 04/2004

A306 Multimedia control module
under passenger's seat – G201, with DVD navigation system with touch screen, before 04/2004

A306 Multimedia control module
under passenger's seat – with DVD navigation system with touch screen

A306 Multimedia control module
under passenger's seat – without DVD navigation system with touch screen

A306 Multimedia control module
under passenger's seat

A307 Video display, LH side
front seat, LH

A308 Video display, RH side
front seat, RH

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – F63, 4–door model/5–door model

A310 Trailer interface (TI) module
in loading space, rear, LH side – F63, wagon

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – F64, with trailer socket, 4–door model/5–door model

A310 Trailer interface (TI) module
in loading space, rear, LH side – F64, with trailer socket, wagon

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – F74, before 01/2004

A310 Trailer interface (TI) module
in loading space, rear, LH side – F74, before 01/2004

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004

A310 Trailer interface (TI) module
in loading space, rear, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – G300, with trailer socket, wagon, before 01/2004

A310 Trailer interface (TI) module
in loading space, rear, LH side – G300, with trailer socket, wagon, before 01/2004

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps

A310 Trailer interface (TI) module
in loading space, rear, LH side – Parking Lamps, with trailer socket, wagon, with autolamps

A310 Trailer interface (TI) module
in loading space, rear, LH side – Parking Lamps, with trailer socket, wagon, without autolamps

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004

A310 Trailer interface (TI) module
in loading space, rear, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004

A310 Trailer interface (TI) module
in loading space, rear, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – Trailer socket, before 01/2004

A310 Trailer interface (TI) module
in loading space, rear, LH side – Trailer socket, before 01/2004

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – Valeo, 4–door model/5–door model, before 01/2004

A310 Trailer interface (TI) module
in loading space, rear, LH side – Valeo, wagon, before 01/2004

A310 Trailer interface (TI) module
in luggage compartment, rear, LH side – with trailer socket, 4–door model/5–door model

A310 Trailer interface (TI) module
in loading space, rear, LH side – with trailer socket, wagon

A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – F200, F201

A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – F74, as of 01/2004, F201, with 7–pin trailer socket

A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – F74, as of 01/2004, F200, F201, with 13–pin trailer socket

A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – F74, before 01/2004

A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – F74, before 01/2004

A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004

A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004

A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – G300, with trailer socket, wagon, as of 01/2004

A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – G300, with trailer socket, wagon, before 01/2004
A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004
A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004
A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004
A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – Trailer socket, before 01/2004
A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – Trailer socket, before 01/2004
A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – Trailer socket, wagon, as of 01/2004
A311 Switch interface (SI) module, trailer
in luggage compartment, rear, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
A311 Switch interface (SI) module, trailer
in loading space, rear, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon
A313 Injector Driver Module (IDM)
wheelwell, LH side – 1.8L Duratec–SCi (MI4) . . . . . 75 – F 4
A313 Injector Driver Module (IDM)
wheelwell, LH side – G107 . . . . . 75 – F 4
A313 Injector Driver Module (IDM)
wheelwell, LH side – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 75 – F 4
A318 Transmission control module (TCM)
LH A–pillar – 5–speed automatic transmission (5F31J) . . . . . 16 – E 3
A318 Transmission control module (TCM)
LH A–pillar – 5–speed automatic transmission (5F31J), Diesel engines . . . . . 16 – E 3
A318 Transmission control module (TCM)
LH A–pillar – 5–speed automatic transmission (5F31J), Petrol engines . . . . . 16 – E 3
A318 Transmission control module (TCM)
LH A–pillar – Data link connector, pin 7 . . . . . 16 – E 3
A318 Transmission control module (TCM)
LH A–pillar – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 16 – E 3
A318 Transmission control module (TCM)
LH A–pillar – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 16 – E 3

A318 Transmission control module (TCM)
LH A–pillar – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 16 – E 3
A318 Transmission control module (TCM)
LH A–pillar – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 16 – E 3
A318 Transmission control module (TCM)
LH A–pillar – F17 . . . . . 16 – E 3
A318 Transmission control module (TCM)
LH A–pillar – F30, F31, F32, F33, Diesel engines . . . . . 16 – E 3
A318 Transmission control module (TCM)
LH A–pillar – F30, F31, F32, Petrol engines . . . . . 16 – E 3
A326 Side head air bag module, driver
on LH C–pillar, left–hand–drive – with side head air bags . . . . . 47 – F 4
A326 Side head air bag module, driver
on RH C–pillar, right–hand–drive – with side head air bags . . . . . 48 – A 4
A326 Side head air bag module, driver
on LH C–pillar, left–hand–drive – with side head air bags . . . . . 49 – F 4
A326 Side head air bag module, driver
on RH C–pillar, right–hand–drive – with side head air bags . . . . . 50 – A 5
A326 Side head air bag module, driver
on LH C–pillar, left–hand–drive – with side head air bags . . . . . 51 – D 5
A326 Side head air bag module, driver
on RH C–pillar, right–hand–drive – with side head air bags . . . . . 52 – B 5
A327 Side head air bag module, passenger
on LH C–pillar, right–hand–drive – with side head air bags . . . . . 47 – F 4
A327 Side head air bag module, passenger
on RH C–pillar, left–hand–drive – with side head air bags . . . . . 48 – A 4
A327 Side head air bag module, passenger
on LH C–pillar, right–hand–drive – with side head air bags . . . . . 49 – F 4
A327 Side head air bag module, passenger
on RH C–pillar, left–hand–drive – with side head air bags . . . . . 50 – A 4
A327 Side head air bag module, passenger
on LH C–pillar, right–hand–drive – with side head air bags . . . . . 51 – D 5
A327 Side head air bag module, passenger
on RH C–pillar, left–hand–drive – with side head air bags . . . . . 52 – B 5
A355 Exterior mirror, driver side
in driver's door, top – F98 . . . . . 38 – A 3
A355 Exterior mirror, driver side
in driver's door, top – F99, 4–door model/5–door model . . . . . 38 – A 3
A355 Exterior mirror, driver side
in driver's door, top – F99, wagon . . . . . 38 – A 3
A355 Exterior mirror, driver side
in driver's door, top – G200, LHD . . . . . 38 – A 3
A355 Exterior mirror, driver side
in driver's door, top – G205, RHD . . . . . 38 – A 3
A355 Exterior mirror, driver side
in driver's door, top – Heated rear window, Heated exterior mirrors . . . . . 38 – A 3
A355 Exterior mirror, driver side
in driver's door, top – With power folding mirrors . . . . . 38 – A 3
A355 Exterior mirror, driver side
in driver's door, top . . . . . 38 – A 3

A356 Exterior mirror, passenger side
in passenger's door, top – F98 . . . . . 38 – A 3
A356 Exterior mirror, passenger side
in passenger's door, top – F99, 4–door model/5–door model . . . . . 38 – A 3
A356 Exterior mirror, passenger side
in passenger's door, top – F99, wagon . . . . . 38 – A 3
A356 Exterior mirror, passenger side
in passenger's door, top – G200, RHD . . . . . 38 – A 3
A356 Exterior mirror, passenger side
in passenger's door, top – G205, LHD . . . . . 38 – A 3
A356 Exterior mirror, passenger side
in passenger's door, top – Heated rear window, Heated exterior mirrors . . . . . 38 – A 3
A356 Exterior mirror, passenger side
in passenger's door, top – With power folding mirrors . . . . . 38 – A 3
A356 Exterior mirror, passenger side
in passenger's door, top . . . . . 38 – A 3
A360 Tiptronic module
behind dash panel – 5–speed automatic transmission (5F31J)
A360 Tiptronic module
behind dash panel – Diesel engines
A360 Tiptronic module
behind dash panel – F75, 5–speed automatic transmission (5F31J)
A360 Tiptronic module
behind dash panel – F82, Diesel engines
A360 Tiptronic module
behind dash panel – F82, Petrol engines
A360 Tiptronic module
behind dash panel – G203
A360 Tiptronic module
behind dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4)
A360 Tiptronic module
behind dash panel
A363 Touch screen
dash panel, centre – Data link connector, pins 3 and 11, with external CD changer and video system
A363 Touch screen
dash panel, centre – DVD navigation system with touch screen
A363 Touch screen
dash panel, centre – F69, with external CD changer and/or video system
A363 Touch screen
dash panel, centre – F72, with external CD changer and/or video system
A363 Touch screen
dash panel, centre – G201, with DVD navigation system with touch screen, before 04/2004
A364 Electronic throttle body
engine, front, LH side – 1.8L Duratec–SCi (MI4)
A365 Autolamps/rain sensor module
behind dash panel – Autolamps
A365 Autolamps/rain sensor module
behind dash panel – F20, F21

A365 Autolamps/rain sensor module
behind dash panel – F88, F89, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – F94
A365 Autolamps/rain sensor module
behind dash panel – G204, as of 04/2004
A365 Autolamps/rain sensor module
behind dash panel – G204, before 04/2004
A365 Autolamps/rain sensor module
behind dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – Light switch, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – Parking Lamps, with trailer socket, wagon, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – Parking Lamps, without trailer socket, wagon, with autolamps
A365 Autolamps/rain sensor module
behind dash panel – with rain sensor
A365 Autolamps/rain sensor module
behind dash panel – With rear window wiper, with headlamp washer
A365 Autolamps/rain sensor module
behind dash panel – With rear window wiper, without headlamp washer
A365 Autolamps/rain sensor module
behind dash panel – Without rear window wiper, with headlamp washer
A365 Autolamps/rain sensor module
behind dash panel – Without rear window wiper, without headlamp washer
A365 Autolamps/rain sensor module
behind dash panel
A369 Audio control module
behind dash panel – Data link connector, pins 3 and 11, with external CD changer and video system
A369 Audio control module
behind dash panel – Data link connector, pins 3 and 11, with external CD changer or video system

A369 Audio control module
centre console – DVD navigation system with touch screen
A369 Audio control module
centre console – DVD navigation system with touch screen – with video system
A369 Audio control module
centre console – F71, except DVD navigation system with touch screen, without video system
A369 Audio control module
centre console – F71, with DVD navigation system with touch screen
A369 Audio control module
centre console – G201, except DVD navigation system with touch screen, as of 04/2004
A369 Audio control module
centre console – G201, except DVD navigation system with touch screen, before 04/2004
A369 Audio control module
centre console – G201, with DVD navigation system with touch screen, before 04/2004
A369 Audio control module
centre console – with external CD changer and/or video system
A369 Audio control module
centre console – with video system
A369 Audio control module
centre console
A371 Heated seat module, LH front
front seat, LH – G200
A371 Heated seat module, LH front
front seat, LH – Heated front seats
A372 Heated seat module, RH front
front seat, RH – G205
A372 Heated seat module, RH front
front seat, RH – Heated front seats
A373 Climate controlled seat module, LH front
front seat, LH – Climate controlled front seats
A373 Climate controlled seat module, LH front
front seat, LH – G200
A374 Climate controlled seat module, RH front
front seat, RH – Climate controlled front seats
A374 Climate controlled seat module, RH front
front seat, RH – G205
A381 Bluetooth voice control module
centre console – Bluetooth voice control
A381 Bluetooth voice control module
centre console – Data link connector, pins 3 and 11, with voice control
A381 Bluetooth voice control module
centre console – F71, Bluetooth voice control
A381 Bluetooth voice control module
centre console – G201, except DVD navigation system with touch screen, as of 04/2004
A433 DVD player
under passenger's seat – DVD navigation system with touch screen
A433 DVD player
under passenger's seat – F71, except DVD navigation system with touch screen, with video system

A433 DVD player
under passenger's seat – F71, with DVD navigation system with touch screen
A433 DVD player
under passenger's seat – G201, except DVD navigation system with touch screen, as of 04/2004
A433 DVD player
under passenger's seat – G201, except DVD navigation system with touch screen, before 04/2004
A433 DVD player
under passenger's seat – G201, with DVD navigation system with touch screen, before 04/2004
A433 DVD player
under passenger's seat – with DVD navigation system with touch screen
A433 DVD player
under passenger's seat – without DVD navigation system with touch screen
A433 DVD player
under passenger's seat
A436 Heated seat module, LH rear
rear seats – F83
A436 Heated seat module, LH rear
rear seats – G200
A436 Heated seat module, LH rear
rear seats – G300
A436 Heated seat module, LH rear
rear seats – with heated rear seats
A437 Heated seat module, RH rear
rear seats – F83
A437 Heated seat module, RH rear
rear seats – G205
A437 Heated seat module, RH rear
rear seats – with heated rear seats
B2 Manifold Absolute Pressure (MAP) sensor
in intake system – 1.8L Duratec–SCi (MI4) . . . . . 75 – B 1
B3 Heated Exhaust Gas Oxygen (HEGO) sensor
in exhaust system – 1.8L Duratec–SCi (MI4)
B3 Heated Exhaust Gas Oxygen (HEGO) sensor
in exhaust system – F37, 1.8L Duratec–SCi (MI4)
B8 Throttle Position Sensor (TPS)
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 60 – C 5
B8 Throttle Position Sensor (TPS)
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 61 – A 3
B8 Throttle Position Sensor (TPS)
engine – 2.5L Duratec–VE (VE6) . . . . . 63 – D 5
B8 Throttle Position Sensor (TPS)
engine – 2.5L Duratec–VE (VE6) . . . . . 65 – D 5
B8 Throttle Position Sensor (TPS)
engine, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . 67 – F 4
B8 Throttle Position Sensor (TPS)
engine – 3.0L Duratec–ST (VE6) . . . . . 67 – F 4

B8	Throttle Position Sensor (TPS) engine – 3.0L Duratec–SE (VE6)	79 – E 5
B8	Throttle Position Sensor (TPS) engine, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	79 – E 5
B10	Engine Coolant Temperature (ECT) sensor engine – 1.8/2.0L Duratec–HE (MI4)	62 – A 4
B10	Engine Coolant Temperature (ECT) sensor engine – 3.0L Duratec–ST (VE6)	68 – C 1
B10	Engine Coolant Temperature (ECT) sensor engine – 1.8L Duratec–SCi (MI4)	
B10	Engine Coolant Temperature (ECT) sensor engine – 2.5L Duratec–VE (VE6)	
B10	Engine Coolant Temperature (ECT) sensor engine – 2.5L Duratec–VE (VE6),automatic transmission	
B10	Engine Coolant Temperature (ECT) sensor engine – 2.5L Duratec–VE (VE6),manual transmission	
B10	Engine Coolant Temperature (ECT) sensor engine – 3.0L Duratec–SE (VE6)	
B10	Engine Coolant Temperature (ECT) sensor engine – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
B11	Vehicle speed sensor (VSS) engine – 1.8/2.0L Duratec–HE (MI4)	61 – F 3
B11	Vehicle speed sensor (VSS) engine – 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – F 3
B11	Vehicle speed sensor (VSS) engine – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	61 – F 3
B11	Vehicle speed sensor (VSS) engine – 5–speed automatic transmission (5F31J)	
B11	Vehicle speed sensor (VSS) engine – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	
B14	Wheel speed sensor, RH side front wheel hub, front, RH side – before 08/2004	7 – F 2
B14	Wheel speed sensor, RH side front wheel hub, front, RH side – Bosch 8.0	7 – F 2
B14	Wheel speed sensor, RH side front wheel hub, front, RH side	7 – F 2
B15	Wheel speed sensor, LH side front engine compartment, front, in intake system – before 08/2004	7 – F 2
B15	Wheel speed sensor, LH side front engine compartment, front, in intake system – Bosch 8.0	7 – F 2
B15	Wheel speed sensor, LH side front wheel hub, front, LH side	7 – F 2
B16	Wheel speed sensor, RH side rear wheel hub, front, LH side – before 08/2004	7 – F 2
B16	Wheel speed sensor, RH side rear wheel hub, front, LH side – Bosch 8.0	7 – F 2
B16	Wheel speed sensor, RH side rear wheel hub, rear, RH side	46 – F 5
B17	Wheel speed sensor, LH side rear wheel hub, rear, LH side – before 08/2004	45 – A 1

B17 Wheel speed sensor, LH side rear
wheel hub, rear, LH side – Bosch 8.0 . . . . . 45 – A 1
B17 Wheel speed sensor, LH side rear
wheel hub, rear, LH side . . . . . 45 – A 1
B22 Mass Air Flow (MAF) sensor
in intake system – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – D 2
B22 Mass Air Flow (MAF) sensor
in intake system – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – D 2
B22 Mass Air Flow (MAF) sensor
in intake system – F42, Diesel engines . . . . . 6 – D 2
B22 Mass Air Flow (MAF) sensor
in intake system – 2.5L Duratec–VE (VE6) . . . . . 64 – B 5
B22 Mass Air Flow (MAF) sensor
in intake system – F42, 2.5L Duratec–VE (VE6) . . . . . 64 – B 5
B22 Mass Air Flow (MAF) sensor
in intake system – G106, 2.5L Duratec–VE (VE6) . . . . . 64 – B 5
B22 Mass Air Flow (MAF) sensor
in intake system – 2.5L Duratec–VE (VE6) . . . . . 66 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – F42, 2.5L Duratec–VE (VE6) . . . . . 66 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – G106, 2.5L Duratec–VE (VE6) . . . . . 66 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – 3.0L Duratec–ST (VE6) . . . . . 69 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 69 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 69 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – F42, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 69 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – F42, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 69 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system, 3.0L Duratec–ST (VE6) . . . . . 69 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – 3.0L Duratec–SE (VE6) . . . . . 78 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – F42, 3.0L Duratec–SE (VE6) . . . . . 78 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system, 3.0L Duratec–SE (VE6) – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 78 – C 5
B22 Mass Air Flow (MAF) sensor
in intake system – 1.8L Duratec–SCi (MI4)
B22 Mass Air Flow (MAF) sensor
in intake system – F40, 1.8L Duratec–SCi (MI4)
B36 Steering position sensor
on steering column – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004 . . . . . 37 – F 3

B36 Steering position sensor
on steering column – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004 . . . . . 37 – F 3
B36 Steering position sensor
on steering column – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 37 – F 3
B36 Steering position sensor
on steering column – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 37 – F 3
B36 Steering position sensor
on steering column – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . 37 – F 3
B36 Steering position sensor
on steering column – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . 37 – F 3
B36 Steering position sensor
on steering column – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 37 – F 3
B36 Steering position sensor
on steering column – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 37 – F 3
B36 Steering position sensor
on steering column – as of 08/2004
B41 Camshaft position sensor
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 62 – C 5
B41 Camshaft position sensor
engine – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 62 – C 5
B41 Camshaft position sensor
engine – 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 62 – C 5
B41 Camshaft position sensor
engine – 2.5L Duratec–VE (VE6) . . . . . 64 – F 3
B41 Camshaft position sensor
engine – 2.5L Duratec–VE (VE6) . . . . . 66 – F 3
B41 Camshaft position sensor
engine – F42, Diesel engines . . . . . 73 – C 5
B41 Camshaft position sensor
engine – 1.8L Duratec–SCi (MI4)
B41 Camshaft position sensor
engine – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel
B41 Camshaft position sensor
engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
B41 Camshaft position sensor
engine – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
B41 Camshaft position sensor
engine – F42, Diesel engines
B41 Camshaft position sensor
engine – G106, 1.8L Duratec–SCi (MI4), as of 04/2004
B41 Camshaft position sensor
engine – G106, 1.8L Duratec–SCi (MI4), before 04/2004
B43 Crankshaft position sensor
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 62 – D 1

B43 Crankshaft position sensor
engine – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 62 – D 1
B43 Crankshaft position sensor
engine – 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 62 – D 1
B43 Crankshaft position sensor
engine – 2.5L Duratec–VE (VE6) . . . . . 64 – E 1
B43 Crankshaft position sensor
engine – 1.8L Duratec–SCi (MI4) . . . . . 76 – E 2
B43 Crankshaft position sensor
engine – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel
B43 Crankshaft position sensor
engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
B43 Crankshaft position sensor
engine – 2.5L Duratec–VE (VE6)
B43 Crankshaft position sensor
engine – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
B43 Crankshaft position sensor
engine – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
B44 Turbine Shaft Speed (TSS) sensor
transmission – 1.8/2.0L Duratec–HE (MI4) . . . . . 61 – F 2
B44 Turbine Shaft Speed (TSS) sensor
transmission – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 61 – F 2
B44 Turbine Shaft Speed (TSS) sensor
transmission – 4–speed automatic transmission (CD4E) . . . . . 61 – F 2
B44 Turbine Shaft Speed (TSS) sensor
transmission – 5–speed automatic transmission (5F31J)
B45 Knock sensor
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 62 – F 3
B45 Knock sensor
engine – G106, 1.8/2.0L Duratec–HE (MI4) . . . . . 62 – F 3
B45 Knock sensor
engine, 2.0L Duratorq–TDCi (Puma) Diesel – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 73 – A 4
B45 Knock sensor
engine, 2.0L Duratorq–TDCi (Puma) Diesel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 73 – A 4
B45 Knock sensor
engine – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel
B45 Knock sensor
engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – 2.5L Duratec–VE (VE6) . . . . . 63 – A 2
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – F37, 2.5L Duratec–VE (VE6) . . . . . 63 – A 2
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – 2.5L Duratec–VE (VE6) . . . . . 65 – C 1
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – F37, 2.5L Duratec–VE (VE6) . . . . . 65 – C 1

B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – 3.0L Duratec–ST (VE6) . . . . . 67 – D 5
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 67 – D 5
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 67 – D 5
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – F37, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 67 – D 5
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – F37, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 67 – D 5
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – 3.0L Duratec–SE (VE6) . . . . . 79 – C 5
B47 Pre–catalyst heated oxygen sensor (HO2S), LH
in exhaust system – F37, 3.0L Duratec–SE (VE6) . . . . . 79 – C 5
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – 2.5L Duratec–VE (VE6) . . . . . 64 – A 3
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – F37, 2.5L Duratec–VE (VE6) . . . . . 64 – A 3
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – 2.5L Duratec–VE (VE6) . . . . . 66 – A 3
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – F37, 2.5L Duratec–VE (VE6) . . . . . 66 – A 3
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – 3.0L Duratec–ST (VE6) . . . . . 69 – B 4
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 69 – B 4
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 69 – B 4
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – F37, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 69 – B 4
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – F37, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 69 – B 4
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – 3.0L Duratec–SE (VE6) . . . . . 78 – B 4
B48 Pre–catalyst heated oxygen sensor (HO2S), RH
in exhaust system – F37, 3.0L Duratec–SE (VE6) . . . . . 78 – B 4
B66 In–vehicle temperature sensor, LH side
dash panel, centre console, LH side – EATC . . . . . 23 – F 5
B66 In–vehicle temperature sensor, LH side
dash panel, centre console, LH side – F81 . . . . . 23 – F 5
B66 In–vehicle temperature sensor, LH side
dash panel, centre console, LH side – with EATC, as of 04/2004 . . . . . 23 – F 5
B66 In–vehicle temperature sensor, LH side
dash panel, centre console, LH side – EATC . . . . . 26 – C 2
B66 In–vehicle temperature sensor, LH side
dash panel, centre console, LH side – F81 . . . . . 26 – C 2
B66 In–vehicle temperature sensor, LH side
dash panel, centre console, LH side – with EATC, before 04/2004 . . . . . 26 – F 5
B72 Sunload sensor
behind dash panel, centre – EATC . . . . . 24 – D 5

B72 Sunload sensor
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 24 – D 5
B72 Sunload sensor
behind dash panel, centre – with EATC, before 04/2004 . . . . . 24 – D 5
B72 Sunload sensor
behind dash panel, centre – EATC . . . . . 25 – C 5
B72 Sunload sensor
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 25 – C 5
B72 Sunload sensor
behind dash panel, centre – with EATC, before 04/2004 . . . . . 25 – C 5
B89 Pre–catalyst heated oxygen sensor (HO2S)
in exhaust system – 1.8/2.0L Duratec–HE (MI4) . . . . . 62 – A 1
B89 Pre–catalyst heated oxygen sensor (HO2S)
in exhaust system – F37, 1.8/2.0L Duratec–HE (MI4) . . . . . 62 – A 1
B102 Anti–theft interior scan sensor, front
roof, front, centre – G200 . . . . . 22 – E 3
B102 Anti–theft interior scan sensor, front
roof, front, centre . . . . . 22 – E 3
B105 Knock sensor 1
engine – 1.8L Duratec–SCi (MI4)
B106 Knock sensor 2
engine, front – 1.8L Duratec–SCi (MI4)
B109 Fuel temperature sensor
engine compartment, RH side – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 72 – A 3
B109 Fuel temperature sensor
engine compartment, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 72 – A 3
B109 Fuel temperature sensor
engine compartment, RH side,2.0L Duratorq–TDCi (Puma) Diesel – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 73 – A 3
B109 Fuel temperature sensor
engine compartment, RH side, 2.0L Duratorq–TDCi (Puma) Diesel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 73 – A 3
B120 Transmission range sensor
transmission – 1.8/2.0L Duratec–HE (MI4) . . . . . 61 – D 1
B120 Transmission range sensor
transmission – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 61 – D 1
B120 Transmission range sensor
transmission – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 61 – D 1
B120 Transmission range sensor
transmission – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . 61 – D 1
B120 Transmission range sensor
transmission – 2.5L Duratec–VE (VE6) . . . . . 61 – D 1
B120 Transmission range sensor
transmission – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . 61 – D 1
B120 Transmission range sensor
transmission – 4–speed automatic transmission (CD4E), wagon . . . . . 61 – D 1
B120 Transmission range sensor
transmission – 5–speed automatic transmission (5F31J) . . . . . 61 – D 1

B120 Transmission range sensor
transmission – 5–speed automatic transmission (5F31J), 4–door model/5–door model .... 61 – D 1
B120 Transmission range sensor
transmission – 5–speed automatic transmission (5F31J), wagon ..... 61 – D 1
B120 Transmission range sensor
transmission – Auto–dimming interior mirror ..... 61 – D 1
B120 Transmission range sensor
transmission – Bosch, 4–door model/5–door model ..... 61 – D 1
B120 Transmission range sensor
transmission – Bosch, wagon ..... 61 – D 1
B120 Transmission range sensor
transmission – DVD navigation system with touch screen ..... 61 – D 1
B120 Transmission range sensor
transmission – F17 ..... 61 – D 1
B120 Transmission range sensor
transmission – F78, F80 ..... 61 – D 1
B120 Transmission range sensor
transmission – Petrol engines ..... 61 – D 1
B120 Transmission range sensor
transmission – Pre–equipment pack, Petrol engines ..... 61 – D 1
B120 Transmission range sensor
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 ..... 61 – D 1
B120 Transmission range sensor
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 ..... 61 – D 1
B120 Transmission range sensor
transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004 ..... 61 – D 1
B120 Transmission range sensor
transmission – Reversing lamps, with trailer socket, wagon, before 01/2004 ..... 61 – D 1
B120 Transmission range sensor
transmission – Reversing lamps, without trailer socket, 4–door model/5–door model ..... 61 – D 1
B120 Transmission range sensor
transmission – Reversing lamps, without trailer socket, wagon ..... 61 – D 1
B120 Transmission range sensor
transmission – Valeo, 4–door model/5–door model, as of 01/2004 ..... 61 – D 1
B120 Transmission range sensor
transmission – Valeo, 4–door model/5–door model, before 01/2004 ..... 61 – D 1
B120 Transmission range sensor
transmission – Valeo, wagon, as of 01/2004 ..... 61 – D 1
B120 Transmission range sensor
transmission – Valeo, wagon, before 01/2004 ..... 61 – D 1
B120 Transmission range sensor
transmission – With rear window wiper ..... 61 – D 1
B120 Transmission range sensor
transmission ..... 61 – D 1
B129 Accelerator pedal position sensor
dash panel, driver side – 1.8L Duratec–SCi (MI4)
B129 Accelerator pedal position sensor
dash panel, driver side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

B129 Accelerator pedal position sensor
dash panel, driver side – 2.0L Duratorq–TDCi (Puma) Diesel
B129 Accelerator pedal position sensor
dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
B135 Cylinder head temperature sensor
cylinder head – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 70 – E 5
B135 Cylinder head temperature sensor
cylinder head – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 72 – E 5
B135 Cylinder head temperature sensor
cylinder head – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 72 – E 5
B135 Cylinder head temperature sensor
cylinder head – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel 72 – E 5
B135 Cylinder head temperature sensor
cylinder head – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 73 – E 5
B136 Exhaust gas recirculation (EGR) valve position sensor
engine compartment – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
B136 Exhaust gas recirculation (EGR) valve position sensor
engine compartment – 2.0L Duratorq–TDCi (Puma) Diesel
B136 Exhaust gas recirculation (EGR) valve position sensor
engine compartment – 2.2L Duratorq–TDCi (Puma) Diesel
B139 Yaw velocity sensor
engine compartment – as of 08/2004
B139 Yaw velocity sensor
engine compartment – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004
B139 Yaw velocity sensor
engine compartment – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
B139 Yaw velocity sensor
engine compartment – Data link connector, pins 6 and 14, Petrol engines, before 08/2004
B139 Yaw velocity sensor
engine compartment – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
B139 Yaw velocity sensor
engine compartment – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
B140 Primary brake pressure sensor
engine compartment, bottom, LH side, rear – as of 08/2004 . . . . . 4 – C 2
B140 Primary brake pressure sensor
engine compartment, bottom, LH side, rear – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 4 – C 2
B140 Primary brake pressure sensor
engine compartment, bottom, LH side, rear – as of 08/2004 . . . . . 6 – C 2
B140 Primary brake pressure sensor
engine compartment, bottom, LH side, rear – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 6 – C 2
B142 Temperature manifold absolute pressure sensor
engine compartment, front, in intake system – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 10 – E 1

B142 Temperature manifold absolute pressure sensor
engine compartment, front, in intake system – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 11 – E 1
B142 Temperature manifold absolute pressure sensor
engine compartment, front, in intake system – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 11 – E 1
B142 Temperature manifold absolute pressure sensor
engine compartment, front, in intake system – 1.8/2.0L Duratec–HE (MI4) . . . . . 60 – B 2
B142 Temperature manifold absolute pressure sensor
engine compartment, front, in intake system – 1.8/2.0L Duratec–HE (MI4) . . . . . 61 – B 2
B168 Parking aid sensor, rear, outer left
rear bumper – Valeo . . . . . 59 – E 2
B168 Parking aid sensor, rear, outer left
rear bumper – Bosch . . . . . 80 – E 2
B169 Parking aid sensor, rear, inner left
rear bumper – Valeo . . . . . 59 – D 2
B169 Parking aid sensor, rear, inner left
rear bumper – Bosch . . . . . 80 – D 2
B170 Parking aid sensor, rear, inner right
rear bumper – Valeo . . . . . 59 – C 2
B170 Parking aid sensor, rear, inner right
rear bumper – Bosch . . . . . 80 – C 2
B171 Parking aid sensor, rear, outer right
rear bumper – Valeo . . . . . 59 – B 2
B171 Parking aid sensor, rear, outer right
rear bumper – Bosch . . . . . 80 – C 2
B177 Crash sensor
engine compartment, front, centre . . . . . 8 – F 3
B177 Crash sensor
engine compartment, front, centre . . . . . 9 – E 4
B177 Crash sensor
engine compartment, front, centre . . . . . 10 – E 5
B177 Crash sensor
engine compartment, front, centre . . . . . 11 – E 4
B187 Pre–catalyst exhaust gas temperature sensor
in exhaust system – 1.8L Duratec–SCi (MI4)
B191 Transmission Fluid Temperature (TFT) sensor
transmission – 5–speed automatic transmission (5F31J)
B192 Catalyst monitor sensor
in exhaust system – 1.8/2.0L Duratec–HE (MI4)
B192 Catalyst monitor sensor
in exhaust system – 1.8L Duratec–SCi (MI4)
B192 Catalyst monitor sensor
in exhaust system – 2.5L Duratec–VE (VE6)
B192 Catalyst monitor sensor
in exhaust system – 3.0L Duratec–SE (VE6)
B192 Catalyst monitor sensor
in exhaust system – F37, 1.8/2.0L Duratec–HE (MI4)
B192 Catalyst monitor sensor
in exhaust system – F37, 1.8L Duratec–SCi (MI4)

B192	Catalyst monitor sensor in exhaust system – F37, 2.5L Duratec–VE (VE6)	
B192	Catalyst monitor sensor in exhaust system – F37, 3.0L Duratec–SE (VE6)	
B197	Swirl plate position sensor engine, front, LH side – 1.8L Duratec–SCi (MI4)	75 – E 4
B198	UEGO sensor in exhaust system – 1.8L Duratec–SCi (MI4)	
B198	UEGO sensor in exhaust system – F37, 1.8L Duratec–SCi (MI4)	
B199	Catalyst monitor sensor, LH side in exhaust system – 3.0L Duratec–ST (VE6)	67 – B 1
B199	Catalyst monitor sensor, LH side in exhaust system – 3.0L Duratec–ST (VE6), as of 04/2004	67 – B 1
B199	Catalyst monitor sensor, LH side in exhaust system – 3.0L Duratec–ST (VE6), before 04/2004	67 – B 1
B199	Catalyst monitor sensor, LH side in exhaust system – F37, 3.0L Duratec–ST (VE6), as of 04/2004	67 – B 1
B199	Catalyst monitor sensor, LH side in exhaust system – F37, 3.0L Duratec–ST (VE6), before 04/2004	67 – B 1
B203	Ambient air temperature sensor engine compartment, front, RH side – 1.8/2.0L Duratec–HE (MI4)	3 – B 1
B203	Ambient air temperature sensor engine compartment, front, RH side – 1.8L Duratec–SCi (MI4)	3 – B 1
B203	Ambient air temperature sensor engine compartment, front, RH side – 2.5L Duratec–VE (VE6)	3 – B 1
B203	Ambient air temperature sensor engine compartment, front, RH side – 3.0L Duratec–SE (VE6)	3 – B 1
B203	Ambient air temperature sensor engine compartment, front, RH side – 3.0L Duratec–ST (VE6)	3 – B 1
B203	Ambient air temperature sensor engine compartment, front, RH side – Petrol engines	3 – B 1
B203	Ambient air temperature sensor engine compartment, front, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	5 – B 2
B203	Ambient air temperature sensor engine compartment, front, RH side – 2.0L Duratorq–TDCi (Puma) Diesel	5 – B 2
B203	Ambient air temperature sensor engine compartment, front, RH side – 2.2L Duratorq–TDCi (Puma) Diesel	5 – B 2
B219	Cellular phone antenna roof, front, centre – with external CD changer and/or video system	
B219	Cellular phone antenna roof, front, centre – without external CD changer and video system	
B220	Brake booster sensor engine compartment, rear – 1.8L Duratec–SCi (MI4)	
B225	Fuel rail pressure transducer sensor engine compartment – 1.8L Duratec–SCi (MI4)	
B225	Fuel rail pressure transducer sensor engine compartment – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel	

B225 Fuel rail pressure transducer sensor
engine compartment – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
B235 Intermediate Shaft Speed (ISS) sensor
transmission – 5–speed automatic transmission (5F31J)
B238 Side air bag sensor, driver
LH B–pillar, bottom – Side air bag . . . . . 45 – E 4
B238 Side air bag sensor, driver
RH B–pillar, bottom – Side air bag . . . . . 46 – B 3
B239 Side air bag sensor, passenger
LH B–pillar, bottom – Side air bag . . . . . 45 – E 4
B239 Side air bag sensor, passenger
RH B–pillar, bottom – Side air bag . . . . . 46 – B 3
B244 Headlamp levelling sensor, rear
vehicle underbody, rear axle, LH side, rear – Headlamp Levelling, with high intensity discharge headlamps . . . . . 54 – D 4
B244 Headlamp levelling sensor, rear
vehicle underbody, rear axle, LH side, rear – Headlamp Levelling, with high intensity discharge headlamps . . . . . 55 – C 4
B245 Headlamp levelling sensor, front
wheelwell, front, LH side – Headlamp Levelling, with high intensity discharge headlamps 7 – D 1
B246 Discharge temperature sensor, floor
behind dash panel, centre – EATC . . . . . 14 – F 3
B246 Discharge temperature sensor, floor
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 14 – F 3
B246 Discharge temperature sensor, floor
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 14 – F 3
B246 Discharge temperature sensor, floor
behind dash panel, centre – with EATC, before 04/2004 . . . . . 14 – F 3
B246 Discharge temperature sensor, floor
behind dash panel, centre – EATC . . . . . 15 – E 4
B246 Discharge temperature sensor, floor
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 15 – E 4
B246 Discharge temperature sensor, floor
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 15 – E 4
B246 Discharge temperature sensor, floor
behind dash panel, centre – with EATC, before 04/2004 . . . . . 15 – E 4
B247 Discharge temperature sensor, panel
behind dash panel – EATC
B247 Discharge temperature sensor, panel
behind dash panel – with EATC, as of 04/2004
B247 Discharge temperature sensor, panel
behind dash panel – with EATC, before 04/2004
B248 Electronic thermostat
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 60 – A 3
B248 Electronic thermostat
engine – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 60 – A 3
B248 Electronic thermostat
engine – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 60 – A 3

B248 Electronic thermostat
engine – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 60 – A 3
B248 Electronic thermostat
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 61 – A 3
B248 Electronic thermostat
engine – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 61 – A 3
B248 Electronic thermostat
engine – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 61 – A 3
B248 Electronic thermostat
engine – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 61 – A 3
B248 Electronic thermostat
engine – 1.8L Duratec–SCi (MI4)
B248 Electronic thermostat
engine – F42, 1.8L Duratec–SCi (MI4)
B251 Engine RPM sensor
engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
B300 Catalyst monitor sensor, RH side
roof, front, centre – 3.0L Duratec–ST (VE6)
B300 Catalyst monitor sensor, RH side
roof, front, centre – 3.0L Duratec–ST (VE6), as of 04/2004
B300 Catalyst monitor sensor, RH side
roof, front, centre – 3.0L Duratec–ST (VE6), before 04/2004
B300 Catalyst monitor sensor, RH side
roof, front, centre – F37, 3.0L Duratec–ST (VE6), as of 04/2004
B300 Catalyst monitor sensor, RH side
roof, front, centre – F37, 3.0L Duratec–ST (VE6), before 04/2004
B302 Autolamps/rain sensor
roof, front, centre – Autolamps
B302 Autolamps/rain sensor
roof, front, centre – F91
B302 Autolamps/rain sensor
roof, front, centre – G202
B302 Autolamps/rain sensor
roof, front, centre – with rain sensor
B303 Rain sensor
roof, front, centre – F91
B303 Rain sensor
roof, front, centre – G202
B303 Rain sensor
roof, front, centre – with rain sensor
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 1.8/2.0L Duratec–HE (MI4) . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 1.8L Duratec–SCi (MI4) . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 1.8L Duratec–SCi (MI4) . . . . . 23 – E 2

D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 2.5L Duratec–VE (VE6) . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 3.0L Duratec–SE (VE6) . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 3.0L Duratec–ST (VE6) . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 5–speed automatic transmission (5F31J), Diesel engines . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 5–speed automatic transmission (5F31J), Petrol engines . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – as of 08/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – before 08/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Bluetooth voice control . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Bosch 8.0 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pin 7 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pin 7 . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 2 and 10, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 2, 10 and 13, Diesel engines, except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 3 and 11, with external CD changer and video system . . . . . 23 – B 2

D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 3 and 11, with external CD changer or video system . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 3 and 11, with voice control . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 3 and 11, without external CD changer and video system . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 4, 5 and 16 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004 . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Diesel engines, with fuel fired heater . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Diesel engines, with fuel fired heater, as of 08/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – DVD navigation system with touch screen . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – EATC, as of 04/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – EATC, before 04/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – F72, with external CD changer and/or video system . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – F72, without external CD changer and video system . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – G203 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – G203 . . . . . 23 – B 2

D20 Data Link Connector (DLC)
dash panel (LHD), LH side – G204, as of 04/2004 . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – G204, before 04/2004 . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Manual A/C, before 04/2004 . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Petrol engines . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Petrol engines . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 23 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – Pre–equipment pack . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – with EATC, as of 04/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – with EATC, before 04/2004 . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – with external CD changer . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – With high intensity discharge headlamps . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – with video system . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – without external CD changer and video system . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side . . . . . 23 – E 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 1.8/2.0L Duratec–HE (MI4) . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – 1.8L Duratec–SCi (MI4) . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 1.8L Duratec–SCi (MI4) . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 25 – B 2

D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 2.5L Duratec–VE (VE6) . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 3.0L Duratec–SE (VE6) . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 3.0L Duratec–ST (VE6) . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 5–speed automatic transmission (5F31J), Diesel engines . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – 5–speed automatic transmission (5F31J), Petrol engines . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – as of 08/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – before 08/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Bluetooth voice control . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Bosch 8.0 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pin 7 . . . . . 25 – E 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pin 7 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 2 and 10, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 2, 10 and 13, Diesel engines, except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 25 – E 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 3 and 11, with external CD changer and video system . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 3 and 11, with external CD changer or video system . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 3 and 11, with voice control . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 3 and 11, without external CD changer and video system . . . . . 25 – B 2

D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 4, 5 and 16 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004 . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Diesel engines, with fuel fired heater . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – DVD navigation system with touch screen . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – EATC, as of 04/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – EATC, before 04/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (LHD), LH side – F72, with external CD changer and/or video system . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – F72, without external CD changer and video system . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – G203 . . . . . 25 – E 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – G203 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – G204, as of 04/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – G204, before 04/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Manual A/C, before 04/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Petrol engines . . . . . 25 – E 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Petrol engines . . . . . 25 – B 2

D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – Pre–equipment pack . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – with EATC, as of 04/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – with EATC, before 04/2004 . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – with external CD changer . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – With high intensity discharge headlamps . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – with video system . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side – without external CD changer and video system . . . . . 25 – B 2
D20 Data Link Connector (DLC)
dash panel (RHD), RH side . . . . . 25 – B 2
D41 Trailer socket
rear bumper, centre – F74, before 01/2004
D41 Trailer socket
rear bumper, centre – F92, before 01/2004
D41 Trailer socket
rear bumper, centre – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
D41 Trailer socket
rear bumper, centre – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
D41 Trailer socket
rear bumper, centre – Fog lamps, with trailer socket, wagon, as of 01/2004
D41 Trailer socket
rear bumper, centre – Fog lamps, with trailer socket, wagon, before 01/2004
D41 Trailer socket
rear bumper, centre – G300
D41 Trailer socket
rear bumper, centre – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
D41 Trailer socket
rear bumper, centre – G302, G303, before 01/2004
D41 Trailer socket
rear bumper, centre – G303, as of 01/2004
D41 Trailer socket
rear bumper, centre – G304, with 13–pin trailer socket, as of 01/2004
D41 Trailer socket
rear bumper, centre – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
D41 Trailer socket
rear bumper, centre – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps

D41 Trailer socket
rear bumper, centre – Parking Lamps, with trailer socket, wagon, with autolamps
D41 Trailer socket
rear bumper, centre – Parking Lamps, with trailer socket, wagon, without autolamps
D41 Trailer socket
rear bumper, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
D41 Trailer socket
rear bumper, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
D41 Trailer socket
rear bumper, centre – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
D41 Trailer socket
rear bumper, centre – Reversing lamps, with trailer socket, wagon, before 01/2004
D41 Trailer socket
rear bumper, centre – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
D41 Trailer socket
rear bumper, centre – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
D41 Trailer socket
rear bumper, centre – Stop Lamps, with trailer socket, wagon, as of 01/2004
D41 Trailer socket
rear bumper, centre – Stop Lamps, with trailer socket, wagon, before 01/2004
D41 Trailer socket
rear bumper, centre – Trailer socket, with 7–pin trailer socket, as of 01/2004
D41 Trailer socket
rear bumper, centre – Trailer socket, before 01/2004
D41 Trailer socket
rear bumper, centre – Trailer socket, wagon, as of 01/2004
D41 Trailer socket
rear bumper, centre – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
D41 Trailer socket
rear bumper, centre – Turn Signal and Hazard Lamps, with trailer socket, wagon
D41 Trailer socket
rear bumper, centre – with trailer socket, 4–door model/5–door model
D41 Trailer socket
rear bumper, centre – with trailer socket, wagon
D44 Power point, RH side rear
behind loading space lining, RH side – F70 . . . . . 52 – A 3
D44 Power point, RH side rear
behind loading space lining, RH side – G205 . . . . . 52 – A 3
D44 Power point, RH side rear
behind loading space lining, RH side – Rear power point . . . . . 52 – A 3
D46 Auxiliary trailer socket
rear bumper, centre – F74, before 01/2004
D46 Auxiliary trailer socket
rear bumper, centre – F92, before 01/2004

D46	Auxiliary trailer socket rear bumper, centre – G300	
D46	Auxiliary trailer socket rear bumper, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	
D46	Auxiliary trailer socket rear bumper, centre – Reversing lamps, with trailer socket, wagon, before 01/2004	
D46	Auxiliary trailer socket rear bumper, centre – Trailer socket, before 01/2004	
D49	High intensity discharge headlamp calibration connector engine compartment – Data link connector, pin 7	4 – F 4
D49	High intensity discharge headlamp calibration connector engine compartment – G104	4 – F 4
D49	High intensity discharge headlamp calibration connector engine compartment – Headlamps, Low beam, with high intensity discharge headlamps	4 – F 4
D49	High intensity discharge headlamp calibration connector engine compartment – With high intensity discharge headlamps	4 – F 4
D49	High intensity discharge headlamp calibration connector engine compartment – Data link connector, pin 7	6 – F 4
D49	High intensity discharge headlamp calibration connector engine compartment – G104	6 – F 4
D49	High intensity discharge headlamp calibration connector engine compartment – Headlamps, Low beam, with high intensity discharge headlamps	6 – F 4
D49	High intensity discharge headlamp calibration connector engine compartment – With high intensity discharge headlamps	6 – F 4
D81	Auxiliary IN in glove compartment – DVD navigation system with touch screen	
D81	Auxiliary IN in glove compartment – DVD navigation system with touch screen – with video system	
D81	Auxiliary IN in glove compartment – Pre–equipment pack	
D81	Auxiliary IN in glove compartment – with external CD changer	
D81	Auxiliary IN in glove compartment – with video system	
D81	Auxiliary IN in glove compartment – without external CD changer and video system	
D81	Auxiliary IN in glove compartment	
E1	Headlamp, LH side front of vehicle (exterior), LH side – F16	4 – F 3
E1	Headlamp, LH side front of vehicle (exterior), LH side – F64, with trailer socket, 4–door model/5–door model	4 – F 3
E1	Headlamp, LH side front of vehicle (exterior), LH side – F64, with trailer socket, wagon	4 – F 3
E1	Headlamp, LH side front of vehicle (exterior), LH side – F64, without trailer socket, 4–door model/5–door model	4 – F 3
E1	Headlamp, LH side front of vehicle (exterior), LH side – F64, without trailer socket, wagon	4 – F 3

E1 Headlamp, LH side
front of vehicle (exterior), LH side – F85, F86 . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – G104 . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamp Levelling, without high intensity discharge headlamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Light switch, with autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Light switch, without autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Turn Signal and Hazard Lamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Without high intensity discharge headlamps . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – without trailer socket, 4–door model/5–door model . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – without trailer socket, wagon . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side . . . . . 4 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – F16 . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – F64, with trailer socket, 4–door model/5–door model 6 – F 3

E1 Headlamp, LH side
front of vehicle (exterior), LH side – F64, with trailer socket, wagon . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – F64, without trailer socket, 4–door model/5–door model . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – F64, without trailer socket, wagon . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – F85, F86 . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – G104 . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamp Levelling, without high intensity discharge headlamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Light switch, with autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Light switch, without autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Turn Signal and Hazard Lamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – Without high intensity discharge headlamps . . . . . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – without trailer socket, 4–door model/5–door model . 6 – F 3
E1 Headlamp, LH side
front of vehicle (exterior), LH side – without trailer socket, wagon . . . . . 6 – F 3

E1	Headlamp, LH side front of vehicle (exterior), LH side	6 – F 3
E3	Turn signal lamp, LH front front of vehicle (exterior), LH side – G104	7 – C 4
E3	Turn signal lamp, LH front front of vehicle (exterior), LH side – Turn Signal and Hazard Lamps	7 – C 4
E3	Turn signal lamp, LH front front of vehicle (exterior), LH side	7 – C 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – F18	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – F63, 4–door model/5–door model	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – F63, wagon	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – F85, F86	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – G105	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Headlamp Levelling, without high intensity discharge headlamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Light switch, with autolamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Light switch, without autolamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, with autolamps	3 – A 4
E7	Headlamp, RH side front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, without autolamps	3 – A 4

E7 Headlamp, RH side
front of vehicle (exterior), RH side – Turn Signal and Hazard Lamps . . . . . 3 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Without high intensity discharge headlamps . . . . . 3 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – without trailer socket, 4–door model/5–door model . 3 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – without trailer socket, wagon . . . . . 3 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side . . . . . 3 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – F18 . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – F63, 4–door model/5–door model . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – F63, wagon . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – F85, F86 . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – G105 . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Headlamp Levelling, without high intensity discharge headlamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Light switch, with autolamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Light switch, without autolamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 5 – A 4

E7 Headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Turn Signal and Hazard Lamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – Without high intensity discharge headlamps . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – without trailer socket, 4–door model/5–door model . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side – without trailer socket, wagon . . . . . 5 – A 4
E7 Headlamp, RH side
front of vehicle (exterior), RH side . . . . . 5 – A 4
E8 Turn signal lamp, RH front
front of vehicle (exterior), RH side – G105 . . . . . 7 – C 4
E8 Turn signal lamp, RH front
front of vehicle (exterior), RH side – Turn Signal and Hazard Lamps . . . . . 7 – C 4
E8 Turn signal lamp, RH front
front of vehicle (exterior), RH side . . . . . 7 – C 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Bosch, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – F64, with trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – F64, without trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Fog lamps, without trailer socket, 4–door model/5–door model 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – G300, without trailer socket, 4–door model/5–door model . . . 47 – B 4

E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – with trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – without trailer socket, 4–door model/5–door model . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side . . . . . 47 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 49 – B 4

E9 Rear lamp assembly, LH side
vehicle rear end, LH side – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Bosch, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – F64, with trailer socket, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – F64, without trailer socket, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Fog lamps, without trailer socket, 4–door model/5–door model 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – G300, without trailer socket, 4–door model/5–door model . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 49 – B 4

E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – with trailer socket, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – without trailer socket, 4–door model/5–door model . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side . . . . . 49 – B 4
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – 4–speed automatic transmission (CD4E), wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – 5–speed automatic transmission (5F31J), wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Bosch, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – F64, with trailer socket, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – F64, without trailer socket, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004 . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, before 01/2004 . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Fog lamps, without trailer socket, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004 . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004 . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – G300, without trailer socket, wagon . . . . . 51 – A 3

E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, with autolamps . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, without autolamps 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Reversing lamps, without trailer socket, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004 . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004 . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, wagon 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Valeo, wagon, as of 01/2004 . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Valeo, wagon, before 01/2004 . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – with trailer socket, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – without trailer socket, wagon . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side . . . . . 51 – A 3
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
E9 Rear lamp assembly, LH side
vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 48 – E 4

E10 Rear lamp assembly, RH side
vehicle rear end, RH side – F63, 4–door model/5–door model . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Fog lamps, without trailer socket, 4–door model/5–door model 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – G300, without trailer socket, 4–door model/5–door model . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 48 – E 4

E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – with autolamps . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – with daytime running lamps . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – with trailer socket, 4–door model/5–door model . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – without daytime running lamps, without autolamps . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – without trailer socket, 4–door model/5–door model . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side . . . . . 48 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – F63, 4–door model/5–door model . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Fog lamps, without trailer socket, 4–door model/5–door model 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – G300, without trailer socket, 4–door model/5–door model . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 50 – E 4

E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – with autolamps . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – with daytime running lamps . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – with trailer socket, 4–door model/5–door model . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – without daytime running lamps, without autolamps . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – without trailer socket, 4–door model/5–door model . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side . . . . . 50 – E 4
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 52 – F 5
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – 4–speed automatic transmission (CD4E), wagon . . . . . 52 – F 5
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – 5–speed automatic transmission (5F31J), wagon . . . . . 52 – F 5
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – F63, wagon . . . . . 52 – F 5
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Fog lamps, with trailer socket, wagon, as of 01/2004 . . . . . 52 – F 5

E10	Rear lamp assembly, RH side vehicle rear end, RH side – Fog lamps, with trailer socket, wagon, before 01/2004	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Fog lamps, without trailer socket, wagon	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – G205	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Light switch, Fog lamps, with trailer socket, wagon	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Light switch, Fog lamps, without trailer socket, wagon	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Parking Lamps, with trailer socket, wagon, with autolamps	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Parking Lamps, with trailer socket, wagon, without autolamps	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Reversing lamps, without trailer socket, wagon	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Stop Lamps, with trailer socket, wagon, as of 01/2004	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Stop Lamps, with trailer socket, wagon, before 01/2004	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Stop Lamps, without trailer socket, wagon	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Turn Signal and Hazard Lamps, with trailer socket, wagon	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Turn Signal and Hazard Lamps, without trailer socket, wagon	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – with autolamps	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – with daytime running lamps	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – with trailer socket, wagon	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – without daytime running lamps, without autolamps	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – without trailer socket, wagon	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side	52 – F 5
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
E10	Rear lamp assembly, RH side vehicle rear end, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	

E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
E10 Rear lamp assembly, RH side
vehicle rear end, RH side – Reversing lamps, with trailer socket, wagon, before 01/2004
E28 Glove compartment lamp
in glove compartment – F97 . . . . . 23 – C 3
E28 Glove compartment lamp
in glove compartment . . . . . 23 – C 3
E28 Glove compartment lamp
in glove compartment – F97 . . . . . 25 – E 1
E28 Glove compartment lamp
in glove compartment . . . . . 25 – E 1
E30 Vanity mirror lamp, LH side
below LH sun visor – F99, 4–door model/5–door model . . . . . 21 – F 5
E30 Vanity mirror lamp, LH side
below LH sun visor – F99, wagon . . . . . 21 – F 5
E30 Vanity mirror lamp, LH side
below LH sun visor – G200 . . . . . 21 – F 5
E30 Vanity mirror lamp, LH side
below LH sun visor . . . . . 21 – F 5
E31 Vanity mirror lamp, RH side
below RH sun visor – F99, 4–door model/5–door model . . . . . 21 – B 4
E31 Vanity mirror lamp, RH side
below RH sun visor – F99, wagon . . . . . 21 – B 4
E31 Vanity mirror lamp, RH side
below RH sun visor – G200 . . . . . 21 – B 4
E31 Vanity mirror lamp, RH side
below RH sun visor . . . . . 21 – B 4
E34 Licence plate lamp, LH side
Decklid, centre, 4–door model – F97 . . . . . 56 – C 5
E34 Licence plate lamp, LH side
Decklid, centre, 4–door model – G300, 4–door model . . . . . 56 – C 5
E34 Licence plate lamp, LH side
Decklid, centre, 4–door model – Licence plate lamps . . . . . 56 – C 5
E34 Licence plate lamp, LH side
in tailgate, 5–door model – F97 . . . . . 57 – C 3
E34 Licence plate lamp, LH side
in tailgate, 5–door model – G300, 5–door model/wagon . . . . . 57 – C 3
E34 Licence plate lamp, LH side
in tailgate, 5–door model – Licence plate lamps . . . . . 57 – C 3
E34 Licence plate lamp, LH side
in tailgate, wagon – F97 . . . . . 58 – C 5
E34 Licence plate lamp, LH side
in tailgate, wagon – G300, 5–door model/wagon . . . . . 58 – C 5
E34 Licence plate lamp, LH side
in tailgate, wagon – Licence plate lamps . . . . . 58 – C 5
E35 Licence plate lamp, RH side
Decklid, centre, 4–door model – F97 . . . . . 56 – A 2

E35 Licence plate lamp, RH side
Decklid, centre, 4–door model – G300, 4–door model . . . . . 56 – A 2
E35 Licence plate lamp, RH side
Decklid, centre, 4–door model – Licence plate lamps . . . . . 56 – A 2
E35 Licence plate lamp, RH side
Decklid, centre, 4–door model – with autolamps . . . . . 56 – A 2
E35 Licence plate lamp, RH side
Decklid, centre, 4–door model – with daytime running lamps . . . . . 56 – A 2
E35 Licence plate lamp, RH side
Decklid, centre, 4–door model – without daytime running lamps, without autolamps . . . . . 56 – A 2
E35 Licence plate lamp, RH side
Decklid, centre, 4–door model . . . . . 56 – A 2
E35 Licence plate lamp, RH side
in tailgate, 5–door model – F97 . . . . . 57 – A 1
E35 Licence plate lamp, RH side
in tailgate, 5–door model – G300, 5–door model/wagon . . . . . 57 – A 1
E35 Licence plate lamp, RH side
in tailgate, 5–door model – Licence plate lamps . . . . . 57 – A 1
E35 Licence plate lamp, RH side
in tailgate, 5–door model – with autolamps . . . . . 57 – A 1
E35 Licence plate lamp, RH side
in tailgate, 5–door model – with daytime running lamps . . . . . 57 – A 1
E35 Licence plate lamp, RH side
in tailgate, 5–door model – without daytime running lamps, without autolamps . . . . . 57 – A 1
E35 Licence plate lamp, RH side
in tailgate, 5–door model . . . . . 57 – A 1
E35 Licence plate lamp, RH side
in tailgate, wagon – F97 . . . . . 58 – B 4
E35 Licence plate lamp, RH side
in tailgate, wagon – G300, 5–door model/wagon . . . . . 58 – B 4
E35 Licence plate lamp, RH side
in tailgate, wagon – Licence plate lamps . . . . . 58 – B 4
E35 Licence plate lamp, RH side
in tailgate, wagon – with autolamps . . . . . 58 – B 4
E35 Licence plate lamp, RH side
in tailgate, wagon – with daytime running lamps . . . . . 58 – B 4
E35 Licence plate lamp, RH side
in tailgate, wagon – without daytime running lamps, without autolamps . . . . . 58 – B 4
E35 Licence plate lamp, RH side
in tailgate, wagon . . . . . 58 – B 4
E42 Fog lamp, RH side front
front bumper, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 1 – E 2
E42 Fog lamp, RH side front
front bumper, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 1 – E 2
E42 Fog lamp, RH side front
front bumper, RH side – Fog lamps, with trailer socket, wagon, as of 01/2004 . . . . . 1 – E 2
E42 Fog lamp, RH side front
front bumper, RH side – Fog lamps, with trailer socket, wagon, before 01/2004 . . . . . 1 – E 2

E42 Fog lamp, RH side front
front bumper, RH side – Fog lamps, without trailer socket, 4–door model/5–door model . . 1 – E 2
E42 Fog lamp, RH side front
front bumper, RH side – Fog lamps, without trailer socket, wagon . . . . . 1 – E 2
E42 Fog lamp, RH side front
front bumper, RH side – G104 . . . . . 1 – E 2
E42 Fog lamp, RH side front
front bumper, RH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 1 – E 2
E42 Fog lamp, RH side front
front bumper, RH side – Light switch, Fog lamps, with trailer socket, wagon . . . . . 1 – E 2
E42 Fog lamp, RH side front
front bumper, RH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 1 – E 2
E42 Fog lamp, RH side front
front bumper, RH side – Light switch, Fog lamps, without trailer socket, wagon . . . . . 1 – E 2
E43 Fog lamp, LH side front
front bumper, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004 . . . . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – Fog lamps, with trailer socket, wagon, before 01/2004 . . . . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – Fog lamps, without trailer socket, 4–door model/5–door model . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – Fog lamps, without trailer socket, wagon . . . . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – G104 . . . . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – Light switch, Fog lamps, with trailer socket, wagon . . . . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 1 – B 2
E43 Fog lamp, LH side front
front bumper, LH side – Light switch, Fog lamps, without trailer socket, wagon . . . . . 1 – B 2
E57 Luggage compartment lamp
in luggage compartment, LH side, 4–door model – F99, 4–door model/5–door model . . . . 47 – C 5
E57 Luggage compartment lamp
in luggage compartment, LH side, 4–door model . . . . . 47 – C 5
E57 Luggage compartment lamp
in luggage compartment, LH side, 5–door model – F99, 4–door model/5–door model
E57 Luggage compartment lamp
in luggage compartment, LH side, 5–door model

E61 Footwell lamp, LH front
in LH front footwell – F99, 4–door model/5–door model . . . . . 23 – B 1
E61 Footwell lamp, LH front
in LH front footwell – F99, wagon . . . . . 23 – B 1
E61 Footwell lamp, LH front
in LH front footwell . . . . . 23 – B 1
E61 Footwell lamp, LH front
in LH front footwell – F99, 4–door model/5–door model . . . . . 25 – F 4
E61 Footwell lamp, LH front
in LH front footwell – F99, wagon . . . . . 25 – F 4
E61 Footwell lamp, LH front
in LH front footwell . . . . . 25 – F 4
E62 Footwell lamp, RH front
in RH front footwell – F99, 4–door model/5–door model . . . . . 24 – C 2
E62 Footwell lamp, RH front
in RH front footwell – F99, wagon . . . . . 24 – C 2
E62 Footwell lamp, RH front
in RH front footwell . . . . . 24 – C 2
E62 Footwell lamp, RH front
in RH front footwell – F99, 4–door model/5–door model . . . . . 26 – C 3
E62 Footwell lamp, RH front
in RH front footwell – F99, wagon . . . . . 26 – C 3
E62 Footwell lamp, RH front
in RH front footwell . . . . . 26 – C 3
E63 Front dome lamp
roof, front, centre – F99, 4–door model/5–door model . . . . . 21 – C 2
E63 Front dome lamp
roof, front, centre – F99, wagon . . . . . 21 – C 2
E63 Front dome lamp
roof, front, centre – G200 . . . . . 21 – C 2
E63 Front dome lamp
roof, front, centre . . . . . 21 – C 2
E64 Rear dome lamp
in roof panel, rear – F99, 4–door model/5–door model . . . . . 18 – E 5
E64 Rear dome lamp
in roof panel, rear – G200 . . . . . 18 – E 5
E64 Rear dome lamp
in roof panel, rear . . . . . 18 – E 5
E64 Rear dome lamp
in roof panel, rear – F99, 4–door model/5–door model . . . . . 19 – E 4
E64 Rear dome lamp
in roof panel, rear – G200 . . . . . 19 – E 4
E64 Rear dome lamp
in roof panel, rear . . . . . 19 – E 4
E64 Rear dome lamp
in roof panel, rear – F99, wagon . . . . . 20 – B 4
E64 Rear dome lamp
in roof panel, rear – G200 . . . . . 20 – B 4
E64 Rear dome lamp
in roof panel, rear . . . . . 20 – B 4

E70 High mounted stop lamp
roof, rear, centre, 4–door model – 4–speed automatic transmission (CD4E) . . . . . 18 – F 4
E70 High mounted stop lamp
roof, rear, centre, 4–door model – 5–speed automatic transmission (5F31J) . . . . . 18 – F 4
E70 High mounted stop lamp
roof, rear, centre, 4–door model – G200 . . . . . 18 – F 4
E70 High mounted stop lamp
roof, rear, centre, 4–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 18 – F 4
E70 High mounted stop lamp
roof, rear, centre, 4–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 18 – F 4
E70 High mounted stop lamp
roof, rear, centre, 4–door model – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 18 – F 4
E70 High mounted stop lamp
in tailgate, top, 5–door model – 4–speed automatic transmission (CD4E) . . . . . 57 – D 4
E70 High mounted stop lamp
in tailgate, top, 5–door model – 5–speed automatic transmission (5F31J) . . . . . 57 – D 4
E70 High mounted stop lamp
in tailgate, top, 5–door model – G300, 5–door model/wagon . . . . . 57 – D 4
E70 High mounted stop lamp
in tailgate, top, 5–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 57 – D 4
E70 High mounted stop lamp
in tailgate, top, 5–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 57 – D 4
E70 High mounted stop lamp
in tailgate, top, 5–door model – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 57 – D 4
E70 High mounted stop lamp
in tailgate, wagon – 4–speed automatic transmission (CD4E) . . . . . 58 – D 4
E70 High mounted stop lamp
in tailgate, wagon – 5–speed automatic transmission (5F31J) . . . . . 58 – D 4
E70 High mounted stop lamp
in tailgate, wagon – G300, 5–door model/wagon . . . . . 58 – D 4
E70 High mounted stop lamp
in tailgate, wagon – Stop Lamps, with trailer socket, wagon, as of 01/2004 . . . . . 58 – D 4
E70 High mounted stop lamp
in tailgate, wagon – Stop Lamps, with trailer socket, wagon, before 01/2004 . . . . . 58 – D 4
E70 High mounted stop lamp
in tailgate, wagon – Stop Lamps, without trailer socket, wagon . . . . . 58 – D 4
E87 Cargo space lamp
roof, rear, wagon – F99, wagon . . . . . 20 – E 4
E87 Cargo space lamp
roof, rear, wagon – G200 . . . . . 20 – E 4
E87 Cargo space lamp
roof, rear, wagon . . . . . 20 – E 4
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – 1.8/2.0L Duratec–HE (MI4) . . . . . 4 – F 3

E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – 1.8L Duratec–SCi (MI4) . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – 2.5L Duratec–VE (VE6) . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – 3.0L Duratec–ST (VE6) . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – Data link connector, pin 7 . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – F16 . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – F64, with trailer socket, 4–door model/5–door model 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – F64, with trailer socket, wagon . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – F64, without trailer socket, 4–door model/5–door model . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – F64, without trailer socket, wagon . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – F85, F86 . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – F93 . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – G104 . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – Headlamp Levelling, with high intensity discharge headlamps . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 4 – F 3

E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Petrol engines . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6) . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Pre–equipment pack, Petrol engines . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Turn Signal and Hazard Lamps . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – With high intensity discharge headlamps . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – without trailer socket, 4–door model/5–door model . 4 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – without trailer socket, wagon . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side . . . . . 4 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Data link connector, pin 7 . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Diesel engines . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – F16 . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – F64, with trailer socket, 4–door model/5–door model 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – F64, with trailer socket, wagon . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – F64, without trailer socket, 4–door model/5–door model . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – F64, without trailer socket, wagon . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – F85, F86 . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – F93 . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – G104 . . . . . 6 – F 3

E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Headlamp Levelling, with high intensity discharge headlamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – Turn Signal and Hazard Lamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – With high intensity discharge headlamps . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – without trailer socket, 4–door model/5–door model . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side – without trailer socket, wagon . . . . . 6 – F 3
E181 High intensity discharge headlamp, LH side
front of vehicle (exterior), LH side . . . . . 6 – F 3
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Data link connector, pin 7 . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F18 . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F63, 4–door model/5–door model . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F63, wagon . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F85, F86 . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F93 . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – G105 . . . . . 3 – A 4

E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Headlamp Levelling, with high intensity discharge headlamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Turn Signal and Hazard Lamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – With high intensity discharge headlamps . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – without trailer socket, 4–door model/5–door model . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – without trailer socket, wagon . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side . . . . . 3 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Data link connector, pin 7 . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F18 . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F63, 4–door model/5–door model . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F63, wagon . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F85, F86 . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – F93 . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – G105 . . . . . 5 – A 4

E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Headlamp Levelling, with high intensity discharge headlamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – Turn Signal and Hazard Lamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – With high intensity discharge headlamps . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – without trailer socket, 4–door model/5–door model . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side – without trailer socket, wagon . . . . . 5 – A 4
E182 High intensity discharge headlamp, RH side
front of vehicle (exterior), RH side . . . . . 5 – A 4
H1 Horn
engine compartment, LH side, front – G104 . . . . . 4 – E 2
H1 Horn
engine compartment, LH side, front . . . . . 4 – E 2
H1 Horn
engine compartment, LH side, front – G104 . . . . . 6 – E 2
H1 Horn
engine compartment, LH side, front . . . . . 6 – E 2
H2 Low pitch horn
engine compartment, LH side, front – G104 . . . . . 4 – E 2
H2 Low pitch horn
engine compartment, LH side, front . . . . . 4 – E 2
H2 Low pitch horn
engine compartment, LH side, front – G104 . . . . . 6 – E 1
H2 Low pitch horn
engine compartment, LH side, front . . . . . 6 – E 1

H3 High pitch horn
engine compartment, LH side, front – G104 . . . . . 4 – E 2
H3 High pitch horn
engine compartment, LH side, front . . . . . 4 – E 2
H3 High pitch horn
engine compartment, LH side, front – G104 . . . . . 6 – E 1
H3 High pitch horn
engine compartment, LH side, front . . . . . 6 – E 1
H5 Anti–theft alarm horn
in luggage compartment, LH side, behind luggage compartment lining, 4–door model . . . 47 – F 3
H5 Anti–theft alarm horn
in luggage compartment, LH side, behind luggage compartment lining, 5–door model . . . 49 – F 3
H5 Anti–theft alarm horn
behind loading space lining, rear, RH side, wagon . . . . . 52 – D 3
K1 Heated rear window relay
under dash panel, LH side, in Central Junction Box (CJB) – F4, F5, F6 . . . . . 32 – B 5
K1 Heated rear window relay
under dash panel, LH side, in Central Junction Box (CJB) – Heated rear window, Heated exterior mirrors . . . . . 32 – B 5
K1 Heated rear window relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 32 – B 5
K1 Heated rear window relay
under dash panel, LH side, in Central Junction Box (CJB) – F4, F5, F6 . . . . . 33 – C 5
K1 Heated rear window relay
under dash panel, LH side, in Central Junction Box (CJB) – Heated rear window, Heated exterior mirrors . . . . . 33 – C 5
K1 Heated rear window relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 33 – C 5
K4 Fuel pump relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – E 4
K4 Fuel pump relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 29 – E 4
K4 Fuel pump relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – E 4
K4 Fuel pump relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 29 – E 4
K4 Fuel pump relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 29 – E 4
K4 Fuel pump relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 29 – E 4
K4 Fuel pump relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 29 – E 4

K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F27	29 – E 4
K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F27, 3.0L Duratec–SE (VE6)	29 – E 4
K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F40, 1.8L Duratec–SCi (MI4)	29 – E 4
K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission	29 – E 4
K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission	29 – E 4
K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 2.5L Duratec–VE (VE6)	29 – E 4
K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 3.0L Duratec–SE (VE6)	29 – E 4
K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 3.0L Duratec–ST (VE6), as of 04/2004	29 – E 4
K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 3.0L Duratec–ST (VE6), before 04/2004	29 – E 4
K4	Fuel pump relay engine compartment, front, LH side, in Battery Junction Box (BJB)	29 – E 4
K5	Daytime Running Lamps (DRL) relay behind dash panel – F88, F89, without autolamps	32 – A 3
K5	Daytime Running Lamps (DRL) relay behind dash panel – G204, as of 04/2004	32 – A 3
K5	Daytime Running Lamps (DRL) relay behind dash panel – G204, before 04/2004	32 – A 3
K5	Daytime Running Lamps (DRL) relay behind dash panel – Light switch, with daytime running lamps, with high intensity discharge headlamps	32 – A 3
K5	Daytime Running Lamps (DRL) relay behind dash panel – Light switch, with daytime running lamps, without high intensity discharge headlamps	32 – A 3
K5	Daytime Running Lamps (DRL) relay behind dash panel – with high intensity discharge headlamps	32 – A 3
K5	Daytime Running Lamps (DRL) relay behind dash panel – With rear window wiper, with headlamp washer	32 – A 3
K5	Daytime Running Lamps (DRL) relay behind dash panel – without high intensity discharge headlamps	32 – A 3
K5	Daytime Running Lamps (DRL) relay behind dash panel – Without rear window wiper, with headlamp washer	32 – A 3
K5	Daytime Running Lamps (DRL) relay behind dash panel	32 – A 3

K14 Blower motor relay
under dash panel, LH side, in Central Junction Box (CJB) – EATC, as of 04/2004 . . . . . 33 – D 5
K14 Blower motor relay
under dash panel, LH side, in Central Junction Box (CJB) – EATC, before 04/2004 . . . . . 33 – D 5
K14 Blower motor relay
under dash panel, LH side, in Central Junction Box (CJB) – F4, F5, F6 . . . . . 33 – D 5
K14 Blower motor relay
under dash panel, LH side, in Central Junction Box (CJB) – F93 . . . . . 33 – D 5
K14 Blower motor relay
under dash panel, LH side, in Central Junction Box (CJB) – G200 . . . . . 33 – D 5
K14 Blower motor relay
under dash panel, LH side, in Central Junction Box (CJB) – Manual A/C, before 04/2004 . 33 – D 5
K14 Blower motor relay
under dash panel, LH side, in Central Junction Box (CJB) – with EATC, as of 04/2004 . . . 33 – D 5
K14 Blower motor relay
under dash panel, LH side, in Central Junction Box (CJB) – with EATC, before 04/2004 . 33 – D 5
K14 Blower motor relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 33 – D 5
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E), wagon . . . . . 29 – E 2

K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F28, F29 . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Ignition switch automatic transmission . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Ignition switch manual transmission . . . . . 29 – E 2
K22 Starter relay
engine compartment, front, LH side, in Battery Junction Box (BJB) . . . . . 29 – E 2
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines . . . . . 29 – E 3

K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F30, F31, F32, Petrol engines . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 29 – E 3
K32 A/C Wide Open Throttle (WOT) relay
engine compartment, front, LH side, in Battery Junction Box (BJB) . . . . . 29 – E 3
K33 Horn relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J) . . . . . 29 – F 5
K33 Horn relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F26 . . . . . 29 – F 5
K33 Horn relay
engine compartment, front, LH side, in Battery Junction Box (BJB) . . . . . 29 – F 5
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – F22, F23, Diesel engines . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – F22, F23, petrol engines . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – F95, F96 . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – G104 . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – With high intensity discharge headlamps . . 32 – B 2

K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – with high intensity discharge headlamps . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – With rear window wiper, with headlamp washer . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – without high intensity discharge headlamps 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) – Without rear window wiper, with headlamp washer . . . . . 32 – B 2
K34 Headlamp cleaning relay
LH A–pillar, on Central Junction Box (CJB) . . . . . 32 – B 2
K40 Heated windshield timer relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F26 . . . . . 29 – F 4
K40 Heated windshield timer relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Heated windshield . 29 – F 4
K40 Heated windshield timer relay
engine compartment, front, LH side, in Battery Junction Box (BJB) . . . . . 29 – F 4
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Cigar lighter . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – F1, F2 . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – G200 . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, wagon . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, wagon . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – With high intensity discharge headlamps . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 32 – A 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Cigar lighter . . . . . 33 – B 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – F1, F2 . . . . . 33 – B 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – G200 . . . . . 33 – B 2

K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 33 – B 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 33 – B 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, wagon . . . . . 33 – B 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 33 – B 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, wagon . . . . . 33 – B 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) – With high intensity discharge headlamps . . . . . 33 – B 2
K41 Ignition relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 33 – B 2
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),manual transmission . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines . . . . 29 – D 1

K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, 3.0L Duratec–SE (VE6) . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, Diesel engines . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 3.0L Duratec–SE (VE6) . . . . . 29 – D 1
K45 Cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 29 – D 1
K46 High speed cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 1
K46 High speed cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 29 – B 1
K46 High speed cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – B 1
K46 High speed cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission . . . . . 29 – B 1
K46 High speed cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 29 – B 1
K46 High speed cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 29 – B 1
K46 High speed cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 1
K46 High speed cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 1
K46 High speed cooling fan relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 29 – B 1
K64 Rear window wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – F90 . . . . . 32 – A 4
K64 Rear window wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – F94 . . . . . 32 – A 4
K64 Rear window wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – With rear window wiper . . . . 32 – A 4

K64 Rear window wiper relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 32 – A 4
K64 Rear window wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – F90 . . . . . 33 – B 3
K64 Rear window wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – F94 . . . . . 33 – B 3
K64 Rear window wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – With rear window wiper . . . . 33 – B 3
K64 Rear window wiper relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 33 – B 3
K70 Pre–glow relay Diesel
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 29 – E 2
K70 Pre–glow relay Diesel
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – E 2
K70 Pre–glow relay Diesel
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – E 2
K70 Pre–glow relay Diesel
engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines . . . . 29 – E 2
K70 Pre–glow relay Diesel
engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, Diesel engines . 29 – E 2
K115 Battery saver relay
under dash panel, LH side, in Central Junction Box (CJB) – F7 . . . . . 33 – E 4
K115 Battery saver relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 33 – E 4
K125 Rear fog lamp cutoff relay
in luggage compartment, LH side – Bosch, 4–door model/5–door model
K125 Rear fog lamp cutoff relay
in loading space, LH side – Bosch, wagon
K125 Rear fog lamp cutoff relay
in luggage compartment, LH side – F92, as of 01/2004, with trailer socket, with parking aid
K125 Rear fog lamp cutoff relay
in loading space, LH side – F92, as of 01/2004, with trailer socket, with parking aid
K125 Rear fog lamp cutoff relay
in luggage compartment, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
K125 Rear fog lamp cutoff relay
in luggage compartment, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
K125 Rear fog lamp cutoff relay
in loading space, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004
K125 Rear fog lamp cutoff relay
in loading space, LH side – Fog lamps, with trailer socket, wagon, before 01/2004
K125 Rear fog lamp cutoff relay
in luggage compartment, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004

K125 Rear fog lamp cutoff relay
in loading space, LH side – G300, with trailer socket, wagon, before 01/2004
K125 Rear fog lamp cutoff relay
in luggage compartment, LH side – G304, with 13–pin trailer socket, as of 01/2004
K125 Rear fog lamp cutoff relay
in loading space, LH side – G304, with 13–pin trailer socket, as of 01/2004
K125 Rear fog lamp cutoff relay
in luggage compartment, LH side – G304, with 7–pin trailer socket, as of 01/2004
K125 Rear fog lamp cutoff relay
in loading space, LH side – G304, with 7–pin trailer socket, as of 01/2004
K125 Rear fog lamp cutoff relay
in luggage compartment, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model
K125 Rear fog lamp cutoff relay
in loading space, LH side – Light switch, Fog lamps, with trailer socket, wagon
K125 Rear fog lamp cutoff relay
in luggage compartment, LH side – Valeo, 4–door model/5–door model, as of 01/2004
K125 Rear fog lamp cutoff relay
in loading space, LH side – Valeo, wagon, as of 01/2004
K162 Windshield wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – F94 . . . . . 32 – A 3
K162 Windshield wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – with variable intermittent wipe 32 – A 3
K162 Windshield wiper relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 32 – A 3
K162 Windshield wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – F94 . . . . . 33 – B 3
K162 Windshield wiper relay
under dash panel, LH side, in Central Junction Box (CJB) – with variable intermittent wipe 33 – B 3
K162 Windshield wiper relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 33 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 29 – B 3

K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),manual transmission . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F33, 1.8L Duratec–SCi (MI4) . . . . . 29 – B 3

K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F9 . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
K163 PCM module relay
engine compartment, front, LH side, in Battery Junction Box (BJB) . . . . . 29 – B 3
K168 Auxiliary electric coolant heater relay 1
engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . 6 – C 4
K168 Auxiliary electric coolant heater relay 1
engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 6 – C 4
K168 Auxiliary electric coolant heater relay 1
engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 6 – C 4
K168 Auxiliary electric coolant heater relay 1
engine compartment, rear, LH side – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – C 4
K168 Auxiliary electric coolant heater relay 1
engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003 . . . . . 6 – C 4
K168 Auxiliary electric coolant heater relay 1
engine compartment, rear, LH side – F3, before 12/2003 . . . . . 6 – C 4
K168 Auxiliary electric coolant heater relay 1
engine compartment, rear, LH side – F82, Diesel engines . . . . . 6 – C 4
K169 Auxiliary electric coolant heater relay 2
engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . 6 – C 5
K169 Auxiliary electric coolant heater relay 2
engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 6 – C 5
K169 Auxiliary electric coolant heater relay 2
engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 6 – C 5
K169 Auxiliary electric coolant heater relay 2
engine compartment, rear, LH side – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – C 5
K169 Auxiliary electric coolant heater relay 2
engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003 . . . . . 6 – C 5

K169 Auxiliary electric coolant heater relay 2
engine compartment, rear, LH side – F3, before 12/2003 . . . . . 6 – C 5
K169 Auxiliary electric coolant heater relay 2
engine compartment, rear, LH side – F82, Diesel engines . . . . . 6 – C 5
K219 Injection pump power (IPP) relay
engine compartment, LH side, front – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . 29 – E 4
K219 Injection pump power (IPP) relay
engine compartment, LH side, front – F27 . . . . . 29 – E 4
K219 Injection pump power (IPP) relay
engine compartment, LH side, front – F42, Diesel engines . . . . . 29 – E 4
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Autolamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F88, F89, with autolamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F88, F89, without autolamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F95, F96 . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – G104 . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – With high intensity discharge headlamps . . . . . 29 – E 5

K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – with high intensity discharge headlamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Without high intensity discharge headlamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – without high intensity discharge headlamps . . . . . 29 – E 5
K243 Low beam relay
engine compartment, front, LH side, in Battery Junction Box (BJB) . . . . . 29 – E 5
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – F7 . . . . . 32 – B 5
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – G200 . . . . . 32 – B 5
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 32 – B 5
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 32 – B 5
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 32 – B 5
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 32 – B 5
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 32 – B 5
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – F7 . . . . . 33 – B 4
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – G200 . . . . . 33 – B 4
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 33 – B 4
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 33 – B 4
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 33 – B 4
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 33 – B 4
K244 High beam relay
under dash panel, LH side, in Central Junction Box (CJB) . . . . . 33 – B 4
K258 Ignition relay 2
LH A–pillar – 1.8/2.0L Duratec–HE (MI4)

K258 Ignition relay 2
LH A–pillar – 1.8L Duratec–SCi (MI4)

K258 Ignition relay 2
LH A–pillar – 2.5L Duratec–VE (VE6)

K258 Ignition relay 2
LH A–pillar – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

K258 Ignition relay 2
LH A–pillar – Climate controlled front seats

K258 Ignition relay 2
LH A–pillar – F4, F5, F6

K258 Ignition relay 2
LH A–pillar – G104

K258 Ignition relay 2
LH A–pillar – Heated front seats

K258 Ignition relay 2
LH A–pillar – Ignition switch automatic transmission

K258 Ignition relay 2
LH A–pillar – Ignition switch manual transmission

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – B 1

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – E 2

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – B 1

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – E 2

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J) . . . . . 29 – B 1

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J) . . . . . 29 – E 2

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 29 – B 1

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 29 – E 2

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon . . . . . 29 – B 1

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon . . . . . 29 – E 2

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Auto–dimming interior mirror . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Auto–dimming interior mirror . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Bosch, 4–door model/5–door model . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Bosch, 4–door model/5–door model . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Bosch, wagon . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Bosch, wagon . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – DVD navigation system with touch screen . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – DVD navigation system with touch screen . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F78, F80 . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – F78, F80 . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, Diesel engines . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Pre–equipment pack, Diesel engines . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Pre–equipment pack, Petrol engines . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 29 – B 1

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, without trailer socket, wagon . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, without trailer socket, wagon . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, wagon, as of 01/2004 . . . . . 29 – B 1

K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, wagon, before 01/2004 . . . . . 29 – E 2
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – With rear window wiper . . . . . 29 – B 1
K273 Reversing lamps relay
engine compartment, front, LH side, in Battery Junction Box (BJB) – With rear window wiper . . . . . 29 – E 2
K357 Trailer tow relay, reversing lamp
in loading space, LH side – F200, F201
K357 Trailer tow relay, reversing lamp
in loading space, LH side – F74, as of 01/2004, F200, F201, with 13–pin trailer socket
K357 Trailer tow relay, reversing lamp
in luggage compartment, LH side – G304, with 13–pin trailer socket, as of 01/2004
K357 Trailer tow relay, reversing lamp
in loading space, LH side – G304, with 13–pin trailer socket, as of 01/2004
K357 Trailer tow relay, reversing lamp
in luggage compartment, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
K357 Trailer tow relay, reversing lamp
in loading space, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
K357 Trailer tow relay, reversing lamp
in loading space, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004
K357 Trailer tow relay, reversing lamp
in luggage compartment, LH side – Trailer socket, wagon, as of 01/2004
K526 Trailer tow relay, stop lamp
in luggage compartment, LH side – F200, F201
K526 Trailer tow relay, stop lamp
in loading space, LH side – F200, F201
K526 Trailer tow relay, stop lamp
in luggage compartment, LH side – F74, as of 01/2004, F201, with 7–pin trailer socket
K526 Trailer tow relay, stop lamp
in loading space, LH side – F74, as of 01/2004, F200, F201, with 13–pin trailer socket
K526 Trailer tow relay, stop lamp
in luggage compartment, LH side – G304, with 13–pin trailer socket, as of 01/2004
K526 Trailer tow relay, stop lamp
in loading space, LH side – G304, with 13–pin trailer socket, as of 01/2004
K526 Trailer tow relay, stop lamp
in luggage compartment, LH side – G304, with 7–pin trailer socket, as of 01/2004
K526 Trailer tow relay, stop lamp
in loading space, LH side – G304, with 7–pin trailer socket, as of 01/2004
K526 Trailer tow relay, stop lamp
in luggage compartment, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
K526 Trailer tow relay, stop lamp
in loading space, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
K526 Trailer tow relay, stop lamp
in luggage compartment, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004

K526 Trailer tow relay, stop lamp
in loading space, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004
K526 Trailer tow relay, stop lamp
in loading space, LH side – Trailer socket, wagon, as of 01/2004
M3 Blower motor
behind dash panel, centre – EATC, as of 04/2004 . . . . . 14 – F 2
M3 Blower motor
behind dash panel, centre – F76, F77, as of 04/2004 . . . . . 14 – F 2
M3 Blower motor
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 14 – F 2
M3 Blower motor
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 14 – F 2
M3 Blower motor
behind dash panel, centre . . . . . 14 – F 2
M3 Blower motor
behind dash panel, centre – EATC, as of 04/2004 . . . . . 15 – B 1
M3 Blower motor
behind dash panel, centre – F76, F77, as of 04/2004 . . . . . 15 – B 1
M3 Blower motor
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 15 – B 1
M3 Blower motor
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 15 – B 1
M3 Blower motor
behind dash panel, centre . . . . . 15 – B 1
M8 Starter motor
engine – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) . . . . . 60 – C 1
M8 Starter motor
engine . . . . . 60 – C 1
M8 Starter motor
engine . . . . . 61 – C 1
M8 Starter motor
engine . . . . . 63 – E 3
M8 Starter motor
engine – 3.0L Duratec–ST (VE6) . . . . . 68 – A 2
M8 Starter motor
engine . . . . . 68 – A 2
M8 Starter motor
engine – Diesel engines . . . . . 70 – D 1
M8 Starter motor
engine . . . . . 70 – D 1
M8 Starter motor
engine – Diesel engines . . . . . 73 – D 1
M8 Starter motor
engine . . . . . 73 – D 1
M8 Starter motor
engine – 3.0L Duratec–SE (VE6) . . . . . 79 – B 1
M8 Starter motor
engine – Diesel engines
M8 Starter motor
engine

M9 Rear window wiper motor
in tailgate, 5–door model – F90 . . . . . 57 – C 4
M9 Rear window wiper motor
in tailgate, 5–door model – G300, 5–door model/wagon . . . . . 57 – C 4
M9 Rear window wiper motor
in tailgate, 5–door model – With rear window wiper . . . . . 57 – C 4
M9 Rear window wiper motor
in tailgate, 5–door model . . . . . 57 – C 4
M9 Rear window wiper motor
in tailgate, wagon – F90 . . . . . 58 – E 3
M9 Rear window wiper motor
in tailgate, wagon – G300, 5–door model/wagon . . . . . 58 – E 3
M9 Rear window wiper motor
in tailgate, wagon – With rear window wiper . . . . . 58 – E 3
M9 Rear window wiper motor
in tailgate, wagon . . . . . 58 – E 3
M34 Roof opening panel motor
roof, front, centre – Diesel engines . . . . . 22 – A 3
M34 Roof opening panel motor
roof, front, centre – Petrol engines . . . . . 22 – A 3
M37 Cooling fan motor
engine compartment, front, centre – 1.8/2.0L Duratec–HE (MI4) . . . . . 8 – D 5
M37 Cooling fan motor
engine compartment, front, centre – 1.8L Duratec–SCi (MI4) . . . . . 8 – D 5
M37 Cooling fan motor
engine compartment, front, centre – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 8 – D 5
M37 Cooling fan motor
engine compartment, front, centre – 1.8/2.0L Duratec–HE (MI4) . . . . . 9 – B 2
M37 Cooling fan motor
engine compartment, front, centre – 2.5L Duratec–VE (VE6) . . . . . 9 – B 2
M37 Cooling fan motor
engine compartment, front, centre – 2.5L Duratec–VE (VE6),automatic transmission . . . . 9 – B 2
M37 Cooling fan motor
engine compartment, front, centre – 2.5L Duratec–VE (VE6),manual transmission . . . . . 9 – B 2
M37 Cooling fan motor
engine compartment, front, centre – 3.0L Duratec–ST (VE6) . . . . . 9 – B 2
M37 Cooling fan motor
engine compartment, front, centre – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 9 – B 2
M37 Cooling fan motor
engine compartment, front, centre – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 9 – B 2
M37 Cooling fan motor
engine compartment, front, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 10 – B 2
M37 Cooling fan motor
engine compartment, front, centre – 3.0L Duratec–SE (VE6) . . . . . 10 – B 2
M37 Cooling fan motor
engine compartment, front, centre – G102, 3.0L Duratec–SE (VE6) . . . . . 10 – B 2

M37 Cooling fan motor
engine compartment, front, centre – G102, Diesel engines . . . . . 10 – B 2
M37 Cooling fan motor
engine compartment, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 11 – D 1
M37 Cooling fan motor
engine compartment, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 11 – D 1
M37 Cooling fan motor
engine compartment, front, centre – G102, Diesel engines . . . . . 11 – D 1
M38 Second cooling fan motor
engine compartment, front, centre – 2.5L Duratec–VE (VE6),automatic transmission . . . . 9 – D 1
M38 Second cooling fan motor
engine compartment, front, centre – 3.0L Duratec–ST (VE6) . . . . . 9 – D 1
M38 Second cooling fan motor
engine compartment, front, centre – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 9 – D 1
M39 Tailgate/decklid motor
in decklid, 4–door model – G300, 4–door model . . . . . 56 – B 1
M39 Tailgate/decklid motor
in decklid, 4–door model . . . . . 56 – B 1
M39 Tailgate/decklid motor
in tailgate, 5–door model – G300, 5–door model/wagon . . . . . 57 – B 1
M39 Tailgate/decklid motor
in tailgate, 5–door model . . . . . 57 – B 1
M39 Tailgate/decklid motor
in tailgate, wagon – G300, 5–door model/wagon . . . . . 58 – C 1
M39 Tailgate/decklid motor
in tailgate, wagon . . . . . 58 – C 1
M79 Window regulator motor, passenger side front
in passenger's door – F60 . . . . . 38 – B 1
M79 Window regulator motor, passenger side front
in passenger's door – F61 . . . . . 38 – B 1
M79 Window regulator motor, passenger side front
in passenger's door – F91, LHD . . . . . 38 – B 1
M79 Window regulator motor, passenger side front
in passenger's door – F91, RHD . . . . . 38 – B 1
M79 Window regulator motor, passenger side front
in passenger's door – front and rear power windows, Passenger side front . . . . . 38 – B 1
M79 Window regulator motor, passenger side front
in passenger's door – Front power windows, Passenger side . . . . . 38 – B 1
M79 Window regulator motor, passenger side front
in passenger's door – G200, RHD . . . . . 38 – B 1
M79 Window regulator motor, passenger side front
in passenger's door – G205, LHD . . . . . 38 – B 1
M80 Window regulator motor, driver side front
in driver's door – F60 . . . . . 38 – B 2
M80 Window regulator motor, driver side front
in driver's door – F61 . . . . . 38 – B 2

M80 Window regulator motor, driver side front
in driver's door – F91, LHD . . . . . 38 – B 2
M80 Window regulator motor, driver side front
in driver's door – F91, RHD . . . . . 38 – B 2
M80 Window regulator motor, driver side front
in driver's door – front and rear power windows, Driver side front . . . . . 38 – B 2
M80 Window regulator motor, driver side front
in driver's door – Front power windows, Driver side . . . . . 38 – B 2
M80 Window regulator motor, driver side front
in driver's door – G200, LHD . . . . . 38 – B 2
M80 Window regulator motor, driver side front
in driver's door – G205, RHD . . . . . 38 – B 2
M84 Washer pump motor, front and rear
engine compartment, front, RH side – With rear window wiper, with headlamp washer . . . 3 – B 1
M84 Washer pump motor, front and rear
engine compartment, front, RH side – With rear window wiper, without headlamp washer 3 – B 1
M84 Washer pump motor, front and rear
engine compartment, front, RH side – With rear window wiper, with headlamp washer . . . 5 – C 1
M84 Washer pump motor, front and rear
engine compartment, front, RH side – With rear window wiper, without headlamp washer 5 – C 1
M92 Recirculation door motor
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 14 – D 5
M92 Recirculation door motor
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 14 – D 5
M92 Recirculation door motor
behind dash panel, centre – with EATC, before 04/2004 . . . . . 14 – D 5
M92 Recirculation door motor
behind dash panel, centre . . . . . 14 – D 5
M92 Recirculation door motor
behind dash panel, centre
M111 Windshield wiper motor
on engine bulkhead, centre – F94 . . . . . 12 – D 1
M111 Windshield wiper motor
on engine bulkhead, centre – G105 . . . . . 12 – D 1
M111 Windshield wiper motor
on engine bulkhead, centre – with rain sensor . . . . . 12 – D 1
M111 Windshield wiper motor
on engine bulkhead, centre – with variable intermittent wipe . . . . . 12 – D 1
M111 Windshield wiper motor
on engine bulkhead, centre . . . . . 12 – D 1
M111 Windshield wiper motor
on engine bulkhead, centre – F94 . . . . . 13 – B 2
M111 Windshield wiper motor
on engine bulkhead, centre – G105 . . . . . 13 – B 2
M111 Windshield wiper motor
on engine bulkhead, centre – with rain sensor . . . . . 13 – B 2
M111 Windshield wiper motor
on engine bulkhead, centre – with variable intermittent wipe . . . . . 13 – B 2
M111 Windshield wiper motor
on engine bulkhead, centre . . . . . 13 – B 2

M112	Windshield washer pump motor engine compartment, front, RH side – Without rear window wiper, with headlamp washer	3 – B 1
M112	Windshield washer pump motor engine compartment, front, RH side – Without rear window wiper, without headlamp washer	3 – B 1
M112	Windshield washer pump motor engine compartment, front, RH side – Without rear window wiper, with headlamp washer	5 – C 1
M112	Windshield washer pump motor engine compartment, front, RH side – Without rear window wiper, without headlamp washer	5 – C 1
M116	Window regulator motor, LH rear in LH rear door – F60	39 – D 1
M116	Window regulator motor, LH rear in LH rear door – F91, LHD	39 – D 1
M116	Window regulator motor, LH rear in LH rear door – F91, RHD	39 – D 1
M116	Window regulator motor, LH rear in LH rear door – front and rear power windows, LH rear door	39 – D 1
M116	Window regulator motor, LH rear in LH rear door – G200	39 – D 1
M117	Window regulator motor, RH rear in RH rear door – F61	39 – D 2
M117	Window regulator motor, RH rear in RH rear door – F91, LHD	39 – D 2
M117	Window regulator motor, RH rear in RH rear door – F91, RHD	39 – D 2
M117	Window regulator motor, RH rear in RH rear door – front and rear power windows, RH rear door	39 – D 2
M117	Window regulator motor, RH rear in RH rear door – G205	39 – D 2
M158	Driver seat height motor driver's seat – 2–way power seats	
M159	Passenger seat height motor passenger's seat – 2–way power seats	
M167	Seat cushion fan 1, LH front front seat, LH – Climate controlled front seats	
M167	Seat cushion fan 1, LH front front seat, LH – G200	
M168	Seat cushion fan 2, LH front front seat, LH – Climate controlled front seats	
M168	Seat cushion fan 2, LH front front seat, LH – G200	
M169	Seat back fan 1, LH front front seat, LH – Climate controlled front seats	
M169	Seat back fan 1, LH front front seat, LH – G200	
M170	Seat back fan 2, LH front front seat, LH – Climate controlled front seats	
M170	Seat back fan 2, LH front front seat, LH – G200	

M171 Seat cushion fan 1, RH front
front seat, RH – Climate controlled front seats
M171 Seat cushion fan 1, RH front
front seat, RH – G205
M172 Seat cushion fan 2, RH front
front seat, RH – Climate controlled front seats
M172 Seat cushion fan 2, RH front
front seat, RH – G205
M173 Seat back fan 1, RH front
front seat, RH – Climate controlled front seats
M173 Seat back fan 1, RH front
front seat, RH – G205
M174 Seat back fan 2, RH front
front seat, RH – Climate controlled front seats
M174 Seat back fan 2, RH front
front seat, RH – G205
M210 Defrost mode actuator
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 14 – C 5
M210 Defrost mode actuator
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 14 – C 5
M210 Defrost mode actuator
behind dash panel, centre – with EATC, before 04/2004 . . . . . 14 – C 5
M210 Defrost mode actuator
behind dash panel, centre . . . . . 14 – C 5
M210 Defrost mode actuator
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 15 – E 5
M210 Defrost mode actuator
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 15 – E 5
M210 Defrost mode actuator
behind dash panel, centre – with EATC, before 04/2004 . . . . . 15 – E 5
M210 Defrost mode actuator
behind dash panel, centre . . . . . 15 – E 5
M227 Driver seat horizontal motor
driver's seat – 8–way power seats . . . . . 41 – D 1
M227 Driver seat horizontal motor
driver's seat – 8–way power seats . . . . . 43 – B 1
M228 Driver seat rear height motor
driver's seat – 8–way power seats . . . . . 41 – D 2
M228 Driver seat rear height motor
driver's seat – 8–way power seats . . . . . 43 – C 1
M229 Driver seat front height motor
driver's seat – 8–way power seats . . . . . 41 – C 1
M229 Driver seat front height motor
driver's seat – 8–way power seats . . . . . 43 – D 1
M230 Driver seat backrest motor
driver's seat – 8–way power seats . . . . . 41 – A 3
M230 Driver seat backrest motor
driver's seat – 8–way power seats . . . . . 43 – E 3
M232 Passenger seat horizontal motor
passenger's seat – 8–way power seats

M234 Passenger seat backrest motor
passenger's seat – 8–way power seats
M246 Headlamp washer pump motor
engine compartment, front, RH side – G105 . . . . . 3 – A 2
M246 Headlamp washer pump motor
engine compartment, front, RH side – With rear window wiper, with headlamp washer . . . 3 – A 2
M246 Headlamp washer pump motor
engine compartment, front, RH side – Without rear window wiper, with headlamp washer 3 – A 2
M246 Headlamp washer pump motor
engine compartment, front, RH side – G105 . . . . . 5 – A 2
M246 Headlamp washer pump motor
engine compartment, front, RH side – With rear window wiper, with headlamp washer . . . 5 – A 2
M246 Headlamp washer pump motor
engine compartment, front, RH side – Without rear window wiper, with headlamp washer 5 – A 2
M249 Air temperature mode actuator
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 14 – B 1
M249 Air temperature mode actuator
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 14 – B 1
M249 Air temperature mode actuator
behind dash panel, centre – with EATC, before 04/2004 . . . . . 14 – B 1
M249 Air temperature mode actuator
behind dash panel, centre . . . . . 14 – B 1
M249 Air temperature mode actuator
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 15 – D 1
M249 Air temperature mode actuator
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 15 – D 1
M249 Air temperature mode actuator
behind dash panel, centre – with EATC, before 04/2004 . . . . . 15 – D 1
M249 Air temperature mode actuator
behind dash panel, centre . . . . . 15 – D 1
M250 Panel/floor mode actuator
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 14 – A 2
M250 Panel/floor mode actuator
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 14 – A 2
M250 Panel/floor mode actuator
behind dash panel, centre – with EATC, before 04/2004 . . . . . 14 – A 2
M250 Panel/floor mode actuator
behind dash panel, centre . . . . . 14 – A 2
M250 Panel/floor mode actuator
behind dash panel, centre – Manual A/C, before 04/2004 . . . . . 15 – C 5
M250 Panel/floor mode actuator
behind dash panel, centre – with EATC, as of 04/2004 . . . . . 15 – C 5
M250 Panel/floor mode actuator
behind dash panel, centre – with EATC, before 04/2004 . . . . . 15 – C 5
M250 Panel/floor mode actuator
behind dash panel, centre . . . . . 15 – C 5
M251 EGR stepper motor
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 60 – D 5
M251 EGR stepper motor
engine – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 60 – D 5

M251 EGR stepper motor
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 61 – D 5
M251 EGR stepper motor
engine – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 61 – D 5
M251 EGR stepper motor
engine – 1.8L Duratec–SCi (MI4) . . . . . 76 – C 5
M251 EGR stepper motor
engine – F42, 1.8L Duratec–SCi (MI4) . . . . . 76 – C 5
M253 Variable geometry turbo actuator
engine – 2.0L Duratorq–TDCi (Puma) Diesel
M253 Variable geometry turbo actuator
engine – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV
M253 Variable geometry turbo actuator
engine – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III
M253 Variable geometry turbo actuator
engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004
M253 Variable geometry turbo actuator
engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004
M253 Variable geometry turbo actuator
engine – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
M253 Variable geometry turbo actuator
engine – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
M254 EGR valve actuator
engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
M254 EGR valve actuator
engine – 2.0L Duratorq–TDCi (Puma) Diesel
M254 EGR valve actuator
engine – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV
M254 EGR valve actuator
engine – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III
M254 EGR valve actuator
engine – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
M254 EGR valve actuator
engine – F42, Diesel engines
M279 Passenger seat front height motor
passenger's seat – 8–way power seats
M280 Passenger seat rear height motor
passenger's seat – 8–way power seats
N1 Brake fluid level switch
engine compartment, rear, LH side – as of 08/2004 . . . . . 4 – C 5
N1 Brake fluid level switch
engine compartment, rear, LH side – before 08/2004 . . . . . 4 – C 5
N1 Brake fluid level switch
engine compartment, rear, LH side – G104 . . . . . 4 – C 5
N1 Brake fluid level switch
engine compartment, rear, LH side . . . . . 4 – C 5

N1	Brake fluid level switch engine compartment, rear, LH side – G104	6 – D 5
N1	Brake fluid level switch engine compartment, rear, LH side	6 – D 5
N14	Blower motor switch centre console – G204, before 04/2004	
N14	Blower motor switch centre console – Manual A/C, before 04/2004	
N15	Stop lamp switch on brake pedal support – 1.8/2.0L Duratec–HE (MI4)	28 – D 2
N15	Stop lamp switch on brake pedal support – 1.8/2.0L Duratec–HE (MI4), automatic transmission	28 – D 2
N15	Stop lamp switch on brake pedal support – 1.8/2.0L Duratec–HE (MI4), manual transmission	28 – D 2
N15	Stop lamp switch on brake pedal support – 1.8L Duratec–SCi (MI4)	28 – D 2
N15	Stop lamp switch on brake pedal support – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	28 – D 2
N15	Stop lamp switch on brake pedal support – 2.0L Duratorq–TDCi (Puma) Diesel	28 – D 2
N15	Stop lamp switch on brake pedal support – 2.2L Duratorq–TDCi (Puma) Diesel	28 – D 2
N15	Stop lamp switch on brake pedal support – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	28 – D 2
N15	Stop lamp switch on brake pedal support – 2.5L Duratec–VE (VE6)	28 – D 2
N15	Stop lamp switch on brake pedal support – 2.5L Duratec–VE (VE6), manual transmission	28 – D 2
N15	Stop lamp switch on brake pedal support – 3.0L Duratec–SE (VE6)	28 – D 2
N15	Stop lamp switch on brake pedal support – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	28 – D 2
N15	Stop lamp switch on brake pedal support – 3.0L Duratec–ST (VE6)	28 – D 2
N15	Stop lamp switch on brake pedal support – 4–speed automatic transmission (CD4E)	28 – D 2
N15	Stop lamp switch on brake pedal support – 5–speed automatic transmission (5F31J)	28 – D 2
N15	Stop lamp switch on brake pedal support – 5–speed automatic transmission (5F31J), Diesel engines	28 – D 2
N15	Stop lamp switch on brake pedal support – 5–speed automatic transmission (5F31J), Petrol engines	28 – D 2
N15	Stop lamp switch on brake pedal support – before 08/2004	28 – D 2
N15	Stop lamp switch on brake pedal support – Bosch 8.0	28 – D 2
N15	Stop lamp switch on brake pedal support – Diesel engines	28 – D 2

N15	Stop lamp switch on brake pedal support – F93	28 – D 2
N15	Stop lamp switch on brake pedal support – Petrol engines, except 1.8L Duratec–SCi (MI4)	28 – D 2
N15	Stop lamp switch on brake pedal support – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	28 – D 2
N15	Stop lamp switch on brake pedal support – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	28 – D 2
N15	Stop lamp switch on brake pedal support – Stop Lamps, with trailer socket, wagon, as of 01/2004	28 – D 2
N15	Stop lamp switch on brake pedal support – Stop Lamps, with trailer socket, wagon, before 01/2004	28 – D 2
N15	Stop lamp switch on brake pedal support – Stop Lamps, without trailer socket, 4–door model/5–door model	28 – D 2
N15	Stop lamp switch on brake pedal support – Stop Lamps, without trailer socket, wagon	28 – D 2
N15	Stop lamp switch on brake pedal support	28 – D 2
N17	Oil pressure switch engine – Petrol engines	60 – C 1
N17	Oil pressure switch engine	60 – C 1
N17	Oil pressure switch engine – Petrol engines	61 – C 1
N17	Oil pressure switch engine	61 – C 1
N17	Oil pressure switch engine – Petrol engines	63 – B 1
N17	Oil pressure switch engine	63 – B 1
N17	Oil pressure switch engine – Petrol engines	65 – B 2
N17	Oil pressure switch engine	65 – B 2
N17	Oil pressure switch engine – Petrol engines	67 – A 3
N17	Oil pressure switch engine	67 – A 3
N17	Oil pressure switch engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – C 1
N17	Oil pressure switch engine	70 – C 1
N17	Oil pressure switch engine – 2.0L Duratorq–TDCi (Puma) Diesel	72 – C 1
N17	Oil pressure switch engine	72 – C 1
N17	Oil pressure switch engine – 2.0L Duratorq–TDCi (Puma) Diesel	73 – B 1

N17	Oil pressure switch engine	73 – B 1
N17	Oil pressure switch engine – Petrol engines	75 – D 1
N17	Oil pressure switch engine	75 – D 1
N17	Oil pressure switch engine – 2.2L Duratorq–TDCi (Puma) Diesel	
N20	Glove compartment lamp switch in glove compartment – G204, as of 04/2004	15 – A 2
N20	Glove compartment lamp switch in glove compartment – G204, before 04/2004	15 – A 2
N20	Glove compartment lamp switch in glove compartment	15 – A 2
N20	Glove compartment lamp switch in glove compartment – G204, as of 04/2004	24 – D 2
N20	Glove compartment lamp switch in glove compartment – G204, before 04/2004	24 – D 2
N20	Glove compartment lamp switch in glove compartment	24 – D 2
N21	Engine compartment switch engine compartment, front, centre – G104	8 – E 4
N21	Engine compartment switch engine compartment, front, centre	8 – E 4
N21	Engine compartment switch engine compartment, front, centre – G104	9 – D 5
N21	Engine compartment switch engine compartment, front, centre	9 – D 5
N21	Engine compartment switch engine compartment, front, centre – G104	10 – D 5
N21	Engine compartment switch engine compartment, front, centre	10 – D 5
N21	Engine compartment switch engine compartment, front, centre – G104	11 – E 5
N21	Engine compartment switch engine compartment, front, centre	11 – E 5
N29	Heated seat cushion, LH front front seat, LH – G200	38 – E 4
N29	Heated seat cushion, LH front front seat, LH – Heated front seats	38 – E 4
N30	Heated seat cushion, RH front front seat, RH – G205	
N30	Heated seat cushion, RH front front seat, RH – Heated front seats	
N31	Heated seat back, LH front front seat, LH – G200	
N31	Heated seat back, LH front front seat, LH – Heated front seats	
N32	Heated seat back, RH front front seat, RH – G205	

N32 Heated seat back, RH front
front seat, RH – Heated front seats
N49 Hazard flasher switch
dash panel, driver side – G204, as of 04/2004 . . . . . 24 – E 4
N49 Hazard flasher switch
dash panel, driver side – G204, before 04/2004 . . . . . 24 – E 4
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps . . . . . 24 – E 4
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 24 – E 4
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps, with trailer socket, wagon . . . . . 24 – E 4
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 24 – E 4
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps, without trailer socket, wagon . . . 24 – E 4
N49 Hazard flasher switch
dash panel, driver side . . . . . 24 – E 4
N49 Hazard flasher switch
dash panel, driver side – G204, as of 04/2004 . . . . . 25 – F 5
N49 Hazard flasher switch
dash panel, driver side – G204, before 04/2004 . . . . . 25 – F 5
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps . . . . . 25 – F 5
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 25 – F 5
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps, with trailer socket, wagon . . . . . 25 – F 5
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 25 – F 5
N49 Hazard flasher switch
dash panel, driver side – Turn Signal and Hazard Lamps, without trailer socket, wagon . . . 25 – F 5
N49 Hazard flasher switch
dash panel, driver side . . . . . 25 – F 5
N63 Parking brake switch
centre console – as of 08/2004
N63 Parking brake switch
centre console – before 08/2004
N63 Parking brake switch
centre console
N70 Power mirror adjust switch
driver's door, front – F75, 5–speed automatic transmission (5F31J) . . . . . 38 – A 4
N70 Power mirror adjust switch
driver's door, front – F75, except 5–speed automatic transmission (5F31J) . . . . . 38 – A 4
N70 Power mirror adjust switch
driver's door, front – G200, LHD . . . . . 38 – A 4

N70 Power mirror adjust switch
driver's door, front – G205, RHD . . . . . 38 – A 4
N70 Power mirror adjust switch
driver's door, front . . . . . 38 – A 4
N78 Steering wheel/speed control switch
in steering wheel – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 37 – A 4
N78 Steering wheel/speed control switch
in steering wheel – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 37 – A 4
N78 Steering wheel/speed control switch
in steering wheel – 5–speed automatic transmission (5F31J) . . . . . 37 – A 4
N78 Steering wheel/speed control switch
in steering wheel – Diesel engines . . . . . 37 – A 4
N78 Steering wheel/speed control switch
in steering wheel – Driver air bag . . . . . 37 – A 4
N78 Steering wheel/speed control switch
in steering wheel – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 37 – A 4
N78 Steering wheel/speed control switch
in steering wheel . . . . . 37 – A 4
N81 Clutch pedal position switch
on clutch pedal support – 1.8/2.0L Duratec–HE (MI4) . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 1.8L Duratec–SCi (MI4) . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 2.5L Duratec–VE (VE6) . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 2.5L Duratec–VE (VE6), manual transmission . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 3.0L Duratec–SE (VE6) . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – 3.0L Duratec–ST (VE6) . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – Diesel engines . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – G106, 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – G106, 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 28 – B 3
N81 Clutch pedal position switch
on clutch pedal support – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 28 – B 3

N81	Clutch pedal position switch on clutch pedal support – Petrol engines, except 1.8L Duratec–SCi (MI4)	28 – B 3
N82	Brake pedal position switch on brake pedal support – 1.8L Duratec–SCi (MI4)	28 – B 2
N82	Brake pedal position switch on brake pedal support – 2.0L Duratorq–TDCi (Puma) Diesel	28 – B 2
N82	Brake pedal position switch on brake pedal support – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	28 – B 2
N82	Brake pedal position switch on brake pedal support – Diesel engines	28 – B 2
N82	Brake pedal position switch on brake pedal support – F93	28 – B 2
N82	Brake pedal position switch on brake pedal support – Petrol engines, except 1.8L Duratec–SCi (MI4)	28 – B 2
N84	Door ajar switch, LH front LH B–pillar – G200	45 – D 4
N84	Door ajar switch, LH front LH B–pillar – LHD	45 – D 4
N84	Door ajar switch, LH front LH B–pillar – RHD	45 – D 4
N84	Door ajar switch, LH front LH B–pillar	45 – D 4
N85	Door ajar switch, RH front RH B–pillar – G205	46 – B 4
N85	Door ajar switch, RH front RH B–pillar – LHD	46 – B 4
N85	Door ajar switch, RH front RH B–pillar – RHD	46 – B 4
N85	Door ajar switch, RH front RH B–pillar	46 – B 4
N86	Door ajar switch, LH rear LH C–pillar – G300	45 – C 5
N86	Door ajar switch, LH rear LH C–pillar – LHD	45 – C 5
N86	Door ajar switch, LH rear LH C–pillar – RHD	45 – C 5
N86	Door ajar switch, LH rear LH C–pillar	45 – C 5
N87	Door ajar switch, RH rear RH C–pillar – G205	46 – C 5
N87	Door ajar switch, RH rear RH C–pillar – LHD	46 – C 5
N87	Door ajar switch, RH rear RH C–pillar – RHD	46 – C 5
N87	Door ajar switch, RH rear RH C–pillar	46 – C 5
N89	Low cleaning water level switch front, RH side – G105	

N89	Low cleaning water level switch front, RH side	
N90	Turn signal switch on steering column, top – Autolamps	37 – C 3
N90	Turn signal switch on steering column, top – F88, F89, with autolamps	37 – C 3
N90	Turn signal switch on steering column, top – F88, F89, without autolamps	37 – C 3
N90	Turn signal switch on steering column, top – G203	37 – C 3
N90	Turn signal switch on steering column, top – G204, as of 04/2004	37 – C 3
N90	Turn signal switch on steering column, top – G204, before 04/2004	37 – C 3
N90	Turn signal switch on steering column, top – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	37 – C 3
N90	Turn signal switch on steering column, top – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	37 – C 3
N90	Turn signal switch on steering column, top – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	37 – C 3
N90	Turn signal switch on steering column, top – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	37 – C 3
N90	Turn signal switch on steering column, top – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	37 – C 3
N90	Turn signal switch on steering column, top – Light switch, with daytime running lamps, with high intensity discharge headlamps	37 – C 3
N90	Turn signal switch on steering column, top – Light switch, with daytime running lamps, without high intensity discharge headlamps	37 – C 3
N90	Turn signal switch on steering column, top – Light switch, without daytime running lamps, with high intensity discharge headlamps	37 – C 3
N90	Turn signal switch on steering column, top – Light switch, without daytime running lamps, without high intensity discharge headlamps	37 – C 3
N90	Turn signal switch on steering column, top – Turn Signal and Hazard Lamps	37 – C 3
N90	Turn signal switch on steering column, top – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	37 – C 3
N90	Turn signal switch on steering column, top – Turn Signal and Hazard Lamps, with trailer socket, wagon	37 – C 3

N90 Turn signal switch
on steering column, top – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 37 – C 3
N90 Turn signal switch
on steering column, top – Turn Signal and Hazard Lamps, without trailer socket, wagon . . 37 – C 3
N90 Turn signal switch
on steering column, top – with high intensity discharge headlamps . . . . . 37 – C 3
N90 Turn signal switch
on steering column, top – With rear window wiper, with headlamp washer . . . . . 37 – C 3
N90 Turn signal switch
on steering column, top – without high intensity discharge headlamps . . . . . 37 – C 3
N90 Turn signal switch
on steering column, top – Without rear window wiper, with headlamp washer . . . . . 37 – C 3
N90 Turn signal switch
on steering column, top . . . . . 37 – C 3
N93 Gearshift lever unit
centre console – 1.8/2.0L Duratec–HE (MI4) . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – 4–speed automatic transmission (CD4E) . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – 5–speed automatic transmission (5F31J) . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – F81 . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – G200 . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – G203 . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – Ignition switch automatic transmission . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – Stop Lamps, with trailer socket, wagon, as of 01/2004 . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – Stop Lamps, with trailer socket, wagon, before 01/2004 . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 40 – D 3
N93 Gearshift lever unit
centre console – Stop Lamps, without trailer socket, wagon . . . . . 40 – D 3
N93 Gearshift lever unit
centre console . . . . . 40 – D 3
N96 Power steering pressure switch
engine bulkhead, RH side – 1.8/2.0L Duratec–HE (MI4) . . . . . 62 – E 5

N96	Power steering pressure switch engine bulkhead, RH side – 2.5L Duratec–VE (VE6)	64 – F 4
N96	Power steering pressure switch engine bulkhead, RH side – 2.5L Duratec–VE (VE6)	66 – F 4
N96	Power steering pressure switch engine bulkhead, RH side, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	68 – F 4
N96	Power steering pressure switch engine bulkhead, RH side – 3.0L Duratec–ST (VE6)	68 – F 4
N96	Power steering pressure switch engine bulkhead, RH side – 1.8L Duratec–SCi (MI4)	75 – A 3
N96	Power steering pressure switch engine bulkhead, RH side – 3.0L Duratec–SE (VE6)	77 – F 4
N96	Power steering pressure switch engine bulkhead, RH side, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	77 – F 4
N98	Tailgate/decklid anti–theft inhibit switch in decklid, 4–door model – G300, 4–door model	56 – E 2
N98	Tailgate/decklid anti–theft inhibit switch in decklid, 4–door model	56 – E 2
N98	Tailgate/decklid anti–theft inhibit switch in tailgate, 5–door model	57 – D 2
N98	Tailgate/decklid anti–theft inhibit switch in tailgate, wagon	58 – D 1
N104	Wiper/washer switch on steering column, top – F94	37 – D 4
N104	Wiper/washer switch on steering column, top – G204, as of 04/2004	37 – D 4
N104	Wiper/washer switch on steering column, top – G204, before 04/2004	37 – D 4
N104	Wiper/washer switch on steering column, top – with rain sensor	37 – D 4
N104	Wiper/washer switch on steering column, top – With rear window wiper, with headlamp washer	37 – D 4
N104	Wiper/washer switch on steering column, top – With rear window wiper, without headlamp washer	37 – D 4
N104	Wiper/washer switch on steering column, top – with variable intermittent wipe	37 – D 4
N104	Wiper/washer switch on steering column, top – Without rear window wiper, with headlamp washer	37 – D 4
N104	Wiper/washer switch on steering column, top – Without rear window wiper, without headlamp washer	37 – D 4
N104	Wiper/washer switch on steering column, top	37 – D 4
N113	Main light switch dash panel, driver side – 4–speed automatic transmission (CD4E)	23 – F 2
N113	Main light switch dash panel, driver side – 5–speed automatic transmission (5F31J)	23 – F 2
N113	Main light switch dash panel, driver side – Autolamps	23 – F 2

N113 Main light switch
dash panel, driver side – Cigar lighter . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Climate controlled front seats . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – DVD navigation system with touch screen . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – EATC, as of 04/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – EATC, before 04/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – F20, F21 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – F62 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – F88, F89, with autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – F88, F89, without autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Fog lamps, with trailer socket, wagon, as of 01/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Fog lamps, with trailer socket, wagon, before 01/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Fog lamps, without trailer socket, 4–door model/5–door model . . 23 – F 2
N113 Main light switch
dash panel, driver side – Fog lamps, without trailer socket, wagon . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – G204, as of 04/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – G204, before 04/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Headlamp Levelling, without high intensity discharge headlamps 23 – F 2
N113 Main light switch
dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Heated front seats . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Heated rear window, Heated exterior mirrors . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Heated windshield . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Licence plate lamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, Fog lamps, with trailer socket, wagon . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, Fog lamps, without trailer socket, wagon . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, with autolamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, without autolamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Manual A/C, before 04/2004 . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Parking Lamps, with trailer socket, wagon, with autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Parking Lamps, with trailer socket, wagon, without autolamps . . 23 – F 2
N113 Main light switch
dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Parking Lamps, without trailer socket, wagon, with autolamps . . 23 – F 2
N113 Main light switch
dash panel, driver side – Parking Lamps, without trailer socket, wagon, without autolamps 23 – F 2
N113 Main light switch
dash panel, driver side – Pre–equipment pack . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Turn Signal and Hazard Lamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – with autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – with daytime running lamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – with EATC, as of 04/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – with EATC, before 04/2004 . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – with external CD changer and/or video system . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – with heated rear seats . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – With high intensity discharge headlamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – with high intensity discharge headlamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – With rear window wiper, with headlamp washer . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – with trailer socket, 4–door model/5–door model . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – with trailer socket, wagon . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – without daytime running lamps, without autolamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – without external CD changer and video system . . . . . 23 – F 2

N113 Main light switch
dash panel, driver side – Without high intensity discharge headlamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – without high intensity discharge headlamps . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – Without rear window wiper, with headlamp washer . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – without trailer socket, 4–door model/5–door model . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – without trailer socket, wagon . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side . . . . . 23 – F 2
N113 Main light switch
dash panel, driver side – 4–speed automatic transmission (CD4E) . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – 5–speed automatic transmission (5F31J) . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Cigar lighter . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Climate controlled front seats . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – DVD navigation system with touch screen . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – EATC, as of 04/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – EATC, before 04/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – F20, F21 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – F62 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – F88, F89, with autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – F88, F89, without autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Fog lamps, with trailer socket, wagon, as of 01/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Fog lamps, with trailer socket, wagon, before 01/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Fog lamps, without trailer socket, 4–door model/5–door model . . 25 – B 5
N113 Main light switch
dash panel, driver side – Fog lamps, without trailer socket, wagon . . . . . 25 – B 5

N113 Main light switch
dash panel, driver side – G204, as of 04/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – G204, before 04/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Headlamp Levelling, without high intensity discharge headlamps 25 – B 5
N113 Main light switch
dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Heated front seats . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Heated rear window, Heated exterior mirrors . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Heated windshield . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Licence plate lamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Light switch, Fog lamps, with trailer socket, wagon . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Light switch, Fog lamps, without trailer socket, wagon . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Light switch, with autolamps . . . . . 25 – B 5

N113 Main light switch
dash panel, driver side – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Light switch, without autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Manual A/C, before 04/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Parking Lamps, with trailer socket, wagon, with autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Parking Lamps, with trailer socket, wagon, without autolamps . . 25 – B 5
N113 Main light switch
dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Parking Lamps, without trailer socket, wagon, with autolamps . . 25 – B 5
N113 Main light switch
dash panel, driver side – Parking Lamps, without trailer socket, wagon, without autolamps 25 – B 5
N113 Main light switch
dash panel, driver side – Pre–equipment pack . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Turn Signal and Hazard Lamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – with autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – with daytime running lamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – with EATC, as of 04/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – with EATC, before 04/2004 . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – with external CD changer and/or video system . . . . . 25 – B 5

N113 Main light switch
dash panel, driver side – with heated rear seats . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – With high intensity discharge headlamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – with high intensity discharge headlamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – With rear window wiper, with headlamp washer . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – with trailer socket, 4–door model/5–door model . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – with trailer socket, wagon . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – without daytime running lamps, without autolamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – without external CD changer and video system . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Without high intensity discharge headlamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – without high intensity discharge headlamps . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – Without rear window wiper, with headlamp washer . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – without trailer socket, 4–door model/5–door model . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side – without trailer socket, wagon . . . . . 25 – B 5
N113 Main light switch
dash panel, driver side . . . . . 25 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – 1.8/2.0L Duratec–HE (MI4) . . . . . 3 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – 1.8L Duratec–SCi (MI4) . . . . . 3 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – 2.5L Duratec–VE (VE6) . . . . . 3 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . 3 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – F82, Petrol engines . . . . . 3 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – G106, 1.8/2.0L Duratec–HE (MI4) . . . . . 3 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – G106, 2.5L Duratec–VE (VE6) . . . . . 3 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 3 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . 3 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side . . . . . 3 – B 5

N126 A/C high–pressure switch
engine compartment, front, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . 5 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 5 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 5 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – Diesel engines . . . . . 5 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 5 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 5 – B 5
N126 A/C high–pressure switch
engine compartment, front, RH side . . . . . 5 – B 5
N214 Radio remote control switch
on steering column, top – DVD navigation system with touch screen . . . . . 37 – C 2
N214 Radio remote control switch
on steering column, top – Pre–equipment pack . . . . . 37 – C 2
N214 Radio remote control switch
on steering column, top – with external CD changer and/or video system . . . . . 37 – C 2
N214 Radio remote control switch
on steering column, top – without external CD changer and video system . . . . . 37 – C 2
N214 Radio remote control switch
on steering column, top . . . . . 37 – C 2
N230 Roof opening panel control switch
roof, front, centre – Diesel engines . . . . . 21 – D 5
N230 Roof opening panel control switch
roof, front, centre – F91 . . . . . 21 – D 5
N230 Roof opening panel control switch
roof, front, centre – G200 . . . . . 21 – D 5
N230 Roof opening panel control switch
roof, front, centre – Petrol engines . . . . . 21 – D 5
N242 Seat control switch, driver
driver’s seat – 2–way power seats . . . . . 41 – E 2
N242 Seat control switch, driver
driver’s seat – 8–way power seats . . . . . 41 – E 2
N242 Seat control switch, driver
driver’s seat – F65, F66 . . . . . 41 – E 2
N242 Seat control switch, driver
driver’s seat – G200 . . . . . 41 – E 2
N242 Seat control switch, driver
driver’s seat – G200
N243 Seat control switch, passenger
passenger’s seat – 2–way power seats
N243 Seat control switch, passenger
passenger’s seat – 8–way power seats

N243	Seat control switch, passenger passenger's seat – F65, F66	
N243	Seat control switch, passenger passenger's seat – G200	
N246	A/C low–pressure switch engine compartment, front, LH side – 1.8/2.0L Duratec–HE (MI4)	3 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side – 1.8L Duratec–SCi (MI4)	3 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side – 2.5L Duratec–VE (VE6)	3 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	3 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side – F82, Petrol engines	3 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	3 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side	3 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	5 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	5 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side – Diesel engines	5 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side – F82, Diesel engines	5 – C 5
N246	A/C low–pressure switch engine compartment, front, LH side	5 – C 5
N249	Brake pressure switch engine compartment, rear, RH side – 5–speed automatic transmission (5F31J), Diesel engines	
N249	Brake pressure switch engine compartment, rear, RH side – G105	
N263	Heated windshield/heated rear window switch dash panel, centre – F11, F13, F15	23 – D 5
N263	Heated windshield/heated rear window switch dash panel, centre – F98	23 – D 5
N263	Heated windshield/heated rear window switch dash panel, centre – G204, as of 04/2004	23 – D 5
N263	Heated windshield/heated rear window switch dash panel, centre – G204, before 04/2004	23 – D 5
N263	Heated windshield/heated rear window switch dash panel, centre – Heated rear window, Heated exterior mirrors	23 – D 5
N263	Heated windshield/heated rear window switch dash panel, centre – Heated windshield	23 – D 5
N263	Heated windshield/heated rear window switch dash panel, centre	23 – D 5
N263	Heated windshield/heated rear window switch dash panel, centre – F11, F13, F15	25 – D 5

N263 Heated windshield/heated rear window switch
dash panel, centre – F98 . . . . . 25 – D 5
N263 Heated windshield/heated rear window switch
dash panel, centre – G204, as of 04/2004 . . . . . 25 – D 5
N263 Heated windshield/heated rear window switch
dash panel, centre – G204, before 04/2004 . . . . . 25 – D 5
N263 Heated windshield/heated rear window switch
dash panel, centre – Heated rear window, Heated exterior mirrors . . . . . 25 – D 5
N263 Heated windshield/heated rear window switch
dash panel, centre – Heated windshield . . . . . 25 – D 5
N263 Heated windshield/heated rear window switch
dash panel, centre . . . . . 25 – D 5
N278 Ignition switch
on steering column – 1.8/2.0L Duratec–HE (MI4) . . . . . 37 – C 1
N278 Ignition switch
on steering column – 1.8L Duratec–SCi (MI4) . . . . . 37 – C 1
N278 Ignition switch
on steering column – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 37 – C 1
N278 Ignition switch
on steering column – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 37 – C 1
N278 Ignition switch
on steering column – 2.5L Duratec–VE (VE6) . . . . . 37 – C 1
N278 Ignition switch
on steering column – 3.0L Duratec–SE (VE6) . . . . . 37 – C 1
N278 Ignition switch
on steering column – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 37 – C 1
N278 Ignition switch
on steering column – 3.0L Duratec–ST (VE6) . . . . . 37 – C 1
N278 Ignition switch
on steering column – 4–speed automatic transmission (CD4E) . . . . . 37 – C 1
N278 Ignition switch
on steering column – 5–speed automatic transmission (5F31J) . . . . . 37 – C 1
N278 Ignition switch
on steering column – Climate controlled front seats . . . . . 37 – C 1
N278 Ignition switch
on steering column – F28, F29 . . . . . 37 – C 1
N278 Ignition switch
on steering column – Heated front seats . . . . . 37 – C 1
N278 Ignition switch
on steering column – Ignition switch automatic transmission . . . . . 37 – C 1
N278 Ignition switch
on steering column – Ignition switch manual transmission . . . . . 37 – C 1
N278 Ignition switch
on steering column – Light switch, with autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column – Light switch, without autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 37 – C 1

N278 Ignition switch
on steering column – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column – Parking Lamps, with trailer socket, wagon, with autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column – Parking Lamps, without trailer socket, wagon, without autolamps . . 37 – C 1
N278 Ignition switch
on steering column – with autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column – without daytime running lamps, without autolamps . . . . . 37 – C 1
N278 Ignition switch
on steering column . . . . . 37 – C 1
N289 Thermo switch, outside air temperature
behind radiator grille, bottom – Diesel engines . . . . . 5 – B 1
N289 Thermo switch, outside air temperature
behind radiator grille, bottom – Diesel engines, with fuel fired heater . . . . . 5 – B 1
N289 Thermo switch, outside air temperature
behind radiator grille, bottom – Diesel engines, with fuel fired heater, as of 08/2004 . . . . . 5 – B 1
N289 Thermo switch, outside air temperature
behind radiator grille, bottom . . . . . 5 – B 1
N297 Window control switch, passenger side front
in passenger's door – F91, LHD . . . . . 38 – E 4
N297 Window control switch, passenger side front
in passenger's door – F91, RHD . . . . . 38 – E 4
N297 Window control switch, passenger side front
in passenger's door – front and rear power windows, Passenger side front . . . . . 38 – E 4
N297 Window control switch, passenger side front
in passenger's door – Front power windows, Passenger side . . . . . 38 – E 4
N297 Window control switch, passenger side front
in passenger's door – G200, RHD . . . . . 38 – E 4
N297 Window control switch, passenger side front
in passenger's door – G205, LHD . . . . . 38 – E 4
N297 Window control switch, passenger side front
in passenger's door – LHD . . . . . 38 – E 4
N297 Window control switch, passenger side front
in passenger's door – RHD . . . . . 38 – E 4
N298 Window control switch, LH rear
in LH rear door – F91, LHD . . . . . 39 – B 5

N298 Window control switch, LH rear
in LH rear door – F91, RHD . . . . . 39 – B 5
N298 Window control switch, LH rear
in LH rear door – front and rear power windows, LH rear door . . . . . 39 – B 5
N298 Window control switch, LH rear
in LH rear door – LHD . . . . . 39 – B 5
N298 Window control switch, LH rear
in LH rear door – RHD . . . . . 39 – B 5
N299 Window control switch, RH rear
in RH rear door – F91, LHD . . . . . 39 – B 4
N299 Window control switch, RH rear
in RH rear door – F91, RHD . . . . . 39 – B 4
N299 Window control switch, RH rear
in RH rear door – front and rear power windows, RH rear door . . . . . 39 – B 4
N299 Window control switch, RH rear
in RH rear door – LHD . . . . . 39 – B 4
N299 Window control switch, RH rear
in RH rear door – RHD . . . . . 39 – B 4
N300 Window control switch, driver (multiple)
in driver's door – F91, LHD . . . . . 38 – E 4
N300 Window control switch, driver (multiple)
in driver's door – F91, RHD . . . . . 38 – E 4
N300 Window control switch, driver (multiple)
in driver's door – front and rear power windows, Driver side front . . . . . 38 – E 4
N300 Window control switch, driver (multiple)
in driver's door – front and rear power windows, LH rear door . . . . . 38 – E 4
N300 Window control switch, driver (multiple)
in driver's door – front and rear power windows, RH rear door . . . . . 38 – E 4
N300 Window control switch, driver (multiple)
in driver's door – Front power windows, Driver side . . . . . 38 – E 4
N300 Window control switch, driver (multiple)
in driver's door – G200, LHD . . . . . 38 – E 4
N300 Window control switch, driver (multiple)
in driver's door – G205, RHD . . . . . 38 – E 4
N300 Window control switch, driver (multiple)
in driver's door – LHD . . . . . 38 – E 4
N300 Window control switch, driver (multiple)
in driver's door – RHD . . . . . 38 – E 4
N316 Inertia Fuel Shutoff (IFS) switch
LH A–pillar, bottom – 1.8/2.0L Duratec–HE (MI4) . . . . . 16 – B 2
N316 Inertia Fuel Shutoff (IFS) switch
LH A–pillar, bottom – 1.8L Duratec–SCi (MI4) . . . . . 16 – B 2
N316 Inertia Fuel Shutoff (IFS) switch
LH A–pillar, bottom – 2.5L Duratec–VE (VE6) . . . . . 16 – B 2
N316 Inertia Fuel Shutoff (IFS) switch
LH A–pillar, bottom – 3.0L Duratec–SE (VE6) . . . . . 16 – B 2
N316 Inertia Fuel Shutoff (IFS) switch
LH A–pillar, bottom – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 16 – B 2
N316 Inertia Fuel Shutoff (IFS) switch
LH A–pillar, bottom – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 16 – B 2

N316 Inertia Fuel Shutoff (IFS) switch
LH A–pillar, bottom – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 16 – B 2
N316 Inertia Fuel Shutoff (IFS) switch
LH A–pillar, bottom . . . . . 16 – B 2
N356 Tailgate exterior release switch
in tailgate, wagon – G300, 5–door model/wagon . . . . . 58 – B 5
N356 Tailgate exterior release switch
in tailgate, wagon . . . . . 58 – B 5
N356 Tailgate exterior release switch
in decklid, 4–door model – G300, 4–door model
N356 Tailgate exterior release switch
in tailgate, 5–door model – G300, 5–door model/wagon
N356 Tailgate exterior release switch
in decklid, 4–door model
N356 Tailgate exterior release switch
in tailgate, 5–door model
N387 Heated rear seats switch
centre console – 1.8/2.0L Duratec–HE (MI4), automatic transmission
N387 Heated rear seats switch
centre console – 4–speed automatic transmission (CD4E)
N387 Heated rear seats switch
centre console – 5–speed automatic transmission (5F31J)
N387 Heated rear seats switch
centre console – Cigar lighter
N387 Heated rear seats switch
centre console – F81
N387 Heated rear seats switch
centre console – G204, as of 04/2004
N387 Heated rear seats switch
centre console – G204, before 04/2004
N387 Heated rear seats switch
centre console – with heated rear seats
N387 Heated rear seats switch
centre console
N389 ESP disable and tailgate/decklid release switch
dash panel, centre – F76, F77, as of 04/2004 . . . . . 27 – A 4
N389 ESP disable and tailgate/decklid release switch
dash panel, centre – F76, F77, before 04/2004 . . . . . 27 – A 4
N389 ESP disable and tailgate/decklid release switch
dash panel, centre – G204, as of 04/2004 . . . . . 27 – A 4
N389 ESP disable and tailgate/decklid release switch
dash panel, centre – G204, before 04/2004 . . . . . 27 – A 4
N389 ESP disable and tailgate/decklid release switch
dash panel, centre . . . . . 27 – A 4
N393 Heated seat switch
dash panel, centre console – EATC . . . . . 27 – A 2
N393 Heated seat switch
dash panel, centre console – F65, F66 . . . . . 27 – A 2
N393 Heated seat switch
dash panel, centre console – F81 . . . . . 27 – A 2

N393 Heated seat switch
dash panel, centre console – G204, as of 04/2004 . . . . . 27 – A 2
N393 Heated seat switch
dash panel, centre console – G204, before 04/2004 . . . . . 27 – A 2
N393 Heated seat switch
dash panel, centre console – Heated front seats . . . . . 27 – A 2
N393 Heated seat switch
dash panel, centre console . . . . . 27 – A 2
N394 Reversing lamp switch
transmission – Auto–dimming interior mirror . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Bosch, 4–door model/5–door model . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Bosch, wagon . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – DVD navigation system with touch screen . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – F78, F80 . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Petrol engines . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Pre–equipment pack, Petrol engines . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, wagon . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Valeo, wagon, as of 01/2004 . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Valeo, wagon, before 01/2004 . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – With rear window wiper . . . . . 60 – F 2
N394 Reversing lamp switch
transmission – Auto–dimming interior mirror . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Bosch, 4–door model/5–door model . . . . . 63 – F 3

N394 Reversing lamp switch
transmission – Bosch, wagon . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – DVD navigation system with touch screen . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – F78, F80 . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Petrol engines . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Pre–equipment pack, Petrol engines . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, wagon . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Valeo, wagon, as of 01/2004 . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Valeo, wagon, before 01/2004 . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – With rear window wiper . . . . . 63 – F 3
N394 Reversing lamp switch
transmission – Auto–dimming interior mirror . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Bosch, 4–door model/5–door model . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Bosch, wagon . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – DVD navigation system with touch screen . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – F78, F80 . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Petrol engines . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Pre–equipment pack, Petrol engines . . . . . 67 – F 3

N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, wagon . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Valeo, wagon, as of 01/2004 . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Valeo, wagon, before 01/2004 . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – With rear window wiper . . . . . 67 – F 3
N394 Reversing lamp switch
transmission – Diesel engines . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Auto–dimming interior mirror . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Bosch, 4–door model/5–door model . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Bosch, wagon . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – DVD navigation system with touch screen . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – F78, F80 . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Pre–equipment pack, Diesel engines . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 70 – F 2

N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, wagon . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Valeo, wagon, as of 01/2004 . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – Valeo, wagon, before 01/2004 . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – With rear window wiper . . . . . 70 – F 2
N394 Reversing lamp switch
transmission – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . 72 – F 3
N394 Reversing lamp switch
transmission – Diesel engines . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Auto–dimming interior mirror . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Bosch, 4–door model/5–door model . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Bosch, wagon . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – DVD navigation system with touch screen . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – F78, F80 . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Pre–equipment pack, Diesel engines . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, wagon . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Valeo, wagon, as of 01/2004 . . . . . 72 – F 3

N394 Reversing lamp switch
transmission – Valeo, wagon, before 01/2004 . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – With rear window wiper . . . . . 72 – F 3
N394 Reversing lamp switch
transmission – Auto–dimming interior mirror . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Bosch, 4–door model/5–door model . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Bosch, wagon . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – DVD navigation system with touch screen . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – F78, F80 . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Petrol engines . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Pre–equipment pack, Petrol engines . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Reversing lamps, without trailer socket, wagon . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Valeo, wagon, as of 01/2004 . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Valeo, wagon, before 01/2004 . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – With rear window wiper . . . . . 75 – E 1
N394 Reversing lamp switch
transmission – Bosch, 4–door model/5–door model . . . . . 79 – F 3
N394 Reversing lamp switch
transmission – Bosch, wagon . . . . . 79 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 79 – F 3

N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 79 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 79 – F 3
N394 Reversing lamp switch
transmission – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 79 – F 3
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 79 – F 3
N394 Reversing lamp switch
transmission – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 79 – F 3
N394 Reversing lamp switch
transmission – Valeo, wagon, as of 01/2004 . . . . . 79 – F 3
N394 Reversing lamp switch
transmission – Valeo, wagon, before 01/2004 . . . . . 79 – F 3
N466 Safety belt buckle switch, driver
driver's seat, RH side, left–hand–drive – G202 . . . . . 41 – A 2
N466 Safety belt buckle switch, driver
driver's seat, RH side, left–hand–drive . . . . . 41 – A 2
N466 Safety belt buckle switch, driver
driver's seat, LH side, right–hand–drive – G202 . . . . . 43 – E 3
N466 Safety belt buckle switch, driver
driver's seat, LH side, right–hand–drive . . . . . 43 – E 3
N643 Heated seat cushion, LH rear
rear seats – G200
N643 Heated seat cushion, LH rear
rear seats – with heated rear seats
N644 Heated seat back, LH rear
rear seats – G200
N644 Heated seat back, LH rear
rear seats – with heated rear seats
N645 Heated seat cushion, RH rear
rear seats – G205
N645 Heated seat cushion, RH rear
rear seats – with heated rear seats
N646 Heated seat back, RH rear
rear seats – G205
N646 Heated seat back, RH rear
rear seats – with heated rear seats
N668 Climate controlled seat switch
dash panel, centre – Climate controlled front seats . . . . . 27 – A 2
N668 Climate controlled seat switch
dash panel, centre – EATC . . . . . 27 – A 2
N668 Climate controlled seat switch
dash panel, centre – F65, F66 . . . . . 27 – A 2
N668 Climate controlled seat switch
dash panel, centre – F81 . . . . . 27 – A 2
N668 Climate controlled seat switch
dash panel, centre – G204, as of 04/2004 . . . . . 27 – A 2

N668	Climate controlled seat switch dash panel, centre – G204, before 04/2004	27 – A 2
N668	Climate controlled seat switch dash panel, centre	27 – A 2
O1	Battery engine compartment, front, LH side – 3.0L Duratec–SE (VE6)	
O1	Battery engine compartment, front, LH side – 3.0L Duratec–ST (VE6)	
O1	Battery engine compartment, front, LH side – Diesel engines	
O1	Battery engine compartment, front, LH side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	
O1	Battery engine compartment, front, LH side – G100, G101	
O1	Battery engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	
O1	Battery engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	
O1	Battery engine compartment, front, LH side – Heated windshield	
O1	Battery engine compartment, front, LH side – Ignition switch automatic transmission	
O1	Battery engine compartment, front, LH side – Ignition switch manual transmission	
O1	Battery engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	
O1	Battery engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, wagon	
O1	Battery engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	
O1	Battery engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, wagon	
O1	Battery engine compartment, front, LH side – Light switch, with autolamps	
O1	Battery engine compartment, front, LH side – Light switch, with daytime running lamps, with high intensity discharge headlamps	
O1	Battery engine compartment, front, LH side – Light switch, without autolamps	
O1	Battery engine compartment, front, LH side – Light switch, without daytime running lamps, with high intensity discharge headlamps	
O1	Battery engine compartment, front, LH side – Petrol engines, except 3.0L Duratec–SE (VE6)	

O1 Battery
engine compartment, front, LH side – With high intensity discharge headlamps
O1 Battery
engine compartment, front, LH side
O5 Generator
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 62 – C 1
O5 Generator
engine – F30, F31, F32, Petrol engines . . . . . 62 – C 1
O5 Generator
engine . . . . . 62 – C 1
O5 Generator
engine – 2.5L Duratec–VE (VE6) . . . . . 64 – C 1
O5 Generator
engine – F30, F31, F32, Petrol engines . . . . . 64 – C 1
O5 Generator
engine . . . . . 64 – C 1
O5 Generator
engine – 2.5L Duratec–VE (VE6) . . . . . 66 – C 1
O5 Generator
engine – F30, F31, F32, Petrol engines . . . . . 66 – C 1
O5 Generator
engine . . . . . 66 – C 1
O5 Generator
engine, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . 68 – D 1
O5 Generator
engine – 3.0L Duratec–ST (VE6) . . . . . 68 – D 1
O5 Generator
engine – F102, 3.0L Duratec–ST (VE6) . . . . . 68 – D 1
O5 Generator
engine . . . . . 68 – D 1
O5 Generator
engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 71 – C 1
O5 Generator
engine – Diesel engines . . . . . 71 – C 1
O5 Generator
engine – F30, F31, F32, F33, Diesel engines . . . . . 71 – C 1
O5 Generator
engine . . . . . 71 – C 1
O5 Generator
engine – Diesel engines . . . . . 74 – C 1
O5 Generator
engine – F30, F31, F32, F33, Diesel engines . . . . . 74 – C 1
O5 Generator
engine . . . . . 74 – C 1
O5 Generator
engine – 1.8L Duratec–SCi (MI4) . . . . . 76 – E 3
O5 Generator
engine – F30, F31, F32, Petrol engines . . . . . 76 – E 3
O5 Generator
engine . . . . . 76 – E 3

O5	Generator engine – 3.0L Duratec–SE (VE6)	77 – D 1
O5	Generator engine, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	77 – D 1
O5	Generator engine – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	77 – D 1
O5	Generator engine – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel	
O5	Generator engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
O5	Generator engine – Diesel engines	
O5	Generator engine – F30, F31, F32, F33, Diesel engines	
P13	Clock spring in steering wheel – 1.8L Duratec–SCi (MI4)	37 – A 3
P13	Clock spring in steering wheel – 1.8L Duratec–SCi (MI4), as of 04/2004	37 – A 3
P13	Clock spring in steering wheel – 1.8L Duratec–SCi (MI4), before 04/2004	37 – A 3
P13	Clock spring in steering wheel – 2.0L Duratorq–TDCi (Puma) Diesel	37 – A 3
P13	Clock spring in steering wheel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	37 – A 3
P13	Clock spring in steering wheel – 5–speed automatic transmission (5F31J)	37 – A 3
P13	Clock spring in steering wheel – Diesel engines	37 – A 3
P13	Clock spring in steering wheel – Driver air bag	37 – A 3
P13	Clock spring in steering wheel – F82, Diesel engines	37 – A 3
P13	Clock spring in steering wheel – F82, Petrol engines	37 – A 3
P13	Clock spring in steering wheel – G203	37 – A 3
P13	Clock spring in steering wheel – Petrol engines, except 1.8L Duratec–SCi (MI4)	37 – A 3
P13	Clock spring in steering wheel	37 – A 3
P20	Glow plugs cylinder head – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – D 5
P20	Glow plugs cylinder head – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
P44	Fuse holder in luggage compartment, LH side – F200, F201	
P44	Fuse holder in loading space, LH side – F74, as of 01/2004, F200, F201, with 13–pin trailer socket	

P44 Fuse holder
in luggage compartment, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
P44 Fuse holder
in loading space, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
P44 Fuse holder
in loading space, LH side – Trailer socket, wagon, as of 01/2004
P44 Fuse holder
in loading space, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004
P46 Fuse holder 2
in loading space, LH side – F200, F201
P46 Fuse holder 2
in luggage compartment, LH side – F74, as of 01/2004, F201, with 7–pin trailer socket
P46 Fuse holder 2
in luggage compartment, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
P46 Fuse holder 2
in loading space, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
P46 Fuse holder 2
in luggage compartment, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004
P46 Fuse holder 2
in loading space, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004
P46 Fuse holder 2
in loading space, LH side – F74, as of 01/2004, F200, F201, with 13–pin trailer socket
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8/2.0L Duratec–HE (MI4) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.5L Duratec–VE (VE6) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2–way power seats . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 3.0L Duratec–SE (VE6) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E), wagon 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), Diesel engines . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), Petrol engines . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), wagon 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 8–way power seats . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Auto–dimming interior mirror . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – before 08/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Bluetooth voice control . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Bosch 8.0 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Bosch, 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Bosch, wagon . . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Cigar lighter . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Climate controlled front seats . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Data link connector, pins 4, 5 and 16 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Diesel engines . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Diesel engines, With electric coolant heater, before 12/2003 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Diesel engines, with fuel fired heater . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Diesel engines, with fuel fired heater, as of 08/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – DVD navigation system with touch screen . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – EATC . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – EATC, as of 04/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – EATC, before 04/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F1, F2 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F4, F5, F6 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F60 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F61 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F62 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F63, 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F63, wagon . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F64, with trailer socket, 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F64, with trailer socket, wagon . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F64, without trailer socket, 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F64, without trailer socket, wagon . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F65, F66 . . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 1.8/2.0L Duratec–HE (MI4) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 1.8L Duratec–SCi (MI4) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 2.5L Duratec–VE (VE6) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 3.0L Duratec–SE (VE6) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 3.0L Duratec–ST (VE6) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, Diesel engines . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F68 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F69, with external CD changer and/or video system . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F69, without external CD changer and video system . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F7 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F70 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F71, Bluetooth voice control . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, with video system . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, without video system . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F71, with DVD navigation system with touch screen . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F72, with external CD changer and/or video system . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F72, without external CD changer and video system . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F73 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F74, as of 01/2004, F201, with 7–pin trailer socket . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F74, as of 01/2004, F200, F201, with 13–pin trailer socket . . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F74, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F75, 5–speed automatic transmission (5F31J) . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F75, except 5–speed automatic transmission (5F31J) . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F76, F77, as of 04/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F76, F77, before 04/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F78, F80 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F81 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F82, Diesel engines . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F82, Petrol engines . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F83 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F85, F86 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F88, F89, with autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F88, F89, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F90 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F91 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F91, LHD . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F92, as of 01/2004, with trailer socket, with parking aid . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F92, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F93 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F94 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F95, F96 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F97 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F98 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F99, 4–door model/5–door model . . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F99, wagon . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, with trailer socket, wagon, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, with trailer socket, wagon, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, without trailer socket, wagon . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – front and rear power windows, Driver side front . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – front and rear power windows, LH rear door . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – front and rear power windows, Passenger side front . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – front and rear power windows, RH rear door . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Front power windows, Driver side . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Front power windows, Passenger side . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – G200 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamp Levelling, with high intensity discharge headlamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamp Levelling, without high intensity discharge headlamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Heated front seats . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Heated rear window, Heated exterior mirrors . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Ignition switch automatic transmission . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Ignition switch manual transmission . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – LHD . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Licence plate lamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, wagon . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, wagon . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, with autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Manual A/C, before 04/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, with autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Petrol engines . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4) . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Petrol engines, except 3.0L Duratec–SE (VE6) . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Pre–equipment pack . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Pre–equipment pack, Diesel engines . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Pre–equipment pack, Petrol engines . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Rear power point . . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, without trailer socket, wagon . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, without trailer socket, wagon . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Trailer socket, with 13–pin trailer socket, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Trailer socket, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Trailer socket, wagon, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Valeo, wagon, as of 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Valeo, wagon, before 01/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with autolamps . . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with daytime running lamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with DVD navigation system with touch screen . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with EATC, as of 04/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with EATC, before 04/2004 . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with external CD changer . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with external CD changer and/or video system . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with heated rear seats . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With high intensity discharge headlamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with high intensity discharge headlamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With power folding mirrors . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with rain sensor . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With rear window wiper . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With rear window wiper, with headlamp washer . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With rear window wiper, without headlamp washer . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with trailer socket, 4–door model/5–door model . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with trailer socket, wagon . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with variable intermittent wipe . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with video system . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with windshield washer jet heater . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without daytime running lamps, without autolamps . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without DVD navigation system with touch screen . . . . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without external CD changer and video system . . 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Without high intensity discharge headlamps . . . . 24 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without high intensity discharge headlamps .... 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Without rear window wiper, with headlamp washer .... 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Without rear window wiper, without headlamp washer .... 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without trailer socket, 4–door model/5–door model .... 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without trailer socket, wagon .... 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel .... 24 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8/2.0L Duratec–HE (MI4) .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8/2.0L Duratec–HE (MI4), automatic transmission .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4) .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), as of 04/2004 .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), before 04/2004 .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–TDCi (Puma) Diesel .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV .. 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2.5L Duratec–VE (VE6) .... 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 2–way power seats .... 25 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 3.0L Duratec–SE (VE6) . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E) . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E), wagon 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J) . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), Diesel engines . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), Petrol engines . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), wagon 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – 8–way power seats . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Auto–dimming interior mirror . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – before 08/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Bluetooth voice control . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Bosch 8.0 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Bosch, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Bosch, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Cigar lighter . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Climate controlled front seats . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Data link connector, pins 4, 5 and 16 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Diesel engines . . . . . 25 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Diesel engines, With electric coolant heater, before 12/2003 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Diesel engines, with fuel fired heater . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Diesel engines, with fuel fired heater, as of 08/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – DVD navigation system with touch screen . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – EATC . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – EATC, as of 04/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – EATC, before 04/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F1, F2 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F4, F5, F6 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F60 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F61 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F62 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F63, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F63, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F64, with trailer socket, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F64, with trailer socket, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F64, without trailer socket, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F64, without trailer socket, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F65, F66 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 1.8/2.0L Duratec–HE (MI4) . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 1.8L Duratec–SCi (MI4) . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 2.5L Duratec–VE (VE6) . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 3.0L Duratec–SE (VE6) . . . . . 25 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, 3.0L Duratec–ST (VE6) . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F67, Diesel engines . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F68 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F69, with external CD changer and/or video system . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F69, without external CD changer and video system . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F7 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F70 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F71, Bluetooth voice control . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, with video system . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, without video system . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F71, with DVD navigation system with touch screen . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F72, with external CD changer and/or video system . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F72, without external CD changer and video system . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F73 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F74, as of 01/2004, F201, with 7–pin trailer socket . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F74, as of 01/2004, F200, F201, with 13–pin trailer socket . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F74, before 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F75, 5–speed automatic transmission (5F31J) . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F75, except 5–speed automatic transmission (5F31J) . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F76, F77, as of 04/2004 . . . . . 25 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F76, F77, before 04/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F78, F80 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F81 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F82, Diesel engines . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F82, Petrol engines . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F83 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F85, F86 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F88, F89, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F88, F89, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F90 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F91 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F91, RHD . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F92, as of 01/2004, with trailer socket, with parking aid . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F92, before 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F93 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F94 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F95, F96 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F97 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F98 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F99, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – F99, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 25 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, with trailer socket, wagon, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, with trailer socket, wagon, before 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Fog lamps, without trailer socket, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – front and rear power windows, Driver side front . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – front and rear power windows, LH rear door . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – front and rear power windows, Passenger side front . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – front and rear power windows, RH rear door . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Front power windows, Driver side . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Front power windows, Passenger side . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – G200 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamp Levelling, with high intensity discharge headlamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamp Levelling, without high intensity discharge headlamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 25 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Heated front seats . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Heated rear window, Heated exterior mirrors . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Ignition switch automatic transmission . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Ignition switch manual transmission . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Licence plate lamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Manual A/C, before 04/2004 . . . . . 25 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Petrol engines . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4) . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Petrol engines, except 3.0L Duratec–SE (VE6) . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Pre–equipment pack . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Pre–equipment pack, Diesel engines . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Pre–equipment pack, Petrol engines . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Rear power point . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 25 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Reversing lamps, without trailer socket, wagon . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – RHD . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, before 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Stop Lamps, without trailer socket, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Trailer socket, with 7–pin trailer socket, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Trailer socket, before 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Trailer socket, wagon, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Valeo, 4–door model/5–door model, before 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Valeo, wagon, as of 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Valeo, wagon, before 01/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with daytime running lamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with DVD navigation system with touch screen . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with EATC, as of 04/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with EATC, before 04/2004 . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with external CD changer . . . . . 25 – E 2

P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with external CD changer and/or video system . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with heated rear seats . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With high intensity discharge headlamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with high intensity discharge headlamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With power folding mirrors . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with rain sensor . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With rear window wiper . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With rear window wiper, with headlamp washer . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – With rear window wiper, without headlamp washer . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with trailer socket, 4–door model/5–door model . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with trailer socket, wagon . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with variable intermittent wipe . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with video system . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – with windshield washer jet heater . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without daytime running lamps, without autolamps . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without DVD navigation system with touch screen . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without external CD changer and video system . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Without high intensity discharge headlamps . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without high intensity discharge headlamps . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Without rear window wiper, with headlamp washer . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – Without rear window wiper, without headlamp washer . . . . . 25 – E 2
P91 Central Junction Box (CJB)
in LH front footwell, under dash panel – without trailer socket, 4–door model/5–door model . . . . . 25 – E 2

P91	Central Junction Box (CJB) in LH front footwell, under dash panel – without trailer socket, wagon	25 – E 2
P91	Central Junction Box (CJB) in LH front footwell, under dash panel	25 – E 2
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 1.8/2.0L Duratec–HE (MI4)	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 1.8/2.0L Duratec–HE (MI4), automatic transmission	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 1.8L Duratec–SCi (MI4)	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 1.8L Duratec–SCi (MI4), as of 04/2004	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 1.8L Duratec–SCi (MI4), before 04/2004	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 2.5L Duratec–VE (VE6)	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 2.5L Duratec–VE (VE6),automatic transmission	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 2.5L Duratec–VE (VE6),manual transmission	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 3.0L Duratec–SE (VE6)	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 3.0L Duratec–ST (VE6)	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 3.0L Duratec–ST (VE6), as of 04/2004	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 3.0L Duratec–ST (VE6), before 04/2004	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 4–speed automatic transmission (CD4E)	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 4–speed automatic transmission (CD4E), 4–door model/5–door model	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 4–speed automatic transmission (CD4E), wagon	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 5–speed automatic transmission (5F31J)	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – 5–speed automatic transmission (5F31J), wagon	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – Auto–dimming interior mirror	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – Autolamps	4 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – before 08/2004	4 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Bosch 8.0 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Bosch, 4–door model/5–door model . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Bosch, wagon . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Cigar lighter . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Climate controlled front seats . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Diesel engines, With electric coolant heater, before 12/2003 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Diesel engines, with fuel fired heater, as of 08/2004 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – DVD navigation system with touch screen . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – EATC, as of 04/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – EATC, before 04/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F1, F2 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F11, F13, F15 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F16 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F17 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F18 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F20, F21 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F22, F23, petrol engines . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F24, F25 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F26 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F27 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F27, 3.0L Duratec–SE (VE6) . . . . . 4 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F28, F29 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F3, before 12/2003 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F30, F31, F32, Petrol engines . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F33, 1.8L Duratec–SCi (MI4) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F37, 1.8/2.0L Duratec–HE (MI4) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F37, 1.8L Duratec–SCi (MI4) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F37, 2.5L Duratec–VE (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F37, 3.0L Duratec–SE (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F37, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F37, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F4, F5, F6 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F40, 1.8/2.0L Duratec–HE (MI4) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F40, 1.8L Duratec–SCi (MI4) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F40, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F40, 2.5L Duratec–VE (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 1.8L Duratec–SCi (MI4) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 2.5L Duratec–VE (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 3.0L Duratec–SE (VE6) . . . . . 4 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F67, 1.8/2.0L Duratec–HE (MI4) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F67, 2.5L Duratec–VE (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F67, 3.0L Duratec–SE (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F67, 3.0L Duratec–ST (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F7 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F78, F80 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F8, 3.0L Duratec–SE (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F88, F89, with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F88, F89, without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F9 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F95, F96 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – G102, 3.0L Duratec–SE (VE6) . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – G104 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamp Levelling, with high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamp Levelling, without high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 4 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Heated front seats . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Heated rear window, Heated exterior mirrors . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Heated windshield . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Ignition switch automatic transmission . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Ignition switch manual transmission . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – LHD . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Licence plate lamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, wagon 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, wagon . . . . . 4 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Manual A/C, before 04/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, with trailer socket, wagon, with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Petrol engines . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Pre–equipment pack, Petrol engines . . . . . 4 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, without trailer socket, wagon . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – RHD . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps, without trailer socket, wagon . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Valeo, 4–door model/5–door model, as of 01/2004 . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Valeo, 4–door model/5–door model, before 01/2004 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Valeo, wagon, as of 01/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Valeo, wagon, before 01/2004 . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – with autolamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – with daytime running lamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – with high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – With high intensity discharge headlamps . . . . . 4 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – With rear window wiper . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – With rear window wiper, with headlamp washer . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – with trailer socket, 4–door model/5–door model . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – with trailer socket, wagon . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – without daytime running lamps, without autolamps 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Without high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – without high intensity discharge headlamps . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Without rear window wiper, with headlamp washer 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – without trailer socket, 4–door model/5–door model 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – without trailer socket, wagon . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side . . . . . 4 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 5–speed automatic transmission (5F31J) . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – 5–speed automatic transmission (5F31J), wagon . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Auto–dimming interior mirror . . . . . 6 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – before 08/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Bosch 8.0 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Bosch, 4–door model/5–door model . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Bosch, wagon . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Cigar lighter . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Climate controlled front seats . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Diesel engines . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Diesel engines, With electric coolant heater, before 12/2003 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Diesel engines, with fuel fired heater . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Diesel engines, with fuel fired heater, as of 08/2004 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – DVD navigation system with touch screen . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – EATC, as of 04/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – EATC, before 04/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F1, F2 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F11, F13, F15 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F16 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F17 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F18 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F20, F21 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F22, F23, Diesel engines . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F24, F25 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F26 . . . . . 6 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F27 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F27, 3.0L Duratec–SE (VE6) . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F28, F29 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F3, before 12/2003 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F30, F31, F32, F33, Diesel engines . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F37, 3.0L Duratec–SE (VE6) . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F37, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F37, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F4, F5, F6 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F40, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 3.0L Duratec–SE (VE6) . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F42, Diesel engines . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F67, 3.0L Duratec–SE (VE6) . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F7 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F78, F80 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F8, 3.0L Duratec–SE (VE6) . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F8, Diesel engines . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F88, F89, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F88, F89, without autolamps . . . . . 6 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F9 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – F95, F96 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – G102, 3.0L Duratec–SE (VE6) . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – G102, Diesel engines . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – G104 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamp Levelling, with high intensity discharge headlamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamp Levelling, without high intensity discharge headlamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Heated front seats . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Heated rear window, Heated exterior mirrors . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Heated windshield . . . . . 6 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Ignition switch automatic transmission . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Ignition switch manual transmission . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – LHD . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Licence plate lamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, wagon 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, wagon . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, without autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Manual A/C, before 04/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, with trailer socket, wagon, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 6 – F 4

P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Pre–equipment pack, Diesel engines . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Reversing lamps, without trailer socket, wagon . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – RHD . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 6 – F 4
P93 Battery Junction Box (BJB)
engine compartment, front, LH side – Turn Signal and Hazard Lamps, without trailer socket, wagon . . . . . 6 – F 4

P93	Battery Junction Box (BJB) engine compartment, front, LH side – Valeo, 4–door model/5–door model, as of 01/2004	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – Valeo, 4–door model/5–door model, before 01/2004	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – Valeo, wagon, as of 01/2004	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – Valeo, wagon, before 01/2004	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – with autolamps	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – with daytime running lamps	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – With high intensity discharge headlamps	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – with high intensity discharge headlamps	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – With rear window wiper	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – With rear window wiper, with headlamp washer	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – with trailer socket, 4–door model/5–door model	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – with trailer socket, wagon	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – without daytime running lamps, without autolamps	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – Without high intensity discharge headlamps	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – without high intensity discharge headlamps	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – Without rear window wiper, with headlamp washer	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – without trailer socket, 4–door model/5–door model	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side – without trailer socket, wagon	6 – F 4
P93	Battery Junction Box (BJB) engine compartment, front, LH side	6 – F 4
P136	Spark plugs cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	68 – E 2
P136	Spark plugs cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	77 – E 2
P136	Spark plugs cylinder head – 1.8/2.0L Duratec–HE (MI4)	
P136	Spark plugs cylinder head – 2.5L Duratec–VE (VE6)	
R19	Rear window heater on LH C–pillar, 4–door model – G301, 4–door model	47 – D 5
R19	Rear window heater on LH C–pillar, 4–door model – Heated rear window, Heated exterior mirrors	47 – D 5

R19	Rear window heater on LH C–pillar, 4–door model	47 – D 5
R19	Rear window heater on LH C–pillar, 4–door model – G301, 4–door model	48 – D 5
R19	Rear window heater on LH C–pillar, 4–door model – Heated rear window, Heated exterior mirrors	48 – D 5
R19	Rear window heater on LH C–pillar, 4–door model	48 – D 5
R19	Rear window heater in tailgate, 5–door model – G300, 5–door model/wagon	57 – C 4
R19	Rear window heater in tailgate, 5–door model – G300, 5–door model/wagon	57 – F 3
R19	Rear window heater in tailgate, 5–door model – Heated rear window, Heated exterior mirrors	57 – C 4
R19	Rear window heater in tailgate, 5–door model – Heated rear window, Heated exterior mirrors	57 – F 3
R19	Rear window heater in tailgate, 5–door model	57 – C 4
R19	Rear window heater in tailgate, 5–door model	57 – F 3
R19	Rear window heater in tailgate, wagon – G300, 5–door model/wagon	58 – A 3
R19	Rear window heater in tailgate, wagon – G300, 5–door model/wagon	58 – E 4
R19	Rear window heater in tailgate, wagon – Heated rear window, Heated exterior mirrors	58 – A 3
R19	Rear window heater in tailgate, wagon – Heated rear window, Heated exterior mirrors	58 – E 4
R19	Rear window heater in tailgate, wagon	58 – A 3
R19	Rear window heater in tailgate, wagon	58 – E 4
R21	Blower motor resistor behind dash panel, centre – Manual A/C, before 04/2004	14 – E 2
R21	Blower motor resistor behind dash panel, centre – Manual A/C, before 04/2004	15 – C 1
R27	Cooling fan resistor behind radiator grille – 1.8/2.0L Duratec–HE (MI4)	8 – B 2
R27	Cooling fan resistor behind radiator grille – 1.8L Duratec–SCi (MI4)	8 – B 2
R27	Cooling fan resistor behind radiator grille – 1.8/2.0L Duratec–HE (MI4)	9 – C 2
R27	Cooling fan resistor behind radiator grille – 2.5L Duratec–VE (VE6),automatic transmission	9 – C 2
R27	Cooling fan resistor behind radiator grille – 3.0L Duratec–ST (VE6)	9 – C 2
R42	Cigar lighter, front centre console – Cigar lighter	
R42	Cigar lighter, front centre console – F68	

R42 Cigar lighter, front
centre console – G204, as of 04/2004
R42 Cigar lighter, front
centre console – G204, before 04/2004
R42 Cigar lighter, front
centre console – with heated rear seats
R42 Cigar lighter, front
centre console
R50 Booster heater
on engine bulkhead, RH side – Data link connector, pin 7
R50 Booster heater
on engine bulkhead, RH side – Diesel engines
R50 Booster heater
on engine bulkhead, RH side – Diesel engines, with fuel fired heater
R50 Booster heater
on engine bulkhead, RH side – Diesel engines, with fuel fired heater, as of 08/2004
R50 Booster heater
on engine bulkhead, RH side – F22, F23, Diesel engines
R50 Booster heater
on engine bulkhead, RH side – F82, Diesel engines
R50 Booster heater
on engine bulkhead, RH side – G104
R50 Booster heater
on engine bulkhead, RH side
R51 Windshield washer jet heater, LH side
in hood, LH side – F82, Diesel engines . . . . . 2 – E 3
R51 Windshield washer jet heater, LH side
in hood, LH side – F82, Petrol engines . . . . . 2 – E 3
R51 Windshield washer jet heater, LH side
in hood, LH side – G104 . . . . . 2 – E 3
R51 Windshield washer jet heater, LH side
in hood, LH side – with windshield washer jet heater . . . . . 2 – E 3
R52 Windshield washer jet heater, RH side
in hood, RH side – F82, Diesel engines . . . . . 2 – D 2
R52 Windshield washer jet heater, RH side
in hood, RH side – F82, Petrol engines . . . . . 2 – D 2
R52 Windshield washer jet heater, RH side
in hood, RH side – G104 . . . . . 2 – D 2
R52 Windshield washer jet heater, RH side
in hood, RH side – with windshield washer jet heater . . . . . 2 – D 2
R53 Windshield heater, LH side
on engine bulkhead, LH side – F11, F13, F15 . . . . . 12 – E 2
R53 Windshield heater, LH side
on engine bulkhead, LH side – G104 . . . . . 12 – E 2
R53 Windshield heater, LH side
on engine bulkhead, LH side – Heated windshield . . . . . 12 – E 2
R53 Windshield heater, LH side
on engine bulkhead, LH side – F11, F13, F15 . . . . . 13 – E 1
R53 Windshield heater, LH side
on engine bulkhead, LH side – G104 . . . . . 13 – E 1

R53	Windshield heater, LH side on engine bulkhead, LH side – Heated windshield	13 – E 1
R54	Windshield heater, RH side on engine bulkhead, RH side – F11, F13, F15	12 – B 2
R54	Windshield heater, RH side on engine bulkhead, RH side – G105	12 – B 2
R54	Windshield heater, RH side on engine bulkhead, RH side – Heated windshield	12 – B 2
R54	Windshield heater, RH side on engine bulkhead, RH side – F11, F13, F15	13 – A 2
R54	Windshield heater, RH side on engine bulkhead, RH side – G105	13 – A 2
R54	Windshield heater, RH side on engine bulkhead, RH side – Heated windshield	13 – A 2
R79	Coolant supplement 1 heater engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	
R79	Coolant supplement 1 heater engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	
R79	Coolant supplement 1 heater engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	
R80	Coolant supplement 2 heater engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	
R80	Coolant supplement 2 heater engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	
R80	Coolant supplement 2 heater engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	
R91	Parking aid module resistor in luggage compartment, rear, LH side – Bosch	
R91	Parking aid module resistor in loading space, rear, LH side – Bosch	
T2	Ignition transformer cylinder head – 1.8/2.0L Duratec–HE (MI4)	60 – E 4
T2	Ignition transformer cylinder head – F67, 1.8/2.0L Duratec–HE (MI4)	60 – E 4
T2	Ignition transformer cylinder head – 1.8/2.0L Duratec–HE (MI4)	61 – E 4
T2	Ignition transformer cylinder head – F67, 1.8/2.0L Duratec–HE (MI4)	61 – E 4
T2	Ignition transformer cylinder head – 2.5L Duratec–VE (VE6)	64 – D 5
T2	Ignition transformer cylinder head – F67, 2.5L Duratec–VE (VE6)	64 – D 5
T2	Ignition transformer cylinder head – 2.5L Duratec–VE (VE6)	66 – D 5
T2	Ignition transformer cylinder head – F67, 2.5L Duratec–VE (VE6)	66 – D 5

T2	Ignition transformer cylinder head, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	67 – B 5
T2	Ignition transformer cylinder head, 3.0L Duratec–ST (VE6) – F67, 3.0L Duratec–SE (VE6)	67 – B 5
T2	Ignition transformer cylinder head – F67, 3.0L Duratec–ST (VE6)	67 – B 5
T2	Ignition transformer cylinder head, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	79 – B 5
T2	Ignition transformer cylinder head, 3.0L Duratec–SE (VE6) – F67, 3.0L Duratec–SE (VE6)	79 – B 5
T6	Ignition coil, cylinder 1 engine, top – 1.8L Duratec–SCi (MI4)	75 – A 5
T6	Ignition coil, cylinder 1 engine, top – F67, 1.8L Duratec–SCi (MI4)	75 – A 5
T6	Ignition coil, cylinder 1 engine, top – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	75 – A 5
T6	Ignition coil, cylinder 1 engine, top – G106, 1.8L Duratec–SCi (MI4), before 04/2004	75 – A 5
T6	Ignition coil, cylinder 1 engine, top – G109	75 – A 5
T7	Ignition coil, cylinder 2 engine, top – 1.8L Duratec–SCi (MI4)	75 – C 5
T7	Ignition coil, cylinder 2 engine, top – F67, 1.8L Duratec–SCi (MI4)	75 – C 5
T7	Ignition coil, cylinder 2 engine, top – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	75 – C 5
T7	Ignition coil, cylinder 2 engine, top – G106, 1.8L Duratec–SCi (MI4), before 04/2004	75 – C 5
T7	Ignition coil, cylinder 2 engine, top – G109	75 – C 5
T8	Ignition coil, cylinder 3 engine, top – 1.8L Duratec–SCi (MI4)	75 – C 5
T8	Ignition coil, cylinder 3 engine, top – F67, 1.8L Duratec–SCi (MI4)	75 – C 5
T8	Ignition coil, cylinder 3 engine, top – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	75 – C 5
T8	Ignition coil, cylinder 3 engine, top – G106, 1.8L Duratec–SCi (MI4), before 04/2004	75 – C 5
T8	Ignition coil, cylinder 3 engine, top – G109	75 – C 5
T9	Ignition coil, cylinder 4 engine, top – 1.8L Duratec–SCi (MI4)	75 – D 5
T9	Ignition coil, cylinder 4 engine, top – F67, 1.8L Duratec–SCi (MI4)	75 – D 5
T9	Ignition coil, cylinder 4 engine, top – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	75 – D 5
T9	Ignition coil, cylinder 4 engine, top – G106, 1.8L Duratec–SCi (MI4), before 04/2004	75 – D 5
T9	Ignition coil, cylinder 4 engine, top – G109	75 – D 5

U1 Ignition transformer capacitor
cylinder head – 2.5L Duratec–VE (VE6) . . . . . 64 – D 5
U1 Ignition transformer capacitor
cylinder head – F67, 2.5L Duratec–VE (VE6) . . . . . 64 – D 5
U1 Ignition transformer capacitor
cylinder head – 2.5L Duratec–VE (VE6) . . . . . 66 – E 5
U1 Ignition transformer capacitor
cylinder head – F67, 2.5L Duratec–VE (VE6) . . . . . 66 – E 5
U1 Ignition transformer capacitor
cylinder head – F67, 3.0L Duratec–ST (VE6) . . . . . 67 – C 5
U1 Ignition transformer capacitor
cylinder head – 1.8/2.0L Duratec–HE (MI4)
U1 Ignition transformer capacitor
cylinder head – 1.8L Duratec–SCi (MI4)
U1 Ignition transformer capacitor
cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
U1 Ignition transformer capacitor
cylinder head – F67, 1.8/2.0L Duratec–HE (MI4)
U1 Ignition transformer capacitor
cylinder head – F67, 1.8L Duratec–SCi (MI4)
U1 Ignition transformer capacitor
cylinder head – F67, 3.0L Duratec–SE (VE6)
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 3
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 29 – B 3
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – B 3
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines . . . . 29 – B 3
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 3
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, Diesel engines . . . . . 29 – B 3

V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 29 – B 3
V7 A/C compressor clutch diode
engine compartment, front, LH side, in Battery Junction Box (BJB) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – F33, 1.8L Duratec–SCi (MI4) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – F67, 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – F67, 2.5L Duratec–VE (VE6) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – F67, 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – F67, 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
V13 EEC Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 29 – B 2

V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 2
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
V33 Diode
engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, Diesel engines . . . . . 29 – B 2
Y1 Canister purge solenoid valve
engine compartment, RH side, centre – 1.8/2.0L Duratec–HE (MI4) . . . . . 4 – B 5
Y1 Canister purge solenoid valve
engine compartment, RH side, centre – 1.8L Duratec–SCi (MI4) . . . . . 4 – B 5
Y1 Canister purge solenoid valve
engine compartment, RH side, centre – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 4 – B 5
Y1 Canister purge solenoid valve
engine compartment, RH side, centre – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 4 – B 5
Y1 Canister purge solenoid valve
engine compartment, RH side, centre – 2.5L Duratec–VE (VE6) . . . . . 4 – B 5
Y1 Canister purge solenoid valve
engine compartment, RH side, centre – 3.0L Duratec–SE (VE6) . . . . . 4 – B 5
Y1 Canister purge solenoid valve
engine compartment, RH side, centre – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) 4 – B 5
Y1 Canister purge solenoid valve
engine compartment, RH side, centre – 3.0L Duratec–ST (VE6) . . . . . 4 – B 5

Y1	Canister purge solenoid valve engine compartment, RH side, centre – F40, 1.8/2.0L Duratec–HE (MI4)	4 – B 5
Y1	Canister purge solenoid valve engine compartment, RH side, centre – F40, 2.5L Duratec–VE (VE6)	4 – B 5
Y1	Canister purge solenoid valve engine compartment, RH side, centre – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – B 5
Y1	Canister purge solenoid valve engine compartment, RH side, centre – F42, 1.8L Duratec–SCi (MI4)	4 – B 5
Y13	Idle speed control valve engine – 1.8/2.0L Duratec–HE (MI4)	60 – D 5
Y13	Idle speed control valve engine – F40, 1.8/2.0L Duratec–HE (MI4)	60 – D 5
Y13	Idle speed control valve engine – 1.8/2.0L Duratec–HE (MI4)	61 – D 5
Y13	Idle speed control valve engine – F40, 1.8/2.0L Duratec–HE (MI4)	61 – D 5
Y13	Idle speed control valve engine – 2.5L Duratec–VE (VE6)	63 – E 5
Y13	Idle speed control valve engine – F40, 2.5L Duratec–VE (VE6)	63 – E 5
Y13	Idle speed control valve engine – 2.5L Duratec–VE (VE6)	65 – E 4
Y13	Idle speed control valve engine – F40, 2.5L Duratec–VE (VE6)	65 – E 4
Y13	Idle speed control valve engine, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	67 – E 5
Y13	Idle speed control valve engine – 3.0L Duratec–ST (VE6)	67 – E 5
Y13	Idle speed control valve engine, 3.0L Duratec–ST (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	67 – E 5
Y13	Idle speed control valve engine – 3.0L Duratec–SE (VE6)	79 – D 5
Y13	Idle speed control valve engine, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	79 – D 5
Y13	Idle speed control valve engine, 3.0L Duratec–SE (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	79 – D 5
Y17	Left rear speaker in LH rear door	39 – B 4
Y18	Right front speaker in bottom of RH front door	38 – C 5
Y19	Right rear speaker in RH rear door	39 – B 4
Y28	Left front speaker in bottom of LH front door	38 – C 4
Y31	A/C compressor clutch solenoid engine compartment, front, RH side – 2.5L Duratec–VE (VE6)	9 – E 1
Y31	A/C compressor clutch solenoid engine compartment, front, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	9 – E 1

Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 9 – E 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – G102, 3.0L Duratec–SE (VE6) . . . . . 9 – E 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . 9 – E 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side . . . . . 9 – E 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – Diesel engines . . . . . 10 – D 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – G102, Diesel engines . . . . . 10 – D 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side . . . . . 10 – D 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – Diesel engines . . . . . 11 – E 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – G102, Diesel engines . . . . . 11 – E 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side . . . . . 11 – E 1
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – 1.8/2.0L Duratec–HE (MI4) . . . . . 60 – B 2
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 60 – B 2
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . 60 – B 2
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side . . . . . 60 – B 2
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – 1.8L Duratec–SCi (MI4) . . . . . 75 – A 3
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 75 – A 3
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side . . . . . 75 – A 3
Y31 A/C compressor clutch solenoid
engine compartment, front, RH side – Diesel engines
Y108 Fuel injector 1
cylinder head – 1.8/2.0L Duratec–HE (MI4)
Y108 Fuel injector 1
cylinder head – 1.8L Duratec–SCi (MI4)
Y108 Fuel injector 1
cylinder head – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
Y108 Fuel injector 1
cylinder head – 2.5L Duratec–VE (VE6)
Y108 Fuel injector 1
cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)

Y108	Fuel injector 1 cylinder head – F40, 1.8/2.0L Duratec–HE (MI4)
Y108	Fuel injector 1 cylinder head – F40, 2.5L Duratec–VE (VE6)
Y108	Fuel injector 1 cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y109	Fuel injector 2 cylinder head – 1.8/2.0L Duratec–HE (MI4)
Y109	Fuel injector 2 cylinder head – 1.8L Duratec–SCi (MI4)
Y109	Fuel injector 2 cylinder head – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
Y109	Fuel injector 2 cylinder head – 2.5L Duratec–VE (VE6)
Y109	Fuel injector 2 cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y109	Fuel injector 2 cylinder head – F40, 1.8/2.0L Duratec–HE (MI4)
Y109	Fuel injector 2 cylinder head – F40, 2.5L Duratec–VE (VE6)
Y109	Fuel injector 2 cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y110	Fuel injector 3 cylinder head – 1.8/2.0L Duratec–HE (MI4)
Y110	Fuel injector 3 cylinder head – 1.8L Duratec–SCi (MI4)
Y110	Fuel injector 3 cylinder head – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
Y110	Fuel injector 3 cylinder head – 2.5L Duratec–VE (VE6)
Y110	Fuel injector 3 cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y110	Fuel injector 3 cylinder head – F40, 1.8/2.0L Duratec–HE (MI4)
Y110	Fuel injector 3 cylinder head – F40, 2.5L Duratec–VE (VE6)
Y110	Fuel injector 3 cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y111	Fuel injector 4 cylinder head – 1.8/2.0L Duratec–HE (MI4)
Y111	Fuel injector 4 cylinder head – 1.8L Duratec–SCi (MI4)
Y111	Fuel injector 4 cylinder head – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
Y111	Fuel injector 4 cylinder head – 2.5L Duratec–VE (VE6)
Y111	Fuel injector 4 cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y111	Fuel injector 4 cylinder head – F40, 1.8/2.0L Duratec–HE (MI4)

Y111 Fuel injector 4
cylinder head – F40, 2.5L Duratec–VE (VE6)
Y111 Fuel injector 4
cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y112 Fuel injector 5
cylinder head – 2.5L Duratec–VE (VE6)
Y112 Fuel injector 5
cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y112 Fuel injector 5
cylinder head – F40, 2.5L Duratec–VE (VE6)
Y112 Fuel injector 5
cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y113 Fuel injector 6
cylinder head – 2.5L Duratec–VE (VE6)
Y113 Fuel injector 6
cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y113 Fuel injector 6
cylinder head – F40, 2.5L Duratec–VE (VE6)
Y113 Fuel injector 6
cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
Y153 Mobile phone speaker
dash panel – with external CD changer and/or video system
Y153 Mobile phone speaker
dash panel – without external CD changer and video system
Y160 Swirl plate solenoid valve
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 60 – B 1
Y160 Swirl plate solenoid valve
engine – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 60 – B 1
Y160 Swirl plate solenoid valve
engine – 1.8/2.0L Duratec–HE (MI4) . . . . . 61 – C 1
Y160 Swirl plate solenoid valve
engine – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 61 – C 1
Y160 Swirl plate solenoid valve
engine – 1.8L Duratec–SCi (MI4)
Y160 Swirl plate solenoid valve
engine – F40, 1.8L Duratec–SCi (MI4)
Y165 Fuel metering valve
engine compartment, Duratorq–TDCi – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . 72 – A 4
Y165 Fuel metering valve
engine compartment, Duratorq–TDCi – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . 73 – A 3
Y165 Fuel metering valve
engine compartment, Duratorq–TDCi – 2.2L Duratorq–TDCi (Puma) Diesel , 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 73 – A 3
Y165 Fuel metering valve
engine compartment, Duratorq–TDCi – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 73 – A 3
Y165 Fuel metering valve
engine compartment, Duratorq–TDCi – F40, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 73 – A 3

Y190 Fuel control valve
engine, top, LH side – 1.8L Duratec–SCi (MI4) . . . . . 75 – D 5
Y190 Fuel control valve
engine, top, LH side – F42, 1.8L Duratec–SCi (MI4) . . . . . 75 – D 5
Y234 Parking aid speaker
behind dash panel, LH side – Bosch . . . . . 23 – C 2
Y234 Parking aid speaker
behind dash panel, LH side – Valeo . . . . . 23 – C 2
Y234 Parking aid speaker
behind dash panel, LH side – Bosch . . . . . 25 – F 2
Y234 Parking aid speaker
behind dash panel, LH side – Valeo . . . . . 25 – F 2

Connectors Section 700–06–00

	Location	Page/coordinates
C12	engine compartment, near Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4), automatic transmission	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4), manual transmission	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), as of 04/2004	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), before 04/2004	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), Petrol engines	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – Diesel engines	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – F40, 1.8L Duratec–SCi (MI4)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	29 – E 3
C12	engine compartment, near Battery Junction Box (BJB) – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission	29 – E 3

C12 engine compartment, near Battery Junction Box (BJB) – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – F42, 2.5L Duratec–VE (VE6) . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – F67, 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – F67, 1.8L Duratec–SCi (MI4) . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – F67, 2.5L Duratec–VE (VE6) . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – F67, 3.0L Duratec–ST (VE6) . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – G106, 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – G106, 2.5L Duratec–VE (VE6) . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – Ignition switch automatic transmission . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – Ignition switch manual transmission . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – Petrol engines . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 29 – E 3
C12 engine compartment, near Battery Junction Box (BJB) . . . . . 29 – E 3
C14 engine compartment, near Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4), manual transmission . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6), manual transmission . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 29 – B 4

C14 engine compartment, near Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E), wagon . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J) . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – Auto–dimming interior mirror . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – Bosch, 4–door model/5–door model . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – Bosch, wagon . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – Diesel engines . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – DVD navigation system with touch screen . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F30, F31, F32, Petrol engines . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F37, 3.0L Duratec–SE (VE6) . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F37, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F37, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F40, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F42, 3.0L Duratec–SE (VE6) . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F42, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F42, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 29 – B 4
C14 engine compartment, near Battery Junction Box (BJB) – F42, Diesel engines . . . . . 29 – B 4

C14	engine compartment, near Battery Junction Box (BJB) – F67, 3.0L Duratec–SE (VE6)	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – F78, F80	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – G106, 1.8L Duratec–SCi (MI4), before 04/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Petrol engines	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Pre–equipment pack, Diesel engines	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Pre–equipment pack, Petrol engines	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, as of 01/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, before 01/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, without trailer socket, 4–door model/5–door model	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, without trailer socket, wagon	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, as of 01/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, before 01/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Valeo, wagon, as of 01/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – Valeo, wagon, before 01/2004	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB) – With rear window wiper	29 – B 4
C14	engine compartment, near Battery Junction Box (BJB)	29 – B 4
C15	engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – F 3
C15	engine – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	70 – F 3
C15	engine – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	70 – F 3
C15	engine – F42, Diesel engines	70 – F 3
C15	engine – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – F 3

C15	engine	70 – F 3
C15	engine – 1.8L Duratec–SCi (MI4)	75 – F 3
C15	engine – 1.8L Duratec–SCi (MI4), as of 04/2004	75 – F 3
C15	engine – 1.8L Duratec–SCi (MI4), before 04/2004	75 – F 3
C15	engine – Petrol engines	75 – F 3
C15	engine	75 – F 3
C16	engine compartment, engine, RH side – 1.8/2.0L Duratec–HE (MI4)	
C16	engine compartment, engine, RH side – 1.8/2.0L Duratec–HE (MI4), automatic transmission	
C16	engine compartment, engine, RH side – 1.8/2.0L Duratec–HE (MI4), manual transmission	
C16	engine compartment, engine, RH side – 1.8L Duratec–SCi (MI4)	
C16	engine compartment, engine, RH side – F37, 3.0L Duratec–SE (VE6)	
C16	engine compartment, engine, RH side – F37, 3.0L Duratec–ST (VE6), before 04/2004	
C16	engine compartment, engine, RH side – F40, 1.8/2.0L Duratec–HE (MI4)	
C17	engine compartment, engine, RH side, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	69 – E 4
C17	engine compartment, engine, RH side – 3.0L Duratec–ST (VE6)	69 – E 4
C17	engine compartment, engine, RH side – 3.0L Duratec–ST (VE6), as of 04/2004	69 – E 4
C17	engine compartment, engine, RH side – 3.0L Duratec–ST (VE6), before 04/2004	69 – E 4
C17	engine compartment, engine, RH side, 3.0L Duratec–ST (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	69 – E 4
C17	engine compartment, engine, RH side	69 – E 4
C17	engine compartment, engine, RH side – 3.0L Duratec–SE (VE6)	78 – E 4
C17	engine compartment, engine, RH side, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	78 – E 4
C17	engine compartment, engine, RH side, 3.0L Duratec–SE (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	78 – E 4
C17	engine compartment, engine, RH side – F67, 3.0L Duratec–SE (VE6)	78 – E 4
C17	engine compartment, engine, RH side, 3.0L Duratec–SE (VE6) – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	78 – E 4
C17	engine compartment, engine, RH side – 2.5L Duratec–VE (VE6)	
C17	engine compartment, engine, RH side – 2.5L Duratec–VE (VE6),automatic transmission	
C17	engine compartment, engine, RH side – 2.5L Duratec–VE (VE6),manual transmission	
C17	engine compartment, engine, RH side – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C17	engine compartment, engine, RH side	
C18	engine compartment, engine, RH side, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	69 – E 4
C18	engine compartment, engine, RH side – F67, 3.0L Duratec–ST (VE6)	69 – E 4
C18	engine compartment, engine, RH side, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	78 – E 4
C18	engine compartment, engine, RH side – 2.5L Duratec–VE (VE6)	
C18	engine compartment, engine, RH side – F40, 2.5L Duratec–VE (VE6)	
C18	engine compartment, engine, RH side – F67, 2.5L Duratec–VE (VE6)	
C19	engine compartment, front, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	

C19	engine compartment, front, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C19	engine compartment, front, RH side – Diesel engines	
C19	engine compartment, front, RH side – F30, F31, F32, F33, Diesel engines	
C20	engine compartment, engine, RH side – 3.0L Duratec–ST (VE6), as of 04/2004	69 – E 5
C20	engine compartment, engine, RH side – 3.0L Duratec–ST (VE6), before 04/2004	69 – E 5
C20	engine compartment, engine, RH side – F37, 3.0L Duratec–ST (VE6), as of 04/2004	69 – E 5
C20	engine compartment, engine, RH side – 3.0L Duratec–SE (VE6)	78 – E 5
C20	engine compartment, engine, RH side – 2.5L Duratec–VE (VE6)	
C20	engine compartment, engine, RH side – F37, 2.5L Duratec–VE (VE6)	
C20	engine compartment, engine, RH side – G106, 2.5L Duratec–VE (VE6)	
C28	engine compartment, front, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	4 – F 2
C28	engine compartment, front, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	4 – F 2
C28	engine compartment, front, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004	4 – F 2
C28	engine compartment, front, LH side – Fog lamps, with trailer socket, wagon, before 01/2004	4 – F 2
C28	engine compartment, front, LH side – Fog lamps, without trailer socket, 4–door model/5–door model	4 – F 2
C28	engine compartment, front, LH side – Fog lamps, without trailer socket, wagon	4 – F 2
C28	engine compartment, front, LH side – G104	4 – F 2
C28	engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	4 – F 2
C28	engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, wagon	4 – F 2
C28	engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	4 – F 2
C28	engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, wagon	4 – F 2
C28	engine compartment, front, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	6 – F 2
C28	engine compartment, front, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	6 – F 2
C28	engine compartment, front, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004	6 – F 2
C28	engine compartment, front, LH side – Fog lamps, with trailer socket, wagon, before 01/2004	6 – F 2
C28	engine compartment, front, LH side – Fog lamps, without trailer socket, 4–door model/5–door model	6 – F 2
C28	engine compartment, front, LH side – Fog lamps, without trailer socket, wagon	6 – F 2
C28	engine compartment, front, LH side – G104	6 – F 2
C28	engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	6 – F 2
C28	engine compartment, front, LH side – Light switch, Fog lamps, with trailer socket, wagon	6 – F 2
C28	engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	6 – F 2

C28	engine compartment, front, LH side – Light switch, Fog lamps, without trailer socket, wagon	6 – F 2
C29	cylinder head – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – D 5
C29	cylinder head – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C30	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	32 – D 1
C30	LH A–pillar – 1.8L Duratec–SCi (MI4)	32 – D 1
C30	LH A–pillar – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	32 – D 1
C30	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	32 – D 1
C30	LH A–pillar – 2.5L Duratec–VE (VE6)	32 – D 1
C30	LH A–pillar – 3.0L Duratec–SE (VE6)	32 – D 1
C30	LH A–pillar – 3.0L Duratec–ST (VE6)	32 – D 1
C30	LH A–pillar – Autolamps	32 – D 1
C30	LH A–pillar – Climate controlled front seats	32 – D 1
C30	LH A–pillar – F20, F21	32 – D 1
C30	LH A–pillar – F28, F29	32 – D 1
C30	LH A–pillar – F94	32 – D 1
C30	LH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	32 – D 1
C30	LH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	32 – D 1
C30	LH A–pillar – Fog lamps, with trailer socket, wagon, as of 01/2004	32 – D 1
C30	LH A–pillar – Fog lamps, with trailer socket, wagon, before 01/2004	32 – D 1
C30	LH A–pillar – Fog lamps, without trailer socket, 4–door model/5–door model	32 – D 1
C30	LH A–pillar – Fog lamps, without trailer socket, wagon	32 – D 1
C30	LH A–pillar – Headlamp Levelling, without high intensity discharge headlamps	32 – D 1
C30	LH A–pillar – Heated front seats	32 – D 1
C30	LH A–pillar – Ignition switch automatic transmission	32 – D 1
C30	LH A–pillar – Ignition switch manual transmission	32 – D 1
C30	LH A–pillar – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	32 – D 1
C30	LH A–pillar – Light switch, Fog lamps, with trailer socket, wagon	32 – D 1
C30	LH A–pillar – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	32 – D 1
C30	LH A–pillar – Light switch, Fog lamps, without trailer socket, wagon	32 – D 1
C30	LH A–pillar – Light switch, with autolamps	32 – D 1
C30	LH A–pillar – Light switch, with daytime running lamps, with high intensity discharge headlamps	32 – D 1
C30	LH A–pillar – Light switch, with daytime running lamps, without high intensity discharge headlamps	32 – D 1
C30	LH A–pillar – Light switch, without autolamps	32 – D 1
C30	LH A–pillar – Light switch, without daytime running lamps, without high intensity discharge headlamps	32 – D 1
C30	LH A–pillar – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	32 – D 1
C30	LH A–pillar – Parking Lamps, with trailer socket, wagon, with autolamps	32 – D 1
C30	LH A–pillar – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	32 – D 1

C30	LH A–pillar – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	32 – D 1
C30	LH A–pillar – Parking Lamps, without trailer socket, wagon, with autolamps	32 – D 1
C30	LH A–pillar – Parking Lamps, without trailer socket, wagon, without autolamps	32 – D 1
C30	LH A–pillar – with autolamps	32 – D 1
C30	LH A–pillar – with daytime running lamps	32 – D 1
C30	LH A–pillar – with high intensity discharge headlamps	32 – D 1
C30	LH A–pillar – with rain sensor	32 – D 1
C30	LH A–pillar – With rear window wiper, with headlamp washer	32 – D 1
C30	LH A–pillar – With rear window wiper, without headlamp washer	32 – D 1
C30	LH A–pillar – with variable intermittent wipe	32 – D 1
C30	LH A–pillar – without daytime running lamps, without autolamps	32 – D 1
C30	LH A–pillar – without high intensity discharge headlamps	32 – D 1
C30	LH A–pillar – Without rear window wiper, with headlamp washer	32 – D 1
C30	LH A–pillar – Without rear window wiper, without headlamp washer	32 – D 1
C30	LH A–pillar – without trailer socket, 4–door model/5–door model	32 – D 1
C30	LH A–pillar – without trailer socket, wagon	32 – D 1
C30	LH A–pillar	32 – D 1
C30	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	36 – B 2
C30	LH A–pillar – 1.8L Duratec–SCi (MI4)	36 – B 2
C30	LH A–pillar – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	36 – B 2
C30	LH A–pillar – 2.5L Duratec–VE (VE6)	36 – B 2
C30	LH A–pillar – 3.0L Duratec–SE (VE6)	36 – B 2
C30	LH A–pillar – 3.0L Duratec–ST (VE6)	36 – B 2
C30	LH A–pillar – Autolamps	36 – B 2
C30	LH A–pillar – Climate controlled front seats	36 – B 2
C30	LH A–pillar – F20, F21	36 – B 2
C30	LH A–pillar – F28, F29	36 – B 2
C30	LH A–pillar – F94	36 – B 2
C30	LH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	36 – B 2
C30	LH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	36 – B 2
C30	LH A–pillar – Fog lamps, with trailer socket, wagon, as of 01/2004	36 – B 2
C30	LH A–pillar – Fog lamps, with trailer socket, wagon, before 01/2004	36 – B 2
C30	LH A–pillar – Fog lamps, without trailer socket, wagon	36 – B 2
C30	LH A–pillar – Headlamp Levelling, without high intensity discharge headlamps	36 – B 2
C30	LH A–pillar – Heated front seats	36 – B 2
C30	LH A–pillar – Ignition switch automatic transmission	36 – B 2
C30	LH A–pillar – Ignition switch manual transmission	36 – B 2
C30	LH A–pillar – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	36 – B 2
C30	LH A–pillar – Light switch, Fog lamps, with trailer socket, wagon	36 – B 2
C30	LH A–pillar – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	36 – B 2
C30	LH A–pillar – Light switch, Fog lamps, without trailer socket, wagon	36 – B 2
C30	LH A–pillar – Light switch, with autolamps	36 – B 2
C30	LH A–pillar – Light switch, with daytime running lamps, with high intensity discharge headlamps	36 – B 2

C30	LH A–pillar – Light switch, with daytime running lamps, without high intensity discharge headlamps	36 – B 2
C30	LH A–pillar – Light switch, without autolamps	36 – B 2
C30	LH A–pillar – Light switch, without daytime running lamps, without high intensity discharge headlamps	36 – B 2
C30	LH A–pillar – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	36 – B 2
C30	LH A–pillar – Parking Lamps, with trailer socket, wagon, with autolamps	36 – B 2
C30	LH A–pillar – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	36 – B 2
C30	LH A–pillar – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	36 – B 2
C30	LH A–pillar – Parking Lamps, without trailer socket, wagon, with autolamps	36 – B 2
C30	LH A–pillar – Parking Lamps, without trailer socket, wagon, without autolamps	36 – B 2
C30	LH A–pillar – with autolamps	36 – B 2
C30	LH A–pillar – with daytime running lamps	36 – B 2
C30	LH A–pillar – with high intensity discharge headlamps	36 – B 2
C30	LH A–pillar – with rain sensor	36 – B 2
C30	LH A–pillar – With rear window wiper, with headlamp washer	36 – B 2
C30	LH A–pillar – With rear window wiper, without headlamp washer	36 – B 2
C30	LH A–pillar – with variable intermittent wipe	36 – B 2
C30	LH A–pillar – without daytime running lamps, without autolamps	36 – B 2
C30	LH A–pillar – without high intensity discharge headlamps	36 – B 2
C30	LH A–pillar – Without rear window wiper, with headlamp washer	36 – B 2
C30	LH A–pillar – Without rear window wiper, without headlamp washer	36 – B 2
C30	LH A–pillar – without trailer socket, 4–door model/5–door model	36 – B 2
C30	LH A–pillar – without trailer socket, wagon	36 – B 2
C30	LH A–pillar	36 – B 2
C31	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	32 – C 2
C31	LH A–pillar – 1.8/2.0L Duratec–HE (MI4), automatic transmission	32 – C 2
C31	LH A–pillar – 1.8L Duratec–SCi (MI4)	32 – C 2
C31	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	32 – C 2
C31	LH A–pillar – 2.5L Duratec–VE (VE6)	32 – C 2
C31	LH A–pillar – 3.0L Duratec–SE (VE6)	32 – C 2
C31	LH A–pillar – 3.0L Duratec–ST (VE6), as of 04/2004	32 – C 2
C31	LH A–pillar – 3.0L Duratec–ST (VE6), before 04/2004	32 – C 2
C31	LH A–pillar – 4–speed automatic transmission (CD4E)	32 – C 2
C31	LH A–pillar – 4–speed automatic transmission (CD4E), 4–door model/5–door model	32 – C 2
C31	LH A–pillar – 4–speed automatic transmission (CD4E), wagon	32 – C 2
C31	LH A–pillar – 5–speed automatic transmission (5F31J)	32 – C 2
C31	LH A–pillar – 5–speed automatic transmission (5F31J), 4–door model/5–door model	32 – C 2
C31	LH A–pillar – 5–speed automatic transmission (5F31J), wagon	32 – C 2
C31	LH A–pillar – Auto–dimming interior mirror	32 – C 2
C31	LH A–pillar – before 08/2004	32 – C 2
C31	LH A–pillar – Bosch 8.0	32 – C 2
C31	LH A–pillar – Bosch, 4–door model/5–door model	32 – C 2
C31	LH A–pillar – Bosch, wagon	32 – C 2

C31	LH A–pillar – Climate controlled front seats	32 – C 2
C31	LH A–pillar – Diesel engines	32 – C 2
C31	LH A–pillar – DVD navigation system with touch screen	32 – C 2
C31	LH A–pillar – Headlamp Levelling, with high intensity discharge headlamps	32 – C 2
C31	LH A–pillar – Heated front seats	32 – C 2
C31	LH A–pillar – Petrol engines	32 – C 2
C31	LH A–pillar – Pre–equipment pack, Diesel engines	32 – C 2
C31	LH A–pillar – Pre–equipment pack, Petrol engines	32 – C 2
C31	LH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	32 – C 2
C31	LH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	32 – C 2
C31	LH A–pillar – Reversing lamps, with trailer socket, wagon, as of 01/2004	32 – C 2
C31	LH A–pillar – Reversing lamps, with trailer socket, wagon, before 01/2004	32 – C 2
C31	LH A–pillar – Reversing lamps, without trailer socket, 4–door model/5–door model	32 – C 2
C31	LH A–pillar – Reversing lamps, without trailer socket, wagon	32 – C 2
C31	LH A–pillar – Valeo, 4–door model/5–door model, as of 01/2004	32 – C 2
C31	LH A–pillar – Valeo, 4–door model/5–door model, before 01/2004	32 – C 2
C31	LH A–pillar – Valeo, wagon, as of 01/2004	32 – C 2
C31	LH A–pillar – Valeo, wagon, before 01/2004	32 – C 2
C31	LH A–pillar	32 – C 2
C31	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	36 – B 5
C31	LH A–pillar – 1.8/2.0L Duratec–HE (MI4), automatic transmission	36 – B 5
C31	LH A–pillar – 1.8L Duratec–SCi (MI4)	36 – B 5
C31	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	36 – B 5
C31	LH A–pillar – 2.5L Duratec–VE (VE6)	36 – B 5
C31	LH A–pillar – 3.0L Duratec–SE (VE6)	36 – B 5
C31	LH A–pillar – 3.0L Duratec–ST (VE6), as of 04/2004	36 – B 5
C31	LH A–pillar – 3.0L Duratec–ST (VE6), before 04/2004	36 – B 5
C31	LH A–pillar – 4–speed automatic transmission (CD4E)	36 – B 5
C31	LH A–pillar – 4–speed automatic transmission (CD4E), 4–door model/5–door model	36 – B 5
C31	LH A–pillar – 4–speed automatic transmission (CD4E), wagon	36 – B 5
C31	LH A–pillar – 5–speed automatic transmission (5F31J)	36 – B 5
C31	LH A–pillar – 5–speed automatic transmission (5F31J), 4–door model/5–door model	36 – B 5
C31	LH A–pillar – 5–speed automatic transmission (5F31J), wagon	36 – B 5
C31	LH A–pillar – Auto–dimming interior mirror	36 – B 5
C31	LH A–pillar – before 08/2004	36 – B 5
C31	LH A–pillar – Bosch 8.0	36 – B 5
C31	LH A–pillar – Bosch, 4–door model/5–door model	36 – B 5
C31	LH A–pillar – Bosch, wagon	36 – B 5
C31	LH A–pillar – Climate controlled front seats	36 – B 5
C31	LH A–pillar – Diesel engines	36 – B 5
C31	LH A–pillar – DVD navigation system with touch screen	36 – B 5
C31	LH A–pillar – Headlamp Levelling, with high intensity discharge headlamps	36 – B 5
C31	LH A–pillar – Heated front seats	36 – B 5
C31	LH A–pillar – Petrol engines	36 – B 5
C31	LH A–pillar – Pre–equipment pack, Diesel engines	36 – B 5

C31	LH A–pillar – Pre–equipment pack, Petrol engines	36 – B 5
C31	LH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	36 – B 5
C31	LH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	36 – B 5
C31	LH A–pillar – Reversing lamps, with trailer socket, wagon, as of 01/2004	36 – B 5
C31	LH A–pillar – Reversing lamps, with trailer socket, wagon, before 01/2004	36 – B 5
C31	LH A–pillar – Reversing lamps, without trailer socket, 4–door model/5–door model	36 – B 5
C31	LH A–pillar – Reversing lamps, without trailer socket, wagon	36 – B 5
C31	LH A–pillar – Valeo, 4–door model/5–door model, as of 01/2004	36 – B 5
C31	LH A–pillar – Valeo, 4–door model/5–door model, before 01/2004	36 – B 5
C31	LH A–pillar – Valeo, wagon, as of 01/2004	36 – B 5
C31	LH A–pillar – Valeo, wagon, before 01/2004	36 – B 5
C31	LH A–pillar	36 – B 5
C32	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	32 – C 2
C32	LH A–pillar – 1.8/2.0L Duratec–HE (MI4), automatic transmission	32 – C 2
C32	LH A–pillar – 1.8/2.0L Duratec–HE (MI4), manual transmission	32 – C 2
C32	LH A–pillar – 1.8L Duratec–SCi (MI4)	32 – C 2
C32	LH A–pillar – 1.8L Duratec–SCi (MI4), as of 04/2004	32 – C 2
C32	LH A–pillar – 1.8L Duratec–SCi (MI4), before 04/2004	32 – C 2
C32	LH A–pillar – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	32 – C 2
C32	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	32 – C 2
C32	LH A–pillar – 2.5L Duratec–VE (VE6)	32 – C 2
C32	LH A–pillar – 3.0L Duratec–SE (VE6)	32 – C 2
C32	LH A–pillar, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	32 – C 2
C32	LH A–pillar – 3.0L Duratec–ST (VE6)	32 – C 2
C32	LH A–pillar – 5–speed automatic transmission (5F31J), Diesel engines	32 – C 2
C32	LH A–pillar – 5–speed automatic transmission (5F31J), Petrol engines	32 – C 2
C32	LH A–pillar – as of 08/2004	32 – C 2
C32	LH A–pillar – before 08/2004	32 – C 2
C32	LH A–pillar – Bosch 8.0	32 – C 2
C32	LH A–pillar – Data link connector, pin 7	32 – C 2
C32	LH A–pillar – Data link connector, pins 2 and 10, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	32 – C 2
C32	LH A–pillar – Data link connector, pins 2, 10 and 13, Diesel engines, except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel	32 – C 2
C32	LH A–pillar – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4)	32 – C 2
C32	LH A–pillar – Diesel engines	32 – C 2
C32	LH A–pillar – Diesel engines, with fuel fired heater	32 – C 2
C32	LH A–pillar – Diesel engines, with fuel fired heater, as of 08/2004	32 – C 2
C32	LH A–pillar – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	32 – C 2
C32	LH A–pillar – F11, F13, F15	32 – C 2
C32	LH A–pillar – Heated windshield	32 – C 2
C32	LH A–pillar – Petrol engines	32 – C 2
C32	LH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4)	32 – C 2
C32	LH A–pillar – With high intensity discharge headlamps	32 – C 2
C32	LH A–pillar	32 – C 2

C32	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	36 – A 3
C32	LH A–pillar – 1.8/2.0L Duratec–HE (MI4), automatic transmission	36 – A 3
C32	LH A–pillar – 1.8/2.0L Duratec–HE (MI4), manual transmission	36 – A 3
C32	LH A–pillar – 1.8L Duratec–SCi (MI4)	36 – A 3
C32	LH A–pillar – 1.8L Duratec–SCi (MI4), as of 04/2004	36 – A 3
C32	LH A–pillar – 1.8L Duratec–SCi (MI4), before 04/2004	36 – A 3
C32	LH A–pillar – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	36 – A 3
C32	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	36 – A 3
C32	LH A–pillar – 2.5L Duratec–VE (VE6)	36 – A 3
C32	LH A–pillar – 3.0L Duratec–SE (VE6)	36 – A 3
C32	LH A–pillar, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	36 – A 3
C32	LH A–pillar – 3.0L Duratec–ST (VE6)	36 – A 3
C32	LH A–pillar – 5–speed automatic transmission (5F31J), Diesel engines	36 – A 3
C32	LH A–pillar – 5–speed automatic transmission (5F31J), Petrol engines	36 – A 3
C32	LH A–pillar – as of 08/2004	36 – A 3
C32	LH A–pillar – before 08/2004	36 – A 3
C32	LH A–pillar – Bosch 8.0	36 – A 3
C32	LH A–pillar – Data link connector, pin 7	36 – A 3
C32	LH A–pillar – Data link connector, pins 2 and 10, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	36 – A 3
C32	LH A–pillar – Data link connector, pins 2, 10 and 13, Diesel engines, except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel	36 – A 3
C32	LH A–pillar – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4)	36 – A 3
C32	LH A–pillar – Diesel engines	36 – A 3
C32	LH A–pillar – Diesel engines, with fuel fired heater	36 – A 3
C32	LH A–pillar – Diesel engines, with fuel fired heater, as of 08/2004	36 – A 3
C32	LH A–pillar – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	36 – A 3
C32	LH A–pillar – F11, F13, F15	36 – A 3
C32	LH A–pillar – Heated windshield	36 – A 3
C32	LH A–pillar – Petrol engines	36 – A 3
C32	LH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4)	36 – A 3
C32	LH A–pillar – With high intensity discharge headlamps	36 – A 3
C32	LH A–pillar	36 – A 3
C33	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	36 – B 4
C33	LH A–pillar – 1.8L Duratec–SCi (MI4)	36 – B 4
C33	LH A–pillar – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	36 – B 4
C33	LH A–pillar – 2.0L Duratorq–TDCi (Puma) Diesel	36 – B 4
C33	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel	36 – B 4
C33	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	36 – B 4
C33	LH A–pillar – 2.5L Duratec–VE (VE6)	36 – B 4
C33	LH A–pillar – 3.0L Duratec–SE (VE6)	36 – B 4
C33	LH A–pillar – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	36 – B 4
C33	LH A–pillar – 3.0L Duratec–ST (VE6)	36 – B 4
C33	LH A–pillar – 5–speed automatic transmission (5F31J), Diesel engines	36 – B 4
C33	LH A–pillar – 5–speed automatic transmission (5F31J), Petrol engines	36 – B 4
C33	LH A–pillar – as of 08/2004	36 – B 4

C33	LH A–pillar – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	36 – B 4
C33	LH A–pillar – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	36 – B 4
C33	LH A–pillar – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	36 – B 4
C33	LH A–pillar – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	36 – B 4
C33	LH A–pillar – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	36 – B 4
C33	LH A–pillar – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	36 – B 4
C33	LH A–pillar – Diesel engines	36 – B 4
C33	LH A–pillar – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	36 – B 4
C33	LH A–pillar – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	36 – B 4
C33	LH A–pillar – F88, F89, with autolamps	36 – B 4
C33	LH A–pillar – F88, F89, without autolamps	36 – B 4
C33	LH A–pillar – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	36 – B 4
C33	LH A–pillar – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	36 – B 4
C33	LH A–pillar – Light switch, with daytime running lamps, without high intensity discharge headlamps	36 – B 4
C33	LH A–pillar – Light switch, without daytime running lamps, without high intensity discharge headlamps	36 – B 4
C33	LH A–pillar – Petrol engines	36 – B 4
C33	LH A–pillar – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	36 – B 4
C33	LH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	36 – B 4
C33	LH A–pillar – Pre–equipment pack, Diesel engines	36 – B 4
C33	LH A–pillar – Pre–equipment pack, Petrol engines	36 – B 4
C33	LH A–pillar – Without high intensity discharge headlamps	36 – B 4
C33	LH A–pillar	36 – B 4
C34	behind dash panel – 4–speed automatic transmission (CD4E), 4–door model/5–door model	
C34	behind dash panel – 4–speed automatic transmission (CD4E), wagon	
C34	behind dash panel – 5–speed automatic transmission (5F31J), 4–door model/5–door model	
C34	behind dash panel – 5–speed automatic transmission (5F31J), wagon	
C34	behind dash panel – Data link connector, pins 3 and 11, with external CD changer and video system	
C34	behind dash panel – DVD navigation system with touch screen	
C34	behind dash panel – F69, with external CD changer and/or video system	
C34	behind dash panel – F71, except DVD navigation system with touch screen, without video system	
C34	behind dash panel – F71, with DVD navigation system with touch screen	
C34	behind dash panel – F72, with external CD changer and/or video system	
C34	behind dash panel – G201, with DVD navigation system with touch screen, before 04/2004	

C34 behind dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C34 behind dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C34 behind dash panel – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
C34 behind dash panel – Reversing lamps, with trailer socket, wagon, before 01/2004
C34 behind dash panel – Reversing lamps, without trailer socket, 4–door model/5–door model
C34 behind dash panel – Reversing lamps, without trailer socket, wagon
C36 under centre console – Data link connector, pins 3 and 11, with external CD changer or video system
C36 under centre console – F71, except DVD navigation system with touch screen, with video system
C36 under centre console – G201, except DVD navigation system with touch screen, as of 04/2004
C36 under centre console – G201, except DVD navigation system with touch screen, before 04/2004
C36 under centre console – with external CD changer
C36 under centre console – without DVD navigation system with touch screen
C36 under centre console
C38 under dash panel – 1.8/2.0L Duratec–HE (MI4) . . . . . 27 – F 3
C38 under dash panel – 1.8L Duratec–SCi (MI4) . . . . . 27 – F 3
C38 under dash panel – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 27 – F 3
C38 under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 27 – F 3
C38 under dash panel – 2.5L Duratec–VE (VE6) . . . . . 27 – F 3
C38 under dash panel – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 27 – F 3
C38 under dash panel – 3.0L Duratec–ST (VE6) . . . . . 27 – F 3
C38 under dash panel – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 27 – F 3
C38 under dash panel – 4–speed automatic transmission (CD4E), wagon . . . . . 27 – F 3
C38 under dash panel – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 27 – F 3
C38 under dash panel – 5–speed automatic transmission (5F31J), wagon . . . . . 27 – F 3
C38 under dash panel – Bluetooth voice control . . . . . 27 – F 3
C38 under dash panel – Data link connector, pins 3 and 11, with external CD changer and video system . . . . . 27 – F 3
C38 under dash panel – Data link connector, pins 3 and 11, with external CD changer or video system . . . . . 27 – F 3
C38 under dash panel – Data link connector, pins 3 and 11, with voice control . . . . . 27 – F 3
C38 under dash panel – Diesel engines . . . . . 27 – F 3
C38 under dash panel – DVD navigation system with touch screen . . . . . 27 – F 3
C38 under dash panel – DVD navigation system with touch screen – with video system . 27 – F 3
C38 under dash panel – F69, with external CD changer and/or video system . . . . . 27 – F 3
C38 under dash panel – F71, Bluetooth voice control . . . . . 27 – F 3
C38 under dash panel – F71, except DVD navigation system with touch screen, with video system . . . . . 27 – F 3
C38 under dash panel – F71, except DVD navigation system with touch screen, without video system . . . . . 27 – F 3

C38	under dash panel – F71, with DVD navigation system with touch screen	27 – F 3
C38	under dash panel – F72, with external CD changer and/or video system	27 – F 3
C38	under dash panel – Petrol engines	27 – F 3
C38	under dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	27 – F 3
C38	under dash panel – Pre–equipment pack	27 – F 3
C38	under dash panel – Pre–equipment pack, Diesel engines	27 – F 3
C38	under dash panel – Pre–equipment pack, Petrol engines	27 – F 3
C38	under dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	27 – F 3
C38	under dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	27 – F 3
C38	under dash panel – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	27 – F 3
C38	under dash panel – Reversing lamps, with trailer socket, wagon, before 01/2004	27 – F 3
C38	under dash panel – Reversing lamps, without trailer socket, 4–door model/5–door model	27 – F 3
C38	under dash panel – Reversing lamps, without trailer socket, wagon	27 – F 3
C38	under dash panel – with DVD navigation system with touch screen	27 – F 3
C38	under dash panel – with external CD changer	27 – F 3
C38	under dash panel – with external CD changer and/or video system	27 – F 3
C38	under dash panel – with video system	27 – F 3
C38	under dash panel – without DVD navigation system with touch screen	27 – F 3
C38	under dash panel – without external CD changer and video system	27 – F 3
C38	under dash panel	27 – F 3
C40	centre console – as of 08/2004	
C40	centre console – before 08/2004	
C40	centre console – Cigar lighter	
C40	centre console – F68	
C40	centre console – G204, as of 04/2004	
C40	centre console – G204, before 04/2004	
C40	centre console – with heated rear seats	
C40	centre console	
C41	under centre console – F81	
C41	under centre console – with heated rear seats	
C50	LH A–pillar – F60	16 – E 3
C50	LH A–pillar – F61	16 – E 3
C50	LH A–pillar – F75, 5–speed automatic transmission (5F31J)	16 – E 3
C50	LH A–pillar – F75, except 5–speed automatic transmission (5F31J)	16 – E 3
C50	LH A–pillar – F91, LHD	16 – E 3
C50	LH A–pillar – F98	16 – E 3
C50	LH A–pillar – front and rear power windows, Driver side front	16 – E 3
C50	LH A–pillar – front and rear power windows, Passenger side front	16 – E 3
C50	LH A–pillar – Front power windows, Driver side	16 – E 3
C50	LH A–pillar – G200, LHD	16 – E 3
C50	LH A–pillar – Heated rear window, Heated exterior mirrors	16 – E 3
C50	LH A–pillar – LHD	16 – E 3
C50	LH A–pillar	16 – E 3
C50	RH A–pillar – F60	17 – E 4
C50	RH A–pillar – F61	17 – E 4

C50	RH A–pillar – F75, 5–speed automatic transmission (5F31J)	17 – E 4
C50	RH A–pillar – F75, except 5–speed automatic transmission (5F31J)	17 – E 4
C50	RH A–pillar – F91, RHD	17 – E 4
C50	RH A–pillar – F98	17 – E 4
C50	RH A–pillar – front and rear power windows, Driver side front	17 – E 4
C50	RH A–pillar – front and rear power windows, Passenger side front	17 – E 4
C50	RH A–pillar – Front power windows, Driver side	17 – E 4
C50	RH A–pillar – G205, RHD	17 – E 4
C50	RH A–pillar – Heated rear window, Heated exterior mirrors	17 – E 4
C50	RH A–pillar – RHD	17 – E 4
C50	RH A–pillar	17 – E 4
C51	LH B–pillar, centre – F60	45 – D 4
C51	LH B–pillar, centre – F91, LHD	45 – D 4
C51	LH B–pillar, centre – F91, RHD	45 – D 4
C51	LH B–pillar, centre – front and rear power windows, Driver side front	45 – D 4
C51	LH B–pillar, centre – front and rear power windows, LH rear door	45 – D 4
C51	LH B–pillar, centre – G200	45 – D 4
C51	LH B–pillar, centre – LHD	45 – D 4
C51	LH B–pillar, centre – RHD	45 – D 4
C51	LH B–pillar, centre	45 – D 4
C52	LH A–pillar – F60	16 – E 3
C52	LH A–pillar – F61	16 – E 3
C52	LH A–pillar – F91, RHD	16 – E 3
C52	LH A–pillar – F98	16 – E 3
C52	LH A–pillar – F99, 4–door model/5–door model	16 – E 3
C52	LH A–pillar – F99, wagon	16 – E 3
C52	LH A–pillar – front and rear power windows, Passenger side front	16 – E 3
C52	LH A–pillar – Front power windows, Driver side	16 – E 3
C52	LH A–pillar – Front power windows, Passenger side	16 – E 3
C52	LH A–pillar – G200, RHD	16 – E 3
C52	LH A–pillar – Heated rear window, Heated exterior mirrors	16 – E 3
C52	LH A–pillar – RHD	16 – E 3
C52	LH A–pillar – With power folding mirrors	16 – E 3
C52	LH A–pillar	16 – E 3
C52	RH A–pillar – F60	17 – E 4
C52	RH A–pillar – F61	17 – E 4
C52	RH A–pillar – F91, LHD	17 – E 4
C52	RH A–pillar – F98	17 – E 4
C52	RH A–pillar – F99, 4–door model/5–door model	17 – E 4
C52	RH A–pillar – F99, wagon	17 – E 4
C52	RH A–pillar – front and rear power windows, Passenger side front	17 – E 4
C52	RH A–pillar – Front power windows, Driver side	17 – E 4
C52	RH A–pillar – Front power windows, Passenger side	17 – E 4
C52	RH A–pillar – G205, LHD	17 – E 4
C52	RH A–pillar – Heated rear window, Heated exterior mirrors	17 – E 4
C52	RH A–pillar – LHD	17 – E 4
C52	RH A–pillar – With power folding mirrors	17 – E 4
C52	RH A–pillar	17 – E 4
C53	dash panel, centre – DVD navigation system with touch screen	

C53	dash panel, centre – F71, except DVD navigation system with touch screen, with video system	
C53	dash panel, centre – F71, with DVD navigation system with touch screen	
C53	dash panel, centre – G201, except DVD navigation system with touch screen, as of 04/2004	
C53	dash panel, centre – G201, except DVD navigation system with touch screen, before 04/2004	
C53	dash panel, centre – G201, with DVD navigation system with touch screen, before 04/2004	
C53	dash panel, centre – with DVD navigation system with touch screen	
C53	dash panel, centre – without DVD navigation system with touch screen	
C54	LH A–pillar, centre – F99, 4–door model/5–door model	16 – E 4
C54	LH A–pillar, centre – F99, wagon	16 – E 4
C54	LH A–pillar, centre – front and rear power windows, Driver side front	16 – E 4
C54	LH A–pillar, centre – front and rear power windows, LH rear door	16 – E 4
C54	LH A–pillar, centre – front and rear power windows, RH rear door	16 – E 4
C54	LH A–pillar, centre – LHD	16 – E 4
C54	LH A–pillar, centre – With power folding mirrors	16 – E 4
C54	LH A–pillar, centre	16 – E 4
C54	RH A–pillar, centre – F99, 4–door model/5–door model	17 – E 4
C54	RH A–pillar, centre – F99, wagon	17 – E 4
C54	RH A–pillar, centre – front and rear power windows, Driver side front	17 – E 4
C54	RH A–pillar, centre – front and rear power windows, LH rear door	17 – E 4
C54	RH A–pillar, centre – front and rear power windows, RH rear door	17 – E 4
C54	RH A–pillar, centre – RHD	17 – E 4
C54	RH A–pillar, centre – With power folding mirrors	17 – E 4
C54	RH A–pillar, centre	17 – E 4
C56	RH B–pillar, centre – F61	46 – B 4
C56	RH B–pillar, centre – F91, LHD	46 – B 4
C56	RH B–pillar, centre – F91, RHD	46 – B 4
C56	RH B–pillar, centre – front and rear power windows, Driver side front	46 – B 4
C56	RH B–pillar, centre – front and rear power windows, RH rear door	46 – B 4
C56	RH B–pillar, centre – G205	46 – B 4
C56	RH B–pillar, centre – LHD	46 – B 4
C56	RH B–pillar, centre – RHD	46 – B 4
C56	RH B–pillar, centre	46 – B 4
C58	rear seats – F83	
C58	rear seats – G200	
C58	rear seats – G300	
C58	rear seats – with heated rear seats	
C59	rear seats – F83	
C59	rear seats – G205	
C59	rear seats – with heated rear seats	
C60b	under driver's seat – Side air bag	41 – E 5
C60b	under driver's seat – Side air bag	43 – C 5
C60c	under driver's seat	41 – E 5
C60c	under driver's seat	43 – B 5
C60d	under driver's seat – Climate controlled front seats	41 – D 5
C60d	under driver's seat – G200	41 – D 5
C60d	under driver's seat – G205	41 – D 5

C60d	under driver's seat – Heated front seats	41 – D 5
C60d	under driver's seat – Climate controlled front seats	43 – B 5
C60d	under driver's seat – G200	43 – B 5
C60d	under driver's seat – G205	43 – B 5
C60d	under driver's seat – Heated front seats	43 – B 5
C60e	under driver's seat – G205	41 – E 4
C60e	under driver's seat – Side air bag	41 – E 4
C60e	under driver's seat – G205	43 – C 4
C60e	under driver's seat – Side air bag	43 – C 4
C60f	under driver's seat – G202	41 – E 4
C60f	under driver's seat	41 – E 4
C60f	under driver's seat – G202	43 – C 4
C60f	under driver's seat	43 – C 4
C60h	under driver's seat – Climate controlled front seats	41 – D 4
C60h	under driver's seat – G200	41 – D 4
C60h	under driver's seat – G205	41 – D 4
C60h	under driver's seat – Heated front seats	41 – D 4
C60h	under driver's seat – Climate controlled front seats	43 – B 4
C60h	under driver's seat – G200	43 – B 4
C60h	under driver's seat – G205	43 – B 4
C60h	under driver's seat – Heated front seats	43 – B 4
C60	under driver's seat – 2–way power seats	41 – D 2
C60	under driver's seat – 8–way power seats	41 – D 2
C60	under driver's seat – Climate controlled front seats	41 – D 2
C60	under driver's seat – F65, F66	41 – D 2
C60	under driver's seat – G200	41 – D 2
C60	under driver's seat – G202	41 – D 2
C60	under driver's seat – G205	41 – D 2
C60	under driver's seat – Heated front seats	41 – D 2
C60	under driver's seat – Side air bag	41 – D 2
C60	under driver's seat	41 – D 2
C60	under driver's seat – 2–way power seats	43 – D 1
C60	under driver's seat – 8–way power seats	43 – D 1
C60	under driver's seat – Climate controlled front seats	43 – D 1
C60	under driver's seat – F65, F66	43 – D 1
C60	under driver's seat – G200	43 – D 1
C60	under driver's seat – G202	43 – D 1
C60	under driver's seat – G205	43 – D 1
C60	under driver's seat – Heated front seats	43 – D 1
C60	under driver's seat – Side air bag	43 – D 1
C60	under driver's seat	43 – D 1
C61b	under passenger's seat – Side air bag	42 – C 5
C61b	under passenger's seat – Side air bag	44 – E 5
C61c	under passenger's seat	42 – B 5
C61c	under passenger's seat	44 – E 5
C61d	under passenger's seat – Climate controlled front seats	42 – B 5
C61d	under passenger's seat – G200	42 – B 5
C61d	under passenger's seat – G205	42 – B 5
C61d	under passenger's seat – Heated front seats	42 – B 5
C61d	under passenger's seat – Climate controlled front seats	44 – D 5

C61d	under passenger's seat – G200	44 – D 5
C61d	under passenger's seat – G205	44 – D 5
C61d	under passenger's seat – Heated front seats	44 – D 5
C61e	under passenger's seat – G205	42 – C 4
C61e	under passenger's seat – Side air bag	42 – C 4
C61e	under passenger's seat – G205	44 – E 4
C61e	under passenger's seat – Side air bag	44 – E 4
C61h	under passenger's seat – Climate controlled front seats	42 – B 4
C61h	under passenger's seat – G200	42 – B 4
C61h	under passenger's seat – G205	42 – B 4
C61h	under passenger's seat – Heated front seats	42 – B 4
C61h	under passenger's seat – Climate controlled front seats	44 – D 4
C61h	under passenger's seat – G200	44 – D 4
C61h	under passenger's seat – G205	44 – D 4
C61h	under passenger's seat – Heated front seats	44 – D 4
C61	under passenger's seat – 2–way power seats	42 – D 1
C61	under passenger's seat – 8–way power seats	42 – D 1
C61	under passenger's seat – Climate controlled front seats	42 – D 1
C61	under passenger's seat – F65, F66	42 – D 1
C61	under passenger's seat – G200	42 – D 1
C61	under passenger's seat – G205	42 – D 1
C61	under passenger's seat – Heated front seats	42 – D 1
C61	under passenger's seat – Side air bag	42 – D 1
C61	under passenger's seat	42 – D 1
C61	under passenger's seat – 2–way power seats	44 – C 1
C61	under passenger's seat – 8–way power seats	44 – C 1
C61	under passenger's seat – Climate controlled front seats	44 – C 1
C61	under passenger's seat – F65, F66	44 – C 1
C61	under passenger's seat – G200	44 – C 1
C61	under passenger's seat – G205	44 – C 1
C61	under passenger's seat – Heated front seats	44 – C 1
C61	under passenger's seat – Side air bag	44 – C 1
C61	under passenger's seat	44 – C 1
C64	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	16 – E 5
C64	LH A–pillar – 1.8L Duratec–SCi (MI4)	16 – E 5
C64	LH A–pillar – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	16 – E 5
C64	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	16 – E 5
C64	LH A–pillar – 2.5L Duratec–VE (VE6)	16 – E 5
C64	LH A–pillar – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	16 – E 5
C64	LH A–pillar – 3.0L Duratec–ST (VE6)	16 – E 5
C64	LH A–pillar – Auto–dimming interior mirror	16 – E 5
C64	LH A–pillar – Autolamps	16 – E 5
C64	LH A–pillar – Diesel engines	16 – E 5
C64	LH A–pillar – F73	16 – E 5
C64	LH A–pillar – F91	16 – E 5
C64	LH A–pillar – F99, 4–door model/5–door model	16 – E 5
C64	LH A–pillar – F99, wagon	16 – E 5
C64	LH A–pillar – front and rear power windows, Passenger side front	16 – E 5
C64	LH A–pillar – G200	16 – E 5

C64	LH A–pillar – G202	16 – E 5
C64	LH A–pillar – Petrol engines	16 – E 5
C64	LH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	16 – E 5
C64	LH A–pillar – Pre–equipment pack, Diesel engines	16 – E 5
C64	LH A–pillar – Pre–equipment pack, Petrol engines	16 – E 5
C64	LH A–pillar – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	16 – E 5
C64	LH A–pillar – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	16 – E 5
C64	LH A–pillar – Stop Lamps, without trailer socket, 4–door model/5–door model	16 – E 5
C64	LH A–pillar – with rain sensor	16 – E 5
C64	LH A–pillar	16 – E 5
C65	rear seats – G200	
C65	rear seats – with heated rear seats	
C66	rear seats – G205	
C66	rear seats – with heated rear seats	
C67	centre console	
C68	in luggage compartment, LH side, behind luggage compartment lining – F90	47 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – F97	47 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Licence plate lamps	47 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	47 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	47 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, wagon, as of 01/2004	47 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, wagon, before 01/2004	47 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, without trailer socket, 4–door model/5–door model	47 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining	47 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – F90	49 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – F97	49 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Licence plate lamps	49 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	49 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	49 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, wagon, as of 01/2004	49 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, wagon, before 01/2004	49 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, without trailer socket, 4–door model/5–door model	49 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining – With rear window wiper	49 – C 4
C68	in luggage compartment, LH side, behind luggage compartment lining	49 – C 4

C68	in loading space, LH side, behind loading space lining – F90	51 – C 3
C68	in loading space, LH side, behind loading space lining – F97	51 – C 3
C68	in loading space, LH side, behind loading space lining – Licence plate lamps	51 – C 3
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	51 – C 3
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	51 – C 3
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, wagon, as of 01/2004	51 – C 3
C68	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, wagon, before 01/2004	51 – C 3
C68	in loading space, LH side, behind loading space lining – Stop Lamps, without trailer socket, wagon	51 – C 3
C68	in loading space, LH side, behind loading space lining – With rear window wiper	51 – C 3
C68	in loading space, LH side, behind loading space lining	51 – C 3
C69	in luggage compartment, LH side, behind luggage compartment lining – G300, 4–door model	
C69	in luggage compartment, LH side, behind luggage compartment lining – G300, 5–door model/wagon	
C69	in loading space, LH side, behind loading space lining – G300, 5–door model/wagon	
C69	in luggage compartment, LH side, behind luggage compartment lining – Heated rear window, Heated exterior mirrors	
C69	in loading space, LH side, behind loading space lining – Heated rear window, Heated exterior mirrors	
C69	in luggage compartment, LH side, behind luggage compartment lining	
C69	in loading space, LH side, behind loading space lining	
C70	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	32 – D 1
C70	LH A–pillar – 1.8L Duratec–SCi (MI4)	32 – D 1
C70	LH A–pillar – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	32 – D 1
C70	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	32 – D 1
C70	LH A–pillar – 2.5L Duratec–VE (VE6)	32 – D 1
C70	LH A–pillar – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	32 – D 1
C70	LH A–pillar – 3.0L Duratec–ST (VE6)	32 – D 1
C70	LH A–pillar – 4–speed automatic transmission (CD4E)	32 – D 1
C70	LH A–pillar – 5–speed automatic transmission (5F31J)	32 – D 1
C70	LH A–pillar – Autolamps	32 – D 1
C70	LH A–pillar – Bluetooth voice control	32 – D 1
C70	LH A–pillar – Diesel engines	32 – D 1
C70	LH A–pillar – DVD navigation system with touch screen	32 – D 1
C70	LH A–pillar – F63, 4–door model/5–door model	32 – D 1
C70	LH A–pillar – F63, wagon	32 – D 1
C70	LH A–pillar – F71, Bluetooth voice control	32 – D 1
C70	LH A–pillar – F71, except DVD navigation system with touch screen, with video system	32 – D 1
C70	LH A–pillar – F71, except DVD navigation system with touch screen, without video system	32 – D 1
C70	LH A–pillar – F71, with DVD navigation system with touch screen	32 – D 1

C70	LH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	32 – D 1
C70	LH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	32 – D 1
C70	LH A–pillar – Fog lamps, with trailer socket, wagon, as of 01/2004	32 – D 1
C70	LH A–pillar – Fog lamps, with trailer socket, wagon, before 01/2004	32 – D 1
C70	LH A–pillar – Fog lamps, without trailer socket, 4–door model/5–door model	32 – D 1
C70	LH A–pillar – Fog lamps, without trailer socket, wagon	32 – D 1
C70	LH A–pillar – LHD	32 – D 1
C70	LH A–pillar – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	32 – D 1
C70	LH A–pillar – Light switch, Fog lamps, with trailer socket, wagon	32 – D 1
C70	LH A–pillar – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	32 – D 1
C70	LH A–pillar – Light switch, Fog lamps, without trailer socket, wagon	32 – D 1
C70	LH A–pillar – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	32 – D 1
C70	LH A–pillar – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	32 – D 1
C70	LH A–pillar – Parking Lamps, with trailer socket, wagon, with autolamps	32 – D 1
C70	LH A–pillar – Parking Lamps, with trailer socket, wagon, without autolamps	32 – D 1
C70	LH A–pillar – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	32 – D 1
C70	LH A–pillar – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	32 – D 1
C70	LH A–pillar – Parking Lamps, without trailer socket, wagon, with autolamps	32 – D 1
C70	LH A–pillar – Parking Lamps, without trailer socket, wagon, without autolamps	32 – D 1
C70	LH A–pillar – Petrol engines	32 – D 1
C70	LH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	32 – D 1
C70	LH A–pillar – Pre–equipment pack, Diesel engines	32 – D 1
C70	LH A–pillar – Pre–equipment pack, Petrol engines	32 – D 1
C70	LH A–pillar – RHD	32 – D 1
C70	LH A–pillar – with autolamps	32 – D 1
C70	LH A–pillar – with daytime running lamps	32 – D 1
C70	LH A–pillar – with DVD navigation system with touch screen	32 – D 1
C70	LH A–pillar – with external CD changer	32 – D 1
C70	LH A–pillar – with rain sensor	32 – D 1
C70	LH A–pillar – with trailer socket, 4–door model/5–door model	32 – D 1
C70	LH A–pillar – with trailer socket, wagon	32 – D 1
C70	LH A–pillar – with video system	32 – D 1
C70	LH A–pillar – without daytime running lamps, without autolamps	32 – D 1
C70	LH A–pillar – without DVD navigation system with touch screen	32 – D 1
C70	LH A–pillar – without trailer socket, 4–door model/5–door model	32 – D 1
C70	LH A–pillar – without trailer socket, wagon	32 – D 1
C70	LH A–pillar	32 – D 1
C70	LH A–pillar – 1.8/2.0L Duratec–HE (MI4)	36 – B 2
C70	LH A–pillar – 1.8L Duratec–SCi (MI4)	36 – B 2
C70	LH A–pillar – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	36 – B 2

C70	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	36 – B 2
C70	LH A–pillar – 2.5L Duratec–VE (VE6)	36 – B 2
C70	LH A–pillar – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	36 – B 2
C70	LH A–pillar – 3.0L Duratec–ST (VE6)	36 – B 2
C70	LH A–pillar – 4–speed automatic transmission (CD4E)	36 – B 2
C70	LH A–pillar – 5–speed automatic transmission (5F31J)	36 – B 2
C70	LH A–pillar – Autolamps	36 – B 2
C70	LH A–pillar – Bluetooth voice control	36 – B 2
C70	LH A–pillar – Diesel engines	36 – B 2
C70	LH A–pillar – DVD navigation system with touch screen	36 – B 2
C70	LH A–pillar – F63, 4–door model/5–door model	36 – B 2
C70	LH A–pillar – F63, wagon	36 – B 2
C70	LH A–pillar – F71, Bluetooth voice control	36 – B 2
C70	LH A–pillar – F71, except DVD navigation system with touch screen, with video system	36 – B 2
C70	LH A–pillar – F71, except DVD navigation system with touch screen, without video system	36 – B 2
C70	LH A–pillar – F71, with DVD navigation system with touch screen	36 – B 2
C70	LH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	36 – B 2
C70	LH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	36 – B 2
C70	LH A–pillar – Fog lamps, with trailer socket, wagon, as of 01/2004	36 – B 2
C70	LH A–pillar – Fog lamps, with trailer socket, wagon, before 01/2004	36 – B 2
C70	LH A–pillar – Fog lamps, without trailer socket, 4–door model/5–door model	36 – B 2
C70	LH A–pillar – Fog lamps, without trailer socket, wagon	36 – B 2
C70	LH A–pillar – LHD	36 – B 2
C70	LH A–pillar – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	36 – B 2
C70	LH A–pillar – Light switch, Fog lamps, with trailer socket, wagon	36 – B 2
C70	LH A–pillar – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	36 – B 2
C70	LH A–pillar – Light switch, Fog lamps, without trailer socket, wagon	36 – B 2
C70	LH A–pillar – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	36 – B 2
C70	LH A–pillar – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	36 – B 2
C70	LH A–pillar – Parking Lamps, with trailer socket, wagon, with autolamps	36 – B 2
C70	LH A–pillar – Parking Lamps, with trailer socket, wagon, without autolamps	36 – B 2
C70	LH A–pillar – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	36 – B 2
C70	LH A–pillar – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	36 – B 2
C70	LH A–pillar – Parking Lamps, without trailer socket, wagon, with autolamps	36 – B 2
C70	LH A–pillar – Parking Lamps, without trailer socket, wagon, without autolamps	36 – B 2
C70	LH A–pillar – Petrol engines	36 – B 2
C70	LH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	36 – B 2
C70	LH A–pillar – Pre–equipment pack, Diesel engines	36 – B 2

C70	LH A–pillar – Pre–equipment pack, Petrol engines	36 – B 2
C70	LH A–pillar – RHD	36 – B 2
C70	LH A–pillar – with autolamps	36 – B 2
C70	LH A–pillar – with daytime running lamps	36 – B 2
C70	LH A–pillar – with DVD navigation system with touch screen	36 – B 2
C70	LH A–pillar – with external CD changer	36 – B 2
C70	LH A–pillar – with rain sensor	36 – B 2
C70	LH A–pillar – with trailer socket, 4–door model/5–door model	36 – B 2
C70	LH A–pillar – with trailer socket, wagon	36 – B 2
C70	LH A–pillar – with video system	36 – B 2
C70	LH A–pillar – without daytime running lamps, without autolamps	36 – B 2
C70	LH A–pillar – without DVD navigation system with touch screen	36 – B 2
C70	LH A–pillar – without trailer socket, 4–door model/5–door model	36 – B 2
C70	LH A–pillar – without trailer socket, wagon	36 – B 2
C70	LH A–pillar	36 – B 2
C71	in footwell, in front of RH A–pillar – 4–speed automatic transmission (CD4E)	17 – E 3
C71	in footwell, in front of RH A–pillar – 4–speed automatic transmission (CD4E), 4–door model/5–door model	17 – E 3
C71	in footwell, in front of RH A–pillar – 4–speed automatic transmission (CD4E), wagon	17 – E 3
C71	in footwell, in front of RH A–pillar – 5–speed automatic transmission (5F31J)	17 – E 3
C71	in footwell, in front of RH A–pillar – 5–speed automatic transmission (5F31J), 4–door model/5–door model	17 – E 3
C71	in footwell, in front of RH A–pillar – 5–speed automatic transmission (5F31J), wagon	17 – E 3
C71	in footwell, in front of RH A–pillar – Climate controlled front seats	17 – E 3
C71	in footwell, in front of RH A–pillar – Diesel engines	17 – E 3
C71	in footwell, in front of RH A–pillar – DVD navigation system with touch screen	17 – E 3
C71	in footwell, in front of RH A–pillar – F83	17 – E 3
C71	in footwell, in front of RH A–pillar – G202	17 – E 3
C71	in footwell, in front of RH A–pillar – G203	17 – E 3
C71	in footwell, in front of RH A–pillar – Heated front seats	17 – E 3
C71	in footwell, in front of RH A–pillar – Ignition switch automatic transmission	17 – E 3
C71	in footwell, in front of RH A–pillar – LHD	17 – E 3
C71	in footwell, in front of RH A–pillar – Petrol engines	17 – E 3
C71	in footwell, in front of RH A–pillar – Pre–equipment pack, Diesel engines	17 – E 3
C71	in footwell, in front of RH A–pillar – Pre–equipment pack, Petrol engines	17 – E 3
C71	in footwell, in front of RH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	17 – E 3
C71	in footwell, in front of RH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	17 – E 3
C71	in footwell, in front of RH A–pillar – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	17 – E 3
C71	in footwell, in front of RH A–pillar – Reversing lamps, with trailer socket, wagon, before 01/2004	17 – E 3
C71	in footwell, in front of RH A–pillar – Reversing lamps, without trailer socket, 4–door model/5–door model	17 – E 3
C71	in footwell, in front of RH A–pillar – Reversing lamps, without trailer socket, wagon	17 – E 3
C71	in footwell, in front of RH A–pillar – RHD	17 – E 3

C71	in footwell, in front of RH A–pillar – with heated rear seats	17 – E 3
C71	in footwell, in front of RH A–pillar	17 – E 3
C72	in luggage compartment, behind luggage compartment lining – Data link connector, pins 3 and 11, with external CD changer and video system	
C72	in luggage compartment, behind luggage compartment lining – DVD navigation system with touch screen	
C72	in loading space, behind loading space lining – DVD navigation system with touch screen	
C72	in luggage compartment, behind luggage compartment lining – F71, with DVD navigation system with touch screen	
C72	in loading space, behind loading space lining – F71, with DVD navigation system with touch screen	
C72	in luggage compartment, behind luggage compartment lining – G201, with DVD navigation system with touch screen, before 04/2004	
C76	in loading space, LH side, behind loading space lining – with side head air bags	51 – C 5
C76	in luggage compartment, LH side, behind luggage compartment lining – with side head air bags	
C77	in luggage compartment, RH side, behind luggage compartment lining – with side head air bags	
C77	in loading space, RH side, behind loading space lining – with side head air bags	
C78	in luggage compartment, RH side, behind luggage compartment lining – F74, as of 01/2004, F201, with 7–pin trailer socket	
C78	in loading space, RH side, behind loading space lining – F74, as of 01/2004, F200, 201, with 13–pin trailer socket	
C78	in luggage compartment, RH side, behind luggage compartment lining – F74, before 01/2004	
C78	in loading space, RH side, behind loading space lining – F74, before 01/2004	
C78	in luggage compartment, RH side, behind luggage compartment lining – F92, as of 01/2004, with trailer socket, with parking aid	
C78	in loading space, RH side, behind loading space lining – F92, as of 01/2004, with trailer socket, with parking aid	
C78	in luggage compartment, RH side, behind luggage compartment lining – F92, before 01/2004	
C78	in loading space, RH side, behind loading space lining – F92, before 01/2004	
C78	in luggage compartment, RH side, behind luggage compartment lining – Trailer socket, with 7–pin trailer socket, as of 01/2004	
C78	in loading space, RH side, behind loading space lining – Trailer socket, with 7–pin trailer socket, as of 01/2004	
C78	in luggage compartment, RH side, behind luggage compartment lining – Trailer socket, before 01/2004	
C78	in loading space, RH side, behind loading space lining – Trailer socket, before 01/2004	
C78	in loading space, RH side, behind loading space lining – Trailer socket, wagon, as of 01/2004	
C79	under centre console – Data link connector, pins 3 and 11, with external CD changer and video system	
C79	under centre console – Data link connector, pins 3 and 11, with external CD changer or video system	
C79	under centre console – DVD navigation system with touch screen	

C79	under centre console – DVD navigation system with touch screen – with video system	
C79	under centre console – F71, except DVD navigation system with touch screen, without video system	
C79	under centre console – F71, with DVD navigation system with touch screen	
C79	under centre console – G201, except DVD navigation system with touch screen, as of 04/2004	
C79	under centre console – G201, except DVD navigation system with touch screen, before 04/2004	
C79	under centre console – G201, with DVD navigation system with touch screen, before 04/2004	
C79	under centre console – with external CD changer and/or video system	
C79	under centre console – with video system	
C80	vehicle floor, LH side, above rear axle – 1.8/2.0L Duratec–HE (MI4)	53 – E 5
C80	vehicle floor, LH side, above rear axle – 1.8L Duratec–SCi (MI4)	53 – E 5
C80	vehicle floor, LH side, above rear axle – 2.5L Duratec–VE (VE6)	53 – E 5
C80	vehicle floor, LH side, above rear axle – 3.0L Duratec–ST (VE6), before 04/2004	53 – E 5
C80	vehicle floor, LH side, above rear axle – G300	53 – E 5
C80	vehicle floor, LH side, above rear axle	53 – E 5
C81	engine	68 – A 3
C81	engine	
C82	engine compartment, centre – F30, F31, F32, Petrol engines	45 – A 1
C82	engine compartment, centre – 3.0L Duratec–ST (VE6)	68 – B 2
C82	engine compartment, centre – 3.0L Duratec–ST (VE6), as of 04/2004	68 – B 2
C82	engine compartment, centre – 3.0L Duratec–ST (VE6), before 04/2004	68 – B 2
C82	engine compartment, centre – 3.0L Duratec–SE (VE6)	
C90	wheelwell, front, LH side – before 08/2004	7 – B 3
C90	wheelwell, front, LH side – Bosch 8.0	7 – B 3
C90	wheelwell, front, LH side	7 – B 3
C91	wheelwell, front, RH side – before 08/2004	7 – B 3
C91	wheelwell, front, RH side – Bosch 8.0	7 – B 3
C91	wheelwell, front, RH side	7 – B 3
C92	wheelwell, rear, LH side – before 08/2004	53 – E 3
C92	wheelwell, rear, LH side – Bosch 8.0	53 – E 3
C92	wheelwell, rear, LH side	53 – E 3
C93	wheelwell, rear, RH side – before 08/2004	46 – C 4
C93	wheelwell, rear, RH side – Bosch 8.0	46 – C 4
C93	wheelwell, rear, RH side	46 – C 4
C94	vehicle underbody, rear axle, LH side, rear – Headlamp Levelling, with high intensity discharge headlamps	54 – C 4
C94	vehicle underbody, rear axle, LH side, rear – Headlamp Levelling, with high intensity discharge headlamps	55 – C 4
C95	Centre console – Bluetooth voice control	82 – D 5
C96	Dash panel – Bluetooth voice control	
C97	behind radiator grille, bottom – Diesel engines, with fuel fired heater, as of 08/2004	
C98	Engine compartment – 2.2L Duratorq–TDCi (Puma) Diesel	
C98	Engine compartment – 3.0L Duratec–SE (VE6)	
C100	on engine bulkhead, RH side – 1.8/2.0L Duratec–HE (MI4)	3 – D 1
C100	on engine bulkhead, RH side – 1.8/2.0L Duratec–HE (MI4), automatic transmission	3 – D 1
C100	on engine bulkhead, RH side – 1.8/2.0L Duratec–HE (MI4), manual transmission	3 – D 1

C100	on engine bulkhead, RH side – 2.5L Duratec–VE (VE6)	3 – D 1
C100	on engine bulkhead, RH side – 2.5L Duratec–VE (VE6), manual transmission	3 – D 1
C100	on engine bulkhead, RH side – 2.5L Duratec–VE (VE6),automatic transmission	3 – D 1
C100	on engine bulkhead, RH side – 2.5L Duratec–VE (VE6),manual transmission	3 – D 1
C100	on engine bulkhead, RH side – 3.0L Duratec–SE (VE6)	3 – D 1
C100	on engine bulkhead, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	3 – D 1
C100	on engine bulkhead, RH side – 3.0L Duratec–ST (VE6)	3 – D 1
C100	on engine bulkhead, RH side – 3.0L Duratec–ST (VE6), as of 04/2004	3 – D 1
C100	on engine bulkhead, RH side – 3.0L Duratec–ST (VE6), before 04/2004	3 – D 1
C100	on engine bulkhead, RH side – 4–speed automatic transmission (CD4E)	3 – D 1
C100	on engine bulkhead, RH side – 4–speed automatic transmission (CD4E), 4–door model/5–door model	3 – D 1
C100	on engine bulkhead, RH side – 4–speed automatic transmission (CD4E), wagon	3 – D 1
C100	on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model	3 – D 1
C100	on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), Petrol engines	3 – D 1
C100	on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), wagon	3 – D 1
C100	on engine bulkhead, RH side – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4)	3 – D 1
C100	on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	3 – D 1
C100	on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	3 – D 1
C100	on engine bulkhead, RH side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	3 – D 1
C100	on engine bulkhead, RH side – F30, F31, F32, Petrol engines	3 – D 1
C100	on engine bulkhead, RH side – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission	3 – D 1
C100	on engine bulkhead, RH side – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission	3 – D 1
C100	on engine bulkhead, RH side – F42, 2.5L Duratec–VE (VE6)	3 – D 1
C100	on engine bulkhead, RH side – F42, 3.0L Duratec–SE (VE6)	3 – D 1
C100	on engine bulkhead, RH side – F42, 3.0L Duratec–ST (VE6), as of 04/2004	3 – D 1
C100	on engine bulkhead, RH side – F42, 3.0L Duratec–ST (VE6), before 04/2004	3 – D 1
C100	on engine bulkhead, RH side – G106, 1.8/2.0L Duratec–HE (MI4)	3 – D 1
C100	on engine bulkhead, RH side – G106, 2.5L Duratec–VE (VE6)	3 – D 1
C100	on engine bulkhead, RH side – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	3 – D 1
C100	on engine bulkhead, RH side – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	3 – D 1
C100	on engine bulkhead, RH side – Petrol engines	3 – D 1
C100	on engine bulkhead, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	3 – D 1
C100	on engine bulkhead, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	3 – D 1
C100	on engine bulkhead, RH side – Pre–equipment pack, Petrol engines	3 – D 1
C100	on engine bulkhead, RH side	3 – D 1
C100	on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	5 – D 5
C100	on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	5 – D 5

C100	on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model	5 – D 5
C100	on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), wagon	5 – D 5
C100	on engine bulkhead, RH side – Data link connector, pins 2, 10 and 13, Diesel engines, except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel	5 – D 5
C100	on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	5 – D 5
C100	on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	5 – D 5
C100	on engine bulkhead, RH side – Diesel engines	5 – D 5
C100	on engine bulkhead, RH side – Diesel engines, With electric coolant heater, before 12/2003	5 – D 5
C100	on engine bulkhead, RH side – F30, F31, F32, F33, Diesel engines	5 – D 5
C100	on engine bulkhead, RH side – F42, Diesel engines	5 – D 5
C100	on engine bulkhead, RH side – F67, Diesel engines	5 – D 5
C100	on engine bulkhead, RH side – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	5 – D 5
C100	on engine bulkhead, RH side – Pre–equipment pack, Diesel engines	5 – D 5
C100	on engine bulkhead, RH side	5 – D 5
C101	engine compartment, front, RH side – 1.8/2.0L Duratec–HE (MI4)	9 – E 1
C101	engine compartment, front, RH side – 2.5L Duratec–VE (VE6)	9 – E 1
C101	engine compartment, front, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	9 – E 1
C101	engine compartment, front, RH side – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	9 – E 1
C101	engine compartment, front, RH side – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	9 – E 1
C101	engine compartment, front, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	9 – E 1
C101	engine compartment, front, RH side – 1.8/2.0L Duratec–HE (MI4)	60 – B 2
C101	engine compartment, front, RH side – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	60 – B 2
C101	engine compartment, front, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	60 – B 2
C101	engine compartment, front, RH side – 1.8L Duratec–SCi (MI4)	75 – A 3
C101	engine compartment, front, RH side – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	75 – A 3
C101	engine compartment, front, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	79 – A 2
C101	engine compartment, front, RH side – G102, 3.0L Duratec–SE (VE6)	79 – A 2
C101	engine compartment, front, RH side – 2.5L Duratec–VE (VE6)	
C102	engine – 2.5L Duratec–VE (VE6)	64 – C 1
C102	engine – F30, F31, F32, Petrol engines	64 – C 1
C102	engine – 2.5L Duratec–VE (VE6)	66 – C 1
C102	engine – F30, F31, F32, Petrol engines	66 – C 1
C102	engine – 3.0L Duratec–ST (VE6)	68 – D 1
C102	engine – F30, F31, F32, Petrol engines	68 – D 1

C102	engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	71 – C 1
C102	engine – Diesel engines	71 – C 1
C102	engine, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	71 – C 1
C102	engine – F30, F31, F32, F33, Diesel engines	71 – C 1
C102	engine,2.0L Duratorq–TDCi (Puma) Diesel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	74 – C 1
C102	engine – Diesel engines	74 – C 1
C102	engine, 2.0L Duratorq–TDCi (Puma) Diesel – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	74 – C 1
C102	engine – F30, F31, F32, F33, Diesel engines	74 – C 1
C102	engine – 1.8L Duratec–SCi (MI4)	76 – E 3
C102	engine, 1.8L Duratec–SCi (MI4) – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	76 – E 3
C102	engine – F30, F31, F32, Petrol engines	76 – E 3
C102	engine – 3.0L Duratec–SE (VE6)	77 – D 1
C102	engine – 1.8/2.0L Duratec–HE (MI4)	
C102	engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C102	engine – Diesel engines	
C102	engine, 1.8/2.0L Duratec–HE (MI4) – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	
C102	engine – F30, F31, F32, F33, Diesel engines	
C103	engine compartment, bottom, LH side, rear – before 08/2004	4 – D 2
C103	engine compartment, bottom, LH side, rear – Data link connector, pin 7	4 – D 2
C103	engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	4 – D 2
C103	engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	4 – D 2
C103	engine compartment, bottom, LH side, rear – F1, F2	4 – D 2
C103	engine compartment, bottom, LH side, rear – F20, F21	4 – D 2
C103	engine compartment, bottom, LH side, rear – G103	4 – D 2
C103	engine compartment, bottom, LH side, rear	4 – D 2
C103	engine compartment, bottom, LH side, rear – Data link connector, pin 7	6 – C 1
C103	engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	6 – C 1
C103	engine compartment, bottom, LH side, rear – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	6 – C 1
C103	engine compartment, bottom, LH side, rear – F1, F2	6 – C 1
C103	engine compartment, bottom, LH side, rear – F20, F21	6 – C 1
C103	engine compartment, bottom, LH side, rear – G103	6 – C 1
C103	engine compartment, bottom, LH side, rear	6 – C 1
C103	engine compartment, bottom, LH side, rear – as of 08/2004	81 – C 2
C103	engine compartment, bottom, LH side, rear – as of 08/2004	81 – C 2
C103	engine compartment, bottom, LH side, rear – Bosch 8.0	81 – C 2
C103	engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	81 – C 2

C103	engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	81 – C 2
C103	engine compartment, bottom, LH side, rear – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	81 – C 2
C103	engine compartment, bottom, LH side, rear – F76, F77, as of 04/2004	
C103	engine compartment, bottom, LH side, rear – F76, F77, before 04/2004	
C103	engine compartment, bottom, LH side, rear – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	
C104	engine compartment, front, RH side – Diesel engines	10 – D 1
C104	engine compartment, front, RH side – G102, Diesel engines	10 – D 1
C104	engine compartment, front, RH side – Diesel engines	11 – E 1
C104	engine compartment, front, RH side – G102, Diesel engines	11 – E 1
C105	engine compartment, RH side, front – 1.8/2.0L Duratec–HE (MI4)	3 – C 5
C105	engine compartment, RH side, front – 1.8L Duratec–SCi (MI4)	3 – C 5
C105	engine compartment, RH side, front – 2.5L Duratec–VE (VE6)	3 – C 5
C105	engine compartment, RH side, front – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	3 – C 5
C105	engine compartment, RH side, front – F82, Petrol engines	3 – C 5
C105	engine compartment, RH side, front – Petrol engines, except 1.8L Duratec–SCi (MI4)	3 – C 5
C105	engine compartment, RH side, front – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	5 – C 5
C105	engine compartment, RH side, front – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	5 – C 5
C105	engine compartment, RH side, front – Diesel engines	5 – C 5
C105	engine compartment, RH side, front – F82, Diesel engines	5 – C 5
C106	wheelwell, LH side – 1.8L Duratec–SCi (MI4)	75 – F 4
C106	wheelwell, LH side – G107	75 – F 4
C106	wheelwell, LH side – Petrol engines, except 3.0L Duratec–SE (VE6)	75 – F 4
C107	engine compartment, rear, RH side – 5–speed automatic transmission (5F31J), Diesel engines	
C107	engine compartment, rear, RH side – G105	
C108	engine compartment, front, centre – G104	8 – E 4
C108	engine compartment, front, centre	8 – E 4
C108	engine compartment, front, centre – G104	9 – D 4
C108	engine compartment, front, centre	9 – D 4
C108	engine compartment, front, centre – G104	10 – D 5
C108	engine compartment, front, centre	10 – D 5
C108	engine compartment, front, centre – G104	11 – E 5
C108	engine compartment, front, centre	11 – E 5
C109	engine compartment, rear, LH side – as of 08/2004	4 – C 5
C109	engine compartment, rear, LH side – before 08/2004	4 – C 5
C109	engine compartment, rear, LH side – G104	4 – C 5
C109	engine compartment, rear, LH side – as of 08/2004	6 – D 5
C109	engine compartment, rear, LH side – before 08/2004	6 – D 5
C109	engine compartment, rear, LH side – G104	6 – D 5
C110	engine compartment, rear – 1.8L Duratec–SCi (MI4)	
C111	engine, top, LH side – 1.8L Duratec–SCi (MI4)	75 – D 5

C111	engine, top, LH side – F42, 1.8L Duratec–SCi (MI4)	75 – D 5
C121	behind radiator grille, bottom – Diesel engines	5 – B 1
C121	behind radiator grille, bottom – Diesel engines, with fuel fired heater	5 – B 1
C121	behind radiator grille, bottom – Diesel engines, with fuel fired heater, as of 08/2004	5 – B 1
C122a	engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	
C122a	engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	
C122a	engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	
C122a	engine compartment, rear, LH side, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP – Diesel engines, With electric coolant heater, before 12/2003	
C122a	engine compartment, rear, LH side, 2.0L Duratorq–TDCi (Puma) Diesel – Diesel engines, With electric coolant heater, before 12/2003	
C122b	engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	
C122b	engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	
C122b	engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	
C123	engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	
C123	engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	
C123	engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	
C123	engine compartment, rear, LH side, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	
C123	engine compartment, rear, LH side, 2.0L Duratorq–TDCi (Puma) Diesel	
C124	engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	
C124	engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	
C124	engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	
C124	engine compartment, rear, LH side, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	
C124	engine compartment, rear, LH side, 2.0L Duratorq–TDCi (Puma) Diesel	
C125	engine compartment, rear, LH side – F82, Diesel engines	6 – C 4
C125	engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	
C125	engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	
C125	engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	
C125	engine compartment, rear, LH side, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP – Diesel engines, With electric coolant heater, before 12/2003	
C125	engine compartment, rear, LH side, 2.0L Duratorq–TDCi (Puma) Diesel – Diesel engines, With electric coolant heater, before 12/2003	
C125	engine compartment, rear, LH side – F3, before 12/2003	
C126	engine compartment, rear, LH side – F82, Diesel engines	6 – C 5

C126	engine compartment, rear, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	
C126	engine compartment, rear, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	
C126	engine compartment, rear, LH side – Diesel engines, With electric coolant heater, before 12/2003	
C126	engine compartment, rear, LH side, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP – Diesel engines, With electric coolant heater, before 12/2003	
C126	engine compartment, rear, LH side, 2.0L Duratorq–TDCi (Puma) Diesel – Diesel engines, With electric coolant heater, before 12/2003	
C126	engine compartment, rear, LH side – F3, before 12/2003	
C127	cylinder head – 1.8/2.0L Duratec–HE (MI4)	62 – C 5
C127	cylinder head – 1.8/2.0L Duratec–HE (MI4), automatic transmission	62 – C 5
C127	cylinder head – 1.8/2.0L Duratec–HE (MI4), manual transmission	62 – C 5
C127	cylinder head – 2.5L Duratec–VE (VE6)	64 – F 3
C127	cylinder head – 2.5L Duratec–VE (VE6)	66 – F 3
C127	cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C130	engine – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III	
C130	engine – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C131	cylinder head – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – E 5
C131	cylinder head – 2.0L Duratorq–TDCi (Puma) Diesel	72 – E 5
C131	engine, 2.0L Duratorq–TDCi (Puma) Diesel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	72 – E 5
C131	cylinder head – 2.0L Duratorq–TDCi (Puma) Diesel	73 – E 5
C131	engine – 2.2L Duratorq–TDCi (Puma) Diesel	73 – E 5
C131	engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	73 – E 5
C132	engine – 1.8/2.0L Duratec–HE (MI4)	62 – D 1
C132	engine – 1.8/2.0L Duratec–HE (MI4), automatic transmission	62 – D 1
C132	engine – 1.8/2.0L Duratec–HE (MI4), manual transmission	62 – D 1
C133	engine – 1.8/2.0L Duratec–HE (MI4)	62 – A 4
C133	engine – 3.0L Duratec–ST (VE6)	68 – C 1
C133	engine – 1.8L Duratec–SCi (MI4)	
C133	engine – 2.5L Duratec–VE (VE6)	
C133	engine – 2.5L Duratec–VE (VE6),automatic transmission	
C133	engine – 2.5L Duratec–VE (VE6),manual transmission	
C133	engine – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C134	engine compartment, front, RH side – 1.8/2.0L Duratec–HE (MI4)	3 – B 5
C134	engine compartment, front, RH side – 1.8L Duratec–SCi (MI4)	3 – B 5
C134	engine compartment, front, RH side – 2.5L Duratec–VE (VE6)	3 – B 5
C134	engine compartment, front, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	3 – B 5
C134	engine compartment, front, RH side – F82, Petrol engines	3 – B 5
C134	engine compartment, front, RH side – G106, 1.8/2.0L Duratec–HE (MI4)	3 – B 5
C134	engine compartment, front, RH side – G106, 2.5L Duratec–VE (VE6)	3 – B 5
C134	engine compartment, front, RH side – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	3 – B 5
C134	engine compartment, front, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	3 – B 5

C134	engine compartment, front, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	5 – B 5
C134	engine compartment, front, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	5 – B 5
C134	engine compartment, front, RH side – Diesel engines	5 – B 5
C134	engine compartment, front, RH side – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	5 – B 5
C134	engine compartment, front, RH side – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	5 – B 5
C135	engine – 1.8/2.0L Duratec–HE (MI4)	60 – D 5
C135	engine – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission	60 – D 5
C135	engine – 1.8/2.0L Duratec–HE (MI4)	61 – D 5
C135	engine – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – D 5
C135	engine – 1.8L Duratec–SCi (MI4)	76 – C 5
C135	engine – F42, 1.8L Duratec–SCi (MI4)	76 – C 5
C136	engine – 1.8/2.0L Duratec–HE (MI4)	60 – C 5
C136	engine – 1.8/2.0L Duratec–HE (MI4)	61 – A 3
C137	engine – 2.5L Duratec–VE (VE6)	63 – A 5
C137	engine – F40, 2.5L Duratec–VE (VE6)	63 – A 5
C137	engine – G106, 2.5L Duratec–VE (VE6)	63 – A 5
C137	engine – 2.5L Duratec–VE (VE6)	65 – B 5
C137	engine – F40, 2.5L Duratec–VE (VE6)	65 – B 5
C137	engine – G106, 2.5L Duratec–VE (VE6)	65 – B 5
C138	engine – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	
C138	engine – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III	
C138	engine – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C139	engine compartment – 2.0L Duratorq–TDCi (Puma) Diesel	
C139	engine compartment – 2.2L Duratorq–TDCi (Puma) Diesel	
C141	behind radiator grille – 1.8/2.0L Duratec–HE (MI4)	8 – B 2
C141	behind radiator grille – 1.8L Duratec–SCi (MI4)	8 – B 2
C141	behind radiator grille – 1.8/2.0L Duratec–HE (MI4)	9 – C 1
C141	behind radiator grille – 3.0L Duratec–ST (VE6)	9 – C 1
C142	engine compartment, front, centre – 2.5L Duratec–VE (VE6),automatic transmission	9 – D 1
C142	engine compartment, front, centre – 3.0L Duratec–ST (VE6)	9 – D 1
C142	engine compartment, front, centre – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	9 – D 1
C143	in exhaust system – 1.8L Duratec–SCi (MI4)	76 – B 2
C143	in exhaust system – F37, 1.8L Duratec–SCi (MI4)	76 – B 2
C144	on engine bulkhead, centre – F94	12 – D 1
C144	on engine bulkhead, centre – G105	12 – D 1
C144	on engine bulkhead, centre – with rain sensor	12 – D 1
C144	on engine bulkhead, centre – with variable intermittent wipe	12 – D 1
C144	on engine bulkhead, centre	12 – D 1
C144	on engine bulkhead, centre – F94	13 – B 2
C144	on engine bulkhead, centre – G105	13 – B 2
C144	on engine bulkhead, centre – with rain sensor	13 – B 2
C144	on engine bulkhead, centre – with variable intermittent wipe	13 – B 2

C144	on engine bulkhead, centre	13 – B 2
C145	engine compartment, front, RH side – G105	3 – A 1
C145	engine compartment, front, RH side – With rear window wiper, with headlamp washer	3 – A 1
C145	engine compartment, front, RH side – Without rear window wiper, with headlamp washer	3 – A 1
C145	engine compartment, front, RH side – G105	5 – A 2
C145	engine compartment, front, RH side – With rear window wiper, with headlamp washer	5 – A 2
C145	engine compartment, front, RH side – Without rear window wiper, with headlamp washer	5 – A 2
C146	front of vehicle (exterior), LH side – F16	4 – F 3
C146	front of vehicle (exterior), LH side – F64, with trailer socket, 4–door model/5–door model	4 – F 3
C146	front of vehicle (exterior), LH side – F64, with trailer socket, wagon	4 – F 3
C146	front of vehicle (exterior), LH side – F64, without trailer socket, 4–door model/5–door model	4 – F 3
C146	front of vehicle (exterior), LH side – F64, without trailer socket, wagon	4 – F 3
C146	front of vehicle (exterior), LH side – F85, F86	4 – F 3
C146	front of vehicle (exterior), LH side – G104	4 – F 3
C146	front of vehicle (exterior), LH side – Headlamp Levelling, without high intensity discharge headlamps	4 – F 3
C146	front of vehicle (exterior), LH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Light switch, with autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Light switch, without autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, with autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, without autolamps	4 – F 3
C146	front of vehicle (exterior), LH side – Turn Signal and Hazard Lamps	4 – F 3
C146	front of vehicle (exterior), LH side – Without high intensity discharge headlamps	4 – F 3
C146	front of vehicle (exterior), LH side – without trailer socket, 4–door model/5–door model	4 – F 3
C146	front of vehicle (exterior), LH side – without trailer socket, wagon	4 – F 3
C146	front of vehicle (exterior), LH side	4 – F 3
C146	front of vehicle (exterior), LH side – F16	6 – F 3
C146	front of vehicle (exterior), LH side – F64, with trailer socket, 4–door model/5–door model	6 – F 3
C146	front of vehicle (exterior), LH side – F64, with trailer socket, wagon	6 – F 3

C146	front of vehicle (exterior), LH side – F64, without trailer socket, 4–door model/5–door model	6 – F 3
C146	front of vehicle (exterior), LH side – F64, without trailer socket, wagon	6 – F 3
C146	front of vehicle (exterior), LH side – F85, F86	6 – F 3
C146	front of vehicle (exterior), LH side – G104	6 – F 3
C146	front of vehicle (exterior), LH side – Headlamp Levelling, without high intensity discharge headlamps	6 – F 3
C146	front of vehicle (exterior), LH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Light switch, with autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Light switch, without autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, with autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, without autolamps	6 – F 3
C146	front of vehicle (exterior), LH side – Turn Signal and Hazard Lamps	6 – F 3
C146	front of vehicle (exterior), LH side – Without high intensity discharge headlamps	6 – F 3
C146	front of vehicle (exterior), LH side – without trailer socket, 4–door model/5–door model	6 – F 3
C146	front of vehicle (exterior), LH side – without trailer socket, wagon	6 – F 3
C146	front of vehicle (exterior), LH side	6 – F 3
C147	front of vehicle (exterior), RH side – F18	3 – A 4
C147	front of vehicle (exterior), RH side – F63, 4–door model/5–door model	3 – A 4
C147	front of vehicle (exterior), RH side – F63, wagon	3 – A 4
C147	front of vehicle (exterior), RH side – F85, F86	3 – A 4
C147	front of vehicle (exterior), RH side – G105	3 – A 4
C147	front of vehicle (exterior), RH side – Headlamp Levelling, without high intensity discharge headlamps	3 – A 4
C147	front of vehicle (exterior), RH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	3 – A 4
C147	front of vehicle (exterior), RH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	3 – A 4
C147	front of vehicle (exterior), RH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	3 – A 4
C147	front of vehicle (exterior), RH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	3 – A 4
C147	front of vehicle (exterior), RH side – Light switch, with autolamps	3 – A 4
C147	front of vehicle (exterior), RH side – Light switch, without autolamps	3 – A 4
C147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	3 – A 4

C147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	3 – A 4
C147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, with autolamps	3 – A 4
C147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, without autolamps	3 – A 4
C147	front of vehicle (exterior), RH side – Turn Signal and Hazard Lamps	3 – A 4
C147	front of vehicle (exterior), RH side – Without high intensity discharge headlamps	3 – A 4
C147	front of vehicle (exterior), RH side – without trailer socket, 4–door model/5–door model	3 – A 4
C147	front of vehicle (exterior), RH side – without trailer socket, wagon	3 – A 4
C147	front of vehicle (exterior), RH side	3 – A 4
C147	front of vehicle (exterior), RH side – F18	5 – A 4
C147	front of vehicle (exterior), RH side – F63, 4–door model/5–door model	5 – A 4
C147	front of vehicle (exterior), RH side – F63, wagon	5 – A 4
C147	front of vehicle (exterior), RH side – F85, F86	5 – A 4
C147	front of vehicle (exterior), RH side – G105	5 – A 4
C147	front of vehicle (exterior), RH side – Headlamp Levelling, without high intensity discharge headlamps	5 – A 4
C147	front of vehicle (exterior), RH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Light switch, with autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Light switch, without autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, with autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, without autolamps	5 – A 4
C147	front of vehicle (exterior), RH side – Turn Signal and Hazard Lamps	5 – A 4
C147	front of vehicle (exterior), RH side – Without high intensity discharge headlamps	5 – A 4
C147	front of vehicle (exterior), RH side – without trailer socket, 4–door model/5–door model	5 – A 4
C147	front of vehicle (exterior), RH side – without trailer socket, wagon	5 – A 4
C147	front of vehicle (exterior), RH side	5 – A 4
C148	in exhaust system – 1.8/2.0L Duratec–HE (MI4)	62 – A 3
C148	in exhaust system – F37, 1.8/2.0L Duratec–HE (MI4)	62 – A 3
C148	in exhaust system – 2.5L Duratec–VE (VE6)	64 – A 3
C148	in exhaust system – F37, 2.5L Duratec–VE (VE6)	64 – A 3
C148	in exhaust system – 2.5L Duratec–VE (VE6)	66 – A 3
C148	in exhaust system – F37, 2.5L Duratec–VE (VE6)	66 – A 3
C148	in exhaust system – 3.0L Duratec–ST (VE6), as of 04/2004	69 – B 4

C148	in exhaust system – 3.0L Duratec–ST (VE6), before 04/2004	69 – B 4
C148	in exhaust system – F37, 3.0L Duratec–ST (VE6), as of 04/2004	69 – B 4
C148	in exhaust system – F37, 3.0L Duratec–ST (VE6), before 04/2004	69 – B 4
C148	in exhaust system – 3.0L Duratec–SE (VE6)	78 – B 4
C148	in exhaust system – F37, 3.0L Duratec–SE (VE6)	78 – B 4
C148	in exhaust system – 1.8L Duratec–SCi (MI4)	
C148	in exhaust system – F37, 1.8L Duratec–SCi (MI4)	
C149	in exhaust system – 1.8/2.0L Duratec–HE (MI4)	62 – A 1
C149	in exhaust system – F37, 1.8/2.0L Duratec–HE (MI4)	62 – A 1
C149	in exhaust system – 2.5L Duratec–VE (VE6)	64 – A 2
C149	in exhaust system – F37, 2.5L Duratec–VE (VE6)	64 – A 2
C149	in exhaust system – 2.5L Duratec–VE (VE6)	66 – A 2
C149	in exhaust system – F37, 2.5L Duratec–VE (VE6)	66 – A 2
C149	in exhaust system – 3.0L Duratec–ST (VE6), as of 04/2004	69 – D 1
C149	in exhaust system – 3.0L Duratec–ST (VE6), before 04/2004	69 – D 1
C149	in exhaust system – F37, 3.0L Duratec–ST (VE6), as of 04/2004	69 – D 1
C149	in exhaust system – F37, 3.0L Duratec–ST (VE6), before 04/2004	69 – D 1
C149	in exhaust system – 3.0L Duratec–SE (VE6)	78 – A 2
C149	in exhaust system – F37, 3.0L Duratec–SE (VE6)	78 – A 2
C151	engine compartment, LH side, front – G104	4 – E 2
C151	engine compartment, LH side, front	4 – E 2
C151	engine compartment, LH side, front – G104	6 – E 1
C151	engine compartment, LH side, front	6 – E 1
C152	cylinder head – 2.5L Duratec–VE (VE6)	64 – D 5
C152	cylinder head – F67, 2.5L Duratec–VE (VE6)	64 – D 5
C152	cylinder head – 2.5L Duratec–VE (VE6)	66 – E 5
C152	cylinder head – F67, 2.5L Duratec–VE (VE6)	66 – E 5
C152	cylinder head – F67, 3.0L Duratec–ST (VE6)	67 – C 5
C152	cylinder head – 1.8/2.0L Duratec–HE (MI4)	
C152	cylinder head – 1.8L Duratec–SCi (MI4)	
C152	cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C152	cylinder head – F67, 1.8/2.0L Duratec–HE (MI4)	
C152	cylinder head – F67, 1.8L Duratec–SCi (MI4)	
C152	cylinder head – F67, 3.0L Duratec–SE (VE6)	
C153	engine – 1.8/2.0L Duratec–HE (MI4)	60 – D 5
C153	engine – F40, 1.8/2.0L Duratec–HE (MI4)	60 – D 5
C153	engine – 1.8/2.0L Duratec–HE (MI4)	61 – D 5
C153	engine – F40, 1.8/2.0L Duratec–HE (MI4)	61 – D 5
C153	engine – 2.5L Duratec–VE (VE6)	63 – E 5
C153	engine – F40, 2.5L Duratec–VE (VE6)	63 – E 5
C153	engine – 2.5L Duratec–VE (VE6)	65 – E 4
C153	engine – F40, 2.5L Duratec–VE (VE6)	65 – E 4
C153	engine, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	67 – E 5
C153	engine, 3.0L Duratec–ST (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	67 – E 5
C153	engine, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	79 – D 5
C153	engine, 3.0L Duratec–SE (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	79 – D 5

C154	cylinder head – 1.8/2.0L Duratec–HE (MI4)	60 – E 4
C154	cylinder head – F67, 1.8/2.0L Duratec–HE (MI4)	60 – E 4
C154	cylinder head – 1.8/2.0L Duratec–HE (MI4)	61 – E 4
C154	cylinder head – F67, 1.8/2.0L Duratec–HE (MI4)	61 – E 4
C156	cylinder head – 2.5L Duratec–VE (VE6)	64 – D 5
C156	cylinder head – F67, 2.5L Duratec–VE (VE6)	64 – D 5
C156	cylinder head – 2.5L Duratec–VE (VE6)	66 – D 5
C156	cylinder head – F67, 2.5L Duratec–VE (VE6)	66 – D 5
C156	cylinder head, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	67 – B 5
C156	cylinder head – F67, 3.0L Duratec–ST (VE6)	67 – B 5
C156	cylinder head, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	79 – B 5
C156	cylinder head – F67, 3.0L Duratec–SE (VE6)	79 – B 5
C159	in intake system – 2.5L Duratec–VE (VE6)	64 – B 5
C159	in intake system – F42, 2.5L Duratec–VE (VE6)	64 – B 5
C159	in intake system – G106, 2.5L Duratec–VE (VE6)	64 – B 5
C159	in intake system – 2.5L Duratec–VE (VE6)	66 – C 5
C159	in intake system – F42, 2.5L Duratec–VE (VE6)	66 – C 5
C159	in intake system – G106, 2.5L Duratec–VE (VE6)	66 – C 5
C159	in intake system – 3.0L Duratec–ST (VE6), as of 04/2004	69 – C 5
C159	in intake system – 3.0L Duratec–ST (VE6), before 04/2004	69 – C 5
C159	in intake system – F42, 3.0L Duratec–ST (VE6), as of 04/2004	69 – C 5
C159	in intake system – F42, 3.0L Duratec–ST (VE6), before 04/2004	69 – C 5
C159	in intake system – 3.0L Duratec–SE (VE6)	78 – C 5
C159	in intake system – F42, 3.0L Duratec–SE (VE6)	78 – C 5
C159	in intake system – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	78 – C 5
C159	in intake system – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C159	in intake system – F42, Diesel engines	
C160	engine – 1.8/2.0L Duratec–HE (MI4)	62 – F 3
C160	engine – G106, 1.8/2.0L Duratec–HE (MI4)	62 – F 3
C161	wheel hub, front, LH side – before 08/2004	7 – F 2
C161	wheel hub, front, LH side – Bosch 8.0	7 – F 2
C161	wheel hub, front, LH side	7 – F 2
C162	wheel hub, front, RH side – before 08/2004	7 – F 2
C162	wheel hub, front, RH side – Bosch 8.0	7 – F 2
C162	wheel hub, front, RH side	7 – F 2
C163	engine compartment, front, LH side – G104	7 – C 4
C163	engine compartment, front, LH side – Turn Signal and Hazard Lamps	7 – C 4
C163	engine compartment, front, LH side	7 – C 4
C164	engine compartment, front, RH side – G105	7 – C 4
C164	engine compartment, front, RH side – Turn Signal and Hazard Lamps	7 – C 4
C164	engine compartment, front, RH side	7 – C 4
C165	in hood, LH side – F82, Diesel engines	2 – E 3
C165	in hood, LH side – F82, Petrol engines	2 – E 3
C165	in hood, LH side – G104	2 – E 3
C165	in hood, LH side – with windshield washer jet heater	2 – E 3
C166	in hood, RH side – F82, Diesel engines	2 – D 2
C166	in hood, RH side – F82, Petrol engines	2 – D 2

C166	in hood, RH side – G104	2 – D 2
C166	in hood, RH side – with windshield washer jet heater	2 – D 2
C167	engine – 2.0L Duratorq–TDCi (Puma) Diesel	72 – F 4
C167	engine – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	72 – F 4
C167	engine – 2.2L Duratorq–TDCi (Puma) Diesel	72 – F 4
C167	engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	72 – F 4
C167	engine – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III	72 – F 4
C167	engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	72 – F 4
C167	engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	72 – F 4
C167	engine – Diesel engines	72 – F 4
C167	engine – F30, F31, F32, F33, Diesel engines	72 – F 4
C167	engine – F42, Diesel engines	72 – F 4
C167	engine	72 – F 4
C167	engine – 2.0L Duratorq–TDCi (Puma) Diesel	73 – F 4
C167	engine – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	73 – F 4
C167	engine – Diesel engines	73 – F 4
C167	engine – F30, F31, F32, F33, Diesel engines	73 – F 4
C167	engine – F40, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	73 – F 4
C167	engine – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	73 – F 4
C167	engine – F42, Diesel engines	73 – F 4
C167	engine – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	73 – F 4
C167	engine	73 – F 4
C168	in intake system – 1.8L Duratec–SCi (MI4)	
C168	in intake system – F40, 1.8L Duratec–SCi (MI4)	
C169	engine, front – 1.8L Duratec–SCi (MI4)	
C170	engine	60 – C 1
C170	engine	61 – C 1
C170	engine	63 – B 1
C170	engine	65 – B 2
C170	engine	67 – A 3
C170	engine	70 – C 1
C170	engine	72 – C 1
C170	engine	73 – B 1
C170	engine	75 – D 1
C171	transmission – 5–speed automatic transmission (5F31J)	
C172	engine bulkhead, RH side – 1.8/2.0L Duratec–HE (MI4)	62 – E 5
C172	engine bulkhead, RH side – 2.5L Duratec–VE (VE6)	64 – F 4
C172	engine bulkhead, RH side – 2.5L Duratec–VE (VE6)	66 – F 4
C172	engine bulkhead, RH side, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	68 – F 4
C172	engine bulkhead, RH side – 1.8L Duratec–SCi (MI4)	75 – A 3
C172	engine bulkhead, RH side, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	77 – F 4
C173	engine compartment, front, RH side – 1.8/2.0L Duratec–HE (MI4)	3 – B 1

C173	engine compartment, front, RH side – 1.8L Duratec–SCi (MI4)	3 – B 1
C173	engine compartment, front, RH side – 2.5L Duratec–VE (VE6)	3 – B 1
C173	engine compartment, front, RH side – 3.0L Duratec–SE (VE6)	3 – B 1
C173	engine compartment, front, RH side – 3.0L Duratec–ST (VE6)	3 – B 1
C173	engine compartment, front, RH side – Petrol engines	3 – B 1
C173	engine compartment, front, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	5 – B 1
C173	engine compartment, front, RH side – 2.0L Duratorq–TDCi (Puma) Diesel	5 – B 1
C173	engine compartment, front, RH side – 2.2L Duratorq–TDCi (Puma) Diesel	5 – B 1
C174	engine compartment, bottom, LH side, rear – as of 08/2004	4 – C 2
C174	engine compartment, bottom, LH side, rear – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	6 – C 2
C174	engine compartment, bottom, LH side, rear – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	6 – C 2
C175	engine compartment, rear, LH side – 1.8/2.0L Duratec–HE (MI4)	4 – A 1
C175	engine compartment, rear, LH side – 1.8/2.0L Duratec–HE (MI4), manual transmission	4 – A 1
C175	engine compartment, rear, LH side – 2.5L Duratec–VE (VE6)	4 – A 1
C175	engine compartment, rear, LH side – 2.5L Duratec–VE (VE6), manual transmission	4 – A 1
C175	engine compartment, rear, LH side – 3.0L Duratec–SE (VE6)	4 – A 1
C175	engine compartment, rear, LH side, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – A 1
C175	engine compartment, rear, LH side, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – A 1
C175	engine compartment, rear, LH side – 3.0L Duratec–ST (VE6)	4 – A 1
C175	engine compartment, rear, LH side – F82, Petrol engines	4 – A 1
C175	engine compartment, rear, LH side – G104	4 – A 1
C175	engine compartment, rear, LH side – Petrol engines	4 – A 1
C175	engine compartment, rear, LH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	4 – A 1
C175	engine compartment, rear, LH side – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	4 – A 1
C176	engine – 1.8/2.0L Duratec–HE (MI4)	60 – B 1
C176	engine – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission	60 – B 1
C176	engine – 1.8/2.0L Duratec–HE (MI4)	61 – C 1
C176	engine – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – C 1
C177	engine – 2.5L Duratec–VE (VE6)	63 – D 5
C177	engine – 2.5L Duratec–VE (VE6)	65 – D 5
C177	engine, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	67 – F 4
C177	engine, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	79 – E 5
C178	transmission – 5–speed automatic transmission (5F31J)	
C179	transmission – 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – E 3
C179	transmission – 4–speed automatic transmission (CD4E)	61 – E 3
C179	transmission – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – E 3
C181	transmission – Auto–dimming interior mirror	60 – F 2
C181	transmission – DVD navigation system with touch screen	60 – F 2
C181	transmission – F78, F80	60 – F 2
C181	transmission – Petrol engines	60 – F 2

C181	transmission – Pre–equipment pack, Petrol engines	60 – F 2
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	60 – F 2
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	60 – F 2
C181	transmission – Reversing lamps, with trailer socket, wagon, before 01/2004	60 – F 2
C181	transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004	60 – F 2
C181	transmission – Reversing lamps, without trailer socket, 4–door model/5–door model	60 – F 2
C181	transmission – Reversing lamps, without trailer socket, wagon	60 – F 2
C181	transmission – Valeo, 4–door model/5–door model, as of 01/2004	60 – F 2
C181	transmission – Valeo, 4–door model/5–door model, before 01/2004	60 – F 2
C181	transmission – Valeo, wagon, as of 01/2004	60 – F 2
C181	transmission – Valeo, wagon, before 01/2004	60 – F 2
C181	transmission – With rear window wiper	60 – F 2
C181	transmission – Auto–dimming interior mirror	63 – F 3
C181	transmission – Bosch, 4–door model/5–door model	63 – F 3
C181	transmission – Bosch, wagon	63 – F 3
C181	transmission – DVD navigation system with touch screen	63 – F 3
C181	transmission – F78, F80	63 – F 3
C181	transmission – Petrol engines	63 – F 3
C181	transmission – Pre–equipment pack, Petrol engines	63 – F 3
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	63 – F 3
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	63 – F 3
C181	transmission – Reversing lamps, with trailer socket, wagon, before 01/2004	63 – F 3
C181	transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004	63 – F 3
C181	transmission – Reversing lamps, without trailer socket, 4–door model/5–door model	63 – F 3
C181	transmission – Reversing lamps, without trailer socket, wagon	63 – F 3
C181	transmission – Valeo, 4–door model/5–door model, as of 01/2004	63 – F 3
C181	transmission – Valeo, 4–door model/5–door model, before 01/2004	63 – F 3
C181	transmission – Valeo, wagon, as of 01/2004	63 – F 3
C181	transmission – Valeo, wagon, before 01/2004	63 – F 3
C181	transmission – With rear window wiper	63 – F 3
C181	transmission – Auto–dimming interior mirror	67 – F 3
C181	transmission – Bosch, 4–door model/5–door model	67 – F 3
C181	transmission – Bosch, wagon	67 – F 3
C181	transmission – DVD navigation system with touch screen	67 – F 3
C181	transmission – F78, F80	67 – F 3
C181	transmission – Petrol engines	67 – F 3
C181	transmission – Pre–equipment pack, Petrol engines	67 – F 3
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	67 – F 3
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	67 – F 3
C181	transmission – Reversing lamps, with trailer socket, wagon, before 01/2004	67 – F 3
C181	transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004	67 – F 3
C181	transmission – Reversing lamps, without trailer socket, 4–door model/5–door model	67 – F 3
C181	transmission – Reversing lamps, without trailer socket, wagon	67 – F 3
C181	transmission – Valeo, 4–door model/5–door model, as of 01/2004	67 – F 3

C181	transmission – Valeo, 4–door model/5–door model, before 01/2004	67 – F 3
C181	transmission – Valeo, wagon, as of 01/2004	67 – F 3
C181	transmission – Valeo, wagon, before 01/2004	67 – F 3
C181	transmission – With rear window wiper	67 – F 3
C181	transmission – Auto–dimming interior mirror	70 – F 2
C181	transmission – Bosch, 4–door model/5–door model	70 – F 2
C181	transmission – Bosch, wagon	70 – F 2
C181	transmission – Diesel engines	70 – F 2
C181	transmission – DVD navigation system with touch screen	70 – F 2
C181	transmission – F78, F80	70 – F 2
C181	transmission – Pre–equipment pack, Diesel engines	70 – F 2
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	70 – F 2
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	70 – F 2
C181	transmission – Reversing lamps, with trailer socket, wagon, before 01/2004	70 – F 2
C181	transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004	70 – F 2
C181	transmission – Reversing lamps, without trailer socket, 4–door model/5–door model	70 – F 2
C181	transmission – Reversing lamps, without trailer socket, wagon	70 – F 2
C181	transmission – Valeo, 4–door model/5–door model, as of 01/2004	70 – F 2
C181	transmission – Valeo, 4–door model/5–door model, before 01/2004	70 – F 2
C181	transmission – Valeo, wagon, as of 01/2004	70 – F 2
C181	transmission – Valeo, wagon, before 01/2004	70 – F 2
C181	transmission – With rear window wiper	70 – F 2
C181	engine compartment, engine, RH side, 2.2L Duratorq–TDCi (Puma) Diesel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	72 – F 3
C181	engine compartment, engine, RH side, 2.0L Duratorq–TDCi (Puma) Diesel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	72 – F 3
C181	transmission – Auto–dimming interior mirror	72 – F 3
C181	transmission – Bosch, 4–door model/5–door model	72 – F 3
C181	transmission – Bosch, wagon	72 – F 3
C181	transmission – Diesel engines	72 – F 3
C181	transmission – DVD navigation system with touch screen	72 – F 3
C181	transmission – F78, F80	72 – F 3
C181	transmission – Pre–equipment pack, Diesel engines	72 – F 3
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	72 – F 3
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	72 – F 3
C181	transmission – Reversing lamps, with trailer socket, wagon, before 01/2004	72 – F 3
C181	transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004	72 – F 3
C181	transmission – Reversing lamps, without trailer socket, 4–door model/5–door model	72 – F 3
C181	transmission – Reversing lamps, without trailer socket, wagon	72 – F 3
C181	transmission – Valeo, 4–door model/5–door model, as of 01/2004	72 – F 3
C181	transmission – Valeo, 4–door model/5–door model, before 01/2004	72 – F 3
C181	transmission – Valeo, wagon, as of 01/2004	72 – F 3
C181	transmission – Valeo, wagon, before 01/2004	72 – F 3
C181	transmission – With rear window wiper	72 – F 3
C181	transmission – Auto–dimming interior mirror	75 – E 1
C181	transmission – Bosch, 4–door model/5–door model	75 – E 1

C181	transmission – Bosch, wagon	75 – E 1
C181	transmission – DVD navigation system with touch screen	75 – E 1
C181	transmission – F78, F80	75 – E 1
C181	transmission – Petrol engines	75 – E 1
C181	transmission – Pre–equipment pack, Petrol engines	75 – E 1
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	75 – E 1
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	75 – E 1
C181	transmission – Reversing lamps, with trailer socket, wagon, before 01/2004	75 – E 1
C181	transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004	75 – E 1
C181	transmission – Reversing lamps, without trailer socket, 4–door model/5–door model	75 – E 1
C181	transmission – Reversing lamps, without trailer socket, wagon	75 – E 1
C181	transmission – Valeo, 4–door model/5–door model, as of 01/2004	75 – E 1
C181	transmission – Valeo, 4–door model/5–door model, before 01/2004	75 – E 1
C181	transmission – Valeo, wagon, as of 01/2004	75 – E 1
C181	transmission – Valeo, wagon, before 01/2004	75 – E 1
C181	transmission – With rear window wiper	75 – E 1
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
C181	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	
C181	transmission – Reversing lamps, with trailer socket, wagon, before 01/2004	
C181	transmission – Valeo, 4–door model/5–door model, as of 01/2004	
C181	transmission – Valeo, 4–door model/5–door model, before 01/2004	
C181	transmission – Valeo, wagon, as of 01/2004	
C181	transmission – Valeo, wagon, before 01/2004	
C182	transmission – 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – F 2
C182	transmission – 4–speed automatic transmission (CD4E)	61 – F 2
C184	engine compartment, front, RH side – With rear window wiper, with headlamp washer	3 – B 1
C184	engine compartment, front, RH side – With rear window wiper, without headlamp washer	3 – B 1
C184	engine compartment, front, RH side – Without rear window wiper, with headlamp washer	3 – B 1
C184	engine compartment, front, RH side – Without rear window wiper, without headlamp washer	3 – B 1
C184	engine compartment, front, RH side – With rear window wiper, with headlamp washer	5 – C 1
C184	engine compartment, front, RH side – With rear window wiper, without headlamp washer	5 – C 1
C184	engine compartment, front, RH side – Without rear window wiper, with headlamp washer	5 – C 1
C184	engine compartment, front, RH side – Without rear window wiper, without headlamp washer	5 – C 1
C185	on engine bulkhead, LH side – F11, F13, F15	12 – E 1
C185	on engine bulkhead, LH side – G104	12 – E 1
C185	on engine bulkhead, LH side – Heated windshield	12 – E 1
C185	on engine bulkhead, LH side – F11, F13, F15	13 – E 1
C185	on engine bulkhead, LH side – G104	13 – E 1

C185	on engine bulkhead, LH side – Heated windshield	13 – E 1
C186	on engine bulkhead, RH side – F11, F13, F15	12 – B 2
C186	on engine bulkhead, RH side – G105	12 – B 2
C186	on engine bulkhead, RH side – Heated windshield	12 – B 2
C186	on engine bulkhead, RH side – F11, F13, F15	13 – A 2
C186	on engine bulkhead, RH side – G105	13 – A 2
C186	on engine bulkhead, RH side – Heated windshield	13 – A 2
C187	transmission – 1.8/2.0L Duratec–HE (MI4)	61 – D 1
C187	transmission – 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – D 1
C187	transmission – 4–speed automatic transmission (CD4E), 4–door model/5–door model	61 – D 1
C187	transmission – 4–speed automatic transmission (CD4E), wagon	61 – D 1
C187	transmission – Auto–dimming interior mirror	61 – D 1
C187	transmission – Bosch, 4–door model/5–door model	61 – D 1
C187	transmission – Bosch, wagon	61 – D 1
C187	transmission – DVD navigation system with touch screen	61 – D 1
C187	transmission – F78, F80	61 – D 1
C187	transmission – Petrol engines	61 – D 1
C187	transmission – Pre–equipment pack, Petrol engines	61 – D 1
C187	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	61 – D 1
C187	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	61 – D 1
C187	transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004	61 – D 1
C187	transmission – Reversing lamps, with trailer socket, wagon, before 01/2004	61 – D 1
C187	transmission – Reversing lamps, without trailer socket, 4–door model/5–door model	61 – D 1
C187	transmission – Reversing lamps, without trailer socket, wagon	61 – D 1
C187	transmission – Valeo, 4–door model/5–door model, as of 01/2004	61 – D 1
C187	transmission – Valeo, 4–door model/5–door model, before 01/2004	61 – D 1
C187	transmission – Valeo, wagon, as of 01/2004	61 – D 1
C187	transmission – Valeo, wagon, before 01/2004	61 – D 1
C187	transmission – With rear window wiper	61 – D 1
C187	transmission	61 – D 1
C187	transmission – Auto–dimming interior mirror	
C187	transmission – DVD navigation system with touch screen	
C187	transmission – F78, F80	
C187	transmission – Petrol engines	
C187	transmission – Pre–equipment pack, Petrol engines	
C187	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
C187	transmission – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	
C187	transmission – Reversing lamps, with trailer socket, wagon, as of 01/2004	
C187	transmission – Reversing lamps, with trailer socket, wagon, before 01/2004	
C187	transmission – Reversing lamps, without trailer socket, 4–door model/5–door model	
C187	transmission – Reversing lamps, without trailer socket, wagon	
C187	transmission – Valeo, 4–door model/5–door model, as of 01/2004	
C187	transmission – Valeo, 4–door model/5–door model, before 01/2004	
C187	transmission – Valeo, wagon, as of 01/2004	
C187	transmission – Valeo, wagon, before 01/2004	

C187	transmission – With rear window wiper	
C187	transmission	
C188	engine compartment, RH side, centre – 1.8/2.0L Duratec–HE (MI4)	4 – B 5
C188	engine compartment, RH side, centre – 2.5L Duratec–VE (VE6)	4 – B 5
C188	engine compartment, RH side, centre, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – B 5
C188	engine compartment, RH side, centre, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – B 5
C188	engine compartment, RH side, centre – F40, 1.8/2.0L Duratec–HE (MI4)	4 – B 5
C188	engine compartment, RH side, centre – F40, 2.5L Duratec–VE (VE6)	4 – B 5
C188	engine compartment, RH side, centre, 3.0L Duratec–SE (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – B 5
C188	engine compartment, RH side, centre, 3.0L Duratec–ST (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – B 5
C190	engine – 1.8/2.0L Duratec–HE (MI4)	60 – A 2
C190	engine – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission	60 – A 2
C190	engine – 1.8/2.0L Duratec–HE (MI4)	61 – A 2
C190	engine – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – A 2
C190	engine – 1.8L Duratec–SCi (MI4), as of 04/2004	
C190	engine – 1.8L Duratec–SCi (MI4), before 04/2004	
C190	engine – F42, 1.8L Duratec–SCi (MI4)	
C192	in exhaust system – 2.5L Duratec–VE (VE6)	63 – A 2
C192	in exhaust system – F37, 2.5L Duratec–VE (VE6)	63 – A 2
C192	in exhaust system – 2.5L Duratec–VE (VE6)	65 – C 1
C192	in exhaust system – F37, 2.5L Duratec–VE (VE6)	65 – C 1
C192	in exhaust system – F37, 3.0L Duratec–ST (VE6), as of 04/2004	67 – D 5
C192	in exhaust system – F37, 3.0L Duratec–ST (VE6), before 04/2004	67 – D 5
C192	in exhaust system – F37, 3.0L Duratec–SE (VE6)	79 – C 5
C192	in exhaust system – 3.0L Duratec–SE (VE6)	
C192	in exhaust system – 3.0L Duratec–ST (VE6), as of 04/2004	
C192	in exhaust system – 3.0L Duratec–ST (VE6), before 04/2004	
C193	engine compartment, RH side, centre – 1.8L Duratec–SCi (MI4), as of 04/2004	
C193	engine compartment, RH side, centre – 1.8L Duratec–SCi (MI4), before 04/2004	
C193	engine compartment, RH side, centre – F42, 1.8L Duratec–SCi (MI4)	
C194	engine compartment, front, centre – 1.8/2.0L Duratec–HE (MI4)	8 – D 5
C194	engine compartment, front, centre – 1.8L Duratec–SCi (MI4)	8 – D 5
C194	engine compartment, front, centre – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	8 – D 5
C194	engine compartment, front, centre – 1.8/2.0L Duratec–HE (MI4)	9 – B 2
C194	engine compartment, front, centre – 2.5L Duratec–VE (VE6),automatic transmission	9 – B 2
C194	engine compartment, front, centre – 3.0L Duratec–ST (VE6)	9 – B 2
C194	engine compartment, front, centre – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	9 – B 2
C194	engine compartment, front, centre – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	9 – B 2
C194	engine compartment, front, centre – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	
C195	wheelwell, front, LH side – Headlamp Levelling, with high intensity discharge headlamps	7 – D 1

C196	LH A–pillar – 5–speed automatic transmission (5F31J)	16 – E 3
C196	LH A–pillar – 5–speed automatic transmission (5F31J), Diesel engines	16 – E 3
C196	LH A–pillar – 5–speed automatic transmission (5F31J), Petrol engines	16 – E 3
C196	LH A–pillar – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	16 – E 3
C196	LH A–pillar – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	16 – E 3
C196	LH A–pillar – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	16 – E 3
C196	LH A–pillar – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	16 – E 3
C196	LH A–pillar – F17	16 – E 3
C197	LH A–pillar – 5–speed automatic transmission (5F31J)	16 – E 3
C197	LH A–pillar – 5–speed automatic transmission (5F31J), Diesel engines	16 – E 3
C197	LH A–pillar – 5–speed automatic transmission (5F31J), Petrol engines	16 – E 3
C197	LH A–pillar – Data link connector, pin 7	16 – E 3
C197	LH A–pillar – F30, F31, F32, F33, Diesel engines	16 – E 3
C197	LH A–pillar – F30, F31, F32, Petrol engines	16 – E 3
C199	in exhaust system – 3.0L Duratec–ST (VE6), as of 04/2004	67 – B 1
C199	in exhaust system – 3.0L Duratec–ST (VE6), before 04/2004	67 – B 1
C199	in exhaust system – F37, 3.0L Duratec–ST (VE6), as of 04/2004	67 – B 1
C199	in exhaust system – F37, 3.0L Duratec–ST (VE6), before 04/2004	67 – B 1
C199	in exhaust system – 1.8L Duratec–SCi (MI4)	
C199	in exhaust system – F37, 1.8L Duratec–SCi (MI4)	
C200	on engine bulkhead, RH side – 1.8L Duratec–SCi (MI4)	3 – D 1
C200	on engine bulkhead, RH side – 1.8L Duratec–SCi (MI4), as of 04/2004	3 – D 1
C200	on engine bulkhead, RH side – 1.8L Duratec–SCi (MI4), before 04/2004	3 – D 1
C200	on engine bulkhead, RH side – Auto–dimming interior mirror	3 – D 1
C200	on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	3 – D 1
C200	on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	3 – D 1
C200	on engine bulkhead, RH side – DVD navigation system with touch screen	3 – D 1
C200	on engine bulkhead, RH side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	3 – D 1
C200	on engine bulkhead, RH side – F30, F31, F32, Petrol engines	3 – D 1
C200	on engine bulkhead, RH side – F42, 1.8L Duratec–SCi (MI4)	3 – D 1
C200	on engine bulkhead, RH side – F67, 1.8L Duratec–SCi (MI4)	3 – D 1
C200	on engine bulkhead, RH side – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	3 – D 1
C200	on engine bulkhead, RH side – G106, 1.8L Duratec–SCi (MI4), before 04/2004	3 – D 1
C200	on engine bulkhead, RH side – Petrol engines	3 – D 1
C200	on engine bulkhead, RH side – Petrol engines, except 3.0L Duratec–SE (VE6)	3 – D 1
C200	on engine bulkhead, RH side – Pre–equipment pack, Petrol engines	3 – D 1
C200	on engine bulkhead, RH side – Reversing lamps, without trailer socket, 4–door model/5–door model	3 – D 1
C200	on engine bulkhead, RH side – Reversing lamps, without trailer socket, wagon	3 – D 1
C200	on engine bulkhead, RH side – Valeo, 4–door model/5–door model, as of 01/2004	3 – D 1
C200	on engine bulkhead, RH side – Valeo, 4–door model/5–door model, before 01/2004	3 – D 1
C200	on engine bulkhead, RH side – Valeo, wagon, as of 01/2004	3 – D 1
C200	on engine bulkhead, RH side – Valeo, wagon, before 01/2004	3 – D 1
C200	on engine bulkhead, RH side	3 – D 1

C200	on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel	5 – D 5
C200	on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	5 – D 5
C200	on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	5 – D 5
C200	on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel	5 – D 5
C200	on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	5 – D 5
C200	on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III	5 – D 5
C200	on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model	5 – D 5
C200	on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), Diesel engines	5 – D 5
C200	on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), wagon	5 – D 5
C200	on engine bulkhead, RH side – Auto–dimming interior mirror	5 – D 5
C200	on engine bulkhead, RH side – Bosch, 4–door model/5–door model	5 – D 5
C200	on engine bulkhead, RH side – Bosch, wagon	5 – D 5
C200	on engine bulkhead, RH side – Data link connector, pins 2 and 10, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	5 – D 5
C200	on engine bulkhead, RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	5 – D 5
C200	on engine bulkhead, RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	5 – D 5
C200	on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	5 – D 5
C200	on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	5 – D 5
C200	on engine bulkhead, RH side – Diesel engines	5 – D 5
C200	on engine bulkhead, RH side – Diesel engines, With electric coolant heater, before 12/2003	5 – D 5
C200	on engine bulkhead, RH side – DVD navigation system with touch screen	5 – D 5
C200	on engine bulkhead, RH side – F42, Diesel engines	5 – D 5
C200	on engine bulkhead, RH side – F67, Diesel engines	5 – D 5
C200	on engine bulkhead, RH side – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	5 – D 5
C200	on engine bulkhead, RH side – Pre–equipment pack, Diesel engines	5 – D 5
C200	on engine bulkhead, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	5 – D 5
C200	on engine bulkhead, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	5 – D 5
C200	on engine bulkhead, RH side – Reversing lamps, with trailer socket, wagon, as of 01/2004	5 – D 5
C200	on engine bulkhead, RH side – Reversing lamps, with trailer socket, wagon, before 01/2004	5 – D 5
C200	on engine bulkhead, RH side – Reversing lamps, without trailer socket, 4–door model/5–door model	5 – D 5
C200	on engine bulkhead, RH side – Reversing lamps, without trailer socket, wagon	5 – D 5
C200	on engine bulkhead, RH side	5 – D 5

C201	cylinder head – 1.8/2.0L Duratec–HE (MI4)	
C201	cylinder head – 1.8L Duratec–SCi (MI4)	
C201	cylinder head – 2.5L Duratec–VE (VE6)	
C201	cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C201	cylinder head – F40, 1.8/2.0L Duratec–HE (MI4)	
C201	cylinder head – F40, 2.5L Duratec–VE (VE6)	
C201	cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C202	cylinder head – 1.8/2.0L Duratec–HE (MI4)	
C202	cylinder head – 1.8L Duratec–SCi (MI4)	
C202	cylinder head – 2.5L Duratec–VE (VE6)	
C202	cylinder head, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C202	cylinder head, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C202	cylinder head – F40, 1.8/2.0L Duratec–HE (MI4)	
C202	cylinder head – F40, 2.5L Duratec–VE (VE6)	
C202	cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C203	cylinder head – 1.8/2.0L Duratec–HE (MI4)	
C203	cylinder head – 1.8L Duratec–SCi (MI4)	
C203	cylinder head – 2.5L Duratec–VE (VE6)	
C203	cylinder head – F40, 1.8/2.0L Duratec–HE (MI4)	
C203	cylinder head – F40, 2.5L Duratec–VE (VE6)	
C203	cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C204	cylinder head – 1.8/2.0L Duratec–HE (MI4)	
C204	cylinder head – 1.8L Duratec–SCi (MI4)	
C204	cylinder head – 2.5L Duratec–VE (VE6)	
C204	cylinder head – F40, 1.8/2.0L Duratec–HE (MI4)	
C204	cylinder head – F40, 2.5L Duratec–VE (VE6)	
C205	cylinder head – 2.5L Duratec–VE (VE6)	
C205	cylinder head, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C205	cylinder head, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C205	cylinder head – F40, 2.5L Duratec–VE (VE6)	
C205	cylinder head, 3.0L Duratec–SE (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C205	cylinder head, 3.0L Duratec–ST (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C206	cylinder head – 2.5L Duratec–VE (VE6)	
C206	cylinder head, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C206	cylinder head – F40, 2.5L Duratec–VE (VE6)	
C206	cylinder head, 3.0L Duratec–SE (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C206	cylinder head, 3.0L Duratec–ST (VE6) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C207	front bumper, LH side – Fog lamps, without trailer socket, 4–door model/5–door model	1 – B 2
C207	front bumper, LH side – Fog lamps, without trailer socket, wagon	1 – B 2
C207	front bumper, LH side – G104	1 – B 2

C207	front bumper, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	1 – B 2
C207	front bumper, LH side – Light switch, Fog lamps, with trailer socket, wagon	1 – B 2
C207	front bumper, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	1 – B 2
C207	front bumper, LH side – Light switch, Fog lamps, without trailer socket, wagon	1 – B 2
C208	front bumper, RH side – Fog lamps, without trailer socket, 4–door model/5–door model	1 – E 2
C208	front bumper, RH side – Fog lamps, without trailer socket, wagon	1 – E 2
C208	front bumper, RH side – G104	1 – E 2
C208	front bumper, RH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	1 – E 2
C208	front bumper, RH side – Light switch, Fog lamps, with trailer socket, wagon	1 – E 2
C208	front bumper, RH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	1 – E 2
C208	front bumper, RH side – Light switch, Fog lamps, without trailer socket, wagon	1 – E 2
C210	engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – A 4
C210	engine – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	70 – A 4
C210	engine – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	
C210	engine – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	
C211	engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	
C212	engine compartment, Common Rail – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	72 – A 4
C212	engine compartment, Common Rail – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III	72 – A 4
C212	engine compartment, Common Rail – F40, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	72 – A 4
C212	engine compartment, Common Rail – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	73 – A 3
C213	engine compartment, Common Rail – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	72 – A 4
C214	engine compartment, Common Rail – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	72 – A 4
C214	engine compartment – 1.8L Duratec–SCi (MI4)	
C215	engine, front, LH side – 1.8L Duratec–SCi (MI4)	
C217	in driver's seat back rest, LH side – Side air bag	41 – D 3
C217	in driver's seat back rest, LH side – Side air bag	43 – C 3
C218	in passenger's seat back rest, RH side – Side air bag	42 – B 2
C218	in passenger's seat back rest, RH side – Side air bag	44 – D 3
C221	engine, top – 1.8L Duratec–SCi (MI4)	75 – A 5
C221	engine, top – F67, 1.8L Duratec–SCi (MI4)	75 – A 5
C221	engine, top – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	75 – A 5
C221	engine, top – G106, 1.8L Duratec–SCi (MI4), before 04/2004	75 – A 5
C221	engine, top – G109	75 – A 5
C222	engine, top – 1.8L Duratec–SCi (MI4)	75 – C 5
C222	engine, top – F67, 1.8L Duratec–SCi (MI4)	75 – C 5
C222	engine, top – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	75 – C 5
C222	engine, top – G106, 1.8L Duratec–SCi (MI4), before 04/2004	75 – C 5
C222	engine, top – G109	75 – C 5

C223	engine, top – 1.8L Duratec–SCi (MI4)	75 – C 5
C223	engine, top – F67, 1.8L Duratec–SCi (MI4)	75 – C 5
C223	engine, top – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	75 – C 5
C223	engine, top – G106, 1.8L Duratec–SCi (MI4), before 04/2004	75 – C 5
C223	engine, top – G109	75 – C 5
C224	engine, top – 1.8L Duratec–SCi (MI4)	75 – D 5
C224	engine, top – F67, 1.8L Duratec–SCi (MI4)	75 – D 5
C224	engine, top – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	75 – D 5
C224	engine, top – G106, 1.8L Duratec–SCi (MI4), before 04/2004	75 – D 5
C224	engine, top – G109	75 – D 5
C225	transmission – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C225	transmission – 2.5L Duratec–VE (VE6)	
C225	transmission – 5–speed automatic transmission (5F31J)	
C225	transmission – 5–speed automatic transmission (5F31J), 4–door model/5–door model	
C225	transmission – 5–speed automatic transmission (5F31J), wagon	
C225	transmission – F17	
C225	transmission	
C226	engine compartment – Data link connector, pin 7	4 – F 4
C226	engine compartment – G104	4 – F 4
C226	engine compartment – Headlamps, Low beam, with high intensity discharge headlamps	4 – F 4
C226	engine compartment – With high intensity discharge headlamps	4 – F 4
C226	engine compartment – Data link connector, pin 7	6 – F 4
C226	engine compartment – G104	6 – F 4
C226	engine compartment – Headlamps, Low beam, with high intensity discharge headlamps	6 – F 4
C226	engine compartment – With high intensity discharge headlamps	6 – F 4
C252	on engine bulkhead, RH side – Data link connector, pin 7	
C252	on engine bulkhead, RH side – Diesel engines	
C252	on engine bulkhead, RH side – Diesel engines, with fuel fired heater	
C252	on engine bulkhead, RH side – Diesel engines, with fuel fired heater, as of 08/2004	
C252	on engine bulkhead, RH side – F22, F23, Diesel engines	
C252	on engine bulkhead, RH side – F82, Diesel engines	
C252	on engine bulkhead, RH side – G104	
C300	engine – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	
C300	engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	
C300	engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	
C300	engine – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C300	engine – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C304	front, RH side – G105	
C304	front, RH side	
C400	on steering column – 1.8/2.0L Duratec–HE (MI4)	37 – C 1
C400	on steering column – 1.8L Duratec–SCi (MI4)	37 – C 1
C400	on steering column – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	37 – C 1

C400	on steering column – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	37 – C 1
C400	on steering column – 2.5L Duratec–VE (VE6)	37 – C 1
C400	on steering column – 3.0L Duratec–SE (VE6)	37 – C 1
C400	on steering column – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	37 – C 1
C400	on steering column – 3.0L Duratec–ST (VE6)	37 – C 1
C400	on steering column – 4–speed automatic transmission (CD4E)	37 – C 1
C400	on steering column – 5–speed automatic transmission (5F31J)	37 – C 1
C400	on steering column – Climate controlled front seats	37 – C 1
C400	on steering column – F28, F29	37 – C 1
C400	on steering column – Heated front seats	37 – C 1
C400	on steering column – Ignition switch automatic transmission	37 – C 1
C400	on steering column – Ignition switch manual transmission	37 – C 1
C400	on steering column – Light switch, with autolamps	37 – C 1
C400	on steering column – Light switch, without autolamps	37 – C 1
C400	on steering column – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	37 – C 1
C400	on steering column – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	37 – C 1
C400	on steering column – Parking Lamps, with trailer socket, wagon, with autolamps	37 – C 1
C400	on steering column – Parking Lamps, with trailer socket, wagon, without autolamps	37 – C 1
C400	on steering column – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	37 – C 1
C400	on steering column – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	37 – C 1
C400	on steering column – Parking Lamps, without trailer socket, wagon, with autolamps	37 – C 1
C400	on steering column – Parking Lamps, without trailer socket, wagon, without autolamps	37 – C 1
C400	on steering column – with autolamps	37 – C 1
C400	on steering column – without daytime running lamps, without autolamps	37 – C 1
C400	on steering column	37 – C 1
C401	centre console – with external CD changer and/or video system	
C401	centre console – without external CD changer and video system	
C402	dash panel, driver side – 1.8L Duratec–SCi (MI4)	
C402	dash panel, driver side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	
C402	dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C406	on brake pedal support – 1.8L Duratec–SCi (MI4)	28 – B 2
C406	on brake pedal support – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	28 – B 2
C406	on brake pedal support – Diesel engines	28 – B 2
C406	on brake pedal support – F93	28 – B 2
C406	on brake pedal support – Petrol engines, except 1.8L Duratec–SCi (MI4)	28 – B 2
C409	behind loading space lining, RH side – F70	52 – A 3
C409	behind loading space lining, RH side – G205	52 – A 3
C409	behind loading space lining, RH side – Rear power point	52 – A 3
C410	centre console – Cigar lighter	
C410	centre console	
C411	centre console – Cigar lighter	
C411	centre console – F68	

C411	centre console – G204, as of 04/2004	
C411	centre console – G204, before 04/2004	
C411	centre console	
C412	dash panel, centre – 1.8/2.0L Duratec–HE (MI4)	23 – E 5
C412	dash panel, centre – 1.8L Duratec–SCi (MI4)	23 – E 5
C412	dash panel, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	23 – E 5
C412	dash panel, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	23 – E 5
C412	dash panel, centre – 2.5L Duratec–VE (VE6)	23 – E 5
C412	dash panel, centre – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	23 – E 5
C412	dash panel, centre – Diesel engines	23 – E 5
C412	dash panel, centre – F75, 5–speed automatic transmission (5F31J)	23 – E 5
C412	dash panel, centre – F75, except 5–speed automatic transmission (5F31J)	23 – E 5
C412	dash panel, centre – G204, as of 04/2004	23 – E 5
C412	dash panel, centre – G204, before 04/2004	23 – E 5
C412	dash panel, centre – LHD	23 – E 5
C412	dash panel, centre – Petrol engines	23 – E 5
C412	dash panel, centre	23 – E 5
C412	dash panel, centre – 1.8/2.0L Duratec–HE (MI4)	25 – E 5
C412	dash panel, centre – 1.8L Duratec–SCi (MI4)	25 – E 5
C412	dash panel, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	25 – E 5
C412	dash panel, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	25 – E 5
C412	dash panel, centre – 2.5L Duratec–VE (VE6)	25 – E 5
C412	dash panel, centre – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	25 – E 5
C412	dash panel, centre – Diesel engines	25 – E 5
C412	dash panel, centre – F75, 5–speed automatic transmission (5F31J)	25 – E 5
C412	dash panel, centre – F75, except 5–speed automatic transmission (5F31J)	25 – E 5
C412	dash panel, centre – G204, as of 04/2004	25 – E 5
C412	dash panel, centre – G204, before 04/2004	25 – E 5
C412	dash panel, centre – Petrol engines	25 – E 5
C412	dash panel, centre – RHD	25 – E 5
C412	dash panel, centre	25 – E 5
C413	in steering wheel – 1.8L Duratec–SCi (MI4)	37 – A 3
C413	in steering wheel – 1.8L Duratec–SCi (MI4), as of 04/2004	37 – A 3
C413	in steering wheel – 1.8L Duratec–SCi (MI4), before 04/2004	37 – A 3
C413	in steering wheel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	37 – A 3
C413	in steering wheel – 5–speed automatic transmission (5F31J)	37 – A 3
C413	in steering wheel – Diesel engines	37 – A 3
C413	in steering wheel – Driver air bag	37 – A 3
C413	in steering wheel – F82, Diesel engines	37 – A 3
C413	in steering wheel – F82, Petrol engines	37 – A 3
C413	in steering wheel – G203	37 – A 3
C413	in steering wheel – Petrol engines, except 1.8L Duratec–SCi (MI4)	37 – A 3
C413	in steering wheel	37 – A 3
C414	on clutch pedal support – 1.8/2.0L Duratec–HE (MI4), manual transmission	28 – B 3
C414	on clutch pedal support – 1.8L Duratec–SCi (MI4)	28 – B 3
C414	on clutch pedal support – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	28 – B 3
C414	on clutch pedal support – 2.0L Duratorq–TDCi (Puma) Diesel	28 – B 3

C414	on clutch pedal support – 2.2L Duratorq–TDCi (Puma) Diesel	28 – B 3
C414	on clutch pedal support – 2.5L Duratec–VE (VE6), manual transmission	28 – B 3
C414	on clutch pedal support – 3.0L Duratec–SE (VE6)	28 – B 3
C414	on clutch pedal support – 3.0L Duratec–ST (VE6)	28 – B 3
C414	on clutch pedal support – Diesel engines	28 – B 3
C414	on clutch pedal support – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	28 – B 3
C414	on clutch pedal support – G106, 1.8L Duratec–SCi (MI4), before 04/2004	28 – B 3
C414	on clutch pedal support – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	28 – B 3
C414	on clutch pedal support – Petrol engines, except 1.8L Duratec–SCi (MI4)	28 – B 3
C415	behind dash panel – 5–speed automatic transmission (5F31J)	
C415	behind dash panel – Diesel engines	
C415	behind dash panel – F75, 5–speed automatic transmission (5F31J)	
C415	behind dash panel – F82, Diesel engines	
C415	behind dash panel – F82, Petrol engines	
C415	behind dash panel – G203	
C415	behind dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4)	
C415	behind dash panel	
C418	dash panel (LHD), LH side – 1.8/2.0L Duratec–HE (MI4), automatic transmission	23 – E 2
C418	dash panel (LHD), LH side – 1.8/2.0L Duratec–HE (MI4), manual transmission	23 – E 2
C418	dash panel (LHD), LH side – 1.8L Duratec–SCi (MI4)	23 – E 2
C418	dash panel (LHD), LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	23 – E 2
C418	dash panel (LHD), LH side – 2.0L Duratorq–TDCi (Puma) Diesel	23 – E 2
C418	dash panel (LHD), LH side – 2.2L Duratorq–TDCi (Puma) Diesel	23 – E 2
C418	dash panel (LHD), LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	23 – E 2
C418	dash panel (LHD), LH side – 2.5L Duratec–VE (VE6)	23 – E 2
C418	dash panel (LHD), LH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	23 – E 2
C418	dash panel (LHD), LH side – 5–speed automatic transmission (5F31J), Diesel engines	23 – E 2
C418	dash panel (LHD), LH side – 5–speed automatic transmission (5F31J), Petrol engines	23 – E 2
C418	dash panel (LHD), LH side – as of 08/2004	23 – E 2
C418	dash panel (LHD), LH side – before 08/2004	23 – E 2
C418	dash panel (LHD), LH side – Bluetooth voice control	23 – E 2
C418	dash panel (LHD), LH side – Bosch 8.0	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pin 7	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 2 and 10, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 2, 10 and 13, Diesel engines, except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4)	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 3 and 11, with external CD changer and video system	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 3 and 11, with external CD changer or video system	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 3 and 11, with voice control	23 – E 2

C418	dash panel (LHD), LH side – Data link connector, pins 3 and 11, without external CD changer and video system	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 4, 5 and 16	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	23 – E 2
C418	dash panel (LHD), LH side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	23 – E 2
C418	dash panel (LHD), LH side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	23 – E 2
C418	dash panel (LHD), LH side – Diesel engines, with fuel fired heater	23 – E 2
C418	dash panel (LHD), LH side – Diesel engines, with fuel fired heater, as of 08/2004	23 – E 2
C418	dash panel (LHD), LH side – DVD navigation system with touch screen	23 – E 2
C418	dash panel (LHD), LH side – EATC, as of 04/2004	23 – E 2
C418	dash panel (LHD), LH side – EATC, before 04/2004	23 – E 2
C418	dash panel (LHD), LH side – F72, with external CD changer and/or video system	23 – E 2
C418	dash panel (LHD), LH side – F72, without external CD changer and video system	23 – E 2
C418	dash panel (LHD), LH side – G203	23 – E 2
C418	dash panel (LHD), LH side – G204, as of 04/2004	23 – E 2
C418	dash panel (LHD), LH side – G204, before 04/2004	23 – E 2
C418	dash panel (LHD), LH side – Headlamps, Low beam, with high intensity discharge headlamps	23 – E 2
C418	dash panel (LHD), LH side – Manual A/C, before 04/2004	23 – E 2
C418	dash panel (LHD), LH side – Petrol engines	23 – E 2
C418	dash panel (LHD), LH side – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	23 – E 2
C418	dash panel (LHD), LH side – Pre–equipment pack	23 – E 2
C418	dash panel (LHD), LH side – with external CD changer	23 – E 2
C418	dash panel (LHD), LH side – With high intensity discharge headlamps	23 – E 2
C418	dash panel (LHD), LH side – with video system	23 – E 2
C418	dash panel (LHD), LH side – without external CD changer and video system	23 – E 2
C418	dash panel (LHD), LH side	23 – E 2
C418	dash panel (RHD), RH side – 1.8/2.0L Duratec–HE (MI4), automatic transmission	25 – B 2
C418	dash panel (RHD), RH side – 1.8/2.0L Duratec–HE (MI4), manual transmission	25 – B 2
C418	dash panel (RHD), RH side – 1.8L Duratec–SCi (MI4)	25 – B 2
C418	dash panel (RHD), RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	25 – B 2
C418	dash panel (RHD), RH side – 2.0L Duratorq–TDCi (Puma) Diesel	25 – B 2
C418	dash panel (RHD), RH side – 2.2L Duratorq–TDCi (Puma) Diesel	25 – B 2
C418	dash panel (RHD), RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	25 – B 2

C418	dash panel (RHD), RH side – 2.5L Duratec–VE (VE6)	25 – B 2
C418	dash panel (RHD), RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	25 – B 2
C418	dash panel (RHD), RH side – 5–speed automatic transmission (5F31J), Diesel engines	25 – B 2
C418	dash panel (RHD), RH side – 5–speed automatic transmission (5F31J), Petrol engines	25 – B 2
C418	dash panel (RHD), RH side – as of 08/2004	25 – B 2
C418	dash panel (RHD), RH side – before 08/2004	25 – B 2
C418	dash panel (RHD), RH side – Bluetooth voice control	25 – B 2
C418	dash panel (RHD), RH side – Bosch 8.0	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pin 7	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 2 and 10, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 2, 10 and 13, Diesel engines, except 2.2L Duratorq–TDCi (Puma) Diesel, except 2.0L Duratorq–TDCi (Puma) Diesel	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 2, 10 and 13, Petrol engines, except 1.8L Duratec–SCi (MI4)	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 3 and 11, with external CD changer and video system	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 3 and 11, with external CD changer or video system	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 3 and 11, with voice control	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 3 and 11, without external CD changer and video system	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 4, 5 and 16	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	25 – B 2
C418	dash panel (RHD), RH side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	25 – B 2
C418	dash panel (RHD), RH side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	25 – B 2
C418	dash panel (RHD), RH side – Diesel engines, with fuel fired heater	25 – B 2
C418	dash panel (RHD), RH side – Diesel engines, with fuel fired heater, as of 08/2004	25 – B 2
C418	dash panel (RHD), RH side – DVD navigation system with touch screen	25 – B 2
C418	dash panel (RHD), RH side – EATC, as of 04/2004	25 – B 2
C418	dash panel (RHD), RH side – EATC, before 04/2004	25 – B 2
C418	dash panel (RHD), RH side – F72, with external CD changer and/or video system	25 – B 2
C418	dash panel (RHD), RH side – F72, without external CD changer and video system	25 – B 2

C418	dash panel (RHD), RH side – G203	25 – B 2
C418	dash panel (RHD), RH side – G204, as of 04/2004	25 – B 2
C418	dash panel (RHD), RH side – G204, before 04/2004	25 – B 2
C418	dash panel (RHD), RH side – Headlamps, Low beam, with high intensity discharge headlamps	25 – B 2
C418	dash panel (RHD), RH side – Manual A/C, before 04/2004	25 – B 2
C418	dash panel (RHD), RH side – Petrol engines	25 – B 2
C418	dash panel (RHD), RH side	25 – B 2
C418	dash panel (RHD), RH side – Pre–equipment pack	25 – B 2
C418	dash panel (RHD), RH side – with external CD changer	25 – B 2
C418	dash panel (RHD), RH side – With high intensity discharge headlamps	25 – B 2
C418	dash panel (RHD), RH side – with video system	25 – B 2
C418	dash panel (RHD), RH side – without external CD changer and video system	25 – B 2
C421	LH B–pillar – G200	45 – D 4
C421	LH B–pillar – LHD	45 – D 4
C421	LH B–pillar – RHD	45 – D 4
C421	LH B–pillar	45 – D 4
C422	in roof panel, rear – F99, 4–door model/5–door model	18 – E 5
C422	in roof panel, rear	18 – E 5
C422	in roof panel, rear – F99, 4–door model/5–door model	19 – E 4
C422	in roof panel, rear	19 – E 4
C422	in roof panel, rear – F99, wagon	20 – B 4
C422	in roof panel, rear	20 – B 4
C423	in roof panel, rear – G200	18 – E 5
C423	in roof panel, rear	18 – E 5
C423	in roof panel, rear – G200	19 – E 4
C423	in roof panel, rear	19 – E 4
C423	in roof panel, rear – G200	20 – B 4
C423	in roof panel, rear	20 – B 4
C424a	roof, front, centre – F99, 4–door model/5–door model	21 – C 2
C424a	roof, front, centre – F99, wagon	21 – C 2
C424a	roof, front, centre	21 – C 2
C424b	roof, front, centre – G200	21 – C 2
C424b	roof, front, centre	21 – C 2
C426	roof, front, centre – 3.0L Duratec–SE (VE6)	17 – B 2
C426	RH A–pillar – 3.0L Duratec–ST (VE6)	17 – B 2
C426	RH A–pillar – Diesel engines	17 – B 2
C426	RH A–pillar – Diesel engines, with fuel fired heater	17 – B 2
C426	RH A–pillar – Diesel engines, with fuel fired heater, as of 08/2004	17 – B 2
C426	RH A–pillar – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	17 – B 2
C426	RH A–pillar – F24, F25	17 – B 2
C426	RH A–pillar – Heated rear window, Heated exterior mirrors	17 – B 2
C426	RH A–pillar – Heated windshield	17 – B 2
C426	RH A–pillar – LHD	17 – B 2
C426	RH A–pillar – Petrol engines	17 – B 2
C426	RH A–pillar – RHD	17 – B 2
C426	RH A–pillar – Turn Signal and Hazard Lamps	17 – B 2
C426	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	17 – B 2
C426	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon	17 – B 2

C426	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	17 – B 2
C426	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon	17 – B 2
C426	RH A–pillar – with rain sensor	17 – B 2
C426	RH A–pillar – with variable intermittent wipe	17 – B 2
C426	RH A–pillar	17 – B 2
C427	RH A–pillar – G205	17 – B 2
C427	RH A–pillar – Heated rear window, Heated exterior mirrors	17 – B 2
C427	RH A–pillar – Heated windshield	17 – B 2
C427	RH A–pillar – LHD	17 – B 2
C427	RH A–pillar – RHD	17 – B 2
C427	RH A–pillar – Turn Signal and Hazard Lamps	17 – B 2
C427	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	17 – B 2
C427	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon	17 – B 2
C427	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	17 – B 2
C427	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon	17 – B 2
C427	RH A–pillar	17 – B 2
C428	RH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	17 – B 2
C428	RH A–pillar – 4–speed automatic transmission (CD4E), 4–door model/5–door model	17 – B 2
C428	RH A–pillar – 4–speed automatic transmission (CD4E), wagon	17 – B 2
C428	RH A–pillar – 5–speed automatic transmission (5F31J), 4–door model/5–door model	17 – B 2
C428	RH A–pillar – 5–speed automatic transmission (5F31J), wagon	17 – B 2
C428	RH A–pillar – Diesel engines	17 – B 2
C428	RH A–pillar – front and rear power windows, Driver side front	17 – B 2
C428	RH A–pillar – front and rear power windows, LH rear door	17 – B 2
C428	RH A–pillar – front and rear power windows, Passenger side front	17 – B 2
C428	RH A–pillar – front and rear power windows, RH rear door	17 – B 2
C428	RH A–pillar – Front power windows, Driver side	17 – B 2
C428	RH A–pillar – Front power windows, Passenger side	17 – B 2
C428	RH A–pillar – LHD	17 – B 2
C428	RH A–pillar – Petrol engines	17 – B 2
C428	RH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	17 – B 2
C428	RH A–pillar – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	17 – B 2
C428	RH A–pillar – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	17 – B 2
C428	RH A–pillar – Reversing lamps, with trailer socket, wagon, before 01/2004	17 – B 2
C428	RH A–pillar – Reversing lamps, without trailer socket, 4–door model/5–door model	17 – B 2
C428	RH A–pillar – Reversing lamps, without trailer socket, wagon	17 – B 2
C428	RH A–pillar – RHD	17 – B 2
C428	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	17 – B 2
C428	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon	17 – B 2

C428	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	17 – B 2
C428	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon	17 – B 2
C428	RH A–pillar – With rear window wiper	17 – B 2
C428	RH A–pillar	17 – B 2
C429	RH A–pillar – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	17 – B 2
C429	RH A–pillar – 4–speed automatic transmission (CD4E)	17 – B 2
C429	RH A–pillar – 5–speed automatic transmission (5F31J)	17 – B 2
C429	RH A–pillar – Data link connector, pin 7	17 – B 2
C429	RH A–pillar – DVD navigation system with touch screen	17 – B 2
C429	RH A–pillar – F97	17 – B 2
C429	RH A–pillar – G203	17 – B 2
C429	RH A–pillar – Heated rear window, Heated exterior mirrors	17 – B 2
C429	RH A–pillar – Heated windshield	17 – B 2
C429	RH A–pillar – Ignition switch automatic transmission	17 – B 2
C429	RH A–pillar – LHD	17 – B 2
C429	RH A–pillar – Licence plate lamps	17 – B 2
C429	RH A–pillar – Petrol engines	17 – B 2
C429	RH A–pillar – Pre–equipment pack	17 – B 2
C429	RH A–pillar – RHD	17 – B 2
C429	RH A–pillar – Turn Signal and Hazard Lamps	17 – B 2
C429	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	17 – B 2
C429	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon	17 – B 2
C429	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	17 – B 2
C429	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon	17 – B 2
C429	RH A–pillar – with autolamps	17 – B 2
C429	RH A–pillar – with daytime running lamps	17 – B 2
C429	RH A–pillar – with external CD changer and/or video system	17 – B 2
C429	RH A–pillar – With rear window wiper, with headlamp washer	17 – B 2
C429	RH A–pillar – With rear window wiper, without headlamp washer	17 – B 2
C429	RH A–pillar – with variable intermittent wipe	17 – B 2
C429	RH A–pillar – without daytime running lamps, without autolamps	17 – B 2
C429	RH A–pillar – without external CD changer and video system	17 – B 2
C429	RH A–pillar – Without rear window wiper, with headlamp washer	17 – B 2
C429	RH A–pillar – Without rear window wiper, without headlamp washer	17 – B 2
C429	RH A–pillar	17 – B 2
C430	RH A–pillar – Data link connector, pins 3 and 11, with external CD changer and video system	17 – B 2
C430	RH A–pillar – Data link connector, pins 3 and 11, with external CD changer or video system	17 – B 2
C430	RH A–pillar – Data link connector, pins 3 and 11, with voice control	17 – B 2
C430	RH A–pillar – Data link connector, pins 3 and 11, without external CD changer and video system	17 – B 2
C430	RH A–pillar – Heated rear window, Heated exterior mirrors	17 – B 2
C430	RH A–pillar – LHD	17 – B 2
C430	RH A–pillar – RHD	17 – B 2
C430	RH A–pillar – Turn Signal and Hazard Lamps	17 – B 2
C430	RH A–pillar – with autolamps	17 – B 2

C430	RH A–pillar – with daytime running lamps	17 – B 2
C430	RH A–pillar – With rear window wiper	17 – B 2
C430	RH A–pillar – With rear window wiper, with headlamp washer	17 – B 2
C430	RH A–pillar – With rear window wiper, without headlamp washer	17 – B 2
C430	RH A–pillar – with variable intermittent wipe	17 – B 2
C430	RH A–pillar – without daytime running lamps, without autolamps	17 – B 2
C430	RH A–pillar	17 – B 2
C436	in glove compartment – F97	23 – C 3
C436	in glove compartment	23 – C 3
C436	in glove compartment – F97	25 – E 1
C436	in glove compartment	25 – E 1
C437	in glove compartment – G204, as of 04/2004	15 – A 2
C437	in glove compartment – G204, before 04/2004	15 – A 2
C437	in glove compartment	15 – A 2
C437	in glove compartment – G204, as of 04/2004	24 – D 2
C437	in glove compartment – G204, before 04/2004	24 – D 2
C437	in glove compartment	24 – D 2
C439	LH A–pillar, on Central Junction Box (CJB) – F22, F23, Diesel engines	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – F22, F23, petrol engines	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – F95, F96	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – G104	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – Light switch, without daytime running lamps, without high intensity discharge headlamps	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – with high intensity discharge headlamps	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – With rear window wiper, with headlamp washer	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – without high intensity discharge headlamps	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB) – Without rear window wiper, with headlamp washer	32 – B 2
C439	LH A–pillar, on Central Junction Box (CJB)	32 – B 2
C442	behind dash panel, centre – EATC, as of 04/2004	14 – F 2
C442	behind dash panel, centre – F76, F77, as of 04/2004	14 – F 2
C442	behind dash panel, centre – Manual A/C, before 04/2004	14 – F 2
C442	behind dash panel, centre	14 – F 2
C442	behind dash panel, centre – EATC, as of 04/2004	15 – B 1
C442	behind dash panel, centre – F76, F77, as of 04/2004	15 – B 1
C442	behind dash panel, centre – Manual A/C, before 04/2004	15 – B 1
C442	behind dash panel, centre	15 – B 1
C443	LH A–pillar, bottom – Manual A/C, before 04/2004	16 – B 2
C447	LH A–pillar, bottom – 1.8/2.0L Duratec–HE (MI4)	16 – B 2

C447	LH A–pillar, bottom – 1.8L Duratec–SCi (MI4)	16 – B 2
C447	LH A–pillar, bottom – 2.5L Duratec–VE (VE6)	16 – B 2
C447	LH A–pillar, bottom – 3.0L Duratec–SE (VE6)	16 – B 2
C447	LH A–pillar, bottom – 3.0L Duratec–ST (VE6), as of 04/2004	16 – B 2
C447	LH A–pillar, bottom – 3.0L Duratec–ST (VE6), before 04/2004	16 – B 2
C447	LH A–pillar, bottom	16 – B 2
C448	centre console – G204, before 04/2004	
C448	centre console – Manual A/C, before 04/2004	
C449	dash panel, driver side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	23 – E 4
C449	dash panel, driver side – 2.0L Duratorq–TDCi (Puma) Diesel	23 – E 4
C449	dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel	23 – E 4
C449	dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	23 – E 4
C449	dash panel, driver side – 3.0L Duratec–SE (VE6)	23 – E 4
C449	dash panel, driver side – 3.0L Duratec–ST (VE6)	23 – E 4
C449	dash panel, driver side – 5–speed automatic transmission (5F31J)	23 – E 4
C449	dash panel, driver side – as of 08/2004	23 – E 4
C449	dash panel, driver side – before 08/2004	23 – E 4
C449	dash panel, driver side – Bosch 8.0	23 – E 4
C449	dash panel, driver side – Data link connector, pin 7	23 – E 4
C449	dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	23 – E 4
C449	dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	23 – E 4
C449	dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	23 – E 4
C449	dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	23 – E 4
C449	dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	23 – E 4
C449	dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	23 – E 4
C449	dash panel, driver side – Diesel engines	23 – E 4
C449	dash panel, driver side – Diesel engines, with fuel fired heater	23 – E 4
C449	dash panel, driver side – Diesel engines, with fuel fired heater, as of 08/2004	23 – E 4
C449	dash panel, driver side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	23 – E 4
C449	dash panel, driver side – F63, 4–door model/5–door model	23 – E 4
C449	dash panel, driver side – F63, wagon	23 – E 4
C449	dash panel, driver side – F69, with external CD changer and/or video system	23 – E 4
C449	dash panel, driver side – F69, without external CD changer and video system	23 – E 4
C449	dash panel, driver side – F75, 5–speed automatic transmission (5F31J)	23 – E 4
C449	dash panel, driver side – F75, except 5–speed automatic transmission (5F31J)	23 – E 4
C449	dash panel, driver side – F78, F80	23 – E 4
C449	dash panel, driver side – G203	23 – E 4
C449	dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	23 – E 4

C449 dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Heated windshield . . . . . 23 – E 4
C449 dash panel, driver side – Ignition switch automatic transmission . . . . . 23 – E 4
C449 dash panel, driver side – LHD . . . . . 23 – E 4
C449 dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Parking Lamps, with trailer socket, wagon, with autolamps 23 – E 4
C449 dash panel, driver side – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 23 – E 4
C449 dash panel, driver side – Petrol engines . . . . . 23 – E 4
C449 dash panel, driver side – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 23 – E 4
C449 dash panel, driver side – Turn Signal and Hazard Lamps . . . . . 23 – E 4
C449 dash panel, driver side – with autolamps . . . . . 23 – E 4
C449 dash panel, driver side – with daytime running lamps . . . . . 23 – E 4
C449 dash panel, driver side – with trailer socket, 4–door model/5–door model . . . . . 23 – E 4
C449 dash panel, driver side – with trailer socket, wagon . . . . . 23 – E 4
C449 dash panel, driver side – without daytime running lamps, without autolamps . . . . . 23 – E 4
C449 dash panel, driver side – without trailer socket, 4–door model/5–door model . . . . . 23 – E 4
C449 dash panel, driver side – without trailer socket, wagon . . . . . 23 – E 4
C449 dash panel, driver side . . . . . 23 – E 4
C449 dash panel, driver side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 25 – C 5
C449 dash panel, driver side – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – C 5
C449 dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 25 – C 5
C449 dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 25 – C 5
C449 dash panel, driver side – 3.0L Duratec–SE (VE6) . . . . . 25 – C 5
C449 dash panel, driver side – 3.0L Duratec–ST (VE6) . . . . . 25 – C 5
C449 dash panel, driver side – 5–speed automatic transmission (5F31J) . . . . . 25 – C 5
C449 dash panel, driver side – as of 08/2004 . . . . . 25 – C 5
C449 dash panel, driver side – before 08/2004 . . . . . 25 – C 5
C449 dash panel, driver side – Bosch 8.0 . . . . . 25 – C 5
C449 dash panel, driver side – Data link connector, pin 7 . . . . . 25 – C 5
C449 dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004 . . . . . 25 – C 5

C449 dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004 . . . . . 25 – C 5
C449 dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004 . . . . 25 – C 5
C449 dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004 . . . . . 25 – C 5
C449 dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004 . . . . . 25 – C 5
C449 dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004 . . . . . 25 – C 5
C449 dash panel, driver side – Diesel engines . . . . . 25 – C 5
C449 dash panel, driver side – Diesel engines, with fuel fired heater . . . . . 25 – C 5
C449 dash panel, driver side – Diesel engines, with fuel fired heater, as of 08/2004 . . . . . 25 – C 5
C449 dash panel, driver side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) . . . . . 25 – C 5
C449 dash panel, driver side – F63, 4–door model/5–door model . . . . . 25 – C 5
C449 dash panel, driver side – F63, wagon . . . . . 25 – C 5
C449 dash panel, driver side – F69, with external CD changer and/or video system . . . . . 25 – C 5
C449 dash panel, driver side – F69, without external CD changer and video system . . . . . 25 – C 5
C449 dash panel, driver side – F75, 5–speed automatic transmission (5F31J) . . . . . 25 – C 5
C449 dash panel, driver side – F75, except 5–speed automatic transmission (5F31J) . . . . . 25 – C 5
C449 dash panel, driver side – F78, F80 . . . . . 25 – C 5
C449 dash panel, driver side – G203 . . . . . 25 – C 5
C449 dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Heated windshield . . . . . 25 – C 5
C449 dash panel, driver side – Ignition switch automatic transmission . . . . . 25 – C 5
C449 dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Parking Lamps, with trailer socket, wagon, with autolamps 25 – C 5
C449 dash panel, driver side – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 25 – C 5
C449 dash panel, driver side – Petrol engines . . . . . 25 – C 5

C449	dash panel, driver side – Petrol engines, except 1.8L Duratec–SCi (MI4)	25 – C 5
C449	dash panel, driver side – RHD	25 – C 5
C449	dash panel, driver side – Turn Signal and Hazard Lamps	25 – C 5
C449	dash panel, driver side – with autolamps	25 – C 5
C449	dash panel, driver side – with daytime running lamps	25 – C 5
C449	dash panel, driver side – with trailer socket, 4–door model/5–door model	25 – C 5
C449	dash panel, driver side – with trailer socket, wagon	25 – C 5
C449	dash panel, driver side – without daytime running lamps, without autolamps	25 – C 5
C449	dash panel, driver side – without trailer socket, 4–door model/5–door model	25 – C 5
C449	dash panel, driver side – without trailer socket, wagon	25 – C 5
C449	dash panel, driver side	25 – C 5
C449	dash panel, driver side – 1.8L Duratec–SCi (MI4), as of 04/2004	
C449	dash panel, driver side – 1.8L Duratec–SCi (MI4), before 04/2004	
C452	in LH front footwell – F99, 4–door model/5–door model	23 – B 1
C452	in LH front footwell – F99, wagon	23 – B 1
C452	in LH front footwell	23 – B 1
C452	in LH front footwell – F99, 4–door model/5–door model	25 – F 4
C452	in LH front footwell – F99, wagon	25 – F 4
C452	in LH front footwell	25 – F 4
C453	LH B–pillar, bottom – Side air bag	45 – E 4
C453	RH B–pillar, bottom – Side air bag	46 – B 3
C455	dash panel, centre console, LH side – EATC	23 – F 5
C455	dash panel, centre console, LH side – F81	23 – F 5
C455	dash panel, centre console, LH side – EATC	26 – C 2
C455	dash panel, centre console, LH side – F81	26 – C 2
C456	LH C–pillar – G300	45 – C 5
C456	LH C–pillar – LHD	45 – C 5
C456	LH C–pillar – RHD	45 – C 5
C456	LH C–pillar	45 – C 5
C465	in luggage compartment, LH side – Data link connector, pins 3 and 11, with external CD changer and video system	
C465	in loading space, LH side – Data link connector, pins 3 and 11, with external CD changer or video system	
C465	in luggage compartment, LH side – DVD navigation system with touch screen	
C465	in loading space, LH side – DVD navigation system with touch screen	
C465	in luggage compartment, LH side – F71, except DVD navigation system with touch screen, with video system	
C465	in loading space, LH side – F71, except DVD navigation system with touch screen, with video system	
C465	in luggage compartment, LH side – F71, except DVD navigation system with touch screen, without video system	
C465	in loading space, LH side – F71, except DVD navigation system with touch screen, without video system	
C465	in luggage compartment, LH side – F71, with DVD navigation system with touch screen	
C465	in loading space, LH side – F71, with DVD navigation system with touch screen	
C465	in luggage compartment, LH side – G201, except DVD navigation system with touch screen, as of 04/2004	
C465	in loading space, LH side – G201, except DVD navigation system with touch screen, as of 04/2004	

C465	in luggage compartment, LH side – G201, except DVD navigation system with touch screen, before 04/2004	
C465	in loading space, LH side – G201, except DVD navigation system with touch screen, before 04/2004	
C465	in luggage compartment, LH side – G201, with DVD navigation system with touch screen, before 04/2004	
C465	in loading space, LH side – G201, with DVD navigation system with touch screen, before 04/2004	
C465	in luggage compartment, LH side – with external CD changer	
C465	in loading space, LH side – with external CD changer	
C465	in luggage compartment, LH side – without DVD navigation system with touch screen	
C465	in loading space, LH side – without DVD navigation system with touch screen	
C465	in luggage compartment, LH side	
C465	in loading space, LH side	
C473	roof, front, centre – Auto–dimming interior mirror	21 – C 1
C473	roof, front, centre – F91	21 – C 1
C473	roof, front, centre – G200	21 – C 1
C474	roof, rear, wagon – F99, wagon	20 – E 4
C474	roof, rear, wagon	20 – E 4
C475	below LH sun visor – F99, 4–door model/5–door model	21 – F 4
C475	below LH sun visor – F99, wagon	21 – F 4
C475	below LH sun visor – G200	21 – F 4
C475	below LH sun visor	21 – F 4
C476	below RH sun visor – F99, 4–door model/5–door model	21 – B 4
C476	below RH sun visor – F99, wagon	21 – B 4
C476	below RH sun visor – G200	21 – B 4
C476	below RH sun visor	21 – B 4
C477	in loading space, LH side, wagon – G200	20 – E 4
C477	in loading space, LH side, wagon	20 – E 4
C477	in luggage compartment, LH side, 4–door model – F99, 4–door model/5–door model	47 – C 5
C477	in luggage compartment, LH side, 4–door model – G200	47 – C 5
C477	in luggage compartment, LH side, 4–door model	47 – C 5
C477	in luggage compartment, LH side, 5–door model – F99, 4–door model/5–door model	
C477	in luggage compartment, LH side, 5–door model – G200	
C477	in luggage compartment, LH side, 5–door model	
C478	dash panel, driver side – 4–speed automatic transmission (CD4E)	23 – F 2
C478	dash panel, driver side – 5–speed automatic transmission (5F31J)	23 – F 2
C478	dash panel, driver side – Autolamps	23 – F 2
C478	dash panel, driver side – Cigar lighter	23 – F 2
C478	dash panel, driver side – Climate controlled front seats	23 – F 2
C478	dash panel, driver side – DVD navigation system with touch screen	23 – F 2
C478	dash panel, driver side – EATC, as of 04/2004	23 – F 2
C478	dash panel, driver side – EATC, before 04/2004	23 – F 2
C478	dash panel, driver side – F20, F21	23 – F 2
C478	dash panel, driver side – F62	23 – F 2
C478	dash panel, driver side – F88, F89, with autolamps	23 – F 2
C478	dash panel, driver side – F88, F89, without autolamps	23 – F 2

C478	dash panel, driver side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	23 – F 2
C478	dash panel, driver side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	23 – F 2
C478	dash panel, driver side – Fog lamps, with trailer socket, wagon, as of 01/2004	23 – F 2
C478	dash panel, driver side – Fog lamps, with trailer socket, wagon, before 01/2004	23 – F 2
C478	dash panel, driver side – Fog lamps, without trailer socket, 4–door model/5–door model	23 – F 2
C478	dash panel, driver side – Fog lamps, without trailer socket, wagon	23 – F 2
C478	dash panel, driver side – G204, as of 04/2004	23 – F 2
C478	dash panel, driver side – G204, before 04/2004	23 – F 2
C478	dash panel, driver side – Headlamp Levelling, without high intensity discharge headlamps	23 – F 2
C478	dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	23 – F 2
C478	dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	23 – F 2
C478	dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	23 – F 2
C478	dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	23 – F 2
C478	dash panel, driver side – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	23 – F 2
C478	dash panel, driver side – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	23 – F 2
C478	dash panel, driver side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	23 – F 2
C478	dash panel, driver side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	23 – F 2
C478	dash panel, driver side – Heated front seats	23 – F 2
C478	dash panel, driver side – Heated rear window, Heated exterior mirrors	23 – F 2
C478	dash panel, driver side – Heated windshield	23 – F 2
C478	dash panel, driver side – Licence plate lamps	23 – F 2
C478	dash panel, driver side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	23 – F 2
C478	dash panel, driver side – Light switch, Fog lamps, with trailer socket, wagon	23 – F 2
C478	dash panel, driver side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	23 – F 2
C478	dash panel, driver side – Light switch, Fog lamps, without trailer socket, wagon	23 – F 2
C478	dash panel, driver side – Light switch, with autolamps	23 – F 2
C478	dash panel, driver side – Light switch, with daytime running lamps, with high intensity discharge headlamps	23 – F 2
C478	dash panel, driver side – Light switch, with daytime running lamps, without high intensity discharge headlamps	23 – F 2
C478	dash panel, driver side – Light switch, without autolamps	23 – F 2
C478	dash panel, driver side – Light switch, without daytime running lamps, with high intensity discharge headlamps	23 – F 2
C478	dash panel, driver side – Light switch, without daytime running lamps, without high intensity discharge headlamps	23 – F 2
C478	dash panel, driver side – Manual A/C, before 04/2004	23 – F 2

C478 dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 23 – F 2
C478 dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 23 – F 2
C478 dash panel, driver side – Parking Lamps, with trailer socket, wagon, with autolamps 23 – F 2
C478 dash panel, driver side – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 23 – F 2
C478 dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 23 – F 2
C478 dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 23 – F 2
C478 dash panel, driver side – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 23 – F 2
C478 dash panel, driver side – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 23 – F 2
C478 dash panel, driver side – Pre–equipment pack . . . . . 23 – F 2
C478 dash panel, driver side – Turn Signal and Hazard Lamps . . . . . 23 – F 2
C478 dash panel, driver side – with autolamps . . . . . 23 – F 2
C478 dash panel, driver side – with daytime running lamps . . . . . 23 – F 2
C478 dash panel, driver side – with external CD changer and/or video system . . . . . 23 – F 2
C478 dash panel, driver side – with heated rear seats . . . . . 23 – F 2
C478 dash panel, driver side – With high intensity discharge headlamps . . . . . 23 – F 2
C478 dash panel, driver side – with high intensity discharge headlamps . . . . . 23 – F 2
C478 dash panel, driver side – With rear window wiper, with headlamp washer . . . . . 23 – F 2
C478 dash panel, driver side – with trailer socket, 4–door model/5–door model . . . . . 23 – F 2
C478 dash panel, driver side – with trailer socket, wagon . . . . . 23 – F 2
C478 dash panel, driver side – without daytime running lamps, without autolamps . . . . . 23 – F 2
C478 dash panel, driver side – without external CD changer and video system . . . . . 23 – F 2
C478 dash panel, driver side – Without high intensity discharge headlamps . . . . . 23 – F 2
C478 dash panel, driver side – without high intensity discharge headlamps . . . . . 23 – F 2
C478 dash panel, driver side – Without rear window wiper, with headlamp washer . . . . . 23 – F 2
C478 dash panel, driver side – without trailer socket, 4–door model/5–door model . . . . . 23 – F 2
C478 dash panel, driver side – without trailer socket, wagon . . . . . 23 – F 2
C478 dash panel, driver side . . . . . 23 – F 2
C478 dash panel, driver side – 4–speed automatic transmission (CD4E) . . . . . 25 – B 5
C478 dash panel, driver side – 5–speed automatic transmission (5F31J) . . . . . 25 – B 5
C478 dash panel, driver side – Autolamps . . . . . 25 – B 5
C478 dash panel, driver side – Cigar lighter . . . . . 25 – B 5
C478 dash panel, driver side – Climate controlled front seats . . . . . 25 – B 5
C478 dash panel, driver side – DVD navigation system with touch screen . . . . . 25 – B 5
C478 dash panel, driver side – EATC, as of 04/2004 . . . . . 25 – B 5
C478 dash panel, driver side – EATC, before 04/2004 . . . . . 25 – B 5
C478 dash panel, driver side – F20, F21 . . . . . 25 – B 5
C478 dash panel, driver side – F62 . . . . . 25 – B 5
C478 dash panel, driver side – F88, F89, with autolamps . . . . . 25 – B 5
C478 dash panel, driver side – F88, F89, without autolamps . . . . . 25 – B 5
C478 dash panel, driver side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 25 – B 5
C478 dash panel, driver side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 25 – B 5

C478	dash panel, driver side – Fog lamps, with trailer socket, wagon, as of 01/2004	25 – B 5
C478	dash panel, driver side – Fog lamps, with trailer socket, wagon, before 01/2004	25 – B 5
C478	dash panel, driver side – Fog lamps, without trailer socket, 4–door model/5–door model	25 – B 5
C478	dash panel, driver side – Fog lamps, without trailer socket, wagon	25 – B 5
C478	dash panel, driver side – G204, as of 04/2004	25 – B 5
C478	dash panel, driver side – G204, before 04/2004	25 – B 5
C478	dash panel, driver side – Headlamp Levelling, without high intensity discharge headlamps	25 – B 5
C478	dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	25 – B 5
C478	dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	25 – B 5
C478	dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	25 – B 5
C478	dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	25 – B 5
C478	dash panel, driver side – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	25 – B 5
C478	dash panel, driver side – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	25 – B 5
C478	dash panel, driver side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	25 – B 5
C478	dash panel, driver side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	25 – B 5
C478	dash panel, driver side – Heated front seats	25 – B 5
C478	dash panel, driver side – Heated rear window, Heated exterior mirrors	25 – B 5
C478	dash panel, driver side – Heated windshield	25 – B 5
C478	dash panel, driver side – Licence plate lamps	25 – B 5
C478	dash panel, driver side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	25 – B 5
C478	dash panel, driver side – Light switch, Fog lamps, with trailer socket, wagon	25 – B 5
C478	dash panel, driver side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	25 – B 5
C478	dash panel, driver side – Light switch, Fog lamps, without trailer socket, wagon	25 – B 5
C478	dash panel, driver side – Light switch, with autolamps	25 – B 5
C478	dash panel, driver side – Light switch, with daytime running lamps, with high intensity discharge headlamps	25 – B 5
C478	dash panel, driver side – Light switch, with daytime running lamps, without high intensity discharge headlamps	25 – B 5
C478	dash panel, driver side – Light switch, without autolamps	25 – B 5
C478	dash panel, driver side – Light switch, without daytime running lamps, with high intensity discharge headlamps	25 – B 5
C478	dash panel, driver side – Light switch, without daytime running lamps, without high intensity discharge headlamps	25 – B 5
C478	dash panel, driver side – Manual A/C, before 04/2004	25 – B 5
C478	dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	25 – B 5
C478	dash panel, driver side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	25 – B 5

C478	dash panel, driver side – Parking Lamps, with trailer socket, wagon, with autolamps	25 – B 5
C478	dash panel, driver side – Parking Lamps, with trailer socket, wagon, without autolamps	25 – B 5
C478	dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	25 – B 5
C478	dash panel, driver side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	25 – B 5
C478	dash panel, driver side – Parking Lamps, without trailer socket, wagon, with autolamps	25 – B 5
C478	dash panel, driver side – Parking Lamps, without trailer socket, wagon, without autolamps	25 – B 5
C478	dash panel, driver side – Pre–equipment pack	25 – B 5
C478	dash panel, driver side – Turn Signal and Hazard Lamps	25 – B 5
C478	dash panel, driver side – with autolamps	25 – B 5
C478	dash panel, driver side – with daytime running lamps	25 – B 5
C478	dash panel, driver side – with external CD changer and/or video system	25 – B 5
C478	dash panel, driver side – with heated rear seats	25 – B 5
C478	dash panel, driver side – With high intensity discharge headlamps	25 – B 5
C478	dash panel, driver side – with high intensity discharge headlamps	25 – B 5
C478	dash panel, driver side – With rear window wiper, with headlamp washer	25 – B 5
C478	dash panel, driver side – with trailer socket, 4–door model/5–door model	25 – B 5
C478	dash panel, driver side – with trailer socket, wagon	25 – B 5
C478	dash panel, driver side – without daytime running lamps, without autolamps	25 – B 5
C478	dash panel, driver side – without external CD changer and video system	25 – B 5
C478	dash panel, driver side – Without high intensity discharge headlamps	25 – B 5
C478	dash panel, driver side – without high intensity discharge headlamps	25 – B 5
C478	dash panel, driver side – Without rear window wiper, with headlamp washer	25 – B 5
C478	dash panel, driver side – without trailer socket, 4–door model/5–door model	25 – B 5
C478	dash panel, driver side – without trailer socket, wagon	25 – B 5
C478	dash panel, driver side	25 – B 5
C479	on steering column – 1.8/2.0L Duratec–HE (MI4)	37 – D 3
C479	on steering column – 1.8L Duratec–SCi (MI4)	37 – D 3
C479	on steering column – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	37 – D 3
C479	on steering column – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	37 – D 3
C479	on steering column – 2.5L Duratec–VE (VE6)	37 – D 3
C479	on steering column – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	37 – D 3
C479	on steering column – Diesel engines	37 – D 3
C479	on steering column – F67, 1.8/2.0L Duratec–HE (MI4)	37 – D 3
C479	on steering column – F67, 1.8L Duratec–SCi (MI4)	37 – D 3
C479	on steering column – F67, 2.5L Duratec–VE (VE6)	37 – D 3
C479	on steering column – F67, 3.0L Duratec–SE (VE6)	37 – D 3
C479	on steering column – F67, 3.0L Duratec–ST (VE6)	37 – D 3
C479	on steering column – F67, Diesel engines	37 – D 3
C479	on steering column – G203	37 – D 3
C479	on steering column – Petrol engines	37 – D 3
C480	centre console – as of 08/2004	
C480	centre console – before 08/2004	
C481	dash panel, in glove compartment – Passenger air bag	23 – C 5
C481	dash panel, in glove compartment – Passenger air bag	25 – E 4

C482	dash panel, in glove compartment – Passenger air bag	23 – C 5
C482	dash panel, in glove compartment – Passenger air bag	25 – E 4
C485	dash panel, centre console – Data link connector, pin 7	
C487	on steering column – DVD navigation system with touch screen	37 – C 2
C487	on steering column – Pre–equipment pack	37 – C 2
C487	on steering column – with external CD changer and/or video system	37 – C 2
C487	on steering column – without external CD changer and video system	37 – C 2
C487	on steering column	37 – C 2
C490	centre console – Data link connector, pin 7	40 – C 4
C490	centre console – Diesel engines	40 – C 4
C490	centre console – Driver air bag	40 – C 4
C490	centre console – F88, F89, with autolamps	40 – C 4
C490	centre console – F88, F89, without autolamps	40 – C 4
C490	centre console – G202	40 – C 4
C490	centre console – Passenger air bag	40 – C 4
C490	centre console – Petrol engines	40 – C 4
C490	centre console	40 – C 4
C491	centre console – Side air bag	40 – C 4
C491	centre console – with side head air bags	40 – C 4
C491	centre console	40 – C 4
C493	RH B–pillar – G205	46 – B 4
C493	RH B–pillar – LHD	46 – B 4
C493	RH B–pillar – RHD	46 – B 4
C493	RH B–pillar	46 – B 4
C494	in RH front footwell – F99, 4–door model/5–door model	24 – C 2
C494	in RH front footwell – F99, wagon	24 – C 2
C494	in RH front footwell	24 – C 2
C494	in RH front footwell – F99, 4–door model/5–door model	26 – C 3
C494	in RH front footwell – F99, wagon	26 – C 3
C494	in RH front footwell	26 – C 3
C495	LH B–pillar, bottom – Side air bag	45 – E 4
C495	RH B–pillar, bottom – Side air bag	46 – B 3
C496	engine compartment, front, centre	8 – F 3
C496	engine compartment, front, centre	9 – E 4
C496	engine compartment, front, centre	10 – E 5
C496	engine compartment, front, centre	11 – E 4
C497	RH C–pillar – G205	46 – C 4
C497	RH C–pillar – LHD	46 – C 4
C497	RH C–pillar – RHD	46 – C 4
C497	RH C–pillar	46 – C 4
C499	roof, front, centre – G200	22 – E 3
C499	roof, front, centre	22 – E 3
C500	in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), as of 04/2004	33 – E 3
C500	in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), before 04/2004	33 – E 3
C500	in LH front footwell, under dash panel – Autolamps	33 – E 3
C500	in LH front footwell, under dash panel – before 08/2004	33 – E 3
C500	in LH front footwell, under dash panel – Bosch 8.0	33 – E 3
C500	in LH front footwell, under dash panel – Cigar lighter	33 – E 3
C500	in LH front footwell, under dash panel – Diesel engines	33 – E 3
C500	in LH front footwell, under dash panel – DVD navigation system with touch screen	33 – E 3

C500	in LH front footwell, under dash panel – EATC, as of 04/2004	33 – E 3
C500	in LH front footwell, under dash panel – EATC, before 04/2004	33 – E 3
C500	in LH front footwell, under dash panel – F68	33 – E 3
C500	in LH front footwell, under dash panel – F69, with external CD changer and/or video system	33 – E 3
C500	in LH front footwell, under dash panel – F69, without external CD changer and video system	33 – E 3
C500	in LH front footwell, under dash panel – F78, F80	33 – E 3
C500	in LH front footwell, under dash panel – F83	33 – E 3
C500	in LH front footwell, under dash panel – F88, F89, with autolamps	33 – E 3
C500	in LH front footwell, under dash panel – F88, F89, without autolamps	33 – E 3
C500	in LH front footwell, under dash panel – F94	33 – E 3
C500	in LH front footwell, under dash panel – F98	33 – E 3
C500	in LH front footwell, under dash panel – F99, 4–door model/5–door model	33 – E 3
C500	in LH front footwell, under dash panel – F99, wagon	33 – E 3
C500	in LH front footwell, under dash panel – Headlamp Levelling, without high intensity discharge headlamps	33 – E 3
C500	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Heated rear window, Heated exterior mirrors	33 – E 3
C500	in LH front footwell, under dash panel – LHD	33 – E 3
C500	in LH front footwell, under dash panel – Licence plate lamps	33 – E 3
C500	in LH front footwell, under dash panel – Light switch, with autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Light switch, with daytime running lamps, with high intensity discharge headlamps	33 – E 3
C500	in LH front footwell, under dash panel – Light switch, with daytime running lamps, without high intensity discharge headlamps	33 – E 3
C500	in LH front footwell, under dash panel – Light switch, without autolamps	33 – E 3
C500	in LH front footwell, under dash panel – Light switch, without daytime running lamps, with high intensity discharge headlamps	33 – E 3
C500	in LH front footwell, under dash panel – Light switch, without daytime running lamps, without high intensity discharge headlamps	33 – E 3
C500	in LH front footwell, under dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4)	33 – E 3
C500	in LH front footwell, under dash panel – Pre–equipment pack	33 – E 3

C500	in LH front footwell, under dash panel – RHD	33 – E 3
C500	in LH front footwell, under dash panel – with autolamps	33 – E 3
C500	in LH front footwell, under dash panel – with daytime running lamps	33 – E 3
C500	in LH front footwell, under dash panel – with external CD changer and/or video system	33 – E 3
C500	in LH front footwell, under dash panel – with heated rear seats	33 – E 3
C500	in LH front footwell, under dash panel – With high intensity discharge headlamps	33 – E 3
C500	in LH front footwell, under dash panel – with high intensity discharge headlamps	33 – E 3
C500	in LH front footwell, under dash panel – with rain sensor	33 – E 3
C500	in LH front footwell, under dash panel – With rear window wiper, with headlamp washer	33 – E 3
C500	in LH front footwell, under dash panel – With rear window wiper, without headlamp washer	33 – E 3
C500	in LH front footwell, under dash panel – with variable intermittent wipe	33 – E 3
C500	in LH front footwell, under dash panel – without daytime running lamps, without autolamps	33 – E 3
C500	in LH front footwell, under dash panel – without external CD changer and video system	33 – E 3
C500	in LH front footwell, under dash panel – Without high intensity discharge headlamps	33 – E 3
C500	in LH front footwell, under dash panel – without high intensity discharge headlamps	33 – E 3
C500	in LH front footwell, under dash panel – Without rear window wiper, with headlamp washer	33 – E 3
C500	in LH front footwell, under dash panel – Without rear window wiper, without headlamp washer	33 – E 3
C500	in LH front footwell, under dash panel	33 – E 3
C501	in LH front footwell, under dash panel – Climate controlled front seats	33 – E 2
C501	in LH front footwell, under dash panel – Data link connector, pins 4, 5 and 16	33 – E 2
C501	in LH front footwell, under dash panel – DVD navigation system with touch screen	33 – E 2
C501	in LH front footwell, under dash panel – EATC	33 – E 2
C501	in LH front footwell, under dash panel – EATC, as of 04/2004	33 – E 2
C501	in LH front footwell, under dash panel – EATC, before 04/2004	33 – E 2
C501	in LH front footwell, under dash panel – F62	33 – E 2
C501	in LH front footwell, under dash panel – F65, F66	33 – E 2
C501	in LH front footwell, under dash panel – F72, with external CD changer and/or video system	33 – E 2
C501	in LH front footwell, under dash panel – F72, without external CD changer and video system	33 – E 2
C501	in LH front footwell, under dash panel – F81	33 – E 2
C501	in LH front footwell, under dash panel – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	33 – E 2
C501	in LH front footwell, under dash panel – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	33 – E 2
C501	in LH front footwell, under dash panel – Fog lamps, with trailer socket, wagon, as of 01/2004	33 – E 2
C501	in LH front footwell, under dash panel – Fog lamps, with trailer socket, wagon, before 01/2004	33 – E 2
C501	in LH front footwell, under dash panel – Fog lamps, without trailer socket, 4–door model/5–door model	33 – E 2

C501	in LH front footwell, under dash panel – Fog lamps, without trailer socket, wagon	33 – E 2
C501	in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Heated front seats	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, wagon	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, wagon	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, with autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, with daytime running lamps, with high intensity discharge headlamps	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, with daytime running lamps, without high intensity discharge headlamps	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, without autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, without daytime running lamps, with high intensity discharge headlamps	33 – E 2
C501	in LH front footwell, under dash panel – Light switch, without daytime running lamps, without high intensity discharge headlamps	33 – E 2
C501	in LH front footwell, under dash panel – Manual A/C, before 04/2004	33 – E 2
C501	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, with autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, without autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, with autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, without autolamps	33 – E 2
C501	in LH front footwell, under dash panel – Pre–equipment pack	33 – E 2
C501	in LH front footwell, under dash panel – with autolamps	33 – E 2
C501	in LH front footwell, under dash panel – with daytime running lamps	33 – E 2
C501	in LH front footwell, under dash panel – with external CD changer and/or video system	33 – E 2

C501	in LH front footwell, under dash panel – With high intensity discharge headlamps	33 – E 2
C501	in LH front footwell, under dash panel – with high intensity discharge headlamps	33 – E 2
C501	in LH front footwell, under dash panel – With rear window wiper	33 – E 2
C501	in LH front footwell, under dash panel – With rear window wiper, with headlamp washer	33 – E 2
C501	in LH front footwell, under dash panel – with trailer socket, 4–door model/5–door model	33 – E 2
C501	in LH front footwell, under dash panel – with trailer socket, wagon	33 – E 2
C501	in LH front footwell, under dash panel – with variable intermittent wipe	33 – E 2
C501	in LH front footwell, under dash panel – without daytime running lamps, without autolamps	33 – E 2
C501	in LH front footwell, under dash panel – without external CD changer and video system	33 – E 2
C501	in LH front footwell, under dash panel – Without high intensity discharge headlamps	33 – E 2
C501	in LH front footwell, under dash panel – without high intensity discharge headlamps	33 – E 2
C501	in LH front footwell, under dash panel – Without rear window wiper, with headlamp washer	33 – E 2
C501	in LH front footwell, under dash panel – without trailer socket, 4–door model/5–door model	33 – E 2
C501	in LH front footwell, under dash panel – without trailer socket, wagon	33 – E 2
C501	in LH front footwell, under dash panel	33 – E 2
C502	in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), as of 04/2004	33 – E 3
C502	in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), before 04/2004	33 – E 3
C502	in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J)	33 – E 3
C502	in LH front footwell, under dash panel – before 08/2004	33 – E 3
C502	in LH front footwell, under dash panel – Bosch 8.0	33 – E 3
C502	in LH front footwell, under dash panel – Diesel engines	33 – E 3
C502	in LH front footwell, under dash panel – EATC, as of 04/2004	33 – E 3
C502	in LH front footwell, under dash panel – EATC, before 04/2004	33 – E 3
C502	in LH front footwell, under dash panel – F67, 1.8/2.0L Duratec–HE (MI4)	33 – E 3
C502	in LH front footwell, under dash panel – F67, 1.8L Duratec–SCi (MI4)	33 – E 3
C502	in LH front footwell, under dash panel – F67, 2.5L Duratec–VE (VE6)	33 – E 3
C502	in LH front footwell, under dash panel – F67, 3.0L Duratec–SE (VE6)	33 – E 3
C502	in LH front footwell, under dash panel – F67, 3.0L Duratec–ST (VE6)	33 – E 3
C502	in LH front footwell, under dash panel – F67, Diesel engines	33 – E 3
C502	in LH front footwell, under dash panel – F75, 5–speed automatic transmission (5F31J)	33 – E 3
C502	in LH front footwell, under dash panel – F75, except 5–speed automatic transmission (5F31J)	33 – E 3
C502	in LH front footwell, under dash panel – F76, F77, as of 04/2004	33 – E 3
C502	in LH front footwell, under dash panel – F76, F77, before 04/2004	33 – E 3
C502	in LH front footwell, under dash panel – F82, Diesel engines	33 – E 3
C502	in LH front footwell, under dash panel – F82, Petrol engines	33 – E 3
C502	in LH front footwell, under dash panel – F88, F89, with autolamps	33 – E 3
C502	in LH front footwell, under dash panel – F88, F89, without autolamps	33 – E 3
C502	in LH front footwell, under dash panel – F93	33 – E 3
C502	in LH front footwell, under dash panel – F97	33 – E 3

C502	in LH front footwell, under dash panel – Heated rear window, Heated exterior mirrors	33 – E 3
C502	in LH front footwell, under dash panel – Ignition switch automatic transmission	33 – E 3
C502	in LH front footwell, under dash panel – Ignition switch manual transmission	33 – E 3
C502	in LH front footwell, under dash panel – LHD	33 – E 3
C502	in LH front footwell, under dash panel – Licence plate lamps	33 – E 3
C502	in LH front footwell, under dash panel – Manual A/C, before 04/2004	33 – E 3
C502	in LH front footwell, under dash panel – Petrol engines	33 – E 3
C502	in LH front footwell, under dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4)	33 – E 3
C502	in LH front footwell, under dash panel – RHD	33 – E 3
C502	in LH front footwell, under dash panel – with autolamps	33 – E 3
C502	in LH front footwell, under dash panel – with daytime running lamps	33 – E 3
C502	in LH front footwell, under dash panel – without daytime running lamps, without autolamps	33 – E 3
C502	in LH front footwell, under dash panel	33 – E 3
C503	in LH front footwell, under dash panel – 1.8/2.0L Duratec–HE (MI4)	33 – E 3
C503	in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4)	33 – E 3
C503	in LH front footwell, under dash panel – 2.5L Duratec–VE (VE6)	33 – E 3
C503	in LH front footwell, under dash panel – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	33 – E 3
C503	in LH front footwell, under dash panel – EATC, as of 04/2004	33 – E 3
C503	in LH front footwell, under dash panel – EATC, before 04/2004	33 – E 3
C503	in LH front footwell, under dash panel – F76, F77, as of 04/2004	33 – E 3
C503	in LH front footwell, under dash panel – Manual A/C, before 04/2004	33 – E 3
C503	in LH front footwell, under dash panel	33 – E 3
C504	in LH front footwell, under dash panel – F4, F5, F6	32 – E 4
C504	in LH front footwell, under dash panel – Heated rear window, Heated exterior mirrors	32 – E 4
C504	in LH front footwell, under dash panel – Manual A/C, before 04/2004	32 – E 4
C504	in LH front footwell, under dash panel	32 – E 4
C504	in LH front footwell, under dash panel – F4, F5, F6	36 – C 5
C504	in LH front footwell, under dash panel – Heated rear window, Heated exterior mirrors	36 – C 5
C504	in LH front footwell, under dash panel – Manual A/C, before 04/2004	36 – C 5
C504	in LH front footwell, under dash panel	36 – C 5
C504	in LH front footwell, under dash panel – EATC, as of 04/2004	
C504	in LH front footwell, under dash panel – EATC, before 04/2004	
C505	in LH front footwell, under dash panel – 1.8/2.0L Duratec–HE (MI4), automatic transmission	36 – D 5
C505	in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4)	36 – D 5
C505	in LH front footwell, under dash panel – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	36 – D 5
C505	in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	36 – D 5
C505	in LH front footwell, under dash panel – 2.5L Duratec–VE (VE6)	36 – D 5
C505	in LH front footwell, under dash panel – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	36 – D 5
C505	in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E)	36 – D 5

C505 in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E), wagon . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J) . . 36 – D 5
C505 in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), Diesel engines . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), Petrol engines . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), wagon . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Auto–dimming interior mirror . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Autolamps . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – before 08/2004 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Bosch 8.0 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Bosch, 4–door model/5–door model . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Bosch, wagon . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Diesel engines . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – DVD navigation system with touch screen 36 – D 5
C505 in LH front footwell, under dash panel – F78, F80 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – F94 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Petrol engines . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Pre–equipment pack, Diesel engines . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Pre–equipment pack, Petrol engines . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Reversing lamps, with trailer socket, wagon, as of 01/2004 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Reversing lamps, with trailer socket, wagon, before 01/2004 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Reversing lamps, without trailer socket, wagon . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, as of 01/2004 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, before 01/2004 . . . . . 36 – D 5
C505 in LH front footwell, under dash panel – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 36 – D 5

C505	in LH front footwell, under dash panel – Stop Lamps, without trailer socket, wagon	36 – D 5
C505	in LH front footwell, under dash panel – Valeo, 4–door model/5–door model, as of 01/2004	36 – D 5
C505	in LH front footwell, under dash panel – Valeo, 4–door model/5–door model, before 01/2004	36 – D 5
C505	in LH front footwell, under dash panel – Valeo, wagon, as of 01/2004	36 – D 5
C505	in LH front footwell, under dash panel – Valeo, wagon, before 01/2004	36 – D 5
C505	in LH front footwell, under dash panel – with rain sensor	36 – D 5
C505	in LH front footwell, under dash panel – With rear window wiper	36 – D 5
C505	in LH front footwell, under dash panel – with variable intermittent wipe	36 – D 5
C505	in LH front footwell, under dash panel	36 – D 5
C506	in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E)	32 – E 3
C506	in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J)	32 – E 3
C506	in LH front footwell, under dash panel – Bluetooth voice control	32 – E 3
C506	in LH front footwell, under dash panel – DVD navigation system with touch screen	32 – E 3
C506	in LH front footwell, under dash panel – EATC, as of 04/2004	32 – E 3
C506	in LH front footwell, under dash panel – EATC, before 04/2004	32 – E 3
C506	in LH front footwell, under dash panel – F63, 4–door model/5–door model	32 – E 3
C506	in LH front footwell, under dash panel – F63, wagon	32 – E 3
C506	in LH front footwell, under dash panel – F71, Bluetooth voice control	32 – E 3
C506	in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, with video system	32 – E 3
C506	in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, without video system	32 – E 3
C506	in LH front footwell, under dash panel – F71, with DVD navigation system with touch screen	32 – E 3
C506	in LH front footwell, under dash panel – F75, 5–speed automatic transmission (5F31J)	32 – E 3
C506	in LH front footwell, under dash panel – F75, except 5–speed automatic transmission (5F31J)	32 – E 3
C506	in LH front footwell, under dash panel – F78, F80	32 – E 3
C506	in LH front footwell, under dash panel – F90	32 – E 3
C506	in LH front footwell, under dash panel – F92, as of 01/2004, with trailer socket, with parking aid	32 – E 3
C506	in LH front footwell, under dash panel – F92, before 01/2004	32 – E 3
C506	in LH front footwell, under dash panel – F98	32 – E 3
C506	in LH front footwell, under dash panel – F99, 4–door model/5–door model	32 – E 3
C506	in LH front footwell, under dash panel – F99, wagon	32 – E 3
C506	in LH front footwell, under dash panel – G200	32 – E 3
C506	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Heated rear window, Heated exterior mirrors	32 – E 3
C506	in LH front footwell, under dash panel – Manual A/C, before 04/2004	32 – E 3

C506	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, with autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, without autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, with autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, without autolamps	32 – E 3
C506	in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	32 – E 3
C506	in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	32 – E 3
C506	in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, as of 01/2004	32 – E 3
C506	in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, before 01/2004	32 – E 3
C506	in LH front footwell, under dash panel – Stop Lamps, without trailer socket, 4–door model/5–door model	32 – E 3
C506	in LH front footwell, under dash panel – Stop Lamps, without trailer socket, wagon	32 – E 3
C506	in LH front footwell, under dash panel – Trailer socket, before 01/2004	32 – E 3
C506	in LH front footwell, under dash panel – with autolamps	32 – E 3
C506	in LH front footwell, under dash panel – with daytime running lamps	32 – E 3
C506	in LH front footwell, under dash panel – with DVD navigation system with touch screen	32 – E 3
C506	in LH front footwell, under dash panel – with external CD changer	32 – E 3
C506	in LH front footwell, under dash panel – with external CD changer and/or video system	32 – E 3
C506	in LH front footwell, under dash panel – With power folding mirrors	32 – E 3
C506	in LH front footwell, under dash panel – With rear window wiper	32 – E 3
C506	in LH front footwell, under dash panel – with trailer socket, 4–door model/5–door model	32 – E 3
C506	in LH front footwell, under dash panel – with trailer socket, wagon	32 – E 3
C506	in LH front footwell, under dash panel – with video system	32 – E 3
C506	in LH front footwell, under dash panel – without daytime running lamps, without autolamps	32 – E 3
C506	in LH front footwell, under dash panel – without DVD navigation system with touch screen	32 – E 3
C506	in LH front footwell, under dash panel – without trailer socket, 4–door model/5–door model	32 – E 3
C506	in LH front footwell, under dash panel – without trailer socket, wagon	32 – E 3
C506	in LH front footwell, under dash panel	32 – E 3
C506	in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E)	36 – E 4

C506	in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J)	36 – E 4
C506	in LH front footwell, under dash panel – Bluetooth voice control	36 – E 4
C506	in LH front footwell, under dash panel – DVD navigation system with touch screen	36 – E 4
C506	in LH front footwell, under dash panel – EATC, as of 04/2004	36 – E 4
C506	in LH front footwell, under dash panel – EATC, before 04/2004	36 – E 4
C506	in LH front footwell, under dash panel – F63, 4–door model/5–door model	36 – E 4
C506	in LH front footwell, under dash panel – F63, wagon	36 – E 4
C506	in LH front footwell, under dash panel – F71, Bluetooth voice control	36 – E 4
C506	in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, with video system	36 – E 4
C506	in LH front footwell, under dash panel – F71, except DVD navigation system with touch screen, without video system	36 – E 4
C506	in LH front footwell, under dash panel – F71, with DVD navigation system with touch screen	36 – E 4
C506	in LH front footwell, under dash panel – F75, 5–speed automatic transmission (5F31J)	36 – E 4
C506	in LH front footwell, under dash panel – F75, except 5–speed automatic transmission (5F31J)	36 – E 4
C506	in LH front footwell, under dash panel – F78, F80	36 – E 4
C506	in LH front footwell, under dash panel – F90	36 – E 4
C506	in LH front footwell, under dash panel – F92, as of 01/2004, with trailer socket, with parking aid	36 – E 4
C506	in LH front footwell, under dash panel – F92, before 01/2004	36 – E 4
C506	in LH front footwell, under dash panel – F98	36 – E 4
C506	in LH front footwell, under dash panel – F99, 4–door model/5–door model	36 – E 4
C506	in LH front footwell, under dash panel – F99, wagon	36 – E 4
C506	in LH front footwell, under dash panel – G200	36 – E 4
C506	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	36 – E 4
C506	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	36 – E 4
C506	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	36 – E 4
C506	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	36 – E 4
C506	in LH front footwell, under dash panel – Heated rear window, Heated exterior mirrors	36 – E 4
C506	in LH front footwell, under dash panel – Manual A/C, before 04/2004	36 – E 4
C506	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	36 – E 4
C506	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	36 – E 4
C506	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, with autolamps	36 – E 4
C506	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, without autolamps	36 – E 4
C506	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	36 – E 4
C506	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	36 – E 4

C506 in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, as of 01/2004 . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, before 01/2004 . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – Stop Lamps, without trailer socket, 4–door model/5–door model . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – Stop Lamps, without trailer socket, wagon 36 – E 4
C506 in LH front footwell, under dash panel – Trailer socket, before 01/2004 . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – with autolamps . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – with daytime running lamps . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – with DVD navigation system with touch screen . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – with external CD changer . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – with external CD changer and/or video system . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – With power folding mirrors . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – With rear window wiper . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – with trailer socket, 4–door model/5–door model . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – with trailer socket, wagon . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – with video system . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – without daytime running lamps, without autolamps . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – without DVD navigation system with touch screen . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – without trailer socket, 4–door model/5–door model . . . . . 36 – E 4
C506 in LH front footwell, under dash panel – without trailer socket, wagon . . . . . 36 – E 4
C506 in LH front footwell, under dash panel . . . . . 36 – E 4
C507 in LH front footwell, under dash panel – Cigar lighter . . . . . 32 – D 4
C507 in LH front footwell, under dash panel – EATC, as of 04/2004 . . . . . 32 – D 4
C507 in LH front footwell, under dash panel – EATC, before 04/2004 . . . . . 32 – D 4
C507 in LH front footwell, under dash panel – F1, F2 . . . . . 32 – D 4
C507 in LH front footwell, under dash panel – F7 . . . . . 32 – D 4
C507 in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 32 – D 4
C507 in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 32 – D 4
C507 in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 32 – D 4
C507 in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 32 – D 4

C507	in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	32 – D 4
C507	in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, wagon	32 – D 4
C507	in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	32 – D 4
C507	in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, wagon	32 – D 4
C507	in LH front footwell, under dash panel	32 – D 4
C507	in LH front footwell, under dash panel – Cigar lighter	36 – D 1
C507	in LH front footwell, under dash panel – EATC, as of 04/2004	36 – D 1
C507	in LH front footwell, under dash panel – EATC, before 04/2004	36 – D 1
C507	in LH front footwell, under dash panel – F1, F2	36 – D 1
C507	in LH front footwell, under dash panel – F7	36 – D 1
C507	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	36 – D 1
C507	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	36 – D 1
C507	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	36 – D 1
C507	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	36 – D 1
C507	in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	36 – D 1
C507	in LH front footwell, under dash panel – Light switch, Fog lamps, with trailer socket, wagon	36 – D 1
C507	in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	36 – D 1
C507	in LH front footwell, under dash panel – Light switch, Fog lamps, without trailer socket, wagon	36 – D 1
C507	in LH front footwell, under dash panel	36 – D 1
C508	in LH front footwell, under dash panel – 1.8/2.0L Duratec–HE (MI4), automatic transmission	36 – D 1
C508	in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E)	36 – D 1
C508	in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J)	36 – D 1
C508	in LH front footwell, under dash panel – Auto–dimming interior mirror	36 – D 1
C508	in LH front footwell, under dash panel – Autolamps	36 – D 1
C508	in LH front footwell, under dash panel – Diesel engines	36 – D 1
C508	in LH front footwell, under dash panel – F60	36 – D 1
C508	in LH front footwell, under dash panel – F61	36 – D 1
C508	in LH front footwell, under dash panel – F64, with trailer socket, 4–door model/5–door model	36 – D 1
C508	in LH front footwell, under dash panel – F64, with trailer socket, wagon	36 – D 1
C508	in LH front footwell, under dash panel – F64, without trailer socket, 4–door model/5–door model	36 – D 1
C508	in LH front footwell, under dash panel – F64, without trailer socket, wagon	36 – D 1
C508	in LH front footwell, under dash panel – F70	36 – D 1
C508	in LH front footwell, under dash panel – F72, with external CD changer and/or video system	36 – D 1

C508	in LH front footwell, under dash panel – F72, without external CD changer and video system	36 – D 1
C508	in LH front footwell, under dash panel – F73	36 – D 1
C508	in LH front footwell, under dash panel – F74, as of 01/2004, F201, with 7–pin trailer socket	36 – D 1
C508	in LH front footwell, under dash panel – F74, as of 01/2004, F200, 201, with 13–pin trailer socket	36 – D 1
C508	in LH front footwell, under dash panel – F74, before 01/2004	36 – D 1
C508	in LH front footwell, under dash panel – F81	36 – D 1
C508	in LH front footwell, under dash panel – F91	36 – D 1
C508	in LH front footwell, under dash panel – F91, LHD	36 – D 1
C508	in LH front footwell, under dash panel – F91, RHD	36 – D 1
C508	in LH front footwell, under dash panel – F97	36 – D 1
C508	in LH front footwell, under dash panel – front and rear power windows, Driver side front	36 – D 1
C508	in LH front footwell, under dash panel – front and rear power windows, LH rear door	36 – D 1
C508	in LH front footwell, under dash panel – front and rear power windows, Passenger side front	36 – D 1
C508	in LH front footwell, under dash panel – front and rear power windows, RH rear door	36 – D 1
C508	in LH front footwell, under dash panel – Front power windows, Driver side	36 – D 1
C508	in LH front footwell, under dash panel – Front power windows, Passenger side	36 – D 1
C508	in LH front footwell, under dash panel – LHD	36 – D 1
C508	in LH front footwell, under dash panel – Licence plate lamps	36 – D 1
C508	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	36 – D 1
C508	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	36 – D 1
C508	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, with autolamps	36 – D 1
C508	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, without autolamps	36 – D 1
C508	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	36 – D 1
C508	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	36 – D 1
C508	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, with autolamps	36 – D 1
C508	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, without autolamps	36 – D 1
C508	in LH front footwell, under dash panel – Petrol engines	36 – D 1
C508	in LH front footwell, under dash panel – Rear power point	36 – D 1
C508	in LH front footwell, under dash panel – RHD	36 – D 1
C508	in LH front footwell, under dash panel – Trailer socket, with 7–pin trailer socket, as of 01/2004	36 – D 1
C508	in LH front footwell, under dash panel – Trailer socket, before 01/2004	36 – D 1
C508	in LH front footwell, under dash panel – Trailer socket, wagon, as of 01/2004	36 – D 1
C508	in LH front footwell, under dash panel – with autolamps	36 – D 1
C508	in LH front footwell, under dash panel – with daytime running lamps	36 – D 1

C508	in LH front footwell, under dash panel – with heated rear seats	36 – D 1
C508	in LH front footwell, under dash panel – with rain sensor	36 – D 1
C508	in LH front footwell, under dash panel – with trailer socket, 4–door model/5–door model	36 – D 1
C508	in LH front footwell, under dash panel – with trailer socket, wagon	36 – D 1
C508	in LH front footwell, under dash panel – without daytime running lamps, without autolamps	36 – D 1
C508	in LH front footwell, under dash panel – without trailer socket, 4–door model/5–door model	36 – D 1
C508	in LH front footwell, under dash panel – without trailer socket, wagon	36 – D 1
C508	in LH front footwell, under dash panel	36 – D 1
C509	in LH front footwell, under dash panel – 1.8/2.0L Duratec–HE (MI4)	36 – C 1
C509	in LH front footwell, under dash panel – 1.8/2.0L Duratec–HE (MI4), automatic transmission	36 – C 1
C509	in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4)	36 – C 1
C509	in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), as of 04/2004	36 – C 1
C509	in LH front footwell, under dash panel – 1.8L Duratec–SCi (MI4), before 04/2004	36 – C 1
C509	in LH front footwell, under dash panel – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	36 – C 1
C509	in LH front footwell, under dash panel – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	36 – C 1
C509	in LH front footwell, under dash panel – 2.0L Duratorq–TDCi (Puma) Diesel	36 – C 1
C509	in LH front footwell, under dash panel – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	36 – C 1
C509	in LH front footwell, under dash panel – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	36 – C 1
C509	in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel	36 – C 1
C509	in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	36 – C 1
C509	in LH front footwell, under dash panel – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III	36 – C 1
C509	in LH front footwell, under dash panel – 2.5L Duratec–VE (VE6)	36 – C 1
C509	in LH front footwell, under dash panel – 3.0L Duratec–SE (VE6)	36 – C 1
C509	in LH front footwell, under dash panel – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	36 – C 1
C509	in LH front footwell, under dash panel – 4–speed automatic transmission (CD4E)	36 – C 1
C509	in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J)	36 – C 1
C509	in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), Diesel engines	36 – C 1
C509	in LH front footwell, under dash panel – 5–speed automatic transmission (5F31J), Petrol engines	36 – C 1
C509	in LH front footwell, under dash panel – before 08/2004	36 – C 1
C509	in LH front footwell, under dash panel – Bosch 8.0	36 – C 1
C509	in LH front footwell, under dash panel – Diesel engines	36 – C 1
C509	in LH front footwell, under dash panel – Diesel engines, With electric coolant heater, before 12/2003	36 – C 1
C509	in LH front footwell, under dash panel – Diesel engines, with fuel fired heater	36 – C 1
C509	in LH front footwell, under dash panel – Diesel engines, with fuel fired heater, as of 08/2004	36 – C 1
C509	in LH front footwell, under dash panel – F63, 4–door model/5–door model	36 – C 1

C509	in LH front footwell, under dash panel – F63, wagon	36 – C 1
C509	in LH front footwell, under dash panel – F64, with trailer socket, 4–door model/5–door model	36 – C 1
C509	in LH front footwell, under dash panel – F64, with trailer socket, wagon	36 – C 1
C509	in LH front footwell, under dash panel – F64, without trailer socket, 4–door model/5–door model	36 – C 1
C509	in LH front footwell, under dash panel – F64, without trailer socket, wagon	36 – C 1
C509	in LH front footwell, under dash panel – F67, 1.8/2.0L Duratec–HE (MI4)	36 – C 1
C509	in LH front footwell, under dash panel – F67, 1.8L Duratec–SCi (MI4)	36 – C 1
C509	in LH front footwell, under dash panel – F67, 2.5L Duratec–VE (VE6)	36 – C 1
C509	in LH front footwell, under dash panel – F67, 3.0L Duratec–SE (VE6)	36 – C 1
C509	in LH front footwell, under dash panel – F67, 3.0L Duratec–ST (VE6)	36 – C 1
C509	in LH front footwell, under dash panel – F67, Diesel engines	36 – C 1
C509	in LH front footwell, under dash panel – F76, F77, as of 04/2004	36 – C 1
C509	in LH front footwell, under dash panel – F76, F77, before 04/2004	36 – C 1
C509	in LH front footwell, under dash panel – F82, Diesel engines	36 – C 1
C509	in LH front footwell, under dash panel – F82, Petrol engines	36 – C 1
C509	in LH front footwell, under dash panel – F85, F86	36 – C 1
C509	in LH front footwell, under dash panel – F93	36 – C 1
C509	in LH front footwell, under dash panel – F95, F96	36 – C 1
C509	in LH front footwell, under dash panel – Headlamp Levelling, with high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamp Levelling, without high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Light switch, with daytime running lamps, with high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – Light switch, with daytime running lamps, without high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – Light switch, without daytime running lamps, with high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – Light switch, without daytime running lamps, without high intensity discharge headlamps	36 – C 1

C509	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, with autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Parking Lamps, with trailer socket, wagon, without autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, with autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Parking Lamps, without trailer socket, wagon, without autolamps	36 – C 1
C509	in LH front footwell, under dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4)	36 – C 1
C509	in LH front footwell, under dash panel – Petrol engines, except 3.0L Duratec–SE (VE6)	36 – C 1
C509	in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	36 – C 1
C509	in LH front footwell, under dash panel – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	36 – C 1
C509	in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, as of 01/2004	36 – C 1
C509	in LH front footwell, under dash panel – Stop Lamps, with trailer socket, wagon, before 01/2004	36 – C 1
C509	in LH front footwell, under dash panel – Stop Lamps, without trailer socket, 4–door model/5–door model	36 – C 1
C509	in LH front footwell, under dash panel – Stop Lamps, without trailer socket, wagon	36 – C 1
C509	in LH front footwell, under dash panel – With high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – with high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – With rear window wiper, with headlamp washer	36 – C 1
C509	in LH front footwell, under dash panel – with windshield washer jet heater	36 – C 1
C509	in LH front footwell, under dash panel – Without high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – without high intensity discharge headlamps	36 – C 1
C509	in LH front footwell, under dash panel – Without rear window wiper, with headlamp washer	36 – C 1
C509	in LH front footwell, under dash panel – without trailer socket, 4–door model/5–door model	36 – C 1
C509	in LH front footwell, under dash panel – without trailer socket, wagon	36 – C 1
C509	in LH front footwell, under dash panel	36 – C 1
C510	in LH front footwell, under dash panel – 2–way power seats	36 – E 3
C510	in LH front footwell, under dash panel – 8–way power seats	36 – E 3
C510	in LH front footwell, under dash panel – F65, F66	36 – E 3

C510	in LH front footwell, under dash panel – Heated rear window, Heated exterior mirrors	36 – E 3
C510	in LH front footwell, under dash panel	36 – E 3
C511	behind dash panel, centre console, bottom – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	23 – D 1
C511	behind dash panel, centre console, bottom – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	23 – D 1
C511	behind dash panel, centre console, bottom – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	23 – D 1
C511	behind dash panel, centre console, bottom – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	23 – D 1
C511	behind dash panel, centre console, bottom – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	23 – D 1
C512	on steering column – as of 08/2004	37 – F 3
C512	on steering column – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	37 – F 3
C512	on steering column – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	37 – F 3
C512	on steering column – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	37 – F 3
C512	on steering column – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	37 – F 3
C512	on steering column – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	37 – F 3
C512	on steering column – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	37 – F 3
C512	on steering column – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	37 – F 3
C512	on steering column – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	37 – F 3
C513	centre console – as of 08/2004	
C514	behind dash panel – F88, F89, without autolamps	32 – A 3
C514	behind dash panel – G204, as of 04/2004	32 – A 3
C514	behind dash panel – G204, before 04/2004	32 – A 3
C514	behind dash panel – with high intensity discharge headlamps	32 – A 3
C514	behind dash panel – without high intensity discharge headlamps	32 – A 3
C517	dash panel, centre	
C518	dash panel, centre – Bluetooth voice control	
C518	dash panel, centre – Data link connector, pins 3 and 11, with external CD changer and video system	
C518	dash panel, centre – Data link connector, pins 3 and 11, with external CD changer or video system	
C518	dash panel, centre – Data link connector, pins 3 and 11, with voice control	
C518	dash panel, centre – Data link connector, pins 3 and 11, without external CD changer and video system	
C518	dash panel, centre – DVD navigation system with touch screen	
C518	dash panel, centre – F69, with external CD changer and/or video system	

C518	dash panel, centre – F69, without external CD changer and video system
C518	dash panel, centre – F72, with external CD changer and/or video system
C518	dash panel, centre – F72, without external CD changer and video system
C518	dash panel, centre – G201, except DVD navigation system with touch screen, as of 04/2004
C518	dash panel, centre – G201, except DVD navigation system with touch screen, before 04/2004
C518	dash panel, centre – G201, with DVD navigation system with touch screen, before 04/2004
C518	dash panel, centre – with external CD changer
C518	dash panel, centre – with external CD changer and/or video system
C518	dash panel, centre – with video system
C518	dash panel, centre – without external CD changer and video system
C518	dash panel, centre
C519	dash panel, centre – DVD navigation system with touch screen
C519	dash panel, centre – DVD navigation system with touch screen – with video system
C519	dash panel, centre – with external CD changer
C519	dash panel, centre – with video system
C519	dash panel, centre – without external CD changer and video system
C519	dash panel, centre
C520	dash panel, centre – 1.8/2.0L Duratec–HE (MI4)
C520	dash panel, centre – 1.8L Duratec–SCi (MI4)
C520	dash panel, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
C520	dash panel, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
C520	dash panel, centre – 2.5L Duratec–VE (VE6)
C520	dash panel, centre – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
C520	dash panel, centre – 3.0L Duratec–ST (VE6)
C520	dash panel, centre – 4–speed automatic transmission (CD4E), 4–door model/5–door model
C520	dash panel, centre – 4–speed automatic transmission (CD4E), wagon
C520	dash panel, centre – 5–speed automatic transmission (5F31J), 4–door model/5–door model
C520	dash panel, centre – 5–speed automatic transmission (5F31J), wagon
C520	dash panel, centre – Bluetooth voice control
C520	dash panel, centre – Diesel engines
C520	dash panel, centre – DVD navigation system with touch screen
C520	dash panel, centre – DVD navigation system with touch screen – with video system
C520	dash panel, centre – Petrol engines
C520	dash panel, centre – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)
C520	dash panel, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C520	dash panel, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C520	dash panel, centre – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
C520	dash panel, centre – Reversing lamps, with trailer socket, wagon, before 01/2004
C520	dash panel, centre – Reversing lamps, without trailer socket, 4–door model/5–door model

C520	dash panel, centre – Reversing lamps, without trailer socket, wagon	
C520	dash panel, centre – with DVD navigation system with touch screen	
C520	dash panel, centre – with external CD changer	
C520	dash panel, centre – with external CD changer and/or video system	
C520	dash panel, centre – with video system	
C520	dash panel, centre – without DVD navigation system with touch screen	
C520	dash panel, centre – without external CD changer and video system	
C520	dash panel, centre	
C522	roof, front, centre – Diesel engines	21 – D 5
C522	roof, front, centre – F91	21 – D 5
C522	roof, front, centre – G200	21 – D 5
C522	roof, front, centre – Petrol engines	21 – D 5
C523	on brake pedal support – 1.8/2.0L Duratec–HE (MI4), automatic transmission	28 – D 2
C523	on brake pedal support – 1.8/2.0L Duratec–HE (MI4), manual transmission	28 – D 2
C523	on brake pedal support – 1.8L Duratec–SCi (MI4)	28 – D 2
C523	on brake pedal support – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	28 – D 2
C523	on brake pedal support – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	28 – D 2
C523	on brake pedal support – 2.5L Duratec–VE (VE6)	28 – D 2
C523	on brake pedal support – 2.5L Duratec–VE (VE6), manual transmission	28 – D 2
C523	on brake pedal support – 3.0L Duratec–SE (VE6)	28 – D 2
C523	on brake pedal support – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	28 – D 2
C523	on brake pedal support – 3.0L Duratec–ST (VE6)	28 – D 2
C523	on brake pedal support – 4–speed automatic transmission (CD4E)	28 – D 2
C523	on brake pedal support – 5–speed automatic transmission (5F31J)	28 – D 2
C523	on brake pedal support – 5–speed automatic transmission (5F31J), Diesel engines	28 – D 2
C523	on brake pedal support – 5–speed automatic transmission (5F31J), Petrol engines	28 – D 2
C523	on brake pedal support – before 08/2004	28 – D 2
C523	on brake pedal support – Bosch 8.0	28 – D 2
C523	on brake pedal support – Diesel engines	28 – D 2
C523	on brake pedal support – F93	28 – D 2
C523	on brake pedal support – Petrol engines, except 1.8L Duratec–SCi (MI4)	28 – D 2
C523	on brake pedal support – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	28 – D 2
C523	on brake pedal support – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	28 – D 2
C523	on brake pedal support – Stop Lamps, with trailer socket, wagon, as of 01/2004	28 – D 2
C523	on brake pedal support – Stop Lamps, with trailer socket, wagon, before 01/2004	28 – D 2
C523	on brake pedal support – Stop Lamps, without trailer socket, 4–door model/5–door model	28 – D 2
C523	on brake pedal support – Stop Lamps, without trailer socket, wagon	28 – D 2
C523	on brake pedal support	28 – D 2
C524	behind dash panel, centre – EATC	24 – D 5
C524	behind dash panel, centre – EATC	25 – C 5
C525	roof, front, centre – 1.8/2.0L Duratec–HE (MI4)	21 – E 5
C525	roof, front, centre – 1.8L Duratec–SCi (MI4)	21 – E 5
C525	roof, front, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	21 – E 5
C525	roof, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	21 – E 5
C525	roof, front, centre – 2.5L Duratec–VE (VE6)	21 – E 5

C525	roof, front, centre – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	21 – E 5
C525	roof, front, centre – 3.0L Duratec–ST (VE6)	21 – E 5
C525	roof, front, centre – Diesel engines	21 – E 5
C525	roof, front, centre – F73	21 – E 5
C525	roof, front, centre – F91	21 – E 5
C525	roof, front, centre – front and rear power windows, Passenger side front	21 – E 5
C525	roof, front, centre – G200	21 – E 5
C525	roof, front, centre – Petrol engines	21 – E 5
C525	roof, front, centre – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	21 – E 5
C525	roof, front, centre – Pre–equipment pack, Diesel engines	21 – E 5
C525	roof, front, centre – Pre–equipment pack, Petrol engines	21 – E 5
C528	roof, front, centre – Autolamps	
C528	roof, front, centre – F91	
C528	roof, front, centre – G202	
C528	roof, front, centre – with rain sensor	
C529	on steering column, top – F88, F89, with autolamps	37 – C 3
C529	on steering column, top – F88, F89, without autolamps	37 – C 3
C529	on steering column, top – G203	37 – C 3
C529	on steering column, top – G204, as of 04/2004	37 – C 3
C529	on steering column, top – G204, before 04/2004	37 – C 3
C529	on steering column, top – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	37 – C 3
C529	on steering column, top – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	37 – C 3
C529	on steering column, top – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	37 – C 3
C529	on steering column, top – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	37 – C 3
C529	on steering column, top – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	37 – C 3
C529	on steering column, top – Light switch, with daytime running lamps, with high intensity discharge headlamps	37 – C 3
C529	on steering column, top – Light switch, with daytime running lamps, without high intensity discharge headlamps	37 – C 3
C529	on steering column, top – Light switch, without daytime running lamps, with high intensity discharge headlamps	37 – C 3
C529	on steering column, top – Light switch, without daytime running lamps, without high intensity discharge headlamps	37 – C 3
C529	on steering column, top – Turn Signal and Hazard Lamps	37 – C 3
C529	on steering column, top – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	37 – C 3
C529	on steering column, top – Turn Signal and Hazard Lamps, with trailer socket, wagon	37 – C 3
C529	on steering column, top – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	37 – C 3
C529	on steering column, top – Turn Signal and Hazard Lamps, without trailer socket, wagon	37 – C 3
C529	on steering column, top – with high intensity discharge headlamps	37 – C 3
C529	on steering column, top – without high intensity discharge headlamps	37 – C 3

C529	on steering column, top	37 – C 3
C530	on steering column, top – F94	37 – D 4
C530	on steering column, top – G204, as of 04/2004	37 – D 4
C530	on steering column, top – G204, before 04/2004	37 – D 4
C530	on steering column, top – with rain sensor	37 – D 4
C530	on steering column, top – With rear window wiper, with headlamp washer	37 – D 4
C530	on steering column, top – With rear window wiper, without headlamp washer	37 – D 4
C530	on steering column, top – with variable intermittent wipe	37 – D 4
C530	on steering column, top – Without rear window wiper, with headlamp washer	37 – D 4
C530	on steering column, top – Without rear window wiper, without headlamp washer	37 – D 4
C530	on steering column, top	37 – D 4
C532	behind dash panel, centre	14 – C 5
C532	behind dash panel, centre	15 – E 5
C533	behind dash panel, centre	14 – A 1
C533	behind dash panel, centre	15 – C 5
C534	behind dash panel, centre	14 – B 1
C534	behind dash panel, centre	15 – D 1
C535	behind dash panel, centre – Manual A/C, before 04/2004	14 – F 3
C535	behind dash panel, centre – Manual A/C, before 04/2004	15 – E 4
C536	behind dash panel – Autolamps	
C536	behind dash panel – F20, F21	
C536	behind dash panel – F88, F89, with autolamps	
C536	behind dash panel – F94	
C536	behind dash panel – G204, as of 04/2004	
C536	behind dash panel – G204, before 04/2004	
C536	behind dash panel – Light switch, with autolamps	
C536	behind dash panel – with rain sensor	
C536	behind dash panel – With rear window wiper, with headlamp washer	
C536	behind dash panel – With rear window wiper, without headlamp washer	
C536	behind dash panel – Without rear window wiper, with headlamp washer	
C536	behind dash panel – Without rear window wiper, without headlamp washer	
C536	behind dash panel	
C537	behind dash panel, centre – EATC, before 04/2004	
C537	behind dash panel, centre – G204, as of 04/2004	
C537	behind dash panel, centre – G204, before 04/2004	
C538	behind dash panel, centre	14 – D 5
C538	behind dash panel, centre	
C539a	behind dash panel, centre – EATC, as of 04/2004	27 – D 4
C539a	behind dash panel, centre – EATC, before 04/2004	27 – D 4
C539a	behind dash panel, centre – F65, F66	27 – D 4
C539a	behind dash panel, centre – F76, F77, as of 04/2004	27 – D 4
C539a	behind dash panel, centre – F76, F77, before 04/2004	27 – D 4
C539a	behind dash panel, centre – G204, as of 04/2004	27 – D 4
C539a	behind dash panel, centre – G204, before 04/2004	27 – D 4
C539a	behind dash panel, centre – Manual A/C, before 04/2004	27 – D 4
C539a	behind dash panel, centre	27 – D 4
C539b	behind dash panel, centre – Data link connector, pin 7	27 – D 4
C539b	behind dash panel, centre – Data link connector, pins 3 and 11, with external CD changer and video system	27 – D 4

C539b	behind dash panel, centre – Data link connector, pins 3 and 11, with external CD changer or video system	27 – D 4
C539b	behind dash panel, centre – Data link connector, pins 3 and 11, with voice control	27 – D 4
C539b	behind dash panel, centre – Data link connector, pins 3 and 11, without external CD changer and video system	27 – D 4
C539b	behind dash panel, centre – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004	27 – D 4
C539b	behind dash panel, centre – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004	27 – D 4
C539b	behind dash panel, centre – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004	27 – D 4
C539b	behind dash panel, centre – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004	27 – D 4
C539b	behind dash panel, centre – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004	27 – D 4
C539b	behind dash panel, centre – Data link connector, pins 6 and 14, Petrol engines, before 08/2004	27 – D 4
C539b	behind dash panel, centre – EATC	27 – D 4
C539b	behind dash panel, centre – EATC, as of 04/2004	27 – D 4
C539b	behind dash panel, centre – EATC, before 04/2004	27 – D 4
C539b	behind dash panel, centre – F65, F66	27 – D 4
C539b	behind dash panel, centre – F69, with external CD changer and/or video system	27 – D 4
C539b	behind dash panel, centre – F69, without external CD changer and video system	27 – D 4
C539b	behind dash panel, centre – F76, F77, before 04/2004	27 – D 4
C539b	behind dash panel, centre – G204, before 04/2004	27 – D 4
C539b	behind dash panel, centre – Manual A/C, before 04/2004	27 – D 4
C539b	behind dash panel, centre	27 – D 4
C540a	vehicle rear end, LH side – Bosch, wagon	51 – B 4
C540a	vehicle rear end, LH side – F64, with trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – F64, without trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004	51 – B 4
C540a	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, before 01/2004	51 – B 4
C540a	vehicle rear end, LH side – Fog lamps, without trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004	51 – B 4
C540a	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004	51 – B 4
C540a	vehicle rear end, LH side – G300, without trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, with autolamps	51 – B 4
C540a	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, without autolamps	51 – B 4
C540a	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps	51 – B 4
C540a	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps	51 – B 4

C540a	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	51 – B 4
C540a	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004	51 – B 4
C540a	vehicle rear end, LH side – Reversing lamps, without trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004	51 – B 4
C540a	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004	51 – B 4
C540a	vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – Valeo, wagon, as of 01/2004	51 – B 4
C540a	vehicle rear end, LH side – Valeo, wagon, before 01/2004	51 – B 4
C540a	vehicle rear end, LH side – with trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side – without trailer socket, wagon	51 – B 4
C540a	vehicle rear end, LH side	51 – B 4
C540a	in loading space, rear, LH side – Trailer socket, wagon, as of 01/2004	
C540a	in loading space, rear, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004	
C540b	vehicle rear end, LH side – Bosch, wagon	51 – B 2
C540b	vehicle rear end, LH side – F64, with trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – F64, without trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004	51 – B 2
C540b	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, before 01/2004	51 – B 2
C540b	vehicle rear end, LH side – Fog lamps, without trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004	51 – B 2
C540b	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004	51 – B 2
C540b	vehicle rear end, LH side – G300, without trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, with autolamps	51 – B 2
C540b	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, without autolamps	51 – B 2
C540b	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps	51 – B 2
C540b	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps	51 – B 2
C540b	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	51 – B 2
C540b	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004	51 – B 2
C540b	vehicle rear end, LH side – Reversing lamps, without trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004	51 – B 2
C540b	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004	51 – B 2
C540b	vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon	51 – B 2

C540b	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – Valeo, wagon, as of 01/2004	51 – B 2
C540b	vehicle rear end, LH side – Valeo, wagon, before 01/2004	51 – B 2
C540b	vehicle rear end, LH side – with trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side – without trailer socket, wagon	51 – B 2
C540b	vehicle rear end, LH side	51 – B 2
C540	vehicle rear end, LH side – Bosch, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – F64, with trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – F64, without trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	47 – B 4
C540	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	47 – B 4
C540	vehicle rear end, LH side – Fog lamps, without trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004	47 – B 4
C540	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004	47 – B 4
C540	vehicle rear end, LH side – G300, without trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	47 – B 4
C540	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	47 – B 4
C540	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	47 – B 4
C540	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	47 – B 4
C540	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	47 – B 4
C540	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	47 – B 4
C540	vehicle rear end, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	47 – B 4
C540	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	47 – B 4
C540	vehicle rear end, LH side – Stop Lamps, without trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	47 – B 4

C540	vehicle rear end, LH side – Valeo, 4–door model/5–door model, as of 01/2004	47 – B 4
C540	vehicle rear end, LH side – Valeo, 4–door model/5–door model, before 01/2004	47 – B 4
C540	vehicle rear end, LH side – with trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side – without trailer socket, 4–door model/5–door model	47 – B 4
C540	vehicle rear end, LH side	47 – B 4
C540	vehicle rear end, LH side – Bosch, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – F64, with trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – F64, without trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	49 – B 4
C540	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	49 – B 4
C540	vehicle rear end, LH side – Fog lamps, without trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004	49 – B 4
C540	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004	49 – B 4
C540	vehicle rear end, LH side – G300, without trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	49 – B 4
C540	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	49 – B 4
C540	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	49 – B 4
C540	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	49 – B 4
C540	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	49 – B 4
C540	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	49 – B 4
C540	vehicle rear end, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	49 – B 4
C540	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	49 – B 4
C540	vehicle rear end, LH side – Stop Lamps, without trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – Valeo, 4–door model/5–door model, as of 01/2004	49 – B 4
C540	vehicle rear end, LH side – Valeo, 4–door model/5–door model, before 01/2004	49 – B 4
C540	vehicle rear end, LH side – with trailer socket, 4–door model/5–door model	49 – B 4
C540	vehicle rear end, LH side – without trailer socket, 4–door model/5–door model	49 – B 4

C540	vehicle rear end, LH side	49 – B 4
C540	in loading space, rear, LH side – Trailer socket, wagon, as of 01/2004	
C540	in loading space, rear, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004	
C541a	vehicle rear end, RH side – F63, wagon	52 – D 4
C541a	vehicle rear end, RH side – Fog lamps, with trailer socket, wagon, as of 01/2004	52 – D 4
C541a	vehicle rear end, RH side – Fog lamps, with trailer socket, wagon, before 01/2004	52 – D 4
C541a	vehicle rear end, RH side – Fog lamps, without trailer socket, wagon	52 – D 4
C541a	vehicle rear end, RH side – G205	52 – D 4
C541a	vehicle rear end, RH side – Light switch, Fog lamps, with trailer socket, wagon	52 – D 4
C541a	vehicle rear end, RH side – Light switch, Fog lamps, without trailer socket, wagon	52 – D 4
C541a	vehicle rear end, RH side – Parking Lamps, with trailer socket, wagon, with autolamps	52 – D 4
C541a	vehicle rear end, RH side – Parking Lamps, with trailer socket, wagon, without autolamps	52 – D 4
C541a	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	52 – D 4
C541a	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	52 – D 4
C541a	vehicle rear end, RH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	52 – D 4
C541a	vehicle rear end, RH side – Reversing lamps, with trailer socket, wagon, before 01/2004	52 – D 4
C541a	vehicle rear end, RH side – Reversing lamps, without trailer socket, wagon	52 – D 4
C541a	vehicle rear end, RH side – Stop Lamps, with trailer socket, wagon, as of 01/2004	52 – D 4
C541a	vehicle rear end, RH side – Stop Lamps, with trailer socket, wagon, before 01/2004	52 – D 4
C541a	vehicle rear end, RH side – Stop Lamps, without trailer socket, wagon	52 – D 4
C541a	vehicle rear end, RH side – Turn Signal and Hazard Lamps, with trailer socket, wagon	52 – D 4
C541a	vehicle rear end, RH side – Turn Signal and Hazard Lamps, without trailer socket, wagon	52 – D 4
C541a	vehicle rear end, RH side – with trailer socket, wagon	52 – D 4
C541a	vehicle rear end, RH side – without trailer socket, wagon	52 – D 4
C541a	vehicle rear end, RH side	52 – D 4
C541b	vehicle rear end, RH side – F63, wagon	52 – F 3
C541b	vehicle rear end, RH side – Fog lamps, with trailer socket, wagon, as of 01/2004	52 – F 3
C541b	vehicle rear end, RH side – Fog lamps, with trailer socket, wagon, before 01/2004	52 – F 3
C541b	vehicle rear end, RH side – Fog lamps, without trailer socket, wagon	52 – F 3
C541b	vehicle rear end, RH side – G205	52 – F 3
C541b	vehicle rear end, RH side – Light switch, Fog lamps, with trailer socket, wagon	52 – F 3
C541b	vehicle rear end, RH side – Light switch, Fog lamps, without trailer socket, wagon	52 – F 3
C541b	vehicle rear end, RH side – Parking Lamps, with trailer socket, wagon, with autolamps	52 – F 3
C541b	vehicle rear end, RH side – Parking Lamps, with trailer socket, wagon, without autolamps	52 – F 3
C541b	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	52 – F 3
C541b	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	52 – F 3

C541b	vehicle rear end, RH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	52 – F 3
C541b	vehicle rear end, RH side – Reversing lamps, with trailer socket, wagon, before 01/2004	52 – F 3
C541b	vehicle rear end, RH side – Reversing lamps, without trailer socket, wagon	52 – F 3
C541b	vehicle rear end, RH side – Stop Lamps, with trailer socket, wagon, as of 01/2004	52 – F 3
C541b	vehicle rear end, RH side – Stop Lamps, with trailer socket, wagon, before 01/2004	52 – F 3
C541b	vehicle rear end, RH side – Stop Lamps, without trailer socket, wagon	52 – F 3
C541b	vehicle rear end, RH side – Turn Signal and Hazard Lamps, with trailer socket, wagon	52 – F 3
C541b	vehicle rear end, RH side – Turn Signal and Hazard Lamps, without trailer socket, wagon	52 – F 3
C541b	vehicle rear end, RH side – with trailer socket, wagon	52 – F 3
C541b	vehicle rear end, RH side – without trailer socket, wagon	52 – F 3
C541b	vehicle rear end, RH side	52 – F 3
C541	vehicle rear end, RH side – F63, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	48 – E 4
C541	vehicle rear end, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	48 – E 4
C541	vehicle rear end, RH side – Fog lamps, without trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004	48 – E 4
C541	vehicle rear end, RH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004	48 – E 4
C541	vehicle rear end, RH side – G300, without trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	48 – E 4
C541	vehicle rear end, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	48 – E 4
C541	vehicle rear end, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	48 – E 4
C541	vehicle rear end, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	48 – E 4
C541	vehicle rear end, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	48 – E 4
C541	vehicle rear end, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	48 – E 4
C541	vehicle rear end, RH side – Reversing lamps, without trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	48 – E 4
C541	vehicle rear end, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	48 – E 4

C541	vehicle rear end, RH side – Stop Lamps, without trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – with trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side – without trailer socket, 4–door model/5–door model	48 – E 4
C541	vehicle rear end, RH side	48 – E 4
C541	vehicle rear end, RH side – F63, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	50 – E 4
C541	vehicle rear end, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	50 – E 4
C541	vehicle rear end, RH side – Fog lamps, without trailer socket, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004	50 – E 4
C541	vehicle rear end, RH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004	50 – E 4
C541	vehicle rear end, RH side – G300, without trailer socket, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	50 – E 4
C541	vehicle rear end, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	50 – E 4
C541	vehicle rear end, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	50 – E 4
C541	vehicle rear end, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	50 – E 4
C541	vehicle rear end, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	50 – E 4
C541	vehicle rear end, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	50 – E 4
C541	vehicle rear end, RH side – Reversing lamps, without trailer socket, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	50 – E 4
C541	vehicle rear end, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	50 – E 4
C541	vehicle rear end, RH side – Stop Lamps, without trailer socket, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	50 – E 4

C541	vehicle rear end, RH side – with trailer socket, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side – without trailer socket, 4–door model/5–door model	50 – E 4
C541	vehicle rear end, RH side	50 – E 4
C542	behind dash panel, centre – EATC, as of 04/2004	83 – F 2
C542	behind dash panel, centre – F76, F77, as of 04/2004	83 – F 2
C542	behind dash panel, centre – G204, as of 04/2004	83 – F 2
C544	behind dash panel – EATC	
C550	under passenger's seat – F71, except DVD navigation system with touch screen, with video system	
C550	under passenger's seat – F71, with DVD navigation system with touch screen	
C550	under passenger's seat – G201, except DVD navigation system with touch screen, as of 04/2004	
C550	under passenger's seat – G201, except DVD navigation system with touch screen, before 04/2004	
C550	under passenger's seat – G201, with DVD navigation system with touch screen, before 04/2004	
C550	under passenger's seat – with DVD navigation system with touch screen	
C550	under passenger's seat – without DVD navigation system with touch screen	
C550	under passenger's seat	
C553	under passenger's seat	
C554	front seat, LH	
C555	under driver's seat	
C556	under passenger's seat – DVD navigation system with touch screen	
C556	under passenger's seat – F71, except DVD navigation system with touch screen, with video system	
C556	under passenger's seat – F71, with DVD navigation system with touch screen	
C556	under passenger's seat – G201, except DVD navigation system with touch screen, as of 04/2004	
C556	under passenger's seat – G201, except DVD navigation system with touch screen, before 04/2004	
C556	under passenger's seat – G201, with DVD navigation system with touch screen, before 04/2004	
C556	under passenger's seat – with DVD navigation system with touch screen	
C556	under passenger's seat – without DVD navigation system with touch screen	
C556	under passenger's seat	
C557	front seat, RH – DVD navigation system with touch screen	
C557	front seat, RH – F71, except DVD navigation system with touch screen, with video system	
C557	front seat, RH – F71, with DVD navigation system with touch screen	
C557	front seat, RH – G201, except DVD navigation system with touch screen, as of 04/2004	
C557	front seat, RH – G201, except DVD navigation system with touch screen, before 04/2004	
C557	front seat, RH – G201, with DVD navigation system with touch screen, before 04/2004	
C557	front seat, RH – with DVD navigation system with touch screen	
C557	front seat, RH – without DVD navigation system with touch screen	
C557	front seat, RH	
C558	under passenger's seat	
C559	front seat, LH	

C560	front seat, LH	
C575	dash panel, centre – F76, F77, as of 04/2004	27 – A 4
C575	dash panel, centre – F76, F77, before 04/2004	27 – A 4
C575	dash panel, centre – G204, as of 04/2004	27 – A 4
C575	dash panel, centre – G204, before 04/2004	27 – A 4
C575	dash panel, centre	27 – A 4
C597	on LH C–pillar, left–hand–drive – with side head air bags	47 – F 4
C597	on RH C–pillar, right–hand–drive – with side head air bags	48 – A 4
C597	on LH C–pillar, left–hand–drive – with side head air bags	49 – F 4
C597	on RH C–pillar, right–hand–drive – with side head air bags	50 – A 5
C597	on LH C–pillar, left–hand–drive – with side head air bags	51 – D 5
C597	on RH C–pillar, right–hand–drive – with side head air bags	52 – B 5
C598	on LH C–pillar, right–hand–drive – with side head air bags	47 – F 4
C598	on RH C–pillar, left–hand–drive – with side head air bags	48 – A 3
C598	on LH C–pillar, right–hand–drive – with side head air bags	49 – F 4
C598	on RH C–pillar, left–hand–drive – with side head air bags	50 – A 4
C598	on LH C–pillar, right–hand–drive – with side head air bags	51 – D 5
C598	on RH C–pillar, left–hand–drive – with side head air bags	52 – B 4
C600	centre console – 1.8/2.0L Duratec–HE (MI4), automatic transmission	40 – D 3
C600	centre console – 4–speed automatic transmission (CD4E)	40 – D 3
C600	centre console – F81	40 – D 3
C600	centre console – G200	40 – D 3
C600	centre console – Ignition switch automatic transmission	40 – D 3
C600	centre console	40 – D 3
C604	centre console	
C605	under centre console – Data link connector, pins 3 and 11, with external CD changer and video system	
C605	under centre console – Data link connector, pins 3 and 11, with external CD changer or video system	
C605	under centre console – DVD navigation system with touch screen	
C605	under centre console – DVD navigation system with touch screen – with video system	
C605	under centre console – F71, except DVD navigation system with touch screen, without video system	
C605	under centre console – F71, with DVD navigation system with touch screen	
C605	under centre console – G201, except DVD navigation system with touch screen, as of 04/2004	
C605	under centre console – G201, except DVD navigation system with touch screen, before 04/2004	
C605	under centre console – G201, with DVD navigation system with touch screen, before 04/2004	
C605	under centre console – with external CD changer and/or video system	
C605	under centre console – with video system	
C606	dash panel, centre – Data link connector, pins 3 and 11, with external CD changer and video system	
C606	dash panel, centre – DVD navigation system with touch screen	
C606	dash panel, centre – F69, with external CD changer and/or video system	
C606	dash panel, centre – F72, with external CD changer and/or video system	
C606	dash panel, centre – G201, with DVD navigation system with touch screen, before 04/2004	

C607	in luggage compartment, LH side – 4–speed automatic transmission (CD4E), 4–door model/5–door model	
C607	in loading space, LH side – 4–speed automatic transmission (CD4E), wagon	
C607	in luggage compartment, LH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model	
C607	in loading space, LH side – 5–speed automatic transmission (5F31J), wagon	
C607	in luggage compartment, LH side – Data link connector, pins 3 and 11, with external CD changer and video system	
C607	in loading space, LH side	
C607	in luggage compartment, LH side – DVD navigation system with touch screen	
C607	in loading space, LH side – DVD navigation system with touch screen	
C607	in luggage compartment, LH side – F72, with external CD changer and/or video system	
C607	in luggage compartment, LH side – G201, with DVD navigation system with touch screen, before 04/2004	
C607	in luggage compartment, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
C607	in luggage compartment, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	
C607	in luggage compartment, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	
C607	in luggage compartment, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004	
C607	in luggage compartment, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model	
C607	in loading space, LH side – Reversing lamps, without trailer socket, wagon	
C610	under centre console – Bluetooth voice control	
C610	under centre console – Data link connector, pins 3 and 11, with voice control	
C610	under centre console – F71, Bluetooth voice control	
C610	under centre console – G201, except DVD navigation system with touch screen, as of 04/2004	
C700	roof, rear, centre, 4–door model – G200	18 – F 4
C700	roof, rear, centre, 4–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	18 – F 4
C700	roof, rear, centre, 4–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	18 – F 4
C700	roof, rear, centre, 4–door model – Stop Lamps, without trailer socket, 4–door model/5–door model	18 – F 4
C700	roof, rear, centre, 4–door model – G200	57 – D 3
C700	in tailgate, top, 5–door model – G300, 5–door model/wagon	57 – D 3
C700	in tailgate, top, 5–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	57 – D 3
C700	in tailgate, top, 5–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	57 – D 3
C700	in tailgate, top, 5–door model – Stop Lamps, without trailer socket, 4–door model/5–door model	57 – D 3
C700	roof, rear, centre, 4–door model – G200	58 – D 4
C700	in tailgate, wagon – G300, 5–door model/wagon	58 – D 4
C700	in tailgate, wagon – Stop Lamps, with trailer socket, wagon, as of 01/2004	58 – D 4
C700	in tailgate, wagon – Stop Lamps, with trailer socket, wagon, before 01/2004	58 – D 4

C700	in tailgate, wagon – Stop Lamps, without trailer socket, wagon	58 – D 4
C701	in bottom of LH front door – G200, LHD	38 – E 3
C701	in bottom of LH front door – G205, RHD	38 – E 3
C701	in bottom of LH front door	38 – E 3
C702	in passenger's door	38 – E 2
C703	in LH rear door	39 – E 3
C704	in RH rear door	39 – E 2
C705	in driver's door – F60	38 – B 1
C705	in driver's door – F61	38 – B 1
C705	in driver's door – F91, LHD	38 – B 1
C705	in driver's door – F91, RHD	38 – B 1
C705	in driver's door – front and rear power windows, Driver side front	38 – B 1
C705	in driver's door – Front power windows, Driver side	38 – B 1
C705	in driver's door – G200, LHD	38 – B 1
C705	in driver's door – G205, RHD	38 – B 1
C706	in passenger's door – F60	38 – B 1
C706	in passenger's door – F61	38 – B 1
C706	in passenger's door – F91, LHD	38 – B 1
C706	in passenger's door – F91, RHD	38 – B 1
C706	in passenger's door – front and rear power windows, Passenger side front	38 – B 1
C706	in passenger's door – Front power windows, Passenger side	38 – B 1
C706	in passenger's door – G200, RHD	38 – B 1
C706	in passenger's door – G205, LHD	38 – B 1
C707	in LH rear door – F60	39 – D 1
C707	in LH rear door – F91, LHD	39 – D 1
C707	in LH rear door – F91, RHD	39 – D 1
C707	in LH rear door – front and rear power windows, LH rear door	39 – D 1
C707	in LH rear door – G200	39 – D 1
C708	in RH rear door – F61	39 – D 1
C708	in RH rear door – F91, LHD	39 – D 1
C708	in RH rear door – F91, RHD	39 – D 1
C708	in RH rear door – front and rear power windows, RH rear door	39 – D 1
C708	in RH rear door – G205	39 – D 1
C709	in driver's door – F91, LHD	38 – E 3
C709	in driver's door – F91, RHD	38 – E 3
C709	in driver's door – front and rear power windows, Driver side front	38 – E 3
C709	in driver's door – front and rear power windows, LH rear door	38 – E 3
C709	in driver's door – front and rear power windows, RH rear door	38 – E 3
C709	in driver's door – Front power windows, Driver side	38 – E 3
C709	in driver's door – G200, LHD	38 – E 3
C709	in driver's door – G205, RHD	38 – E 3
C709	in driver's door – LHD	38 – E 3
C709	in driver's door – RHD	38 – E 3
C710	in passenger's door – F91, LHD	38 – E 4
C710	in passenger's door – F91, RHD	38 – E 4
C710	in passenger's door – front and rear power windows, Passenger side front	38 – E 4
C710	in passenger's door – Front power windows, Passenger side	38 – E 4
C710	in passenger's door – G200, RHD	38 – E 4
C710	in passenger's door – G205, LHD	38 – E 4
C710	in passenger's door – LHD	38 – E 4

C710	in passenger's door – RHD	38 – E 4
C711	in LH rear door – F91, LHD	39 – B 4
C711	in LH rear door – F91, RHD	39 – B 4
C711	in LH rear door – front and rear power windows, LH rear door	39 – B 4
C711	in LH rear door – LHD	39 – B 4
C711	in LH rear door – RHD	39 – B 4
C712	in RH rear door – F91, LHD	39 – B 4
C712	in RH rear door – F91, RHD	39 – B 4
C712	in RH rear door – front and rear power windows, RH rear door	39 – B 4
C712	in RH rear door – LHD	39 – B 4
C712	in RH rear door – RHD	39 – B 4
C720	in bottom of LH front door	38 – C 4
C722	in LH rear door	39 – B 4
C723	in bottom of RH front door	38 – C 5
C724	in RH rear door	39 – B 3
C733	driver's door, front – F75, 5–speed automatic transmission (5F31J)	38 – A 4
C733	driver's door, front – F75, except 5–speed automatic transmission (5F31J)	38 – A 4
C733	driver's door, front – G200, LHD	38 – A 4
C733	driver's door, front – G205, RHD	38 – A 4
C733	driver's door, front	38 – A 4
C735a	Decklid, centre, 4–door model – F97	56 – C 5
C735a	Decklid, centre, 4–door model – Licence plate lamps	56 – C 5
C735a	in tailgate, 5–door model – F97	57 – C 3
C735a	in tailgate, 5–door model – Licence plate lamps	57 – C 3
C735a	in tailgate, wagon – F97	58 – C 5
C735a	in tailgate, wagon – Licence plate lamps	58 – C 5
C735b	Decklid, centre, 4–door model – G300, 4–door model	56 – C 5
C735b	Decklid, centre, 4–door model – Licence plate lamps	56 – C 5
C735b	in tailgate, 5–door model – G300, 5–door model/wagon	57 – C 3
C735b	in tailgate, 5–door model – Licence plate lamps	57 – C 3
C735b	in tailgate, wagon – G300, 5–door model/wagon	58 – C 5
C735b	in tailgate, wagon – Licence plate lamps	58 – C 5
C736a	Decklid, centre, 4–door model – F97	56 – A 1
C736a	Decklid, centre, 4–door model – Licence plate lamps	56 – A 1
C736a	in tailgate, 5–door model – F97	57 – A 1
C736a	in tailgate, 5–door model – Licence plate lamps	57 – A 1
C736a	in tailgate, wagon – F97	58 – B 4
C736a	in tailgate, wagon – Licence plate lamps	58 – B 4
C736b	Decklid, centre, 4–door model – G300, 4–door model	56 – A 1
C736b	Decklid, centre, 4–door model – Licence plate lamps	56 – A 1
C736b	in tailgate, 5–door model – G300, 5–door model/wagon	57 – A 1
C736b	in tailgate, 5–door model – Licence plate lamps	57 – A 1
C736b	in tailgate, wagon – G300, 5–door model/wagon	58 – B 4
C736b	in tailgate, wagon – Licence plate lamps	58 – B 4
C740	on LH C–pillar, 4–door model – Heated rear window, Heated exterior mirrors	47 – D 5
C740	on LH C–pillar, 4–door model	47 – D 5
C740	in tailgate, 5–door model – Heated rear window, Heated exterior mirrors	57 – F 3
C740	in tailgate, 5–door model	57 – F 3
C740	in tailgate, wagon – Heated rear window, Heated exterior mirrors	58 – E 4
C740	in tailgate, wagon	58 – E 4

C741	on LH C–pillar, 4–door model – G301, 4–door model	48 – D 5
C741	on LH C–pillar, 4–door model – Heated rear window, Heated exterior mirrors	48 – D 5
C741	in tailgate, 5–door model – G300, 5–door model/wagon	57 – C 4
C741	in tailgate, 5–door model – Heated rear window, Heated exterior mirrors	57 – C 4
C741	in tailgate, wagon – G300, 5–door model/wagon	58 – A 3
C741	in tailgate, wagon – Heated rear window, Heated exterior mirrors	58 – A 3
C742	in decklid – G300, 4–door model	58 – D 2
C742	in tailgate – G300, 5–door model/wagon	58 – D 2
C742	in decklid	58 – D 2
C742	in tailgate	58 – D 2
C745	in tailgate, 5–door model – F90	57 – C 3
C745	in tailgate, 5–door model – G300, 5–door model/wagon	57 – C 3
C745	in tailgate, 5–door model – With rear window wiper	57 – C 3
C745	in tailgate, 5–door model	57 – C 3
C745	in tailgate, wagon – F90	58 – E 3
C745	in tailgate, wagon – G300, 5–door model/wagon	58 – E 3
C745	in tailgate, wagon – With rear window wiper	58 – E 3
C745	in tailgate, wagon	58 – E 3
C750	in decklid, 4–door model – G300, 4–door model	56 – B 1
C750	in decklid, 4–door model	56 – B 1
C750	in tailgate – G300, 5–door model/wagon	57 – B 1
C750	in tailgate	57 – B 1
C750	in tailgate – G300, 5–door model/wagon	58 – C 1
C750	in tailgate	58 – C 1
C751	in decklid, 4–door model – G300, 4–door model	56 – E 2
C751	in decklid, 4–door model	56 – E 2
C751	in tailgate	57 – D 1
C751	in tailgate	58 – D 1
C753	LH A–pillar, centre – F75, 5–speed automatic transmission (5F31J)	16 – B 2
C753	LH A–pillar, centre – F75, except 5–speed automatic transmission (5F31J)	16 – B 2
C753	LH A–pillar, centre – G200	16 – B 2
C753	LH A–pillar, centre – With power folding mirrors	16 – B 2
C753	LH A–pillar, centre	16 – B 2
C755	driver's door – F98	38 – A 3
C755	driver's door – F99, 4–door model/5–door model	38 – A 3
C755	driver's door – F99, wagon	38 – A 3
C755	driver's door – G200, LHD	38 – A 3
C755	driver's door – G205, RHD	38 – A 3
C755	driver's door – Heated rear window, Heated exterior mirrors	38 – A 3
C755	driver's door – With power folding mirrors	38 – A 3
C755	driver's door	38 – A 3
C756	passenger's door – F98	38 – A 3
C756	passenger's door – F99, 4–door model/5–door model	38 – A 3
C756	passenger's door – F99, wagon	38 – A 3
C756	passenger's door – G200, RHD	38 – A 3
C756	passenger's door – G205, LHD	38 – A 3
C756	passenger's door – Heated rear window, Heated exterior mirrors	38 – A 3
C756	passenger's door – With power folding mirrors	38 – A 3
C756	passenger's door	38 – A 3
C800	vehicle underbody, on fuel tank – 1.8/2.0L Duratec–HE (MI4)	53 – B 4

C800	vehicle underbody, on fuel tank – 1.8L Duratec–SCi (MI4)	53 – B 4
C800	vehicle underbody, on fuel tank – 2.5L Duratec–VE (VE6)	53 – B 4
C800	vehicle underbody, on fuel tank – 3.0L Duratec–SE (VE6)	53 – B 4
C800	vehicle underbody, on fuel tank – 3.0L Duratec–ST (VE6), as of 04/2004	53 – B 4
C800	vehicle underbody, on fuel tank – 3.0L Duratec–ST (VE6), before 04/2004	53 – B 4
C800	vehicle underbody, on fuel tank – G300	53 – B 4
C800	vehicle underbody, on fuel tank	53 – B 4
C805	on engine bulkhead, centre – F22, F23, petrol engines	4 – C 5
C805	on engine bulkhead, centre – G104	4 – C 5
C805	on engine bulkhead, centre	4 – C 5
C810	in luggage compartment, LH side, behind luggage compartment lining, 4–door model	47 – F 3
C810	in luggage compartment, LH side, behind luggage compartment lining, 5–door model	49 – F 3
C810	behind loading space lining, rear, RH side, wagon	52 – D 3
C830	wheel hub, rear, LH side – before 08/2004	45 – A 1
C830	wheel hub, rear, LH side – Bosch 8.0	45 – A 1
C830	wheel hub, rear, LH side	45 – A 1
C831	wheel hub, rear, RH side – before 08/2004	45 – A 1
C831	wheel hub, rear, RH side – Bosch 8.0	46 – F 4
C831	wheel hub, rear, RH side	46 – F 4
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – F88, F89, with autolamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – F88, F89, without autolamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – F95, F96	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – G104	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – Light switch, with daytime running lamps, without high intensity discharge headlamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – Light switch, without daytime running lamps, without high intensity discharge headlamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – With high intensity discharge headlamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – with high intensity discharge headlamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – Without high intensity discharge headlamps	29 – E 5

C901	engine compartment, front, LH side, in Battery Junction Box (BJB) – without high intensity discharge headlamps	29 – E 5
C901	engine compartment, front, LH side, in Battery Junction Box (BJB)	29 – E 5
C902	engine compartment, front, LH side, in Battery Junction Box (BJB) – F26	29 – F 4
C902	engine compartment, front, LH side, in Battery Junction Box (BJB) – Heated windshield	29 – F 4
C902	engine compartment, front, LH side, in Battery Junction Box (BJB)	29 – F 4
C903	engine compartment, front, LH side, in Battery Junction Box (BJB) – F26	29 – F 5
C903	engine compartment, front, LH side, in Battery Junction Box (BJB)	29 – F 5
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F27	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F27, 3.0L Duratec–SE (VE6)	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F40, 1.8L Duratec–SCi (MI4)	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 2.5L Duratec–VE (VE6)	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 3.0L Duratec–SE (VE6)	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 3.0L Duratec–ST (VE6), as of 04/2004	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, 3.0L Duratec–ST (VE6), before 04/2004	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB) – F42, Diesel engines	29 – E 4
C904	engine compartment, front, LH side, in Battery Junction Box (BJB)	29 – E 4
C905	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	29 – B 3
C905	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4), automatic transmission	29 – B 3
C905	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	29 – B 3

C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),manual transmission . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – F33, 1.8L Duratec–SCi (MI4) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – F9 . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 3.0L Duratec–SE (VE6) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 29 – B 3
C905 engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 29 – B 3

C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – F30, F31, F32, Petrol engines	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)	29 – E 3
C906	engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	29 – E 3
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),manual transmission	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, 3.0L Duratec–SE (VE6)	29 – D 1

C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, Diesel engines	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 3.0L Duratec–SE (VE6)	29 – D 1
C907	engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	29 – D 1
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J)	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Auto–dimming interior mirror	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Bosch, 4–door model/5–door model	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Bosch, wagon	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – DVD navigation system with touch screen	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – F78, F80	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, Diesel engines	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Pre–equipment pack, Petrol engines	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, as of 01/2004	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, before 01/2004	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, without trailer socket, 4–door model/5–door model	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, without trailer socket, wagon	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, as of 01/2004	29 – E 2

C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, before 01/2004	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, wagon, as of 01/2004	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, wagon, before 01/2004	29 – E 2
C908	engine compartment, front, LH side, in Battery Junction Box (BJB) – With rear window wiper	29 – E 2
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J)	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Auto–dimming interior mirror	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Bosch, 4–door model/5–door model	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Bosch, wagon	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Diesel engines	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – DVD navigation system with touch screen	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – F78, F80	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – G102, Diesel engines	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Pre–equipment pack, Diesel engines	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	29 – B 1

C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, as of 01/2004	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, before 01/2004	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, without trailer socket, 4–door model/5–door model	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Reversing lamps, without trailer socket, wagon	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, as of 01/2004	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, before 01/2004	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, wagon, as of 01/2004	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – Valeo, wagon, before 01/2004	29 – B 1
C909	engine compartment, front, LH side, in Battery Junction Box (BJB) – With rear window wiper	29 – B 1
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E), 4–door model/5–door model	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E), wagon	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – F28, F29	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – Ignition switch automatic transmission	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB) – Ignition switch manual transmission	29 – E 2
C910	engine compartment, front, LH side, in Battery Junction Box (BJB)	29 – E 2
C911	in luggage compartment, LH side, behind luggage compartment lining, 4–door model – in luggage compartment, LH side, behind luggage compartment lining, 4–door model	

C911	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – in luggage compartment, LH side, behind luggage compartment lining, 5–door model	
C911	in loading space, LH side, behind loading space lining, wagon – in loading space, LH side, behind loading space lining, wagon	
C915	under dash panel, LH side, in Central Junction Box (CJB) – F7	32 – B 5
C915	under dash panel, LH side, in Central Junction Box (CJB) – G200	32 – B 5
C915	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	32 – B 5
C915	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	32 – B 5
C915	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	32 – B 5
C915	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	32 – B 5
C915	under dash panel, LH side, in Central Junction Box (CJB)	32 – B 5
C915	under dash panel, LH side, in Central Junction Box (CJB) – F7	33 – B 4
C915	under dash panel, LH side, in Central Junction Box (CJB) – G200	33 – B 4
C915	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	33 – B 4
C915	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	33 – B 4
C915	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	33 – B 4
C915	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	33 – B 4
C915	under dash panel, LH side, in Central Junction Box (CJB)	33 – B 4
C916	under dash panel, LH side, in Central Junction Box (CJB) – F90	32 – A 4
C916	under dash panel, LH side, in Central Junction Box (CJB) – F94	32 – A 4
C916	under dash panel, LH side, in Central Junction Box (CJB) – With rear window wiper	32 – A 4
C916	under dash panel, LH side, in Central Junction Box (CJB)	32 – A 4
C916	under dash panel, LH side, in Central Junction Box (CJB) – F90	33 – B 3
C916	under dash panel, LH side, in Central Junction Box (CJB) – F94	33 – B 3
C916	under dash panel, LH side, in Central Junction Box (CJB) – With rear window wiper	33 – B 3
C916	under dash panel, LH side, in Central Junction Box (CJB)	33 – B 3
C917	under dash panel, LH side, in Central Junction Box (CJB) – F94	32 – A 3
C917	under dash panel, LH side, in Central Junction Box (CJB) – with variable intermittent wipe	32 – A 3
C917	under dash panel, LH side, in Central Junction Box (CJB)	32 – A 3
C917	under dash panel, LH side, in Central Junction Box (CJB) – F94	33 – B 3
C917	under dash panel, LH side, in Central Junction Box (CJB) – with variable intermittent wipe	33 – B 3
C917	under dash panel, LH side, in Central Junction Box (CJB)	33 – B 3
C918	under dash panel, LH side, in Central Junction Box (CJB) – Cigar lighter	32 – A 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – F1, F2	32 – A 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – G200	32 – A 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps	32 – A 2

C918	under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	32 – A 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, wagon	32 – A 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	32 – A 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, wagon	32 – A 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – With high intensity discharge headlamps	32 – A 2
C918	under dash panel, LH side, in Central Junction Box (CJB)	32 – A 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Cigar lighter	33 – B 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – F1, F2	33 – B 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – G200	33 – B 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps	33 – B 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	33 – B 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, wagon	33 – B 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	33 – B 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, wagon	33 – B 2
C918	under dash panel, LH side, in Central Junction Box (CJB) – With high intensity discharge headlamps	33 – B 2
C918	under dash panel, LH side, in Central Junction Box (CJB)	33 – B 2
C919	under dash panel, LH side, in Central Junction Box (CJB) – F4, F5, F6	32 – B 5
C919	under dash panel, LH side, in Central Junction Box (CJB) – Heated rear window, Heated exterior mirrors	32 – B 5
C919	under dash panel, LH side, in Central Junction Box (CJB)	32 – B 5
C919	under dash panel, LH side, in Central Junction Box (CJB) – F4, F5, F6	33 – C 5
C919	under dash panel, LH side, in Central Junction Box (CJB) – Heated rear window, Heated exterior mirrors	33 – C 5
C919	under dash panel, LH side, in Central Junction Box (CJB)	33 – C 5
C920	under dash panel, LH side, in Central Junction Box (CJB) – EATC, as of 04/2004	33 – D 4
C920	under dash panel, LH side, in Central Junction Box (CJB) – EATC, before 04/2004	33 – D 4
C920	under dash panel, LH side, in Central Junction Box (CJB) – F4, F5, F6	33 – D 4
C920	under dash panel, LH side, in Central Junction Box (CJB) – F93	33 – D 4
C920	under dash panel, LH side, in Central Junction Box (CJB) – G200	33 – D 4
C920	under dash panel, LH side, in Central Junction Box (CJB) – Manual A/C, before 04/2004	33 – D 4
C920	under dash panel, LH side, in Central Junction Box (CJB)	33 – D 4
C921	under dash panel, LH side, in Central Junction Box (CJB) – F7	33 – E 4
C921	under dash panel, LH side, in Central Junction Box (CJB)	33 – E 4
C923	rear bumper – Bosch	
C924	rear bumper – Bosch	80 – E 2
C925	rear bumper – Bosch	80 – D 2
C926	rear bumper – Bosch	80 – C 2
C927	rear bumper – Bosch	80 – B 2

C1000	engine compartment – before 08/2004	4 – E 5
C1000	engine compartment – Bosch 8.0	4 – E 5
C1000	engine compartment – Data link connector, pin 7	4 – E 5
C1000	engine compartment – F1, F2	4 – E 5
C1000	engine compartment – F20, F21	4 – E 5
C1000	engine compartment – F76, F77, as of 04/2004	4 – E 5
C1000	engine compartment – F76, F77, before 04/2004	4 – E 5
C1000	engine compartment – G103	4 – E 5
C1000	engine compartment	4 – E 5
C1000	engine compartment – before 08/2004	6 – E 5
C1000	engine compartment – Bosch 8.0	6 – E 5
C1000	engine compartment – Data link connector, pin 7	6 – E 5
C1000	engine compartment – F1, F2	6 – E 5
C1000	engine compartment – F20, F21	6 – E 5
C1000	engine compartment – F76, F77, as of 04/2004	6 – E 5
C1000	engine compartment – F76, F77, before 04/2004	6 – E 5
C1000	engine compartment – G103	6 – E 5
C1000	engine compartment	6 – E 5
C1006	engine, front, LH side – 1.8L Duratec–SCi (MI4)	
C1006	engine, front, LH side – F40, 1.8L Duratec–SCi (MI4)	
C1007	engine, front, LH side – 1.8L Duratec–SCi (MI4)	75 – E 4
C1008	engine, bottom, RH side – 1.8L Duratec–SCi (MI4)	76 – E 2
C1009	in exhaust system – 1.8L Duratec–SCi (MI4)	
C1010	in intake system – 1.8L Duratec–SCi (MI4)	75 – B 1
C1011	in intake system – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C1012	in intake system – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C1013	in intake system – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C1014	in intake system – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C1015	engine, top, LH side – 1.8L Duratec–SCi (MI4)	
C1015	engine, top, LH side – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	
C1015	engine, top, LH side – G106, 1.8L Duratec–SCi (MI4), before 04/2004	
C1018	centre console – F81	
C1018	centre console – G204, as of 04/2004	
C1018	centre console – G204, before 04/2004	
C1018	centre console – with heated rear seats	
C1018	centre console	
C1019	dash panel, centre – G204, as of 04/2004	24 – E 4
C1019	dash panel, centre – G204, before 04/2004	24 – E 4
C1019	dash panel, centre – Turn Signal and Hazard Lamps	24 – E 4
C1019	dash panel, centre – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	24 – E 4
C1019	dash panel, centre – Turn Signal and Hazard Lamps, with trailer socket, wagon	24 – E 4
C1019	dash panel, centre – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	24 – E 4
C1019	dash panel, centre – Turn Signal and Hazard Lamps, without trailer socket, wagon	24 – E 4
C1019	dash panel, centre	24 – E 4

C1019	dash panel, centre – G204, as of 04/2004	25 – F 5
C1019	dash panel, centre – G204, before 04/2004	25 – F 5
C1019	dash panel, centre – Turn Signal and Hazard Lamps	25 – F 5
C1019	dash panel, centre – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	25 – F 5
C1019	dash panel, centre – Turn Signal and Hazard Lamps, with trailer socket, wagon	25 – F 5
C1019	dash panel, centre – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	25 – F 5
C1019	dash panel, centre – Turn Signal and Hazard Lamps, without trailer socket, wagon	25 – F 5
C1019	dash panel, centre	25 – F 5
C1020	behind dash panel – EATC	
C1021	dash panel, centre – Climate controlled front seats	27 – A 2
C1021	dash panel, centre – F65, F66	27 – A 2
C1021	dash panel, centre – F81	27 – A 2
C1021	dash panel, centre – G204, as of 04/2004	27 – A 2
C1021	dash panel, centre – G204, before 04/2004	27 – A 2
C1021	dash panel, centre – Heated front seats	27 – A 2
C1021	dash panel, centre	27 – A 2
C1022	in glove compartment – DVD navigation system with touch screen	
C1022	in glove compartment – DVD navigation system with touch screen – with video system	
C1022	in glove compartment – Pre–equipment pack	
C1022	in glove compartment – with external CD changer	
C1022	in glove compartment – with video system	
C1022	in glove compartment – without external CD changer and video system	
C1022	in glove compartment	
C1024	centre console – 5–speed automatic transmission (5F31J)	40 – D 3
C1024	centre console – F81	40 – D 3
C1024	centre console – G203	40 – D 3
C1024	centre console – Ignition switch automatic transmission	40 – D 3
C1024	centre console	40 – D 3
C1025	dash panel, centre – F11, F13, F15	23 – D 5
C1025	dash panel, centre – F98	23 – D 5
C1025	dash panel, centre – G204, as of 04/2004	23 – D 5
C1025	dash panel, centre – G204, before 04/2004	23 – D 5
C1025	dash panel, centre – Heated rear window, Heated exterior mirrors	23 – D 5
C1025	dash panel, centre – Heated windshield	23 – D 5
C1025	dash panel, centre	23 – D 5
C1025	dash panel, centre – F11, F13, F15	25 – D 5
C1025	dash panel, centre – F98	25 – D 5
C1025	dash panel, centre – Heated rear window, Heated exterior mirrors	25 – D 5
C1025	dash panel, centre – Heated windshield	25 – D 5
C1025	dash panel, centre	25 – D 5
C1026	under passenger's seat	
C1027	rear seats – F83	
C1027	rear seats – G200	
C1027	rear seats – G300	
C1027	rear seats – with heated rear seats	
C1028	rear seats – F83	
C1028	rear seats – G205	

C1028	rear seats – with heated rear seats	
C1029	LH A–pillar – Climate controlled front seats	
C1029	LH A–pillar – F4, F5, F6	
C1029	LH A–pillar – G104	
C1029	LH A–pillar – Heated front seats	
C1030	in luggage compartment, LH side – DVD navigation system with touch screen	
C1030	in loading space, LH side – DVD navigation system with touch screen	
C1031	engine – 1.8L Duratec–SCi (MI4)	
C1032	engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel .	72 – C 5
C1033	behind radiator grille – 2.5L Duratec–VE (VE6),automatic transmission	9 – C 1
C1034	engine,2.0L Duratorq–TDCi (Puma) Diesel – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	74 – B 1
C1034	engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C1035	engine – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	
C1035	engine – F42, Diesel engines	
C1036	passenger's seat	
C1037	vehicle rear end, LH side – Bosch, 4–door model/5–door model	
C1037	vehicle rear end, LH side – Bosch, wagon	
C1037	vehicle rear end, LH side – F64, with trailer socket, 4–door model/5–door model	
C1037	vehicle rear end, LH side – F64, with trailer socket, wagon	
C1037	vehicle rear end, LH side – F64, without trailer socket, 4–door model/5–door model	
C1037	vehicle rear end, LH side – F64, without trailer socket, wagon	
C1037	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
C1037	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	
C1037	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004	
C1037	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, before 01/2004	
C1037	vehicle rear end, LH side – Fog lamps, without trailer socket, 4–door model/5–door model	
C1037	vehicle rear end, LH side – Fog lamps, without trailer socket, wagon	
C1037	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004	
C1037	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004	
C1037	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004	
C1037	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004	
C1037	vehicle rear end, LH side – G300, without trailer socket, 4–door model/5–door model	
C1037	vehicle rear end, LH side – G300, without trailer socket, wagon	
C1037	vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	
C1037	vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, wagon	
C1037	vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	
C1037	vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, wagon	
C1037	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	
C1037	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	

C1037	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, with autolamps
C1037	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, without autolamps
C1037	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps
C1037	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps
C1037	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps
C1037	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps
C1037	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C1037	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C1037	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
C1037	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004
C1037	vehicle rear end, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model
C1037	vehicle rear end, LH side – Reversing lamps, without trailer socket, wagon
C1037	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C1037	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C1037	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
C1037	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004
C1037	vehicle rear end, LH side – Stop Lamps, without trailer socket, 4–door model/5–door model
C1037	vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon
C1037	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
C1037	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon
C1037	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model
C1037	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, wagon
C1037	vehicle rear end, LH side – Valeo, 4–door model/5–door model, as of 01/2004
C1037	vehicle rear end, LH side – Valeo, 4–door model/5–door model, before 01/2004
C1037	vehicle rear end, LH side – Valeo, wagon, as of 01/2004
C1037	vehicle rear end, LH side – Valeo, wagon, before 01/2004
C1037	vehicle rear end, LH side – with trailer socket, 4–door model/5–door model
C1037	vehicle rear end, LH side – with trailer socket, wagon
C1037	vehicle rear end, LH side – without trailer socket, 4–door model/5–door model
C1037	vehicle rear end, LH side – without trailer socket, wagon
C1037	vehicle rear end, LH side
C1038	vehicle rear end, LH side – Bosch, 4–door model/5–door model

C1038	vehicle rear end, LH side – Bosch, wagon
C1038	vehicle rear end, LH side – F64, with trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – F64, with trailer socket, wagon
C1038	vehicle rear end, LH side – F64, without trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – F64, without trailer socket, wagon
C1038	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C1038	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C1038	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004
C1038	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, before 01/2004
C1038	vehicle rear end, LH side – Fog lamps, without trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – Fog lamps, without trailer socket, wagon
C1038	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
C1038	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004
C1038	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004
C1038	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004
C1038	vehicle rear end, LH side – G300, without trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – G300, without trailer socket, wagon
C1038	vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, wagon
C1038	vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, wagon
C1038	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
C1038	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps
C1038	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, with autolamps
C1038	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, without autolamps
C1038	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps
C1038	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps
C1038	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps
C1038	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps
C1038	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C1038	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004

C1038	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
C1038	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004
C1038	vehicle rear end, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – Reversing lamps, without trailer socket, wagon
C1038	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C1038	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C1038	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
C1038	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004
C1038	vehicle rear end, LH side – Stop Lamps, without trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon
C1038	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon
C1038	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, wagon
C1038	vehicle rear end, LH side – Valeo, 4–door model/5–door model, as of 01/2004
C1038	vehicle rear end, LH side – Valeo, 4–door model/5–door model, before 01/2004
C1038	vehicle rear end, LH side – Valeo, wagon, as of 01/2004
C1038	vehicle rear end, LH side – Valeo, wagon, before 01/2004
C1038	vehicle rear end, LH side – with trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – with trailer socket, wagon
C1038	vehicle rear end, LH side – without trailer socket, 4–door model/5–door model
C1038	vehicle rear end, LH side – without trailer socket, wagon
C1038	vehicle rear end, LH side
C1039	vehicle rear end, LH side – Bosch, 4–door model/5–door model
C1039	vehicle rear end, LH side – Bosch, wagon
C1039	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
C1039	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004
C1039	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004
C1039	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004
C1039	vehicle rear end, LH side – G300, without trailer socket, 4–door model/5–door model
C1039	vehicle rear end, LH side – G300, without trailer socket, wagon
C1039	vehicle rear end, LH side – Valeo, 4–door model/5–door model, as of 01/2004
C1039	vehicle rear end, LH side – Valeo, 4–door model/5–door model, before 01/2004
C1039	vehicle rear end, LH side – Valeo, wagon, as of 01/2004
C1039	vehicle rear end, LH side – Valeo, wagon, before 01/2004
C1040b	dash panel, centre console – without external CD changer and video system
C1042	dash panel, centre console – without external CD changer and video system

C1044	dash panel, centre console – without external CD changer and video system	
C1045	centre console – with external CD changer and/or video system	
C1045	centre console – without external CD changer and video system	
C1046	transmission – 5–speed automatic transmission (5F31J)	
C1047	transmission – 5–speed automatic transmission (5F31J)	
C1048	transmission – 5–speed automatic transmission (5F31J)	
C1049	transmission – 5–speed automatic transmission (5F31J)	
C1051	transmission – 5–speed automatic transmission (5F31J)	
C1052	transmission – 5–speed automatic transmission (5F31J)	
C1053	front seat, LH – Climate controlled front seats	
C1053	front seat, LH – G200	
C1054	front seat, RH – Climate controlled front seats	
C1054	front seat, RH – G205	
C1055	front seat, LH – G200	
C1055	front seat, LH – Heated front seats	
C1056	front seat, RH – G205	
C1056	front seat, RH – Heated front seats	
C1057	front seat, LH – Climate controlled front seats	
C1057	front seat, LH – G200	
C1058	front seat, RH – Climate controlled front seats	
C1058	front seat, RH – G205	
C1059	front seat, LH – Climate controlled front seats	
C1059	front seat, LH – G200	
C1060	front seat, RH – Climate controlled front seats	
C1060	front seat, RH – G205	
C1061	in luggage compartment, rear, LH side – Bosch, 4–door model/5–door model	
C1061	in loading space, rear, LH side – Bosch, wagon	
C1061	in luggage compartment, rear, LH side – Valeo, 4–door model/5–door model, as of 01/2004	
C1061	in loading space, rear, LH side – Valeo, wagon, as of 01/2004	
C1071	front seat, LH – G200	
C1071	front seat, LH – Heated front seats	
C1072	front seat, RH – G205	
C1072	front seat, RH – Heated front seats	
C1127	engine, 2.0L Diesel, Common Rail – F42, Diesel engines	73 – C 5
C1127	engine, Common Rail – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C1127	engine, Common Rail – F42, Diesel engines	
C1132	engine, 2.5L – 2.5L Duratec–VE (VE6)	64 – E 1
C1132	engine, 3.0L Duratec–ST (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	69 – F 2
C1132	engine, 3.0L Duratec–ST (VE6) – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	69 – F 2
C1132	engine, 3.0L Duratec–SE (VE6) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	74 – F 2
C1132	engine, 2.5L – 2.5L Duratec–VE (VE6)	
C1132	engine, 2.5L – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
C1137	engine, 2.0L Diesel – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	71 – F 4
C1141	engine compartment, front, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	10 – B 2

C1141	engine compartment, front, centre – 3.0L Duratec–SE (VE6)	10 – B 2
C1141	engine compartment, front, centre – G102, 3.0L Duratec–SE (VE6)	10 – B 2
C1141	engine compartment, front, centre – G102, Diesel engines	10 – B 2
C1141	engine compartment, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	11 – D 1
C1141	engine compartment, front, centre – G102, Diesel engines	11 – D 1
C1141	engine compartment, front, centre – 2.5L Duratec–VE (VE6)	
C1141	engine compartment, front, centre – 2.5L Duratec–VE (VE6),manual transmission	
C1141	engine compartment, front, centre – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	
C1142	engine compartment, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
C1142	engine compartment, front, centre – G102, Diesel engines	
C1146	front of vehicle (exterior), LH side – 1.8/2.0L Duratec–HE (MI4)	4 – F 3
C1146	front of vehicle (exterior), LH side – 1.8L Duratec–SCi (MI4)	4 – F 3
C1146	front of vehicle (exterior), LH side – 2.5L Duratec–VE (VE6)	4 – F 3
C1146	front of vehicle (exterior), LH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	4 – F 3
C1146	front of vehicle (exterior), LH side – 3.0L Duratec–ST (VE6)	4 – F 3
C1146	front of vehicle (exterior), LH side – Data link connector, pin 7	4 – F 3
C1146	front of vehicle (exterior), LH side – F16	4 – F 3
C1146	front of vehicle (exterior), LH side – F64, with trailer socket, 4–door model/5–door model	4 – F 3
C1146	front of vehicle (exterior), LH side – F64, with trailer socket, wagon	4 – F 3
C1146	front of vehicle (exterior), LH side – F64, without trailer socket, 4–door model/5–door model	4 – F 3
C1146	front of vehicle (exterior), LH side – F64, without trailer socket, wagon	4 – F 3
C1146	front of vehicle (exterior), LH side – F85, F86	4 – F 3
C1146	front of vehicle (exterior), LH side – F93	4 – F 3
C1146	front of vehicle (exterior), LH side – G104	4 – F 3
C1146	front of vehicle (exterior), LH side – Headlamp Levelling, with high intensity discharge headlamps	4 – F 3
C1146	front of vehicle (exterior), LH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	4 – F 3
C1146	front of vehicle (exterior), LH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	4 – F 3
C1146	front of vehicle (exterior), LH side – Headlamps, Low beam, with high intensity discharge headlamps	4 – F 3
C1146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	4 – F 3
C1146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	4 – F 3
C1146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, with autolamps	4 – F 3
C1146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, without autolamps	4 – F 3
C1146	front of vehicle (exterior), LH side – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	4 – F 3
C1146	front of vehicle (exterior), LH side – Turn Signal and Hazard Lamps	4 – F 3
C1146	front of vehicle (exterior), LH side – With high intensity discharge headlamps	4 – F 3

C1146	front of vehicle (exterior), LH side – without trailer socket, 4–door model/5–door model	4 – F 3
C1146	front of vehicle (exterior), LH side – without trailer socket, wagon	4 – F 3
C1146	front of vehicle (exterior), LH side	4 – F 3
C1146	front of vehicle (exterior), LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	6 – F 3
C1146	front of vehicle (exterior), LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	6 – F 3
C1146	front of vehicle (exterior), LH side – Data link connector, pin 7	6 – F 3
C1146	front of vehicle (exterior), LH side – Diesel engines	6 – F 3
C1146	front of vehicle (exterior), LH side – F16	6 – F 3
C1146	front of vehicle (exterior), LH side – F64, with trailer socket, 4–door model/5–door model	6 – F 3
C1146	front of vehicle (exterior), LH side – F64, with trailer socket, wagon	6 – F 3
C1146	front of vehicle (exterior), LH side – F64, without trailer socket, 4–door model/5–door model	6 – F 3
C1146	front of vehicle (exterior), LH side – F64, without trailer socket, wagon	6 – F 3
C1146	front of vehicle (exterior), LH side – F85, F86	6 – F 3
C1146	front of vehicle (exterior), LH side – F93	6 – F 3
C1146	front of vehicle (exterior), LH side – G104	6 – F 3
C1146	front of vehicle (exterior), LH side – Headlamp Levelling, with high intensity discharge headlamps	6 – F 3
C1146	front of vehicle (exterior), LH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	6 – F 3
C1146	front of vehicle (exterior), LH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	6 – F 3
C1146	front of vehicle (exterior), LH side – Headlamps, Low beam, with high intensity discharge headlamps	6 – F 3
C1146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	6 – F 3
C1146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	6 – F 3
C1146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, with autolamps	6 – F 3
C1146	front of vehicle (exterior), LH side – Parking Lamps, without trailer socket, wagon, without autolamps	6 – F 3
C1146	front of vehicle (exterior), LH side – Turn Signal and Hazard Lamps	6 – F 3
C1146	front of vehicle (exterior), LH side – With high intensity discharge headlamps	6 – F 3
C1146	front of vehicle (exterior), LH side – without trailer socket, 4–door model/5–door model	6 – F 3
C1146	front of vehicle (exterior), LH side – without trailer socket, wagon	6 – F 3
C1146	front of vehicle (exterior), LH side	6 – F 3
C1147	front of vehicle (exterior), RH side – Data link connector, pin 7	3 – A 4
C1147	front of vehicle (exterior), RH side – F18	3 – A 4
C1147	front of vehicle (exterior), RH side – F63, 4–door model/5–door model	3 – A 4
C1147	front of vehicle (exterior), RH side – F63, wagon	3 – A 4
C1147	front of vehicle (exterior), RH side – F85, F86	3 – A 4
C1147	front of vehicle (exterior), RH side – F93	3 – A 4
C1147	front of vehicle (exterior), RH side – G105	3 – A 4

C1147	front of vehicle (exterior), RH side – Headlamp Levelling, with high intensity discharge headlamps	3 – A 4
C1147	front of vehicle (exterior), RH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	3 – A 4
C1147	front of vehicle (exterior), RH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	3 – A 4
C1147	front of vehicle (exterior), RH side – Headlamps, Low beam, with high intensity discharge headlamps	3 – A 4
C1147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	3 – A 4
C1147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	3 – A 4
C1147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, with autolamps	3 – A 4
C1147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, without autolamps	3 – A 4
C1147	front of vehicle (exterior), RH side – Turn Signal and Hazard Lamps	3 – A 4
C1147	front of vehicle (exterior), RH side – With high intensity discharge headlamps	3 – A 4
C1147	front of vehicle (exterior), RH side – without trailer socket, 4–door model/5–door model	3 – A 4
C1147	front of vehicle (exterior), RH side – without trailer socket, wagon	3 – A 4
C1147	front of vehicle (exterior), RH side	3 – A 4
C1147	front of vehicle (exterior), RH side – Data link connector, pin 7	5 – A 4
C1147	front of vehicle (exterior), RH side – F18	5 – A 4
C1147	front of vehicle (exterior), RH side – F63, 4–door model/5–door model	5 – A 4
C1147	front of vehicle (exterior), RH side – F63, wagon	5 – A 4
C1147	front of vehicle (exterior), RH side – F85, F86	5 – A 4
C1147	front of vehicle (exterior), RH side – F93	5 – A 4
C1147	front of vehicle (exterior), RH side – G105	5 – A 4
C1147	front of vehicle (exterior), RH side – Headlamp Levelling, with high intensity discharge headlamps	5 – A 4
C1147	front of vehicle (exterior), RH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	5 – A 4
C1147	front of vehicle (exterior), RH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	5 – A 4
C1147	front of vehicle (exterior), RH side – Headlamps, Low beam, with high intensity discharge headlamps	5 – A 4
C1147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	5 – A 4
C1147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	5 – A 4
C1147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, with autolamps	5 – A 4
C1147	front of vehicle (exterior), RH side – Parking Lamps, without trailer socket, wagon, without autolamps	5 – A 4
C1147	front of vehicle (exterior), RH side – Turn Signal and Hazard Lamps	5 – A 4
C1147	front of vehicle (exterior), RH side – With high intensity discharge headlamps	5 – A 4
C1147	front of vehicle (exterior), RH side – without trailer socket, 4–door model/5–door model	5 – A 4
C1147	front of vehicle (exterior), RH side – without trailer socket, wagon	5 – A 4

C1147	front of vehicle (exterior), RH side	5 – A 4
C1159	engine compartment, front, in intake system – 1.8/2.0L Duratec–HE (MI4)	60 – B 2
C1159	engine compartment, front, in intake system – 1.8/2.0L Duratec–HE (MI4)	61 – B 1
C1169	engine compartment, front, in intake system – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	10 – E 1
C1169	engine compartment, front, in intake system – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	11 – E 1
C1183	engine, 1.8L and 2.0L – 1.8/2.0L Duratec–HE (MI4), automatic transmission	61 – F 3
C1183	engine, 1.8L and 2.0L – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)	61 – F 3
C1540	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004	51 – B 3
C1540	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004	51 – B 3
C1540	vehicle rear end, LH side – G300, without trailer socket, wagon	51 – B 3
C1540	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps	51 – B 3
C1540	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps	51 – B 3
C1540	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004	51 – B 3
C1540	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004	51 – B 3
C1540	vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon	51 – B 3
C1540	vehicle rear end, LH side – without trailer socket, wagon	51 – B 3
C1541	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004	51 – B 2
C1541	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004	51 – B 2
C1541	vehicle rear end, LH side – G300, without trailer socket, wagon	51 – B 2
C1541	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps	51 – B 2
C1541	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps	51 – B 2
C1541	vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon	51 – B 2
C1541	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon	51 – B 2
C1541	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, wagon	51 – B 2
C1541	vehicle rear end, LH side – without trailer socket, wagon	51 – B 2
C1541	vehicle rear end, LH side	51 – B 2
C1542	vehicle rear end, LH side – Bosch, wagon	51 – A 2
C1542	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004	51 – A 2
C1542	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004	51 – A 2
C1542	vehicle rear end, LH side – G300, without trailer socket, wagon	51 – A 2
C1542	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps	51 – A 2
C1542	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps	51 – A 2
C1542	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	51 – A 2
C1542	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004	51 – A 2
C1542	vehicle rear end, LH side – Reversing lamps, without trailer socket, wagon	51 – A 2
C1542	vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon	51 – A 2
C1542	vehicle rear end, LH side – Valeo, wagon, as of 01/2004	51 – A 2

C1542	vehicle rear end, LH side – Valeo, wagon, before 01/2004	51 – A 2
C1542	vehicle rear end, LH side – without trailer socket, wagon	51 – A 2
C1543	vehicle rear end, LH side – F64, with trailer socket, wagon	51 – B 1
C1543	vehicle rear end, LH side – F64, without trailer socket, wagon	51 – B 1
C1543	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004	51 – B 1
C1543	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, before 01/2004	51 – B 1
C1543	vehicle rear end, LH side – Fog lamps, without trailer socket, wagon	51 – B 1
C1543	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004	51 – B 1
C1543	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004	51 – B 1
C1543	vehicle rear end, LH side – G300, without trailer socket, wagon	51 – B 1
C1543	vehicle rear end, LH side – Light switch, Fog lamps, with trailer socket, wagon	51 – B 1
C1543	vehicle rear end, LH side – Light switch, Fog lamps, without trailer socket, wagon	51 – B 1
C1543	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, with autolamps	51 – B 1
C1543	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, without autolamps	51 – B 1
C1543	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps	51 – B 1
C1543	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps	51 – B 1
C1543	vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon	51 – B 1
C1543	vehicle rear end, LH side – with trailer socket, wagon	51 – B 1
C1543	vehicle rear end, LH side – without trailer socket, wagon	51 – B 1
C1550	vehicle rear end, RH side – G205	52 – F 4
C1550	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	52 – F 4
C1550	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	52 – F 4
C1550	vehicle rear end, RH side – Stop Lamps, with trailer socket, wagon, as of 01/2004	52 – F 4
C1550	vehicle rear end, RH side – Stop Lamps, with trailer socket, wagon, before 01/2004	52 – F 4
C1550	vehicle rear end, RH side – Stop Lamps, without trailer socket, wagon	52 – F 4
C1550	vehicle rear end, RH side – without trailer socket, wagon	52 – F 4
C1551	vehicle rear end, RH side – G205	52 – F 4
C1551	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	52 – F 4
C1551	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	52 – F 4
C1551	vehicle rear end, RH side – Stop Lamps, without trailer socket, wagon	52 – F 4
C1551	vehicle rear end, RH side – Turn Signal and Hazard Lamps, with trailer socket, wagon	52 – F 4
C1551	vehicle rear end, RH side – Turn Signal and Hazard Lamps, without trailer socket, wagon	52 – F 4
C1551	vehicle rear end, RH side – without trailer socket, wagon	52 – F 4
C1551	vehicle rear end, RH side	52 – F 4
C1552	vehicle rear end, RH side – G205	52 – E 5
C1552	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	52 – E 5
C1552	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	52 – E 5

C1552	vehicle rear end, RH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	52 – E 5
C1552	vehicle rear end, RH side – Reversing lamps, with trailer socket, wagon, before 01/2004	52 – E 5
C1552	vehicle rear end, RH side – Reversing lamps, without trailer socket, wagon	52 – E 5
C1552	vehicle rear end, RH side – Stop Lamps, without trailer socket, wagon	52 – E 5
C1552	vehicle rear end, RH side – without trailer socket, wagon	52 – E 5
C1553	vehicle rear end, RH side – F63, wagon	52 – E 3
C1553	vehicle rear end, RH side – Fog lamps, with trailer socket, wagon, as of 01/2004	52 – E 3
C1553	vehicle rear end, RH side – Fog lamps, with trailer socket, wagon, before 01/2004	52 – E 3
C1553	vehicle rear end, RH side – Fog lamps, without trailer socket, wagon	52 – E 3
C1553	vehicle rear end, RH side – G205	52 – E 3
C1553	vehicle rear end, RH side – Light switch, Fog lamps, with trailer socket, wagon	52 – E 3
C1553	vehicle rear end, RH side – Light switch, Fog lamps, without trailer socket, wagon	52 – E 3
C1553	vehicle rear end, RH side – Parking Lamps, with trailer socket, wagon, with autolamps	52 – E 3
C1553	vehicle rear end, RH side – Parking Lamps, with trailer socket, wagon, without autolamps	52 – E 3
C1553	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	52 – E 3
C1553	vehicle rear end, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	52 – E 3
C1553	vehicle rear end, RH side – Stop Lamps, without trailer socket, wagon	52 – E 3
C1553	vehicle rear end, RH side – with trailer socket, wagon	52 – E 3
C1553	vehicle rear end, RH side – without trailer socket, wagon	52 – E 3
C2000	in luggage compartment, rear, LH side – F63, 4–door model/5–door model	
C2000	in loading space, rear, LH side – F63, wagon	
C2000	in luggage compartment, rear, LH side – F64, with trailer socket, 4–door model/5–door model	
C2000	in loading space, rear, LH side – F64, with trailer socket, wagon	
C2000	in loading space, rear, LH side – F74, before 01/2004	
C2000	in loading space, rear, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004	
C2000	in loading space, rear, LH side – G300, with trailer socket, wagon, before 01/2004	
C2000	in luggage compartment, rear, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	
C2000	in luggage compartment, rear, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	
C2000	in loading space, rear, LH side – Parking Lamps, with trailer socket, wagon, with autolamps	
C2000	in loading space, rear, LH side – Parking Lamps, with trailer socket, wagon, without autolamps	
C2000	in luggage compartment, rear, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	
C2000	in loading space, rear, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004	
C2000	in luggage compartment, rear, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	
C2000	in loading space, rear, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004	

C2000	in loading space, rear, LH side – Trailer socket, before 01/2004
C2000	in luggage compartment, rear, LH side – Valeo, 4–door model/5–door model, before 01/2004
C2000	in loading space, rear, LH side – Valeo, wagon, before 01/2004
C2000	in luggage compartment, rear, LH side – with trailer socket, 4–door model/5–door model
C2000	in loading space, rear, LH side – with trailer socket, wagon
C2001	in luggage compartment, rear, LH side – F74, before 01/2004
C2001	in loading space, rear, LH side – F74, before 01/2004
C2001	in luggage compartment, rear, LH side – Trailer socket, before 01/2004
C2001	in loading space, rear, LH side – Trailer socket, before 01/2004
C2002	in luggage compartment, rear, LH side – F74, as of 01/2004, F201, with 7–pin trailer socket
C2002	in loading space, rear, LH side – F74, as of 01/2004, F200, 201, with 13–pin trailer socket
C2002	in luggage compartment, rear, LH side – F74, before 01/2004
C2002	in loading space, rear, LH side – F74, before 01/2004
C2002	in luggage compartment, rear, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
C2002	in luggage compartment, rear, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004
C2002	in loading space, rear, LH side – G300, with trailer socket, wagon, as of 01/2004
C2002	in luggage compartment, rear, LH side – G300, with trailer socket, wagon, before 01/2004
C2002	in loading space, rear, LH side – G300, with trailer socket, wagon, before 01/2004
C2002	in luggage compartment, rear, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2002	in luggage compartment, rear, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2002	in loading space, rear, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
C2002	in loading space, rear, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004
C2002	in luggage compartment, rear, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004
C2002	in loading space, rear, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004
C2002	in luggage compartment, rear, LH side – Trailer socket, before 01/2004
C2002	in loading space, rear, LH side – Trailer socket, before 01/2004
C2002	in loading space, rear, LH side – Trailer socket, wagon, as of 01/2004
C2002	in luggage compartment, rear, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
C2002	in loading space, rear, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon
C2002	in loading space, rear, LH side – Trailer socket, wagon, as of 01/2004
C2003	in luggage compartment, rear, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2003	in loading space, rear, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004
C2004	in luggage compartment, rear, LH side – Bosch, 4–door model/5–door model

C2004	in loading space, rear, LH side – Bosch, wagon
C2004	in luggage compartment, rear, LH side – F64, with trailer socket, 4–door model/5–door model
C2004	in loading space, rear, LH side – F64, with trailer socket, wagon
C2004	in luggage compartment, rear, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2004	in luggage compartment, rear, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2004	in loading space, rear, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004
C2004	in loading space, rear, LH side – Fog lamps, with trailer socket, wagon, before 01/2004
C2004	in luggage compartment, rear, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
C2004	in luggage compartment, rear, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004
C2004	in loading space, rear, LH side – G300, with trailer socket, wagon, as of 01/2004
C2004	in loading space, rear, LH side – G300, with trailer socket, wagon, before 01/2004
C2004	in luggage compartment, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model
C2004	in loading space, LH side – Light switch, Fog lamps, with trailer socket, wagon
C2004	in luggage compartment, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
C2004	in luggage compartment, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps
C2004	in loading space, LH side – Parking Lamps, with trailer socket, wagon, with autolamps
C2004	in loading space, LH side – Parking Lamps, with trailer socket, wagon, without autolamps
C2004	in luggage compartment, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2004	in luggage compartment, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2004	in loading space, rear, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
C2004	in loading space, rear, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004
C2004	in luggage compartment, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2004	in luggage compartment, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2004	in loading space, rear, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
C2004	in loading space, rear, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004
C2004	in luggage compartment, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
C2004	in loading space, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon

C2004	in luggage compartment, LH side – Valeo, 4–door model/5–door model, as of 01/2004
C2004	in luggage compartment, LH side – Valeo, 4–door model/5–door model, before 01/2004
C2004	in loading space, rear, LH side – Valeo, wagon, as of 01/2004
C2004	in loading space, rear, LH side – Valeo, wagon, before 01/2004
C2004	in luggage compartment, LH side – with trailer socket, 4–door model/5–door model
C2004	in loading space, LH side – with trailer socket, wagon
C2005	in luggage compartment, LH side – Bosch, 4–door model/5–door model
C2005	in loading space, LH side – Bosch, wagon
C2005	in luggage compartment, LH side – F64, with trailer socket, 4–door model/5–door model
C2005	in loading space, LH side – F64, with trailer socket, wagon
C2005	in luggage compartment, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2005	in luggage compartment, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2005	in loading space, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004
C2005	in loading space, LH side – Fog lamps, with trailer socket, wagon, before 01/2004
C2005	in luggage compartment, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
C2005	in luggage compartment, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004
C2005	in loading space, LH side – G300, with trailer socket, wagon, as of 01/2004
C2005	in loading space, LH side – G300, with trailer socket, wagon, before 01/2004
C2005	in luggage compartment, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model
C2005	in loading space, LH side – Light switch, Fog lamps, with trailer socket, wagon
C2005	in luggage compartment, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
C2005	in luggage compartment, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps
C2005	in loading space, LH side – Parking Lamps, with trailer socket, wagon, with autolamps
C2005	in loading space, LH side – Parking Lamps, with trailer socket, wagon, without autolamps
C2005	in luggage compartment, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2005	in luggage compartment, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2005	in loading space, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
C2005	in loading space, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004
C2005	in luggage compartment, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2005	in luggage compartment, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2005	in loading space, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
C2005	in loading space, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004

C2005	in luggage compartment, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
C2005	in loading space, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon
C2005	in luggage compartment, LH side – Valeo, 4–door model/5–door model, as of 01/2004
C2005	in luggage compartment, LH side – Valeo, 4–door model/5–door model, before 01/2004
C2005	in loading space, LH side – Valeo, wagon, as of 01/2004
C2005	in loading space, LH side – Valeo, wagon, before 01/2004
C2005	in luggage compartment, LH side – with trailer socket, 4–door model/5–door model
C2005	in loading space, LH side – with trailer socket, wagon
C2005	in loading space, rear, LH side – Trailer socket, wagon, as of 01/2004
C2005	in loading space, rear, LH side – Trailer socket, wagon, as of 01/2004
C2005	in loading space, rear, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004
C2005	in loading space, rear, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004
C2006	in luggage compartment, RH side – F63, 4–door model/5–door model
C2006	in loading space, RH side – F63, wagon
C2006	in luggage compartment, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2006	in luggage compartment, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2006	in loading space, RH side – Fog lamps, with trailer socket, wagon, as of 01/2004
C2006	in loading space, RH side – Fog lamps, with trailer socket, wagon, before 01/2004
C2006	in luggage compartment, RH side – G205
C2006	in loading space, RH side – G205
C2006	in luggage compartment, RH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
C2006	in luggage compartment, RH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004
C2006	in loading space, RH side – Light switch, Fog lamps, with trailer socket, wagon
C2006	in luggage compartment, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
C2006	in luggage compartment, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps
C2006	in loading space, RH side – Parking Lamps, with trailer socket, wagon, with autolamps
C2006	in loading space, RH side – Parking Lamps, with trailer socket, wagon, without autolamps
C2006	in luggage compartment, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2006	in luggage compartment, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2006	in loading space, RH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
C2006	in loading space, RH side – Reversing lamps, with trailer socket, wagon, before 01/2004

C2006	in luggage compartment, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2006	in luggage compartment, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2006	in loading space, RH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
C2006	in loading space, RH side – Stop Lamps, with trailer socket, wagon, before 01/2004
C2006	in luggage compartment, RH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
C2006	in loading space, RH side – Turn Signal and Hazard Lamps, with trailer socket, wagon
C2006	in luggage compartment, RH side – with trailer socket, 4–door model/5–door model
C2006	in loading space, RH side – with trailer socket, wagon
C2007	in luggage compartment, RH side – F63, 4–door model/5–door model
C2007	in loading space, RH side – F63, wagon
C2007	in luggage compartment, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2007	in luggage compartment, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2007	in luggage compartment, RH side – G205
C2007	in loading space, RH side – G205
C2007	in luggage compartment, RH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
C2007	in luggage compartment, RH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004
C2007	in luggage compartment, RH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model
C2007	in luggage compartment, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
C2007	in luggage compartment, RH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps
C2007	in loading space, RH side – Parking Lamps, with trailer socket, wagon, with autolamps
C2007	in loading space, RH side – Parking Lamps, with trailer socket, wagon, without autolamps
C2007	in luggage compartment, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2007	in luggage compartment, RH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2007	in loading space, RH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
C2007	in loading space, RH side – Reversing lamps, with trailer socket, wagon, before 01/2004
C2007	in luggage compartment, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2007	in luggage compartment, RH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2007	in loading space, RH side – Stop Lamps, with trailer socket, wagon, as of 01/2004
C2007	in loading space, RH side – Stop Lamps, with trailer socket, wagon, before 01/2004
C2007	in luggage compartment, RH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model

C2007	in loading space, RH side – Turn Signal and Hazard Lamps, with trailer socket, wagon
C2007	in luggage compartment, RH side – with trailer socket, 4–door model/5–door model
C2007	in loading space, RH side – with trailer socket, wagon
C2008	in luggage compartment, RH side – Bosch, 4–door model/5–door model
C2008	in loading space, RH side – Bosch, wagon
C2008	in luggage compartment, RH side – F92, as of 01/2004, with trailer socket, with parking aid
C2008	in loading space, RH side – F92, as of 01/2004, with trailer socket, with parking aid
C2008	in luggage compartment, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2008	in luggage compartment, RH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2008	in loading space, RH side – Fog lamps, with trailer socket, wagon, as of 01/2004
C2008	in loading space, RH side – Fog lamps, with trailer socket, wagon, before 01/2004
C2008	in luggage compartment, RH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004
C2008	in loading space, RH side – G300, with trailer socket, wagon, before 01/2004
C2008	in luggage compartment, RH side – G304, with 13–pin trailer socket, as of 01/2004
C2008	in loading space, RH side – G304, with 13–pin trailer socket, as of 01/2004
C2008	in luggage compartment, RH side – G304, with 7–pin trailer socket, as of 01/2004
C2008	in loading space, RH side – G304, with 7–pin trailer socket, as of 01/2004
C2008	in luggage compartment, LH side – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model
C2008	in loading space, LH side – Light switch, Fog lamps, with trailer socket, wagon
C2008	in luggage compartment, LH side – Valeo, 4–door model/5–door model, as of 01/2004
C2008	in loading space, LH side – Valeo, wagon, as of 01/2004
C2010	rear bumper, centre – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2010	rear bumper, centre – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2010	rear bumper, centre – Fog lamps, with trailer socket, wagon, as of 01/2004
C2010	rear bumper, centre – Fog lamps, with trailer socket, wagon, before 01/2004
C2010	rear bumper, centre – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
C2010	rear bumper, centre – G302, G303, before 01/2004
C2010	rear bumper, centre – G302, G303, as of 01/2004
C2010	rear bumper, centre – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
C2010	rear bumper, centre – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps
C2010	rear bumper, centre – Parking Lamps, with trailer socket, wagon, with autolamps
C2010	rear bumper, centre – Parking Lamps, with trailer socket, wagon, without autolamps
C2010	rear bumper, centre – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2010	rear bumper, centre – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2010	rear bumper, centre – Stop Lamps, with trailer socket, wagon, as of 01/2004
C2010	rear bumper, centre – Stop Lamps, with trailer socket, wagon, before 01/2004

C2010	rear bumper, centre – Trailer socket, with 7–pin trailer socket, as of 01/2004
C2010	rear bumper, centre – Trailer socket, before 01/2004
C2010	rear bumper, centre – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
C2010	rear bumper, centre – Turn Signal and Hazard Lamps, with trailer socket, wagon
C2010	rear bumper, centre – with trailer socket, 4–door model/5–door model
C2010	rear bumper, centre – with trailer socket, wagon
C2010	rear bumper, centre – G302, G303, as of 01/2004
C2012	rear bumper, centre – Trailer socket, wagon, as of 01/2004
C2012	rear bumper, centre – F74, before 01/2004
C2012	rear bumper, centre – F92, before 01/2004
C2012	rear bumper, centre – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2012	rear bumper, centre – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2012	rear bumper, centre – Fog lamps, with trailer socket, wagon, as of 01/2004
C2012	rear bumper, centre – Fog lamps, with trailer socket, wagon, before 01/2004
C2012	rear bumper, centre – G300
C2012	rear bumper, centre – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
C2012	rear bumper, centre – G302, G303, before 01/2004
C2012	rear bumper, centre – G304, with 13–pin trailer socket, as of 01/2004
C2012	rear bumper, centre – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
C2012	rear bumper, centre – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps
C2012	rear bumper, centre – Parking Lamps, with trailer socket, wagon, with autolamps
C2012	rear bumper, centre – Parking Lamps, with trailer socket, wagon, without autolamps
C2012	rear bumper, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2012	rear bumper, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2012	rear bumper, centre – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
C2012	rear bumper, centre – Reversing lamps, with trailer socket, wagon, before 01/2004
C2012	rear bumper, centre – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
C2012	rear bumper, centre – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
C2012	rear bumper, centre – Stop Lamps, with trailer socket, wagon, as of 01/2004
C2012	rear bumper, centre – Stop Lamps, with trailer socket, wagon, before 01/2004
C2012	rear bumper, centre – Trailer socket, with 7–pin trailer socket, as of 01/2004
C2012	rear bumper, centre – Trailer socket, before 01/2004
C2012	rear bumper, centre – Trailer socket, wagon, as of 01/2004
C2012	rear bumper, centre – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
C2012	rear bumper, centre – Turn Signal and Hazard Lamps, with trailer socket, wagon
C2012	rear bumper, centre – with trailer socket, 4–door model/5–door model
C2012	rear bumper, centre – with trailer socket, wagon
C2012	rear bumper, centre – G302, G303, as of 01/2004

C2012	rear bumper, centre – G302, G303, as of 01/2004	
C2013	rear bumper, centre – F74, before 01/2004	
C2013	rear bumper, centre – F92, before 01/2004	
C2013	rear bumper, centre – G300	
C2013	rear bumper, centre – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	
C2013	rear bumper, centre – Reversing lamps, with trailer socket, wagon, before 01/2004	
C2013	rear bumper, centre – Trailer socket, before 01/2004	
C2100a	in luggage compartment, LH side, behind luggage compartment lining, 4–door model – G300	47 – B 5
C2100a	in loading space, LH side, behind loading space lining, wagon – G300, with trailer socket, 4–door model/5–door model, before 01/2004	47 – B 5
C2100a	in luggage compartment, LH side, behind luggage compartment lining, 4–door model – G300, without trailer socket, 4–door model/5–door model	47 – B 5
C2100a	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – Valeo	47 – B 5
C2100a	in loading space, LH side, behind luggage compartment lining, 5–door model – Valeo, 4–door model/5–door model, as of 01/2004	47 – B 5
C2100a	in loading space, LH side, behind luggage compartment lining, 5–door model – Valeo, 4–door model/5–door model, before 01/2004	47 – B 5
C2100a	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – G300	49 – C 5
C2100a	in loading space, LH side, behind loading space lining, wagon – G300, with trailer socket, 4–door model/5–door model, before 01/2004	49 – C 5
C2100a	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – G300, without trailer socket, 4–door model/5–door model	49 – C 5
C2100a	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – Valeo	49 – C 5
C2100a	in loading space, LH side, behind luggage compartment lining, 5–door model – Valeo, 4–door model/5–door model, as of 01/2004	49 – C 5
C2100a	in loading space, LH side, behind luggage compartment lining, 5–door model – Valeo, 4–door model/5–door model, before 01/2004	49 – C 5
C2100a	in loading space, LH side, behind loading space lining, wagon – G300	51 – D 2
C2100a	in loading space, LH side, behind loading space lining, wagon – G300, with trailer socket, wagon, as of 01/2004	51 – D 2
C2100a	in loading space, LH side, behind loading space lining, wagon – G300, with trailer socket, wagon, before 01/2004	51 – D 2
C2100a	in loading space, LH side, behind loading space lining, wagon – G300, without trailer socket, wagon	51 – D 2
C2100a	in loading space, LH side, behind luggage compartment lining, 5–door model – Valeo	51 – D 2
C2100a	in loading space, LH side, behind luggage compartment lining, 5–door model – Valeo, wagon, as of 01/2004	51 – D 2
C2100a	in loading space, LH side, behind luggage compartment lining, 5–door model – Valeo, wagon, before 01/2004	51 – D 2
C2100b	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – Valeo	47 – B 5
C2100b	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – Valeo	49 – C 5

C2100b	in loading space, LH side, behind luggage compartment lining, 5–door model – Valeo	51 – D 2
C2103	in loading space, LH side, behind luggage compartment lining, 5–door model – Valeo	51 – C 2
C2105	rear bumper – Valeo	59 – E 2
C2106	rear bumper – Valeo	59 – D 2
C2107	rear bumper – Valeo	59 – C 2
C2108	rear bumper – Valeo	59 – B 2
C2109	behind dash panel, LH side – Valeo	
C2110	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – Bosch	
C2110	in loading space, LH side, behind loading space lining, wagon – Bosch	
C2110	in luggage compartment, LH side, behind loading space lining, wagon – F200, 201	
C2110	in luggage compartment, LH side, behind loading space lining, wagon – F200, 201	
C2110	in luggage compartment, LH side, behind loading space lining, wagon – F74, as of 01/2004, F201, with 7–pin trailer socket	
C2110	in loading space, LH side, behind loading space lining, wagon – F74, as of 01/2004, F200, 201, with 13–pin trailer socket	
C2110	in luggage compartment, LH side, behind loading space lining, wagon – G304, with 13–pin trailer socket, as of 01/2004	
C2110	in loading space, LH side, behind loading space lining, wagon – G304, with 13–pin trailer socket, as of 01/2004	
C2110	in luggage compartment, LH side, behind loading space lining, wagon – G304, with 7–pin trailer socket, as of 01/2004	
C2110	in loading space, LH side, behind loading space lining, wagon – G304, with 7–pin trailer socket, as of 01/2004	
C2110	in luggage compartment, LH side, behind loading space lining, wagon – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
C2110	in loading space, LH side, behind loading space lining, wagon – Stop Lamps, with trailer socket, wagon, as of 01/2004	
C2110	in luggage compartment, LH side, behind loading space lining, wagon – Trailer socket, with 7–pin trailer socket, as of 01/2004	
C2110	in loading space, LH side, behind loading space lining, wagon – Trailer socket, with 7–pin trailer socket, as of 01/2004	
C2110	in loading space, LH side, behind loading space lining, wagon – Trailer socket, wagon, as of 01/2004	
C2111	in luggage compartment, LH side, behind loading space lining, wagon – F200, 201	
C2111	in loading space, LH side, behind loading space lining, wagon – F74, as of 01/2004, F200, 201, with 13–pin trailer socket	
C2111	in luggage compartment, LH side, behind loading space lining, wagon – G304, with 13–pin trailer socket, as of 01/2004	
C2111	in loading space, LH side, behind loading space lining, wagon – G304, with 13–pin trailer socket, as of 01/2004	
C2111	in luggage compartment, LH side, behind loading space lining, wagon – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
C2111	in loading space, LH side, behind loading space lining, wagon – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	
C2111	in loading space, LH side, behind loading space lining, wagon – Trailer socket, wagon, as of 01/2004	

C2200a	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – Bosch	47 – B 5
C2200a	in luggage compartment, LH side, behind loading space lining, wagon – Bosch, 4–door model/5–door model	47 – B 5
C2200a	in luggage compartment, LH side, behind loading space lining, wagon – G300, without trailer socket, 4–door model/5–door model	47 – B 5
C2200a	in loading space, LH side, behind loading space lining, wagon – G300, without trailer socket, 4–door model/5–door model	47 – B 5
C2200a	in loading space, LH side, behind loading space lining, wagon – Bosch	51 – D 2
C2200a	in loading space, LH side, behind loading space lining, wagon – Bosch, wagon	51 – D 2
C2200b	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – Bosch	47 – B 5
C2200b	in luggage compartment, LH side, behind luggage compartment lining, 5–door model – Bosch	49 – C 5
C2200b	in loading space, LH side, behind luggage compartment lining, 5–door model – Bosch	51 – D 2

Ground points — Section 700–06–00

	Location	Page/coordinates
G100	engine compartment, transmission	
G100	engine compartment, transmission – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	
G100	engine compartment, transmission – 3.0L Duratec–SE (VE6)	
G100	engine compartment, transmission – 3.0L Duratec–ST (VE6)	
G100	engine compartment, transmission – Diesel engines	
G100	engine compartment, transmission – Heated windshield	
G100	engine compartment, transmission – Petrol engines, except 3.0L Duratec–SE (VE6)	
G100	engine compartment, transmission – Ignition switch manual transmission	
G100	engine compartment, transmission – Ignition switch automatic transmission	
G100	engine compartment, transmission – Light switch, without autolamps	
G100	engine compartment, transmission – Light switch, with autolamps	
G100	engine compartment, transmission – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	
G100	engine compartment, transmission – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	
G100	engine compartment, transmission – Light switch, Fog lamps, without trailer socket, wagon	
G100	engine compartment, transmission – Light switch, Fog lamps, with trailer socket, wagon	
G100	engine compartment, transmission – G100, G101	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB)	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – With high intensity discharge headlamps	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Heated windshield	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Ignition switch manual transmission	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, without autolamps	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, with autolamps	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	63 – E 1

G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, without trailer socket, wagon	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, with trailer socket, wagon	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – G100, G101	63 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB)	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – With high intensity discharge headlamps	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Heated windshield	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Ignition switch manual transmission	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, without autolamps	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, with autolamps	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, without trailer socket, wagon	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, with trailer socket, wagon	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – G100, G101	67 – E 1
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)	79 – E 2
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	79 – E 2
G101	engine compartment, front, LH side, near Battery Junction Box (BJB)	79 – E 2
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Diesel engines	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Ignition switch automatic transmission	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps	

G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – With high intensity discharge headlamps	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Heated windshield	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Ignition switch manual transmission	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, without autolamps	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, with autolamps	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, without trailer socket, wagon	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – Light switch, Fog lamps, with trailer socket, wagon	
G101	engine compartment, front, LH side, near Battery Junction Box (BJB) – G100, G101	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	60 – E 1
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)	60 – E 1
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	60 – E 1
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),manual transmission	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model	

G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J)
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – Diesel engines
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – G102, 3.0L Duratec–SE (VE6)
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – G102, Diesel engines
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)
G102	engine compartment, front, LH side, near Battery Junction Box (BJB) – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)
G103	engine compartment, front, LH side, near Battery Junction Box (BJB) – before 08/2004
G103	engine compartment, front, LH side, near Battery Junction Box (BJB) – Bosch 8.0
G103	LH A–pillar
G103	LH A–pillar – G103
G104	engine compartment, front, LH side – Petrol engines, except 1.8L Duratec–SCi (MI4)
G104	engine compartment, front, LH side – Diesel engines, with fuel fired heater
G104	engine compartment, front, LH side – Diesel engines, with fuel fired heater, as of 08/2004
G104	engine compartment, front, LH side – before 08/2004
G104	engine compartment, front, LH side – as of 08/2004
G104	engine compartment, front, LH side
G104	engine compartment, front, LH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps
G104	engine compartment, front, LH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps
G104	engine compartment, front, LH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps
G104	engine compartment, front, LH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps
G104	engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps
G104	engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps
G104	engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps
G104	engine compartment, front, LH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps

G104	engine compartment, front, LH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	
G104	engine compartment, front, LH side – Headlamp Levelling, without high intensity discharge headlamps	
G104	engine compartment, front, LH side – Headlamp Levelling, with high intensity discharge headlamps	
G104	engine compartment, front, LH side – Turn Signal and Hazard Lamps	
G104	engine compartment, front, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	
G104	engine compartment, front, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	
G104	engine compartment, front, LH side – Parking Lamps, without trailer socket, wagon, without autolamps	
G104	engine compartment, front, LH side – Parking Lamps, without trailer socket, wagon, with autolamps	
G104	engine compartment, front, LH side – Fog lamps, without trailer socket, 4–door model/5–door model	
G104	engine compartment, front, LH side – Fog lamps, without trailer socket, wagon	
G104	engine compartment, front, LH side – Without high intensity discharge headlamps	
G104	engine compartment, front, LH side – without high intensity discharge headlamps	
G104	engine compartment, front, LH side – With high intensity discharge headlamps	
G104	engine compartment, front, LH side – with high intensity discharge headlamps	
G104	engine compartment, front, LH side – without trailer socket, 4–door model/5–door model	
G104	engine compartment, front, LH side – without trailer socket, wagon	
G104	engine compartment, front, LH side – Heated front seats	
G104	engine compartment, front, LH side – Climate controlled front seats	
G104	engine compartment, front, LH side – Heated windshield	
G104	engine compartment, front, LH side – Without rear window wiper, with headlamp washer	
G104	engine compartment, front, LH side – With rear window wiper, with headlamp washer	
G104	engine compartment, front, LH side – with windshield washer jet heater	
G104	engine compartment, front, LH side – Light switch, without daytime running lamps, without high intensity discharge headlamps	
G104	engine compartment, front, LH side – Light switch, without daytime running lamps, with high intensity discharge headlamps	
G104	engine compartment, front, LH side – Light switch, with daytime running lamps, without high intensity discharge headlamps	
G104	engine compartment, front, LH side – Light switch, with daytime running lamps, with high intensity discharge headlamps	
G104	engine compartment, front, LH side – G104	
G105	engine compartment, front, RH side – Headlamps, Low beam, with high intensity discharge headlamps	3 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	3 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	3 – C 2
G105	engine compartment, front, RH side – Headlamp Levelling, without high intensity discharge headlamps	3 – C 2

G105	engine compartment, front, RH side – Headlamp Levelling, with high intensity discharge headlamps	3 – C 2
G105	engine compartment, front, RH side – Turn Signal and Hazard Lamps	3 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	3 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	3 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	3 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	3 – C 2
G105	engine compartment, front, RH side – Without high intensity discharge headlamps	3 – C 2
G105	engine compartment, front, RH side – With high intensity discharge headlamps	3 – C 2
G105	engine compartment, front, RH side – without trailer socket, 4–door model/5–door model	3 – C 2
G105	engine compartment, front, RH side – without trailer socket, wagon	3 – C 2
G105	engine compartment, front, RH side – Heated windshield	3 – C 2
G105	engine compartment, front, RH side – with variable intermittent wipe	3 – C 2
G105	engine compartment, front, RH side – with rain sensor	3 – C 2
G105	engine compartment, front, RH side – Without rear window wiper, with headlamp washer	3 – C 2
G105	engine compartment, front, RH side – With rear window wiper, with headlamp washer	3 – C 2
G105	engine compartment, front, RH side – G105	3 – C 2
G105	engine compartment, front, RH side	3 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	3 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	3 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	3 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	3 – C 2
G105	engine compartment, front, RH side – 5–speed automatic transmission (5F31J), Diesel engines	5 – C 2
G105	engine compartment, front, RH side	5 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, Low beam, with high intensity discharge headlamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	5 – C 2
G105	engine compartment, front, RH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	5 – C 2

G105	engine compartment, front, RH side – Headlamp Levelling, without high intensity discharge headlamps	5 – C 2
G105	engine compartment, front, RH side – Headlamp Levelling, with high intensity discharge headlamps	5 – C 2
G105	engine compartment, front, RH side – Turn Signal and Hazard Lamps	5 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	5 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	5 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, wagon, without autolamps	5 – C 2
G105	engine compartment, front, RH side – Parking Lamps, without trailer socket, wagon, with autolamps	5 – C 2
G105	engine compartment, front, RH side – Without high intensity discharge headlamps	5 – C 2
G105	engine compartment, front, RH side – With high intensity discharge headlamps	5 – C 2
G105	engine compartment, front, RH side – without trailer socket, 4–door model/5–door model	5 – C 2
G105	engine compartment, front, RH side – without trailer socket, wagon	5 – C 2
G105	engine compartment, front, RH side – Heated windshield	5 – C 2
G105	engine compartment, front, RH side – with variable intermittent wipe	5 – C 2
G105	engine compartment, front, RH side – with rain sensor	5 – C 2
G105	engine compartment, front, RH side – Without rear window wiper, with headlamp washer	5 – C 2
G105	engine compartment, front, RH side – With rear window wiper, with headlamp washer	5 – C 2
G105	engine compartment, front, RH side – G105	5 – C 2
G106	engine compartment, rear, RH side – 2.5L Duratec–VE (VE6)	63 – C 5
G106	engine compartment, rear, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	63 – C 5
G106	engine compartment, rear, RH side – G106, 2.5L Duratec–VE (VE6)	63 – C 5
G106	engine compartment, rear, RH side – 2.5L Duratec–VE (VE6)	65 – C 5
G106	engine compartment, rear, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	65 – C 5
G106	engine compartment, rear, RH side – G106, 2.5L Duratec–VE (VE6)	65 – C 5
G106	engine compartment, rear, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	
G106	engine compartment, rear, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
G106	engine compartment, rear, RH side – 1.8L Duratec–SCi (MI4)	
G106	engine compartment, rear, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
G106	engine compartment, rear, RH side	
G106	engine compartment, rear, RH side – 1.8L Duratec–SCi (MI4), before 04/2004	
G106	engine compartment, rear, RH side – 1.8L Duratec–SCi (MI4), as of 04/2004	
G106	engine compartment, rear, RH side – 1.8/2.0L Duratec–HE (MI4)	
G106	engine compartment, rear, RH side – 3.0L Duratec–SE (VE6)	
G106	engine compartment, rear, RH side – 3.0L Duratec–ST (VE6), before 04/2004	
G106	engine compartment, rear, RH side – 3.0L Duratec–ST (VE6), as of 04/2004	
G106	engine compartment, rear, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III	

G106	engine compartment, rear, RH side – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	
G106	engine compartment, rear, RH side – 2.2L Duratorq–TDCi (Puma) Diesel	
G106	engine compartment, rear, RH side – 2.0L Duratorq–TDCi (Puma) Diesel	
G106	engine compartment, rear, RH side – Diesel engines	
G106	engine compartment, rear, RH side – G106, 1.8L Duratec–SCi (MI4), before 04/2004	
G106	engine compartment, rear, RH side – G106, 1.8L Duratec–SCi (MI4), as of 04/2004	
G106	engine compartment, rear, RH side – G106, 1.8/2.0L Duratec–HE (MI4)	
G106	engine compartment, rear, RH side – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
G106	engine compartment, rear, RH side – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	
G106	engine compartment, rear, RH side – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	
G106	engine compartment, rear, RH side – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	
G106	engine compartment, rear, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4)	
G107	wheelwell, LH side – 1.8L Duratec–SCi (MI4)	
G107	wheelwell, LH side – G107	
G109	engine compartment, RH side – 1.8L Duratec–SCi (MI4)	
G109	engine compartment, RH side – G109	
G200	LH rocker panel – 4–speed automatic transmission (CD4E)	45 – E 1
G200	LH rocker panel – Manual A/C, before 04/2004	45 – E 1
G200	LH rocker panel – EATC, before 04/2004	45 – E 1
G200	LH rocker panel – EATC, as of 04/2004	45 – E 1
G200	LH rocker panel	45 – E 1
G200	LH rocker panel – LHD	45 – E 1
G200	LH rocker panel – RHD	45 – E 1
G200	LH rocker panel – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	45 – E 1
G200	LH rocker panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	45 – E 1
G200	LH rocker panel – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	45 – E 1
G200	LH rocker panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	45 – E 1
G200	LH rocker panel – Stop Lamps, without trailer socket, 4–door model/5–door model	45 – E 1
G200	LH rocker panel – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	45 – E 1
G200	LH rocker panel – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	45 – E 1
G200	LH rocker panel – With power folding mirrors	45 – E 1
G200	LH rocker panel – Auto–dimming interior mirror	45 – E 1
G200	LH rocker panel – 2–way power seats	45 – E 1
G200	LH rocker panel – 8–way power seats	45 – E 1
G200	LH rocker panel – Heated front seats	45 – E 1
G200	LH rocker panel – Climate controlled front seats	45 – E 1
G200	LH rocker panel – with heated rear seats	45 – E 1
G200	LH rocker panel – Front power windows, Driver side	45 – E 1

G200	LH rocker panel – Front power windows, Passenger side	45 – E 1
G200	LH rocker panel – front and rear power windows, Driver side front	45 – E 1
G200	LH rocker panel – front and rear power windows, Passenger side front	45 – E 1
G200	LH rocker panel – front and rear power windows, LH rear door	45 – E 1
G200	LH rocker panel – front and rear power windows, RH rear door	45 – E 1
G200	LH rocker panel – Heated rear window, Heated exterior mirrors	45 – E 1
G200	LH rocker panel – Petrol engines	45 – E 1
G200	LH rocker panel – Diesel engines	45 – E 1
G200	LH rocker panel – G200	45 – E 1
G200	LH rocker panel – G200, LHD	45 – E 1
G200	LH rocker panel – G200, RHD	45 – E 1
G201	dash panel, centre console – without external CD changer and video system	
G201	dash panel, centre console – with external CD changer and/or video system	
G201	dash panel, centre console – with external CD changer	
G201	dash panel, centre console – with video system	
G201	dash panel, centre console – Bluetooth voice control	
G201	dash panel, centre console – without DVD navigation system with touch screen	
G201	dash panel, centre console – with DVD navigation system with touch screen	
G201	dash panel, centre console	
G201	dash panel, centre console – DVD navigation system with touch screen	
G201	dash panel, centre console – G201, except DVD navigation system with touch screen, before 04/2004	
G201	dash panel, centre console – G201, except DVD navigation system with touch screen, as of 04/2004	
G201	dash panel, centre console – G201, with DVD navigation system with touch screen, before 04/2004	
G202	RH rocker panel, front	17 – E 2
G202	RH rocker panel, front – Autolamps	17 – E 2
G202	RH rocker panel, front – with rain sensor	17 – E 2
G202	RH rocker panel, front – G202	17 – E 2
G202	RH rocker panel, front	46 – B 1
G202	RH rocker panel, front – Autolamps	46 – B 1
G202	RH rocker panel, front – with rain sensor	46 – B 1
G202	RH rocker panel, front – G202	46 – B 1
G203	RH A–pillar – before 08/2004	23 – C 3
G203	RH A–pillar – Bosch 8.0	23 – C 3
G203	RH A–pillar	23 – C 3
G203	RH A–pillar – 5–speed automatic transmission (5F31J)	23 – C 3
G203	RH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4)	23 – C 3
G203	RH A–pillar – 1.8L Duratec–SCi (MI4), before 04/2004	23 – C 3
G203	RH A–pillar – 1.8L Duratec–SCi (MI4), as of 04/2004	23 – C 3
G203	RH A–pillar – Diesel engines	23 – C 3
G203	RH A–pillar – LHD	23 – C 3
G203	RH A–pillar – RHD	23 – C 3
G203	RH A–pillar – Turn Signal and Hazard Lamps	23 – C 3
G203	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	23 – C 3
G203	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	23 – C 3
G203	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon	23 – C 3

G203	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon	23 – C 3
G203	RH A–pillar – Data link connector, pins 4, 5 and 16	23 – C 3
G203	RH A–pillar – Petrol engines	23 – C 3
G203	RH A–pillar – Driver air bag	23 – C 3
G203	RH A–pillar – G203	23 – C 3
G203	RH A–pillar	
G203	RH A–pillar – 5–speed automatic transmission (5F31J)	
G203	RH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4)	
G203	RH A–pillar – Diesel engines	
G203	RH A–pillar – Turn Signal and Hazard Lamps	
G203	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	
G203	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	
G203	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon	
G203	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon	
G203	RH A–pillar – Data link connector, pins 4, 5 and 16	
G203	RH A–pillar – Petrol engines	
G203	RH A–pillar – Driver air bag	
G203	RH A–pillar – G203	
G204	RH A–pillar	23 – C 2
G204	RH A–pillar – Manual A/C, before 04/2004	23 – C 2
G204	RH A–pillar – EATC, before 04/2004	23 – C 2
G204	RH A–pillar – EATC, as of 04/2004	23 – C 2
G204	RH A–pillar – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	23 – C 2
G204	RH A–pillar – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	23 – C 2
G204	RH A–pillar – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	23 – C 2
G204	RH A–pillar – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	23 – C 2
G204	RH A–pillar – Autolamps	23 – C 2
G204	RH A–pillar – Headlamp Levelling, without high intensity discharge headlamps	23 – C 2
G204	RH A–pillar – Turn Signal and Hazard Lamps	23 – C 2
G204	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	23 – C 2
G204	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	23 – C 2
G204	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon	23 – C 2
G204	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon	23 – C 2
G204	RH A–pillar – Fog lamps, without trailer socket, 4–door model/5–door model	23 – C 2
G204	RH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	23 – C 2
G204	RH A–pillar – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	23 – C 2
G204	RH A–pillar – Fog lamps, without trailer socket, wagon	23 – C 2
G204	RH A–pillar – Fog lamps, with trailer socket, wagon, before 01/2004	23 – C 2
G204	RH A–pillar – Fog lamps, with trailer socket, wagon, as of 01/2004	23 – C 2
G204	RH A–pillar – without high intensity discharge headlamps	23 – C 2

G204	RH A–pillar – with high intensity discharge headlamps	23 – C 2
G204	RH A–pillar – Data link connector, pins 4, 5 and 16	23 – C 2
G204	RH A–pillar – Heated front seats	23 – C 2
G204	RH A–pillar – Climate controlled front seats	23 – C 2
G204	RH A–pillar – with heated rear seats	23 – C 2
G204	RH A–pillar – Heated windshield	23 – C 2
G204	RH A–pillar – Heated rear window, Heated exterior mirrors	23 – C 2
G204	RH A–pillar – Cigar lighter	23 – C 2
G204	RH A–pillar – with rain sensor	23 – C 2
G204	RH A–pillar – Without rear window wiper, without headlamp washer	23 – C 2
G204	RH A–pillar – Without rear window wiper, with headlamp washer	23 – C 2
G204	RH A–pillar – With rear window wiper, without headlamp washer	23 – C 2
G204	RH A–pillar – With rear window wiper, with headlamp washer	23 – C 2
G204	RH A–pillar – Light switch, without daytime running lamps, without high intensity discharge headlamps	23 – C 2
G204	RH A–pillar – Light switch, without daytime running lamps, with high intensity discharge headlamps	23 – C 2
G204	RH A–pillar – Light switch, without autolamps	23 – C 2
G204	RH A–pillar – Light switch, with autolamps	23 – C 2
G204	RH A–pillar – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	23 – C 2
G204	RH A–pillar – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	23 – C 2
G204	RH A–pillar – Light switch, Fog lamps, without trailer socket, wagon	23 – C 2
G204	RH A–pillar – Light switch, Fog lamps, with trailer socket, wagon	23 – C 2
G204	RH A–pillar – G204, before 04/2004	23 – C 2
G204	RH A–pillar – G204, as of 04/2004	23 – C 2
G204	RH A–pillar	
G204	RH A–pillar – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	
G204	RH A–pillar – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	
G204	RH A–pillar – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	
G204	RH A–pillar – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	
G204	RH A–pillar – Autolamps	
G204	RH A–pillar – Headlamp Levelling, without high intensity discharge headlamps	
G204	RH A–pillar – Turn Signal and Hazard Lamps	
G204	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	
G204	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	
G204	RH A–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon	
G204	RH A–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon	
G204	RH A–pillar – Fog lamps, without trailer socket, 4–door model/5–door model	
G204	RH A–pillar – Fog lamps, without trailer socket, wagon	
G204	RH A–pillar – without high intensity discharge headlamps	
G204	RH A–pillar – with high intensity discharge headlamps	
G204	RH A–pillar – Data link connector, pins 4, 5 and 16	

G204	RH A–pillar – Heated front seats	
G204	RH A–pillar – Climate controlled front seats	
G204	RH A–pillar – with heated rear seats	
G204	RH A–pillar – Heated windshield	
G204	RH A–pillar – Heated rear window, Heated exterior mirrors	
G204	RH A–pillar – Cigar lighter	
G204	RH A–pillar – with rain sensor	
G204	RH A–pillar – Without rear window wiper, without headlamp washer	
G204	RH A–pillar – Without rear window wiper, with headlamp washer	
G204	RH A–pillar – With rear window wiper, without headlamp washer	
G204	RH A–pillar – With rear window wiper, with headlamp washer	
G204	RH A–pillar – Light switch, without daytime running lamps, without high intensity discharge headlamps	
G204	RH A–pillar – Light switch, without daytime running lamps, with high intensity discharge headlamps	
G204	RH A–pillar – Light switch, without autolamps	
G204	RH A–pillar – Light switch, with autolamps	
G204	RH A–pillar – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	
G204	RH A–pillar – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	
G204	RH A–pillar – Light switch, Fog lamps, without trailer socket, wagon	
G204	RH A–pillar – Light switch, Fog lamps, with trailer socket, wagon	
G205	RH A–pillar, centre – LHD	17 – E 3
G205	RH A–pillar, centre – RHD	17 – E 3
G205	RH A–pillar, centre	17 – E 3
G205	RH A–pillar, centre – Turn Signal and Hazard Lamps	17 – E 3
G205	RH A–pillar, centre – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	17 – E 3
G205	RH A–pillar, centre – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	17 – E 3
G205	RH A–pillar, centre – Turn Signal and Hazard Lamps, without trailer socket, wagon	17 – E 3
G205	RH A–pillar, centre – Turn Signal and Hazard Lamps, with trailer socket, wagon	17 – E 3
G205	RH A–pillar, centre – Parking Lamps, without trailer socket, wagon, without autolamps	17 – E 3
G205	RH A–pillar, centre – Parking Lamps, without trailer socket, wagon, with autolamps	17 – E 3
G205	RH A–pillar, centre – Parking Lamps, with trailer socket, wagon, without autolamps	17 – E 3
G205	RH A–pillar, centre – Parking Lamps, with trailer socket, wagon, with autolamps	17 – E 3
G205	RH A–pillar, centre – Stop Lamps, without trailer socket, wagon	17 – E 3
G205	RH A–pillar, centre – Stop Lamps, with trailer socket, wagon, before 01/2004	17 – E 3
G205	RH A–pillar, centre – Stop Lamps, with trailer socket, wagon, as of 01/2004	17 – E 3
G205	RH A–pillar, centre – Reversing lamps, without trailer socket, wagon	17 – E 3
G205	RH A–pillar, centre – Reversing lamps, with trailer socket, wagon, before 01/2004	17 – E 3
G205	RH A–pillar, centre – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	17 – E 3
G205	RH A–pillar, centre – Fog lamps, without trailer socket, wagon	17 – E 3
G205	RH A–pillar, centre – Fog lamps, with trailer socket, wagon, before 01/2004	17 – E 3
G205	RH A–pillar, centre – Fog lamps, with trailer socket, wagon, as of 01/2004	17 – E 3

G205	RH A–pillar, centre – without trailer socket, wagon	17 – E 3
G205	RH A–pillar, centre – with trailer socket, wagon	17 – E 3
G205	RH A–pillar, centre – Heated front seats	17 – E 3
G205	RH A–pillar, centre – Climate controlled front seats	17 – E 3
G205	RH A–pillar, centre – with heated rear seats	17 – E 3
G205	RH A–pillar, centre – Front power windows, Driver side	17 – E 3
G205	RH A–pillar, centre – Front power windows, Passenger side	17 – E 3
G205	RH A–pillar, centre – front and rear power windows, Driver side front	17 – E 3
G205	RH A–pillar, centre – front and rear power windows, Passenger side front	17 – E 3
G205	RH A–pillar, centre – front and rear power windows, LH rear door	17 – E 3
G205	RH A–pillar, centre – front and rear power windows, RH rear door	17 – E 3
G205	RH A–pillar, centre – Heated windshield	17 – E 3
G205	RH A–pillar, centre – Heated rear window, Heated exterior mirrors	17 – E 3
G205	RH A–pillar, centre – Rear power point	17 – E 3
G205	RH A–pillar, centre – Side air bag	17 – E 3
G205	RH A–pillar, centre – G205, LHD	17 – E 3
G205	RH A–pillar, centre – G205, RHD	17 – E 3
G205	RH A–pillar, centre – G205	17 – E 3
G300	vehicle rear end, LH side – 1.8L Duratec–SCi (MI4)	47 – A 2
G300	vehicle rear end, LH side – 1.8/2.0L Duratec–HE (MI4)	47 – A 2
G300	vehicle rear end, LH side – 2.5L Duratec–VE (VE6)	47 – A 2
G300	vehicle rear end, LH side – 3.0L Duratec–SE (VE6)	47 – A 2
G300	vehicle rear end, LH side – 3.0L Duratec–ST (VE6), before 04/2004	47 – A 2
G300	vehicle rear end, LH side – 3.0L Duratec–ST (VE6), as of 04/2004	47 – A 2
G300	vehicle rear end, LH side	47 – A 2
G300	vehicle rear end, LH side – LHD	47 – A 2
G300	vehicle rear end, LH side – RHD	47 – A 2
G300	vehicle rear end, LH side – Valeo, 4–door model/5–door model, before 01/2004	47 – A 2
G300	vehicle rear end, LH side – Valeo, 4–door model/5–door model, as of 01/2004	47 – A 2
G300	vehicle rear end, LH side – Bosch, 4–door model/5–door model	47 – A 2
G300	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	47 – A 2
G300	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	47 – A 2
G300	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	47 – A 2
G300	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	47 – A 2
G300	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	47 – A 2
G300	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	47 – A 2
G300	vehicle rear end, LH side – Stop Lamps, without trailer socket, 4–door model/5–door model	47 – A 2
G300	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	47 – A 2
G300	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	47 – A 2
G300	vehicle rear end, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	47 – A 2

G300	vehicle rear end, LH side – Licence plate lamps	47 – A 2
G300	vehicle rear end, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model	47 – A 2
G300	vehicle rear end, LH side – Fog lamps, without trailer socket, 4–door model/5–door model	47 – A 2
G300	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004	47 – A 2
G300	vehicle rear end, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	47 – A 2
G300	vehicle rear end, LH side, 4–door model/5–door model – Trailer socket, before 01/2004	47 – A 2
G300	vehicle rear end, LH side, 4–door model/5–door model – Trailer socket, with 7–pin trailer socket, as of 01/2004	47 – A 2
G300	vehicle rear end, LH side – without trailer socket, 4–door model/5–door model	47 – A 2
G300	vehicle rear end, LH side – with trailer socket, 4–door model/5–door model	47 – A 2
G300	vehicle rear end, LH side – with heated rear seats	47 – A 2
G300	vehicle rear end, LH side – Heated rear window, Heated exterior mirrors	47 – A 2
G300	vehicle rear end, LH side – With rear window wiper	47 – A 2
G300	vehicle rear end, LH side – G300, 4–door model	47 – A 2
G300	vehicle rear end, LH side – G300, without trailer socket, 4–door model/5–door model	47 – A 2
G300	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004	47 – A 2
G300	vehicle rear end, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004	47 – A 2
G300	vehicle rear end, LH side – G300	47 – A 2
G300	vehicle rear end, LH side – 1.8L Duratec–SCi (MI4)	49 – A 2
G300	vehicle rear end, LH side – 1.8/2.0L Duratec–HE (MI4)	49 – A 2
G300	vehicle rear end, LH side – 2.5L Duratec–VE (VE6)	49 – A 2
G300	vehicle rear end, LH side	49 – A 2
G300	vehicle rear end, LH side – LHD	49 – A 2
G300	vehicle rear end, LH side – RHD	49 – A 2
G300	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model	49 – A 2
G300	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model	49 – A 2
G300	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps	49 – A 2
G300	vehicle rear end, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps	49 – A 2
G300	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps	49 – A 2
G300	vehicle rear end, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps	49 – A 2
G300	vehicle rear end, LH side – Stop Lamps, without trailer socket, 4–door model/5–door model	49 – A 2
G300	vehicle rear end, LH side – Licence plate lamps	49 – A 2
G300	vehicle rear end, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model	49 – A 2

G300	vehicle rear end, LH side – Fog lamps, without trailer socket, 4–door model/5–door model	49 – A 2
G300	vehicle rear end, LH side – without trailer socket, 4–door model/5–door model	49 – A 2
G300	vehicle rear end, LH side – with trailer socket, 4–door model/5–door model	49 – A 2
G300	vehicle rear end, LH side – with heated rear seats	49 – A 2
G300	vehicle rear end, LH side – Heated rear window, Heated exterior mirrors	49 – A 2
G300	vehicle rear end, LH side – With rear window wiper	49 – A 2
G300	vehicle rear end, LH side – G300, without trailer socket, 4–door model/5–door model	49 – A 2
G300	vehicle rear end, LH side – G300	49 – A 2
G300	vehicle rear end, LH side – Valeo, wagon, before 01/2004	51 – E 5
G300	vehicle rear end, LH side – Valeo, wagon, as of 01/2004	51 – E 5
G300	vehicle rear end, LH side – Bosch, wagon	51 – E 5
G300	vehicle rear end, LH side – Turn Signal and Hazard Lamps, without trailer socket, wagon	51 – E 5
G300	vehicle rear end, LH side – Turn Signal and Hazard Lamps, with trailer socket, wagon	51 – E 5
G300	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, without autolamps	51 – E 5
G300	vehicle rear end, LH side – Parking Lamps, without trailer socket, wagon, with autolamps	51 – E 5
G300	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, without autolamps	51 – E 5
G300	vehicle rear end, LH side – Parking Lamps, with trailer socket, wagon, with autolamps	51 – E 5
G300	vehicle rear end, LH side – Stop Lamps, without trailer socket, wagon	51 – E 5
G300	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, before 01/2004	51 – E 5
G300	vehicle rear end, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004	51 – E 5
G300	vehicle rear end, LH side – Reversing lamps, without trailer socket, wagon	51 – E 5
G300	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, before 01/2004	51 – E 5
G300	vehicle rear end, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	51 – E 5
G300	vehicle rear end, LH side – Fog lamps, without trailer socket, wagon	51 – E 5
G300	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, before 01/2004	51 – E 5
G300	vehicle rear end, LH side – Fog lamps, with trailer socket, wagon, as of 01/2004	51 – E 5
G300	vehicle rear end, LH side, wagon – Trailer socket, before 01/2004	51 – E 5
G300	vehicle rear end, LH side, wagon – Trailer socket, with 7–pin trailer socket, as of 01/2004	51 – E 5
G300	vehicle rear end, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004	51 – E 5
G300	vehicle rear end, LH side – without trailer socket, wagon	51 – E 5
G300	vehicle rear end, LH side – with trailer socket, wagon	51 – E 5
G300	vehicle rear end, LH side – G300, 5–door model/wagon	51 – E 5
G300	vehicle rear end, LH side – G300, without trailer socket, wagon	51 – E 5
G300	vehicle rear end, LH side – G300, with trailer socket, wagon, before 01/2004	51 – E 5
G300	vehicle rear end, LH side – G300, with trailer socket, wagon, as of 01/2004	51 – E 5
G300	vehicle rear end, LH side – 1.8L Duratec–SCi (MI4)	51 – E 5
G300	vehicle rear end, LH side – 1.8/2.0L Duratec–HE (MI4)	51 – E 5
G300	vehicle rear end, LH side – 2.5L Duratec–VE (VE6)	51 – E 5
G300	vehicle rear end, LH side	51 – E 5

G300	vehicle rear end, LH side – LHD	51 – E 5
G300	vehicle rear end, LH side – RHD	51 – E 5
G300	vehicle rear end, LH side – Licence plate lamps	51 – E 5
G300	vehicle rear end, LH side – with heated rear seats	51 – E 5
G300	vehicle rear end, LH side – Heated rear window, Heated exterior mirrors	51 – E 5
G300	vehicle rear end, LH side – With rear window wiper	51 – E 5
G300	vehicle rear end, LH side – G300	51 – E 5
G300	vehicle rear end, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004	51 – E 5
G300	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004	
G300	vehicle rear end, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
G301	on RH C–pillar – Heated rear window, Heated exterior mirrors	
G301	on RH C–pillar – G301, 4–door model	
G302	in loading space, LH side, wagon – Trailer socket, before 01/2004	
G302	in luggage compartment, LH side, 4–door model/5–door model – Trailer socket, before 01/2004	
G302	in loading space, LH side, wagon – G302, G303, before 01/2004	
G302	in luggage compartment, LH side, 4–door model/5–door model – G302, G303, before 01/2004	
G302	in luggage compartment, LH side, 4–door model/5–door model – Trailer socket, with 7–pin trailer socket, as of 01/2004	
G302	in loading space, RH side, wagon – Trailer socket, with 13–pin trailer socket, as of 01/2004	
G302	in loading space, LH side, wagon – G303, G303, as of 01/2004	
G303	in loading space, LH side, wagon – Trailer socket, before 01/2004	
G303	in loading space, LH side, wagon – Trailer socket, with 13–pin trailer socket, as of 01/2004	
G303	in loading space, LH side, wagon – G302, G303, before 01/2004	
G303	in loading space, LH side, wagon – G303, G303, as of 01/2004	
G303	in luggage compartment, LH side, 4–door model/5–door model – Trailer socket, with 7–pin trailer socket, as of 01/2004	
G304	in luggage compartment, LH side, 4–door model/5–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
G304	in loading space, RH side, wagon – Stop Lamps, with trailer socket, wagon, as of 01/2004	
G304	in loading space, RH side, wagon – Stop Lamps, with trailer socket, wagon, as of 01/2004	
G304	in luggage compartment, LH side, 4–door model/5–door model – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
G304	in loading space, RH side, wagon – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	
G304	in luggage compartment, LH side, 4–door model/5–door model – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
G304	in luggage compartment, LH side, 4–door model/5–door model – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
G304	in loading space, RH side, wagon – Fog lamps, with trailer socket, wagon, as of 01/2004	
G304	in loading space, RH side, wagon – Fog lamps, with trailer socket, wagon, as of 01/2004	

G304	in loading space, RH side, wagon – Trailer socket, with 13–pin trailer socket, as of 01/2004
G304	in loading space, RH side, wagon – Trailer socket, before 01/2004
G304	in luggage compartment, LH side, 4–door model/5–door model – Trailer socket, before 01/2004
G304	in loading space, RH side, wagon – G304, with 7–pin trailer socket, as of 01/2004
G304	in luggage compartment, LH side, 4–door model/5–door model – G304, with 7–pin trailer socket, as of 01/2004
G304	in loading space, RH side, wagon – G304, with 13–pin trailer socket, as of 01/2004
G304	in luggage compartment, LH side, 4–door model/5–door model – G304, with 13–pin trailer socket, as of 01/2004
G304	in luggage compartment, LH side, 4–door model/5–door model – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
G304	in loading space, RH side, wagon – Trailer socket, with 13–pin trailer socket, as of 01/2004

Splices

	Location
S102	on steering column – before 08/2004
S102	on steering column – Bosch 8.0
S102	on steering column
S102	on steering column – 5–speed automatic transmission (5F31J)
S102	on steering column – Petrol engines, except 1.8L Duratec–SCi (MI4)
S102	on steering column – 1.8L Duratec–SCi (MI4), before 04/2004
S102	on steering column – 1.8L Duratec–SCi (MI4), as of 04/2004
S102	on steering column – Diesel engines
S102	on steering column – LHD
S102	on steering column – RHD
S102	on steering column – Turn Signal and Hazard Lamps
S102	on steering column – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model
S102	on steering column – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
S102	on steering column – Turn Signal and Hazard Lamps, without trailer socket, wagon
S102	on steering column – Turn Signal and Hazard Lamps, with trailer socket, wagon
S102	on steering column – Data link connector, pins 4, 5 and 16
S102	on steering column – Petrol engines
S102	on steering column – Driver air bag
S102	on steering column – G203
S110	behind dash panel, centre console
S110	behind dash panel, centre console – Manual A/C, before 04/2004
S110	behind dash panel, centre console – EATC, before 04/2004
S110	behind dash panel, centre console – EATC, as of 04/2004
S110	behind dash panel, centre console – Autolamps
S110	behind dash panel, centre console – Turn Signal and Hazard Lamps
S110	behind dash panel, centre console – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model
S110	behind dash panel, centre console – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
S110	behind dash panel, centre console – Turn Signal and Hazard Lamps, without trailer socket, wagon
S110	behind dash panel, centre console – Turn Signal and Hazard Lamps, with trailer socket, wagon
S110	behind dash panel, centre console – Heated front seats
S110	behind dash panel, centre console – Climate controlled front seats
S110	behind dash panel, centre console – with rain sensor
S110	behind dash panel, centre console – G204, before 04/2004
S110	behind dash panel, centre console – G204, as of 04/2004
S112	behind dash panel – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S112	behind dash panel
S112	behind dash panel – Petrol engines
S113	behind dash panel, Passenger side – Manual A/C, before 04/2004
S116	behind dash panel, centre console

S116	behind dash panel, centre console – Headlamps, High beam, without high intensity discharge headlamps, without autolamps
S116	behind dash panel, centre console – Headlamps, High beam, without high intensity discharge headlamps, with autolamps
S116	behind dash panel, centre console – Headlamps, High beam, with high intensity discharge headlamps, without autolamps
S116	behind dash panel, centre console – Headlamps, High beam, with high intensity discharge headlamps, with autolamps
S116	behind dash panel, centre console – Headlamp Levelling, without high intensity discharge headlamps
S116	behind dash panel, centre console – Turn Signal and Hazard Lamps
S116	behind dash panel, centre console – Fog lamps, without trailer socket, 4–door model/5–door model
S116	behind dash panel, centre console – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S116	behind dash panel, centre console – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S116	behind dash panel, centre console – Fog lamps, without trailer socket, wagon
S116	behind dash panel, centre console – Fog lamps, with trailer socket, wagon, before 01/2004
S116	behind dash panel, centre console – Fog lamps, with trailer socket, wagon, as of 01/2004
S116	behind dash panel, centre console – without high intensity discharge headlamps
S116	behind dash panel, centre console – with high intensity discharge headlamps
S116	behind dash panel, centre console – Data link connector, pins 4, 5 and 16
S116	behind dash panel, centre console – Heated windshield
S116	behind dash panel, centre console – Heated rear window, Heated exterior mirrors
S116	behind dash panel, centre console – Without rear window wiper, without headlamp washer
S116	behind dash panel, centre console – Without rear window wiper, with headlamp washer
S116	behind dash panel, centre console – With rear window wiper, without headlamp washer
S116	behind dash panel, centre console – With rear window wiper, with headlamp washer
S116	behind dash panel, centre console – Light switch, without autolamps
S116	behind dash panel, centre console – Light switch, with autolamps
S116	behind dash panel, centre console – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model
S116	behind dash panel, centre console – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model
S116	behind dash panel, centre console – Light switch, Fog lamps, without trailer socket, wagon
S116	behind dash panel, centre console – Light switch, Fog lamps, with trailer socket, wagon
S116	behind dash panel, centre console – G204, before 04/2004
S116	behind dash panel, centre console – G204, as of 04/2004
S120	behind dash panel, driver side – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S120	behind dash panel, driver side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S120	behind dash panel, driver side – as of 08/2004
S132	behind dash panel, driver side
S132	behind dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps
S132	behind dash panel, driver side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps

S132	behind dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps
S132	behind dash panel, driver side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps
S133	behind dash panel – without high intensity discharge headlamps
S133	behind dash panel – with high intensity discharge headlamps
S134	behind dash panel, driver side – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S134	behind dash panel, driver side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S134	behind dash panel, driver side – as of 08/2004
S137	behind dash panel – 5–speed automatic transmission (5F31J)
S137	behind dash panel – Petrol engines, except 1.8L Duratec–SCi (MI4)
S137	behind dash panel – Diesel engines
S137	behind dash panel – F82, Petrol engines
S137	behind dash panel – F82, Diesel engines
S142	behind dash panel – 1.8L Duratec–SCi (MI4)
S142	behind dash panel – 1.8/2.0L Duratec–HE (MI4)
S142	behind dash panel – 2.5L Duratec–VE (VE6)
S142	behind dash panel – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S142	behind dash panel – Heated front seats
S142	behind dash panel – Climate controlled front seats
S142	behind dash panel – Ignition switch manual transmission
S142	behind dash panel – Ignition switch automatic transmission
S145	behind dash panel – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps
S145	behind dash panel – Headlamps, High beam, without high intensity discharge headlamps, with autolamps
S145	behind dash panel – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps
S145	behind dash panel – Headlamps, High beam, with high intensity discharge headlamps, with autolamps
S145	behind dash panel – Autolamps
S145	behind dash panel – Without high intensity discharge headlamps
S145	behind dash panel – without high intensity discharge headlamps
S145	behind dash panel – With high intensity discharge headlamps
S145	behind dash panel – with high intensity discharge headlamps
S145	behind dash panel – Light switch, without daytime running lamps, without high intensity discharge headlamps
S145	behind dash panel – Light switch, without daytime running lamps, with high intensity discharge headlamps
S145	behind dash panel – Light switch, with daytime running lamps, without high intensity discharge headlamps
S145	behind dash panel – Light switch, with daytime running lamps, with high intensity discharge headlamps
S145	behind dash panel – Light switch, without autolamps
S145	behind dash panel – Light switch, with autolamps
S145	behind dash panel – F88, F89, without autolamps
S145	behind dash panel – F88, F89, with autolamps
S147	behind dash panel

S147	behind dash panel – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps
S147	behind dash panel – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps
S147	behind dash panel – Autolamps
S147	behind dash panel – Without rear window wiper, with headlamp washer
S147	behind dash panel – With rear window wiper, with headlamp washer
S147	behind dash panel – Light switch, without daytime running lamps, without high intensity discharge headlamps
S147	behind dash panel – Light switch, without daytime running lamps, with high intensity discharge headlamps
S153	behind dash panel – 5–speed automatic transmission (5F31J)
S153	behind dash panel – F75, 5–speed automatic transmission (5F31J)
S167	behind dash panel – with autolamps
S167	behind dash panel – Autolamps
S167	behind dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps
S167	behind dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
S167	behind dash panel – Parking Lamps, without trailer socket, wagon, with autolamps
S167	behind dash panel – Parking Lamps, with trailer socket, wagon, with autolamps
S167	behind dash panel – Light switch, with autolamps
S169	behind dash panel – with autolamps
S169	behind dash panel – Autolamps
S169	behind dash panel – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps
S169	behind dash panel – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
S169	behind dash panel – Parking Lamps, without trailer socket, wagon, with autolamps
S169	behind dash panel – Parking Lamps, with trailer socket, wagon, with autolamps
S169	behind dash panel – Light switch, with autolamps
S169	behind dash panel – F20, F21
S172	behind dash panel, centre console
S172	behind dash panel, centre console – 4–speed automatic transmission (CD4E)
S172	behind dash panel, centre console – 5–speed automatic transmission (5F31J)
S172	behind dash panel, centre console – Manual A/C, before 04/2004
S172	behind dash panel, centre console – EATC, before 04/2004
S172	behind dash panel, centre console – EATC, as of 04/2004
S172	behind dash panel, centre console – Pre–equipment pack
S172	behind dash panel, centre console – without external CD changer and video system
S172	behind dash panel, centre console – with external CD changer and/or video system
S172	behind dash panel, centre console – Turn Signal and Hazard Lamps
S172	behind dash panel, centre console – DVD navigation system with touch screen
S172	behind dash panel, centre console – Heated front seats
S172	behind dash panel, centre console – Climate controlled front seats
S172	behind dash panel, centre console – with heated rear seats
S172	behind dash panel, centre console – Heated windshield
S172	behind dash panel, centre console – Heated rear window, Heated exterior mirrors
S172	behind dash panel, centre console – Cigar lighter

S174	behind dash panel, driver side – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S174	behind dash panel, driver side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S174	behind dash panel, driver side – as of 08/2004
S174	behind dash panel, driver side – 1.8L Duratec–SCi (MI4)
S174	behind dash panel, driver side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S174	behind dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S174	behind dash panel, driver side – 5–speed automatic transmission (5F31J), Petrol engines
S174	behind dash panel, driver side – 5–speed automatic transmission (5F31J), Diesel engines
S174	behind dash panel, driver side – Manual A/C, before 04/2004
S174	behind dash panel, driver side – EATC, before 04/2004
S174	behind dash panel, driver side – EATC, as of 04/2004
S174	behind dash panel, driver side
S174	behind dash panel, driver side – Petrol engines
S174	behind dash panel, driver side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S174	behind dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel
S174	behind dash panel, driver side – 2.0L Duratorq–TDCi (Puma) Diesel
S174	behind dash panel, driver side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)
S174	behind dash panel, driver side – 3.0L Duratec–SE (VE6)
S174	behind dash panel, driver side – 3.0L Duratec–ST (VE6)
S174	behind dash panel, driver side – Diesel engines
S174	behind dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004
S174	behind dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004
S174	behind dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S174	behind dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004
S174	behind dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004
S174	behind dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004
S176	behind dash panel, driver side – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S176	behind dash panel, driver side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S176	behind dash panel, driver side – as of 08/2004
S176	behind dash panel, driver side – 1.8L Duratec–SCi (MI4)
S176	behind dash panel, driver side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S176	behind dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S176	behind dash panel, driver side – 5–speed automatic transmission (5F31J), Petrol engines
S176	behind dash panel, driver side – 5–speed automatic transmission (5F31J), Diesel engines
S176	behind dash panel, driver side – Manual A/C, before 04/2004
S176	behind dash panel, driver side – EATC, before 04/2004

S176	behind dash panel, driver side – EATC, as of 04/2004
S176	behind dash panel, driver side
S176	behind dash panel, driver side – Petrol engines
S176	behind dash panel, driver side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S176	behind dash panel, driver side – 2.2L Duratorq–TDCi (Puma) Diesel
S176	behind dash panel, driver side – 2.0L Duratorq–TDCi (Puma) Diesel
S176	behind dash panel, driver side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)
S176	behind dash panel, driver side – 3.0L Duratec–SE (VE6)
S176	behind dash panel, driver side – 3.0L Duratec–ST (VE6)
S176	behind dash panel, driver side – Diesel engines
S176	behind dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004
S176	behind dash panel, driver side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004
S176	behind dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S176	behind dash panel, driver side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004
S176	behind dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004
S176	behind dash panel, driver side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004
S178	behind dash panel, centre console – 5–speed automatic transmission (5F31J), Petrol engines
S178	behind dash panel, centre console – 5–speed automatic transmission (5F31J), Diesel engines
S178	behind dash panel, centre console – Manual A/C, before 04/2004
S178	behind dash panel, centre console
S178	behind dash panel, centre console – Data link connector, pin 7
S180	behind dash panel, centre console – EATC
S183	behind dash panel – with rain sensor
S184	behind dash panel – DVD navigation system with touch screen
S184	behind dash panel – with external CD changer and/or video system
S184	behind dash panel – F69, with external CD changer and/or video system
S185	behind dash panel – Without rear window wiper, without headlamp washer
S185	behind dash panel – Without rear window wiper, with headlamp washer
S185	behind dash panel – With rear window wiper, without headlamp washer
S185	behind dash panel – With rear window wiper, with headlamp washer
S190	behind dash panel – without external CD changer and video system
S190	behind dash panel – Data link connector, pins 3 and 11, without external CD changer and video system
S192	behind dash panel – Pre–equipment pack
S192	behind dash panel – without external CD changer and video system
S192	behind dash panel – with external CD changer
S192	behind dash panel – with video system
S192	behind dash panel – Data link connector, pins 3 and 11, without external CD changer and video system

S192	behind dash panel – Data link connector, pins 3 and 11, with external CD changer or video system
S192	behind dash panel – Data link connector, pins 3 and 11, with external CD changer and video system
S192	behind dash panel – Data link connector, pins 3 and 11, with voice control
S192	behind dash panel
S192	behind dash panel – DVD navigation system with touch screen
S192	behind dash panel – Bluetooth voice control
S194	behind dash panel – Pre–equipment pack
S194	behind dash panel – without external CD changer and video system
S194	behind dash panel – with external CD changer
S194	behind dash panel – with video system
S194	behind dash panel – Data link connector, pins 3 and 11, without external CD changer and video system
S194	behind dash panel – Data link connector, pins 3 and 11, with external CD changer or video system
S194	behind dash panel – Data link connector, pins 3 and 11, with external CD changer and video system
S194	behind dash panel – Data link connector, pins 3 and 11, with voice control
S194	behind dash panel
S194	behind dash panel – DVD navigation system with touch screen
S194	behind dash panel – Bluetooth voice control
S201	in RH front footwell
S201	in RH front footwell – Autolamps
S201	in RH front footwell – with rain sensor
S201	in RH front footwell – G202
S210	RH A–pillar
S211	in luggage compartment, rear, LH side – 1.8L Duratec–SCi (MI4)
S211	in luggage compartment, rear, LH side – 1.8/2.0L Duratec–HE (MI4)
S211	in luggage compartment, rear, LH side – 2.5L Duratec–VE (VE6)
S211	in luggage compartment, rear, LH side – 3.0L Duratec–SE (VE6)
S211	in luggage compartment, rear, LH side – 3.0L Duratec–ST (VE6), before 04/2004
S211	in luggage compartment, rear, LH side – 3.0L Duratec–ST (VE6), as of 04/2004
S211	in luggage compartment, rear, LH side
S211	in luggage compartment, rear, LH side – LHD
S211	in luggage compartment, rear, LH side – RHD
S211	in luggage compartment, rear, LH side – Valeo, 4–door model/5–door model, before 01/2004
S211	in luggage compartment, rear, LH side – Valeo, 4–door model/5–door model, as of 01/2004
S211	in luggage compartment, rear, LH side – Bosch, 4–door model/5–door model
S211	in luggage compartment, rear, LH side – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model
S211	in luggage compartment, rear, LH side – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
S211	in luggage compartment, rear, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps
S211	in luggage compartment, rear, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps

S211	in luggage compartment, rear, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps
S211	in luggage compartment, rear, LH side – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
S211	in luggage compartment, rear, LH side – Stop Lamps, without trailer socket, 4–door model/5–door model
S211	in luggage compartment, rear, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S211	in luggage compartment, rear, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S211	in loading space, rear, LH side – Stop Lamps, without trailer socket, wagon
S211	in luggage compartment, rear, LH side – Reversing lamps, without trailer socket, 4–door model/5–door model
S211	in luggage compartment, rear, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S211	in luggage compartment, rear, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S211	in luggage compartment, rear, LH side – Fog lamps, without trailer socket, 4–door model/5–door model
S211	in luggage compartment, rear, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S211	in luggage compartment, rear, LH side – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S211	in luggage compartment, rear, LH side – without trailer socket, 4–door model/5–door model
S211	in luggage compartment, rear, LH side – with trailer socket, 4–door model/5–door model
S211	in luggage compartment, rear, LH side – with heated rear seats
S211	in luggage compartment, rear, LH side – G300, without trailer socket, 4–door model/5–door model
S211	in luggage compartment, rear, LH side – G300, with trailer socket, 4–door model/5–door model, before 01/2004
S211	in luggage compartment, rear, LH side – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
S211	in luggage compartment, rear, LH side – G300, without trailer socket, wagon
S211	in loading space, rear, LH side – G300, with trailer socket, wagon, before 01/2004
S211	in loading space, rear, LH side – G300, with trailer socket, wagon, as of 01/2004
S211	in luggage compartment, rear, LH side – G300
S211	in luggage compartment, LH side, behind luggage compartment lining – Trailer socket, with 7–pin trailer socket, as of 01/2004
S211	in loading space, LH side, behind luggage compartment lining – Trailer socket, with 7–pin trailer socket, as of 01/2004
S211	in loading space, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004
S211	in loading space, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004
S212	in LH front footwell – 4–speed automatic transmission (CD4E)
S212	in LH front footwell
S212	in LH front footwell – LHD
S212	in LH front footwell – RHD
S212	in LH front footwell – With power folding mirrors
S212	in LH front footwell – 2–way power seats
S212	in LH front footwell – 8–way power seats

S212	in LH front footwell – Heated front seats
S212	in LH front footwell – Climate controlled front seats
S212	in LH front footwell – with heated rear seats
S212	in LH front footwell – Front power windows, Driver side
S212	in LH front footwell – Front power windows, Passenger side
S212	in LH front footwell – front and rear power windows, Driver side front
S212	in LH front footwell – front and rear power windows, Passenger side front
S212	in LH front footwell – front and rear power windows, LH rear door
S212	in LH front footwell – G200
S212	in LH front footwell – G200, LHD
S212	in LH front footwell – G200, RHD
S212	in LH front footwell – G200
S215	in RH front footwell – LHD
S215	in RH front footwell – RHD
S215	in RH front footwell – Stop Lamps, without trailer socket, wagon
S215	in RH front footwell
S215	in RH front footwell – Heated front seats
S215	in RH front footwell – Climate controlled front seats
S215	in RH front footwell – with heated rear seats
S215	in RH front footwell – Front power windows, Driver side
S215	in RH front footwell – Front power windows, Passenger side
S215	in RH front footwell – front and rear power windows, Driver side front
S215	in RH front footwell – front and rear power windows, Passenger side front
S215	in RH front footwell – front and rear power windows, RH rear door
S215	in RH front footwell – Rear power point
S215	in RH front footwell – Side air bag
S215	in RH front footwell – G205, LHD
S215	in RH front footwell – G205, RHD
S215	in RH front footwell – G205
S231	LH rocker panel, front – 1.8L Duratec–SCi (MI4)
S231	LH rocker panel, front – 1.8/2.0L Duratec–HE (MI4)
S231	LH rocker panel, front – 2.5L Duratec–VE (VE6)
S231	LH rocker panel, front – 3.0L Duratec–SE (VE6)
S231	LH rocker panel, front – 3.0L Duratec–ST (VE6), before 04/2004
S231	LH rocker panel, front – 3.0L Duratec–ST (VE6), as of 04/2004
S231	LH rocker panel, front
S232	in RH front footwell – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S232	in RH front footwell – 4–speed automatic transmission (CD4E), 4–door model/5–door model
S232	in RH front footwell – 4–speed automatic transmission (CD4E), wagon
S232	in RH front footwell – 5–speed automatic transmission (5F31J), 4–door model/5–door model
S232	in RH front footwell – 5–speed automatic transmission (5F31J), wagon
S232	in RH front footwell – Valeo, 4–door model/5–door model, before 01/2004
S232	in RH front footwell – Valeo, 4–door model/5–door model, as of 01/2004
S232	in RH front footwell – Valeo, wagon, before 01/2004
S232	in RH front footwell – Valeo, wagon, as of 01/2004
S232	in RH front footwell – Bosch, 4–door model/5–door model
S232	in RH front footwell – Bosch, wagon

S232	in RH front footwell – Pre–equipment pack, Petrol engines
S232	in RH front footwell – Pre–equipment pack, Diesel engines
S232	in RH front footwell – Reversing lamps, without trailer socket, 4–door model/5–door model
S232	in RH front footwell – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S232	in RH front footwell – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S232	in RH front footwell – Reversing lamps, without trailer socket, wagon
S232	in RH front footwell – Reversing lamps, with trailer socket, wagon, before 01/2004
S232	in RH front footwell – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
S232	in RH front footwell – Petrol engines
S232	in RH front footwell – Diesel engines
S232	in RH front footwell – DVD navigation system with touch screen
S232	in RH front footwell – With rear window wiper
S236	under centre console – Heated front seats
S236	under centre console – Climate controlled front seats
S238	under centre console – with heated rear seats
S238	under centre console – F83
S250	LH A–pillar – 2–way power seats
S250	LH A–pillar – 8–way power seats
S250	LH A–pillar – F65, F66
S252	LH A–pillar
S252	LH A–pillar – F99, 4–door model/5–door model
S252	LH A–pillar – F99, wagon
S270	in LH front footwell – Front power windows, Driver side
S270	in LH front footwell – Front power windows, Passenger side
S270	in LH front footwell – front and rear power windows, Driver side front
S270	in LH front footwell – front and rear power windows, Passenger side front
S270	in LH front footwell – front and rear power windows, LH rear door
S270	in LH front footwell – front and rear power windows, RH rear door
S270	in LH front footwell – Petrol engines
S270	in LH front footwell – Diesel engines
S272	in RH front footwell, RH rocker panel
S274	in RH front footwell, RH rocker panel
S276	in RH front footwell, RH rocker panel
S278	under centre console – Heated front seats
S278	under centre console – Climate controlled front seats
S280	rear seats – with heated rear seats
S301	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S301	engine compartment, on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S301	engine compartment, on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III
S301	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV
S301	engine compartment, on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel
S301	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel

S301	engine compartment, on engine bulkhead, RH side – Diesel engines
S301	engine compartment, on engine bulkhead, RH side – G106, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S301	engine compartment, on engine bulkhead, RH side – G106, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S311	engine compartment, LH side – Diesel engines, with fuel fired heater
S311	engine compartment, LH side – Diesel engines, with fuel fired heater, as of 08/2004
S311	engine compartment, LH side – before 08/2004
S311	engine compartment, LH side – as of 08/2004
S311	engine compartment, LH side – Turn Signal and Hazard Lamps
S311	engine compartment, LH side – without high intensity discharge headlamps
S311	engine compartment, LH side – with high intensity discharge headlamps
S311	engine compartment, LH side
S311	engine compartment, LH side – Heated front seats
S311	engine compartment, LH side – Climate controlled front seats
S311	engine compartment, LH side – Heated windshield
S311	engine compartment, LH side – Without rear window wiper, with headlamp washer
S311	engine compartment, LH side – With rear window wiper, with headlamp washer
S311	engine compartment, LH side – with windshield washer jet heater
S311	engine compartment, LH side – G104
S315	engine compartment, front, LH side – Petrol engines, except 1.8L Duratec–SCi (MI4)
S315	engine compartment, front, LH side
S315	engine compartment, front, LH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps
S315	engine compartment, front, LH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps
S315	engine compartment, front, LH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps
S315	engine compartment, front, LH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps
S315	engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps
S315	engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps
S315	engine compartment, front, LH side – Headlamps, Low beam, with high intensity discharge headlamps
S315	engine compartment, front, LH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps
S315	engine compartment, front, LH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps
S315	engine compartment, front, LH side – Headlamp Levelling, without high intensity discharge headlamps
S315	engine compartment, front, LH side – Headlamp Levelling, with high intensity discharge headlamps
S315	engine compartment, front, LH side – Turn Signal and Hazard Lamps
S315	engine compartment, front, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps
S315	engine compartment, front, LH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps

S315	engine compartment, front, LH side – Parking Lamps, without trailer socket, wagon, without autolamps
S315	engine compartment, front, LH side – Parking Lamps, without trailer socket, wagon, with autolamps
S315	engine compartment, front, LH side – Without high intensity discharge headlamps
S315	engine compartment, front, LH side – With high intensity discharge headlamps
S315	engine compartment, front, LH side – without trailer socket, 4–door model/5–door model
S315	engine compartment, front, LH side – without trailer socket, wagon
S315	engine compartment, front, LH side – G104
S317	engine compartment, front, RH side – 5–speed automatic transmission (5F31J), Diesel engines
S317	engine compartment, front, RH side
S317	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps
S317	engine compartment, front, RH side – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps
S317	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, without autolamps
S317	engine compartment, front, RH side – Headlamps, High beam, without high intensity discharge headlamps, with autolamps
S317	engine compartment, front, RH side – Headlamps, Low beam, with high intensity discharge headlamps
S317	engine compartment, front, RH side – Headlamps, High beam, with high intensity discharge headlamps, without autolamps
S317	engine compartment, front, RH side – Headlamps, High beam, with high intensity discharge headlamps, with autolamps
S317	engine compartment, front, RH side – Headlamp Levelling, without high intensity discharge headlamps
S317	engine compartment, front, RH side – Headlamp Levelling, with high intensity discharge headlamps
S317	engine compartment, front, RH side – Turn Signal and Hazard Lamps
S317	engine compartment, front, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps
S317	engine compartment, front, RH side – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps
S317	engine compartment, front, RH side – Parking Lamps, without trailer socket, wagon, without autolamps
S317	engine compartment, front, RH side – Parking Lamps, without trailer socket, wagon, with autolamps
S317	engine compartment, front, RH side – Without high intensity discharge headlamps
S317	engine compartment, front, RH side – With high intensity discharge headlamps
S317	engine compartment, front, RH side – without trailer socket, 4–door model/5–door model
S317	engine compartment, front, RH side – without trailer socket, wagon
S317	engine compartment, front, RH side – Heated windshield
S317	engine compartment, front, RH side – with variable intermittent wipe
S317	engine compartment, front, RH side – with rain sensor
S317	engine compartment, front, RH side – Without rear window wiper, with headlamp washer
S317	engine compartment, front, RH side – With rear window wiper, with headlamp washer
S317	engine compartment, front, RH side – G105
S331	engine compartment, LH side, near Battery Junction Box (BJB) – Heated windshield

S331	engine compartment, LH side, near Battery Junction Box (BJB)
S332	engine compartment, LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S333	engine compartment, LH side – Diesel engines, with fuel fired heater
S333	engine compartment, LH side – Diesel engines, with fuel fired heater, as of 08/2004
S333	engine compartment, LH side – Diesel engines
S333	engine compartment, LH side
S333	engine compartment, LH side – Heated windshield
S334	engine compartment, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S335	engine compartment, LH side, on engine bulkhead – Headlamps, Low beam, with high intensity discharge headlamps
S335	engine compartment, LH side, on engine bulkhead – Headlamp Levelling, with high intensity discharge headlamps
S335	engine compartment, LH side, on engine bulkhead – With high intensity discharge headlamps
S335	engine compartment, LH side, on engine bulkhead – F93
S337	engine compartment, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003
S337	engine compartment, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003
S337	engine compartment, LH side – Diesel engines, With electric coolant heater, before 12/2003
S339	engine compartment, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S339	engine compartment, LH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S339	engine compartment, LH side – 2.2L Duratorq–TDCi (Puma) Diesel
S339	engine compartment, LH side – 2.0L Duratorq–TDCi (Puma) Diesel
S339	engine compartment, LH side – F42, Diesel engines
S343	engine – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S343	engine – 3.0L Duratec–SE (VE6)
S343	engine – 3.0L Duratec–ST (VE6), before 04/2004
S343	engine – 3.0L Duratec–ST (VE6), as of 04/2004
S343	engine – F42, 3.0L Duratec–SE (VE6)
S343	engine – F42, 3.0L Duratec–ST (VE6), before 04/2004
S343	engine – F42, 3.0L Duratec–ST (VE6), as of 04/2004
S344	LH A–pillar – 2.5L Duratec–VE (VE6)
S344	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S344	LH A–pillar – 5–speed automatic transmission (5F31J), Petrol engines
S344	LH A–pillar – 5–speed automatic transmission (5F31J), Diesel engines
S344	LH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4)
S344	LH A–pillar – Diesel engines
S346	engine compartment, LH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model
S346	engine compartment, LH side – 5–speed automatic transmission (5F31J), wagon
S346	engine compartment, LH side – 5–speed automatic transmission (5F31J)
S346	engine compartment, LH side – F17
S347	engine compartment, LH side – F67, 3.0L Duratec–SE (VE6)
S347	engine compartment, LH side – F67, 3.0L Duratec–ST (VE6)
S349	engine bulkhead – Autolamps
S349	engine bulkhead – with rain sensor

S349	engine bulkhead
S349	engine bulkhead – F94
S361	engine compartment, LH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003
S361	engine compartment, LH side – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003
S361	engine compartment, LH side – Diesel engines, With electric coolant heater, before 12/2003
S361	engine compartment, LH side – F3, before 12/2003
S369	engine – 3.0L Duratec–ST (VE6)
S369	engine – 3.0L Duratec–SE (VE6)
S369	engine – 3.0L Duratec–ST (VE6), before 04/2004
S369	engine – 3.0L Duratec–ST (VE6), as of 04/2004
S369	engine – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S369	engine – Petrol engines
S371	engine compartment, LH side – Turn Signal and Hazard Lamps
S371	engine compartment, LH side
S373	engine compartment, LH side – Turn Signal and Hazard Lamps
S373	engine compartment, LH side
S377	engine compartment, on engine bulkhead, RH side – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S377	engine compartment, on engine bulkhead, RH side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S377	engine compartment, on engine bulkhead, RH side – as of 08/2004
S377	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S377	engine compartment, on engine bulkhead, RH side – 1.8L Duratec–SCi (MI4)
S377	engine compartment, on engine bulkhead, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S377	engine compartment, on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S377	engine compartment, on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), Petrol engines
S377	engine compartment, on engine bulkhead, RH side – Petrol engines
S377	engine compartment, on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel
S377	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel
S377	engine compartment, on engine bulkhead, RH side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)
S377	engine compartment, on engine bulkhead, RH side – 3.0L Duratec–SE (VE6)
S377	engine compartment, on engine bulkhead, RH side – 3.0L Duratec–ST (VE6)
S377	engine compartment, on engine bulkhead, RH side – Diesel engines
S377	engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004
S377	engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004
S377	engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S377	engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004

S377 engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004
S377 engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004
S378 engine – 3.0L Duratec–ST (VE6)
S378 engine – 3.0L Duratec–ST (VE6), before 04/2004
S378 engine – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S378 engine – Petrol engines
S379 engine compartment, on engine bulkhead, RH side – Petrol engines, 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S379 engine compartment, on engine bulkhead, RH side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S379 engine compartment, on engine bulkhead, RH side – as of 08/2004
S379 engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S379 engine compartment, on engine bulkhead, RH side – 1.8L Duratec–SCi (MI4)
S379 engine compartment, on engine bulkhead, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S379 engine compartment, on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S379 engine compartment, on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), Petrol engines
S379 engine compartment, on engine bulkhead, RH side – Petrol engines
S379 engine compartment, on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel
S379 engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel
S379 engine compartment, on engine bulkhead, RH side – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6)
S379 engine compartment, on engine bulkhead, RH side – 3.0L Duratec–SE (VE6)
S379 engine compartment, on engine bulkhead, RH side – 3.0L Duratec–ST (VE6)
S379 engine compartment, on engine bulkhead, RH side – Diesel engines
S379 engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, before 08/2004
S379 engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Petrol engines, as of 08/2004
S379 engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S379 engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004
S379 engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004
S379 engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004
S380 LH A–pillar – 1.8/2.0L Duratec–HE (MI4)
S380 LH A–pillar – 2.5L Duratec–VE (VE6)
S380 LH A–pillar – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S380 LH A–pillar – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP

S380	LH A–pillar – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S380	LH A–pillar – Petrol engines, except 1.8L Duratec–SCi (MI4), except 3.0L Duratec–ST (VE6)
S380	LH A–pillar – 3.0L Duratec–ST (VE6)
S380	LH A–pillar – Diesel engines
S380	LH A–pillar – Pre–equipment pack, Petrol engines
S380	LH A–pillar – Pre–equipment pack, Diesel engines
S380	LH A–pillar – Petrol engines
S381	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S383	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S385	behind dash panel, LH side – before 08/2004
S385	behind dash panel, LH side – Bosch 8.0
S385	behind dash panel, LH side
S385	behind dash panel, LH side – 5–speed automatic transmission (5F31J), Petrol engines
S385	behind dash panel, LH side – 5–speed automatic transmission (5F31J), Diesel engines
S385	behind dash panel, LH side – Diesel engines, with fuel fired heater
S385	behind dash panel, LH side – Diesel engines, with fuel fired heater, as of 08/2004
S385	behind dash panel, LH side – Headlamps, Low beam, with high intensity discharge headlamps
S385	behind dash panel, LH side – With high intensity discharge headlamps
S385	behind dash panel, LH side – Data link connector, pin 7
S387	engine compartment, on engine bulkhead, RH side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S387	engine compartment, on engine bulkhead, RH side – as of 08/2004
S387	engine compartment, on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S387	engine compartment, on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), Diesel engines
S387	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S387	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel
S387	engine compartment, on engine bulkhead, RH side – Diesel engines
S387	engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S387	engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004
S389	engine compartment, on engine bulkhead, RH side – Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S389	engine compartment, on engine bulkhead, RH side – as of 08/2004
S389	engine compartment, on engine bulkhead, RH side – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S389	engine compartment, on engine bulkhead, RH side – 5–speed automatic transmission (5F31J), Diesel engines
S389	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S389	engine compartment, on engine bulkhead, RH side – 2.0L Duratorq–TDCi (Puma) Diesel

S389	engine compartment, on engine bulkhead, RH side – Diesel engines
S389	engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, before 08/2004
S389	engine compartment, on engine bulkhead, RH side – Data link connector, pins 6 and 14, Diesel engines, except 2.0L Duratorq–TDCi (Puma) Diesel with manual transmission, except 2.2L Duratorq–TDCi (Puma) Diesel with manual transmission, as of 08/2004
S390	engine compartment, LH side – 5–speed automatic transmission (5F31J), 4–door model/5–door model
S390	engine compartment, LH side – 5–speed automatic transmission (5F31J), wagon
S390	engine compartment, LH side – 5–speed automatic transmission (5F31J)
S395	transmission – 5–speed automatic transmission (5F31J)
S397	transmission – 5–speed automatic transmission (5F31J)
S399	transmission – 5–speed automatic transmission (5F31J)
S401	engine, rear, RH side – 2.5L Duratec–VE (VE6)
S401	engine, rear, RH side – 1.8L Duratec–SCi (MI4), before 04/2004
S401	engine, rear, RH side – 1.8L Duratec–SCi (MI4), as of 04/2004
S401	engine, rear, RH side – 1.8L Duratec–SCi (MI4)
S401	engine, rear, RH side – 1.8/2.0L Duratec–HE (MI4)
S401	engine, rear, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S401	engine, rear, RH side – 3.0L Duratec–SE (VE6)
S401	engine, rear, RH side – 3.0L Duratec–ST (VE6), before 04/2004
S401	engine, rear, RH side – 3.0L Duratec–ST (VE6), as of 04/2004
S401	engine, rear, RH side – Petrol engines, except 1.8L Duratec–SCi (MI4)
S401	engine, rear, RH side – G106, 1.8L Duratec–SCi (MI4), before 04/2004
S401	engine, rear, RH side – G106, 1.8L Duratec–SCi (MI4), as of 04/2004
S401	engine, rear, RH side – G106, 1.8/2.0L Duratec–HE (MI4)
S401	engine, rear, RH side – G106, 2.5L Duratec–VE (VE6)
S401	engine, rear, RH side – G106, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S401	engine, rear, RH side – 1.8/2.0L Duratec–HE (MI4)
S403	engine, top – 1.8L Duratec–SCi (MI4)
S403	engine, top – G106, 1.8L Duratec–SCi (MI4), before 04/2004
S403	engine, top – G106, 1.8L Duratec–SCi (MI4), as of 04/2004
S405	engine – 1.8L Duratec–SCi (MI4)
S409	engine compartment – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S411	engine compartment, front, centre – 1.8L Duratec–SCi (MI4)
S411	engine compartment, front, centre – 1.8/2.0L Duratec–HE (MI4)
S411	engine compartment, front, centre – 2.5L Duratec–VE (VE6),manual transmission
S411	engine compartment, front, centre – 2.5L Duratec–VE (VE6),automatic transmission
S411	engine compartment, front, centre – 3.0L Duratec–SE (VE6)
S411	engine compartment, front, centre – 3.0L Duratec–ST (VE6)
S411	engine compartment, front, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S411	engine compartment, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S411	engine compartment, front, centre – 2.5L Duratec–VE (VE6)
S411	engine compartment, front, centre – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S411	engine compartment, front, centre – 5–speed automatic transmission (5F31J), 4–door model/5–door model
S411	engine compartment, front, centre – 5–speed automatic transmission (5F31J), wagon

S411	engine compartment, front, centre – 5–speed automatic transmission (5F31J)
S411	engine compartment, front, centre – Petrol engines, except 1.8L Duratec–SCi (MI4)
S411	engine compartment, front, centre – Diesel engines
S411	engine compartment, front, centre – G102, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)
S411	engine compartment, front, centre – G102, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)
S411	engine compartment, front, centre – G102, 3.0L Duratec–SE (VE6)
S411	engine compartment, front, centre – G102, Diesel engines
S411	engine compartment, front, centre – 1.8/2.0L Duratec–HE (MI4)
S431	engine compartment, front, centre – 1.8L Duratec–SCi (MI4)
S431	engine compartment, front, centre – 1.8/2.0L Duratec–HE (MI4)
S431	engine compartment, front, centre – 2.5L Duratec–VE (VE6),automatic transmission
S431	engine compartment, front, centre – 3.0L Duratec–ST (VE6)
S433	engine compartment, front, centre – 1.8L Duratec–SCi (MI4)
S433	engine compartment, front, centre – 1.8/2.0L Duratec–HE (MI4)
S433	engine compartment, front, centre – 2.5L Duratec–VE (VE6),manual transmission
S433	engine compartment, front, centre – 2.5L Duratec–VE (VE6),automatic transmission
S433	engine compartment, front, centre – 3.0L Duratec–SE (VE6)
S433	engine compartment, front, centre – 3.0L Duratec–ST (VE6)
S433	engine compartment, front, centre – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S433	engine compartment, front, centre – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S435	engine – 1.8/2.0L Duratec–HE (MI4)
S435	engine – 1.8L Duratec–SCi (MI4)
S435	engine – 2.5L Duratec–VE (VE6)
S435	engine – F40, 1.8L Duratec–SCi (MI4)
S435	engine – F40, 1.8/2.0L Duratec–HE (MI4)
S437	in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)
S437	in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)
S437	in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),manual transmission
S437	in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission
S437	in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)
S437	in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)
S437	in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S437	in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S437	in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)
S437	in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S437	in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), before 04/2004
S437	in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), as of 04/2004
S437	in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4), automatic transmission
S437	in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004
S437	in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004
S437	in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III
S437	in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV
S437	in Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E)
S437	in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J)
S437	in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)

S437	in Battery Junction Box (BJB) – Diesel engines
S437	in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)
S437	in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)
S439	engine – 1.8L Duratec–SCi (MI4), before 04/2004
S439	engine – 1.8L Duratec–SCi (MI4), as of 04/2004
S439	engine – 1.8L Duratec–SCi (MI4)
S439	engine – 1.8/2.0L Duratec–HE (MI4)
S439	engine – 1.8/2.0L Duratec–HE (MI4), automatic transmission
S439	engine – 2.5L Duratec–VE (VE6)
S439	engine – 3.0L Duratec–SE (VE6)
S439	engine – 3.0L Duratec–ST (VE6), before 04/2004
S439	engine – 4–speed automatic transmission (CD4E)
S439	engine – Petrol engines
S439	engine – F42, 1.8L Duratec–SCi (MI4)
S439	engine – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission
S439	engine – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission
S439	engine – F42, 2.5L Duratec–VE (VE6)
S439	engine – F42, 3.0L Duratec–SE (VE6)
S439	engine – F42, 3.0L Duratec–ST (VE6), before 04/2004
S439	engine – 1.8/2.0L Duratec–HE (MI4)
S441	engine – 1.8/2.0L Duratec–HE (MI4)
S441	engine – 1.8L Duratec–SCi (MI4)
S441	engine – 1.8L Duratec–SCi (MI4), before 04/2004
S441	engine – 1.8L Duratec–SCi (MI4), as of 04/2004
S441	engine – F67, 1.8L Duratec–SCi (MI4)
S441	engine – F67, 1.8/2.0L Duratec–HE (MI4)
S443	engine – 2.5L Duratec–VE (VE6)
S443	engine – 3.0L Duratec–SE (VE6)
S443	engine – 3.0L Duratec–ST (VE6), before 04/2004
S443	engine – 3.0L Duratec–ST (VE6), as of 04/2004
S443	engine – F37, 2.5L Duratec–VE (VE6)
S443	engine – F37, 3.0L Duratec–SE (VE6)
S443	engine – F37, 3.0L Duratec–ST (VE6), before 04/2004
S443	engine – F37, 3.0L Duratec–ST (VE6), as of 04/2004
S447	engine compartment – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III
S447	engine compartment – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV
S447	engine compartment – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S461	in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)
S461	in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)
S461	in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission
S461	in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)
S461	in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S461	in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S461	in Battery Junction Box (BJB) – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)
S461	in Battery Junction Box (BJB) – F8, Diesel engines
S461	in Battery Junction Box (BJB) – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)

S471	engine, rear, RH side – 1.8/2.0L Duratec–HE (MI4)
S473	engine compartment, LH side
S473	engine compartment, LH side – 1.8L Duratec–SCi (MI4)
S473	engine compartment, LH side – Ignition switch manual transmission
S475	engine – 1.8/2.0L Duratec–HE (MI4)
S475	engine – 2.5L Duratec–VE (VE6),manual transmission
S475	engine – 2.5L Duratec–VE (VE6),automatic transmission
S475	engine – 2.5L Duratec–VE (VE6)
S475	engine – 1.8L Duratec–SCi (MI4)
S475	engine – 1.8/2.0L Duratec–HE (MI4), manual transmission
S475	engine – 1.8/2.0L Duratec–HE (MI4), automatic transmission
S475	engine – 2.5L Duratec–VE (VE6), manual transmission
S475	engine – 3.0L Duratec–SE (VE6)
S475	engine – 3.0L Duratec–ST (VE6), before 04/2004
S475	engine – 3.0L Duratec–ST (VE6), as of 04/2004
S475	engine – 4–speed automatic transmission (CD4E), 4–door model/5–door model
S475	engine – 4–speed automatic transmission (CD4E), wagon
S475	engine – 4–speed automatic transmission (CD4E)
S475	engine – Petrol engines
S475	engine – 1.8/2.0L Duratec–HE (MI4)
S477	engine – 1.8L Duratec–SCi (MI4)
S479	engine – 1.8/2.0L Duratec–HE (MI4)
S479	engine – 1.8/2.0L Duratec–HE (MI4), automatic transmission
S479	engine – 4–speed automatic transmission (CD4E)
S481	engine – 1.8L Duratec–SCi (MI4)
S483	engine, rear, RH side – 2.5L Duratec–VE (VE6)
S483	engine, rear, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S483	engine, rear, RH side – 1.8L Duratec–SCi (MI4)
S483	engine, rear, RH side – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S485	engine – 2.5L Duratec–VE (VE6)
S485	engine – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S485	engine – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S487	engine, rear, RH side – 1.8/2.0L Duratec–HE (MI4)
S487	engine, rear, RH side – G106, 1.8/2.0L Duratec–HE (MI4)
S487	engine, rear, RH side – 1.8/2.0L Duratec–HE (MI4)
S489	engine, rear, RH side – 1.8/2.0L Duratec–HE (MI4)
S489	engine, rear, RH side – 2.5L Duratec–VE (VE6)
S489	engine, rear, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S491	engine, rear, RH side – 1.8/2.0L Duratec–HE (MI4)
S491	engine, rear, RH side – 2.5L Duratec–VE (VE6)
S491	engine, rear, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S493	engine, rear, RH side – 2.5L Duratec–VE (VE6)
S493	engine, rear, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S495	engine – 1.8L Duratec–SCi (MI4)
S495	engine – 1.8L Duratec–SCi (MI4), before 04/2004
S495	engine – 1.8L Duratec–SCi (MI4), as of 04/2004
S497	engine compartment, LH side – 1.8L Duratec–SCi (MI4)
S499	engine – 1.8L Duratec–SCi (MI4)

S499	engine – Petrol engines
S510	in passenger's door – LHD
S510	in passenger's door – RHD
S510	in passenger's door
S510	in passenger's door – Front power windows, Passenger side
S510	in passenger's door – front and rear power windows, Passenger side front
S510	in passenger's door – Heated rear window, Heated exterior mirrors
S510	in passenger's door – G200, RHD
S510	in passenger's door – G205, LHD
S512	in passenger's door – Front power windows, Passenger side
S512	in passenger's door – front and rear power windows, Passenger side front
S514	in passenger's door – Front power windows, Passenger side
S514	in passenger's door – front and rear power windows, Passenger side front
S516	in driver's door – LHD
S516	in driver's door – RHD
S516	in driver's door
S516	in driver's door – Front power windows, Driver side
S516	in driver's door – front and rear power windows, Driver side front
S516	in driver's door – front and rear power windows, LH rear door
S516	in driver's door – front and rear power windows, RH rear door
S516	in driver's door – Heated rear window, Heated exterior mirrors
S516	in driver's door – G200, LHD
S516	in driver's door – G205, RHD
S518	in liftgate – Stop Lamps, without trailer socket, 4–door model/5–door model
S518	in liftgate – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S518	in liftgate – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S518	in liftgate – Stop Lamps, without trailer socket, wagon
S518	in liftgate – Stop Lamps, with trailer socket, wagon, before 01/2004
S518	in liftgate – Stop Lamps, with trailer socket, wagon, as of 01/2004
S518	in liftgate – Licence plate lamps
S518	in liftgate
S518	in liftgate – Heated rear window, Heated exterior mirrors
S518	in liftgate – With rear window wiper
S518	in liftgate – G300, 5–door model/wagon
S520	in decklid – Licence plate lamps
S520	in decklid
S520	in decklid – G300, 4–door model
S530	in passenger's door – LHD
S530	in passenger's door – RHD
S530	in passenger's door – Front power windows, Passenger side
S530	in passenger's door – front and rear power windows, Passenger side front
S530	in passenger's door – F91, LHD
S530	in passenger's door – F91, RHD
S532	in driver's door – LHD
S532	in driver's door – RHD
S532	in driver's door – Front power windows, Driver side
S532	in driver's door – front and rear power windows, Driver side front
S532	in driver's door – F91, LHD
S532	in driver's door – F91, RHD
S601	engine – 2.5L Duratec–VE (VE6)

S601	engine – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S601	engine – G106, 2.5L Duratec–VE (VE6), 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S631	LH cylinder head – 2.5L Duratec–VE (VE6)
S631	LH cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S631	LH cylinder head – F40, 2.5L Duratec–VE (VE6)
S631	LH cylinder head – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S633	RH cylinder head – 2.5L Duratec–VE (VE6)
S633	RH cylinder head – F40, 2.5L Duratec–VE (VE6)
S635	engine, RH side – 2.5L Duratec–VE (VE6)
S635	engine, RH side – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S635	engine, RH side – F67, 2.5L Duratec–VE (VE6)
S635	engine, RH side – F67, 3.0L Duratec–SE (VE6)
S635	engine, RH side – F67, 3.0L Duratec–ST (VE6)
S637	engine – 1.8/2.0L Duratec–HE (MI4)
S637	engine – F40, 1.8/2.0L Duratec–HE (MI4)
S671	engine, RH side – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP
S675	LH cylinder head – 2.5L Duratec–VE (VE6),manual transmission
S675	LH cylinder head – 2.5L Duratec–VE (VE6),automatic transmission
S675	LH cylinder head – 3.0L Duratec–ST (VE6)
S675	LH cylinder head – 2.5L Duratec–VE (VE6)
S675	LH cylinder head – 3.0L Duratec–SE (VE6)
S675	LH cylinder head – 3.0L Duratec–ST (VE6), before 04/2004
S675	LH cylinder head – 3.0L Duratec–ST (VE6), as of 04/2004
S675	LH cylinder head – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)
S679	engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S681	engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S687	engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S687	engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004
S687	engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004
S689	engine – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S689	engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, manual transmission, before 08/2004
S689	engine – Data link connector, pins 6 and 14, 2.0L Duratorq–TDCi (Puma) Diesel, 2.2L Duratorq–TDCi (Puma) Diesel, manual transmission, as of 08/2004
S704	behind dash panel – DVD navigation system with touch screen
S704	behind dash panel – G201, with DVD navigation system with touch screen, before 04/2004
S709	behind dash panel – DVD navigation system with touch screen
S709	behind dash panel – G201, with DVD navigation system with touch screen, before 04/2004
S710	in roof panel, LH side, front – Stop Lamps, without trailer socket, 4–door model/5–door model
S710	in roof panel, LH side, front – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S710	in roof panel, LH side, front – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S710	in roof panel, LH side, front

S710	in roof panel, LH side, front – Auto–dimming interior mirror
S710	in roof panel, LH side, front – Petrol engines
S710	in roof panel, LH side, front – Diesel engines
S710	in roof panel, LH side, front – G200
S712	LH C–pillar – Valeo, wagon, before 01/2004
S712	LH C–pillar – Valeo, wagon, as of 01/2004
S712	LH C–pillar – Bosch, wagon
S712	LH C–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon
S712	LH C–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon
S712	LH C–pillar – Parking Lamps, without trailer socket, wagon, without autolamps
S712	LH C–pillar – Parking Lamps, without trailer socket, wagon, with autolamps
S712	LH C–pillar – Parking Lamps, with trailer socket, wagon, without autolamps
S712	LH C–pillar – Parking Lamps, with trailer socket, wagon, with autolamps
S712	LH C–pillar – Stop Lamps, without trailer socket, wagon
S712	LH C–pillar – Stop Lamps, with trailer socket, wagon, before 01/2004
S712	LH C–pillar – Stop Lamps, with trailer socket, wagon, as of 01/2004
S712	LH C–pillar – Reversing lamps, without trailer socket, wagon
S712	LH C–pillar – Reversing lamps, with trailer socket, wagon, before 01/2004
S712	LH C–pillar – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
S712	LH C–pillar – Fog lamps, without trailer socket, wagon
S712	LH C–pillar – Fog lamps, with trailer socket, wagon, before 01/2004
S712	LH C–pillar – Fog lamps, with trailer socket, wagon, as of 01/2004
S712	LH C–pillar – without trailer socket, wagon
S712	LH C–pillar – with trailer socket, wagon
S712	LH C–pillar – G300, without trailer socket, wagon
S712	LH C–pillar – G300, with trailer socket, wagon, before 01/2004
S712	LH C–pillar – G300, with trailer socket, wagon, as of 01/2004
S713	RH C–pillar – Turn Signal and Hazard Lamps, without trailer socket, wagon
S713	RH C–pillar – Turn Signal and Hazard Lamps, with trailer socket, wagon
S713	RH C–pillar – Parking Lamps, without trailer socket, wagon, without autolamps
S713	RH C–pillar – Parking Lamps, without trailer socket, wagon, with autolamps
S713	RH C–pillar – Parking Lamps, with trailer socket, wagon, without autolamps
S713	RH C–pillar – Parking Lamps, with trailer socket, wagon, with autolamps
S713	RH C–pillar – Stop Lamps, without trailer socket, wagon
S713	RH C–pillar – Stop Lamps, with trailer socket, wagon, before 01/2004
S713	RH C–pillar – Stop Lamps, with trailer socket, wagon, as of 01/2004
S713	RH C–pillar – Reversing lamps, without trailer socket, wagon
S713	RH C–pillar – Reversing lamps, with trailer socket, wagon, before 01/2004
S713	RH C–pillar – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
S713	RH C–pillar – Fog lamps, without trailer socket, wagon
S713	RH C–pillar – Fog lamps, with trailer socket, wagon, before 01/2004
S713	RH C–pillar – Fog lamps, with trailer socket, wagon, as of 01/2004
S713	RH C–pillar – without trailer socket, wagon
S713	RH C–pillar – with trailer socket, wagon
S713	RH C–pillar – G205
S714	under centre console
S714	under centre console – with heated rear seats
S714	under centre console – Cigar lighter

S714	under centre console – G204, before 04/2004
S714	under centre console – G204, as of 04/2004
S718	under centre console – with video system
S718	under centre console – DVD navigation system with touch screen – with video system
S720	behind dash panel – with external CD changer
S720	behind dash panel
S720	behind dash panel – DVD navigation system with touch screen
S722	dash panel, centre – with external CD changer
S722	dash panel, centre – with video system
S722	dash panel, centre
S722	dash panel, centre – DVD navigation system with touch screen
S724	behind dash panel – DVD navigation system with touch screen
S726	under centre console – with video system
S726	under centre console – DVD navigation system with touch screen – with video system
S728	dash panel, centre – DVD navigation system with touch screen – with video system
S732	roof, front – Autolamps
S732	roof, front – Auto–dimming interior mirror
S732	roof, front – with rain sensor
S732	roof, front – Petrol engines
S732	roof, front – Diesel engines
S732	roof, front – F91
S733	front of vehicle, front bumper – Fog lamps, without trailer socket, 4–door model/5–door model
S733	front of vehicle, front bumper – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S733	front of vehicle, front bumper – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S733	front of vehicle, front bumper – Fog lamps, without trailer socket, wagon
S733	front of vehicle, front bumper – Fog lamps, with trailer socket, wagon, before 01/2004
S733	front of vehicle, front bumper – Fog lamps, with trailer socket, wagon, as of 01/2004
S733	front of vehicle, front bumper – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model
S733	front of vehicle, front bumper – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model
S733	front of vehicle, front bumper – Light switch, Fog lamps, without trailer socket, wagon
S733	front of vehicle, front bumper – Light switch, Fog lamps, with trailer socket, wagon
S734	front of vehicle, front bumper – Fog lamps, without trailer socket, 4–door model/5–door model
S734	front of vehicle, front bumper – Fog lamps, without trailer socket, wagon
S734	front of vehicle, front bumper – G104
S750	in roof panel, LH side, front
S750	in roof panel, LH side, front – F99, 4–door model/5–door model
S750	in roof panel, LH side, front – F99, wagon
S754	behind dash panel – DVD navigation system with touch screen
S754	behind dash panel – F72, with external CD changer and/or video system
S770	under centre console – with video system
S770	under centre console – Data link connector, pins 3 and 11, with external CD changer or video system
S770	under centre console – Data link connector, pins 3 and 11, with external CD changer and video system

S770	under centre console – DVD navigation system with touch screen
S772	under centre console – with video system
S772	under centre console – Data link connector, pins 3 and 11, with external CD changer or video system
S772	under centre console – Data link connector, pins 3 and 11, with external CD changer and video system
S772	under centre console – DVD navigation system with touch screen
S774	behind dash panel – Data link connector, pins 3 and 11, with external CD changer and video system
S774	behind dash panel – DVD navigation system with touch screen
S776	behind dash panel – Data link connector, pins 3 and 11, with external CD changer and video system
S776	behind dash panel – DVD navigation system with touch screen
S778	behind dash panel – with external CD changer
S778	behind dash panel – Data link connector, pins 3 and 11, with external CD changer or video system
S778	behind dash panel – Data link connector, pins 3 and 11, with external CD changer and video system
S778	behind dash panel
S778	behind dash panel – DVD navigation system with touch screen
S780	behind dash panel – with external CD changer
S780	behind dash panel – Data link connector, pins 3 and 11, with external CD changer or video system
S780	behind dash panel – Data link connector, pins 3 and 11, with external CD changer and video system
S780	behind dash panel
S780	behind dash panel – DVD navigation system with touch screen
S782	in luggage compartment, LH side – DVD navigation system with touch screen
S784	behind dash panel – DVD navigation system with touch screen
S786	dash panel, centre – with external CD changer
S786	dash panel, centre – with video system
S786	dash panel, centre
S786	dash panel, centre – DVD navigation system with touch screen
S786	dash panel, centre – DVD navigation system with touch screen – with video system
S802	under dash panel – without external CD changer and video system
S802	under dash panel – with external CD changer and/or video system
S802	under dash panel – with external CD changer
S802	under dash panel – with video system
S802	under dash panel – Bluetooth voice control
S802	under dash panel – without DVD navigation system with touch screen
S802	under dash panel – with DVD navigation system with touch screen
S802	under dash panel
S802	under dash panel – DVD navigation system with touch screen
S802	under dash panel – G201, except DVD navigation system with touch screen, before 04/2004
S802	under dash panel – G201, except DVD navigation system with touch screen, as of 04/2004
S802	under dash panel – G201, with DVD navigation system with touch screen, before 04/2004
S804	under centre console
S810	in luggage compartment, LH side, behind luggage compartment lining – Trailer socket, before 01/2004

S810	in loading space, LH side, behind luggage compartment lining – Trailer socket, before 01/2004
S810	in luggage compartment, LH side, behind luggage compartment lining – Trailer socket, with 7–pin trailer socket, as of 01/2004
S810	in loading space, LH side, behind luggage compartment lining – Trailer socket, with 7–pin trailer socket, as of 01/2004
S810	in luggage compartment, LH side, behind luggage compartment lining – F74, before 01/2004
S810	in loading space, LH side, behind luggage compartment lining
S810	in loading space, LH side, behind luggage compartment lining – Trailer socket, with 13–pin trailer socket, as of 01/2004
S810	in loading space, LH side, behind luggage compartment lining – Trailer socket, with 13–pin trailer socket, as of 01/2004
S810	in loading space, LH side, behind luggage compartment lining – Trailer socket, with 13–pin trailer socket, as of 01/2004
S810	in luggage compartment, LH side, behind luggage compartment lining – F74, as of 01/2004, F201, with 7–pin trailer socket
S810	in loading space, LH side – F74, as of 01/2004, F200, F201, with 13–pin trailer socket
S811	in luggage compartment, LH side, behind luggage compartment lining – Valeo, 4–door model/5–door model, before 01/2004
S811	in luggage compartment, LH side, behind luggage compartment lining – Valeo, 4–door model/5–door model, as of 01/2004
S811	in luggage compartment, LH side, behind luggage compartment lining – Bosch, 4–door model/5–door model
S811	in luggage compartment, LH side, behind luggage compartment lining – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model
S811	in luggage compartment, LH side, behind luggage compartment lining – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps
S811	in luggage compartment, LH side, behind luggage compartment lining – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps
S811	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S811	in luggage compartment, LH side, behind luggage compartment lining – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S811	in luggage compartment, LH side, behind luggage compartment lining – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S811	in loading space, LH side, behind luggage compartment lining – Fog lamps, with trailer socket, wagon, before 01/2004
S811	in luggage compartment, LH side, behind luggage compartment lining – Trailer socket, before 01/2004
S811	in loading space, LH side, behind luggage compartment lining – Trailer socket, before 01/2004
S811	in luggage compartment, LH side, behind luggage compartment lining – with trailer socket, 4–door model/5–door model
S811	in luggage compartment, LH side, behind luggage compartment lining – G300, with trailer socket, 4–door model/5–door model, before 01/2004
S811	in luggage compartment, LH side, behind luggage compartment lining – G300, with trailer socket, 4–door model/5–door model, as of 01/2004
S811	in loading space, LH side, behind luggage compartment lining – G300, with trailer socket, wagon, before 01/2004

S815	vehicle rear end – Valeo
S816	vehicle rear end – Valeo
S850	under dash panel – DVD navigation system with touch screen
S850	under dash panel – F72, with external CD changer and/or video system
S872	behind dash panel – DVD navigation system with touch screen
S874	dash panel, centre – Bluetooth voice control
S874	dash panel, centre – Data link connector, pins 3 and 11, with voice control
S876	dash panel, centre – Bluetooth voice control
S876	dash panel, centre – Data link connector, pins 3 and 11, with voice control
S911	engine, top – 1.8L Duratec–SCi (MI4)
S911	engine, top – G109
S931	engine compartment, near Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel
S931	engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model
S931	engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon
S931	engine compartment, near Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, before 01/2004
S931	engine compartment, near Battery Junction Box (BJB) – Valeo, 4–door model/5–door model, as of 01/2004
S931	engine compartment, near Battery Junction Box (BJB) – Valeo, wagon, before 01/2004
S931	engine compartment, near Battery Junction Box (BJB) – Valeo, wagon, as of 01/2004
S931	engine compartment, near Battery Junction Box (BJB) – Bosch, 4–door model/5–door model
S931	engine compartment, near Battery Junction Box (BJB) – Bosch, wagon
S931	engine compartment, near Battery Junction Box (BJB) – Pre–equipment pack, Petrol engines
S931	engine compartment, near Battery Junction Box (BJB) – Pre–equipment pack, Diesel engines
S931	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, without trailer socket, 4–door model/5–door model
S931	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004
S931	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S931	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, without trailer socket, wagon
S931	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, before 01/2004
S931	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, with trailer socket, wagon, as of 01/2004
S931	engine compartment, near Battery Junction Box (BJB) – Petrol engines
S931	engine compartment, near Battery Junction Box (BJB) – Diesel engines
S931	engine compartment, near Battery Junction Box (BJB) – DVD navigation system with touch screen
S931	engine compartment, near Battery Junction Box (BJB) – Auto–dimming interior mirror
S931	engine compartment, near Battery Junction Box (BJB) – With rear window wiper
S933	engine compartment, near Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

S933	engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model
S933	engine compartment, near Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon
S933	engine compartment, near Battery Junction Box (BJB) – Pre–equipment pack, Petrol engines
S933	engine compartment, near Battery Junction Box (BJB) – Pre–equipment pack, Diesel engines
S933	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, without trailer socket, 4–door model/5–door model
S933	engine compartment, near Battery Junction Box (BJB) – Reversing lamps, without trailer socket, wagon
S933	engine compartment, near Battery Junction Box (BJB) – Petrol engines
S933	engine compartment, near Battery Junction Box (BJB) – Diesel engines
S933	engine compartment, near Battery Junction Box (BJB) – DVD navigation system with touch screen
S933	engine compartment, near Battery Junction Box (BJB) – Auto–dimming interior mirror
S933	engine compartment, near Battery Junction Box (BJB) – With rear window wiper
S933	engine compartment, near Battery Junction Box (BJB) – F78, F80
S935	engine compartment, rear – 1.8L Duratec–SCi (MI4)
S935	engine compartment, rear – F37, 1.8L Duratec–SCi (MI4)
S936	in luggage compartment, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S936	in loading space, LH side, behind luggage compartment lining – Stop Lamps, with trailer socket, wagon, as of 01/2004
S936	in luggage compartment, LH side, behind luggage compartment lining – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S936	in loading space, LH side, behind luggage compartment lining – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004
S936	in luggage compartment, LH side, behind luggage compartment lining – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004
S936	in loading space, LH side, behind luggage compartment lining – Fog lamps, with trailer socket, wagon, as of 01/2004
S936	in luggage compartment, LH side, behind luggage compartment lining – G304, with 13–pin trailer socket, as of 01/2004
S936	in loading space, LH side, behind luggage compartment lining – G304, with 13–pin trailer socket, as of 01/2004
S1006	engine bulkhead
S1006	engine bulkhead – with rain sensor
S1007	rear seats – with heated rear seats
S1007	rear seats – G200
S1008	rear seats – with heated rear seats
S1008	rear seats – G205
S1009	behind dash panel – without external CD changer and video system
S1009	behind dash panel – Data link connector, pins 3 and 11, without external CD changer and video system
S1010	front seat, LH – Heated front seats
S1010	front seat, LH – Climate controlled front seats
S1011	front seat, RH – Heated front seats
S1011	front seat, RH – Climate controlled front seats

S1012	front seat, LH – Heated front seats
S1012	front seat, LH – Climate controlled front seats
S1013	front seat, RH – Heated front seats
S1013	front seat, RH – Climate controlled front seats
S1014	front seat, LH – Heated front seats
S1014	front seat, LH – Climate controlled front seats
S1014	front seat, LH – G200
S1015	front seat, RH – Heated front seats
S1015	front seat, RH – Climate controlled front seats
S1015	front seat, RH – G205
S1016	front seat, LH – Heated front seats
S1016	front seat, LH – Climate controlled front seats
S1016	front seat, LH – G200
S1017	front seat, RH – Heated front seats
S1017	front seat, RH – Climate controlled front seats
S1017	front seat, RH – G205
S1018	front seat, LH – Heated front seats
S1018	front seat, LH – G200
S1019	front seat, RH – Heated front seats
S1019	front seat, RH – G205
S1020	front seat, LH – Climate controlled front seats
S1021	front seat, RH – Climate controlled front seats
S1022	front seat, LH – Climate controlled front seats
S1022	front seat, LH – G200
S1023	front seat, RH – Climate controlled front seats
S1023	front seat, RH – G205
S1024	front seat, LH – Climate controlled front seats
S1025	front seat, RH – Climate controlled front seats
S1026	front seat, LH – Climate controlled front seats
S1026	front seat, LH – G200
S1027	front seat, RH – Climate controlled front seats
S1027	front seat, RH – G205
S1028	vehicle rear end – Bosch
S1028	vehicle rear end – F92, as of 01/2004, with trailer socket, with parking aid
S1029	vehicle rear end – Bosch

Fuses — Section 700–06–00

	Location	Page/coordinates
F1	in Battery Junction Box (BJB) – before 08/2004	30 – C 5
F1	in Battery Junction Box (BJB) – Bosch 8.0	30 – C 5
F1	in Battery Junction Box (BJB) – F1, F2	30 – C 5
F1	in Battery Junction Box (BJB)	30 – C 5
F2	in Battery Junction Box (BJB) – F1, F2	30 – B 4
F2	in Battery Junction Box (BJB) – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model	30 – B 4
F2	in Battery Junction Box (BJB) – Light switch, Fog lamps, with trailer socket, wagon	30 – B 4
F2	in Battery Junction Box (BJB) – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model	30 – B 4
F2	in Battery Junction Box (BJB) – Light switch, Fog lamps, without trailer socket, wagon	30 – B 4
F2	in Battery Junction Box (BJB)	30 – B 4
F3	in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003	30 – C 4
F3	in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003	30 – C 4
F3	in Battery Junction Box (BJB) – Diesel engines, With electric coolant heater, before 12/2003	30 – C 4
F3	in Battery Junction Box (BJB) – F3, before 12/2003	30 – C 4
F3	in Battery Junction Box (BJB)	30 – C 4
F4	in Battery Junction Box (BJB) – F4, F5, F6	30 – B 4
F4	in Battery Junction Box (BJB) – Heated rear window, Heated exterior mirrors	30 – B 4
F4	in Battery Junction Box (BJB)	30 – B 4
F5	in Battery Junction Box (BJB) – Climate controlled front seats	30 – C 4
F5	in Battery Junction Box (BJB) – F4, F5, F6	30 – C 4
F5	in Battery Junction Box (BJB) – Heated front seats	30 – C 4
F5	in Battery Junction Box (BJB)	30 – C 4
F6	in Battery Junction Box (BJB) – EATC, as of 04/2004	30 – B 4
F6	in Battery Junction Box (BJB) – EATC, before 04/2004	30 – B 4
F6	in Battery Junction Box (BJB) – F4, F5, F6	30 – B 4
F6	in Battery Junction Box (BJB) – Manual A/C, before 04/2004	30 – B 4
F6	in Battery Junction Box (BJB)	30 – B 4
F7	in Battery Junction Box (BJB) – Cigar lighter	30 – C 3
F7	in Battery Junction Box (BJB) – EATC, as of 04/2004	30 – C 3
F7	in Battery Junction Box (BJB) – EATC, before 04/2004	30 – C 3
F7	in Battery Junction Box (BJB) – F7	30 – C 3
F7	in Battery Junction Box (BJB) – Headlamps, High beam, with high intensity discharge headlamps, with autolamps	30 – C 3
F7	in Battery Junction Box (BJB) – Headlamps, High beam, with high intensity discharge headlamps, without autolamps	30 – C 3
F7	in Battery Junction Box (BJB) – Headlamps, High beam, without high intensity discharge headlamps, with autolamps	30 – C 3
F7	in Battery Junction Box (BJB) – Headlamps, High beam, without high intensity discharge headlamps, without autolamps	30 – C 3
F7	in Battery Junction Box (BJB)	30 – C 3
F8	in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	30 – B 3

F8	in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	30 – B 3
F8	in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),automatic transmission	30 – B 3
F8	in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6),manual transmission	30 – B 3
F8	in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	30 – B 3
F8	in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6)	30 – B 3
F8	in Battery Junction Box (BJB) – Diesel engines	30 – B 3
F8	in Battery Junction Box (BJB) – F8, 2.5L Duratec–VE (VE6), 3.0L Duratec–ST (VE6)	30 – B 3
F8	in Battery Junction Box (BJB) – F8, 3.0L Duratec–SE (VE6)	30 – B 3
F8	in Battery Junction Box (BJB) – F8, Diesel engines	30 – B 3
F8	in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	30 – B 3
F9	in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	30 – C 3
F9	in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	30 – C 3
F9	in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), as of 04/2004	30 – C 3
F9	in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), before 04/2004	30 – C 3
F9	in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	30 – C 3
F9	in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV	30 – C 3
F9	in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	30 – C 3
F9	in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III	30 – C 3
F9	in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6)	30 – C 3
F9	in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	30 – C 3
F9	in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	30 – C 3
F9	in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004	30 – C 3
F9	in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004	30 – C 3
F9	in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J)	30 – C 3
F9	in Battery Junction Box (BJB) – Diesel engines	30 – C 3
F9	in Battery Junction Box (BJB) – F9	30 – C 3
F9	in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)	30 – C 3
F9	in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	30 – C 3
F9	in Battery Junction Box (BJB)	30 – C 3
F10	in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4)	30 – B 2
F10	in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4)	30 – B 2
F10	in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6)	30 – B 2
F10	in Battery Junction Box (BJB) – F10, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4)	30 – B 2
F10	in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	30 – B 2
F11	in Battery Junction Box (BJB) – F11, F13, F15	30 – C 5
F11	in Battery Junction Box (BJB) – Heated windshield	30 – C 5
F11	in Battery Junction Box (BJB)	30 – C 5
F13	in Battery Junction Box (BJB) – F11, F13, F15	31 – C 5
F13	in Battery Junction Box (BJB) – Heated windshield	31 – C 5
F13	in Battery Junction Box (BJB)	31 – C 5
F15	in Battery Junction Box (BJB) – F11, F13, F15	31 – C 4
F15	in Battery Junction Box (BJB) – Heated windshield	31 – C 4
F15	in Battery Junction Box (BJB)	31 – C 4
F16	in Battery Junction Box (BJB) – F16	31 – B 4
F16	in Battery Junction Box (BJB) – Headlamp Levelling, with high intensity discharge headlamps	31 – B 4

F16 in Battery Junction Box (BJB) – Headlamp Levelling, without high intensity discharge headlamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – With high intensity discharge headlamps . . . . . 31 – B 4
F16 in Battery Junction Box (BJB) – Without high intensity discharge headlamps . . . . . 31 – B 4
F17 in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J) . . . . . 31 – C 4
F17 in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 31 – C 4
F17 in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J), wagon . . . . . 31 – C 4
F17 in Battery Junction Box (BJB) – Diesel engines . . . . . 31 – C 4
F17 in Battery Junction Box (BJB) – F17 . . . . . 31 – C 4
F17 in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 31 – C 4
F18 in Battery Junction Box (BJB) – F18 . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Headlamp Levelling, with high intensity discharge headlamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Headlamp Levelling, without high intensity discharge headlamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 31 – B 3

F18 in Battery Junction Box (BJB) – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – With high intensity discharge headlamps . . . . . 31 – B 3
F18 in Battery Junction Box (BJB) – Without high intensity discharge headlamps . . . . . 31 – B 3
F20 in Battery Junction Box (BJB) – before 08/2004 . . . . . 30 – B 4
F20 in Battery Junction Box (BJB) – Bosch 8.0 . . . . . 30 – B 4
F20 in Battery Junction Box (BJB) – F20, F21 . . . . . 30 – D 5
F20 in Battery Junction Box (BJB) . . . . . 30 – D 5
F21 in Battery Junction Box (BJB) – Autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – F20, F21 . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Licence plate lamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Light switch, with autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Light switch, without autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Parking Lamps, with trailer socket, wagon, with autolamps 30 – D 4
F21 in Battery Junction Box (BJB) – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – with autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – with daytime running lamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – With high intensity discharge headlamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – with high intensity discharge headlamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – with trailer socket, 4–door model/5–door model . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – with trailer socket, wagon . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – without daytime running lamps, without autolamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – Without high intensity discharge headlamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – without high intensity discharge headlamps . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – without trailer socket, 4–door model/5–door model . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) – without trailer socket, wagon . . . . . 30 – D 4
F21 in Battery Junction Box (BJB) . . . . . 30 – D 4
F22 in Battery Junction Box (BJB) – F22, F23, Diesel engines . . . . . 30 – E 4
F22 in Battery Junction Box (BJB) – F22, F23, petrol engines . . . . . 30 – E 4
F22 in Battery Junction Box (BJB) – With rear window wiper, with headlamp washer . . . . . 30 – E 4
F22 in Battery Junction Box (BJB) – Without rear window wiper, with headlamp washer . . . . . 30 – E 4
F22 in Battery Junction Box (BJB) . . . . . 30 – E 4

F23 in Battery Junction Box (BJB) – Diesel engines, with fuel fired heater . . . . . 30 – D 4
F23 in Battery Junction Box (BJB) – Diesel engines, with fuel fired heater, as of 08/2004 . . . . 30 – D 4
F23 in Battery Junction Box (BJB) – F22, F23, Diesel engines . . . . . 30 – D 4
F23 in Battery Junction Box (BJB) – F22, F23, petrol engines . . . . . 30 – D 4
F23 in Battery Junction Box (BJB) . . . . . 30 – D 4
F24 in Battery Junction Box (BJB) – F24, F25 . . . . . 30 – D 4
F24 in Battery Junction Box (BJB) – Heated rear window, Heated exterior mirrors . . . . . 30 – D 4
F24 in Battery Junction Box (BJB) – Heated windshield . . . . . 30 – D 4
F24 in Battery Junction Box (BJB) – LHD . . . . . 30 – D 4
F24 in Battery Junction Box (BJB) – RHD . . . . . 30 – D 4
F24 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps . . . . . 30 – D 4
F24 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 30 – D 4
F24 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps, with trailer socket, wagon 30 – D 4
F24 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 30 – D 4
F24 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps, without trailer socket, wagon 30 – D 4
F24 in Battery Junction Box (BJB) . . . . . 30 – D 4
F25 in Battery Junction Box (BJB) – F24, F25 . . . . . 30 – D 4
F25 in Battery Junction Box (BJB) – Heated rear window, Heated exterior mirrors . . . . . 30 – D 4
F25 in Battery Junction Box (BJB) – Heated windshield . . . . . 30 – D 4
F25 in Battery Junction Box (BJB) – LHD . . . . . 30 – D 4
F25 in Battery Junction Box (BJB) – RHD . . . . . 30 – D 4
F25 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps . . . . . 30 – D 4
F25 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps, with trailer socket, 4–door model/5–door model . . . . . 30 – D 4
F25 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps, with trailer socket, wagon 30 – D 4
F25 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps, without trailer socket, 4–door model/5–door model . . . . . 30 – D 4
F25 in Battery Junction Box (BJB) – Turn Signal and Hazard Lamps, without trailer socket, wagon 30 – D 4
F25 in Battery Junction Box (BJB) . . . . . 30 – D 4
F26 in Battery Junction Box (BJB) – F26 . . . . . 30 – E 4
F26 in Battery Junction Box (BJB) – Heated windshield . . . . . 30 – E 4
F26 in Battery Junction Box (BJB) . . . . . 30 – E 4
F27 in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 30 – D 3
F27 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 30 – D 3
F27 in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 30 – D 3
F27 in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 30 – D 3
F27 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 30 – D 3
F27 in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 30 – D 3
F27 in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 30 – D 3
F27 in Battery Junction Box (BJB) – F27 . . . . . 30 – D 3
F27 in Battery Junction Box (BJB) – F27, 3.0L Duratec–SE (VE6) . . . . . 30 – D 3
F27 in Battery Junction Box (BJB) . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – F28, F29 . . . . . 30 – D 3

F28 in Battery Junction Box (BJB) – Ignition switch automatic transmission . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – Ignition switch manual transmission . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – Light switch, with autolamps . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – Light switch, without autolamps . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – with autolamps . . . . . 30 – D 3
F28 in Battery Junction Box (BJB) – without daytime running lamps, without autolamps . . . . . 30 – D 3
F29 in Battery Junction Box (BJB) – F28, F29 . . . . . 31 – B 2
F29 in Battery Junction Box (BJB) . . . . . 31 – B 2
F30 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 31 – B 2
F30 in Battery Junction Box (BJB) – Diesel engines . . . . . 31 – B 2
F30 in Battery Junction Box (BJB) – except 3.0L Duratec–SE (VE6), except 3.0L Duratec–ST (VE6) . . . . . 31 – B 2
F30 in Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines . . . . . 31 – B 2
F30 in Battery Junction Box (BJB) – F30, F31, F32, Petrol engines . . . . . 31 – B 2
F30 in Battery Junction Box (BJB) . . . . . 31 – B 2
F31 in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 31 – B 2
F31 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 31 – B 2
F31 in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 31 – B 2
F31 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 31 – B 2
F31 in Battery Junction Box (BJB) – Diesel engines . . . . . 31 – B 2
F31 in Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines . . . . . 31 – B 2
F31 in Battery Junction Box (BJB) – F30, F31, F32, Petrol engines . . . . . 31 – B 2
F31 in Battery Junction Box (BJB) – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 31 – B 2
F31 in Battery Junction Box (BJB) . . . . . 31 – B 2
F32 in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – 5–speed automatic transmission (5F31J) . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – F30, F31, F32, Petrol engines . . . . . 31 – C 1
F32 in Battery Junction Box (BJB) – Petrol engines . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . . . 31 – C 1

F33 in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – Diesel engines . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – F30, F31, F32, F33, Diesel engines . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – F33, 1.8L Duratec–SCi (MI4) . . . . . 31 – C 1
F33 in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 31 – C 1
F37 in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – F37, 1.8/2.0L Duratec–HE (MI4) . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – F37, 1.8L Duratec–SCi (MI4) . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – F37, 2.5L Duratec–VE (VE6) . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – F37, 3.0L Duratec–SE (VE6) . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – F37, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – F37, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 30 – D 3
F37 in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 30 – D 3
F40 in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – Diesel engines . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – F40, 1.8/2.0L Duratec–HE (MI4) . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – F40, 1.8L Duratec–SCi (MI4) . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – F40, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – F40, 2.5L Duratec–VE (VE6) . . . . . 30 – D 2
F40 in Battery Junction Box (BJB) – F40, 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . 30 – D 2
F40 in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 30 – D 2
F41 in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . . . 30 – D 2
F41 in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 30 – D 2
F41 in Battery Junction Box (BJB) – Diesel engines . . . . . 30 – D 2
F41 in Battery Junction Box (BJB) – F41, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 30 – D 2
F42 in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 30 – D 1

F42 in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 2.5L Duratec–VE (VE6) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – 4–speed automatic transmission (CD4E) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – Diesel engines . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – F42, 1.8/2.0L Duratec–HE (MI4), automatic transmission 30 – D 1
F42 in Battery Junction Box (BJB) – F42, 1.8/2.0L Duratec–HE (MI4), manual transmission . 30 – D 1
F42 in Battery Junction Box (BJB) – F42, 1.8L Duratec–SCi (MI4) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – F42, 2.5L Duratec–VE (VE6) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – F42, 3.0L Duratec–SE (VE6) . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – F42, 3.0L Duratec–ST (VE6), as of 04/2004 . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – F42, 3.0L Duratec–ST (VE6), before 04/2004 . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – F42, Diesel engines . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – Petrol engines . . . . . 30 – D 1
F42 in Battery Junction Box (BJB) – Petrol engines, except 3.0L Duratec–SE (VE6) . . . . . 30 – D 1
F60 in Central Junction Box (CJB) – F60 . . . . . 34 – C 4
F60 in Central Junction Box (CJB) – F7 . . . . . 34 – C 4
F60 in Central Junction Box (CJB) – front and rear power windows, Driver side front . . . . . 34 – C 4
F60 in Central Junction Box (CJB) – front and rear power windows, LH rear door . . . . . 34 – C 4
F60 in Central Junction Box (CJB) – front and rear power windows, Passenger side front . . . . 34 – C 4
F60 in Central Junction Box (CJB) – Front power windows, Driver side . . . . . 34 – C 4
F60 in Central Junction Box (CJB) – Front power windows, Passenger side . . . . . 34 – C 4
F60 in Central Junction Box (CJB) . . . . . 34 – C 4
F61 in Central Junction Box (CJB) – F61 . . . . . 34 – C 5
F61 in Central Junction Box (CJB) – F7 . . . . . 34 – C 5
F61 in Central Junction Box (CJB) – front and rear power windows, Driver side front . . . . . 34 – C 5
F61 in Central Junction Box (CJB) – front and rear power windows, Passenger side front . . . . 34 – C 5
F61 in Central Junction Box (CJB) – front and rear power windows, RH rear door . . . . . 34 – C 5
F61 in Central Junction Box (CJB) – Front power windows, Driver side . . . . . 34 – C 5
F61 in Central Junction Box (CJB) – Front power windows, Passenger side . . . . . 34 – C 5
F61 in Central Junction Box (CJB) . . . . . 34 – C 5
F62 in Central Junction Box (CJB) – F62 . . . . . 34 – C 4
F62 in Central Junction Box (CJB) – Fog lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 34 – C 4
F62 in Central Junction Box (CJB) – Fog lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 34 – C 4
F62 in Central Junction Box (CJB) – Fog lamps, with trailer socket, wagon, as of 01/2004 . . . . 34 – C 4
F62 in Central Junction Box (CJB) – Fog lamps, with trailer socket, wagon, before 01/2004 . . 34 – C 4
F62 in Central Junction Box (CJB) – Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 34 – C 4
F62 in Central Junction Box (CJB) – Fog lamps, without trailer socket, wagon . . . . . 34 – C 4
F62 in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, 4–door model/5–door model . . . . . 34 – C 4
F62 in Central Junction Box (CJB) – Light switch, Fog lamps, with trailer socket, wagon . . . . 34 – C 4

F62 in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, 4–door model/5–door model . . . . . 34 – C 4
F62 in Central Junction Box (CJB) – Light switch, Fog lamps, without trailer socket, wagon . . 34 – C 4
F62 in Central Junction Box (CJB) . . . . . 34 – C 4
F63 in Central Junction Box (CJB) – F63, 4–door model/5–door model . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – F63, wagon . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Headlamp Levelling, without high intensity discharge headlamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Light switch, with autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Light switch, without autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Parking Lamps, with trailer socket, wagon, with autolamps 34 – C 5
F63 in Central Junction Box (CJB) – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – with autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – with daytime running lamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – with trailer socket, 4–door model/5–door model . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – with trailer socket, wagon . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – without daytime running lamps, without autolamps . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – without trailer socket, 4–door model/5–door model . . . . . 34 – C 5
F63 in Central Junction Box (CJB) – without trailer socket, wagon . . . . . 34 – C 5
F63 in Central Junction Box (CJB) . . . . . 34 – C 5
F64 in Central Junction Box (CJB) – F64, with trailer socket, 4–door model/5–door model . . . 34 – D 4
F64 in Central Junction Box (CJB) – F64, with trailer socket, wagon . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – F64, without trailer socket, 4–door model/5–door model . 34 – D 4
F64 in Central Junction Box (CJB) – F64, without trailer socket, wagon . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – Headlamp Levelling, without high intensity discharge headlamps . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – Light switch, with autolamps . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – Light switch, without autolamps . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – Parking Lamps, with trailer socket, 4–door model/5–door model, with autolamps . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – Parking Lamps, with trailer socket, 4–door model/5–door model, without autolamps . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – Parking Lamps, with trailer socket, wagon, with autolamps 34 – D 4
F64 in Central Junction Box (CJB) – Parking Lamps, with trailer socket, wagon, without autolamps . . . . . 34 – D 4

F64 in Central Junction Box (CJB) – Parking Lamps, without trailer socket, 4–door model/5–door model, with autolamps . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – Parking Lamps, without trailer socket, 4–door model/5–door model, without autolamps . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – Parking Lamps, without trailer socket, wagon, with autolamps . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – Parking Lamps, without trailer socket, wagon, without autolamps . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – with trailer socket, 4–door model/5–door model . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – with trailer socket, wagon . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – without trailer socket, 4–door model/5–door model . . . . . 34 – D 4
F64 in Central Junction Box (CJB) – without trailer socket, wagon . . . . . 34 – D 4
F65 in Central Junction Box (CJB) – Climate controlled front seats . . . . . 34 – D 5
F65 in Central Junction Box (CJB) – EATC, as of 04/2004 . . . . . 34 – D 5
F65 in Central Junction Box (CJB) – EATC, before 04/2004 . . . . . 34 – D 5
F65 in Central Junction Box (CJB) – F65, F66 . . . . . 34 – D 5
F65 in Central Junction Box (CJB) – F7 . . . . . 34 – D 5
F65 in Central Junction Box (CJB) – Heated front seats . . . . . 34 – D 5
F65 in Central Junction Box (CJB) – Manual A/C, before 04/2004 . . . . . 34 – D 5
F65 in Central Junction Box (CJB) – with EATC, as of 04/2004 . . . . . 34 – D 5
F65 in Central Junction Box (CJB) – with EATC, before 04/2004 . . . . . 34 – D 5
F65 in Central Junction Box (CJB) . . . . . 34 – D 5
F66 in Central Junction Box (CJB) – 2–way power seats . . . . . 34 – D 4
F66 in Central Junction Box (CJB) – 8–way power seats . . . . . 34 – D 4
F66 in Central Junction Box (CJB) – F65, F66 . . . . . 34 – D 4
F66 in Central Junction Box (CJB) – F7 . . . . . 34 – D 4
F66 in Central Junction Box (CJB) . . . . . 34 – D 4
F67 in Central Junction Box (CJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 2.0L Duratorq–TDCi (Puma) Diesel, stage IV . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 2.2L Duratorq–TDCi (Puma) Diesel . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 2.2L Duratorq–TDCi (Puma) Diesel, stage III, 2.0L Duratorq–TDCi (Puma) Diesel, stage III . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 2.5L Duratec–VE (VE6) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 3.0L Duratec–SE (VE6) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – Diesel engines . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – F67, 1.8/2.0L Duratec–HE (MI4) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – F67, 1.8L Duratec–SCi (MI4) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – F67, 2.5L Duratec–VE (VE6) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – F67, 3.0L Duratec–SE (VE6) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – F67, 3.0L Duratec–ST (VE6) . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – F67, Diesel engines . . . . . 34 – E 4
F67 in Central Junction Box (CJB) – Petrol engines . . . . . 34 – E 4

F67	in Central Junction Box (CJB) – Petrol engines, except 3.0L Duratec–SE (VE6)	34 – E 4
F67	in Central Junction Box (CJB)	34 – E 4
F68	in Central Junction Box (CJB) – Cigar lighter	34 – B 4
F68	in Central Junction Box (CJB) – F68	34 – B 4
F68	in Central Junction Box (CJB) – F7	34 – B 4
F68	in Central Junction Box (CJB)	34 – B 4
F69	in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), as of 04/2004	35 – C 4
F69	in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), before 04/2004	35 – C 4
F69	in Central Junction Box (CJB) – before 08/2004	35 – C 4
F69	in Central Junction Box (CJB) – Bosch 8.0	35 – C 4
F69	in Central Junction Box (CJB) – Diesel engines	35 – C 4
F69	in Central Junction Box (CJB) – DVD navigation system with touch screen	35 – C 4
F69	in Central Junction Box (CJB) – EATC, as of 04/2004	35 – C 4
F69	in Central Junction Box (CJB) – EATC, before 04/2004	35 – C 4
F69	in Central Junction Box (CJB) – F69, with external CD changer and/or video system	35 – C 4
F69	in Central Junction Box (CJB) – F69, without external CD changer and video system	35 – C 4
F69	in Central Junction Box (CJB) – Ignition switch automatic transmission	35 – C 4
F69	in Central Junction Box (CJB) – Ignition switch manual transmission	35 – C 4
F69	in Central Junction Box (CJB) – LHD	35 – C 4
F69	in Central Junction Box (CJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)	35 – C 4
F69	in Central Junction Box (CJB) – Pre–equipment pack	35 – C 4
F69	in Central Junction Box (CJB) – RHD	35 – C 4
F69	in Central Junction Box (CJB) – with EATC, as of 04/2004	35 – C 4
F69	in Central Junction Box (CJB) – with EATC, before 04/2004	35 – C 4
F69	in Central Junction Box (CJB) – with external CD changer and/or video system	35 – C 4
F69	in Central Junction Box (CJB) – without external CD changer and video system	35 – C 4
F69	in Central Junction Box (CJB)	35 – C 4
F70	in Central Junction Box (CJB) – F7	35 – C 5
F70	in Central Junction Box (CJB) – F70	35 – C 5
F70	in Central Junction Box (CJB) – Rear power point	35 – C 5
F70	in Central Junction Box (CJB)	35 – C 5
F71	in Central Junction Box (CJB) – Bluetooth voice control	35 – C 4
F71	in Central Junction Box (CJB) – DVD navigation system with touch screen	35 – C 4
F71	in Central Junction Box (CJB) – F7	35 – C 4
F71	in Central Junction Box (CJB) – F71, Bluetooth voice control	35 – C 4
F71	in Central Junction Box (CJB) – F71, except DVD navigation system with touch screen, with video system	35 – C 4
F71	in Central Junction Box (CJB) – F71, except DVD navigation system with touch screen, without video system	35 – C 4
F71	in Central Junction Box (CJB) – F71, with DVD navigation system with touch screen	35 – C 4
F71	in Central Junction Box (CJB) – with DVD navigation system with touch screen	35 – C 4
F71	in Central Junction Box (CJB) – with external CD changer	35 – C 4
F71	in Central Junction Box (CJB) – with external CD changer and/or video system	35 – C 4
F71	in Central Junction Box (CJB) – with video system	35 – C 4
F71	in Central Junction Box (CJB) – without DVD navigation system with touch screen	35 – C 4
F71	in Central Junction Box (CJB)	35 – C 4
F72	in Central Junction Box (CJB) – Data link connector, pins 4, 5 and 16	35 – C 5
F72	in Central Junction Box (CJB) – DVD navigation system with touch screen	35 – C 5
F72	in Central Junction Box (CJB) – F7	35 – C 5
F72	in Central Junction Box (CJB) – F72, with external CD changer and/or video system	35 – C 5

F72 in Central Junction Box (CJB) – F72, without external CD changer and video system .... 35 – C 5
F72 in Central Junction Box (CJB) – Pre–equipment pack ..... 35 – C 5
F72 in Central Junction Box (CJB) – with external CD changer and/or video system ..... 35 – C 5
F72 in Central Junction Box (CJB) – without external CD changer and video system ..... 35 – C 5
F72 in Central Junction Box (CJB) ..... 35 – C 5
F73 in Central Junction Box (CJB) – Diesel engines ..... 35 – D 4
F73 in Central Junction Box (CJB) – F7 ..... 35 – D 4
F73 in Central Junction Box (CJB) – F73 ..... 35 – D 4
F73 in Central Junction Box (CJB) – Petrol engines ..... 35 – D 4
F73 in Central Junction Box (CJB) ..... 35 – D 4
F74 in Central Junction Box (CJB) – F7 ..... 35 – D 5
F74 in Central Junction Box (CJB) – F74, as of 01/2004, F201, with 7–pin trailer socket ..... 35 – D 5
F74 in Central Junction Box (CJB) – F74, as of 01/2004, F200,F201 with 13–pin trailer socket 35 – D 5
F74 in Central Junction Box (CJB) – F74, before 01/2004 ..... 35 – D 5
F74 in Central Junction Box (CJB) – Trailer socket, with 7–pin trailer socket, as of 01/2004 .. 35 – D 5
F74 in Central Junction Box (CJB) – Trailer socket, before 01/2004 ..... 35 – D 5
F74 in Central Junction Box (CJB) – Trailer socket, with 13–pin trailer socket, as of 01/2004 . 35 – D 5
F74 in Central Junction Box (CJB) ..... 35 – D 5
F75 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 ..... 35 – E 4
F75 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), before 04/2004 ..... 35 – E 4
F75 in Central Junction Box (CJB) – 5–speed automatic transmission (5F31J) ..... 35 – E 4
F75 in Central Junction Box (CJB) – before 08/2004 ..... 35 – E 4
F75 in Central Junction Box (CJB) – Bosch 8.0 ..... 35 – E 4
F75 in Central Junction Box (CJB) – Diesel engines ..... 35 – E 4
F75 in Central Junction Box (CJB) – F7 ..... 35 – E 4
F75 in Central Junction Box (CJB) – F75, 5–speed automatic transmission (5F31J) ..... 35 – E 4
F75 in Central Junction Box (CJB) – F75, except 5–speed automatic transmission (5F31J) ... 35 – E 4
F75 in Central Junction Box (CJB) – LHD ..... 35 – E 4
F75 in Central Junction Box (CJB) – Petrol engines, except 1.8L Duratec–SCi (MI4) ..... 35 – E 4
F75 in Central Junction Box (CJB) – RHD ..... 35 – E 4
F75 in Central Junction Box (CJB) – With power folding mirrors ..... 35 – E 4
F75 in Central Junction Box (CJB) ..... 35 – E 4
F76 in Central Junction Box (CJB) – EATC, as of 04/2004 ..... 34 – D 5
F76 in Central Junction Box (CJB) – EATC, before 04/2004 ..... 34 – D 5
F76 in Central Junction Box (CJB) – F76, F77, as of 04/2004 ..... 34 – D 5
F76 in Central Junction Box (CJB) – F76, F77, before 04/2004 ..... 34 – D 5
F76 in Central Junction Box (CJB) – Manual A/C, before 04/2004 ..... 34 – D 5
F76 in Central Junction Box (CJB) – with EATC, as of 04/2004 ..... 34 – D 5
F76 in Central Junction Box (CJB) – with EATC, before 04/2004 ..... 34 – D 5
F76 in Central Junction Box (CJB) ..... 34 – D 5
F77 in Central Junction Box (CJB) – before 08/2004 ..... 34 – E 4
F77 in Central Junction Box (CJB) – Bosch 8.0 ..... 34 – E 4
F77 in Central Junction Box (CJB) – F76, F77, as of 04/2004 ..... 34 – E 4
F77 in Central Junction Box (CJB) – F76, F77, before 04/2004 ..... 34 – E 4
F77 in Central Junction Box (CJB) ..... 34 – E 4
F78 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 ..... 34 – E 3
F78 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), before 04/2004 ..... 34 – E 3
F78 in Central Junction Box (CJB) – before 08/2004 ..... 34 – E 3
F78 in Central Junction Box (CJB) – Bosch 8.0 ..... 34 – E 3
F78 in Central Junction Box (CJB) – Diesel engines ..... 34 – E 3

F78 in Central Junction Box (CJB) – F78, F80 . . . . . 34 – E 3
F78 in Central Junction Box (CJB) – LHD . . . . . 34 – E 3
F78 in Central Junction Box (CJB) – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 34 – E 3
F78 in Central Junction Box (CJB) – RHD . . . . . 34 – E 3
F78 in Central Junction Box (CJB) . . . . . 34 – E 3
F79 in Central Junction Box (CJB) . . . . . 34 – B 3
F80 in Central Junction Box (CJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – 4–speed automatic transmission (CD4E), 4–door model/5–door model . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – 4–speed automatic transmission (CD4E), wagon . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – 5–speed automatic transmission (5F31J), 4–door model/5–door model . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – 5–speed automatic transmission (5F31J), wagon . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Auto–dimming interior mirror . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Bosch, 4–door model/5–door model . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Bosch, wagon . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Diesel engines . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – DVD navigation system with touch screen . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – F78, F80 . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Petrol engines . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Pre–equipment pack, Diesel engines . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Pre–equipment pack, Petrol engines . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004 . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Reversing lamps, with trailer socket, 4–door model/5–door model, before 01/2004 . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Reversing lamps, with trailer socket, wagon, as of 01/2004 35 – B 3
F80 in Central Junction Box (CJB) – Reversing lamps, with trailer socket, wagon, before 01/2004 35 – B 3
F80 in Central Junction Box (CJB) – Reversing lamps, without trailer socket, 4–door model/5–door model . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Reversing lamps, without trailer socket, wagon . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Valeo, 4–door model/5–door model, as of 01/2004 . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Valeo, 4–door model/5–door model, before 01/2004 . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Valeo, wagon, as of 01/2004 . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – Valeo, wagon, before 01/2004 . . . . . 35 – B 3
F80 in Central Junction Box (CJB) – With rear window wiper . . . . . 35 – B 3
F80 in Central Junction Box (CJB) . . . . . 35 – B 3
F81 in Central Junction Box (CJB) – 1.8/2.0L Duratec–HE (MI4), automatic transmission . . . . 35 – C 2
F81 in Central Junction Box (CJB) – 4–speed automatic transmission (CD4E) . . . . . 35 – C 2
F81 in Central Junction Box (CJB) – 5–speed automatic transmission (5F31J) . . . . . 35 – C 2
F81 in Central Junction Box (CJB) – Climate controlled front seats . . . . . 35 – C 2
F81 in Central Junction Box (CJB) – EATC . . . . . 35 – C 2
F81 in Central Junction Box (CJB) – F81 . . . . . 35 – C 2
F81 in Central Junction Box (CJB) – Heated front seats . . . . . 35 – C 2
F81 in Central Junction Box (CJB) – with EATC, as of 04/2004 . . . . . 35 – C 2
F81 in Central Junction Box (CJB) – with EATC, before 04/2004 . . . . . 35 – C 2
F81 in Central Junction Box (CJB) – with heated rear seats . . . . . 35 – C 2


F81 in Central Junction Box (CJB) . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 1.8/2.0L Duratec–HE (MI4) . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4) . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), as of 04/2004 . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4), before 04/2004 . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, before 12/2003 . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 2.0L Duratorq–TDCi (Puma) Diesel, before 12/2003 . . . 35 – C 2
F82 in Central Junction Box (CJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 2.5L Duratec–VE (VE6) . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6) . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – 5–speed automatic transmission (5F31J) . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – Diesel engines . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – Diesel engines, With electric coolant heater, before 12/2003 35 – C 2
F82 in Central Junction Box (CJB) – Diesel engines, with fuel fired heater . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – Diesel engines, with fuel fired heater, as of 08/2004 . . . . 35 – C 2
F82 in Central Junction Box (CJB) – F82, Diesel engines . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – F82, Petrol engines . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – Petrol engines, except 1.8L Duratec–SCi (MI4) . . . . . 35 – C 2
F82 in Central Junction Box (CJB) – with windshield washer jet heater . . . . . 35 – C 2
F82 in Central Junction Box (CJB) . . . . . 35 – C 2
F83 in Central Junction Box (CJB) – F83 . . . . . 35 – C 2
F83 in Central Junction Box (CJB) – with heated rear seats . . . . . 35 – C 2
F83 in Central Junction Box (CJB) . . . . . 35 – C 2
F85 in Central Junction Box (CJB) – F85, F86 . . . . . 35 – D 1
F85 in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 35 – D 1
F85 in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 35 – D 1
F85 in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 35 – D 1
F85 in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 35 – D 1
F85 in Central Junction Box (CJB) . . . . . 35 – D 1
F86 in Central Junction Box (CJB) – F85, F86 . . . . . 35 – D 2
F86 in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 35 – D 2
F86 in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 35 – D 2
F86 in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 35 – D 2
F86 in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 35 – D 2
F86 in Central Junction Box (CJB) . . . . . 35 – D 2
F87 in Central Junction Box (CJB) . . . . . 35 – F 3
F88 in Central Junction Box (CJB) – Autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – F88, F89, with autolamps . . . . . 35 – E 3

F88 in Central Junction Box (CJB) – F88, F89, without autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Headlamp Levelling, without high intensity discharge headlamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, with autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Headlamps, High beam, with high intensity discharge headlamps, without autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, with autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Headlamps, High beam, without high intensity discharge headlamps, without autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Light switch, with autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Light switch, without autolamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – With high intensity discharge headlamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – with high intensity discharge headlamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – With rear window wiper, with headlamp washer . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Without high intensity discharge headlamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – without high intensity discharge headlamps . . . . . 35 – E 3
F88 in Central Junction Box (CJB) – Without rear window wiper, with headlamp washer . . . . . 35 – E 3
F88 in Central Junction Box (CJB) . . . . . 35 – E 3
F89 in Central Junction Box (CJB) – F88, F89, with autolamps . . . . . 34 – E 3
F89 in Central Junction Box (CJB) – F88, F89, without autolamps . . . . . 34 – E 3
F89 in Central Junction Box (CJB) . . . . . 34 – E 3
F90 in Central Junction Box (CJB) – F90 . . . . . 34 – B 2
F90 in Central Junction Box (CJB) – With rear window wiper . . . . . 34 – B 2
F90 in Central Junction Box (CJB) . . . . . 34 – B 2
F91 in Central Junction Box (CJB) – Auto–dimming interior mirror . . . . . 34 – B 2
F91 in Central Junction Box (CJB) – Autolamps . . . . . 34 – B 2
F91 in Central Junction Box (CJB) – Diesel engines . . . . . 34 – B 2
F91 in Central Junction Box (CJB) – F91 . . . . . 34 – B 2
F91 in Central Junction Box (CJB) – F91, LHD . . . . . 34 – B 2
F91 in Central Junction Box (CJB) – F91, RHD . . . . . 34 – B 2
F91 in Central Junction Box (CJB) – front and rear power windows, Driver side front . . . . . 34 – B 2
F91 in Central Junction Box (CJB) – front and rear power windows, LH rear door . . . . . 34 – B 2

F91	in Central Junction Box (CJB) – front and rear power windows, Passenger side front	34 – B 2
F91	in Central Junction Box (CJB) – front and rear power windows, RH rear door	34 – B 2
F91	in Central Junction Box (CJB) – Front power windows, Driver side	34 – B 2
F91	in Central Junction Box (CJB) – Front power windows, Passenger side	34 – B 2
F91	in Central Junction Box (CJB) – LHD	34 – B 2
F91	in Central Junction Box (CJB) – Petrol engines	34 – B 2
F91	in Central Junction Box (CJB) – RHD	34 – B 2
F91	in Central Junction Box (CJB) – with rain sensor	34 – B 2
F91	in Central Junction Box (CJB)	34 – B 2
F92	in Central Junction Box (CJB) – F92, as of 01/2004, with trailer socket, with parking aid	34 – C 2
F92	in Central Junction Box (CJB) – F92, before 01/2004	34 – C 2
F92	in Central Junction Box (CJB) – Trailer socket, before 01/2004	34 – C 2
F92	in Central Junction Box (CJB)	34 – C 2
F93	in Central Junction Box (CJB) – 1.8/2.0L Duratec–HE (MI4), automatic transmission	34 – C 1
F93	in Central Junction Box (CJB) – 1.8L Duratec–SCi (MI4)	34 – C 1
F93	in Central Junction Box (CJB) – 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP	34 – C 1
F93	in Central Junction Box (CJB) – 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel	34 – C 1
F93	in Central Junction Box (CJB) – 2.5L Duratec–VE (VE6)	34 – C 1
F93	in Central Junction Box (CJB) – 3.0L Duratec–SE (VE6), 3.0L Duratec–ST (VE6)	34 – C 1
F93	in Central Junction Box (CJB) – 4–speed automatic transmission (CD4E)	34 – C 1
F93	in Central Junction Box (CJB) – 5–speed automatic transmission (5F31J)	34 – C 1
F93	in Central Junction Box (CJB) – 5–speed automatic transmission (5F31J), Diesel engines	34 – C 1
F93	in Central Junction Box (CJB) – 5–speed automatic transmission (5F31J), Petrol engines	34 – C 1
F93	in Central Junction Box (CJB) – before 08/2004	34 – C 1
F93	in Central Junction Box (CJB) – Bosch 8.0	34 – C 1
F93	in Central Junction Box (CJB) – Diesel engines	34 – C 1
F93	in Central Junction Box (CJB) – EATC, as of 04/2004	34 – C 1
F93	in Central Junction Box (CJB) – EATC, before 04/2004	34 – C 1
F93	in Central Junction Box (CJB) – F93	34 – C 1
F93	in Central Junction Box (CJB) – Headlamp Levelling, with high intensity discharge headlamps	34 – C 1
F93	in Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps	34 – C 1
F93	in Central Junction Box (CJB) – Manual A/C, before 04/2004	34 – C 1
F93	in Central Junction Box (CJB) – Petrol engines, except 1.8L Duratec–SCi (MI4)	34 – C 1
F93	in Central Junction Box (CJB) – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	34 – C 1
F93	in Central Junction Box (CJB) – Stop Lamps, with trailer socket, 4–door model/5–door model, before 01/2004	34 – C 1
F93	in Central Junction Box (CJB) – Stop Lamps, with trailer socket, wagon, as of 01/2004	34 – C 1
F93	in Central Junction Box (CJB) – Stop Lamps, with trailer socket, wagon, before 01/2004	34 – C 1
F93	in Central Junction Box (CJB) – Stop Lamps, without trailer socket, 4–door model/5–door model	34 – C 1
F93	in Central Junction Box (CJB) – Stop Lamps, without trailer socket, wagon	34 – C 1
F93	in Central Junction Box (CJB) – With high intensity discharge headlamps	34 – C 1
F93	in Central Junction Box (CJB)	34 – C 1
F94	in Central Junction Box (CJB) – Autolamps	34 – D 2
F94	in Central Junction Box (CJB) – F94	34 – D 2
F94	in Central Junction Box (CJB) – with rain sensor	34 – D 2


F94 in Central Junction Box (CJB) – With rear window wiper . . . . . 34 – D 2
F94 in Central Junction Box (CJB) – With rear window wiper, with headlamp washer . . . . . 34 – D 2
F94 in Central Junction Box (CJB) – With rear window wiper, without headlamp washer . . . . . 34 – D 2
F94 in Central Junction Box (CJB) – with variable intermittent wipe . . . . . 34 – D 2
F94 in Central Junction Box (CJB) – Without rear window wiper, with headlamp washer . . . . . 34 – D 2
F94 in Central Junction Box (CJB) – Without rear window wiper, without headlamp washer . . 34 – D 2
F94 in Central Junction Box (CJB) . . . . . 34 – D 2
F95 in Central Junction Box (CJB) – F95, F96 . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps , without autolamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Headlamps, Low beam, with high intensity discharge headlamps, with autolamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Headlamps, Low beam, without high intensity discharge headlamps, with autolamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Headlamps, Low beam, without high intensity discharge headlamps, without autolamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – With high intensity discharge headlamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – with high intensity discharge headlamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – With rear window wiper, with headlamp washer . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Without high intensity discharge headlamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – without high intensity discharge headlamps . . . . . 34 – D 1
F95 in Central Junction Box (CJB) – Without rear window wiper, with headlamp washer . . . . . 34 – D 1
F95 in Central Junction Box (CJB) . . . . . 34 – D 1
F96 in Central Junction Box (CJB) – F95, F96 . . . . . 34 – D 2
F96 in Central Junction Box (CJB) – Light switch, with daytime running lamps, with high intensity discharge headlamps . . . . . 34 – D 2
F96 in Central Junction Box (CJB) – Light switch, with daytime running lamps, without high intensity discharge headlamps . . . . . 34 – D 2
F96 in Central Junction Box (CJB) – Light switch, without daytime running lamps, with high intensity discharge headlamps . . . . . 34 – D 2
F96 in Central Junction Box (CJB) – Light switch, without daytime running lamps, without high intensity discharge headlamps . . . . . 34 – D 2
F97 in Central Junction Box (CJB) – F97 . . . . . 34 – D 1
F97 in Central Junction Box (CJB) – Licence plate lamps . . . . . 34 – D 1
F97 in Central Junction Box (CJB) – Light switch, with autolamps . . . . . 34 – D 1
F97 in Central Junction Box (CJB) – Light switch, without autolamps . . . . . 34 – D 1
F97 in Central Junction Box (CJB) – with autolamps . . . . . 34 – D 1
F97 in Central Junction Box (CJB) – with daytime running lamps . . . . . 34 – D 1
F97 in Central Junction Box (CJB) – without daytime running lamps, without autolamps . . . . . 34 – D 1
F97 in Central Junction Box (CJB) . . . . . 34 – D 1
F98 in Central Junction Box (CJB) – F98 . . . . . 34 – E 2
F98 in Central Junction Box (CJB) – Heated rear window, Heated exterior mirrors . . . . . 34 – E 2

F98	in Central Junction Box (CJB)	34 – E 2
F99	in Central Junction Box (CJB) – F99, 4–door model/5–door model	34 – E 2
F99	in Central Junction Box (CJB) – F99, wagon	34 – E 2
F99	in Central Junction Box (CJB)	34 – E 2
F102	engine compartment – 3.0L Duratec–ST (VE6)	
F102	engine compartment – F102, 3.0L Duratec–ST (VE6)	
F102	engine compartment	
F200	in luggage compartment, rear, LH side – F200, F201	
F200	in loading space, rear, LH side – F200, F201	
F200	in loading space, rear, LH side – F74, as of 01/2004, F200,F201 with 13–pin trailer socket	
F200	in luggage compartment, rear, LH side – Reversing lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
F200	in loading space, rear, LH side – Reversing lamps, with trailer socket, wagon, 13–pin trailer socket, as of 01/2004	
F200	in loading space, rear, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004	
F201	in luggage compartment, rear, LH side – F200, F201	
F201	in loading space, rear, LH side – F200, F201	
F201	in luggage compartment, rear, LH side – F200, F201	
F201	in loading space, rear, LH side – F200, F201	
F201	in luggage compartment, rear, LH side – F74, as of 01/2004, F201, with 7–pin trailer socket	
F201	in luggage compartment, rear, LH side – Stop Lamps, with trailer socket, 4–door model/5–door model, as of 01/2004	
F201	in loading space, rear, LH side – Stop Lamps, with trailer socket, wagon, as of 01/2004	
F201	in luggage compartment, rear, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004	
F201	in loading space, rear, LH side – Trailer socket, with 7–pin trailer socket, as of 01/2004	
F201	in loading space, rear, LH side – Trailer socket, with 13–pin trailer socket, as of 01/2004	
F201	in loading space, rear, LH side – F74, as of 01/2004, F200,F201 with 13–pin trailer socket	

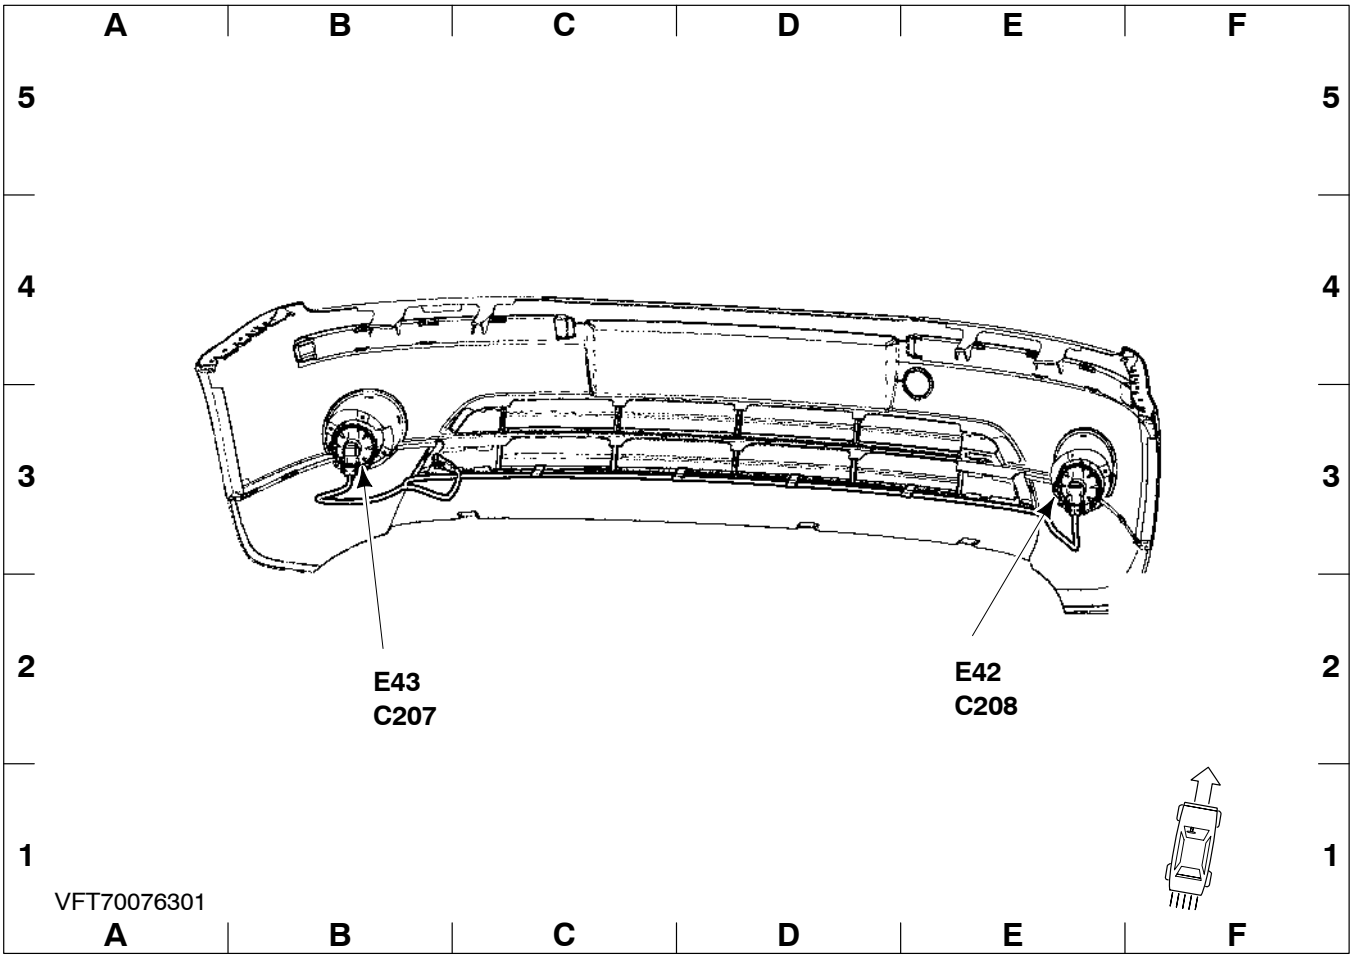


front bumper

C207 . . . . . B 2
C208 . . . . . E 2
E42 . . Fog lamp, RH side front . . . . . E 2
E43 . . Fog lamp, LH side front . . . . . B 2

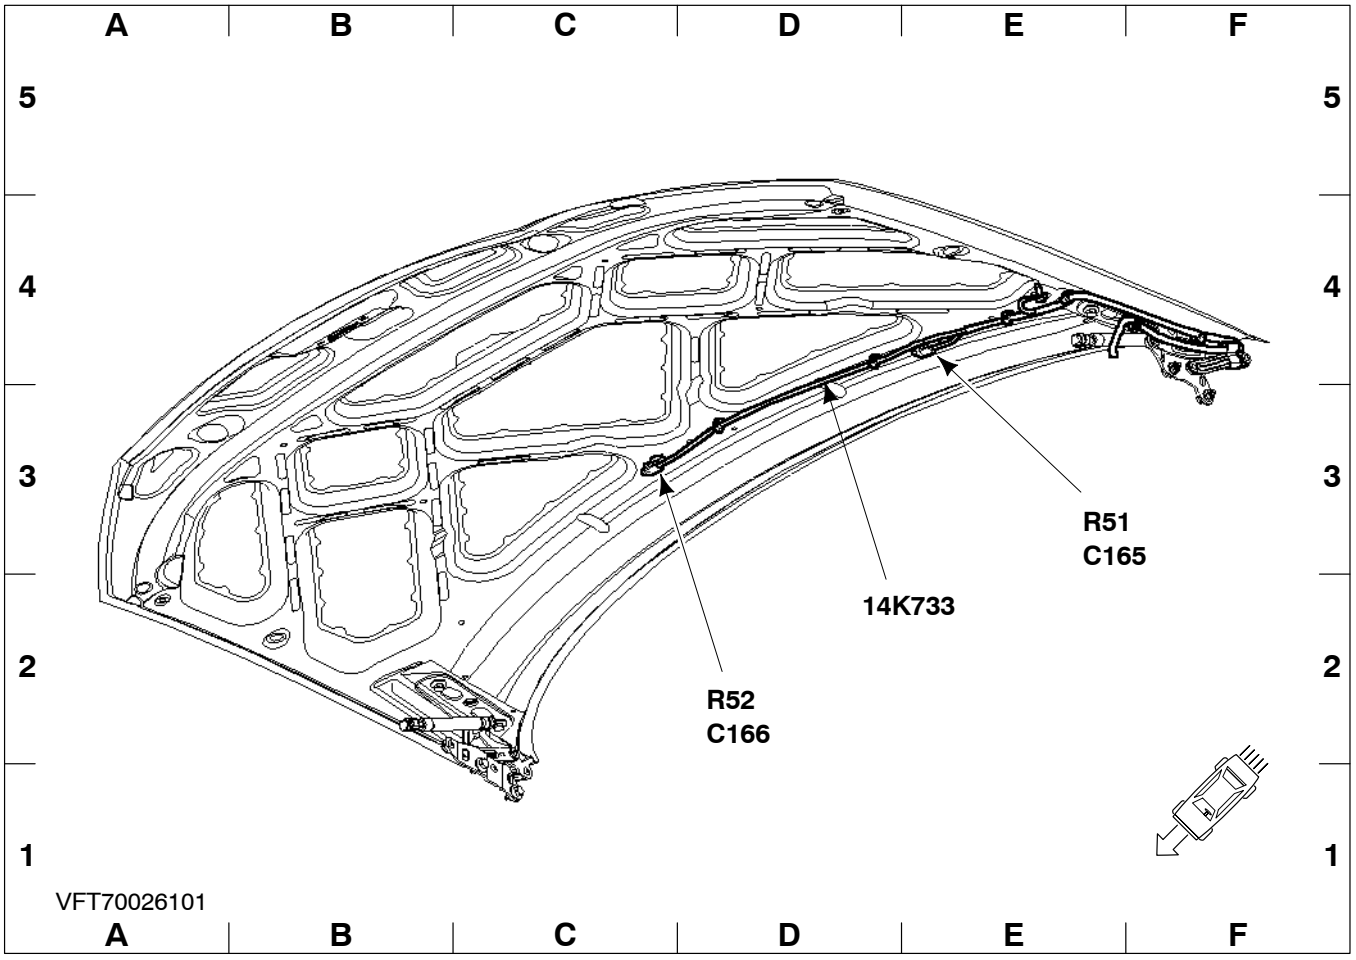


in hood

14K733 Wiring harness – Engine compartment . . E 2
C165 . . . . . E 3
C166 . . . . . D 2
R51 . . Windshield washer jet heater, LH side . . . E 3
R52 . . Windshield washer jet heater, RH side . . D 2

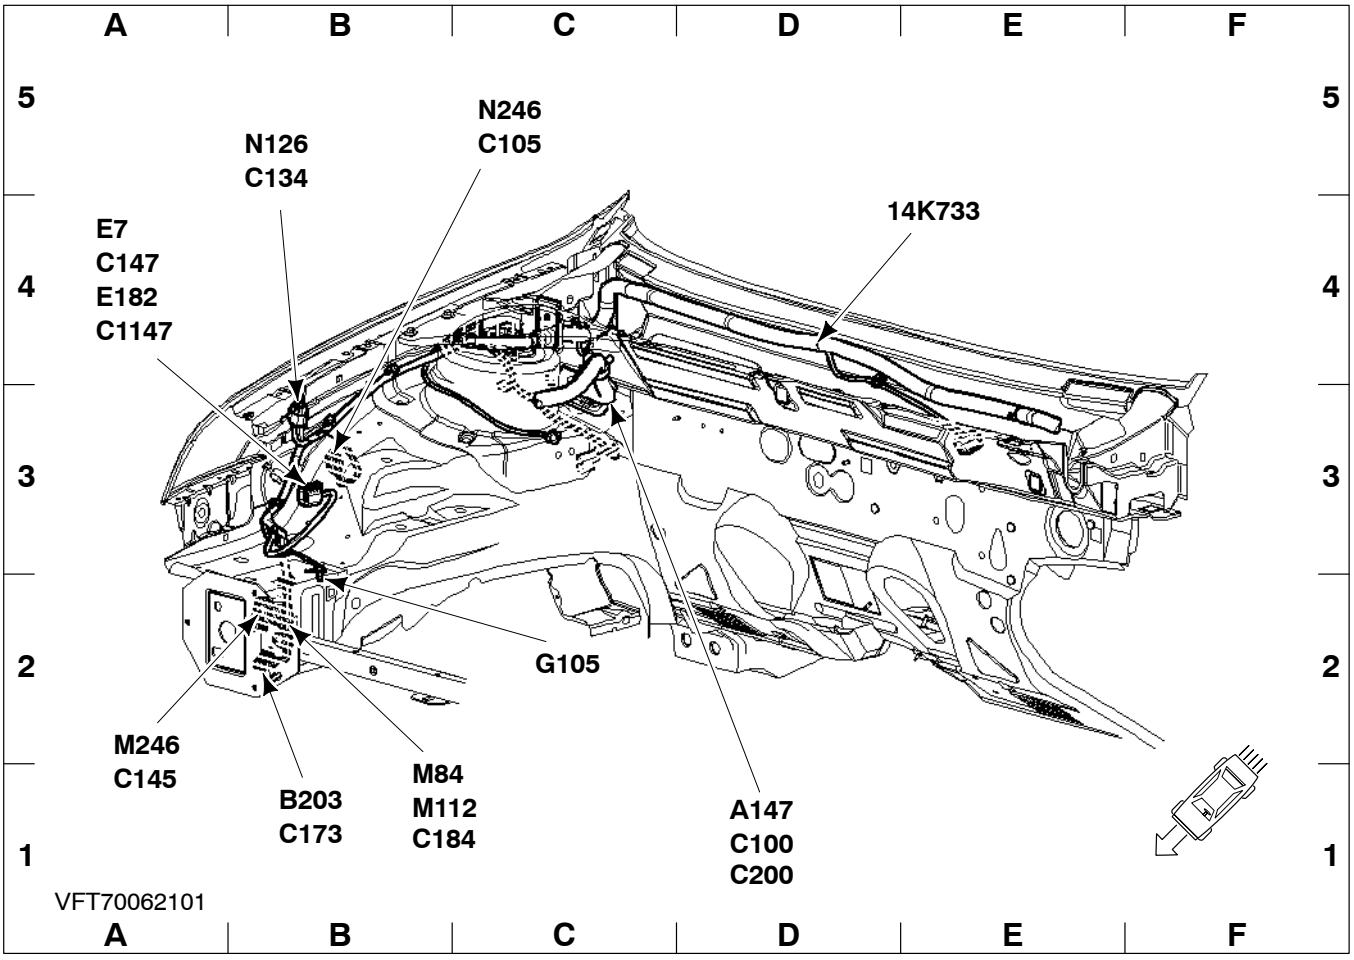


RH engine compartment, Petrol engines

14K733 Wiring harness – Engine compartment . . E 4
A147 . Powertrain control module (PCM) . . . . . D 1
B203 . Ambient air temperature sensor . . . . . B 1
C100 . . . . . D 1
C105 . . . . . C 5
C134 . . . . . B 5
C145 . . . . . A 1
C147 . . . . . A 4
C173 . . . . . B 1
C184 . . . . . B 1
C200 . . . . . D 1
C1147 . . . . . A 4
E7 . . . Headlamp, RH side . . . . . A 4
E182 . High intensity discharge headlamp, RH side . . . . . A 4
G105 . . . . . C 2
M84 . Washer pump motor, front and rear . . . . B 1
M112 Windshield washer pump motor . . . . . B 1
M246 Headlamp washer pump motor . . . . . A 2
N126 . A/C high–pressure switch . . . . . B 5
N246 . A/C low–pressure switch . . . . . C 5

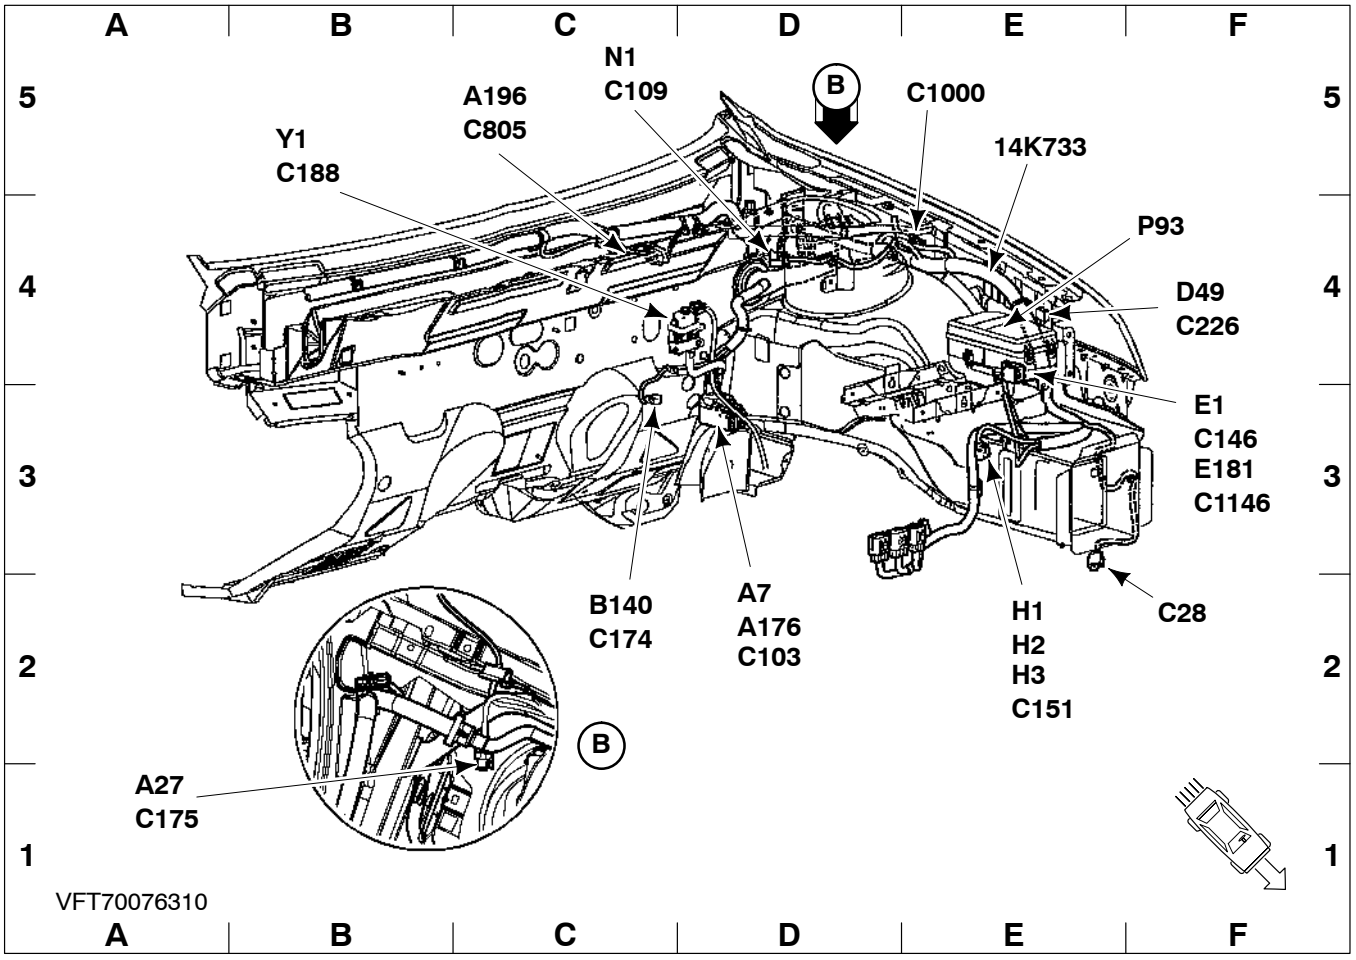


LH engine compartment, Petrol engines

14K733 Wiring harness – Engine compartment . . E 5
A7 . . . ABS module . . . . . D 2
A27 . . Speed control module . . . . . A 1
A176 . Electronic Stability Program (ESP) module . . . . . D 2
A196 . Battery backed sounder . . . . . C 5
B140 . Primary brake pressure sensor . . . . . C 2
C28 . . . . . F 2
C103 . . . . . D 2
C109 . . . . . C 5
C146 . . . . . F 3
C151 . . . . . E 2
C174 . . . . . C 2
C175 . . . . . A 1
C188 . . . . . B 5
C226 . . . . . F 4
C805 . . . . . C 5
C1000 . . . . . E 5
C1146 . . . . . F 3
D49 . . High intensity discharge headlamp calibration connector . . . . . F 4
E1 . . . Headlamp, LH side . . . . . F 3
E181 . High intensity discharge headlamp, LH side . . . . . F 3
H1 . . . Horn . . . . . E 2
H2 . . . Low pitch horn . . . . . E 2
H3 . . . High pitch horn . . . . . E 2
N1 . . . Brake fluid level switch . . . . . C 5
P93 . . Battery Junction Box (BJB) . . . . . F 4
Y1 . . . Canister purge solenoid valve . . . . . B 5

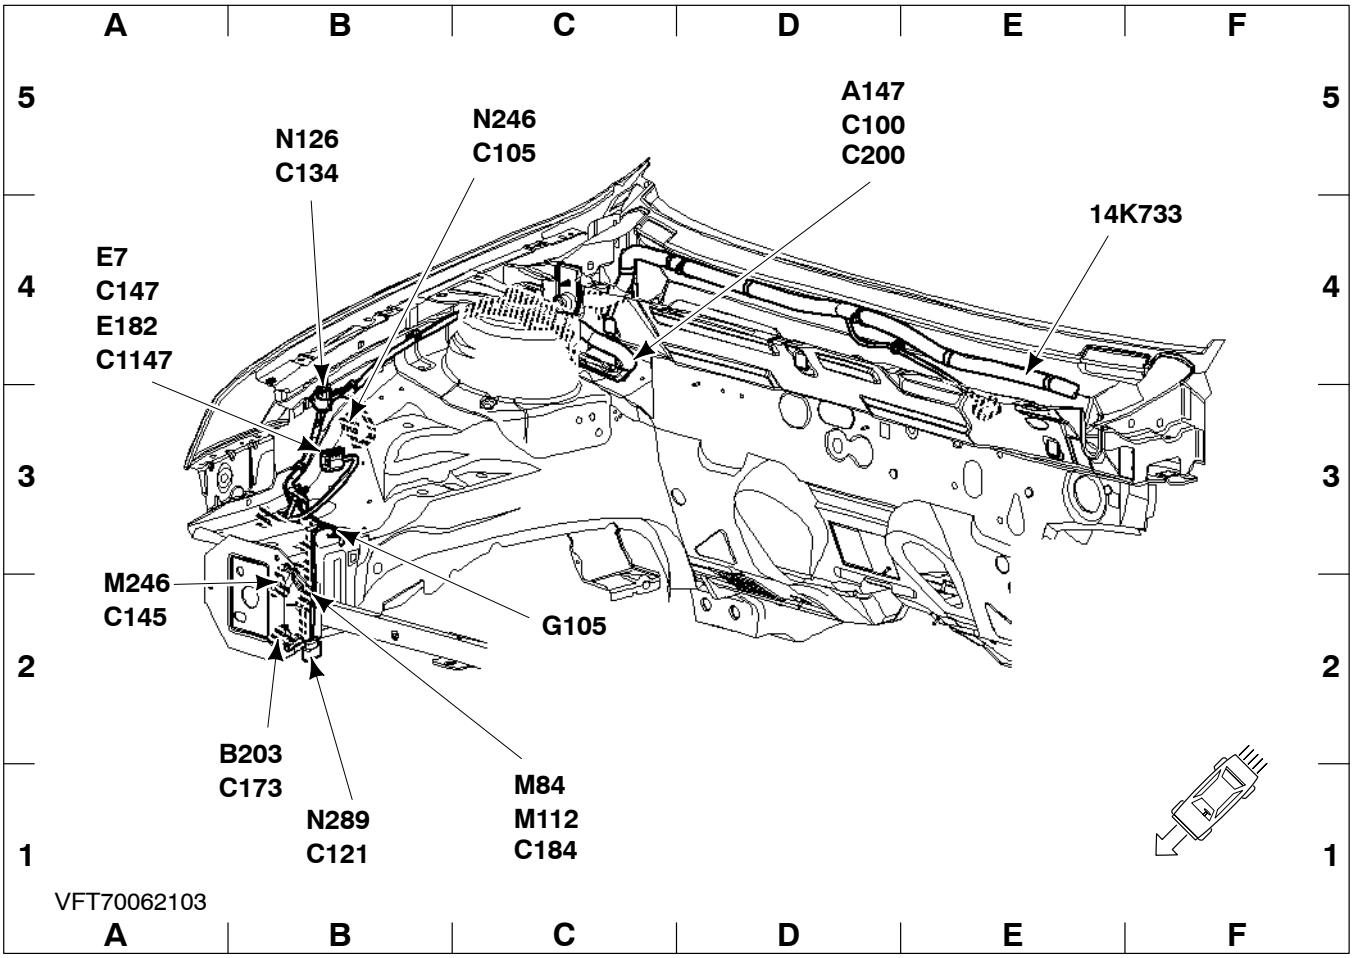


RH engine compartment, Diesel engines

14K733 Wiring harness – Engine compartment . . F 4
A147 . Powertrain control module (PCM) . . . . . D 5
B203 . Ambient air temperature sensor . . . . . B 2
C100 . . . . . D 5
C105 . . . . . C 5
C121 . . . . . B 1
C134 . . . . . B 5
C145 . . . . . A 2
C147 . . . . . A 4
C173 . . . . . B 1
C184 . . . . . C 1
C200 . . . . . D 5
C1147 . . . . . A 4
E7 . . . Headlamp, RH side . . . . . A 4
E182 . High intensity discharge headlamp, RH side . . . . . A 4
G105 . . . . . C 2
M84 . Washer pump motor, front and rear . . . . C 1
M112 Windshield washer pump motor . . . . . C 1
M246 Headlamp washer pump motor . . . . . A 2
N126 . A/C high–pressure switch . . . . . B 5
N246 . A/C low–pressure switch . . . . . C 5
N289 . Thermo switch, outside air temperature . B 1

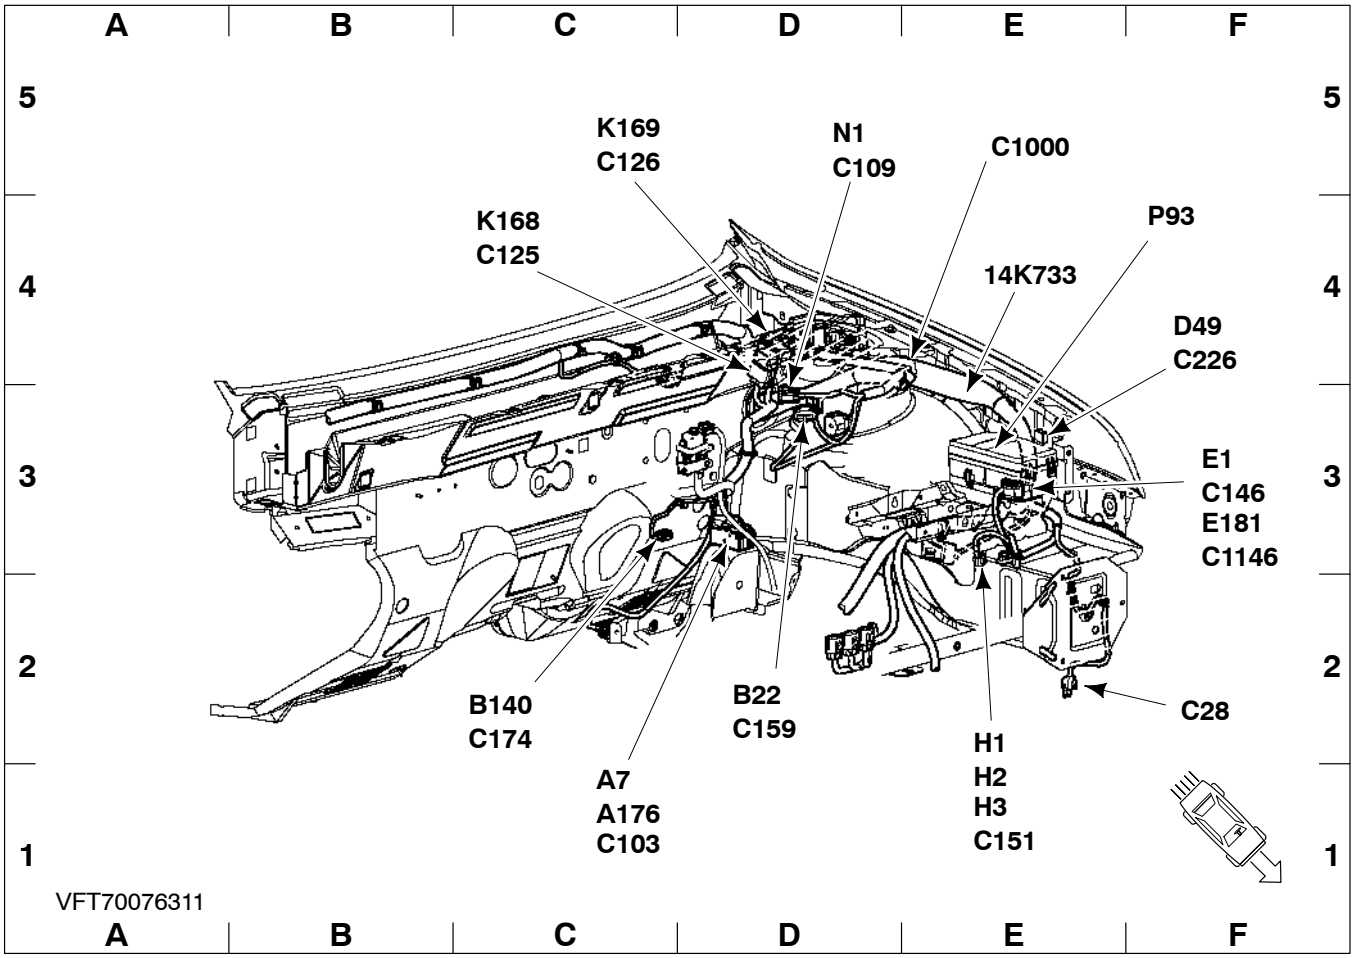


LH engine compartment, Diesel engines

14K733 Wiring harness – Engine compartment . . E 4
A7 . . . ABS module . . . . . C 1
A176 . Electronic Stability Program (ESP) module . . . . . C 1
B22 . . Mass Air Flow (MAF) sensor . . . . . D 2
B140 . Primary brake pressure sensor . . . . . C 2
C28 . . . . . F 2
C103 . . . . . C 1
C109 . . . . . D 5
C125 . . . . . C 4
C126 . . . . . C 5
C146 . . . . . F 3
C151 . . . . . E 1
C159 . . . . . D 2
C174 . . . . . C 2
C226 . . . . . F 4
C1000 . . . . . E 5
C1146 . . . . . F 3
D49 . . High intensity discharge headlamp calibration connector . . . . . F 4
E1 . . . Headlamp, LH side . . . . . F 3
E181 . High intensity discharge headlamp, LH side . . . . . F 3
H1 . . . Horn . . . . . E 2
H2 . . . Low pitch horn . . . . . E 1
H3 . . . High pitch horn . . . . . E 1
K168 . Auxiliary electric coolant heater relay 1 C 4
K169 . Auxiliary electric coolant heater relay 2 C 5
N1 . . . Brake fluid level switch . . . . . D 5
P93 . . Battery Junction Box (BJB) . . . . . F 4

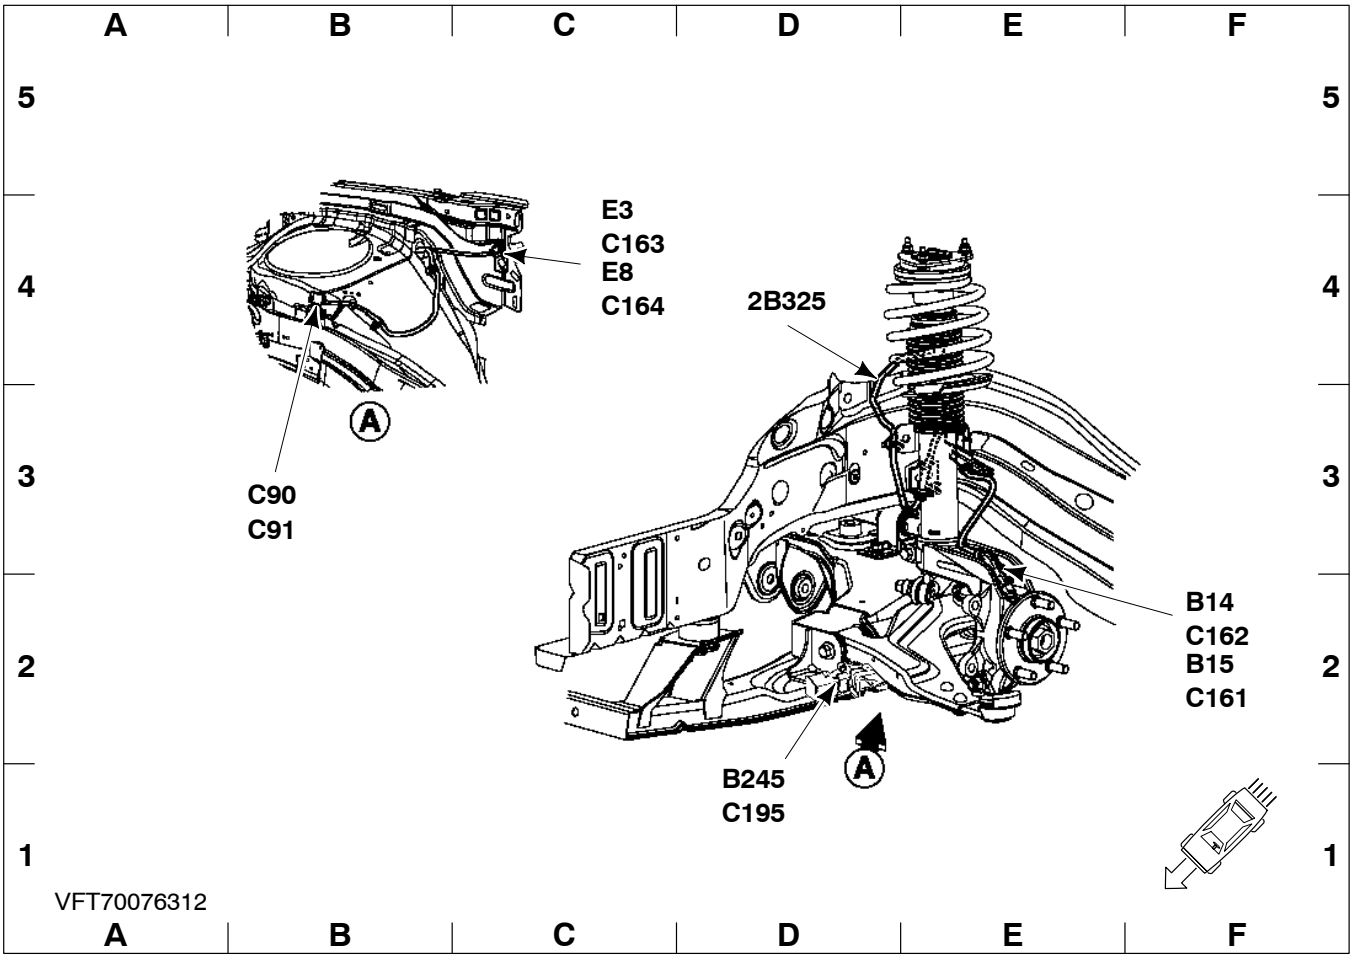


Front wheelwell

2B325 Wiring harness – Brake warning switch D 4
B14 . . Wheel speed sensor, RH side front . . . . . F 2
B15 . . Wheel speed sensor, LH side front . . . . . F 2
B245 . Headlamp levelling sensor, front . . . . . D 1
C90 . . . . . B 3
C91 . . . . . B 3
C161 . . . . . F 2
C162 . . . . . F 2
C163 . . . . . C 4
C164 . . . . . C 4
C195 . . . . . D 1
E3 . . . Turn signal lamp, LH front . . . . . C 4
E8 . . . Turn signal lamp, RH front . . . . . C 4

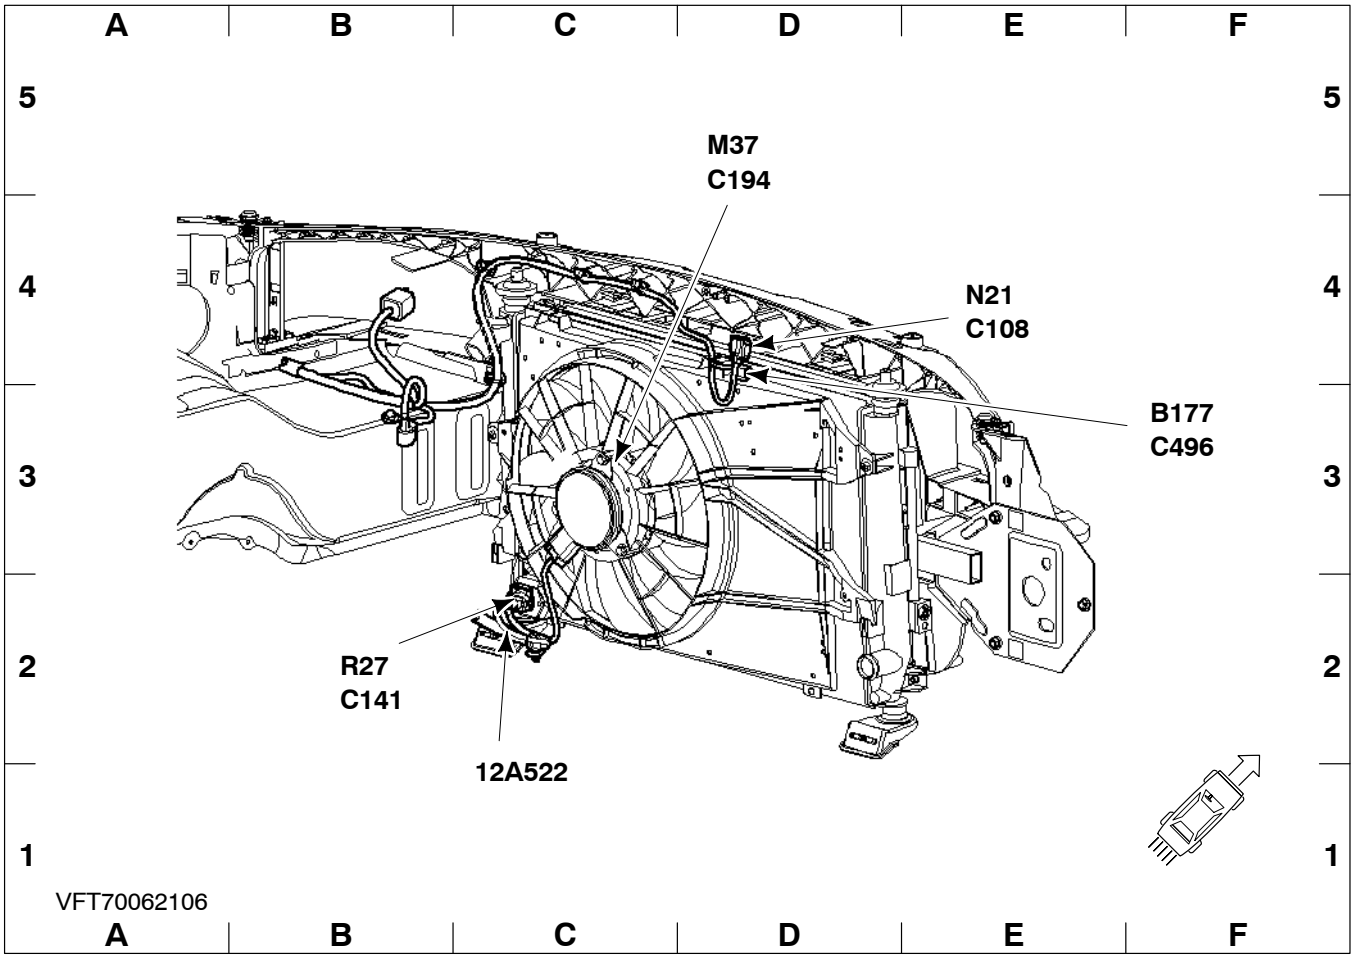


Cooling fan, 1.8L Duratec–SCi (MI4), 1.8/2.0L Duratec–HE (MI4) with manual transmission

12A522 Wiring harness – Engine control . . . . . C 1
B177 . Crash sensor . . . . . F 3
C108 . . . . . E 4
C141 . . . . . B 2
C194 . . . . . D 5
C496 . . . . . F 3
M37 . Cooling fan motor . . . . . D 5
N21 . . Engine compartment switch . . . . . E 4
R27 . . Cooling fan resistor . . . . . B 2

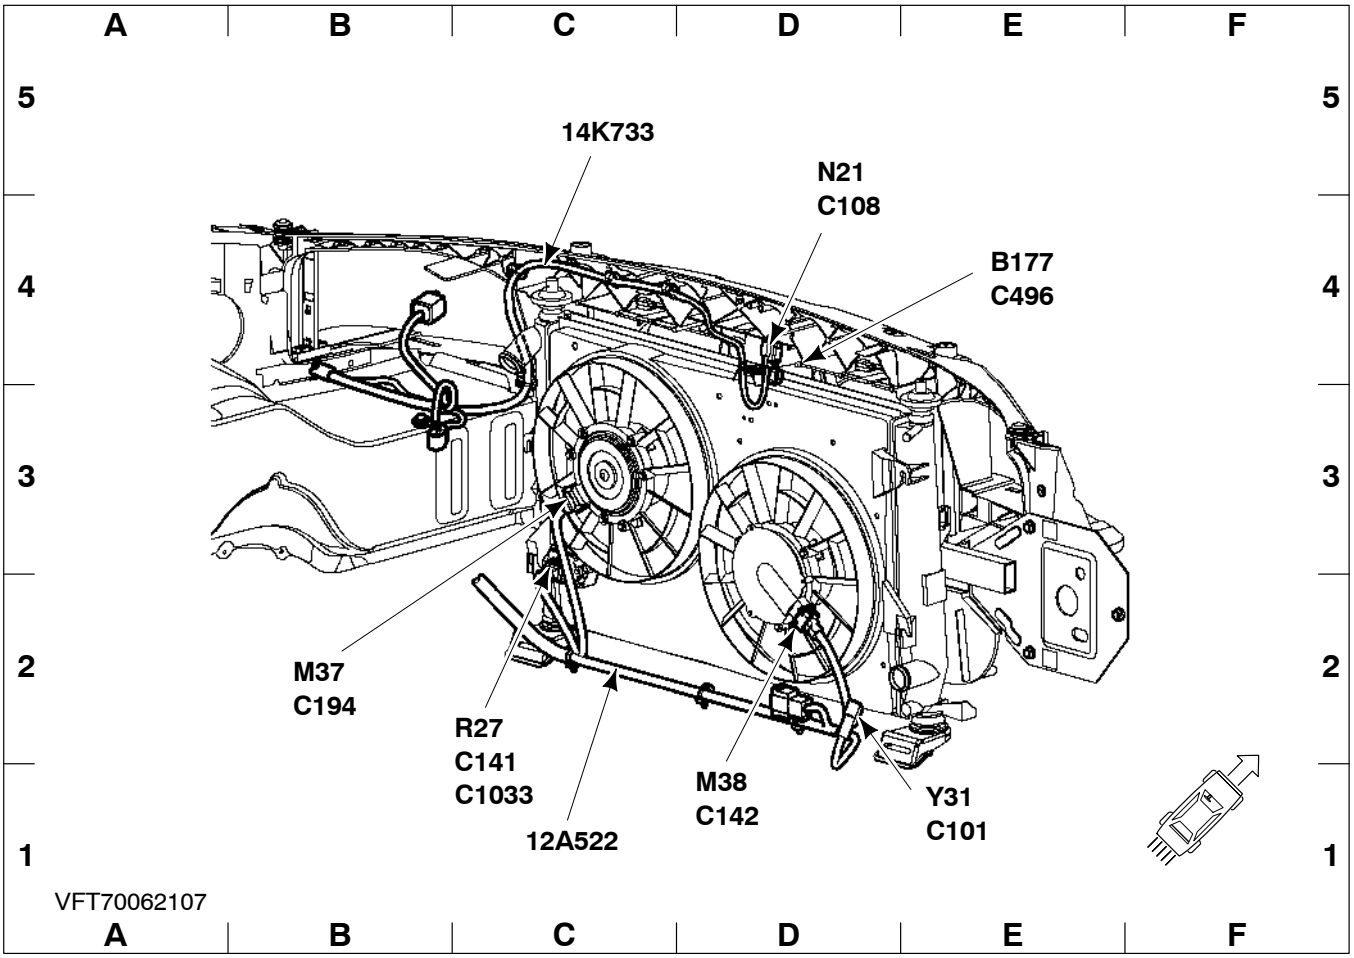


Cooling fan, 1.8/2.0L Duratec–HE (MI4) with automatic transmission, 2.5L Duratec–VE (VE6) with automatic transmission, 3.0L Duratec–ST (VE6)

12A522 Wiring harness – Engine control . . . . . C 1
14K733 Wiring harness – Engine compartment . C 5
B177 . Crash sensor . . . . . E 4
C101 . . . . . E 1
C108 . . . . . D 4
C141 . . . . . C 1
C142 . . . . . D 1
C194 . . . . . B 2
C496 . . . . . E 4
C1033 . . . . . C 1
M37 . Cooling fan motor . . . . . B 2
M38 . Second cooling fan motor . . . . . D 1
N21 . . Engine compartment switch . . . . . D 5
R27 . . Cooling fan resistor . . . . . C 2
Y31 . . A/C compressor clutch solenoid . . . . . E 1

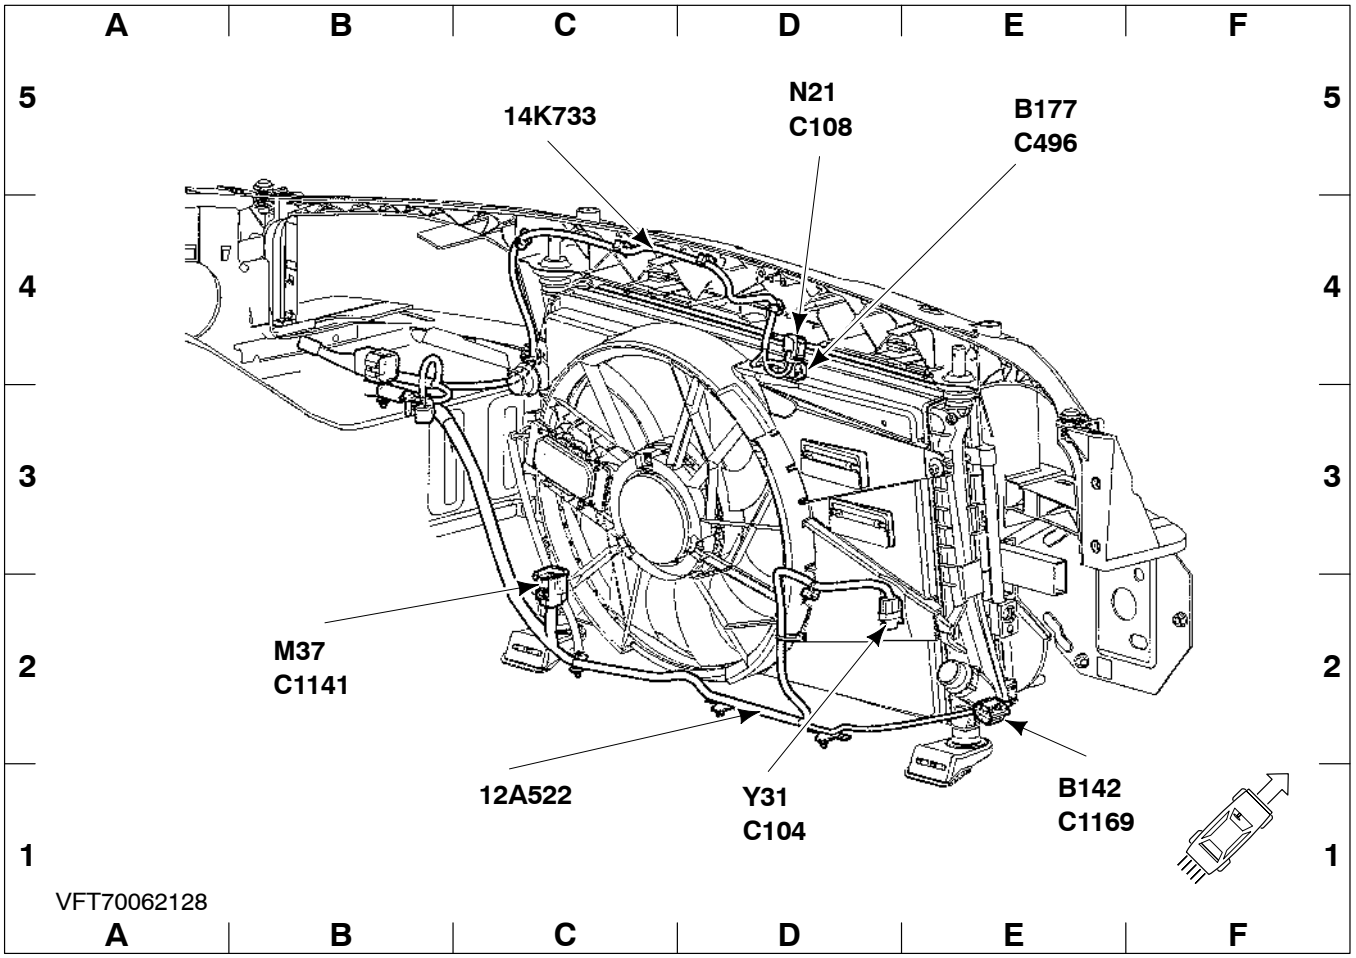


Cooling fan, 2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, 3.0L Duratec–SE (VE6)

12A522 Wiring harness – Engine control . . . . . C 1
14K733 Wiring harness – Engine compartment . C 5
B142 . Temperature manifold absolute pressure sensor . . . . . E 1
B177 . Crash sensor . . . . . E 5
C104 . . . . . D 1
C108 . . . . . D 5
C496 . . . . . E 5
C1141 . . . . . B 2
C1169 . . . . . E 1
M37 . Cooling fan motor . . . . . B 2
N21 . . Engine compartment switch . . . . . D 5
Y31 . . A/C compressor clutch solenoid . . . . . D 1

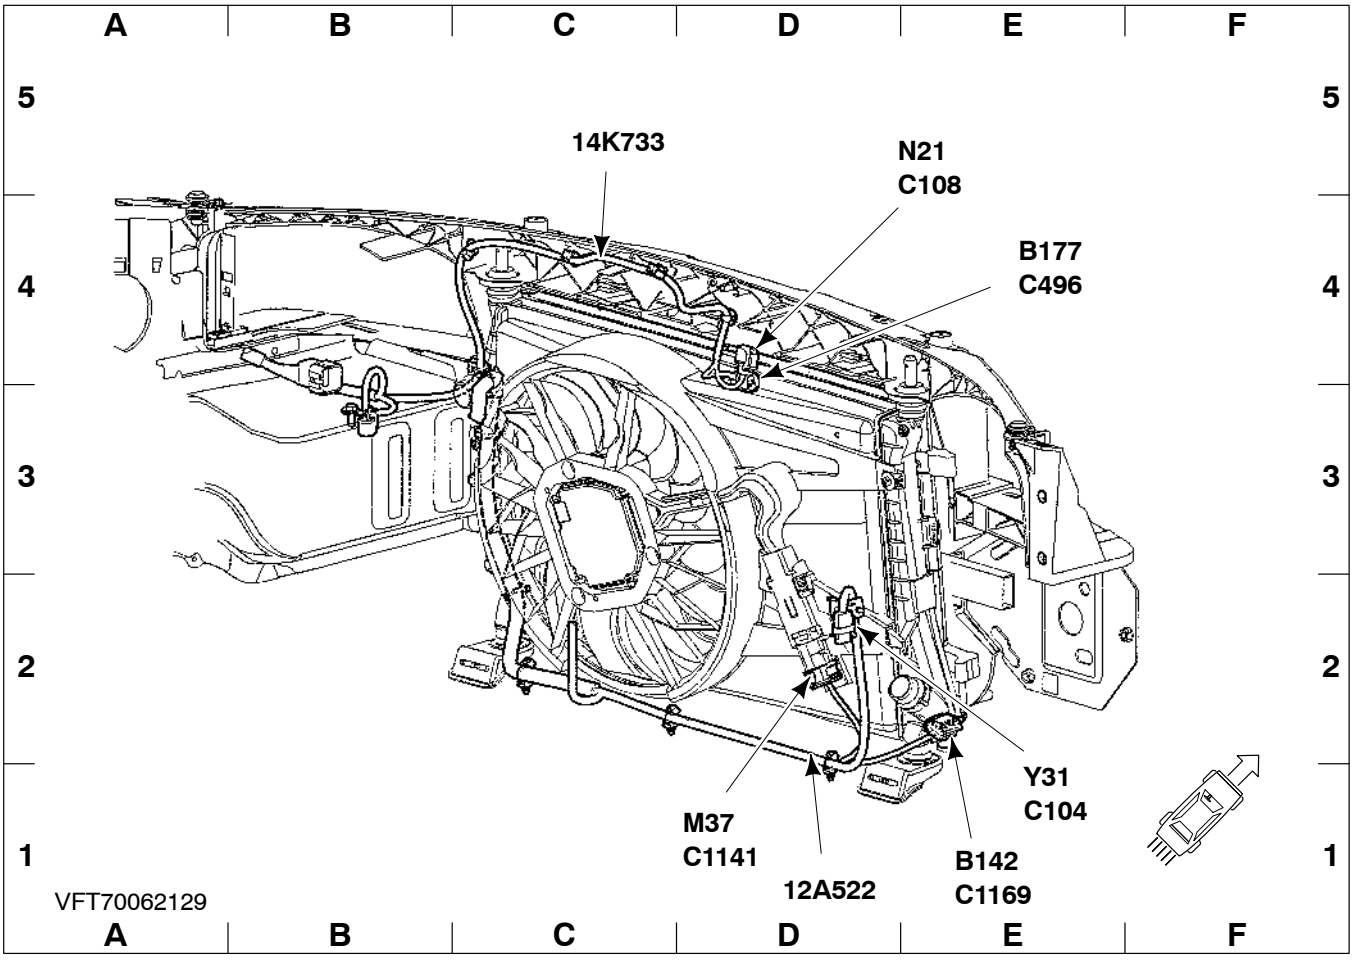


Cooling fan, 2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel

12A522 Wiring harness – Engine control . . . . . D 1
14K733 Wiring harness – Engine compartment . C 5
B142 . Temperature manifold absolute pressure sensor . . . . . E 1
B177 . Crash sensor . . . . . E 4
C104 . . . . . E 1
C108 . . . . . E 5
C496 . . . . . E 4
C1141 . . . . . D 1
C1169 . . . . . E 1
M37 . Cooling fan motor . . . . . D 1
N21 . . Engine compartment switch . . . . . E 5
Y31 . . A/C compressor clutch solenoid . . . . . E 1

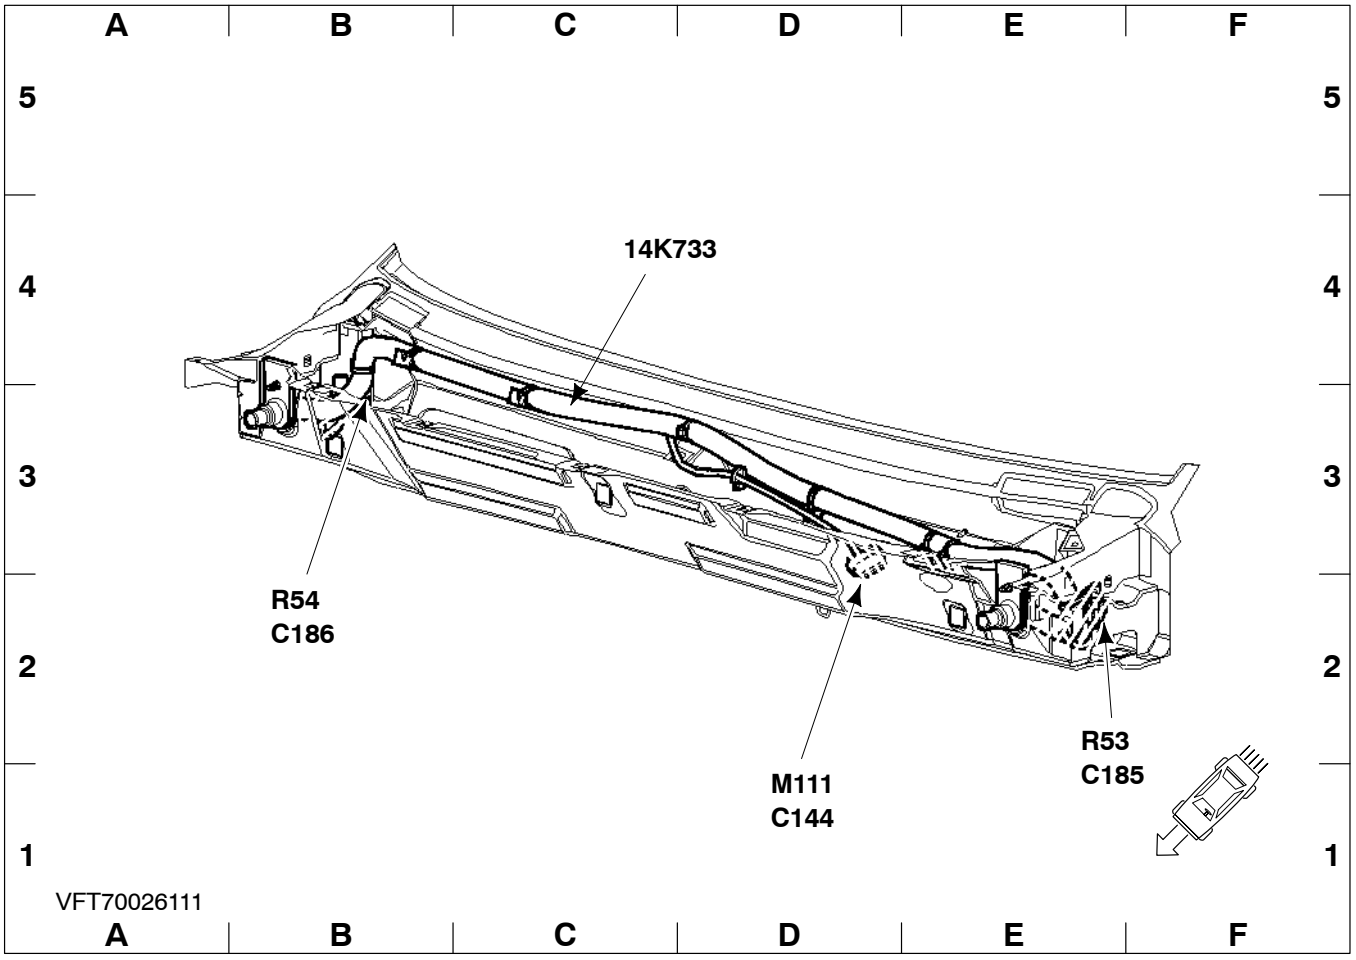


At engine bulkhead LHD

14K733 Wiring harness – Engine compartment . C 4
C144 . . . . . D 1
C185 . . . . . E 1
C186 . . . . . B 2
M111 Windshield wiper motor . . . . . D 1
R53 . . Windshield heater, LH side . . . . . E 2
R54 . . Windshield heater, RH side . . . . . B 2

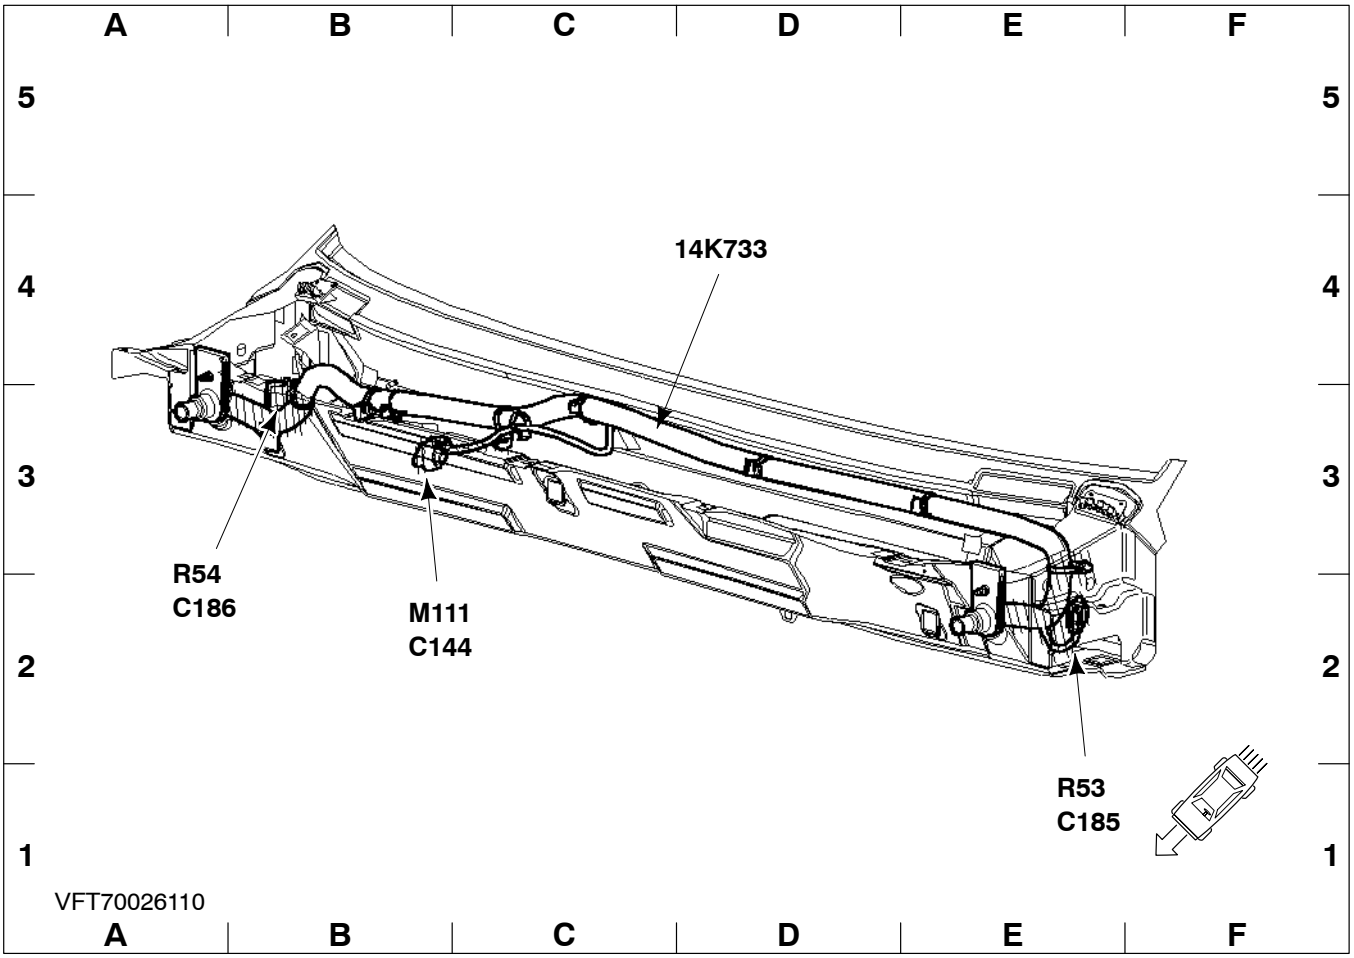


At engine bulkhead RHD

14K733 Wiring harness – Engine compartment . D 4
C144 . . . . . B 2
C185 . . . . . E 1
C186 . . . . . A 2
M111 Windshield wiper motor . . . . . B 2
R53 . . Windshield heater, LH side . . . . . E 1
R54 . . Windshield heater, RH side . . . . . A 2

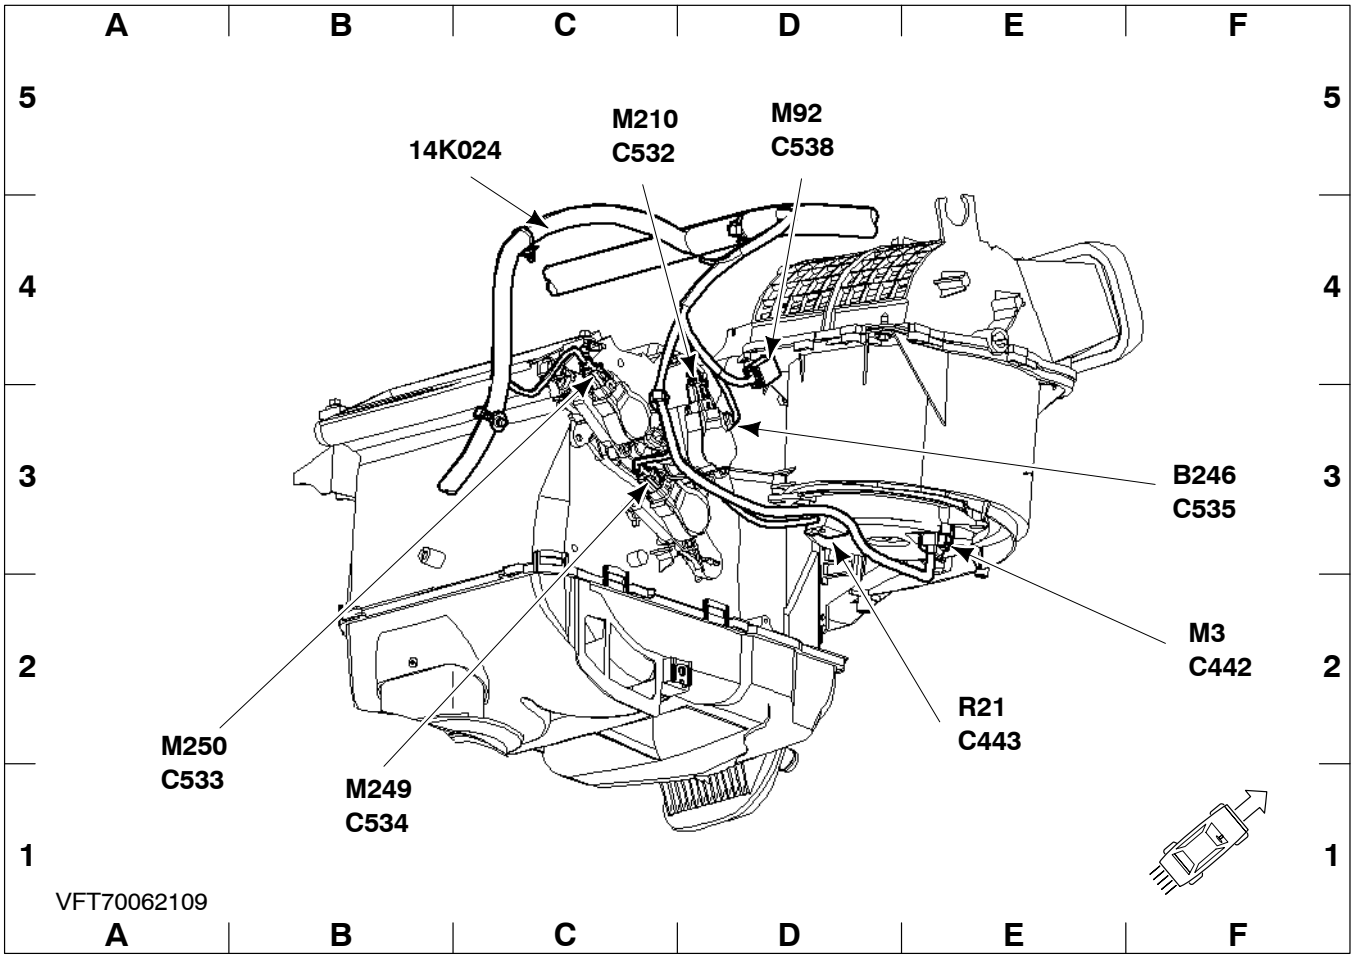


Heating/air conditioning housing, LHD

14K024 Wiring harness – Dash panel . . . . . C 5
B246 . Discharge temperature sensor, floor . . . . . F 3
C442 . . . . . F 2
C443 . . . . . E 2
C532 . . . . . C 5
C533 . . . . . A 1
C534 . . . . . B 1
C535 . . . . . F 3
C538 . . . . . D 5
M3 . . Blower motor . . . . . F 2
M92 . Recirculation door motor . . . . . D 5
M210 Defrost mode actuator . . . . . C 5
M249 Air temperature mode actuator . . . . . B 1
M250 Panel/floor mode actuator . . . . . A 2
R21 . . Blower motor resistor . . . . . E 2

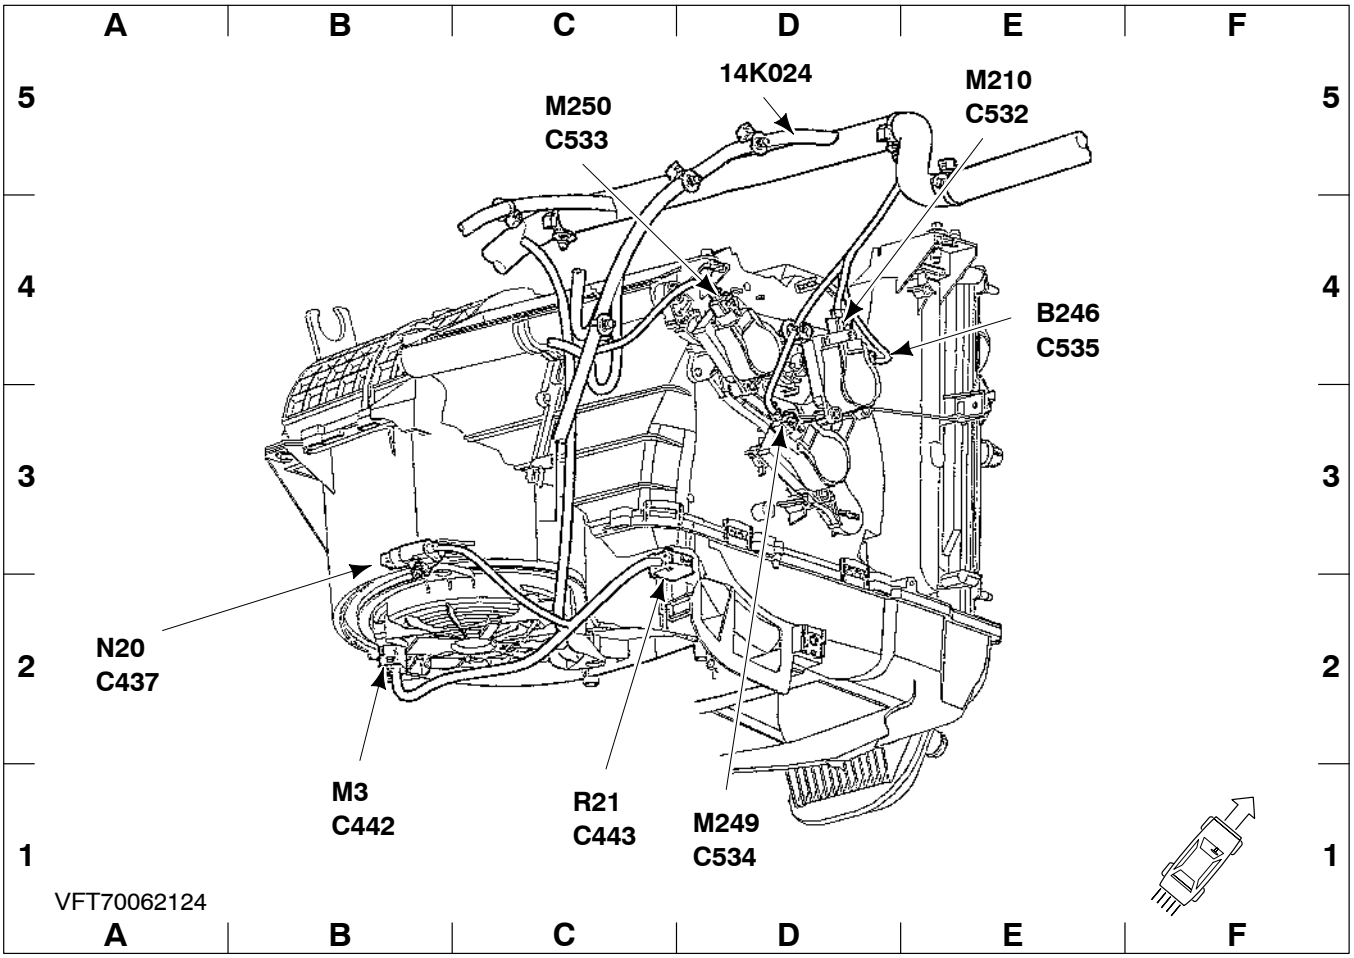


Heating/air conditioning housing, RHD

14K024 Wiring harness – Dash panel . . . . . D 5
B246 . Discharge temperature sensor, floor . . . . . E 4
C437 . . . . . A 2
C442 . . . . . B 1
C443 . . . . . C 1
C532 . . . . . E 5
C533 . . . . . C 5
C534 . . . . . D 1
C535 . . . . . E 4
M3 . . Blower motor . . . . . B 1
M210 Defrost mode actuator . . . . . E 5
M249 Air temperature mode actuator . . . . . D 1
M250 Panel/floor mode actuator . . . . . C 5
N20 . . Glove compartment lamp switch . . . . . A 2
R21 . . Blower motor resistor . . . . . C 1

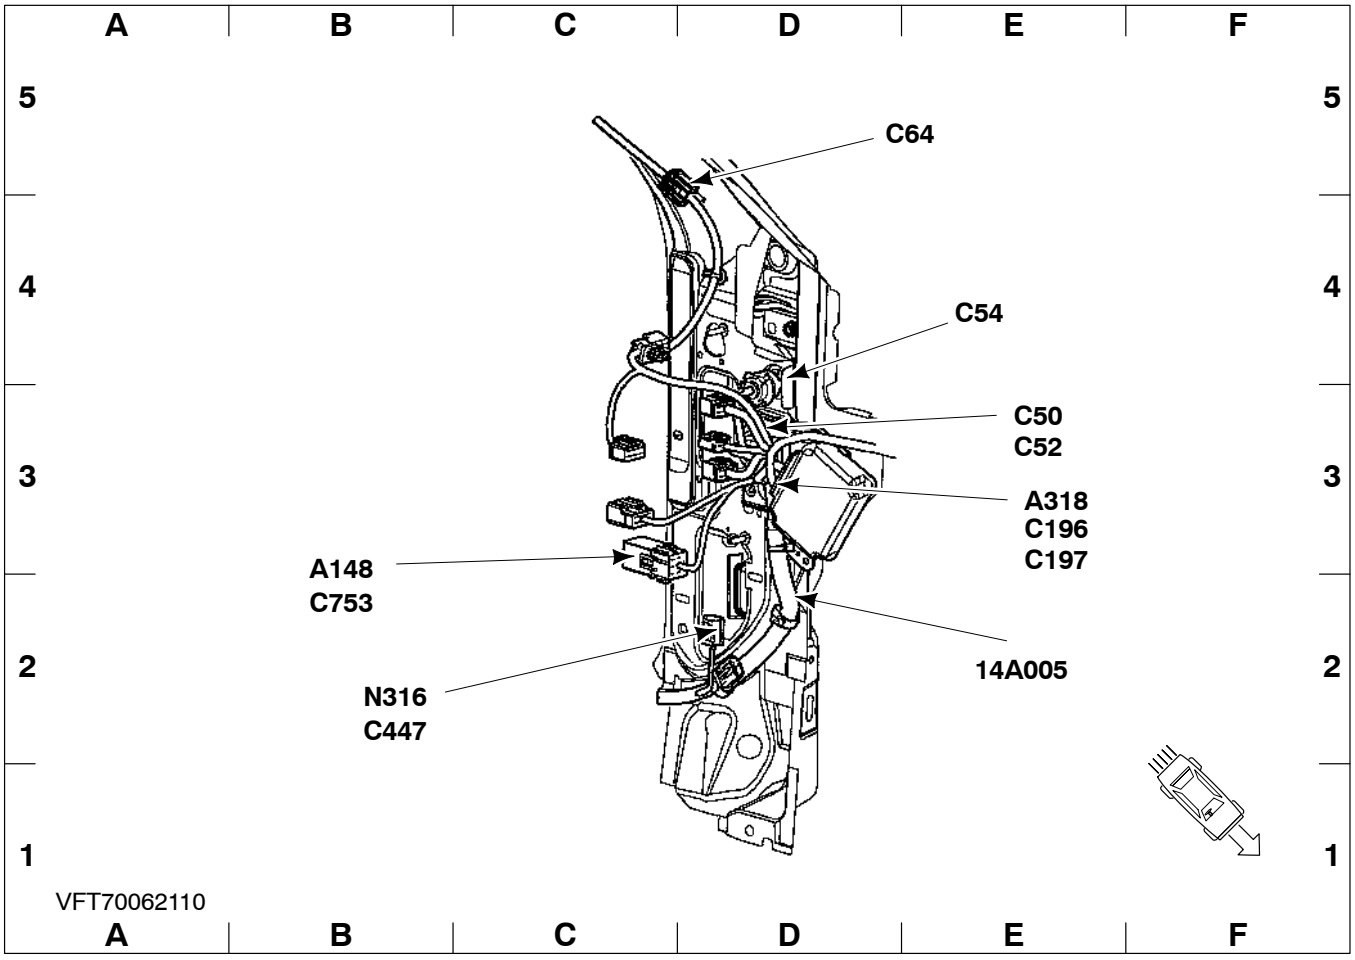


LH A–pillar

14A005 Wiring harness – Body Main . . . . . E 2
A148 . Power mirror fold module . . . . . B 3
A318 . Transmission control module (TCM) . . . . E 3
C50 . . . . . E 3
C52 . . . . . E 3
C54 . . . . . E 4
C64 . . . . . E 5
C196 . . . . . E 3
C197 . . . . . E 3
C447 . . . . . B 2
C753 . . . . . B 2
N316 . Inertia Fuel Shutoff (IFS) switch . . . . . B 2

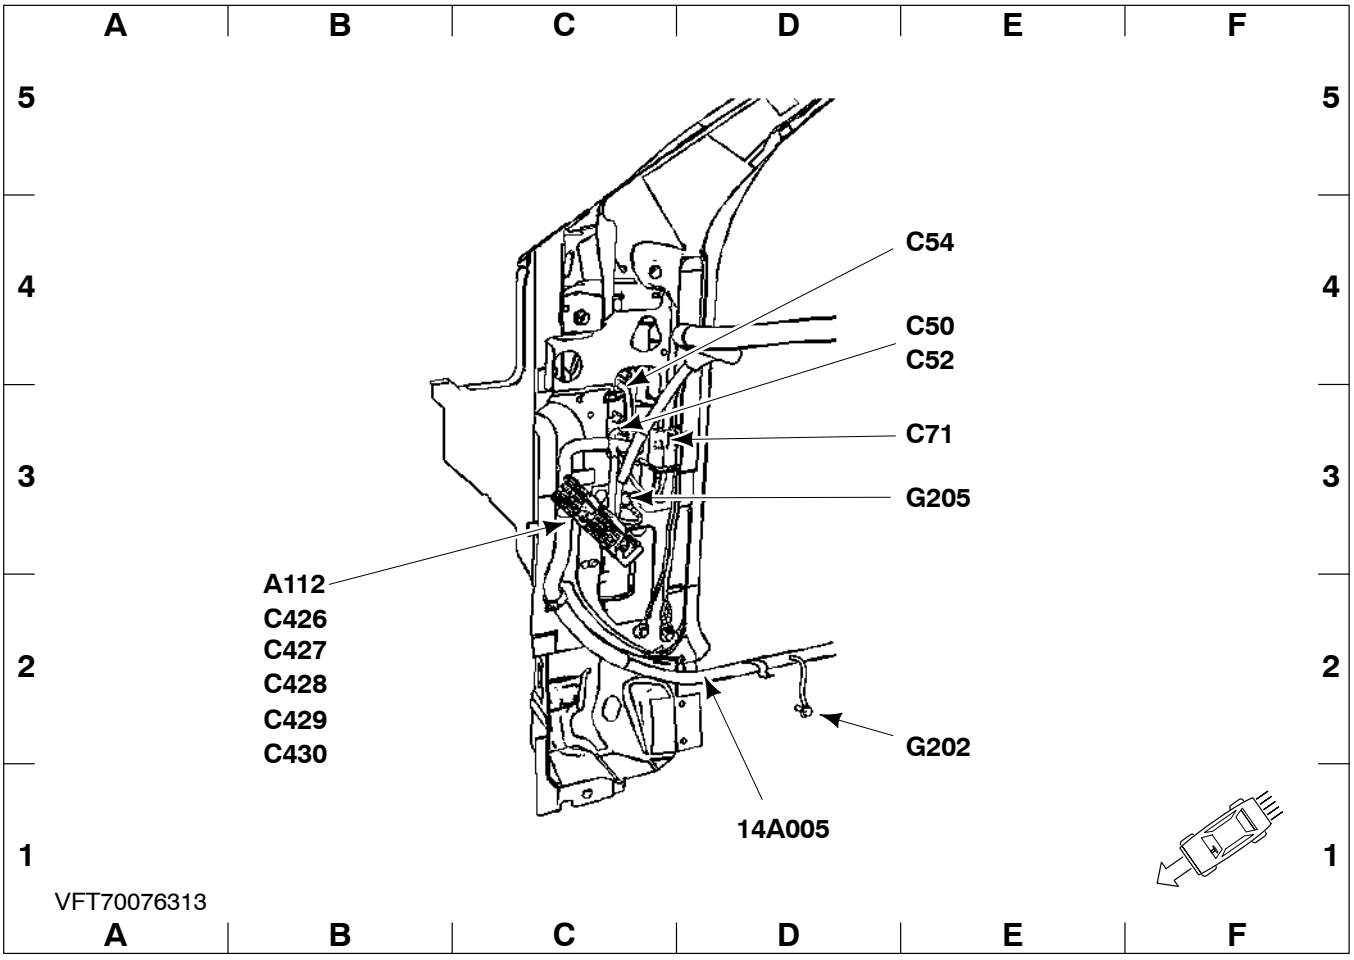


RH A–pillar

14A005 Wiring harness – Body Main . . . . . D 1
A112 . Generic Electronic Module (GEM) . . . . B 2
C50 . . . . . E 4
C52 . . . . . E 4
C54 . . . . . E 4
C71 . . . . . E 3
C426 . . . . . B 2
C427 . . . . . B 2
C428 . . . . . B 2
C429 . . . . . B 2
C430 . . . . . B 2
G202 . . . . . E 2
G205 . . . . . E 3

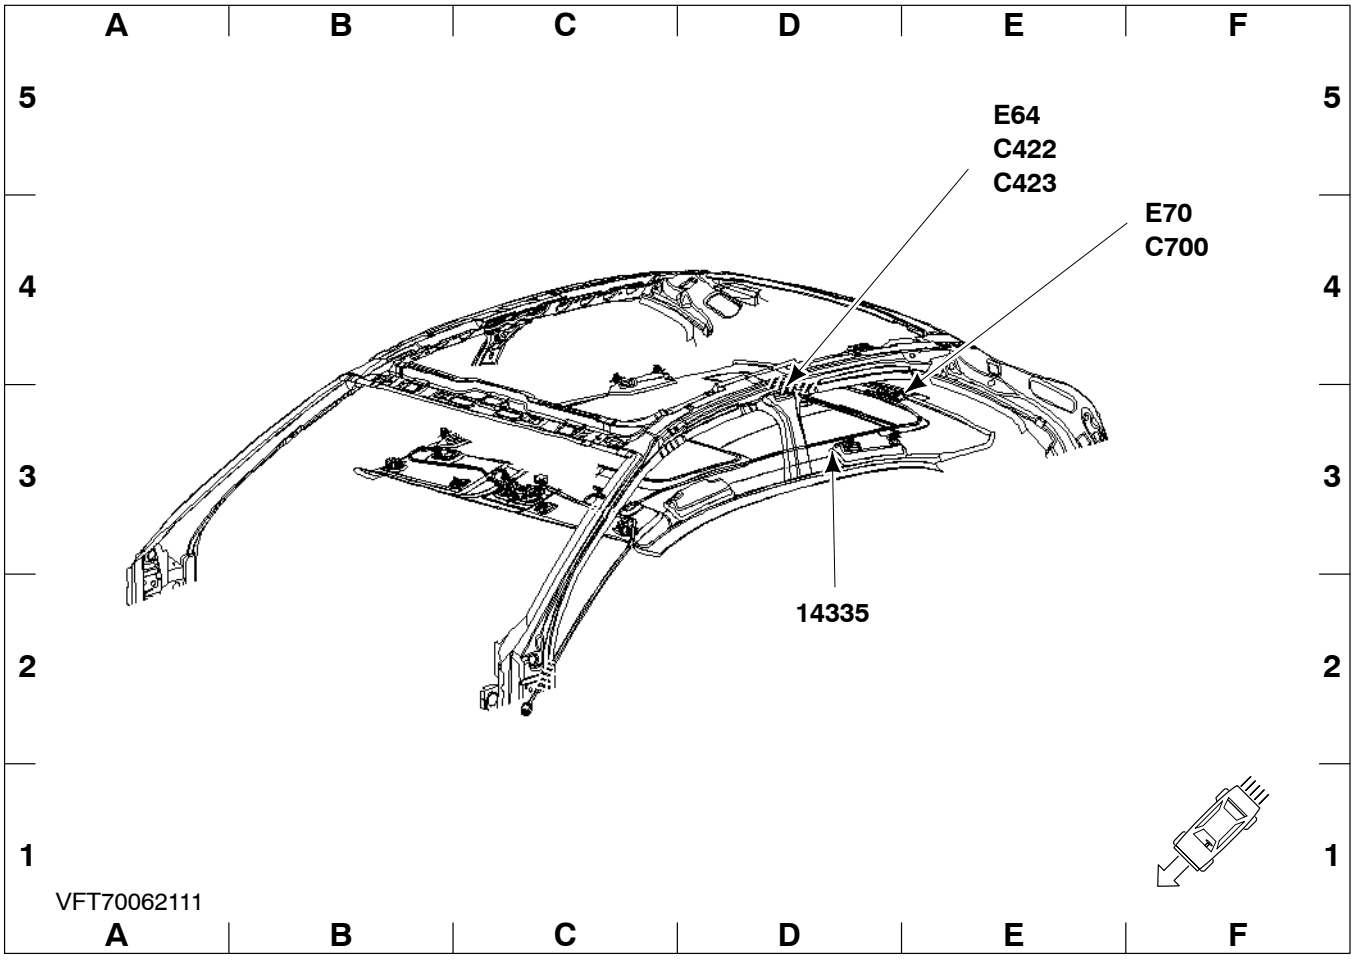


In roof, 4–door model

14335 Wiring harness – Interior illumination . . D 2
C422 . . . . . E 5
C423 . . . . . E 5
C700 . . . . . F 4
E64 . . Rear dome lamp . . . . . E 5
E70 . . High mounted stop lamp . . . . . F 4

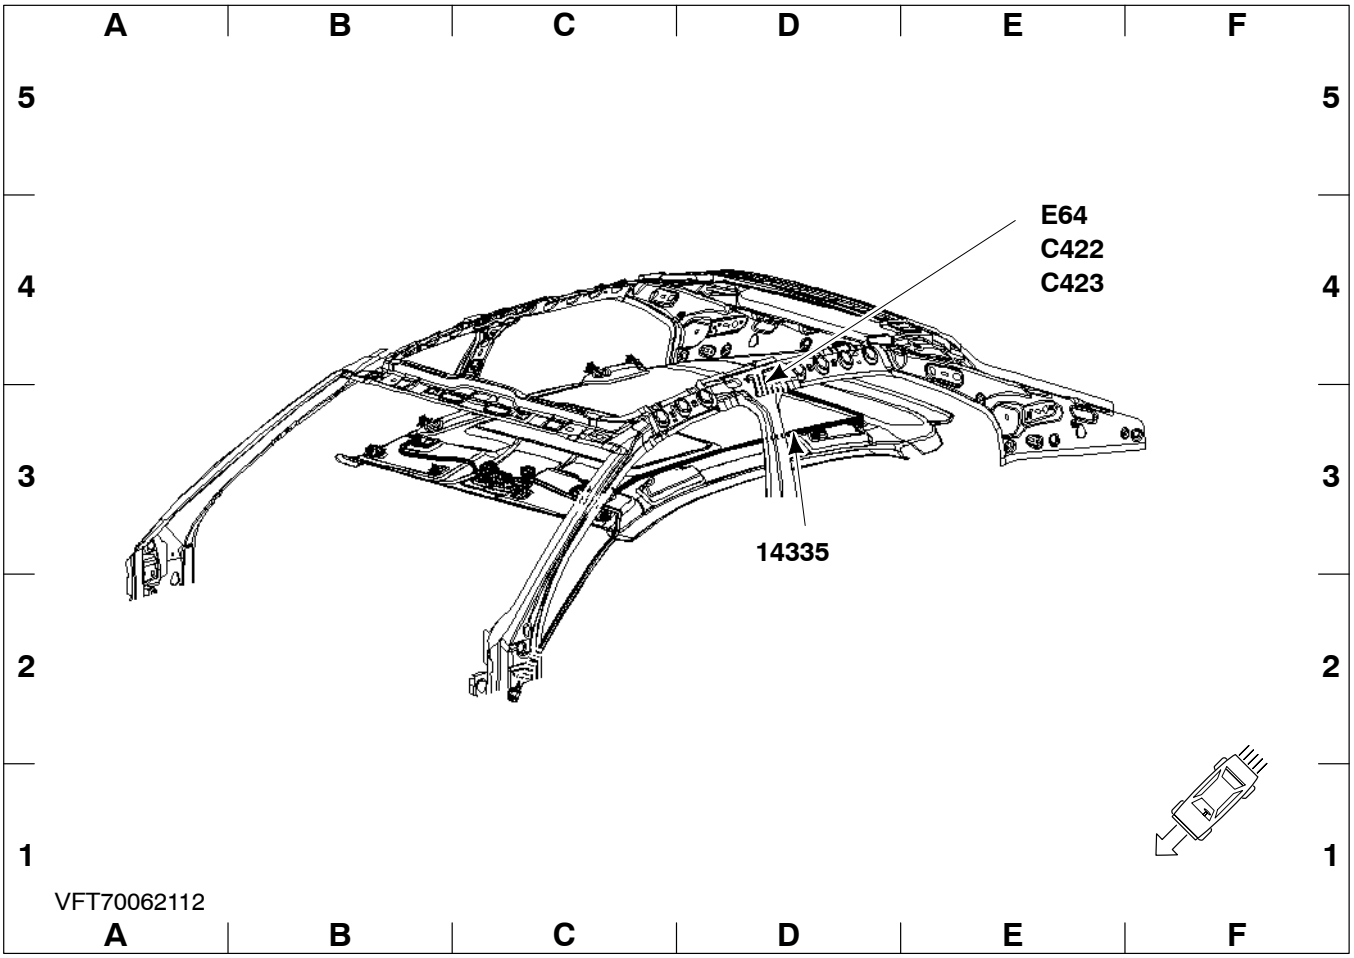


In roof, 5–door model

14335 Wiring harness – Interior illumination . . D 3
C422 . . . . . E 4
C423 . . . . . E 4
E64 . . Rear dome lamp . . . . . E 4

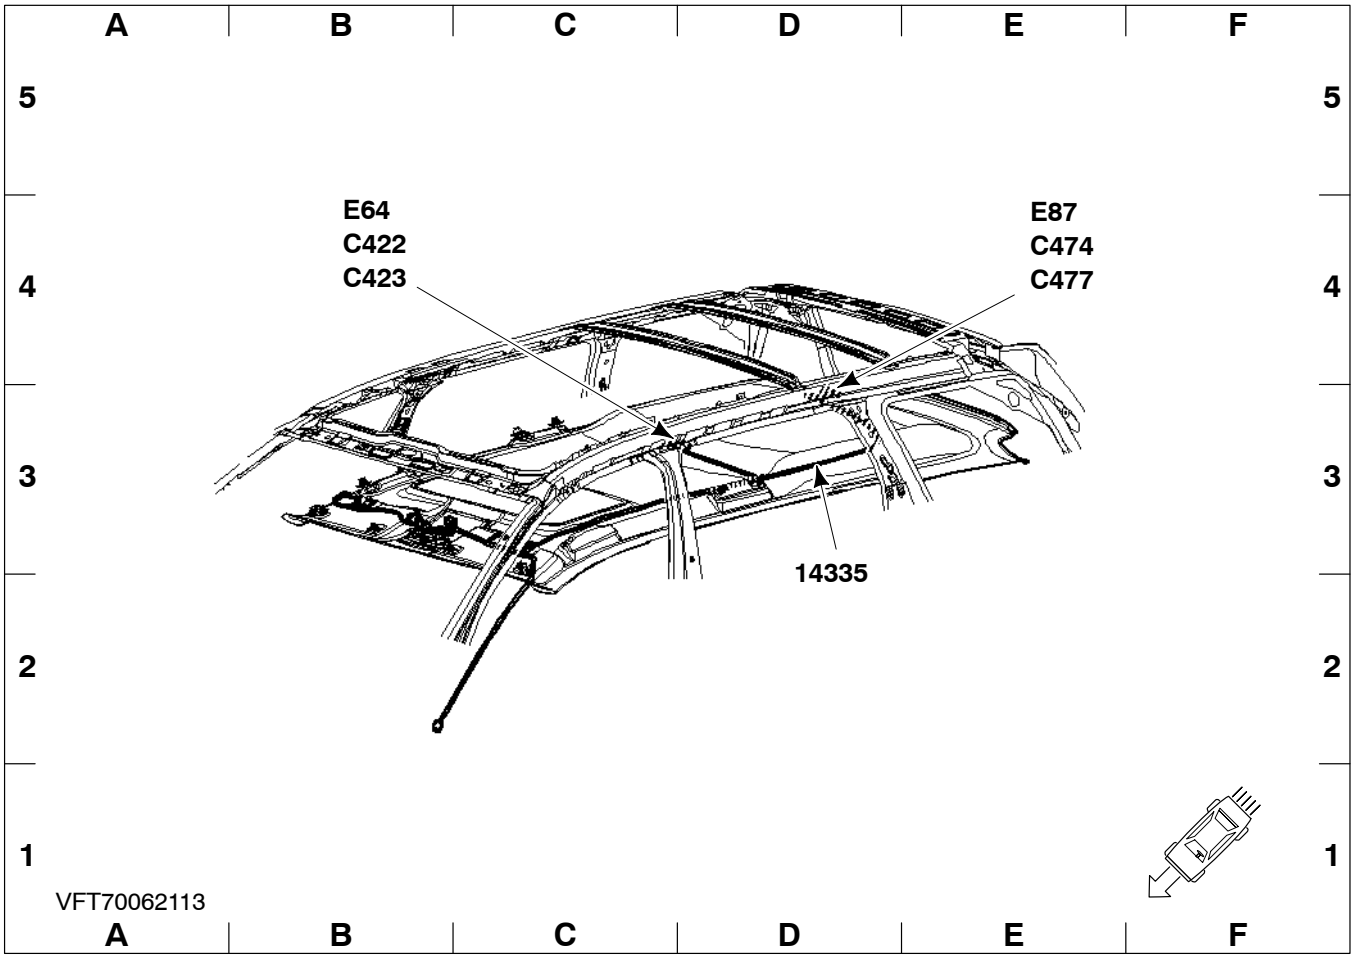


In roof, wagon

14335 Wiring harness – Interior illumination . . D 2
C422 . . . . . B 4
C423 . . . . . B 4
C474 . . . . . E 4
C477 . . . . . E 4
E64 . . Rear dome lamp . . . . . B 4
E87 . . Cargo space lamp . . . . . E 4

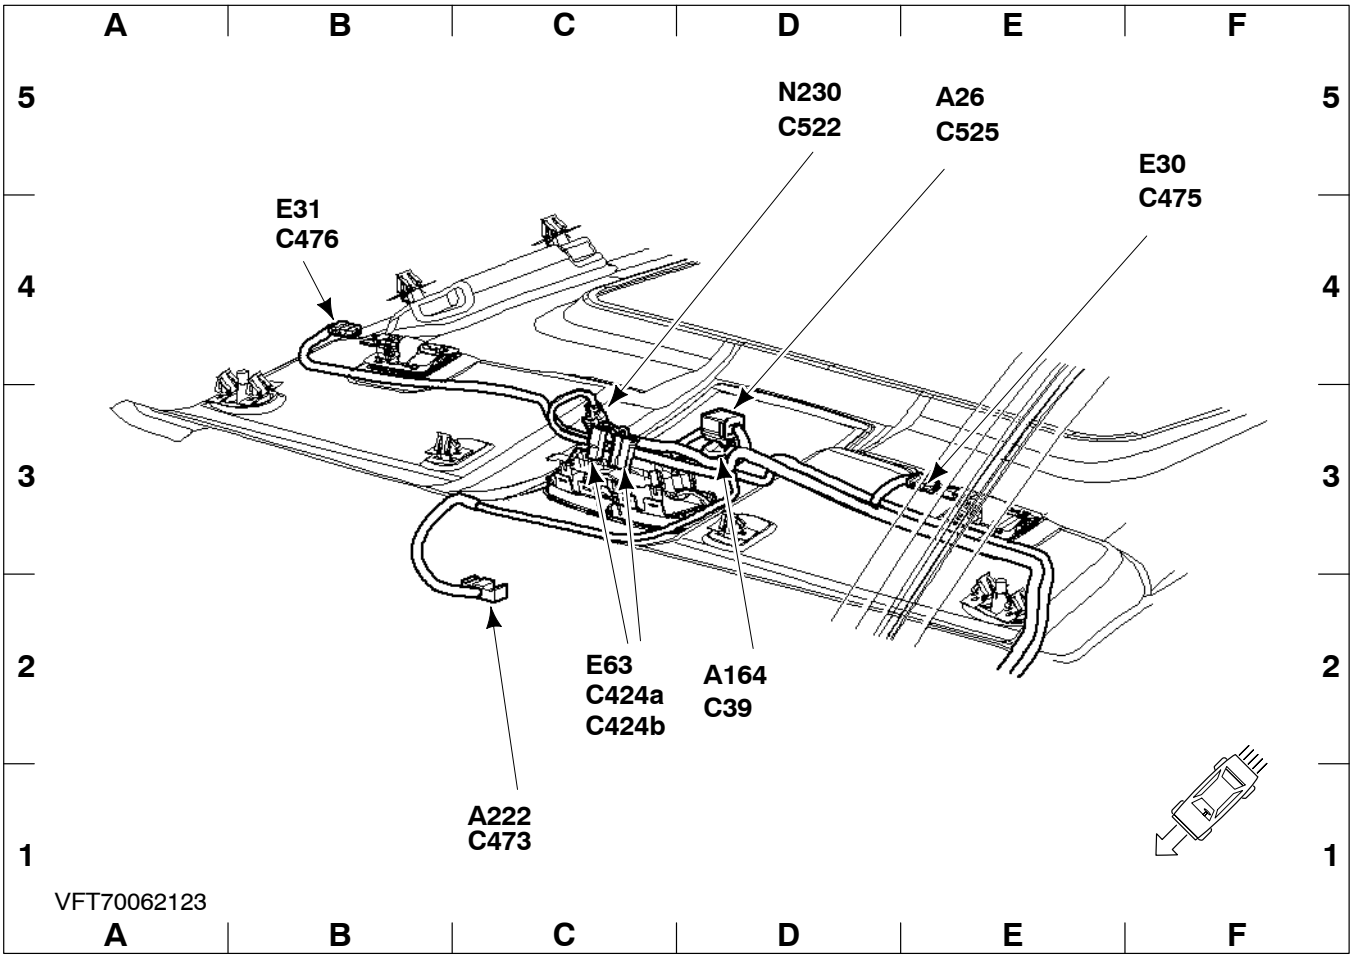


In roof, front

A26 . . Roof opening panel module . . . . . E 5
A164 . Microphone . . . . . D 2
A222 . Auto–dimming interior mirror . . . . . C 1
C39 . . . . . D 2
C424a . . . . . C 2
C424b . . . . . C 2
C473 . . . . . C 1
C475 . . . . . F 4
C476 . . . . . B 4
C522 . . . . . D 5
C525 . . . . . E 5
E30 . . Vanity mirror lamp, LH side . . . . . F 5
E31 . . Vanity mirror lamp, RH side . . . . . B 4
E63 . . Front dome lamp . . . . . C 2
N230 . Roof opening panel control switch . . . . D 5

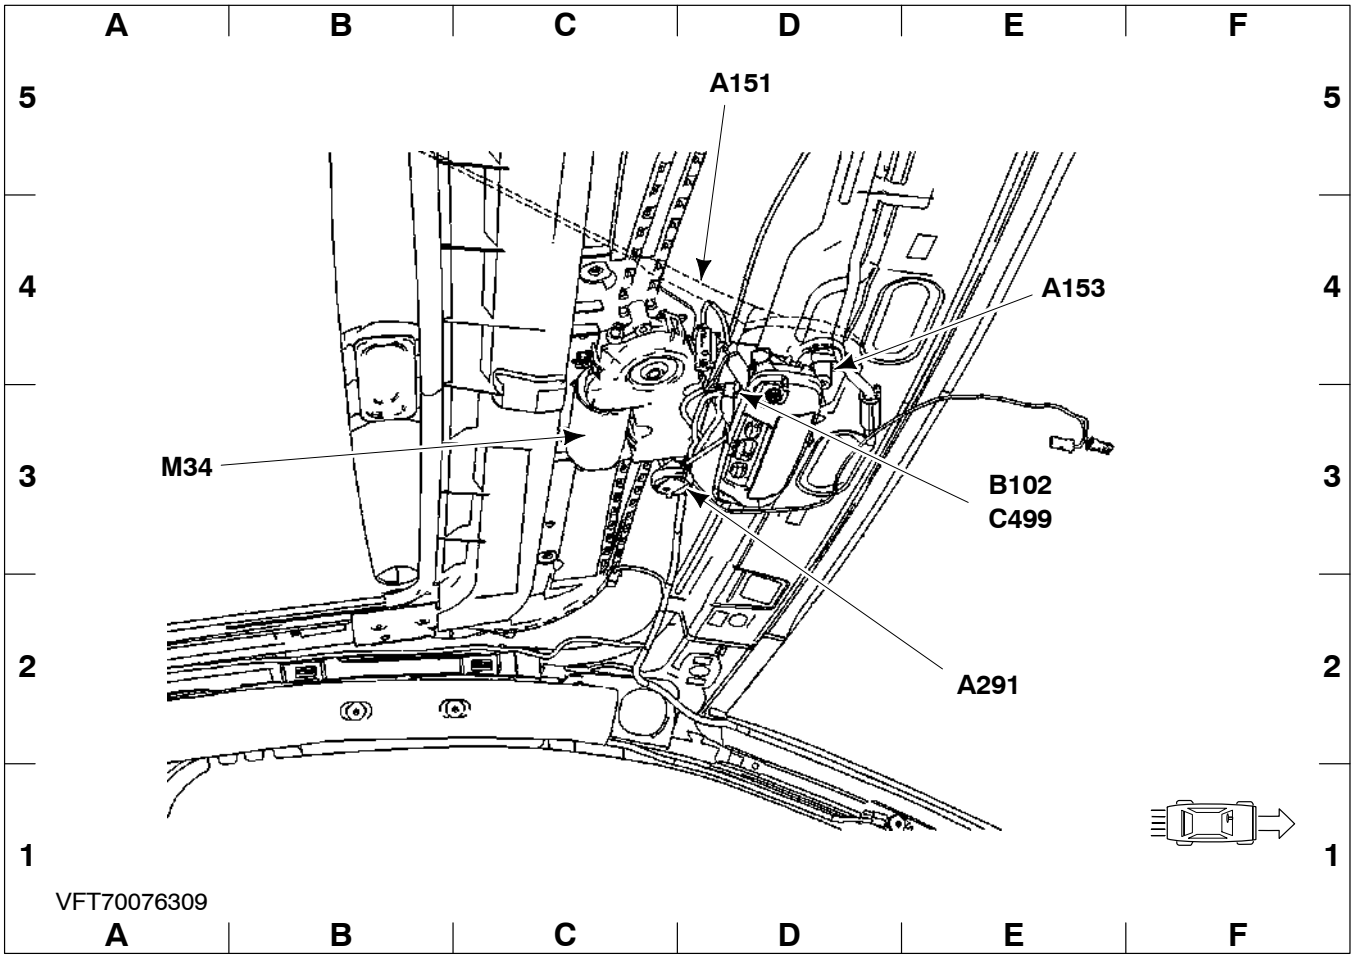


In roof, front

A151 . Antenna . . . . . D 5
A153 . GPS antenna . . . . . E 4
A291 . Cellular phone microphone . . . . . E 2
B102 . Anti–theft interior scan sensor, front . . . . E 3
C499 . . . . . E 3
M34 . Roof opening panel motor . . . . . A 3

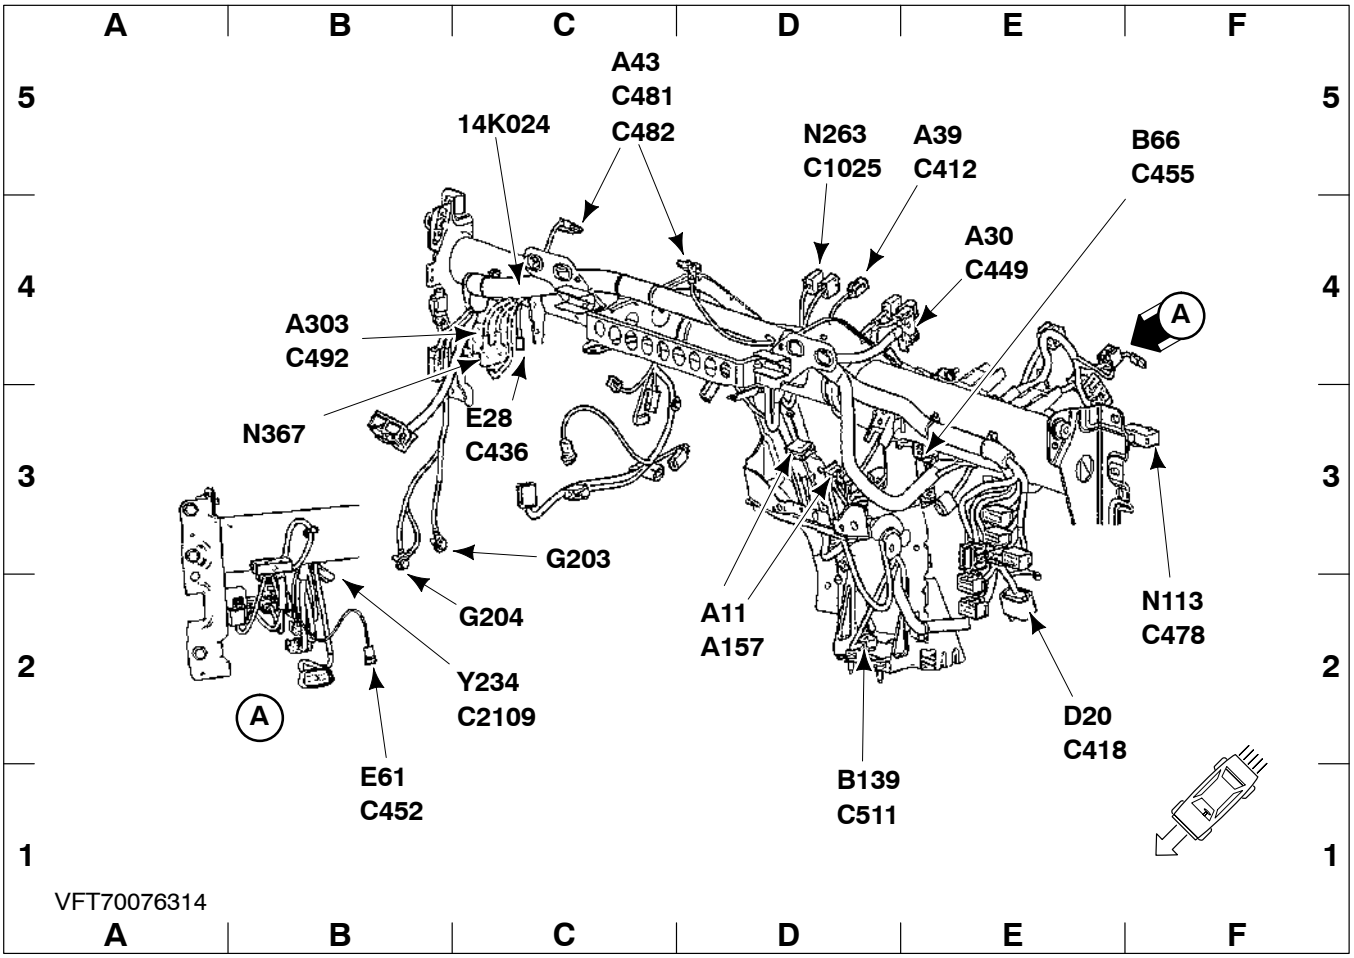


Behind dash panel, LHD

14K024	Wiring harness – Dash panel	C 5	C481		C 5
A11	Radio	D 2	C482		C 5
A30	Instrument cluster	E 4	C492		B 4
A39	Clock	E 5	C511		D 1
A43	Passenger air bag unit	C 5	C1025		D 5
A157	Audio/navigation system control unit	D 2	C2109		C 2
A303	Telematics control module	B 4	D20	Data Link Connector (DLC)	E 2
B66	In–vehicle temperature sensor, LH side	F 5	E28	Glove compartment lamp	C 3
B139	Yaw velocity sensor	D 1	E61	Footwell lamp, LH front	B 1
C412		E 5	G203		C 3
C418		E 2	G204		C 2
C436		C 3	N113	Main light switch	F 2
C449		E 4	N263	Heated windshield/heated rear window switch	D 5
C452		B 1	N367	GPS splitter	B 3
C455		F 5	Y234	Parking aid speaker	C 2
C478		F 2			

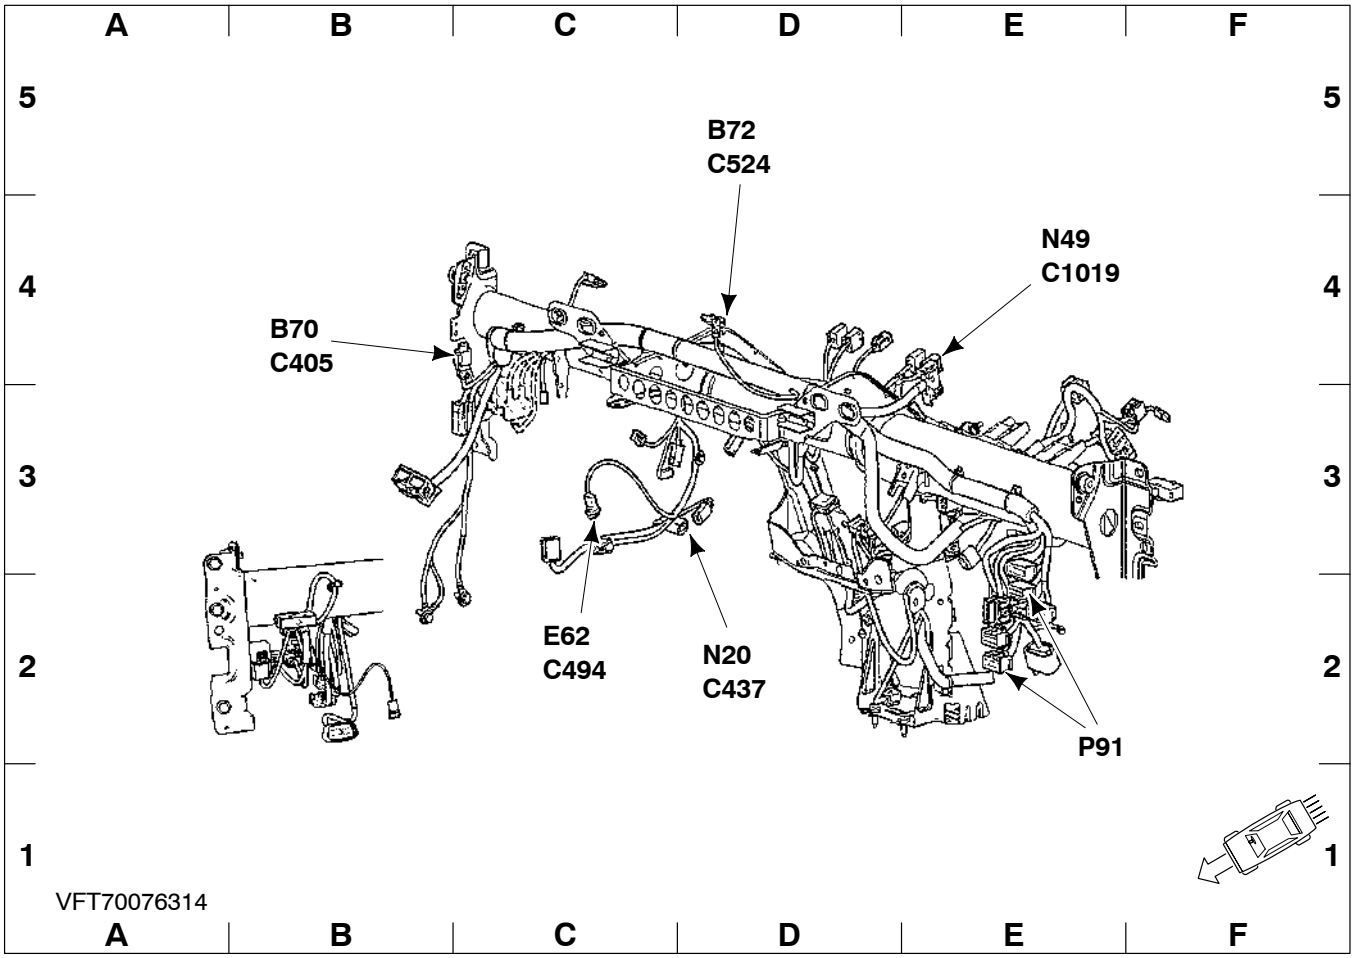


Behind dash panel, LHD

B70 . . Barometric Absolute Pressure (BAP) sensor . . . . . B 4
B72 . . Sunload sensor . . . . . D 5
C405 . . . . . B 4
C437 . . . . . D 2
C494 . . . . . C 2
C524 . . . . . D 5
C1019 . . . . . E 4
E62 . . Footwell lamp, RH front . . . . . C 2
N20 . . Glove compartment lamp switch . . . . . D 2
N49 . . Hazard flasher switch . . . . . E 4
P91 . . Central Junction Box (CJB) . . . . . E 2

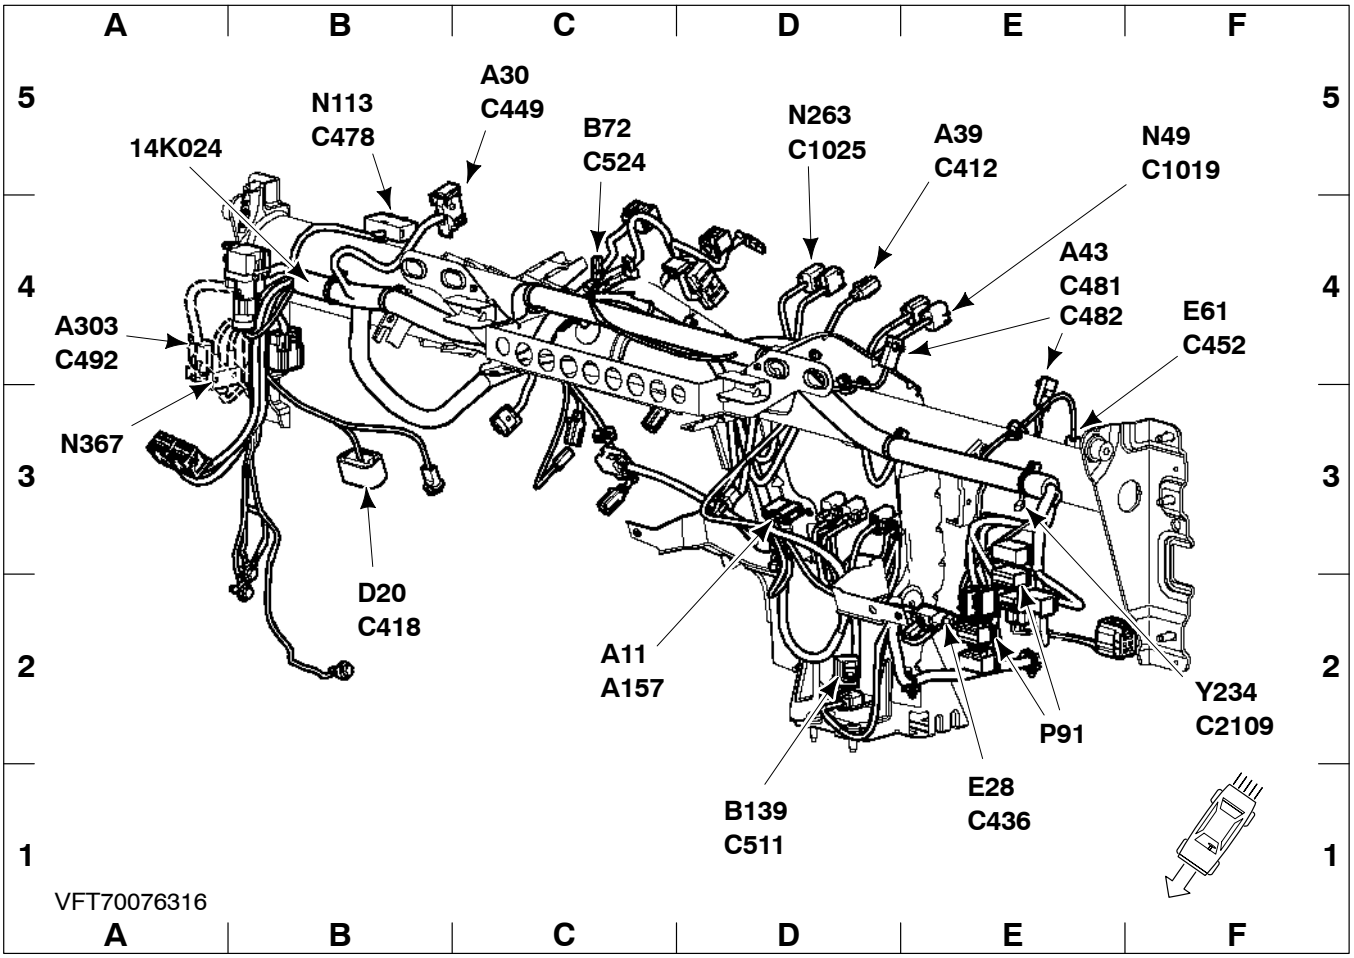


Behind dash panel, RHD

14K024 Wiring harness – Dash panel . . . . . A 5
A11 . . Radio . . . . . C 2
A30 . . Instrument cluster . . . . . C 5
A39 . . Clock . . . . . E 5
A43 . . Passenger air bag unit . . . . . E 4
A157 . Audio/navigation system control unit . . C 2
A303 . Telematics control module . . . . . A 4
B72 . . Sunload sensor . . . . . C 5
B139 . Yaw velocity sensor . . . . . D 1
C412 . . . . . E 5
C418 . . . . . B 2
C436 . . . . . E 1
C449 . . . . . C 5
C452 . . . . . F 4
C478 . . . . . B 5
C481 . . . . . E 4
C482 . . . . . E 4
C492 . . . . . A 4
C511 . . . . . D 1
C524 . . . . . C 5
C1019 . . . . . F 5
C1025 . . . . . D 5
C2109 . . . . . F 2
D20 . . Data Link Connector (DLC) . . . . . B 2
E28 . . Glove compartment lamp . . . . . E 1
E61 . . Footwell lamp, LH front . . . . . F 4
N49 . . Hazard flasher switch . . . . . F 5
N113 . Main light switch . . . . . B 5
N263 . Heated windshield/heated rear window switch . . . . . D 5
N367 . GPS splitter . . . . . A 3
P91 . . Central Junction Box (CJB) . . . . . E 2
Y234 . Parking aid speaker . . . . . F 2

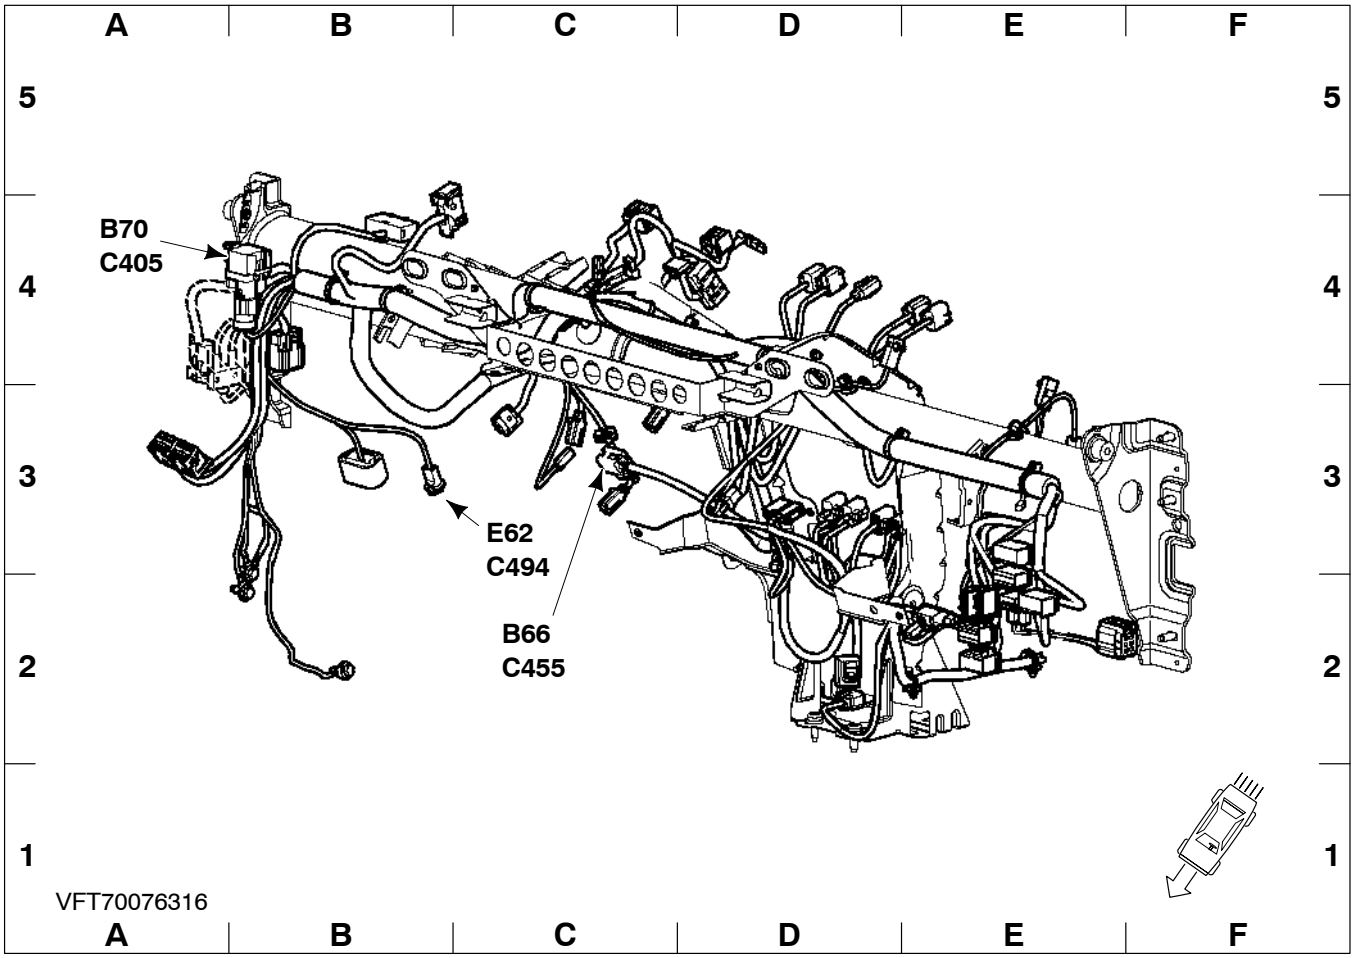


Behind dash panel, RHD

B66 . . In–vehicle temperature sensor, LH side . C 2
B70 . . Barometric Absolute Pressure (BAP) sensor . . . . . A 4
C405 . . . . . A 4
C455 . . . . . C 2
C494 . . . . . C 3
E62 . . Footwell lamp, RH front . . . . . C 3

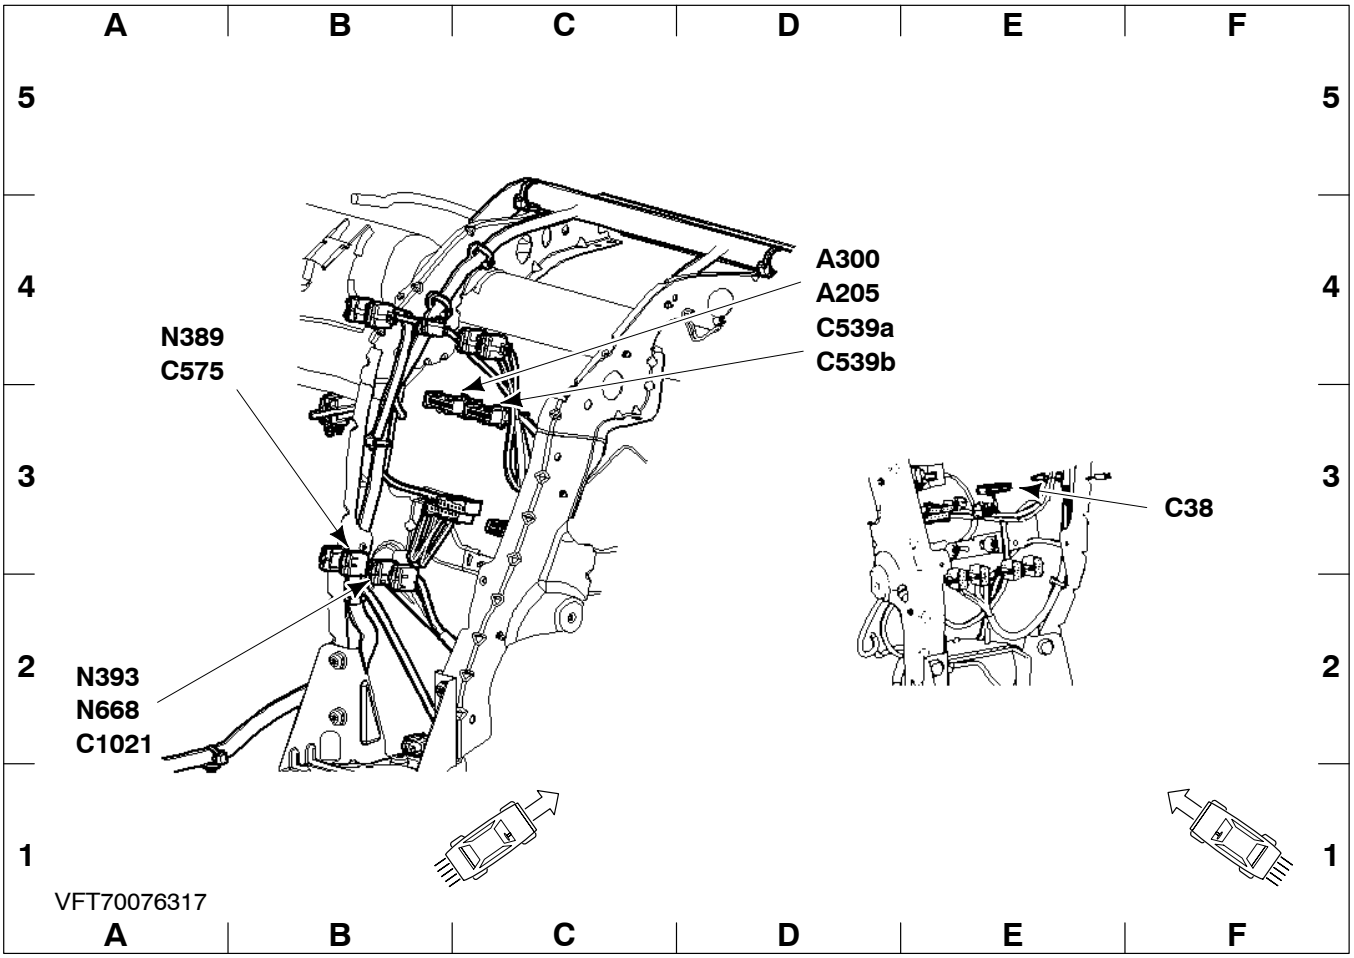


Dash panel, centre

A205 . Electronic Automatic Temperature Control (EATC) module . . . . . D 4
A300 . Heater/A/C control module . . . . . D 4
C38 . . . . . F 3
C539a . . . . . D 4
C539b . . . . . D 4
C575 . . . . . A 4
C1021 . . . . . A 2
N389 . ESP disable and tailgate/decklid release switch . . . . . A 4
N393 . Heated seat switch . . . . . A 2
N668 . Climate controlled seat switch . . . . . A 2

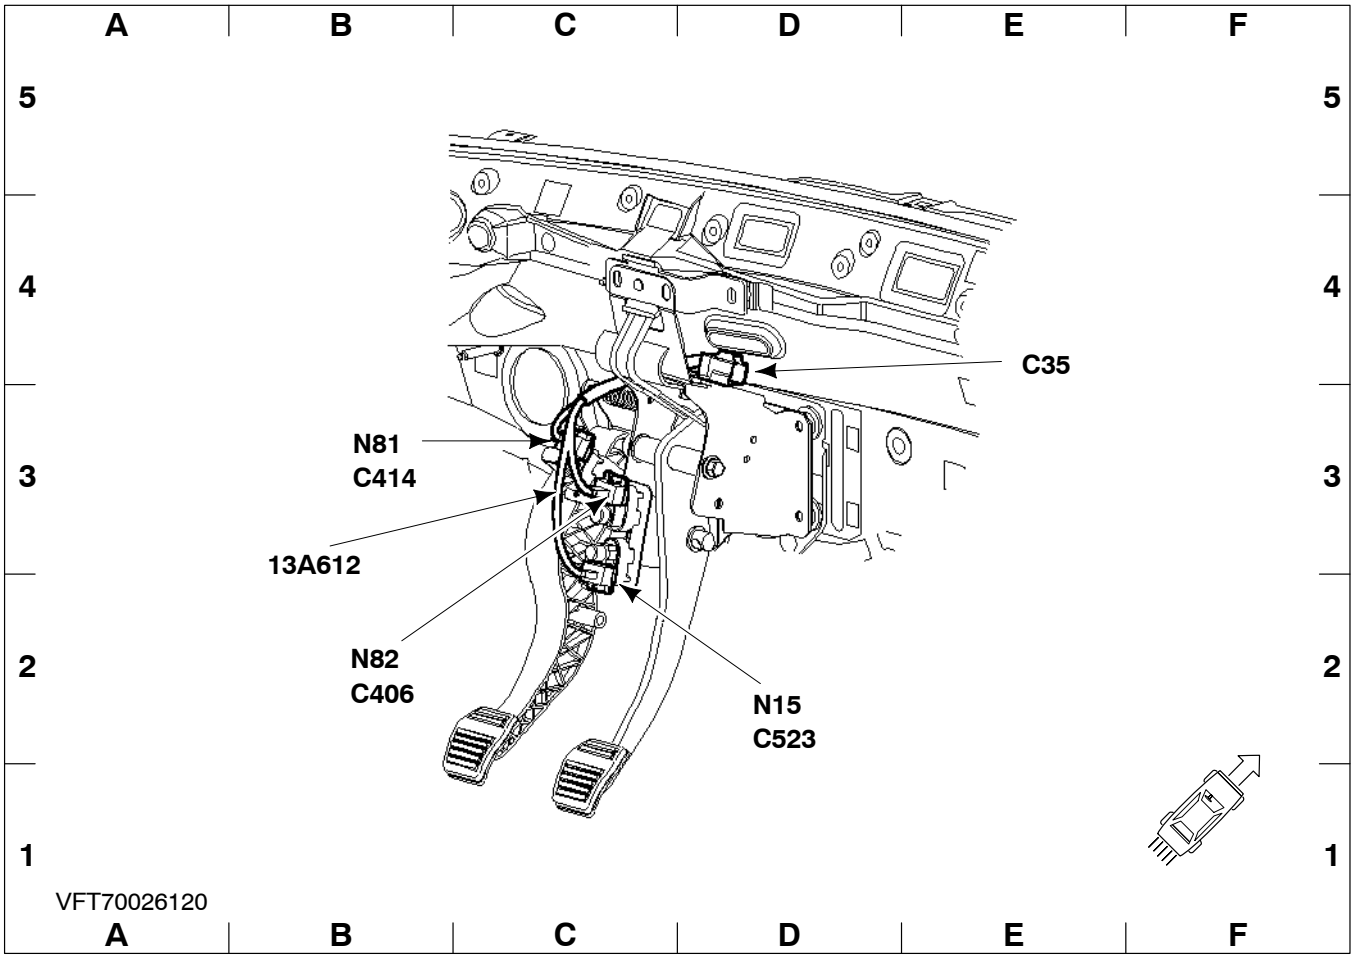


On brake pedal support

13A612 Wiring harness – Stop lamp switch .... B 3
C35 ..... E 4
C406 ..... B 2
C414 ..... B 3
C523 ..... D 2
N15 .. Stop lamp switch ..... D 2
N81 .. Clutch pedal position switch ..... B 3
N82 .. Brake pedal position switch ..... B 2

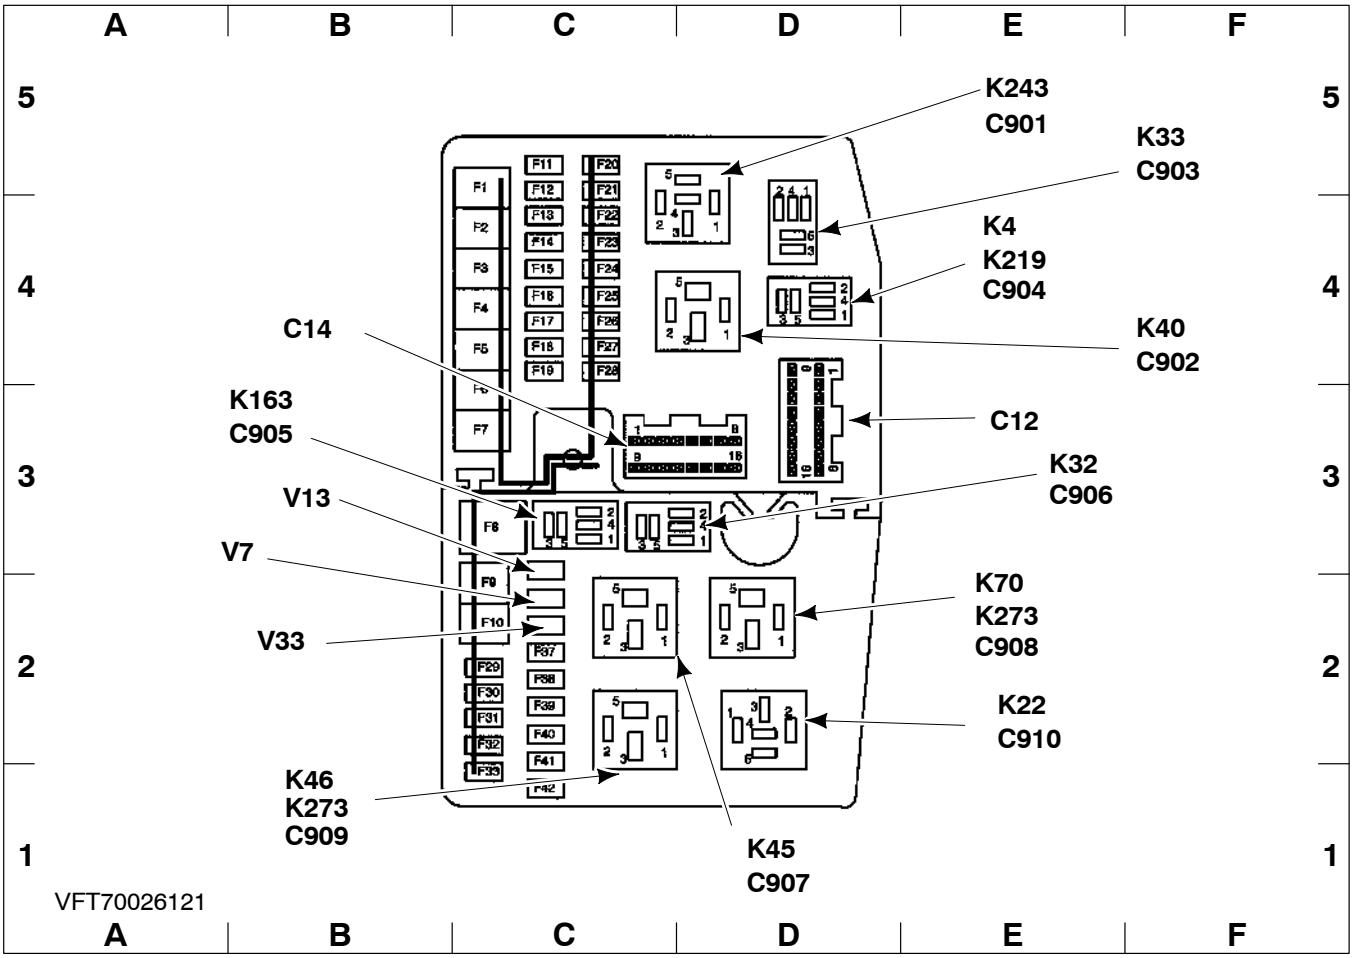


Battery Junction Box (BJB)

C12 . . . . . E 3
C14 . . . . . B 4
C901 . . . . . E 5
C902 . . . . . F 4
C903 . . . . . F 5
C904 . . . . . E 4
C905 . . . . . B 3
C906 . . . . . E 3
C907 . . . . . D 1
C908 . . . . . E 2
C909 . . . . . B 1
C910 . . . . . E 2
K4 . . . Fuel pump relay . . . . . E 4
K22 . . Starter relay . . . . . E 2
K32 . . A/C Wide Open Throttle (WOT) relay . . E 3
K33 . . Horn relay . . . . . F 5
K40 . . Heated windshield timer relay . . . . . F 4
K45 . . Cooling fan relay . . . . . D 1
K46 . . High speed cooling fan relay . . . . . B 1
K70 . . Pre–glow relay Diesel . . . . . E 2
K163 . PCM module relay . . . . . B 3
K219 . Injection pump power (IPP) relay . . . . . E 4
K243 . Low beam relay . . . . . E 5
K273 . Reversing lamps relay . . . . . B 1
K273 . Reversing lamps relay . . . . . E 2
V7 . . . A/C compressor clutch diode . . . . . B 3
V13 . . EEC Diode . . . . . B 3
V33 . . Diode . . . . . B 2

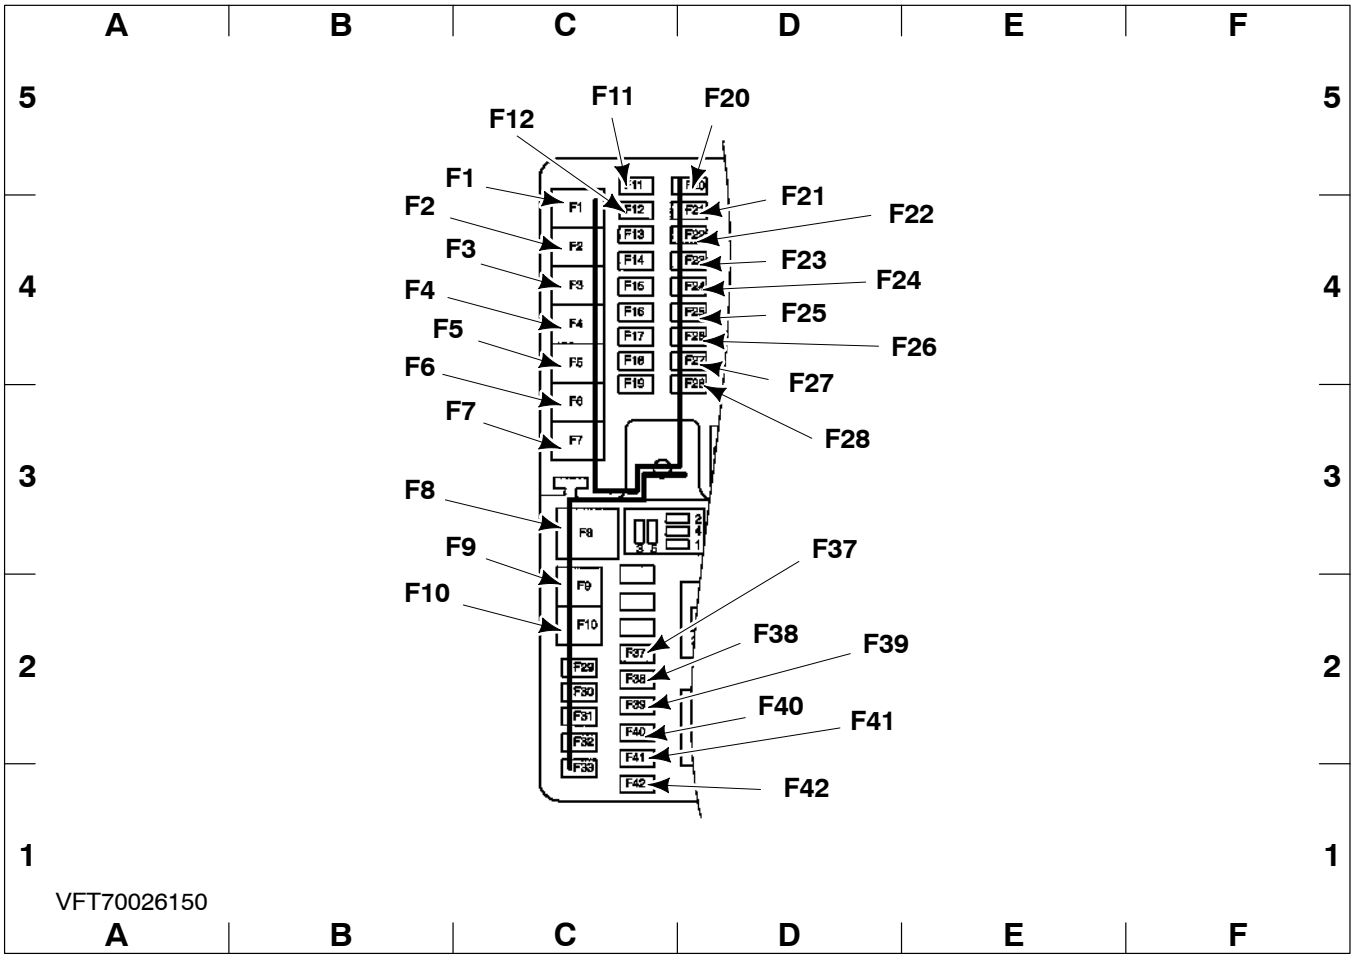


Battery Junction Box (BJB) (partial)

F1	C 5	F22	E 4
F2	B 4	F23	D 4
F3	C 4	F24	D 4
F4	B 4	F25	D 4
F5	C 4	F26	E 4
F6	B 4	F27	D 3
F7	C 3	F28	D 3
F8	B 3	F37	D 3
F9	C 3	F38	D 2
F10	B 2	F39	D 2
F11	C 5	F40	D 2
F12	C 5	F41	D 2
F20	D 5	F42	D 1
F21	D 4		

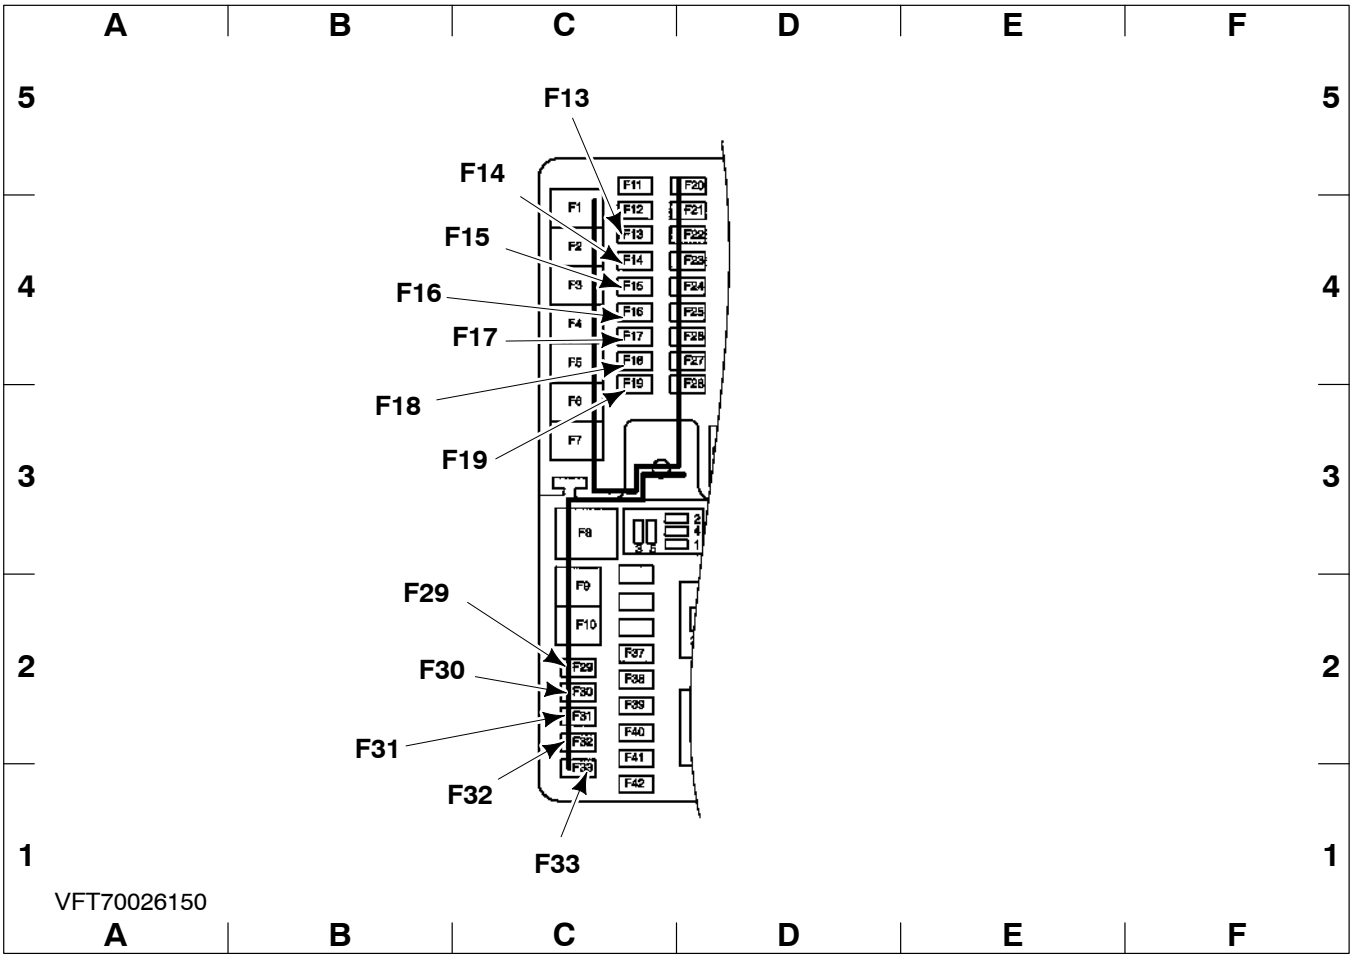


Battery Junction Box (BJB) (partial)

F13	C 5	F19	C 3
F14	C 5	F29	B 2
F15	C 4	F30	B 2
F16	B 4	F31	B 2
F17	C 4	F32	C 1
F18	B 3	F33	C 1

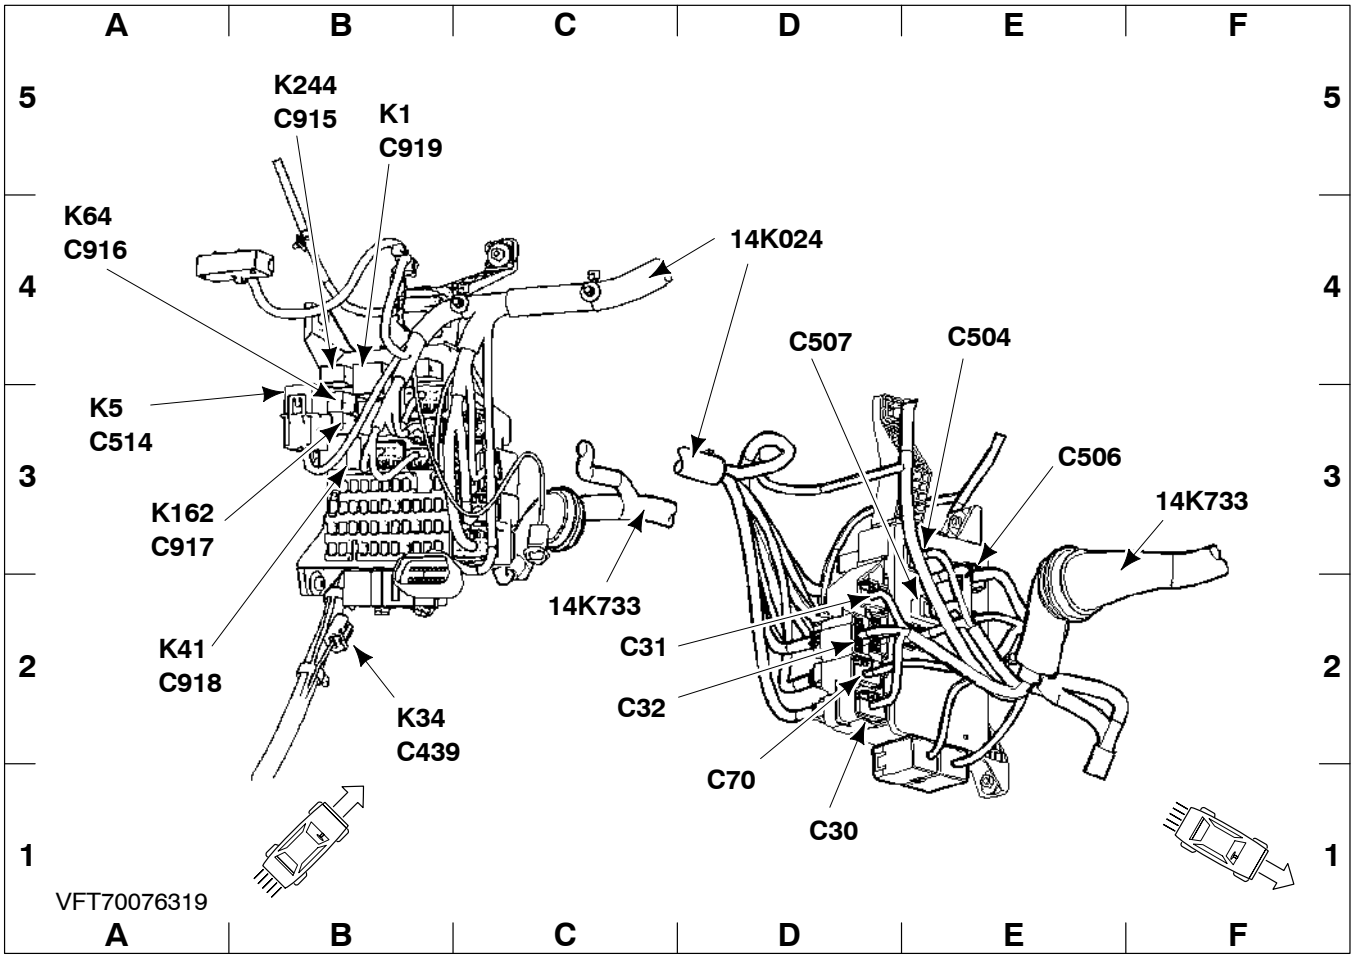


Central Junction Box (CJB)

14K024 Wiring harness – Dash panel	D 4	C915	B 5
14K733 Wiring harness – Engine compartment	F 3	C916	A 4
14K733 Wiring harness – Engine compartment	C 2	C917	A 3
C30	D 1	C918	A 2
C31	C 2	C919	B 5
C32	C 2	K1 . . . Heated rear window relay	B 5
C70	D 1	K5 . . . Daytime Running Lamps (DRL) relay	A 3
C439	B 2	K34 . . Headlamp cleaning relay	B 2
C504	E 4	K41 . . Ignition relay	A 2
C506	E 3	K64 . . Rear window wiper relay	A 4
C507	D 4	K162 . Windshield wiper relay	A 3
C514	A 3	K244 . High beam relay	B 5

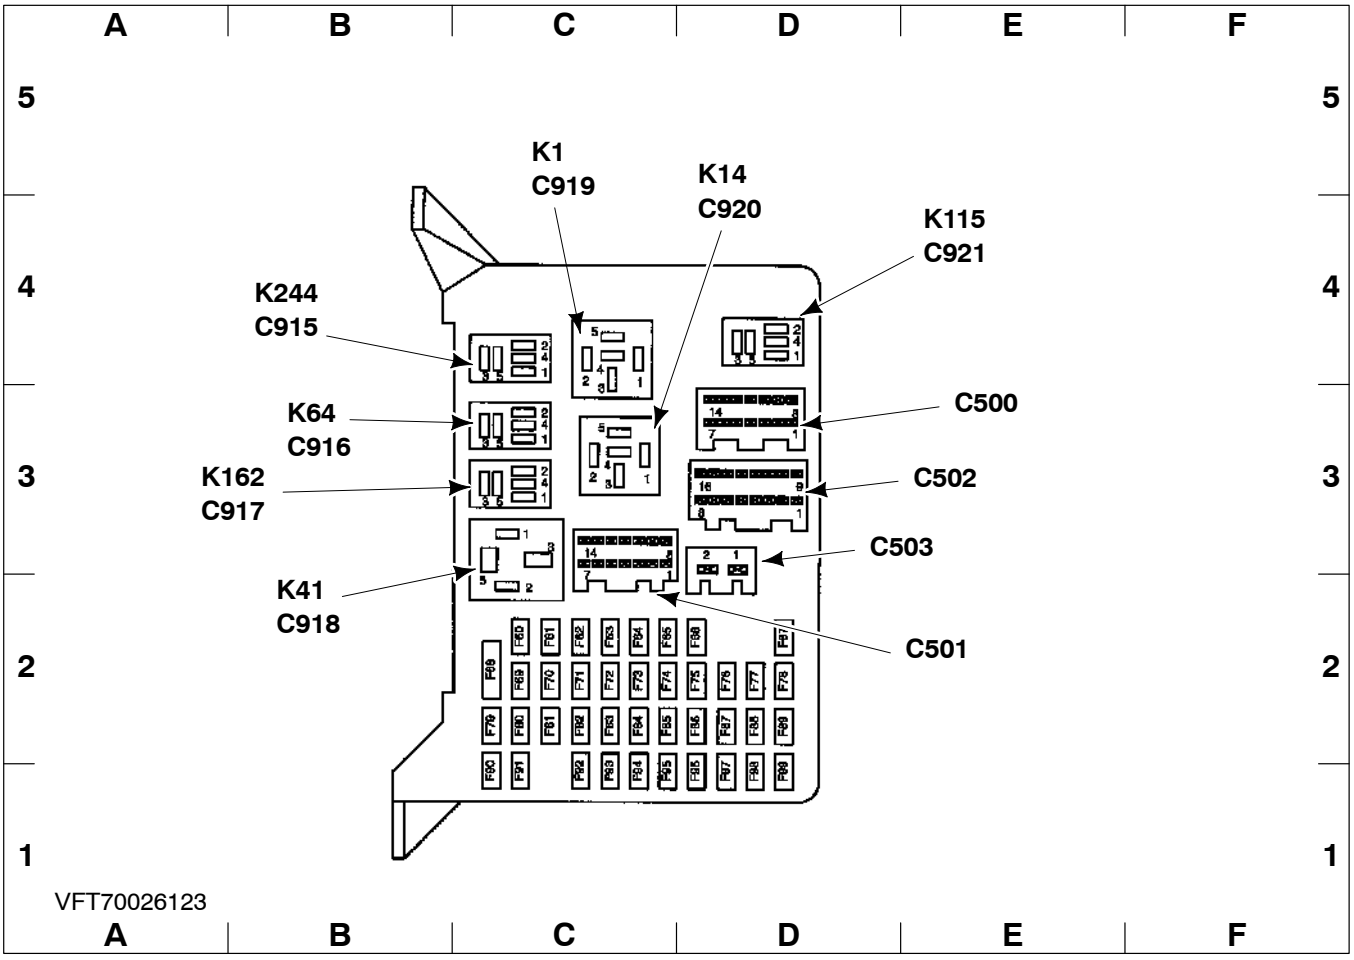


Central Junction Box (CJB), front

C500 . . . . . E 3
C501 . . . . . E 2
C502 . . . . . E 3
C503 . . . . . E 3
C915 . . . . . B 4
C916 . . . . . B 3
C917 . . . . . B 3
C918 . . . . . B 2
C919 . . . . . C 5
C920 . . . . . D 4
C921 . . . . . E 4
K1 . . . Heated rear window relay . . . . . C 5
K14 . . Blower motor relay . . . . . D 5
K41 . . Ignition relay . . . . . B 2
K64 . . Rear window wiper relay . . . . . B 3
K115 . Battery saver relay . . . . . E 4
K162 . Windshield wiper relay . . . . . B 3
K244 . High beam relay . . . . . B 4

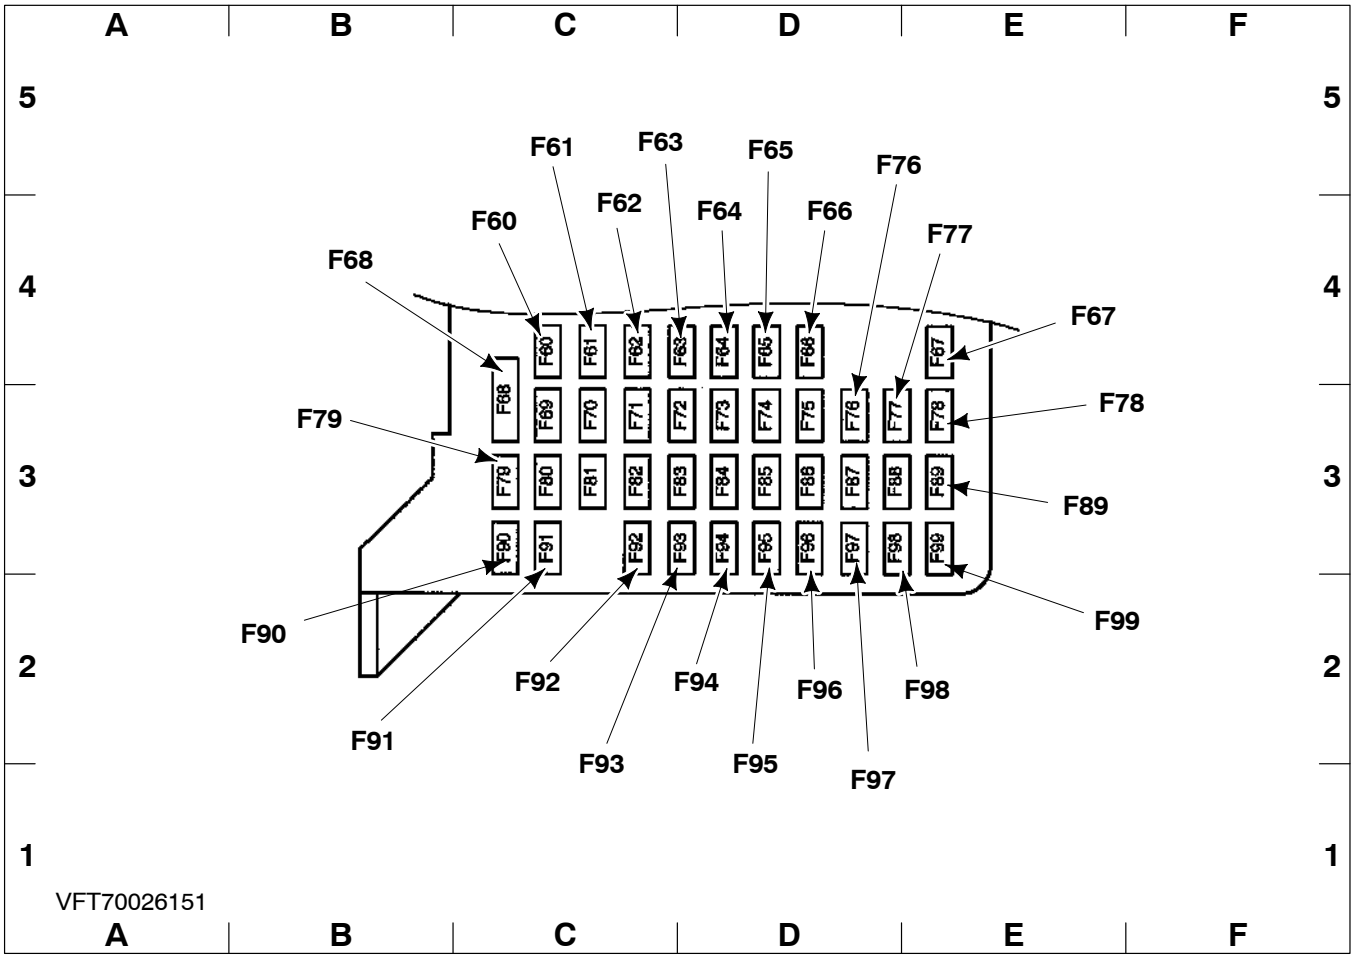


Central Junction Box (CJB), front (partial)

F60	C 4	F79	B 3
F61	C 5	F89	E 3
F62	C 4	F90	B 2
F63	C 5	F91	B 2
F64	D 4	F92	C 2
F65	D 5	F93	C 1
F66	D 4	F94	D 2
F67	E 4	F95	D 1
F68	B 4	F96	D 2
F76	D 5	F97	D 1
F77	E 4	F98	E 2
F78	E 3	F99	E 2

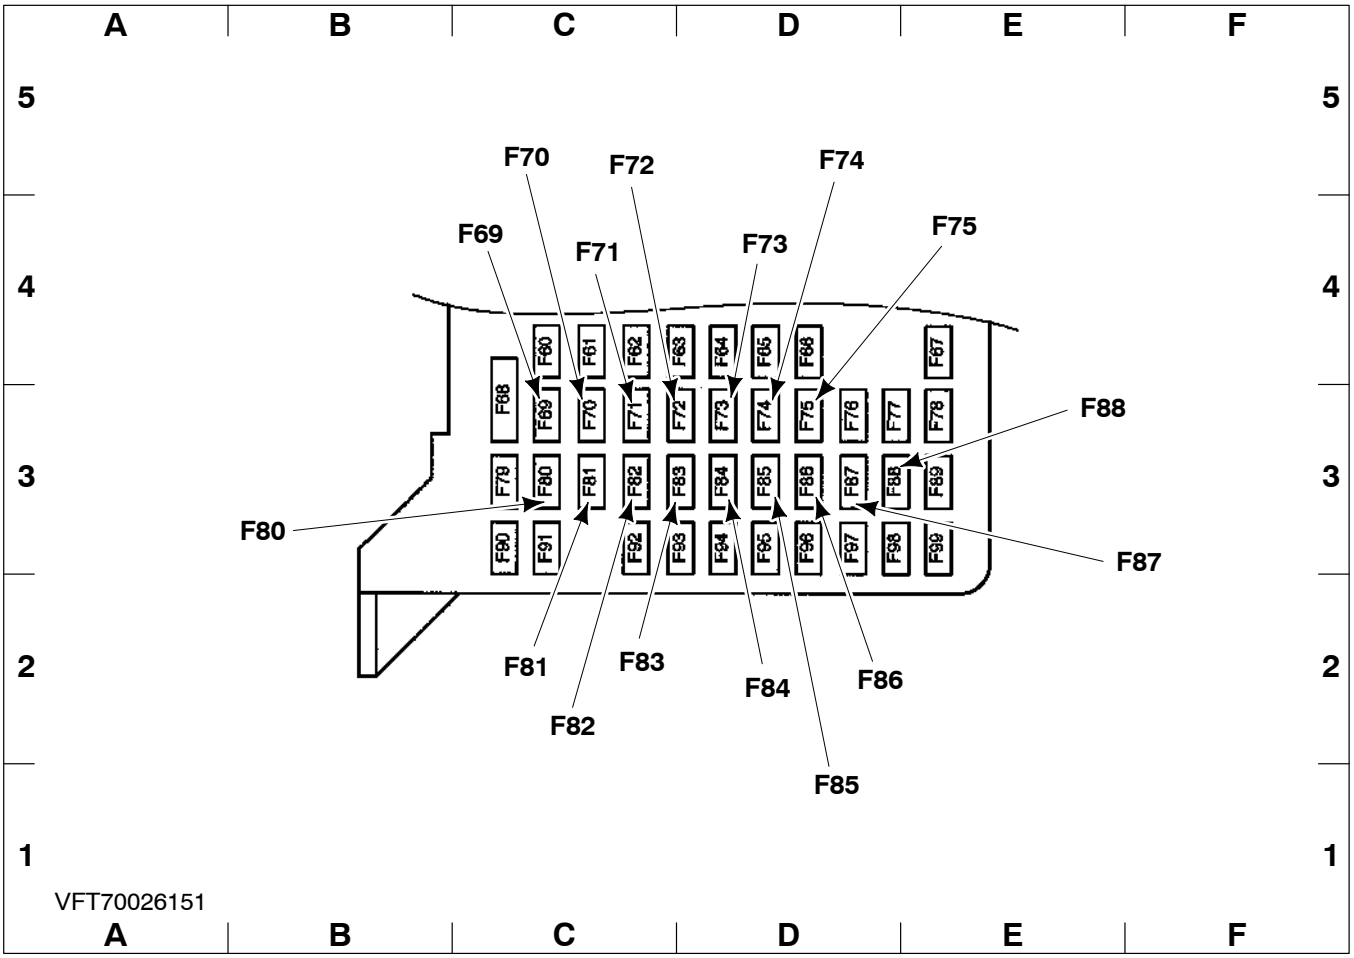


Central Junction Box (CJB), front (partial)

F69	C 4	F81	C 2
F70	C 5	F82	C 2
F71	C 4	F83	C 2
F72	C 5	F84	D 2
F73	D 4	F85	D 1
F74	D 5	F86	D 2
F75	E 4	F87	F 3
F80	B 3	F88	E 3

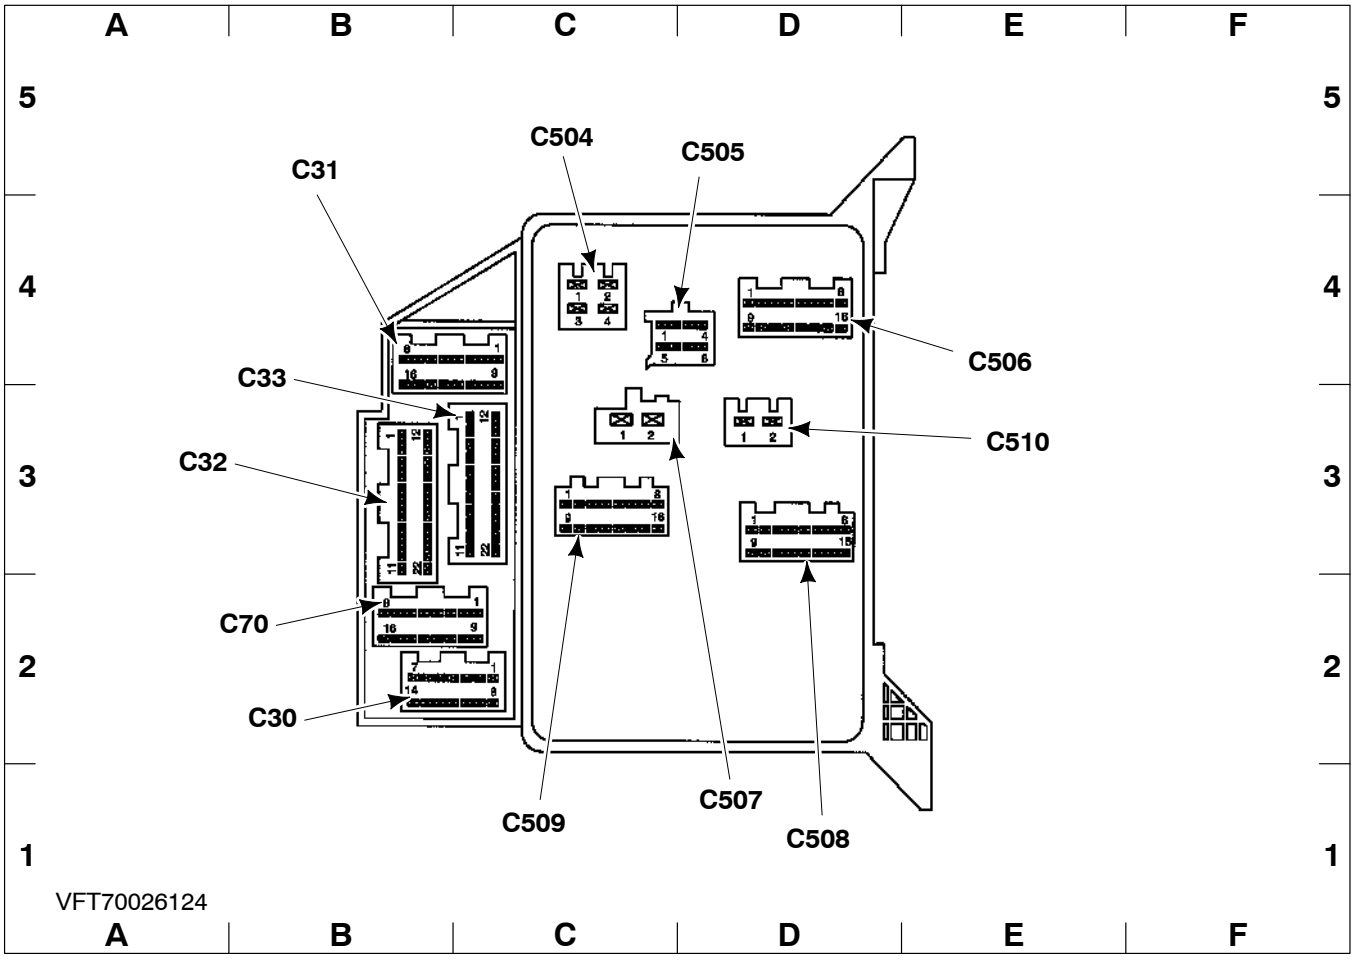


Central Junction Box (CJB), rear

C30	B 2	C505	D 5
C31	B 5	C506	E 4
C32	A 3	C507	D 1
C33	B 4	C508	D 1
C70	B 2	C509	C 1
C504	C 5	C510	E 3

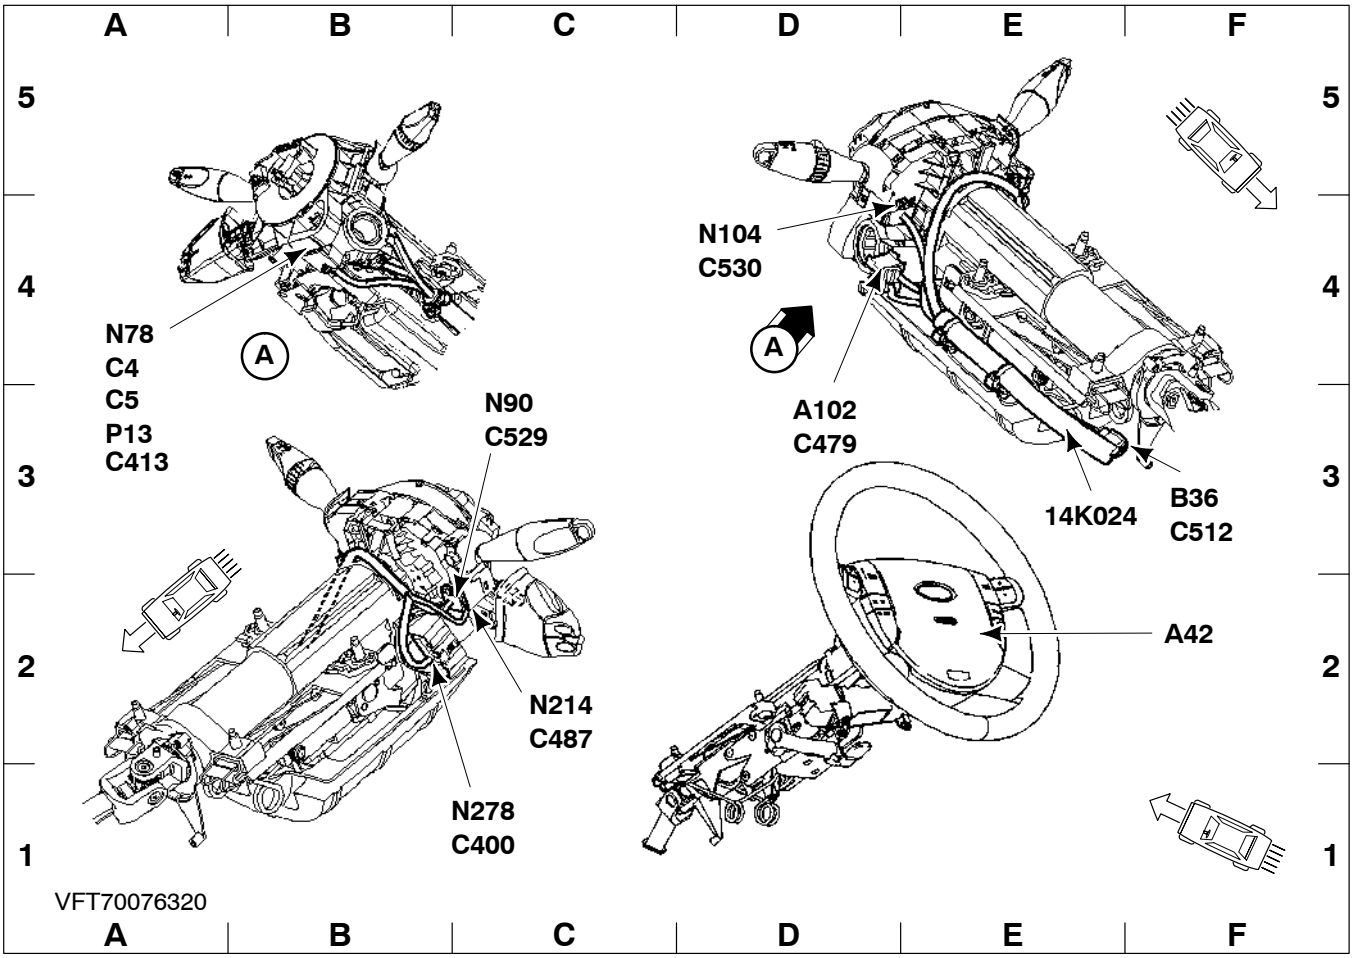


At steering column

14K024	Wiring harness – Dash panel	E 3
A42	Driver air bag unit	F 2
A102	Passive anti–theft system transceiver module	D 3
B36	Steering position sensor	F 3
C4		A 4
C5		A 3
C400		C 1
C413		A 3
C479		D 3
C487		C 2
C512		F 3
C529		C 3
C530		D 4
N78	Steering wheel/speed control switch	A 4
N90	Turn signal switch	C 3
N104	Wiper/washer switch	D 4
N214	Radio remote control switch	C 2
N278	Ignition switch	C 1
P13	Clock spring	A 3

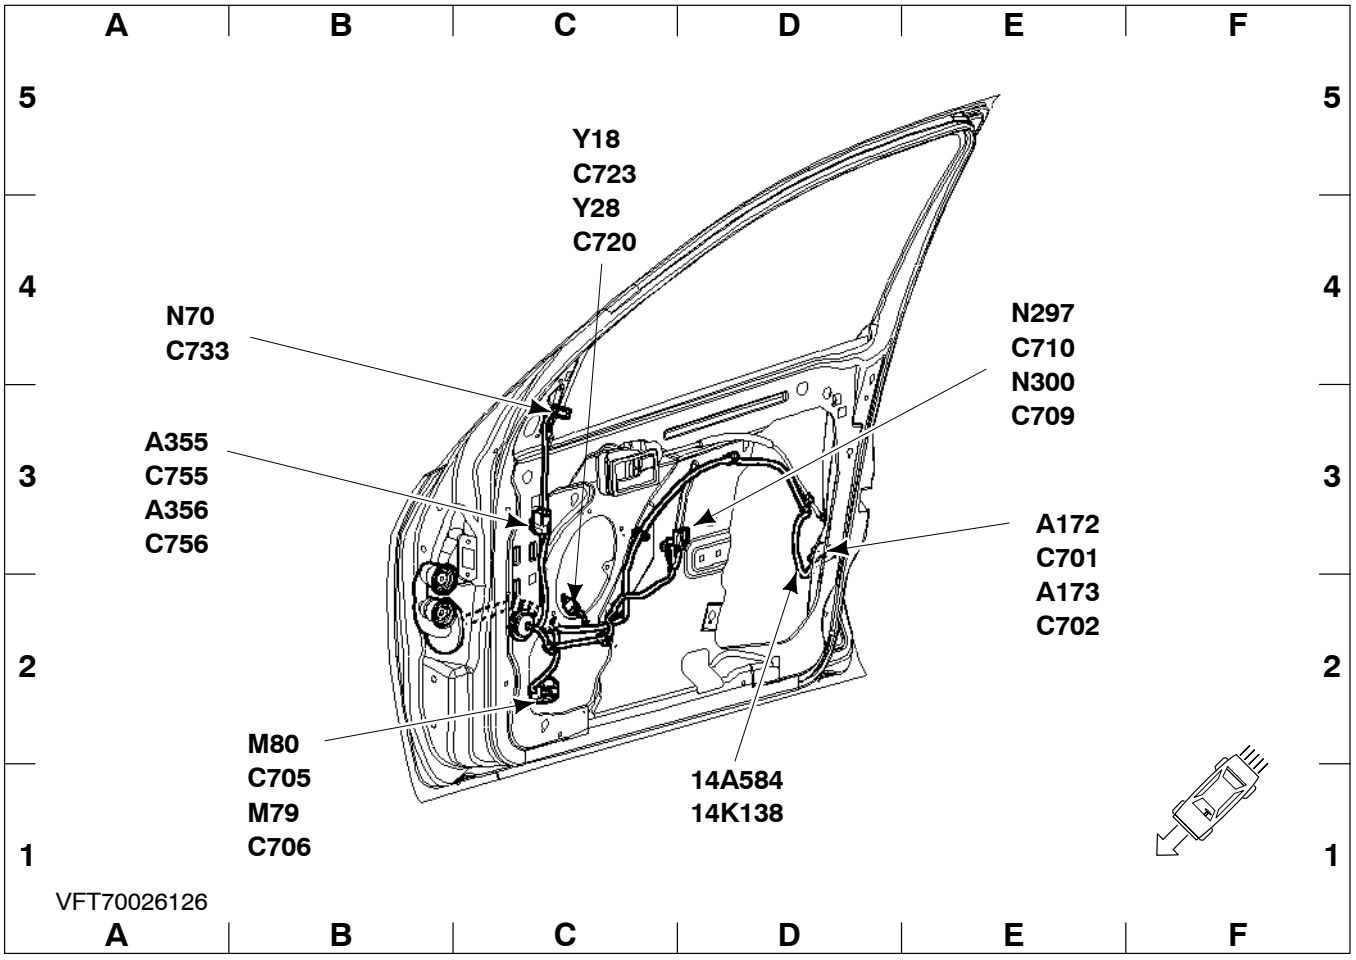


Front door

14A584	Wiring harness – Doors	D 1	
14K138	Wiring harness – Passenger door	D 1	
A172	Door lock unit, driver side front	E 3	
A173	Door lock unit, passenger side front	E 2	
A355	Exterior mirror, driver side	A 3	
A356	Exterior mirror, passenger side	A 3	
C701		E 3	
C702		E 2	
C705		B 1	
C706		B 1	
C709		E 3	
C710		E 4	
C720		C 4	
C723		C 5	
C733		A 4	
C755		A 3	
C756		A 3	
M79	Window regulator motor, passenger side front	B 1	
M80	Window regulator motor, driver side front	B 2	
N70	Power mirror adjust switch	A 4	
N297	Window control switch, passenger side front	E 4	
N300	Window control switch, driver (multiple)	E 4	
Y18	Right front speaker	C 5	
Y28	Left front speaker	C 4	

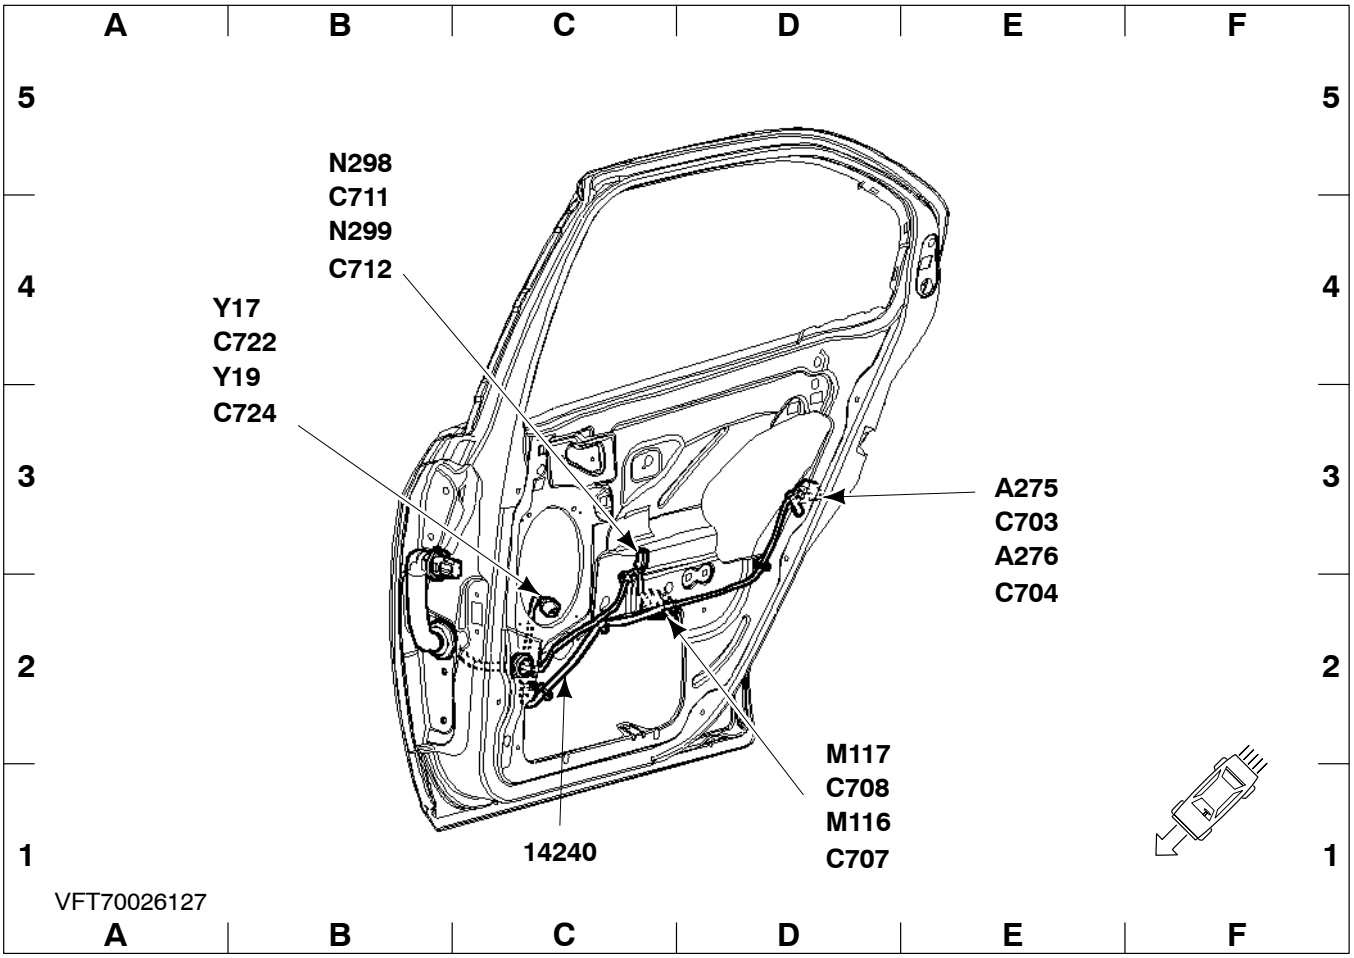


Rear door

14240	Wiring harness – Rear doors	C 1
A275	Door lock unit, LH rear	E 3
A276	Door lock unit, RH rear	E 3
C703		E 3
C704		E 2
C707		D 1
C708		D 1
C711		B 4
C712		B 4
C722		B 4
C724		B 3
M116	Window regulator motor, LH rear	D 1
M117	Window regulator motor, RH rear	D 2
N298	Window control switch, LH rear	B 5
N299	Window control switch, RH rear	B 4
Y17	Left rear speaker	B 4
Y19	Right rear speaker	B 4

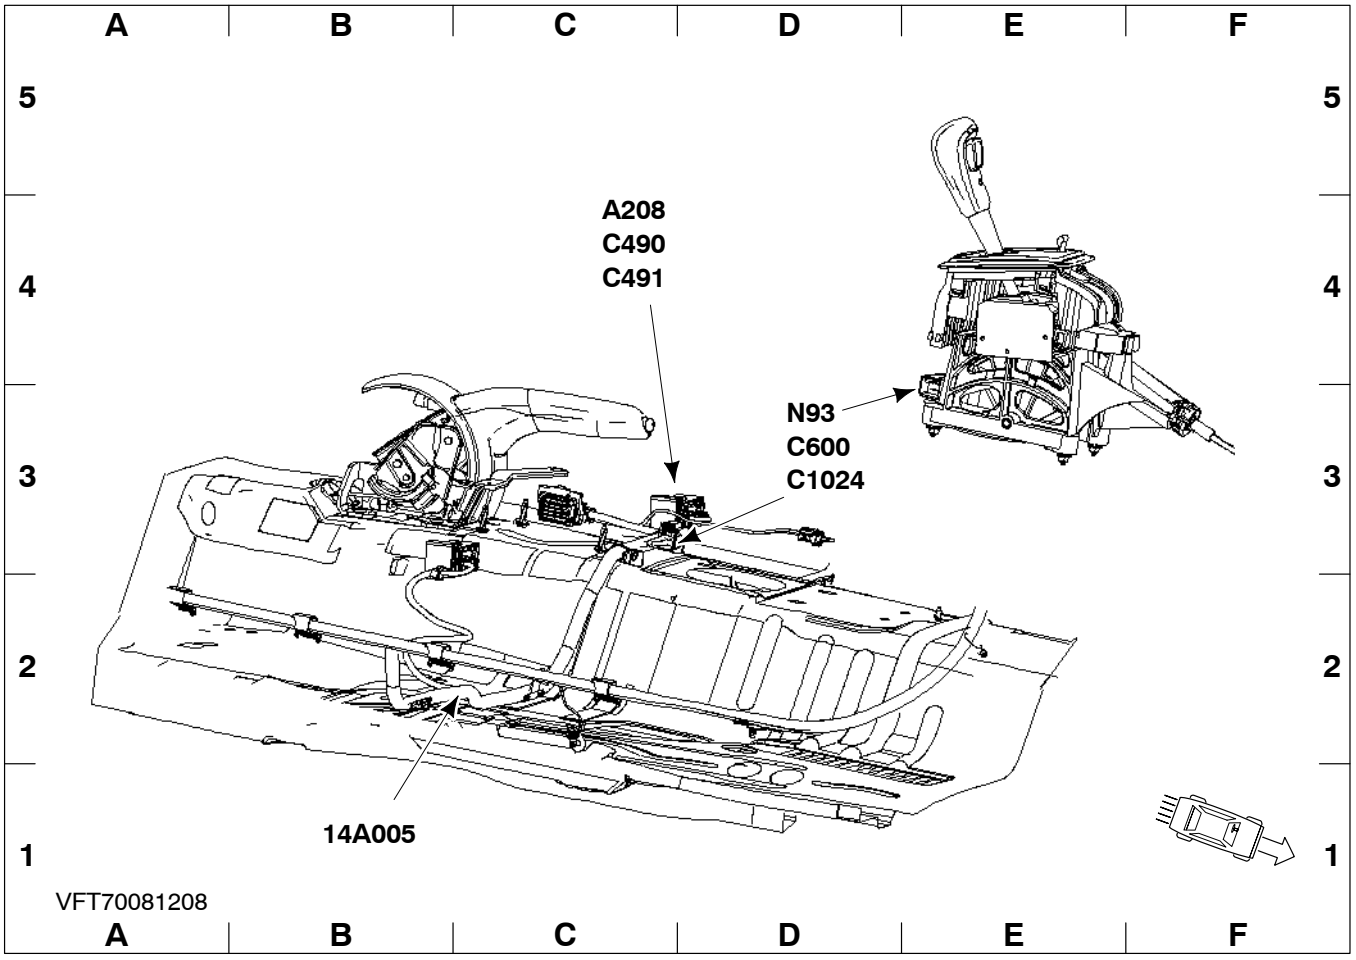


Centre console

14A005 Wiring harness – Body Main . . . . . B 1
A208 . Restraints Control Module (RCM) . . . . . C 4
C490 . . . . . C 4
C491 . . . . . C 4
C600 . . . . . D 3
C1024 . . . . . D 3
N93 . . Gearshift lever unit . . . . . D 3

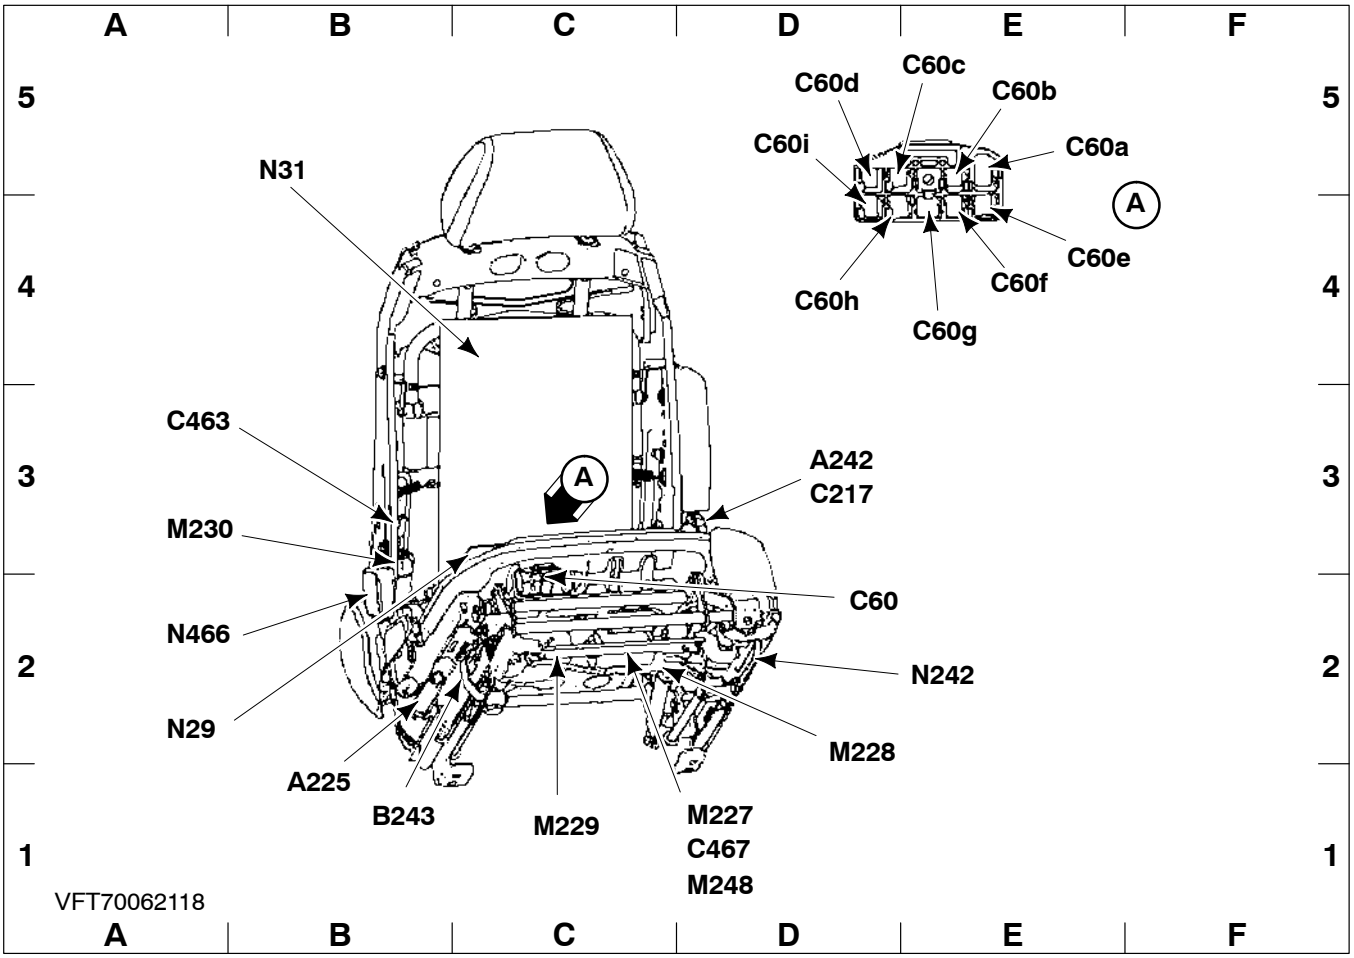


driver's seat, LHD

A225 . Driver safety belt retractor pretensioner B 1
A242 . Side air bag module, driver . . . . . D 3
B243 . Seat position sensor, driver . . . . . B 1
C60 . . . . . D 2
C60i . . . . . D 5
C60d . . . . . D 5
C60c . . . . . E 5
C60b . . . . . E 5
C60a . . . . . E 5
C60e . . . . . E 4
C60f . . . . . E 4
C60g . . . . . E 4
C60g . . . . . E 4
C60h . . . . . D 4
C217 . . . . . D 3
C463 . . . . . A 3
C467 . . . . . D 1
M227 Driver seat horizontal motor . . . . . D 1
M228 Driver seat rear height motor . . . . . D 2
M229 Driver seat front height motor . . . . . C 1
M230 Driver seat backrest motor . . . . . A 3
M248 Seat motor . . . . . D 1
N29 . . Heated seat cushion, LH front . . . . . A 2
N31 . . Heated seat back, LH front . . . . . B 5
N242 . Seat control switch, driver . . . . . E 2
N466 . Safety belt buckle switch, driver . . . . . A 2

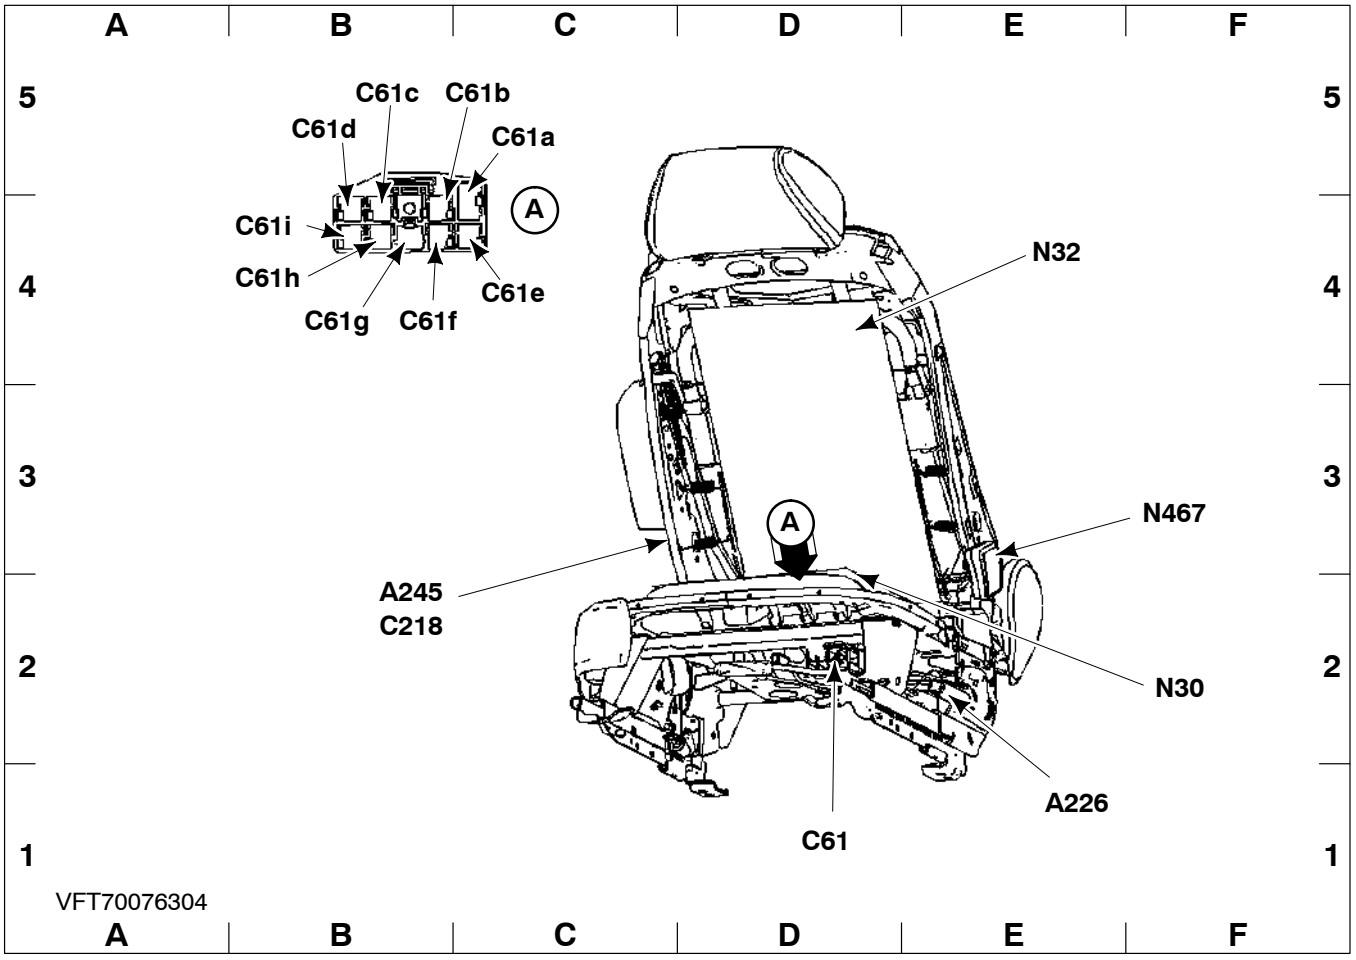


passenger's seat, LHD

A226 . Passenger safety belt retractor pretensioner . . . . . E 1
A245 . Side air bag module, passenger . . . . . B 2
C61 . . . . . D 1
C61d . . . . . B 5
C61c . . . . . B 5
C61b . . . . . C 5
C61a . . . . . C 5
C61i . . . . . B 4
C61h . . . . . B 4
C61g . . . . . B 4
C61f . . . . . B 4
C61e . . . . . C 4
C218 . . . . . B 2
N30 . . Heated seat cushion, RH front . . . . . F 2
N32 . . Heated seat back, RH front . . . . . E 4
N467 . Safety belt buckle switch, passenger . . . . F 3

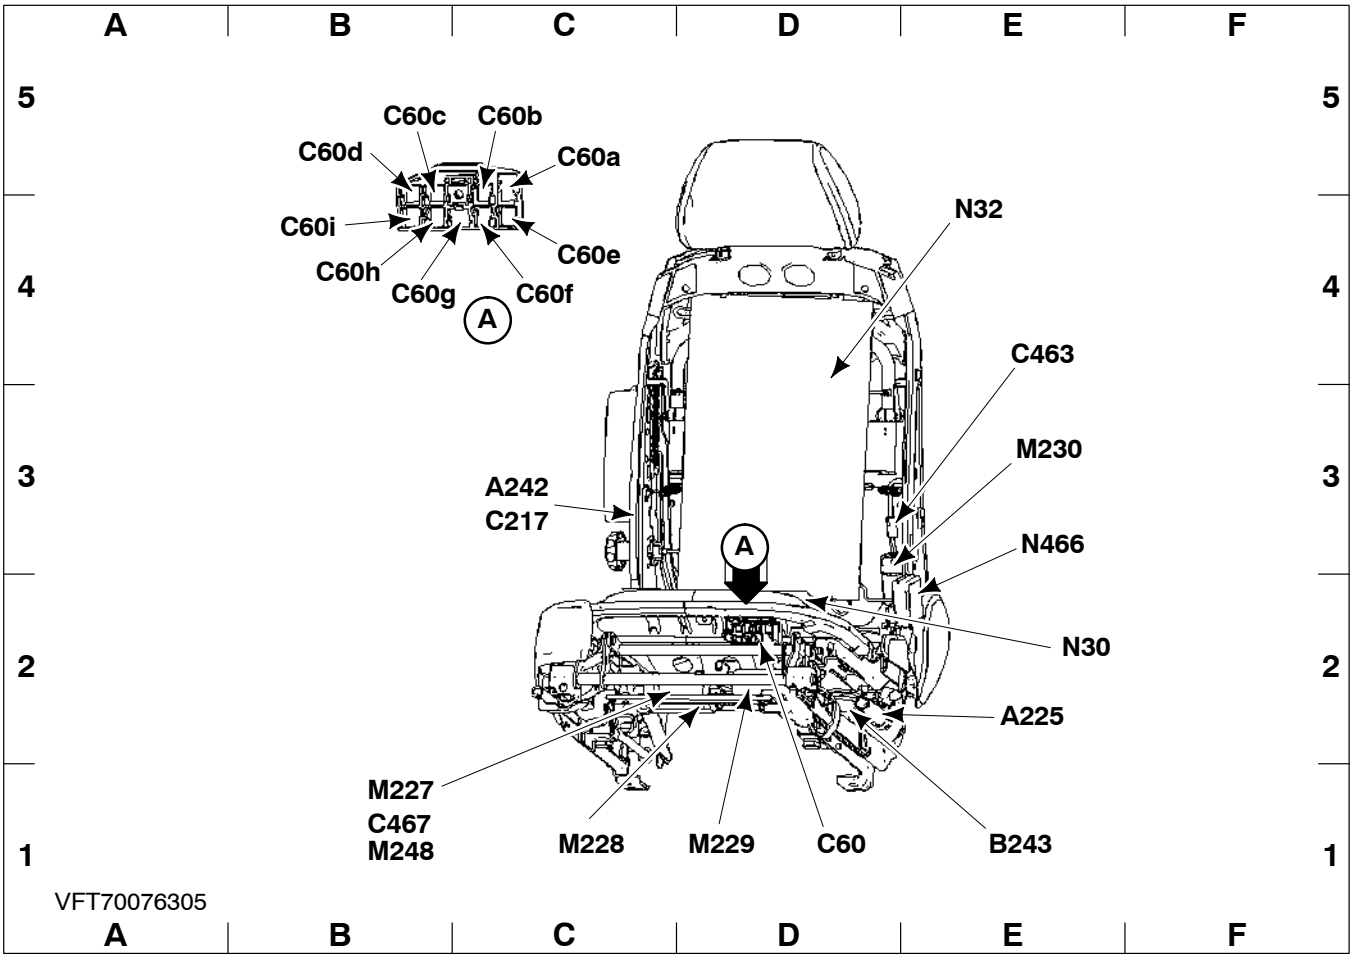


driver's seat, RHD

A225 . Driver safety belt retractor pretensioner . E 2
A242 . Side air bag module, driver . . . . . C 3
B243 . Seat position sensor, driver . . . . . E 1
C60 . . . . . D 1
C60d . . . . . B 5
C60c . . . . . B 5
C60b . . . . . C 5
C60a . . . . . C 5
C60i . . . . . B 4
C60h . . . . . B 4
C60g . . . . . B 4
C60e . . . . . C 4
C60f . . . . . C 4
C217 . . . . . C 3
C463 . . . . . E 4
C467 . . . . . B 1
M227 Driver seat horizontal motor . . . . . B 1
M228 Driver seat rear height motor . . . . . C 1
M229 Driver seat front height motor . . . . . D 1
M230 Driver seat backrest motor . . . . . E 3
M248 Seat motor . . . . . B 1
N30 . . Heated seat cushion, RH front . . . . . E 2
N32 . . Heated seat back, RH front . . . . . E 4
N466 . Safety belt buckle switch, driver . . . . . E 3

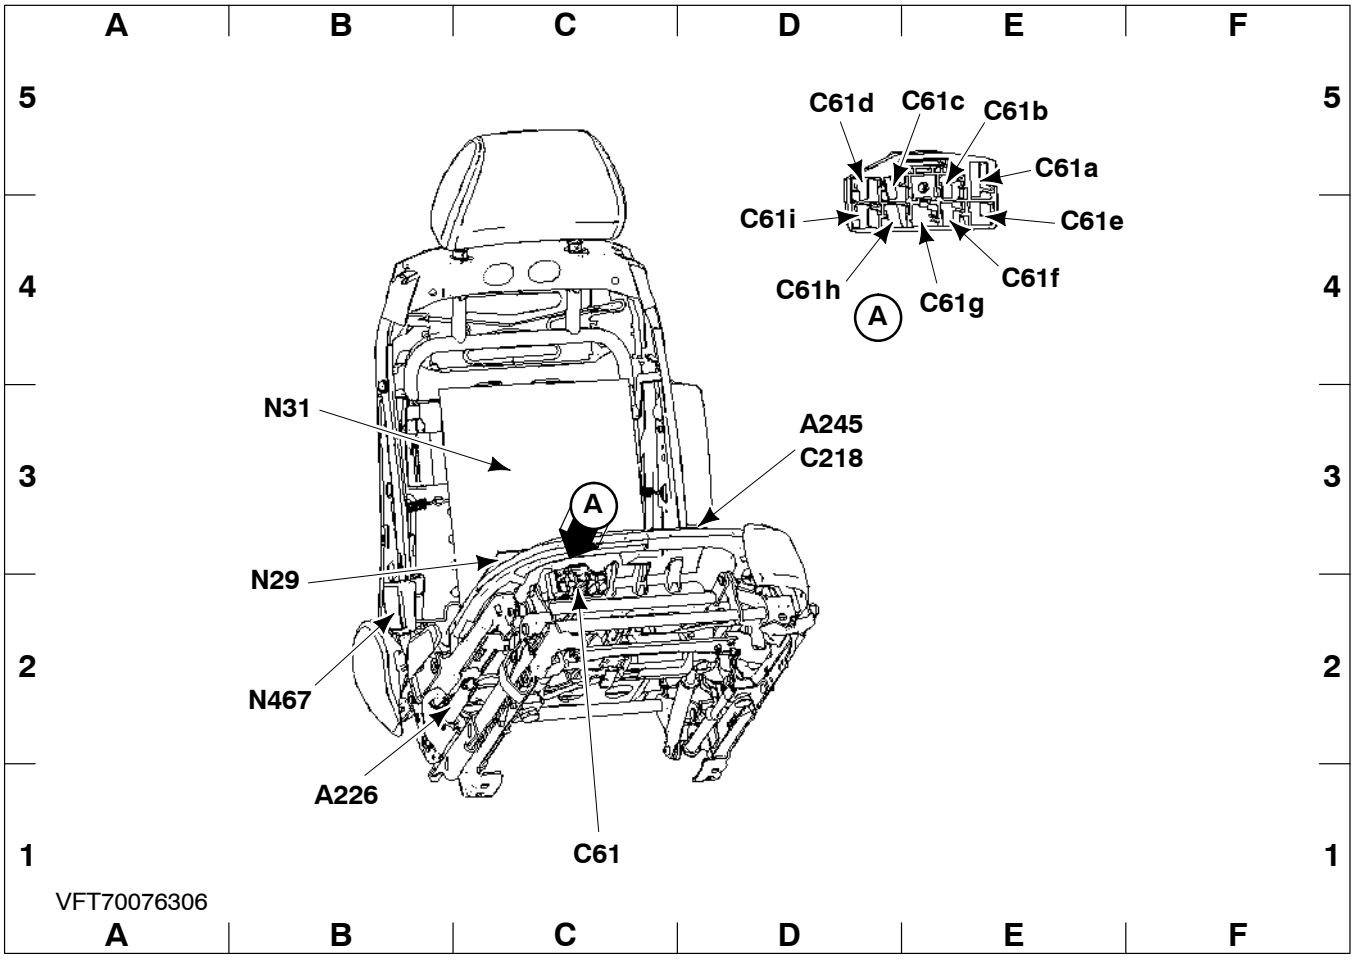


passenger's seat, RHD

A226 . Passenger safety belt retractor pretensioner . . . . . B 1
A245 . Side air bag module, passenger . . . . . D 3
C61 . . . . . C 1
C61i . . . . . D 4
C61d . . . . . D 5
C61c . . . . . E 5
C61b . . . . . E 5
C61a . . . . . E 5
C61e . . . . . E 4
C61f . . . . . E 4
C61g . . . . . E 4
C61h . . . . . D 4
C218 . . . . . D 3
N29 . . Heated seat cushion, LH front . . . . . B 2
N31 . . Heated seat back, LH front . . . . . B 3
N467 . Safety belt buckle switch, passenger . . . B 2

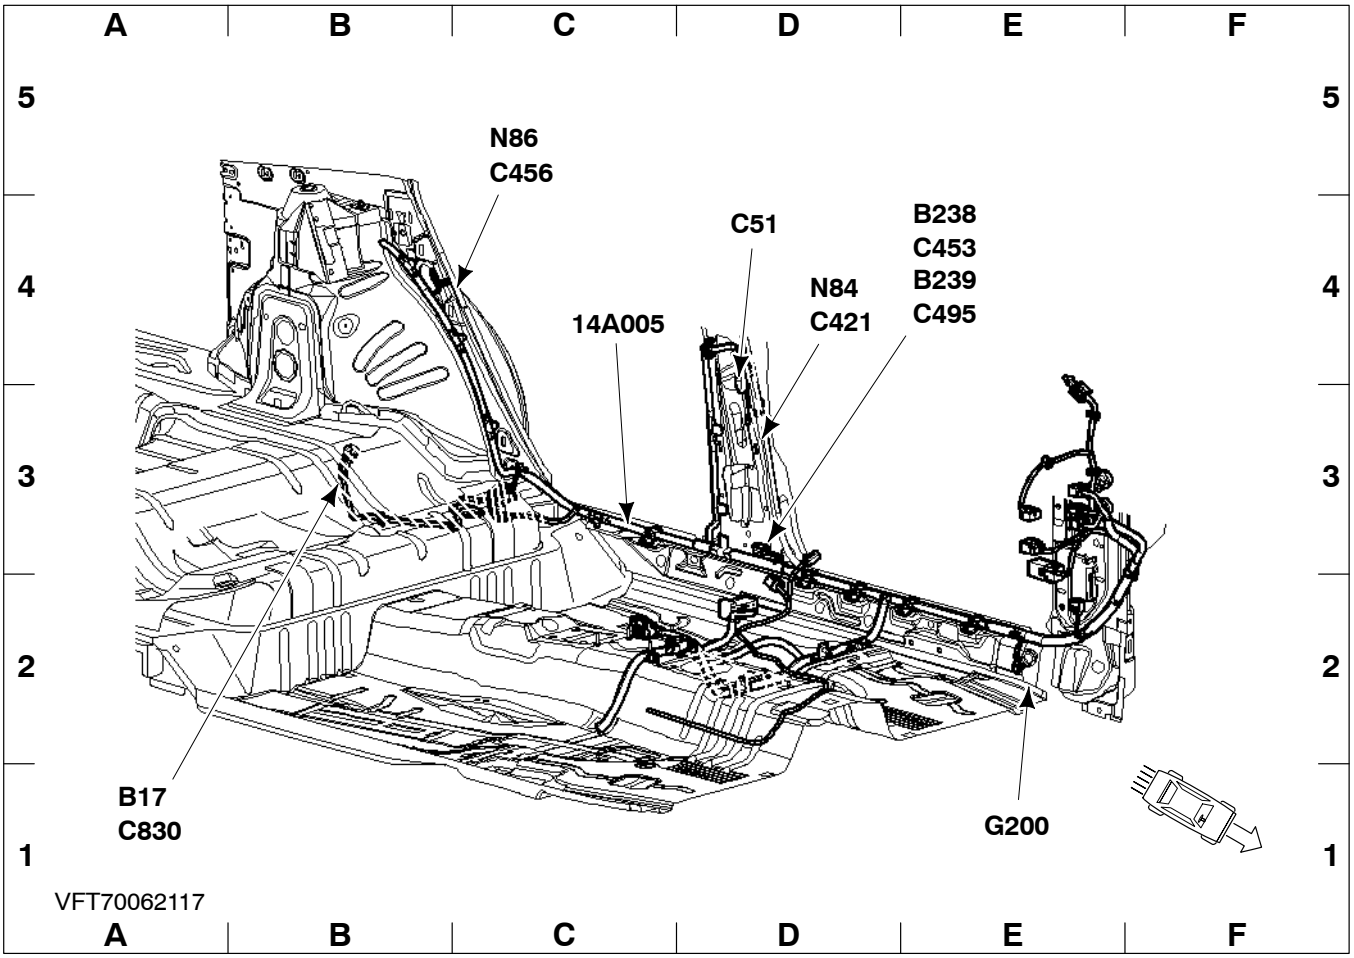


Vehicle floor, LH side

14A005 Wiring harness – Body Main . . . . . C 4
B17 . . Wheel speed sensor, LH side rear . . . . . A 1
B238 . Side air bag sensor, driver . . . . . E 4
B239 . Side air bag sensor, passenger . . . . . E 4
C51 . . . . . D 4
C421 . . . . . D 4
C453 . . . . . E 4
C456 . . . . . C 5
C495 . . . . . E 4
C830 . . . . . A 1
G200 . . . . . E 1
N84 . . Door ajar switch, LH front . . . . . D 4
N86 . . Door ajar switch, LH rear . . . . . C 5

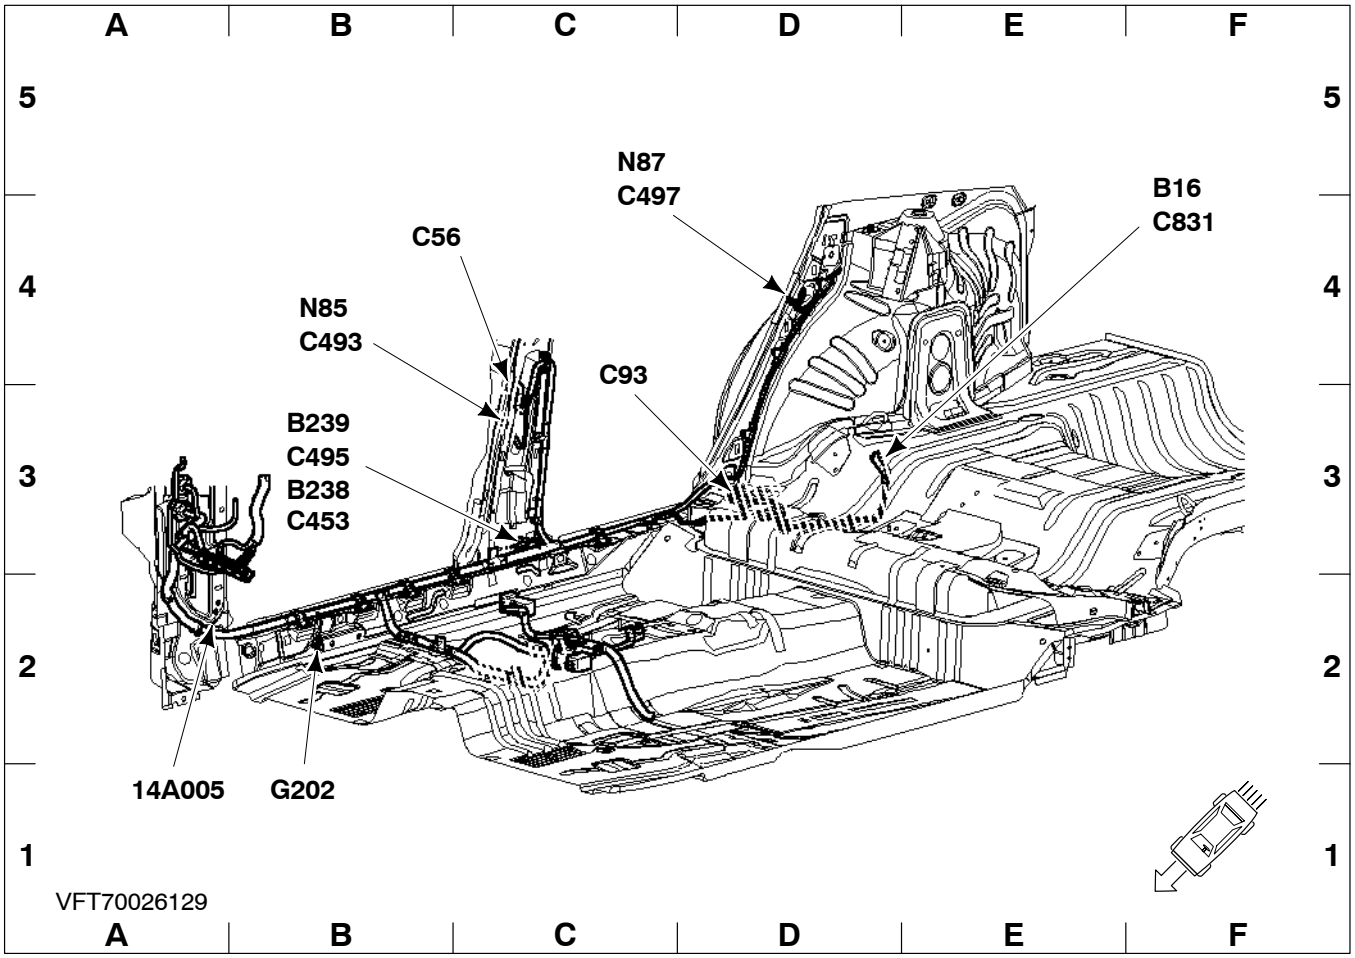


Vehicle floor, RH side

14A005	Wiring harness – Body Main	A 1	
B16	Wheel speed sensor, RH side rear	F 5	
B238	Side air bag sensor, driver	B 3	
B239	Side air bag sensor, passenger	B 3	
C56		B 4	
C93		C 4	
C453		B 3	
C493		B 4	
C495		B 3	
C497		C 4	
C831		F 4	
G202		B 1	
N85	Door ajar switch, RH front	B 4	
N87	Door ajar switch, RH rear	C 5	

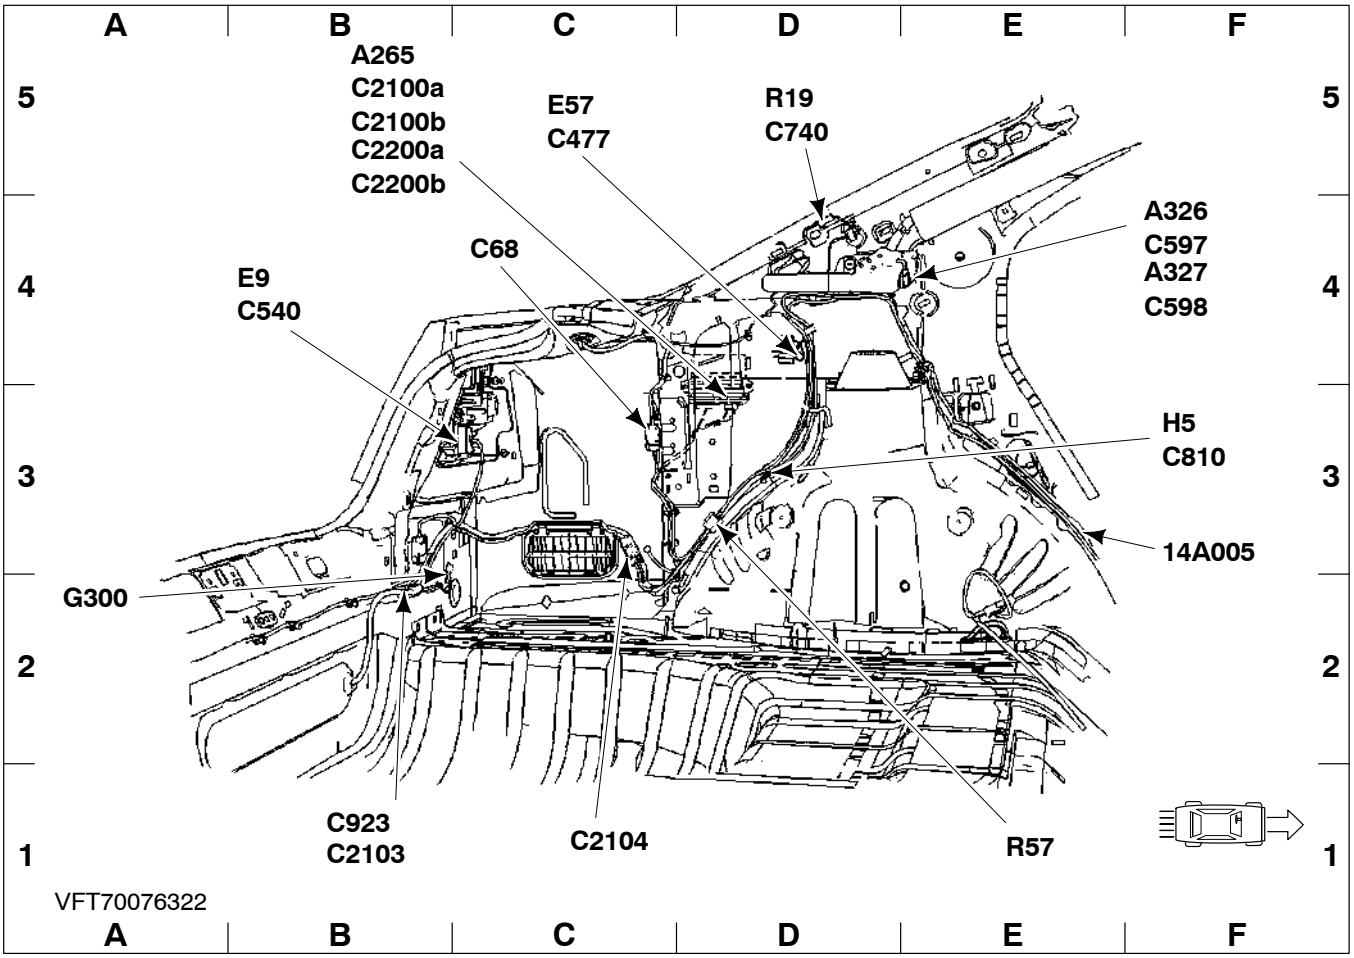


Luggage compartment, LH side, 4–door model

14A005 Wiring harness – Body Main . . . . . F 3
A265 . Parking aid module . . . . . B 5
A326 . Side head air bag module, driver . . . . . F 4
A327 . Side head air bag module, passenger . . . . F 4
C68 . . . . . C 4
C477 . . . . . C 5
C540 . . . . . B 4
C597 . . . . . F 4
C598 . . . . . F 4
C740 . . . . . D 5
C810 . . . . . F 3
C923 . . . . . B 1
C2100a . . . . . B 5
C2100b . . . . . B 5
C2103 . . . . . B 1
C2104 . . . . . C 1
C2200a . . . . . B 5
C2200b . . . . . B 5
E9 . . . Rear lamp assembly, LH side . . . . . B 4
E57 . . Luggage compartment lamp . . . . . C 5
G300 . . . . . A 2
H5 . . . Anti–theft alarm horn . . . . . F 3
R19 . . Rear window heater . . . . . D 5
R57 . . Resistor . . . . . E 1

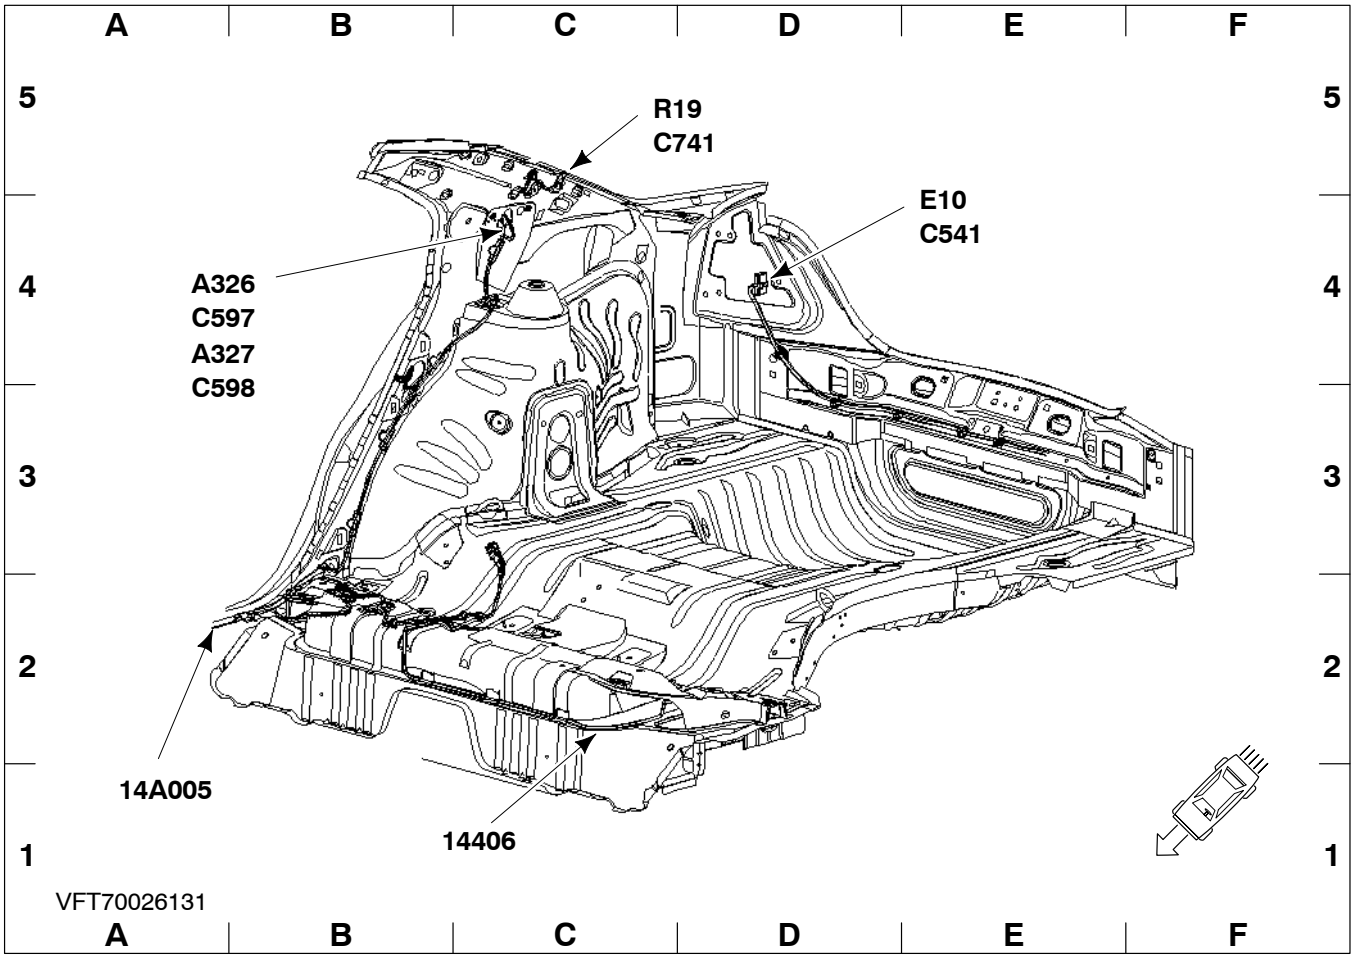


Luggage compartment, RH side, 4–door model

14A005 Wiring harness – Body Main ..... A 1
14406 Wiring harness – Fuel tank sender ..... C 1
A326 . Side head air bag module, driver ..... A 4
A327 . Side head air bag module, passenger ... A 4
C541 ..... E 4
C597 ..... A 4
C598 ..... A 3
C741 ..... D 5
E10 . . Rear lamp assembly, RH side ..... E 4
R19 . . Rear window heater ..... D 5

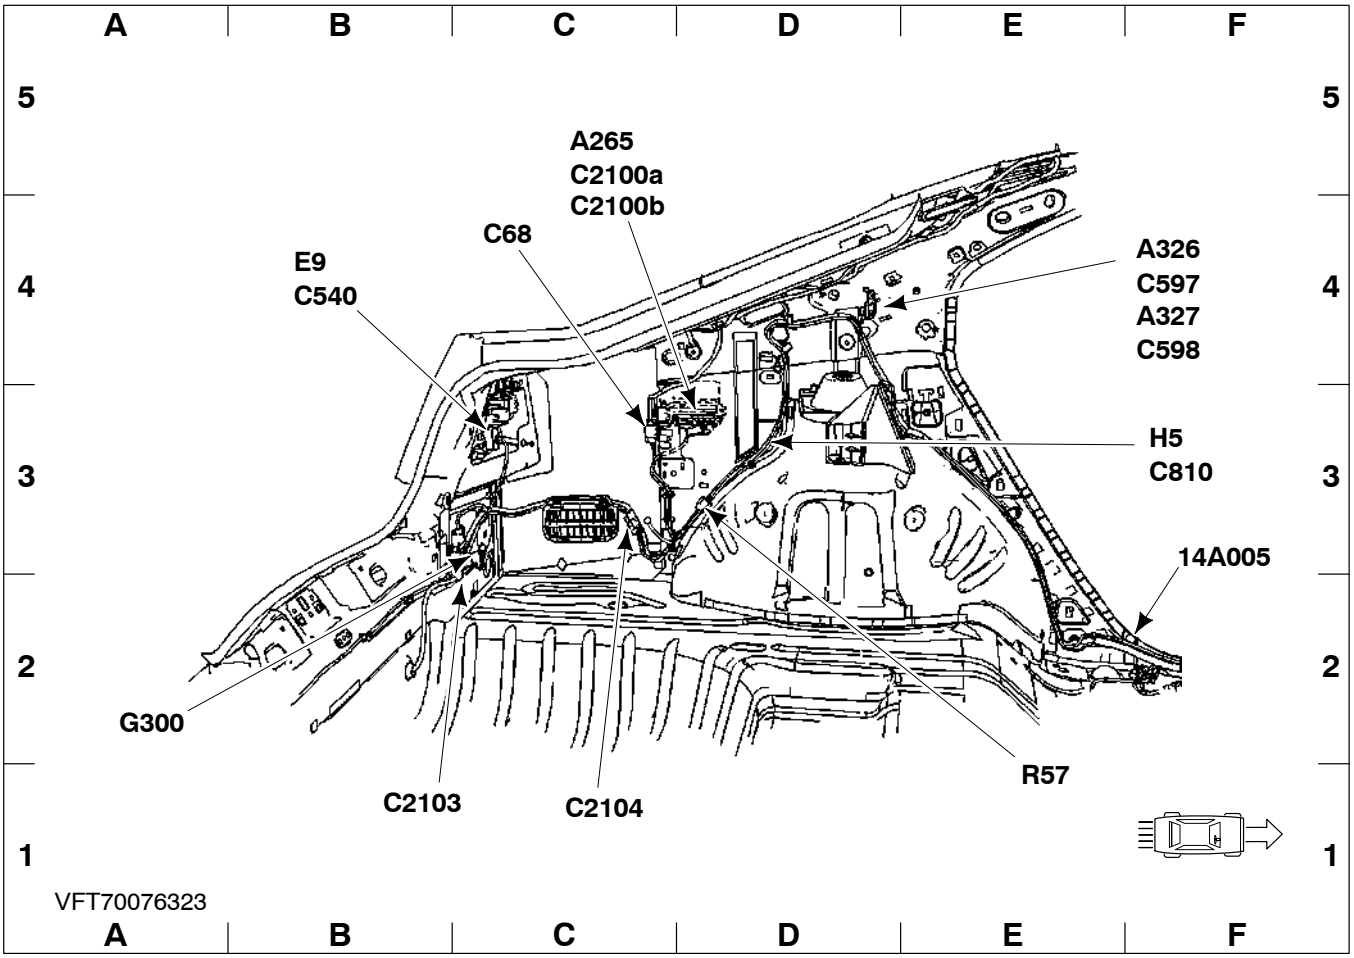


Luggage compartment, LH side, 5–door model

14A005 Wiring harness – Body Main . . . . . F 3
A265 . Parking aid module . . . . . C 5
A326 . Side head air bag module, driver . . . . . F 4
A327 . Side head air bag module, passenger . . . . F 4
C68 . . . . . C 4
C540 . . . . . B 4
C597 . . . . . F 4
C598 . . . . . F 4
C810 . . . . . F 3
C2100a . . . . . C 5
C2100b . . . . . C 4
C2103 . . . . . B 1
C2104 . . . . . C 1
E9 . . . Rear lamp assembly, LH side . . . . . B 4
G300 . . . . . A 2
H5 . . . Anti–theft alarm horn . . . . . F 3
R57 . . Resistor . . . . . E 1

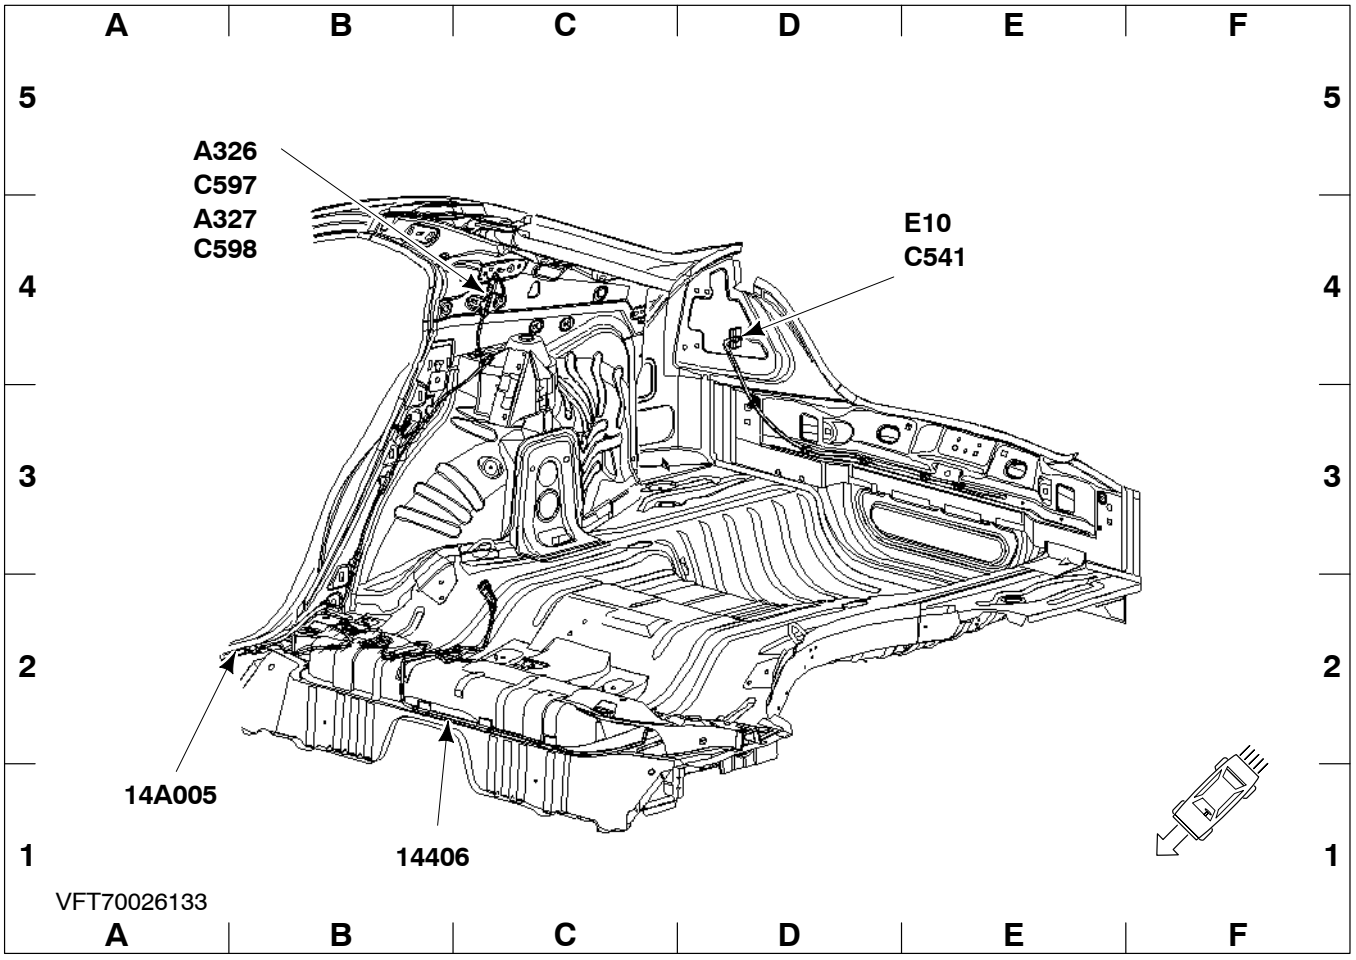


Luggage compartment, RH side, 5–door model

14A005 Wiring harness – Body Main ..... A 1
14406 Wiring harness – Fuel tank sender ..... B 1
A326 . Side head air bag module, driver ..... A 5
A327 . Side head air bag module, passenger ... A 4
C541 ..... E 4
C597 ..... A 5
C598 ..... A 4
E10 .. Rear lamp assembly, RH side ..... E 4

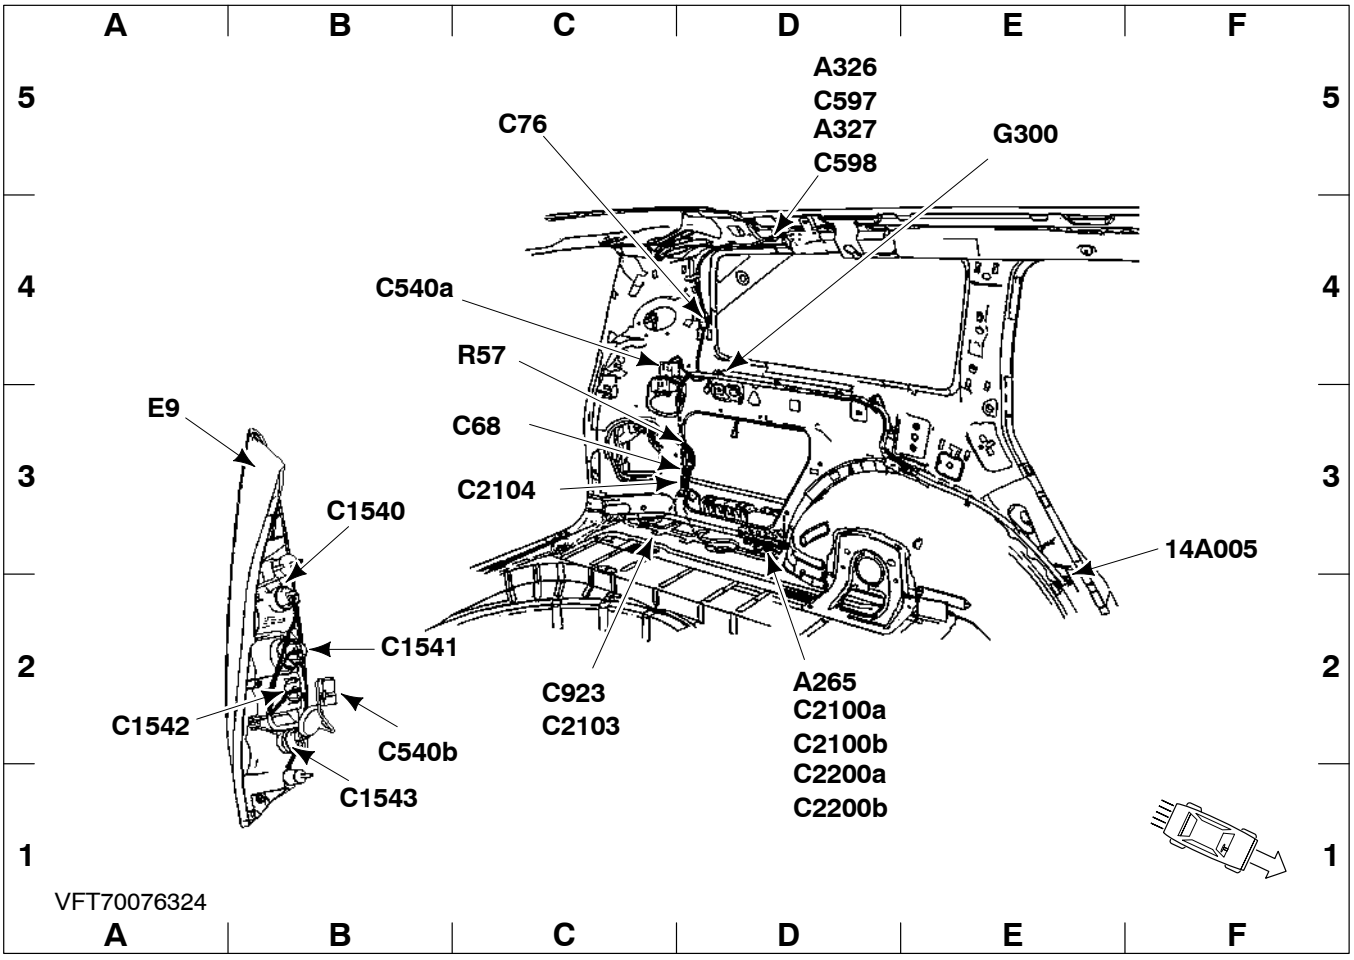


Loading space, LH side, wagon

14A005 Wiring harness – Body Main	F 3	C1541	B 2
A265 . Parking aid module	D 2	C1542	A 2
A326 . Side head air bag module, driver	D 5	C1543	B 1
A327 . Side head air bag module, passenger	D 5	C2100a	D 2
C68	C 3	C2100b	D 2
C76	C 5	C2103	C 2
C540a	B 4	C2104	C 3
C540b	B 2	C2200a	D 1
C597	D 5	C2200b	D 1
C598	D 5	E9 . . . Rear lamp assembly, LH side	A 3
C923	C 2	G300	E 5
C1540	B 3	R57 . . Resistor	C 4

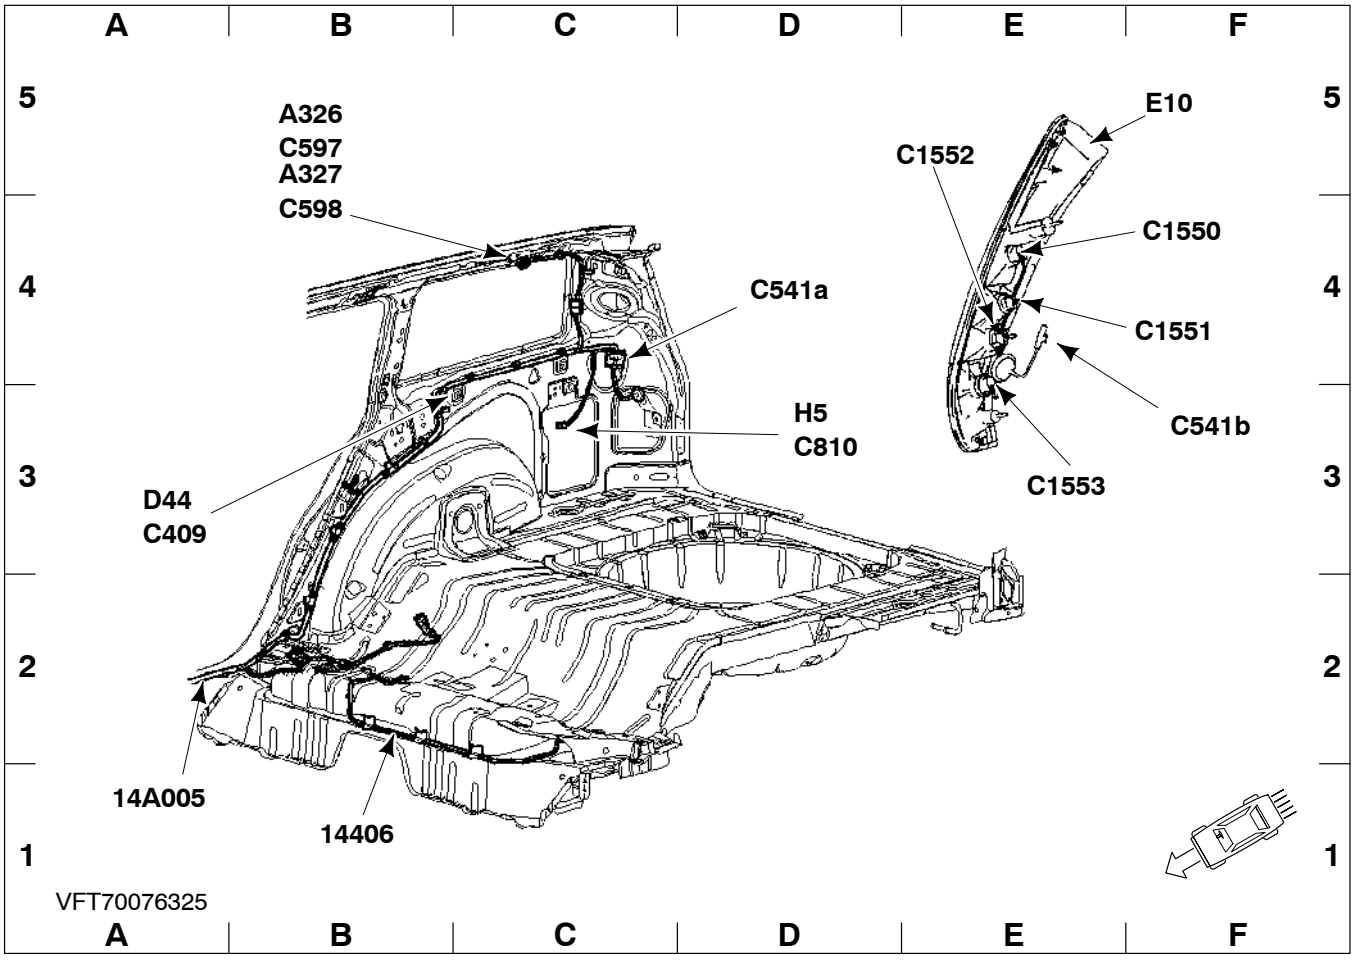


Loading space, RH side, wagon

14A005 Wiring harness – Body Main . . . . . A 1
14406 Wiring harness – Fuel tank sender . . . . . B 1
A326 . Side head air bag module, driver . . . . . B 5
A327 . Side head air bag module, passenger . . . B 5
C409 . . . . . A 3
C541a . . . . . D 4
C541b . . . . . F 3
C597 . . . . . B 5
C598 . . . . . B 4
C810 . . . . . D 3
C1550 . . . . . F 4
C1551 . . . . . F 4
C1552 . . . . . E 5
C1553 . . . . . E 3
D44 . . Power point, RH side rear . . . . . A 3
E10 . . Rear lamp assembly, RH side . . . . . F 5
H5 . . . Anti–theft alarm horn . . . . . D 3

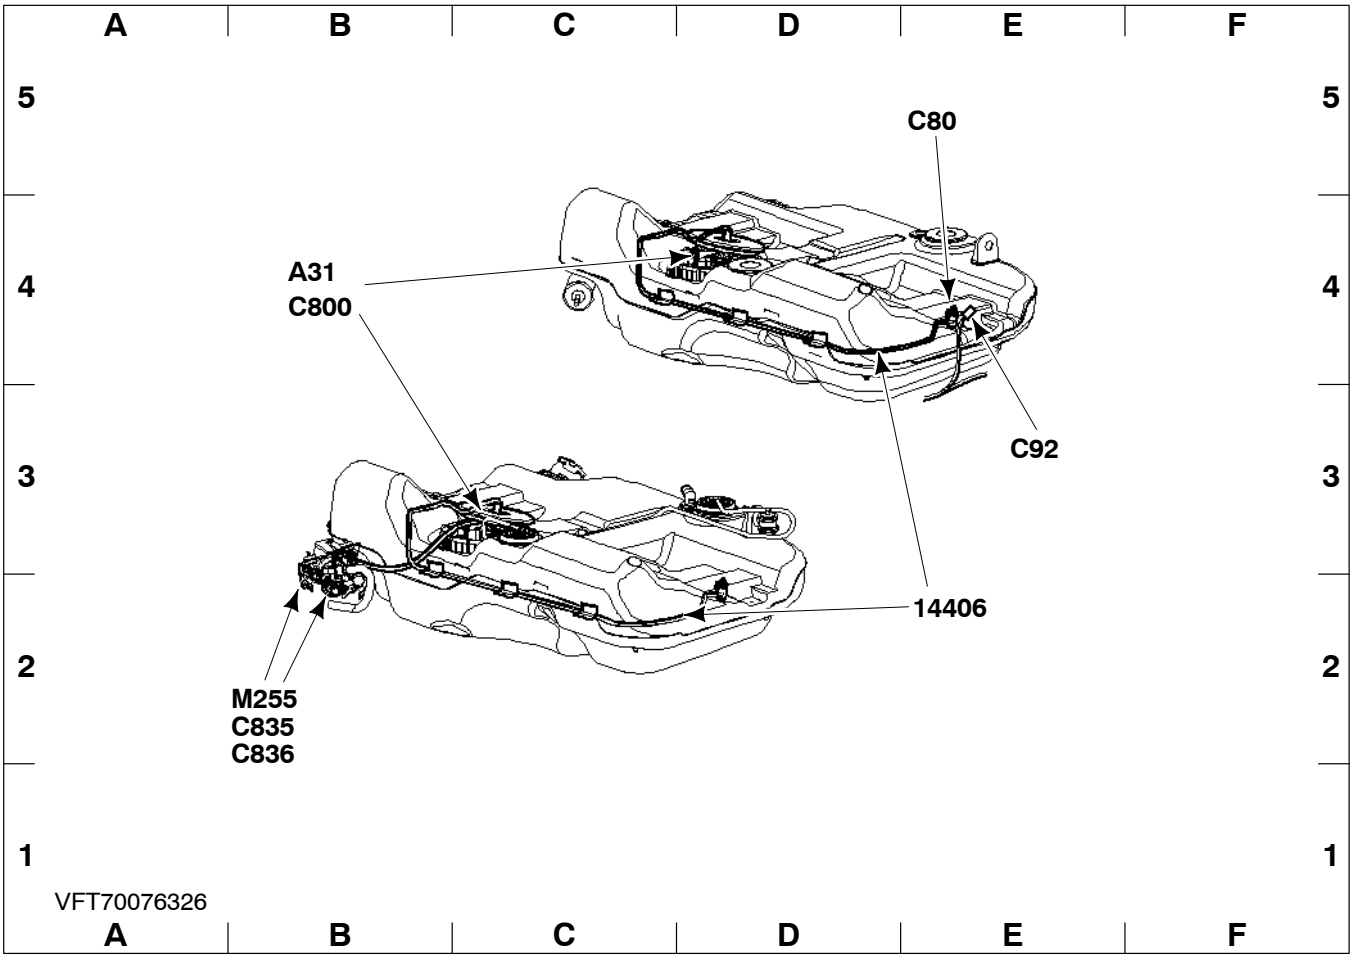


Fuel tank

14406	Wiring harness – Fuel tank sender	E 2	C800		B 4
A31	Fuel tank unit	B 4	C835		B 2
C80		E 5	C836		B 2
C92		E 3	M255	Fuel lift pump motor	B 2

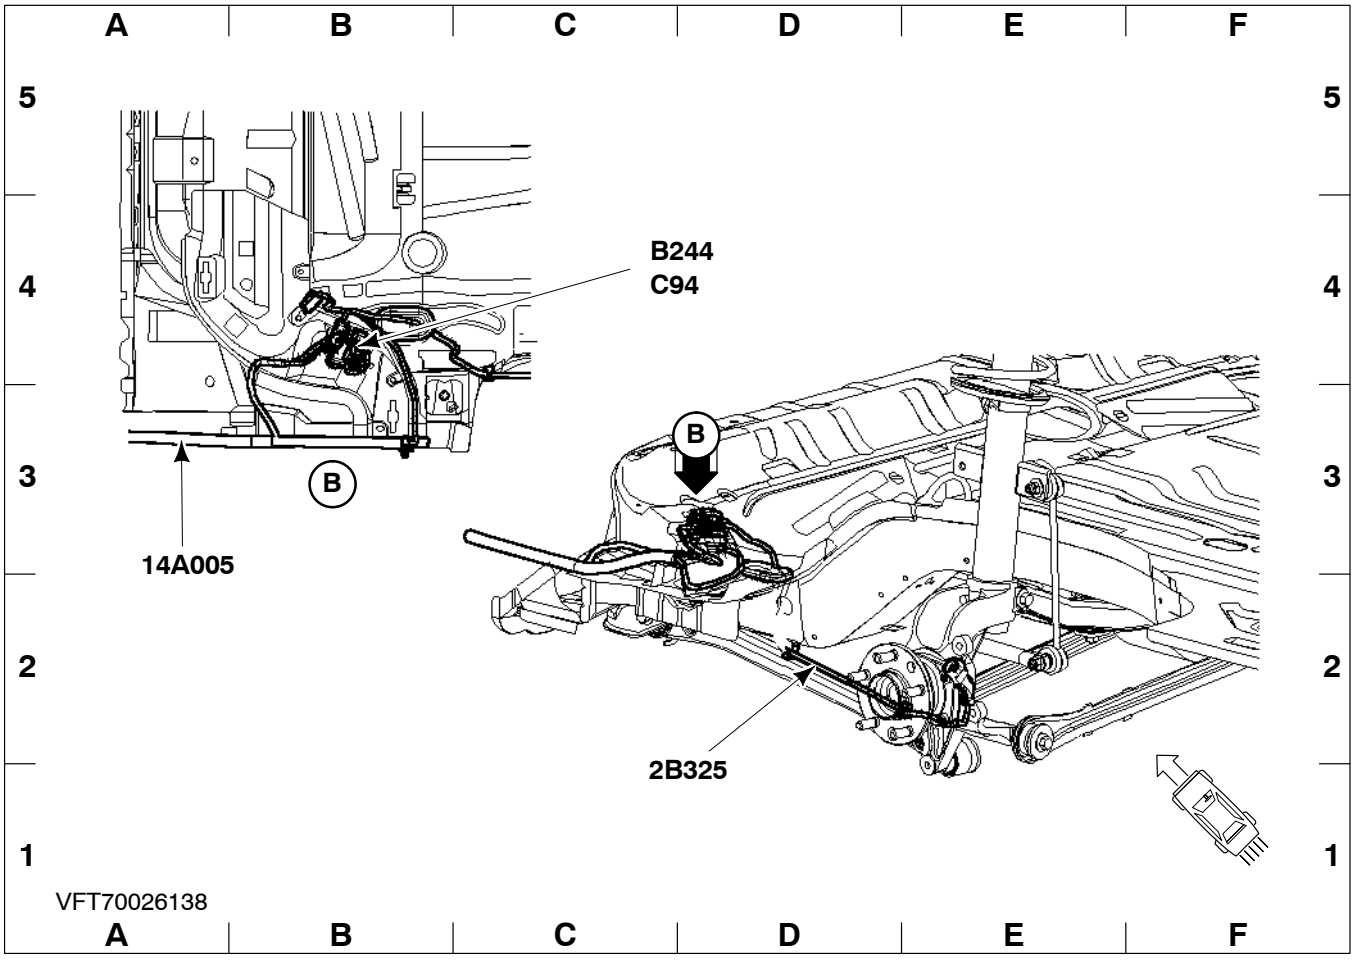


Ride suspension, rear, 4–door model/5–door model

14A005	Wiring harness – Body Main	A 3	B244	Headlamp levelling sensor, rear	D 4
2B325	Wiring harness – Brake warning switch	D 1	C94		C 4

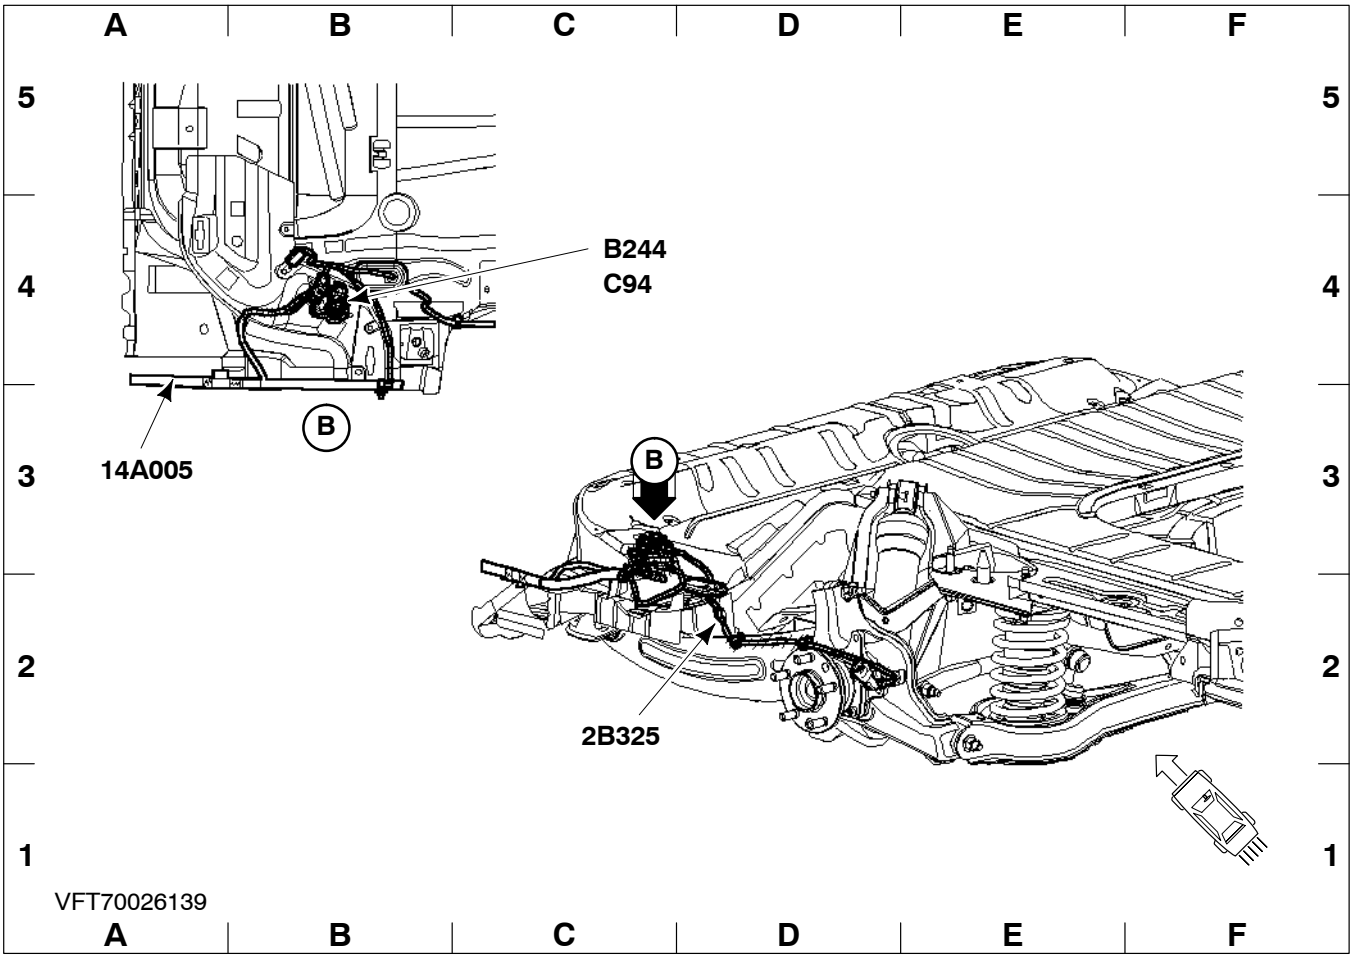


Ride suspension, rear, wagon

14A005	Wiring harness – Body Main	A 3	B244	Headlamp levelling sensor, rear	C 4
2B325	Wiring harness – Brake warning switch	C 2	C94		C 4

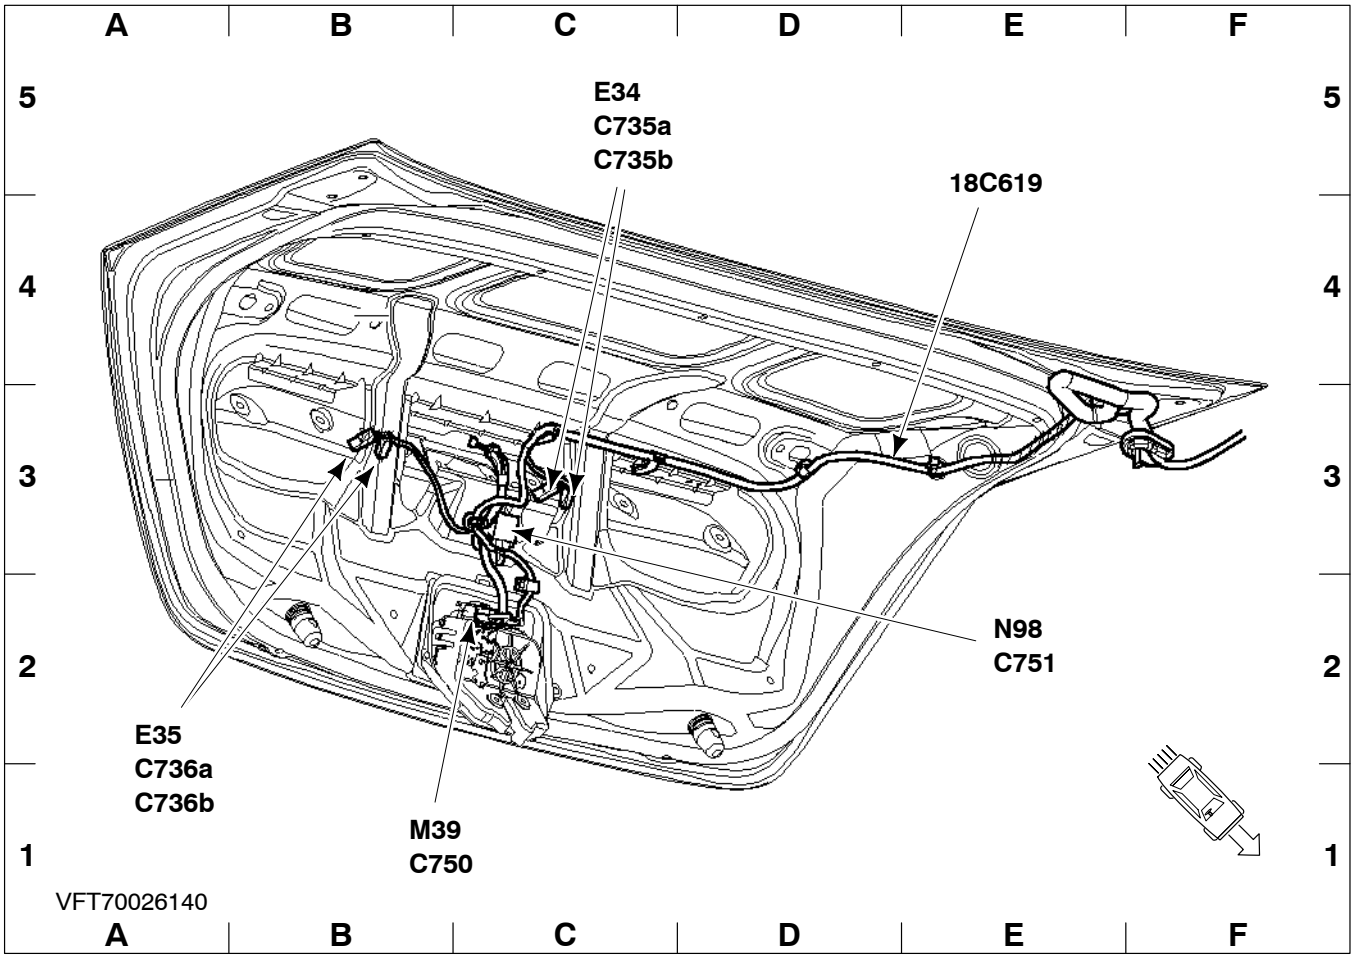


Decklid

18C619	Wiring harness – Heated rear window	E 5	
C735a		C 5	
C735b		C 5	
C736a		A 1	
C736b		A 1	
C750		B 1	
C751		E 2	
E34	Licence plate lamp, LH side	C 5	
E35	Licence plate lamp, RH side	A 2	
M39	Tailgate/decklid motor	B 1	
N98	Tailgate/decklid anti–theft inhibit switch	E 2	

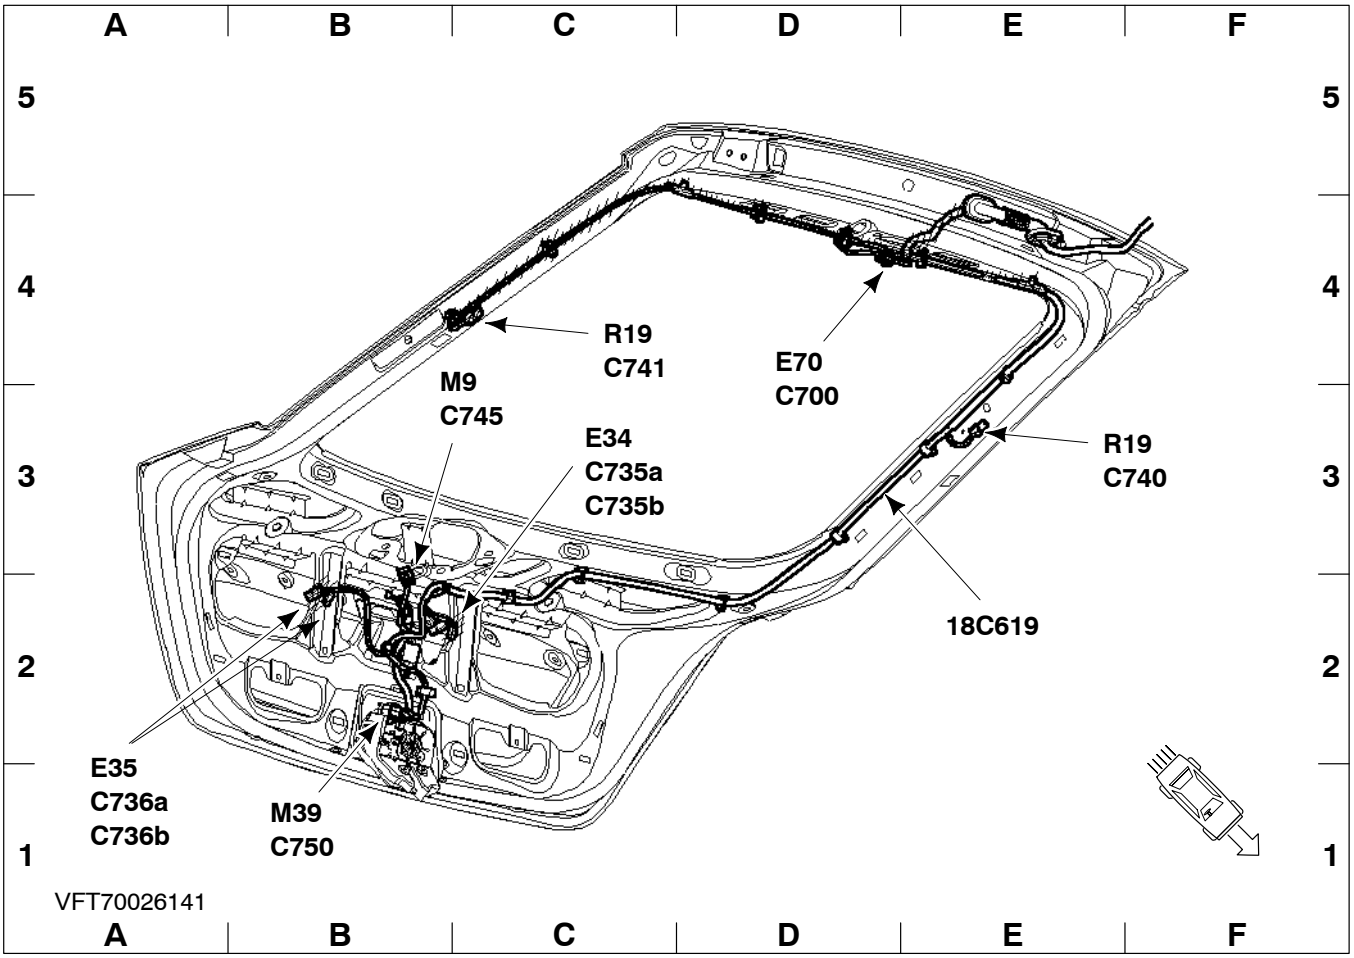


Tailgate, 5–door model

18C619 Wiring harness – Heated rear window . . . E 2
C700 . . . . . D 3
C735a . . . . . C 3
C735b . . . . . C 3
C736a . . . . . A 1
C736b . . . . . A 1
C740 . . . . . F 3
C741 . . . . . C 4
C745 . . . . . C 3
C750 . . . . . B 1
E34 . . Licence plate lamp, LH side . . . . . C 3
E35 . . Licence plate lamp, RH side . . . . . A 1
E70 . . High mounted stop lamp . . . . . D 4
M9 . . Rear window wiper motor . . . . . C 4
M39 . Tailgate/decklid motor . . . . . B 1
R19 . . Rear window heater . . . . . C 4
R19 . . Rear window heater . . . . . F 3

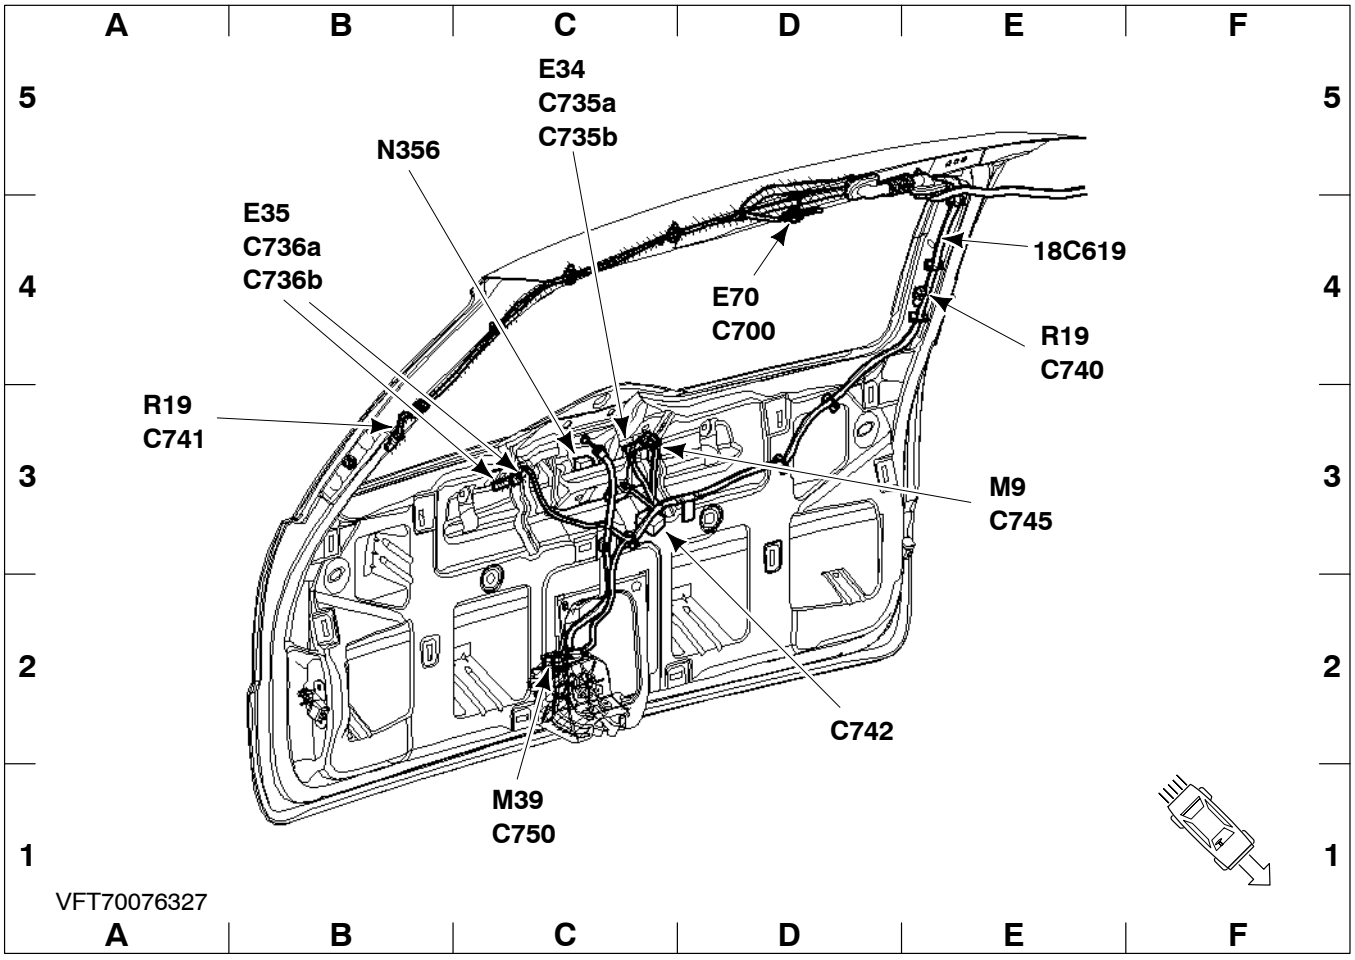


Tailgate, wagon

18C619 Wiring harness – Heated rear window . . . E 4
C700 . . . . . D 4
C735a . . . . . C 5
C735b . . . . . C 5
C736a . . . . . B 4
C736b . . . . . B 4
C740 . . . . . E 4
C741 . . . . . A 3
C742 . . . . . D 2
C745 . . . . . E 3
C750 . . . . . C 1
E34 . . Licence plate lamp, LH side . . . . . C 5
E35 . . Licence plate lamp, RH side . . . . . B 4
E70 . . High mounted stop lamp . . . . . D 4
M9 . . Rear window wiper motor . . . . . E 3
M39 . Tailgate/decklid motor . . . . . C 1
N356 . Tailgate exterior release switch . . . . . B 5
R19 . . Rear window heater . . . . . A 3
R19 . . Rear window heater . . . . . E 4

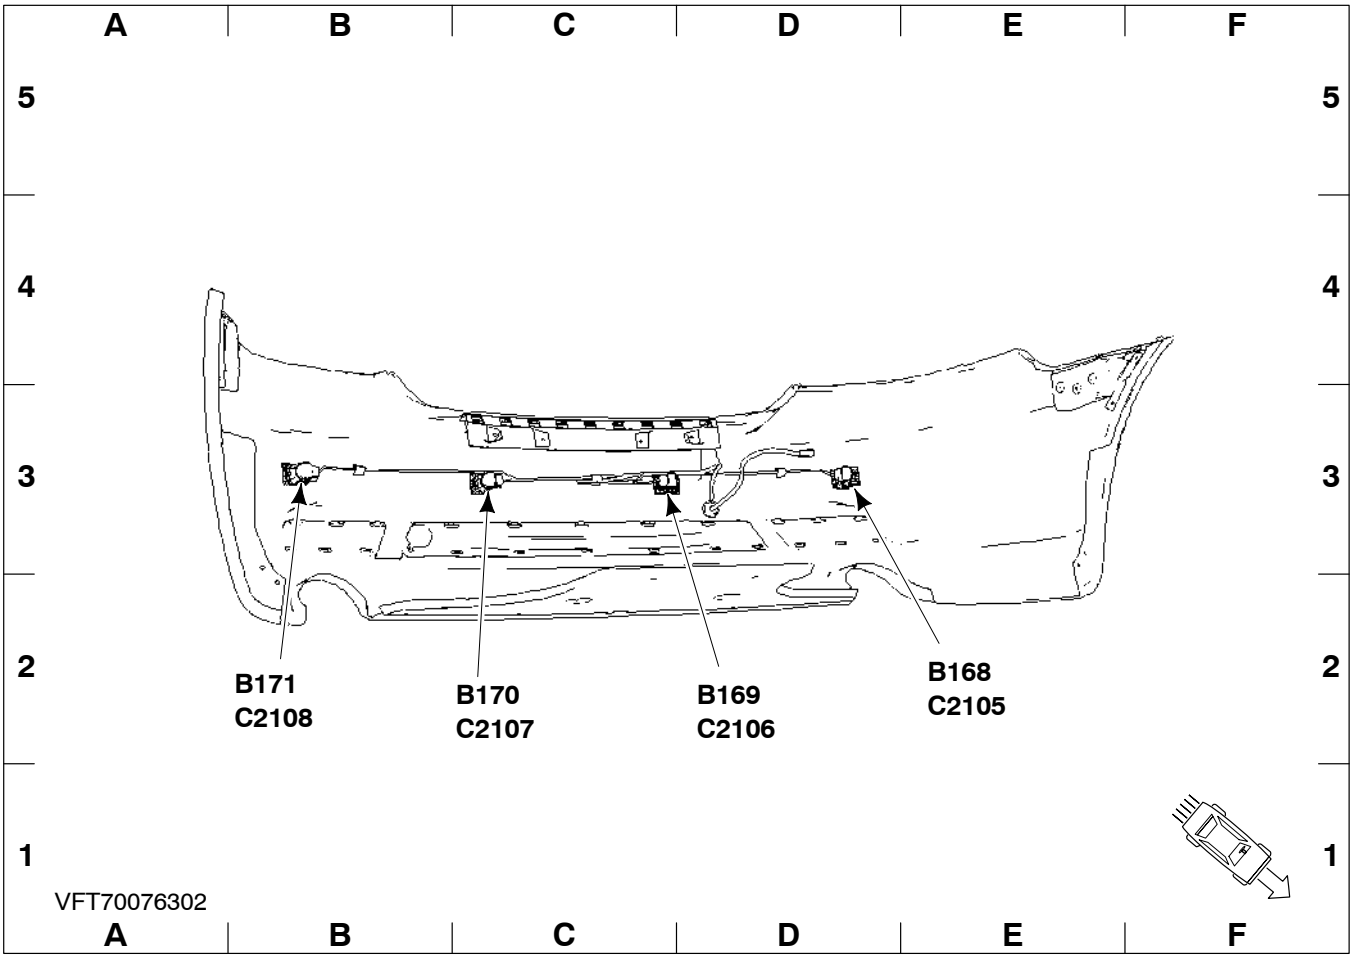


rear bumper, parking aid, Valeo

B168 .	Parking aid sensor, rear, outer left . . . . . E 2	C2105	E 2
B169 .	Parking aid sensor, rear, inner left . . . . . D 2	C2106	D 2
B170 .	Parking aid sensor, rear, inner right . . . . C 2	C2107	C 2
B171 .	Parking aid sensor, rear, outer right . . . . B 2	C2108	B 2

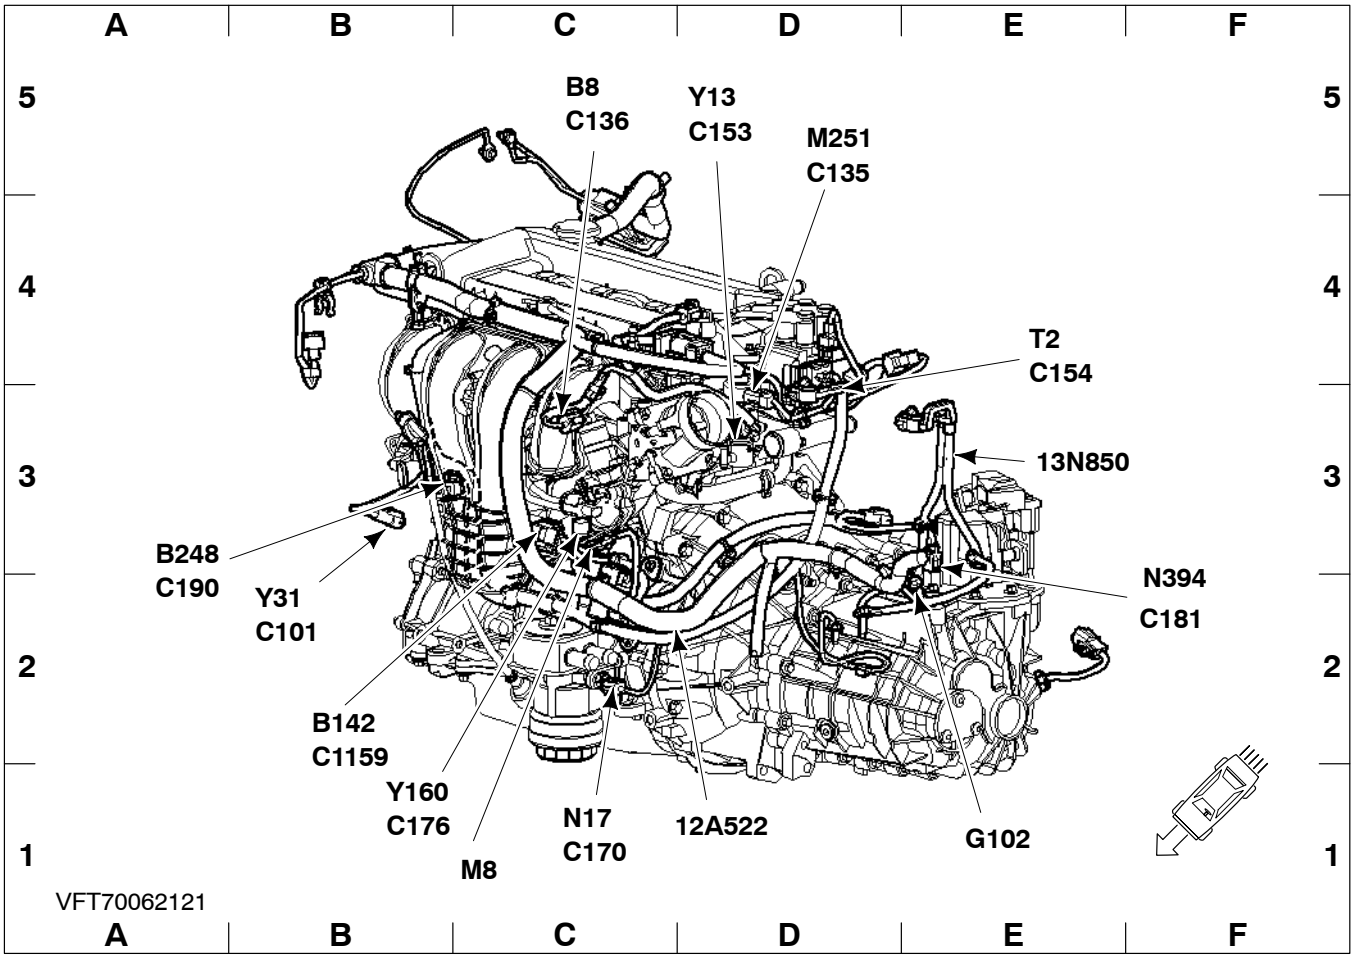


1.8/2.0L Duratec–HE (MI4), front, manual transmission

12A522 Wiring harness – Engine control ..... D 1
13N850 Wiring harness – Ground ..... E 3
B8 . . . Throttle Position Sensor (TPS) ..... C 5
B142 . Temperature manifold absolute pressure sensor ..... B 2
B248 . Electronic thermostat ..... A 3
C101 ..... B 2
C135 ..... D 5
C136 ..... C 5
C153 ..... D 5
C154 ..... E 4
C170 ..... C 1
C176 ..... B 1
C181 ..... F 2
C190 ..... A 2
C1159 ..... B 2
G102 ..... E 1
M8 . . Starter motor ..... C 1
M251 EGR stepper motor ..... D 5
N17 . . Oil pressure switch ..... C 1
N394 . Reversing lamp switch ..... F 2
T2 . . . Ignition transformer ..... E 4
Y13 . . Idle speed control valve ..... D 5
Y31 . . A/C compressor clutch solenoid ..... B 2
Y160 . Swirl plate solenoid valve ..... B 1

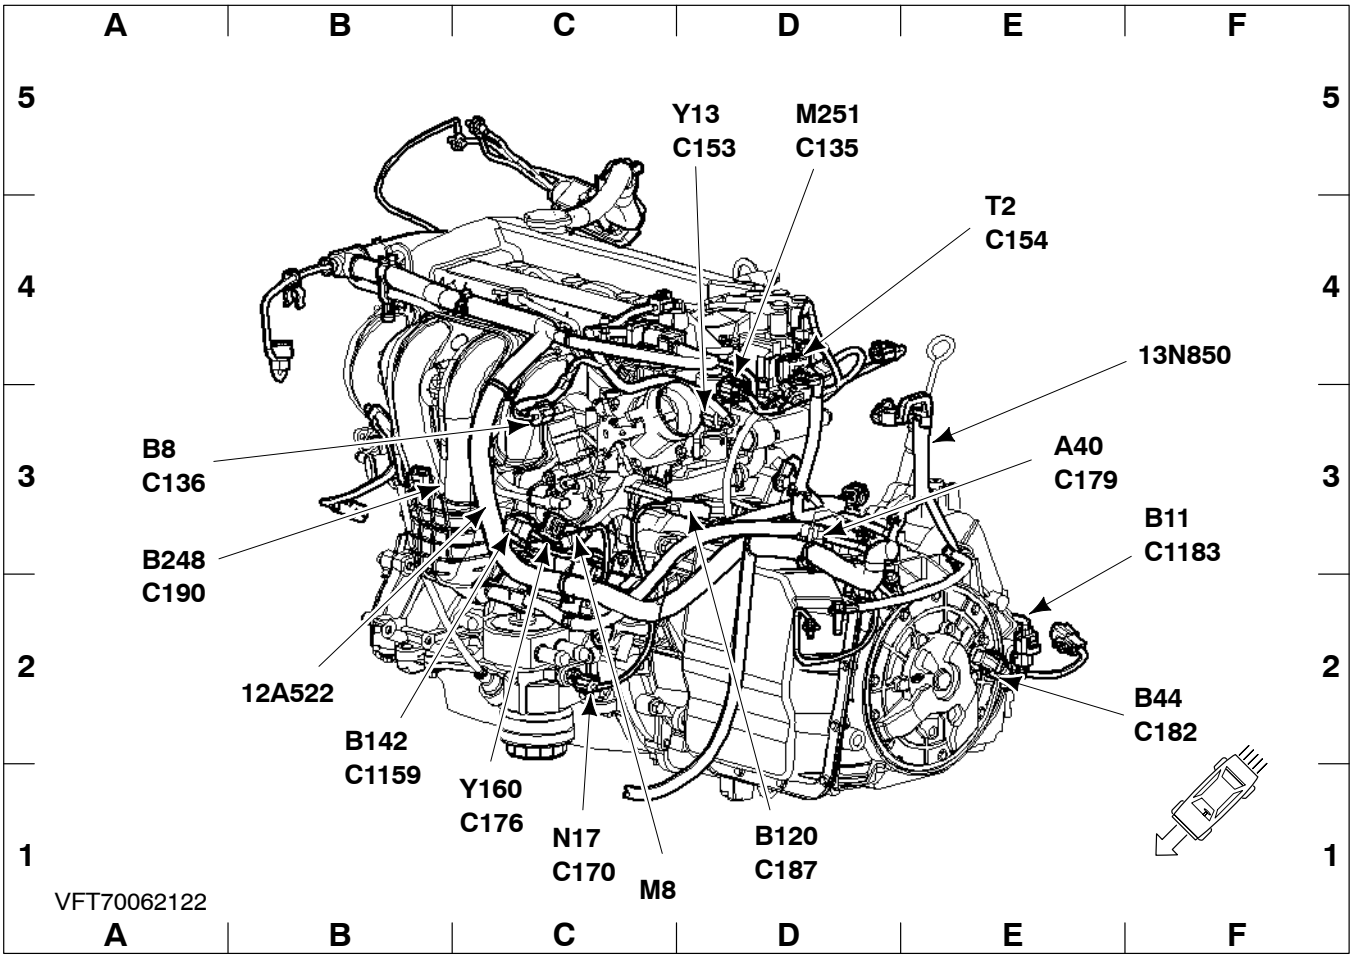


1.8/2.0L Duratec–HE (MI4), front, automatic transmission

12A522 Wiring harness – Engine control ..... B 2
13N850 Wiring harness – Ground ..... F 4
A40 .. Transmission hardware unit ..... E 3
B8 ... Throttle Position Sensor (TPS) ..... A 3
B11 .. Vehicle speed sensor (VSS) ..... F 3
B44 .. Turbine Shaft Speed (TSS) sensor ..... F 2
B120 . Transmission range sensor ..... D 1
B142 . Temperature manifold absolute pressure sensor ..... B 2
B248 . Electronic thermostat ..... A 3
C135 ..... D 5
C136 ..... A 3
C153 ..... D 5
C154 ..... E 4
C170 ..... C 1
C176 ..... C 1
C179 ..... E 3
C182 ..... F 2
C187 ..... D 1
C190 ..... A 2
C1159 ..... B 1
C1183 ..... F 3
M8 .. Starter motor ..... C 1
M251 EGR stepper motor ..... D 5
N17 .. Oil pressure switch ..... C 1
T2 ... Ignition transformer ..... E 4
Y13 .. Idle speed control valve ..... D 5
Y160 . Swirl plate solenoid valve ..... C 1

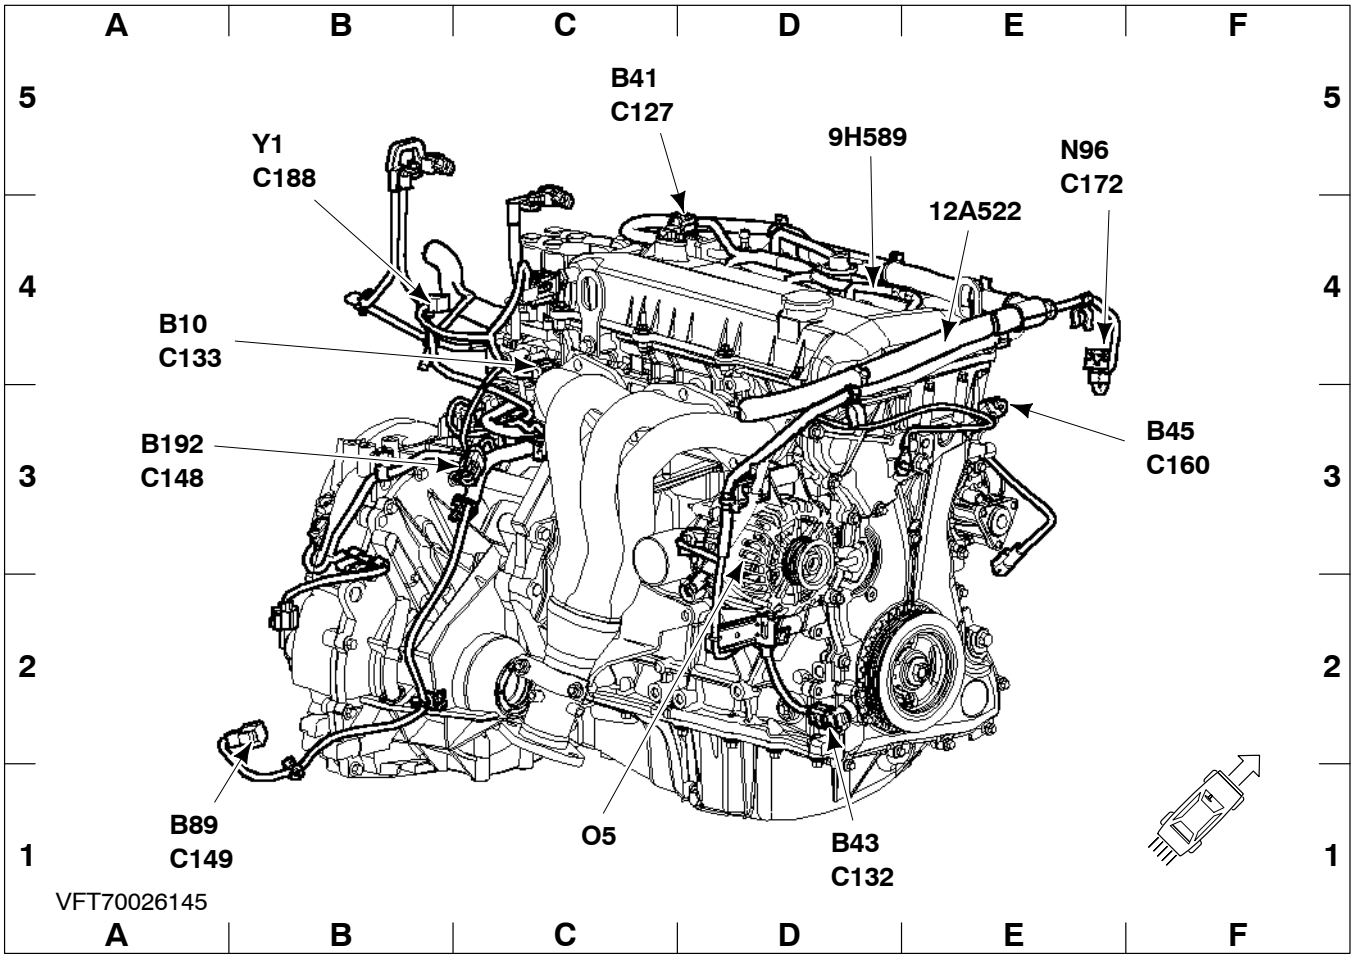


1.8/2.0L Duratec–HE (MI4), rear

12A522 Wiring harness – Engine control . . . . . E 4
9H589 Wiring harness – Engine control . . . . . D 5
B10 . . Engine Coolant Temperature (ECT) sensor . . . . . A 4
B41 . . Camshaft position sensor . . . . . C 5
B43 . . Crankshaft position sensor . . . . . D 1
B45 . . Knock sensor . . . . . F 3
B89 . . Pre–catalyst heated oxygen sensor (HO2S) . . . . . A 1
B192 . Catalyst monitor sensor . . . . . A 3
C127 . . . . . C 5
C132 . . . . . D 1
C133 . . . . . A 4
C148 . . . . . A 3
C149 . . . . . A 1
C160 . . . . . F 3
C172 . . . . . E 5
C188 . . . . . B 5
N96 . . Power steering pressure switch . . . . . E 5
O5 . . . Generator . . . . . C 1
Y1 . . . Canister purge solenoid valve . . . . . B 5

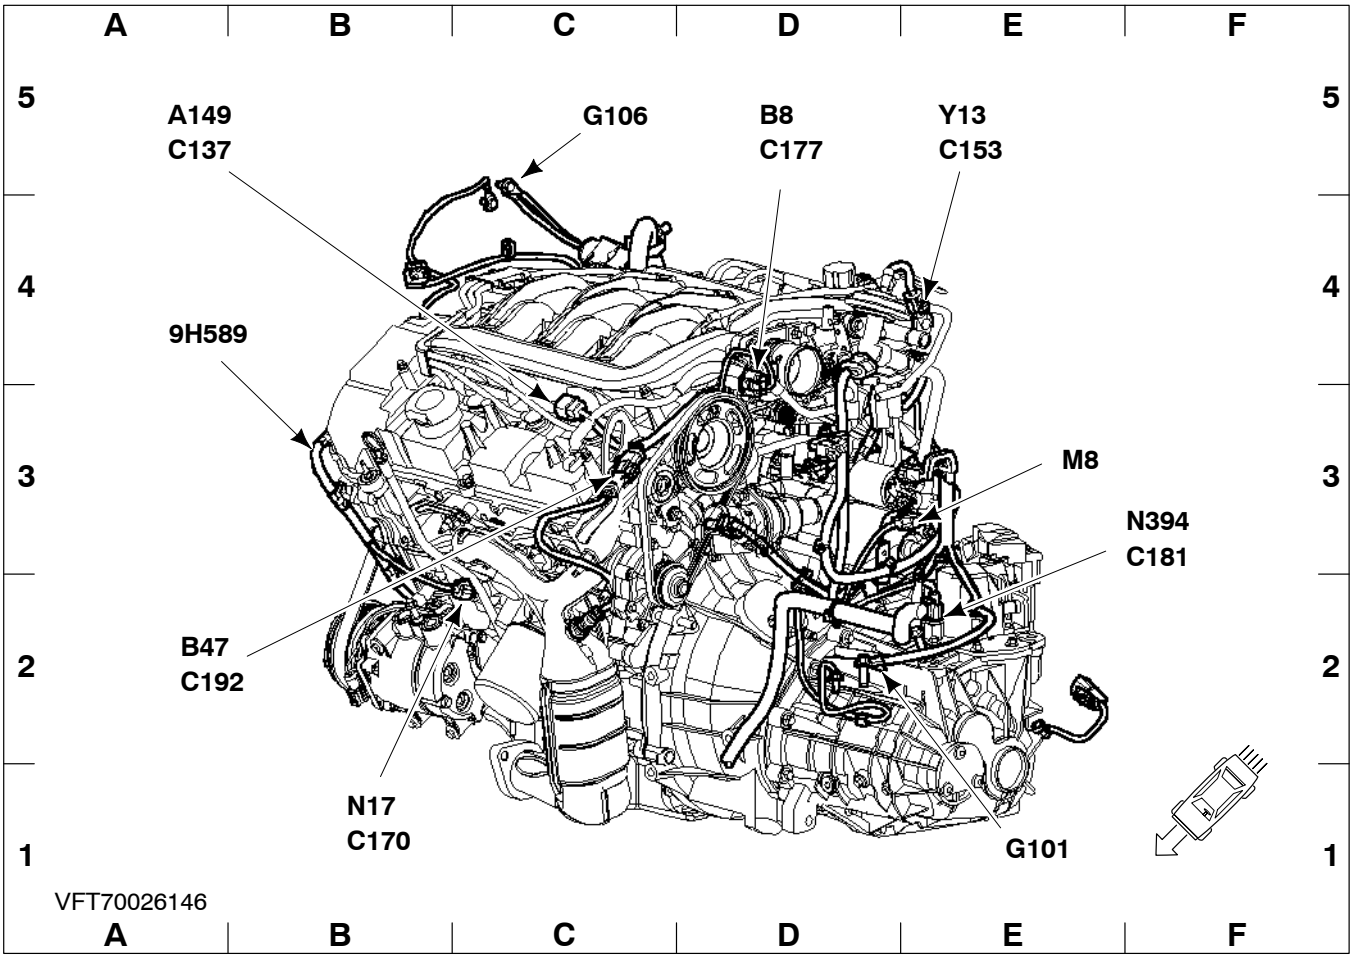


2.5L Duratec–VE (VE6), front, manual transmission

9H589 Wiring harness – Engine control . . . . . A 4
A149 . Intake Manifold Runner Control (IMRC) module . . . . . A 5
B8 . . . Throttle Position Sensor (TPS) . . . . . D 5
B47 . . Pre–catalyst heated oxygen sensor (HO2S), LH . . . . . A 2
C137 . . . . . A 5
C153 . . . . . E 5
C170 . . . . . B 1
C177 . . . . . D 5
C181 . . . . . F 3
C192 . . . . . A 2
G101 . . . . . E 1
G106 . . . . . C 5
M8 . . Starter motor . . . . . E 3
N17 . . Oil pressure switch . . . . . B 1
N394 . Reversing lamp switch . . . . . F 3
Y13 . . Idle speed control valve . . . . . E 5

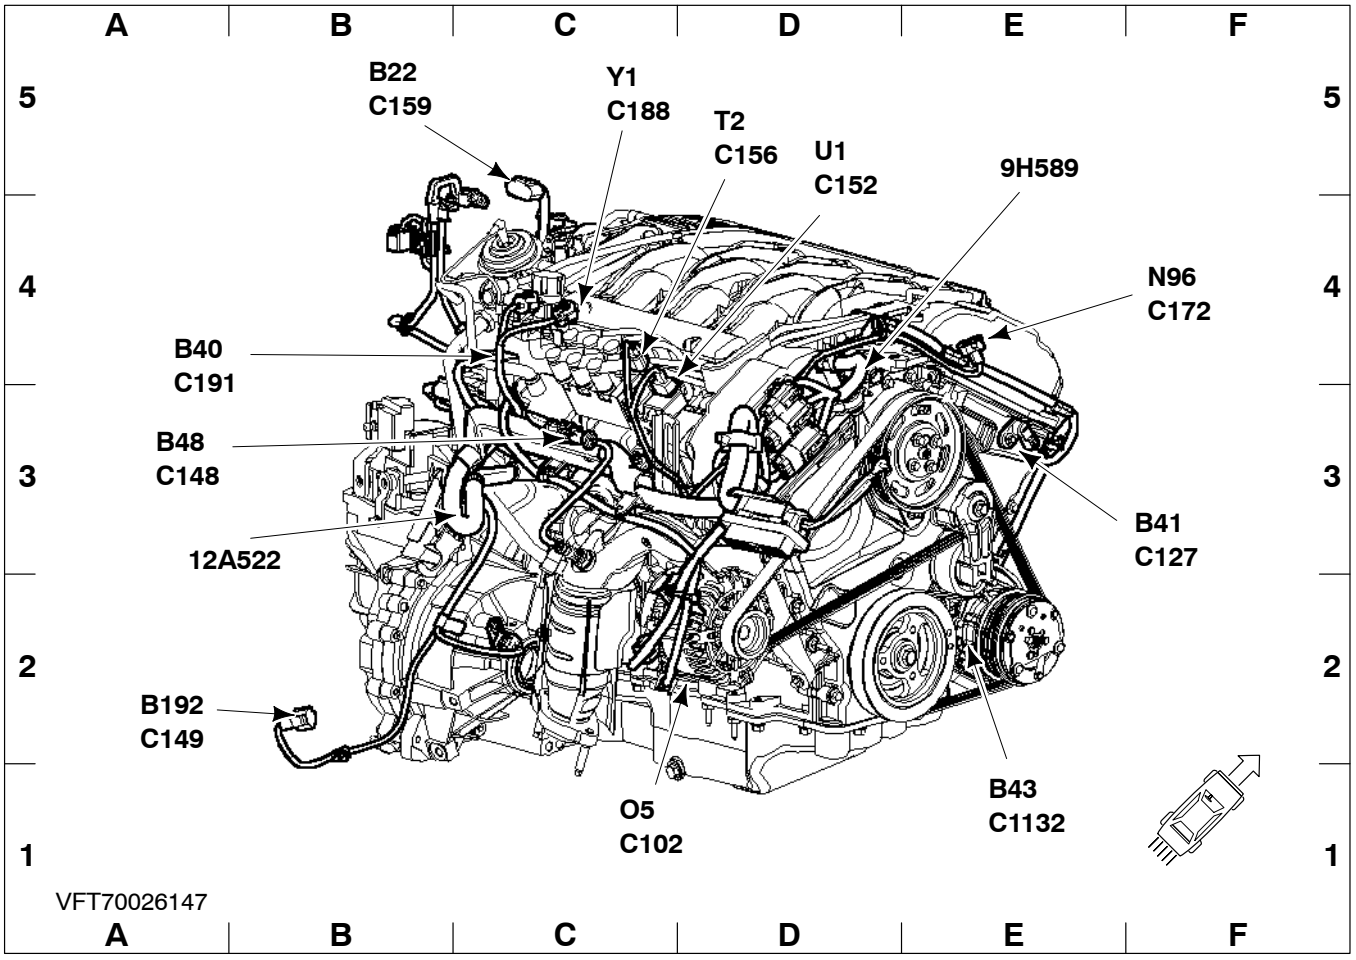


2.5L Duratec–VE (VE6), rear, manual transmission

12A522	Wiring harness – Engine control	B 3
9H589	Wiring harness – Engine control	E 5
B22	Mass Air Flow (MAF) sensor	B 5
B40	Exhaust Pressure Transducer (EPT) sensor	A 4
B41	Camshaft position sensor	F 3
B43	Crankshaft position sensor	E 1
B48	Pre–catalyst heated oxygen sensor (HO2S), RH	A 3
B192	Catalyst monitor sensor	A 2
C102		C 1
C127		F 3
C148		A 3
C149		A 2
C152		D 5
C156		D 5
C159		B 5
C172		F 4
C188		C 5
C191		A 3
C1132		E 1
N96	Power steering pressure switch	F 4
O5	Generator	C 1
T2	Ignition transformer	D 5
U1	Ignition transformer capacitor	D 5
Y1	Canister purge solenoid valve	C 5

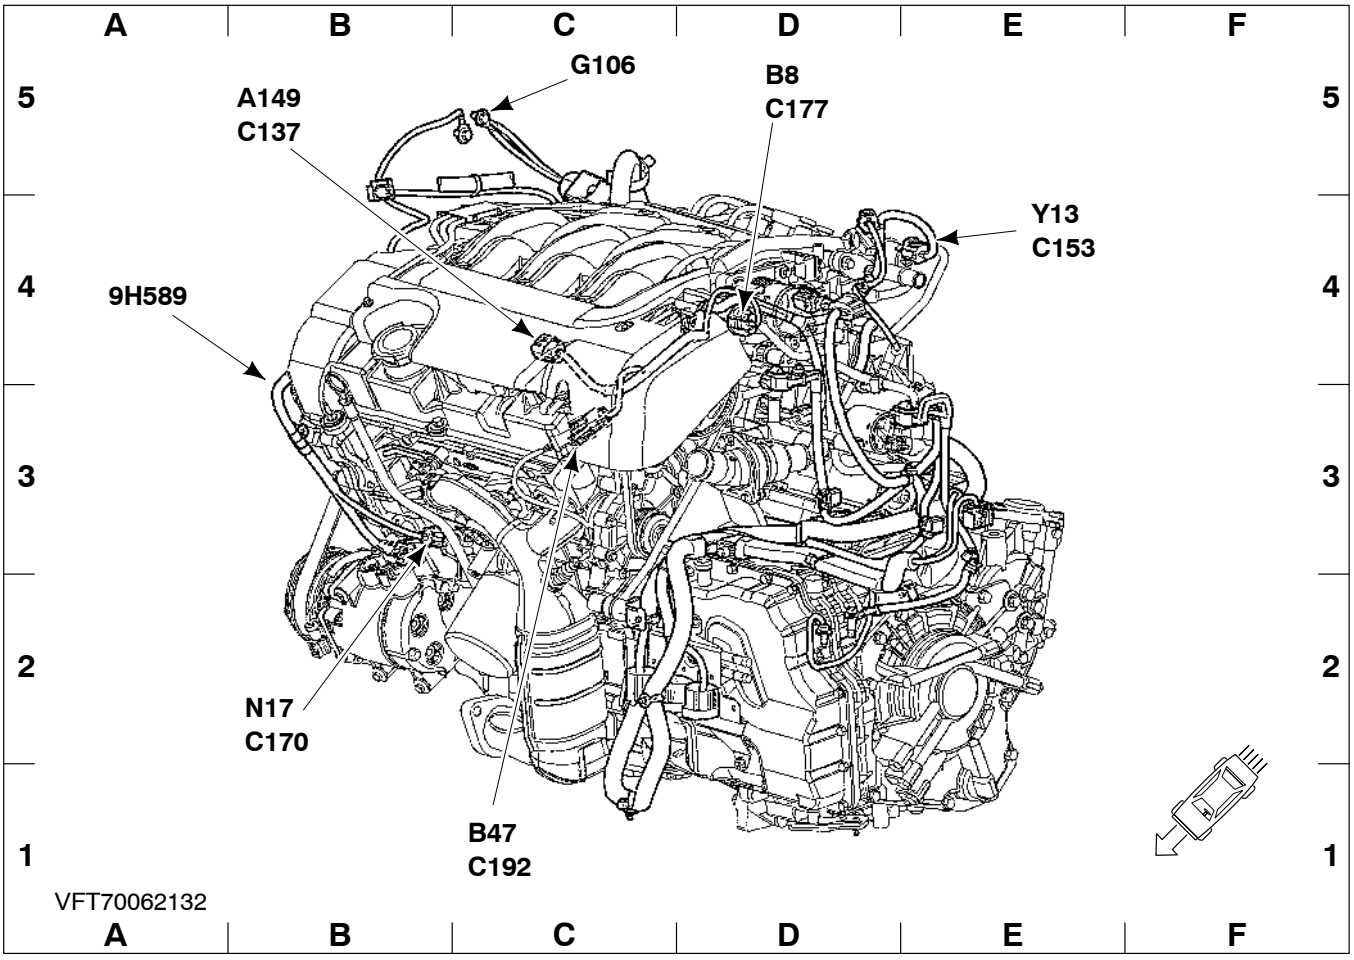


2.5L Duratec–VE (VE6), front, 5–speed automatic transmission (5F31J)

9H589 Wiring harness – Engine control ..... A 4
A149 . Intake Manifold Runner Control (IMRC) module ..... B 5
B8 . . . Throttle Position Sensor (TPS) ..... D 5
B47 . . Pre–catalyst heated oxygen sensor (HO2S), LH ..... C 1
C137 ..... B 5
C153 ..... E 4
C170 ..... B 2
C177 ..... D 5
C192 ..... C 1
G106 ..... C 5
N17 . . Oil pressure switch ..... B 2
Y13 . . Idle speed control valve ..... E 4

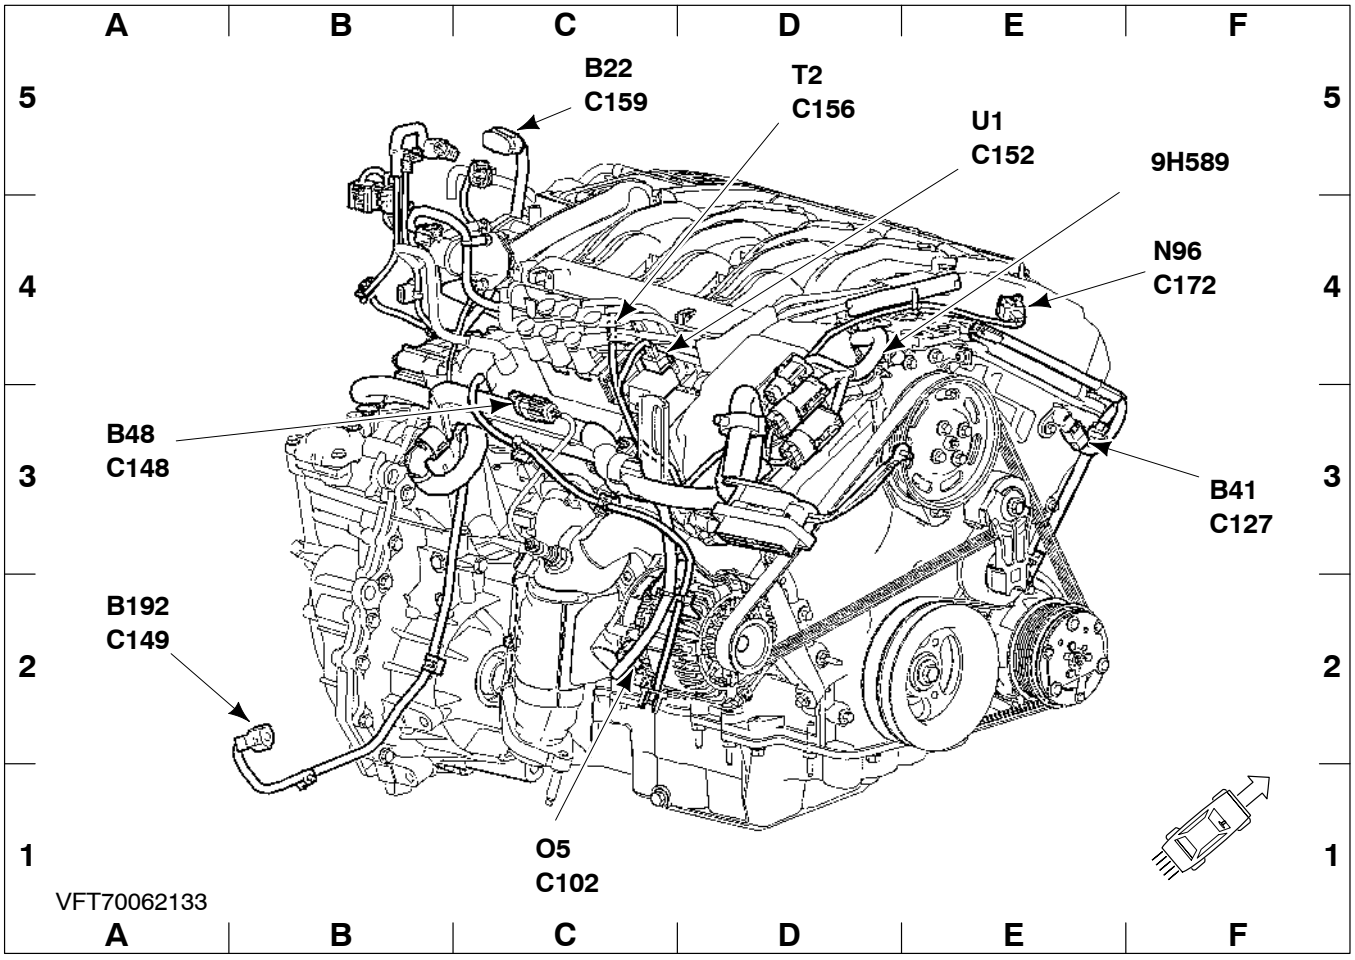


2.5L Duratec–VE (VE6), rear, 5–speed automatic transmission (5F31J)

9H589 Wiring harness – Engine control . . . . . F 5
B22 . . Mass Air Flow (MAF) sensor . . . . . C 5
B41 . . Camshaft position sensor . . . . . F 3
B48 . . Pre–catalyst heated oxygen sensor (HO2S), RH . . . . . A 3
B192 . Catalyst monitor sensor . . . . . A 2
C102 . . . . . C 1
C127 . . . . . F 3
C148 . . . . . A 3
C149 . . . . . A 2
C152 . . . . . E 5
C156 . . . . . D 5
C159 . . . . . C 5
C172 . . . . . F 4
N96 . . Power steering pressure switch . . . . . F 4
O5 . . . Generator . . . . . C 1
T2 . . . Ignition transformer . . . . . D 5
U1 . . . Ignition transformer capacitor . . . . . E 5

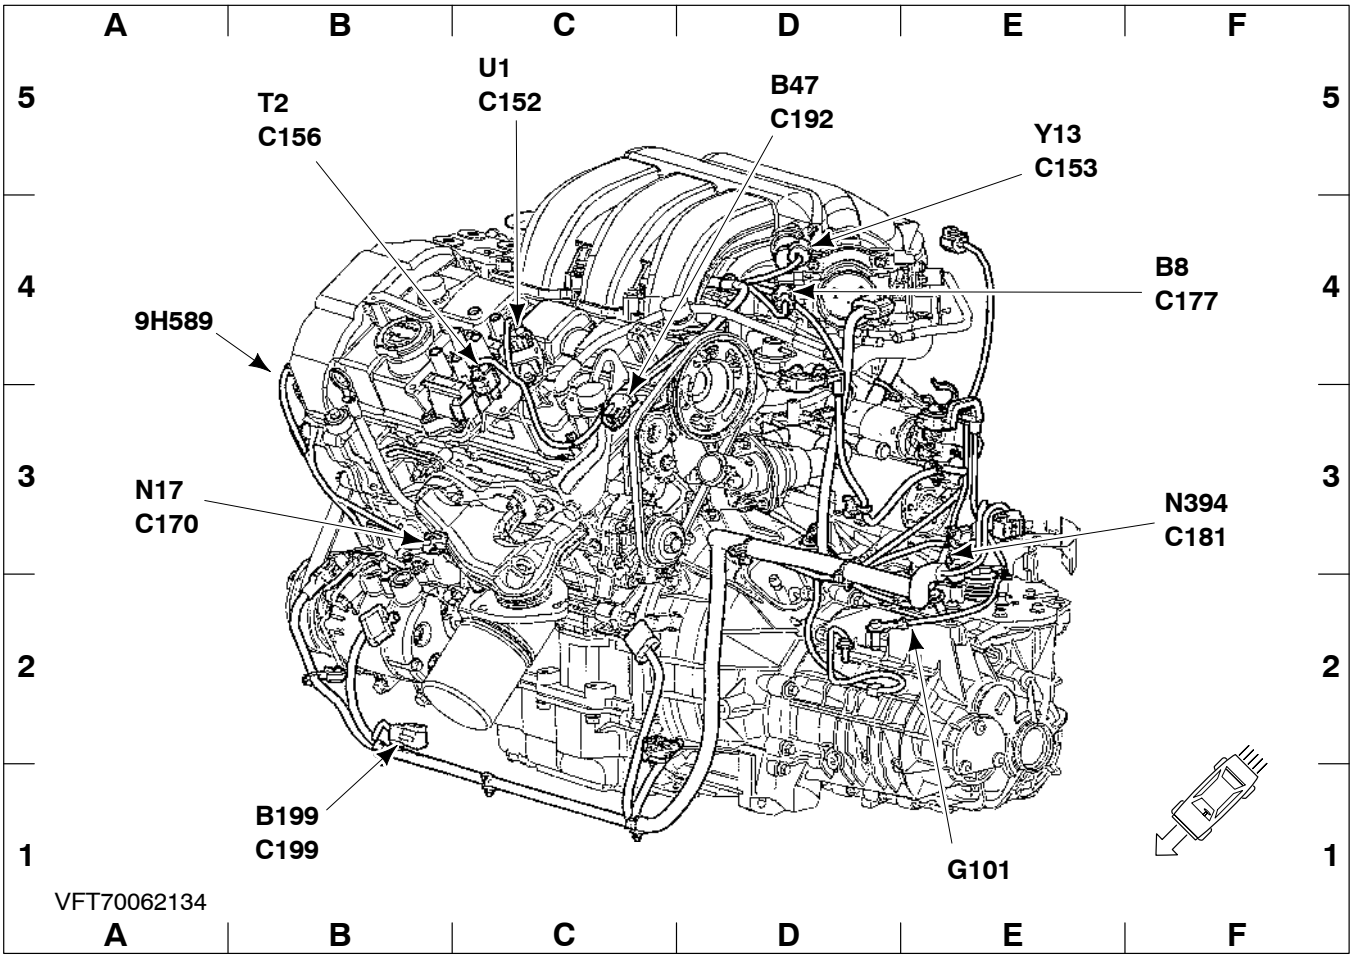


3.0L Duratec–ST (VE6), front

9H589 Wiring harness – Engine control ..... A 4
B8 . . . Throttle Position Sensor (TPS) ..... F 4
B47 . . Pre–catalyst heated oxygen sensor (HO2S), LH ..... D 5
B199 . Catalyst monitor sensor, LH side ..... B 1
C152 ..... C 5
C153 ..... E 5
C156 ..... B 5
C170 ..... A 3
C177 ..... F 4
C181 ..... F 3
C192 ..... D 5
C199 ..... B 1
G101 ..... E 1
N17 . . Oil pressure switch ..... A 3
N394 . Reversing lamp switch ..... F 3
T2 . . . Ignition transformer ..... B 5
U1 . . . Ignition transformer capacitor ..... C 5
Y13 . . Idle speed control valve ..... E 5

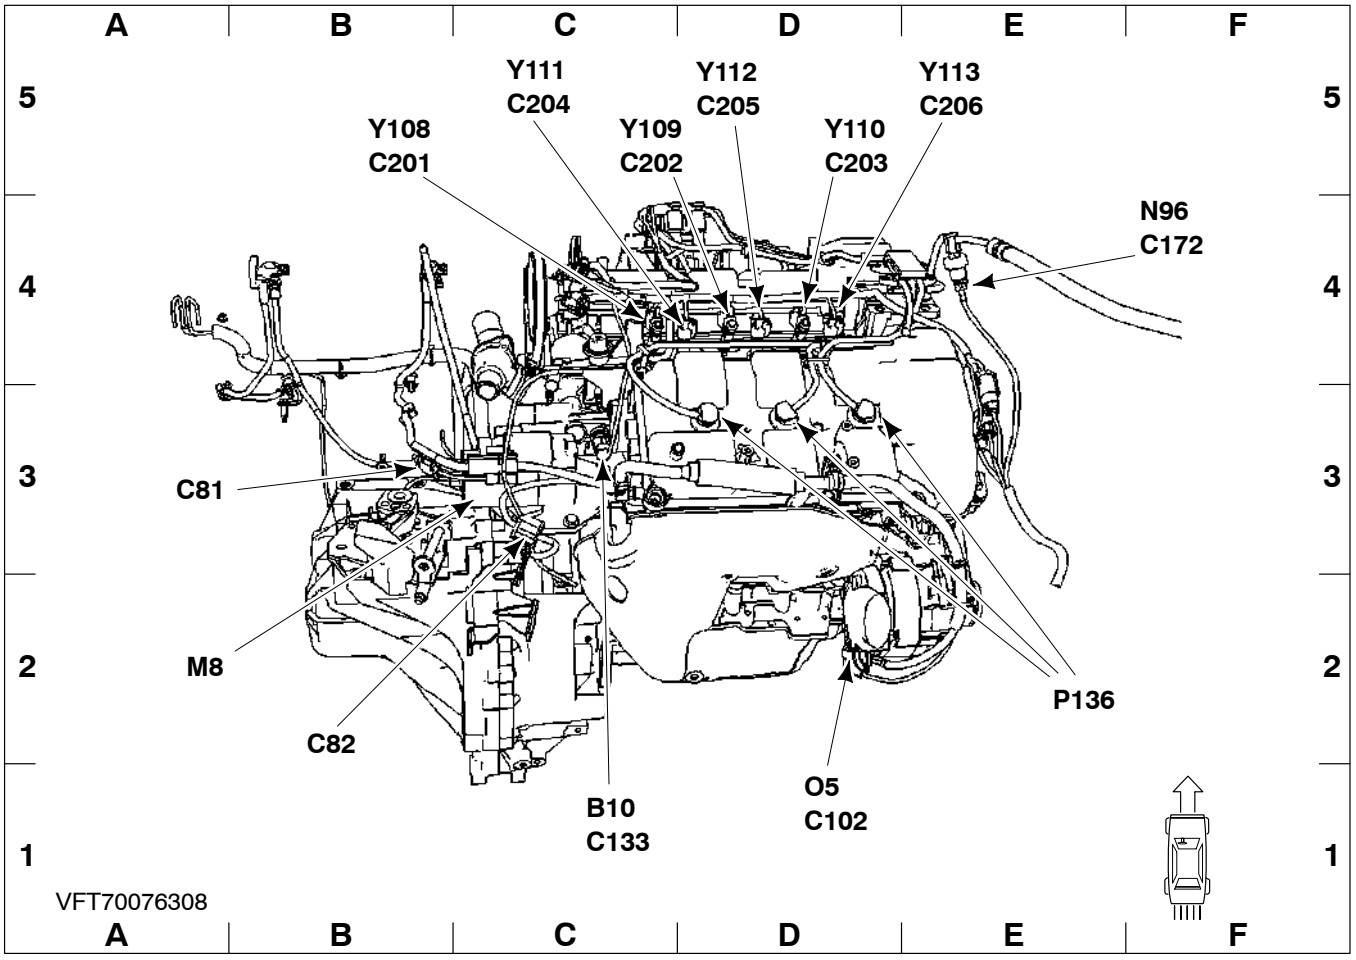


3.0L Duratec–ST (VE6), top

B10 . . Engine Coolant Temperature (ECT) sensor . . . . . C 1
C81 . . . . . A 3
C82 . . . . . B 2
C102 . . . . . D 1
C133 . . . . . C 1
C172 . . . . . F 4
C201 . . . . . B 5
C202 . . . . . C 5
C203 . . . . . D 5
C204 . . . . . C 5
C205 . . . . . D 5
C206 . . . . . E 5
M8 . . Starter motor . . . . . A 2
N96 . . Power steering pressure switch . . . . . F 4
O5 . . . Generator . . . . . D 1
P136 . Spark plugs . . . . . E 2
Y108 . Fuel injector 1 . . . . . B 5
Y109 . Fuel injector 2 . . . . . C 5
Y110 . Fuel injector 3 . . . . . D 5
Y111 . Fuel injector 4 . . . . . C 5
Y112 . Fuel injector 5 . . . . . D 5
Y113 . Fuel injector 6 . . . . . E 5

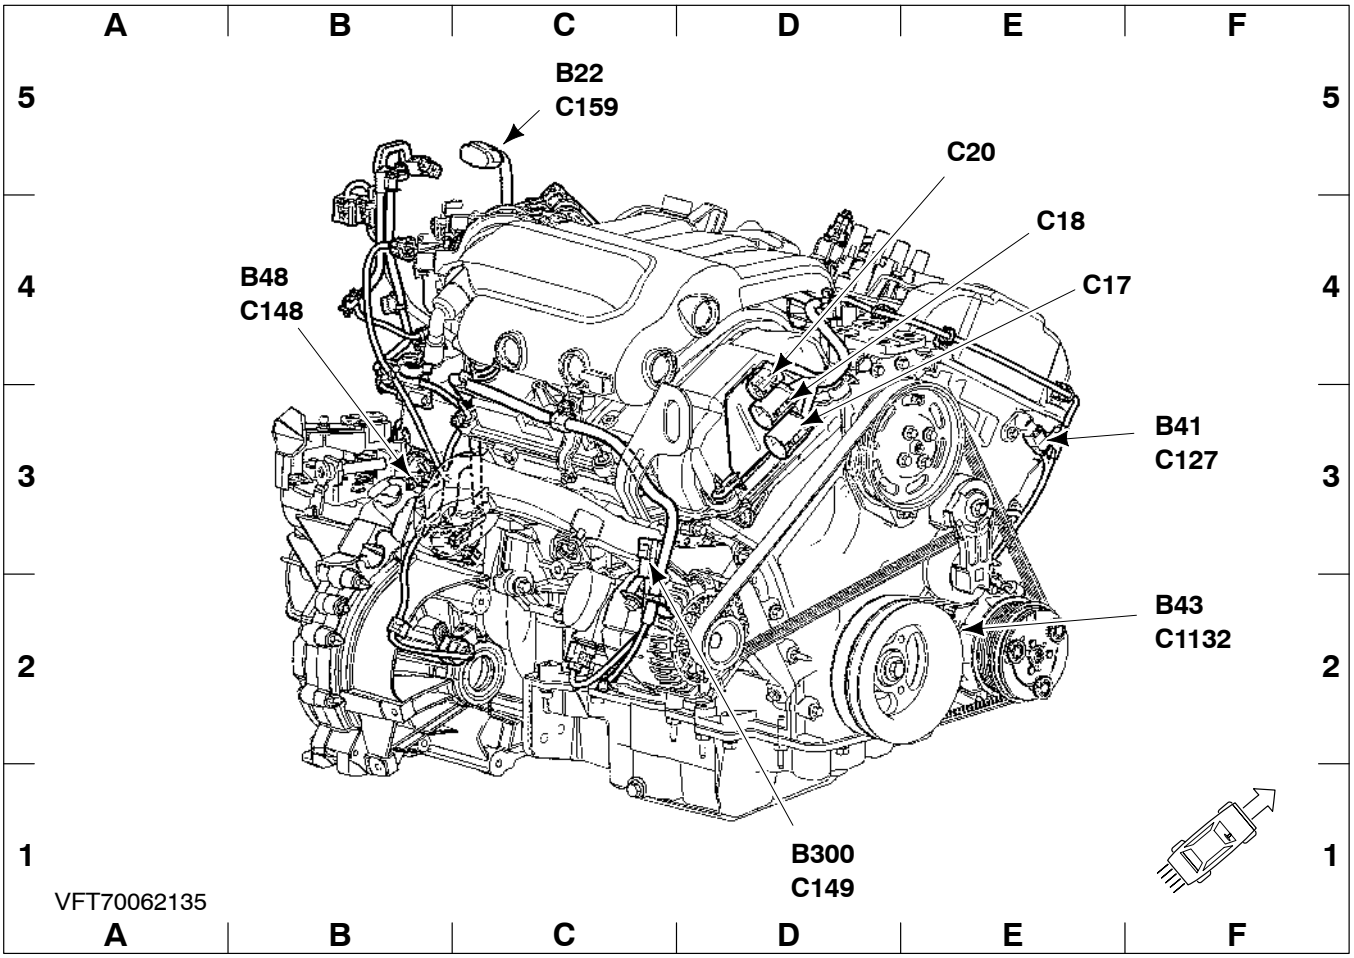


3.0L Duratec–ST (VE6), rear

B22 . . Mass Air Flow (MAF) sensor . . . . . C 5
B41 . . Camshaft position sensor . . . . . F 3
B43 . . Crankshaft position sensor . . . . . F 2
B48 . . Pre–catalyst heated oxygen sensor (HO2S), RH . . . . . B 4
B300 . Catalyst monitor sensor, RH side . . . . . D 1
C17 . . . . . E 4
C18 . . . . . E 4
C20 . . . . . E 5
C127 . . . . . F 3
C148 . . . . . B 4
C149 . . . . . D 1
C159 . . . . . C 5
C1132 . . . . . F 2

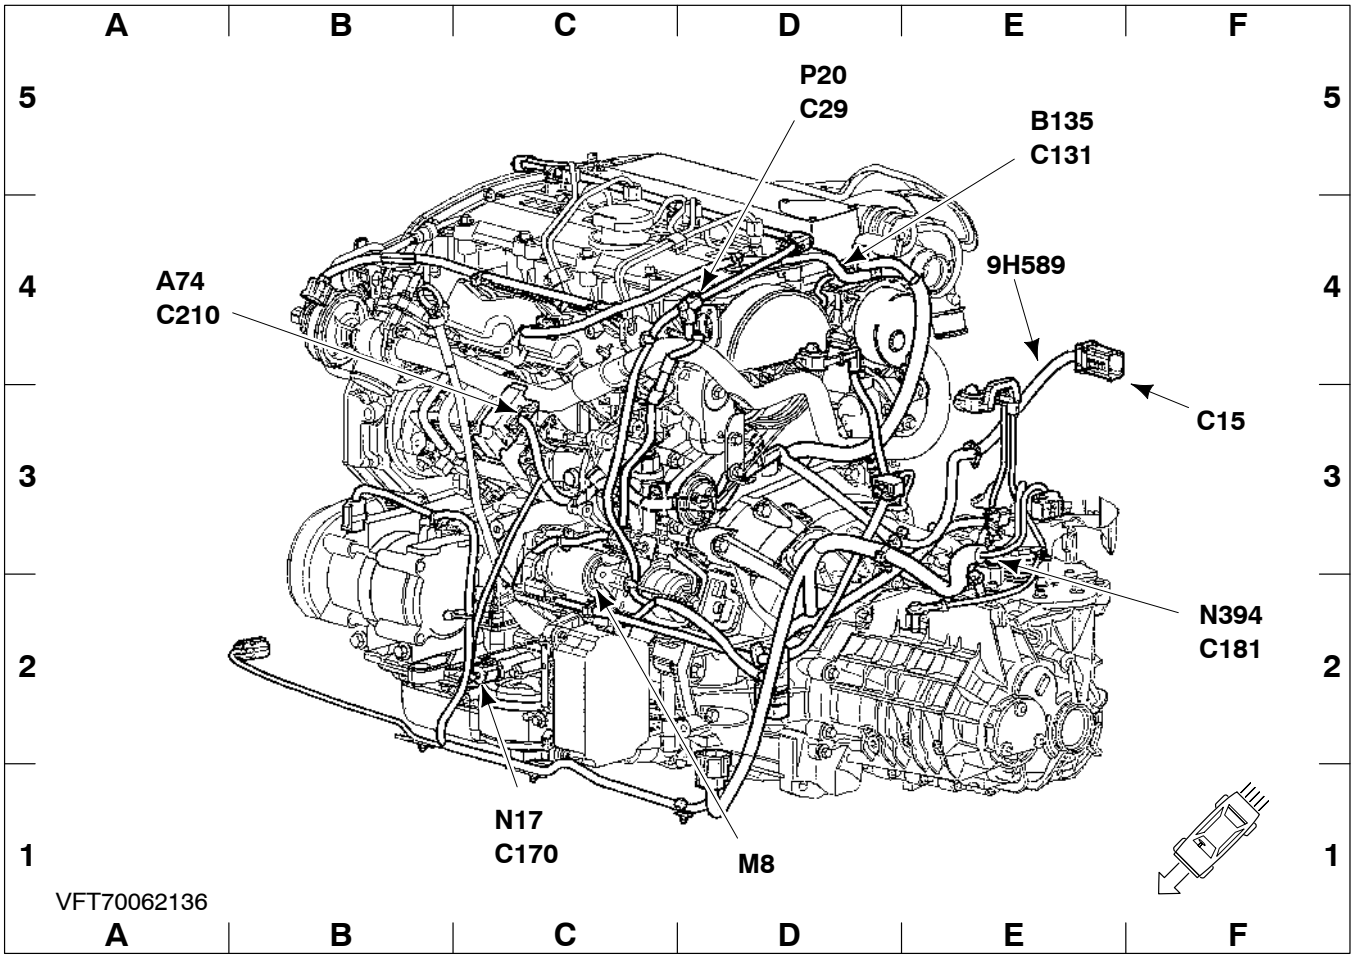


2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, front

9H589 Wiring harness – Engine control . . . . . E 4
A74 . . Diesel pump unit . . . . . A 4
B135 . Cylinder head temperature sensor . . . . . E 5
C15 . . . . . F 3
C29 . . . . . D 5
C131 . . . . . E 5
C170 . . . . . C 1
C181 . . . . . F 2
C210 . . . . . A 4
M8 . . Starter motor . . . . . D 1
N17 . . Oil pressure switch . . . . . C 1
N394 . Reversing lamp switch . . . . . F 2
P20 . . Glow plugs . . . . . D 5

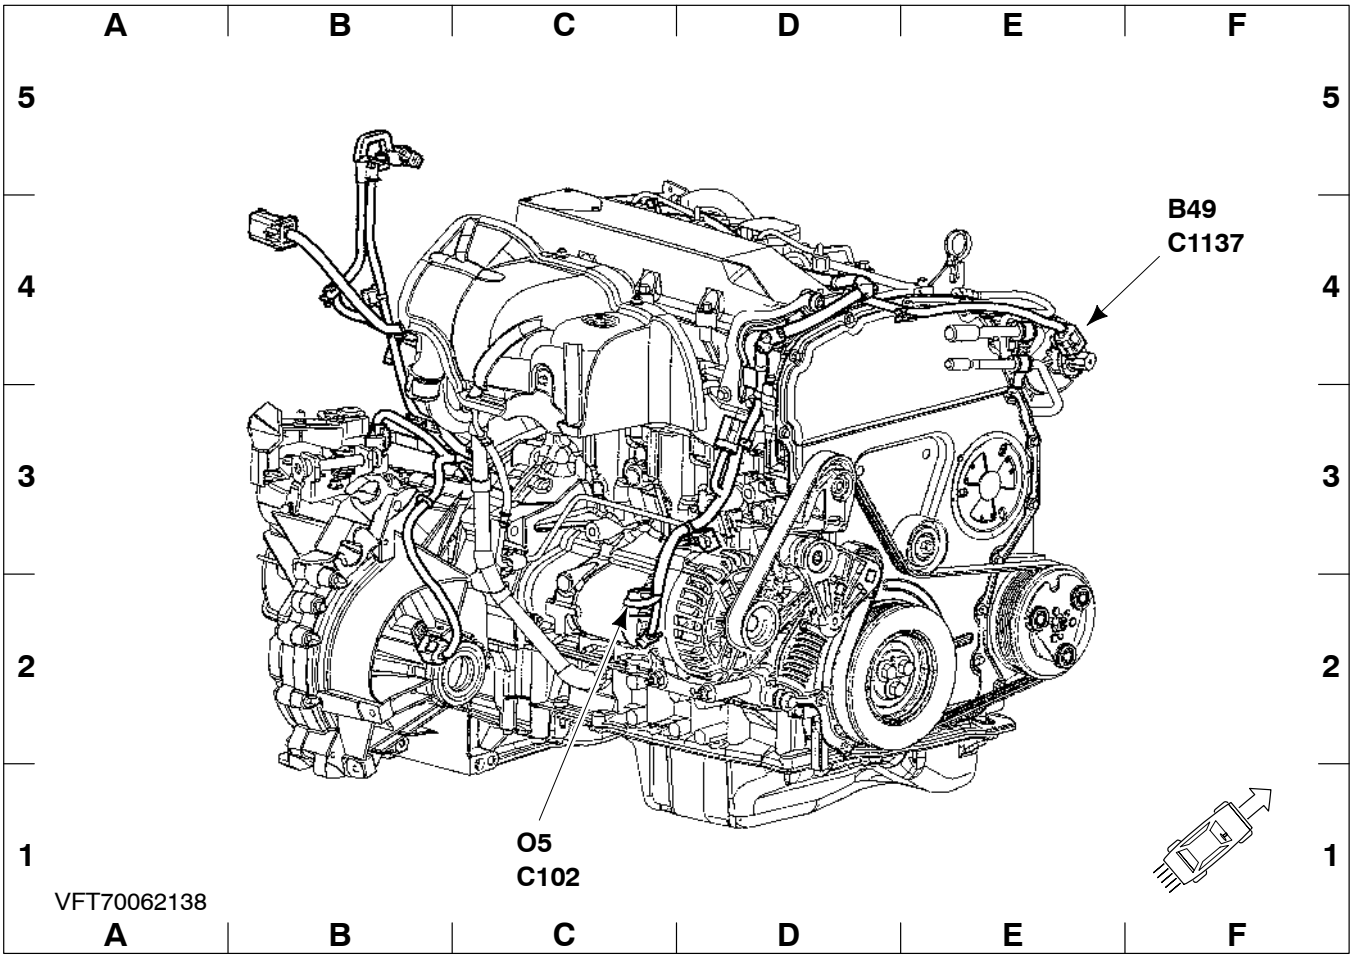


2.0L Duratorq–DI/TDDi (Puma) Diesel, 90 HP, rear

B49 . . EGR valve position sensor . . . . . F 4
C102 . . . . . C 1
C1137 . . . . . F 4
O5 . . . Generator . . . . . C 1

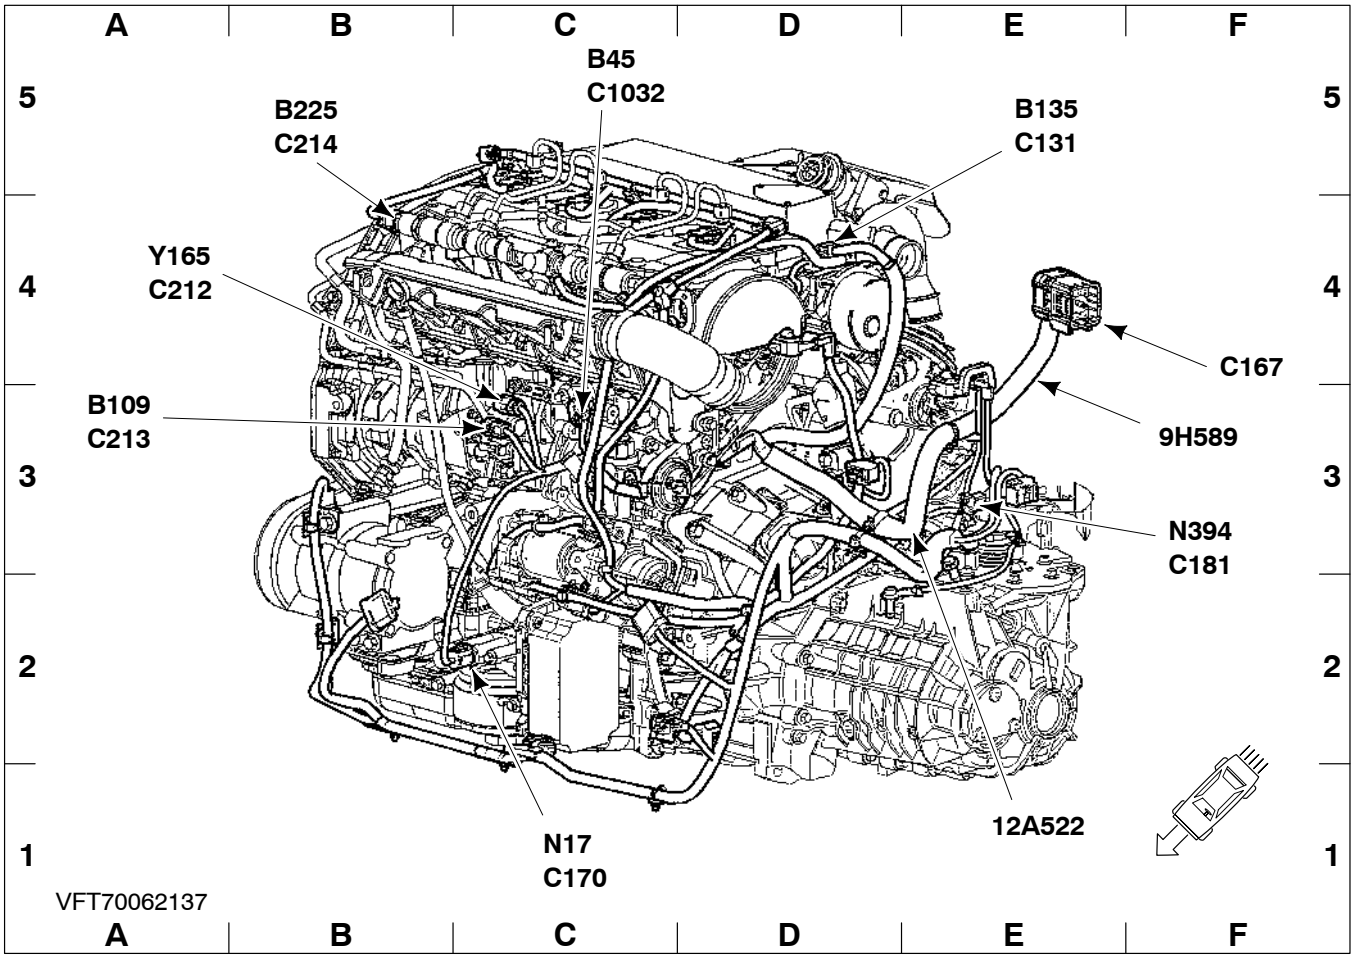


2.2L Duratorq–TDCi (Puma) Diesel, 2.0L Duratorq–TDCi (Puma) Diesel, front, manual transmission

12A522 Wiring harness – Engine control . . . . . E 1
9H589 Wiring harness – Engine control . . . . . F 3
B45 . . Knock sensor . . . . . C 5
B109 . Fuel temperature sensor . . . . . A 3
B135 . Cylinder head temperature sensor . . . . . E 5
B225 . Fuel rail pressure transducer sensor . . . . B 5
C131 . . . . . E 5
C167 . . . . . F 4
C170 . . . . . C 1
C181 . . . . . F 3
C212 . . . . . A 4
C213 . . . . . A 3
C214 . . . . . B 5
C1032 . . . . . C 5
N17 . . Oil pressure switch . . . . . C 1
N394 . Reversing lamp switch . . . . . F 3
Y165 . Fuel metering valve . . . . . A 4

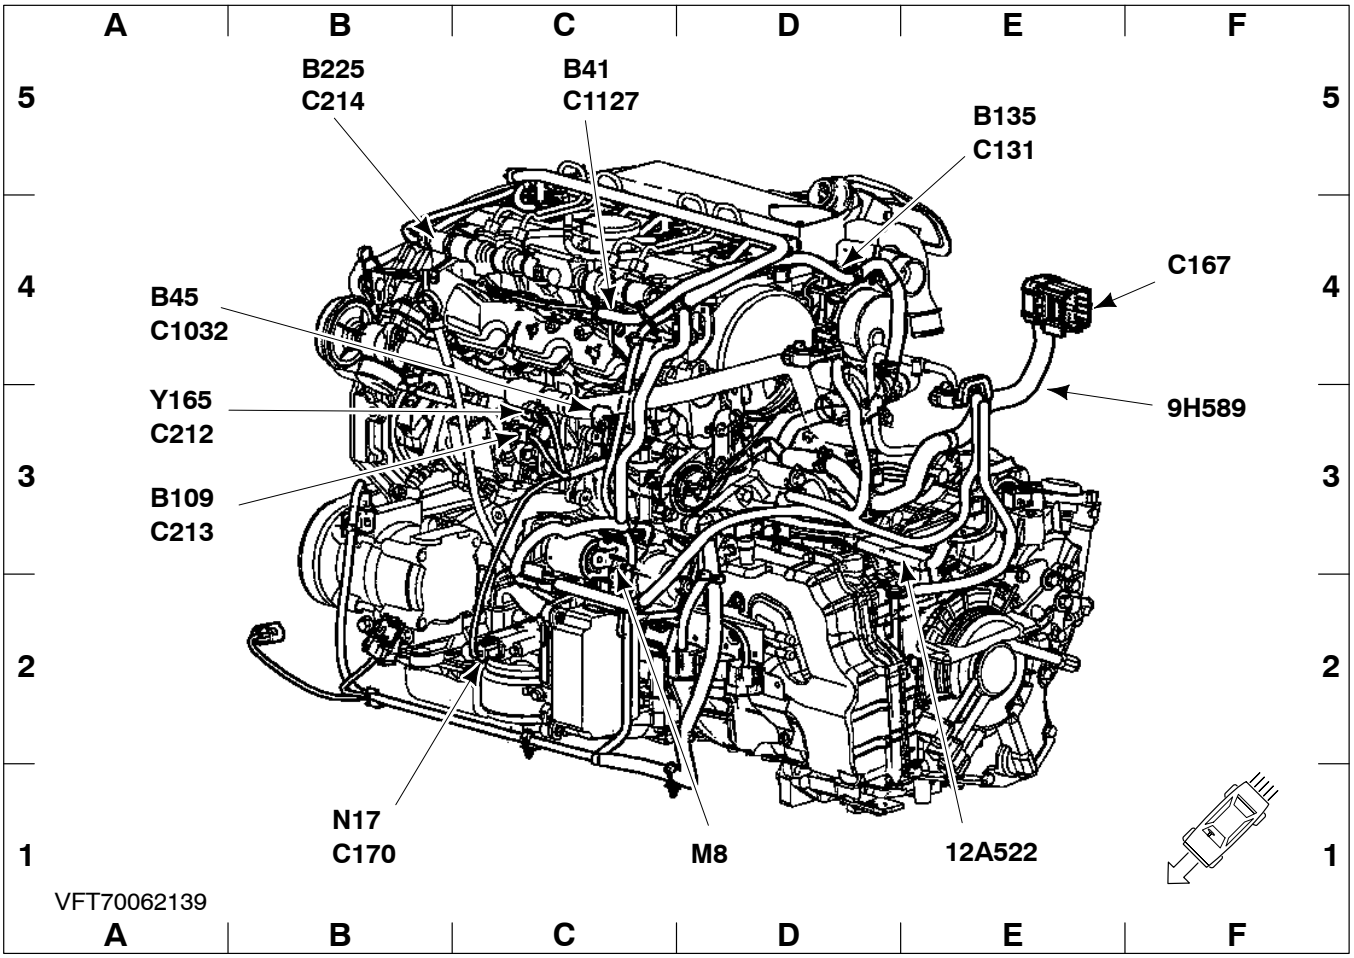


2.0L Duratorq–TDCi (Puma) Diesel, front, automatic transmission

12A522	Wiring harness – Engine control	E 1	C170		B 1
9H589	Wiring harness – Engine control	F 3	C212		A 3
B41	Camshaft position sensor	C 5	C213		A 3
B45	Knock sensor	A 4	C214		B 5
B109	Fuel temperature sensor	A 3	C1032		A 4
B135	Cylinder head temperature sensor	E 5	C1127		C 5
B225	Fuel rail pressure transducer sensor	B 5	M8	Starter motor	D 1
C131		E 5	N17	Oil pressure switch	B 1
C167		F 4	Y165	Fuel metering valve	A 3

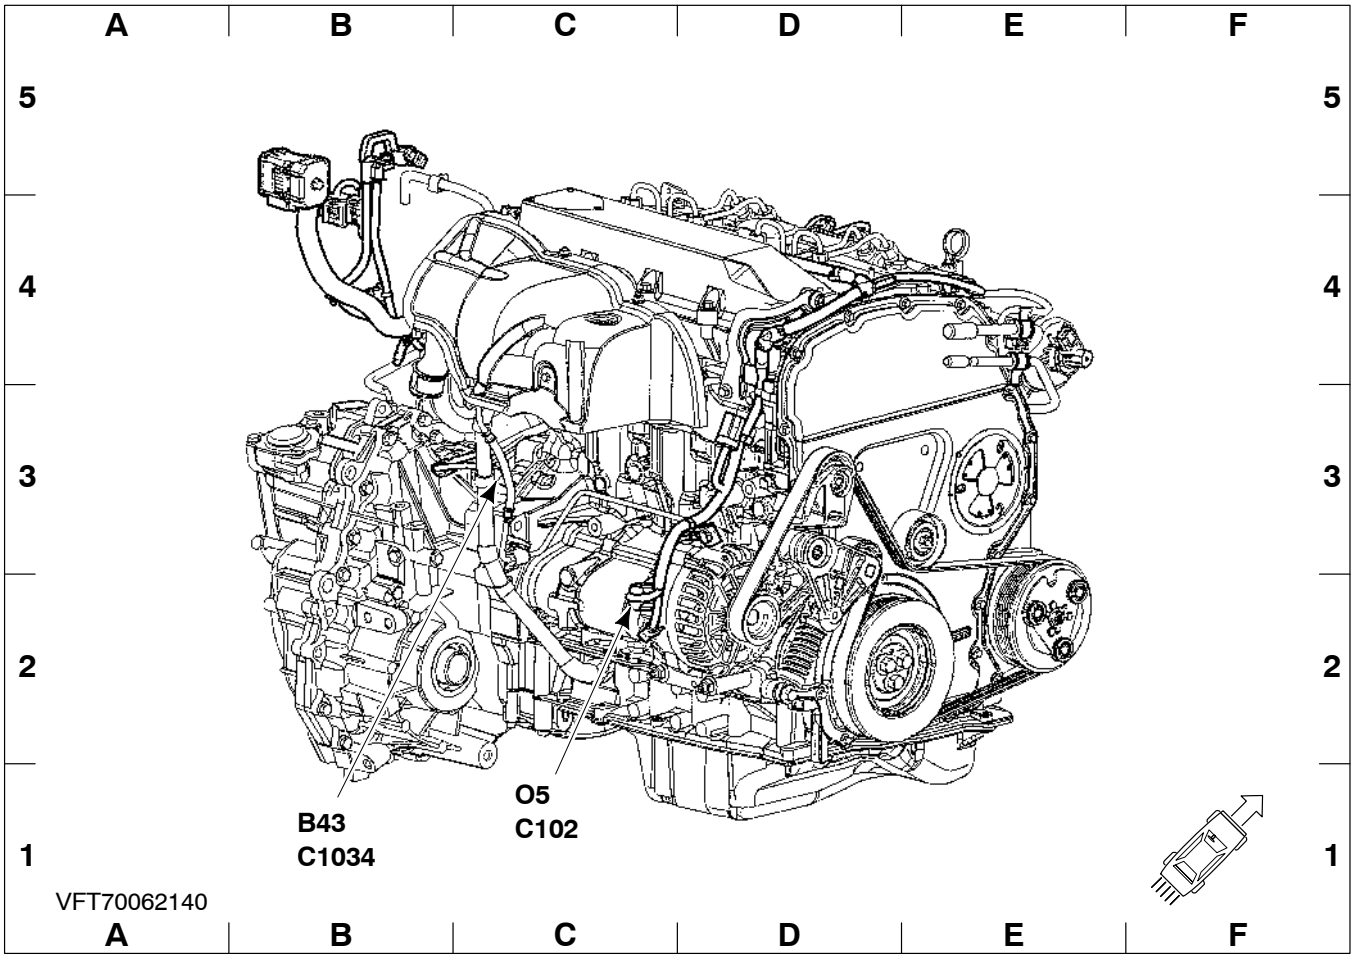


2.0L Duratorq–TDCi (Puma) Diesel, rear, automatic transmission

B43 . . Crankshaft position sensor . . . . . B 1
C102 . . . . . C 1
C1034 . . . . . B 1
O5 . . . Generator . . . . . C 1

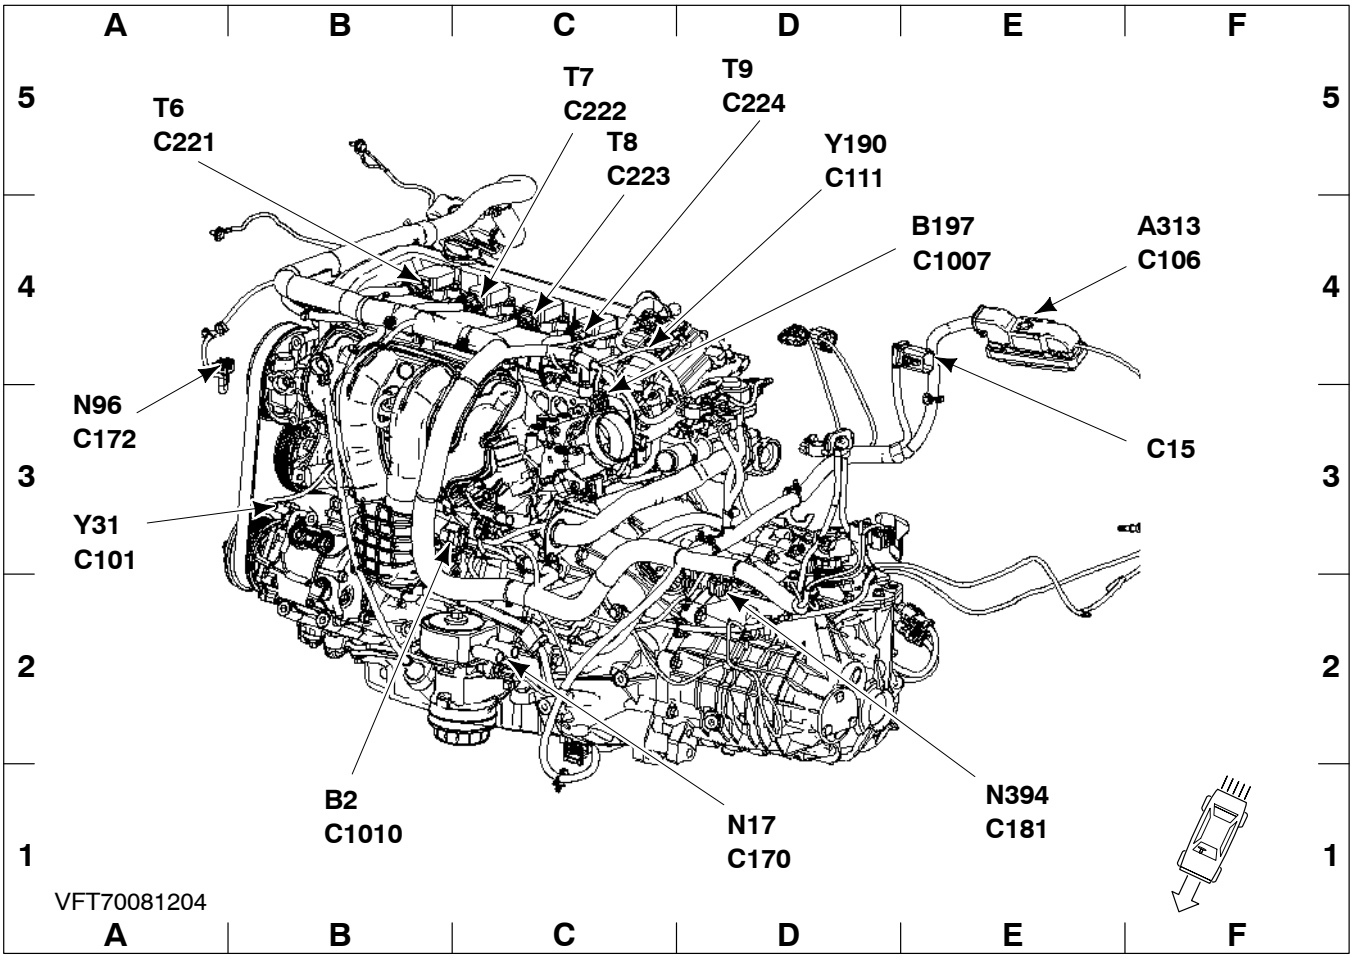


1.8L Duratec–SCi (MI4), front

A313 . Injector Driver Module (IDM) . . . . . F 4
B2 . . . Manifold Absolute Pressure (MAP) sensor B 1
B197 . Swirl plate position sensor . . . . . E 4
C15 . . . . . F 3
C101 . . . . . A 3
C106 . . . . . F 4
C111 . . . . . D 5
C170 . . . . . D 1
C172 . . . . . A 3
C181 . . . . . E 1
C221 . . . . . A 5
C222 . . . . . C 5
C223 . . . . . C 5
C224 . . . . . D 5
C1007 . . . . . E 4
C1010 . . . . . B 1
N17 . . Oil pressure switch . . . . . D 1
N96 . . Power steering pressure switch . . . . . A 3
N394 . Reversing lamp switch . . . . . E 1
T6 . . . Ignition coil, cylinder 1 . . . . . A 5
T7 . . . Ignition coil, cylinder 2 . . . . . C 5
T8 . . . Ignition coil, cylinder 3 . . . . . C 5
T9 . . . Ignition coil, cylinder 4 . . . . . D 5
Y31 . . A/C compressor clutch solenoid . . . . . A 3
Y190 . Fuel control valve . . . . . D 5

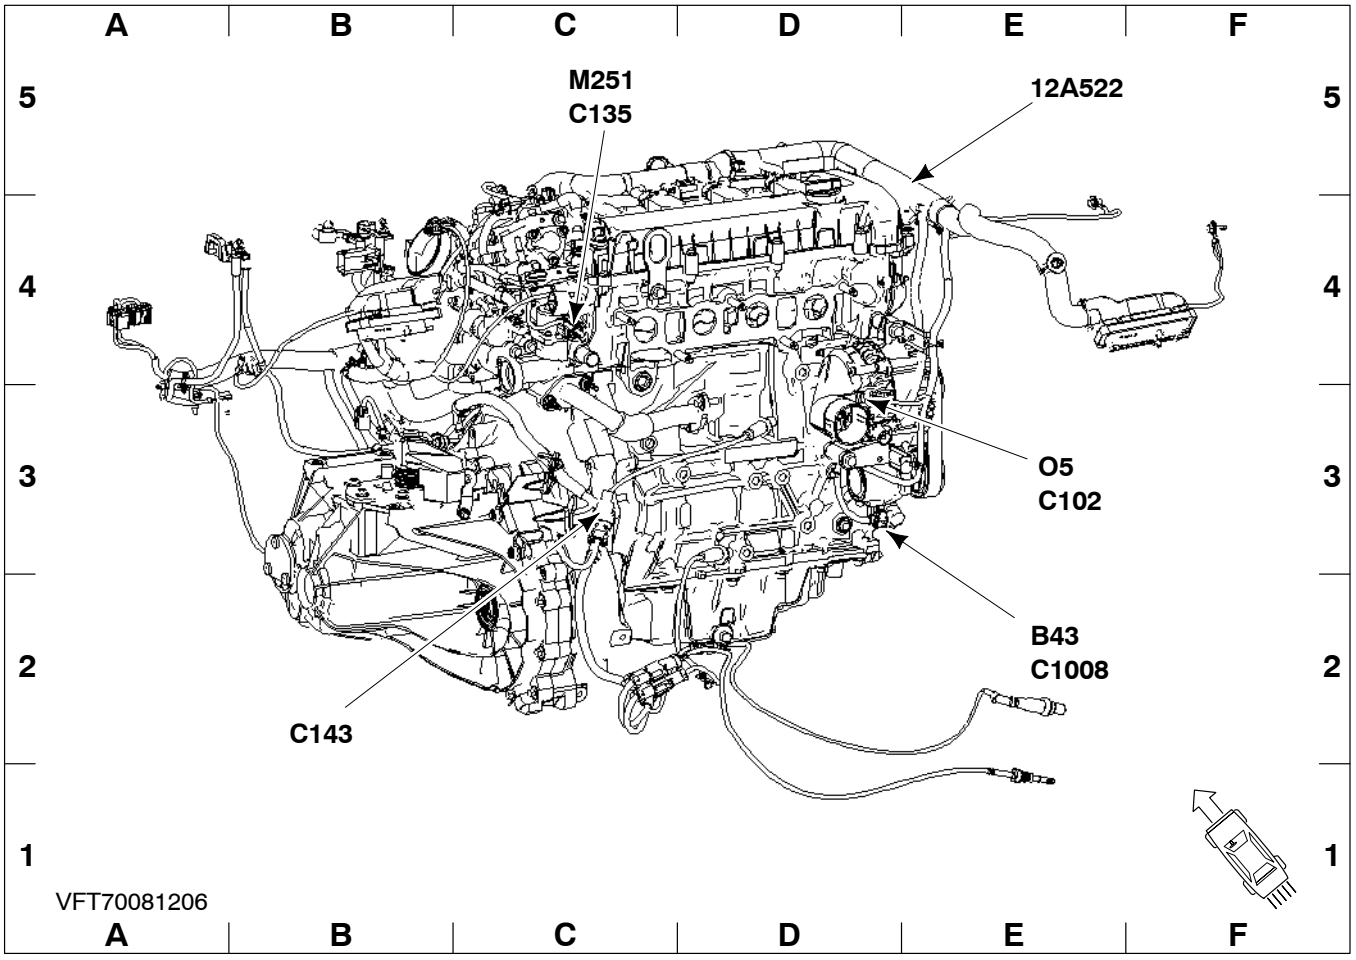


1.8L Duratec–SCi (MI4), rear

12A522 Wiring harness – Engine control . . . . . E 5
B43 . . Crankshaft position sensor . . . . . E 2
C102 . . . . . E 3
C135 . . . . . C 5
C143 . . . . . B 2
C1008 . . . . . E 2
M251 EGR stepper motor . . . . . C 5
O5 . . . Generator . . . . . E 3

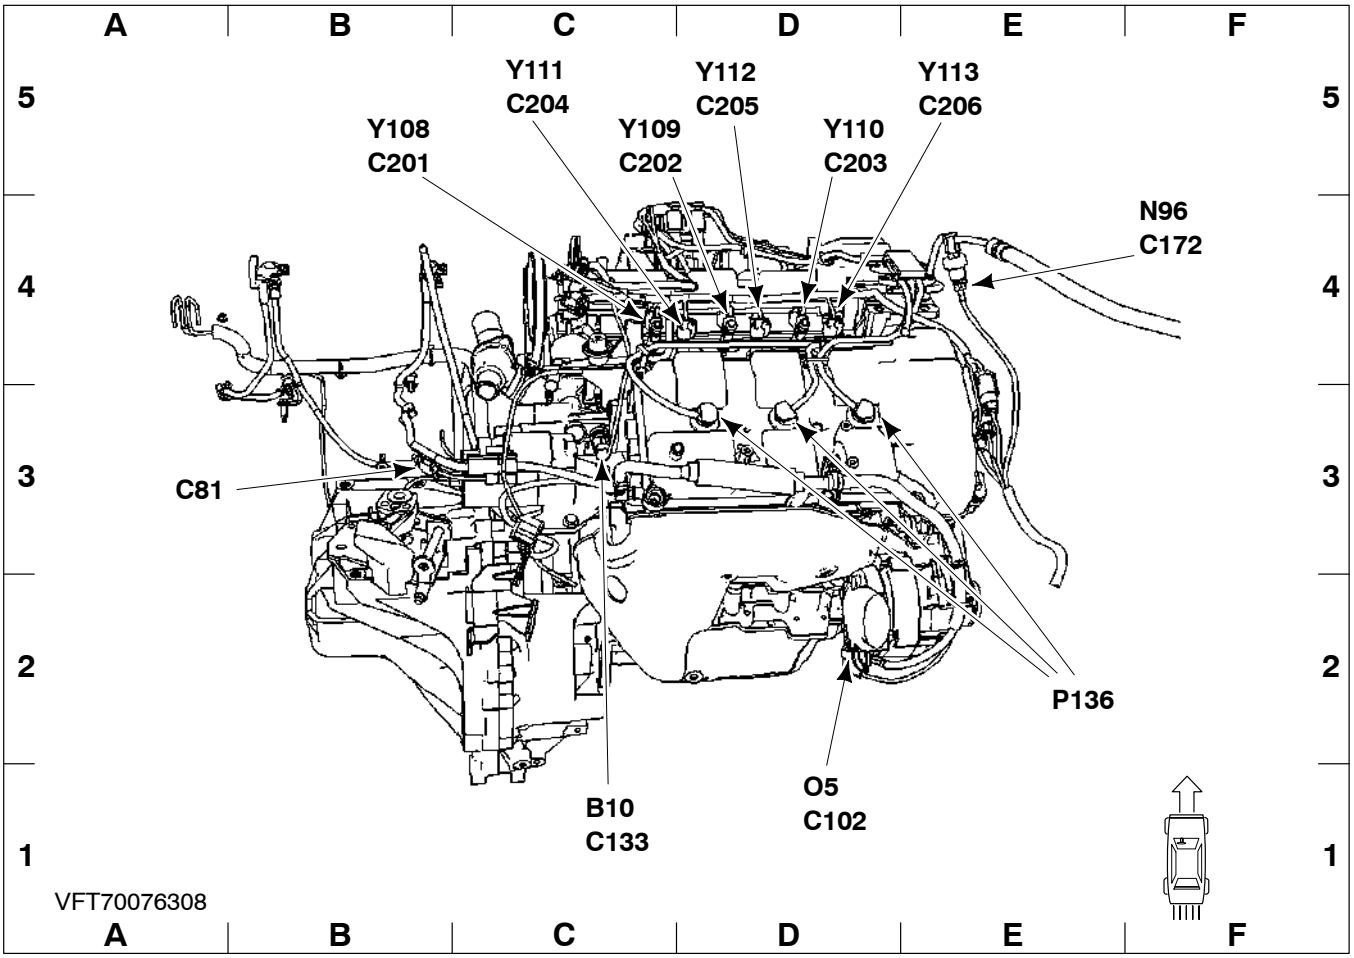


3.0L Duratec–SE (VE6), top

B10 . . Engine Coolant Temperature (ECT) sensor . . . . . C 1
C81 . . . . . A 3
C102 . . . . . D 1
C133 . . . . . C 1
C172 . . . . . F 4
C201 . . . . . B 5
C202 . . . . . C 5
C203 . . . . . D 5
C204 . . . . . C 5
C205 . . . . . D 5
C206 . . . . . E 5
N96 . . Power steering pressure switch . . . . . F 4
O5 . . . Generator . . . . . D 1
P136 . Spark plugs . . . . . E 2
Y108 . Fuel injector 1 . . . . . B 5
Y109 . Fuel injector 2 . . . . . C 5
Y110 . Fuel injector 3 . . . . . D 5
Y111 . Fuel injector 4 . . . . . C 5
Y112 . Fuel injector 5 . . . . . D 5
Y113 . Fuel injector 6 . . . . . E 5

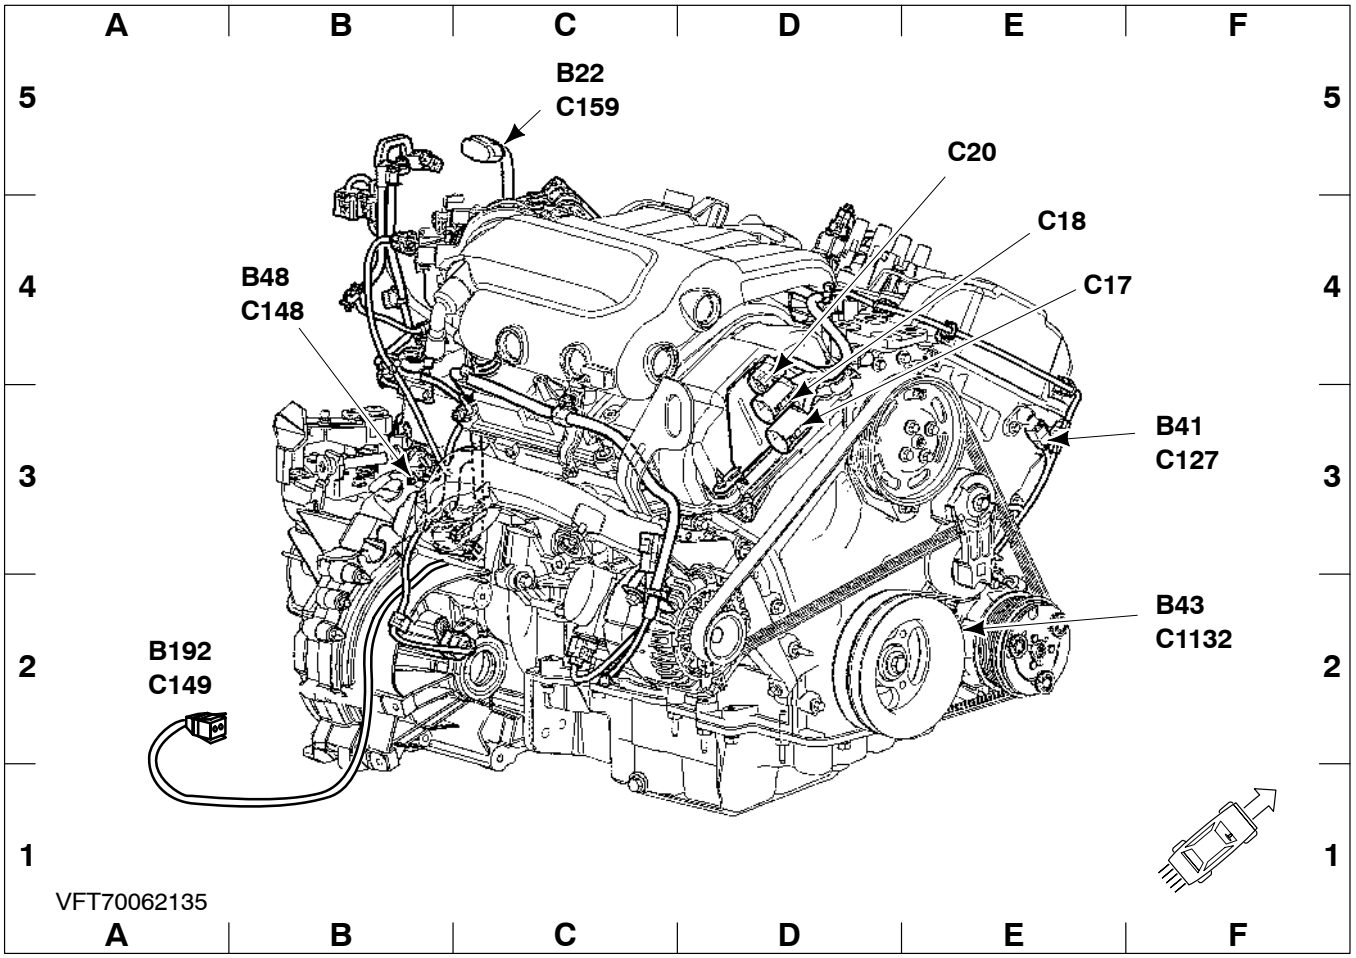


3.0L Duratec–SE (VE6), rear

B22 . . Mass Air Flow (MAF) sensor . . . . . C 5
B41 . . Camshaft position sensor . . . . . F 3
B43 . . Crankshaft position sensor . . . . . F 2
B48 . . Pre–catalyst heated oxygen sensor (HO2S), RH . . . . . B 4
B192 . Catalyst monitor sensor . . . . . A 2
C17 . . . . . E 4
C18 . . . . . E 4
C20 . . . . . E 5
C127 . . . . . F 3
C148 . . . . . B 4
C149 . . . . . A 2
C159 . . . . . C 5
C1132 . . . . . F 2

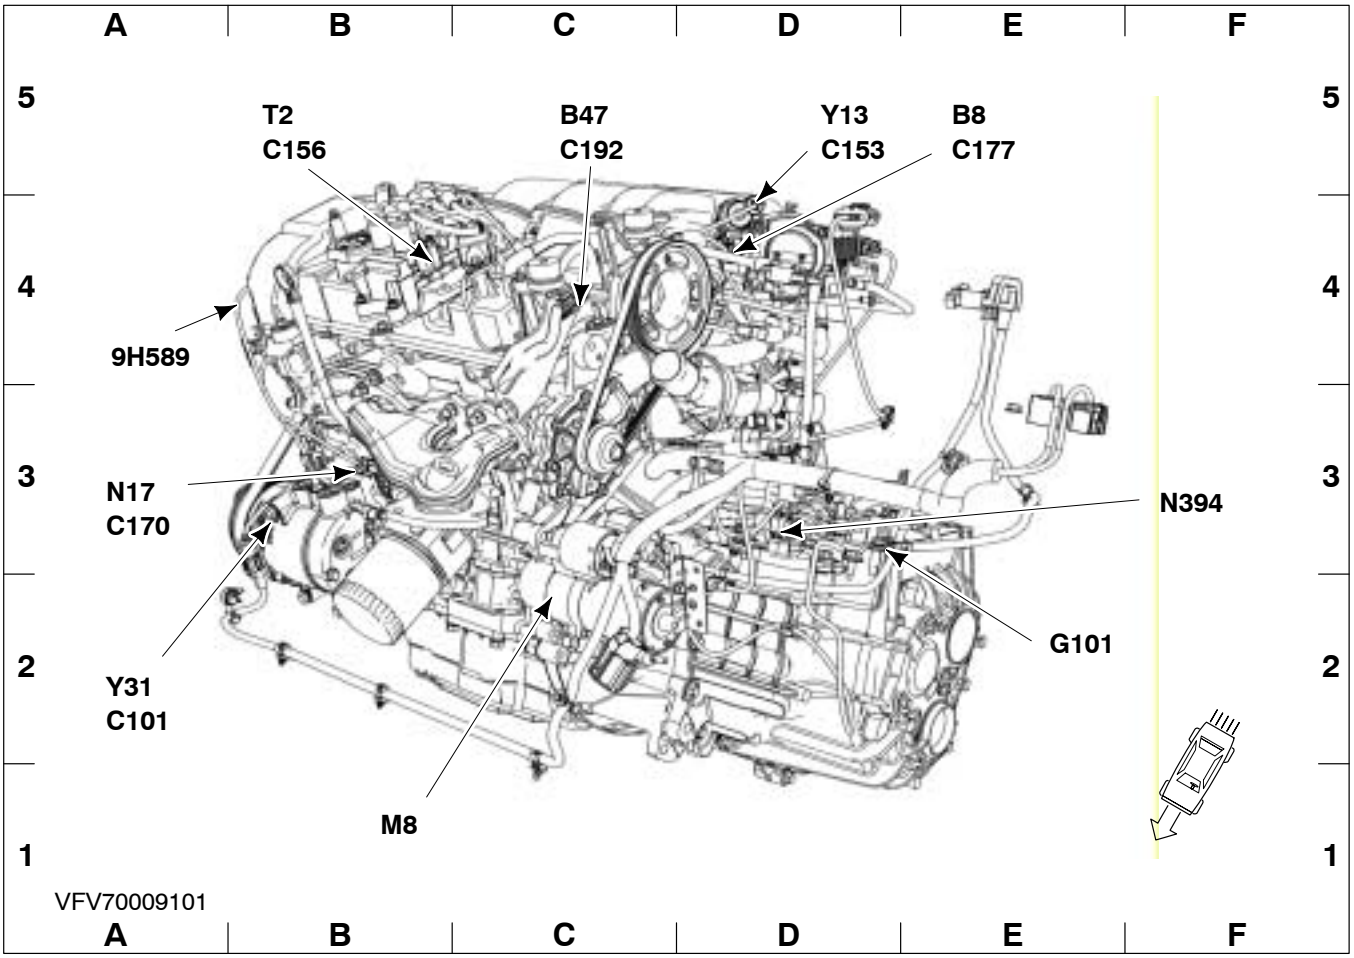

3.0L Duratec–SE (VE6)


9H589 Wiring harness – Engine control . . . . . A 4
B8 . . . Throttle Position Sensor (TPS) . . . . . E 5
B47 . . Pre–catalyst heated oxygen sensor (HO2S), LH . . . . . C 5
C101 . . . . . A 2
C153 . . . . . D 5
C156 . . . . . B 5
C170 . . . . . A 3
C177 . . . . . E 5
C192 . . . . . C 5
G101 . . . . . E 2
M8 . . Starter motor . . . . . B 1
N17 . . Oil pressure switch . . . . . A 3
N394 . Reversing lamp switch . . . . . F 3
T2 . . . Ignition transformer . . . . . B 5
Y13 . . Idle speed control valve . . . . . D 5
Y31 . . A/C compressor clutch solenoid . . . . . A 2

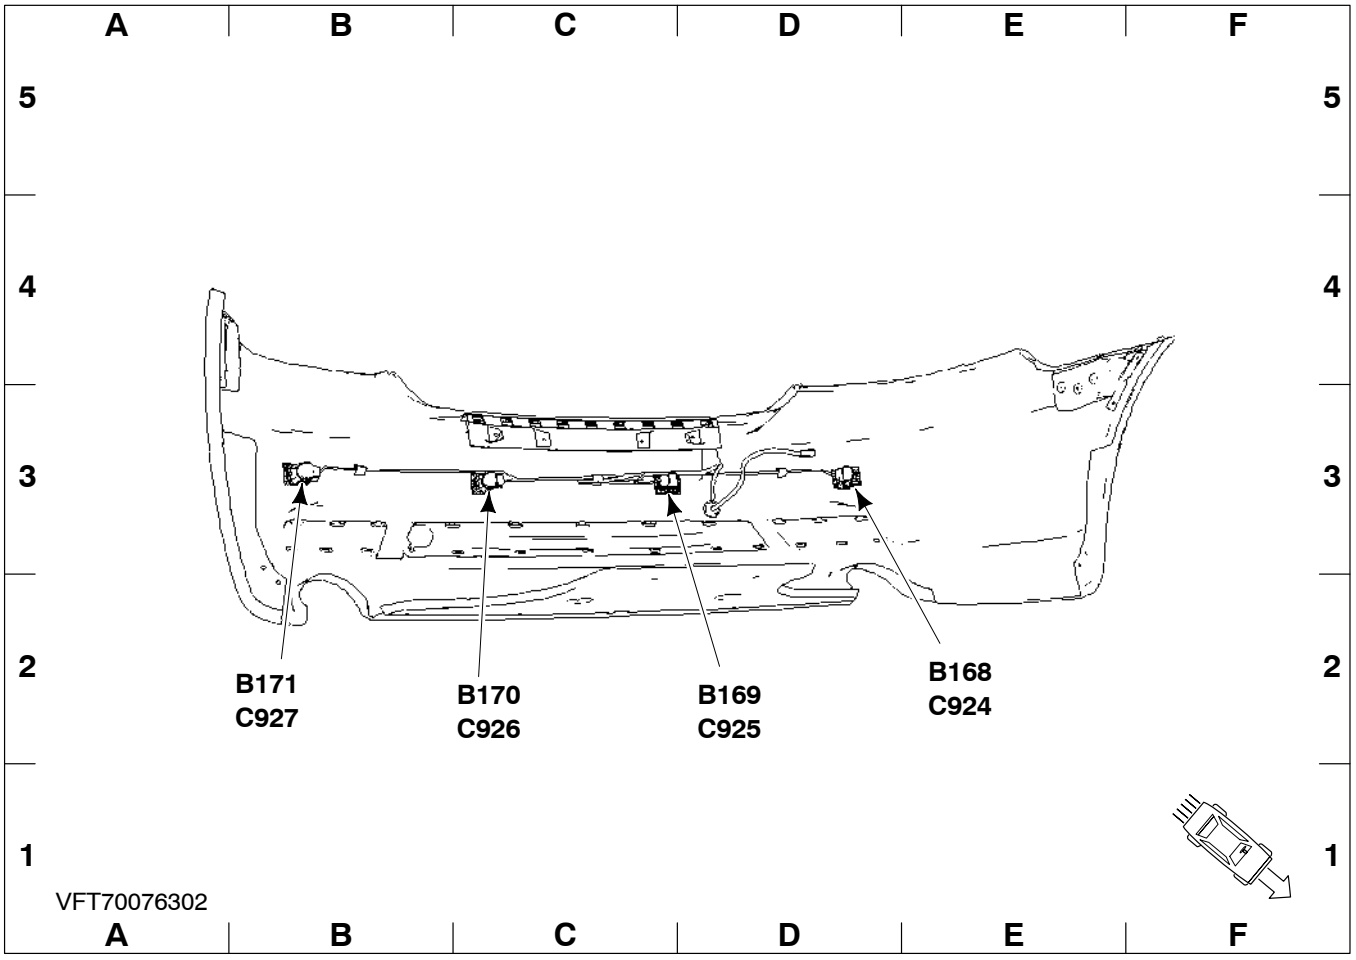

rear bumper, parking aid, Bosch


B168 . Parking aid sensor, rear, outer left . . . . . E 2
B169 . Parking aid sensor, rear, inner left . . . . . D 2
B170 . Parking aid sensor, rear, inner right . . . . C 2
B171 . Parking aid sensor, rear, outer right . . . . B 2

C924 . . . . . E 2
C925 . . . . . D 2
C926 . . . . . C 2
C927 . . . . . B 2

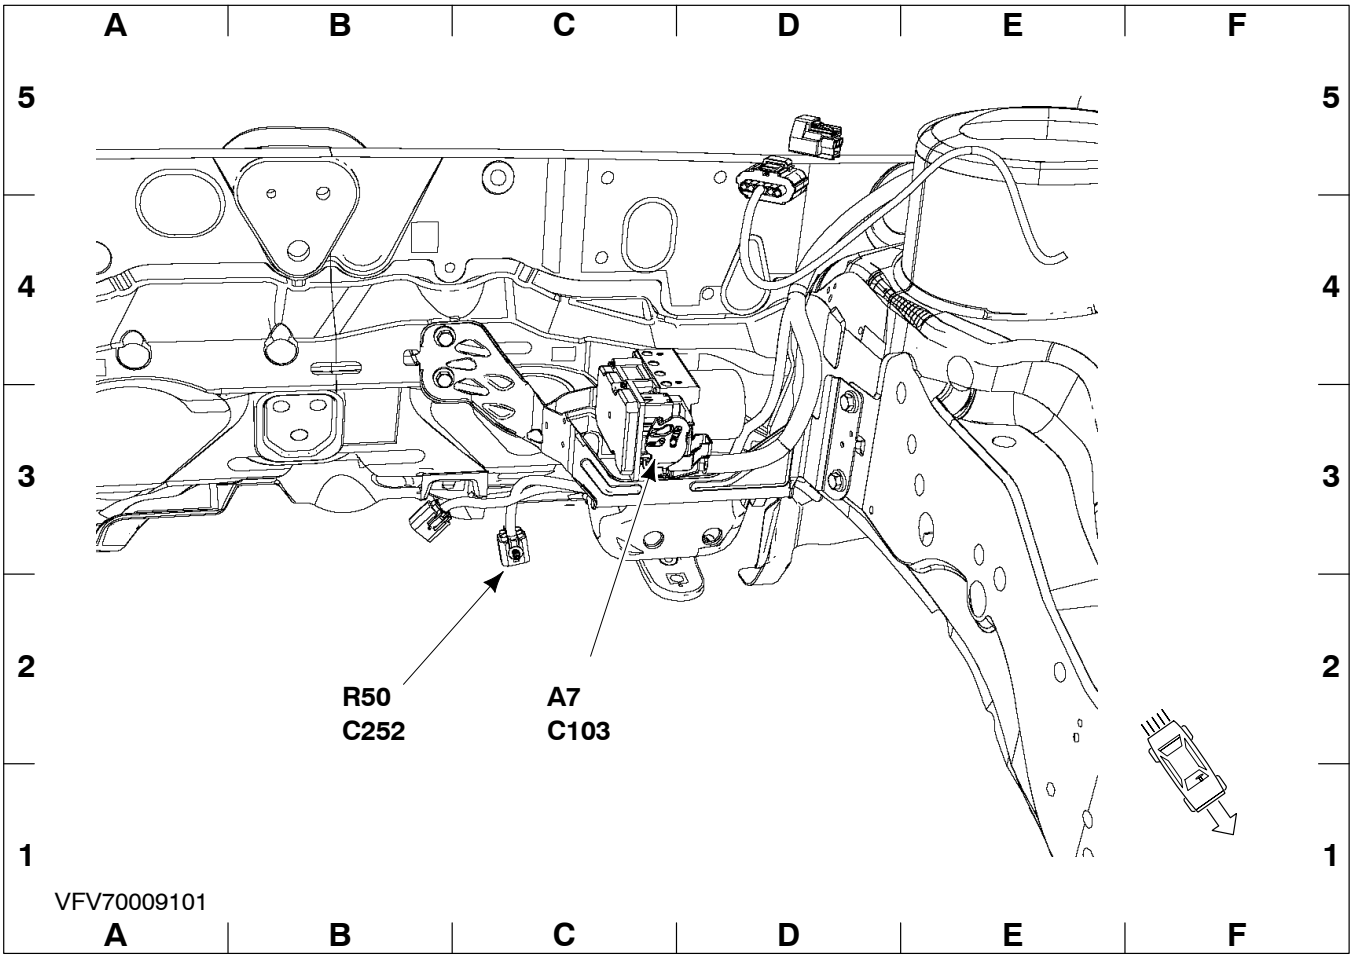


engine bulkhead

A7 . . . ABS module . . . . . C 2
C103 . . . . . C 2
C252 . . . . . B 2
R50 . . Booster heater . . . . . B 2

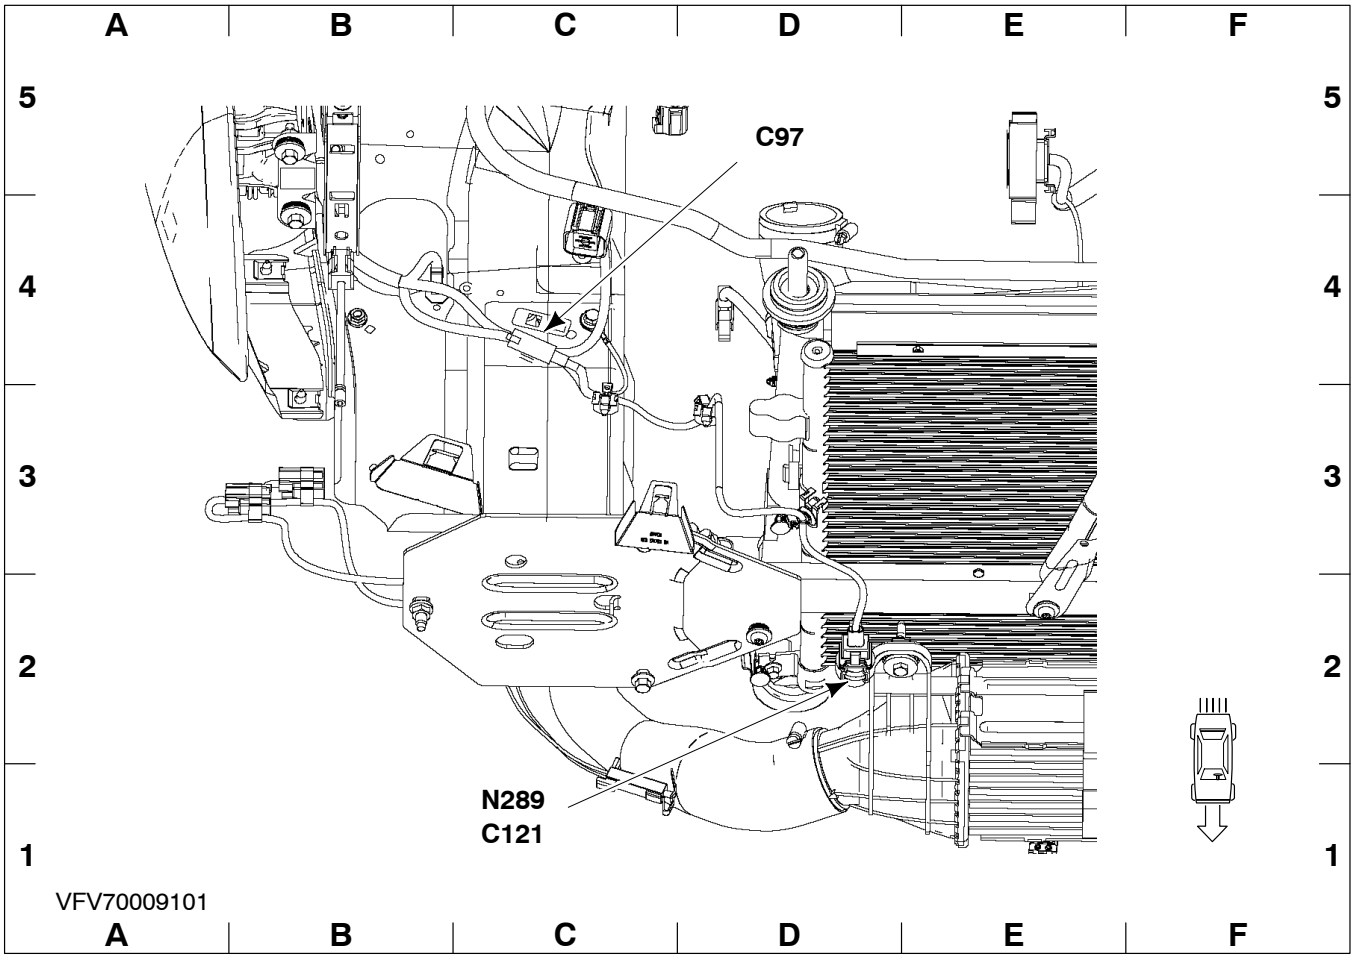

radiator, right front

C97 . . . . . D 5
C121 . . . . . C 1
N289 Thermo switch, outside air temperature . . . C 1

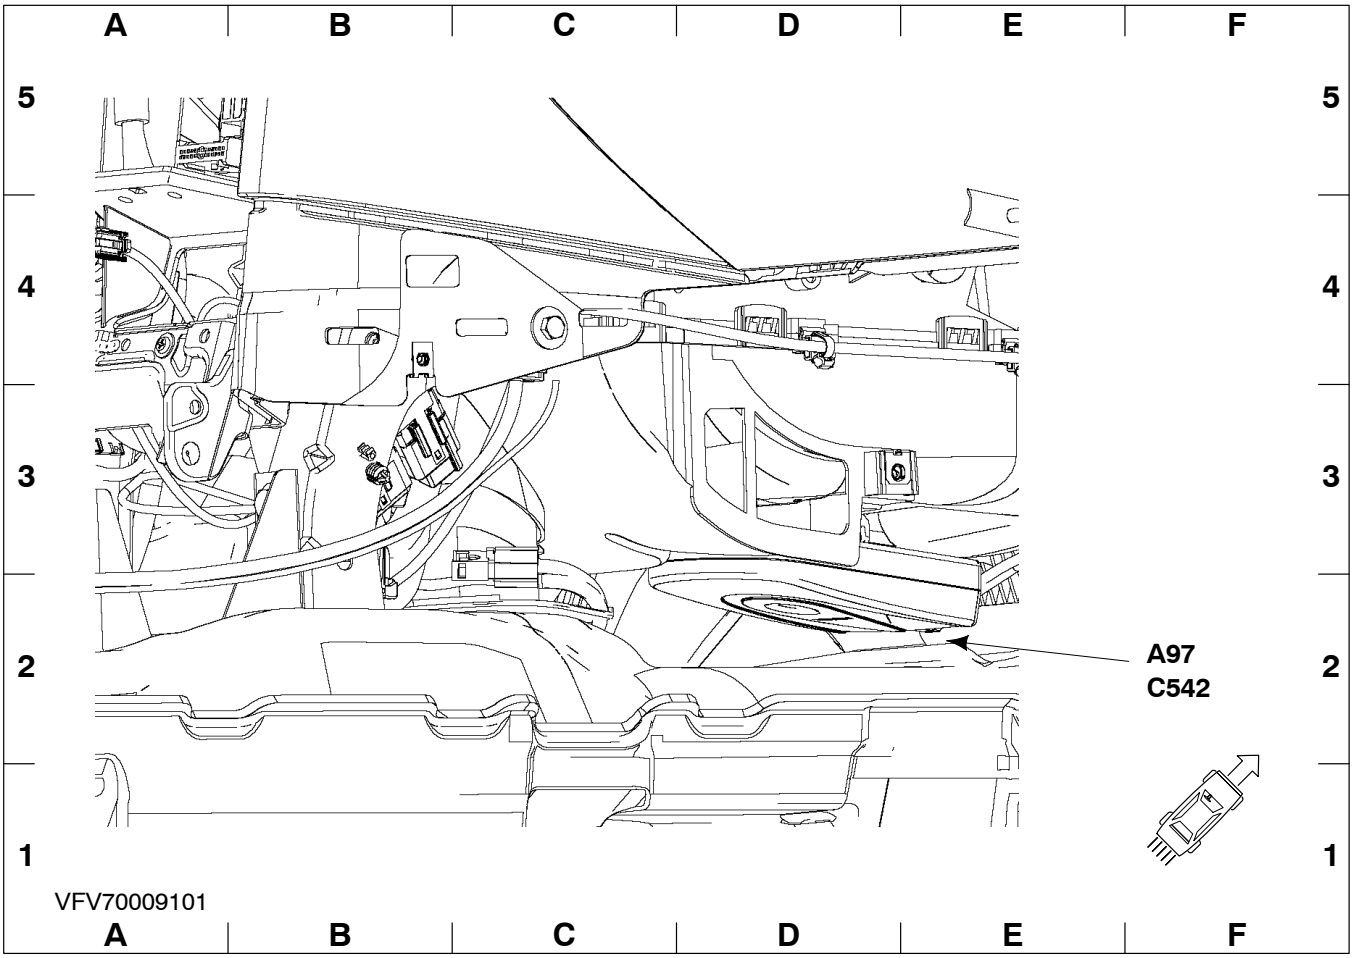


Heating/air conditioning housing

A97 . . Blower motor control module . . . . . F 2 C542 . . . . . F 2


C12 (BU)

14K733

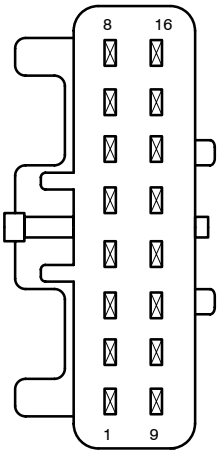

F16065

12A522

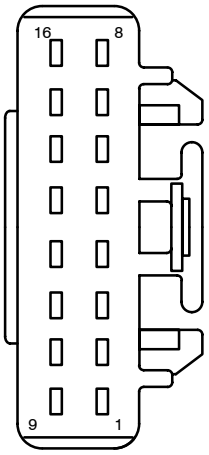

F16055

(1) 50-BB12 (GY)

(2) 15-RD6 (GN/OG)
15-DA2 (GN/BU)
15-DA2A (GN/BU)

(3) 91S-RL25 (BK/BU)
9-PG13 (BN)
9-RN4 (BN/RD)

(4) 91S-RL29 (BK/BU)
15-RH5 (GN/BU)
15-RN1 (GN/BU)
9-RJ22 (BN/BU)

(5) 91S-RH5 (BK/BU)
9-RN4 (BN/RD)

(6) 91S-RL22 (BK/RD)
8-GL37 (WH/GN)

(7) 91S-RL45 (BK/BU)
15S-RE13 (GN/RD)
9-RJ22 (BN/BU)
15S-RE13A (GN/RD)

(8) 91-PA13 (BK/BU)
9-EB6 (BN)
15S-PA13 (GN/BU)

(9) 9-RJ40 (BN/GN)
8-EG9 (WH/GN)
8-RJ14 (WH)

(10) 15S-TA21 (GN/BK)
15S-TA2 (GN/BU)
9-RJ17 (BN/WH)
8-PG13 (WH)

(11) 91S-PA13 (BK/BU)
8-RJ40 (WH/GN)
8-RJ17 (WH/VT)

(12) 10-GL37 (GY/OG)
7-RJ40 (YE/GN)
8-RJ22 (WH/BU)

13) 8-RJ20 (WH/GN)
8-RJ17 (WH/VT)

(14) 15S-RE16 (GN/BK)
8-EB6 (WH)


(15) 15-RL25 (GN/BU)
91S-RH9 (BK/BU)
31S-BB12A (BK/YE)
8-RJ22 (WH/BU)

(16) 8-RJ17 (WH/VT)
31S-BB12 (BK/YE)
49-PA6 (BU)
8-RJ29 (WH/BU)

C14 (GN)

14K733

F16065

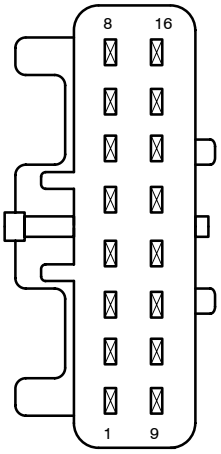

(1) 8-GB8 (WH/BU) +
8-GB8A (WH/BU)
8-GB8 (WH/BU) +
8-XL11 (WH/RD)
8-GB8 (WH/BU)
91S-FA11 (BK/YE)

(2) 15S-LG9 (GN/BK)
15S-LG9 (GN/BK) +
15S-LG16 (GN/OG)
15S-LG9A (GN/BK)

(3) 15-LG28 (GN/WH)
15S-LG28 (GN/WH)
15S-LG9 (GN/BK)
15S-LG9A (GN/BK)
15-LG28A (GN/WH)

(4) 31S-GC21 (BK/GN)

(5) 5-EG9 (BU/BK)
15-RN5 (GN/BU)
15-LG28 (GN/WH)
91S-PA17 (BK/WH)
15-LG28A (GN/WH)
91-BB6 (BK/YE)


(6) 91S-PA7 (BK/BU)
9-BB6 (BN)
15-RJ15 (GN/BU)

(7) 31S-BB12 (BK)
5-EC7 (BU/RD)

(8) 29-BA6 (OG/YE)
15S-BA9 (GN/BK)
29-RE8 (OG/YE)
29-TA55 (OG/BK)
29-RE8A (OG/YE)

12A522

F16055

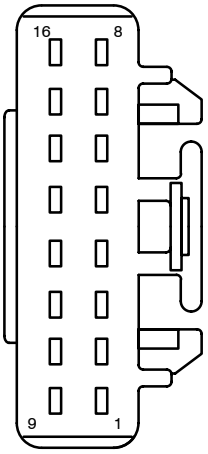

(9) 15S-FA12 (GN/BU)
91S-RJ14 (BK/YE)
15-TA55 (GN/BK)

(10) 15-RN1 (GN/BU)
8-FA49 (WH/VT)
91S-RJ25 (BK/OG)

(11) 31S-GL6 (BK/OG)
91S-RJ26 (BK/GN)
15-DA1 (GN/YE)
15-RL42 (GN/BU)

(12) 9-FA49 (BN/WH)
91S-PA7 (BK/BU)
9-GE38 (BN/YE)
15-DA1 (GN/YE)

(13) 29-RE8 (OG/YE)
8-BB6 (WH)
29-RE8 (OG/YE) +
29-TA55 (OG/BK)
91S-PA17 (BK/WH)
91S-BB6 (BK/YE)


(14) 91S-RH15 (BK/YE)
4-EG9 (GY/RD)
91S-FA11 (BK/YE)

(15) 8-RJ29 (WH/BU)
4-EC7 (GY/RD)
91-RJ22 (BK/OG)

(16) 91-RJ29 (BK/OG)
15-TA55 (GN/BK)

C15

9H589
14K733

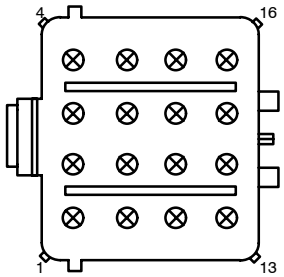

F16036

(1) 7-RL45 (YE/RD)
9-RJ30 (BN)
15-RL10 (GN/WH)

(2) 8-PA37 (WH/BU)
91S-PA49 (BK/YE)
8-RJ30 (WH)
8-RJ11 (WH/GN)

(3) 8-PA49 (WH)
15-PA49 (GN/YE)
7-RJ35 (YE/RD)
9-RJ11 (BN/GN)

(4) 31S-GC21 (BK/GN)
9-RJ35 (BN/RD)
7-RJ11 (YE/GN)

(5) 8-RS17 (WH)
31S-RL10 (BK/WH)

(6) 91S-RL29 (BK/BU)

(7) 8-RS16 (WH/VT)

(8) 8-RJ33 (WH/VT)

(9) 5-EC6 (BU)

(10) 8-RL45 (WH/RD)
15-RL29 (GN/BU)
15-RL11 (GN/YE)

(11) 8-GB7 (WH/VT)
7-RJ30 (YE)
15-RL12 (GN/BU)

(12) 9-GB7 (BN/WH)
15S-PG16 (GN/YE)
31S-RL12 (BK/BU)


(13) 4-EC6 (GY)
8-PG11 (WH/BK)
31S-RL11 (BK/YE)

(14) 9-DA2 (BN/RD)

(15) 91-RS4 (BK/YE)
8-RJ35 (WH/RD)
15-RL13 (GN/RD)

(16) 15S-RS4 (GN/YE)
31S-RL13 (BK/OG)

12A522

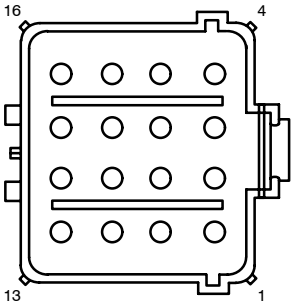

F16034

(1) 91S-PA49 (BK/YE)
9-RJ30 (BN)
15S-RL10 (GN/WH)

(2) 7-PA37 (YE/BU)
8-RJ30 (WH)
8-RJ11 (WH/GN)

(3) 8-PA37 (WH/BU)
7-RJ35 (YE/RD)
9-RJ11 (BN/GN)

(4) 31S-GC21 (BK/GN)
9-RJ35 (BN/RD)
7-RJ11 (YE/GN)

(5) 8-RS17 (WH)
91S-RL10 (BK/WH)

(6) 91S-RL29 (BK/BU)

(7) 8-RS16 (WH/VT)

(8) 8-RJ33 (WH/VT)

(9) 5-EC6 (BU)

(10) 8-RJ45 (WH)
15-RL29 (GN/BU)
8-RJ6 (WH/GN)
15S-RL (GN/YE)

(11) 8-GB7 (WH/VT)
7-RJ30 (YE)
15S-RL12 (GN/BU)

(12) 9-GB7 (BN/WH)
15S-PG16 (GN/YE)
91S-RL12 (BK/BU)

(13) 4-EC6 (GY)
8-PG11 (WH/BK)
91S-RL11 (BK/YE)


(14) 9-DA2 (BN/RD)
9-RJ33 (BN/WH)

(15) 91-RS4 (BK/YE)
8-RJ35 (WH/RD)
15S-RL13 (GN/RD)

(16) 15S-RS4 (GN/YE)
91S-RL13 (BK/OG)

C16

9H589

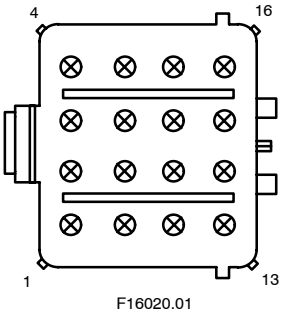

F16020.01

(1) 8-RJ3 (WH/VT)
15-RL10 (GN/WH)

(2) 7-RJ28 (YE)
8-RJ11 (WH/GN)

(3) 8-RJ28 (WH)
9-RJ11 (BN/GN)

(4) 7-RJ11 (YE/GN)

(5) 9-RJ3 (BN/WH)
31S-RL10 (BK/WH)

(6) 9-RJ28 (BN)

(7)

(8)

(9) 15-RN1 (GN/BU)

(10) 91S-RL9 (BK/YE)
15-RL11 (GN/YE)

(11) 15-RL12 (GN/BU)

(12) 31S-RL12 (BK/BU)


(13) 91S-RL10 (BK/WH)
31S-RL11 (BK/YE)

(14) 91S-RL11 (BK/YE)

(15) 91S-RL12 (BK/BU)
15-RL13 (GN/RD)

(16) 91S-RL13 (BK/OG)
31S-RL13 (BK/OG)

12A522

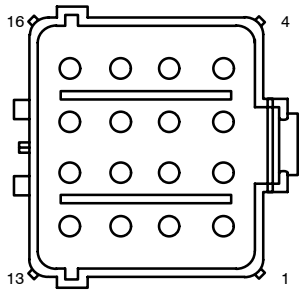

F16020

(1) 8-RJ3 (WH/VT)
15S-RL10 (GN/WH)

(2) 7-RJ28 (YE)
8-RJ11 (WH/GN)

(3) 8-RJ28 (WH)
9-RJ11 (BN/GN)

(4) 7-RJ11 (YE/GN)

(5) 9-RJ3 (BN/WH)
91S-RL10 (BK/WH)

(6) 9-RJ28 (BN)

(7)

(8)

(9) 15-RN1 (GN/BU)

(10) 91S-RL9 (BK/YE)
15S-RL11 (GN/YE)

(11) 15S-RL12 (GN/BU)

(12) 91S-RL12 (BK/BU)

(13) 91S-RL10 (BK/WH)
91S-RL11 (BK/YE)

(14) 91S-RL11 (BK/YE)


(15) 91S-RL12 (BK/BU)
15S-RL13 (GN/RD)

(16) 91S-RL13 (BK/OG)

C17 (GY)

9H589

F12001

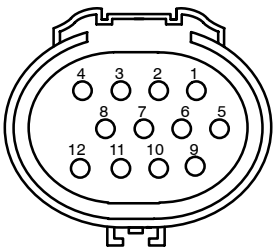

(1) 31S-GC21 (BK/GN)
15-RN1 (GN/BU)

(2) 9-RN3 (BN/RD)
91S-RL9 (BK/YE)

(3) 7-RJ28 (YE)
91S-RL15 (BK/RD)

(4) 91S-RL14 (BK/GN)

(5) 8-RJ3 (WH/VT)
15-DA2 (GN/BU)

(6) 9-RJ3 (BN/WH)
9-RR3 (BN/YE)

(7) 8-RJ6 (WH/GN)
9-RR1 (BN/BU)

(8) 8-RJ28 (WH)
9-RR2 (BN/GN)

(9) 91-RJ4A (BK/BU)
91-RJ4 (BK/BU)
91S-RL10 (BK/WH)


(10) 8-RJ4 (WH/RD)
91S-RL11 (BK/YE)

(11) 9-RJ4 (BN/RD)
91S-RL12 (BK/BU)

(12) 91S-RL13 (BK/OG)

14K733
12A522

F12004

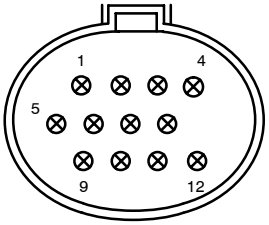

(1) 31S-GC21 (BK/GN)
15-RN1 (GN/BU)

(2) 9-RN3 (BN/RD)
91S-RL9 (BK/YE)

(3) 7-RJ28 (YE)
91S-RL15 (BK/RD)

(4) 91S-RL14 (BK/GN)

(5) 8-RJ3 (WH/VT)
15-DA2A (GN/BU)

(6) 9-RJ3 (BN/WH)
9-RR3A (BN/YE)

(7) 8-RJ6 (WH/GN)
9-RR1A (BN/BU)

(8) 8-RJ28 (WH)
9-RR2A (BN/GN)

(9) 91-RJ4B (BK/BU)
91S-RL10 (BK/WH)

(10) 8-RJ4 (WH/RD)
91S-RL11 (BK/YE)


(11) 9-RJ4 (BN/RD)
91S-RL12 (BK/BU)

(12) 91S-RL13 (BK/OG)

C18

9H589

F12001

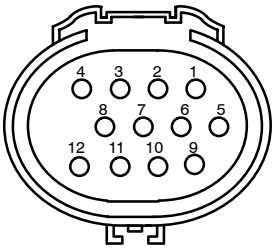

(1) 15-RN3 (GN/BU)
31-LD10 (BK)

(2) 91S-RL9 (BK/YE)

(3) 91S-RL15 (BK/RD)

(4) 91S-RL14 (BK/GN)

(5) 15-DA2 (GN/BU)

(6) 9-RR3 (BN/YE)

(7) 9-RR1 (BN/BU)

(8) 9-RR2 (BN/GN)

(9) 91S-RL10 (BK/WH)


(10) 91S-RL11 (BK/YE)

(11) 91S-RL12 (BK/BU)

(12) 91S-RL13 (BK/OG)

14K733
12A522

F12004

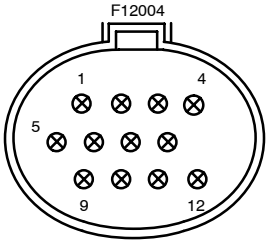

(1) 15-RN1 (GN/BU)
31-LD9 (BK)

(2) 91S-RL9 (BK/YE)

(3) 91S-RL15 (BK/RD)

(4) 91S-RL14 (BK/GN)

(5) 15-DA2 (GN/BU)

(6) 9-RR3 (BN/YE)

(7) 9-RR1 (BN/BU)

(8) 9-RR2 (BN/GN)

(9) 91S-RL10 (BK/WH)

(10) 91S-RL11 (BK/YE)

(11) 91S-RL12 (BK/BU)


(12) 91S-RL13 (BK/OG)

C19

Diesel engines


14K733 / 9H589

F03017

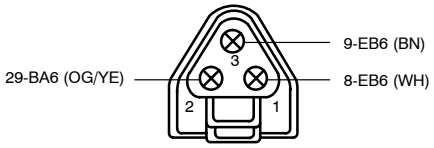

14300

F03015

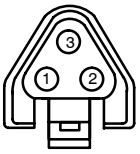

(1) 8-EB6 (WH)
8-BA6 (WH)

(2) 29-BA6 (OG/YE)


(3) 9-EB6 (BN)
9-BA6 (BN)

C20

2.5L Duratec–VE (VE6)
3.0L Duratec–ST (VE6)


9H589

F06007

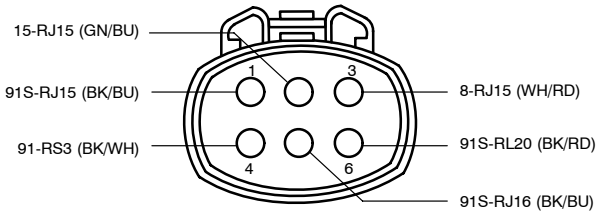

12A522
14K733


F06008

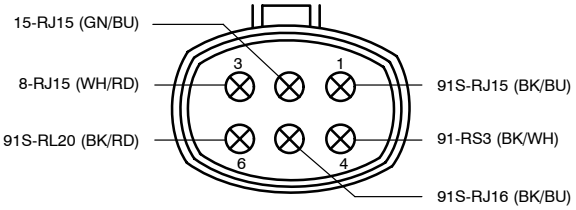

C28


14K733

F02005

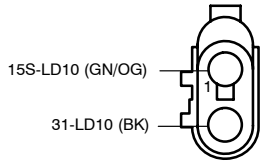

15A211


F02007

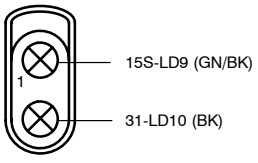

C29

12A522


F01014



P20
Glow plugs

C30 (BN)

14K733

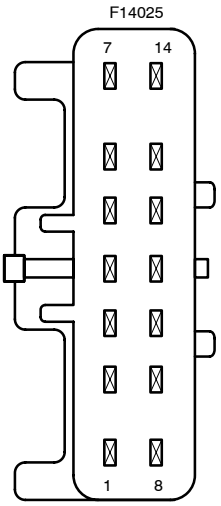

(1) 30-BB9 (RD)

(2) 15S-LD10 (GN/OG)

(3) 64-LE45 (BU) +
64-LE46 (BU/RD)

(4) 50-BB12 (GY)

(5) 30-LE21 (RD)

(6) 5-EC1 (BU/RD)
5-EC7 (BU/RD) +
5-CF71 (BU/RD)
5-EC7 (BU/RD)
5-EC1 (BU/RD) +
5-TA58 (BU/YE)
5-EC9 (BU) +
5-EC7 (BU/RD)
15-KA9B (GN/RD)

(7) 33-KA1 (YE/BK)
33-KA34 (YE/BK)

(8) 32-KA10 (WH/GN)

(9) 4-EC1 (GY/RD)
4-EC7 (GY/RD) +
4-CF71 (GY/RD)
4-EC7 (GY/RD)
4-EC1 (GY/RD) +
4-TA58 (GY/BK)
4-EC9 (GY) +
4-EC7 (GY/RD)

(10) 8-GB8 (WH/BU) +
8-PG18 (WH/BU)
8-G38 (WH/BU) +
8-XL11 (WH/RD)
8-G78 (WH/BU)
8-GB8B (WH/BU)+
8-PG18 (WH/BU)
15-DA2B (GN/BU)


(11) 15S-KA22 (GN/BU)

(12) 15-LE19 (GN/BU)
32-KA9B (WH/BU)

(13) 32-KA34 (WH/BK)

(14) 32-KA11 (WH/BK)

14K024

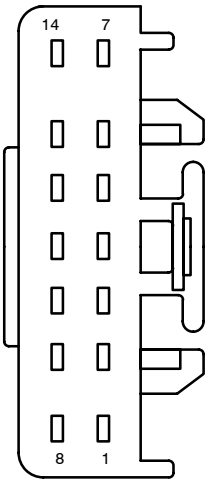

(1) 30-BB9 (RD)

(2) 15S-LD10 (GN/OG)

(3) 64-LE45 (BU)

(4) 50-BB12 (GY)

(5) 30-LE21 (RD)

(6) 5-EC4 (BU/RD)
15-KA9B (GN/RD)

(7) 33-KA34 (YE/BK)
33-KA34A (YE/BK)

(8) 32-KA10 (WH/GN)

(9) 4-EC4 (GY/RD)

(10) 8-GB8 (WH/BU) +
8-MD24 (WH/GN)
15-DA2B (GN/BU)

(11) 15S-KA22B (GN/BU)
15S-KA22 (GN/BU)


(12) 15-LE19 (GN/BU)
32-KA9B (WH/BU)

(13) 32-KA34 (WH/BK)

(14) 32-KA11 (WH/BK)

C31 (BU)


14K733

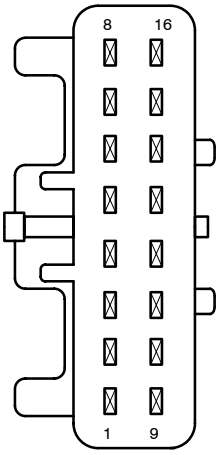

F16075

(1) 15-HC21 (GN/BK)
(2) 8-JA49 (WH)
(3) 15S-RP3 (GN/OG)
(4) 15S-TA2 (GN/BU)
15S-TA21 (GN/BK)
49-GL26 (BU/YE)
(5) 15S-RE16 (GN/BK)
(6) 8-CF40 (WH/GN)
(7) 7-CF40 (YE/GN)
(8) 9-LE54 (BN/YE) +
9-LE53 (BN/BU)
(9) 15S-TA21 (GN/BK)
(10) 9-JA49 (BN)
(11) 15S-LG9 (GN/BK)
15S-LG16 (GN/OG) +
15S-LG9 (GN/BK)
(12) 7-LE54 (YE/BK) +
7-LE53 (YE/BU)
(13) 8-CF34 (WH/BU)
(14) 7-CF34 (YE/BU)
(15) 8-LE54 (WH/BK)
(16)

14A005

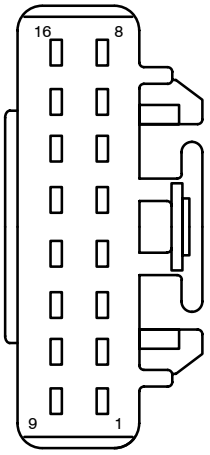


F16055

(1) 15-HC21 (GN/BK)
(2) 8-JA49 (WH)
(3) 15S-RP3 (GN/OG)
(4) 15S-TA21 (GN/BK)
49-GL26 (BU/YE)
(5) 15S-RE16 (GN/BK)
(6) 8-CF40 (WH/GN)
(7) 7-CF40 (YE/GN)
(8) 9-LE54 (BN/YE)
(9) 15S-TA21 (GN/BK)
(10) 9-JA49 (BN)
(11) 15S-AD15 (GN/RD) +
15S-LG9A (GN/BK)
15S-LG9A (GN/BK)
(12) 7-LE54 (YE/BK)
(13) 8-CF34 (WH/BU)
(14) 7-CF34 (YE/BU)
(15) 8-LE54 (WH/BK)
(16)

C32

14K733


F22012

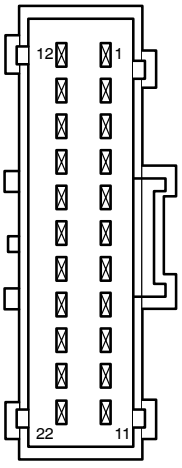

(1) 8-PG11 (WH/BK)
(2) 15S-FA17 (GN/OG)
15S-FA17A (GN/(OG)
(3) 15S-HB6 (GN/YE)
(4) 15S-BA9 (GN/BK) +
15S-BA9A (GN/BK)
(5) 31S-GC21 (BK/GN)
(6) 31S-CF28 (BK/RD)
(7) 8-PG13 (WH)
(8) 8-EG9 (WH/GN)
(9) 4-EG9 (GY/OG)
(10) 31S-GC7 (BK/BU)
(11) 8-EE1 (WH/RD)
8-CF53 (WH/VT)
(12) 5-EG9 (BU/BK)
(13) 9-PG13 (BN)
(14) 31S-GJ7 (BK/BU)
91S-GJ7 (BK/BU)
(15) 31S-GL6 (BK/OG)
(16) 10-GL37 (GY/OG)
(17) 8-GL37 (WH/GN)
(18) 31S-CF70 (BK/GN)
(19) 7-RJ1 (YE/BK)
(20) 8-RJ1 (WH/BK)
9-FA49 (BN/WH)
5-EG9 (BU/BK)
(21) 9-RJ1 (BN/YE)
8-FA49 (WH/VT)
(22) 31S-GC10 (BK/RD)

14K024


F22025

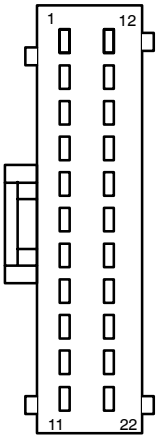

(1) 8-PG11 (WH/BK)
(2) 15S-FA17 (GN/OG)
15S-FA17A (GN/OG)
(3) 15S-HB6 (GN/YE)
(4) 15S-BA9 (GN/BK)
(5) 31S-GC21 (BK/GN)
(6) 31S-CF28 (BK/RD)
(7) 8-PG13 (WH)
(8) 8-EG9 (WH/GN)
(9) 4-EG9 (GY/OG)
(10) 31S-GC7 (BK/BU)
(11) 8-EE1 (WH/RD)
(12) 5-EG9 (BU/BK)
(13) 9-PG13 (BN)
(14) 31S-GJ7 (BK/BU)
91S-GJ7 (BK/BU)
(15) 31S-GL6 (BK/OG)
(16) 10-GL37 (GY/OG)
(17) 8-GL37 (WH/GN)
(18) 31S-CF70 (BK/GN)
(19) 7-RJ1 (YE/BK)
(20) 8-RJ1 (WH/BK)
9-FA49 (BN/WH)
5-EG9 (BU/BK)
(21) 9-RJ1 (BN/YE)
8-FA49 (WH/VT)
(22) 31S-GC10 (BK/RD)

C33


14K024

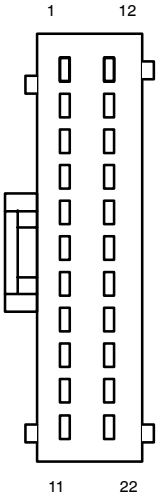

F22025

(1)	4-EC4 (GY/RD)
(2)	5-EC4 (BU/RD)
(3)	31S-CF45 (BK/GN)
(4)	31S-CF54 (BK/WH)
(5)	
(6)	
(7)	
(8)	
(9)	15-LE19 (GN/BU)
(10)	15-CF67A (GN/BU)
(11)	31-CF67A (BK)
(12)	
(13)	
(14)	
(15)	
(16)	
(17)	
(18)	
(19)	8-GB8 (WH/BU)
(20)	
(21)	
(22)	

14K733

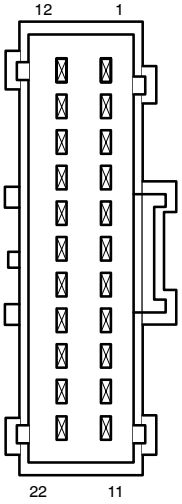


F22012

(1)	4-EC1 (GY/RD)
(2)	5-EC1 (BU/RD)
(3)	31S-CF45 (BK/GN)
(4)	31S-CF54 (BK/WH)
(5)	
(6)	
(7)	
(8)	
(9)	15-LE19 (GN/BU)
(10)	15-CF67 (GN/BU)
(11)	31-CF67 (BK)
(12)	
(13)	
(14)	
(15)	
(16)	
(17)	
(18)	
(19)	8-GB8 (WH/BU) 8-GB8B (WH/BU)
(20)	
(21)	
(22)	

C34

10E925


F20040

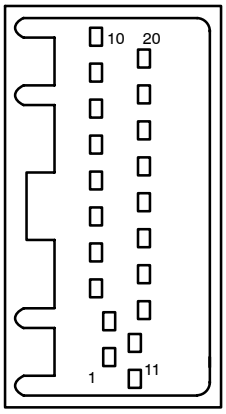

(1) 29-MD1 (OG/YE)
(2) 91-MD1 (BK/YE)
(3)
(4) 1-MD49 (WH/GN)
(5) 2-MD49 (GY/OG)
(6) 1-MD50 (WH/BK)
(7) 2-MD50 (GY/BK)
(8) 31-MD8A (BK)
(9) 4-EC2B (GY/RD)
(10) 5-EC2B (BU/RD)
(11) 29-MD8 (OG)
(12)
(13) 75-GK6 (YE/BU)
(14) 64S-LK17 (BU/BK)
(15) 15S-GK9 (GN/WH)
(16) 1-GK18 (WH/BU)
(17) 2-GK18 (GY/VT)
(18) 31-GK18A (BK)
(19) 4-EC2C (GY/RD)
(20) 5-EC2C (BU/RD)

14A227

F20020

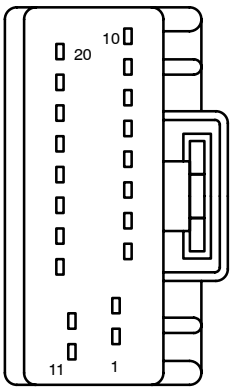


(1) 29-MD1 (OG/YE)
(2) 91-MD1 (BK/YE)
(3)
(4) 1-MD49 (WH/GN)
(5) 2-MD49 (GY/OG)
(6) 1-MD50 (WH/BK)
(7) 2-MD50 (GY/BK)
(8) 48-MD8 (Shield)
(9) 4-EC3 (GY/RD)
(10) 5-EC3 (BU/RD)
(11) 29-MD8 (OG)
(12)
(13) 75-GK6 (YE/BU)
(14) 64S-LK17 (BU/BK)
(15) 15S-GK9 (GN/WH)
(16) 1-GK18 (WH/BU)
(17) 2-GK18 (GY/VT)
(18) 48-GK18 (Shield)
(19) 4-EC3E (GY/RD)
(20) 5-EC3E (BU/RD)

C36

14A227


F16077

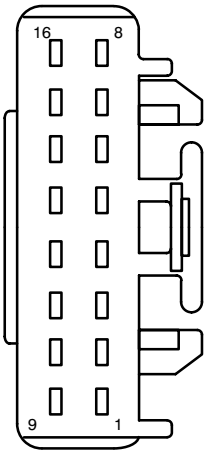

(1)	29-MD8 (OG)	(9)	91-MD8 (BK/OG)
(2)		(10)	48-MD8 (Shield)
(3)	1-MD49 (WH/GN)	(11)	2-MD49 (GY/OG)
(4)	1-MD50 (WH/BK)	(12)	2-MD50 (GY/BK)
(5)		(13)	
(6)		(14)	
(7)	4-EC3B (GY/RD)	(15)	5-EC3B (BU/RD)
(8)	4-EC3 (GY/RD)	(16)	5-EC3 (BU/RD)

10E925

F16075

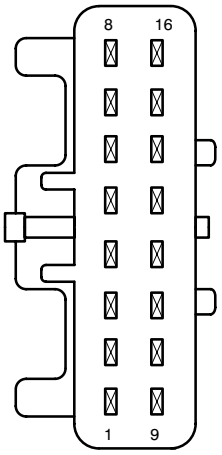


(1)	29-MD8 (OG) + 29-MD16 (OG/GN)	(9)	91-MD8 (BK/OG)
(2)		(10)	31-MD8A (BK)
(3)	1-MD49 (WH/GN)	(11)	2-MD49 (GY/OG)
(4)	1-MD50 (WH/BK)	(12)	2-MD50 (GY/BK)
(5)		(13)	
(6)		(14)	
(7)	4-EC2B (GY/RD)	(15)	5-EC2B (BU/RD)
(8)	4-EC2 (GY/RD) + 4-EC2A (GY/RD)	(16)	5-EC2 (BU/RD) + 5-EC2A (BU/RD)

C38

10E925


F24012

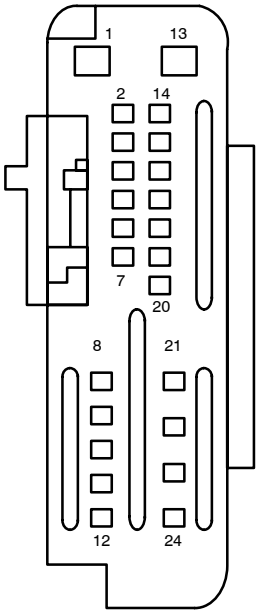

(1) 29-MD15 (OG/BK)
(2) 75-MD15 (YE/GN)
(3) 9-MD26 (BN/YE)
(4) 8-MD26 (WH/BK)
(5) 31S-GL15 (BK/OG)
(6) 5-EC2B (BU/RD)
5-EC2C (BU/RD)
(7) 4-EC2B (GY/RD)
4-EC2C (GY/RD)
(8) 8-MD18 (WH)
(9) 8-MD11 (WH/VT)
(10) 8-MD17 (WH/RD)
(11) 8-MD10 (WH/BK)
(12) 10-MD10 (GY/BK)
(13) 29-MD8 (OG)
29-MD16 (OG/GN)
(14) 64S-LK34 (BU/BK)
(15) 1-MD35 (WH/BU)
(16) 1-MD36 (WH/GN)
(17) 3-MD15 (BN/GN)
(18) 5-EC2 (BU/RD)
(19) 4-EC2 (GY/RD)
(20) 15S-GK9 (GN/WH)
(21) 10-MD18 (GY)
(22) 10-MD11 (GY/WH)
(23) 10-MD17 (GY/RD)
(24) 8-MD24 (WH/GN)

14K024

F24014

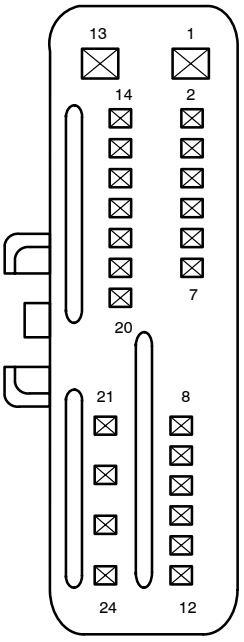


(1) 29-MD15 (OG/BK)
(2) 75-MD15 (YE/GN)
(3) 9-MD26 (BN/YE)
(4) 8-MD26 (WH/BK)
(5) 31S-GL15 (BK/OG)
(6) 5-EC10A (BU)
(7) 4-EC10A (GY)
(8) 8-MD18 (WH)
(9) 8-MD11 (WH/VT)
(10) 8-MD17 (WH/RD)
(11) 8-MD10 (WH/BK)
(12) 10-MD10 (GY/BK)
(13) 29-MD1 (OG/YE)
(14) 64S-LK34 (BU/BK)
(15) 1-MD35 (WH/BU)
(16) 1-MD36 (WH/GN)
(17) 3-MD15 (BN/GN)
(18) 5-EC10 (BU)
(19) 4-EC10 (GY)
(20) 15S-GK9 (GN/WH)
(21) 10-MD18 (GY)
(22) 10-MD11 (GY/WH)
(23) 10-MD17 (GY/RD)
(24) 8-MD24 (WH/GN)

C40

14K024


F04122

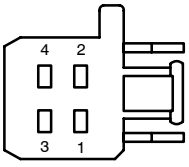

(1) 29-HA6 (OG/YE)
(2) 31-HA6 (BK)
(3) 64S-LK15 (BU/WH)
(4) 31S-GE44(BK/RD)

14K006

F04214

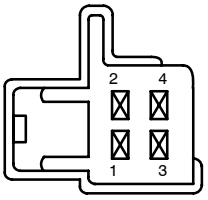


(1) 29-HA6 (OG/YE)
(2) 31-HA6 (BK)
31-HA6A (BK)
(3) 64S-LK15 (BU/WH)
64S-LK15 (BU/WH) +
64S-HC26 (BU/YE)
(4) 31S-GE44 (BK/RD)

C41


14K006

F02034

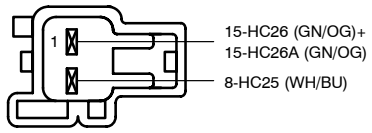

14K024


F02056



C50

14A005

LHD Driver side

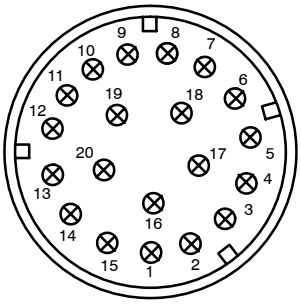


F20002

(1) 31S-AA61 (BK/BU)
(2) 31-DA6 (BK)
(3) 8-MD10 (WH/BK)
(4) 10-MD10 (GY/BK)
(5) 8-AJ42 (WH/GN)
(6) 31S-AA64 (BK/GN)
(7) 31S-AA63 (BK/OG)
(8) 33-AA59B (YE/BK)
(9) 29-AJ6 (OG/YE)
(10) 31S-AA62 (BK/WH)
(11) 31S-AJ55 (BK/RD)
(12) 15S-HB35 (GN/OG)
(13) 33-AD11 (YE/VT)
(14) 33-AD10 (YE/BK)
(15) 32-AD17 (WH/GN)
(16) 32-AA47 (WH/GN)
(17) 33-AA60B (YE)
(18) 31S-AJ54 (BK/GN)
(19) 29-AD12 (OG/YE)
(20) 15-AJ6 (GN/YE)

14A584

Driver side

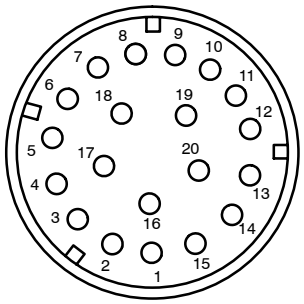


F20003

(1) 31S-AA61 (BK/BU)
(2) 31-DA1 (BK)
(3) 8-MD28 (WH)
(4) 10-MD28 (GY)
(5) 8-AJ42 (WH/GN)
(6) 31S-AA64 (BK/GN)
(7) 31S-AA63 (BK/OG)
(8) 33-AA59 (YE/BK)
(9) 29-AJ26 (OG/YE)
(10) 31S-AA62 (BK/WH)
(11) 31S-AJ55 (BK/RD)
(12) 15S-HB35 (GN/BK)
(13) 33-AD29 (YE/VT)
(14) 33-AD30 (YE/BK)
(15) 32-AD17 (WH/GN)
(16) 32-AA59 (WH/BK)
(17) 33-AA60 (YE)
(18) 31S-AJ54 (BK/GN)
(19) 29-AD12 (OG/YE)
(20) 15-AJ26 (GN/YE)

14A005

RHD Driver side

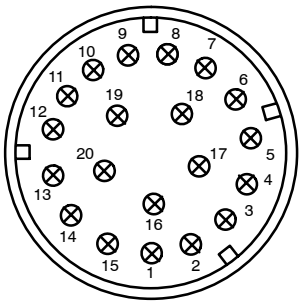


F20002

(1) 31S-AA61 (BK/BU)
(2) 31-DA8 (BK)
(3) 8-MD17 (WH/RD)
(4) 10-MD17 (GY/RD)
(5) 8-AJ42 (WH/GN)
(6) 31S-AA64 (BK/GN)
(7) 31S-AA63 (BK/OG)
(8) 33-AA59A (YE/BK)
(9) 29-AJ17 (OG/WH)
(10) 31S-AA62 (BK/WH)
(11) 31S-AJ55 (BK/RD)
(12) 15S-HB35 (GN/OG)
(13) 33-AD11 (YE/VT)
(14) 33-AD10 (YE/BK)
(15) 32-AD17 (WH/GN)
(16) 32-AA47 (WH/GN)
(17) 33-AA60A (YE)
(18) 31S-AJ54 (BK/GN)
(19) 29-AD12 (OG/YE)
(20) 15-AJ17 (GN/WH)

C51

14240

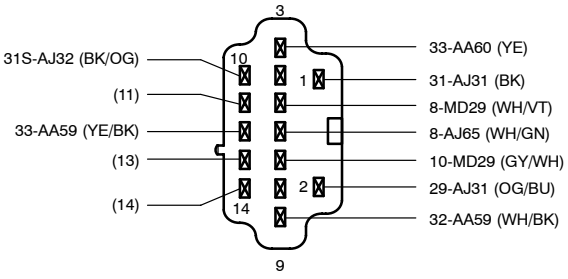


F14048

(11) 15-LH36 (GN/RD)
15-AJ31 (GN/BU) +
15-LH36 (GN/RD)

(13) 31S-AJ63 (BK/BU)
31S-AJ63A (BK/BU)

(14) 31S-AJ64 (BK/OG)
31S-AJ64A (BK/OG)

14A005

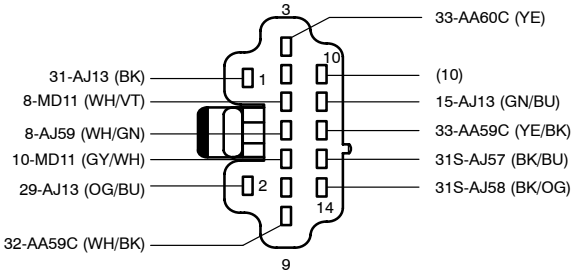


F14029

(10) 31S-AJ32 (BK/OG) +
31S-AJ33 (BK/OG)
31S-AJ32 (BK/OG)

C52

14A005

Passenger side

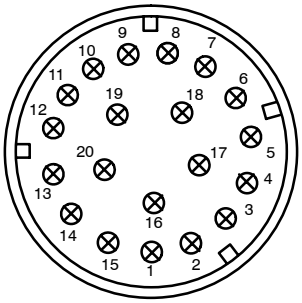

F20002

(1) 32-AD27 (WH/GN)
32-AD28 (WH/GN)

(2) 31-DA8 (BK)
31-DA6 (BK)

(3) 8-MD17 (WH/RD)
8-MD10 (WH/BK)

(4) 10-MD17 (GY/RD)
10-MD10 (GY/BK)

(5) 8-AJ56 (WH/GN)

(6) 31S-AA64B (BK/GN)
29-LB1B (OG/BU)

(7) 31S-AA63B (BK/OG)
31S-LC7C (BK/BU)

(8) 33-AA59A (YE/BK)
33-AA59B (YE/BK)

(9) 29-AJ17 (OG/WH)
29-AJ6 (OG/YE)

(10) 33-AD28 (YE/GN)
33-AD27 (YE/GN)

(11) 31S-AJ55 (BK/RD)

(12) 15S-HB35 (GN/BK)
15S-HB36 (GN/OG)

(13) 33-AD11 (YE/VT)

(14) 33-AD10 (YE/BK)

(15) 32-AD17 (WH/GN)

(16) 32-AA48 (WH/RD)

(17) 33-AA60A (YE)
33-AA60B (YE)


(18) 31S-AJ54 (BK/GN)

(19)

(20) 15-AJ6 (GN/YE)
15-AJ17 (GN/WH)

14K138

Passenger side

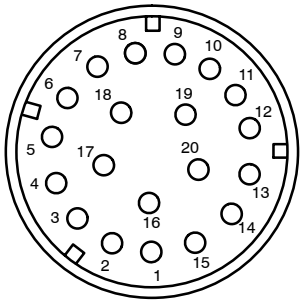

F20003

(1) 32-AD26 (WH/GN)

(2) 31-DA1 (BK)

(3) 8-MD28 (WH)

(4) 10-MD28 (GY)

(5) 8-AJ56 (WH/GN)

(6) 31S-AA64 (BK/GN)
29-LB1B (OG/BU)

(7) 31S-AA63 (BK/OG)
31S-LC7C (BK/BU)

(8) 33-AA59 (YE/BK)

(9) 29-AJ27 (OG/WH)

(10) 33-AD26 (YE/GN)

(11) 31S-AJ55 (BK/RD)

(12) 15S-HB36 (GN/OG)

(13) 33-AD11 (YE/VT)

(14) 33-AD10 (YE/BK)

(15) 32-AD17 (WH/GN)

(16) 32-AA59 (WH/BK)

(17) 33-AA60 (YE)

(18) 31S-AJ54 (BK/GN)


(19)

(20) 15-AJ27 (GN/WH)

C53


10E925

F03179

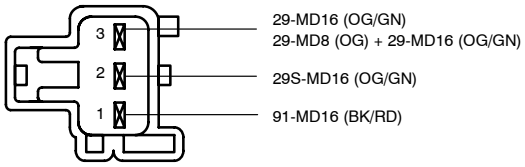

14B067


F03196

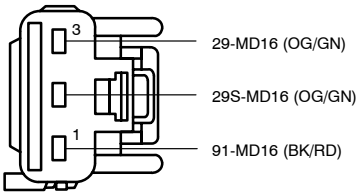

C54

14A005

Driver side

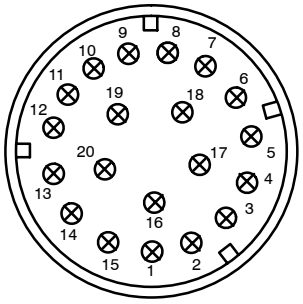


F20002

(1)
(2) 31S-AJ61 (BK/OG)
(3) 8-MD10 (WH/BK)
8-MD17 (WH/RD)
(4) 10-MD10 (GY/BK)
10-MD17 (GY/RD)
(5) 31S-AJ57 (BK/BU)
(6) 33-AD27 (YE/GN)
33-AD28 (YE/GN)
(7) 32-AD27 (YE/GN)
32-AD28 (WH/GN)
(8) 31S-AJ33 (BK/OG)
(9)
(10) 31S-AD24 (BK/RD)
(11) 31S-AJ58 (BK/OG)
(12) 31S-LC7D (BK/BU)
(13) 29-LB1C (OG/BU)
(14) 31S-AJ60 (BK/BU)
(15)
(16)
(17)
(18)
(19)
(20)

14A584

Driver side

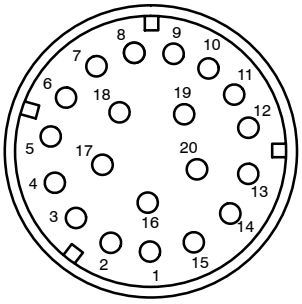


F20003

(1)
(2) 31S-AJ61 (BK/OG)
(3) 8-MD28 (WH)
(4) 10-MD28 (GY)
(5) 31S-AJ57 (BK/BU)
(6) 33-AD26 (YE/GN)
(7) 32-AD26 (WH/GN)
(8) 31S-AJ1 (BK/BU)
(9)
(10) 31S-AD24 (BK/RD)
(11) 31S-AJ58 (BK/OG)
(12) 31S-LC7D (BK/BU)
(13) 29-LB1C (OG/BU)
(14) 31S-AJ60 (BK/BU)
(15)
(16)
(17)
(18)
(19)
(20)

C56

14240

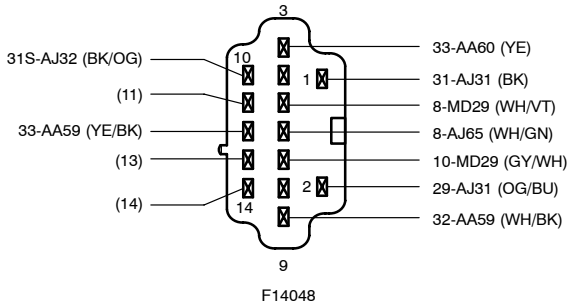


(11) 15-LH36 (GN/RD)
15-AJ31 (GN/BU) +
15-LH36 (GN/RD)

(13) 31S-AJ63 (BK/BU)
31S-AJ63A (BK/BU)

(14) 31S-AJ64 (BK/OG)
31S-AJ64A (BK/OG)


14A005

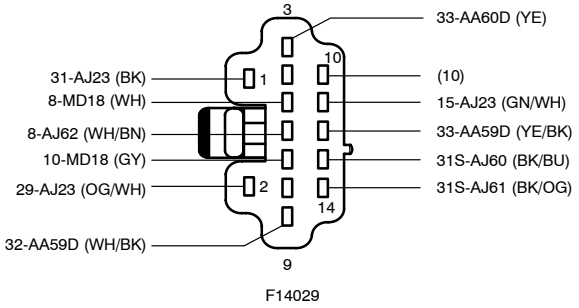


(10) 31S-AJ32 (BK/OG)
31S-AJ33 (BK/OG) +
31S-AJ32 (BK/OG)

C58


14A005

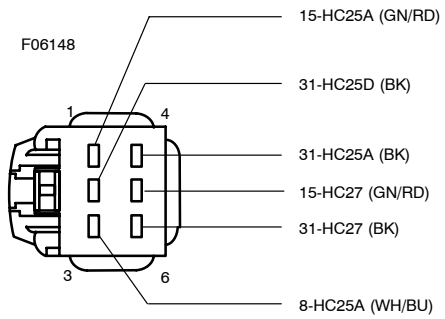


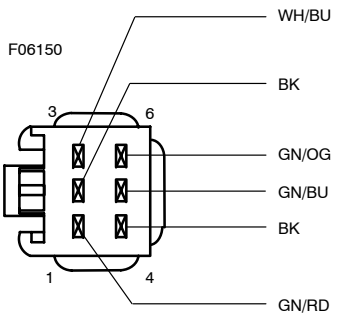

C59


14A005

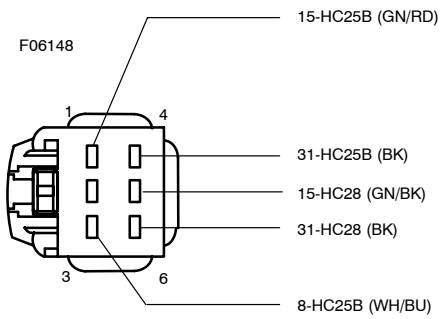

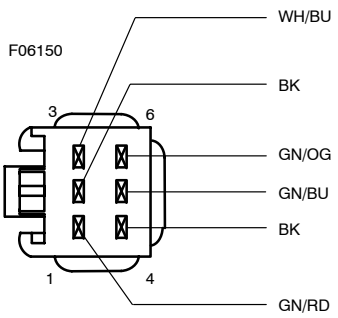

C60b

14K155

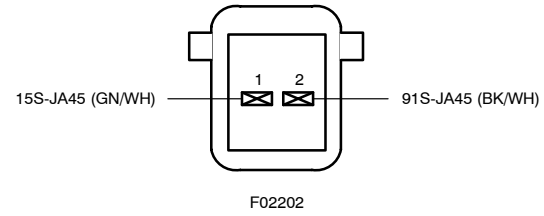


F02202

C60e

14K155


F02136

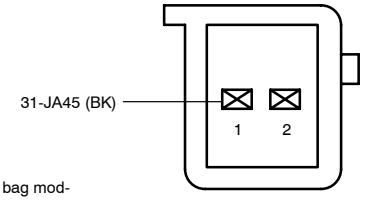

A242
Side air bag module, driver

C60c


F02138

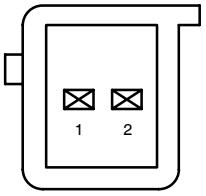

A225
Driver safety belt retractor pretensioner

C60f


F02142

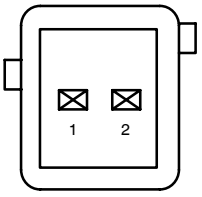

N466
Safety belt buckle switch, driver


C60d

F02134

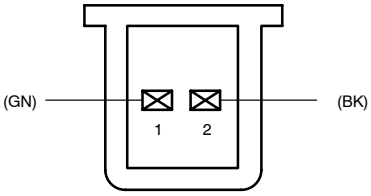

C60h


F02136

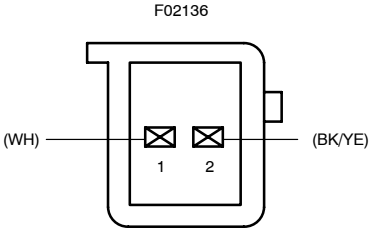

C60

14A005

F20025

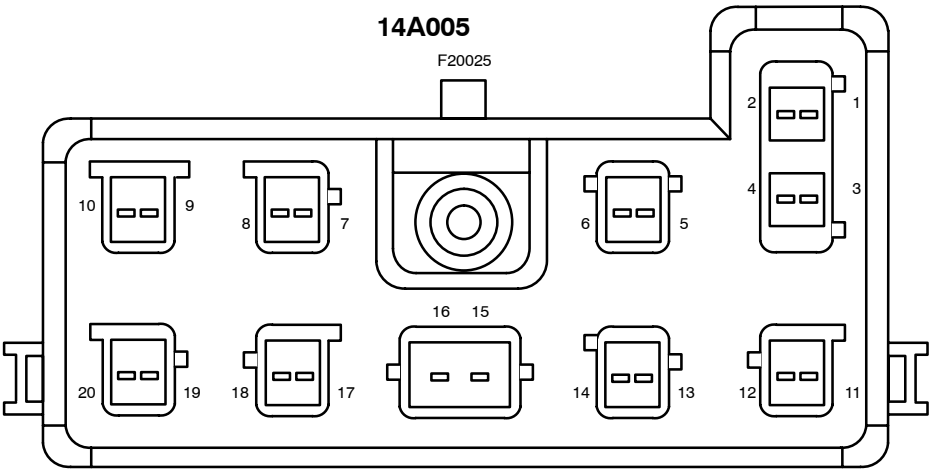

(1) 9-JA53 (BN/RD)

(2) 8-JA53 (WH/RD)

(3)

(4)

(5) 15S-JA37 (GN/BK)

(6) 91S-JA37 (BK/GN)

(7) 15S-JA33 (GN/BU)

(8) 91S-JA33 (BK/BU)

(9) 15S-HC9 (GN/BK)
15S-HC6 (GN/YE)
15-HC22 (GN/YE)
15-HC21A (GN/BK)

(10) 15S-HC10 (GN/OG)
15S-HC7 (GN/BU)
31-HC22 (BK)
31-HC21 (BK)

(11) 31-JA37 (BK)

(12)

(13) 91-GE52A (BK/RD)

(14) 91S-GE52A (BK/RD)
91S-GE49 (BK/BU)

(15) 29-AH35 (OG/YE)
29-AH35A (OG/YE)

(16) 31-AH35 (BK)

(17) 15S-HC10 (GN/OG)
15S-HC7 (GN/BU)
8-HC22 (WH)
8-HC21 (WH/GN)

(18) 31-HC10 (BK)
31-HC7 (BK)
31-HC21C (BK)


(19)

(20)

C61

14A005

F20025

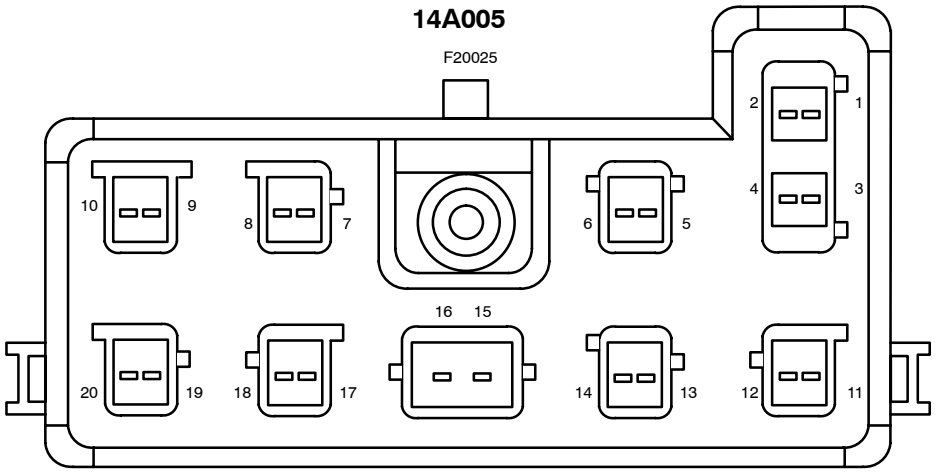

(1) 91-JA52 (BK/GN)

(2) 15-JA52 (GN/BK)

(3) 8-JA52 (WH/GN)
91S-GE52B (BK/RD)

(4) 9-JA52 (BN/GN)
8-GE52 (WH/BK)

(5) 15S-JA38 (GN/OG)

(6) 91S-JA38 (BK/RD)

(7) 15S-JA34 (GN/OG)

(8) 91S-JA34 (BK/RD)

(9) 15S-HC6 (GN/YE)
15S-HC9 (GN/BK)
15-HC22 (GN/YE)
15-HC21A (GN/BK)

(10) 15S-HC7 (GN/BU)
15S-HC10 (GN/OG)
31-HC22 (BK)
31-HC21 (BK)

(11) 31-JA38 (BK)

(12)

(13) 91-GE52B (BK/RD)

(14) 91S-GE52B (BK/RD)

(15) 29-AH42 (OG/YE)

(16) 31-AH42 (BK)

(17) 15S-HC7 (GN/BU)
15S-HC10 (GN/OG)
8-HC22 (WH)
8-HC21 (WH/GN)


(18) 31-HC7 (BK)
31-HC10 (BK)
31-HC21C (BK)

(19) 91S-GE49A (BK/BU)

(20) 91S-GE49 (BK/BU)

C61b

14K155

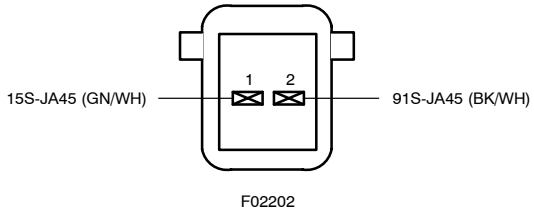


F02202

C61e

14K155


F02136

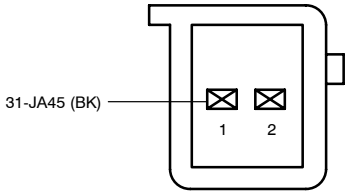

A245
Side air bag module, passenger

C61c


F02138

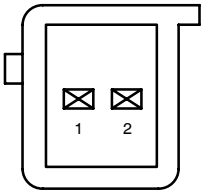

A226
Passenger safety belt retractor pretensioner


C61h

F02136

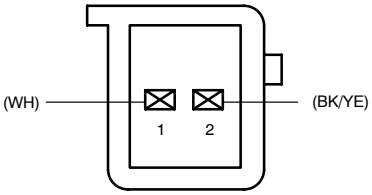

C61d


F02134

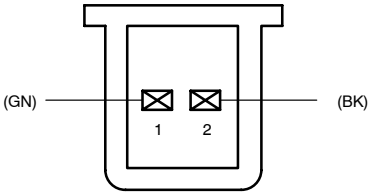

C64

14A005


F16044

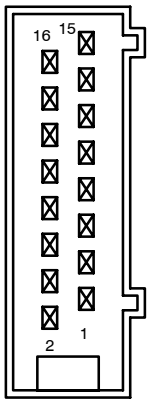

(1) 8-AG12 (WH/GN)
(2) 29-AG12 (OG/BK)
(3) 29-LB1 (OG/BU)
(4) 15-AG12 (GN/BK)
(5) 31-DA2 (BK)
(6) 31S-LC7 (BK/BU) + 31S-LC7B (BK/BU)
(7) 31S-LB26 (BK/OG)
(8) 8-GB8A (WH/BU)
(9) 15S-AD15 (GN/RD)
(10) 15S-LG6A (GN/YE)
(11) 9-GL10 (BN)
(12) 29S-GL10 (OG/YE)
(13)
(14)
(15) 91-KA41 (BK/GN)
(16) 8-KA41 (WH/GN)

14335

F16046

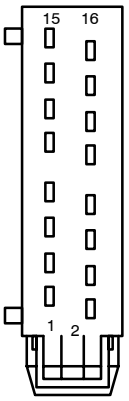


(1) 8-AG12 (WH/GN)
(2) 29-AG12 (OG/BK)
(3) 29-LB13 (OG/BU)
29-LB1 (OG/BU)
29-LB13 (OG/BU) + 29-LB26 (OG)
(4) 15-AD15 (GN/RD) + 15-KA41 (GN/BK)
15-AG12 (GN/BK)
(5) 31-DA2 (BK)
31-LB13 (BK)
31-LB13 (BK) + 31-LG6 (BK)
31-AD15 (BK) + 31-LB13 (BK)
31-LB13 (BK) + 31-LB26 (BK)
(6) 31S-LC7 (BK/BU)
31S-LC7 (BK/BU) + 31S-LC17 (BK/YE)
(7) 31S-LB26 (BK/OG)
(8) 8-GB8 (WH/BU)
(9) 15S-AD15 (GN/RD)
(10) 15S-LG6 (GN/YE)
(11) 9-GL10 (BN)
(12) 29S-GL10 (OG/YE)
(13)
(14)
(15) 91-KA41 (BK/GN)
(16) 8-KA41 (WH/GN)


C65

14A005

F02047

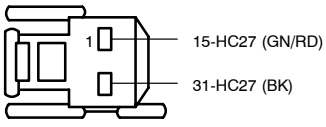


F02034

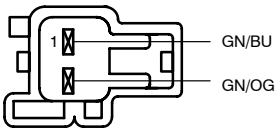


C66

14A005

F02047

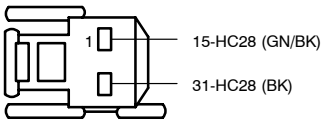


F02034

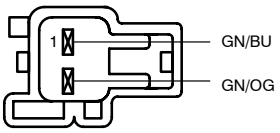

C67

14B079


F12050

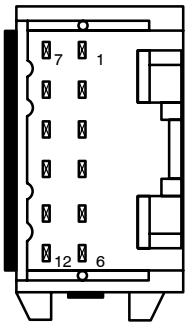

(1)	2-MD11 (GY/WH)	(7)	8-XL8 (WH/BK)
(2)	1-MD11 (WH/VT)	(8)	9-XL8 (BN/YE)
(3)	48-MD16 (Shield)	(9)	2-MD16 (GY/BK)
(4)	2-MD18 (GY)	(10)	1-MD16 (WH/BK)
(5)	1-MD18 (WH)	(11)	3-MD16 (BN/YE)
(6)	48-MD16 (Shield)	(12)	91-MD16 (BK/RD)

14A227

F12058

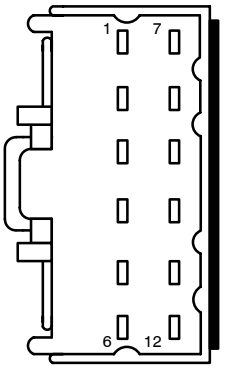


(1)	2-MD11 (GY/WH)	(7)	8-XL8 (WH/BK)
(2)	1-MD11 (WH/VT)	(8)	9-XL8 (BN/YE)
(3)		(9)	2-MD16 (GY/BK)
(4)	2-MD18 (GY)	(10)	1-MD16 (WH/BK)
(5)	1-MD18 (WH)	(11)	3-MD16 (BN/YE)
(6)	48-MD16B (Shield) 48-MD16A (Shield)	(12)	91-MD16B (BK/RD) 91-MD16A (BK/RD)

C68 (GY)


14A005

F10041

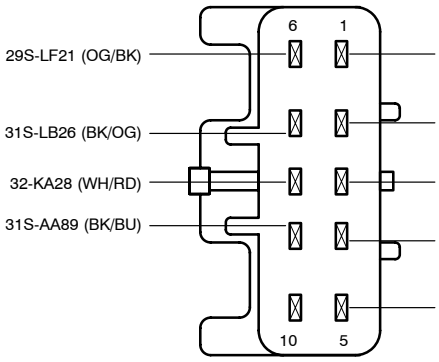


18C619

F10042

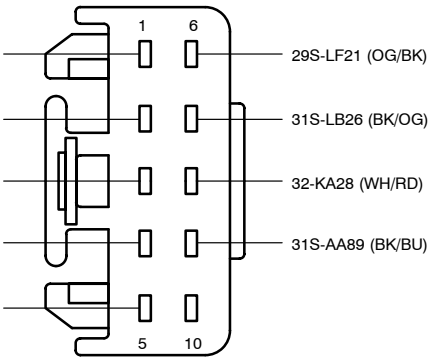


C69 (GY)

14A005

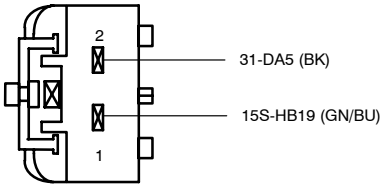

F02204

18C619

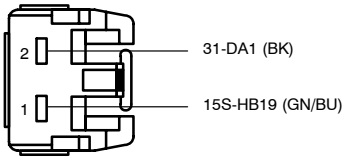


F02032

C70 (GN)

14K024

F16029

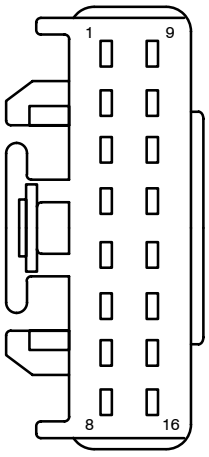

(1) 8-GB8 (WH/BU)
8-GB8 (WH/BU) +
8-MD24 (WH/GN)

(2) 31S-LC11 (BK/WH) +
31S-LC23 (BK/WH)

(3) 8-KA41 (WH/GN)

(4) 29S-GM12 (OG/BK)

(5) 31S-LC29 (BK/RD)
31S-LC30 (BK/GN)

(6) 29-MD1 (OG/YE)

(7) 64S-LK21 (BU/BK)

(8) 31S-AA89 (BK/BU) +
31S-AA30 (BK/YE)

(9) 8-MD10 (WH/BK)

(10) 10-MD10 (GY/BK)

(11) 8-MD11 (WH/VT)

(12) 10-MD11 (GY/WH)

(13) 32-AA47 (WH/GN)
32-AA48 (WH/RD)


(14) 91-GA7 (BK/BU)

(15) 8-GA7 (WH/RD)

(16) 15S-LD16 (GN/YE)

14A005

F16030

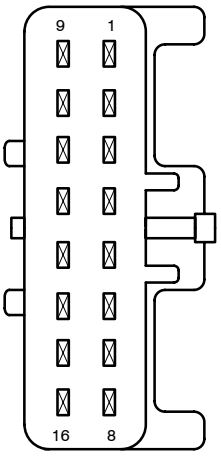

(1) 8-GB8A (WH/BU)

(2) 31S-LC7 (BK/BU) +
31S-LC7A (BK/BU)

(3) 8-KA41 (WH/GN)

(4) 29S-GM12 (OG/BK)

(5) 31S-LC9 (BK/RD)

(6) 29-MD1 (OG/YE)

(7) 64S-LK21 (BU/BK)

(8) 31S-AA89 (BK/BU)

(9) 8-MD10 (WH/BU)

(10) 10-MD10 (GY/BK)

(11) 8-MD11 (WH/VT)

(12) 10-MD11 (GY/WH)

(13) 32-AA47 (WH/GN)
32-AA48 (WH/RD)

(14) 91-GA7 (BK/BU)


(15) 8-GA7 (WH/RD)

(16) 15S-LD6 (GN/YE)

C71 (BU)

14K024


F16030

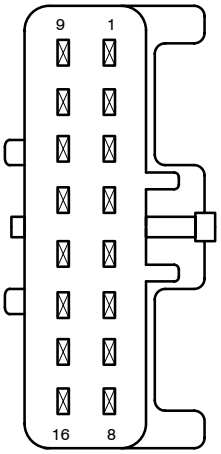

(1)	15S-GK9 (GN/WH)
(2)	31S-TA32 (BK/WH) + 31S-TA34 (BK/YE) 91S-TA32 (BK/WH) + 91S-TA34 (BK/YE)
(3)	8-HC21A (WH/GN)
(4)	31S-LC29 (BK/RD) 31S-LC30 (BK/GN)
(5)	8-MD18 (WH)
(6)	10-MD18 (GY)
(7)	15S-HC9 (GN/BK)
(8)	32-AA47 (WH/GN) 32-AA48 (WH/RD)
(9)	91-TA35 (BK/GN)
(10)	91S-GE49 (BK/BU)
(11)	91-JA10 (BK/RD)
(12)	8-MD17 (WH/RD)
(13)	10-MD17 (GY/RD)
(14)	15S-HC6 (GN/YE) 15-HC25 (GN/RD)
(15)	91S-TA67 (BK/WH)
(16)	91S-TA68 (BK/RD)

14A005

F16029

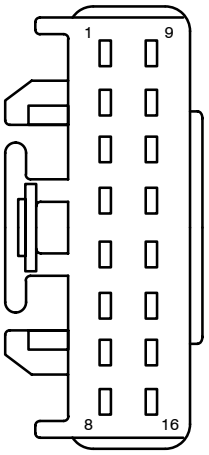

(1)	15S-GK9 (GN/WH)
(2)	31S-TA32 (BK/WH) 91S-TA32 (BK/WH)
(3)	8-HC21A (WH/GN)
(4)	31S-LC21 (BK/GN)
(5)	8-MD18 (WH)
(6)	10-MD18 (GY)
(7)	15S-HC9 (GN/BK)
(8)	32-AA47 (WH/GN) 32-AA48 (WH/RD)
(9)	91-TA35 (BK/GN)
(10)	91S-GE49 (BK/BU)
(11)	91-JA10 (BK/RD)
(12)	8-MD17 (WH/RD)
(13)	10-MD17 (GY/RD)
(14)	15S-HC6 (GN/YE) 15-HC25 (GN/RD)
(15)	91S-TA67A (BK/WH)
(16)	91S-TA68A (BK/RD)

C72


(1)	4-EC36 (RD)
(2)	
(3)	91-MD8 (BK/OG)
(4)	
(5)	1-MD49 (WH/GN)
(6)	1-MD50 (WH/BK)
(7)	E-C3C (BU/RD)
(8)	
(9)	29-MD8 (OG)
(10)	
(11)	2-MD49 (GY/OG)
(12)	2-MD50 (GY/BK)

A144
CD changer

C76 (YE)


14N000

F03062

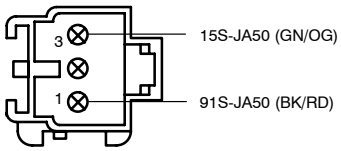

14A005


F03035

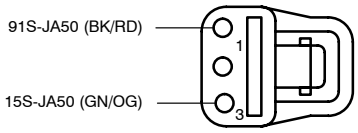

C77 (YE)


14N000

F03062

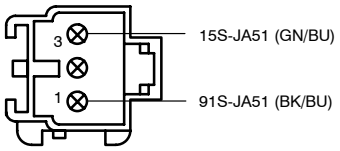

14A005


F03035

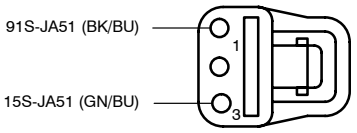


C78

14A005

F02034

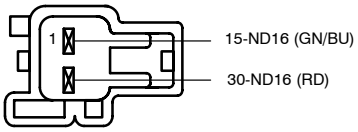


F02047

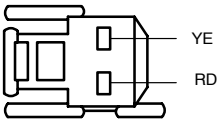

C79

10E925

F12094

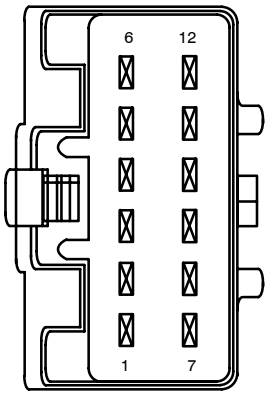

(1) 29-MD16 (OG/GN)
29-MD8 (OG) +
29-MD16 (OG/GN)

(2) 1-MD18 (WH)

(3) 2-MD18 (GY)

(4) 64S-LK34 (BU/BK) +
64S-LK34A (BU/BK)
64S-LK34B (BU/BK)

(5) 4-EC2B (GY/RD)

(6) 4-EC2 (GY/RD) +
4-EC2A (GY/RD)

(7) 91-MD16 (BK/RD)

(8) 1-MD11 (WH/VT)

(9) 2-MD11 (GY/WH)


(10) 31-MD16A (BK)

(11) 5-EC2B (BU/RD)

(12) 5-EC2 (BU/RD) +
5-EC2A (BU/RD)

14B079

F12084

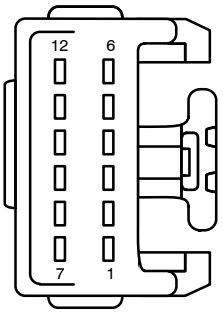

(1) 29-MD16 (OG/GN)

(2) 1-MD18 (WH)

(3) 2-MD18 (GY)

(4) 64S-LK34 (BU/BK)

(5) 4-EC3B (GY/RD)

(6) 4-EC3 (GY/RD)

(7) 91-MD16 (BK/RD)

(8) 1-MD11 (WH/VT)

(9) 2-MD11 (GY/WH)


(10) 31-MD16 (BK)

(11) 5-EC3B (BU/RD)

(12) 5-EC3 (BU/RD)


C80

14406

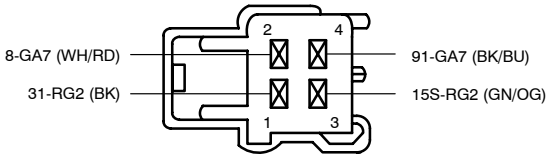

F04105


14A005

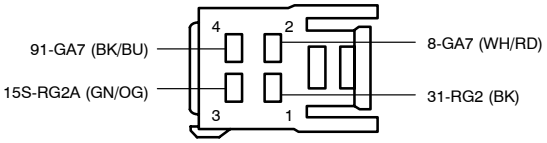

F04106


C81

12A522

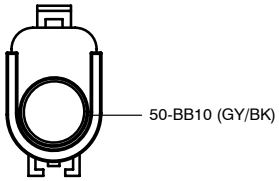

F01009

14300

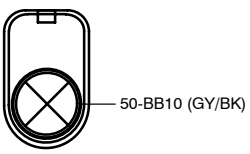


F01010

C82

14300


F08112

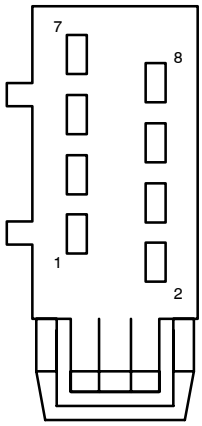

(1) 15-RJ25 (GN/RD)
(2) 8-RJ25 (WH/BU)
(3) 29-BA6 (OG/YE)
(4) 8-EB6 (WH)
(5) 91S-RJ25 (BK/OG)
(6) 9-RJ25 (BN/BU)
(7)
(8) 9-EB6 (BN)

12A522


F08114

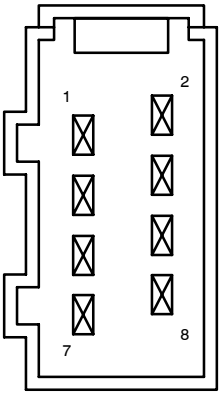

(1) 15-RJ25 (GN/RD)
(2) 8-RJ25 (WH/BU)
(3) 29-BA6 (OG/YE)
(4) 8-EB6 (WH)
(5) 91S-RJ25 (BK/OG)
(6) 9-RJ25 (BN/BU)
(7)
(8) 9-EB6 (BN)


C90

2B325

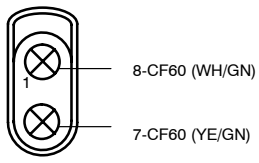

F02007


14K733

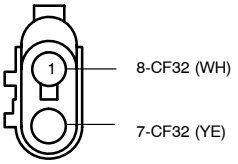

F02005


C91

2B325

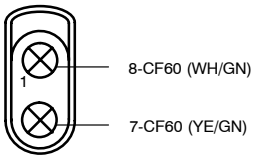

F02007


14K733

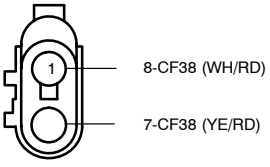

F02005


C92

14A005

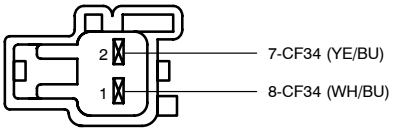

F02034


2B325

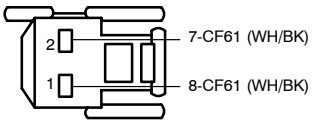

F02047


C93 (GY)

14A005

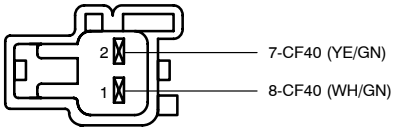

F02034


2B325

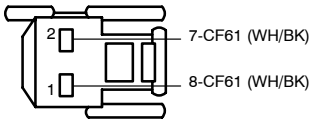

F02047

C94 (GY)

14A005

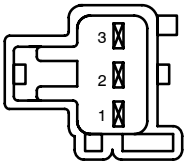


F03179

(1) 9-LE54 (BN/YE)
(2) 8-LE54 (WH/BK)
(3) 7-LE54 (YE/BK)

B244
Headlamp levelling sensor, rear

C95

F16082

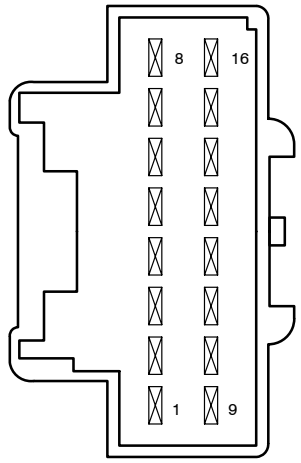

A178
Phone hand unit

(1) 4-MC16 (GY)
(2) 4-MC15 (GY/OG)
(3) 10-MC19 (GY/OG)
(4) 8-MC11 (WH/VT)
(5) 1-MC13 (WH/RD)
(6) 1-MC14 (WH/BU)
(7) 29-MC11 (OG/WH)
(8) 31-MC11 (BK)
(9) 5-MC16 (BU)
(10) 5-MC15 (BU/BK)
(11) 8-MC19 (WH/GN)
(12) 9-MC19 (BN/GN)
(13) 2-MC13 (GY/RD)
(14) 2-MC14 (GY/VT)
(15) 29-MC17 (OG/BU)
(16)


C96

(1) 9-MC8 (BN/RD)
(2) 8-MC8 (WH/RD)

A164
Microphone

Petrol engines

12A522

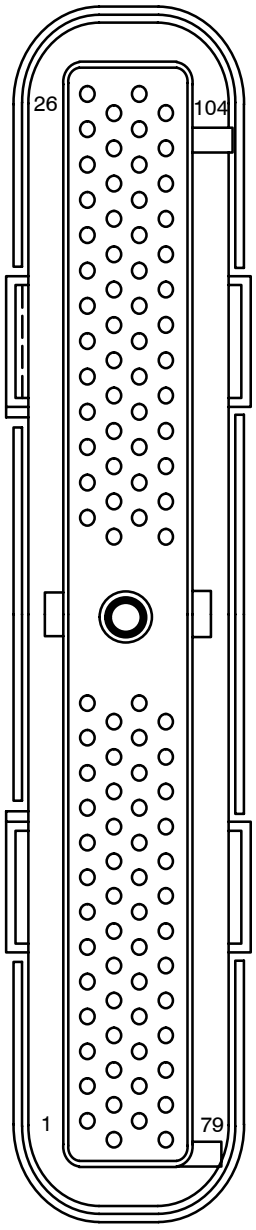

F104001

C100

Diesel engines

14K733

(1) 91S-TA24 (BK/BU)
91S-RH15 (BK/YE)

(2)

(3) 91S-RJ16 (BK/BU)
8-RJ40 (WH/GN)

(4) 8-RJ30 (WH)
8-EB6 (WH)

(5) 8-RJ35 (WH/RD)

(6) 91S-TA23 (BK/YE)

(7) 8-RJ36 (WH/BU)

(8) 8-FA49 (WH/VT)
15-BB7 (GN/BU)
91S-RJ16 (BK/BU)

(9) 8-RJ22 (WH/BU)

(10) 8-RJ6 (WH/GN)
49-PA6 (BU)

(11) 91S-TA24 (BK/BU)

(12) 8-RL43 (WH/BK)
8-RS17 (WH)
91S-RL20 (BK/RD)

(13) 8-EG9 (WH/GN)

(14) 8-RJ33 (WH/VT)

(15) 5-EG9 (BU/BK)

(16) 4-EG9 (GY/OG)

(17) 91S-PA17 (BK/WH)

(18)

(19) 10-GL37 (GY/OG)

(20) 91S-RL12 (BK/BU)

(21) 8-RJ4 (WH/RD)
8-GB7 (WH/VT)

(22) 9-RJ4 (BN/RD)
9-GB7 (BN/WH)

(23)

(24) 91-RE8A (BK/YE)

(25) 91-RE8 (BK/YE)

(26) 9-RR1 (BN/BU)
9-PG13 (BN)

(27) 31S-BB12 (BK/YE)
31S-BB12A (BK/YE)

(28) 8-GB8 (WH/BU)

(29) 15S-TA21 (GN/BK)

(30) 8-PG13 (WH)

(31) 8-CE6 (WH)

(32) 8-EB6 (WH)
9-RJ18 (BN/YE)

(33)

(34) 8-RJ20 (WH/GN)
8-TA27 (WH/VT)

(35) 8-RJ25 (WH/BU)
8-PA37 (WH/BU)

(36) 9-RJ22 (BN/BU)

(37) 8-TA26 (WH/RD)

(38) 8-RJ5 (WH)
8-FA49 (WH/VT)
8-RJ6 (WH/GN)

(39) 8-RJ17 (WH/VT)
7-RJ36 (YE/BU)

(40) 15S-RE16 (GN/BK)
91S-RL25 (BK/BU)

(41) 15S-FA12 (GN/BU)

(42) 31S-GL6 (BK/OG)
91S-RL20 (BK/RD)

(43) 8-PA51 (WH/BU)

(44) 91S-RH5 (BK/BU)
31S-GL6 (BK/OG)

(45)

(46)

(47) 91S-RL7 (BK/GN)
91S-PA49 (BK/YE)

(48)

(49) 5-EC7 (BU/RD)

(50) 4-EC7 (GY/RD)

(51) 91-RE8B (BK/YE)
9-RJ36 (BN/BU)

(52) 9-RR2 (BN/GN)
91S-RL22 (BK/RD)

(53) 8-GL37 (WH/GN)

(54) 91S-RH5 (BK/BU)

(55) 29-RE8 (OG/YE)

(56)

(57) 8-RJ18 (WH/BK)
8-RS16 (WH/VT)
8-RE41 (WH)

(58) 8-RJ29 (WH/BU)
8-RE22 (WH/VT)

(59) 15S-PG16 (GN/YE)
8-EB6 (WH)
9-EB6 (BN)

(60) 8-RJ14 (WH)
8-RJ1 (WH/BK)

(61)

(62)

(63) 8-BB6 (WH)
91S-BB6 (BK/YE)

(64) 8-BB6 (WH)
8-TA9 (WH/GN)

(65) 8-RJ7 (WH/BU)
33-XL65 (YE/VT)

(66) 15S-RE16 (GN/BK)
15S-LG16 (GN/OG)

(67) 91S-RL25 (BK/BU)
15S-RE16 (GN/BK)

(68) 91S-PA7 (BK/BU)

(69) 91S-FA11 (BK/YE)

(70) 91S-RL10 (BK/WH)
91S-RH3 (BK/WH)

(71) 15-RE8A (GN/YE)
15-RE8 (GN/YE)

(72) 9-EB6 (BN)

(73) 91S-TA23 (BK/YE)
91S-RL45 (BK/BU)

(74)

(75) 91S-RH25 (BK/GN)

(76) 9-RJ3 (BN/WH)
9-RN3 (BN/RD)
91-RE8C (BK/YE)

(77) 91-RE8C (BK/YE)
91-RE8A (BK/YE)

(78) 15S-PG17 (GN/BU)
9-RR3 (BN/YE)

(79) 8-PA52 (WH/GN)
8-PG11 (WH/BK)

(80) 8-PA53 (WH/BK)
91S-TA20 (BK/WH)

(81) 91S-TA17 (BK/RD)

(82) 8-PA54 (WH/VT)
31S-BB12A (BK/YE)

(83) 91S-RL9 (BK/YE)
91S-RL29 (BK/BU)

(84) 8-TA27 (WH/VT)

(85) 8-RJ3 (WH/VT)

(86) 91S-PA13 (BK/BU)

(87) 8-RJ15 (WH/RD)

(88) 8-RJ22 (WH/BU)

(89) 8-RJ28 (WH)

(90) 7-RE8 (YE)
7-RN1 (YE/RD)

(91) 9-RE8 (BN)
9-RN1 (BN/RD)

(92) 15S-RE13 (GN/RD)

(93) 91S-RJ14 (BK/YE)
91S-RL14 (BK/GN)

(94) 8-G88 (WH/BU)
91S-RL14 (BK/GN)
91S-RL15 (BK/RD)

(95) 91S-RL13 (BK/OG)
49-PA6 (BU)

(96) 91S-RL11 (BK/YE)
91S-RH9 (BK/BU)

(97) 15-RE8 (GN/YE)
15-RE8A (GN/YE)

(98) 91S-RH23 (BK/OG)
91S-RL15 (BK/RD)

(99) 91S-TA20 (BK/WH)
91S-RJ15 (BK/BU)

(100) 91S-RJ25 (BK/OG)
91S-PA13 (BK/BU)

(101)

(102) 91S-TA25 (BK/OG)

(103) 91-RE8D (BK/YE)
91-RE8B (BK/YE)


(104) 8-GL37 (WH/GN)

A147
Powertrain control module (PCM)

C101

12A522


Petrol engines

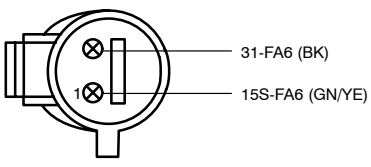

F02206

Y31
A/C compressor clutch solenoid

F42013

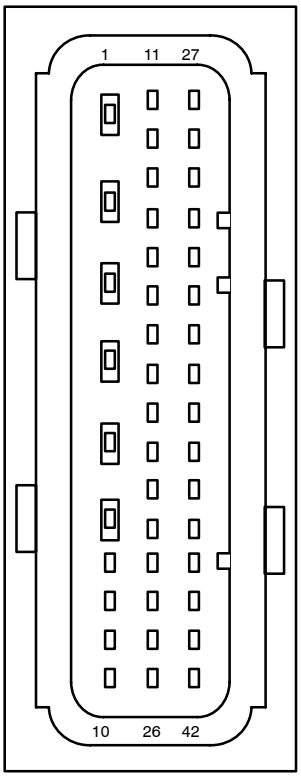

C103

14K733


(1) 31-CF6 (BK)
(2) 30-CF6 (RD)
(3)
(4)
(5) 91-CF10 (BK/RD)
(6) 30-CF6A (RD)
(7)
(8) 8-XL6 (WH/BU)
(9) 8-XL7 (WH/GN)
(10) 9-CF67 (BN/RD)
(11) 8-EE6 (WH)
(12) 8-CF32 (WH)
(13) 7-CF34 (YE/BU)
(14) 8-CF34 (WH/BU)
(15) 7-CF38 (YE/RD)
(16) 8-CF38 (WH/RD)
7-CF32 (YE)
(17) 31S-CF70 (BK/GN)
(18) 31S-CF45 (BK/GN)
(19)
(20)
(21) 31-CF67 (BK)
(22)
(23) 15-CF6 (GN/YE)
(24) 4-EC9 (GY)
4-CF71 (GY/RD)
(25) 31-CF65 (BK)
(26) 8-CF65 (WH/VT)
(27) 31S-CF54 (BK/WH)
(28) 7-CF32 (YE)
(29)
(30) 7-CF40 (YE/GN)
(31) 8-CF40 (WH/GN)
(32) 15S-CF58 (GN/OG)
15S-CF58 (GN/BU)
(33) 31S-CF28 (BK/RD)
(34)
(35) 31S-CF28 (BK/RD)
(36)
(37)
(38)
(39) 15-CF67 (GN/BU)
(40) 5-CF71 (BU/RD)
5-EC9 (BU)
(41) 8-CF67 (WH/RD)
(42) 15-CF65 (GN/WH)
8-CF65 (WH/VT)

A7
ABS module

A176
Electronic Stability Program (ESP) module

C102

12A522

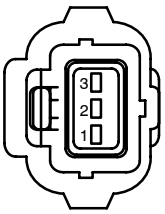


F03093

(1) 8-EB6 (WH)
8-BA6 (WH)
15S-BA9 (GN/BK)
(2) 9-EB6 (BN)
9-BA6 (BN)
(3) 29-BA6 (OG/YE)

O5
Generator

C105

14K733

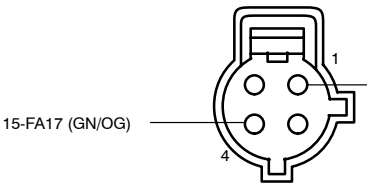


F04195

N246
A/C low–pressure switch

C104

12A522

Diesel engines

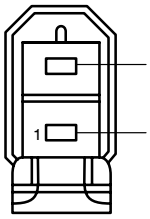


F02271

Y31
A/C compressor clutch solenoid

C106

12A522

F121002

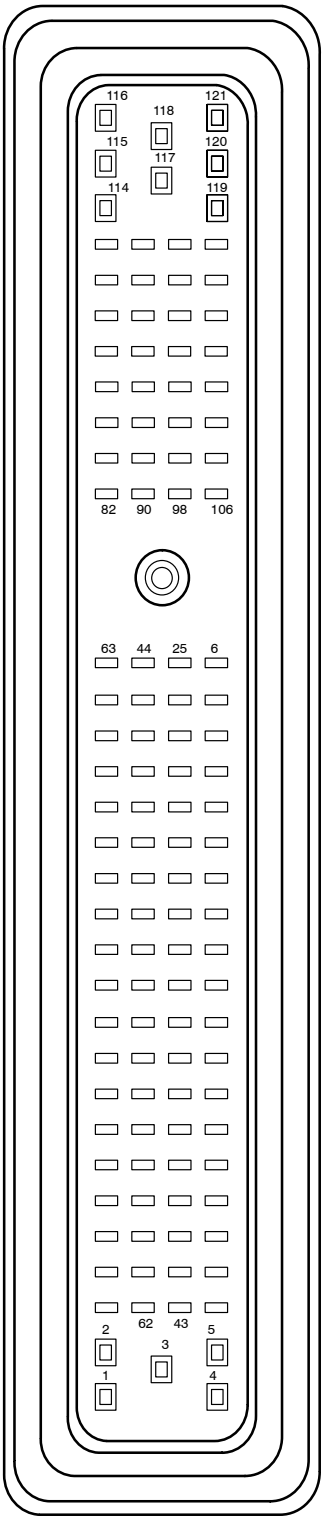


(1)	91-RE37A (BK/WH)	(42)		(82)	
(2)	91-RE37B (BK/WH)	(43)		(83)	
(3)		(44)	8-RE37 (WH/VT)	(84)	
(4)	15-RE37A (GN/WH)	(45)	8-RE38 (WH)	(85)	
(5)	15-RE37B (GN/WH)	(46)		(86)	
(6)		(47)	8-RE39 (WH/RD)	(87)	
(7)		(48)	8-RE42 (WH/BK)	(88)	
(8)		(49)		(89)	
(9)		(50)	8-RE3 (WH/GN)	(90)	
(10)		(51)		(91)	
(11)		(52)	4-EC7A (GY/RD)	(92)	
(12)		(53)	5-EC7A (BU/RD)	(93)	
(13)		(54)		(94)	
(14)		(55)		(95)	
(15)		(56)		(96)	
(16)		(57)		(97)	
(17)		(58)		(98)	
(18)		(59)		(99)	
(19)		(60)		(100)	
(20)		(61)		(101)	
(21)		(62)		(102)	
(22)		(63)		(103)	
(23)		(64)		(104)	
(24)		(65)		(105)	
(25)		(66)		(106)	
(26)		(67)		(107)	
(27)		(68)		(108)	
(28)		(69)		(109)	
(29)		(70)		(110)	
(30)		(71)		(111)	
(31)		(72)		(112)	
(32)		(73)		(113)	
(33)		(74)		(114)	91S-RL10 (BK/WH)
(34)		(75)		(115)	91S-RL13 (BK/OG)
(35)		(76)		(116)	15S-RL12 (GN/BU)
(36)		(77)		(117)	91S-RL12 (BK/BU)
(37)		(78)		(118)	15S-RL10 (GN/WH)
(38)		(79)		(119)	91S-RL11 (BK/YE)
(39)		(80)		(120)	15S-RL13 (GN/RD)
(40)		(81)		(121)	15S-RL11 (GN/YE)
(41)					

A313
Injector Driver Module
(IDM)

C107

14K733

F02152

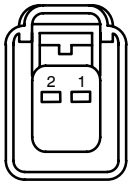


N249
Brake pressure switch

(1) 31-CF64 (BK)
(2) 31S-CF64 (BK/RD)

C108

14K733

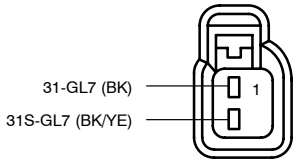


F02058

N21
Engine compartment switch

C109

14K733

F03124

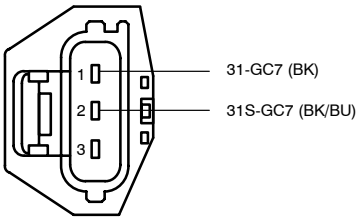


N1
Brake fluid level switch

C110

12A522

F03306

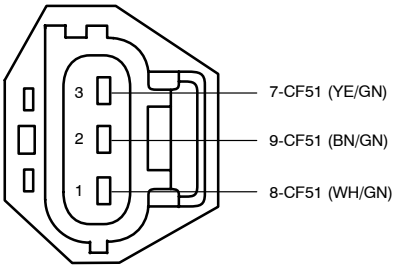


B220
Brake booster sensor

C111

12A522

F02562

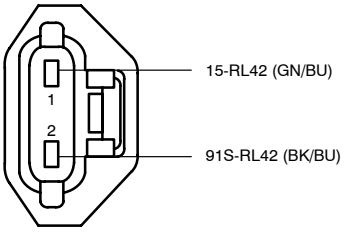


Y190
Fuel control valve

C121

14K733

F02012

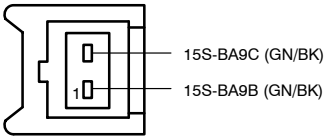


N289
Thermo switch, outside air temperature

C122a

6B018

F01014




R80
Coolant supplement 2 heater

C122b

6B018

F01014




R80
Coolant supplement 2 heater

C123

6B018


F01014



R79
Coolant supplement 1 heater


C124

6B018

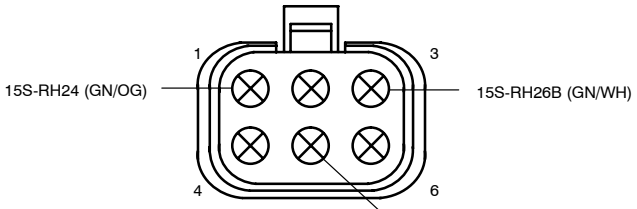

F06029


14K733

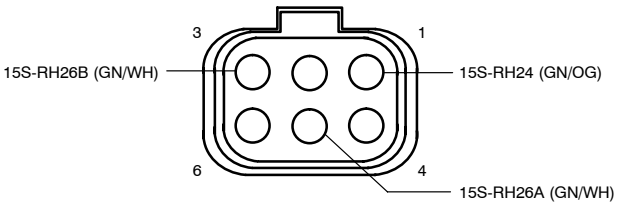

F06028

C125

14K733

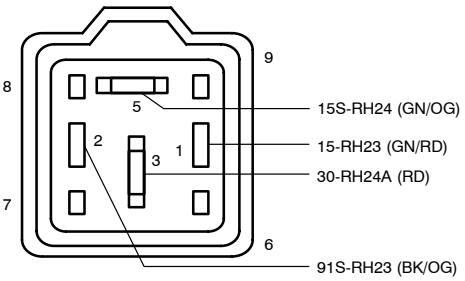


K168
Auxiliary electric coolant heater relay 1

F08036

C127

9H589

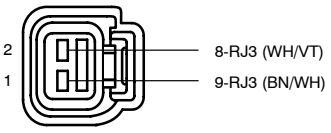


F02109

B41
Camshaft position sensor

C126

14K733

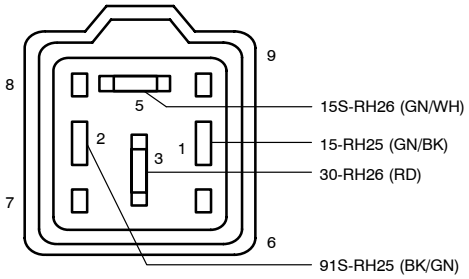


K169
Auxiliary electric coolant heater relay 2

F08036

C130

12A522

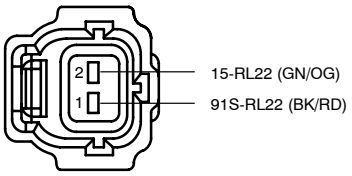


M253
Variable geometry turbo actuator

F02091

C131 (GY)

9H589

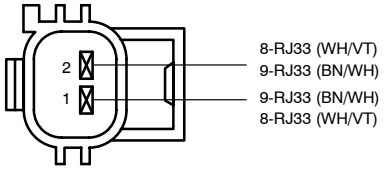


F02066

B135
Cylinder head temperature sensor

C132

12A522

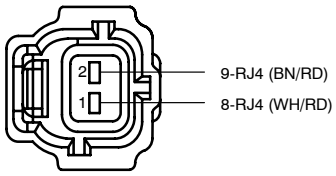


F02103

B43
Crankshaft position sensor

C133 (GY)

12A522 2.5L **9H589**

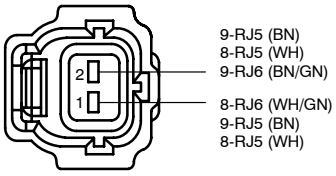


F02091

B10
Engine Coolant Temperature (ECT) sensor

C134

14K733

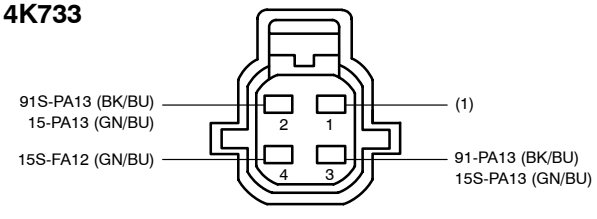


F04170

N126
A/C high--pressure switch

(1) 15S-FA17 (GN/OG)
15S-FA17A (GN/OG)

C135

12A522

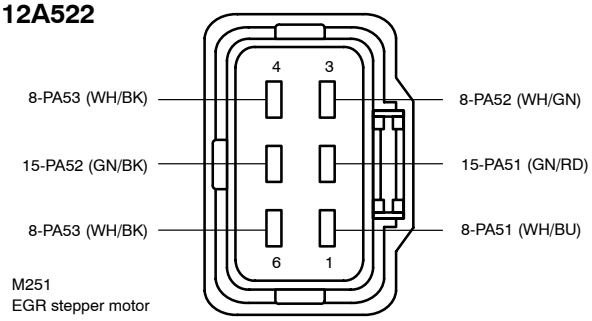


M251
EGR stepper motor

F06110

C136

9H589

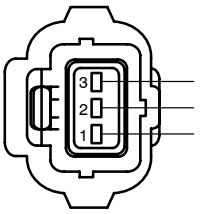

F03093

(1) 9-PA49 (BN)
9-RJ28 (BN)


(2) 8-PA49 (WH)
8-RJ28 (WH)

(3) 7-PA49 (YE)
7-RJ28 (YE)

B8
Throttle Position Sensor (TPS)

C137 (GY)

9H589

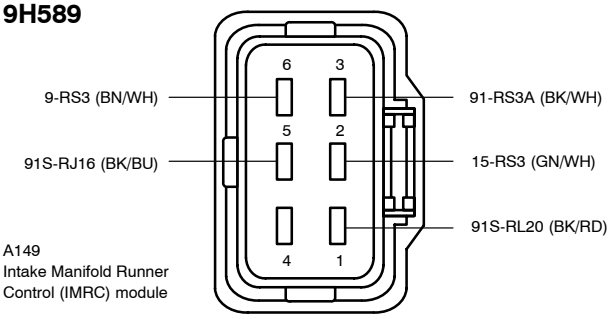


A149
Intake Manifold Runner Control (IMRC) module

F06110

C138

9H589

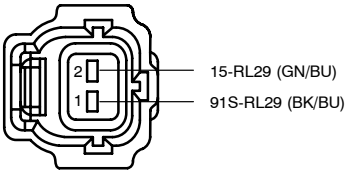


M254
EGR valve actuator

F02091

C139

9H589


F03093

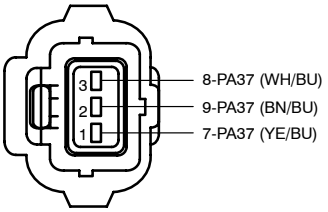

B136
Exhaust gas recirculation (EGR) valve position sensor

C144

14K733

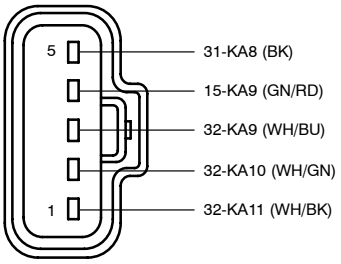


F05091

M111
Windshield wiper motor

C141

12A522

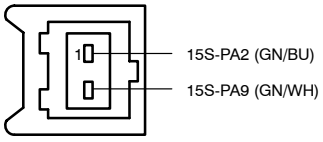


F02249

R27
Cooling fan resistor

C145

14K733

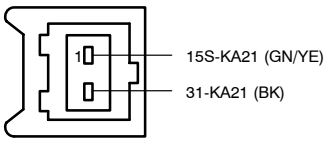


F02249

M246
Headlamp washer pump motor

C142

12A522

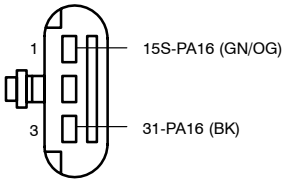


F03057

M38
Second cooling fan motor

C146

14K733

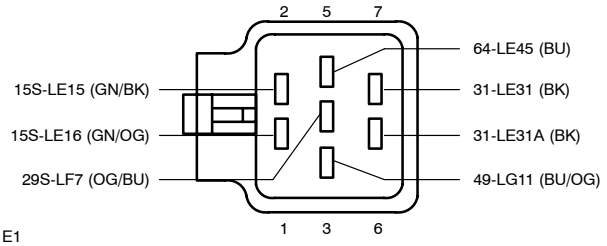


E1
Headlamp, LH side

F07057

C143

12A522


F06260

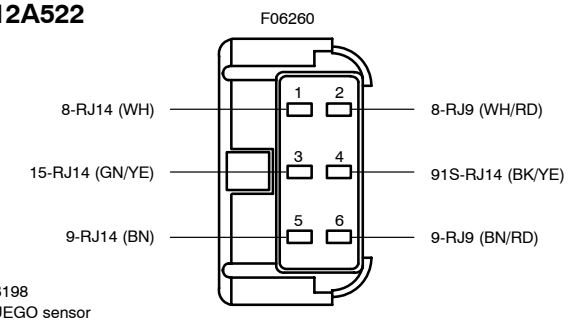

B198
UEGO sensor

C147

14K733

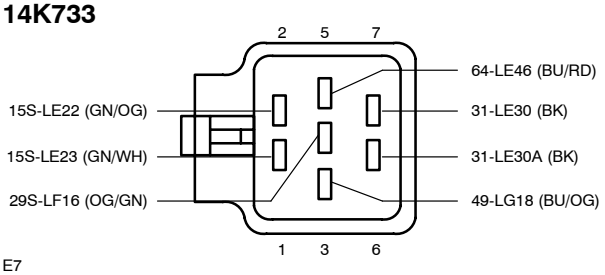

E7
Headlamp, RH side

F07057


C148 (GN)

12A522

B192
Catalyst monitor sensor


B48
Pre–catalyst heated oxygen sensor (HO2S), RH

B90
Post–catalyst heated oxygen sensor (HO2S)

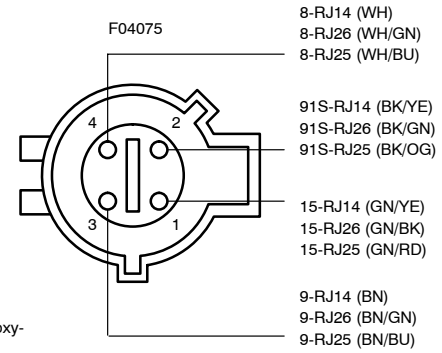

C149 (BU)

12A522 **14300**

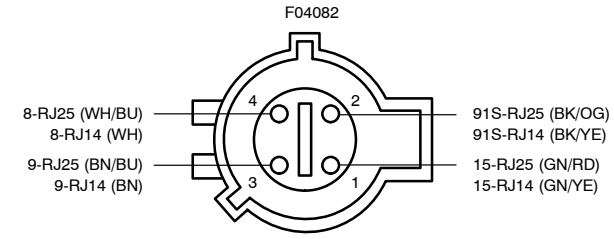


B89
Pre–catalyst heated oxygen sensor (HO2S)

B192
Catalyst monitor sensor

B300
Catalyst monitor sensor, RH side

C151


14K733

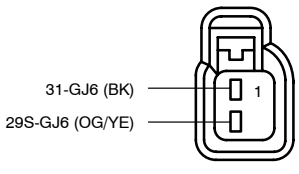

H1
Horn

C152


12A522

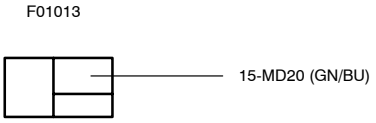

U1
Ignition transformer capacitor

C153


9H589

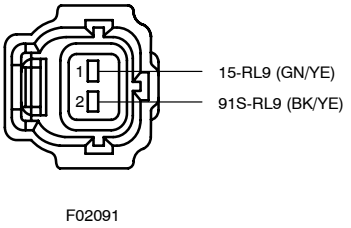

Y13
Idle speed control valve

C154


12A522

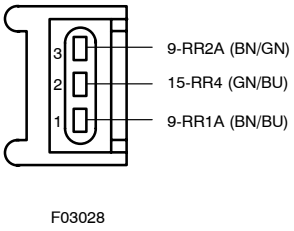

T2
Ignition transformer

C156

12A522

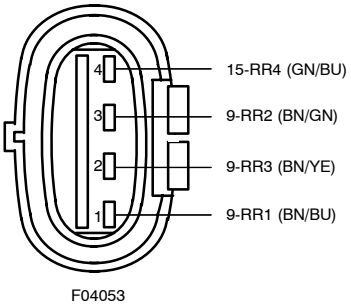


T2
Ignition transformer

C159

12A522
Petrol

14K733
Diesel engines

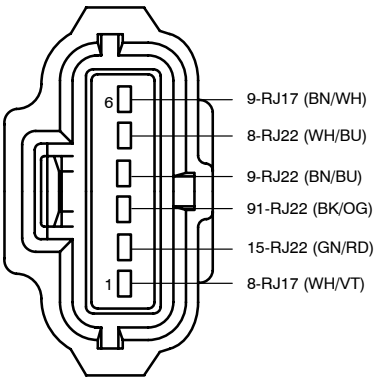


F06077

B22
Mass Air Flow (MAF) sensor

C160

12A522

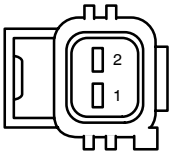

F02107


(1) 9-RJ18 (BN/YE)
8-RJ18 (WH/BK)

(2) 8-RJ18 (WH/BK)
9-RJ18 (BN/YE)
9-RJ18A (BN/YE)

B45
Knock sensor

C161

2B325

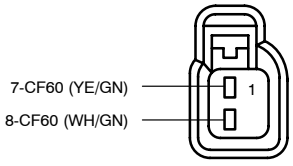


F02058

B15
Wheel speed sensor, LH side front

C162

2B325

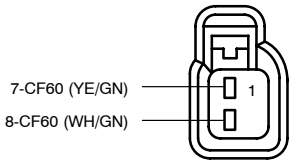


F02058

B14
Wheel speed sensor, RH side front

C163

14K733

F02132

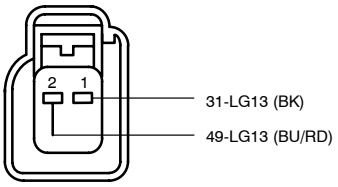


E3
Turn signal lamp, LH front

C164

14K733


F02132

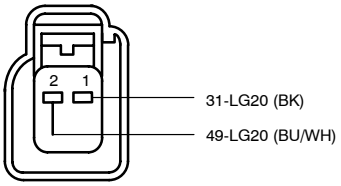

E8
Turn signal lamp, RH front

C165

14K733

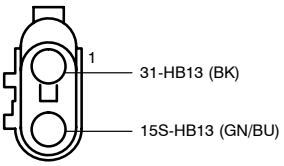


F02005

R51
Windshield washer jet heater, LH side


C166

14K733

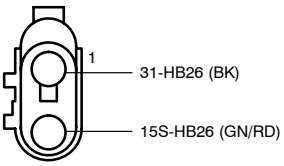

F02005


R52
Windshield washer jet heater, RH side



C167

9H589


F42001

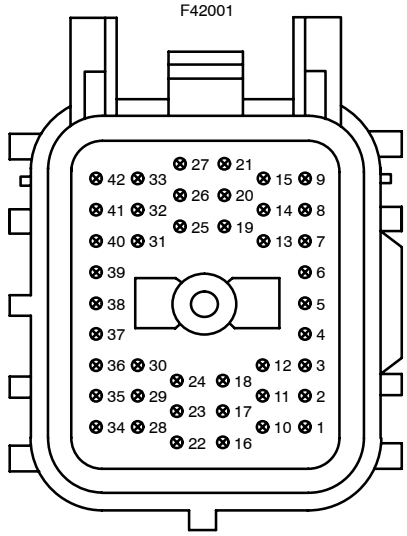

(1) 8-EB6 (WH)
(2) 9-RJ3 (BN/WH)
(3) 8-RJ3 (WH/VT)
(4) 9-RJ4 (BN/RD)
(5) 8-RJ4 (WH/RD)
(6) 91-RJ18 (BN/YE)
91-RJ18 (BK/RD)
9-RJ18 (BN/YE)
(7) 8-RJ18 (WH/BK)
(8) 9-RJ18 (BN/YE)
(9)
(10) 9-RJ33 (BN/WH)
(11) 8-RJ33 (WH/VT)
(12) 7-RJ3 (YE/VT)
15-RJ3 (GN/WH)
(13) 7-PA37 (YE/BU)
(14) 8-PA37 (WH/BU)
(15) 9-PA37 (BN/BU)
(16)
(17) 4-EC7 (GY/RD)
(18) 5-EC7 (BU/RD)
(19) 7-RJ11 (YE/GN)
(20) 8-RJ11 (WH/GN)
(21) 9-RJ11 (BN/GN)
(22) 31S-GC21 (BK/GN)
(23) 15-RL22 (GN/OG)
4-EC7A (GY/RD)
(24) 15-RL29 (GN/BU)
5-EC7A (BU/RD)
(25) 9-EB6 (BN)
(26) 9-RJ12 (BN/BU)
(27) 8-RJ12 (WH/BU)
(28) 91S-RL13 (BK/OG)
(29) 15S-RL13 (GN/RD)
(30) 91S-RL12 (BK/BU)
(31) 15S-RL42 (GN/BU)
15-DA1 (GN/YE)
15-RL42 (GN/BU)
(32) 91S-RL42 (BK/BU)
(33) 91S-RL22 (BK/RD)
91-RL46 (BK/RD)
(34)
(35) 15S-RL12 (GN/BU)
(36) 91S-RL11 (BK/YE)
(37) 15S-RL11 (GN/YE)
(38) 91S-RL10 (BK/WH)
(39) 15S-RL10 (GN/WH)
(40) 15-DA1 (GN/YE)
15-RL29 (GN/BU)
(41) 91S-RL29 (BK/BU)
(42) 29-BA6 (OG/YE)

14K733


F42002

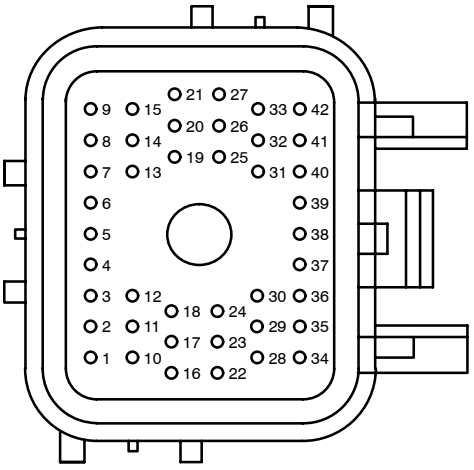

(1) 8-EB6 (WH)
(2) 9-RJ3 (BN/WH)
(3) 8-RJ3 (WH/VT)
(4) 9-RJ4 (BN/RD)
(5) 8-RJ4 (WH/RD)
(6) 91-RJ18 (BK/RD)
91-RJ18 (BN/YE)
9-RJ18 (BN/YE)
(7) 8-RJ18 (WH/BK)
(8) 9-RJ18 (BN/YE)
9-RJ43 (BN)
(9)
(10) 9-DA2 (BN/RD)
9-PA37 (BN/BU)
9-RJ33 (BN/WH)
(11) 8-RJ33 (WH/VT)
(12) 7-RJ3 (YE/VT)
15-RJ3 (GN/WH)
(13) 9-RJ33 (BN/WH)
7-PA37 (YE/BU)
(14) 7-RJ11 (YE)
8-PA37 (WH/BU)
(15) 8-RJ43 (WH)
9-PA37 (BN/BU)
(16) 8-PA37 (WH/BU)
(17) 7-PA37 (YE/BU)
4-EC7 (GY/RD)
(18) 9-RJ33 (BN/WH)
5-EC7 (BU/RD)
(19) 7-RJ11 (YE/GN)
(20) 8-RJ11 (WH/GN)
(21) 9-RJ11 (BN/GN)
(22) 31S-GL21 (BK/GN)
(23) 15-RL22 (GN/OG)
15-DA1 (GN/YE)
4-EC7A (GY/RD)
(24) 15-RL29 (GN/BU)
5-EC7A (BU/RD)
(25) 91S-RL45 (BK/BU)
9-EB6 (BN)
(26) 9-RJ12 (BN/BU)
(27) 8-RJ12 (WH/BU)
(28) 91S-RL13 (BK/OG)
(29) 15S-RL13 (GN/RD)
(30) 91S-RL12 (BK/BU)
(31) 15S-RL42 (GN/BU)
15-RL42
(32) 91S-RL42 (BK/BU)
(33) 91S-RL22 (BK/RD)
91-RL46 (BK/RD)
(34)
(35) 15S-RL12 (GN/BU)
(36) 91S-RL11 (BK/YE)
(37) 15S-RL11 (GN/YE)
(38) 91S-RL10 (BK/WH)
(39) 15S-RL10 (GN/WH)
(40) 15-DA1 (GN/YE)
(41) 91S-RL29 (BK/BU)
(42) 29-BA6 (OG/YE)

C168

12A522

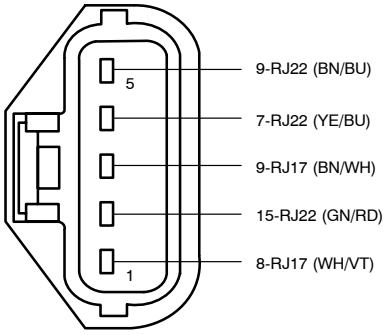


F05124

B22
Mass Air Flow
(MAF) sensor

C169

12A522


F02564

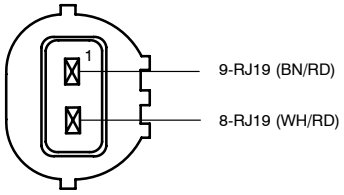

B106
Knock sensor 2

C170

12A522 **9H589**

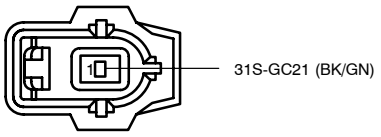


F01016

N17
Oil pressure switch

C171

14K733

F12030

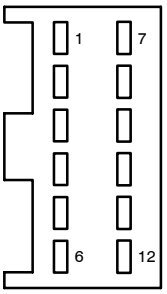


(1)	31-TA55 (BK)	(7)	31-TA55A (BK)
(2)	15S-TA23 (GN/YE)	(8)	91-TA36 (BK/GN)
(3)	15S-TA24 (GN/BU)	(9)	15S-TA47 (GN/WH)
(4)	15S-TA53 (GN/OG)	(10)	15S-TA69 (GN/WH)
(5)	15S-TA64 (GN/OG)	(11)	15S-TA65 (GN/WH)
(6)	15S-TA63 (GN/BK)	(12)	15S-TA20 (GN/WH)

A40
Transmission
hardware unit

C172

12A522

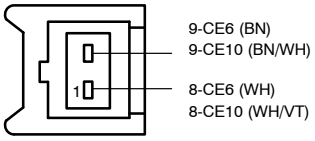


F02012

N96
Power steering pres-
sure switch

C173 (GY)

14K733

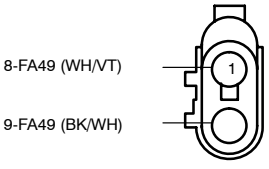


F02005

B203
Ambient air temperature
sensor

C174

14K733

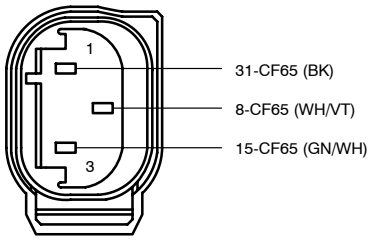


F03110

B140
Primary brake pressure sensor

C175

14K733

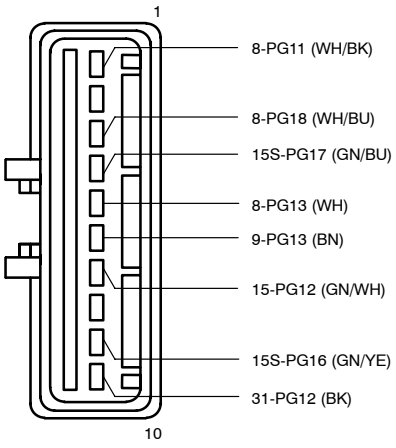


F10011

A27
Speed control module

C176 (BU)

12A522


F02512

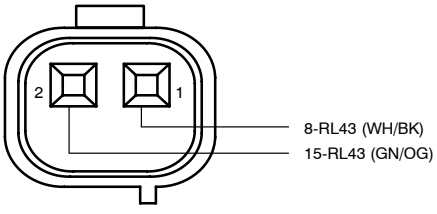

Y160
Swirl plate solenoid valve

C177

9H589

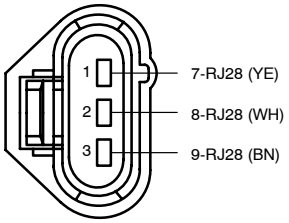


F03071

B8
Throttle Position Sensor (TPS)

C178

14K733

F08020

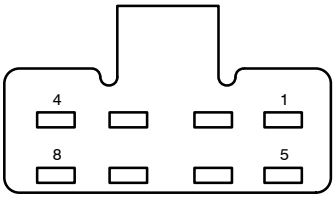


(1) 8-TA26 (WH/RD)
(2) 8-TA27 (WH/VT)
(3) 8-TA57 (WH/RD)
(4) 8-TA51 (WH/RD)
(5) 9-TA26 (BN/RD)
(6) 9-TA27 (BN/WH)
(7) 9-TA57 (BN/RD)
(8) 9-TA51 (BN/RD)

A40
Transmission hardware unit

C179

12A522

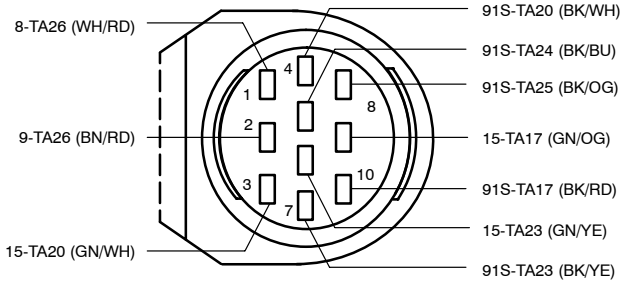


F10012

A40
Transmission hardware unit

C181

12A522

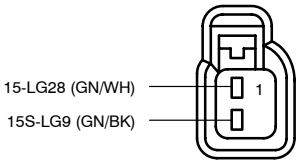


F02058

N394
Reversing lamp switch

C182

12A522

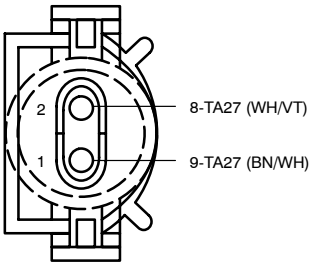


F02031

B44
Turbine Shaft Speed (TSS) sensor

C184

14K733

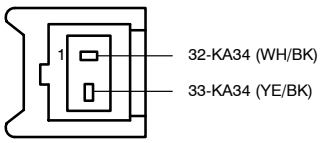


F02014

M84
Washer pump motor, front and rear

M112
Windshield washer pump motor

C185

14K733

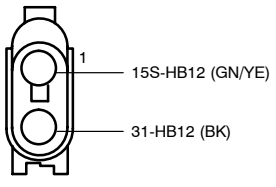


F02005

R53
Windshield heater, LH side

C186

14K733

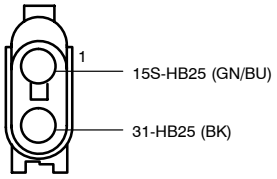


F02005

R54
Windshield heater, RH side

C187

12A522

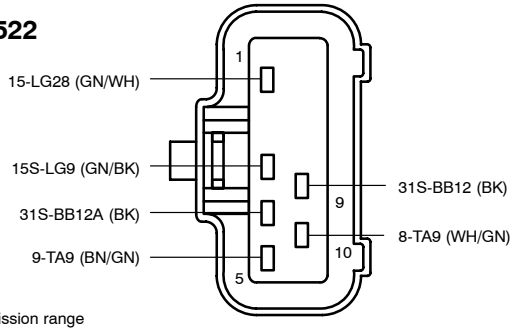


F06021

B120
Transmission range sensor

C188

14K733

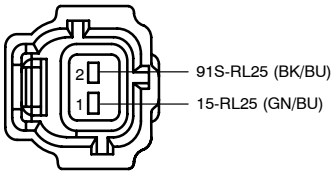


F02105

Y1
Canister purge solenoid valve

C190

12A522

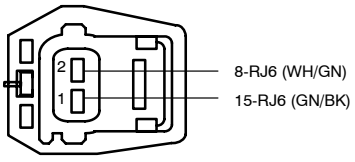


F02055

B248
Electronic thermostat

C192 (GN)

9H589

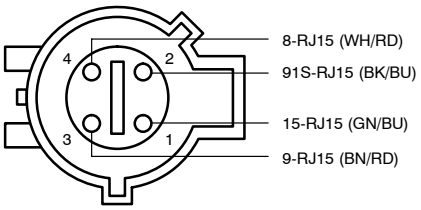


F04124

B47
Pre–catalyst heated oxygen sensor (HO2S), LH

C193

12A522


F02560

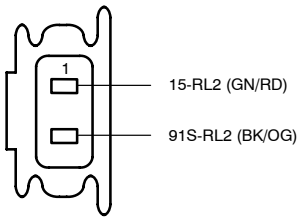

Y1
Canister purge solenoid valve

C194

12A522

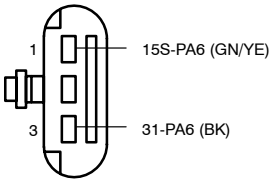


F03057

M37
Cooling fan motor

C195

14K733

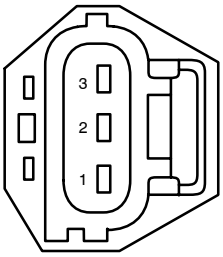

F03167


(1) 9-LE53 (BN/BU)
(2) 8-LE53 (WH/BU)
(3) 7-LE53 (YE/BU)

B245
Headlamp levelling sensor, front

C196 (WH)

14K733

F24016

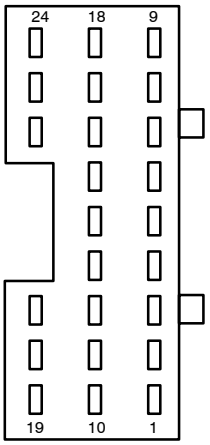


(1)	15S-TA65 (GN/WH)	(13)	
(2)	15-TA63 (GN/BK)	(14)	
(3)	15S-TA20 (GN/WH)	(15)	
(4)	91-TA36 (BK/GN)	(16)	
(5)	4-TA58 (GY/BK)	(17)	
(6)	5-TA58 (BU/YE)	(18)	8-TA37 (WH)
(7)	15S-TA53 (GN/OG)	(19)	15-TA55A (GN/BK)
(8)	15S-TA47 (GN/WH)	(20)	15S-TA69 (GN/WH)
(9)		(21)	15S-TA64 (GN/OG)
(10)	15-TA55B (GN/BK)	(22)	
(11)	15S-TA23 (GN/YE)	(23)	9-TA27A (BN/WH)
(12)	15S-TA24 (GN/BU)	(24)	91S-TA67 (BK/WH)

A318
Transmission control module (TCM)

C197 (GY)

14K733

F24016

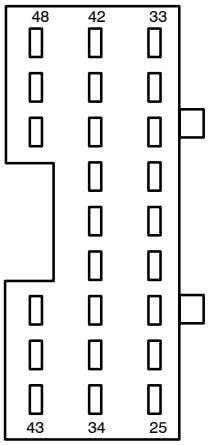

(25)	31-TA55A (BK)	(37)	
(26)	9-TA51A (BN/RD)	(38)	8-TA27 (WH/VT)
(27)	91S-TA68 (BK/RD)	(39)	8-TA57 (WH/RD)
(28)	29-TA55 (OG/BK)	(40)	
(29)	8-TA51 (WH/RD)	(41)	
(30)		(42)	9-TA28 (BN/RD)
(31)	8-TA58 (WH/BK)	(43)	
(32)	31S-CF64 (BK/RD)	(44)	9-TA57A (BN/RD)
(33)		(45)	15S-LG23A (GN/WH)
(34)	8-TA40 (WH/GN)	(46)	
(35)	8-TA38 (WH/RD)	(47)	8-TA26 (WH/RD)
(36)	8-TA39 (WH/BU)	(48)	31-TA55 (BK)


A318
Transmission control module (TCM)

C199 (BU)

12A522

F04082

B199
Catalyst monitor sensor, LH side

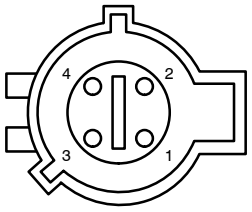

B3
Heated Exhaust Gas Oxygen (HEGO) sensor

(1) 15-RJ26 (GN/BK)
15-RJ25 (GN/RD)


(2) 91S-RJ26 (BK/GN)
91S-RJ25 (BK/OG)

(3) 9-RJ26 (BN/GN)
9-RJ25 (BN/BU)

(4) 8-RJ26 (WH/GN)
8-RJ25 (WH/BU)

C200

F121002

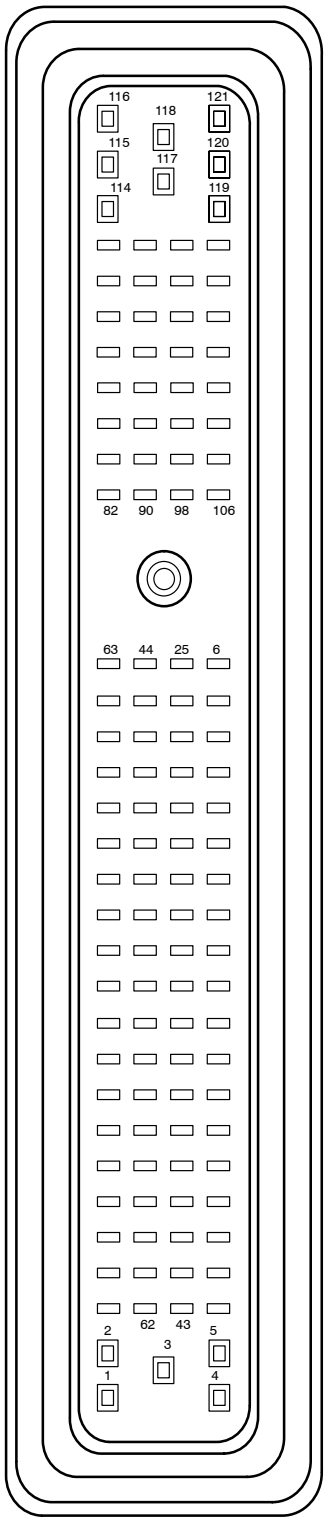


A147
Powertrain control module (PCM)

	Diesel engines **14K733**	Petrol engines **12A522**
(1)	91-RE8A (BK/YE)	8-RE3 (WH/GN)
(2)	91-RE8B (BK/YE)	91S-RJ25 (BK/OG)
(3)	15-RE8 (GN/YE) 91S-RJ14 (BK/YE)	
(4)	15-RE8A (GN/YE) 15-RE8 (GN/YE)	7-DA10 (YE/GN)
(5)	15-RE8B (GN/YE) 15-RE8A (GN/YE)	8-RJ18 (WH/BK)
(6)	7-RJ11 (YE/GN) 15S-PG16 (GN/YE)	9-RJ18A (BN/YE) 8-RJ9 (WH/RD)
(7)	7-PA37 (YE/BU) 8-RJ3 (WH/VT)	8-EB6 (WH) 9-RJ14 (BN)
(8)	8-PA37 (WH/BU) 8-RJ30 (WH)	
(9)	91S-RH9 (BK/BU) 8-RJ5 (WH)	91S-BB6 (BK/YE)
(10)	8-RJ38 (WH/VT)	8-RJ36 (WH/BU) 9-RJ28 (BN)
(11)	9-RJ30 (BN)	7-RJ36 (YE/BU) 9-RJ44 (BN/BU)
(12)	91S-PG17 (BK/BU) 15S-PG17 (GN/BU) 8-RJ35 (WH/RD)	
(13)	9-PG13 (BN) 9-RJ39 (BN/RD)	9-RJ30 (BN) 9-RJ35 (BN/RD)
(14)	9-RJ35 (BN/RD) 9-RJ22 (BN/BU)	4-EC7 (GY/RD) 31S-GL6 (BK/OG) 4-EC7A (GY/RD)
(15)	8-GL37 (WH/GN) 91-RE8C (BK/YE)	4-EG9 (GY/OG)
(16)	31S-GL6 (BK) 4-EC7A (GY/RD)	
(17)	5-EC7A (BU/RD)	8-PG13 (WH) 91S-FA11 (BK/YE)
(18)	15S-LG16 (GN/OG) 10-GL37 (GY/OG)	15S-RE13 (GN/RD) 8-RE39 (WH/RD)
(19)	15S-FA12 (GN/BU) 8-RJ25 (WH/BU)	
(20)	91S-RH15 (BK/YE)	8-PG11 (WH/BK) 91S-RJ26 (BK/GN)
(21)	31S-BB12 (BK/YE) 31S-BB12A (BK/YE) 9-EB6 (BN)	91S-RH23 (BK/OG) 91S-PA17 (BK/WH)
(22)	91S-RH9 (BK/BU)	91S-RH25 (BK/GN) 8-RE38 (WH)
(23)	8-GB8 (WH/BU)	7-RJ35 (YE/RD)
(24)		8-FA49 (WH/VT) 7-RJ30 (YE)
(25)	8-RJ11 (WH/GN) 50-BB12C (GY)	9-FA49 (BN/WH) 9-RJ9 (BN/RD)
(26)	9-RJ11 (BN/GN)	91-RE8D (BK/YE) 8-RJ14 (WH)
(27)	9-PA37 (BN/BU) 8-RJ11 (WH/GN)	15S-RE13 (GN/RD)
(28)	91-RE8C (BK/YE) 8-RJ26 (WH/GN)	8-PG11 (WH/BK)
(29)	8-RJ20 (WH/GN)	
(30)	9-RJ26 (BN/GN)	9-RJ36 (BN/BU) 9-RJ25 (BN/BU)
(31)	9-RJ17 (BN/WH)	8-RJ30 (WH) 8-EB6 (WH)
(32)	8-RJ35 (WH/RD) 9-DA3 (BN/BU)	7-RJ30 (YE) 9-RJ19 (BN/RD)
(33)	7-RJ35 (YE/RD) 9-DA10 (BN/GN)	5-EC7 (BU/RD) 8-RJ19 (WH/RD) 5-EC7A (BU/RD)
(34)	10-GL37 (GY/OG) 91-RE8D (BK/YE)	5-EG9 (BU/BK)
(35)	4-EC7 (GY/RD)	91S-PA7 (BK/BU)
(36)	5-EC7 (BU/RD)	91S-PA13 (BK/BU) 8-RE42 (WH/BK)
(37)	15-BB7 (GN/BU) 8-GL37 (WH/GN)	15S-PG16 (GN/YE) 8-RE37 (WH/VT)
(38)	91S-BB6 (BK/YE) 15-RE8B (GN/YE)	8-GB8 (WH/BU) 31S-BB12 (BK/YE)
(39)	29-RE8 (OG/YE)	91S-FA11 (BK/YE) 91S-RL2 (BK/OG)
(40)	8-RE3 (WH/GN)	91S-RH5 (BK/BU)
(41)	91S-RJ25 (BK/OG)	8-RJ6 (WH/GN)
(42)		9-RJ4 (BN/RD) 8-PA53 (WH/BK)
(43)		8-RJ22 (WH/BU) 9-RL43 (BN/YE)
(44)	7-DA10 (YE/GN)	9-RJ22A (BN/BU) 91S-RL42B (BK/BU)
(45)	8-RJ18 (WH/BK)	8-RL43 (WH/BK)
(46)	9-RJ18A (BN/YE) 8-RJ9 (WH/RD)	8-RJ41 (WH/VT)
(47)	8-EB6 (WH) 9-RJ14 (BN)	91S-RL42 (BK/BU) 8-RJ18 (WH/BK)
(48)		91-RE8E (BK/YE) 7-RJ28 (YE)
(49)	91S-BB6 (BK/YE)	8-RJ4 (WH/RD)
(50)	8-RJ36 (WH/BU) 9-RJ28 (BN)	8-RJ4 (WH/RD) 91-RJ4 (BK/BU)
(51)	7-RJ36 (YE/BU) 9-RJ44 (BN/BU)	9-RE8 (BN)
(52)		9-DA2 (BN/RD)
(53)	9-RJ30 (BN) 9-RJ35 (BN/RD)	8-CE10 (WH/VT)
(54)	4-EC7 (GY/RD) 31S-GL6 (BK/OG) 4-EC7A (GY/RD)	8-FA49 (WH/VT)
(55)	4-EG9 (GY/OG)	91S-RL22 (BK/RD) 9-RJ18 (BN/YE)
(56)		91S-RL29 (BK/BU) 7-RJ22 (YE/BU)
(57)	8-PG13 (WH) 91S-FA11 (BK/YE)	9-RJ4 (BN/RD)
(58)	15S-RE13 (GN/RD) 8-RE39 (WH/RD)	8-PA51 (WH/BU)
(59)		8-RJ20 (WH/GN) 8-RJ41A (WH/VT)
(60)	8-PG11 (WH/BK) 91S-RJ26 (BK/GN)	9-RJ40 (BN/GN) 91S-RL42A (BK/BU)
(61)	91S-RH23 (BK/OG) 91S-PA17 (BK/WH)	8-RJ33 (WH/VT)
(62)	91S-RH25 (BK/GN) 8-RE38 (WH)	9-RJ33 (BN/WH) 8-CF51 (WH/GN)
(63)	7-RJ35 (YE/RD)	8-RJ3 (WH/VT)
(64)	8-FA49 (WH/VT) 7-RJ30 (YE)	9-RJ3 (BN/WH) 8-PG13 (WH)
(65)	9-FA49 (BN/WH) 9-RJ9 (BN/RD)	49-PA6 (BU) 15S-PA13 (GN/BU)
(66)	91-RE8D (BK/YE) 8-RJ14 (WH)	8-PA52 (WH/GN)
(67)	15S-RE13 (GN/RD)	8-RJ40 (WH/GN) 8-PA54 (WH/VT)
(68)	8-PG11 (WH/BK)	7-RJ40 (YE/GN) 9-RJ41A (BN/WH)
(69)		8-RJ12 (WH/BU)
(70)	9-RJ36 (BN/BU) 9-RJ25 (BN/BU)	9-RJ12 (BN/BU) 8-RJ17 (WH/VT)
(71)	8-RJ30 (WH) 8-EB6 (WH)	7-RJ3 (YE/VT)
(72)	7-RJ30 (YE) 9-RJ19 (BN/RD)	9-EB6 (BN)
(73)	5-EC7 (BU/RD) 8-RJ19 (WH/RD) 5-EC7A (BU/RD)	15S-FA12 (GN/BU)
(74)	5-EG9 (BU/BK)	91S-RL10 (BK/WH)
(75)	91S-PA7 (BK/BU)	91S-RL13 (BK/OG) 8-RR5 (WH)
(76)	91S-PA13 (BK/BU) 8-RE42 (WH/BK)	15S-RG3 (GN/RD)
(77)	15S-PG16 (GN/YE) 8-RE37 (WH/VT)	15S-RL10A (GN/WH) 8-RR6 (WH/RD)
(78)	8-GB8 (WH/BU) 31S-BB12 (BK/YE)	15S-RL12A (GN/BU) 91S-RG3 (BK/OG)
(79)	91S-FA11 (BK/YE) 91S-RL2 (BK/OG)	
(80)	91S-RH5 (BK/BU)	91S-RL11 (BK/YE) 8-RR7 (WH/BU)
(81)	8-RJ6 (WH/GN)	91S-RL12 (BK/BU) 8-RR8 (WH/GN)
(82)	9-RJ4 (BN/RD) 8-PA53 (WH/BK)	
(83)	8-RJ22 (WH/BU) 9-RL43 (BN/YE)	
(84)	9-RJ22A (BN/BU) 91S-RL42B (BK/BU)	
(85)	8-RL43 (WH/BK)	
(86)	8-RJ41 (WH/VT)	
(87)	91S-RL42 (BK/BU) 8-RJ18 (WH/BK)	
(88)	91-RE8E (BK/YE) 7-RJ28 (YE)	
(89)	8-RJ4 (WH/RD)	
(90)	8-RJ4 (WH/RD) 91-RJ4 (BK/BU)	
(91)	9-RE8 (BN)	
(92)	9-DA2 (BN/RD)	
(93)	8-CE10 (WH/VT)	
(94)	8-FA49 (WH/VT)	
(95)	91S-RL22 (BK/RD) 9-RJ18 (BN/YE)	
(96)	91S-RL29 (BK/BU) 7-RJ22 (YE/BU)	
(97)	9-RJ4 (BN/RD)	
(98)	8-PA51 (WH/BU)	
(99)	8-RJ20 (WH/GN) 8-RJ41A (WH/VT)	
(100)	9-RJ40 (BN/GN) 91S-RL42A (BK/BU)	
(101)	8-RJ33 (WH/VT)	
(102)	9-RJ33 (BN/WH) 8-CF51 (WH/GN)	
(103)	8-RJ3 (WH/VT)	
(104)	9-RJ3 (BN/WH) 8-PG13 (WH)	
(105)	49-PA6 (BU) 15S-PA13 (GN/BU)	
(106)	8-PA52 (WH/GN)	
(107)	8-RJ40 (WH/GN) 8-PA54 (WH/VT)	
(108)	7-RJ40 (YE/GN) 9-RJ41A (BN/WH)	
(109)	8-RJ12 (WH/BU)	
(110)	9-RJ12 (BN/BU) 8-RJ17 (WH/VT)	
(111)	7-RJ3 (YE/VT)	
(112)	9-EB6 (BN)	
(113)	15S-FA12 (GN/BU)	
(114)	91S-RL10 (BK/WH)	
(115)	91S-RL13 (BK/OG) 8-RR5 (WH)	
(116)	15S-RG3 (GN/RD)	
(117)	15S-RL10A (GN/WH) 8-RR6 (WH/RD)	
(118)	15S-RL12A (GN/BU) 91S-RG3 (BK/OG)	
(119)		
(120)	91S-RL11 (BK/YE) 8-RR7 (WH/BU)	
(121)	91S-RL12 (BK/BU) 8-RR8 (WH/GN)	

C201

9H589

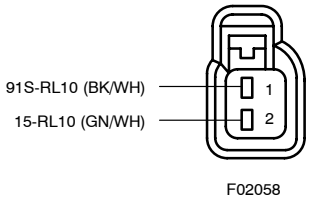


F02058

Y108
Fuel injector 1

C205

9H589

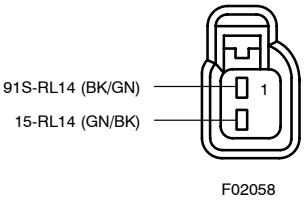


F02058

Y112
Fuel injector 5

C202

9H589

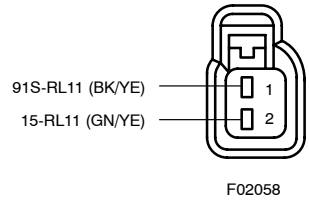


F02058

Y109
Fuel injector 2

C206

9H589

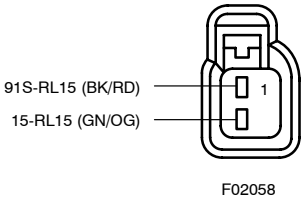


F02058

Y113
Fuel injector 6

C203

9H589

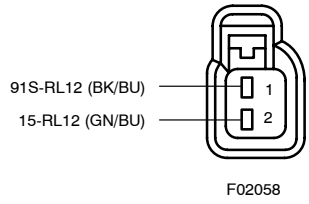


F02058

Y110
Fuel injector 3

C207

15A211

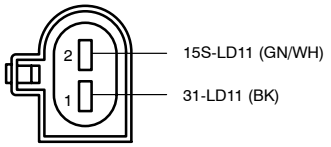


F02065

E42
Fog lamp, RH side
front

C204

9H589

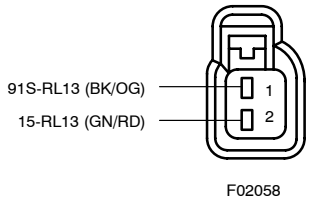


F02058

Y111
Fuel injector 4

C208

15A211

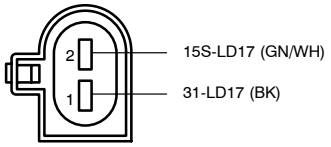


F02065

E43
Fog lamp, LH side
front

C210

9H589

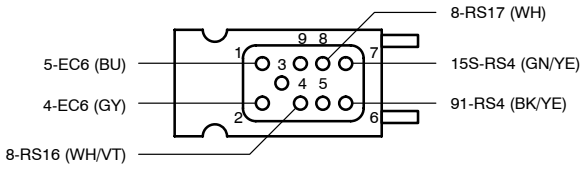


F09026

A74
Diesel pump unit

C211

9H589

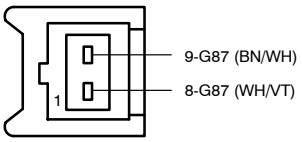


F02012

B251
Engine RPM sensor

C212 (BN)

9H589

F02202

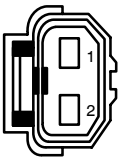


Y165
Fuel metering valve

(1) 15S-RL42 (GN/BU)
(2) 91S-RL42 (BK/BU)

C213 (GN)

9H589

F02202

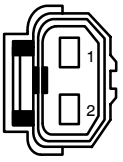


B109
Fuel temperature sensor

(1) 8-RJ12 (WH/BU)
(2) 9-RJ12 (BN/BU)

C214

9H589

F03198

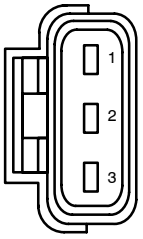


B225
Fuel rail pressure transducer sensor

(1) 8-RJ11 (WH/GN)
9-RJ11 (BN/GN)
(2) 9-RJ11 (BN/GN)
8-RJ11 (WH/GN)
(3) 7-RJ11 (YE/GN)

C215

12A522


F06264

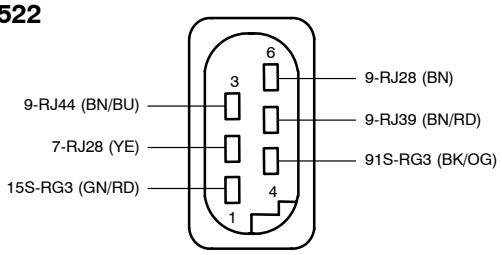

A364
Electronic throttle body

C217

14K155

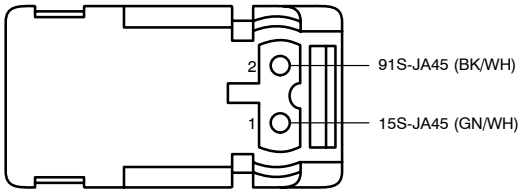


A242
Side air bag module, driver

F02215

C218

14K155

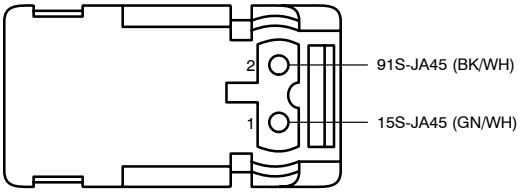


A245
Side air bag module, passenger

F02215

C221

12A522

F04264

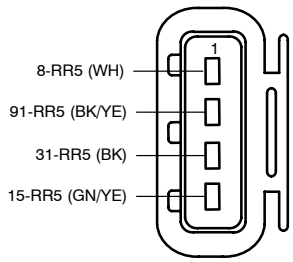


T6
Ignition coil, cylinder 1

C222

12A522

F04264

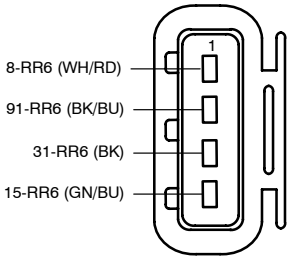


T7
Ignition coil, cylinder 2

C223

12A522

F04264

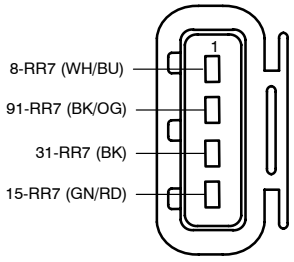


T8
Ignition coil, cylinder 3

C224

12A522

F04264

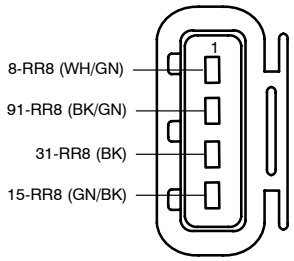


T9
Ignition coil, cylinder 4

C225

14K733

F10046

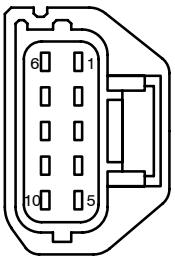


(1) 8-TA40 (WH/GN)
(2) 8-TA39 (WH/BU)
(3)
(4)
(5)
(6) 31S-BB12 (BK/YE)
(7) 8-TA38A (WH/RD)
(8) 15-TA18 (GN/OG)
(9) 8-TA37 (WH)
(10) 31S-BB12A (BK/YE)

B120
Transmission range sensor

C226

14A464
14K733


F03318

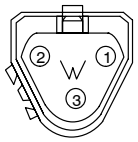

(1)
(2) 8-LE31A (WH)
(3) 31-LE31B (BK)

C252

14K733

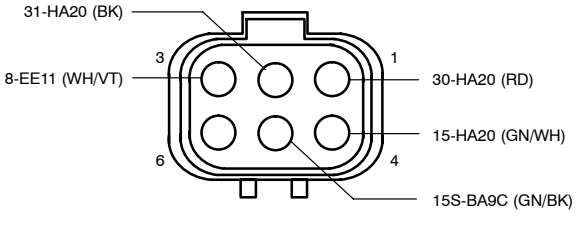


R50
Booster heater

F06215

C300

9H589

F05140

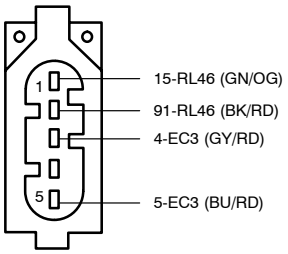


M253
Variable geometry
turbo actuator

C304

14K733


F02035

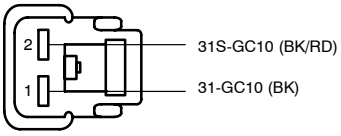

N89
Low cleaning
water level switch

C400

14K024

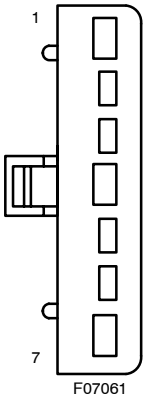

F07061

(1) 15-DA2 (GN/BU)
15-DA2A (GN/BU)

(2) 30S-LF14 (RD/OG)

(3) 31S-TA32 (BK/WH)
31S-TA34A (BK/WH) +
31S-TA32
91S-TA32 (BK/WH) +
91S-TA34A (BK/YE)

(4) 30-BB9 (RD)


(5)

(6) 75-DA1 (YE)

(7) 50-BB12 (GY)

N278
Ignition switch

C401

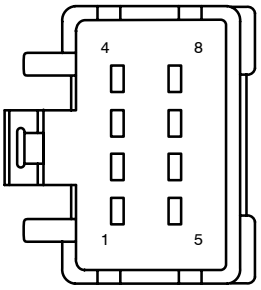

(1)

(2)

(3) 91-MC9 (BN)+
91-MC9A (GY)

(4) 8-GK11 (WH)+
8-GK11A (PK)


(5)

(6)

(7)

(8) 75-MC9 (GN) +
75-MC9A (YE)

F08270

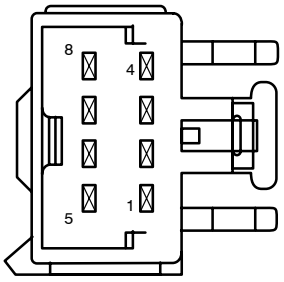

(1)

(2)

(3) 91-MC12A (BK/YE)
91-MC12 (BK/YE)

(4) 10-MC12 (GY)

(5) 9-MC12 (BN)


(6) 8-MC12 (WH)

(7) 29-MC12 (OG/YE)

(8) 15-MC12 (GN/YE)
75-MD15 (YE/GN)+
75-MD15A (YE/GN)
75-MC12 (YE)

C402 (GY)

13A612

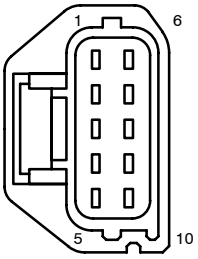


F10046

(1)		(6)	9-RJ35 (BN/RD) 9-RJ30 (BN)
(2)	9-RJ36 (BN/BU) 9-RJ35 (BN/RD)	(7)	8-RJ36 (WH/BU) 8-RJ35 (WH/RD)
(3)	7-RJ36 (YE/BU) 7-RJ35 (YE/RD)	(8)	7-RJ35 (YE/RD) 7-RJ30 (YE)
(4)	8-RJ35 (WH/RD) 8-RJ30 (WH)	(9)	9-RJ30 (BN)
(5)	8-RJ30 (WH)	(10)	7-RJ30 (YE)

B129
Accelerator pedal position sensor

C410 (OG)

14K024
14K006

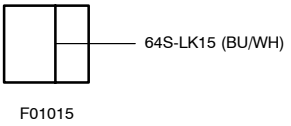


F01015

R42
Cigar lighter, front

C411 (OG)

14K024
14K006

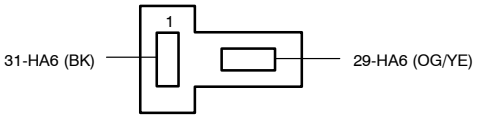


F02009

R42
Cigar lighter, front

C406

13A612

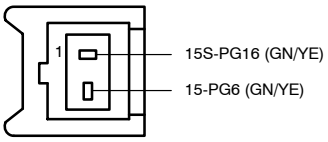


F02014

N82
Brake pedal position switch

C412

14K024

F06065

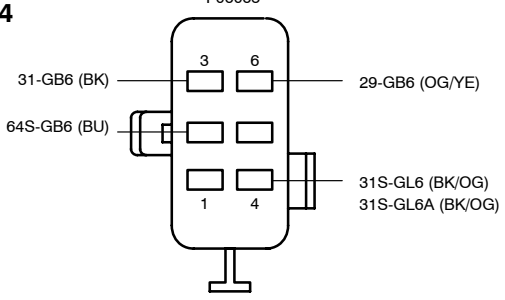


A39
Clock

C409

14A005

F02009

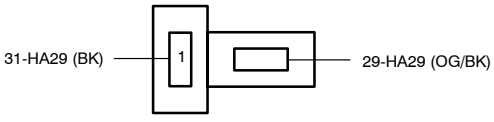


D44
Power point, RH side rear

C413

14K024

F09024

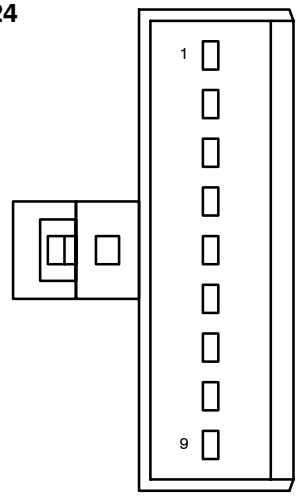


(1) 91S-JA48 (BK/GN)
(2) 15S-JA48 (GN/BK)
(3) 31-GJ9 (BK)
91-GJ9 (BK/GN)
(4) 31S-GJ7 (BK/BU)
8-TA61 (WH/GN)
(5) 8-PG13 (WH)
(6) 9-PG13 (BN)
(7) 15-PG13 (GN/YE)
15-PG13A (GN/YE)
(8) 91S-JA8 (BK/OG)
(9) 15S-JA8 (GN/RD)

P13
Clock spring

C414

13A612

F05012

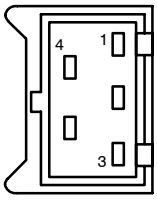


(1) 15S-PG17 (GN/BU)
91S-PG17 (BK/BU)
(3) 15S-PG7 (GN/BU)
91-PG17 (BK/BU)
(4) 8-BB6 (WH)
91S-BB6 (BK/YE)
(5) 9-BB6 (BN)
91-BB6 (BK/YE)
91-BB6 (BK/YE) +
91-PG17 (BK/BU)

N81
Clutch pedal position switch

C415

14K024

F10144

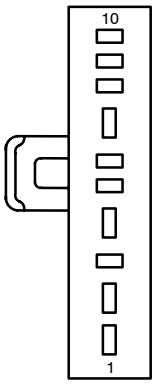


(1) 8-TA61 (WH/GN)
(2) 91-TA55A (BK/GN)
(3) 91S-GJ7 (BK/BU)
(4) 91S-TA68 (BK/RD)
(5) 91S-TA67 (BK/WH)
(6) 15-TA55 (GN/BK)
(7) 29-TA55 (OG/BK)
(8)
(9)
(10)

A360
Tiptronic module

C418

14K024

F16079

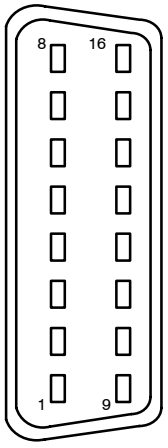


(1)
(2) 4-EG9 (GY/OG)
4-EG9A (GY/OG)
(3) 4-EC10B (GY)
4-EC10D (GY)
(4) 31-RA1 (BK)
(5) 91-RA1 (BK/OG)
(6) 4-EC1 (GY/RD)
(7) 8-EE10 (WH/BK)
(8)
(9)
(10) 5-EG9 (BU/BK)
5-EG9A (BU/BK)
(11) 5-EC10B (BU)
5-EC10D (BU)
(12)
(13) 8-EG9 (WH/GN)
(14) 5-EC1 (BU/RD)
(15)
(16) 29-RA1 (OG)

D20
Data Link Connector (DLC)

C421

14A005

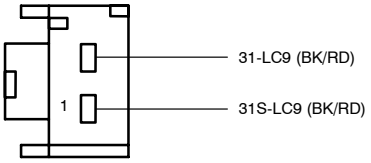


F02023

N84
Door ajar switch, LH front

C424b

14335

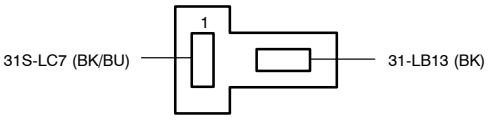


F02009

E63
Front dome lamp

C422

14335

F01015




E64
Rear dome lamp

C423

14335

F02009

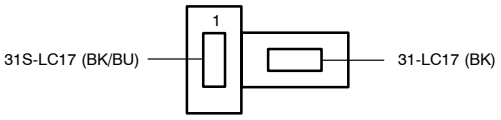


E64
Rear dome lamp

C424a

14335


F01015



E63
Front dome lamp

C426 (BU)

14K733

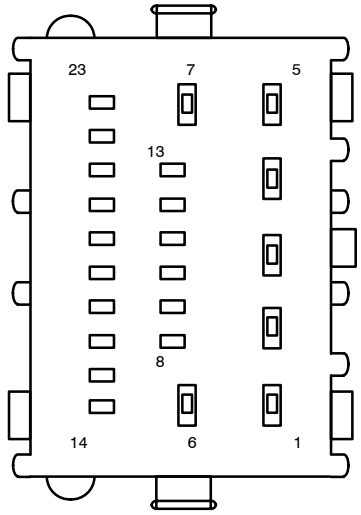


F23007

A112
Generic Electronic
Module (GEM)

(1)	29-AA17 (OG/WH)	(9)		(17)	
(2)	32-KA39 (WH/BK)	(10)		(18)	15S-BA9 (GN/BK) 15S-BA9A (GN/BK)
(3)	49-LG2 (BU/RD)	(11)		(19)	
(4)	49-LG1 (BU)	(12)		(20)	
(5)	29-LG25 (OG/BU)	(13)		(21)	31S-GL7 (BK/YE)
(6)		(14)		(22)	
(7)		(15)		(23)	31S-HB7 (BK/BU)
(8)		(16)			

C427 (GY)

14A005

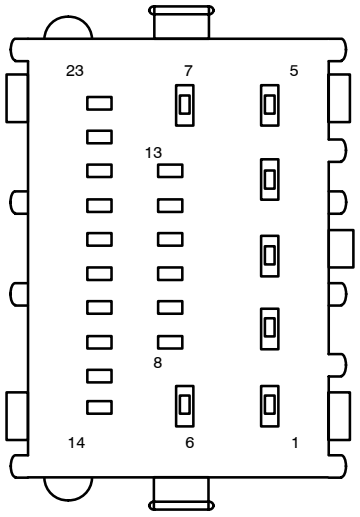


F23007

A112
Generic Electronic
Module (GEM)

(1)	49-GL26 (BU/YE)	(9)		(17)	91S-GE49 (BK/BU) 91S-GE49A (BK/BU)
(2)	49-LG12 (BU)	(10)		(18)	31S-LC26 (BK)
(3)	31S-LC7A (BK/BU)	(11)		(19)	31S-AA63 (BK/OG)
(4)	33-AA60 (YE)	(12)		(20)	29S-GL10 (OG/YE)
(5)	31-DK20 (BK)	(13)		(21)	
(6)		(14)	31S-AA62 (BK/WH)	(22)	31S-GL20 (BK/RD)
(7)		(15)		(23)	9-GL10 (BN)
(8)		(16)	31S-AA61 (BK/BU)		

C428 (GN)

14A005

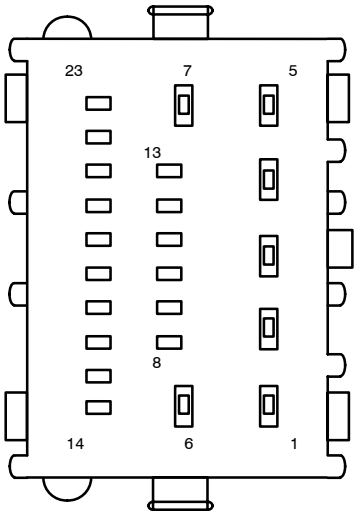


F23007

(1)	49S-GL26 (BU/YE)	(13)	
(2)	29S-AA27 (OG/BK)	(14)	31S-GL27 (BK/OG)
(3)	33-AA59 (YE/BK)	(15)	31S-LC14 (BK)
(4)	49-LG19 (BU/RD)	(16)	31S-AA64 (BK/GN)
(5)	32-AA59E (WH/BK)	(17)	8-AA36 (WH)
(6)		(18)	
(7)		(19)	
(8)		(20)	15S-LG39 (GN/OG)
(9)		(21)	
(10)		(22)	
(11)		(23)	
(12)			

A112
Generic Electronic
Module (GEM)

C429 (WH)

14K024

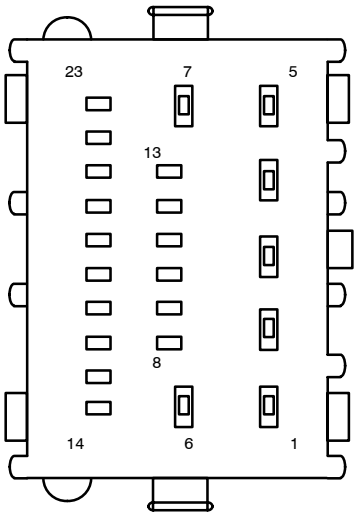


F23007

(1)	91-DK20 (BK/RD)	(13)	31S-HB9 (BK/WH)
(2)	49-LG22 (BU/YE)	(14)	29S-GG17 (OG)
(3)	49-LG15 (BU/BK)	(15)	31S-TA34 (BK/YE) 91S-TA34 (BK/YE)
(4)	8-KA19 (WH/BK)		
(5)	33-KA7 (YE/VT)	(16)	8-EE9 (WH/GN)
(6)		(17)	91S-LG27B (BK/GN)
(7)		(18)	8-GG21 (WH/VT)
(8)		(19)	91S-LG27A (BK/GN)
(9)	91S-JA14A (BK/GN)	(20)	31S-HB22 (BK/GN)
(10)	31S-GL15 (BK/OG)	(21)	31S-LC30 (BK)
(11)	31S-GL6B (BK/OG)	(22)	31S-LC29 (BK)
(12)	8-AA30 (WH)	(23)	31S-LG8 (BK/OG)

A112
Generic Electronic
Module (GEM)

C430 (BN)

14K024

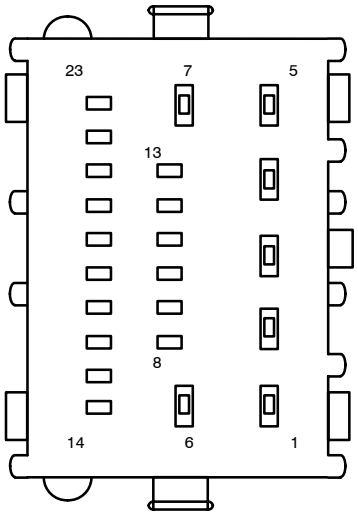


F23007

(1) 32-AA48 (WH/RD)
(2) 32-KA6 (WH/BK)
(3) 32-KA35 (WH/RD)
(4) 8-KA18 (WH)
(5) 32-AA47 (WH/GN)
(6)
(7)
(8) 64S-LG8 (BU/WH)
(9) 64S-LG7 (BU/RD)
(10)
(11)
(12) 4-EC10B (GY)
4-EC10C (GY)
(13) 5-EC10B (BU)
5-EC10C (BU)
(14)
(15) 31S-HB20 (BK/GN)
(16) 31S-AA30 (BK/YE)
(17) 31S-KA29 (BK/YE)
91S-GE49A (BK/BU)
(18) 91S-GE49 (BK/BU)
91S-GE49A (BK/BU)
(19) 31S-LK12 (BK/OG)
(20) 31S-LF21 (BK/GN)
(21) 31S-KA14 (BK/GN)
(22) 29S-LG43 (OG/WH)
(23) 4-AA17 (GY/WH)

A112
Generic Electronic
Module (GEM)

C436

14K024

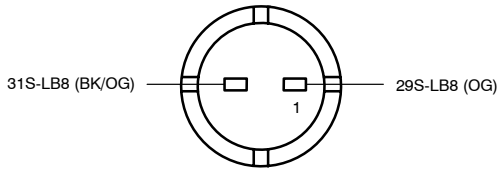


F02019

E28
Glove compartment
lamp

C439

14K733


F07058

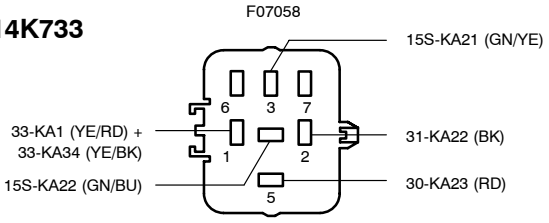

K34
Headlamp cleaning
relay

C437

14K024

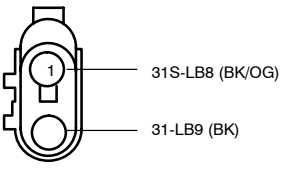


F02005

N20
Glove compartment
lamp switch

C442 (GY)

14K024

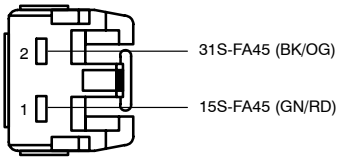


F02032

M3
Blower motor

C443

14K024

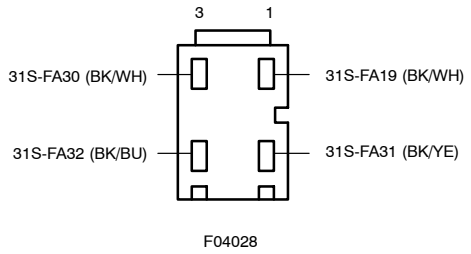


F04028

R21
Blower motor resistor

C447

14A005

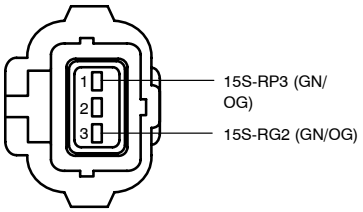


F03181

N316
Inertia Fuel Shutoff (IFS) switch

C448

14K024

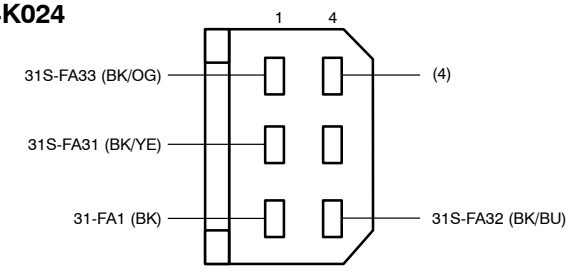


F06023

N14
Blower motor switch

(4) 31S-FA30 (BK/WH) + 31S-FA30A (BK/WH)

C449 (GY)

14K024

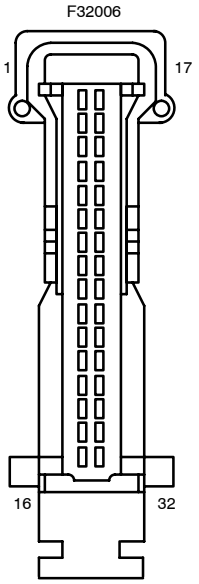


(1) 29-GG14 (OG)
(2) 15-GG14 (GN/RD)
(3) 31S-TA34A (BK/WH)
91S-TA34A (BK/YE)
(4) 64S-LK19 (BU/RD)
(5) 31S-GG10 (BK/WH)
(6) 8-AA30 (WH)
(7) 15S-BA9 (GN/BK)
(8) 31S-GC21 (BK/GN)
(9) 91S-JA14 (BK/GN)
91-JA14 (BK/GN)
(10) 31S-CF28 (BK/RD)
(11) 31S-CF70 (BK/GN)
(12) 31S-GE44 (BK/RD)
(13) 8-PG11 (WH/BK)
(14)
(15) 9-FA49 (BN/WH)
31S-GC10 (BK/RD)
(16) 4-EC2 (GY/RD)
4-EG8 (GY/VT)
(17) 91-GG14 (BK/OG)
(18) 49-LG15 (BU/BK)
(19) 49-LG22 (BU/YE)
(20) 15S-LE11 (GN/WH)
(21) 8-GG21 (WH/VT)
(22) 75-GG14 (YE/BU)
(23) 31S-LK12 (BK/OG)
(24) 8-GA7 (WH/RD)
(25) 91-GA7 (BK/BU)
(26) 91S-GE49 (BK/BU)
91S-GE49A (BK/BU)
(27) 29S-GM12 (OG/BK)
(28) 31S-GC7 (BK/BU)
(29)
(30) 8-EE12 (WH)
(31) 8-FA49 (WH/VT)
(32) 5-EC2 (BU/RD)
5-EG8 (BU/WH)

A30
Instrument cluster

C452

14K024

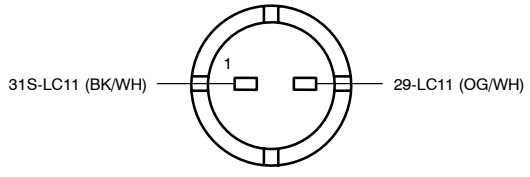


F02019

E61
Footwell lamp, LH front

C453

14A005

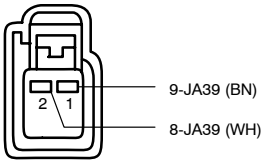


F02221

B238
Side air bag sensor, driver

C455

14K024

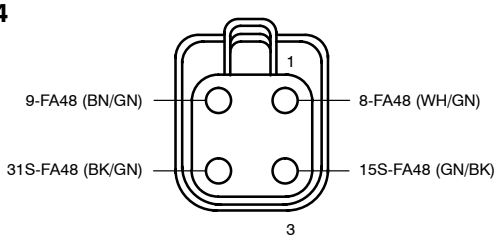


F04017

B66
In–vehicle temperature sensor, LH side

C456

14A005

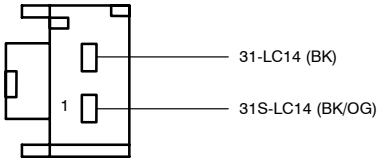


F02023

N86
Door ajar switch, LH rear

C465

18C873

F12058

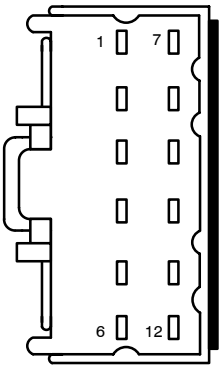


(1) 4-MD8 (GY/VT)
4-EC3A (GY/RD)
4-EC3C (GY/RD)
(2)
(3) 91-MD8 (BK/OG)
(4)
(5) 1-MD35 (WH/BU)
1-MD49 (WH/GN)
(6) 1-MD36 (WH/GN)
1-MD50 (WH/BK)
(7) 5-MD8 (BU/WH)
5-EC3A (BU/RD)
5-EC3C (BU/RD)
(8) 7-MD8 (YE/BU)
(9) 29-MD8 (OG)
(10) 3-MD12 (BK)
3-MD12 (BN)
(11) 2-MD35 (GY/VT)
2-MD49 (GY/OG)
(12) 2-MD36 (GY/OG)
2-MD50 (GY/BK)

A144
CD changer

C473

14335

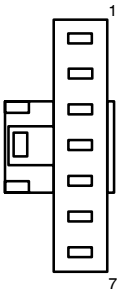


(1) 15-AD15 (GN/RD)
15-AG12 (GN/BK) +
15-AD15 (GN/RD)
(2) 31-AD15 (BK)
(3) 15S-AD15 (GN/RD)
(4)
(5)
(6)
(7)

F07065

A222
Auto–dimming interior mirror

C474 (OG)

14335




F01015

E87
Cargo space lamp

C475

14335

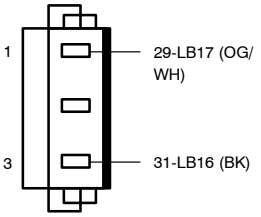


F03182

E30
Vanity mirror lamp, LH side

C476

14335

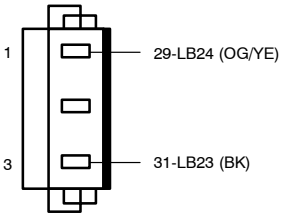


F03182

E31
Vanity mirror lamp, RH side

C477 (OG)

14A005 4–door model/5–door model

14335 wagon




F02009

E57
Luggage compartment lamp

E87
Cargo space lamp

C478

14K024

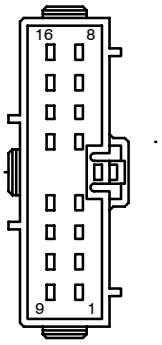


F16040

(1) 64-LE45 (BU)
(2) 15S-LD16 (GN/RD)
(3) 15S-LD10 (GN/OG)
(4) 15S-LE1 (GN/YE)
15S-LE55 (GN/OG)
(5)
(6) 15S-LE19 (GN/BU)
15S-LE10 (GN/OG) +
15S-LE19 (GN/BU)
(7) 15-LD10 (GN/OG)
(8) 15-LE10 (GN/OG) +
15-LE21 (GN/BK)
15-LE10 (GN/OG) +
15-LE21A (GN/BK)
(9) 64S-LH1 (BU/RD)
(10) 31-LE29 (BK)
(11) 30-LE21 (RD) +
30S-LF14 (RD/OG)
30-LE21 (RD)
30-LE21 (RD) +
30-LF14 (RD)
30-LE21A (RD)
(12) 30S-LF14 (RD/OG)
30-LF14 (RD)
(13) 30S-LF2 (RD/BU)
(14)
(15) 15S-LE6 (GN/YE)
15S-LE6 (GN/YE) +
15S-LE6A (GN/YE)
(16) 30S-LF12 (RD/GN)

N113
Main light switch

C479

14K024

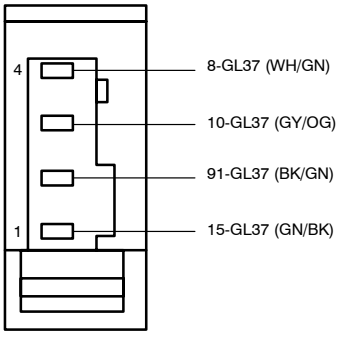


F04198

A102
Passive anti–theft system transceiver module

C480 (BK)

14K024

14K006




F01015

N63
Parking brake switch

C481 (BK)

14K024

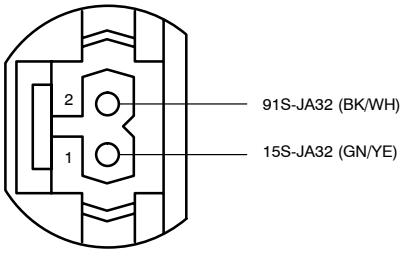


F02075

A43
Passenger air bag unit

C482 (BN)

F02100


14K024

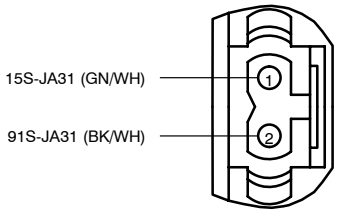

A43
Passenger air bag unit

C487

14K024

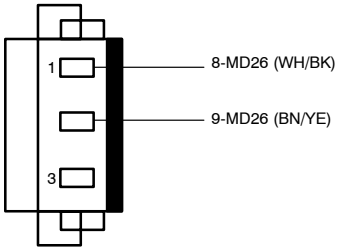


F03182

N214
Radio remote control switch

C490

14K024

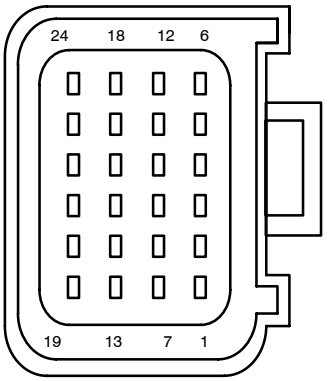


F24017

(1)	15S-JA8 (GN/RD)	(9)		(17)	91S-JA14A (BK/GN)
(2)	91S-JA8 (BK/OG)	(10)		(18)	
(3)	15S-JA32 (GN/YE)	(11)	8-EE7 (WH/RD)	(19)	91S-JA14 (BK/GN)
(4)	91S-JA32 (BK/WH)	(12)	15-JA10 (GN/OG)	(20)	
(5)	15S-JA48 (GN/BK)	(13)	15S-JA31 (GN/WH)	(21)	
(6)	91S-JA48 (BK/GN)	(14)	91S-JA31 (BK/WH)	(22)	91S-GE49 (BK/BU)
(7)		(15)		(23)	
(8)		(16)	91-JA10 (BK/RD)	(24)	

A208
Restraints Control Module (RCM)

C491

14A005

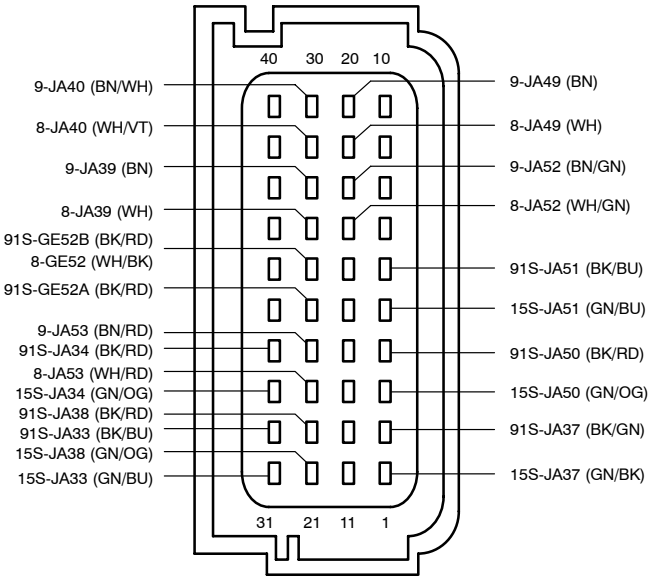


F40005

A208
Restraints Control Module (RCM)

C493

14A005

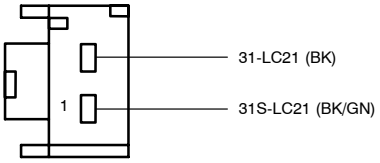


F02023

N85
Door ajar switch, RH front

C494

14K024

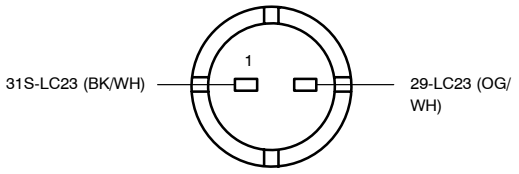


F02019

E62
Footwell lamp, RH front

C495

14A005

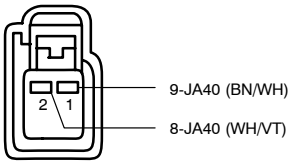


F02221

B239
Side air bag sensor, passenger

C496

14K733


F02152

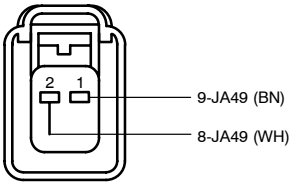

B177
Crash sensor

C497

14A005

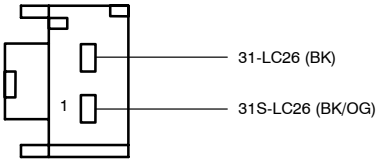


F02023

N87
Door ajar switch, RH rear

C499

14335

F04234

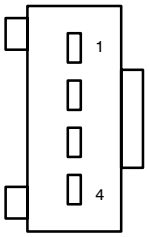


(1) 9-GL10 (BN)
(2)
(3) 31-GL26 (BK)
(4) 29S-GL10 (OG/YE)

B102
Anti–theft interior scan sensor, front

C500 (GY)

14K024

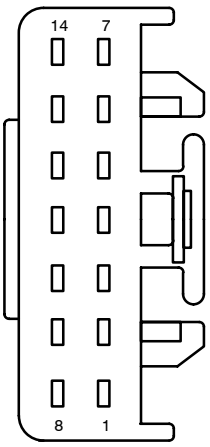


F14023

(1)	29-HA6 (OG/YE)	(8)	
(2)	15S-HB31 (GN/RD)	(9)	15-GG14 (GN/RD)
(3)	31S-LF21 (BK/GN)	(10)	15S-KA19 (GN/OG)
(4)	30S-LF12 (RD/GN)	(11)	29-LC11 (OG/WH) + 29-LC23 (OG/WH)
(5)	75-MD15 (YE/GN) 75-FA43 (YE/VT)	(12)	
(6)	75-GG14 (YE/BU)	(13)	15S-LE12 (GN/YE)
(7)	15-LE21 (GN/BK) + 15-LE19 (GN/BU) 15-LE21 (GN/BK)	(14)	15-HC6 (GN/YE) + 15-HC9 (GN/BK) 15-HC25 (GN/RD)

P91
Central Junction
Box (CJB)

C501 (GN)

14K024

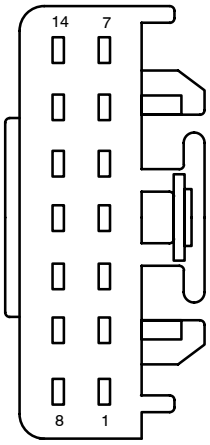


F14027

(1)	15S-LE19 (GN/BU) 15S-LE19B (GN/BU)	(7)	15-LD10 (GN/OG)
(2)		(8)	15S-LE1 (GN/YE)
(3)	30S-LF2 (RD/BU) 30S-LF2A (RD/BU)	(9)	
(4)	15S-LE6 (GN/YE) 15S-KA22 (GN/BU)	(10)	15S-FA48 (GN/BK) 15-MD15 (GN/BK) 15-FA48 (GN/BK) + 15-HC14 (GN/YE)
(5)	29-FA43 (OG/WH) 29-HC14 (OG/YE) + 29-FA43 (OG/WH)	(11)	31S-KA29 (BK/YE)
(6)	29-RA1 (OG)	(12)	31S-KA14 (BK/GN)
		(13)	32-KA19 (WH/BK)
		(14)	29-MD15 (OG/BK)

P91
Central Junction
Box (CJB)

C502 (GY)

14K024

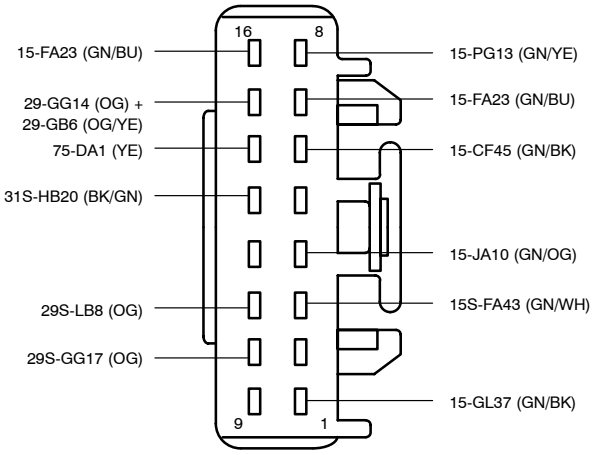


F16077

P91
Central Junction
Box (CJB)

C503 (GY)

14K024

F02032

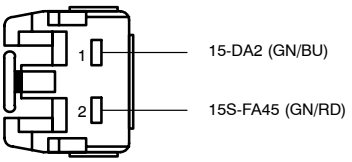


P91
Central Junction
Box (CJB)

C504 (GY)

14K733


F04168

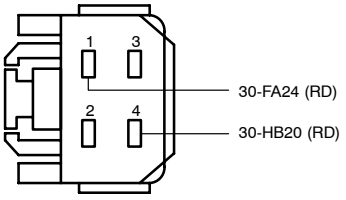

P91
Central Junction
Box (CJB)

C505 (GY)

14K733

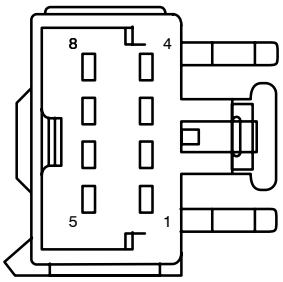

F08155


(1)
(2) 32-KA39 (WH/BK)
(3) 32-KA9 (WH/BU)
32-KA9A (WH/BU)
(4) 15-KA9 (GN/RD)
15-KA9A (GN/RD)
(5) 15-LG28 (GN/WH)
(6) 15S-CF58 (GN/OG) +
15S-RE13 (GN/RD)
15S-CF58 (GN/OG) +
15S-RE13A (GN/RD)
(7) 15S–LG23 (GN/WH)
(8)

P91
Central Junction
Box (CJB)

C506 (GN)

14A005

F16029

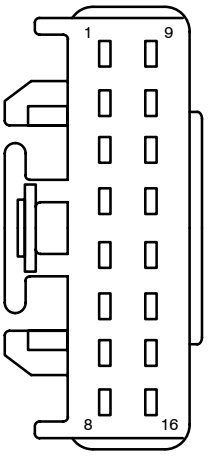


(1) 15S-HB35 (GN/BK) +
15S-HB36 (GN/OG)
(2) 15S-LG14 (GN/RD)
(3) 15S-LG6A (GN/YE)
15S-LG21 (GN/BK)
(4) 15S-LG6 (GN/YE)
15S-TA33 (GN/WH) +
15S-LG6 (GN/YE)
(5) 31-BB7 (BK)
(6) 29-LB1 (OG/BU) +
29-LB1A (OG/BU)
(7) 29S-GM12 (OG/BK) +
29S-LF20 (OG)
(8) 32-KA28 (WH/RD)
(9)
(10) 29-MD1 (OG/YE)
(11) 29-AD12 (OG/BK)
(12) 29-AD25 (OG)
(13)
(14) 29-LB26 (OG/BU)
(15)
(16) 29-KA28 (OG/BU)

P91
Central Junction
Box (CJB)

C507

14K733

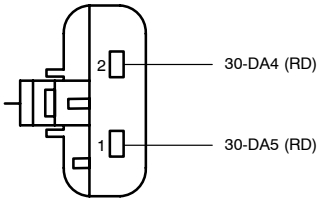


F02016

P91
Central Junction
Box (CJB)

C508 (GY)

14A005

F16029

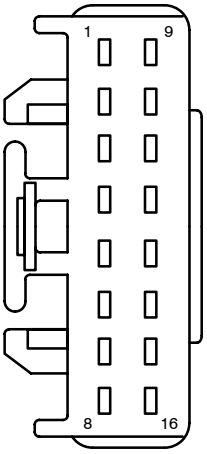


(1)
(2) 29-AG12 (OG/BK)
(3)
(4) 29S-LF11 (OG/WH)
(5) 29-HA29 (OG/BK)
(6) 29-AJ6 (OG/YE)
(7) 29-AJ13 (OG/BU)
(8)
(9) 15-TA21 (GN/BK)
15-TA22 (GN/BK)
15-TA21 (GN/BK) +
15-HC26 (GN/OG)
15-TA22 (GN/BK) +
15-HC26 (GN/OG)
(10) 15-JA52 (GN/BK)
15-TA21 (GN/BK)
(11) 29A-AJ17 (OG/WH)
(12) 29-AJ23 (OG/WH)
(13) 15-AG12 (GN/BK)
(14) 15-AJ6 (GN/YE) +
15-AJ13 (GN/BU)
15-AJ6 (GN/YE)
(15) 15-AJ17 (GN/WH) +
15-AJ23 (GN/WH)
15-AJ17 (GN/WH)
(16) 29S-LF21 (OG/BK)

P91
Central Junction
Box (CJB)

C509 (BU)

14K733

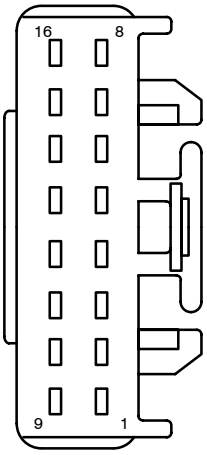


F16029

(1) 15-BB7 (GN/BU) +
15-RD6 (GN/OG)
15-DA2 (GN/BU)
15-DA2B (GN/BU)
15-BB7 (GN/BU)
(2)
(3)
(4)
(5)
(6) 29S-LF7 (OG/BU)
(7) 29S-LF16 (OG/GN)
(8) 15S-KA22 (GN/BU) +
15S-LE19 (GN/BU)
15S-LE19 (GN/BU)
(9) 15-LG23 (GN/WH) +
15-LE2 (GN/BU)
15-LG23 (GN/WH)
15-LE2 (GN/BU)
(10) 15S-LE23 (GN/WH)
(11) 15-CF6A (GN/YE)
(12) 15S-LE22 (GN/OG)
(13) 15S-HB13 (GN/BU) +
15S-HB26 (GN/RD)
(14) 15-PG12 (GN/WH)
15-RH23 (GN/RD) +
15-RH25 (GN/BK)
(15) 15-FA17 (GN/OG)
15-FA17 (GN/OG) +
15-HA20 (GN/WH)
(16) 15S-LE15 (GN/BK)

P91
Central Junction Box (CJB)

C510 (GY)

14A005

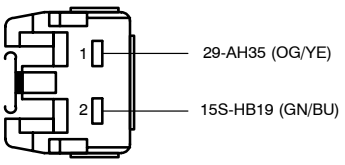


F02032

P91
Central Junction
Box (CJB)

C511

14K024

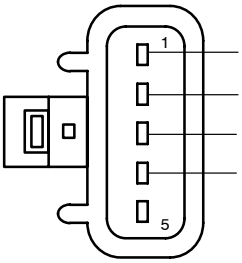


31-CF67 (BK)
5-EC12 (BU/RD)
4-EC12 (GY/RD)
15-CF67 (GN/BU)

B139
Yaw velocity sensor

F05113

C512

14K024

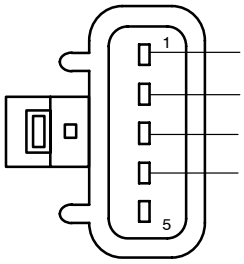


31-CE8 (BK)
15-CE8 (GN/RD)
4-EC11 (GY/OG)
5-EC11 (BU/BK)

B36
Steering position sensor

F05113

C513

F06274

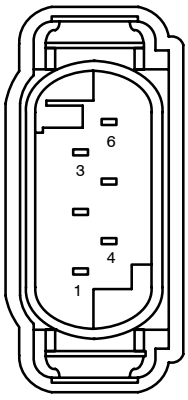


(1) 9-CF67 (BN/RD)
(2) 8-XL7 (WH/GN)
(3) 15-CF67 (GN/BU)
(4) 8-CF67 (WH/RD)
(5) 8-XL6 (WH/BU)
(6) 31-CF67 (BK)

B139
Yaw velocity sensor

C514

14489
14K024

F07084

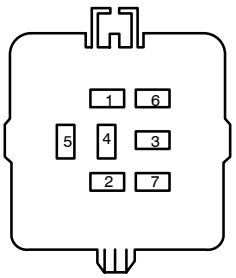

(1) 31-LE6 (BK)
(2) 15S-LE1 (GN/YE)
(3) 15S-LE6A (GN/YE)
(4) 15S-KA22 (GN/BU)
(5) 15-KA22 (GN/BU)
(6)
(7)


K5
Daytime Running Lamps (DRL) relay

C517

14K024

F08266

10E925

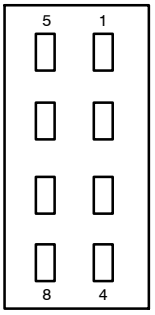

(1) 8-MD18 (WH)
(2) 8-MD17 (WH/RD)
(3) 8-MD10 (WH/BK)
(4) 8-MD11 (WH/VT)
(5) 10-MD18 (GY)
(6) 10-MD17 (GY/RD)
(7) 10-MD10 (GY/BK)
(8) 10-MD11 (GY/WH)

A11
Radio


A157
Audio/navigation system control unit

C518

14K024

10E925

F08266

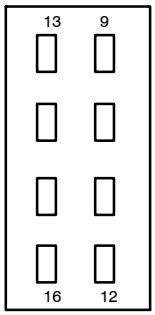

(9) 4-EC10A (GY)
4-EC2A (GY/RD)

(10) 5-EC10A (BU)
5-EC2A (BU/RD)

(11) 91-MD34 (BK/YE)

(12) 91-MD15A (BK/GN)

(13) 31S-GL15 (BK/OG)

(14) 64S-LK34 (BU/BK)
64S-LK34A (BU/BK)

(15) 29-MD15 (OG/BK)
29-MD15A (OG/BK)

(16) 75-MD15 (YE/GN)
75-MD15A (YE/GN)

A11
Radio


A157
Audio/navigation system control unit

C519

14K024

10E925

F12096

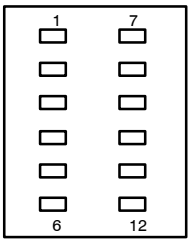

(1) 1-MD11 (WH/VT)

(2) 1-MD18 (WH)

(3) 1-GK18 (WH/BU)

(4)

(5) 1-MD35 (WH/BU)

(6) 3-MD15 (BN/GN)
31-MD15 (BK)

(7) 2-MD11 (GY/WH)

(8) 2-MD18 (GY)

(9) 2-GK18 (GY/VT)

(10)

(11) 1-MD36 (WH/GN)

(12)

A11
Radio


A157
Audio/navigation system control unit

C520

14K024

10E925

F12096

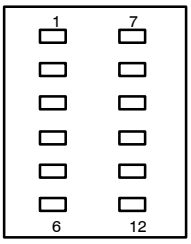

(1) 8-MC12 (WH)

(2) 29S-MD16 (OG/GN)

(3) 1-MD49 (WH/GN)

(4) 1-MD50 (WH/BK)

(5) 10-MC12 (GY)

(6) 8-MD26 (WH/BK)

(7) 9-MC12 (BN)

(8) 9-MD26 (BN/YE)

(9) 2-MD49 (GY/OG)

(10) 2-MD50 (GY/BK)

(11) 15S-GK9 (GN/WH)


(12) 8-MD24 (WH/GN)

A11
Radio

A157
Audio/navigation system control unit

C522

14335

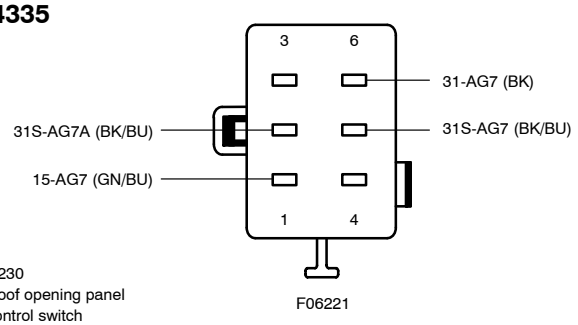


N230
Roof opening panel control switch

C523

13A612

F03030

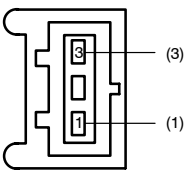


(1) 15S-LG23 (GN/WH)
15S-PG7 (GN/BU) +
15S-LG23 (GN/WH)
15S-PG17 (GN/BU) +
15S-LG23 (GN/WH)

(3) 15-LG23 (GN/WH)
15-PG6 (GN/YE)+
15-LG23 (GN/WH)

N15
Stop lamp switch

C524

14K024

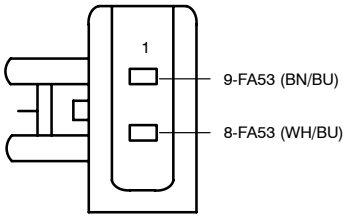


F02013

B72
Sunload sensor

C525

14335

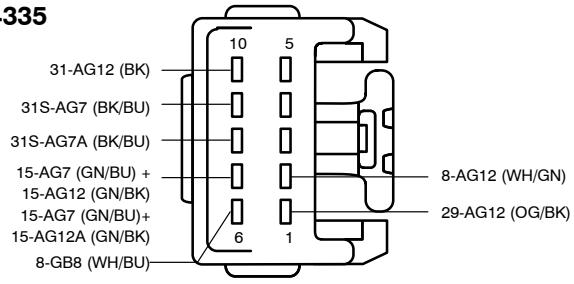


F10091

A26
Roof opening panel module

C528

14335

F03302




B302
Autolamps/rain sensor

B303
Rain sensor

(1) 15-KA41 (GN/BK)
(2) 91-KA41 (BK/GN)
(3) 8-KA41 (WH/GN)

C529

14K024

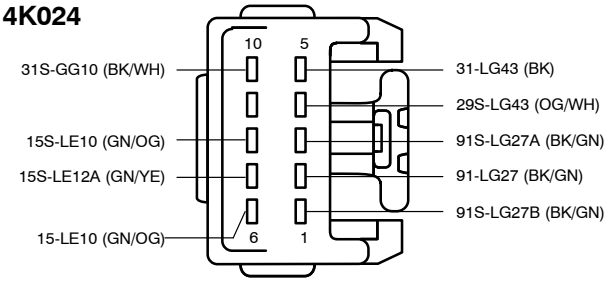


F10091

N90
Turn signal switch

C530 (GY)

14K024

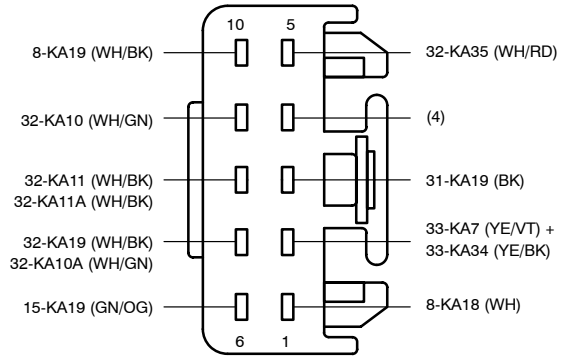

F10042


N104
Wiper/washer switch

(4) 32-KA34 (WH/BK)
32-KA6 (WH/BK) +
32-KA34 (WH/BK)

C532

14K024

F06065

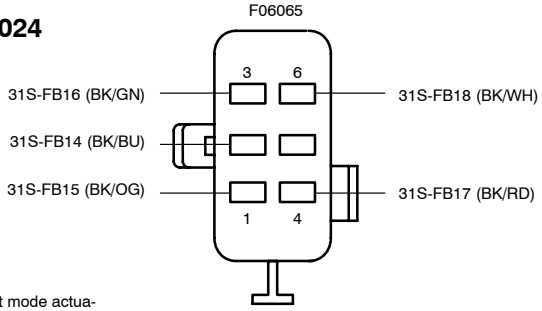


M210
Defrost mode actuator

C533

14K024

F06065

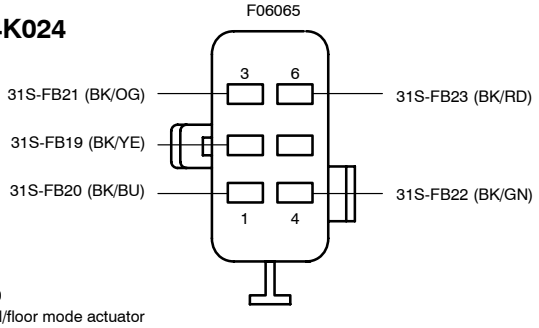


M250
Panel/floor mode actuator

C534

14K024


F06065

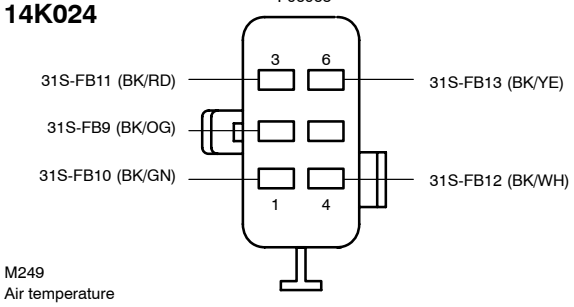

M249
Air temperature mode actuator

C535

14K024

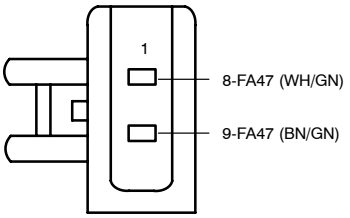


F02013

B246
Discharge temperature sensor, floor

C536

14K024

F14060

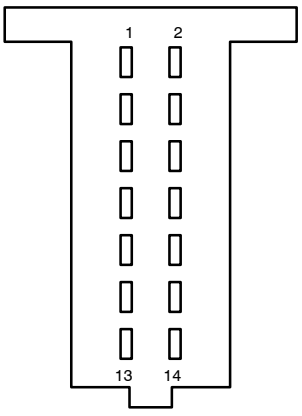


(1) 8-KA41 (WH/GN)
(2) 15S-LE19A (GN/BU)
(3) 15S-XL3 (GN/BU)
15S-LE55 (GN/OG)
(4) 15-LE21B (GN/BK)
(5) 31-KA41 (BK)
(6) 15S-LF2 (GN/BU)
(7) 8-KA18 (WH)
(8) 30-LE21B (RD)
(9) 33-KA34B (YE/BK)
(10) 8-KA19 (WH/BK)
(11) 32-KA11B (WH/BK)
(12) 15-KA9B (GN/RD)
(13) 32-KA10A (WH/GN)
(14) 32-KA9B (WH/BU)

A365
Autolamps/rain sensor module

A217
Rain sensor module

C537

14K024

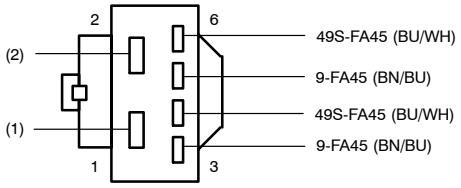


F06217

A97
Blower motor control module

(1) 31-FA45 (BK)
15S-FA45 (GN/RD)
(2) 31-FA45 (BK)
15S-FA45 (GN/RD)

C539a (BK)

14K024

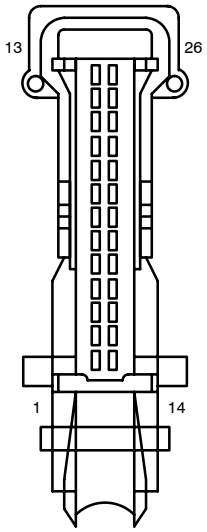

F26002

(1) 9-FA45 (BN/BU)
31S-FA30A (BK/WH)
33-FA76 (YE/BU)
(2) 32-FA76 (WH/BU)
(3) 49S-FA45 (BU/WH)
31S-FB10 (BK/GN)
(4) 33-FA76 (YE/BU)
31S-FB11 (BK/RD)
(5) 32-FA76 (WH/BU)
31S-FB20 (BK/BU)
(6) 31S-FB15 (BK/OG)
31S-FB21 (BK/OG)
(7) 31S-FB16 (BK/GN)
31S-FB15 (BK/OG)
(8) 31S-FB20 (BK/BU)
31S-FB16 (BK/GN)
(9) 31S-FB21 (BK/OG)
(10) 31S-FB10 (BK/GN)
(11) 31S-FB11 (BK/RD)
29-FB43 (OG/WH)
(12) 31S-FB9 (BK/OG)
(13) 31S-FB14 (BK/BU)
(14)
(15) 8-FA47 (WH/GN)
(16) 9-FA48A (BN/GN)
9-FA47 (BN/GN)
31S-FB12 (BK/WH)
(17) 31S-FB13 (BK/YE)
(18) 31S-FB22 (BK/GN)
(19) 31S-FB23 (BK/RD)
(20) 31S-FB17 (BK/RD)
(21) 31S-FB18 (BK/WH)
(22) 31S-FB22 (BK/GN)
(23) 31S-FB23 (BK/RD)
(24) 31S-FB12 (BK/WH)
31-FA43 (BK)
(25) 31S-FB13 (BK/YE)
15S-FA43 (GN/WH)
(26) 31S-FB19 (BK/YE)


A300
Heater/A/C control module

A205
Electronic Automatic Temperature Control (EATC) module

C538

14K024

F04166

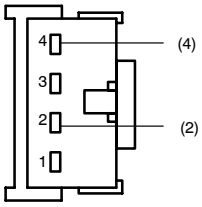


(2) 32-FA76 (WH/BU)
33-FA76 (YE/BU)

(4) 32-FA76 (WH/BU)
33-FA76 (YE/BU)

M92
Recirculation door motor

C539b (WH)

14K024

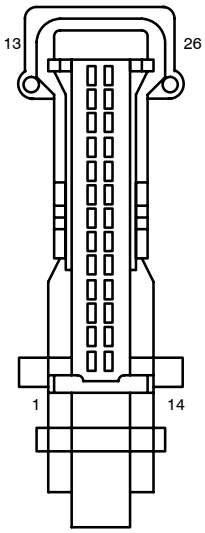

F26025


(1) 29-FA43 (OG/WH)
(2) 31S-FA48 (BK/GN)
(3) 64S-LH27 (BU/YE)
(4)
(5) 4-EC8 (GY/VT)
(6) 5-EC8 (BU/WH)
(7)
(8) 8-FA43 (WH/VT)
(9) 4-EC8 (GY/VT)
8-FA97 (WH/BU)
(10) 5-EC8 (BU/WH)
8-FA96 (WH/RD)
(11)
(12)
(13)
(14) 15S-FA43 (GN/WH)
75-FA43 (YE/VT)
(15) 31-FA43 (BK)
49S-FA45 (BU/WH)
(16) 8-FA48 (WH/GN)
(17)
(18) 8-FA53 (WH/BU)
4-EC10 (GY)
(19) 15S-FA17 (GN/OG)
15S-FA17A (GN/OG)
5-EC10 (BU)
(20) 64S-LH27 (BU/YE)
9-FA48A (BN/GN)
(21) 8-FA48 (WH/GN)
(22) 8-FA53 (WH/BU)
(23)
(24)
(25)
(26)

A300
Heater/A/C control module

A205
Electronic Automatic Temperature Control (EATC) module

C540

14A005

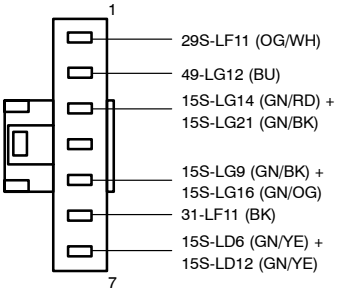


E9
Rear lamp assembly, LH side

F07065

C540a


14A005

F07067

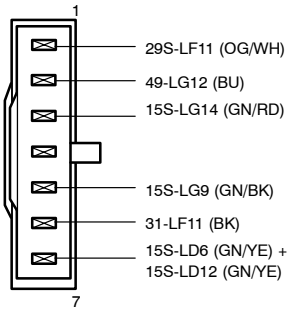

C540b


13A412

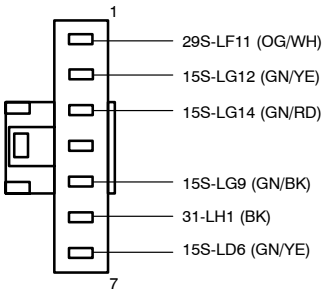

F07065

C541

14A005

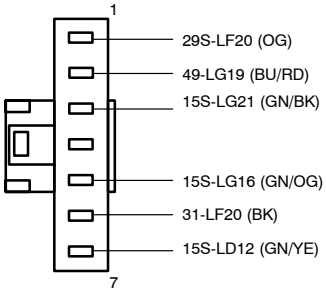


E10
Rear lamp assembly, RH side

F07065

C541a

14A005


F07067

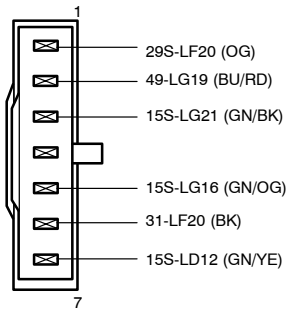

C544

14K024


F03079

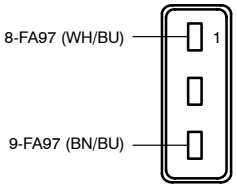

B246
Discharge temperature sensor, floor

C541b

13A412

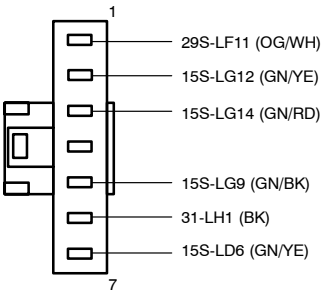

F07065

C550


(1)	29-MD16 (OG/GN)	(7)	8-MD8 (WH/BU)
(2)	9-MD8 (BN/BU)	(8)	9-MD8A (BN/BU)
(3)	7-MD8 (YE/BU)	(9)	8-MD50 (WH/BK)
(4)		(10)	8-MD49 (WH/GN)
(5)	8-MD8A (WH/BU)	(11)	91-MD8 (BK/OG)
(6)	29-MD16A (OG/GN)	(12)	91-MD16A (BK/RD)

A306
Multimedia control module

C542

14489

F06282

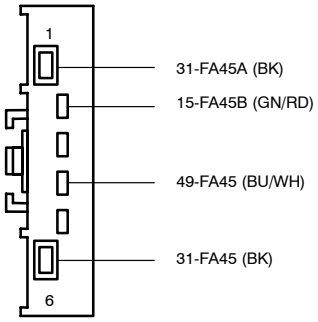

A97
Blower motor control module

C553


(1)	1-MD16A (BU)	(6)	6-MD16A (OG)
(2)	2-MD16A (GN)	(7)	7-MD16A (BN)
(3)	3-MD16A (BN/YE)	(8)	8-MD16A (YE)
(4)	4-MD16A (WH)	(9)	10-MD16A (BK)
(5)	5-MD16A (OG)	(10)	11-MD16A (RD)

A306
Multimedia control module

C554

14B067

F20042

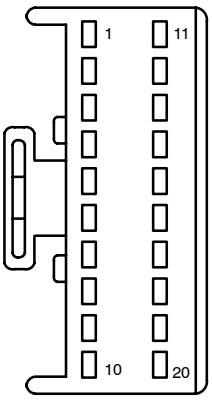

(1) 10-MD16 (GY/BK)
(2) 8-MD16 (WH/BK)
(3) 48-MD16 (Shield)
(4) 4-MD16 (GY/BK)
(5) 7-MD16 (YE/BK)
(6) 15-MD16 (GN/OG)
(7)
(8)
(9)
(10)
(11) 2-XL2 (GY/RD)
(12) 1-XL2 (WH/RD)
(13) 91-XL1 (BK/BU)
(14)
(15)
(16) 15-XL1 (GN/BU)
(17)
(18)
(19)
(20)


A307
Video display, LH side

A308
Video display, RH side

C555


14B067

F12058

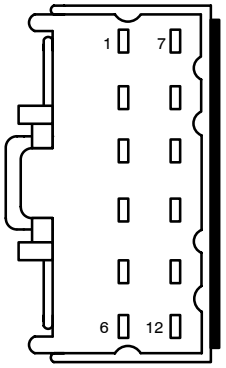

(1) 10-MD16 (GY/BK)
(2) 8-MD16 (WH/BK)
(3) 48-MD16 (Shield)
(4) 4-MD16 (GY/BK)
(5) 7-MD16 (YE/BK)
(6) 15-MD16 (GN/OG)
(7) 2-XL2 (GY/RD)
(8) 1-XL2 (WH/RD)
(9) 91-XL1 (BK/BU)
(10)
(11)
(12) 15-XL1 (GN/BU)


F12036

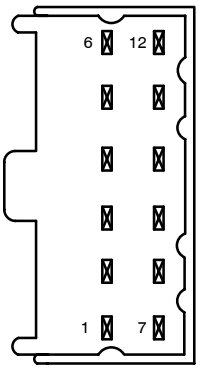

(1) 1-MD16 (BU)
(2) 2-MD16 (GN)
(3) 3-MD16 (BN/YE)
(4) 4-MD16 (WH)
(5) 5-MD16 (VT)
(6) 6-MD16 (OG)
(7) 7-MD16 (BN)
(8) 8-MD16 (YE)
(9) 10-MD16 (BK)
(10)
(11)
(12) 15-MD16 (RD)

C556 (GY)

F08087

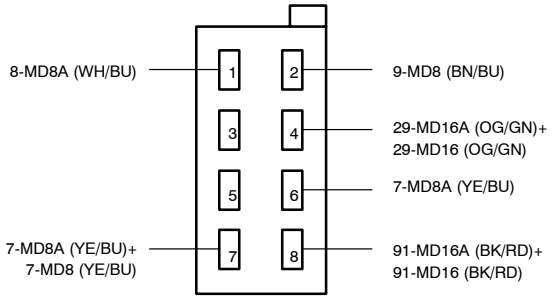


A433
DVD player

C557 (BK)

14B067


F20042

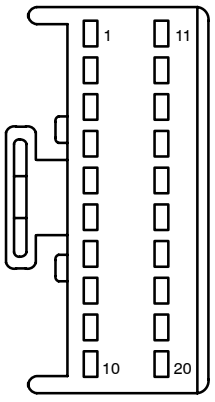

(1) 2-MD11 (GY/WH)
(2) 1-MD11 (WH/VT)
(3) 2-MD18 (GY)
(4) 1-MD18 (WH)
(5) 48-MD16A (Shield)
(6) 91-MD16A (BK/RD)
(7)
(8)
(9)
(10) 91-MD16 (BK/RD)
(11) 8-XL8 (WH/BK)
(12) 9-XL8 (BN/YE)
(13) 2-MD16 (GY/BK)
(14) 1-MD16 (WH/BK)
(15) 3-MD16 (BN/YE)
(16)
(17)
(18)
(19) 29S-MD16 (OG/GN)
(20) 29-MD16 (OG/GN)

C558 (BN)

F08086

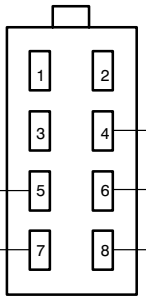

91-MD8 (BK/OG)

8-MD49 (WH/GN)

8-MD50 (WH/BK)

8-MD8B (WH/BU)


9-MD8A (BN/BU)

A433
DVD player

C575

14K024

F06262

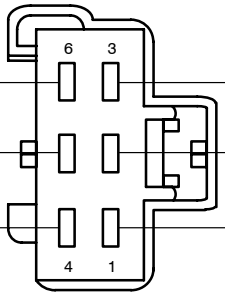

31S-AA89 (BK/BU)

31S-CF54 (BK/WH)

64S-LH30 (BU)

31-AA30 (BK)


15-CF45 (GN/BK)

31S-CF45 (BK/GN)

N389
ESP disable and tailgate/ decklid release switch

C597

14A005

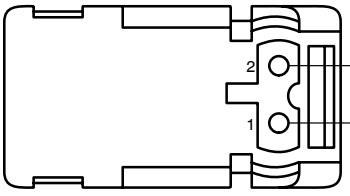

91S-JA50 (BK/RD)


15S-JA50 (GN/OG)

F02215

A326
Side head air bag module, driver

C598

14A005

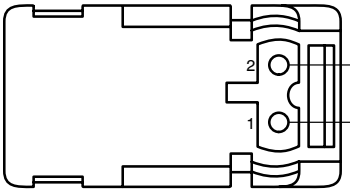

91S-JA51 (BK/BU)


15S-JA51 (GN/BU)

F02215

A327
Side head air bag module, passenger

C600

14A005

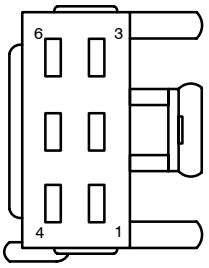

F06109

(1) 31-TA35 (BK)

(2) 31S-TA32 (BK/WH)

(3) 15S-TA33 (GN/WH)
15-TA22 (GN/RD)

(4) 64S-LK21 (BU/BK)
31-TA35 (BK)

(5) 15S-TA21 (GN/BK)


(6) 15-TA21 (GN/BK)

N93
Gearshift lever unit

C604

14B079

F20042

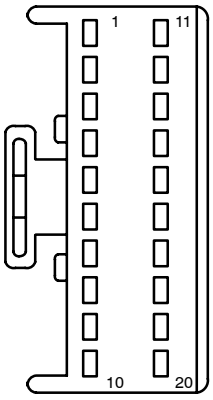


(1)	2-MD11 (GY/WH)	(11)	8-XL8 (WH/BK)
(2)	1-MD11 (WH/VT)	(12)	9-XL8 (BN/YE)
(3)		(13)	2-MD16 (GY/BK)
(4)	2-MD18 (GY)	(14)	1-MD16 (WH/BK)
(5)	1-MD18 (WH)	(15)	3-MD16 (BN/YE)
(6)		(16)	91-MD16 (BK/RD)
(7)		(17)	
(8)		(18)	
(9)		(19)	
(10)		(20)	

A141
Control assembly

C606

14A227

F20020

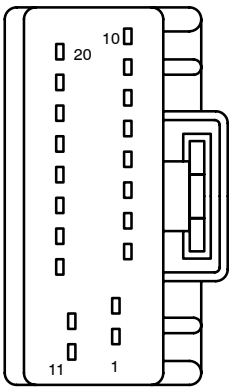


(1)	29-GK6 (OG)	(11)	91-GK6 (BK/OG)
(2)	75-GK6 (YE/BU)	(12)	91-GK6A (BK/OG)
(3)	64S-LK17 (BU/BK)	(13)	
(4)	75S-GK6 (YE/BU)	(14)	
(5)	4-EC3A (GY/RD)	(15)	5-EC3A (BU/RD)
(6)		(16)	
(7)		(17)	
(8)	8-GK21 (WH/BK)	(18)	8-GK22 (WH/VT)
(9)	8-GK24 (WH/RD)	(19)	8-GK23 (WH/BK)
(10)	8-GK25 (WH/GN)	(20)	8-GK26 (WH/BU)

A363
Touch screen

C605

14B079

F10091

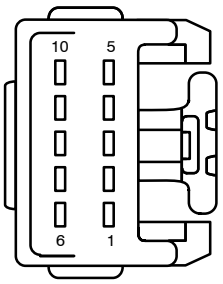


(1)	5-EC3A (BU/RD)	(6)	4-EC3A (GY/RD)
(2)	64S-LK34 (BU/BK)	(7)	
(3)	91-MD16 (BK/RD)	(8)	29-MD16 (OG/GN)
(4)	2-MD11 (GY/WH)	(9)	2-MD18 (GY)
(5)	1-MD11 (WH/VT)	(10)	1-MD18 (WH)

A369
Audio control module

C607

14A227

F24012

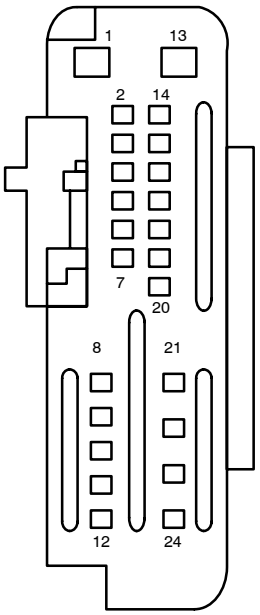


(1)	29-GK8 (OG/GN)	(13)	91-GK8 (BK/RD)
(2)	75S-GK6 (YE/BU)	(14)	
(3)	15S-GK9 (GN/WH)	(15)	
(4)		(16)	
(5)	4-EC3D (GY/RD)	(17)	5-EC3D (BU/RD)
(6)		(18)	
(7)		(19)	
(8)	8-GK24 (WH/RD)	(20)	
(9)	8-GK26 (WH/BU)	(21)	8-GK25 (WH/GN)
(10)	8-GK21 (WH/BK)	(22)	8-GK23 (WH/BK)
(11)	1-GK18 (WH/BU)	(23)	8-GK22A (WH/BU)
(12)	2-GK18 (GY/VT)	(24)	48-GK18 (BK/OG)

A182
Navigation system
main unit

C610

F54002

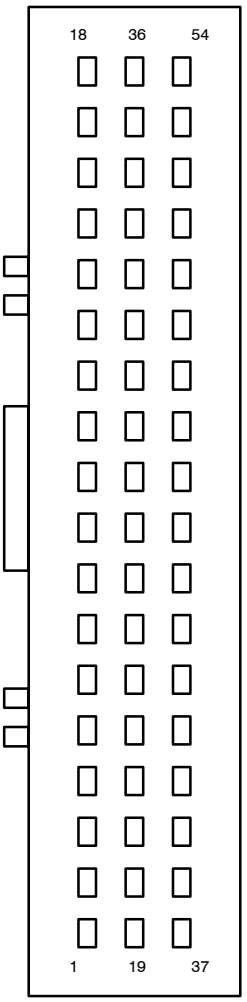


(1)	8-MC12 (WH)	(15)	5-EC2C (BU/RD)	(29)		(42)	10-MC19 (GY/OG)
(2)	9-MC12 (BN)	(16)		(30)		(43)	
(3)	8-MC8 (WH/RD)	(17)	29-MC12A (OG/YE)	(31)		(44)	
(4)	9-MC8 (BN/RD)	(18)	29-MC12 (OG/YE)	(32)		(45)	8-MC11 (WH/VT)
(5)		(19)		(33)	91-MC12A (BK/YE)	(46)	
(6)		(20)		(34)	91-MC12 (BK/YE)	(47)	4-MC16 (GY)
(7)		(21)		(35)		(48)	5-MC16 (BU)
(8)		(22)		(36)		(49)	4-MC15 (GY/OG)
(9)		(23)		(37)	1-MC13 (WH/RD)	(50)	5-MC19 (BU/BK)
(10)		(24)		(38)	2-MC13 (GY/RD)	(51)	9-MC19 (BN/GN)
(11)		(25)		(39)	1-MC14 (WH/BU)	(52)	29-MC11 (OG/WH)
(12)		(26)		(40)	2-MC14 (GY/VT)	(53)	31-MC11 (BK)
(13)		(27)		(41)	8-MC19 (WH/GN)	(54)	29-MC17 (OG/BU)
(14)	4-EC2C (GY/RD)	(28)					

A381
Bluetooth voice control module

C700

18C619

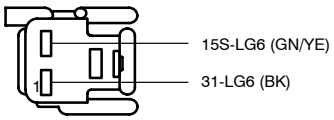


F02056

E70
High mounted stop lamp

C704

14240

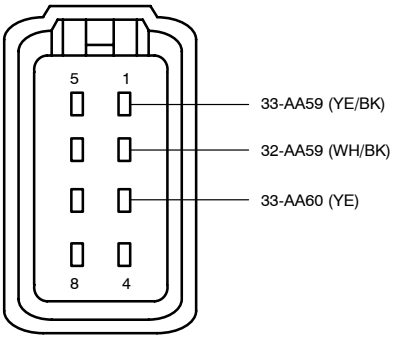


A276
Door lock unit, RH rear

F08083

C701

14A584

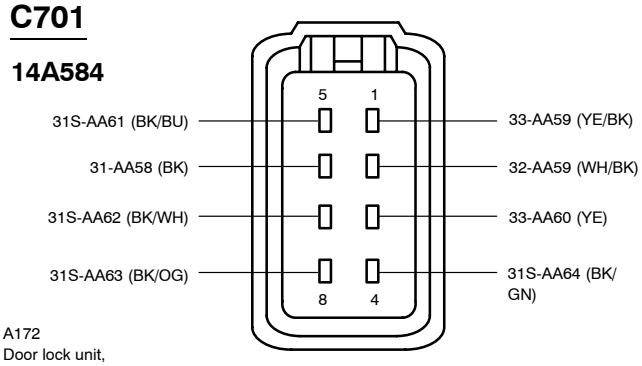


A172
Door lock unit, driver side front

F08083

C705 (GY)

14A584

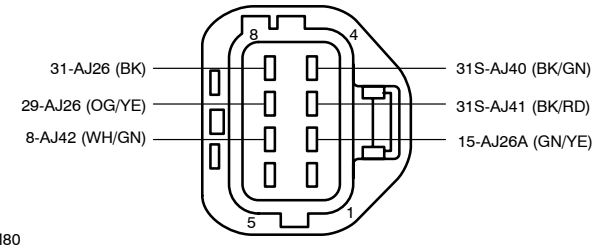


M80
Window regulator motor, driver side front

F08184

C702

14K138

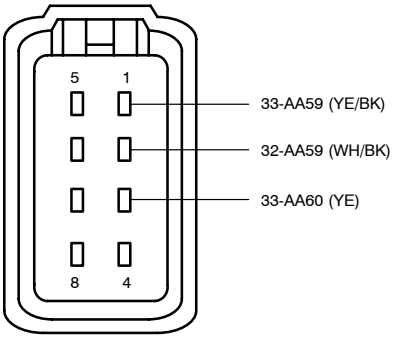


A173
Door lock unit, passenger side front

F08083

C706 (GY)

14K138

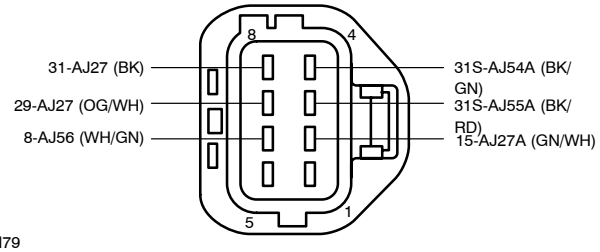


M79
Window regulator motor, passenger side front

F08184

C703

14240

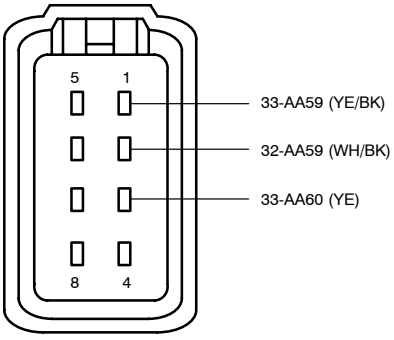


A275
Door lock unit, LH rear

F08083

C707 (GY)

14240

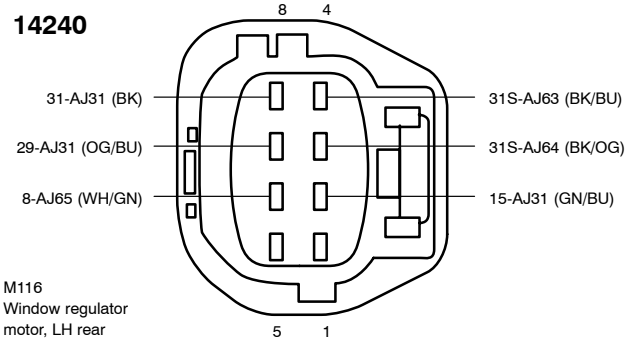


M116
Window regulator motor, LH rear

F08171

C708 (GY)


14240

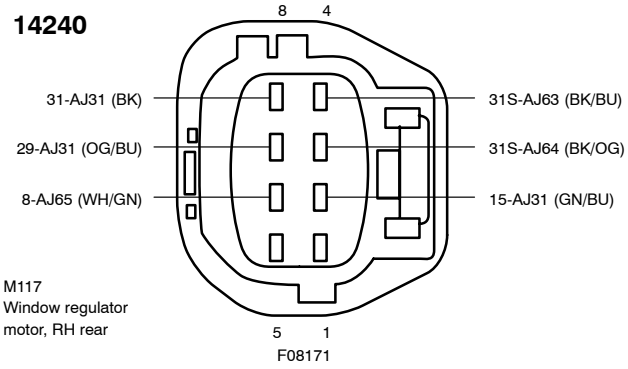

M117
Window regulator motor, RH rear

C709

14A584

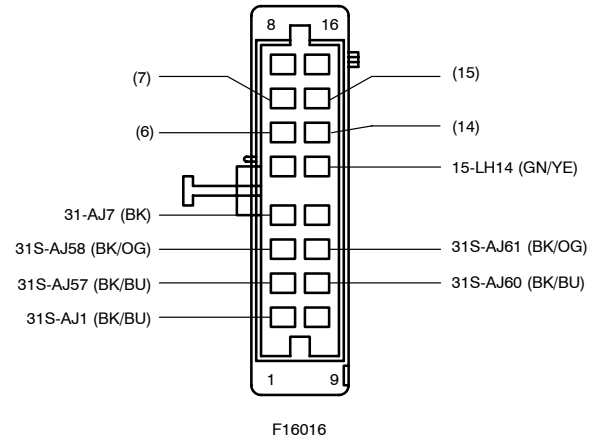

N300
Window control switch, driver (multiple)

(6) 31S-AJ40 (BK/GN)
31S-AJ54 (BK/GN)


(7) 31S-AJ41 (BK/RD)
31S-AJ55 (BK/RD)

(14) 31S-AJ40 (BK/GN)
31S-AJ54 (BK/GN)

(15) 31S-AJ41 (BK/RD)
31S-AJ55 (BK/RD)

C710


14K138

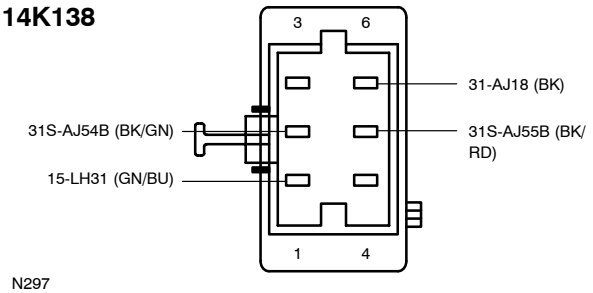

N297
Window control switch, passenger side front

C711


14240

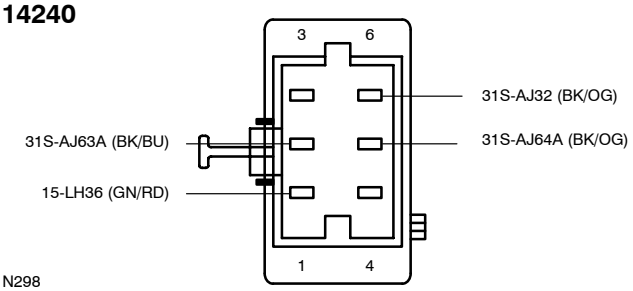

N298
Window control switch, LH rear

C712


14240

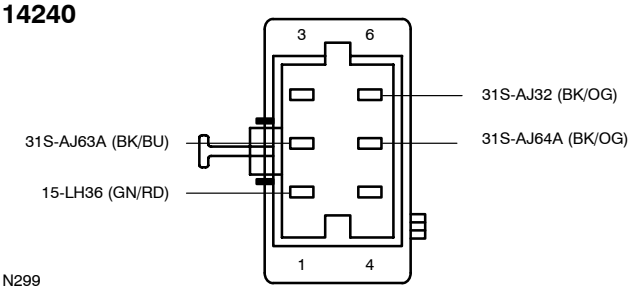

N299
Window control switch, RH rear

C720


14A584

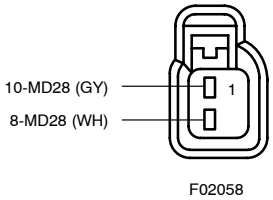

Y28
Left front speaker

C722


14240

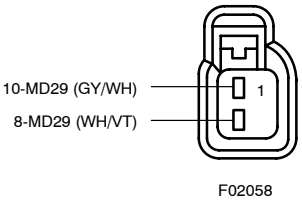

Y17
Left rear speaker

C723

14K138

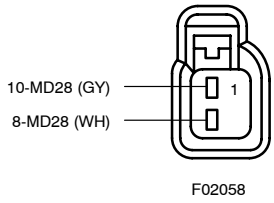


F02058

Y18
Right front speaker

C724

14240

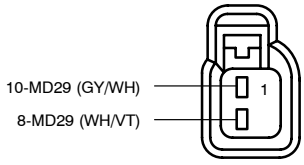


F02058

Y19
Right rear speaker

C733

14A584

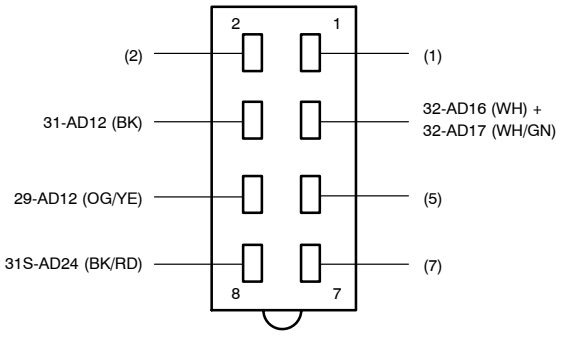

F08013


(1) 33-AD30 (YE/BK)
33-AD32 (YE/RD)
(2) 33-AD30 (YE/BK)
33-AD32 (YE/RD)
(5) 33-AD29 (YE/VT)
33-AD31 (YE/BU)
(7) 33-AD29 (YE/VT)
33-AD31 (YE/BU)

N70
Power mirror adjust
switch

C735a

18C619 all others

14A523 4–door model

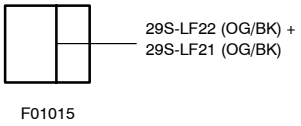


F01015

E35
Licence plate lamp,
RH side

C735b

18C619 all others

14A523 4–door model




F01015

E35
Licence plate lamp,
RH side

C736a

18C619 all others

14A523 4–door model




F01015

E34
Licence plate lamp, LH
side

C736b

18C619 all others

14A523 4–door model




F01015

E34
Licence plate lamp,
LH side

C740

18C619

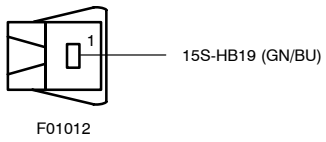


F01012

R19
Rear window heater

C741

18C620




F01012

R19
Rear window heater

C742

18C619


F02102

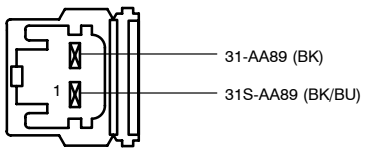

N356
Tailgate exterior release switch

C745 (GY)

18C619

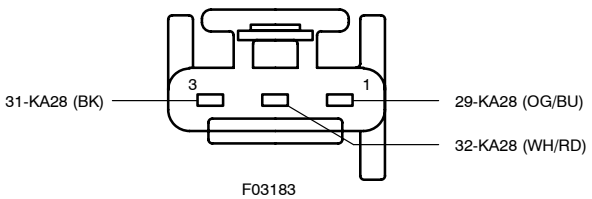


F03183

M9
Rear window wiper motor

C750

18C619 all others

14A523 4–door model

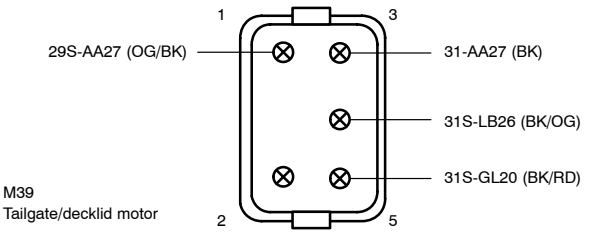


M39
Tailgate/decklid motor

F05115

C751

18C619 all others

14A523 4–door model

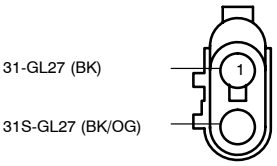


N98
Tailgate/decklid anti–theft inhibit switch

F02005

C753 (BN)

14A005

F07058

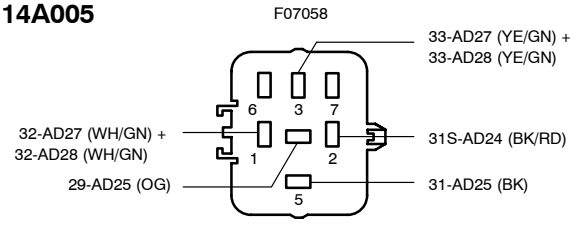


A148
Power mirror fold module

C755

14A584

F10096

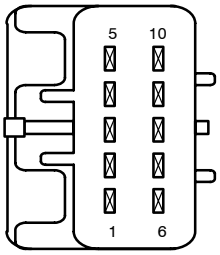


(1) 15S-HB35 (GN/BK)
(2) 32-AD16 (WH)
(3) 31-HB35 (BK)
(4) 33-AD32 (YE/RD)
33-AD30 (YE/BK)
(5) 33-AD31 (YE/BU)
33-AD29 (YE/VT)
(6) 32-AD26 (WH/GN)
(7) 33-AD26 (YE/GN)
(8)
(9) 29-LB1C (OG/BU)
(10) 31S-LC7D (BK/BU)

A355
Exterior mirror, driver side

C756

14K138

F10096

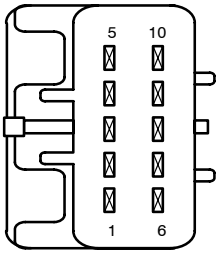


(1) 15S-HB36 (GN/OG)
(2) 32-AD17 (WH/GN)
(3) 31-HB36 (BK)
(4) 33-AD10 (YE/BK)
(5) 33-AD11 (YE/VT)
(6) 32-AD26 (WH/GN)
(7) 33-AD26 (YE/GN)
(8)
(9) 29-LB1B (OG/BU)
(10) 31S-LC7C (BK/BU)

A356
Exterior mirror, passenger side

C800

14406

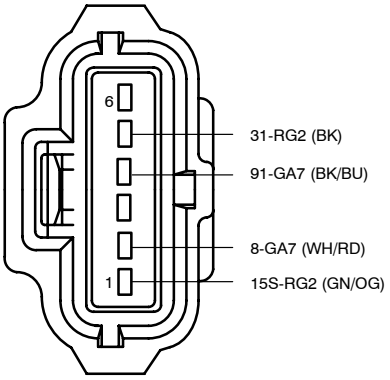


A31
Fuel tank unit

F06077

C805 (BK)

14A005

F03174

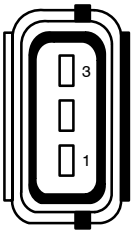


(1) 31-GL26 (BK)
(2) 49S-GL26A (BU/YE)
(3) 30-GL26 (RD)

A196
Battery backed sounder

C810

14A005




F01015

H5
Anti–theft alarm horn

C830

2B325

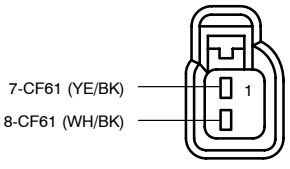


F02058

B17
Wheel speed sensor, LH side rear

C831

2B325

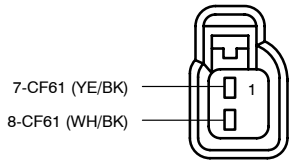


F02058

B16
Wheel speed sensor, RH side rear

C903

14K733

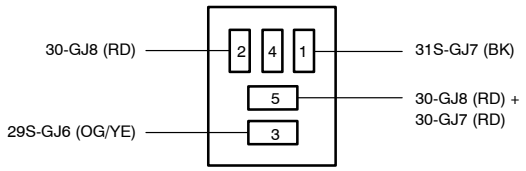


F05064

K33
Horn relay

C901

14K733

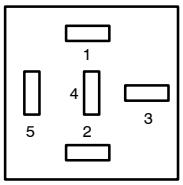


F05051

(1) 31-LE19 (BK)
(2) 15S-LE19 (GN/BU)
(3) 15S-LE16A (GN/OG)
15S-LE26A (GN/WH)
15S-LE23A (GN/WH)
(4)
(5) 30-LE19 (RD)
15-LE19 (GN/BU)

K243
Low beam relay

C904

14K733

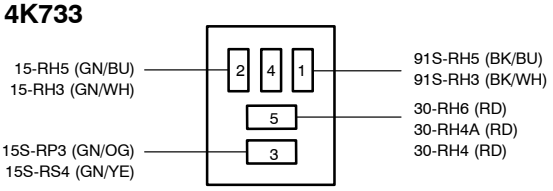

F05064


K4
Fuel pump relay

K380
Injector Driver Module (IDM) power relay

K341
Fuel lift pump relay

C905

12A522

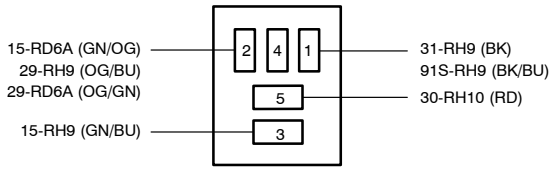


F05064

K163
PCM module relay

C902

14K733

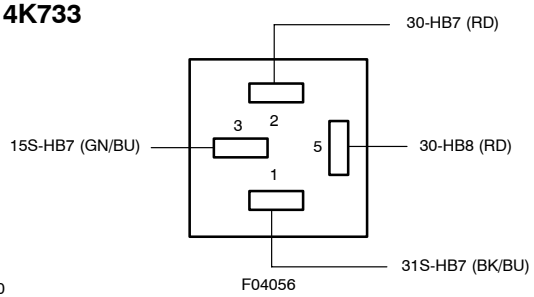


F04056

K40
Heated windshield timer relay

C906

12A522

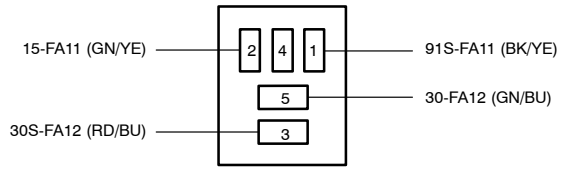


F05064

K32
A/C Wide Open Throttle (WOT) relay

C907


12A522

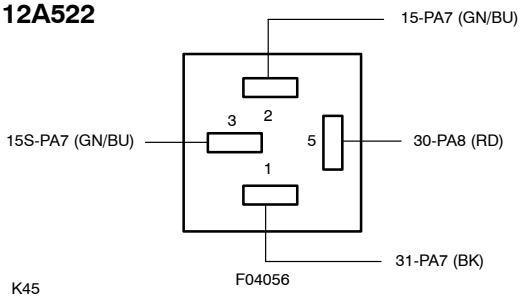

K45
Cooling fan relay

C908

12A522

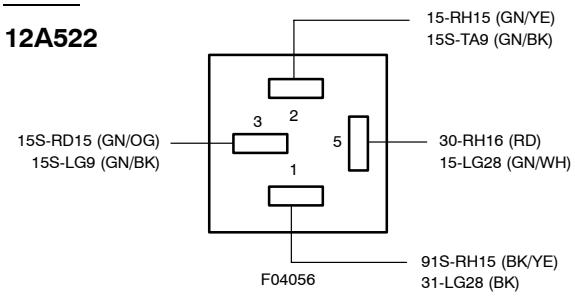


K70
Pre–glow relay Diesel

K273
Reversing lamps relay

C909

12A522

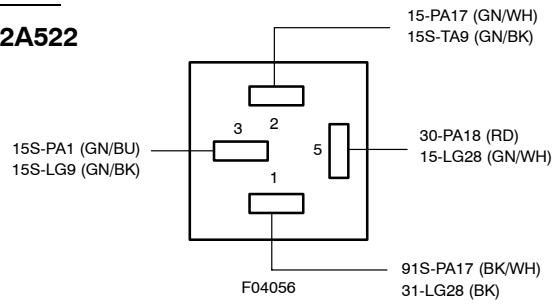


K46
High speed cooling fan relay

K273
Reversing lamps relay


C910

12A522

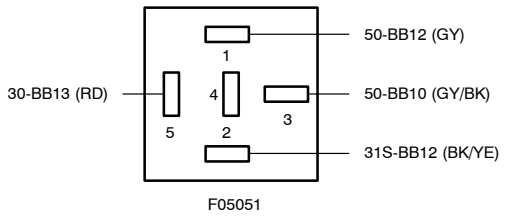


K22
Starter relay

C911

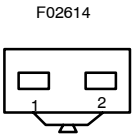


(1) 10-XL7 (GY/OG)
(2) 10-XL8 (GY/BK)

C915

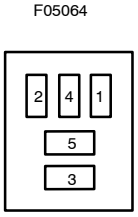


K244
High beam relay

C916

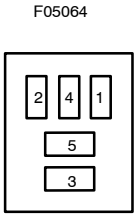


K64
Rear window wiper relay

C917

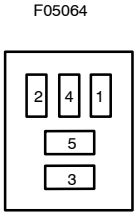

K162
Windshield wiper relay


C918

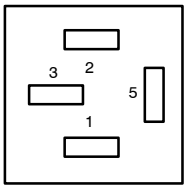

F04056

K41
Ignition relay


C919

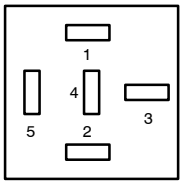

F05051

K1
Heated rear window relay

C920

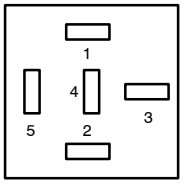


F05051

K14
Blower motor relay

C921


F05064

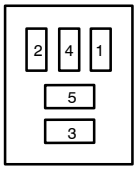

K115
Battery saver relay

C923


F06292

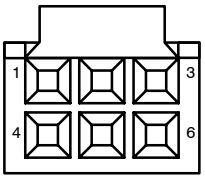

(1) (WH/YE)
(2) (GN)
(3) (BU)
(4) (WH)
(5) (YE/RD)
(6) (WH/BU)

C924


F03320

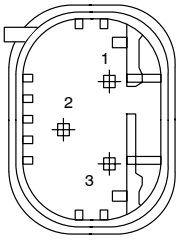

(1) (WH)
(2) (BU/WH)
(3) (YE/RD)

C925


F03320

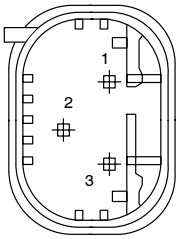

(1) (BU)
(2) (BU/WH)
(3) (YE/RD)

C926


F03320

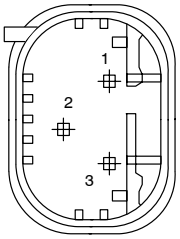

(1) (GN)
(2) (BU/WH)
(3) (YE/RD)

C927

F03320

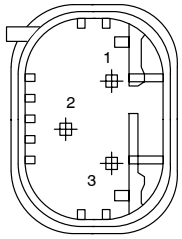


(1) (WH)
(2) (BU/WH)
(3) (YE/RD)

C1000


14K733

F06028

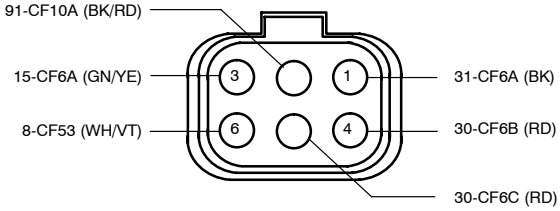

14K733


F06029

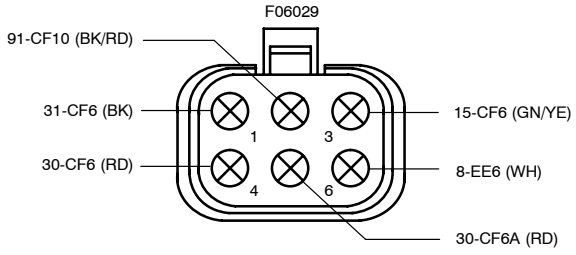

C1006

12A522

F06110

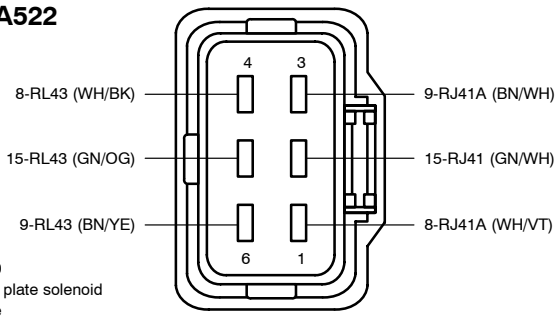


Y160
Swirl plate solenoid valve

C1007

12A522

F03064

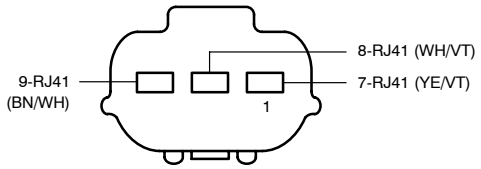


B197
Swirl plate position sensor

C1008

12A522

F02562

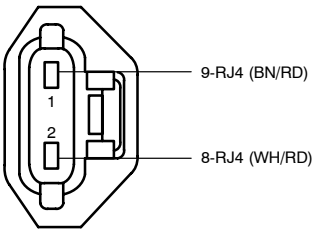


B43
Crankshaft position sensor

C1009

12A522

F02566

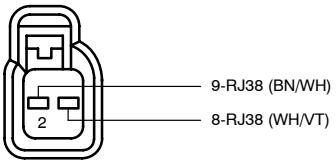


B187
Pre–catalyst exhaust gas temperature sensor

C1010

12A522

F04130

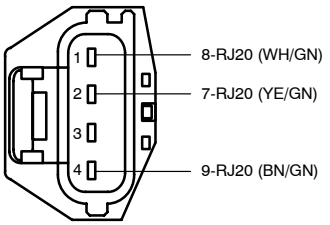


B2
Manifold Absolute Pressure (MAP) sensor

C1011 (GY)

9H589

F02244

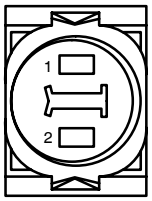


Y108
Fuel injector 1

(1) 15S-RL10 (GN/WH)
(2) 91S-RL10 (BK/WH)

C1012 (GY)

9H589

F02244

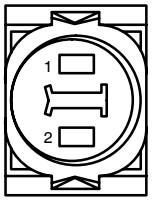


Y109
Fuel injector 2

(1) 15S-RL11 (GN/YE)
(2) 91S-RL11 (BK/YE)

C1013 (GY)

9H589

F02244

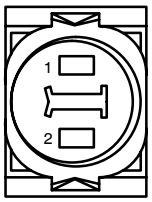


Y110
Fuel injector 3

(1) 15S-RL12 (GN/BU)
(2) 91S-RL12 (BK/BU)

C1014 (GY)

9H589

F02244

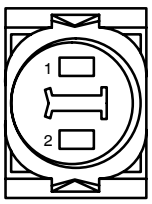


Y111
Fuel injector 4

(1) 15S-RL13 (GN/RD)
(2) 91S-RL13 (BK/OG)

C1015

12A522

F03304

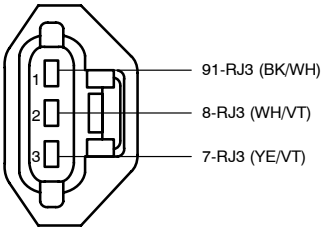


B41
Camshaft position sensor

C1018

14K006

F06262

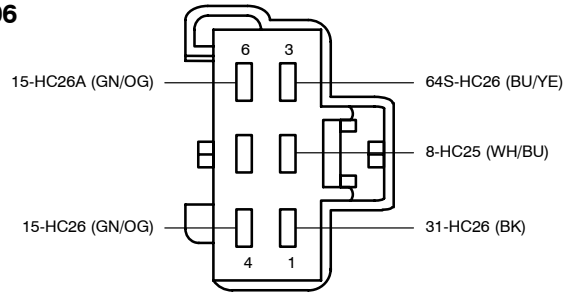


N387
Heated rear seats switch

C1019

14K024

F06194

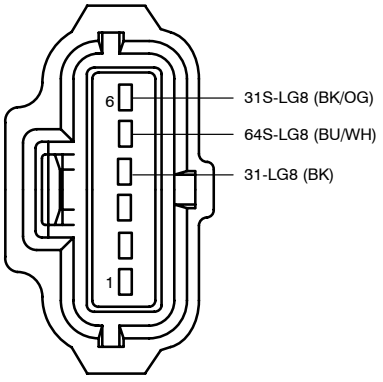


N49
Hazard flasher switch

C1020

14K024

F03079

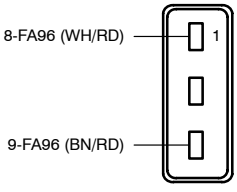


B247
Discharge temperature sensor, panel

C1021

14K024

F06262

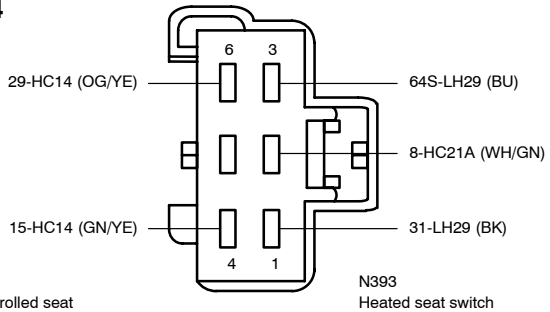


N668
Climate controlled seat switch

N393
Heated seat switch

C1022

14K024

F04121

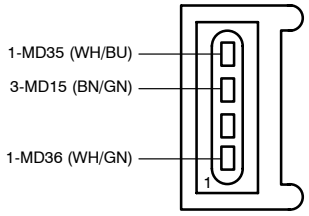


D81
Auxiliary IN

C1024

14A005

F10091

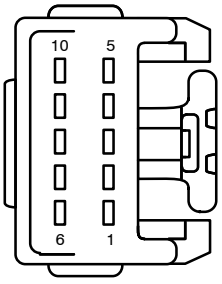


(1)	15S-TA33 (GN/WH)	(6)	91S-TA68 (BK/RD)
(2)	64S-LK21 (BU/BK)	(7)	91S-TA32 (BK/WH)
(3)	15-TA22 (GN/RD)	(8)	91S-TA68A (BK/RD)
(4)	91-TA35 (BK/GN)	(9)	91S-TA67A (BK/WH)
(5)	91S-TA67 (BK/WH)	(10)	

N93
Gearshift lever unit

C1025

14K024

F06194

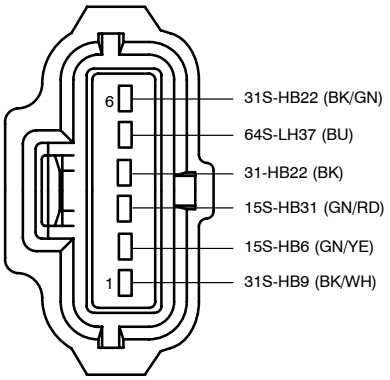

N263
Heated windshield/ heated rear window switch

C1026


(1)	2-MD11 (BU)	(7)	8-XL8 (VT)
(2)	1-MD11 (OG)	(8)	9-XL8 (GN)
(3)		(9)	2-MD16 (BN)
(4)	2-MD18 (RD)	(10)	1-MD16 (YE)
(5)	1-MD18 (WH)	(11)	3-MD16 (BK)
(6)		(12)	3-MD16C (BK)

A306
Multimedia control module

C1029

14K733

F07058

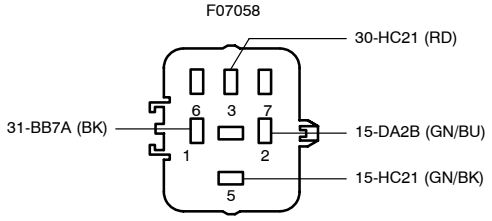


K258
Ignition relay 2

C1031

12A522

F02564

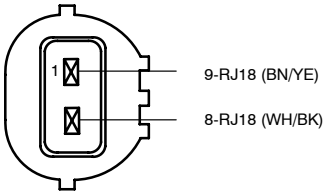


B105
Knock sensor 1

C1032

9H589

F02132

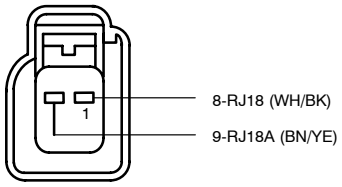


B45
Knock sensor


C1033

12A522

F02017

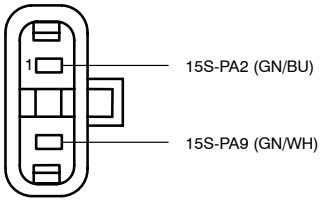

F02021

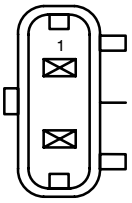


R27
Cooling fan resistor

C1034

9H589

F02198

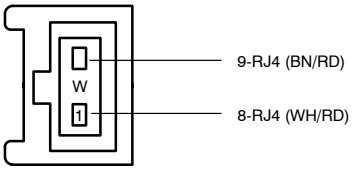


B43
Crankshaft position sensor

C1035


9H589

F02198

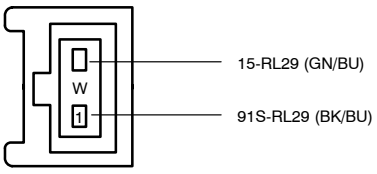

C1036 (BK)

F20042

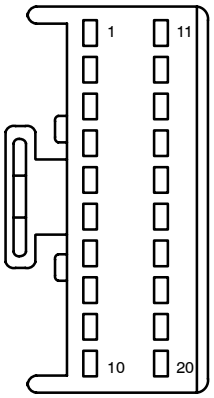


(1)	1-MD16A (BU)	(11)	7-MD16A (BN)
(2)	2-MD16A (GN)	(12)	8-MD16A (YE)
(3)	3-MD16A (BN/YE)	(13)	10-MD16A (BK)
(4)	4-MD16A (WH)	(14)	
(5)	5-MD16A (VT)	(15)	
(6)	6-MD16A (OG)	(16)	15-MD16A (RD)
(7)		(17)	
(8)		(18)	
(9)		(19)	
(10)		(20)	

A307
Video display, LH side


A308
Video display, RH side

C1039



31-GN10A (BK)
31-GN10A (BK)+
31-GN10C (BK)

F01005




31-GN10B (BK)

F01008

C1037

14A313


F07067



29S-LF20 (OG)
49-LG12 (BU)
15S-LG14 (GN/RD)
15S-LG9 (GN/BK)
31-LF20 (BK)
15S-LD12 (GN/YE)

C1040b


F08268

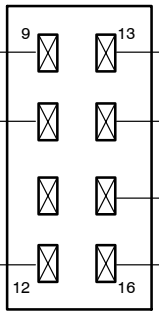

4-EC10 (GY)
5-EC10 (BU)
91-MD15B (BK/BU)+
91-MC12A (BK/YE)
31S-GL15 (BK/OG)
29S-LK34 (OG/BK)
29-MD1A (OG/YE)+
29-MC12 (OG/YE)
75-MD15 (YE/GN) +
15-MC12 (GN/YE)

C1038

14A313

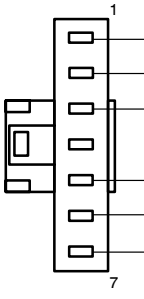


29S-LF20 (OG)
49-LG12 (BU)
15S-LG14 (GN/RD)
15S-GN11 (GN/BU) +
15S-LG9 (GN/BK)
31-GN10A (BK)+
31-LF20 (BK)
15S-LD12 (GN/YE)

F07065

C1042

F08266

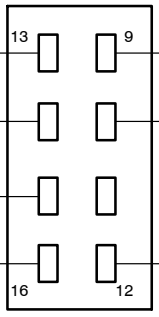


31S-GL15 (BK/OG)
29S-LK34 (OG/BK)
29-MD1A (OG/YE)
75-MD15 (YE/GN)
4-EC10 (GY)
5-EC10 (BU)
91-MD15B (BK/BU)

A11
Radio

C1044

F12096

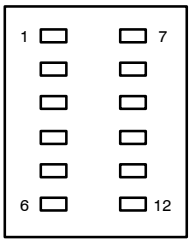


(1)	8-MC12 (WH)	(7)	9-MC12 (BN)
(2)		(8)	9-MD26 (BN/YE)
(3)	1-MD49 (WH/GN)	(9)	2-MD49 (GY/OG)
(4)	1-MD50 (WH/BK)	(10)	2-MD50 (GY/BK)
(5)	10-MC12 (GY)	(11)	
(6)	8-MD26 (WH/BK)	(12)	

A11
Radio

C1045


F08202

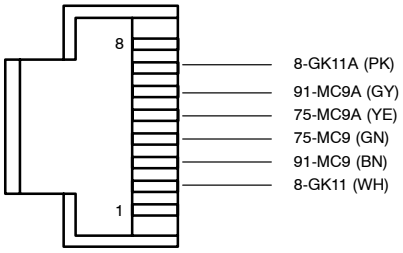

A177
Mobile telephone module

C1053 (BK)


F12100

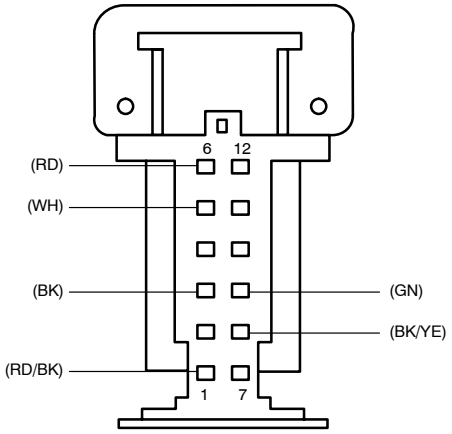

A373
Climate controlled seat module, LH front

C1054 (BK)


F12100

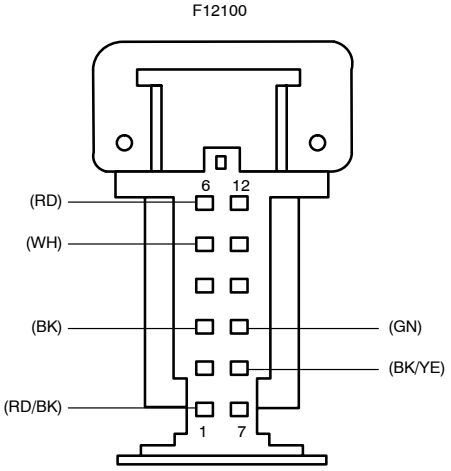


A374
Climate controlled seat module, RH front

C1055 (WH)

F04266

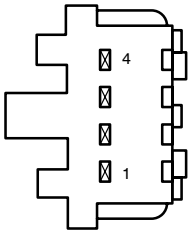


F04268

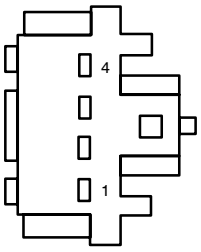


(1) (GN)
(2) (BK/YE)
(3) (WH)
(4) (BK)

C1056 (WH)

F04266

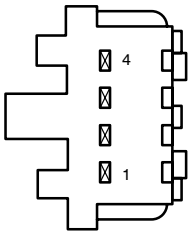


F04268

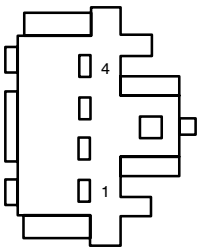


(1) (GN)
(2) (BK/YE)
(3) (WH)
(4) (BK)

C1057 (GY)

F02034

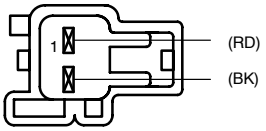


F02047

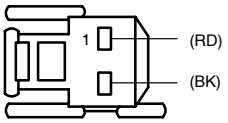


C1058 (GY)

F02034

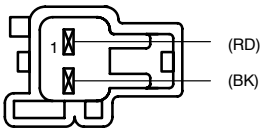


F02047

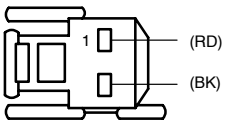


C1059 (GN)

F02098

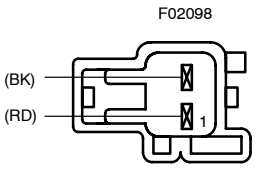


F02096

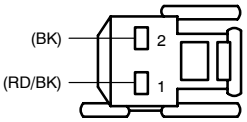


C1060 (GN)

F02098

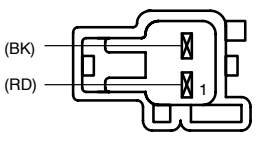


F02096

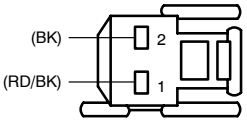


C1071 (WH)

F02104

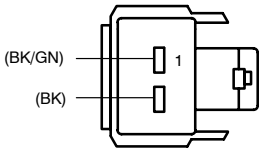


F02102

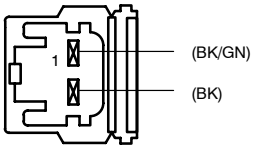


C1072 (WH)

F02104

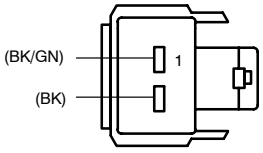


F02102

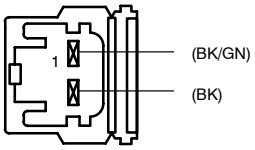

C1127 (GY)

9H589

F03178

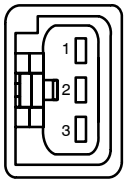


B41
Camshaft position sensor

(1) 7-RJ3 (YE/VT)
15-RJ3 (GN/WH)
(2) 9-RJ3 (BN/WH)
(3) 8-RJ3 (WH/VT)

C1132

9H589

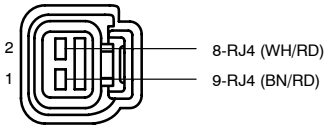


F02109

B43
Crankshaft position sensor

C1137

9H589

F03093

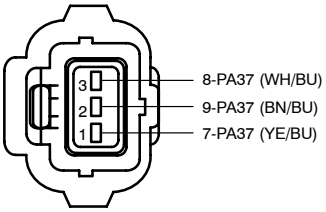


B136
Exhaust gas recirculation (EGR) valve position sensor

C1141

12A522

F04128

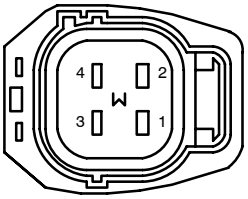


M37
Cooling fan motor

(1) 15S-PA6 (GN/YE)
(2) 31-PA6 (BK)
(3) 49-PA6 (BU)
(4) 49-PA6 (BU)

C1142

12A522

F04236

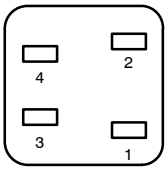


M37
Cooling fan motor

(1) 31-PA6 (BK)
(2) 15S-PA6 (GN/YE)
(3)
(4) 49-PA6 (BU)

C1146

14K733

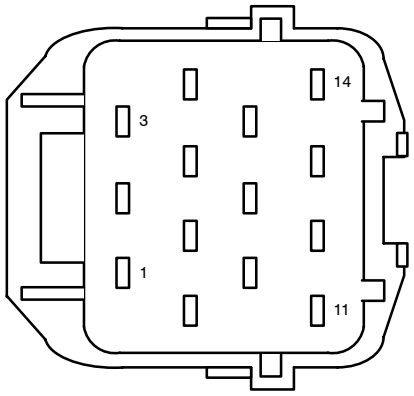


F14035

(1) 15S-LE15 (GN/BK)
(2) 8-LE31 (WH)
(3) 8-LE46 (WH/RD)
(4) 49-LG11 (BU/OG)
(5) 15-LE2A (GN/BU)
(6) 8-GB8A (WH/BU)
(7) 31-LE31A (BK)
(8) 29S-LF7 (OG/BU)
(9) 7-LE54 (YE/BK)
(10) 8-LE54 (WH/BK)
(11) 31-LE31 (BK)
(12) 8-LE53 (WH/BU)
(13) 9-LE54 (BN/YE)
(14) 15S-LE16 (GN/OG)

E181
High intensity discharge headlamp, LH side

C1147

14K733

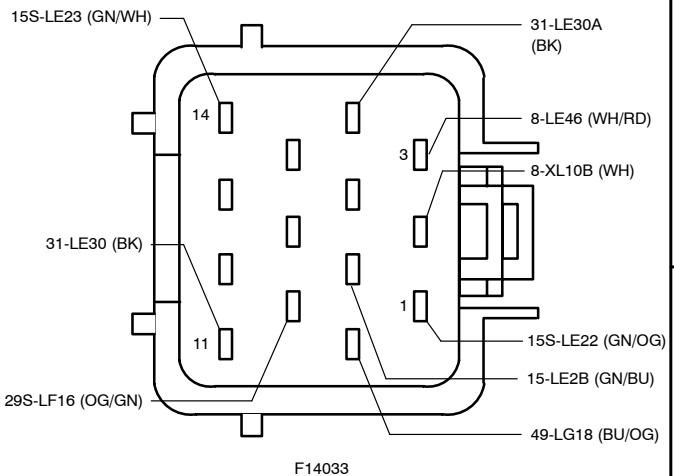


F14033

E182
High intensity discharge headlamp, RH side

C1159

12A522

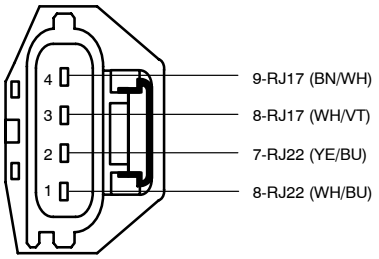


F04217

B142
Temperature manifold absolute pressure sensor

C1169

12A522

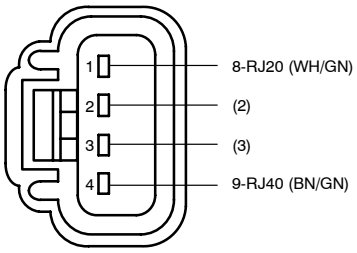


F04162

(2) 8-RJ40 (WH/GN)
7-RJ40 (YE/GN)

(3) 7-RJ40 (YE/GN)
8-RJ40 (WH/GN)

B142
Temperature manifold absolute pressure sensor


C1541 (BN)

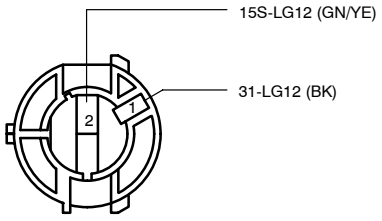

F02124

E9
Rear lamp assembly, LH side

C1542 (GY)

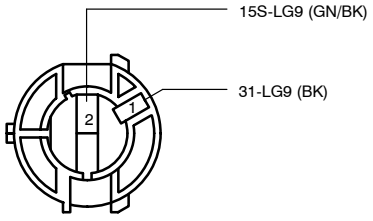


F02124

E9
Rear lamp assembly, LH side

C1183

12A522


automatic transmission

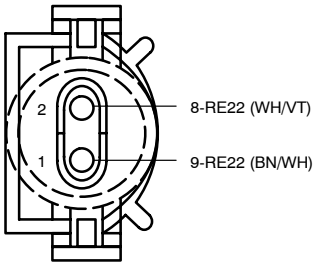

F02031

B11
Vehicle speed sensor (VSS)


C1543 (NA)

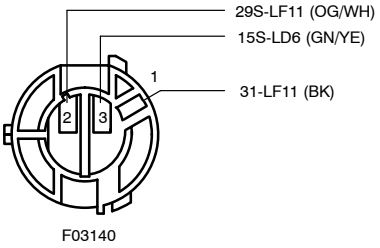

F03140

E9
Rear lamp assembly, LH side


C1540 (GY)

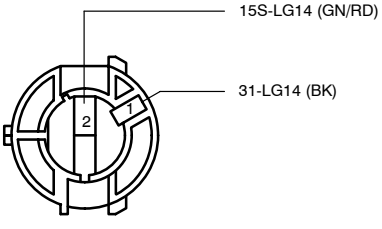

F02124

E9
Rear lamp assembly, LH side


C1550 (GY)

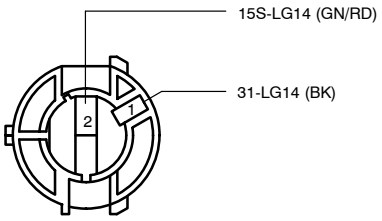

F02124

E10
Rear lamp assembly, RH side


C1551 (BN)

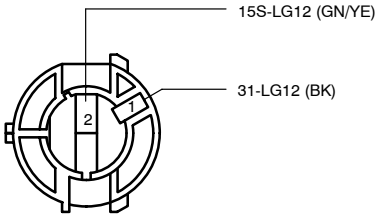

F02124

E10
Rear lamp assembly, RH side

C1552 (GY)

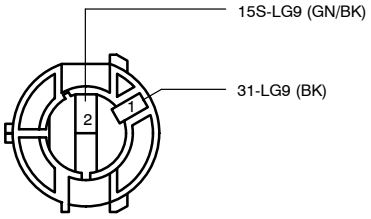


F02124

E10
Rear lamp assembly, RH side

C1553 (NA)


F03140

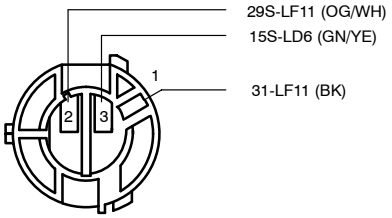

F03140

E10
Rear lamp assembly, RH side

C2000

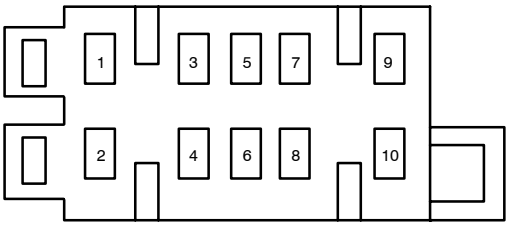


F10094


(1)	BN	(6)	OG
(2)	RD	(7)	BK/RD
(3)	GY/BK	(8)	BK/YE
(4)	OG/WH	(9)	BK
(5)	GY/RD	(10)	VT/OG

A310
Trailer interface (TI) module

C2001




F01005



F01008

C2002

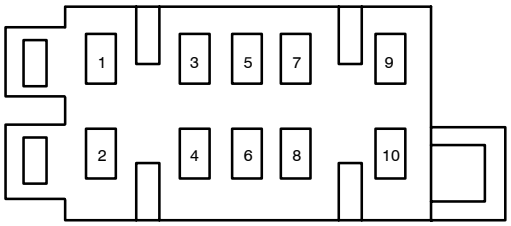


F10094

(1) RD
(2) VT
(3) BN
(4) BK/YE
(5) WH
(6) GN/RD
(7) BU
(8) GY/WH
(9) BU/RD
(10) GN/YE

A311
Switch interface (SI) module, trailer

C2005


F07065

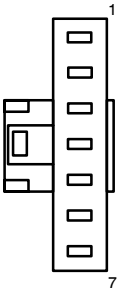

(1) (GY/BK)
(GY/BK)+(GY/BK)
(2) (GY/WH)
(WH)
(3) (BK/RD)+(BK/RD)
(4)
(5) (BK)
(BK)+(BK)
(6) (BN)
(7) (VT/YE)
(RD/WH)


C2006

F07067



(1) (GY/RD)
(GY/RD)+(GY/RD)
(2) (GN/RD)
(GN/YE)
(3) (GN)
(4)
(5) (GN)
(6) (GN)
(7) (VT/YE)


C2003

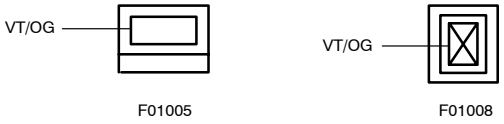

F01005 F01008

C2007


F07065

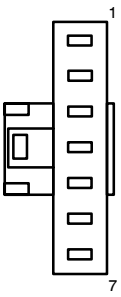

(1) (GY/RD)
(GY/RD)+(GY/RD)
(2) (GN/RD)
(GN/YE)
(3) (GN)
(4)
(5) (GN)
(6) (GN)
(7) (VT/YE)


C2004

F07067



(1) (GY/BK)
(GY/BK)+(GY/BK)
(2) (WH)
(GY/WH)
(3) (BK/RD)+(BK/RD)
(BK/RD)
(4)
(5) (BK)+(BK)
(BK)
(6) (BN)
(7) (RD/WH)
(VT/YE)


C2008

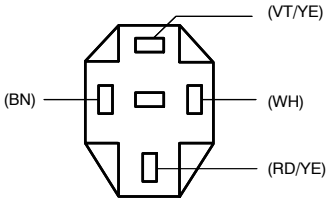

F05010

K125
Rear fog lamp cutoff relay

C2010

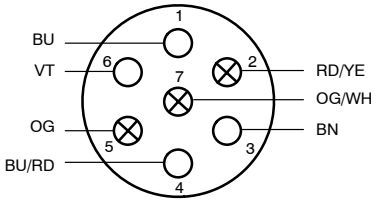


F07031

D41
Trailer socket

C2012


F13006

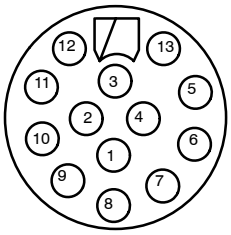

(1)	BU	(7)	OG/WH
(2)	RD/YE	(8)	VT/OG
(3)	BN/WH	(9)	RD
(4)	BU/RD	(10)	YE
(5)	OG	(11)	
(6)	VT	(12)	

D41
Trailer socket

C2013

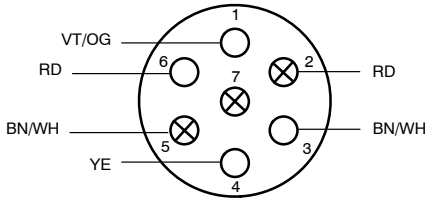


F07031

D46
Auxiliary trailer socket

C2100a


F16027

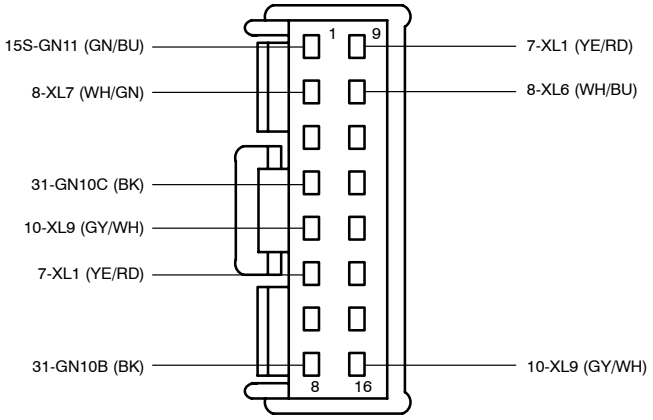

A265
Parking aid module

C2100b


F12030

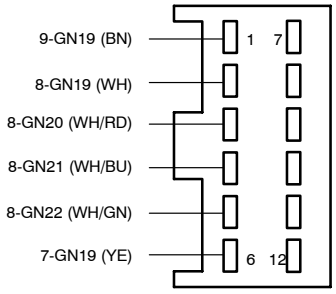


A265
Parking aid module

C2103


F06007

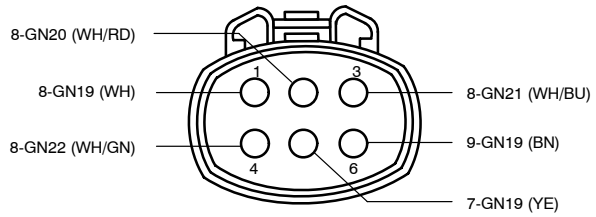

F06008

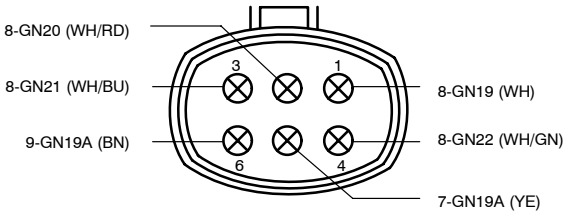


C2105

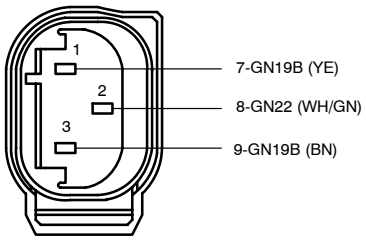

F03110

B168
Parking aid sensor, rear, outer left


C2108

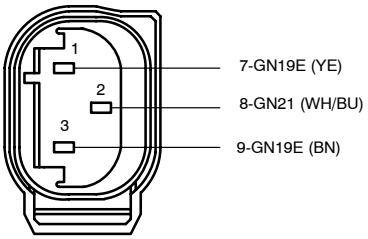

F03110

B171
Parking aid sensor, rear, outer right


C2106

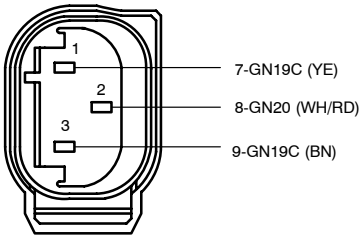

F03110

B169
Parking aid sensor, rear, inner left


C2109



F02482

Y234
Parking aid speaker

C2107

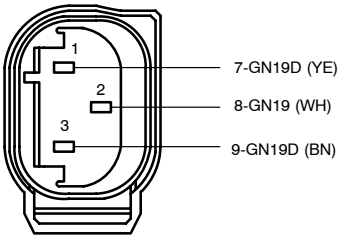


F03110

B170
Parking aid sensor, rear, inner right

C2110


F05010

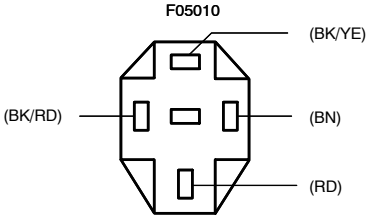

K526
Trailer tow relay, stop lamp

C2111


F05010

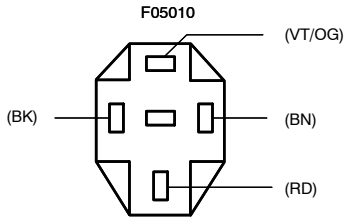

K357
Trailer tow relay, reversing lamp

C2200b

F12106

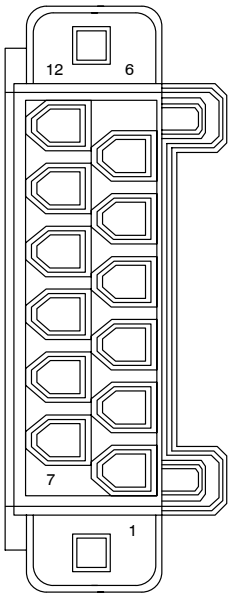

(1)	8-GN19 (WH)	(7)	
(2)	8-GN20 (WH/RD)	(8)	
(3)	8-GN21 (WH/BU)	(9)	
(4)	8-GN22 (WH/GN)	(10)	9-GN19 (BN)
(5)		(11)	7-GN19 (YE)
(6)		(12)	

A265
Parking aid module