MMI Navigation plus

Operating Instructions

Foreword

You have decided on the MMI Navigation plus - thank you very much for your confidence in us.

With your new Audi, you are receiving a vehicle with a state-of-the art system that allows you the change the vehicle's settings and operate the electronic equipment using a Multi Media Interface called the *Audi MMI*.

We recommend that you read these Operating Instructions carefully so that you quickly get to know all of the functions and possibilities that the MMI offers and are able to make full use of them while driving.

Please note that these instructions are a supplement to your vehicle Owner's Manual and should only be used in conjunction with your current vehicle Owner's Manual.

Should you have any further questions about the MMI in your vehicle, please ask your authorized Audi dealer for assistance.

We hope you enjoy driving your Audi.

AUDI AG

Table of contents

About this book 4

MMI components 6

Overview 7
- Controls at a glance 7
- MMI: Multi Media Interface 7
- Traffic safety tips 7
- Tips on caring for the MMI 8

Drives 9
- Introduction 9
- Overview of the drives 9
- CD/DVD mode general information 11
- Memory card general information 12
- Jukebox 12
- CD/DVD drive 14
- CD changer 14
- Memory card reader 16
- Audi music interface 17

Cell phone prep 21
- Introduction 21
- Starting 21

MMI control panel 26

General operation 28
- All MMI menus at a glance 28
- Switching on/off 28
- Operating the system 29
- MMI Display 29
- Switching the MMI display on or off 33
- Adjusting the volume 33
- Adjusting the sound 34
- Setting the time 37
- Restarting the MMI (Reset) 38
- Additional settings 38

Listening to the radio 41
- Introduction 41
- System information 41
- Starting radio mode 42
- Activating your Satellite Radio service 42
- Selecting frequency band 43
- Selecting a station from the station list 44
- Selecting the station 44
- Scanning stations 45
- Storing stations 46
- Selecting a stored station 46
- Moving stored stations 47
- Additional settings 47

Playing media 49
- Introduction 49
- Starting Media mode 49
- Selecting source 49
- Selecting a folder 50
- Selecting a track 50
- Fast forward/rewind 51
- Previous/next track or chapter .. 51
- Track information 52
- Repeat range 52
- Shuffle 53
- DVD main menu 53
- DVD full screen display 54
- DVD parental control 54
- Pausing/continuing playback ... 55
- Additional settings 56

Directory 58
- Introduction 58
- Opening the directory 58
- Storing a new directory entry ... 58
- Importing directory entries 59
- Exporting address cards 61
- Using a directory entry 62
- Editing a directory entry 64
- Managing profiles 67
- Additional settings 69

Calling 70
- Introduction 70
- Starting Telephone mode 70
- Dialing a telephone number 71
- Answering/ignoring a call 73
- Ending a call 73
- Storing a phone number in the directory 74
- Dialing stored phone numbers .. 75
- Deleting local call lists 75
- Bluetooth settings 76
- Additional settings 76

Navigating 79
- Introduction 79
- Starting Navigation mode 80
- Entering a destination 80
- Stopping route guidance 86
- Display 87
- Storing a destination 88
- Loading a destination 90
- Additional settings 91

Calling up traffic information . 96
- Introduction 96
- Calling up TMC traffic reports ... 96

Multifunction steering wheel 98

General operation 98
Introduction 98
Adjusting the volume 99
Listening to the radio 99
Playing media 100
Calling 101
Navigating 104
Speech input 105

Voice recognition system 106

Voice recognition system 107
Introduction 107
General operation 108
Calling 110
Using addresses 111
Navigating 112

Alphabetical index 116

About this book

This book contains important information, tips, suggestions and warnings for using your vehicle.

Keep this book in your vehicle at all times. This is especially important if you loan your vehicle to others or sell it.

This book describes the **equipment range** specified for this model at the time of the editorial deadline. Individual items of equipment may not yet be available at the time of printing or may only be offered in certain countries.

Some sections in this book do not apply to all vehicles. When this is the case, the beginning of the section indicates the **validity**, for example, “Applies to vehicles: with telephone”. Optional equipment is also identified with an asterisk “*”.

The **illustrations** are designed as schematic images. Some of the details on your vehicle may look slightly different than illustrated.

There is a **Table of Contents** at the beginning of this book that lists all of the topics covered in this book in the order that they appear. There is also an alphabetically arranged **Index** at the end of this book.

All **directions** such as “left”, “right”, “front” and “rear” are based on the vehicle's direction of travel.

* Optional equipment.

▶ The section continues on the next page.

■ Marks the **end of a section**.

® Registered trademarks are identified with ®. The absence of this symbol does not warrant unrestricted use of a term.

⇒ ⚠ Cross reference to a “WARNING” within a section. If a page number is indicated, the WARNING is located outside of the section.

⚠ WARNING

Text with this symbol contains information about safety and how to reduce the risk of serious personal injury or death.

Note

Text with this symbol contains information about avoiding damage to your vehicle.

For the sake of the environment

Text with this symbol contains information on protecting the environment.

Tips

Text with this symbol contains additional useful information. ■

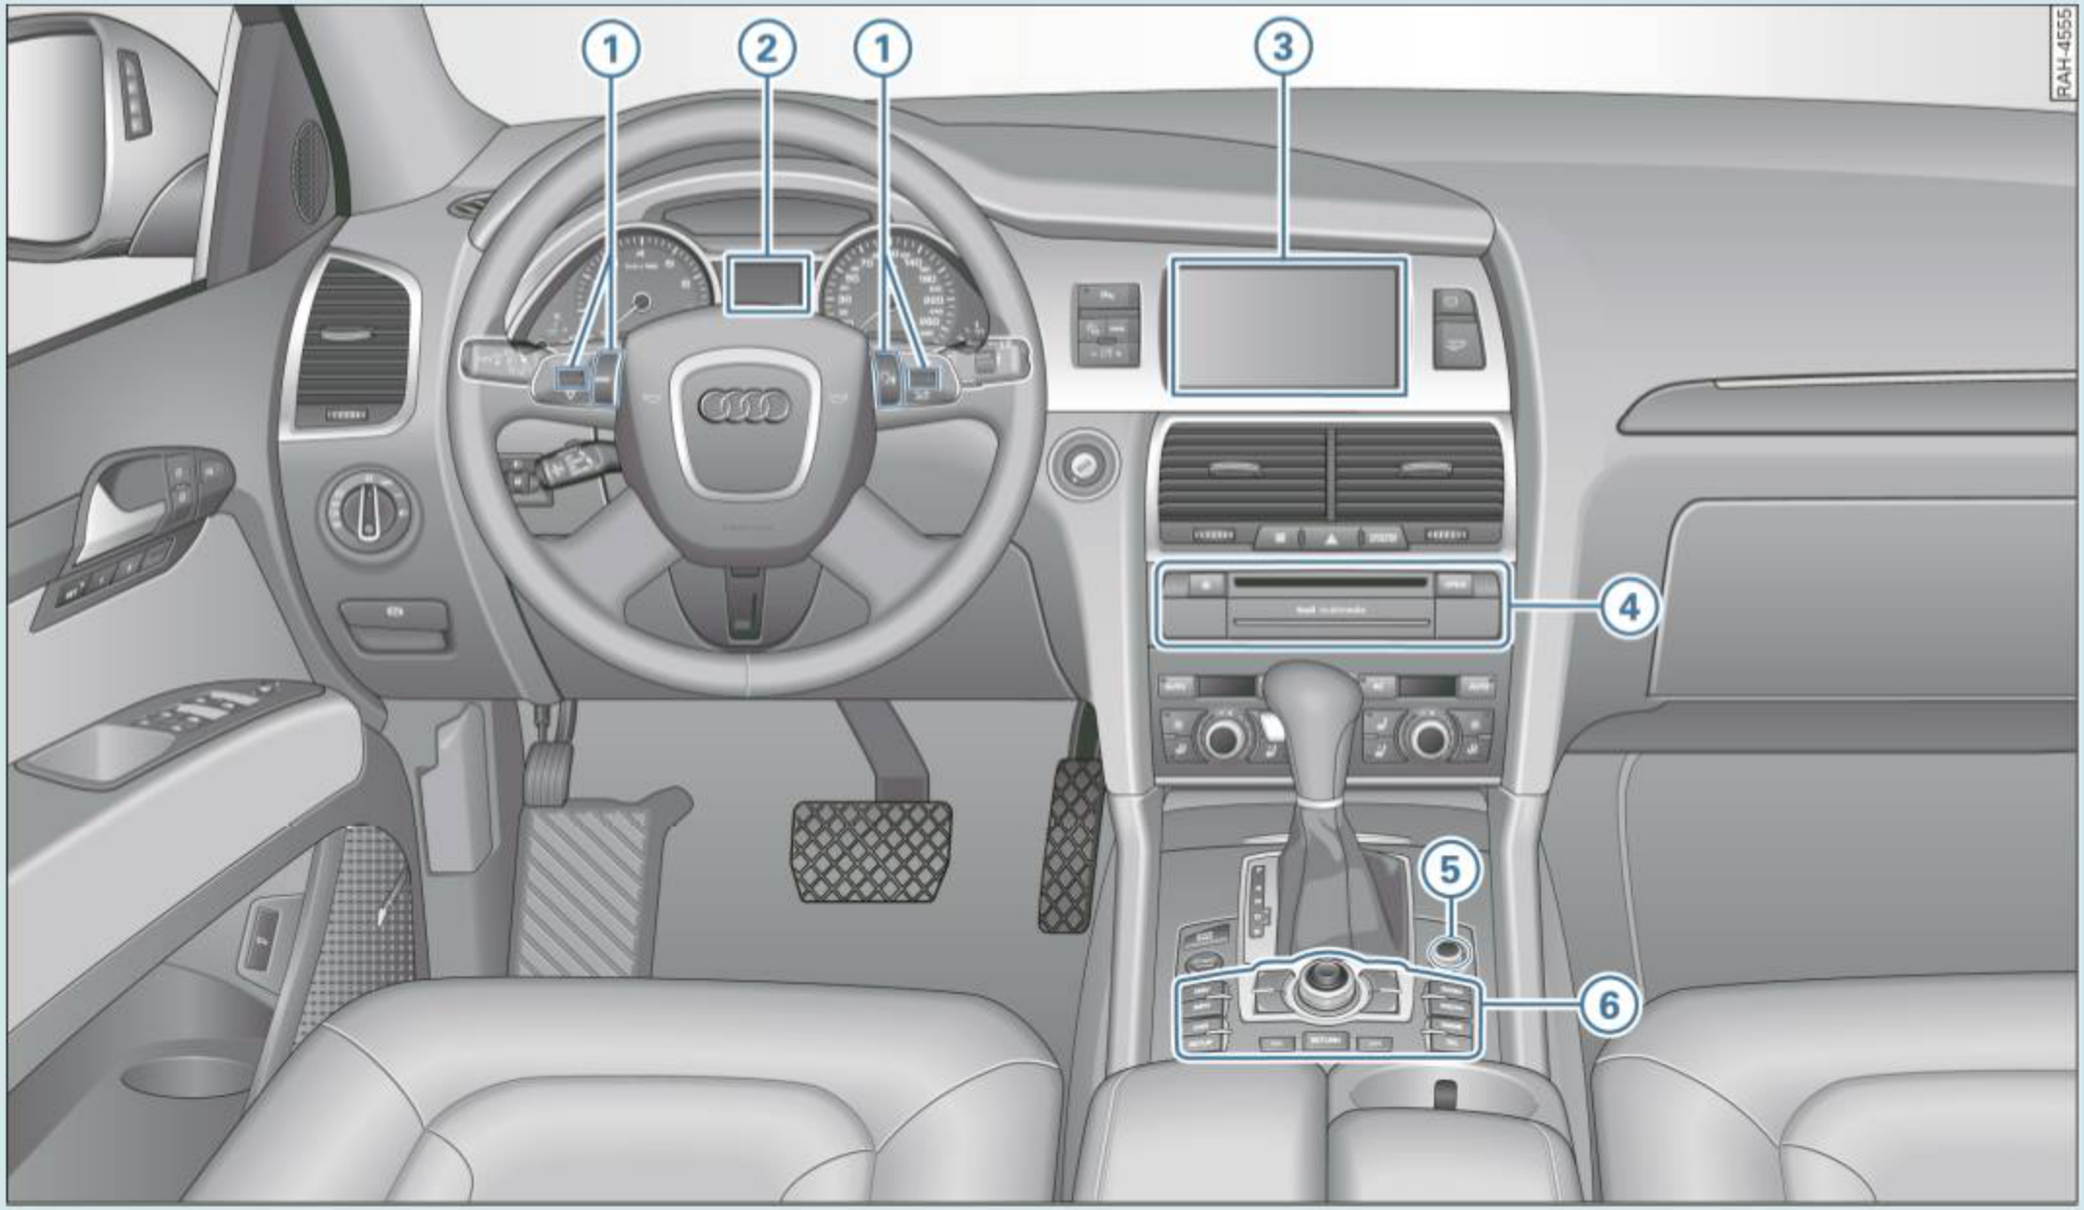


Fig. 1 MMI controls

Overview

Controls at a glance

The various MMI controls are located centrally in the cockpit and are easy to reach.

(1) Multifunction steering wheel* 98
(2) Driver information system 98
(3) MMI Display 29
(4) MMI drives 9
(5) On/Off knob 28
(6) MMI control panel 29

Tips

- Please note that this manual only describes MMI components. You can find additional information on operating your vehicle in your vehicle Owner's Manual.
- On vehicles with right-hand drive steering*, the layout of the controls differs somewhat from what is shown here ⇒ *page 6,* fig. 1. The symbols for the controls are the same. ■

MMI: Multi Media Interface

The Audi Multi Media Interface, or MMI for short, combines various communication and entertainment systems in your Audi.

Through the MMI, you can listen to the radio and CDs and connect portable audio devices*. The MMI also has two memory card readers and an internal hard drive where you can store your favorite music. The navigation system can guide you to your destination using the shortest route. Or you can follow your own tour plan with up to nine intermediate destinations. Information about traffic conditions is taken into account during route guidance. You can also use many of the functions on your cell phone. The MMI also combines many driver assistance systems in your vehicle.

There are several ways you can access the wide range of MMI functions in your vehicle. You can access all of the functions through the MMI control panel with its intuitive controls. You can also comfortably access the MMI functions that you use most frequently through the multifunction steering wheel or voice recognition system. ■

Traffic safety tips

Audi recommends only performing important functions such as entering a navigation destination when the vehicle is stationary. Always remember to stop using the MMI if necessary to ensure your safety and the safety of other drivers.

WARNING

- **Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Only use the MMI system when traffic conditions permit and always in a way that allows to maintain complete control over your vehicle.**
- **Adjust the volume of the audio system so signals from outside the vehicle such as police and fire sirens can be heard easily at all times.**
- **Obey all applicable laws regarding use of telephones in vehicles.** ■

Tips on caring for the MMI

The *Cleaning and Protection* chapter in your vehicle owner's manual provides instructions on caring for and cleaning the MMI components. ■

Drives

Introduction

The MMI is equipped with a CD/DVD drive, a CD changer*, two memory card readers and a Jukebox. You can also connect a portable audio device such as an iPod or USB storage device to the Audi music interface* and operate it through the MMI control panel. ■

Overview of the drives

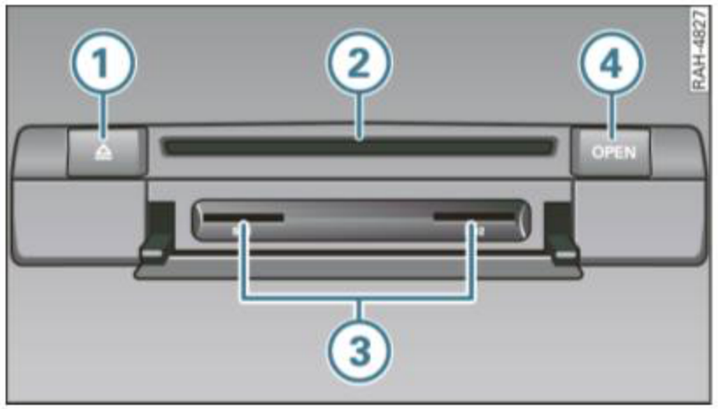


Fig. 2 MMI drive (Q7)

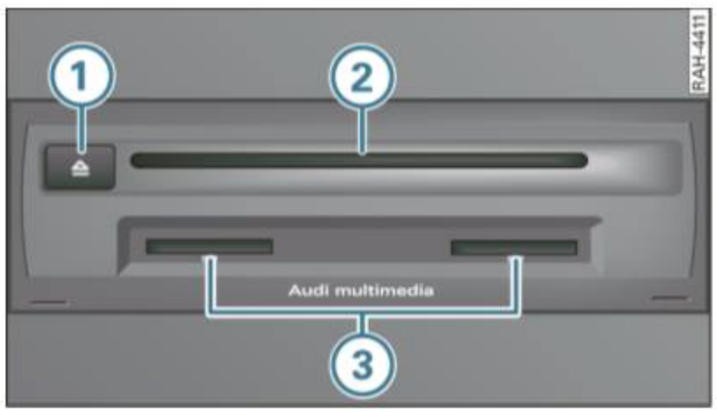


Fig. 3 MMI drive (A6)

① Eject button
② CD/DVD slot
③ Memory card reader
④ OPEN button

The MMI drive is located in the center console or the glove compartment, depending on vehicle equipment. The MMI drives are started and stopped through the MMI ⇒ *page 49*.

The CD/DVD drive, Jukebox, memory card reader and USB storage device* connection support the following audio file properties:

	MP3 Files	WMA files	AAC files
Format	MPEG-1 Layer -3 MPEG-2 Layer -3	Version 7, 8 and 9	MPEG-4
Profile			LC - Low Complexity
File extension	.mp3	.wma	.m4a
File system	Memory card and USB storage device: FAT or FAT32 method, only one partition CD/DVD drive: Joliet (CDs single session and multisession; DVDs only single session)		
Standard	ISO 9660-Level 1 and 2		
Bit rates	32 to 320 kbits/s and variable bit rates in sampling frequencies from 8 to 48 kHz		
Playlist format	M3U and PLS		

	MP3 Files	WMA files	AAC files
Number of files	CD/DVD drive: max. 1000 files per medium and directory Jukebox: max. 3000 files total USB storage device and memory card: max. 4000 files total and max. 1000 files per directory		
Supported media	Memory card reader: Memory cards with a capacity up to 32 GB CD/DVD drive: Audio CDs, MP3/WMA/AAC CDs with a capacity up to 700 MB MP3/WMA/AAC DVDs in DVD-5, -9, -10, -14 and -18 formats, Standard DVD-V and DVD-V compatible DVD-A Audi music interface: iPod ⇒ *page 19*, USB storage device ⇒ *page 20*		
Metadata	ID3 tag up to 50 characters	WMA tag up to 50 characters	Metadata support

WARNING

The card reader must always be closed while driving for safety reasons.

Tips

- The Jukebox does not support playlists.
- The more files/folders/playlists are on a medium, the longer it will take to load the audio files. Audi recommends using storage mediums that only contain audio files.
- To decrease the time it takes to load audio files, create subfolders (for example according to artist or album).
- To access audio files as quickly as possible, Audi recommends using SD cards that are class 4 or higher.
- For compressing MP3 files, Audi recommends a bit rate of at least 160 kbit/s.
- When playing MP3 files with a variable bit rate, there may be a discrepancy between the play time displayed and real time.
- The MMI drives do not support files protected by DRM.
- The functionality of individual storage mediums may be limited due to the variety of blank CDs/DVDs available and the various capacities.
- Audio CDs or video DVDs with copy protection or CDs/DVDs that do not conform to the standard may not play or playback may be limited. CDs that conform to the standard have the logo “Compact Disc Digital Audio” on the CD.
- Multisession CDs may not play or playback may be limited. Audi recommends finalizing the recording process when creating multisession CDs.
- Specific characters (such a those in ID3 tag information) display differently depending on the MMI system language and cannot always be guaranteed.
- Never store important data on the memory cards, Jukebox, CDs/DVDs or portable audio devices. Audi is not responsible for damaged or lost files.
- Please note that audio files are subject to copyright laws. ■

CD/DVD mode general information

This general information applies to CDs and DVDs.

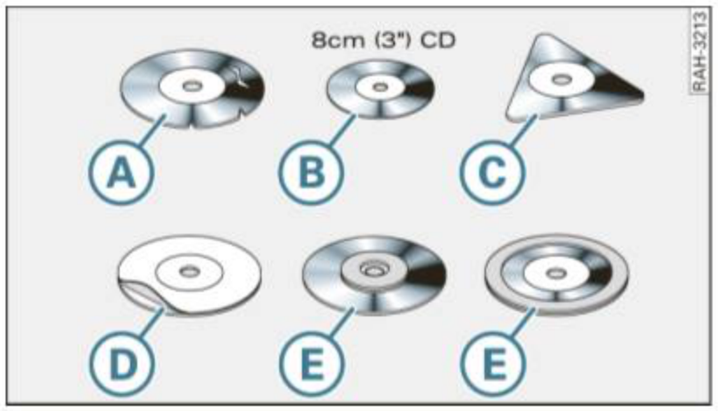


Fig. 4 CDs/DVDs that must not be used

Requirements for good sound quality

To ensure good, high-quality sound reproduction and to prevent damage to the drives, please observe the following:

- **Do not** use damaged or scratched CDs/DVDs (A).
- **Do not** use single CDs/DVDs (3 inch/8 cm diameter) (B).
- **Do not** use CDs/DVDs that are not round (shape CDs/DVDs) (C).
- **Do not** add any labels (D).
- **Do not** use protective rings (E).
- **Do not** use dirty CDs/DVDs.
- **Do not** use protective CD/DVD file or stabilizer.
- Always keep CDs/DVDs in a protective sleeve and do not expose to direct sunlight.

Cleaning drives, CDs and DVDs

Clean CDs/DVDs with a soft, lint-free cloth. Wipe the CD/DVD in a straight line from the center toward the outer edge. Dirty areas can be cleaned with a commercial CD cleaner or isopropyl alcohol. Never use gasoline, paint thinner, or record cleaner since they can damage CDs/DVDs.

Using laser equipment

Laser equipment is divided into safety classes 1 to 4 in accordance with DIN IEC 76 (CO) 6/VDE 0837. The various types of audio equipment installed conform to safety class 1. The laser uses so little power or is shielded so there is no danger when it is used correctly.

Read error message

A read error message in the display may be caused by the following:

Problem	Solution
The CD/DVD is dirty.	Clean the CD/DVD.
The CD/DVD is scratched.	Replace the CD/DVD with one that is not scratched.
The CD/DVD was inserted upside down.	Insert the CD with the label side facing up.
Condensation has formed on the CD/DVD.	Wait until the CD/DVD is dry.
The mechanism for the drive is malfunctioning.	Please see your authorized Audi dealer or other qualified workshop to have the malfunction repaired.

Note

Labels on the inner hub of a CD/DVD can loosen when exposed to high temperatures and damage the drive. Do not leave CDs/DVDs that have labels on the inner hub in the drive when they are not playing.

Tips

- CD/DVD playback may be temporarily unavailable if outside temperatures are extremely hot or cold. A thermal protection switch is installed to protect the CD/DVD and the laser.
- Do not remove the cover from the device. The device does not contain any parts that the owner can repair. ■

Memory card general information

Both SD and MMC memory cards can be used.

The memory card reader has been tested with many of the products available on the market. However, in isolated cases it is possible that individual memory cards may not be recognized.

Always keep the memory card in a suitable case to protect it from dirt, dust particles and other damage.

Note

Only use one-piece memory cards. If adapter cards (memory cards with more than one piece) are used, the card could fall out of the adapter when driving because of vibrations. Individual pieces could then become stuck in the drive. ■

Jukebox

Introduction

The MMI is equipped with a Jukebox that has 10 GB of memory available for audio files. Jukebox mode is started and operated through the MMI ⇒ *page 49*.

For information on the properties of supported file formats, refer to ⇒ *page 9*.

Tips

- Please note that music files are subject to copyright law. Reset the Jukebox to the original default settings when selling your vehicle ⇒ *page 39*.
- When the vehicle is at an altitude above approximately 3000 meters, the MMI hard drive shuts down temporarily to protect it. Navigation mode and the Jukebox are not available when that happens. All of the MMI functions will be available again as usual once you start the engine again at a location below 3000 meters. ■

Importing files

Audio files on a CD/DVD ROM in the CD/DVD drive, a USB storage device or a memory card can be imported.*



Fig. 5 Importing files

- Press the MEDIA function button.
- Press the **Import** control button.
- Turn the control knob to a source (such as **SD/MMC**, **CD/DVD** or **USB**) and press the knob. After checking the selected source, the MMI display shows a file structure.
- Turn the control knob to **All files/folders** or select individual files for import and press the control knob.
- To start the import, turn the control knob in the top directory level to **Start import**. The progress of the import is shown in the MMI display.

You can select all of the files in a folder for import by turning the control knob to select the folder and then press and hold the knob. ▶

The Jukebox automatically sorts music files during import into artist, album, title and genre folders using the stored metadata (such as ID3 tags).

If the Jukebox does not contain any files, a message appears in the MMI display with the option **Import new tracks**. Press the control knob to enter the import menu.

You can stop the import at any time by selecting **Cancel** with the control knob and pressing it. The import will also be cancelled if you switch off the MMI, remove the source (such as **SD/MMC**, **CD/DVD** or **USB**) or start the engine during the import. Tracks that have already been imported remain stored in the Jukebox.

Tips

- Only import audio files when the engine is running.
- Playing and importing audio files in the CD/DVD drive at the same time can lead to limitations in playback or importing. Audi recommends playing audio files in the CD/DVD drive once the import is completed successfully.
- The Jukebox does not provide an export function due to legal reasons.
- Files that are already present are automatically overwritten when importing.
- Files/tracks without stored metadata are listed as **unknown**. Audi recommends importing audio files with their accompanying metadata (such as ID3 tags). ■

Erasing files

Requirement: The media mode must be activated ⇒ *page 49* and the Jukebox must contain audio files.

– Press the SETUP function button.

– Turn the control knob to **Delete jukebox files** and press the knob.

– Turn the control knob to **All files/folders** or select individual files or folders for import and press the control knob.

– To erase selected files/folders, turn the control knob in the top directory level to **Start deletion** and press the knob.

– Turn the control knob to **Yes** and press the knob. The progress of the deletion is shown in the MMI display.

You can select all of the files in a folder for deletion by turning the control knob to select the folder and then press and hold the knob. Jukebox playback stops during the deletion process and starts again automatically once the deletion is complete.

Tips

If functionality is restricted, reset the Jukebox to the default settings ⇒ *page 39*. ■

CD/DVD drive

Introduction

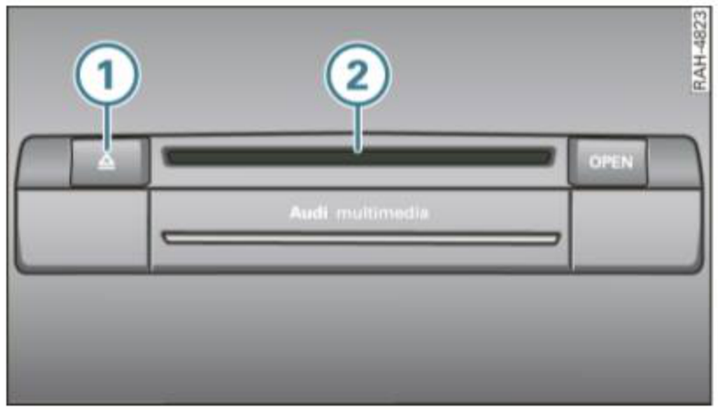


Fig. 6 CD/DVD drive

① Eject button
② CD/DVD slot

The CD/DVD* drive is located in the center console or the glove compartment, depending on vehicle equipment. Audio CDs or CDs/DVDs with MP3/WMA files* can be loaded in the CD/DVD* drive. CD/DVD* mode is started and operated through the MMI ⇒ *page 49*.

For information on the properties of supported file formats, refer to ⇒ *page 9*. ■

Loading a CD/DVD

Never force a CD/DVD into the drive. The CD/DVD is pulled in automatically.

– Make sure there is no CD/DVD in the drive ② ⇒ fig. 6.

– Slide the CD/DVD with the writing facing up straight into the drive ②. ■

Ejecting a CD/DVD

– Press the eject button ① ⇒ fig. 6. The CD/DVD is ejected.

The CD/DVD is pulled in again automatically if it is not removed from the slot within 12 seconds of ejecting it. ■

CD changer

Applies to vehicles: with CD changer

Introduction

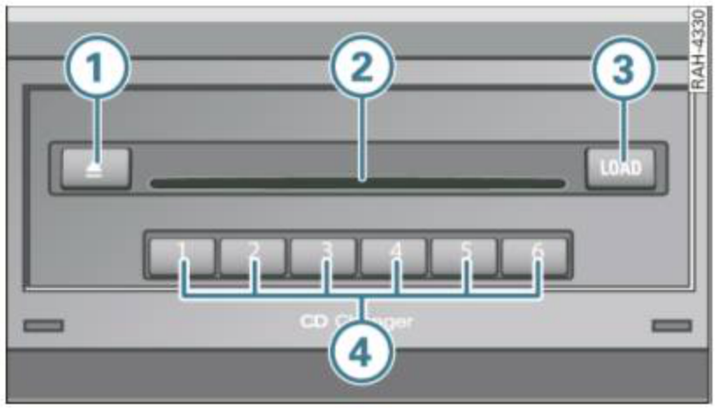


Fig. 7 CD changer

① Eject button
② CD slot
③ LOAD button
④ Position buttons with LEDs

The CD changer is located in the glove compartment or under the center armrest, depending on vehicle equipment. Audio CDs or MP3/WMA CDs can be loaded into the CD changer. CD mode is started and operated through the MMI ⇒ *page 49*.

The CD changer supports the following file formats: ▶

	MP3 Files	WMA files
Format	MPEG-1 Layer -3 MPEG-2 Layer -3	Version 7, 8 and 9
File extension	.mp3	.wma
Standard	ISO 9660-Level 1 and 2	
File system	Joliet (single session and multisession)	
Number of files/ directories	Max. 255 files per directory, max. 255 directories, total of no more than 512 files and directories per medium	
Bit rates	32 to 320 kbits/s and variable bit rate and variable bits in sampling frequencies from 8 to 48 kHz	
Supported media	Audio CDs and MP3/WMA CDs with a capacity of 700 MB	
Metadata	ID3 tag up to 30 characters	WMA tag up to 30 characters

Tips

- Please follow the instructions for handling CDs ⇒ *page 11*.
- The CD changer does not support playlists and files with DRM protection.
- The functionality of individual storage mediums may be limited due to the variety of blank CDs available and the various capacities.
- Audio CDs with copy protection or CDs that do not conform to the standard for audio CDs may not play or playback may be limited. CDs that conform to the standard have the logo “Compact Disc Digital Audio” on the CD. ■

Applies to vehicles: with CD changer

Loading a CD

Never force a CD into the drive. The CD is pulled in automatically.

Loading a CD

– Press the LOAD button (3) ⇒ *page 14*, fig. 7. The LEDs at the side of the CD slot (2) blink when the CD changer is ready to be loaded.

– Slide the CD straight into the slot (2) with the label facing up. The CD is automatically loaded in the next empty position in the CD changer. The LED in the corresponding button (4) illuminates.

Loading all CDs

– Press and hold the LOAD button (3) for more than two seconds.

– Wait until the LEDs at the side of the CD slot (2) begin blinking.

– Slide all six CDs one at a time straight into the slot (2) with the label facing up.

Loading the CD in a specific empty position

– Press the LOAD button (3). The LED in the button (4) for an empty position will blink.

– Press one of the blinking buttons (4).

– Wait until the LEDs at the side of the CD slot (2) begin blinking.

– Slide the CD straight into the slot (2) with the label facing up. ▶

Loading a CD into a specific occupied position

- Press the LOAD button (3). The LEDs in the buttons (4) for occupied positions will illuminate.
- Press one of the illuminated buttons (4). The corresponding CD is ejected.
- Remove the CD from the CD slot (2).
- Slide the CD you would like to load straight into the CD slot (2) with the label facing up.

If you press the LOAD button (3) a second time while all CDs are being loaded, the loading procedure stops. ■

Applies to vehicles: with CD changer

Ejecting a CD

Ejecting a CD

- Press the eject button (1) twice to eject the current CD ⇒ *page 14,* fig. 7.
- To eject any of the CDs, press the eject button (1) and then one of the illuminated buttons (4).

Ejecting all CDs

- Press and hold the eject button (1) for more than two seconds. All the CDs are ejected one at a time.

The CD is pulled back into the CD changer automatically if you do not remove it from the CD slot within 30 seconds after ejecting it. ■

Memory card reader

Introduction

The MMI is equipped with two memory card readers ⇒ *page 9,* fig. 2. SC/MMC memory cards can be loaded in the memory card reader.

Memory card mode is started and operated through the MMI ⇒ *page 49*.

For information on the properties of supported file formats, refer to ⇒ *page 9*.

WARNING

The card reader must always be closed while driving for safety reasons.

Tips

Please follow the instructions for handling memory cards ⇒ *page 12*. ■

Inserting a memory card

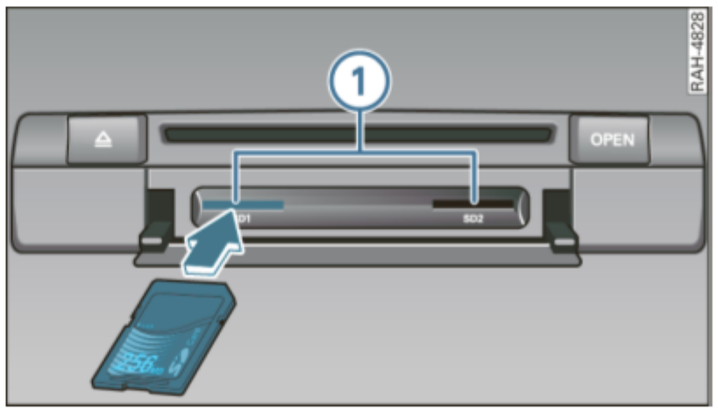


Fig. 8 Inserting a memory card

- Press the OPEN button. The cover over the card reader opens.
- Slide the memory card in the card reader slot with the label side up (contact surface down) (1) ⇒ *page 16*, fig. 8. The angled corner of the memory card must point toward the right front.
- Then push the memory card into the slot until it clicks into place.

WARNING

The card reader must always be closed while driving for safety reasons. ■

Removing a memory card

- Press on the memory card briefly. The card is released from the slot.
- Remove the memory card. ■

Audi music interface

Applies to vehicles: with Audi music interface

Introduction

Various portable audio devices can be connected to the Audi music interface.

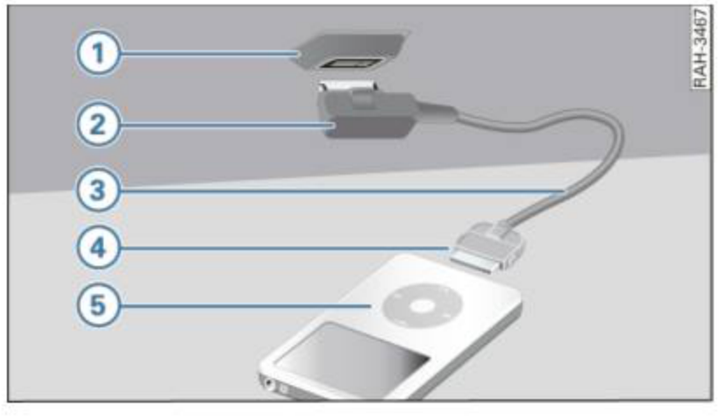


Fig. 9 Audi music interface with iPod adapter cable and iPod

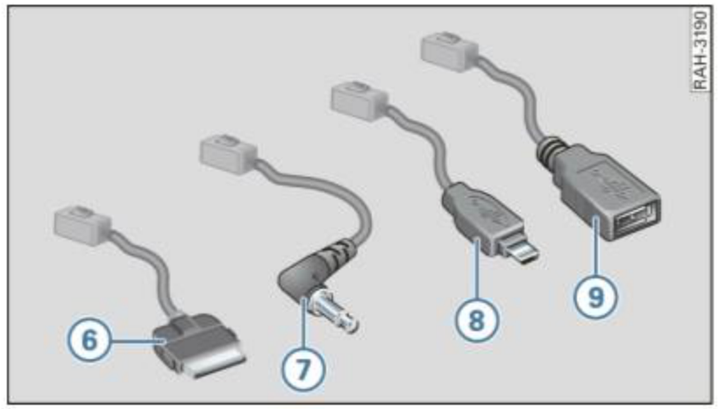


Fig. 10 Audi music interface: Adapter cable

(1) Interface on Audi music interface
(2) Jack for connecting to the Audi music interface
(3) Adapter cable* (such as iPod adapter cable*)
(4) iPod jack on iPod adapter cable*
(5) iPod
(6) iPod adapter cable*

⑦ 3.5 mm stereo jack adapter cable*
⑧ Mini USB adapter cable*
⑨ USB adapter cable*

The Audi music interface is located in the glove compartment. The Audi music interface is started and operated using the MEDIA button ⇒ *page 49*.

You can connect a portable audio device such as an MP3 player to the Audi music interface using a special adapter cable*. You can purchase adapter cables* from your authorized Audi dealer or an electronics store.

Note

- Extremely high or low temperatures which can occur inside vehicles can damage portable audio devices or affect their performance. Never leave a portable audio device in the vehicle in extremely high or low temperatures.
- Handle the adapter cable carefully. Do not allow it to be pinched.

Tips

For up-to-date information on the Audi music interface, visit www.audiusa.com/mp3. ■

Applies to vehicles: with Audi music interface and adapter cable

Connecting the adapter cable to the Audi music interface

– Open the glove compartment.
– Connect the adapter cable to the Audi music interface ⇒ *page 17,* fig. 9.
– Then connect the portable audio device to the Audi music interface. ■

Applies to vehicles: with Audi music interface and adapter cable

Disconnecting the adapter cable from the Audi music interface

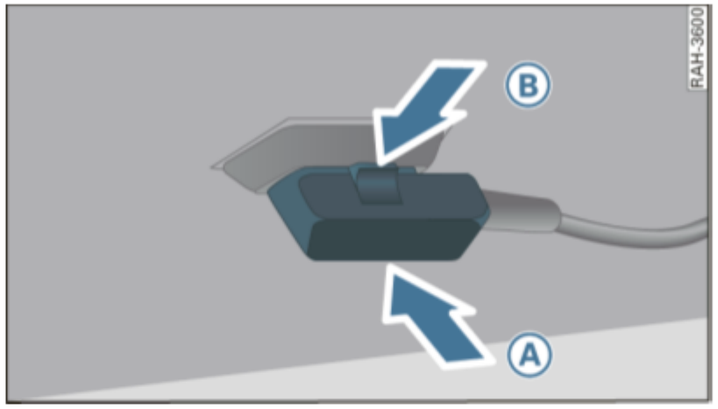


Fig. 11 Adapter cable: Releasing the jack on the Audi music interface

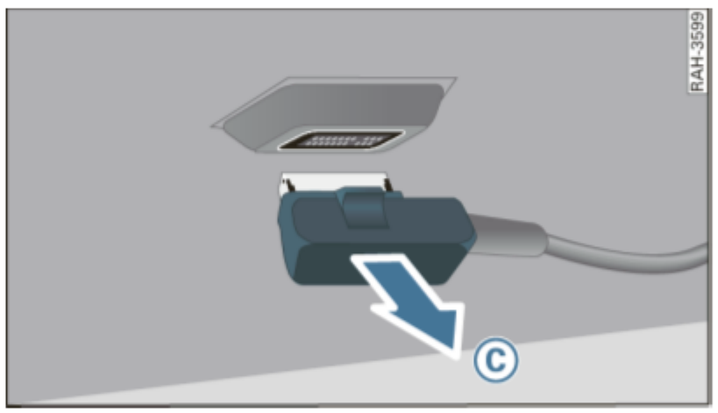


Fig. 12 Adapter cable: Removing the released jack from the Audi music interface

Requirement: The glove compartment must be open.

– Press the jack (A) ⇒ fig. 11 into the Audi music interface* while pressing the release catch (B) on the jack down. The jack is released.
– Hold the release catch down while pulling the jack out of the Audi music interface (C) ⇒ fig. 12. ▶

Note

Remove the connector from the Audi music interface carefully so it is not damaged. ■

Applies to vehicles: with Audi music interface and iPod adapter cable

Connecting an iPod using the iPod adapter cable

The iPod is connected to the Audi music interface with the iPod adapter cable.

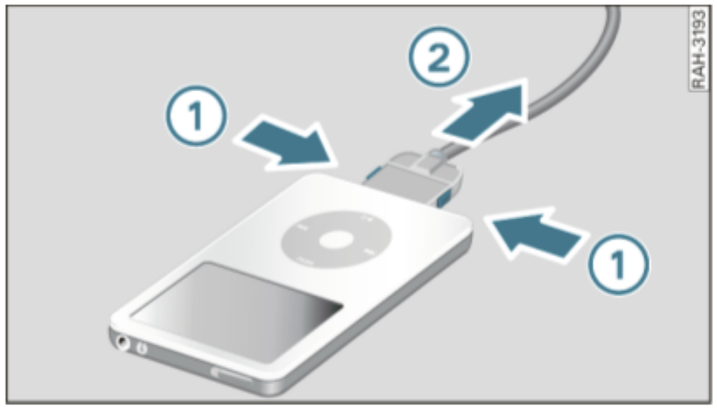


Fig. 13 Disconnecting the iPod jack from the iPod

Connecting the iPod jack

– Connect the iPod adapter cable* to the iPod.

Disconnecting the iPod jack

– Press the buttons (1) to release the catch ⇒ fig. 13.

– Carefully pull the jack out of the iPod (2).

When the vehicle ignition is on, the iPod battery charges through the iPod adapter cable once the iPod is connected to the Audi music interface. Connect the adapter cable to the Audi music interface first and then connect the portable audio device to the Audi music interface.

The following iPods can be connected to the iPod adapter cable*:

- iPod mini - (version 1.3.0 and higher)
- iPod nano 1G, 2G, 3G and 4G
- iPod 4G - fourth generation (version 1.2.1 and higher)
- iPod 5G - fifth generation Video
- iPod 6G - sixth generation classic
- iPod touch
- iPhone

Other iPod versions (such as the iPod shuffle) cannot be connected with the iPod adapter cable*. These can be connected as portable audio devices with the optional 3.5 mm stereo jack adapter cable* ⇒ *page 20*.

The MMI does not support the following iPod functions:

- Rating music tracks
- Skipping to a certain place in a track
- Adding tracks to the “On-the-go” playlist
- Displaying the “Compilations” folder. Also, tracks marked with “Part of a Compilation” are not entered into the artist list if Compilation was activated in the iPod.
- Marking viewed/new Podcasts

Tips

- Only use the adapter cable with the number 4F0 051 510 K to connect an iPod.
- Problems with the iPod can affect operation of the MMI. Reset your iPod if this is the case (refer to the iPod instruction manual).
- For additional information on operating the iPod through the MMI, refer to ⇒ *page 49*.
- Refer to the iPod instruction manual for important information on operating your iPod.
- Audi recommends updating the iPod software to the latest version. ■

Applies to vehicles: with Audi music interface and USB/Mini USB adapter cable

Connecting a portable audio device with the USB/Mini USB adapter cable

You can connect various USB storage devices to the Audi music interface with a USB/Mini USB adapter cable.

The Audi music interface supports USB storage devices from “USB Device Subclasses 1 and 6”. The manufacturer of the storage device can provide information about its “USB Device Subclass”.

The following USB storage devices are supported:

- USB sticks
- USB MP3 players that do not require any special driver software
- External USB flash memory
- External USB hard disks (HDD) - 1", 1.8", 2.5" - drives with an operating/continuous current of 500 mA maximum

For information on the properties of supported file formats, refer to ⇒ *page 9*.

For instructions on operating the USB storage device through the MMI, refer to ⇒ *page 49*.

Tips

- MTP players and USB hubs are not supported.
- Do not use USB extension cables or adapters. They may affect the functionality.
- Functionality is not guaranteed for portable audio devices that do not meet the USB 2.0 specification.
- The USB storage device connection was tested with a variety of products on the market. However, it is possible that some memory cards may not be recognized.
- An iPod cannot be connected to the Audi music interface with a USB adapter cable*. An iPod adapter cable* ⇒ *page 17* must be used. ■

Applies to vehicles: with Audi music interface and 3.5 mm stereo jack adapter cable

Connecting a portable audio device with the 3.5 mm stereo jack adapter cable

You can connect portable audio devices such as MP3 players to the Audi music interface with the 3.5 mm stereo jack adapter cable.

– Insert the 3.5 mm stereo jack in the headphone socket on the portable audio device. Audio playback takes place through the vehicle sound system.

If the external audio input or Audi music interface is already selected as the **Source** ⇒ *page 49*, fig. 46, you may hear static when connecting or disconnecting the 3.5 mm stereo jack or the audio device connected to the stereo jack. To avoid this static, either mute the portable audio device ⇒ *page 33* or switch to another audio source (such as radio ⇒ *page 42* or CD) before connecting or disconnecting the device.

Tips

We recommend adjusting the volume of the portable audio device to approximately 70 percent of the maximum output. The volume can be adjusted (for example at the radio volume) ⇒ *page 56*. ■

Cell phone prep

Applies to vehicles: with cell phone prep

Introduction

A cell phone is paired with the cell phone prep via Bluetooth.

The factory-installed cell phone package in the vehicle allows you to connect particular GSM or CDMA cell phones via Bluetooth ⇒ *page 22*. Calls can be made wirelessly through the cell phone prep hands-free system. You can operate your cell phone through the MMI control panel ⇒ *page 70*, multifunction steering wheel ⇒ *page 101* or voice recognition system ⇒ *page 106*.

⚠ WARNING

- **Medical experts warn that cell phones can interfere with the function of pacemakers. Always maintain a minimum distance of 20 centimeters between the cell phone antenna and the pacemaker.**
  - **Do not carry the cell phone in a pocket directly over the pacemaker when the phone is switched on.**
  - **Switch the cell phone off immediately if you suspect it may be interfering with the pacemaker.**
- **Do not use voice recognition system ⇒ *page 106* in emergencies because your voice may change in stressful situations. It may take longer to dial the number or the system may not be able to dial it at all. Dial the emergency number manually.**

Note

- Obey all applicable laws regarding use of telephones in vehicles.
- Switch your cell phone off in areas where use of cell phones is prohibited.
- Switch your cell phone off in areas at risk for an explosion. These locations are not always clearly marked. They may include gas stations, equipment that stores or transports fuel or chemicals, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour or sawdust) may be present in the air. This also applies to all other locations where you would normally switch your vehicle off.

Tips

- The telephone functions depend on whether your cell phone is compatible with the cell phone prep or not and if the cell phone service provider supports these functions.
- For up-to-date information on the cell phone prep, visit www.audiusa.com/telephone or your authorized Audi dealer.
- The cell phone prep is designed for use in GSM and CDMA networks. ■

Starting

Applies to vehicles: with cell phone prep

Introduction

Bluetooth must be activated to establish a Bluetooth connection between the cell phone prep and the cell phone. Your cell phone must be *visible to others* ⇒ *page 76*.

The cell phone must be paired one time with the cell phone prep in the vehicle. The steps required for this procedure depend on the cell ▶

phone you are using. First, the system searches for available Bluetooth devices within range ⇒ *page 22*.

Pairing Bluetooth-compatible devices

There must not be any other Bluetooth devices connected to the cell phone prep during the pairing procedure. The cell phone that will be paired must not be connected to any other Bluetooth device. Also follow the instructions displayed on your cell phone.

There may be several cell phones paired with the cell phone prep, but only one cell phone at a time can be actively connected to the cell phone prep.

The Bluetooth connection range is limited to inside the vehicle. It also depends on the current circumstances and on interference with other devices.

Establishing and disconnecting the Bluetooth connection

An operational cell phone which has been bonded to the cell phone package is automatically connected after the ignition is switched on. For some cell phones you have to confirm the connection.

The Bluetooth connection is disconnected after the ignition key is removed.

Tips

For current information on pairing cell phones with the cell phone prep, visit www.audiusa.com/telephone or your authorized Audi dealer. ■

Applies to vehicles: with cell phone prep

Searching for Bluetooth-compatible devices

There are two ways to search for Bluetooth-compatible devices.



Fig. 14 Searching for new cell phones

Requirement: The MMI Bluetooth function must be activated ⇒ *page 76*.

Searching for cell phones

- Make sure the Bluetooth in your cell phone is activated. Your cell phone must be visible to others ⇒ *page 76*.
- Press the TEL function button. The message **Please connect cell phone.** appears in the MMI display.
- Turn the control knob to **Search for new cell phone** ⇒ fig. 14 and press the knob. The available Bluetooth cell phones are shown in the MMI display.

Searching for Bluetooth devices

- Press the SETUP function button. ▶

- Press the **Bluetooth** control button. The **Bluetooth** menu appears in the MMI display.
- Turn the control knob to **Find Bluetooth devices** and press the knob. The available Bluetooth devices are shown in the MMI display.

The **Find Bluetooth devices** function shows all of the Bluetooth devices within range in the MMI display.

Tips

The MMI only recognizes some cell phones through the Find Bluetooth devices function. ■

Applies to vehicles: with cell phone prep

Pairing a cell phone

Bluetooth technology allows a cell phone to be connected wirelessly to the vehicle MMI.



Fig. 15 The cell phone is paired with the cell phone prep and connected.

Requirement: An available cell phone must be shown in the MMI display ⇒ *page 22*.

- Turn the control knob to a cell phone and press the knob.
- To pair the cell phone, turn the control knob to **Handsfree** and press the knob. A 4-digit PIN is shown on the MMI display.
- To enter the 4-digit PIN that is displayed, select **Yes**. Enter the PIN in the cell phone when the vehicle is stationary. The time allowed for entering the PIN is limited to approximately 30 seconds, or
- To enter any 4- to 16-digit PIN, select **No**. Enter any 4- to 16-digit pin in the speller ⇒ *page 31*. Then enter that PIN in the cell phone when the vehicle is stationary. The time allowed for entering the PIN is limited to approximately 30 seconds.
- Confirm the pairing on the cell phone if requested. The cell phone symbol (1) ⇒ fig. 15 appears in the status line of the MMI display when the pairing process is complete.

Tips

You can find additional information about connecting your cell phone in your cell phone operator's manual. ■

Applies to vehicles: with cell phone prep

Directory entries

The cell phone entries are automatically loaded in the MMI.

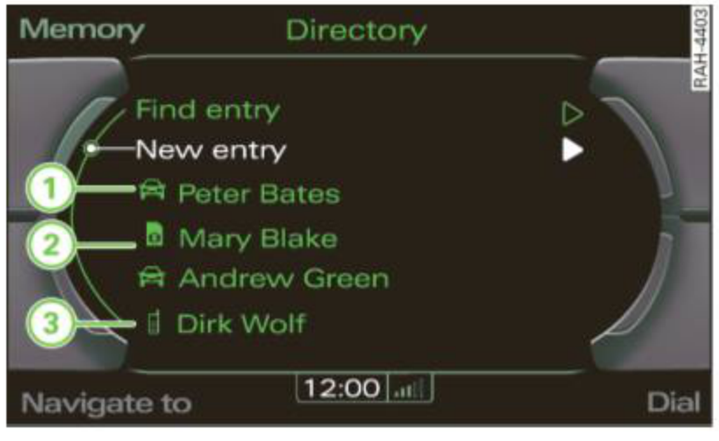


Fig. 16 Searching for an entry in the directory

Loading directory entries

The directory entries load automatically in the MMI after the ignition is switched on. This loading process can last several minutes and depends on the number of entries in the directory.

Directory entries can be stored in a general profile and in up to four personal profiles ⇒ *page 68*.

Displaying directory entries

The directory entries are displayed in alphabetical order and identified with a symbol:

① Local MMI memory
② SIM card
③ Cell phone

Private and business entries with land line, cell phone and fax categories can be saved in the address cards.

Tips

- The directory entry display in the MMI depends on the cell phone used.
- The directory entries from the cell phone may not be transferred in alphabetical order. If there are too many directory entries, entries with different first letters may be missing in the MMI. ■

NAV

Memory
- Last destinations
- Load from directory
- Load tour plan
- Store in directory
- Store current position
- Store tour plan
- Delete tour plan
- Delete last destinations

Nav-Info
- Destination/stopover info
- Tel. number for special destination
- Arrival time
- Distance
- Satellites received
- Postition data
- Longitude, latitude and altitude of your current postition

Route
- Route list
- Route criteria
- Avoid route from here

Map/Destination
- Map
- Zoom
- Select Destination with Joystick
- Map side menu
- Enter destination via address

INFO

- Traffic reports



RAH-4404

CAR

Systems
- Audi drive select individual
- Parking system
- Audi side assist
- Oil level
- Tire pressure monitoring
- Service interval display
- Windshield wipers
- Instrument cluster
- Exterior lighting
- Seat adjustment
- Central locking
- Vehicle ID number (VIN)

AC
- See Owner's Manual

SETUP

Time
- Time
- Date
- Time format
- Date format

Display
- Brightness

Settings
- Menu language
- Measurement units
- Voice recognition
- Default settings
- Data password
- Version information
- Customer update

Bluetooth
- Bluetooth
- Discovery Mode
- Find Bluetooth devices
- Paired devices
- Bluetooth name
- Delete Bluetooth devices



Fig. 17 Overview of MMI menus

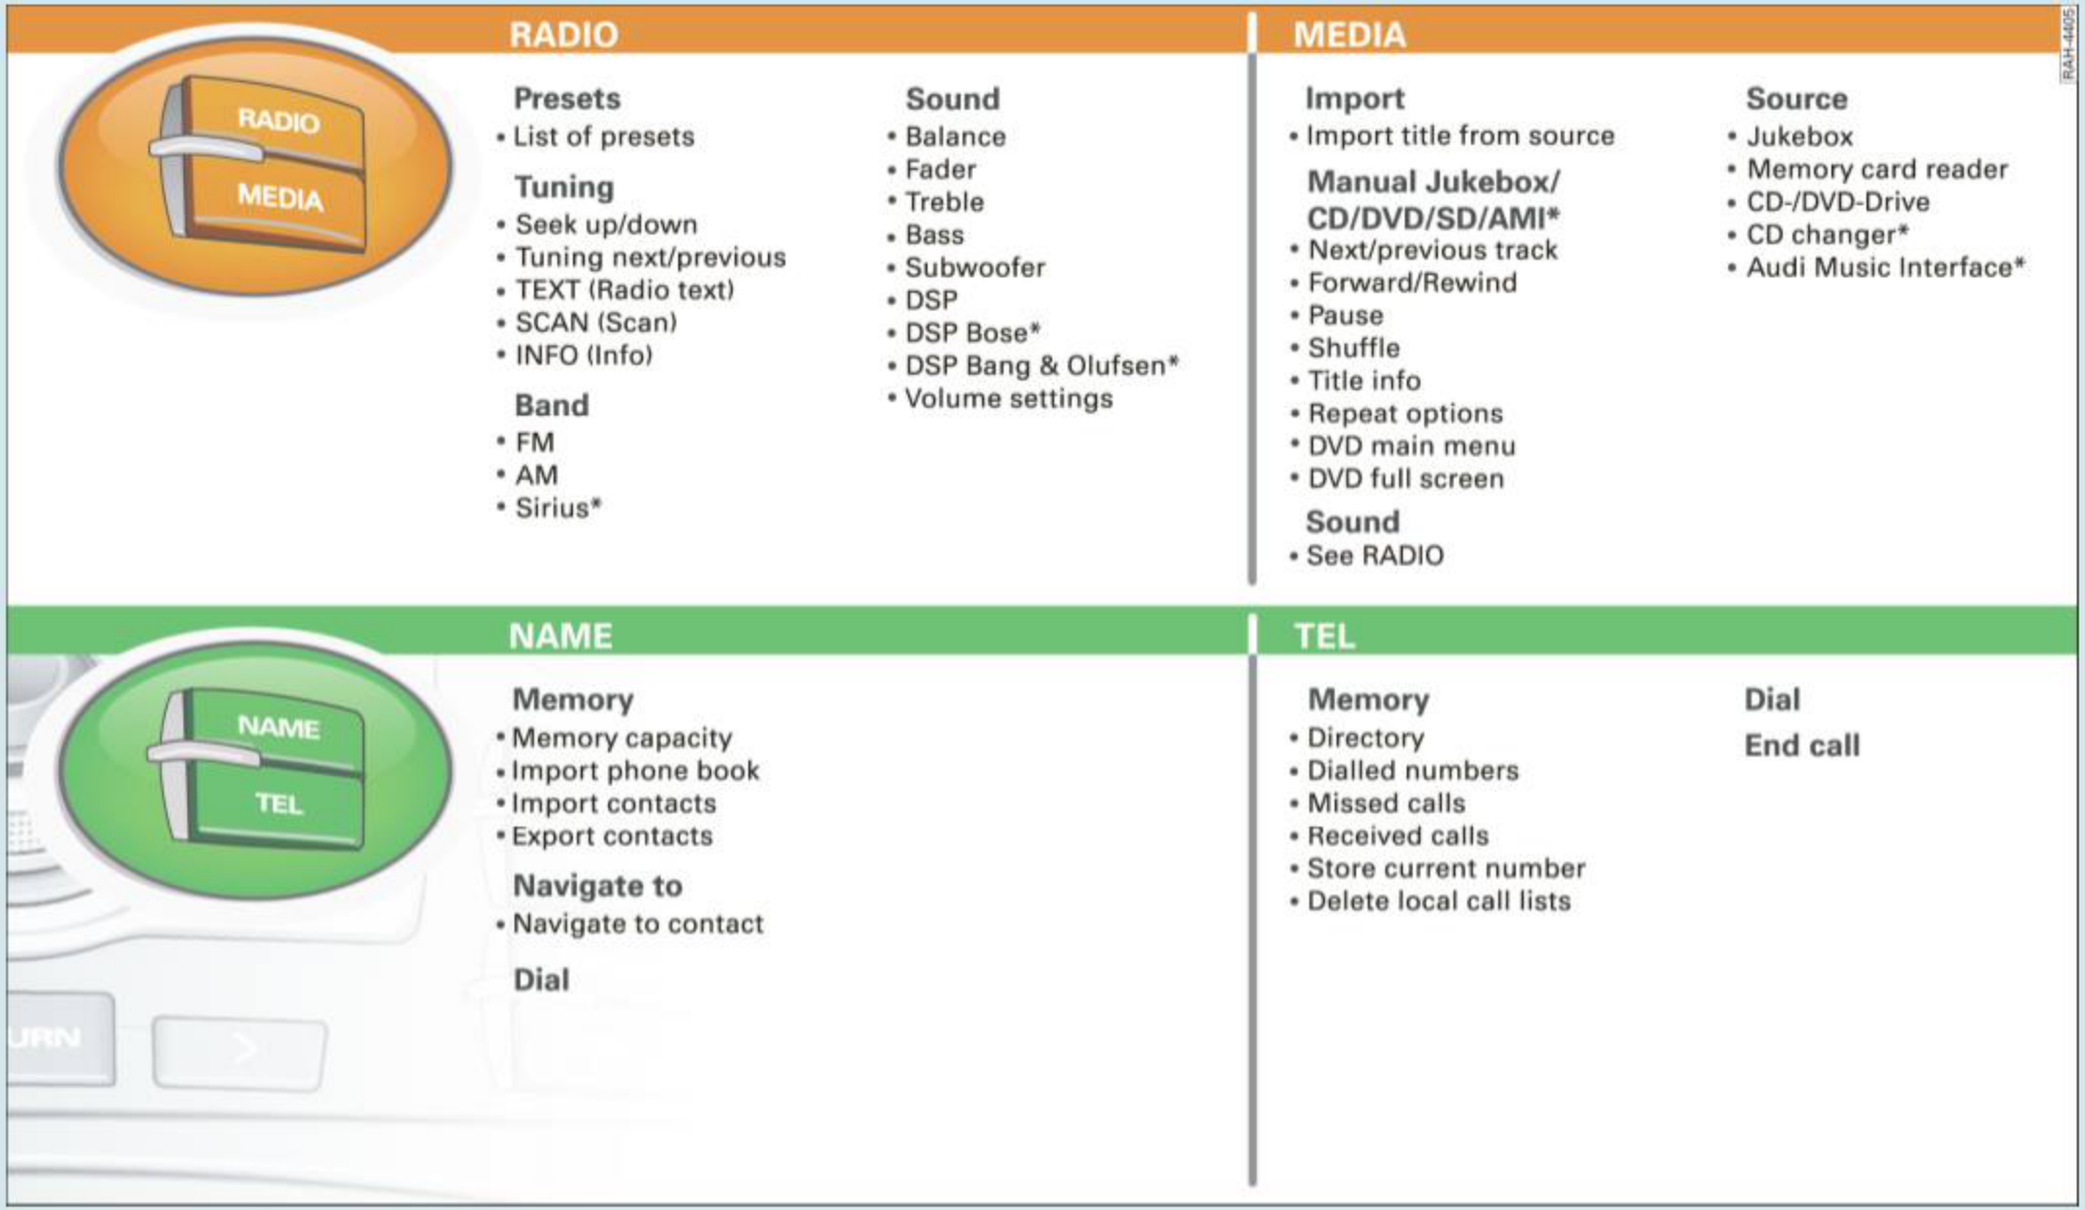


Fig. 18 Overview of MMI menus

General operation

All MMI menus at a glance

In the menu structure ⇒ *page 26*, fig. 17 and ⇒ *page 27*, fig. 18 you can find the options that can be selected for the individual main functions.

Tips

The menu items shown may differ depending on your vehicle's equipment. ■

Switching on/off



Fig. 19 On/Off knob

Vehicles without convenience key*

- To switch the MMI on, switch the ignition on. The menu for the last main function selected is displayed. The audio/video source that was playing last is switched on.
- To switch the MMI off, remove the ignition key. Your settings are saved.

Vehicles with convenience key*

- Press the START button to switch the MMI on ⇒ *page 29*, fig. 20.
- Press the STOP button twice to switch the MMI off. Your settings are saved.

Manual operation

- Press the On/Off knob briefly to switch the MMI on ⇒ fig. 19.
- To switch the MMI off, press and hold the On/Off knob until the MMI switches off.

An MMI that has been switched off manually does *not* switch on again automatically the next time the ignition is switched on.

The MMI can still be operated for approximately ten minutes after switching the ignition off. If you do not press any function button, control button, or the control knob on the MMI control panel within this time, the MMI automatically switches off again.

Tips

- With the engine not running and a low battery charge, MMI switches off automatically.
- If you only press the On/Off knob briefly, the selected audio source is muted ⇒ *page 33*. ■

Operating the system

Press and turn the buttons on the MMI control panel to perform the MMI functions.

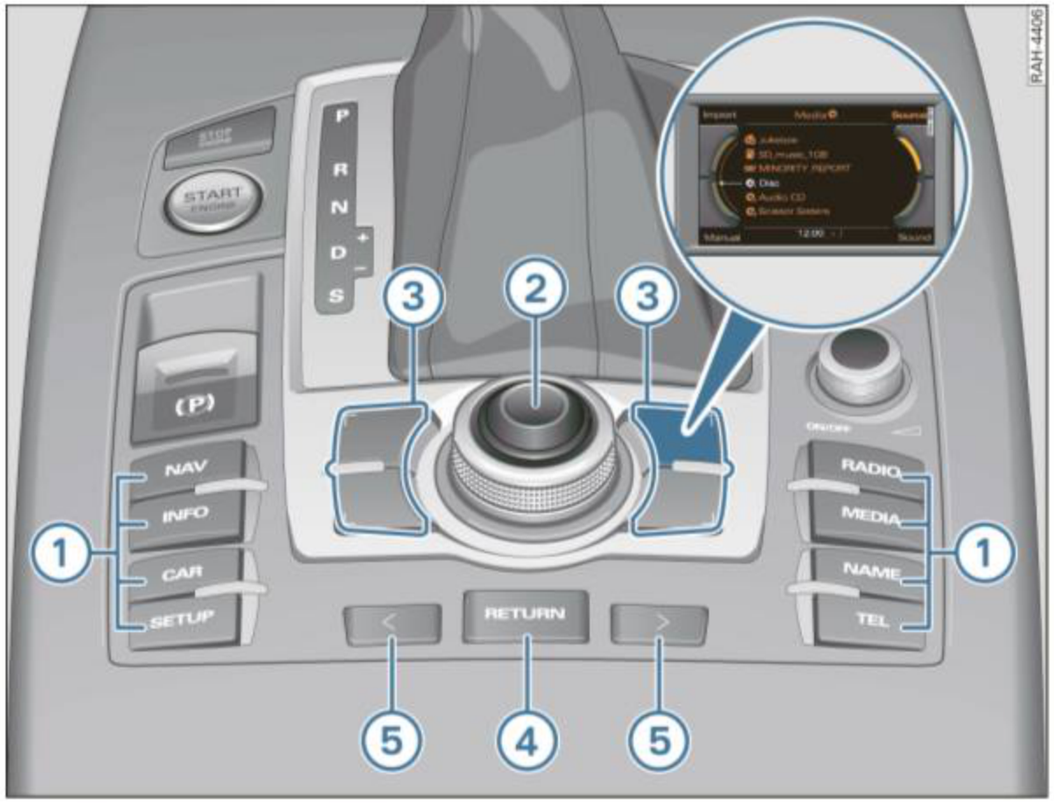


Fig. 20 Buttons on the MMI control panel

① Function buttons

Press a function button to start an operating mode. For example, press the RADIO function button to start the **Radio** mode.

You can open additional settings for the active operating mode using the SETUP function button.

② Control knob with joystick

Turn the control knob to the left or right and press it to select a menu item in the MMI display. You can use the joystick to move the crosshairs in a map or to control the DVD menu ⇒ *page 32*.

④ Return button

Press the RETURN button to cancel a selection you have not yet confirmed or to return to the next higher menu level.

⑤ Arrow buttons

To select the previous or the next radio station, press the < or the > button.

Press the > button to select the next track on a CD or a connected iPod. If you press the < button within 10 seconds after a track has started to play, playback jumps to the beginning of the previous track.

Press and hold the < or > button in CD or SD mode to rewind or fast forward. ■

MMI Display

"Standard" menus

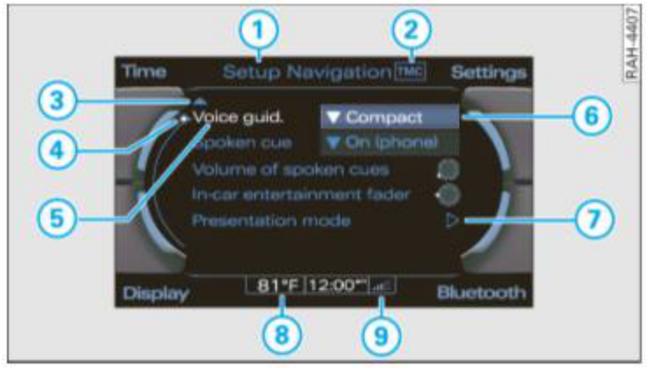


Fig. 21 Navigation Setup



Fig. 22 Radio submenu

A menu appears in the MMI display after you press a function button ⇒ *page 29*.

Legend	Symbol/ Description	Explanation
①	Title line	Selected mode (such as Radio ⇒ fig. 22) Setup display: Setup menu for the selected mode (for example Navigation Setup ⇒ *page 29*, fig. 21). On vehicles with the cell phone prep*, the cellular service provider is displayed.
②	TMC symbol	Reception of TMC traffic reports ⇒ *page 96*
③	Arrows pointing up/down	Indicate there are additional menu items (scroll forward/back).
④	Cursor	Shows a line selected in a menu.
⑤	Selected text	A menu item you have selected has a white background.
⑥	Options box	Options for the menu item selected.
⑦	Arrow	Points to additional options or possible settings.
⑧	Temperature display	Temperature selected on vehicles with an automatic air conditioning system.
⑨	Signal strength bar*	Cell phone connection quality
⑩	Display corners	Show selectable functions. You perform the functions using the control buttons. The top right corner of the display corresponds to the top right control button.
⑪	Subtitle	Tells you about a selected option (e.g. radio station preference).
⑫	Control wheel	Is operated by turning and pressing the control knob.
⑬	Mute symbol	The active audio source is muted.
⑭	Time	Set time.
⑮	Bluetooth symbol*	Active Bluetooth connection.

Speller

You can enter addresses, navigation destinations and telephone numbers with the speller.

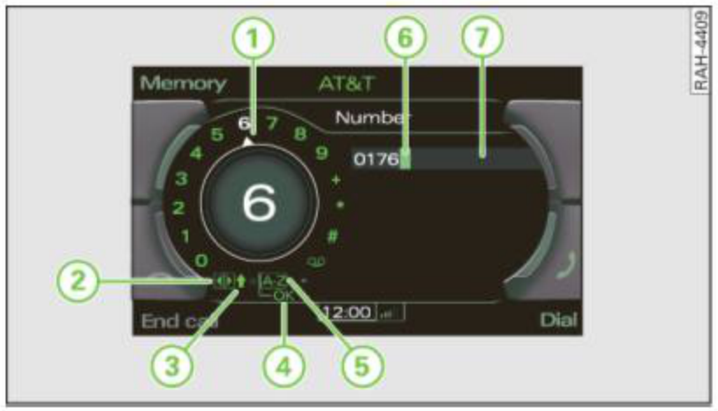


Fig. 23 Number speller: entering a telephone number

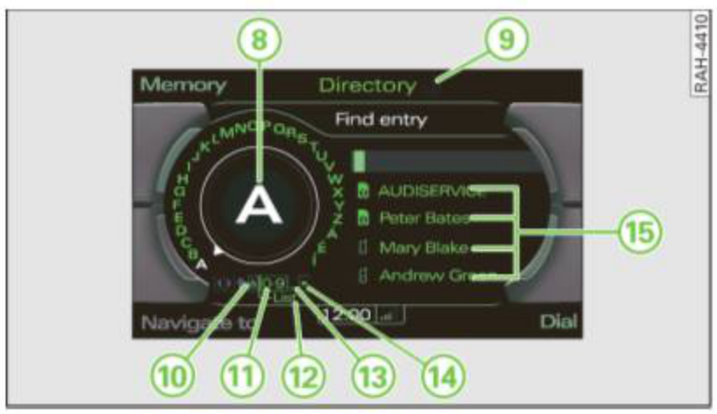


Fig. 24 Letter speller: searching for a directory entry

With some functions in the directory, it is necessary to enter letters or numbers in Telephone* or Navigation mode. The number speller ⇒ fig. 23 or the letter speller ⇒ fig. 24 appears in the display.

While you are making your entry, you can switch as needed from numbers to letters or from letters to numbers by turning the control knob **0-9** (11) ⇒ fig. 24 or **A-Z** (5) ⇒ fig. 23 and pressing the knob.

All of the symbols for entering letters and numbers are explained in the table below:

Legend	Symbol/ Description	Explanation
(1)	Selection arrow	Puts a white background behind the selected element and shows it enlarged in the entry ring.
(2)	◀▶	Moves the cursor forward/backward in the entry field.
(3)	⬆	Switches from lower case to upper case.
(4)	OK	Confirms the entry.
(5)	A-Z	Switches from number to letter entry.
(6)	Cursor	Marks the current editing position.
(7)	Entry field	Shows the current entry
(8)	Entry ring	Shows the character selected with the selection arrow enlarged.
(9)	Update symbol	Indicates the data is updating.
(10)	â	Indicates a list with special characters depending on the language.
(11)	0-9	Switches from letter to number entry.
(12)	LIST	Shows a list of suggestions.
(13)	⎵	Inserts a space in the entry field.
(14)	⬅	Deletes the character to the left of the white highlighted cursor.
(15)	List with suggestions	Lists suggestions in alphabetical order.

Entering letters, numbers and symbols using the speller

For an overview of the speller, refer to ⇒ *page 31*.

Entering numbers, letters, and symbols

- Turn the control knob with the selection arrow (1) ⇒ *page 31,* fig. 23 to the letter, number or symbol. Your selection is shown enlarged in the entry ring (8) ⇒ *page 31,* fig. 24.
- To accept the letter, the number or the symbol, press the control knob. Your entry appears in the entry field (7) ⇒ *page 31,* fig. 23.
- When you have entered all the digits, turn the control knob to **OK** (4) ⇒ *page 31,* fig. 23 and press the knob.

Deleting numbers, letters, and symbols

- Turn the control knob with the selection arrow to ⬅ (14) ⇒ *page 31,* fig. 24.
- Press the control knob to delete the last character in the entry field.
- To delete all the characters in the entry field, hold the control knob down until they are all deleted.

In some cases such as in the Navigation menu, the selection of letters may be limited to available entries. Only letters that are part of an available word can be selected.

Enter special characters such as the hyphen or period) with the number speller ⇒ *page 31,* fig. 23. ■

Joystick

You can move the crosshairs in a map or control the main menu for a video DVD with the joystick.

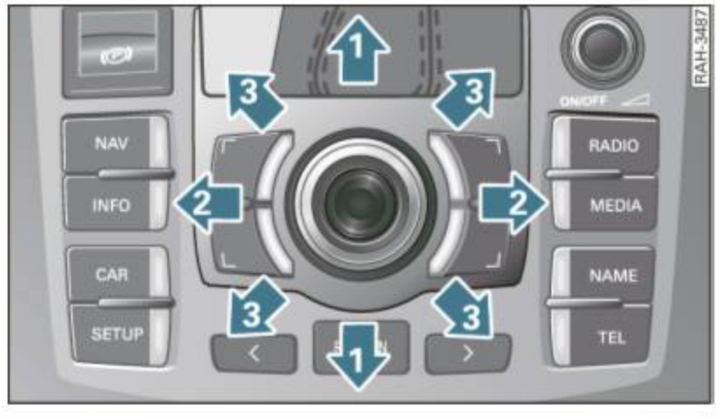


Fig. 25 MMI control panel: possible joystick movements

Requirement: A map must be visible in the MMI display ⇒ *page 87* or a video DVD must be playing ⇒ *page 49*.

Moving the crosshairs in a map

- To move the crosshairs in a map vertically (1) ⇒ fig. 25, move the joystick up or down.
- To move the crosshairs in a map horizontally (2), move the joystick to the right or left.
- To move the crosshairs in a map diagonally (3), move the joystick up or down to the right or left.

Controlling the DVD main menu

- Press the **Manual** control button.
- Turn the control knob to **MENU** (show main menu) ⇒ *page 53*. The DVD main menu is shown in the MMI display. ▶

- Move the joystick up or down (1) or right or left (2) to select a menu item.
- Press the control knob to confirm the menu selection. DVD mode continues. ■

Switching the MMI display on or off



Fig. 26 Button for switching the MMI display on or off

The MMI display switches on automatically when the MMI switches on. It switches off again automatically when the MMI and the ignition are switched off.

You can press the button ⇒ fig. 26 to switch the MMI display on or off manually.

Tips

- On vehicles with the cell phone prep*, if a call is made while the MMI display is switched off, the display will switch on automatically and remain on for the duration of the call.
- You can still change radio stations or find a selected audio/video source using the *arrow buttons* once the display is switched off. ■

Adjusting the volume

Active audio/video source

You can adjust the volume or mute the audio sources using the On/Off control knob.



Fig. 27 Adjusting the MMI volume and muting

Adjusting the volume

- Turn the On/Off knob to the right or left. The adjusted volume is stored.

Muting

- Press the On/Off knob briefly. A speaker symbol with a line through it appears in the MMI display. An active audio/video source is stopped.
- To cancel the muting, press or turn the On/Off knob briefly.

Volumes that are too high or too low are automatically set to a predetermined level when the MMI is switched on. ▶

Tips

You can also adjust the volume using the right thumb wheel on the multifunction steering wheel without taking your hands off the ⇒ *page 99*. ■

Additional audio sources

The volume of the navigation announcements, voice recognition system and telephone can be adjusted individually.*



Fig. 28 Volume settings

- Press the **Sound** control button while in the Media or Radio menu ⇒ fig. 28.
- Turn the control knob to **Volume settings**.
- Press the control knob. The **Volume settings** menu appears in the MMI display ⇒ fig. 28.
- Turn the control knob to a menu item such as **Voice recognition volume** and press the knob.
- Turn the control knob to the left or right to adjust the volume as desired.
- Press the control knob to confirm the setting.

The system automatically plays a test announcement while you are adjusting the volume.

Tips

- With the **In-car entertainment fader**, you can lower the volume of the active audio/video source during navigation announcements or when the Audi parking system* is active ⇒ *page 40*.
- On vehicles with a VDA-compatible phone upgrade, you will achieve the best sound quality if you adjust the input volume on the device to a medium level. ■

Adjusting the sound

Basic settings



Fig. 29 Selecting balance



Fig. 30 Adjusting balance

– Press the **Sound** control button while in the Media or Radio menu ⇒ *page 34,* fig. 29.

– Turn the control knob to a menu item such as **Balance** ⇒ *page 34,* fig. 29 and press the knob. The selected menu item is shown enlarged in the MMI display ⇒ fig. 30.

– Turn the control knob to the right or the left to adjust the sound characteristics.

– Press the control knob to confirm the setting.

The following sound adjustments are possible:

- Balance (right/left sound ratio)
- Fader (front/rear sound ratio)
- Treble
- Bass
- GALA (speed dependent volume control)
- Subwoofer* (additional bass amplification)[1)]
- DSP* ⇒ *page 35*
- DSP Bose* ⇒ *page 36*
- DSP Bang & Olufsen* ⇒ *page 36*
- Volume settings (for additional audio sources) ⇒ *page 34*

Treble and bass settings apply to the active mode. The balance and fader settings are independent of the mode. ■

1) The subwoofer cannot be adjusted in vehicles with Band & Olufsen* or Bose* sound systems.

Applies to vehicles: with DSP

Digital Signal Processing (DSP)

With Sound Focus, the sound can be optimized for the listener. GALA adjusts the volume and the sound characteristics to the vehicle speed.

Displaying the DSP menu

– Press the **Sound** control button while in the Media or Radio menu.

– Turn the control knob to **DSP** and press the knob. The **DSP** menu appears in the MMI display.

Sound Focus

– Turn the control knob to **Sound Focus** and press the knob.

– To achieve a symmetrical sound distribution, turn the control knob to **All** and press the knob.

– To achieve a driver-oriented sound distribution, turn the control knob to **Driver** and press the knob.

GALA

– Turn the control knob to **GALA** and press the knob.

– Turn the control knob to **Active** or **Inactive**.

– Press the control knob to save your setting. ■

Applies to vehicles: with DSP BOSE - Surround Sound

DSP BOSE®

With Sound Focus, the sound can be optimized for the listener. Surround Level regulates the volume of the surround effect. AudioPilot™ adjusts playback volume depending on noise inside the vehicle.

Showing the DSP Bose menu

- Press the **Sound** control button while in the Media or Radio menu.
- Turn the control knob to **DSP BOSE** and press the knob. The **DSP BOSE** menu appears in the MMI display.

Sound Focus

- Turn the control knob to **Sound Focus** and press the knob.
- To achieve a symmetrical sound distribution, turn the control knob to **All** and press the knob.
- To adjust the sound so it is oriented to the front or rear of the vehicle, turn the control knob to **Front**/**Rear** and press the knob.
- To create a surround sound effect in the front or rear, turn the control knob to **Surr. front**/**Surr. rear** and press the knob.

Surround Level

- Turn the control knob to **Surround level** and press the knob.
- To adjust the volume of the surround effect for the active audio source, turn the control knob to the right or left and press it.

AudioPilot™

- Turn the control knob to **AudioPilot™** and press it.
- To automatically adjust playback volume to the noise level inside the vehicle, turn the control knob to **Active** and press.
- To deactivate dynamic driving noise compensation, turn the control knob to **Inactive** and press. ■

Applies to vehicles: with DSP Bang & Olufsen - Surround Sound

DSP Bang & Olufsen®

With Sound Focus, the sound can be optimized for the listener. Surround Level regulates the volume of the surround effect.

Displaying the DSP Bang & Olufsen menu

- Press the **Sound** control button while in the Media or Radio menu.
- Turn the control knob to **DSP Bang & Olufsen** and press the knob. The **DSP Bang & Olufsen** menu appears in the MMI display.

Sound Focus

- Turn the control knob to **Sound Focus** and press the knob.
- To adjust the sound so it is the same for the entire vehicle interior, turn the control knob to **All** and press the knob.
- To achieve a driver-oriented sound distribution, turn the control knob to **Driver** and press the knob.
- To adjust the sound so it is oriented to the front or rear of the vehicle, turn the control knob to **Front**/**Rear** and press the knob.

▶

Surround Level

- Turn the control knob to **Surround level** and press the knob.
- To change the surround effect, turn the control knob to the right or left and press the knob.

Volume balancing

- Turn the control knob to **Volume balancing** and press the knob.
- To adjust dynamic driving noise compensation, turn the control knob to the right or left and press the knob. ■

Setting the time

You can choose between the quartz clock and the radio clock. You enter the time and date yourself with the quartz clock. The radio clock* sets the time and date automatically.*



Fig. 31 Setting time

Opening the time setting menu

- Press the SETUP function button.
- Press the **Time** control button. The time setting menu appears in the MMI display.

Selecting the time source*

- Turn the control knob to **Time source** and press the knob.
- Turn the control knob to **quartz clock** or **radio clock*** and press the knob. The **radio clock*** source is indicated by the “radio clock reception signal” in the tachometer.

Setting the time with quartz time source

- Turn the control knob to **Time** and press the knob ⇒ fig. 31. The hour display is highlighted in white in the MMI display.
- To set the hour, turn the control knob to the left or right and press the knob. The minute display is highlighted in white in the MMI display.
- To set the minutes, turn the control knob to the left or right.
- Press the control knob to save the time you have set.

Setting the date with quartz time source

- Turn the control knob to **Date** and press the knob ⇒ fig. 31. The day display is highlighted in white in the MMI display.
- To set the day, turn the control knob to the left or right and press the knob. The month display is highlighted in white in the MMI display.
- To set the month, turn the control knob to the left or right and press the knob. The year display is highlighted in white in the MMI display. ▶

- To set the year, turn the control knob to the left or right.
- Press the control knob to complete the date entry.

Setting the time format

- Turn the control knob to **Time format** and press the knob ⇒ *page 37,* fig. 31.
- Turn the control knob to **24h** or **am/pm**.
- Press the control knob to save your setting.

Setting the date format

- Turn the control knob to **Date format** and press the knob.
- To adjust the date format “Day.Month”, turn the control knob to **dd.mm** and press the knob ⇒ *page 37,* fig. 31.
- To adjust the date format “Month/Day”, turn the control knob to **mm/dd** and press the knob.

Tips

If the radio clock* does not receive a radio signal for three days, it automatically switches to the quartz clock. ■

Restarting the MMI (Reset)

MMI functionality is restored with a specific button combination.



Fig. 32 Button combination to restart the MMI

- Press and hold the SETUP function button (1) ⇒ fig. 32, the control knob (2) and the upper right control button (3) *at the same time*.
- Release the buttons. The MMI system switches off and then restarts. ■

Additional settings

MMI menu language

- Select: SETUP function button > **Settings** control button > **Menu language**.

The displays in the MMI display and driver information system and the language for the navigation announcements and voice recognition system can be changed.

English, French and Spanish are available. ■

Measurement units

– Select: SETUP function button > **Settings** control button > **Measurement units**.

The following measurement units can be set in the MMI display and driver information system.

- Distance (miles or kilometers)
- Speed (mph or km/h)
- Temperature (°F or °C)
- Pressure (psi or bar)
- Consumption (mpg (US), l/100 km, mpg (UK) or km/l)
- Volume (gallon (US), liter or gallon (UK) ■

Voice recognition system

– Select: SETUP function button > **Settings** control button > **Voice recognition**.

Short dialogue

When **Short dialogue** is activated, a shorter form of the voice recognition announcements is used.

Input signal

You can switch the **Beep** input signal during a dialogue on or off.

Individual training

Individual training improves the recognition function of the voice recognition system by adapting it to your voice or pronunciation. Individual training is comprised of 40 speech entries that consist of commands and sequences of numbers.

For an overview of all voice commands, refer to ⇒ *page 106,* fig. 107.

Erasing all name tags

All of the name tags you have stored (spoken names or telephone numbers) are erased.

Tips

Individual training can only be performed when the vehicle is stationary. ■

Factory settings

– Select: SETUP function button > **Settings** control button > **Default settings**.

You can reset the following functions to the default setting:

- Sound settings
- Radio
- Media settings
- Jukebox
- Directory
- Telephone*
- Bluetooth*
- Navigation settings
- Navigation memory
- Voice recognition system

After selecting the functions, turn the control knob to **Reset selected systems**. Confirm your entry by turning the control knob to **Yes** and pressing it.

You can also reset all of the functions listed to the factory default settings by activating the **Select all** option.

If you reset the **Jukebox** to default settings, all of the music files are deleted and the **Media settings** are reset. ■

Brightness of the MMI display

– Select: SETUP function button > **Display** control button.

You can adjusting the brightness of the display by turning the control knob to the right or left. ■

Version information

– Select: SETUP function button > **Settings** control button > **Version information**.

This function shows the MMI and navigation software version. ■

Data password

– Select: SETUP function button > **Settings** control button > **Data password**.

You can protect your personal data such as directory entries, navigation destinations and name tags with a personal password. If the unit is replaced, you can only transfer your personal data to the new MMI unit using your password.

Tips

If you do not assign a personal password, “MMI3G” is stored in the MMI automatically as the password. ■

In-car entertainment fader

– Select: MEDIA function button > SETUP function button > **In-car entertainment fader**.

With the **In-car entertainment fader**, you can lower the volume of the active audio/video source during navigation announcements or when the Audi parking system* is active.

You can also adjust the **In-car entertainment fader** in the Radio, Navigation or Car modes. ■

Listening to the radio

Introduction



Fig. 33 FM station list



Fig. 34 Sirius station list during loss of reception

The radio has three bands: FM, AM and Sirius* (satellite radio). The receivable stations are shown on a radio station list and can be selected directly. You can select the next receivable station on the MMI control panel by pressing a button or playing all stations for a few seconds (SCAN). You can also save your favorite stations in a preset list in any order.

FM band

The FM station list (maximum 75 stations) is updated automatically.

AM band

The AM station list (maximum 165 stations) must be updated manually ⇒ *page 42,* fig. 36.

The stations in the station list are still displayed after leaving the reception area. Reception is lost.

Sirius (satellite radio)*

The Sirius provider automatically updates the Sirius* station list (maximum 224 channels). If the last channel playing is no longer available after a station list update, channel 184 will play automatically.

If reception is lost, stations that cannot be received will be identified with the symbol (1) ⇒ fig. 34. The symbol disappears when the radio stations are received again.

Tips

To receive satellite programs, you must contract the Sirius* service provider ⇒ *page 42*. ■

Applies to vehicles: with Satellite Digital Audio Radio Service

System information

The following system messages can be displayed: ▶

System messages	Meaning
ANTENNA	No antenna is connected to the tuner, or there are loose plug contacts on the antenna cable.
LINKING	The tuner is presently not receiving any satellite signal.

Starting radio mode



Fig. 35 Station list in the FM band



Fig. 36 Station list in the AM band

Requirement: The MMI must be switched on ⇒ *page 28*.

– Press the RADIO function button. The list of stations or the last active radio menu appears in the MMI display.

The menu that was open the last time you listened to the radio is shown in the MMI display. Press the RADIO function button again while in radio mode to open the station list. ■

Applies to vehicles: with Satellite Digital Audio Radio Service

Activating your Satellite Radio service

In order to be able to receive satellite programs and traffic message channel (TMC), this service must be enabled.



Fig. 37 Receiver serial numbers

In order to have the service enabled at your provider, you need the electronic serial number (ESN) of the tuner. To show the electronic serial numbers in the display:

Sirius station list

– Press the **Band** control button.

– Turn the control knob to **Sirius** and press the knob. The station list is displayed. ▶

– Turn the knob to **000 Sirius ID** and press the knob.

Setup menu

– Press the function button SETUP in the Satellite Radio menu.

– Select **Receiver serial numbers** by turning the control knob and press the control knob.

The display shows two serial numbers:

- **Audio** - serial number for the Sirius radio program
- **Data** - serial number for TMC traffic reports

Tips

- Objects such as buildings, tunnels, bridges, terrain, other vehicles or objects on the roof of the vehicle can result in decreased performance.
- Satellite Radio reception is not available in Alaska and Hawaii. ■

Selecting frequency band

The MMI has three bands: FM, AM and satellite radio (Sirius)*



Fig. 38 Frequency bands

Requirement: The radio is on ⇒ *page 42*.

Band control button

– Press the **Band** control button.

– Turn the control knob to the desired frequency band.

– Press the control knob to select the frequency band. The current frequency band is indicated in the title line of the MMI display.

RADIO function button

– To select the frequency band, press the RADIO function button repeatedly until the desired frequency band is shown in the title line of the MMI display.

Tips

You can select the frequency band with the multifunction steering wheel just as easily ⇒ *page 99*. ■

Selecting a station from the station list

The receivable stations for the selected frequency band are displayed in the station lists.



Fig. 39 Station list in the FM band



Fig. 40 Station list in the Sirius band

Requirement: The desired frequency band is selected ⇒ *page 43* and receivable radio stations are shown in the MMI display ⇒ fig. 39.

- Turn the control knob to the desired radio station.
- Press the control knob to select the station.

To update the station list in the AM band, turn the control knob to **Update station list** ⇒ *page 42*, fig. 36 and press the knob. The station lists in the FM band and Sirius* band (satellite radio) are updated automatically.

Tips

You can also perform this function with the multifunction steering wheel ⇒ *page 100*. ■

Selecting the station

Press the knob to select the next station.



Fig. 41 Automatic station search forward (FM band)



Fig. 42 Selecting the station (Sirius band)

Requirement: The desired frequency band must be selected ⇒ *page 43*.

Selecting the next available station (FM/AM band)

– Press the **Tuning** control button.

– Turn the control knob to ▷| (Seek up) ⇒ *page 44,* fig. 41 or |◁ (Seek down).

– Press the control knob. The next receivable station is selected.

Selecting the frequency manually (FM/AM band)

– Press the **Tuning** control button.

– Turn the control knob to **TUNE** and press the knob.

– To adjust the frequency in small stages, turn the control knob to the right or left.

Selecting the channel (Sirius band)

– Press the **Tuning** control button.

– Turn the control knob to **CH** (channel number) ⇒ *page 44,* fig. 42 and press the knob.

– Turn the control knob to the right or left to skip to the next/previous channel in station list.

Tips

• When in the Sirius band, use the ▷| (Skip up)/|◁ (Skip down) function to switch to the next/previous station in the station list.

• You can also press the *arrow buttons* on the MMI control panel briefly to switch to the previous/next station in the station list ⇒ *page 29*.

• A station with poor reception will no longer be displayed in the station list once you switch to a different station. However, you can save the station and select it again from the station list ⇒ *page 46*. ■

Scanning stations

Using the SCAN function, the receivable stations are played for a few seconds.



Fig. 43 SCAN function

Requirement: The desired frequency band must be selected ⇒ *page 43*.

– Press the **Manual** control button.

– Turn the control knob to **SCAN** (Scan) and press the knob.

– Press the control knob again to stop the scan function.

– Press the **Manual** control button. Turn the control knob to **SCAN** (Scan) and press the knob. The current station is selected. ▶

If the scan function is activated in the AM band, the AM band station list will also be updated during the scan process. ■

Storing stations

The preset list can contain up to 50 stations from all frequency bands.



Fig. 44 Storing stations

Requirement: A station list must be displayed ⇒ *page 44*, fig. 39.

Using the control knob

- Press and hold the control knob until the station is stored in the next available position in the preset list and **Store** *Station name* **here** appears in the MMI display.
- To change the position in the preset list, turn the control knob to the left or right.
- Press the control knob to store the station in the selected position.

Using the Memory control button

- Press the **Memory** control button. **Store** *Station name* **here** appears in the MMI display ⇒ fig. 44.
- Press the control knob. The selected station is stored in the next available position in the preset list and **Store** *Station name* **here** appears in the MMI display.
- To change the position in the preset list, turn the control knob to the left or right.
- Press the control knob to store the station in the selected position.

Tips

You can delete an individual station or all stations from the preset list ⇒ *page 47*. ■

Selecting a stored station

Requirement: A station must be stored in the preset list ⇒ *page 46*.

- Press the **Memory** control button. The preset list is displayed.
- To select a station from the preset list, turn the control knob to the station.
- Press the control knob. The station is selected.

Tips

Also try selecting a stored station using the multifunction steering wheel ⇒ *page 100*. ■

Moving stored stations

Requirement: A station must be stored in the preset list ⇒ *page 46*.

- Press the **Memory** control button. The preset list is displayed.
- Turn the control knob to a station and press the knob.
- Turn the control knob to **Move** *Station name* and press the knob. The station is stored in the next available position in the preset list and **Store** *Station name* **here** appears in the MMI display.
- To change the position in the preset list, turn the control knob to the left or right.
- Press the control knob to store the station in the selected position. ■

Additional settings

Station names

Requirement: The FM frequency band must be selected ⇒ *page 43*.

- Select: RADIO function button > SETUP function button > **Station names**.

Scrolling station names

Scrolling text transmitted by the FM stations is shown in the MMI display.

Fixed station names

Scrolling text transmitted by the FM stations is not shown in the MMI display. Only the current section of the scrolling text is displayed.

Station names off

Text transmitted by the FM stations is not shown in the MMI display. ■

Deleting presets

Requirement: A frequency band must be selected ⇒ *page 43* and a station must be stored in the presets list ⇒ *page 46*.

- Select: RADIO function button > SETUP function button > **Delete presets** > **Delete individually** or **Delete all entries**.

Delete individually

Select **Delete individually** by turning and pressing the control knob. Then select the station to be deleted and press the control knob.

Delete all

Select **Delete all entries** by turning and pressing the control knob. All stored stations are deleted from the preset list. ■

Displaying radio text

Requirement: The FM frequency band is selected ⇒ *page 43*.

- Select: Function button RADIO > control button **Tuning** > **TEXT** (Radio text).

Radio texts are additional information transmitted by some stations (e.g. station name, artist or track). ■

Applies to vehicles: with Satellite Digital Radio Service

Song information

Requirement: Satellite Radio is activated ⇒ *page 43*.

– Select: Function button RADIO > control button **Tuning** > **INFO** (Info).

Some radio stations transmit additional information about the program. For example, information about the artist or album could be displayed. ■

Applies to vehicles: with Satellite Digital Radio Service

Station info

Requirement: Satellite Radio must be activated ⇒ *page 43*.

– Select: RADIO function button > SETUP function button > **Station info** > **On** or **Off**.

If information is available for the current track (such as artist or album), it will be displayed in a pop-up window if this function is activated. ■

Applies to vehicles: with Satellite Digital Radio Service

Station sorting

Requirement: The Sirius frequency band must be selected ⇒ *page 43*.

– Select: RADIO function button > SETUP function button > **Station sorting**.

Channel number

The stations are listed by channel number in ascending order.

Channel name

The station categories are listed in the main menu in alphabetical order.

Category and channel no.

The stations are listed by category and than by channel number.

Category and chan. name

The stations are listed by category and than by channel name.

Tips

The stations that are displayed in the stations list can be filtered according to your personal desires as to type of program. ■

Applies to vehicles: with Satellite Digital Radio Service

Category filter

Requirement: Satellite Radio is activated ⇒ *page 43*.

– Select: Function button RADIO > Function button SETUP > **Category filter**.

The stations that are displayed in the station list can be filtered according to your personal desires as to type of program. The selection of program categories depends on what your provider offers.

If you select the option **Deactivate filter**, all filter options are deactivated and all available channels are displayed in the satellite station list. ■

Playing media

Introduction

You can start and operate the CD/DVD drive, CD changer*, Jukebox, memory card reader and a portable audio device* such as an iPod or USB storage device using the MMI control panel. Different functions are available depending on the active source and the medium inserted. For example, you can select individual tracks or folders directly, play the tracks in random order or display information stored in an ID3/WMA/AAC tag with the current track (such as the artist, album, title, year and genre). ■

Starting Media mode



Fig. 45 Audio/video source overview

Requirement: The MMI must be switched on ⇒ *page 28*.

- Press the MEDIA function button. The source overview ⇒ fig. 45 or the track that was playing the last time media mode was active will be shown in the MMI display.
- If the source overview is not shown in the MMI display, press the **Source** control button. ■

Selecting source



Fig. 46 List of possible audio/video sources

Requirement: A source must contain an audio or video file.

- Press the MEDIA function button.
- Press the **Source** control button.
- Turn the control knob to a source and press the knob. The track list or folder structure for the selected source is shown in the MMI display.
- Turn the control knob to a track or a folder and press the knob.

Possible sources are:

1. Jukebox
2. Memory card
3. CD/DVD drive
4. Audi music interface* (for example, iPod)
5. CD changer* ■

Selecting a folder

The folders for the active audio source are shown in the MMI display.



Fig. 47 Folder structure for an MP3 CD.

Requirement: The selected source must contain audio files.

- Press the MEDIA function button. The folder structure for the selected source is displayed ⇒ fig. 47.
- Turn the control knob to a folder.
- Press the control knob to select the folder. The tracks in the folder are displayed.

Tips

- To reach the next highest level, press the RETURN button or turn the control knob to the **Go up** folder and press the knob.
- To reach the highest level in the folder structure, press the MEDIA function button.
- You can scroll through long lists of folders quickly by turning the control knob quickly. The scrolling speed depends on the number of folders. ■

Selecting a track

The track with the play time is shown in the MMI display.



Fig. 48 Track list

Requirement: An audio CD or a folder must be selected ⇒ *page 50*.

- Turn the control knob to a track ⇒ fig. 48.
- Press the control knob to select the track. The track will play.

If metadata (such as an ID3 tag) is available for a current track (such as the artist, album or track), it will be displayed in a pop-up window. The **Display track info** function must be activated ⇒ *page 56*.

Tips

- You can also perform this function with the multifunction steering wheel ⇒ *page 101*.
- You can scroll through long lists of tracks quickly by turning the control knob quickly. The scrolling speed depends on the number of tracks. ■

Fast forward/rewind

You can skip forward or back within a tracking using fast forward/rewind.



Fig. 49 Fast forward in a CD

Requirement: An audio file or a video DVD must be playing.

- Press the **Manual** control button.
- Turn the control knob to ▷▷ (fast forward) ⇒ fig. 49 or ◁◁ (rewind) and hold the knob down.

Tips

You can also press and hold the *arrow buttons* on the MMI control panel to fast forward or rewind within a track or video DVD ⇒ *page 29*. ■

Previous/next track or chapter

This function makes it possible to skip to the previous or next track or chapter within an audio/video source.



Fig. 50 Next chapter

Requirement: An audio file or a video DVD must be playing.

Previous/next track

- Press the **Manual** control button.
- Turn the control knob to ▷| (next track) or |◁ (previous track).
- Press the control knob to skip to the previous/next track. The track will play.

Next/previous chapter (video DVD)

- Press the **Manual** control button.
- Turn the control knob to ▷| (next chapter) or |◁ (previous chapter).
- Press the control knob to skip to the previous/next chapter.

If you select **Previous track**/**Previous chapter** within 10 seconds after it has started to play, the previous track or chapter will start playing. If you press it after 10 seconds, the current track or chapter will begin playing again from the beginning.

Tips

You can also press and hold the *arrow buttons* on the MMI control panel to fast forward or rewind within a track or video DVD ⇒ *page 29*. ■

Track information



Fig. 51 Track information

Requirement: An audio file must be playing ⇒ *page 50*.

- Press the **Manual** control button.
- Turn the control knob to **INFO** (track information) ⇒ fig. 51 and press the knob.

Metadata/tag information stored with the current track (such as artist, album or title) is displayed. ■

Repeat range



Fig. 52 Repeat range

Requirement: An audio file must be playing ⇒ *page 50*.

- Press the **Manual** control button.
- Turn the control knob to **RPT** (repeat options) ⇒ fig. 52 and press the knob.

The following functions can be selected for repeat:

- **off** - the **Repeat options** are switched off.
- **Medium** - if a CD is playing in the CD changer*, the tracks on the CD will repeat.
- **Folder** - the tracks in the folder will repeat.
- **Track** - the current track playing will repeat.

Tips

Shuffle also depends on the settings for the repeat options ⇒ *page 53*. ■

Shuffle

You can play the tracks in random order.



Fig. 53 Shuffle

Requirement: An audio file must be playing ⇒ *page 50* and **Repeat options** must be selected.

– Press the **Manual** control button.

– Turn the control knob to **Shuffle** ⇒ fig. 53 and press the knob.

- **Off** repeat option - all of the files in the active audio source play in random order. First the tracks on the current CD in the CD changer* are played in random order and then the tracks on the remaining CDs are.
- **Medium** repeat option - if a CD is playing in the CD player*, the tracks on the CD play in random order.
- **Folder** repeat option - the tracks in the current track list with audio files play in random order. ■

DVD main menu



Fig. 54 DVD main menu

Requirement: A video DVD must be playing ⇒ *page 49*.

– Press the **Manual** control button.

– Turn the control knob to **MENU** (display main menu) ⇒ fig. 54 and press the knob. The DVD main menu is shown in the MMI display.

– To select a menu item, turn the control knob to the item and press the knob.

Tips

You can also control the DVD main menu with the joystick ⇒ *page 32*. ■

DVD full screen display

The video image is only displayed when the vehicle is stationary for safety reasons. You can still hear the sound.



Fig. 55 DVD full screen

Requirement: A video DVD must be playing ⇒ *page 49* and the vehicle must be stopped.

- Press the **Manual** control button.
- Turn the control knob to ⟲ (show DVD full screen) ⇒ fig. 55 and press the knob. The video image expands to fill the entire MMI display.
- Press the RETURN button or a control button to deactivate the full-screen display. ■

DVD parental control

You can restrict the playback of video DVDs with the parental control. The settings are protected by a password.



Fig. 56 Selecting the content rating

Requirement: A video DVD must be playing ⇒ *page 49*.

Selecting the content rating

- Press the SETUP function button.
- Turn the control knob to **Parental control** and press the knob.
- Enter the password using the speller.
- Select **OK** in the speller and press the control knob to confirm your entry.
- Turn the control knob to **Content rating** and press the knob.
- Turn the control knob to a level (such as **level 5**) and press the knob. The selected level is stored. ▶

Change password

- Press the SETUP function button.
- Turn the control knob to **Parental control** and press the knob.
- Enter the password using the speller.
- Select **OK** in the speller and press the control knob to confirm your entry.
- Turn the control knob to **Change password** and press the knob.
- Enter the new parental control password using the speller.
- Select **OK** in the speller and press the control knob.
- Enter the new parental control password again.
- Select **OK** in the speller and press the control knob to confirm your entry. The new password is stored.

In accordance with the Motion Picture Association of America (MPAA), the following eight levels can be selected for **Parental control**:

Parental Level	Description
Level 1 - G	Unrestricted audience
Level 2	Most audiences
Level 3 - PG	Mature young audience
Level 4 - PG-13	Teenage audience
Level 5	Mature teenage audience
Level 6 - R	Mature audience
Level 7 - NC-17	Adult audience
Level 8 - Adult	Most restricted audience

If you select **Level 5**, for example, for the parental control level, all DVDs from level 1-5 can be played. Video DVDs with a higher level will not play.

The **Off** setting deactivates all restrictions.

Tips

- The password "1234" is set for the **Parental control** at the factory.
- Password entry will be locked for approximately one minute if you enter the incorrect password three times in a row.
- Only your authorized Audi dealer can reset the parental control password. ■

Pausing/continuing playback



Fig. 57 Pausing/continuing playback

Requirement: An audio file or a video DVD must be playing ⇒ *page 50*.

– Press the **Manual** control button.

– Turn the control knob to || (pause) ⇒ *page 55,* fig. 57 and press the knob. Playback is paused and the mute symbol (15) ⇒ *page 30,* fig. 22 appears in the status line of the MMI display.

– Turn the control knob to || (pause) again and press the knob.

Tips

- You can also pause and continue playback in the active audio source with the On/Off knob ⇒ *page 99*.
- You can also perform this function with the multifunction steering wheel without removing your hands from the wheel ⇒ *page 101*. ■

Additional settings

Track display

Requirement: A folder with audio files must be playing ⇒ *page 50*.

– Select: SETUP function button > **Track display**

File name

The name of the file is displayed without the file extension.

Track name

The track name, for example from the ID3 tag, is displayed.

Tips

The **Track display** function is not available for the Jukebox or a connected iPod. ■

Displaying track information

Requirement: A folder with audio files must be playing ⇒ *page 50*.

– Select: MEDIA function button > SETUP function button > **Display track info**.

If information is available for the current track (such as artist or album), it will be displayed in a pop-up window if this function is activated. ■

Aspect ratio

Requirement: A video DVD must be playing ⇒ *page 49*.

– Select: MEDIA function button > SETUP function button > **Aspect ratio**.

The following functions can be selected for the aspect ratio:

- **Automatic adjustment** - the aspect ratio is adjusted automatically. The image width varies depending on film format.
- **Standard (4:3)** - the DVD image is displayed in **4:3** format.
- **Widescreen (16:9)** - the DVD image is displayed in **16:9** format.
- **Zoom** - the DVD image is expanded to fill the complete display.
- **Cinemascope** - the image is displayed in the **1:2.35** aspect ratio. ■

Applies to vehicles: with Audi music interface

Input level

Requirement: A portable audio device must be connected with the 3.5 mm stereo jack adapter cable* ⇒ *page 20*. ▶

– Select: MEDIA function button > Audi music interface > SETUP function button > **Input level**.

The volume of the portable audio device is adapted to the MMI. Audi recommends adjusting the volume of the portable audio device to 70 percent of the maximum output. ■

Directory

Applies to vehicles: with cell phone prep

Introduction

The MMI contains an extensive directory. You can manage up to 5,000 entries with the directory ⇒ *page 69*. You can transfer up to 2000 directory entries from your cell phone to the MMI via Bluetooth. The imported directory entries are stored in the general profile or in your personal profile in the MMI ⇒ *page 67*. You can also manually store up to 100 entries per profile in the MMI local memory.

You can store up to five telephone numbers (land line, cell and fax) for each entry. You can store a private and work navigation destination in the local MMI memory for up to 100 entries. You can then use these entries directly from the directory for communication and navigation. ■

Applies to vehicles: with cell phone prep

Opening the directory



Fig. 58 List of entries

Requirement: The MMI must be switched on ⇒ *page 28*.

- Press the NAME function button. A list of entries ⇒ fig. 58 or the last active directory menu appears in the MMI display.
- If a list of entries ⇒ fig. 58 does not appear in the MMI display, press the NAME function button again.

The directory entries are displayed in alphabetical order and identified with a symbol ⇒ fig. 58.

(1) Local MMI memory
(2) SIM card
(3) Cell phone ■

Applies to vehicles: with cell phone prep

Storing a new directory entry

You must enter a name for the new entry first. Then you can enter additional optional information such as telephone numbers, address or navigation destination.

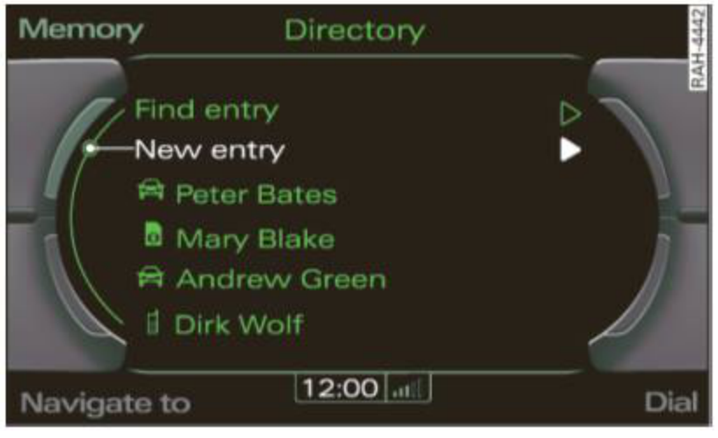


Fig. 59 Storing a new entry

Requirement: The directory must be open ⇒ *page 58*.

- Turn the control knob to **New entry** ⇒ *page 58,* fig. 59 and press the knob. An input field appears in the MMI display.
- Press the control knob to open the **Last name** field. The speller appears in the MMI display ⇒ *page 31*.
- Enter the name using the speller, then select **OK** in the speller and press the knob to confirm your entry. The input field appears again in the MMI display.
- To enter additional data, select a field with the control knob and follow the instructions above.

You can store up to five telephone numbers in an address card. You can also assign a **Type** (**Business** or **Private**) and a **Category** (**Land line**, **Cell** or **Fax**) to a telephone number. You can also identify a frequently used telephone number as a **Preferred phone number**. That number is then displayed first in the open address card.

Tips

- Entries are stored automatically during input.
- The new entry is stored in the local memory for the current profile.

The local memory for the current profile is limited to 100 entries. ■

Importing directory entries

Applies to vehicles: with cell phone prep

Importing a phone book

Directory entries from a cell phone can be imported into the directory manually.



Fig. 60 Importing a phone book

Requirement: The directory must be open ⇒ *page 58* and the cell phone prep ⇒ *page 21* must be active.

- Press the **Memory** control button.
- Turn the control knob to **Import phone book** ⇒ fig. 60 and press the knob. The phone book in the connected cell phone is imported.

If you have not created a personal profile ⇒ *page 67*, the phone book will be imported into the personal profile. When connecting a cell phone, the existing entries are overwritten with the entries in the cell phone that is currently connected. Up to 2,000 entries can be imported into the general profile. ▶

Tips

The directory entries in the current profile are updated automatically when a cell phone is connected. ■

Applies to vehicles: with cell phone prep

Importing a phone number

You can import a phone number for an existing entry in the directory.



Fig. 61 Entering the phone number using the speller



Fig. 62 Transferring the number from the call lists

Requirement: A new entry must stored in the directory ⇒ *page 58* or an existing entry in the local MMI memory will be edited ⇒ *page 64*.

- Turn the control knob to **Phone numbers** and press the knob.
- Turn the control knob to **New phone number** and press the knob. An input field appears in the MMI display.
- Turn the control knob to **Number** and press the knob. The speller appears in the MMI display.
- Select **List** ⇒ fig. 61 in the speller and press the control knob. The **Import from** menu appears in the MMI display ⇒ fig. 62.
- Turn the control knob to a call list (for example **Dialed numbers** ⇒ fig. 62) from which the phone number will be imported and press the knob. A list of phone numbers appears in the MMI display.
- Turn the control knob to a phone number and press the knob. The phone number is imported into the address card and stored automatically.

You can also enter a phone number directly in the **Number** field using the speller without using the import function.

If the functions are grayed out, make sure your cell phone is paired with the cell phone prep. Also make sure there are phone numbers in the call lists on your cell phone.

Tips

The import function depends on the cell phone. Grayed out functions cannot be selected. ■

Applies to vehicles: with cell phone prep

Importing address cards

Address cards in vCard format (.vcf) can be imported into the directory with a memory card or a USB storage device.*



Fig. 63 Importing address cards

Requirement: The directory must be open ⇒ *page 58* and a memory card must be inserted in the memory card reader ⇒ *page 16* or a USB storage device must be connected to the Audi music interface* using a USB adapter cable* ⇒ *page 20*.

- Press the **Memory** control button.
- Turn the control knob to **Import contacts** and press the knob.
- Turn the control knob to **SD card 1**, **SD card 2** or **USB storage device** and press the knob.
- Turn the control knob to **All entries** or a certain entry in the list ⇒ fig. 63 and press the knob.
- Turn the control knob to **Import entries** and press the knob to import the selected entry or all entries.
- To search for an entry in the cell phone directory, turn the control knob to **Find entry**. The speller appears in the MMI display ⇒ *page 31*.
- Enter the name using the speller, then select **OK** in the speller and press the knob to confirm your entry.

Tips

- The address import depends on the cell phone. Only structured addresses that have information regarding country, city, ZIP code and street can be imported.
- You can check the directory memory capacity at any time ⇒ *page 69*.
- The imported address cards are stored in the local memory for the current profile. ■

Applies to vehicles: with cell phone prep

Exporting address cards

Directory entries can be exported to a memory card or USB storage device in vCard format (.vcf).

- Press the **Memory** control button.
- Turn the control knob to **Export contacts** and press the knob.
- Turn the control knob to an entry in the list or **All entries** and press the knob.
- To search for an entry, turn the control knob to **Find entry** ⇒ fig. 63. The speller appears in the MMI display ⇒ *page 31*.

- Enter the name using the speller, then select **OK** in the speller and press the knob to confirm your entry. The entry is selected.
- Turn the control knob to **Export entries individually** or **Export packed entries** and press the knob.
- Turn the control knob to the source **SD card 1**, **SD card 2** or **USB storage device** and press the knob.

You can export packed directory entries or individual entries.

- **Export entries individually** - a vCard file (.vcf) is created for each directory entry during the export.
- **Export packed entries** - only one vCard file (.vcf) is created for all directory entries during export. ■

Using a directory entry

Applies to vehicles: with cell phone prep

Searching

You can select an entry directly from a list or search for it using the speller.



Fig. 64 Searching for an entry

Requirement: The directory must be open ⇒ *page 58* and entries must be displayed ⇒ *page 58*.

Selecting an entry from a list

- Turn the control knob to an entry ⇒ *page 58,* fig. 59 and press the knob. The address card is shown in the MMI display.

Searching for an entry using the speller

- Turn the control knob to **Find entry** ⇒ fig. 64 and press the knob. The speller appears in the MMI display ⇒ *page 31*.
- Enter a name using the speller, or
- Select a name in the speller from **LIST**.
- Select **OK** in the speller and press the control knob to confirm your entry.

Tips

- You can change, delete ⇒ *page 65*, call up or navigate to ⇒ *page 63* an existing entry.
- You can also search for an entry easily using the voice recognition system ⇒ *page 111*. ■

Applies to vehicles: with cell phone prep

Selecting

You can make calls to entries with phone numbers.



Fig. 65 Calling up an entry

Requirement: The directory must be open and list of directory entries must be displayed ⇒ *page 58*.

- Turn the control knob to an entry and press the knob. The address card appears in the MMI display.
- Turn the control knob to a phone number ⇒ fig. 65 and press the **Dial** control button. The call is made, or
- Press the control knob. The telephone menu appears in the MMI display with the speller and the selected phone number.
- Select **OK** in the speller and press the control knob. The number is being dialed.

Tips

You can also make calls easily using the voice recognition system ⇒ *page 111*. ■

Applies to vehicles: with cell phone prep

Navigating

You can navigate directly to entries in the directory that have navigation destinations.



Fig. 66 Selecting a navigation destination

Requirement: The directory must be open ⇒ *page 58* and must contain stored entries with private or personal navigation destinations ⇒ fig. 66.

- Turn the control knob to an entry and press the knob.
- If an entry contains two navigation destinations (private and business), turn and press the control knob to select a navigation destination.
- Press the **Navigate to** control button, or
- Turn the control knob to **Navigate to** ⇒ fig. 66 and press the knob. The navigation menu appears in the MMI display with the selected navigation destination. ■

Editing a directory entry

Applies to vehicles: with cell phone prep

Storing a navigation destination

You can store a business and a personal navigation destination for an existing entry in the directory.



Fig. 67 Navigation destination input field



Fig. 68 Setting a navigation destination from the last destinations

Requirement: An address card must be open for editing ⇒ fig. 67 and a private/business navigation destination must be selected or a new entry must be created ⇒ *page 58*.

Entering a navigation destination

- Turn the control knob to **Create navigation destination** and press the knob. The input field is shown in the MMI display ⇒ fig. 67.
- Turn the control knob to **Country** and press the knob. A list of countries appears in the MMI display.
- Turn the control knob to a country and press the knob. The land is entered in the input field.
- To enter additional data, select a field with the control knob and follow the instructions above. Your entries are automatically stored in the address card.

Selecting from an address

- Turn the control knob to **Create navigation destination** and press the knob. The stored address is automatically set as the navigation destination.

Selecting from last destinations

- Turn the control knob to **Create navigation destination** and press the knob. The input field is shown in the MMI display ⇒ fig. 67.
- Turn the control knob to **Last destinations** ⇒ fig. 68 and press the knob. A list of the last destinations appears in the MMI display.
- Turn the control knob to a navigation destination and press the knob. The navigation destination is stored in the address card.

Setting based on the current position

– Turn the control knob to **Create navigation destination** and press the knob. The input field appears ⇒ *page 64,* fig. 67.

– Turn the control knob to **Current position** ⇒ *page 64,* fig. 68 and press the knob. The data for the current position is set as the navigation destination.

Selecting from points of interest

– Turn the control knob to **Create navigation destination** and press the knob. The input field is shown in the MMI display ⇒ *page 64,* fig. 67.

– Turn the control knob to **Point of interest** ⇒ *page 64,* fig. 67 and press the knob.

– Turn the control knob to **Top categories** for example and press the knob.

A private and a business navigation destination can be assigned to each directory entry. You can call up the stored navigation destinations in the Navigation menu using the **Memory** control button (**Load from directory**) ⇒ *page 90*.

You can find the next rest stop, gas station, Audi dealer or hospital under the **Top destinations** menu item. The **Point of interest** ⇒ *page 64,* fig. 67 menu item contains additional submenus that you can use to create navigation destinations. For more information about the submenus, refer to ⇒ *page 83*.

Tips

- You can also display a navigation destination as a **Favorite**. The navigation destination is then displayed in the destination entry menu under the Navigation menu ⇒ *page 91*.
- Entries that have an assigned navigation destination are stored in the local memory for the current profile. The current profile is limited to 100 entries. ■

Applies to vehicles: with cell phone prep

Changing an entry

You can edit the entries in the MMI local memory at any time.

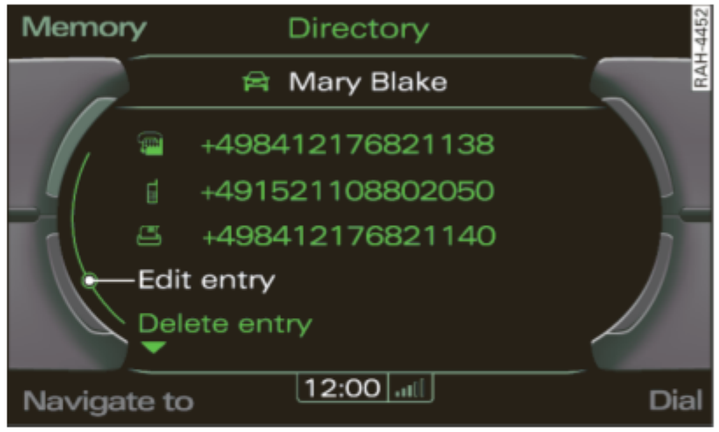


Fig. 69 Editing an entry

Requirement: An address card must be open ⇒ fig. 69.

– Turn the control knob to **Edit entry** ⇒ fig. 69 and press the knob. An input field appears in the MMI display.

– Select a field with the control knob and press the knob to edit the entry data.

You cannot edit directory entries from the cell phone memory directly in the MMI. To edit an entry from the cell phone, turn the control knob to **Copy for editing** and press the knob. A copy of the entry is stored in the MMI memory.

The MMI cannot automatically update changed directory entries in the connected cell phone. Audi recommends editing cell phone entries directly in the cell phone. ■

Applies to vehicles: with cell phone prep

Deleting an entry

You can delete the entries in the MMI local memory at any time.

Requirement: An address card must be open ⇒ *page 65*, fig. 69.

- Turn the control knob to **Delete entry** ⇒ *page 65*, fig. 69 and press the knob.
- Turn the control knob to **Yes** and press the knob to delete an entry. The entry is deleted from the MMI local memory. ■

Applies to vehicles: with cell phone prep

Reading a name

The MMI automatically creates a name tag for each entry in the directory. You can also assign up to 50 personal name tags for address cards using the voice recognition system.

Requirement: The directory must be open ⇒ *page 58*.

Reading in an address card

- Turn the control knob to an entry and press the knob. The address card is shown in the MMI display.
- Turn the control knob to **Read name** and press the knob. The name is read.

Reading in the SETUP menu

- Press the SETUP function button.
- Turn the control knob to **Read voice memos** and press the knob. A list with personal name tags appears in the MMI display.
- Turn the control knob to an entry and press the knob. The name tags are played.

Tips

- You can only assign and store personal name tags using the voice recognition system ⇒ *page 111*.
- You can also read all the names easily using the voice recognition system ⇒ *page 112*. ■

Applies to vehicles: with cell phone prep

Deleting a name tag

Requirement: The directory must be open ⇒ *page 58*.

Deleting in the address card

- Turn the control knob to an entry and press the knob. The address card is shown in the MMI display.
- Turn the control knob to **Delete name tag** and press the knob. The name tag is deleted.

Deleting in the SETUP menu

- Press the SETUP function button.
- Turn the control knob to **Delete voice memos** and press the knob.
- Turn the control knob to **Delete individually** or **Delete all entries** and press the knob. ▶

– Turn the control knob to **Yes** and press the knob to begin the deletion process.

Tips

- You can only delete personal assigned name tags.
- There is another way to delete all name tags. For more information, refer to ⇒ *page 39*. ■

Managing profiles

Applies to vehicles: with cell phone prep

Introduction

A general profile and up to four personal profiles are available in the directory.

A personal profile is useful if you will be connecting different cell phones to the MMI. In the personal profile, you have immediate access to the cell phone directory entries when you connect the phone. The directory entries are updated automatically in the background.

The entries for the connected cell phone are loaded into the general profile. When that happens, the entries from the last cell phone that was connected to the general profile are overwritten. ■

Applies to vehicles: with cell phone prep

Creating a profile



Fig. 70 Creating a profile

Requirement: The directory must be open ⇒ *page 58*, the cell phone prep ⇒ *page 21* must be activated and the automatic import of cell phone directory entries must be complete.

– Press the SETUP function button.
– Turn the control knob to **Manage profiles** and press the knob.
– Turn the control knob to **Create profile** ⇒ fig. 70 and press the knob. The profile name is shown in the MMI display.
– Turn the control knob to **Yes** and press the knob to store the profile.

The Bluetooth name of the connected cell phone is automatically set as the profile name. However, you can assign your own profile names ⇒ *page 68*.

Tips

The **Create profile** menu item is only available when a cell phone is connected. In addition, there must not be a profile already stored for the connected cell phone. ■

Applies to vehicles: with cell phone prep

Deleting profiles

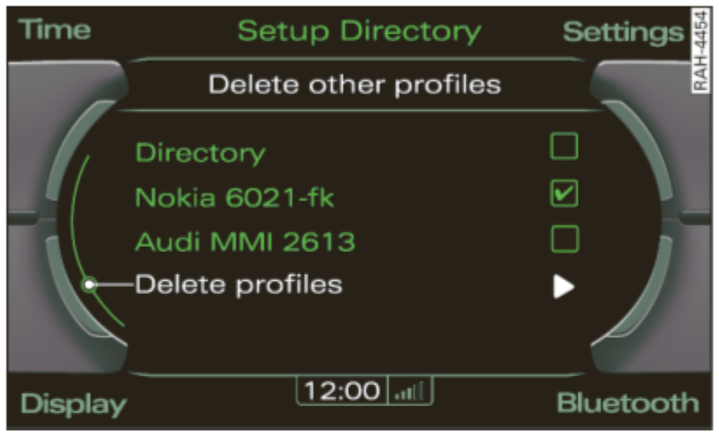


Fig. 71 Deleting other profiles

Requirement: The directory must be open ⇒ *page 58* and a profile must be stored in the MMI ⇒ *page 67*.

Deleting the current profile

- Press the SETUP function button.
- Turn the control knob to **Manage profiles** and press the knob.
- Turn the control knob to **Delete current profile** ⇒ *page 67,* fig. 70 and press the knob. All directory entries for the current profile are deleted.

Deleting other profiles

- Press the SETUP function button.
- Turn the control knob to **Manage profiles** and press the knob.
- Turn the control knob to **Delete other profiles** ⇒ fig. 71 and press the knob. A list with all of the stored profiles and the directory for the general profile appears in the MMI display. The current profile is not displayed in the list.
- Turn the control knob to a stored profile or **Directory** and press the knob.
- Turn the control knob to **Delete profiles** and press the knob.
- Confirm your entry by turning the control knob to **Yes** and pressing it. The speller appears in the MMI display to enter the **ID number**.
- Enter the last seven characters of your vehicle's **VIN** with the speller.
- Select **OK** in the speller and press the control knob to confirm your entry.

You can find the **Vehicle ID number (VIN)** in the CAR menu or the vehicle registration. To obtain the **Vehicle ID number (VIN)**, press the CAR function button. Turn the control knob to **Vehicle ID number (CAR)** and press the knob. ■

Applies to vehicles: with cell phone prep

Changing profile names

Requirement: The directory must be open ⇒ *page 58* and a profile must be stored in the MMI ⇒ *page 67*.

- Press the SETUP function button. ▶

- Turn the control knob to **Manage profiles** and press the knob.
- Turn the control knob to **Change profile name** and press the knob. The speller appears in the MMI display with the profile name in the input field.
- Turn the speller to ⬅ and press the control knob until the profile name in the input field is deleted.
- Enter a new profile name using the speller, then select **OK** in the speller and press the knob to confirm your entry. ■

Additional settings

Applies to vehicles: with cell phone prep

Memory capacity

- Select: NAME function button > **Memory** control button > **Memory capacity**.

The **Memory capacity** for the current profile and the entire memory is displayed.

You can manage up to 5,000 entries with the directory. You can import up to 2000 entries into the general profile or your personal profile. You can also manually store up to 100 entries per profile in the MMI local memory. ■

Calling

Applies to vehicles: with cell phone prep

Introduction

You can use a cell phone comfortably with the MMI. Many functions you are familiar with from your cell phone are available: you can answer and end calls or place them on hold. You can also access the MMI directory and the cell phone directory.

The active audio source is muted during an incoming/outgoing call and the drive is paused ⇒ *page 33*. After the call ends, the audio source is restored to the previous volume level.

If you do not want to hear navigation announcements during a phone call, you can switch off that option ⇒ *page 94*.

Note

- Switch the phone system off through the Telephone Setup menu in areas where cell phone usage is prohibited. Obey all applicable instructions and regulations.
- Switch your cell phone off in areas at risk for an explosion. These locations are not always clearly marked. They may include gas stations, equipment that stores or transports fuel or chemicals, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour or sawdust) may be present in the air. This also applies to all other locations where you would normally switch your vehicle off.

Tips

The telephone functions depend on the cell phone service provider and the cell phone you are using. You can obtain more information from your cell phone service provider. ■

Applies to vehicles: with cell phone prep

Starting Telephone mode



Fig. 72 Speller for entering a phone number

Requirement: The MMI must be switched on ⇒ *page 28*.

– Press the TEL function button. The speller ⇒ fig. 72 or the last active Telephone menu appears in the MMI display.

You open the speller by pressing the TEL function button in telephone mode. ■

Dialing a telephone number

Applies to vehicles: with cell phone prep

Directly through the speller

The speller can be used to enter a phone number directly as a series of numbers or letters.



Fig. 73 Entering telephone numbers using the number speller



Fig. 74 Entering telephone numbers using the letter speller

Requirement: Telephone mode must be active ⇒ *page 21* and the speller must appear in the display ⇒ fig. 73.

Entering the phone number as a sequence of numbers

- Enter the phone number using the speller.
- Confirm your entry by selecting **OK** in the speller and pressing, or
- Press the **Dial** control button. As the number is being dialed, the audio source is muted.

Entering the phone number as a sequence of letters

- Enter an area code with the speller.
- To change to the letter speller, turn the speller to **A-Z** (1) ⇒ fig. 73 and press the control knob.
- Use the speller to enter a series of letters such as *AUDISERVICE* ⇒ fig. 74.
- Confirm your entry by selecting **OK** in the speller and pressing, or
- Press the **Dial** control button. The entered telephone number is dialed.

If you enter a phone number incorrectly, you can press on the RETURN button to completely delete the number you entered in the speller.

Tips

- DTMF tones can be entered directly through the speller or loaded from the stored phone numbers ⇒ *page 72*.
- The audio source is muted during an incoming/outgoing call. The mute symbol is shown in the MMI display status bar ⇒ *page 30*, fig. 22.

- If you switch **Off** voice guidance while in navigation mode, navigation commands will not play during a call⇒ *page 94*.
- If you have switched the MMI display off, it will switch on automatically and remain on for the duration of the call. ■

Applies to vehicles: with cell phone prep

From a list



Fig. 75 Dialing a phone number from a list

Requirement: Telephone mode must be active ⇒ *page 21*.

Searching and calling telephone numbers in a list

- Press the **Memory** control button.
- Turn the control knob to **Directory**, **Dialed numbers**, **Missed calls** or **Received calls**.
- Press the control knob. The phone numbers from the selected list appear in the MMI display.
- Turn the control knob to the desired telephone number.
- Press the control knob. The selected telephone number is copied to the speller.
- To initiate the call, turn the speller to **OK** and press the control knob, or
- Press the **Dial** control button.

Dialed number list quick display and calling a number

- Press the TEL function button. The speller is shown in the MMI display. There is *no* telephone number in the entry field of the speller.
- Press the **Dial** control button. The **Dialed numbers** list appears in the MMI display.
- Turn the control knob to the desired telephone number.
- Press the control knob. The selected telephone number is copied to the speller.
- To initiate the call, turn the speller to **OK** and press the control knob, or
- Press the **Dial** control button.

Tips

The telephone functions depend on the cell phone service provider and the cell phone you are using. You can obtain more information from your cell phone service provider. ■

Applies to vehicles: with cell phone prep

Answering/ignoring a call



Fig. 76 Answering an incoming call

Requirement: An incoming call.

Answering a call

– Turn the control knob to **Answer** and press the knob, or

– Press the **Answer** control button.

Ignoring a call

– Turn the control knob to **Ignore** and press the knob, or

– Press the **Ignore** control button.

The *Name*, *Phone number* or **Unknown** appears in the display depending on whether the caller has been stored in the directory and if the phone number has been transmitted.

Tips

- You can accept an incoming call during an active call. The active call is placed on hold automatically.
- The audio source is muted during an incoming/outgoing call. The mute symbol is shown in the MMI display status bar ⇒ *page 30*, fig. 22.
- If you would not like to hear navigation announcements during a phone call, you can switch them off ⇒ *page 94*.
- A call can also be answered/ignored using the multifunction steering wheel ⇒ *page 104*. ■

Applies to vehicles: with cell phone prep

Ending a call

Requirement: You have an active call or are dialing a call.

– To end a phone call or to cancel dialing, press the **End call** button ⇒ *page 74*, fig. 77.

Tips

A call can also be ended using the multifunction steering wheel ⇒ *page 104*. ■

Applies to vehicles: with cell phone prep

Storing a phone number in the directory

A new phone number or a number from the call lists can be stored in the directory



Fig. 77 Storing the phone number in the directory

Requirement: Telephone mode must be active ⇒ *page 21*.

New phone number

- Enter a new phone number in the speller ⇒ *page 71*.
- Press the **Memory** control button ⇒ fig. 77.
- Turn the control knob to **Store current number** and press the knob.
- To create a new entry, turn the control knob to **New entry** ⇒ *page 58*, fig. 59 and press the control knob ⇒ *page 58*, or
- To add a phone number to an existing entry, turn the control knob to **Find entry** and press the knob ⇒ *page 62*, or
- Turn the control knob to an entry in the list and press the knob. The address card opens.
- Turn the control knob to **Store entry** and press the knob. The phone number is stored.

Phone number from a call list

- Press the **Memory** control button.
- Turn the control knob to **Dialed numbers**, **Received calls** or **Missed calls**.
- Press the control knob. The available phone numbers are listed in the display.
- Turn the control knob to the phone number that will be stored and press the knob.
- Turn the control knob to **Store** and press the knob.
- To create a new entry, turn the control knob to **New entry** ⇒ *page 58*, fig. 59 and press the control knob ⇒ *page 58*, or
- To add a phone number to an existing entry, turn the control knob to **Find entry** and press the knob ⇒ *page 62*, or
- Turn the control knob to an entry in the list and press the knob. The address card opens.
- Turn the control knob to **Store entry** and press the knob. The phone number is stored.

Tips

You can edit the directory ⇒ *page 58*. ■

Applies to vehicles: with cell phone prep

Dialing stored phone numbers

You can dial a phone number from the call lists or from the MMI directory.



Fig. 78 Searching stored telephone numbers

Requirement: Telephone mode must be started ⇒ *page 21* and a phone number must be stored.

- Press the **Memory** control button.
- Turn the control knob to **Directory**, for example.
- Press the control knob. **Find entry** and a list of stored entries appear in the MMI at the same time ⇒ fig. 78.
- Turn the control knob to **Find entry** ⇒ fig. 78 and press the knob. The speller appears in the display so you can enter names, or
- Turn the control knob to a name from the list and press the control knob. The phone number is shown in the MMI display.
- To dial the phone number, press the control knob and then select **OK** in the speller and press the knob, or
- Press the **Dial** control button. ■

Applies to vehicles: with cell phone prep

Deleting local call lists

Requirement: Telephone mode must be active ⇒ *page 21*.

Delete individually

- Press the **Memory** control button.
- Turn the control knob to **Delete local call lists** and press the knob.
- Turn the control knob to **Dialed numbers**, **Missed calls** or **Received calls** and press the knob.
- Turn the control knob to **Yes** and press the knob to delete a call list.

Delete all

- Press the **Memory** control button.
- Turn the control knob to **Delete local call lists** and press the knob.
- Turn the control knob to **Delete all entries** and press the knob.
- Turn the control knob to **Yes** and press the knob to delete all the call lists. ■

Applies to vehicles: with cell phone prep

Bluetooth settings



Fig. 79 Bluetooth symbol

- Press the SETUP function button.
- Press the **Bluetooth** control button. The Bluetooth settings menu is shown in the MMI display.

Switching Bluetooth on/off

The MMI Bluetooth function can be switched **On** or **Off**. The Bluetooth symbol (1) ⇒ fig. 79 appears in the MMI display when the function is switched on.

Discovery mode

The visibility of the cell phone prep or cell phone can be switched **On** or **Off**. When auto is selected, the cell phone prep is visible to cell phones for approximately five minutes when the vehicle is stopped and the ignition key is inserted. The visibility switches off after that. However, it is still possible to establish a Bluetooth connection with cell phones that have already been paired when the visibility is switched off. The function should be switched off when the pairing process is complete so the cell phone prep is not visible to others.

Searching for Bluetooth devices

The system searches for lists of Bluetooth devices that are within range.

Paired devices

Bluetooth devices that have been paired with the MMI are listed. The active connected Bluetooth device is identified with the Bluetooth symbol.

To delete paired Bluetooth devices individually, select the device and delete it with the **Delete device** function.

Bluetooth name

The name of the vehicle cradle for your cell phone prep (such as “AUDI MMI 2613”) is displayed and can be changed.

Delete Bluetooth devices

All paired cell phones can be deleted by confirming with **Yes**. ■

Additional settings

Applies to vehicles: with cell phone prep

Options during a call

Requirement: There must be an active phone call ⇒ *page 71*.

- Select the **Options** control button.

Switching the microphone off and on

When the microphone is **Mute** the connected party cannot hear anything from your phone. However, you can hear your connected party. **Mute off** appears in the MMI display.

Accepting another call

If another call comes in during an active call, the **Answer** and **Ignore** functions appear in the MMI display. ▶

If you select **Answer**, the active call is put on hold and the incoming call is active. If you select **Ignore**, the incoming call will be ignored.

Replacing a call

If a call comes in while you have an active call and another call on hold, the **Replace** and **Ignore** functions appear in the MMI display.

If you select **Replace**, the active call will be replaced with the incoming call. If you select **Ignore**, the incoming call will be ignored. A call on hold remains in queue.

The display in the MMI may still be visible for a few seconds depending on the cell phone in use. If you use the **Replace** or **Ignore** functions in the MMI while the display is still visible, the current telephone call will be ended.

Tips

The **Call waiting** function must be activated in your cell phone to be alerted to an incoming call during an active call. The call options depend on the cell phone and service provider. ■

Applies to vehicles: with cell phone prep

Phone settings

– Select the TEL function button > SETUP function button > **Telephone settings**.

Ring tone volume

You can increase (**Vol. -**) or decrease (**Vol. +**) the ring tone volume.

Call volume

The call volume can be adjusted. ■

Applies to vehicles: with cell phone prep

Call options

– Select the TEL function button > SETUP function button > **Call options**.

3-way calling (GSM)

Up to six parties can participate in a conference call.

You begin a conference call with the **3-way calling (GSM)** option. The parties on hold and the active party are added to the conference call.

Auto redial

- **On** - a phone number will be redialed automatically up to five times if it is busy. Automatic redial can be cancelled with the **End call** function.
- **Off** - a phone number is *not* redialed if it is busy.

Auto answer

- **On** - An incoming call is answered automatically. This can be ignored with the **Ignore** function if the call was not answered automatically.
- **Off** - An incoming call is *not* answered automatically.

Invert call lists

The telephone numbers in the call lists are sorted according to the time they called. Switching this function on will sort them in the opposite order. ■

Applies to vehicles: with cell phone prep

Mailbox number

– Select: TEL function button > SETUP function button > **Voicemail number**. ▶

Enter the voicemail number with the speller or from a **List** (directory) and store with **OK**.

When a voicemail number is stored, the voicemail can be accessed with the ∞ symbol in the speller.

This service must be set up and activated in advance in the cell phone network. You can obtain more information from your cell phone service provider.

Tips

The mailbox number depends on the cell phone service provider. ■

Navigating

Introduction

Let the “Global Positioning System” (GPS) lead you to your destination!

Studying complicated maps, skimming through confusing atlases - that is all in the past! Now simply enter your desired destination in the navigation system and follow the directions given. Or you can navigate to your destination with up to nine stopovers.

The system provides directions in the form of spoken cues that inform you about all turns early enough to perform them. In what language would you like to hear the navigation announcements? You can choose from English, French and Spanish. You can repeat the current navigation announcement by pressing the right thumbwheel on the multifunction steering wheel ⇒ *page 105*.

The route is shown on a map in the MMI display ⇒ *page 87*. You can also display information about your route in the driver information system ⇒ *page 88*.

You do not want to follow one of the directions? No problem! The navigation system recalculates the route based on the current vehicle position. If when dynamic route is activated, the navigation system takes traffic reports into account so you can reach your destination more quickly.

The navigation system will notify you if your vehicle is in a location the system does not recognize (such as a parking lot or parking garage).

⚠ WARNING

- **The demands of traffic require your full attention. Refer to and follow the guidelines provided in ⇒ *page 7*, “Traffic safety tips”.**
- **Obey all traffic laws when driving.**

⚠ WARNING (continued)

- **The route calculated by the navigation system is a recommendation for reaching your destination. Obey traffic lights, stopping restrictions, one-way streets, lane change restrictions, etc.**

Note

- If the driving directions conflict with traffic laws, obey the traffic laws.
- Adjust the volume of the navigation system so signals from outside the vehicle such as police and fire sirens can be heard easily at all times.

Tips

- Snow and objects on the GPS antenna or shade from trees and large buildings can prevent satellite reception and affect the system's ability to determine the vehicle position. Several deactivated or malfunctioning satellites can also interrupt GPS reception and affect the system's ability to determine the vehicle position.
- When the vehicle is at an altitude above approximately 3000 meters, the MMI hard drive shuts down temporarily to protect it. Navigation mode and the Jukebox are not available when that happens. All of the MMI functions will be available again as usual once you start the engine again at a location below 3000 meters.
- Because street names sometimes change, the names stored in the MMI may in rare cases differ from the actual street name.
- Contact your authorized Audi dealer for information on updating the navigation information. ■

Starting Navigation mode



Fig. 80 Entry field

Requirement: The MMI must be switched on ⇒ *page 28*.

– Press the NAV function button. The input field ⇒ fig. 80 or the last active navigation menu appears in the MMI display.

The menu that was open the last time you used the navigation system is shown in the MMI display. Press the NAV function button again while in Navigation mode to switch to the input field.

Tips

The navigation system can be opened in demo mode for simulations or planning purposes when the vehicle is stationary ⇒ *page 95*. ■

Entering a destination

Tips for entering a destination



Fig. 81 Entering the destination using the speller

Cities

When making an entry with the speller, the system suggest cities that you have entered in the past. The suggested city is shown in the speller input field ⇒ fig. 81. Additional cities that match your entry are listed below. The number of cities found is displayed at the bottom right (A) ⇒ fig. 81.

If the desired city is shown in the speller input field or the list below, you can press and hold the control knob to switch to the city list.

Street

You can also begin entering a destination with the street name. From the list of suggestions that follows, select a city in which you would like to enter a street or select the menu item **In all cities** to search for a streets independent of the location. When entering the street, the system suggests street names that match the entry.

After selecting the street, you can define the destination in detail by entering an **Intersection** or **House number**.

Special destination in a city

By selecting a special destination, you can select landmarks and public places (such as hospitals, movie theaters, recreation areas, etc.) as destinations.

City center (end input)

The navigation system calculates the route to the center of the city entered.

Select destination on map

You can select a new destination from the map by moving the crosshairs horizontally, vertically or diagonally with the joystick ⇒ *page 32* ⇒ *page 82*.

Tips

Has your route or tour plan changed? No problem! Simply select the destination/stopover with the control knob and press the knob. You can now **Drive to this destination now** or **Change**, **Move** or **Delete** the destination/stopover. ■

Entering a destination with an address

A single destination always consists of a region and city. You can pinpoint the destination more closely by entering a street name or point of interest.



Fig. 82 Entering a house number/intersection

Requirement: Navigation mode must be active ⇒ *page 80*.

- If the input field ⇒ *page 80,* fig. 80 is not shown in the MMI display, press the NAV function button.
- Turn the control knob to **Region** and press the knob. A list of regions is displayed.
- Turn the control knob to select a region and press the knob to enter that region into the input field.
- Turn the control knob to **City/ZIP** and press the knob. The speller appears in the MMI display ⇒ *page 31*.
- Enter the city or ZIP code using the speller and confirm the entry with **OK**.
- To complete the entry, turn the control knob to **Downtown (end entry)** and press the knob, or ▶

- To enter additional information about the destination or to enter a stopover, turn the control knob to **Street** or **Point of interest in city** and press the knob.
- Enter additional information.
- To start route guidance, turn the control knob to **Start route guidance** and press the knob. The route criteria and then the map with three possible routes ⇒ *page 86,* fig. 87 are shown in the MMI display.
- To select a route, turn the control knob to the left or right and press the knob.

To enter a house number or intersection after you have completed entering your destination, turn and press the control knob to select the line (1) ⇒ *page 81,* fig. 82 and complete your entry.

Tips

To repeat the last navigation announcement, press the **Nav-Info** control button ⇒ *page 92* or the right thumbwheel on the multifunction steering wheel ⇒ *page 99*. ■

Setting a destination from the map

A point on the map can be selected as a destination or stopover, stored in the directory or called up.*



Fig. 83 Changing the destination with the crosshairs



Fig. 84 Setting a map location as the destination

Requirement: Navigation mode must be active ⇒ *page 80*.

- Press the **Map** control button. A map is shown in the MMI display.
- Slide the crosshairs ⇒ fig. 83 horizontally, vertically or diagonally with the joystick to the desired destination ⇒ *page 32*.
- Press the control knob. The map side menu is activated. ▶

- Turn the control knob to **Opt. menu** and press the knob. The **Map position** menu is displayed.
- Turn the control knob to **Set as destination** and press the knob.
- Turn the control knob to **Set as single destination** or **Set as stopover** ⇒ *page 85* and press the knob.
- To start route guidance, turn the control knob to **Start route guidance** and press the knob. The route criteria and then the map with three possible routes ⇒ *page 86,* fig. 87 are shown in the MMI display.
- To select a route, turn the control knob to the left or right and press the knob.

If a destination is *not* present in the navigation data, you can move the crosshairs to the location of the desired city and set the geodata as a destination or add an entry in the directory.

Tips

- If you stop moving the crosshairs for a moment, additional information about the position of the crosshairs (such as city or street name if available) will be displayed.
- Turn the control knob to the left or right to increase or decrease the map scale in order to locate the desired destination more quickly with the crosshairs. ■

Entering a point of interest

Points of interest can be selected in the input field when entering single destinations. Six search categories are available.

Requirement: Navigation mode must be active ⇒ *page 80*.

- Turn the control knob to **Point of interest** ⇒ *page 81,* fig. 82 and press the knob. A list with search categories for points of interest appears in the MMI display.
- Turn the control knob to **Top categories** for example and press the knob.
- Turn the control knob to a category such as **Next parking lot**.
- Press the control knob. A list, for example of parking lots, appears in the MMI display. Arrows indicate the direction and the distance from the vehicle to the point of interest.
- Turn the control knob to a point of interest that is displayed and press the control knob. Details about the point of interest are displayed.
- To set the point of interest as a destination, turn the control knob to **Set as destination** and press the knob.
- To start route guidance, turn the control knob to **Start route guidance** and press the knob. The route criteria and then the map with three possible routes ⇒ *page 86,* fig. 87 are shown in the MMI display.
- To select a route, turn the control knob to the left or right and press the knob.

Additional search categories are:

In immediate vicinity

The point of interest is within the immediate vicinity of the vehicle. Points of interest can be selected from various categories. This function is useful when planning stopovers.

In vicinity of destination

The point of interest is in the vicinity of a destination that has been entered. For example, you can find a hotel in the destination city with ▶

this function. Points of interest can be selected from various categories.

In new city

Enter the name of the city using the speller. You can either search for the point of interest by name or select it from various categories. This function is useful for searching for points of interest in a city independent from the destination.

Nationwide

You can either search for the point of interest by name or select it from various categories. The point of interest is independent from the vehicle position and navigation destination. For example, you can navigate to an airfield in the selected country using this function.

Tips

- The points of interest in the **Top categories**, **In immediate vicinity** and **In vicinity of destination** search categories are sorted according to straight-line distance. The distance from the vehicle to the point of interest is updated automatically.
- When calculating the distance to a point of interest, the straight-line distance (empty arrow) is displayed first and then the actual driving distance (solid arrow). The points of interested are sorted according to straight-line distance from your current location.
- Some list entries cannot be displayed completely in the MMI display because they have too many letters/numbers. If you select these entries with the control knob, a separate window containing detailed information about the selected entry will open. ■

Entering a destination from the memory

Your previous destinations are stored automatically and can be loaded directly as navigation destinations.

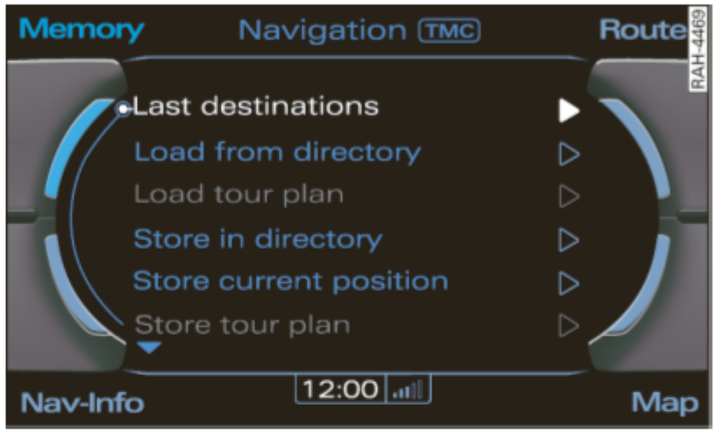


Fig. 85 Loading the last destination

Requirement: Navigation mode must be active ⇒ *page 80*.

- Press the **Memory** control button ⇒ fig. 85.
- Turn the control knob to **Last destinations** ⇒ fig. 85.
- Press the control knob. A list with the last destinations you entered appears in the MMI display.
- Turn the control knob to select a destination.
- Press the control knob. The destination data is set as a destination/stopover.
- To start route guidance, turn the control knob to **Start route guidance** and press the knob. The route criteria and then the map with three possible routes ⇒ *page 86,* fig. 87 are shown in the MMI display.
- To select a route, turn the control knob to the left or right and press the knob. ▶

Tips

The list of previous destinations can be erased ⇒ *page 95*. ■

Entering a stopover

You can include up to nine stopovers and the end destination in the tour plan.



Fig. 86 Tour plan

Requirement: The Navigation mode must be started ⇒ *page 80*, a destination must be entered ⇒ *page 80* and the input field must be displayed ⇒ *page 80,* fig. 80.

Entering stopover with an address

- Turn the control knob to **Add stopover** and press the knob.
- Enter the stopover ⇒ *page 81*.
- Turn the control knob to **Set as stopover** and press the knob.
- To select the desired location in the tour plan, turn the control knob to the left or right and press the knob ⇒ fig. 86.
- To start route guidance, turn the control knob to **Start route guidance** and press the knob. The route criteria and then the map ⇒ *page 87* are displayed in the MMI display.

Setting a stopover from the map

- Press the **Map** control button. A map is shown in the MMI display.
- Select a stopover in the map ⇒ *page 82,* fig. 83.
- Turn the control knob to **Set as stopover** and press the knob.
- To select the desired location in the tour plan, turn the control knob to the left or right and press the knob ⇒ fig. 86.
- To start route guidance, turn the control knob to **Start route guidance** and press the knob. The route criteria and then the map ⇒ *page 87* are displayed in the MMI display.

Setting a stopover from the memory

- Turn the control knob to **Add stopover** and press the knob.
- Select a destination from the list of the last destinations you entered ⇒ *page 84*.
- Press the control knob. The destination data is set as the stopover.
- To select the desired location in the tour plan, turn the control knob to the left or right and press the knob ⇒ fig. 86.
- To start route guidance, turn the control knob to **Start route guidance** and press the knob. The route criteria and then the map ⇒ *page 87* are displayed in the MMI display. ▶

To delete all stopovers from the tour plan, turn the control knob to **Enter single destination** and confirm the message in the MMI display with **Yes**.

Tips

Has your route or tour plan changed? No problem! Simply select the destination/stopover with the control knob and press the knob. You can now **Drive to this destination now** or **Change**, **Move** or **Delete** the destination/stopover. ■

Alternative route

Select your preferred route to a single destination from up to three suggested routes.

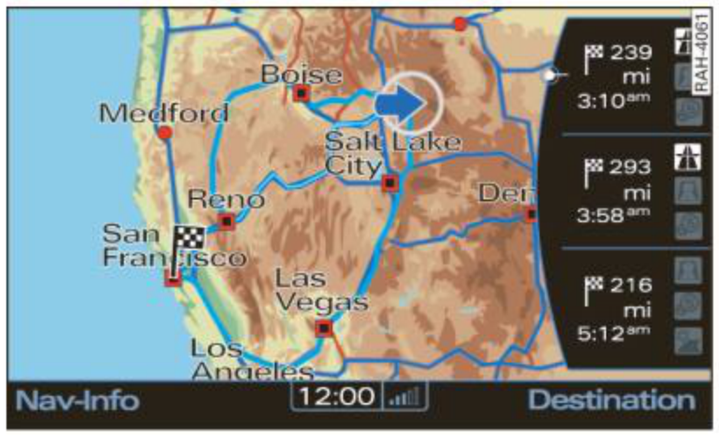


Fig. 87 Suggested routes

The route highlighted after switching to the map display is the route that was calculated according to the route criteria you selected ⇒ *page 92*. For example, if you have selected **Short** in the **Route options** menu, the shortest route is highlighted. If possible, three alternative routes with the same route criteria will be offered for your selection.

The suggested routes and your criteria are displayed in the route side menu in the MMI display.

Information applicable to the route you have selected is highlighted in white:

- Distance to the destination and calculated arrival time
- Symbols for using expressways, toll roads or ferries on the planned route

You can select the possible routing in the alternative routes by turning and pressing the control knob.

Tips

The routes may overlap if there are only a few routes available to the destination. ■

Stopping route guidance

Requirement: Route guidance must be active ⇒ *page 80*.

- Press the NAV function button, or
- Press the **Destination** control button.
- Turn the control knob to **Cancel route guidance** and press the knob.

You can also cancel route guidance by entering a new destination ⇒ *page 81*.

Tips

The data and settings remain entered when route guidance is stopped. ■

Display

In the MMI display



Fig. 88 Map with inactive side menu



Fig. 89 Map with active side menu

If you press the **Map** control button once route guidance has started, the map with inactive side menu ⇒ fig. 88 will appear in the MMI display.

In this view, you can turn the control knob to the right or left to increase or decrease the map scale. You can move the crosshairs in the map with the joystick to select a city ⇒ *page 32*.

Press the control knob to activate the side menu ⇒ fig. 89. You can now change the map display in the side menu. Turn the control knob to the desired location and press the knob.

Press the RETURN button to leave the side menu.

1. Direction. The map is either oriented to the **North** or according to the **Dir. of travel** ⇒ *page 93*. You can switch between north and the direction of travel by selecting the direction in the active side menu and pressing the control knob.
2. Scale. Turn the control knob to the left or right to decrease or increase the scale. You can also change the scale in the active side menu. The last setting is saved.
3. Distance to destination/stopover
4. Calculated arrival time to the destination/stopover
5. TMC status display
6. Altitude display
7. **Destination** control button. Change to input field ⇒ *page 80,* fig. 80 or the tour plan ⇒ *page 85,* fig. 86.
8. Examples of selected map contents
9. Vehicle location
10. Display of the geocoordinates where the crosshairs are located (latitude and longitude)
11. If you select the map content with the crosshairs, available information such as the address, telephone number or traffic reports will be displayed.
12. Move along the route. This function can be used while route guidance is active. Turn the control knob to the left or right to move the map along the current route.
13. Map location menu. The location of the crosshairs can be set as the destination or stopover, stored in the directory or called up ⇒ *page 82*. The geocoordinates (latitude and longitude) of the crosshairs are displayed.

Tips

You can choose between four map types ⇒ *page 93*. ■

In the driver information system



Fig. 90 Lane display



Fig. 91 Turn display

Once you have entered a destination or tour and started route guidance, the navigation information will be displayed in the driver information system. If you select another function such as the radio with the multifunction steering wheel, the navigation will be replaced with the selected function ⇒ *page 98*.

(1) Distance until change of direction
(2) Calculated arrival time
(3) Total mileage to the destination/stopover
(4) Name of the current expressway, highway or street. An arrow in front of the street name indicates that you should turn onto that street.
(5) Turn arrow. An upcoming turn is also indicated.
(6) Bar graph. A bar graph appears when a direction arrow is displayed. The fewer bars are shown, the shorter the distance is until the turn.

WARNING

The route calculated by the navigation system is a recommendation for reaching your destination. Obey traffic lights, stopping restrictions, one-way streets, lane change restrictions, etc.

Tips

An exclamation mark "**!**" in front of the street name indicates that the information about this street or this section of the route is not complete in the navigation data that the MMI contains. Obey traffic laws such as one-way streets or pedestrian zones. ■

Storing a destination

In the directory (single destination)

A single destination can either be stored as a new address car or assigned to an existing one.



Fig. 92 Address card

Requirement: You must enter a single destination ⇒ *page 80*.

Storing a destination as a new address card

- Press the **Memory** control button.
- Turn the control knob to **Store in directory** and press the knob.
- Turn the control knob to **New entry** and press the knob. An input field appears ⇒ *page 88,* fig. 92.
- Turn the control knob to **Last name** and press the knob. The speller appears in the MMI display ⇒ *page 31*.
- Enter the name with the speller.
- Enter additional data.
- Turn the control knob to **Store entry** and press the knob.

Assigning the destination to an existing address card

- Press the **Memory** control button.
- Turn the control knob to **Store in directory** and press the knob.
- To assign the destination to an address card, turn the control knob to an entry, or
- Turn the control knob to **Find entry** and press the knob to search for an address card. The speller appears in the MMI display ⇒ *page 31*.
- Enter the name of the entry you would like to search for, or
- Turn the control knob in the speller to **LIST** and press the knob. All stored directory entries are listed.
- Turn the control knob to the desired entry and press the knob. The address card opens.
- Turn the control knob to **Store entry** and press the knob.

If you have already stored a destination for an existing address card, the new destination automatically overwrites the old destination.

Check the box for the **Display as favorite** function to access the destination quickly. Top destinations are listed in the input menu ⇒ *page 80,* fig. 80 and can be selected there directly.

Tips

- You can use the **Edit directory** function to access the address card to enter more information ⇒ *page 64*.
- For information on managing the directory, refer to ⇒ *page 58*. ■

Storing a tour plan

Tour plans can be stored and loaded later as a new navigation destination.

Requirement: You have entered a tour plan ⇒ *page 80*.

- Press the **Memory** control button.
- Turn the control knob to **Store tour plan**.
- Press the control knob. The speller appears in the MMI display ⇒ *page 31*.
- Enter a name for the tour plan using the speller.
- Select **OK** in the speller and press the control knob. The tour plan entered is stored.

If the **Store tour plan** function is *grayed out*, either the tour memory is full or no tour plan was entered. Please delete any tours you do not need from the memory ⇒ *page 91* or enter a tour plan. ■

Loading a destination

Loading from the directory



Fig. 93 Loading a destination from the directory

Requirement: Navigation mode must be started ⇒ *page 80* and a navigation destination must be stored in the directory ⇒ *page 64*.

- Press the **Memory** control button.
- Turn the control knob to **Load from directory**.
- Press the control knob. A list of entries appears in the MMI display ⇒ fig. 93.
- To select a destination from the list, turn the control knob to an entry and press the knob, or
- Turn the control knob to **Find entry** and press the knob to search for an entry. You can now search for a name using the speller.
- To start route guidance, turn the control knob to **Start route guidance** and press the knob. The route criteria and then the map ⇒ *page 87* with three possible routes ⇒ *page 86*, fig. 87 are shown in the MMI display. An arrow appears in the driver information system.
- To select a route, turn the control knob to the left or right and press the knob. ■

Loading a tour plan

Stored tour plans can be loaded as a new navigation destination.

Requirement: Navigation mode must be started ⇒ *page 80* and a tour must be stored ⇒ *page 89*.

- Press the **Memory** control button.
- Turn the control knob to **Load tour plan**.
- Press the control knob. A list of entries appears in the MMI display.
- To select a tour from the list, turn the control knob to an entry and press the knob.
- To start route guidance, turn the control knob to **Start route guidance** and press the knob. The route criteria and then the map ⇒ *page 87* are displayed in the MMI display. ■

Showing traffic information in the map

Traffic reports can be displayed in the map.

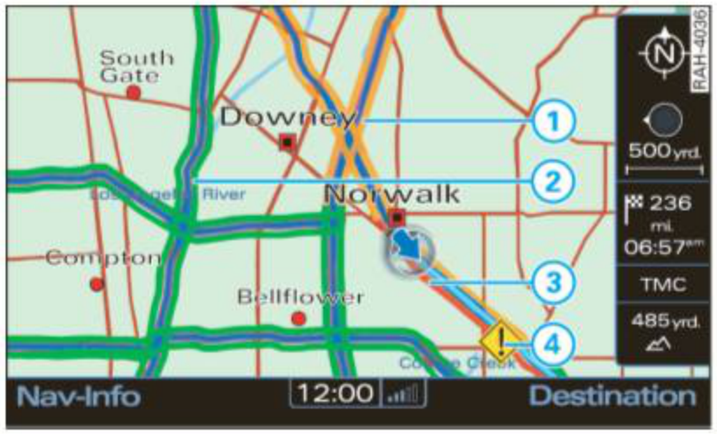


Fig. 94 Traffic reports display in the map

Requirement: Navigation mode must be active ⇒ *page 80*.

- Press the SETUP function button.
- Turn the control knob to **Map content** and press the knob.
- Turn the control knob to **Traffic information** and press the knob.

The traffic information is displayed in the map with colored lines:

(1) orange lines: slow traffic
(2) green lines: free flow traffic
(3) red lines: stop and go

A colored warning symbol (4) in the map indicates there is a traffic incident directly ahead.

In addition to traffic reports, you can also display (✓) or hide additional information such as expressway exits, 3D landmarks or restaurants in the map. ■

Additional settings

Top destination

- Select: the NAV function button.

You can activate the **Display as favorite** function (✓) when storing a navigation destination in the directory. Top destinations are displayed at the end of the input field ⇒ *page 80,* fig. 80 and can be selected directly when entering a destination. ■

Store current position

- Select: NAV function button > **Memory** control button > **Store current position**.

The current vehicle position is added to a new/existing entry in the directory. ■

Deleting a tour plan

- Select: NAV function button > **Memory** control button > **Delete tour plan**.

Stored tour plans can be deleted individually. ■

Route list

- Select: NAV function button > **Route** control button > **Route list**.

The route list is only visible when route guidance is active. It contains the following information: ▶

- Information on the route characteristics
- Length of the route sections
- Street names

On longer route sections, additional information may be displayed such as possible junctions when driving on expressways. ■

Route criteria

– Select: NAV function button > **Route** control button > **Route criteria**.

The route is calculated based on various criteria.

Alternative route

The option to select from up to three suggested routes to a single destination can be switched on (✓) or off.

Dyn. route

When dynamic route is switched on, the route is adapted automatically[2)] according to traffic conditions.

If the system does not calculate a detour even though you have selected Dynamic route **on** and a traffic jam was reported on the calculated route, then the detour the system calculated would take more time than the time spent waiting in the traffic jam.

Route options

You can select a **short**, **fast** or **Econ** route.

Expressway/toll road/ferry

Select the **avoid** option if the navigation system should not include expressways, toll roads or ferries when calculating a route.

2) Only with a valid SDARS subscription.

Tips

If avoiding a criterium makes route guidance impossible, that criterium will still be used when calculating the route. ■

Avoiding a route

– Select: NAV function button > **Route** control button > **Avoid route from here**.

When route guidance is active, the calculated route will avoid the area you have specified. The navigation system calculates an alternative route.

You can adjust the length of the route to be avoided by turning the control knob.

When you restart route guidance, the area to be avoided must be entered again if you would still like to avoid it.

Tips

If the MMI does not calculate an alternative route, that means one is not available. ■

Information

– Select: NAV function button > **Nav-Info** control button.

When route guidance is active, you will receive the following information about your destination:

- Receivable satellites
- Data about the vehicle location: current street, data about the geographical location of the vehicle (latitude and longitude, altitude)
- Destination city/stopovers ▶

- Calculated arrival time to the destination/stopover
- Distance to destination/stopover

The last navigation announcement is repeated.

Calling: (telephone number)*

If telephone numbers for a point of interest are stored in the MMI navigation data and your vehicle is equipped with a *factory installed* telephone*, you can call the selected point of interest. For example, you can make reservations at a restaurant before you reach your destination. ■

Map display

– Select: NAV function button > SETUP function button > **Map display**.

Day

The map is displayed with a light background.

Night

The map is displayed with a dark background.

Auto

The map display changes from day to night when the headlights are switched on. ■

Orientation

– Select: NAV function button > SETUP function button > **Orientation**.

North[3)]

The map is oriented to the north.

Dir. of travel

The map is oriented to the direction of travel. At a scale of 100 km, the map is oriented to the north.

Auto

At a scale up to 1.5 miles (2.41 km), the map is oriented to the direction of travel. At a scale greater than 1.5 miles (2.41 km), the map is oriented to the north. ■

Map type

– Select: NAV function button > SETUP function button > **Map type**.

Destination

The destination is marked with a destination flag. The map indicates the destination is oriented to the north.

Position 2D

The current vehicle position is displayed. The map orientation corresponds to the setting in the **Orientation** menu ⇒ *page 93*.

Position 3D

The current vehicle position is displayed in a three-dimensional terrain map. The **Dir. of travel** orientation is automatically selected ⇒ *page 93*. The map orientation is set to **North** when the scale is 100 km or greater. At a scale between 30 - 100 m, the display will show three-dimensional city models and landmarks. ▶

3) Only possible in the 2D map type display

Overview

The entire route from the vehicle location to the destination is displayed on the map. The map scale depends on the length of the route. The map is oriented to the north. ■

Automatic zoom

– Select: NAV function button > SETUP function button > **Auto zoom**.

The map automatically zooms in on the intersection. This provides a detailed display and makes it easier to recognize the streets. The map is oriented to the direction of travel when it is zoomed in. The three-dimensional city model is hidden temporarily. ■

Additional information

– Select: NAV function button > SETUP function button > **Addit. info**.

On

The **Route** and **Exit** information is displayed on the map.

Route

Information on upcoming maneuvers or traffic reports are displayed in the left half of the map. The right half of the map continues to show the map display you have selected.

Exit

The left half of the map contains a window that shows expressway exits. The right half of the map continues to show the map display you have selected. Parallel to this, the window also shows an enlarged view of the intersection area.

The updated distance to the turn is displayed next to the enlarged view. The name of the street you will turn onto, the street number and/or name of the exit and the direction of travel are also displayed at the same time.

Off

No additional info is shown in the MMI display. ■

Spoken cues

– Select: NAV function button > SETUP function button > **Spoken cues**.

The navigation announcements in the navigation mode can be **Complete** or **Compact**.

With **off**, only *important* announcements are played during route guidance. You can press the right thumbwheel (4) ⇒ *page 98,* fig. 96 to play a navigation announcement. ■

Spoken cues (phone)

– Select: NAV function button > SETUP function button > **Spoken cues**.

With the **Off (phone)** setting, navigation announcements play during route guidance but they do *not* play during a phone call. ■

Volume of spoken cues

– Select: NAV function button > SETUP function button > **Volume of spoken cues**.

Turn the control knob to the left or right to adjust the volume of the navigation announcements. Press the control knob to leave the menu. ■

Presentation mode

– Select: NAV function button > SETUP function button > **Set starting point** or **Demo mode**.

You enter a starting point manually when you would like to calculate a route starting from a location other than the vehicle position, for example. Start demo mode to simulate route guidance. The demo mode helps you effectively plan and display a route by showing map contents or route criteria.

Tips

Route simulation guidance in demo mode is only displayed when the vehicle is stationary for safety reasons. ■

Deleting last destinations

– Select: NAV function button > **Memory** control button > **Delete previous destinations**.

The destinations you have entered last are automatically stored ⇒ *page 84*. They can be deleted individually or all at once. ■

Calling up traffic information

Applies to vehicles: with Satellite Digital Audio Radio Service

Introduction

TMC traffic reports can be shown in the MMI display through Sirius* (satellite radio) ⇒ *page 42*. This happens automatically and silently. Even more practical is the fact that the MMI uses these messages when dynamic route is switched on to navigate around traffic problems such as traffic jams, when possible ⇒ *page 92*.

Traffic report reception is indicated by the **TMC** symbol in the title line in the Navigation and Info modes:

TMC symbol	Explanation
The TMC symbol is displayed	TMC stations are available and dynamic navigation is switched **on** ⇒ *page 92*.
The TMC Symbol is crossed out	TMC stations are *not* available and dynamic navigation is switched **on**.
No TMC symbol	Dynamic navigation is switched **off**.

Applies to vehicles: with Satellite Digital Audio Radio Service

Calling up TMC traffic reports

The TMC traffic reports are sorted according to the distance from the current position. Traffic reports for an active route are displayed first.

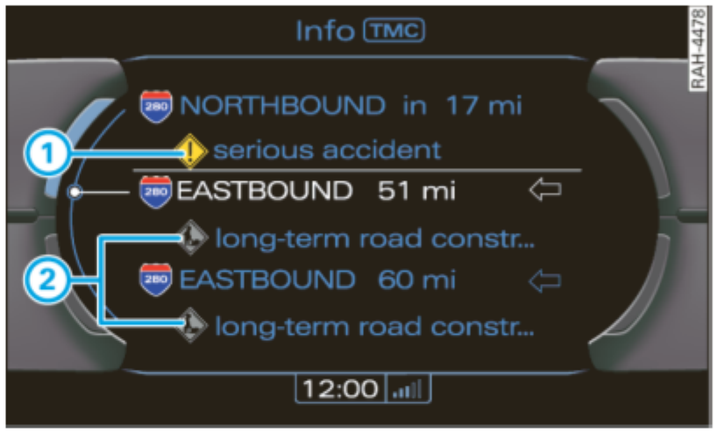


Fig. 95 Calling up traffic reports

- Press the INFO function button.
- Turn the control knob to an entry.
- Press the control knob. A detailed view is displayed.
- To call up the next traffic report in the detailed view, turn the control knob to **Next message** and press the knob.

When route guidance is active, traffic reports that affect your route are displayed in order based on distance and marked with a colored symbol (1) ⇒ fig. 95. A traffic incident that is immediately ahead is displayed first.

All remaining traffic reports are listed last with a grayed-out symbol and sorted according to straight-line distance from the current position (2) ⇒ fig. 95.

Traffic reports that are especially important such as a driver driving the wrong way are displayed automatically in the MMI display. Press the RETURN button or the control knob to cancel the report.

When route guidance is deactivated, traffic reports are displayed with a colored symbol and sorted according to distance from the current position.

Tips

To use the traffic message channel (TMC), you must contract the Sirius* service provider ⇒ *page 42*. ■

General operation

Introduction

You can call up and control the MMI functions such as Navigation, Telephone, Radio, Media or the voice recognition system with the multifunction steering wheel.*

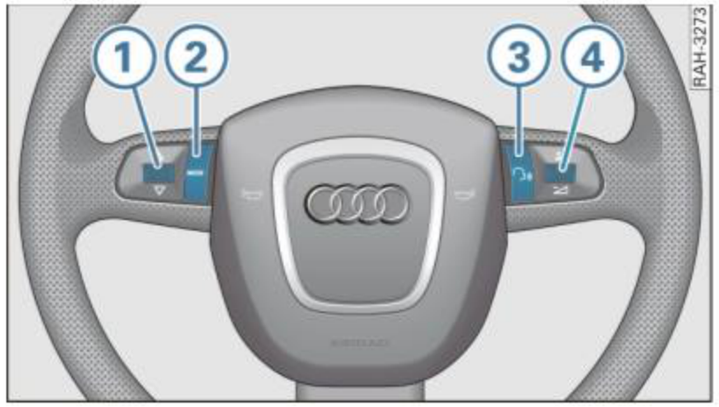


Fig. 96 Controls on the multifunction steering wheel



Fig. 97 Display in the driver information system

With the multifunction steering wheel, you can control selected functions of the active audio source, telephone* or navigation with active route guidance without taking your hands off the wheel. It's very convenient!

The functions are shown in the driver information system ⇒ fig. 97. You can also switch the voice recognition system on and off and change the volume with the multifunction steering wheel.

It is operated by pressing and rolling the buttons (1) to (4) ⇒ fig. 96.

- Pressing the MODE (2) button multiple times changes between navigation, the telephone* and the active audio source. The function is also displayed in the driver information system ⇒ fig. 97. You can exit the submenu for the active function by pressing the MODE button.
- You can select a submenu for the active function by rolling the left thumbwheel (1).
- The voice recognition system is activated by pressing the Talk button (3). Pressing and holding the Talk button again ends the dialogue.
- Rolling the right thumbwheel (4) up/down increases/decreases the volume.

Tips

- You can switch the navigation display off with the reset button on the windshield washer stalk. Comprehensive information on this topic can be found in the Owner's Manual of your vehicle.
- The trip computer is also displayed in the driver information system. Comprehensive information on this topic can be found in the Owner's Manual of your vehicle. ■

Adjusting the volume

You can change the volume of the active audio source and the navigation announcements with the multifunction steering wheel.

Requirement: The MMI must be switched on ⇒ *page 28*.

Increasing and decreasing the volume

– Roll the right thumbwheel (4) ⇒ *page 98,* fig. 96 up/down.

Muting

– To mute the MMI, roll the right thumbwheel (4) down until a speaker symbol with a line through it appears in the status line in the MMI display. If the drive is active, it will be stopped.

– Roll the right thumbwheel up to deactivate the mute or pause function. The drive that was stopped will start playing again.

Navigation announcements

– Press the right thumbwheel (4). The last navigation announcement is repeated.

– To change the volume, roll the right thumbwheel (4) up or down while an announcement is playing. ■

Listening to the radio

Selecting the radio



Fig. 98 Frequency band list

Requirement: The radio is on ⇒ *page 42*.

– Press the MODE button (2) ⇒ *page 98,* fig. 96 until the radio menu appears in the driver information system ⇒ fig. 98.

Would you like to learn more about operating the radio in your vehicle? You will find a detailed description in ⇒ *page 41*. ■

Selecting the frequency band

The three frequency bands FM, AM and Sirius (satellite radio) are displayed in the title line of the driver information system.*

Requirement: The radio menu is displayed ⇒ *page 99*.

– Roll the left thumbwheel (1) ⇒ *page 98,* fig. 96 down to a frequency band.

– Press the left thumbwheel to select the frequency band. ■

Selecting a station from the station list



Fig. 99 Radio menu

Requirement: The radio menu is displayed ⇒ fig. 99.

– Roll the left thumbwheel (1) ⇒ *page 98,* fig. 96 down/up to a radio station.

– Press the left thumbwheel to select the station. ■

Selecting a stored station

Requirement: The radio menu is displayed ⇒ fig. 99 and a station is stored in the preset list ⇒ *page 46*.

– Roll the left thumbwheel (1) ⇒ *page 98,* fig. 96 to **Memory**.

– Press the left thumbwheel. The preset list is displayed.

– Roll the left thumbwheel to a radio station and press the left thumbwheel. The radio station is selected. ■

Playing media

Calling up media

Requirement: The selected source must contain audio files.

– Press the MODE button (2) ⇒ *page 98,* fig. 96 repeatedly until a track list ⇒ fig. 100 or folder structure ⇒ *page 50* appears in the driver information system.

Would you like to learn more about using the media function in your vehicle? You will find a detailed description in ⇒ *page 49*.

Tips

Select an audio source or a CD in the CD changer* through the MMI control panel ⇒ *page 15*. ■

Selecting a folder



Fig. 100 Track list

Requirement: A folder must be displayed ⇒ fig. 100.

– Roll the left thumbwheel (1) to a folder.

– Press the left thumbwheel to select the folder. ▶

Tips

- To move to the next highest level, turn the left thumbwheel to the folder **Go up** ⇒ *page 100,* fig. 100 and press the thumbwheel.
- You can scroll through long lists of folders quickly by turning the control knob quickly. The scrolling speed depends on the number of folders. ■

Selecting a track



Fig. 101 Track list

Requirement: Tracks must be displayed ⇒ *page 100,* fig. 100.

– Roll the left thumbwheel (1) ⇒ *page 98,* fig. 96 to a track ⇒ *page 100,* fig. 100.

– Press the left thumbwheel to select the track.

Tips

You can scroll through long lists of tracks quickly by turning the control knob quickly. The scrolling speed depends on the number of tracks. ■

Pausing/resuming playback

Requirement: An audio file must be playing ⇒ *page 49*.

– Turn the right thumbwheel (4) ⇒ *page 98,* fig. 96 all the way down to pause playback.

– Turn the right thumbwheel all the way up to resume playback. ■

Calling

Applies to vehicles: with cell phone prep

Introduction

Calling in the vehicle has become an everyday activity. You can operate all of the relevant telephone functions safely and easily using the multifunction steering wheel.

The following messages could appear in the driver information system:

Please wait ...	The connection between the MMI and the paired cell phone is being established.
No connection	There is no connection to the phone network.
Incoming call	There is an incoming call. The caller's phone number will also be displayed if it was transmitted.
Busy	The number dialed is busy.
Automatic redial	The last number dialed is dialed again automatically after a brief waiting period.
Telephone is switched off	The telephone is switched off.

Connecting...	The number is being dialed.
End call...	The connection has ended.
No entries available	The directory does not contain any entries or the entries have not been read into the MMI.
Please connect cell phone	The telephone is not connected with the vehicle.

Would you like to learn more about operating the telephone in your vehicle? You will find a detailed description in ⇒ *page 70*.

Tips

- The telephone functions can only be controlled on the multifunction steering wheel if the telephone equipment was installed *at the factory*.
- The telephone functions depend on the cell phone and whether they are supported by your cell phone service provider or not. Refer to www.audiusa.com/bluetooth (www.audicanada.ca/technology) for compatible phone list. ■

Applies to vehicles: with cell phone prep

Selecting telephone

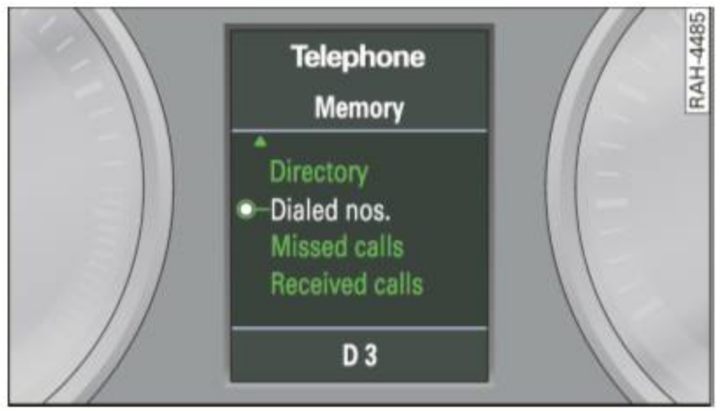


Fig. 102 Telephone menu

Requirement: The cell phone package ⇒ *page 21* has been activated.

– Press the MODE button until the Telephone menu appears in the driver information system ⇒ fig. 102.

The following options are shown in the telephone menu:

- Directory: contains the MMI directory entries ⇒ *page 58*.
- Dialed numbers: contains the telephone numbers dialed most recently.
- Missed calls: contains the most recent calls not received.
- Received calls: contains the most recently received calls.

You can dial the selected phone number directly from the call lists. Press the MODE button (2) to close an open call list. ■

Applies to vehicles: with cell phone prep

Dialing a phone number and ending a call

Phone numbers stored in the directory and in the call lists can be dialed.



Fig. 103 List of directory entries

Requirement: The Telephone menu is displayed ⇒ *page 102,* fig. 102.

Calling

- Roll the left thumbwheel (1) ⇒ *page 98,* fig. 96 to **Dialed numbers**, **Directory**, **Missed calls** or **Received calls** ⇒ *page 102,* fig. 102.
- Press the left thumbwheel. A list with entries appears in the driver information system ⇒ fig. 103.
- Roll the left thumbwheel to an entry and press the left thumbwheel.

Making another call

- Roll the left thumbwheel (1) ⇒ *page 98,* fig. 96 to **Hold** and press the left thumbwheel. The phone call is placed on hold.
- Press the MODE button (2) ⇒ *page 98,* fig. 96 until the Telephone menu ⇒ *page 102,* fig. 102 is displayed in the driver information system.
- Roll the left thumbwheel either to one of the call lists or the **Directory** and press the left thumbwheel ⇒ fig. 103. A list with entries appears in the driver information system.
- Roll the left thumbwheel to the entry and press the left thumbwheel. All telephone numbers stored for that entry are displayed.
- Roll the left thumbwheel to a phone number and press the left thumbwheel. The phone call is made and the active audio sources is muted.

Ending a call

- Roll the left thumbwheel to **End call** and press the left thumbwheel.

If several phone numbers are stored in a directory entry, the list with stored numbers is displayed first when the entry is selected. Roll the left thumbwheel (1) to the desired phone number and press the left thumbwheel.

When you have ended an active call, the call on hold remains on hold. Select **Resume** and press the left thumbwheel to resume the call on hold.

Tips

- The multifunction steering wheel can only be used to dial stored telephone numbers. Enter a new phone number using the MMI speller ⇒ *page 71* or the voice recognition system ⇒ *page 110*.
- The telephone functions depend on the cell phone service provider and the cell phone you are using. You can obtain more information from your cell phone service provider.

- If you activate **Off (phone)** while in navigation mode, navigation announcements will not play during a call ⇒ *page 94*.
- You can scroll through the directory entries quickly in blocks by rolling the left thumbwheel. ■

Applies to vehicles: with cell phone prep

Answering/ignoring a call

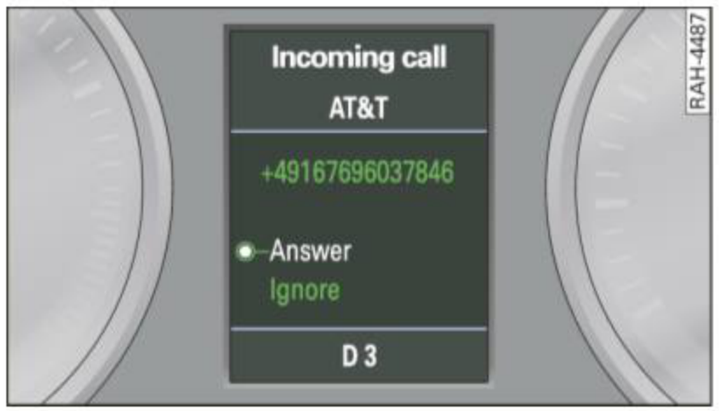


Fig. 104 Incoming call

Requirement: There must be an incoming call ⇒ fig. 104.

Answering a call

– Roll the left thumbwheel (1) ⇒ *page 98*, fig. 96 to **Answer** and press the left thumbwheel.

Ignoring a call

– Roll the left thumbwheel to **Ignore** and press the left thumbwheel.

The *Name*, *Phone number* or **Unknown** appears in the driver information system display depending on whether the caller has been stored in the directory and if the phone number has been transmitted. ■

Applies to vehicles: with cell phone prep

Options during a call

When there is an incoming call during an active phone call, the **Replace** and **Ignore** functions appear in the driver information system.

If you select **Replace**, the active call will be replaced with the incoming call. If you select **Ignore**, the incoming call will be ignored. A call on hold remains in queue.

Tips

The **Call waiting** function must be activated in your cell phone to be alerted to an incoming call during an active call. The call options depend on the cell phone and service provider. You can obtain more information from your cell phone service provider. ■

Navigating

Calling up navigation



Fig. 105 Navigation in the driver information system

Requirement: Navigation mode must be active ⇒ *page 80*. ▶

– Press the MODE button (2) ⇒ *page 98,* fig. 96 until navigation appears in the driver information system ⇒ *page 104,* fig. 105.

Would you like to learn more about the navigation function in your vehicle? You will find a detailed description in ⇒ *page 79*.

Tips

You can switch the navigation display off with the reset button on the windshield washer stalk. Comprehensive information on this topic can be found in the Owner's Manual of your vehicle. ■

Repeating navigation announcements

– Press the right thumbwheel (4) ⇒ *page 98,* fig. 96 to repeat the last navigation announcement. ■

Speech input

Switching the voice recognition system on and off

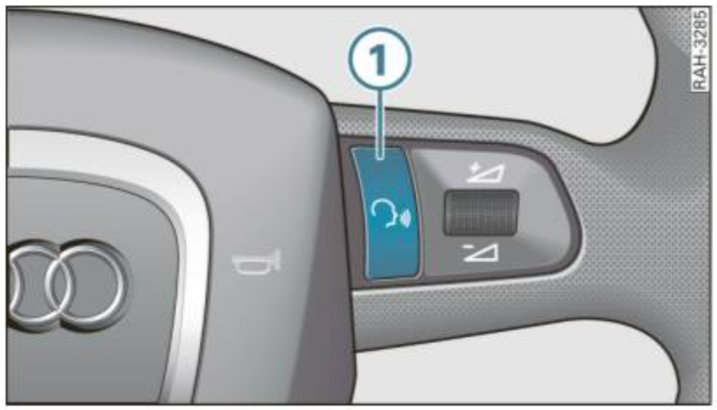


Fig. 106 Multifunction steering wheel: Talk button

Switching on

– Press button (1) ⇒ fig. 106.

Switching off

– Press and hold the button until the message **Cancel** plays.

The input signal **Beep** plays when the system is ready for dialogue. Then the desired functions can be selected using voice commands ⇒ *page 107*.

Tips

Would you like to learn more about the voice recognition system in your vehicle? You will find a detailed description in ⇒ *page 107*. ■



Fig. 107 Voice recognition system command overview

Voice recognition system

Introduction

You can control many MMI functions through the voice recognition system.

With the voice recognition system, you can switch between the various modes easily by voice, for example for Navigation to Telephone*. In conjunction with hands-free operation it is not necessary to pick up the cell phone. The voice recognition system recognizes commands and numbers regardless of the speaker.

Individual training improves the recognition function of the voice recognition system by adapting it to your voice or pronunciation ⇒ *page 39*.

The voice recognition system automatically creates a name tag for each entry in the directory. Using the voice recognition system, you can select the private or business address of an entry as a navigation destination or call up the entry. You can also access other functions: you can call up call lists, view the route list for a destination or show the map view in the MMI display ⇒ *page 112*.

It is okay if you do not know a particular command. Simply say the command **HELP** when the voice recognition system is switched on. The system will tell you the commands that are possible at that time or give you a tip ⇒ *page 108*. For the most important voice recognition system commands, refer to the command overview ⇒ *page 106*, fig. 107.

In which language would you like to use the voice recognition system? You can choose from English, French and Spanish ⇒ *page 38*.

For the system to understand you:

- Speak clearly and distinctly at a normal volume. Speak louder when there is loud ambient noise.
- Pronounce the commands evenly and do not leave long pauses.
- Do not speak a command when the voice recognition system is making an announcement.
- Close the doors, the windows and the sunroof* to reduce ambient noise. Make sure that passengers are not speaking when you are giving a voice command.
- Do not direct the air vents toward the hands-free microphone that is close to the front interior lights.
- Only use the system from the driver's position since the hands-free microphone is oriented toward that position.

Unrecognized voice commands

The systems reacts to your input with audible feedback. If a voice command is not recognized, the system asks **Pardon?** and asks you to repeat the command. After the third unsuccessful attempt, you will hear the message **Cancel** and the dialog ends.

WARNING

- **Please devote your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.**
- **Do not use voice recognition in emergencies because your voice may change in stressful situations. It may take longer to dial the number or the system may not be able to dial it at all. Dial the emergency number manually.** ■

General operation

Switching on and off

You can switch the voice recognition system on and off with the multifunction steering wheel.

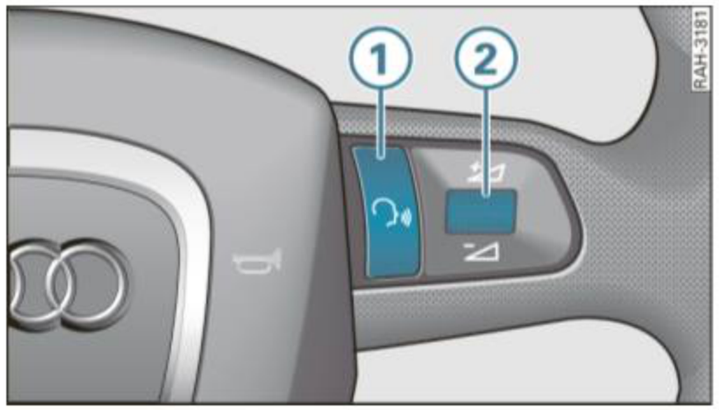


Fig. 108 Talk button and right thumbwheel

Requirement: The ignition and the MMI must be switched on ⇒ *page 28*, the A/C system must not be activated and you must not have a phone call in progress.

- Press the Talk button (1) ⇒ fig. 108 on the multifunction steering wheel briefly to switch the voice recognition system on. The input signal **Beep** indicates that the voice recognition system is ready. The status symbol (1) ⇒ fig. 109 appears in the MMI display. Any active audio source is muted.
- Say the desired command.
- To switch the voice recognition system off, say **CANCEL** or
- Press the Talk button (1) ⇒ fig. 108 and hold it down until you hear the message **Cancel**.

You can shorten a message by pressing the Talk button and speaking a new command.

Tips

- You can also deactivate the voice recognition system by pressing any button on the MMI control panel in the center console ⇒ *page 29*.
- Traffic announcements do not play during the dialog.
- The dialog stops when there is an incoming phone call and will continue if you ignore the call. The dialog is cancelled if you answer the call. ■

Operating the system



Fig. 109 Help texts in the MMI display



Fig. 110 Selecting an entry from the list

Commands

The voice recognition system uses two types of commands:

- Commands for the active mode such as **LAST DESTINATIONS** in the **Navigation** mode
- Global commands (regardless of mode) such as **NAVIGATION**

The command overview ⇒ *page 106,* fig. 107 provides an overview of the most important voice recognition system commands.

Selecting an entry from a list

The entries in a list such as missed calls, directory entries, street names, etc. are shown in the MMI display with item numbers ⇒ *page 108,* fig. 110. You can select a line by saying the line number, such as **LINE FOUR** or repeating one of the entries shown in the MMI display. You can also select through the MMI control panel by turning the control knob to an entry and pressing the knob.

You can scroll through the list displayed with the commands **NEXT PAGE/PREVIOUS PAGE** or **FIRST PAGE/LAST PAGE**.

Voice guidance

To switch voice guidance on or off during route guidance, say the command **VOICE GUIDANCE ON** or **VOICE GUIDANCE OFF**. Use the **COMPACT VOICE GUIDANCE** command to shorten the announcement.

Adjusting the volume

To adjust the voice recognition system volume with the multifunction steering wheel, turn the right thumbwheel (2) ⇒ *page 108,* fig. 108 up or down while an announcement is playing.

You can also adjust the voice recognition system volume by pressing the **Sound** control button while in the radio/media menu ⇒ *page 34*.

Help commands

You can say a help command when the voice recognition system is switched on ⇒ *page 108*. Possible help commands are:

- **HELP**
- **HELP SPEECH DIALOGUE SYSTEM**
- **HELP DIRECTORY**
- **HELP TELEPHONE***
- **HELP NAVIGATION**
- **HELP MAP**

Say the command **BACK** to return to the main help menu.

System-guided help

If the voice recognition system is switched on ⇒ *page 108* but you do not give a command, the system gives the prompt **Please enter a command or say help**. If you still do not give a command, the voice recognition system offers possible commands.

Example of system-guided help (the telephone* function is activated):

Operation/ Commands	Voice recognition system announcement
Press talk button briefly	Input signal: **Beep**
No command given	**Please enter a command or say help**
HELP	**Please choose one of the following topics. You can press the talk button at any time to enter a command.**
	All telephone commands
	Important telephone commands
	Commands for phoning
	Commands for the call lists

Tips

- You can interrupt a voice recognition system announcement at any time by pressing the Talk button on the multifunction steering wheel ⇒ *page 108,* fig. 108 and enter a new command.
- You can also adjust the volume by the turning the On/Off knob ⇒ *page 33*. ■

Calling

Applies to vehicles: with cell phone prep

Starting telephone mode

Requirement: The MMI telephone function must be active ⇒ *page 21* and the voice recognition system must be switched on ⇒ *page 108*.

– Say **TELEPHONE**. Telephone mode starts. The voice recognition system remains switched on for approximately five seconds to accept an additional command. ■

Applies to vehicles: with cell phone prep

Dialing a phone number

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

– Say **DIAL NUMBER**.

– Enter a group of numbers such as "**0-1-7-2-2**". The system repeats the block of numbers and displays them in the MMI.

– Say **DELETE** to delete the last block of numbers.

– Say **DIAL** to dial the number.

Tips

You can correct incorrect entries when entering a telephone number with the **CORRECTION**command. ■

Applies to vehicles: with cell phone prep

Calling

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

– To call the phone number stored in a directory entry, say **CALL (XY)**, for example **CALL "JOHN SMITH"**. The telephone number is dialed.

If several phone numbers are stored in an address card, you add the command **BUSINESS LAND LINE**, **BUSINESS MOBILE**, **PRIVATE LAND LINE** or **PRIVATE MOBILE**, for example **CALL JOHN SMITH PRIVATE MOBILE**.

Tips

When an address card is open, you can dial a phone number with the command **CALL PRIVATE** or **CALL BUSINESS** ⇒ *page 111*. ■

Applies to vehicles: with cell phone prep

Additional telephone mode commands

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

Accessing call lists

– Say **NUMBERS DIALED**, **RECEIVED CALLS** or **MISSED CALLS**. The call list is shown in the MMI display. You can dial a number by saying the line number.

Redialing

– Say **REDIAL**. The last numbered dialed is called. ■

Using addresses

Opening the directory

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

– Say **DIRECTORY**. The directory opens. The voice recognition system remains switched on for approximately five seconds to accept an additional command. ■

Using an entry

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

Searching for/opening an entry

– Say **FIND ENTRY**.

– Say the name of the address card if prompted by the voice recognition system. The address card opens.

Calling up an entry

– To call the phone number stored in a directory entry, say **CALL (XY)**, for example **CALL "JOHN SMITH"** ⇒ *page 110*. The telephone number is dialed.

Navigating to an entry

– Say **NAVIGATE TO (XY)** such as **NAVIGATE TO "JOHN SMITH"**. If a navigation destination is assigned to an address card, that destination is entered and route guidance begins.

Tips

You can start route guidance when an address card is open with the commands **NAVIGATE TO PRIVATE ADDRESS** or **NAVIGATE TO BUSINESS ADDRESS**. You can also dial phone numbers with the commands **CALL PRIVATE** or **CALL BUSINESS**. ■

Storing a voice memo

The MMI creates a name tag for each entry in the directory. You can also assign up to 50 personal name tags for address cards.

Requirement: An address card must be open ⇒ *page 111* and the voice recognition system must be switched on ⇒ *page 108*.

– Say **STORE NAME**.

– Say the personal name tag.

– Repeat the personal name tag if prompted by the voice recognition system. The personal name tag is stored in the MMI. ▶

Name tags can only be stored using the voice recognition system. The name tags **do not** change the data stored in the directory.

You must repeat the name tag with the same pronunciation and volume. Assign clear, distinct names as name tags.

Do not include any long pauses in name tags. ■

Reading name tags

You can have name tags read.

Requirement: An address card must be open ⇒ *page 111* and the voice recognition system must be switched on ⇒ *page 108*.

– Say **READ NAME**. The personal name tag is read.

Tips

You can also listen to personal name tags for address cards using the MMI control panel ⇒ *page 66*. ■

Deleting a personal name tag

Deleting in the address card

– Turn the control knob to **Delete name tag** and press the knob while the address card is open ⇒ *page 111*. The personal name tag is deleted.

Deleting in the SETUP menu

– Press the NAME function button. A list of entries appears in the MMI display.

– Press the SETUP function button.

– Turn the control knob to **Delete voice memos** and press the knob.

– Turn the control knob to **Delete individually** or **Delete all entries** and press the knob.

– Turn the control knob to **Yes** and press the knob to begin the deletion process. ■

Navigating

Starting navigation mode

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

– Say **NAVIGATION**. Navigation mode starts. The voice recognition system remains switched on for approximately five seconds to accept an additional command. ■

Entering a destination

The voice recognition system offers two ways to enter destinations: system-guided destination entry or entering individual commands.

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

System-guided destination entry

– Say **ENTER DESTINATION**. The input field appears in the MMI display ⇒ *page 80,* fig. 80.

– Say the desired city when prompted.

– Say the desired street when prompted. ▶

– Say the desired house number when prompted, or
– Say **START ROUTE GUIDANCE** to navigate to the destination entered.

Entering individual commands

– To enter the country, say **ENTER COUNTRY** and say the country name.
– To enter the town, say **ENTER TOWN** and say the name of the town.
– To enter the street, say **ENTER STREET** and say the complete name of the street, such as **NORTH FIFTH AVENUE**.
– To enter a street in the current town, say **ENTER STREET IN VICINITY** and say the complete name of the street, such as **NORTH FIFTH AVENUE**.
– To enter the house number, say **ENTER HOUSE NUMBER** and say the house number one digit at a time.
– Say **START ROUTE GUIDANCE** to navigate to the destination entered.

It may take a few seconds to search the location. The MMI display will then show a list of possible city names. You can select the desired location by saying the line number, such as **LINE FOUR** or turning and pressing the control knob. You can scroll through the list of location names with the commands **NEXT PAGE/PREVIOUS PAGE**. Because many countries have several cities with the same name, it may be necessary to select the city from a list again ⇒ *page 109*.

Tips

- Once a city is entered into the input field, you can start route guidance to the city center by press the talk button and saying **START ROUTE GUIDANCE**. You can also start route guidance through the MMI control panel ⇒ *page 81*.
- You can also switch the voice recognition system on and enter a command during active route guidance and messages about driving maneuvers.
- For additional information on navigation functions, refer to⇒ *page 79*. ■

Points of interest

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

– Say **ENTER SPECIAL DESTINATION**.
– After the announcement **Please enter the search area**, say **IN IMMEDIATE VICINITY**, **IN VICINITY OF DESTINATION**, **IN NEW TOWN** or **NATIONWIDE**. A list with point of interest categories appears in the MMI display.
– To select an entry from the list, say the line number, for example **LINE TWO** or say the name of the entry. The point of interest is set as the navigation destination.
– Say **START ROUTE GUIDANCE** to navigate to the destination entered.

The following top destinations can be set directly as navigation destinations:

- **NEXT GAS STATION**
- **NEXT DIESEL GAS STATION**
- **NEXT PARKING LOT**
- **NEXT RESTAURANT**
- **NEXT ACCOMMODATION**
- **NEXT HOSPITAL**

- **NEXT AUDI DEALER**
- **NEXT POLICE STATION**
- **NEXT ATM**
- **NEXT COFFEE SHOP**
- **NEXT AIRPORT**
- **NEXT TRAIN STATION**

Tips

You can scroll through the list displayed with the commands **NEXT PAGE/PREVIOUS PAGE** or **FIRST PAGE/LAST PAGE**. ■

Map options

You can use the voice recognition system to control many map view functions in the MMI display.

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

Map option commands include:

General options

- **MAP ON/OFF** - The map is displayed or hidden in the MMI display.
- **DAY/NIGHT MAP** - The map background is light/dark ⇒ *page 93*.
- **ADDITIONAL INFO ON/OFF** - Upcoming turns with calculated distance are displayed when route guidance is active.

Map type

- **POSITION 2D /3D MAP** - The current vehicle position is shown in a two/three dimensional map ⇒ *page 93*.
- **DESTINATION MAP** - The map shows the destination ⇒ *page 93*.
- **DETAIL MAP** - The current vehicle position is shown in the map with 1 km scale. This function is only available through the voice recognition system.
- **OVERVIEW MAP** - The entire route from the starting point to the destination is shown on the map ⇒ *page 93*.

Orientation

- **ORIENTATION NORTH** - The map is oriented to the north ⇒ *page 93*.
- **ORIENTATION IN DIRECTION OF TRAVEL** - The map is oriented to the direction the vehicle is traveling ⇒ *page 93*.
- **ORIENTATION AUTOMATIC** - The map is oriented in the direction of travel at a scale less than 2.5. At a scale greater than 2.5 km, the map is oriented to the north ⇒ *page 93*.

Zoom

- **INTERSECTION ZOOM ON/OFF** - The map is displayed in zoom mode at intersections ⇒ *page 94*.
- **ZOOM OFF** - Switched the activated map zoom mode off.
- **MAP LARGER/SMALLER** - The map display is changed.
- **SCALE (XY)**, for example **SCALE 5 km** - The map scale is changed. Available scales are 50 m, 100 m, 200 m, 500 m, 1 km, 2 km, 5 km, 10 km, 20 km, 50 km, 100 km, 200 km and 500 km. Units of measure are kilometers/meters or miles/yards. ■

Additional navigation commands

Requirement: The voice recognition system must be switched on ⇒ *page 108*.

Route guidance

– Say **START/STOP ROUTE GUIDANCE**. Route guidance starts or stops.

Calling up navigation lists

– Say **LAST DESTINATIONS** or **TOP DESTINATIONS**. Follow the instructions from the voice recognition system. ▶

Dynamic route guidance

– Say **DYNAMIC NAVIGATION ON/OFF**. Dynamic navigation is switched on or off.

Route criteria

– Say: **FAST ROUTE**, **ECONOMICAL ROUTE** or **SHORT ROUTE**. The route is calculated according to various criteria, or

– Say: **ROUTE LIST**. The route list can be viewed when route guidance is active.

Navigating to a directory entry

– Say **NAVIGATE TO (XY)** such as **NAVIGATE TO "JOHN SMITH"**. If a navigation destination is assigned to an address card, that destination is entered and route guidance begins.

Tips

To switch voice guidance on or off when route guidance is active, say the command **VOICE GUIDANCE ON** or **VOICE GUIDANCE OFF** ⇒ *page 108*. ■

A

AAC files 12, 14, 16
Activate your Satellite Radio service 42
Additional information 94
Addresses
  MMI control panel 58
  Voice recognition system 111
Adjusting the volume
  MMI control panel 33, 34
Alternative route
  on/off 92
  Selecting 86
AM 41
Answering 77
Answering/ignoring a call
  MMI control panel 73
  Multifunction steering wheel 104
Aspect ratio 56
Audi music interface
  Connecting the adapter cable 18
  Repeat 52
  Starting 17
Audi music interface adapter cable 18
Audio source 49
AudioPilot 36
Automatic zoom
  Navigation 94
  Voice recognition system 114
Avoiding a route 92

B

Balance (sound) 34
Band 43
Bass (sound) 34
Bluetooth
  Bluetooth name 76
  Cell phone prep 21
  Delete Bluetooth devices 76
  Discover Mode 76
  Find Bluetooth devices 76
  Paired devices 76
  Switching on/off 76
Brightness 40
Buttons
  MMI control panel 29
  Multifunction steering wheel 98

C

Call lists
  Deleting 75
  MMI control panel 72
  Multifunction steering wheel 102
  Sorting cell phone prep 77
  Voice recognition system 110
Call options 77
Call volume 77
Calling
  MMI control panel 70, 71
  Multifunction steering wheel 101
  Voice recognition system 110
Calling up navigation lists (voice recognition system) 114
Calls
  MMI control panel 72
  Multifunction steering wheel 103
Care
  CD/DVD 11
  Memory cards 12
  MMI control panel 8
Category filter (Satellite Radio) 48
CD
  Ejecting 14
  Ejecting (CD changer) 16
  Loading 14
  Loading (CD changer) 15
  MMI control panel 49
  Multifunction steering wheel 100
  Repeat 52
  Tips for handling 11
CD changer 14
CD/DVD drive 14
Cell phone 21
Cell phone package
  Calling (multifunction steering wheel) . . . 101
Cell phone prep
  Calling (MMI control panel) 70
  Calling (voice recognition system) . . . 110
  Pairing a cell phone 23
  Searching for Bluetooth devices 22
  Starting 21
Control button 29

Control knob 29
Controls
MMI control panel 29
Multifunction steering wheel 98
Overview 7

D

Data password 40
Date 37
Delete Bluetooth devices 76
Deleting local call lists 75
Deleting recent calls 75
Demo mode 95
Dialed numbers
MMI control panel 72
Multifunction steering wheel 102
Dialing a phone number
MMI control panel 71, 72
Multifunction steering wheel 103
Voice recognition system 110
Dialing phone numbers
MMI control panel 75
Dialing stored phone numbers 75
Directory
MMI control panel 58
Multifunction steering wheel 102
Voice recognition system 111
Directory entries 24
Directory entry
Calling (voice recognition system) . . . 111
calling up (MMI control panel) 63
Change 65
Deleting 66
Importing 61
Navigating (MMI control panel) 63
Navigating (voice recognition system) . . . 111, 114
Search/open (voice recognition system) . 111
searching (MMI control panel) 62
Store new 58
Voice memo 111
Directory memory capacity 69
Discover Mode 76
Display
See Driver information system 98
See MMI Display 29
Displaying track information 56
Driver information system 98
Drives
Audi music interface 17
CD changer 14
CD/DVD 14
File formats 9
Jukebox 12
Memory card reader 16
MMI control panel 9
DSP 35
DSP Bang & Olufsen 36
DSP BOSE 36
DTMF tones 71
DVD 14
Ejecting 14
Full screen display 54
Loading 14
Main menu 53
Multifunction steering wheel 100
Parental control 54
Tips for handling 11
Dynamic navigation 114
Dynamic route 92

E

Edit (directory) 65, 66
Editing (directory) 69
Editing a directory entry 64
Ending a call
MMI control panel 73
Multifunction steering wheel 103
Entering a destination 80
Address 81
Alternative route 86
Avoiding a route 92
from the map 82
Load last destination 84
Loading a destination from the directory 90
Loading a tour plan 90
Point of interest 83
Setting a starting point 95
Tips 80
Top destination 91
Voice recognition system 112
Entering a point of interest
MMI control panel 83
Voice recognition system 113

Entering destination
Tour plan 85
with stopover 85
Entering stopover 85
External
Audio devices 20
Bluetooth device 76

F

Factory settings 39
Fader (sound) 34
Fast forward in a track (drive) 51
Favorite 88
File formats 9
Files
Erasing 13
Importing 12
FM 41
Folder
Repeat 52
Selecting (MMI control panel) 50
Selecting (multifunction steering wheel) . 100
Folder structure 50
Frequency 44
Full screen (DVD) 54
Function button 29

G

GALA 35

I

Importing a phone number 60
In immediate vicinity (point of interest) . . 83
In new city (point of interest) 83
In vicinity of destination (point of interest) . . 83
In-car entertainment fader 34, 40
INFO
MP3 CD/Audi music interface 52
Sirius song information 48
Traffic information 96
Information (Navigation) 92
Input level 56
Invert call lists 77
iPod 19
MMI control panel 49
Multifunction steering wheel 100

J

Joystick 32
Jukebox 12
Erasing files 13
Importing files 12

L

Laser devices 11
Last destinations
Delete 95
Load 84
Loading from the directory (navigation) . . 90

M

Mailbox number 77
Main menu (DVD) 53
Making other calls 103
Manual location entry 95
Map content
Voice recognition system 114
Map contents
MMI control panel 91
Map display 87
MMI control panel 93
Voice recognition system 114
Map options
MMI control panel 93, 94
Voice recognition system 114
Map orientation
MMI control panel 93
Voice recognition system 114
Map type
MMI control panel 93
Voice recognition system 114
Map zoom (Voice recognition system) . . 114
Measurement units 39
Memory (radio)
Moving stations 47
Selecting a station (MMI control panel) . . 46
Selecting a station (multifunction steering wheel) 100
Storing stations 46

Memory card
Handling tips 12
Inserting/removing 16, 17
MMI control panel 49
Repeat 52
Memory card reader 16
Inserting/removing a memory card . . . 17
Missed calls
MMI control panel 72
Multifunction steering wheel 102
MMI 7
Components 7
Menu overview 28
Restarting 38
Switching on/off 28
MMI control panel 29
MMI Display
Standard menus 29
Switching on/off 33
MMI display
Brightness 40
Joystick 32
Navigation display 87
Speller 31
MMI menu overview 28
Moving stored stations 47
MP3
MMI control panel 49
Multifunction steering wheel 100
MP3 files 12, 14, 16
MP3 player 20
Multifunction steering wheel 98
Mute
MMI control panel 33
Multifunction steering wheel 99

N

Name tags
Calling directory entry 111
Deleting 112
Erasing 39
Reading 112
Names
Navigating to a directory entry 111
Nationwide (point of interest) 83
NAV announcement volume 34
Nav Info (Navigation) 92
Navigating
MMI control panel 63, 79
Multifunction steering wheel 104
Voice recognition system 112
Navigation announcements 79
Repeating 105
Volume 34
Navigation destination
Store in the directory 64
Storing 88, 89
See also Entering a destination 80
Navigation display
Driver information system 88, 104
MMI display 87
Next station 44

O

Options
Cell phone prep 76
Multifunction steering wheel 104
Orientation (map)
MMI control panel 93
Voice recognition system 114

P

Paired devices 76
Pairing a cell phone 23
Parental control (DVD) 54
Pause (drive)
MMI control panel 55
Multifunction steering wheel 101
Pausing/continuing playback 55
Phone book
See Addresses 58
Phone number
importing into the directory 60
Storing in the directory 74
Phone settings 77
Presentation mode
Demo mode 95
Setting a starting point 95
Presets (Radio)
Deleting stations 47
Previous/next chapter 51

Q

Quartz clock 37

R

Radio
- Category filter (Satellite Radio) 48
- MMI control panel 41
- Multifunction steering wheel 99
- Station info (Satellite Radio) 48
- Station sorting (Satellite Radio) 48
- System information (Satellite Radio) . 41

Radio clock 37
Radio station on the MMI control panel
- Frequency 44
- Moving 47
- Next station 44
- Scanning 45
- Seek 44
- Selecting from the memory 46
- Storing 46

Radio station on the multifunction steering wheel
- Selecting from memory 100
- Selecting from station list 100

Radio stations on the MMI control panel
- Selecting from the station list 44

Radio text 47
Read error message (CD/DVD) 11
Received calls
- MMI control panel 72
- Multifunction steering wheel 102

Receiver serial numbers 42
Recent calls
- MMI control panel 72
- Multifunction steering wheel 103

Redial
- Voice recognition system 110

Redialing
- Cell phone prep 77

Repeat 52
Repeat range 52
Repeating a command 39
Replacing a call
- Cell phone prep 76
- Multifunction steering wheel 104

Reset 38
Restart (MMI) 38
Rewind in a track (drive) 51
Ring tone volume 34, 77
Route criteria
- MMI control panel 92
- Voice recognition system 114

Route guidance
- Changing 80
- in the driver information system 88
- In the MMI display 87
- Stopping 86

Route list 91
Route options
- MMI control panel 92
- Voice recognition system 114

Route plan
- *See* Tour plan 85, 89, 90

S

Safety 7
- when calling 70
- when navigating 79

Satellite Digital Audio Radio Service
- Activate your Satellite Radio service . . 42
- Category filter 48
- Station info 48
- Station sorting (Satellite Radio) 48

Satellite radio 41
SCAN 45
Scrolling text 47
SD
- MMI control panel 49
- Multifunction steering wheel 100

SDARS
- *See* Selecting frequency band 41

Seek (radio) 44
Selecting frequency band
- MMI control panel 43

Selecting source
- Audi music interface 49
- CD changer 49
- CD/DVD 49
- Jukebox 49
- Memory card 49

Selecting the frequency band
- Multifunction steering wheel 99

Set from last destinations 64
Setting a starting point 95
Setting language 38
Setting menu language 38

Setting the volume
Multifunction steering wheel 99
Setup radio
Category filter (Satellite Radio) 48
Station info (Satellite Radio) 48
Station sorting (Satellite Radio) 48
Show the next report 96
Showing traffic information 91
Shuffle 53
Sirius 41
Software version
MMI control panel 40
Navigation 40
Song information(Sirius-INFO) 48
Sound
Basic settings 34
DSP 35
DSP Bang & Olufsen 36
DSP BOSE 36
Volume 34
Sound Focus 35, 36
Speller 31
Spoken cues
Off/Complete/Compact 94
On/Off (phone) 94
Volume 94
Starting Navigation mode
MMI control panel 80
Starting navigation mode
Voice recognition system 112
Starting radio mode 42
Starting Telephone mode
MMI control panel 70
Starting telephone mode
Voice recognition system 110
Starting/stopping route guidance (voice recognition system) 114
Station info (Satellite Radio) 48
Station list (radio)
Selecting a station (multifunction steering wheel) 100
Selecting station list (MMI control panel) 44
Update 44
Station name (radio) 47
Station sorting (Satellite Radio) 48
Stereo jack 20
Store current position 91
Storing a destination 88
Subwoofer (sound) 34
Surround Level 36
Switching on/off
MMI control panel 28
Voice recognition system 108
Switching the microphone on/off 76
System information (Satellite Radio) 41

T

Talk button (multifunction steering wheel) . 105, 108
TEXT (radio) 47
Time 37
Tips
Caring for your MMI control panel 8
Handling CDs/DVDs 11
Handling memory cards 12
Traffic safety 7
TMC 96
Top destination 91
Top destinations 64
Tour plan
Deleting 91
Entering 85
Entering stopover 85
Loading 90
Storing 89
Track
Repeat 52
Selecting (MMI control panel) 50
Selecting (multifunction steering wheel) 101
Track (drive)
Fast forward/rewind 51
Previous/next track 51
Track display 56
Track information 52
Traffic information 96
Traffic reports 96
Traffic safety 7
Treble (sound) 34

U

Units 39
USB
MMI control panel 49
Multifunction steering wheel 100
USB storage device 20

V

Version
MMI software 40
Navigation software 40
Video source 49
Voice guidance
Volume 34
Voice memos
Storing 111
Voice recognition system 107
Adjusting volume 108
Command types 108
Deleting a name tag 66
Help 108
Reading a name 66
Repeating a command 39
Selecting an entry from the list 108
Storing a voice memo 111
Switching on/off 105
Volume 34
Volume
During a navigation announcement . . . 34
Telephone 34
Voice recognition system 34, 108
Volume balancing 36

W

WMA files 12, 14, 16

© 2009 AUDI AG

It has always been Audi's policy to continuously improve its products. Audi, therefore, reserves the right to make changes in design and specifications, and to make additions or improvements in its products without incurring any obligation to install them on products previously manufactured. Text, illustrations and specifications in this book are based on the most up-to-date information available at the time of printing.

May not be reproduced or translated in whole or in part without the written consent of AUDI AG. All rights reserved by AUDI AG. Subject to alteration or amendment. Printed in Germany.

Editorial deadline: 08/28/2009

For the sake of the environment

Printed on environmentally friendly paper (bleached without chlorine, recyclable)

MMI Navigation plus
Operating Instructions
Englisch Nordamerika 11.2009
102.562.742.21