Sound System

Operating Instructions

Audi
Vorsprung durch Technik

Introduction

You have decided on the Sound System - thank you very much for your confidence in us.

With this equipment, you are acquiring a highly developed technical system which offers various choices for entertainment and communication. All the settings can be made centrally, using an easy-to-follow menu guide.

We recommend that you carefully read the operating instructions so that you quickly become completely familiar with all of the functions and possibilities of the system and are able to make full use of them while driving.

Please note that these operating instructions are a supplement to your vehicle's owner's manual and should only be used in conjunction with the current owner's manual.

Should you have any further questions about the Sound System in your vehicle, please direct them to your authorized Audi dealer.

We hope you enjoy driving your car!

AUDI AG

About this User's Manual 3

Overview 4
Control unit 4
Notes on traffic safety 4
Notes on care 5

Drives 6
Introduction 6
General instructions for CD operation . . 7
General information on memory cards . 7
CD player 8
CD changer 8
Memory card reader 9
Audi music interface 10
Aux-in connection 13

General operation 15
Switching on and off 15
Principle of operation 15
Display 16
Adjusting the volume 19
Adjusting the sound 20
Setting time of day 21
Restarting the radio 21
Additional settings 22

Listening to the radio 23
Introduction 23
System information 23
Starting radio operation 23
Activating your satellite radio service . . 24
Selecting frequency band 24
Selecting a station from the station list 25
Satellite station list 25
Selecting a station 26
Scanning stations 26
Storing stations 27
Selecting a stored station 27
Moving a stored station 27
Additional settings 28

Playing media 30
Introduction 30
Starting media mode 30
Selecting Source 30
Selecting a folder 31
Selecting a track 31
Forward/reverse and previous/next track 31
Repeat 32
Shuffle 32
Scanning a track (SCAN) 33
Stopping/resuming a drive 33
Additional settings 33

Calling 35
Introduction 35
Bluetooth™ 36
Phone book entries 37
Starting telephone mode 37
Entering a PIN/PUK 38
Dialing a telephone number 39
Answering/rejecting a call 40
Ending a call 40
Dialing stored telephone numbers 41
Additional settings 41

Multifunction steering wheel . 43
Introduction 43
Adjusting the volume 43
Listening to the radio 44
Playing media 44
Calling 45
Name tag 47

Telephone voice operation 49
Introduction 49
General operation 50
Name tags 51

Index 54

This user's manual contains important information, tips, suggestions, and warnings for the use of your vehicle.

Make sure that this user's manual is always located in the vehicle. This is especially important if you allow other people to drive the vehicle, or if you sell it.

This user's manual describes the **equipment range** specified for this model at the editorial deadline date. Some of the equipment described here will only be available at a later date, or only in specific markets.

Some sections in this user's manual do not apply to all vehicles. In that case, the **range of applicability** is given at the beginning of the section, e. g. “Applies to vehicles: with telephone”. In addition, optional equipment is indicated by an asterisk “*”.

The details in the **illustrations** may be different from those in your vehicle, and are intended to be viewed as a basic guide.

You will find a **table of contents** at the beginning of this book, which displays all topics described in this manual in order of appearance. You will find an alphabetical **index** at the end of this book.

All **directions**, such as “left”, “right”, “front”, “back”, are relative to the direction of travel.

* Optional equipment.

▶ This section continues on the next page.

® Registered trademarks are identified with a ®. If this symbol is missing, it is no guarantee that the terms can be used freely.

⇨ ⚠ Cross-reference to a “WARNING!” within a section. For indication with a page number, the corresponding “WARNING!” can be found outside of the section.

WARNING

Text with this symbol contains important information on safety and how to reduce the risk of personal injury or death.

Note

Text with this symbol draws your attention to potential sources of damage to your vehicle.

For the sake of the environment

Text with this symbol contains information about the environment and how you can help protect it.

Tips

Text with this symbol contains special tips and other information about getting the most out of your vehicle and its features.

Overview

Control unit

The available functions depend on the sound system that is installed.

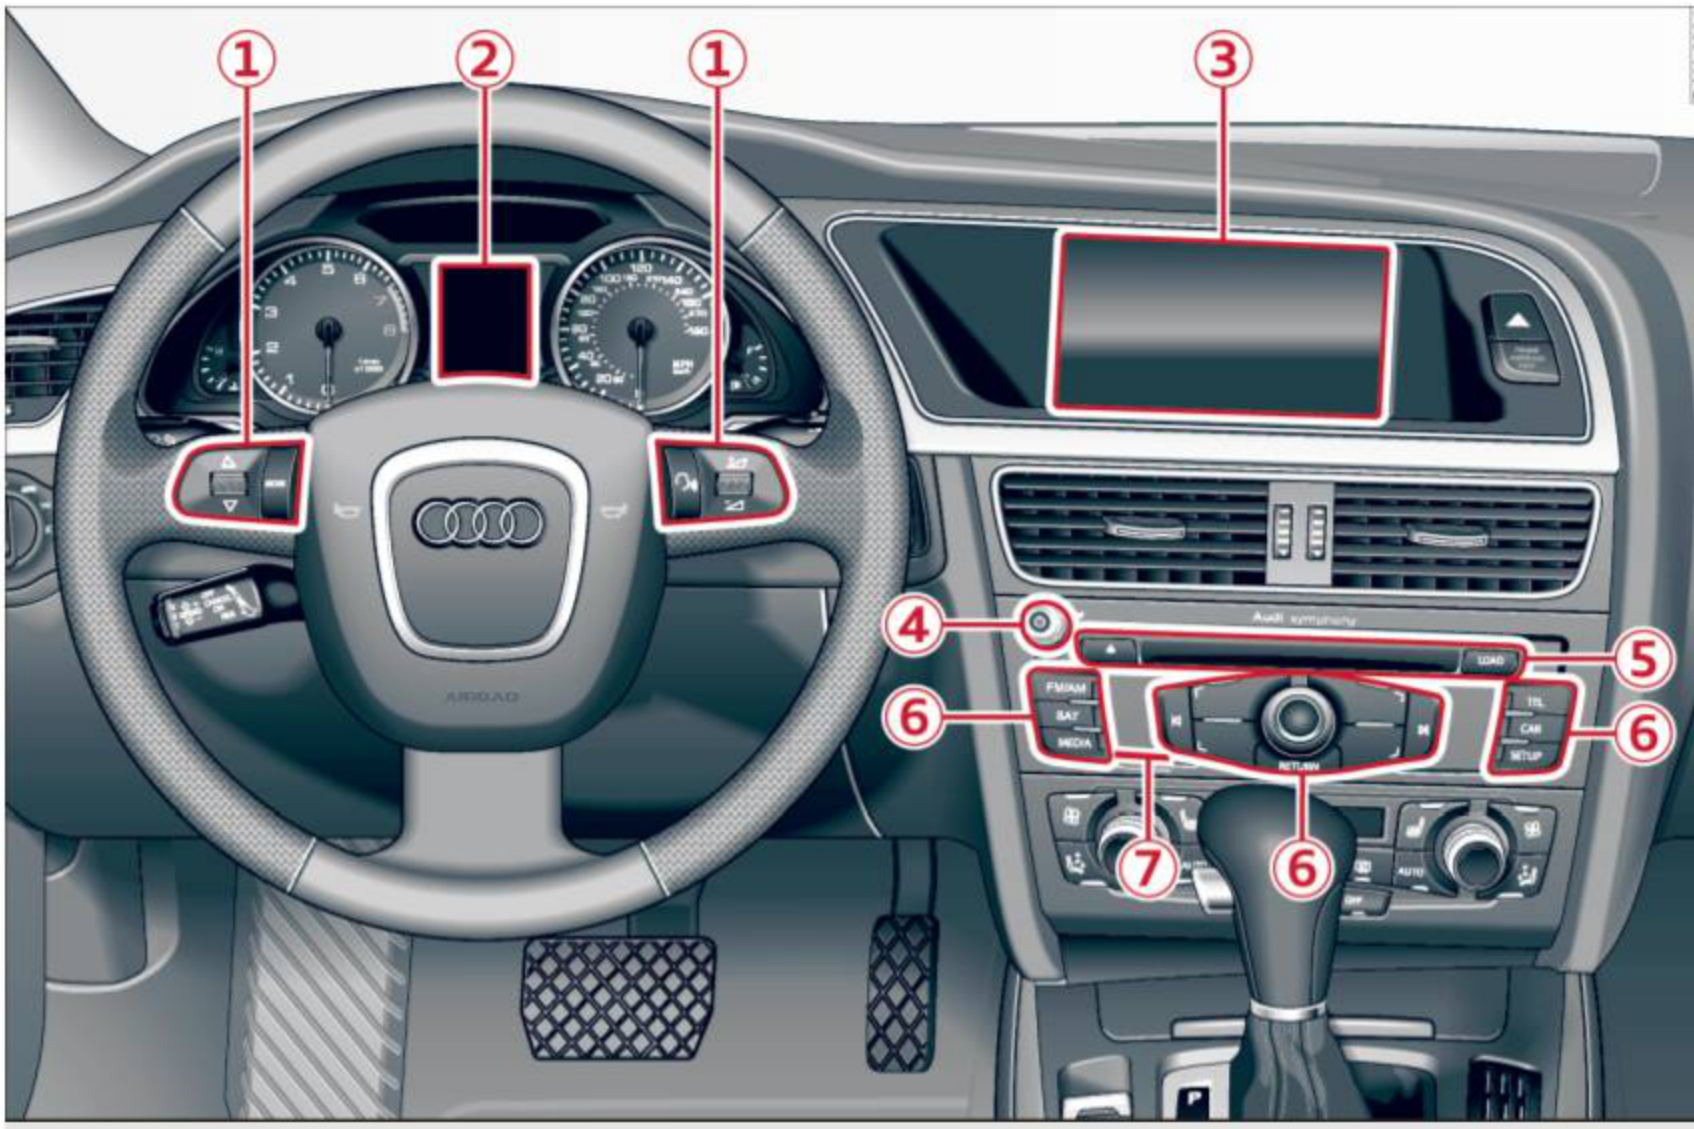


Fig. 1 Sound system controls

① Multifunction steering wheel* . 43
② Driver information system 43
③ Display 16
④ On/Off knob
– Switching on and off 15
– Adjusting the volume 19
– Muting (Mute) 19
⑤ CD drive
– CD player (**concert sound system**) 8
– CD changer (**symphony sound system**) 8
⑥ Radio system controls 15
⑦ Memory card reader 9

Tips

– Please note that only the radio system and its components are described in this manual. You will find additional information on operating your vehicle in your Owner's Manual.

– You can carry out many of your radio system's functions from the multifunction steering wheel* ⇨ *page 43*.

Notes on traffic safety

When operating the radio system while driving, be constantly aware of the current traffic situation and stop the operation when necessary due to traffic. When driving, you should use the controls on the multifunction steering wheel* ⇨ *page 43* whenever possible.

WARNING

– Pay attention first and foremost to your driving! As the driver of the vehicle, you have total responsibility for operating the vehicle safely. Therefore, when using the Sound System functions, make ▶

certain that you always have complete control of your vehicle!
– Traffic today requires your full and continuous concentration. As the driver, you bear complete responsibility for safety in traffic. Therefore, to ensure driving safety, settings in the Sound System must be performed only when the vehicle is parked.
– The volume controls on the Sound System should be selected to ensure that outside signals, such as police and fire truck sirens, can always be heard - danger of accident!
– Be sure to follow applicable laws regarding speaking on the telephone* while driving a vehicle.

Notes on care

Cleaning the display

▸ Clean the display with a soft clean cloth and an LCD cleaner.

Cleaning the controls

▸ First clean the controls with a small brush to remove dust.
▸ Then wipe the controls with a clean, soft and slightly damp cloth.

Note

– Treat the display with care. Pushing on it with your finger or touching it with sharp objects can cause dents or scratches.
– Cleaning CDs can damage the drives.
  – Do not use cleaning CDs to clean the drives.

Drives

Introduction

The available functions depend on the sound system that is installed.

– **concert sound system**: CD player
⇨ *page 8*
– **symphony sound system**: CD changer
⇨ *page 8*

The CD player / CD changer, memory card reader and USB storage device connection support the following features:

	MP3 Files	WMA files	AAC files
Format	MPEG-1 Layer 3 MPEG-2 Layer 3	Version 7, 8 and 9	MPEG-2 and MPEG-4
Profile			LC - Low Complexity
Standard/ File system	Memory card reader and USB storage device: FAT- or FAT 32 method CD player / CD changer: ISO 9660 Level 1 and 2, Joliet (single session and multisession), Universal Disk Format (UDF) through Version 2.01		
Bit rates	32 to 320 kbits/s and variable bit rates		
Number of files	CD player / CD changer: max. 255 files per directory, max. 512 files per medium, max. 255 subdirectories Memory card reader: max. 512 files per directory, max. 2048 files per medium, max. 255 subdirectories USB storage device: max. 1000 files per directory, max. 7 subfolders		
Playlists	max. 128 playlists, max. 100 entries per playlist		
Playlist format	M3U, ASX, WPL and PLS		
Supported media	CD player / CD changer: CD-ROM, CD-R, CD-RW with a capacity of 650 MB, 700 MB and 800 MB memory card reader: memory cards with a capacity up to 32 GB Audi music interface: iPod, USB storage device		

Tips

– Please follow the information for handling CDs ⇨ *page 7*.
– The maximum number of files per medium may differ if the directory or file names contain many special characters.
– The CD player / CD changer will not support DRM-protected files.
– For compressing MP3 files we recommend a bit rate of at least 160 kbit/s.
– The more playlists or files that are on a medium, the longer it will take to load the medium.
– In the case of MP3 files with a variable bit rate, there may be a discrepancy between the play time displayed and real time.
– Please note that music files are subject to copyright law.
– Because of the diversity of CD-R/CD-RW blanks and their various storage capacities, function may be limited for individual storage media.

General instructions for CD operation

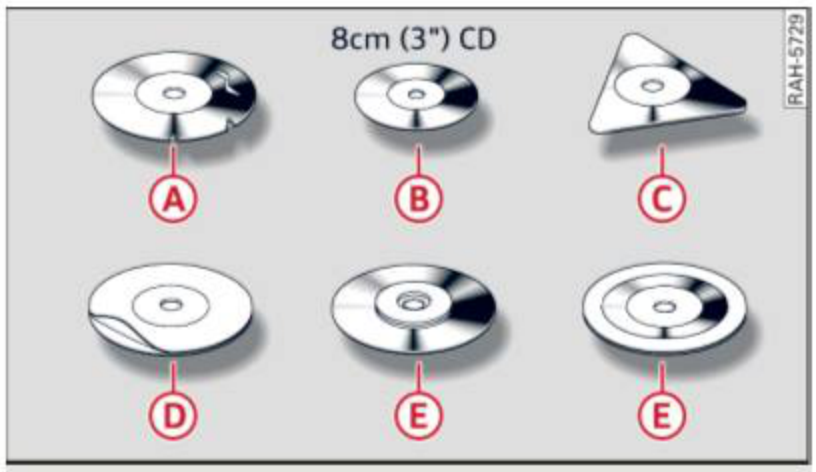


Fig. 2 CDs that must not be used

Requirements for good sound quality

To ensure good, high-quality sound reproduction and to prevent damage to the drives or disc reading errors, please observe the following:

Ⓐ Do not use damaged, dirty or scratched CDs.

Ⓑ Do not use single CDs (8 cm / 3 inch diameter).

Ⓒ Do not use CDs of different shapes.

Ⓓ Do not attach labels.

Ⓔ Do not use protective rings.

Do not use protective CD film or stabilizer.

Cleaning drives and CDs

Never use a cleaning CD to clean the drives.

Clean CDs with a soft, lint-free cloth. Wipe the CD in a straight line from the center outward. Heavy soiling can be removed with a commercial CD cleaner or isopropyl alcohol. Never use gasoline, paint thinner, or record cleaner since they can damage the CDs.

Using laser equipment

Laser equipment is divided into safety classes 1 to 4 in accordance with DIN IEC 76 (CO) 6/ VDE 0837. The various types of audio equipment installed meet safety class 1. The laser uses so little power or is shielded so that there is no danger when used properly.

Note

Do not insert CDs with labels into the drive. Labels can come loose from the CD and damage the drive.

Tips

- Always keep CDs in a protective sleeve and do not expose them to direct sunlight.
- Copyrighted CDs or CD-ROMs that do not conform to audio CD standards cannot be played by your CD drive. Use only CDs having the following logo on the CD itself “Compact Disc Digital Audio”.
- If outside temperatures are extremely high or low, playback of the navigation DVD may be temporarily unavailable. A thermal switch has been installed to protect the navigation DVD and the laser scanner.
- Do not remove the cover. The device contains no parts that can be repaired by the consumer.

General information on memory cards

Both SD and MMC cards can be used as memory cards.

The memory card reader has been tested with many of the products available on the market. However, in isolated cases it is possible that individual memory cards may not be recognized.

Always keep the memory card in a suitable case to protect it from dirt, dust particles, scratches, and other damage.

We recommend not saving the music files directly in the main directory of the memory card, but instead, create folders (e.g. put all the tracks of a particular music style/an artist in one folder). ▶

Note

Use only single-piece SD/MMC memory cards. If you use SD/MMC adapter cards (multi-piece memory cards), the memory card can become detached from the adapter as the result of vibration while driving. There is a possibility that individual pieces may become stuck in the drive

Tips

– Individual types of memory cards may have limited functions.
– DRM music formats are **not** supported!
– Never store important information on the memory card. Audi bears no liability for damaged or lost data or files.

CD player

Introduction

Applies to vehicles: with concert sound system

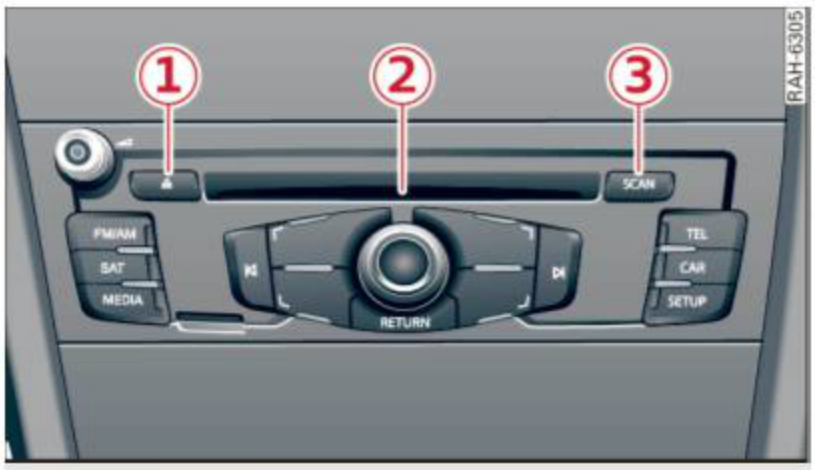


Fig. 3 CD player

① Eject button
② CD slot
③ SCAN button

The radio system has a CD player. Use the MEDIA function button to operate the CD inserted in the player ⇨ *page 30*.

Loading a CD

Applies to vehicles: with concert sound system

Never force a CD into the drive. The CD is pulled in automatically.

▸ Make sure there is no CD in the CD slot ② ⇨ *page 8, fig. 3*.
▸ Hold the CD at the hole in the center and the outer edge.
▸ Guide the CD straight into the CD slot ② with the writing facing upward. The CD is pulled in.

CD mode is started and operated through the radio system.

Ejecting a CD

Applies to vehicles: with concert sound system

▸ Press the CD eject button ① ⇨ *page 8, fig. 3*.

The CD is pulled in again automatically if it is not removed from the slot within 30 seconds of ejecting it.

CD changer

Introduction

Applies to vehicles: with symphony sound system



Fig. 4 CD changer

① Eject button
② CD tray
③ Button LOAD

The radio system has a CD changer. A CD inserted in the drive is played using the CD function ⇨ *page 30*.

Loading a CD

Applies to vehicles: with symphony sound system

Up to 6 CDs can be loaded into the CD changer.

A CD should never be forced into the drive. The CD is pulled in automatically. ▶

Loading a CD

- ▸ Press the LOAD button ③ ⇨ *page 8, fig. 4*. As soon as the CD changer is ready to load, **Please insert CD** appears in the display.
- ▸ Insert the CD straight into the CD tray ② with the label side up. The CD is automatically loaded in the next empty position in the CD changer.

Loading all CDs

- ▸ Press and hold the LOAD button ③ for more than two seconds. As soon as the CD changer is ready to load, **Please insert CD** appears in the display.
- ▸ Insert a CD straight into the CD tray ② with the label side up. As soon as the CD changer is ready to load the next CD, **Please insert CD** appears in the display.
- ▸ Insert each additional CD after **Please insert CD** appears in the display.

Loading the CD in a specific empty position

- ▸ Press the LOAD button ③ ⇨ *page 8, fig. 4*. The CD list appears in the display.
- ▸ Rotate the control knob to an empty CD location shown in the display and press the control knob. As soon as the CD changer is ready to load, **Please insert CD** appears in the display.
- ▸ Insert the CD straight into the CD tray ② with the label side up.

Loading a CD into a specific occupied position

- ▸ Press the LOAD button ③ ⇨ *page 8, fig. 4*. The CD list appears in the display.
- ▸ Rotate the control knob to an occupied CD location shown in the display and press the control knob. The respective CD will be ejected. **Please remove CD** appears in the display.
- ▸ Remove the CD from the CD tray ②. As soon as the CD changer is ready to load, **Please insert CD** appears in the display.
- ▸ Insert the CD straight into the CD tray ② with the label side up.

If you press the LOAD button a second time while all CDs are being loaded, the loading procedure is stopped.

Selecting a CD

Applies to vehicles: with symphony sound system

Requirement: An MP3/WMA-CD is inserted in the CD changer.

- ▸ Press the MEDIA function button.
- ▸ Rotate the control knob to a CD.
- ▸ Press the control knob to start playing the CD.

Ejecting a CD

Applies to vehicles: with symphony sound system

Ejecting a CD

- ▸ Press the Eject button ① ⇨ *page 8, fig. 4*.
- ▸ Rotate and press the control knob to select the CD to be ejected in the display of the radio system.

Ejecting all CDs

- ▸ Press and hold the Eject button ① ⇨ *page 8, fig. 4*. All the CDs will be ejected in turn.

Tips

The CD is pulled back into the CD changer automatically if it is not removed from the CD tray within about 30 seconds after it has been ejected.

Memory card reader

Introduction

The radio system has a memory card reader. SD or MMC cards can be loaded in the memory card reader.

The MEDIA function ⇨ *page 30* is used to operate an SD/MMC card inserted in the memory card reader.

For information on the properties of supported file formats, refer to ⇨ *page 8*. ▶

Tips

- Please follow the instructions for handling memory cards ⇨ *page 7*.
- The memory card reader has been tested with many of the products available on the market. However, in isolated cases it is possible that individual memory cards may not be recognized.

Inserting a memory card



Fig. 5 Insert memory card

▸ Slide the memory card in the card reader slot with the label side up (contact surface down) ⇨ *fig. 5*. The angled corner of the memory card must point toward the front right.

▸ Then push the memory card into the slot until you feel it click into place. The memory card is flush with the area around it. When the MEDIA function is activated, the system automatically changes to the memory card reader and begins playing.

The directory structure is read when a memory card is inserted but not played. If you start playback of the memory card immediately, the ID3/WMA tag data are displayed for the track currently being played.

Removing a memory card



Fig. 6 Removing a memory card

▸ Gently push the memory card ⇨ *fig. 6*. The card is released from the slot.

▸ Remove the memory card.

Audi music interface

Introduction

Applies to vehicles: with Audi music interface

Various portable audio devices can be connected to the Audi music interface.

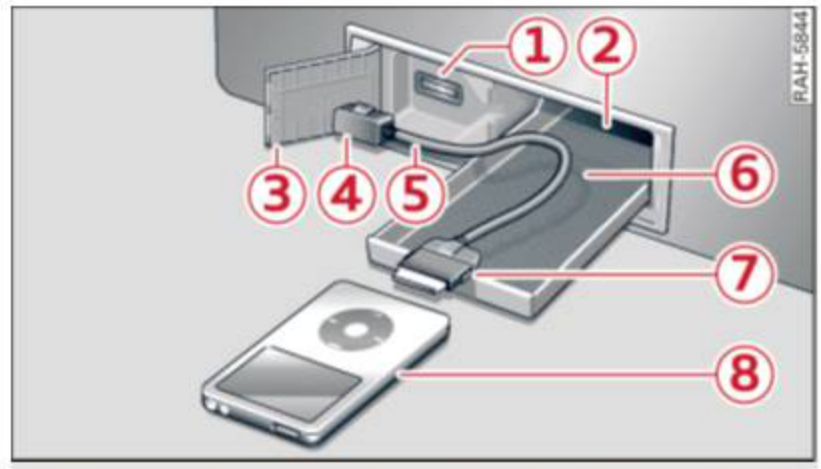


Fig. 7 Audi music interface with iPod adapter cable and iPod

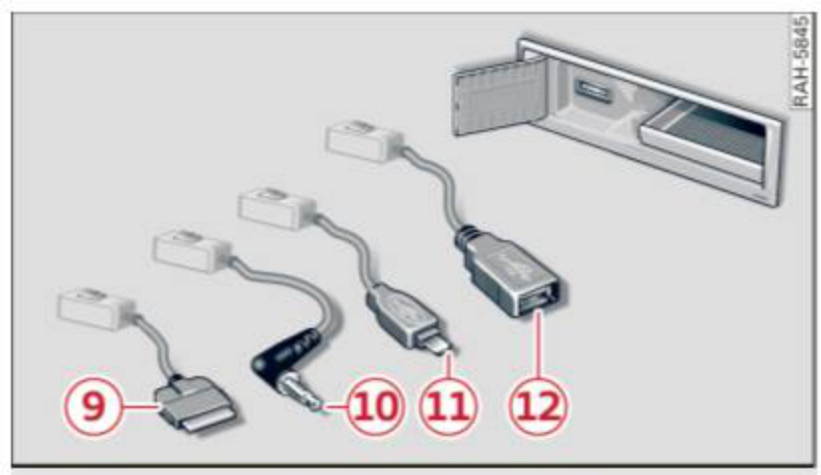


Fig. 8 Audi music interface: Adapter cable

① Interface on Audi music interface
② Storage slot
③ Cover

▶

④ Jack for connecting to the Audi music interface
⑤ Adapter cable* (such as iPod adapter cable*)
⑥ Removable storage try
⑦ iPod jack on iPod adapter cable*
⑧ iPod
⑨ iPod adapter cable*
⑩ 3.5 mm stereo jack adapter cable*
⑪ Mini USB adapter cable*
⑫ USB adapter cable*

The Audi music interface is located in the glove compartment. You can connect a portable audio device (such as an iPod or USB storage device) to the Audi music interface using a special adapter cable*. You can purchase adapter cables* from your authorized Audi dealer or an electronics store.

Note

Extremely high or low temperatures which can occur inside vehicles can damage portable audio devices or affect their performance. Never leave a portable audio device in the vehicle in extremely high or low temperatures.

Connecting the adapter cable to the Audi music interface

Applies to vehicles: with Audi music interface and adapter cable

- Open the glove compartment.
- Fold the cover up ③ ⇨ *page 10, fig. 7*.
- Connect the adapter cable to the Audi music interface ⇨ *page 10, fig. 7*.

Note

Handle the adapter cable carefully. Do not allow it to be pinched.

Disconnecting the adapter cable from the Audi music interface

Applies to vehicles: with Audi music interface and adapter cable

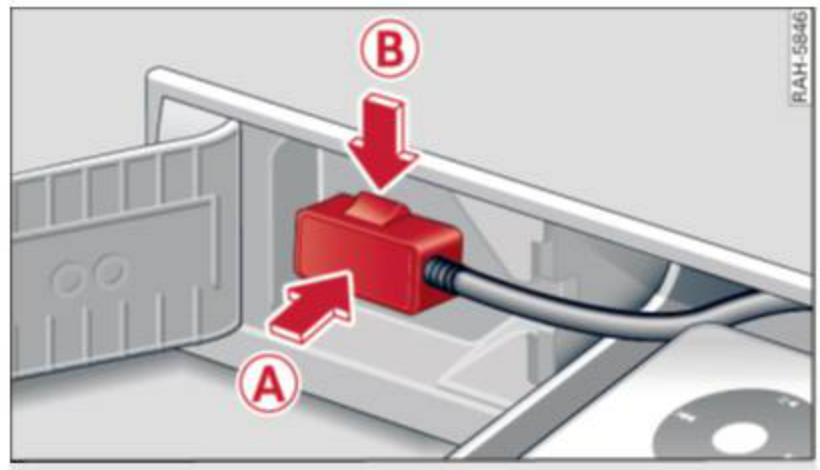


Fig. 9 Adapter cable: releasing the jack on the Audi music interface

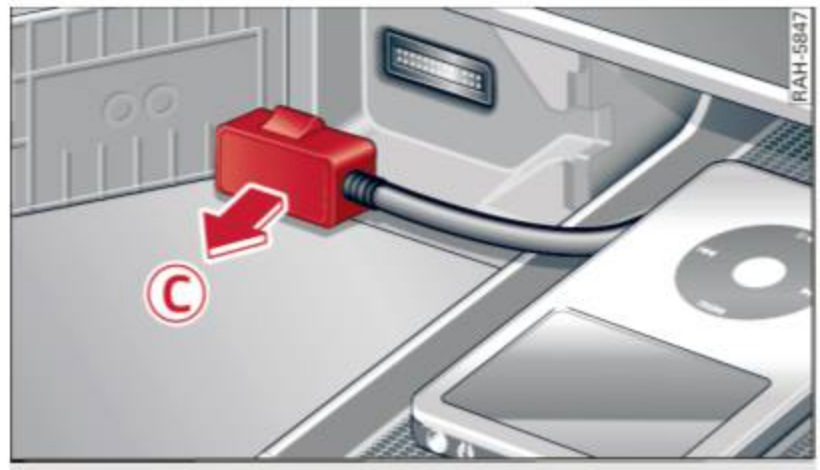


Fig. 10 Adapter cable: removing the released jack from the Audi music interface

Requirement: the glove compartment and cover on the Audi music interface ③ ⇨ *page 10, fig. 7* must be open.

- Press the jack Ⓐ ⇨ *fig. 9* into the Audi music interface while pressing the release catch Ⓑ on the jack down. The jack is released.
- Hold the release catch down while pulling the jack out of the Audi music interface Ⓒ ⇨ *fig. 10*.

Note

– Pull the jack out of the Audi music interface carefully so you do not damage the interface.
– Handle the adapter cable carefully. Do not allow it to be pinched.

Connecting an iPod with the iPod adapter cable

Applies to vehicles: with Audi music interface and iPod adapter cable

The iPod is connected to the Audi music interface with the iPod adapter cable.

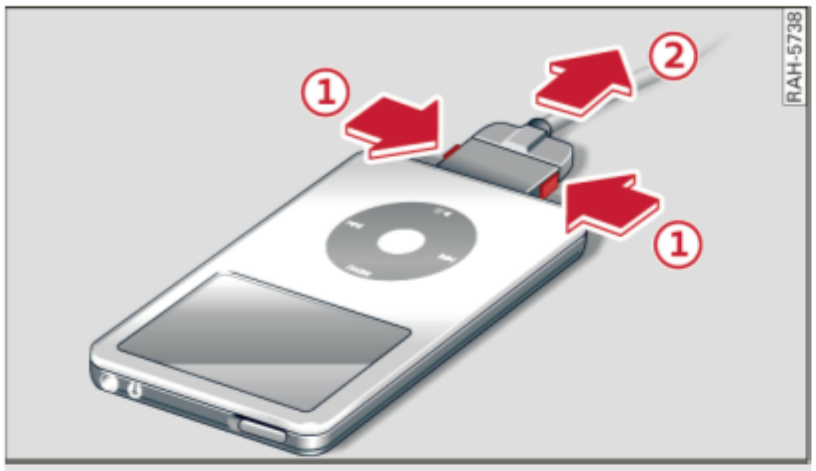


Fig. 11 Disconnecting the iPod jack from the iPod

Connecting the iPod jack

▸ Connect the iPod adapter cable to the iPod.

Disconnecting the iPod jack

▸ Release the catch by pressing the buttons (1) ⇨ *fig. 11*.
▸ Carefully pull the jack out of the iPod (2).

Place the connected iPod in the storage slot ⇨ *page 10, fig. 7*.

When the vehicle ignition is on, the iPod battery is charged through the adapter cable as soon as the iPod is connected to the Audi music interface.

The following iPods can be connected to the iPod adapter cable:

– iPod mini - (version 1.3.0 and higher)
– iPod nano 1G, 2G and 3G
– iPod 4G - fourth generation (version 1.2.1 and higher)
– iPod 5G - fifth generation Video
– iPod 6G - sixth generation classic
– iPod touch
– iPhone

Other iPod versions (such as the iPod shuffle) cannot be connected with the iPod adapter cable. These can be connected as portable audio devices with the optional 3.5 mm stereo jack adapter cable* ⇨ *page 13*.

The Audi music interface does not support the following iPod options:

– Rating music tracks
– Skipping to a certain place in a track
– Adding tracks to the “On-the-go” playlist
– Displaying the “Compilations” folder. Also, tracks marked with “Part of a Compilation” are not entered into the artist list if the compilation was activated in the iPod.
– Marking viewed/new Podcasts

Tips

– Only the sound from video Podcasts is played. The video image is not show in the display.
– Problems with the iPod can affect operation of the radio system. Reset your iPod if this is the case (see the iPod instruction manual).
– You can find additional information on operating the iPod through the radio system in ⇨ *page 30*.
– See the iPod instruction manual for important information on operating your iPod.
– We recommend updating the iPod software with the latest version.
– Please see your authorized Audi dealer for the most current information on the Audi music interface.

Connecting a portable audio device with the USB/Mini USB adapter cable

Applies to vehicles: with Audi music interface and USB/Mini USB adapter cable

You can connect various USB storage devices to the Audi music interface with a USB/Mini USB adapter cable.

Place the connected storage device in the storage slot ⇨ *page 10, fig. 7*.

The Audi music interface supports USB storage devices from “USB Device Subclasses 1, 2 and 6”. The manufacturer of the storage device can provide information about its “USB Device Subclass”. ▶

The following USB storage devices are supported:

– USB sticks
– Single card reader
– Multi-card reader (first used card slot)
– USB MP3 players that do not require any special driver software
– External USB flash memory
– External USB hard disks (HDD) - 1", 1.8", 2.5" - drives with an operating/continuous current of 500 mA maximum
– MTP player (activate MTP mode on the MTP player)

For information on the properties of supported file formats, refer to ⇨ *page 8*.

Tips

– You can decrease the time it takes to search for music files on the connected USB storage device if you create a central folder for music files and playlists and place it alphabetically in the first position in the storage device.
– Do not use USB extension cables or adapters. They may affect the functionality.
– Functionality is not guaranteed for portable audio devices that do not meet the USB 2.0 specification.
– Due to the variety of USB storage devices and the different capacities, the function of individual storage devices may be limited.
– An iPod cannot be connected to the Audi music interface with a USB adapter cable*. An iPod adapter cable* ⇨ *page 10* must be used.
– You can find current information and software updates online at “www.audiusa.com/mp3”.

Connecting a portable audio device with the 3.5 mm stereo jack adapter cable

Applies to vehicles: with Audi music interface and 3.5 mm stereo jack adapter cable

You can connect portable audio devices (such as MP3 players) to the Audi music interface with the 3.5 mm stereo jack adapter cable.

▸ Insert the 3.5 mm stereo jack in the headphone socket on the portable audio player. Audio playback takes place through the vehicle sound system.

If the **external audio input** or **Audi music interface** is already selected as the **source**, you may hear static when connecting or disconnecting the 3.5 mm stereo jack*. To avoid this static, either mute the portable audio device ⇨ *page 19* or switch to another audio source (radio ⇨ *page 23*, CD) before connecting or disconnecting the device.

Tips

We recommend adjusting the volume of the portable audio device to approximately 70 percent of the maximum output. The volume can be adjusted (for example at the radio volume) ⇨ *page 34*.

Aux-in connection

Introduction

Applies to vehicles: with Aux-in connection

A portable audio device is connected to the Aux-in connection with a 3.5 mm stereo jack.

The Aux-in connector is located in the center armrest. It is compatible with portable audio devices with a 3.5 mm stereo jack. Correct function of all portable audio devices cannot be guaranteed.

Note

Extremely high or low temperatures which can occur inside vehicles can damage portable audio devices or affect their performance. Never leave a portable audio device in the vehicle in extremely high or low temperatures. ▶

Tips

For information on operating the audio device, see the manufacturer's instructions.

Connecting a portable audio device

Applies to vehicles: with Aux-in connection

Requirement: The radio is on ⇨ *page 23*.

- ▸ Connect the audio device with a 3.5 mm stereo jack* and insert the extension cable in the Aux-in connection.
- ▸ Press the MEDIA function button.
- ▸ Rotate the control knob to **AUX** and press the knob. **External audio source is active** will appear in the display when the device is recognized successfully.

Static can occur when connecting or disconnecting the 3.5 mm stereo jack. To avoid this static, either mute the portable audio device or switch to another audio source (such as radio or CD) before connecting or disconnecting the device.

You select audio files using the controls on the audio device. You can adjust the volume using the on/off knob ⇨ *page 19*, the **input level** function ⇨ *page 34*, the multifunction steering wheel ⇨ *page 43* or directly on the audio device.

WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate a portable audio device while driving because this increases the risk of an accident.

Tips

– We recommend adjusting the volume of the portable audio device to approximately 70 percent of the maximum output. Adjust the volume on the portable audio device before adjusting it through the vehicle sound system.

– The vehicle battery discharges when the engine is stopped and the audio device is switched on.

General operation

Switching on and off



Fig. 12 On/Off knob

Automatic operation

- ▸ To turn the radio on, insert the ignition key in the ignition lock. The menu for the last selected main function is displayed, and the last selected audio source is switched on.
- ▸ To turn the radio off, remove the ignition key. Your settings are saved.

Manual operation

- ▸ Press the On/Off knob briefly to turn the radio on.
- ▸ To turn the radio off, press the On/Off knob until the radio switches off.

A radio that has been turned off manually, is *not* automatically turned on again the next time the ignition is switched on.

With the ignition off, the radio can still be used for about 10 minutes. If you do not press any function button, control button or the control knob on the radio, the radio turns itself off again automatically.

Tips

With the engine not running and a low battery charge, the radio is switched off automatically.

Principle of operation

The radio functions are performed by pressing the buttons and rotating and/or pressing the knobs on the radio.

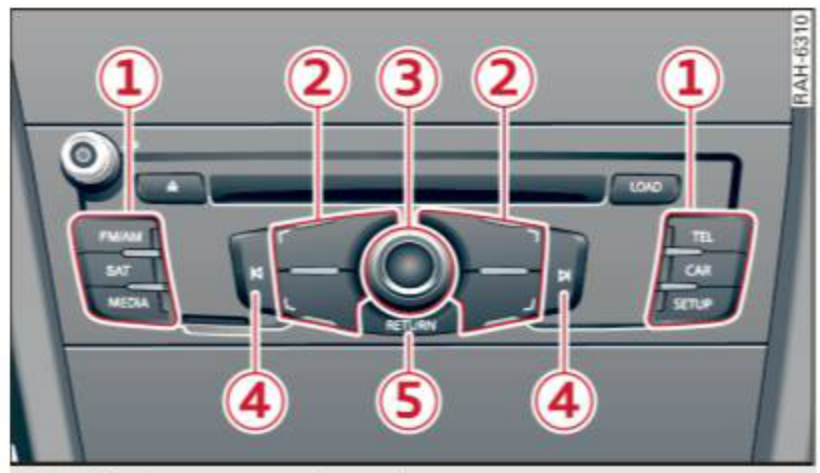


Fig. 13 Buttons on the radio

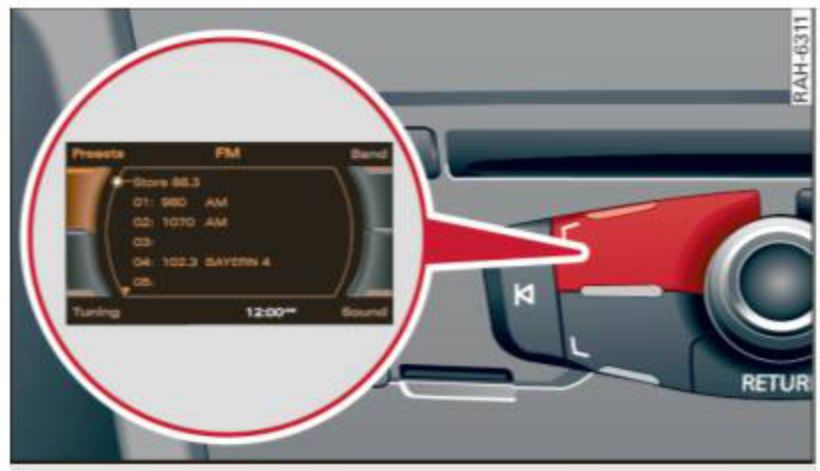


Fig. 14 Assigning the control button to the button symbol in the display

① Function buttons

Press a function button to start an operating mode. For example, start the **FM/AM** operating mode by pressing the FM/AM function button.

Using the SETUP function button, you can open additional settings for the active operating mode.

② Control buttons

To access the function shown in one of the four corners of the display, press the control button corresponding to this display corner. For example, the control button in the upper left corresponds to the upper left display corner ⇨ *fig. 14*.

③ Control knob

To select a menu item highlighted in the display, rotate the control knob to the left or right and press the control knob. ▸

④ Arrow buttons

To select the previous or the next radio station, press the |◁◁| or the |▷▷| button.

To select the next track on a CD or memory card, press the |▷▷| button. If you press the |◁◁| button within 10 seconds after a track has started to play, playback jumps to the beginning of the previous track.

If you press and hold the |◁◁| button or |▷▷| in Media mode, fast rewind or fast forward is activated.

⑤ Return button

Press the RETURN button to cancel a selection you have not yet confirmed or to return to the next higher menu level.

Display

"Standard" menus

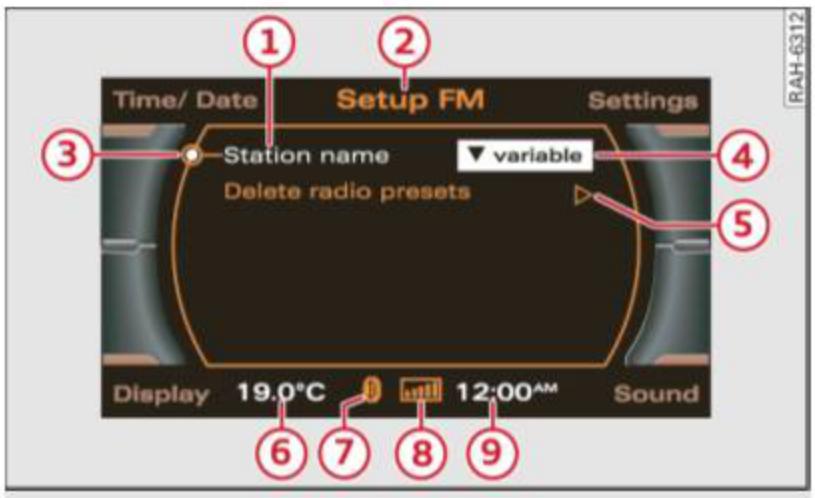


Fig. 15 Setup Radio



Fig. 16 Radio submenu

After you press a function button ① ⇨ *page 15, fig. 13*, a menu appears in the display.

	Symbol/Description	Explanation
①	Selected text	A menu item you have selected has a white background.
②	Title line	Operating mode selected (e.g. FM/AM ⇨ *fig. 16*). Setup display: Setup menu for the operating mode selected (e.g. Setup FM ⇨ *fig. 15*). On vehicles with a telephone*, the cell phone operator and, where applicable, the roaming symbol △ will be displayed.
③	Cursor	Shows a line selected in a menu.
④	Options box	Options for the menu item selected.
⑤	Arrow	Points to additional options or possible settings.
⑥	Temperature display*	Set air conditioning* temperature.
⑦	Bluetooth symbol	Cell phone is connected via Bluetooth to the cell phone package.
⑧	Signal strength bar*	Cell phone connection quality, or **PIN**: Enter PIN ⇨ *page 38* **PUK**: Enter PUK ⇨ *page 38* **SIM**: Insert SIM card
⑨	Time of day	Set time ⇨ *page 21*.

▶

	Symbol/Description	Explanation
⑩	Display corners	Show selectable functions. You perform the functions using the control buttons. The top right corner of the display corresponds to the top right control button.
⑪	Subtitle	Tells you about a selected option (e.g. radio station preference).
⑫	Control wheel	Is operated by rotating and pressing the control knob.
⑬	Cancelled loudspeaker symbol	Active audio source is muted.

Speller

You enter telephone numbers using the speller.

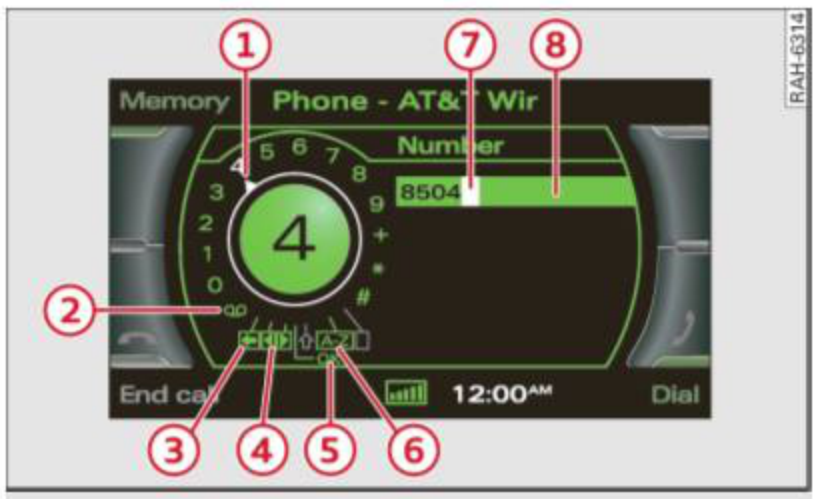


Fig. 17 Number speller: Telephone number entry

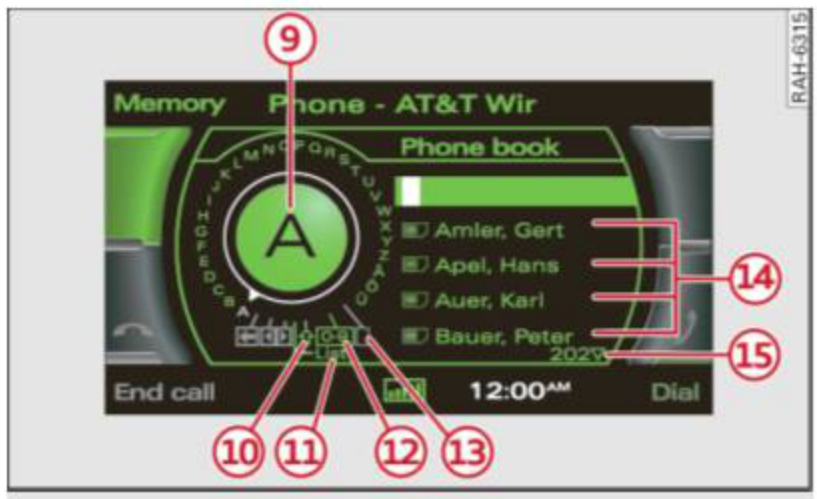


Fig. 18 Letter speller: Telephone number entry

In telephone* mode, you are required to enter letters or numbers. For you to do this, the number speller ⇨ *fig. 17* or the letter speller ⇨ *fig. 18* appears in the display.

While you are making your entry, you can switch as needed from numbers to letters or from letters to numbers by rotating the control knob **0-9** ⑫ ⇨ *fig. 18* or **A-Z** ⑥ ⇨ *fig. 17* and pressing the knob.

The symbols for entering letters and numbers are explained in the table below:

	Symbol/Description	Explanation
①	Selection arrow	Puts a white background behind the selected element and shows it enlarged in the entry ring.
②	Mailbox symbol	Call mailbox.
③	◀	Deletes the character to the left of the white highlighted cursor.
④	◀▶	Moves the cursor forward/backward in the entry field.
⑤	OK	Confirms the entry.
⑥	A-Z	Switches from number to letter entry.
⑦	Cursor	Marks the current editing position.
⑧	Entry field	Shows the current entry.
⑨	Entry ring	Shows the character selected with the selection arrow enlarged.

▶

	Symbol/Description	Explanation
⑩	⬆	Switches from lower case to upper case.
⑪	LIST	Shows a list containing suggestions.
⑫	0-9	Switches from letter to number entry.
⑬	Space	Inserts a space in the entry field.
⑭	List with suggestions	Lists suggestions in alphabetical order.
⑮	⬇	Refers to additional list entries.

Entering letters, numbers and symbols using the speller

You can find an overview of the speller on ⇨ *page 17*.

Entering numbers, letters, and symbols

- ▸ Rotate the control knob with the selection arrow ① to the letters, the number or the symbol. Your selection is shown enlarged in the entry ring ⑨.
- ▸ To accept the letter, the number or the symbol, press the control knob. Your entry appears in the entry field ⑧.
- ▸ When you have entered all the digits, rotate the control knob to **OK** ⑤ and press the knob.

Deleting numbers, letters, and symbols

- ▸ Rotate the control knob with the selection arrow to ⬅ ③.
- ▸ To delete the last digit in the entry field, press the control knob.
- ▸ To delete all the digits in the entry field, hold the control knob down until no digits show in the entry field.

In some cases the selection of letters is limited by logical exclusion. This means that you can select only the letters which are possible at this place in a word.

Enter special characters (e.g. hyphen or period) using the number speller.

Switching display on/off



Fig. 19 Switching display off

Switching display off

- ▸ Press the control button **Display** in a setup menu.
- ▸ Rotate the control knob to **Switch off display** ⇨ *fig. 19* and press the control knob. The display is switched off.

Switching display on

- ▸ Press or rotate the control knob, or
- ▸ Press a function button, or
- ▸ Press a control button, or
- ▸ Press the RETURN button.

Tips

After the display is switched off, you can still change radio stations or find a selected audio source using the arrow buttons.

Adjusting the volume

Active audio source

You can adjust the volume or mute the audio sources using the On/Off control knob.



Fig. 20 Adjusting radio volume

Adjusting the volume

▸ Rotate the On/Off knob to the left or the right. The volume will be adjusted.

Muting (Mute)

▸ Press the On/Off knob briefly. The active audio source is muted or an active CD drive will be stopped (Pause Function). A loudspeaker symbol with a slash through it appears in the display.

Canceling mute

▸ Press the On/Off knob briefly, or
▸ Rotate the On/Off knob to the right. The loudspeaker symbol with a slash through it disappears in the display.

Audio sources, navigation announcements and the telephone each have their own volume settings. The stored audio source volume is automatically limited when the radio system is switched on.

– If the stored volume is lower than the permanently set minimum volume level, the volume is increased to the set minimum level.
– If the stored volume is above the permanently set maximum volume level, the volume is decreased to the set maximum level.
– If the store volume is between the set minimum and maximum volume levels, the stored level is maintained.

In MEDIA mode, playback is stopped for as long as the source is muted.

Tips

– The telephone and traffic announcement switch-on volume is not limited.
– You can also adjust the volume using the right thumb wheel on the multifunction steering wheel* without taking your hands from the wheel ⇨ *page 43*.

Additional audio sources

You can adjust the volume for entertainment suppression individually.



Fig. 21 Volume settings

▸ In an audio or setup menu, press the control button **Sound**.
▸ Rotate the control knob to **Volume settings**.
▸ Press the control knob. The **Volume settings** ⇨ *fig. 21* menu appears in the display.
▸ Rotate the control knob to the menu item **Entertainment suppr.**.
▸ Press the control knob. Now you can adjust the volume for the selected menu item.
▸ Rotate the control knob to the desired volume.
▸ To save your setting, press the control knob.

Tips

Using **Entertainment suppr.***, you can adjust the volume for the active audio source while the Audi parking system* is active.

Adjusting the sound

Basic settings



Fig. 22 Selecting treble



Fig. 23 Adjusting treble

- ▸ In an audio or setup menu, press the control button **Sound** ⇨ *fig. 23*.
- ▸ Rotate the control knob to a menu item (e.g. Treble ⇨ *fig. 22*).
- ▸ Press the control knob. The selected menu item is shown enlarged in the display ⇨ *fig. 23*.
- ▸ To adjust the sound characteristics, rotate the control knob to the right or the left.
- ▸ To save your setting, press the control knob.

The following sound adjustments are possible:

– Treble
– Midrange
– Bass
– Balance: Adjusts speaker control left/right
– Fader: Adjusts speaker control front/rear
– GALA (speed dependent volume adjustment)
– DSP PREMIUM* ⇨ *page 20*
– Volume settings for additional audio-sources ⇨ *page 19*

Treble, midrange, and bass settings are valid for the mode you are currently in. The balance and fade settings are independent of the mode.

DSP PREMIUM

Applies to vehicles: with DSP Premium



Fig. 24 DSP PREMIUM

Displaying DSP PREMIUM menu

- ▸ In an audio or setup menu, press the control button **Sound** ⇨ *fig. 24*.
- ▸ Rotate the control knob to **DSP PREMIUM** and press the knob. The **DSP PREMIUM** ⇨ *fig. 24* menu appears in the display.

Surround

- ▸ Rotate the control knob to **Surround** and press the knob.
- ▸ To switch Surround on, rotate the control knob to **on**.
- ▸ To save your setting, press the control knob. Surround Sound is only active for a selected CD or SD source.

GALA

- ▸ Rotate the control knob to **GALA** and press the knob.
- ▸ To adjust the level of volume equalization, rotate the control knob to one of the seven steps and press the knob.
- ▸ To switch the function off, rotate the control knob to **off** and press the knob.
- ▸ For the system to automatically adjust the volume to compensate for the ambient noise, rotate the control knob to **auto** and press the knob.

Setting time of day



Fig. 25 Setting time

Opening the time setting menu

- ▸ Press the SETUP function button.
- ▸ Press the control button **Time/Date**. The time setting menu ⇨ *fig. 25* appears in the display.

Setting time of day

- ▸ Rotate the control knob to **Time** and press the knob. The hour display is shown in the display highlighted in white.
- ▸ To set the hour, rotate the control knob to the left or right and then press the control knob. The minute display is shown in the display highlighted in white.
- ▸ To set the minutes, rotate the control knob to the left or right.
- ▸ Save the time of day entry by pressing the control knob.

Setting the date

- ▸ Rotate the control knob to **Date** and press the knob. The year display is shown in the display highlighted in white.
- ▸ To set the year, rotate the control knob to the left or right and then press the knob. The month display is shown in the display highlighted in white.
- ▸ To set the month, rotate the control knob to the left or right and then press the knob. The day display is shown in the display highlighted in white.
- ▸ To set the day, rotate the control knob to the left or right.
- ▸ Save the date entry by pressing the control knob.

Setting the time format

- ▸ Rotate the control knob to **Time format** and press the control knob.
- ▸ Rotate the control knob to **24h** or **AM/PM**.
- ▸ To save your setting, press the control knob.

Setting the date format

- ▸ Rotate the control knob to **Date format** and press the control knob.
- ▸ To adjust the date format “Day.Month”, rotate the control knob to **DD.MM** and press the knob.
- ▸ To adjust the date format “Month/Day”, rotate the control knob to **MM/DD** and press the knob.

Tips

If you enter a new time zone with your vehicle, you have to adjust the time display manually to local time.

Restarting the radio

The functionality of the radio is restored through the On/Off knob.



Fig. 26 On/Off knob

- ▸ Press and hold down the On/Off knob ⇨ *page 19, fig. 20* until the radio restarts.

Tips

If problems arise during system reset, please consult your authorized Audi dealer.

Additional settings

Menu language

▸ Select: Function button SETUP > control button **Settings** > **Menu language**.

You can change the information in the display and in the driver information system.

English, French, Spanish and German are available.

Measurement units

▸ Select: Function button SETUP > control button **Settings** > **Measurement units**.

The measurement units in the radio display, in the driver information system and in the climate control system display can be changed.

The following units can be selected:

– distance (km or miles)
– speed (km/h or mph)
– temperature (°C or °F)
– pressure (bar or psi)

Factory settings

▸ Select: Function button SETUP > control button **Settings** > **Default settings**.

The following functions can be reset to the default factory settings:

– MMI settings
– Sound settings
– Radio
– CD
– Telephone*

After selecting the functions, rotate the control knob to **Reset systems**. Confirm your entry by rotating the control knob to **Yes** and pressing it.

You can also reset all of the functions listed to the factory default settings by activating the **Select all** option.

Version information

▸ Select: Function button SETUP > control button **Settings** > **Version information**.

This function shows the hardware and software version for the radio.

Display brightness

▸ Select: Function button SETUP > control button **Display** > **Brightness**.

By rotating the control wheel to the right or left, you can adjust the brightness of the display.

Listening to the radio

Introduction



Fig. 27 FM station list



Fig. 28 Sirius station list

The radio has three frequency bands: AM, FM, and SAT* (satellite radio). The receivable stations are shown on a radio station list and can be selected directly. You can select the next receivable station by pressing a button or playing all stations for a few seconds (SCAN). You can also save your favorite stations on a preset list in any order.

Frequency modulation (FM)

The FM station list is updated automatically ⇨ *fig. 27*. You can also update the station list manually.

Amplitude modulation (AM)

You have to update the AM station list manually ⇨ *page 23, fig. 29*.

When you leave the reception area, the stations on the list continue to be displayed but reception is no longer guaranteed.

Satellite Radio (SAT)*

The Sirius* channel list is updated dynamically from the Sirius* service provider. Non selectable channels are automatically passed over when searching channels and are not shown in the display ⇨ *fig. 28*.

Tips

To receive satellite programs, you must contract the Sirius* service provider ⇨ *page 24*.

System information

Applies to vehicles: with Satellite Digital Audio Radio Service

The following system messages can be displayed:

System messages	Meaning
ANTENNA	No antenna is connected to the tuner, or there are loose plug contacts on the antenna cable.
LINKING	The tuner is presently not receiving any satellite signal.

Starting radio operation



Fig. 29 Frequency bands

Requirement: The radio is on ⇨ *page 15*.

- Press the FM/AM/SAT function button. The list of stations or the most recent active radio menu appears in the display.

The menu that was open the last time you listened to the radio is shown in the display. Press the FM/AM/SAT function button again when in radio mode to call up the station list.

Activating your satellite radio service

Applies to vehicles: with Satellite Digital Audio Radio Service

In order to be able to receive satellite programs, this service must be enabled.



Fig. 30 Receiver serial number

In order to have the service enabled at your provider, you need the electronic serial number of the tuner. To show the electronic serial number in the display:

Sirius channel list

- ▸ Press the SAT function button. The station list is displayed.
- ▸ Turn the knob to **000 Sirius ID** and press the knob.

Setup menu

- ▸ Press the function button SETUP in the Satellite Radio menu.
- ▸ Select **Receiver serial numbers** by rotating the control knob and press the control knob. The electronic serial number will appear on the Display ⇨ *fig. 30*.

This number is a 12 character alphanumeric number.

Tips

– Objects such as buildings, tunnels, bridges, terrain, other vehicles or objects on the roof of the vehicle can result in decreased performance.
– Satellite Radio reception is not available in Alaska and Hawaii.

Selecting frequency band

The radio has the three frequency bands: Frequency Modulation (FM), Amplitude Modulation (AM), and satellite radio (Sirius).*



Fig. 31 AM/FM frequency bands



Fig. 32 Sirius frequency band

Requirement: The radio is on ⇨ *page 23*.

Via control button Band

- ▸ In AM/FM mode, press the ⇨ *fig. 31* control button **Band**.
- ▸ Rotate the control knob to the desired frequency band.
- ▸ To select the frequency band, press the control knob. The current frequency band is shown in the title line in the display, or
- ▸ Press the SAT* function button to activate satellite radio* ⇨ *fig. 32*.

Via RADIO function button

- ▸ To select the frequency band, press the FM/AM function button until the desired frequency band appears in the display. ▶

Tips

You can select the frequency band and the radio stations in the instrument cluster display using the multifunction steering wheel* ⇨ *page 44*.

Selecting a station from the station list

The receivable stations for the selected frequency band are displayed in the station lists.



Fig. 33 FM station list

Requirement: The desired frequency band is selected ⇨ *page 24* and receivable radio stations are shown in the display ⇨ *page 23*.

- ▸ To update the station list, rotate the control knob to **Update station list** ⇨ *page 23, fig. 29* and press the knob.
- ▸ Rotate the control knob to the desired radio station.
- ▸ To select the station, press the control knob.

Tips

Did you know that you can also perform this function using the multifunction steering wheel* ⇨ *page 44*?

Satellite station list

Applies to vehicles: with Satellite Digital Audio Radio Service

The available stations are listed in the satellite main menu.



Fig. 34 Radio: Sirius satellite radio station list

- ▸ Press the SAT function button.
- ▸ Select the desired radio station in the main Sirius radio menu with the control knob.

If you are not in the main satellite radio menu (Radio Sirius) after pressing the function button, you can change the frequency band by repeatedly pressing the SAT function button.

Operating the control button **Presets** displays the preset list. You may store stations from the FM, AM and satellite radio (Sirius) bands ⇨ *page 27*.

The explanations for the sound settings start with section ⇨ *page 20*.

Tips

- – The stations that are displayed in the station list can be filtered according to your personal desires as to type of program ⇨ *page 29*.
- – If you operate the RETURN button in a sub menu, the satellite radio main menu will be displayed.

Selecting a station



Fig. 35 Manual station search (FM band)



Fig. 36 Satellite radio: Channel number

Requirement: A frequency band is selected ⇨ *page 24*.

Next receivable station

- ▸ Press the control button **Tuning**.
- ▸ Rotate the control knob to **>|** (Seek up) or **|<** (Seek down).
- ▸ Press the control knob. The next receivable station is selected.

Adjusting the frequency manually (FM/ AM band)

- ▸ Press the control button **Tuning**.
- ▸ Rotate the control knob to **TUNE** (Tuning) ⇨ *fig. 35* and press the control knob.
- ▸ To select the station, rotate the control knob to the left or right.
- ▸ To save the selected station, press the control knob.

Entering a channel number (satellite radio)

- ▸ Press the control button **Tuning** in the satellite radio menu.
- ▸ By rotating the control knob, select **Ch.** (Channel) ⇨ *fig. 36* and press the control knob.
- ▸ To select the station, rotate the control knob to the left/right.

Briefly pressing the control knob selects the next available station. If you hold the control knob down, the available stations will advance or back up more quickly.

Tips

– When in the Sirius band, use the **>|** (Seek up)/**|<** (Seek down) function to switch to the next/previous station in the station list.

– You can also press the *arrow buttons* on the MMI terminal briefly to switch to the previous/next station in the station list ⇨ *page 15*.

Scanning stations

Using the SCAN function, the receivable stations are played for a few seconds.



Fig. 37 FM radio SCAN function

Requirement: The desired frequency band is selected ⇨ *page 24*.

SCAN in the control wheel

- ▸ Press the control button **Tuning**.
- ▸ Rotate the control knob to **SCAN**.
- ▸ To start the SCAN function, press the control knob. The station list appears in the display.
- ▸ To stop the SCAN function, press the control knob again. The currently scanned station is selected.

SCAN button (concert sound system)

- ▸ Press the SCAN button to start the scan function.

▶

▸ Press the SCAN button again to stop the scan function. The last active station is selected.

If activating the scan function opens the station list, you can also select a station from the list. To return to the control wheel display, press the **Tuning** control button again.

Storing stations

The preset list can contain up to 30 stations from all frequency bands.



Fig. 38 Storing stations



Fig. 39 Storing stations

Requirement: A station is selected ⇨ *page 26*.

From the control knob

▸ Press and hold the control knob until the station is displayed in an open position in the preset list.
▸ To change the position on the preset list, rotate the control knob to the left or the right.
▸ To store the station to the selected position on the preset list, press the control knob.

From the control button Tuning

▸ Press the control button **Tuning**.
▸ Rotate the control knob to **STORE** (Store station) ⇨ *fig. 38*.
▸ Press the control knob. The selected station is stored in an open position on the preset list.
▸ To change the position on the preset list, rotate the control knob to the left or the right.
▸ To store the station to the selected position on the preset list, press the control knob.

From the control button Presets

▸ Press the control button **Presets**.
▸ Rotate the control knob to **Store** *Station name* ⇨ *fig. 39*.
▸ Press the control knob. The selected station is stored in an open position on the preset list.
▸ To change the position on the preset list, rotate the control knob to the left or the right.
▸ To store the station to the selected position on the preset list, press the control knob.

Tips

You can delete an individual station or all stations from the preset list ⇨ *page 28*.

Selecting a stored station

Requirement: A station is stored on the preset list ⇨ *page 27*.

▸ Press the control button **Presets**. The preset list is displayed.
▸ To select a station from the preset list, rotate the control knob to the station.
▸ Press the control knob. The station is selected.

Tips

Also try selecting a stored station using the multifunction steering wheel* ⇨ *page 44*.

Moving a stored station

Requirement: A station is stored on the preset list ⇨ *page 27*. ▶

- ▸ Press the control button **Presets**. The preset list is displayed.
- ▸ Rotate the control knob to **Move** *Station name* and press the control knob.
- ▸ To change the position on the preset list, rotate the control knob to the left or the right.
- ▸ To store the station to the selected position on the preset list, press the control knob.

Additional settings

Displaying radio text

Requirement: The FM frequency band is selected ⇨ *page 24*.

- ▸ Select: Function button FM/AM > control button **Tuning** > **TEXT** (radio text).

Radio texts are additional information transmitted by some stations (e.g. station name, artist or track).

Deleting memory entries

Requirement: A station is stored on the preset list ⇨ *page 27*.

- ▸ Select: Function button FM/AM > function button SETUP > **Delete radio presets** > **Single station** or **All stations**.

Single station

By rotating and pressing the control knob, select **Single station** and then the station to be deleted.

All stations

Select **All stations** by rotating and pressing the control knob.

Station info

Applies to vehicles: with Satellite Digital Audio Radio Service



Fig. 40 Setup Sirius: Station info

Requirement: Satellite radio is activated ⇨ *page 24*.

- ▸ Select: Function button SETUP > **Station info**.

If you have switched on **Station info**, two-part information is displayed in the satellite radio main menu. For example, the names of the artist and song are displayed for a short time in a window that opens separately ⇨ *page 25, fig. 34*.

Sorting stations

Applies to vehicles: with Satellite Digital Audio Radio Service

Requirement: Satellite radio is activated ⇨ *page 24*.

- ▸ Select: Function button SETUP > **Station sort**.

Channel no.

The stations are listed by channel number in ascending order.

Channel name

The station categories are listed in the main menu in alphabetical order.

Category and channel No.

The stations are listed by category and than by channel number. ▶

Category and chan. name

The stations are listed by category and than by channel name.

Tips

The stations that are displayed in the station list can be filtered according to your personal desires as to type of program ⇨ *page 29*.

Category filter

Applies to vehicles: with Satellite Digital Audio Radio Service

Requirement: Satellite radio is activated ⇨ *page 24*.

- ▸ Select: Function button SETUP > **Category filter**.

The stations that are displayed in the station list can be filtered according to your personal desires as to type of program. The selection of program categories depends on what your provider offers.

If you select the option **Switch off all filters**, all filter options are deactivated and all available channels are displayed in the satellite station list.

Delete radio presets

Requirement: A radio station is stored in the preset list ⇨ *page 27*.

- ▸ Select: Function button SETUP > **Delete radio presets** > **Single station** or **All stations**.

Single station

By turning and pushing the control knob, first select **Single station** followed by the radio station you wish to delete.

All stations

By turning and pushing the control knob, select **All stations**.

Playing media

Introduction

You can start and operate the CD player / CD changer, the memory card reader and a portable audio device (such as an iPod or USB storage device) through the radio system. Various functions are available depending on which drive is active and which storage medium is inserted. For example, you can select individual tracks or folders directly, play the tracks in random order or display information stored in an ID3/WMA/AAC tag with the current track (such as the artist, album or title).

Starting media mode

Requirement: The radio is switched on ⇨ *page 50*.

- ▸ Press the MEDIA function button. The source overview or the track that was played the last time media mode was active will be shown in the display.
- ▸ Press the **Source** control button if no source or track/folder overview appears in the display.

When you connect a portable audio device (such as an iPod or USB storage device) to the Audi music interface*, the interface* is automatically selected as the source and playback begins.

Tips

- You can switch between audio sources by pressing the MEDIA button repeatedly.
- Playback will be interrupted with traffic announcements if traffic radio is switched on ⇨ *page 28*.

Selecting Source



Fig. 41 List of available drives (concert radio system)



Fig. 42 List of available drives (symphony radio system)

Requirement: a drive contains an audio file.

- ▸ Press the MEDIA function button.
- ▸ Press the control button **Source**.
- ▸ Rotate the control knob, for example, to a media drive.
- ▸ Press the control knob. The track list or a folder structure for the selected audio source is shown in the display.

Possible sources are ⇨ *fig. 42*:

– CD in the CD player / CD changer
– Memory card
– Audi music interface* (such as an iPod) or AUX

Selecting a folder

The folders of an active audio source are shown in the display.



Fig. 43 List of tracks of a folder

Requirement: A source was selected ⇨ *page 30*.

- Press the MEDIA function button. The folder structure for the selected source is displayed ⇨ *fig. 43*.
- Rotate the control knob to a folder and press the knob. The tracks in the folder are displayed.

Tips

– To reach the overview of possible audio sources, press the **Source** control button.
– To reach the highest level in the folder structure, press the MEDIA function button.
– To reach the next highest level, press the RETURN function button or rotate the control knob to the **Up** folder and press the knob.
– You can scroll through long lists of folders quickly by rotating the control knob. The scrolling speed depends on the number of folders.

Selecting a track

The track with the play time is shown in the display.



Fig. 44 List with CD tracks

Requirement: A CD ⇨ *page 30* or a folder ⇨ *page 31* was selected.

- Rotate the control knob to a track ⇨ *fig. 44*.
- To select the track, press the control knob. The track will play.

Tips

– You can scroll through long lists of tracks quickly by rotating the control knob. The scrolling speed depends on the number of tracks.
– Did you know that you can also operate this function with the multifunction steering wheel* ⇨ *page 44*?

Forward/reverse and previous/next track

You can move forward or backward within a track and jump from one track to the previous or next track on a CD or a in a folder.



Fig. 45 Forward

Requirement: A track is playing ⇨ *page 31*. ▶

Forward/reverse

- ▸ Press the control button **Control**.
- ▸ Rotate the control knob to >> (Forward) ⇨ *fig. 45* or << (Reverse) and keep the control knob pressed.

Previous/next track

- ▸ Press the control button **Control**.
- ▸ Rotate the control knob to >| (Next track) ⇨ *fig. 45* or |< (Previous track).
- ▸ To jump to the previous/next track, press the control knob. The track will play.

To jump from one to the next track one after the other, press and hold the control knob.

If you select “Previous” within 10 seconds after a track has started to play, the previous track will start playing. If it is pressed after playing for 10 seconds, it jumps to the start of the current track.

Tips

You can fast forward and reverse within a track by pressing and holding the *arrow buttons* ⇨ *page 15* on the radio system. Pressing the *arrow buttons* briefly will jump to the previous/next track.

Repeat



Fig. 46 Repeat

Requirement: A CD, a memory card ⇨ *page 9* or a portable audio device* was selected as a source.

- ▸ Press the control button **Control**.
- ▸ Rotate the control knob to **RPT** (repeat) and press the knob.
- ▸ Rotate the control knob to the range to be repeated and press the knob.

The following functions can be selected for repeat:

– **off** - the **repeat** function is switched off.
– **Medium** - the tracks on the CD, memory card or portable audio device that is playing will be repeated.
– **Track** - the current track playing will be repeated.
– **Folder** - the tracks in the current folder list playing will be repeated. If the tracks on an MP3/WMA CD, a memory card or a portable audio device are repeated, you can also select the **with subfolders** function. The tracks in the subfolders will also be repeated.
– **Playlist** - if a playlist was selected, the tracks in the current playlist will be repeated.
– **all playlists** - all playlists will be repeated.

Tips

Shuffle also depends on the repeat settings ⇨ *page 32*.

Shuffle

You can play the tracks in random order.



Fig. 47 Shuffle

Requirement: A track is played ⇨ *page 31*.

- ▸ Press the control button **Control**.
- ▸ Rotate the control knob to **MIX** (Shuffle) ⇨ *fig. 47*.
- ▸ To start shuffle play, press the control knob.

Shuffle depends on the settings you have selected for **Repeat** ⇨ *page 32*. ▶

– Repeat **off** - the tracks in the current audio source are played in random order and then the tracks in the additional audio sources are.
– Repeat **Medium** - the tracks in the current medium are played in random order.
– Repeat **Folder** and **Playlist** - the tracks in the current playlist are played in random order.

Scanning a track (SCAN)

The SCAN function plays each track on the CD or memory card for a few seconds.



Fig. 48 Scanning a track

Requirement: A track is played ⇨ *page 31*.

SCAN in the control wheel

- ▸ Press the control button **Control**.
- ▸ Rotate the control knob to **SCAN** ⇨ *fig. 48*.
- ▸ To start the SCAN function, press the control knob. The track list appears in the display.
- ▸ To stop the SCAN function, press the control knob again. The track currently playing will be selected.

SCAN button (concert radio system)

- ▸ Press the SCAN button to start the scan function.
- ▸ Press the SCAN button again to stop the scan function. The currently scanned track will be played.

Once activating the scan function opens the track list, you can also select a track from the list. To return to the control wheel display, press the **Tuning** control button again.

Stopping/resuming a drive

Requirement: A track is played.

Stopping a drive

- ▸ Press the On/Off knob briefly, or
- ▸ Rotate the On/Off knob counter-clockwise until the mute symbol appears in the status line.

Resuming a drive

- ▸ Press the On/Off knob briefly, or
- ▸ Rotate the On/Off knob clockwise. Playback resumes.

Tips

You can also operate this function without removing your hands from the steering wheel ⇨ *page 45*.

Additional settings

Track information (INFO)

Requirement: An MP3/WMA CD or memory card ⇨ *page 10* is being played.

- ▸ Select: Function button MEDIA > control button **Control** > **INFO** (Info).

Information stored in the ID3/WMA tag for the current track (e.g. artist) is displayed.

Track display

Requirement: An MP3/WMA CD or memory card ⇨ *page 9* is being played.

- ▸ Select: Function button MEDIA > function button SETUP > **Track display**.

Track name

Information about the currently played track is shown by using the function **INFO** (track information) ⇨ *page 33* (e.g. artist, album). The information must be stored in the ID3/WMA tag.

File name

The name of the file will be displayed without any file extension.

Track information

Requirement: A track is playing ⇨ *page 31*.

- Select: MEDIA function button > SETUP function button > **Track information**.

If information for the current track (such as the artist, album or track) is available in an ID3/WMA/AAC tag, the information is displayed in a pop-up window when this function is activated.

Tips

The **Track information** function is not available for iPods and portable audio devices that were connected with the AUX-in connector.

Input level

Applies to vehicles: with Audi music interface or Aux-in connection

Requirement: A portable audio device is connected with the 3.5 mm stereo jack adapter cable* ⇨ *page 13*.

- Select: MEDIA function button > **Audi music interface** or **AUX** source > SETUP function button > **Input level**.

Adjust the volume of the portable audio device at the radio system. We recommend adjusting the volume of the portable audio device to 70 percent of the maximum output.

Calling

Introduction

Applies to vehicles: with cell phone package

A cell phone is connected to the cell phone package and operated using the radio system, the multifunction steering wheel, or the telephone voice operation.*

The factory-installed cell phone package in the vehicle allows you to connect particular GSM or CDMA cell phones via Bluetooth ⇨ *page 36*.

You operate your cell phone using the radio system, the multifunction steering wheel* ⇨ *page 43*, or the telephone voice operation ⇨ *page 50*.

The active audio source is muted during an incoming/outgoing call and the drive is stopped. After the call is ended, the audio source is restored to the previous volume level.

To use the telephone function of your radio system, a cell phone must be connected to the cell phone package ⇨ *page 36*.

WARNING

- Medical experts warn that cell phones can interfere with the function of pacemakers. Always maintain a minimum distance of 20 centimeters between the cell phone antenna and the pacemaker.
  - Do not carry the cell phone in a pocket directly over the pacemaker when the phone is switched on.
  - Switch the cell phone off immediately if you suspect it may be interfering with the pacemaker.
- Make sure that all persons maintain a minimum distance of 6 in (15 cm) from the antenna, in accordance with the certification guideline for mobile HF transmitters.
- Pay attention first and foremost to your driving! As the driver, you have total responsibility for operating the vehicle safely. Therefore, when using the functions, make certain that you have complete control of your vehicle in all traffic situations!
- The telephone voice operation* should not be used in emergencies, since the voice can change in stressful situations. The result can be that the desired telephone connection does not go through under certain circumstances or does not go through quickly enough. Dial the emergency number manually.

Note

- Observe all applicable laws for making telephone calls in vehicles.
- Switch off your cell phone in areas in which the use of cell phones is prohibited.
- Switch off your cell phone in locations where there is a danger of explosion. These locations are not always clearly identified. They include, for example, filling stations, storage or transportation facilities for fuel or chemicals; locations where there is fuel vapor in the air (e.g. escaping propane or fuel vapors in vehicles or buildings) or locations where there are chemicals or large quantities of dust particles (e.g. from flour or wood) in the air. This also applies to all other locations where you normally switch off your car's engine.

Tips

- The phone functions depend on whether your mobile phone is compatible with the cell phone package and whether your cell phone provider supports these functions.
- Reception may be impaired in screened areas, for example, in a tunnel or an underground parking garage.
- There may be regions without network coverage from cell phone operators. Your telephone cannot be used in these areas.
- You can find current information about the cell phone package online at “www.audiusa.com/bluetooth” or at an authorized Audi dealer.

Bluetooth™

Applies to vehicles: with cell phone package

Bluetooth technology sets up a cordless connection from the cell phone to the cell phone package.



Fig. 49 Bluetooth symbol

The cell phone[1)] must be bonded one time to the cell phone package in the vehicle. Depending on the cell phone being used, various steps are required for this procedure:

- ▸ Make sure that no other cell phone is connected to the cell phone package through a Bluetooth connection.
- ▸ Switch on the ignition and the radio system.
- ▸ On the cell phone, select the appropriate menu option that searches for Bluetooth-enabled devices (cell phone package).
- ▸ Connect the cell phone to the cell phone package. Your cell phone package calls the cell phone using the name “Audi UHV”.
- ▸ Enter “1234” as the **Bluetooth PIN** for the cell phone package within 30 seconds.
- ▸ Wait until your cell phone displays the message indicating successful bonding. The Bluetooth symbol (1) ⇨ *fig. 49* appears in the display.

To protect yourself from outside access to your cell phone, you should change the **Bluetooth PIN** ⇨ *page 41*.

A maximum of four cell phones

You can connect up to four cell phones to the cell phone package. However, only one cell phone at a time is actively connected to the cell phone package. If a fifth cell phone is bonded to the cell phone package, the device which has not been used in conjunction with the cell phone package for the longest time is disconnected.

Making and breaking a connection

An operational cell phone which has been bonded to the cell phone package is automatically connected after the ignition is switched on. For some cell phones you have to confirm the connection.

The Bluetooth connection is disconnected after the ignition key is removed unless there is a call in progress.

Range

The Bluetooth connection from cell phone to cell phone package is limited to the interior of the vehicle. It depends on local conditions, such as obstacles between the devices, and on interference from other devices. If your cell phone is in a pocket for example, it can affect the quality of data transmission.

WARNING

During air transportation, the Bluetooth function for the cell phone package must be switched off by an authorized Audi dealer or other qualified workshop.

Tips

You can find instructions on how to operate your cell phone in the appropriate owner's manual.

1) Please make sure that the cell phone to be bonded supports the hands-free profile.

Phone book entries

Applies to vehicles: with cell phone package

The phone book entries for the SIM card and the cell phone address book are stored automatically in the cell phone package.



Fig. 50 Searching entry in the telephone book

Loading the phone book entries

As long as the cell phone supports this function, the phone book entries are automatically loaded into the cell phone package memory after the ignition is switched on. This loading process can last several minutes and depends on the number of entries in the phone book.

The last four phone books loaded into the cell phone package are saved. After a fifth cell phone has been inserted in the cell phone package, the phone book from the cell phone which has not been used the longest is deleted. Up to 500 total phone book entries can be saved each time.

Reconnecting the cell phone

With an identical SIM card the telephone book entries are already saved in the cell phone package. You can use the phone book after a brief waiting period.

The system checks the phone book entries for changes and loads them into the memory automatically.

Phone book entry display

The phone book entries are shown in alphabetical order and are labeled by category, e.g. SIM cards, home, work, cell phone and phone symbols ⇨ *fig. 50*.

Tips

- If you use a GSM cell phone, the entries available on the SIM card and in the cell phone address book are saved in the cell phone package.
- If you use a CDMA cell phone, the available cell phone address book entries are saved in the cell phone package.

Starting telephone mode

Applies to vehicles: with cell phone package



Fig. 51 Speller for entering a phone number

Requirement: The radio is on ⇨ *page 15*.

- ▸ Press the TEL function button. The speller for PIN ⇨ *page 38, fig. 52* or phone number input ⇨ *fig. 51* or the last active telephone menu appears in the display.

The menu that was opened during the most recent call is shown in the display. You open the speller by pressing the TEL function button in telephone mode.

Tips

- The active audio source is muted during a telephone call.
- There may be technical interference with cell phones, which can impair the performance of the device. Please read the User's Guide for your cell phone for more information in this regard.
- Reception may be impaired in covered areas, such as, for example, in a tunnel or an underground garage. ▸

– There may be areas without network coverage from cell phone providers. Unfortunately, the telephone cannot be used there.
– In order to use the telephone, you must have a contract with a cell phone provider.
– You can select different telephone functions in the instrument cluster display cluster via the multifunction steering wheel* ⇨ *page 45*.
– The telephone functions described depend on the compatibility of the cell phone with the cell phone package, and whether or not your cell phone service provider supports these functions.

Entering a PIN/PUK

Applies to vehicles: with cell phone package, GSM cell phone and multifunction steering wheel



Fig. 52 Telephone: Entering PIN

► Press the TEL function button.
► Enter the PIN using the speller ⇨ *fig. 52*.
► Confirm the entry in the speller with **OK**.

PIN (Personal Identification Number)

The personal identification number (PIN) consists of four to eight characters and protects your SIM card from misuse.

You will receive the PIN along with the SIM card from your cell phone service provider. If you enter a PIN incorrectly three times[1)] in a row, the SIM card is blocked and a message appears in the display.

PUK (Personal Unblocking Key)

A blocked SIM card is unblocked with an eight-character personal unblocking key (PUK).

You will receive the PUK along with the SIM card from your cell phone service provider. If you incorrectly enter the PUK ten times[1)] in a row, please contact your cell phone service provider.

Tips

– When entering a PIN, only asterisks (*) are shown in the display in the place of numerals.
– **PIN** is not shown in the display in every instance, it depends on the cell phone being used and the cell phone provider. If the cell phone used is not compatible with the cell phone package, then it is possible that this note will not be displayed.
– Depending on the cell phone being used, it may be necessary to enter the PIN on the cell phone. In this case, you are not shown a request to enter the PIN in the Display.
– For additional information, please see the User's Guide for your cell phone.
– When the ignition has been switched on, a warning message will appear when the speller is used for the first time while driving. Please read the warning message carefully and follow the instructions.

1) The number of attempts depends on the SIM card.

Dialing a telephone number

Dialing directly using the speller

Applies to vehicles: with cell phone package

The speller can be used to enter a phone number directly as a series of numbers or letters.



Fig. 53 Entering telephone numbers using the number speller



Fig. 54 Entering telephone numbers using the letter speller

Requirement: Telephone mode is active ⇨ *page 37* and the speller is shown in the display ⇨ *fig. 53*.

Entering telephone numbers using a number sequence

- ▸ Enter the phone number using the speller.
- ▸ Confirm your entry by rotating the speller to **OK** and then pressing it, or
- ▸ Press the control button **Dial**. After the connection has been made, the audio source is muted.

Entering telephone numbers using a letter sequence

- ▸ Enter an area code e.g. *1 800* using the speller ⇨ *fig. 53*.
- ▸ To change to the letter speller, rotate the speller to **A-Z** (1) ⇨ *fig. 53* and press the control knob. The letter speller appears in the display ⇨ *fig. 54*.
- ▸ Use the speller to enter a series of letters, e.g. *AUDISERVICE* ⇨ *fig. 54*.
- ▸ Confirm your entry by rotating the speller to **OK** and then pressing it, or
- ▸ Press the control button **Dial**. The entered telephone number is dialed.

If a telephone number has been entered incorrectly, you can press on the RETURN button to completely delete the telephone number you entered in the speller.

Tips

- – DTMF tones are entered directly through the speller or loaded from the stored telephone numbers ⇨ *page 39*.
- – The active audio source is muted during a telephone call.
- – You can initiate a phone call directly from your cell phone. Read the Owner's Manual of your cell phone to find out how to do this.
- – If you make calls on your cell phone, it is possible that the telephone number will not appear on the MMI Display.
- – You can also make phone calls using the multifunction steering wheel*.

Dialing from a list

Applies to vehicles: with cell phone package



Fig. 55 Dialing a phone number from a list

Requirement: Telephone mode is active ⇨ *page 37*.

Searching and calling telephone numbers in a list

- ▸ Press the control button **Memory**.
- ▸ Rotate the control knob to **Dialed numbers**, **Call mailbox**, **Phone book**, **Missed calls**, or **Received calls**.
- ▸ Press the control knob. The telephone numbers of the selected list appear in the display.
- ▸ Rotate the control knob to the desired telephone number.
- ▸ Press the control knob. The selected telephone number is copied to the speller.
- ▸ To initiate the call, rotate the speller to **OK** and press the control knob, or
- ▸ Press the control button **Dial**.

Quick display of the Dialed numbers list and calling a number

- ▸ Press the TEL function button. The speller is displayed in the display. There is *no* telephone number in the entry field of the speller.
- ▸ Press the control button **Dial**. The **Dialed numbers** list appears in the display.
- ▸ Rotate the control knob to the desired telephone number.
- ▸ Press the control knob. The selected telephone number is copied to the speller.
- ▸ To initiate the call, rotate the speller to **OK** and press the control knob, or
- ▸ Press the control button **Dial**.

Tips

– The telephone functions depend on the cell phone service provider and the cell phone you are using. You can obtain more information from your cell phone service provider.

– Depending on the cell phone being used, it may happen that no phone book entries and no entries for the “Dialed numbers”, “Received calls” and “Missed calls” functions are shown in the MMI Display.

Answering/rejecting a call

Applies to vehicles: with cell phone package



Fig. 56 Answering an incoming call

Requirement: An incoming call.

Answering a call

- ▸ Rotate the control knob to **Answer** and press the control knob, or
- ▸ Press the control button **Answer**.

Rejecting a call

- ▸ Rotate the control knob to **Reject** and press the control knob, or
- ▸ Press the control button **Reject**.

Depending on whether the caller has been stored in the phone book and whether the number is available for viewing, the *Name*, the *Phone number* or **Unknown** appears in the display.

Tips

– The audio source is muted during an incoming/outgoing call.

– A call can also be answered/rejected using the multifunction steering wheel ⇨ *page 47*.

Ending a call

Applies to vehicles: with cell phone package

Requirement: There is an active call.

- ▸ To end a phone call or to cancel dialing, press the control button **End call**. ▶

Tips

A call can also be ended using the multi-function steering wheel ⇨ *page 47*.

Dialing stored telephone numbers

Applies to vehicles: with cell phone package

Simply dial a telephone number from call lists or the phone book.



Fig. 57 Searching stored telephone numbers

Requirement: The telephone is switched on ⇨ *page 37* and contains at least one stored telephone number.

- ▸ Press the control button **Memory**.
- ▸ Rotate the control knob to **Phone book** ⇨ *fig. 57*.
- ▸ Press the control knob. **Search for entry** appears in the display and a listing of stored entries appears at the same time.
- ▸ Rotate the control knob to **Search for entry** ⇨ *fig. 57* and press the control knob. The speller appears in the display where you can enter names, or
- ▸ Rotate the control knob to a name from the list and press the control knob.
- ▸ Confirm your entry by rotating the speller to **OK** and then pressing it, or
- ▸ Press the control button **Dial**.

Additional settings

Options during a call

Applies to vehicles: with cell phone package

Requirement: Ongoing telephone call ⇨ *page 39*.

- ▸ Select: Control button **Options** > **Switch off microphone**.

Switching the microphone off and on

When the microphone is switched **off** your telephone partner cannot hear anything from your phone. However, you can hear your telephone partner. **Muted** is shown in the display.

Replacing a call

When there is an incoming call during an ongoing telephone call, the **Replace** and **Reject** functions appear in the display.

Replace is used to replace the active telephone call by an incoming call. **Reject** will reject the incoming call.

The display may still remain visible for several seconds, depending on the cell phone used. If you use the **Replace** or **Reject** functions while its display is still visible, the current telephone call will be ended.

Tips

To be alerted to an incoming call during an active call, the function **Call waiting** must be activated in your cell phone. The call options depend on the cell phone and service provider.

Telephone settings

Applies to vehicles: with cell phone package

- ▸ Select: Function button TEL > function button SETUP > **Phone settings**.

Bluetooth PIN

The Bluetooth PIN is factory set to 1234. This function is used to change the Bluetooth PIN.

Factory settings

The cell phone package is reset to default settings. The stored phone books ⇨ *page 37*, bonded Bluetooth devices ⇨ *page 36* and mailbox numbers are deleted.

Call options

Applies to vehicles: with cell phone package

▸ Select: Function button TEL > function button SETUP > **Call options** > **Auto answer**.

on - An incoming call is answered automatically. As long as the call has not yet been answered automatically, this can be rejected using **Reject**.

off - An incoming call is *not* answered automatically.

Mailbox number

Applies to vehicles: with cell phone package

▸ Select: Function button TEL > function button SETUP > **Mailbox number**.

The mailbox number is entered using the speller and stored with **OK** in the speller.

Using ⬅ in the speller, the mailbox number is deleted and confirmed with **OK**.

After these are saved, the mailbox can be called up using the control button **Memory**.

Tips

You must set up and activate this service in the cell phone network in advance. You can obtain more information from your cell phone provider.

Calling mailbox

Applies to vehicles: with cell phone package

▸ Select: Function button TEL > control button **Memory** > **Call mailbox**.

The mailbox number must be highlighted ⇨ *page 42*. This service must be set up and activated in advance in the cell phone network. You can obtain more information from your cell phone service provider.

Tips

The mailbox number can also be called up using the speller ⇨ *page 17*.

Memory settings

Applies to vehicles: with cell phone package

▸ Select: Function button TEL > function button SETUP > **Memory settings**.

Resort call lists

The telephone numbers in the call lists are sorted according to the time they called. Switching on this function will sort them in the opposite order.

Memory used

– **SIM** - SIM card entries are loaded in the cell phone package and shown in the display.
– **Tel.** - Directory entries of the cell phone are loaded in the cell phone package and shown in the display.
– **All** - SIM card entries *and* directory entries of the cell phone are loaded in the cell phone package and shown in the display.

Tips

Depending on the cell phone, either the SIM card entries or the cell phone address book entries might not be available. Further information about the cell phone package is available online at www.audiusa.com or at an authorized Audi dealership.

Multifunction steering wheel

Introduction

Applies to vehicles: with a multifunction steering wheel

Using the multifunction steering wheel, you can operate selected radio, media and telephone functions quickly and easily.*

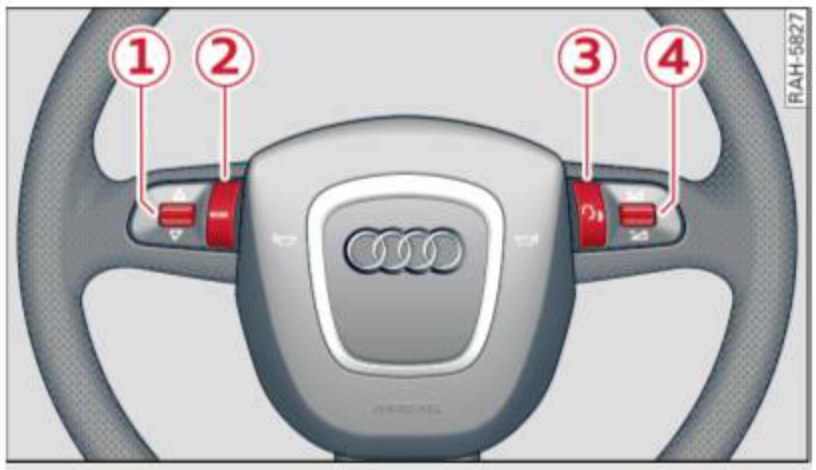


Fig. 58 Controls on the multifunction steering wheel

The multifunction steering wheel ⇨ *fig. 58* allows you to operate selected functions for the radio, media and telephone* without taking your hands off the steering wheel.

The functions are shown in the driver information system ⇨ *page 44, fig. 59*. Additionally, you can turn the telephone voice operation* on and off as well as change the volume using the multifunction steering wheel.

It is operated by pressing and rolling the buttons ① to ④ ⇨ *fig. 58*.

– Pressing the MODE ② button multiple times changes between the Telephone* and the active audio source. The function is also displayed in the driver information system ⇨ *page 44, fig. 60*. When a submenu is displayed in the driver information system, the submenu can be exited again by pressing the MODE button.
– Rolling the left thumbwheel ① selects a function that varies depending on whether radio, media and telephone* is selected.
– The telephone voice operation* is activated by pressing the talk button ③. Pressing and holding the talk button cancels voice operation.
– Rolling the right thumbwheel ④ up/down increases/decreases the volume.
– Pressing the right thumbwheel ④ will mute the radio system or cancel mute.

Tips

– The trip computer is also displayed in the driver information system. Comprehensive information on this topic can be found in the Owner's Manual of your vehicle.
– If systems are not available in the vehicle, the button on the steering wheel assigned to that system has no function.

Adjusting the volume

Applies to vehicles: with a multifunction steering wheel

The volume of the active audio source and the telephone voice operation is adjusted using the multifunction steering wheel.*

Requirement: The radio is switched on ⇨ *page 15*.

Increasing and decreasing the volume

▸ Roll the right thumbwheel ④ ⇨ *page 43, fig. 58* up/down.

Muting (Mute)

▸ Press the right thumbwheel ④ ⇨ *page 43, fig. 58* to mute the radio system or to cancel mute, or
▸ Roll the right thumbwheel ④ downward to mute; a crossed-out speaker symbol will appear in the status bar of the display. If the drive is active, it will be stopped.
▸ Roll the right thumbwheel up to cancel mute. The drive that was stopped will start playing again.

Listening to the radio

Selecting the radio

Applies to vehicles: with a multifunction steering wheel

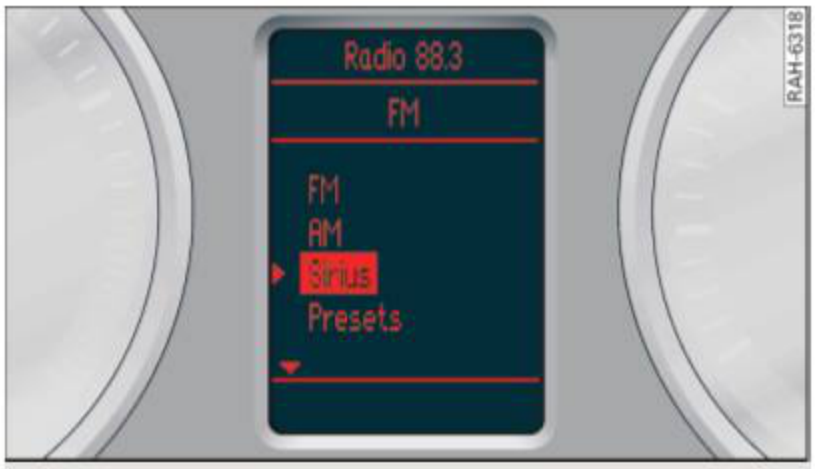


Fig. 59 Frequency band list

Requirement: Radio mode is active ⇨ *page 23*.

- Press the MODE ⇨ *page 43, fig. 58* button until the radio menu appears in the driver information system ⇨ *page 44, fig. 60*.

Selecting the frequency band

Applies to vehicles: with a multifunction steering wheel

The three frequency bands: FM, AM, and SAT are displayed in the upper part of the driver information system.*

Requirement: The radio menu is displayed ⇨ *page 44, fig. 60*.

- Roll the left thumbwheel (1) ⇨ *page 43, fig. 58* down to a frequency band.
- To select the frequency band, press the left thumbwheel.

Selecting a station from station list

Applies to vehicles: with a multifunction steering wheel

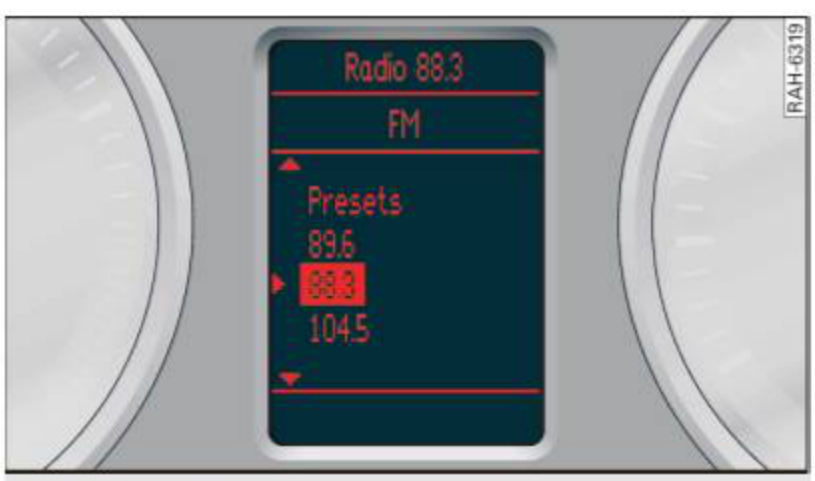


Fig. 60 Radio menu

Requirement: The radio menu is displayed ⇨ *fig. 60*.

- Roll the left thumbwheel (1) ⇨ *page 43, fig. 58* down/up to a radio station.
- To select the station, press the left thumbwheel.

Selecting a stored station

Applies to vehicles: with a multifunction steering wheel

Requirement: The radio menu is displayed ⇨ *page 44, fig. 60* and a station is stored in the preset list ⇨ *page 27*.

- Roll the left thumbwheel (1) ⇨ *page 43, fig. 58* down/up to **Presets**.
- Press the left thumbwheel. The radio preset list is displayed.
- Roll the left thumbwheel to a radio station and press the left thumbwheel. The radio station is selected.

Playing media

Selecting a Source

Applies to vehicles: with a multifunction steering wheel



Fig. 61 List with CD tracks

Requirement: Media mode is active ⇨ *page 30*.

- Press the MODE ⇨ *page 43, fig. 58* button until a list with tracks ⇨ *fig. 61* / ⇨ *page 45, fig. 62* appears in the driver information system.

Would you like to learn more about playing media in your vehicle? You will find a detailed description in ⇨ *page 30*. ▶

Tips

Characters and symbols that are not part of the ISO-8859-1 or ISO-8859-15 standard are not displayed in the driver information system.

Selecting a folder

Applies to vehicles: with a multifunction steering wheel



Fig. 62 List of tracks of a folder

Requirement: A folder is displayed in the driver information system ⇨ *fig. 62*.

- ▸ Roll the left thumbwheel ⇨ *page 43, fig. 58* to a folder and press the left thumbwheel.
- ▸ Roll the left thumbwheel to the desired track.
- ▸ To select the track, press the left thumbwheel.

Tips

A drive is selected using the radio system ⇨ *page 30*.

Selecting a track

Applies to vehicles: with a multifunction steering wheel

Requirement: A list with tracks ⇨ *page 44, fig. 61*/⇨ *page 45, fig. 62*.

- ▸ Roll the left thumbwheel ⇨ *page 43, fig. 58* to a track.
- ▸ To select the track, press the left thumbwheel.

Tips

A drive is selected using the radio system ⇨ *page 30*.

Stopping/resuming a drive

Applies to vehicles: with a multifunction steering wheel

Requirement: A track is playing ⇨ *page 30*.

- ▸ To pause the track, rotate the right thumbwheel all the way to the bottom.
- ▸ To continue track playback, rotate the right thumbwheel upwards.

Calling

Introduction

Applies to vehicles: with multifunction steering wheel and cell phone package

Calling in the vehicle has become an everyday activity. You can operate all of the relevant telephone functions safely and easily using the multifunction steering wheel.

The following messages could appear in the driver information system:

Please wait...	The connection from cell phone to vehicle is being established.
Please insert SIM card.	The SIM card is not in the cell phone.
Please enter the PIN.	The PIN has not been entered yet ⇨ *page 38*.
Tel. call	An external call is being received. If the name/telephone number of the caller is sent, it will also be displayed.
Busy	The selected number is busy.
Phone is switched off.	The telephone is switched off.
Connecting...	The connection is being established.
Disconnecting...	The connection is ended.

▶

No entries available.	The phone book does not contain any entries or the phone book entries have not yet been read into the cell phone package* ⇨ *page 37*.
Phone not connected or plugged in.	The telephone is not connected with the vehicle. Please establish a Bluetooth connection.

Would you like to learn more about operating the telephone in your vehicle? You will find a detailed description in ⇨ *page 35*.

Tips

- The basic telephone functions are available on the multifunction steering wheel if your telephone equipment was installed *at the factory*.
- The telephone functions displayed in the instrument cluster depend on whether your cell phone is compatible with the cell phone package*, and whether your cell phone provider supports these functions.

Selecting telephone

Applies to vehicles: with multifunction steering wheel and cell phone package

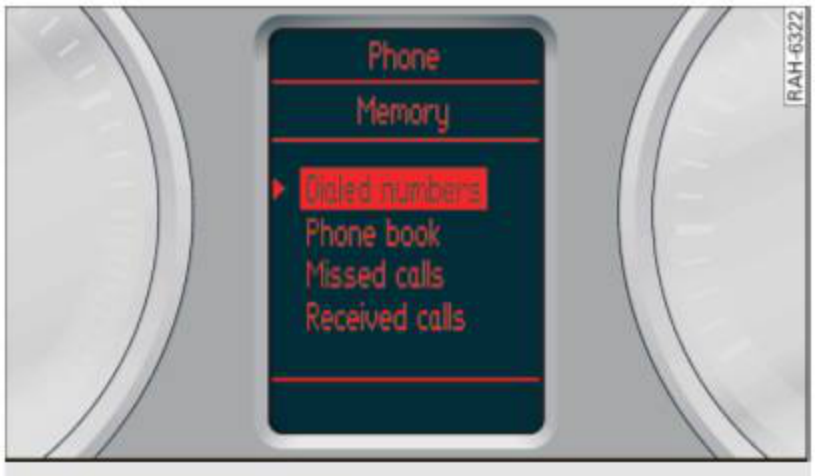


Fig. 63 Telephone menu

Requirement: The cell phone package ⇨ *page 36* has been activated.

- ▸ Press the MODE ⇨ *page 43, fig. 58* button until the telephone menu appears in the driver information system ⇨ *fig. 63*.

Telephone menu:

- Dialed numbers: contains the telephone numbers dialed most recently.
- Phone book: contains the entries of the SIM card and/or the directory entries of the cell phone ⇨ *page 42*.
- Missed calls: contains the most recent calls not received.
- Received calls: contains the most recently received calls.

You can dial the desired telephone number directly from each of these lists.

Displaying phone book entries

The phone book entries are shown in alphabetical order and are labeled by category, e.g. SIM cards, home, work, cell phone and phone symbols ⇨ *page 46, fig. 64*.

Dialing a telephone number and ending a call

Applies to vehicles: with multifunction steering wheel and cell phone package

Telephone numbers stored in the phone book and in the call lists can be dialed.



Fig. 64 Dialing a telephone number from the phone book

Requirement: The telephone menu is displayed ⇨ *page 46, fig. 63*.

Calling

- ▸ Roll the left thumbwheel ⇨ *page 43, fig. 58* to **Dialed numbers**, **Phone book**, **Missed calls**, or **Received calls**.
- ▸ Press the left thumbwheel. A list with entries appears in the driver information system ⇨ *fig. 64*.
- ▸ Roll the left thumbwheel to an entry. ▶

▸ Press the left thumbwheel. The telephone number is dialed.

Ending a call

▸ Roll the left thumbwheel to **End call** and press the left thumbwheel.

The radio system ⇨ *page 39* is used to enter a telephone number that has not yet been stored.

Tips

The multifunction steering wheel can only be used to dial stored telephone numbers. Dial a new telephone number on the radio system ⇨ *page 39*.

Answering/rejecting a call

Applies to vehicles: with multifunction steering wheel and cell phone package



Fig. 65 Incoming call

Requirement: A call is coming in.

Answering a call

▸ Press the left thumbwheel ⇨ *page 43, fig. 58*.

Rejecting a call

▸ Roll the left thumbwheel to **Reject** and press the left thumbwheel.

Depending on whether the caller has been stored in the phone book, and whether his number is available for viewing, the *Name*, the *Phone number* or **Unknown** appears in the driver information system.

Tips

With an incoming/outgoing call, audio source muting is activated automatically.

Options during a call

Applies to vehicles: with multifunction steering wheel and cell phone package

When there is an incoming call during an ongoing telephone call, the functions **Replace** and **Reject** appear in the driver information system.

Replace is used to replace the active telephone call by an incoming call. **Reject** will reject the incoming call. A call on hold remains in queue.

Tips

In order to be alerted to an incoming call during an ongoing telephone call, you have to activate the “Call waiting” function in your cell phone. Read the Owner's Manual of your cell phone for information.

Name tag

Switching the telephone voice operation on and off

Applies to vehicles: with multifunction steering wheel and telephone voice operation

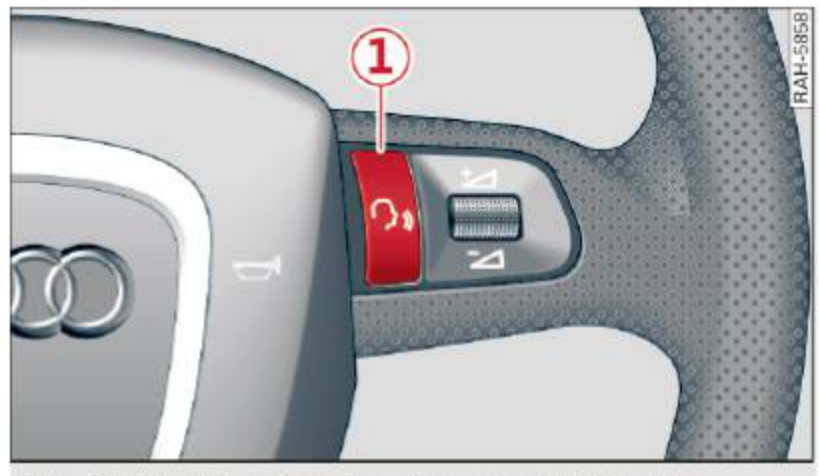


Fig. 66 Multifunction steering wheel: Talk button

Activating

▸ Press button (1) ⇨ *fig. 66*.

Deactivating

▸ Press button (1) again and hold it until you hear the announcement **Cancel**.

▶

A chime will confirm when the system is ready for dialog. Then the desired functions can be selected using voice commands.

Tips

You can find a detailed description about voice operation in chapter ⇨ *page 49*.
This button does not operate on vehicles without telephone voice operation.

Telephone voice operation

Introduction

Applies to vehicles: with Telephone voice operation

Telephone functions can be operated by voice operation.

Functions

In conjunction with hands-free operation it is not necessary to pick up the cell phone. The telephone voice operation recognizes commands and number sequences regardless of the person speaking.

The voice operation offers you the following functions:

– Creating name tags ⇨ *page 51*
– Entering and dialing a phone number ⇨ *page 51*

The dialog is ended immediately when an incoming call is received.

Unrecognized voice commands

The systems reacts to your input with audible feedback. If a voice command is not recognized, the system asks **Sorry?** and asks you to repeat the command. After the third failed attempt, the response **Cancel** is given and the dialog is terminated.

For the system to understand you

– Speak clearly and distinctly at a normal volume. Speak louder when driving faster.
– Stress your statements evenly and do not leave long pauses.
– Do not speak when the voice operation is responding.
– To reduce ambient noise, close the doors, the windows and the sunroof*. Make sure that passengers are not speaking when you are giving a voice command.
– Do not direct the air vents toward the hands-free microphone that is close to the front interior lights.
– Only use the system from the driver's position since the hands-free microphone is oriented toward that position.

The Function is not possible

If the system responds with **Function not possible**, check the operating status of the telephone voice operation

– Is the key in the ignition?
– Is the cell phone connected to the cell phone package through Bluetooth?
– Is the phone switched on and the PIN entered?
– Are the phone book entries from the cell phone being loaded into the cell phone package ⇨ *page 37*?

WARNING

– Please devote your full attention to driving! As the driver, you hold complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over you vehicle in all traffic situations.
– Because the voice can change in stressful situations and it may not be possible to recognize numbers being said, the voice operation system should not be used in emergencies. The desired telephone connection* may not occur quickly enough or at all under certain circumstances. Dial the emergency call number manually in emergencies.

Tips

– The Telephone voice operation is not available on convertible or roadster models.
– You can adjust the volume of the telephone voice operation via the right thumbwheel on the multifunction steering wheel ⇨ *page 43*.

General operation

Switching on/off

Applies to vehicles: with Telephone voice operation

Voice operation is activated using the talk button on the multifunction steering wheel.*

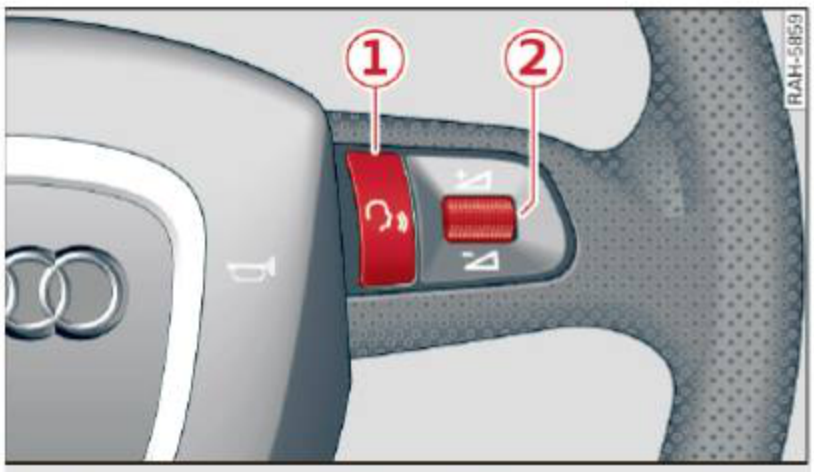


Fig. 67 Multifunction steering wheel: Talk button and right thumbwheel

Requirement: The ignition is on and you are not making a phone call.

Activating

- ▸ Press the talk button on the multifunction steering wheel (1) ⇨ *fig. 67*.
- ▸ Say the desired command.

Deactivating

- ▸ Say the command **CANCEL**, or
- ▸ Press the talk button on the multifunction steering wheel (1) ⇨ *fig. 67* and hold it until you hear the announcement **Cancel**.

Adjusting the volume

Applies to vehicles: with telephone voice operation

Requirement: The telephone voice operation is switched on ⇨ *page 50* and an announcement is made by the system.

- ▸ Roll the right thumbwheel of the multifunction steering wheel (2) ⇨ *page 50, fig. 67* upward +/downward −, or
- ▸ Rotate the On/Off knob on the radio system ⇨ *page 19* to increase/decrease the volume.

Help function

Applies to vehicles: with telephone voice operation

The telephone voice operation offers you two help functions: help commands and system-guided help.



Fig. 68 Possible commands

Help commands

When the telephone voice operation is on ⇨ *page 50*, you can say the command **HELP**. Possible commands are shown in the display ⇨ *fig. 68* and are read by the system.

System-guided help

When the telephone voice operation is on ⇨ *page 50* and you do not say a command, the system asks **Sorry?**. If a command is not given, the system offers possible commands.

Example of system-guided help (Dialing a number from the telephone voice operation phone book)

Operation/ Commands	Announcement telephone voice operation
Press talk button briefly	Chime: **Beep**
DIAL NUMBER	**The number, please?**
e.g. **ZERO, ONE, TWO, THREE**	**Zero, one, two, three**
No command given	**Sorry?**
No command given	**Important commands are:**
	Dial
	Repeat
	Back

Entering a PIN

Applies to vehicles: with telephone voice operation

Requirement: The telephone voice operation is on ⇨ *page 50*.

- ▸ Say the command **ENTER PIN** or **ENTER PIN CODE**.
- ▸ Say the individual numbers of your PIN code.
- ▸ Say the command **STORE**.

When a PIN code longer than 8 numbers is entered, the system announces **The PIN is too long**. The system announces the entry of an incorrect PIN code with **The PIN code is incorrect**. If the wrong PIN is entered three times in a row, the SIM card is locked. The SIM card can be unlocked by using your personal unlock code, PUK. The unlock code can only be entered from the cell phone key pad, not through voice operation.

Dialing a telephone number

Applies to vehicles: with telephone voice operation

Requirement: the telephone voice operation is on ⇨ *page 50*.

Dial number

- ▸ Say the command **DIAL NUMBER**. The telephone voice operation prompts you to enter the phone number.
- ▸ Say the individual numbers of the desired phone number one after the other (e.g. two, three) or in groups of numbers. After each sequence of numbers, the numbers are repeated.
- ▸ After entering the last number, say the command **DIAL**. The phone number is dialed.

Select name

- ▸ Say the command **SELECT NAME**.
- ▸ After being prompted say a previously stored name tag ⇨ *page 52*.
- ▸ Say the command **DIAL**. The phone number is dialed.

Play phone book

- ▸ Say the command **PLAY PHONE BOOK**. The name tags are played.
- ▸ Press the talk button while a name tag is being said to dial the phone number for the spoken name tag.

Tips

– Voice tags are user-dependent and are best recognized with the user who assigned the voice tag.
– The commands **REPEAT**, **BACK** and **DELETE** can be used during the dialog.

Redial

Applies to vehicles: with telephone voice operation

Requirement: The telephone voice operation is on ⇨ *page 50*.

- ▸ Say the command **REDIAL**. The number last dialed will be dialed again.

Tips

– On some cell phones, the number dialed last in the call list is put in last place. The redial function of the telephone voice operation cannot be used in this case.
– The commands **REPEAT**, **BACK** and **DELETE** can be used during the dialog.

Name tags

Introduction

Applies to vehicles: with telephone voice operation

Name tags are stored in the telephone voice operation phone book.

General information

The telephone voice operation phone book contains 50 memory locations. You can use it independently of the cell phone. The entries are stored in the telephone voice operation phone book.

In the telephone voice operation phone book, you can store spoken names for entries in the cell phone package phone book. You can also ▶

store spoken names with their corresponding spoken phone numbers, regardless of the phone book entries in the cell phone package ⇨ *page 52*.

If you have stored name tags in the telephone voice operation phone book, they can be dialed by voice operation.

Entry

You should choose the spoken names so that they can be clearly recognized by the telephone voice operation.

When entering phone numbers, the numbers **ZERO** to **NINE** are recognized. Enter the telephone numbers as a continuous string of numbers (complete telephone number), as a sequence of numbers (separated by short pauses) or by numbers spoken individually. After each sequence of numbers (separated by a short pause in speech), the numbers recognized are repeated by the system. The system does not recognize combinations of numbers, for example, twenty three, only numbers spoken individually (**TWO**, **THREE**). When **TWO** is spoken, it is easier for the system to recognize the number.

If more than 20 numbers are entered, the system responds with **The number is too long**. A **Plus (+)** can also be placed in front of the 20 digits.

Storing a name tag for phone book entry

Applies to vehicles: with telephone voice operation

Store a name tag for a phone book entry displayed in the driver information system.



Fig. 69 Phone book entry with name tag

Requirement: Entries are stored in the phone book.

- ▸ Press the MODE button on the multifunction steering wheel ⇨ *page 43* until the Telephone menu ⇨ *page 46, fig. 63* is displayed in the driver information system.
- ▸ Roll the left thumbwheel on the multifunction steering wheel to **Phone book** ⇨ *page 46, fig. 63* and press the left thumbwheel. The phone book entries are displayed.
- ▸ Roll the left thumbwheel to the desired phone book entry.
- ▸ Press the talk button on the multifunction steering wheel (1) ⇨ *page 50, fig. 67*. The chime **Beep** sounds.
- ▸ Say the command **STORE**.
- ▸ After being prompted, say the name under which this phone book entry should be stored.
- ▸ Repeat the name after being prompted. The name tag for the selected phone book entry is stored in the telephone voice operation phone book.

If a name tag was stored for a phone book entry, this phone book entry is displayed in the driver information system with a (1) ⇨ *fig. 69* symbol.

Storing a name tag with telephone number

Applies to vehicles: with telephone voice operation

Name tags consisting of names and associated telephone numbers can be stored.

Requirement: The telephone voice operation is on ⇨ *page 50*.

- ▸ Say the command **STORE NAME**.
- ▸ After being prompted, say the name under which this phone book entry should be stored.
- ▸ Repeat the name after being prompted.
- ▸ Say the individual numbers of the desired phone number one after the other (e.g. two, three) or in groups of numbers. After each sequence of numbers, the recognized numbers are repeated.

▶

- ▸ After entering the last number, say the command **STORE NAME**. The name tag is stored in the telephone voice operation phone book.

The voice tags that are stored in the telephone voice operation phone book using the **STORE NAME** command, are not shown in the driver information system.

Tips

For similar sounding names, additional designations (e.g. first names) should also be stored.

Deleting a name tag with telephone number

Applies to vehicles: with telephone voice operation

Requirement: The telephone voice operation is on ⇨ *page 50*.

- ▸ Say the command **DELETE NAME**.
- ▸ After being prompted say a previously stored name tag ⇨ *page 52*.
- ▸ After being prompted, say **YES** to delete a name tag previously stored in the voice operation phone book. The name tag deletion is confirmed.

If the user answers **NO**, the system responds with **Cancel** and the dialog is ended.

Deleting a phone book

Applies to vehicles: with telephone voice operation

Requirement: The telephone voice operation is on ⇨ *page 50*.

Deleting the entire phone book

- ▸ Say the command **DELETE PHONE BOOK**.
- ▸ After being prompted, say **YES**.
- ▸ Say **YES** after being prompted to delete the entire phone book.

Deleting a name tag

- ▸ Say the command **DELETE PHONE BOOK**.
- ▸ After being prompted, say **NO**. The name tags are played.
- ▸ Press the talk button while the name tag to be deleted is being read out.
- ▸ After being prompted, say **YES**. The read name tag is deleted.

As long as the telephone voice operation phone book is being played, additional entries can be deleted by pressing the talk button.

A

Activate your satellite radio service 24
Adjusting the volume
  Multifunction steering wheel 43
  Radio system 19
  Telephone voice operation 50
Adjusting volume 19
Answering/rejecting a call
  Multifunction steering wheel 47
  Radio system 40
Audi music interface
  Connecting the adapter cable 11
  Starting 10
Audi music interface adapter cable 11
Aux-in connection
  Connecting a portable audio device 14
  Operating at the radio system 13

B

Balance 20
Bass 20
Bluetooth 36
Bluetooth PIN 41
Brightness of the display 22
Buttons 15

C

Call answer 42
Calling
  Multifunction steering wheel 45
  Radio system 35
  Telephone voice operation 49
Calling mailbox 42
Call lists
  Multifunction steering wheel 46
  Radio system 39
Call options 42
Care instructions
  CD 7
  Memory card 7
Category filter (satellite radio) 29
CD
  Repeat CD 32
CD changer 8
  Eject 9
  Loading a CD 8
  Selecting a CD 9
CD player 8
  Ejecting a CD 8
  Loading a CD 8
Cell phone
  Programming 36
Cell phone package
  Calling (multifunction steering wheel) . . 45
  Calling (radio system) 35
  Entering a PIN 38
Channel number (satellite radio) 26
Cleaning (CD) 7
Connecting an iPod 12
Connecting USB storage device 12
Control button 15
Control knob 15
Controls 15

D

Delete radio presets (satellite radio) 29
Dialed numbers
  Multifunction steering wheel 46
  Radio system 39
Dialing a telephone number
  Radio system 39
  Telephone voice operation 51
Dialing stored telephone numbers 41
Dialing telephone numbers
  Radio system 41
Dial telephone number
  Multifunction steering wheel 46
Display
  Brightness 22
  Speller 17
  Standard menus 16
  Switching on/off 18
Drives
  Audi music interface 10
  Aux-in connection 13
  CD changer 8
  CD player 8
  Memory card reader 9
DSP PREMIUM 20

DTMF tones 39

E

Ending a call
Multifunction steering wheel 46
Radio system 40
Entering a PIN 38
Entertainment suppression 19
External audio devices 13

F

Factory settings 22, 41
Fader 20
Folder structure
Multifunction steering wheel 45
Radio system 31
Forward within a track 31
Frequency 26
Function button 15

G

GALA 20

H

Help function of the telephone voice operation 50

I

INFO 6, 8
INFO (MP3 CD) 33
Input level 34
Instructions for handling CDs 7
Instructions for handling memory cards . . . 7

L

Laser equipment 7
Last calls
Multifunction steering wheel 46
Radio system 39
Listening to the radio
Multifunction steering wheel 44
Radio system 23

M

Mailbox number 42
Memory card reader 9
Inserting a memory card 10
Removing a memory card 10
Memory settings 42
Memory used (radio system) 42
Memory (radio)
Delete stations 28
Moving station 27
Selecting station 27
Select station 44
Storing stations 27
Menu language 22
Midrange 20
Missed calls
Multifunction steering wheel 46
Radio system 39
Moving stored station 27
MP3 . . . . . 6, 8, 9
MP3 files 8
MP3 player 13
Muting
Multifunction steering wheel 43
Radio system 19

N

Name tags 51
Deleting 53
Dialing a number 51
Listening to the phone book 51
Storing 52
Next radio station 26
Notes on care
Display 5
Drives 5
Radio system 5
Notes on traffic safety 4

O

Options (cell phone package) 41, 47

P

Phone book
- Multifunction steering wheel 46
- Radio system 39
- Telephone voice operation 51

Phone book entries 37

PIN
- For Bluetooth 41
- Telephone voice operation 51

Playing
- CD 30
- iPod 30
- Memory card 30
- USB storage device 30

Playing media
- Multifunction steering wheel 44
- Radio system 30

Programming using Bluetooth 36

R

Radio
- Category filter (satellite radio) 29
- Channel number (satellite radio) 26
- Delete radio presets (satellite radio) . . . 29
- Satellite station list 25
- Sorting stations (satellite radio) 28
- Station info (satellite radio) 28
- System information (Satellite Radio) . . . 23

Radio station list (radio) 23

Radio stations
- Frequency 26
- Moving 27
- Next station 26
- Scanning 26
- Seek 26
- Selecting from memory (multifunction steering wheel) 44
- Selecting from memory (radio system) . 27
- Selecting from the station list 25
- Storing 27

Radio system
- Overview 4
- Restarting 21
- Switching on and off 15

Radio text 28

Read error display (CD) 7

Received calls
- Multifunction steering wheel 46
- Radio system 39

Receiver serial number 24

Redial
- Radio system 42
- Telephone voice operation 51

Repeat 32

Replacing a call
- Multifunction steering wheel 47
- Radio system 41

Reset 21

Resort call lists 42

Restart (Radio system) 21

Reverse within a track 31

S

Safety notes 4

Safety when calling 35

Satellite Digital Audio Radio Service
- Activate your satellite radio service 24
- Category filter 29
- Delete radio presets 29
- Sorting stations (satellite radio) 28
- Station info 28
- Station list 25

SCAN
- Radio stations 26
- Track 33

Seek (radio) 26

Selecting source 30

Selecting the frequency band
- AM 23
- FM 23
- Multifunction steering wheel 44
- Radio system 24
- SAT 23

Setting date 21

Setting language 22

Setting the volume
- Multifunction steering wheel 43
- Radio system 19

Setting time of day 21

Setup radio
- Activate your satellite radio service 24
- Category filter (satellite radio) 29

Delete radio presets (satellite radio) . . . 29
Sorting stations (satellite radio) 28
Station info (satellite radio) 28
Shuffle 32
Software version 22
Sorting stations (satellite radio) 28
Sound
Basic settings 20
DSP PREMIUM 20
Volume settings 19
Speller 17
Starting radio operation 23
Starting telephone mode (radio system) . 37
Station info (satellite radio) 28
Station list (radio)
Selecting station 25
Select station 44
Updating 25
Stereo jack 13
Stopping/resuming a drive
Multifunction steering wheel 45
Radio system 33
STORE (Radio stations) 27
Surround Level 20
Switching on/off
Radio system 15
Telephone voice operation 50
Switching the microphone off/on (cell phone package) 41
System information (Satellite Radio) 23

T

Talk button on the multifunction steering wheel 47, 50
Telephone settings 41
Telephone voice operation 49
Help 50
Switching on/off 47, 50
TEXT (Radio) 28
Time 21
Track
Next/previous 31
Scan 33
Select 31, 45
Track information 34
Track information (MP3 CD) 33
Traffic radio 19
Traffic safety 4
Treble 20

U

Units of measurement 22

V

Version information 22
Voice control 49

W

WMA files 8, 9

© 2010 AUDI AG

It has always been Audi's policy to continuously improve its products. Audi, therefore, reserves the right to make changes in design and specifications, and to make additions or improvements in its products, without incurring any obligation to install them on products previously manufactured.

Text, illustrations and specifications in this book are based on the most up-to-date information available at the time of printing.

All rights reserved. May not be reproduced or translated in whole or in part without the written consent of AUDI AG. Specifications are subject to change without notice.

"Audi" and the four rings emblem are registered trademarks of AUDI AG.

Editorial deadline: 09/17/2010

Tips

This owner's manual is only valid in conjunction with the owner's manual for your vehicle.

For the sake of the environment

Printed on environmentally friendly paper (bleached without chlorine, recyclable).

Sound System
Operating Instructions
Englisch Nordamerika 11.2010
111.566.8RA.21

www.audi.com