Exterior Trim
Floor Coverings and Headlinings
Instrument Panel and Console Trim
Interior Trim and Paneling

cardiagn.com

© 2011 General Motors. All rights reserved.

Specifications
Emblem/Nameplate Replacement
Body Panel Paint Protector Replacement (VGC)
Body Side Upper Front Applique Replacement
Liftgate Side Applique Replacement (Hatchback)
Rear Compartment Lid Applique Replacement
Front License Plate Bracket Replacement
Front Bumper Fascia Front Tow Eye Access Hole Cover Replacement
Rear Bumper Fascia Rear Tow Eye Access Hole Cover Replacement
Radiator Grille Emblem/Nameplate Replacement
Liftgate Emblem/Nameplate Replacement (Hatchback)
Rear Compartment Lid Nameplate Replacement (Sedan)
Radiator Upper Grille Replacement
Radiator Lower Grille Replacement
Radiator Grille Opening Cover Replacement (Upper Grille Cover)
Radiator Grille Opening Cover Replacement (Lower Grille Cover)
Roof Panel Joint Finish Molding Replacement
Rear End Spoiler Replacement (Hatchback TTV)

cardiagn.com

© 2011 General Motors. All rights reserved.

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Liftgate Applique Nut	5.0 N·m	44 lb in
Radiator Grille Bumper Bolt	1.5 N·m	13 lb in
Rear Compartment Lid Applique Nut	5.0 N·m	44 lb in
Rear End Spoiler Nut	5.0 N·m	44 lb in
Rear End Spoiler Bolt, for Cross Bar Indicator	1.5 N·m	13 lb in
Rear End Spoiler Screw	1.5 N·m	13 lb in

cardiagn.com

© 2011 General Motors. All rights reserved.

Emblem/Nameplate Replacement

Caution: Refer to Exterior Trim Emblem Removal Caution .

1. The part and vehicle surface should be 21°C (70°F) prior to installation. The vehicle should remain inside in a temperature range of 21°C (70°F) for 1 hour after assembly to allow the adhesive to develop sufficient bond strength.
2. Using masking tape, mark two sides of the placement where the old emblem/nameplate was placed.
3. Use a heat gun or equivalent, to heat the adhesive backed emblem/nameplates.
4. A flat-bladed plastic tool can assist in the removal process.
5. Wipe the vehicle surface area with a 50/50 solution by volume of isopropyl alcohol and clean drinkable water.
6. Dry the area with a clean lint-free cotton cloth.
7. Close any doors, liftgates, endgates and rear compartment lids where emblem/nameplates are to be placed.
8. When removing protective liners from adhesive backed emblem/nameplates, be careful not to touch the adhesive tape or allow the tape to come in contact with dirt or any foreign matter prior to the placement and adhesion.
9. Remove the protective liner from the emblem/nameplate.
10. Position, align and press the emblem/nameplate to the previously marked location.
11. Using a clean towel and the palm of the hand, press firmly for approximately 30 seconds, the emblem/nameplate to the vehicle body panel surface.
12. Ensure the emblem/nameplate is attached firmly to the body panel surface.
13. Remove the masking tape and clean all tape residue from the vehicle body panel surface around the emblem/nameplate attachment location.

cardiagn.com

© 2011 General Motors. All rights reserved.


Body Panel Paint Protector Replacement (VGC)

1. The paint protective film and vehicle surface temperature should be 13–32°C (55–90°F) for best results.
2. Automatic car washes should be avoided for at least 24 hours after the paint protective film application.
3. Wipe the vehicle surface with isopropyl alcohol or flash naptha at the application area.
4. Dry the surface with a clean lint-free cloth.
5. Create a mixture of 25 percent isopropyl alcohol and 75 percent water and two drops of baby shampoo per 16 oz of fluid mixture.
6. Remove the backing liner from the protective film patch.
7. Use the solution to liberally spray the adhesive side of the protective patch, the mounting location along with your hands.
8. Position the paint protective film patch to the desired location on the vehicle.
9. Spray the surface of the film with the alcohol, water and soap solution.
10. Using a dampened squeegee, start at the center of the protective patch, working outward in order to remove the air and solution from under the protective patch.
11. Release any air bubbles with a pin.
12. Dry the surface with a clean, lint-free cotton cloth.

cardiagn.com

© 2011 General Motors. All rights reserved.

Body Side Upper Front Applique Replacement

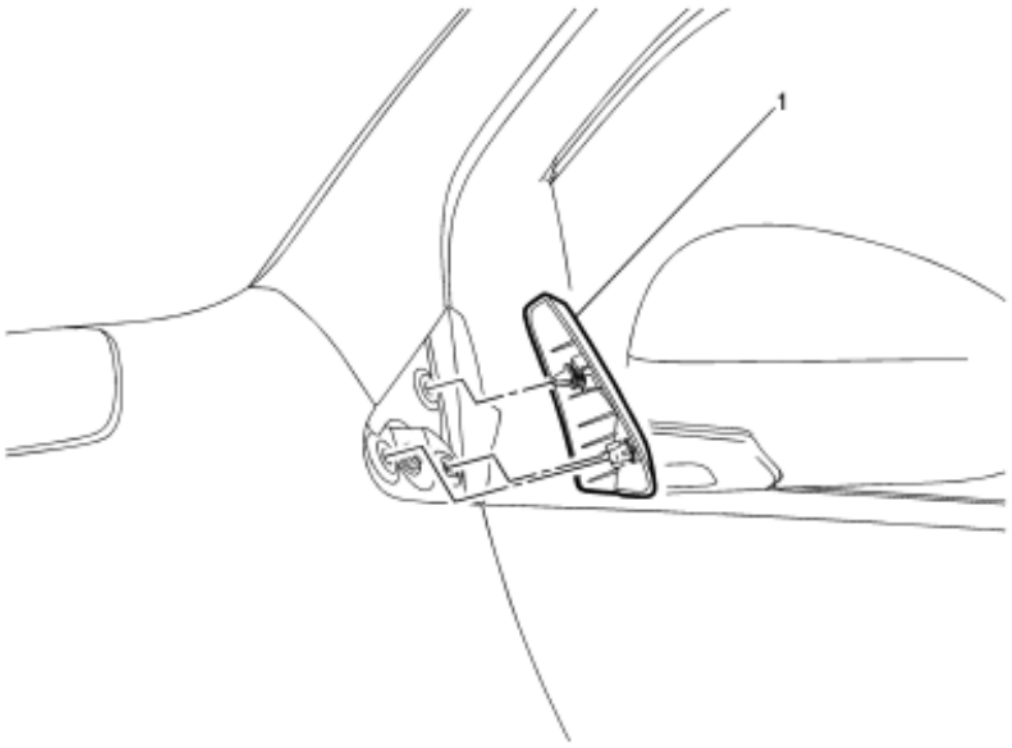


Callout	Component Name
Caution: Refer to Exterior Trim Emblem Removal Caution . **Preliminary Procedure** Open either the left front or right front door in order to access the backside of the body side upper front applique.	
1	Body Side Upper Front Applique

cardiagn.com

© 2011 General Motors. All rights reserved.

Liftgate Side Applique Replacement (Hatchback)

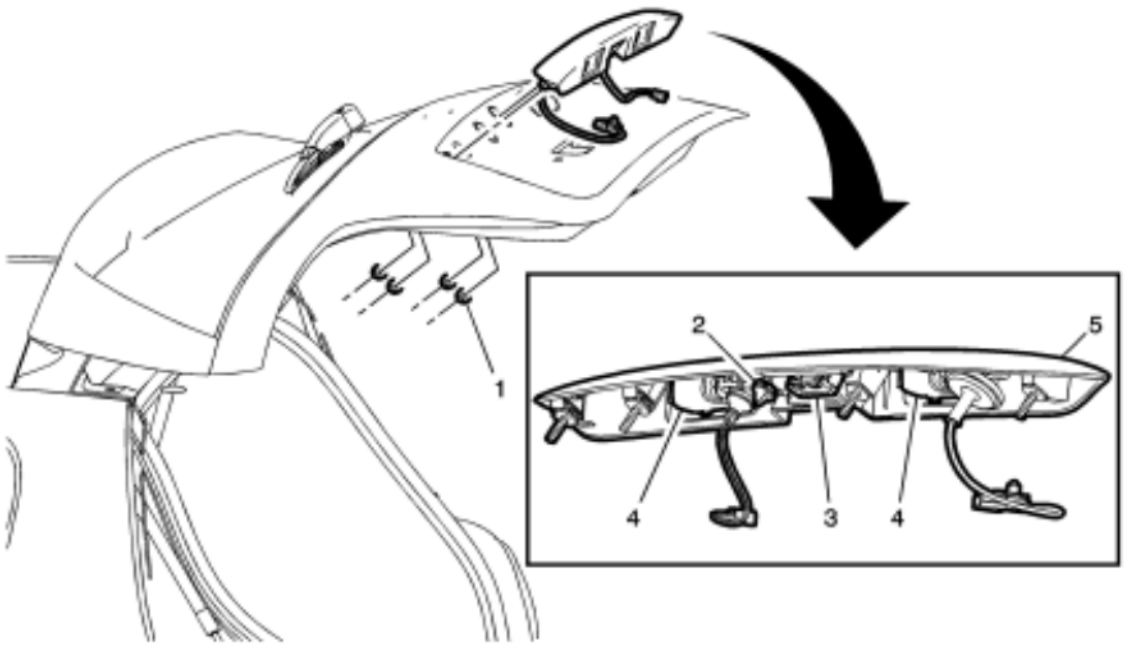


Callout	Component Name
Preliminary Procedure 1. Open and support the rear liftgate assembly. 2. Remove the liftgate trim finish panel. Refer to Liftgate Trim Finish Panel Replacement . 3. Disconnect the electrical connectors. 4. Remove the four nuts securing the liftgate side applique to the rear liftgate outer panel. 5. Release the liftgate side applique center retainer from the liftgate panel.	
1	Liftgate Side Applique Nut (Qty: 4) **Caution:** Refer to Fastener Caution . **Tighten** 5 N·m (44 lb in)
2	Liftgate Side Applique Retainer
3	Liftgate Release Switch **Procedure** Remove the liftgate release switch. Refer to Liftgate Release Switch Replacement
4	Rear License Plate Lamp (Qty: 2) **Procedure** Remove the rear license plate lamps. Refer to Rear License Plate Lamp Replacement .
5	Liftgate Side Applique

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Compartment Lid Applique Replacement

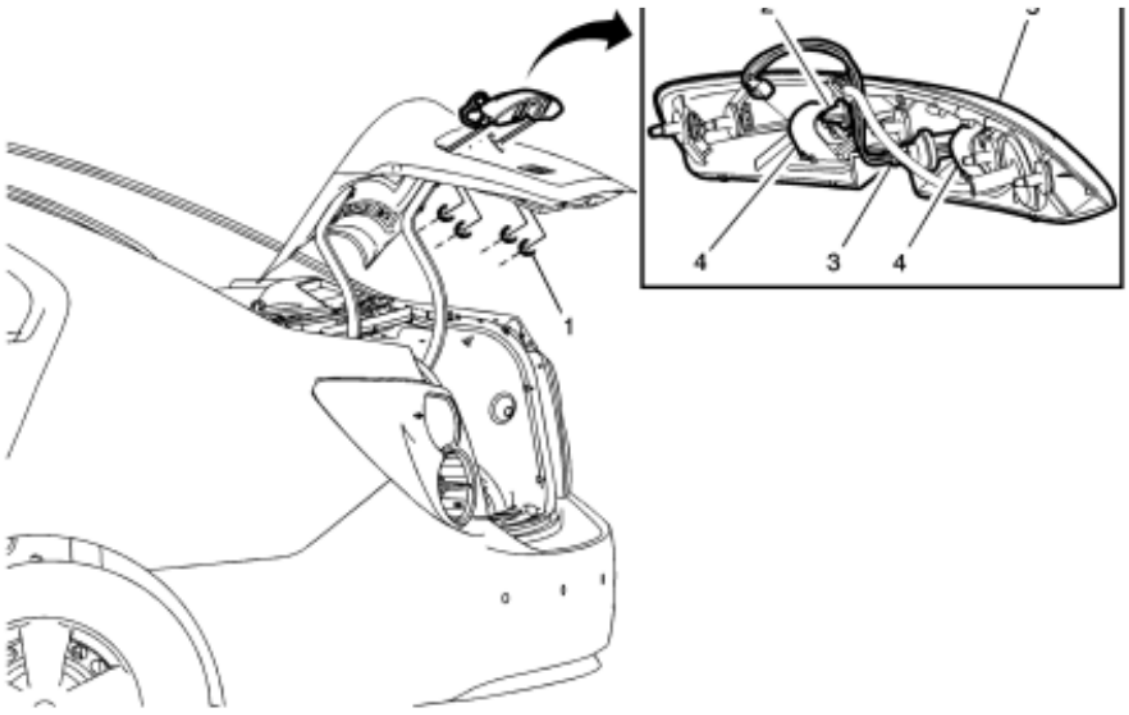


Callout	Component Name
Preliminary Procedure 1. Open and support the rear compartment lid. 2. Remove the rear compartment lid inner panel trim. Refer to Rear Compartment Lid Inner Panel Trim Replacement . 3. Disconnect the electrical connectors. 4. Remove the four nuts securing the rear compartment lid applique to the rear compartment lid. 5. Release the center retainer from the rear compartment lid.	
1	Rear Compartment Lid Applique Nut (Qty: 4) **Caution:** Refer to Fastener Caution . **Tighten** 5 N·m (44 lb in)
2	Rear Compartment Lid Retainer
3	Liftgate Release Switch **Procedure** Remove the liftgate release switch. Refer to Liftgate Release Switch Replacement
4	Rear License Plate Lamp (Qty: 2) **Procedure** Remove the rear license plate lamps. Refer to Rear License Plate Lamp Replacement .
5	Rear Compartment Lid Applique

cardiagn.com

© 2011 General Motors. All rights reserved.

Front License Plate Bracket Replacement

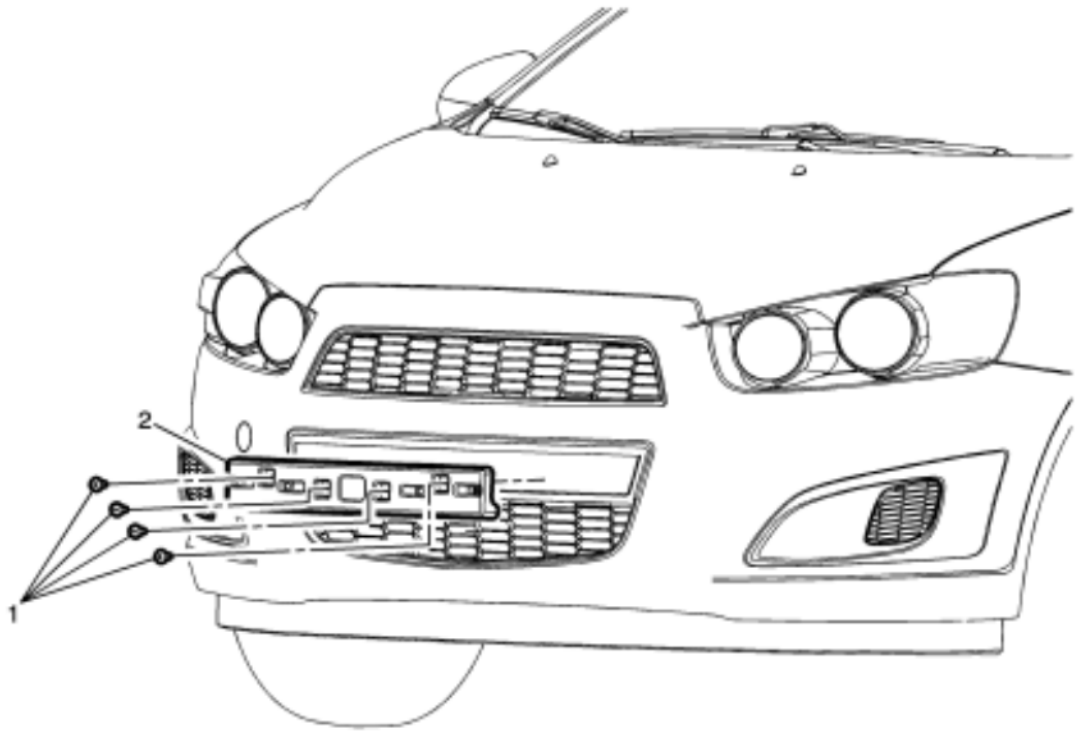


Callout	Component Name
Preliminary Procedure Remove the front license plate if equipped.	
1	Front License Plate Bracket Screw (Qty: 4) **Caution:** Refer to Fastener Caution . **Tighten** 1.5 N·m (13 lb in)
2	Front License Plate Bracket

cardiagn.com

© 2011 General Motors. All rights reserved.

Front Bumper Fascia Front Tow Eye Access Hole Cover Replacement

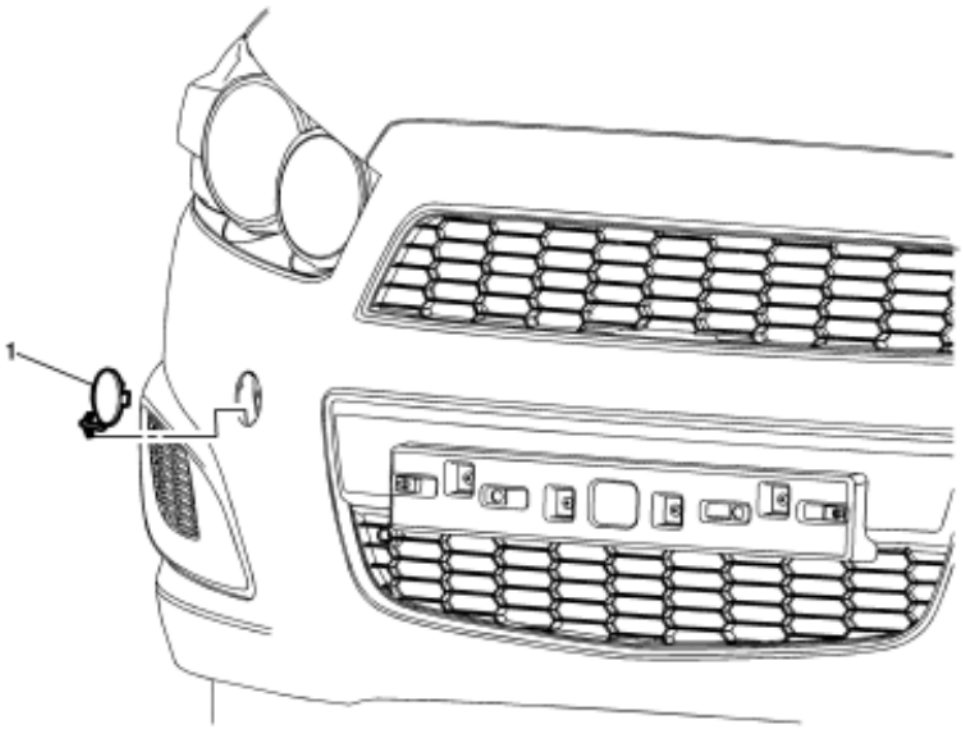


Callout	Component Name
1	Front Bumper Fascia Front Tow Eye Access Hole Cover **Procedure** 1. Using a small flat-bladed tool, release the cover from the front bumper fascia. 2. Using needle nose pliers, release the v-notch hook from the square in the front fascia and remove.

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Bumper Fascia Rear Tow Eye Access Hole Cover Replacement

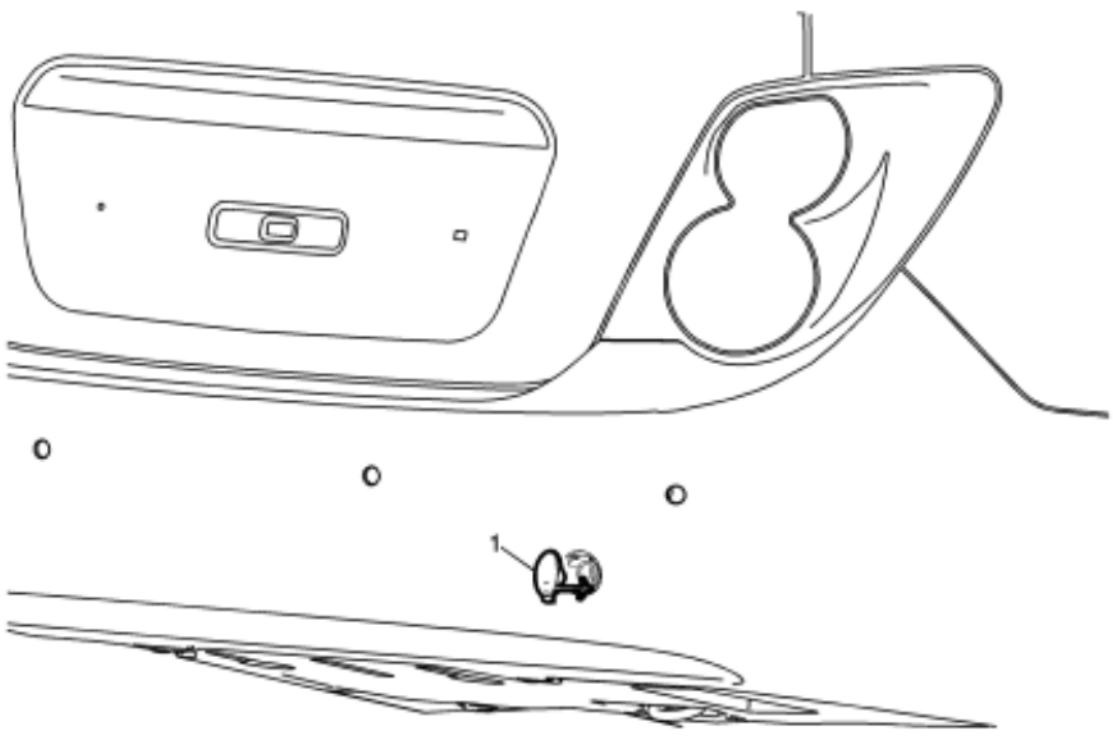


Callout	Component Name
1	Rear Bumper Fascia Rear Tow Eye Access Hole Cover **Procedure** 1. Using a small flat-bladed tool, release the cover from the rear bumper fascia. 2. Using needle nose pliers, release the v-notch hook from the square in the rear fascia and remove.

cardiagn.com

© 2011 General Motors. All rights reserved.

Radiator Grille Emblem/Nameplate Replacement

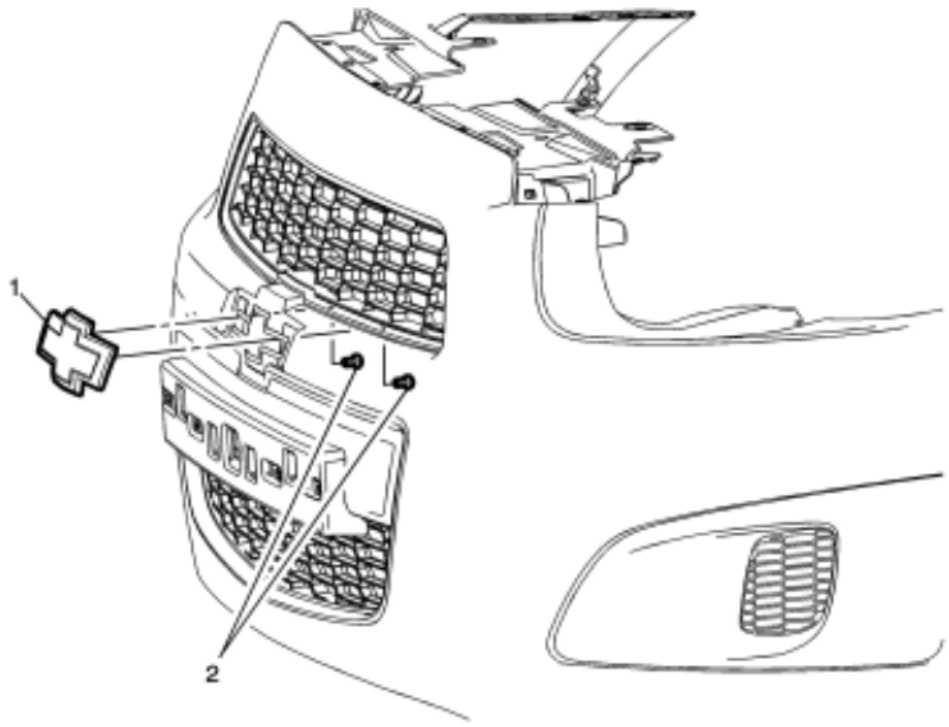


Callout	Component Name
Preliminary Procedure 1. Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement . 2. Remove the front bumper energy absorber. Refer to Front Bumper Energy Absorber Replacement .	
1	Radiator Grille Emblem/Nameplate
2	Radiator Grille Emblem/Nameplate Screw (Qty: 2)

cardiagn.com

© 2011 General Motors. All rights reserved.

Liftgate Emblem/Nameplate Replacement (Hatchback)

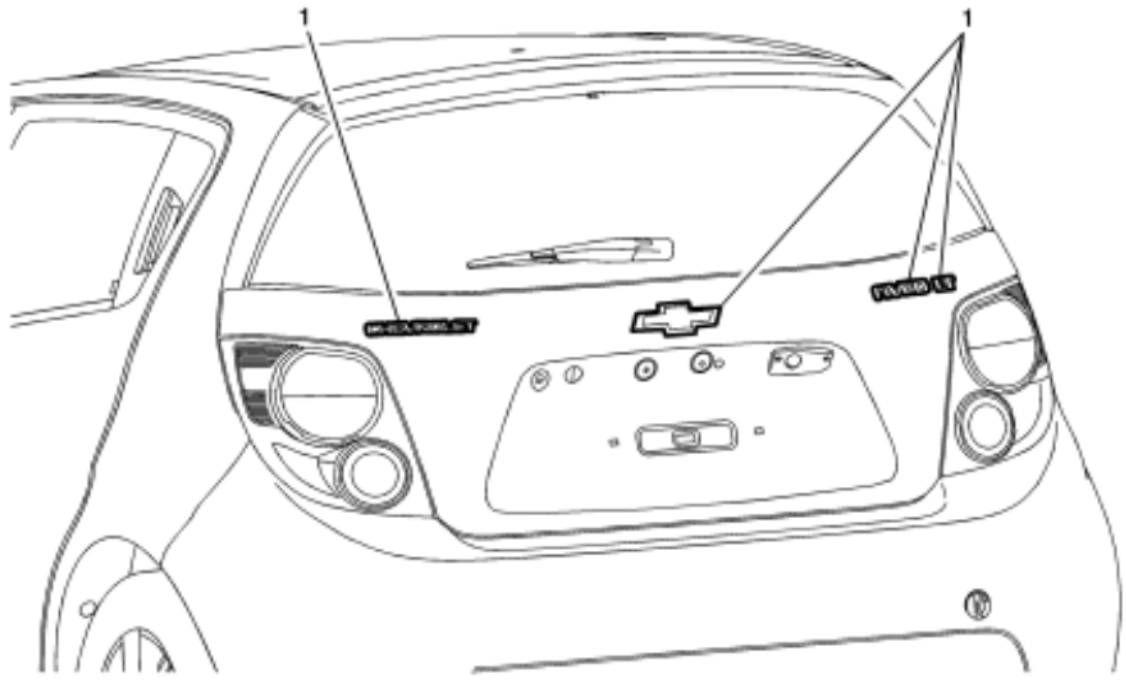


Callout	Component Name
1	Liftgate Emblem / Nameplate Assembly • CHEVROLET • BOWTIE • AVEO • LT **Caution:** Refer to Exterior Trim Emblem Removal Caution . **Procedure** 1. The part and surface should be 21°C (70°F) prior to installation. The vehicle should remain 21°C (70°F) for one hour after assembly to allow adhesive to develop sufficient bond strength. 2. Use a Heat Gun or equivalent to remove the old nameplate. Clean all adhesive from the liftgate panel and wipe the surface dry with a clean lint-free towel prior to installing the new nameplate. 3. When removing protective liners from the adhesive tape, be careful not to touch tape with hands and do not allow tape to come in contact with dirt or any foreign matter prior to adhesion. 4. Using the previous witness marks of the old emblem / nameplate or making measurements from another alike vehicle, use masking tape to reference the alignment of the new emblem/nameplate to the liftgate panel. 5. Close the rear liftgate panel prior to adhesion. 6. Using the palm of the hand, wet out the emblem/nameplate to the rear liftgate panel to ensure full adhesion of the emblem is made.

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Compartment Lid Nameplate Replacement (Sedan)

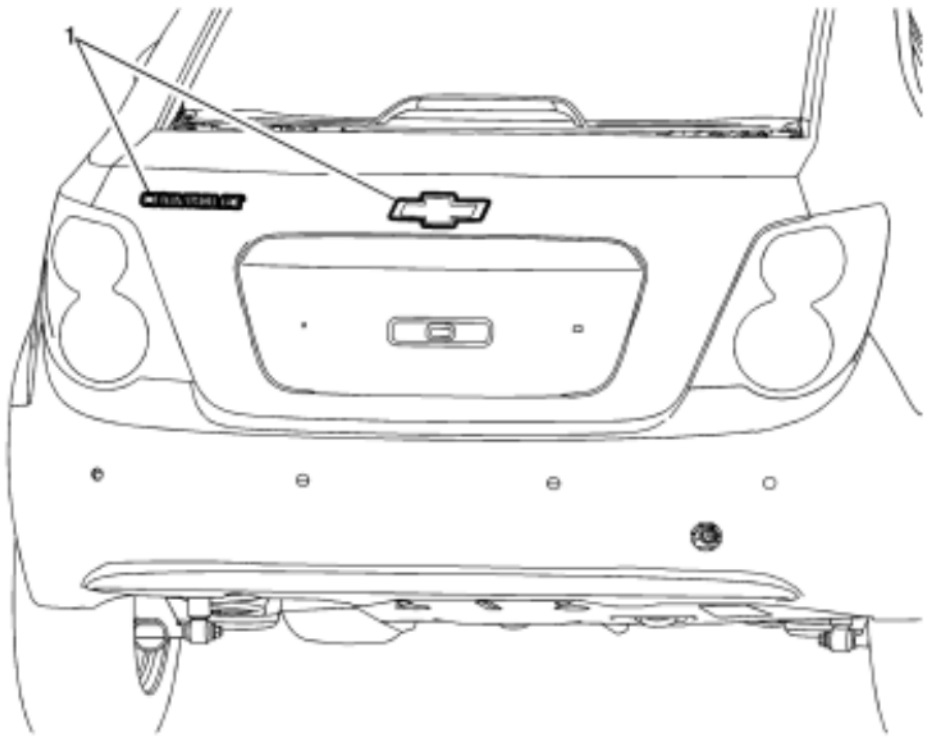


Callout	Component Name
1	Rear Compartment Lid Name Plate • CHEVROLET • BOWTIE **Caution:** Refer to Exterior Trim Emblem Removal Caution . **Procedure** 1. The part and surface should be 21°C (70°F) prior to installation. The vehicle should remain 21°C (70°F) for one hour after assembly to allow adhesive to develop sufficient bond strength. 2. Use a Heat Gun or equivalent to remove the old nameplate. Clean all adhesive from the rear compartment panel and wipe the surface dry with a clean lint-free towel prior to installing the new nameplate. 3. When removing protective liners from the adhesive tape, be careful not to touch tape with hands and do not allow tape to come in contact with dirt or any foreign matter prior to adhesion. 4. Close the rear compartment lid prior to adhesion. 5. Using the palm of the hand, wet out the emblem to the rear compartment lid to ensure full adhesion of the emblem is made.

cardiagn.com

© 2011 General Motors. All rights reserved.

Radiator Upper Grille Replacement

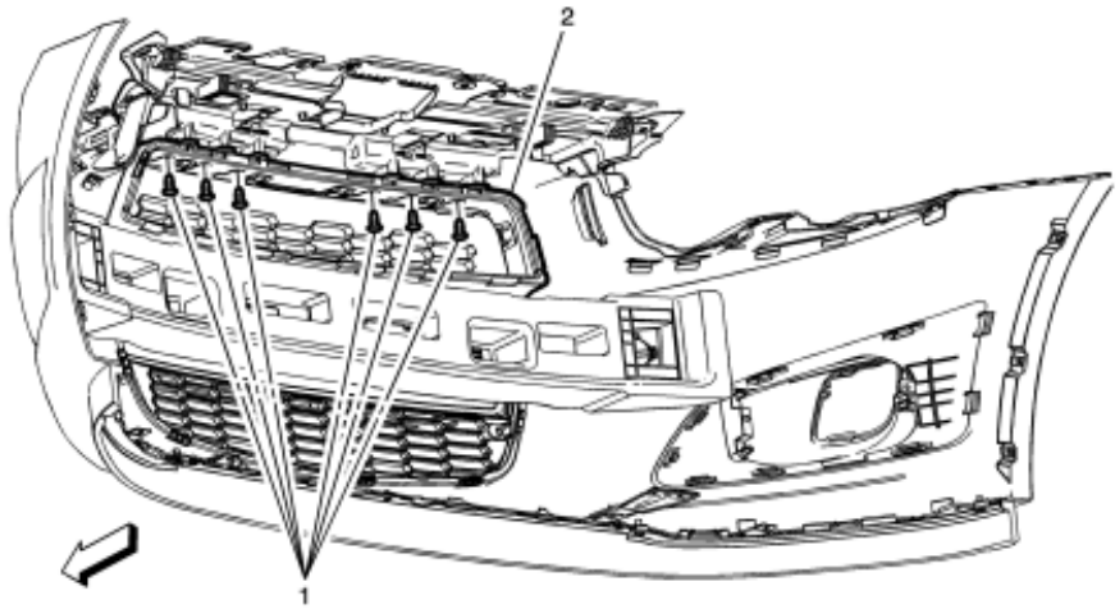


Callout	Component Name
Preliminary Procedure Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement .	
1	Radiator Upper Grille Assembly Screw (Qty: 6) **Caution:** Refer to Fastener Caution .
2	Radiator Upper Grille Assembly **Procedure** Release the outer upper grille locking tabs from the front bumper fascia and push the grille assembly outward away from the front bumper fascia assembly.

cardiagn.com

© 2011 General Motors. All rights reserved.

Radiator Lower Grille Replacement

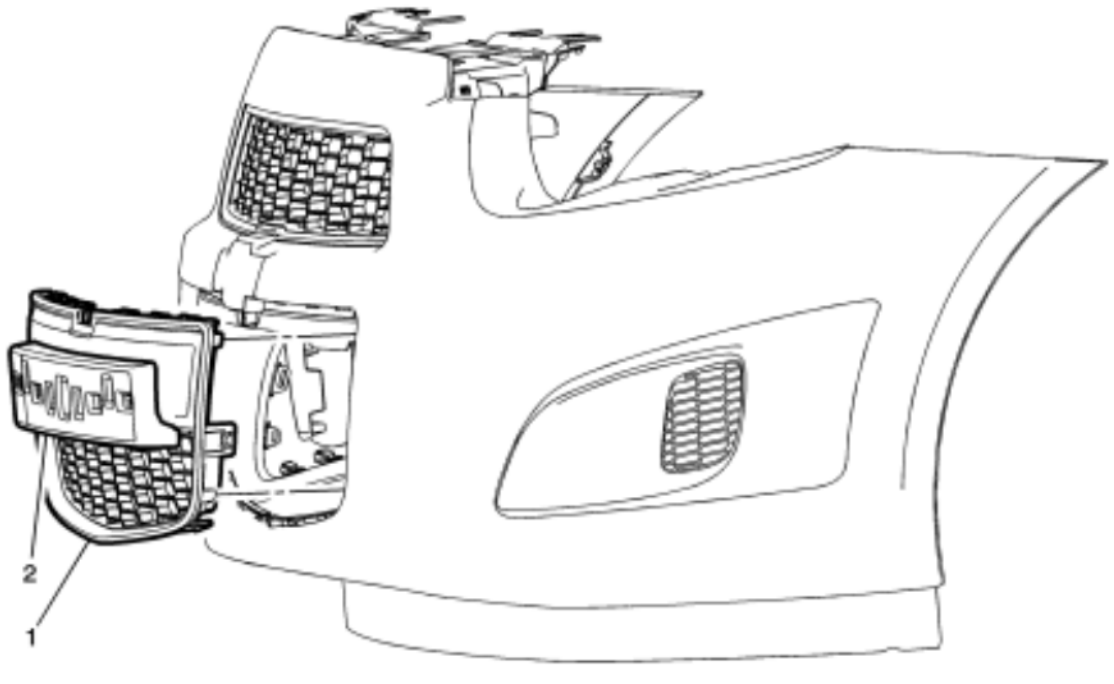


Callout	Component Name
Preliminary Procedures 1. Remove the front bumper fascia assembly. Refer to Front Bumper Fascia Replacement . 2. Remove the front bumper fascia energy absorber. Refer to Front Bumper Energy Absorber Replacement .	
1	Radiator Lower Front Grille **Procedure** 1. Release the four upper tabs from the front bumper fascia. 2. Release the two outer center tabs from the front bumper fascia. 3. Release the four lower tabs from the front bumper fascia. 4. Push the lower grille assembly outward, from the front bumper fascia in order to remove. 5. Upon installation, index the right center alignment pin to the front bumper fascia first, followed by the ten locking tabs on the lower grille assembly to the front bumper fascia. 6. Push the locking tabs inward at all ten locations, in order to secure the radiator lower front grille to the front bumper fascia.
2	Front License Plate Bracket Assembly **Procedure** Remove the four screws and the front license plate bracket to transfer to the new lower front grille assembly, (if equipped).

cardiagn.com

© 2011 General Motors. All rights reserved.

Radiator Grille Opening Cover Replacement (Upper Grille Cover)

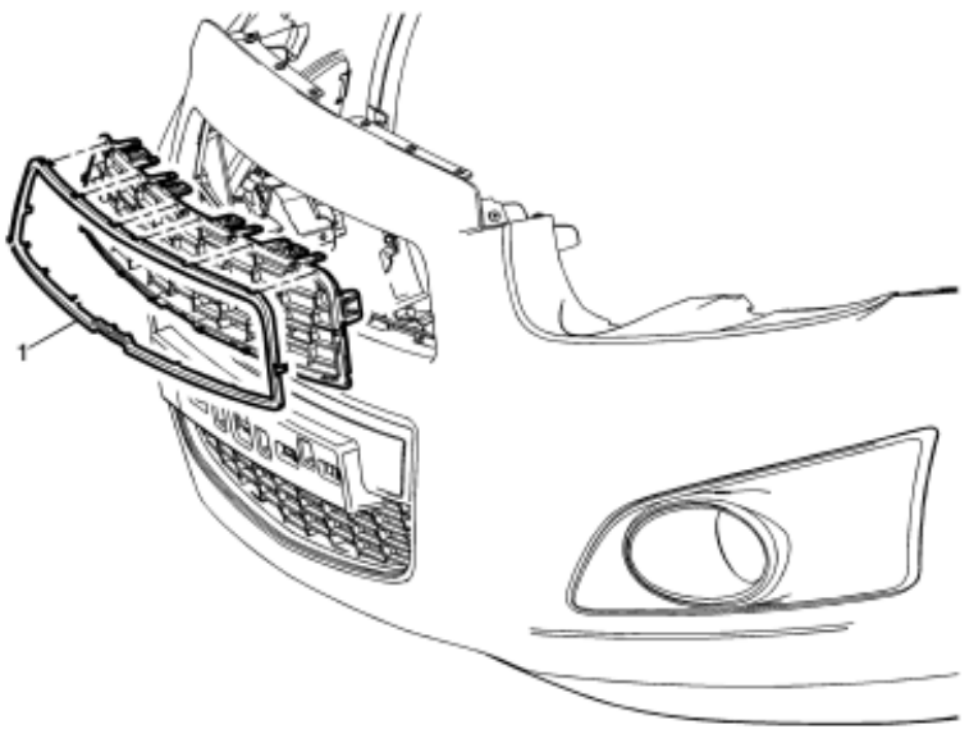


Callout	Component Name
Preliminary Procedure Remove the radiator upper grille. Refer to Radiator Upper Grille Replacement .	
1	Radiator Grille Opening Cover (Upper) **Procedure** Release the locking tabs securing the radiator opening grille cover to the radiator upper grille and remove.

cardiagn.com

© 2011 General Motors. All rights reserved.

Radiator Grille Opening Cover Replacement (Lower Grille Cover)

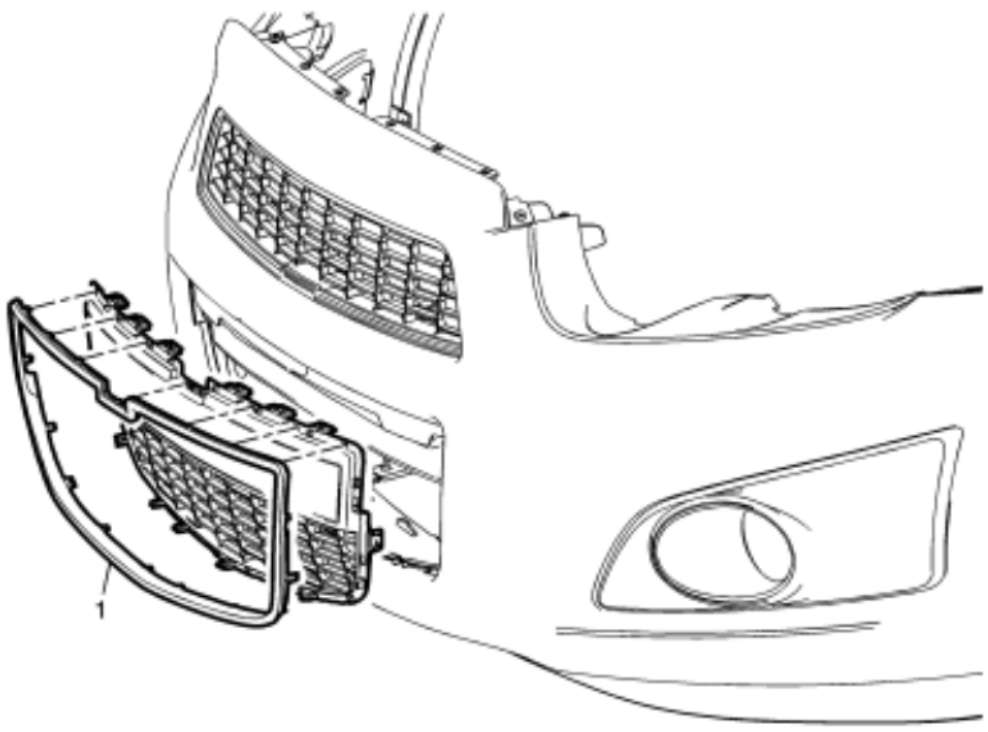


Callout	Component Name
Preliminary Procedure Remove the radiator lower grille. Refer to Radiator Lower Grille Replacement .	
1	Radiator Grille Opening Cover (Lower) **Procedure** Release the locking tabs securing the radiator opening grille cover to the radiator lower grille and remove.

cardiagn.com

© 2011 General Motors. All rights reserved.

Roof Panel Joint Finish Molding Replacement

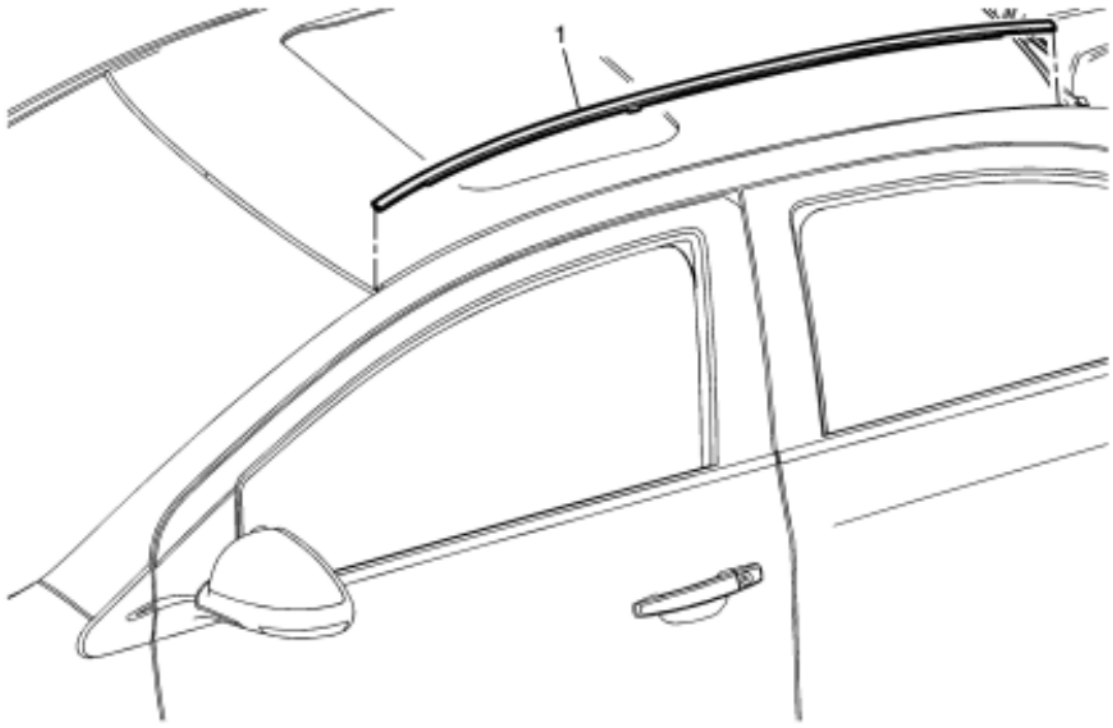


Callout	Component Name
Caution: Refer to Exterior Trim Emblem Removal Caution . **Preliminary Procedures** 1. Begin at the rear edge of the roof panel joint finish molding and carefully pry the molding from the roof ditch clip. 2. Pull the molding forward out of the ditch. 3. Carefully lift the front edge from the second roof ditch clip. 4. Clean any adhesive residue from the ditch using a 50/50 mixture by volume of isoproypl alcohol and clean drinkable water. 5. Dry the ditch with a lint free cotton towel.	
1	Roof Panel Joint Finish Molding **Procedure** 1. Insert the front edge of the finish molding to the edge of glass. 2. Using a roller-type tool, roll the molding into the ditch front to rear to ensure full adhesion is made. 3. Tuck the rear lip of the finish molding to the edge of glass at the rear of the roof panel. 4. Inspect the molding to roof ditch fit.

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear End Spoiler Replacement (Hatchback TTV)

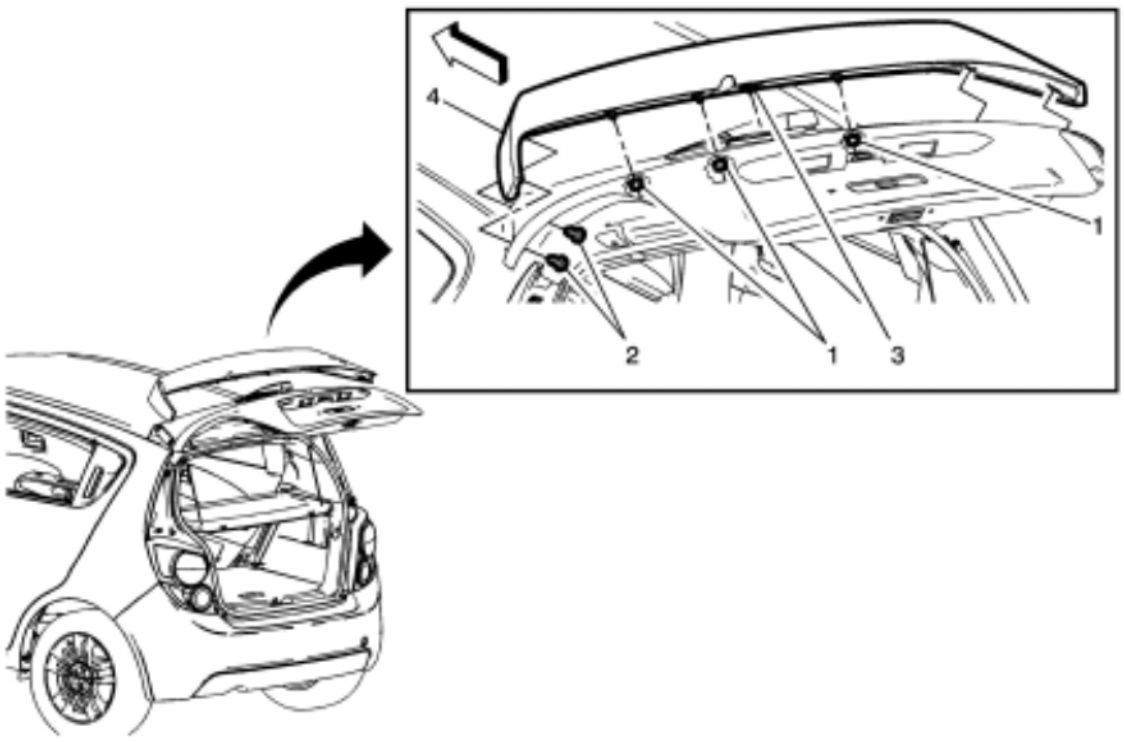

Callout	Component Name
Preliminary Procedure Remove the liftgate trim finish panel. Refer to Liftgate Trim Finish Panel Replacement .	
1	Rear End Spoiler Nut (Qty: 3) **Caution:** Refer to Fastener Caution . **Tighten** 5.0 N·m (44 lb in)
2	Rear End Spoiler Screw (Qty: 4) **Tighten** 1.5 N·m (13 lb in)
3	Clip Button **Tip** Upon assembly of the rear spoiler to the liftgate, position and secure the clip button to the rear liftgate spoiler to liftgate outer panel first.
4	Rear End Spoiler Assembly

© 2011 General Motors. All rights reserved.


cardiagn.com

Water Management Description and Operation

Plenum Water Flow Direction and Cleaning

A large percentage of water will flow off the windshield area into the plenum chamber drain system and then down the outside on the plenum to the underside of the vehicle. To ensure that the plenum chamber water management system performs properly, the air inlet grille panel, plenum chamber, and drains must not be blocked with debris.

In the graphic below the gray arrows show the water flow direction in the plenum chamber and drains system.

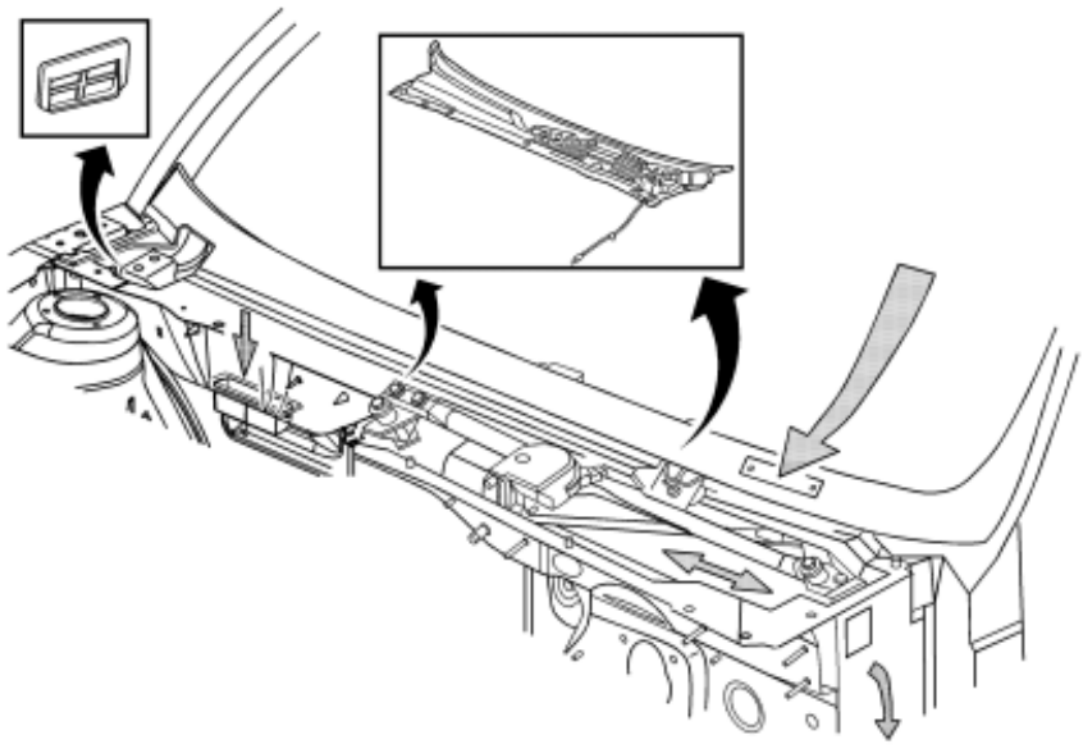

Plenum Chamber and Drain Valve-Cleaning

The plenum chamber is located in front of the windshield and below the air inlet grille panel.

1. Remove the air inlet grille panel. Refer to Air Inlet Grille Panel Replacement .
2. Clean the plenum chamber, drains and the air inlet grille panel of debris blockage.
3. Flush the plenum chamber, drains and the air inlet grille panel with clean water.
4. Install the air inlet grille panel. Refer to Air Inlet Grille Panel Replacement

cardiagn.com

© 2011 General Motors. All rights reserved.

Specifications
Eliminating Unwanted Odors in Vehicles
Floor Carpet Drying
Floor Panel Carpet Replacement
Front Side Door Opening Floor Carpet Retainer Replacement
Rear Side Door Opening Floor Carpet Retainer Replacement
Rear Compartment Floor Panel Carpet Replacement (Sedan)
Rear Compartment Floor Panel Carpet Replacement (Hatchback)
Headlining Trim Panel Replacement (Hatchback with Sunroof)
Headlining Trim Panel Replacement (Hatchback without Sunroof)
Headlining Trim Panel Replacement (Sedan with Sunroof)
Headlining Trim Panel Replacement (Sedan without Sunroof)

cardiagn.com

© 2011 General Motors. All rights reserved.

Adhesives, Fluids, Lubricants, and Sealers

Application	Type of Material	GM Part Number
GM Vehicle Care Odor Eliminator	Fluids	Refer to Electronic Parts Catalog.

cardiagn.com

© 2011 General Motors. All rights reserved.

Eliminating Unwanted Odors in Vehicles

GM Vehicle Care Odor Eliminator, Refer to Adhesives, Fluids, Lubricants, and Sealers , may control or eliminate odors in the interior and luggage compartment areas of GM vehicles. This non-toxic, biodegradable, odorless product has been shown to greatly reduce or remove the following types of odor:

- Objectionable smells of mold and mildew resulting from vehicle water leaks
- Customer created odors, such as smoke

You may safely use GM Vehicle Care Odor Eliminator on fabrics, vinyl, leather, carpet, and sound deadening materials. You may also induce this product into HVAC modules and instrument panel ducts for the control of non-bacterial related odors.

Note: This product leaves no residual scent and should not be used as an air freshener.

This product may result in the permanent elimination of an odor and may be preferable to customers whose allergies make them sensitive to perfumes. This product may effectively remove odors when directly contacting the odor source. In cases such as water leaks, use this product with diagnostic procedures to first eliminate the primary cause of the odor. Then use further applications on the residual odor to permanently correct the vehicle condition.

How to Use this Product

- Spray GM Vehicle Care Odor Eliminator directly or as an additive with carpet shampoo in steam cleaners.
- Do not use on any interior surface that plain water would deteriorate, because this product will have the same effect. Also avoid letting this product come into contact with vinegar or any acidic substance. Acid-based products will hamper the effectiveness of GM Vehicle Care Odor Eliminator.
- Complete eight page treatment sheets are enclosed within each case of GM Vehicle Care Odor Eliminator. These treatment instructions range from simple vehicle odor elimination to full step by step procedures for odor removal from water leaks.
- Instructions and cautions are printed on the bottle, but additional help is available. If you encounter a persistent or recurring odor, you may call to obtain additional information and usage suggestions.

cardiagn.com

© 2011 General Motors. All rights reserved.

Floor Carpet Drying

If the carpet or the pad or insulator is wet, use the following criteria for drying or for replacing the components:

- For a 1-piece carpet assembly bonded to a cotton or a fiber padding, replace the entire assembly.
- For a 2-piece carpet assembly with a cotton or a fiber padding, replace the padding only. While the carpet is out of the vehicle, dry the carpet using the method described below.
- For a 1-piece carpet assembly bonded to a foam padding or attached to a synthetic padding, dry the carpet using the method described below.
- For a 2-piece carpet assembly with a synthetic padding, dry the assembly using the method described below.


Drying Method

1. If you observe puddles of liquid on the carpet face, use a wet vacuum to remove the excess moisture.
2. Blot the face of the carpet with a towel in order to absorb as much moisture as possible.
3. Point a fan at the affected area and air dry the carpet.

cardiagn.com

© 2011 General Motors. All rights reserved.

Floor Panel Carpet Replacement

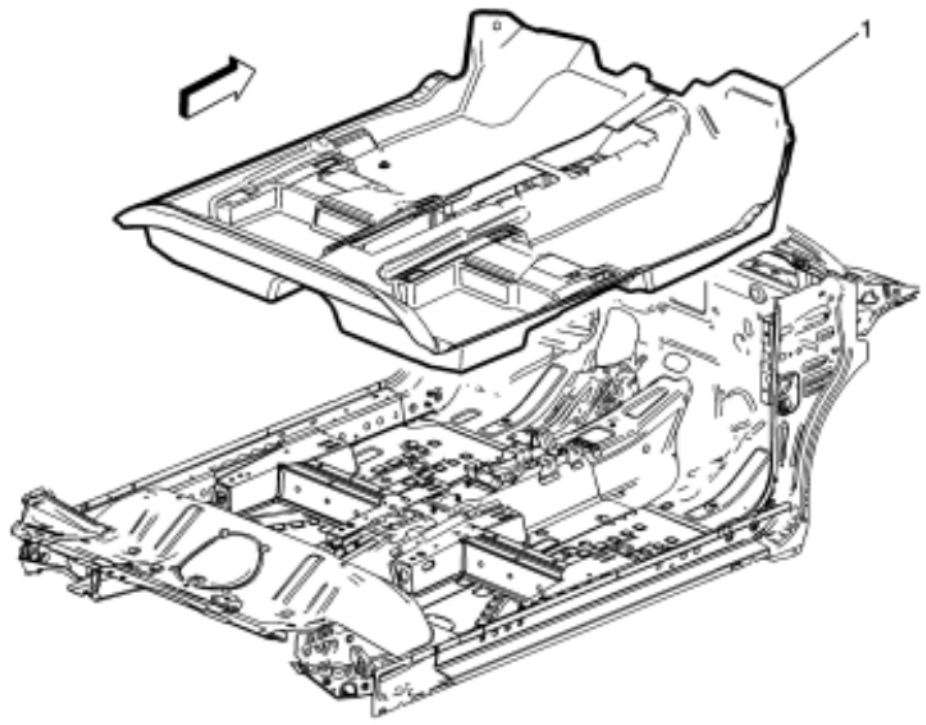


Callout	Component Name
Preliminary Procedures 1. Remove front seats. Refer to Driver or Passenger Seat Replacement . 2. Remove rear seat cushion. Refer to Rear Seat Cushion Replacement . 3. Remove the front floor console. Refer to Front Floor Console Replacement . 4. Remove the front side door opening floor carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement . 5. Remove the rear side door opening floor carpet retainer. Refer to Rear Side Door Opening Floor Carpet Retainer Replacement . 6. Remove the center pillar lower trim panels. Refer to Center Pillar Lower Trim Panel Replacement .	
1	Front Floor Panel Carpet Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Front Side Door Opening Floor Carpet Retainer Replacement

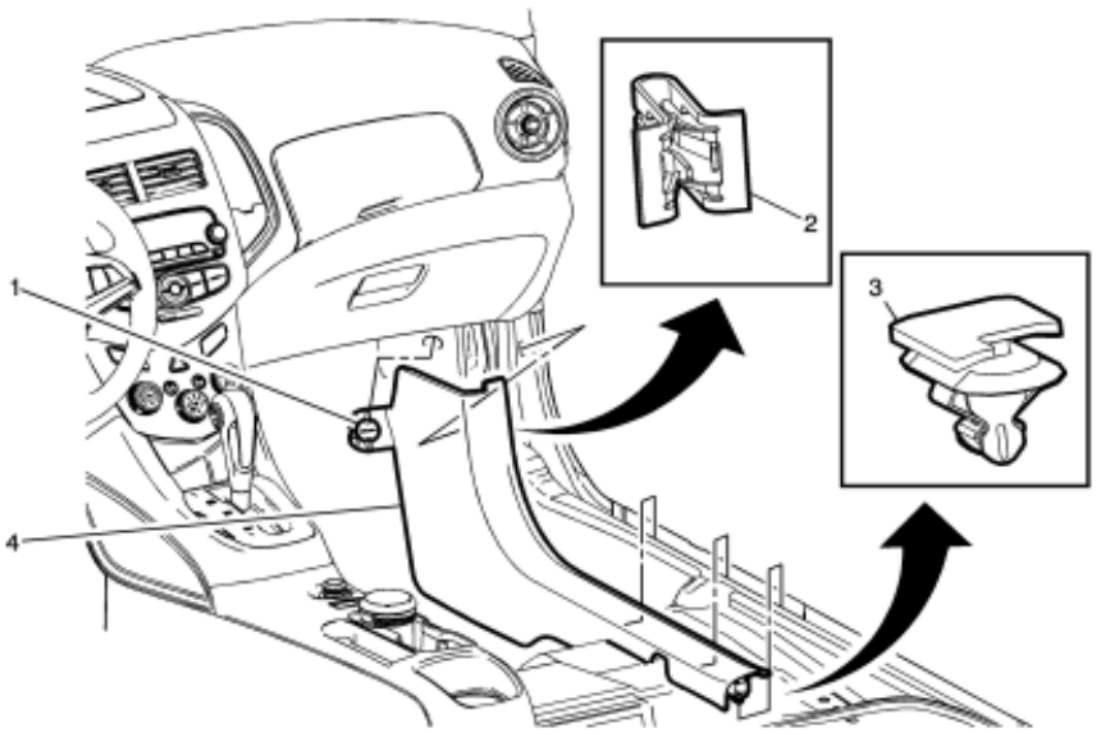


Callout	Component Name
1	Front Side Door Opening Floor Carpet Retainer Retainer
2	Front Side Door Opening Floor Carpet Retainer Clip
3	Front Side Door Opening Floor Carpet Retainer Clip (Qty: 3)
4	Front Side Door Opening Floor Carpet Retainer Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Side Door Opening Floor Carpet Retainer Replacement

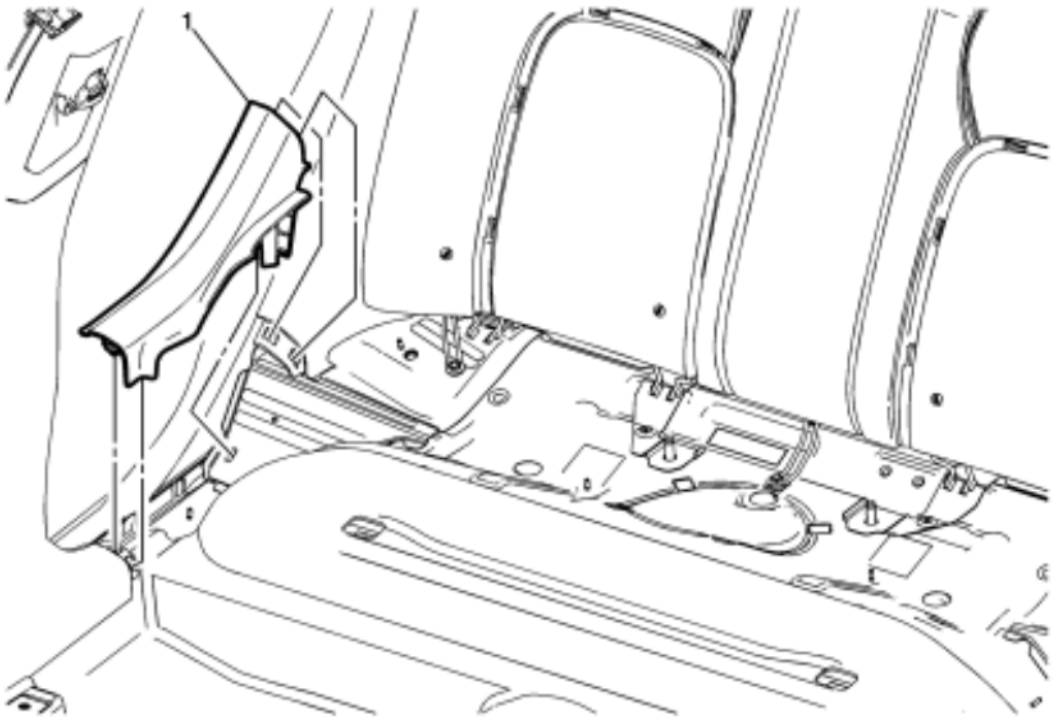


Callout	Component Name
Preliminary Procedure Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement .	
1	Rear Side Door Opening Floor Carpet Retainer Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Compartment Floor Panel Carpet Replacement (Sedan)

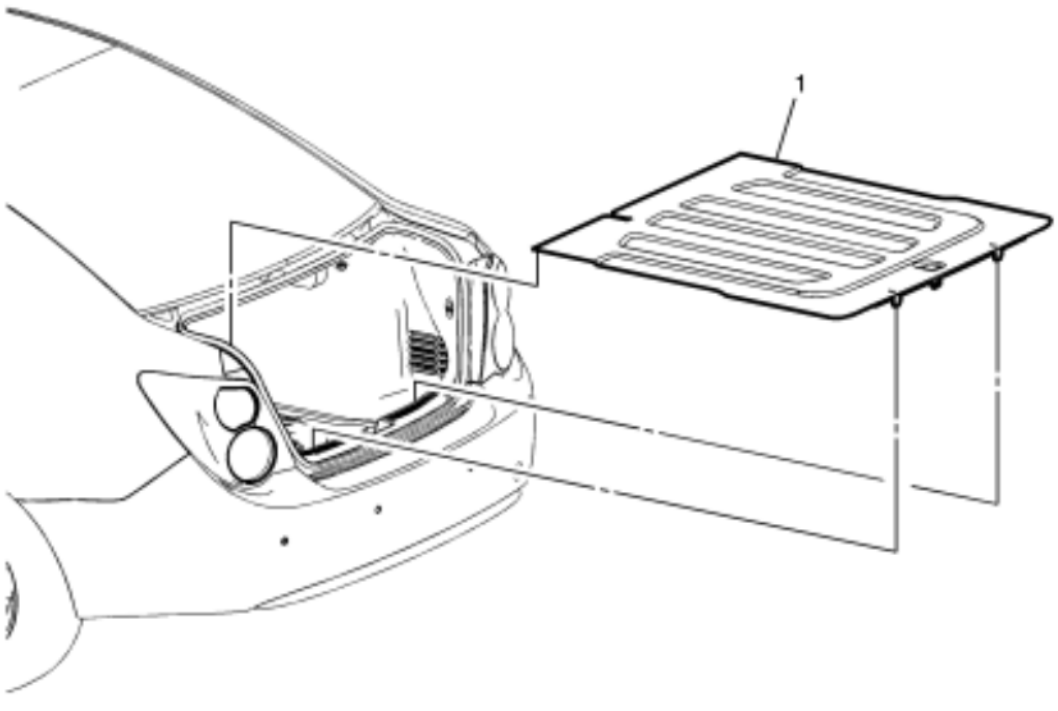


Callout	Component Name
1	Rear Compartment Floor Panel Carpet Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Compartment Floor Panel Carpet Replacement (Hatchback)

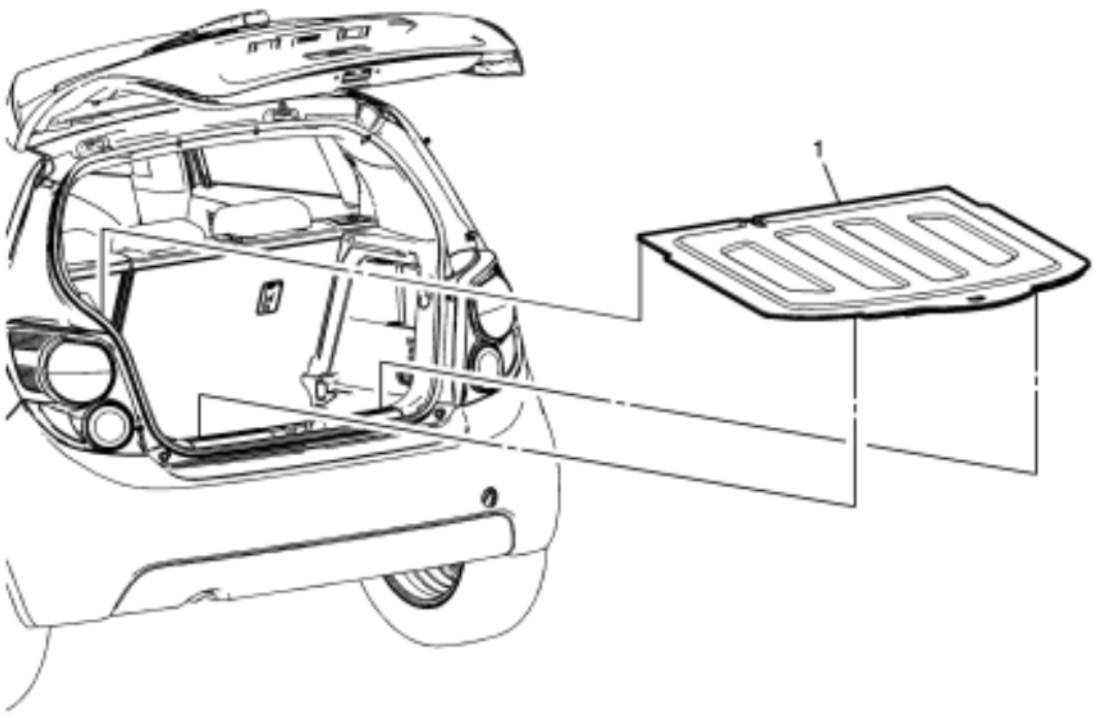


Callout	Component Name
1	Rear Compartment Floor Panel Carpet Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Headlining Trim Panel Replacement (Hatchback with Sunroof)

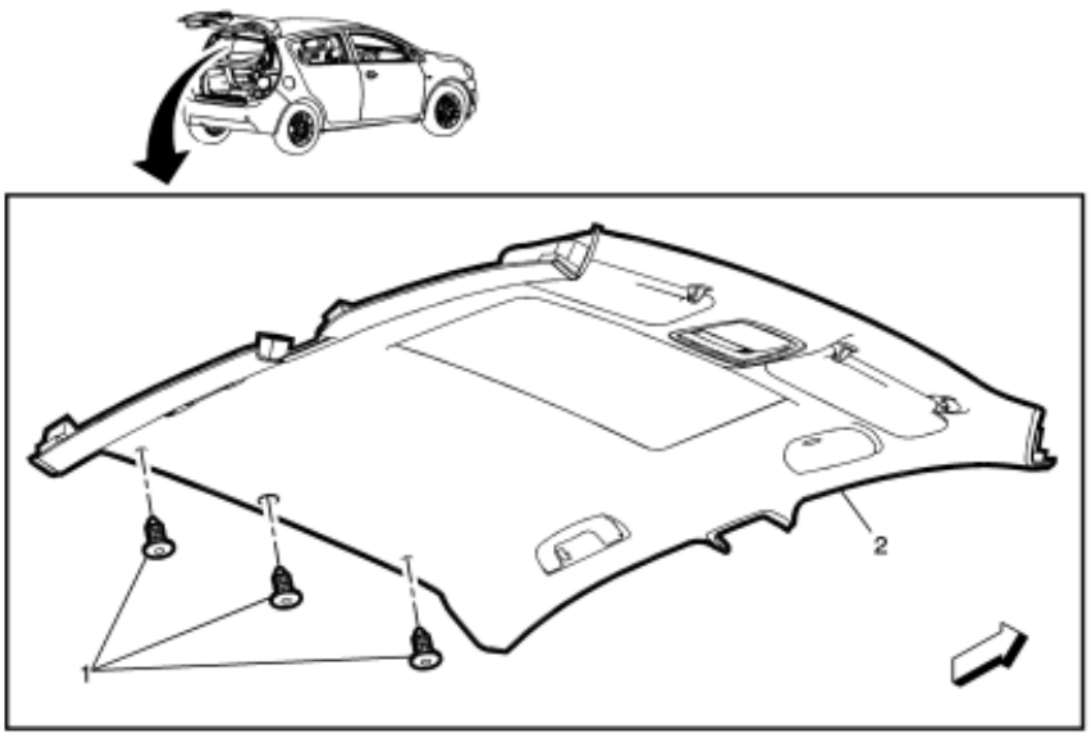


Callout	Component Name
	Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury. **Caution:** If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced. **Caution:** Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced. **Preliminary Procedures** 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Remove the sunshade. Refer to Sunshade Replacement . 3. Remove the sunshade support. Refer to Sunshade Support Replacement . 4. Remove the roof rail front assist handle. Refer to Roof Rail Front Assist Handle Replacement . 5. Remove the roof rail rear assist handle. Refer to Roof Rail Rear Assist Handle Replacement . 6. Remove the dome lamp bezel. Refer to Dome Lamp Bezel Replacement . 7. Remove the roof rail front stowage compartment. Refer to Roof Rail Front Stowage Compartment Replacement . 8. Remove the windshield side garnish molding. Refer to Windshield Side Garnish Molding Replacement . 9. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement . 10. Remove the center pillar upper trim panel. Refer to Center Pillar Upper Trim Panel Replacement . 11. Remove the sunroof trim ring, if equipped. This will give the headliner added flexibility during removal. 12. Move the front seat fully forward and recline.
1	Headliner Trim Panel Retainer (Qty: 3)
2	Headliner Trim Panel Assembly **Procedure** Disconnect the electrical connectors. **Tip** When installing a new headliner, tape any unused connector to the headliner with a high adhesive tape.

© 2011 General Motors. All rights reserved.

cardiagn.com

Headlining Trim Panel Replacement (Hatchback without Sunroof)



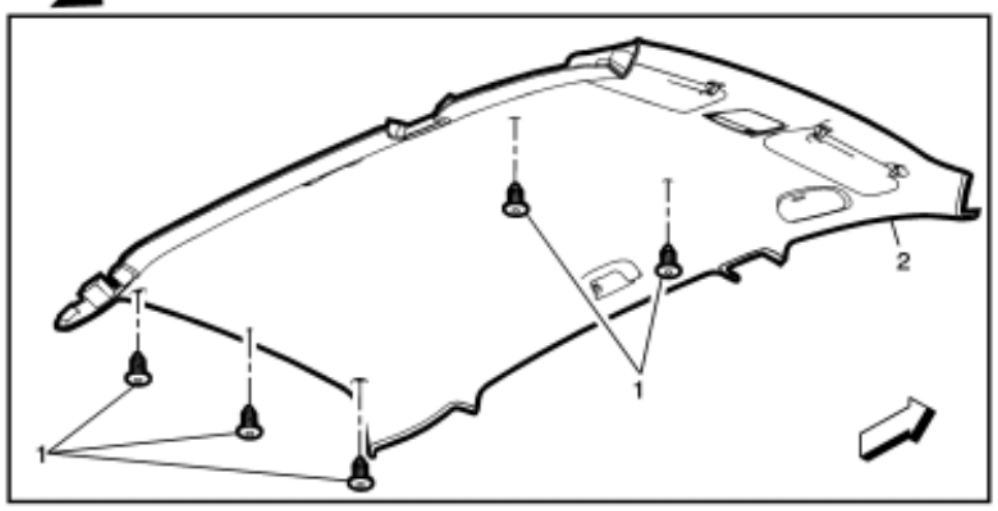


Callout	Component Name
	Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury. **Caution:** If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced. **Caution:** Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced. **Preliminary Procedures** 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Remove the sunshade. Refer to Sunshade Replacement . 3. Remove the sunshade support. Refer to Sunshade Support Replacement . 4. Remove the roof rail front assist handle. Refer to Roof Rail Front Assist Handle Replacement . 5. Remove the roof rail rear assist handle. Refer to Roof Rail Rear Assist Handle Replacement . 6. Remove the dome lamp bezel. Refer to Dome Lamp Bezel Replacement . 7. Remove the roof rail front stowage compartment. Refer to Roof Rail Front Stowage Compartment Replacement . 8. Remove the windshield side garnish molding. Refer to Windshield Side Garnish Molding Replacement . 9. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement . 10. Remove the center pillar upper trim panel. Refer to Center Pillar Upper Trim Panel Replacement . 11. Move the front seat fully forward and recline.
1	Headliner Trim Panel Retainer (Qty: 5)
2	Headliner Trim Panel Assembly **Procedure** Disconnect the electrical connectors. **Tip** When installing a new headliner, tape any unused connector to the headliner with a high adhesive tape.

© 2011 General Motors. All rights reserved.

cardiagn.com

Headlining Trim Panel Replacement (Sedan with Sunroof)



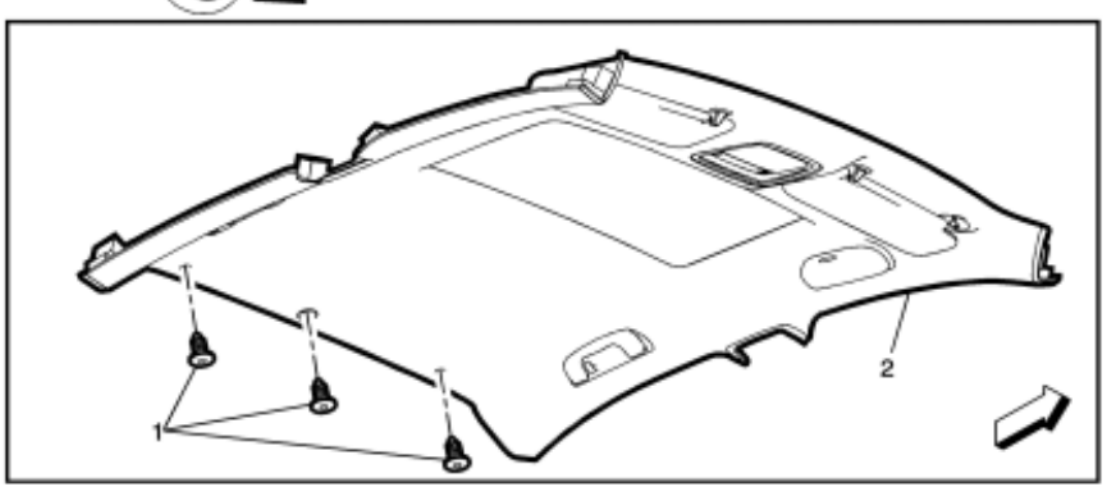


Callout	Component Name
	Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury. **Caution:** If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced. **Caution:** Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced. **Preliminary Procedures** 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Remove the sunshade. Refer to Sunshade Replacement . 3. Remove the sunshade support. Refer to Sunshade Support Replacement . 4. Remove the roof rail front assist handle. Refer to Roof Rail Front Assist Handle Replacement . 5. Remove the roof rail rear assist handle. Refer to Roof Rail Rear Assist Handle Replacement . 6. Remove the dome lamp bezel. Refer to Dome Lamp Bezel Replacement . 7. Remove the roof rail front stowage compartment. Refer to Roof Rail Front Stowage Compartment Replacement . 8. Remove the windshield side garnish molding. Refer to Windshield Side Garnish Molding Replacement . 9. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement . 10. Remove the center pillar upper trim panel. Refer to Center Pillar Upper Trim Panel Replacement . 11. Remove the sunroof trim ring, if equipped. This will give the headliner added flexibility during removal. 12. Move the front seat fully forward and recline.
1	Headliner Trim Panel Retainer (Qty: 3)
2	Headliner Trim Panel Assembly **Procedure** Disconnect the electrical connectors. **Tip** When installing a new headliner, tape any unused connector to the headliner with a high adhesive tape.

© 2011 General Motors. All rights reserved.

cardiagn.com

Headlining Trim Panel Replacement (Sedan without Sunroof)



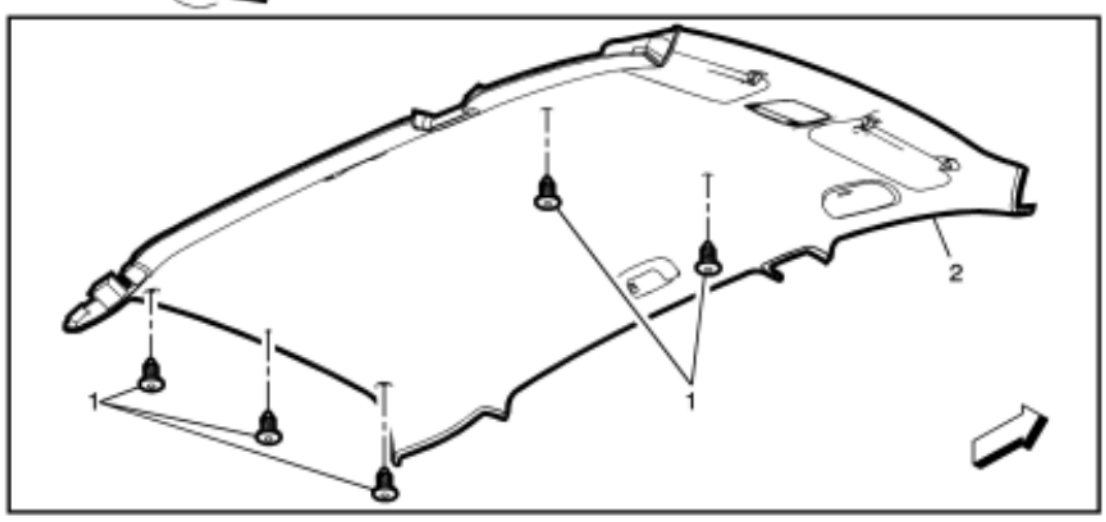

Callout	Component Name
	Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury. **Caution:** If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced. **Caution:** Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced. **Preliminary Procedures** 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Remove the sunshade. Refer to Sunshade Replacement . 3. Remove the sunshade support. Refer to Sunshade Support Replacement . 4. Remove the roof rail front assist handle. Refer to Roof Rail Front Assist Handle Replacement . 5. Remove the roof rail rear assist handle. Refer to Roof Rail Rear Assist Handle Replacement . 6. Remove the dome lamp bezel. Refer to Dome Lamp Bezel Replacement . 7. Remove the roof rail front stowage compartment. Refer to Roof Rail Front Stowage Compartment Replacement . 8. Remove the windshield side garnish molding. Refer to Windshield Side Garnish Molding Replacement . 9. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement . 10. Remove the center pillar upper trim panel. Refer to Center Pillar Upper Trim Panel Replacement . 11. Move the front seat fully forward and recline.
1	Headliner Trim Panel Retainer (Qty: 5)
2	Headliner Trim Panel Assembly **Procedure** Disconnect the electrical connectors. **Tip** When installing a new headliner, tape any unused connector to the headliner with a high adhesive tape.

© 2011 General Motors. All rights reserved.

cardiagn.com

Specifications
Instrument Panel Insulator Replacement
Instrument Panel Accessory Upper Trim Plate Replacement
Instrument Panel Center Trim Panel Replacement
Instrument Panel Center Upper Molding Replacement
Instrument Panel Upper Trim Panel Replacement - Right Side (Without AR1)
Instrument Panel Upper Trim Panel Replacement - Right Side (With AR1)
Instrument Panel Upper Trim Panel Replacement - Left Side
Instrument Panel Fuse Block Access Hole Cover Replacement
Instrument Panel Outer Trim Cover Replacement
Instrument Cluster Upper Bezel Replacement
Instrument Panel Lower Trim Pad Cover Replacement
Instrument Panel Upper Compartment Door Latch Replacement
Instrument Panel Compartment Housing Replacement (RHD)
Instrument Panel Compartment Replacement
Instrument Panel Lower Compartment Replacement
Instrument Panel Compartment Door Latch Replacement
Instrument Panel Compartment Door Dampener Replacement
Instrument Panel Center Molding Replacement (With U58)
Instrument Panel Center Molding Replacement (Without U58)
Instrument Panel Assembly Replacement
Instrument Panel Tie Bar Replacement
Front Floor Console Cover Replacement (Automatic Transmission)
Front Floor Console Cover Replacement (Manual Transmission)
Front Floor Console Cup Holder Replacement
Automatic Transmission Control Indicator Opening Cover Replacement
Front Floor Console Extension Replacement - Right Side
Front Floor Console Extension Replacement - Left Side
Front Floor Console Replacement
Instrument Cluster Replacement

cardiagn.com

© 2011 General Motors. All rights reserved.


Fastener Tightening Specifications

Application	Specification	
	Metric	English
Instrument Panel Inflatable Restraint Module Fasteners	10 N·m	89 lb in
Instrument Panel Tie Bar Assembly to Vehicle Body Bolts	22 N·m	16 lb ft
Instrument Panel Tie Bar Assembly to HVAC Module Fasteners	9 N·m	80 lb in
Instrument Panel Tie Bar Lower Support Bracket to Front Floor Tunnel Bolts	22 N·m	16 lb ft
Instrument Panel Tie Bar to Brake Pedal Bracket Bolts	9 N·m	80 lb in
Instrument Panel Tie Bar to Brake Pedal Mounting Bracket Bolt	22 N·m	16 lb ft
Instrument Panel Tie Bar to Cowl Nut	22 N·m	16 lb ft

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Insulator Replacement

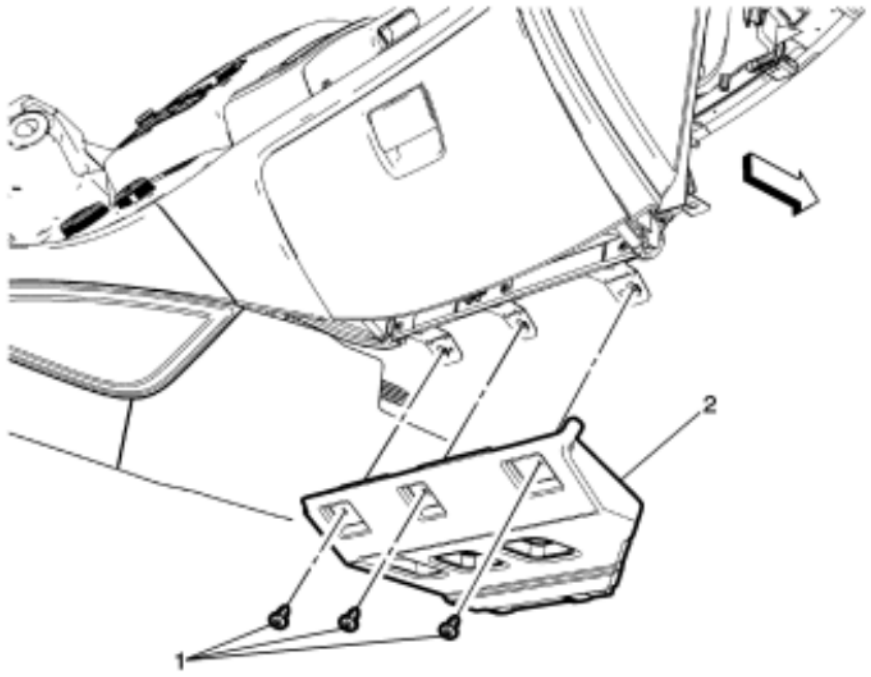


Callout	Component Name
1	Instrument Panel Insulator Fastener (Qty: 3) **Caution:** Refer to Fastener Caution .
2	Instrument Panel Insulator

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Accessory Upper Trim Plate Replacement

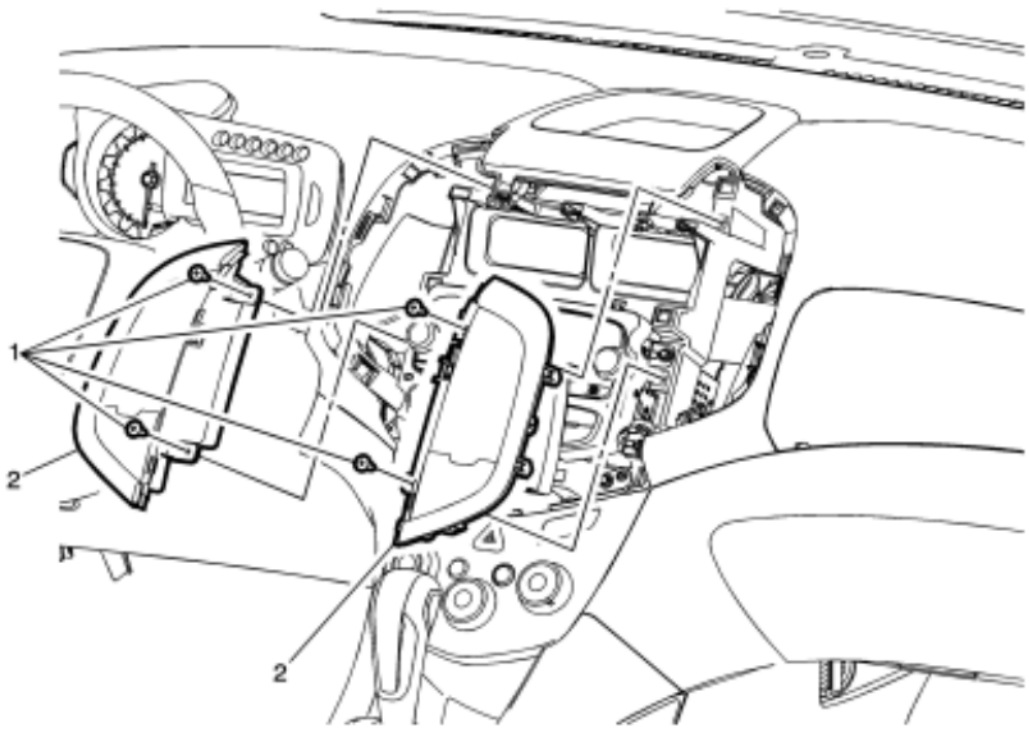


Callout	Component Name
Preliminary Procedure Remove the instrument panel center molding. Refer to Instrument Panel Center Molding Replacement .	
1	Instrument Panel Accessory Upper Trim Plate Fastener (Qty: 4) **Caution:** Refer to Fastener Caution .
2	Instrument Panel Accessory Upper Trim Plate (Qty: 2) **Procedures** 1. Use a flat bladed plastic trim tool in order to disengage the retainers securing the accessory upper trim plates to the instrument panel assembly. 2. When replacing the accessory trim plates, transfer all necessary components.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Center Trim Panel Replacement

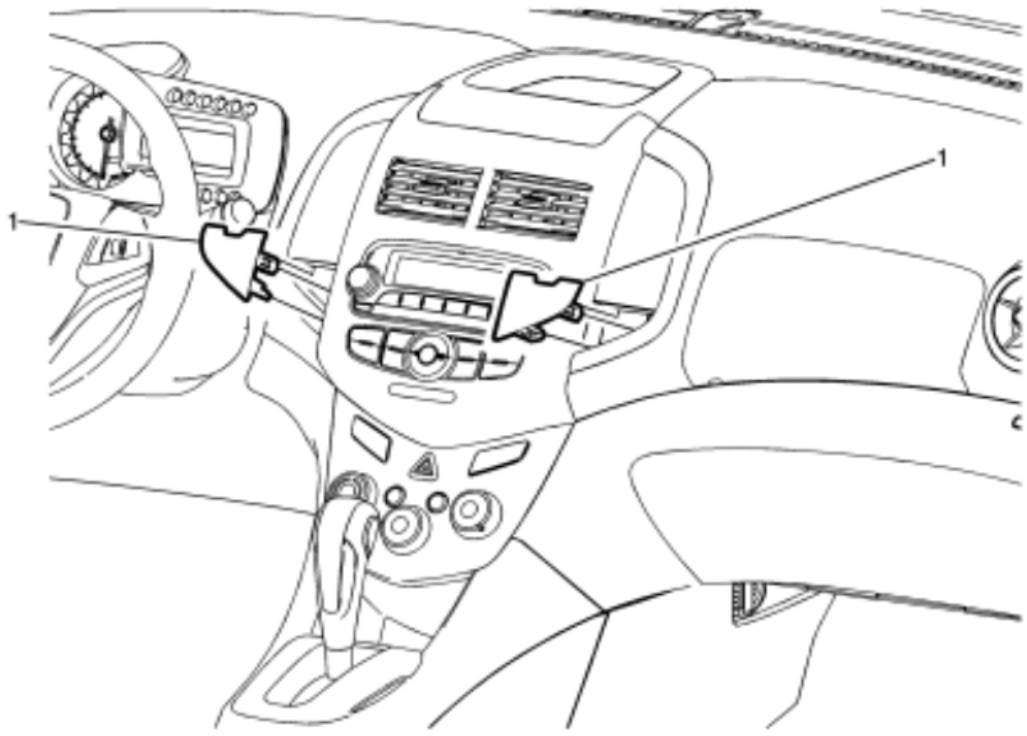


Callout	Component Name
1	Instrument Panel Center Trim Panel (Qty: 2) **Procedure** Use a flat bladed plastic trim tool in order to disengage the retainers securing the center trim plates to the instrument panel accessory upper trim plates.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Center Upper Molding Replacement

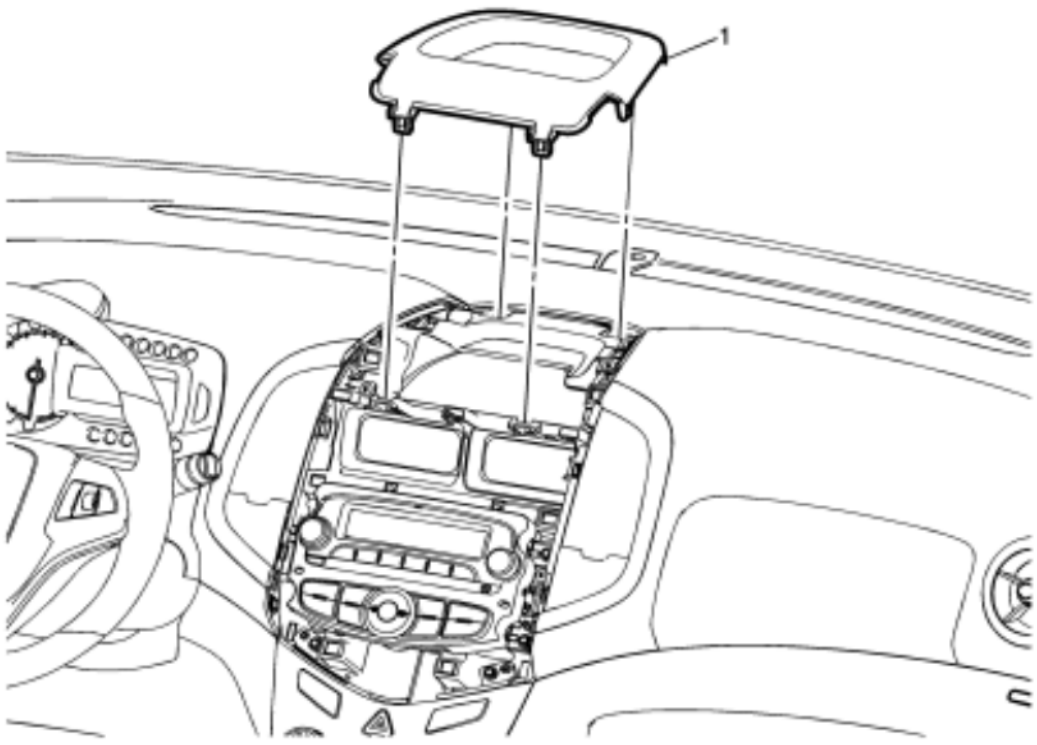


Callout	Component Name
Preliminary Procedure Remove the instrument panel center molding. Refer to Instrument Panel Center Molding Replacement .	
1	Instrument Panel Center Upper Molding **Procedures** 1. Use a flat bladed plastic trim tool in order to disengage the retainers securing the center upper trim molding to the instrument panel assembly. 2. Disconnect electrical connections.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Upper Trim Panel Replacement - Right Side (Without AR1)

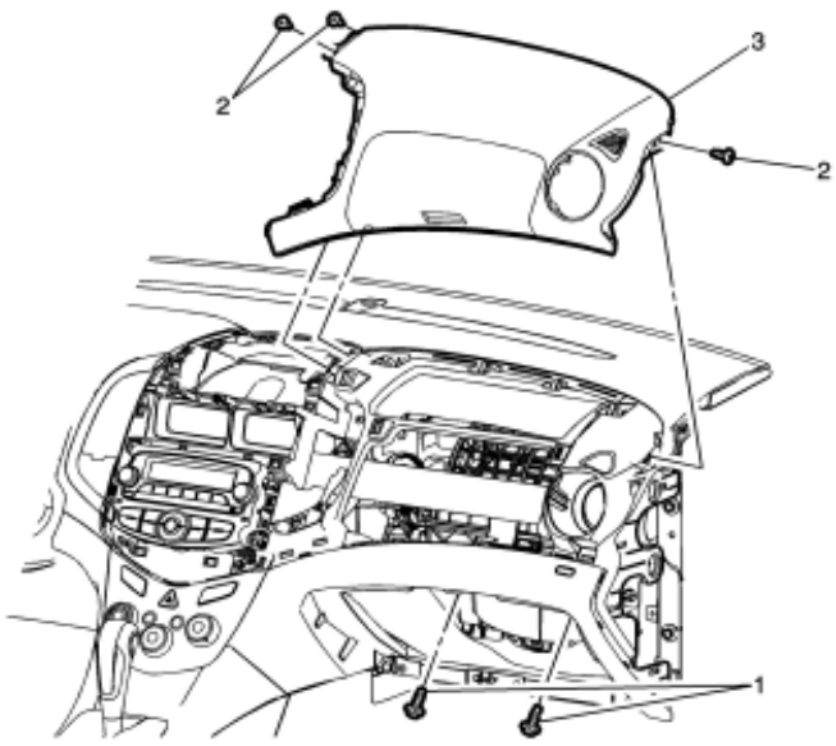


Callout	Component Name
	Preliminary Procedure 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Remove the instrument panel center molding. Refer to Instrument Panel Center Molding Replacement . 3. Remove the instrument panel center upper molding. Refer to Instrument Panel Upper Trim Panel Replacement - Left Side . 4. Remove the instrument panel lower compartment. Refer to Instrument Panel Lower Compartment Replacement . 5. Remove the right instrument panel accessory upper trim plate. Refer to Instrument Panel Accessory Upper Trim Plate Replacement . 6. Remove the right instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement . 7. Remove the right instrument panel outer air outlet. Refer to Instrument Panel Outer Air Outlet Replacement - Right Side .
1	Instrument Panel Inflatable Restraint Module Fasteners (Qty: 2) **Caution:** Refer to Fastener Caution . **Tighten** 10N·m89lbin
2	Instrument Panel Upper Trim Panel Fastener (Qty: 3)
3	Instrument Panel Upper Trim Panel **Procedures** 1. Use a flat bladed plastic trim tool in order to disengage the retainers securing the upper trim panel to the instrument panel assembly. 2. Disconnect the electrical connections. 3. When replacing the instrument panel upper trim panel, transfer all necessary components.

© 2011 General Motors. All rights reserved.

cardiagn.com

Instrument Panel Upper Trim Panel Replacement - Right Side (With AR1)

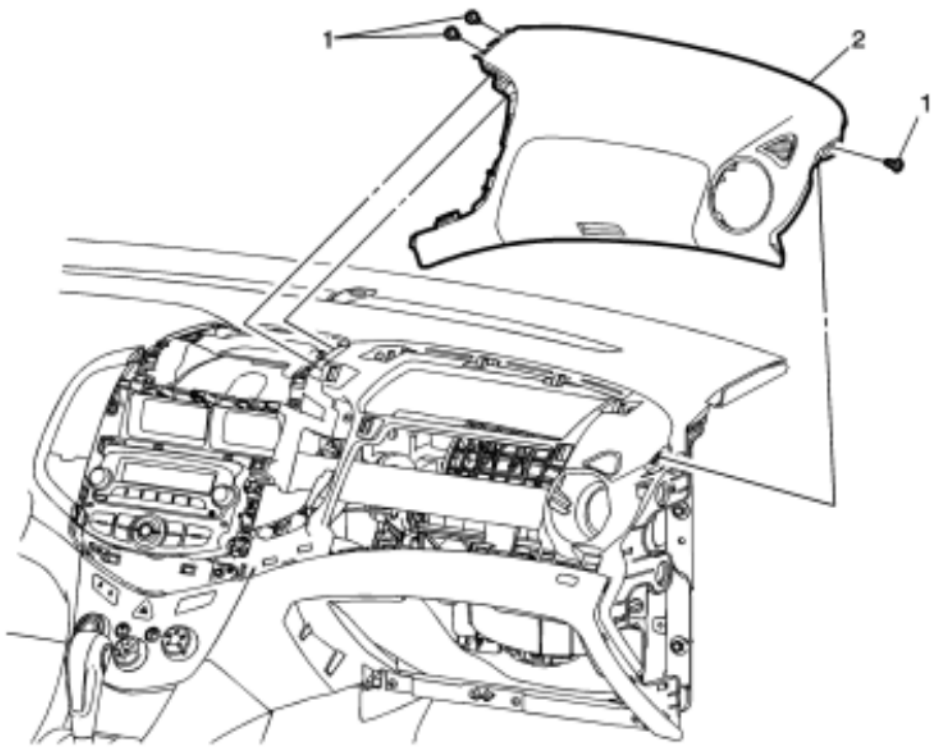


Callout	Component Name
Preliminary Procedure 1. Remove the instrument panel center molding. Refer to Instrument Panel Center Molding Replacement . 2. Remove the instrument panel center upper molding. Refer to Instrument Panel Upper Trim Panel Replacement - Left Side . 3. Remove the instrument panel lower compartment. Refer to Instrument Panel Lower Compartment Replacement . 4. Remove the right instrument panel accessory upper trim plate. Refer to Instrument Panel Accessory Upper Trim Plate Replacement . 5. Remove the right instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement . 6. Remove the right instrument panel outer air outlet. Refer to Instrument Panel Outer Air Outlet Replacement - Right Side .	
1	Instrument Panel Upper Trim Panel Fastener (Qty: 3) **Caution:** Refer to Fastener Caution .
2	Instrument Panel Upper Trim Panel **Procedures** 1. Use a flat bladed plastic trim tool in order to disengage the retainers securing the upper trim panel to the instrument panel assembly. 2. Disconnect the electrical connections. 3. When replacing the instrument panel upper trim panel, transfer all necessary components.

© 2011 General Motors. All rights reserved.

cardiagn.com

Instrument Panel Upper Trim Panel Replacement - Left Side

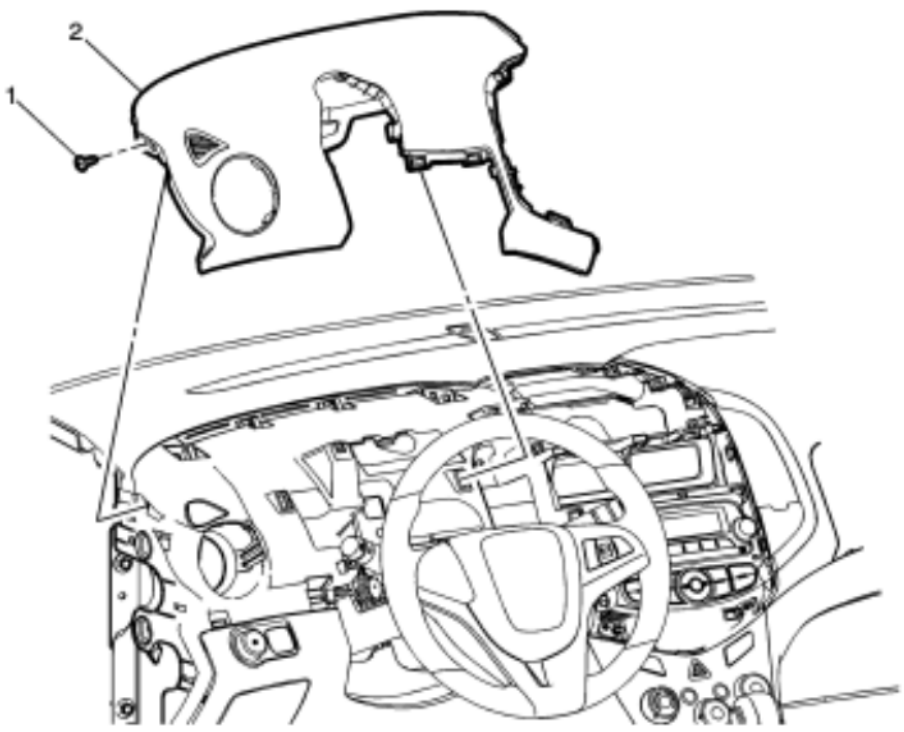


Callout	Component Name
Preliminary Procedure 1. Remove the instrument cluster assembly. Refer to Instrument Cluster Replacement . 2. Remove the instrument panel center molding. Refer to Instrument Panel Center Molding Replacement . 3. Remove the instrument panel center upper molding. Refer to Instrument Panel Center Upper Molding Replacement . 4. Remove the left instrument panel accessory upper trim plate. Refer to Instrument Panel Accessory Upper Trim Plate Replacement . 5. Remove the left instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement .	
1	Instrument Panel Upper Trim Panel Fastener **Caution:** Refer to Fastener Caution .
2	Instrument Panel Upper Trim Panel **Procedures** 1. Use a flat bladed plastic trim tool in order to disengage the retainers securing the upper trim panel to the instrument panel assembly. 2. When replacing the instrument panel upper trim panel, transfer all necessary components.

© 2011 General Motors. All rights reserved.

cardiagn.com

Instrument Panel Fuse Block Access Hole Cover Replacement

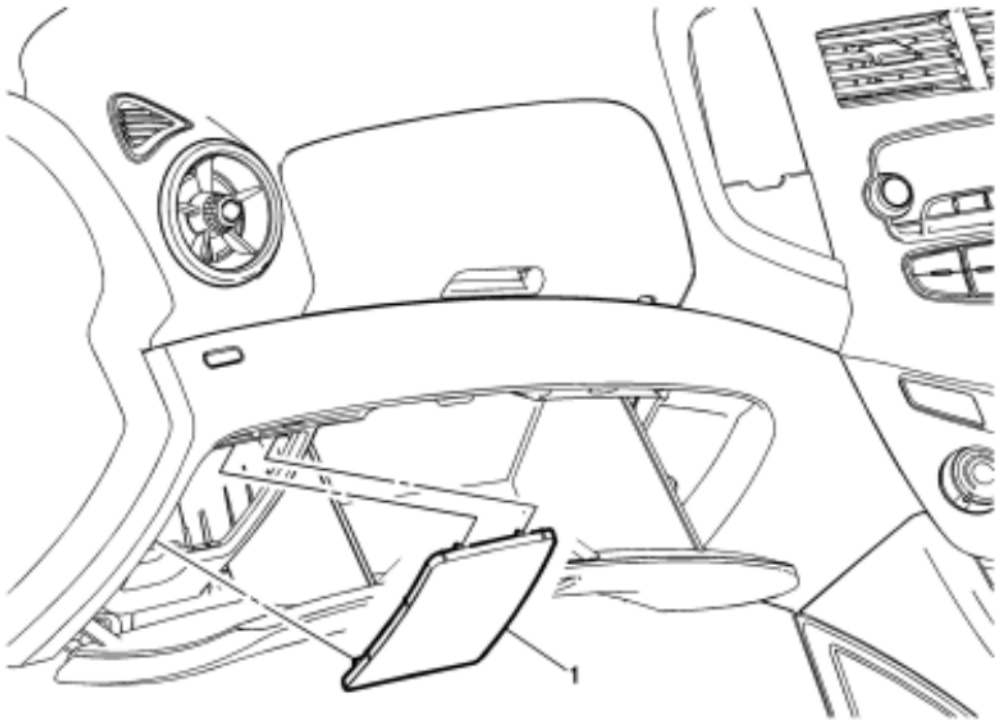


Callout	Component Name
1	Instrument Panel Fuse Block Access Hole Cover **Procedure** Grasp the lower edge of the fuse block cover and pull outward disengaging the retainers securing the fuse block cover to the instrument panel compartment housing.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Outer Trim Cover Replacement

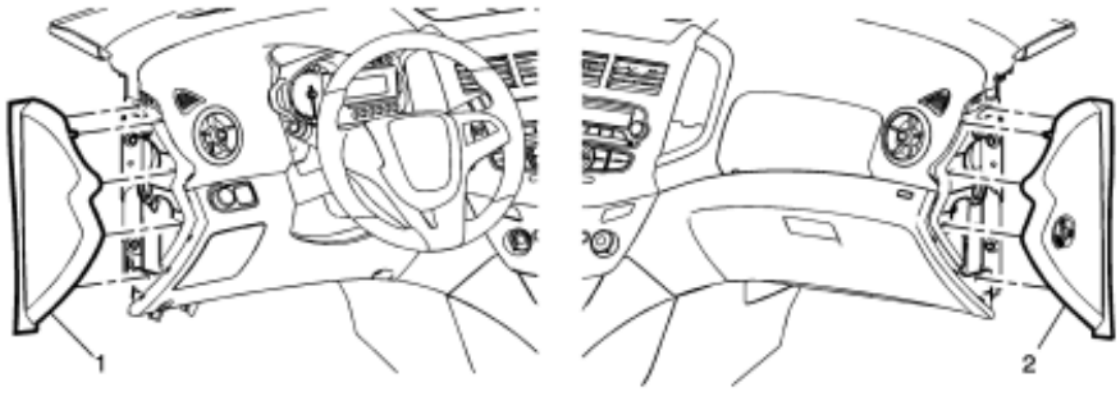


Callout	Component Name
1	Instrument Panel Outer Trim Cover (Left) **Procedures** Use a flat bladed plastic trim tool in order to disengage the retainers securing the instrument panel outer trim covers to the instrument panel assembly.
2	Instrument Panel Outer Trim Cover (Right) **Procedure** 1. Use a flat bladed plastic trim tool in order to disengage the retainers securing the instrument panel outer trim covers to the instrument panel assembly. 2. Disconnect the electrical connections. 3. When replacing the instrument panel outer trim cover, transfer all necessary components.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Cluster Upper Bezel Replacement

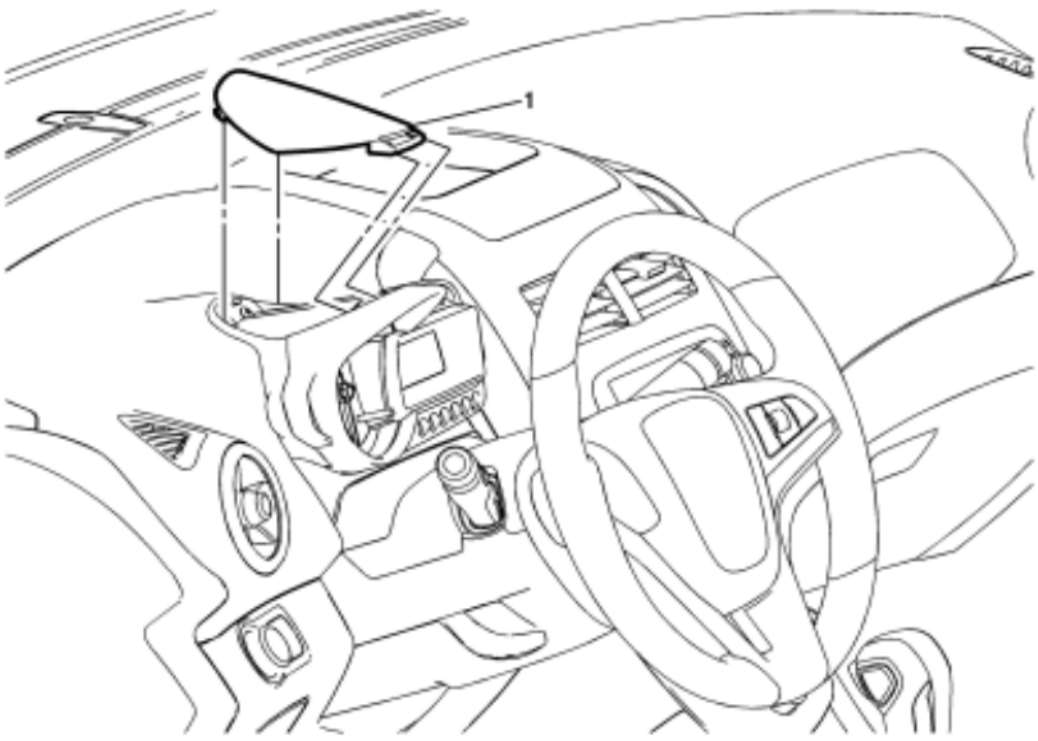


Callout	Component Name
1	Instrument Panel Cluster Upper Bezel **Procedures** Use a flat bladed plastic trim tool in order to disengage the retainers securing the instrument panel cluster upper bezel to the instrument cluster assembly.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Lower Trim Pad Cover Replacement

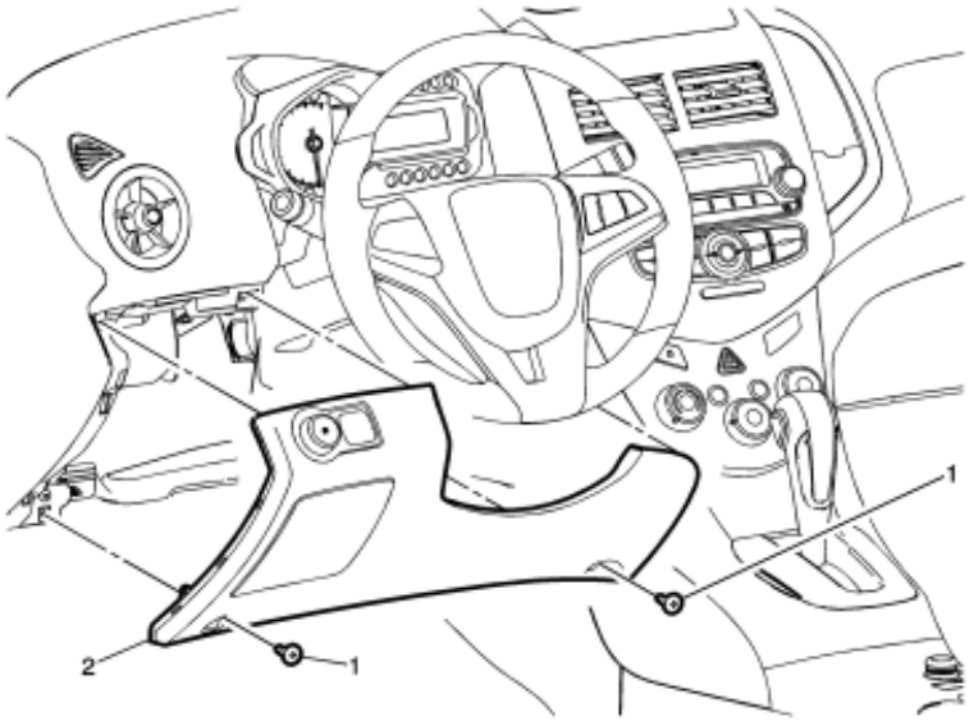


Callout	Component Name
1	Instrument Panel Lower Trim Pad Fastener (Qty: 2) **Caution:** Refer to Fastener Caution .
2	Instrument Panel Lower Trim Pad Assembly **Procedures** 1. Use a flat bladed plastic trim tool in order to disengage the retainers securing the lower trim pad to the instrument panel assembly. 2. Disconnect the electrical connectors. 3. When replacing the instrument panel lower trim pad, transfer all necessary components.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Upper Compartment Door Latch Replacement

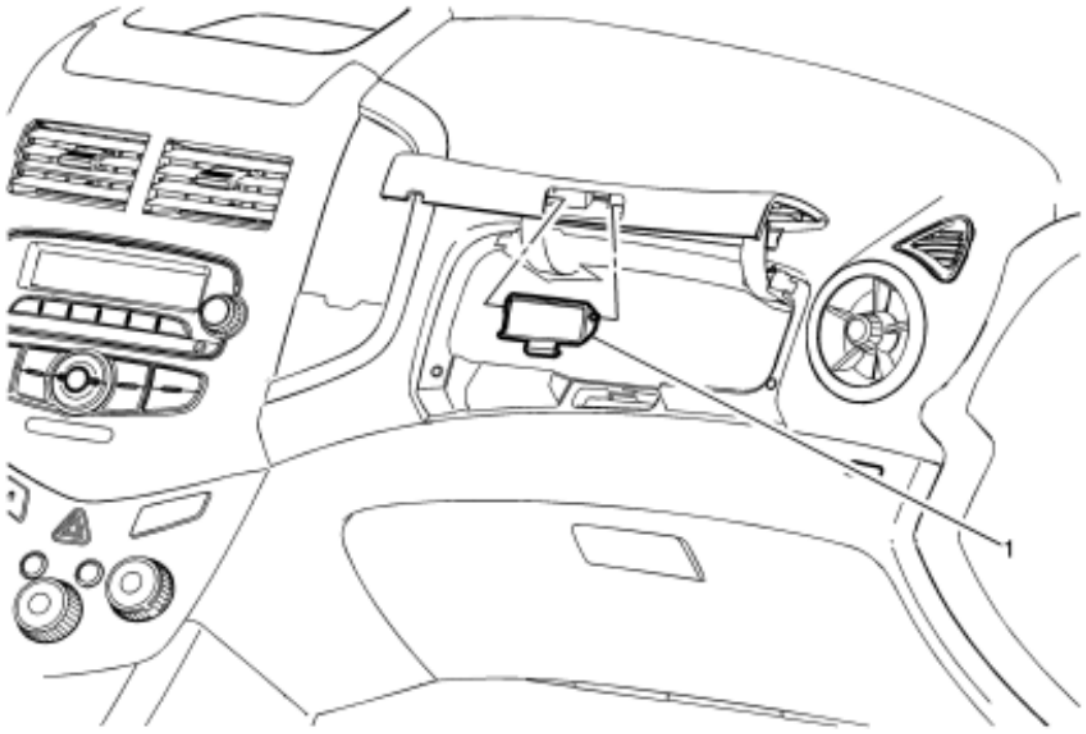


Callout	Component Name
1	Instrument Panel Upper Compartment Door Latch **Procedures** 1. Open the instrument panel compartment door. 2. Unsnap the instrument compartment door latch from the door assembly.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Compartment Housing Replacement (RHD)

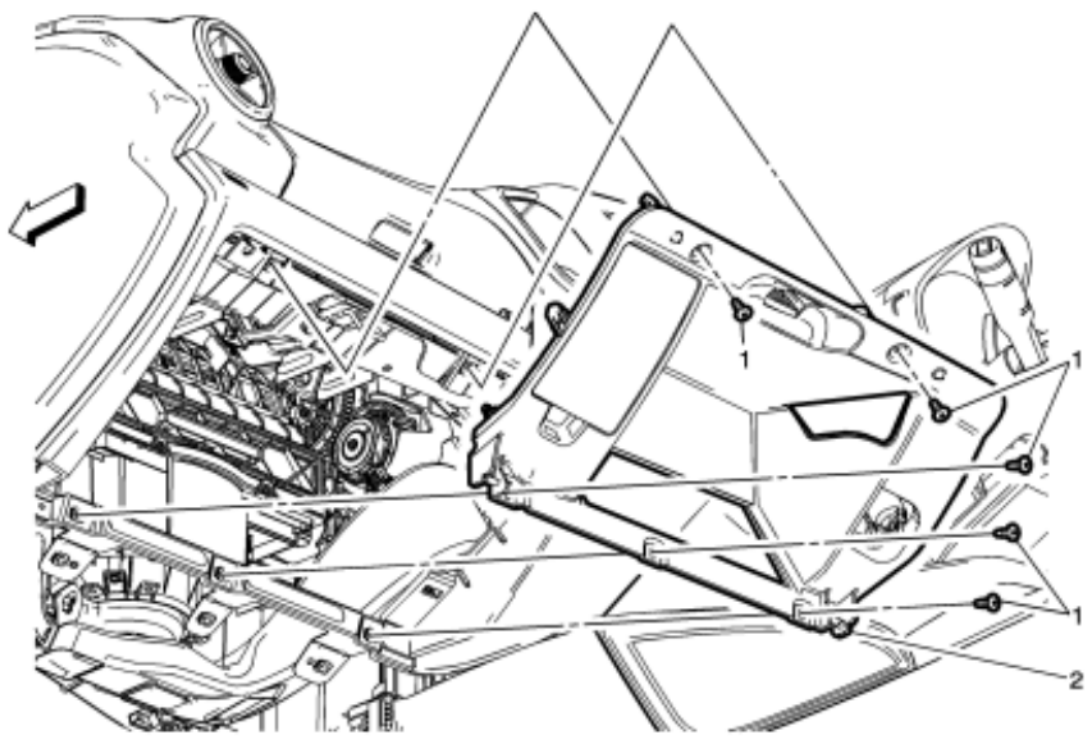


Callout	Component Name
Preliminary Procedure Remove the instrument panel lower compartment. Refer to Instrument Panel Lower Compartment Replacement .	
1	Instrument Panel Compartment Housing Fastener (Qty: 5) **Caution:** Refer to Fastener Caution .
2	Instrument Panel Compartment Housing **Procedure** Grasp the housing and pull downward disengaging the retainer clips securing the housing to the instrument panel.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Compartment Replacement

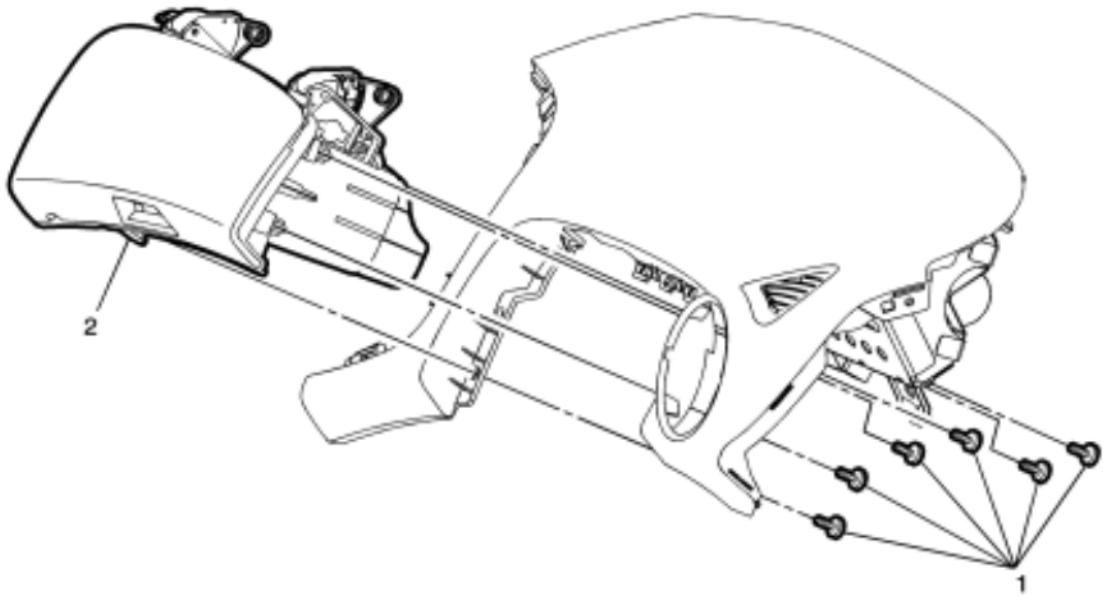


Callout	Component Name
Preliminary Procedure Remove the right instrument panel upper trim panel. Refer to Instrument Panel Upper Trim Panel Replacement - Right Side .	
1	Instrument Panel Compartment Fastener (Qty: 6) **Caution:** Refer to Fastener Caution .
2	Instrument Panel Compartment **Procedure** When replacing the instrument panel compartment, transfer all necessary components if applicable.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Lower Compartment Replacement

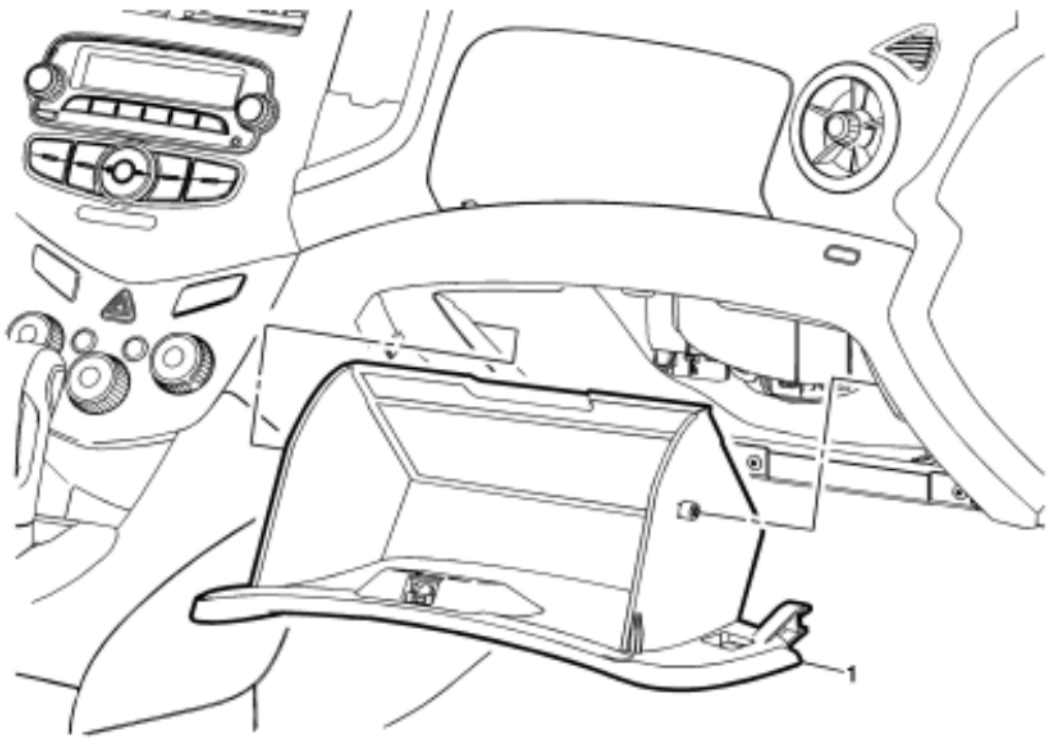


Callout	Component Name
Preliminary Procedure 1. Open the instrument panel lower compartment to the full open position. 2. Disconnect the instrument panel compartment dampener from the compartment assembly.	
1	Instrument Panel Lower Compartment Assembly **Procedures** 1. Squeeze the sides of the compartment assembly and allow the compartment to move past the compartment stops. 2. Unsnap the compartment assembly from the instrument panel assembly. 3. When replacing the instrument panel lower compartment, transfer all necessary components.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Compartment Door Latch Replacement

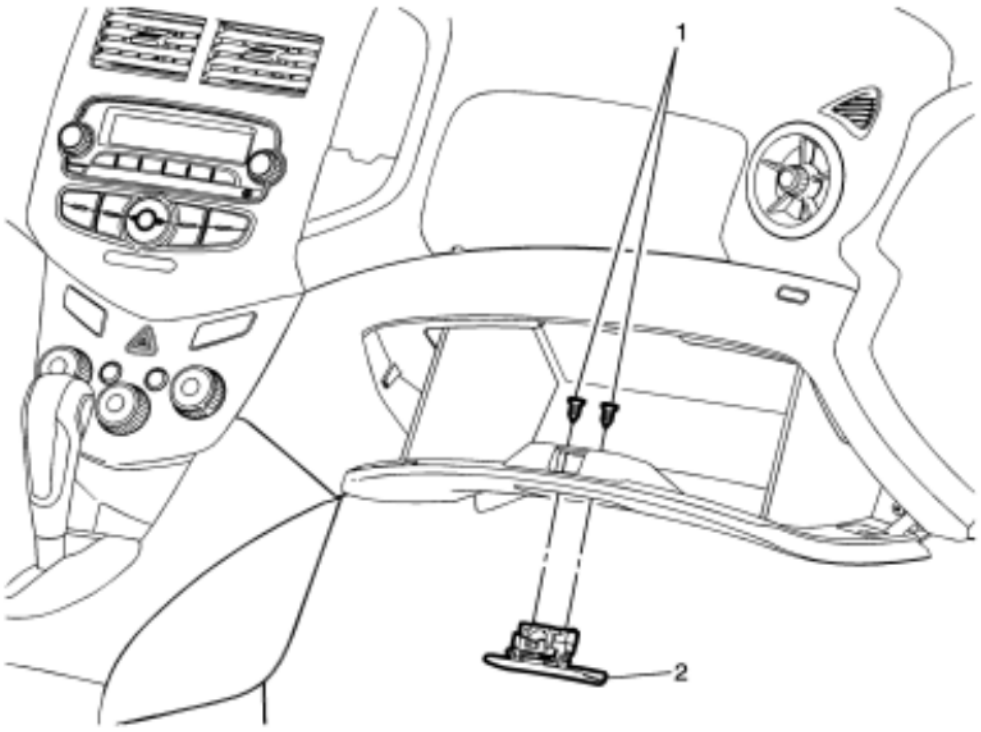


Callout	Component Name
1	Instrument Panel Compartment Door Latch Fasteners (Qty: 2) **Caution:** Refer to Fastener Caution .
2	Instrument Panel Compartment Door Latch Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Compartment Door Dampener Replacement

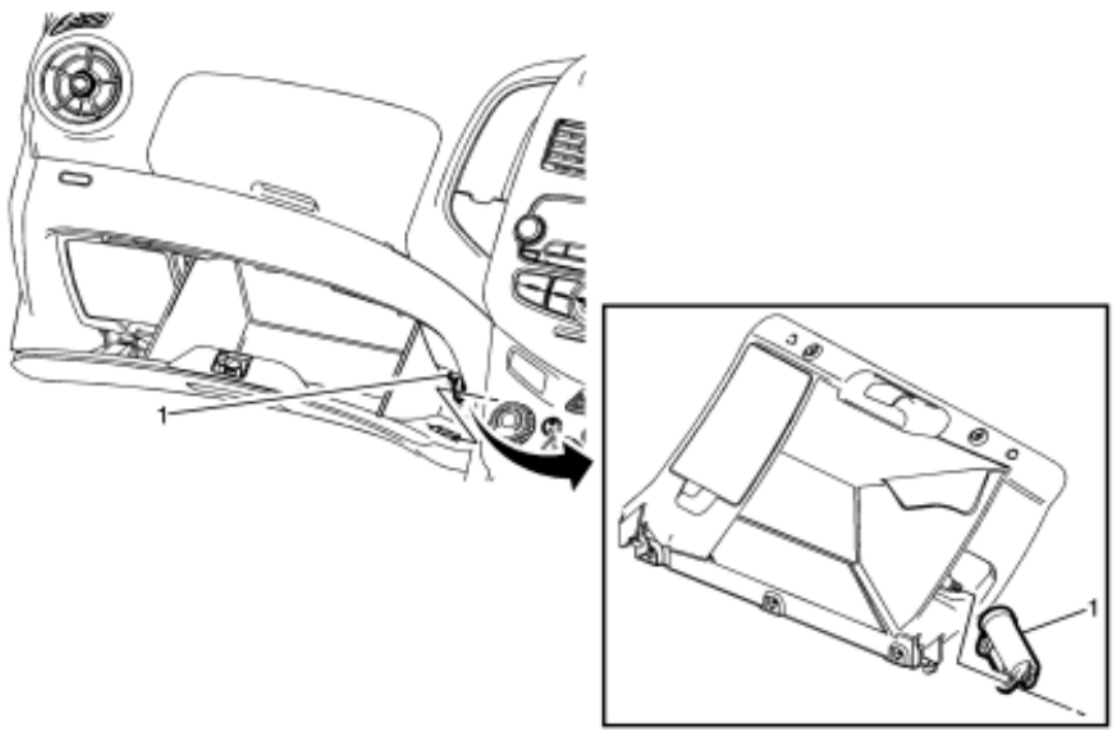


Callout	Component Name
Preliminary Procedure Remove the instrument panel lower compartment. Refer to Instrument Panel Lower Compartment Replacement .	
1	Instrument Panel Compartment Door Dampener **Procedure** Unsnap the dampener assembly from the instrument panel compartment housing.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Center Molding Replacement (With U58)

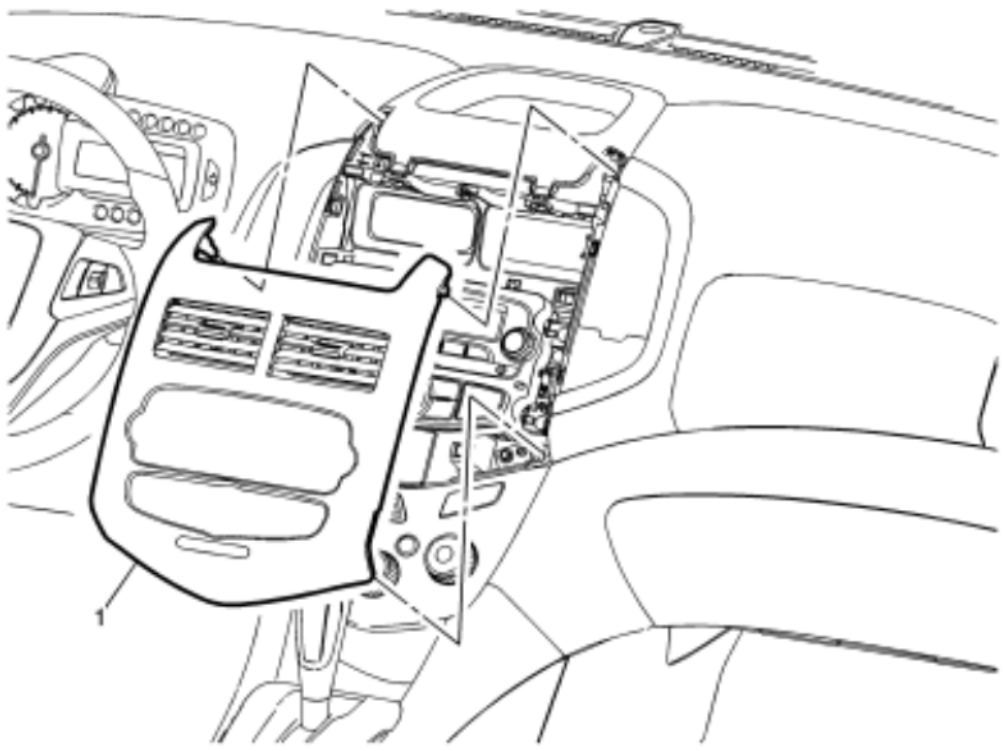


Callout	Component Name
1	Instrument Panel Center Molding Assembly **Procedure** 1. Use a flat bladed plastic trim tool in order to release the retainers securing the center molding to the instrument panel assembly. 2. When replacing the center molding assembly, transfer all necessary components.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Center Molding Replacement (Without U58)

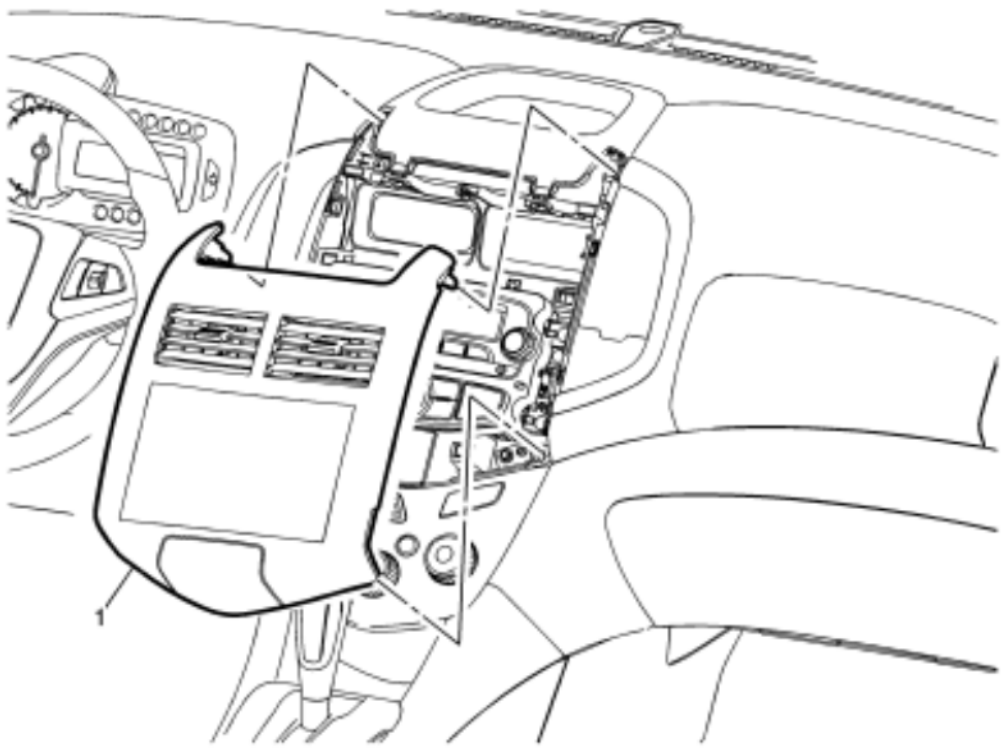


Callout	Component Name
1	Instrument Panel Center Molding Assembly **Procedure** 1. Use a flat bladed plastic trim tool in order to release the retainers securing the center molding to the instrument panel assembly. 2. When replacing the center molding assembly, transfer all necessary components.

cardiagn.com

© 2011 General Motors. All rights reserved.

Instrument Panel Assembly Replacement

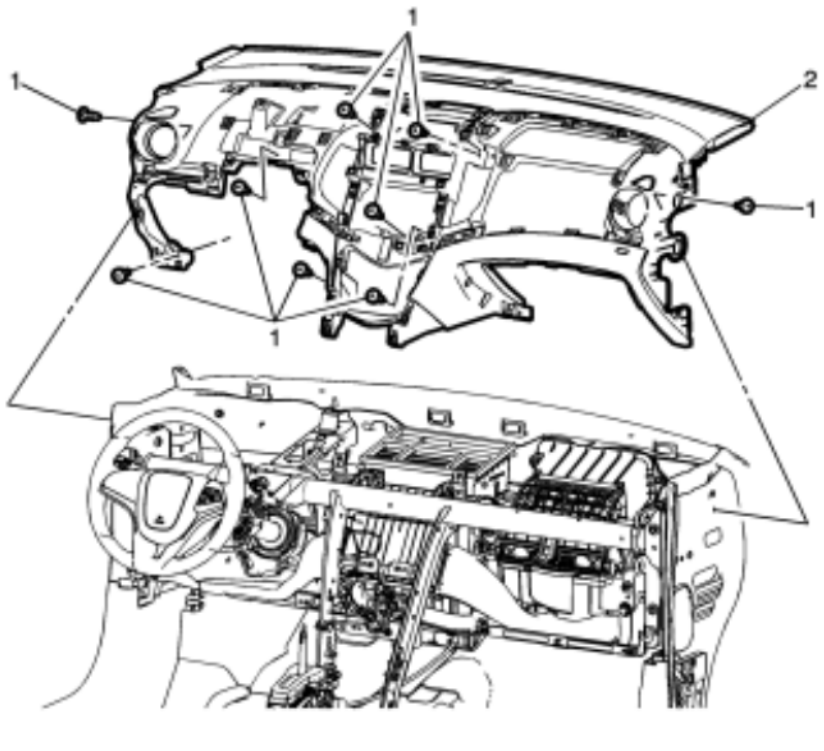

Callout	Component Name
	Preliminary Procedure 1. Remove the right and left windshield side garnish moldings. Refer to Windshield Side Garnish Molding Replacement . 2. Remove the front floor console assembly. Refer to Front Floor Console Replacement . 3. Remove the right and left instrument panel upper trim panels. Refer to Instrument Panel Upper Trim Panel Replacement - Right Side and Instrument Panel Upper Trim Panel Replacement - Left Side . 4. Remove the radio assembly. Refer to Radio Replacement . 5. Remove the heater and air conditioning control assembly. Refer to Heater and Air Conditioning Control Replacement . 6. Remove the instrument panel lower trim pad cover. Refer to Instrument Panel Lower Trim Pad Cover Replacement . 7. Remove the instrument panel insulator. Refer to Instrument Panel Insulator Replacement 8. Note location and routing of the instrument panel electrical harness assembly in order to ensure proper installation.
1	Instrument Panel Fastener (Qty: 9) **Caution:** Refer to Fastener Caution .
2	Instrument Panel Assembly **Procedures** 1. With the aid of an assistant lift the instrument panel assembly rearward and upward away from the tie bar assembly. 2. Disconnect the electrical connectors. 3. Remove the instrument panel assembly from the vehicle. 4. When replacing the instrument panel assembly, transfer all necessary components.


© 2011 General Motors. All rights reserved.

cardiagn.com


Instrument Panel Tie Bar Replacement

Removal Procedure


1. Remove the Instrument panel assembly. Refer to Instrument Panel Assembly Replacement .
2. Remove the steering column and wheel from the vehicle. Refer to Steering Column Replacement .
3. Remove the air inlet grill panel. Refer to Air Inlet Grille Panel Replacement .

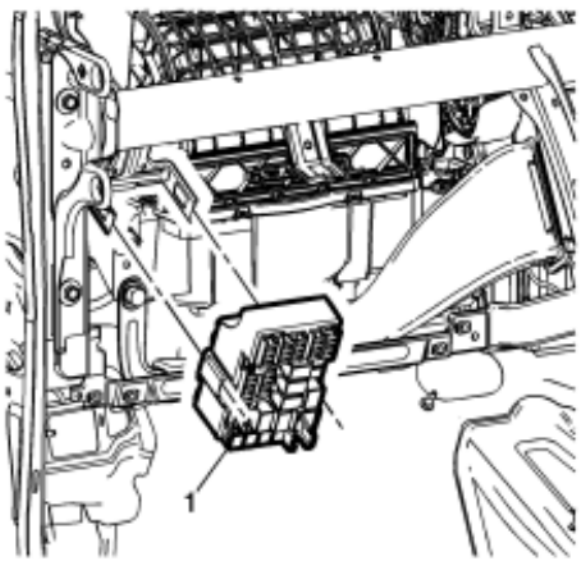

4. Unsnap the instrument panel fuse block (1) from the instrument panel tie bar assembly and position out of the way.

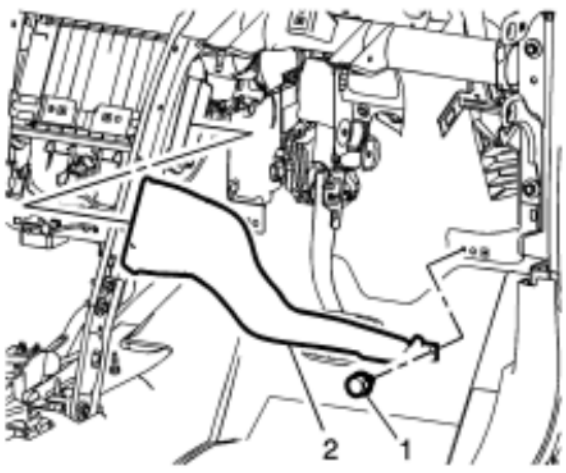


5. Remove the push-pin fastener (1) securing the left floor air outlet duct (2) to the instrument panel tie bar assembly.
6. Remove the left floor air outlet duct (2) from the vehicle.

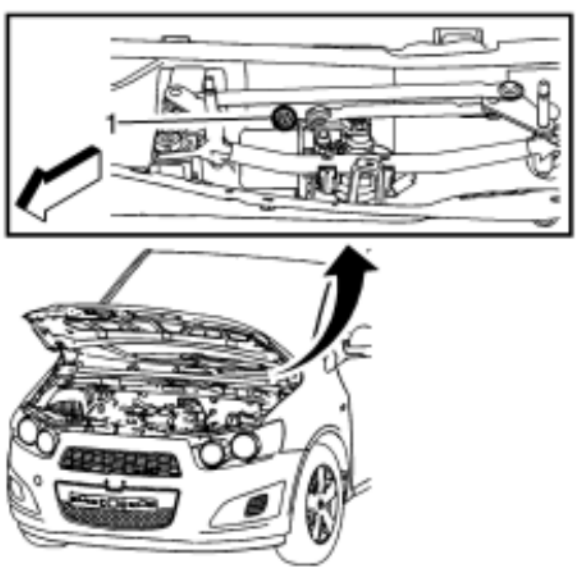


7. Remove the nut (1) securing the instrument panel tie bar assembly to the cowl panel.


cardiagn.com

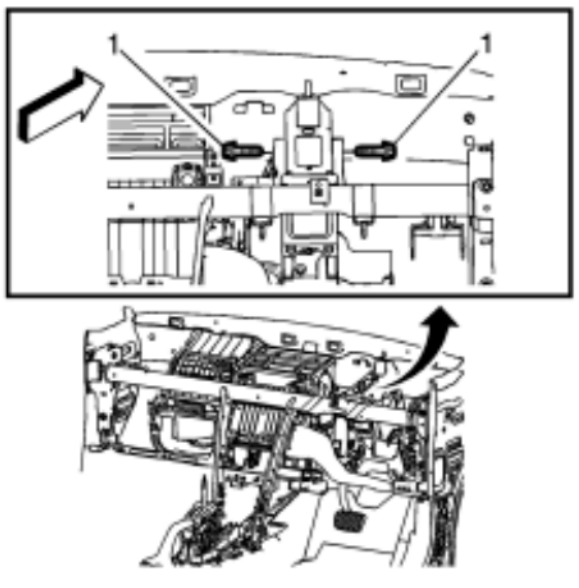

8. Remove the bolts (1) securing the instrument panel tie bar assembly to the brake pedal bracket.

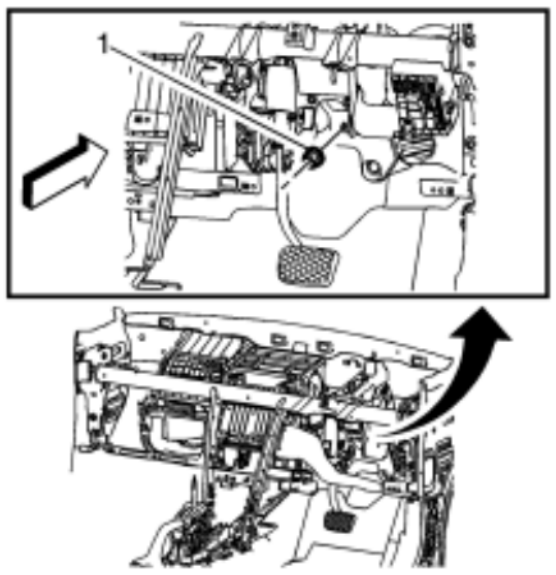


9. Remove nut (1) securing the instrument panel tie bar to the brake pedal mounting bracket.

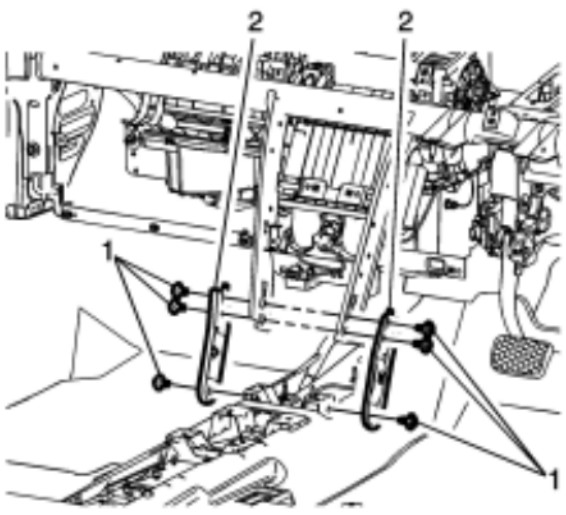


10. Remove the bolts (1) securing the right and left instrument panel tie bar lower support brackets (2) to the front floor tunnel panel.

cardiagn.com

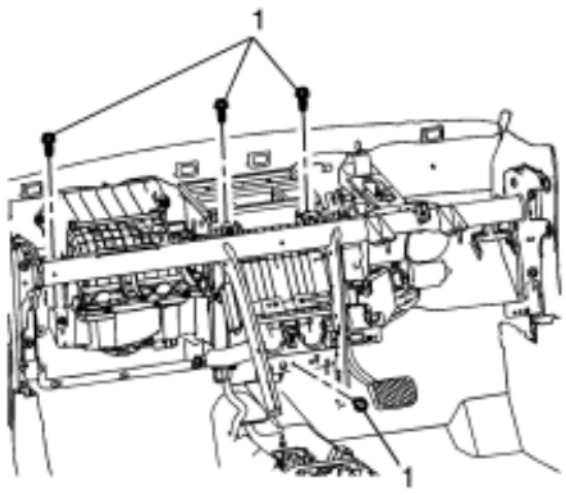


11. Remove the fasteners (1) securing the instrument panel tie bar assembly to the HVAC module.

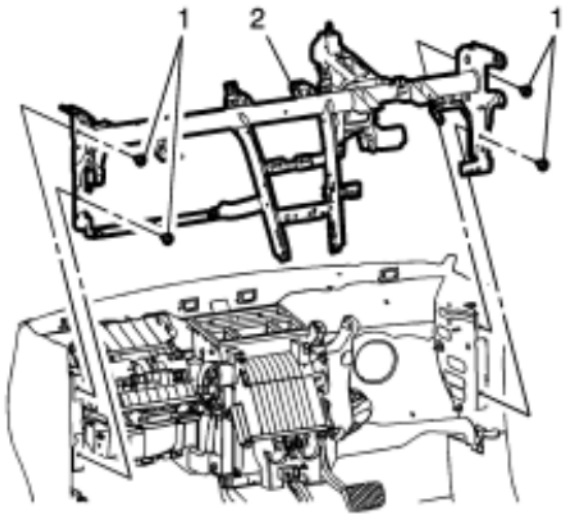

12. Remove the bolts (1) securing the instrument panel tie bar assembly to the vehicle body.
13. Note the location and routing of the instrument panel wiring harness in order to ensure proper installation.
14. Support the HVAC module in order to prevent damage.
15. With the aid of an assistant remove the instrument panel tie bar assembly (2) from the vehicle.


Installation Procedure

1. With the aid of an assistant position the instrument panel tie bar assembly (2) into the vehicle.
2. Install the instrument panel wiring harness assembly to its in vehicle position as it was noted in the removal procedure.

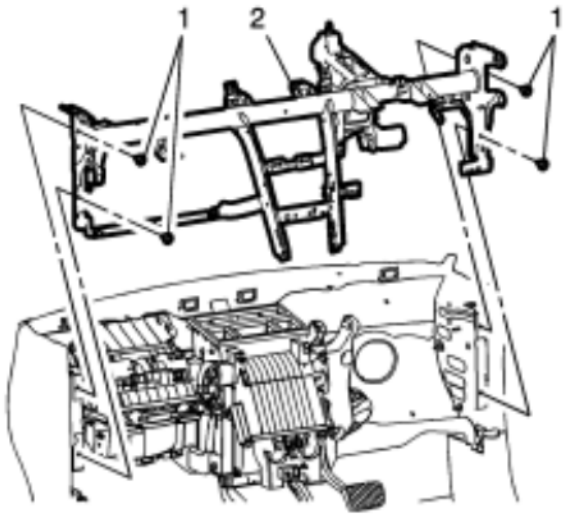


3. Loosely install the bolts (1) securing the instrument panel tie bar assembly to the vehicle body.


cardiagn.com

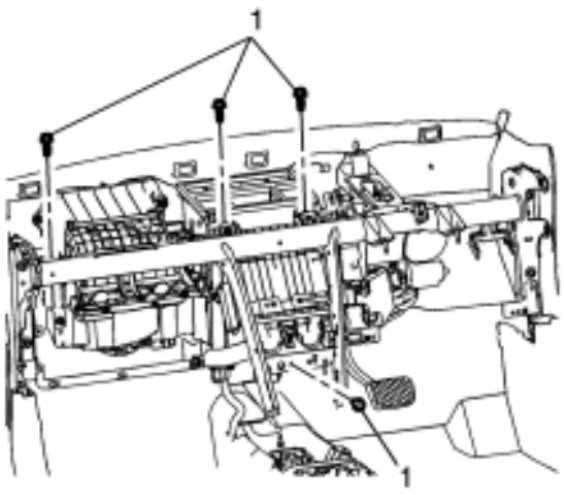

4. Loosely install the fasteners (1) securing the instrument panel tie bar assembly to the HVAC module.

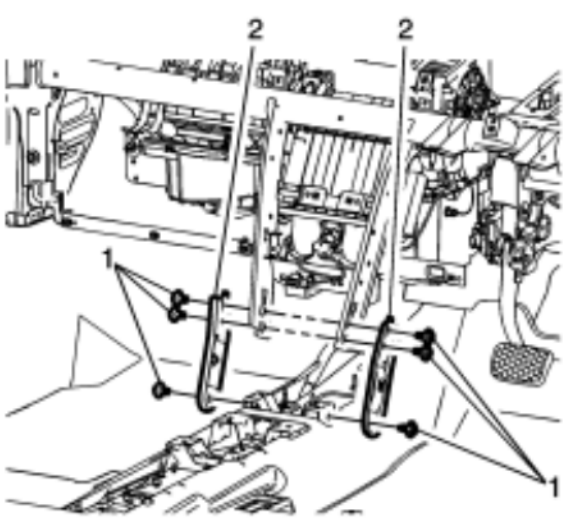


5. Loosely install the bolts (1) securing the right and left instrument panel tie bar lower support brackets (2) to the front floor tunnel panel.

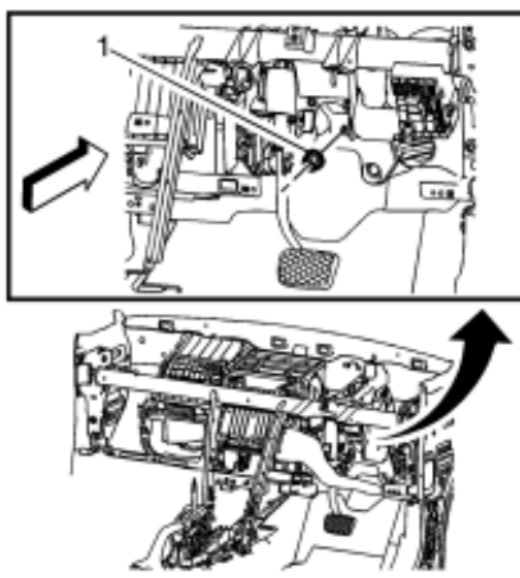


6. Loosely install the nut (1) securing the instrument panel tie bar to the brake pedal mounting bracket.

cardiagn.com

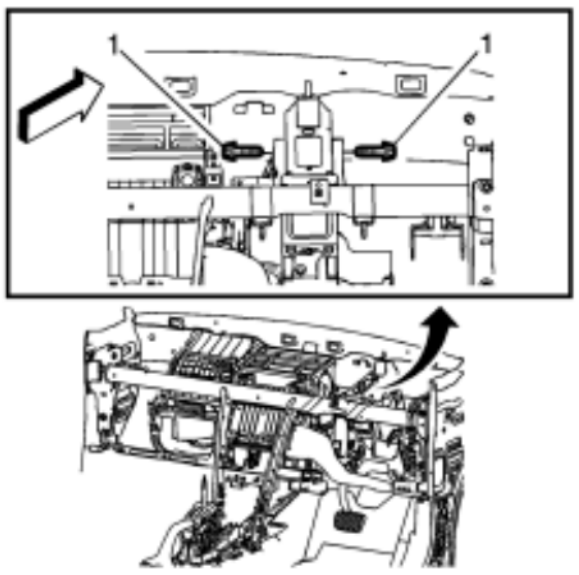


7. Loosely install the bolts(1) securing the instrument panel tie bar assembly to the brake pedal bracket.

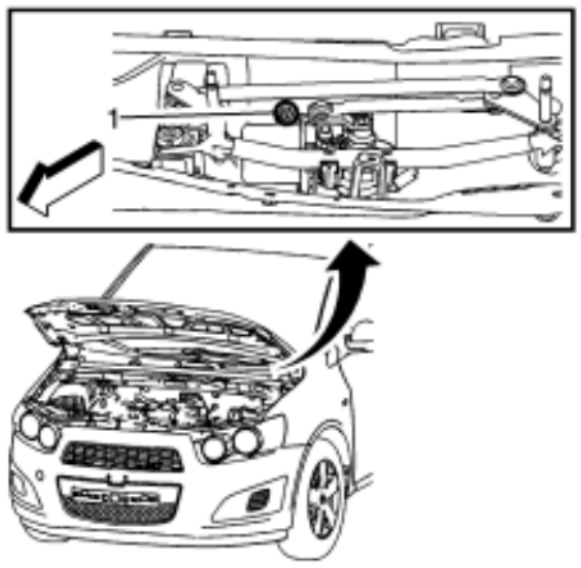

8. Loosely install the nut(1) securing the instrument panel tie bar assembly to the cowl panel.


Caution: Refer to Fastener Caution .

9. Tighten the instrument panel tie bar to vehicle body bolts to **22N·m(16lbft).**
10. Tighten the instrument panel tie bar to HVAC module fasteners to **9N·m(80lbin).**
11. Tighten the instrument panel tie bar lower support bracket to front floor tunnel panel bolts to **22N·m(16lbft).**
12. Tighten the instrument panel tie bar to brake pedal mounting bracket nut to **22N·m(16lbft).**
13. Tighten the instrument panel tie bar assembly to the brake pedal bracket bolts to **9N·m(80lbin).**
14. Tighten the instrument panel tie bar assembly to the cowl panel nut to **22N·m(16lbft).**

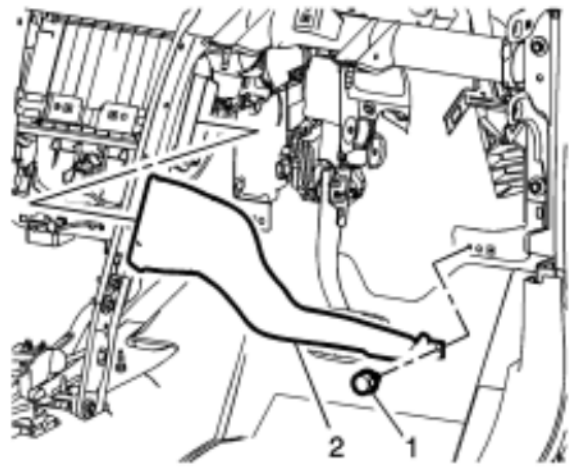

15. Install the left floor air outlet duct(2) into the vehicle.
16. Install the push-pin fastener(1) securing the left floor air outlet duct(2) to the instrument panel tie bar assembly.


cardiagn.com

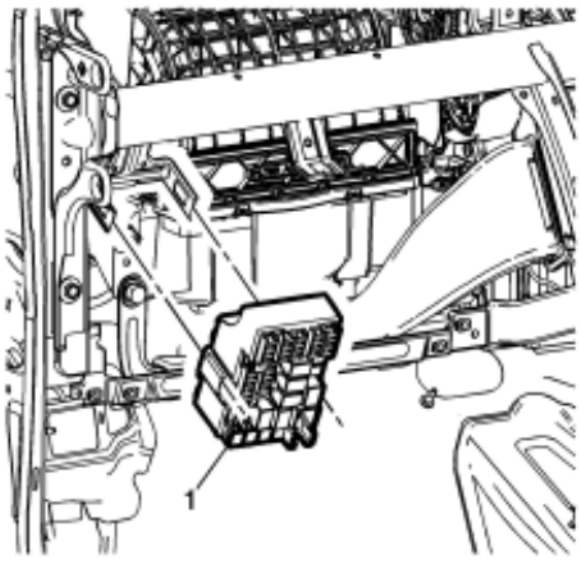

17. Install the instrument panel fuse block (1) onto the instrument panel tie bar assembly.
18. Install the air inlet grill panel. Refer to Air Inlet Grille Panel Replacement .
19. Install the steering column and wheel from the vehicle. Refer to Steering Column Replacement .
20. Install the Instrument panel assembly. Refer to Instrument Panel Assembly Replacement .

© 2011 General Motors. All rights reserved.
cardiagn.com

Front Floor Console Cover Replacement (Automatic Transmission)

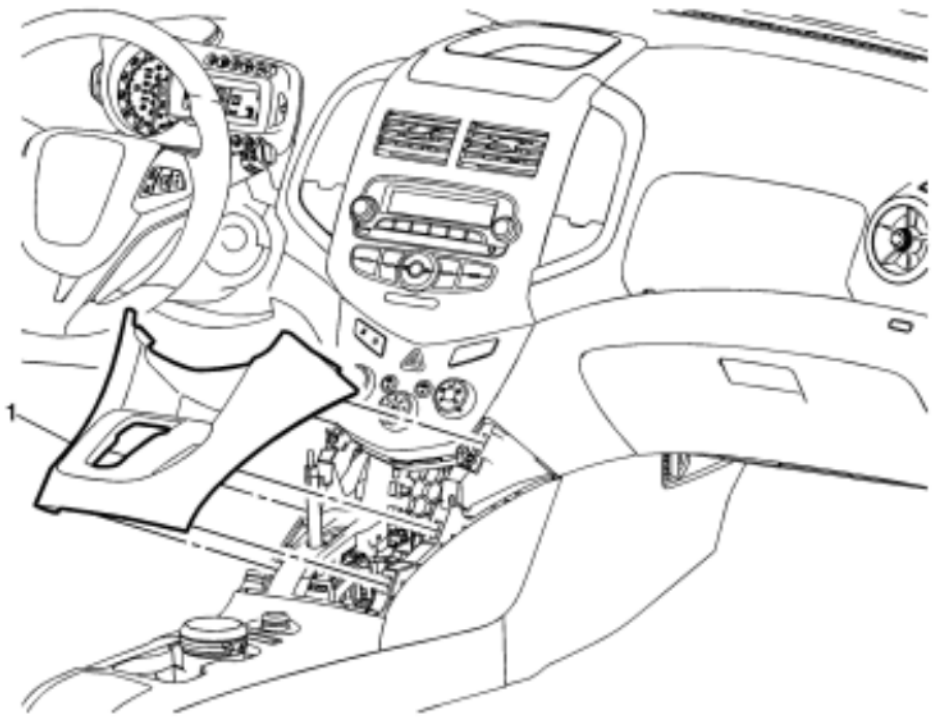


Callout	Component Name
1	Front Floor Console Cover Assembly **Procedures** 1. Apply the parking brake. 2. Move the shifter from "Park" to the "Neutral" position. 3. Use a flat-bladed plastic trim tool in order to release the retainers securing the console cover to the console assembly. 4. Disconnect the electrical connections. 5. When replacing the console cover, transfer all necessary components.

cardiagn.com


© 2011 General Motors. All rights reserved.

Front Floor Console Cover Replacement (Manual Transmission)


Removal Procedure

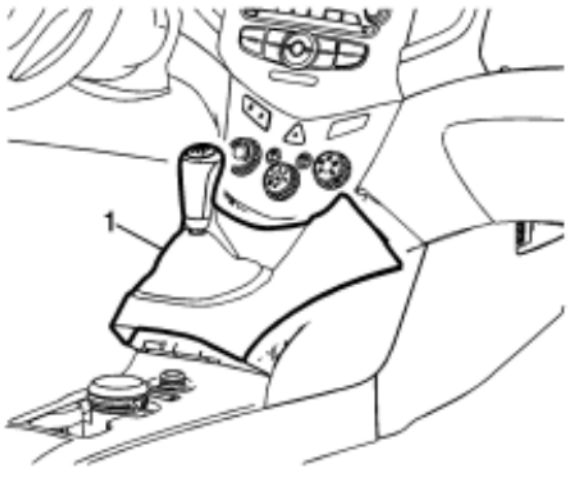

1. Use a flat bladed plastic trim tool in order to release the retainers securing the console cover (1) to the console assembly.

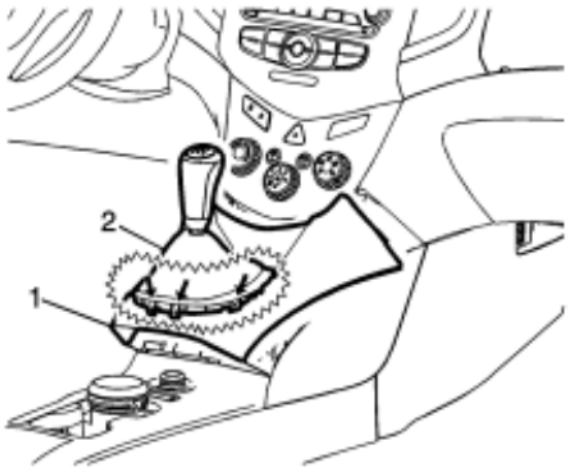

2. Reach under the console cover assembly (1) and release the retainer tabs securing the transmission shift lever boot (2) to the console cover assembly.

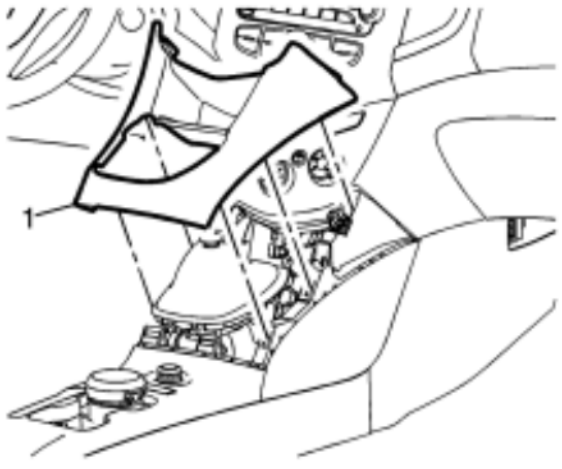


3. Feed the transmission control lever boot assembly thru the opening in the console cover assembly (1).
4. Remove the console cover assembly (1) from the vehicle.


© 2011 General Motors. All rights reserved.

cardiagn.com

Installation Procedure

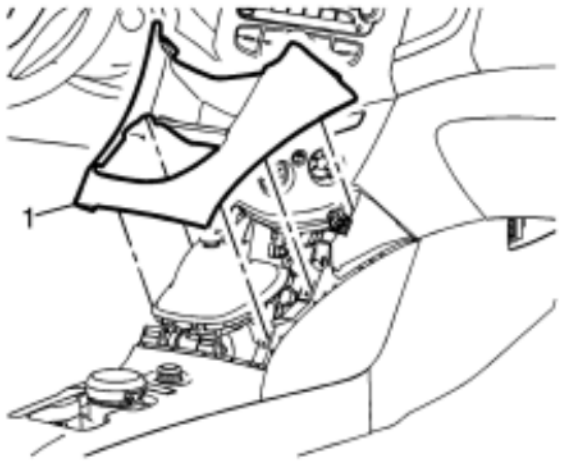


1. Position the console cover assembly (1) to the console assembly.
2. Feed the transmission control lever boot assembly thru the opening in the console cover assembly (1).

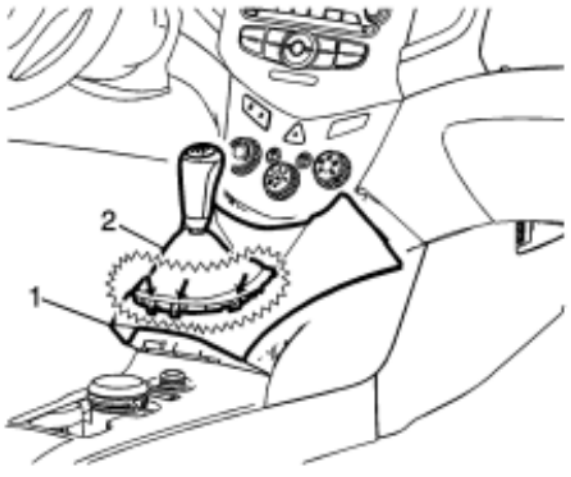

3. Snap the transmission control lever boot assembly (2) to the console cover (1) ensuring the retainer tabs lock the boot assembly to the cover.
4. Install the cover assembly to the console.

cardiagn.com

Front Floor Console Cup Holder Replacement

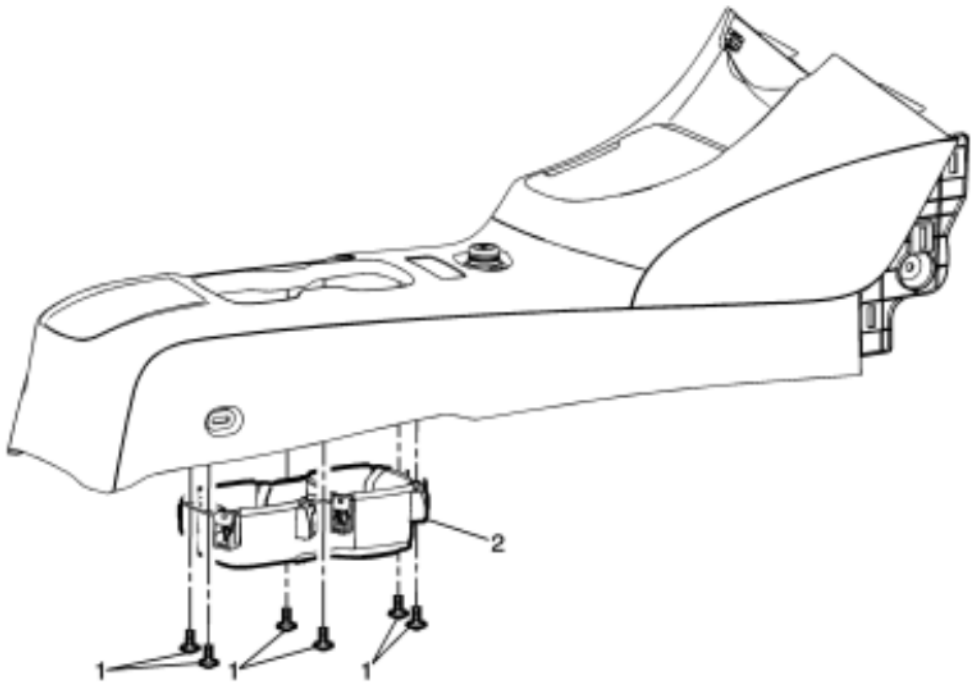


Callout	Component Name
Preliminary Procedure Remove the front floor console assembly. Refer to Front Floor Console Replacement .	
1	Front Floor Console Cup Holder Fasteners (Qty: 6) **Caution:** Refer to Fastener Caution .
2	Front Floor Console Cup Holder Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Automatic Transmission Control Indicator Opening Cover Replacement

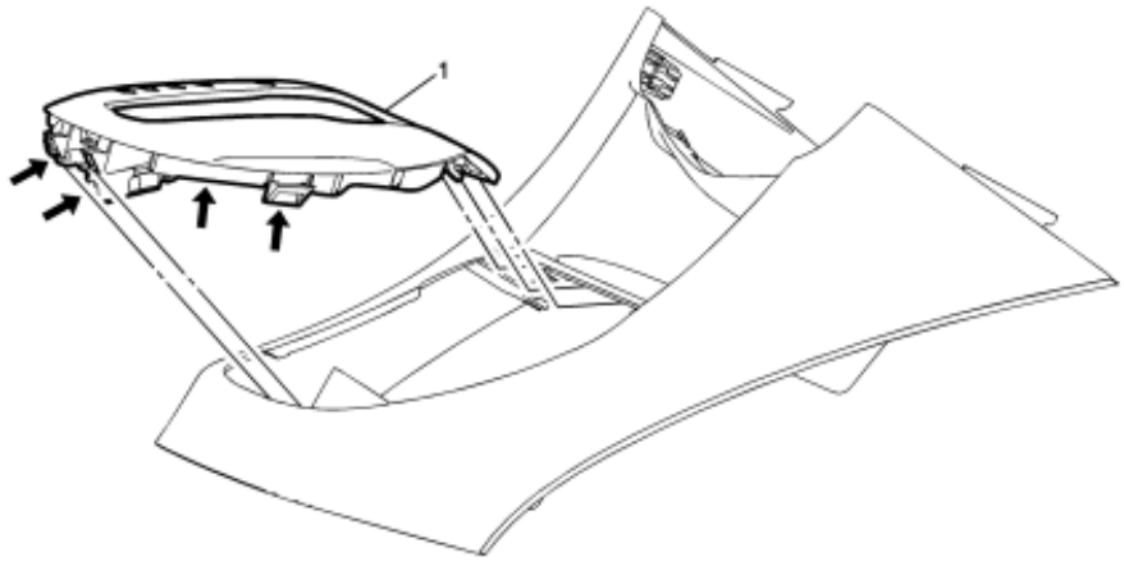


Callout	Component Name
Preliminary Procedure Remove the front floor console cover. Refer to Front Floor Console Cover Replacement .	
1	Automatic Transmission Control Indicator Opening Cover Assembly **Procedure** Release the retainer clips securing the transmission control indicator to the front floor console cover.

cardiagn.com

© 2011 General Motors. All rights reserved.

Front Floor Console Extension Replacement - Right Side

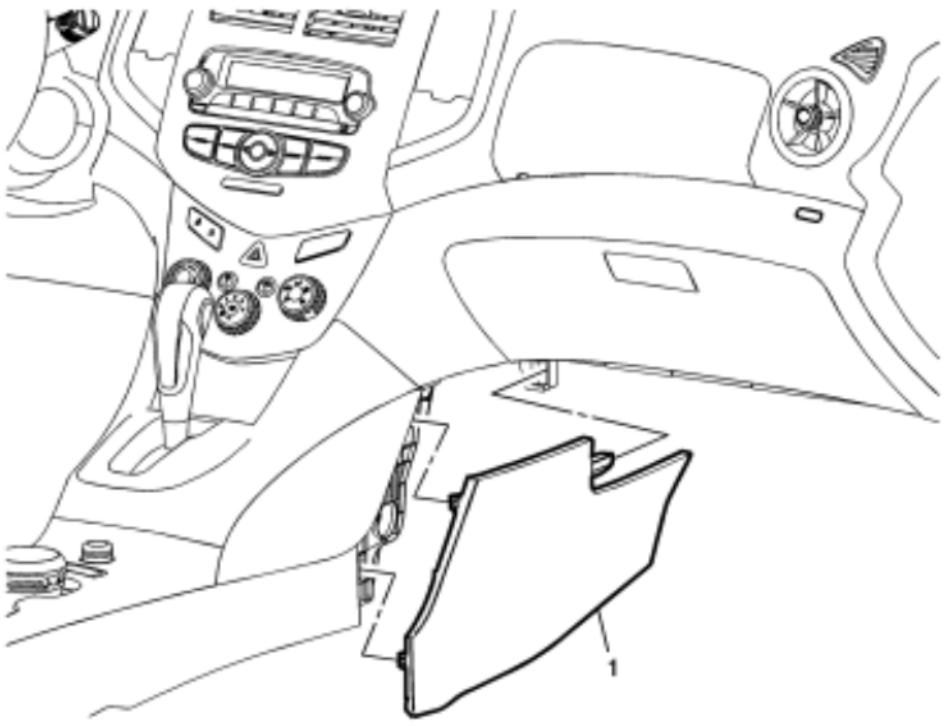


Callout	Component Name
1	Front Floor Console Extension **Procedure** Use a flat bladed plastic trim tool in order to release the retainers securing the extension to the console assembly.

cardiagn.com

© 2011 General Motors. All rights reserved.

Front Floor Console Extension Replacement - Left Side

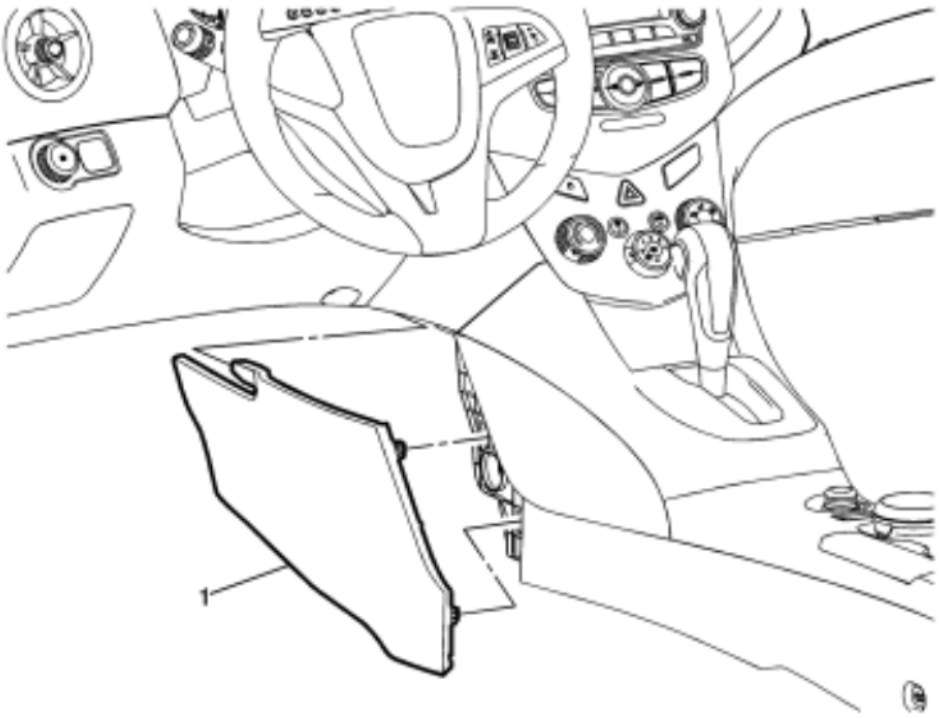


Callout	Component Name
1	Front Floor Console Extension **Procedure** Use a flat bladed plastic trim tool in order to release the retainers securing the extension to the console assembly.

cardiagn.com

© 2011 General Motors. All rights reserved.

Front Floor Console Replacement

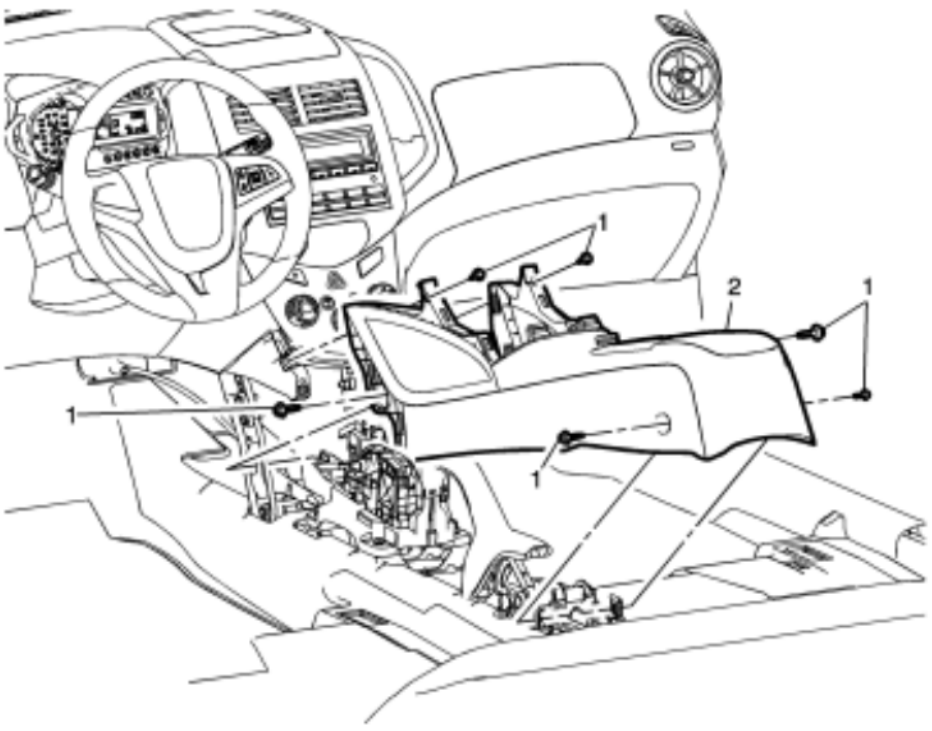


Callout	Component Name
Preliminary Procedures 1. Remove the right and left front floor console extensions. Refer to Front Floor Console Extension Replacement - Right Side and Front Floor Console Extension Replacement - Left Side . 2. Remove the front floor console cover assembly. Refer to Front Floor Console Cover Replacement .	
1	Front Floor Console Fasteners (Qty: 6) **Caution:** Refer to Fastener Caution . **Procedure** Move the front seats to the full forward position to access the front floor console rear fasteners.
2	Front Floor Console **Procedures** 1. Disconnect the electrical connections. 2. When replacing the console, transfer all necessary components.

© 2011 General Motors. All rights reserved.

cardiagn.com

Instrument Cluster Replacement

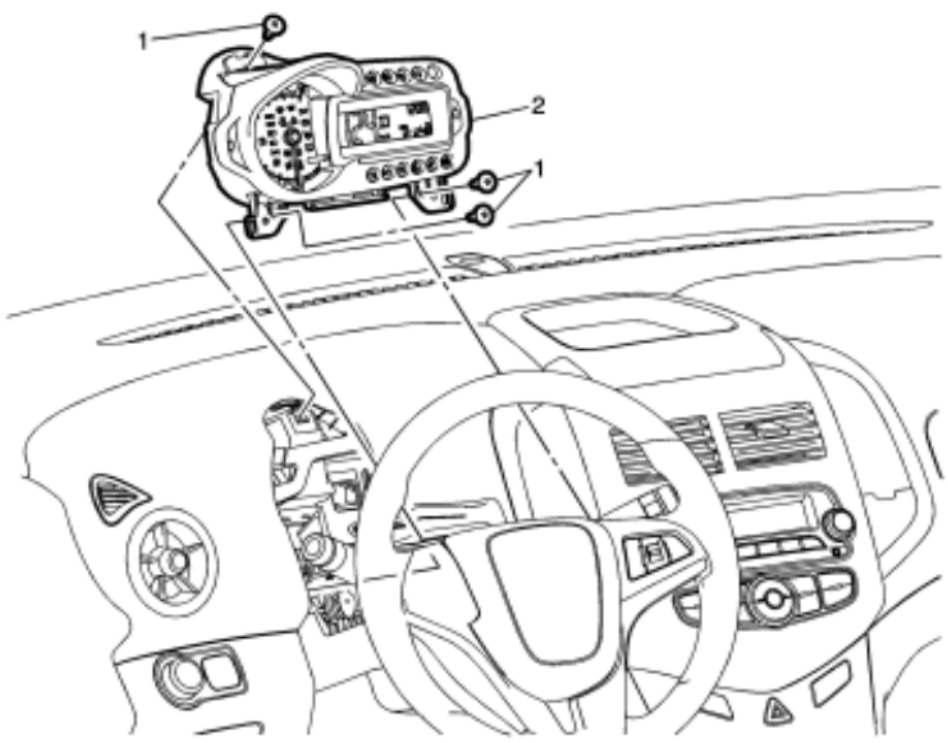

Callout	Component Name
Preliminary Procedure 1. Remove the instrument panel cluster upper bezel. Refer to Instrument Cluster Upper Bezel Replacement . 2. Remove the instrument panel steering column upper trim cover. Refer to Steering Column Upper Trim Cover Replacement .	
1	Instrument Cluster Fasteners (Qty: 3) **Caution:** Refer to Fastener Caution .
2	Instrument Cluster Assembly **Procedure** 1. Disconnect the electrical connector. 2. Refer to Control Module References for programming and set up information.

cardiagn.com

© 2011 General Motors. All rights reserved.

Specifications
Front Side Door Window Switch Bezel Replacement (Left Side)
Front Side Door Window Switch Bezel Replacement (Right Side)
Rear Side Door Window Switch Bezel Replacement
Front Side Door Upper Front Trim Panel Replacement
Front Side Door Trim Replacement
Rear Side Door Upper Rear Trim Panel Replacement (Hatchback)
Roof Rail Front Stowage Compartment Replacement
Roof Rail Front Assist Handle Replacement
Roof Rail Rear Assist Handle Replacement
Sunshade Replacement
Sunshade Support Replacement
Windshield Side Garnish Molding Replacement
Body Rear Seat Back Trim Panel Replacement (Sedan with AN1)
Body Rear Seat Back Trim Panel Replacement (Sedan with AMA)
Center Pillar Upper Trim Panel Replacement (With AHU)
Center Pillar Upper Trim Panel Replacement (Without AHU)
Center Pillar Lower Trim Panel Replacement
Body Lock Pillar Upper Trim Panel Replacement (Sedan)
Body Lock Pillar Upper Trim Panel Replacement (Hatchback)
Quarter Inner Trim Finish Panel Replacement (Hatchback)
Body Side Trim Panel Replacement (Sedan)
Rear Window Panel Trim Replacement (Sedan)
Rear Compartment Stowage Shelf Replacement (Hatchback)
Rear Side Door Trim Replacement (Hatchback)
Rear Side Door Trim Replacement (Sedan)
Luggage Shade Replacement (Hatchback)
Liftgate Trim Finish Panel Replacement (Hatchback)
Rear Compartment Sill Trim Plate Replacement
Rear Compartment Lid Inner Panel Trim Replacement (Sedan)
Rear Compartment Side Trim Replacement - Left Side (Sedan)
Rear Compartment Side Trim Replacement - Right Side (Sedan)
Quarter Outer Panel Pressure Relief Valve Replacement

cardiagn.com

© 2011 General Motors. All rights reserved.


Fastener Tightening Specifications

Application	Specification	
	Metric	English
Cargo Tie Down Hook Fastener	9 N·m	80 lb in
Roof Rail Front Assist Handle Fastener	6 N·m	53 lb in
Roof Rail Front Stowage Compartment Fastener	6 N·m	53 lb in
Roof Rail Rear Assist Handle Fastener	6 N·m	53 lb in

cardiagn.com

© 2011 General Motors. All rights reserved.

Front Side Door Window Switch Bezel Replacement (Left Side)

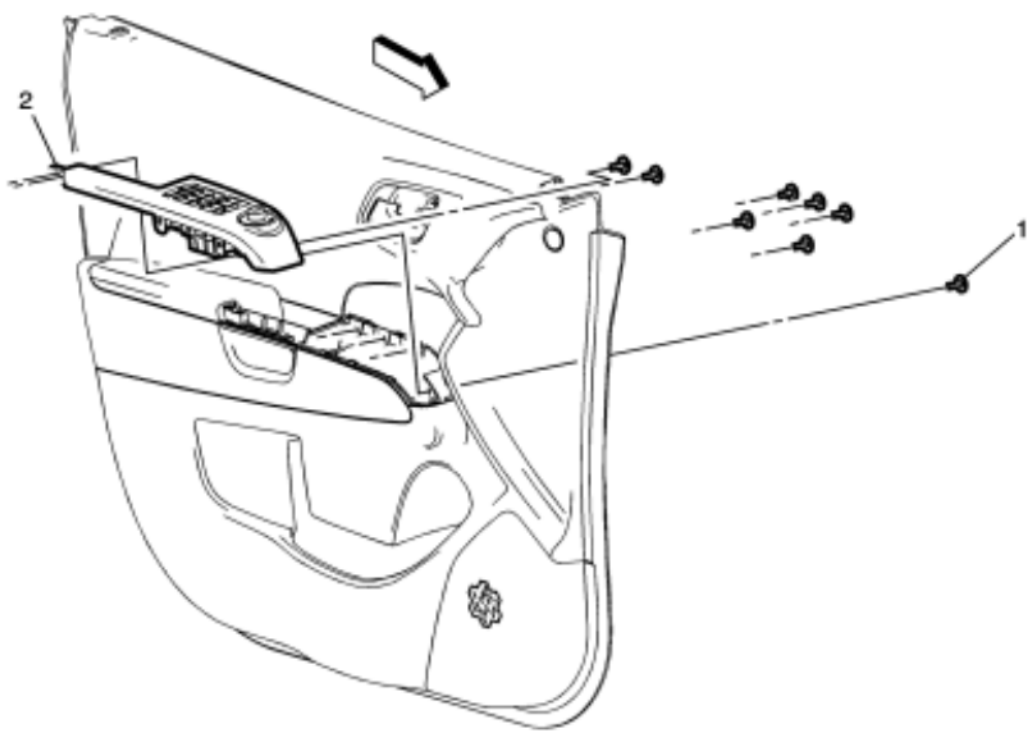


Callout	Component Name
Preliminary Procedure Remove the front side door trim. Refer to Front Side Door Trim Replacement .	
1	Front Side Door Window Switch Bezel Screw (Qty: 8) **Caution:** Refer to Fastener Caution .
2	Front Side Door Window Switch Bezel Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Front Side Door Window Switch Bezel Replacement (Right Side)

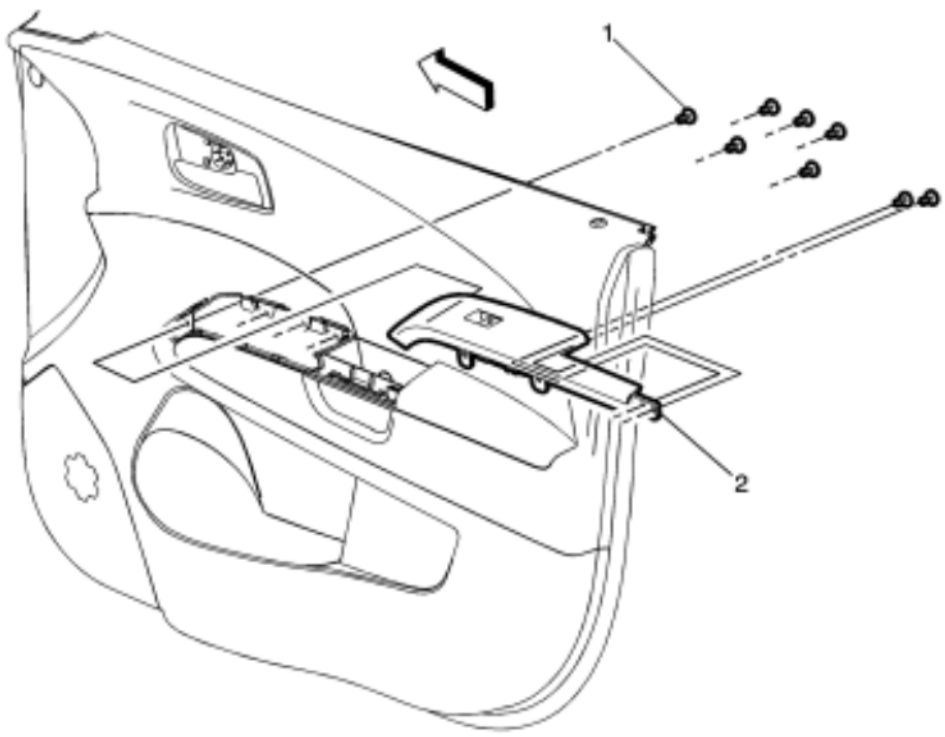


Callout	Component Name
Preliminary Procedure Remove the front side door trim. Refer to Front Side Door Trim Replacement .	
1	Front Side Door Window Switch Bezel Screw (Qty: 8) **Caution:** Refer to Fastener Caution .
2	Front Side Door Window Switch Bezel Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Side Door Window Switch Bezel Replacement

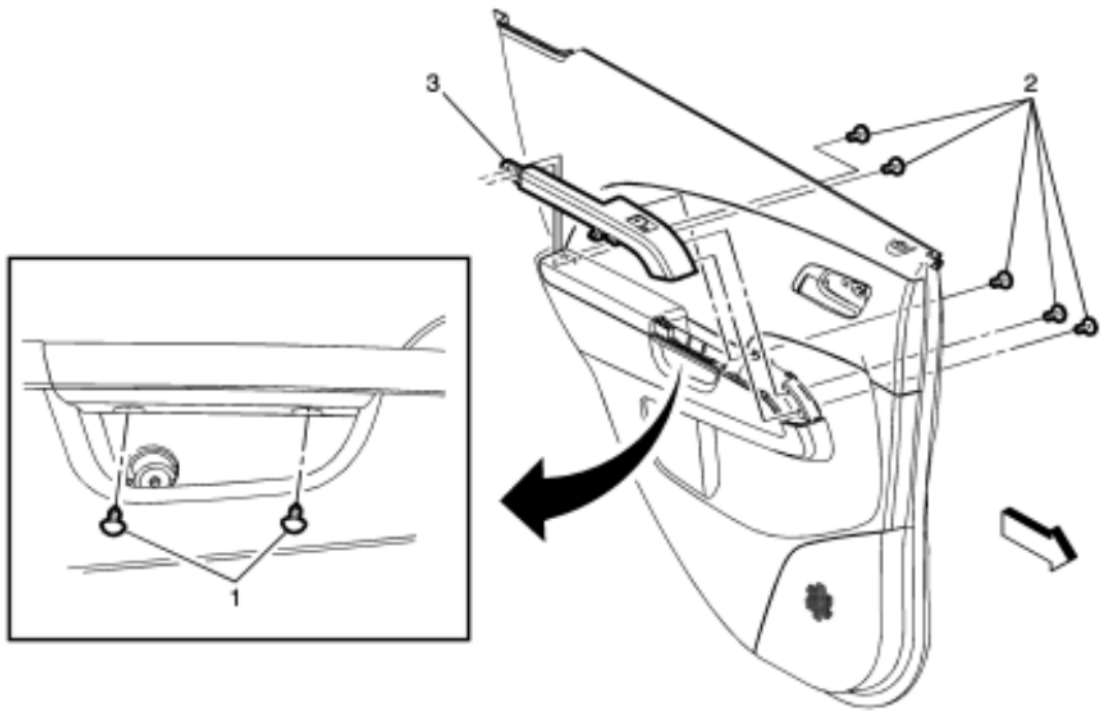


Callout	Component Name
Preliminary Procedure Remove the rear side door trim. Refer to Rear Side Door Trim Replacement .	
1	Rear Side Door Pull Handle Fastener (Qty: 2) **Caution:** Refer to Fastener Caution .
2	Rear Side Door Window Switch Bezel Fastener (Qty: 5)
3	Rear Side Door Window Switch Bezel Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Front Side Door Upper Front Trim Panel Replacement

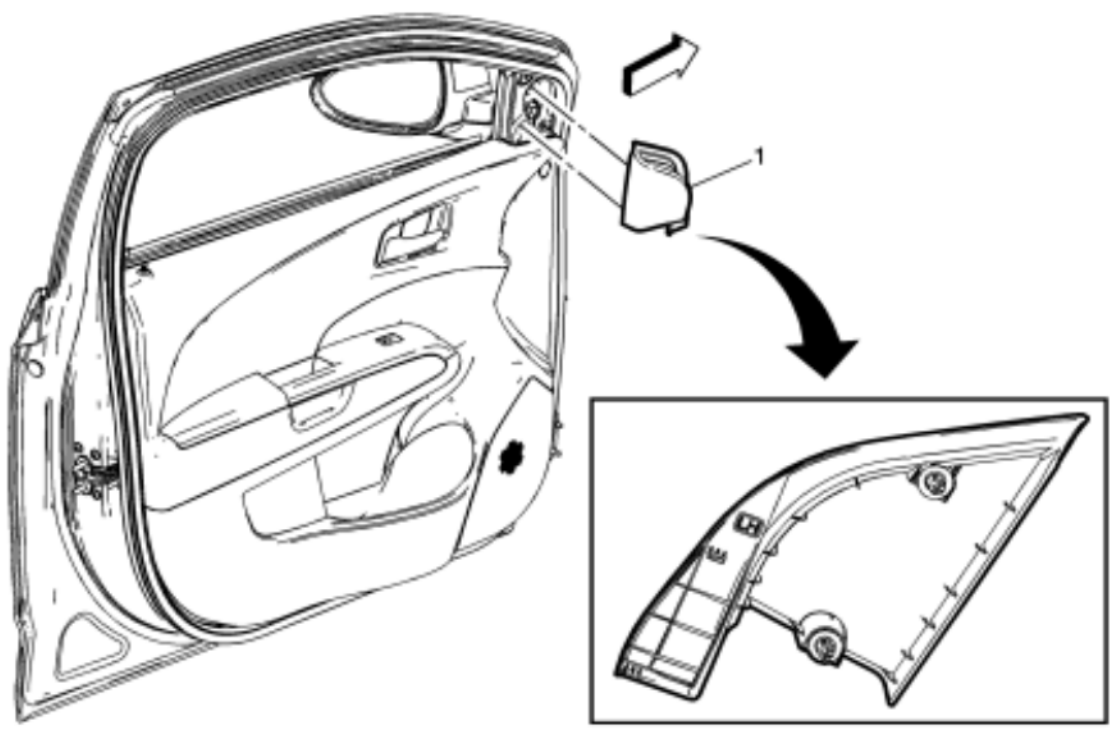


Callout	Component Name
1	Front Side Door Upper Front Trim Panel Assembly **Procedure** Use the appropriate plastic trim tool to aid in the removal of the door trim.

cardiagn.com

© 2011 General Motors. All rights reserved.

Front Side Door Trim Replacement

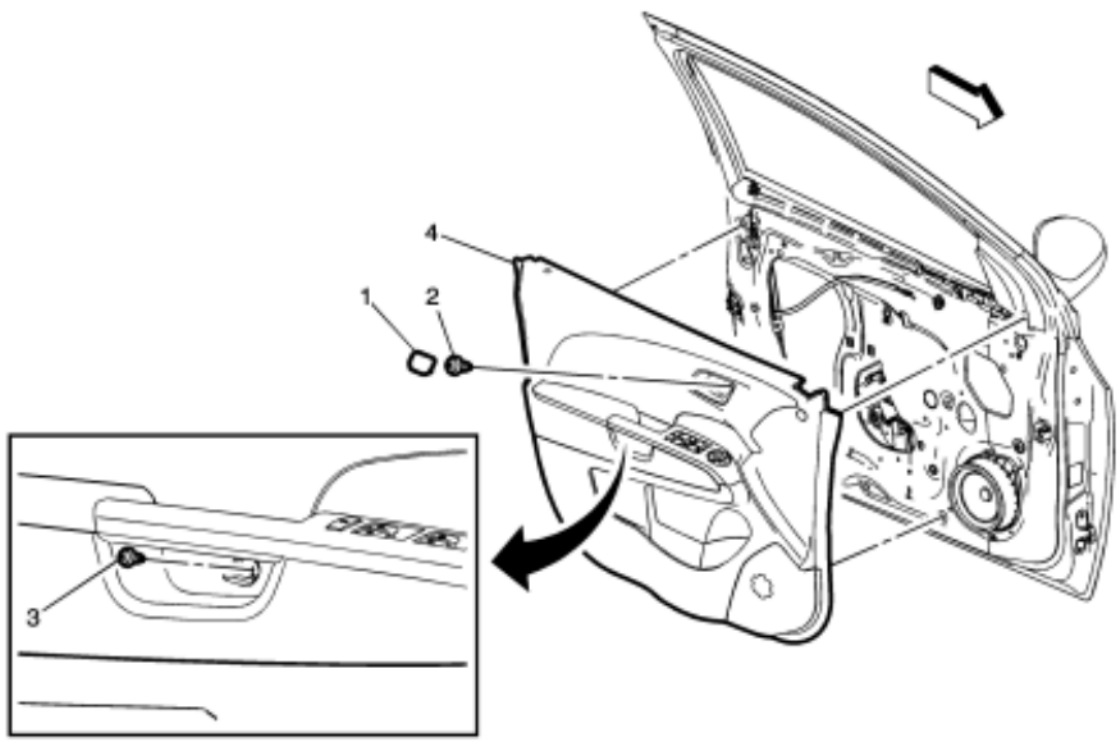


Callout	Component Name
1	Front Side Door Inside Handle Bolt Finish Cap
2	Front Side Door Inside Handle Fastener **Caution:** Refer to Fastener Caution .
3	Front Side Door Trim Fastener **Procedure** Use a small flat-bladed tool to open the front side door trim integral cap to access the fastener.
4	Front Side Door Trim Assembly **Procedure** 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Side Door Upper Rear Trim Panel Replacement (Hatchback)

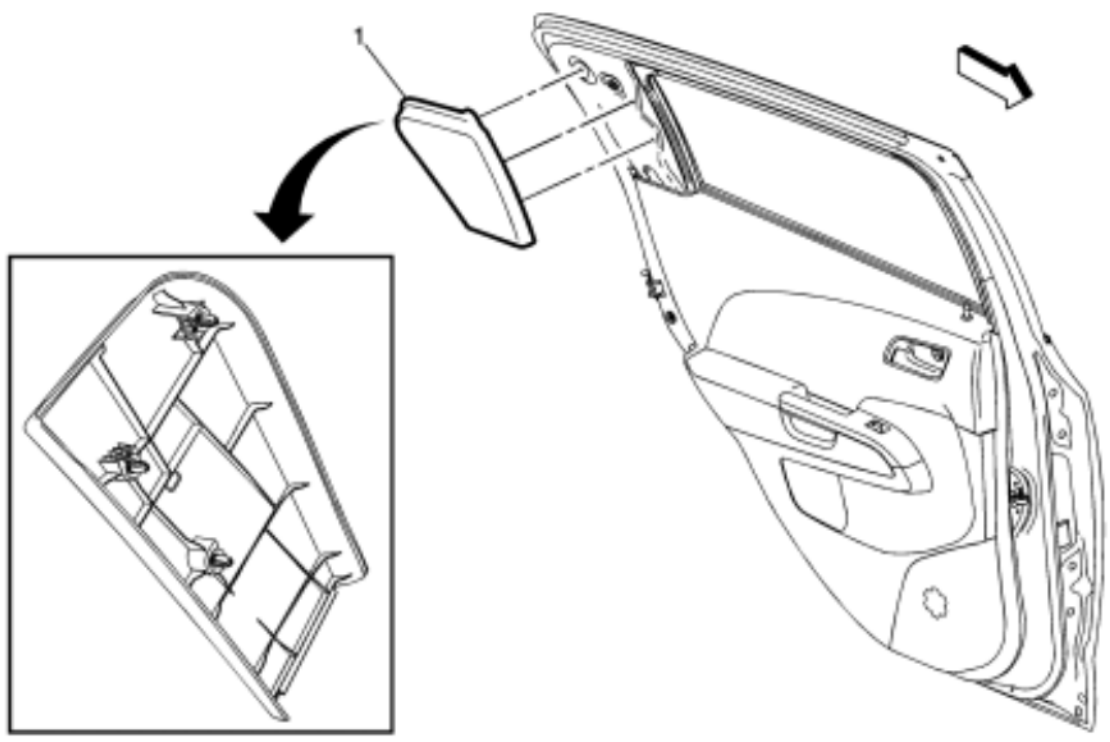


Callout	Component Name
1	Rear Side Door Upper Rear Trim Panel Assembly **Procedure** Pull the door upper rear trim panel away from the rear side door.

cardiagn.com

© 2011 General Motors. All rights reserved.

Roof Rail Front Stowage Compartment Replacement

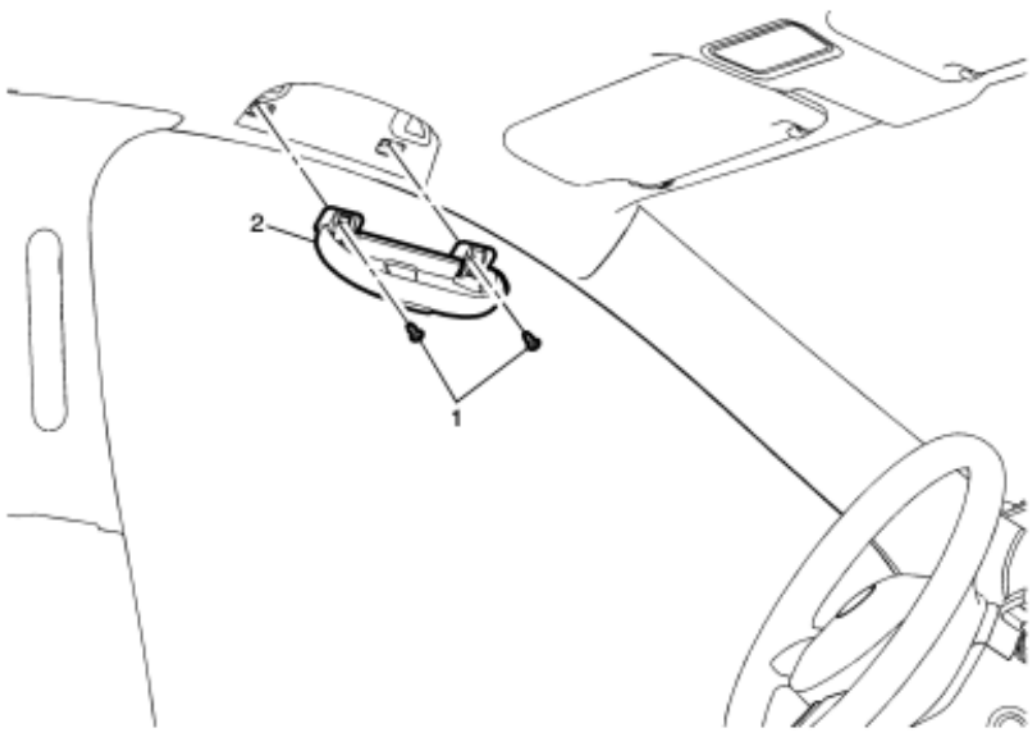


Callout	Component Name
1	Roof Rail Front Stowage Compartment Fastener (Qty: 2) **Caution:** Refer to Fastener Caution . **Procedure** 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to release the cover to access the fastener. **Tighten:** 6 N·m (53 lb in)
2	Roof Rail Front Stowage Compartment Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Roof Rail Front Assist Handle Replacement

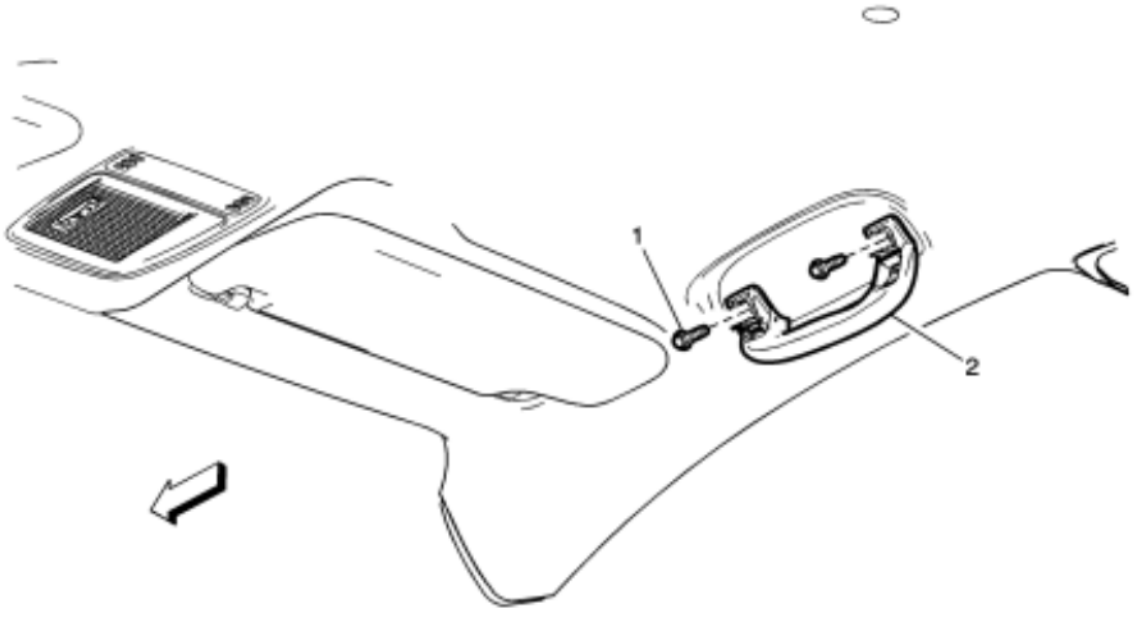


Callout	Component Name
1	Roof Rail Front Assist Handle Fastener (Qty: 2) **Caution:** Refer to Fastener Caution . **Procedure** 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. **Tighten** 6 N·m (53 lb in)
2	Roof Rail Front Assist Handle Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Roof Rail Rear Assist Handle Replacement

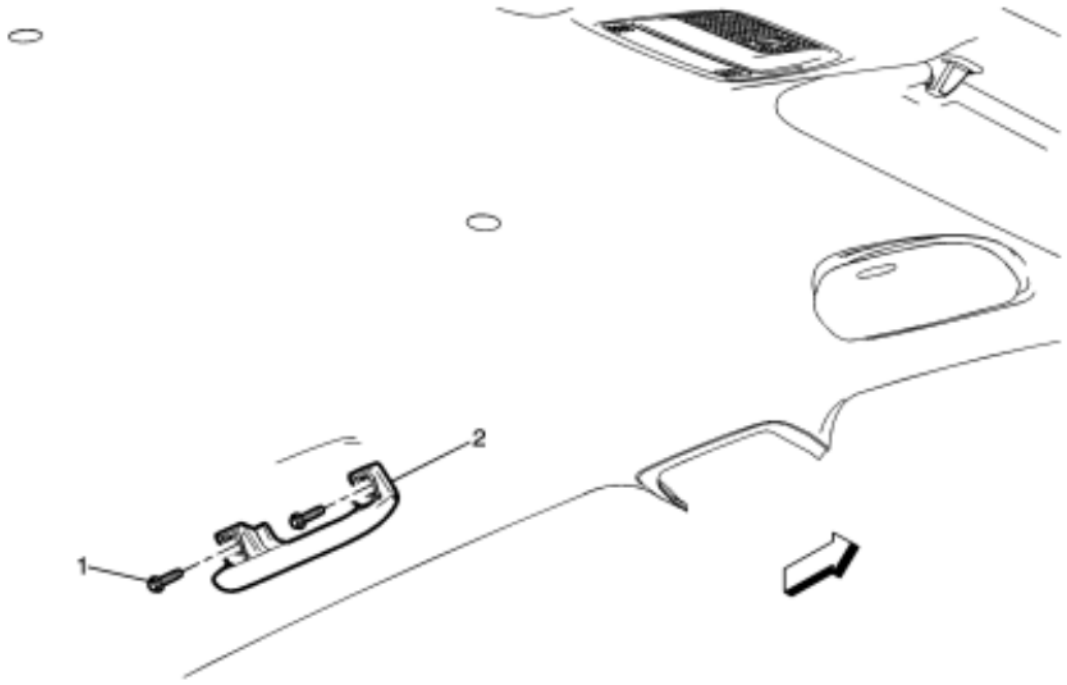


Callout	Component Name
1	Roof Rail Rear Assist Handle Fastener (Qty: 2) **Caution:** Refer to Fastener Caution . **Procedure** 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. **Tighten** 6 N·m (53 lb in)
2	Roof Rail Rear Assist Handle Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Sunshade Replacement

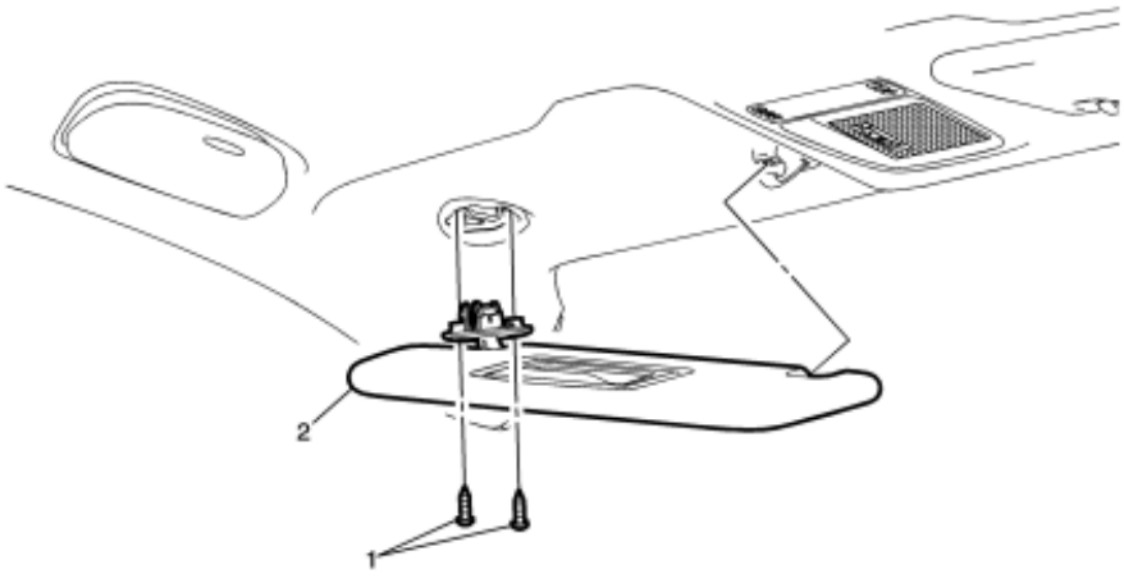


Callout	Component Name
Preliminary Procedure Lower the front of the headliner to access the sunshade electrical connector, if necessary. Refer to Headlining Trim Panel Replacement .	
1	Sunshade Fastener (Qty: 2) **Caution:** Refer to Fastener Caution .
2	Sunshade Assembly **Procedure** 1. Squeeze the tabs at the base of the sunshade assembly to remove from the headliner. 2. Disconnect the electrical connector.

cardiagn.com

© 2011 General Motors. All rights reserved.

Sunshade Support Replacement

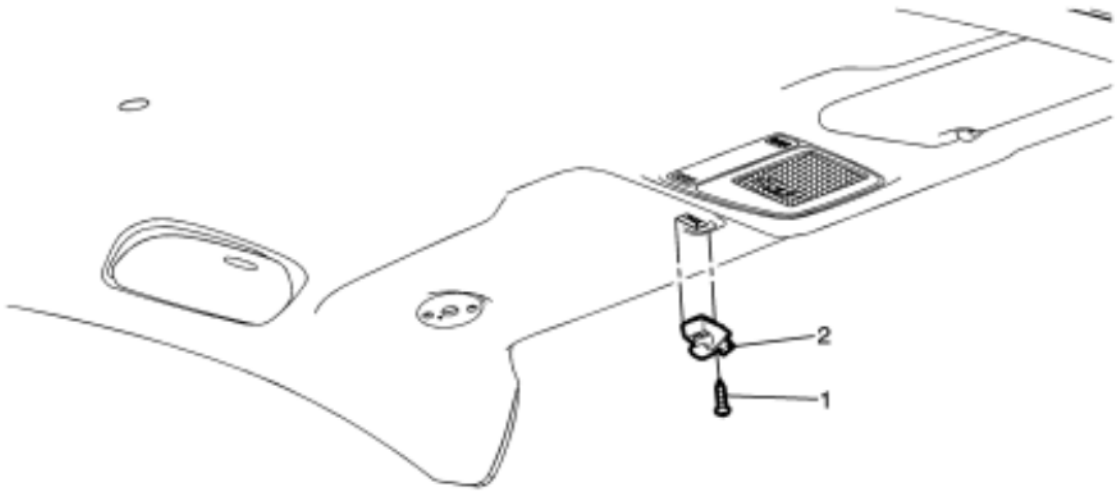


Callout	Component Name
1	Sunshade Support Fastener **Caution:** Refer to Fastener Caution . **Note:** Pull the cover downward to access the fastener.
2	Sunshade Support Assembly **Procedure** Unclip the sunshade from the support and reposition.

cardiagn.com

© 2011 General Motors. All rights reserved.

Windshield Side Garnish Molding Replacement

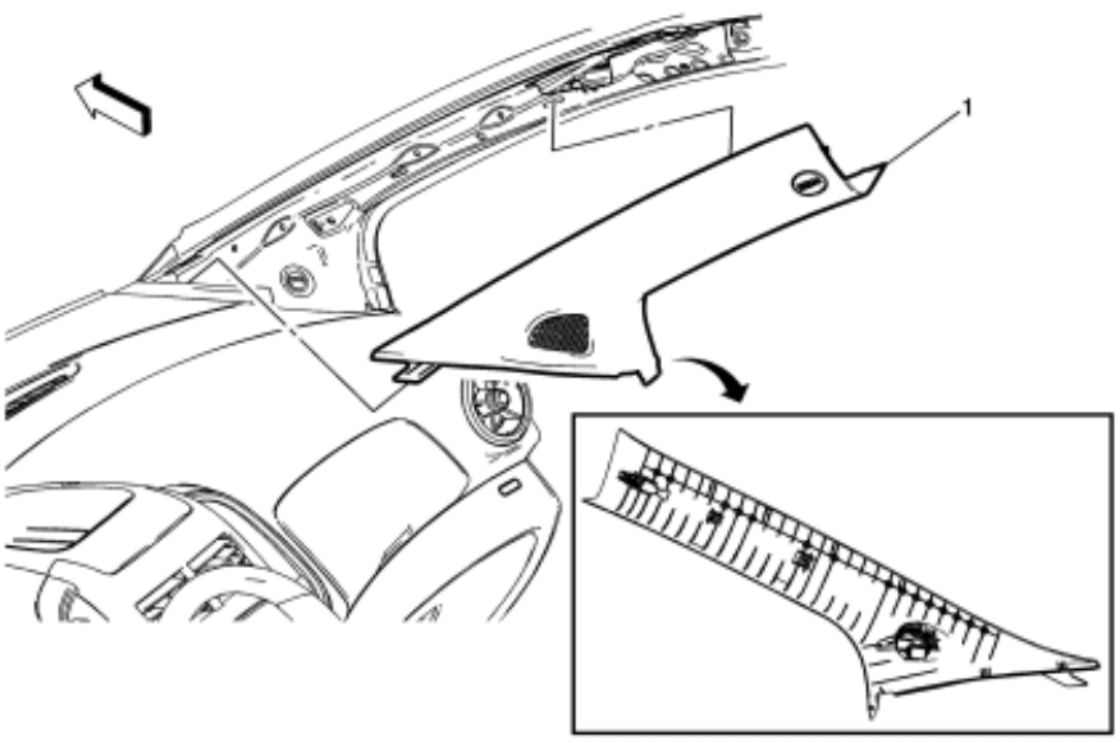


Callout	Component Name
Preliminary Procedures Disable the SIR system, if equipped. Refer to SIR Disabling and Enabling .	
1	Windshield Side Garnish Molding Assembly **Procedure** 1. Tabs must be installed prior to retainers. 2. Tabs to be fully seated in the instrument panel (I/P) trim panel retainer and valance panel. 3. Disconnect the electrical connectors. 4. Ensure the tether is reattached when installed.

cardiagn.com

© 2011 General Motors. All rights reserved.

Body Rear Seat Back Trim Panel Replacement (Sedan with AN1)

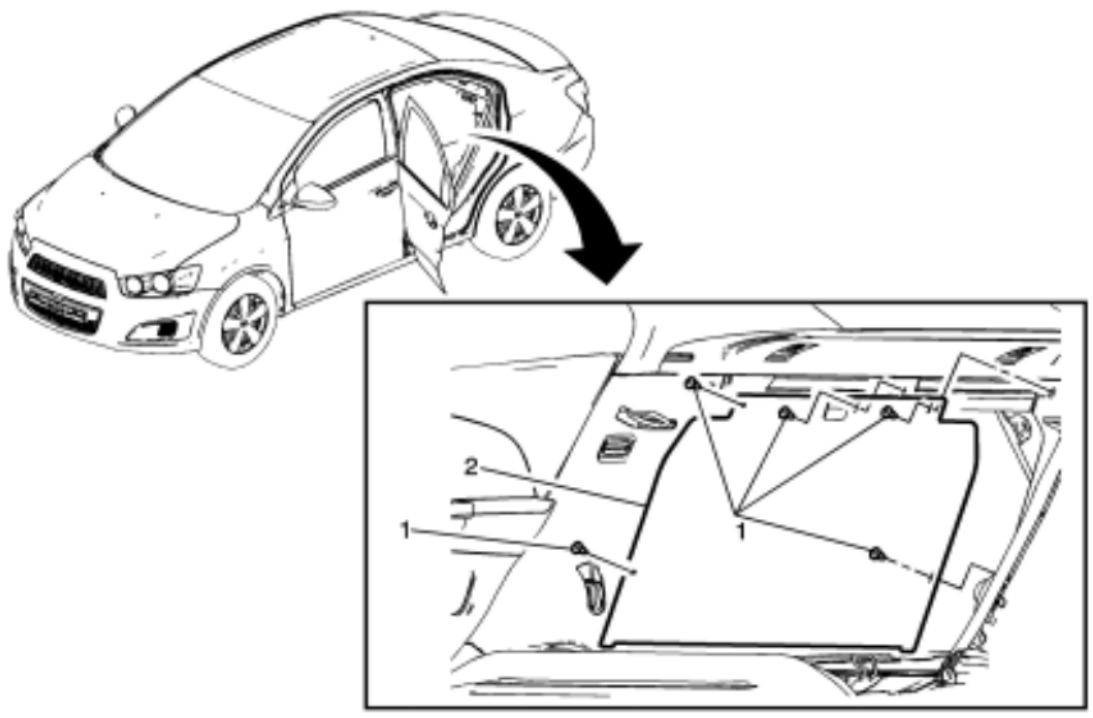


Callout	Component Name
Preliminary Procedures Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement .	
1	Body Rear Seat Back Trim Panel Retainer (Qty: 5)
2	Body Rear Seat Back Trim Panel Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Body Rear Seat Back Trim Panel Replacement (Sedan with AMA)

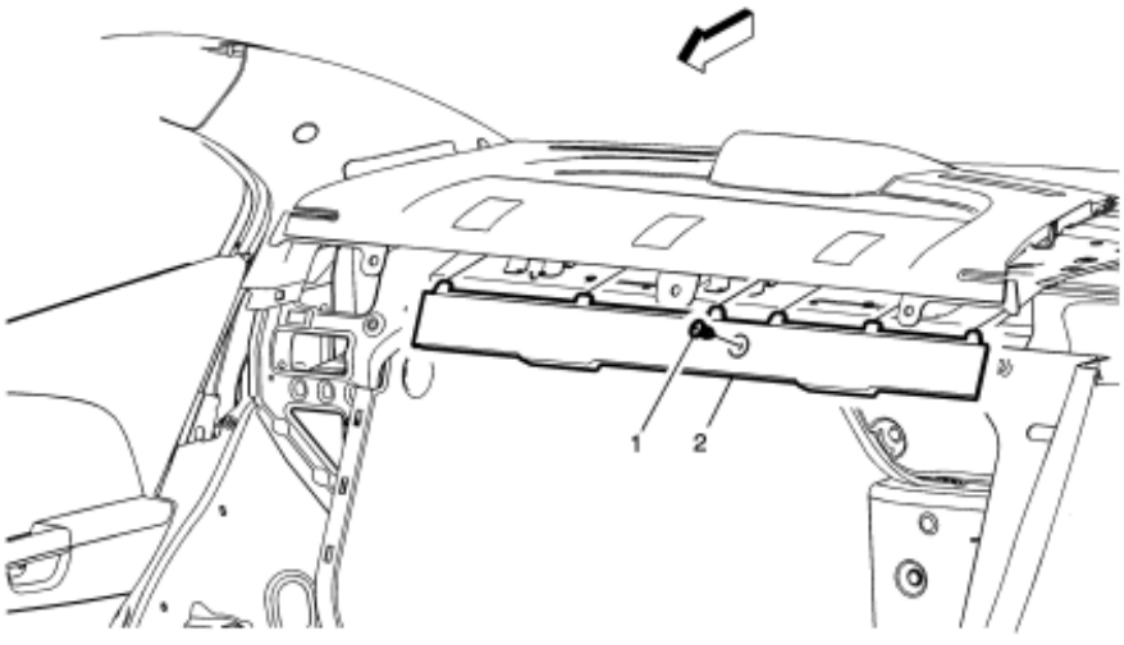


Callout	Component Name
1	Body Rear Seat Back Trim Panel Retainer **Procedure** Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward.
2	Body Rear Seat Back Trim Panel Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Center Pillar Upper Trim Panel Replacement (With AHU)

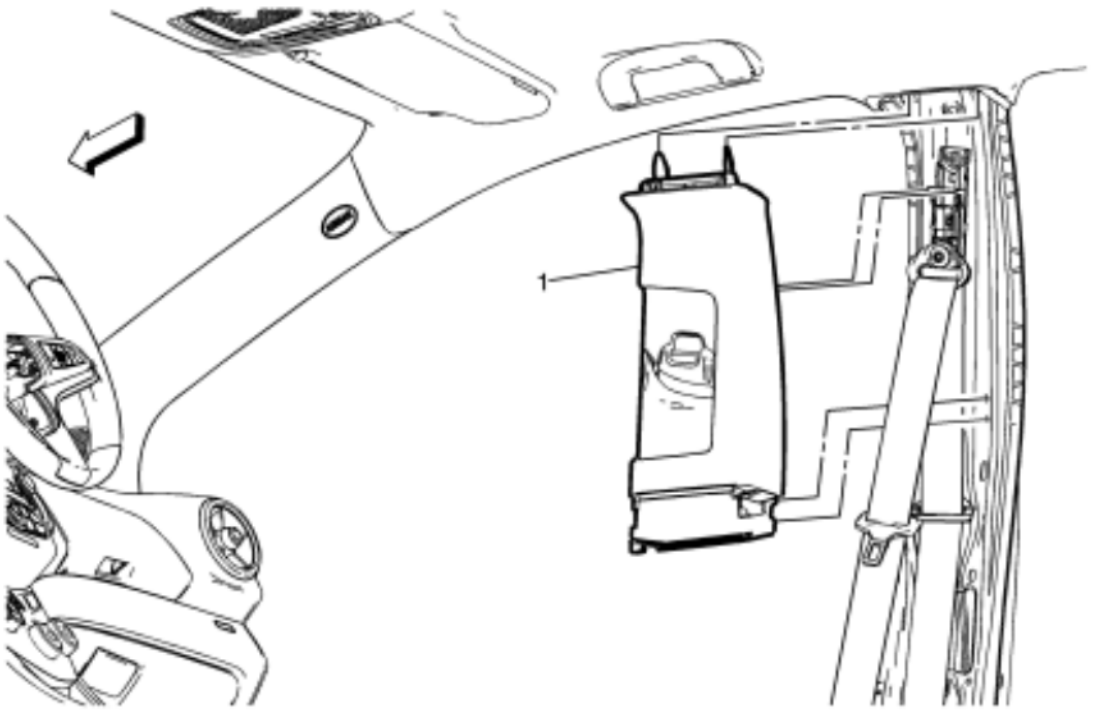


Callout	Component Name
Preliminary Procedure 1. Remove the center pillar lower trim panel. Refer to Center Pillar Lower Trim Panel Replacement . 2. Remove the seat belt from the front seat. Refer to Driver or Passenger Seat Shoulder Belt Replacement .	
1	Center Pillar Upper Trim Panel Assembly **Procedure** When replacing the center pillar upper trim panel, feed the seat belt through the panel.

cardiagn.com

© 2011 General Motors. All rights reserved.

Center Pillar Upper Trim Panel Replacement (Without AHU)

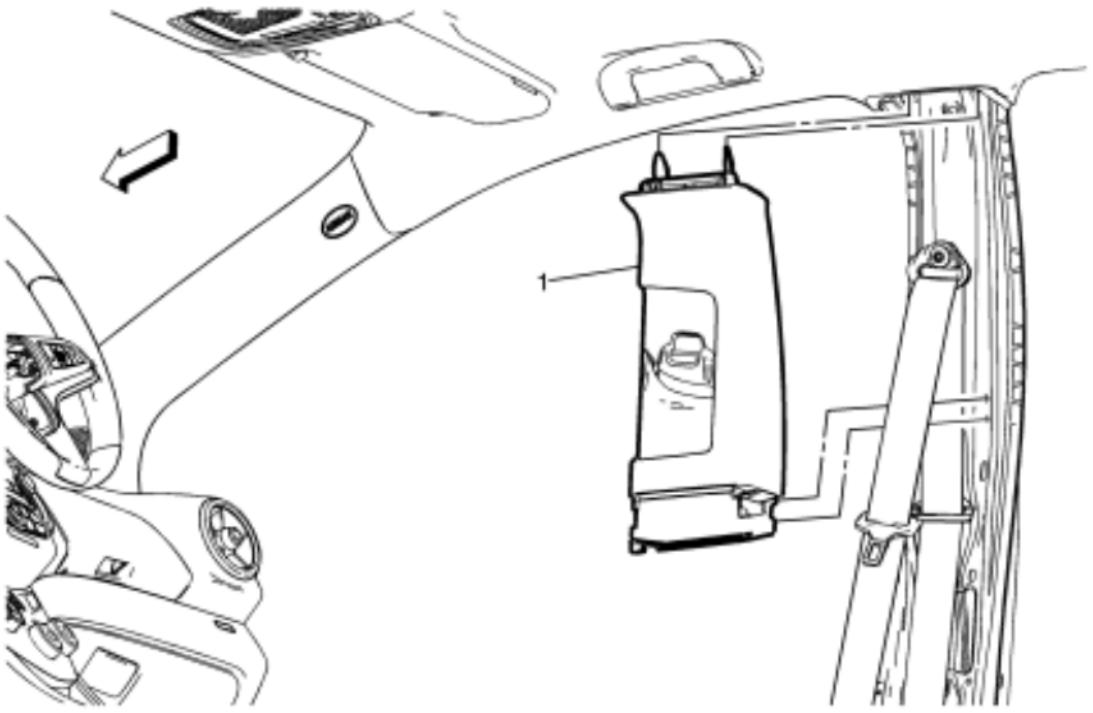


Callout	Component Name
Preliminary Procedures 1. Remove the center pillar lower garnish molding. Refer to Center Pillar Lower Trim Panel Replacement . 2. Remove the seat belt from the front seat. Refer to Driver or Passenger Seat Shoulder Belt Replacement .	
1	Center Pillar Upper Trim Panel Assembly **Procedure** When replacing the center pillar upper trim panel, feed the seat belt through the panel.

cardiagn.com

© 2011 General Motors. All rights reserved.

Center Pillar Lower Trim Panel Replacement

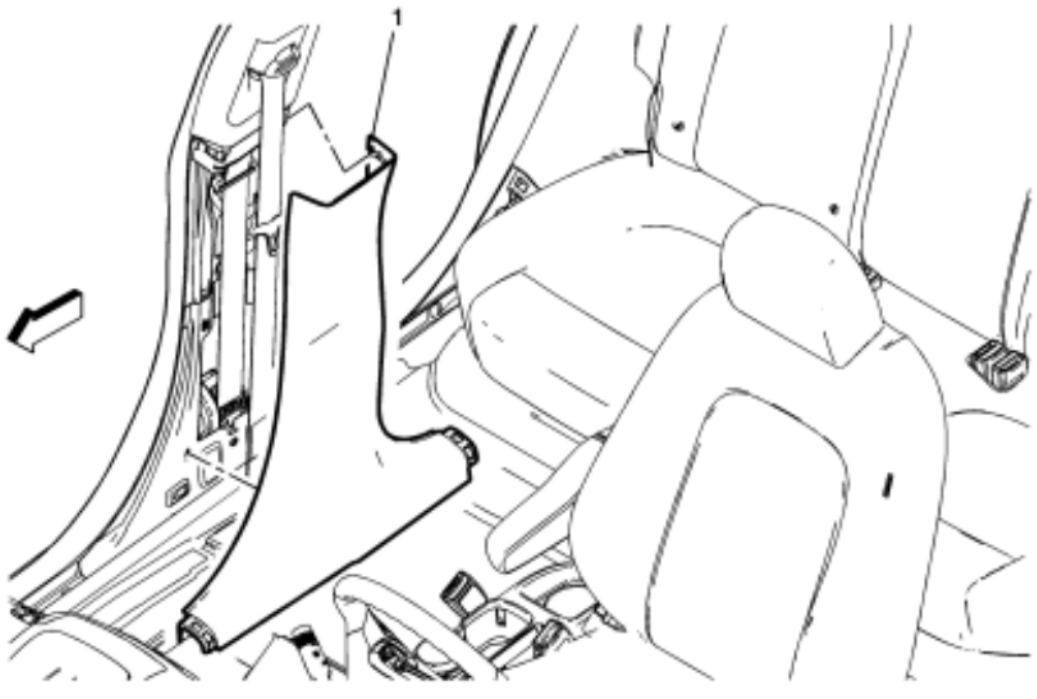


Callout	Component Name
Preliminary Procedure 1. Remove the front side door opening floor carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement . 2. Remove the rear side door opening floor carpet retainer. Refer to Rear Side Door Opening Floor Carpet Retainer Replacement . 3. Move seat to full forward position.	
1	Center Pillar Lower Trim Panel Assembly **Procedure** Ensure the seat belt webbing does not become trapped during installation.

cardiagn.com

© 2011 General Motors. All rights reserved.

Body Lock Pillar Upper Trim Panel Replacement (Sedan)

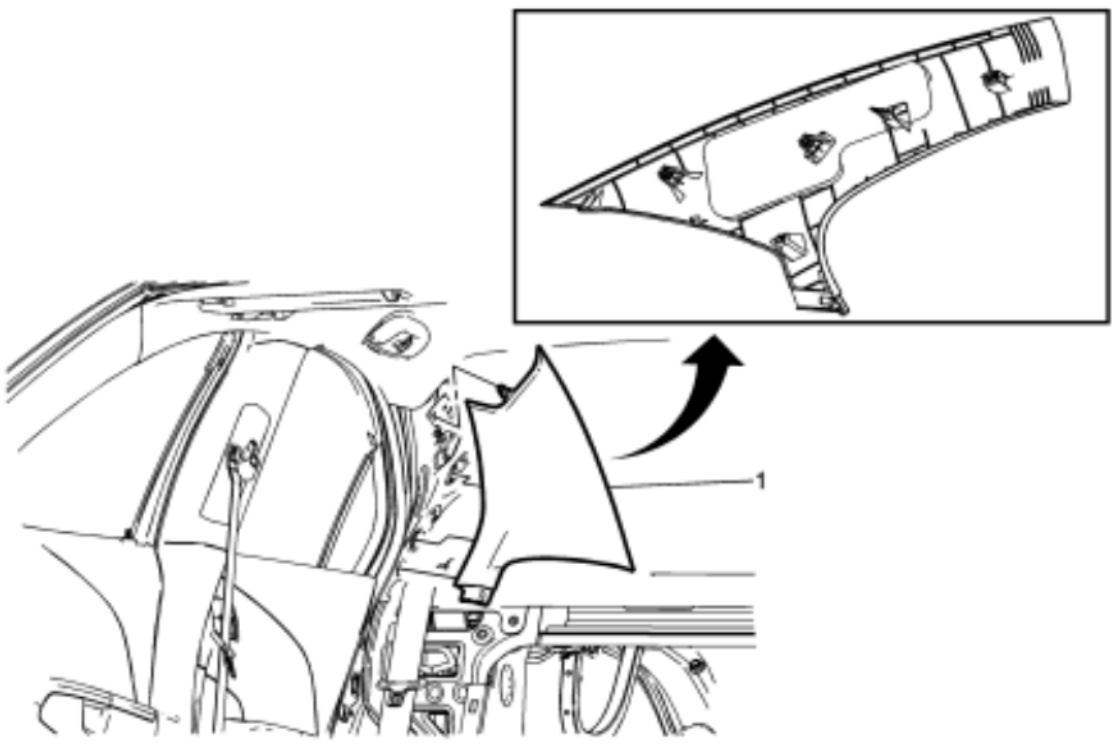


Callout	Component Name
Preliminary Procedure 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Remove the body side trim panel. Refer to Body Side Trim Panel Replacement .	
1	Body Lock Pillar Upper Trim Panel Assembly **Procedure** Pull outward from the top front to disengage clips.

cardiagn.com

© 2011 General Motors. All rights reserved.

Body Lock Pillar Upper Trim Panel Replacement (Hatchback)

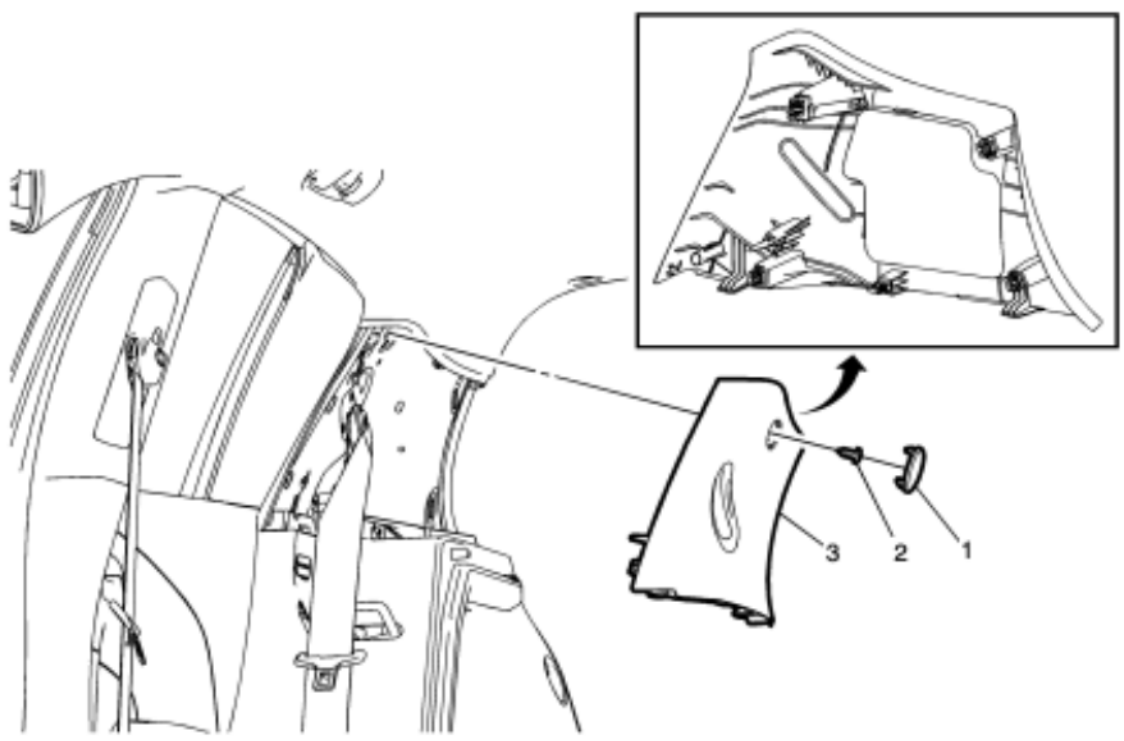


Callout	Component Name
Preliminary Procedure Disable the SIR system. Refer to SIR Disabling and Enabling .	
1	Inflatable Restraint Airbag Cover
2	Body Lock Pillar Upper Trim Panel Fastener **Caution:** Refer to Fastener Caution .
3	Body Lock Pillar Upper Trim Panel Assembly **Procedure** 1. Grasp the molding and pull outward to disengage the integral retainers. 2. Disconnect the electrical connector, if equipped.

© 2011 General Motors. All rights reserved.

cardiagn.com

Quarter Inner Trim Finish Panel Replacement (Hatchback)

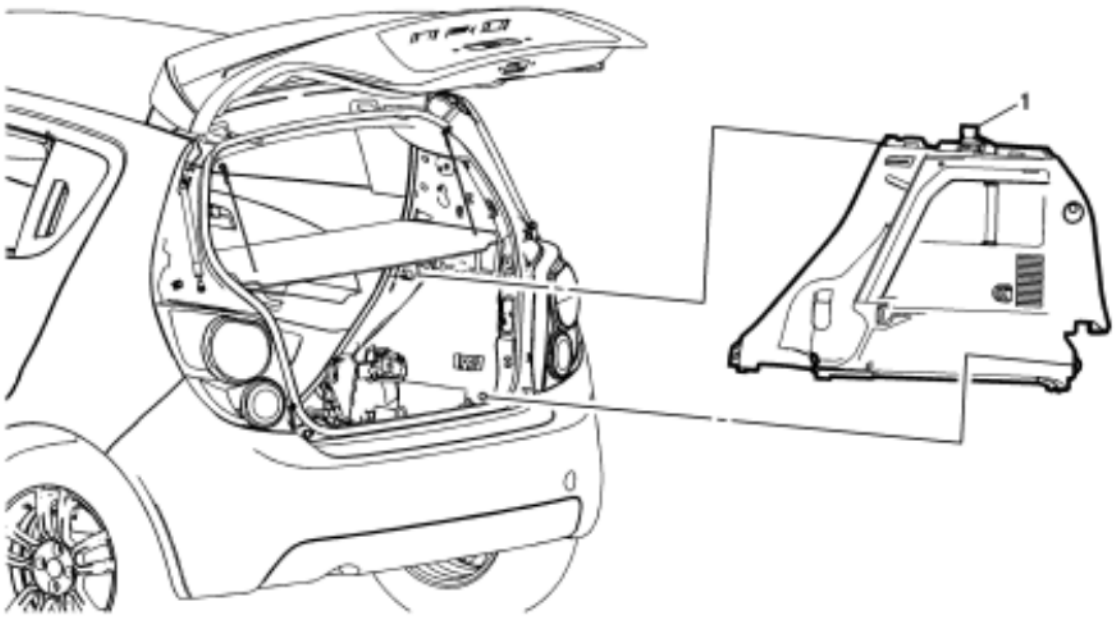


Callout	Component Name
Preliminary Procedures 1. Remove the rear side door opening floor carpet retainer. Refer to Rear Side Door Opening Floor Carpet Retainer Replacement . 2. Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement . 3. Remove rear seat back. Refer to Rear Seat Back Cushion Replacement . 4. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement . 5. Remove the rear compartment stowage shelf. Refer to Rear Compartment Stowage Shelf Replacement . 6. Remove the rear compartment sill trim plate . Refer to Rear Compartment Sill Trim Plate Replacement . 7. Remove the rear shoulder belt. Refer to Shoulder Belt Replacement - Rear .	
1	Quarter Inner Trim Finish Panel Assembly **Procedure** Use a trim tool or equivalent to aid in removal. **Note:** After installation of the quarter inner trim panel, ensure the rear seat belt is not trapped under the trim panel. Pull up on the belt to verify full movement of the belt.

cardiagn.com

© 2011 General Motors. All rights reserved.

Body Side Trim Panel Replacement (Sedan)

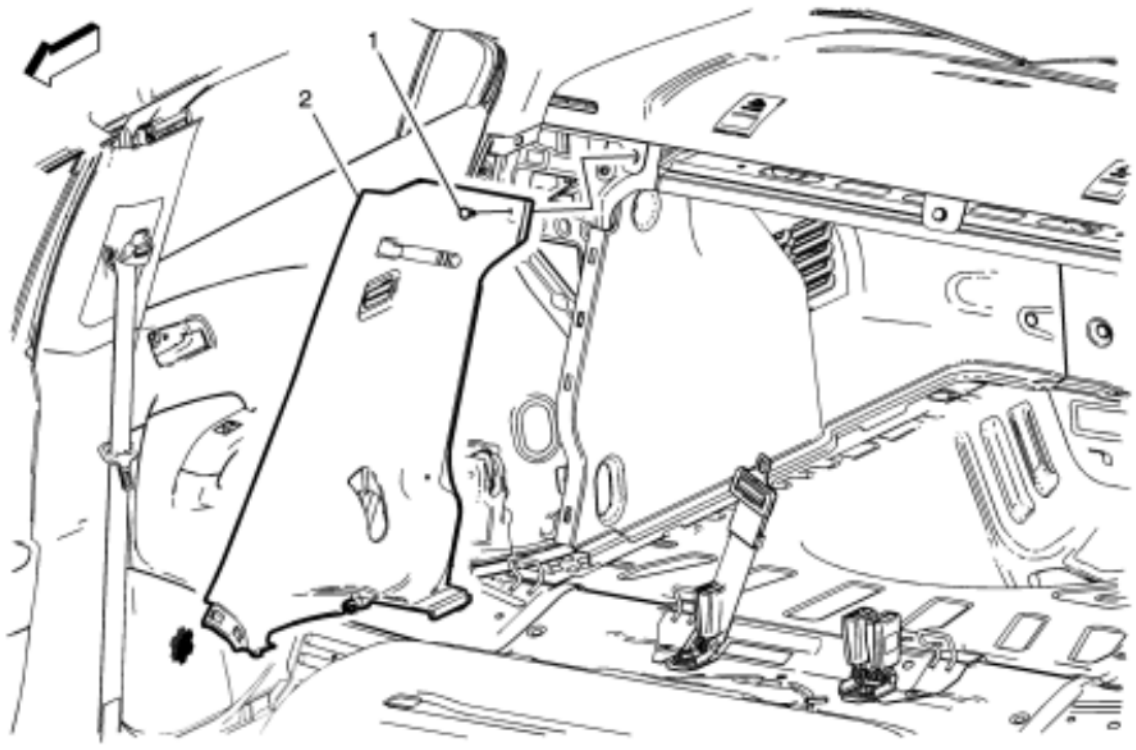


Callout	Component Name
Preliminary Procedures 1. Remove rear side door opening floor carpet retainer. Refer to Rear Side Door Opening Floor Carpet Retainer Replacement . 2. Remove body rear seat back trim panel. Refer to Body Rear Seat Back Trim Panel Replacement . 3. Remove lower rear shoulder belt fastener. Refer to Shoulder Belt Replacement - Rear .	
1	Body Side Trim Panel Push-In Retainer
2	Body Side Trim Panel Assembly **Note:** Ensure seat belt assembly is routed over and through opening in panel assembly.

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Window Panel Trim Replacement (Sedan)

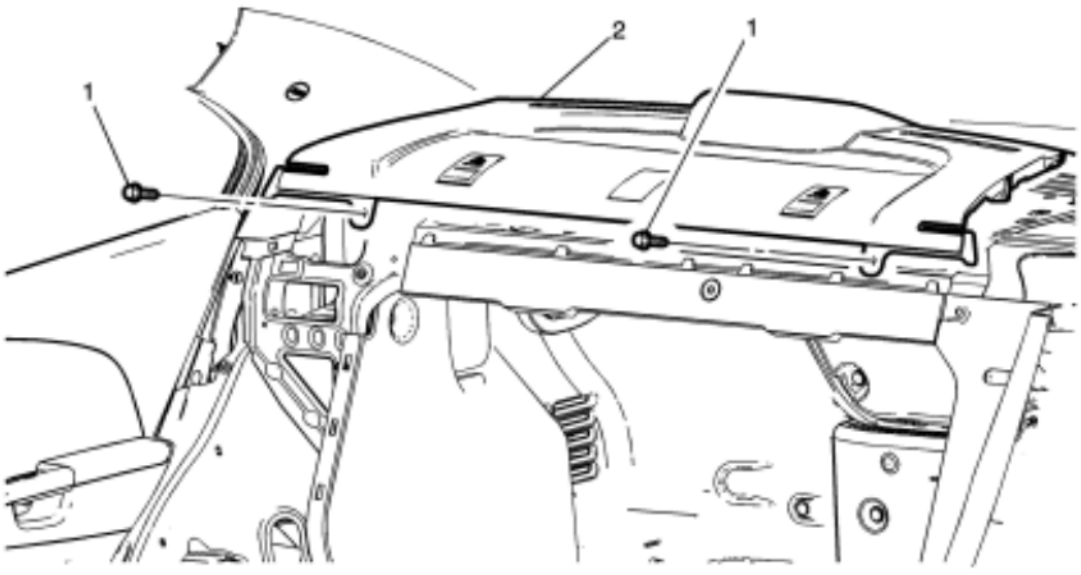


Callout	Component Name
Preliminary Procedures 1. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement . 2. Remove the body rear seat back trim panel. Refer to Body Rear Seat Back Trim Panel Replacement .	
1	Rear Window Panel Trim Fastener (Qty: 2)
2	Rear Window Panel Trim Assembly **Procedure** When replacing the rear window panel trim assembly, transfer all necessary components.

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Compartment Stowage Shelf Replacement (Hatchback)

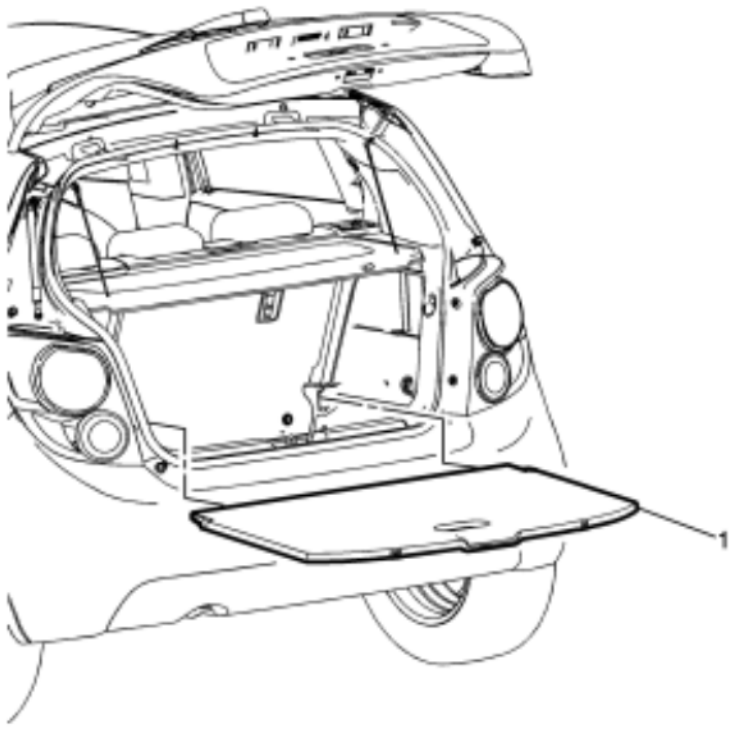


Callout	Component Name
1	Rear Compartment Stowage Shelf Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Side Door Trim Replacement (Hatchback)

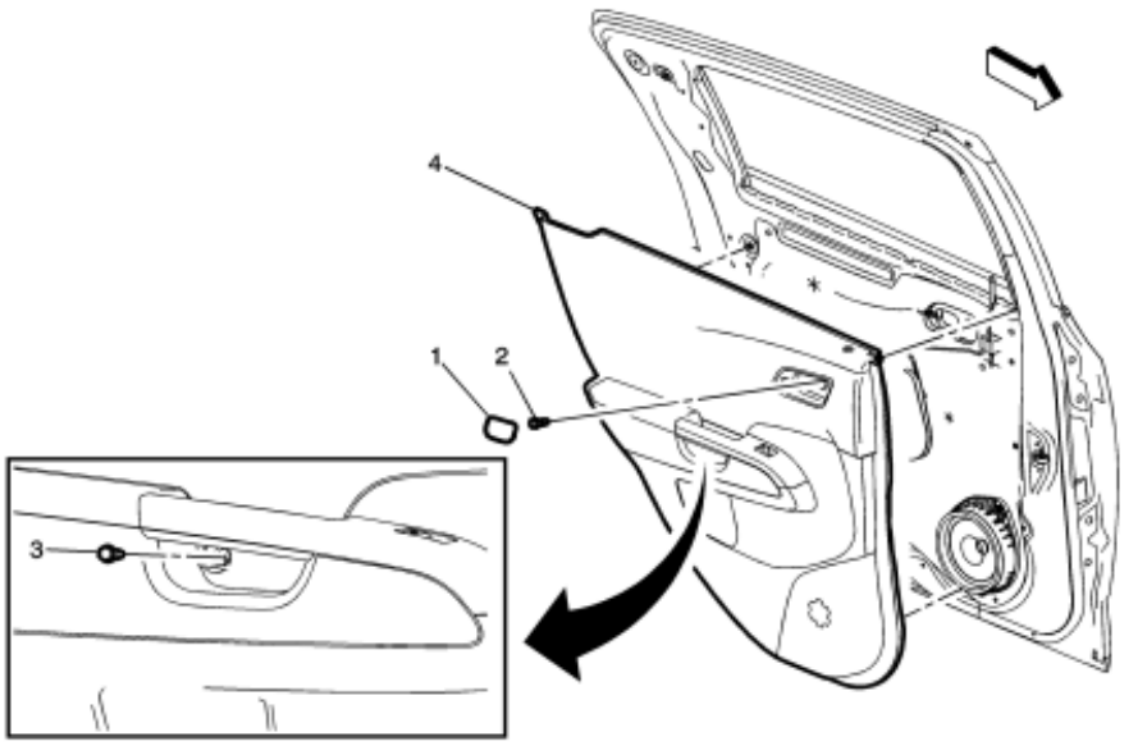


Callout	Component Name
Preliminary Procedure Remove the rear side door upper rear trim panel. Refer to Rear Side Door Upper Rear Trim Panel Replacement .	
1	Rear Side Door Inside Handle Bolt Cap
2	Rear Side Door Inside Handle Fastener **Caution:** Refer to Fastener Caution . **Procedure** Pull handle back to remove cap. Use suitable tool to unsnap.
3	Rear Side Door Trim Fastener **Procedure** Use a small flat-bladed tool to open the rear side door trim integral cap to access the fastener.
4	Rear Side Door Trim Assembly **Procedure** 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

© 2011 General Motors. All rights reserved.

cardiagn.com

Rear Side Door Trim Replacement (Sedan)

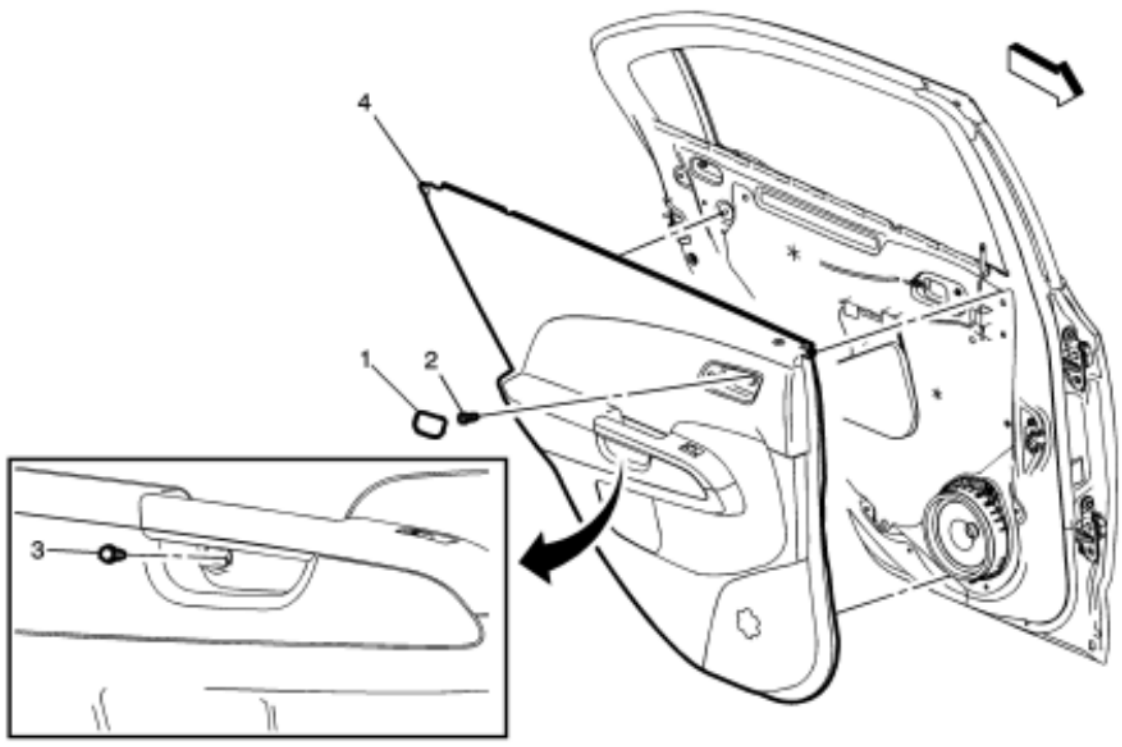


Callout	Component Name
1	Rear Side Door Inside Handle Bolt Cap
2	Rear Side Door Inside Handle Fastener **Caution:** Refer to Fastener Caution . **Procedure** Pull handle back to remove cap. Use suitable tool to unsnap.
3	Rear Side Door Trim Fastener **Procedure** Use a small flat-bladed tool to open the rear side door trim integral cap to access the fastener.
4	Rear Side Door Trim Assembly **Procedure** 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

© 2011 General Motors. All rights reserved.

cardiagn.com

Luggage Shade Replacement (Hatchback)

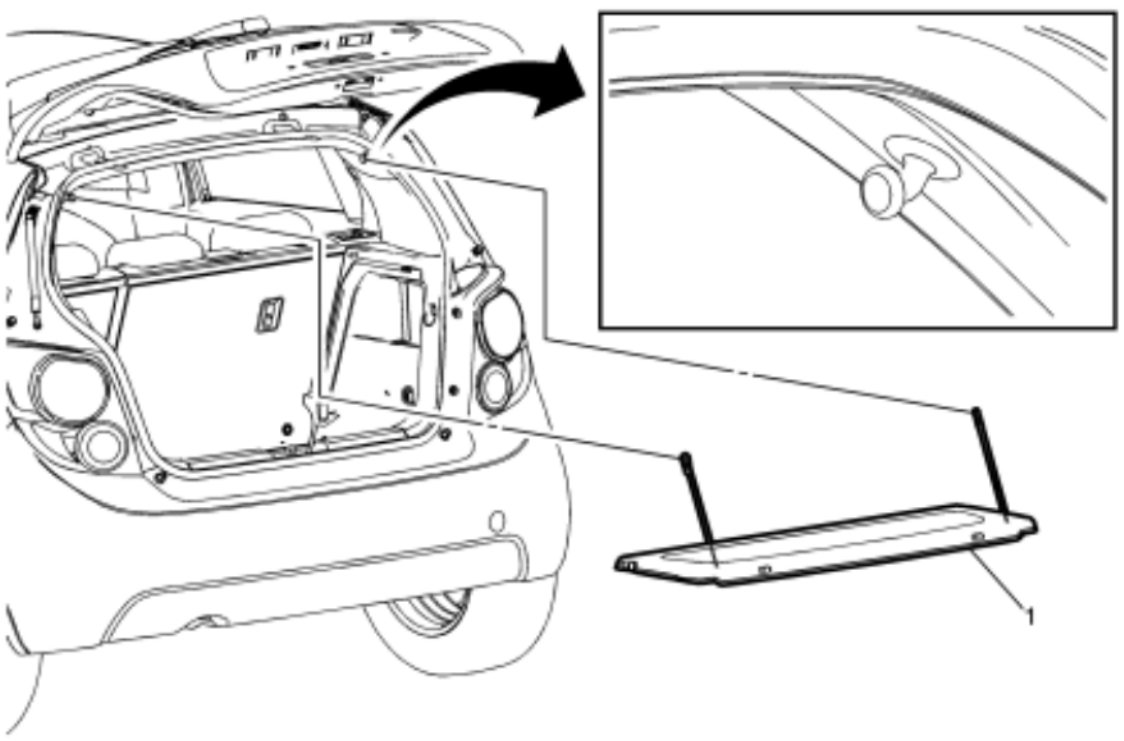


Callout	Component Name
1	Luggage Shade Assembly **Procedure** Detach luggage shade from upper support.

cardiagn.com

© 2011 General Motors. All rights reserved.

Liftgate Trim Finish Panel Replacement (Hatchback)

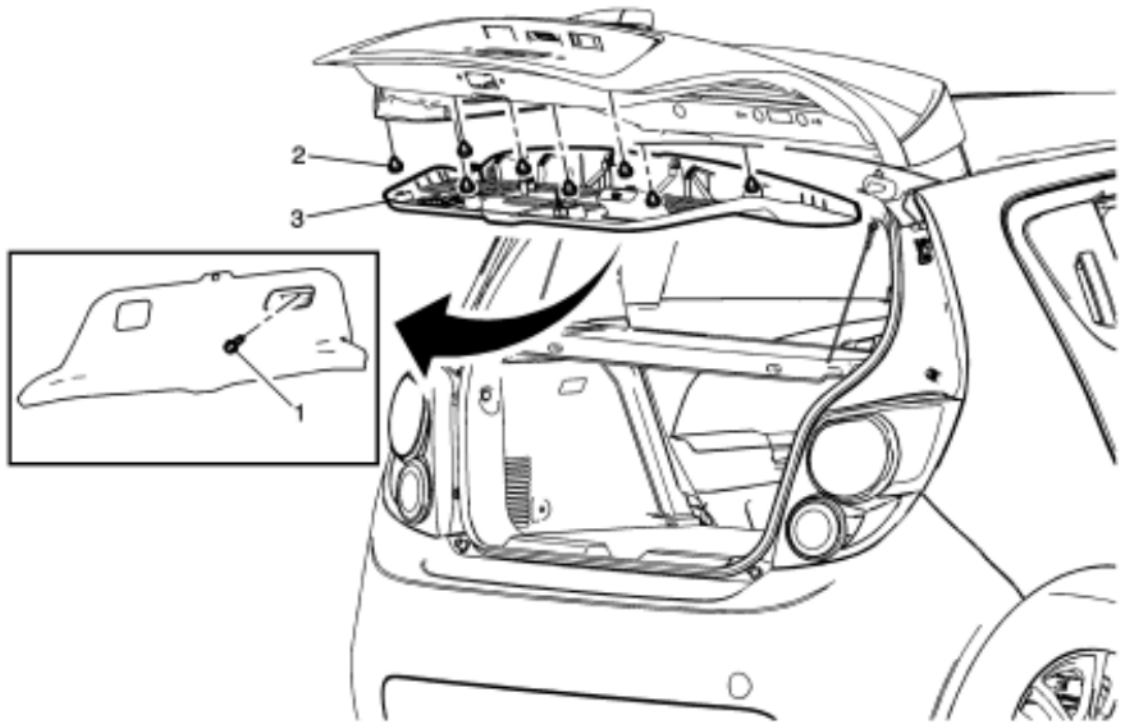


Callout	Component Name
1	Liftgate Trim Finish Panel Fastener **Caution:** Refer to Fastener Caution .
2	Liftgate Trim Finish Panel Retainer (Qty: 8)
3	Liftgate Trim Finish Panel Assembly **Procedure** Use a trim tool or equivalent to aid in removal.

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Compartment Sill Trim Plate Replacement

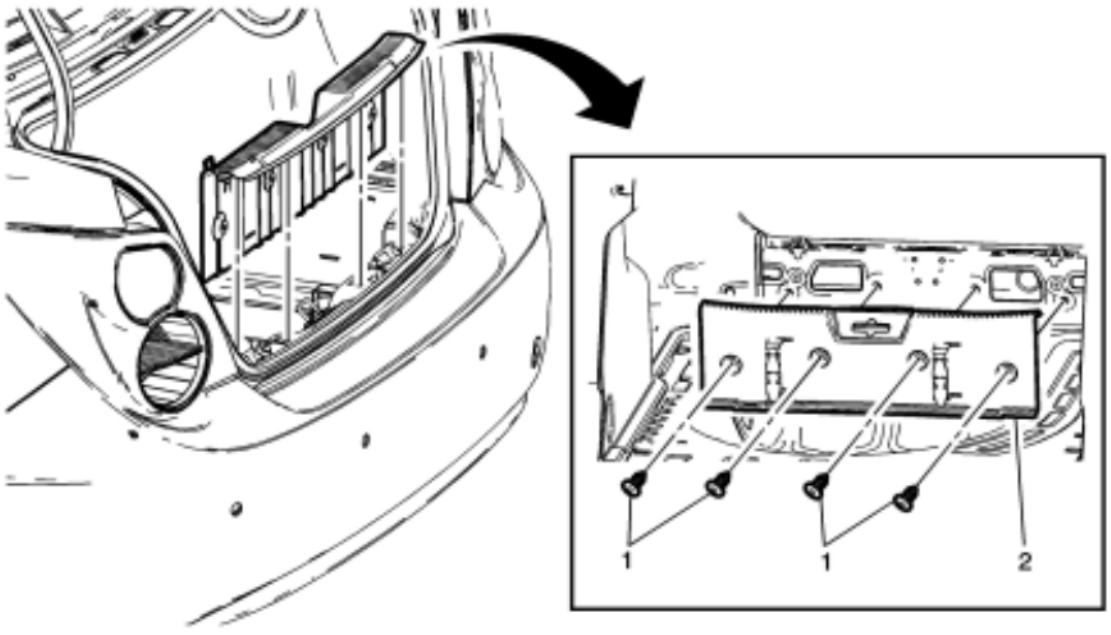


Callout	Component Name
Preliminary Procedure Partially remove the rear compartment opening weatherstrip. Refer to Rear Compartment Lid Weatherstrip Replacement .	
1	Rear Compartment Sill Trim Plate Retainer (Qty: 4)
2	Rear Compartment Sill Trim Plate Assembly

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Compartment Lid Inner Panel Trim Replacement (Sedan)

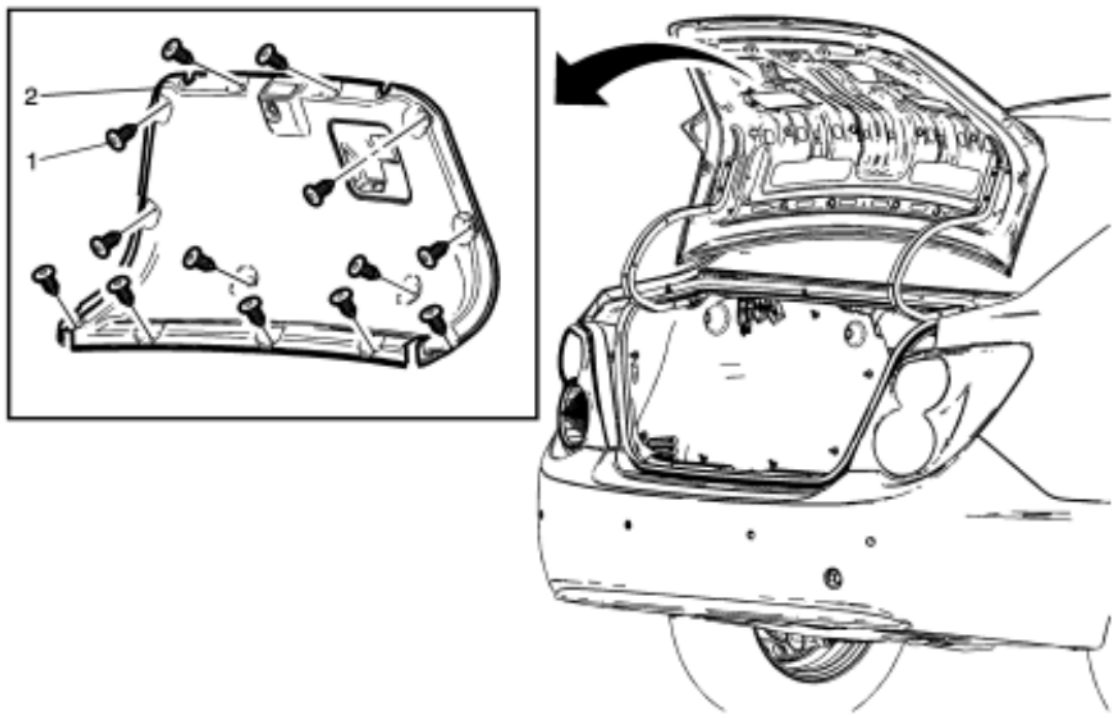


Callout	Component Name
Preliminary Procedures 1. Remove the rear compartment lid outer bumpers. 2. Remove the latch cover.	
1	Rear Compartment Lid Inner Panel Trim Retainer (Qty: 13) **Procedure** Use a trim removal tool to aid in the removal of the rear compartment trim panel.
2	Rear Compartment Lid Inner Panel Trim

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Compartment Side Trim Replacement - Left Side (Sedan)

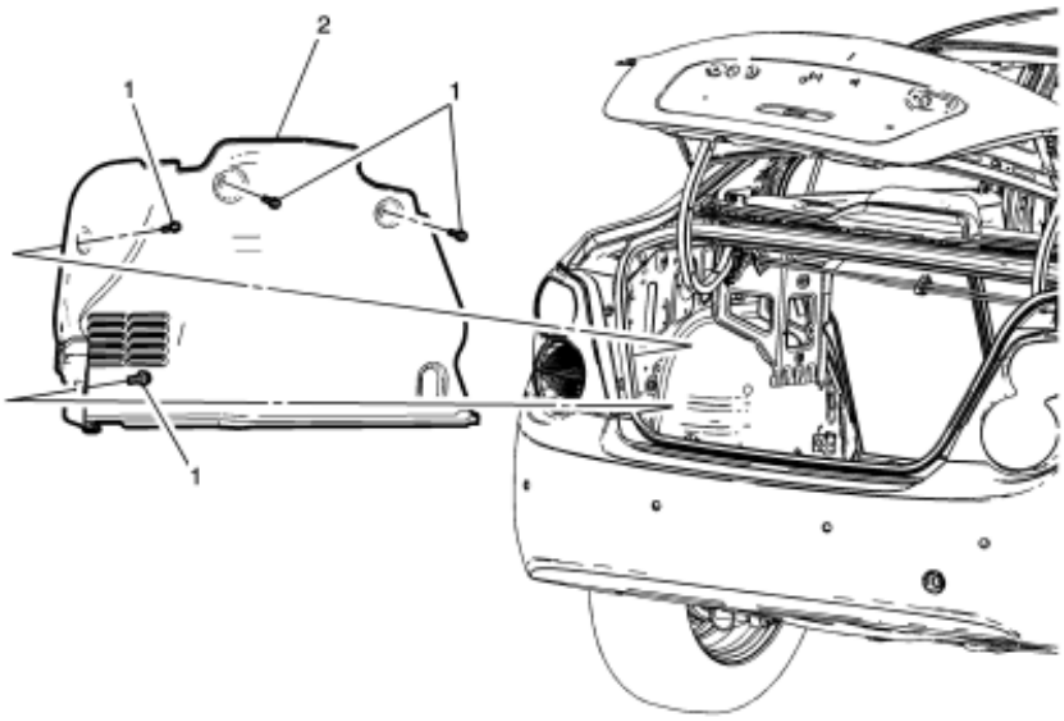


Callout	Component Name
Preliminary Procedures 1. Remove the rear compartment floor panel carpet. Refer to Rear Compartment Floor Panel Carpet Replacement . 2. Remove the rear compartment sill trim plate. Refer to Rear Compartment Sill Trim Plate Replacement .	
1	Rear Compartment Side Trim Retainer (Qty: 4)
2	Rear Compartment Side Trim

cardiagn.com

© 2011 General Motors. All rights reserved.

Rear Compartment Side Trim Replacement - Right Side (Sedan)

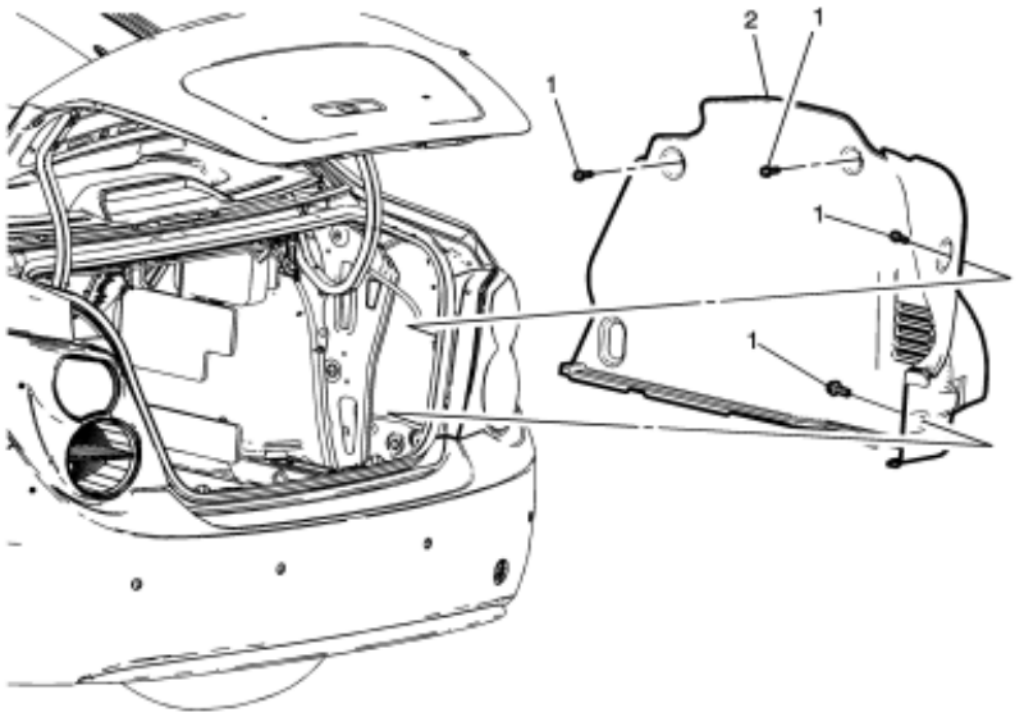


Callout	Component Name
Preliminary Procedures 1. Remove the rear compartment floor panel carpet. Refer to Rear Compartment Floor Panel Carpet Replacement . 2. Remove the rear compartment sill trim plate. Refer to Rear Compartment Sill Trim Plate Replacement .	
1	Rear Compartment Side Trim Retainer (Qty: 4)
2	Rear Compartment Side Trim

cardiagn.com

© 2011 General Motors. All rights reserved.

Quarter Outer Panel Pressure Relief Valve Replacement

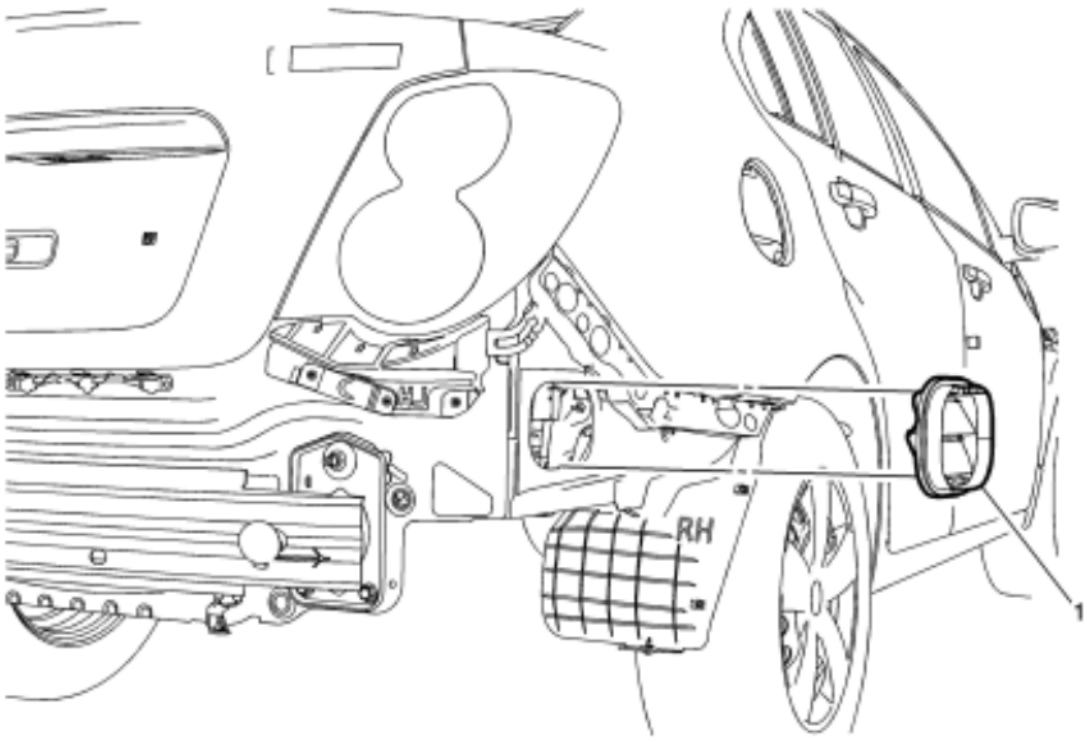

Callout	Component Name
Preliminary Procedures Remove the rear bumper fascia. Refer to Rear Bumper Fascia Replacement	
1	Pressure Relief Valve

cardiagn.com

© 2011 General Motors. All rights reserved.