TROOPER

ENGINE

TROOPER 3.5L ENGINE DRIVEABILITY AND EMISSIONS

CONTENTS

Specifications 6E–6
Tightening Specifications 6E–6
Diagrams and Schematics 6E–7
PCM Wiring Diagram (1 of 8) 6E–7
PCM Wiring Diagram (2 of 8) 6E–8
PCM Wiring Diagram (3 of 8) 6E–9
PCM Wiring Diagram (4 of 8) 6E–10
PCM Wiring Diagram (5 of 8) 6E–11
PCM Wiring Diagram (6 of 8) 6E–12
PCM Wiring Diagram (7 of 8) 6E–13
PCM Wiring Diagram (8 of 8) 6E–14
PCM Pinouts 6E–15
PCM Pinout Table, 80-Way Blue Connector – Row “F1 ~ 20” 6E–15
PCM Pinout Table, 80-Way Blue Connector – Row “F20 ~ 40” 6E–16
PCM Pinout Table, 80-Way Blue Connector – Row “F41 ~ 60” 6E–18
PCM Pinout Table, 80-Way Blue Connector – Row “F61 ~ 80” 6E–20
PCM Pinout Table, 80-Way Red Connector – Row “S1 ~ 20” 6E–22
PCM Pinout Table, 80-Way Red Connector – Row “S21 ~ 40” 6E–24
PCM Pinout Table, 80-Way Red Connector – Row “S41 ~ 60” 6E–26
PCM Pinout Table, 80-Way Red Connector – Row “S61 ~ 80” 6E–28
Component Locators 6E–30
Undercarriage Component Locator 6E–32
Fuse and Relay Panel (Underhood Electrical Center) 6E–33
Sensors and Miscellaneous Component Locators 6E–34
Diagnosis 6E–36
Strategy-Based Diagnostics 6E–36
Strategy-Based Diagnostics 6E–36
DTC Stored 6E–36
No DTC 6E–36
No Matching Symptom 6E–36
Intermittents 6E–36
No Trouble Found 6E–36
Verifying Vehicle Repair 6E–36
General Service Information 6E–36
OBD II Serviceablity Issues 6E–36
Visual / Physical Engine Compartment Inspection 6E–37
Basic Knowledge of Tools Required 6E–37
Serial Data Communications 6E–38
Class 2 Serial Data Communications 6E–38
On-Board Diagnostic (OBD II) 6E–38
On-Board Diagnostic Tests 6E–38
Comprehensive Component Monitor Diagnostic Operation 6E–38
System Status and Drive Cycle for Satisfying Federal Inspection/Maintenance (I/M 240) Regulations 6E–39
Common OBD II Terms 6E–39
The Diagnostic Executive 6E–39
DTC Types 6E–40
Decimal/Binary/Hexadecimal Conversions 6E–41
Verifying Vehicle Repair 6E–42
Reading Diagnostic Trouble Codes Using The Tech 2 Scan Tool 6E–42
Tech 2 . . . . . 6E–43
Tech 2 Features 6E–44
Getting Started 6E–44
Operating Procedure (For Example) 6E–45
DTC Modes 6E–46
DTC Information Mode 6E–46
Miscellaneous Test 6E–47
Lamps Test 6E–47
Relays Test 6E–49
EVAP Test 6E–50
Fuel System Test 6E–51
Instruments Test 6E–53
EGR Control Test 6E–55
Variable Intake Manifold Solenoid Test . . . 6E–55
Injector Balance Test 6E–57
Plotting Snapshot Graph 6E–57
Plotting Graph Flow Chart (Plotting graph after obtaining vehicle information) 6E–58
Flow Chart for Snapshot Replay (Plotting Graph) 6E–59
Primary System-Based Diagnostic 6E–60
Primary System-Based Diagnostic 6E–60
Fuel Control Heated Oxygen Sensor 6E–60
HO2S Heater 6E–60
Catalyst Monitor Heated Oxygen Sensors and Diagnostic Operation 6E–60
Misfire Monitor Diagnostic Operation 6E–61
Misfire Monitor Diagnostic Operation 6E–61
Misfire Counters 6E–61
Fuel Trim System Monitor Diagnostic Operation 6E–62
Fuel Trim System Monitor Diagnostic Operation 6E–62

Fuel Trim Cell Diagnostic Weights 6E–62
On-Board Diagnostic (OBD II) System Check 6E–63
Circuit Description 6E–63
Diagnostic Aids 6E–63
Test Description 6E–63
A/C Clutch Control Circuit Diagnosis 6E–66
Circuit Description 6E–66
Diagnostic Aids 6E–66
A/C Clutch Diagnosis 6E–67
Electronic Ignition System Diagnosis 6E–71
EVAP Canister Purge Solenoid and EVAP Vent Solenoid Valve 6E–71
Visual Check of The Evaporative Emission Canister 6E–71
Fuel Metering System Check 6E–71
Fuel System Pressure Test 6E–71
Fuel Injector Coil Test Procedure and Fuel Injector Balance Test Procedure 6E–71
Test Description 6E–71
Injector Coil Test Procedure (Steps 1-6) and Injector Balance Test Procedure (Steps 7-11) 6E–72
Powertrain Control Module (PCM) Diagnosis 6E–76
Multiple PCM Information Sensor DTCs Set 6E–76
Circuit Description 6E–76
Diagnostic Aids 6E–76
Exhaust Gas Recirculation (EGR) Diagnosis 6E–79
Engine Tech 2 Data Definitions and Ranges 6E–79
Typical Scan Data Values 6E–81
Test Conditions 6E–81
No Malfunction Indicator Lamp (MIL) 6E–87
Circuit Description 6E–87
Diagnostic Aids 6E–87
Malfunction Indicator Lamp (MIL) “ON” Steady 6E–90
Circuit description 6E–90
Diagnostic Aids 6E–90
No Reduced Power Lamp (RPL) 6E–92
Circuit Description 6E–92
Diagnostic Aids 6E–92
Reduced Power Lamp (RPL) “ON” Steady .. 6E–95
Circuit description 6E–95
Diagnostic Aids 6E–95
Engine Cranks But Will Not Run 6E–97
Circuit Description 6E–99
Diagnostic Aids 6E–99
Test Description 6E–99
Fuel System Electrical Test 6E–104
Circuit Description 6E–105
Diagnostic Aids 6E–105
Test Description 6E–105
Fuel Pressure Relief Procedure 6E–105
Electric Throttle Control (ETC) System Check 6E–108
Circuit Description 6E–109
Diagnostic Aids 6E–109
Test Description 6E–109
Fuel System Diagnosis 6E–112
Circuit Description 6E–113
Test Description 6E–113
Fuel Pressure Relief Procedure 6E–114
Exhaust Gas Recirculation (EGR) System Check 6E–117
Circuit Description 6E–117
Manifold Absolute Pressure (MAP) Output Check 6E–119
Circuit Description 6E–119
Evaporative (EVAP) Emissions Canister Purge Valve Check 6E–121
Circuit Description 6E–121
Diagnostic Aids 6E–121
PCM Diagnostic Trouble Codes 6E–124
DTC P0101 MAF System Performance 6E–128
DTC P0102 MAF Sensor Circuit Low Frequency 6E–131
DTC P0103 MAF Sensor Circuit High Frequency 6E–134
DTC P0106 MAP System Performance 6E–136
DTC P0107 MAP Sensor Circuit Low Voltage 6E–139
DTC P0108 MAP Sensor Circuit High Voltage 6E–142
DTC P0112 IAT Sensor Circuit Low Voltage 6E–145
DTC P0113 IAT Sensor Circuit High Voltage 6E–148
DTC P0117 ECT Sensor Circuit Low Voltage 6E–151
DTC P0118 ECT Sensor Circuit High Voltage 6E–154
DTC P0125 ECT Excessive Time to Closed Loop Fuel Control 6E–157
DTC P0131 HO2S Circuit Low Voltage Bank 1 Sensor 1 ..... 6E–160
DTC P0132 HO2S Circuit High Voltage Bank 1 Sensor 1 ..... 6E–163
DTC P0133 HO2S Slow Response Bank 1 Sensor 1 ..... 6E–166
DTC P0134 HO2S Circuit Insufficient Activity Bank 1 Sensor 1 ..... 6E–170
DTC P0135 HO2S Heater Circuit Bank 1 Sensor 1 ..... 6E–173
DTC P0137 HO2S Circuit Low Voltage Bank 1 Sensor 2 ..... 6E–176
DTC P0138 HO2S Circuit High Voltage Bank 1 Sensor 2 ..... 6E–179
DTC P0140 HO2S Circuit Insufficient Activity Bank 1 Sensor 2 ..... 6E–182
DTC P0141 HO2S Heater Circuit Bank 1 Sensor 2 ..... 6E–185

DTC P0151 HO2S Circuit Low Voltage Bank 2 Sensor 1 . . . . . 6E–188
DTC P0152 HO2S Circuit High Voltage Bank 2 Sensor 1 . . . . . 6E–191
DTC P0153 HO2S Slow Response Bank 2 Sensor 1 . . . . . 6E–194
DTC P0154 HO2S Circuit Insufficient Activity Bank 2 Sensor 1 . . . . . 6E–198
DTC P0155 HO2S Heater Circuit Open Bank 2 Sensor 1 . . . . . 6E–201
DTC P0157 HO2S Circuit Low Voltage Bank 2 Sensor 2 . . . . . 6E–204
DTC P0158 HO2S Circuit High Voltage Bank 2 Sensor 2 . . . . . 6E–207
DTC P0160 HO2S Circuit Insufficient Activity Bank 2 Sensor 2 . . . . . 6E–210
DTC P0161 HO2S Heater Circuit Bank 2 Sensor 2 . . . . . 6E–213
DTC P0171 Fuel Trim System Lean Bank 1 . 6E–216
DTC P0172 Fuel Trim System Rich Bank 1 . 6E–220
DTC P0174 Fuel Trim System Lean Bank 2 . 6E–224
DTC P0175 Fuel Trim System Rich Bank 2 . 6E–228
DTC P0201 Injector 1 Control Circuit 6E–232
DTC P0202 Injector 2 Control Circuit 6E–235
DTC P0203 Injector 3 Control Circuit 6E–238
DTC P0204 Injector 4 Control Circuit 6E–241
DTC P0205 Injector 5 Control Circuit 6E–244
DTC P0206 Injector 6 Control Circuit 6E–247
DTC P0300 Engine Misfire Detected 6E–250
DTC P0325 ION Sensing Module/ION Sensing Knock Intensity Circuit Fault 6E–254
DTC P0336 58X Reference Signal Circuit . . 6E–257
DTC P0337 CKP Sensor Circuit Low Frequency 6E–260
DTC P0351 Ignition 1 Control Circuit 6E–263
DTC P0352 Ignition 2 Control Circuit 6E–266
DTC P0353 Ignition 3 Control Circuit 6E–269
DTC P0354 Ignition 4 Control Circuit 6E–272
DTC P0355 Ignition 5 Control Circuit 6E–275
DTC P0356 Ignition 6 Control Circuit 6E–278
DTC P0401 EGR Flow Insufficient 6E–281
DTC P0402 EGR Pintle Crank Error 6E–284
DTC P0404 EGR Open Stuck 6E–286
DTC P0405 EGR Low Voltage 6E–288
DTC P0406 EGR High Voltage 6E–291
DTC P0420 TWC System Low Efficiency Bank 1 . . . . . 6E–294
DTC P0430 TWC System Low Efficiency Bank 2 . . . . . 6E–297
DTC P0440 EVAP System 6E–300
DTC P0442 EVAP System Small Leak Detected 6E–303
DTC P0444 EVAP Purge Control Circuit Open 6E–306
DTC P0445 EVAP Purge Control Circuit Short 6E–308
DTC P0446 EVAP Canister Vent Control Malfunction 6E–310
DTC P0447 EVAP Vent Solenoid Circuit Open 6E–313
DTC P0448 EVAP Vent solenoid Circuit Short 6E–315
DTC P0452 Fuel Tank Pressure Sensor (Vapor Pressure Sensor) Low Voltage 6E–317
DTC P0453 Fuel Tank Pressure Sensor (Vapor Pressure Sensor) High Voltage 6E–320
DTC P0456 EVAP Very Small Leak 6E–323
DTC P0461 Fuel Level Sensor Performance 6E–326
DTC P0462 Fuel Level Sensor Circuit–Low Voltage 6E–328
DTC P0463 Fuel Level Sensor Circuit–High Voltage 6E–331
DTC P0464 Fuel Level Sensor Noisy Signal 6E–333
DTC P0502 VSS Circuit Low Input 6E–335
DTC P0506 Idle Air Control System Low RPM 6E–338
DTC P0507 Idle Air Control System High RPM 6E–341
DTC P0562 System Voltage Low 6E–344
DTC P0563 System Voltage High 6E–346
DTC P0565 Cruise Main Switch Circuit Error 6E–348
DTC P0566 Cruise Cancel Switch Circuit Error 6E–350
DTC P0567 Cruise Resume Switch Circuit Error 6E–352
DTC P0568 Cruise Set Switch Circuit Error . 6E–354
DTC P0571 No Brake Switch Signal 6E–356
DTC P0601 PCM Memory 6E–358
DTC P0602 PCM Programming Error 6E–360
DTC P0604 PCM RAM Error 6E–362
DTC P0606 PCM Internal Performance 6E–364
DTC P0660 VIM Solenoid Circuit Open 6E–366
DTC P0662 VIM Solenoid Circuit Short 6E–368
DTC P1106 MAP Sensor Circuit Intermittent High Voltage 6E–370
DTC P1107 MAP Circuit Intermittent Low Voltage 6E–372
DTC P1111 IAT Sensor Circuit Intermittent High Voltage 6E–374
DTC P1112 IAT Sensor Circuit Intermittent Low Voltage 6E–377
DTC P1114 ECT Sensor Circuit Intermittent Low Voltage 6E–379
DTC P1115 ECT Sensor Circuit Intermittent High Voltage 6E–381
DTC P1120-TPS 1 Throttle Position Sensor (TPS1) Circuit Fault 6E–384
DTC P1125 ETC (Electric throttle control) Limit Performance Mode 6E–387

DTC P1133 HO2S Insufficient Switching Bank 1 Sensor 1 . . . . . 6E–390
DTC P1134 HO2S Transition Time Ratio Bank 1 Sensor 1 . . . . . 6E–394
DTC P1153 HO2S Insufficient Switching Bank 2 Sensor 1 . . . . . 6E–398
DTC P1154 HO2S Circuit Transition Time Ratio Bank 2 Sensor 1 . . . . . 6E–402
DTC P1167 Fuel System Rich During Decel Fuel Cut Off (Bank 1) 6E–406
DTC P1169 Fuel System Rich During Decel Fuel Cut Off (Bank 2) 6E–408
DTC P1171 Fuel System Lean During Acceleration 6E–410
DTC P1220 Throttle Position Senser2 (TPS2) Circuit Fault 6E–413
DTC P1221 TPS1 – TPS2 correlation (Circuit Performance) 6E–416
DTC P1271 APS 1– 2 Correlation Error 6E–419
DTC P1272 APS 2 – 3 Correlation Error 6E–422
DTC P1273 APS 1 – 3 Correlation Error 6E–425
DTC P1275 APS 1 Circuit Fault 6E–428
DTC P1280 APS 2 Circuit Fault 6E–430
DTC P1285 APS 3 Circuit Fault 6E–432
DTC P1290 ETC Forced Idle Mode 6E–434
DTC P1295 Power Management Mode 6E–436
DTC P1299 ETC Forced Engine Shutdown Mode 6E–438
DTC P1310 ION Sensing Module Diagnosis 6E–440
DTC P1311 ION Sensing Module SEC Line 1 Circuit Fault 6E–443
DTC P1312 ION Sensing Module SEC Line 2 Circuit Fault 6E–446
DTC P1326 ION Sensing Module Combustion Quality Input Circuit Fault 6E–449
DTC P1340 ION Sensing Module Cylinder ID Fault (Cylinder Synchronization Fail) 6E–452
DTC P1404 EGR Stuck Closed 6E–455
DTC P1441 EVAP System Flow During Non-Purge 6E–458
DTC P1514 TPS - MAF Correlation Error . . . 6E–461
DTC P1515 Command - Actual TPS Correlation Error 6E–465
DTC P1516 Command - Actual TPS Correlation Error 6E–468
DTC P1523 Actuator Control Return Performance 6E–471
DTC P1574 Brake Switch No Operation 6E–474
DTC P1635 Reference Voltage # 1 Circuit Fault 6E–476
DTC P1636 PCM RAM Stack 6E–478
DTC P1639 Reference Voltage # 2 Circuit Fault 6E–479
DTC P1640 Driver-1-Output Circuit Fault (ODM) 6E–481
DTC P1650 Quad Driver Module “A” Fault . . 6E–483
Symptom Diagnosis 6E–486
Default Matrix Table 6E–515
On Vehicle Service Crankshaft Position (CKP) Sensor 6E–518
Engine Coolant Temperature (ECT) Sensor . 6E–518
Heated Oxygen Sensor (HO2S) 6E–519
Intake Air Temperature (IAT) Sensor 6E–522
ION Sensing Module 6E–522
Mass Air Flow (MAF) Sensor 6E–523
Manifold Absolute Pressure (MAP) Sensor . 6E–524
Malfunction Indicator Lamp (MIL) 6E–525
Reduced Power Lamp 6E–525
Powertrain Control Module (PCM) 6E–525
Service Precaution 6E–525
Removal Procedure 6E–525
Installation Procedure 6E–526
EEPROM 6E–527
Throttle Position (TP) Sensor 6E–527
Vehicle Speed Sensor (VSS) 6E–528
Air Cleaner/Air Filter 6E–529
Common Chamber 6E–529
Accelerator Pedal Replacement 6E–530
Accelerator Position Sensor Replacement . . 6E–531
Accelerator Position Sensor Adjustment 6E–531
Fuel Filler Cap 6E–532
Fuel Filter 6E–532
Fuel Gauge Unit 6E–534
Fuel Injectors 6E–534
Fuel Metering System 6E–535
Fuel Pump Assembly 6E–536
Fuel Pump Relay 6E–536
Fuel Rail Assembly 6E–537
Fuel Tank 6E–538
Throttle Body (TB) 6E–538
Electronic Ignition System 6E–540
Catalytic Converter 6E–541
Air Conditioning Thermo Relay 6E–541
EVAP Canister Hoses 6E–541
EVAP Canister 6E–542
EVAP Canister Vent Solenoid 6E–543
Fuel Tank Pressure (Vapor Pressure) Sensor 6E–544
EVAP Canister Purge Solenoid (Purge Duty Solenoid Valve) 6E–545
Fuel Tank Vent Valve (Vent Solenoid Valve) . 6E–545
Linear Exhaust Gas Recirculation (EGR) Valve 6E–545
Positive Crankcase Ventilation (PCV) Valve . 6E–546
PCV Valve 6E–547
Wiring and Connectors 6E–547
PCM Connectors and Terminals 6E–548
Wire Harness Repair: Twisted Shielded Cable 6E–548
Twisted Leads 6E–549
Weather-Pack Connector 6E–550

Com-Pack III 6E–551
Metri-Pack 6E–552
General Description (PCM and Sensors) ... 6E–553
58X Reference PCM Input 6E–553
A/C Request Signal 6E–553
Crankshaft Position (CKP) Sensor 6E–553
Engine Coolant Temperature (ECT) Sensor 6E–553
Electrically Erasable Programmable Read Only Memory (EEPROM) 6E–553
Fuel Control Heated Oxygen Sensors 6E–553
Catalyst Monitor Heated Oxygen Sensors 6E–554
Intake Air Temperature (IAT) Sensor 6E–554
Linear Exhaust Gas Recirculation (EGR) Control 6E–555
Mass Air Flow (MAF) Sensor 6E–555
Manifold Absolute Pressure (MAP) Sensor 6E–555
Powertrain Control Module (PCM) 6E–556
PCM Function 6E–556
PCM Components 6E–556
PCM Voltage Description 6E–556
PCM Input/Outputs 6E–556
PCM Service Precautions 6E–557
Reprogramming The PCM 6E–557
Throttle Position (TP) Sensor 6E–557
Transmission Fluid Temperature (TFT) Sensor 6E–557
Transmission Range Switch (Mode Switch) 6E–557
Vehicle Speed Sensor (VSS) 6E–557
Use of Circuit Testing Tools 6E–557
Aftermarket Electrical and Vacuum Equipment 6E–558
Electrostatic Discharge Damage 6E–558
General Description (Air Induction) 6E–558
Air Induction System 6E–558
General Description (Fuel Metering) 6E–559
Acceleration Mode 6E–559
Battery Voltage Correction Mode 6E–559
Clear Flood Mode 6E–559
Deceleration Mode 6E–559
Engine Speed/Vehicle Speed/Fuel Disable Mode 6E–559
Fuel Cutoff Mode 6E–559
Fuel Injector 6E–559
Fuel Metering System Components 6E–559
Fuel Metering System Purpose 6E–559
Fuel Pressure Regulator 6E–560
Fuel Pump Electrical Circuit 6E–560
Fuel Rail 6E–560
Run Mode 6E–560
Starting Mode 6E–560
Throttle Body Unit 6E–561
General Description (Electronic Ignition System) 6E–561
Crankshaft Position (CKP) Sensor 6E–561
Electronic Ignition 6E–561
Ignition Coils 6E–561
Ignition Control 6E–561
Ignition Control PCM Output 6E–562
Powertrain Control Module (PCM) 6E–562
Spark Plug 6E–563
A/C Clutch Diagnosis 6E–564
A/C Clutch Circuit Operation 6E–564
A/C Clutch Circuit Purpose 6E–564
A/C Request Signal 6E–564
General Description (Evaporative (EVAP) Emission System) 6E–565
EVAP Emission Control System Purpose . 6E–565
EVAP Emission Control System Operation 6E–565
Enhanced Evaporative Emission Control System 6E–565
General Description (Exhaust Gas Recirculation (EGR) System) 6E–568
EGR Purpose 6E–568
Linear EGR Valve 6E–569
Linear EGR Control 6E–569
Linear EGR Valve Operation and Results of Incorrect Operation 6E–569
EGR Pintle Position Sensor 6E–569
General Description (Positive Crankcase Ventilation (PCV) System) 6E–569
Crankcase Ventilation System Purpose ... 6E–569
Crankcase Ventilation System Operation . 6E–569
Special Tools 6E–571


Specifications

Tightening Specifications

Application	N·m	Lb Ft.	Lb In.
EGR Bolt	25	18	—
Engine Coolant Temperature Sensor	30	22	—
Fuel Drain Plug	20	14	—
Fuel Pressure Regulator Attaching Screw	3	—	26
Fuel Rail Bolts	25	18	—
Fuel Tank Undercover Retaining Bolts	36	27	—
Heated Oxygen Sensor	55	40	—
Lower Intake Manifold to Engine Block Bolts	25	18	—
Lower Intake Manifold to Engine Block Nuts	25	18	—
Spark Plugs	18	13	—
Throttle Body Mounting Bolts	10	—	87
Common Chamber to Lower Intake Manifold Bolts	25	18	—
VSS Retaining Bolt	16	12	—


Diagrams and Schematics

PCM Wiring Diagram (1 of 8)

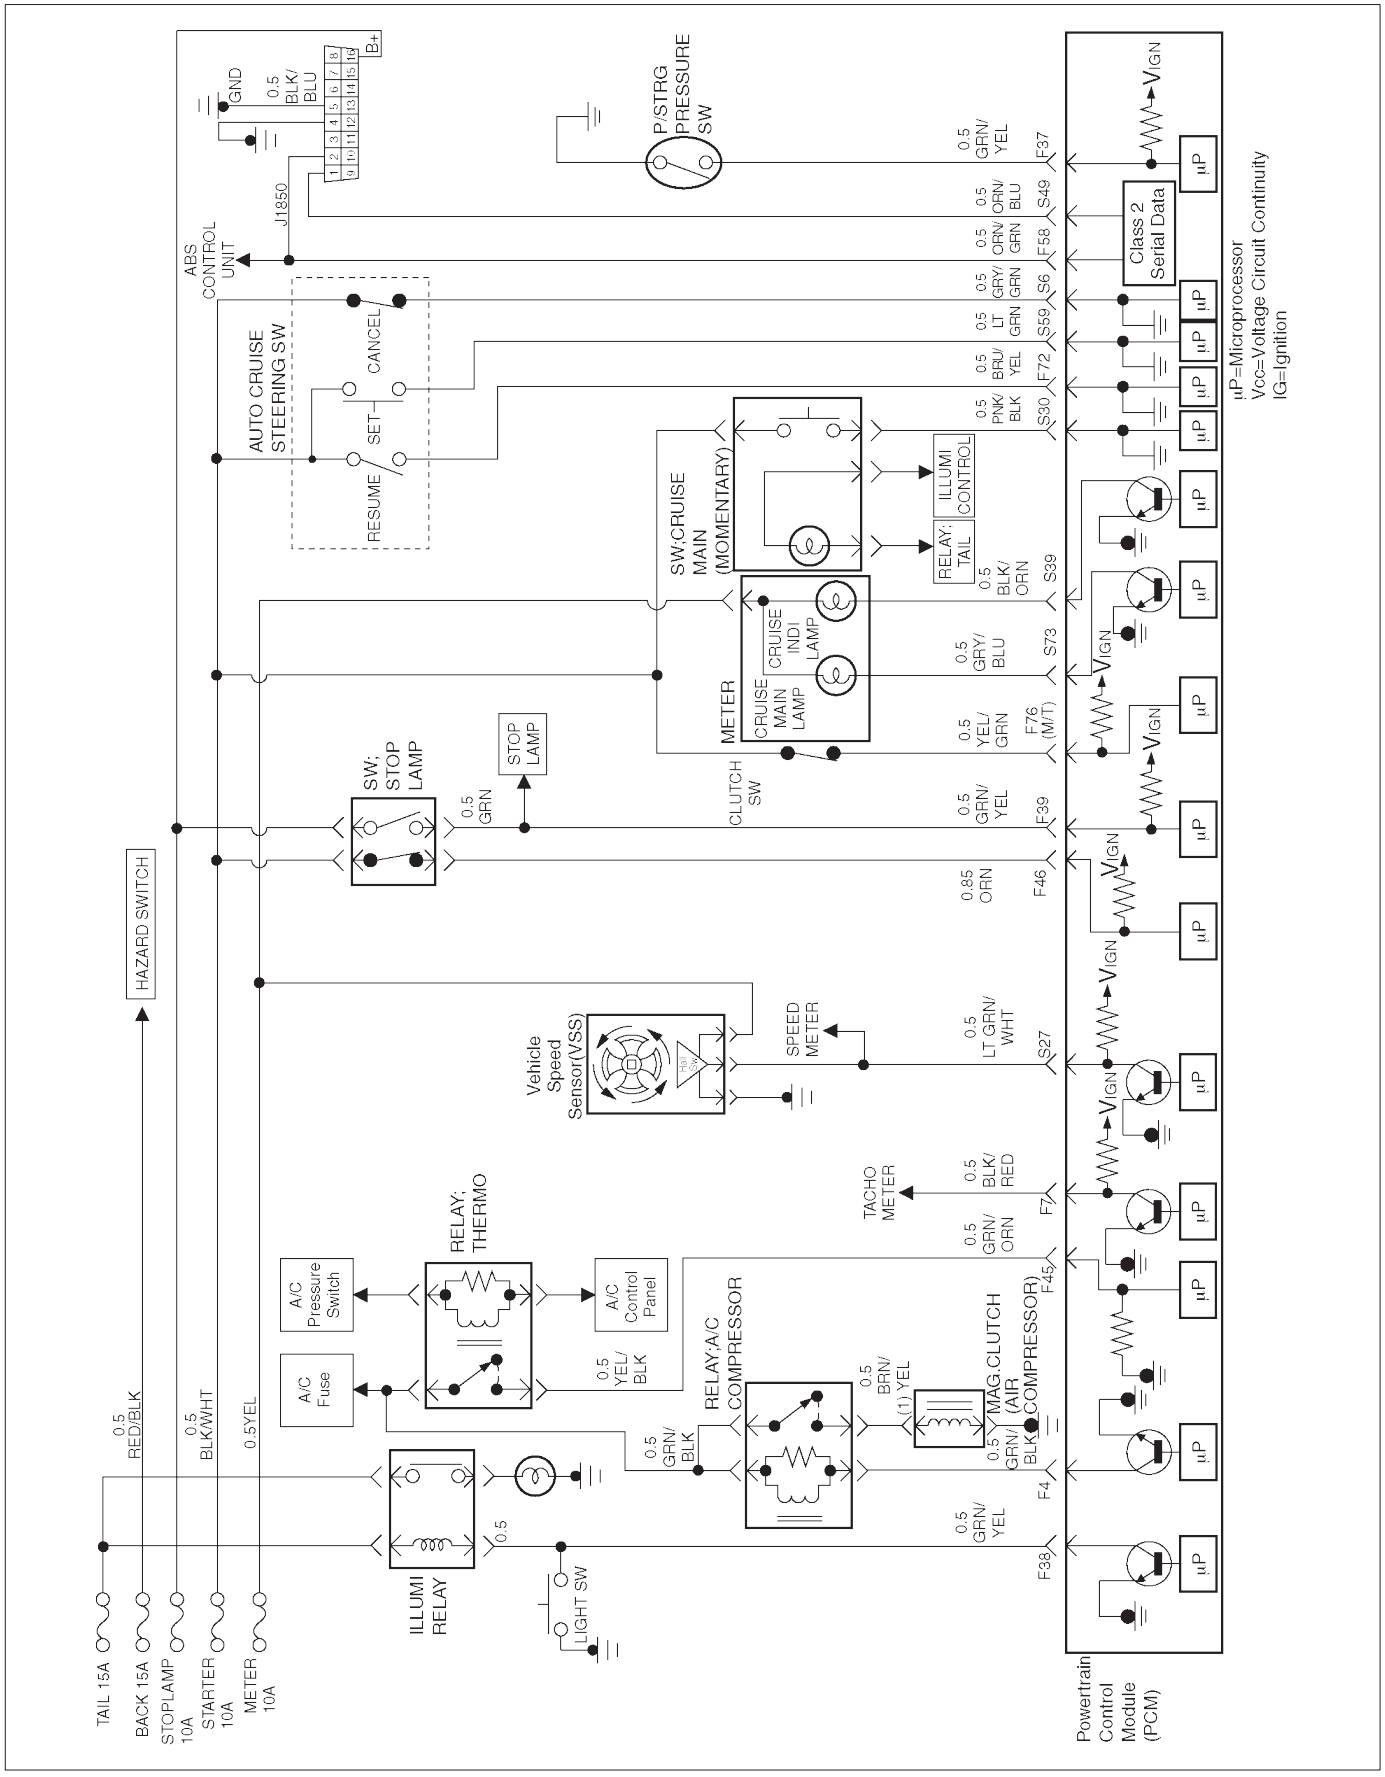


D06R200030

PCM Wiring Diagram (2 of 8)

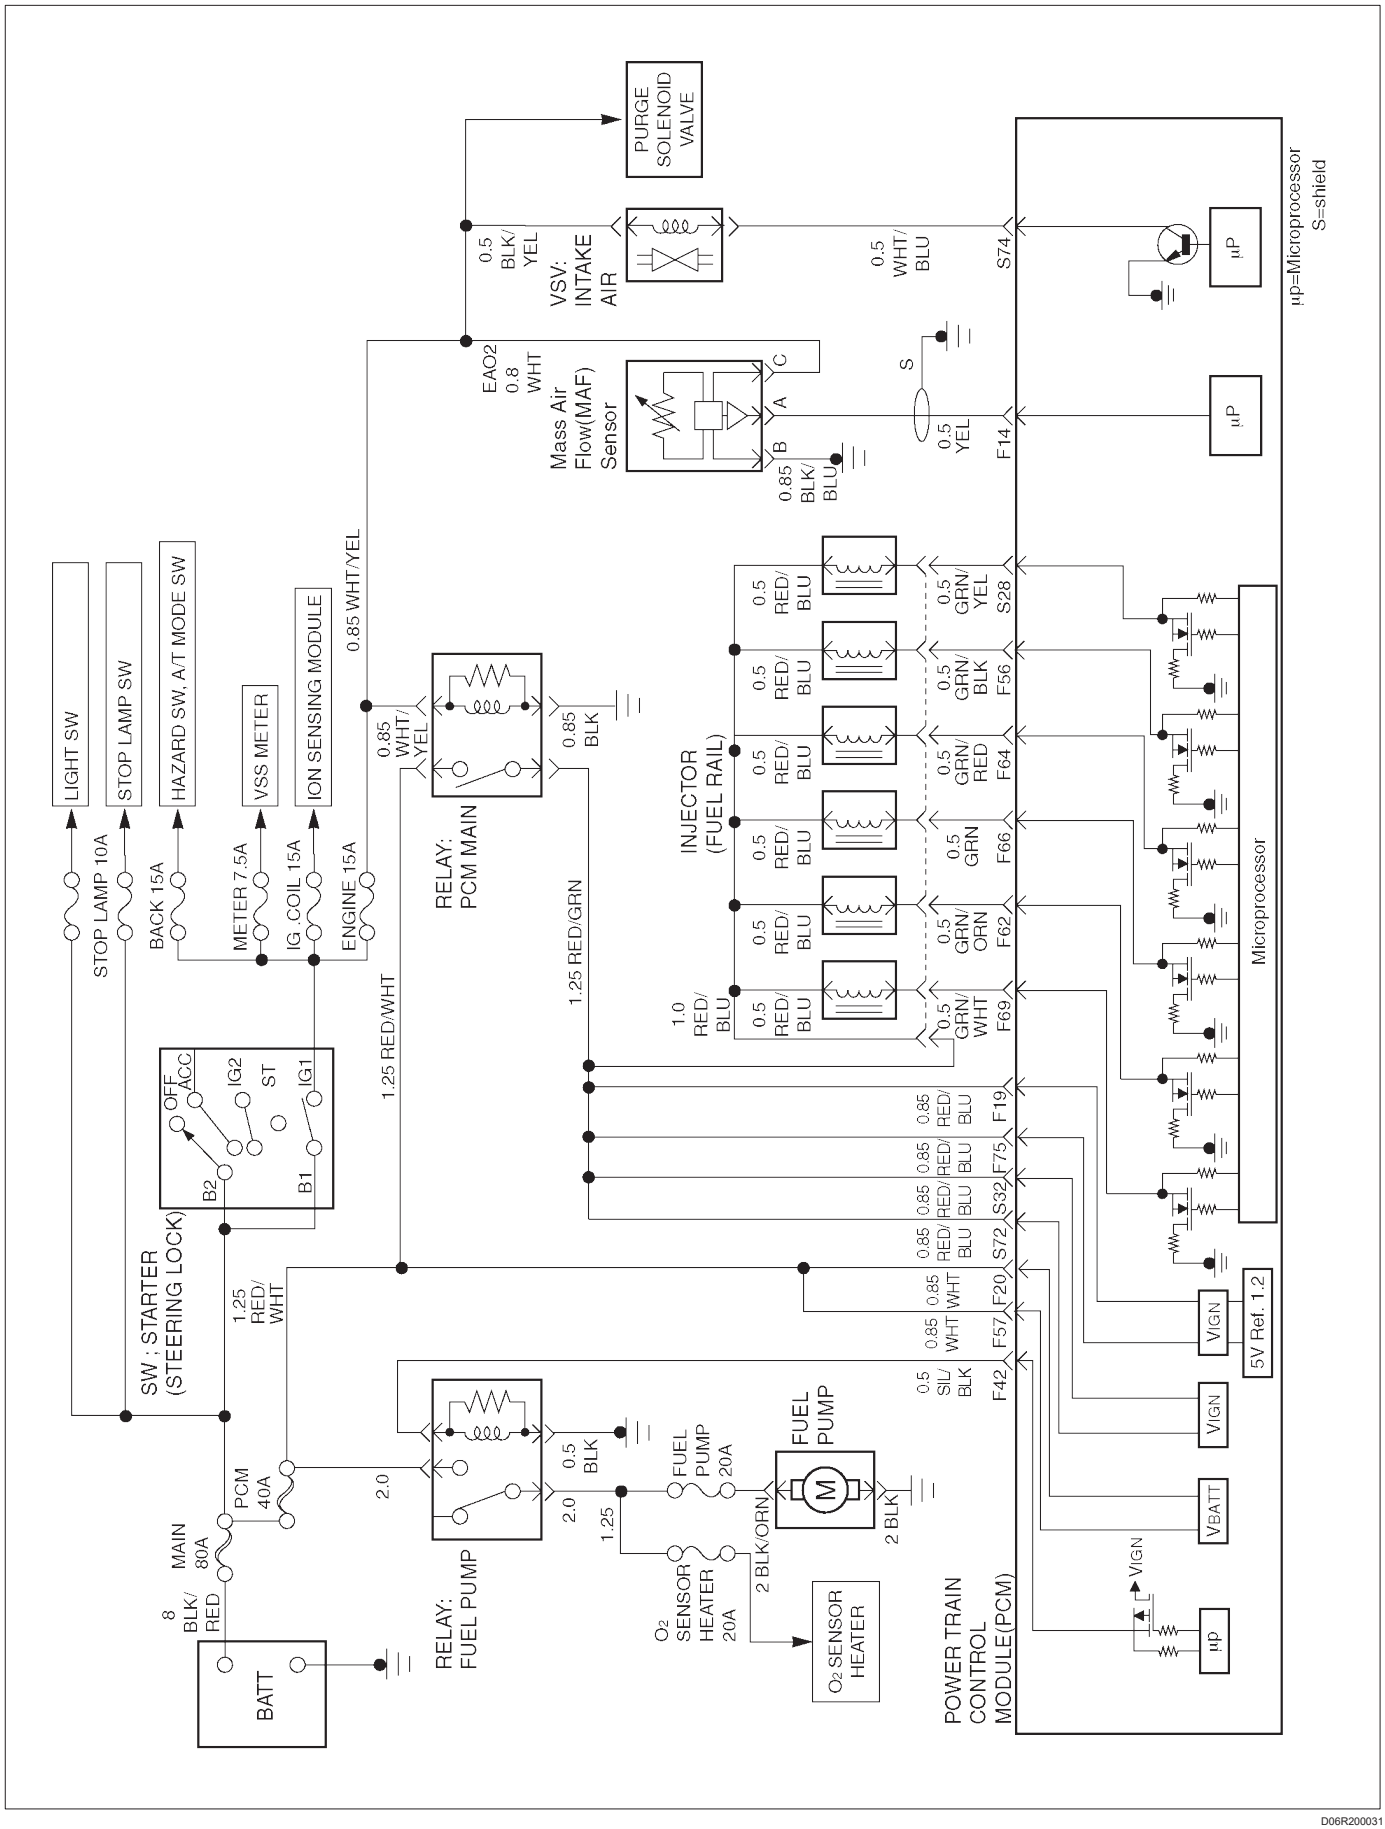


D06R200031

PCM Wiring Diagram (3 of 8)

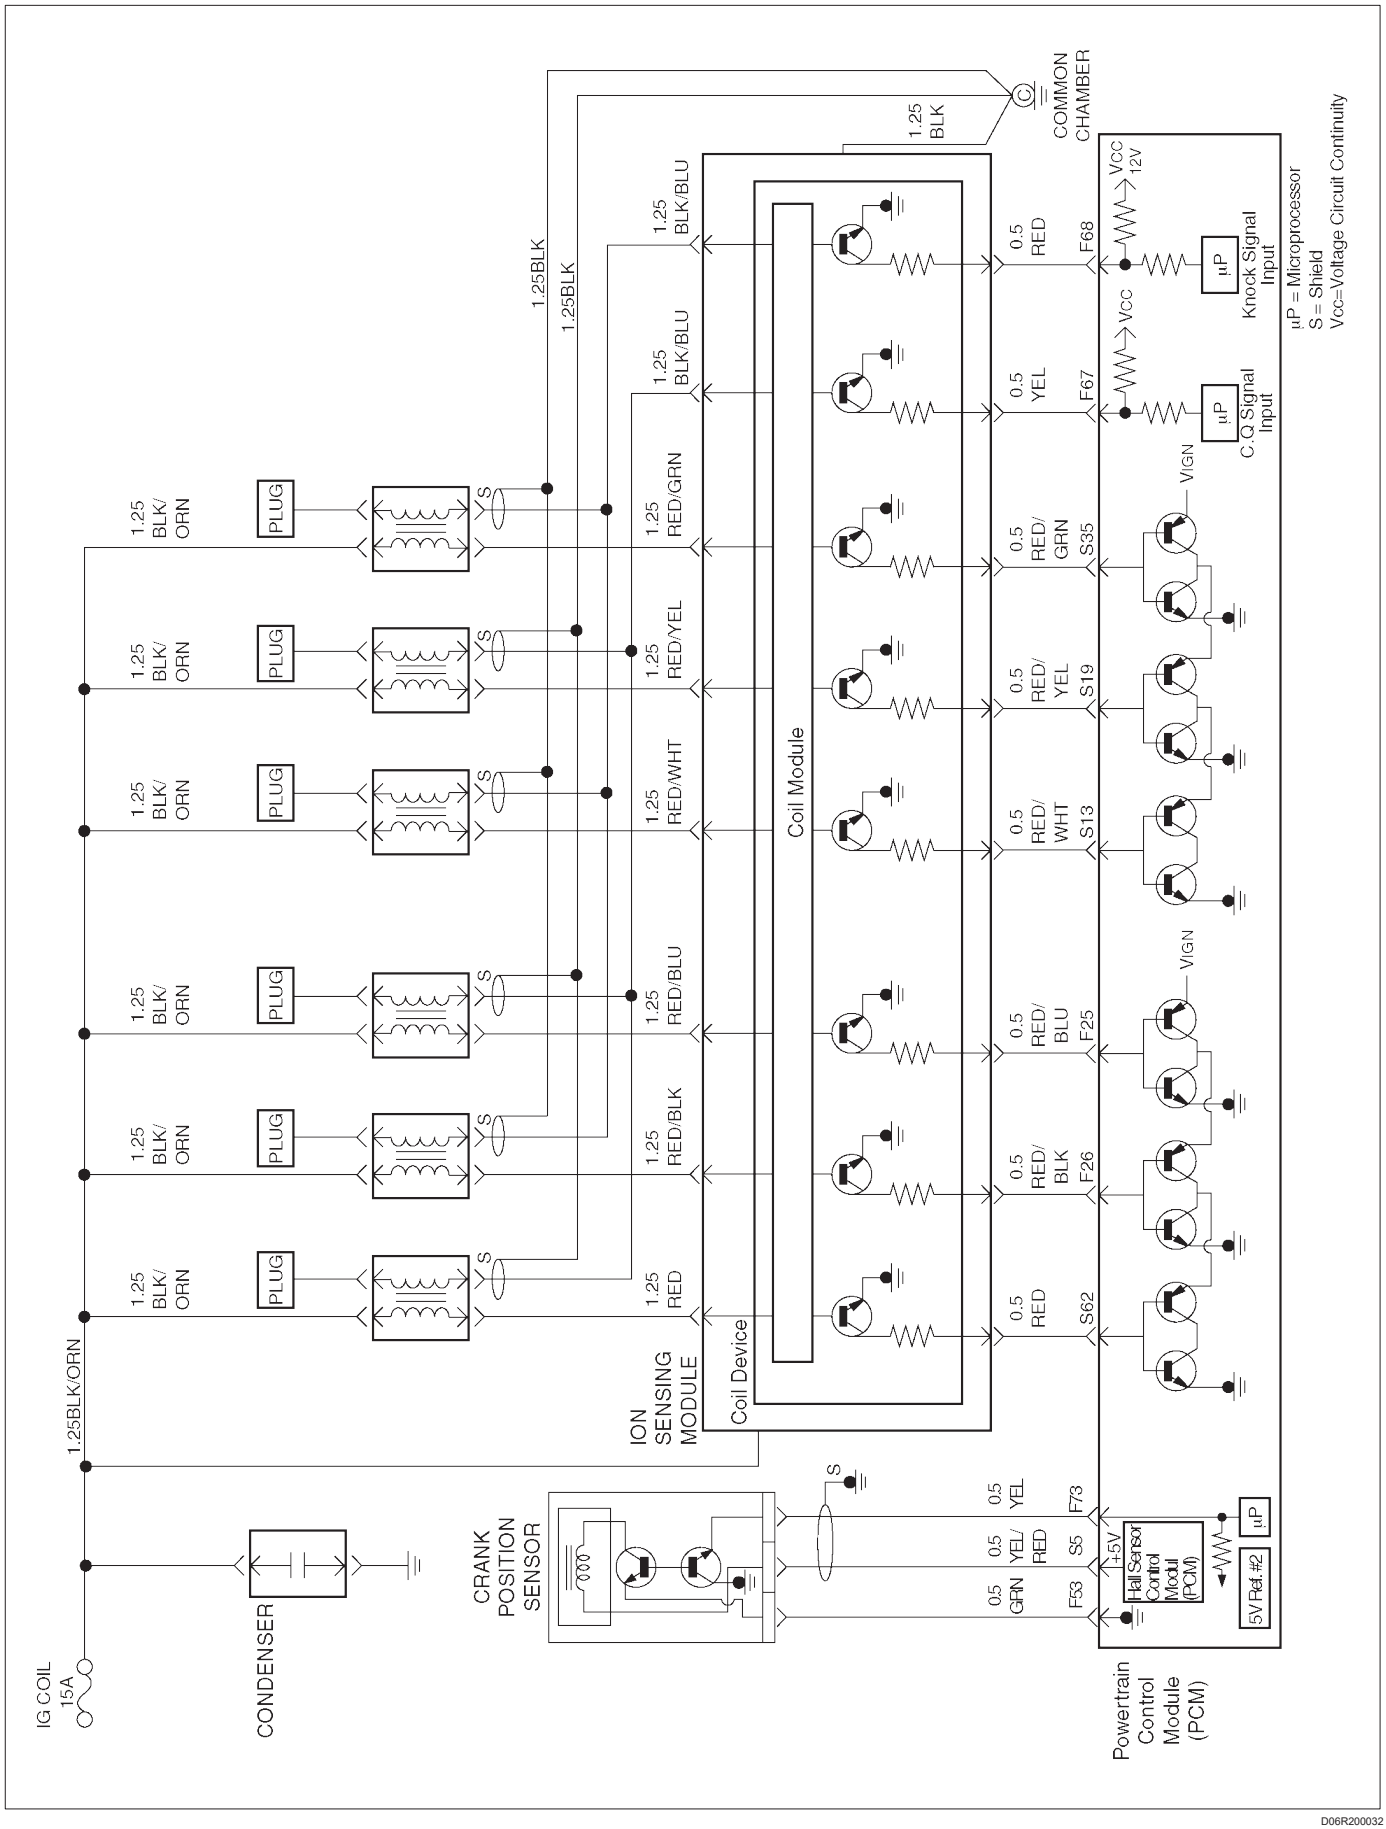


D06R200032

PCM Wiring Diagram (4 of 8)

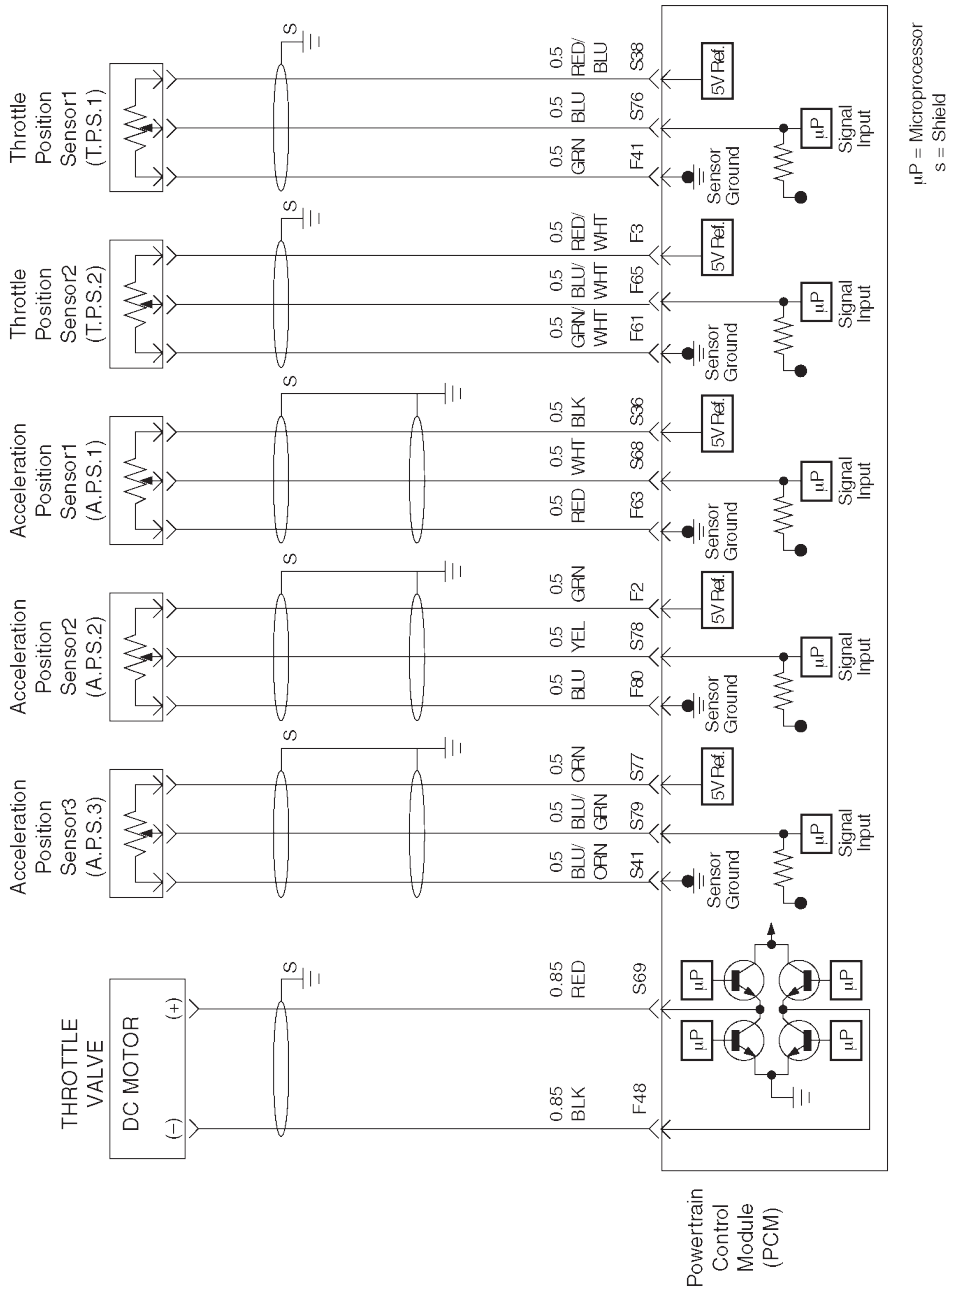


D06R200033

PCM Wiring Diagram (5 of 8)

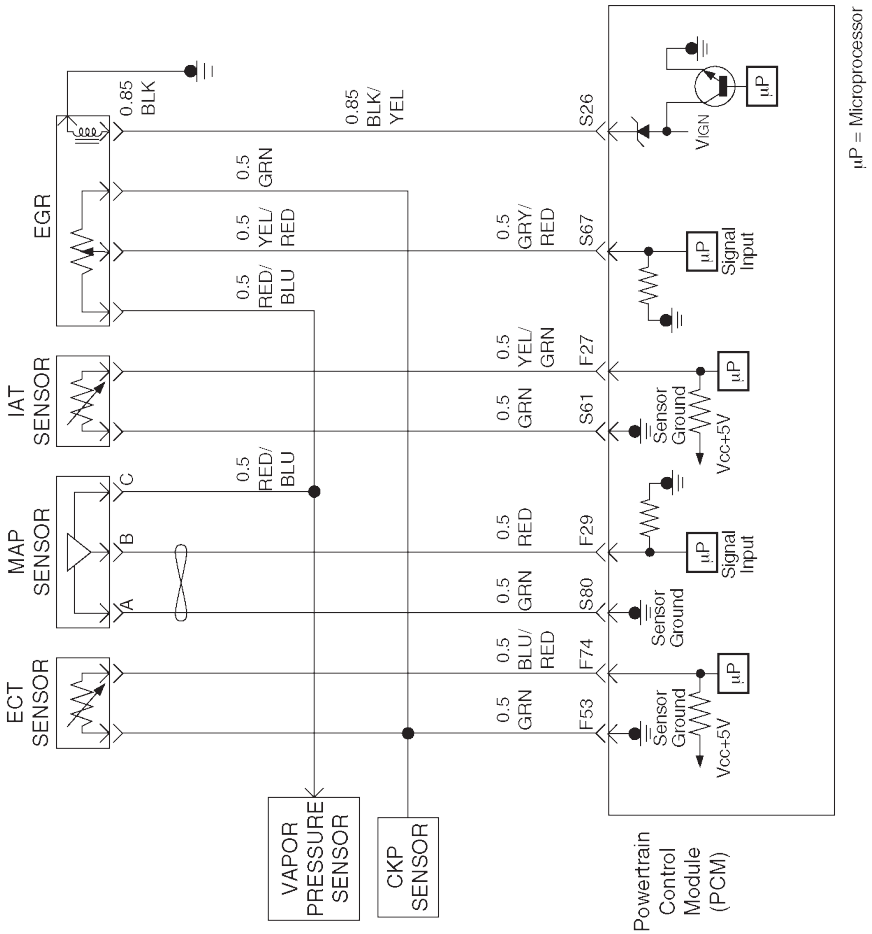


D06R200086

PCM Wiring Diagram (6 of 8)

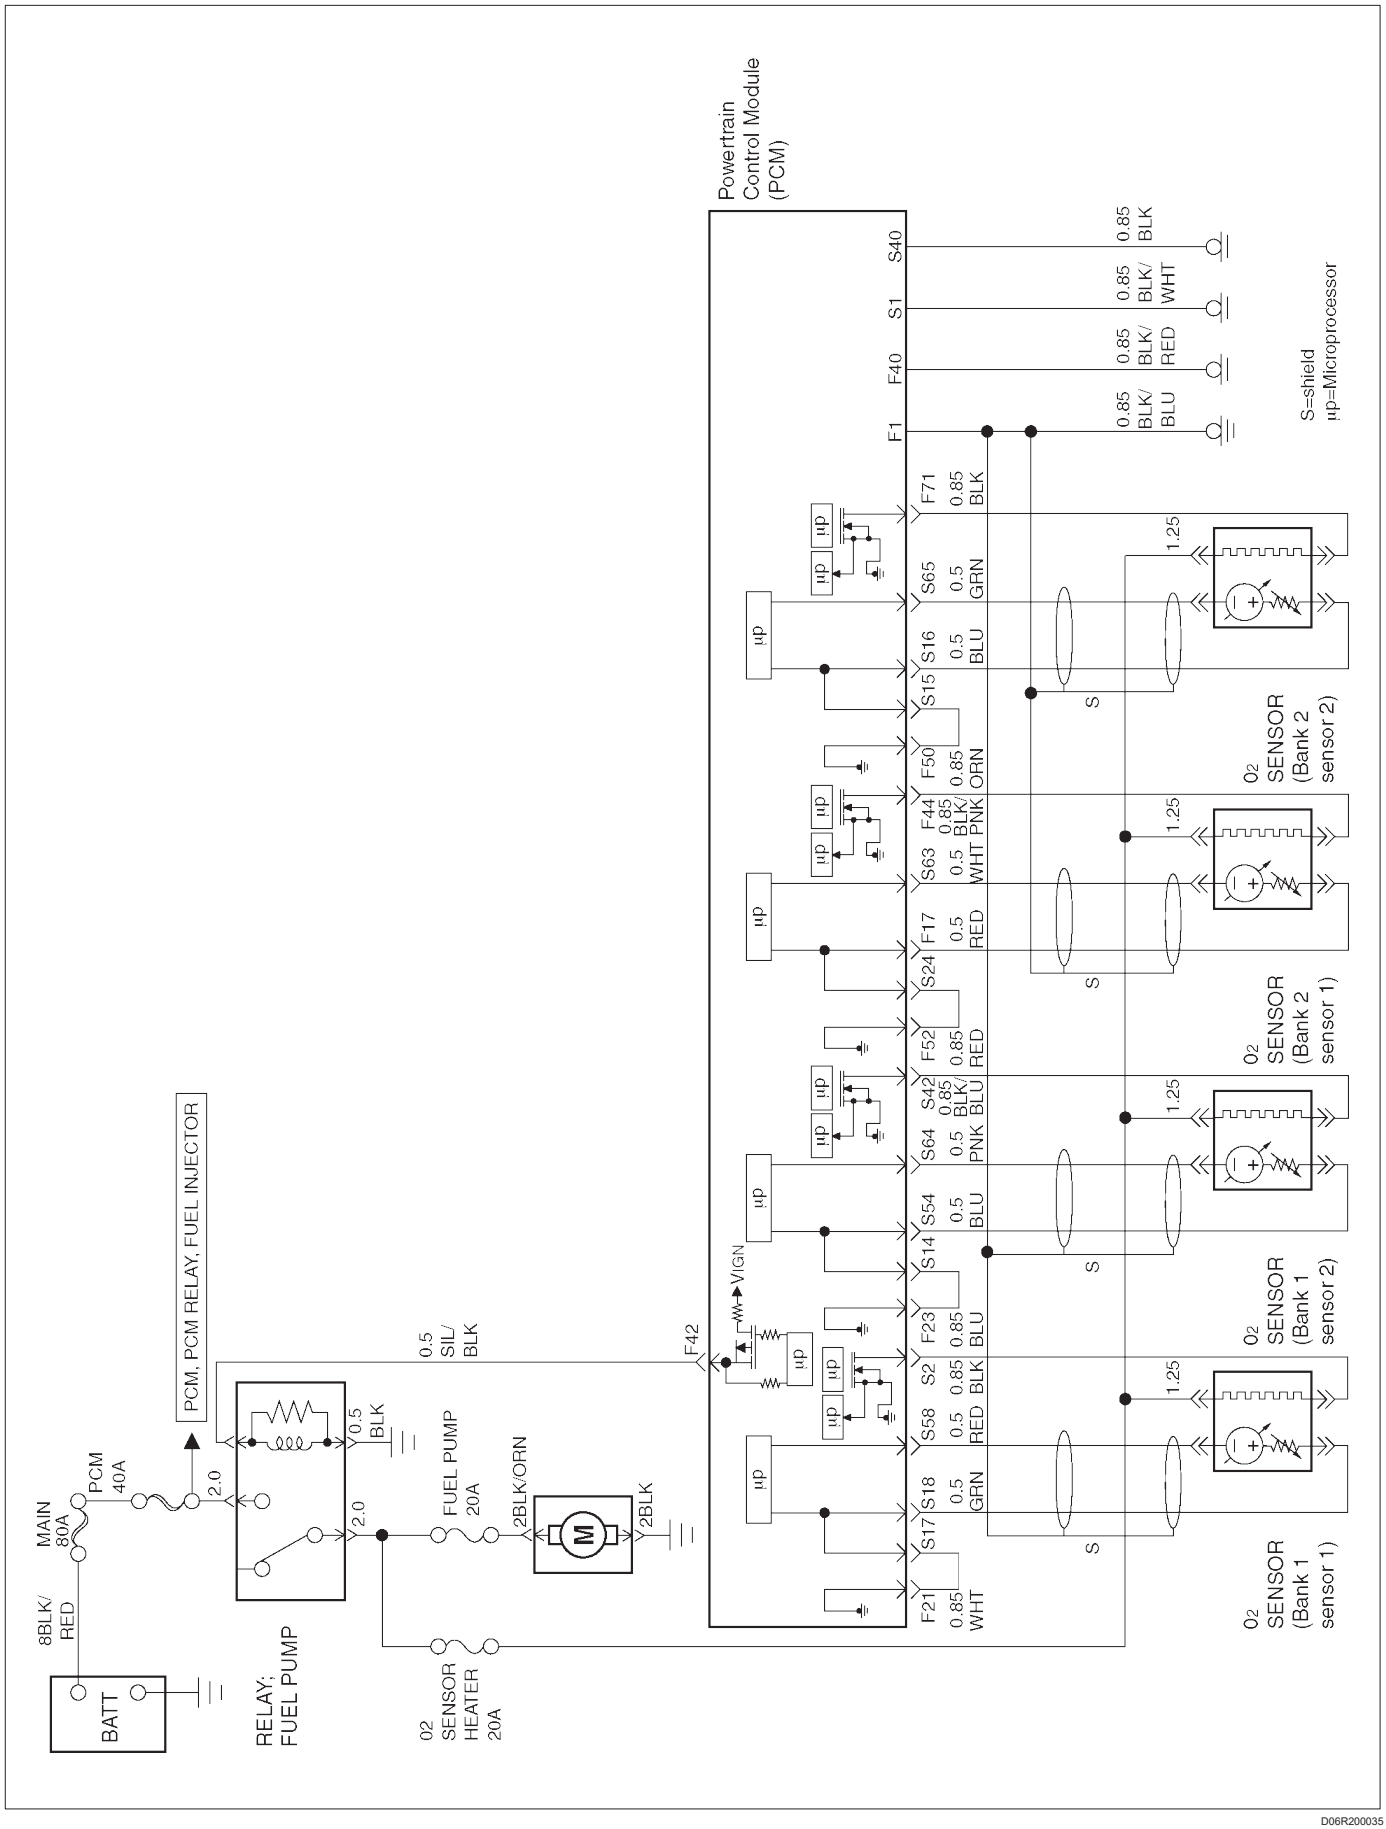


D06R200035

PCM Wiring Diagram (7 of 8)

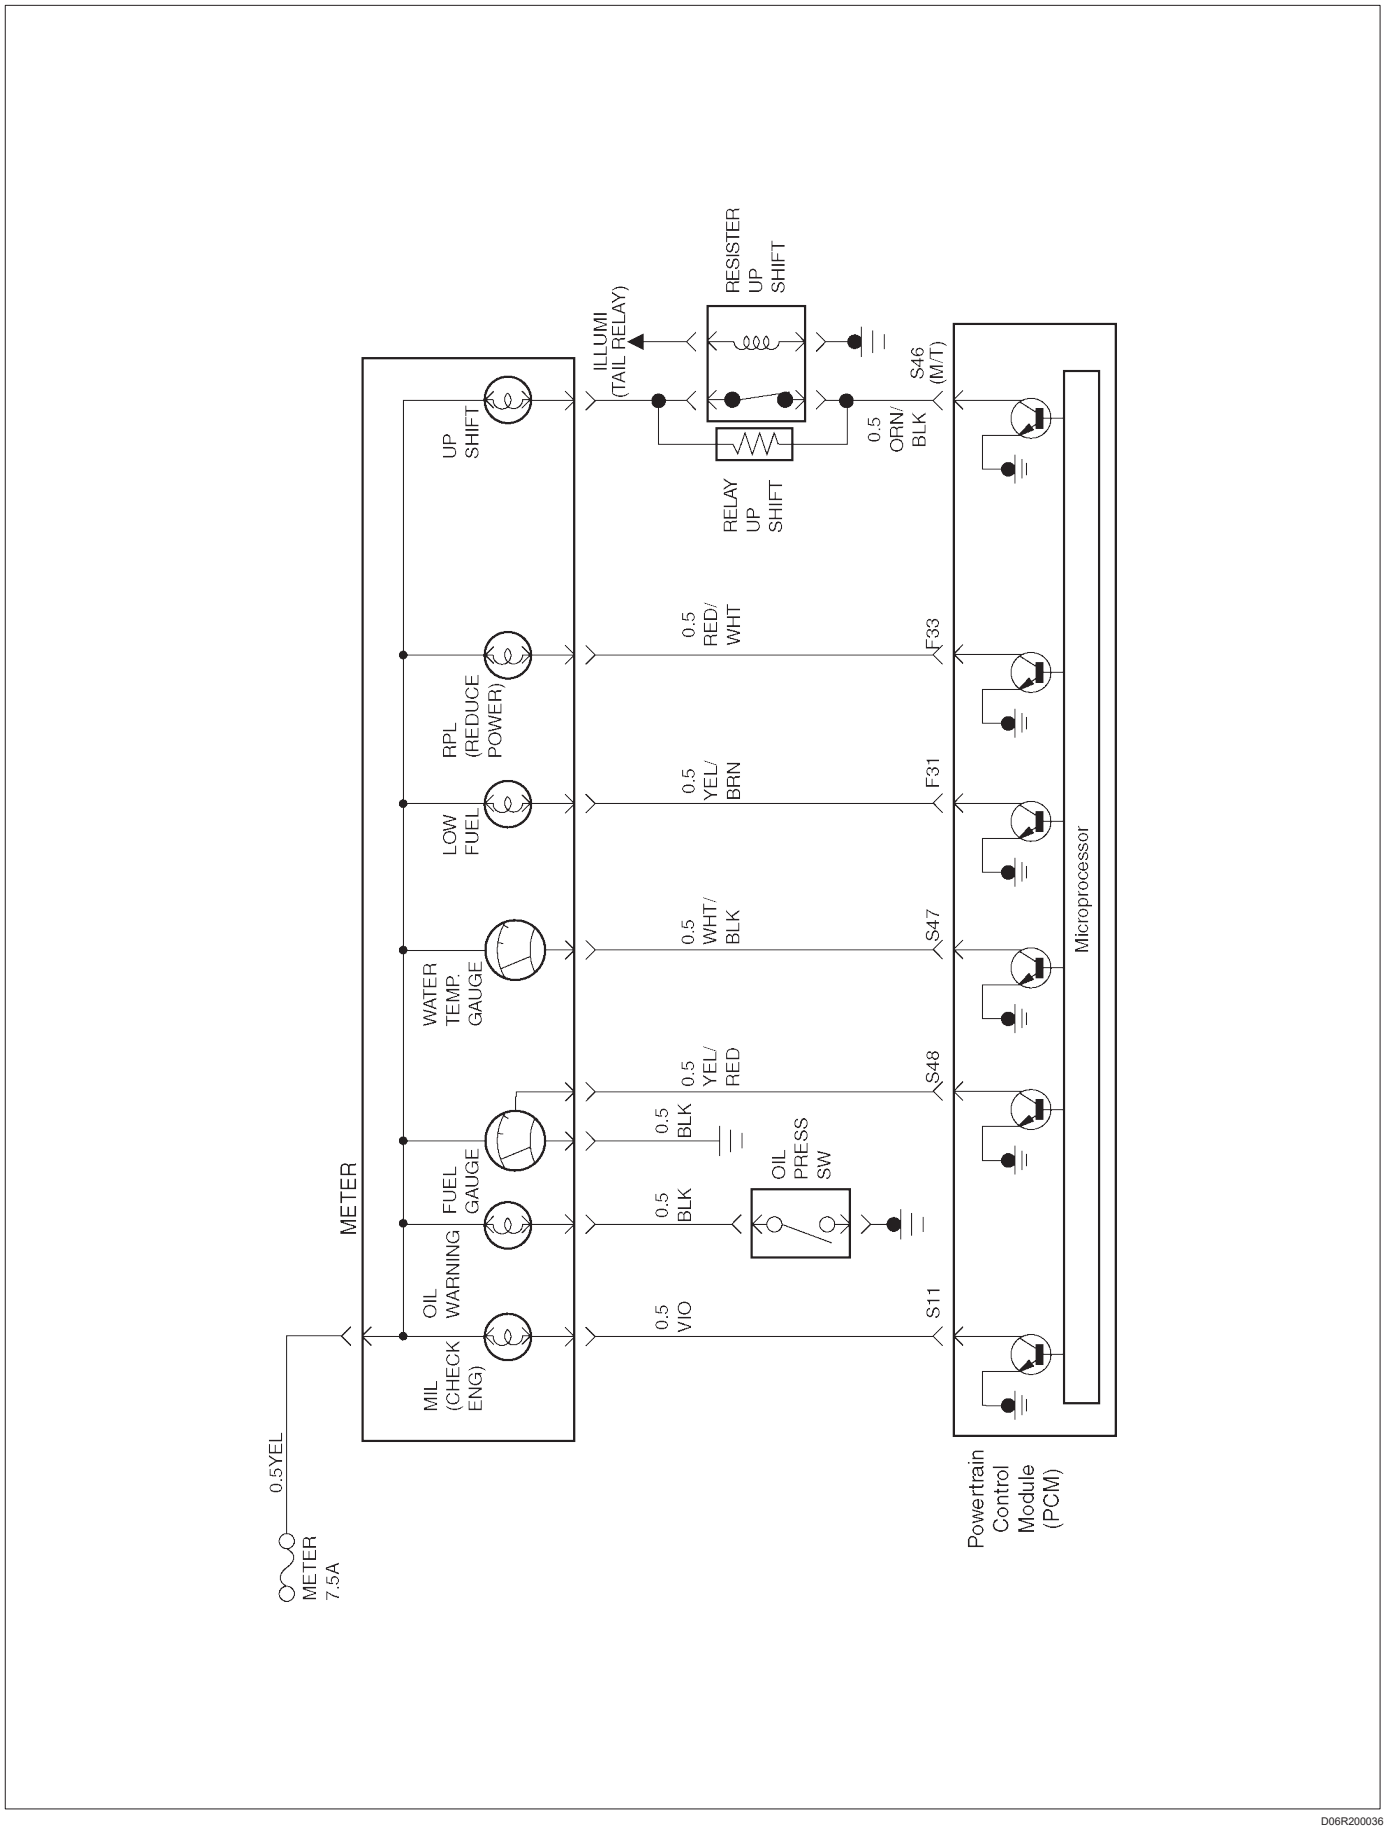

D06R200036


PCM Wiring Diagram (8 of 8)

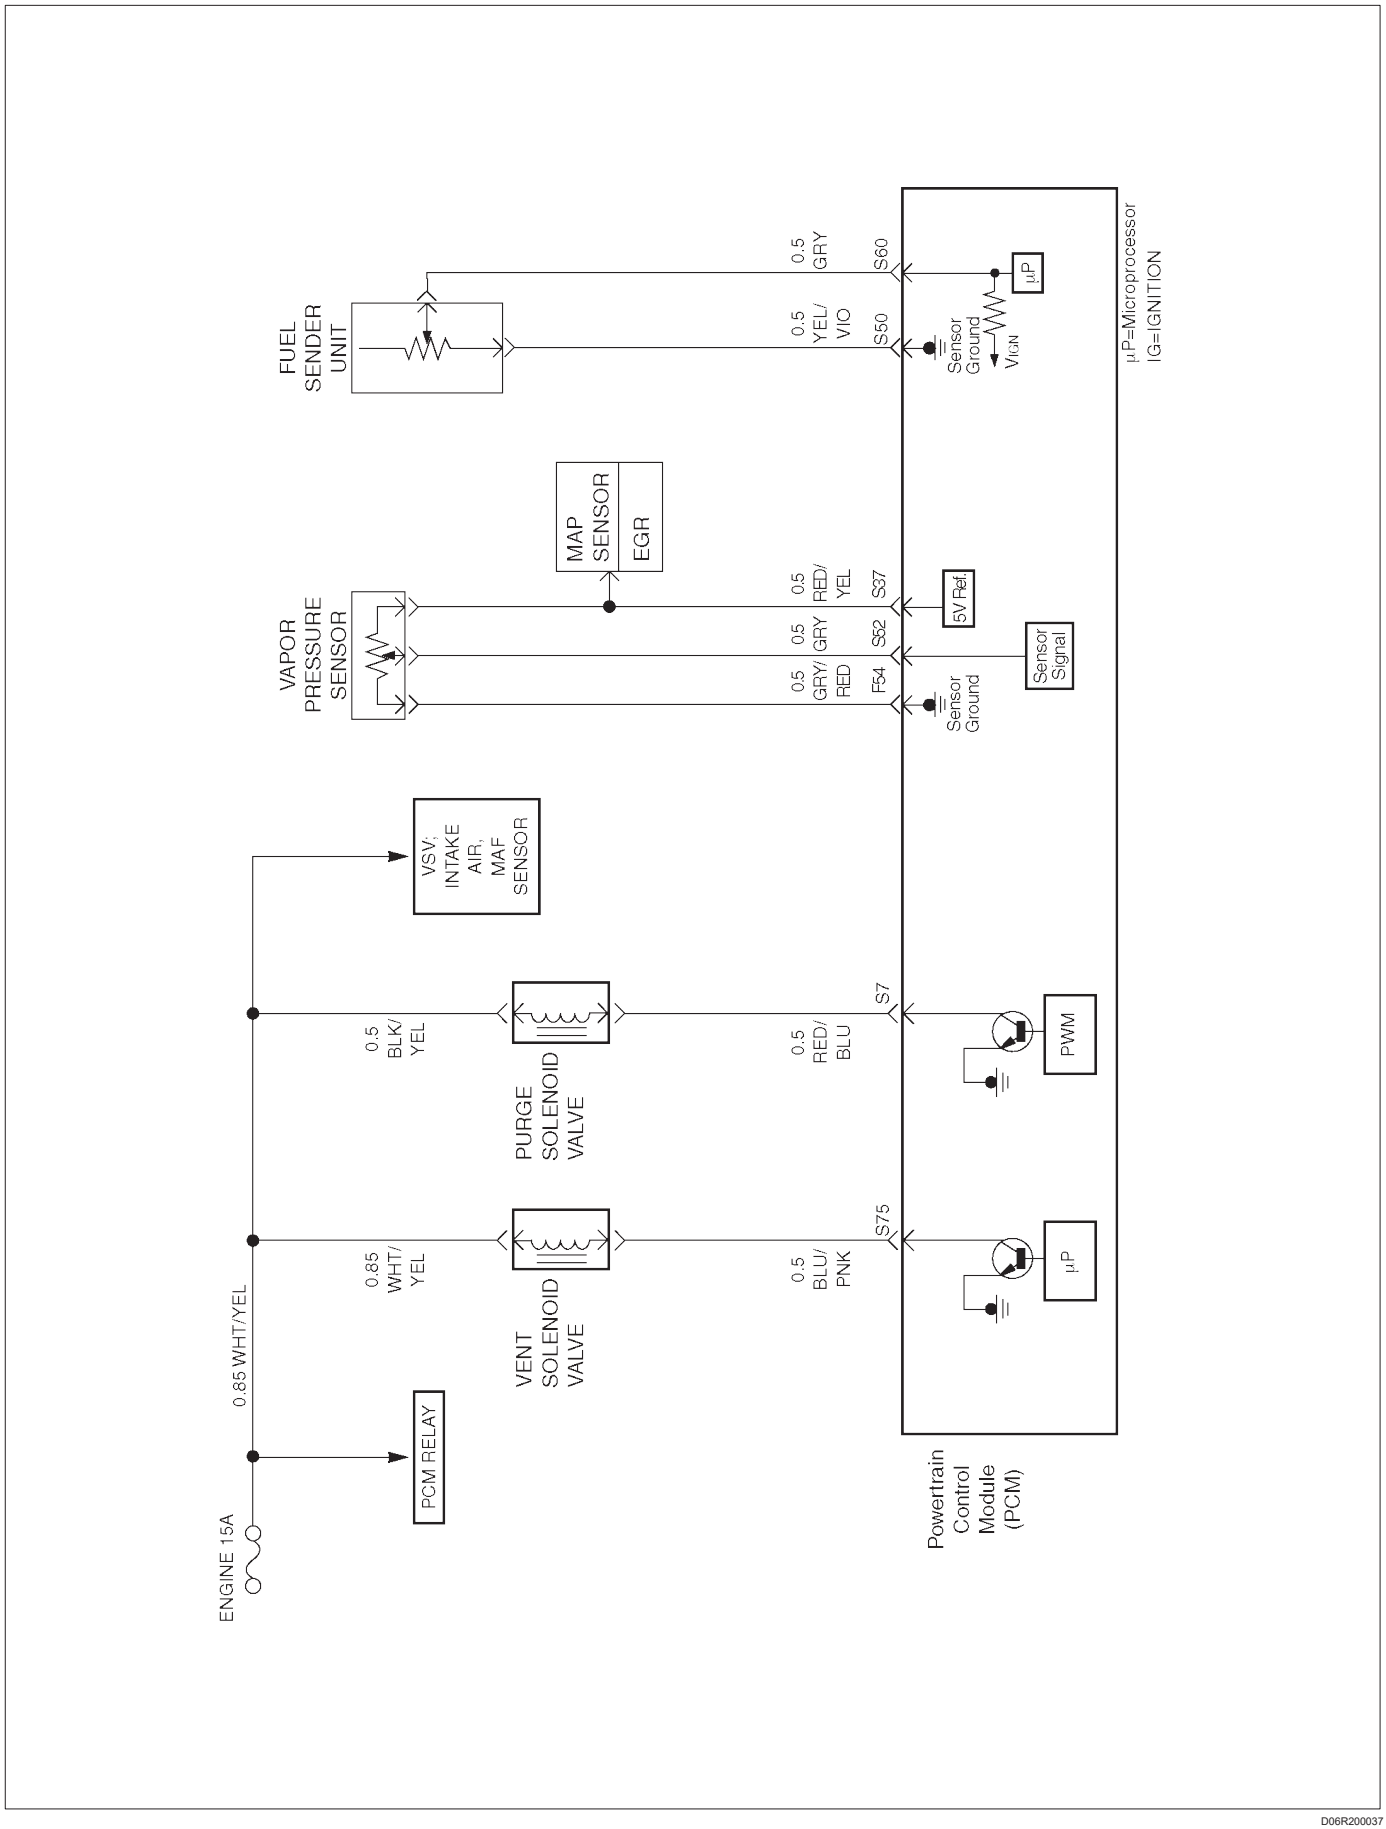

D06R200037

PCM Pinouts

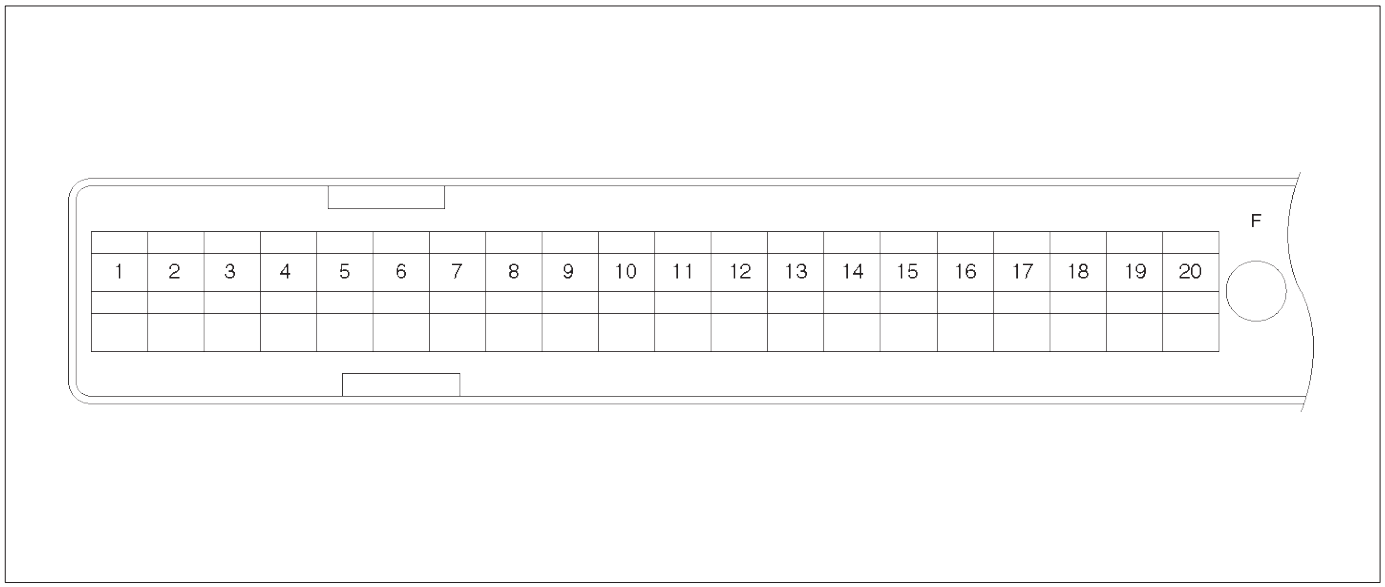
PCM Pinout Table, 80-Way Blue Connector – Row “F1 ~ 20”



060RY00045

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
F1	PCM Ground	BLK/BLU	0.0V	0.0V	Chassis Electrical
F2	5Volt Referrence“2” (AP Sensor 2)	GRN	5.0V	5.0V	AP Sensor
F3	5Volt Referrence“2” (TP Sensor 2)	RED/WHT	5.0V	5.0V	AP Sensor
F4	A/C Clutch	GRN/BLK	B+(A/C off)	B+(A/C off)	General Description and Operation,A/C Cluch Circuit Opreation
F5	Mission Main Case	GRN/RED	0.0V	0.0V	4L30E T/Mission
F6	Not Used	—	—	—	—
F7	Tachometer	BLK/RED	8.8V	10.0V(at idle)	Chassis Electrical
F8	Not Used	—	—	—	—
F9	Not Used	—	—	—	—
F10	Not Used	—	—	—	—
F11	T.O.D	RED/WHT	—	—	—
F12	Not Used	—	—	—	—
F13	Not Used	—	—	—	—
F14	Mass Air Flow(MAF)	YEL	4.9V	4.2V	General Description, Mass Air Flow Sensor
F15	Not Used	—	—	—	—
F16	Not Used	—	—	—	—
F17	Bank 1 HO2S Low	RED	0.0V	0.1V	General Description and Operation, Catalyst Monitor HO2S 2
F18	Not Used	—	—	—	—
F19	Ignition Feed	RED/BLU	B+	B+	6D Section
F20	Ignition Feed	WHT	B+	B+	6D Section

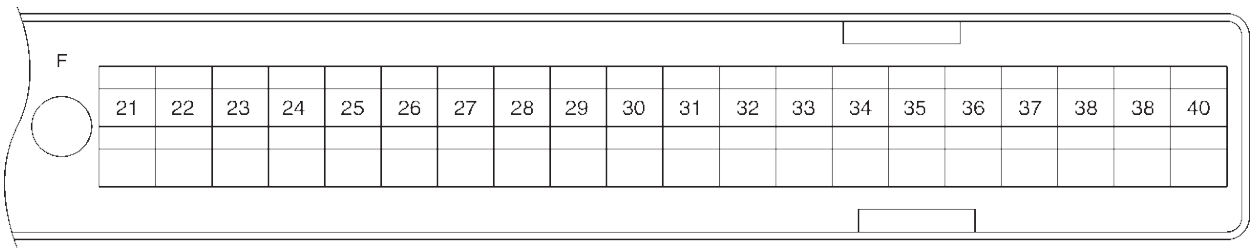PCM Pinout Table, 80-Way Blue Connector – Row "F20 ~ 40"




060RY00156

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
F21	Bank 1 HO2S 1 Ground	WHT	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 1
F22	Not Used	—	—	—	—
F23	Bank 2 HO2S 1 Ground	BLU	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 1
F24	Not Used	—	—	—	—
F25	ION Sensing Module	RED/BLU	1.555V	1.555V	General Description and Operation,ION Sensing Module
F26	ION Sensing Module	RED/BLK	1.555V	1.555V	General Description and Operation,ION Sensing Module
F27	Intake Air Temperature (IAT)Sensor	YEL/GRN	0.5–4.9V	0.5–4.9V	General Description and Operation, IAT
F28	Not Used	—	—	—	—
F29	Manifold Absolute Pressure(MAP)	RED	3.5V–4.9V (depends on altitude and barometric pressure)	0.6-1.3V	General Description and Operation, Manifold Absolute Pressure
F30	Not Used	—	—	—	—
F31	Not Used	—	—	—	—
F32	Power Lamp	GRN/WHT	B+	B+	4L30E T/Mission
F33	Reduse Power Lamp	RED/WHT	B+	B+	Chassis Electrical
F34	Winter Lamp	PNK/GRN	B+	B+	4L30E T/Mission
F35	Not Used	—	—	—	—
F36	Not Used	—	—	—	—
F37	Power Steering Pressure (PSP)	GRN/YEL	B+	B+	Power Steering
F38	Illuminated Switch	GRN/YEL	B+	B+	Chassis Electrical

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
F39	Brake Swich	GRN/YEL	0.0V	0.0V	4L30E T/Mission
F40	PCM Ground	BLK/RED	0.0V	0.0V	Chassis Electrical

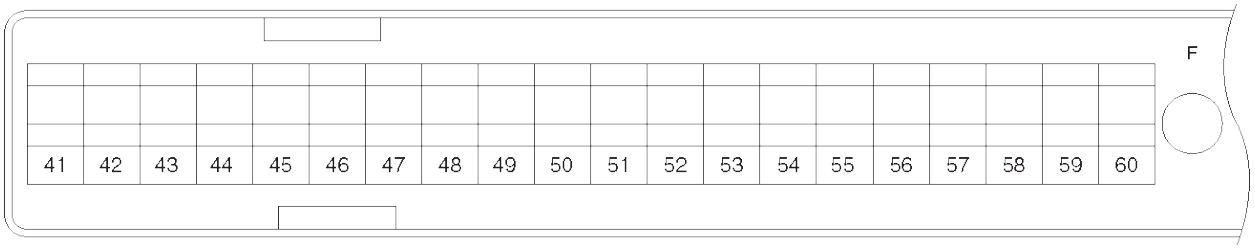PCM Pinout Table, 80-Way Blue Connector – Row “F41 ~ 60”




060RY00046

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
F41	Throttle Position(TP) 1 Sensor Ground	GRN	0.0V	0.0V	General Description and Operation,TPS
F42	Fuel Pump Relay	SIL/BLK	0.0V	B+	On Vehicle Service, Fuel Pump Relay
F43	Adaptor Case	VIO/RED	0.0V	0.0V	4L30E T/Mission
F44	Bank 1 HO2S 2 Heater Ground	BLK/PNK	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 2
F45	A/C Request	GRN/ORN	0.0V	0.0V	Chassis Electrical
F46	Auto Cruise Brake Switch	ORN	0.0V	0.0V	Chassis Electrical
F47	Adaptor Case	VIO/RED	B+	B+	4L30E T/Mission
F48	Throttle Valve DC Motor(–)	BLK	Duty Cycle	Duty Cycle	General Description and Operation, ETC
F49	Not Used	—	—	—	—
F50	Bank 2 HO2S 2 Ground	ORN	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 2
F51	DLC Serial Data	ORN	5.0V	5.0V	Chassis Electrical
F52	Bank 1 HO2S 2 Ground	RED	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 2
F53	ECT Ground	GRN	0.0V	0.0V	General Description and Operation,ECT Sensor
F54	Vapor Pressure Sensor Ground	GRY/RED	0.0V	0.0V	General Description and Operation,VP Sensor
F55	Not Used	—	—	—	—
F56	Injector Cylinder #5	GRN/BLK	B+	B+	General Description and Operation,Fuel Injector
F57	Ignition Feed	WHT	B+	B+	Chassis Electrical
F58	Class 2 Data	ORN/GRN	0.0V	0.0V	General Description

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
F59	Not Used	—	—	—	—
F60	Not Used	—	—	—	—

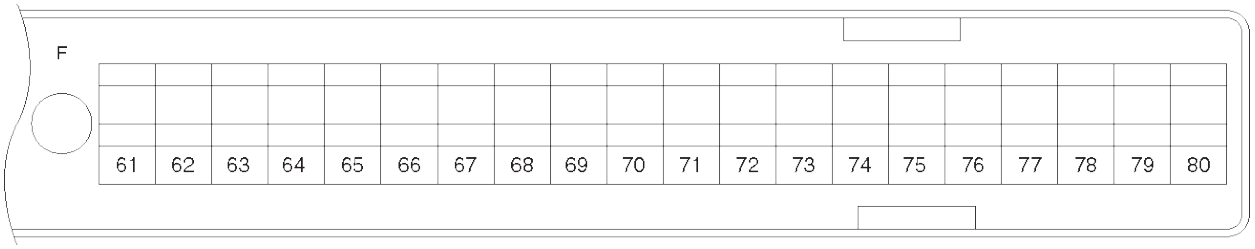PCM Pinout Table, 80-Way Blue Connector – Row “F61 ~ 80”




060RY00047

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
F61	Throttle Position(TP) 2 Sensor Ground	GRN/WHT	0.0V	0.0V	General Description and Operation,TPS
F62	Injector Cylinder #2	GRN/ORN	B+	B+	General Description and Operation,Fuel Injector
F63	AP Sensor 1 Sensor Ground	RED	0.0V	0.0V	General Description and Operation,APS
F64	Injector Cylinder #4	GRN/RED	B+	B+	General Description and Operation,Fuel Injector
F65	Throttle Psition(TP) 2 Sensor Signal	BLU/WHT	0.5–0.8V	0.8–0.8V (at idle)	General Description and Operation,TPS
F66	Injector Cylinder #3	GRN	B+	B+	General Description and Operation,Fuel Injector
F67	ION Sensing Module	YEL	1.555V	1.555V	General Description and Operation, ION Sensing Module
F68	ION Sensing Module	RED	1.555V	1.555V	General Description and Operation, ION Sensing Module
F69	Injector Cylinder #1	GRN/WHT	B+	B+	General Description and Operation,Fuel Injector
F70	Not Used	—	—	—	—
F71	Bank 2 HO2S 2 Heater Ground	BLK	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 2
F72	Auto Cruise Switch Resume	BRN/YEL	0.0V	0.0V	Chassis Electrical
F73	Cranshaft Position Sensor	YEL	0.3V	2.2V	General Description and Operation, CKP sensor
F74	ECT Sensor	BLU/RED	0.5–4.9V	0.5–4.9V	General Description and Operation, ECT Sensor
F75	Ignition Feed	RED/BLU	B+	B+	Chassis Electrical
F76	Clutch Switch(M/T only)	YEL/GRN	B+	B+	Manual T/Mission
	Mode Switch(A/T only)	YEL/GRN	B+	B+	4L30E T/Mission

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
F77	Mode Switch	BLU/WHT	B+	B+	4L30E T/Mission
F78	Mode Switch	BLU/BLK	B+	B+	4L30E T/Mission
F79	Mode Switch	BLU/YEL	B+	B+	4L30E T/Mission
F80	AP Sensor 2 Sensor Ground	BLU	0.0V	0.0V	General Description and Operation, APS

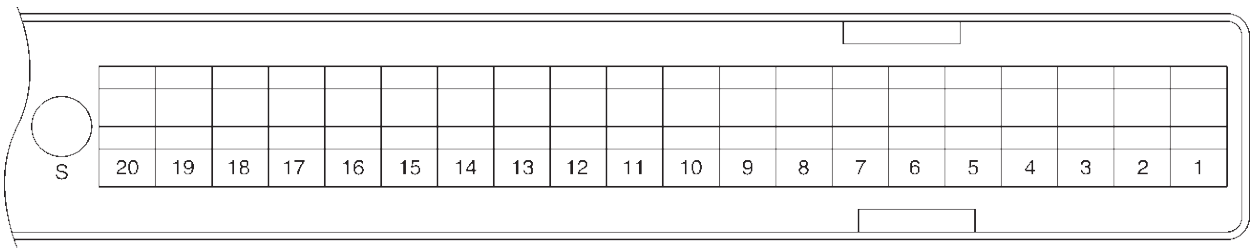PCM Pinout Table, 80-Way Red Connector – Row “S1 ~ 20”




060RY00069

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
S1	PCM Ground	BLK/WHT	0.0V	0.0V	Chassis Electrical
S2	Bank 1 HO2S 1 Heater Ground	BLK	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S
S3	Not Used	—	—	—	—
S4	ATF Warning Lamp	ORN/BLU	B+	B+	4L30E T/Mission
S5	5Volt Referrence“2” (CKP Sensor/CMP Sensor)	YEL/RED	5.0V	5.0V	Appropriate Sensor (CKP Sensor, CMP Sensor ,AP2 Sensor)
S6	Auto Cruise Switch Cancel	GRY/GRN	0.0V	0.0V	Chassis Electrical
S7	EVAP Parge Solenoid Valve	RED/BLU	B+	5.7V	General Description and Operation, EVAP Emission Control System
S8	Not Used	—	—	—	—
S9	Not Used	—	—	—	—
S10	Shift High(Band Apply)	BRN/YEL	B+	B+	4L30E T/Mission
S11	Malfunction Indicator (Check Engine) Lamp	VIO	0.0V	B+	Chassis Electrical
S12	Not Used	—	—	—	—
S13	ION Sensing Module	RED/WHT	1.555V	1.555V	General Description and Operation, ION Sensing Module
S14	Bank 2 HO2S 1 Ground Jump	BLU	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 1
S15	Bank 2 HO2S 2 Ground Jump	ORN	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 2
S16	Bank 2 HO2S 2 Low	BLU	0.0V	0.1V	General Description and Operation, Catalyst Monitor HO2S

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
S17	Bank 1 HO2S 1 Ground Jump	WHT	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 1
S18	Bank 1 HO2S 1 Low	GRN	0.0V	0.1V	General Description and Operation, Catalyst Monitor HO2S
S19	ION Sensing Module	RED/YEL	1.555V	1.555V	General Description and Operation, ION Sensing Module
S20	Transmission Fluid Temperature Sensor Ground	RED/WHT	0.0V	0.0V	4L30E T/Mission

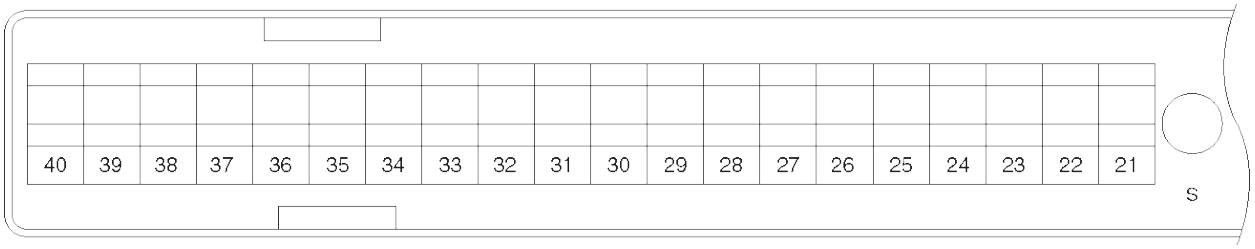PCM Pinout Table, 80-Way Red Connector – Row "S21 ~ 40"




060RY00049

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
S21	Not Used	—	—	—	—
S22	Transmissin Output Speed Sensor	RED	0.0V	0.0V	4L30E T/Mission
S23	PCM Ground	BLK/RED	0.0V	0.0V	Chassis Electrical
S24	Bank 1 HO2S 2 Ground Jump	RED	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S 2
S25	Not Used	—	—	—	—
S26	EGR Control Low	BLK/YEL	B+	B+	General Description and Operation, EGR Control
S27	VSS Input	Light GRN/WHT	0.0V	0.1V (at rest)	Chassis Electrical
S28	Injector Cylinder #6	GRN/YEL	B+	B+	General Description and Operation, Fuel Injector
S29	Winter Switch	VIO/GRN	B+	B+	4L30E T/Mission
S30	Auto Cruise Main Switch	PNK/BLK	0.0V	0.0V	Chassis Electrical
S31	Transmissin Range Signal"2–3"	GRN	0.0V	0.0V	4L30E T/Mission
S32	Ignition Feed	RED/BLU	B+	B+	Chassis Electrical
S33	TCC Solenoid	RED/BRN	0.0V	0.0V	T/Mission
S34	Not Used	—	—	—	—
S35	ION Sensing Module	RED/GRN	1.555V	1.555V	General Description and Operation, ION Sensing Module
S36	5Volt Referrence (AP Sensor 1)	BLK	5.0V	5.0V	AP Sensor
S37	5Volt Referrence (Fuel Tank Pressure Sensor/MAP Sensor/EGR Posistion Sensor)	RED/BLU	5.0V	5.0V	(Fuel Tank Pressure Sensor/MAP Sensor/EGR Posistion Sensor) Sensor
S38	5Volt Referrence (TP Sensor 1)	RED/BLU	5.0V	5.0V	TP Sensor

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
S39	Auto Cruise Lamp	BLK/ORN	0.0V	0.0V	Chassis Electrical
S40	PCM Ground	BLK	0.0V	0.0V	Chassis Electrical

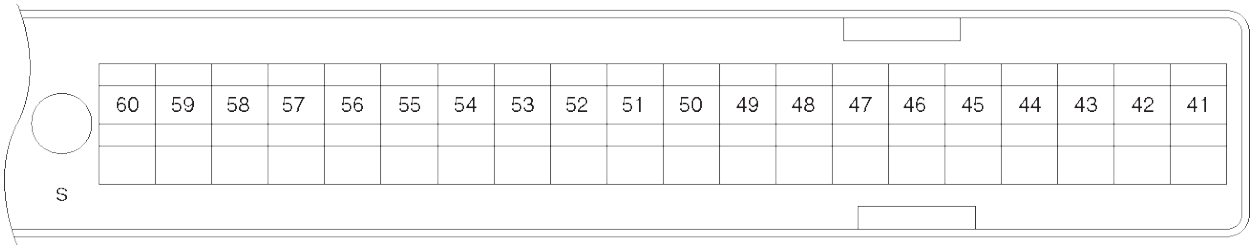PCM Pinout Table, 80-Way Red Connector – Row “S41 ~ 60”




060RY00050

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
S41	AP Sensor 3 Sensor Ground	BLU/ORN	0.0V	0.0V	General Description and Operation, APS
S42	Bank 2 HO2S 1 Heater Ground	BLK	0.0V	0.0V	General Description and Operation, Catalyst Monitor HO2S
S43	Transmissin Range Signal“1–2” “3–4’’	GRY/WHT	0.0V	0.0V	4L30E T/Mission
S44	Not Used	—	—	—	—
S45	Antilock Brake System (ABS) Off Switch	VIO/WHT	B+	B+	Antilock Brake System
S46	A/T Check Transmission Lamp	ORN/BLK	B+	B+	Chassis Electrical
	M/T Up Shift Lamp	ORN/BLK	B+	B+	Chassis Electrical
S47	Water Temp Gauge	WHT/BLK	B+	B+	Chassis Electrical
S48	Fuel Gauge	YEL/RED	B+	B+	Chassis Electrical
S49	DLC	ORN/BLU	B+	B+	General Description
S50	Fuel Sender Unit	YEL/VIO	0.0V	0.0V	—
S51	TCC Solenoid	BRN/BLU	B+	B+	T/Mission
S52	Vapor Pressure Sensor Signal	GRY	0.2–4.8V	0.2–4.8V	General Description and Operation,VP Sensor
S53	Power Switch	VIO/RED	B+	B+	4L30E T/Mission
S54	Bank 2 HO2S 1 Low	BLU	0.0V	0.1V	General Description and Operation, Catalyst Monitor HO2S
S55	Transmissin Output Speed Sensor	WHT	0.0V	0.0V	4L30E T/Mission
S56	Not Used	—	—	—	—
S57	Not Used	—	—	—	—
S58	Bank 2 HO2S 1 High	RED	0.3V	0.1–0.9V	General Description and Operation, Catalyst Monitor HO2S

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
S59	Auto Cruise Steering Set Switch	Light GRN	0.0V	0.0V	Chassis Electrical
S60	Fuel Sender Unit	GRY	0.5–4.9V	0.5–4.9V	ON-Vehicle Service PCM and Sensors

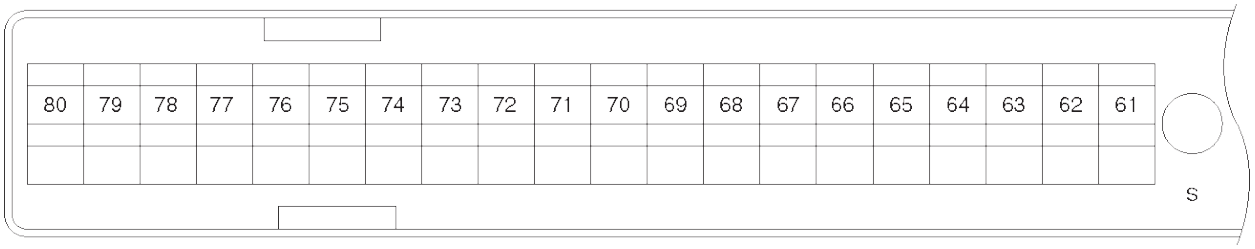PCM Pinout Table, 80-Way Red Connector – Row "S61 ~ 80"




060RY00051

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
S61	Intake Air Temperature (IAT)Sensor Ground	GRN	0.0V	0.0V	General Description and Operation, IAT
S62	ION Sensing Module	RED	1.555V	1.555V	General Description and Operation, ION Sensing Module
S63	Bank 1 HO2S 2 High	WHT	0.3V	0.1–0.9V	General Description and Operation, Catalyst Monitor HO2S
S64	Bank 2 HO2S 1 High	PNK	0.3V	0.1–0.9V	General Description and Operation, Catalyst Monitor HO2S
S65	Bank 2 HO2S 2 High	GRN	0.3V	0.1–0.9V	General Description and Operation, Catalyst Monitor HO2S
S66	Transmission Fluid Temperature Sensor	RED/BLK	0.5–4.9V (depends on temperature)	0.5–4.9V (depends on temperature)	4L30E T/Mission
S67	Exhaust Gas Recirculation (EGR)	YEL/RED	0.6V	0.6V	General Description and Operation,EGR Control
S68	Accelerator Position(AP) Sensor 1	WHT	0.41–0.45V	0.41–0.45V	General Description and Operation,AP Sensor
S69	Throttle Valve DC Motor(+)	RED	Duty Cycle	Duty Cycle	General Description and Operation,ETC
S70	Not Used	—	—	—	—
S71	Not Used	—	—	—	—
S72	Ignition Feed for ETC	RED/BLU	B+	B+	Chassis Electrical
S73	Auto Cruise Main Lamp	GRY/BLU	B+	B+	Chassis Electrical
S74	Variable Intake Manifold	WHT/BLU	0.0V	B+(rpm 3600 over)	General Description
S75	Canister Vent Valve	BLU/PNK	6.0V Tank empty	5.7V Tank empty	General Description and Operation, EVAP
S76	Throttle Position(TP) 1 Sensor Signal	BLU/PNK	0.5–0.8V	0.5–0.8V (at idle)	General Description and Operation,TPS

PIN	PIN Function	Wire Color	IGN ON	ENG RUN	Refer To
S77	5Volt Referrence (AP Sensor 3)	ORN	5.0V	5.0V	Appropriate Sensor
S78	Accelerate Position(AP) Sensor 2	YEL	0.41–0.45V	0.41–0.45V	General Description and Operation,AP Sensor
S79	Accelerate Position(AP) Sensor 3	BLU/GRN	4.55–4.99V	0.41–0.45V	General Description and Operation,AP Sensor
S80	Manifold Absolute Pressure(MAP)	GRN	0V	0V	General Description and Operation, Manifold Absolute Pressure

Component Locators

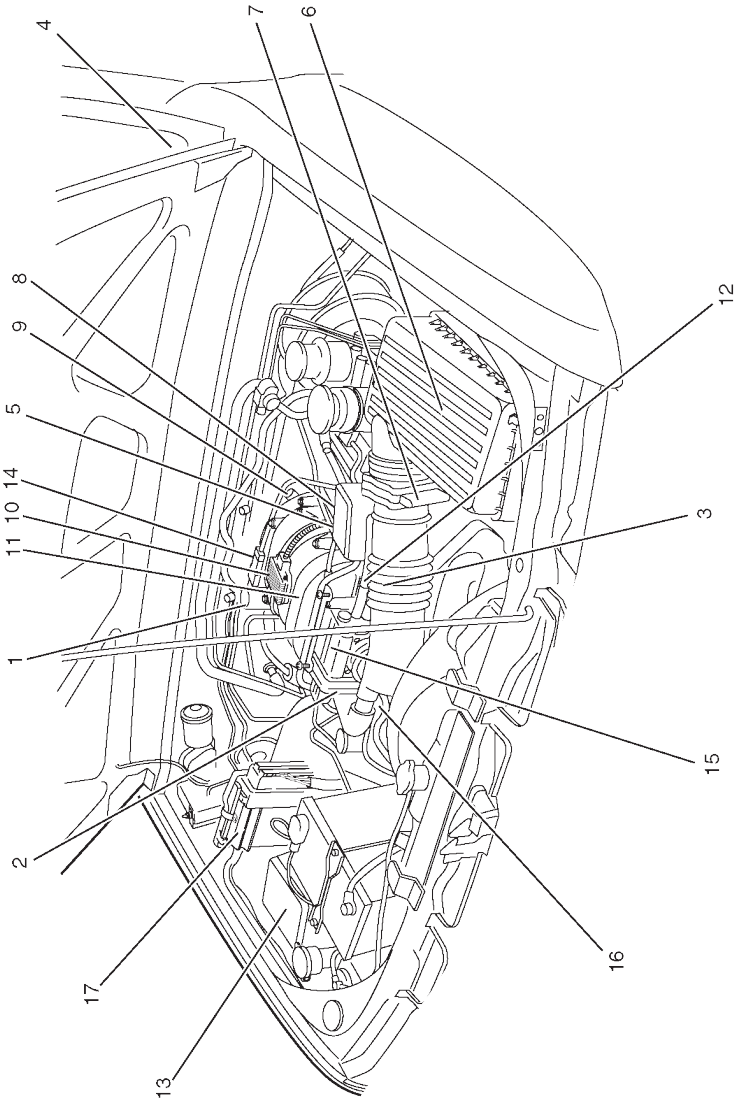Engine Component Locator




060R200243

Engine Component Locator Table

Number	Name	Location
1	Linear Exhaust Gas Recirculation (EGR) Valve	Rear right side of the engine
2	Throttle Position (TP) Sensor	On the throttle body
3	Intake Air Temperature (IAT) Sensor	On the intake air duct near the throttle body
4	Check Engine (MIL) Light	On the instrument panel beneath the tachometer
5	Positive Crankcase Ventilation (PCV) Valve	On the left of the cylinder head cover
6	Air Cleaner	Left front of the engine bay
7	Mass Air Flow (MAF) Sensor	Attached to the air filter box
8	Fuel Rail	On the Common Chamber
9	Fuel Pressure Regulator	Rear side of the engine
10	ION Sensing module	Bolted to the top of the Common Chamber
11	Common Chamber	Top of the engine
12	EVAP Duty Solenoid Valve	Bolted to the front of the coolant pipe
13	Fuse/Relay Box	Along the inside of the right fender
14	Manifold Absolute Pressure (MAP) Sensor	Bolted to the top of the Common Chamber
15	Throttle Body	Between the intake air duct and the Common Chamber
16	Engine Coolant Temperature Sensor	On the coolant crossover pipe at the front of the engine, near the throttle body
17	Power Train Control Module (PCM)	Along the inside of the left fender

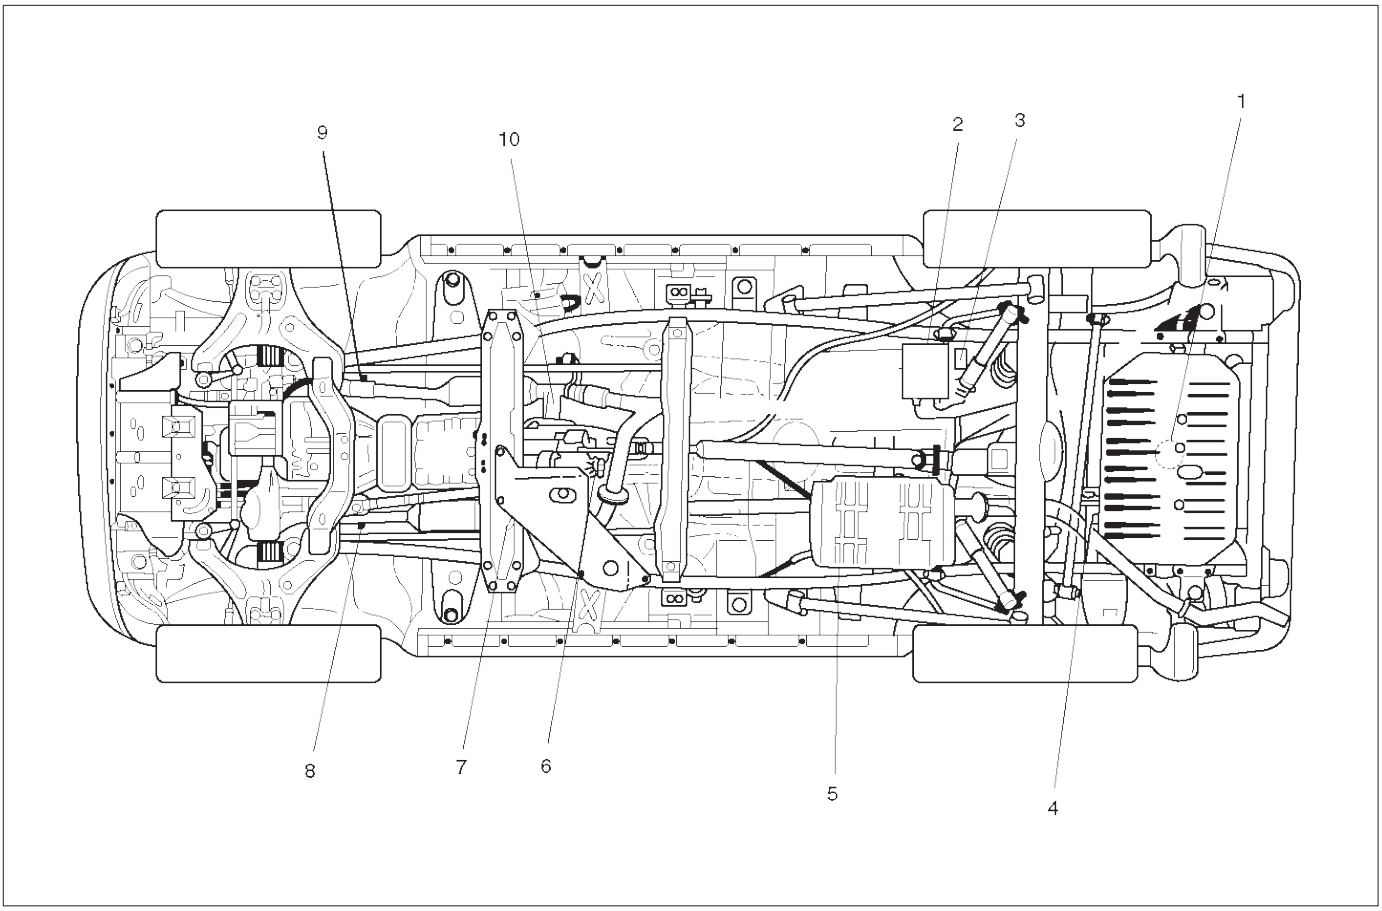Undercarriage Component Locator




F00RW032

Undercarriage Component Locator Table


Number	Name	Location
1	Fuel Pump Assembly	Installed in the top of the fuel tank
2	EVAP Canister	On the top of the bracket that is located behind of the cross member
3	Vent Solenoid (EVAP Canister)	On the top of the bracket that is located behind of the cross member
4	Fuel Gauge Unit	Installed in the front edge of the fuel tank, on the right side
5	Fuel Filter	Located along the inside of the right frame rail, ahead of the rear axle
6	Vehicle Speed Sensor (VSS)	2WD: Protrudes from the transmission housing, just ahead of the propeller shaft. 4WD: Protrudes from the rear output shaft housing of the transfer case.
7	Heated Oxygen Sensor (Bank 1, HO2S 1)	Threaded into the exhaust pipe behind the right-hand catalytic converter
8	Heated Oxygen Sensor (Bank 1, HO2S 2)	Threaded into the exhaust pipe ahead of the right-hand catalytic converter
9	Heated Oxygen Sensor (Bank 2, HO2S 1)	Threaded into the exhaust pipe ahead the left-hand catalytic converter
10	Heated Oxygen Sensor (Bank 2, HO2S 2)	Threaded into the exhaust pipe behind the left-hand catalytic converter

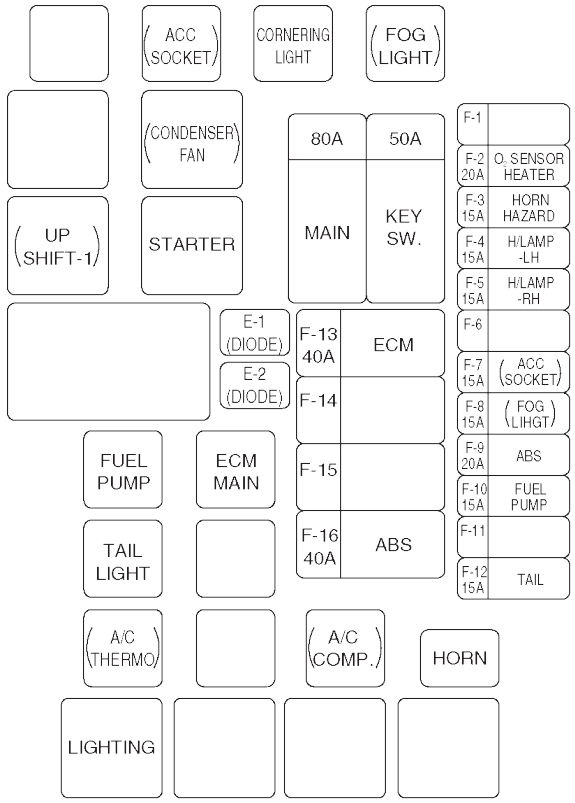Fuse and Relay Panel (Underhood Electrical Center)




060R200212

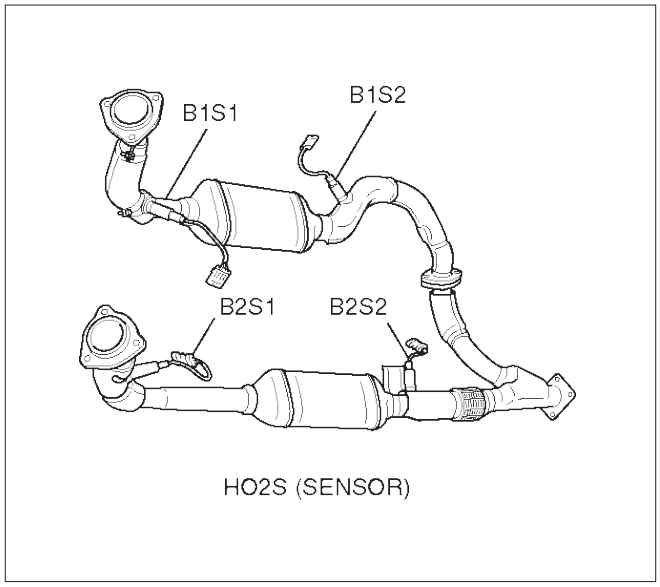
Sensors and Miscellaneous Component Locators




060RY00013

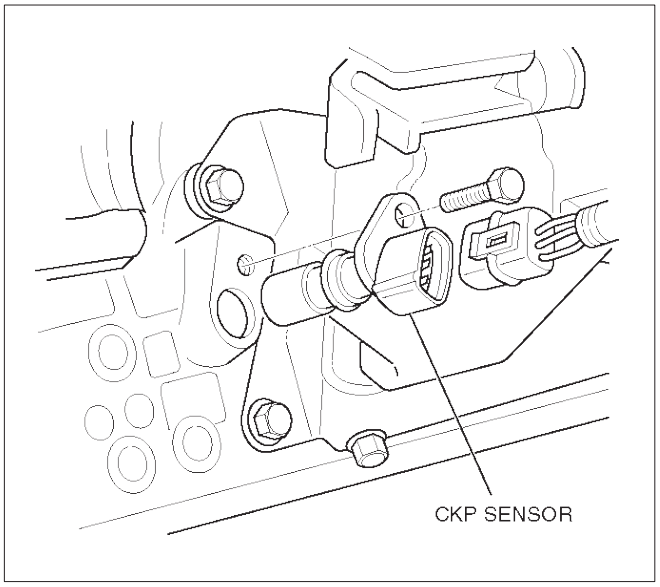


060RW111

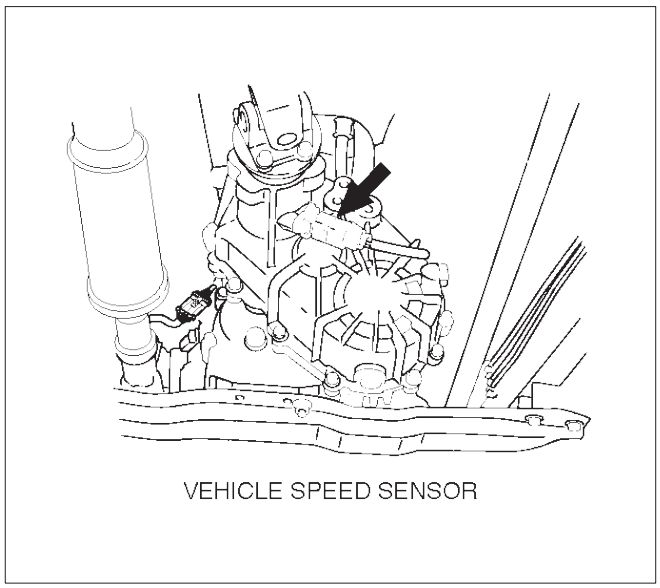


T321067

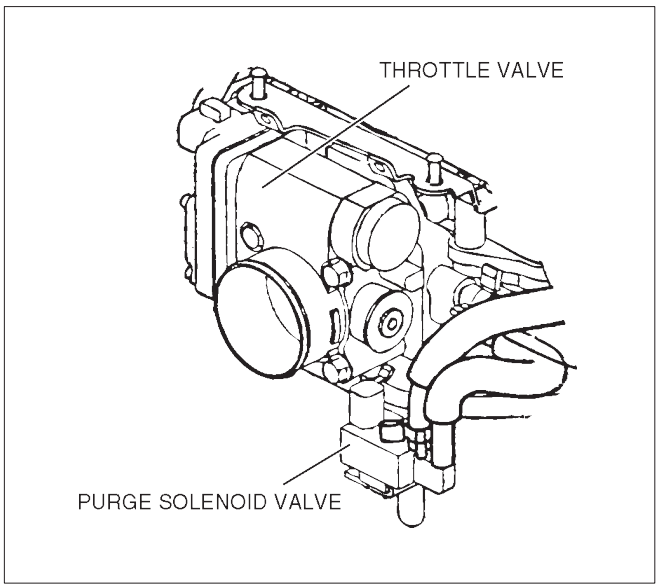


060R200201

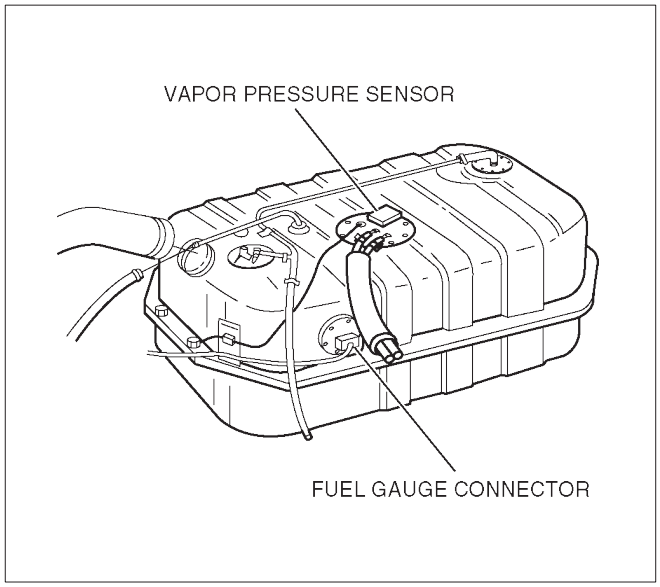


060R200224

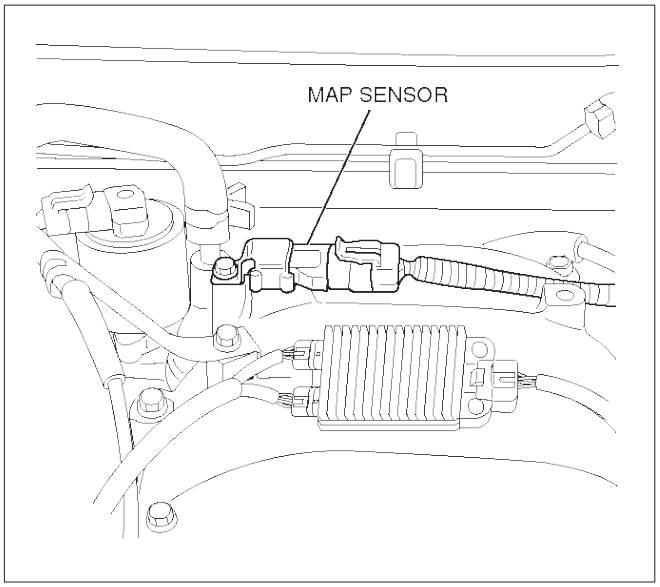


055RY00002

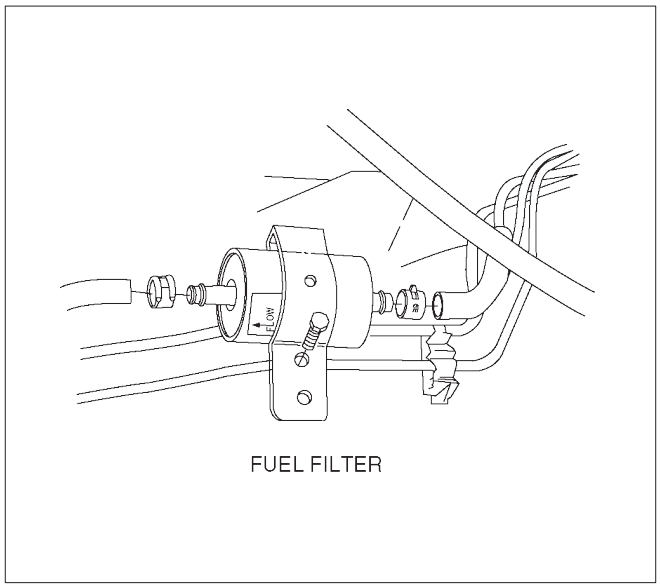


041RW004

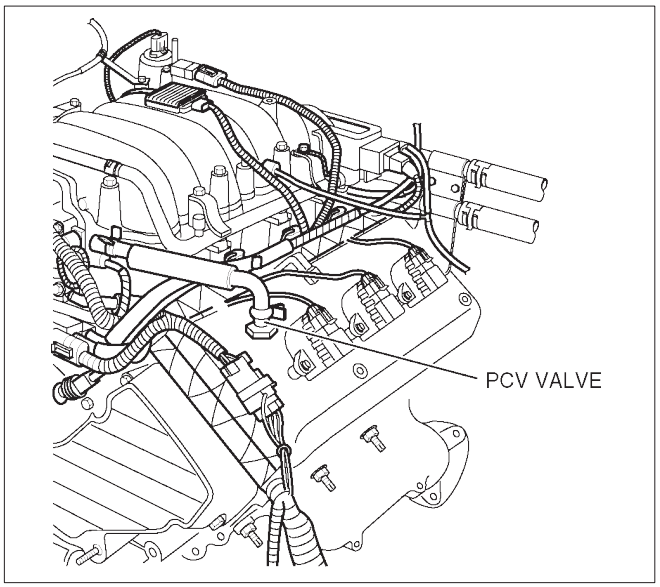


060R200208

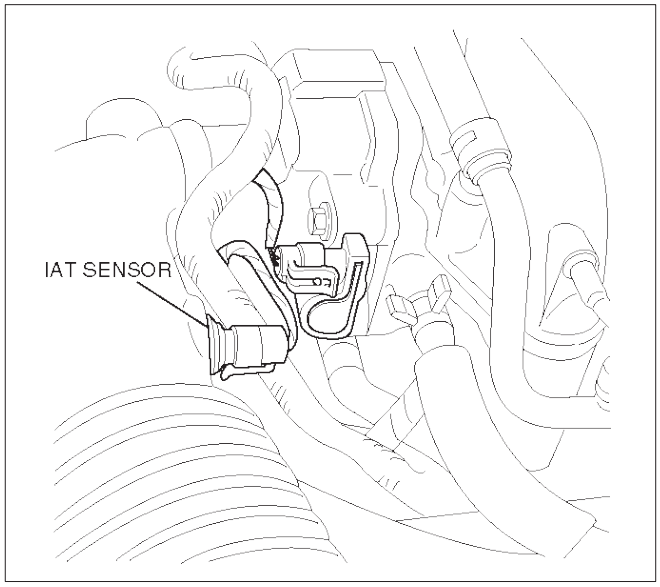

025RW005

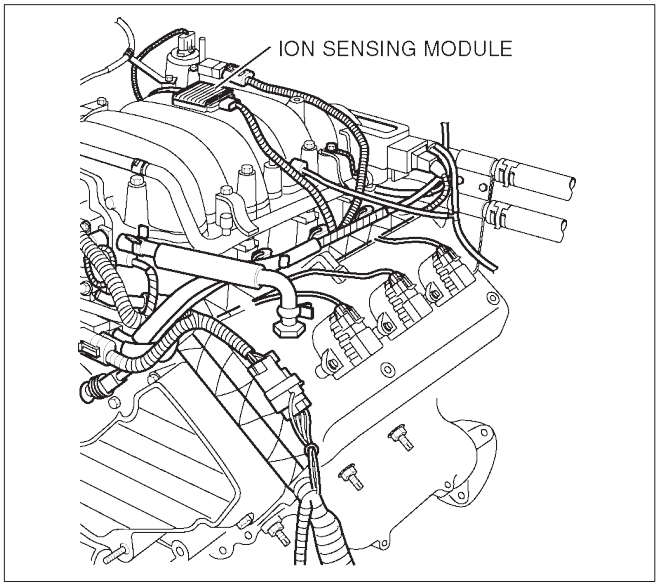

060R200209

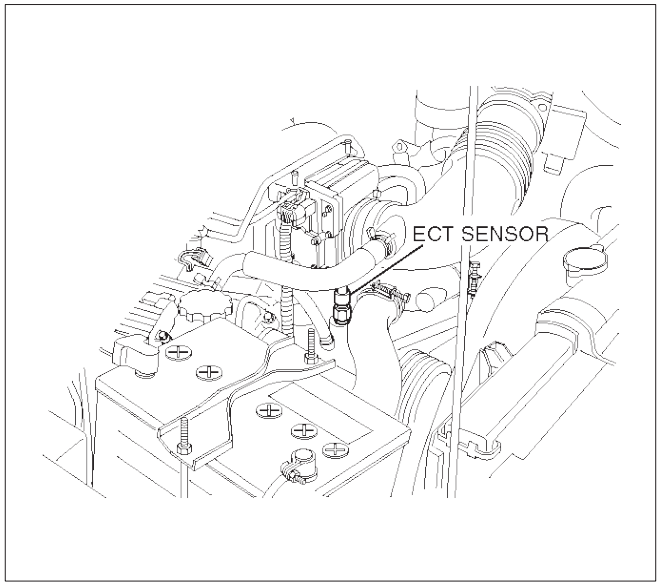

060RY00014

Diagnosis

Strategy-Based Diagnostics

Strategy-Based Diagnostics

The strategy-based diagnostic is a uniform approach to repair all Electrical/Electronic (E/E) systems. The diagnostic flow can always be used to resolve an E/E system problem and is a starting point when repairs are necessary. The following steps will instruct the technician how to proceed with a diagnosis:

1. Verify the customer complaint.
   - To verify the customer complaint, the technician should know the normal operation of the system.
2. Perform preliminary checks.
   - Conduct a thorough visual inspection.
   - Review the service history.
   - Detect unusual sounds or odors.
   - Gather diagnostic trouble code information to achieve an effective repair.
3. Check bulletins and other service information.
   - This includes videos, newsletters, etc.
4. Refer to service information (manual) system check(s).
   - “System checks” contain information on a system that may not be supported by one or more DTCs. System checks verify proper operation of the system. This will lead the technician in an organized approach to diagnostics.
5. Refer to service diagnostics.

DTC Stored

Follow the designated DTC chart exactly to make an effective repair.

No DTC

Select the symptom from the symptom tables. Follow the diagnostic paths or suggestions to complete the repair. You may refer to the applicable component/system check in the system checks.

No Matching Symptom

1. Analyze the complaint.
2. Develop a plan for diagnostics.
3. Utilize the wiring diagrams and the theory of operation.

Combine technician knowledge with efficient use of the available service information.

Intermittents

Conditions that are not always present are called intermittents. To resolve intermittents, perform the following steps:

1. Observe history DTCs, DTC modes, and freeze frame data.
2. Evaluate the symptoms and the conditions described by the customer.
3. Use a check sheet or other method to identify the circuit or electrical system component.
4. Follow the suggestions for intermittent diagnosis found in the service documentation.

Most Scan Tools, such as the Tech 2, have data-capturing capabilities that can assist in detecting intermittents.

No Trouble Found

This condition exists when the vehicle is found to operate normally. The condition described by the customer may be normal. Verify the customer complaint against another vehicle that is operating normally. The condition may be intermittent. Verify the complaint under the conditions described by the customer before releasing the vehicle.

1. Re-examine the complaint.
   When the complaint cannot be successfully found or isolated, a re-evaluation is necessary. The complaint should be re-verified and could be intermittent as defined in *Intermittents* section, or could be normal.
2. Repair and verify.
   After isolating the cause, the repairs should be made. Validate for proper operation and verify that the symptom has been corrected. This may involve road testing or other methods to verify that the complaint has been resolved under the following conditions:
   - Conditions noted by the customer.
   - If a DTC was diagnosed, verify a repair by duplicating conditions present when the DTC was set as noted in the Failure Records or Freeze Frame data.

Verifying Vehicle Repair

Verification of the vehicle repair will be more comprehensive for vehicles with OBD II system diagnostics. Following a repair, the technician should perform the following steps:

IMPORTANT: Follow the steps below when you verify repairs on OBD II systems. Failure to follow these steps could result in unnecessary repairs.

1. Review and record the Failure Records and the Freeze Frame data for the DTC which has been diagnosed (Freeze Frame data will only be stored for an A or B type diagnostic and only if the MIL(”Check Engine” lamp) has been requested).
2. Clear the DTC(S).
3. Operate the vehicle within conditions noted in the Failure Records and Freeze Frame data.
4. Monitor the DTC status information for the DTC which has been diagnosed until the diagnostic test associated with that DTC runs.

General Service Information

OBD II Serviceablity Issues

With the introduction of OBD II diagnostics across the entire passenger car and light-duty truck market in 1996, illumination of the MIL (“Check Engine” lamp) due to a non-vehicle fault could lead to misdiagnosis of the vehicle, increased warranty expense and customer

dissatisfaction. The following list of non-vehicle faults does not include every possible fault and may not apply equally to all product lines.

Fuel Quality

Fuel quality is not a new issue for the automotive industry, but its potential for turning on the MIL ("Check Engine" lamp) with OBD II systems is new.

Fuel additives such as "dry gas" and "octane enhancers" may affect the performance of the fuel. If this results in an incomplete combustion or a partial burn, it will show up as a Misfire DTC P0300. The Reed Vapor Pressure of the fuel can also create problems in the fuel system, especially during the spring and fall months when severe ambient temperature swings occur. A high Reed Vapor Pressure could show up as a Fuel Trim DTC due to excessive canister loading. High vapor pressures generated in the fuel tank can also affect the Evaporative Emission diagnostic as well.

Using fuel with the wrong octane rating for the vehicle may cause driveability problems. Many of the major fuel companies advertise that using "premium" gasoline will improve the performance of the vehicle. Most premium fuels use alcohol to increase the octane rating of the fuel. Although alcohol-enhanced fuels may raise the octane rating, the fuel's ability to turn into vapor in cold temperatures deteriorates. This may affect the starting ability and cold driveability of the engine.

Low fuel levels can lead to fuel starvation, lean engine operation, and eventually engine misfire.

Non-OEM Parts

All of the OBD II diagnostics have been calibrated to run with OEM parts. Something as simple as a high-performance exhaust system that affects exhaust system back pressure could potentially interfere with the operation of the EGR valve and thereby turn on the MIL ("Check Engine" lamp). Small leaks in the exhaust system near the post catalyst oxygen sensor can also cause the MIL ("Check Engine" lamp) to turn on.

Aftermarket electronics, such as transceivers, stereos, and anti-theft devices, may radiate EMI into the control system if they are improperly installed. This may cause a false sensor reading and turn on the MIL ("Check Engine" lamp).

Environment

Temporary environmental conditions, such as localized flooding, will have an effect on the vehicle ignition system. If the ignition system is rain-soaked, it can temporarily cause engine misfire and turn on the MIL ("Check Engine" lamp).

Refueling

A new OBD II diagnostic was introduced in 1996 on some vehicles. This diagnostic checks the integrity of the entire evaporative emission system. If the vehicle is restarted after refueling and the fuel cap is not secured correctly, the on-board diagnostic system will sense this as a system fault and turn on the MIL ("Check Engine" lamp) with a DTC P0440.

Vehicle Marshaling

The transportation of new vehicles from the assembly plant to the dealership can involve as many as 60 key cycles within 2 to 3 miles of driving. This type of operation contributes to the fuel fouling of the spark plugs and will turn on the MIL ("Check Engine" lamp) with a P0300 Misfire DTC.

Poor Vehicle Maintenance

The sensitivity of OBD II diagnostics will cause the MIL ("Check Engine" lamp) to turn on if the vehicle is not maintained properly. Restricted air filters, fuel filters, and crankcase deposits due to lack of oil changes or improper oil viscosity can trigger actual vehicle faults that were not previously monitored prior to OBD II. Poor vehicle maintenance can't be classified as a "non-vehicle fault", but with the sensitivity of OBD II diagnostics, vehicle maintenance schedules must be more closely followed.

Related System Faults

Many of the OBD II system diagnostics will not run if the PCM detects a fault on a related system or component. One example would be that if the PCM detected a Misfire fault, the diagnostics on the catalytic converter would be suspended until Misfire fault was repaired. If the Misfire fault was severe enough, the catalytic converter could be damaged due to overheating and would never set a Catalyst DTC until the Misfire fault was repaired and the Catalyst diagnostic was allowed to run to completion. If this happens, the customer may have to make two trips to the dealership in order to repair the vehicle.

Visual / Physical Engine Compartment Inspection

Perform a careful visual and physical engine compartment inspection when performing any diagnostic procedure or diagnosing the cause of an emission test failure. This can often lead to repairing a problem without further steps. Use the following guidelines when performing a visual/physical inspection:

- Inspect all vacuum hoses for pinches, cuts, disconnections, and proper routing.
- Inspect hoses that are difficult to see behind other components.
- Inspect all wires in the engine compartment for proper connections, burned or chafed spots, pinched wires, contact with sharp edges or contact with hot exhaust manifolds or pipes.

Basic Knowledge of Tools Required

NOTE: Lack of basic knowledge of this powertrain when performing diagnostic procedures could result in an incorrect diagnosis or damage to powertrain components. Do not attempt to diagnose a powertrain problem without this basic knowledge.

A basic understanding of hand tools is necessary to effectively use this section of the Service Manual.

Serial Data Communications

Class 2 Serial Data Communications

Government regulations require that all vehicle manufacturers establish a common communication system. This vehicle utilizes the "Class 2" communication system. Each bit of information can have one of two lengths: long or short. This allows vehicle wiring to be reduced by transmitting and receiving multiple signals over a single wire. The messages carried on Class 2 data streams are also prioritized. If two messages attempt to establish communications on the data line at the same time, only the message with higher priority will continue. The device with the lower priority message must wait. The most significant result of this regulation is that it provides Scan tool manufacturers with the capability to access data from any make or model vehicle that is sold. The data displayed on other Scan tools will appear the same, with some exceptions. Some Scan tools will only be able to display certain vehicle parameters as values that are a coded representation of the true or actual value. On this vehicle the Scan tool displays the actual values for vehicle parameters. It will not be necessary to perform any conversions from coded values to actual values.

On-Board Diagnostic (OBD II)

On-Board Diagnostic Tests

A diagnostic test is a series of steps, the result of which is a pass or fail reported to the diagnostic executive. When a diagnostic test reports a pass result, the diagnostic executive records the following data:

- The diagnostic test has been completed since the last ignition cycle.
- The diagnostic test has passed during the current ignition cycle.
- The fault identified by the diagnostic test is not currently active.

When a diagnostic test reports a fail result, the diagnostic executive records the following data:

- The diagnostic test has been completed since the last ignition cycle.
- The fault identified by the diagnostic test is currently active.
- The fault has been active during this ignition cycle.
- The operating conditions at the time of the failure.

Remember, a fuel trim DTC may be triggered by a list of vehicle faults. Make use of all information available (other DTCs stored, rich or lean condition, etc.) when diagnosing a fuel trim fault.

Comprehensive Component Monitor Diagnostic Operation

Comprehensive component monitoring diagnostics are required to monitor emissions-related input and output powertrain components. The *CARB OBD II Comprehensive Component Monitoring List Of Components Intended To illuminate MIL* is a list of components, features or functions that could fall under this requirement.

Input Components:

Input components are monitored for circuit continuity and out-of-range values. This includes rationality checking. Rationality checking refers to indicating a fault when the signal from a sensor does not seem reasonable, i.e. Throttle Position (TP) sensor that indicates high throttle position at low engine loads or MAP voltage. Input components may include, but are not limited to the following sensors:

- Vehicle Speed Sensor (VSS)
- Crankshaft Position (CKP) sensor
- Throttle Position (TP) sensor
- Engine Coolant Temperature (ECT) sensor
- Manifold Absolute Pressure (MAP) sensor
- Mass Air Flow (MAF) sensor

In addition to the circuit continuity and rationality check, the ECT sensor is monitored for its ability to achieve a steady state temperature to enable closed loop fuel control.

Output Components:

Output components are diagnosed for proper response to control module commands. Components where functional monitoring is not feasible will be monitored for circuit continuity and out-of-range values if applicable. Output components to be monitored include, but are not limited to, the following circuits:

- Control module controlled EVAP Canister Purge Valve
- Electronic Transmission controls
- A/C relays
- VSS output
- MIL control
- Cruise control inhibit

Refer to PCM and Sensors in General Descriptions.

Passive and Active Diagnostic Tests

A passive test is a diagnostic test which simply monitors a vehicle system or component. Conversely, an active test, actually takes some sort of action when performing diagnostic functions, often in response to a failed passive test. For example, the EGR diagnostic active test will force the EGR valve open during closed throttle decel and/or force the EGR valve closed during a steady state. Either action should result in a change in manifold pressure.

Intrusive Diagnostic Tests

This is any on-board test run by the Diagnostic Management System which may have an effect on vehicle performance or emission levels.

Warm-Up Cycle

A warm-up cycle means that engine at temperature must reach a minimum of 70˚C (160˚F) *and* rise at least 22˚C (40˚F) over the course of a trip.

Freeze Frame

Freeze Frame is an element of the Diagnostic Management System which stores various vehicle information at the moment an emissions-related fault is stored in memory and when the MIL is commanded on. These data can help to identify the cause of a fault. Refer to *Storing And Erasing Freeze Frame Data* in this section for more detailed information.

Failure Records

Failure Records data is an enhancement of the OBD II Freeze Frame feature. Failure Records store the same vehicle information as does Freeze Frame, but it will store that information for any fault which is stored in on-board memory, while Freeze Frame stores information only for emission-related faults that command the MIL on.

System Status and Drive Cycle for Satisfying Federal Inspection/Maintenance (I/M 240) Regulations

I/M Ready Status means a signal or flag for each emission system test that had been set in the PCM. I/M Ready Status indicates that the vehicle on-board emissions diagnostics have been run. I/M Ready Status is not concerned whether the emission system passed or failed the test, only that on-board diagnosis is complete. Not all vehicles use all possible I/M flags.

Common OBD II Terms

Diagnostic

When used as a noun, the word diagnostic refers to any on-board test run by the vehicle's Diagnostic Management System. A diagnostic is simply a test run on a system or component to determine if the system or component is operating according to specification. There are many diagnostics, shown in the following list:

- Misfire
- Oxygen sensors
- Oxygen sensor heaters
- EGR
- Catalyst monitoring

Enable Criteria

The term "enable criteria" is engineering language for the conditions necessary for a given diagnostic test to run. Each diagnostic has a specific list of conditions which must be met before the diagnostic will run. "Enable criteria" is another way of saying "conditions required".
The enable criteria for each diagnostic is listed on the first page of the DTC description in Section 6E under the heading "Conditions for Setting the DTC". Enable criteria varies with each diagnostic, and typically includes, but is not limited to the following items:

- engine speed
- vehicle speed
- ECT
- MAF/MAP
- barometric pressure
- IAT
- TP
- high canister purge
- fuel trim
- TCC enabled
- A/C on

Trip

Technically, a trip is a key on-run-key off cycle in which all the enable criteria for a given diagnostic are met, allowing the diagnostic to run. Unfortunately, this concept is not quite that simple. A trip is official when all the enable criteria for a given diagnostic are met. But because the enable criteria vary from one diagnostic to another, the definition of trip varies as well. Some diagnostics are run when the vehicle is at operating temperature, some when the vehicle first starts up; some require that the vehicle be cruising at a steady highway speed, some run only when the vehicle is idle; some diagnostics function with the TCC disabled. Some run only immediately following a cold engine start-up.
A trip then, is defined as a key on-run-key off cycle in which the vehicle was operated in such a way as to satisfy the enabling criteria for a given diagnostic, and this diagnostic will consider this cycle to be one trip. However, another diagnostic with a different set of enable criteria (which were not met) during this driving event, would not consider it a trip. No trip will occur for that particular diagnostic until the vehicle is driven in such a way as to meet all the enable criteria.

The Diagnostic Executive

The Diagnostic Executive is a unique segment of software which is designed to coordinate and prioritize the diagnostic procedures as well as define the protocol for recording and displaying their results. The main responsibilities of the Diagnostic Executive are listed as the following:

- Commanding the MIL ("Check Engine" lamp) on and off
- DTC logging and clearing
- Freeze Frame data for the first emission related DTC recorded
- Non-emission related Service Lamp
- Operating conditions Failure Records buffer, (the number of records will vary)
- Current status information on each diagnostic
- System Status (I/M ready)

The Diagnostic Executive records DTCs and turns on the MIL when emission-related faults occur. It can also turn off the MIL if the conditions cease which caused the DTC to set.

Diagnostic Information

The diagnostic charts and functional checks are designed to locate a faulty circuit or component through a process of logical decisions. The charts are prepared with the requirement that the vehicle functioned correctly at the time of assembly and that there are no multiple faults present.

There is a continuous self-diagnosis on certain control functions. This diagnostic capability is complemented by the diagnostic procedures contained in this manual. The language of communicating the source of the malfunction is a system of diagnostic trouble codes. When a malfunction is detected by the control module, a diagnostic trouble code is set and the Malfunction Indicator Lamp (MIL) ("Check Engine" lamp) is illuminated.

Malfunction Indicator Lamp (MIL)

The Malfunction Indicator Lamp (MIL) looks the same as the MIL you are already familiar with ("Check Engine" lamp). However, OBD II requires that it illuminate under a strict set of guide lines.

Basically, the MIL is turned on when the PCM detects a DTC that will impact vehicle emissions.

The MIL is under the control of the Diagnostic Executive. The MIL will be turned on if an emissions-related diagnostic test indicates a malfunction has occurred. It will stay on until the system or component passes the same test, for three consecutive trips, with no emissions related faults.

If the vehicle is experiencing a misfire malfunction which may cause damage to the Three-Way Catalytic Converter (TWC), the MIL will flash once per second. This will continue until the vehicle is outside of speed and load conditions which could cause possible catalyst damage, and the MIL will stop flashing and remain on steady.

Extinguishing the MIL

When the MIL is on, the Diagnostic Executive will turn off the MIL after *three(3) consecutive* trips that a "test passed" has been reported for the diagnostic test that originally caused the MIL to illuminate.

Although the MIL has been turned off, the DTC will remain in the PCM memory (both Freeze Frame and Failure Records) until *forty(40) warm-up cycles after no faults* have been completed.

If the MIL was set by either a fuel trim or misfire-related DTC, additional requirements must be met. In addition to the requirements stated in the previous paragraph, these requirements are as follows:

- The diagnostic tests that are passed must occur within 375 RPM of the RPM data stored at the time the last test failed.
- Plus or minus ten (10) percent of the engine load that was stored at the time the last failed.
- Similar engine temperature conditions (warmed up or warming up) as those stored at the time the last test failed.

Meeting these requirements ensures that the fault which turned on the MIL has been corrected.

The MIL ("Check Engine" lamp) is on the instrument panel and has the following function:

- It informs the driver that a fault affects vehicle emission levels has occurred and that the vehicle should be taken for service as soon as possible.
- As a bulb and system check, the MIL will come "ON" with the key "ON" and the engine not running. When the engine is started, the MIL will turn "OFF."
- When the MIL remains "ON" while the engine is running, or when a malfunction is suspected due to a driveability or emissions problem, a Powertrain On-Board Diagnostic (OBD ll) System Check must be performed. The procedures for these checks are given in On-Board Diagnostic (OBD) System Check. These checks will expose faults which may not be detected if other diagnostics are performed first.

DTC Types

Each DTC is directly related to a diagnostic test. The Diagnostic Management System sets DTC based on the failure of the tests during a trip or trips. Certain tests must fail two (2) consecutive trips before the DTC is set. The following are the four (4) types of DTCs and the characteristics of those codes:

- Type A
  - Emissions related
  - Requests illumination of the MIL of the first trip with a fail
  - Stores a History DTC on the first trip with a fail
  - Stores a Freeze Frame (if empty)
  - Stores a Fail Record
  - Updates the Fail Record each time the diagnostic test fails
- Type B
  - Emissions related
  - "Armed" after one (1) trip with a fail
  - "Disarmed" after one (1) trip with a pass
  - Requests illumination of the MIL on the *second consecutive trip* with a fail
  - Stores a History DTC on the second consecutive trip with a fail (The DTC will be armed after the first fail)
  - Stores a Freeze Frame on the second consecutive trip with a fail (if empty)
  - Stores a Fail Record when the first test fails (not dependent on *consecutive trip* fails)
  - Updates the Fail Record each time the diagnostic test fails

(Some special conditions apply to misfire and fuel trim DTCs)

- Type C (if the vehicle is so equipped)
  - Non-Emissions related
  - Requests illumination of the Service
  - Stores a History DTC on the *first trip* with a fail
  - *Does not* store a Freeze Frame
  - Stores Fail Record when test fails
  - Updates the Fail Record each time the diagnostic test fails
- Type D
  - Non-Emissions related

- Not request illumination of any lamp
- Stores a History DTC on the *first trip* with a fail
- *Does not* store a Freeze Frame
- Stores Fail Record when test fails
- Updates the Fail Record each time the diagnostic test fails

IMPORTANT: Only four Fail Records can be stored. Each Fail Record is for a different DTC. It is possible that there will not be Fail Records for every DTC if multiple DTCs are set.

Special Cases of Type B Diagnostic Tests

Unique to the misfire diagnostic, the Diagnostic Executive has the capability of alerting the vehicle operator to potentially damaging levels of misfire. If a misfire condition exists that could potentially damage the catalytic converter as a result of high misfire levels, the Diagnostic Executive will command the MIL to "flash" at a rate of once per second during those the time that the catalyst damaging misfire condition is present.

Fuel trim and misfire are special cases of *Type B* diagnostics. Each time a fuel trim or misfire malfunction is detected, engine load, engine speed, and engine coolant temperature are recorded.

When the ignition is turned off, the last reported set of conditions remain stored. During subsequent ignition cycles, the stored conditions are used as reference for similar conditions. If a malfunction occurs during two consecutive trips, the Diagnostic Executive treats the failure as a normal *Type B* diagnostic, and does not use the stored conditions. However, if a malfunction occurs on two non-consecutive trips, the stored conditions are compared with the current conditions. The MIL will then illuminate under the following conditions:

- When the engine load conditions are within 10% of the previous test that failed.
- Engine speed is within 375 rpm, of the previous test that failed.
- Engine coolant temperature is in the same range as the previous test that failed.

Storing and Erasing Freeze Frame Data and Failure Records

Government regulations require that engine operating conditions be captured whenever the MIL is illuminated. The data captured is called Freeze Frame data. The Freeze Frame data is very similar to a single record of operating conditions. Whenever the MIL is illuminated, the corresponding record of operating conditions is recorded to the Freeze Frame buffer.

Freeze Frame data can only be overwritten with data associated with a misfire or fuel trim malfunction. Data from these faults take precedence over data associated with any other fault. The Freeze Frame data will not be erased unless the associated history DTC is cleared.

Each time a diagnostic test reports a failure, the current engine operating conditions are recorded in the *Failure Records* buffer. A subsequent failure will update the recorded operating conditions. The following operating conditions for the diagnostic test which failed *typically* include the following parameters:

- Air Fuel Ratio
- Air Flow Rate
- Fuel Trim
- Engine Speed
- Engine Load
- Engine Coolant Temperature
- Vehicle Speed
- TP Angle
- AP Angle
- MAP/BARO
- Injector Base Pulse Width
- Loop Status

Intermittent Malfunction Indicator Lamp

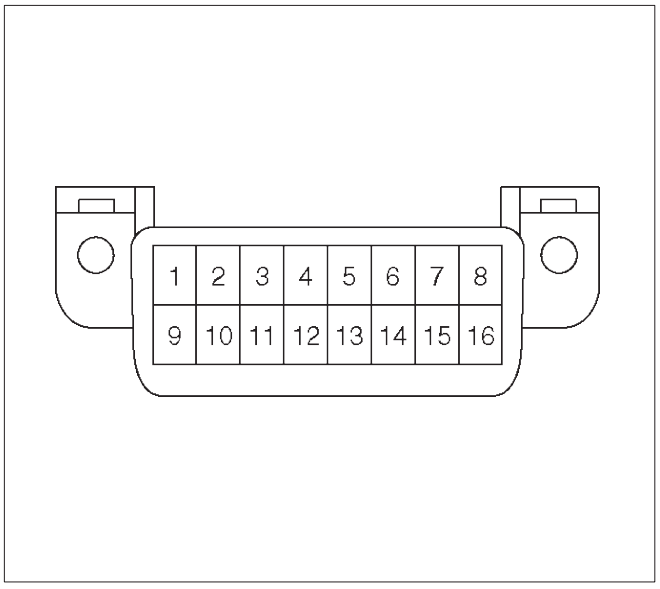
In the case of an "intermittent" fault, the MIL ("Check Engine" lamp) may illuminate and then (after three trips) go "OFF". However, the corresponding diagnostic trouble code will be stored in memory. When unexpected diagnostic trouble codes appear, check for an intermittent malfunction.

A diagnostic trouble code may reset. Consult the "Diagnostic Aids" associated with the diagnostic trouble code. A physical inspection of the applicable sub-system most often will resolve the problem.

Data Link Connector (DLC)

The provision for communication with the control module is the Data Link Connector (DLC). It is located at the lower left of the instrument panel behind a small square cover. The DLC is used to connect to the Tech 2 Scan Tool. Some common uses of the Tech 2 are listed below:

- Identifying stored Diagnostic Trouble Codes (DTCs).
- Clearing DTCs.
- Performing output control tests.
- Reading serial data.



TS24064

Decimal/Binary/Hexadecimal Conversions

Beginning in 1996, Federal Regulations require that all auto manufacturers selling vehicles in the United States provide Scan Tool manufacturers with software information to display vehicle operating parameters. All

Scan Tool manufacturers will display a variety of vehicle information which will aid in repairing the vehicle. Some Scan Tools will display encoded messages which will aid in determining the nature of the concern. The method of encoding involves the use of a two additional numbering systems: Binary and Hexadecimal.

The binary number system has a base of two numbers. Each digit is either a 0 or a 1. A binary number is an eight digit number and is read from right to left. Each digit has a position number with the farthest right being the 0 position and the farthest left being the 7 position. The 0 position, when displayed by a 1, indicates 1 in decimal. Each position to the left is double the previous position and added to any other position values marked as a 1.

A hexadecimal system is composed of 16 different alpha numeric characters. The alpha numeric characters used are numbers 0 through 9 and letters A through F. The hexadecimal system is the most natural and common approach for Scan Tool manufacturers to display data represented by binary numbers and digital code.

Verifying Vehicle Repair

Verification of vehicle repair will be more comprehensive for vehicles with OBD II system diagnostic. Following a repair, the technician should perform the following steps:

1. Review and record the Fail Records and/or Freeze Frame data for the DTC which has been diagnosed (Freeze Frame data will only be stored for an A or B type diagnostic and only if the MIL has been requested).
2. Clear DTC(s).
3. Operate the vehicle within conditions noted in the Fail Records and/or Freeze Frame data.
4. Monitor the DTC status information for the DTC which has been diagnosed until the diagnostic test associated with that DTC runs.

Following these steps are very important in verifying repairs on OBD II systems. Failure to follow these steps could result in unnecessary repairs.

Reading Diagnostic Trouble Codes Using The Tech 2 Scan Tool

The procedure for reading diagnostic trouble code(s) is to use a diagnostic Scan Tool. When reading DTC(s), follow instructions supplied by tool manufacturer.

Clearing Diagnostic Trouble Codes

IMPORTANT: Do not clear DTCs unless directed to do so by the service information provided for each diagnostic procedure. When DTCs are cleared, the Freeze Frame and Failure Record data which may help diagnose an intermittent fault will also be erased from memory.

If the fault that caused the DTC to be stored into memory has been corrected, the Diagnostic Executive will begin to count the “warm-up” cycles with no further faults detected, the DTC will automatically be cleared from the PCM memory.

To clear Diagnostic Trouble Codes (DTCs), use the diagnostic Scan Tool “clear DTCs” or “clear information” function. When clearing DTCs follow instructions supplied by the tool manufacturer.


When a Scan Tool is not available, DTCs can also be cleared by disconnecting *one* of the following sources for at least thirty (30) seconds.

NOTE: To prevent system damage, the ignition key must be “OFF” when disconnecting or reconnecting battery power.

- The power source to the control module. Examples: fuse, pigtail at battery PCM connectors, etc.
- The negative battery cable. (Disconnecting the negative battery cable will result in the loss of other on-board memory data, such as preset radio tuning).

Tech 2

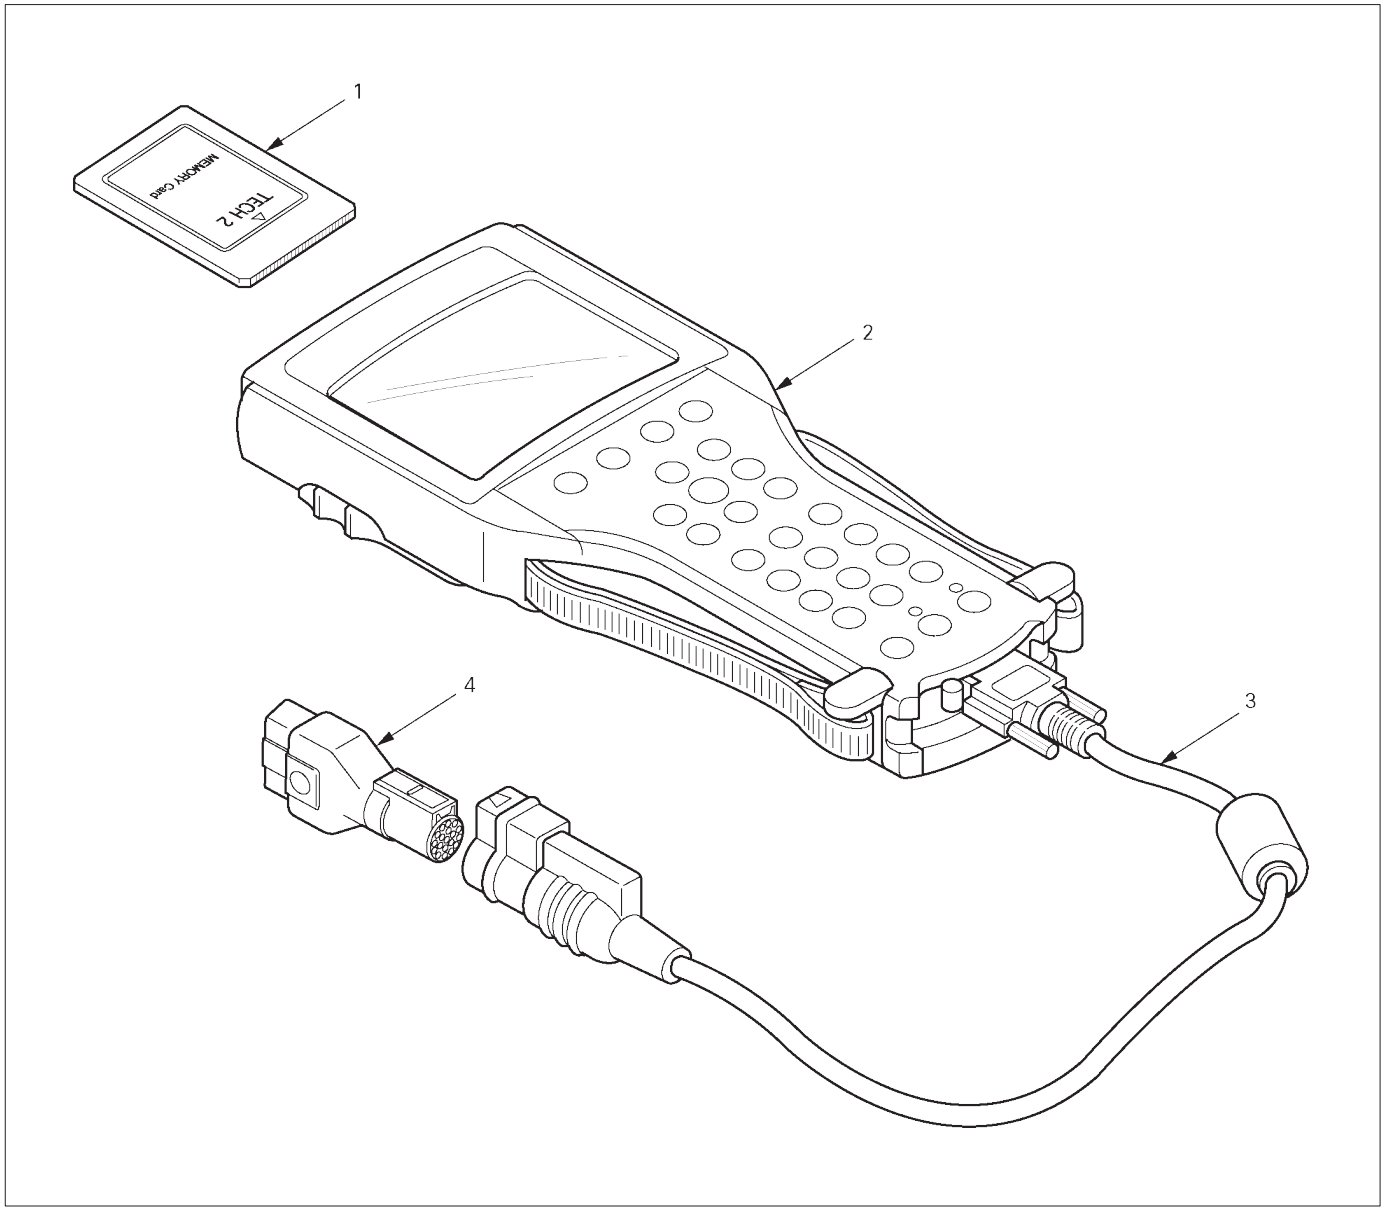From 98 MY, Isuzu dealer service departments are recommended to use the Tech 2 Scan Tool. Please refer to the Tech 2 user guide.



060M200031

Legend

(1) PCMCIA Card
(2) SAE 16/19 Adaptor
(3) DLC Cable
(4) Tech–2

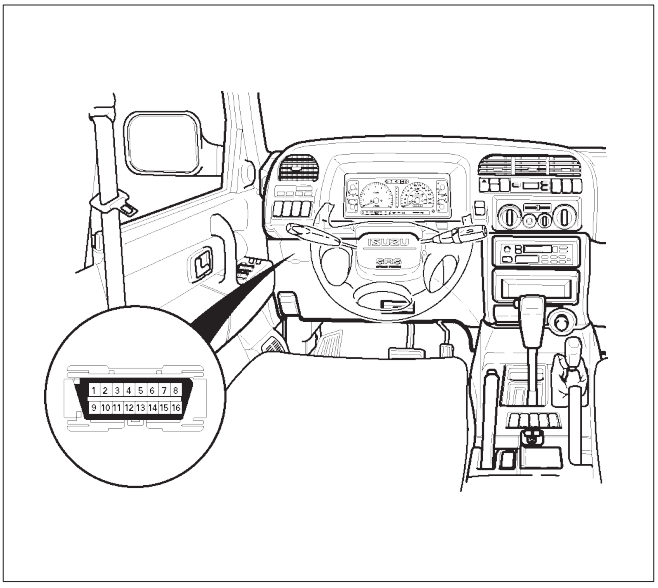
Tech 2 Features

1. Tech 2 is a 12 volt system. Do not apply 24 volts.
2. After connecting and/or installing the Vehicle Communications Interface (VCI) module, PCMCIA card and DLC connector to the Tech 2, connect the tool to the vehicle DLC.
3. Make sure the Tech 2 is OFF when removing or installing the PCMCIA card.
4. The PCMCIA card has a capacity of 10 Megabytes which is 10 times greater than the memory of the Tech 1 Mass Storage Cartridge.
5. The Tech 2 has the capability of two snapshots.
6. The PCMCIA card is sensitive to magnetism and static electricity, so care should be taken in the handling of the card.
7. The Tech 2 can plot a graph when replaying a snapshot.
8. Always return to the Main Menu by pressing the EXIT key several times before shutting down.
9. To clear Diagnostic Trouble Codes (DTCs), open Application Menu and press “F1: Clear DTC Info”.

Getting Started

- Before operating the Isuzu PCMCIA card with the Tech 2, the following steps must be performed:

1. Insert the Isuzu system PCMCIA card (1) into the Tech 2 (5).
2. Connect the SAE 16/19 adapter (3) to the DLC cable (4).
3. Connect the DLC cable to the Tech 2 (5)
4. Make sure the vehicle ignition is off.
5. Connect the Tech 2 SAE 16/19 adapter to the vehicle DLC.



821RW021

6. Turn on the vehicle ignition.
7. Power the Tech 2 ON and verify the Tech 2 power up display.

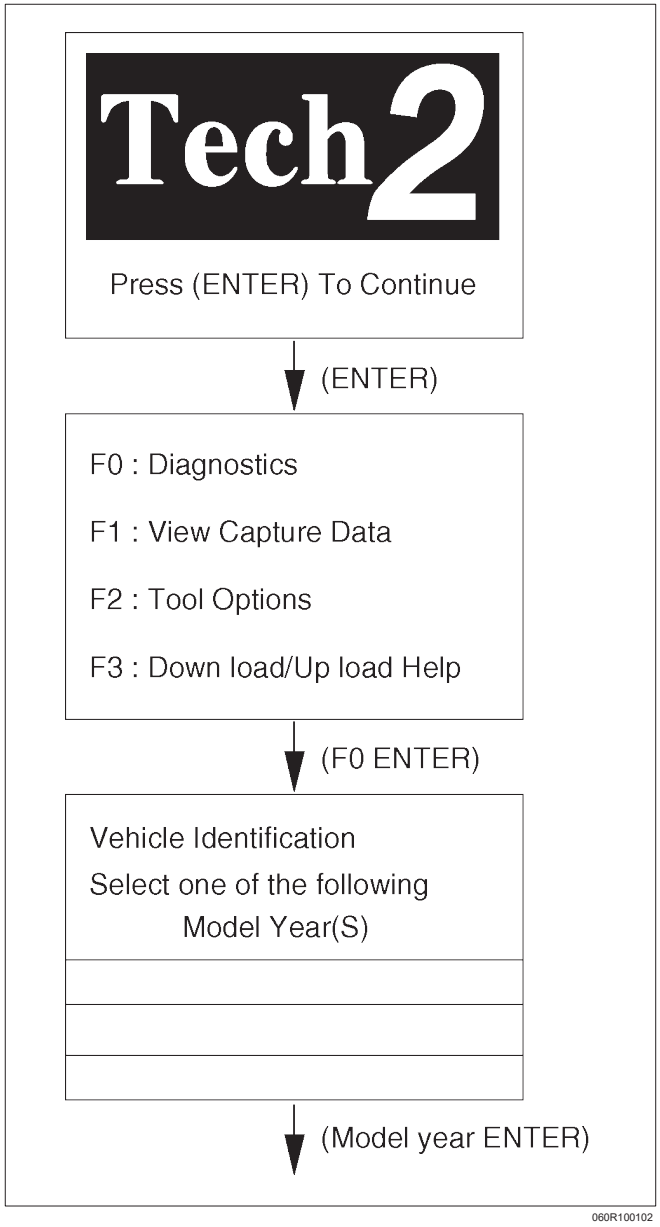


060RW009


NOTE: The RS232 Loop back connector is only to use for diagnosis of Tech 2. Refer to user guide of the Tech 2.

Operating Procedure (For Example)

The power up screen is displayed when you power up the tester with the Isuzu systems PCMCIA card. Follow the operating procedure below.




060R100102

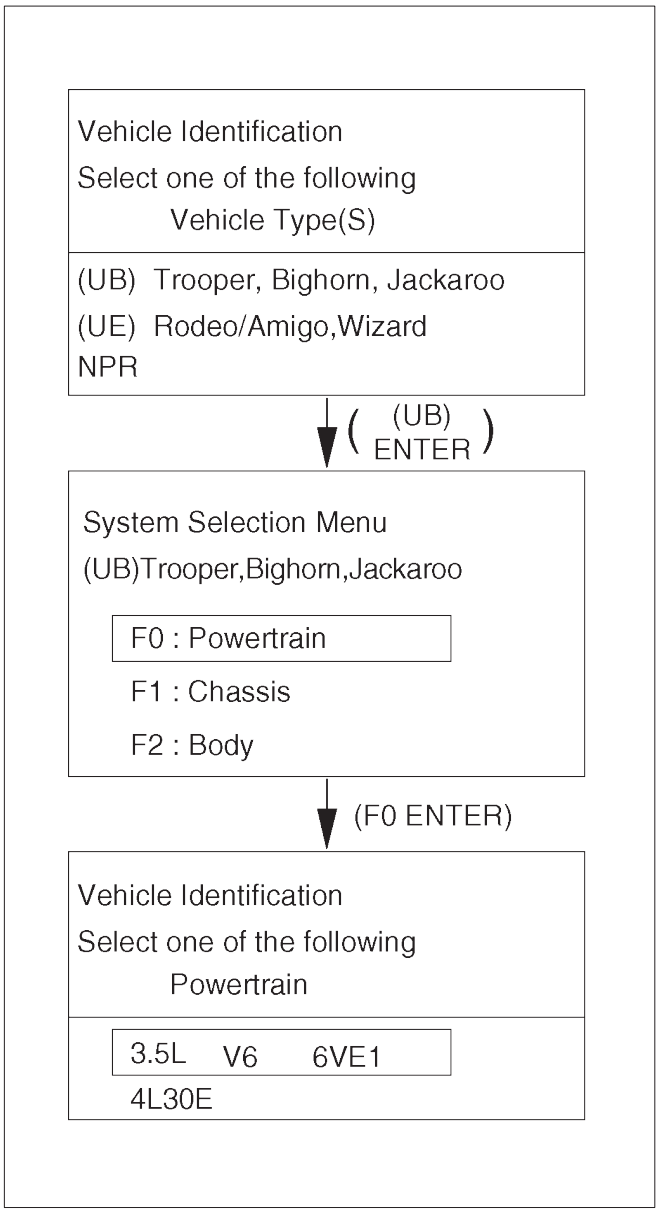

060R200202


Menu

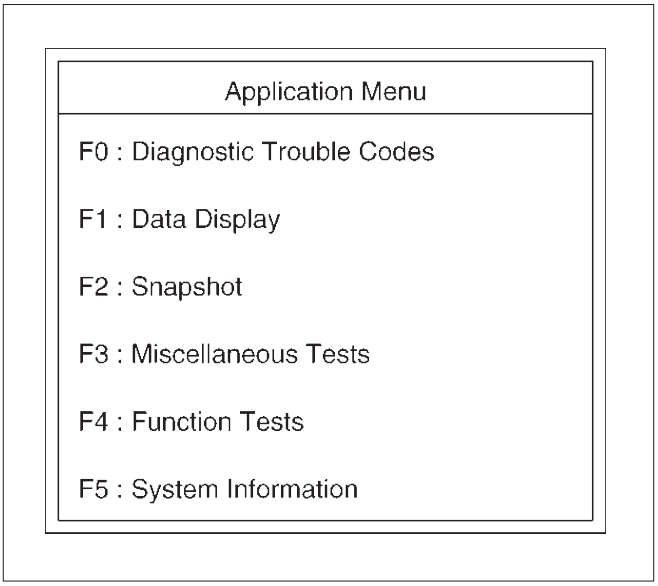- The following table shows which functions are used for the available equipment versions.



060R100018

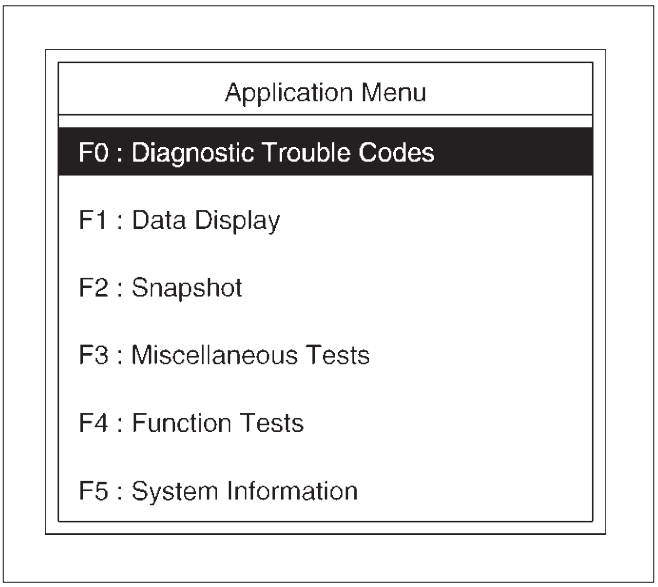
DTC Modes



060R100077

On OBD II vehicles there are options available in Tech 2 DTC mode to display the enhanced information available. After selecting DTC, the following menu appears:

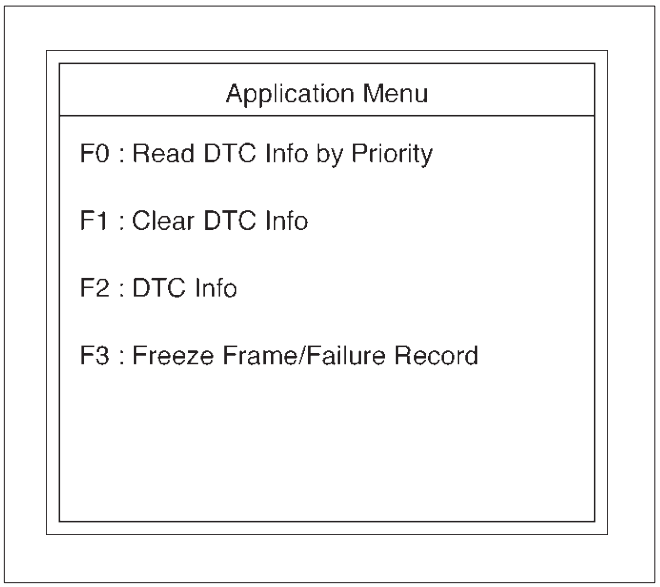1. Read DTC Info by Priority
2. Freeze Frame
3. Fail Records (not all applications)
4. DTC Info
5. Clear Info



060RW223

The following is a brief description of each of the sub menus in DTC Info and DTC. The order in which they appear here is alphabetical and not necessarily the way they will appear on the Tech 2.

DTC Information Mode

Use the DTC info mode to search for a specific type of stored DTC information.

DTC Status

This selection will display any DTCs that have not run during the current ignition cycle or have reported a test failure during this ignition up to DTCs. DTC tests which run and pass will cause that DTC number to be removed from Tech 2 screen.

Fail This Ignition

This selection will display all DTCs that have failed during the present ignition cycle.

History

This selection will display only DTCs that are stored in the PCM's history memory. It will display all type A and B DTCs that have requested the MIL and have failed within the last 40 warm-up cycles. In addition, it will display all type C and type D DTCs that have failed within the last 40 warm-up cycles.

Last Test Failed

This selection will display only DTCs that have failed the last time the test run. The last test may have run during a previous ignition cycle if a type A or type B DTC is displayed. For type C and type D DTCs, the last failure must have occurred during the current ignition cycle to appear as Last Test Fail.

MILSVC or Message Request

This selection will display only DTCs that are requesting the MIL. Type C and type D DTCs cannot be displayed using this option. This selection will report type B DTCs only after the MIL has been requested.

Not Run Since Code Cleared

This option will display up to DTCs that have not run since the DTCs were last cleared. Since any displayed DTCs have not run, their condition (passing or failing) is unknown.

Test Failed Since Code Cleared

This selection will display all active and history DTCs that have reported a test failure since the last time DTCs were cleared. DTCs that last failed more than 40 warm-up cycles before this option is selected will not be displayed.

Miscellaneous Test

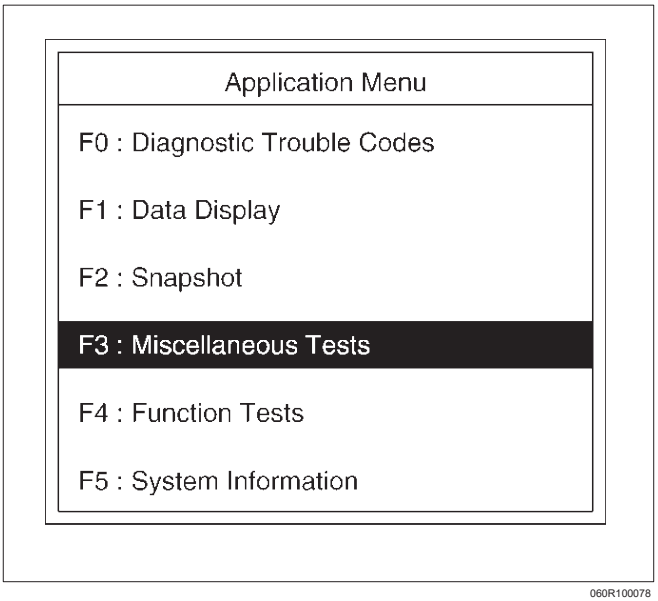
This test consists of eight menus-Lights, Relays, EVAP, Fuel System, Instruments, EGR Control, Variable Intake Manifold Solenoid, and Injector Balance Tests.
In these tests, Tech 2 sends operating signals to the systems to confirm their operations thereby to judge the normality of electric circuits.
To judge intermittent trouble,

1. Confirm DTC freeze frame data, and match the freeze frame data as test conditions with the data list displayed by Miscellaneous Test.
2. Confirm DTC setting conditions, and match the setting conditions as test conditions with the data list displayed by Miscellaneous Test.
3. Refer to the latest Service Bulletin.
   Check to see if the Latest software is released or not. Down load the LATEST PROGRAMMED SOFTWARE to the replacement PCM.

Lamps Test


This test is conducted check MIL, Up Shift Lamp, Low Fuel Lamp, Reduced Power Lamp and Cruise Control Lamp for its working.
Tech2 must be used for this test.
Test Procedure:

1. Connect Tech 2 to the vehicle DLC.
2. Run the Engine at idle.
3. Select F3: Miscellaneous Test in the Application Menu.




060R100078

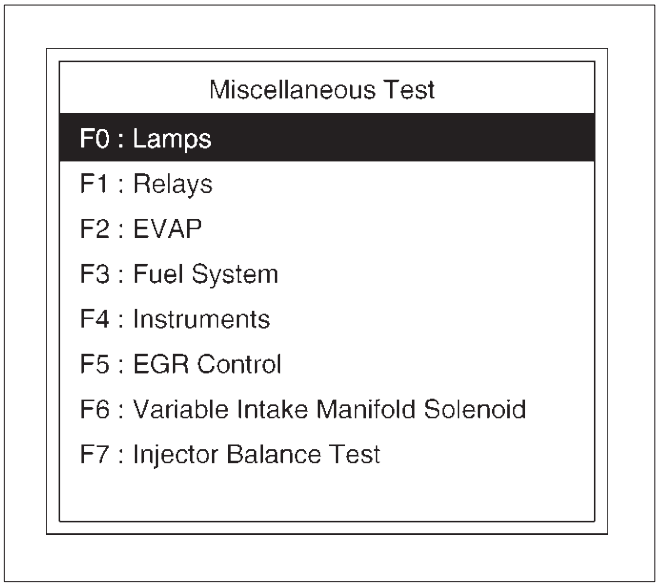4. Select F0:Lamps Test in the Miscellaneous Test.



060RY00080

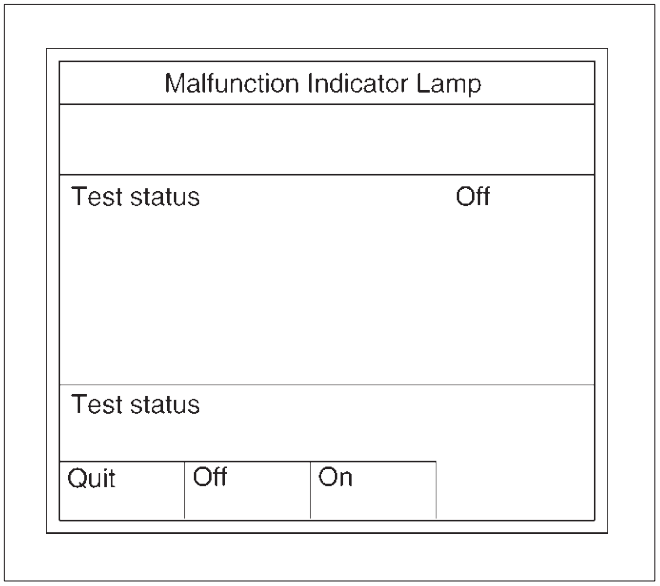
5. Select F0:Malfunction Indicator Lamp.



060RY00091


6. Push”On” soft key.
7. Make sure Lamp illuminates.
8. If lamp illuminates, the Lamp is operating correctly.

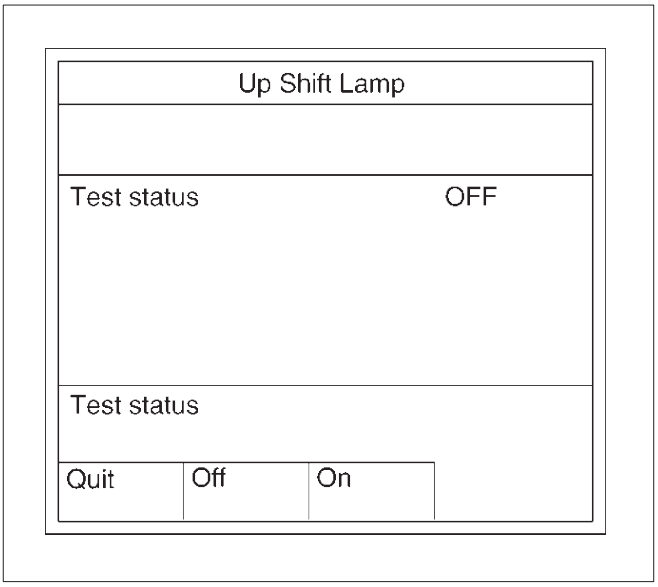9. Select F2: Up Shift Lamp



060RY00076

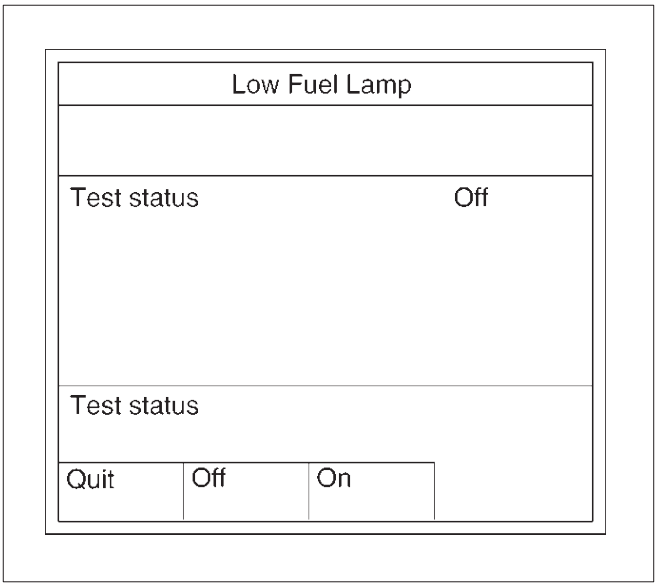
10. Push “On” soft key.
11. Make sure Lamp illuminates.
12. If Lamp illuminates, the Lamp is operating correctly.
13. Select F2:Low Fuel Lamp



060RY00092


14. Push “On” soft key.
15. Make sure Lamp illuminates.
16. If Lamp illuminates, the Lamp is operating correctly.

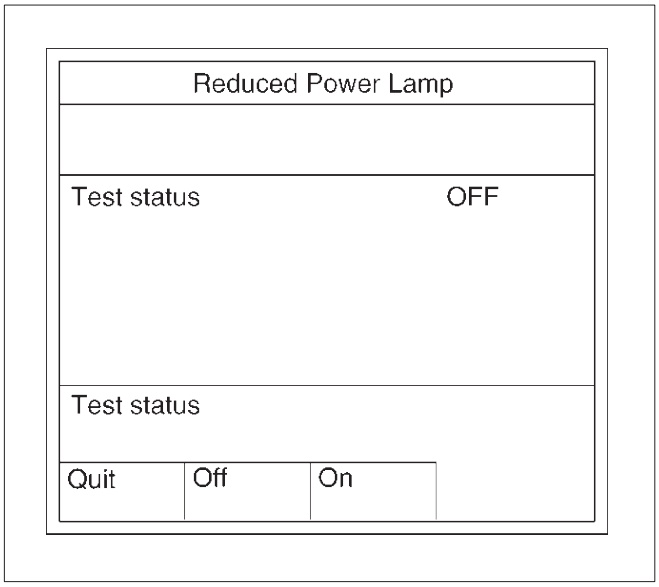17. Select F3:Reduced Power Lamp



060RY00077

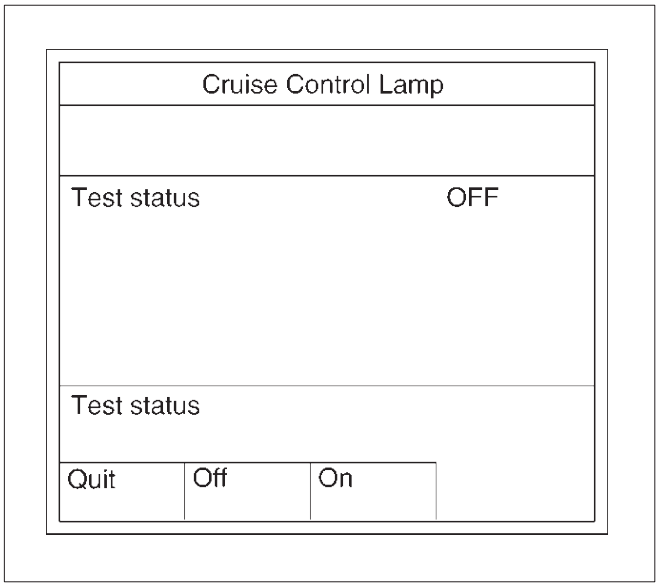18. Push “On” soft key.
19. Make sure Lamp illuminates.
20. If Lamp illuminates, the Lamp is operating correctly.
21. Select F5:Cruise Control Lamp




060RY00078

22. Push “On” soft key.
23. Make sure Lamp illuminates.
24. If Lamp illuminates, the Lamp is operating correctly.

Relays Test


This test is conducted to check Fuel Pump Relay and A/C Clutch for proper operation.
Tech 2 must be used for this test.
Test Procedure:

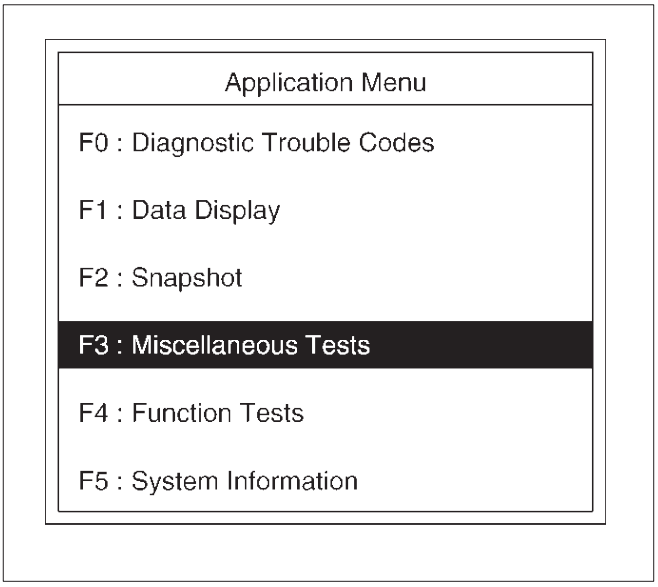1. Connect Tech 2 to the vehicle DLC.
2. Ignition SW is “On”.
3. Select F3: Miscellaneous Test in the Application Menu.




060R100078

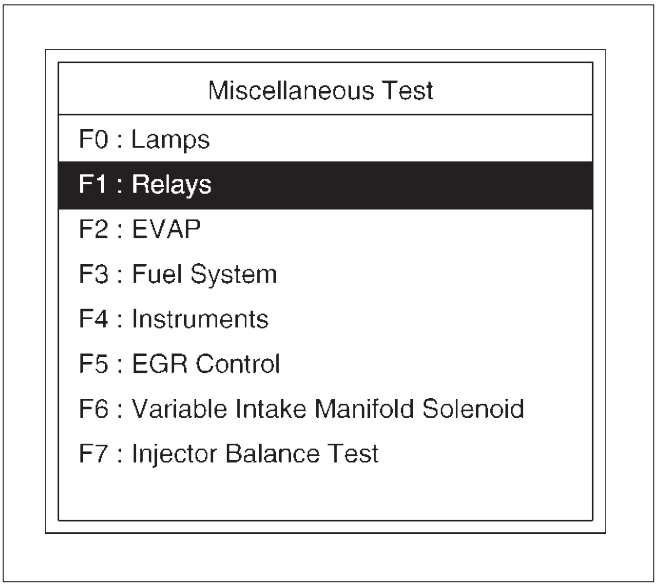4. Select F1:Relay Test in the Miscellaneous Test.




060RY00081

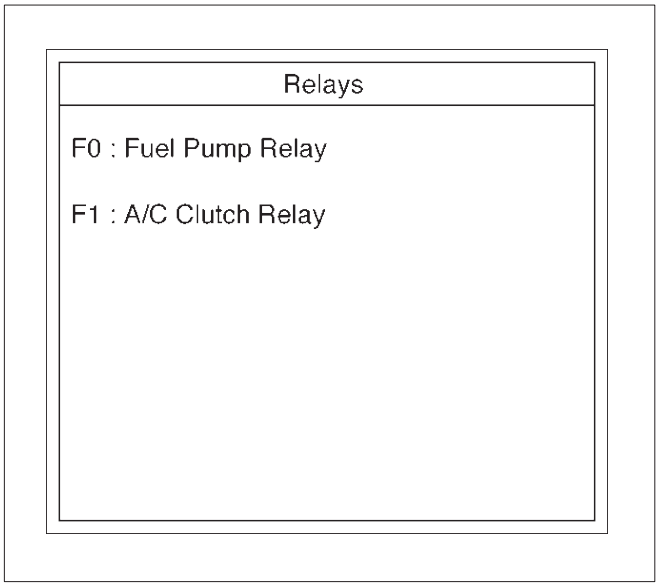5. Select F0:Fuel Pump Relay.



060RX021

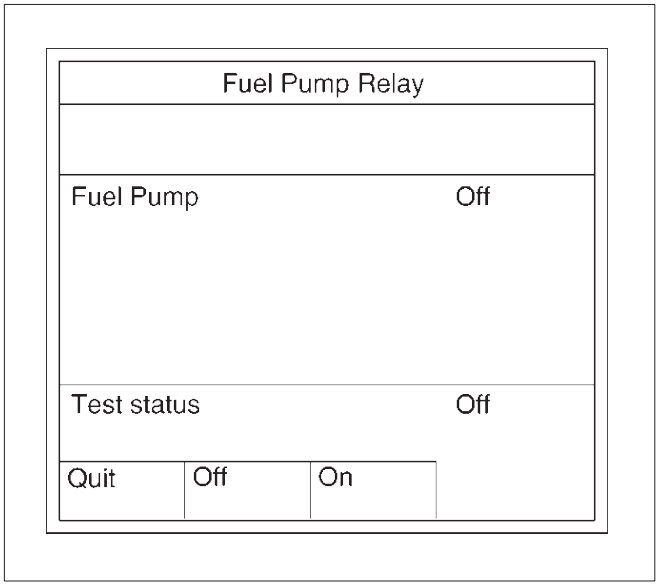
6. Push “On” soft key.



060RY00093

7. Control Fuel Pump Relay and check data list.
8. If the data list changes, the Fuel Pump Relay is normal.
9. Select F1:A/C Clutch Relay.
10. Run the Engine at idle.

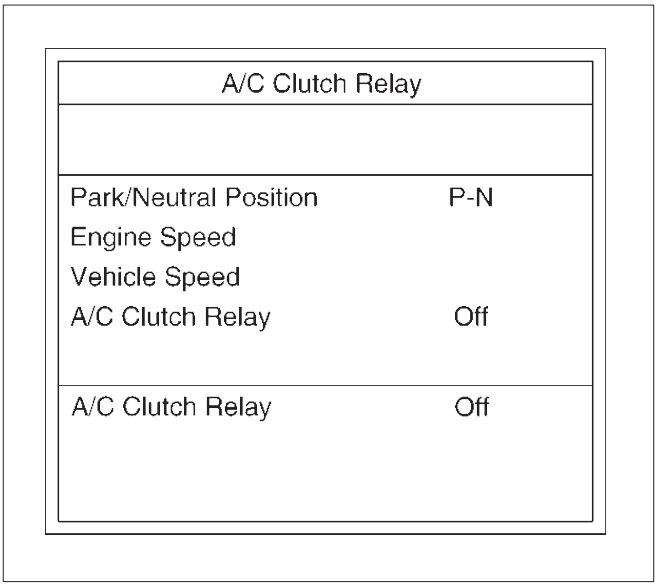11. Turn on Air Conditioning.




060RY00094

12. Turn “On” and “Off” A/C Switch.
13. Contol A/C Clutch Relay and check data list.
14. If the data list changes, the Fuel Pump Relay is normal.

EVAP Test


This test is conducted to check EVAP system for its power operation.
Tech 2 must be used for this test.
Test Procedure:

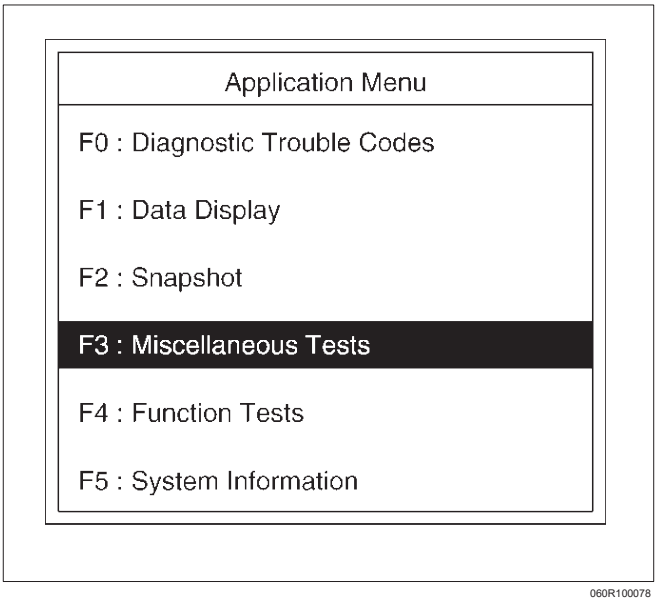1. Connect Tech 2 to the vehicle DLC.
2. Run the Engine at idle.
3. Select F3: Miscellaneous Test in the Application Menu.




060R100078

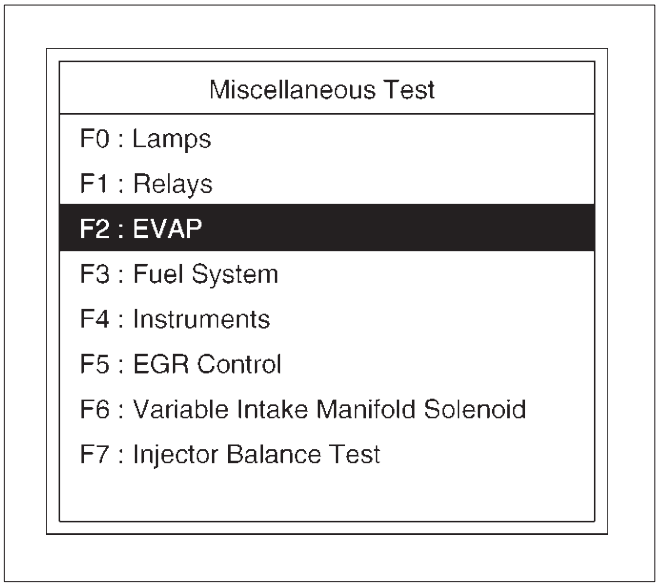4. Select F2: EVAP Test in the Miscellaneous Test.




060RY00082

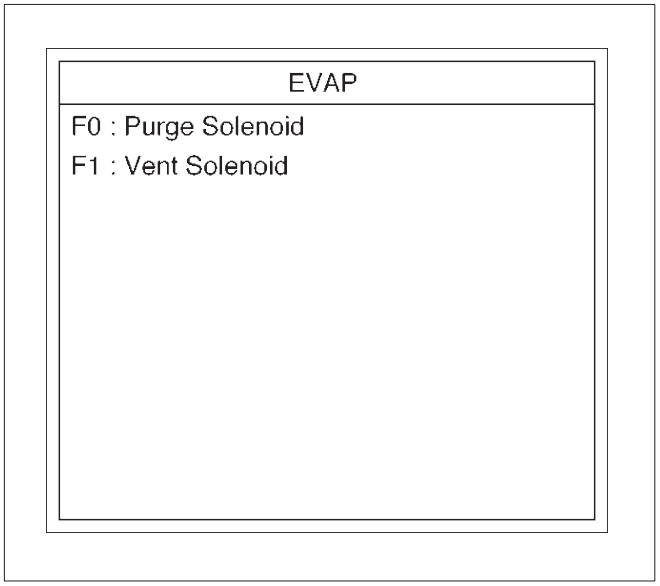5. Select F0: Purge Solenoid.




060RX025

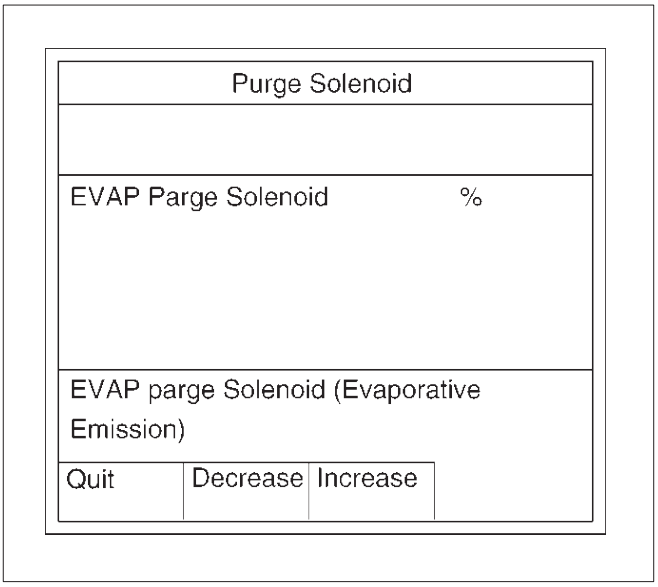6. Push “Decrease” or “Increase” soft key.




060RY00095

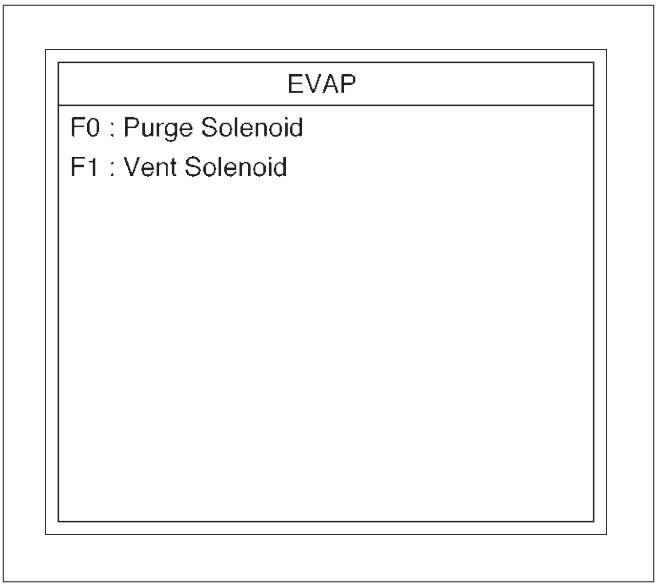7. Control EVAP Purge Solenoid and check a data list.
8. If the data list changes, the Purge Solenoid is normal.
9. Turn engine off, turn ignition SW “On”.
10. Select F1:EVAP Vent Solenoid.



060RX025

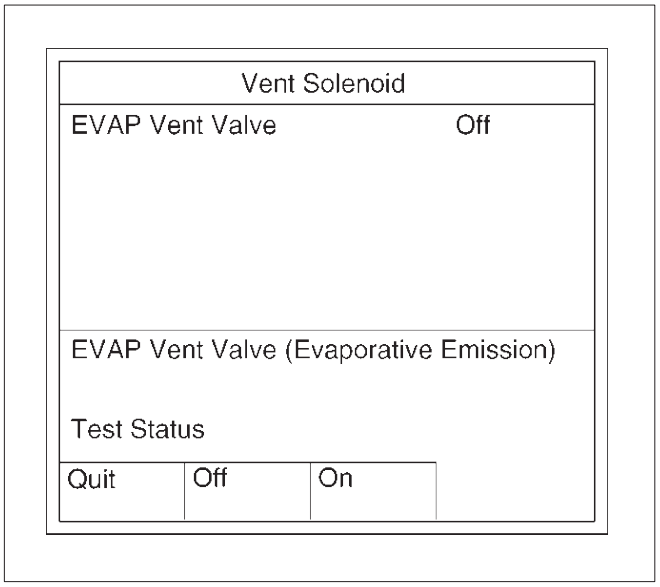11. Push “On” or “Off” soft key.




060RY00096

12. Control EVAP Vent Solenoid and check data list.
13. If the data list changes, the EVAP Vent Solenoid is normal.

Fuel System Test


This test is conducted check Fuel system for proper operation.
Tech 2 must be used for this test.
Test Procedure:

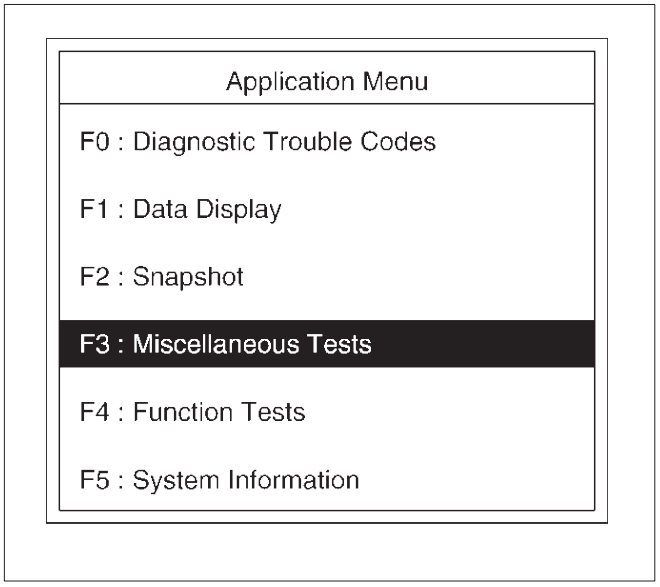1. Connect Tech 2 to the vehicle DLC.
2. Ignition SW is “On”.
3. Select F3: Miscellaneous Test in the Application Menu.




060R100078

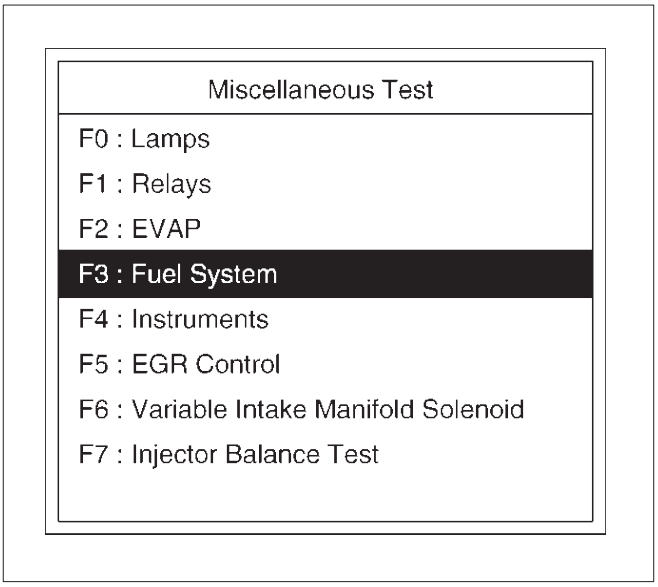4. Select F3: Fuel System in the Miscellaneous Menu.




060RY00083

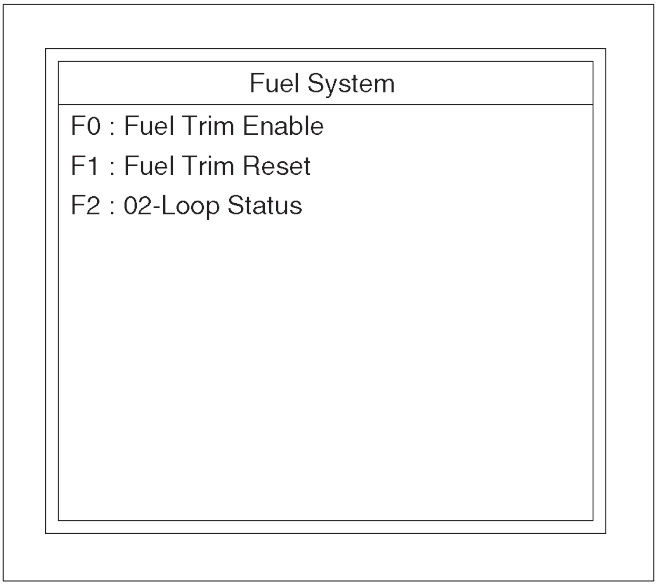5. Select F0: Fuel Trim Enable.




060R200071

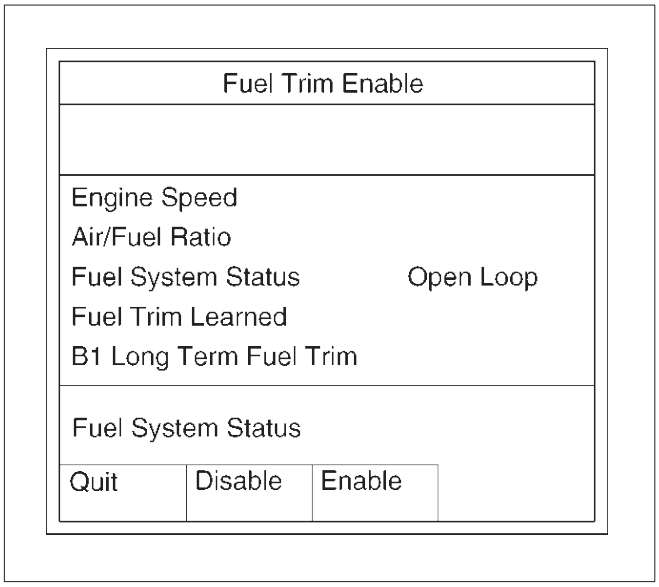6. Push “Disable” or “Enable” soft key.




060RY00097

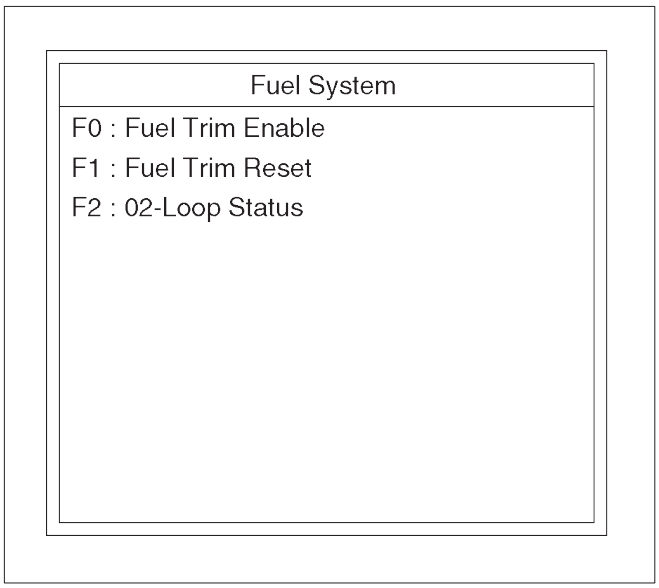7. Control Fuel Trim and check data list.
8. If data list changes, the Fuel Trim is normal.
9. Select F1: Fuel Trim Reset.




060R200071

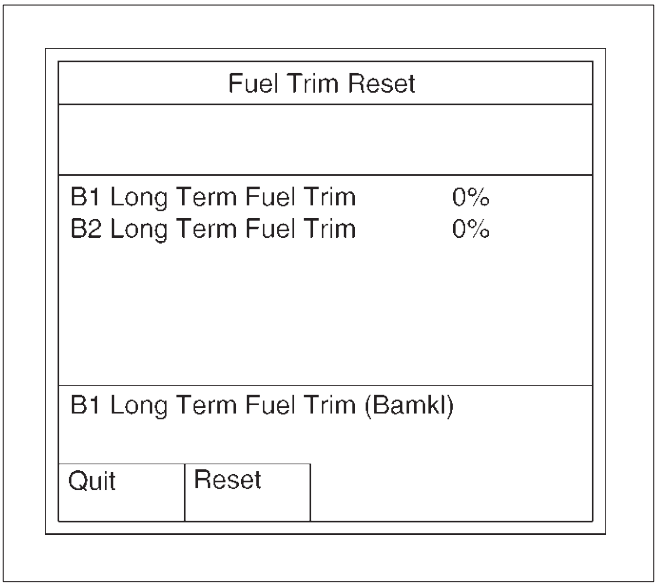10. Push “Reset” soft key.



060RY00098

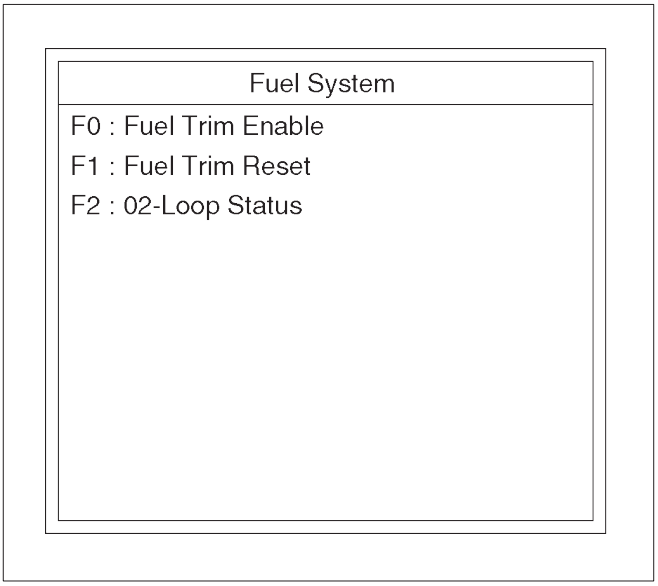
11. Select F2: O2-Loop status.



060R200071

12. This test is check the “Closed Loop Status” performance.

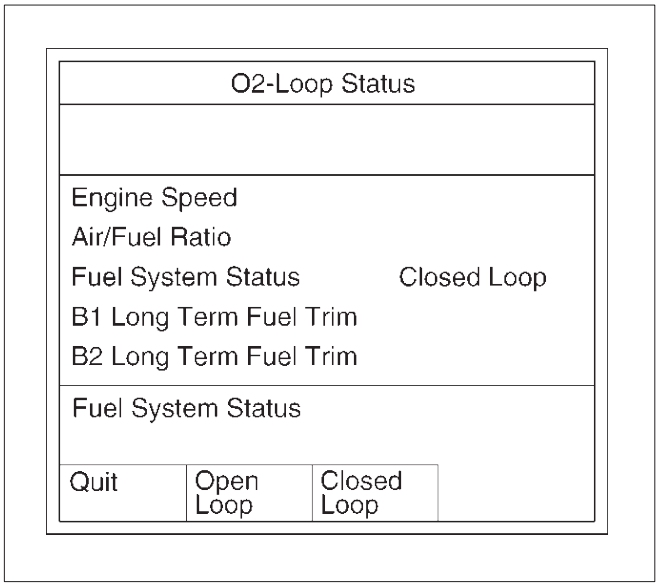13. Push “Open Loop” or “Closed Loop” soft key.




060RY00099

14. Control O2-Loop and check data list.
15. If data list changes, the O2-Loop is normal.

Instruments Test


This test is conducted check Instruments for proper operation.
Tech 2 must be used for this test.
Test Procedure:

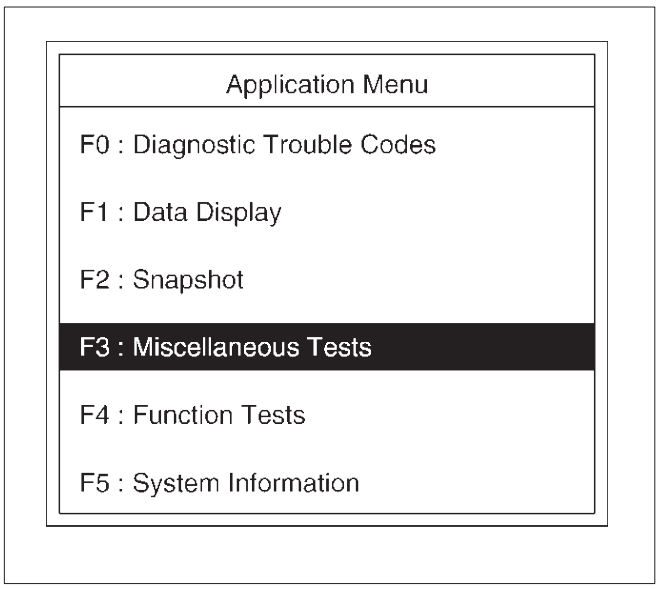1. Connect Tech 2 to the vehicle DLC.
2. Ignition SW is “On”.
3. Select F3: Miscellaneous Test in the Application Menu.




060R100078

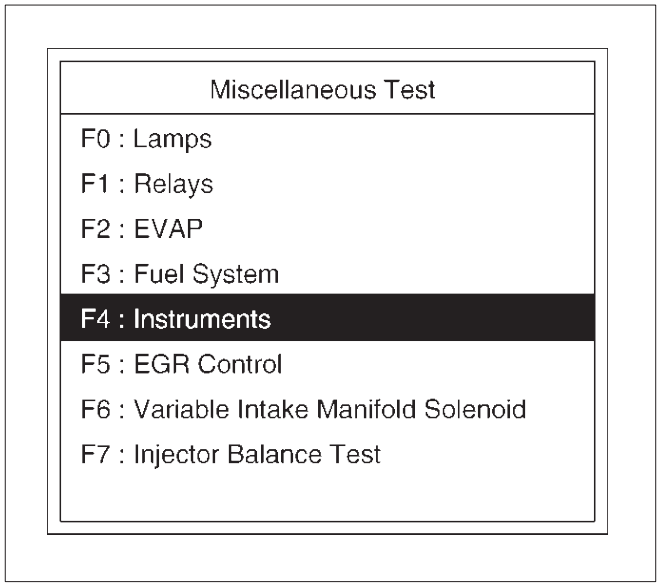4. Select F4: Instruments in the Miscellaneous Menu.




060RY00106

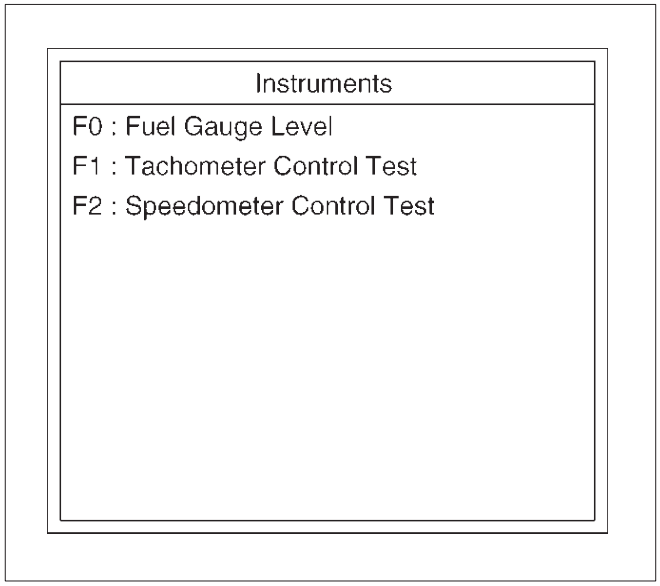5. Select F0: Fuel Gauge level.




060RY00107

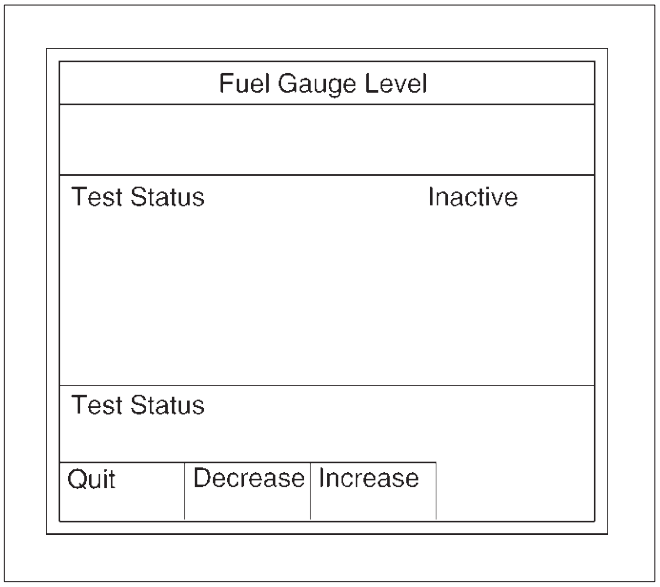6. Push “Decrease” or “Increase” soft key.




060RY00100

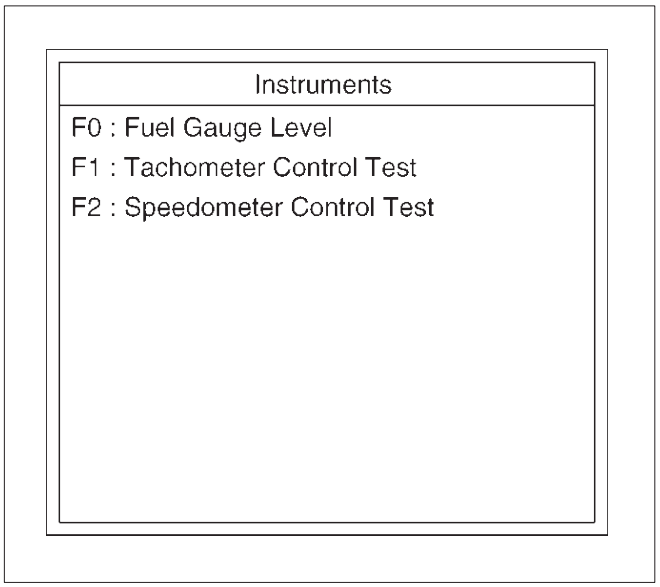7. Control Fuel Level and check data list.
8. If data list and Fuel gauge meter changes, Fuel Gauge level is normal.
9. Select F1: Tachometer Control Test.



060RY00107

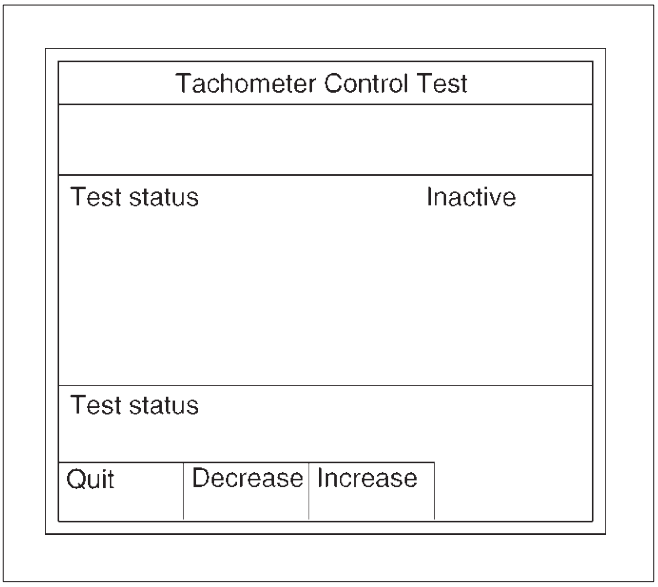10. Push “Inactive” or “active” soft key.




060RY00101

11. Control tachometer and data list.
12. If data list and meter changes, the tachometer control is normal.

EGR Control Test


This test is conducted check EGR valve for proper operation.
Tech 2 must be used for this test.
Test Procedure:

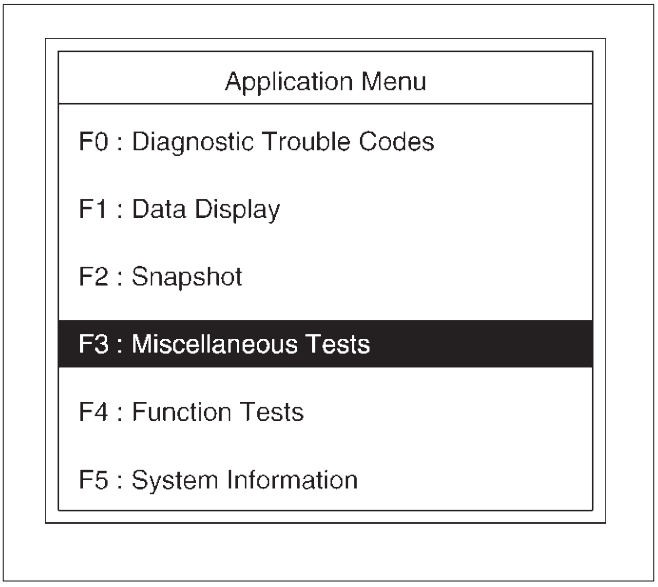1. Connect Tech 2 to the vehicle DLC.
2. Run the Engine at idle.
3. Select F3: Miscellaneous Test in the Application Menu.




060R100078

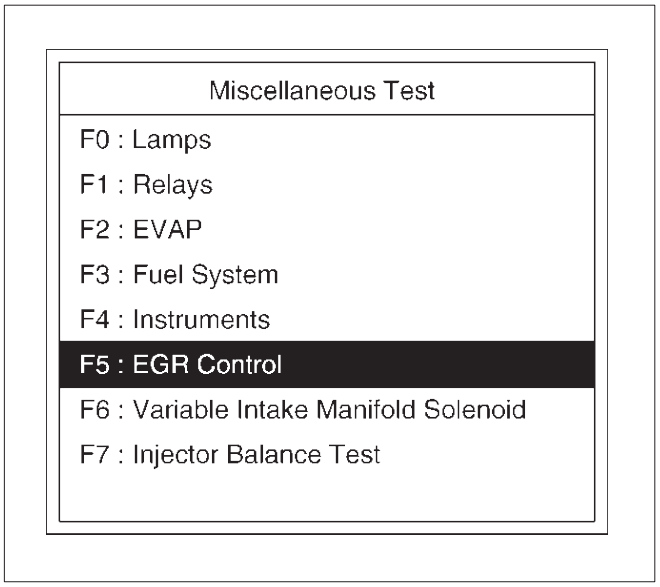4. Select F5: EGR Control Test in the Miscellaneous Test.



060RY00084

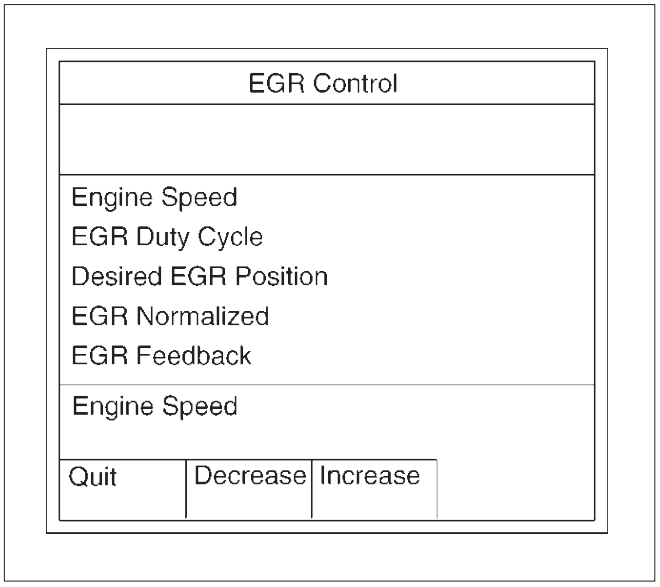5. Control EGR Valve and check data list.



060RY00103

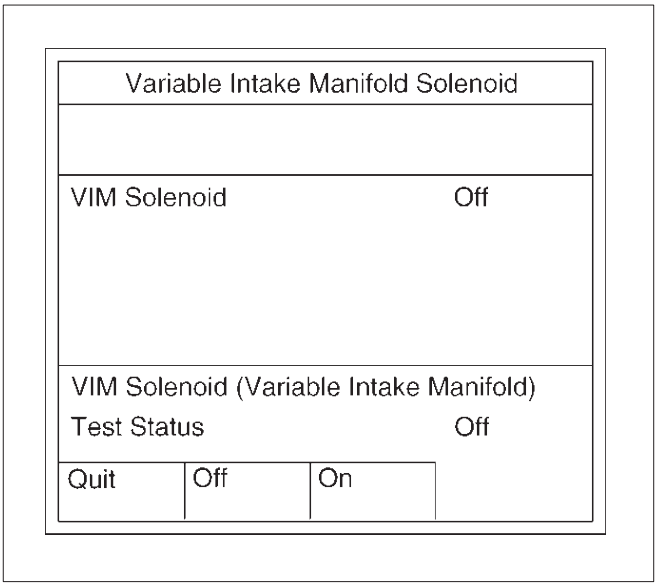
6. If data list changes, the EGR Control is normal.

Variable Intake Manifold Solenoid Test

This test is conducted check VIM Solenoid for proper operation.
Tech 2 must be used for this test.
Test Procedure:


1. Connect Tech 2 to the vehicle DLC.

2. Ignition SW is “On”.




060RY00104

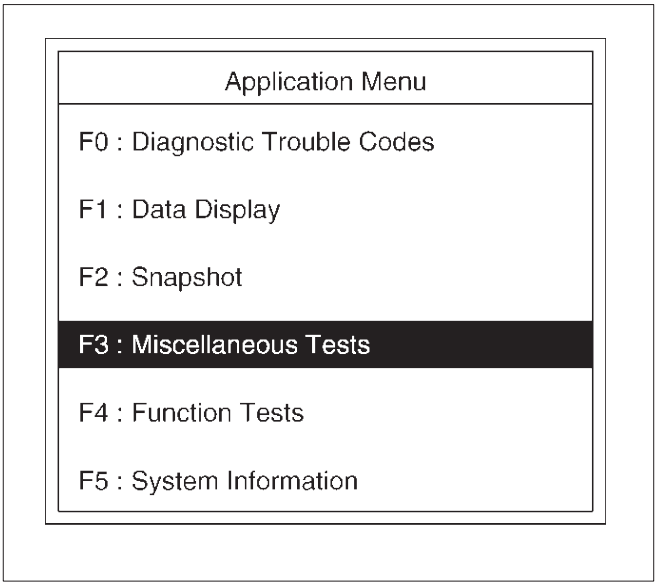3. Select F3: Miscellaneous Test in the Application Menu.




060R100078

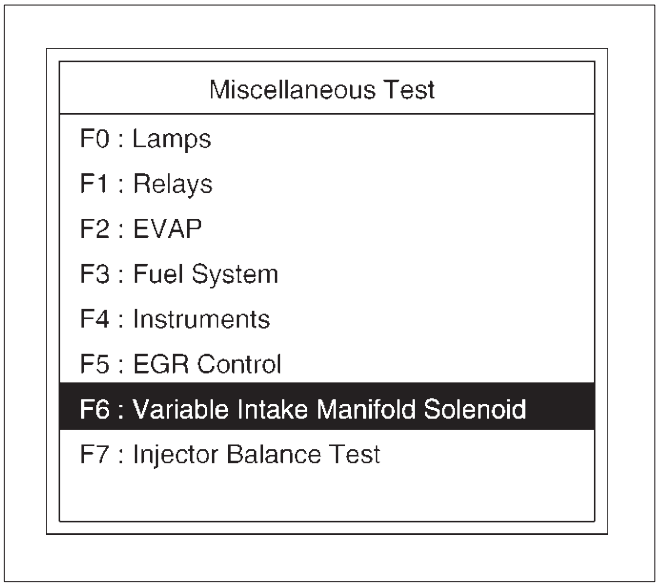4. Select F6: Variable Intake Manifold Solenoid Test.



060RY00085

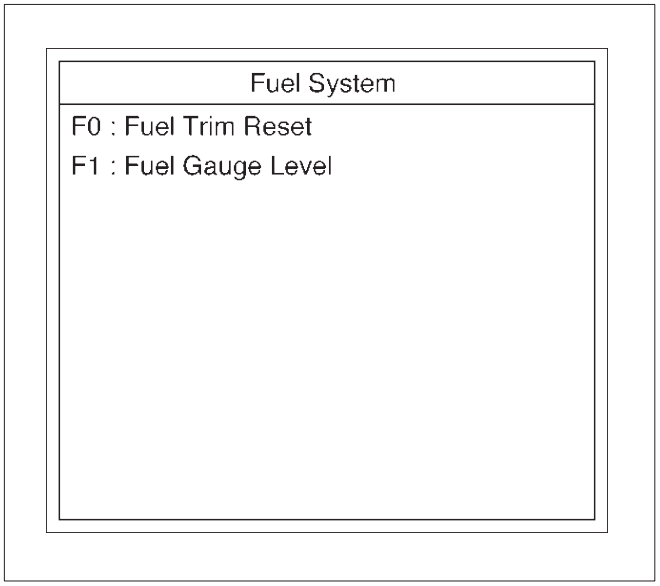5. Push “On” or “Off” soft key.




060RX028

6. Control VIM Solenoid check data list.
7. If data list changes, the VIM Solenoid is normal.

Injector Balance Test


This test is conducted to make sure the appropriate electric signals are being sent to injectors Nos. 1–6.
Tech 2 must be used for this test.
Test Procedure:

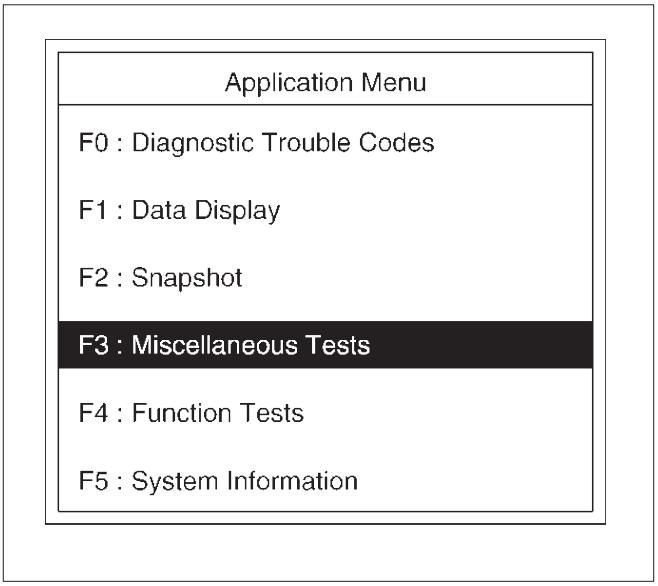1. Connect Tech 2 to the vehicle DLC.
2. Run the Engine at idle.
3. Select F3: Miscellaneous Test in the Application Menu.




060R100078

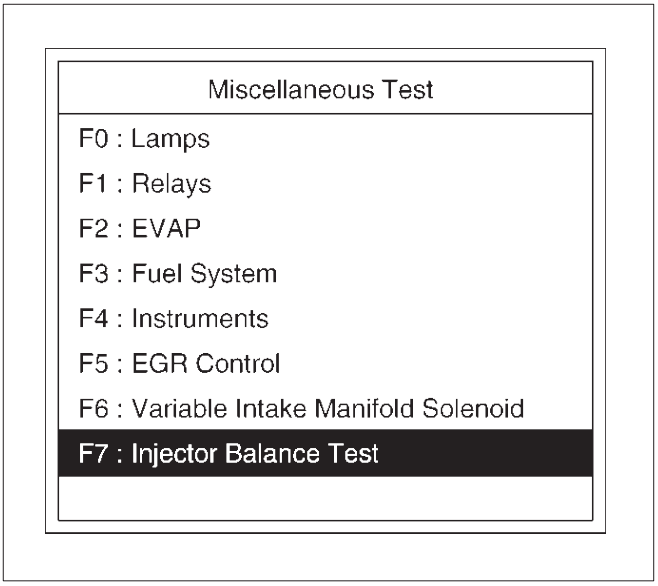4. Select F7: Injector Balance Test in the Miscellaneous Test.



060RY00086

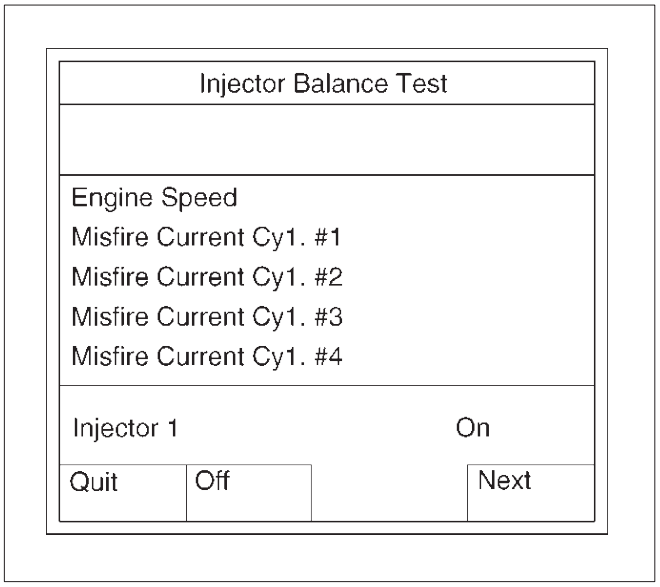5. Select injector number and push “injector off” soft key.




060RY00105

6. Make sure of engine speed change.
7. If engine speed changes, the injector electric circuit is normal.
   If engine speed does not change, the injector electric circuit or the injector itself is not normal.

Plotting Snapshot Graph

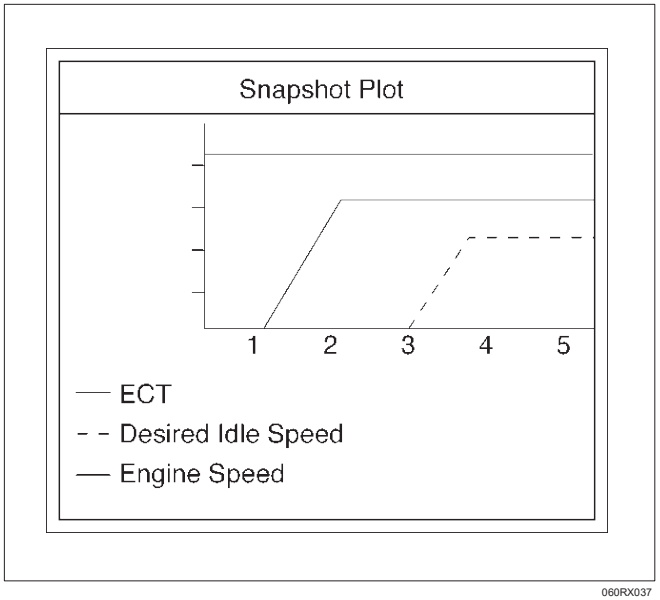
This test selects several necessary items from the data list to plot graphs and makes data comparison on a long term basis. It is an effective test particularly in emission related evaluations.



060RX037


For trouble diagnosis, you can collect graphic data (snap shot) directly from the vehicle.
You can replay the snapshot data as needed. Therefore, accurate diagnosis is possible, even though the vehicle is not available.

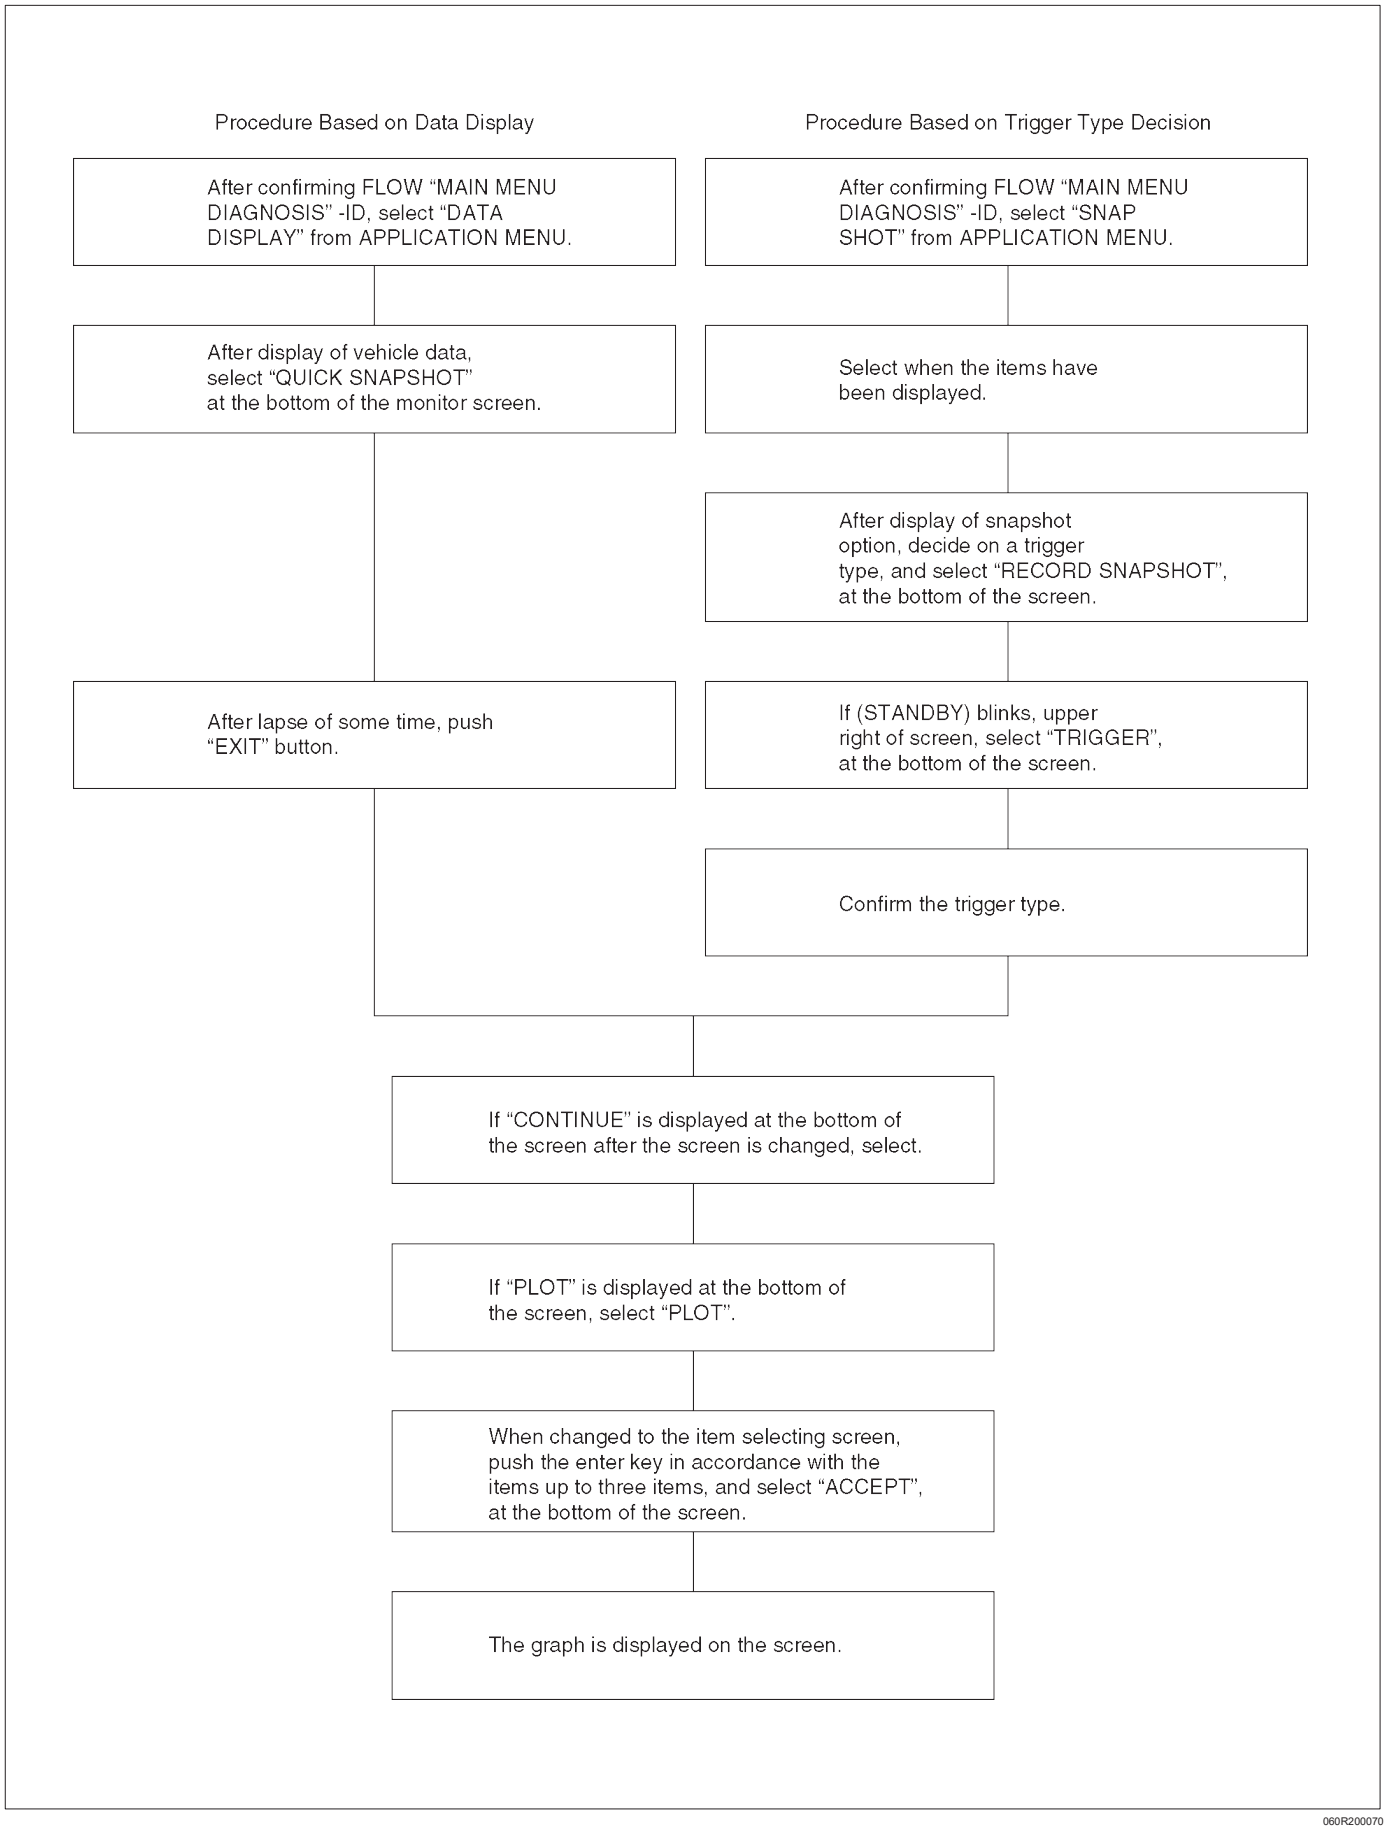Plotting Graph Flow Chart (Plotting graph after obtaining vehicle information)



060R200070

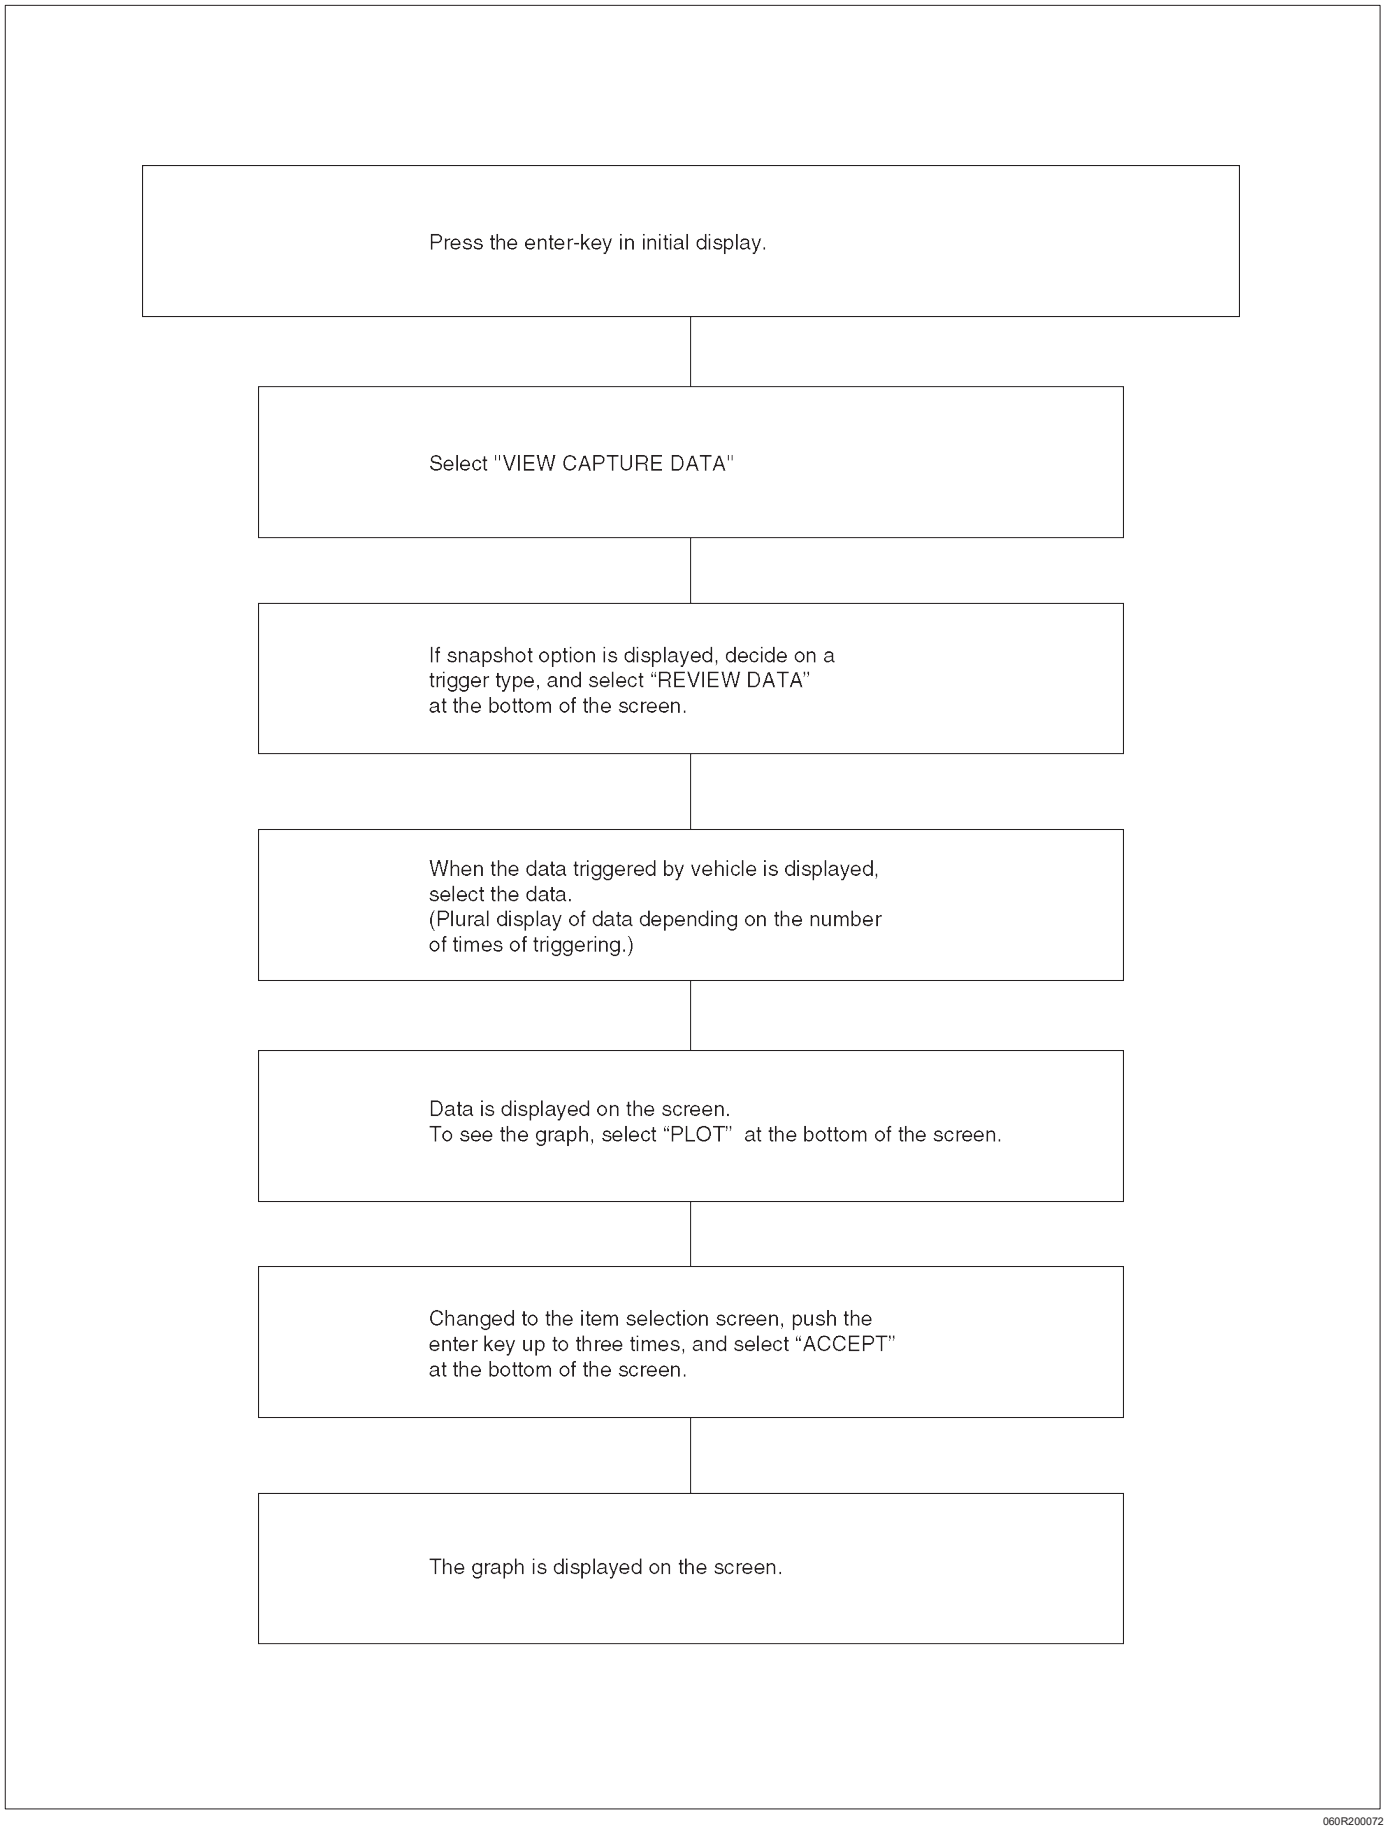Flow Chart for Snapshot Replay (Plotting Graph)



060R200072

Primary System-Based Diagnostic

Primary System-Based Diagnostic

There are primary system-based diagnostics which evaluate system operation and its effect on vehicle emissions. The primary system-based diagnostics are listed below with a brief description of the diagnostic function:

Oxygen Sensor Diagnosis

The fuel control heated oxygen sensors (Bank 1 HO2S 1 and Bank 2 HO2S 1) are diagnosed for the following conditions:

- Heater performance (time to activity on cold start)
- Slow response
- Response time (time to switch R/L or L/R)
- Inactive signal (output steady at bias voltage – approx. 450 mV)
- Signal fixed high
- Signal fixed low

The catalyst monitor heated oxygen sensors (Bank 1 HO2S 2 and Bank 2 HO2S 2) are diagnosed for the following conditions:

- Heater performance (time to activity on cold start).
- Signal fixed low during steady state conditions or power enrichment (hard acceleration when a rich mixture should be indicated).
- Signal fixed high during steady state conditions or deceleration mode (deceleration when a lean mixture should be indicated).
- Inactive sensor (output steady at approx. 438 mV).

If the oxygen sensor pigtail wiring, connector or terminal are damaged, the entire oxygen sensor assembly must be replaced. DO NOT attempt to repair the wiring, connector or terminals. In order for the sensor to function properly, it must have clean reference air provided to it. This clean air reference is obtained by way of the oxygen sensor wire(s). Any attempt to repair the wires, connector or terminals could result in the obstruction of the reference air and degrade oxygen sensor performance. Refer to *On-Vehicle Service, Heated Oxygen Sensors* in this section.

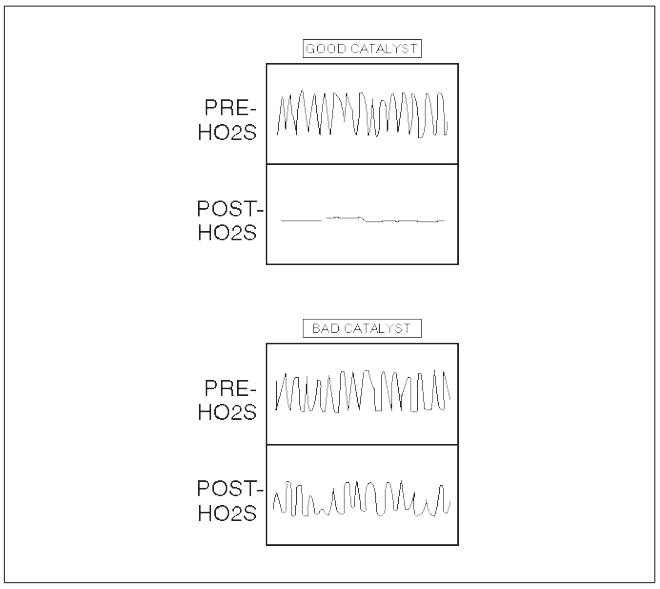
Fuel Control Heated Oxygen Sensor

The main function of the fuel control heated oxygen sensors is to provide the control module with exhaust stream oxygen content information to allow proper fueling and maintain emissions within mandated levels. After it reaches operating temperature, the sensor will generate a voltage, inversely proportional to the amount of oxygen present in the exhaust gases. The control module uses the signal voltage from the fuel control heated oxygen sensors while in closed loop to adjust fuel injector pulse width. While in closed loop, the PCM can adjust fuel delivery to maintain an air/fuel ratio which allows the best combination of emission control and driveability. The fuel control heated oxygen sensors are also used to determine catalyst efficiency.

HO2S Heater

Heated oxygen sensors are used to minimize the amount of time required for closed loop fuel control to begin operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors (Bank 1 HO2S 1 and Bank2 HO2S 1) to become active. Oxygen sensor heaters are required by catalyst monitor and sensor (Bank 1 HO2S 2 and Bank 2 HO2S 2) to maintain a sufficiently high temperature which allows accurate exhaust oxygen content readings further away from the engine.

Catalyst Monitor Heated Oxygen Sensors and Diagnostic Operation



TS24067

To control emissions of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx), a three-way catalytic converter is used. The catalyst within the converter promotes a chemical reaction which oxidizes the HC and CO present in the exhaust gas, converting them into harmless water vapor and carbon dioxide. The catalyst also reduces NOx, converting it to nitrogen. The PCM has the ability to monitor this process using the pre-catalyst and post-catalyst heated oxygen sensors. The pre-catalyst sensor produces an output signal which indicates the amount of oxygen present in the exhaust gas entering the three-way catalytic converter. The post-catalyst sensor produces an output signal which indicates the oxygen storage capacity of the catalyst; this in turn indicates the catalyst's ability to convert exhaust gases efficiently. If the catalyst is operating efficiently, the pre-catalyst signal will be far more active than that produced by the post-catalyst sensor.

In addition to catalyst monitoring, the heated oxygen sensors have a limited role in controlling fuel delivery. If the sensor signal indicates a high or low oxygen content for an extended period of time while in closed loop, the PCM will adjust the fuel delivery slightly to compensate.

- For the 3.5L w/automatic transmission, the pre-catalyst sensors are designated Bank 1 HO2S 1 and Bank 2 HO2S 1. The post-catalyst sensors are Bank 1 HO2S 2 and Bank 2 HO2S 2.

Catalyst Monitor Outputs

The catalyst monitor diagnostic is sensitive to the following conditions:

- Exhaust leaks
- HO2S contamination
- Alternate fuels

Exhaust system leaks may cause the following:

- Preventing a degraded catalyst from failing the diagnostic.
- Causing a false failure for a normally functioning catalyst.
- Preventing the diagnostic from running.

Some of the contaminants that may be encountered are phosphorus, lead, silica, and sulfur. The presence of these contaminants will prevent the TWC diagnostic from functioning properly.

Three-Way Catalyst Oxygen Storage Capacity

The Three-Way catalyst (TWC) must be monitored for efficiency. To accomplish this, the control module monitors the pre-catalyst HO2S and post-catalyst HO2S oxygen sensors. When the TWC is operating properly, the post-catalyst oxygen sensor will have significantly less activity than the pre-catalyst oxygen sensor. The TWC stores and releases oxygen as needed during its normal reduction and oxidation process. The control module will calculate the oxygen storage capacity using the difference between the pre-catalyst and post catalyst oxygen sensor's voltage levels. If the activity of the post-catalyst oxygen sensor approaches that of the pre-catalyst oxygen sensor, the catalyst's efficiency is degraded.

Stepped or staged testing level allow the control module to statistically filter test information. This prevents falsely passing or falsely failing the oxygen storage capacity test. The calculations performed by the on-board diagnostic system are very complex. For this reason, post catalyst oxygen sensor activity should not be used to determine oxygen storage capacity unless directed by the service manual.

Two stages are used to monitor catalyst efficiency. Failure of the first stage will indicate that the catalyst requires further testing to determine catalyst efficiency. The seconds stage then looks at the inputs for the pre and post catalyst HO2S sensors more closely before determining if the catalyst is indeed degraded. This further statistical processing is done to increase the accuracy of oxygen storage capacity type monitoring. Failing the first (stage 1) test DOES NOT indicate a failed catalyst. The catalyst may be marginal or the fuel sulfur content could be very high.

Aftermarket HO2S characteristics may be different from the original equipment manufacturer sensor. This may lead to a false pass or a false fail of the catalyst monitor diagnostic. Similarly, if an aftermarket catalyst does not contain the same amount of cerium as the original part, the correlation between oxygen storage and conversion efficiency may be altered enough to set a false DTC.

Misfire Monitor Diagnostic Operation

Misfire Monitor Diagnostic Operation

Misfire is monitored as a function of the combustion quality (CQ) signals generated from the ignition current sense system. Combustion signals represent the degree of combustion in each cylinder. Misfire is detected when the combustion signal is below a predetermined value.

The misfire ratio is calculated once every 100 engine cycles. For example, on a 6-cylinder engine, 600 ignition plug sparks occur every 100 cycles and if a misfire occurs 12 times during that time, the misfire is $12/600 \times 100 = 2$ %.

Misfire Counters

Whenever a cylinder misfires, the misfire diagnostic counts the misfire and notes the crankshaft position at the time the misfire occurred. These "misfire counters" are basically a file on each engine cylinder. A current and a history misfire counter are maintained for each cylinder. The misfire current counters (Misfire Cur #1-6) indicate the number of firing events out of the last 100 cylinder firing events which were misfires. The misfire current counter will display real time data without a misfire DTC stored. The misfire history counters (Misfire Hist #1-6) indicate the total number of cylinder firing events which were misfires. The misfire history counters will display 0 until the misfire diagnostic has failed and a DTC P0300 is set. Once the misfire DTC P0300 is set, the misfire history counters will be updated every 100 cylinder firing events. A misfire counter is maintained for each cylinder. If the misfire diagnostic reports a failure, the diagnostic executive reviews all of the misfire counters before reporting DTC. This way, the diagnostic executive reports the most current information.

When crankshaft rotation is erratic, a misfire condition will be detected. Because of this erratic condition, the data that is collected by the diagnostic can sometimes incorrectly identify which cylinder is misfiring. Misfires are counted from more than one cylinder. Cylinder #1 has the majority of counted misfires. In this case, the Misfire Counters would identify cylinder #1 as the misfiring cylinder. The misfires in the other counters were just background noise caused by the erratic misfire rotation of the crankshaft. If the number of accumulated misfires is sufficient for the diagnostic to identify a true misfire, the diagnostic will set DTC P0300 – Misfire Detected.

Use diagnostic equipment to monitor misfire counter data on OBD II-compliant vehicles. Knowing which specific cylinder(s) misfired can lead to the root cause, even when dealing with a multiple cylinder misfire. Using the information in the misfire counters, identify which cylinders are misfiring. If the counter indicate cylinders

numbers 1 and 4 misfired, look for a circuit or component common to both cylinders number 1 and 4.
Misfire counter information is located in the “Eng”. menu, “Misfire Data” sub-menu of the data list.
The misfire diagnostic may indicate a fault due to a temporary fault not necessarily caused by a vehicle emission system malfunction. Examples include the following items:

- Contaminated fuel
- Low fuel
- Fuel-fouled spark plugs
- Basic engine fault

Fuel Trim System Monitor Diagnostic Operation

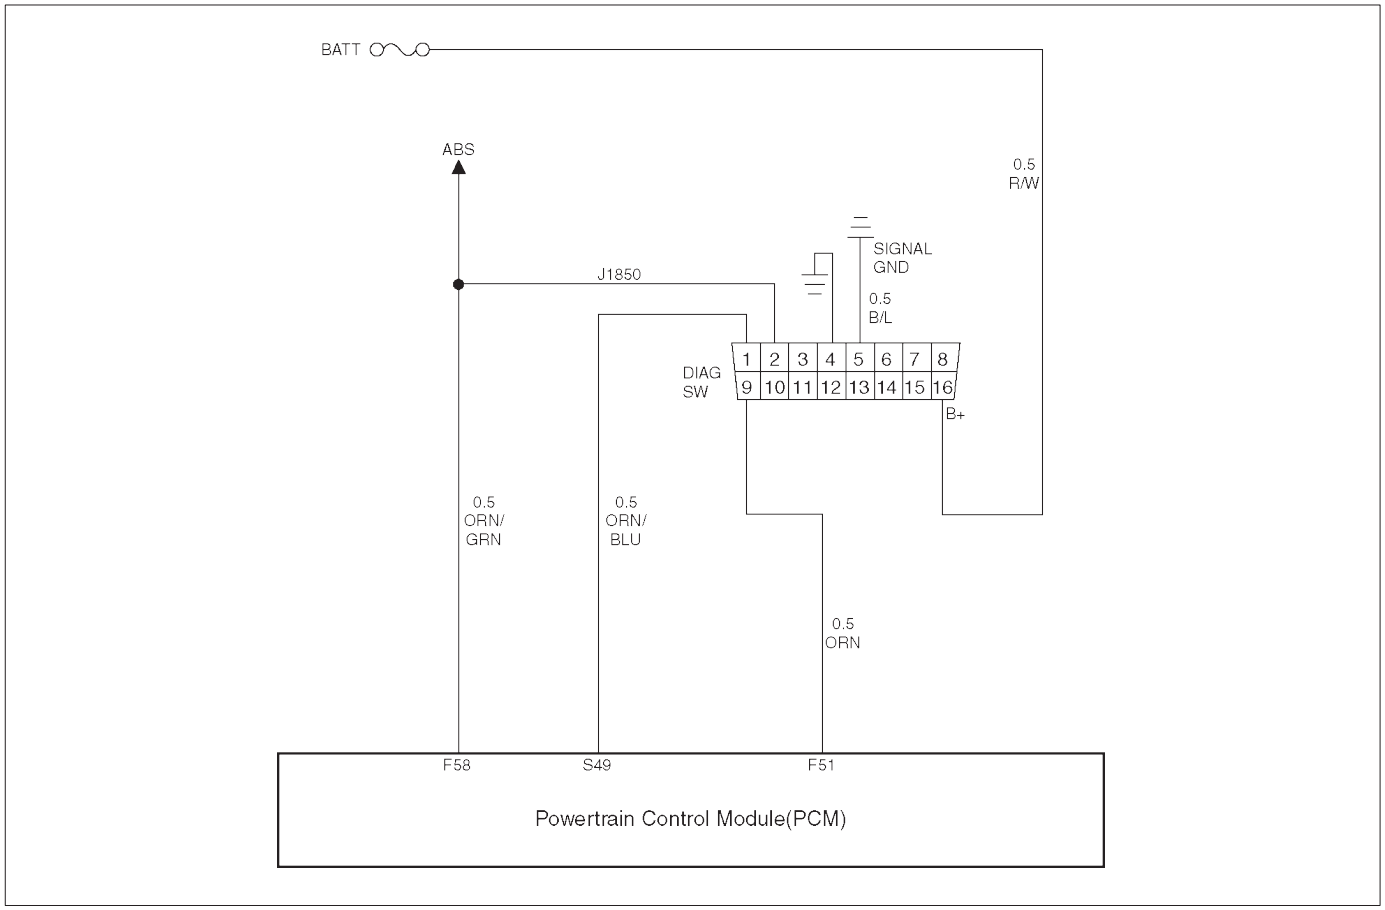
Fuel Trim System Monitor Diagnostic Operation

This system monitors the averages of short-term and long-term fuel trim values. If these fuel trim values stay at their limits for a calibrated period of time, a malfunction is indicated. The fuel trim diagnostic compares the averages of short-term fuel trim values and long-term fuel trim values to rich and lean thresholds. If either value is within the thresholds, a pass is recorded. If both values are outside their thresholds, a rich or lean DTC will be recorded.
The fuel trim system diagnostic also conducts an intrusive test. This test determines if a rich condition is being caused by excessive fuel vapor from the EVAP canister. In order to meet OBD II requirements, the control module uses weighted fuel trim cells to determine the need to set a fuel trim DTC. A fuel trim DTC can only be set if fuel trim counts in the weighted fuel trim cells exceed specifications. This means that the vehicle could have a fuel trim problem which is causing a problem under certain conditions (i.e., engine idle high due to a small vacuum leak or rough idle due to a large vacuum leak) while it operates fine at other times. No fuel trim DTC would set (although an engine idle speed DTC or HO2S DTC may set). Use the Tech 2 to observe fuel trim counts while the problem is occurring.
A fuel trim DTC may be triggered by a number of vehicle faults. Make use of all information available (other DTCs stored, rich or lean condition, etc.) when diagnosing a fuel trim fault.

Fuel Trim Cell Diagnostic Weights

No fuel trim DTC will set regardless of the fuel trim counts in cell 0 unless the fuel trim counts in the weighted cells are also outside specifications. This means that the vehicle could have a fuel trim problem which is causing a problem under certain conditions (i.e. engine idle high due to a small vacuum leak or rough due to a large vacuum leak) while it operates fine at other times. No fuel trim DTC would set (although an engine idle speed DTC or HO2S DTC may set). Use the Tech 2 to observe fuel trim counts while the problem is occurring.

On-Board Diagnostic (OBD II) System Check



D06RY00053

Circuit Description

The on-board diagnostic system check is the starting point for any driveability complaint diagnosis. Before using this procedure, perform a careful visual/physical check of the PCM and engine grounds for cleanliness and tightness.

The on-board diagnostic system check is an organized approach to identifying a problem created by an electronic engine control system malfunction.

Diagnostic Aids

An intermittent may be caused by a poor connection, rubbed–through wire insulation or a wire broken inside the insulation. Check for poor connections or a damaged harness. Inspect the PCM harness and connector for improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart:

1.The MIL (“Check Engine lamp”) should be “ON” steady with the ignition “ON ” and the engine “OFF”. If not, the “No MIL” chart should be used to isolate the malfunction.

2.The RPL (“Reduced Power lamp”) should be “ON” steady with the ignition “ON ”and the engine “OFF”. If not, the “No RPL”chart should be used to isolate the malfunction.

3.Checks the Class 2 data circuit and ensures that the PCM is able to transmit serial data.

4.This test ensures that the PCM is capable of controlling the MIL (“Check Engine lamp”) and the MIL (“Check Engine lamp”) driver circuit is not shorted to ground.

5.This test ensures that the PCM is capable of controlling the RPL (“Reduced Power lamp”) and the RPL (“Reduced Power lamp”) driver circuit is not shorted to ground.

7.Check the DTCs (System ,Volts Supply circuit).

8.Check the DTCs (PCM{Software} detect Errors).

11.If the engine will not start, the Cranks But Will Not Run chart should be used to diagnose the condition.

14.A Tech 2 parameter which is not within the typical range may help to isolate the area which is causing the problem.

15.This vehicle is equipped with a PCM which utilizes an electrically erasable programmable read only memory (EEPROM). When the PCM is replaced, the new PCM must be programmed. Refer to *PCM Replacement and Programming Procedures in Powertrain Control Module (PCM) and Sensors* of this section.

10. If the starter motor will not start, the starter control system chart should be used to diagnose the condition.


On-Board Diagnostic (OBD II) System Check

Step	Action	Value(s)	Yes	No
1	1. Ignition “ON”, engine “OFF”. 2. Observe the malfunction indicator lamp (MIL or “Check Engine lamp”). Is the MIL (“Check Engine lamp”)“ON”?	—	Go to *Step 2*	Go to *No MIL(“Check Engine lamp”)*
2	1. Ignition “ON”, engine “OFF”. 2. Observe the “Reduced Power lamp”. Is the RPL (“Reduced Power lamp”) “ON”?	—	Go to *Step 3*	Go to *No RPL(“Reduce d Power lamp”)*
3	1. Ignition “OFF”. 2. Install Tech 2. 3. Ignition “ON”. 4. Attempt to display PCM engine data with the Tech 2. Does the Tech 2 display PCM data?	—	Go to *Step 4*	Go to *Step 12*
4	1. Using the Tech 2 output tests function, select MIL (“Check Engine lamp”) control and command the MIL (“Check Engine Lamp”) “OFF”. 2. Observe the MIL (“Check Engine lamp”). Did the MIL (“Check Engine lamp”) turn “OFF”?	—	Go to *Step 5*	Go to *MIL(“Check Engine lamp”) On Steady*
5	1. Using the Tech 2 output tests function, select MIL (“Check Engine lamp”) control and command the RPL (“Reduced Power lamp”) “OFF”. 2. Observe the RPL (“Reduced Power lamp”). Did the MIL (“Reduced Power lamp”) turn “OFF”?	—	Go to *Step 6*	Go to *RPL(“Reduce d Power lamp”) On Steady*
6	Select “Display DTCs” with the Tech 2. Are any DTCs stored?	—	Go to *Step 7*	Go to *Step 11*
7	Stored DTCs. P0562, P0563, P0601, P0602, P0604, P0606, P1625, P1635, P1639, P1640, P1650 Are the applicable DTCs stored?	—	Go to *applicable DTC table*	Go to *Step 8*
8	Stored DTCs. P1514, P1515, P1516, P1523, P1125, P1290, P1295, P1299 Are the applicable DTCs stored?	—	Go to *applicable DTC table*	Go to *Step 9*
9	Stored DTCs. 1. P0425, P0106, P0107, P1107, P0401, P1404, P0405, P1120, P1221, P1515, P1516, P1275, P1635, P1271, P1273, P1285, P1272 2. P0336, P0337, P1220, P1515, P1221, P1516, P1280, P1639, P1271, P1272 Are the applicable DTCs stored?	—	Go to *“Multiple PCM Information sensor DTCs Set”*	Go to *Step 10*
10	Attempt to crank the starter motor Did the starter motor crank?	—	Go to *Step 10*	Go to *Starter control system*
11	Attempt to start the engine. Did the engine start and continue to run?	—	Go to *Step 6*	Go to *Cranks But Will Not Run*

On-Board Diagnostic (OBD II) System Check (Cont'd)

Step	Action	Value(s)	Yes	No
12	Compare PCM data values displayed on the Tech 2 to the typical engine scan data values. Are the displayed values normal or close to the typical values?	—	Go to *Symptom*	Refer to *indicated Component System Checks*
13	1. Ignition "OFF", disconnect the PCM. 2. Ignition "ON", engine "OFF". 3. Check the Class 2 data circuit for an open, short to ground, or short to voltage. Also, check the DLC ignition feed circuit for an open or short to ground and the DLC ground circuit for an open. 4. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 2*	Go to *Step 14*
14	1. Attempt to reprogram the PCM. Refer to *Powertrain Control Module (PCM) in On-Vehicle Service.* 2. Attempt to display PCM data with the Tech 2. Does the Tech 2 display PCM engine data?	—	Go to *Step 2*	Go to *Step 15*
15	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Go to *Step 2*	—

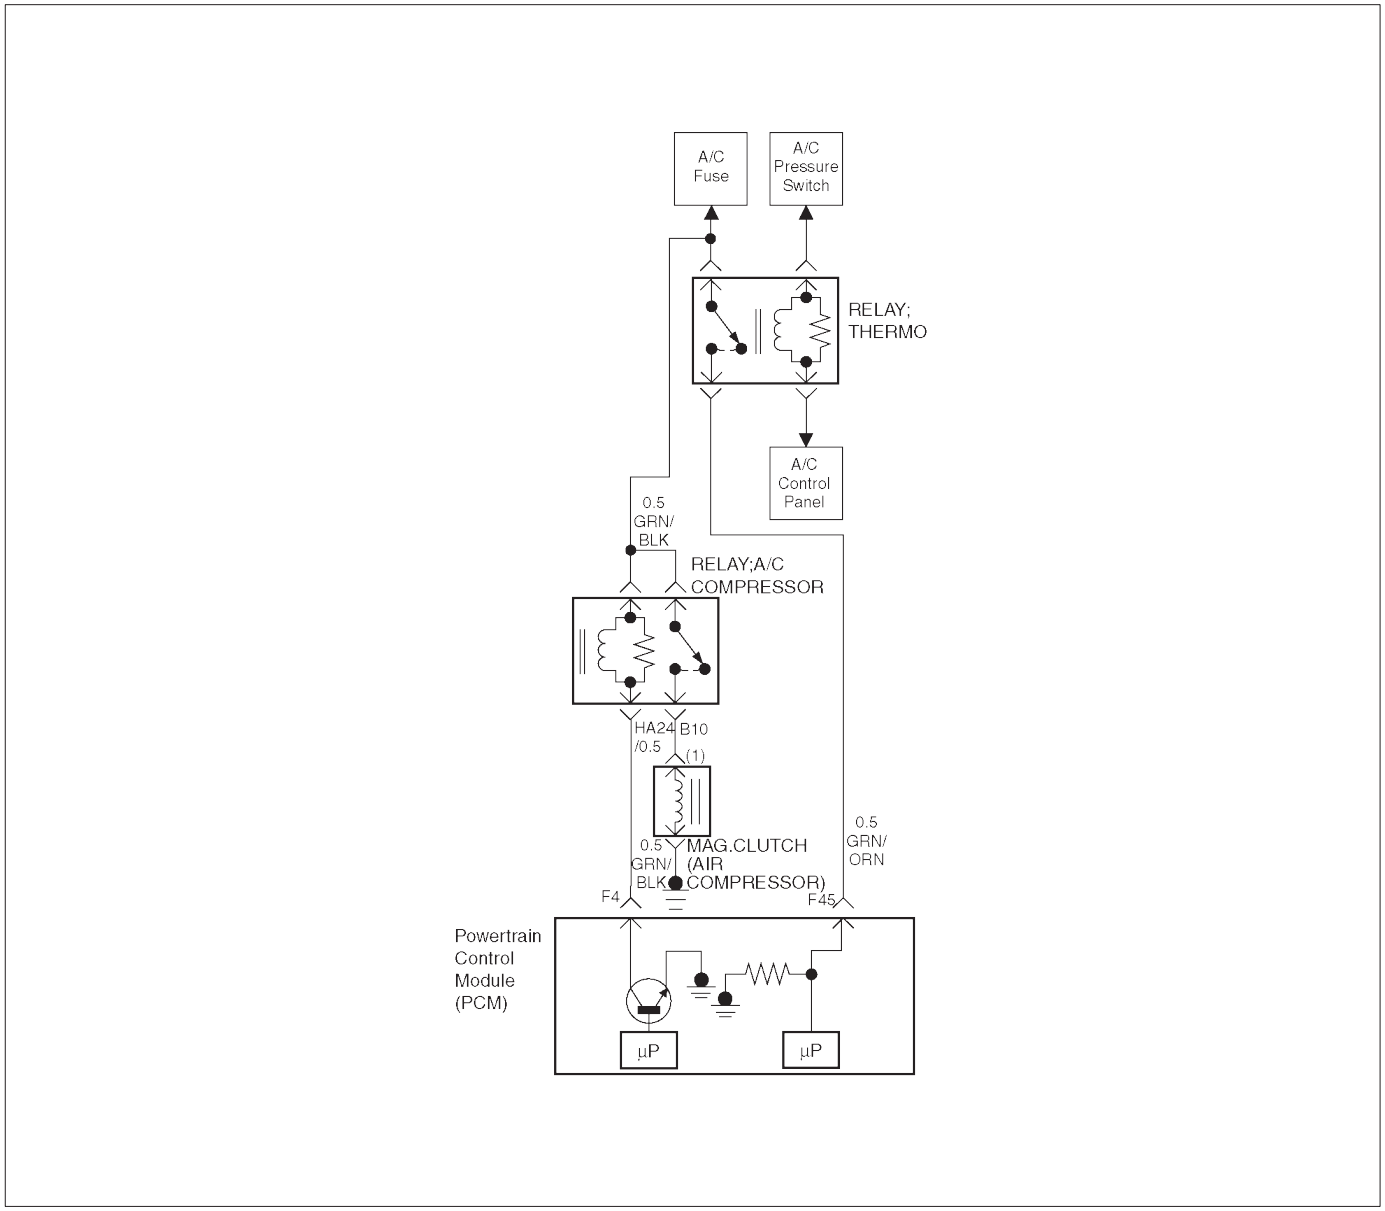A/C Clutch Control Circuit Diagnosis



D06RY00159

Circuit Description

When air conditioning and blower fan are selected, and if the system has a sufficient refrigerant charge, a 12-volt signal is supplied to the A/C request input of the powertrain control module (PCM). The A/C request signal may be temporarily canceled during system operation by the electronic thermostat in the evaporator case. When the A/C request signal is received by the PCM, the PCM supplies a ground from the compressor clutch relay if the engine operating conditions are within acceptable ranges. With the A/C compressor relay energized, voltage is supplied to the compressor clutch coil.

The PCM will enable the compressor clutch to engage whenever A/C has been selected with the engine running, unless any of the following conditions are present:

- The throttle is greater than 90%.
- The ignition voltage is below 10.5 volts.
- The engine speed is greater than 4500 RPM for 5 seconds or 5400 RPM.
- The engine coolant temperature (ECT) is greater than 125 ˚C (257 ˚F).
- The intake air temperature (IAT) is less than 5˚C (41˚F).
- The power steering pressure switch signals a high pressure condition.

Diagnostic Aids

To diagnose an the intermittent fault, check for following conditions:

- Poor connection at the PCM–Inspect connections for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness–Inspect the wiring harness for damage. If the harness appears to OK, observe the A/C clutch while moving connectors and wiring harnesses related to the A/C. A sudden clutch malfunction will indicate the source of the intermittent fault.

A/C Clutch Diagnosis

This chart should be used for diagnosing the electrical portion of the A/C compressor clutch circuit. A Tech 2 will be used in diagnosing the system. The Tech 2 has the ability to read the A/C request input to the PCM. The Tech 2 can display when the PCM has commanded the A/C clutch "ON". The Tech 2 should have the ability to override the A/C request signal and energize the A/C compressor relay.

Test Description

IMPORTANT: Do not engage the A/C compressor clutch with the engine running if an A/C mode is not selected at the A/C control switch.

The numbers below refer to the step numbers on the Diagnostic Chart:

3. This a test determine is the problem is with the refrigerant system. If the switch is open, A/C pressure gauges will be used to determine if the pressure switch is faulty or if the system is partially discharged or empty.
4. Although the normal complaint will be the A/C clutch failing to engage, it is possible for a short circuit to cause the clutch to run when A/C has not been selected. This step is a test for that condition.
7. There is an extremely low probability that both relays will fail at the same time, so the substitution process is one way to check the A/C Thermostat relay. Use a known good relay to do a substitution check.

A/C Clutch Control Circuit Diagnosis

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any other DTCs stored?	—	Go to the other DTC chart(s) first	Go to *Step 3*
3	1. Disconnect the electrical connector at the pressure switch located on the receiver/drier. 2. Use an ohmmeter to check continuity across the pressure switch. Is the pressure switch open?	—	Go to Air *Conditioning* to diagnose the cause of the open pressure switch	Go to *Step 4*
4	**IMPORTANT:** Before continuing with the diagnosis, the following conditions must be met: • The intake air temperature must be greater than 15˚C. (60˚F). • The engine coolant temperature must be less than 119˚C (246˚F). 1. A/C "OFF". 2. Start the engine and idle for 1 minute. 3. Observe the A/C compressor. Is the A/C compressor clutch engaged even though A/C has not been requested?	—	Go to *Step 37*	Go to *Step 5*
5	1. Idle the engine. 2. A/C "ON". 3. Blower "ON". 4. Observe the A/C compressor. Is the A/C compressor magnetic clutch engaged?	—	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 6*
6	1. Engine idling. 2. A/C "ON". 3. Blower "ON". 4. Observe the "A/C Request" display on the Tech 2. (Refer to the Miscellaneous test) Does the tool "A/C Request" display indicate "Yes"?	—	Go to *Step 26*	Go to *Step 7*

A/C Clutch Control Circuit Diagnosis (Cont'd)

Step	Action	Value(s)	Yes	No
7	Temporarily substitute the A/C compressor relay in place of the A/C thermostat relay, then repeat Step 5. Did the "A/C Request" display indicate "Yes"?	—	Go to *Step 8*	Go to *Step 9*
8	Replace the original A/C thermostat relay. Is the action complete?	—	Verify repair	—
9	Does the blower operate?	—	Go to *Step 10*	Go to *Step 11*
10	Repair the blower. Is the action complete?	—	Verify repair	—
11	Check for a faulty 10A A/C fuse in the underdash fuse panel. Was the 10A fuse OK?	—	Go to *Step 13*	Go to *Step 12*
12	Check for short circuit and make repairs if necessary. Replace the 10A A/C fuse. Is the action complete?	—	Verify repair	—
13	1. Remove the glove box to gain access to the A/C thermostat. 2. Disconnect the thermostat connector. 3. Attach a fused jumper between ground and the thermostat wire. 4. A/C "ON". 5. Blower "ON". Dose A/C request indicate "YES" on the Tech 2?	—	Go to *Step 14*	Go to *Step 17*
14	1. Ignition "ON". 2. Use a DVM to check voltage at the electronic A/C thermostat. Was voltage equal to the specified value?	B+	Go to *Step 17*	Go to *Step 15*
15	Check for open wire between the thermostat and the A/C switch. Was the wire open?	—	Go to *Step 16*	Go to *Step 17*
16	Repair the open wire between the thermostat and the A/C switch. Is the action complete?	—	Verify repair	—
17	Check for an open circuit between A/C thermostat relay and PCM A/C request terminal (F45). Was there an open circuit?	—	Go to *Step 18*	Go to *Step 19*
18	Repair the open circuit between the PCM and A/C thermostat relay. Is the action complete?	—	Verify repair	—
19	1. Ignition "ON". 2. Use a DVM to check voltage at the A/C pressure switch. Was voltage equal to the specified value?	B+	Go to *Step 21*	Go to *Step 20*
20	Repair the open circuit between the 10A A/C fuse and the pressure switch. Is the action complete?	—	Verify repair	—

A/C Clutch Control Circuit Diagnosis (Cont'd)

Step	Action	Value(s)	Yes	No
21	Use an ohmmeter to check continuity between the pressure switch and the A/C thermostat relay. Was the circuit open?	—	Go to *Step 22*	Go to *Step 23*
22	Repair the open circuit between the pressure switch and the A/C thermostat relay. Is the action complete?	—	Verify repair	—
23	Check for damaged pin or terminal at F45 of the PCM. Was a damaged pin or terminal found?	—	Go to *Step 24*	Go to *Step 25*
24	Repair the damaged pin or terminal. Is the action complete?	—	Verify repair	—
25	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
26	1. Remove the A/C compressor relay. 2. Ignition "ON". 3. Use a DVM to check voltage at both of the wires at the A/C compressor relay socket. Is the voltage equal to the specified value?	B+	Go to *Step 28*	Go to *Step 27*
27	Repair the faulty wire between the A/C fuse and the A/C compressor relay . Is the action complete?	—	Verify repair	—
28	1. A/C compressor relay removed. 2. Engine idling. 3. A/C "ON". 4. Blower "ON". 5. Use a DVM to measure voltage between the wire at the A/C compressor relay socket and battery±. Did the DVM indicate the specified value?	B+	Go to *Step 32*	Go to *Step 29*
29	Check for an open wire between PCM terminal F4 and the A/C compressor relay. Was the wire open?	—	Go to *Step 30*	Go to *Step 31*
30	Repair the open wire between the PCM and the A/C compressor relay. Is the action complete?	—	Verify repair	—
31	Check for a damaged pin or terminal at F4 of the PCM. Was a damaged pin or a terminal found?	—	Go to *Step 24*	Go to *Step 25*

A/C Clutch Control Circuit Diagnosis (Cont'd)

Step	Action	Value(s)	Yes	No
32	1. A/C compressor relay removed. 2. Connect a fused jumper at the A/C compressor relay socket with either wire. 3. Engine idling. 4. A/C "ON". 5. Blower "ON". Did the compressor magnetic clutch engage?	—	Go to *Step 33*	Go to *Step 34*
33	Repair the A/C compressor relay. Is the action complete?	—	Verify repair	—
34	Check for an open circuit between the A/C compressor relay and the A/C clutch. Was an open circuit found?	—	Go to *Step 35*	Go to *Step 36*
35	Repair the open circuit between the compressor Clutch and the A/C compressor relay. Is the action complete?	—	Verify repair	—
36	Service the compressor clutch or replace the compressor due to a faulty internal overheat switch. Is the action complete?	—	Verify repair	—
37	1. Remove the A/C compressor relay. 2. Idle the engine. Is the compressor clutch still engaged when A/C is not selected?	—	Go to *Step 38*	Go to *Step 39*
38	Repair the short to voltage between the A/C clutch and A/C compressor relay. Is the action complete?	—	Verify repair	—
39	1. Reinstall the A/C compressor relay. 2. Remove the A/C thermostat relay. 3. Engine idling. Is the compressor clutch still engaged when A/C is not selected?	—	Go to *Step 40*	Go to *Step 42*
40	Use a DVM to check for a short to ground between the A/C compressor relay and F4 of the PCM. Was a short detected?	—	Go to *Step 41*	Go to *Step 25*
41	Repair the short to ground between the PCM and A/C compressor relay. Is the action complete?	—	Verify repair	—
42	Repair the short to ground between the A/C thermostat relay and the electronic thermostat. Is the action complete?	—	Verify repair	—

Electronic Ignition System Diagnosis

If the engine cranks but will not run or immediately stalls, the Engine Cranks But Will Not Start chart must be used to determine if the failure is in the ignition system or the fuel system. If DTC P0300 through P0306, P0341, or P0336 is set, the appropriate diagnostic trouble code chart must be used for diagnosis.
If a misfire is being experienced with no DTC set, refer to the *Symptoms* section for diagnosis.

EVAP Canister Purge Solenoid and EVAP Vent Solenoid Valve

A continuous purge condition with no purge commanded by the PCM will set a DTC P1441. Refer to the DTC charts for further information.

Visual Check of The Evaporative Emission Canister

- If the canister is cracked or damaged, replace the canister.
- If fuel is leaking from the canister, replace the canister and check hoses and hose routing.

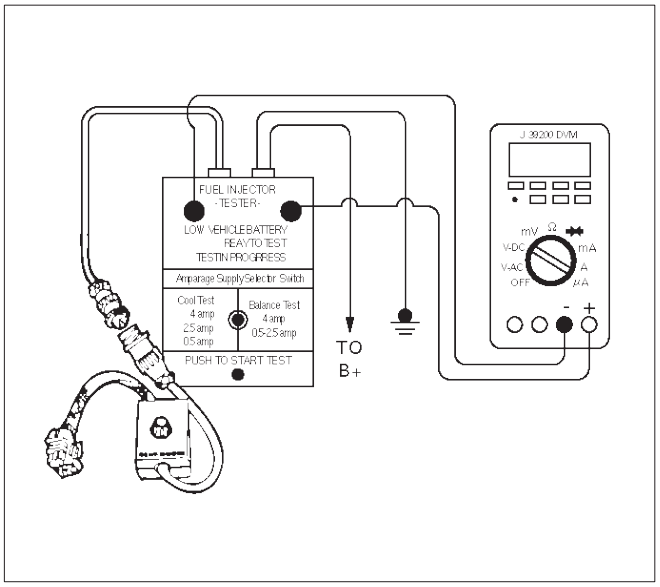
Fuel Metering System Check

Some failures of the fuel metering system will result in an "Engine Cranks But Will Not Run" symptom. If this condition exists, refer to the *Cranks But Will Not Run* chart. This chart will determine if the problem is caused by the ignition system, the PCM, or the fuel pump electrical circuit.
Refer to *Fuel System Electrical Test* for the fuel system wiring schematic.
If there is a fuel delivery problem, refer to *Fuel System Diagnosis*, which diagnoses the fuel injectors, the fuel pressure regulator, and the fuel pump. If a malfunction occurs in the fuel metering system, it usually results in either a rich HO2S signal or a lean HO2S signal. This condition is indicated by the HO2S voltage, which causes the PCM to change the fuel calculation (fuel injector pulse width) based on the HO2S reading. Changes made to the fuel calculation will be indicated by a change in the long term fuel trim values which can be monitored with a Tech 2. Ideal long term fuel trim values are around 0%; for a lean HO2S signal, the PCM will add fuel, resulting in a fuel trim value above 0%. Some variations in fuel trim values are normal because all engines are not exactly the same. If the evaporative emission canister purge is "ON", the fuel trim may be as low as –38%. If the fuel trim values are greater than +23%, refer to *DTC P0131, DTC P0151, DTC P0171, and DTC 1171* for items which can cause a lean HO2S signal.

Fuel System Pressure Test

A fuel system pressure test is part of several of the diagnostic charts and symptom checks. To perform this test, refer to *Fuel Systems Diagnosis.*

Fuel Injector Coil Test Procedure and Fuel Injector Balance Test Procedure



T32003

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart:

2. Relieve the fuel pressure by connecting the J 34730-1 Fuel Pressure Gauge to the fuel pressure connection on the fuel rail.

CAUTION: In order to reduce the risk of fire and personal injury, wrap a shop towel around the fuel pressure connection. The towel will absorb any fuel leakage that occurs during the connection of the fuel pressure gauge. Place the towel in an approved container when the connection of the fuel pressure gauge is complete.

Place the fuel pressure gauge bleed hose in an approved gasoline container.

With the ignition switch "OFF", open the valve on the fuel pressure gauge.

3. Record the lowest voltage displayed by the DVM after the first second of the test. (During the first second, voltage displayed by the DVM may be inaccurate due to the initial current surge.)

Injector Specifications:

Resistance (Ohms)	Voltage Specification at 10˚C-35˚C (50˚F-95˚F)
11.8 – 12.6	5.7 – 6.6

- The voltage displayed by the DVM should be within the specified range.
- The voltage displayed by the DVM may increase throughout the test as the fuel injector windings warm and the resistance of the fuel injector windings changes.


- An erratic voltage reading (large fluctuations in voltage that do not stabilize) indicates an intermittent connection within the fuel injector.

5. Injector Specifications:

Highest Acceptable Voltage Reading Above/Below 35˚C/10˚C (95˚F/50˚F)	Acceptable Subtracted Value
9.5 Volts	0.6 Volts

7. The Fuel Injector Balance Test portion of this chart (Step 7 through Step 11) checks the mechanical (fuel delivery) portion of the fuel injector. An engine cool-down period of 10 minutes is necessary in order to avoid irregular fuel pressure readings due to “Hot Soak” fuel boiling.

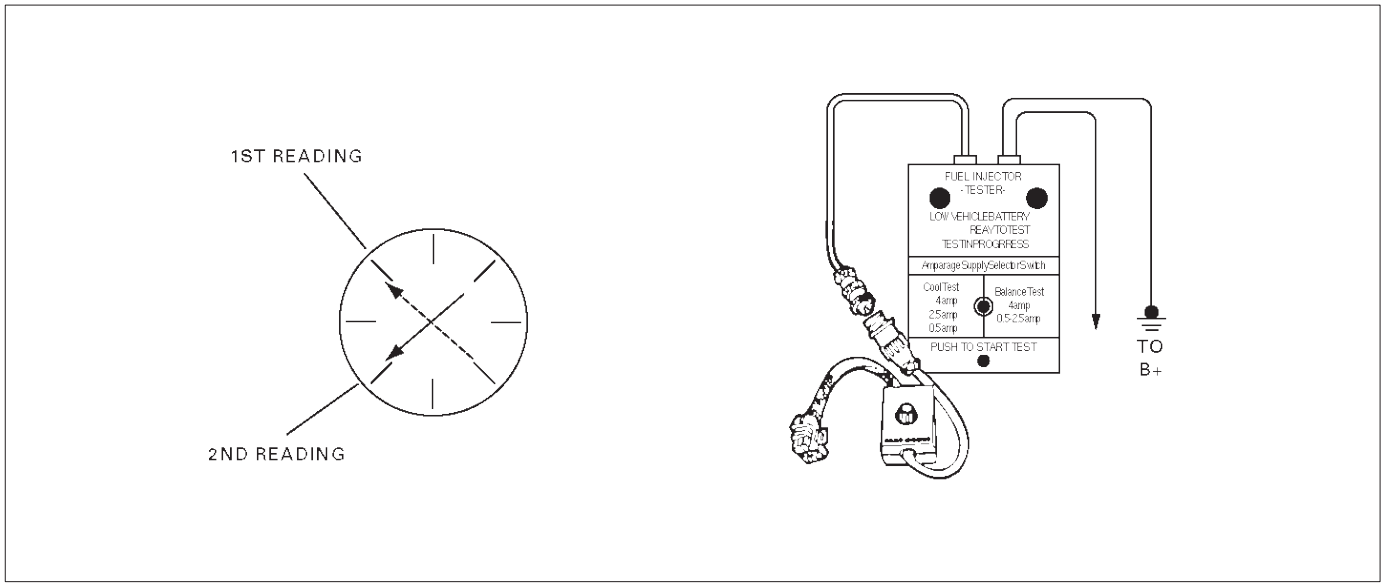Injector Coil Test Procedure (Steps 1-6) and Injector Balance Test Procedure (Steps 7-11)



R262001

CYLINDER	1	2	3	4	5	6
1st Reading (1)	296 kPa (43 psi)	296 kPa (43 psi)	296 kPa (43 psi)	296 kPa (43 psi)	296 kPa (43 psi)	296 kPa (43 psi)
2nd Reading (2)	131 kPa (19 psi)	117 kPa (17 psi)	124 kPa (18 psi)	145 kPa (21 psi)	131 kPa (19 psi)	130 kPa (19 psi)
Amount of Drop (1st Reading–2nd Reading)	165 kPa (24 psi)	179 kPa (26 psi)	172 kPa (25 psi)	151 kPa (22 psi)	165 kPa (24 psi)	166 kPa (24 psi)
Av.drop = 166 kPa/24 psi ± 10 kPa/1.5 psi = 156 – 176 kPa or 22.5 – 25.5 psi	OK	Faulty, Rich (Too Much Fuel Drop)	OK	Faulty, Lean (Too Little Fuel Drop)	OK	OK

NOTE: These figures are examples only.

Injector Coil Test Procedure (Steps 1-6) and Injector Balance Test Procedure (Steps 7-11)

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to Step 2	Go to *OBD System Check*
2	1. Turn the engine “OFF”. NOTE: In order to prevent flooding of a single cylinder and possible engine damage, relieve the fuel pressure before performing the fuel injector coil test procedure. 2. Relieve the fuel pressure. Refer to *Test Description Number 2.* 3. Connect the J 39021-5V Fuel Injector Tester to B+ and ground, and to the J 39021-90 Injector Switch Box. 4. Connect the injector switch box to the grey fuel injector harness connector located on the front of the EVAP canister bracket. 5. Set the amperage supply selector switch on the fuel injector tester to the “Coil Test” 0.5 amp position. 6. Connect the leads from the J 39200 Digital Voltmeter (DVM) to the injector tester. Refer to the illustrations associated with the test description. 7. Set the DVM to the tenths scale (0.0). 8. Observe the engine coolant temperature. Is the engine coolant temperature within the specified values?	10˚C (50˚F) to 35˚C (95˚F)	Go to *Step 3*	Go to *Step 5*
3	1. Set injector switch box injector #1. 2. Press the “Push to Start Test” button on the fuel injector tester. 3. Observe the voltage reading on the DVM. **IMPORTANT:** The voltage reading may rise during the test. 4. Record the lowest voltage observed after the first second of the test. 5. Set the injector switch box to the next injector and repeat steps 2, 3, and 4. Did any fuel injector have an erratic voltage reading (large fluctuations in voltage that did not stabilize) or a voltage reading outside of the specified values?	5.7-6.6 V	Go to *Step 4*	Go to *Step 7*
4	Replace the faulty fuel injector(s). Refer to *Fuel Injector.* Is the action complete?	—	Go to *Step 7*	—

Injector Coil Test Procedure (Steps 1-6) and Injector Balance Test Procedure (Steps 7-11) (Cont'd)

Step	Action	Value(s)	Yes	No
5	1. Set injector switch box injector #1. 2. Press the "Push to Start Test" button on the fuel injector tester. 3. Observe the voltage reading on the DVM. **IMPORTANT:** The voltage reading may rise during the test. 4. Record the lowest voltage observed after the first second of the test. 5. Set the injector switch box to the next injector and repeat steps 2, 3, and 4. Did any fuel injector have an erratic voltage reading (large fluctuations in voltage that did not stabilize) or a voltage reading above the specified value?	9.5 V	Go to *Step 4*	Go to *Step 6*
6	1. Identify the highest voltage reading recorded (other than those above 9.5 V). 2. Subtract the voltage reading of each injector from the highest voltage selected in step 1. Repeat until you have a subtracted value for each injector. For any injector, is the subtracted Value in step 2 greater than the specified value?	0.6 V	Go to *Step 4*	Go to *Step 7*
7	**CAUTION: In order to reduce the risk of fire and personal injury, wrap a shop towel around the fuel pressure connection. The towel will absorb any fuel leakage that occurs during the connection of the fuel pressure gauge. Place the towel in an approved container when the connection of the fuel pressure gauge is complete.** 1. Connect the J 34730-1 Fuel Pressure Gauge to the fuel pressure test port. 2. Energize the fuel pump using the Tech 2. 3. Place the bleed hose of the fuel pressure gauge into an approved gasoline container. 4. Bleed the air out of the fuel pressure gauge. 5. With the fuel pump running, observe the reading on the fuel pressure gauge. Is the fuel pressure within the specified values?	296-376 kPa (43-55 psi)	Go to *Step 8*	Go to *Fuel System Diagnosis*
8	Turn the fuel pump "OFF". Does the fuel pressure remain constant?	—	Go to *Step 9*	Go to *Fuel System Diagnosis*

Injector Coil Test Procedure (Steps 1-6) and Injector Balance Test Procedure (Steps 7-11) (Cont'd)

Step	Action	Value(s)	Yes	No
9	1. Connect the J 39021-5V Fuel Injector Tester and J 39021-90 Injector Switch Box the fuel injector harness connector. 2. Set the amperage supply selector switch on the fuel injector tester to the "Balance Test" 0.5–2.5 amp position. 3. Using the Tech 2 turn the fuel pump "ON" then "OFF" in order to pressurize the fuel system. 4. Record the fuel pressure indicated by the fuel pressure gauge after the fuel pressure stabilizes. This is the first pressure reading. 5. Energize the fuel injector by depressing the "Push to Start Test" button on the fuel injector tester. 6. Record the fuel pressure indicated by the fuel pressure gauge after the fuel pressure gauge needle has stopped moving. This is the second pressure reading. 7. Repeat steps 1 through 6 for each fuel injector. 8. Subtract the second pressure reading from the first pressure reading for one fuel injector. The result is the pressure drop value. 9. Obtain a pressure drop value for each fuel injector. 10. Add all of the individual pressure drop values. This is the total pressure drop. 11. Divide the total pressure drop by the number of fuel injectors. This is the average pressure drop. Does any fuel injector have a pressure drop value that is either higher than the average pressure drop or lower than the average pressure drop by the specified value?	10 kPa (1.5 psi)	Go to *Step 10*	Go to *OBD System Check*
10	Re-test any fuel injector that does not meet the specification. Refer to the procedure in step 9. NOTE: Do not repeat any portion of this test before running the engine in order to prevent the engine from flooding. Does any fuel injector still have a pressure drop value that is either higher than the average pressure drop or lower than the average pressure drop by the specified value?	10 kPa (1.5 psi)	Go to *Step 11*	Go to *Symptoms*
11	Replace the faulty fuel injector(s). Refer to *Fuel Injector.* Is the action complete?	—	Verify repair	—

Powertrain Control Module (PCM) Diagnosis

To read and clear diagnostic trouble codes, use a Tech 2.

IMPORTANT: Use of a Tech 2 is recommended to clear diagnostic trouble codes from the PCM memory. Diagnostic trouble codes can also be cleared by turning the ignition “OFF” and disconnecting the battery power from the PCM for 30 seconds. Turning off the ignition and disconnecting the battery power from the PCM will cause all diagnostic information in the PCM memory to be cleared. Therefore, all the diagnostic tests will have to be re-run.

Since the PCM can have a failure which may affect only one circuit, following the diagnostic procedures in this section will determine which circuit has a problem and where it is.

If a diagnostic chart indicates that the PCM connections or the PCM is the cause of a problem, and the PCM is replaced, but this does not correct the problem, one of the following may be the reason:

- There is a problem with the PCM terminal connections. The terminals may have to be removed from the connector in order to check them properly.
- EEPROM program is not correct for the application. Incorrect components or reprogramming the PCM with the wrong EEPROM program may cause a malfunction and may or may not set a DTC.
- The problem is intermittent. This means that the problem is not present at the time the system is being checked. In this case, refer to the *Symptoms* portion of the manual and make a careful physical inspection of all component and wiring associated with the affected system.
- There is a shorted solenoid, relay coil, or harness. Solenoids and relays are turned “ON” and “OFF” by the PCM using internal electronic switches called drivers. A shorted solenoid, relay coil, or harness will not damage the PCM but will cause the solenoid or relay to be inoperative.

Multiple PCM Information Sensor DTCs Set

Circuit Description

The powertrain control module (PCM) monitors various sensors to determine the engine operating conditions.

The PCM controls fuel delivery, spark advance, transmission operation, and emission control device operation based on the sensor inputs.

The PCM provides a sensor ground to all of the sensors.

The PCM applies 5 volts through a pull–up resistor, and determines the status of the following sensors by monitoring the voltage present between the 5–volt supply and the resistor:

- The engine coolant temperature (ECT) sensor
- The intake air temperature (IAT) sensor
- The transmission fluid temperature (TFT) sensor

The PCM provides the following sensors with a 5–volt reference and a sensor ground signal:

1

- The exhaust gas recirculating (EGR) pintle position sensor
- The manifold absolute pressure (MAP) sensor
- The throttle position (TP) sensor 1
- The acceleration position (AP) sensor 1
- The acceleration position (AP) sensor 3
- The Vapor Pressure Sensor

2

- The Crank position (CKP) sensor
- The throttle position (TP) sensor 2
- The acceleration position (AP) sensor 2

The PCM monitors the separate feedback signals from these sensors in order to determine their operating status.

Diagnostic Aids

IMPORTANT: Be sure to inspect PCM and engine grounds for being secure and clean.

A short to voltage in one of the sensor input circuits may cause one or more of the following DTCs to be set:

- P0425
- P0108, P1106
- P0406
- P1120, P1515, P1221, P1516, P1635
- P1275, P1639, P1271, P1273
- P1285, P1272, P1273
- P0336, P0337
- P1220, P1515, P1221, P1515, P1516
- P1280, P1271, P1272

IMPORTANT: If a sensor input circuit has been shorted to voltage, ensure that the sensor is not damaged. A damaged sensor will continue to indicate a high or low voltage after the affected circuit has been repaired. If the sensor has been damaged, replace it.

An open in the sensor ground circuit between the PCM and the splice will cause one or more of the following DTCs to be set:

- P0425
- P0108, P1106
- P0406
- P1120, P1515, P1221, P1516, P1635
- P1275, P1639, P1271, P1273
- P1285, P1272, P1273
- P0336, P0337
- P1220, P1515, P1221, P1515, P1516
- P1280, P1271, P1272

A short to ground in the 5–volt reference A or B circuit will cause one or more of the following DTCs to be set:

- P0453
- P0106, P0107, P1107
- P0401, P1404, P0405
- P1120, P1515, P1221, P1516, P1635

- P1275, P1639, P1271, P1273
- P1285, P1272, P1273
- P0336, P0337
- P1220, P1515, P1221, P1515, P1516
- P1280, P1271, P1272

Check for the following conditions:

- **Poor connection at PCM.** Inspect the harness connectors for backed–out terminals, improper mating, broken locks, improperly formed or damage terminals, and a poor terminal–to–wire connection.
- **Damaged harness.** Inspect the wiring harness for damage. If the harness is not damaged, observe an affected sensor fs displayed value on the Tech 2 with the ignition “ON” and the engine “OFF” while you move the connectors and the wiring harnesses related to the following sensors:
  - Vapor Pressure (Fuel Tank Pressure) Sensor
  - MAP Sensor
  - EGR
  - TPS1/TPS2
  - APS1/APS2/APS3
  - CKP

Multiple PCM Information Sensor DTCs Set

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Turn the ignition “OFF”, disconnect the PCM. 2. Turn the ignition “ON”, check the 5 volt reference 1 and 2 circuit for the following conditions: • A poor connection at the PCM. • An open between the PCM connector and the splice. • A short to ground. • A short to voltage. Is there an open or short?	—	Go to *Step 3*	Go to *Step 4*
3	Repair the open or short. Is the action complete?	—	Verify repair	—
4	Check the sensor ground circuit for the following conditions: • A poor connection at the PCM or the affected sensors. • An open between the PCM connector and the affected sensors. Is there an open or a poor connection?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the open or the poor connection. Is the action complete?	—	Verify repair	—
6	Following below the DTCs stored: P1635, P1639	—	Go to *applicable DTC table*	Go to *Step 7*
7	Measure the resistance below the items: • Between EGR sensor supply circuit and Vapor Pressure Sensor supply circuit. • Between MAP sensor supply circuit and Vapor Pressure Sensor supply circuit. • Between Vapor Pressure Sensor supply circuit and PCM harness connector. (5Volt supply circuit) Is the resistance near the specified value?	—	Go to *Step 9*	Go to *Step 8*

Multiple PCM Information Sensor DTCs Set (Cont'd)

Step	Action	Value(s)	Yes	No
8	Locate and repair the open circuit in the MAP or EGR or Vapor Pressure sensor supply circuit. Is the action complete?	—	Verify repair	—
9	1. Disconnect the MAP, Vapor pressure sensor and EGR connector. 2. Ignition "ON". 3. Measure the resistance of the blow areas: • MAP sensor GND circuit. • EGR GND circuit. • Vapor pressure sensor GND circuit. Does the voltage resistance near the specified value?	—	Go to *Step 11*	Go to *Step 10*
10	Locate and repair the short circuit in the MAP or EGR or Vapor Pressure sensor signal or GND circuit. Is the action complete?	—	Verify repair	—
11	1. Disconnect the CKP sensor connector. 2. Ignition "ON". 3. Measure the voltage of the blow areas: • CKP sensor GND circuit and shield circuit. Does the voltage resistance near the specified value?	—	Go to *Step 13*	Go to *Step 12*
12	Locate and repair the short circuit in the CKP sensor signal or GND circuit. Is the action complete?	—	Verify repair	—
13	Are more of the following items for DTCs stored? EGR, Vapor Pressure Sensor, MAP, CKP, TPS, APS	—	Go to *applicable DTC table*	Go to *Step 14*
14	Replace the PCM. The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Go to *OBD System Check*	—

Exhaust Gas Recirculation (EGR) Diagnosis

An EGR flow check diagnosis of the linear EGR system is covered by DTC P0401. Pintle position error diagnosis is covered by DTC P0402, P0404, P1404, P0405, P0406. If EGR diagnostic trouble codes P0401 and/or P0402, P0404, P1404, P0405, P0406 are encountered, refer to the DTC charts.

Engine Tech 2 Data Definitions and Ranges

A/C CLUTCH – Tech 2 Displays ON or OFF –
Indicates whether the PCM has commanded the A/C clutch ON. Used in A/C system diagnostic.

A/C REQUEST — Tech 2 Displays YES or NO —
Indicates the state of the A/C request input circuit from the HVAC controls. The PCM uses the A/C request signal to determine whether A/C compressor operation is being requested.

AIR/FUEL RATIO — Tech 2 Range 0.0-25.5 —
Air/fuel ratio indicates the PCM commanded value. In closed loop, the air/fuel ratio should normally be displayed around “14.6-14.7”. A lower air/fuel ratio indicates a richer commanded mixture, which may be seen during power enrichment or TWC protection modes. A higher air/fuel ratio indicates a leaner commanded mixture. This can be seen during deceleration fuel mode.

AP1 —Tech 2 Range 0%-100% —
AP (accelerator pedal) angle is computed by the PCM from the AP sensor voltage. AP angle should display “11-15%” at idle and “85-89%” at wide open throttle.

AP2 —Tech 2 Range 0%-100% —
AP (accelerator pedal) angle is computed by the PCM from the AP sensor voltage. AP angle should display “85-89%” at idle and “11-15%” at wide open throttle.

AP3 —Tech 2 Range 0%-100% —
AP (accelerator pedal) angle is computed by the PCM from the AP sensor voltage. AP angle should display “85-89%” at idle and “32-36%” at wide open throttle.

BAROMETRIC PRESSURE — Tech 2 Range 10-105 kPa/0.00-5.00 Volts —
The barometric pressure reading is determined from the MAP sensor signal monitored during key up and wide open throttle (WOT) conditions. The barometric pressure is used to compensate for altitude differences and is normally displayed around “61-104” depending on altitude and barometric pressure.

CHECK TRANS LAMP — AUTO TRANSMISSION —
Indicates the need to check for a DTC with the Tech 2 when the lamp is flashing 0.2 seconds ON and 0.2 seconds OFF.

DESIRED EGR POS. — Tech 2 Range 0%-100% —
Represents the EGR pintle position that the PCM is commanding.

DESIRED IDLE — Tech 2 Range 0-3187 RPM —
The idle speed that the PCM is commanding. The PCM will compensate for various engine loads based on engine coolant temperature, to keep the engine at the desired speed.

ECT — (Engine Coolant Temperature) Tech 2 Range –40˚C to 151˚C (–40˚F to 304˚F) —
The engine coolant temperature (ECT) is mounted in the coolant stream and sends engine temperature information to the PCM. The PCM applies 5 volts to the ECT sensor circuit. The sensor is a thermistor which changes internal resistance as temperature changes. When the sensor is cold (high resistance), the PCM monitors a high signal voltage and interprets that as a cold engine. As the sensor warms (decreasing resistance), the voltage signal will decrease and the PCM will interpret the lower voltage as a warm engine.

EGR DUTY CYCLE — Tech 2 Range 0%-100% —
Represents the EGR valve driver PWM signal from the PCM. A duty cycle of 0% indicates that no EGR flow is being commanded; a 100% duty cycle indicates maximum EGR flow commanded.

EGR FEEDBACK — Tech 2 Range 0.00-5.00 Volts —
Indicates the EGR pintle position sensor signal voltage being monitored by the PCM. A low voltage indicates a fully extended pintle (closed valve); a voltage near 5 volts indicates a retracted pintle (open valve).

ENGINE LOAD — Tech 2 Range 0%-100% —
Engine load is calculated by the PCM from engine speed and MAF sensor readings. Engine load should increase with an increase in RPM or air flow.

ENGINE RUN TIME — Tech 2 Range 00:00:00-99:99:99 Hrs:Min:Sec —
Indicates the time elapsed since the engine was started. If the engine is stopped, engine run time will be reset to 00:00:00.

ENGINE SPEED — Range 0-9999 RPM —
Engine speed is computed by the PCM from the 58X reference input. It should remain close to desired idle under various engine loads with engine idling.

EVAP PURGE PWM — Tech 2 Range 0%-100% —
Represents the PCM commanded PWM duty cycle of the EVAP purge solenoid valve. “0%” displayed indicates no purge; “100%” displayed indicates full purge.

FUEL PUMP — Tech 2 Displays ON or OFF —
Indicates the PCM commanded state of the fuel pump relay driver circuit.

HO2S BANK 1, SEN. 1 — Tech 2 Range 0-1132 mV —
Represents the fuel control exhaust oxygen sensor output voltage. Should fluctuate constantly within a range between 10 mV (lean exhaust) and 1000 mV (rich exhaust) while operating in closed loop.

HO2S BANK 1, SEN. 2 — Tech 2 Range 0-1000mV —
Monitors the exhaust oxygen sensor output voltage. The PCM monitors the operating efficiency of catalytic converter by comparing the output voltages of sensor 1 and sensor 2 in this bank. If the catalytic converter is operating efficiently, the output voltage of sensor 1 will give a greater fluctuation than that of sensor 2. If the PCM detects an abnormal level of voltage fluctuation from sensor 2, a DTC P0420 will be set, indicating that the catalytic converter for this bank is no longer operating efficiently.

HO2S BANK2, SEN. 1 —Tech 2 Range 0-1132 mV—
Represents the fuel control exhaust oxygen sensor output voltage. Should fluctuate constantly within a range between 10mV (lean exhaust) and 1000 mV (rich exhaust) while operating in closed loop.

HO2S BANK 2, SEN. 2—Tech 2 Range 0-1000 mV—
Monitors the exhaust oxygen sensor output voltage. The PCM monitors the operating efficiency of catalytic converter by comparing the output voltages of sensor 1 and sensor 2 in this bank. If the catalytic converter is operating efficiently, the output voltage of sensor 1 will have a greater fluctuation than that of sensor 2. If the PCM detects an abnormal level of voltage fluctuation from sensor 2, a DTC P0430 will be set, indicating that the catalytic converter for this bank is no longer operating efficiently.

HO2S BANK 1, SEN. 1—Tech 2 Displays NOT READY or READY—
Indicates the status of the exhaust oxygen sensor. The Tech 2 will indicate that the exhaust oxygen sensor is ready when the PCM detects a fluctuating HO2S voltage sufficient to allow closed loop operation. This will not occur unless the exhaust oxygen sensor is warmed up.

HO2S BANK 2, SEN. 1 — Tech 2 Displays NOT READY or READY —
Indicates the status of the exhaust oxygen sensor. The Tech 2 will indicate that the exhaust oxygen sensor is ready when the PCM detects a fluctuating HO2S voltage sufficient to allow closed loop operation. This will not occur unless the exhaust oxygen sensor is warmed up.

HO2S WARM UP TIME BANK 1, SEN. 1/BANK 1, SEN 2/BANK 2 SEN. 1/BANK 2 SEN. 2 — Tech 2 Range 00:00:00-99:99:99 HRS:MIN:SEC —
Indicates warm-up time for each HO2S. The HO2S warm-up time is used for the HO2S heater test. The PCM will run the heater test only after a cold start (determined by engine coolant and intake air temperature at the time of start-up) and only once during an ignition cycle. When the engine is started the PCM will monitor the HO2S voltage. When the HO2S voltage indicates a sufficiently active sensor, the PCM looks at how much time has elapsed since start-up. If the PCM determines that tool much time was required for the HO2S to become active, a DTC will set. If the engine was warm when started, HO2S warm-up will the display “00:00:00”.

IAT (INTAKE AIR TEMPERATURE) — Tech 2 Range –40˚C to 151˚C (–40˚F to 304˚F) —
The PCM converts the resistance of the intake air temperature sensor to degrees. Intake air temperature (IAT) is used by the PCM to adjust fuel delivery and spark timing according to incoming air density.

IGNITION 1 — Tech 2 Range 0-25.5 Volts —
This represents the system voltage measured by the PCM at its ignition feed.

INJ. PULSE BANK 1/INJ. PULSE BANK 2 — Tech 2 Range 0-1000 msec. —
Indicates the amount of time the PCM is commanding each injector “ON” during each engine cycle. A longer injector pulse width will cause more fuel to be delivered. Injector pulse width should increase with increased engine load.

LONG TERM FUEL TRIM BANK 1/BANK 2 —
The long term fuel trim is derived from the short term fuel trim values and represents a long term correction of fuel delivery for the bank in question. A value of 0% indicates that fuel delivery requires no compensation to maintain the PCM commanded air/fuel ratio. A negative value significantly below 0% indicates that the fuel system is rich and fuel delivery is being reduced (decreased injector pulse width). A positive value significantly greater than 0% indicates that a lean condition exists and the PCM is compensating by adding fuel (increased injector pulse width). Because long term fuel trim tends to follow short term fuel trim, a value in the negative range due to canister purge at idle should not be considered unusual. Fuel trim values at maximum authority may indicate an excessively rich or lean system.

Fuel System STATUS — Tech 2 Displays OPEN or CLOSED —
“CLOSED” indicates that the PCM is controlling fuel delivery according to oxygen sensor voltage. In “OPEN” the PCM ignores the oxygen sensor voltage and bases the amount of fuel to be delivered on TP sensor, engine coolant, and MAF sensor inputs only.

MAF — Tech 2 Range 0.0-512 gm/s —
MAF (mass air flow) is the MAF input frequency converted to grams of air per second. This indicates the amount of air entering the engine.

MAP — Tech 2 Range 10-105 kPa (0.00-4.97 Volts) —
The manifold absolute pressure (MAP) sensor measures the change in the intake manifold pressure from engine load, EGR flow, and speed changes. As intake manifold pressure increases, intake vacuum decreases, resulting in a higher MAP sensor voltage and kPa reading. The MAP sensor signal is used to monitor intake manifold pressure changes during the EGR flow test, to update the BARO reading, and as an enabling factor for several of the diagnostics.

MIL — Tech 2 Displays ON or OFF —
Indicates the PCM commanded state of the malfunction indicator lamp.

MISFIRE CUR. CYL. #1 /#2 /#3 /#4 / #5 / #6 — Tech 2 Range 0-255 Counts —
The misfire current counters increase at a rate according to the number of the possible misfires being detected on each cylinder. The counters may normally display some activity, but the activity should be nearly equal for all the cylinders.

MISFIRE CUR. CYL. #1 /#2 /#3 /#4 / #5 / #6 — Tech 2 Range 0-65535 Counts —
The misfire history counters display the relative level of misfire that has been detected on each cylinder. The misfire history counters will not update or show any activity until a misfire DTC (P0300) has become active.

MISFIRE FAILURES SINCE FIRST FAIL — Tech 2 Range 0-65535 Counts —
Indicates the number of 200 crankshaft revolution sample periods during which the level of misfire was sufficiently high to report a fail.

MISFIRE PASSES SINCE FIRST FAIL — Tech 2 Range 0-65535 Counts —
Indicates the number of 200 crankshaft revolution sample periods during which the level of misfire was sufficiently low to report a pass.

POWER ENRICHMENT — Tech 2 Displays ACTIVE or INACTIVE —
"ACTIVE" displayed indicates that the PCM has detected conditions appropriate to operate in power enrichment mode. The PCM will command power enrichment mode when a large increase in throttle position and load is detected. While in power enrichment mode, the PCM will increase the amount of fuel delivered by entering open loop and increasing the injector pulse width. This is done to prevent a possible sag or hesitation from occurring during acceleration.

SPARK — Tech 2 Range –64˚ to 64˚ —
Displays the amount of spark advance being commanded by the PCM on the IC circuit.

START-UP ECT — Tech 2 Range –40˚C to 151˚C (–40˚F to 304˚F) —
Indicates the engine coolant temperature at the time that the vehicle was started. Used by the HO2S diagnostic to determine if the last start-up was a cold start.

START-UP IAT — Tech 2 Range –40˚C to 151˚C (–40˚F to 304˚F) —
Indicates the intake air temperature at the time that the vehicle was started. Used by the HO2S diagnostic to determine if the last start-up was a cold start.

TOTAL MISFIRE CURRENT COUNT — Tech 2 Range 0-255 —
Indicates the total number of cylinder firing events that were detected as being misfires during the last 200 crankshaft revolution sample period.

TP1 — Tech 2 Range 0%-100% —
TP (throttle position) angle is computed by the PCM from the TP sensor voltage. TP angle should display "6-12%" at idle and "79-83%" at wide open throttle.

TP2 — Tech 2 Range 0%-100% —
TP (throttle position) angle is computed by the PCM from the TP sensor voltage. TP angle should display "88-94%" at idle and "19-23%" at wide open throttle.

CATALYST PROTECTION MODE — Tech 2 Displays YES or NO —
"YES" displayed indicates that the PCM has detected conditions appropriate to operate in TWC protection mode. The PCM will decrease the air/fuel ratio to a value that depends on mass air flow (higher mass air flow = lower air/fuel ratio).

UPSHIFT LAMP (MANUAL TRANSMISSION) VEHICLE SPEED — Tech 2 Range 0-255 km/h (0-155 mph) —
The vehicle speed sensor signal is converted into km/h and mph for display.

WEAK CYLINDER — Tech 2 Displays Cylinder Number —
This indicates that the PCM has detected crankshaft speed variations that indicate 2% or more cylinder firing events are misfires.

Typical Scan Data Values

Use the Typical Scan Data Values Table only after the On-Board Diagnostic System Check has been completed, no DTC(s) were noted, and you have determined that the on-board diagnostics are functioning properly. Tech 2 values from a properly-running engine may be used for comparison with the engine you are diagnosing. The typical scan data values represent values that would be seen on a normally-running engine.

NOTE: A Tech 2 that displays faulty data should not be used, and the problem should be reported to the Tech 2 manufacturer. Use of a faulty Tech 2 can result in misdiagnosis and unnecessary replacement of parts.

Only the parameters listed below are referred to in this service manual for use in diagnosis. For further information on using the Tech 2 to diagnose the PCM and related sensors, refer to the applicable reference section listed below. If all values are within the typical range described below, refer to the *Symptoms* section for diagnosis.

Test Conditions

Engine running, lower radiator hose hot, transmission in park or neutral, closed loop, accessories off, brake not applied and air conditioning off.

3.5L V-6 Engine (Automatic and Manual Transmission)

Tech 2 Parameter	Data List	Units Displayed	Typical Data Values (IDLE)	Typical Data Values (2500 RPM)	Refer To
A/C Clutch Relay	Engine	On/Off	Off	Off	General Description and Operation, A/C Clutch Circuit Operation
A/C Request	Engine	Yes/No	No	No	General Description and Operation, A/C Request Signal
Air/Fuel Ratio	Engine	Ratio: _ to 1	14.6–14.7	14.6–14.7	General Description and Operation, Fuel System Metering Purpose
APP Sensor1	Engine	Percent	11–15	16–24	General Description and Operation
APP Sensor2	Engine	Percent	85–89	74–82	General Description and Operation
APP Sensor3	Engine	Percent	85–89	76–84	General Description and Operation
Barometric Pressure	Engine	kPa	61-104 (depends on altitude and barometric pressure)	61-104 (depends on altitude and barometric pressure)	General Description and Operation
Brake Light Switch	Engine	Open 0V/Closed 12V	Open 0V	Open 0V	Refer to Section 5
Check Trans Lamp (**Auto Trans**)	Engine	On/Off	Off	Off	4L30-E Automatic Transmission Diagnosis
Cruise Main Switch	Engine	Active/Inactive	Inactive	Inactive	Refer to Section 10
Cruise Set Switch	Engine	Active/Inactive	Inactive	Inactive	Refer to Section 10
Cruise Cancel Switch	Engine	Active/Inactive	Inactive	Inactive	Refer to Section 10
Cruise Resume Switch	Engine	Active/Inactive	Inactive	Inactive	Refer to Section 10
Decel Fuel Cutoff	Engine	Active/Inactive	Inactive	Inactive	General Description and Operation, Deceleration Mode
Desired EGR Position	Engine	Percent	0%	0%	General Description and Operation, EGR Pintle Position Sensor
Desired Idle Speed	Engine	RPM	700	800	General Description and Operation
ECT (Engine Coolant Temp)	Engine	Degrees C, Degrees F	80-100˚C (176-212˚F)	80-100˚C (176-212˚F)	General Description and Operation, Engine Coolant Temperature (ECT) Sensor
EGR Closed Pintle Position	Engine	Steps	20-40	20-40	General Description and Operation, EGR Pintle Position Sensor


Tech 2 Parameter	Data List	Units Displayed	Typical Data Values (IDLE)	Typical Data Values (2500 RPM)	Refer To
EGR Duty Cycle	Engine	Percent	0%	0%	General Description and Operation, Linear EGR Operation and Results of Incorrect Operation
EGR Feedback	Engine	Volts	0.45-0.80	0.45-0.80	—
EGR Normalized	Engine	Percent	0%	0%	—
Engine Load	Engine	Percent	2.0% - 5.5%	8.0% - 16.0%	General Description and Operation, Mass Air Flow (MAF) Sensor
Time From Start	Engine	Sec	Varies. Resets at each engine start.	Varies. Resets at each engine start.	—
Engine Speed	Engine	RPM	Within –50 to +100 of “Desired Idle”	Actual engine speed	—
EVAP Purge Solenoid	Engine	Percent	0%	0%	Diagnosis, EVAP Emission Canister Purge Valve Check
EVAP Vent Valve	Engine	On/Off	Off	Off	Diagnosis, EVAP Canister Purge Solenoid and EVAP Vacuum Switch and Visual Check; DTCs: P1441, P1442
Fuel System Status	Engine	Open Loop/Closed Loop	Closed Loop	Closed Loop	General Description
Fuel Level	Engine	Percent	—	—	Engine Fuel
Fuel Level Sensor	Engine	Volts	—	—	Engine Fuel
Fuel Tank (Vapor) Pressure Sensor	Engine	Volts	1.02 – 1.86	1.02 – 2.57	General Description and Operation
		in. H2O	—	—	
Fuel Pump	Engine	On/Off	On	On	Engine Fuel
HO2S Bank 1 Sen.1 (millivolts)	O2 Sensor Data	Millivolts	50-950 changing quickly	50-950, always changing quickly	General Description and Operation, Fuel control HO2S
HO2S Bank 1 Sen.2 (millivolts) (**Auto Trans**)	O2 Sensor Data	Millivolts	200-700 changing slowly	250-650 changing slowly	General Description and Operation, Fuel Metering System
HO2S Bank 1 Sen.2 (millivolts) (**Manual Trans**)	O2 Sensor Data	Millivolts	50-950 changing quickly	50-950 changing quickly	General Description and Operation, Fuel Metering System
HO2S Bank 1 Sen.3 (millivolts) (**Manual Trans**)	O2 Sensor Data	Millivolts	200-700 changing slowly	250-650 changing slowly	General Description and Operation, Catalyst Monitor Heated Oxygen Sensor (Manual Trans)

Tech 2 Parameter	Data List	Units Displayed	Typical Data Values (IDLE)	Typical Data Values (2500 RPM)	Refer To
HO2S Bank 2 Sen.1 (millivolts)	O2 Sensor Data	Millivolts	50-950 changing quickly	50-950 changing quickly	General Description and Operation, Fuel Control HO2S
HO2S Bank 2 Sen.2 (millivolts) (**Auto trans**)	O2 Sensor Data	Millivolts	200-700 changing slowly	250-650 changing slowly	General Description and Operation, Fuel Metering System
HO2S Bank 1 Sen.1 (ready/not ready)	O2 Sensor Data	Ready Yes/No	Ready Yes	Ready Yes	General Description and Operation, Fuel Control HO2S; DTC: P0135
HO2S Bank 2 Sen.1 (ready/not ready)	O2 Sensor Data	Ready Yes/No	Ready Yes	Ready Yes	General Description and Operation, Fuel Control HO2S
HO2S Warm-Up Time Bank 1 Sen.1	O2 Sensor Data	Seconds	25-45	25-45	General Description and Operation, Fuel Control HO2S
HO2S Warm-Up Time Bank 1 Sen.2	O2 Sensor Data	Seconds	60-100	60-100	General Description and Operation, Fuel Control HO2S
HO2S Warm-Up Time Bank 2 Sen.1	O2 Sensor Data	Seconds	25-45	25-45	General Description and Operation, Fuel Control HO2S
HO2S Warm-Up Time Bank 2 Sen.2	O2 Sensor Data	Seconds	60-100	60-100	General Description and Operation, Catalyst Monitor Heated Oxygen Sensor (Auto Trans)
IAT (Intake Air Temp)	Engine	Degrees C, Degrees F	0-100˚C, depends on underhood temperature	0-80˚C, depends on underhood temperature	General Description and Operation, Intake Air Temperature (IAT) Sensor
Illumination Switch	Engine	Closed 0V/Open 12V	Closed 0V	Closed 0V	Refer to Section 8
Ignition Voltage	Engine	Volts	12.8-14.1	12.8-14.1	General Description and Operation, Electronic Ignition System
Inj. Pulse Bank 1	Engine	Milliseconds	2.0-4.0	2.5-4.0	General Description, Fuel Metering, Fuel Injector
Inj. Pulse Bank 2	Engine	Milliseconds	2.0-4.0	2.5-4.0	General Description, Fuel Metering, Fuel Injector
Knock Present	Engine	No/Yes	No	No	General Description and ION Sensing Module
Knock Signal	Engine	Percent	1~4	1~4	General Description and ION Sensing Module
Knock Sensor Retard	Engine	˚CA	0	0	General Description and ION Sensing Module
Knock Counter	Engine	Counts	—	—	General Description
Long Term FT Bank 1 (Long Term Fuel Trim)	Misfire	Counts and Percentage	100 to 150 counts, –22% to +17%	100 to 150 counts, –22% to +17%	Diagnosis, Fuel Trim System Monitor; DTCs: P0171, P0172

Tech 2 Parameter	Data List	Units Displayed	Typical Data Values (IDLE)	Typical Data Values (2500 RPM)	Refer To
Long Term FT Bank 2 (Long Term Fuel Trim)	Misfire	Counts and Percentage	100 to 150 counts, –22% to +17%	100 to 150 counts, –22% to +17%	Diagnosis, Fuel Trim System Monitor; DTCs: P0171
MAF (Mass Air Flow)	Engine	Grams per second	3.0-7.0	12-20	General Description and Operation, MAF; DTCs: P101, P0102, P0103
MAP kPa (Manifold Absolute Pressure)	Engine	Kilopascals	25-35	20-30	General Description and Operation, Manifold Absolute Pressure (MAP) Sensor; DTCs: P0106, P0107, P0108
		Volts	0.8-1.3	0.5-1.0	
MIL	Engine	On/Off	Off	Off	On-Board Diagnostic System Check
Misfire Cur. Cyl #1	Misfire	Counts	0-2	0-2	DTC P0300
Misfire Cur. Cyl #2	Misfire	Counts	0-2	0-2	DTC P0300
Misfire Cur. Cyl #3	Misfire	Counts	0-2	0-2	DTC P0300
Misfire Cur. Cyl #4	Misfire	Counts	0-2	0-2	DTC P0300
Misfire Cur. Cyl #5	Misfire	Counts	0-2	0-2	DTC P0300
Misfire Cur. Cyl #6	Misfire	Counts	0-2	0-2	DTC P0300
Misfire Hist. Cyl #1	Misfire	Counts	0	0	DTC P0300
Misfire Hist. Cyl #2	Misfire	Counts	0	0	DTC P0300
Misfire Hist. Cyl #3	Misfire	Counts	0	0	DTC P0300
Misfire Hist. Cyl #4	Misfire	Counts	0	0	DTC P0300
Misfire Hist. Cyl #5	Misfire	Counts	0	0	DTC P0300
Misfire Hist. Cyl #6	Misfire	Counts	0	0	DTC P0300
Misfire Failures Since First Fail	Misfire	Counts	0	0	DTC P0300
Misfire Passes Since First Fail	Misfire	Counts	0	0	DTC P0300
PNP (Park/Neutral Position)	Engine	P-N / R-D-3-2-L	P-N	P-N	4L30-E Automatic Transmission Diagnosis
Power Enrichment	Engine	NO/YES	NO	NO	General Description and Operation, Acceleration Mode
PSP Switch (Power Steering Pressure)	Engine	Normal/Hi	Normal Pressure	Normal Pressure	Refer to 2A Section

Tech 2 Parameter	Data List	Units Displayed	Typical Data Values (IDLE)	Typical Data Values (2500 RPM)	Refer To
Spark (Advance)	Engine	Degrees Before Top Dead Center	15-22	34-44	General Description and Operation, Electronic Ignition System
Start-Up ECT (Engine Coolant Temp)	Engine	Degrees C, Degrees F	Depends on engine coolant temperature at time of start-up	Depends on engine coolant temperature at time of start-up	General Description and Operation, Engine Coolant Temperature (ECT) Sensor
Start-Up IAT (Intake Air Temp)	Engine	Degrees C, Degrees F	Depends on intake air temperature at time of start-up	Depends on intake air temperature at time of start-up	General Description and Operation, Intake Air Temperature (IAT) Sensor
TCC Cruise Brake Switch	Engine	Active/Inactive	Active	Active	Refer to Section 10
Total Misfire Current Count	Misfire	Counts	0-5	0-5	DTC P0300
TP Sensor 1 (Throttle Position Sensor 1)	Engine	Percentage	6–12	12–16	General Description and Operation, Throttle Position (TP) Sensor
TP Sensor 2 (Throttle Position Sensor 2)	Engine	Percentage	88–94	86–90	General Description and Operation, Throttle Position (TP) Sensor
Throttle at Idle	Engine	No/Yes	Yes	No	General Description and Operation, Throttle Position (TP) Sensor
Upshift Lamp (manual trans)	Engine	On/Off	Off	Off	Manual Transmission
Vehicle Speed	Engine	MPH / km/h	0	0	4L30-E Automatic Transmission Diagnosis
Weak Cylinder	Misfire	Cylinder #	—	—	DTC P0300

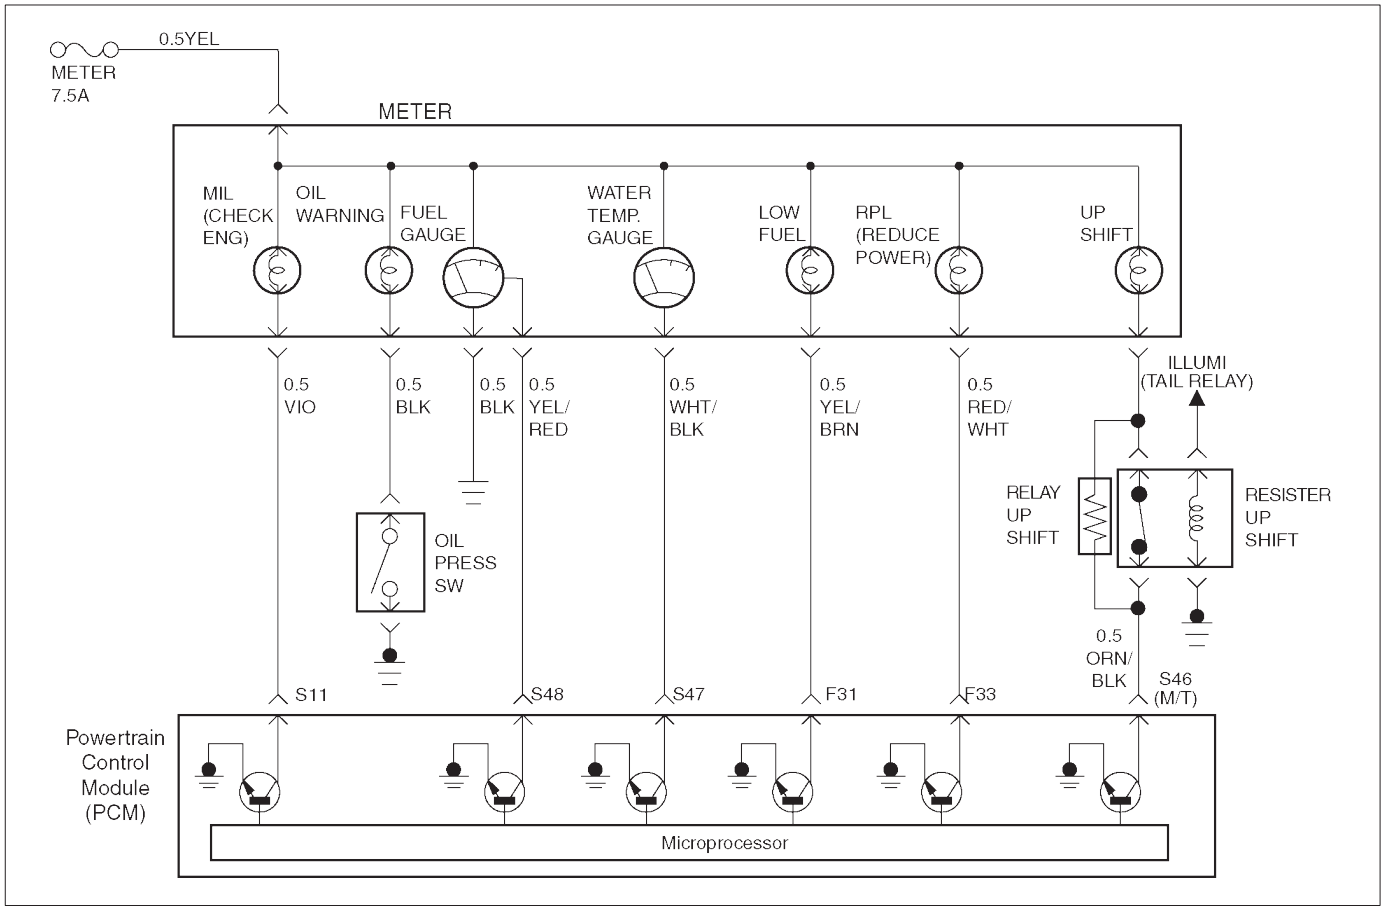No Malfunction Indicator Lamp (MIL)



D06R200083

Circuit Description

The “Check Engine” lamp (MIL) should always be illuminated and steady with the ignition “ON” and the engine stopped. Ignition feed voltage is supplied to the MIL bulb through the meter fuse. The powertrain control module (PCM) turns the MIL “ON” by grounding the MIL driver circuit.

Diagnostic Aids

An intermittent MIL may be cased by a poor connection, rubbed-through wire insulation, or a wire broken inside the insulation. Check for the following items:

- Inspect the PCM harness and connections for improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.
- If the engine runs OK, check for a faulty light bulb, an open in the MIL driver circuit, or an open in the instrument cluster ignition feed.
- If the engine cranks but will not run, check for an open PCM ignition or battery feed, or a poor PCM to engine ground.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. A “No MIL” condition accompanied by a no-start condition suggests a faulty PCM ignition feed or battery feed circuit.

9. Using a test light connected to B+, probe each of the PCM ground terminals to ensure that a good ground is present. Refer to *PCM Terminal End View* for terminal locations of the PCM ground circuits.

12. In this step, temporarily substitute a known good relay for the PCM relay. The horn relay is nearby, and it can be verified as “good” simply by honking the horn. Replace the horn relay after completing this step.

17. This vehicle is equipped with a PCM which utilizes an electrically erasable programmable read only memory (EEPROM). When the PCM is replaced, the new PCM must be programmed. Refer to *PCM Replacement and Programming Procedures Powertrain Control Module (PCM) and Sensors.*


No Malfunction Indicator Lamp (MIL)

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Attempt to start the engine. Does the engine start?	—	Go to *Step 3*	Go to *Step 6*
3	Check the meter fuse for the instrument cluster ignition feed circuit. Is the fuse OK?	—	Go to *Step 4*	Go to *Step 16*
4	Ignition “ON”, probe the ignition feed circuit at the cluster connector with a test light to ground. Is the test light “ON”?	—	Go to *Step 5*	Go to *Step 13*
5	1. Ignition “OFF”. 2. Disconnect the PCM. 3. Jumper the MIL driver circuit at the PCM connector to ground. 4. Ignition “ON”. Is the MIL “ON”?	—	Go to *Step 10*	Go to *Step 11*
6	Check the PCM ignition feed and battery feed fuses (15 A engine fuse and 15 A PCM fuse). Are both fuses OK?	—	Go to *Step 7*	Go to *Step 15*
7	1. Ignition “OFF”. 2. Disconnect the PCM. 3. Ignition “ON”. 4. Probe the ignition feed circuit at the PCM harness connector with a test light to ground. Is the test light “ON”?	—	Go to *Step 8*	Go to *Step 12*
8	Probe the battery feed circuit at the PCM harness connector with a test light to ground. Is the test light “ON”?	—	Go to *Step 9*	Go to *Step 14*
9	Check for a faulty PCM ground connection. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Check for damaged terminals at the PCM. Was a problem found?	—	Verify repair	Go to *Step 17*
11	Check for an open MIL driver circuit between the PCM and the MIL. Was a problem found?	—	Verify repair	Go to *Step 18*
12	Substitute a known “good” relay for the PCM main relay. Was the malfunction fixed?	—	Verify repair	Go to *Step 13*
13	Repair the open in the ignition feed circuit. Is the action complete?	—	Verify repair	—
14	Locate and repair the open PCM battery feed circuit. Is the action complete?	—	Verify repair	—

No Malfunction Indicator Lamp (MIL) (Cont'd)

Step	Action	Value(s)	Yes	No
15	Locate and repair the short to ground in the PCM ignition feed circuit or PCM battery feed circuit. Is the action complete?	—	Verify repair	—
16	Locate and repair the short to ground in the ignition feed circuit to the instrument cluster, and replace the fuse. Is the action complete?	—	Verify repair	—
17	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *PCM* in *ON-Vehicle Service* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
18	Check the MIL driver circuit for a poor connection at the instrument panel connector. Was a problem found?	—	Verify repair	Go to *Instrument Panel* in *Electrical Diagnosis*

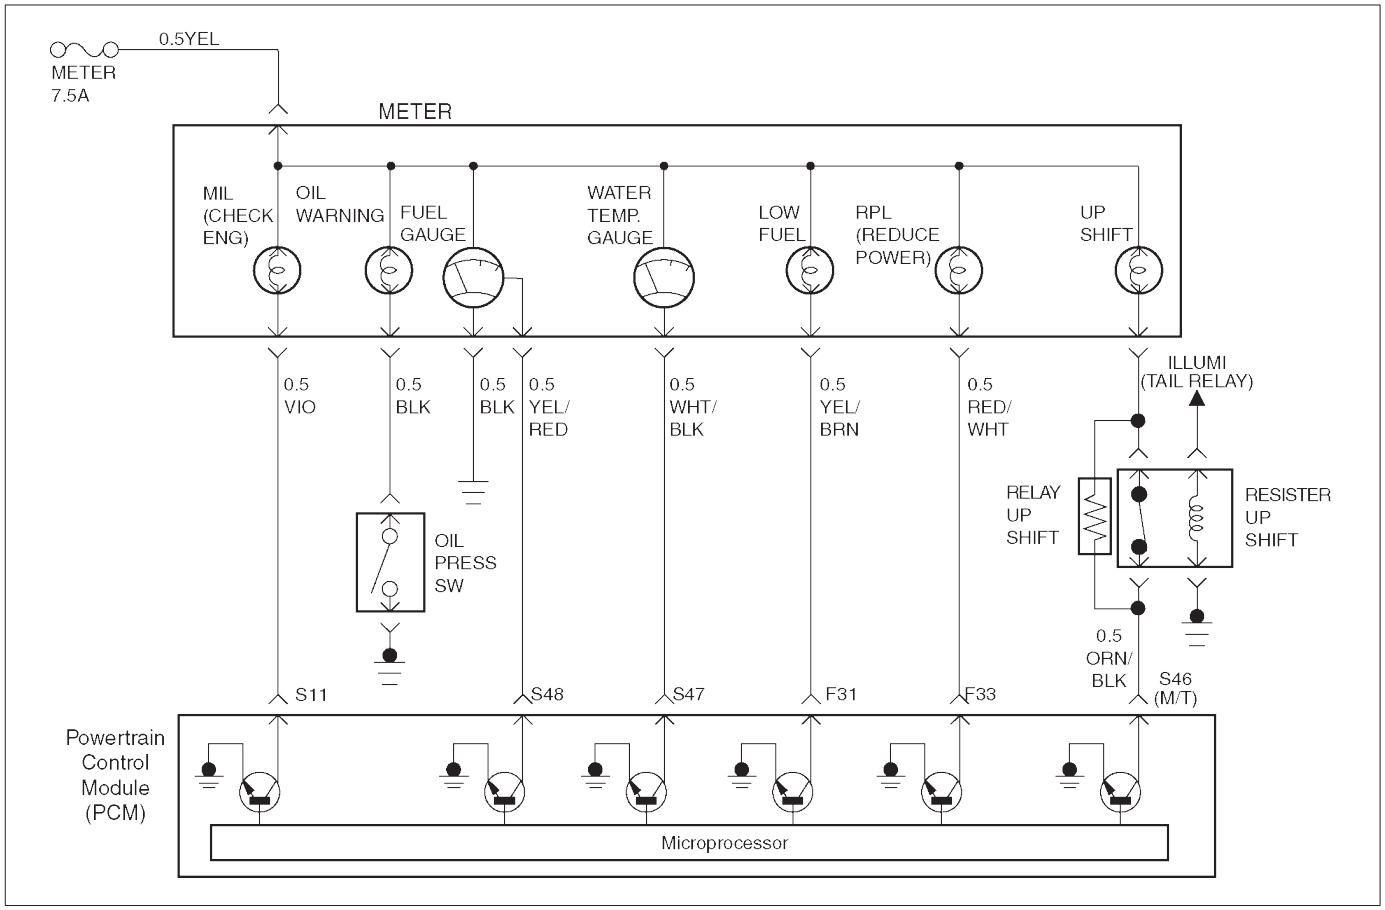Malfunction Indicator Lamp (MIL) “ON” Steady



D06R200083

Circuit description

The malfunction indicator lamp (MIL) should always be illuminated and steady with ignition “ON” and the engine stopped. Ignition feed voltage is supplied directly to the MIL indicator. The powertrain control module (PCM) turns the MIL “ON” by grounding the MIL driver circuit. The MIL should not remain “ON” with the engine running and no DTC(s) set. A steady MIL with the engine running and no DTC(s) suggests a short to ground in the MIL driver circuit.

Diagnostic Aids

An intermittent may be caused by a poor connection, rubbed-through wire insulation, or a wire broken inside the insulation. Check for the following items:

- Poor connection or damaged harness – Inspect the PCM harness and connectors for improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.

Test Description


Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. If the MIL does not remain “ON” when the PCM is disconnected, the MIL driver wiring is not faulty.
3. If the MIL driver circuit is OK, the instrument panel cluster is faulty.
6. This vehicle is equipped with a PCM which utilizes an electrically erasable programmable read only memory (EEPROM). When the PCM is replaced, the new PCM must be programmed. Refer to *PCM Replacement and Programming Procedures* in *Powertrain Control Module (PCM) and Sensors.*

Malfunction Indicator Lamp (MIL) “ON” Steady

Step	Action	Value(s)	Yes	No
1	Was the “On-Board diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “OFF”, disconnect PCM. 2. Ignition “ON”, observe the MIL (Service Engine Soon lamp). Is the MIL “ON”?	—	Go to *Step 3*	Go to *Step 5*
3	1. Ignition “OFF”, disconnect the instrument panel cluster. 2. Check the MIL driver circuit between the PCM and the instrument panel cluster for a short to ground. 3. If a problem is found, repair as necessary. Was the MIL driver circuit shorted to ground?	—	Go to *OBD System Check*	Go to *Step 4*
4	Replace the instrument panel cluster. Is the action complete?	—	Go to *OBD System Check*	—
5	1. Ignition “OFF”, reconnect the PCM. 2. Ignition “ON”, reprogram the EEPROM. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. 3. Using the Tech 2 output controls function, select MIL dash lamp control and command the MIL “OFF”. (Refer to the Miscellaneous test) Did the MIL turn “OFF”?	—	Go to *OBD System Check*	Go to *Step 6*
6	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Go to *OBD System Check*	—

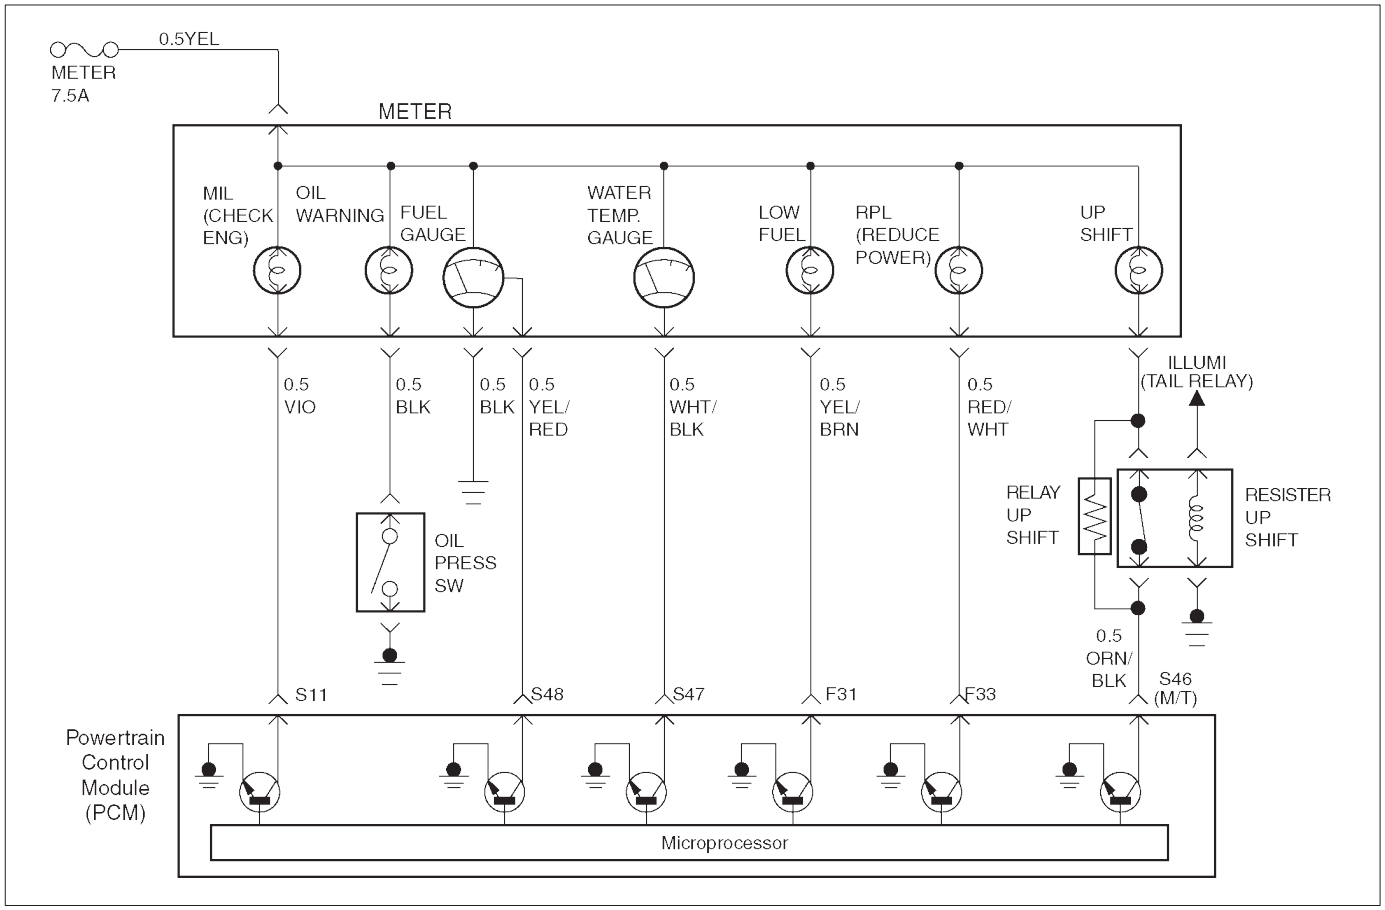No Reduced Power Lamp (RPL)



D06R200083

Circuit Description

The Reduced Power Lamp (RPL) should be turned “OFF” afrer “ON” for 3 seconds with the ignition “ON” and the engine stopped. Ignition feed voltage is supplied to the RPL bulb through the meter fuse. The powertrain control module (PCM) turns the RPL “ON” by grounding the RPL driver circuit.

Diagnostic Aids

An intermittent RPL may be cased by a poor connection, rubbed-through wire insulation, or a wire broken inside the insulation. Check for the following items:

- Inspect the PCM harness and connections for improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.
- If the engine runs OK, check for a faulty light bulb, an open in the RPL driver circuit, or an open in the instrument cluster ignition feed.
- If the engine cranks but will not run, check for an open PCM ignition or battery feed, or a poor PCM to engine ground.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. A “No RPL” condition accompanied by a no-start condition suggests a faulty PCM ignition feed or battery feed circuit.

9. Using a test light connected to B+, probe each of the PCM ground terminals to ensure that a good ground is present. Refer to *PCM Terminal End View* for terminal locations of the PCM ground circuits.

12. In this step, temporarily substitute a known good relay for the PCM relay. The horn relay is nearby, and it can be verified as “good” simply by honking the horn. Replace the horn relay after completing this step.

17. This vehicle is equipped with a PCM which utilizes an electrically erasable programmable read only memory (EEPROM). When the PCM is replaced, the new PCM must be programmed. Refer to *PCM Replacement and Programming Procedures Powertrain Control Module (PCM) and Sensors.*


No Reduced Power Lamp (RPL)

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Attempt to start the engine. Does the engine start?	—	Go to *Step 3*	Go to *Step 6*
3	Check the meter fuse for the instrument cluster ignition feed circuit. Is the fuse OK?	—	Go to *Step 4*	Go to *Step 16*
4	Ignition “ON”, probe the ignition feed circuit at the cluster connector with a test light to ground. Is the test light “ON”?	—	Go to *Step 5*	Go to *Step 13*
5	1. Ignition “OFF”. 2. Disconnect the PCM. 3. Jumper the RPL driver circuit at the PCM connector to ground. 4. Ignition “ON”. Is the RPL “ON”?	—	Go to *Step 10*	Go to *Step 11*
6	Check the PCM ignition feed and battery feed fuses (15 A engine fuse and 15 A PCM fuse). Are both fuses OK?	—	Go to *Step 7*	Go to *Step 15*
7	1. Ignition “OFF”. 2. Disconnect the PCM. 3. Ignition “ON”. 4. Probe the ignition feed circuit at the PCM harness connector with a test light to ground. Is the test light “ON”?	—	Go to *Step 8*	Go to *Step 12*
8	Probe the battery feed circuit at the PCM harness connector with a test light to ground. Is the test light “ON”?	—	Go to *Step 9*	Go to *Step 14*
9	Check for a faulty PCM ground connection. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Check for damaged terminals at the PCM. Was a problem found?	—	Verify repair	Go to *Step 17*
11	Check for an open RPL driver circuit between the PCM and the RPL. Was a problem found?	—	Verify repair	Go to *Step 18*
12	Substitute a known “good” relay for the PCM main relay. Was the malfunction fixed?	—	Verify repair	Go to *Step 13*
13	Repair the open in the ignition feed circuit. Is the action complete?	—	Verify repair	—
14	Locate and repair the open PCM battery feed circuit. Is the action complete?	—	Verify repair	—

No Reduced Power Lamp (RPL) (Cont'd)

Step	Action	Value(s)	Yes	No
15	Locate and repair the short to ground in the PCM ignition feed circuit or PCM battery feed circuit. Is the action complete?	—	Verify repair	—
16	Locate and repair the short to ground in the ignition feed circuit to the instrument cluster, and replace the fuse. Is the action complete?	—	Verify repair	—
17	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *PCM* in *ON-Vehicle Service* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
18	Check the RPL driver circuit for a poor connection at the instrument panel connector. Was a problem found?	—	Verify repair	Go to *Instrument Panel* in *Electrical Diagnosis*

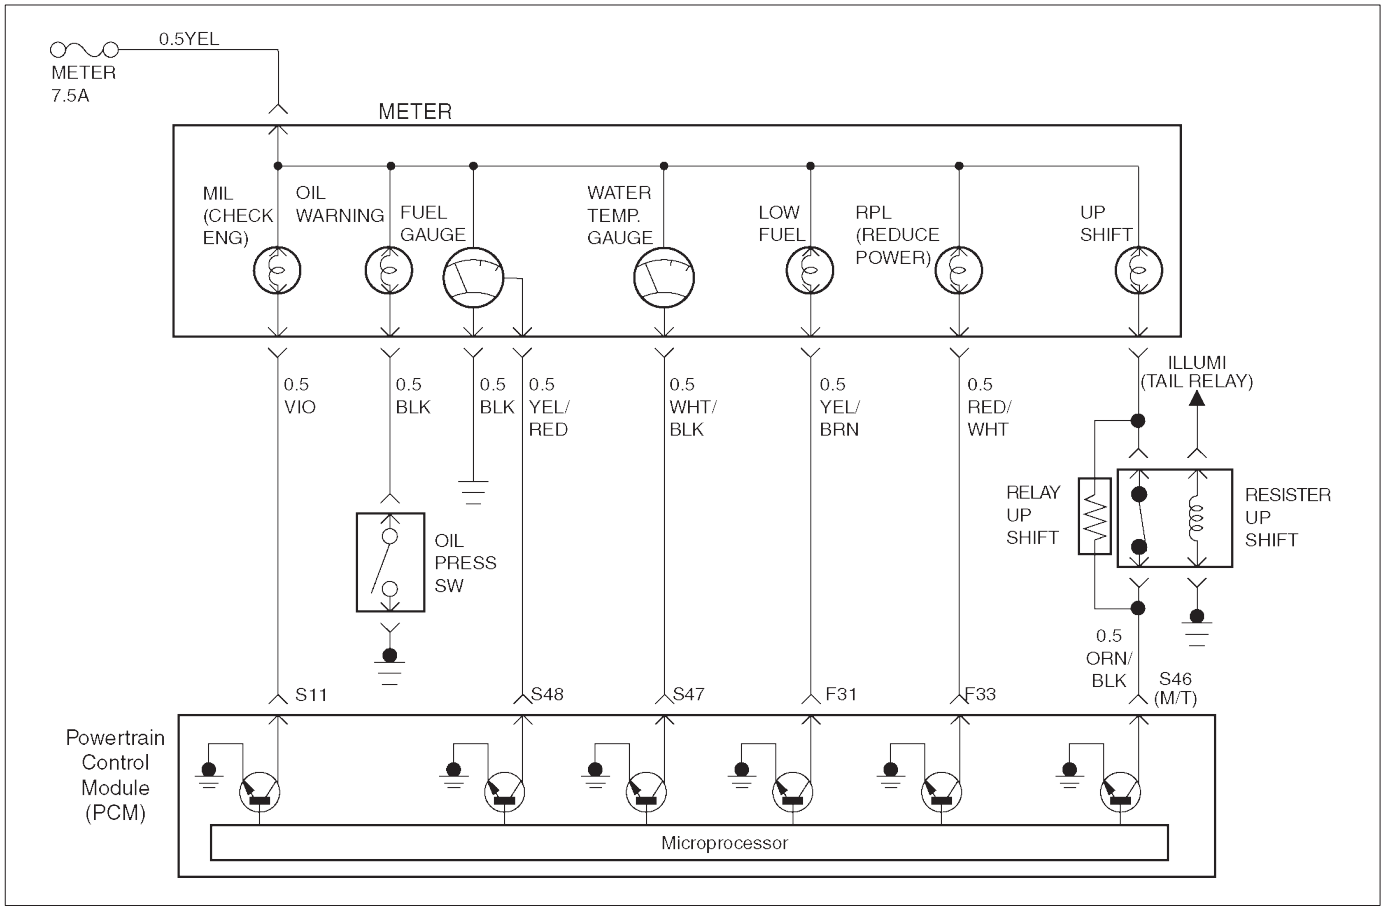Reduced Power Lamp (RPL) “ON” Steady



D06R200083

Circuit description

The Reduced Power Lamp (RPL) should be truned “OFF” after “ON” for 3 seconds with ignition “ON” and the engine stopped. Ignition feed voltage is supplied directly to the RPL indicator. The powertrain control module (PCM) turns the RPL “ON” by grounding the RPL driver circuit. The RPL should not remain “ON” with the engine running and no DTC(s) set. A steady RPL with the engine running and no DTC(s) suggests a short to ground in the RPL driver circuit.

Diagnostic Aids

An intermittent may be caused by a poor connection, rubbed-through wire insulation, or a wire broken inside the insulation. Check for the following items:

- Poor connection or damaged harness – Inspect the PCM harness and connectors for improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.

Test Description


Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. If the RPL does not remain “ON” when the PCM is disconnected, the RPL driver wiring is not faulty.
3. If the RPL driver circuit is OK, the instrument panel cluster is faulty.
6. This vehicle is equipped with a PCM which utilizes an electrically erasable programmable read only memory (EEPROM). When the PCM is replaced, the new PCM must be programmed. Refer to *PCM Replacement and Programming Procedures* in *Powertrain Control Module (PCM) and Sensors.*


Reduced Power Lamp (RPL) “ON” Steady

Step	Action	Value(s)	Yes	No
1	Was the “On-Board diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “OFF”, disconnect PCM. 2. Ignition “ON”, observe the RPL. Is the RPL “ON”?	—	Go to *Step 3*	Go to *Step 5*
3	1. Ignition “OFF”, disconnect the instrument panel cluster. 2. Check the RPL driver circuit between the PCM and the instrument panel cluster for a short to ground. 3. If a problem is found, repair as necessary. Was the RPL driver circuit shorted to ground?	—	Go to *OBD System Check*	Go to *Step 4*
4	Replace the instrument panel cluster. Is the action complete?	—	Go to *OBD System Check*	—
5	1. Ignition “OFF”, reconnect the PCM. 2. Ignition “ON”, reprogram the EEPROM. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. 3. Using the Tech 2 output controls function, select RPL dash lamp control and command the RPL “OFF”. (Refer to the Miscellaneous test) Did the RPL turn “OFF”?	—	Go to *OBD System Check*	Go to *Step 6*
6	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Go to *OBD System Check*	—

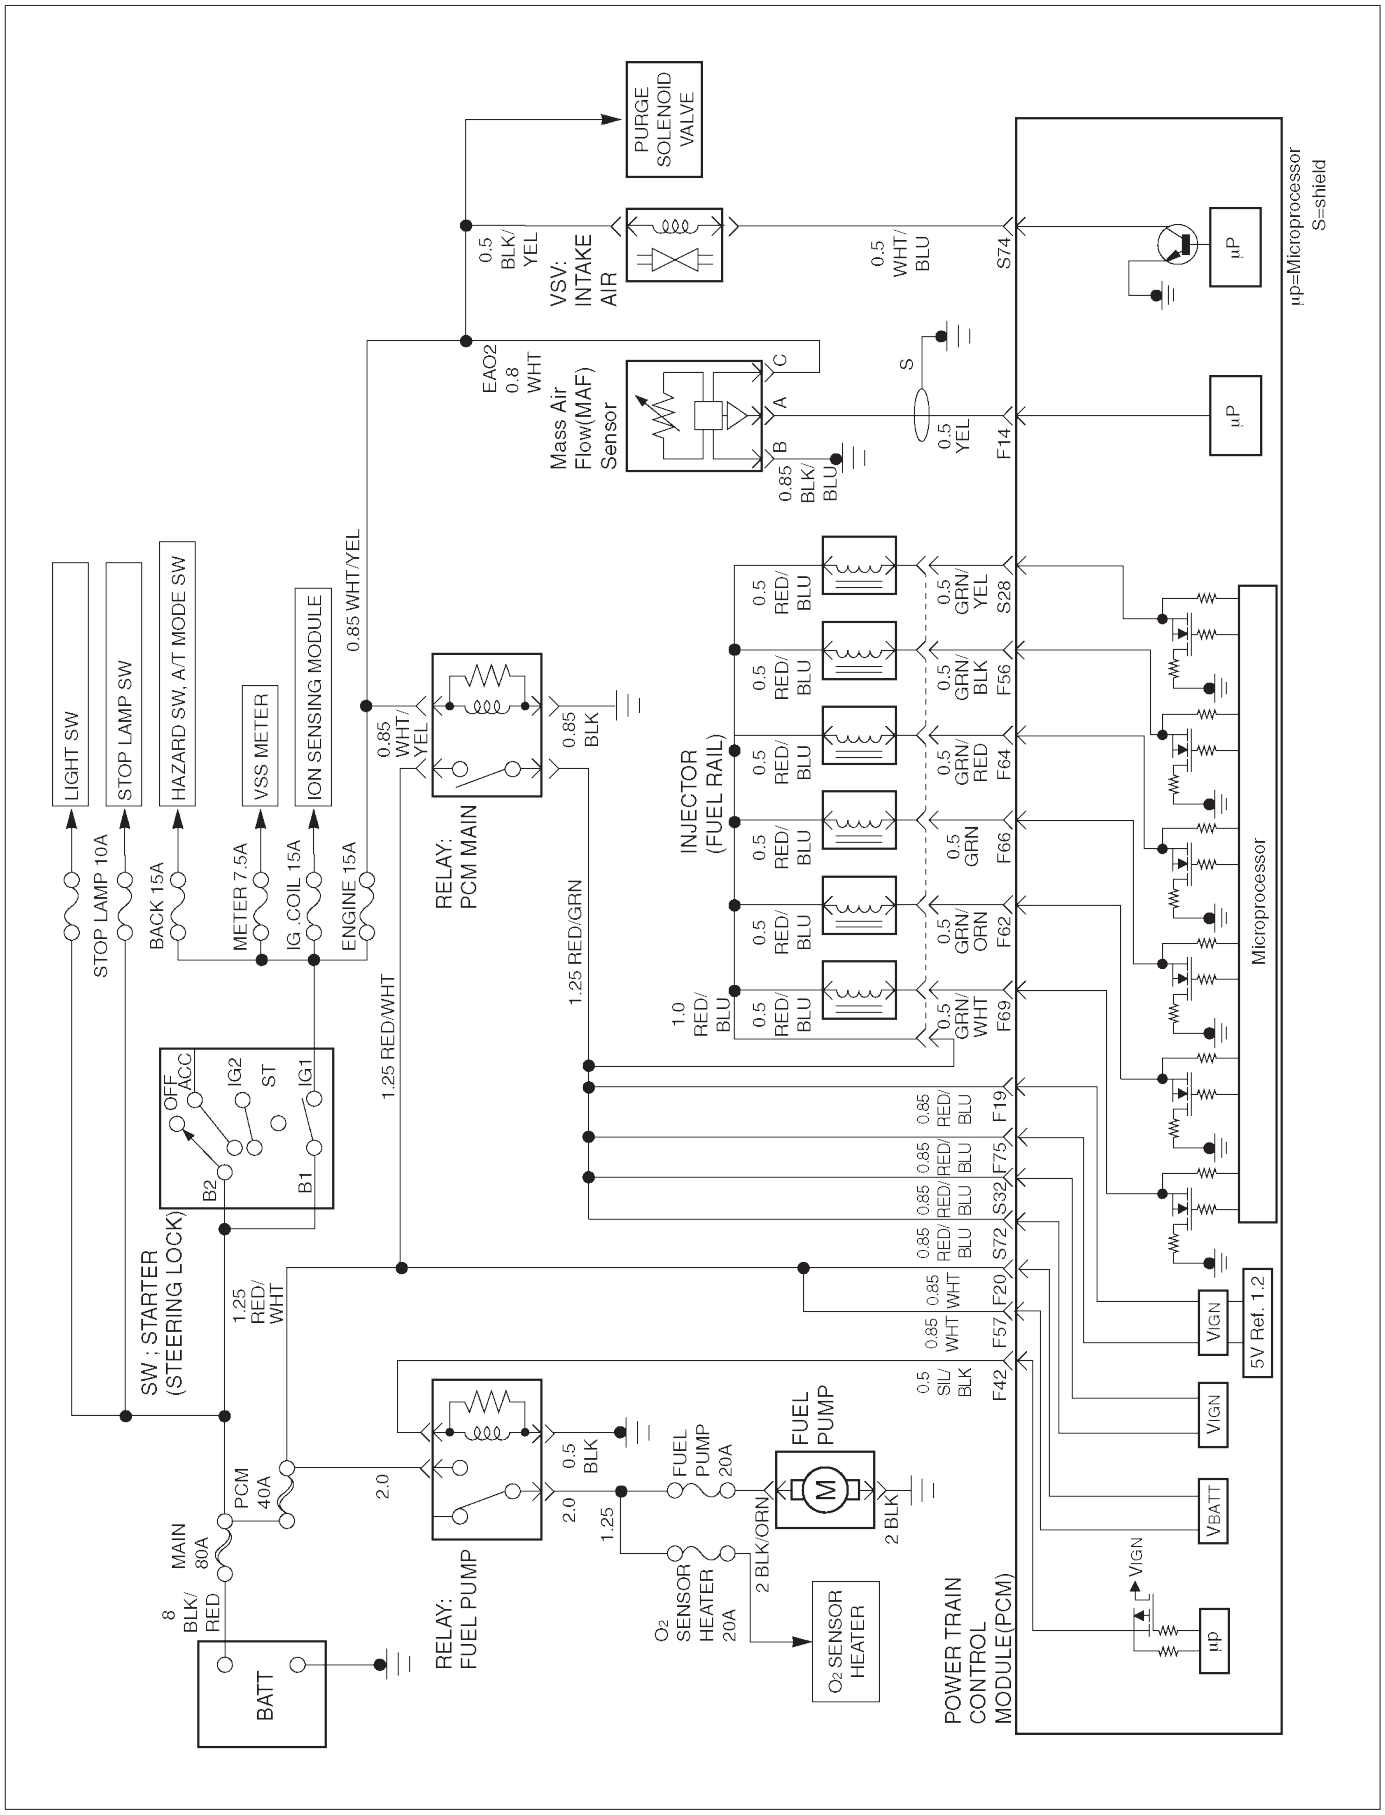Engine Cranks But Will Not Run



D06R200031

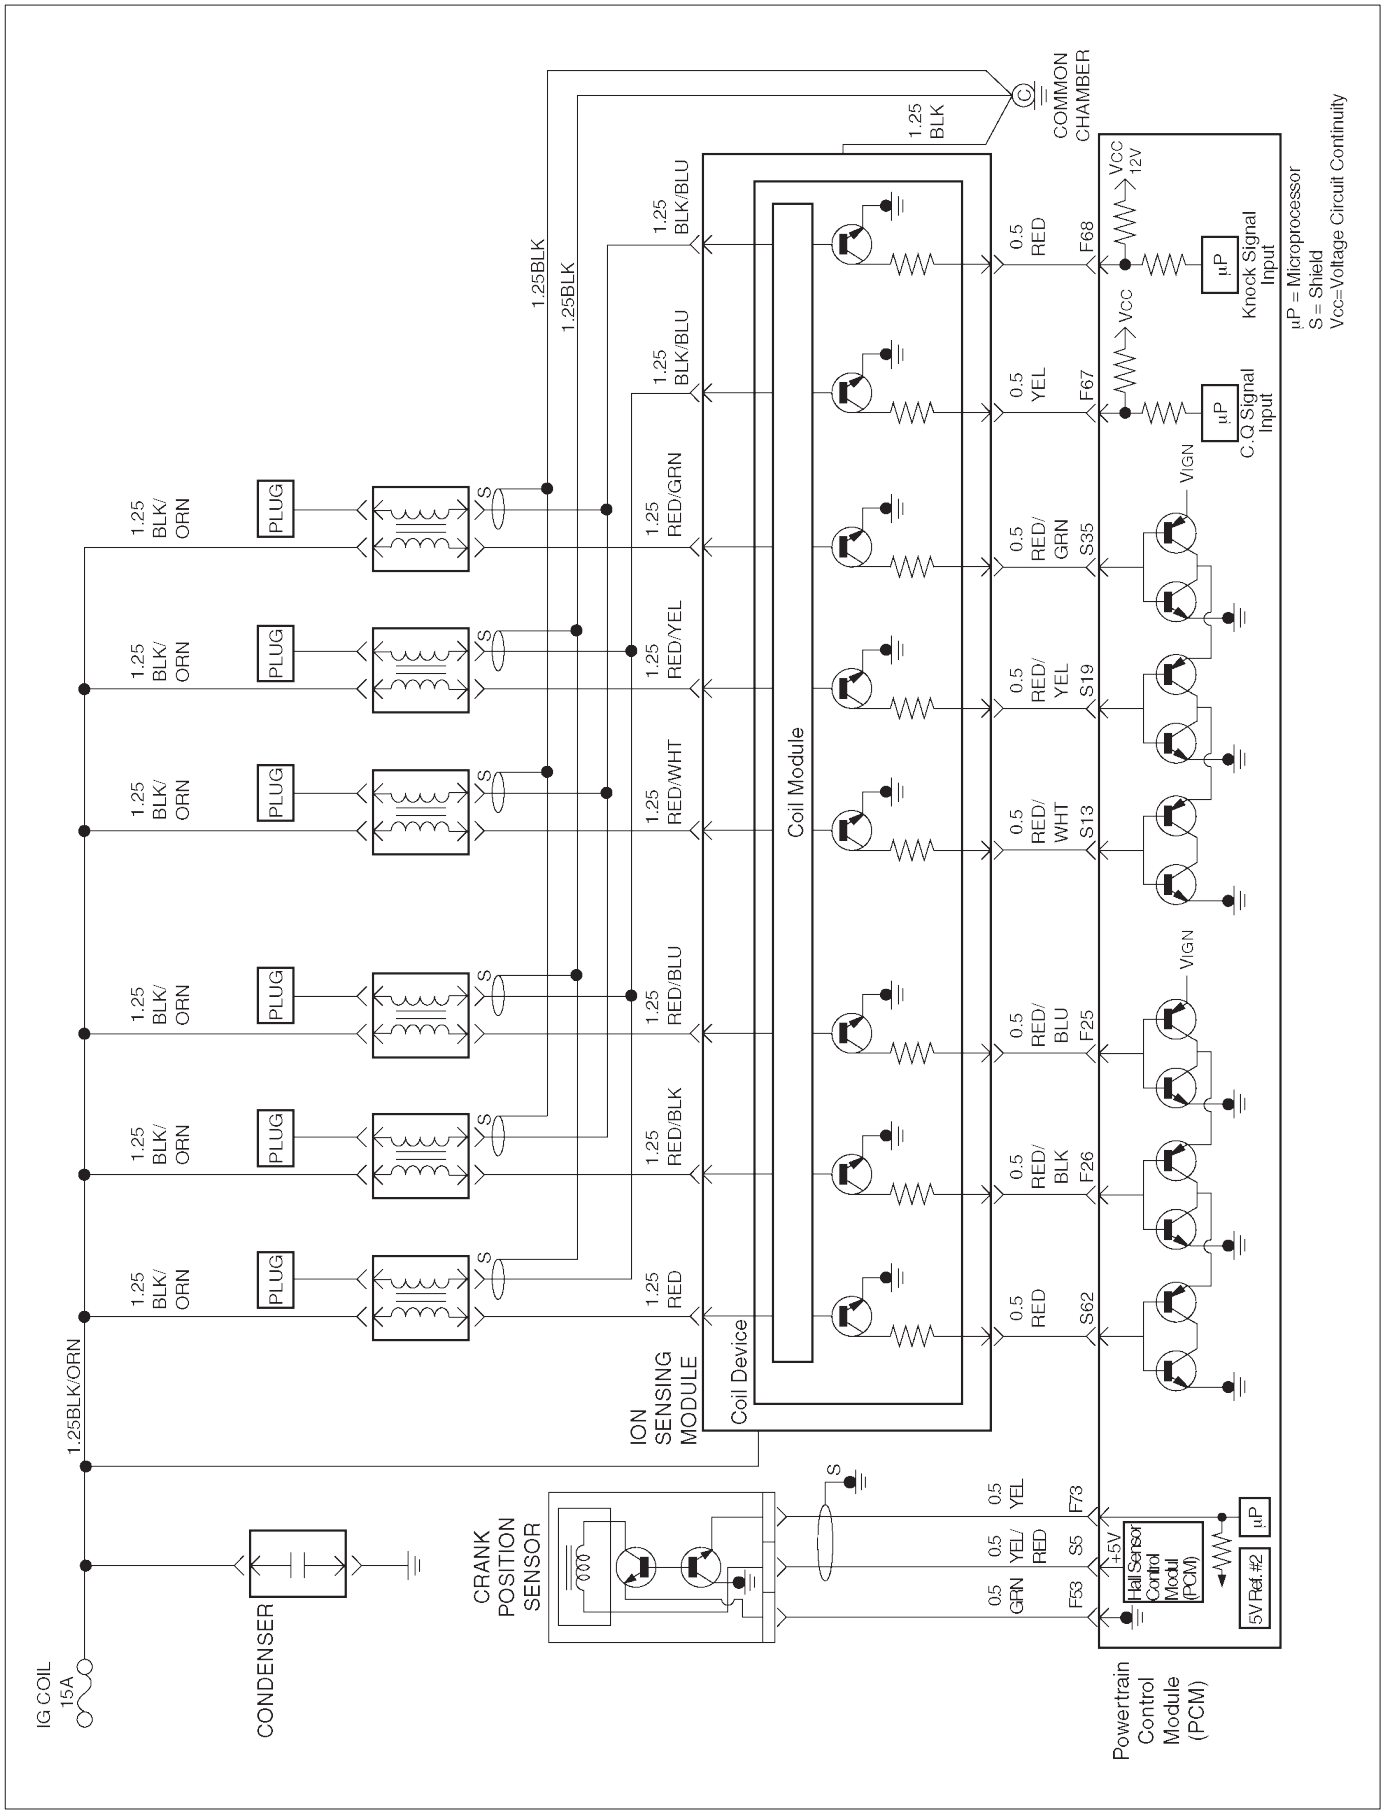
IG COIL
15A
CONDENSER
1.25BLK/ORN
CRANK POSITION SENSOR
ION SENSING MODULE
Coil Device
Coil Module
PLUG
1.25 BLK/ORN
1.25 RED
1.25 RED/BLK
1.25 RED/BLU
1.25 RED/WHT
1.25 RED/YEL
1.25 RED/GRN
1.25 BLK/BLU
1.25BLK
1.25 BLK
COMMON CHAMBER
0.5 RED
0.5 YEL
0.5 RED/GRN
0.5 RED/YEL
0.5 RED/WHT
0.5 RED/BLU
0.5 RED/BLK
0.5 RED/BLK
0.5 YEL
0.5 YEL/RED
0.5 GRN
F68
F67
S35
S19
S13
F25
F26
S62
F73
S5
F53
VCC 12V
VCC
VIGN
µP
Knock Signal Input
C.Q Signal Input
5V Ref. #2
5V
Hall Sensor Control Modul (PCM)
Powertrain Control Module (PCM)
µP = Microprocessor
S = Shield
VCC=Voltage Circuit Continuity

D06R200032

Circuit Description

The electronic Ignition system uses a coil -at-plug method of spark distribution. In this type of ignition system, the powertrain control module (PCM) triggers the correct driver outside the Ignition Current Sense System (ICSS), which then triggers the correct ignition coil based on the 58X signal received from the crankshaft position sensor (CKP). The spark plug connected to the coil fires when the ICSS opens the ground circuit for the coil's primary circuit.

During crank, the PCM monitors the CKP 58X signal. The CKP signal is used to determine which cylinder will fire first. After the CKP 58X signal has been processed by the PCM, it will command all six injectors to allow a priming shot of fuel for all the cylinders. After the priming, the injectors are left "OFF" during the next six 58X reference pulses from the CKP. This allows each cylinder a chance to use the fuel from the priming shot. During this waiting been received by the PCM. The ION sensor signal allows the PCM to operate the injectors sequentially based on camshaft position. If the camshaft position signal is not present at start - up, the PCM will begin sequential fuel delivery with a 1 -in-6 chance that fuel delivery is correct. The engine will run without a ION sensor signal, but will set a DTC code.

Diagnostic Aids

An intermittent problem may be caused by a poor connection, rubbed - through wire insulation or a wire broken inside the insulation. Check for the following items:

- Poor connection or damaged harness-Inspect the PCM harness and connectors for improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.
- Faulty engine coolant temperature sensor-Using a Tech 2, compare engine coolant temperature with intake air temperature on a completely cool engine. Engine coolant temperature should be within 10 ° C of intake air temperature. If not, replace the ECT sensor.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

5. An obvious cause of low fuel pressure would be an empty fuel tank.
6. The engine will easily start and run if a few injectors are disabled. It is not necessary to test all injectors at this time since this step is only a test to verify that all of the injectors have not been disabled by fuel contamination.
7. A blinking test light verifies that the PCM is monitoring the 58X crankshaft reference signal and is capable of activating the injectors. If there is an open or shorted driver circuit, DTCs 201 – 206 and a misfire DTC 300 – 306 should be set.
19. By using a spark tester, each ignition coil's ability to produce 25,000 volts is verified.
25. If there is an open or shorted driver circuit, DTCs 201 – 206 and a misfire DTC 301 – 306 should be set. All six injector driver circuits can be checked at one time without removing the intake manifold if a J 39021 – 95 test light is available. This is the alternative procedure:
    - With the ignition "OFF", disconnect the gray connector located at the rear of the air filter, attached to a bracket on the purge canister.
    - Connect test light J 39021 – 95 to the connector. Do any of the light constantly illuminate or fail to blink when the engine is cranked? If so, repair the short or open circuit, or replace the PCM if indicated.

This procedure only tests the driver circuit as far as the test connection, so step 31 is added to test the circuit all the way to the injector.

Engine Cranks But Will Not Run

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Check the ignition coil fuse, the engine fuse, and the PCM fuse. Was a fuse blown?	—	Go to *Step 3*	Go to *Step 4*
3	Check for a short to ground and replace the fuse. Is the action complete?	—	Verify repair	—

Engine Cranks But Will Not Run (Cont'd)

Step	Action	Value(s)	Yes	No
4	1. Ignition "OFF", install a fuel pressure gauge at the test fitting on the fuel supply line in the engine compartment. (Use a shop cloth to absorb any fuel leakage while making the connection.) 2. Ignition "ON", observe the fuel pressure. Is the fuel pressure within the specified values, and does it hold steady?	285 - 375 kPa (43 – 55 psi)	Go to *Step 6*	Go to *Step 5*
5	Is any fuel pressure indicated?	—	Go to *Fuel System Electrical Test*	Go to *Fuel System Diagnosis*
6	Install the switch box J 39021–2 at the injector test connector and activate an injector. Did the fuel pressure drop when the injector was activated?	—	Go to *Step 7*	Go to *Step 18*
7	Install an injector test light at the #2 cylinder injector harness connector. Does the light blink when the engine is cranked?	—	Go to *Step 8*	Go to *Step 24*
8	1. Ignition " OFF". 2. Disconnect the 11-pin connector at the ION sensing module. 3. With a test light to B + , probe each of the 6 exposed ION sensing module pins, one at a time, while the engine is cranked. (Use the gray narrow Metri - Pak © flexible female connector from the J - 35616 kit to make the pin accessible.) Does the light flash at each pin when the engine is cranked?	—	Go to *Step 12*	Go to *Step 9*
9	1. Remove the 4-pin connector at the ION sensing module. 2. Ignition " ON". 3. Use a test light at the harness connector to verify that the module is being supplied with B + and ground. Was a problem found?	—	Go to *Step 10*	Go to *Step 11*
10	Repair the open ignition feed circuit or ground circuit to the ION sensing module. Is the action complete?	—	Verify repair	—
11	Repair the ION sensing module. Is the action complete?	—	Verify repair	—
12	1. Reconnect the ION sensing module 11-pin connector. 2. Remove the electrical connector from each coil. 3. With a test light to B+, probe each of the coil connectors at the wire which runs to the ION sensing module. Does the light flash at each coil connector when the engine is cranked?	—	Go to *Step 14*	Go to *Step 13*
13	Check for an open circuit between the coil and ION sensing module. Is the action complete?	—	Verify repair	—

Engine Cranks But Will Not Run (Cont'd)

Step	Action	Value(s)	Yes	No
14	1. Ignition "ON". 2. While the coil connectors are disconnected, touch each coil connector's ignition feed terminal with a grounded test light (the ignition feed wire is YEL tracer). Did the test light illuminate?	—	Go to *Step 16*	Go to *Step 15*
15	Repair the open ignition feed circuit. Is the action complete?	—	Verify repair	—
16	While the coil connectors are disconnected, touch each connector's secondary ground terminal with a test light to B +. (The ground wires are black.) Did the test light illuminate at each coil connector?	—	Go to *Step 18*	Go to *Step 17*
17	Repair the open secondary ground circuit. Is the action complete?	—	Verify repair	—
18	1. Test the fuel for contamination. 2. If a problem is found, clean the fuel system and correct the contaminated fuel condition as necessary. Replace the fuel filter and replace any injectors that are not delivering fuel (see Injector Balance Test). Was a problem found?	—	Verify repair	Go to *Step 19*
19	1. Remove any ignition coil and install a spark tester at the spark plug end of the coil. 2. Observe the tester while the engine is cranking. Was a crisp, blue spark observed? Only one or two sparks followed by no result is considered the same as "No Spark".	—	Go to *Step 21*	Go to *Step 20*
20	Replace the ignition coil, and return to Step 19 to test the remaining coils. Is the action complete?	—	Verify repair	—
21	Repeat Step 19 for each coil. Remove only one coil at a time, and reinstall each coil on its spark plug after testing, but do not refasten coils with screws at this time. After all coils have passed the spark test, does the engine start?	—	Refasten all coils with their screws	Go to *Step 22*
22	1. Remove the spark plugs from all cylinders. 2. Visually inspect the spark plug electrodes. 3. Replace any spark plugs with loose or missing electrodes or cracked insulators. Did your inspection reveal any spark plugs exhibiting excessive fouling?	—	Correct the fouling condition	Go to *Step 23*


Engine Cranks But Will Not Run (Cont'd)

Step	Action	Value(s)	Yes	No
23	Refer to *Engine Mechanical Diagnosis* to diagnose the following conditions: • Faulty or incorrect camshaft drive belts • Leaking or sticky valves or rings • Excessive valve deposits • Weak valve springs • Incorrect valve timing • Leaking head gasket Is the action complete?	—	Verify repair	Go to *Step 25*
24	Observe the "Engine Speed" data display on the Tech 2 while cranking the engine. Is the engine RPM indicated?	—	Go to *Step 25*	Go to *Step 34*
25	1. Disconnect the 7-pin gray connector at the rear of the air filter beneath the point where the air duct attaches to the MAF sensor. 2. Ignition "ON". 3. Using a test light connected to ground, probe the ignition terminal at the PCM (female) side of the 7-pin connector. Is the test light "ON"?	—	Go to *Step 26*	Go to *Step 32*
26	1. At the PCM (female) side of the connector, connect a test light between the ignition + terminal and one of the injector driver circuits at the same connector. 2. Ignition "ON". 3. Observe the test light, and repeat the test for each injector driver circuit. Did the test light stay on when checking any of the 6 injector driver circuits?	—	Go to *Step 27*	Go to *Step 29*
27	1. Ignition "OFF", disconnect the PCM. 2. Ignition "ON", observe the test light. Is the test light "ON"?	—	Go to *Step 28*	Go to *Step 33*
28	Locate and repair the short to ground in the injector driver circuit. Is the action complete?	—	Verify repair	—
29	1. Using the same test location as in step 26, connect a test light between the ignition terminal and one of the driver circuits. 2. Crank the engine and observe the test light. 3. Repeat for each injector driver circuit. Did the light blink during the test for each circuit?	—	Go to *Step 31*	Go to *Step 30*
30	Check for an open injector driver circuit. Was a problem found?	—	Verify repair	Go to *Step 33*

Engine Cranks But Will Not Run (Cont'd)

Step	Action	Value(s)	Yes	No
31	1. At the injector (male) side of the gray connector mentioned in step 25, connect an ohmmeter between the ignition pin and one of the driver circuit pins. 2. Check for continuity in the circuit. 3. Repeat for each injector circuit. The readings should be approximately equal to the specified value for injector resistance. Was a problem found?	12.5 Ω	Verify repair	Go to *Step 8*
32	Repair the ignition feed circuit. Is the action complete?	—	Verify repair	—
33	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
34	1. Raise the vehicle and disconnect the CKP sensor harness. 2. Ignition "ON". 3. With a test light to ground, probe the harness ignition feed terminal. Did the light illuminate?	—	Go to *Step 36*	Go to *Step 35*
35	Check the ignition feed wire between the sensor and the PCM for a short to ground or open circuit. Is the action complete?	—	Verify repair	—
36	1. Ignition "ON". 2. At the CKP harness connector, connect a test light between the ignition and ground terminals. Did the light illuminate?	—	Go to *Step 38*	Go to *Step 37*
37	Check the sensor ground circuit for an open or short to voltage. Is the action complete?	—	Verify repair	—
38	Check the signal circuit between the sensor and the PCM for a short to ground, short to voltage, or an open. Was a problem found?	—	Verify repair	Go to *Step 39*
39	Replace the CKP position sensor. Is the action complete?	—	Verify repair	Go to *Step 33*

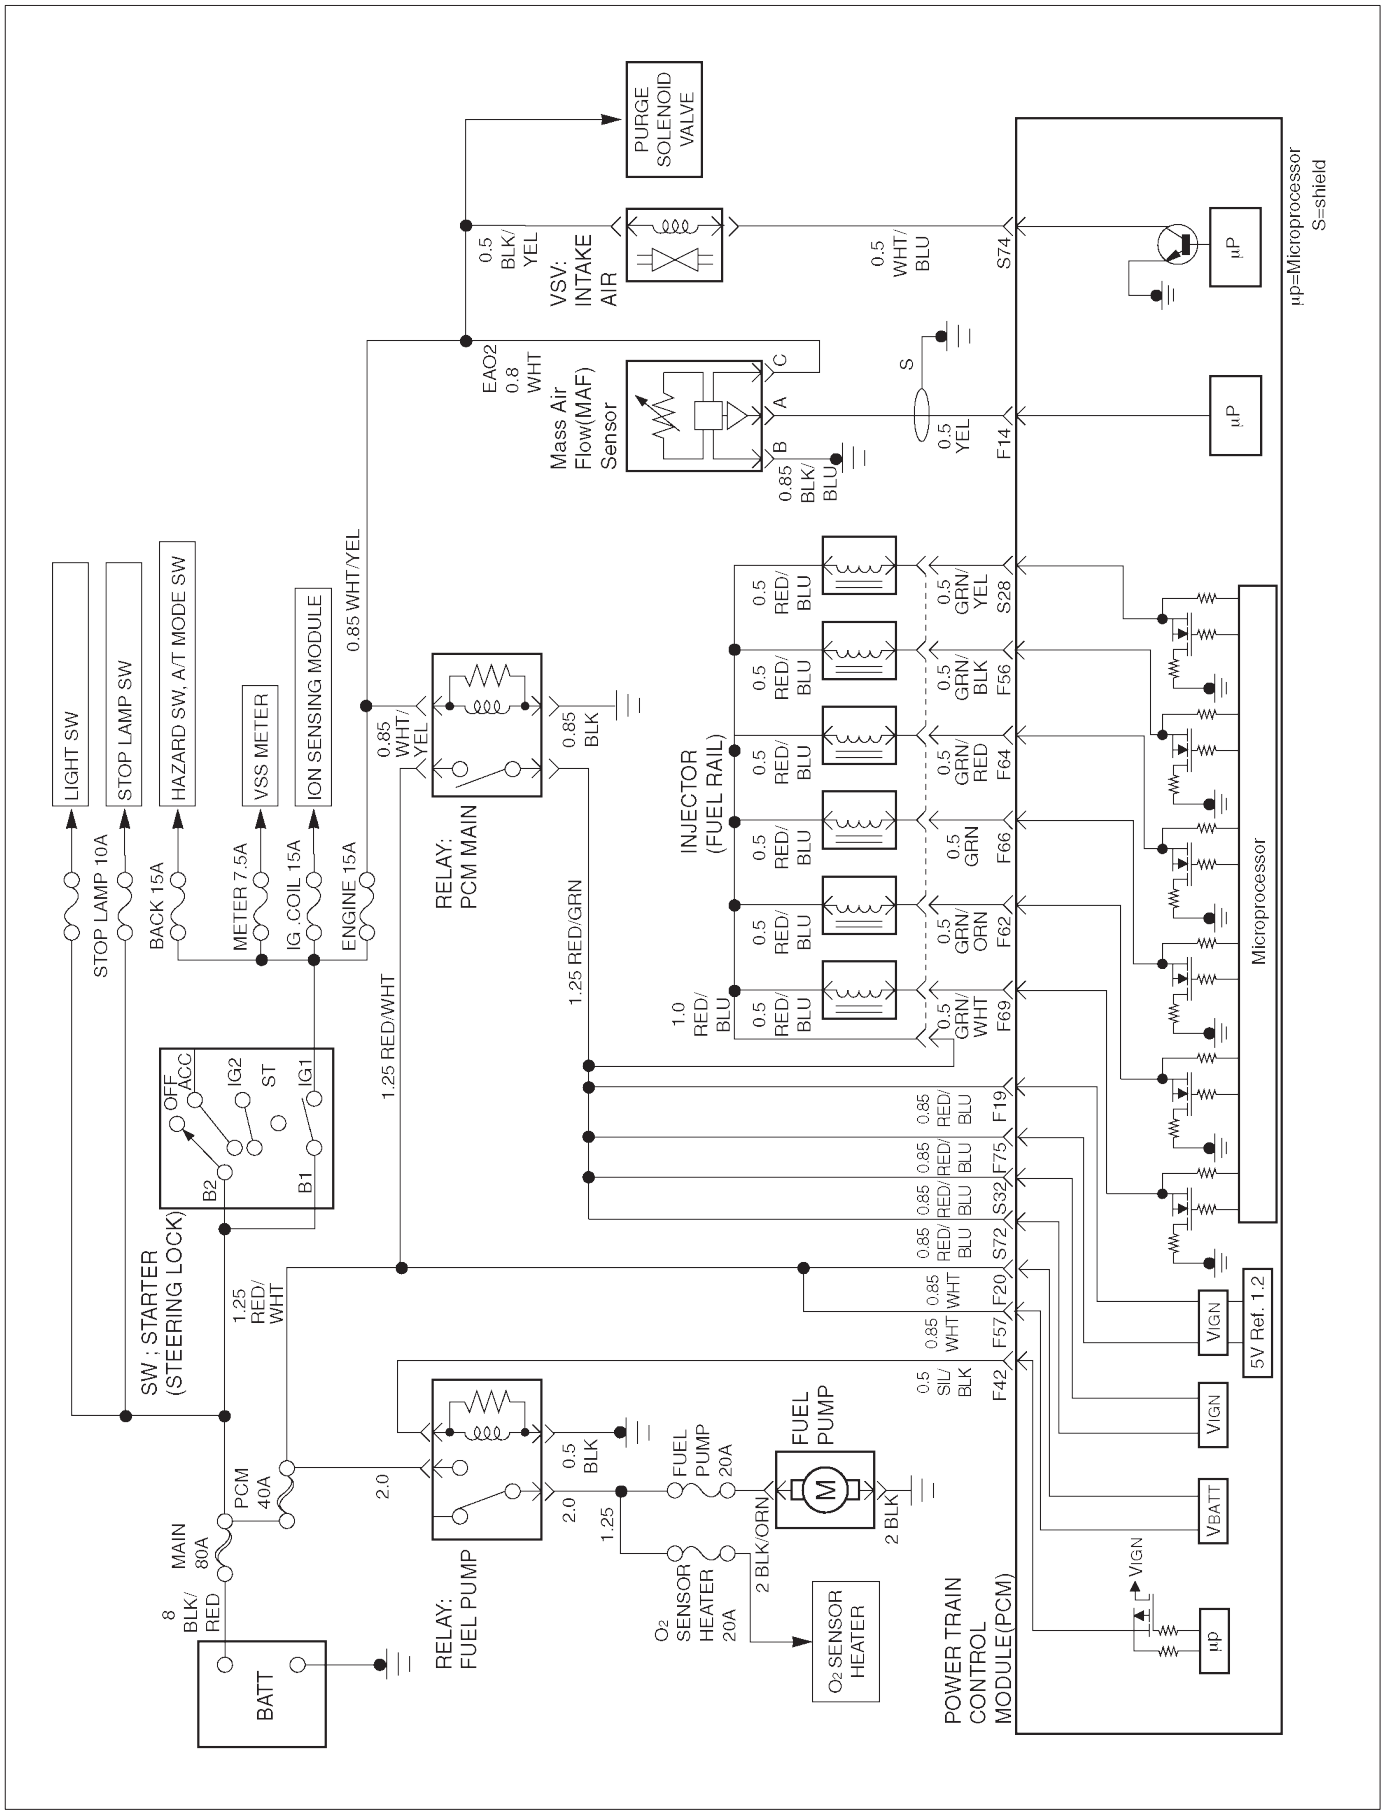Fuel System Electrical Test



D06R200031

Circuit Description

When the ignition switch is first turned “ON”, the powertrain control module (PCM) energizes the fuel pump relay which applies power to the in-tank fuel pump. The fuel pump relay will remain “ON” as long as the engine is running or cranking and the PCM is receiving 58X crankshaft position pulses. If no 58X crankshaft position pulses are present, the PCM de-energizes the fuel pump relay within 2 seconds after the ignition is turned “ON” or the engine is stopped.
The fuel pump delivers fuel to the fuel rail and injectors, then to the fuel pressure regulator. The fuel pressure regulator controls fuel pressure by allowing excess fuel to be returned to the fuel tank. With the engine stopped and ignition “ON”, the fuel pump can be turned “ON” by using a command by the Tech 2.

Diagnostic Aids

An intermittent may be caused by a poor connection, rubbed-through wire insulation, or a wire broken inside the insulation. Check for the following items:

- Poor connection or damaged harness – Inspect the PCM harness and connectors for improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. If the fuel pump is operating but incorrect pressure is noted, the fuel pump wiring is OK and the “Fuel System Pressure Test” chart should be used for diagnosis.

CAUTION: To reduce the risk of fire and personal injury:

- **It is necessary to relieve fuel system pressure before connecting a fuel pressure gauge. Refer to Fuel Pressure Relief Procedure, below.**
- **A small amount of fuel may be released when disconnecting the fuel lines. Cover fuel line fittings with a shop towel before disconnecting, to catch any fuel that may leak out. Place the towel in an approved container when the procedure is completed.**

Fuel Pressure Relief Procedure

1. Remove the fuel cap.
2. Remove the fuel pump relay from the underhood relay center.
3. Start the engine and allow it to stall.
4. Crank the engine for an additional 3 seconds.

Fuel Gauge Installation

1. Remove the shoulder fitting cap.
2. Install fuel gauge J 34730-1 to the fuel feed line located in front of and above the right side valve train cover .
3. Reinstall the fuel pump relay.


Fuel System Electrical Test

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Read the “Caution” above. 2. Relieve the fuel system pressure and install the fuel pump pressure gauge to the test fitting. 3. Ignition ON, Engine is Off. 4. Use a Tech 2 to command the fuel pump “ON”. (Refer to the Miscellaneous Test.) Is there an immediate pressure build-up which indicates the pump is running?	—	Go to *Step 3*	Go to *Step 4*
3	1. Verify that the pump is not running by removing the fuel filler cap and listening. 2. Command the pump “ON” with the Tech 2. Did the pump turn “OFF” after 2 seconds?	—	Test completed	Go to *Step 12*
4	1. Ignition “OFF”. 2. Remove the fuel pump relay. 3. Using a test light connected to ground, probe the battery feed to the relay. Did the light illuminate?	—	Go to *Step 6*	Go to *Step 5*
5	Repair short or open battery feed to fuel pump relay. Is the action complete?	—	Verify repair	—
6	1. Connect a test light between the two wires that connect to the fuel pump relay pull-in coil. 2. Ignition “ON”. Did the test light illuminate for 2 seconds and then turn off?	—	Go to *Step 12*	Go to *Step 7*
7	1. With a test light connected to battery (–), probe the fuel pump relay connector at the wire which runs from the relay pull-in coil to the PCM. 2. Ignition “ON”. Did the test light illuminate for 2 seconds and then turn off?	—	Go to *Step 8*	Go to *Step 9*
8	Locate and repair open in the fuel pump relay ground circuit. Is the action complete?	—	Verify repair	—
9	Check for short or open between the PCM and the fuel pump relay. Was a problem found?	—	Verify repair	Go to *Step 10*
10	1. Check the fuel pump relay circuit for a poor terminal connection at the PCM. 2. If a problem is found, replace terminal as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*

Fuel System Electrical Test (Cont'd)

Step	Action	Value(s)	Yes	No
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
12	1. Reconnect the fuel pump relay. 2. Disconnect the fuel pump electrical connector at the fuel tank. 3. Using a test light connected to ground, probe the fuel pump feed wire (harness side). 4. Command the fuel pump "ON" with a Tech 2. Did the light illuminate for 2 seconds?	—	Go to *Step 15*	Go to *Step 13*
13	1. Honk the horn to verify that the horn relay is functioning. 2. Substitute the horn relay for the fuel pump relay. 3. Leave the test light connected as in step 12. 4. Command the fuel pump "ON" with the Tech 2. Did the test light illuminate for 2 seconds when the fuel pump was commanded "ON"?	—	Go to *Step 17*	Go to *Step 14*
14	1. Re-connect the horn relay in its proper location. 2. Check for a short circuit, blown fuse or open circuit between the relay and the fuel tank. Is the action complete?	—	Verify repair	—
15	1. With the fuel pump electrical connector at the fuel tank disconnected, connect a test light between the feed wire and the ground wire (harness side). 2. Command the fuel pump "ON" with a Tech 2. Did the test light illuminate for 2 seconds?	—	Go to *Step 18*	Go to *Step 16*
16	Repair the open circuit in the fuel pump ground wire. Is the action complete?	—	Verify repair	—
17	1. Re-connect the horn relay in its proper location. 2. Replace the fuel pump relay. Is the action complete?	—	Verify repair	—
18	Replace the fuel pump. Is the action complete?	—	Verify repair	—

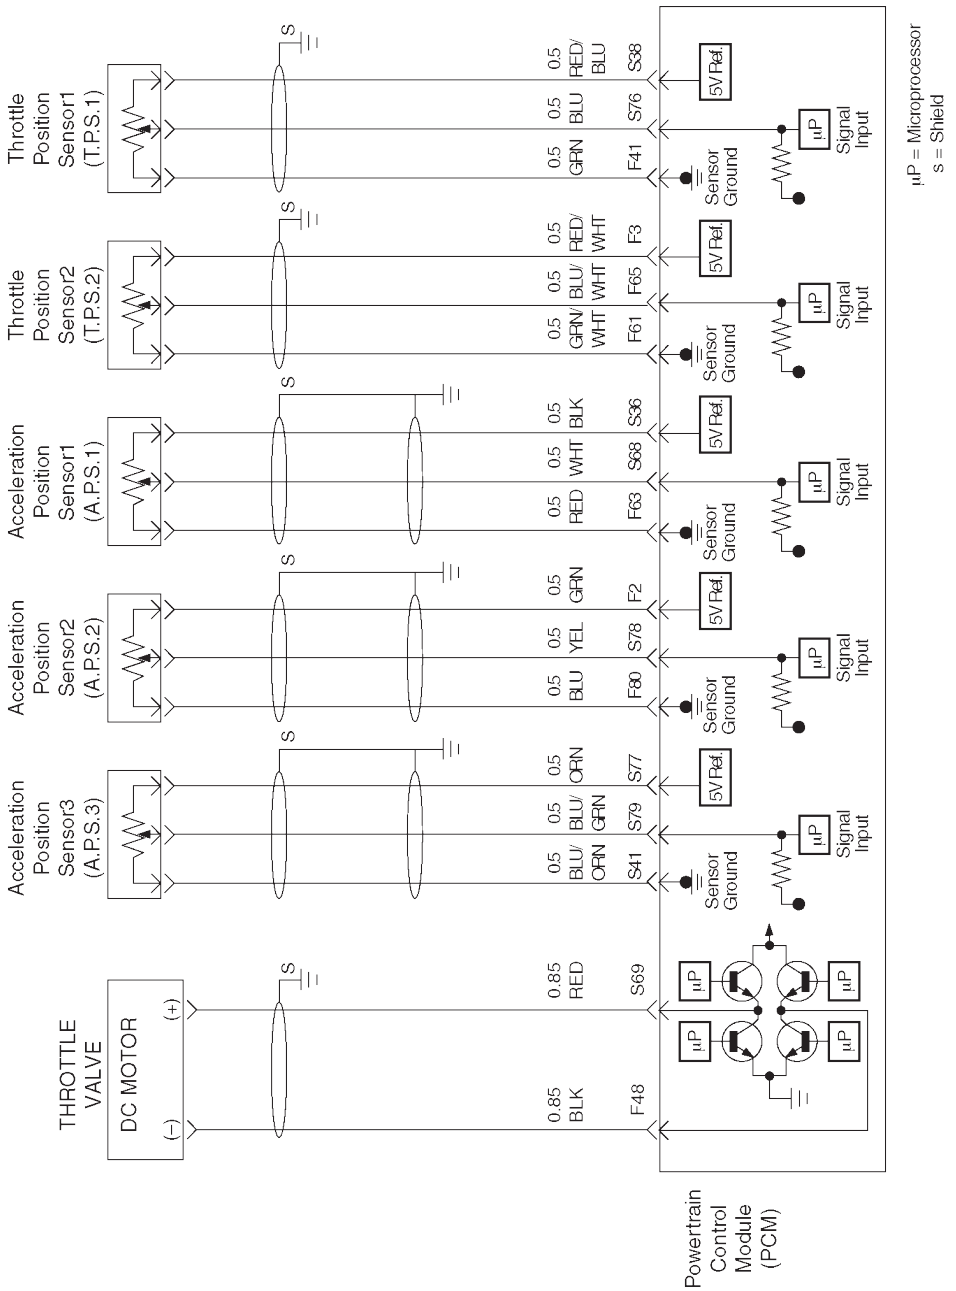Electric Throttle Control (ETC) System Check



D06R200033

Circuit Description

- The powertrain control module (PCM) controls engine speed by adjusting the position of the throttle control valve (DC motor). The throttle motor is a DC motor driven by one coil. The PCM applies current to the DC motor coil in PWM (%) to adjust the throttle valve into a passage in the throttle body to allow air flow. This method allows highly accurate control of engine speed and quick response to changes in engine load.
- The acceleration position (AP) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle will vary about 13% at idle position to about 87% at wide open throttle(WOT).

  APS signal is used to determine which DC motor will adjust throttle position.

  After the APS signal has been processed by the PCM, it will command DC motor to allow movement of throttle position.

Diagnostic Aids

- An intermittent may be caused by a poor connection, rubbed-through wire insulation or a wire broken inside the insulation. Check for poor connections or a damaged harness. Inspect the PCM harness and connector for improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.
- Throttle body – Check for objects blocking the DC motor or throttle bore, excessive deposits in the ETC passage and on the valve spring, and excessive deposits in the throttle bore and on the throttle valve plate.
- Acceleration pedal – Check for objects blocking the AP sensor or pedal arm with spring, excessive deposits in the acceleration pedal arm and on the acceleration pedal and lacking the pedal stopper rabber.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart:

2. Visually/physically inspect for the following throttle valve conditions.
3. Visually/physically inspect for the following acceleration pedal conditions.
5. Check the following circuits for throttle valve and DC moter. Check the following TP sensor resistance and DC motor.
6. Check the following circuits for acceleration pedal. Check the following AP sensor resistance.
7. Following DTC: Error for ETC system.


Electric Throttle Control (ETC) System Check

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Visually/physically inspect for the following conditions: ● Throttle body tampering. ● Restricted intake throttle system. Check for a possible collapsed air intake duct, restricted air filter element, or foreign objects blocking the air intake system. ● Throttle body: Check for objects blocking the throttle passage or throttle bore, excessive deposits in the throttle passage and on the throttle valve, and excessive deposits in the throttle bore and on the throttle plate. ● Throttle body with lever: When check for objects to send round the throttle spring lever that lever is smooth movement by less than 9 l·bm{1.0 N·m}, and spring lever has not excessive play. ● Throttle function: Check for the throttle function. When ignition switch "ON" that throttle lever is smooth operated by step on the acceleration pedal. Did any of the above require a repair?	—	Refer to *appropriate section for on-vehicle service*	Go to *Step 3*
3	Visually/physically inspect for the following conditions: ● Acceleration pedal tampering. ● Acceleration pedal : Check for objects blocking the spring or pedal arm. ● Acceleration pedal : For check for objects to move the acceleration pedal that pedal is smooth movement, and acceleration pedal arm has not excessive play. Did any of the above require a repair?	—	Refer to *appropriate section for on-vehicle service*	Go to *Step 4*
4	1. Check for a poor connection at the throttle body harness connector. 2. Check for a poor connection at the acceleration position sensor harness connector. 3. If a problem is found, replace faulty terminals as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*
5	Check the following circuits for an open, short to voltage, short to ground, or poor connection at the PCM: ● Throttle position sensor 1 circuit. ● Throttle position sensor 2 circuit. ● Throttle DC motor circuit. ● Throttle position sensor resistance. ● Throttle DC motor resistance. If a problem is found, repair as necessary. Was a problem found?	TPS, DC mortor 1–7kΩ TPS, DC mortor change resistance 0.3–100Ω	Verify repair	Go to *Step 6*

Electric Throttle Control (ETC) System Check (Cont'd)

Step	Action	Value(s)	Yes	No
6	Check the following circuits for an open, short to voltage, short to ground, or poor connection at the PCM: ● Acceleration position sensor 1 circuit. ● Acceleration position sensor 2 circuit. ● Acceleration position sensor 3 circuit. ● Acceleration position sensor resistance. If a problem is found, repair as necessary. Was the prblem found?	Vcc–GND AP1 2.6–4kΩ AP2 2.6–4kΩ AP3 4.2–6.4kΩ	Verify repair	Go to *Step 7*
7	Following below the DTCs stored: P1120, P1220, P1221, P1271, P1272, P1273, P1275, P1280, P1285, P1514, P1515, P1516, P1523	—	Go to *applicable DTC table*	Go to *Step 8*
8	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition "OFF". 3. Insall the Tech 2. 4. Ignition "ON" but not engine run. 5. Check the value for APS and TPS. NOTE: The value check of TPS must be performed in less than 15 seconds. Was a problem found?	Closed throttle APS1 = 11~15% APS2 = 85~89% APS3 = 85~89% TPS1 = 6~12% TPS2 = 88~94% Wide open throttle APS1 = 85~89% APS2 = 11~15% APS3 = 32~36% TPS1 = 79~83% TPS2 = 19~23%	Go to *Step 9*	System O.K.
9	1. Replace the faulty sensor. 2. Re–check the value for APS and TPS Refer to the procedure in step 8. Was the problem found?	—	Go to *Step 10*	Verify repair
10	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On–Vehicle Service* in *Powertrain Control Module and Sensors for Procedures*. And also refer to letest Service Bulletin. Check to see if the Latest software is releasec or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM.	—	Verify repair	—

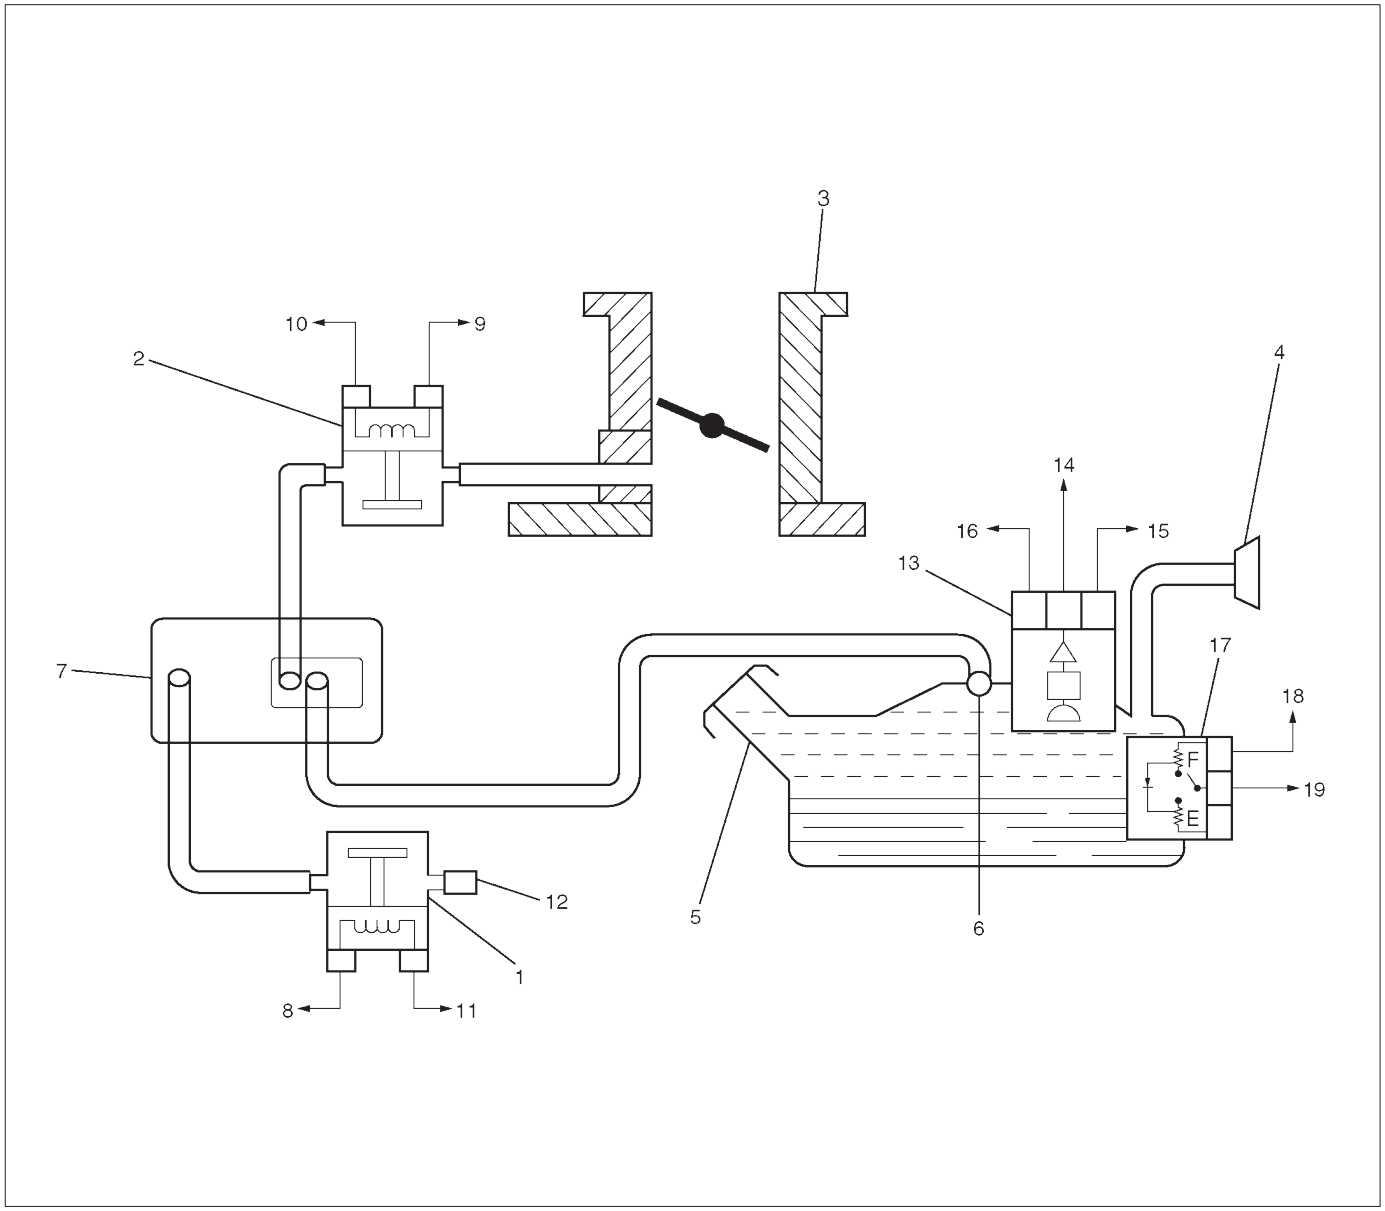Fuel System Diagnosis



060R200214

Legend

(1) Vent Solenoid
(2) EVAP Purge Solenoid
(3) Throttle Body
(4) Fuel Filler Neck
(5) Fuel Tank
(6) Rollover Valve
(7) EVAP Canister
(8) Ignition Feed
(9) Ignition Feed
(10) EVAP Purge Solenoid Drive Signal from PCM
(11) Vent Solenoid Driver Signal from PCM
(12) Vent Filter
(13) Fuel Tank Pressure Sensor
(14) Fuel Tank Pressure Signal to PCM
(15) 5 volt Reference “A” Circuit from PCM
(16) Sensor Ground Circuit from PCM
(17) Fuel Level Sensor
(18) Fuel Level Signal to PCM
(19) 5 Volt Return

Circuit Description

When the ignition switch is turned "ON", the powertrain control module (PCM) will turn "ON" the in-tank fuel pump. The in-tank fuel pump will remain "ON" as long as the engine is cranking or running and the PCM is receiving 58X crankshaft position pulses. If there are no 58X crankshaft position pulses, the PCM will turn the in-tank fuel pump "OFF" 2 seconds after the ignition switch is turned "ON" or 2 seconds after the engine stops running. The in-tank fuel pump is an electric pump within an integral reservoir. The in-tank fuel pump supplies fuel through an in-line fuel filter to the fuel rail assembly. The fuel pump is designed to provide fuel at a pressure above the pressure needed by the fuel injectors. A fuel pressure regulator, attached to the fuel rail, keeps the fuel available to the fuel injectors at a regulated pressure. Unused fuel is returned to the fuel tank by a separate fuel return line.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. Connect the fuel pressure gauge to the fuel feed line as shown in the fuel system illustration. Wrap a shop towel around the fuel pressure connection in order to absorb any fuel leakage that may occur when installing the fuel pressure gauge. With the ignition switch "ON" and the fuel pump running, the fuel pressure indicated by the fuel pressure gauge should be 333-376 kPa (48-55 psi). This pressure is controlled by the amount of pressure the spring inside the fuel pressure regulator can provide.

3. A fuel system that cannot maintain a constant fuel pressure has a leak in one or more of the following areas:
   - The fuel pump check valve.
   - The fuel pump flex line.
   - The valve or valve seat within the fuel pressure regulator.
   - The fuel injector(s).

4. Fuel pressure that drops off during acceleration, cruise, or hard cornering may case a lean condition. A lean condition can cause a loss of power, surging, or misfire. A lean condition can be diagnosed using a Tech 2. If an extremely lean condition occurs, the oxygen sensor(s) will stop toggling. The oxygen sensor output voltage(s) will drop below 500 mV. Also, the fuel injector pulse width will increase.

IMPORTANT: Make sure the fuel system is not operating in the "Fuel Cut-Off Mode".

When the engine is at idle, the manifold pressure is low (high vacuum). This low pressure (high vacuum) is applied to the fuel pressure regulator diaphragm. The low pressure (high vacuum) will offset the pressure being applied to the fuel pressure regulator diaphragm by the spring inside the fuel pressure regulator. When this happens, the result is lower fuel pressure. The fuel pressure at idle will vary slightly as the barometric pressure changes, but the fuel pressure at idle should always be less than the fuel pressure noted in step 2 with the engine "OFF".

16. Check the spark plug associated with a particular fuel injector for fouling or saturation in order to determine if that particular fuel injector is leaking. If checking the spark plug associated with a particular fuel injector for fouling or saturation does not determine that a particular fuel injector is leaking, use the following procedure:
   - Remove the fuel rail, but leave the fuel lines and injectors connected to the fuel rail. Refer to *Fuel Rail Assembly* in *On-Vehicle Service.*
   - Lift the fuel rail just enough to leave the fuel injector nozzles in the fuel injector ports.

CAUTION: In order to reduce the risk of fire and personal injury that may result from fuel spraying on the engine, verify that the fuel rail is positioned over the fuel injector ports and verify that the fuel injector retaining clips are intact.

- **Pressurize the fuel system by connecting a 10 amp fused jumper between B+ and the fuel pump relay connector.**
- **Visually and physically inspect the fuel injector nozzles for leaks.**

17. A rich condition may result from the fuel pressure being above 376 kPa (55 psi). A rich condition may cause a DTC P0132 or a DTC P0172 to set. Driveability conditions associated with rich conditions can include hard starting (followed by black smoke) and a strong sulfur smell in the exhaust.

20. This test determines if the high fuel pressure is due to a restricted fuel return line or if the high fuel pressure is due to a faulty fuel pressure regulator.

21. A lean condition may result from fuel pressure below 333 kPa (48 psi). A lean condition may cause a DTC P0131 or a DTC P0171 to set. Driveability conditions associated with lean conditions can include hard starting (when the engine is cold), hesitation, poor driveability, lack of power, surging , and misfiring.

22. Restricting the fuel return line causes the fuel pressure to rise above the regulated fuel pressure. Command the fuel pump "ON" with the Tech 2. The fuel pressure should rise above 376 kPa (55 psi) as the fuel return line becomes partially closed.

NOTE: Do not allow the fuel pressure to exceed 414 kPa (60 psi). Fuel pressure in excess of 414 kPa (60 psi) may damage the fuel pressure regulator.

CAUTION: To reduce the risk of fire and personal injury:

- **It is necessary to relieve fuel system pressure before connecting a fuel pressure gauge. Refer to Fuel Pressure Relief Procedure, below.**
- **A small amount of fuel may be released when disconnecting the fuel lines. Cover fuel line fittings with a shop towel before disconnecting, to catch any fuel that may leak out. Place the towel in an approved container when the procedure is completed.**

Fuel Pressure Relief Procedure

1. Remove the fuel cap.
2. Remove the fuel pump relay from the underhood relay center.
3. Start the engine and allow it to stall.
4. Crank the engine for an additional 3 seconds.

Fuel Gauge Installation

1. Remove the shoulder fitting cap.
2. Install fuel gauge J 34730-1 to the fuel feed line located in front of and above the right side valve train cover.
3. Reinstall the fuel pump relay.

Fuel System Diagnosis

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Turn the ignition “OFF”. 2. Turn the air conditioning system “OFF”. 3. Relieve fuel system pressure and install the fuel pressure gauge. 4. Turn the ignition “ON”. NOTE: The fuel pump will run for approximately 2 seconds. Use the Tech 2 to command the fuel pump “ON”. (Refer to the Miscellaneous Test.) 5. Observe the fuel pressure indicated by the fuel pressure gauge with the fuel pump running. Is the fuel pressure within the specified limits?	290-376 kPa (42-55 psi)	Go to *Step 3*	Go to *Step 17*
3	NOTE: The fuel pressure will drop when the fuel pump stops running, then it should stabilize and remain constant. Does the fuel pressure indicated by the fuel pressure gauge remain constant?	—	Go to *Step 4*	Go to *Step 12*
4	1. When the vehicle is at normal operation temperature, turn the ignition “ON” to build fuel pressure and observe the measurement on the gauge. 2. Start the engine and observe the fuel pressure gauge. Did the reading drop by the amount specified after the engine was started?	21-105 kPa (3-15 psi)	Go to *Step 5*	Go to *Step 9*
5	Is fuel pressure dropping off during acceleration, cruise, or hard cornering?	—	Go to *Step 6*	Check for improper fuel
6	Visually and physically inspect the following items for a restriction: ● The in-pipe fuel filter. ● The fuel feed line. Was a restriction found?	—	Verify repair	Go to *Step 7*
7	Remove the fuel tank and visually and physically inspect the following items: ● The fuel pump strainer for a restriction. ● The fuel line for a leak. ● Verify that the correct fuel pump is in the vehicle. Was a problem found in any of these areas?	—	Verify repair	Go to *Step 8*


Fuel System Diagnosis (Cont'd)

Step	Action	Value(s)	Yes	No
8	Replace the fuel pump. Is the action complete?	—	Verify repair	—
9	1. Disconnect the vacuum hose from the fuel pressure regulator. 2. With the engine idling, apply 12-14 inches of vacuum to the fuel pressure regulator. Does the fuel pressure indicated by the fuel pressure gauge drop by the amount specified?	21-105 kPa (3-15 psi)	Go to *Step 10*	Go to *Step 11*
10	Locate and repair the loss of vacuum to the fuel pressure regulator. Is the action complete?	—	Verify repair	—
11	Replace the fuel pressure regulator. Is the action complete?	—	Verify repair	—
12	1. Run the fuel pump with the Tech 2. 2. After pressure has built up, turn off the pump and clamp the supply hose shut with suitable locking pliers which will not damage the hose. Does the fuel pressure indicated by the fuel pressure gauge remain constant?	—	Go to *Step 13*	Go to *Step 15*
13	Visually inspect the fuel supply line and repair any leaks. Was a problem found?	—	Verify repair	Go to *Step 14*
14	Remove the fuel tank and inspect for leaky hose or in-tank fuel line. Was a problem found?	—	Verify repair	Go to *Step 8*
15	1. If the pliers are still clamped to the fuel supply hose, remove the locking pliers. 2. With suitable locking pliers, which will not damage the hose, clamp the fuel return line to prevent fuel from returning to the fuel tank. 3. Run the fuel pump with the Tech 2. 4. After pressure has built up, remove power to the pump. Does the fuel pressure indicated by the fuel pressure gauge remain constant?	—	Go to *Step 11*	Go to *Step 16*
16	Locate and replace any leaking fuel injector(s). Is the action complete?	—	Verify repair	—
17	Is the fuel pressure indicated by the fuel pressure gauge above the specified limit?	376 kPa (55 psi)	Go to *Step 18*	Go to *Step 21*

Fuel System Diagnosis (Cont'd)

Step	Action	Value(s)	Yes	No
18	1. Relieve the fuel pressure. Refer to the *Fuel Pressure Relief.* 2. Disconnect the fuel return line from the fuel rail. 3. Attach a length of flexible hose to the fuel rail return outlet passage. 4. Place the open end of the flexible hose into an approved gasoline container. 5. Run the fuel pump with the Tech 2. 6. Observe the fuel pressure indicated by the fuel pressure gauge with the fuel pump running. Is the fuel pressure within the specified limits?	290-376 kPa (42-55 psi)	Go to *Step 19*	Go to *Step 20*
19	Locate and correct the restriction in the fuel return line. Is the action complete?	—	Verify repair	—
20	Visually and physically inspect the fuel rail outlet passages for a restriction. Was a restriction found?	—	Verify repair	Go to *Step 11*
21	Is the fuel pressure indicated by the fuel pressure gauge above the specified value?	0 kPa (0 psi)	Go to *Step 22*	Go to *Step 23*
22	1. Command the fuel pump "ON" with the Tech 2. 2. Using suitable pliers which will not damage the fuel hose, gradually apply pressure with the pliers to pinch the flexible fuel return hose closed. **CAUTION: Do not let the fuel pressure exceed the second specified value.** Does the fuel pressure indicated by the fuel pressure gauge rise above the first specified value?	376 kPa (55 psi) 414 kPa (60 psi)	Go to *Step 11*	Go to *Step 7*
23	1. Command the fuel pump "ON" with the Tech 2. 2. Remove the fuel filler cap and listen for the sound of the fuel pump running. 3. Turn the pump off. Was the fuel pump running?	—	Go to *Step 7*	Go to *Fuel System Electrical Test Chart*

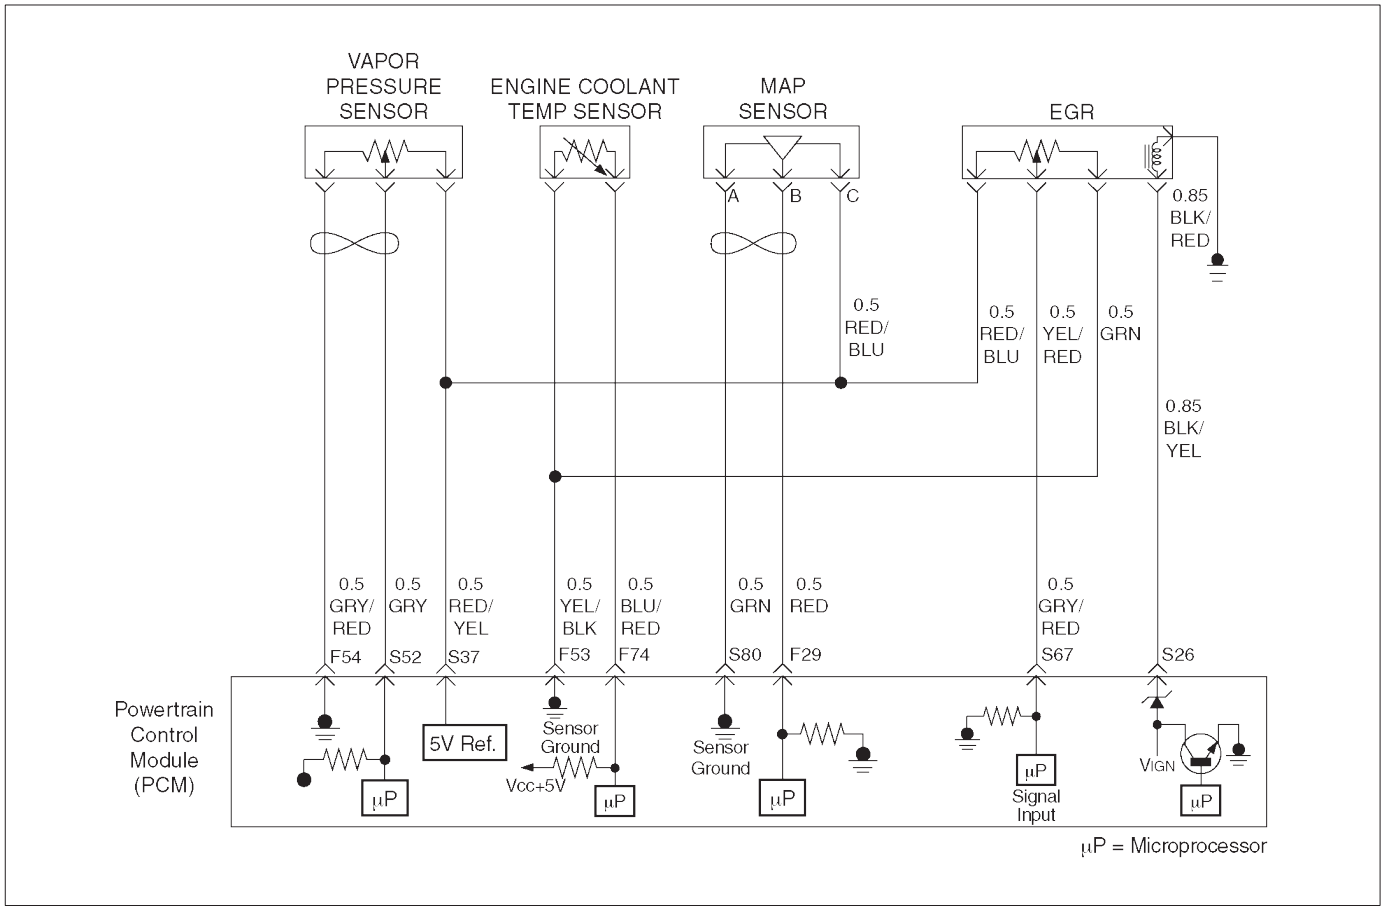Exhaust Gas Recirculation (EGR) System Check



D06R200087

Circuit Description

A properly operation exhaust gas recirculation (EGR) system will directly affect the air/fuel requirements of the engine. Since the exhaust gas introduced into the air/fuel mixture is an inert gas (contains very little or no oxygen), less fuel is required to maintain a correct air/fuel ratio. Introducing exhaust gas into the combustion chamber lowers combustion temperatures and reduces the formation of oxides of nitrogen (NOx) in the exhaust gas. Lower combustion temperatures also prevent detonation. If the EGR pintle were to stay closed, the inert exhaust gas would be replaced with air and the air/fuel mixture would be leaner. The powertrain control module (PCM) would compensate for the lean condition by adding fuel, resulting in higher long term fuel trim values.

Diagnostic Aids


The EGR valve chart is a check of the EGR system. An EGR pintle constantly in the closed position could cause detonation and high emissions of NOx. It could also result in high long term fuel trim values in the open throttle cell, but not in the closed throttle cell. An EGR pintle constantly in the open position would cause a rough idle. Also, an EGR mounted incorrectly (rotated 180°) could cause rough idle. Check for the following items:

- EGR passages – Check for restricted or blocked EGR passages.
- Manifold absolute pressure sensor – A manifold absolute pressure sensor may shift in calibration enough to affect fuel delivery. Refer to *Manifold Absolute Pressure Output Check.*

Exhaust Gas Recirculation (EGR) System Check

Step	Action	Value(s)	Yes	No
1	Check the EGR valve for looseness. Is the EGR valve Loose?	—	Go to *Step 2*	Go to *Step 3*
2	Tighten the EGR valve. Is the action complete?	—	Verify repair	—
3	1. Place the transmission selector in Park or Neutral. 2. Start the engine and idle until warm. 3. Using a Tech 2, command EGR “50% ON”. (Refer to the Miscellaneous Test.) Does the engine idle rough and lose RPMs?	—	EGR system working properly. No problem found.	Go to *Step 4*
4	1. Engine “OFF”. 2. Ignition “ON”. 3. Using a test light to ground, check the EGR harness between the EGR valve and the ignition feed. Does the test light illuminate?	—	Go to *Step 6*	Go to *Step 5*
5	Repair the EGR harness ignition feed. Was the problem corrected?	—	Verify repair	Go to *Step 6*
6	1. Remove the EGR valve. 2. Visually and physically inspect the EGR valve pintle, valve passages and adapter for excessive deposits, obstructions or any restrictions. Does the EGR valve have excessive deposits, obstructions or any restrictions?	—	Go to *Step 7*	Go to *Step 8*
7	Clean or replace EGR system components as necessary. Was the problem corrected?	—	Verify repair	Go to *Step 8*
8	1. Ground the EGR valve metal case to battery (–). 2. Using a Tech 2, command EGR “ON” and observe the EGR valve pintle for movement. Does the EGR valve pintle move according to command?	—	Go to *Step 9*	Go to *DTC P1406 chart*
9	1. Remove the EGR inlet and outlet pipes from the intake and exhaust manifolds. 2. Visually and physically inspect manifold EGR ports and EGR inlet and outlet pipes for blockage or restriction caused by excessive deposits or other damage. Do the manifold EGR ports or inlet and outlet pipes have excessive deposits, obstructions, or any restrictions?	—	Go to *Step 10*	EGR system working properly. No problem found.
10	Clean or replace EGR system components as necessary. Is the action complete?	—	Verify repair	—

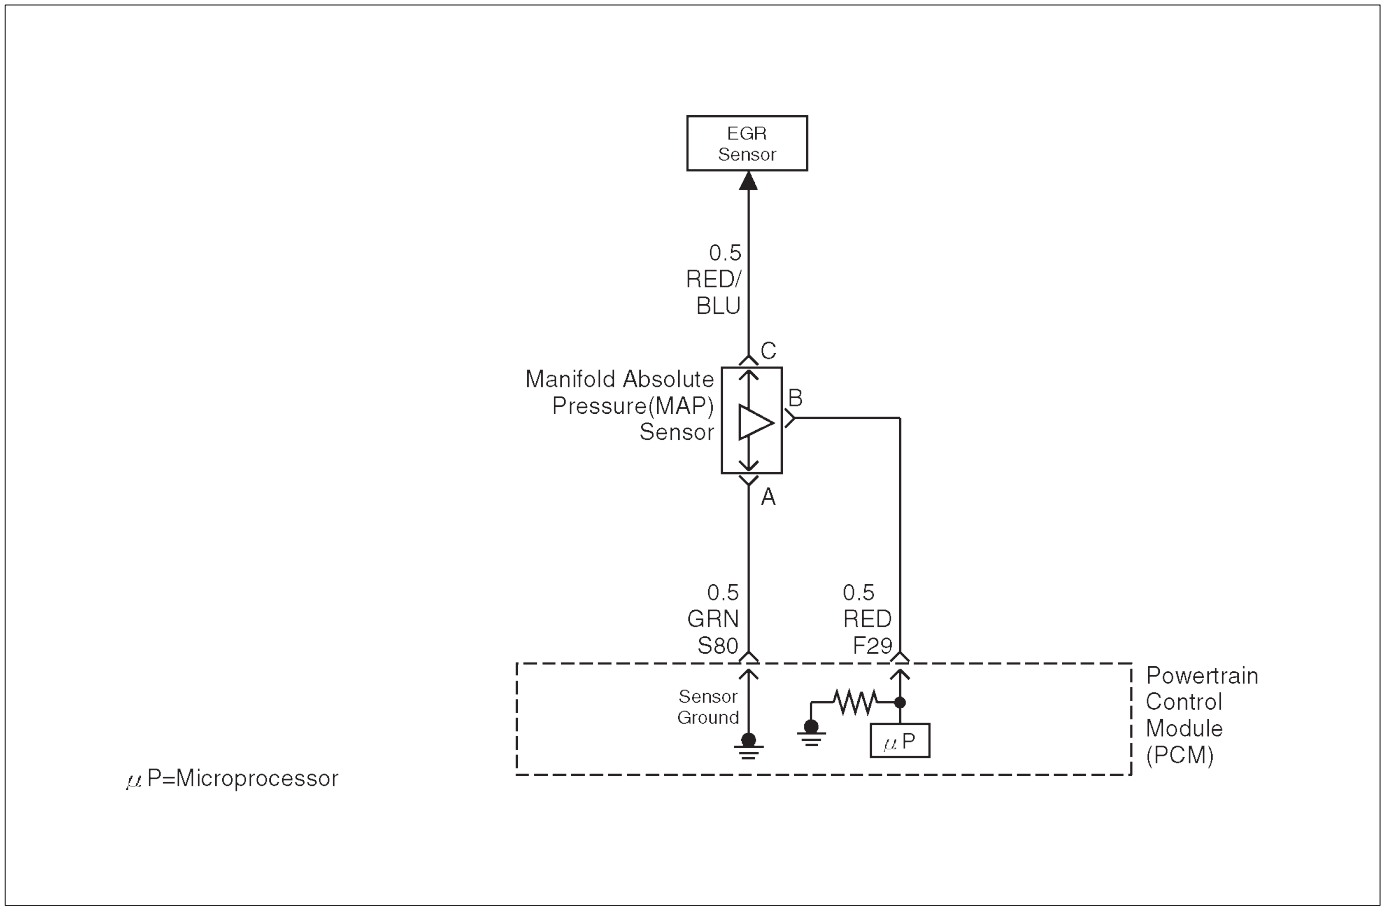Manifold Absolute Pressure (MAP) Output Check



D06R200048

Circuit Description

The manifold absolute pressure (MAP) sensor measures the changes in the intake MAP which result from engine load (intake manifold vacuum) and engine speed changes; and converts these into a voltage output. The powertrain control module (PCM) sends a 5-volt reference voltage to the MAP sensor. As the MAP changes, the output voltage of the sensor also changes. By monitoring the sensor output voltage, the PCM knows the MAP. A lower pressure (low voltage) output voltage will be about 1-2 volts at idle. Higher pressure (high voltage) output voltage will be about 4-4.8 volts at wide open throttle. The MAP sensor is also used, under certain conditions, to measure barometric pressure, allowing the PCM to make adjustments for different altitudes. The PCM uses the MAP sensor to diagnose proper operation of the EGR system, in addition to other functions.

Test Description

IMPORTANT: Be sure to used the same diagnostic test equipment for all measurements.

The number(s) below refer to the step number(s) on the Diagnostic Chart.

2. Applying 34 kPa (10 inch Hg) vacuum to the MAP sensor should cause the voltage to be 1.5-2.1 volts less than the voltage at step 1. Upon applying vacuum to the sensor, the change in voltage should be instantaneous. A slow voltage change indicates a faulty sensor.
3. Check the vacuum hose to the sensor for leaking or restriction, Be sure that no other vacuum devices are connected to the MAP hose.


IMPORTANT: Make sure the electrical connector remains securely fastened.

4. Disconnect the sensor from the bracket. Twist the sensor with your hand to check for an intermittent connection. Output changes greater than 0.10 volt indicate a bad sensor.

Manifold Absolute Pressure (MAP) Output Check

Step	Action	Value(s)	Yes	No
1	1. Turn the ignition “OFF” and leave it “OFF” for 15 seconds. 2. Ignition “ON”. Don’t crank engine. 3. The Tech 2 should indicate a manifold absolute pressure (MAP) sensor voltage. 4. Compare this scan reading to scan reading of a known good vehicle obtained using the exact same procedure as in Steps 1-4. Is the voltage reading the same +/–0.40 volt?	—	Go to *Step 2*	Go to *Step 5*
2	1. Disconnect the vacuum hose at the MAP sensor and plug the hose. 2. Connect a hand vacuum pump to the MAP sensor. 3. Start the engine. 4. Apply 34 kPa (10 in.Hg) of vacuum and note the voltage change. Is the voltage change 1.5-2.1 volts less than Step 1?	—	Go to *Step 3*	Go to *Step 4*
3	Check the sensor cover for leakage or restriction. Does the hose supply vacuum to the MAP sensor only?	—	Go to *Step 5*	Go to *Step 4*
4	Repair the hose blockage. Is the action complete?	—	Verify repair	—
5	Check the sensor connection. Is the sensor connection good?	—	Go to *Step 6*	Go to *Step 7*
6	Refer to *On-Vehicle Service, MAP Sensor.* Is the action complete?	—	Verify repair	—
7	Repair the poor connection. Is the action complete?	—	Verify repair	—

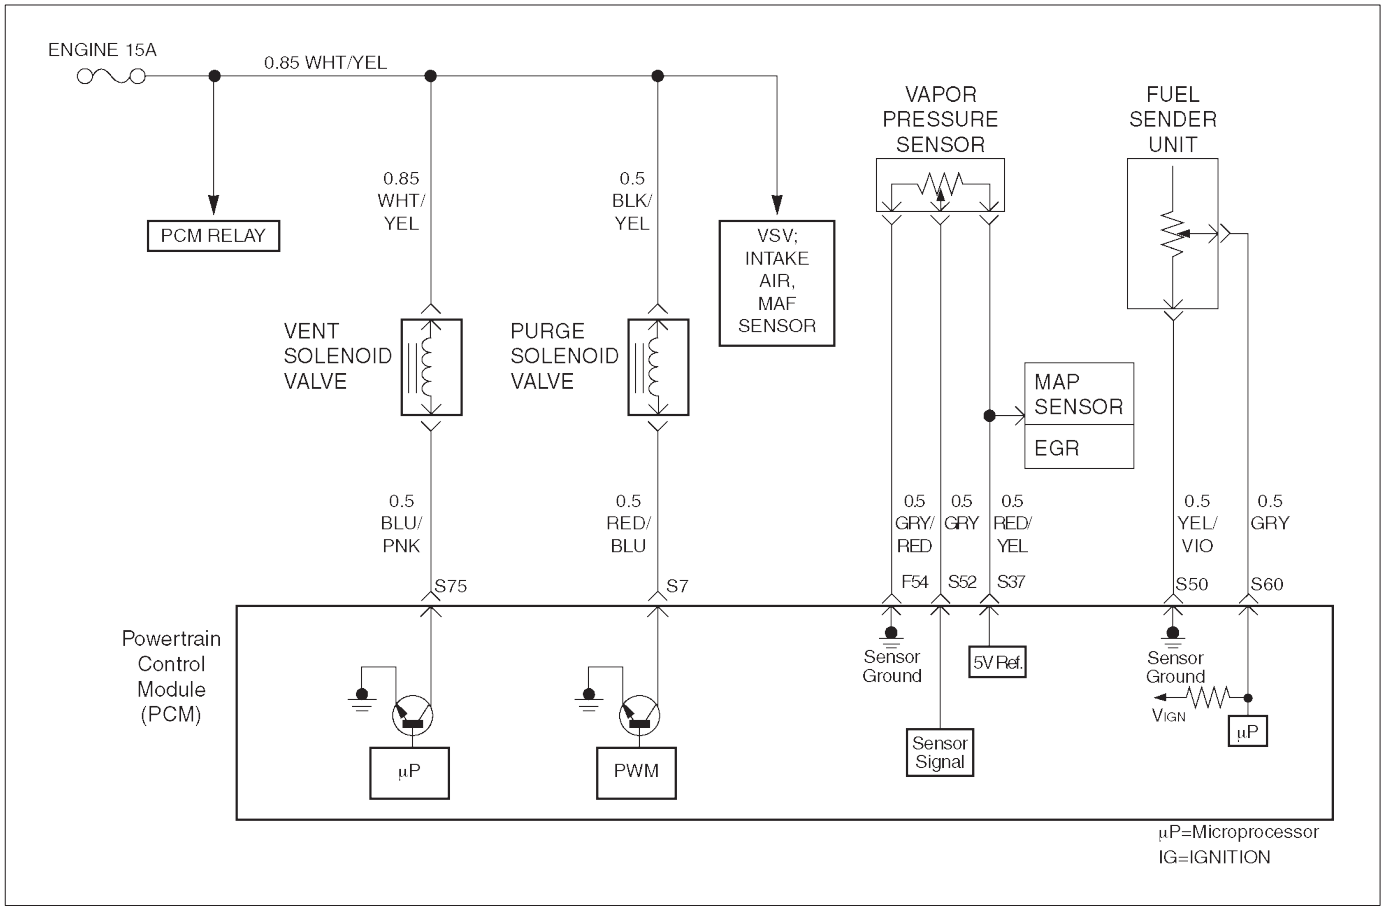Evaporative (EVAP) Emissions Canister Purge Valve Check



D06R200084

Circuit Description

Canister purge is controlled by a solenoid valve that allows manifold vacuum to purge the canister. The powertrain control module (PCM) supplies a ground to energize the solenoid valve (purge “ON”). The EVAP purge solenoid control is turned “ON” and “OFF” several times a second. The duty cycle (pulse width or “ON” time) is determined by engine operating conditions including load, throttle position, coolant temperature and ambient temperature. The duty cycle is calculated by the PCM and the purge solenoid is enabled when the appropriate conditions have been met:

- The engine run time after start is more than 60 seconds.
- The engine coolant temperature is above 30°C (86°F).
- The fuel control system is operating in the closed-loop mode.

Diagnostic Aids

- Make a visual check of vacuum hoses.
- Check the throttle body for cracks.
- Check the malfunction indicator lamp for a possible mechanical problem.

Test Description

The number(s) below refer to the step number(s) on the Diagnostic Chart.

1. Check to see if the solenoid is open or closed. The solenoid is normally de-energized in this step, so it should be closed.
2. This step checks to determine if the solenoid was open due to an electrical circuit problem or a defective solenoid.
3. This should normally energize the solenoid, opening the valve and allowing the vacuum to drop (purge “ON”).

Evaporative (EVAP) Emissions Canister Purge Valve Check

Step	Action	Value(s)	Yes	No
1	1. Ignition “OFF”. 2. Ignition “ON”, engine “OFF”. 3. At the throttle body, disconnect the hose that goes to the purge solenoid. 4. Using a hand vacuum pump with an attached vacuum gauge J 23738-A, apply vacuum (10 in. Hg or 34 kPa) to the solenoid. Does the solenoid hold the vacuum?	—	Go to *Step 3*	Go to *Step 2*
2	1. Disconnect the solenoid electrical connector. 2. As in Step 1, apply vacuum (10 in. Hg or 34 kPa) to the solenoid. Does the solenoid hold the vacuum?	—	Go to *Step 4*	Go to *Step 7*
3	1. At the throttle body, put a cap over the vacuum port where the hose was disconnected for testing. This is to prevent a vacuum leak when the engine is started. 2. Ignition “OFF”. 3. Install the Tech 2. 4. Apply vacuum to the purge solenoid with the hand vacuum pump. 5. Start the engine, run at 2500 RPM. 6. Using the Tech 2, select Powertrain, 3.5–V6 6VE1, F3: Misc. Tests, F2: EVAP Purge, F0: EVAP Purge. (Refer to the Misellaneous Test.) 7. Turn the purge solenoid “ON”. Did the vacuum drop when the purge was turned on?	—	Go to *Step 8*	Go to *Step 9*
4	Check for a short to ground in the S7 Pin wire. Is there a short?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the short to ground. Is the action complete?	—	Verify repair	—
6	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service*in *Powertrain Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
7	Replace the faulty purge solenoid. Refer to *On-Vehicle Service, EVAP Canister Purge Solenoid.* Is the action complete?	—	Verify repair	—

Evaporative (EVAP) Emissions Canister Purge Valve Check (Cont'd)

Step	Action	Value(s)	Yes	No
8	1. Turn the ignition "OFF". 2. At the throttle body, install a vacuum gauge where the hose from the purge solenoid was disconnected for testing. 3. Start the engine. 4. Stabilize the engine speed at about 2500 RPM. 5. Momentarily snap the throttle open and let it return to idle. Is there approximately 10 in. Hg (34 kPa) of vacuum available at the EVAP emission canister purge solenoid?	—	No problem found in the EVAP emission canister purge valve check	Check the Procedure Refer to *Diagnostic Aids*
9	1. Disconnect the solenoid electrical connector. 2. Connect a test lamp between the harness terminals. Does the test lamp light?	—	Go to *Step 7*	Go to *Step 10*
10	Probe terminal A and terminal B with a test lamp to ground. Does the test lamp light on both terminals?	—	Go to *Step 11*	Go to *Step 12*
11	Repair the short to voltage in the S7 Pin wire. Is the action complete?	—	Verify repair	—
12	Does one of the terminals light the test lamp?	—	Go to *Step 13*	Go to *Step 14*
13	Check for an open in the S7 Pin wire between the purge solenoid and the PCM. Was there an open circuit?	—	Go to *Step 15*	Go to *Step 6*
14	Repair the open in the BLK/YEL wire. Is the action complete?	—	Verify repair	—
15	Repair the open in the S7 Pin wire. Is the action complete?	—	Verify repair	—

PCM Diagnostic Trouble Codes

The following table lists the diagnostic trouble codes supported by this vehicle application. If any DTCs not listed here are displayed by a Tech 2, the Tech 2 data may be faulty; notify the Tech 2 manufacturer of any DTCs displayed that are not included in the following table.

PCM Diagnostic Trouble Codes


DTC	Description	Type	Illuminate MIL (Check Engine Lamp)	Illuminate RPL (Reduced Power Lamp)
P0101	MAF System Performance	B	Yes	No
P0102	MAF Sensor Circuit Low Frequency	B	Yes	No
P0103	MAF Sensor Circuit High Frequency	B	Yes	No
P0106	MAP Rationality/Performance	B	Yes	No
P0107	MAP Circuit Low Input Voltage	B	Yes	No
P0108	MAP Circuit High Input Voltage	B	Yes	No
P0112	IAT Circuit Low Input Voltage	B	Yes	No
P0113	IAT Circuit High Input Voltage	B	Yes	No
P0117	ECT Circuit Low Input Voltage	B	Yes	No
P0118	ECT Circuit High Input Voltage	B	Yes	No
P0125	ECT Insufficient for Closed Loop Fuel Control	B	Yes	No
P0131	O2 Sensor Circuit Low Voltage (Bank 1 Sensor 1)	B	Yes	No
P0132	O2 Sensor Circuit High Voltage (Bank 1 Sensor 1)	B	Yes	No
P0133	O2 Sensor Circuit Slow Response (Bank 1 Sensor 1)	B	Yes	No
P0134	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 1)	B	Yes	No
P0135	O2 Sensor Heater Circuit (Bank 1 Sensor 1)	B	Yes	No
P0137	O2 Sensor Circuit Low Voltage (Bank 1 Sensor 2)	B	Yes	No
P0138	O2 Sensor Circuit High Voltage (Bank 1 Sensor 2)	B	Yes	No
P0140	O2 Sensor Circuit No Activity Detected (Bank 1 Sensor 2)	B	Yes	No
P0141	O2 Sensor Heater Circuit (Bank 1 Sensor 2)	B	Yes	No
P0151	O2 Sensor Circuit Low Voltage (Bank 2 Sensor 1)	B	Yes	No
P0152	O2 Sensor Circuit High Voltage (Bank 2 Sensor 1)	B	Yes	No
P0153	O2 Sensor Circuit Slow Response (Bank 2 Sensor 1)	B	Yes	No
P0154	O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 1)	B	Yes	No
P0155	O2 Sensor Heater Circuit (Bank 2 Sensor 1)	B	Yes	No
P0157	O2 Sensor Circuit Low Voltage (Bank 2 Sensor 2)	B	Yes	No
P0158	O2 Sensor Circuit High Voltage (Bank 2 Sensor 2)	B	Yes	No
P0160	O2 Sensor Circuit No Activity Detected (Bank 2 Sensor 2)	B	Yes	No
P0161	O2 Sensor Heater Circuit (Bank 2 Sensor 2)	B	Yes	No
P0171	O2 Sensor – System too Lean (Bank 1)	B	Yes	No
P0172	O2 Sensor – System too Rich (Bank 1)	B	Yes	No
P0174	O2 Sensor – System too Lean (Bank 2)	B	Yes	No
P0175	O2 Sensor – System too Rich (Bank 2)	B	Yes	No
P0201	Injector 1 Control Circuit	A	Yes	No

DTC	Description	Type	Illuminate MIL (Check Engine Lamp)	Illuminate RPL (Reduced Power Lamp)
P0202	Injector 2 Control Circuit	A	Yes	No
P0203	Injector 3 Control Circuit	A	Yes	No
P0204	Injector 4 Control Circuit	A	Yes	No
P0205	Injector 5 Control Circuit	A	Yes	No
P0206	Injector 6 Control Circuit	A	Yes	No
P0300	Engine Misfire Detected	B	Yes	No
P0325	ION Sensing Module	B	Yes	No
P0336	CKP Sensor Circuit Range/Performance (58X)	B	Yes	No
P0337	CKP Sensor Circuit No signal (58X)	B	Yes	No
P0351	Ignition 1 Control Circuit	A	Yes	No
P0352	Ignition 2 Control Circuit	A	Yes	No
P0353	Ignition 3 Control Circuit	A	Yes	No
P0354	Ignition 4 Control Circuit	A	Yes	No
P0355	Ignition 5 Control Circuit	A	Yes	No
P0356	Ignition 6 Control Circuit	A	Yes	No
P0401	EGR Flow Insufficient	B	Yes	No
P0402	EGR Flow Excessive	B	Yes	No
P0404	EGR Range/Performance (Open Valve)	B	Yes	No
P0405	EGR Sensor Circuit Low Voltage	B	Yes	No
P0406	EGR Sensor Circuit High Voltage	B	Yes	No
P0420	Catalyst System Low Efficiency (Bank 1)	A	Yes	No
P0430	Catalyst System Low Efficiency (Bank 2)	A	Yes	No
P0440	EVAP Control System	B	Yes	No
P0442	EVAP Control System Small Leak Detected	B	Yes	No
P0444	EVAP Purge Control Circuit Open	D	No	No
P0445	EVAP Purge Control Circuit Short	D	No	No
P0446	EVAP Canister Vent Control Malfunction	B	Yes	No
P0447	EVAP Vent Solenoid Circuit Open	D	No	No
P0448	EVAP Vent Solenoid Circuit Short	D	No	No
P0452	EVAP Control System Tank Pressure Sensor Low Input	B	Yes	No
P0453	EVAP Control System Tank Pressure Sensor High Input	B	Yes	No
P0456	EVAP Control System Very Small Leak Detected	B	Yes	No
P0461	Fuel Level Sensor Circuit Range/Performance	D	No	No
P0462	Fuel Level Sensor Circuit Low Input Voltage	B	Yes	No
P0463	Fuel Level Sensor Circuit High Input Voltage	B	Yes	No
P0464	Fuel Level Sensor Noisy Signal	D	No	No
P0502	No VSS Signal	B	Yes	No
P0506	Idle Speed Control RPM too Low	B	Yes	No
P0507	Idle Speed Control RPM too High	B	Yes	No
P0562	System Voltage is Low	D	No	No

DTC	Description	Type	Illuminate MIL (Check Engine Lamp)	Illuminate RPL (Reduced Power Lamp)
P0563	System Voltage is High	B	Yes	No
P0565	Cruise Main Switch Circuit Error	D	No	No
P0566	Cruise Cancel Switch Circuit Error	D	No	No
P0567	Cruise Resume Switch Circuit Error	D	No	No
P0568	Cruise Set Switch Circuit Error	D	No	No
P0571	No Brake Switch Signal	D	No	No
P0601	PCM/ECM Memory Checksum	A	Yes	No
P0602	PCM/ECM Programming error	D	No	No
P0604	PCM/ECM RAM error	D	No	No
P0606	PCM/ECM Internal Performance	D	No	No
P0660	VIM Solenoid Circuit Open	D	No	No
P0662	VIM Solenoid Circuit Short	D	No	No
P1106	MAP Circuit Intermittent High Voltage)	D	No	No
P1107	MAP Circuit Intermittent Low Input Voltage	D	No	No
P1111	IAT Circuit Intermittent High Voltage	D	No	No
P1112	IAT Circuit Intermittent Low Input Voltage	D	No	No
P1114	ECT Circuit Intermittent Low Voltage	D	No	No
P1115	ECT Circuit Intermittent High Voltage	D	No	No
P1120	TPS1 Circuit	B	Yes	No
P1125	ETC Limit Performance Mode	A	Yes	Yes
P1133	O2 Sensor – Too Few Rich/Lean and Lean/Rich Switches (Bank 1 Sensor 1)	B	Yes	No
P1134	O2 Sensor – Transition Switch Time ratio (Bank 1 Sensor 1)	B	Yes	No
P1153	O2 Sensor – Too Few Rich/Lean and Lean/Rich Switches (Bank 2 Sensor 1)	B	Yes	No
P1154	O2 Sensor – Transition Switch Time ratio (Bank 2 Sensor 1)	B	Yes	No
P1167	Fuel supply System RICH During Decel Fuel Cut Off (Bank 1)	D	No	No
P1169	Fuel supply System RICH During Decel Fuel Cut Off (Bank 2)	D	No	No
P1171	Fuel supply System Lean During Power Enrichment	D	No	No
P1220	TPS2 Circuit	B	Yes	No
P1221	TPS1–TPS2 Correlation (Circuit Performance)	D	No	No
P1271	APS1–APS2 Correlation (Circuit Performance)	D	No	No
P1272	APS2–APS3 Correlation (Circuit Performance)	D	No	No
P1273	APS1–APS3 Correlation (Circuit Performance)	D	No	No
P1275	APS1 Circuit	B	Yes	No
P1280	APS2 Circuit	B	Yes	No
P1285	APS3 Circuit	B	Yes	No
P1290	ETC Forced Idle Mode	A	Yes	Yes
P1295	ETC Power Management Mode	A	Yes	Yes
P1299	ETC Forced Engine Shutdown in Mode	A	Yes	Yes
P1310	ION Sensing Module Diagnostic	A	Yes	No

DTC	Description	Type	Illuminate MIL (Check Engine Lamp)	Illuminate RPL (Reduced Power Lamp)
P1311	ION Sensing Module SEC 1 Line Circuit Fault	A	Yes	No
P1312	ION Sensing Module SEC 2 Line Circuit Fault	A	Yes	No
P1326	ION Sensing Module Combustion Quality circuit	A	Yes	No
P1340	ION Sensing Module – Cylinder Synchronization	B	Yes	No
P1404	EGR Range/Performance (Closed Valve)	B	Yes	No
P1441	EVAP Control System Continuous Open Purge Flow	B	Yes	No
P1514	TPS–MAF Correlation	A	Yes	No
P1515	Command–Acrual TPS Correlation	A	Yes	No
P1516	Command–Acrual TPS Correlation Error	A	Yes	No
P1523	Throttle Actuator Control Return Performance	D	No	No
P1574	Brake Switch No Operation	D	No	No
P1635	Reference Voltage #1 Circuit	D	No	No
P1636	PCM RAM Stack	D	No	No
P1639	Reference Voltage #2 Circuit	D	No	No
P1640	ODM Output circuit Fault	D	No	No
P1650	QDM Output Circuit Fault	D	No	No

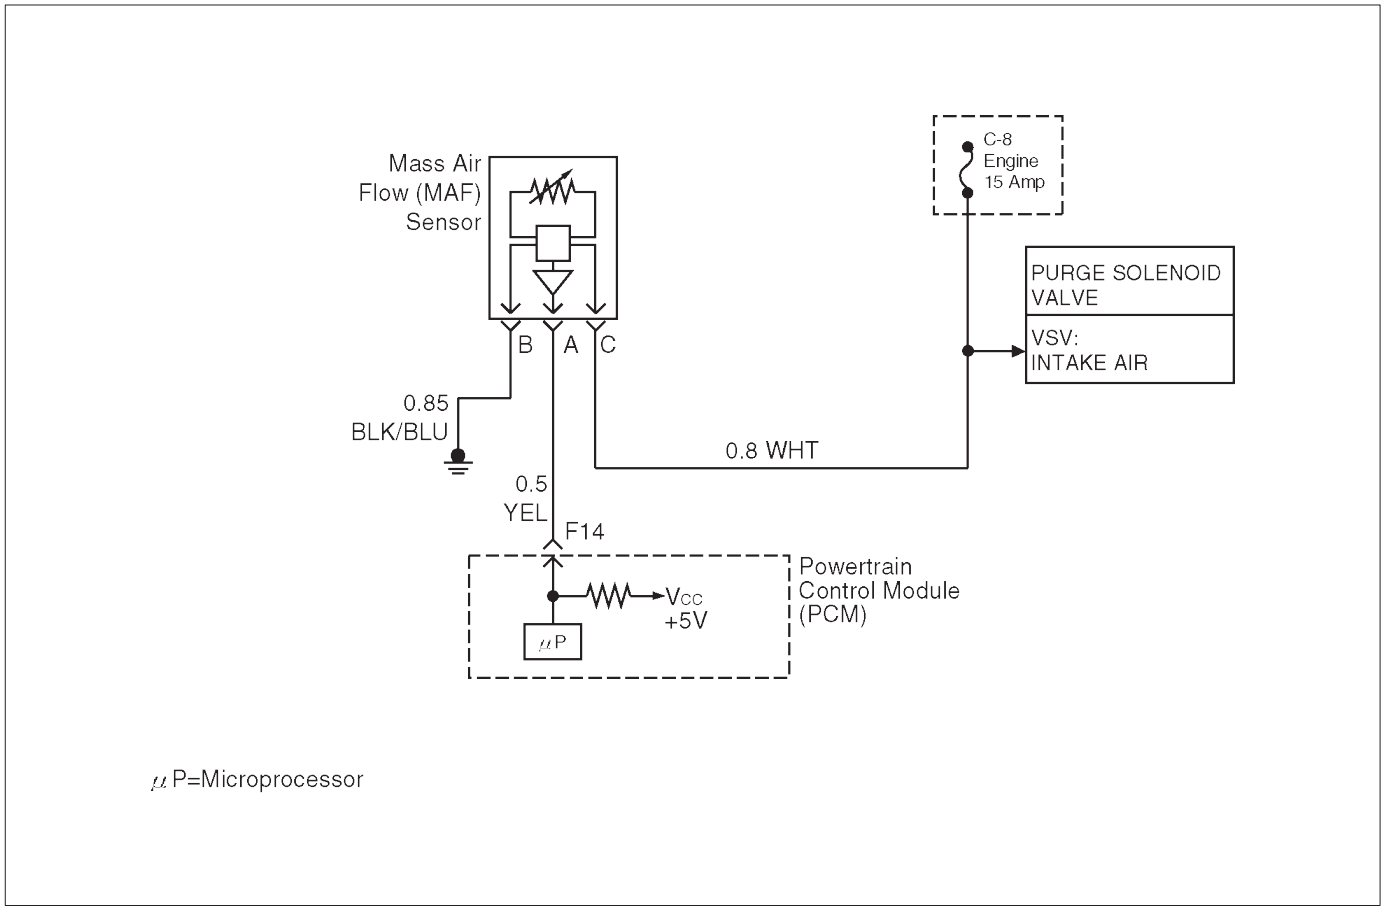Diagnostic Trouble Code (DTC) P0101 MAF System Performance



D06R200047

Circuit Description

The mass air flow (MAF) sensor measures the amount of air which passes through it into the engine during a given time. The powertrain control module (PCM) uses the mass air flow information to monitor engine operating conditions for fuel delivery calculations. A large quantity of air entering the engine indicates an acceleration or high load situation, while a small quantity or air indicates deceleration or idle.

The MAF sensor produces a frequency signal which can be monitored using a Tech 2. The frequency will vary within a range of around 3 to 7g/s at idle. DTC P0101 will be set if the signal from the MAF sensor does not match a predicted value based on throttle position and engine RPM.

Conditions for setting the DTC

- The engine is running.
- No TP sensor and MAP sensor DTCs are set.
- No MAF frequency DTCs are set.
- System voltage is between 11.5 volts and 16 volts.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0101 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P0101 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.
- The duct work at the MAF sensor for leaks.
- An engine vacuum leak.
- The PCV system for vacuum leaks.
- An incorrect PCV valve.
- The engine oil dip stick not fully seated.
- The engine oil fill cap loose or missing.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken

locks, improperly formed or damaged terminals, and poor terminal to wire connection.

- Damaged harness- Inspect the wiring harness for damage. If the harness appears to be OK, observe the Mass Air Flow (MAF) display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.
- Plugged intake air duct or filter element
- A wide–open throttle acceleration from a stop should cause the mass air flow displayed on a Tech 2 to increase from about 3–6 g/s at idle to 100 g/s or greater at the time of the 1–2 shift. If not, check for a restriction.

A change in the display will indicate the location of the fault.

If DTC P0101 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P001 Diagnostic Chart may isolate the cause of the fault.


DTC P0101 – MAF System Performance

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “OFF”. 2. Disconnect the Mass Air Flow (MAF) Sensor harness connector from the MAF Sensor. 3. Place an unpowered test lamp between the 12 volt signal circuit and the ground circuit, both at the MAF Sensor connector. 4. Ignition “ON”, Engine“OFF”. Did the test lamp illuminate?	—	Go to *Step 6*	Go to *Step 3*
3	1. Ignition “ON”, Engine “OFF”. 2. Using a Digital Voltmeter (DVM), check the 12 volt signal circuit for the correct voltage. Did the DVM indicate a value within the following range?	11.5 to 12.5 Volt	Go to *Step 5*	Go to *Step 4*
4	1. Ignition “OFF”. 2. Check the 12 volt signal circuit for the following conditions: • An open circuit • A short to ground Was the problem found?	—	Verify repair	—
5	Check the MAF ground circuit for the following conditions: • An open circuit • A short to voltage Was a problem found?	—	Verify repair	—
6	1. Ignition “OFF”. 2. Check the MAF Sensor signal circuit between the PCM and the MAF Sensor for the following conditions: • An open circuit • A short to ground • A short to battery voltage Was a problem found?	—	Verify repair	Go to *Step 7*

DTC P0101 – MAF System Performance (Cont'd)

Step	Action	Value(s)	Yes	No
7	1. Connect the MAF Sensor wiring harness connector to the MAF Sensor. 2. Connect the Tech 2 to the vehicle. 3. Place the Transmission in Park/Neutral, and fully apply the Parking Brake. 4. Start the engine. 5. Select the Mass Air Flow (MAF) parameter on the Tech 2. With the engine idling, does the Tech 2 display the following value(s)?	3 to 7 g/s	Go to *Step 8*	Go to *Step 9*
8	1. Ignition "OFF". 2. Disconnect the MAF sensor connector. 3. Ignition "ON", engine idling. 4. Using a Tech 2, monitor "MAF Frequency". Does the Tech 2 indication a "MAF Frequency" at the specified value?	0 g/s	Go to *Step 10*	Go to *Step 9*
9	Replace the MAF Sensor. Is the action complete?	—	Verify repair	—
10	Replace the PCM. **IMPORTANT:** The PCM must be reprogrammed. Refer to PCM reprogramming. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

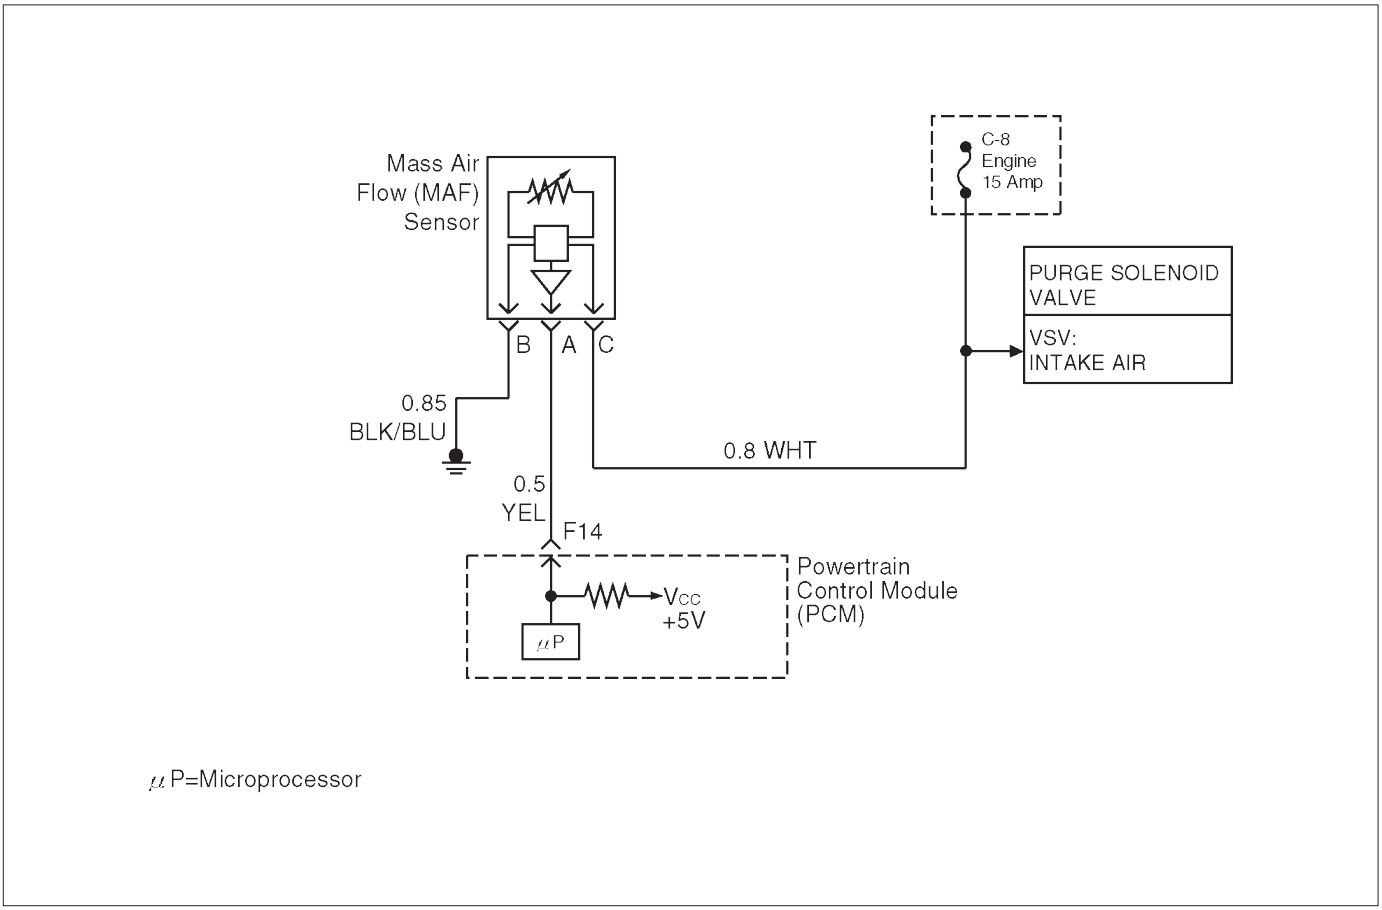Diagnostic Trouble Code (DTC)
P0102 MAF Sensor Circuit Low Frequency



D06R200047

Circuit Description

The mass air flow (MAF) sensor measures the amount of air which passes through it into the engine during a given time. The powertrain control module (PCM) uses the mass air flow information to monitor engine operating conditions for fuel delivery calculations. A large quantity of air entering the engine indicates an acceleration or high load situation, while a small quantity of air indicates deceleration or idle.

The MAF sensor produces a frequency signal which can be monitored using a Tech 2. The frequency will vary within a range of around 3 to 7g/s at idle. DTC P0102 will be set if the signal from the MAF sensor is below the possible range of a normally operating MAF sensor.

Conditions for Setting the DTC

- The engine is running above 500 RPM for more than 10 seconds.
- System voltage is above 11.5 volts.
- MAF signal frequency is below 1.6g/s for a total of 50-percent of the last 1000 samples monitored. A sample is taken every cylinder event.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0102 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0102 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Misrouted harness – Inspect the MAF sensor harness to ensure that it is not routed too close to high voltage wires.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Tech 2 while moving connectors and wiring harnesses related to the MAF sensor. A change in the display will indicate the location of the fault.
- Plugged intake air duct or filter element – A wide-open throttle acceleration from a stop should cause the

mass air flow displayed on a Tech 2 to increase from about 3-6 g/second at idle to 100 g/second or greater at the time of the 1-2 shift. If not, check for a restriction.

If DTC P0102 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. This step verifies that the problem is present at idle.
4. A voltage reading of less than 4 or over 5 volts at the MAF sensor signal circuit indicates a fault in the wiring or a poor connection.
5. This verifies that ignition feed voltage and a good ground are available at the MAF sensor.


DTC P0102 – MAF Sensor Circuit Low Frequency

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Start the engine. 2. With the engine idling, monitor “MAF Frequency” display on the Tech 2. Is the “MAF Frequency” below the specified value?	3-7 g/s	Go to *Step 3*	Go to *Step 5*
3	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor “DTC” info for DTC P0102. Does the Tech 2 indicate DTC P0102 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Ignition “OFF”. 2. Disconnect the MAF sensor connector. 3. Ignition “ON”, engine “OFF”. 4. Using a DVM, measure voltage between the MAF sensor signal circuit and battery ground. Is the voltage near the specified value?	11.5–12 V	Go to *Step 5*	Go to *Step 8*
5	Connect a test light between the MAF sensor ignition feed and ground circuits at the MAF sensor harness connector. Is the test light “ON”?	—	Go to *Step 7*	Go to *Step 6*
6	Connect a test light between the MAF sensor ignition feed circuit and battery ground. Is the test light “ON”?	—	Go to *Step 11*	Go to *Step 7*
7	1. Check for a poor connection at the MAF sensor. 2. If a poor connection is found, replace the faulty terminal(s). Was a poor connection found?	—	Verify repair	Go to *Step 12*
8	1. Ignition “OFF”. 2. Disconnect the MAF sensor. 3. Disconnect the PCM connector for the MAF signal circuit. 4. Ignition “ON”, engine “OFF”. 5. With the DVM, measure the voltage between the MAF signal terminal at the PCM and battery ground. Is the voltage under the specified value?	0 V	Go to *Step 9*	Go to *Step 10*

DTC P0102 – MAF Sensor Circuit Low Frequency (Cont'd)

Step	Action	Value(s)	Yes	No
9	1. Ignition "OFF". 2. Disconnect the PCM connector. 3. Ignition "ON". 4. Check the MAF sensor signal circuit for a short to 5 volts. Is the action complete?	—	Verify repair	—
10	1. Ignition "OFF". 2. Disconnect the PCM connector. 3. Ignition "ON". 4. Check the MAF sensor signal circuit between the PCM and the MAF sensor for an open, short to ground, or short to the MAF ground circuit. Is the action complete?	—	Verify repair	Go to *Step 13*
11	Locate and repair the open in the ground circuit to the MAF sensor. Is the action complete?	—	Verify repair	—
12	Locate and repair the open in the ignition feed circuit to the MAF sensor. Is the action complete?	—	Verify repair	—
13	Replace the MAF sensor. Is the action complete?	—	Verify repair	Go to *Step 14*
14	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

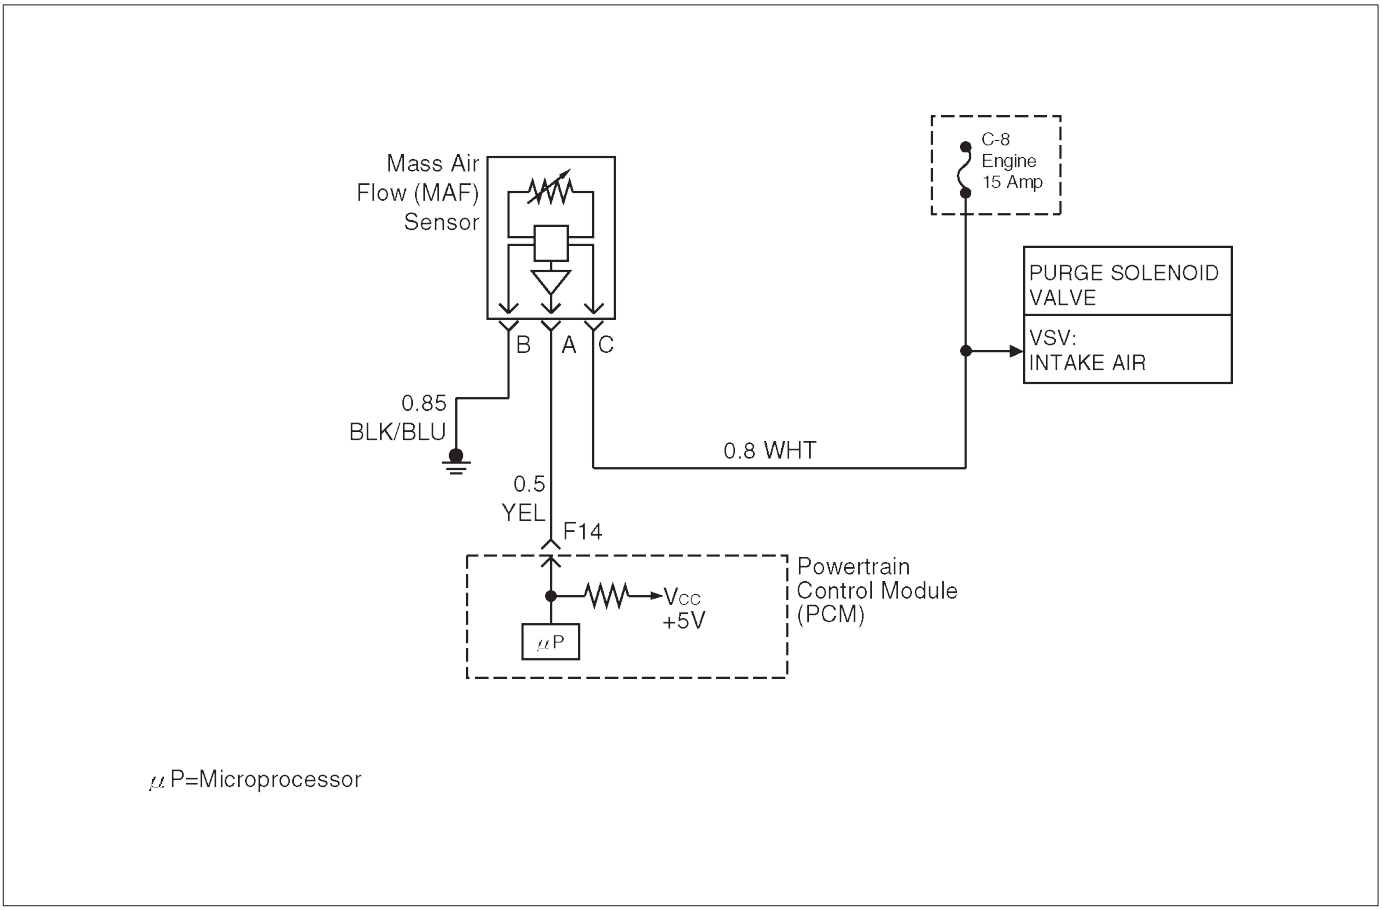Diagnostic Trouble Code (DTC)
P0103 MAF Sensor Circuit High Frequency



D06R200047

Circuit Description

The mass air flow (MAF) sensor measures the amount of air which passes through it into the engine during a given time. The powertrain control module (PCM) uses the mass air flow information to monitor engine operating conditions for fuel delivery calculations. A large quantity of air entering the engine indicates an acceleration or high load situation, while a small quantity of air indicates deceleration or idle.

The MAF sensor produces a frequency signal which can be monitored using a Tech 2. The frequency will vary within a range of around 3 to 7g/s at idle. DTC P0103 will be set if the signal from the MAF sensor is above the possible range of a normally operating MAF sensor.

Conditions for Setting the DTC

- The engine is running above 500 RPM for more than 10 seconds.
- System voltage is above 11.5 volts.
- MAF signal frequency is above 40g/s for a total of 50 percent of the last 200 samples monitored. A sample is taken every cylinder event.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM calculates an airflow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0103 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0103 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

If DTC P0103 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.


2. This step verifies that the problem is present at idle.

4. A frequency reading with the MAF sensor connector disconnected indicates an electromagnetic interference (EMI) related fault.

DTC P0103 – MAF Sensor Circuit High Frequency

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor “DTC” info for DTC P0103. Does the Tech 2 indicate DTC P0103 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Start the engine. 2. With the engine idling, monitor “MAF Frequency” display on the Tech 2. Is “MAF Frequency” above the specified value?	3–7g/s	Go to *Step 4*	Go to *Step 7*
4	1. Ignition “OFF”. 2. Disconnect the MAF sensor connector. 3. Ignition “ON”, engine idling. 4. Using a Tech 2, monitor “MAF Frequency”. Does the Tech 2 indicate a “MAF Frequency” at the specified value?	0g/s	Go to *Step 5*	Go to *Step 6*
5	Replace the MAF sensor. Is the action complete?	—	Verify repair	Go to *Step 7*
6	1. Check the MAF harness for incorrect routing near high voltage components (solenoids, relays, motors). 2. If incorrect routing is found, correct the harness routing. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

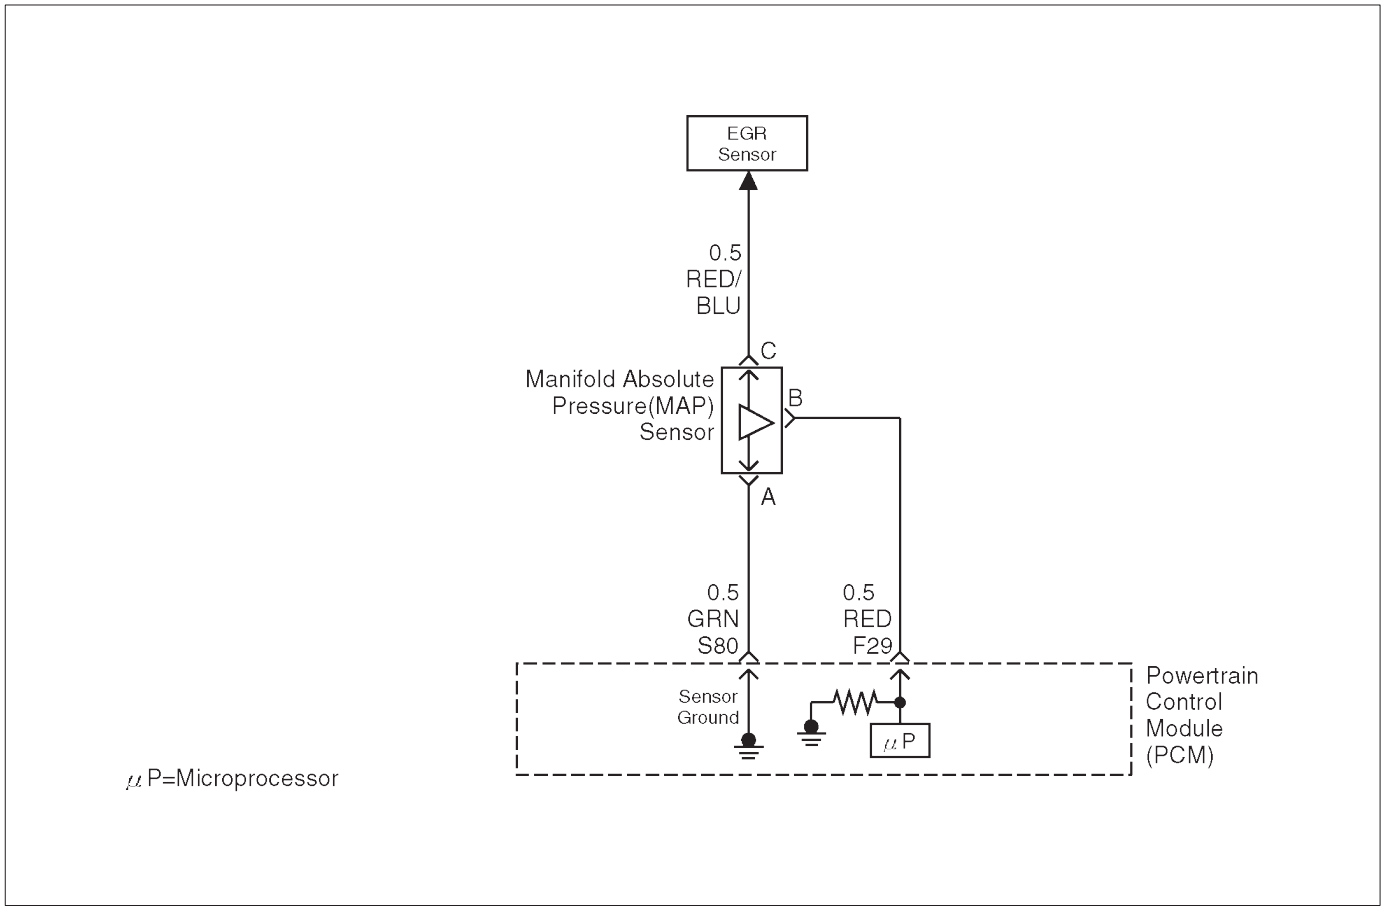Diagnostic Trouble Code (DTC) P0106 MAP System Performance



D06R200048

Circuit Description

The manifold absolute pressure (MAP) sensor responds to changes in intake manifold pressure (vacuum). The MAP sensor signal voltage to the powertrain control module (PCM) varies from below 2 volts at idle (high vacuum) to above 4 volts at wide-open throttle (low vacuum) at sea level.

The MAP sensor is used to determine manifold pressure changes while the linear exhaust gas recirculation (EGR) flow test diagnostic is being run (refer to DTC P0401), engine vacuum level for some other diagnostics, and barometric pressure (BARO). The PCM compares the MAP sensor signal to a calculated MAP based on throttle position and various engine load factors. If the PCM detects a MAP signal that varies excessively above or below the calculated value, DTC P0106 will set.

Conditions for Setting the DTC

- No TP sensor DTCs are present.
- Engine speed is steady, changing less then 100 RPM.
- Engine speed is between 1000 rpm and 4000 rpm.
- Throttle position is steady, throttle angle changes less than 1%.
- EGR flow rate is steady, changing less than 4%.
- No change in brake switch, A/C clutch, TCC or power steering pressure switch status.
- Above conditions are met for longer than 1 second.
- Actual MAP value varies more than 10 kPa.
- The MAP value must vary for a total of 10 seconds over a 20-second period of time that the samples were monitored.
- The failure must occur for 2 consecutive trips.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will default to a BARO value of 79.3 kPa.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0106 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0106 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.

- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the MAP display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

If DTC P0106 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set. If it is determined that the DTC occurs intermittently, performing the DTC P1107 Diagnostic Chart may isolate the cause of the fault.


DTC P0106 – MAP System Performance

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P0106. Does the Tech 2 indicate DTC P0106 failed?	—	Go to *Step 4*	Go to *Step 3*
3	1. Check for the following conditions: • Vacuum hoses disconnected, damaged, or incorrectly routed • Intake manifold vacuum leaks • Vacuum leaks at throttle body • Vacuum leaks at EGR valve flange and pipes • Crankcase ventilation valve faulty, missing or incorrectly installed. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*
4	1. Disconnect the MAP sensor electrical connector. 2. Observe the MAP value displayed on the Tech 2. Is the MAP value near the specified value?	11 kPa	Go to *Step 5*	Go to *Step 13*
5	1. Connect a test light between B+ and the MAP sensor signal circuit at the MAP sensor harness connector. 2. Observe the MAP value displayed on the Tech 2. Is the MAP value near the specified value?	100 kPa	Go to *Step 6*	Go to *Step 9*
6	1. Jumper the 5 volt reference circuit and the MAP signal circuit together at the MAP sensor harness connector. 2. Observe the MAP value displayed on the Tech 2. Is the MAP value near the specified value?	100 kPa	Go to *Step 7*	Go to *Step 8*
7	1. Ignition "OFF". 2. Disconnect the PCM and check the sensor ground circuit for high resistance, an open between the PCM and the MAP sensor, or for a poor connection at the PCM. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*

DTC P0106 – MAP System Performance (Cont'd)

Step	Action	Value(s)	Yes	No
8	1. Check the 5 volt reference circuit for high resistance, an open between the PCM and the MAP sensor, or a poor connection at the PCM. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*
9	1. Ignition "OFF". 2. Disconnect the PCM, and check the MAP sensor signal circuit for high resistance, an open, a short to ground, or a short to the sensor ground circuit. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*
10	1. Check the MAP sensor signal circuit for a poor connection at the PCM. 2. If a problem is found, repair as necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 14*
11	1. Check for a poor connection at the MAP sensor. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	Replace the MAP sensor. Is the action complete?	—	Verify repair	—
13	1. Ignition "OFF", disconnected the PCM. 2. Ignition "ON", check the MAP signal circuit for a short to voltage or a short to the 5 volt reference circuit. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 14*
14	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

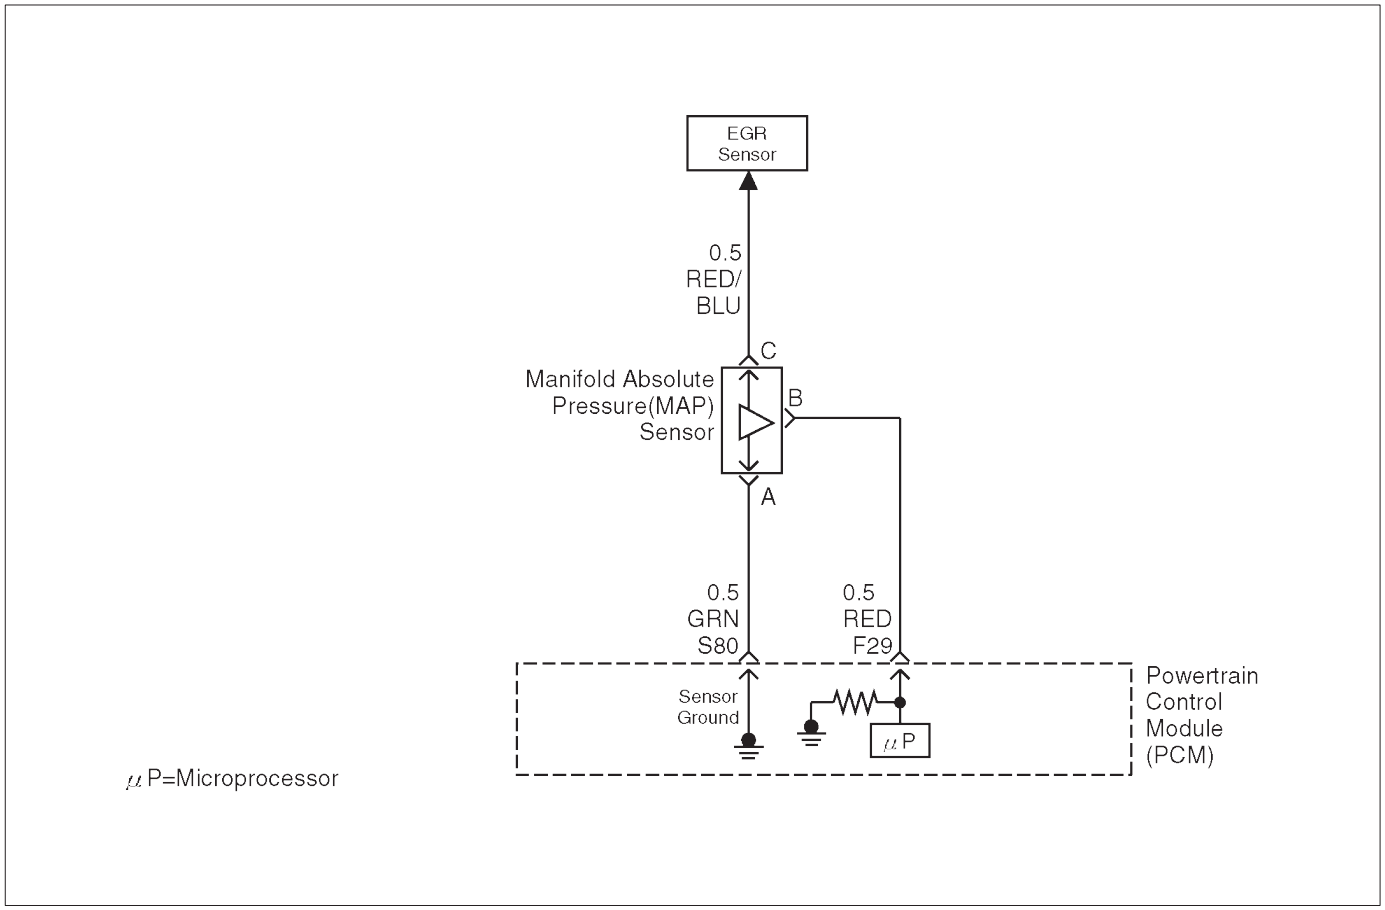Diagnostic Trouble Code (DTC) P0107 MAP Sensor Circuit Low Voltage



D06R200048

Circuit Description

The manifold absolute pressure (MAP) sensor responds to changes in intake manifold pressure (vacuum). The MAP sensor signal voltage to the powertrain control module (PCM) varies from below 2 volts at idle (high vacuum) to above 4 volts with the ignition “ON”, engine not running or at wide-open throttle (low vacuum).
The MAP sensor is used to determine manifold pressure changes while the exhaust gas recirculation (EGR) flow test diagnostic is being run (refer to *DTC P0401*), to determine engine vacuum level for some other diagnostics and to determine barometric pressure (BARO). The PCM monitors the MAP signals for voltages outside the normal range of the MAP sensor. If the PCM detects a MAP signal voltage that is excessively low, DTC P0107 will be set.

Conditions for Setting the DTC

- No TP sensor DTCs present.
- Engine is running.
- Throttle angle is above 1% if engine speed is less than 1000 RPM.
- Throttle angle is above 2% if engine speed is above 1000 RPM.
- The MAP sensor indicates manifold absolute pressure at or below 11 kPa for a total of approximately 10 seconds over a 16-second period.
- Ignition voltage more than 11 volts.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will default to a BARO value of 79.3 kPa.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0107 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0107 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Check for intermittent codes.
- The MAP sensor shares a 5 Volt reference with the EGR Sensor. If these codes are also set, it could indicate a problem with the 5 Volt reference circuit .
- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the

MAP display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

If DTC P0107 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set. If it is determined that the DTC occurs intermittently, performing the DTC P0107 Diagnostic Chart may isolate the cause of the fault.


DTC P0107 – MAP Sensor Circuit Low Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF". 2. With the throttle closed, observe the MAP value displayed on the Tech 2. Is the MAP value near the specified value?	5V 100kPa at sea level	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P0107. Does the Tech 2 indicate DTC P0107 failed?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Ignition "OFF". 2. Disconnect the MAP sensor electrical connector. 3. Jumper the 5 volt reference circuit and the MAP signal together at the MAP sensor harness connector. 4. Ignition "ON". 5. Observe the MAP value displayed on the Tech 2. Is the MAP value near the specified value? (If no, start with diagnosis chart for other sensors in the circuit and see if 5V returns.)	0 V 11 kPa	Go to *Step 10*	Go to *Step 5*
5	1. Disconnect the jumper. 2. Connect a test light between B+ and the MAP sensor signal circuit at the MAP sensor harness connector. 3. Observe the MAP value displayed on the Tech 2. Is the MAP value near the specified value.	5 V 100 kPa	Go to *Step 6*	Go to *Step 8*
6	1. Ignition "OFF". 2. Disconnect the PCM and check the 5 volt reference circuit for an open or short to ground. 3. If the 5 volt reference circuit is open or shorted to ground, repair it as necessary. Was the 5 volt reference circuit open or shorted to ground?	—	Verify repair	Go to *Step 7*
7	Check the 5 volt reference circuit for a poor connection at the PCM and replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 11*

DTC P0107 – MAP Sensor Circuit Low Voltage (Cont'd)

Step	Action	Value(s)	Yes	No
8	1. Ignition "OFF". 2. Disconnect the PCM, and check the MAP signal circuit for an open, short to ground, or short to the sensor ground circuit. 3. If the MAP sensor signal circuit is open or shorted to ground, repair it as necessary. Was the MAP signal circuit open or shorted to ground?	—	Verify repair	Go to *Step 9*
9	Check the MAP sensor signal circuit for a poor connection at the PCM and the MAP sensor; replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 11*
10	Replace the MAP sensor. Is the action complete?	—	Verify repair	—
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

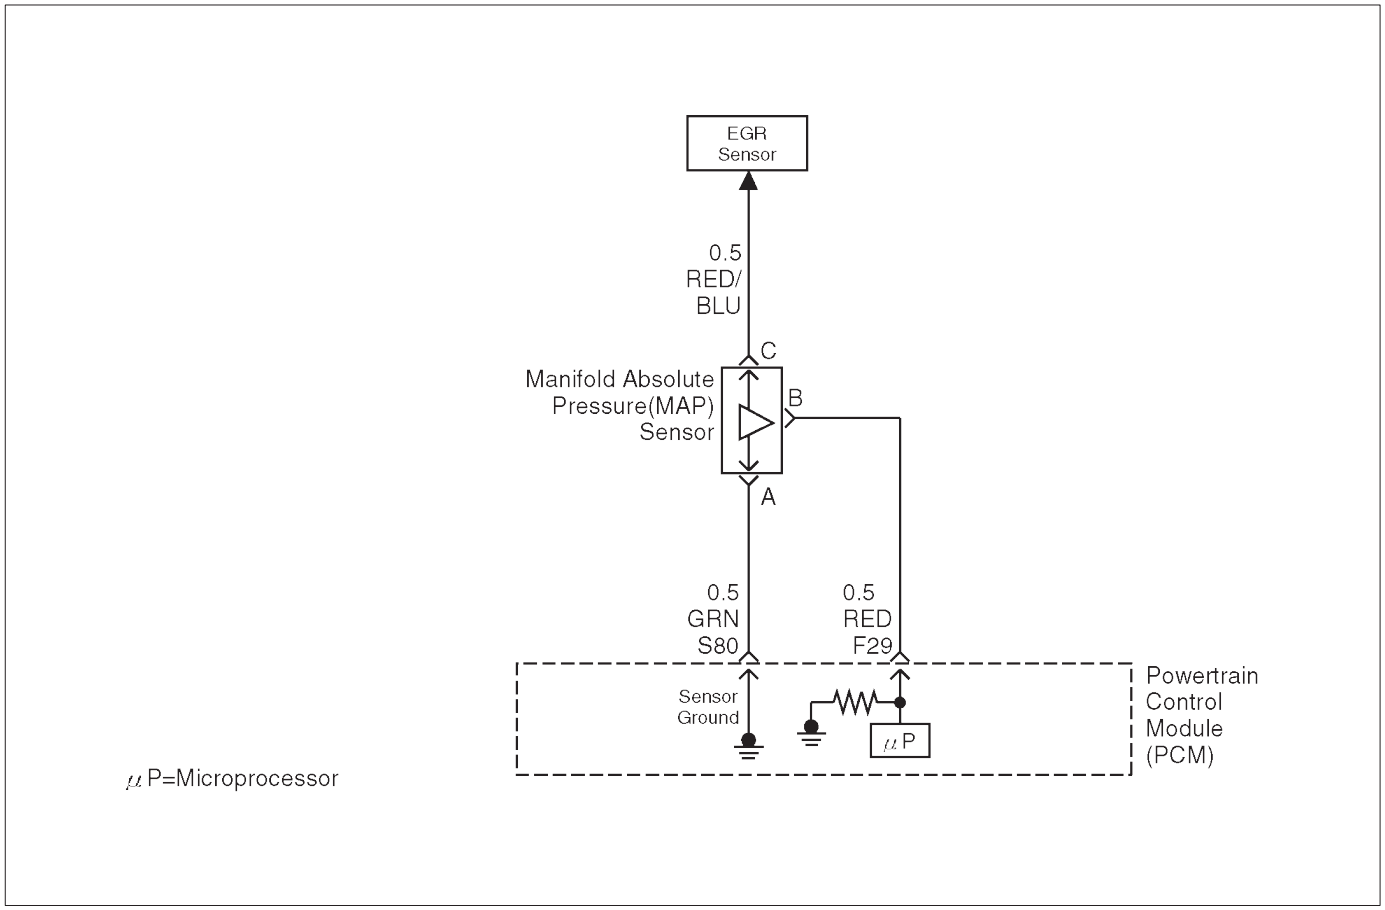Diagnostic Trouble Code (DTC) P0108 MAP Sensor Circuit High Voltage



D06R200048

Circuit Description

The manifold absolute pressure (MAP) sensor responds to changes in intake manifold pressure (vacuum). The MAP sensor signal voltage to the powertrain control module (PCM) varies from below 2 volts at idle (high vacuum) to above 4 volts with the key “ON”, engine not running or at wide-open throttle (low vacuum).
The MAP sensor is used to determine manifold pressure changes while the linear EGR flow test diagnostic is being run (refer to *DTC P0401*), to determine engine vacuum level for some other diagnostics and to determine barometric pressure (BARO). The PCM monitors the MAP signals for voltages outside the normal range of the MAP sensor. If the PCM detects a MAP signal voltage that is excessively high, DTC P0108 will be set.

Conditions for Setting the DTC

- No TP sensor DTCs present.
- Engine is running for more than 10 seconds.
- Throttle position is below 3% if engine speed is below 1000 RPM.
- Throttle position is below 10% if engine speed is above 1000 RPM.
- The MAP sensor indicates an intermittent manifold absolute pressure above 80 kPa for a total of approximately 10 seconds over a 16-second period.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will default to a BARO value of 79.3 kPa.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0108 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0108 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- The MAP sensor shares a 5 Volt reference with the EGR sensor. If these codes are also set, it could indicate a problem with the 5 Volt reference circuit.
- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the MAP display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

If DTC P0108 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set. If it is determined that the DTC occurs intermittently, performing the DTC P1108 Diagnostic Chart may isolate the cause of the fault.


DTC P0108 – MAP Sensor Circuit High Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. If the engine idle is rough, unstable or incorrect, repair the idle problem before using this chart. Refer to *Symptoms* section. 2. With the engine idling, note the MAP value on the Tech 2. Is the MAP reading above the specified value?	25–35 kPa	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P0108. Does the Tech 2 indicate DTC P0108 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Ignition "OFF". 2. Disconnect the MAP sensor electrical connector. 3. Ignition "ON". 4. Note the MAP sensor voltage displayed on the Tech 2. (If no, start with diagnostic chart for other sensors in the circuit and see if 5V returns.) Is the MAP sensor voltage at the specified value?	11 kPa 0.0 V	Go to *Step 5*	Go to *Step 6*
5	Probe the sensor ground circuit with a test light to B+. Is the test light "ON"?	—	Go to *Step 7*	Go to *Step 9*
6	1. Check the MAP signal circuit for a short to voltage or a short to the 5 volt reference circuit. 2. If the MAP sensor signal circuit is shorted, repair circuit as necessary. Was the MAP sensor signal circuit shorted?	—	Verify repair	Go to *Step 11*
7	1. Check for a poor sensor ground terminal connection at the MAP sensor electrical connector. 2. If a problem is found, replace the faulty terminal. Did the terminal require replacement?	—	Verify repair	Go to *Step 8*
8	Check for a plugged or leaking vacuum supply to the MAP sensor. Is the vacuum supply plugged or leaking?	—	Verify repair	Go to *Step 12*
9	1. Check for a poor sensor ground terminal connection at the PCM. 2. If a problem is found, replace the faulty terminal. Did the terminal require replacement?	—	Verify repair	Go to *Step 10*

DTC P0108 – MAP Sensor Circuit High Voltage (Cont'd)

Step	Action	Value(s)	Yes	No
10	1. Check the continuity of the MAP sensor ground circuit. 2. If the MAP sensor ground circuit measures over 5 ohms, repair open or poor connection. Was a condition found and corrected?	—	Verify repair	Go to *Step 11*
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify Repair	—
12	Replace the MAP sensor. Is the action complete?	—	Verify repair	—

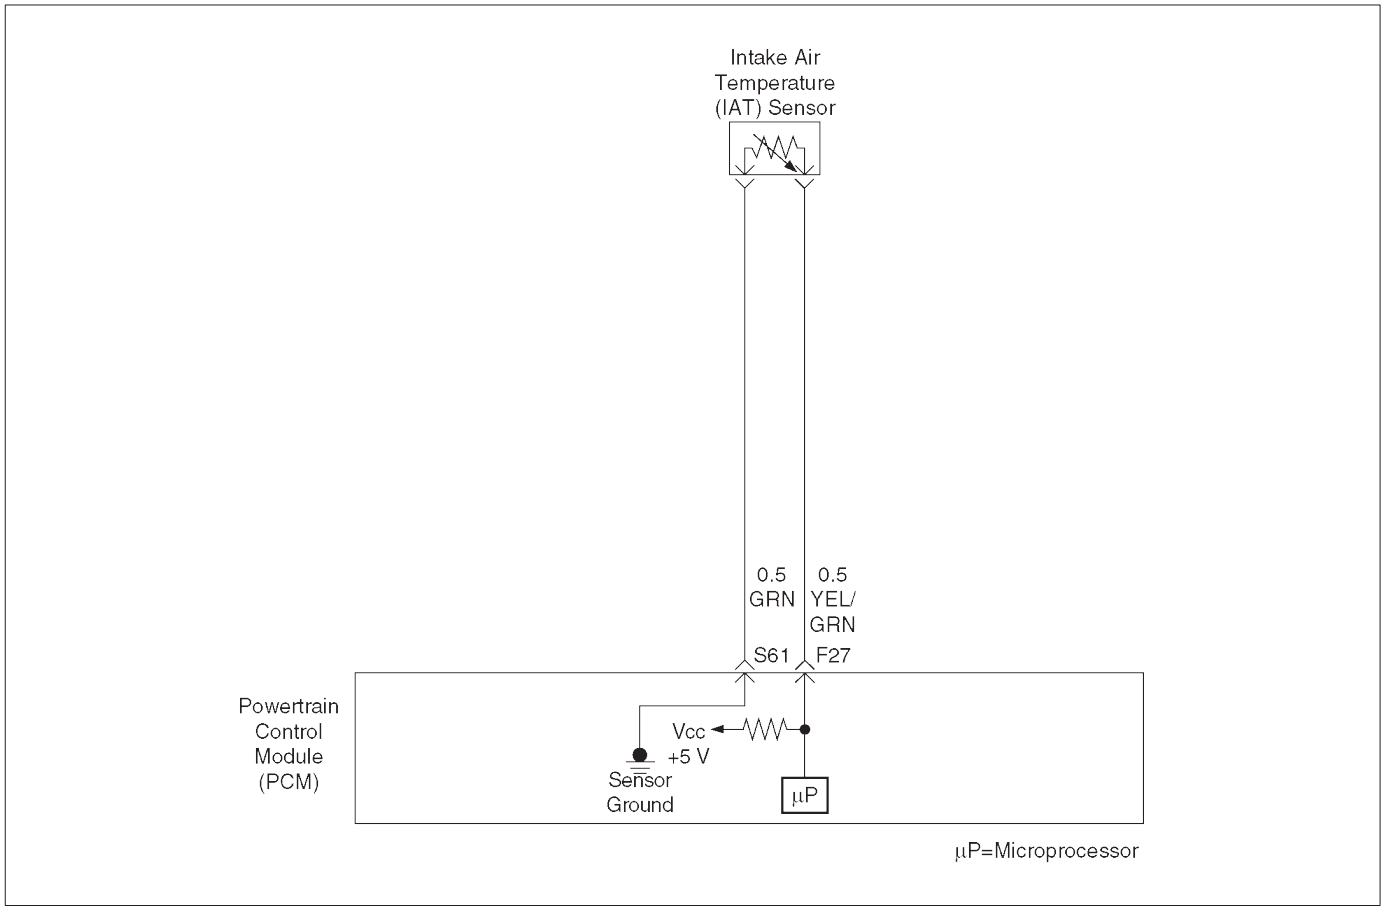Diagnostic Trouble Code (DTC) P0112 IAT Sensor Circuit Low Voltage



D06RY00168

Circuit Description

The intake air temperature (IAT) sensor is a thermistor which measures the temperature of the air entering the engine. The powertrain control module (PCM) applies 5 volts through a pull-up resistor to the IAT sensor. When the intake air is cold, the sensor resistance is high and the PCM will monitor a high signal voltage on the IAT signal circuit. If the intake air is warm, the sensor resistance is lower, causing the PCM to monitor a lower voltage. DTC P0112 will set when the PCM detects an excessively low signal voltage on the intake air temperature sensor signal circuit.

Conditions for Setting the DTC

- The engine has been running for over 15 seconds.
- Vehicle speed is greater than 30 mph (48 km/h) .
- IAT signal voltage indicates and intake air temperature greater than 148°C (298°F) (about 5 volts) for a total of 12.5 seconds over a 25-second period of time.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0112 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0112 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-bout terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the IAT display on the Tech 2 while moving connectors and wiring harnesses related to the IAT sensor. A change in the IAT display will indicate the location of the fault.

If DTC P0112 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart:

2. Verifies that the fault is present.

3. If DTC P0112 can be repeated only by duplicating the Failure Records condition, refer to the *Temperature vs. Resistance Value* table. The table may be used to test the IAT sensor at various temperatures to evaluate the possibility of a "shifted" sensor that may be stored above or below a certain temperature. If this is the case, replace the IAT sensor. If the IAT sensor appears to be OK, the fault is intermittent; refer to *Diagnostic Aids*.


Intake Air Temperature Sensor

˚C	˚F	OHMS
Temperature vs. Resistance Values (approximate)		
100	212	177
80	176	332
60	140	667
45	113	1188
35	95	1802
25	77	2796
15	59	4450
5	41	7280
–5	23	12300
–15	5	21450
–30	–22	52700
–40	–40	100700

DTC P0112–IAT Sensor Circuit Low Voltage

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Using a Tech 2, monitor the intake air temperature (IAT). Is the intake air temperature greater than the specified value?	148˚C (283˚F)	Go to *Step 4*	Go to *Step 3*
3	1. Ignition “ON”, engine “OFF”. Review and record Tech 2 Failure Records data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor the “DTC” info for DTC P0112. Does the Tech 2 indicate DTC P0112 failed this ignition?	—	Refer to *Test Description*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Ignition “OFF”. 2. Disconnect the IAT sensor electrical connector. 3. Ignition “ON”. 4. Observe the intake air temperature on the Tech 2. Is the intake air temperature below the specified value?	–38˚C (–36˚F)	Go to *Step 6*	Go to *Step 5*
5	1. Ignition “OFF”. 2. Disconnect the PCM electrical connectors. 3. Check the IAT sensor signal circuit for a short to ground. Is the IAT sensor signal circuit shorted to ground?	—	Verify repair	Go to *Step 7*
6	Replace the IAT sensor. Is the action complete?	—	Verify repair	—
7	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

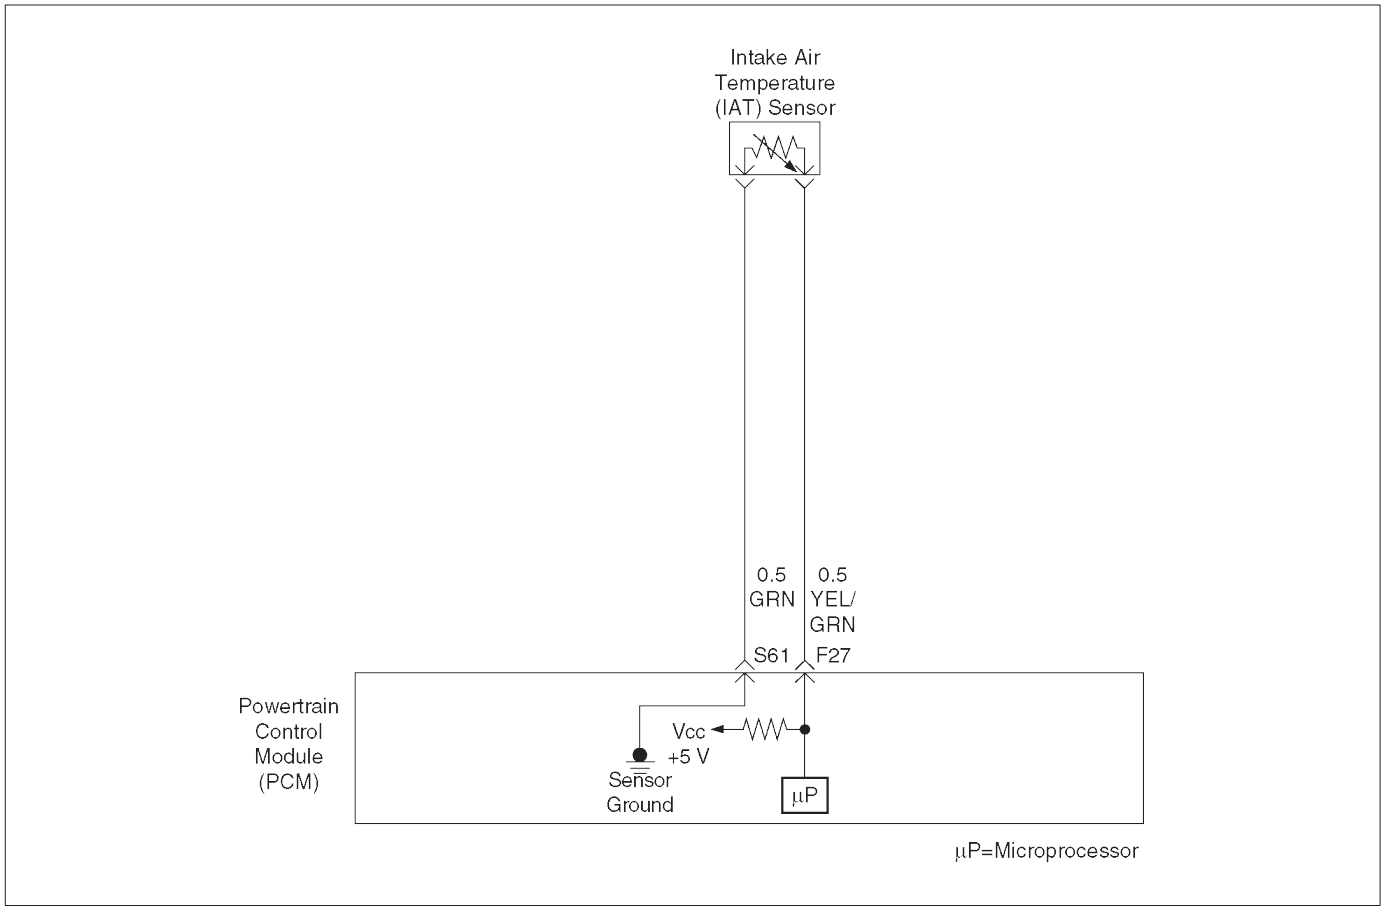Diagnostic Trouble Code (DTC) P0113 IAT Sensor Circuit High Voltage



D06RY00168

Circuit Description

The intake air temperature (IAT) sensor is a thermistor which measures the temperature of the air entering the engine. The powertrain control module (PCM) applies 5 volts through a pull-up resistor to the IAT sensor. When the intake air is cold, the sensor resistance is high and the PCM will monitor a high signal voltage on the IAT signal circuit. If the intake air is warm, the sensor resistance is lower causing the PCM to monitor a lower voltage. DTC P0113 will set when the PCM detects an excessively high signal voltage on the intake air temperature sensor signal circuit.

Conditions for Setting the DTC

- The engine has been running for over 30 seconds.
- Vehicle speed is less than 20 mph (32 km/h).
- ECT signal temperature is above 60˚C (140˚F).
- Mass air flow is less then 20 g/second.
- IAT signal voltage indicates an intake air temperature less than –39˚C (–38˚F) for total of 12.5 seconds over a 25-second period.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0113 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0113 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- The IAT sensor shares a ground with the EGR position sensor and the TP sensor. Check the ground if these DTC’s are set.
- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the IAT display on the Tech 2 while moving connectors and wiring harnesses related to the IAT sensor. A change in the IAT display will indicate the location of the fault.

If DTC P0113 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart:

2. Verifies that the fault is present.

3. If DTC P0113 can be repeated only by duplicating the Failure Records conditions, refer to the "Temperature vs. Resistance Values" table. The table may be used to test the IAT sensor at various temperatures to evaluate the possibility of a "shifted" sensor that may be open above or below a certain temperature. If this is the case, replace the IAT sensor. If the IAT sensor appears to be OK, the fault is intermittent; refer to *Diagnostic Aids*.

Intake Air Temperature Sensor

˚C	˚F	OHMS
Temperature vs. Resistance Values (approximate)		
100	212	177
80	176	332
60	140	667
45	113	1188
35	95	1802
25	77	2796
15	59	4450
5	41	7280
–5	23	12300
–15	5	21450
–30	–22	52700
–40	–40	100700


DTC P0113 –IAT Sensor Circuit High Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Ignition "ON", engine "OFF". Observe the "Intake Air Temp" display on the Tech 2. Is the "Intake Air Temp" below the specified value?	–38˚C (–36˚F)	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data parameters. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P0113. Does the Tech 2 indicate DTC P0113 failed?	—	Refer to *Test Description*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Ignition "OFF". 2. Disconnect the IAT sensor electrical connector. 3. Jumper the IAT signal circuit and the sensor ground circuit together at the IAT sensor harness connector. 4. Ignition "ON". 5. Observe the "Intake Air Temp" display on the Tech 2. Is the "Intake Air Temp" at the specified value?	140˚C (284˚F)	Go to *Step 6*	Go to *Step 5*
5	1. Jumper the IAT signal circuit at the IAT sensor harness connector to chassis ground. 2. Observe the "Intake Air Temp" display on the Tech 2. Is the "Intake Air Temp" at the specified value?	140˚C (284˚F)	Go to *Step 7*	Go to *Step 8*

DTC P0113 –IAT Sensor Circuit High Voltage (Cont'd)

Step	Action	Value(s)	Yes	No
6	Check for poor connections at the IAT sensor and replace terminals if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 10*
7	1. Ignition "OFF". 2. Disconnect the PCM, and check the IAT sensor ground circuit for an open. 3. If the IAT sensor ground circuit is open, repair it as necessary. Was the IAT sensor ground circuit open?	—	Verify repair	Go to *Step 9*
8	1. Ignition "OFF". 2. Disconnect the PCM, and check the IAT signal circuit for an open. 3. If the IAT sensor signal circuit is open, repair it as necessary. Was the IAT signal circuit open?	—	Verify repair	Go to *Step 9*
9	Check for a poor sensor ground or IAT signal circuit terminal connection at the PCM and replace terminal(s) if necessary. Did any of the terminals need to be replaced?	—	Verify repair	Go to *Step 11*
10	Replace the IAT sensor. Is the action complete?	—	Verify repair	—
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

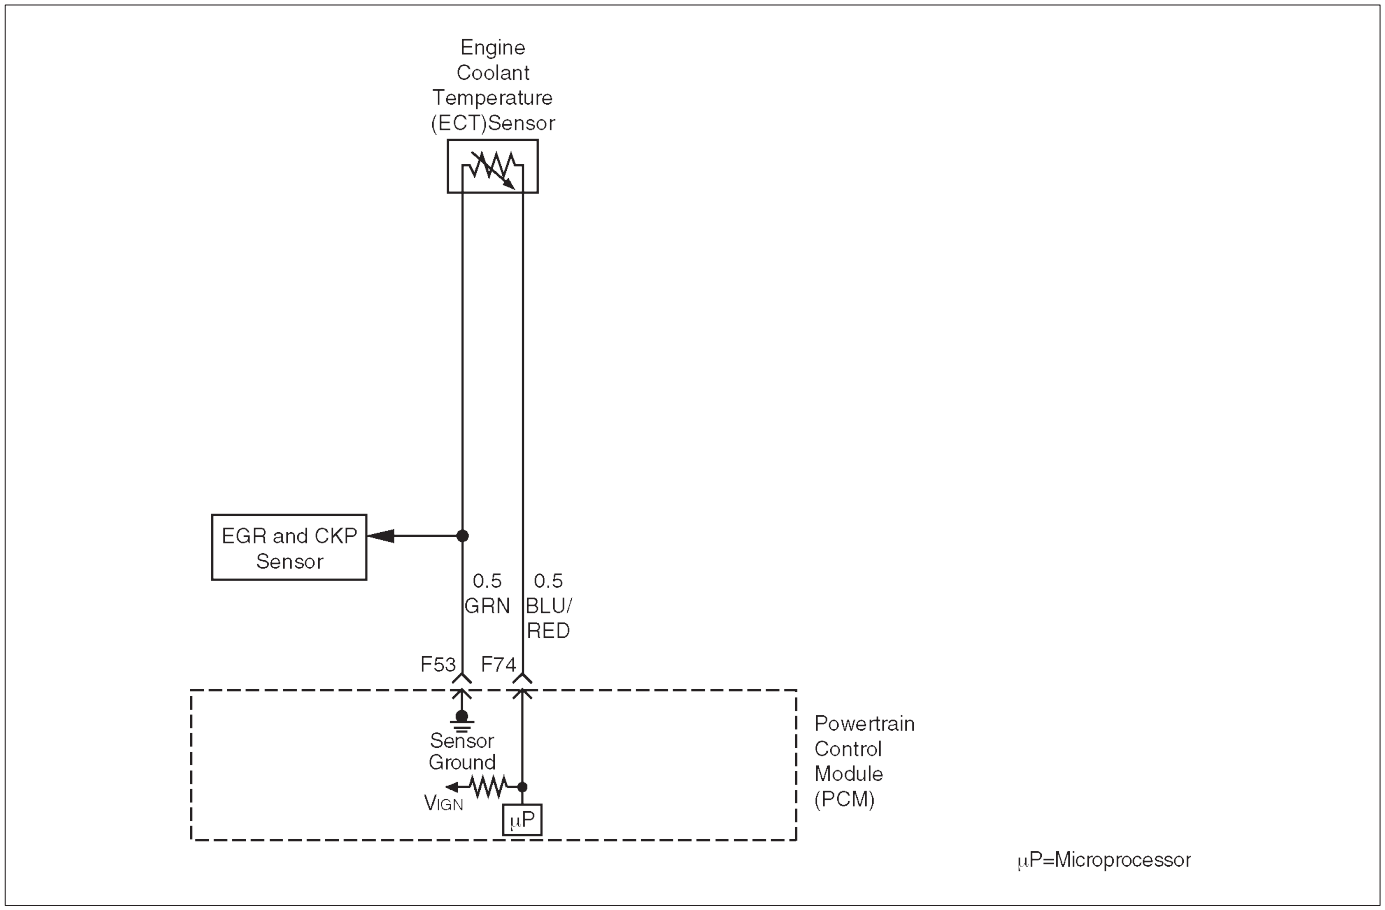Diagnostic Trouble Code (DTC) P0117 ECT Sensor Circuit Low Voltage



D06R200049

Circuit Description

The engine coolant temperature (ECT) sensor is a thermistor mounted on a coolant crossover pipe at the front of the engine. The powertrain control module (PCM) applies a voltage (about 5 volts) through a pull-up resistor to the ECT signal circuit. When the engine coolant is cold, the sensor (thermistor) resistance is high, therefore the PCM will measure a high signal voltage. As the engine coolant warms, the sensor resistance becomes lower, and the ECT signal voltage measured at the PCM drops. With a fully warmed-up engine, the ECT signal voltage should measure about 1.5 to 2.0 volts.

Conditions for Setting the DTC

- Engine running time is longer than 120 seconds.
- The ECT sensor signal indicates an engine coolant temperature greater than 150˚C (302˚F) (about 0.10 V) for a total of 50 seconds over a 100–second period.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will substitute the ECT reading with a default engine coolant temperature value. The default value is based on start-up intake air temperature and running time.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0117 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0117 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the ECT display on the Tech 2 while moving connectors and wiring harnesses related to the ECT sensor. A change in the ECT display will indicate the location of the fault.

If DTC P0117 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set. If it is determined that the DTC occurs intermittently, performing the DTC P1114 Diagnostic Chart may isolate the cause of the fault.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. Verifies that the fault is present.

3. If DTC P0117 can be repeated only by duplicating the Failure Records conditions, refer to the "Temperature vs. Resistance Values" table. The table may be used to test the ECT sensor at various temperatures to evaluate the possibility of a "shifted" sensor that may be shorted above or below a certain temperature. If this is the case, replace the ECT sensor. If the ECT sensor appears to be OK, the fault is intermittent; refer to *Diagnostic Aids*.


Engine Coolant Temperature Sensor

°C	°F	OHMS
Temperature vs. Resistance Values (approximate)		
100	212	177
80	176	332
60	140	667
45	113	1188
35	95	1802
25	77	2796
15	59	4450
5	41	7280
–5	23	12300
–15	5	21450
–30	–22	52700
–40	–40	100700

DTC P0117 – ECT Sensor Low Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF". 2. Observe the "Eng Cool Temp" display on the Tech 2. Is the "Eng Cool Temp" below the specified value?	139°C (282°F)	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P0117. Does the Tech 2 indicate DTC P0117 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Disconnect the ECT sensor electrical connector. 2. Observe the "Eng Cool Temp" display on the Tech 2. Is the "Eng Cool Temp" at the specified value?	–39°C (–38°F)	Go to *Step 6*	Go to *Step 5*
5	1. Ignition "OFF". 2. Disconnect the PCM and check the ECT signal circuit for a short to ground or a short to the sensor ground circuit. 3. If the ECT signal circuit is shorted. repair it as necessary. Was the ECT signal circuit shorted to ground?	—	Verify repair	Go to *Step 7*
6	Replace the ECT sensor. Is the action complete?	—	Verify repair	—
7	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

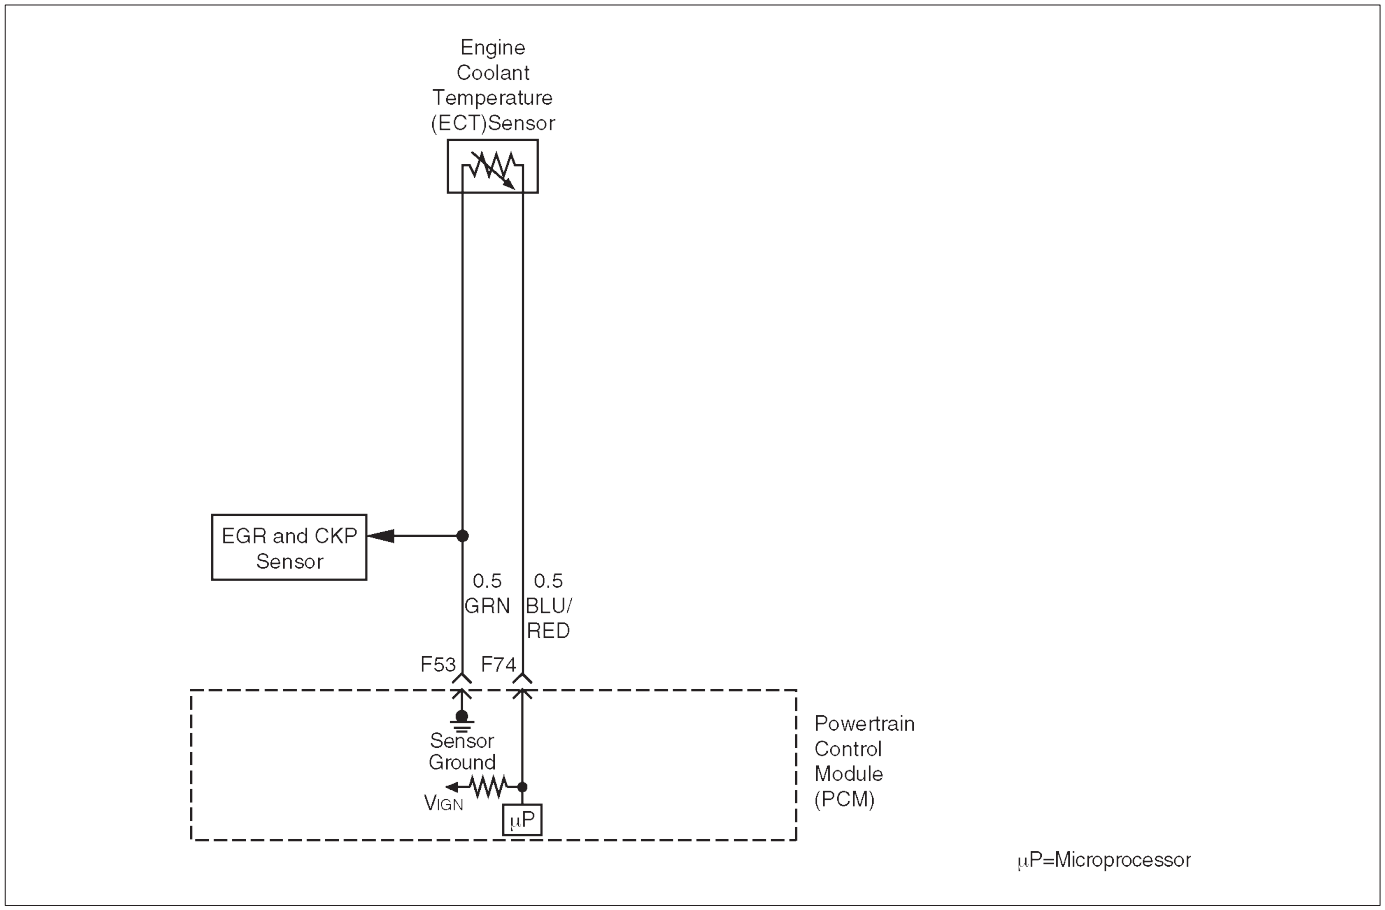Diagnostic Trouble Code (DTC) P0118 ECT Sensor Circuit High Voltage



D06R200049

Circuit Description

The engine coolant temperature (ECT) sensor is a thermistor mounted in on a coolant crossover pipe at the front of the engine. The powertrain control module (PCM) applies a voltage (about 5 volts) through a pull-up resistor to the ECT signal circuit. When the engine coolant is cold, the sensor (thermistor) resistance is high, therefore the PCM will measure a high signal voltage. As the engine coolant warms, the sensor resistance becomes less, and the ECT signal voltage measured at the PCM drops. With a fully warmed-up engine, the ECT signal voltage should measure about 1.5 to 2.0 volts.

Conditions for Setting the DTC

- Engine running time is longer than 90 seconds.
- The ECT sensor signal indicates an engine coolant temperature of –39˚C (–38˚F) or less (about 5 volts) for a total of 50 seconds over a 100-second period.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will substitute the ECT reading with a default engine coolant temperature value. The default value is based on start-up intake air temperature and running time.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0118 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0118 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:
The ECT shares a ground with the Transmission Fluid Temperature sensor, the Fuel Tank Pressure sensor, and the MAP sensor.
Check the ground if these DTCs are also set.

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the ECT display on the Tech 2 while moving connectors and wiring harnesses related to the ECT sensor. A change in the ECT display will indicate the location of the fault.

If DTC P0118 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set. If it is determined that the DTC occurs intermittently,

performing the DTC P1115 Diagnostic Chart may isolate the cause of the fault.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. Verifies that the fault is present.

3. If DTC P0118 can be repeated only by duplicating the Failure Records conditions, refer to the "Temperature vs. Resistance Value" table. The table may be used to test the ECT sensor at various temperatures to evaluate the possibility of a "shifted" sensor that may be shorted above or below a certain temperature. If this is the case, replace the ECT sensor. If the ECT sensor appears to be OK, the fault is intermittent; refer to *Diagnostic Aids*.

Engine Coolant Temperature Sensor

˚C	˚F	OHMS
Temperature vs. Resistance Values (approximate)		
100	212	177
80	176	332
60	140	667
45	113	1188
35	95	1802
25	77	2796
15	59	4450
5	41	7280
–5	23	12300
–15	5	21450
–30	–22	52700
–40	–40	100700


DTC P0118 – ECT Sensor Circuit High Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF". 2. Observe the "Eng Cool Temp" display on the Tech 2. Is the "Eng Cool Temp" below the specified value?	–39˚C (–38˚F)	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor the "DTC" info for DTC P0118. Does the Tech 2 indicate DTC P0118 failed?	—	Refer to *Test Description*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Disconnect the ECT sensor electrical connector. 2. Jumper the ECT signal circuit and the sensor ground circuit together at the ECT sensor harness connector. 3. Observe the "Eng Cool Temp" display on the Tech 2. Is the "Eng Cool Temp" at the specified value?	140˚C (284˚F)	Go to *Step 6*	Go to *Step 5*
5	1. Jumper the ECT signal circuit at the ECT sensor harness connector to chassis ground. 2. Observe the "Eng Cool Temp" display on the Tech 2. Is the "Eng Cool Temp" at the specified value?	140˚C (284˚F)	Go to *Step 7*	Go to *Step 8*
6	Check for poor connections at the ECT sensor and replace terminals if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 10*

DTC P0118 – ECT Sensor Circuit High Voltage (Cont'd)

Step	Action	Value(s)	Yes	No
7	1. Ignition "OFF". 2. Disconnect the PCM, and check the ECT sensor ground circuit for an open. 3. If the ECT sensor ground circuit is open, repair it as necessary. Was the ECT sensor ground circuit open?	—	Verify repair	Go to *Step 9*
8	1. Ignition "OFF". 2. Disconnect the PCM, and check the ECT signal circuit for an open. 3. If the ECT sensor signal circuit is open, repair it as necessary. Was the ECT signal circuit open?	—	Verify repair	Go to *Step 9*
9	Check for a poor sensor ground or ECT signal circuit terminal connection at the PCM and replace terminal(s) if necessary. Did any of the terminals need to be replaced?	—	Verify repair	Go to *Step 11*
10	Replace the ECT sensor. Is the action complete?	—	Verify repair	—
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

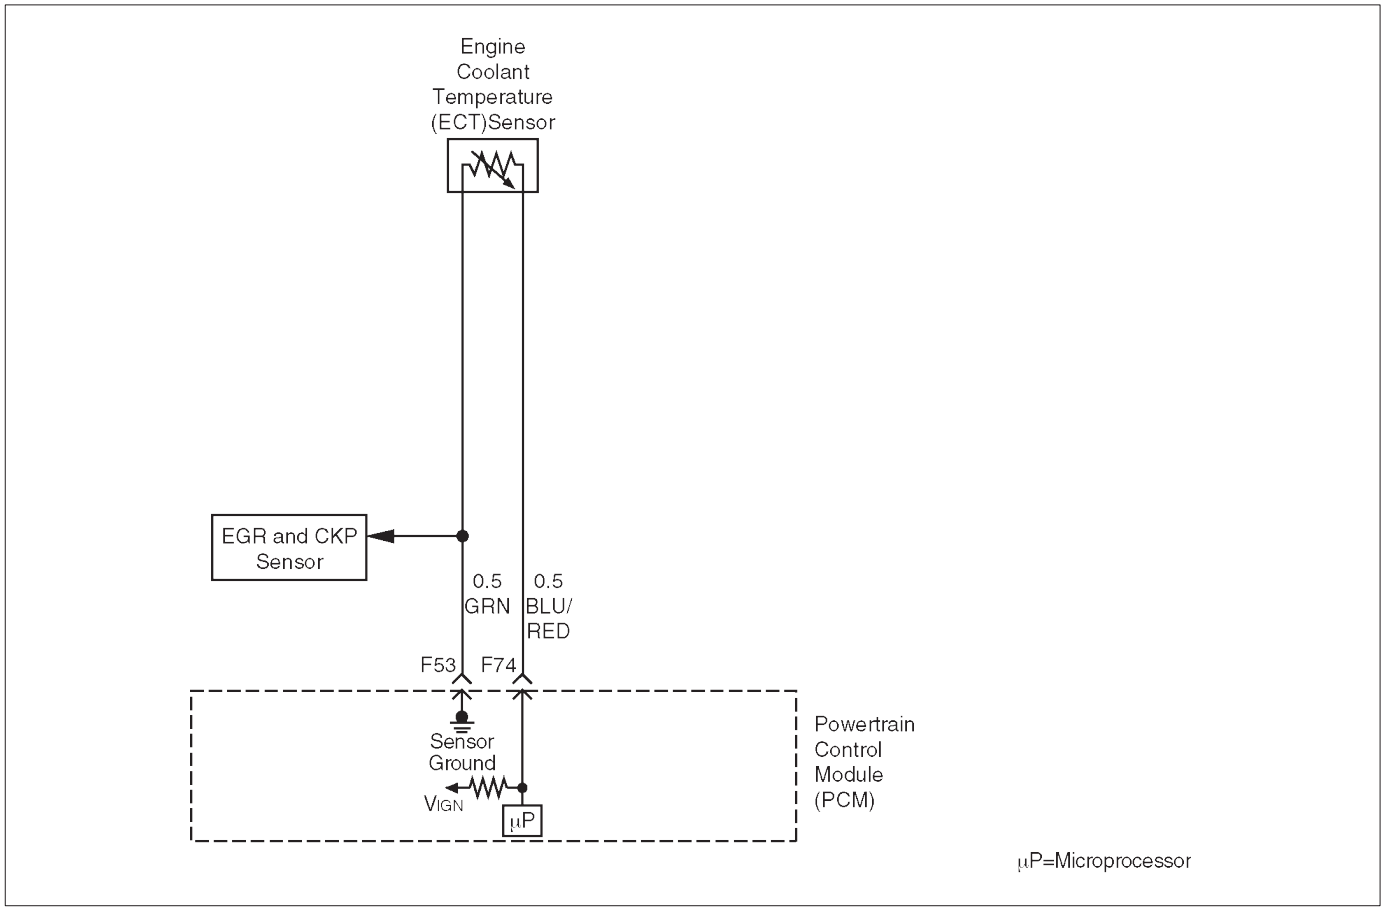Diagnostic Trouble Code (DTC)
P0125 ECT Excessive Time to Closed Loop Fuel Control



D06R200049

Circuit Description

To provide the best possible combination of driveability, fuel economy, and emission control, a “closed loop” air/fuel metering system is used. When the vehicle is first started, the powertrain control module (PCM) controls fuel delivery in “open loop”, ignoring the heated oxygen sensor (HO2S) signals and calculating air/fuel ratio based on inputs from the engine coolant temperature, throttle position, and mass air flow sensors. The PCM will begin using the Bank 1 HO2S 1 and Bank 2 HO2S 1 signals for controlling fuel delivery under “closed loop” conditions when the following conditions have been met:

- The HO2S output signals are varying, indicating that the sensors are hot enough to operate properly.
- The engine coolant temperature sensor indicates coolant temperature above 50˚C (122˚F).
- Time since start-up is at least 16 seconds for a warm engine or 23 seconds for a cold engine.

Conditions for Setting the DTC

- No active IAT, MAF or ECT DTC(s) are present.
- Engine is running.
- Vehicle speed is greater than 5 mph (8 km/h) .
- Intake air temperature is greater than –10˚C (14˚F) 0˚C (32˚F).
- Start–up engine coolant temperature is between –10˚C (–14˚F) and 28˚C (82˚F).
- For a warm engine (intake air temperature is greater than 10˚C/50˚F), engine coolant temperature sufficient to allow “closed loop” operation (50˚C/122˚F) is not achieved within 2 minutes of start-up. For a cold engine (intake air temperature between (–7˚C and 10˚C), engine coolant temperature sufficient to allow “closed loop” operation (50˚C/122˚F) is not achieved within 10 minutes of start-up.
- The above condition fails 20 consecutive times.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0125 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0125 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

DTC P0125 set indicates a faulty ECT sensor. Comparing the engine coolant temperature displayed on a Tech 2 with actual coolant temperature measured with a thermometer may isolate this condition. If the displayed engine coolant temperature is not close to the actual coolant temperature, replace the ECT sensor.

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

If DTC P0125 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage wince the DTC was last set.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. Comparing the engine coolant temperature displayed on a Tech 2 with actual coolant temperature measured with a thermometer may isolate this condition. If the displayed engine coolant temperature is not close to the actual coolant temperature, replace the ECT sensor. If the temperatures are close, the fault is intermittent; refer to *Diagnostic Aids*.

Engine Coolant Temperature

˚C	˚F	OHMS
Temperature vs. Resistance Values (approximate)		
100	212	177
80	176	332
60	140	667
45	113	1188
35	95	1802
25	77	2796
15	59	4450
5	41	7280
–5	23	12300
–15	5	21450
–30	–22	52700
–40	–40	100700


DTC P0125 –ECT Excessive Time to Closed Loop Fuel Control

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any ECT sensor DTCs set?	—	Go to applicable ECT sensor DTC chart	Go to *Step 3*
3	1. Allow the engine to cool completely. 2. Check the cooling system coolant level (refer to *Cooling and Radiator*). Is the coolant level OK?	—	Go to *Step 4*	Go to *Step 9*
4	1. Start the engine. 2. With the engine idling, monitor “ENG COOL TEMP” display on the Tech 2. Does “ENG COOL TEMP” increase to above the specified value within 2 minutes?	21˚C (70˚F)	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 5*
5	Check for proper operation of the thermostat (refer to *Cooling and Radiator*). Is the thermostat operating correctly?	—	Go to *Step 6*	Go to *Step 9*

DTC P0125 –ECT Excessive Time to Closed Loop Fuel Control (Cont'd)

Step	Action	Value(s)	Yes	No
6	Compare engine coolant temperature displayed on the Tech 2 to the actual coolant temperature measured with a thermometer. (Observe normal precautions when opening the cooling system.) Is the Tech 2 engine coolant temperature indication close to the measured temperature?	—	Go to *Step 9*	Go to *Step 7*
7	1. Ignition "OFF". 2. Disconnect the PCM. 3. Using a DVM, measure the resistance of the ECT at the PCM connector. 4. Compare the DVM reading with the chart in "Test Description". Is the chart value approximately equal to the thermometer reading?	—	Go to *Step 12*	Go to *Step 8*
8	Check for high resistance in wiring related to the ECT sensor. Also, check for poor connections at the ECT sensor and the PCM. Was a problem found?	—	Go to *Step 10*	Go to *Step 11*
9	Refer to *Cooling and Radiator* for cooling system diagnosis and repair condition as necessary. Is the action complete?	—	Verify repair	—
10	Replace the faulty terminal(s) or repair faulty wiring as necessary. Is the action complete?	—	Verify repair	—
11	Replace the ECT sensor. Is the action complete?	—	Verify repair	—
12	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

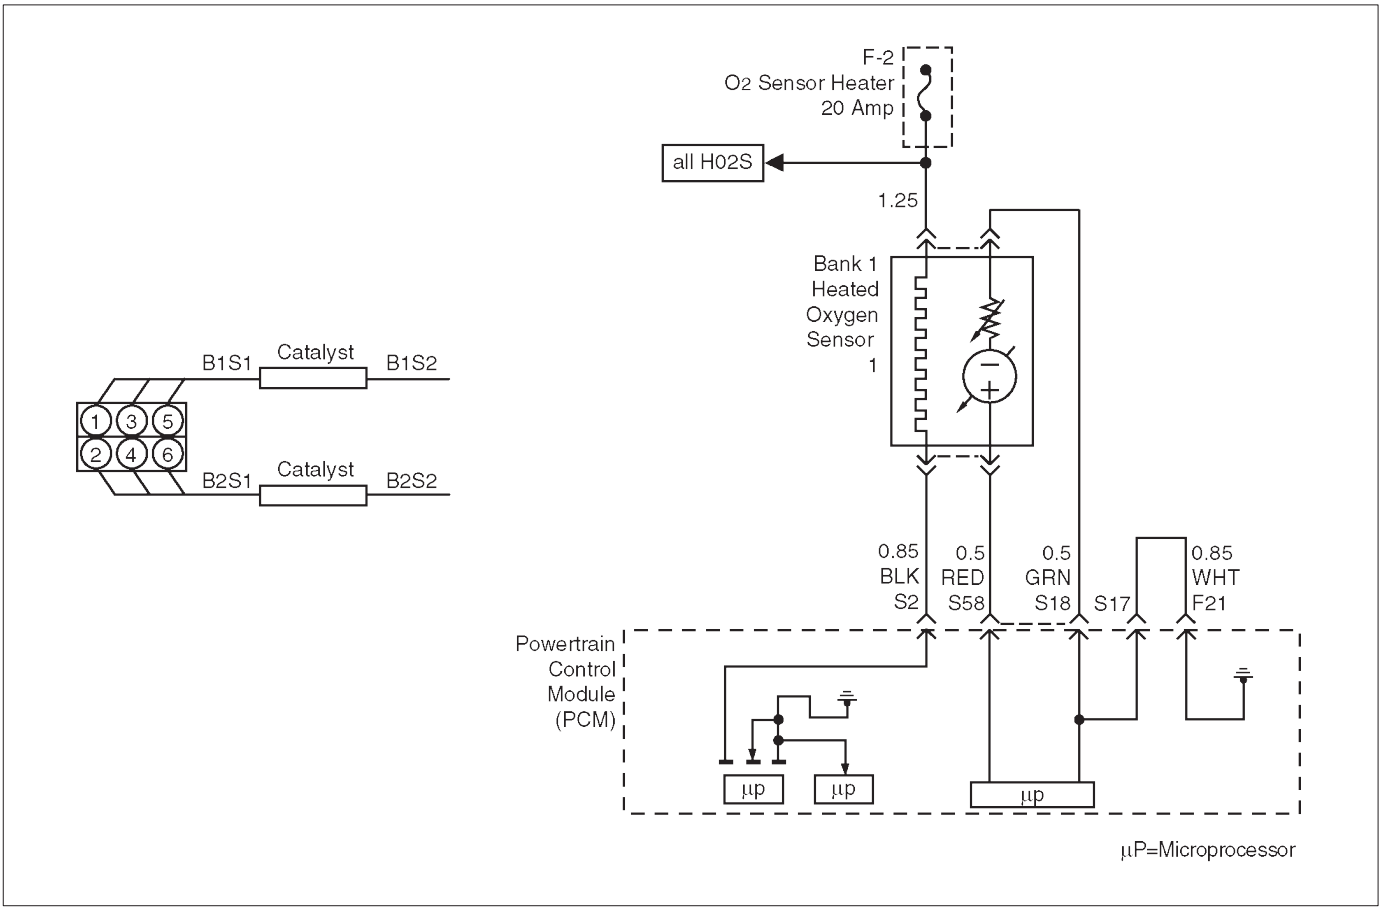Diagnostic Trouble Code (DTC)
P0131 HO2S Circuit Low Voltage Bank 1 Sensor 1



D06R200013

Circuit Description

The powertrain control module (PCM) supplies a bias voltage of about 450 mV between the heated oxygen sensor (HO2S) signal high and signal low circuits. When measured with a 10 megaohm digital voltmeter, this may display as low as 350 mV. The oxygen sensor varies the voltage within a range of about 1000 mV when the exhaust is rich, down through about 10 mV when exhaust is lean. The PCM constantly monitors the HO2S signal during "closed loop" operation and compensates for a rich or lean condition by decreasing or increasing injector pulse width as necessary. If the Bank 1 HO2S 1 voltage remains excessively low for an extended period of time, DTC P0131 will be set.

Conditions for Setting the DTC

- No related DTCs.
- Vehicle is operating in "closed loop".
- Engine coolant temperature is above 60°C (140°F).
- "Closed loop" commanded air/fuel ratio is between 14.5 and 14.8.
- Bank 1 HO2S 1 signal voltage remains below 22 mV during normal "closed loop" operation for a total of 77 seconds over a 90-second period of time.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.
- "Open loop" fuel control will be in effect.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0131 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0131 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Heated oxygen sensor wiring – The sensor pigtail may be routed incorrectly and contacting the exhaust system.
- Poor PCM to engine block grounds.
- Fuel pressure – The system will go lean if pressure is too low. The PCM can compensate for some decrease. However, If fuel pressure is too low, a DTC P0131 may be set. Refer to *Fuel System Diagnosis*.
- Lean injector(s) – Perform "Injector Balance Test".
- Vacuum leaks – Check for disconnected or damaged vacuum hoses and for vacuum leaks at the intake manifold, throttle body, EGR system, and PCV system.

- Exhaust leaks – An exhaust leak may cause outside air to be pulled into the exhaust gas stream past the HO2S, causing the system to appear lean. Check for exhaust leaks that may cause a false lean condition to be indicated.
- MAF sensor – The system can go lean if the MAF sensor signal indicates an engine airflow measurement that is not correct. Disconnect the MAF sensor to see if the lean condition is corrected. If so, replace the MAF sensor.
- Fuel contamination – Water, even in small amounts, can be delivered to the fuel injectors. The water can cause a lean exhaust to be indicated. Excessive alcohol in the fuel can also cause this condition. Refer to *Fuel System Diagnosis* for the procedure to check for fuel contamination.
- If none of the above conditions are present, replace the affected HO2S.

Test Description

Number(s) below refer to step numbers on the diagnostic chart.

3. DTC P0131 failing during operation may indicate a condition described in the “Diagnostic Aids” above. If the DTC P0131 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0131 –HO2S Circuit Low Voltage Bank 1 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at normal operating temperature. 3. Operate the vehicle within the parameters specified under “Conditions for Setting the DTC” criteria included in Diagnostic Support. 4. Using a Tech 2, monitor Bank 1 HO2S 1 voltage. Does the Bank 1 HO2S 1 voltage remain below the specified value?	22 mV	Go to *Step 4*	Go to *Step 3*
3	1. Ignition “ON”, engine “OFF”, review and record Tech 2 Failure Records data and note parameters. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor “DTC” info for DTC P0131 until the DTC P0131 test runs. Note test result. Does Tech 2 indicate DTC P0131 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Turn the ignition “OFF”. 2. Disconnect the PCM. 3. Check the Bank 1 HO2S 1 high and low circuits for a short to ground or a short to the heater ground circuit. Are the Bank 1 HO2S 1 signal circuits shorted to ground?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the Bank 1 HO2S 1 signal circuit. Is the action complete?	—	Verify repair	—
6	1. Turn the ignition “OFF”, HO2S 1 and PCM disconnected. 2. Check for short circuit between the high and low signal circuits. Was there continuity between the high and low circuits?	—	Go to *Step 7*	Go to *Step 8*
7	Repair the short between the high and low circuits. Is the action complete?	—	Verify repair	—

DTC P0131 –HO2S Circuit Low Voltage Bank 1 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
8	1. Ignition "OFF". 2. Reconnect the PCM, leave the sensor disconnected. 3. Ignition "ON". Does the Tech 2 indicate Bank 1 HO2S 1 voltage between the specified values?	425-475 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

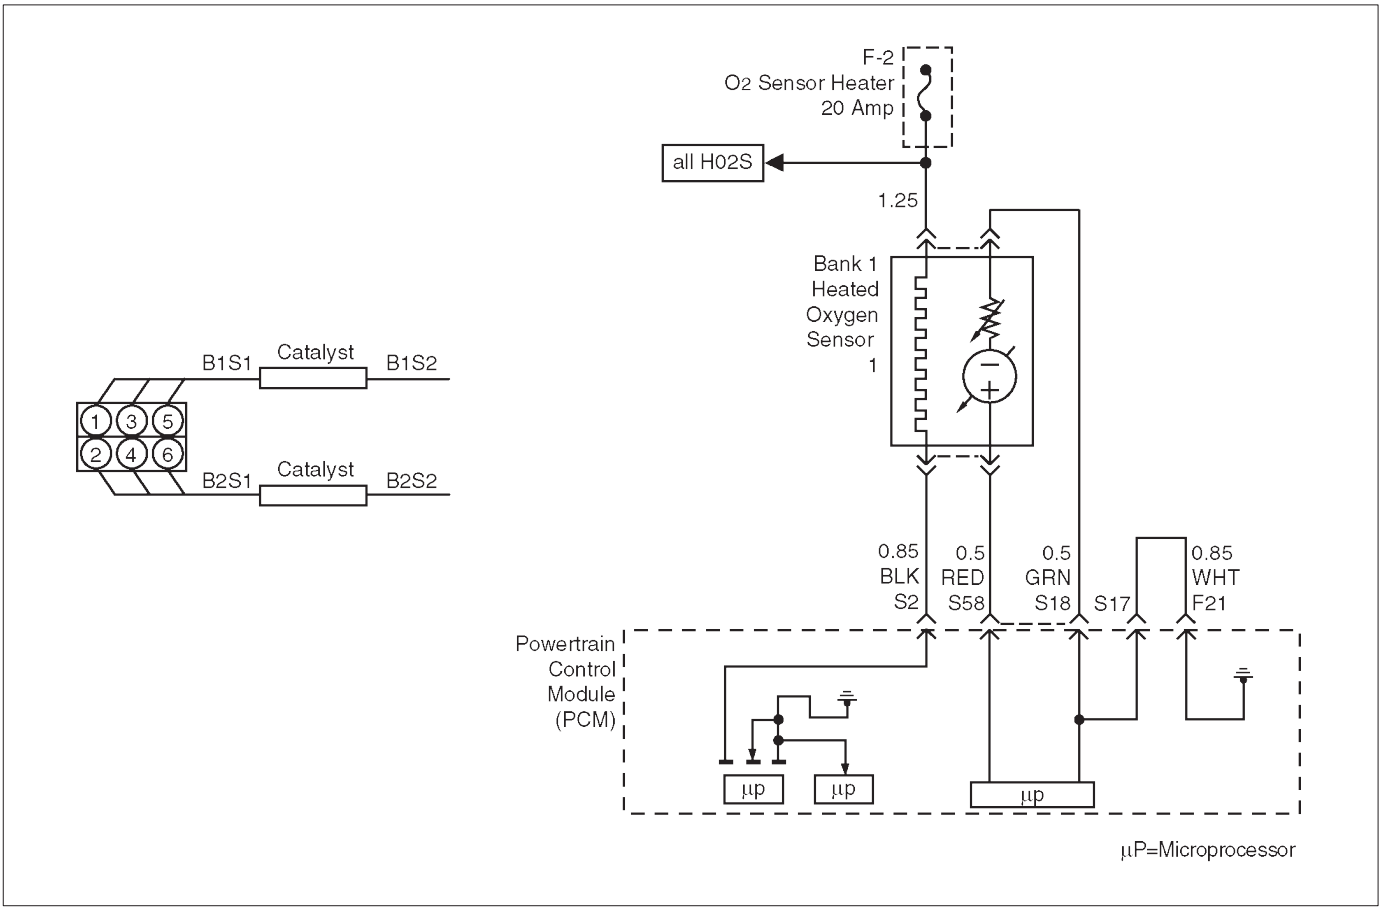Diagnostic Trouble Code (DTC)
P0132 HO2S Circuit High Voltage Bank 1 Sensor 1



D06R200013

Circuit Description

The powertrain control module (PCM) supplies a bias voltage of about 450 mV between the heated oxygen sensor (HO2S) signal and low circuits. When measured with a 10 megaohm digital voltmeter, this may display as low as 320 mV. The oxygen sensor varies the voltage within a range of about 1000 mV when exhaust is rich, down through about 10 mV when exhaust is lean. The PCM constantly monitors the HO2S signal during "closed loop" operation and compensates for a rich or lean condition by decreasing or increasing injector pulse width as necessary. If the Bank 1 HO2S 1 voltage remains excessively high for an extended period of time, DTC P0132 will be set.

Conditions for Setting the DTC

- No related DTCs.
- Engine coolant temperature is above 60˚C (140˚F)
- "Closed loop" commanded air/fuel ratio is between 14.5 and 14.8.
- Bank 1 HO2S 1 signal voltage remains above 952 mV during normal "closed loop" operation for a total of 77 seconds over a 90-second period.

OR

- Bank 1 HO2S 1 signal voltage remains above 500 mV during "deceleration fuel cutoff mode" operation for 3 seconds.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.
- "Open loop" fuel control will be in effect.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0132 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0132 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check the following items:

- Fuel pressure – The system will go rich if pressure is too high. The PCM can compensate for some increase. However, if fuel pressure is too high, a DTC P0132 may be set. Refer to *Fuel System Diagnosis*.
- Perform "Injector Balance Test" – Refer to *Fuel System Diagnosis*.

- Check the EVAP canister for fuel saturation – If full of fuel, check canister control and hoses. Refer to *Evaporative (EVAP) Emission Control System*.
- MAF sensor –The system can go rich if MAF sensor signal indicates an engine airflow measurement that is not correct. Disconnect the MAF sensor to see it the rich condition is corrected. If so, replace the MAF sensor.
- Check for a leak in the fuel pressure regulator diaphragm by checking the vacuum line to the regulator for the presence of fuel. There should be no fuel in the vacuum line.
- An intermittent TP sensor output will cause the system to go rich due to a false indication of the engine acceleration.
- Shorted Heated Oxygen Sensor (HO2S) –If the HO2S is internally shorted, the HO2S voltage displayed on the Tech 2 will be over 1 volt. Try disconnecting the affected HO2S with the key "ON", engine "OFF". If the displayed HO2S voltage changes from over 1000 mV to around 450 mV, replace the HO2S. Silicon contamination of the HO2S can also cause a high HO2S voltage to be indicated. This condition is indicated by a powdery deposit on the portion of the HO2S exposed to the exhaust stream. If contamination is noticed, replace the affected HO2S.
- Open HO2S Signal Circuit or Faulty HO2S–A poor connection or open in the HO2S signal circuit can cause the DTC to set during deceleration fuel mode. An HO2S which is faulty and not allowing a full voltage swing between the rich and lean thresholds can also cause this condition. Operate the vehicle by monitoring the HO2S voltage with a Tech 2. If the HO2S voltage is limited within a range between 300 mV to 600 mV, check the HO2S signal circuit wiring and associated terminal conditions.
- If none of the above conditions are present, replace the affected HO2S.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. DTC P0132 failing during "deceleration fuel cutoff mode" operation may indicate a condition described in the "Diagnostic Aids" above. If the DTC P0132 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0132 – HO2S Circuit High Voltage Bank 1 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the vehicle within parameters specified under "Conditions for Setting the DTC" included in Diagnostic Support. 4. Using a Tech 2, monitor Bank 1 HO2S 1 voltage. Does the Bank 1 HO2S 1 voltage remain above the specified value?	952 mV (500 mV in deceleration fuel cutoff mode)	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON", review and record Tech 2 Failure Records data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC" info for DTC P0132 until the DTC P0132 test runs. 4. Note the test result. Does the Tech 2 indicate DTC P0132 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Ignition "OFF". 2. Disconnect Bank 1 HO2S 1. 3. Ignition "ON". 4. At HO2S Bank 1 Sensor 1 connector (PCM side) use a DVM to measure voltages at the high and low signal terminals. Are the voltages in the specified range?	3-4 V	Go to *Step 5*	Go to *Step 6*

DTC P0132 – HO2S Circuit High Voltage Bank 1 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
5	Repair short to voltage in signal circuit. Is the action complete?	—	Verify repair	—
6	1. Ignition "ON", engine"OFF". 2. At Bank 1 HO2S 1 connector (PCM side) jumper both the HO2S high and low signal circuits (PCM side) to ground. 3. Using a Tech 2, monitor Bank 1 HO2S 1 voltage. Is Bank 1 HO2S 1 voltage below the specified value?	10 mV	Go to *Step 7*	Go to *Step 8*
7	1. Disconnect the jumpers to ground from Bank 1 HO2S 1 PCM-side connector. 2. With the HO2S 1 connector disconnected, monitor Bank 1 HO2S 1 voltage. Is Bank 1 HO2S 1 voltage between the specified values?	425-475 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 8*
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

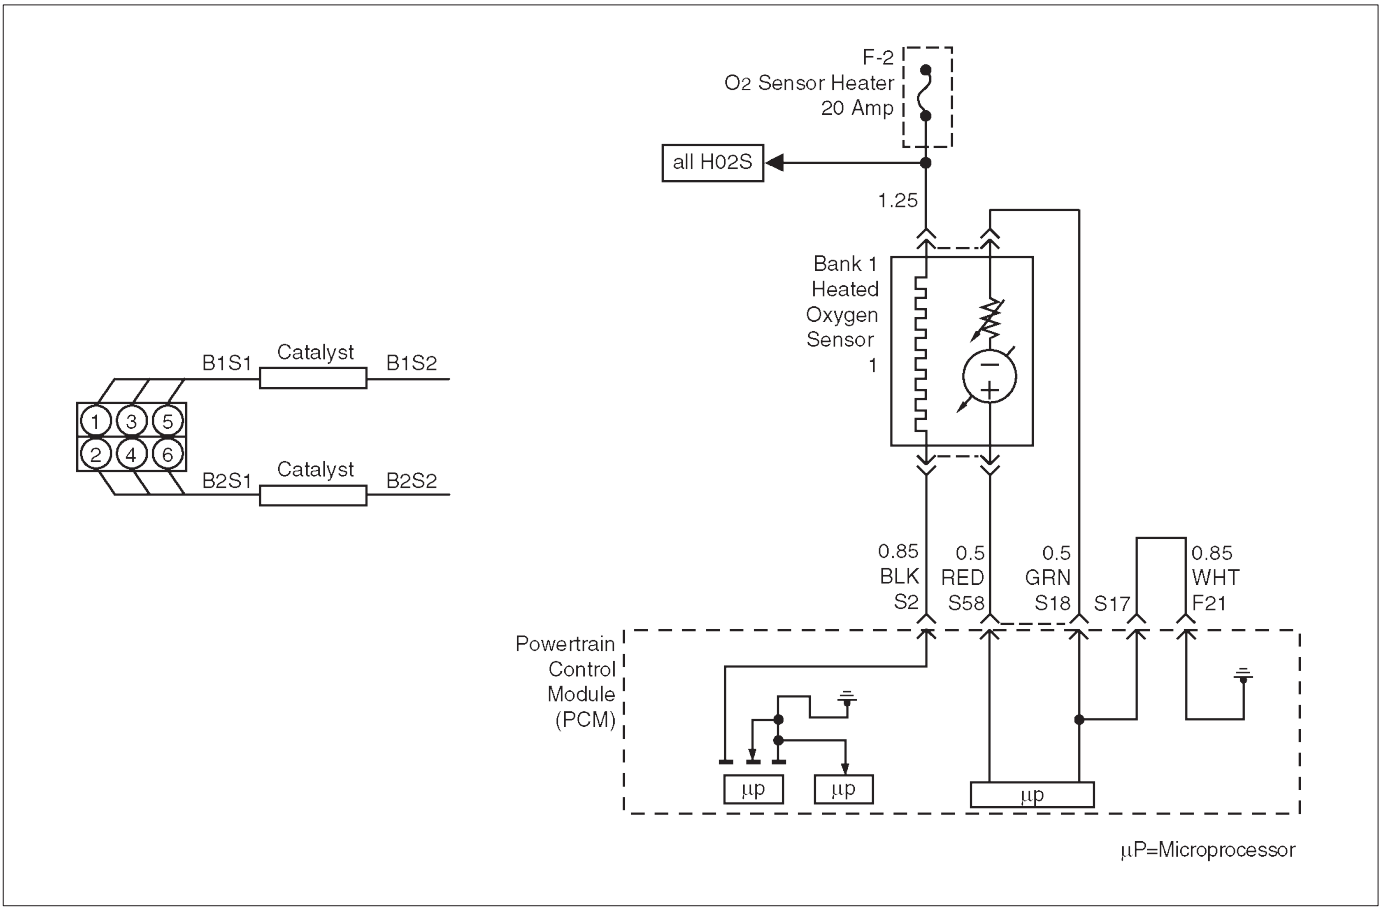Diagnostic Trouble Code (DTC)
P0133 HO2S Slow Response Bank 1 Sensor 1



D06R200013

Circuit Description

The powertrain control module (PCM) continuously monitors the heated oxygen sensor (HO2S) activity for 90 seconds after "closed loop" has been enabled. During the monitoring period the PCM counts the number of times that a rich-to-lean and lean-to-rich response is indicated and adds the amount of time it took to complete all rich-to-lean transitions and lean-to-rich transitions. With this information, an average time for rich-to-lean and lean-to-rich transitions can be determined. If the average response time of either transition is too slow, a DTC P0133 will be set.

A lean-to-rich transition is indicated when the HO2S voltage changes from less than 300 mV to greater than 600 mV. A rich-to-lean transition is indicated when the HO2S voltage changes from more than 600 mV to less than 300 mV. An HO2S that responds too slowly is likely to be faulty and should be replaced.

Conditions for Setting the DTC

- No related DTCs.
- Engine coolant temperature (ETC) is above 60°C (140°F).
- Engine is operating in "closed loop".
- Engine has been running for at least 90 seconds.
- Engine speed is between 1500 RPM and 3000 RPM.
- Canister purge duty cycle is greater than 2%.
- Mass air flow is between 18 g/second and 42 g/second.
- All above conditions are met for 3 seconds.
- 90 seconds after "closed loop" has been enabled, Bank1 HO2S 1 average transition time between 300 mV and 600 mV is too slow. The lean-to-rich average transition response time was longer than 94 milliseconds or rich-to-lean average transition response time was longer than 105 milliseconds.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator Lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.
- "Open loop" fuel control will be in effect.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0133 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0133 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Bank 1 HO2S 1 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

If DTC P0133 cannot be duplicated, reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. Verifies that the fault is currently present.

3. HO2S transition time, ratio mean volts and switching DTCs set for multiple sensors indicate probable contamination. Before replacing the sensors, isolate and correct the source of the contamination to avoid damaging the replacement sensors.


DTC P0133 – HO2S Slow Response Bank 1 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	NOTE: If any DTCs are set (expect P0153, P1133, P1134, P1153, and/or P1154), refer to those DTCs before proceeding with this diagnostic chart. 1. Install the Tech 2. 2. Idle the engine at normal operating temperature. 3. Operate the vehicle within parameters specified under “Conditions for Setting the DTC” included in Diagnostic Support. 4. Using a Tech 2, monitor “DTC” info for DTC P0133 until the DTC P0133 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0133 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Did the Tech 2 also indicate DTC P0153, P1133, P1134, P1153, and/or P1154 failed this ignition?	—	Go to *Step 17*	Go to *Step 4*
4	Check for leaks at the pipe joints. Are the joints leaking?	—	Go to *Step 5*	Go to *Step 6*
5	Tighten the U–bolt nuts at the leaking joints. Is the action complete?	—	Go to *Step 2*	—
6	Check for gaskets that are damaged or improperly installed. Are there damaged or misaligned gaskets?	—	Go to *Step 7*	Go to *Step 8*
7	1. Replace damaged gaskets. 2. Align the connections. 3. Tighten the connections. Is the action complete?	—	Go to *Step 2*	—
8	Check for loose exhaust flange connections. Are the flange connections loose?	—	Go to *Step 9*	Go to *Step 10*
9	Tighten the stud nuts or bolts to specifications. Is the action complete?	—	Go to *Step 2*	—
10	Check for burned or corroded exhaust pipes. Are the exhaust pipes burned or corroded?	—	Go to *Step 11*	Go to *Step 12*
11	Replace the exhaust pipes, as required. Is the action complete?	—	Go to *Step 2*	—
12	Check for leaks at the exhaust manifold. Are there leaks at the exhaust manifold?	—	Go to *Step 13*	Go to *Step 14*
13	Tighten the bolts to specifications to replace the manifold if necessary. Is the action complete?	—	Go to *Step 2*	—

DTC P0133 – HO2S Slow Response Bank 1 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
14	Visually/physically inspect the following items: ● Ensure that the Bank 1 HO2S 1 is securely installed. ● Check for corrosion on terminals. ● Check terminal tension (at Bank 1 HO2S 1 and at the PCM). ● Check for damaged wiring. Was a problem found in any of the above areas?	—	Go to *Step 18*	Go to *Step 15*
15	1. Disconnect Bank 1 HO2S 1. 2. Ignition "ON". 3. Using a DVM at the PCM side of the HO2S 1 connector, measure the voltage between the high signal circuit and ground. Also measure the voltage between the low signal circuit and ground. Are both voltages in the specified range?	3-4 V	Go to *Step 16*	Go to *Step 19*
16	1. With Bank 1 HO2S 1 disconnected, jumper the high and low (PCM side) signal circuits to ground. 2. Ignition "ON". 3. Using a Tech 2, monitor the Bank 1 HO2S 1 voltage. Does the Tech 2 indicate less than 10 mV and immediately return to about 450 mV when the jumper is removed?	—	Go to *Step 21*	Go to *Step 22*
17	Replace the affected heated oxygen sensors. NOTE: Before replacing sensors, the cause of the contamination must be determined and corrected. ● Fuel contamination. ● Use of improper RTV sealant. ● Engine oil/coolant consumption. Is the action complete?	—	Verify repair	—
18	Repair condition as necessary. Is the action complete?	—	Verify repair	—
19	Check for faulty PCM connections or terminal damage. Is the action complete?	—	Verify repair	Go to *Step 20*
20	Repair open, short or grounded signal circuit. Is the action complete?	—	Verify repair	—
21	Replace Bank 1 HO2S 1. Is the action complete?	—	Verify repair	—
22	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

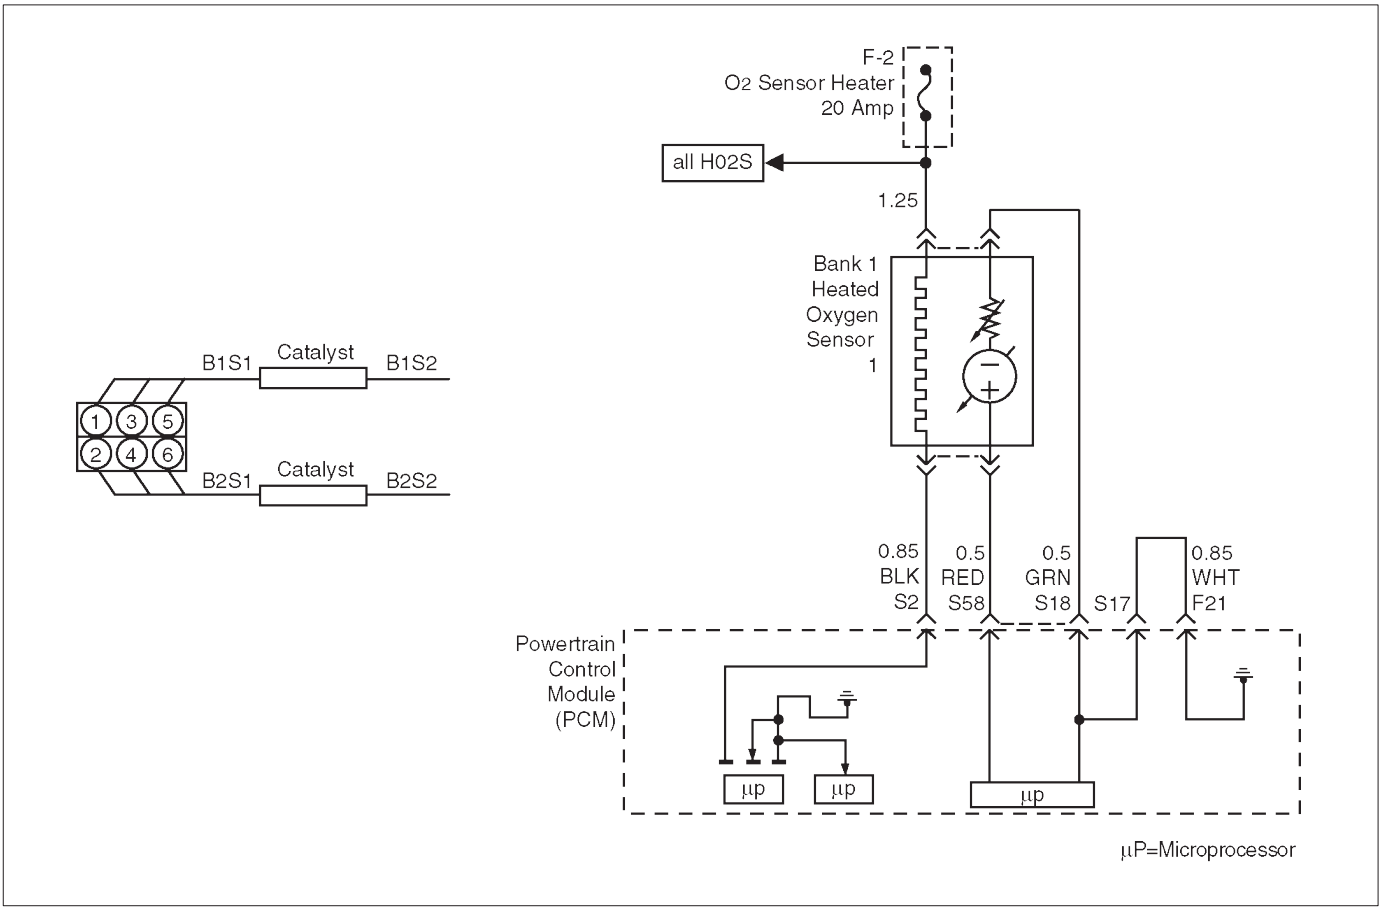Diagnostic Trouble Code (DTC)
P0134 HO2S Circuit Insufficient Activity Bank 1 Sensor 1



D06R200013

Circuit Description

- The powertrain control module (PCM) supplies a bias voltage of about 450 mV between the heated oxygen sensor (HO2S) high and low circuits. When measured with a 10 megaohm digital voltmeter, this may display as low as 320 mV. The oxygen sensor varies the voltage within a range of about 1000 mV when the exhaust is rich, down through about 10 mV when exhaust is lean. The PCM constantly monitors the HO2S signal during “closed loop” operation and compensates for a rich or lean condition by decreasing or increasing injector pulse width as necessary. If the Bank 1 HO2S 1 voltage remains at or near the 450 mV bias for an extended period of time, DTC P0134 will be set, indicating an open sensor signal or sensor low circuit.
- Heated oxygen sensors are used to minimize the amount of time required for “closed loop” fuel control operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active.
- Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature for accurate exhaust oxygen content readings further from the engine.

Conditions for Setting the DTC

- No related DTCs.
- Battery voltage is above 10 volts.
- The engine has been running for over 5 seconds.
- Engine coolant temperature (ETC) is above 60°C (140°F).
- Oxygen sensor heater has been determined to be functioning properly.
- Bank 1 HO2S 1 signal voltage remains between 400 mV and 500 mV for a total of 77 seconds over a 90-second period of time.

Action Take When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.
- “Open loop” fuel control will be in effect.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0134 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0134 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection or damaged harness – Inspect the harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.
- Faulty HO2S heater or heater circuit – With the ignition "ON", engine "OFF", after a cool down period, the HO2S 1 voltage displayed on the Tech 2 is normally 455-460 mV. A reading over 1000 mV indicates a signal line shorted to voltage. A reading under 5 mV indicates a signal line shorted to ground or signal lines shorted together. Disconnect the HO2S and connect a test light between the HO2S ignition feed and heater ground circuits. If the test light does not light for 2 seconds when the ignition is turned on, repair the open ignition feed or sensor ground circuit as necessary. If the test light lights and the HO2S signal and low circuits are OK, replace the HO2S.
- Intermittent test – With the Ignition "ON", monitor the HO2S signal voltage while moving the wiring harness and related connectors. If the fault is induced, the HO2S signal voltage will change. This may help isolate the location of the malfunction.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. If the DTC P0134 test passes while the Failure Records conditions are being duplicated, an intermittent conditions is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0134 –HO2S Circuit Insufficient Activity Bank 1 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the engine above 1200 RPM for two minutes. Does the Tech 2 indicate Bank 1 HO2S 1 voltage varying outside the specified values?	400-500 mV	Go to *Step 3*	Go to *Step 4*
3	1. Ignition "ON", engine "OFF", review and record Tech 2 Failure Records data and note parameters. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC" info for DTC P0134 until the DTC P0134 test runs. 4. Note the test result. Does the Tech 2 indicate DTC P0134 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	Check for a damaged harness. Was a problem found?	—	Verify repair	Go to *Step 5*
5	Check for poor Bank 1 HO2S 1 high and low circuit terminal connections at the Bank 1 HO2S 1 harness connector and replace terminal(s) if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 6*
6	Check for poor Bank 1 HO2S 1 high and low circuit terminal connections at the PCM and replace terminals if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 7*

DTC P0134 –HO2S Circuit Insufficient Activity Bank 1 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
7	1. Ignition "OFF". 2. With the PCM disconnected, check continuity of the Bank 1 HO2S 1 high circuit. 3. If the Bank 1 HO2S 1 high circuit measures over 5.0 ohms, repair open or poor connection as necessary. Was a Bank 1 HO2S 1 high circuit problem found and corrected?	—	Verify repair	Go to *Step 8*
8	1. Ignition "OFF". 2. With the PCM disconnected, check continuity of the Bank 1 HO2S 1 low circuit. 3. If the Bank 1 HO2S 1 low circuit measures over 5 ohms, repair open or poor connection as necessary. Was a Bank 1 HO2S 1 low circuit problem found and corrected?	—	Verify repair	Go to *Step 9*
9	1. Ignition "ON", engine "OFF". 2. Disconnect Bank 1 HO2S 1 and jumper the HO2S high and low circuits (PCM side) to ground. 3. Using a Tech 2, monitor Bank 1 HO2S 1 voltage. Is Bank 1 HO2S 1 voltage in the specified range?	0-10 mV	Go to *Step 10*	Go to *Step 11*
10	Replace Bank 1 HO2S 1. Is the action complete?	—	Verify repair	—
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

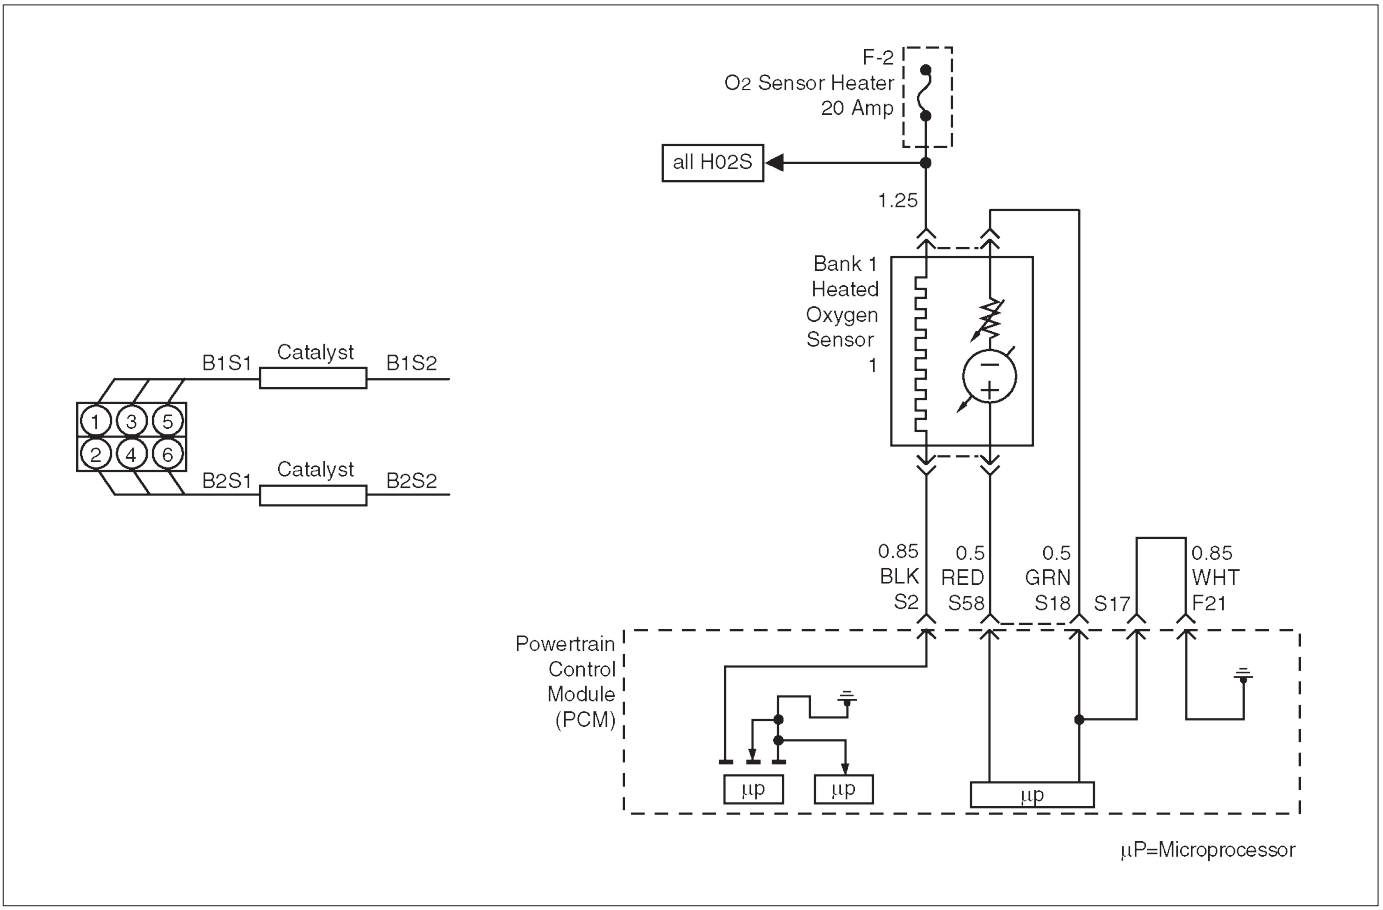Diagnostic Trouble Code (DTC)
P0135 HO2S Heater Circuit Bank 1 Sensor 1



D06R200013

Circuit Description

Heated oxygen sensors are used to minimize the amount of time required for “closed loop” fuel control operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active. Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature which allows accurate exhaust oxygen content readings further from the engine. The powertrain control module (PCM) will run the heater test only after a cold start (determined by engine coolant and intake air temperature at the time of start-up) and only once during an ignition cycle. When the engine is started the PCM will monitor the HO2S voltage. When the HO2S voltage indicates a sufficiently active sensor, the PCM looks at how much time has elapsed since start-up. If the PCM determines that too much time was required for the Bank 1 HO2S 1 to become active, a DTC P0135 will set. The time it should take the HO2S to reach operating temperature is based on the accumulated amount of air that has passed through the MAF sensor and into the engine (more accumulated air flow = shorter time to HO2S activity).

Conditions for Setting the DTC

- The engine has been running for over 120 seconds.
- Heater signal is below 0.1A.
- Bank 1 HO2S 1 voltage does not change more than 150 mV from the bias voltage (between 400 mV and 500 mV) for a longer amount of time than it should. The maximum amount of time to come up to operating range is 150 seconds. This warm-up time depends on the engine coolant temperature at start-up and accumulate air flow since start-up.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0135 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0135 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the ECT display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. The HO2S should be allowed to cool before performing this test. If the HO2S heater is functioning, the signal voltage will gradually increase or decrease as the sensor element warms. If the heater is not functioning, the HO2S signal will remain near the 450 mV bias voltage.
4. Ensures that the ignition feed circuit to the HO2S is not open or shorted. The test light should be connected to a good chassis ground, in case the HO2S low or HO2S heater ground circuit is faulty.
5. Checks the HO2S heater ground circuit.
6. Checks or an open or shorted HO2S heater element.
10. An open HO2S signal or low circuit can cause the HO2S heater to appear faulty. Check these circuits before replacing the sensor.


DTC P0135 – HO2S Heater Circuit Bank 1 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	NOTE: If the engine has just been operating ,allow the engine to cool for at least 15 minutes before proceeding. 1. Remove the fuel pump relay. 2. Connect a fused jumper at the fuel pump relay socket, between the battery positive at the relay and the relay wire that leads to the fuel pump and HO2S fuses. 3. Ignition “OFF”. 4. Install a Tech 2. 5. Ignition “ON”, engine “OFF”. 6. Monitor the Bank 1 HO2S 1 voltage for several minutes. Did the HO2S voltage go from bias voltage to above or below the specified values?	Above 650 mV or below 250 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 3*
3	Inspect the fuse for the Bank 1 HO2S 1 ignition feed. Is the fuse open?	—	Go to *Step 15*	Go to *Step 4*
4	1. Ignition “OFF”. 2. Raise the vehicle. 3. Disconnect the Bank 1 HO2S 1 electrical connector. 4. Using a test light connected to a good ground (do not use Bank 1 HO2S 1 heater ground or Bank 1 HO2S 1 low), probe the ignition feed circuit at the Bank 1 HO2S 1 electrical connector (PCM harness side). Does the test light illuminate?	—	Go to *Step 5*	Go to *Step 7*
5	Connect the test light between the Bank 1 HO2S 1 ignition feed and the Bank 1 HO2S 1 heater ground. Does the test light illuminate?	—	Go to *Step 6*	Go to *Step 8*

DTC P0135 – HO2S Heater Circuit Bank 1 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
6	1. Allow the HO2S to cool for at least 15 minutes. 2. Using a DVM, measure the resistance between the Bank 1 HO2S 1 ignition feed and the Bank 1 HO2S 1 heater ground at the Bank 1 HO2S 1 pigtail. Is the HO2S heater resistance within the specified values?	3-6 ohms	Go to *Step 9*	Go to *Step 10*
7	Repair the open Bank 1 HO2S 1 ignition feed circuit to Bank 1 HO2S 1. Is the action complete?	—	Verify repair	—
8	Repair the open Bank 1 HO2S 1 heater ground circuit to Bank 1 HO2S 1. Is the action complete?	—	Verify repair	—
9	1. Check for a poor connection at the Bank 1 HO2S 1 harness terminals. 2. If a poor connection is found, replace terminals. Was a poor connection found?	—	Verify repair	Go to *Step 10*
10	Check for a poor Bank 1 HO2S 1 high or low circuit terminal connection at the Bank 1 HO2S 1 harness connector and replace terminal(s) if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 11*
11	1. Ignition "OFF". 2. Disconnect the PCM and check the continuity of the Bank 1 HO2S 1 signal circuit and the Bank 1 HO2S 1 low circuit. 3. If the Bank 1 HO2S 1 high circuit or HO2S low circuit measures over 5 ohms, repair open or poor connection as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	Check for a poor Bank 1 HO2S 1 low circuit terminal connection at the PCM and replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 13*
13	Check for a poor Bank 1 HO2S 1 high circuit terminal connection at the PCM and replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 14*
14	Replace the Bank 1 HO2S 1. Is the action complete?	—	Verify repair	—
15	Locate and repair the short to ground in Bank 1 HO2S 1 ignition feed circuit and replace the fault fuse. Is the action complete?	—	Verify repair	—

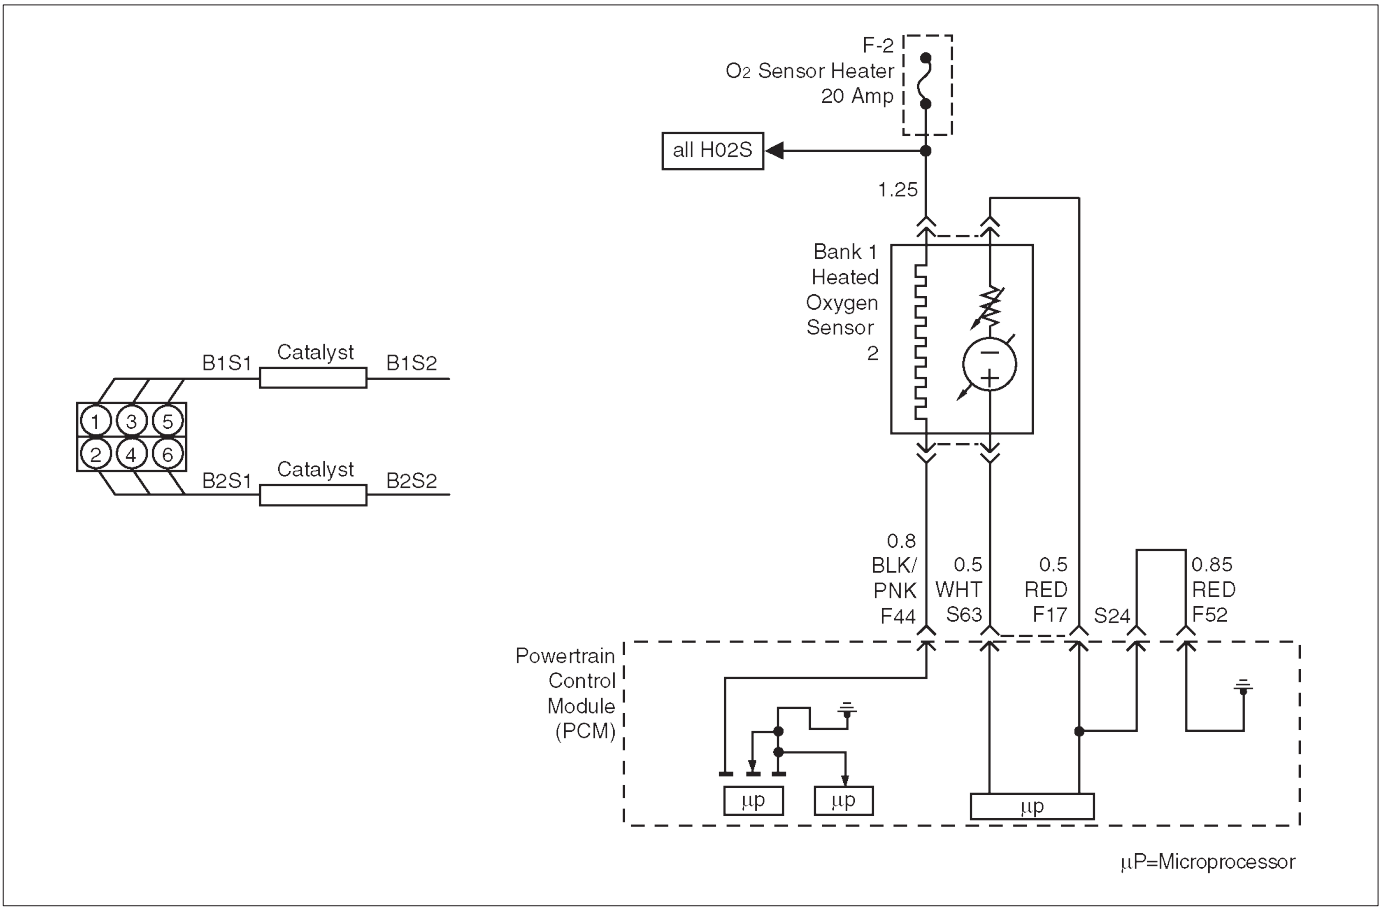Diagnostic Trouble Code (DTC)
P0137 HO2S Circuit Low Voltage Bank 1 Sensor 2



D06RY00173

Circuit Description

The powertrain control module (PCM) supplies bias voltage of about 450 mV between the heated oxygen sensor (HO2S) signal high and signal low circuits. When measured with a 10 megaohm impedance digital voltmeter, this may display as low as 350 mV. The oxygen sensor varies the voltage within a range of about 1000 mV when exhaust is rich, down through about 10 mV when the exhaust is lean. The PCM constantly monitors the HO2S signal during “closed loop” operation and compensates for a rich or lean condition by decreasing or increasing injector pulse width as necessary. If the Bank 1 HO2S 2 signal voltage remains excessively low for an extended period of time, DTC P0137 will be set.

Conditions for Setting the DTC

- No related DTCs.
- Engine is operating in “closed loop”.
- Engine coolant temperature is above 60°C (140°F).
- “Closed loop” commanded air/fuel ratio is between 14.5 and 14.8.
- Throttle angle is between 3% and 19%.
- Bank 1 HO2S 2 signal voltage remains below 22 mV during normal “closed loop” operation for a total of 106 seconds over a 125-second period of time.

OR

- Bank 1 HO2S 2 signal voltage remains below 400 mV during power enrichment mode fuel control operation for up to 5 seconds.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0137 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0137 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Heated oxygen sensor wiring – The sensor pigtail may be mispositioned and contacting the exhaust system.
- Poor PCM to engine grounds.
- Fuel pressure – A condition which causes a lean exhaust can cause DTC P0137 to set. The system will go lean if pressure is too low. The PCM can

compensate for some decrease. However, if fuel pressure is too low, a DTC P0137 may be set. Refer to *Fuel System Diagnosis*.

- Lean injector(s) – Perform "Injector Balance Test".
- Vacuum leaks – Check for disconnected or damaged vacuum hoses and for vacuum leaks at the intake manifold, throttle body, EGR system, and PCV system.
- Exhaust leaks – An exhaust leak may cause outside air to be pulled into the exhaust gas stream past the HO2S, causing the DTC P0137 to set. Check for exhaust leaks near the Bank 1 HO2S 2 sensor.
- MAF sensor – The system can go lean if the MAF sensor signal indicates an engine airflow measurement that is not correct. Disconnect the MAF sensor to see if the lean condition is corrected. If so, replace the MAF sensor.
- Fuel contamination – Water, even in small amounts, can be delivered to the fuel injectors. The water can cause a lean exhaust to be indicated. Excessive alcohol in the fuel can also cause this condition. Refer to *Fuel System Diagnosis* for procedure to check for fuel contamination.
- If none of the above conditions are present, replace the affected HO2S.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. DTC P0137 failing during operation may indicate a condition described in the "Diagnostic Aids" above. If the DTC0137 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0137 –HO2S Circuit Low Voltage Bank 1 Sensor 2

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the vehicle within the parameters specified under "Conditions for Setting the DTC" criteria included in Diagnostic Support. 4. Using a Tech 2, monitor Bank 1 HO2S 2 voltage. Does the Bank 1 HO2S voltage remain below the specified value?	22 mV	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON", engine "OFF", review and record Tech 2 Failure Records data and note parameters. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC" info for DTC P0137 until the DTC P0137 test runs. 4. Note the test result. Does the Tech 2 indicate DTC P0137 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Turn ignition "OFF". 2. Disconnect the PCM. 3. Check the Bank 1 HO2S 2 high and low signal circuits for a short to ground or a short to the heater ground circuit. Were Bank 1 HO2S 2 signal circuits shorted?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the Bank 1 HO2S 2 signal circuit. Is the action complete?	—	Verify repair	—
6	1. Ignition "OFF". 2. Leave the PCM and HO2S 2 disconnected. 3. Check for continuity between the high and low signal circuits. Was there continuity between the high and low circuits?	—	Go to *Step 7*	Go to *Step 8*

DTC P0137 –HO2S Circuit Low Voltage Bank 1 Sensor 2 (Cont'd)

Step	Action	Value(s)	Yes	No
7	Repair the short between the high and low circuits. Is the action complete?	—	Verify repair	—
8	1. Ignition "OFF". 2. Reconnect the PCM, leave HO2S 2 disconnected. 3. Ignition "ON". Does the Tech 2 indicate Bank 1 HO2S 2 voltage near the specified value?	425-475 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

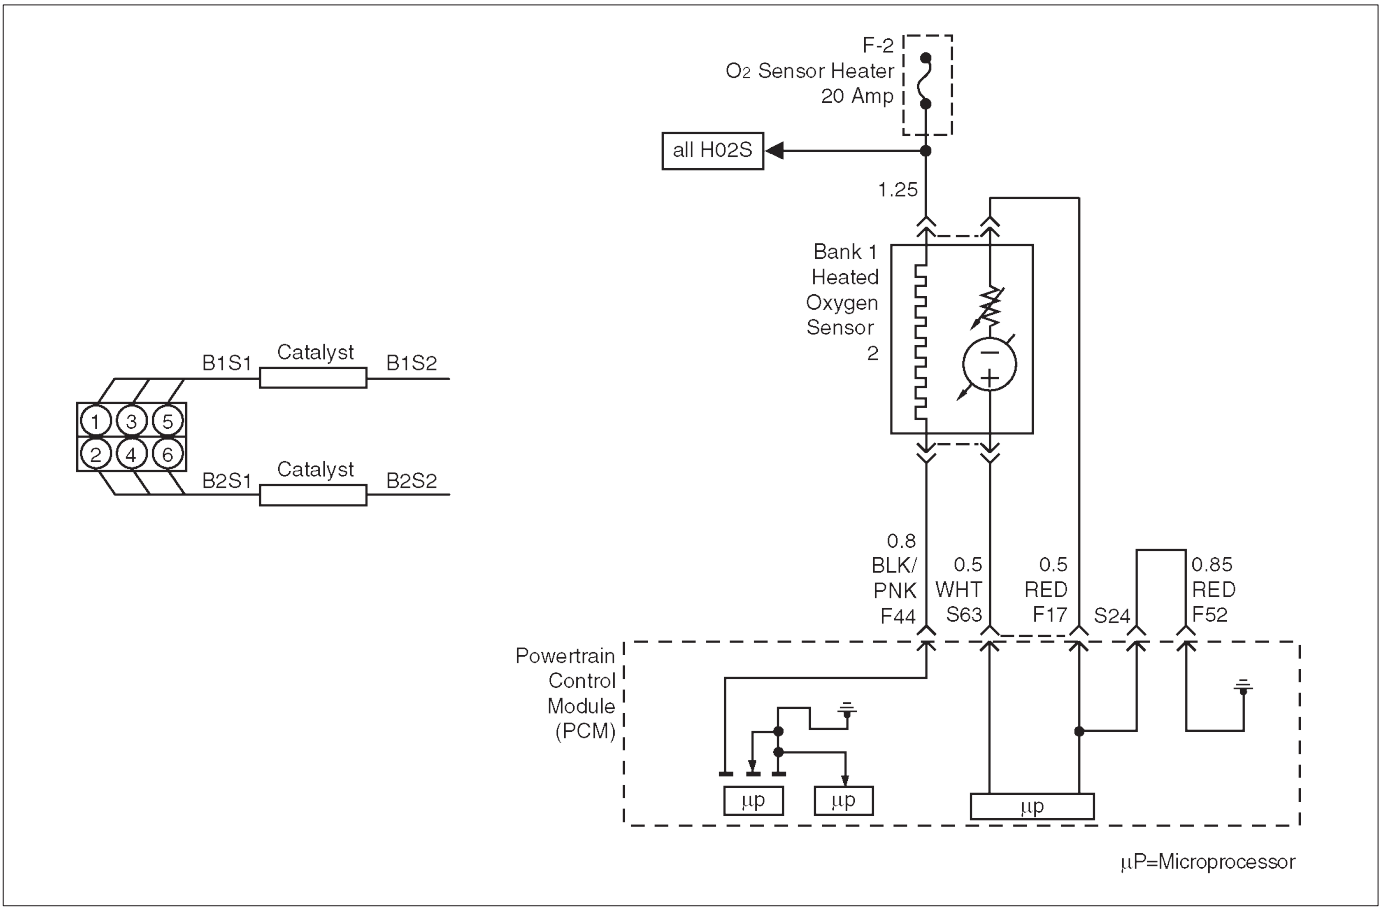Diagnostic Trouble Code (DTC)
P0138 HO2S Circuit High Voltage Bank 1 Sensor 2



Circuit Description

The powertrain control module (PCM) supplies bias voltage of about 450 mV between the heated oxygen sensor (HO2S) signal high and signal low circuits. When measured with a 10 megaohm digital voltmeter, this may display as low as 320 mV. The oxygen sensor varies the voltage within a range of about 1000 mV when exhaust is rich, down through about 10 mV when the exhaust is lean. The PCM constantly monitors the HO2S signal during "closed loop" operation and compensates for a rich or lean condition by decreasing or increasing injector pulse width as necessary. If the Bank 1 HO2S 2 voltage remains excessively high for an extended period of time, DTC P0138 will be set.

Conditions for Setting the DTC

- No related DTCs.
- Engine is operating in "closed loop".
- "Closed loop" commanded air/fuel ratio is between 14.5 and 14.8.
- Engine coolant temperature is above 60°C (140°F).
- Throttle angle is between 3% and 19%.
- Bank 1 HO2S 2 signal voltage remains above 952 mV during normal "closed loop" operation for a total of 106 seconds over a 125-second period of time.

OR

- Bank 1 HO2S 2 signal voltage remains above 500 mV during deceleration fuel cut–off mode operation for up to 3 seconds.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0138 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0138 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Fuel pressure – An excessively rich fuel mixture can cause a DTC P0138 to be set. Refer to *Fuel System Diagnosis*.
- Rich injector(s) – Perform "Injector Balance Test".
- Leaking injector – Refer to *Fuel System Diagnosis*.

- Evaporative emissions (EVAP) canister purge – Check for fuel saturation. If full of fuel, check the canister control and hoses. Refer to *Evaporative Emission (EVAP) Control System*.
- MAF sensor –The system can go rich if the MAF sensor signal indicates an engine airflow measurement that is not correct. Disconnect the MAF sensor to see if the rich condition is corrected. If so, replace the MAF sensor.
- Check for a leak in fuel pressure regulator diaphragm by checking the vacuum line to the regulator for the presence of fuel. There should be no fuel in the vacuum line.
- TP sensor – An intermittent TP sensor output will cause the system to go rich, due to a false indication of the engine accelerating.
- Shorted Heated Oxygen Sensor (HO2S) – If the HO2S is internally shorted the HO2S voltage displayed on the Tech 2 will be over 1 volt. Try disconnecting the affected HO2S with the key "ON", engine "OFF". If the displayed HO2S voltage changes from over 1000 mV to around 450 mV, replace the HO2S. Silicon contamination of the HO2S can also cause a high HO2S voltage to be indicated. This condition is indicated by a powdery deposit on the portion of the HO2S exposed to the exhaust stream. If contamination is noticed, replace the affected HO2S.
- Open HO2S Signal Circuit of Faulty HO2S – A poor connection or open in the HO2S signal circuit can cause the DTC to set during deceleration fuel mode. An HO2S which is faulty and not allowing a full voltage swing between the rich and lean thresholds can also cause this condition. Operate the vehicle while monitoring the HO2S voltage with a Tech 2. If the HO2S voltage is limited within a range between 300 mV to 600 mV, check the HO2S signal and wiring and associated terminal connections.
- If none of the above conditions are present, replace the affected HO2S.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. DTC P0138 being set during deceleration fuel mode operation may indicate a condition described in the "Diagnostic Aids" above. If the DTC P0138 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0138 – HO2S Circuit High Voltage Bank 1 Sensor 2

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the vehicle within the parameters specified under "Conditions for Setting the DTC" criteria included in Diagnostic Support. 4. Using a Tech 2, monitor Bank 1 HO2S 2 voltage. Does the Bank 1 HO2S voltage remain above the specified value?	952 mV (500 mV in deceleration fuel cutoff mode)	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON", review and record Tech 2 Failure Records data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC" info for DTC P0138 until the DTC P0138 test runs. 4. Note the test result. Does the Tech 2 indicate DTC P0138 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Ignition "OFF". 2. Disconnect Bank 1 HO2S 1. 3. Ignition "ON". 4. At the HO2S Bank 1 Sensor 2 connector (PCM side), use a DVM to measure voltages at the high and low signal terminals. Are the voltages above the specified range?	3-4 V	Go to *Step 5*	Go to *Step 6*

DTC P0138 – HO2S Circuit High Voltage Bank 1 Sensor 2 (Cont'd)

Step	Action	Value(s)	Yes	No
5	Repair short to voltage in the signal circuit. Is the action complete?	—	Verify repair	—
6	1. Ignition "ON", engine"OFF". 2. At Bank 1 HO2S 2 connector (PCM side) jumper both the HO2S high and low signal circuits (PCM side) to ground. 3. Using a Tech 2, monitor Bank 1 HO2S 2 voltage. Is Bank 1 HO2S 2 voltage below the specified value?	10 mV	Go to *Step 7*	Go to *Step 8*
7	1. Disconnect the jumpers to ground from Bank 1 HO2S 2 PCM–side connector. 2. With the HO2S 2 connector disconnected, monitor BANK 1 HO2S 2 voltage. Is the Bank 1 HO2S 2 voltage between the specified values?	425-475 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 8*
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

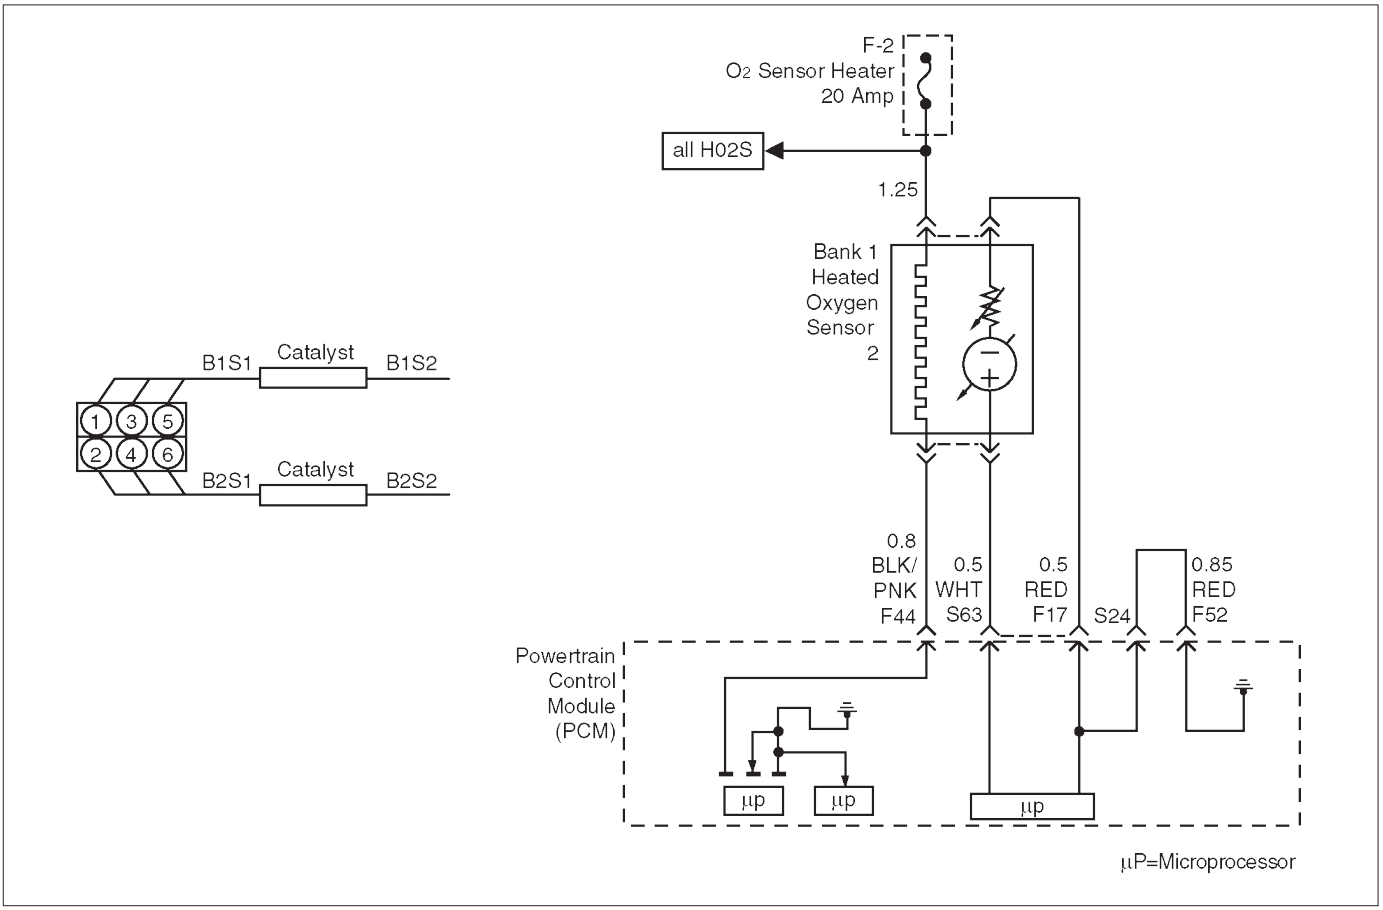Diagnostic Trouble Code(DTC)
P0140 HO2S Circuit Insufficient Activity Bank 1 Sensor 2



Circuit Description

To control emissions of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx), a three-way catalytic converter is used. The catalyst within the converter promotes a chemical reaction which oxidizes the HC and CO present in the exhaust gas, converting them into harmless water vapor and carbon dioxide. The catalyst also reduces NOx, converting it to nitrogen. The powertrain control module (PCM) has the ability to monitor this process using the Bank 1 HO2S 1 and the Bank 1 HO2S 2 heated oxygen sensors. The Bank 1 HO2S 2 sensor produces an output signal which indicates the amount of oxygen present in the exhaust gas entering the three-way catalytic converter. The Bank 1 HO2S 2 sensor produces an output signal which indicates the oxygen storage capacity of the catalyst; this in turn indicates the catalyst's ability to convert exhaust gases efficiently. If catalyst is operating efficiently, the Bank 1 HO2S 1 signal will be far more active than that produced by the Bank 1 HO2S 2 sensor. If the Bank 1 HO2S 2 signal voltage remains between 400 mV and 500 mV for an extended period of time, DTC P0140 will be set. Heated oxygen sensors are used to minimize the amount of time required for "closed loop" fuel control operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active. Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature for accurate exhaust oxygen content readings further from the engine.

Conditions for Setting the DTC

- No related DTCs.
- Engine coolant temperature is above 60˚C (140˚F).
- The engine has been running for over 5 seconds.
- Oxygen sensor heater is functioning properly.
- Engine is operating in "closed loop"
- Bank 1 HO2S 2 signal voltage remains between 426 mV and 474 mV for a total of 106 seconds over a 125-second period of time.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Cleaning the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0140 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0140 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection or damaged harness– Inspect the harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.
- Faulty HO2S heater or heater circuit–With the ignition“ON”, engine “OFF”, the HO2S voltage displayed on a Tech 2 should gradually drop to below 250 mV. If not, disconnect the HO2S and connect a test light between the HO2S ignition feed and heater ground circuits. If the test light does not light, repair the open ignition feed or sensor ground circuit as necessary. If the test light lights and the HO2S signal and low circuits are OK, replace the HO2S.
- Intermittent test–With the ignition “ON”, monitor the HO2S signal voltage while moving the wiring harness and related connectors. If the fault is induced, the HO2S signal voltage will change. This may help isolate the location of the malfunction.

Test Description

Number (s) below refer to the step number (s) on the Diagnostic Chart.

3. If the DTC P0140 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0140 – HO2S Circuit Insufficient Activity BANK 1 SENSOR 2

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the engine above 1200 RPM for two minutes. Does the Tech 2 indicate Bank 1 HO2S 2 voltage varying outside the specified values?	425-475 mV	Go to *Step 3*	Go to *Step 4*
3	1. Ignition “ON”, engine “OFF”, review and record Tech 2 Failure Records data and note parameters. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor “DTC” info for DTC P0140 until the DTC P0140 test runs. 4. Note the test result. Does the Tech 2 indicate DTC P0140 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	Check for a damaged harness. Was a problem found?	—	Verify repair	Go to *Step 5*
5	Check for poor Bank 1 HO2S 2 high and low circuit terminal connections at the Bank 1 HO2S 2 harness connector and replace terminal(s) if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 6*
6	Check for poor Bank 1 HO2S 2 high and low circuit terminal connections at the PCM and replace terminal(s) if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 7*
7	1. Ignition “OFF”. 2. With the PCM disconnected, check continuity of the Bank 1 HO2S 2 high circuit. 3. If the Bank 1 HO2S 2 high circuit measures over 5.0 ohms, repair open or poor connection as necessary. Was a Bank 1 HO2S 2 high circuit problem found and corrected?	—	Verify repair	Go to *Step 8*

DTC P0140 – HO2S Circuit Insufficient Activity BANK 1 SENSOR 2 (Cont'd)

Step	Action	Value(s)	Yes	No
8	1. Ignition "OFF". 2. With the PCM disconnected, check continuity of the Bank 1 HO2S 2 high circuit. 3. If the Bank 1 HO2S 2 low circuit measures over 5.0 ohms, repair open or poor connection as necessary. Was a Bank 1 HO2S 2 low circuit problem found and corrected?	—	Verify repair	Go to *Step 9*
9	1. Ignition "ON", engine"OFF". 2. Disconnect Bank 1 HO2S 2 and jumper the HO2S high and low circuits (PCM side) to ground. 3. Using a Tech 2, monitor Bank 1 HO2S 2 voltage. Is Bank 1 HO2S 2 voltage in the specified range?	0-10 mV	Go to *Step 10*	Go to *Step 11*
10	Replace Bank 1 HO2S 2. Is the action complete?	—	Verify repair	—
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

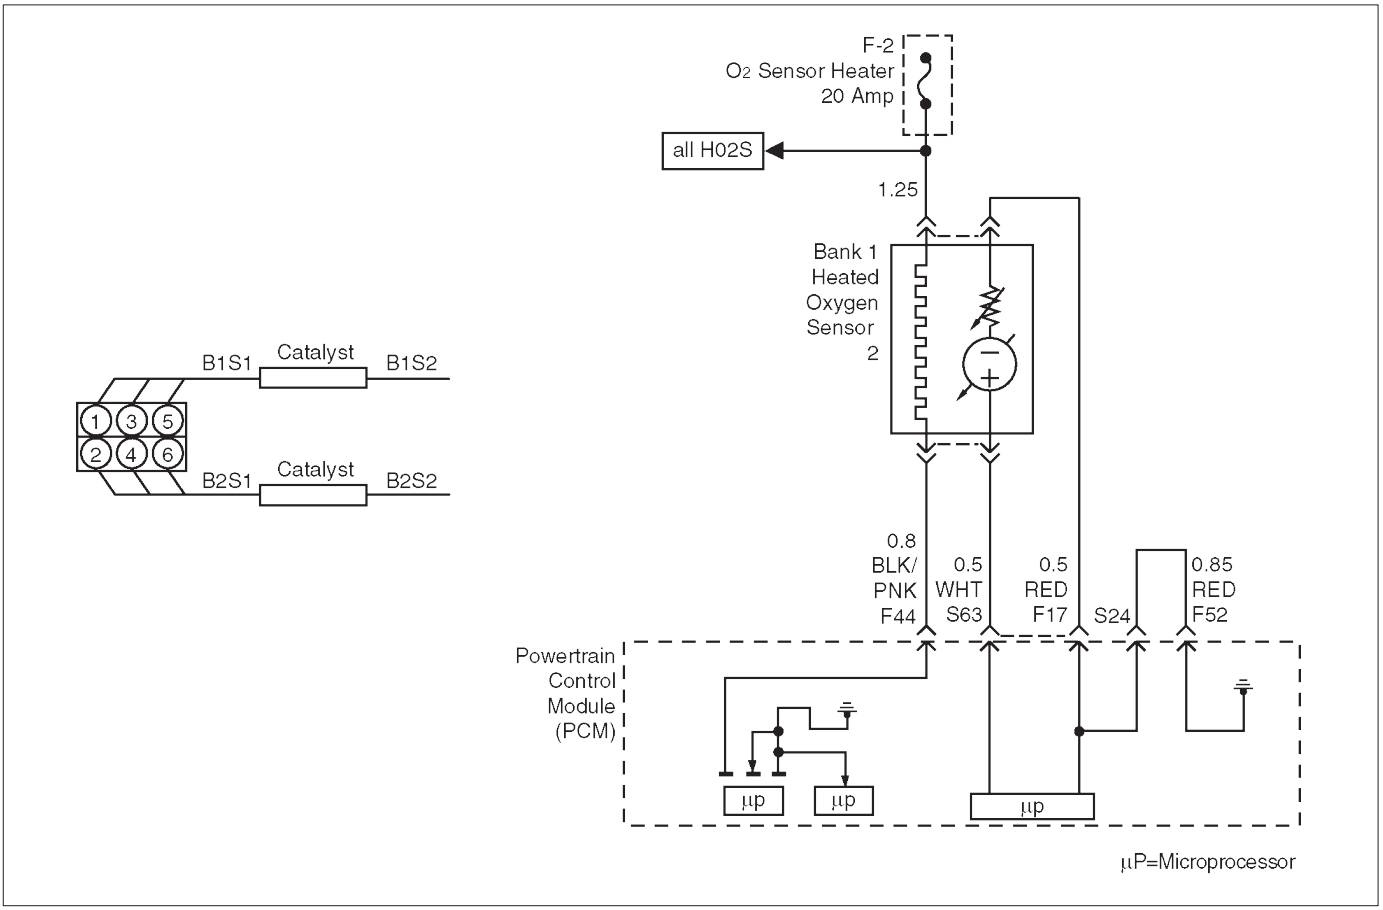Diagnostic Trouble Code (DTC)
P0141 HO2S Heater Circuit Bank 1 Sensor 2



D06RY00173

Circuit Description

Heated oxygen sensors are used to minimize the amount of time required for closed loop fuel control operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active. Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature which allows accurate exhaust oxygen content readings further from the engine.

The powertrain control module (PCM) will run the heater test only after a cold start (determined by engine coolant and intake air temperature at the time of start-up) and only once during an ignition cycle. When the engine is started the PCM will monitor the HO2S voltage. When the Bank HO2S voltage indicates a sufficiently active sensor, the PCM looks at how much time has elapsed since start-up. If the PCM determines that too much time was required for the Bank 1 HO2S 2 to become active, a DTC P0141 will set. The time it should take the HO2S to reach operating temperature is based on the total amount of air that has passed through the MAF sensor and into the engine (more total airflow = shorter time to HO2S activity).

Conditions for Setting the DTC

- No related DTCs.
- The engine has been running for over 120 seconds.
- Ignition voltage is between 11 volts and 18 volts.
- Bank 1 HO2S 2 voltage does not change more than 150 mV from the bias voltage (between 400 mV–500 mV) for a longer amount of time than it should. The maximum amount of time to come up to operating range is 120 seconds. This warm-up time depends on the engine coolant temperature at start-up and accumulated air flow since start-up.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0141 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0141 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. The HO2S should be allowed to cool before performing this test. If the HO2S heater is functioning, the signal voltage will gradually increase or decrease as the sensor element warms. If the heater is not functioning, the HO2S signal will remain near the 450 mV bias voltage.
4. This ensures that the ignition feed circuit to the HO2S is not open or shorted. The test light should be connected to a good chassis ground, in case the HO2S low or HO2S heater ground circuit is faulty.
5. This checks the HO2S heater ground circuit.
6. This checks for an open or shorted HO2S heater element.
11. An open HO2S signal or low circuit can cause the HO2S heater to appear faulty. Check these circuits before replacing the sensor.


DTC P0141 – HO2S Heater Circuit Bank 1 Sensor 2

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	NOTE: If the engine has just been operating, allow the engine to cool for at least 15 minutes before proceeding. 1. Remove the fuel pump relay. 2. Connect a fused jumper at the fuel pump relay socket, between the battery positive at the relay and the relay wire that leads to the fuel pump and HO2S fuses. 3. Ignition “OFF”. 4. Install a Tech 2. 5. Ignition “ON”, engine “OFF”. 6. Monitor the Bank 1 HO2S 2 voltage for several minutes. Did the HO2S voltage go from bias voltage to above or below the specified values?	Above 650 mV or below 250 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 3*
3	Inspect the fuse for Bank 1 HO2S 2 ignition feed. Is the fuse open?	—	Go to *Step 15*	Go to *Step 4*
4	1. Ignition “OFF”. 2. Raise the vehicle. 3. Disconnect the Bank 1 HO2S 2 electrical connector. 4. Using a test light connected to a good ground (do not use Bank 1 HO2S 2 heater ground or Bank 1 HO2S 2 low), probe the ignition feed circuit at the Bank 1 HO2S 2 electrical connector (PCM harness side). Does the test light illuminate?	—	Go to *Step 5*	Go to *Step 7*
5	Connect the test light between the Bank 1 HO2S 2 ignition feed and the Bank 1 HO2S 2 heater ground. Does the test light illuminate?	—	Go to *Step 6*	Go to *Step 8*

DTC P0141 – HO2S Heater Circuit Bank 1 Sensor 2 (Cont'd)

Step	Action	Value(s)	Yes	No
6	1. Allow the HO2S to cool for at least 15 minutes. 2. Using a DVM, measure the resistance between the Bank 1 HO2S 2 ignition feed and the Bank 1 HO2S 2 heater ground at the Bank 1 HO2S 2 pigtail. Is the HO2S resistance within the specified values?	3-6 ohms	Go to *Step 9*	Go to *Step 10*
7	Repair the open Bank 1 HO2S 2 ignition feed circuit to Bank 1 HO2S 2. Is the action complete?	—	Verify repair	—
8	Repair the open Bank 1 HO2S 2 heater ground circuit. Is the action complete?	—	Verify repair	—
9	1. Check for a poor connection at the Bank 1 HO2S 2 harness terminals. 2. If a poor connection is found, replace the terminals. Was a poor connection found?	—	Verify repair	Go to *Step 10*
10	1. Ignition "OFF". 2. Disconnect the PCM and check the continuity of the Bank 1 HO2S 2 signal circuit and the Bank 1 HO2S 2 low circuit. 3. If the Bank 1 HO2S 2 signal circuit or the HO2S low circuit measures over 5 ohms, repair the open or poor connection as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
11	1. Ignition "OFF". 2. Disconnect the PCM and check the continuity of the Bank 1 HO2S 1 signal circuit and the Bank 1 HO2S 1 low circuit. 3. If the Bank 1 HO2S 1 high circuit or the HO2S low circuit measures over 5 ohms, repair the open or poor connection as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	Check for a poor Bank 1 HO2S 2 low circuit terminal connection at the PCM and replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 13*
13	Check for a poor Bank 1 HO2S 2 high circuit terminal connection at the PCM and replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 14*
14	Replace Bank 1 HO2S 2. Is the action complete?	—	Verify repair	—
15	Locate and repair the short to ground in Bank 1 HO2S 2 ignition feed circuit and replace the faulty fuse. Is the action complete?	—	Verify repair	—

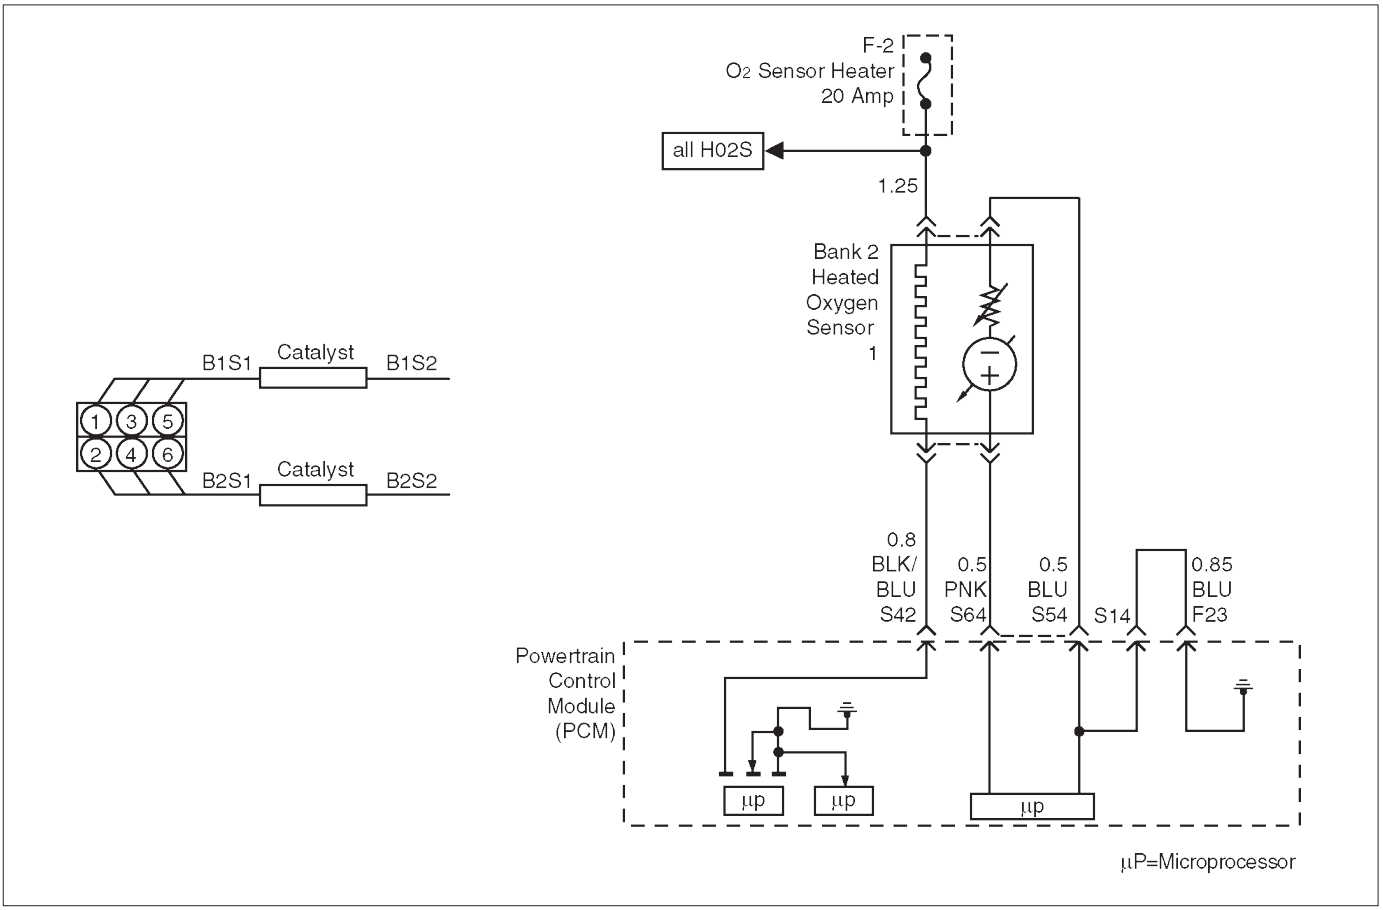Diagnostic Trouble Code (DTC)
P0151 HO2S Circuit Low Voltage Bank 2 Sensor 1



D06RY00175

Circuit Description

The powertrain control module (PCM) supplies a bias voltage of about 450 mV between the heated oxygen sensor (HO2S) signal high and signal low circuits. When measured with a 10 megaohm digital voltmeter, this may display as low as 320 mV. The oxygen sensor varies the voltage within a range of about 1000 mV when the exhaust is rich, down through about 10 mV when exhaust is lean. The PCM constantly monitors the HO2S signal during "closed loop" operation and compensates for a rich or lean condition by decreasing or increasing injector pulse width as necessary. If the Bank 2 HO2S 1 voltage remains excessively low for an extended period of time, DTC P0151 will be set.

Conditions for Setting the DTC

- No related DTCs.
- The engine is operating in "closed loop".
- Engine coolant temperature is above 60°C (140°F).
- "Closed loop" commanded air/fuel ratio is between 14.5 and 14.8.
- Bank 2 HO2S 1 signal voltage remains below 22 mV during normal "closed loop" operation for a total of 77 seconds over a 90-second period of time.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.
- "Open loop" fuel control will be in effect.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0151 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0151 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Heated oxygen sensor wiring – The sensor pigtail may be mispositioned and contacting the exhaust system.
- Poor PCM to engine block grounds.
- Fuel pressure – The system will go lean if pressure is too low. The PCM can compensate for some decrease. However, if fuel pressure is too low, a DTC P0151 may be set. Refer to *Fuel System Diagnosis*.
- Lean injector(s) – Perform "Injector Balance Test".
- Vacuum leaks – Check for disconnected or damaged vacuum hoses and for vacuum leaks at the intake manifold, throttle body, EGR system, and PCV system.

- Exhaust leaks – An exhaust leak may cause outside air to be pulled into the exhaust gas stream past the HO2S, causing the system to appear lean. Check for exhaust leaks that may cause a false lean condition to be indicated.
- MAF sensor –The system can go lean if the MAF sensor signal indicates an engine airflow measurement that is not correct. Disconnect the MAF sensor to see if the lean condition is corrected. If so, replace the MAF sensor.
- Fuel contamination – Water, even in small amounts, can be delivered to the fuel injectors. The water can cause a lean exhaust to be indicated. Excessive alcohol in the fuel can also cause this condition. Refer to *Fuel System Diagnosis* for the procedure to check for fuel contamination.
- If none of the above conditions are present, replace the affected HO2S.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. DTC P0151 failing during operation may indicate a condition described in the “Diagnostic Aids” above. If the DTC P0151 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicate.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0151 – HO2S Circuit Low Voltage Bank 2 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the vehicle within the parameters specified under “Conditions for Setting the DTC” criteria included in Diagnostic Support. 4. Using a Tech 2, monitor Bank 2 HO2S 1 voltage. Does the Bank 2 HO2S 1 voltage remain below the specified value?	22 mV	Go to *Step 4*	Go to *Step 3*
3	1. Ignition “ON”, engine “OFF”, review and record Tech 2 Failure Records data and note parameters. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor “DTC” info for DTC P0151 until the DTC P0151 test runs. 4. Note test result. Does the Tech 2 indicate DTC P0151 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Turn ignition “OFF”. 2. Disconnect the PCM. 3. Check the Bank 2 HO2S 1 high and low signal circuits for a short to ground or a short to the heater ground circuit. Were Bank 2 HO2S 1 signal circuits shorted?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the Bank 2 HO2S 1 signal circuit. Is the action complete?	—	Verify repair	—
6	1. Ignition “OFF”. 2. Leave the PCM and HO2S 1 disconnected. 3. Check for continuity between the high and low signal circuits. Was there continuity between the high and low circuits?	—	Go to *Step 7*	Go to *Step 8*
7	Repair the short between the high and low circuits. Is the action complete?	—	Verify repair	—

DTC P0151 – HO2S Circuit Low Voltage Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
8	1. Ignition "OFF". 2. Reconnect the PCM, leave HO2S disconnected. 3. Ignition "ON". Does the Tech 2 indicate Bank 2 HO2S 1 voltage near the specified value?	425-475 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

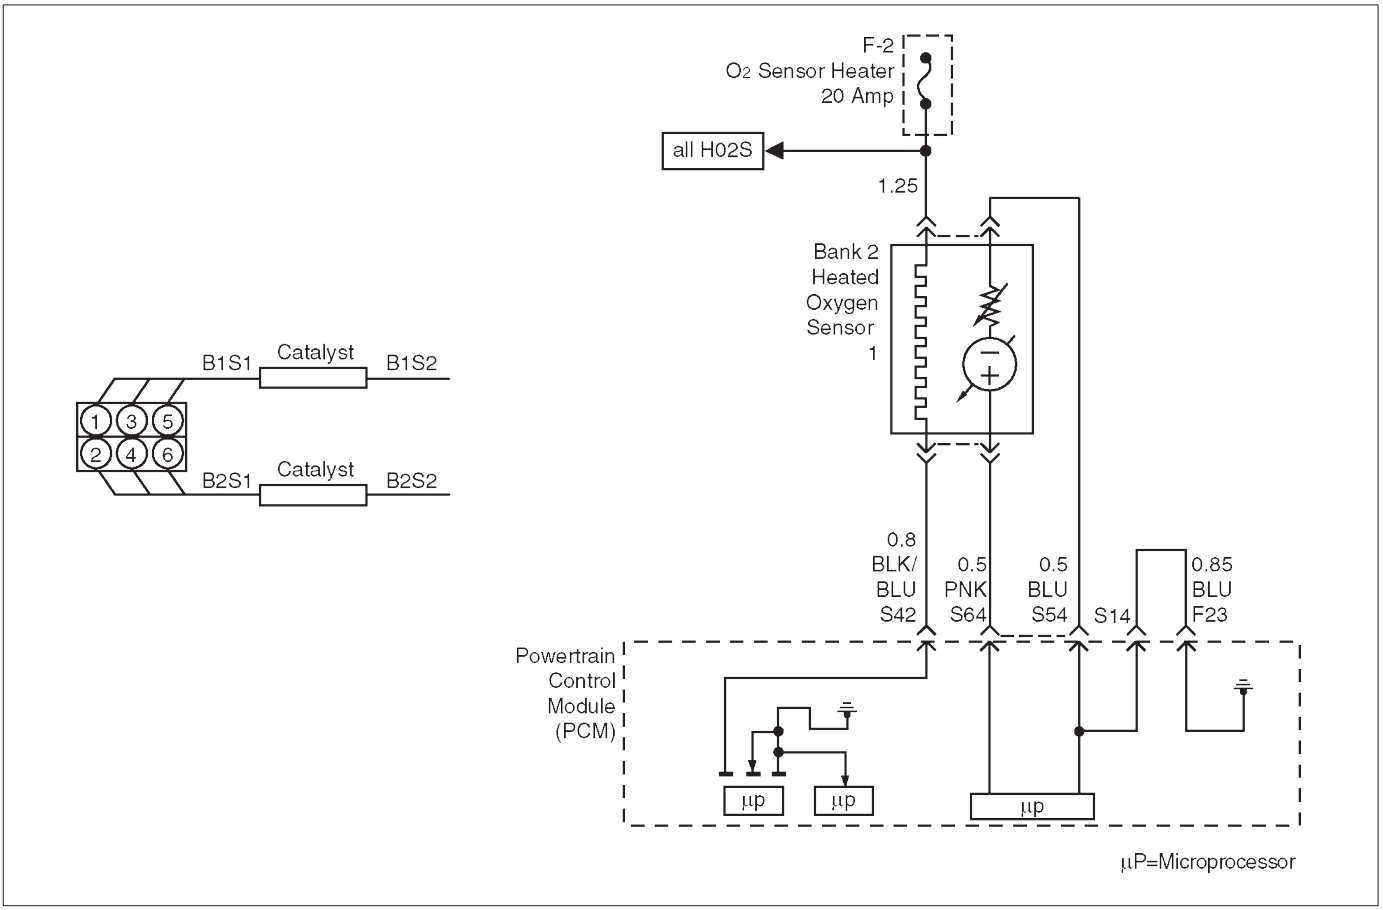Diagnostic Trouble Code (DTC)
P0152 HO2S Circuit High Voltage Bank 2 Sensor 1



D06RY00175

Circuit Description

The powertrain control module (PCM) supplies a bias voltage of about 450 mV between the heated oxygen sensor (HO2S) signal high and signal low circuits. When measured with a 10 megaohm digital voltmeter, this may display as low as 320 mV. The oxygen sensor varies the voltage within a range of about 1000 mV when the exhaust is rich, down through about 10 mV when exhaust is lean. The PCM constantly monitors the HO2S signal during "closed loop" operation and compensates for a rich or lean condition by decreasing or increasing the injector pulse width as necessary. If the Bank 2 HO2S 1 voltage remains excessively high for an extended period of time, DTC P0152 will be set.

Conditions for Setting the DTC

- No related DTCs.
- The engine is operating in "closed loop".
- The engine coolant temperature is above 60°C (140°F).
- Bank 2 HO2S 1 signal voltage remains above 952 mV during normal "closed loop" operation for a total of 77 seconds over a 90-second period.

OR

- Bank 2 HO2S 1 signal voltage remains above 500 mV during deceleration fuel cutoff mode operation for up to 3 seconds.

Action Taken When the DTC Sets

- The PCM will "ON" the MIL after second trip with detected fault
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.
- "Open loop" fuel control will be in effect.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0152 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0152 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Fuel pressure – The system will go rich if pressure is too high. The PCM can compensate for some increase. However, if fuel pressure is too high, a DTC P0152 may be set. Refer to *Fuel System Diagnosis*.
- Rich injector(s) – Perform "Injector Balance Test".
- Leaking injector – Refer to *Fuel System Diagnosis*.
- Evaporative emissions (EVAP) system – Check the canister for fuel saturation. If the canister is full of fuel,

check EVAP control system components and hoses. Refer to *Evaporative Emission (EVAP) Control System*.

- MAF sensor – The system can go rich if the MAF sensor signal indicates an engine airflow measurement that is not correct. Disconnect the MAF sensor to see if rich condition is corrected. If so, replace MAF sensor.
- Check for leaking fuel pressure regulator diaphragm by checking vacuum line to regulator for the presence of fuel. There should be no fuel in the vacuum line.
- TP sensor – An intermittent TP sensor output will cause the system to go rich, due to a false indication of the engine accelerating.
- Shorted Heated Oxygen Sensor (HO2S)– If the HO2S is internally shorted, the HO2S voltage displayed on the Tech 2 will be over 1 volt. Try disconnecting the affected HO2S with the key "ON", engine "OFF". If the displayed HO2S voltage changes from over 1000 mV to around 450 mV, replace the HO2S. Silicon contamination of the HO2S can cause a high HO2S voltage to be indicated. This condition is indicated by powdery deposit on the portion of the HO2S exposed to the exhaust stream. If contamination is noticed, replace the affected HO2S.
- Open HO2S Signal Circuit of Faulty HO2S– A poor connection or open in the HO2S signal circuit can cause the DTC to set during deceleration fuel mode. An HO2S which is faulty and not allowing a full voltage switch between the rich and lean thresholds can also cause the condition. Operate the vehicle while monitoring the HO2S voltage with a Tech 2. If the HO2S is limited within a range between 300 mV to 600 mV, check the HO2S signal circuit wiring and associated terminal connections.
- If none of the above conditions are present, replace the affected HO2S.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. DTC P0152 failing during deceleration fuel cutoff mode operation may indicate a condition described in the "Diagnostic Aids" above. If the DTC P0152 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0152 – HO2S Circuit High Voltage Bank 2 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Engine is at operating temperature. 3. Operate the vehicle within the parameters specified under "Conditions for Setting the DTC" criteria included in Diagnostic Support. 4. Using a Tech 2, monitor Bank 2 HO2S 1 voltage. Does the Bank 2 HO2S 1 voltage remain above the specified value?	952 mV (500 mV in deceleration fuel cut-off mode)	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P0152 until the DTC P0152 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0152 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Ignition "OFF". 2. Disconnect Bank 2 HO2S 1. 3. Ignition "ON". 4. At HO2S Bank 2 Sensor 1 connector (PCM side) use a DVM to measure voltages at the high and low signal terminals. Are the voltages in the specified range?	3-4 V	Go to *Step 5*	Go to *Step 6*

DTC P0152 – HO2S Circuit High Voltage Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
5	Repair short to voltage in signal circuit. Is the action complete?	—	Verify repair	—
6	1. Ignition "ON", engine"OFF". 2. At Bank 2 HO2S 1 connector (PCM side) jumper both the HO2S high and low signal circuits (PCM side) to ground. 3. Using a Tech 2, monitor Bank 2 HO2S 1 voltage. Is Bank 2 HO2S 1 voltage below the specified value?	10 mV	Go to *Step 7*	Go to *Step 8*
7	1. Disconnect the jumpers to ground from Bank 2 HO2S 1 PCM-side connector. 2. With the HO2S 1 connector disconnected, monitor Bank 2 HO2S 1 voltage. Is the Bank 2 HO2S 1 voltage between the specified values?	425-475 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 8*
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

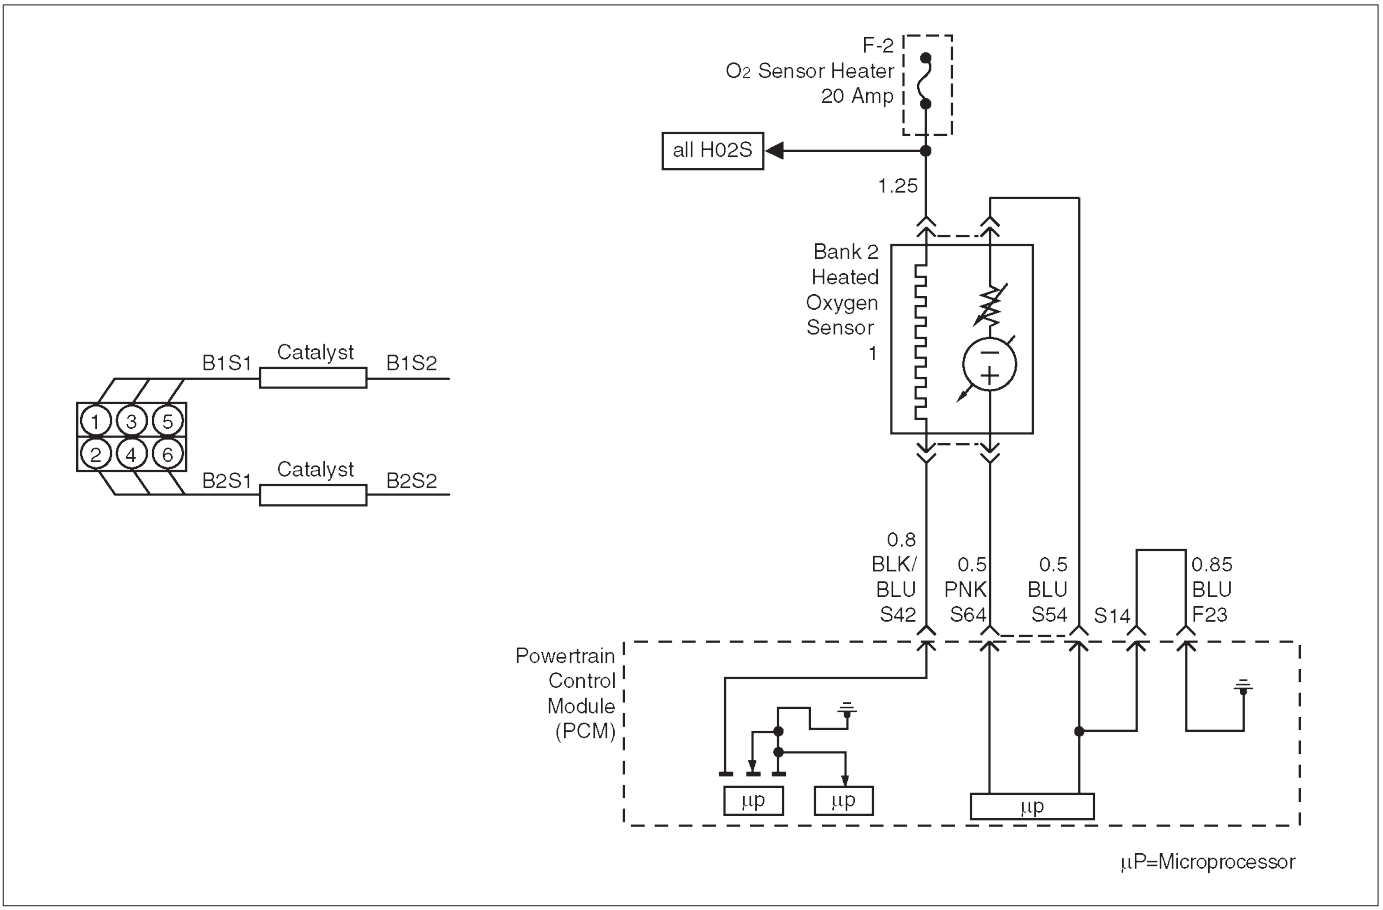Diagnostic Trouble Code (DTC)
P0153 HO2S Slow Response Bank 2 Sensor 1



D06RY00175

Circuit Description

The powertrain control module (PCM) continuously monitors the heated oxygen sensor (HO2S) activity for 90 seconds after "closed loop" has been enabled. During the monitoring period the PCM counts the number of times that a rich-to-lean and lean-to-rich response is indicated and adds the amount of time it took to complete all rich-to-lean transitions and lean-to-rich transitions. With this information, an average time for rich-to-lean and lean-to-rich transitions can be determined. If the average response time of either transition is too slow, a DTC P0153 will be set.

A lean-to-rich transition is indicated when the HO2S voltage changes from less than 300 mV to greater than 600 mV. A rich-to-lean transition is indicated when the HO2S voltage changes from more than 600 mV to less than 300 mV. An HO2S that responds too slowly is likely to be faulty and should be replaced.

Conditions for Setting the DTC

- No related DTCs.
- Engine coolant temperature (ECT) is above 60°C (140°F).
- The engine is operating in "closed loop".
- Engine has been running for over 60 seconds.
- Canister purge duty cycle is above 2%.
- Engine speed is between 1500 RPM and 3000 RPM.
- Mass air flow is between 18 g/second and 42 g/second.
- All above conditions are met for 3 seconds.
- 90 seconds after "closed loop" has been enabled, Bank 2 HO2S 1 average transition time between 300 mV and 600 mV is too slow. The lean-to-rich average transition response time was longer than 94 milliseconds or the rich-to-lean average transition response time was longer than 105 milliseconds.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC set as Freeze Frame and in the Failure Records data.
- "Open loop" fuel control will be in effect.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0153 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0153 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Bank 2 HO2S 1 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. Verifies that the fault is currently present.
3. HO2S transition time, ratio mean volts and switching DTCs set for multiple sensors indicate probable contamination. Before replacing the sensors, isolate and correct the source of the contamination to avoid damaging the replacement sensors.

DTC P0153 – HO2S Slow Response Bank 2 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	NOTE: If any DTCs are set, (except P0133, P1133, P1134, P1153, and/or P1154), refer to those DTCs before proceeding with this diagnostic chart. 1. Install the Tech 2. 2. Idle the engine at operating temperature. 3. Operate the vehicle within parameters specified under “Conditions for Setting the DTC” criteria included in Diagnostic Support. 4. Using a Tech 2, monitor “DTC” info for DTC P0153 until the DTC P0153 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0153 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Did the Tech 2 also indicate DTC P0153, P1133, P1134, P1153, and/or P1154 test failed this ignition?	—	Go to *Step 17*	Go to *Step 4*
4	Check for leaks at the pipe joints. Are the joints leaking?	—	Go to *Step 5*	Go to *Step 6*
5	Tighten the U-bolt nuts at the leaking joint. Is your action complete?	—	Go to *Step 2*	—
6	Check for gaskets that are damage or improperly installed. Are there damaged or misaligned gaskets?	—	Go to *Step 7*	Go to *Step 8*
7	1. Replace the damaged gaskets. 2. Align the connections. 3. Tighten the connections. Is your action complete?	—	Go to *Step 2*	—
8	Check for loose exhaust flange connections. Are the flange connections loose?	—	Go to *Step 9*	Go to *Step 10*
9	Tighten the stud nuts or bolts to specifications. Is your action complete?	—	Go to *Step 2*	—
10	Check for burned or corroded exhaust pipes. Are the exhaust pipes burned or corroded?	—	Go to *Step 11*	Go to *Step 12*


DTC P0153 – HO2S Slow Response Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
11	Replace the exhaust pipes, as required. Is your action complete?	—	Go to *Step 2*	—
12	Check for leaks at the exhaust manifold. Are there leaks at the exhaust manifold?	—	Go to *Step 13*	Go to *Step 14*
13	Tighten the bolts to specifications or replace the manifold if necessary. Is your action complete?	—	Go to *Step 2*	—
14	1. Visually/physically inspect the following items: • Ensure that the Bank 2 HO2S 1 is securely installed. • Check for corrosion on terminals. • Check terminal tension (at Bank 2 HO2S 1 and at the PCM). • Check for damaged wiring. Was a problem found in any of the above areas?	—	Go to *Step 18*	Go to *Step 15*
15	1. Disconnect Bank 2 HO2S 1. 2. Ignition "ON". 3. Using a DVM at the PCM side of the HO2S 1 connector, measure the voltage between the high signal circuit and ground. Are both voltages in the specified range?	3-4 V	Go to *Step 16*	Go to *Step 19*
16	1. With Bank 2 HO2S 1 disconnected, jumper the high and low (PCM side) signal circuits to ground. 2. Ignition "ON". 3. Using a Tech 2, monitor the Bank 2 HO2S 1 voltage. Does the Tech 2 indicate less than 10 mV and immediately return to about 450 mV when the jumper is removed?	—	Go to *Step 21*	Go to *Step 22*
17	Replace the affected heated oxygen sensors. NOTE: Before replacing the sensors, the cause of the contamination must be determined and corrected. • Fuel contamination. • Use of improper RV sealant. • Engine oil/coolant consumption. Is the action complete?	—	Verify repair	—
18	Repair condition as necessary. Is the action complete?	—	Verify repair	—
19	Check for faulty PCM connections or terminal damage. Is the action complete?	—	Verify repair	Go to *Step 20*
20	Repair open, short or grounded signal circuit. Is the action complete?	—	Verify repair	—

DTC P0153 – HO2S Slow Response Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
21	Replace Bank 2 HO2S 1. Is the action complete?	—	Verify repair	—
22	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

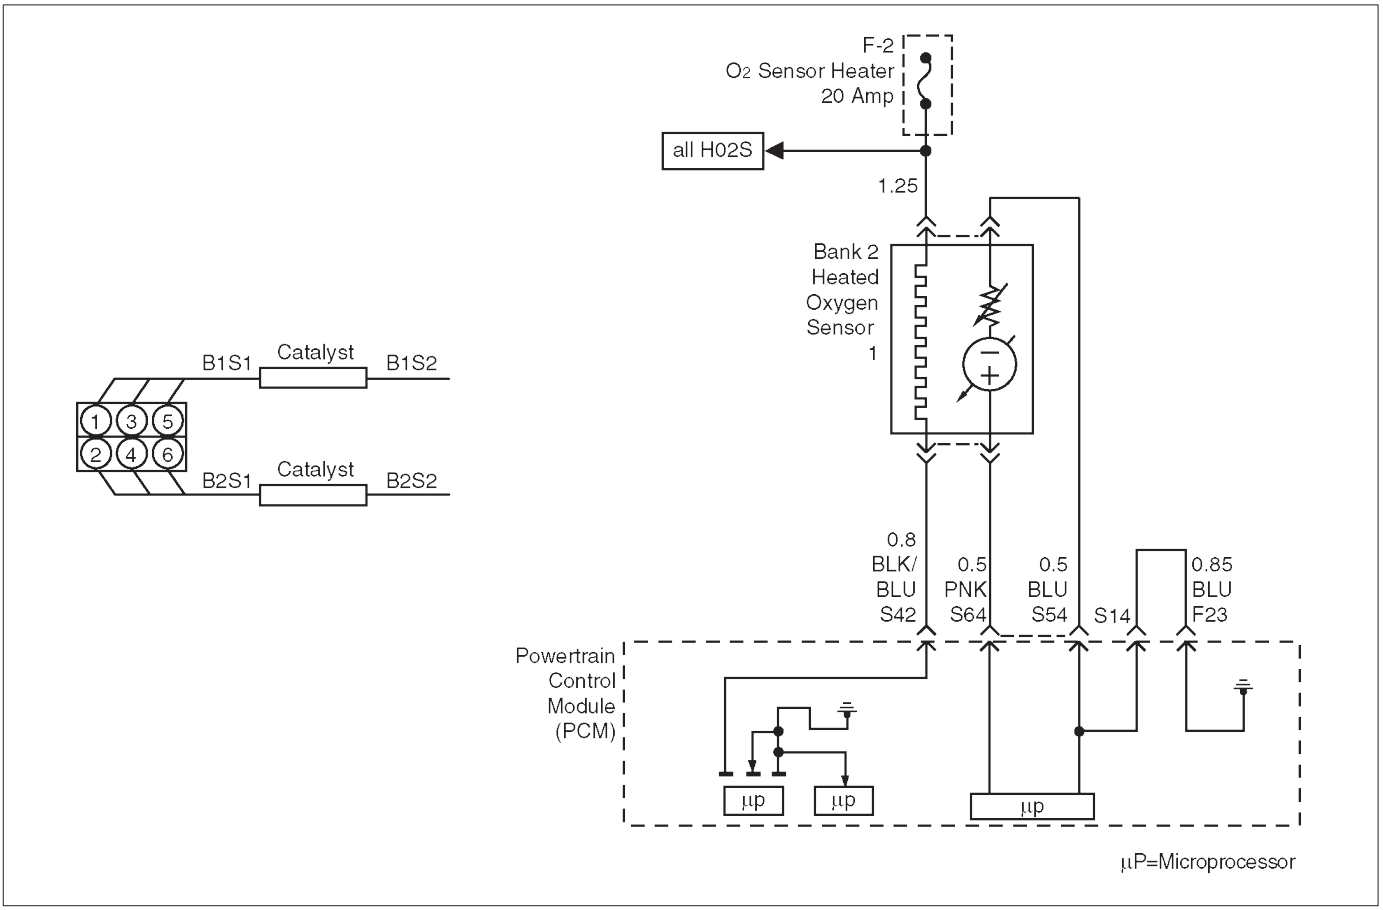Diagnostic Trouble Code (DTC)
P0154 HO2S Circuit Insufficient Activity Bank 2 Sensor 1



Circuit Description

The powertrain control module (PCM) supplies a bias voltage of about 450 mV between the heated oxygen sensor (HO2S) high and low circuits. When measured with a 10 megaohm digital voltmeter, this may display as low as 320 mV. The oxygen sensor varies the voltage within a range of about 1000 mV when the exhaust is rich, down through about 10 mV when exhaust is lean. The PCM constantly monitors the HO2S signal during "closed loop" operation and compensates for a rich or lean condition by decreasing or increasing injector pulse width as necessary. If the Bank 2 HO2S 1 voltage remains at or near the 450 mV bias for an extended period of time, DTC P0154 will be set, indicating an open sensor signal or sensor low circuit.

Heated oxygen sensors are used to minimize the amount of time required for "closed loop" fuel control operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active. Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature for accurate exhaust oxygen content readings further from the engine.

Conditions for Setting the DTC

- No related DTCs.
- Engine coolant temperature is above 60°C (140°F).
- The engine has been running for over 5 seconds.
- Oxygen sensor heater is functioning properly.
- Bank 2 HO2S 1 signal voltage remains between 400 mV and 500 mV for a total of 77 seconds over a 90-second period of time.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.
- "Open loop" fuel control will be in effect.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0154 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0154 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection or damaged harness – Inspect the harness connectors for backed-out terminals,

improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire-connection, and damaged harness.

- Faulty HO2S heater or heater circuit – With the ignition "ON", engine "OFF", the HO2S 1 voltage displayed on the Tech 2 is normally 455-460 mV. A reading over 1000 mV indicates a signal line shorted to voltage. A reading under 5 mV indicates a signal line shorted to ground or signal lines shorted together. If not, disconnect the HO2S and connect a test light between the HO2S ignition feed and heater ground circuits. If the test light does not light for 2 seconds when the ignition is turned on, repair the open ignition feed or sensor ground circuit as necessary. If the test light lights and the HO2S signal and low circuits are OK, replace the HO2S.
- Intermittent test – With the ignition "ON", monitor the HO2S signal voltage while moving the wiring harness and related connectors. If the fault is induced, the HO2S signal voltage will change. This may help isolate the location of the malfunction.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. If the DTC P0154 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0154 –HO2S Circuit Insufficient Activity Bank 2 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the engine above 1200 RPM for two minutes. Does the Tech 2 indicate Bank 2 HO2S 1 voltage varying outside the specified values?	400-500 mV	Go to *Step 3*	Go to *Step 4*
3	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data and note parameters. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P0154 until the DTC P0154 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0154 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	Check for a damaged harness. Was a problem found?	—	Verify repair	Go to *Step 5*
5	Check for a poor Bank 2 HO2S 1 high and low circuit terminal connections at the Bank 2 HO2S 1 harness connector and replace terminal(s) if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 6*
6	Check for a poor Bank 2 HO2S 1 high and low circuit terminal connections at the PCM and replace terminal(s) if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 7*

DTC P0154 –HO2S Circuit Insufficient Activity Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
7	1. Ignition "OFF". 2. With the PCM disconnected, check continuity of the Bank 2 HO2S 1 high circuit. 3. If the Bank 2 HO2S 1 high circuit measures over 5.0 ohms, repair open or poor connection as necessary. Was a Bank 2 HO2S 1 high circuit problem found and corrected?	—	Verify repair	Go to *Step 8*
8	1. Ignition "OFF". 2. With the PCM disconnected, check continuity of the Bank 2 HO2S 1 low circuit. 3. If the Bank 2 HO2S 1 low circuit measures over 5.0 ohms, repair open or poor connection as necessary. Was a Bank 2 HO2S 1 low circuit problem found and corrected?	—	Verify repair	Go to *Step 9*
9	1. Ignition "ON", engine "OFF". 2. Disconnect Bank 2 HO2S 1 and jumper the HO2S high and low circuits (PCM side) to ground. 3. Using a Tech 2, monitor Bank 2 HO2S 1 voltage. Is the Bank 2 HO2S 1 voltage in the specified range?	0-10 mV	Go to *Step 10*	Go to *Step 11*
10	Replace Bank 2 HO2S 1. Is the action complete?	—	Verify repair	—
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

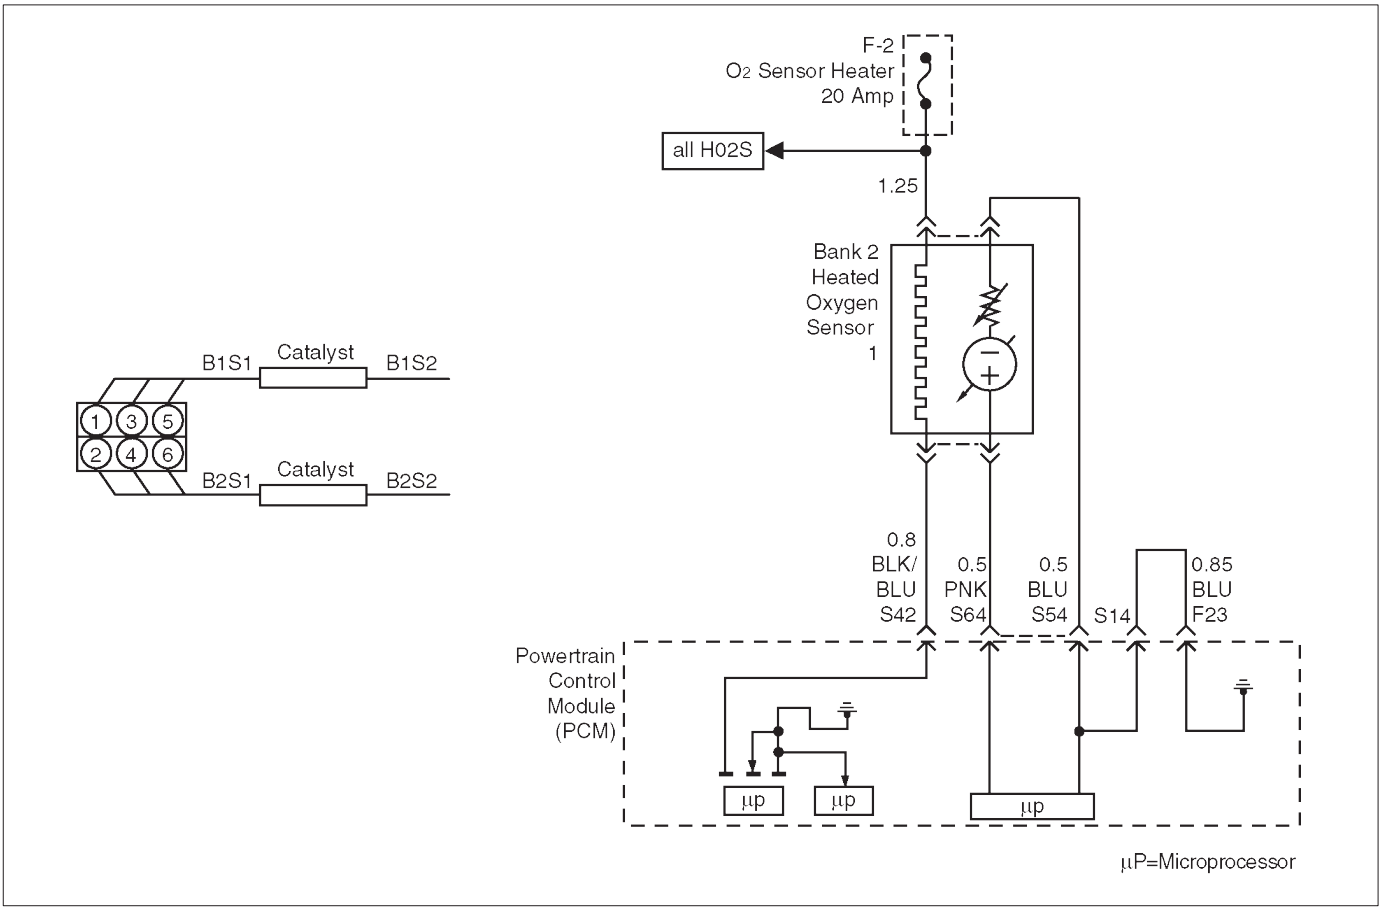Diagnostic Trouble Code (DTC)
P0155 HO2S Heater Circuit Open Bank 2 Sensor 1



D06RY00175

Circuit Description

Heated oxygen sensors are used to minimize the amount of time required for closed loop fuel control operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active. Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature which allows accurate exhaust oxygen content readings further from the engine.

The powertrain control module (PCM) will run the heater test only after a cold start (determined by engine coolant and intake air temperature at the time of start-up) and only once during an ignition cycle. When the engine is started the PCM will monitor the HO2S voltage. When the Bank HO2S voltage indicates a sufficiently active sensor, the PCM looks at how much time has elapsed since start-up. If the PCM determines that too much time was required for the Bank 2 HO2S 1 to become active, a DTC P0155 will set. The time it should take the HO2S to reach operating temperature is based on the total amount of air that has passed through the mass air flow (MAF) sensor and into the engine (more total air flow = shorter time to HO2S activity).

Conditions for Setting the DTC

- No related DTCs.
- The engine has been running for over 120 seconds.
- Ignition voltage is between 11 volts and 18 volts.
- Heater signal is below 0.1A.
- Bank 1 HO2S 2 voltage does not change more than 150 mV from the bias voltage (between 400 mV-500 mV) for a longer amount of time than it should. The maximum amount of time to come up to operating range is 120 seconds. This warm-up time depends on the engine coolant temperature at start-up and accumulated air flow since start-up.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0155 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0155 can be cleared by using the Tech 2 “Clear info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. The HO2S should be allowed to cool before performing this test. If the HO2S heater is functioning, the signal voltage will gradually increase or decrease as the sensor element warms. If the heater is not functioning, the HO2S signal will remain near the 450 mV bias voltage.
4. Ensures that the ignition feed circuit to the HO2S is not open or shorted. The test light should be connected to a good chassis ground, in case the HO2S low or HO2S heater ground circuit is faulty.
5. Checks the HO2S heater ground circuit.
6. Checks for an open or shorted HO2S heater element.
10. An open HO2S signal or low circuit can cause the HO2S heater to appear faulty. Check these circuits before replacing the sensor.


DTC P0155 – HO2S Heater Circuit Open Bank 2 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	NOTE: If the engine has just been operating, allow the engine to cool for at least 15 minutes before proceeding. 1. Remove the fuel pump relay. 2. Connect a fused jumper at the fuel pump relay socket, between the battery positive at the relay and the relay wire that leads to the fuel pump and HO2S fuses. 3. Ignition “OFF”. 4. Install a Tech 2. 5. Ignition “ON”, engine “OFF”. 6. Monitor the Bank 1 HO2S 1 voltage for several minutes. Did the HO2S voltage go from bias voltage to above or below the specified value?	Above 650 mV or below 250 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 3*
3	Inspect the fuse for the Bank 2 HO2S 1 ignition feed. Is the fuse open?	—	Go to *Step 15*	Go to *Step 4*
4	1. Ignition “OFF”. 2. Raise the vehicle. 3. Disconnect the Bank 2 HO2S 1 electrical connector. 4. Using a test light connected to a known good ground (do not use Bank 2 HO2S 1 heater ground or Bank 2 HO2S 1 low), probe the ignition feed circuit at the Bank 2 HO2S 1 electrical connector (PCM harness side). Does the test light illuminate?	—	Go to *Step 5*	Go to *Step 7*
5	Connect the test light between Bank 2 HO2S 1 ignition feed and Bank 2 HO2S 1 heater ground. Does the test light illuminate?	—	Go to *Step 6*	Go to *Step 8*

DTC P0155 – HO2S Heater Circuit Open Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
6	1. Allow the HO2S to cool for at least 15 minutes. 2. Using a DVM, measure resistance between the Bank 2 HO2S 1 ignition feed and the Bank 2 HO2S 1 heater ground at the Bank 2 HO2S 1 pigtail. Is the HO2S resistance within the specified values?	3-6 ohms	Go to *Step 9*	Go to *Step 10*
7	Repair the open Bank 2 HO2S 1 ignition feed circuit to Bank 2 HO2S 1. Is the action complete?	—	Verify repair	—
8	Repair the open Bank 2 HO2S 1 heater ground circuit. Is the action complete?	—	Verify repair	—
9	1. Check for a poor connection at the Bank 2 HO2S 1 harness terminals. 2. If a poor connection is found, replace terminals. Was a poor connection found?	—	Verify repair	Go to *Step 10*
10	Check for a poor Bank 2 HO2S 1 signal or low circuit terminal connection at the Bank 2 HO2S 1 harness connector and replace terminal(s) if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 11*
11	1. Ignition "OFF". 2. Disconnect the PCM and check the continuity of the Bank 2 HO2S 1 signal circuit and the Bank 2 HO2S 1 low circuit. 3. If the Bank 2 HO2S 1 signal circuit or HO2S low circuit measures over 5 ohms, repair open or poor connection as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	Check for a poor Bank 2 HO2S 1 low circuit terminal connection at the PCM and replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 13*
13	Check for a poor Bank 2 HO2S 1 signal circuit terminal connection at the PCM and replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 14*
14	Replace Bank 2 HO2S 1. Is the action complete?	—	Verify repair	—
15	Locate and repair short to ground in Bank 2 HO2S 1 ignition feed circuit and replace the faulty fuse. Is the action complete?	—	Verify repair	—

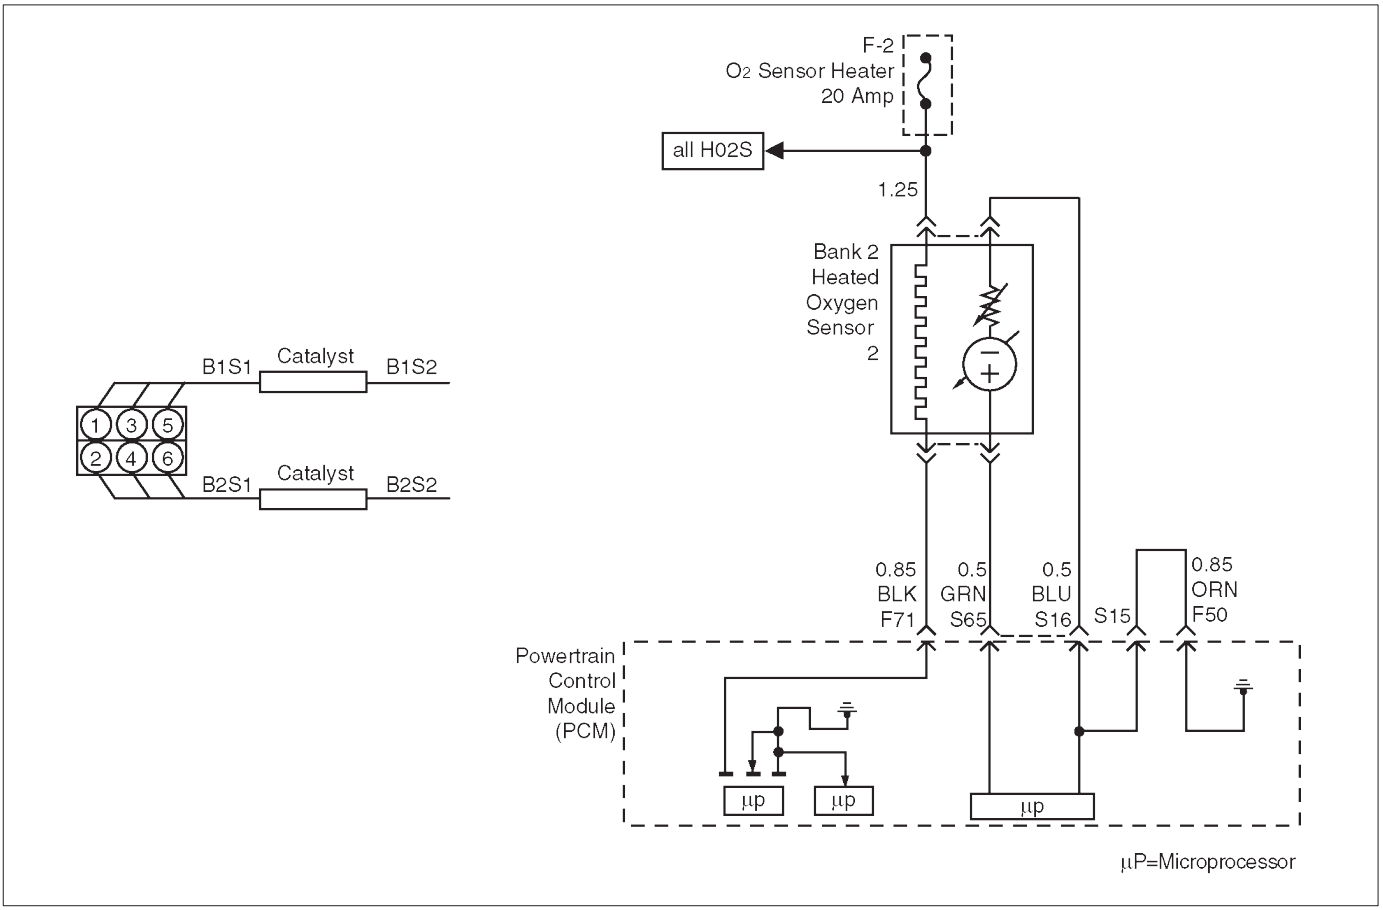Diagnostic Trouble Code (DTC)
P0157 HO2S Circuit Low Voltage Bank 2 Sensor 2



D06RY00177

Circuit Description

To control emissions of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx), a three-way catalytic converter is used. The catalyst within the converter promotes a chemical reaction which oxidizes the HC and CO present in the exhaust gas, converting them into harmless water vapor and carbon dioxide. The catalyst also reduces NOx, converting it to nitrogen. The powertrain control module (PCM) has the ability to monitor this process using the Bank 2 HO2S 1 and the Bank 2 HO2S 2 heated oxygen sensors. The Bank 2 HO2S 1 sensor produces an output signal which indicates the amount of oxygen present in the exhaust gas entering the three-way catalytic converter. The Bank 2 HO2S 2 sensor produces an output signal which indicates the oxygen storage capacity of the catalyst; this in turn indicates the catalyst's ability to convert exhaust gases efficiently. If the catalyst is operating efficiently, the Bank 2 HO2S 1 signal will be far more active than that produced by the Bank 2 HO2S 2 sensor. If the Bank 2 HO2S 2 signal voltage remains excessively low for an extended period of time, DTC P0157 will be set.

Conditions for Setting the DTC

- No related DTCs.
- The engine is operating in "closed loop".
- Engine coolant temperature is above 60°C (140°F).
- "Closed loop" commanded air/fuel ratio is between 14.5 and 14.8
- Bank 2 HO2S 2 signal voltage remains below 22 mV during normal "closed loop" operation for a total of 106 seconds over a 125-second period of time.

OR

- Bank 2 HO2S 2 signal voltage remains below 400 mV during "power enrichment" mode fuel control operation for up to 5 seconds.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0157 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0157 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Heated oxygen sensor wiring – The sensor pigtail may be mispositioned and contacting the exhaust system.
- Poor PCM to engine grounds.
- Fuel pressure – A condition which causes a lean exhaust can cause DTC P0157 to set. The system will go lean if pressure is too low. The PCM can compensate for some decrease. However, if fuel pressure is too low, a DTC P0157 may be set. Refer to *Fuel System Diagnosis*.
- Lean injector(s) – Perform "Injector Balance Test".
- Vacuum leaks – Check for disconnected or damaged vacuum hoses and for vacuum leaks at the intake manifold, throttle body, EGR system, and PCV system.
- Exhaust leaks – An exhaust leak may cause outside air to be pulled into the exhaust gas stream past the HO2S, causing the DTC P0157 to set. Check for exhaust leaks near the Bank 1 HO2S 2 sensor.
- MAF sensor – The system can go lean if the MAF sensor signal indicates an engine airflow measurement that is not correct. Disconnect the MAF sensor to see if the condition is corrected. If so, replace the MAF sensor.
- Fuel contamination – Water, even in small amounts, can be delivered to the fuel injectors. The water can cause a lean exhaust to be indicated. Excessive alcohol in the fuel can also cause this condition. Refer to *Fuel System Diagnosis* for the procedure to check for fuel contamination.
- If none of above conditions are present, replace the affected HO2S 2.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. DTC P0157 failing during operation may indicate a condition described in the "Diagnostic Aids" above. If the DTC P0157 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.


DTC P0157 – HO2S Circuit Low Voltage Bank 2 Sensor 2

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the vehicle within the parameters specified under "Conditions for Setting the DTC" criteria included in Diagnostic Support. 4. Using a Tech 2, monitor Bank 2 HO2S 2 voltage. Does the Bank 2 HO2S 2 voltage remain below the specified value?	22 mV	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data and note parameters. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P0157 until the DTC P0157 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0157 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Turn the ignition "OFF". 2. Disconnect the PCM. 3. Check the Bank 2 HO2S 2 high and low signal circuits for a short to ground or a short to the heater ground circuit. Were Bank 2 HO2S 2 signal circuits shorted?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the Bank 1 HO2S 2 signal circuit. Is the action complete?	—	Verify repair	—

DTC P0157 – HO2S Circuit Low Voltage Bank 2 Sensor 2 (Cont'd)

Step	Action	Value(s)	Yes	No
6	1. Ignition "OFF". 2. Leave the PCM and HO2S 2 disconnected. 3. Check for continuity between the high and low signal circuits. Was there continuity between the high and low circuits?	—	Go to *Step 7*	Go to *Step 8*
7	Repair the short between the high and low circuits. Is the action complete?	—	Verify repair	—
8	1. Ignition "OFF". 2. Reconnect the PCM, leave HO2S 2 disconnected. 3. Ignition "ON". Does the Tech 2 indicate Bank 2 HO2S 2 voltage near the specified value?	425-475 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

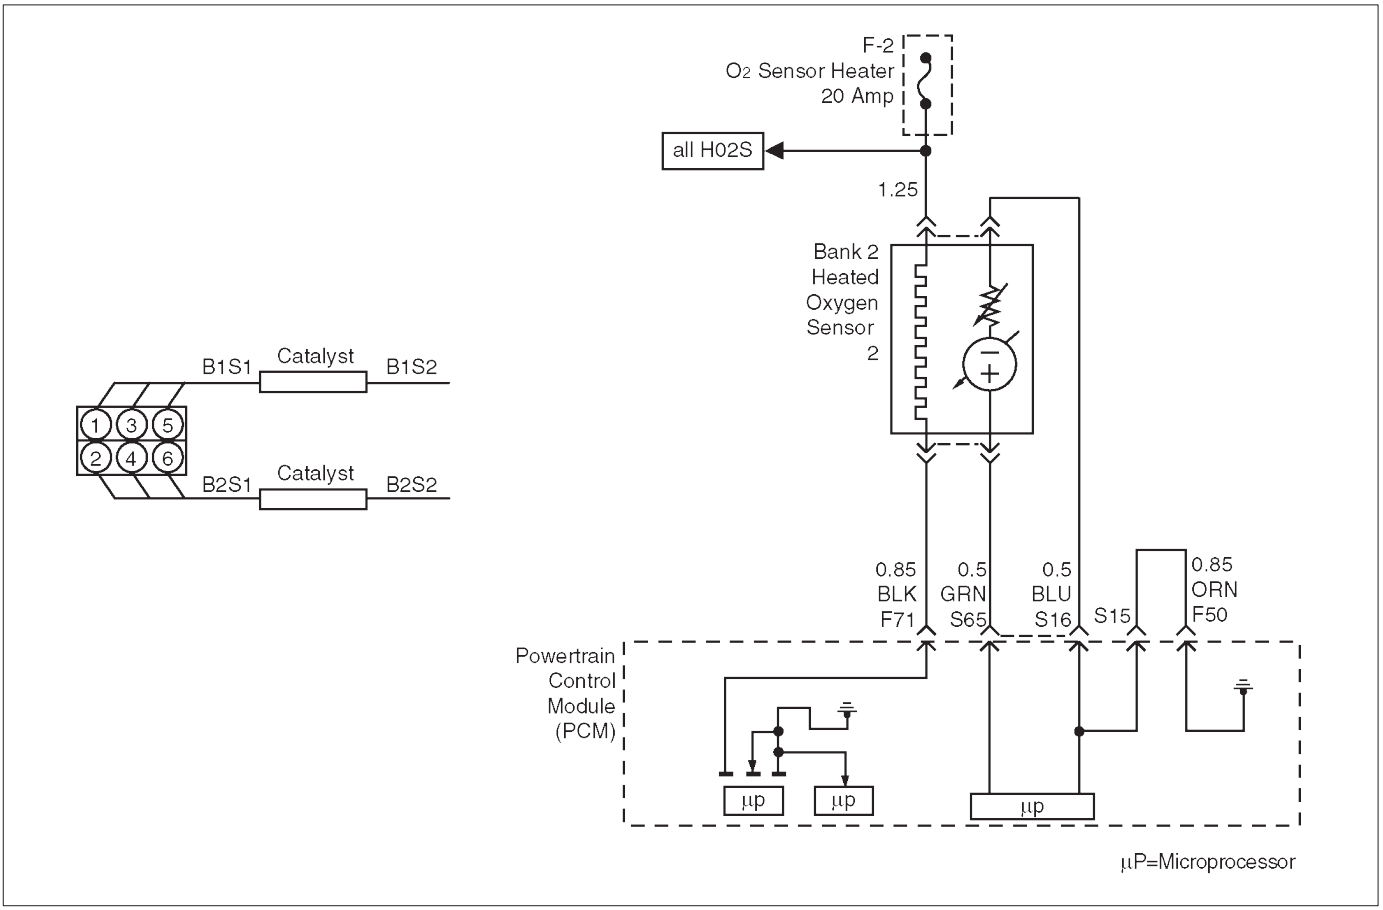Diagnostic Trouble Code (DTC)
P0158 HO2S Circuit High Voltage Bank 2 Sensor 2



Circuit Description

To control emissions of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx), a three-way catalytic converter is used. The catalyst within the converter promotes a chemical reaction which oxidizes the HC and CO present in the exhaust gas, converting them into harmless water vapor and carbon dioxide. The catalyst also reduces NOx, converting it to nitrogen. The powertrain control module (PCM) has the ability to monitor this process using the Bank 2 HO2S 1 and the Bank 2 HO2S 2 heated oxygen sensors. The Bank 2 HO2S 1 sensor produces an output signal which indicates the amount of oxygen present in the exhaust gas entering the three-way catalytic converter. The Bank 2 HO2S 2 sensor produces an output signal which indicates the oxygen storage capacity of the catalyst; this in turn indicates the catalyst's ability to convert exhaust gases efficiently. If the catalyst is operating efficiently, the Bank 2 HO2S 1 signal will be far more active than that produced by the Bank 2 HO2S 2 sensor. If the Bank 2 HO2S 2 signal voltage remains excessively high for an extended period of time, DTC P0158 will be set.

Conditions for Setting the DTC

- No related DTCs.
- Engine is operating in "closed loop".
- "Closed loop" commanded air/fuel ratio is between 14.5 and 14.8.
- Engine coolant temperature is above 60˚C (140˚F).
- Bank 2 HO2S 2 signal voltage remains above 952 mV during normal "closed loop" operation for a total of 106 seconds over a 125-second period.

OR

- Bank 2 HO2S 2 signal voltage remains above 500 mV during deceleration fuel cutoff mode operation for up to 3 seconds.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0158 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0158 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Fuel pressure – An excessively rich fuel mixture can cause a DTC P0158 to be set. Refer to *Fuel System Diagnosis*.
- Rich injector(s) – Perform "Injector Balance Test".
- Leaking injector – Refer to *Fuel System Diagnosis*.
- Evaporative emissions (EVAP) canister purge – Check for fuel saturation. If full of fuel, check canister control and hoses. Refer to *Evaporative Emission (EVAP) Control System*.
- MAF sensor –The system can go rich if the MAF sensor signal indicates an engine airflow measurement that is not correct. Disconnect the MAF sensor to see if a rich condition is corrected. If so, replace the MAF sensor.
- Check for a leaking fuel pressure regulator diaphragm by checking the vacuum line to the regulator for the presence of fuel. There should be no fuel in the vacuum line.
- TP sensor – An intermittent TP sensor output will cause the system to go rich, due to a false indication of the engine accelerating.
- Shorted Heated Oxygen Sensor (HO2S) – If the HO2S is internally shorted, the HO2S voltage displayed on the Tech 2 will be over 1 volt. Try disconnecting the affected HO2S with the key "ON", engine "OFF". If the displayed HO2S voltage changes from over 1000 mV to around 450 mV, replace the HO2S. Silicon contamination of the HO2S can also cause a high HO2S voltage to be indicated. This condition is indicated by a powdery deposit on the portion of the HO2S exposed to the exhaust stream. If contamination is noticed, replace the affected HO2S.
- Open HO2S signal or low circuit, or faulty HO2S – A poor connection or open in the HO2S signal or low circuit can cause the DTC to set during deceleration fuel cutoff mode operation. An HO2S which is faulty and does not allow full voltage swing between the rich and lean thresholds can also cause this condition. Operate the vehicle while monitoring the HO2S voltage with a Tech 2. If the HO2S voltage is limited within a range between 300 mV to 600 mV, check the HO2S signal and low circuit wiring and associated terminal connections. If the wiring and connections are OK, replace the HO2S.
- If none of above conditions are present, replace the affected HO2S.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. DTC P0158 being set during deceleration fuel cutoff mode operation may indicate a condition described in the "Diagnostic Aids" above. If the DTC P0158 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0158 – HO2S Circuit High Voltage Bank 2 Sensor 2

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the vehicle within parameters specified under "Conditions for Setting the DTC" criteria included in Diagnostic Support. 4. Using a Tech 2, monitor Bank 2 HO2S 2 voltage. Does the Bank 2 HO2S 2 voltage remain above the specified value?	952 mV (500 mV in deceleration fuel cut-out mode)	Go to *Step 4*	Go to *Step 3*
3	1. Ignition "ON". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P0158 until the DTC P0158 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0158 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*

DTC P0158 – HO2S Circuit High Voltage Bank 2 Sensor 2 (Cont'd)

Step	Action	Value(s)	Yes	No
4	1. Ignition "OFF". 2. Disconnect Bank 2 HO2S 2. 3. Ignition "ON". 4. At the HO2S Bank 2 Sensor 2 connector (PCM side), use a DVM to measure voltages at the high and low signal terminals. Are the voltages in the specified range?	3-4 V	Go to *Step 5*	Go to *Step 6*
5	Repair short to voltage in signal circuit. Is the action complete?	—	Verify repair	—
6	1. Ignition "ON", engine "OFF". 2. At Bank 2 HO2S 2 connector (PCM side) jumper both the HO2S high and low signal circuits (PCM side) to ground. 3. Using a Tech 2, monitor Bank 2 HO2S 2 voltage. Is Bank 2 HO2S 2 voltage below the specified value?	10 mV	Go to *Step 7*	Go to *Step 8*
7	1. Disconnect the jumpers to ground from Bank 2 HO2S 2 PCM-side connector. 2. With the HO2S 2 connector disconnected, monitor Bank 2 HO2S 2 voltage. Is Bank 2 HO2S 2 voltage between the specified values?	425-475 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 8*
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

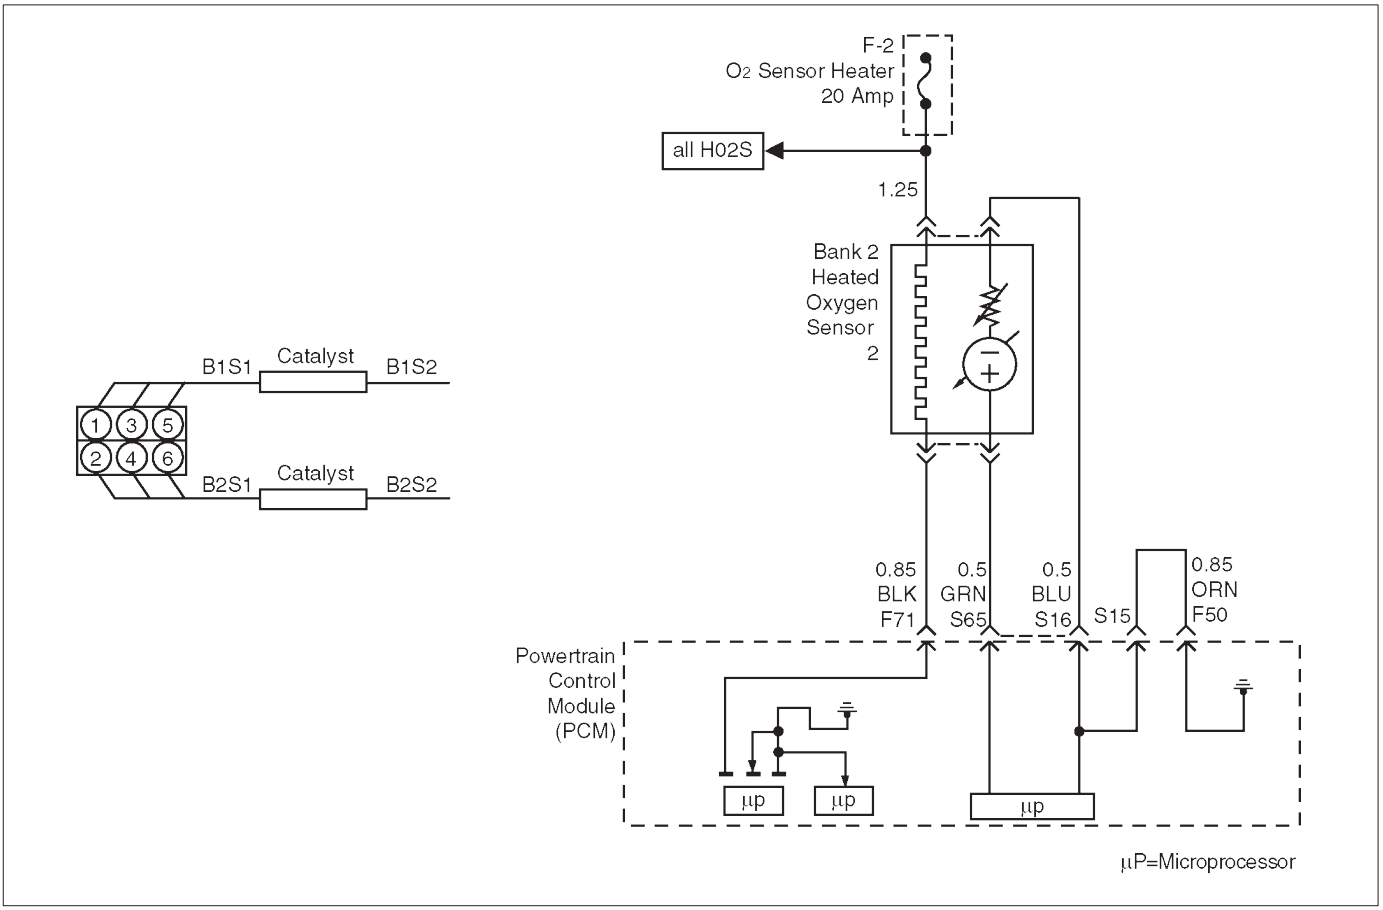Diagnostic Trouble Code (DTC)
P0160 HO2S Circuit Insufficient Activity Bank 2 Sensor 2



Circuit Description

To control emissions of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx), a three-way catalytic converter is used. The catalyst within the converter promotes a chemical reaction which oxidizes the HC and CO present in the exhaust gas, converting them into harmless water vapor and carbon dioxide. The catalyst also reduces NOx, converting it to nitrogen. The powertrain control module (PCM) has the ability to monitor this process using the Bank 2 HO2S 1 and the Bank 2 HO2S 2 heated oxygen sensors. The Bank 2 HO2S 1 sensor produces an output signal which indicates the amount of oxygen present in the exhaust gas entering the three-way catalytic converter. The Bank 2 HO2S 2 sensor produces an output signal which indicates the oxygen storage capacity of the catalyst; this in turn indicates the catalyst's ability to convert exhaust gases efficiently. If the catalyst is operating efficiently, the Bank 2 HO2S 1 signal will be far more active than that produced by the Bank 2 HO2S 2 sensor. If the Bank 2 HO2S 2 signal voltage remains between 400 mV and 500 mV for an extended period of time, DTC P0160 will be set.

Heated Oxygen sensors are used to minimize the amount of time required for "closed loop" fuel control operation and allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active. Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature for accurate exhaust oxygen content readings further from the engine.

Conditions for Setting the DTC

- No related DTCs.
- Battery voltage is above 10 volts.
- The engine has been running for over 5 seconds.
- Oxygen sensor heater is functioning properly.
- Engine is in "closed loop" operation.
- Bank 2 HO2S 2 signal voltage remains between 426 mV and 474 mV for a total of 106 seconds over a 125-second period of time.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0160 will clear after 40 consecutive warm-up cycles have occurred without a fault.

- DTC P0160 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection or damaged harness – Inspect the harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.
- Faulty HO2S heater or heater circuit – With the ignition “ON”, engine “OFF”, the HO2S voltage displayed on a Tech 2 should gradually drop to below 250 mV. If not, disconnect the HO2S and connect a test light between the HO2S ignition feed and heater ground circuits. If the test light does not light, repair the open ignition feed or sensor ground circuit as necessary. If the test light lights and the HO2S signal and low circuits are OK, replace the HO2S.
- Intermittent test – With the ignition “ON”, monitor the HO2S signal voltage while moving the wiring harness and related connectors. If the fault is induced, the HO2S signal voltage will change. This may help isolate the location of the malfunction.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. If the DTC P0160 test passes while the Failure Records conditions are being duplicated, an intermittent condition is indicated.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0160 – HO2S Circuit Insufficient Activity Bank 2 Sensor 2

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Run the engine at operating temperature. 3. Operate the engine above 1200 RPM for two minutes. Does the Tech 2 indicate Bank 2 HO2S 2 voltage varying outside the specified values?	425-475 mV	Go to *Step 3*	Go to *Step 4*
3	1. Ignition “ON”, engine “OFF”, review and record Tech 2 Failure Records data and note parameters. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor “DTC” info for DTC P0160 until the DTC P0160 test runs. 4. Note the test result. Does the Tech 2 indicate DTC P0160 failed this ignition?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	Check for a damaged harness. Was problem found?	—	Verify repair	Go to *Step 5*
5	Check for poor Bank 2 HO2S 2 high and low circuit terminal connections at the Bank 2 HO2S 2 harness connector and replace terminal(s) if necessary. Did either terminal require replacement?	—	Verify repair	Go to *Step 6*
6	Check for poor Bank 2 HO2S 2 high and low circuit terminal connections at the PCM and replace terminals if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 7*

DTC P0160 – HO2S Circuit Insufficient Activity Bank 2 Sensor 2 (Cont'd)

Step	Action	Value(s)	Yes	No
7	1. Ignition "OFF". 2. With the PCM disconnected, check continuity of the Bank 2 HO2S 2 high circuit. 3. If the Bank 2 HO2S 2 high circuit measures over 5.0 ohms, repair open or poor connections as necessary. Was a Bank 2 HO2S 2 high circuit problem found and corrected?	—	Verify repair	Go to *Step 8*
8	1. Ignition "OFF". 2. With the PCM disconnected, check continuity of the Bank 2 HO2S 2 low circuit. 3. If the Bank 2 HO2S 2 low circuit measures over 5 ohms, repair open or poor connections as necessary. Was a Bank 2 HO2S 2 low circuit problem found and corrected?	—	Verify repair	Go to *Step 9*
9	1. Ignition "ON", engine "OFF". 2. Disconnect Bank 2 HO2S 2 and jumper the HO2S high and low circuits (PCM side) to ground. 3. Using a Tech 2, monitor Bank 2 HO2S 2 voltage. Is Bank 2 HO2S 2 voltage in the specified range?	0-10 mV	Go to *Step 10*	Go to *Step 11*
10	Replace Bank 2 HO2S 2. Is the action complete?	—	Verify repair	—
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

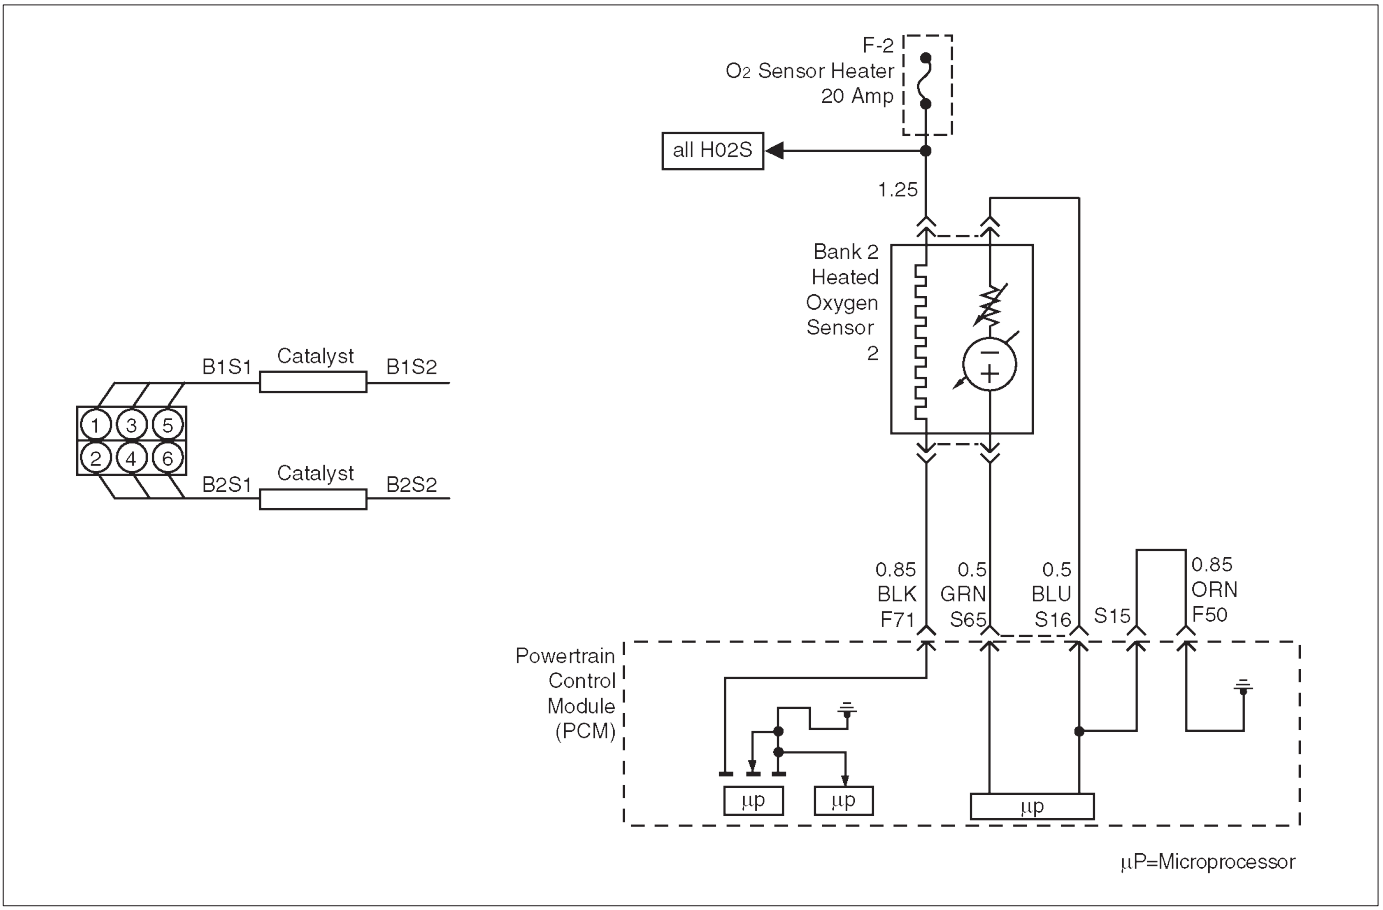Diagnostic Trouble Code (DTC)
P0161 HO2S Heater Circuit Bank 2 Sensor 2



Circuit Description

Heated oxygen sensors are used to minimize the amount of time required for “closed loop” fuel control operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active. Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature which allows accurate exhaust oxygen content readings further from the engine. The powertrain control module (PCM) will run the heater test only after a cold start (determined by engine coolant and intake air temperature at the time of start-up) and only once during an ignition cycle. When the engine is started, the PCM will monitor the HO2S voltage. When the Bank 2 HO2S 2 voltage indicates a sufficiently active sensor, the PCM looks at how much time has elapsed since start-up. If the PCM determines that too much time was required for the Bank 2 HO2S 2 to become active, a DTC P0161 will set. The time it should take the HO2S to reach operating temperature is based on the total amount of air that has passed through the MAF sensor and into the engine (more total air flow = shorter time to HO2S activity).

Conditions for Setting the DTC

- No related DTCs.
- The engine has been running for over 120 seconds.
- Ignition voltage is between 11 volts and 18 volts.
- Average mass air flow for the sample period is less than 23 g/second.
- Bank 2 HO2S 2 voltage does not change more than 150 mV from the bias voltage (between 400 mV-500 mV) for a longer amount of time than it should. The maximum amount of time to come up to operating range is 120 seconds. This warm-up time depends on the engine coolant temperature at start-up and accumulated air flow since start-up.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0161 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0161 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. The HO2S should be allowed to cool before performing this test. If the HO2S heater is functioning, the signal voltage will gradually increase or decrease as the sensor element warms. If the heater is not functioning, the HO2S signal will remain near the 450 mV bias voltage.
4. This ensures that the ignition feed circuit to the HO2S is not open or shorted. The test light should be connected to a good chassis ground, in case the HO2S low or HO2S heater ground circuit is faulty.
5. This checks the HO2S heater ground circuit.
6. This checks for an open or shorted HO2S heater element.
11. An open HO2S signal or low circuit can cause the HO2S heater to appear faulty. Check these circuits before replacing the sensor.


DTC P0161 – HO2S Heater Circuit Bank 2 Sensor 2

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	NOTE: If the engine has just been operating, allow the engine to cool for at least 15 minutes before proceeding. 1. Remove the fuel pump relay. 2. Connect a fused jumper at the fuel pump relay socket, between the battery positive at the relay and the relay wire that leads to the fuel pump and HO2S fuses. 3. Ignition “OFF”. 4. Install a Tech 2. 5. Ignition “ON”, engine “OFF”. 6. Monitor the Bank 2 HO2S 2 voltage for several minutes. Did the HO2S voltage go from bias voltage to above or below the specified values?	Above 650 mV or Below 250 mV	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 3*
3	Inspect the fuse for the Bank 2 HO2S 2 ignition feed. Is the fuse open?	—	Go to *Step 15*	Go to *Step 4*
4	1. Ignition “OFF”. 2. Raise the vehicle. 3. Disconnect the Bank 2 HO2S 2 electrical connector. 4. Using a test light connected to a known good ground (do not use Bank 2 HO2S 2 heater ground or Bank 2 HO2S 2 low), probe the ignition feed circuit at the Bank 2 HO2S 2 electrical connector (PCM harness side). Does the test light illuminate?	—	Go to *Step 5*	Go to *Step 7*
5	Connect the test light between the Bank 2 HO2S 2 ignition feed and the Bank 2 HO2S 2 heater ground. Does the test light illuminate?	—	Go to *Step 6*	Go to *Step 8*

DTC P0161 – HO2S Heater Circuit Bank 2 Sensor 2 (Cont'd)

Step	Action	Value(s)	Yes	No
6	1. Allow the HO2S to cool for at least 15 minutes. 2. Using a DVM, measure resistance between the Bank 2 HO2S 2 ignition feed and the Bank 2 HO2S 2 heater ground at the Bank 2 HO2S 2 pigtail. Is the HO2S resistance within the specified values?	3-6 ohms	Go to *Step 9*	Go to *Step 10*
7	Repair the open Bank 2 HO2S 2 ignition feed circuit to Bank 2 HO2S 2. Is the action complete?	—	Verify repair	—
8	Repair the open Bank 2 HO2S 2 heater ground circuit. Is the action complete?	—	Verify repair	—
9	1. Check for a poor connection at the Bank 2 HO2S 2 harness terminals. 2. If a poor connection is found, replace the terminals. Was a poor connection found?	—	Verify repair	Go to *Step 10*
10	1. Ignition "OFF". 2. Disconnect the PCM and check the continuity of the Bank 2 HO2S 2 signal circuit and the Bank 2 HO2S 2 low circuit. 3. If the Bank 2 HO2S 2 signal circuit or HO2S low circuit measures over 5 ohms, repair the open or poor connection as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
11	1. Ignition "OFF". 2. Disconnect the PCM and check the continuity of the Bank 2 HO2S 2 signal circuit and the Bank 2 HO2S 2 low circuit. 3. If the Bank 2 HO2S 2 signal circuit or HO2S low circuit measures over 5 ohms, repair the open or poor connection as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	Check for a poor Bank 2 HO2S 2 low circuit terminal connection at the PCM and replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 13*
13	Check for a poor Bank 2 HO2S 2 high circuit terminal connection at the PCM and replace the terminal if necessary. Did the terminal require replacement?	—	Verify repair	Go to *Step 14*
14	Replace Bank 2 HO2S 2. Is the action complete?	—	Verify repair	—
15	Locate and repair the short to ground in the Bank 2 HO2S 2 ignition feed circuit and replace the faulty fuse. Is the action complete?	—	Verify repair	—

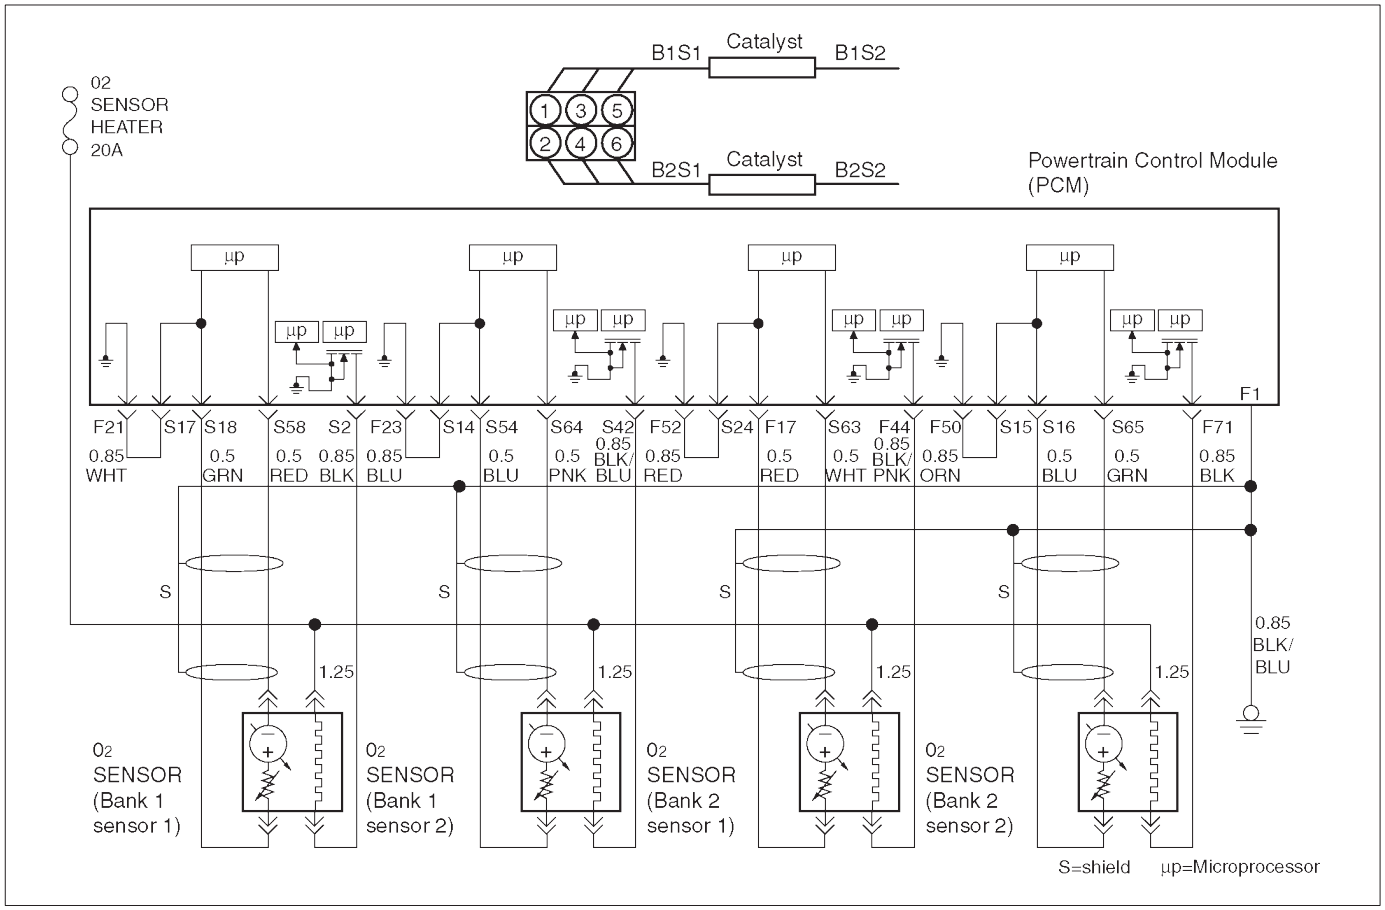Diagnostic Trouble Code (DTC) P0171 Fuel Trim System Lean Bank 1



D06R200010

Circuit Description

To provide the best possible combination of driveability, fuel economy, and emission control, a “closed loop” air/fuel metering system is used. While in “closed loop”, the powertrain control module (PCM) monitors the Bank 1 HO2S 1 and Bank 2 HO2S 1 signals and adjusts fuel delivery based upon the HO2S signal voltages. A change made to fuel delivery will be indicated by the long and short term fuel trim values which can be monitored with a Tech 2. Ideal fuel trim values are around 0%; if the HO2S signals are indicating a lean condition the PCM will add fuel, resulting in fuel trim values above 0%. If a rich condition is detected, the fuel trim values will be below 0%, indicating that the PCM is reducing the amount of fuel delivered. If an excessively lean condition is detected on Bank 1, the PCM will set DTC P0171.

The PCM’s maximum authority to control long term fuel trim allows a range between –15% (automatic transmission) or –12% (manual transmission) and +20%. The PCM monitors fuel trim under various engine speed/load fuel trim cells before determining the status of the fuel trim diagnostic.

Conditions for Setting the DTC

- None of the following: EGR DTCs, HO2S DTCs, (response, transition, open, low volts, no activity), MAF DTCs, TP sensor DTCs, MAP DTCs, IAT DTCs, canister purge DTCs, EVAP DTCs, injector circuit DTCs, or misfire DTCs.
- Engine coolant temperature is between 6˚C (42.8˚F) and 105˚C (221˚F).
- Intake air temperature is between –40˚C (–40˚F) and 120˚C (248˚F).
- Manifold absolute pressure is between 24 kPa and 99 kPa.
- Throttle angle is steady below 95%.
- Vehicle speed is below 136 km/h (85 mph).
- Engine speed is between 400 and 6,000 RPM.
- Barometric pressure is greater than 72.5 kPa.
- Mass air flow is between 2 g/second and 200 g/second.
- Ignition voltage is above 9.5 volts.
- Fuel system is in “closed loop”.
- Canister purge duty cycle is greater than 0% if on.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0171 will clear after 40 consecutive warm-up cycles have occurred without a fault.

- DTC P0171 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Bank 1 HO2S 1 display on the Tech 2 while moving connectors and wiring harnesses related to the engine harness. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. DTCs other than P0171 and P0174 may indicate a condition present which may cause a lean condition. If this is the case, repairing the condition which caused the other DTC will most likely correct the DTC P0171/P0174.

4. If the DTC P0171 test passes while the Failure Records conditions are being duplicated, the lean condition is intermittent. Refer to *Diagnostic Aids* or *Symptoms* for additional information on diagnosing intermittent problems.


DTC P0171 – Fuel Trim System Lean Bank 1

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any DTCs set other than P0171 and P0174?	—	Go to the applicable DTC charts and repair the other DTCs before proceeding with this chart	Go to *Step 3*
3	1. Start the engine and operate the vehicle in "closed loop". 2. Observe the "BANK 1 L.T. FUEL TRIM" display on the Tech 2. Is the displayed value greater than the specified value?	L.T. Fuel Trim: +20%	Go to *Step 5*	Go to *Step 4*
4	1. Review and record the Tech 2 Failure Records data. 2. Clear the DTC P0171/P0174 and operate the vehicle to duplicate the Failure Records conditions. 3. Monitor the Tech 2 "DTC" info for DTC P0171 while operating the vehicle to duplicate the Failure Records conditions. 4. Continue operating the vehicle until the DTC P0171 test runs and note the test result. Does the Tech 2 indicate DTC P0171 failed this ignition?	—	Go to *Step 5*	The lean condition is not present. If a driveability symptom still exists, refer to *Symptoms* section.
5	Was DTC P0174 also set?	—	Go to *Step 6*	Go to *Step 15*
6	Visually and physically inspect the vacuum hoses for disconnections, splits, kinks, improper routing and improper connections and repair any problem found. Did your inspection reveal a problem requiring repair?	—	Verify repair	Go to *Step 7*
7	Visually and physically inspect the crankcase ventilation valve for proper installation and repair any problem found (refer to *Crankcase Ventilation System*). Did your inspection reveal a problem requiring repair?	—	Verify repair	Go to *Step 8*
8	1. Inspect the MAF sensor inlet screen for damage or for the presence of foreign objects which may partially block the air flow sample through the MAF sensor. 2. Correct any problem that is found as necessary. Did your inspection of the MAF sensor reveal a condition requiring repair?	—	Verify repair	Go to *Step 9*
9	Start the engine and note the idle quality. Is a high or unsteady idle being experienced?	—	Go to *Step 10*	Go to *Step11*
10	1. Visually and physically inspect the throttle body, intake manifold, EGR valve and the EGR feed pipe for vacuum leaks. 2. Repair any vacuum leaks as necessary. Did your inspection reveal a vacuum leak?	—	Verify repair	Go to *Step 11*

DTC P0171 – Fuel Trim System Lean Bank 1 (Cont'd)

Step	Action	Value(s)	Yes	No
11	Check the fuel for excessive water, alcohol, or other contaminants (see *Diagnosis* in *Engine Fuel* for the procedure) and correct the contaminated fuel condition if present (see *Engine Fuel*). Was the fuel contaminated?	—	Verify repair	Go to *Step 12*
12	1. Visually and physically inspect the PCM injector grounds, power grounds and sensor grounds to ensure that they are clean, tight, and in their proper locations. 2. If a faulty ground condition is present, correct it as necessary. Did your inspection reveal a condition requiring repair?	—	Verify repair	Go to *Step 13*
13	1. Disconnect the MAF sensor electrical connector. 2. Operate the vehicle in "closed loop" while monitoring the "BANK 1 S.T. FUEL TRIM" displayed on the Tech 2. Does "BANK 1 S.T. FUEL TRIM" value decrease to near the specified value?	0%	Go to *Step 19*	Go to *Step 14*
14	Perform the procedure in the "Fuel System Pressure Test" and repair fuel system problem if necessary. Did Fuel System Pressure Test isolate a condition requiring repair?	—	Verify repair	Go to *Step 15*
15	1. Visually and physically inspect the intake manifold, injector O-rings, EGR adapter, EGR valve and the EGR feed pipes for vacuum leaks. 2. Repair any problem that is found. Did your inspection reveal a problem?	—	Verify repair	Go to *Step 16*
16	Visually and physically inspect the Bank 1 exhaust manifold for leaks and loose or missing hardware and correct any problem found. Did your inspection reveal a problem?	—	Verify repair	Go to *Step 17*
17	Perform the "Injector Balance Test", and correct any problem found (refer to *Fuel Metering System*). Did Injector Balance Test isolate a problem?	—	Verify repair	Go to *Step 18*
18	1. Visually and physically inspect the Bank 1 HO2S 1 to ensure that it is installed securely and that the Bank 1 HO2S 1 pigtail and wiring harness are not contacting the exhaust or otherwise damaged. 2. If a problem is found, correct it as necessary. Did your inspection reveal a problem?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*
19	Replace the MAF sensor. Is the action complete?	—	Verify repair	—

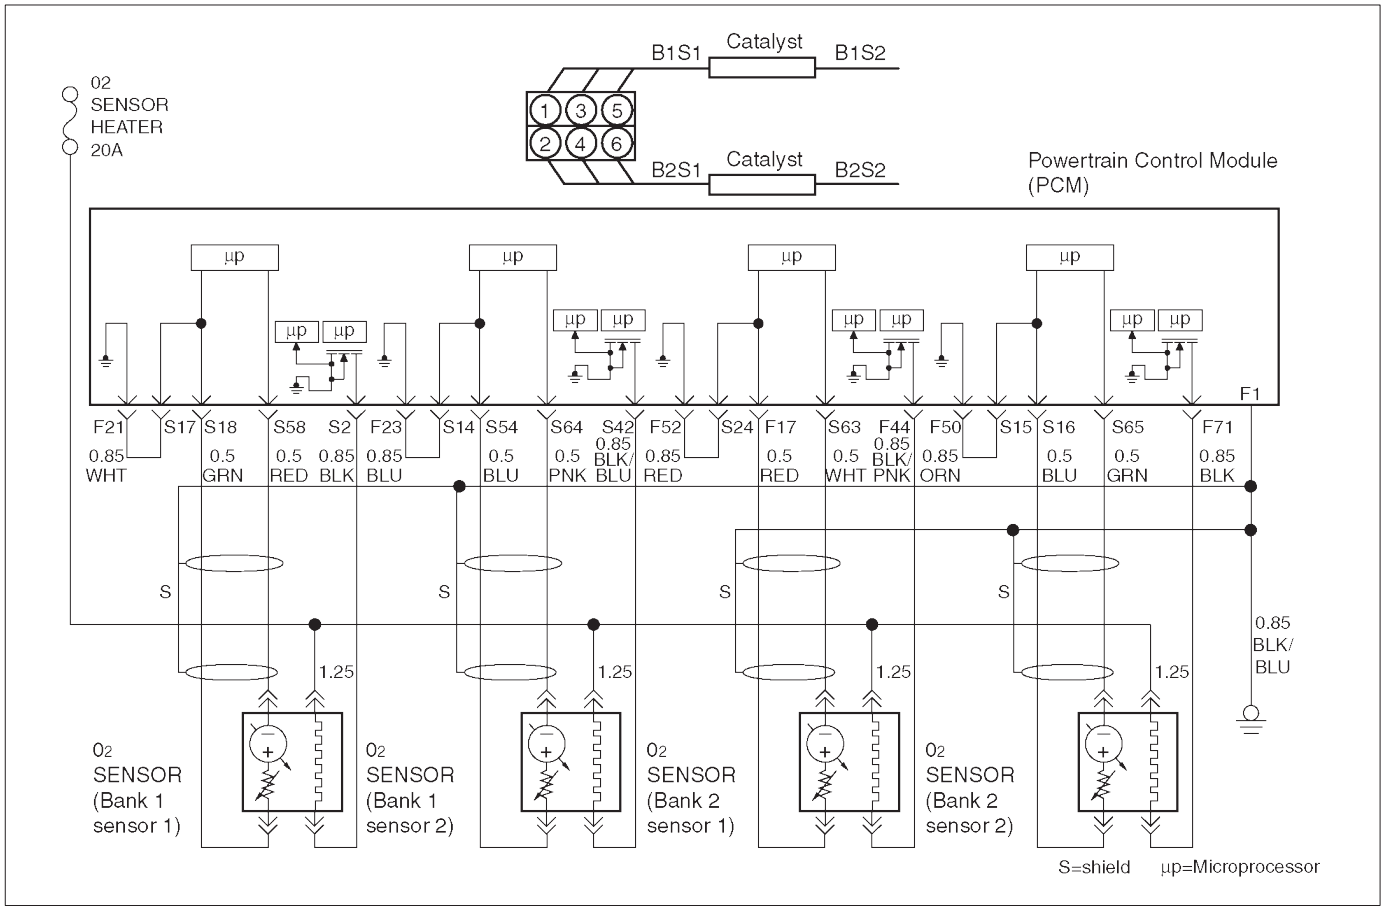Diagnostic Trouble Code (DTC) P0172 Fuel Trim System Rich Bank 1



D06R200010

Circuit Description

To provide the best possible combination of driveability, fuel economy, and emission control, a “closed loop” air/fuel metering system is used. While in “closed loop”, the powertrain control module (PCM) monitors the Bank 1 heated oxygen sensors (HO2S) 1 and Bank 2 HO2S 1 signals and adjusts fuel delivery based upon the HO2S signal voltages. A change made to fuel delivery will be indicated by the long and short term fuel trim values which can be monitored with a Tech 2. Ideal fuel trim values are around 0%; if the HO2S signals are indicating a lean condition the PCM will add fuel, resulting in fuel trim values above 0%. If a rich condition is detected, the fuel trim values will be below 0%, indicating that the PCM is reducing the amount of fuel delivered. If an excessively rich condition is detected on Bank 1, the PCM will set DTC P0172.

The PCM’s maximum authority to control long term fuel trim allows a range between –15% (automatic transmission) or –12 (manual transmission) and +20%. The PCM’s maximum authority to control short term fuel trim allows a range between –11% and +20%. The PCM monitors fuel trim under various engine speed/load fuel trim cells before determining the status of the fuel trim diagnostic.

Conditions for Setting the DTC

- None of the following was set: EGR DTCs, HO2S DTCs, (response, transition, open, low volts, no activity), MAF DTCs, TPS DTCs, MAP DTCs, IAT DTCs, canister purge DTCs, EVAP DTCs, injector circuit DTCs, or misfire DTCs.
- Engine coolant temperature is between 6˚C (42.8˚F) and 105˚C (221˚F).
- Intake air temperature is between –40˚C (–40˚F) and 120˚C (248˚F).
- Manifold absolute pressure is between 24 kPa and 99 kPa.
- Throttle angle is steady below 95%.
- Vehicle speed is below 136 km/h (85 mph).
- Engine speed is between 400 and 6,000 RPM.
- Barometric pressure is greater than 72.5 kPa.
- Mass air flow is between 2 g/second and 200 g/second.
- Ignition voltage is above 9.5 volts.
- Fuel system is in “closed loop”.
- Canister purge duty cycle is greater than 0%, if “ON”.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.

- A history DTC P0172 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0172 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Bank 1 HO2S 1 display on the Tech 2 while moving connectors and wiring harnesses related to the engine harness. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. DTCs other than P0172 and P0175 may indicate a condition present which may cause a lean condition. If this is the case, repairing the condition which caused the other DTC will most likely correct the DTC P0172/P0175.

4. If the DTC P0172 test passes while the Failure Records conditions are being duplicated, the rich condition is intermittent. Refer to *Diagnostic Aids* or *Symptoms* for additional information on diagnosing intermittent problems.

DTC P0172 – Fuel Trim System Rich Bank 1

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any DTCs set other than P0172 and P0175?	—	Go to the applicable DTC charts and repair the other DTCs before proceeding with this chart	Go to *Step 3*
3	1. Start the engine and operate the vehicle in "closed loop". 2. Observe "B1 Long Term Fuel Trim" display on the Tech 2. Is the displayed value more negative than the specified value?	L.T. Fuel Trim: –15% (auto. trans.) OR –12% (man. trans.)	Go to *Step 5*	Go to *Step 4*
4	1. Review and record the Tech 2 Failure Records data. 2. Clear the DTC P0172/P0175 and operate the vehicle to duplicate the Failure Records conditions. 3. Monitor the Tech 2 "DTC" info for DTC P0172 while operating the vehicle to duplicate the Failure Records conditions. 4. Continue operating the vehicle until the DTC P0172 test runs and note test result. Does the Tech 2 indicate DTC P0172 failed this ignition?	—	Go to *Step 5*	The rich condition is not present. If a driveability symptom still exists, refer to *Symptoms*.
5	Is DTC P0175 also set?	—	Go to *Step 6*	Go to *Step 15*
6	Visually and physically inspect the air filter element and replace it if necessary. Did the air filter require replacement?	—	Verify repair	Go to *Step 7*
7	Visually and physically inspect the air intake duct for collapse or restriction and repair if necessary. Did your inspection reveal a condition requiring repair?	—	Verify repair	Go to *Step 8*


DTC P0172 – Fuel Trim System Rich Bank 1 (Cont'd)

Step	Action	Value(s)	Yes	No
8	Inspect the MAF sensor inlet screen for damage or for the presence of foreign objects which may partially block air flow through the screen and correct any problem found. Did your inspection of the MAF sensor reveal a condition requiring repair or replacement?	—	Verify repair	Go to *Step 9*
9	Start the engine and note the idle quality. Is a low or unsteady idle being experienced?	—	Go to *Step 10*	Go to *Step 11*
10	1. Ignition "OFF". 2. Physically inspect the throttle body bore and throttle plate for coking and foreign objects. 3. If a problem was found, repair as necessary. Did your inspection reveal a condition requiring repair?	—	Verify repair	Go to *Step 11*
11	1. Disconnect the vacuum hose from the fuel pressure regulator and inspect the hose for the presence of fuel. 2. If fuel is present in the vacuum hose, replace the fuel pressure regulator (refer to *Fuel Metering System*). Did the fuel pressure regulator require replacement?	—	Verify repair	Go to *Step 12*
12	Ignition "ON", engine "OFF", monitor the TP1 Angle display on the Tech 2 while slowly depressing the accelerator pedal. Does the TP Angle display increase steadily and evenly from minimum value at closed throttle to maximum value at wide-open throttle?	Minimum 8% Maximum 92%	Go to *Step 13*	Go to *Step 21*
13	1. Disconnect the MAF sensor electrical connector. 2. Operate the vehicle in "closed loop" while monitoring the "BANK 1 L.T. FUEL TRIM" and "BANK 1 S. T. FUEL TRIM" display on the Tech 2. Did both values change to near the specified value?	0%	Go to *Step 22*	Go to *Step 14*
14	1. Perform "Fuel System Pressure Test". 2. If Fuel System Pressure Test isolates a problem, repair as necessary (refer to *Engine Fuel* or *Fuel Metering System*). Did the Fuel System Pressure Test isolate a problem requiring repair?	—	Verify repair	Go to *Step 15*
15	1. Ignition "ON", engine "OFF". 2. Connect a test light between the harness connector terminals of canister purge solenoid. Is the test light on?	—	Go to *Step 16*	Go to *Step 19*
16	Check for short to ground in the wire (YEL/RED) between the canister purge solenoid and PCM terminal S-48. Was there a short to ground?	—	Go to *Step 17*	Go to *Step 18*
17	Repair the short to ground. Is the action complete?	—	Verify repair	—

DTC P0172 – Fuel Trim System Rich Bank 1 (Cont'd)

Step	Action	Value(s)	Yes	No
18	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
19	1. Perform the "Injector Balance Test". 2. If Injector Balance Test isolates a problem, repair as necessary (refer to *Fuel Metering System*). Did the Injector Balance Test isolate a problem requiring repair?	—	Verify repair	Go to *Step 20*
20	1. Remove and visually/physically inspect the Bank 1 HO2S 1 for silicon contamination. This will be indicated by a powdery deposit on the portion of the HO2S that is exposed to the exhaust stream. 2. If contamination is evident on the Bank 1 HO2S 1, replace the contaminated sensors. Did the sensor require replacement?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*
21	1. Check the TP sensor mounting screws and tighten or replace them as necessary if they are loose or missing. 2. If the screws are OK, replace the TP sensor. Is the action complete?	—	Verify repair	—
22	Replace the MAF sensor. Is the action complete?	—	Verify repair	—

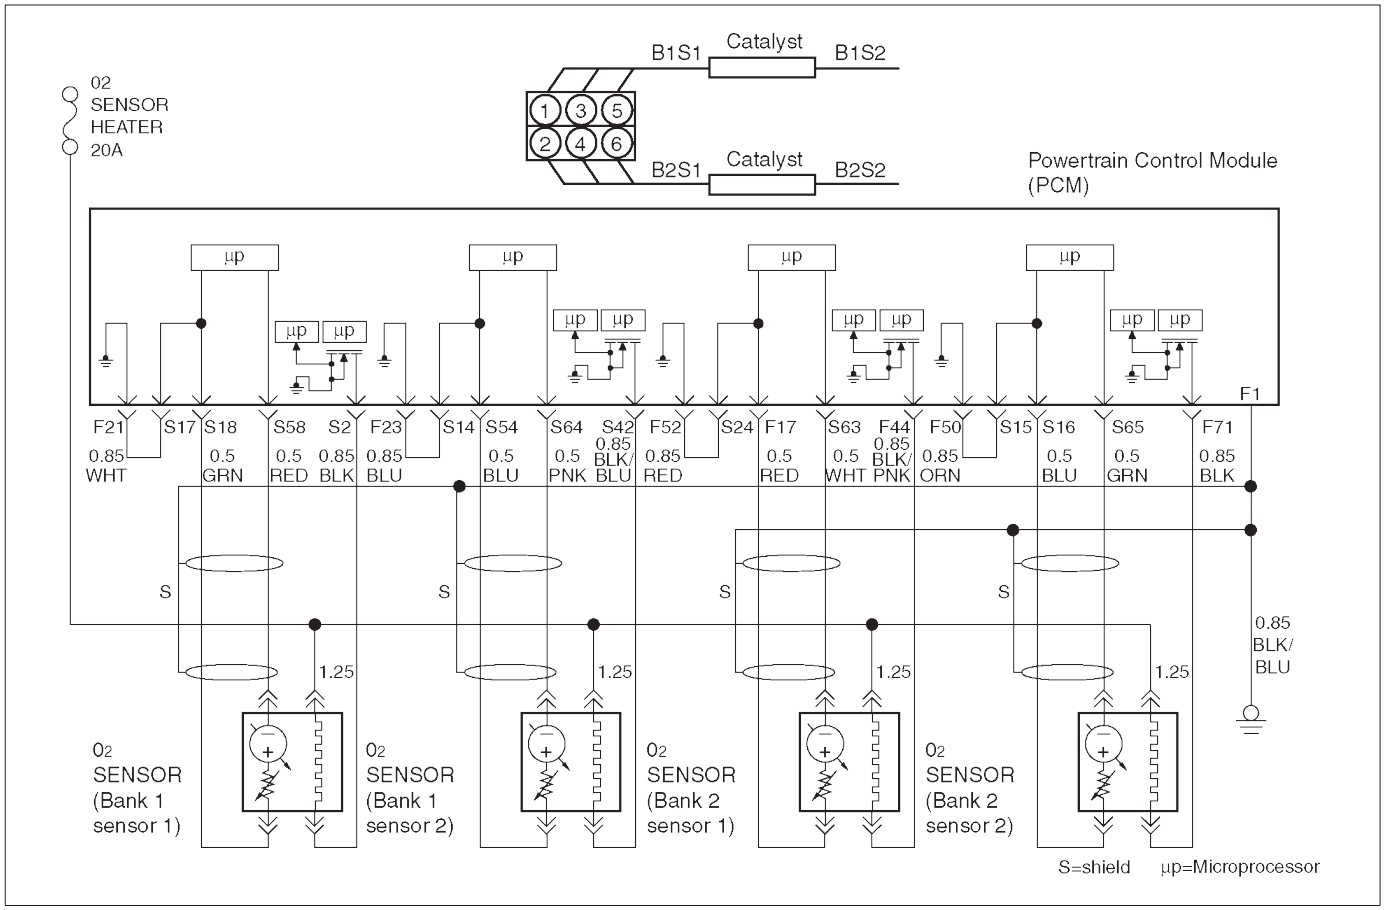Diagnostic Trouble Code (DTC) P0174 Fuel Trim System Lean Bank 2



D06R200010

Circuit Description

To provide the best possible combination of driveability, fuel economy, and emission control, a “closed loop” air/fuel metering system is used. While in “closed loop”, the powertrain control module (PCM) monitors the Bank 1 HO2S 1 and Bank 2 HO2S 1 signals and adjusts fuel delivery based upon the HO2S signal voltages. A change made to fuel delivery will be indicated by the long and short term fuel trim values which can be monitored with a Tech 2. Ideal fuel trim values are around 0%; if the HO2S signals are indicating a lean condition the PCM will add fuel, resulting in fuel trim values above 0%. If a rich condition is detected, the fuel trim values will be below 0%, indicating that the PCM is reducing the amount of fuel delivered. If an excessively lean condition is detected on Bank 2, the PCM will set DTC P0174.

The PCM’s maximum authority to control long term fuel trim allows a range between –15%(automatic transmission) or –12%(manual transmission) and +20%. The PCM monitors fuel trim under various engine speed/load fuel trim cells before determining the status of the fuel trim diagnostic.

Conditions for Setting the DTC

- None of the following DTCs are set: idle system, EGR, HO2S, (response, transition, open, low volts, no activity), MAF, TP sensor, MAP, IAT, canister purge, EVAP, injector circuit, or misfire.
- Engine coolant temperature is between 6°C (42.8°F) and 105°C (221°F).
- Intake air temperature is between –40°C (–40°F) and 120°C (248°F).
- Manifold absolute pressure is between 24 kPa and 99 kPa.
- Throttle angle is steady between 3 and 95%.
- Vehicle speed is below 136 km/h (85 mph).
- Engine speed is between 400 and 6,000 RPM.
- Barometric pressure is greater than 72.5 kPa.
- Mass air flow is between 2 g/second and 200 g/second.
- Ignition voltage is above 9.5 volts.
- Fuel system is in “closed loop”.
- Canister purge duty cycle is greater than 0%, if “ON”.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the failure is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0174 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0174 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Bank 2 HO2S 1 display on the Tech 2 while moving connectors and wiring harnesses related to the engine harness. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. DTCs other than P0171 and P0174 may indicate a condition present which may cause a lean condition. If this is the case, repairing the condition which caused the other DTC will most likely correct the DTC P0171/P0174.

4. If the DTC P0174 test passes while the Failure Records conditions are being duplicated, the lean condition is intermittent. Refer to *Diagnostic Aids* or *Symptoms* for additional information on diagnosing intermittent problems.


DTC P0174 – Fuel Trim System Lean Bank 2

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any DTCs set other than P0174 and P0171?	—	Go to the applicable DTC charts and repair the other DTCs before proceeding with this chart.	Go to *Step 3*
3	1. Start the engine and operate the vehicle in "closed loop". 2. Observe the "BANK 2 L.T. FUEL TRIM" display on the Tech 2. Is the displayed values greater than the specified values?	L.T. Fuel Trim: +20%	Go to *Step 5*	Go to *Step 4*
4	1. Review and record Tech 2 Failure Records data. 2. Clear the DTC P0171/P0174 and operate the vehicle to duplicate the Failure Records conditions. 3. Monitor the Tech 2 "DTC" info for DTC P0174 while operating the vehicle to duplicate the Failure Records conditions. 4. Continue operating the vehicle until the DTC P0174 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0174 failed this ignition?	—	Go to *Step 5*	The lean condition is not present. If a driveability symptom still exists, refer to *Symptoms* section.
5	Was DTC P0171 also set?	—	Go to *Step 6*	Go to *Step 15*
6	Visually and physically inspect the vacuum hoses for disconnections, splits, kinks, improper routing and improper connections and repair any problem found. Did your inspection reveal a problem requiring repair?	—	Verify repair	Go to *Step 7*
7	Visually and physically inspect the crankcase ventilation valve for proper installation and repair any problem found (refer to *Crankcase Ventilation System*). Did your inspection reveal a problem requiring repair?	—	Verify repair	Go to *Step 8*
8	1. Inspect the MAF sensor inlet screen for damage or for the presence of foreign objects which may partially block the air flow sample through the MAF sensor. 2. Correct any problem that is found as necessary. Did your inspection of the MAF sensor reveal a condition requiring repair?	—	Verify repair	Go to *Step 9*
9	Start the engine and note the idle quality. Is a high or unsteady idle being experienced?	—	Go to *Step 10*	Go to *Step 11*

DTC P0174 – Fuel Trim System Lean Bank 2 (Cont'd)

Step	Action	Value(s)	Yes	No
10	1. Visually and physically inspect the throttle body, intake manifold, EGR valve and the EGR feed pipe for vacuum leaks. 2. Repair any vacuum leaks as necessary. Did your inspection reveal a vacuum leak?	—	Verify repair	Go to *Step 11*
11	Check the fuel for excessive water, alcohol, or other contaminants (see *Diagnosis* in *Engine Fuel* for procedure) and correct the contaminated fuel condition is present (see *Engine Fuel*). Was the fuel contaminated?	—	Verify repair	Go to *Step 12*
12	1. Visually and physically inspect the PCM injector grounds, power grounds and sensor grounds to ensure that they are clean, tight, and in their proper locations. 2. If a faulty ground condition is present, correct it as necessary. Did your inspection reveal a condition requiring repair?	—	Verify repair	Go to *Step 13*
13	1. Disconnect the MAF sensor electrical connector. 2. Operate the vehicle in "closed loop" while monitoring the "BANK 2 S.T. FUEL TRIM" displayed on the Tech 2. Does the "BANK 2 S.T. FUEL TRIM" value decrease to near the specified value?	0%	Go to *Step 19*	Go to *Step 14*
14	Perform the procedure in the "Fuel System Pressure Test" and repair fuel system problem if necessary. Did the Fuel System Pressure Test isolate a condition requiring repair?	—	Verify repair	Go to *Step 15*
15	1. Visually and physically inspect the intake manifold, injector O-rings, EGR adapter, EGR valve and the EGR feed pipes for vacuum leaks. 2. Repair any problem that is found. Did your inspection reveal a problem?	—	Verify repair	Go to *Step 16*
16	Visually and physically inspect the Bank 2 exhaust manifold for leaks and loose or missing hardware and correct any problem found. Did your inspection reveal a problem?	—	Verify repair	Go to *Step 17*
17	Perform the "Injector Balance Test" and correct any problem found (refer to *Fuel Metering System*). Did the Injector Balance Test isolate a problem?	—	Verify repair	Go to *Step 18*
18	1. Visually and physically inspect the Bank 2 HO2S 1 to ensure that it is installed securely and that the Bank 2 HO2S 1 pigtail and wiring harness are not contacting the exhaust or otherwise damaged. 2. If a problem is found, correct it as necessary. Did your inspection reveal a problem?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*
19	Replace the MAF sensor. Is the action complete?	—	Verify repair	—

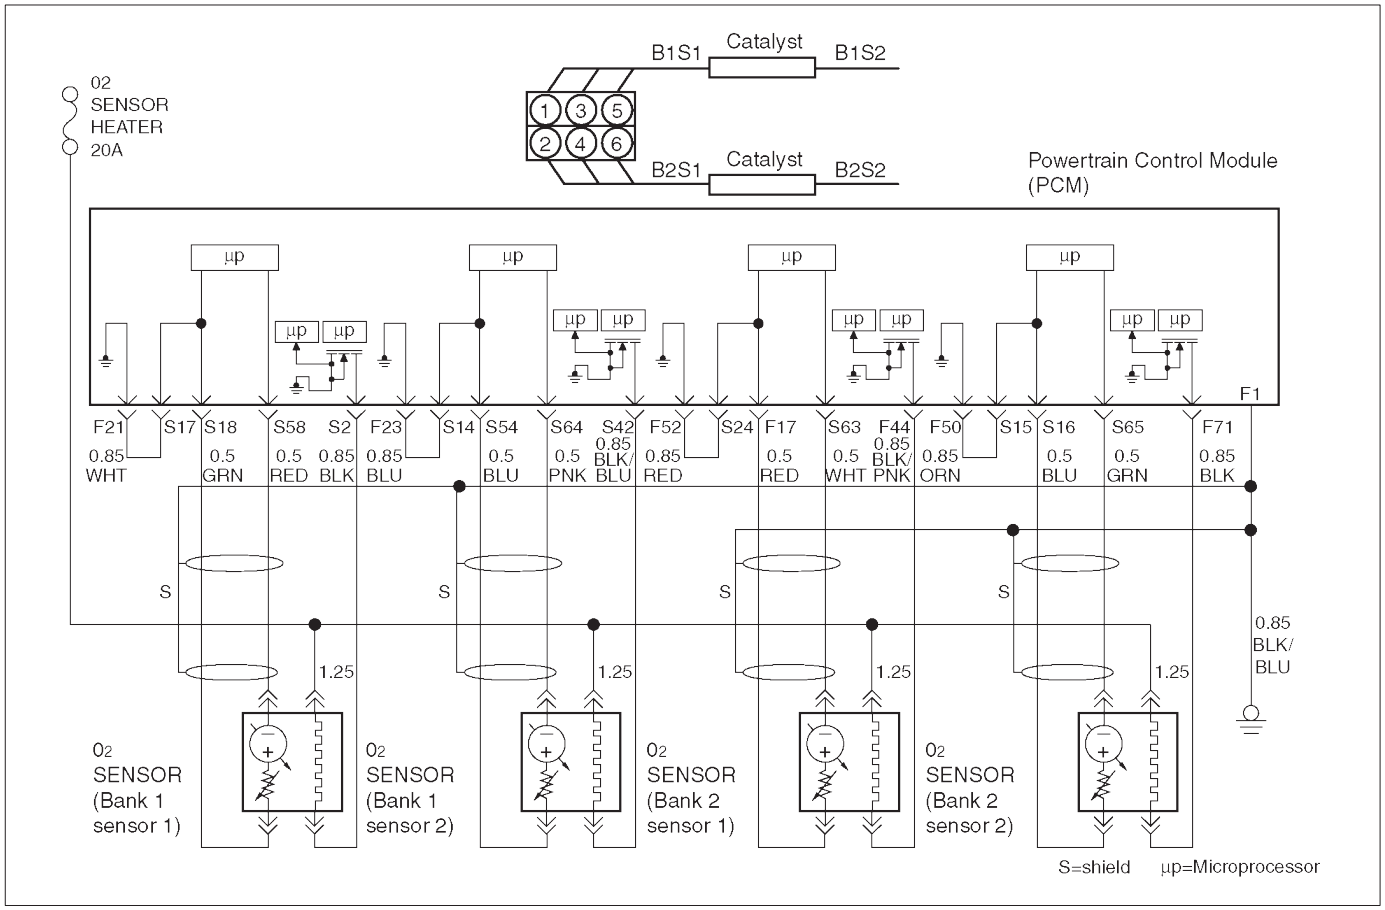Diagnostic Trouble Code (DTC) P0175 Fuel Trim System Rich Bank 2



D06R200010

Circuit Description

To provide the best possible combination of driveability, fuel economy, and emission control, a “closed loop” air/fuel metering system is used. While in “closed loop”, the powertrain control module (PCM) monitors the Bank 1 HO2S 1 and Bank 2 HO2S 1 signals and adjusts fuel delivery based upon the HO2S signal voltages. A change made to fuel delivery will be indicated by the long and short term fuel trim values which can be monitored with a Tech 2. Ideal fuel trim values are around 0%; if the HO2S signals are indicating a lean condition the PCM will add fuel, resulting in fuel trim values above 0%. If a rich condition is detected, the fuel trim values will be below 0%, indicating that the PCM is reducing the amount of fuel delivered. If an excessively rich condition is detected on Bank 2, the PCM will set DTC P0175.

The PCM’s maximum authority to control long term fuel trim allows a range between –15%(automatic transmission) or –12%(manual transmission) and +20%. The PCM’s maximum authority to control short term fuel trim allows a range between –11% and +20%. The PCM monitors fuel trim under various engine speed/load fuel trim cells before determining the status of the fuel trim diagnostic.

Conditions for Setting the DTC

- None of the following DTCs are set: idle system, EGR, HO2S, (response, transition, open, low volts, no activity), MAF, TPS, MAP, IAT, canister purge, EVAP, injector circuit, or misfire.
- Engine coolant temperature is between 6˚C (42.8˚F) and 105˚C (221˚F).
- Intake air temperature is between –40˚C (–40˚F) and 120˚C (248˚F).
- Manifold absolute pressure is between 24 kPa and 99 kPa.
- Throttle angle is steady between 3 and 95%.
- Vehicle speed is below 136 km/h (85 mph).
- Engine speed is between 400 and 6,000 RPM.
- Barometric pressure is greater than 72.5 kPa.
- Mass air flow is between 2 g/second and 200 g/second.
- Ignition voltage is above 9.5 volts.
- Fuel system is in “closed loop”.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the failure is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.

- A history DTC P0175 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0175 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed -out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Bank 2 HO2S 1 display on the Tech 2 while moving connectors and wiring harnesses related to the engine harness. A change in the display will indicate the location of the fault.

Reviewing the Failure Records Vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. DTCs other than P0172 and P0175 may indicate a condition present which may cause a lean condition. If this is the case, repairing the condition which caused the other DTC will most likely correct the DTC P0172/P0175.

4. If the DTC P0175 test passes while the Failure Records conditions are being duplicated, the rich condition is intermittent. Refer to *Diagnostic Aids* or *Symptoms* for additional information on diagnosing intermittent problems.

DTC P0175 – Fuel Trim System Rich Bank 2

Step	Action	Value(s)	Yes	No
1	Was the ”On-Board Diagnostic (OBD) System Check” performed?	—	Go to Step 2	Go to *OBD System Check*
2	Are any DTCs set other than P0172 and P0175?	—	Go to the applicable DTC charts and repair the other DTCs before proceeding with this chart.	Go to *Step 3*
3	1. Start the engine and operate the vehicle in “closed loop”. 2. Observe the “BANK 2 L.T. FUEL TRIM” display on the Tech 2. Is the displayed value more negative than the specified value?	L.T. Fuel Trim: –15% (auto. trans.) OR –12% (man. trans.)	Go to *Step 5*	Go to *Step 4*
4	1. Review and record the Tech 2 Failure Records data. 2. Clear the DTC P0172/P0175 and operate the vehicle to duplicate the Failure Records conditions. 3. Monitor the Tech 2 “DTC” info for DTC P0175 while operating the vehicle to duplicate the Failure Records conditions. 4. Continue operating the vehicle until the DTC P0175 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0175 failed this ignition?	—	Go to *Step 5*	The rich condition is not present. If a driveability symptom still exists, refer to *Symptoms*.
5	Was DTC P0172 also set?	—	Go to *Step 6*	Go to *Step 15*
6	Visually and physically inspect the air filter element and replace it if necessary. Did the air filter require replacement?	—	Verify repair	Go to *Step 7*


DTC P0175 – Fuel Trim System Rich Bank 2 (Cont'd)

Step	Action	Value(s)	Yes	No
7	Visually and physically inspect the air intake duct for collapse or restriction and repair if necessary. Did your inspection reveal a problem requiring repair?	—	Verify repair	Go to *Step 8*
8	Inspect the MAF sensor inlet screen for damage or for the presence of foreign objects which may partially block air flow through the screen and correct any problem found. Did your inspection of the MAF sensor reveal a condition requiring repair or replacement?	—	Verify repair	Go to *Step 9*
9	Start the engine and note the idle quality. Is a low or unsteady idle being experienced?	—	Go to *Step 10*	Go to *Step 11*
10	1. Turn the ignition off and physically inspect the throttle body bore, throttle plate, and IAC passages for coking and foreign objects. 2. If a problem was found, repair as necessary. Did your inspection reveal a condition requiring repair?	—	Verify repair	Go to *Step 11*
11	1. Disconnect the vacuum hose from the fuel pressure regulator and inspect the hose for the presence of fuel. 2. If fuel is present in the vacuum hose, replace the fuel pressure regulator (refer to *Fuel Metering System*). Did the fuel pressure regulator require replacement?	—	Verify repair	Go to *Step 12*
12	1. Ignition "ON", engine "OFF". 2. Monitor the TP Angle display on the Tech 2 while slowly depressing the accelerator pedal. Does the TP Angle display increase steadily and evenly from minimum value at closed throttle to maximum value at wide-open throttle?	Minimum 8% Maximum 92%	Go to *Step 13*	Go to *Step 21*
13	1. Disconnect the MAF sensor electrical connector. 2. Operate the vehicle in "closed loop" while monitoring the "BANK 2 L.T. FUEL TRIM" and "BANK 2 S.T. FUEL TRIM" display on the Tech 2. Did both values change to near the specified value?	0%	Go to *Step 22*	Go to *Step 14*
14	1. Perform the "Fuel System Pressure Test". 2. If Fuel System Pressure Test isolates a problem, repair as necessary (refer to *Engine Fuel* or *Fuel Metering System*). Did the Fuel System Pressure Test isolate a condition requiring repair?	—	Verify repair	Go to *Step 15*
15	1. Ignition "ON", engine "OFF". 2. Connect a test light between the harness connector terminals of canister purge solenoid. Is the test light on?	—	Go to *Step 16*	Go to *Step 19*
16	Check for short to ground in the wire (YEL/RED) between the canister purge solenoid and PCM terminal S-48. Was there a short to ground?	—	Go to *Step 17*	Go to *Step 18*

DTC P0175 – Fuel Trim System Rich Bank 2 (Cont'd)

Step	Action	Value(s)	Yes	No
17	Repair the short to ground. Is the action complete?	—	Verify repair	—
18	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
19	1. Perform the "Injector Balance Test". 2. If the Injector Balance Test isolates a problem, repair as necessary (refer to *Fuel Metering System*). Did the Injector Balance Test isolate a problem requiring repair?	—	Verify repair	Go to *Step 20*
20	1. Remove and visually/physically inspect the Bank 2 HO2S 1 for silicon contamination. This will be indicated by a powdery deposit on the portion of the HO2S that is exposed to the exhaust stream. 2. If contamination is evident on the Bank 2 HO2S 1, replace the contaminated sensor. Did the sensor require replacement?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*
21	1. Check the TP sensor mounting screws and tighten or replace them as necessary if they are loose or missing. 2. If the screws are OK, replace the TP sensor. Is the action complete?	—	Verify repair	—
22	Replace the MAF sensor. Is the action complete?	—	Verify repair	—

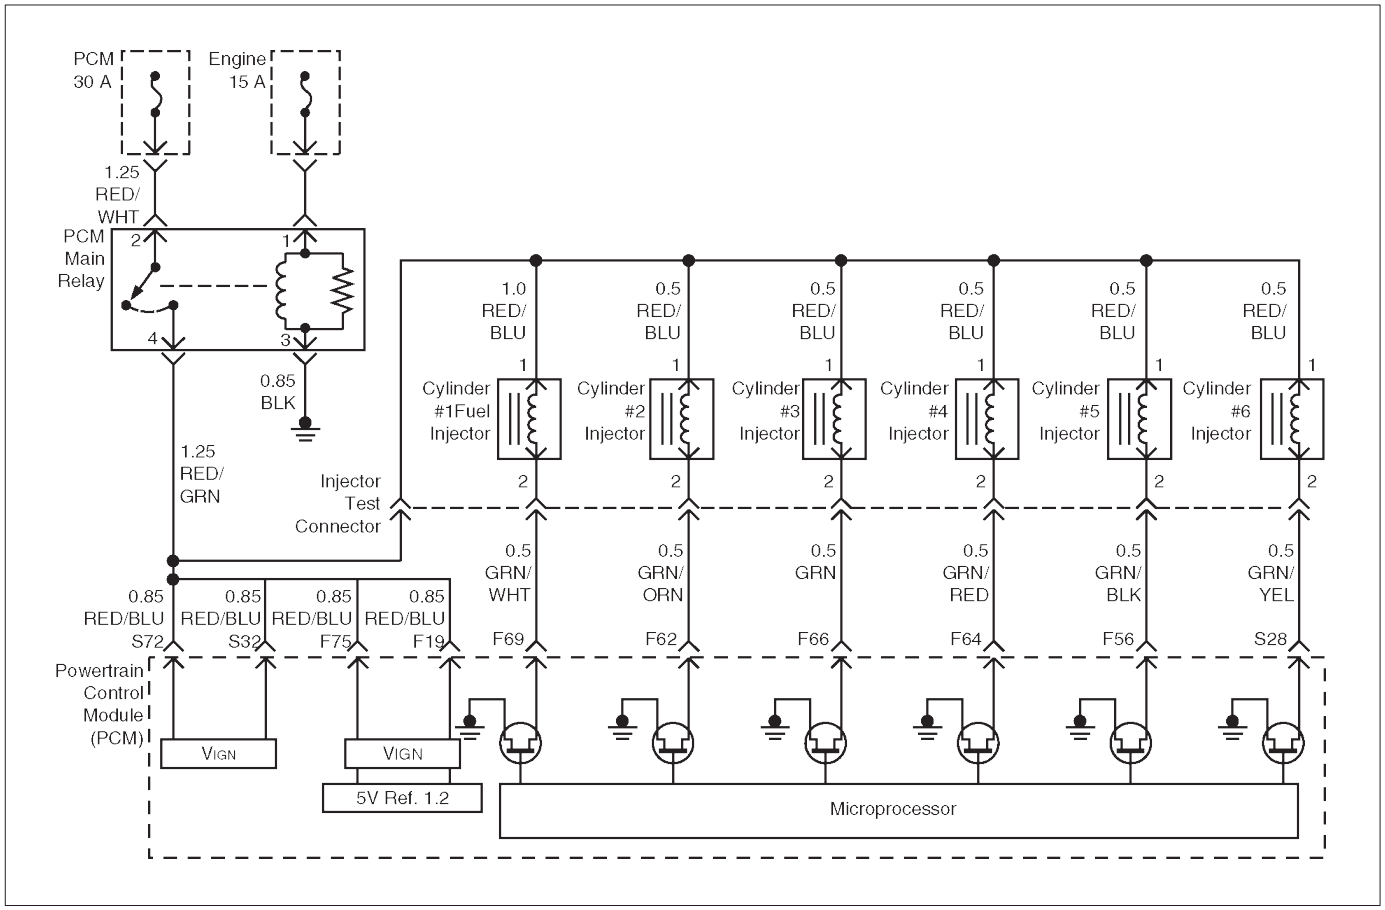Diagnostic Trouble Code (DTC) P0201 Injector 1 Control Circuit



D06R200014

Circuit Description

The powertrain control module (PCM) has six individual injector driver circuits. Each controls an injector. When a driver circuit is grounded by the PCM, the injector is activated. The PCM monitors the current in each driver circuit. The voltage on each driver is monitored to detect a fault. If the voltage is not what the PCM expects to monitor on the circuit, a DTC is set. This DTC is also set if an injector driver is shorted to voltage or if there is an open circuit.

Conditions for Setting the DTC

- The battery voltage is more than 9 volts.
- Engine speed is more than 700 rpm.
- The engine is turning, determined by 58X crankshaft position input signal.
- The injector voltage does not equal the ignition voltage when the injector is commanded “OFF” or the injector voltage does not equal 0 volts when the injector is commanded “ON”.
- The above conditions are met for 5 seconds.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn “OFF” the MIL on the third consecutive trip cycle in which the diagnostic has been run and the fault is no longer present.
- A history DTC P0201 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0201 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An injector driver circuit that is open or shorted to voltage will cause a DTC P0201 to set. It will also cause a misfire due to an inoperative injector. A misfire DTC will also be set indicating which cylinder is inoperative.

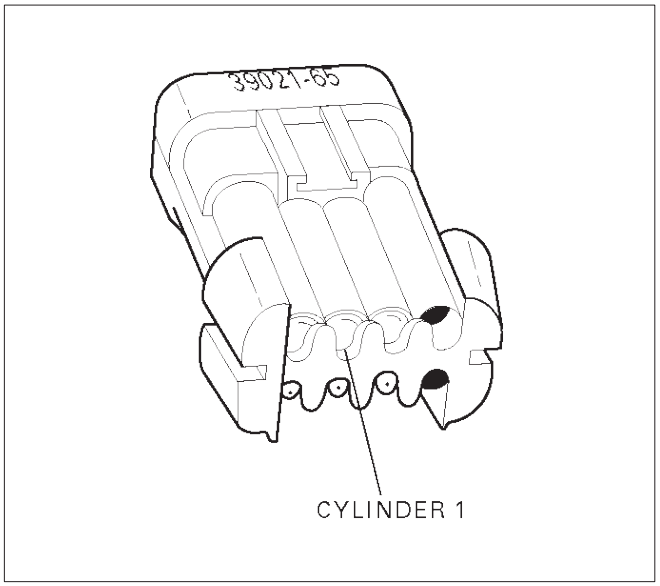
Long term and short term fuel trims that are excessively high or low are a good indication that an injector is faulty. Use Fuel Injector Coil Test Procedure to check for faulty injectors.

Test Description

The number(s) below refer to the step number(s) on the Diagnostic Chart.

3. This step determines if DTC P0201 is the result of a hard failure or an intermittent condition.
5. A special injector test connector is provided so that the injectors can be electrically tested without removal of the manifold. The test connector can be identified by the blue connector lock which is tethered to the wiring harness. If the light for cylinder 1 is "ON" steady before cranking the engine as well as while cranking the engine, then the injector driver circuit is shorted to ground.

   If the test light blinks while cranking, the PCM and the wiring to the injectors are OK. The Fuel Injector Coil Test Procedure will check if the injectors are faulty.



R321054

7. Because the test light was "ON" steady, voltage to the injector is OK, but the driver circuit is grounded at all times. This step determines if the circuit is shorted to ground or the PCM is faulty.
9. The reading should be about 12-14Ω.
10. Locating the open in the harness or in the injector will require removal of the manifold to provide access.


DTC P0201 – Injector 1 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Will the engine start?	—	Go to *Step 3*	Go to *Engine Cranks But Will Not Run* chart
3	1. Install the Tech 2. Clear the DTC. 2. Idle the engine for one minute. Does DTC P0201 reset?	—	Go to *Step 5*	Go to *Step 4*
4	1. Review the Freeze Frame data with the ignition "ON" and the engine "OFF" and note the parameters. 2. Operate the vehicle within the Freeze Frame conditions as noted. Does P0201 reset?	—	Go to *Step 5*	Check the Procedure Go to *Diagnostic Aids*
5	1. Engine "OFF". 2. Disconnect the injector connector. 3. Install an injector test light J-39021-65 on the injector test connector. 4. Crank the engine and note the light. Does the injector test light blink?	—	Go to *Fuel Injector Coil Test Procedure*	Go to *Step 6*

DTC P0201 – Injector 1 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
6	Note whether the injector test light for cylinder 1 was "OFF" or "ON" steady in step 5. Was the test light "ON" steady while cranking the engine?	—	Go to *Step 7*	Go to *Step 9*
7	1. Disconnect the PCM connector for the affected injectors. 2. With a test light connected to B+, probe the affected injector driver circuit. Does the test light illuminate?	—	Go to *Step 8*	Go to *Step 15*
8	Repair short to ground in the injector driver circuit. Is the action complete?	—	Go to *OBD System Check*	—
9	1. Disconnect the injector test connector. 2. At the injector side of the harness, connect an ohmmeter between the positive wire (red with blue tracer) and the wire for cylinder 1 (green with white tracer). Does the ohmmeter indicate continuity?	—	Go to *Step 11*	Go to *Step 10*
10	Repair the open injector harness wire or open injector. Is the action complete?	—	Verify repair	—
11	At the PCM side of the injector test connector, check the green/white wire for a short to voltage. Was there a short to voltage?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the short to voltage. Is the action complete?	—	Verify repair	—
13	Check for an open circuit between the injector test connector and the PCM. Was there an open circuit?	—	Go to *Step 14*	Go to *Step 15*
14	Repair the open circuit. Is the action complete?	—	Verify repair	—
15	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

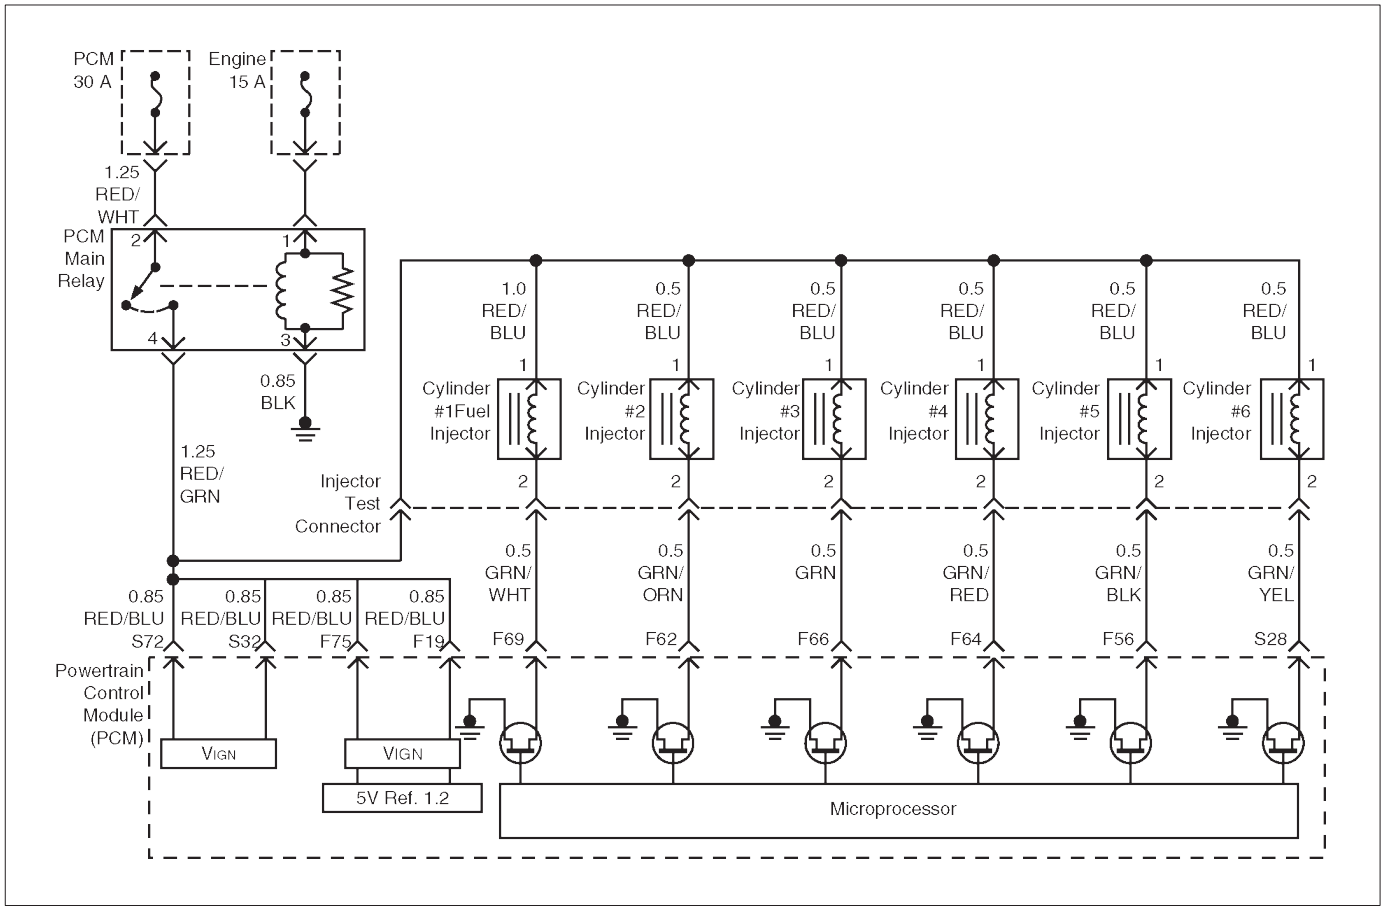Diagnostic Trouble Code (DTC) P0202 Injector 2 Control Circuit



D06R200014

Circuit Description

The powertrain control module (PCM) has six individual injector driver circuits. Each controls an injector. When a driver circuit is grounded by the PCM, the injector is activated. The PCM monitors the current in each driver circuit. The voltage on each driver is monitored to detect a fault. If the voltage is not what the PCM expects to monitor on the circuit, a DTC is set. This DTC is also set if an injector driver is shorted to voltage or if there is an open circuit.

Conditions for Setting the DTC

- The battery voltage is more than 9 volts.
- Engine speed is more than 700 rpm.
- The engine is turning, determined by 58X crankshaft position input signal.
- The injector voltage does not equal the ignition voltage when the injector is commanded “OFF” or the injector voltage does not equal 0 volts when the injector is commanded “ON”.
- The above conditions are met for 5 seconds.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn “OFF” the MIL on the third consecutive trip cycle in which the diagnostic has been run and the fault is no longer present.
- A history DTC P0202 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0202 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An injector driver circuit that is open or shorted to voltage will cause a DTC P0202 to set. It will also cause a misfire due to an inoperative injector. A misfire DTC will also be set indicating which cylinder is inoperative.

Long term and short term fuel trims that are excessively high or low are a good indication that an injector is faulty. Use Fuel Injector Coil Test Procedure to check for faulty injectors.

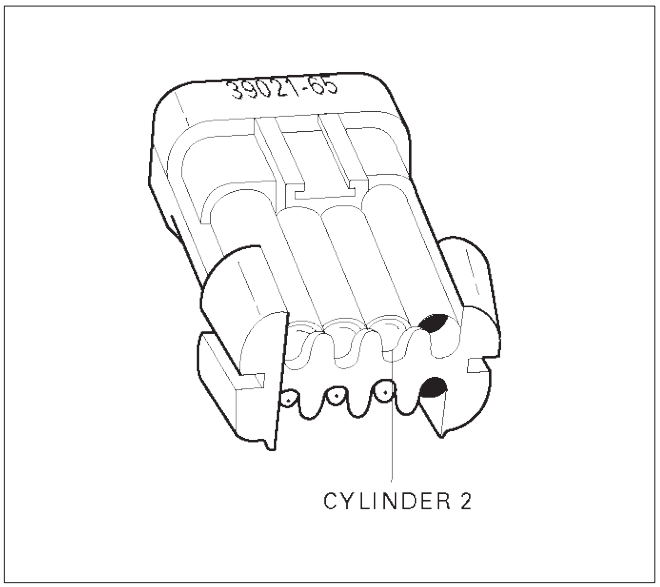
Test Description

The number(s) below refer to the step number(s) on the Diagnostic Chart.

3. This step determines if DTC P0202 is the result of a hard failure or an intermittent condition.

5. A special injector test connector is provided so that the injectors can be electrically tested without removal of the manifold. The test connector can be identified by the blue connector lock which is tethered to the wiring harness. If the light for cylinder 2 is “ON” steady before cranking the engine as well as while cranking the engine, then the injector driver circuit is shorted to ground.

   If the test light blinks while cranking, the PCM and the wiring to the injectors are OK. The Fuel Injector Coil Test Procedure will check if the injectors are faulty.



R321055

7. Because the test light was “ON” steady, voltage to the injector is OK, but the driver circuit is grounded at all times. This step determines if the circuit is shorted to ground or the PCM is faulty.

9. The reading should be about 12-14Ω.

10. Locating the open in the harness or in the injector will require removal of the manifold to provide access.


DTC P0202 – Injector 2 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Will the engine start?	—	Go to *Step 3*	Go to *Engine Cranks But Will Not Run* chart
3	1. Install the Tech 2. Clear the DTC. 2. Idle the engine for one minute. Does DTC P0202 reset?	—	Go to *Step 5*	Go to *Step 4*
4	1. Review the Freeze Frame data with the ignition “ON” and the engine “OFF” and note the parameters. 2. Operate the vehicle within the Freeze Frame conditions as noted. Does P0202 reset?	—	Go to *Step 5*	Check the Procedure Go to *Diagnostic Aids*
5	1. Engine “OFF”. 2. Disconnect the injector test connector. 3. Install an injector test light J-39021-65 on injector connector. 4. Crank the engine and note the light. Does the cylinder 2 test light blink?	—	Go to *Fuel Injector Coil Test Procedure*	Go to *Step 6*

DTC P0202 – Injector 2 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
6	Note whether the injector test light for cylinder 2 was "OFF" or "ON" steady in step 5. Was the test light "ON" steady while cranking the engine?	—	Go to *Step 7*	Go to *Step 9*
7	1. Disconnect the PCM connector for the affected injectors. 2. With a test light connected to B+, probe the affected injector driver circuit. Does the test light illuminate?	—	Go to *Step 8*	Go to *Step 15*
8	Repair short to ground in the injector driver circuit. Is the action complete?	—	Go to *OBD System Check*	—
9	1. Disconnect the injector test connector. 2. At the injector side of the harness, connect an ohmmeter between the positive wire (red with blue tracer) and the wire for cylinder 2 (green with orange tracer). Does the ohmmeter indicate continuity?	—	Go to *Step 11*	Go to *Step 10*
10	Repair the open injector harness wire or open injector. Is the action complete?	—	Verify repair	—
11	At the PCM side of the injector test connector, check the green/orange wire for a short to voltage. Was there a short to voltage?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the short to voltage. Is the action complete?	—	Verify repair	—
13	Check for an open circuit between the injector test connector and the PCM. Was there an open circuit?	—	Go to *Step 14*	Go to *Step 15*
14	Repair the open circuit. Is the action complete?	—	Verify repair	—
15	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

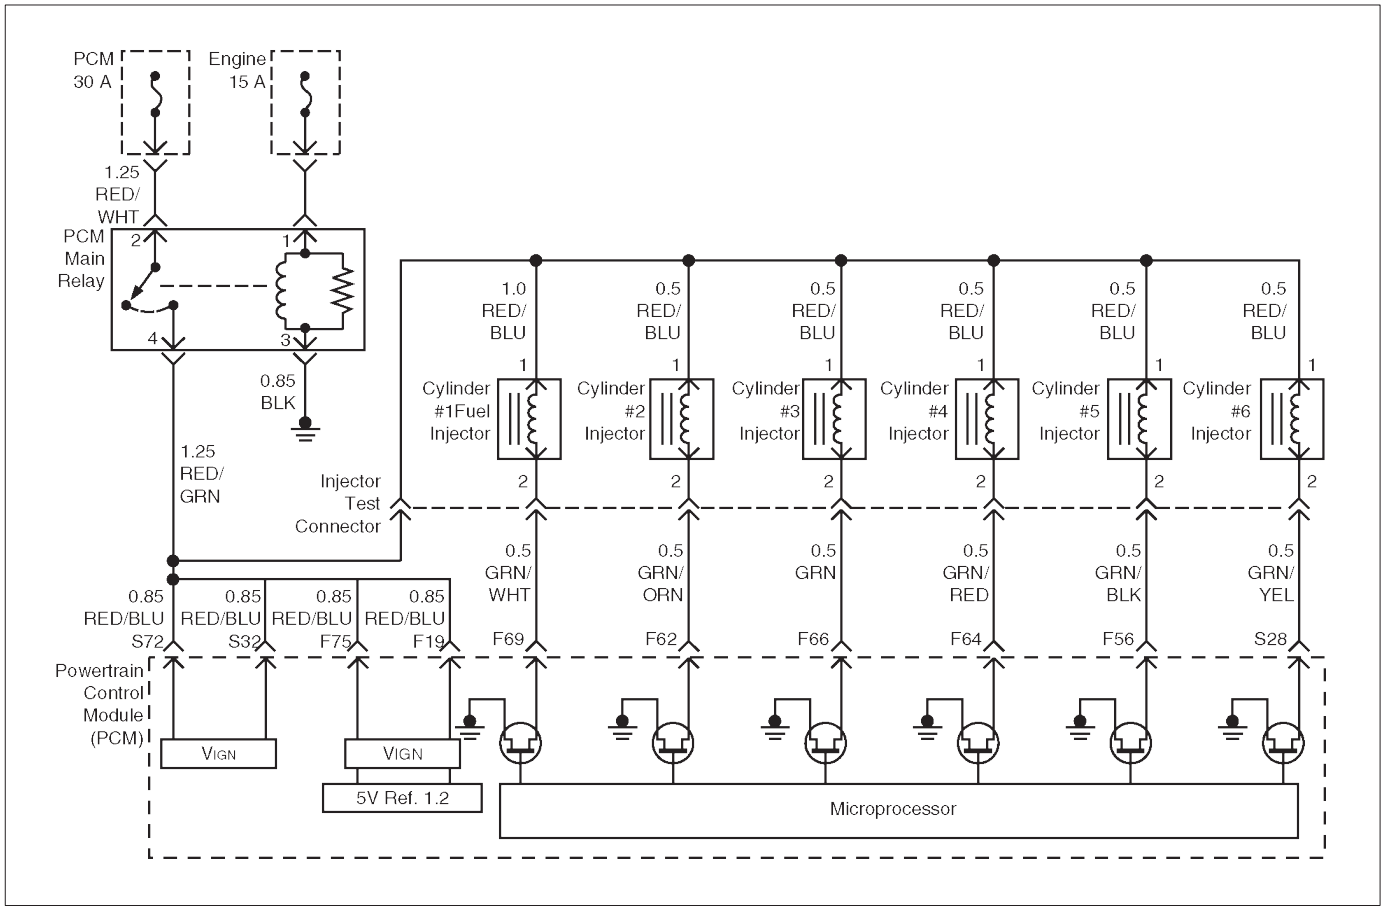Diagnostic Trouble Code (DTC) P0203 Injector 3 Control Circuit



D06R200014

Circuit Description

The powertrain control module (PCM) has six individual injector driver circuits. Each controls an injector. When the driver circuit is grounded by the PCM, the injector is activated. The PCM monitors the current in each driver circuit. The voltage on each driver is monitored to detect a fault. If the voltage is not what the PCM expects to monitor on the circuit, a DTC is set. This DTC is also set if an injector driver is shorted to voltage or if there is an open circuit.

Conditions for Setting the DTC

- The battery voltage is more than 9 volts.
- Engine speed is more than 700 rpm.
- The engine is turning, determined by the 58X crankshaft position input signal.
- The injector voltage does not equal the ignition voltage when the injector is commanded “OFF” or the injector voltage does not equal 0 volts when the injector is commanded “ON”.
- The above conditions are met for 5 seconds.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn “OFF” the MIL on the third consecutive trip cycle in which the diagnostic has been run and the fault is no longer present.
- A history DTC P0203 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0203 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An injector driver circuit that is open or shorted to voltage will cause a DTC P0203 to set. It will also cause a misfire due to an inoperative injector. A misfire DTC will also be set indicating which cylinder is inoperative.
Long term and short term fuel trims that are excessively high or low are a good indication that an injector is faulty. Use Fuel Injector Coil Test Procedure to check for faulty injectors.

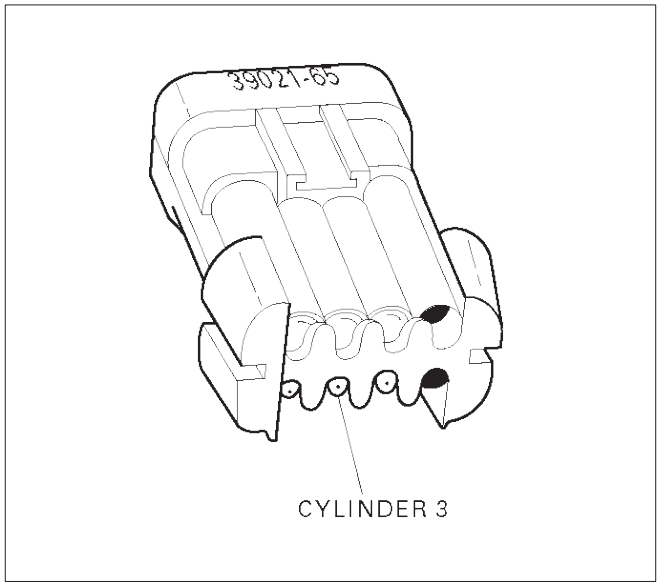
Test Description

The number(s) below refer to the step number(s) on the Diagnostic Chart.

3. This step determines if DTC P0203 is the result of a hard failure or an intermittent condition.

5. A special injector test connector is provided so that the injectors can be electrically tested without removal of the manifold. The test connector can be identified by the blue connector lock which is tethered to the wiring harness. If the light for cylinder 3 is “ON” steady before cranking the engine as well as while cranking the engine, then the injector driver circuit is shorted to ground.

   If the test light blinks while cranking, the PCM and the wiring to the injectors are OK. The Fuel Injector Coil Test Procedure will check if the injectors are faulty.



R321056

7. Because the test light was “ON” steady, voltage to the injector is OK, but the driver circuit is grounded at all times. This step determines if the circuit is shorted to ground or the PCM is faulty.

9. The reading should be about 12-14Ω.

10. Locating the open in the harness or in the injector will require removal of the manifold to provide access.


DTC P0203 – Injector 3 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Will the engine start?	—	Go to *Step 3*	Go to *Engine Cranks But Will Not Run* chart
3	1. Install the Tech 2. Clear the DTC. 2. Idle the engine for one minute. Does DTC P0203 reset?	—	Go to *Step 5*	Go to *Step 4*
4	1. Review the Freeze Frame data with the ignition “ON” and the engine “OFF” and note the parameters. 2. Operate the vehicle within the Freeze Frame conditions as noted. Does P0203 reset?	—	Go to *Step 5*	Check the Procedure Go to *Diagnostic Aids*

DTC P0203 – Injector 3 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
5	1. Engine "OFF". 2. Disconnect the injector test connector . 3. Install an injector test light J-39021-65 on injector connector. 4. Crank the engine and note the light. Does the cylinder 3 test light blink?	—	Go to *Fuel Injector Coil Test Procedure*	Go to *Step 6*
6	Note whether the injector test light for cylinder 3 was "OFF" or "ON" steady in step 5. Was the test light "ON" steady while cranking the engine?	—	Go to *Step 7*	Go to *Step 9*
7	1. Disconnect the PCM connector for the affected injectors. 2. With a test light connected to B+, probe the affected injector driver circuit. Does the test light illuminate?	—	Go to *Step 8*	Go to *Step 15*
8	Repair short to ground in the injector driver circuit. Is the action complete?	—	Go to *OBD System Check*	—
9	1. Disconnect the injector test connector. 2. At the injector side of the harness, connect an ohmmeter between the positive wire (red with blue tracer) and the wire for cylinder 3 (green). Does the ohmmeter indicate continuity?	—	Go to *Step 11*	Go to *Step 10*
10	Repair the open injector harness wire or open injector. Is the action complete?	—	Verify repair	—
11	At the PCM side of the injector test connector, check the green wire for a short to voltage. Was there a short to voltage?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the short to voltage. Is the action complete?	—	Verify repair	—
13	Check for an open circuit between the injector test connector and the PCM. Was there an open circuit?	—	Go to *Step 14*	Go to *Step 15*
14	Repair the open circuit. Is the action complete?	—	Verify repair	—
15	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

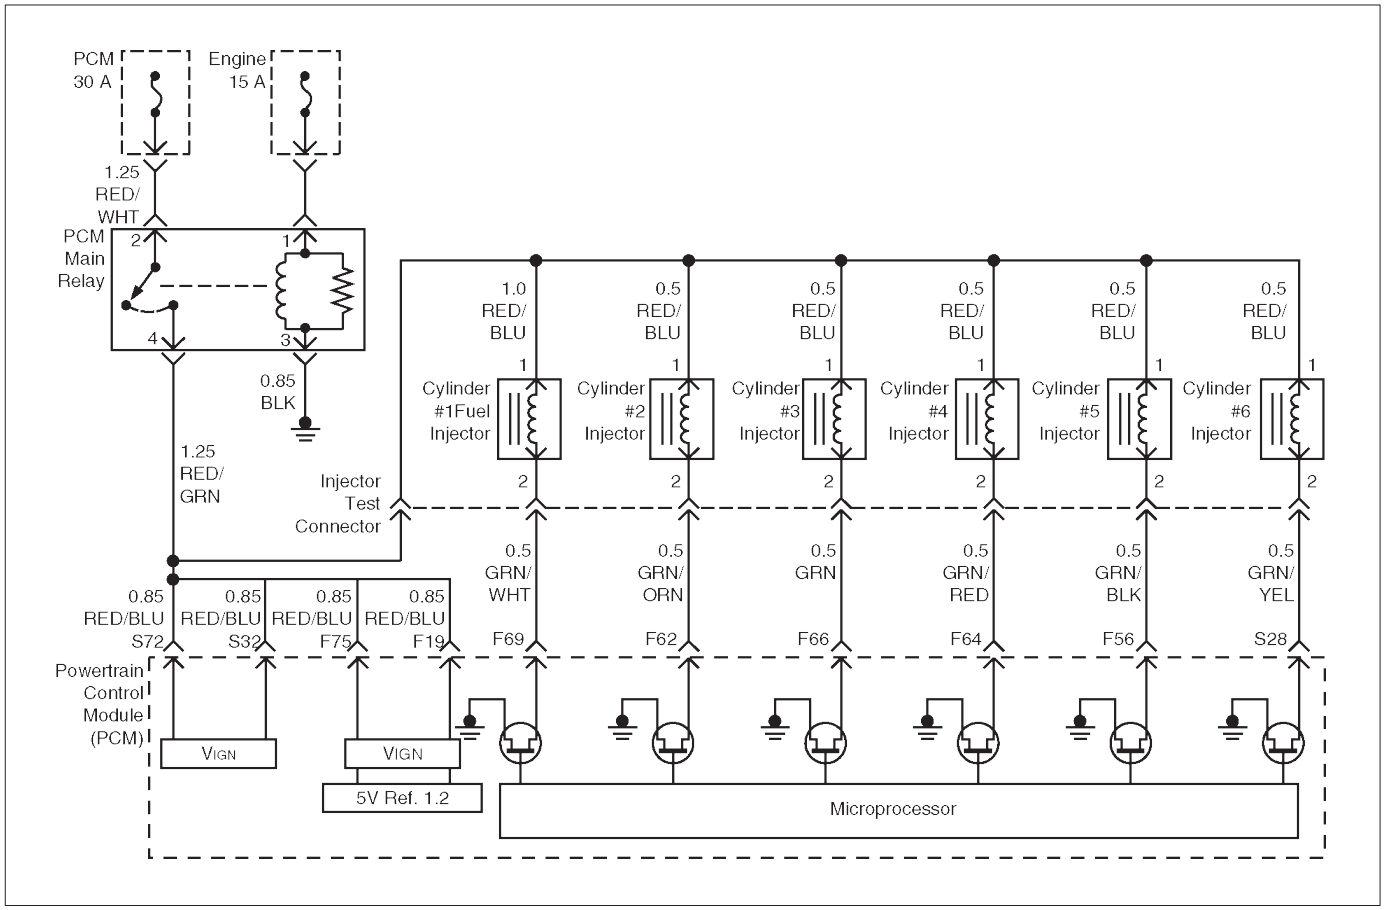Diagnostic Trouble Code (DTC) P0204 Injector 4 Control Circuit



D06R200014

Circuit Description

The powertrain control module (PCM) has six individual injector driver circuits. Each controls an injector. When the driver circuit is grounded by the PCM, the injector is activated. The PCM monitors the current in each driver circuit. The voltage on each driver is monitored to detect a fault. If the voltage is not what the PCM expects to monitor on the circuit, a DTC is set. This DTC is also set if an injector driver is shorted to voltage or if there is an open circuit.

Conditions for Setting the DTC

- The battery voltage is more than 9 volts.
- Engine speed is more than 700 rpm.
- The engine is turning, determined by the 58X crankshaft position input signal.
- The injector voltage does not equal the ignition voltage when the injector is commanded “OFF” or the injector voltage does not equal 0 volts when the injector is commanded “ON”.
- The above conditions are met for 5 seconds.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn “OFF” the MIL on the third consecutive trip cycle in which the diagnostic has been run and the fault is no longer present.
- A history DTC P0204 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0204 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An injector driver circuit that is open or shorted to voltage will cause a DTC P0204 to set. It will also cause a misfire due to an inoperative injector. A misfire DTC will also be set indicating which cylinder is inoperative.

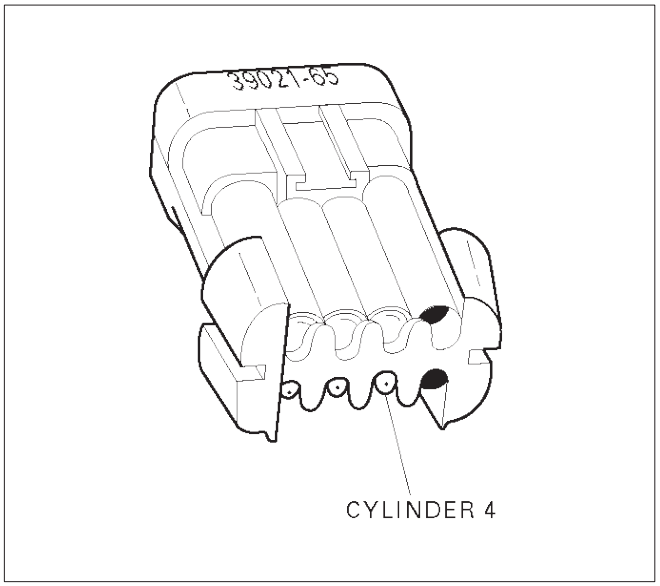
Long term and short term fuel trims that are excessively high or low are a good indication that an injector is faulty. Use Fuel Injector Coil Test Procedure to check for faulty injectors.

Test Description

The number(s) below refer to the step number(s) on the Diagnostic Chart.

3. This step determines if DTC P0204 is the result of a hard failure or an intermittent condition.
5. A special injector test connector is provided so that the injectors can be electrically tested without removal of the manifold. The test connector can be identified by the blue connector lock which is tethered to the wiring harness. If the light for cylinder 4 is "ON" steady before cranking the engine as well as while cranking the engine, then the injector driver circuit is shorted to ground.

   If the test light blinks while cranking, the PCM and the wiring to the injectors are OK. The Fuel Injector Coil Test Procedure will check if the injectors are faulty.



R321057

7. Because the test light was "ON" steady, voltage to the injector is OK, but the driver circuit is grounded at all times. This step determines if the circuit is shorted to ground or the PCM is faulty.
9. The reading should be about 12-14Ω.
10. Locating the open in the harness or in the injector will require removal of the manifold to provide access.


DTC P0204 – Injector 4 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Will the engine start?	—	Go to *Step 3*	Go to *Engine Cranks But Will Not Run* chart
3	1. Install the Tech 2. Clear the DTC. 2. Idle the engine for one minute. Does DTC P0204 reset?	—	Go to *Step 5*	Go to *Step 4*
4	1. Review the Freeze Frame data with the ignition "ON" and the engine "OFF" and note the parameters. 2. Operate the vehicle within the Freeze Frame conditions as noted. Does P0204 reset?	—	Go to *Step 5*	Check the Procedure Go to *Diagnostic Aids*
5	1. Engine "OFF". 2. Disconnect the injector test connector. 3. Install an injector test light J-39021-65 on injector connector. 4. Crank the engine and note the light. Does the cylinder 4 test light blink?	—	Go to *Fuel Injector Coil Test Procedure*	Go to Step 6

DTC P0204 – Injector 4 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
6	Note whether the injector test light for cylinder 4 was "OFF" or "ON" steady in step 5. Was the test light "ON" steady while cranking the engine?	—	Go to *Step 7*	Go to *Step 9*
7	1. Disconnect the PCM connector for the affected injectors. 2. With a test light connected to B+, probe the affected injector driver circuit. Does the test light illuminate?	—	Go to *Step 8*	Go to *Step 15*
8	Repair short to ground in the injector driver circuit. Is the action complete?	—	Go to *OBD System Check*	—
9	1. Disconnect the injector test connector. 2. At the injector side of the harness, connect an ohmmeter between the positive wire (red with blue tracer) and the wire for cylinder 4 (green/red). Does the ohmmeter indicate continuity?	—	Go to *Step 11*	Go to *Step 10*
10	Repair the open injector harness wire or open injector. Is the action complete?	—	Verify repair	—
11	At the PCM side of the injector test connector, check the green/red wire for a short to voltage. Was there a short to voltage?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the short to voltage. Is the action complete?	—	Verify repair	—
13	Check for an open circuit between the injector test connector and the PCM. Was there an open circuit?	—	Go to *Step 14*	Go to *Step 15*
14	Repair the open circuit. Is the action complete?	—	Verify repair	—
15	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

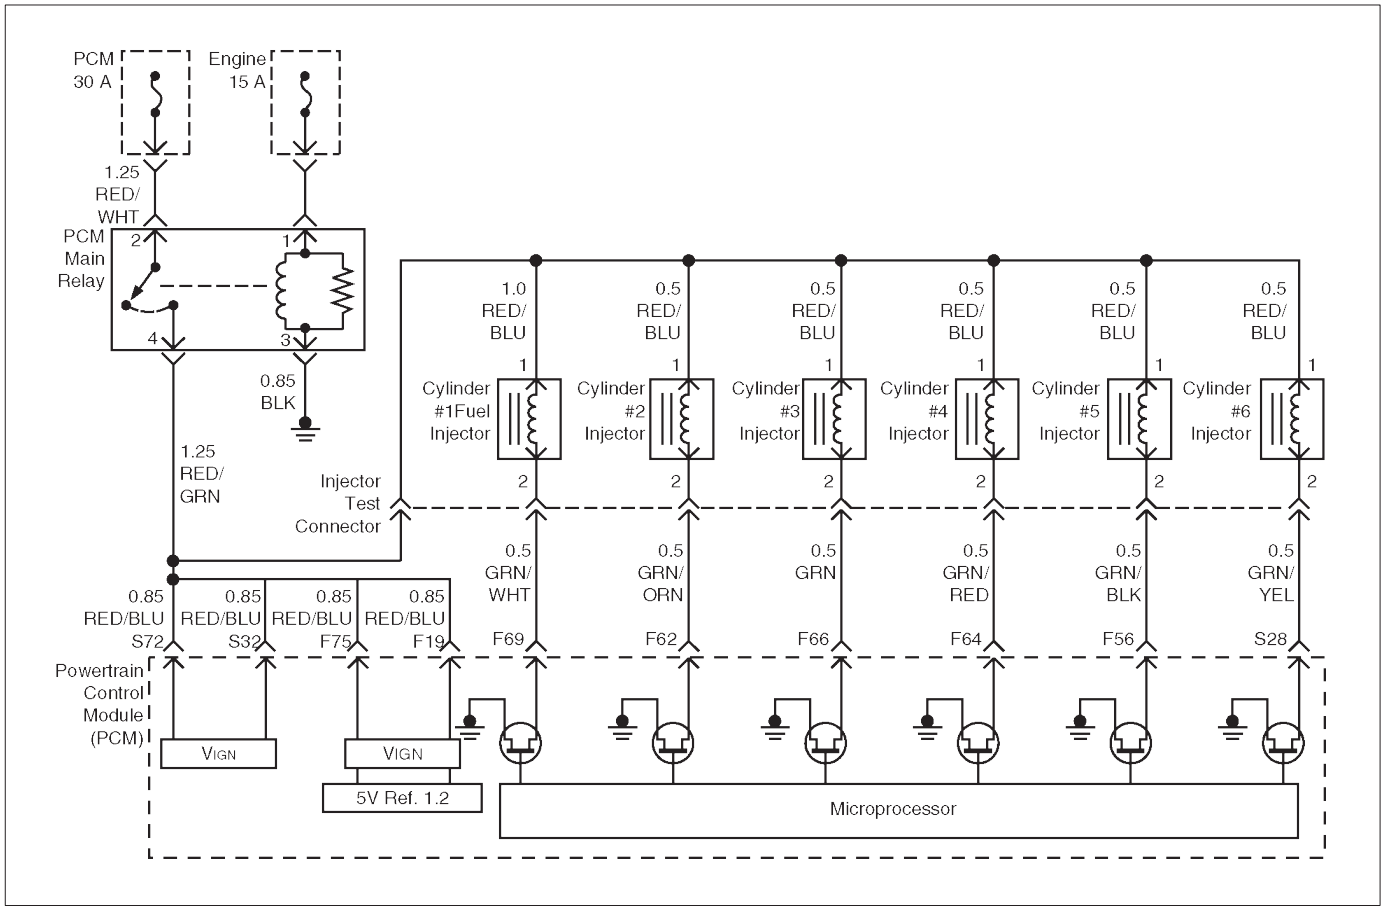Diagnostic Trouble Code (DTC) P0205 Injector 5 Control Circuit



D06R200014

Circuit Description

The powertrain control module (PCM) has six individual injector driver circuits. Each controls an injector. When the driver circuit is grounded by the PCM, the injector is activated. The PCM monitors the current in each driver circuit. If the voltage is not what the PCM expects to monitor on the circuit, a DTC is set. This DTC is also set if an injector driver is shorted to voltage or if there is an open circuit.

Conditions for Setting the DTC

- The battery voltage is more than 9 volts.
- Engine speed is more than 700 rpm.
- The engine is turning, determined by the 58X crankshaft position input signal.
- The injector voltage does not equal the ignition voltage when the injector is commanded “OFF” or the injector voltage does not equal 0 volts when the injector is commanded “ON”.
- The above conditions are met for 5 seconds.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn “OFF” the MIL on the third consecutive trip cycle in which the diagnostic has been run and the fault is no longer present.
- A history DTC P0205 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0205 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An injector driver circuit that is open or shorted to voltage will cause a DTC P0205 to set. It will also cause a misfire due to an inoperative injector. A misfire DTC will also be set indicating which cylinder is inoperative.

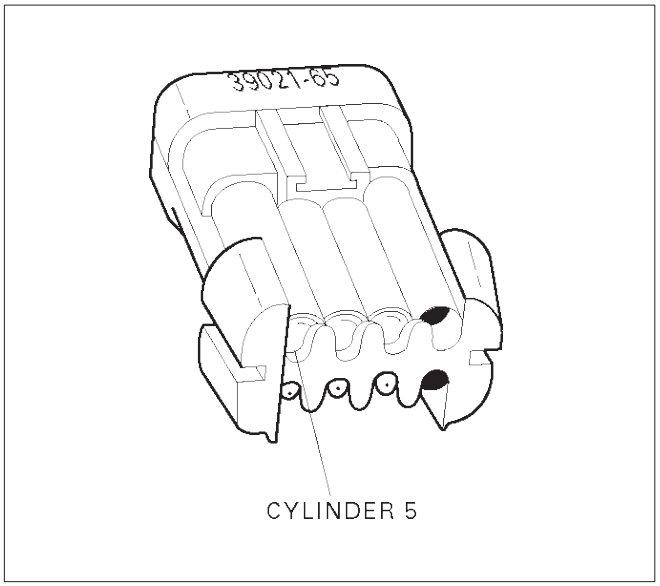
Long term and short term fuel trims that are excessively high or low are a good indication that an injector is faulty. Use Fuel Injector Coil Test Procedure to check for faulty injectors.

Test Description

The number(s) below refer to the step number(s) on the Diagnostic Chart.

3. This step determines if DTC P0205 is the result of a hard failure or an intermittent condition.
5. A special injector test connector is provided so that the injectors can be electrically tested without removal of the manifold.The test connector can be identified by the blue connector lock which is tethered to the wiring harness. If the light for cylinder 5 is “ON” steady before cranking the engine as well as while cranking the engine, then the injector driver circuit is shorted to ground.

   If the test light blinks while cranking, the PCM and the wiring to the injectors are OK. The Fuel Injector Coil Test Procedure will check if the injectors are faulty.



R321058

7. Because the test light was “ON” steady, voltage to the injector is OK, but the driver circuit is grounded at all times. This step determines if the circuit is shorted to ground or the PCM is faulty.
9. The reading should be about 12-14Ω.
10. Locating the open in the harness or in the injector will require removal of the manifold to provide access.


DTC P0205 – Injector 5 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Will the engine start?	—	Go to *Step 3*	Go to *Engine Cranks But Will Not Run* chart
3	1. Install the Tech 2. Clear the DTC. 2. Idle the engine for one minute. Does DTC P0205 reset?	—	Go to *Step 5*	Go to *Step 4*
4	1. Review the Freeze Frame data with the ignition “ON” and the engine “OFF” and note the parameters. 2. Operate the vehicle within the Freeze Frame conditions as noted. Does P0205 reset?	—	Go to *Step 5*	Check the Procedure Go to *Diagnostic Aids*
5	1. Engine “OFF”. 2. Disconnect the injector test connector. 3. Install an injector test light J-39021-65 on injector connector. 4. Crank the engine and note the light. Does the cylinder 5 test light blink?	—	Go to *Fuel Injector Coil Test Procedure*	Go to *Step 6*

DTC P0205 – Injector 5 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
6	Note whether the injector test light for cylinder 5 was "OFF" or "ON" steady in step 5. Was the test light "ON" steady while cranking the engine?	—	Go to *Step 7*	Go to *Step 9*
7	1. Disconnect the PCM connector for the affected injectors. 2. With a test light connected to B+, probe the affected injector driver circuit. Does the test light illuminate?	—	Go to *Step 8*	Go to *Step 15*
8	Repair short to ground in the injector driver circuit. Is the action complete?	—	Go to *OBD System Check*	—
9	1. Disconnect the injector test connector. 2. At the injector side of the harness, connect an ohmmeter between the positive wire (red with blue tracer) and the wire for cylinder 5 (green with black tracer). Does the ohmmeter indicate continuity?	—	Go to *Step 11*	Go to *Step 10*
10	Repair the open injector harness wire or open injector. Is the action complete?	—	Verify repair	—
11	At the PCM side of the injector test connector, check the green/black wire for a short to voltage. Was there a short to voltage?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the short to voltage. Is the action complete?	—	Verify repair	—
13	Check for an open circuit between the injector test connector and the PCM. Was there an open circuit?	—	Go to *Step 14*	Go to *Step 15*
14	Repair the open circuit. Is the action complete?	—	Verify repair	—
15	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

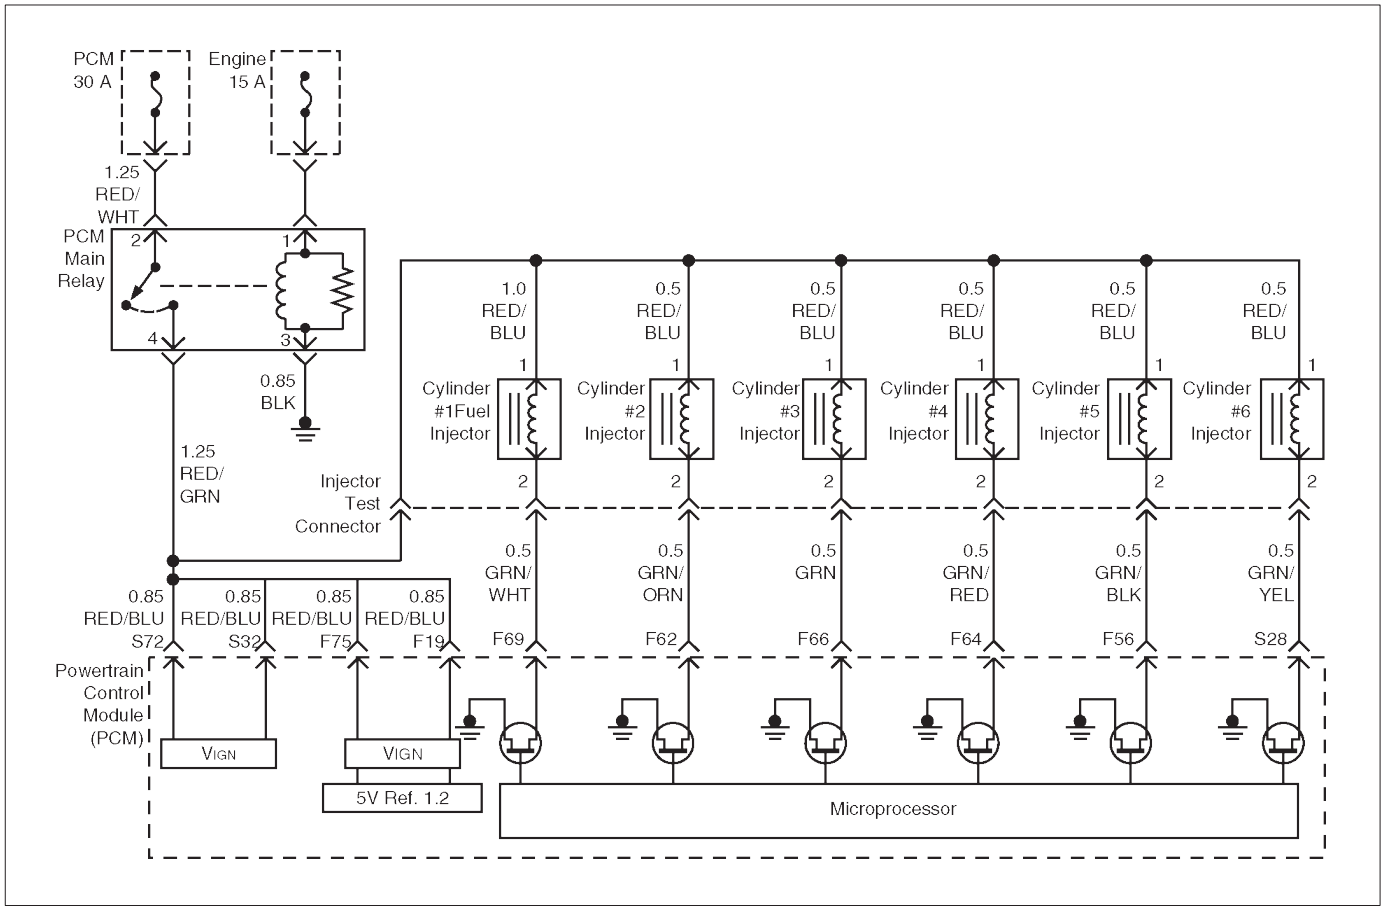Diagnostic Trouble Code (DTC) P0206 Injector 6 Control Circuit



D06R200014

Circuit Description

The powertrain control module (PCM) has six individual injector driver circuits. Each controls an injector. When the driver circuit is grounded by the PCM, the injector is activated. The PCM monitors the current in each driver circuit. The voltage on each driver is monitored to detect a fault. If the voltage is not what the PCM expects to monitor on the circuit, a DTC is set. This DTC is also set if an injector driver is shorted to voltage or if there is an open circuit.

Conditions for Setting the DTC

- The battery voltage is more than 9 volts.
- Engine speed is more than 700 rpm.
- The engine is turning, determined by 58X crankshaft position input signal.
- The injector voltage does not equal the ignition voltage when the injector is commanded “OFF” or the injector voltage does not equal 0 volts when the injector is commanded “ON”.
- The above conditions are met for 5 seconds.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn “OFF” the MIL on the third consecutive trip cycle in which the diagnostic has been run and the fault is no longer present.
- A history DTC P0206 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0206 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An injector driver circuit that is open or shorted to voltage will cause a DTC P0206 to set. It will also cause a misfire due to an inoperative injector. A misfire DTC will also be set indicating which cylinder is inoperative.

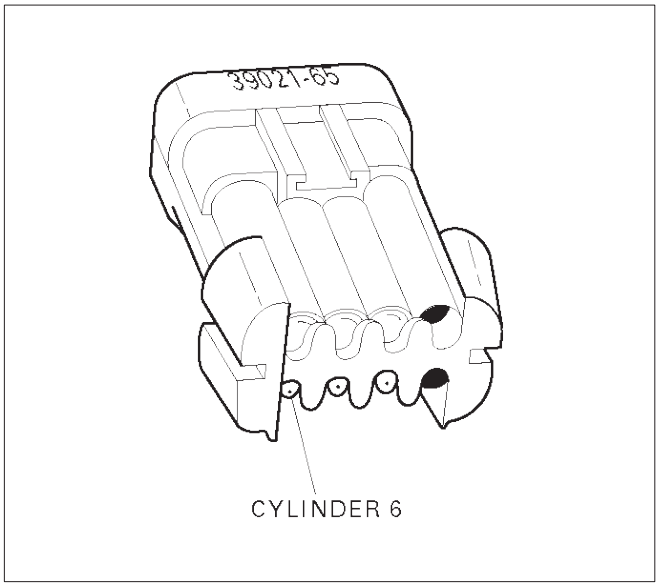
Long term and short term fuel trims that are excessively high or low are a good indication that an injector is faulty. Use Fuel Injector Coil Test Procedure to check for faulty injectors.

Test Description

The number(s) below refer to the step number(s) on the Diagnostic Chart.

3. This step determines if DTC P0206 is the result of a hard failure or an intermittent condition.
5. A special injector test connector is provided so that the injectors can be electrically tested without removal of the manifold.The test connector can be identified by the blue connector lock which is tethered to the wiring harness. If the light for cylinder 6 is “ON” steady before cranking the engine as well as while cranking the engine, then the injector driver circuit is shorted to ground.

   If the test light blinks while cranking, the PCM and the wiring to the injectors are OK. The Fuel Injector Coil Test Procedure will check if the injectors are faulty.



R321059

7. Because the test light was “ON” steady, voltage to the injector is OK, but the driver circuit is grounded at all times. This step determines if the circuit is shorted to ground or the PCM is faulty.
9. The reading should be about 12-14Ω.
10. Locating the open in the harness or in the injector will require removal of the manifold to provide access.

DTC P0206 – Injector 6 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Will the engine start?	—	Go to *Step 3*	Go to *Engine Cranks But Will Not Run* chart
3	1. Install the Tech 2. Clear the DTC. 2. Idle the engine for one minute. Does DTC P0206 reset?	—	Go to *Step 5*	Go to *Step 4*
4	1. Review the Freeze Frame data with the ignition “ON” and the engine “OFF” and note the parameters. 2. Operate the vehicle within the Freeze Frame conditions as noted. Does P0206 reset?	—	Go to *Step 5*	Check the Procedure Go to *Diagnostic Aids*
5	1. Engine “OFF”. 2. Disconnect the injector test connector. 3. Install an injector test light J-39021-65 on injector connector. 4. Crank the engine and note the light. Does the cylinder 6 test light blink?	—	Go to *Fuel Injector Coil Test Procedure*	Go to *Step 6*

DTC P0206 – Injector 6 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
6	Note whether the injector test light for cylinder 6 was "OFF" or "ON" steady in step 5. Was the test light "ON" steady while cranking the engine?	—	Go to *Step 7*	Go to *Step 9*
7	1. Disconnect the PCM connector for the affected injectors. 2. With a test light connected to B+, probe the affected injector driver circuit. Does the test light illuminate?	—	Go to *Step 8*	Go to *Step 15*
8	Repair short to ground in the injector driver circuit. Is the action complete?	—	Go to *OBD System Check*	—
9	1. Disconnect the injector test connector. 2. At the injector side of the harness, connect an ohmmeter between the positive wire (red with blue tracer) and the wire for cylinder 6 (green with yellow tracer). Does the ohmmeter indicate continuity?	—	Go to *Step 11*	Go to *Step 10*
10	Repair the open injector harness wire or open injector Is the action complete?	—	Verify repair	—
11	At the PCM side of the injector test connector, check the green/yellow wire for a short to voltage. Was there a short to voltage?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the short to voltage. Is the action complete?	—	Verify repair	—
13	Check for an open circuit between the injector test connector and the PCM. Was there an open circuit?	—	Go to *Step 14*	Go to *Step 15*
14	Repair the open circuit. Is the action complete?	—	Verify repair	—
15	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to the latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

Diagnostic Trouble Code (DTC) P0300 Engine Misfire Detected

Circuit Description

Misfire is monitored as a function of the combustion quality (CQ) signals generated from the ION Sensing Module. Combustion signals represent the degree of combustion in each cylinder. Misfire is detected when the combustion signal is below a predetermined value.

This DTC P0300 will determine if a multiple cylinder misfire is occurring by monitoring the Combustion Quality.

Conditions for Setting the DTC

- None of the following DTCs occur: TP sensor, MAF sensor, VSS, ECT sensor.
- The engine speed is between 600 and 6250 RPM.
- The system voltage is between 11 and 16 volts.
- The engine temperature sensor (ECT) indicates an engine temperature between –7°C (20°F) and 110°C (230°F).
- Throttle angle is steady and throttle changes less than 2% per 125 milliseconds.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- If the misfire is severe enough to cause possible catalyst damage, the PCM will flash the MIL for as long as the misfire remains at catalyst damaging levels.
- The PCM will disable the TCC operation.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle in which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0300 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0300 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

The Tech 2 display “Misfire Cur. #1 through #6” can be useful to determine whether the misfire is isolated to a single cylinder.

- Damaged or faulty ignition coil – Check for cracks or other damage.
- Substitute a known good coil – Swap the ignition coils and retest. If the misfire follows the coil, replace the ignition coil.

If the misfire is random, check for the following conditions:

- System grounds – Ensure all connections are clean and properly tightened.
- MAF – A mass air flow (MAF) sensor output that causes the PCM to sense a lower than normal air flow will cause a lean condition.
- Air induction system – Air leaks into the induction system which bypass the MAF sensor will cause a lean condition. Check for disconnected or damaged vacuum hoses, incorrectly installed or faulty PCV valve, or for vacuum leaks at the throttle body, EGR valve, and intake manifold mounting surfaces.
- Fuel pressure – Perform a fuel system pressure test. A faulty fuel pump, plugged filter, or faulty fuel system pressure regulator will contribute to a lean condition.
- Injector(s) – Perform an injector coil/balance test to locate faulty injector(s) contributing to a lean or flooding condition. In addition to the above test, check the condition of the injector O-rings.
- EGR – Check for a leaking valve, adapter, or feed pipes which will contribute to a lean condition or excessive EGR flow.
- Fuel quality – Using fuel with the wrong octane rating for the vehicle may cause driveability problems. Although alcohol-enhanced fuels may raise the octane rating, the fuel’s ability to turn into vapor in cold temperatures deteriorates. This may affect the cold driveability of the engine. The Reid Vapor Pressure of the fuel can also create problems in the fuel system, especially during the spring and fall when changes by the refineries may not coincide with changes in the weather.
- Vehicle marshalling – The transportation of new vehicles from the assembly plant to the dealership can involve as many as 60 key cycles within 2 to 3 miles of driving. This type of operation contributes to the fuel fouling of the spark plugs and will turn on the MIL with a P0300 Misfire DTC.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

DTC P0300 – Engine Misfire Detected

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Start the engine. Run the engine at idle. 2. Review and record the Tech 2 Freeze Frame data. 3. Operate the vehicle to duplicate the conditions present when the DTC was set (as defined by the Freeze Frame data). 4. Monitor the Tech 2 "Misfire Cur. #" display for each cylinder. Is "Misfire Cur. #" display increasing for any cylinder (indicating a misfire currently occurring)?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Visually and physically inspect the vacuum hoses for splits, kinks, and improper connections. 2. If a problem is found, repair or replace the vacuum hoses as necessary. Did your inspection reveal a problem?	—	Verify repair	Go to *Step 4*
4	1. Visually and physically inspect the following areas for vacuum leaks: • The intake manifold • The injector O-rings • The EGR adapter • The EGR feed pipes • ION Sensing Module 2. If a problem is found, repair the vacuum leak as necessary. Did your inspection reveal a vacuum leak?	—	Verify repair	Go to *Step 5*
5	1. Visually and physically inspect the crankcase ventilation valve for improper installation or damaged grommet. 2. If a problem is found, repair as necessary (refer to *Crankcase Ventilation System*). Did your inspection reveal a problem?	—	Verify repair	Go to *Step 6*
6	1. Inspect the MAF sensor inlet screen for damage or for the presence of foreign objects that may partially block the air flow sample through the MAF sensor. 2. If a problem is found, repair or replace the MAF sensor as necessary. Did your inspection of the MAF sensor reveal a condition requiring repair or replacement?	—	Verify repair	Go to *Step 7*
7	1. Remove the EGR valve and visually/physically inspect the valve to ensure that the pintle is not sticking partially open. Also, inspect the EGR valve pintle and seat for carbon deposits or burrs that may interfere with the pintle closing completely. 2. If a problem is found, clean the EGR valve pintle and seat or replace the EGR valve as necessary. Did your inspection reveal a problem?	—	Verify repair	Go to *Step 8*


DTC P0300 – Engine Misfire Detected (Cont'd)

Step	Action	Value(s)	Yes	No
8	1. Install a spark tester at the spark plug end of the ignition coil for a cylinder that indicated a misfire. 2. Crank the engine while observing the spark tester. A crisp, blue spark should be observed. Is adequate spark present?	—	Go to *Step 14*	Go to *Step 9*
9	1. Remove and visually/physically inspect the ignition coil(s) associated with the cylinders that were indicated as misfiring. Ensure that the coil(s) are free of cracks. 2. If a problem is found, replace the damaged ignition coil(s) as necessary. Did any ignition coils require replacement?	—	Verify repair	Go to *Step 10*
10	1. Remove the spark plugs from the cylinders that were indicated as misfiring. 2. Visually inspect the spark plug electrodes. Does your inspection reveal any spark plugs exhibiting excessive fouling?	—	Go to *Engine Mechanical Diagnosis*	Go to *Step 11*
11	1. Visually inspect the spark plug insulators for cracks, carbon tracking, or other damage. 2. If a problem is found, replace the faulty spark plug(s) as necessary. Did your inspection reveal a problem?	—	Verify repair	Go to *Step 12*
12	1. Disconnect the MAF sensor electrical connector. 2. Operate the vehicle in "closed loop" while monitoring the "BANK 1 L.T. FUEL TRIM" and "BANK 1 S.T. FUEL TRIM" display on the Tech 2. Do both values decrease below the specified values?	"BANK 1 L.T. FUEL TRIM" below +20%; "BANK 1 S.T. FUEL TRIM" below +50%	Go to *Step 13*	Replace the ignition coil of the affected cylinder
13	Replace the ignition coil control module. Is the action complete?	—	Verify repair	—
14	1. Visually and physically inspect the PCM injector grounds, power grounds and sensor grounds to ensure that they are clean, tight and in their proper locations. 2. If a problem is found, correct the faulty ground condition as necessary. Did your inspection reveal a poor ground?	—	Verify repair	Go to *Step 15*
15	1. Perform the "Fuel System Pressure Test" procedure. 2. If a problem is found, repair as necessary (refer to *Engine Fuel or Fuel Metering System*). Was a fuel system problem found?	—	Verify repair	Go to *Step 16*
16	1. Check the fuel for excessive water, alcohol, or other contaminants (refer to *Diagnosis* in *Engine Fuel* for procedure). 2. If a problem is found, correct the contaminated fuel condition as necessary. Was the fuel contaminated?	—	Verify repair	Go to *Step 17*

DTC P0300 – Engine Misfire Detected (Cont'd)

Step	Action	Value(s)	Yes	No
17	1. Perform the "Injector Coil/Balance Test". 2. If a problem is found, replace faulty injector(s) as necessary. Did any of the injectors require replacement?	—	Verify repair	Go to *Step 18*
18	1. Check for an engine mechanical problem. Refer to *Engine Mechanical Diagnosis* to diagnose the following conditions: ● A faulty or incorrect camshaft ● Leaking or sticky valves or rings ● Excessive valve deposits ● Weak valve springs ● Incorrect valve timing ● A leaking head gasket ● A loose or broken motor mount 2. If a problem is found, repair as necessary. Was a basic engine mechanical problem found and repaired?	—	Verify repair	Go to *Step 19*
19	1. Check for a transmission TCC problem. Refer to *4L30-E Automatic Transmission Diagnosis*. 2. If a problem is found, repair the transmission as necessary. Refer to *4L30-E Automatic Transmission Unit Repair*. Was a transmission problem found and repaired?	—	Verify repair	Go to *Step 20*
20	Replace the MAF sensor. Is the action complete?	—	Verify repair	—

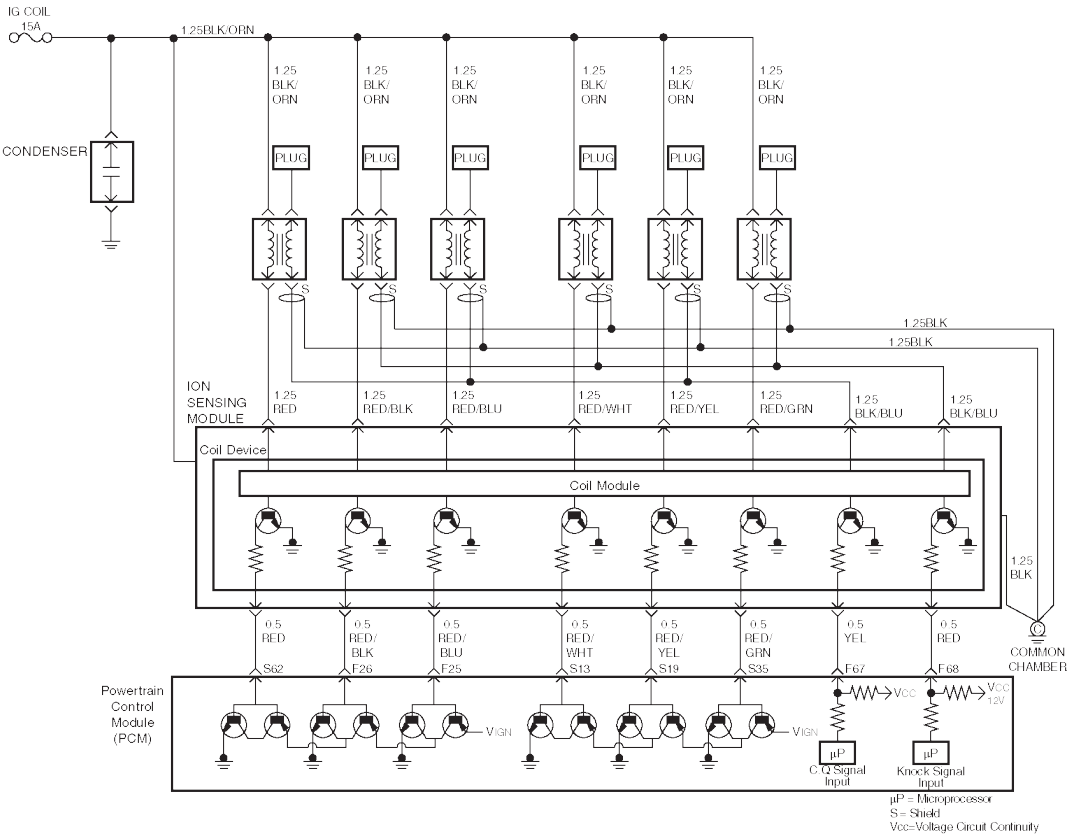Diagnostic Trouble Code (DTC)
P0325 ION Sensing Module/ION Sensing Knock Intensity Circuit Fault



D06R200098

Circuit Description

The Power Control Module (PCM) checks the validity of the signals used in the ION Sensing module at the following engine operating conditions.

- The test is performed to evacuate the Knock Intensity (KI) signal pulse width if it is within a predetermined range. If the KI signal pulse width is out of the predetermined range, the fail counter will be incremented. If the failure counter exceeds the calibration, then test is complete and a failure will be reported. If the sample counter threshold is reached before the failure threshold, then the test is complete and a pass will be reported. This test will detect an open/short in the KI line circuit, ION module faults and analog input faults in the PCM.

Conditions for setting the DTC

- Ignition voltage is between 10volt and 16 volts.
- No Crank DTCs set.
- No EST DTCs set.
- No Misfire DTCs set.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0325 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P0325 can be cleared using the Tech2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM- Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage.

If the harness appears to be OK, observe the Knock Present, Knock Sensor Noise Channel display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

A change in the display will indicate the location of the fault.

If DTC P0325 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P0325 Diagnostic Chart may isolate the cause of the fault.


DTC P0325 - ION Sensing Module Knock Intensity Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor “DTC” info for DTC P0325. Does the Tech 2 indicate DTC P0325 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Ignition “OFF”. 2. Disconnect the ION sensing module. 3. Disconnect the PCM. Is the action complete?	—	Go to *Step 4*	—
4	Check the ION sensing harness between the PCM (F68) and ION sensing module circuit (RED Wire) at the KI line harness connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Disconnect the ignition coil. Is the action complete?	—	Go to *Step 6*	—
6	Check the ION sensing harness for open or short circuit between the ignition coil and ION sensing module circuit at the harness connector. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Check the following items; 1. Ignition coil and ignition coil circuit. 2. Ignition coil ground circuit for a poor connection. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	Replace the Ignition coil. Is the action complete?	—	Verify repair	Go to *Step 9*
9	Check the following items; 1. ION sensing module ground circuit for a poor connection. 2. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Go to *Step 10*	Go to *Step 11*
10	Repair wiring harness. Is the action complete?	—	Verify repair	Go to *Step 11*

DTC P0325 - ION Sensing Module Knock Intensity Circuit Fault (Cont'd)

Step	Action	Value(s)	Yes	No
11	Replace the ION Sensing module. Is the action complete?	—	Verify repair	Go to *Step 12*
12	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not .And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

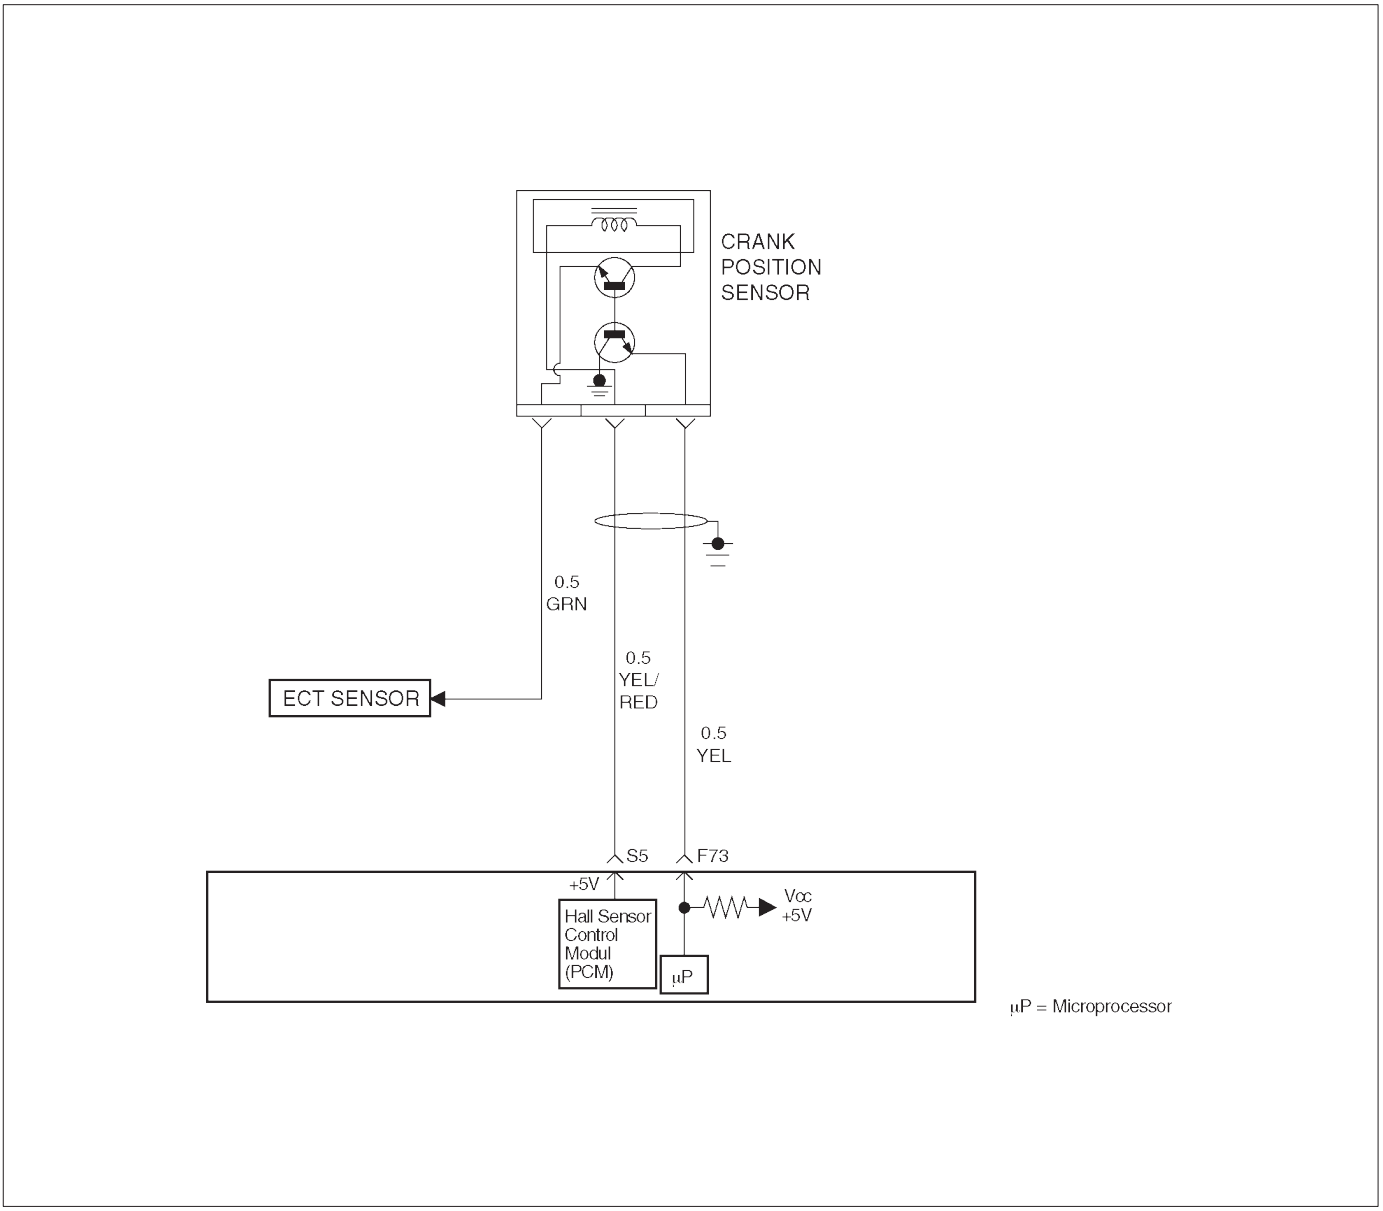Diagnostic Trouble Code (DTC) P0336 58X Reference Signal Circuit



D06R200044

Circuit Description

The 58X reference signal is produced by the crankshaft position (CKP) sensor. During one crankshaft revolution, 58 crankshaft pulses will be produced. The powertrain control module (PCM) uses the 58X reference signal to calculate engine RPM and crankshaft position. The PCM constantly monitors the number of pulses on the 58X reference circuit. If the PCM receives an incorrect number of pulses on the 58X reference circuit, DTC P0336 will set.

Conditions for Setting the DTC

- Engine is running.
- Extra or missing pulse is detected between consecutive 58X reference pulses.
- Above condition is detected in 10 of 100 crankshaft rotations.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0336 will clear after 40 consecutive warm–up cycles have occurred without a fault.
- DTC P0336 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by a poor connection, rubbed-through wire insulation or a wire broken inside the insulation. Check for:


- Poor connection - Inspect the PCM harness and connectors for improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, disconnect the PCM, turn the ignition on and observe a voltmeter connected to the 58X reference circuit at the PCM harness connector while moving connectors and wiring harnesses related to the PCM. A change in voltage will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

DTC P0336 – 58X Reference Signal Circuit

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Attempt to start the engine. Does the engine start?	—	Go to *Step 3*	Go to *"Engine Cranks But Will Not Run"* chart
3	1. Review and record Failure Records information. 2. Clear DTC P0336. 3. Start the engine and idle for 1 minute. 4. Observe DTCs. Is DTC P0336 set?	—	Go to *Step 4*	Check the Procedure Refer to **Diagnostic Aids**
4	1. Disconnect the PCM and CKP sensor. 2. Check for an open or a short to ground in the 58X reference circuit between the CKP sensor connector and the PCM harness connector. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Reconnect the PCM and CKP sensor. 2. Connect a DVM to measure voltage on the 58X reference circuit at the PCM connector. 3. Observe the voltage while cranking the engine. Is the voltage near the specified value?	2.5 V	Go to *Step 8*	Go to *Step 6*
6	Check the connections at the CKP sensor and replace the terminals if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 7*
7	Replace the CKP sensor. Use caution to avoid any hot oil that may drip out. Is the action complete?	—	Verify repair	—
8	Check connections at the PCM and replace the terminals if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

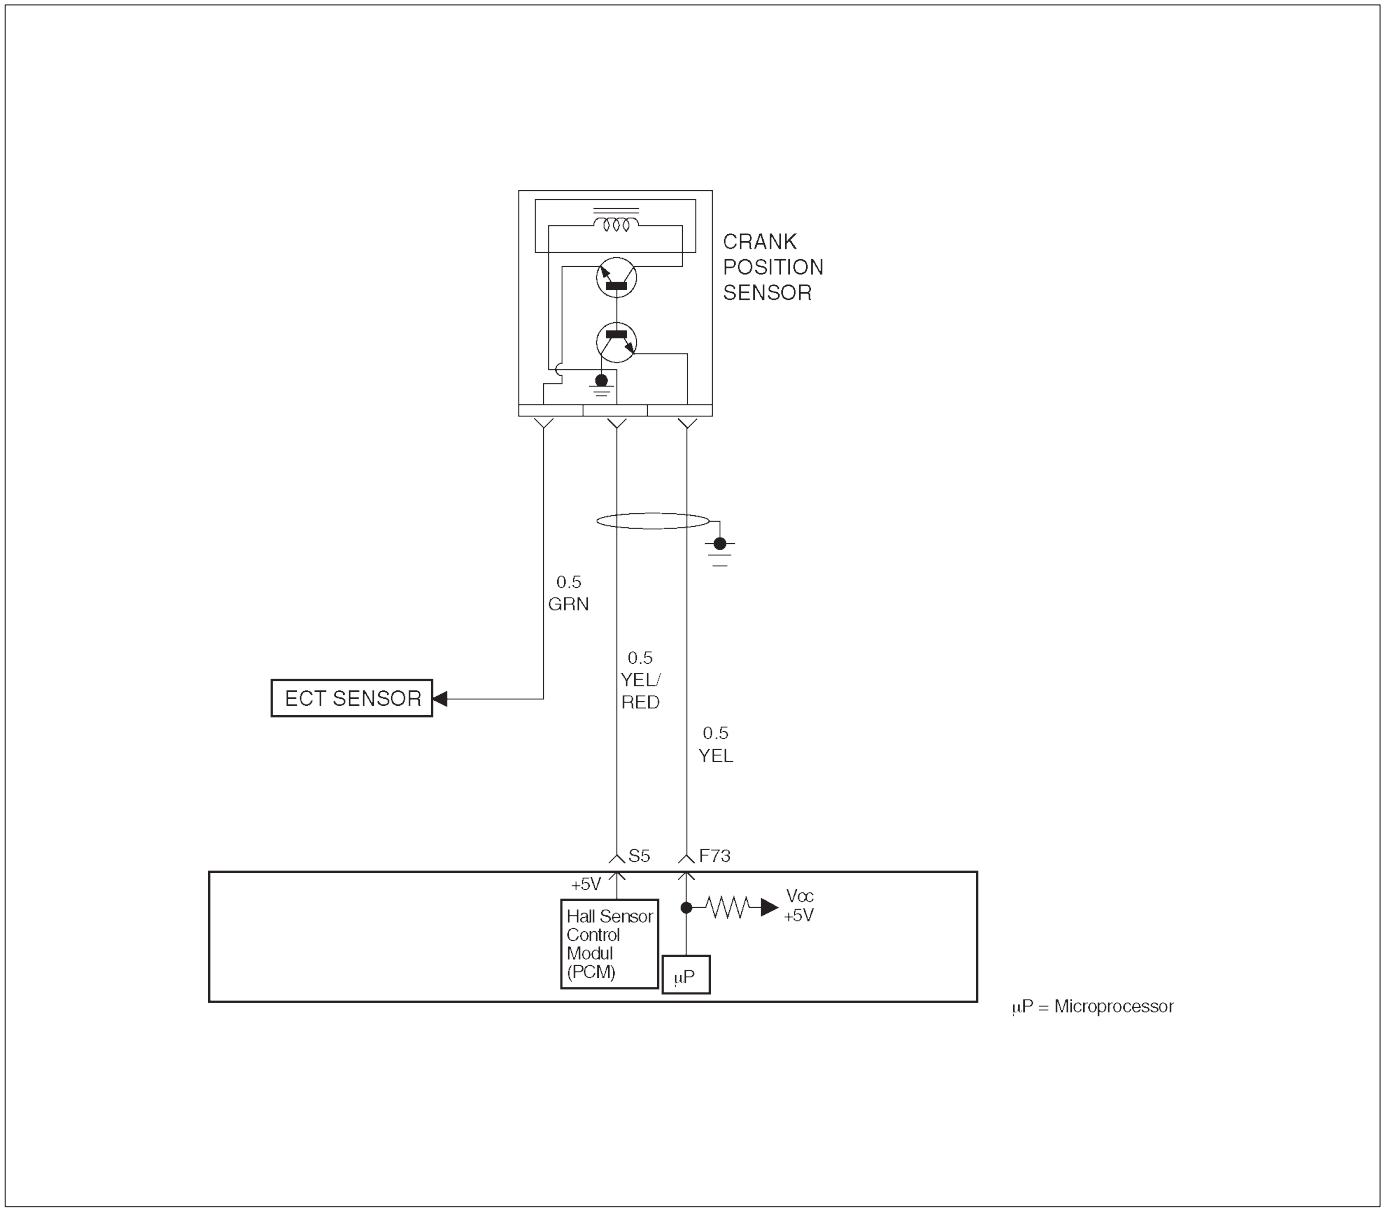Diagnostic Trouble Code (DTC)
P0337 CKP Sensor Circuit Low Frequency



D06R200044

Circuit Description

The 58X reference signal is produced by the crankshaft position (CKP) sensor. During one crankshaft revolution, 58 crankshaft reference pulses will be produced. The powertrain control module (PCM) uses the 58X reference signal to calculate engine RPM and crankshaft position. The PCM constantly monitors the number of pulses on the 58X reference circuit. If the PCM does not receive pulses on the 58X reference circuit, DTC P0337 will set.

Conditions for Setting the DTC

- Engine cranking.
- Crankshaft position (CKP) sensor signal is not present between two cam pulses.
- CKP reference pulse is not detected within 8 CMP pulses.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0337 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0337 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by a poor connection, rubbed-through wire insulation or a wire broken inside the insulation. Check for:

- Poor connection – Inspect the PCM harness and connectors for improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, disconnect the PCM, turn the ignition on and observe a voltmeter connected to the 58X reference circuit at the PCM harness connector while moving connectors and wiring harnesses related to the PCM. A change in voltage will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0337 – CKP Sensor Circuit Low Frequency

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Attempt to start the engine. Does the engine start?	—	Go to *Step 3*	Go to *Chart 3*
3	1. Review and record Failure Records information. 2. Clear DTC P0337. 3. Start the engine and idle for 1 minute. 4. Observe DTCs. Is DTC P0337 set?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aid*
4	1. Disconnect the CKP sensor. 2. Ignition "ON". 3. Using a DVM, verify that 5 V reference and ground are being supplied at the sensor connector (PCM side). Are 4-6 volts and ground available at the sensor?	—	Go to *Step 7*	Go to *Step 5*
5	1. Ignition "ON". 2. With a DVM, backprobe the PCM connector 5 V reference and ground connections. Are 5 V reference and ground available at the PCM?	—	Go to *Step 6*	Go to *Step 11*
6	Check 5 V reference or ground between the CKP sensor and PCM and repair the open circuit, short to ground or short to voltage. Is the action complete?	—	Verify repair	—
7	1. Ignition "OFF". 2. Disconnect the PCM and CKP sensor. 3. Check for an open or a short to ground in the 58X reference circuit between the CKP sensor connector and the PCM harness connector. 4. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Reconnect the PCM and CKP sensor. 2. Connect a DVM to measure voltage on the 58X reference circuit at the PCM connector. 3. Observe the voltage while cranking the engine. Is the voltage near the specified value?	2.5 V	Go to *Step 11*	Go to *Step 9*
9	Check the connections at the CKP sensor and replace the terminals if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 10*

DTC P0337 – CKP Sensor Circuit Low Frequency (Cont'd)

Step	Action	Value(s)	Yes	No
10	Replace the CKP sensor. Use caution and avoid hot oil that may drip out. Is the action complete?	—	Verify repair	—
11	Check the connections at the PCM and replace the terminals if necessary. Did any terminals require replacement?	—	Verify repair	Go to *Step 12*
12	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

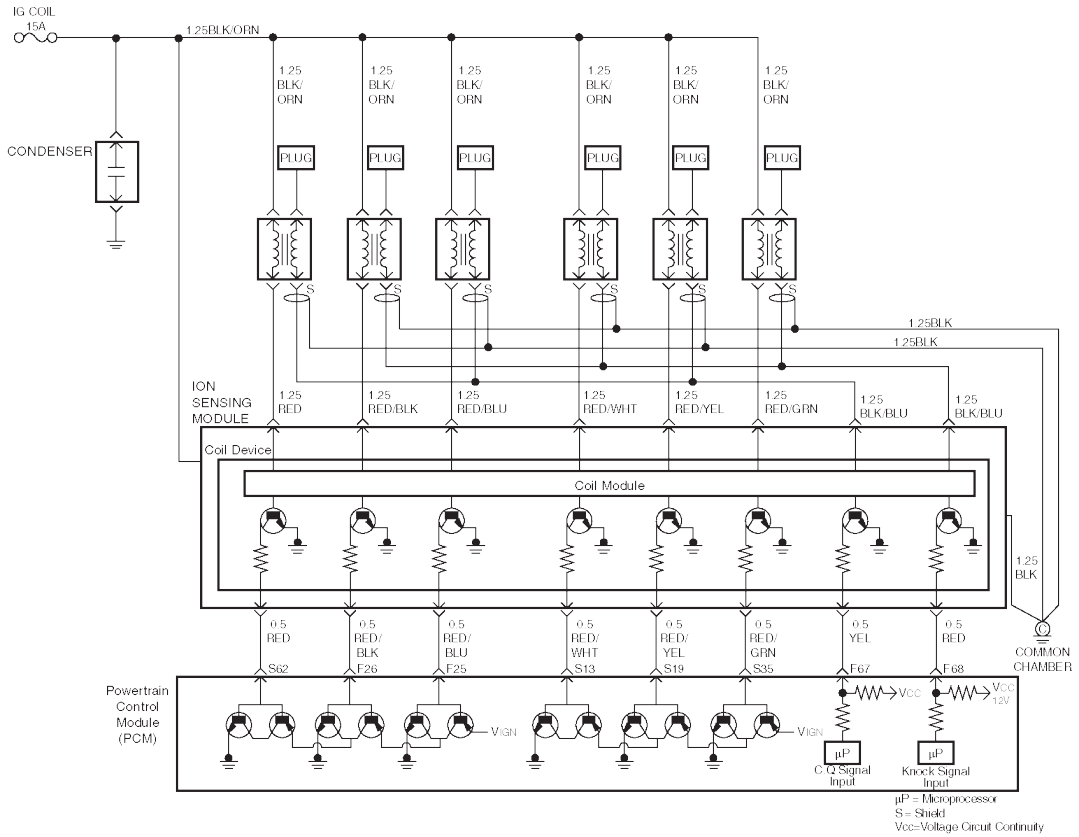Diagnostic Trouble Code (DTC) P0351 Ignition 1 Control Circuit



D06R200098

Circuit Description

ION Sensing Module has the function to energize and de-energize the primary ignition coil in response to signals from the PCM. The PCM controls ignition timing and dwell time.

This diagnosis detects open circuit or short-circuiting in the Ignition Electronic Spark Timing (EST) line by monitoring EST signals. A failure determination is made when the signal voltage remains higher or lower than the threshold for corresponding fault code beyond a predetermined time period.

When the PCM detects a problem on EST control circuit 1, it will set a DTC P0351.

Conditions for Setting the DTC

- The ignition is “ON”.
- The engine is running, determined by the 58X crankshaft position input signal.
- The output voltage is not equal to 5 volts when output is “ON”.
- The output voltage is not equal to 0 volts when output is “OFF”.
- Ten test failures occur within 10 samples of continuous spark events.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle in which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0351 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0351 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect the harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connections.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Tech 2 display related to DTC P0351 while moving the connector and wiring related to the ignition system. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0351 – Ignition 1 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Record conditions as noted. 4. Use a Tech 2 to monitor the “DTC” information for DTC P0351 until the DTC P0351 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0351 failed this ignition cycle?	—	Go to *Step 3*	Check the Procedure Go to *Diagnostic Aids*
3	Check for faulty connection at ignition coil. Was a problem found?	—	Verify repair	Go to *Step 4*
4	Check for faulty connection at PCM connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Ignition “ON”, engine “OFF”. 2. Back probe the ignition control circuit 1 at the ION Sensing Module with a DVM. Is the voltage near the specified value?	25-55 mV	Go to *Step 6*	Go to *Step 9*
6	1. Ignition “ON”, engine running. 2. Back probe the ignition control circuit at the ION Sensing Module for the cylinder being tested. Is the voltage in the specified range, rapidly toggling back and forth to a reading 20-50 mV higher?	100-180 mV	Go to *Step 7*	Go to *Step 13*
7	1. Ignition “OFF”. 2. Disconnect the 3-pin and connector at the ignition coil. 3. Check ignition control circuit 1 voltage at the ignition coil connector while cranking the engine. Does the voltage measure between the specified values?	200-1200 mV	Go to *Step 8*	Go to *Step 11*
8	Replace the ignition coil. Is the action complete?	—	Verify repair	—
9	1. Ignition “OFF”. 2. Disconnect the PCM and the ignition coil. 3. Check ignition control circuit 1 for short to ground. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Check ignition control circuit 1 for short to voltage. Was a problem found?	—	Verify repair	Go to *Step 13*

DTC P0351 – Ignition 1 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
11	Check for an open ignition control circuit 1. Was the ignition control circuit open?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the open ignition control circuit. Is the action complete?	—	Verify repair	—
13	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

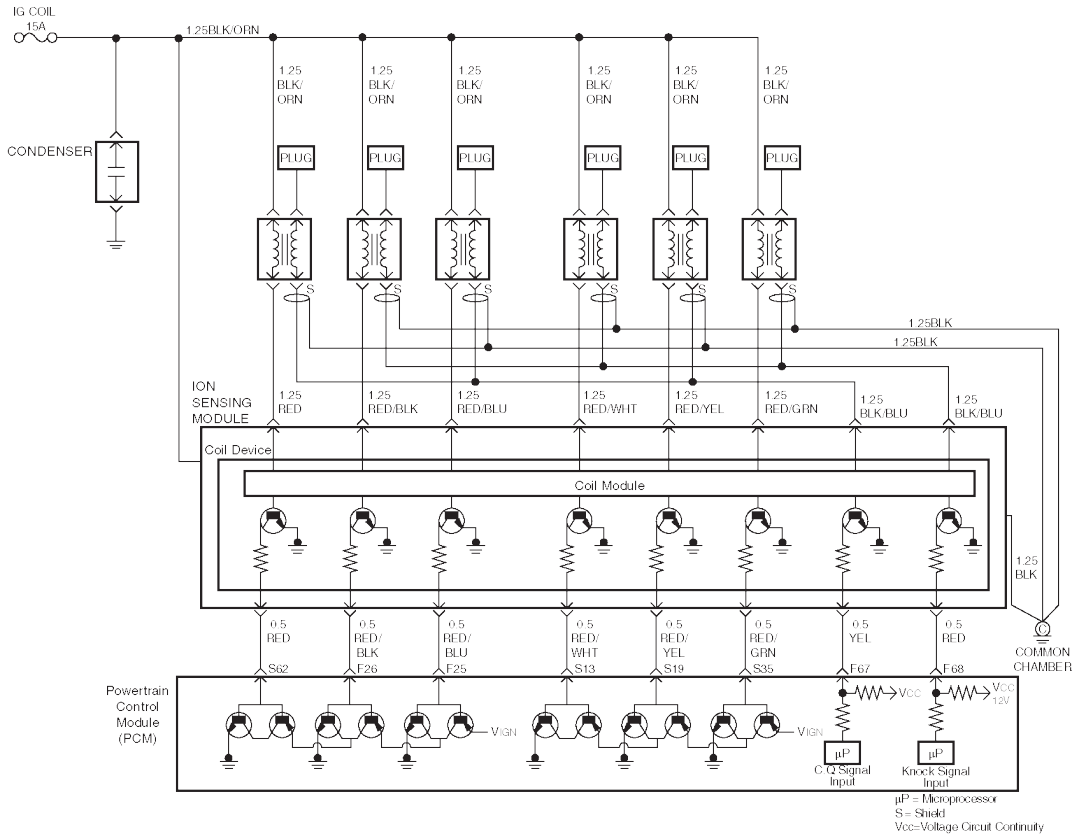Diagnostic Trouble Code (DTC) P0352 Ignition 2 Control Circuit



D06R200098

Circuit Description

ION Sensing Module has the function to energize and de-energize the primary ignition coil in response to signals from the PCM. The PCM controls ignition timing and dwell time.

This diagnosis detects open circuit or short-circuiting in the Ignition Electronic Spark Timing (EST) line by monitoring EST signals. A failure determination is made when the signal voltage remains higher or lower than the threshold for corresponding fault code beyond a predetermined time period.

When the PCM detects a problem on EST control circuit 2, it will set a DTC P0352.

Conditions for Setting the DTC

- The ignition is “ON”.
- The engine is running, determined by the 58 X crankshaft position input signal.
- The output voltage is not equal to 5 volts when output is “ON”.
- The output voltage is not equal to 0 volts when output is “OFF”.
- Ten test failures occur within 10 samples of continuous spark events.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle in which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0352 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0352 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect the harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connections.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Tech 2 display related to DTC P0352 while moving the connector and wiring related to the ignition system. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0352 – Ignition 2 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Record conditions as noted. 4. Use a Tech 2 to monitor the “DTC” information for DTC P0352 until the DTC P0352 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0352 failed this ignition cycle?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Check for faulty connection at ignition coil. Was a problem found?	—	Verify repair	Go to *Step 4*
4	Check for faulty connection at PCM connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Ignition “ON”, engine “OFF”. 2. Back probe the ignition control circuit 2 at the ION Sensing Module with a DVM . Is the voltage near the specified value?	25-55 mV	Go to *Step 6*	Go to *Step 9*
6	1. Ignition “ON”, engine running. 2. Back probe the ignition control circuit at the ION Sensing Module for the cylinder being tested. Is the voltage in the specified range, rapidly toggling back and forth to a reading 20-50 mV higher?	100-180 mV	Go to *Step 7*	Go to *Step 13*
7	1. Ignition “OFF”. 2. Disconnect the 3-pin connector at the ignition coil. 3. Check ignition control circuit 2 voltage at the ignition coil connector while cranking the engine connector. Does the voltage measure between the specified values?	200-1200 mV	Go to *Step 8*	Go to *Step 11*
8	Replace the ignition coil. Is the action complete?	—	Verify repair	—
9	1. Ignition “OFF”. 2. Disconnect the PCM and the ignition coil. 3. Check ignition control circuit 2 for short to ground. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Check ignition control circuit 2 for short to voltage. Was a problem found?	—	Verify repair	Go to *Step 13*

DTC P0352 – Ignition 2 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
11	Check for an open ignition control circuit 2. Was the ignition control circuit open?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the open ignition control circuit. Is the action complete?	—	Verify repair	—
13	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

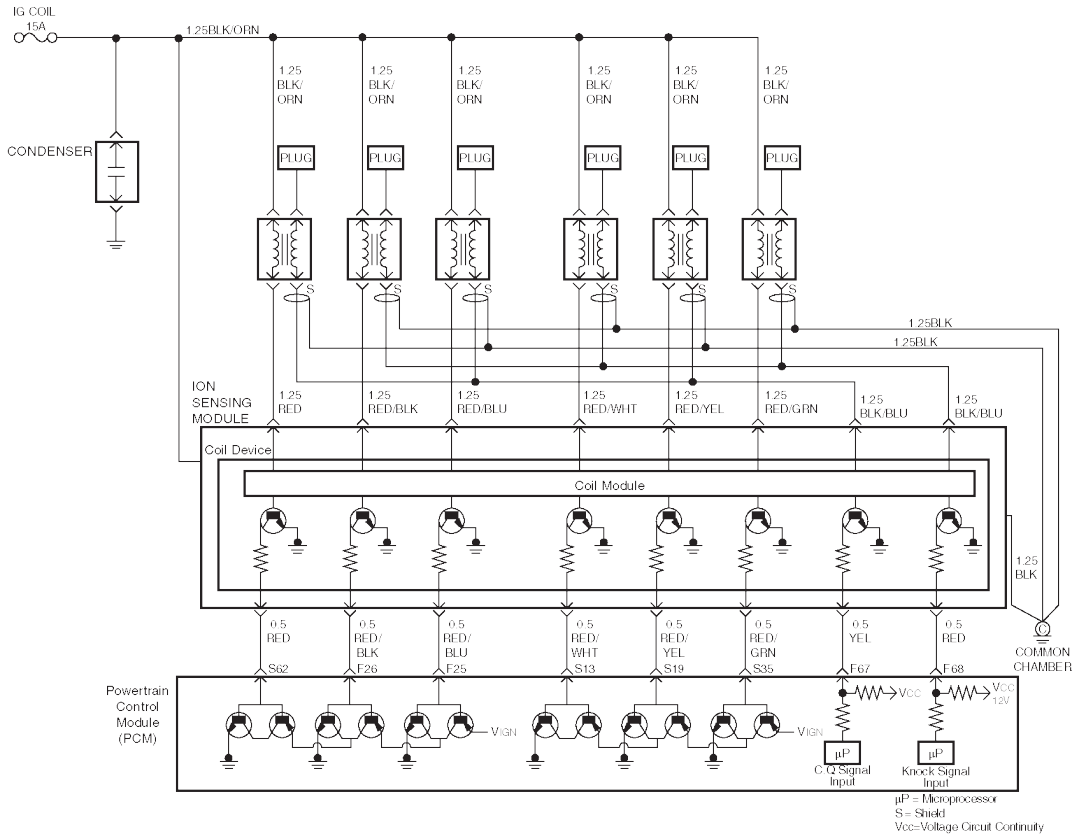Diagnostic Trouble Code (DTC) P0353 Ignition 3 Control Circuit



D06R200098

Circuit Description

ION Sensing Module has the function to energize and de-energize the primary ignition coil in response to signals from the PCM. The PCM controls ignition timing and dwell time.

This diagnosis detects open circuit or short-circuiting in the Ignition Electronic Spark Timing (EST) line by monitoring EST signals. A failure determination is made when the signal voltage remains higher or lower than the threshold for corresponding fault code beyond a predetermined time period.

When the PCM detects a problem on EST control circuit 3, it will set a DTC P0353.

Conditions for Setting the DTC

- The ignition is “ON”.
- The engine is running, determined by the 58X crankshaft position input signal.
- The output voltage is not equal to 5 volts when output is “ON”.
- The output voltage is not equal to 0 volts when output is “OFF”.
- Ten test failures occur within 10 samples of continuous spark events.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle in which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0353 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0353 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect the harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connections.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Tech 2 display related to DTC P0353 while moving the connector and wiring related to the ignition system. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0353 – Ignition 3 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Record conditions as noted. 4. Use a Tech 2 to monitor the "DTC" information for DTC P0353 until the DTC P0353 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0353 failed this ignition cycle?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Check for faulty connection at ignition coil. Was a problem found?	—	Verify repair	Go to *Step 4*
4	Check for faulty connection at PCM connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Ignition "ON", engine "OFF". 2. Back probe the ignition control circuit 3 at the ION Sensing Module with a DVM positive lead with the negative lead to ground. Is the voltage near the specified value?	25-55 mV	Go to *Step 6*	Go to *Step 9*
6	1. Ignition "ON", engine running. 2. Back probe the ignition control circuit at the ION Sensing Module for the cylinder being tested. Is the voltage in the specified range, rapidly toggling back and forth to a reading 20-50 mV higher?	100-180 mV	Go to *Step 7*	Go to *Step 13*
7	1. Ignition "OFF". 2. Disconnect the 3-pin connector at the ignition coil. 3. Check ignition control circuit 3 voltage at the ignition coil connector while cranking the engine. Does the voltage measure between the specified values?	200-1200 mV	Go to *Step 8*	Go to *Step 11*
8	Replace the ignition coil. Is the action complete?	—	Verify repair	—
9	1. Ignition "OFF". 2. Disconnect the PCM and the ignition coil. 3. Check ignition control circuit 3 for short to ground. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Check ignition control circuit 3 for short to voltage. Was a problem found?	—	Verify repair	Go to *Step 13*

DTC P0353 – Ignition 3 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
11	Check for an open ignition control circuit 3. Was the ignition control circuit open?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the open ignition control circuit. Is the action complete?	—	Verify repair	—
13	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

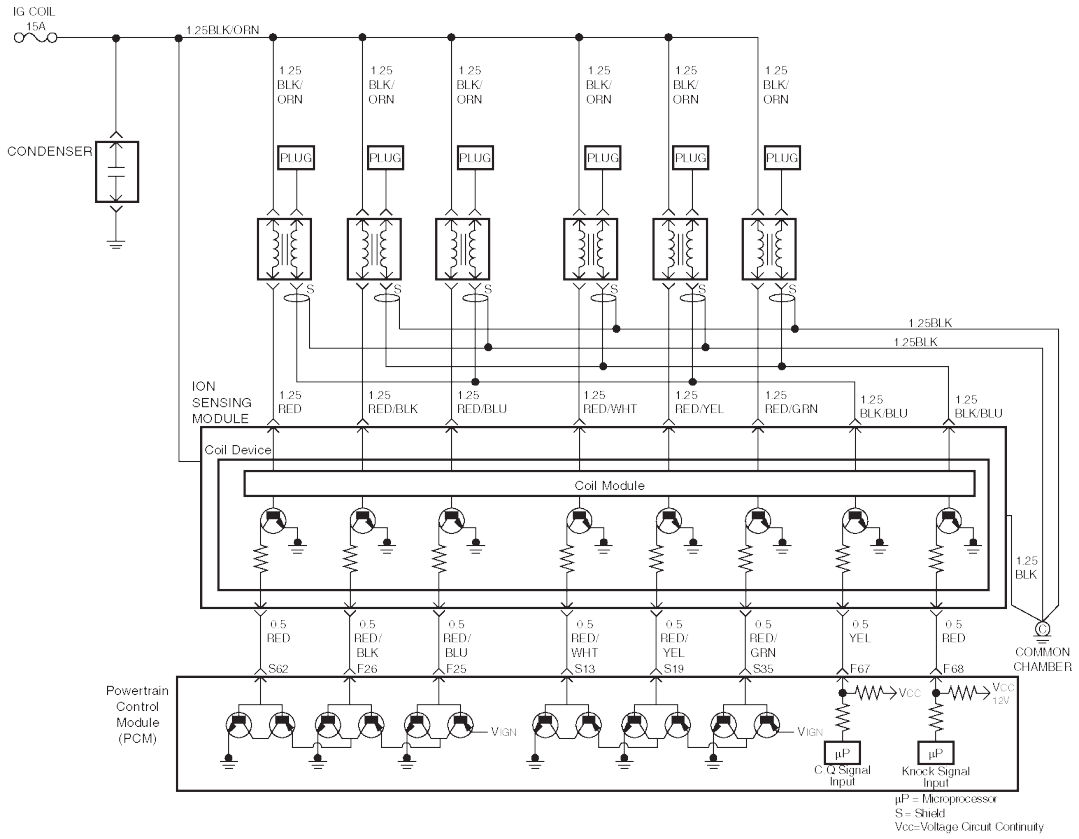Diagnostic Trouble Code (DTC) P0354 Ignition 4 Control Circuit



D06R200098

Circuit Description

ION Sensing Module has the function to energize and de-energize the primary ignition coil in response to signals from the PCM. The PCM controls ignition timing and dwell time.

This diagnosis detects open circuit or short-circuiting in the Ignition Electronic Spark Timing (EST) line by monitoring EST signals. A failure determination is made when the signal voltage remains higher or lower than the threshold for corresponding fault code beyond a predetermined time period.

When the PCM detects a problem on EST control circuit 4, it will set a DTC P0354.

Conditions for Setting the DTC

- The ignition is “ON”.
- The engine is running, determined by the 58X crankshaft position input signal.
- The output voltage is not equal to 5 volts when output is “ON”.
- The output voltage is not equal to 0 volts when output is “OFF”.
- Ten test failures occur within 10 samples of continuous spark events.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle in which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0354 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0354 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect the harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connections.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Tech 2 display related to DTC P0354 while moving the connector and wiring related to the ignition system. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0354 – Ignition 4 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Record conditions as noted. 4. Use a Tech 2 to monitor the "DTC" information for DTC P0354 until the DTC P0354 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0354 failed this ignition cycle?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Check for faulty connection at ignition coil. Was a problem found?	—	Verify repair	Go to *Step 4*
4	Check for faulty connection at PCM connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Ignition "ON", engine "OFF". 2. Back probe the ignition control circuit 4 at the ION Sensing with a DVM positive lead with the negative lead to ground. Is the voltage near the specified value?	25-55 mV	Go to *Step 6*	Go to *Step 9*
6	1. Ignition "ON", engine running. 2. Back probe the ignition control circuit at the ION Sensing Module for the cylinder being tested. Is the voltage in the specified range, rapidly toggling back and forth to a reading 20-50 mV higher?	100-180 mV	Go to *Step 7*	Go to *Step 13*
7	1. Ignition "OFF". 2. Disconnect the 3-pin connector at the ignition coil. 3. Check ignition control circuit 4 voltage at the ignition coil connector while cranking the engine. Does the voltage measure between the specified values?	200-1200 mV	Go to *Step 8*	Go to *Step 11*
8	Replace the ignition coil. Is the action complete?	—	Verify repair	—
9	1. Ignition "OFF". 2. Disconnect the PCM and the ignition coil. 3. Check ignition control circuit 4 for short to ground. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Check ignition control circuit 4 for short to voltage. Was a problem found?	—	Verify repair	Go to *Step 13*

DTC P0354 – Ignition 4 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
11	Check for an open ignition control circuit 4. Was the ignition control circuit open?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the open in ignition control circuit. Is the action complete?	—	Verify repair	—
13	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

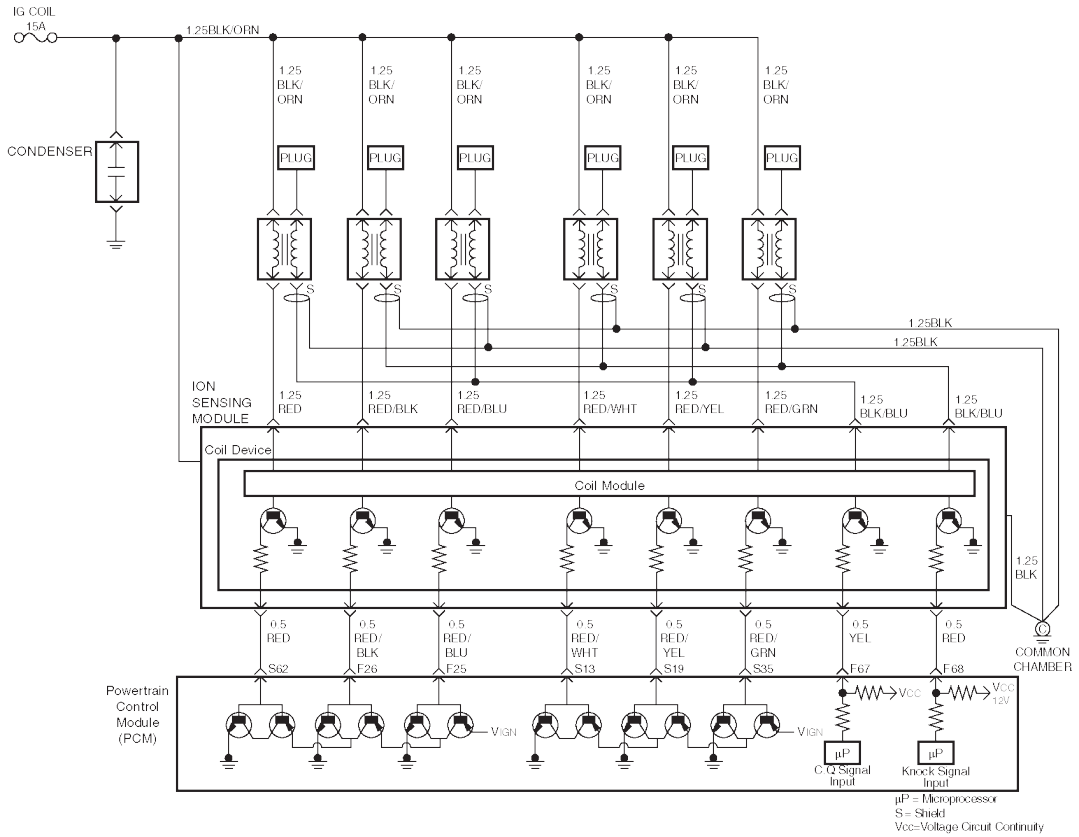Diagnostic Trouble Code (DTC) P0355 Ignition 5 Control Circuit



D06R200098

Circuit Description

ION Sensing Module has the function to energize and de-energize the primary ignition coil in response to signals from the PCM. The PCM controls ignition timing and dwell time.

This diagnosis detects open circuit or short-circuiting in the Ignition Electronic Spark Timing (EST) line by monitoring EST signals. A failure determination is made when the signal voltage remains higher or lower than the threshold for corresponding fault code beyond a predetermined time period.

When the PCM detects a problem on EST in control circuit 5, it will set a DTC P0355.

Conditions for Setting the DTC

- The ignition is “ON”.
- The engine is running, determined by the 58X crankshaft position input signal.
- The output voltage is not equal to 5 volts when output is “ON”.
- The output voltage is not equal to 0 volts when output is “OFF”.
- Ten test failures occur within 10 samples of continuous spark events.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle in which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0355 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0355 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect the harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connections.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Tech 2 display related to DTC P0355 while moving the connector and wiring related to the ignition system. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0355 – Ignition 5 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Record conditions as noted. 4. Use a Tech 2 to monitor the "DTC" information for DTC P0355 until the DTC P0355 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0355 failed this ignition cycle?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Check for faulty connection at ignition coil. Was a problem found?	—	Verify repair	Go to *Step 4*
4	Check for faulty connection at PCM connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Ignition "ON", engine "OFF". 2. Back probe the ignition control circuit 5 at the ION Sensing Module with a DVM positive lead with the negative lead to ground. Is the voltage near the specified value?	25-55 mV	Go to *Step 6*	Go to *Step 9*
6	1. Ignition "ON", engine running. 2. Back probe the ignition control circuit at the ION Sensing Module for the cylinder being tested. Is the voltage in the specified range, rapidly toggling back and forth to a reading 20-50 mV higher?	100-180 mV	Go to *Step 7*	Go to *Step 13*
7	1. Ignition "OFF". 2. Disconnect the 3-pin connector at the ignition coil. 3. Check ignition control circuit 5 voltage at the ignition coil connector while cranking the engine. Does the voltage measure between the specified values?	200-1200 mV	Go to *Step 8*	Go to *Step 11*
8	Replace the ignition coil. Is the action complete?	—	Verify repair	—
9	1. Ignition "OFF". 2. Disconnect the PCM and the ignition coil. 3. Check ignition control circuit 5 for short to ground. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Check ignition control circuit 5 for short to voltage. Was a problem found?	—	Verify repair	Go to *Step 13*

DTC P0355 – Ignition 5 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
11	Check for an open ignition control circuit 5. Was the ignition control circuit open?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the open ignition control circuit. Is the action complete?	—	Verify repair	—
13	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

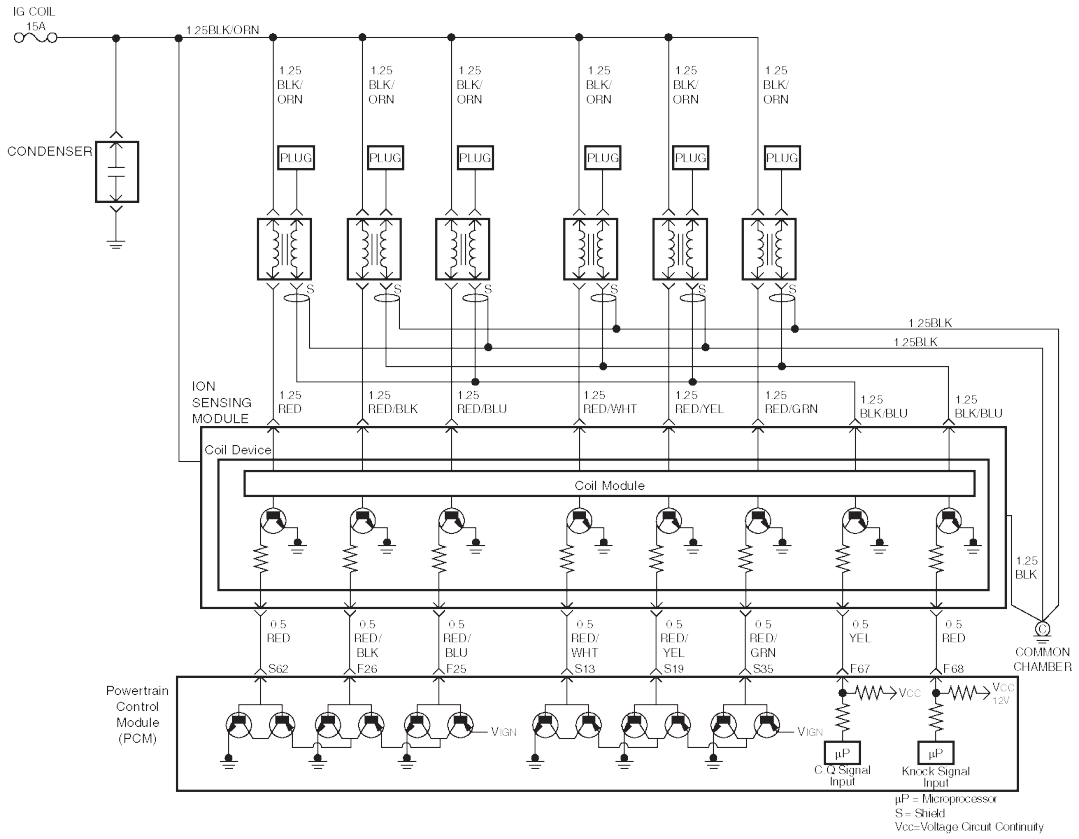Diagnostic Trouble Code (DTC) P0356 Ignition 6 Control Circuit



D06R200098

Circuit Description

ION Sensing Module has the function to energize and de-energize the primary ignition coil in response to signals from the PCM. The PCM controls ignition timing and dwell time.

This diagnosis detects open circuit or short-circuiting in the Ignition Electronic Spark Timing (EST) line by monitoring EST signals. A failure determination is made when the signal voltage remains higher or lower than the threshold for corresponding fault code beyond a predetermined time period.

When the PCM detects a problem on EST control circuit 6, it will set a DTC P0356.

Conditions for Setting the DTC

- The ignition is “ON”.
- The engine is running, determined by the 58X crankshaft position input signal.
- The output voltage is not equal to 5 volts when output is “ON”.
- The output voltage is not equal to 0 volts when output is “OFF”.
- Ten test failures occur within 10 samples of continuous circuit monitoring.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle in which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0356 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P0356 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect the harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connections.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Tech 2 display related to DTC P0356 while moving the connector and wiring related to the ignition system. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0356 – Ignition 6 Control Circuit

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Record conditions as noted. 4. Use a Tech 2 to monitor the “DTC” information for DTC P0356 until the DTC P0356 test runs. 5. Note the test result. Does the Tech 2 indicate DTC P0356 failed this ignition cycle?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Check for faulty connection at ignition coil. Was a problem found?	—	Verify repair	Go to *Step 4*
4	Check for faulty connection at PCM connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Ignition “ON”, engine “OFF”. 2. Back probe the ignition control circuit 6 at the ION Sensing Module with a DVM positive lead with the negative lead to ground. Is the voltage near the specified value?	25-55 mV	Go to *Step 6*	Go to *Step 9*
6	1. Ignition “ON”, engine running. 2. Back probe the ignition control circuit at the ION Sensing Module for the cylinder being tested. Is the voltage in the specified range, rapidly toggling back and forth to a reading 20-50 mV higher?	100-180 mV	Go to *Step 7*	Go to *Step 13*
7	1. Ignition “OFF”. 2. Disconnect the 3-pin connector at the ignition coil. 3. Check ignition control circuit 6 voltage at the ignition coil connector while cranking the engine. Does the voltage measure between the specified values?	200-1200 mV	Go to *Step 8*	Go to *Step 11*
8	Replace the ignition coil. Is the action complete?	—	Verify repair	—
9	1. Ignition “OFF”. 2. Disconnect the PCM and the ignition coil. 3. Check ignition control circuit 6 for short to ground. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Check ignition control circuit 6 for short to voltage. Was a problem found?	—	Verify repair	Go to *Step 13*

DTC P0356 – Ignition 6 Control Circuit (Cont'd)

Step	Action	Value(s)	Yes	No
11	Check for an open ignition control circuit 6. Was the ignition control circuit open?	—	Go to *Step 12*	Go to *Step 13*
12	Repair the open ignition control circuit. Is the action complete?	—	Verify repair	—
13	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

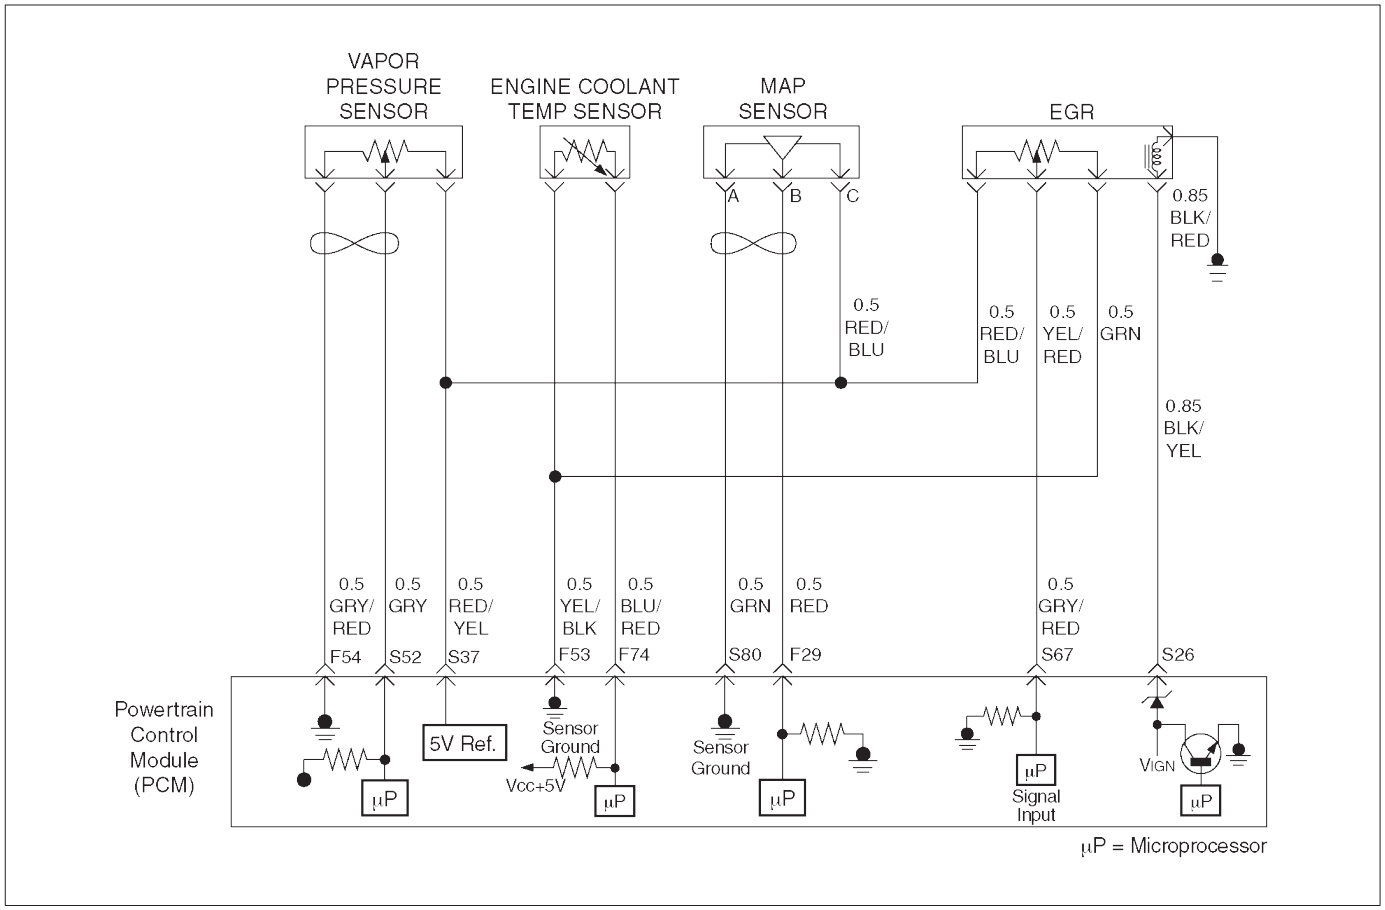Diagnostic Trouble Code (DTC) P0401 EGR Flow Insufficient



D06R200087

Circuit Description

The powertrain control module (PCM) tests the exhaust gas recirculation (EGR) system during deceleration by momentarily commanding the EGR valve to open while monitoring the manifold absolute pressure (MAP) sensor signal. When the EGR valve is opened, the PCM monitors the change in MAP input signal. The PCM compares the MAP change to a RPM vs. BARO table. When the PCM interprets the change in MAP to be out of limits, the PCM will set DTC P0401. The number of test samples required to accomplish this may vary according to the severity of the detected flow error.

Normally, the PCM will only allow one EGR flow test sample to be taken during an ignition cycle. To aid in verifying a repair, the PCM allows twelve test samples during the first ignition cycle following a Tech 2 “Clear Info” or a battery disconnect. Between nine and twelve samples should be sufficient for the PCM to determine adequate EGR flow and pass the EGR test.

Conditions for Setting the DTC

- No TP sensor, vehicle speed sensor (VSS), MAP sensor, IAT sensor, IAC, EGR Pintle Position sensor, ECT sensor, misfire, or automatic transmission DTCs set.
- Engine coolant temperature is greater than 60°C (140°F).
- Ignition voltage between 11.5 and 16 volts.
- Vehicle speed is greater than 24 km/h (15 mph).
- A/C clutch status is unchanged.
- TCC status is unchanged.

Start Test

- TP angle is less than 0.8%.
- EGR duty cycle is less than 1%.
- MAP is steady, changing less than 2 kPa.
- Engine speed is between 1100 RPM and 2000 RPM (M/T).
- MAP between 10 kPa and 40 kPa.
- Engine speed is between 900 RPM and 1500 rpm (A/T).

  The test will be aborted if the vehicle speed changes by more than 16 km/h (10 mph), engine speed changes by more than 100 RPM or the EGR is opened less than 95% of commanded position.
- The PCM will only run the EGR test during a closed throttle condition.
- The PCM will only run the EGR test at vehicle speeds above 24 km/h (15 mph).
- Several deceleration cycles will be necessary to run a sufficient number of EGR flow tests.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.

- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Diagnostic Aids

Check for the following conditions:

- Poor connection or damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the Actual EGR Position display on the Tech 2 while moving connectors and wiring harnesses related to the EGR valve. A change in the display will indicate the location of the fault.
- Ensure EGR valve is correctly mounted. See *On-Vehicle Service*.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

NOTE: If the EGR valve shows signs of excessive heat, check the exhaust system for blockage (possibly a plugged catalytic converter) using the “Restricted Exhaust System Check”.

Test Description


Number(s) below refer to the step number(s) on the Diagnostic Chart

3. A malfunctioning MAP sensor can set an EGR DTC. The MAP sensor could send a constant signal which is not low enough to set a low MAP DTC. The constant signal from the MAP sensor also may not be high enough to set a high MAP DTC. This step verifies that the MAP sensor is responding.

DTC P0401 – EGR Flow Insufficient

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Is DTC P1404 also set?	—	Go to *DTC 1404*	Go to *Step 3*
3	1. Start the engine. 2. Monitor the MAP signal with a Tech 2 while idling. 3. While idling, jab the accelerator pedal about halfway down and immediately let the engine return to idle. Did the MAP value on the Tech 2 show an immediate large change?	—	Go to *Step 5*	Go to *Step 4*
4	Replace the MAP sensor. Is the action complete?	—	Verify repair	—
5	1. Inspect the exhaust system for modification of original installed parts or leaks. 2. If a problem was found, repair exhaust system as necessary. Was a condition present that required repair?	—	Go to *Step 8*	Go to *Step 6*
6	1. Remove the EGR valve. 2. Visually and physically inspect the pintle, valve passages and the adapter for excessive deposits or any kind of a restriction. 3. If a problem is found, clean or replace EGR system components as necessary. Was a condition present that required repair?	—	Go to *Step 8*	Go to *Step 7*
7	1. Remove the EGR inlet and outlet pipes from the exhaust manifold and the intake manifold. 2. Inspect the manifold EGR ports and the EGR inlet and outlet pipes for a blockage caused by excessive deposits or other damage. 3. If a problem is found, correct the condition as necessary. Was a condition present that required repair?	—	Go to *Step 8*	Check the Procedure Refer to *Diagnostic Aids*
8	1. Review and record the Tech 2 Failure Records data. 2. Clear DTC and monitor the Tech 2 System Info Screen while operating the vehicle as specified in "Diagnostic Aids". 3. Using a Tech 2, monitor "DTC" info for DTC P0401 until the DTC P0401 test runs. 4. Note the test result. Does the Tech 2 indicate DTC P0401 failed this ignition?	—	—	Repair complete

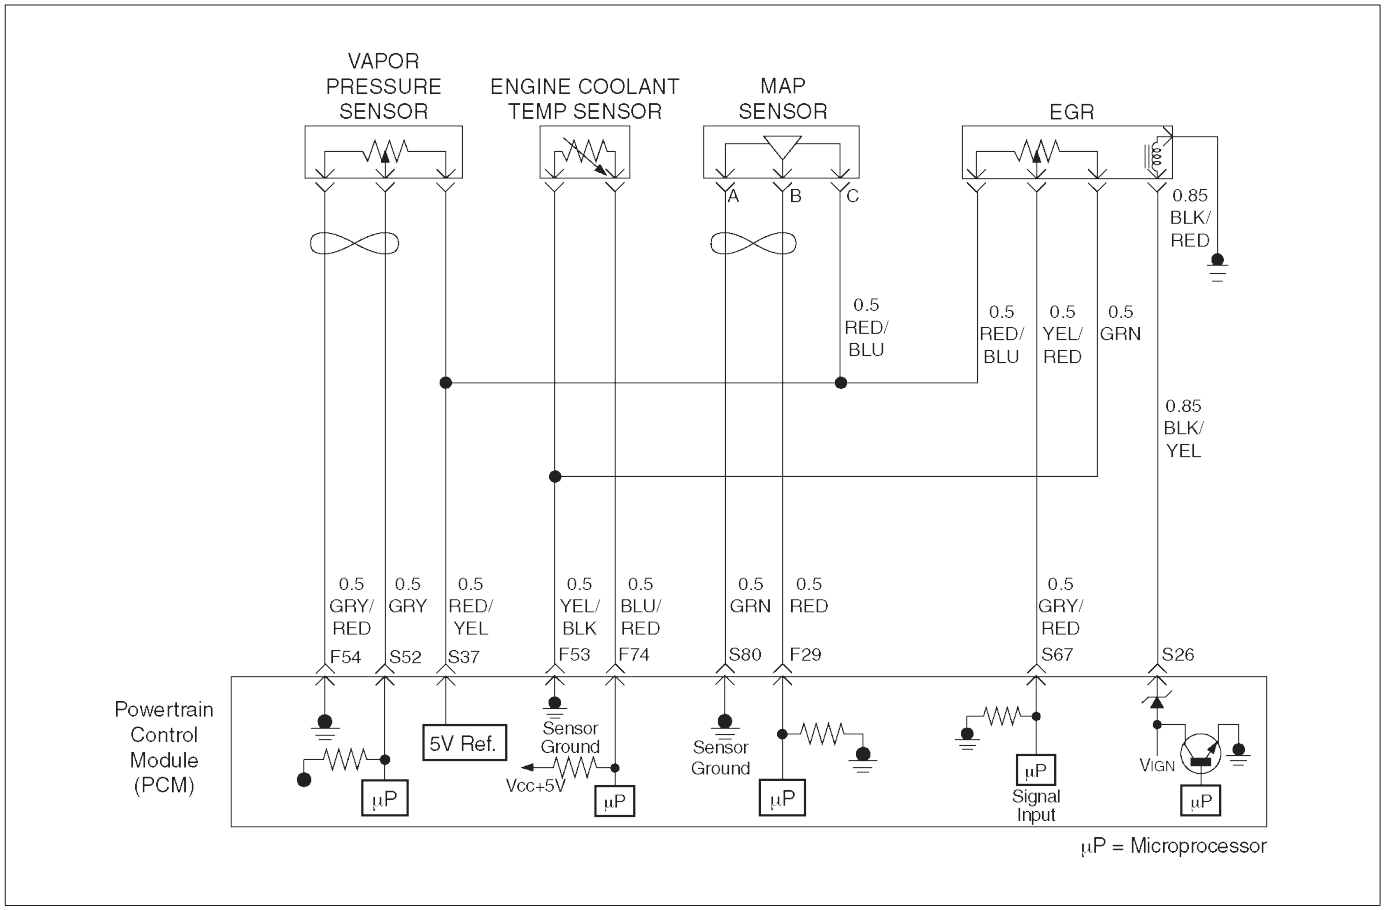Diagnostic Trouble Code (DTC) P0402 EGR Pintle Crank Error



D06R200087

Circuit Description

The powertrain control module (PCM) monitors the EGR valve pintle position input to ensure that the valve responds properly to commands from the PCM, and to detect a fault if pintle position is stuck open. If the PCM detects a pintle position signal indicates more than 21.5% and more than for 625 msec during cranking, the PCM will set DTC P0402.

Conditions for Setting the DTC

- Ignition voltage is between 11 and 16 volts.
- At Engine revolution less than 600 RPM, EGR pintle position indicates more than 21.0% and more than for 625 msecs.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0402 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0402 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:


- Foreign material on EGR valve between pintle and seat may cause EGR stuck open. Inspect foreign material in EGR valve.
- Excessive carbon deposit may cause unsmooth operation of EGR valve shaft. Inspect for carbon deposit and clean up inside of carbon deposit.
- Poor connection or damaged harness–inspect the wiring harness for damage If the harness appears to be OK, observe the EGR actual position display on the Tech 2 while moving connectors and wiring harnesses related to EGR valve. A change in the display will indicate the location of the fault.

NOTE: If the EGR valve shows signs of excessive heat, check the exhaust system for blockage (possibly a plugged catalytic converter) using the “Restricted Exhaust System Check”.

DTC P0402 – EGR Pintle Crank Open Error

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF", review and record Tech 2 Failure Records data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC" info for DTC P0402 until the DTC P0402 test runs. Note the result. Does the Tech 2 indicates DTC P0402 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Disconnect the EGR valve harness connector. 2. Inspect the EGR valve and connectors for damaged pin or terminals. Were there any damaged pins or terminals?	—	Go to *Step 4*	Go to *Step 5*
4	Repair the damaged pin or terminal. Is the action complete?	—	Verify repair	—
5	1. Remove EGR valve from Engine. 2. Inspect EGR valve whether there is any foreign material between seat and pintle. Was any foreign material in EGR valve?	—	Go to *Step 6*	Go to *Step 7*
6	1. Remove EGR valve foreign material from EGR valve and clean up inside. 2. Visually inspect for damage of pintle and seat, which leakage may occur. Was there any severe damage which affects function?	—	Go to *Step 7*	Verify repair Go to *Step 8*
7	1. Reconnect. 2. Ignition "OFF". 3. Install the Tech 2. 4. Run the engine at idle. 5. On Tech-II, select special function for EGR. 6. Use the "UP" arrow to increase the EGR from 0% to 40%. Did EGR work properly?	—	—	Go to *Step 8*
8	Replace the EGR valve. Does DTC P0402 still fail "DTC" test on the Tech 2?	—	Go to *Step 9*	Verify repair
9	Replace the PCM. Is the action complete?	—	Verify repair	—

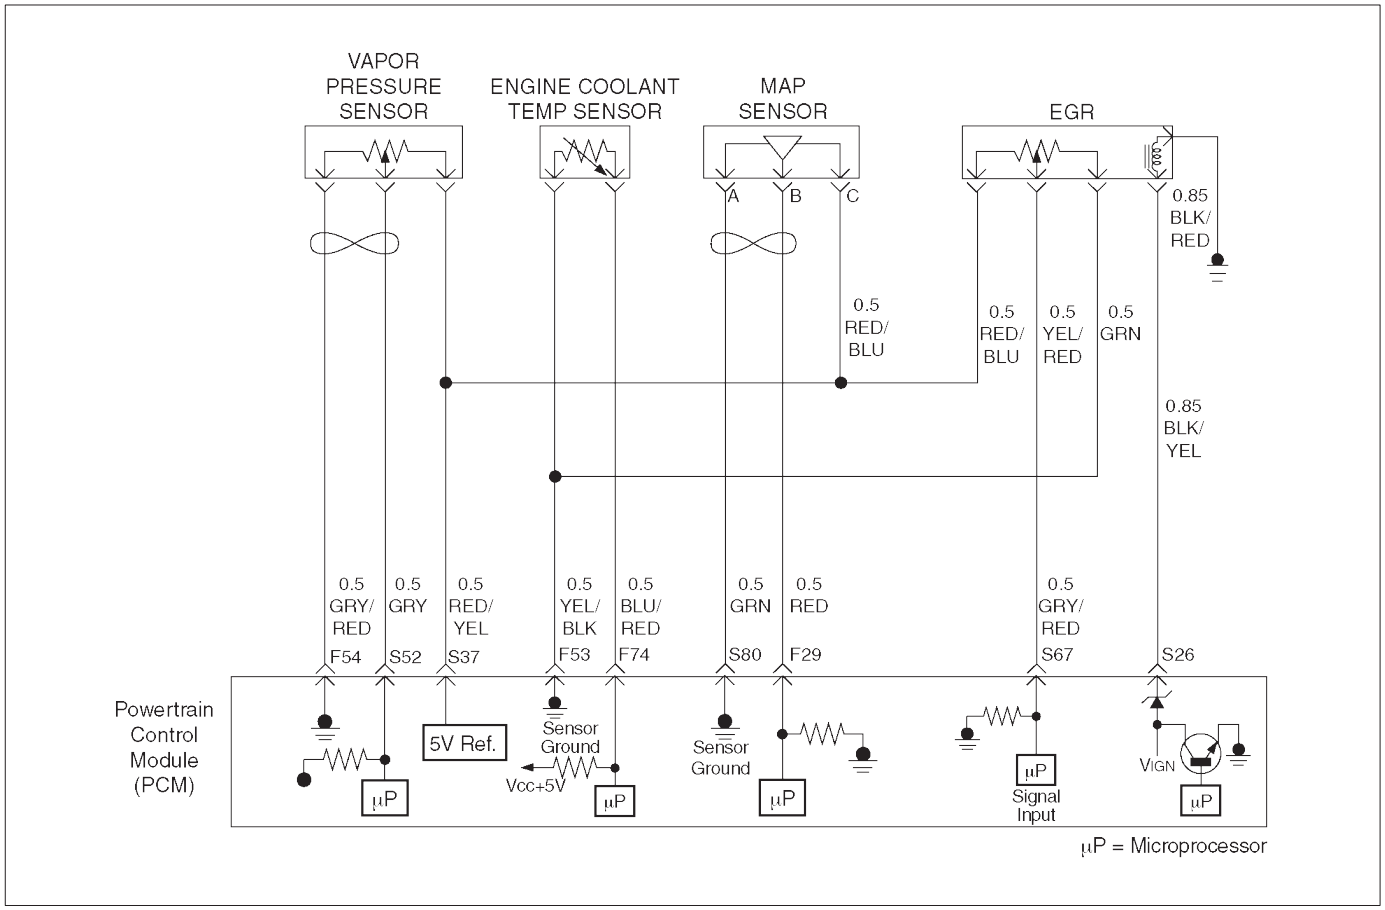Diagnostic Trouble Code (DTC) P0404 EGR Open Stuck



D06R200087

Circuit Description

The powertrain control module (PCM) monitors the EGR valve pintle position input to ensure that the valve responds properly to commands from the PCM, and to detect a fault if pintle position is different from commanded position. If the PCM detects a pintle position signal indicates more than 15 points different between current and commanded and more than 15 seconds, the PCM will set DTC P0404.

Conditions for Setting the DTC

- The engine is running.
- Ignition voltage is between 11 and 16 volts.
- Intake Air Temp is more than 3˚C (37.4˚F).
- Desire EGR position is less than 3%.
- The difference between desired EGR and current EGR is less than 3%.
- Difference EGR pintle position between current and commanded position becomes more than 15% and last more than 15 seconds, and this condition meets three times in a trip. Then it trigger, the PCM lights on.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0404 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0404 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids


Check for the following conditions:

- Excessive carbon deposit on EGR valve shaft may cause EGR stuck open or unsmooth operation. Those carbon deposit may occur by unusual port operation. Clean up carbon may make smooth function of EGR valve.
- Poor connection or damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the EGR actual position display on the Tech 2 while moving connectors and wiring harnesses related to EGR valve. A change in the display will indicate the location of the fault.

DTC P0404 – EGR Open Stuck

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF", review and record Tech 2 Failure Records Data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC" info for DTC P0404 until the DTC P0404 test runs. Note the result. Does the Tech 2 indicates DTC P0404 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Disconnect the EGR valve harness connector. 2. Inspect the EGR valve and connectors for damaged pin or terminals. Were there any damaged pins or terminals?	—	Go to *Step 4*	Go to *Step 5*
4	Repair the damaged pin or terminal.	—	Verify repair	Is the action complete?
5	1. Remove EGR valve from Engine. 2. Inspect EGR valve whether there is any excessive carbon deposit on EGR shaft. Was excessive carbon deposit on EGR valve shaft?	—	Go to *Step 6*	Go to *Step 7*
6	1. Clean up EGR valve shaft and inside of EGR valve. 2. Visually inspect damage of pintle and seat if is bent, leakage may occur. Was there any severe damage which affects function?	—	Go to *Step 8*	Verify repair Go to *Step 7*
7	1. Reconnect. 2. Ignition "OFF". 3. Install the Tech 2. 4. Run the engine at idle. 5. On the Tech 2, select EGR Control Test. 6. Use the "UP" arrow to increase the EGR from 0% to 40%. Did EGR work properly?	—	—	Go to *Step 8*
8	Replace the EGR valve. Does DTC P0404 still fail "DTC" test on the Tech 2?	—	Go to *Step 9*	Verify repair
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

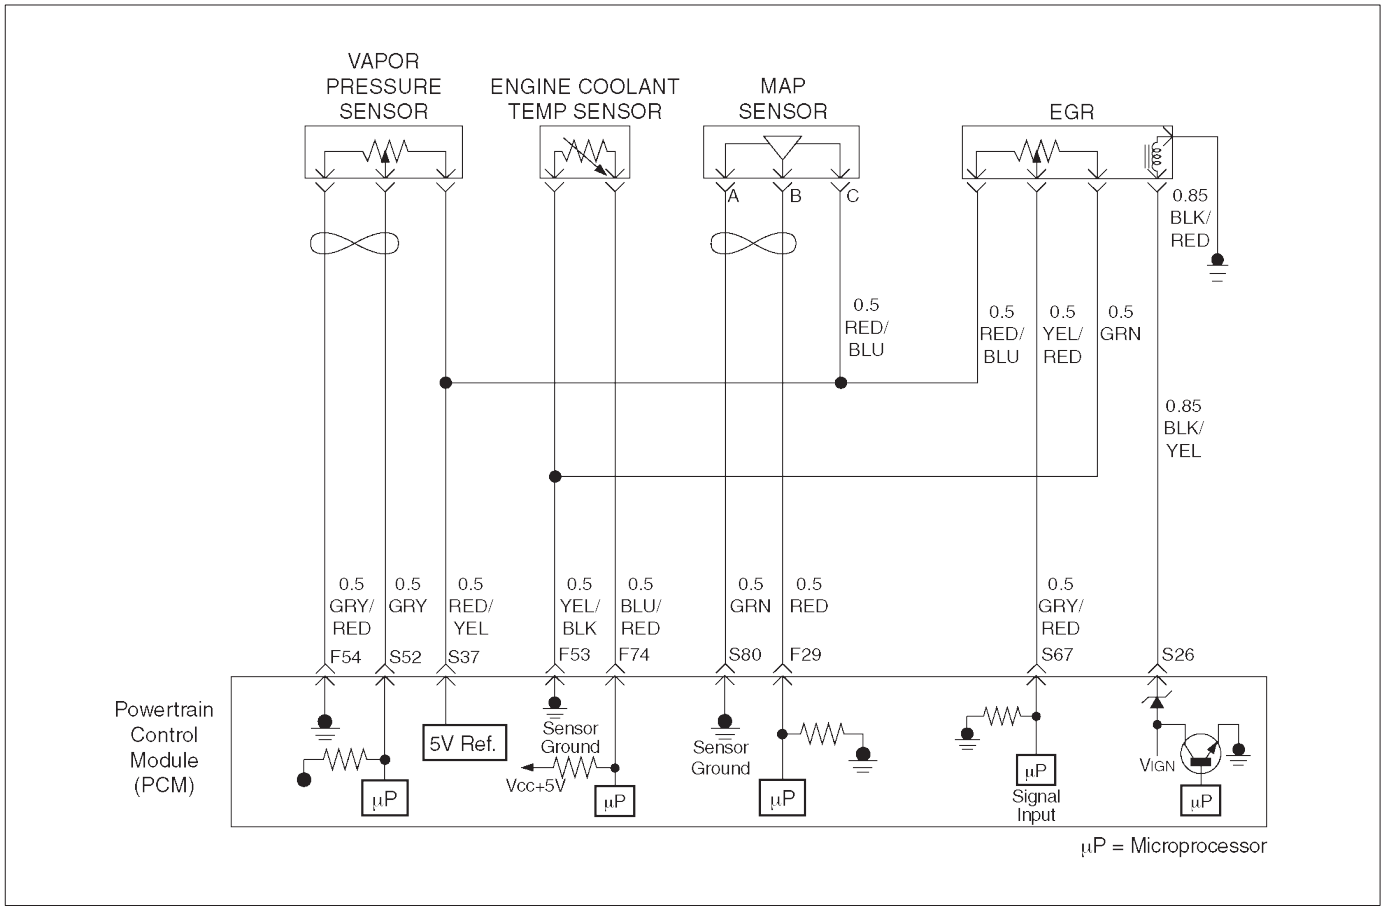Diagnostic Trouble Code (DTC) P0405 EGR Low Voltage



D06R200087

Circuit Description

The powertrain control module (PCM) monitors the EGR valve pintle position input to ensure that the valve responds properly to command from the PCM. If current pintle position voltage indicates less than 0.1 V and last more than 10 seconds, then the PCM will set DTC P0405.

Conditions for Setting the DTC

- Ignition voltage is between 11 and 16 volts.
- Intake Air Temp is more than 3°C (37.4°F).
- EGR pintle position is less than 2% and last more than 10 sec. Action taken when the DTC sets.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0402 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0405 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection or damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the EGR actual position display on the Tech 2 while moving connectors and wiring harnesses related to EGR valve. A change in the display will indicate the location of the fault.


DTC P0405 – EGR Low Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF", review and record Tech 2 Failure Records Data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC" info for DTC P0405 until the DTC P0405 test runs. Note the result. Does the Tech 2 indicates DTC P0405 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Disconnect the EGR valve harness connector. 2. Inspect the EGR valve and connectors for damaged pin or terminals. Were there any damaged pins or terminals?	—	Go to *Step 4*	Go to *Step 5*
4	Repair the damaged pin or terminal. Is the action complete?	—	Verify repair	—
5	1. Disconnect the EGR harness connector. 2. Ignition "ON". 3. At the EGR valve, use a DVM to check the voltage at the 5 volt reference wire (BLU/RED) and ground. Did the DVM indicate the specified value?	4–6 V	Go to *Step 6*	Go to *Step 7*
6	1. Disconnect the EGR harness connector. 2. Measure resistance between terminal 5 volt reference wire and ground. Was resistance in range?	5–5.5 KΩ	Go to *Step 10*	Go to *Step 17*
7	1. Ignition "ON". 2. At the PCM connector, backprobe with a DVM at the 5 volt reference for the EGR valve. Did the DVM indicate the specified value?	4–6 V	Go to *Step 8*	Go to *Step 9*
8	Repair the open 5 volt reference circuit. Is the action complete?	—	Verify repair	—
9	Repair the damaged sensor ground wire. Is the action complete?	—	Verify repair	—
10	1. Disconnect the EGR harness 2. Use an ohmmeter to measure between the pintle position pin and the sensor ground pin on the EGR valve. NOTE: J-35616 Connector Test Adapter Kit may be useful for gaining access to the recessed pins on the valve. Was the ohmmeter reading approximately equal to the specified value?	1 to 1.25 KΩ	Go to *Step 13*	Go to *Step 17*
11	1. Ignition "ON". 2. Backprobe with a DVM to measure voltage at EGR valve pintle position pin and sensor ground pin. Was voltage in range?	Less than 0.1 V	Go to *Step 17*	Go to *Step 12*

DTC P0405 – EGR Low Voltage (Cont'd)

Step	Action	Value(s)	Yes	No
12	1. Ignition "ON". 2. Backprobe with a DVM to measure voltage at PCM sensor ground pin and pintle position pin. Was voltage in range?	Less than 0.1 V	Go to *Step 13*	Go to *Step 18*
13	1. Ignition "OFF". 2. Disconnect the EGR harness. 3. Check short circuit between EGR pintle position circuit and EGR ground circuit. Was any short circuit?	—	Go to *Step 14*	Go to *Step 18*
14	Locate and repair the short to ground in the pintle position circuit Is the action complete?	—	Verify repair	—
15	1. Ignition "OFF". 2. Disconnect the PCM. 3. Ignition "ON". 4. Measure the voltage between the EGR pintle position circuit and ground. Is the measured voltage near the specified value?	Less than 0.1 V	Go to *Step 17*	Go to *Step 16*
16	Check for a short circuit between other wires and the pintle position circuit Is there any short circuit?	—	Repair short circuit and then Verify repair	Go to *Step 17*
17	Replace the EGR valve. Does DTC P1404 still fail "DTC test on the Tech 2?	—	Go to *Step 18*	Verify repair
18	Examine the PCM pin and terminal connection. Was there a damaged terminal?	—	Go to *Step 4*	Go to *Step 19*
19	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

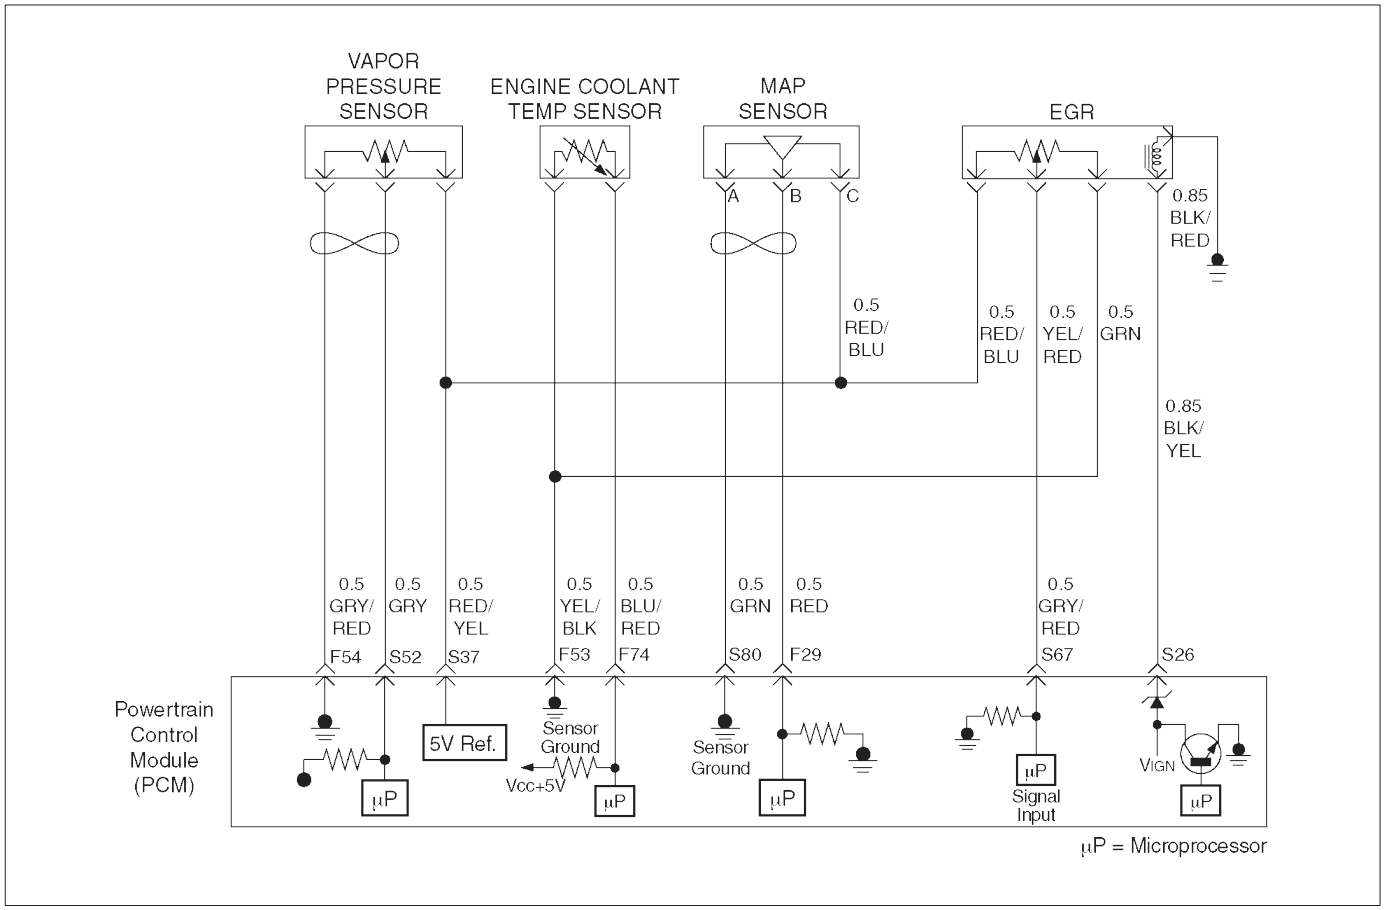Diagnostic Trouble Code (DTC) P0406 EGR High Voltage



D06R200087

Circuit Description

The powertrain control module (PCM) monitors the EGR valve pintle position input to ensure that the valve responds properly to command from the PCM. If current pintle position voltage indicates more than 4.8 V and last more than 10 seconds, then the PCM will set DTC P0406.

Conditions for Setting the DTC

- Ignition voltage is between 11 and 16 volts.
- Intake Air temp is more than 3˚C (37.4˚F).
- EGR pintle position is more than 99% and last more than 10 sec.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0402 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0404 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection or damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the EGR actual position display on the Tech 2 while moving connectors and wiring harnesses related to EGR valve. A change in the display will indicate the location of the fault.


DTC P0406 – EGR High Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF", review and record Tech 2 Failure Records Data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC" info for DTC P0406 until the DTC P0406 test runs. Note the result. Does the Tech 2 indicates DTC P0406 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Disconnect the EGR valve harness connector. 2. Inspect the EGR valve and connectors for damaged pin or terminals. Were there any damaged pins or terminals?	—	Go to *Step 4*	Go to *Step 5*
4	Repair the damaged pin or terminal. Is the action complete?	—	Verify repair	Is the action complete?
5	1. Disconnect the EGR harness connector. 2. Ignition "ON". 3. At the EGR valve, use a DVM to check the voltage at the 5 volt reference wire (BLU/RED). Did the DVM indicate the specified value?	4–6 V	Go to *Step 8*	Go to *Step 6*
6	1. Ignition "ON". 2. At the PCM connector, backprobe with a DVM at the 5 volt reference for the EGR valve. Did the DVM indicate the specified value?	4–6 V	Go to *Step 7*	Go to *Step 16*
7	Repair the open 5 volt reference circuit Is the action complete?	—	Verify repair	—
8	1. Ignition "OFF" 2. Disconnect the EGR harness. 3. Use a DVM to check for an resistance between 5 V reference and Sensor Ground at EGR sensor terminals. NOTE: J-35616 Connector Test Adapter Kit may be useful for gaining access to the recessed pins on the valve. Was the measured resistance in range?	5 to 5 KΩ	Go to *Step 9*	Go to *Step 15*
9	1. Ignition "OFF". 2. Disconnect the EGR harness. 3. Use a DVM to check for an resistance between Sensor Ground and Signal Wire at EGR sensor terminal. Is there an open circuit?	—	Go to *Step 15*	Go to *Step 10*
10	1. Ignition "OFF". 2. Disconnect the EGR harness at PCM connector. 3. Use a DVM to check for shorted wire between S37 and F53. Is there a shorted wire?	—	Go to *Step 14*	Go to *Step 11*

DTC P0406 – EGR High Voltage (Cont'd)

Step	Action	Value(s)	Yes	No
11	1. Ignition "ON". 2. Use a DVM to backprobe at terminal Connector of EGR valve for voltage. Was measured voltage more than 4.8 V?	more than 4.8 V	Go to *Step 12*	Go to *Step 12*
12	1. Ignition "ON". 2. Stay the EGR harness connected. 3. Check voltage by backprobing at PCM S37 terminal. Was voltage more than 4.8 V?	4.8 V	Go to *Step 16*	Go to *Step 13*
13	1. Locate short circuit at EGR harness between BLU/RED to GRY/RED or GRY/RED to YEL, BLU/RED. 2. Replace EGR harness. Is the action complete?	—	Verify repair	—
14	Replace EGR harness. Is the action complete?	—	Verify repair	—
15	Replace the EGR valve. Does DTC P1404 still fail "DTC test on the Tech 2?	—	Go to *Step 16*	Verify repair
16	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

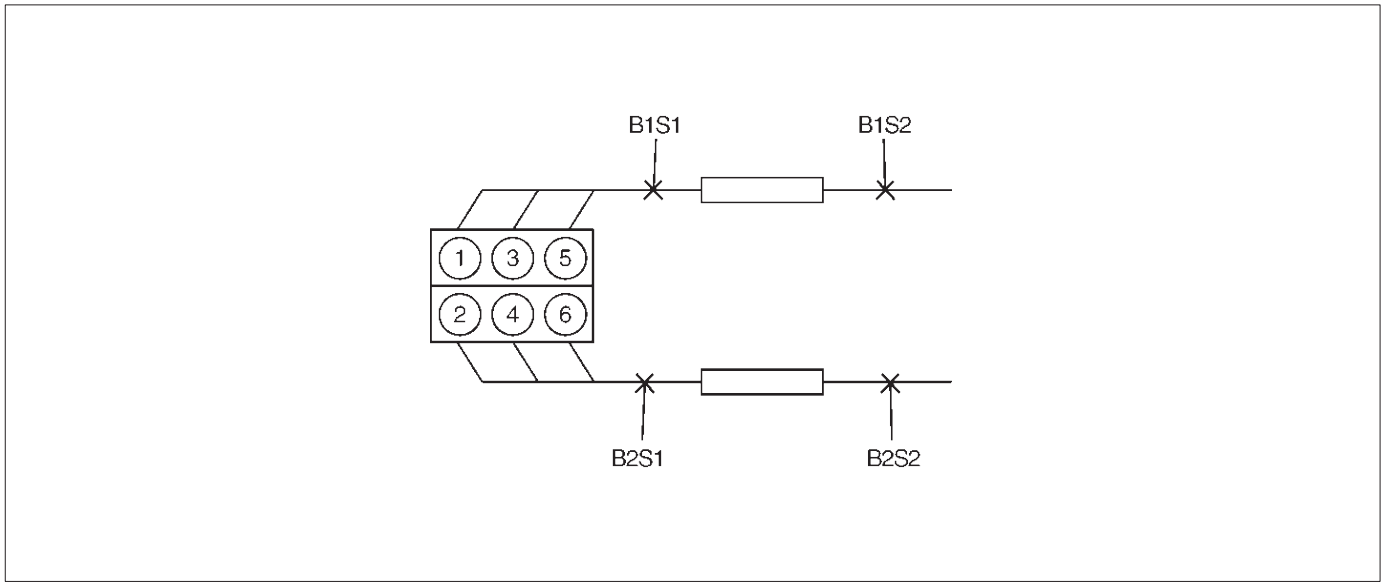Diagnostic Trouble Code (DTC)
P0420 TWC System Low Efficiency Bank 1



T321075

Circuit Description

To control emissions of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx), a three-way catalyst (TWC) is used. The catalyst promotes a chemical reaction which oxidizes the HC and CO present in the exhaust gas, converting them into harmless water vapor and carbon dioxide. The catalyst also reduces NOx, converting it to nitrogen. The powertrain control module (PCM) has the ability to monitor this process using the Bank 1 HO2S 1 and the Bank 1 HO2S 2 heated oxygen sensors. The Bank 1 HO2S 1 sensor produces an output signal which indicates the amount of oxygen present in the exhaust gas entering the three-way catalytic converter. The Bank 1 HO2S 2 sensor produces an output signal which indicates the oxygen storage capacity of the catalyst; this in turn indicates the catalyst's ability to convert exhaust gases efficiently. If the catalyst is operating efficiently, the Bank 1 HO2S 1 signal will be far more active than that produced by the Bank 1 HO2S 2 sensor. If the PCM detects a level of Bank 1 HO2S 2 activity that indicates the catalyst is no longer operating efficiently, DTC P0420 will be set.

Conditions for Setting the DTC

- No related DTCs.
- The engine is operating in "closed loop",
- Engine air load is below 99%.
- Engine coolant temperature is between 70°C (158°F) and 120°C (248°F).
- Mass air flow is between 2.5 g/second and 10 g/second.
- Engine speed is below 200 RPM.
- Catalyst temperature is above 350°C (662°F).
- The PCM determines that the catalyst's oxygen storage capacity is below the acceptable threshold.
- Intake Air Temperature is between –10°C (14°F) and 70°C (158°F).
- Throttle angle is less than 1.5%.
- Barometric Pressure is more than 72 kPa.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0420 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0420 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

The "TWC Monitor Test Counter" displayed on the Tech 2 may be used to monitor the progress of the TWC diagnostic. To complete the TWC diagnostic with a good catalyst, the counter must be allowed to increment to 49 samples and roll over to 0 at least twice. A failed catalyst

will require three or more 50-sample tests to report a failure.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

7. Difficulty completing the DTC P0420 “Status This Ign”, test may be encountered in areas where test conditions cannot be maintained easily, especially in urban areas. To minimize the amount of driving required to complete the DTC P0420 “Status This Ign”, test, use the following procedure:
   - Allow the engine to warm up completely.
   - With the vehicle in “Park”, monitor mass air flow on the Tech 2 and hold part throttle to maintain a reading of over 12 g/second for at least 2 minutes. This will achieve the “warm catalyst” required for running the test.
   - Operate the vehicle in second or third gear to remain in the DTC P0420 test conditions described in “Conditions for Setting the DTC” as much as possible. If you must stop the vehicle, maintain the “warm catalyst” criteria as follows:
     – Place the vehicle in “Park” or “Neutral”,
     – Hold part throttle to maintain a mass air flow reading of over 15 g/second for the duration of the stop.


DTC P0420 – TWC System Low Efficiency Bank 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any other DTCs set (such as P0140)?	—	Diagnose other DTC(s) first	Go to *Step 3*
3	1. Visually and physically inspect the three-way catalytic converter for damage. Check for the following: • dents • severe discoloration caused by excessive temperatures • holes • internal rattle caused by damaged catalyst 2. Also, ensure that the three-way catalytic converter is a proper original equipment manufacturer part. Did your inspection reveal a problem?	—	Go to *Step 6*	Go to *Step 4*
4	1. Visually and physically inspect the exhaust system between the three-way catalytic converter and the rear converter flange for leaks, damage, and loose or missing hardware. 2. If a problem is found, repair as necessary. Did your inspection reveal a problem?	—	Go to *Step 7* to verify repair	Go to *Step 5*
5	1. Visually and physically inspect the Bank 1 HO2S 2. 2. Ensure that the Bank 1 HO2S 2 is secure and that the pigtail and wiring harness is not contacting the exhaust pipe or is not otherwise damaged. 3. If a problem is found, repair as necessary. Did your inspection reveal a problem?	—	Go to *Step 7* to verify repair	Go to *Step 6*

DTC P0420 – TWC System Low Efficiency Bank 1 (Cont'd)

Step	Action	Value(s)	Yes	No
6	Replace the three-way catalytic converter. NOTE: Check for conditions which may cause catalyst damage (refer to *Diagnostic Aids*). Is the action complete?	—	Go to *Step 7* to verify repair	—
7	1. Review and record the Tech 2 Failure Records data. 2. Clear DTC P0420. 3. Start the engine and allow it to warm up until the engine coolant temperature monitored on the Tech 2 is above the specified value. 4. Run the engine to maintain the specified mass air flow range for at least 2 minutes. 5. Operate the vehicle to maintain DTC P0420 test conditions (refer to *DTC Test Description* in *Diagnostic Support* for detailed instructions). 6. Using a Tech 2, monitor "DTC" info for DTC P0420 until the DTC P0420 test runs. 7. Note the test result. Does the Tech 2 indicate DTC P0420 passed this ignition?	Engine coolant temp: greater than 60˚C (140˚F). Mass air flow: between 8 g/second and 50 g/second	Complete repair. If a driveability symptom still exists, refer to *Symptoms*.	Check the Procedure Refer to *Diagnostic Aids*

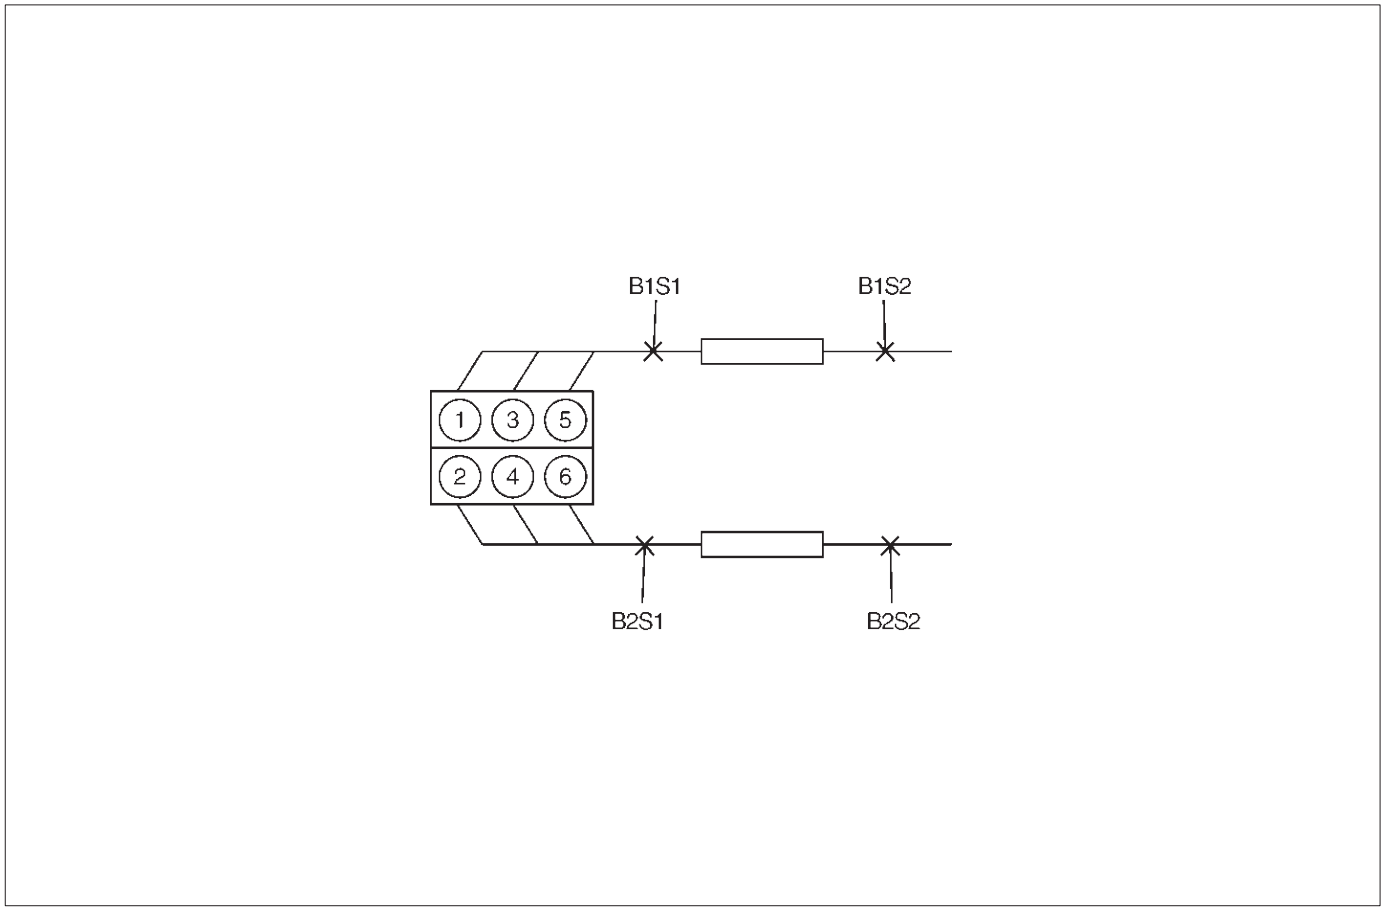Diagnostic Trouble Code (DTC)
P0430 TWC System Low Efficiency Bank 2



T321075

Circuit Description

To control emissions of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx), a three-way catalyst (TWC) is used. The catalyst promotes a chemical reaction which oxidizes the HC and CO present in the exhaust gas, converting them into harmless water vapor and carbon dioxide. The catalyst also reduces NOx, converting it to nitrogen. The powertrain control module (PCM) has the ability to monitor this process using the Bank 2 HO2S 1 and the Bank 2 HO2S 2 heated oxygen sensors. The Bank 2 HO2S 1 sensor produces an output signal which indicates the amount of oxygen present in the exhaust gas entering the three-way catalytic converter. The Bank 2 HO2S 2 sensor produces an output signal which indicates the oxygen storage capacity of the catalyst; this in turn indicates the catalyst's ability to convert exhaust gases efficiently. If the catalyst is operating efficiently, the Bank 2 HO2S 1 signal will be far more active than that produced by the Bank 2 HO2S 2 sensor. If the PCM detects a level of Bank 2 HO2S 2 activity that indicates the catalyst is no longer operating efficiently, DTC P0430 will be set.

Conditions for Setting the DTC

- No related DTCs.
- The engine is operating in "closed loop".
- Engine air load is below 99%.
- Engine coolant temperature is between 70˚C (158˚F) and 120˚C (248˚F).
- Mass air flow is between 2.5 g/second and 10 g/second.
- Change in engine load is below 8%.
- Engine speed is below 200 RPM.
- Catalyst temperature is above 350˚C (662˚F).
- The PCM determines that the catalyst's oxygen storage capacity is below the acceptable threshold.
- Intake air temperature is between –20˚C (4˚F) and 70˚C (158˚F).
- Throttle angle is less than 1.5%.
- Barometric Pressure is more than 72 kPa.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0430 will clear after 40 consecutive warm-up cycles have occurred without a fault.

- DTC P0430 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

7. Difficulty completing the DTC P0430 “Status This Ign”, test may be encountered in areas where test conditions cannot be maintained easily, especially in urban areas. To minimize the amount of driving required to complete the DTC P0430 “Status This Ign”, test, use the following procedure:
   - Allow the engine to warm up completely.
   - With the vehicle in “Park”, monitor mass air flow on the Tech 2 and hold part throttle to maintain a reading of over 12 g/second for at least 2 minutes. This will achieve the “warm catalyst” required for running the test.
   - Operate the vehicle in second or third gear to remain in the DTC P0430 test conditions described in “Conditions for Setting the DTC” as much as possible. If you must stop the vehicle, maintain the “warm catalyst” criteria as follows:
     – Place the vehicle in “Park” or “Neutral”,
     – Hold part throttle to maintain a mass air flow reading of over 15 g/second for the duration of the stop.

The “TWC Monitor Test Counter” displayed on the Tech 2 may be used to monitor the progress of the TWC diagnostic. To complete the TWC diagnostic with a good catalyst, the counter must be allowed to increment to 49 samples and roll over to 0 at least twice.


DTC P0430 – TWC System Low Efficiency Bank 2

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any other DTCs set (such as P0160)?	—	Diagnose other DTC(s) first	Go to *Step 3*
3	1. Visually and physically inspect the three-way catalytic converter for damage. Check for the following: • dents • severe discoloration caused by excessive temperatures • holes • internal rattle caused by damaged catalyst 2. Also, ensure that the three-way catalytic converter is a proper original equipment manufacturer part. Did your inspection reveal a problem?	—	Go to *Step 6*	Go to *Step 4*
4	1. Visually and physically inspect the exhaust system between the three-way catalytic converter and the rear converter flange for leaks, damage, and loose or missing hardware. 2. If a problem is found, repair as necessary. Did your inspection reveal a problem?	—	Go to *Step 7* to verify repair	Go to *Step 5*

DTC P0430 – TWC System Low Efficiency Bank 2 (Cont'd)

Step	Action	Value(s)	Yes	No
5	1. Visually and physically inspect the Bank 2 HO2S 2. 2. Ensure that the Bank 2 HO2S 2 is secure and that the pigtail and wiring harness is not contacting the exhaust pipe or is not otherwise damaged. 3. If a problem is found, repair as necessary. Did your inspection reveal a problem?	—	Go to *Step 7* to verify repair	Go to *Step 6*
6	Replace the three-way catalytic converter. NOTE: Check for conditions which may cause catalyst damage (refer to *Diagnostic Aids*). Is the action complete?	—	Go to *Step 7* to verify repair	—
7	1. Review and record the Tech 2 Failure Records data. 2. Clear DTC P0430. 3. Start the engine and allow it to warm up until the engine coolant temperature monitored on the Tech 2 is above the specified value. 4. Run the engine to maintain the specified mass air flow range for at least 6 minutes. 5. Operate the vehicle to maintain DTC P0430 test conditions (refer to *DTC Test Description* in *Diagnostic Support* for detailed instructions). 6. Using a Tech 2, monitor "DTC" info for DTC P0430 until the DTC P0430 test runs. 7. Note the test result. Does the Tech 2 indicate DTC P0430 passed this ignition?	Engine coolant temp: greater than 70°C (158°F). Mass air flow: between 2.5 g/second and 10 g/second	Complete repair. If a driveability symptom still exists, refer to *Symptoms*.	Check the Procedure Refer to *Diagnostic Aids*

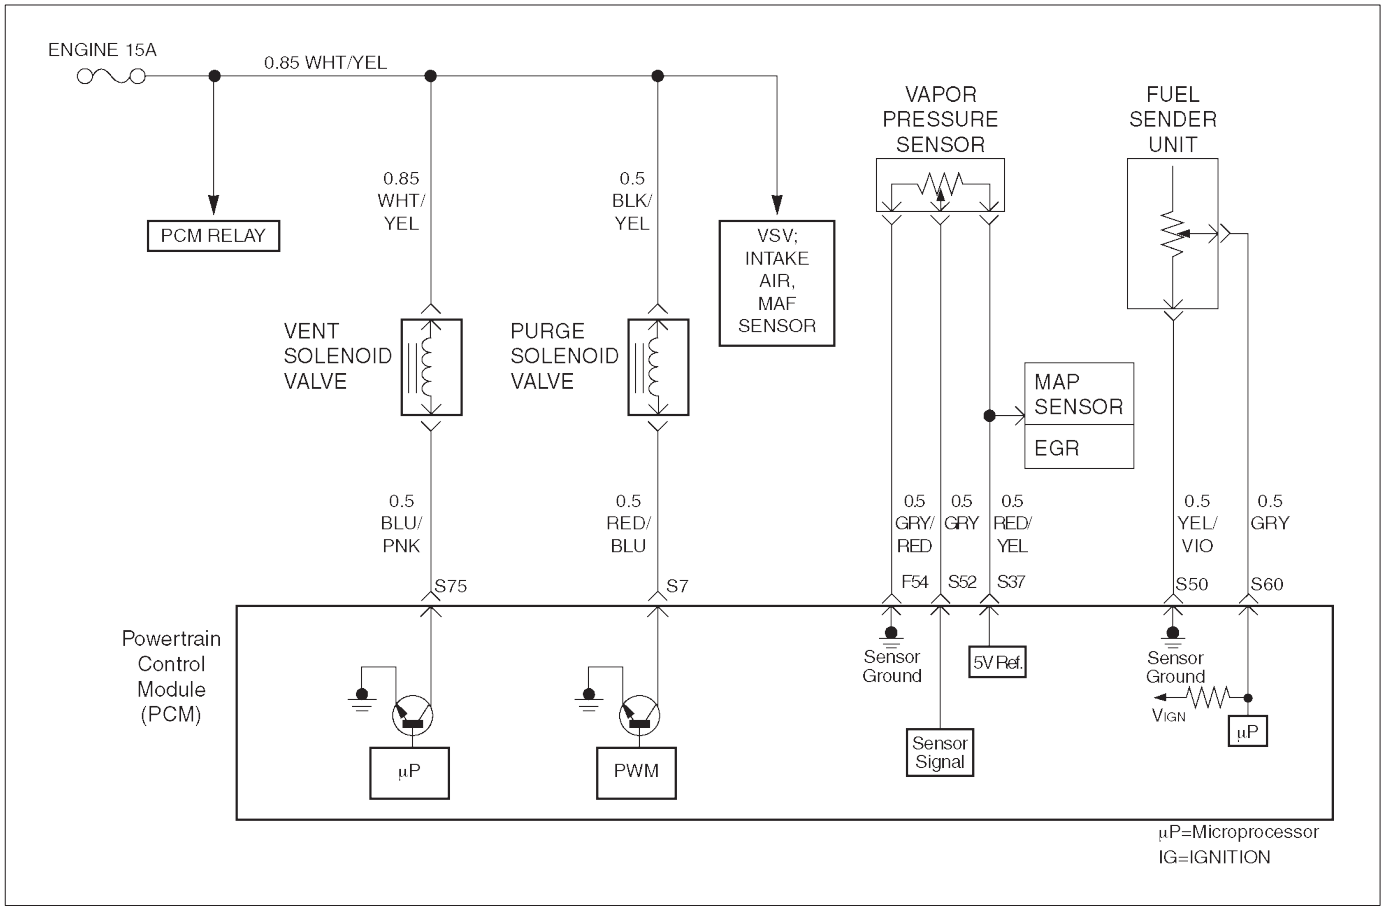Diagnostic Trouble Code (DTC) P0440 EVAP System



D06R200084

Circuit Description

The evaporative system includes the following components:

- Fuel tank
- EVAP canister purge duty solenoid valve
- Fuel tank (vapor) pressure sensor
- Fuel pipes and hoses
- Vapor lines
- Fuel cap
- Evaporative emissions canister
- Purge lines
- EVAP canister vent valve (purge solenoid)

The evaporative leak detection diagnostic strategy is based on applying vacuum to the EVAP system and monitoring vacuum decay. The powertrain control module (PCM) monitors vacuum level via the fuel tank pressure sensor input. At an appropriate time, the EVAP canister purge solenoid and the EVAP canister vent solenoid are turned “ON”, allowing engine vacuum to draw a small vacuum on the entire evaporative emissions system. If a sufficient vacuum level cannot be achieved, a large leak or a faulty EVAP canister purge solenoid is indicated. This can be caused by the following conditions:

- Disconnected or faulty fuel tank pressure sensor
- Missing or faulty fuel cap
- Disconnected, damaged, pinched, or blocked EVAP purge line
- Disconnected or damaged EVAP vent hose
- Disconnected, damaged, pinched, or blocked fuel tank vapor line
- Disconnected or faulty EVAP canister duty solenoid
- Open ignition feed circuit to the EVAP canister vent solenoid
- Damaged EVAP canister
- Leaking fuel sender assembly O-ring
- Leaking fuel tank or fuel filler neck

Any of the above conditions can set DTC P0440.

Conditions for Setting the DTC

- No TP sensor, IAT sensor, ECT sensor, or MAP sensor DTCs set.
- Start-up engine coolant temperature is less than 32˚C (90˚F).
- Start-up engine coolant temperature is not more than 7˚C (13˚F) greater than start-up intake air temperature.
- Start-up intake air temperature is greater than 4˚C (39˚F) .
- Start-up intake air temperature is not more than 2˚C (4˚F) greater than start-up engine coolant temperature.
- Vehicle speed is less than 5 mph (8 km/h).
- Throttle position is greater than 3%.
- Minimal fuel slosh.
- BARO is greater than 70 kPa.
- The EVAP system is unable to achieve or maintain vacuum during the diagnostic test.

- Engine speed is less than 1200 RPM.
- Above conditions are present for 60 to 180 seconds.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" when the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0440 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0440 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Cracked or punctured EVAP canister.
- Damaged or disconnected source vacuum line, EVAP purge line, vent hose or fuel tank vapor line.
- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness–Inspect the wiring harness to the EVAP canister vent solenoid, EVAP canister purge solenoid and the fuel tank pressure sensor for an intermittent open or short circuit.
- Kinked, pinched, or plugged vacuum source, EVAP purge, or fuel tank vapor line–Verify that the lines are not restricted.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. If an EVAP canister vent solenoid or an EVAP canister purge solenoid electrical fault is present, the purge system will not operate correctly. Repairing the electrical fault will very likely correct the condition that set DTC P0440.
3. Checks the fuel tank pressure sensor at ambient pressure.
4. Determines whether or not the EVAP system can be sealed sufficiently to be pressurized. If not, the large leak must be located and corrected before continuing with diagnosis.
5. Verifies that the fuel tank pressure sensor accurately reacts to EVAP system pressure changes.
8. Checks for a blocked EVAP canister purge solenoid. The PCM commands the EVAP canister purge solenoid "OFF" (open) and the vent solenoid "ON" (closed) with the Tech 2 "System Perf", EVAP output control function activated. Any pressure in the system should be released through the EVAP canister purge solenoid within a few seconds when "System Perf", is activated.
9. Ensures that sufficient source vacuum is present at the EVAP canister purge solenoid.


DTC P0440 – EVAP System

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Is DTC P0452 or P0453 also set?	—	Go to *other DTC first*	Go to *Step 3*
3	1. Ignition "OFF". 2. Remove the fuel cap. 3. Ignition "ON". 4. Observe "Fuel Tank Pressure" on the Tech 2. Does the Tech 2 indicate "Fuel Tank Pressure" at the specified value?	1.51 V	Go to *Step 4*	Go to *DTC P0452* or *DTC P0453*
4	1. Replace the fuel cap. 2. Engine is running. 3. Observe "Fuel Tank Vacuum" on the Tech 2. Does Tech 2 indicate "Fuel Tank Vacuum" at the specified value?	1.47–1.51 V	Go to *Step 5*	Go to *Step 6*

DTC P0440 – EVAP System (Cont'd)

Step	Action	Value(s)	Yes	No
5	Ignition "OFF". 1. Disconnect the fuel tank vapor line and the EVAP purge line from the EVAP canister. 2. Block the canister fitting for the fuel tank vapor line. 3. Connect a hand vacuum pump to the canister fitting for the EVAP purge line. 4. Ensure that the EVAP canister vent solenoid is still commanded "ON" (closed). 5. Attempt to apply vacuum to the EVAP canister. Observe "Fuel tank pressure" on the Tech 2. Does the Tech 2 indicate "Fuel tank pressure" at the specified value?	1.47–1.51 V	Go to *Step 8*	Go to *Step 7*
6	1. Visually/physically check for the following conditions: ● Restricted fuel tank vapor line. ● Restricted EVAP purge line. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *DTC P0452* or *DTC P0453*
7	1. Visually/physically check for the following conditions: ● Vent hose disconnected or the damaged. ● EVAP canister damaged. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
8	1. Visually/physically check for the following conditions: ● Missing or faulty fuel cap. ● Disconnected or leaking fuel tank vapor line. ● Disconnected or damaged EVAP purge line. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
9	Replace the EVAP canister purge solenoid. Is the action complete?	—	Verify repair	—
10	Locate and repair cause of no source vacuum to the EVAP canister purge solenoid. Is the action complete?	—	Verify repair	—
11	Replace the EVAP canister vent solenoid. Is the action complete?	—	Verify repair	—

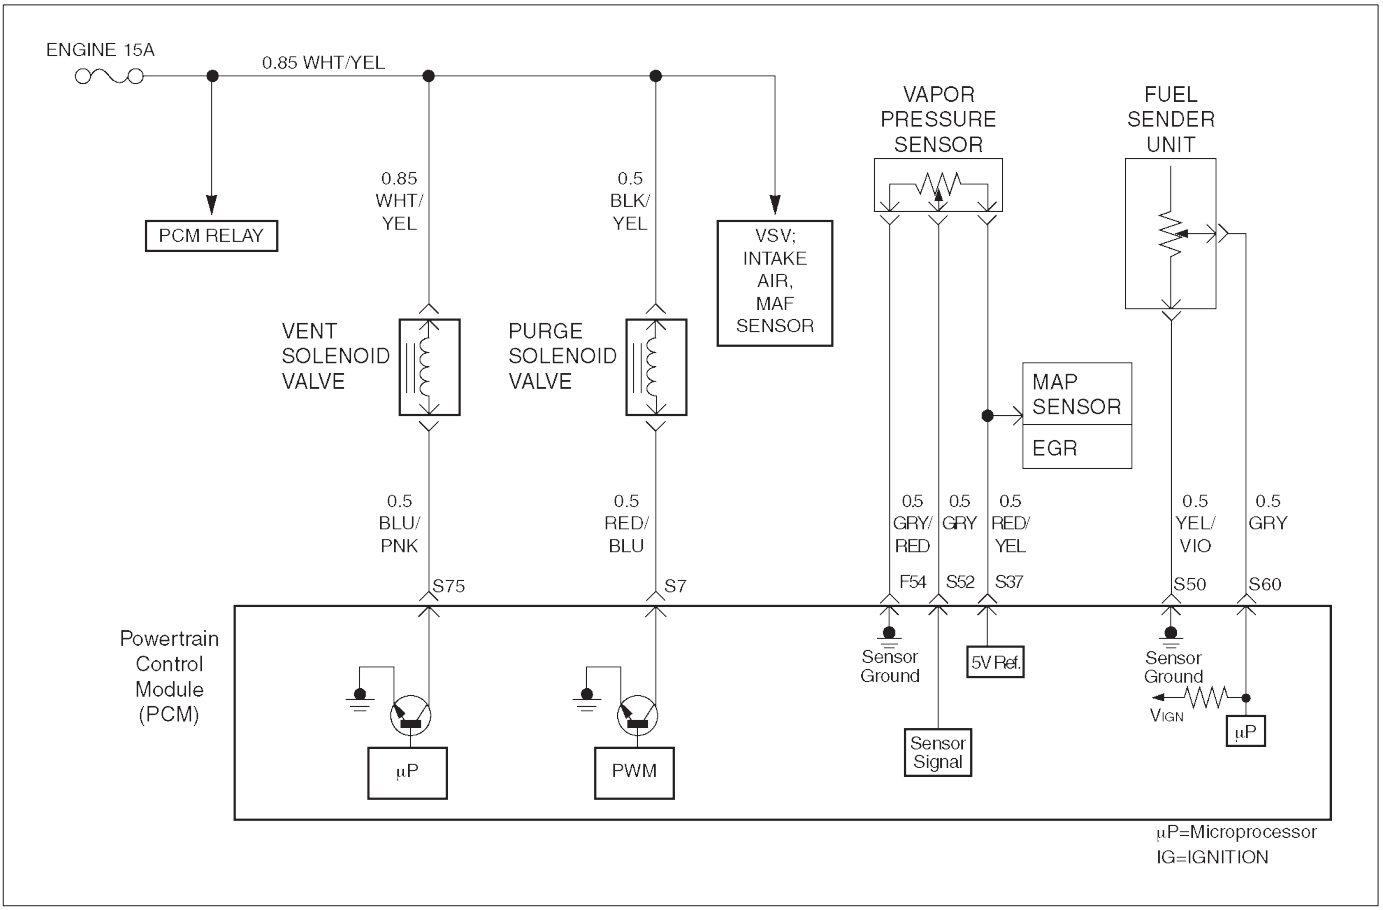Diagnostic Trouble Code (DTC)
P0442 EVAP System Small Leak Detected



D06R200084

Circuit Description

The evaporative system includes the following components:

- Fuel tank
- EVAP canister vent solenoid
- Fuel tank (vapor) pressure sensor
- Fuel pipes and hoses
- Vapor lines
- Fuel cap
- Evaporative emissions canister
- Purge lines
- EVAP canister purge solenoid

The evaporative leak detection diagnostic strategy is based on applying vacuum to the EVAP system and monitoring vacuum decay. The powertrain control module (PCM) monitors vacuum level via the fuel tank pressure sensor input. At an appropriate time, the EVAP canister purge solenoid and the EVAP canister vent solenoid are turned “ON”, allowing engine vacuum to draw a small vacuum on the entire evaporative emissions system. After the desired vacuum level has been achieved, the EVAP canister purge solenoid is turned “OFF”, sealing the system. A leak is detected by monitoring for a decrease in vacuum level over a given time period, all other variables remaining constant. A small leak in the system will cause DTC P0442 to be set.

Conditions for Setting the DTC

- No TP sensor, ECT sensor, Tank pressure sensor, IAT sensor, or MAP sensor DTCs set.
- BARO is more than 70 kPa.
- Engine speed is less than 1200 RPM.
- Fuel level is between 15% and 85%.
- Vehicle speed is less than 5 mph (8 km/h).
- The DTC P0440 diagnostic test has passed.
- A vacuum decay condition, indicating a small leak, is detected during the diagnostic test.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0442 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0442 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Cracked or punctured EVAP canister.
- Damaged source vacuum line, EVAP purge line, EVAP vent hose or fuel tank vapor line.
- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness–Inspect the wiring harness to the EVAP canister vent solenoid, EVAP canister purge solenoid and the fuel tank pressure sensor for an intermittent open or short circuit.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. If an EVAP canister vent solenoid or an EVAP canister purge solenoid electrical fault is present, the purge system will not operate correctly. Repairing the electrical fault will very likely correct the condition that set DTC P0442.
3. Checks the fuel tank pressure sensor at ambient pressure.
4. Verifies that the fuel tank pressure sensor accurately reacts to EVAP system pressure changes.


DTC P0442 – EVAP System Leak Detected

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “OFF”. 2. Remove the fuel cap. 3. Ignition “ON”. 4. Observe “Fuel Tank Pressure” on the Tech 2. Does the Tech 2 indicate “Fuel Tank Pressure” at the specified value?	1.51V	Go to *Step 3*	Go to *Fuel Tank Pressure System*
3	**IMPORTANT:** Before continuing with diagnosis, zero the EVAP pressure and vacuum gauges on EVAP pressure/purge cart J 41413 (refer to tool operating instructions). 1. Replace the fuel cap. 2. Capture Failure Records data for DTC P0442 and clear DTCs. 3. Connect the EVAP pressure/purge cart J 41413 to the EVAP service port. 4. Using the Tech 2, command the EVAP canister vent solenoid “ON” (closed). 5. Using the EVAP pressure/purge cart J 41413, pressurize the EVAP system to the specified value. 6. Observe “Fuel Tank Pressure” on the Tech 2. Does the Tech 2 indicate “Fuel Tank Pressure” at the specified value?	1.47V	Go to *Step 4*	Go to *Fuel Tank Pressure System*
4	1. Ignition “ON”, engine idling. 2. Using the Tech 2, command the EVAP canister vent solenoid “ON” (closed). 3. Using the EVAP pressure/purge cart J 41413, pressurize the EVAP system to 15 in. H_2O. 4. Switch the rotary switch on the cart to “HOLD” and observe the EVAP pressure gauge. Does the pressure decrease to less than the specified value within 2 minutes?	1.47 – 1.51V	Go to *Step 5*	Check the Procedure Refer to *Diagnostic Aids*

DTC P0442 – EVAP System Leak Detected (Cont'd)

Step	Action	Value(s)	Yes	No
5	1. Disconnect the fuel tank vapor line and the EVAP purge line from the EVAP canister. 2. Block the canister fitting for the fuel tank vapor line. 3. Connect a hand vacuum pump to the canister fitting for the EVAP purge line. 4. Ensure that the EVAP canister vent solenoid is still commanded "ON" (closed). 5. Attempt to apply vacuum to the EVAP canister. Can the vacuum be maintained at the specific value?	1.46V	Go to *Step 8*	Go to *Step 6*
6	1. Visually/physically check for the following conditions: ● Vent hose disconnected or damaged. ● EVAP canister damaged. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 10*	Go to *Step 7*
7	Replace the EVAP canister vent solenoid. Is the action complete?	—	Go to *Step 10*	—
8	1. Visually/physically check for the following conditions: ● Missing or faulty fuel cap. ● Disconnected or leaking fuel tank vapor line. ● Disconnected or damaged EVAP purge line. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 10*	Go to *Step 9*
9	1. Using Tech 2, command the EVAP canister vent solenoid "ON" (closed). 2. With the cart connected to the EVAP service port, continuously attempt to pressurize the EVAP system by leaving the cart control knob in the pressurize position. 3. Using ultrasonic leak detector J 41416, locate and repair leak in EVAP system. (It may be necessary to partially lower the fuel tank to examine the connections on top of the tank.) Is the action complete?	—	Go to *Step 10*	—
10	1. Ignition "ON", engine not running. 2. Using the Tech 2, command the EVAP canister vent solenoid "ON" (closed). 3. Using the EVAP pressure/purge cart J 41413, pressurize and monitor the EVAP system to 15 in. H_2O. 4. Switch the rotary switch on the cart to "HOLD" and observe the EVAP pressure gauge. Does the pressure decrease to less than the specified value within 2 minutes?	2.14V	Go to *Step 2*	Verify repair

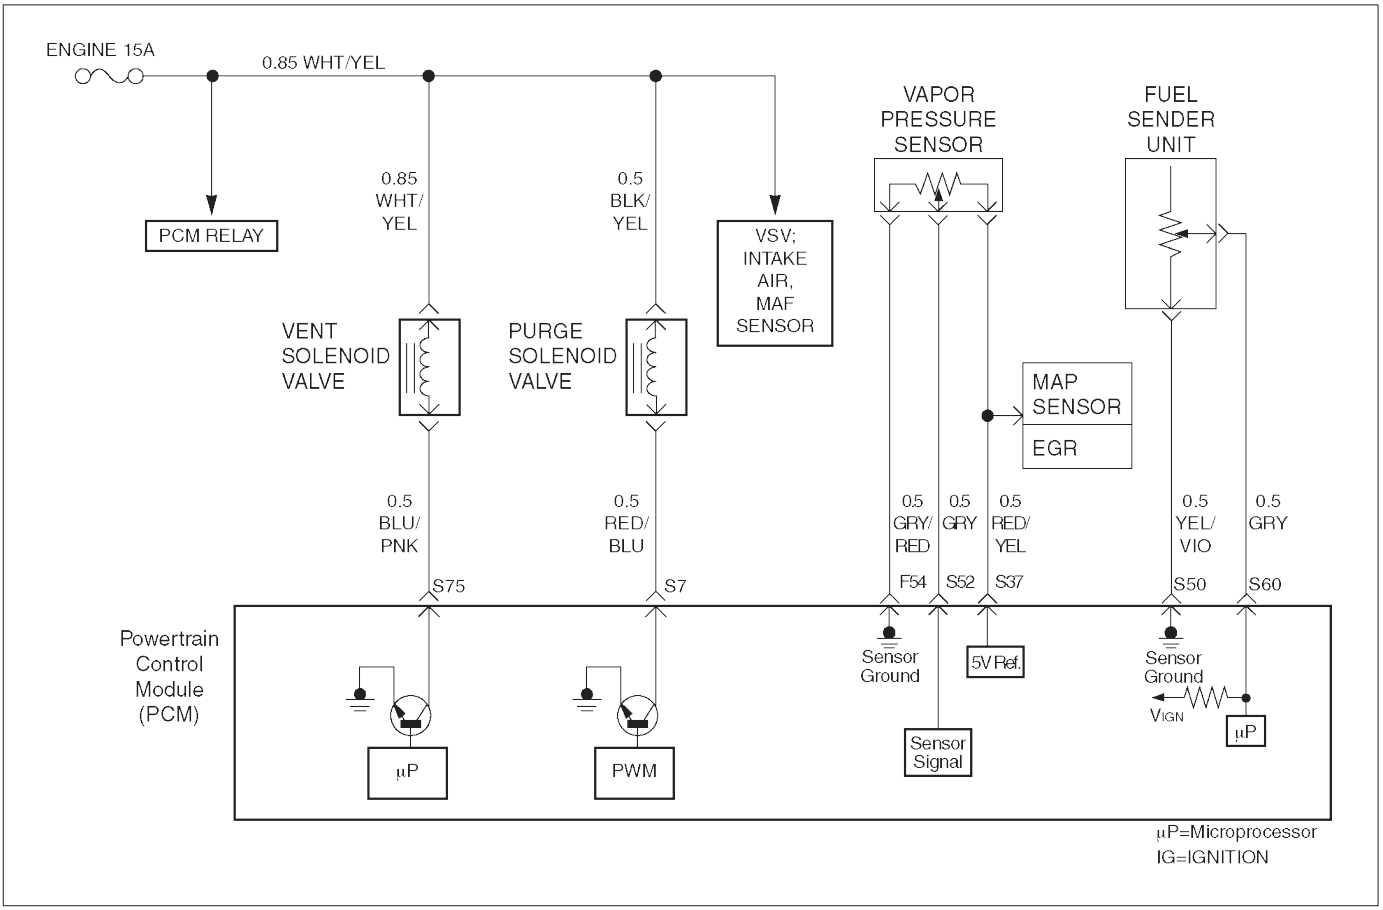Diagnostic Trouble Code (DTC)
P0444 EVAP Purge Control Circuit Open



D06R200084

Circuit Description

The canister purge solenoid valve is controlled by the Power Train Control Module (PCM).The PCM monitors vacuum level via the fuel tank pressure sensor input.
At an appropriate time, the EVAP canister purge solenoid is “ON,” allowing engine vacuum to draw a small vacuum on the entire evaporative emissions system.

Conditions for setting the DTC

- The Ignition is “ON”.
- Engine is running.
- System voltage is between 11.5 volts and 16 volts.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0444 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P0444 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the EVAP purge solenoid display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.


  A change in the display will indicate the location of the fault. If DTC P0444 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently, performing the DTC P0444 Diagnostic Chart may isolate the cause of the fault.

DTC P0444 EVAP Purge Control Circuit Open

Step	Action	Value(s)	Yes	No
1	Was the "On-Board (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Ignition is "ON", 3. Engine is "ON" and operate the accelerator pedal for 3 or 4 times. 4. Observe the EVAP purge solenoid reading on the Tech 2. Is the EVAP purge solenoid reading near the specified value?	More than 1%	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 3*
3	Check the power supply circuit. 1. Ignition is "OFF". 2. Disconnect the canister purge solenoid valve. 3. Ignition is "ON". 4. Using a DVM, measure at the EVAP purge solenoid connector between ground and voltage supply. Was the measurement near the specified value?	Battery voltage	Go to *Step 4*	Go to *Step 5*
4	Check the signal circuit for the EVAP purge solenoid. 1. Ignition is "OFF". 2. Disconnect the canister purge solenoid valve. 3. Disconnect the PCM. 4. Check the circuit between EVAP purge solenoid connector and PCM connector. Is the problem found?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the circuit as necessary. Is the action complete?	—	Verify repair	—
6	Check the canister purge solenoid valve. Using a DVM, measure resistance for purge solenoid valve connector terminal. Is the purge solenoid valve resistance within the specified values?	25–30 Ω (at 68˚F{20˚C})	Go to *Step 8*	Go to *Step 7*
7	Replace the canister purge solenoid valve. Is the action complete?	—	Verify repair	—
8	Replace the **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures*. And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

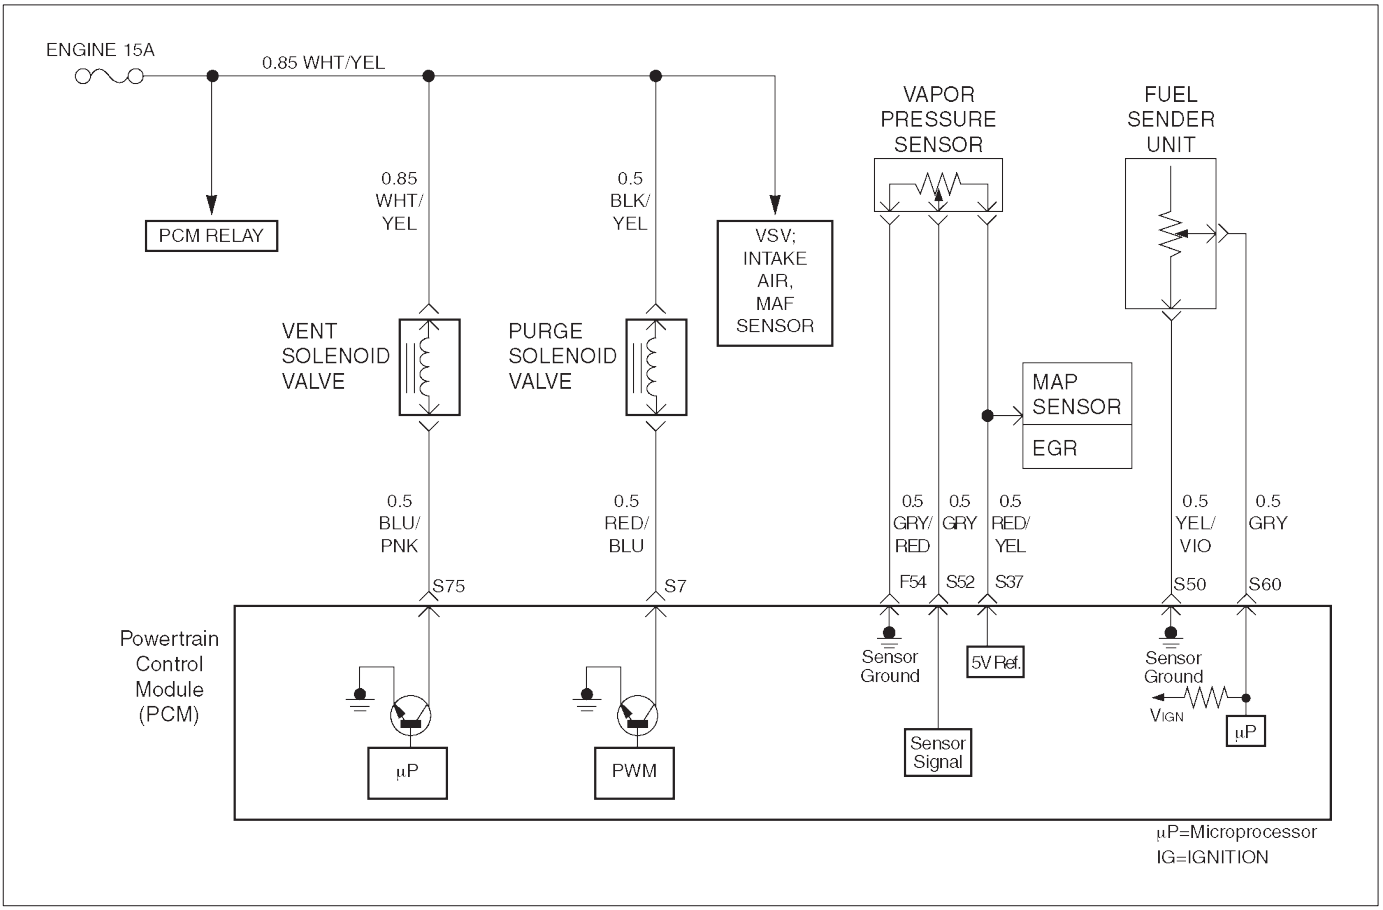Diagnostic Trouble Code (DTC)
P0445 EVAP Purge Control Circuit Short



D06R200084

Circuit Description

The canister purge solenoid valve is controlled by the Power Train Control Module (PCM). The PCM monitors vacuum level via the fuel tank pressure sensor input.
At an appropriate time, the EVAP canister purge solenoid is “ON,” allowing engine vacuum to draw a small vacuum on the entire evaporative emissions system.

Conditions for setting the DTC

- The Ignition is “ON”.
- Engine is running.
- System voltage is between 11.5 volts and 16 volts.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0445 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P0445 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the EVAP purge solenoid display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.


  A change in the display will indicate the location of the fault. If DTC P0445 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently, performing the DTC P0445 Diagnostic Chart may isolate the cause of the fault.

DTC P0445 EVAP Purge Control Circuit Short

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Ignition is “ON”, 3. Observe the EVAP purge solenoid reading on the Tech 2. Is the EVAP purge solenoid reading near the specified value?	0%	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 3*
3	Check the signal circuit for canister purge solenoid valve. 1. Ignition is “OFF”. 2. Disconnect the canister purge solenoid valve. 3. Disconnect the PCM. 4. Check the circuit between EVAP purge solenoid connector and PCM connector. Is the problem found?	—	Go to *Step 4*	Go to *Step 5*
4	Repair the circuit as necessary. Is the action complete?	—	Verify repair	—
5	Check the canister purge solenoid valve. Using a DVM, measure resistance for purge solenoid valve connector terminal. Is the purge solenoid valve resistance within the specified values?	25–30 (at 68˚F{20˚C})	Go to *Step 7*	Go to *Step 6*
6	Replace the canister purge solenoid valve. Is the action complete?	—	Verify repair	—
7	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

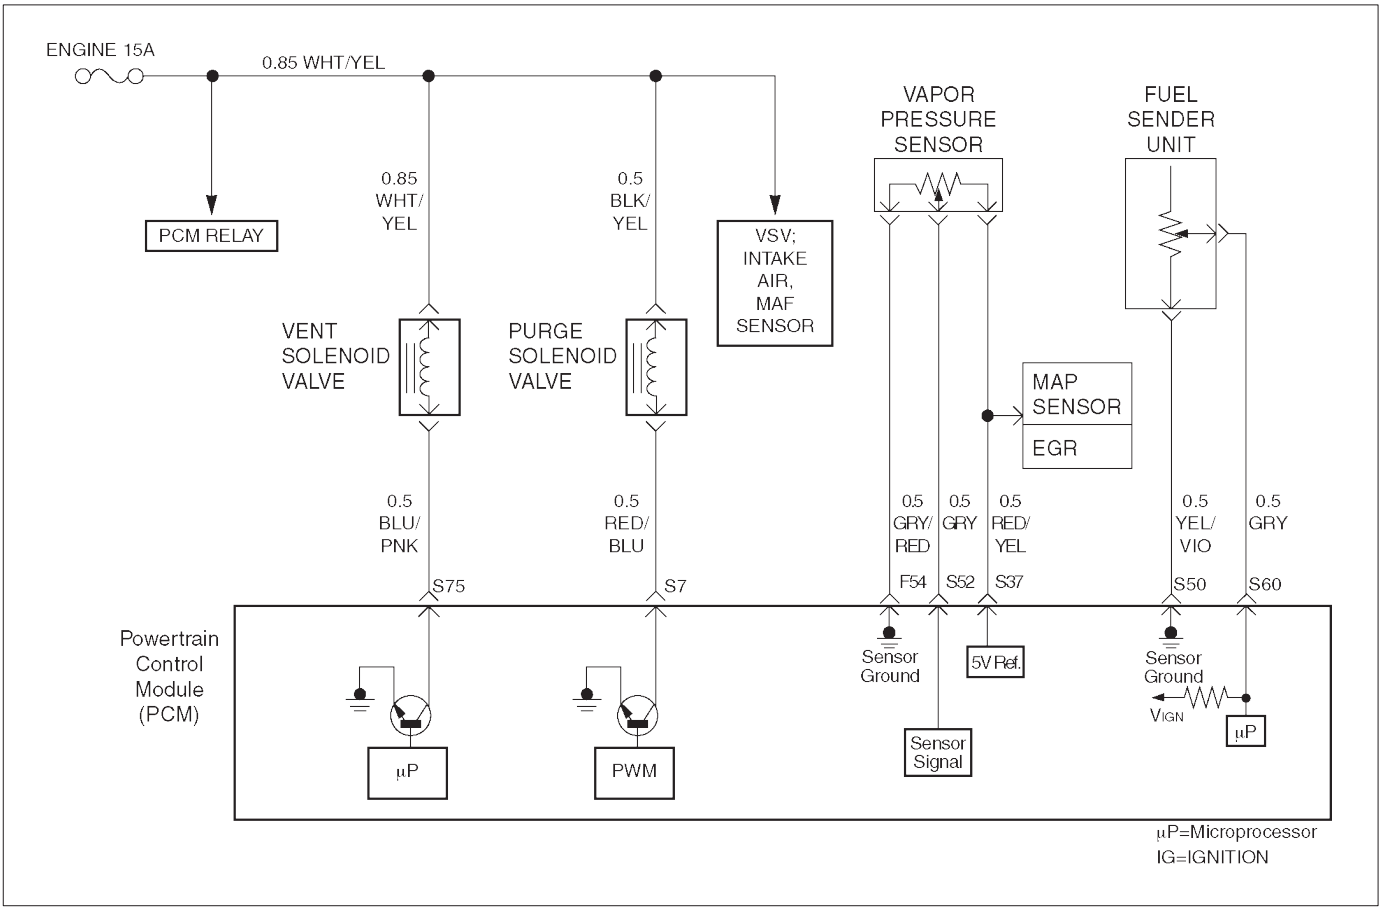Diagnostic Trouble Code (DTC)
P0446 EVAP Canister Vent Control Malfunction



D06R200084

Circuit Description

The evaporative system includes the following components:

- Fuel tank
- EVAP canister vent solenoid
- Fuel tank (vapor) pressure sensor
- Fuel pipes and hoses
- Vapor lines
- Fuel cap
- Evaporative emissions canister
- Purge lines
- EVAP canister purge solenoid

An incorrect fuel tank pressure sensor signal is detected by monitoring fuel tank pressure when the key is first turned “ON” during a cold start. If the fuel tank pressure signal is out of range, DTC P0446 will set. A restricted or blocked EVAP vent path is detected by monitoring fuel tank pressure during normal operation (EVAP canister vent solenoid open, EVAP canister purge solenoid normal). With the EVAP canister vent solenoid open, vacuum level in the system should be very low unless the vent path is blocked. A blockage can be caused by the following condition:

- Faulty EVAP canister vent solenoid (stuck closed).
- Plugged, kinked or pinched vent hose.
- Shorted EVAP canister vent solenoid driver circuit.
- Plugged evaporative canister.

If any of these conditions are present, DTC P0446 will set.

Conditions for Setting the DTC

- No TP sensor, ECT sensor, Tank pressure sensor, IAT sensor, or MAP sensor DTCs set.
- Start-up engine coolant temperature and start-up intake air temperature are more than 4˚C (39˚F) but less than 34˚C(93˚F).
- Start-up engine coolant temperature is not more than 7˚C (13˚F) greater than start-up intake air temperature.
- Fuel tank level is between 15% and 85%.
- BARO is greater than 70 kPa.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC set as Freeze Frame and Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0446 will clear after 40 consecutive warm-up cycles have occurred without a fault.

- DTC P0446 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness–Inspect the wiring harness to the EVAP canister vent solenoid, EVAP canister purge solenoid and the fuel tank pressure sensor for an intermittent open or short circuit.
- Kinked, pinched, or plugged vent hose–Verify that the vent hose between the EVAP canister and EVAP canister vent solenoid is not restricted.

  Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. If a vent solenoid electrical fault is present, the purge system will not operate correctly. Repairing the electrical fault will very likely correct the condition that set DTC P0446.
3. Checks the fuel tank pressure sensor at ambient pressure.
4. Verifies that the fuel tank pressure sensor accurately reacts to EVAP system pressure changes.
6. Checks for a blocked EVAP canister.


DTC P0446– EVAP Canister Vent Control Malfunction

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON." 2. Capture Failure Records data for DTC P0446 and clear DTCs. 3. Ignition "OFF." 4. Remove the fuel cap. 5. Ignition "ON." 6. Observe "Fuel Tank Pressure" on the Tech 2. Does Tech 2 indicate "Fuel Tank Pressure" at the specified value?	1.51V	Go to *Step 3*	Go to *Fuel Tank Pressure System*
3	**IMPORTANT:** Before continuing with diagnosis, zero the EVAP pressure and vacuum gauges on the EVAP pressure/purge cart J 41413 (refer to tool operating instructions). 7. Replace the fuel cap. 8. Using the Tech 2, command the EVAP vent solenoid "ON" (closed). 9. Connect the EVAP pressure/purge cart J 41413 to the EVAP service port. 10. Using the EVAP pressure/purge cart J 41413, pressurize the EVAP system to the specified value. 11. Observe "Fuel Tank Pressure" on the Tech 2. Does Tech 2 indicate "Fuel Tank Pressure" at the specified value?	1.52 – 1.69V	Go to *Step 4*	Go to *Fuel Tank Pressure System*
4	1. Maintain the EVAP pressure at 5 in. at H_2O. 2. Using Tech 2, command the EVAP vent solenoid "OFF" (open) while observing the EVAP pressure gauge on the cart J 41413. Does the EVAP pressure return to the specified value within 5 seconds?	0 in. H_2O	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 5*

DTC P0446– EVAP Canister Vent Control Malfunction (Cont'd)

Step	Action	Value(s)	Yes	No
5	1. Disconnect the large vent hose (marked "AIR") from the EVAP canister. 2. Switch the rotary switch on the cart J 41413 to "PURGE." 3. Ignition "ON," engine idling at normal operating temperature. 4. Observe vacuum gauge for 5 seconds while holding the engine speed at 2500 RPM. Does the vacuum remain less than the specified value?	30 in. H_2O	Go to *Step 6*	Go to *Step 8*
6	1. Inspect the vent hose between the EVAP canister and the EVAP canister vent solenoid for kinks, pinched areas, or any other form of blockage. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 9*	Go to *Step 7*
7	Replace the EVAP canister vent solenoid. Is the action complete?	—	Go to *Step 9*	—
8	Replace the EVAP canister. Is the action complete?	—	Go to *Step 9*	—
9	1. Using Tech 2, command the EVAP canister vent solenoid "ON" (closed). 2. Using the EVAP pressure/purge cart J 41413, pressurize and monitor the EVAP system to 15 in. H_2O. 3. Switch the rotary switch on cart J 41413 to "HOLD." 4. Using the Tech 2, command the EVAP canister vent solenoid "OFF" (open) while observing the EVAP pressure gauge on cart J 41413. Does the EVAP pressure return to the specified value within 30 seconds?	0 in. H^2O	Verify repair	Go to *Step 2*

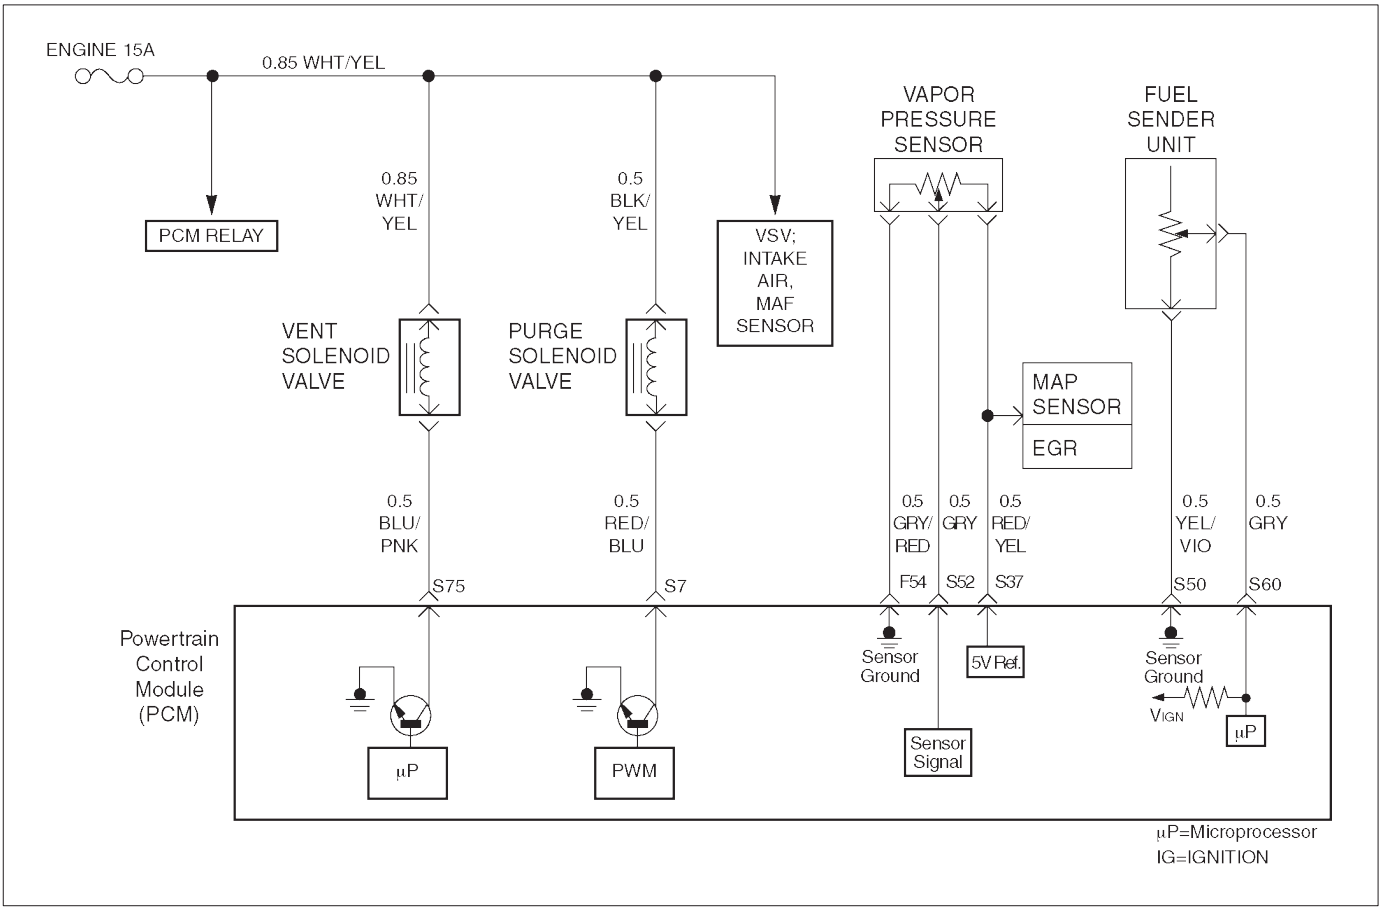Diagnostic Trouble Code (DTC)
P0447 EVAP Vent Solenoid Circuit Open



D06R200084

Circuit Description

The canister purge solenoid valve is controlled by the Power Train Control Module (PCM).The PCM monitors vacuum level via the fuel tank pressure sensor input. At an appropriate time, the EVAP canister vent solenoid is "ON," allowing engine vacuum to draw a small vacuum on the entire evaporative emissions system.

Conditions for setting the DTC

- The Ignition is "ON".
- Engine is running.
- System voltage is between 11.5 volts and 16 volts.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0447 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P0447 can be cleared using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the EVAP vent valve display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.


  A change in the display will indicate the location of the fault. If DTC P0447 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently, performing the DTC P0447 Diagnostic Chart may isolate the cause of the fault.

DTC P0447 EVAP Vent Solenoid Circuit Open

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Ignition is “ON”, 3. Engine is “ON”and operate the acceleration pedal for 3 or 4 times. 4. Observe the EVAP vent solenoid reading on the Tech 2. Is the EVAP vent solenoid reading to “ON”?	—	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 3*
3	Check the power supply circuit. 1. Ignition is “OFF”. 2. Disconnect the canister vent solenoid valve. 3. Ignition is “ON”. 4. Using a DVM, measure at the EVAP vent solenoid connector between ground and voltage supply. Was the measurement near the specified value?	Battery voltage	Go to *Step 4*	Go to *Step 5*
4	Check the signal circuit for vent solenoid valve. 1. Ignition is “OFF”. 2. Disconnect the canister vent solenoid valve. 3. Disconnect the PCM. 4. Check the circuit between EVAP vent solenoid connector and PCM connector. Is the problem found?	—	Go to *Step 5*	—
5	Repair the circuit as necessary. Is the action complete?	—	Verify repair	—
6	Check the canister vent solenoid valve. Using a DVM, measure resistance for vent solenoid valve connector terminal. Is the vent solenoid valve resistance within the specified values?	—	21.8-28.5Ω (at 68˚F{20˚C})	—
7	Replace the canister vent solenoid valve. Is the action complete?	—	Verify repair	—
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

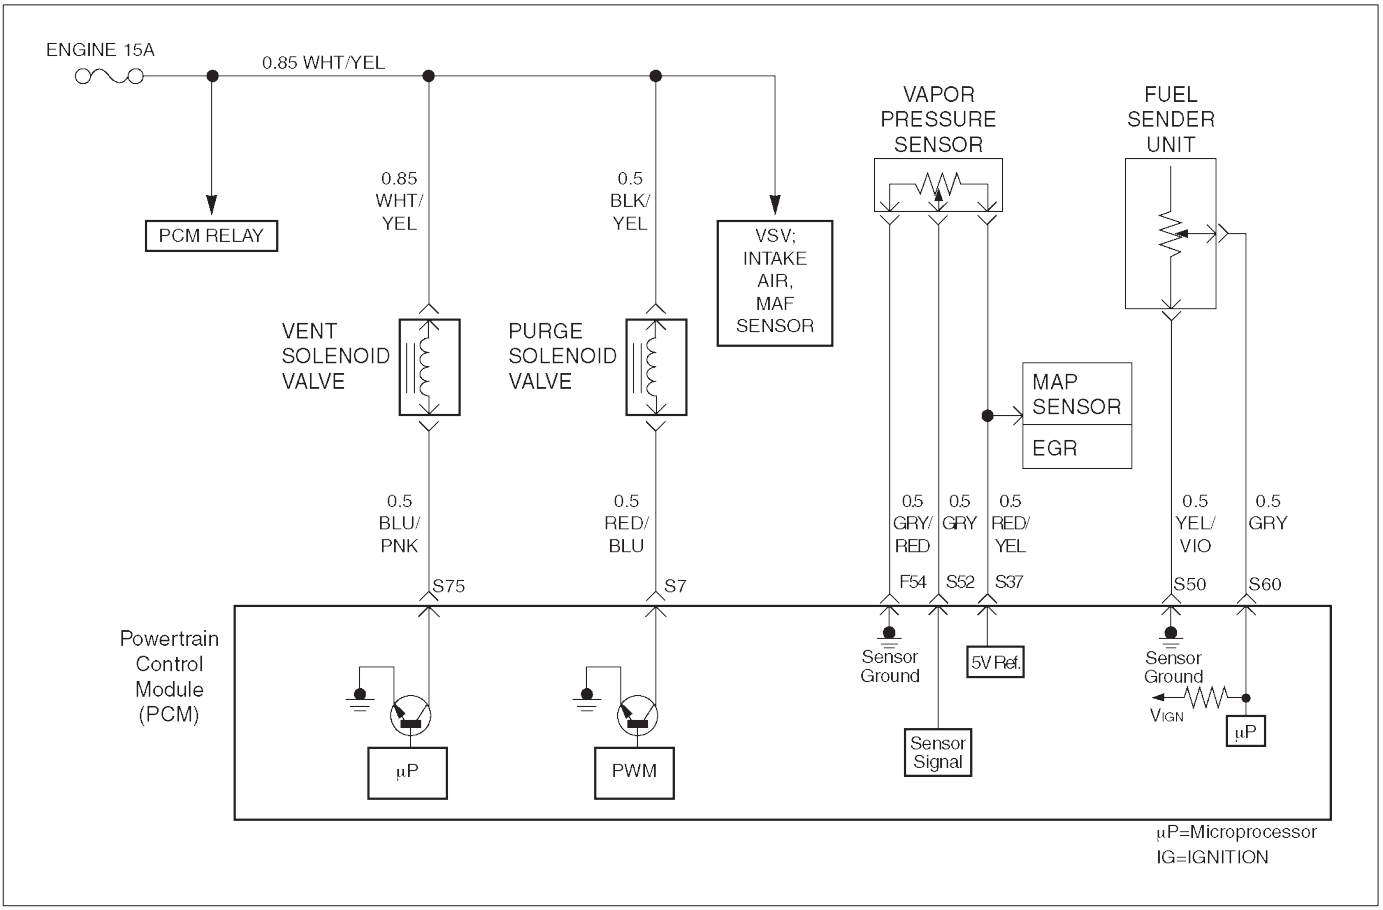Diagnostic Trouble Code (DTC)
P0448 EVAP Vent solenoid Circuit Short



D06R200084

Circuit Description

The canister purge solenoid valve is controlled by the Power Train Control Module (PCM). The PCM monitors vacuum level via the fuel tank pressure sensor input.
At an appropriate time, the EVAP canister vent solenoid is "ON," allowing engine vacuum to draw a small vacuum on the entire evaporative emissions system.

Conditions for setting the DTC

- The Ignition is "ON".
- Engine is running.
- System voltage is between 11.5 volts and 16 volts.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0448 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P0448 can be cleared using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the EVAP vent valve display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.


  A change in the display will indicate the location of the fault. If DTC P0448 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently, performing the DTC P0448 Diagnostic Chart may isolate the cause of the fault.

DTC P0448 EVAP Vent Solenoid Circuit Short

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Install the Tech 2. 2. Ignition is “ON”, 3. Observe the EVAP vent solenoid reading on the Tech 2. Is the EVAP vent solenoid reading near the specified value?	0%	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 3*
3	Check the signal circuit for canister vent solenoid valve. 1. Ignition is “OFF”. 2. Disconnect the canister vent solenoid valve. 3. Disconnect the PCM. 4. Check the circuit between EVAP vent solenoid connector and PCM connector. Is the problem found?	—	Go to *Step 4*	Go to *Step 5*
4	Repair the circuit as necessary. Is the action complete?	—	Verify repair	—
5	Check the canister vent solenoid valve. Using a DVM, measure resistance for purge solenoid valve connector terminal. Is the vent solenoid valve resistance within the specified values?	21.8-28.5Ω (at 68˚F{20˚C})	Go to *Step 7*	Go to *Step 6*
6	Replace the canister vent solenoid valve. Is the action complete?	—	Verify repair	—
7	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures. And also refer to latest Service Bulletin.* Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

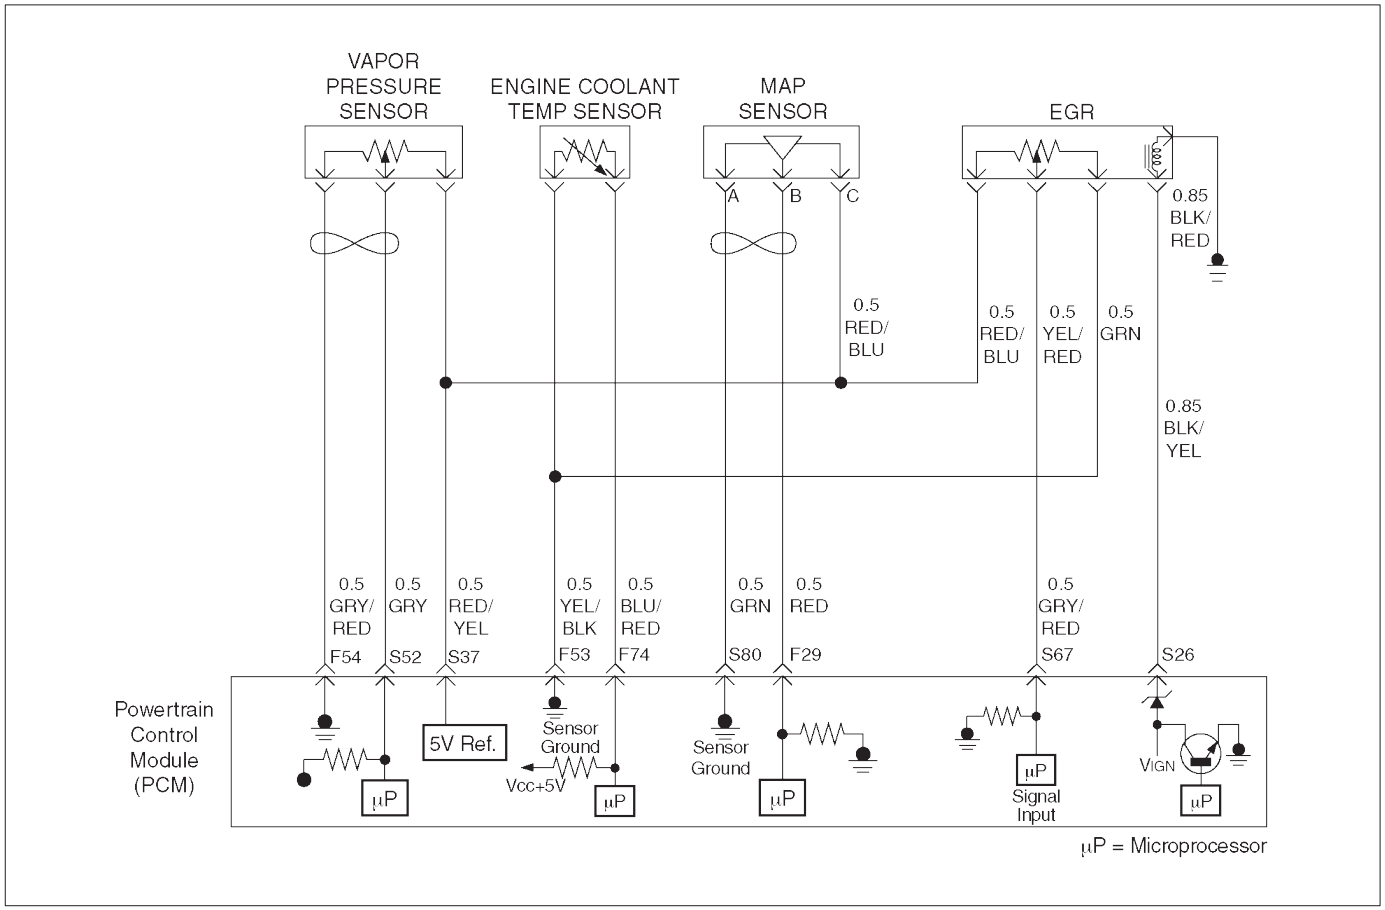Diagnostic Trouble Code (DTC)
P0452 Fuel Tank Pressure Sensor (Vapor Pressure Sensor) Low Voltage



D06R200087

Circuit Description

The powertrain control module (PCM) monitors fuel tank pressure sensor (Vapor pressure sensor) of the Enhanced Evap system. When the tank pressure output indicates low voltage, PCM will set DTC P0452.

Conditions for Setting the DTC

- Tank sensor output is less than 0.2 volts for 12.5 sec.
- 100 test failures within a 200 tests.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0402 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0404 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Open circuit of 5 volt reference line – Inspect wiring harness from PCM to the sensor. The PCM turns P0452, and P0107 at the same time.
- Open circuit or short circuit to ground line – Inspect wiring harness from PCM to the sensor. The PCM turns P0452 and P0107 at the same time.
- Tank fuel pressure sensor malfunction may cause P0452.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0452 – Tank Pressure Sensor Low Voltage

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”, review and record Tech 2 Failure Records Data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor “DTC” info for DTC P0452 until the DTC P0452 test runs. Note the result. Does the Tech 2 indicates DTC P0452 or P0452/P0107 failed this ignition?	—	P0452/P0107 turn on Go to *Step 3* P0452 turns on Go to *Step 6*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Ignition “OFF”. 2. Disconnect connector at the PCM. 3. Ignition “ON”. 4. At the PCM connector, measure voltage with a DVM at F54 and S37 terminals. Was the voltage in range?	4–6 V	Go to *Step 4*	Go to *Step 10*
4	1. Ignition “OFF”. 2. Connect the PCM connector to the PCM. 3. Backprobe with a DVM at fuel tank pressure sensor between 5 V reference terminal and sensor ground terminal. Was the voltage within range?	4–6 V	For P0452 go to *Step 5* and for P0107, go to diagnosis section.	Go to *Step 5*
5	1. Locate open wiring of 5 volt reference circuit from the PCM to fuel tank pressure sensor. 2. Repair wiring harness. Is the action complete?	—	Verify repair	—
6	1. Ignition “ON” 2. At the PCM connector, backprobe with a DVM at the sensor output for the voltage. Was voltage within the range?	Less than 0.2 V	Go to *Step 7*	Go to *Step 10*
7	At the sensor output terminal, backprobe with a DVM at the sensor output Was voltage within range?	Less than 0.2 V	Go to *Step 9*	Go to *Step 8*
8	1. Locate open circuit or short circuit to ground line. 2. Repair the harness. Is the action complete?	—	Verify repair	—

DTC P0452 – Tank Pressure Sensor Low Voltage (Cont'd)

Step	Action	Value(s)	Yes	No
9	1. Locate open circuit or short circuit to ground line. 2. Repair the harness. Is the action complete?	—	Verify repair	—
10	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

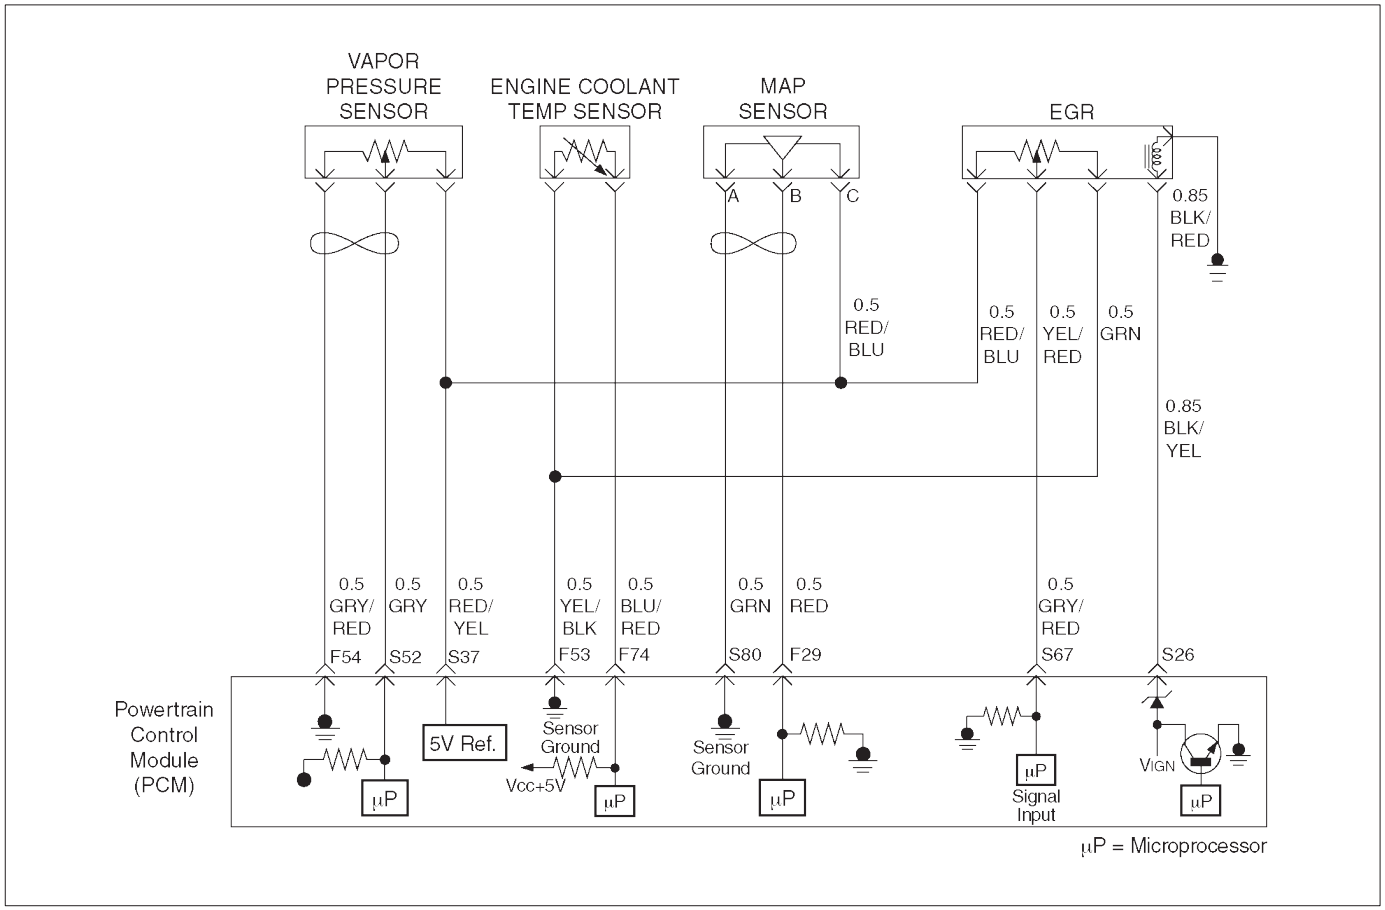Diagnostic Trouble Code (DTC)
P0453 Fuel Tank Pressure Sensor (Vapor Pressure Sensor) High Voltage



D06R200087

Circuit Description

The powertrain control module (PCM) monitors fuel tank pressure sensor (Vapor pressure sensor) of the Enhanced Evap system. When the tank pressure output indicates high voltage , PCM will set DTC P0453.

Conditions for Setting the DTC

- Tank sensor output is more than 4.9 volts for 12.5 sec.
- 100 test failures within a 200 tests.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0453 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- Info function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Open circuit of sensor ground line – Inspect wiring harness from PCM to the sensor. The PCM turns P0453, and P0108 at the same time.
- Open circuit or short circuit to 5 volt reference line – Inspect wiring harness from PCM to the sensor. The PCM turns P0453 and P0108 at the same time.
- Tank fuel pressure sensor malfunction may cause P0453.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0453 – Fuel Tank Pressure Sensor High Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF", review and record Tech 2 Failure Records Data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC" info for DTC P0453 until the DTC P0453 test runs. Note the result. Does the Tech 2 indicates DTC P0452 or P0452/P0107 failed this ignition?	—	P0453/P0108 turn on Go to *Step 3* P0452 turns on Go to *Step 6*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Ignition "OFF". 2. Disconnect connector at the PCM. 3. Ignition "ON". 4. At the PCM connector, measure voltage with a DVM at F54 and S37 terminals. Was the voltage in range of voltage?	4–6 V	Go to *Step 4*	Go to *Step 10*
4	1. Ignition "OFF". 2. Connect the PCM connector to the PCM. 3. Disconnect sensor harness at fuel pressure sensor. Measure voltage with a DVM at the end of the tank pressure wiring between 5 V reference terminal and sensor ground terminal. Was the voltage within range?	4–6 V	For P0453 go to *Step 6* and for P0108, go to diagnosis section.	Go to *Step 5*
5	1. Locate open wiring of ground line from the PCM to fuel tank pressure sensor. 2. Repair wiring harness. Is the action complete?	—	Verify repair	—
6	1. Ignition "ON". 2. At the PCM connector, backprobe with a DVM at the sensor output for the voltage. Was voltage within range?	More than 4.9 V	Go to *Step 7*	Go to *Step 10*
7	At the sensor output terminal, backprobe with a DVM at the sensor output. Was the voltage within range?	More than 4.9 V	Go to *Step 9*	Go to *Step 8*
8	1. Locate open circuit or short circuit to ground line. 2. Repair the harness. Is the action complete?	—	Verify repair	—

DTC P0453 – Fuel Tank Pressure Sensor High Voltage (Cont'd)

Step	Action	Value(s)	Yes	No
9	Replace the tank pressure sensor. Is the action complete?	—	Verify repair	—
10	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

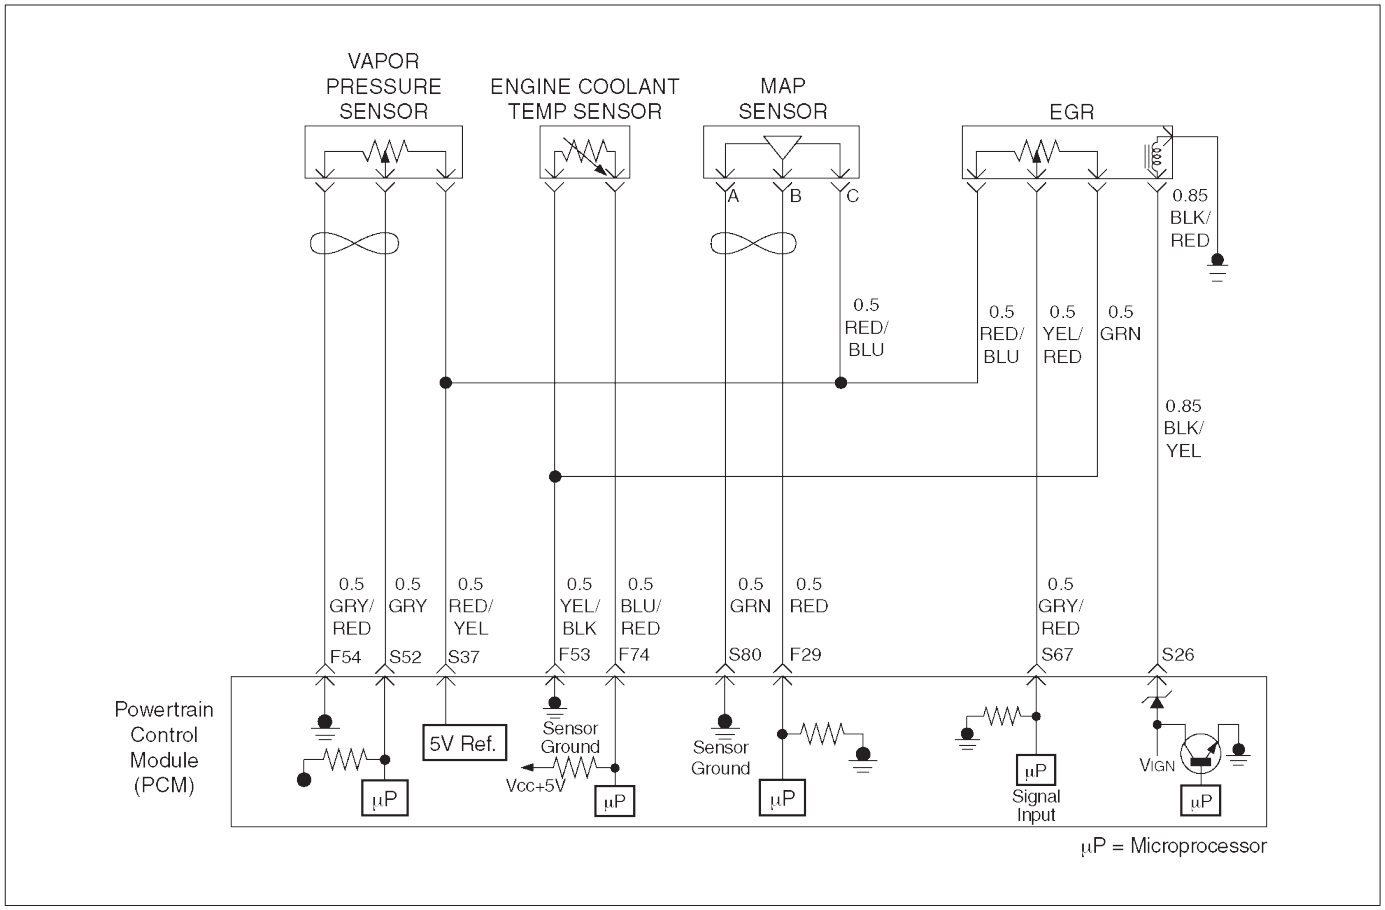Diagnostic Trouble Code (DTC) P0456 EVAP Very Small Leak



D06R200087

Circuit Description

The evaporative system includes the following components:

- Fuel tank
- EVAP canister vent solenoid
- Fuel tank (vapor) pressure sensor
- Vapor lines
- Fuel cap
- Evaporative emissions canister
- Purge lines
- EVAP canister purge solenoid

The evaporative leak detection diagnostic strategy is based on applying vacuum to the EVAP system and monitoring vacuum decay. The powertrain control module(PCM)monitors vacuum level via the fuel tank pressure sensor input. At an appropriate time, the EVAP canister purge solenoid and the EVAP canister vent solenoid are turned “ON”, allowing engine vacuum to draw a very small look on the entire evaporative emissions system. After the desired vacuum level has been achieved, the EVAP canister purge solenoid is turned “OFF”, sealing the system. A leak is detected by monitoring for a decrease in vacuum level over a given time period, all other variables remaining constant.

A very small leak in the system will cause DTC P0456 to be set.

Conditions for setting the DTC

- No MAP DTC’s set.
- No TPS DTC’s set.
- No IAT DTC’s set.
- No ECT DTC’s set.
- No tank pressure sensor DTC’s set.
- Baro is more than 70KPa.
- Fuel level is between 40% and 80%.
- Throttle angle is less than 3%.
- Engine speed is less than 1200 RPM.
- Vehicle speed is less than 5 mph (8 km/h).
- A vacuum decay condition, indicating a very small leak, is detected during the diagnostic test.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

  Warm up cycles have occurred without a fault.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.

- A history DTC P0456 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P0456 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Cracked or punctured EVAP canister.
- Damaged source vacuum line, EVAP purge line, EVAP vent hose or fuel tank vapor line. to wire connection.
- Poor connection at PCM–Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness to the EVAP canister purge solenoid and the fuel tank pressure sensor for an intermittent open or short circuit.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs.

This may assist in diagnosing the condition.


Diagnostic Trouble Code(DTC)P0456 EVAP Very Small Leak

Step	Action	Value(s)	Yes	No
1	Was the “On-Board(OBD)System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “OFF”. 2. Remove the fuel cap. 3. Ignition “ON”. 4. Observe “Fuel Tank Pressure” on the Tech 2. Does the Tech 2 indicate “Fuel Tank Pressure” at the specified value?	1.51V	Go to *Step 3*	Go to *Fuel Tank Pressure System*
3	1. Visually/physically check for the following conditions: • Vent hose disconnected or damaged. • EVAP canister damaged. • Fuel cap damaged 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 4*
4	1. Ignition “ON”, engine “OFF”. 2. Install the fuel cap. 3. Review and record Tech 2 Failure Records data. 4. Operate the vehicle within Failure Records conditions as noted. 5. Using theTech 2,monitor the “DTC” info for DTC P0456. Does the Tech 2 indicate DTC P0456?	—	Go to *Step 5*	Check the Procedure Refer to *Diagnostic Aids*
5	1. Ignition “ON”, engine idling. 2. Observe “Fuel Tank Pressure” on the Tech 2. Does the Tech 2 indicate “Fuel Tank Pressure” at the specified value?	—	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 6*

Diagnostic Trouble Code(DTC)P0456 EVAP Very Small Leak (Cont'd)

Step	Action	Value(s)	Yes	No
6	1. Ignition "ON", engine idling. 2. Using theTech 2, command the EVAP canister vent solenoid "ON" (closed) 3. Observe "EVAP canister vent solenoid operation" second value? 4. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Visually/physically check for the following conditions: ● Disconnected or leaking fuel tank vapor line. ● Disconnected or damaged EVAP purge line. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*

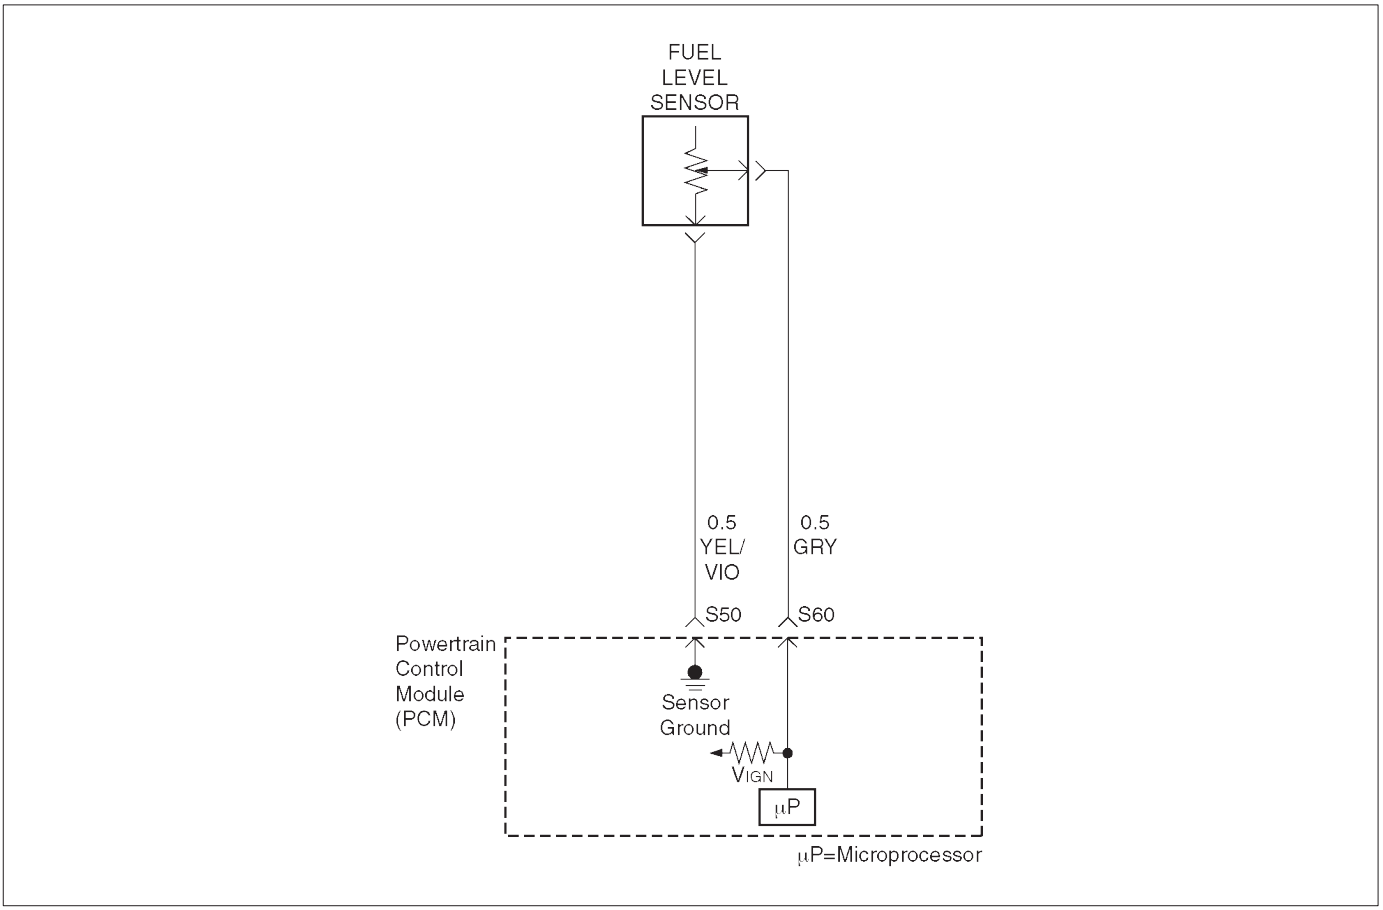Diagnostic Trouble Code (DTC)
P0461 Fuel Level Sensor Performance



D06R200091

Circuit Description

The fuel level sensor is an important input to powertrain control module (PCM) for the enhanced evaporative system diagnostic. Fuel level information is needed for the PCM to know the volume of fuel in the tank. The fuel level affects the rate of change in air pressure in the evaporative system.

The sending unit is a float in the fuel tank which moves a wiper arm across a variable resistor. Low fuel level causes high resistance in the sending unit, and this is recognized by the PCM because the circuit operates at a corresponding low voltage. When the circuit is continuously open or has a high resistance connection, DTC P0461 is set.

Conditions for Setting the DTC

- Sensor output change is more than 2% within 200km.
  Or Sensor movement position change is less than 15% within 200km.
- IAT is more than 0°C.
- MAP changing in 3 sec is less than 10kPa.
- Engine speed changing in 3 sec is less than 50rpm.

When there are 12 test failures within 80 test samples, it is stored.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the DTC

- DTC P0461 can be cleared by using the scan tool “Clear Info” function or by disconnecting the PCM battery feed.


Diagnostic Aids

- Damaged harness–Inspect the wiring harness for damage. If the harness appears to be OK, observe the fuel level display on the scan tool while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

DTC P0461– Fuel Level Sensor Performance

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “Off”, Engine “Off”. 2. Install Tech 2. 3. Ignition “On”, Engine “Off”. 4. Check DTC P0462, P0463. Was the DTC stored?	—	Go to *applicable DTC table*	Go to *Step 3*
3	Check DTC P0464. Was the DTC stored?	—	Go to *DTC P464 table*	Go to *Step 4*
4	1. Ignition “Off”, Engine “Off”. 2. Replace the fuel level sensor. Was the action complete?	—	Verify repair	—

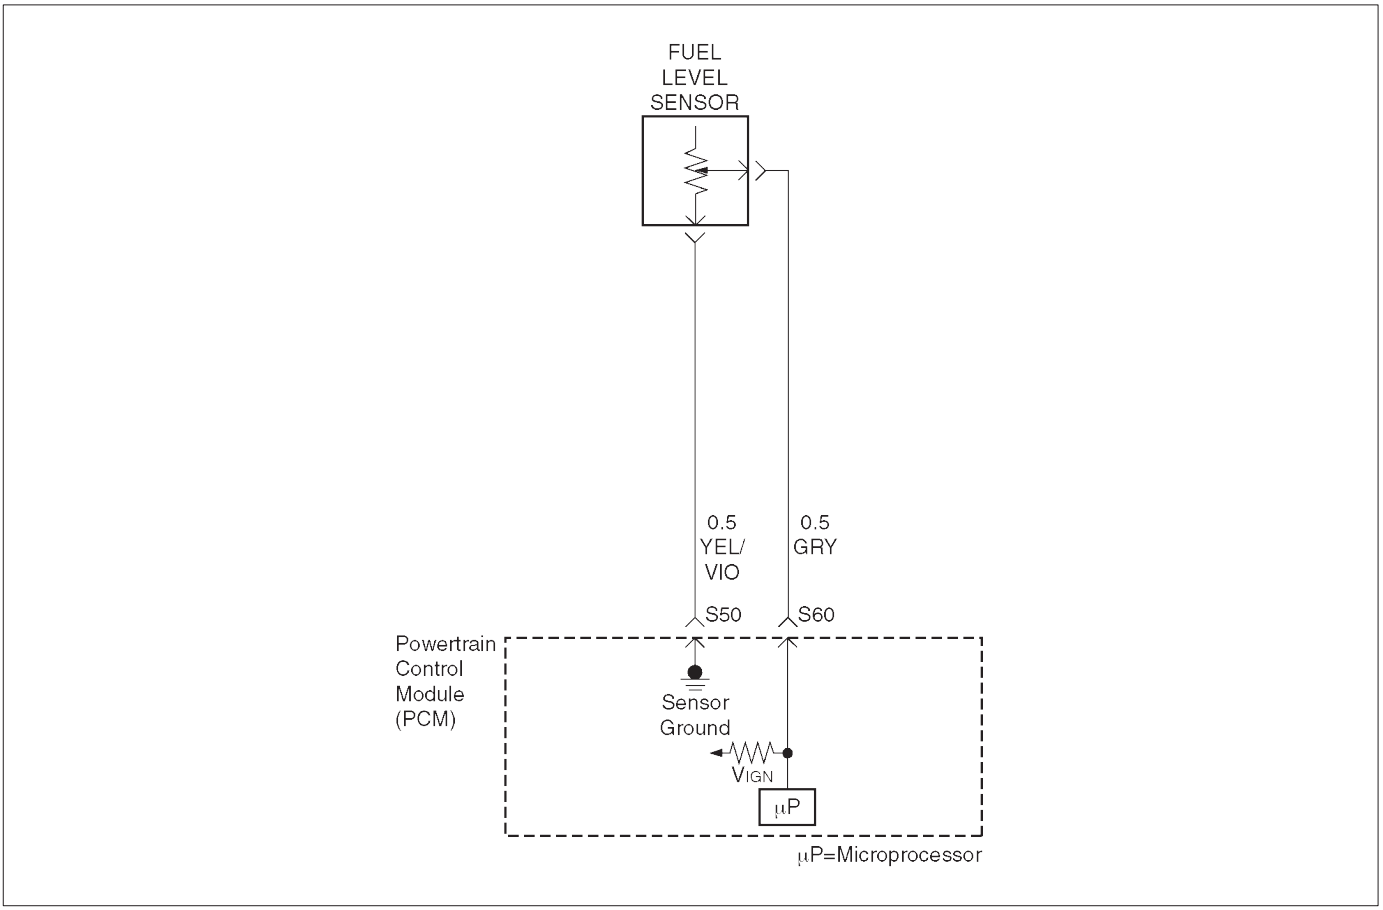Diagnostic Trouble Code (DTC)
P0462 Fuel Level Sensor Circuit–Low Voltage



D06R200091

Circuit Description

The fuel level sensor is an important input to powertrain control module (PCM) for the enhanced evaporative system diagnostic. Fuel level information is needed for the PCM to know the volume of fuel in the tank. The fuel level affects the rate of change in air pressure in the evaporative system. Several of the enhanced evaporative system diagnostic sub-tests are dependent upon correct fuel level information. The diagnostic will not run when the tank is more than 85% or less than 15% full. Fuel level DTCs should be diagnosed before other evaporative system DTCs because they can cause other DTCs to be set.

The sending unit is a float in the fuel tank which moves a wiper arm across a variable resistor. Low fuel level causes high resistance in the sending unit, and this is recognized by the PCM because the circuit operates at a corresponding low voltage. When the circuit is continuously open or has a high resistance connection, DTC P0462 is set.

Conditions for Setting the DTC

- Fuel tank level “slosh test” is completed.
- Fuel tank level “main test” is completed.
- Fuel tank level data is valid.
- Fuel tank level signal is less than a specified value.
- There are 100 test failures within a 200-test sample.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the DTC

- The PCM will turn the MIL “OFF” after three consecutive trips without a fault condition present. A history DTC will be cleared if no fault conditions have been detected for 40 warm-up cycles (engine coolant temperature has risen 4˚C (40˚F) from the start-up ECT, and ECT exceeds 71˚C (160˚F) during that same ignition cycle).
- DTC P0462 can be cleared by using the scan tool “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

- Damaged harness–Inspect the wiring harness for damage. If the harness appears to be OK, observe the fuel level display on the scan tool while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

8. The following chart can be used to check the sending unit:


DTC P0462– Fuel Level Sensor Circuit –Low Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Disconnected the fuel level sensor harness from its connector at the fuel tank. 2. Ignition "ON", engine "OFF". 3. Using a DVM, measure the voltage between the sensor harness positive and ground wires. Is the voltage approximately equal to the specified value?	5 V	Go to *Step 6*	Go to *Step 3*
3	1. Ignition "ON", engine "OFF". 2. With a DVM, backprobe the PCM connector at the terminal which supplies 5 volts to the fuel level sensor. Is the voltage approximately equal to the specified value?	5 V	Go to *Step 4*	Go to *Step 9*
4	1. Ignition "ON", engine "OFF". 2. Fuel level sensor disconnected from wiring harness. 3. With a DVM, probe the 5-volt supply wire at the sensor harness. Is the voltage approximately equal to the value measured in Step 4?	—	Go to *Step 5*	Go to *Step 9*
5	Check for open or high resistance connection in the ground wire between the PCM and the fuel level sensor. Is the action complete?	—	Verify repair	—
6	Remove the fuel level sensor and check the following: • Does the arm move freely? • Are the wires open or intermittently open when wiggled? • Do the resistance values match the specification chart? Was a problem found?	—	Go to *Step 7*	Go to *Step 9*
7	Replace the fuel level sensor. Is the action complete?	—	Verify repair	—

DTC P0462– Fuel Level Sensor Circuit –Low Voltage (Cont'd)

Step	Action	Value(s)	Yes	No
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
9	Short to ground between the PCM connector and the fuel level sensor. Is the action complete?	—	Verify repair	—

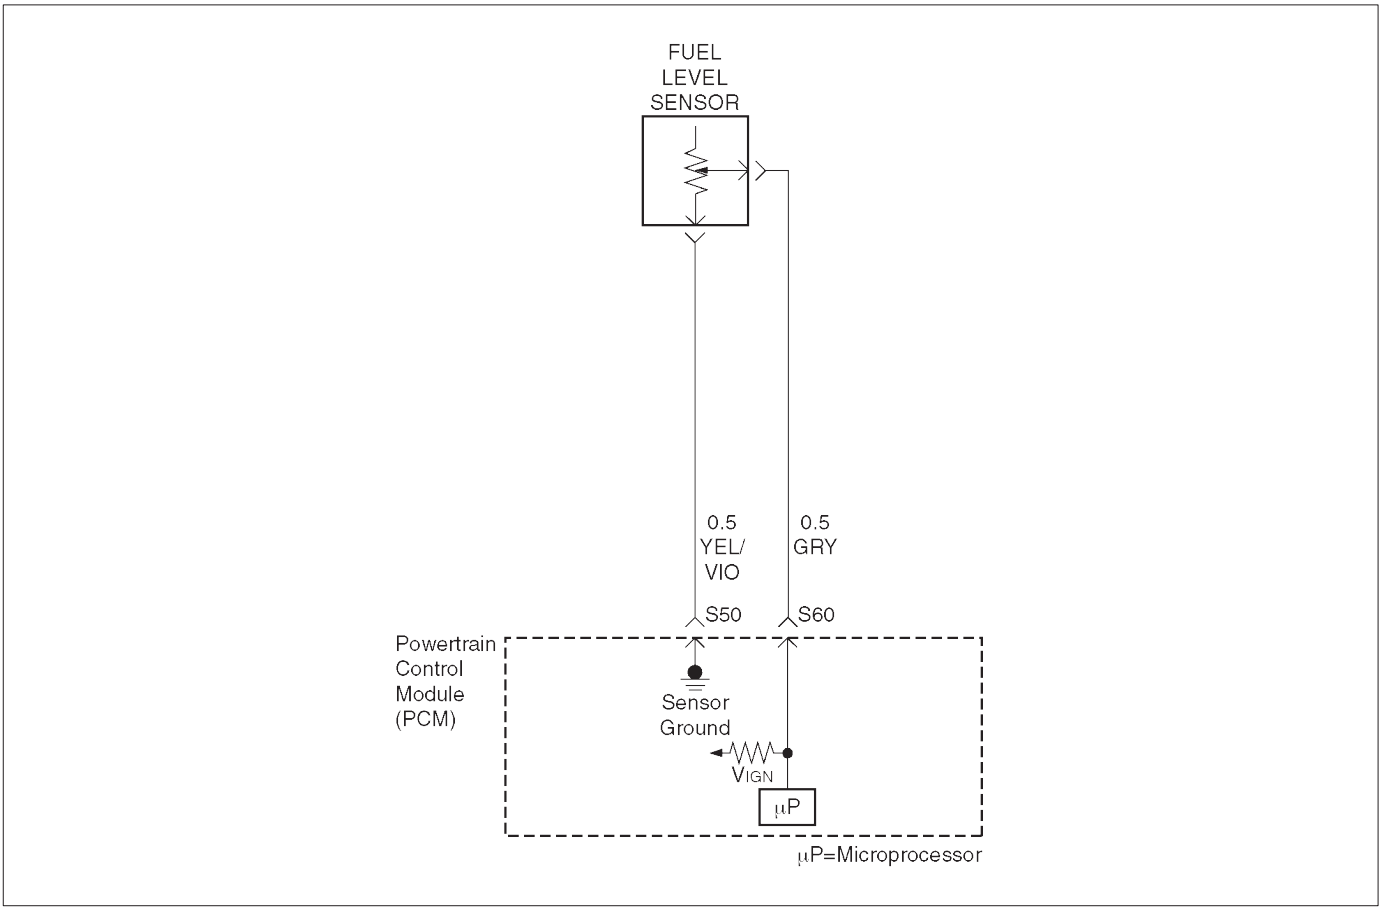Diagnostic Trouble Code (DTC)
P0463 Fuel Level Sensor Circuit–High Voltage



D06R200091

Circuit Description

The fuel level sensor is an important input to powertrain control module (PCM) for the enhanced evaporative system diagnostic. Fuel level information is needed for the PCM to know the volume of fuel in the tank. The fuel level affects the rate of change in air pressure in the evaporative system. Several of the enhanced evaporative system diagnostic sub-tests are dependent upon correct fuel level information. The diagnostic will not run when the tank is more than 85% or less than 15%, full. Fuel level DTCs should be diagnosed before other evaporative system DTCs because they can cause other DTCs to be set.

The sending unit is a float in the fuel tank which moves a wiper arm across a variable resistor. High fuel level causes low resistance in the sending unit. This is recognized by the PCM because the circuit operates at a corresponding high voltage. When the circuit is continuously shorted to a voltage source greater than a specified value, or when the 5 volt signal is shorted to ground, DTC P0463 is set.

Conditions for Setting the DTC

- Fuel tank level “slosh test” is completed.
- Fuel tank level “main test” is completed.
- Fuel tank level data is valid.
- Fuel tank level signal is greater than a specified value.
- There are 100 test failures within a 200-test sample.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the DTC

- The PCM will turn the MIL “OFF” after three consecutive trips without a fault condition present. A history DTC will be cleared if no fault conditions have been detected for 40 warm-up cycles (engine coolant temperature has risen 4˚C (40˚F) from the start-up ECT, and ECT exceeds 71˚C (160˚F) during that same ignition cycle) or the scan tool clearing function has been used.
- DTC P0463 can be cleared by using the scan tool “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

- Damaged harness–Inspect the wiring harness for damage. If the harness appears to be OK, observe the fuel level display on the scan tool while moving connectors and wiring harnesses related to the sensor.

A change in the display will indicate the location of the fault.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.


2. The ETC and MAP sensors share a ground at PCM terminal D9.

9. Equates the resistance values at various float positions to the following fuel gauge readings:

DTC P0463– Fuel Level Sensor Circuit –High Voltage

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Disconnected the fuel level sensor harness from its connector at the fuel tank. 2. Ignition “ON”, engine “OFF”. 3. Using a DVM, measure the voltage between the sensor harness positive and ground wires. Is the voltage approximately equal to the specified value?	5 V	Go to *Step 8*	Go to *Step 3*
3	With the negative DVM lead connected to ground, use the positive DVM lead to probe the sensor ground wire with the harness still disconnected. Does the DVM indicate a short to a voltage source?	—	Go to *Step 4*	Go to *Step 5*
4	Repair short to voltage between the sensor and the PCM. Is the repair complete?	—	Verify repair	—
5	With the negative DVM lead connected to ground, use the positive DVM lead to probe the sensor positive wire with the harness still disconnected. Does the DVM indicate a voltage greater than the specified value?	5 V	Go to *Step 4*	Go to *Step 6*
6	Open circuit between the PCM connector and the fuel level sensor?	—	Verify repair	Go to *Step 7*
7	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—
8	Remove the fuel level sensor and check the following: • Does the arm move freely? • Are the wire leads shorted together? • Do the resistance values match the specification chart? Was a problem found?	—	Go to *Step 9*	Go to *Step 7*
9	Replace the fuel level sensor. Is the repair complete?	—	Verify repair	—

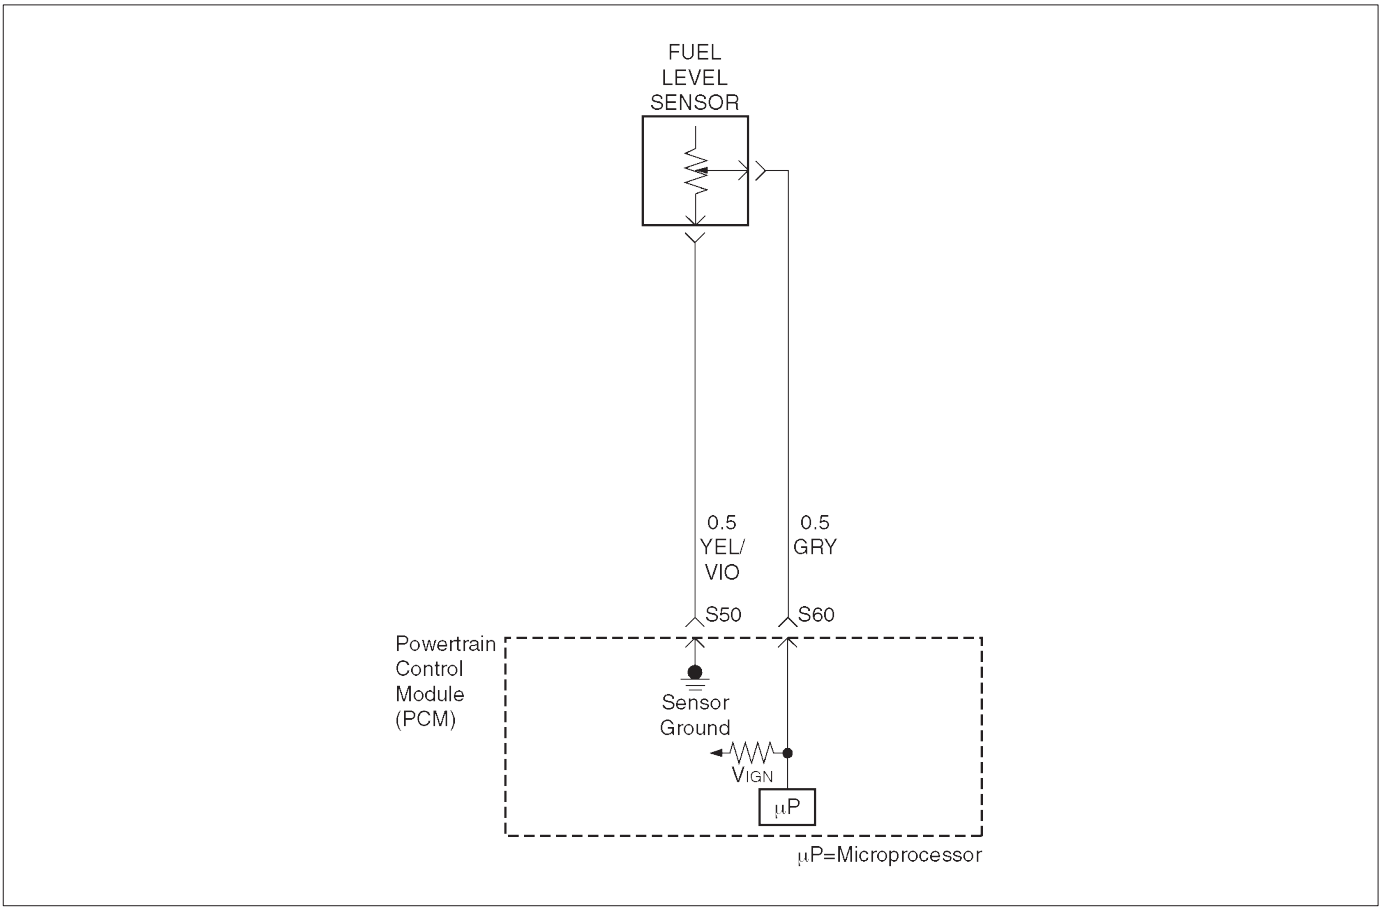Diagnostic Trouble Code (DTC)
P0464 Fuel Level Sensor Noisy Signal



D06R200091

Circuit Description

The fuel level sensor is an important input to powertrain control module (PCM) for the enhanced evaporative system diagnostic. Fuel level information is needed for the PCM to know the volume of fuel in the tank. The fuel level affects the rate of change in air pressure in the evaporative system.

The sending unit is a float in the fuel tank which moves a wiper arm across a variable resistor. Low fuel level causes high resistance in the sending unit, and this is recognized by the PCM because the circuit operates at a corresponding low voltage. When the circuit is continuously open or has a high resistance connection, DTC P0464 is set.

Conditions for Setting the DTC

- Sensor output changing is more than 15%.
- Fuel volume level is more than 0.01%.
- IAT is more than 0°C.
- Vehicle speed is more than 1km/h.
- Throttle position is more than 2%.

When there are 12 test failures within 80 test samples, it is stored.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the DTC

- DTC P0464 can be cleared by using the scan tool “Clear Info” function or by disconnecting the PCM battery feed.


Diagnostic Aids

- Damaged harness–Inspect the wiring harness for damage. If the harness appears to be OK, observe the fuel level display on the scan tool while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

DTC P0464 – Fuel Level Sensor Noisy Signal

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “Off”, Engine “Off”. 2. Perform “Visual/Physical Check” for following points. ● Lose harness connector ● Clacked harness connector ● Poor wire condition ● Fuel tank condition ● Poor sensor condition 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 3*
3	1. Disassemble fuel tank on the vehicle. 2. Check the below items. ● Fuel sender Was a problem found?	—	Go to *Step 4*	Go to *Step 5*
4	Replace the Fuel sender. Was the action complete?	—	Verify repair	Go to *Step 5*
5	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Was the action completed?	—	Verify repair	—

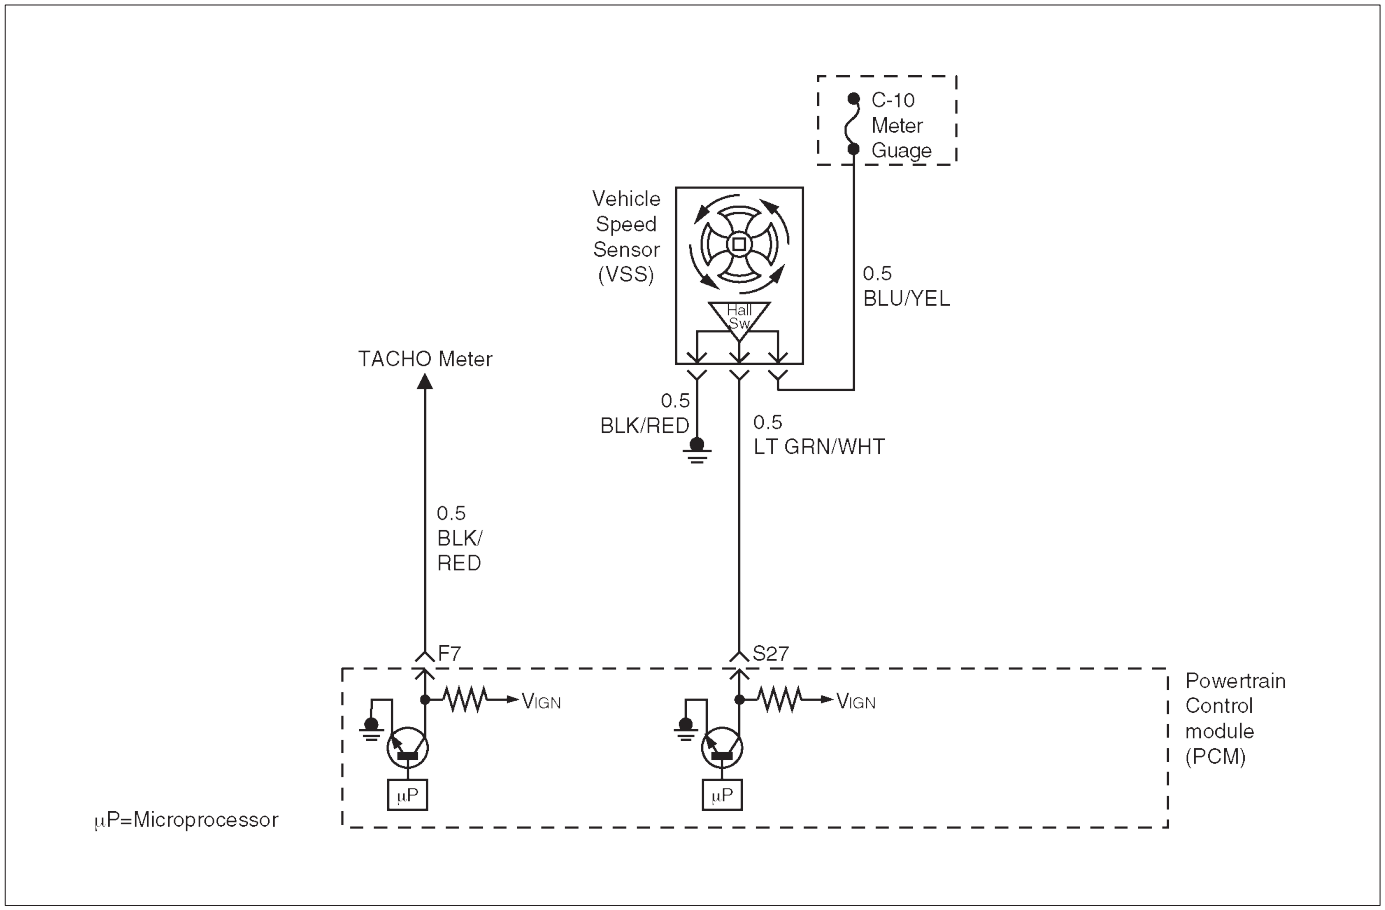Diagnostic Trouble Code (DTC) P0502 VSS Circuit Low Input



D06RY00070

Circuit Description

The vehicle speed sensor has a magnet rotated by the transmission output shaft. Attached to the sensor is a hall effect circuit the interacts with the magnetic field treated by the rotating magnet. A 12-volt operating supply for the speed sensor hall circuit is supplied from the meter fuse. The VSS pulses to ground the 9-volt signal sent from the powertrain control module (PCM) on the reference circuit. The PCM interprets vehicle speed by the number of pulses to ground per second on the reference circuit.

Conditions for Setting the DTC

- Engine is running.
- Engine speed is between 1800 RPM and 2500 RPM.
- Throttle angle is between 10% and 40%.
- Engine load is greater than 50 kPa.
- PCM detects no VSS signal for 12.5 seconds over a period of 15 seconds.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0502 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0502 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

10. To avoid backprobing the VSS and possibly damaging a seal or terminal, the VSS output can be tested at the point where the transmission harness connects to the engine harness. Power and ground are applied by jumpers to the VSS through the connectors which are located to the rear of the air cleaner assembly. The VSS signal is monitored with a DVM as the rear driveshaft turns. The wheels can be turned to rotate the driveshaft, or in 2-wheels-drive vehicles the driveshaft can be turned directly.


DTC P0502 – VSS Circuit Low Input

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Does the speedometer work?	—	Go to *Step 10*	Go to *Step 3*
3	1. Disconnect the VSS connector. 2. Ignition “ON”. 3. Using a test light to battery +, probe the connector ground wire. Did the light illuminate?	—	Go to *Step 5*	Go to *Step 4*
4	Repair the sensor ground. Is the action complete?	—	Verify repair	—
5	1. Ignition “ON”, sensor disconnected. 2. Using a DVM, measure at the VSS connector between ground and voltage supply. Was the measurement near the specified value?	Battery voltage	Go to *Step 7*	Go to *Step 6*
6	Repair the open or short to ground which may have blown the meter fuse. Is the action complete?	—	Verify repair	—
7	1. Ignition “ON”, VSS disconnected. 2. Using a DVM, measure at the VSS connector between ground and the wire from the speedometer. Was the measurement near the specified value?	7.5-8 V	Go to *Step 9*	Go to *Step 8*
8	Check for an open or short circuit between the speedometer and the VSS. Was an open or short circuit located?	—	Verify repair	Go to *Step 9*
9	Replace the speedometer. Is the action complete?	—	Verify repair	—

DTC P0502 – VSS Circuit Low Input (Cont'd)

Step	Action	Value(s)	Yes	No
10	1. Ignition "OFF". 2. Disconnect the MAF sensor. The connector attaches the VSS wires from the transmission harness to the left-side engine harness. 3. Disconnect the black 16-way connector. 4. Select a terminal adapter from kit J 35616 that can be used with a jumper to supply B+ to the blue wire with a yellow tracer (transmission side of the connector). 5. Use another terminal adapter to attach a voltmeter to the light-green wire with a white tracer (next to the wire in the previous step.) 6. Disconnect the blue connector next to the black 16-way connector, and locate the black/red tracer wire at one corner of the blue connector. The black/red wire is the VSS ground. Use a terminal adapter to attach a jumper to ground to the black/red VSS ground wire at the transmission side of the blue connector. 7. Raise the rear wheels off the ground with transmission in neutral. Does the DVM toggle back and forth between 0.6 V and 10 V as the wheels (and driveshaft) are rotated?	—	Go to *Step 11*	Go to *Step 12*
11	Replace the VSS. Is the action complete?	—	Verify repair	—
12	Check for an open or short between the PCM and the speedometer. Was a problem found?	—	Verify repair	Go to *Step 13*
13	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

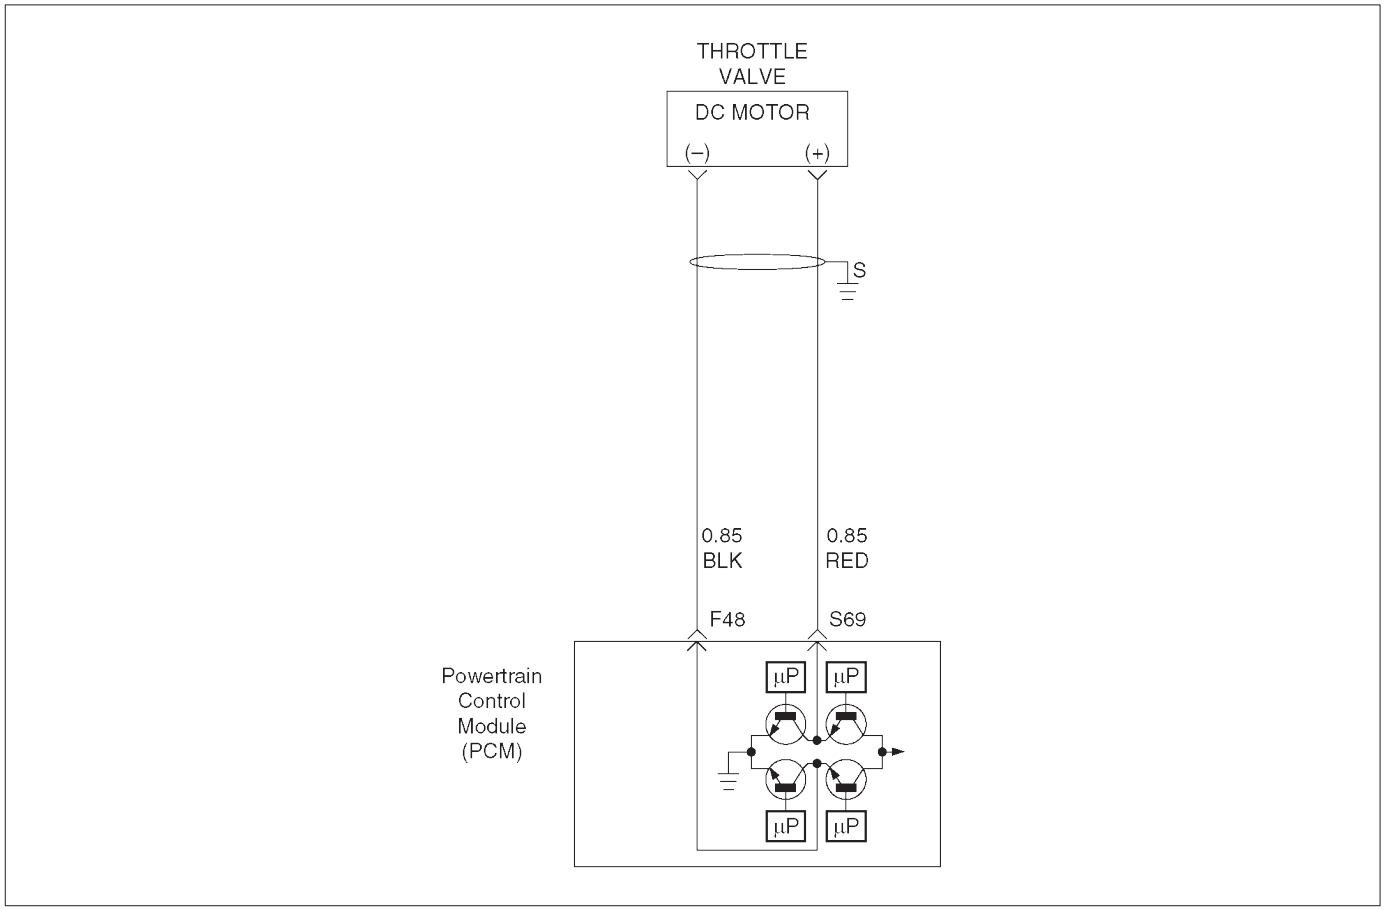Diagnostic Trouble Code (DTC)
P0506 Idle Air Control System Low RPM



D06RY00158

Circuit Description

The powertrain control module (PCM) controls engine speed by adjusting the position of the throttle control valve (DC motor). The throttle motor is a DC motor driven by one coil. The PCM applies current to the DC motor coil in position (%) to adjustment the throttle valve into a passage in the throttle body to air flow. This method allows highly accurate control of engine speed and quick response to changes in engine load.

If the PCM detects a condition where too low of an idle speed is present and the PCM is unable to adjust idle speed by increasing the throttle position, DTC P0506 will set, indicating a problem with the idle control system.

Conditions for Setting the DTC

- No TPS, VSS, ECT, EGR, MAF, MAP, IAT, low voltage, fuel system, canister purge, injector control, or ignition control DTCs are set.
- MAP is less than 60 kPa.
- Canister purge duty cycle is above 10%.
- Engine running time is more than 125 seconds.
- Vehicle speed is less than 1 mph.
- Engine coolant temperature (ECT) is above 50°C (122°F).
- Ignition voltage is between 9.5 volts and 16.7 volts.
- The throttle is closed.
- EVAP purge duty cycle more than 10%.
- All conditions are met for 10 seconds.
- Barometric pressure is more than 74.5 kPa.
- Engine speed is more than 100-200 RPM lower than desired idle based upon coolant temperature.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- DTC P0506 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM or throttle DC motor – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage.

- Restricted air intake system – Check for a possible collapsed air intake duct, restricted air filter element, or foreign objects blocking the air intake system.
- Throttle body – Check for objects blocking the ETC passage or throttle bore, excessive deposits in the ETC passage and on the ETC position, and excessive deposits in the throttle bore and on the throttle plate.
- Large vacuum leak – Check for a condition that causes a large vacuum leak, such as an incorrectly installed or faulty PCV valve or brake booster hose disconnected.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0506 – Idle Air Control System Low RPM

Step	Action	Value(s)	Yes	No
1	Was the "On-Board (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Visually/physically inspect for the following conditions: • Throttle body tampering. • Restricted intake throttle system. Check for a possible collapsed air intake duct, restricted air filter element, or foreign objects blocking the air intake system. • Throttle body: Check for objects blocking the throttle passage or throttle bore, excessive deposits in the throttle passage and on the throttle valve, and excessive deposits in the throttle bore and on the throttle plate. • Throttle body with lever: Check for objects send round the throttle spring lever that lever is smooth movement, and spring lever has not excessive play Do any of the above require a repair?	—	Refer to *appropriate section for on–vehicle service*	Go to *Step 3*
3	Visually/physically inspect for the following conditions: • Acceleration pedal tampering. • Acceleration pedal : Check for objects blocking the spring or pedal arm. • Acceleration pedal : Check for objects move the acceleration pedal that pedal is smooth movement, and acceleration pedal arm has not excessive play. Do any of the above require a repair?	—	Refer to *appropriatesection for on-vehicle service*	Go to *Step 4*
4	1. Check for a poor connection at the throttle body harness connector. 2. Check for a poor connection at the acceleration position sensor harness connector. 3. If a problem is found, replace faulty terminals as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*
5	Check the following circuits for an open, short to voltage, short to ground, or poor connection at the PCM: • Throttle position sensor 1 circuit. • Throttle position sensor 2 circuit. • Throttle DC motor circuit. • Throttle position sensor resistance. • Throttle DC motor resistance. • If a problem is found, repair as necessary. Was a problem found?	Vcc-GND 1–7kΩ SIG-DND change resistance0.3 – 100Ω	Verify repair	Go to *Step 6*

DTC P0506 – Idle Air Control System Low RPM (Cont'd)

Step	Action	Value(s)	Yes	No
6	Replace the throttle valve. Is the action complete?	——	Go to *Step 7*	——
7	1. Check the following circuits for an open, short to voltage, short to ground, or poor connection at the PCM: Accelerator position sensor 1 circuit. Accelerator position sensor 2 circuit. Sensor resistance. 2. If a problem is found, repair as necessary. Was a problem found?	Vcc-GND 4–6kΩ SIG-DND change resistance	Verify repair	Go to *Step 8*
8	Replace the acceleration position sensor. Is the action complete?	——	Go to *Step 9*	——
9	Following below the DTCs stored: P1125, P1290, P1295, P1299	——	Go to *applicable DTC table*	Go to *Step 10*
10	Following below the DTCs stored:P1514, P1515, P1516, P1523, P1271, P1272, P1273	——	Go to *applicable DTC table*	Go to *Step 11*
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	——	Verify repair	——

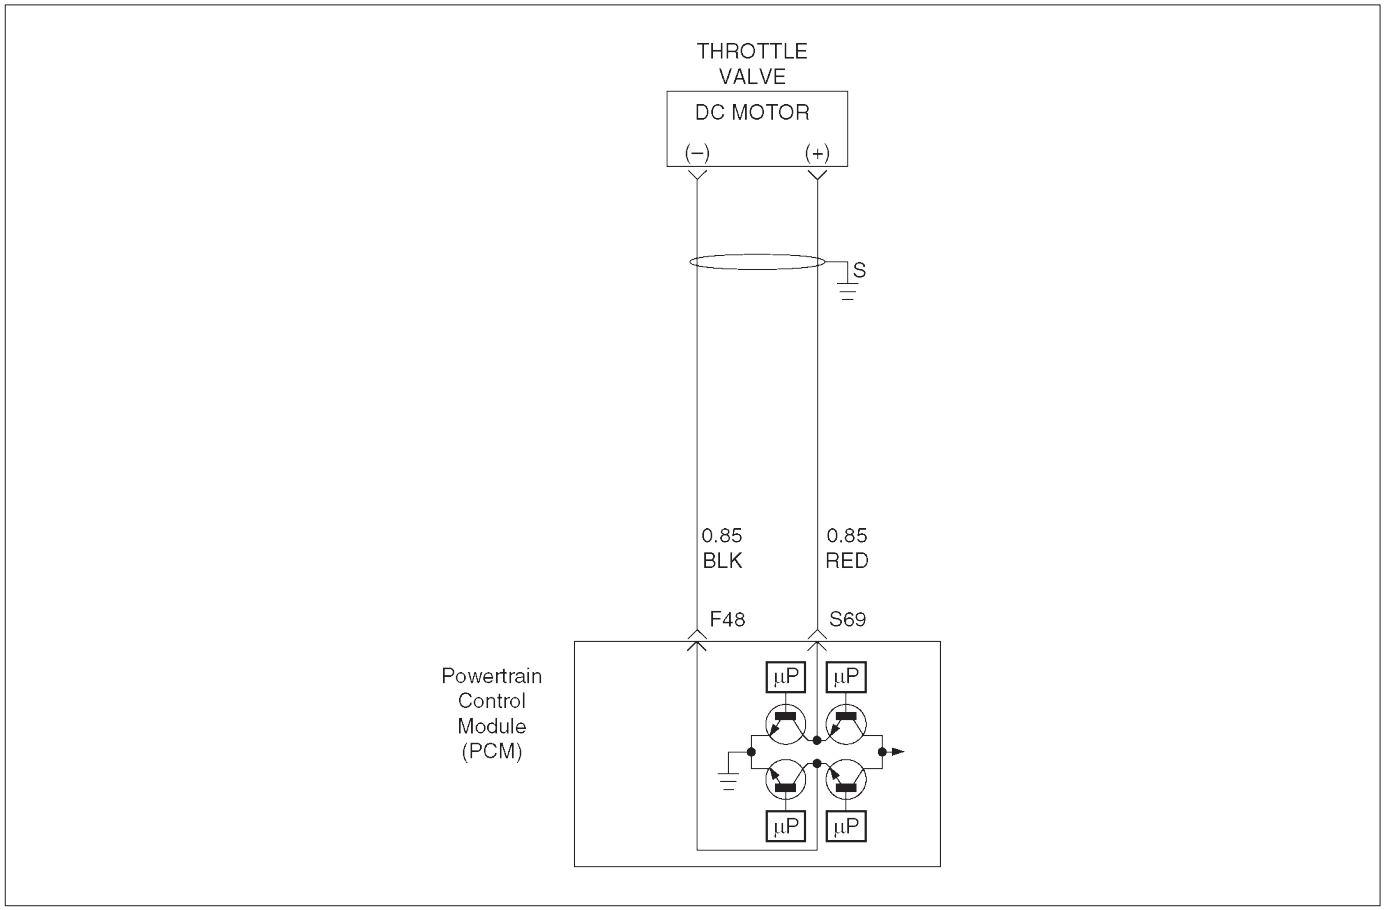Diagnostic Trouble Code (DTC)
P0507 Idle Air Control System High RPM



D06RY00158

Circuit Description

The powertrain control module (PCM) controls engine speed by adjusting the position of the throttle control valve (DC motor). The throttle motor is a DC motor driven by one coil. The PCM applies current to the DC motor coil in position (%) to adjustment the throttle valve into a passage in the throttle body to air flow. This method allows highly accurate control of engine speed and quick response to changes in engine load.
If the PCM detects a condition where too high of an idle speed is present and the PCM is unable to adjust idle speed by increasing the throttle position, DTC P0507 will set, indicating a problem with the idle control system.

Conditions for Setting the DTC

- No TPS, VSS, ECT, EGR, MAF, MAP, IAT, low voltage, fuel system, canister purge, injector control or ignition control DTCs are set.
- Barometric pressure is above 75 kPa.
- Canister purge duty cycle is above 10%.
- Engine running time is more than 125 seconds.
- Vehicle speed is less than 1 mph.
- Engine coolant temperature (ECT) is above 50°C (122°F).
- Ignition voltage is between 9.5 volts and 16.7 volts.
- The throttle is closed.
- EVAP purge duty cycle is more than 10%.
- All conditions are met for 10 seconds.
- Engine speed is more than 100-200 RPM higher than desired idle based upon coolant temperature.
- Barometric pressure is more than 74.5 kPa.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0507 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0507 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM or throttle DC motor – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or

damaged terminals, and poor terminal-to-wire connection.

- Damaged harness – Inspect the wiring harness for damage.
- Vacuum leak – Check for a condition that causes a vacuum leak, such as disconnected or damaged hoses, leaks at EGR valve and EGR pipe to intake manifold, leak at the throttle body, a faulty or incorrectly installed PCV valve, leaks at the intake manifold, etc.
- Throttle body – Check for sticking throttle plate. Also inspect the air passage for deposits or objects which will not allow the ETC position to fully extend or properly seat.

If DTC P0507 cannot be duplicated, reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P0507 – Idle Air Control System High RPM

Step	Action	Value(s)	Yes	No
1	Was the "On-Board (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Visually/physically inspect for the following conditions: • Throttle body tampering. • Restricted intake throttle system. Check for a possible collapsed air intake duct, restricted air filter element, or foreign objects blocking the air intake system. • Throttle body: Check for objects blocking the throttle passage or throttle bore, excessive deposits in the throttle passage and on the throttle valve, and excessive deposits in the throttle bore and on the throttle plate. • Throttle body with lever: Check for objects send round the throttle spring lever that lever is smooth movement, and spring lever has not excessive play Do any of the above require a repair?	—	Refer to *appropriate section for on-vehicle service*	Go to *Step 4*
3	Visually/physically inspect for the following conditions: • Accelerator pedal tampering. • Accelerator pedal : Check for objects blocking the spring or pedal arm. • Accelerator pedal : Check for objects move the accelerator pedal that pedal is smooth movement, and accelerator pedal arm has not excessive play. Do any of the above require a repair?	—	Refer to *appropriate section for on-vehicle service*	Go to *Step 3*
4	1. Check for a poor connection at the throttle body harness connector. 2. Check for a poor connection at the accelerator position sensor harness connector. 3. If a problem is found, replace faulty terminals as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*

DTC P0507 – Idle Air Control System High RPM (Cont'd)

Step	Action	Value(s)	Yes	No
5	Check the following circuits for an open, short to voltage, short to ground, or poor connection at the PCM: ● Throttle position sensor 1 circuit. ● Throttle position sensor 2 circuit. ● Throttle DC motor circuit. ● Throttle position sensor resistance. ● Throttle DC motor resistance. ● If a problem is found, repair as necessary. Was a problem found?	Vcc-GND 1–7kΩ SIG-GND change resistance 0.3 – 100Ω	Verify repair	Go to *Step 6*
6	Replace the throttle valve. Is the action complete?	—	Go to *Step 7*	—
7	1. Check the following circuits for an open, short to voltage, short to ground, or poor connection at the PCM: ● Accelerator position sensor 1 circuit. ● Accelerator position sensor 2 circuit. ● Sensor 3 circuit. ● Sensor resistance. 2. If a problem is found, repair as necessary. Was a problem found?	Vcc-GND 4–6kΩ SIG-GND change resistance	Verify repair	Go to *Step 8*
8	Replace the accelerator position sensor. Is the action complete?	—	Go to *Step 9*	—
9	Stored DTCs: P1125, P1290, P1295, P1299	—	Go to *applicable DTC table*	Go to *Step 10*
10	Stored DTCs: P1514, P1515, P1516, P1523, P1271, P1272, P1273	—	Go to *applicable DTC table*	Go to *Step 11*
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

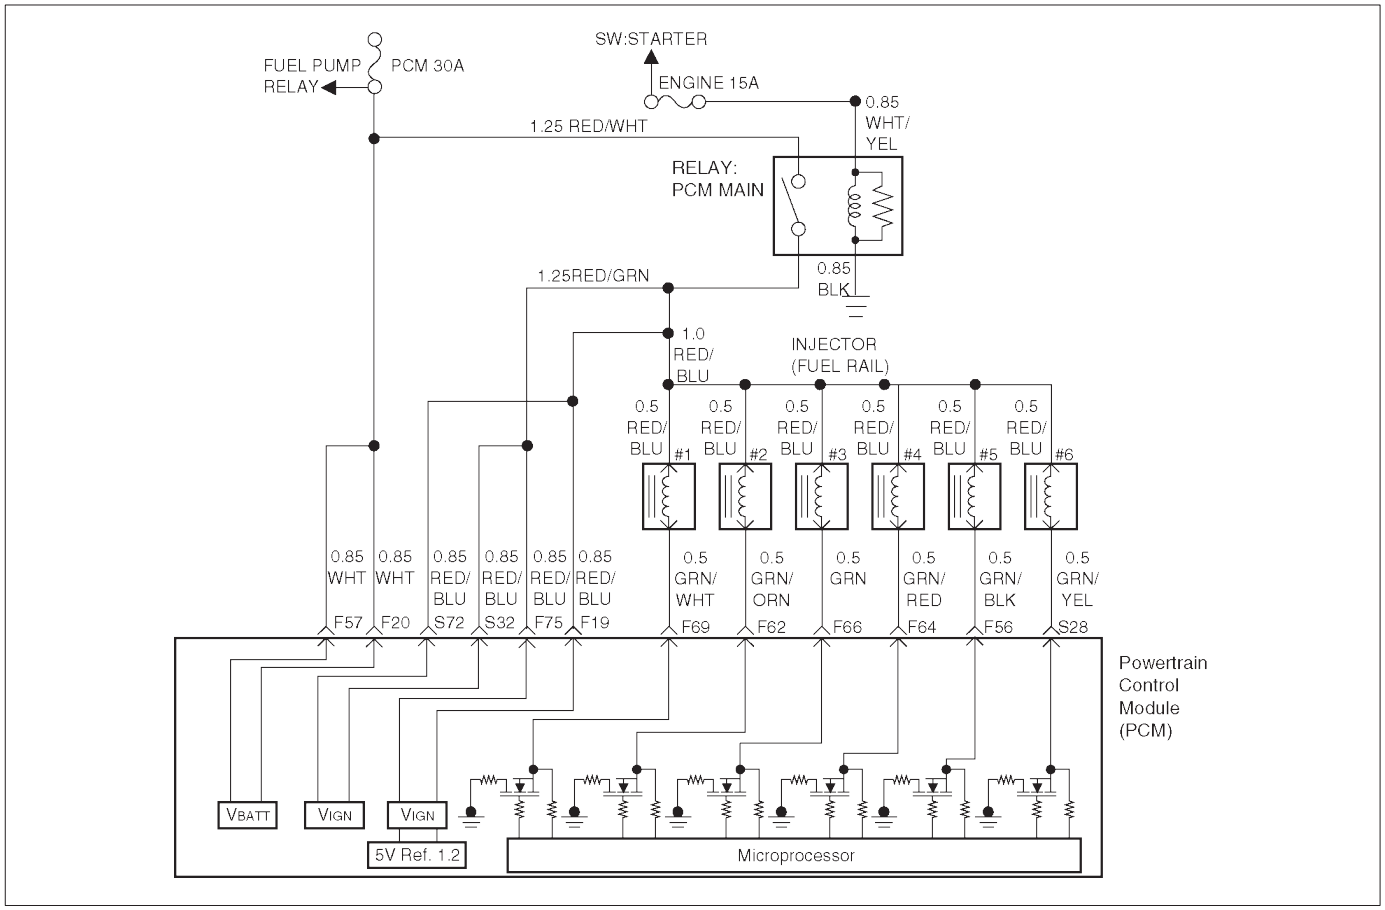Diagnostic Trouble Code (DTC) P0562 System Voltage Low



D06R200017

Circuit Description

The powertrain control module (PCM) monitors the system voltage on the ignition feed terminal to the PCM. A system voltage DTC will set whenever the voltage is below a calibrated value.

Conditions for Setting the DTC

- Ignition “ON”.
- System voltage is below 11.5 volts for 40 seconds.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store as Failure Records conditions which were present when the DTC was set. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- A history DTC P0562 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0562 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.


Diagnostic Aids

If the DTC sets when an accessory is operated, check for a poor connection or excessive current draw.

DTC P0562 – System Voltage Low

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Using a DVM, measure the battery voltage at the battery. Is the battery voltage greater than the specified value?	11.5 V	Go to *Step 3*	Charge battery, then go to *Step 3*
3	1. Install a Tech 2. 2. Select "Ignition Volts" on the Tech 2. 3. Start the engine and raise the engine speed to the specified value. 4. Load the electrical system by turning on the headlights, high blower, etc. Is the ignition voltage approximately equal to the specified value?	2000 RPM 12.8-14.1 V	Go to *Step 4*	Go to *Starting/Charging*
4	1. Ignition "OFF". 2. Disconnect the PCM connector at the PCM. 3. Using a DVM, measure the battery voltage at the PCM connector F-20 and F-57. Is it approximately equal to battery voltage?	—	Go to *Step 5*	Go to *Step 6*
5	1. Check for faulty connections at the PCM harness terminals. 2. Repair as necessary. Was a repair necessary?	—	Verify repair	Go to *Step 7*
6	Check for an open battery feed circuit to the PCM. Is the action complete?	—	Verify repair	Go to *Step 7*
7	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

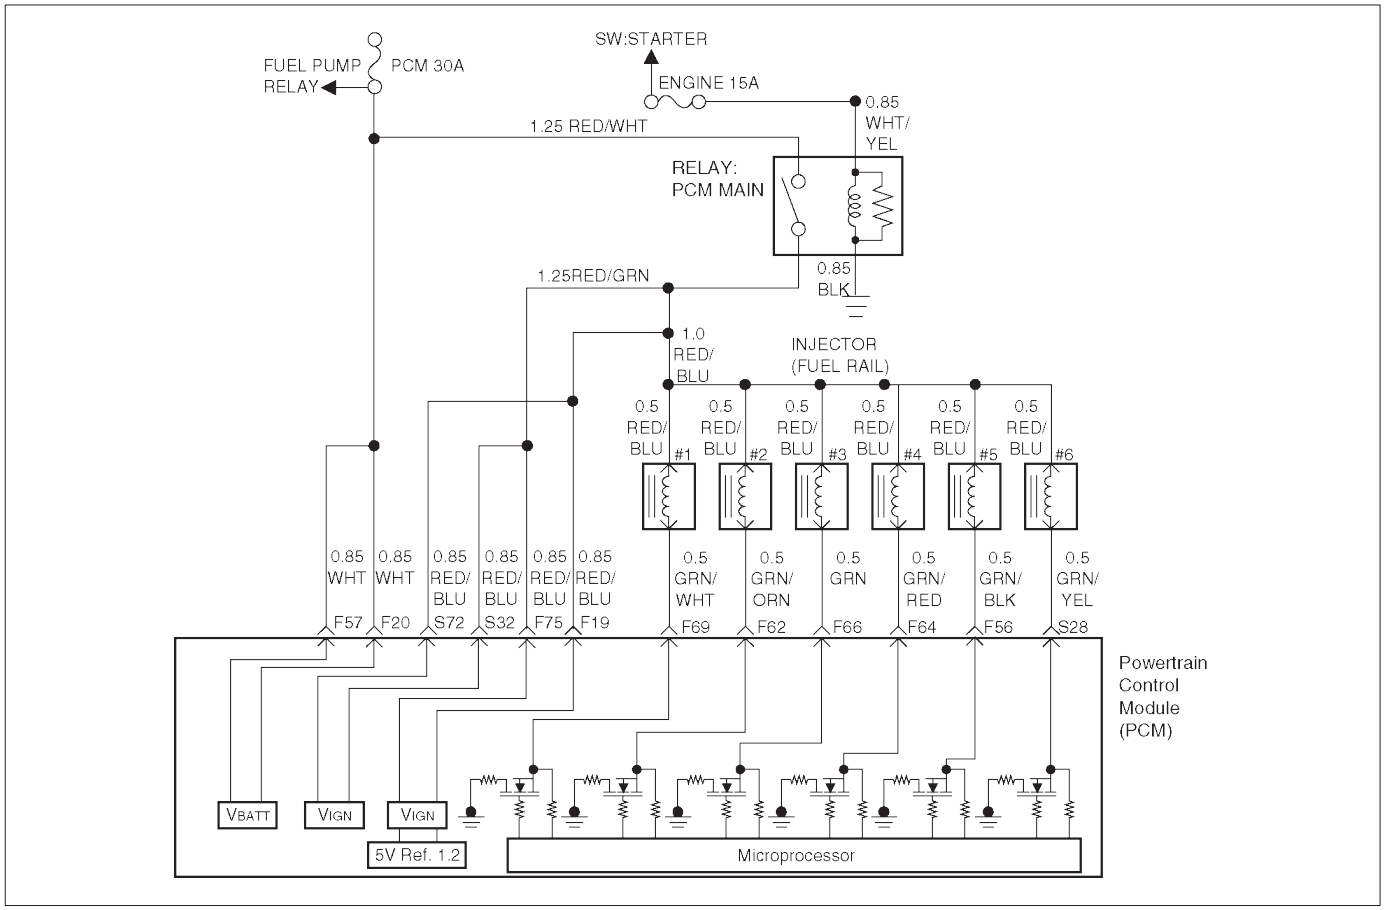Diagnostic Trouble Code (DTC) P0563 System Voltage High



D06R200017

Circuit Description

The powertrain control module (PCM) monitors the system voltage on the ignition feed terminals to the PCM. A system voltage DTC will set whenever the voltage is above a calibrated value.

Conditions for Setting the DTC

- Ignition “ON”.
- System voltage is above 16 volts for 40 seconds.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- A history DTC P0563 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0563 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.


Diagnostic Aids

If the DTC sets when an accessory is operated, check for a poor connection or excessive current draw.

DTC P0563 – System Voltage High

Step	Action	Value(s)	Yes	No
1	Was the "ON-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Using a DVM, measure the battery voltage at the battery. Is the battery voltage less than the specified value?	11.5 V	Go to *Step 3*	Go to *Step 4*
3	1. Charge the battery and clean the battery terminals. 2. Clean the battery ground cable connection if corrosion is indicated. Is the battery voltage less than the specified value?	11.5 V	Replace battery	Go to *Step 4*
4	1. Turn "OFF" all the accessories. 2. Install a Tech 2. 3. Select the ignition voltage parameter on the Tech 2. 4. Start the engine and raise the engine RPM to the specified value. Is the voltage more than 2.5 volts greater than the measurement taken in step 2 or 3?	2000 RPM	Go to *Starting/ Charging*	Go to *Step 5*
5	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

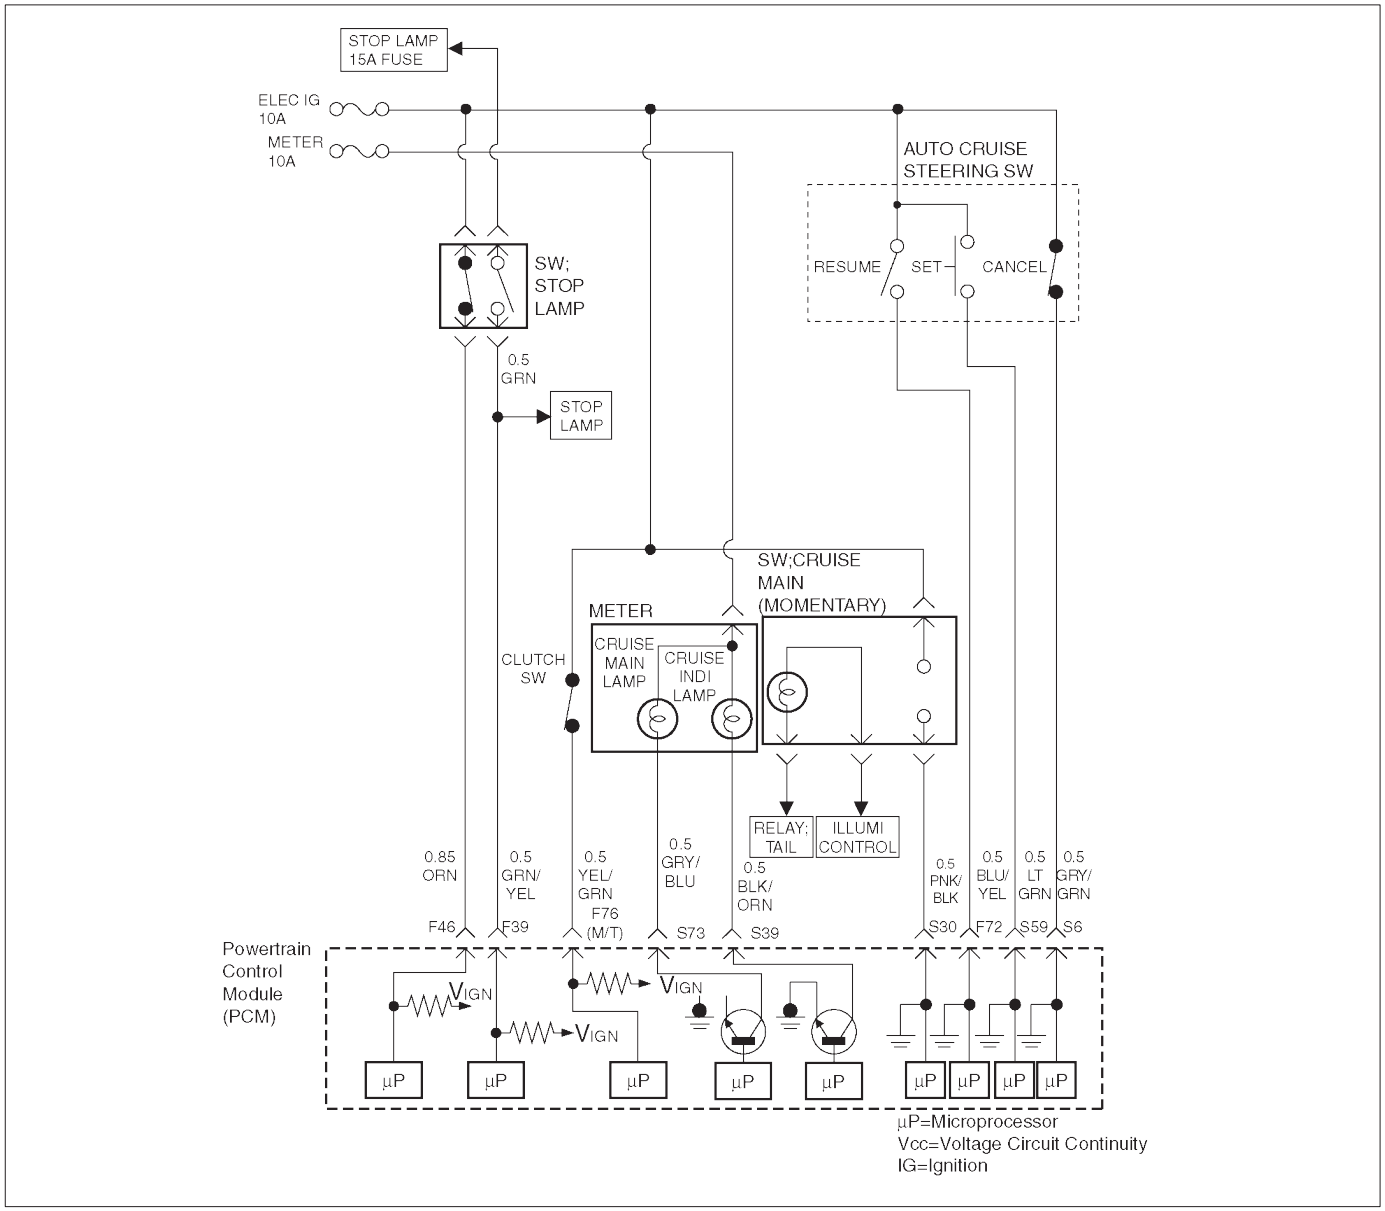Diagnostic Trouble Code (DTC)
P0565 Cruise Main Switch Circuit Error



D06R200018

Circuit Description

The cruise control keeps the vehicle running at a fixed speed until a signal canceling this fixed speed is received. When the main switch is turned on with the vehicle in the running mode, the battery voltage is applied to power train control module(PCM). When a signal from the control switch is input to PCM while the vehicle is in this state, the cruise control system is activated. Also, while the PCM is operating, the “CRUISE MAIN” indicator light in the meter assembly lights up.

Conditions for setting the DTC

- The Ignition is “ON”.
- Engine is running.
- System voltage is between 11.5 volts and 16 volts.
- The switch contact remains on for 15 seconds or more.
- Noises are generated by poor switch contact 60 times within 1 second.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0565 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P0565 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the cruise main switch display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

A change in the display will indicate the location of the fault.


If DTC P0565 cannot be duplicated, the information included n the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P0565 Diagnostic Chart may isolate the cause of the fault.

DTC P0565 Cruise Main Switch Circuit Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON,” engine “ON.” 2. Observe the cruise main lamp in the switch. Is the cruise main lamp “ON?”	—	Go to *Step 3*	Go to *Step 4*
3	1. Push the auto cruise main switch. 2. Observe the cruise main lamp in the switch. Is the cruise main lamp “OFF?”	—	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 4*
4	Check the signal circuit for auto cruise main switch. 1. Ignition is “OFF”. 2. Disconnect the powertrain control module(PCM). 3. Disconnect the cruise main switch. Check for an open cruise main switch signal circuit between the PCM and the cruise main switch. Is a problem found?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the auto cruise main switch signal circuit. Is the action complete?	—	Verify repair	—
6	Check the auto cruise main switch and lamp circuit. Is a problem found?	—	Go to *Step 7*	Go to *Step 8*
7	Repair or replace the auto cruise main switch and lamp circuit. Is the action complete?	—	Verify repair	—
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

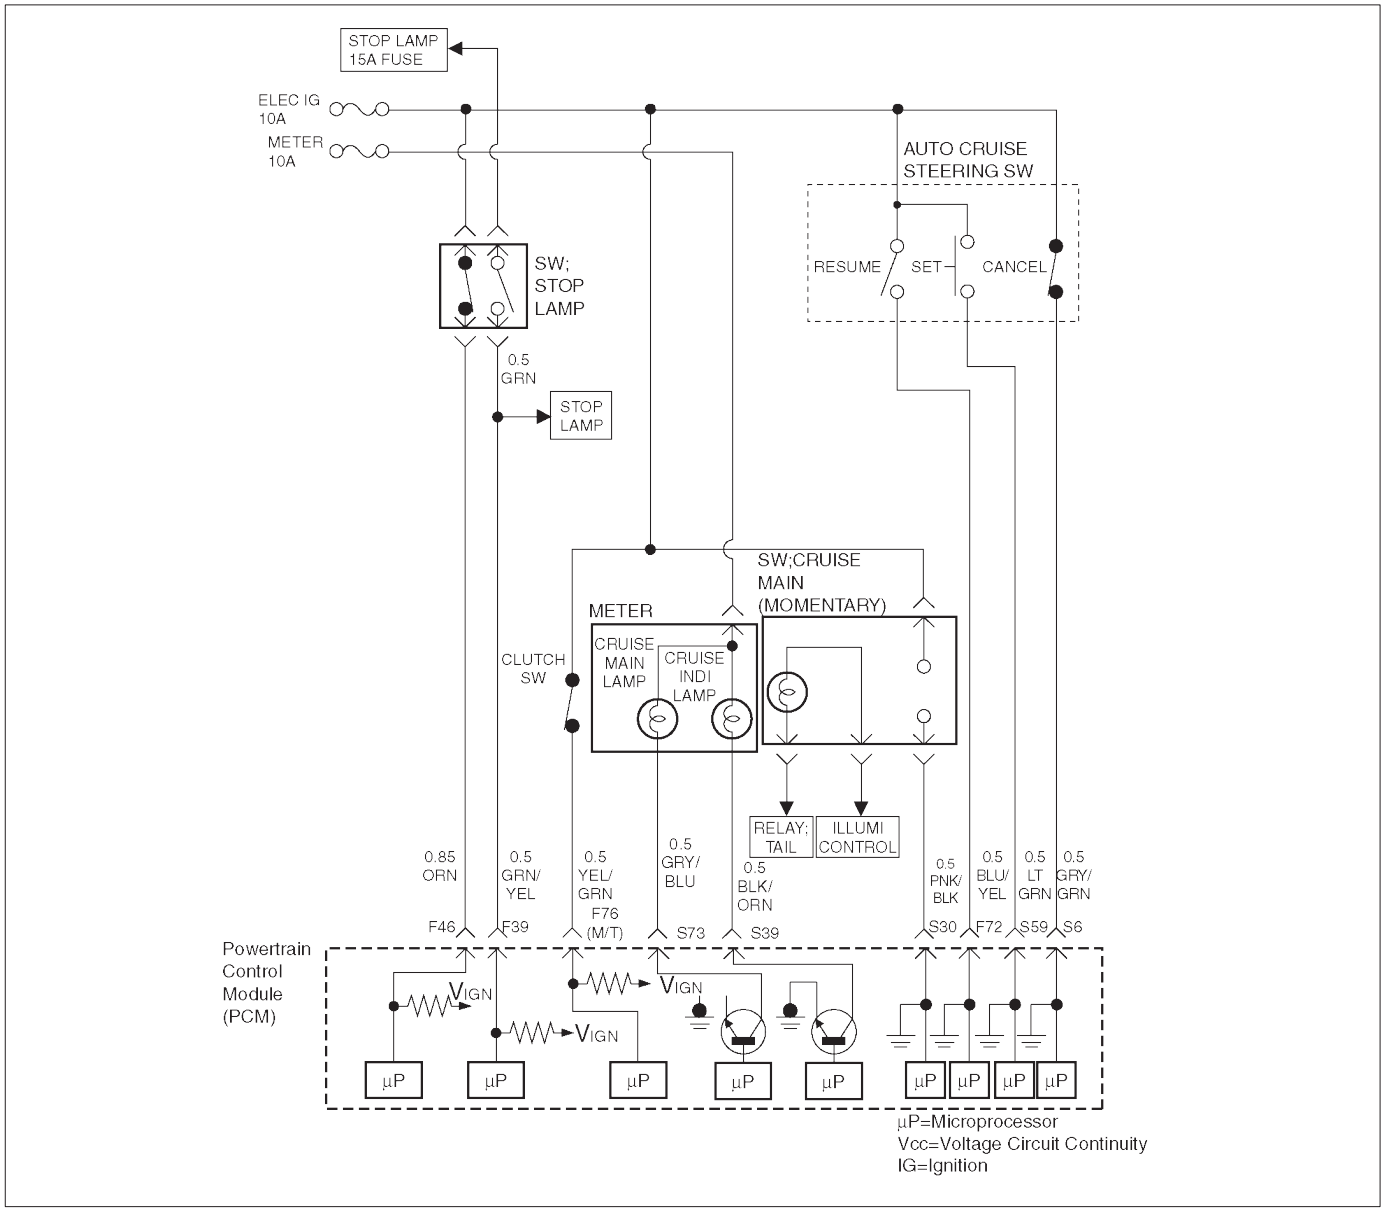Diagnostic Trouble Code (DTC)
P0566 Cruise Cancel Switch Circuit Error



D06R200018

Circuit Description

The cruise control keeps the vehicle running at a fixed speed until a signal canceling this fixed speed is received. When the main switch is turned on with the vehicle in the running mode, the battery voltage is applied to powertrain control module(PCM). When a signal from the control switch is input to PCM while the vehicle is in this state, the cruise control system is activated. Also, while the PCM is operating, the “CRUISE MAIN” indicator light in the meter assembly lights up.
When the cancel switch is “ON”, cruise system is “OFF”.

Conditions for setting the DTC

- The Ignition is “ON”.
- Engine is running.
- System voltage is between 11.5 volts and 16 volts.
- The switch contact remains on for 40 seconds or more.
- Noises are generated by poor switch contact 100 times within 1.6 seconds.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0566 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.

- DTC P0566 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the cruise cancel switch display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.


  A change in the display will indicate the location of the fault. If DTC P0566 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently, performing the DTCP0566 Diagnostic Chart may isolate the cause of the fault.

DTC P0566 Cruise Cancel Switch Circuit Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Check the signal circuit for auto cruise cancel switch. 1. Ignition is “OFF”. 2. Disconnect the powertrain control module(PCM). 3. Disconnect the cruise cancel switch. Check for cruise cancel switch signal circuit between the PCM and the cruise cancel switch. Is a problem found?	—	Go to *Step 3*	Go to *Step 4*
3	Repair the main cruise cancel switch signal circuit. Is the action complete?	—	Verify repair	—
4	Check the auto cruise main switch. Is a problem found?	—	Go to *Step 5*	Go to *Step 6*
5	Repair or replace the main cruise main switch. Is the action complete?	—	Verify repair	—
6	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

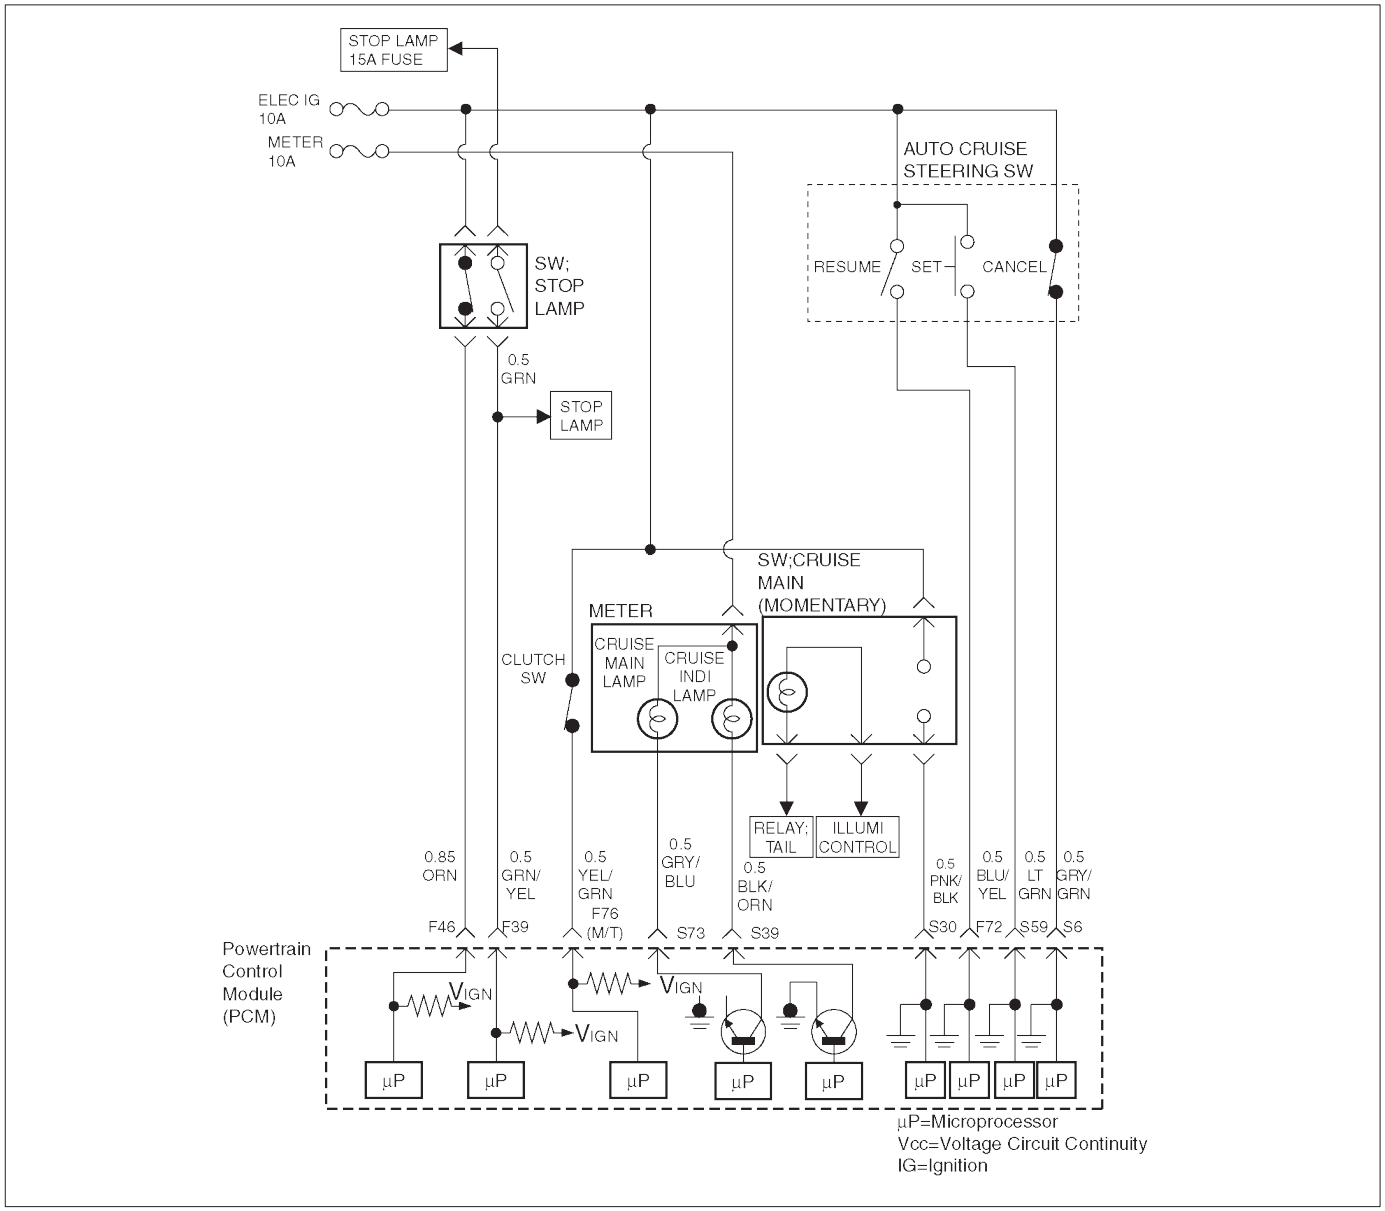Diagnostic Trouble Code (DTC)
P0567 Cruise Resume Switch Circuit Error



D06R200018

Circuit Description

The cruise control keeps the vehicle running at a fixed speed until a signal canceling this fixed speed is received. When the main switch is turned on with the vehicle in the running mode, the battery voltage is applied to powertrain control module(PCM). When a signal from the control switch is input to PCM while the vehicle is in this state, the cruise control system is activated. Also, while the PCM is operating, the “CRUISE MAIN” indicator light in the meter assembly lights up.
When the resume switch is “ON”, vehicle speed is reset to the previous set speed.

Conditions for setting the DTC

- The Ignition is “ON”.
- Engine is running.
- System voltage is between 11.5 volts and 16 volts.
- The switch contact remain on for 50 seconds or more.
- Noises are generated by poor switch contact 100 times within 1.6 seconds.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0567 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P0567 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage.

If the harness appears to be OK, observe the Cruise resume switch display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

A change in the display will indicate the location of the fault.


If DTC P0567 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTCP0567 Diagnostic Chart may isolate the cause of the fault.

DTC P0567 Cruise Resume Switch Circuit Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Check the signal circuit for auto cruise resume switch. 1. Ignition is “OFF”. 2. Disconnect the powertrain control module (PCM). 3. Disconnect the cruise resume switch. Check for cruise resume switch signal circuit between the PCM and the cruise resume switch. Is a problem found?		Go to *Step 3*	Go to *Step 4*
3	Repair the main cruise resume switch signal circuit. Is the action complete?	—	Verify repair	—
4	Check the auto cruise resume switch. Is a problem found?	—	Go to *Step 5*	Go to *Step 6*
5	Repair or replace the main cruise resume switch. Is the action complete?	—	Verify repair	—
6	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

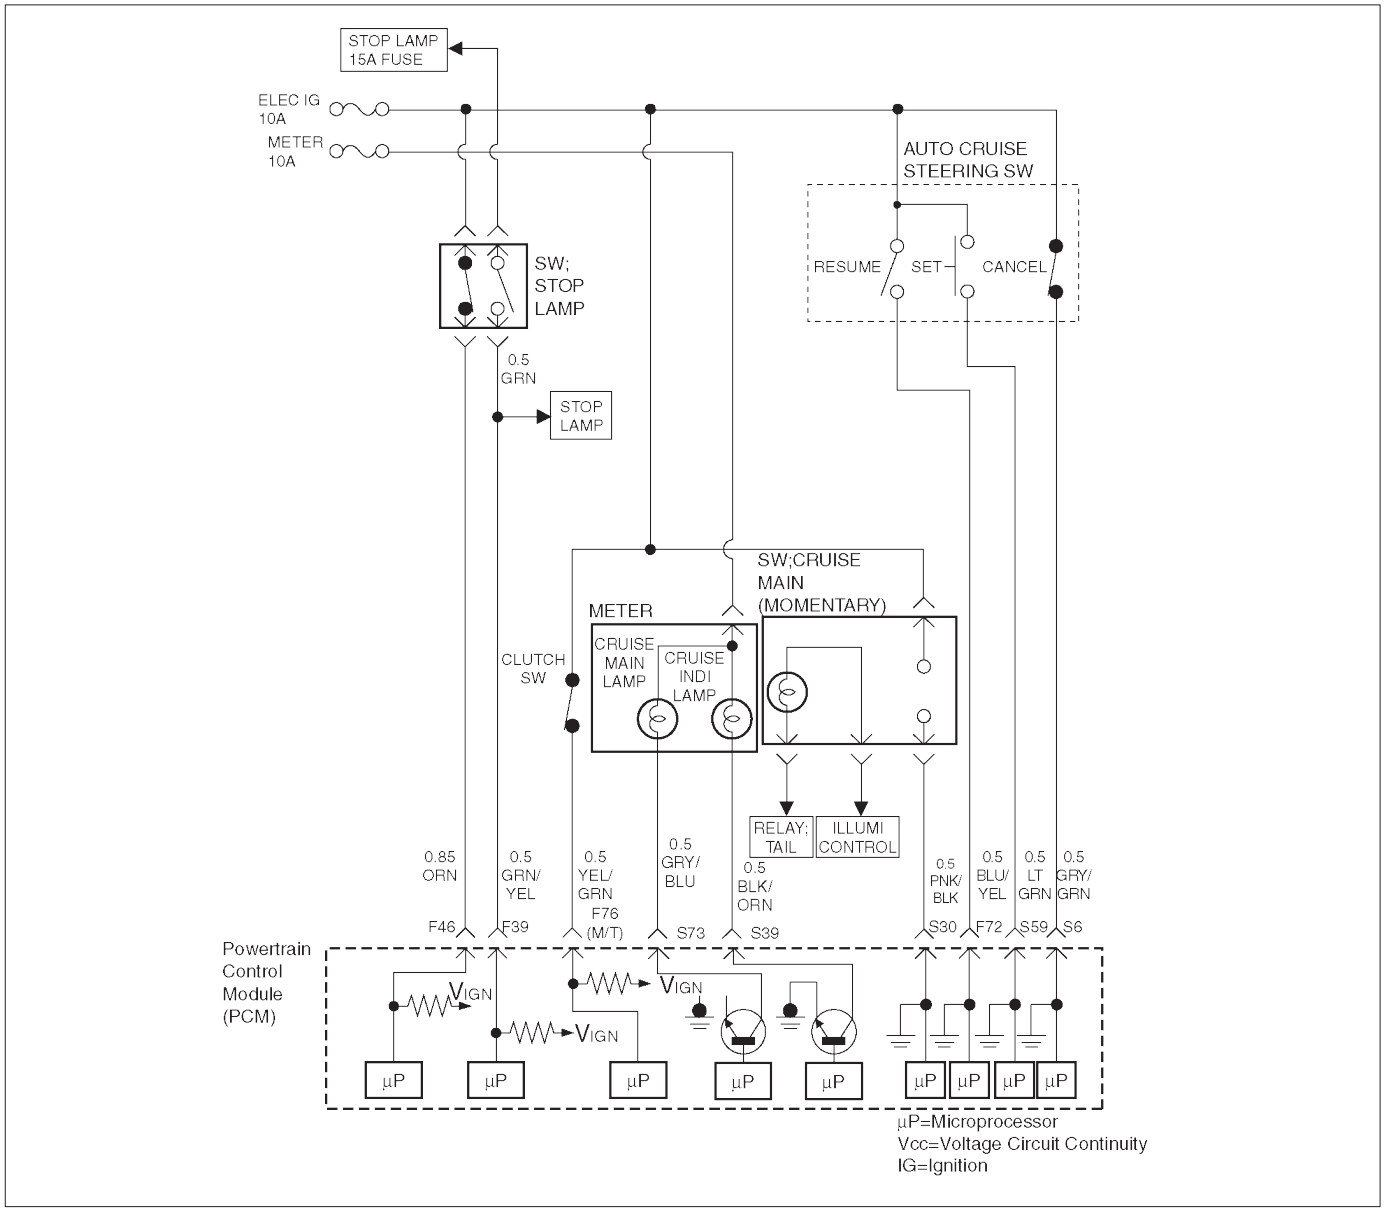Diagnostic Trouble Code (DTC)
P0568 Cruise Set Switch Circuit Error



D06R200018

Circuit Description

The cruise control keeps the vehicle running at a fixed speed until a signal canceling this fixed speed is received. When the main switch is turned on with the vehicle in the running mode, the battery voltage is applied to powertrain control module (PCM). When a signal from the control switch is input to PCM while the vehicle is in this state, the cruise control system is activated. Also, while the PCM is operating, the “CRUISE MAIN” indicator light in the meter assembly lights up.
When the set switch is “ON”, vehicle speed is set.

Conditions for setting the DTC

- The Ignition is “ON”.
- Engine is running.
- System voltage is between 11.5 volts and 16 volts.
- The switch contact remain on for 120 seconds or more.
- Noises are generated by poor switch contact 100 times within 1.6 seconds.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0568 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.

- DTC P0568 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness–Inspect the wiring harness for damage. If the harness appears to be OK, observe the cruise set switch display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault.


  If DTC P0568 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently, performing the DTCP0568 Diagnostic Chart may isolate the cause of the fault.

DTC P0568 Cruise Set Switch Circuit Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON,” engine “ON.” 2. Observe the cruise indicator lamp in the meter. Is the cruise indicator lamp “ON?”	—	Go to *Step 3*	Go to *Step 4*
3	1. Push the auto cruise set switch. 2. Observe the cruise indicator lamp in the meter. Is the cruise indicator lamp “OFF ?”	—	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 5*
4	Check the signal circuit for auto cruise set switch. 1. Ignition is “OFF”. 2. Disconnect the powertrain control module (PCM). 3. Disconnect the cruise set switch. Check for cruise set switch signal circuit between the PCM and the cruise set switch. Is a problem found?		Go to *Step 5*	Go to *Step 6*
5	Repair the main cruise set switch signal circuit. Is the action complete?	—	Verify repair	—
6	Check the auto cruise set switch. Is a problem found?	—	Go to *Step 7*	Go to *Step 8*
7	Repair or replace the main cruise set switch. Is the action complete?	—	Verify repair	—
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

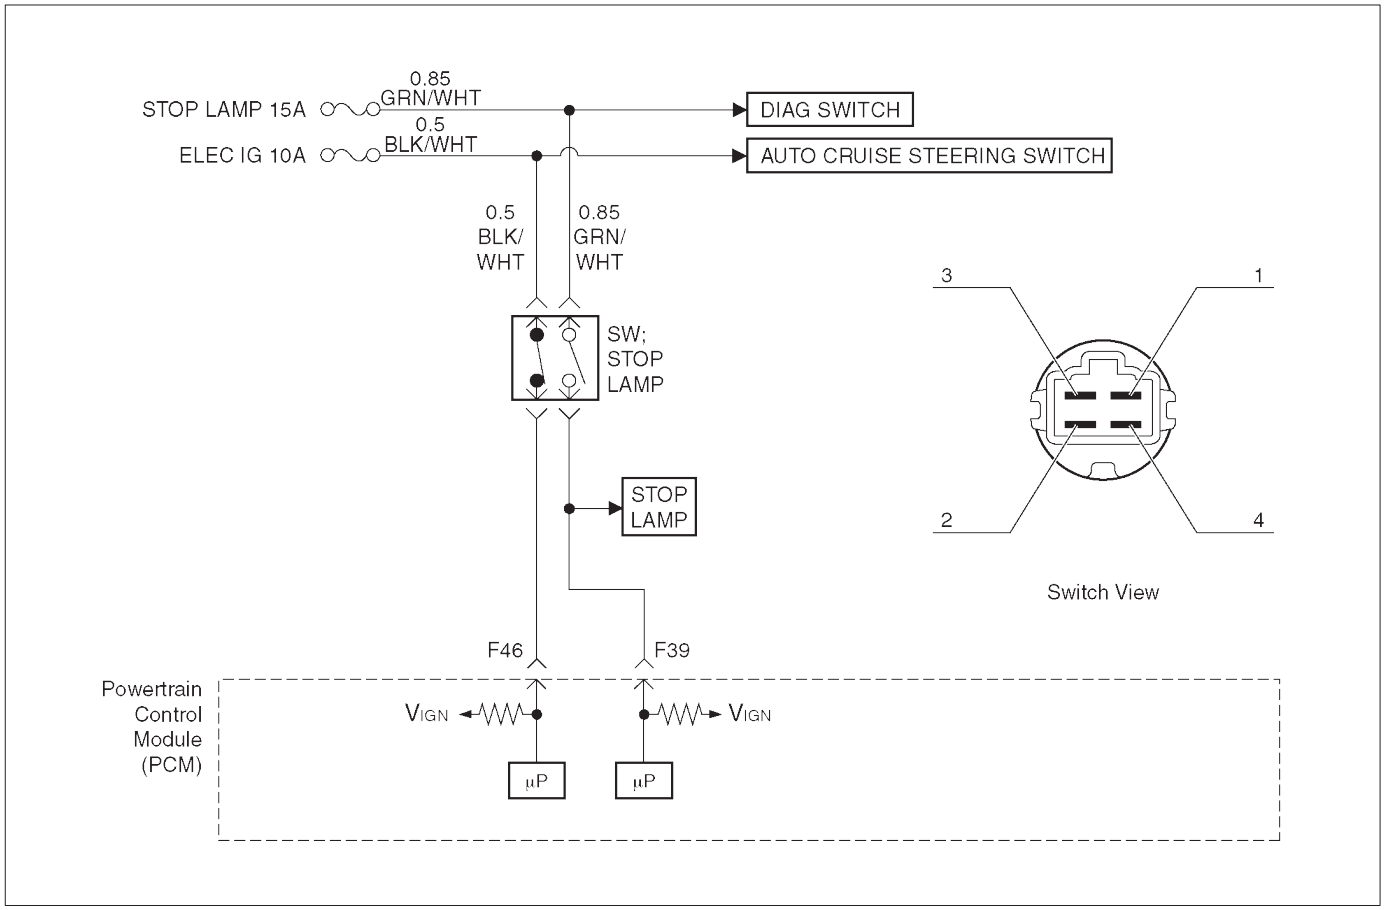Diagnostic Trouble Code (DTC) P0571 No Brake Switch Signal



D06R200076

Circuit Description

The brake switch has 3 functions.

- Brake pedal operation check
- Brake light operation (On and off)
- Cruise control (Cancel)

The PCM receives vehicle speed and switch position signals from the brake switch. The PCM sets brake operating conditions in response to these signals.

If the brake switch is on, the brake system is in normal operation (cruise control cancelled).

Conditions for Setting the DTC

- Two brake switch signals not acknowledged after signal changed.
- VSS not defective.
- Engine is running.
- Vehicle speed above 20km/h.

Action Taken When the DTC Sets

- The PCM will not turn the malfunction indicator lamp (MIL) “ON”.
- The PCM will store conditions which were present when the DTC was set as Failure Records only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the DTC

- DTC P0571 can be cleared by using the scan tool “Clear Info” function or by disconnecting the PCM battery feed.


Diagnostic Aids

- Damaged harness–Inspect the wiring harness for damage. If the harness appears to be OK, observe the fuel level display on the scan tool while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

DTC P0571 No Brake Switch Signal

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "Off". Engine "Off". 2. Check following fuses. ● BACK 15A ● STOP LAMP 15A Was a problem found?	—	Verify repair	Go to *Step 3*
3	1. Make adjustment to the brake switch. The brake switch is installed to the brake pedal assembly. (Refer to *"Brake switch" in "10A CRUISE CONTROL SYSTEM"*.) Was the problem found?	—	Verify repair	Go to *Step 4*
4	1. Push the shaft at brake switch. 2. Check shaft operation for smooth movements. Was the problem found?	—	Verify repair	Go to *Step 5*
5	1. Disconnect the connector at brake switch. 2. Check following terminal pin at ohmmeter. (Leave the shaft position at brake switch. Don't push it.) ● Between pin 1 and pin 2 ● Between pin 3 and pin 4 Was it specified value?	Between pin1 and pin2 is 0Ω, Between pin3 and pin4 is ∞Ω	Go to *Step 6*	Go to *Step 9*
6	1. Disconnect the connector at brake switch. 2. Check following terminal pin at ohmmeter. (Push the shaft position at brake switch and hold it) ● Between pin 1 and pin 2 ● Between pin 3 and pin 4 Was it specified value?	Between pin1 and pin2 is ∞Ω, Between pin3 and pin4 is 0Ω	Go to *Step 7*	Go to *Step 9*
7	1. Probe related circuits for open or short to ground. 2. If a problem was found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Replace the ECM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Was the action completed?	—	Verify repair	—
9	1. Replace the brake switch. Was the action completed?	—	Verify repair	—

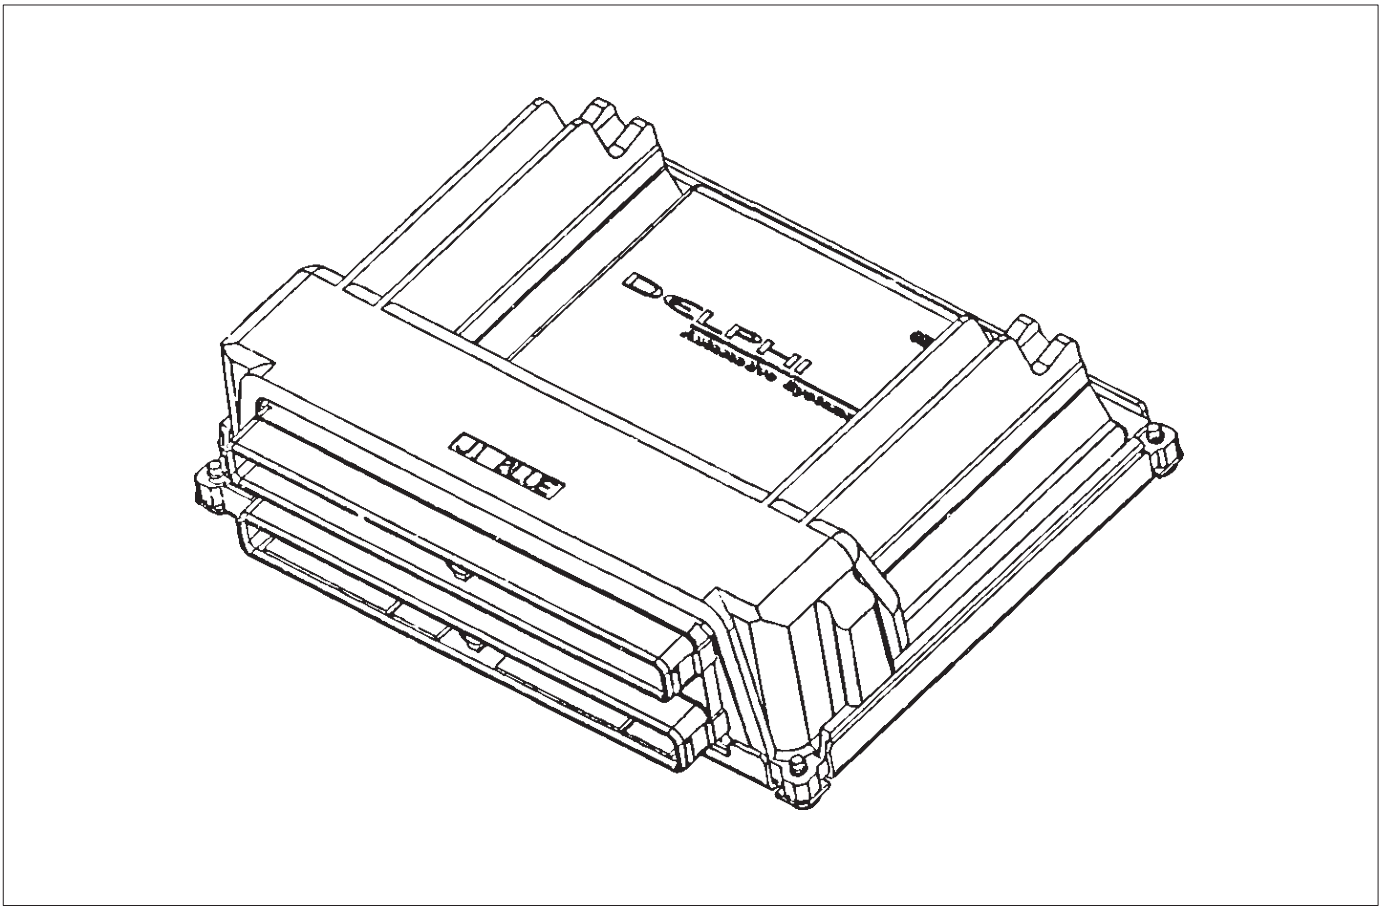Diagnostic Trouble Code (DTC) P0601 PCM Memory



060RY014

Circuit Description

The powertrain control module (PCM) used in this vehicle utilizes an electrically erasable programmable read-only memory (EEPROM). The EEPROM contains program information and the calibrations required for engine, transmission, and powertrain diagnostics operation.
Unlike the PROM used in past applications, the EEPROM is not replaceable. When the PCM is replaced or a calibration update is required, the PCM must be programmed using a Tech 2. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for the EEPROM programming procedure.

Conditions for Setting the DTC

- The PCM detects an internal program fault (check sum error).

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0601 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0601 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.


Diagnostic Aids

- DTC P0601 indicates that the contents of the EEPROM have changed since the PCM was programmed. The only possible repair is PCM replacement. Remember to program the replacement PCM with the correct software and calibration for the vehicle.

DTC P0601 – PCM Memory

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

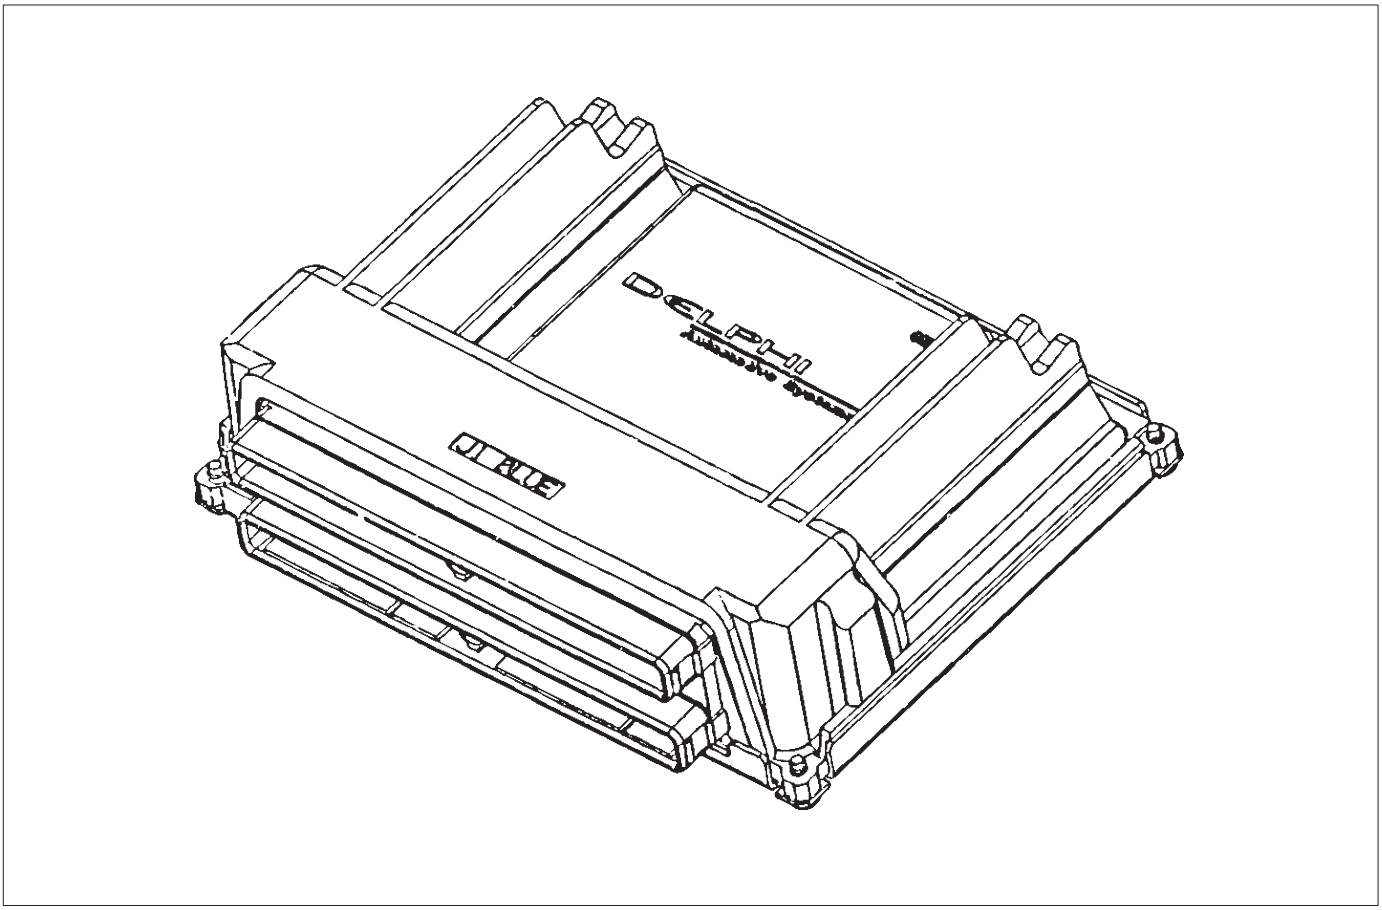Diagnostic Trouble Code (DTC) P0602 PCM Programming Error



060RY014

Circuit Description

The powertrain control module (PCM) uses Main CPU and Watchdog CPU software/calibration.

Conditions for Setting the DTC

- This code detects inconsistencies between Main CPU and Watchdog CPU software/calibration.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.


Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0602 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0602 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

DTC P0602 – PCM Programming Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

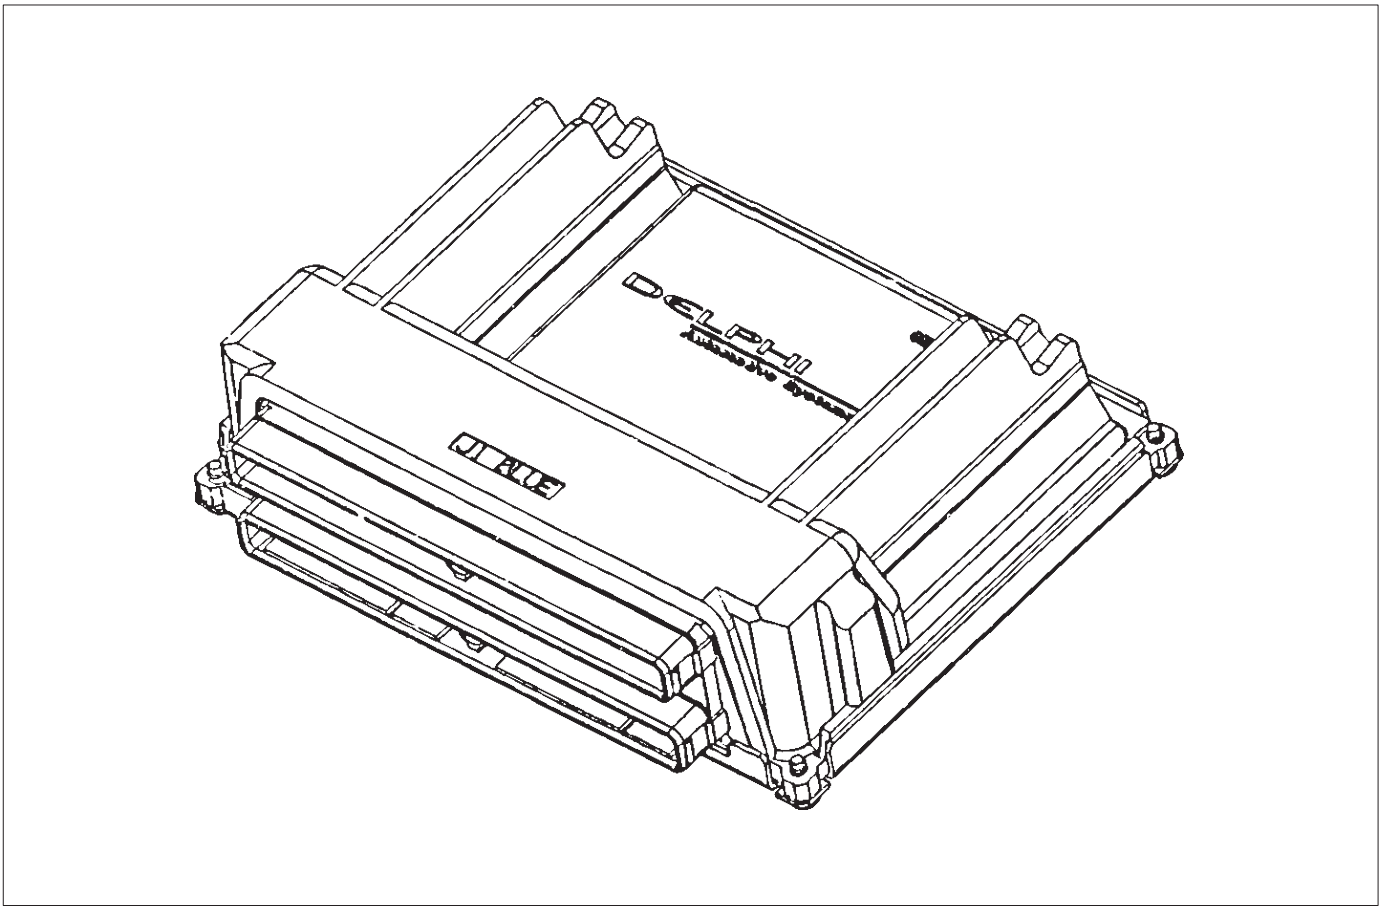Diagnostic Trouble Code (DTC) P0604 PCM RAM Error



060RY014

Circuit Description

The powertrain control module (PCM) uses Main CPU RAM and Watchdog CPU RAM.

Conditions for Setting the DTC

- This code detects inconsistencies between Main CPU RAM and Watchdog CPU RAM.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.


Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0604 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0604 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

DTC P0604 – PCM RAM Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

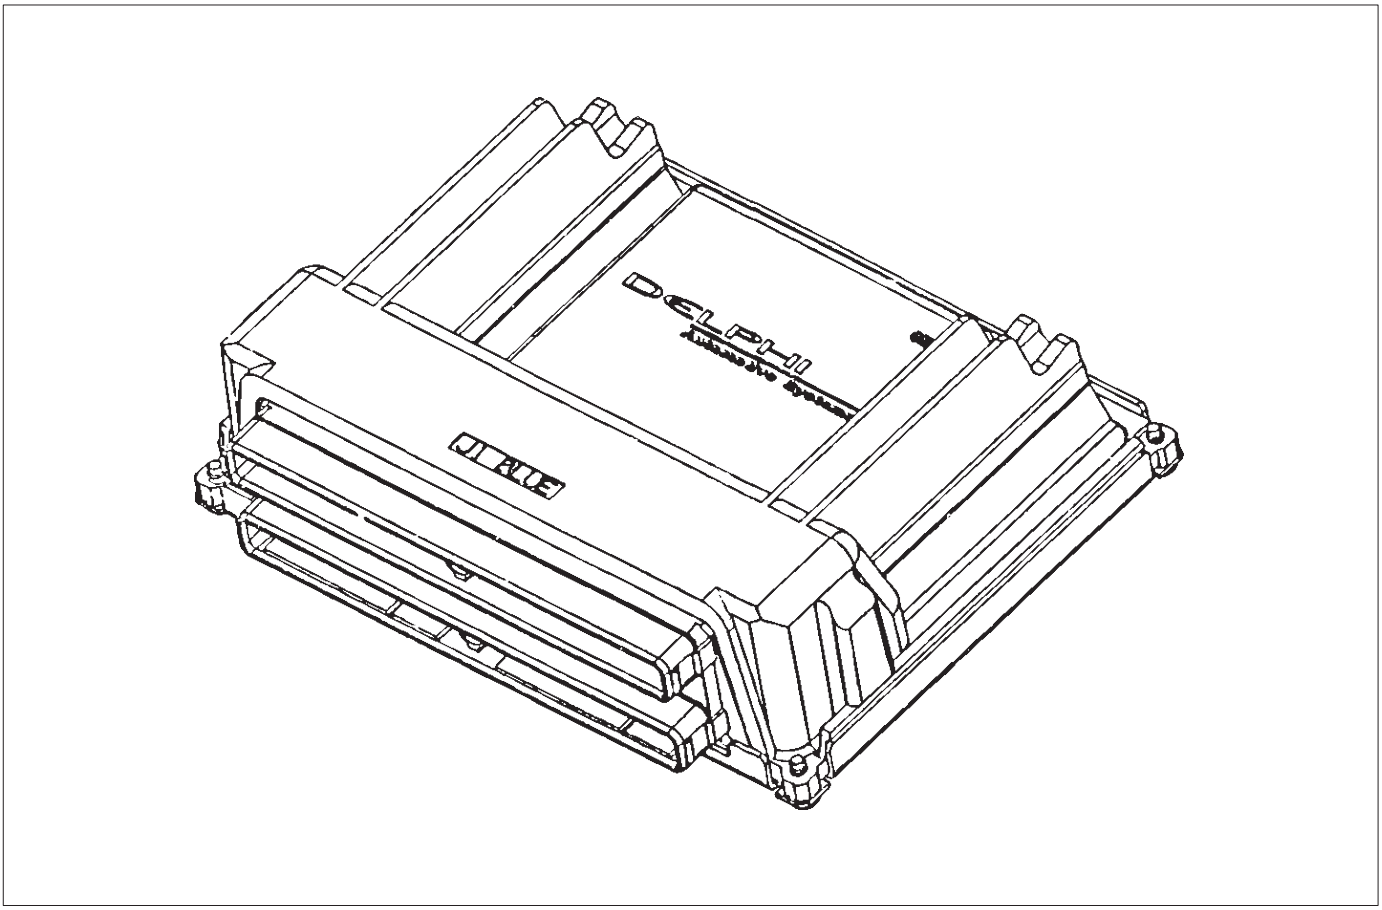Diagnostic Trouble Code (DTC) P0606 PCM Internal Performance



060RY014

Circuit Description

The input/output devices in the PCM include analog-to-digital converters, signal buffers, counters, and special drivers. The PCM controls most components with electronic switches which complete a ground circuit when turned “ON”. These switches are arranged in groups of 4 and 7, called either a surface-mounted quad driver module (QDM), which can independently control up to 4 output terminals, or QDMs which can independently control up to 7 outputs.

Conditions for Setting the DTC

- This code detects inconsistencies between Main CPU A/D converters and Watchdog CPU A/D converters.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.


Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P0606 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P0606 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

DTC P0606 – PCM Internal Performance

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

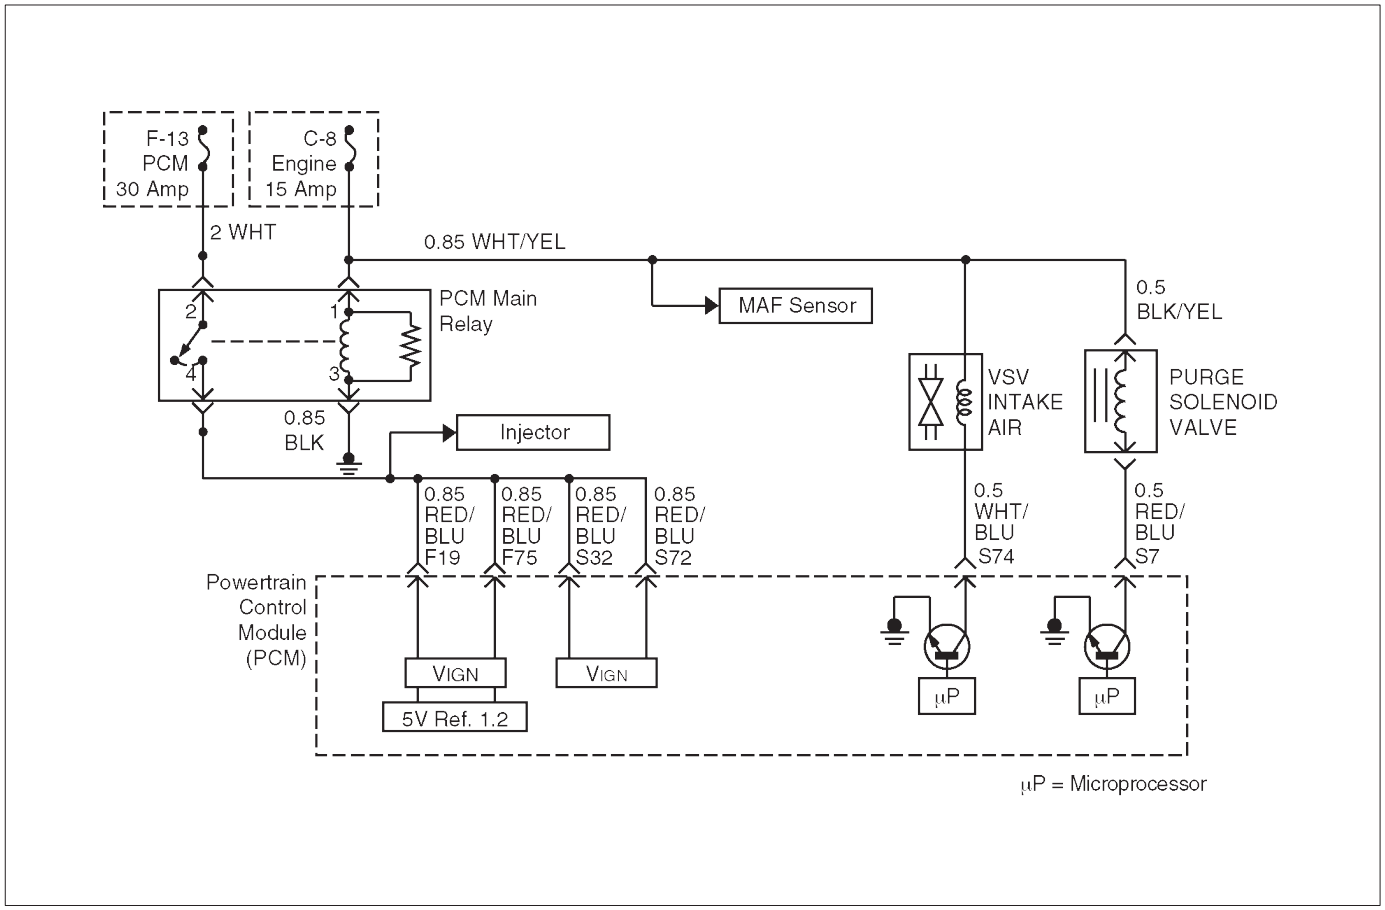Diagnostic Trouble Code (DTC) P0660 VIM Solenoid Circuit Open



D06R200089

Circuit Description

The VIM (Variable Intake Manifold) solenoid (intake air VSV) circuit controls the induction control valve that the length of a port is switched. The VIM solenoid is controlled by the Power Train Control Module (PCM).
When the engine speed is less than 3600 RPM, the VIM solenoid is “ON” and when the engine speed is more than 3600 RPM, the VSV is “”OFF”. The induction control valve is closed at the VIM solenoid is “ON”, and it is opened at the VSV is “OFF”. If the VIM solenoid circuit is opened, DTC P0660 will set.

Conditions for Setting the DTC

- The Ignition is “ON”.
- Ignition voltage is more than 11V.
- There are 20 test failures within a 28–test sample.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run an the fault condition is no longer present.
- A history DTC P0660 will clear after 40 consecutive trip cycles during which the warm up cycles have occurs without a fault.

Diagnostic Aids


Check for following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness – inspect the wiring harness to the solenoid and the fuel tank pressure sensor for an intermittent open short circuit.

DTC P0660 VIM Solenoid Circuit Open

Step	Action	Value(s)	Yes	No
1	Was the “On–Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Check the DTC. Was the DTC for the Mass Air Flow (MAF) sensor or the purge duty solenoid valve stored?	—	Go to *Step 3*	Go to *Step 4*
3	1. Check the circuit between the ENGINE fuse and the MAD sensor or the Variable Intake Manifold solenoid (intake air VSV). 2. If a problem found, repair or replace as necessary. Was a problem found?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*
4	1. Using the Tech 2, perform the “Variable Intake Manifold Test”. Refer to *Variable Intake Manifold Test* Was a problem found?	—	Go to *Step 7*	Go to *Step 5*
5	1. Using the Tech 2, command the VIM solenoid “ON” and “OFF”. 2. Observe working noise for the VIM solenoid. Was working noise detected?	—	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 6*
6	1. Replace the VIM solenoid. Is the action complete?	—	Verify repair	—
7	1. Check the circuit between the ENGINE fuse and the VIM solenoid. 2. If a problem found, repair or replace as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Check the circuit between the PCM fuse and the VIM solenoid. 2. If a problem found, repair or replace as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

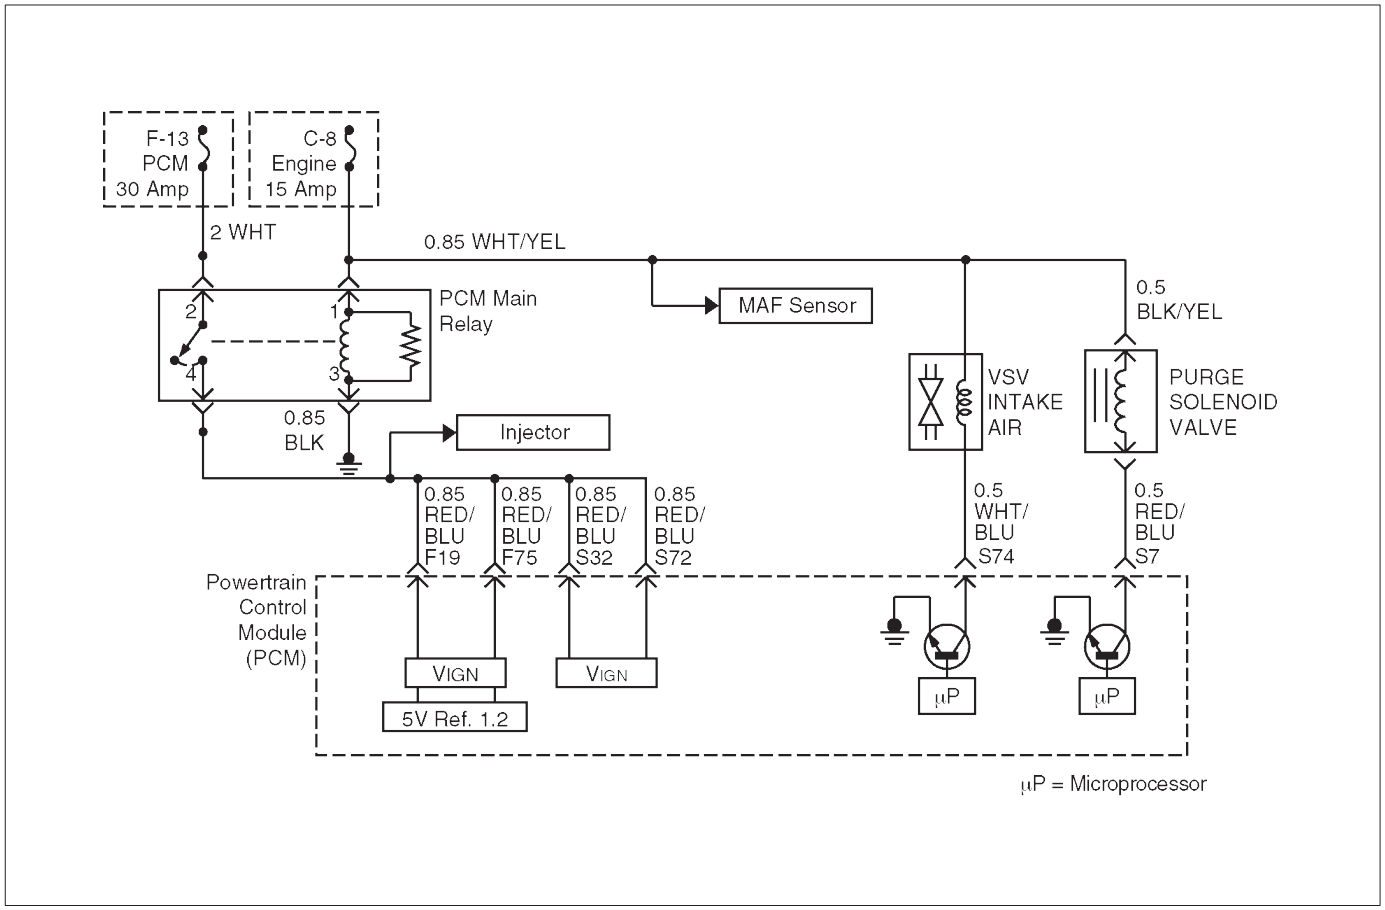Diagnostic Trouble Code (DTC) P0662 VIM Solenoid Circuit Short



D06R200089

Circuit Description

The VIM (Variable Intake Manifold) solenoid (intake air VSV) circuit controls the induction control valve that the length of a port is switched. The VIM solenoid is controlled by the Power Train Control Module (PCM).
When the engine speed is less than 3600 RPM, the VIM solenoid is “ON” and when the engine speed is more than 3600 RPM, the VSV is “”OFF”. The induction control valve is closed at the VIM solenoid is “ON”, and it is opened at the VSV is “OFF”. If the VIM solenoid circuit is opened, DTC P0660 will set.

Conditions for Setting the DTC

- The Ignition is “ON”.
- Ignition voltage is more than 11V.
- There are 20 test failures within a 28–test sample.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set in the Failure Records data only.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run an the fault condition is no longer present.
- A history DTC P0660 will clear after 40 consecutive trip cycles during which the warm up cycles have occurs without a fault.

Diagnostic Aids


Check for following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness – inspect the wiring harness to the solenoid and the fuel tank pressure sensor for an intermittent open short circuit.

DTC P0662 VIM Solenoid Circuit Short

Step	Action	Value(s)	Yes	No
1	Was the “On–Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Check the DTC. Was the DTC for the Mass Air Flow (MAF) sensor or the purge duty solenoid valve stored?	—	Go to *Step 3*	Go to *Step 4*
3	1. Check the circuit between the ENGINE fuse and the MAD sensor or the Variable Intake Manifold solenoid (intake air VSV). 2. If a problem found, repair or replace as necessary. Was a problem found?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*
4	1. Using the Tech 2, perform the “Variable Intake Manifold Test”. Refer to *Variable Intake Manifold Test* Was a problem found?	—	Go to *Step 7*	Go to *Step 5*
5	1. Using the Tech 2, command the VIM solenoid “ON” and “OFF”. 2. Observe working noise for the VIM solenoid. Was working noise detected?	—	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 6*
6	1. Replace the VIM solenoid. Is the action complete?	—	Verify repair	—
7	1. Check the circuit between the ENGINE fuse and the VIM solenoid. 2. If a problem found, repair or replace as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Check the circuit between the PCM fuse and the VIM solenoid. 2. If a problem found, repair or replace as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

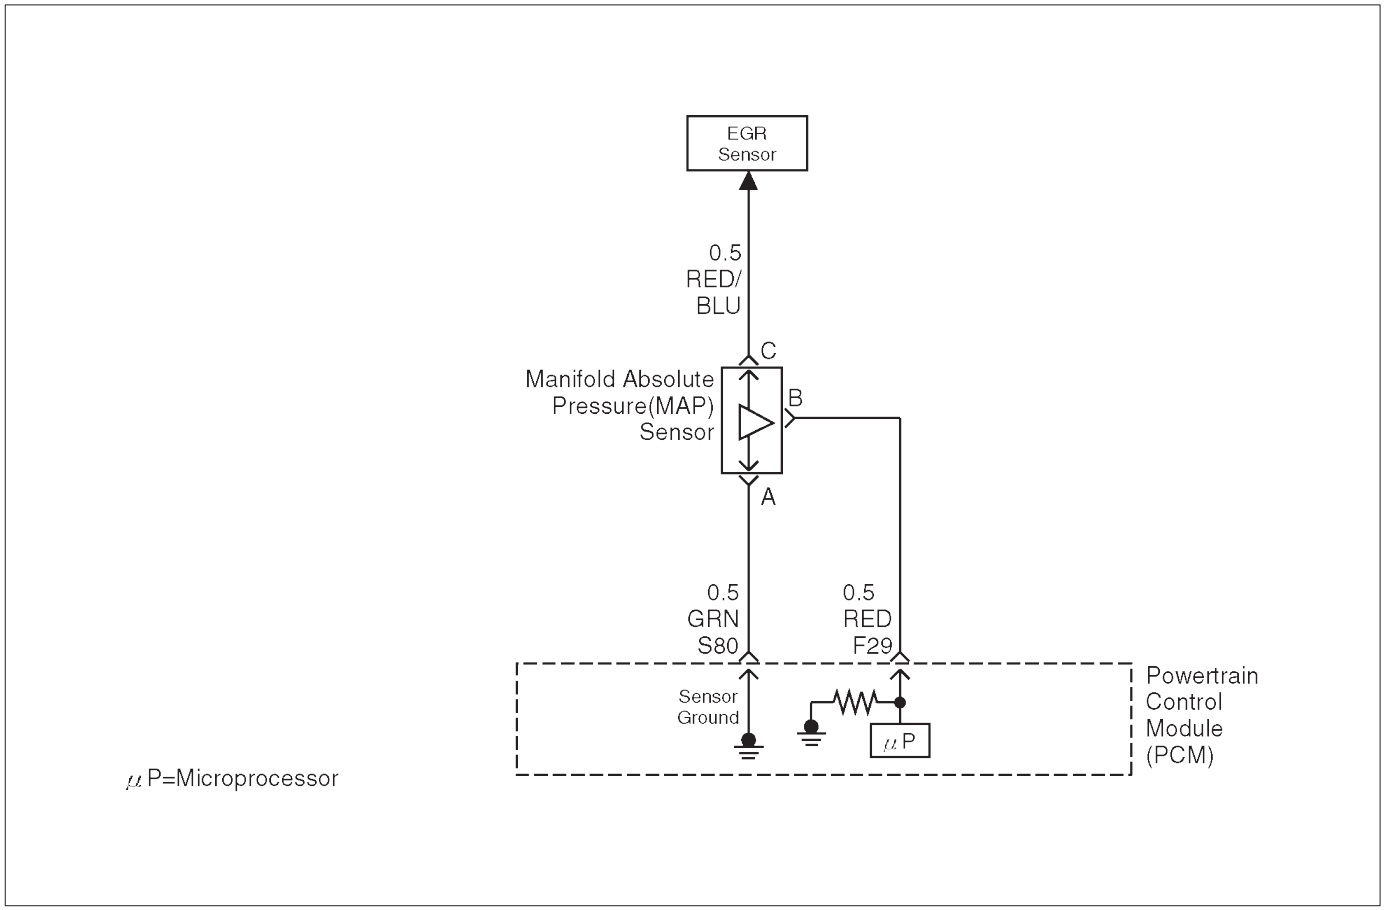Diagnostic Trouble Code (DTC)
P1106 MAP Sensor Circuit Intermittent High Voltage



D06R200048

Circuit Description

The manifold absolute pressure (MAP) sensor responds to changes in intake manifold pressure (vacuum). The MAP sensor signal voltage to the PCM varies from below 2 volts at idle (high vacuum) to above 4 volts with the ignition “ON”, engine not running or at wide-open throttle (low vacuum).

The MAP sensor is used to determine manifold pressure changes while the liner EGR flow test diagnostic is being run (refer to *DTC P0401*), to determine engine vacuum level for some other diagnostics and to determine barometric pressure (BARO). The PCM compares the MAP sensor signal to a calculated MAP based on throttle position and various engine load factors. If the PCM detects a MAP signal that is intermittently above the calculated value, DTC P1106 will set.

Conditions for Setting the DTC

- No TP sensor DTCs are present.
- Engine is running for at least 10 seconds.
- Throttle angle is below 3% if engine speed is below 1000 RPM.
- Throttle angle is below 10% if engine speed is above 1000 RPM.
- The MAP sensor indicates an intermittent manifold absolute pressure above 80 kPa for a total of approximately 5 seconds over a 16-second period of time.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set as Failure Records data only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- A history DTC P1106 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1106 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Leaking or plugged vacuum supply line to the MAP sensor.
- Inspect PCM harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Inspect the wiring harness for damage. If the harness appears to be OK, observe the MAP display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often


the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

- The MAP sensor shares a 5 Volt Reference with the Fuel Tank Pressure sensor. Check the 5 Volt reference if this DTC is also set.
- The MAP sensor shares a ground with the Fuel Tank Pressure sensor and the ECT Sensor. Check the ground if these other DTCs are also set.

DTC P1106 – MAP Sensor Circuit Intermittent High Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Is DTC P0108 also set?	—	Go to *DTC P0108* chart first	Go to *Step 3*
3	Are DTC P1111, P1115, and/or P1120 also set?	—	Go to *Step 6*	Go to *Step 4*
4	Check for a poor sensor ground circuit terminal connection at the MAP sensor. Was a problem found?	—	Go to *Step 9*	Go to *Step 5*
5	Check the MAP signal circuit between the MAP sensor connector and the PCM for an intermittent short to voltage. Was a problem found?	—	Go to *Step 10*	Go to *Step 8*
6	Check for an intermittent short to voltage on the 5 volt reference circuit between the PCM and the following components: • MAP sensor • EGR valve • TP sensor Was a problem found?	—	Go to *Step 10*	Go to *Step 7*
7	Check for a poor sensor ground circuit terminal connection at the PCM. Was a problem found?	—	Go to *Step 9*	Go to *Step 8*
8	Check for an intermittent open or a faulty splice in the sensor ground circuit. Was a problem found?	—	Go to *Step 10*	Check the Procedure Refer to *Diagnostic Aids*
9	Replace the faulty harness connector terminal for the sensor ground circuit. Is the action complete?	—	Verify repair	—
10	Locate and repair the intermittent open/short circuit in the wiring harness as necessary. Is the action complete?	—	Verify repair	—

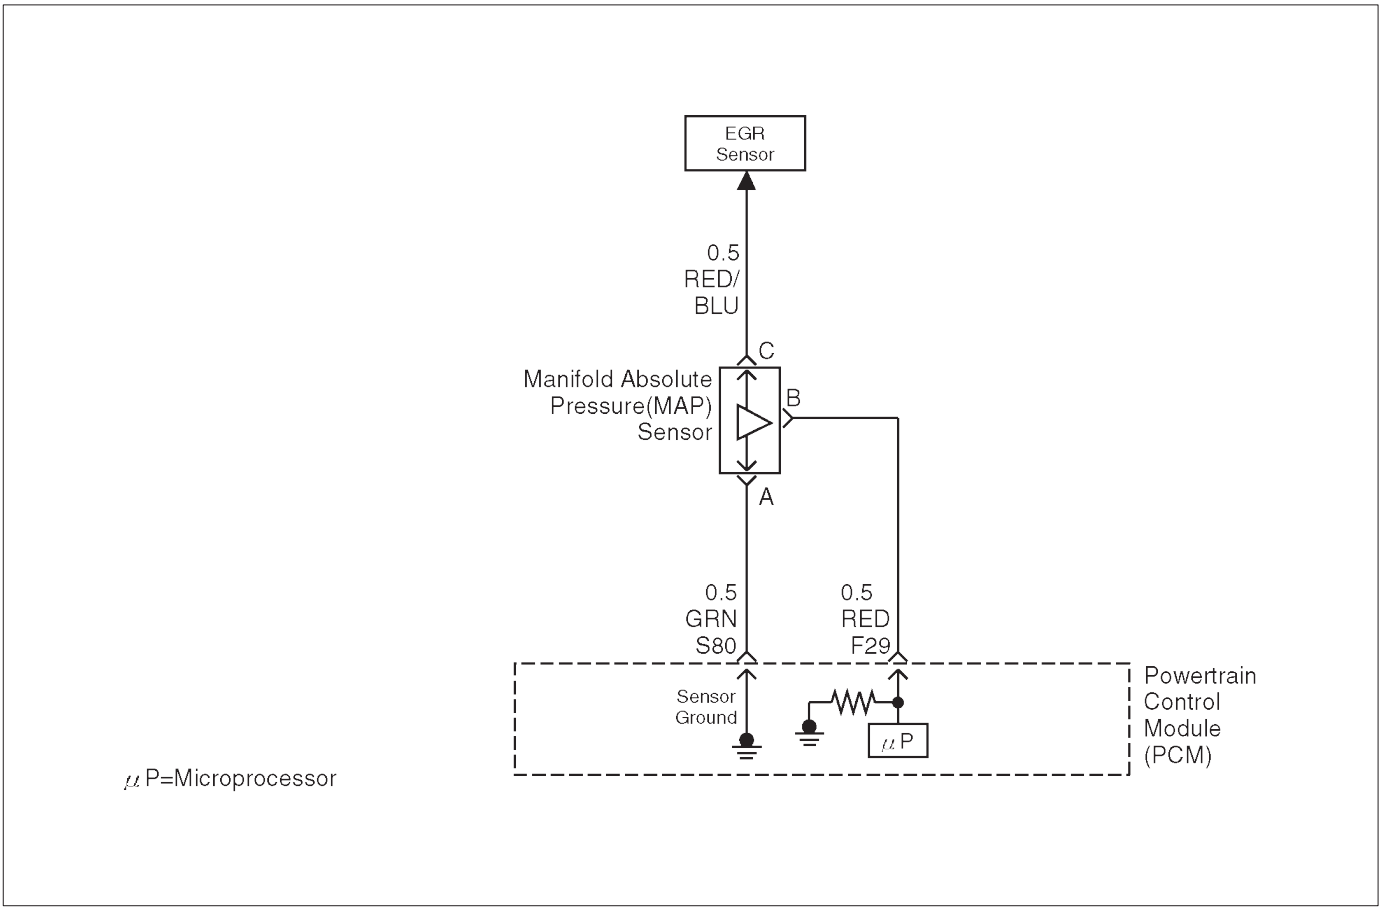Diagnostic Trouble Code (DTC)
P1107 MAP Circuit Intermittent Low Voltage



D06R200048

Circuit Description

The manifold absolute pressure (MAP) sensor responds to changes in intake manifold pressure (vacuum). The MAP sensor signal voltage to the powertrain control module (PCM) varies from below 2 volts at idle (high vacuum) to above 4 volts with the ignition “ON”, engine not running or at wide-open throttle (low vacuum).
The MAP sensor is used to determine manifold pressure changes while the linear EGR flow test diagnostic is being run (refer to *DTC P0401*), to determine engine vacuum level for some other diagnostics and to determine barometric pressure (BARO). The PCM compares the MAP sensor signal to a calculated MAP based on throttle position and various engine load factors. If the PCM detects a MAP signal that is intermittently below the calculated value, DTC P1107 will be set.

Conditions for Setting the DTC

- No TP sensor DTCs are present.
- Engine is running.
- Ignition voltage is more than 11 volts.
- Throttle angle is above 1% if engine speed is less than 1000 RPM.
- Throttle angle is above 3% if engine speed is above 1000 RPM.
- The MAP sensor indicates an intermittent manifold absolute pressure below 11 kPa for a total of approximately 5 seconds over a 16-second period of time.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set as Failure Records data only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- A history DTC P1107 will Clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1107 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- The MAP Sensor shares a 5 Volt reference with the EGR Valve. If these codes are also set, it could indicate a problem with the 5 Volt reference circuit or components itself.
- The MAP Sensor share a ground with the EGR Valve and the IAT Sensor.


- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the MAP display on the Tech 2 while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

DTC P1107 – MAP Sensor Circuit Intermittent Low Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Is DTC P0108 also set?	—	Go to *DTC P0108* chart first	Go to *Step 3*
3	Are DTC P1111, P1115, and/or P1120 also set?	—	Go to *Step 6*	Go to *Step 4*
4	Check for a poor sensor ground circuit terminal connection at the MAP sensor. Was a problem found?	—	Go to *Step 9*	Go to *Step 5*
5	Check the MAP signal circuit between the MAP sensor connector and the PCM for an intermittent short to voltage. Was a problem found?	—	Go to *Step 10*	Go to *Step 8*
6	Check for an intermittent short to voltage on the 5 volt reference circuit between the PCM and the following components: • MAP sensor • EGR valve • TP sensor Was a problem found?	—	Go to *Step 10*	Go to *Step 7*
7	Check for a poor sensor ground circuit terminal connection at the PCM. Was a problem found?	—	Go to *Step 9*	Go to *Step 8*
8	Check for an intermittent open or a faulty splice in the sensor ground circuit. Was a problem found?	—	Go to *Step 10*	Check the Procedure Refer to *Diagnostic Aids*
9	Replace the faulty harness connector terminal for the sensor ground circuit. Is the action complete?	—	Verify repair	—
10	Locate and repair the intermittent open/short circuit in the wiring harness as necessary. Is the action complete?	—	Verify repair	—

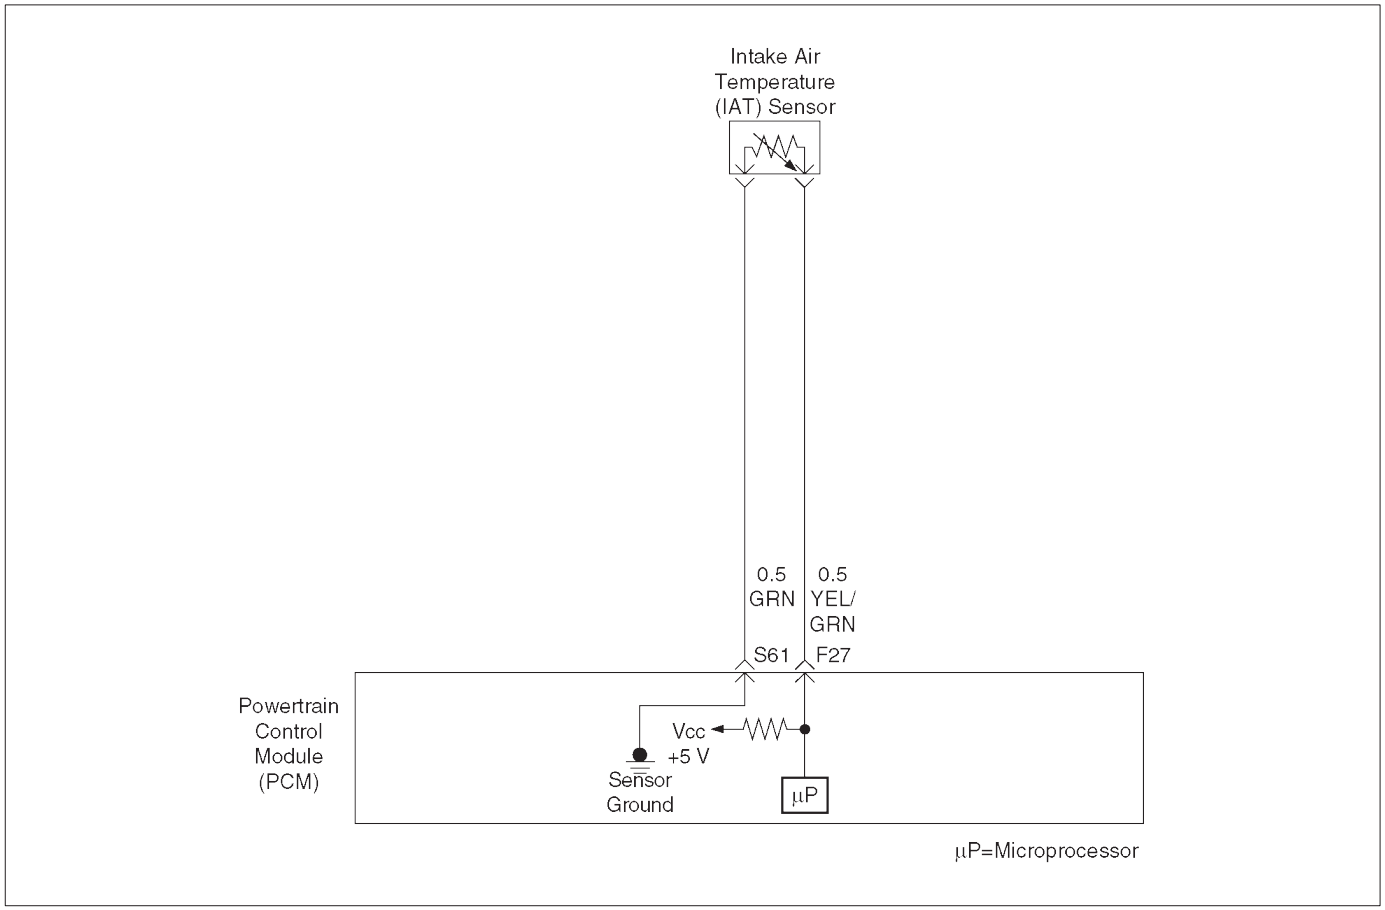Diagnostic Trouble Code (DTC)
P1111 IAT Sensor Circuit Intermittent High Voltage



D06RY00168

Circuit Description

The intake air temperature (IAT) sensor is a thermistor which measures the temperature of the air entering the engine. The powertrain control module (PCM) applies 5 volts through a pull-up resistor to the IAT sensor. When the intake air is cold, the sensor resistance is high and the PCM will monitor a high signal voltage on the IAT signal circuit. If the intake air is warm, the sensor resistance is lower causing the PCM to monitor a lower voltage. DTC P1111 will set when the PCM intermittently detects an excessively high signal voltage on the intake air temperature sensor signal circuit.

Conditions for Setting the DTC

- The engine has been running for over 30 seconds.
- Vehicle speed is less than 32 km/h (20 mph).
- Engine coolant temperature is above 60˚C (140˚F).
- Mass air flow is less than 20g/second.
- IAT signal voltage indicates and intake air temperature intermittently less than –39˚C (–38˚F) (about 5 volts) for approximately 2.5 seconds over a 25-second period of time.

Action Taken When the DTC Sets

- The PCM will substitute a default value for intake air temperature.
- The PCM will store conditions which were present when the DTC set as Failure Records data only. This information will not be stored as Freeze Frame data.
- DTC P1111 does not illuminate the MIL.

Conditions for Clearing the MIL/DTC

- A history DTC P1111 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1111 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM –Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the IAT display on the Tech 2 while moving connectors and wiring harnesses related to the IAT sensor. A change in the IAT display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


Intake Air Temperature Sensor

˚C	˚F	OHMS
Temperature vs. Resistance Values (approximate)		
100	212	177
80	176	332
60	140	667
45	113	1188
35	95	1802
25	77	2796
15	59	4450
5	41	7280
–5	23	12300
–15	5	21450
–30	–22	52700
–40	–40	100700

DTC P1111 –IAT Sensor Circuit Intermittent High Voltage

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Is DTC P0113 also set?	—	Go to *DTC P0113* chart first	Go to *Step 3*
3	Is DTC P1115, also set?	—	Go to *Step 6*	Go to *Step 4*
4	1. Check for a poor sensor ground circuit terminal connection at the IAT sensor. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Check for a poor IAT signal circuit terminal connection at the IAT sensor. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	1. Check the IAT signal circuit between the IAT sensor connector and the PCM for an intermittent open. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Check the IAT signal circuit between the IAT sensor connector and the PCM for an intermittent short to voltage. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Check for a poor sensor ground circuit terminal connection at the PCM. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
9	1. Check for an intermittent open or a faulty splice in the sensor ground circuit. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*

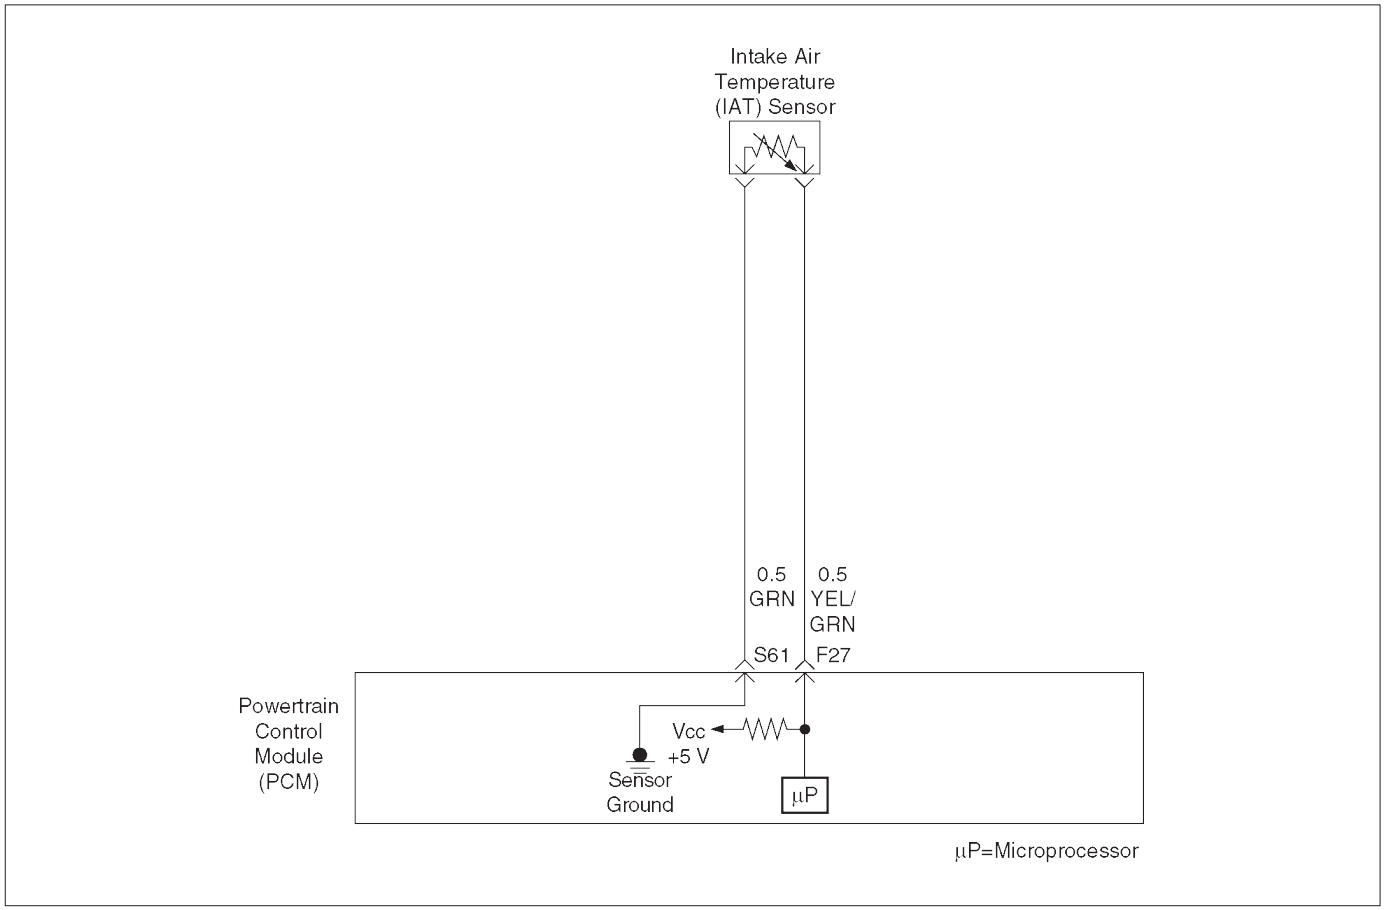Diagnostic Trouble Code (DTC)
P1112 IAT Sensor Circuit Intermittent Low Voltage



Circuit Description

The intake air temperature (IAT) sensor is a thermistor which measures the temperature of the air entering the engine. The powertrain control module (PCM) applies 5 volts through a pull-up resistor to the IAT sensor. When the intake air is cold, the sensor resistance is high and the PCM will monitor a high signal voltage on the IAT signal circuit. If the intake air is warm, the sensor resistance becomes lower, causing the PCM to monitor a lower voltage. DTC P1112 will set when the PCM intermittently detects an excessively low signal voltage on the intake air temperature sensor signal circuit.

Conditions for Setting the DTC

- The engine has been running for over 15 seconds.
- Vehicle speed is greater than 48 km/h (30 mph).
- IAT signal voltage is greater than 148˚C (298˚F) (about 0.10 volt) for a total of 2.5 seconds over a 25-second period of time.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set as Failure Records data only. This information will not be stored as Freeze Frame data.
- The PCM will substitute a default value for intake air temperature.

Conditions for Clearing the MIL/DTC

- A history DTC P1112 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1112 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the IAT display on the Tech 2 while moving connectors and wiring harnesses related to the IAT sensor. A change in the IAT display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

2. Verifies that the fault is present.
3. If DTC P1112 can be repeated only by duplicating the Failure Records conditions, refer to the "Temperature vs. Resistance Value Chart". The chart may be used to test the IAT sensor at various temperatures to evaluate the possibility of a "shifted" sensor that may be shorted above or below a certain temperature. If this is the case, replace the IAT sensor.


Intake Air Temperature Sensor

˚C	˚F	OHMS
Temperature vs. Resistance Values (approximate)		
100	212	177
80	176	332
60	140	667
45	113	1188
35	95	1802
25	77	2796
15	59	4450
5	41	7280
–5	23	12300
–15	5	21450
–30	–22	52700
–40	–40	100700

DTC P1112 – IAT Sensor Circuit Intermittent Low Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Is DTC P0112 also set?	—	Go to *DTC P0112* first	Go to *Step 3*
3	1. Check the IAT signal circuit between the IAT sensor connector and the PCM for an intermittent short to ground. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*

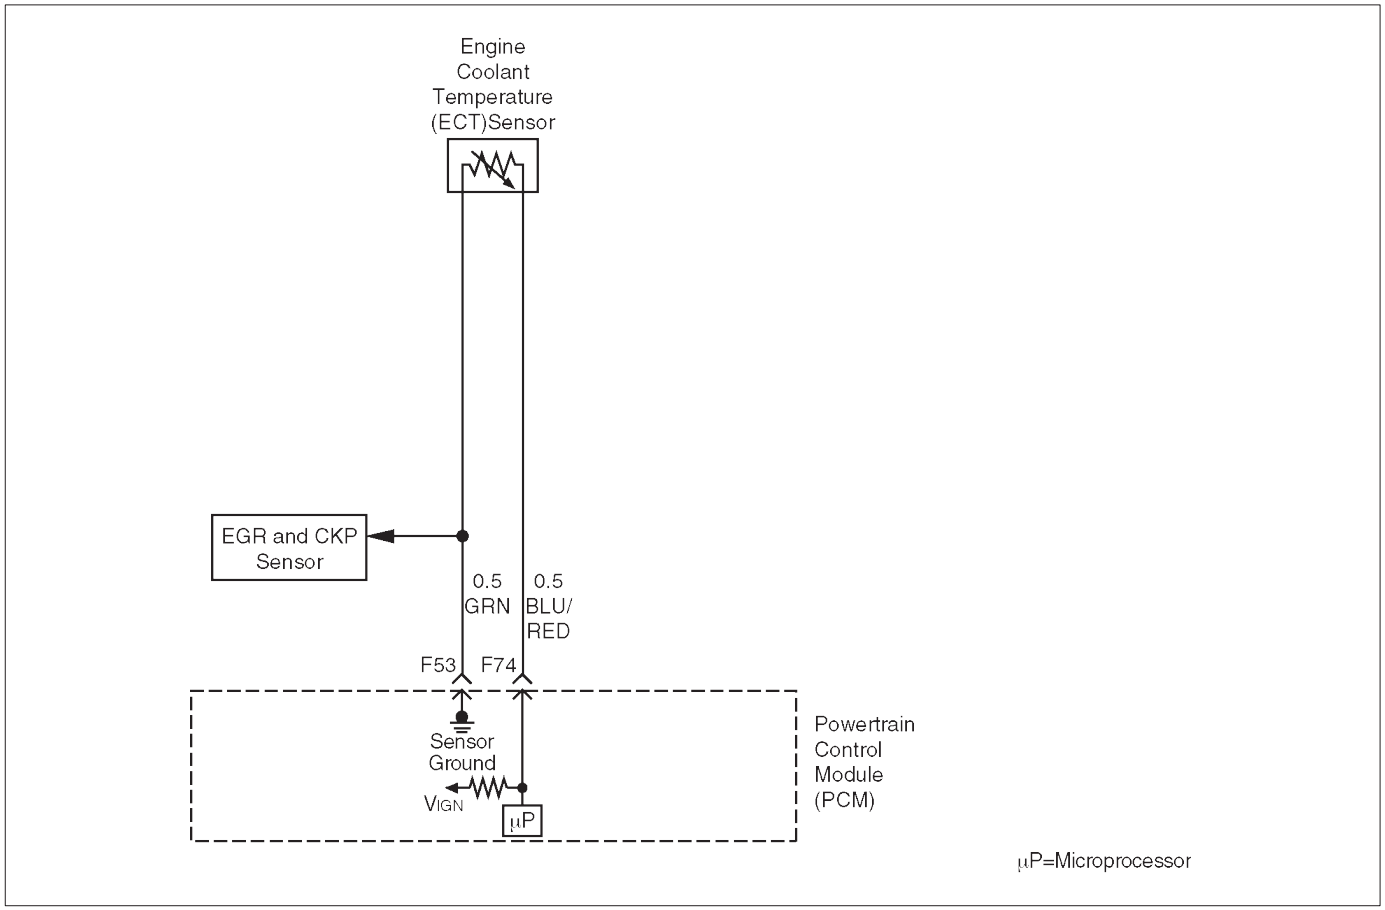Diagnostic Trouble Code (DTC)
P1114 ECT Sensor Circuit Intermittent Low Voltage



D06R200049

Circuit Description

The engine coolant temperature (ECT) sensor is a thermistor mounted in the engine coolant stream. The powertrain control module (PCM) applies a voltage (about 5.0 volts) through a pull-up resistor to the ECT signal circuit. When the engine coolant is cold, the sensor (thermistor) resistance is high, therefore the PCM will measure a high signal voltage. As the engine coolant warms, the sensor resistance becomes less, and the ECT signal voltage measured at the PCM drops. With a fully warmed up engine, the ECT signal voltage should measure about 1.5 to 2.0 volts. If the PCM detects an ECT signal that is intermittently below the range of the ECT sensor, DTC P1114 will set.

Conditions for Setting the DTC

- Engine run time longer than 120 seconds.
- The ECT sensor signal is intermittently greater than 150˚C (302˚F) (about 0.10 volt) for a total of 10 seconds over a 100-second period.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC set as Failure Records data only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- A history DTC P1114 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1114 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the ECT display on the Tech 2 while moving connectors and wiring harnesses related to the ECT sensor. A change in the ECT display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often

the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


Engine Coolant Temperature Sensor

˚C	˚F	OHMS
Temperature vs. Resistance Values (approximate)		
100	212	177
80	176	332
60	140	667
45	113	1188
35	95	1802
25	77	2796
15	59	4450
5	41	7280
–5	23	12300
–15	5	21450
–30	–22	52700
–40	–40	100700

DTC P1114 – ECT Circuit Intermittent Low Voltage

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Is DTC P0117 also set?	—	Go to *DTC P0117* first	Go to *Step 3*
3	1. Check the ECT signal circuit between the ECT sensor connector and the PCM for an intermittent short to ground. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*

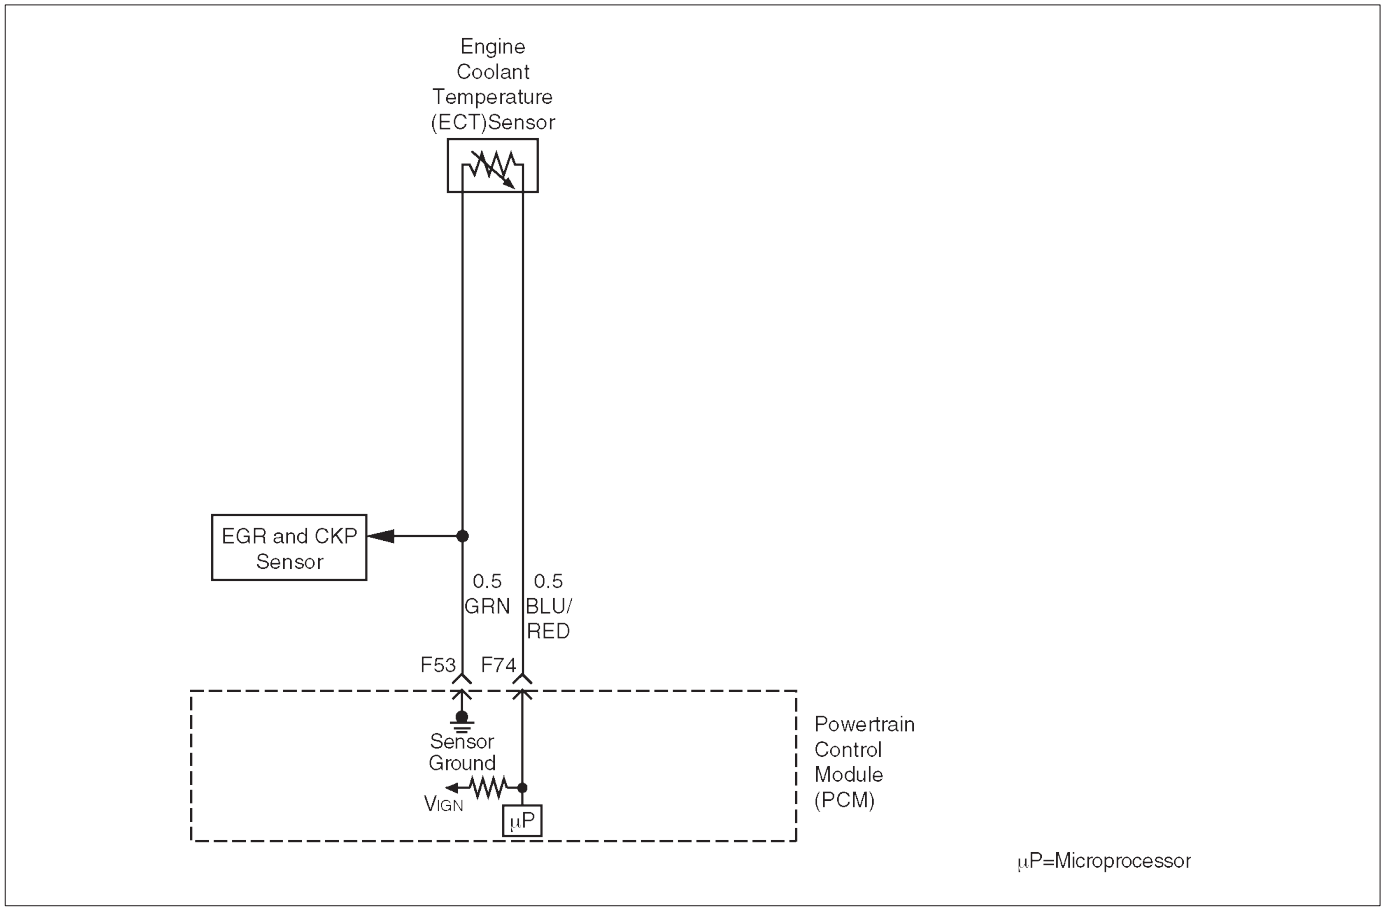Diagnostic Trouble Code (DTC)
P1115 ECT Sensor Circuit Intermittent High Voltage



Circuit Description

The engine coolant temperature (ECT) sensor is a thermistor mounted in the engine coolant stream. The powertrain control module (PCM) applies a voltage (about 5.0 volts) through a pull-up resistor to the ECT signal circuit. When the engine coolant is cold, the sensor (thermistor) resistance is high, therefore the PCM will measure a high signal voltage. As the engine coolant warms, the sensor resistance becomes less, and the ECT signal voltage measured at the PCM drops. With a fully warmed up engine, the ECT signal voltage should measure about 1.5 to 2.0 volts. If the PCM detects an ECT signal that is intermittently above the range of the ECT sensor, DTC P1115 will set.

Conditions for Setting the DTC

- Engine running time longer than 90 seconds.
- The ECT sensor signal is intermittently greater than –39˚C (–38˚F) (about 5 volts) for a total of 10 seconds over a 100-second period.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set as Failure Records data only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- A history DTC P1115 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1115 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage. If the harness appears to be OK, observe the ECT display on the Tech 2 while moving connectors and wiring harnesses related to the ECT sensor. A change in the ECT display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often

the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


Engine Coolant Temperature Sensor

˚C	˚F	OHMS
Temperature vs. Resistance Values (approximate)		
100	212	177
80	176	332
60	140	667
45	113	1188
35	95	1802
25	77	2796
15	59	4450
5	41	7280
–5	23	12300
–15	5	21450
–30	–22	52700
–40	–40	100700

DTC P1115 – ECT Sensor Circuit Intermittent High Voltage

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Is DTC P0118 also set?	—	Go to *DTC P0118* chart first	Go to *Step 3*
3	Is DTC P1111 also set?	—	Go to *Step 8*	Go to *Step 4*
4	1. Check for a poor sensor ground circuit terminal connection at the ECT sensor. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Check for a poor ECT signal circuit terminal connection at the ECT sensor. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	1. Check the ECT signal circuit between the ECT sensor connector and the PCM for an intermittent open. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Check the ECT signal circuit between the ECT sensor connector and the PCM for an intermittent short to voltage. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Check for a poor sensor ground circuit terminal connection at the PCM. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
9	1. Check for an intermittent open or a faulty splice in the sensor ground circuit. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Check the Procedure Refer to *Diagnostic Aids*

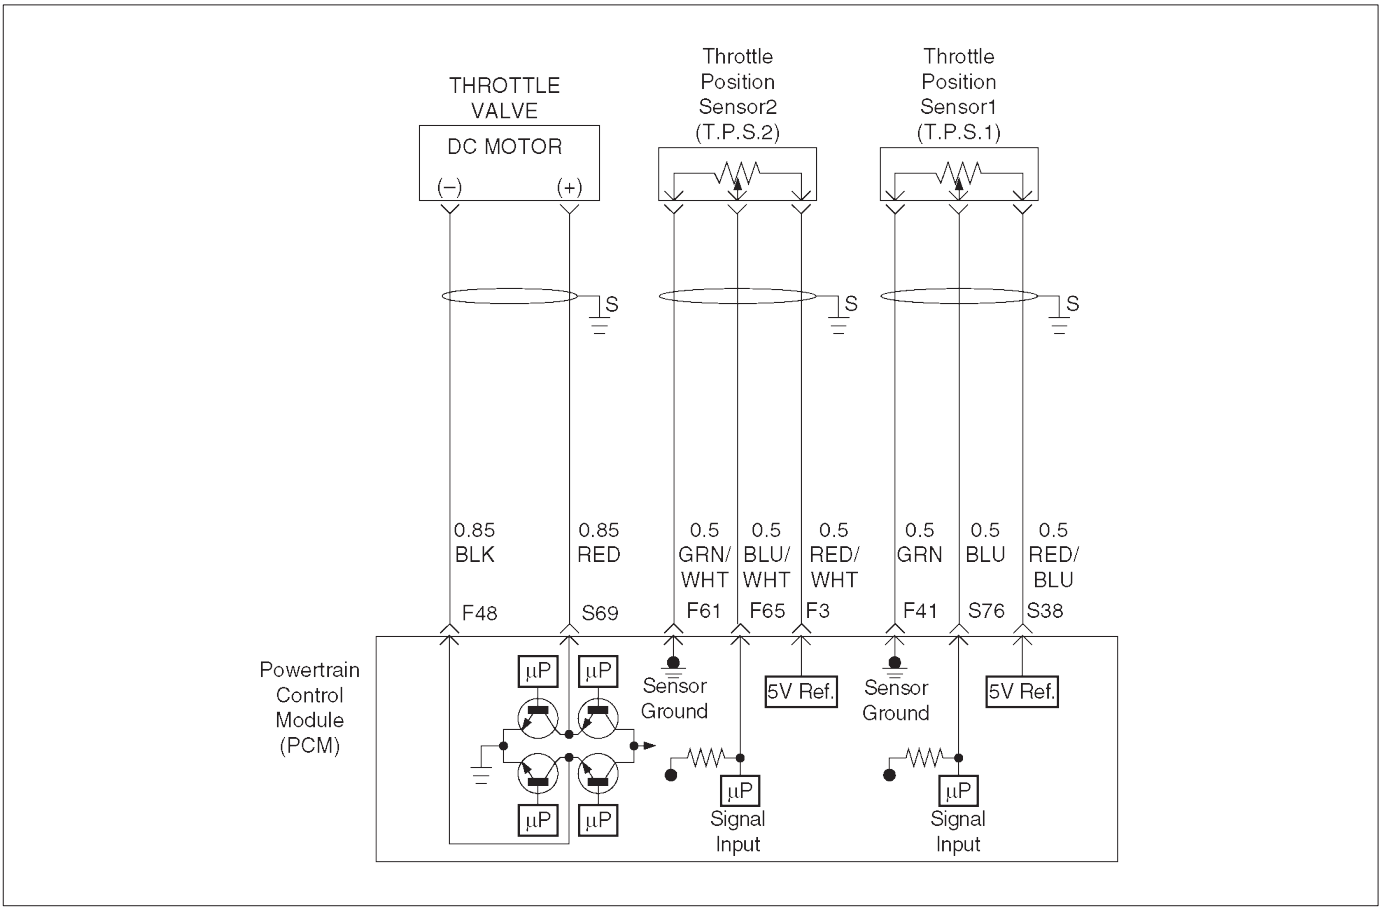Diagnostic Trouble Code(DTC)
P1120-TPS 1 Throttle Position Sensor (TPS1) Circuit Fault



Circuit Description

- The throttle position (TP) sensor circuit provides a voltage signal relative to throttle blade angle.

  The throttle blade angle will vary about 8 % at closed throttle to about 92 % at wide open throttle(WOT).

  This code detects a continuous short to ground or high in either the cicuit or the sensor.

Conditions for setting the DTC

- The Ignition is “ON”.
- The throttle blade angle is less than 2.5 % or more tnan 97.5 % for 18 failres within 500 test samples (15.6m sec)

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A histror DTC P1120 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1120 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- The MAP sensor shares a 5 Volt reference with the Fuel Tank Pressure, APS1, APS3 and EGR value.
- The MAP sensor shares a ground with the Fuel Tank Pressure, the ECT sensor, and the Transmission Fluid.
- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK,observe the TPS 1 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault.

If DTC P1120 cannot be duplicated,the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1120 Diagnostic Chart may isolate the cause of the fault.


Diagnostic Trouble Code(DTC)P1120-TPS 1 Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board(OBD)System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System check*
3	1. Ignition “ON”, engine not running. 2. Observe the MAP reading on the Tech 2. Is the MAP reading less than the specified value?	100kPa	Go to *Step 4*	Go to *Step 7*
4	1. Disconnect the MAP sensor. 2. Connect a test 5 volt reference circuit and the MAP signal at the MAP sensor harness connector. 3. Observe the MAP reading on the Tech 2. Is the MAP reading less than the specified value? (If no, start with diagnosis chart forother sensors in the circuit and see if 5V returns.)	—	Go to *Step 6*	Go to *Step 5*
5	1. Check the MAP signal circuit between the PCM and MAP grund circuit. 2. If the MAP signal circuit is open or shoted, repair it as necessary. Was the MAP signal circuit open or shorted?	—	Verify repair	Go to *Step 13*
6	Replace the MAP sensor. Is the action complete?	—	Verify repair	—
7	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition “ON” but not engine run. 4. Observe the TP angle reading on the Tech 2 while alowly opening the throttle. NOTE: The value check of TPS must be performed in less than 15 seconds. Does the TP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle TPS1= 6~12% Wide open throttle TPS1= 79~83%	Go to *Step 8*	Go to *Step 9*
8	Was the DTC P1120 stored?	—	Go to *Step 13*	Check the procedure. Refer to *Diagnostic Aids*
9	1. Connect a DVM between the 5Volt reference circuit and the TP sensor ground circuit at the TP1sensor harness connector. 2. Observe the voltage using a DVM. Is the voltage near the specified value?	5V	Go to *Step 10*	Go to *Step 11*

Diagnostic Trouble Code(DTC)P1120-TPS 1 Circuit Fault (Cont'd)

Step	Action	Value(s)	Yes	No
10	Check the following items; 1. TP1 signal circuit for a short to voltage. 2. TP1 sensor ground circuit for high resistance between the PCM and the TP sensor. 3. TP1 sensor ground circuit for a poor connection. 4. If a problem is found,repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
11	Check the following items; 1. TP signal circuit or 5 volt reference circuit for a poor connection. 2. TP signal circuit or 5 volt reference circuit for high resistance between the PCM and the TP sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	Replace the TP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 13*
13	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

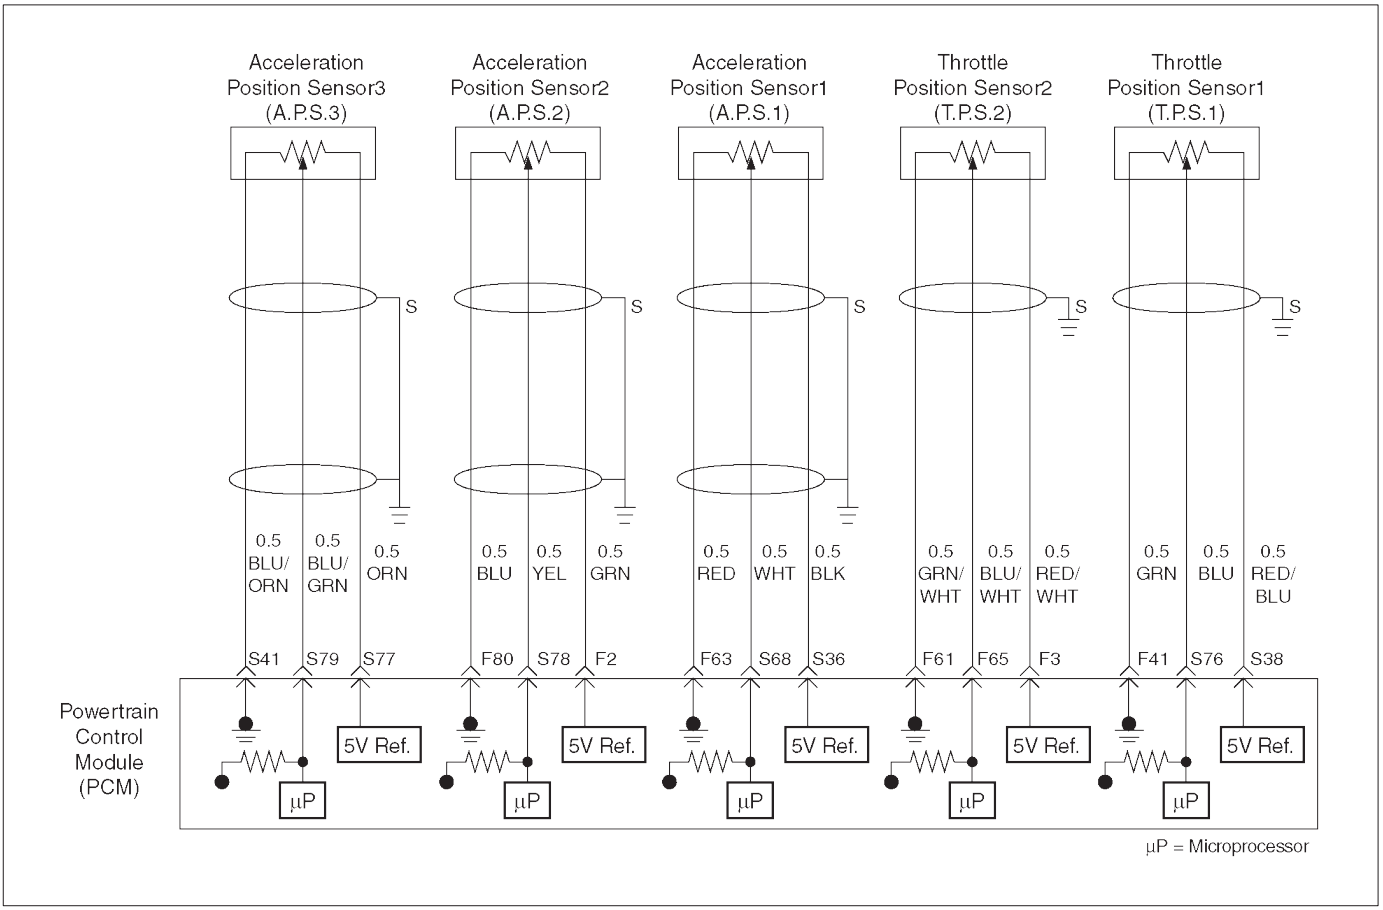Diagnostic Trouble Code (DTC)
P1125 ETC (Electric throttle control) Limit Performance Mode



D06RY00157

Circuit Description

- The acceleration position (AP1) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle will vary about 13 % at idle position to about 87 % at wide open throttle (WOT).

  This code detects if the system is in Limit Performance Mode (Fail safe Mode) and Multiple DTCs performance Mode.

Conditions for setting the DTC

- The Ignition is " ON".
- Limit Performance Mode is active. (Fail safe Mode)

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1125 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1125 can be cleared using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the APP sensor 1, APP sensor 2, APP sensor 3 display on the Tech 2 While moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault.

  If DTC P1125 cannot be duplicated,the information includedin the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently,performing the DTC P1125 Diagnostic Chart may isolate the cause of the fault.


DTC P1125 – ETC Limit Performance Model

Step	Action	Value(s)	Yes	No
1	Was the "On-Board (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition "OFF". 3. Ignition ON" but not engine run. 4. Observe the AP angle reading on the Tech 2 while alowly opening the throttle. Does the AP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle APS1 = 11~15% APS2 = 85~89% APS3 = 85~89% Wide open throttle APS1 = 85~89% APS2 = 11~15% APS3 = 32~36%	Go to *Step 3*	Go to *Step 4*
3	Was the P1125 stored?	—	Go to *Step 8*	Check the procedure. Refer to *Diagnostic Aids*
4	1. Connect a DVM between the 5 Voltge supply circuit and the AP1, AP2 AND AP3 sensor ground circuit at the AP sensor harness connector. 2. Observe the voltage using a DVM. Is the voltage reading near the specified value?	5V	Go to *Step 5*	Go to *Step 6*
5	Check the following items; 1. AP1, AP2 or AP3 signal circuit for a short to voltage. 2. AP1, AP2 or AP3 sensor ground circuit for high resistance between the PCM and the AP sensor. 3. AP1, AP2 or AP3 sensor ground circuit for a poor connection. 4. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	Check the following items; 1. AP1, AP2 or AP3 signal circuit or 5 volge supply circuit for a poor connection. 2. AP1, AP2 or AP3 signal circuit or 5 volge supply circuit for high resistance between the PCM and the AP1, AP2 or AP3 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*

DTC P1125 – ETC Limit Performance Model (Cont'd)

Step	Action	Value(s)	Yes	No
7	Replace the AP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 8*
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed.Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

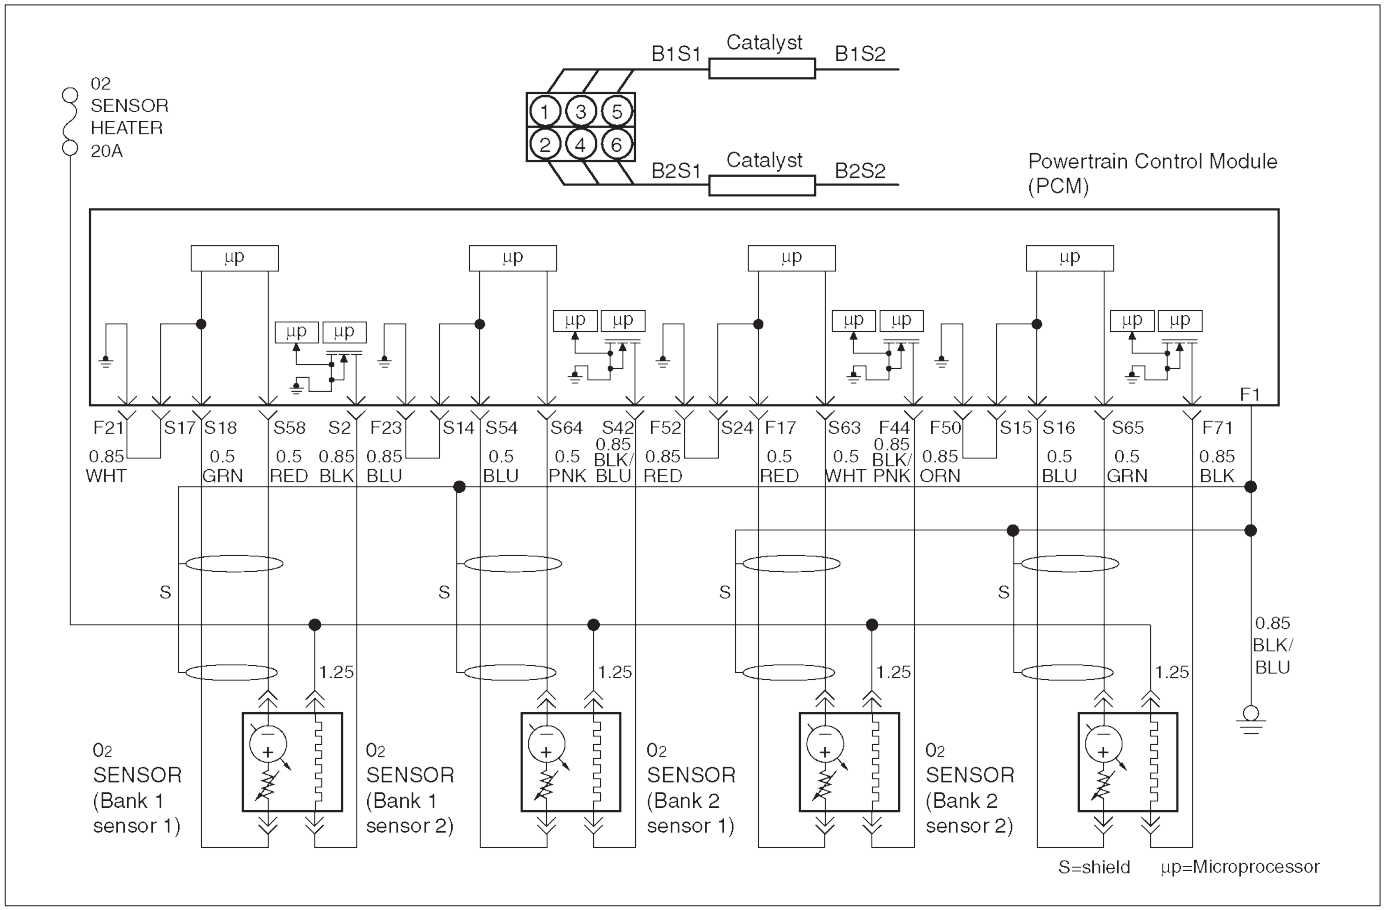Diagnostic Trouble Code (DTC)
P1133 HO2S Insufficient Switching Bank 1 Sensor 1



D06R200010

Circuit Description

The powertrain control module (PCM) monitors the heated oxygen sensor (HO2S) activity for 90 seconds after “closed loop” and stoichiometric operation have been enabled. During this test period the PCM counts the number of times that the HO2S signal voltage crosses the rich-to-lean and lean-to-rich threshold. If the PCM determines that the HO2S did not switch enough times, DTC P1133 will be set.

A lean-to-rich switch is determined when the HO2S voltage changes above and below 450 mV.

Heated oxygen sensors are used to minimize the amount of time required for “closed loop” fuel control operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active. Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature for accurate exhaust oxygen content readings further from the engine.

Conditions for Setting the DTC

- Engine coolant temperature (ECT) is above 60°C (140°F).
- Engine is operating in “closed loop”.
- The engine has been running at least one minute.
- Canister purge duty cycle is greater than 2%.
- Engine speed is between 1500 RPM and 3000 RPM.
- Mass air flow (MAF) is between 9 g/second and 42 g/second.
- Above conditions are present for 3 seconds.
- 90 seconds after “closed loop” and stoichiometric operation have been achieved, the PCM monitors the oxygen sensor as it switches above and below 450 mV. If fewer than 23 rich-to-lean and lean-to-rich switches are detected, DTC P1133 will be set.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- ”Open loop” fuel control will be in effect.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1133 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1133 can be cleared by using Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

A malfunction in the HO2S heater ignition feed or ground circuit may cause a DTC P1133 to set. Check HO2S heater circuitry for intermittent faults or poor connections. If connections and wiring are OK and DTC P1133 continues to set, replace the Bank 1 HO2S 1.
Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help to determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. A condition that affects other heated oxygen sensors indicates probable contamination. To avoid damaging the replacement sensors, correct the condition which caused the contamination before replacing the affected sensors.
5. This step checks for conditions which may cause the heated oxygen sensor to appear faulty. Correct any of the described conditions if present.
11. To avoid damaging replacement sensors, correct the condition which caused the contamination before replacing the affected sensors.

DTC P1133 – HO2S Insufficient Switching Bank 1 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	**IMPORTANT:** If any DTCs are set (except P1153 or P1154) refer to those DTCs before proceeding with this diagnostic chart. 1. Engine idling at operating temperature. 2. Operating the vehicle within parameters specified under “Conditions for Setting the DTC” criteria included in Diagnostic Support. 3. Using a Tech 2, monitor “DTC” info for DTC P1133 until the DTC P1133 test runs. 4. Note the test result. Does the Tech 2 indicate DTC P1133 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Did the Tech 2 also indicate that the P1153 or P1154 tests failed?	—	Go to *Step 20*	Go to *Step 4*
4	Check for leaks at the exhaust pipe joints. Are the joints leaking?	—	Go to *Step 5*	Go to *Step 6*
5	Tighten the bolt/nuts at the leaking joints. Is your action complete?	—	Go to *Step 2*	—
6	Check for gaskets that are damaged or improperly installed. Are there damaged or misaligned gaskets?	—	Go to *Step 7*	Go to *Step 8*
7	1. Replace the damaged gaskets. 2. Align the connections. 3. Tighten the connections. Is your action complete?	—	Go to *Step 2*	—
8	Check for loose exhaust flange connections. Are the flange connections loose?	—	Go to *Step 9*	Go to *Step 10*
9	Tighten the stud nuts or bolts to specifications. Is your action complete?	—	Go to *Step 2*	—
10	Check for burned or corroded exhaust pipes. Are the exhaust pipes burned or corroded?	—	Go to *Step 11*	Go to *Step 12*


DTC P1133 – HO2S Insufficient Switching Bank 1 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
11	Replace the exhaust pipes, as required. Is your action complete?	—	Go to *Step 2*	—
12	Check for leaks at the exhaust manifold. Are there leaks at the exhaust manifold?	—	Go to *Step 13*	Go to *Step 14*
13	Tighten the bolts to specifications or replace the manifold if necessary. Is your action complete?	—	Go to *Step 2*	—
14	Visually/physically inspect the following items: • Ensure that the Bank 1 HO2S 1 is securely installed. • Check for corrosion on the terminals. • Check the terminals at Bank 1 HO2S 1 and at the PCM. • Check for damaged wiring. Was a problem found in any of the above areas?	—	Verify repair	Go to *Step 15*
15	1. Disconnect Bank 1 HO2S 1. 2. Ignition "ON". 3. Using a DVM at the PCM side of the connector, check the voltage between the high signal circuit and ground. Also measure between the low signal circuit and ground. Are both voltages in the specified range?	3-4 mV	Go to *Step 18*	Go to *Step 16*
16	1. Ignition "OFF". 2. Check for damage to PCM pins or terminals. Was a problem found.	—	Verify repair	Go to *Step 17*
17	Check for a short to voltage or ground or an open in the signal circuit. Was a problem found?	—	Verify repair	Go to *Step 18*
18	1. Ignition "OFF". 2. Disconnect the PCM connector. 3. With the HO2S disconnected, check for high and low signal circuits shorted together between the PCM and HO2S. Was a problem found?	—	Verify repair	Go to *Step 19*
19	With the PCM connected and Bank 1 HO2S 1 disconnected from the harness, check Bank 1 HO2S 1 with a Tech 2. Is the voltage in the specified range?	425-475 mV	Go to *Step 21*	Go to *Step 22*
20	Replace the affected heated oxygen sensors. NOTE: Before replacing the sensors, the cause of the contamination must be determined and corrected. • Fuel contamination • Use of improper RTV sealant. • Engine oil/coolant consumption. Is the action complete?	—	Verify repair	—

DTC P1133 – HO2S Insufficient Switching Bank 1 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
21	Replace Bank 1 HO2S 1. Is the action complete?	—	Verify repair	—
22	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

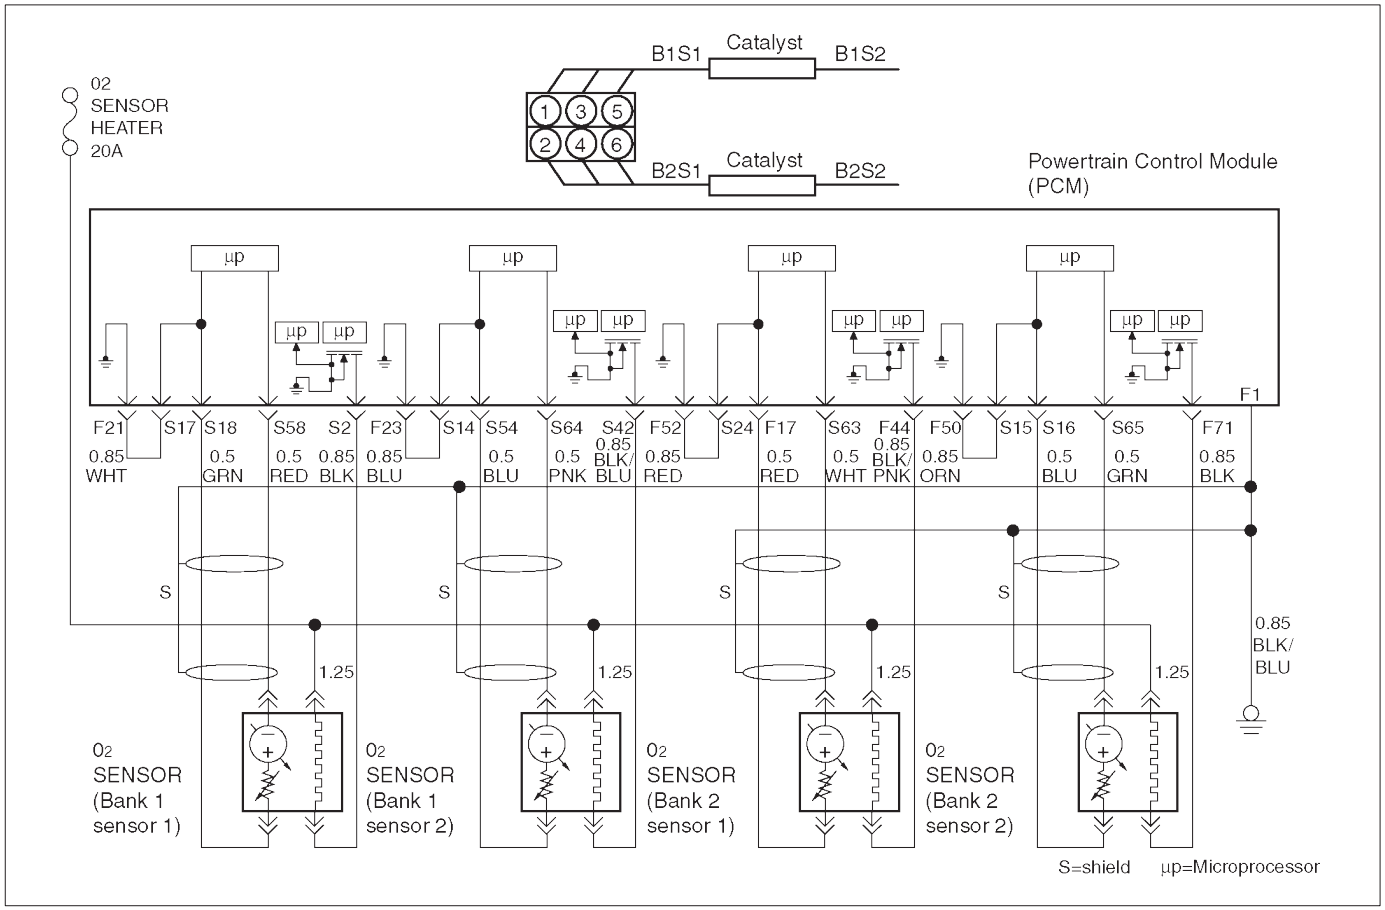Diagnostic Trouble Code (DTC)
P1134 HO2S Transition Time Ratio Bank 1 Sensor 1



D06R200010

Circuit Description

The powertrain control module (PCM) monitors the heated oxygen sensor (HO2S) activity for 90 seconds after “closed loop” and stoichiometric operation have been established. During the monitoring period the PCM counts the number of times that the HO2S responds from rich-to-lean and from lean-to-rich and adds the amount of time it took to complete all transitions. With this information, an average time for all transitions can be determined. The PCM then divides the rich-to-lean average by the lean-to-rich average to obtain a ratio. If the HO2S transition time ratio is not within this range, DTC P1134 will be set, indicating that the oxygen sensor is not responding as expected to changes in exhaust oxygen content.

Conditions for Setting the DTC

- No related DTCs.
- Engine coolant temperature (ECT) is above 60˚C (140˚F).
- Engine is operating in “closed loop”,
- The engine has been running at least one minute.
- Canister purge duty cycle is greater than 2%.
- Engine speed is between 1500 RPM and 3000 RPM.
- Mass air flow (MAF) is between 18 g/second and 42 g/second.
- Above conditions are present for a 3-second monitoring period.
- 90 seconds after “closed loop” and stoichiometric operation have been enabled, Bank 1 HO2S 1 transition ratio between lean-to-rich and rich-to-lean is less than 0.44 or greater than 3.8.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after second consecutive trip in which the fault is detected.
- ”Open loop” fuel control will be in effect.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1134 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1134 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

A malfunction in the HO2S heater ignition feed or ground circuit may cause a DTC P1134 to set. Check HO2S heater circuitry for intermittent faults or poor connections. If connections and wiring are OK and DTC P1134 continues to set, replace the Bank 1 HO2S 1.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. A condition that affects other heated oxygen sensors indicates probable contamination. To avoid damaging replacement sensors, correct the condition which caused the contamination before replacing the affected sensors.
5. This step checks for conditions which may cause the heated oxygen sensor to appear faulty. Correct any of the described conditions if present.
8. To avoid damaging replacement sensors, correct the condition which caused the contamination before replacing the affected sensors.

DTC P1134 – HO2S Transition Time Ratio Bank 1 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	**IMPORTANT:** If any DTCs are set (except P1153 and/or P1154), refer to those DTCs before proceeding with this diagnostic chart. 1. Idle the engine at operating temperature. 2. Operate the vehicle within parameters specified under “Conditions for Setting the DTC” criteria included in Diagnostic Support. 3. Using a Tech 2, monitor “DTC” info for DTC P1134 until the DTC P1134 test runs. 4. Note the test result. Does Tech 2 indicate DTC 1134 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Did the Tech 2 also indicate P1153, and/or P1154 test failed?	—	Go to *Step 17*	Go to *Step 4*
4	Check for leaks at the exhaust pipe joints. Are the joints leaking?	—	Go to *Step 5*	Go to *Step 6*
5	Tighten the U-bolt nuts at the leaking joints. Is your action complete?	—	Go to *Step 2*	—
6	Check for gaskets that are damaged or improperly installed. Are there damaged or misaligned gaskets?	—	Go to *Step 7*	Go to *Step 8*
7	1. Replace the damaged gaskets. 2. Align the connections. 3. Tighten the connections. Is your action complete?	—	Go to *Step 2*	—
8	Check for loose exhaust flange connections. Are the flange connections loose?	—	Go to *Step 9*	Go to *Step 10*
9	Tighten the stud nuts or bolts to specifications. Is your action complete?	—	Go to *Step 2*	—
10	Check for burned or corroded exhaust pipes. Are the exhaust pipes burned or corroded?	—	Go to *Step 11*	Go to *Step 12*
11	Replace the exhaust pipes, as required. Is your action complete?	—	Go to *Step 2*	—


DTC P1134 – HO2S Transition Time Ratio Bank 1 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
12	Check for leaks at the exhaust manifold. Are there leaks at the exhaust manifold?	—	Go to *Step 13*	Go to *Step 14*
13	Tighten the bolts to specifications or replace the manifold if necessary. Is your action complete?	—	Go to *Step 2*	—
14	Visually/physically inspect the following items: • Ensure that the Bank 1 HO2S 1 is securely installed. • Check for corrosion on terminals. • Check the terminal tension (at Bank 1 HO2S 1 and at the PCM). • Check for damaged wiring. Was a problem found in any of the above areas?	—	Go to *Step 18*	Go to *Step 15*
15	1. Disconnect Bank 1 HO2S 1. 2. Ignition "ON". 3. Using a DVM at the PCM side of the HO2S 1 connector, measure the voltage between the high signal circuit and ground. 4. Also measure the voltage between the low signal circuit and ground. Are both voltages in the specified range?	3-4V	Go to *Step 16*	Go to *Step 19*
16	1. With Bank 1 HO2S 1 disconnected, jumper the high and low (PCM side) signal circuits to ground. 2. Ignition "ON". 3. Using a Tech 2, monitor the Bank 1 HO2S 1 voltage. Does the Tech 2 indicate less than 10 mV and immediately return to about 450 mV when the jumper is removed?	—	Go to *Step 21*	Go to *Step 22*
17	Replace affected heated oxygen sensors. NOTE: Before replacing sensors, the cause of the contamination must be determined and corrected. • Fuel contamination. • Use of improper RTV sealant. • Engine oil/coolant consumption. Is the action complete?	—	Verify repair	—
18	Repair condition as necessary. Is the action complete?	—	Verify repair	—
19	Check for faulty PCM connections or terminal damage. Is the action complete?	—	Verify repair	Go to *Step 20*
20	Repair open, short or grounded signal circuit. Is the action complete?	—	Verify repair	Go to *Step 7*

DTC P1134 – HO2S Transition Time Ratio Bank 1 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
21	Replace Bank 1 HO2S 1. Is the action complete?	—	Verify repair	—
22	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

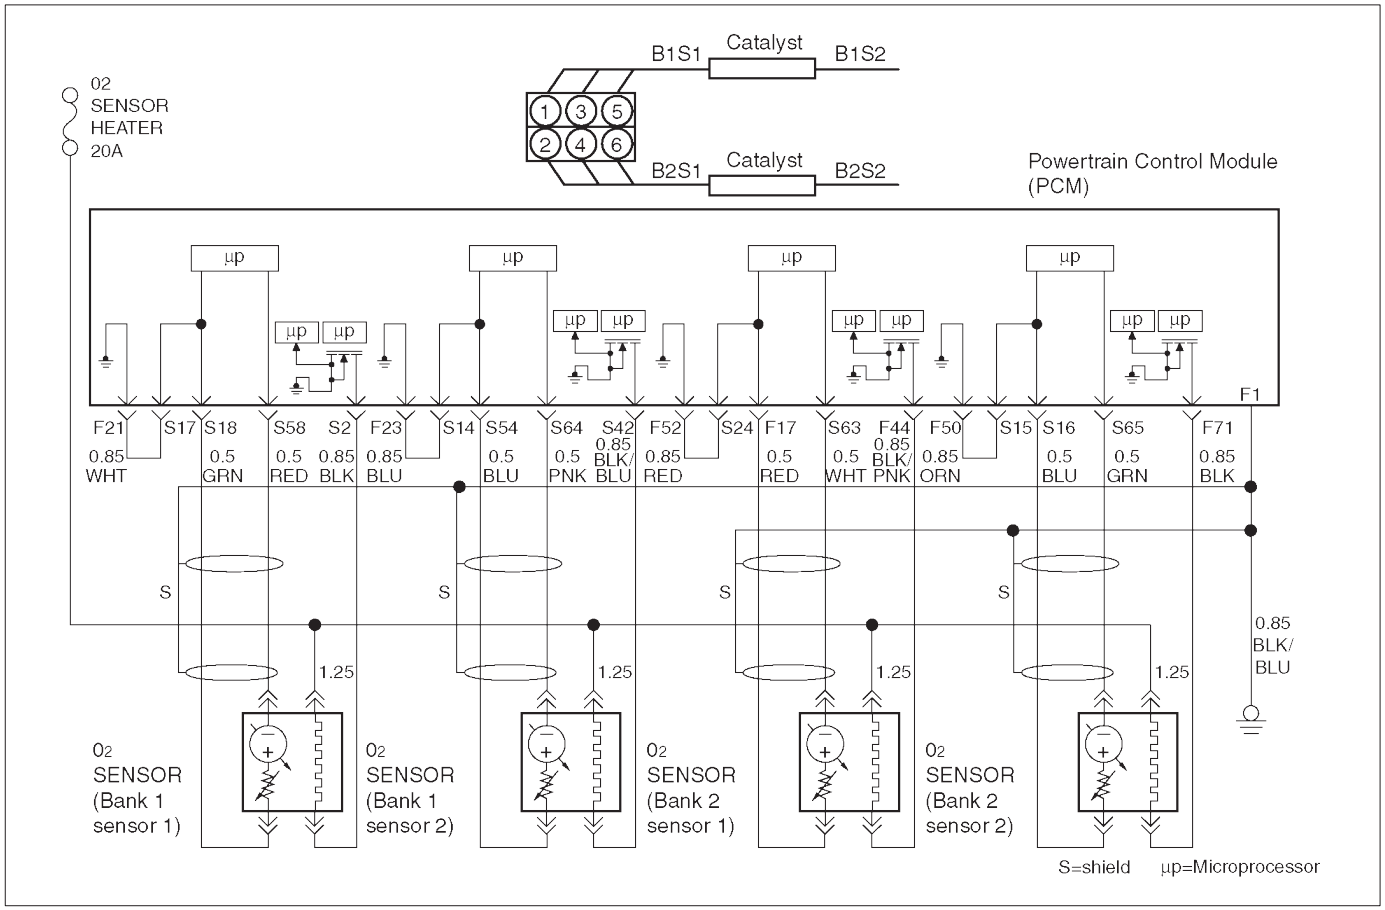Diagnostic Trouble Code (DTC)
P1153 HO2S Insufficient Switching Bank 2 Sensor 1



D06R200010

Circuit Description

The powertrain control module (PCM) monitors the heated oxygen sensor (HO2S) activity for 90 seconds after “closed loop” and stoichiometric operation have been enabled. During this test period the PCM counts the number of times that the HO2S signal voltage crosses the rich-to-lean and lean-to-rich thresholds. If the PCM determines that the HO2S did not switch enough times, DTC P1153 will be set.

A lean-to-rich switch is determined when the HO2S voltage changes above and below 450 mV.

Heated oxygen sensors are used to minimize the amount of time required for “closed loop” fuel control operation and to allow accurate catalyst monitoring. The oxygen sensor heater greatly decreases the amount of time required for fuel control sensors Bank 1 HO2S 1 and Bank 2 HO2S 1 to become active. Oxygen sensor heaters are required by post-catalyst monitor sensors to maintain a sufficiently high temperature for accurate exhaust oxygen content readings further from the engine.

Conditions for Setting the DTC

- The engine is operating in “closed loop”,
- Engine coolant temperature (ECT) is above 60°C (140°F).
- The engine has been running for over 60 seconds.
- Canister purge duty cycle is greater than 2%.
- Engine speed is between 1500 RPM and 3000 RPM.
- Mass air flow is between 8 g/second and 42 g/second.
- Above conditions are present for a 3 seconds.
- 90 seconds after “closed loop” and stoichiometric operation have been enabled, the PCM monitors the oxygen sensor switching above and below 450 mV. If fewer than 27 rich-to-lean and lean-to-rich switches for Bank 2 HO2S 1 are detected, DTC P1153 will set.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- ”Open loop” fuel control will be in effect.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1153 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1153 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

A malfunction in the HO2S heater ignition feed or ground circuit may cause a DTC P1153 to set. Check HO2S heater circuitry for intermittent faults or poor connections. If connections and wiring are OK and DTC P1153 continues to set, replace the Bank 2 HO2S 1.
Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. A condition that affects other heated oxygen sensors indicates probable contamination. To avoid damaging replacement sensors, correct the condition which caused the contamination before replacing the affected sensors.
5. This step checks for conditions which may cause the heated oxygen sensor to appear faulty. Correct any of the described conditions if present.
8. To avoid damaging replacement sensors, correct the condition which caused the contamination before replacing the affected sensors.

DTC P1153 – HO2S Insufficient Switching Bank 2 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	**IMPORTANT:** If any DTCs are set, (except P1133 and/or P1134), refer to those DTCs before proceeding with this diagnostic chart. 1. Idle the engine at operating temperature. 2. Operate the vehicle within parameters specified under “Conditions for Setting the DTC” criteria included in Diagnostic Support. 3. Using a Tech 2, monitor “DTC” info for DTC P1153 until the DTC P1153 test runs. Note the test result. Does Tech 2 indicate DTC failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Did the Tech 2 also indicate P1133 and/or P1134 test failed?	—	Go to *Step 20*	Go to *Step 4*
4	Check for leaks at the exhaust pipe joints. Are the joints leaking?	—	Go to *Step 5*	Go to *Step 6*
5	Tighten the U-bolt nuts at the leaking joints. Is your action complete?	—	Go to *Step 2*	—
6	Check for gaskets that are damaged or improperly installed. Are there damaged or misaligned gaskets?	—	Go to *Step 7*	Go to *Step 8*
7	1. Replace the damaged gaskets. 2. Align the connections. 3. Tighten the connections. Is your action complete?	—	Go to *Step 2*	—
8	Check for loose exhaust flange connections. Are the flange connections loose?	—	Go to *Step 9*	Go to *Step 10*
9	Tighten the stud nuts or bolts to specifications. Is your action complete?	—	Go to *Step 2*	—
10	Check for burned or corroded exhaust pipes. Are the exhaust pipes burned or corroded?	—	Go to *Step 11*	Go to *Step 12*


DTC P1153 – HO2S Insufficient Switching Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
11	Replace the exhaust pipes, as required. Is your action complete?	—	Go to *Step 2*	—
12	Check for leaks at the exhaust manifold. Are there leaks at the exhaust manifold?	—	Go to *Step 13*	Go to *Step 14*
13	Tighten the bolts to specifications or replace the manifold if necessary. Is your action complete?	—	Go to *Step 2*	—
14	Visually/physically inspect the following items: • Ensure that the Bank 2 HO2S 1 is securely installed. • Check for corrosion on terminals. • Check the terminal tension at Bank 2 HO2S 1 and at the PCM. • Check for damaged wiring. Was a problem found in any of the above areas?	—	Verify repair	Go to *Step 15*
15	1. Disconnect Bank 2 HO2S 1. 2. Ignition "ON". 3. Using a DVM at the PCM side of the connector, check the voltage between the high signal circuit and ground. Also measure between the low signal circuit and ground. Are both voltages in the specified range?	3-4V	Go to *Step 18*	Go to *Step 16*
16	1. Ignition "ON". 2. Check for damage to PCM pins or terminals. Was a problem found?	—	Verify repair	Go to *Step 17*
17	Check for short to voltage or ground or an open in the signal circuit. Was a problem found?	—	Verify repair	Go to *Step 18*
18	1. Ignition "OFF". 2. Disconnect the PCM connector. 3. With HO2S disconnected, check for high and low signal circuits shorted together between the PCM and HO2S. Was a problem found?	—	Verify repair	Go to *Step 19*
19	With the PCM connected and Bank 2 HO2S 1 disconnected from the harness, check Bank 2 HO2S 1 with a Tech 2. Is the voltage in the specified range?	425-475 mV	Go to *Step 21*	Go to *Step 22*
20	Replace affected heated oxygen sensors. NOTE: Before replacing sensors, the cause of the contamination must be determined and corrected. • Fuel contamination. • Use of improper RTV sealant. • Engine oil/coolant consumption. Is the action complete?	—	Verify repair	—

DTC P1153 – HO2S Insufficient Switching Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
21	Replace Bank 2 HO2S 1. Is the action complete?	—	Verify repair	—
22	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

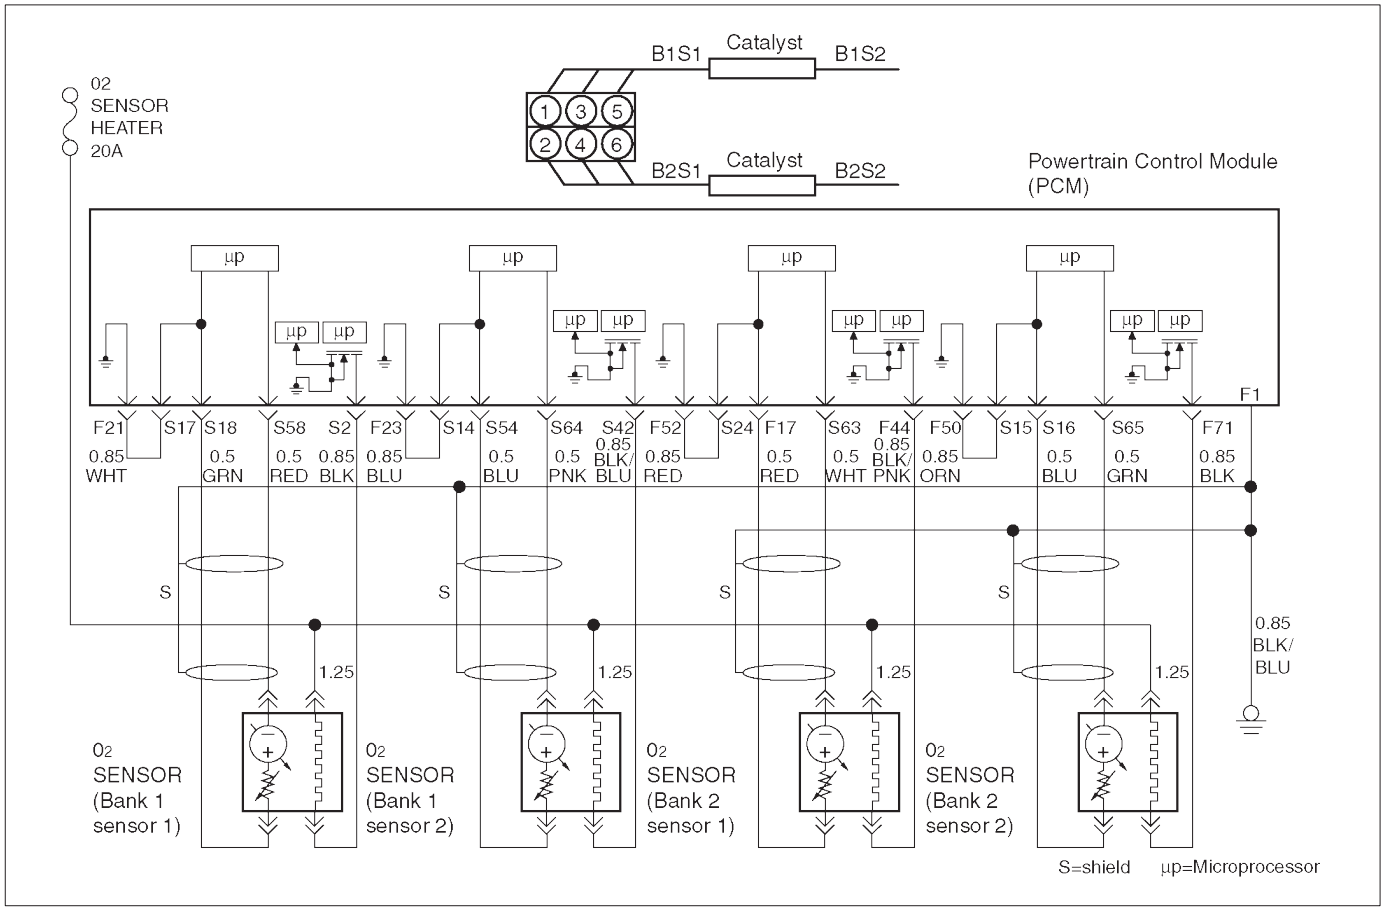Diagnostic Trouble Code (DTC)
P1154 HO2S Circuit Transition Time Ratio Bank 2 Sensor 1



D06R200010

Circuit Description

The powertrain control module (PCM) monitors the heated oxygen sensor (HO2S) activity for 90 seconds after “closed loop” and stoichiometric operation have been enabled. During the monitor period the PCM counts the number of times that the HO2S responds from rich-to-lean and from lean-to-rich and adds the amount of time it took to complete all transitions. With this information, an average time for all transitions can be determined. The PCM then divides the rich-to-lean average by the lean-to-rich average to obtain a ratio. If the HO2S transition time ratio is not within this range, DTC P1154 will be set, indicating that the oxygen sensor is not responding as expected to changes in exhaust oxygen content.

Conditions for Setting the DTC

- No related DTCs.
- Engine coolant temperature (ETC) is above 60˚C (140˚F).
- The engine is operating in “closed loop”,
- The engine has been running at least one minute.
- Canister purge duty cycle is greater than 2%.
- Engine speed is between 1500 RPM and 3000 RPM.
- Mass air flow is between 18 g/second and 42 g/second.
- Above conditions are present for a 3-second monitoring period.
- 90 seconds after “closed loop” and stoichiometric operation have been enabled, Bank 2 HO2S 1 transition ratio between lean to rich and rich to lean is less than 0.44 or greater than 3.8.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- ”Open loop” fuel control will be in effect.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1154 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1154 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

A multifunction in the HO2S heater ignition feed or ground circuit may cause a DTC P1154 to set. Check HO2S heater circuitry for intermittent faults or poor connections.

If connections and wiring are OK and DTC P1154 continues to set, replace the Bank 2 HO2S 1.
Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. A condition that affects other heated oxygen sensors indicates probable contamination. To avoid damaging replacement sensors, correct the condition which caused the contamination before replacing the affected sensors.
5. This step checks for conditions which may cause the heated oxygen sensor to appear faulty. Correct any of the described conditions if present.
8. To avoid damaging replacement sensors, correct the condition which caused the contamination before replacing the affected sensors.

DTC P1154 – HO2S Transition Time Ratio Bank 2 Sensor 1

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	**IMPORTANT:** If any other DTCs are set (except P1133 and/or P1134), refer to those DTCs before proceeding with this diagnostic chart. 1. Idle the engine at operating temperature. 2. Operate the vehicle within parameters specified under “Conditions for Setting the DTC” criteria included in Diagnostic Support. 3. Using a Tech 2, monitor “DTC” info for DTC P1154 until the DTC P1154 test runs. Note the test result. Does Tech 2 indicate DTC failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	Did the Tech 2 also indicate P1133, and/or P1134 test failed?	—	Go to *Step 17*	Go to *Step 4*
4	Check for leaks at the exhaust pipe joints. Are the joints leaking?	—	Go to *Step 5*	Go to *Step 6*
5	Tighten the U-bolt nuts at the leaking joints. Is your action complete?	—	Go to *Step 2*	—
6	Check for gaskets that are damaged or improperly installed. Are there damaged or misaligned gaskets?	—	Go to *Step 7*	Go to *Step 8*
7	1. Replace the damaged gaskets. 2. Align the connections. 3. Tighten the connections. Is your action complete?	—	Go to *Step 2*	—
8	Check for loose exhaust flange connections. Are the flange connections loose?	—	Go to *Step 9*	Go to *Step 10*
9	Tighten the stud nuts or bolts to specifications. Is your action complete?	—	Go to *Step 2*	—
10	Check for burned or corroded exhaust pipes. Are the exhaust pipes burned or corroded?	—	Go to *Step 11*	Go to *Step 12*
11	Replace the exhaust pipes, as required. Is your action complete?	—	Go to *Step 2*	—


DTC P1154 – HO2S Transition Time Ratio Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
12	Check for leaks at the exhaust manifold. Are there leaks at the exhaust manifold?	—	Go to *Step 13*	Go to *Step 14*
13	Tighten the bolts to specifications or replace the manifold if necessary. Is your action complete?	—	Go to *Step 2*	—
14	Visually/physically inspect the following items: ● Ensure that the Bank 2 HO2S 1 is securely installed. ● Check for corrosion on terminals. ● Check terminal tension (at Bank 2 HO2S 1 and at the PCM). ● Check for damaged wiring. Was a problem found in any of the above areas?	—	Go to *Step 18*	Go to *Step 15*
15	1. Disconnect Bank 2 HO2S 1. 2. Ignition "ON". 3. Using a DVM at the PCM side of the HO2S 1 connector, measure the voltage between the high signal circuit and ground. Also measure the voltage between the low signal circuit and ground. Are both voltages in the specified range?	3-4 V	Go to *Step 16*	Go to *Step 19*
16	1. With Bank 2 HO2S 1 disconnected, jumper the high and low (PCM side) signal circuits to ground. 2. Ignition "ON". 3. Using a Tech 2, monitor the Bank 2 HO2S 1 voltage. Does the Tech 2 indicate less than 10 mV and immediately return to about 450 mV when the jumper is removed?	—	Go to *Step 21*	Go to *Step 22*
17	Replace affected heated oxygen sensors. NOTE: Before replacing sensors, the cause of the contamination must be determined and corrected. ● Fuel contamination. ● Use of improper RTV sealant. ● Engine oil/coolant consumption. Is the action complete?	—	Verify repair	—
18	Repair condition as necessary. Is the action complete?	—	Verify repair	—
19	Check for faulty PCM connections or terminal damage. Is the action complete?	—	Verify repair	Go to *Step 20*
20	Repair open, short or grounded signal circuit. Is the action complete?	—	Verify repair	—

DTC P1154 – HO2S Transition Time Ratio Bank 2 Sensor 1 (Cont'd)

Step	Action	Value(s)	Yes	No
21	Replace Bank 2 HO2S 1. Is the action complete?	—	Verify repair	—
22	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

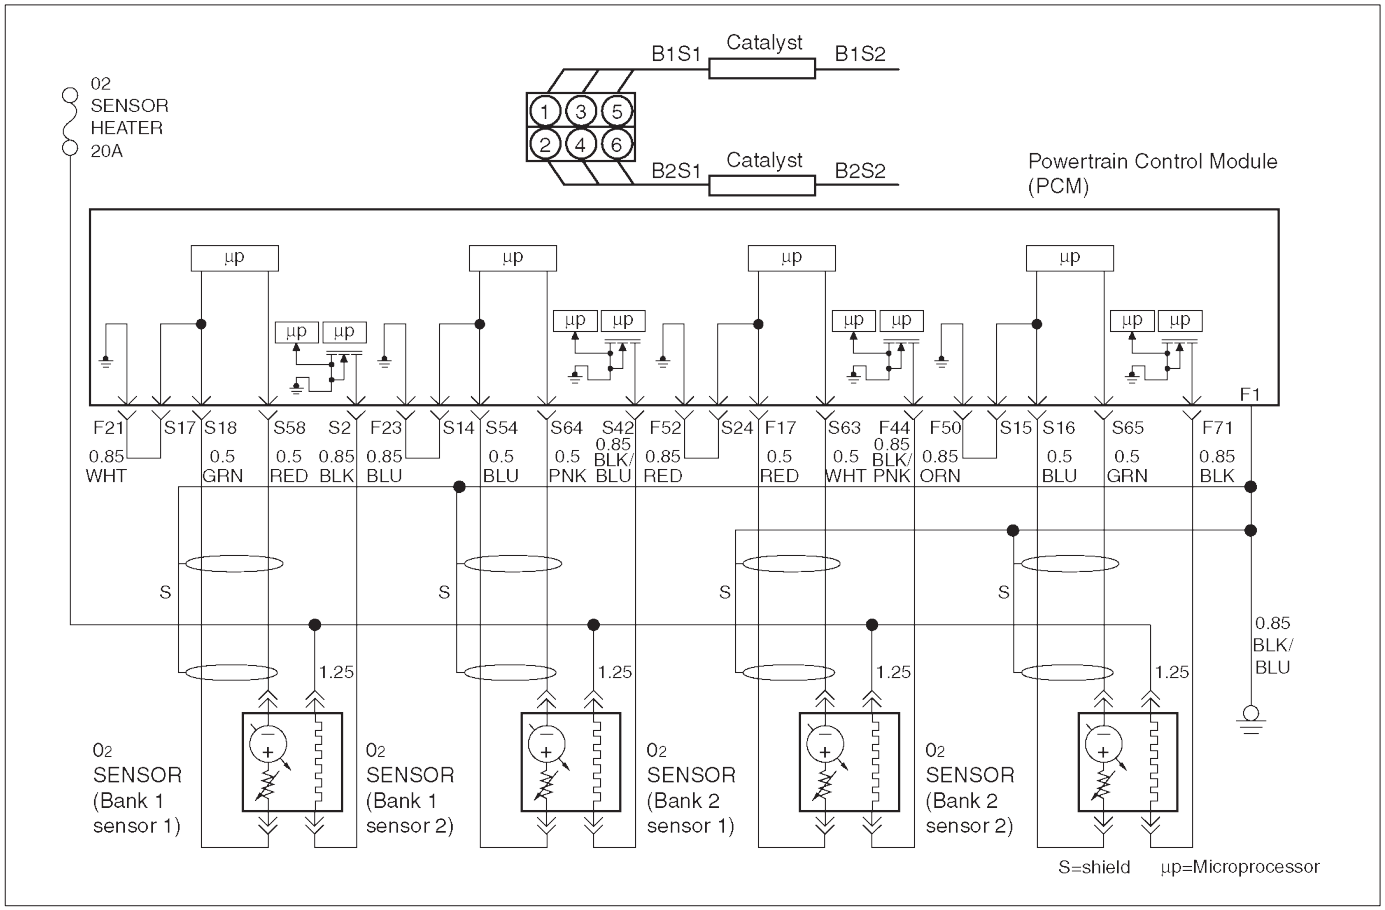Diagnostic Trouble Code (DTC)
P1167 Fuel System Rich During Decel Fuel Cut Off (Bank 1)



D06R200010

Circuit Description

The powertrain control module (PCM) continuously monitors the heated oxygen sensor (HO2S) activity for 90 seconds after “closed loop” has been enabled. During the monitoring period the powertrain control module (PCM) counts the number of times a rich to lean response is indicated and adds the amount of time it look to complete all rich to lean transitions and lean to rich transitions.
This code detects if Bank1 O2 sensor indicated rich exhaust while in Decel Fuel Cut Off (DFCO) for fuel control sensors.

Conditions for setting the DTC

- No related DTCs.
- The engine coolant temperature is more than 60 °C (140 °F).
- Engine is operating in “closed loop” power enrichment mode for 3 seconds.
- While in “power enrichment” mode the oxygen sensor voltage remains more than 600mV in DFCO.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set as Failure Records only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- A history DTC P1167 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P1167 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.


Diagnostic Aids

- Check for faulty fuel injectors and fuel pump.

Diagnostic Trouble Code (DTC)
P1167 Fuel System Rich During Decel Fuel Cut Off (Bank1)

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any component related DTCs set?		Go to *component DTC charts*	Go to *Step 3*
3	1. Place the transmission in Park. 2. Using a Tech 2, HO2S 1 voltage while running warm engine 75 °C – 95 °C (167 °F – 203 °F) at 1200 RPM. 3. HO2S 1 voltages should vary within the specified range. (100 – 900mV) 4. Quickly open the wide open the throttle for a few seconds. Did the voltage suddenly rise toward the low end of the specified range?	100 – 600 mV	Go to *OBD System Check*	Go to *Step 4*
4	1. Disconnect the fuel pump relay and crank the engine to relieve the fuel pressure. 2. Install the fuel pressure gauge. 3. Start the engine and idle at normal operating temperature. 4. Disconnect the vacuum line going to the fuel pressure regulator. With the engine running, is the fuel pressure within the specified range?	280 – 325Kpa (41 – 46psi)	Go to *OBD System Check*	Go to *Step 5*
5	1. Ignition “OFF”. 2. Remove the fuel pump relay and replace it with a fused jumper which will connect the relay’s battery terminal to the terminal leading to the fuel pump fuse. 3. While the fuel pump is operating, use pliers to slowly close the return line (do not exceed the first specified value). Using the pliers to restrict the return line, can the fuel pressure be manipulated to exceed the second value? Is the fuel pressure gauge reading near the specified value?	325KPa (46psi) 414KPa (60psi)	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 6*
6	Check the following items; ● Faulty fuel pump ● Incorrect fuel pump ● Incorrect fuel being used ● Cold fuel If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	—

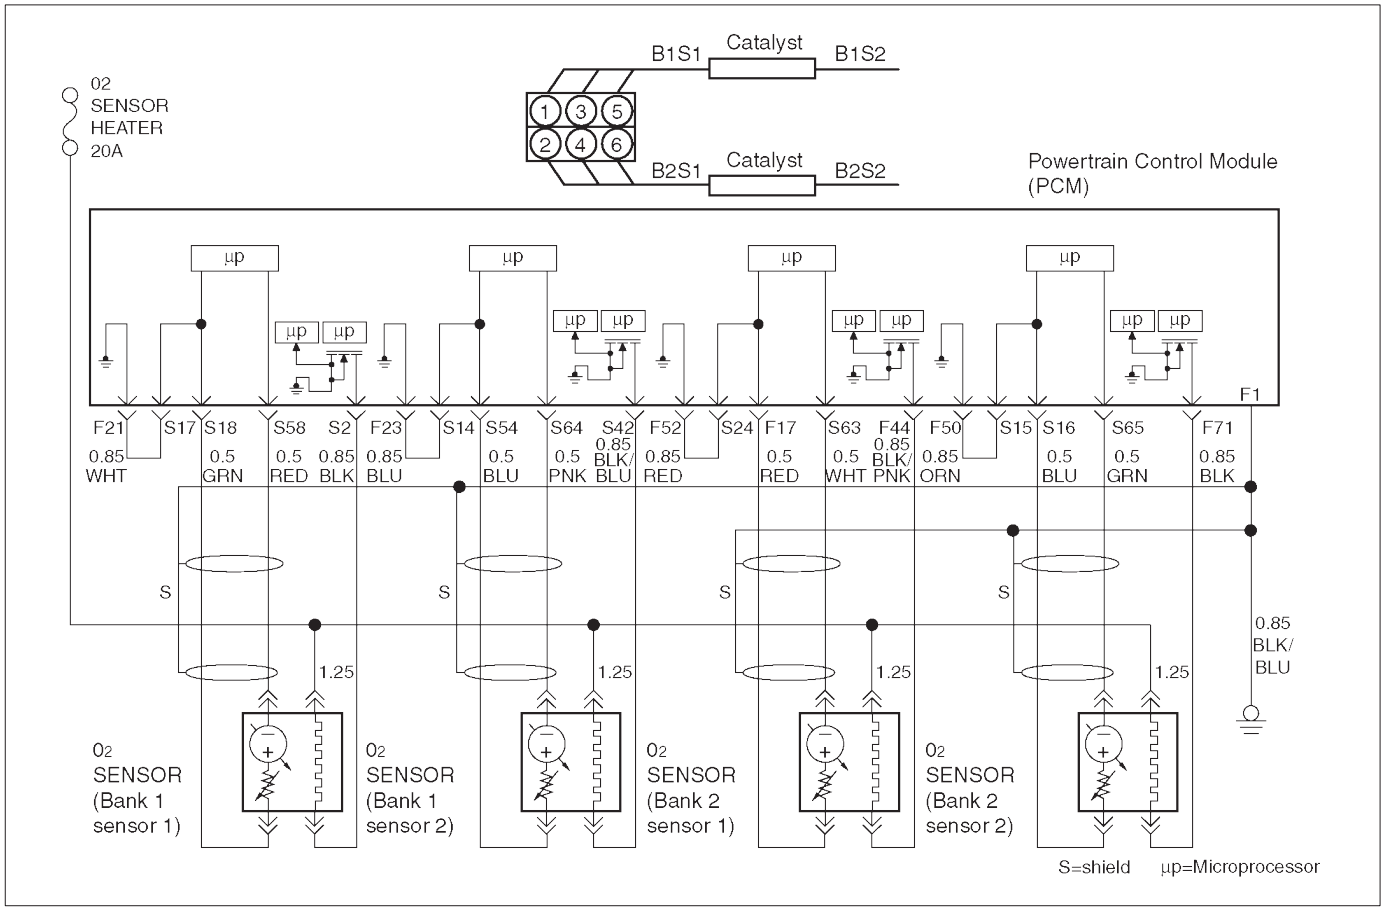Diagnostic Trouble Code (DTC)
P1169 Fuel System Rich During Decel Fuel Cut Off (Bank 2)



D06R200010

Circuit Description

The powertrain control module(PCM) continuously monitors the heated oxygen sensor (HO2S) activity for 90 seconds after “closed loop” has been enabled. During the monitoring period the powertrain control module (PCM) counts the number of times a rich to lean response is indicated and adds the amount of time it look to complete all rich to lean transitions and lean to rich transitions.

This code detects if Bank2 sensor indicated rich exhaust while in Decel Fuel Cut Off (DFCO) for fuel control sensors.

Conditions for setting the DTC

- No related DTCs.
- The engine coolant temperature is more than 60 °C (140 °F).
- Engine is operating in “closed loop” power enrichment mode for 3 seconds.
- While in “power enrichment” mode the oxygen sensor voltage remains more than 600mV in DFCO.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction malfunction indicator lamp(MIL).
- The PCM will store conditions which were present when the DTC was set as Failure Records only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- A history DTC P1169 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P1169 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.


Diagnostic Aids

- Check for faulty fuel injectors and fuel pump.
- Check the pressure regulator.

Diagnostic Trouble Code (DTC)
P1169 Fuel System Rich During Decel Fuel Cut Off (Bank2)

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any component related DTCs set?		Go to *component DTC charts*	Go to *Step 3*
3	1. Place the transmission in Park. 2. Using a Tech 2, HO2S 2 voltage while running warm engine75 C – 95 C (167 F – 203 F) at 1200 RPM. 3. HO2S 1 voltages should vary within the specified range. (100 – 900mV) 4. Quickly open the wide open the throttle for a few seconds. Did the voltage suddenly rise toward the low end of the specified range?	100 – 600 mV	Go to *OBD System Check*	Go to *Step 4*
4	1. Disconnect the fuel pump relay and crank the engine to relieve the fuel pressure. 2. Install the fuel pressure gauge. 3. Start the engine and idle at normal operating temperature. 4. Disconnect the vacuum line going to the fuel pressure regulator. With the engine running, is the fuel pressure within the specified range?	280 – 325Kpa (41 – 46psi)	Go to *OBD System Check*	Go to *Step 5*
5	1. Ignition “OFF”. 2. Remove the fuel pump relay and replace it with a fused jumper which will connect the relay’s battery terminal to the terminal leading to the fuel pump fuse. 3. While the fuel pump is operating, use pliers to slowly close the return line (do not exceed the first specified value). Using the pliers to restrict the return line, can the fuel pressure be manipulated to exceed the second value? Is the fuel pressure gauge reading near the specified value?	325KPa (46psi) 414KPa (60psi)	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 6*
6	Check the following items; ● Faulty fuel pump ● Incorrect fuel pump ● Incorrect fuel being used ● Cold fuel. If a problem is found, repair one as necessary. Was a problem found?	—	Verify repair	—

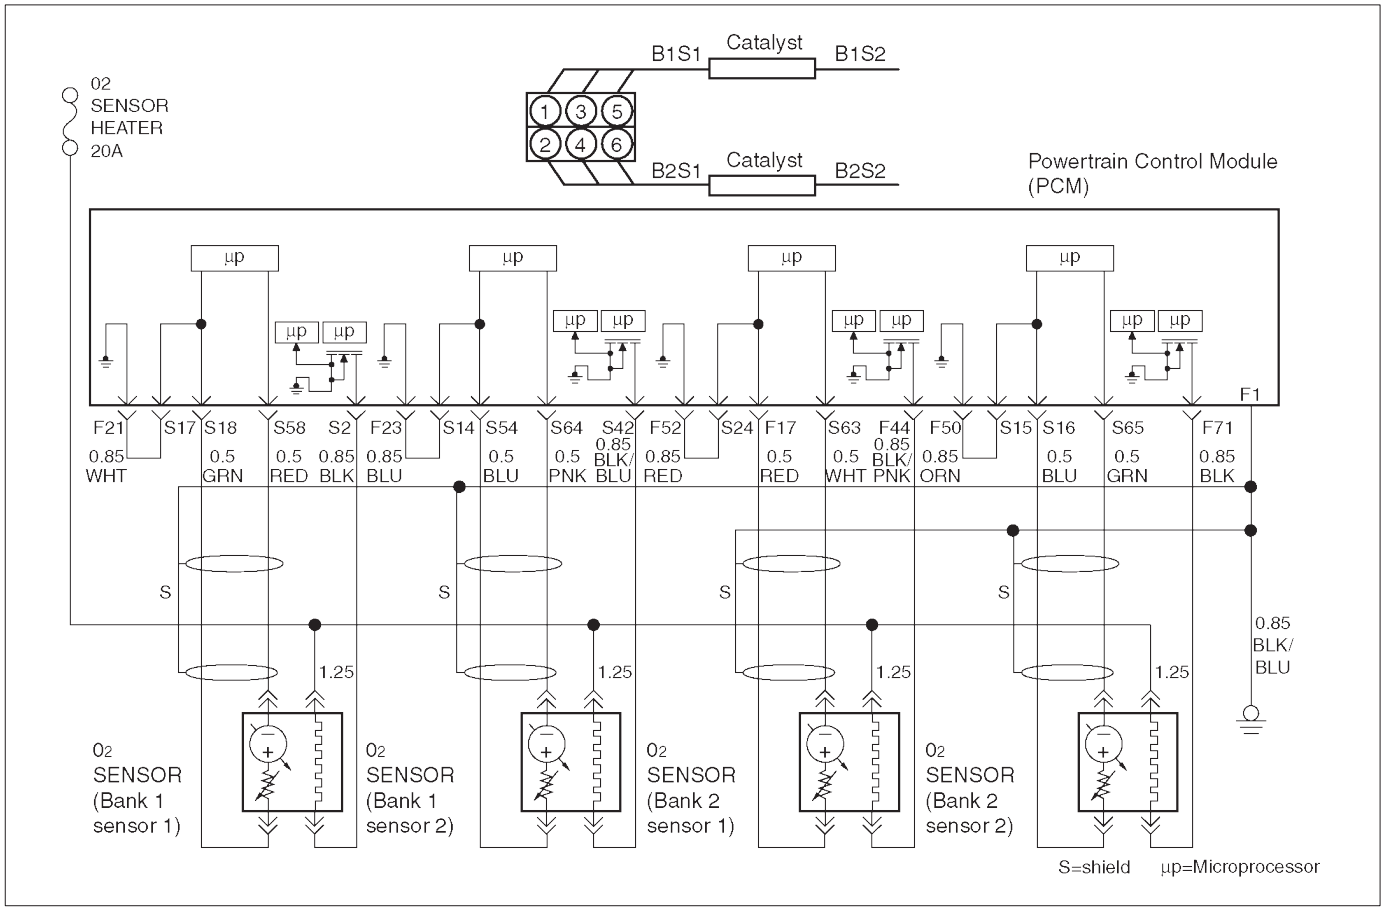Diagnostic Trouble Code (DTC)
P1171 Fuel System Lean During Acceleration



D06R200010

Circuit Description

The powertrain control module (PCM) internal circuitry can identify if the vehicle fuel system is capable of supplying adequate amounts of fuel during heavy acceleration (power enrichment). The PCM monitors the voltage of the oxygen sensor during power enrichment. When a power enrichment mode of operation is requested during “closed loop” operation (by heavy acceleration), the PCM will provide more fuel to the engine. Under these conditions the PCM should detect a “rich” condition (high oxygen sensor voltage). If this “rich” exhaust is not detected at this time, a DTC P1171 will set. A plugged fuel filter, restricted fuel line, restricted in-tank filter or defective fuel pump can prevent adequate amounts of fuel from being supplied during power enrichment mode.

Conditions for Setting the DTC

- No related DTCs.
- Engine is operating in “closed loop power enrichment” mode for 3 seconds.
- Engine coolant temperature is above 60°C (140°F).
- While in “power enrichment” mode the oxygen sensor voltage remains below 400 mV for 3 seconds.

Action Taken When the DTC Sets

- The PCM will not turn the malfunction indicator lamp (MIL) “ON”.
- The PCM will store conditions which were present when the DTC was set as Failure Records only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1171 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1171 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

- A restricted fuel filter or fuel line, restricted in-tank filter, or a defective fuel pump may supply adequate amounts of fuel at idle, but may not be able to supply enough fuel during heavy acceleration.
- Water or alcohol in the fuel may cause low HO2S voltage during acceleration.
- Check for faulty or plugged fuel injector(s).
- Check for low fuel.

Test Description


Number(s) below refer to the step number(s) on the Diagnostic Chart.

4. When the engine is idling or at steady cruise, the HO2S voltage should vary from between approximately 100 mV to 900 mV. It is possible to measure a satisfactory fuel pressure at idle even though the pressure may drop at high flow requirements. It may be necessary to watch fuel pressure at high engine load.
5. Wrap a shop towel around the fuel pressure connector to absorb any small amount of fuel leakage that may occur when installing gauge. Ignition “ON”, pump pressure should be 280-320 kPa.
7. Add Caution, Use correct pliers so damage to fuel lines will not occur.

DTC P1171 – Fuel System Lean During Acceleration

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Are any component-related DTCs set?	—	Go to component DTC charts	Go to *Step 3*
3	1. Check the vehicle's fuel tank for an adequate amount of fuel. 2. Add fuel to the vehicle's fuel tank if the tank is almost empty. Was fuel added to the vehicle's fuel tank?	—	Go to *Step 4*	Go to *Step 5*
4	1. Place the transmission in park. 2. Using a Tech 2, observe HO2S 1 voltage while running warm engine 75˚C-95˚C (167˚F-203˚F) at 1200 RPM. 3. HO2S 1 voltage should vary within the specified range. 4. Quickly open the throttle too halfway for a few seconds. Did the voltage suddenly rise toward the high end of the specified range?	100-900 mV	Go to *Fuel System Electrical Test*	Go to *Step 5*
5	1. Disconnect the fuel pump relay and crank the engine to relieve the fuel pressure. 2. Install the fuel pressure gauge. 3. Start the engine and idle at normal operating temperature. 4. Disconnect the vacuum line going to the fuel pressure regulator. With the engine running, is the fuel pressure within the specified range?	280-325 kPa (41-46 psi)	Go to *OBD System Check*	Go to *Step 6*
6	Check for restricted fuel lines or restricted in-line filter. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Ignition "OFF". 2. Remove the fuel pump relay and replace it with a fused jumper which will connect the relay's battery terminal to the terminal leading to the fuel pump fuse. 3. While the fuel pump is operating, use pliers to slowly close the return line (do not exceed the first specified value). Using the pliers to restrict the return line, can the fuel pressure be manipulated to exceed the second specified value?	325 kPa (46 psi) 414 kPa (60 psi)	Check the Procedure Refer to *Diagnostic Aids*	Go to *Step 8*
8	Check for: • Faulty fuel pump • Restricted fuel pump strainer (sock) • Incorrect fuel pump • Incorrect fuel being used • Hot fuel Is the action complete?	—	Verify repair	—

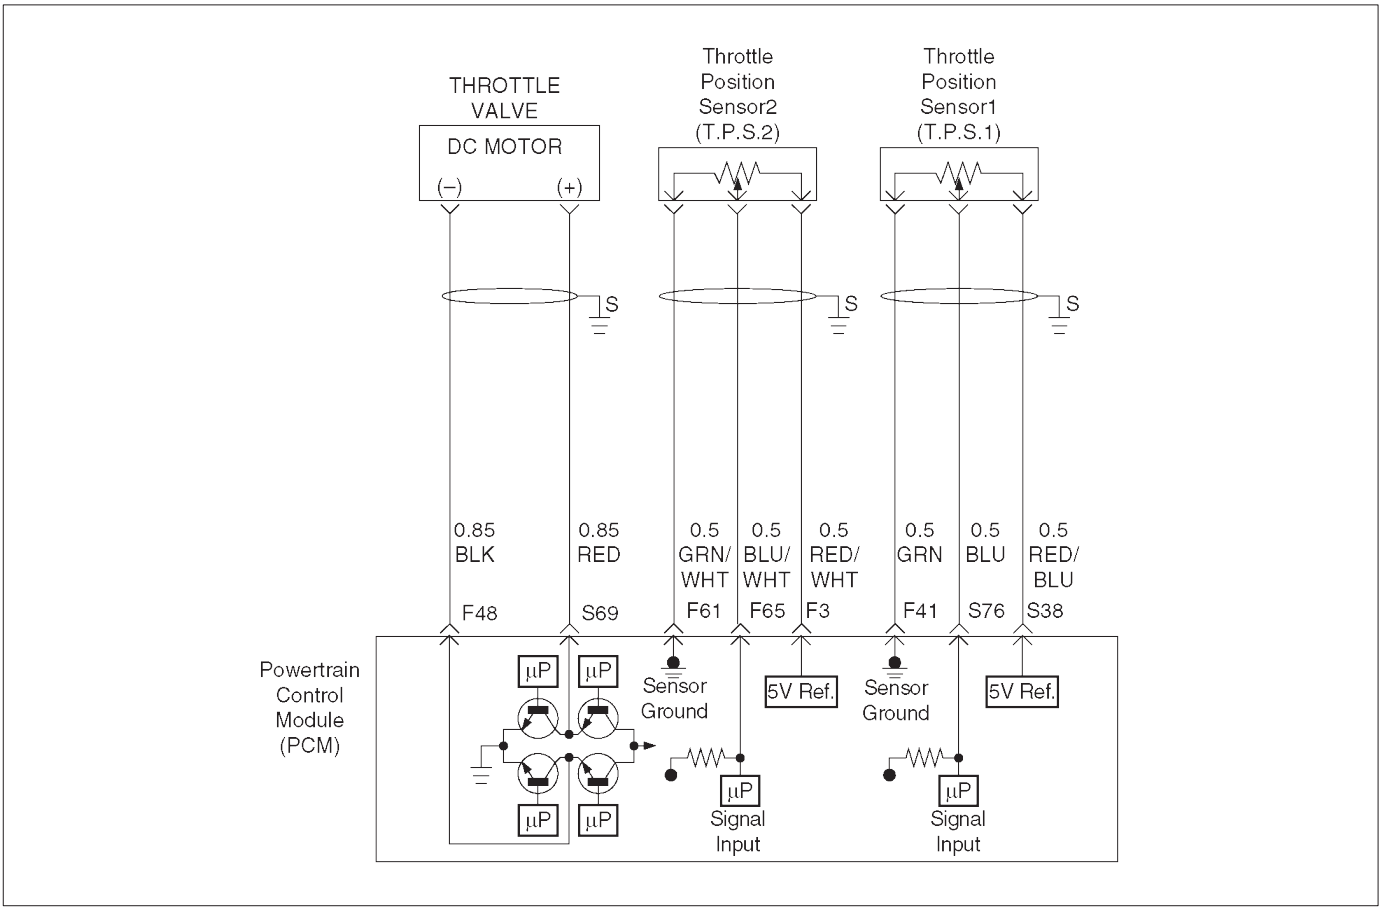Diagnostic Trouble Code (DTC)
P1220 Throttle Position Senser2 (TPS2) Circuit Fault



D06RY00088

Circuit Description

- The throttle position (TP2) sensor circuit provides a voltage signal relative to throttle blade angle.

  The throttle blade angle will vary about 8 % at closed throttle to about 92 % at wide open throttle (WOT).

  This code detects a continuous short to ground or high in either the cicuit or the sensor.

Conditions for setting the DTC

- The Ignition is “ON”.
- The throttle blade angle is less than 2.5 % or more tnan 97.5 % for 18 failres within 500 test samples (15.6m sec).

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1120 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1120 can be cleared using the Tech2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- The CKP sensor shares 5 Volt reference with the TP sensor 2. If these codes are also set, it could indicate a problem with the 5 Volt reference curcuit.
- Poor connection at PCM-Inspect harness connectors for backed out terminals,improper mating,broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness–Inspect the wiring harness for damage. If the harness appears to be OK,observe the TP sensor display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1120 cannot be duplicated,the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently,performing the DTC

P1120 Diagnostic Chart may isolate the cause of the fault.


DTC P1220-TPS 2 Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Disconnect the CKP sensor. 2. Connect a test 5 volt reference circuit and the CKP signal at the CKP sensor harness connector. 3. Observe the CKP reading on the DVM. Is the CKP reading less than the specified value? (If no, start with diagnosis chart for other sensors in the circuit and see if 5V returns.)	5V	Go to *Step 5*	Go to *Step 4*
4	1. Check the CKP signal circuit between the PCM and CKP ground circuit. 2. If the CKP signal circuit is open or shorted, repair as necessary. Was the CKP signal circuit open or shorted?	—	Verify repair	Go to *Step 16*
5	Replace the CKP sensor. Is the action complete?	—	Verify repair	—
6	1. Ignition “ON”, engine not running. 2. Observe the AP2 reading on the Tech2. Is the AP2 reading less than the specified value?	Closed throttle APS2 = 85~89% Wide open throttle APS2 = 11~15%	Go to *Step 7*	Go to *Step 10*
7	1. Disconnect the AP sensor 2. 2. Connect the Tech2 5 Volt reference circuit and the AP2 signal at the Ap2 sensor harness connector. 3. Observe the AP2 reading on the Tech 2. Is the AP2 reading less than the specified value? (If no, start with diagnosis chart forother sensors in the circuit and see if 5V returns.)	—	Go to *Step 9*	Go to *Step 8*
8	1. Check the Ap2 sensor signal circuit between the PCM and AP2 sensor grund circuit. 2. If the AP2 sensor signal circuit open or shoted, repair it as necessary. Was the AP2 sensor signal circuit open or shorted?	—	Verify repair	Go to *Step 16*
9	Replace the AP sensor 2. Is the action complete?	—	Verify repair	—

DTC P1220-TPS 2 Circuit Fault (Cont'd)

Step	Action	Value(s)	Yes	No
10	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition "OFF". 3. Ignition "ON" but not engine run. 4. Observe the TP angle reading on the Tech 2 while alowly opening the throttle. NOTE: The value check of TPS must be performed in less than 15 seconds. Does the TP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle TPS2= 88~94% Wide open throttle TPS2= 19~23%	Go to *Step 11*	Go to *Step 12*
11	Was the DTC P1220 stored?	—	Go to *Step 16*	Check the procedure. Refer to *Diagnostic Aids*
12	1. Connect a DVM between the 5Volt reference circuit and the TP2 sensor ground circuit at the TPsensor harness connector. 2. Observe the voltage using a DVM. Is the voltage near the specified value?	5V	Go to *Step 13*	Go to *Step 16*
13	Check the following items; 1. TP2 signal circuit for a short to voltage. 2. TP2 sensor ground circuit for high resistance between the PCM and the TP2 sensor. 3. TP2 sensor ground circuit for a poor connection. 4. If a problem is found,repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 14*
14	Check the following items; 1. TP2 signal circuit or 5 volt reference circuit for a poor connection. 2. TP2 signal circuit or 5 volt reference circuit for high resistance between the PCM and the TP sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 15*
15	Replace the TP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 16*
16	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

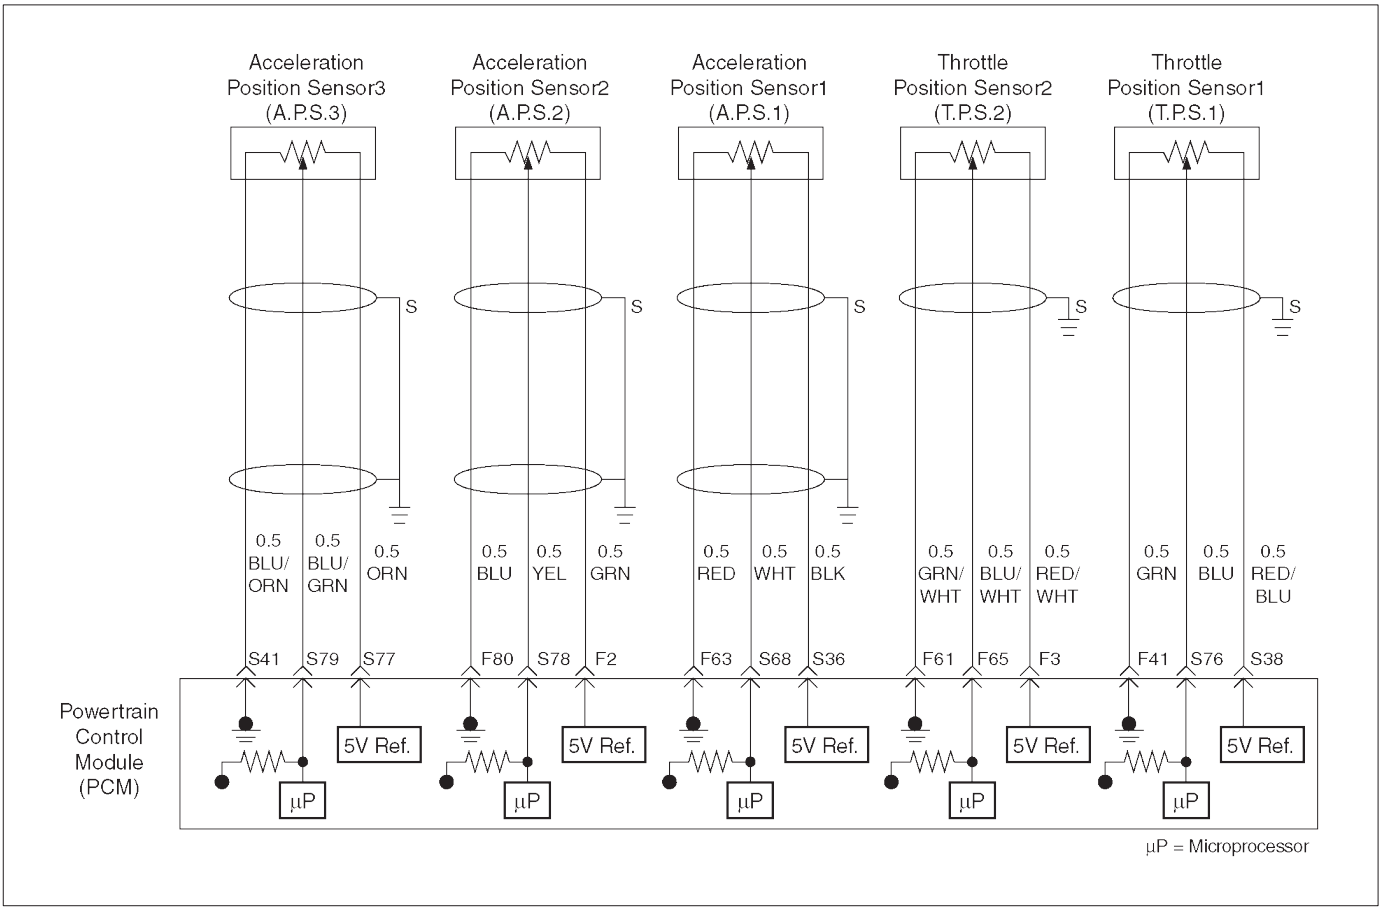Diagnosis Truble Code(DTC)
P1221 TPS1 – TPS2 correlation(Circuit Performance)



D06RY00157

Circuit Description

- The powertrain control module (PCM) controls engine speed by adjusting the position of the throttle control valve (DC motor). The throttle motor is a DC motor driven by one coil. The PCM applies current to DC motor coil in steps (%) to adjustment the valve into a passage in the throttle body to air flow.

  This method allows highly accurate control of engine speed and quick response to changes in engine load.

- The acceleration position (AP) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle (AP1) will vary about 13% at idle position to about 87% at open throttle(WOT).

  APS signal is used to determine which DC will adjusting throttle position.

  After the APS signal has been processed by the PCM, it will command DC motor to allow a move of throttle position.

- Acceleration pedal – Check for objects blocking the AP sensor or pedal arm with spring, and excessive deposits in the acceleration pedal arm and on the acceleration pedal.

Diagnostic Aids

- An intermittent may be caused by a poor connection, rubbed–through wire insulation or a wire broken inside the insulation. Check for poor connections or a damaged harness. Inspect the PCM harness and connector for improper mating, broken locks, improperly formed or damaged terminals, poor terminal-to-wire connection, and damaged harness.
- Throttle body – Check for objects blocking the DC motor or throttle bore, excessive deposits in the ETC passage and on the valve spring, and excessive deposits in the throttle bore and on the throttle valve plate.


Diagnosis Truble Code(DTC)
P1221 TPS1 – TPS2 correlation(Circuit Perfoemance)

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check”performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	Following below the DTCs stored: P1120,P1220 Do any of the above require a repair?	—	Go to *applicable DTC table*	Go to *Step 4*
4	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition “ON” but not engine run. 4. Observe the TP angle reading on the Tech 2 while alowly opening the throttle. NOTE: The value check of TPS must be performed in less than 15 seconds. Does the TP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle TPS1= 6~12% TPS2= 88~94% Wide open throttle TPS1= 79~83% TPS2= 19~23%	Go to *Step 5*	Go to *Step 6*
5	Was the DTC P1221 stored?	—	Go to *Step 9*	Check the procedure. Refer to *Diagnostic Aids*
6	1. Check the following items; ● TPS1 and TPS2 signal curcuit for a short to boltag or GND. ● TPS1 and TPS2 sensor ground curcuit for high resistance between the PCM and TP sensors. ● TPS1 and TPS2 5 volt reference curcuit for high risistance between the PCM and TP sensors. 2. If aproblem found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Re–observe the TP angle reading on the Tech 2 while slowly operating the acceleration pedal. Does the TP angle increase steadily and eventry from the closed throttle value to the wide open throttle value?	Closed throttle TPS1= 6~12% TPS2= 88~94% Wide open throttle TPS1= 79~83% TPS2= 19~23%	Verify repair	Go to *Step 8*

Diagnosis Truble Code(DTC)
P1221 TPS1 – TPS2 correlation(Circuit Perfoemance) (Cont'd)

Step	Action	Value(s)	Yes	No
8	1. Replace the TP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to ON–Vehicle Service in Power Control Module and Sensors for procedures. And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the adtion complete?	—	Verify repair	—

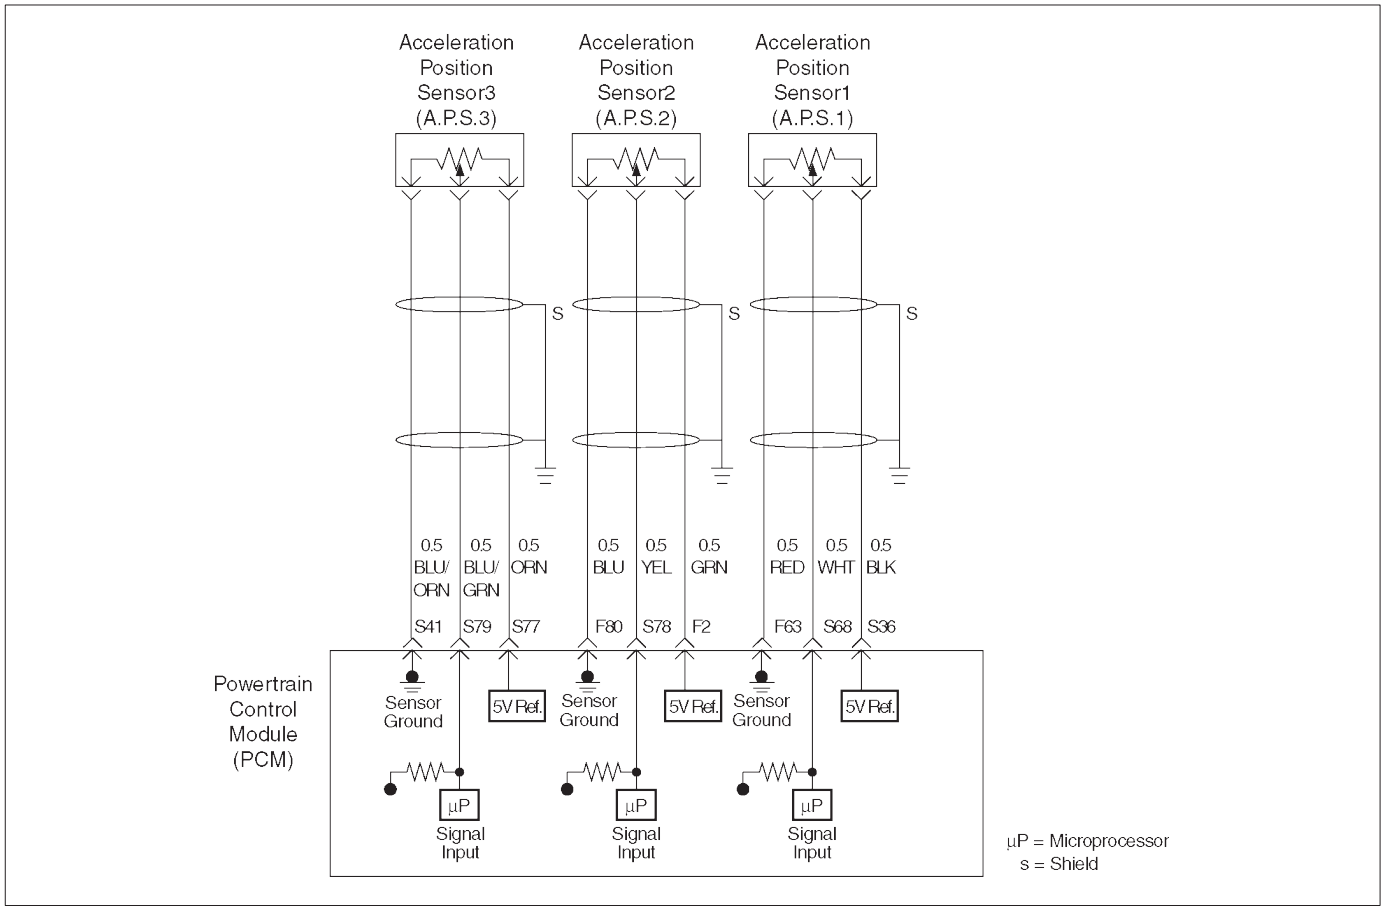Diagnostic Trouble Code (DTC) P1271 APS 1– 2 Correlation Error



D06RY00075

Circuit Description

- The acceleration position (AP) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle (AP1) will vary about 13% at idle position to about 87% at wide open throttle(WOT).

  This code detects a correlation error between APS1 and APS2.

Conditions for setting the DTC

- The Ignition is “ON”.
- The acceleration pedal angle difference is less than 4.5 % between ASP1 and APS2 for 50 counts within 50 test samples (15.6 m sec).

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1271 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1271 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the APP sensor 1, APP sensor 2 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1271 cannot be duplicated,the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently, performing the DTC P1271 Diagnostic Chart may isolate the cause of the fault.


DTC P1271 – APS 1– 2 Correlation Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition ON” but not engine run. 4. Observe the AP angle reading on the Tech 2 while alowly opening the throttle. Does the AP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle APS1 = 11~15% APS2 = 85~89% Wide open throttle APS1 = 85~89% APS2 = 11~15%	Go to *Step 4*	Go to *Step 5*
4	Was the DTC P1271 stored?	—	Go to *Step 9*	Check the procedure. Refer to *Diagnositec Aids*
5	1. Connect a test light between the 5 Voltge supply circuit and the AP sensor signal circuit at the AP1, AP2 sensor harness connector. 2. Observe the AP sensor reading on the Tech 2. Is the AP sensor reading near the specified value?	5V	Go to *Step 6*	Go to *Step 7*
6	Check the following items; 1. AP1and AP2 signal circuit for a short to voltage. 2. AP1and AP2 sensor ground circuit for high resistance between the PCM and the AP sensor. 3. AP1and AP2 sensor ground circuit for a poor connection. 4. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Check the following items; 1. AP1and AP2 signal circuit or 5 volge supply circuit for a poor connection. 2. AP1and AP2 signal circuit or 5 volge supply circuit for high resistance between the PCM and the AP1 and AP2 sensor. 3. If a problem is found,repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*

DTC P1271 – APS 1– 2 Correlation Error (Cont'd)

Step	Action	Value(s)	Yes	No
8	Replace the AP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released ornot. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

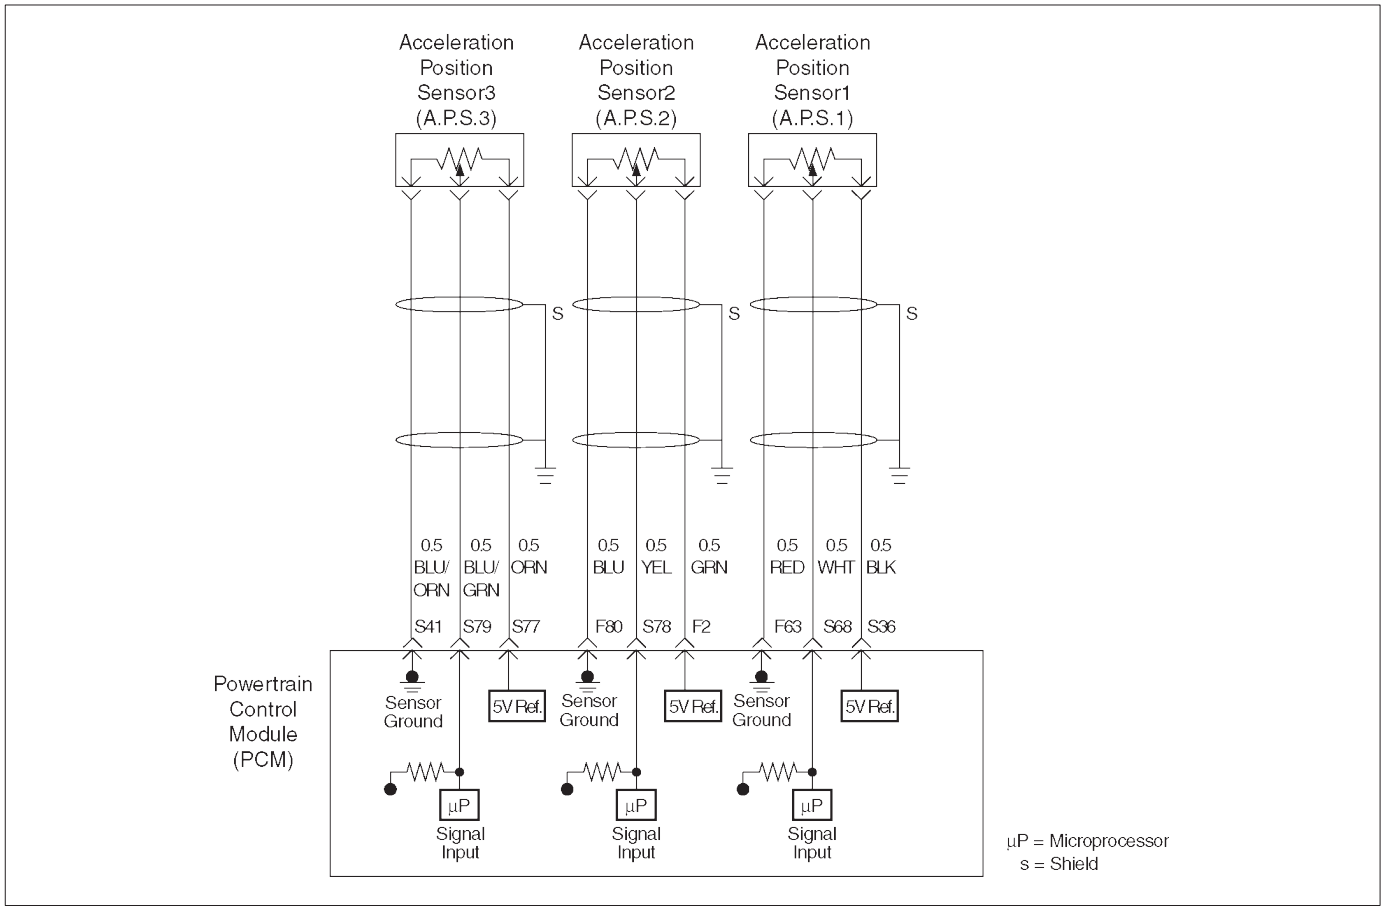Diagnostic Trouble Code (DTC) P1272 APS 2 – 3 Correlation Error



D06RY00075

Circuit Description

- The acceleration position (AP) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle (AP2) will vary about 87 % at idle position to about 13 % at wide open throttle (WOT).

  This code detects a correlation error betweenAPS2 and APS3.

Conditions for setting the DTC

- The Ignition is “ON”.
- The acceleration pedal angle difference is less than 4.5 % between ASP2 and APS3 for 50 counts within 50 test samples (15.6 m sec).

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1272 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1272 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals,improper mating,broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the APP sensor 2, APP sensor 3 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1272 cannot be duplicated, the information includedin the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently, performing the DTC

P1272 Diagnostic Chart may isolate the cause of the fault.


DTC P1272 – APS 2 – 3 Correlation Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition ON” but not engine run. 4. Observe the AP angle reading on the Tech 2 while alowly opening the throttle. Does the AP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle APS2 = 85~89% APS3 = 85~89% Wide open throttle APS2 = 11~15% APS3 = 32~36%	Go to *Step 4*	Go to *Step 5*
4	Was the DTC P1272 stored?	—	Go to *Step 9*	Check the procedure.Refer to *Diagnositc Aids*
5	1. Connect a test light between the 5 Voltge supply circuit and the AP sensor signal circuit at the AP2 and AP3 sensor harness connector. 2. Observe the AP sensor reading on the Tech 2. Is the AP sensor reading near the specified value?	5V	Go to *Step 6*	Go to *Step 7*
6	Check the following items; 1. AP2 and AP3 signal circuit for a short to voltage. 2. AP2 and AP3 sensor ground circuit for high resistance between the PCM and the AP sensor. 3. AP2 and AP3 sensor ground circuit for a poor connection. 4. If a problem is found,repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Check the following items; 1. AP2 and AP3 signal circuit or 5 volge supply circuit for a poor connection. 2. AP2 and AP3 signal circuit or 5 volge supply circuit for high resistance between the PCM and the AP2 and AP3 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*

DTC P1272 – APS 2 – 3 Correlation Error (Cont'd)

Step	Action	Value(s)	Yes	No
8	Replace the AP sensor. Was a probelm corrected?	—	Verify repair	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

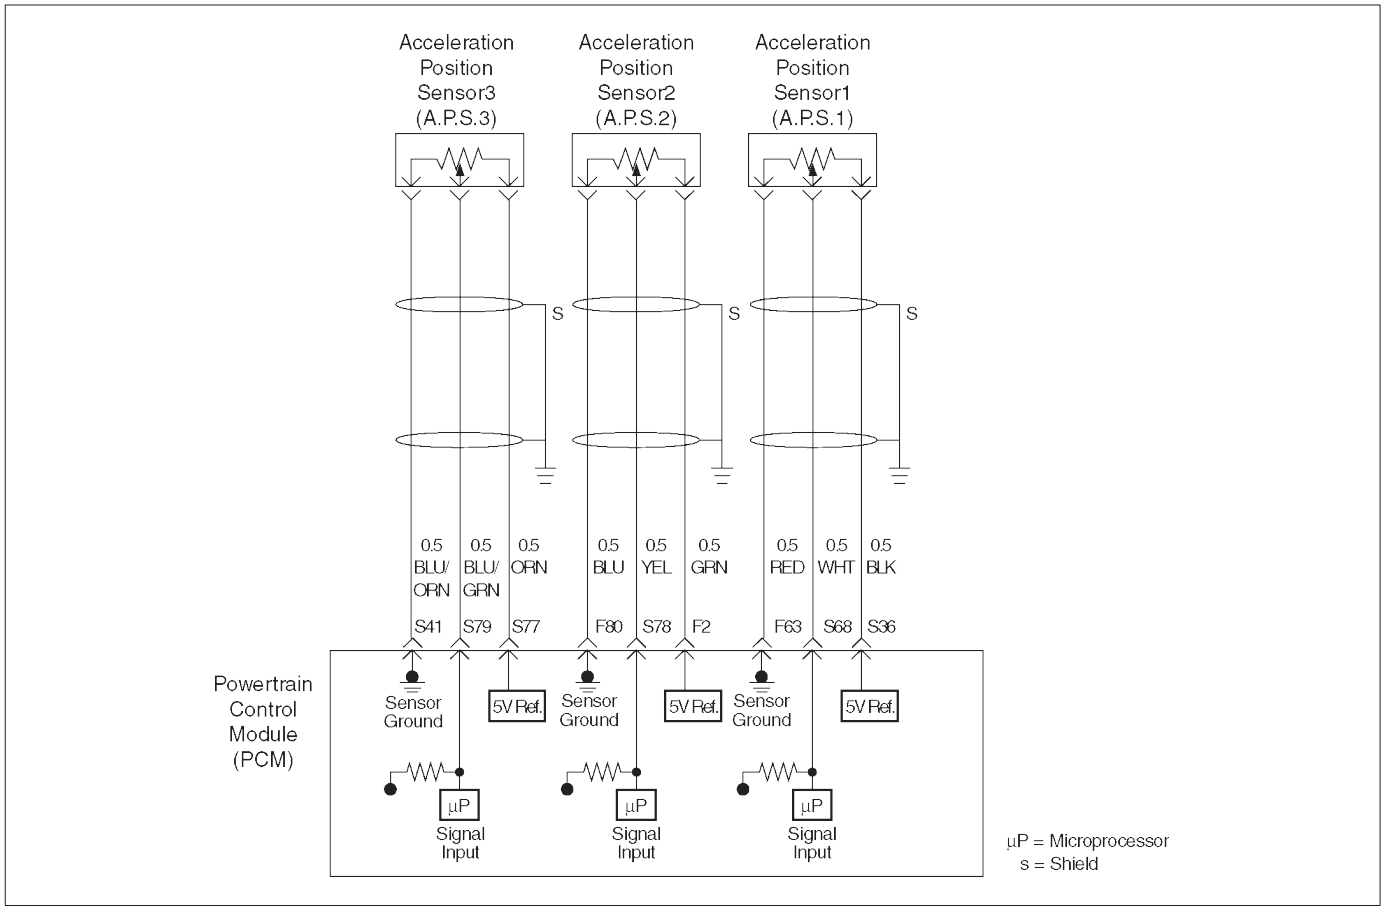Diagnostic Trouble Code (DTC) P1273 APS 1 – 3 Correlation Error



D06RY00075

Circuit Description

- The acceleration position (AP) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle (AP1) will vary about 13 % at idle position to about 87 % at wide open throttle (WOT).

  This code detects a correlation error between APS1 and APS3.

Conditions for setting the DTC

- The Ignition is “ON”.
- The acceleration pedal angle difference is less than 4.5 % between ASP1 and APS3 for 50 counts within 50 test samples (15.6 m sec).

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1273 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1273 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK,observe the APP sensor 1, APP sensor 3 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1273 cannot be duplicated,the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently,performing the DTC

P1273 Diagnostic Chart may isolate the cause of the fault.


DTC P1273 – APS 1 – 3 Correlation Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition ON” but not engine run. 4. Observe the AP angle reading on the Tech 2 while alowly opening the throttle. Does the AP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle APS1 = 11~15% APS3 = 85~89% Wide open throttle APS1 = 85~89% APS3 = 32~36%	Go to *Step 4*	Go to *Step 5*
4	Was the DTC P1273 stored?	—	Go to *Step 9*	Check the procedure. Refer to *Diagnostic Aids*
5	1. Connect a test light between the 5 Voltge supply circuit and the AP sensor signal circuit at the AP1 and AP3 sensor harness connector. 2. Observe the AP sensor reading on the Tech 2. Is the AP sensor reading near the specified value?	5V	Go to *Step 6*	Go to *Step 7*
6	Check the following items; 1. AP1 and AP3 signal circuit for a short to voltage. 2. AP1 and AP3 sensor ground circuit for high resistance between the PCM and the AP sensor. 3. AP1 and AP3 sensor ground circuit for a poor connection. 4. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Check the following items; 1. AP1 and AP3 signal circuit or 5 volge supply circuit for a poor connection. 2. AP1 and AP3 signal circuit or 5 volge supply circuit for high resistance between the PCM and the AP1 and AP3 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*

DTC P1273 – APS 1 – 3 Correlation Error (Cont'd)

Step	Action	Value(s)	Yes	No
8	Replace the AP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released ornot. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

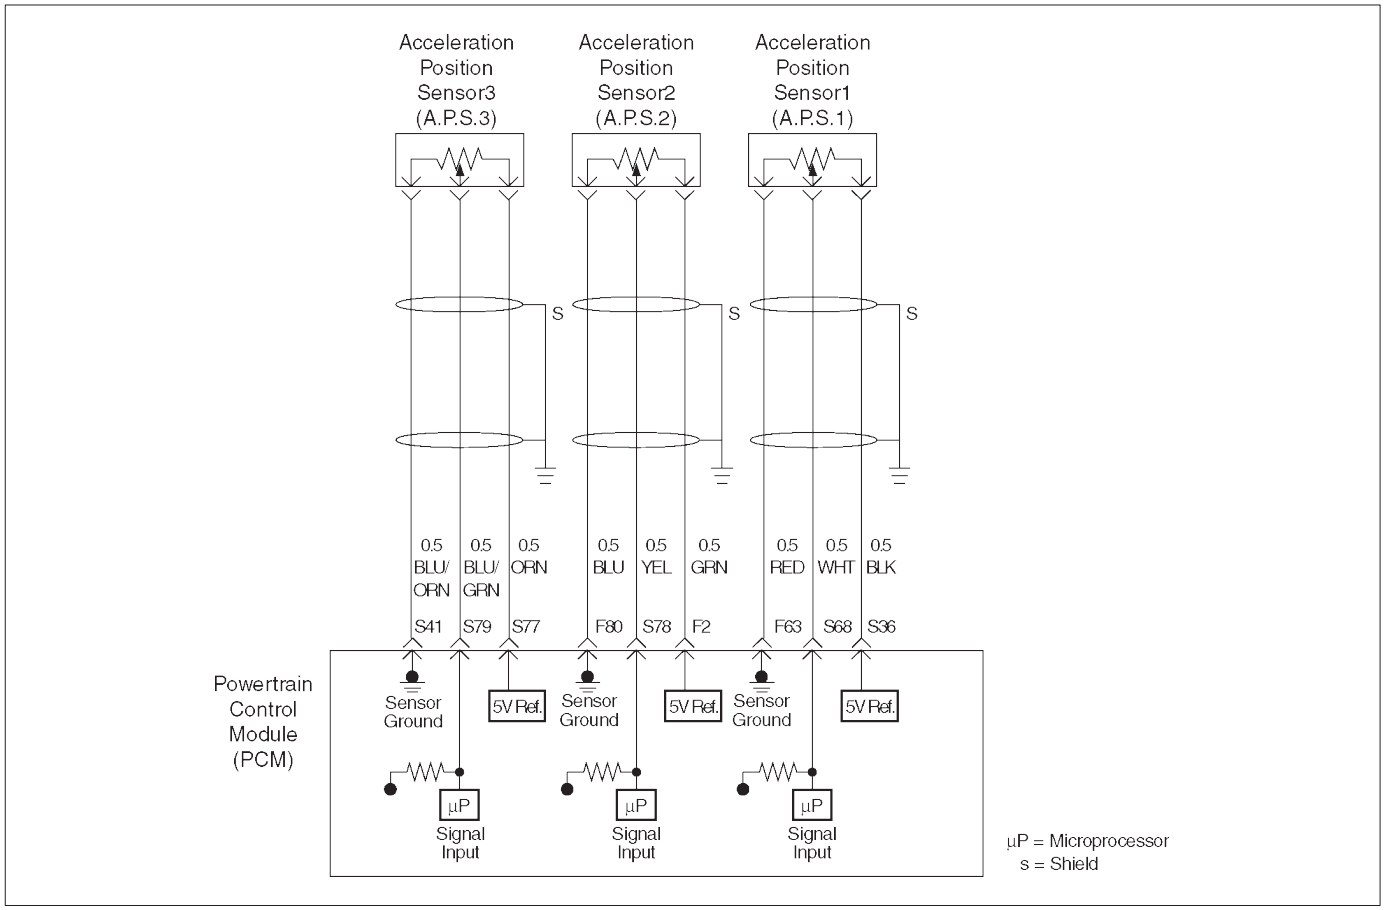Diagnostic Trouble Code (DTC) P1275 APS 1 Circuit Fault



D06RY00075

Circuit Description

- The acceleration position (AP) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle (AP1) will vary about 13 % at idle position to about 87 % at wide open throttle (WOT).

  This code detects a continuous short to ground or high in either the cicuit or the sensor.

Conditions for setting the DTC

- The Ignition is “ON”.
- The acceleration pedal angle is less than 2.5 % or more than 97 % for 12 counts within 500 test samples.

Action Taken When the DTC Sets

- The PCM will store condition which werepresent when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1275 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1275 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- The MAP sensor shares a 5 Volt reference with the Fuel Tank Pressure, APS1, APS3 and EGR value.
- The MAP sensor shares a ground with the Fuel Tank Pressure, the ECT sensor, and the Transmission Fluid.
- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK,observe the APP sensor 1 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1275 cannot be duplicated,the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.


  If it is determined that the DTC occurs intermittently, performing the DTC

P1275 Diagnostic Chart may isolate the cause of the fault.

DTC P1275 – APS 1 Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition ON” but not engine run. 4. Observe the AP angle reading on the Tech 2 while alowly opening the throttle. Does the AP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle APS1 = 11~15% Wide open throttle APS1 = 85~89%	Go to *Step 3*	Go to *Step 4*
3	Was the DTC P1275 sotred?	—	Go to *Step 8*	Check the procedure. Refer to *Diagnostic Aids*
4	1. Connect a test light between the 5 Voltge supply circuit and the AP1 sensor signal circuit at the AP sensor harness connector. 2. Observe the AP sensor reading on the Tech 2. Is the AP sensor reading near the specified value?	5V	Go to *Step 5*	Go to *Step 6*
5	Check the following items; 1. AP1 signal circuit for a short to voltage. 2. AP1 sensor ground circuit for high resistance between the PCM and the AP sensor. 3. AP1 sensor ground circuit for a poor connection. 4. If a problem is found,repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	Check the following items; 1. AP1 signal circuit or 5 volge supply circuit for a poor connection. 2. AP1 signal circuit or 5 volge supply circuit for high resistance between the PCM and the AP1 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Replace the AP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 8*
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

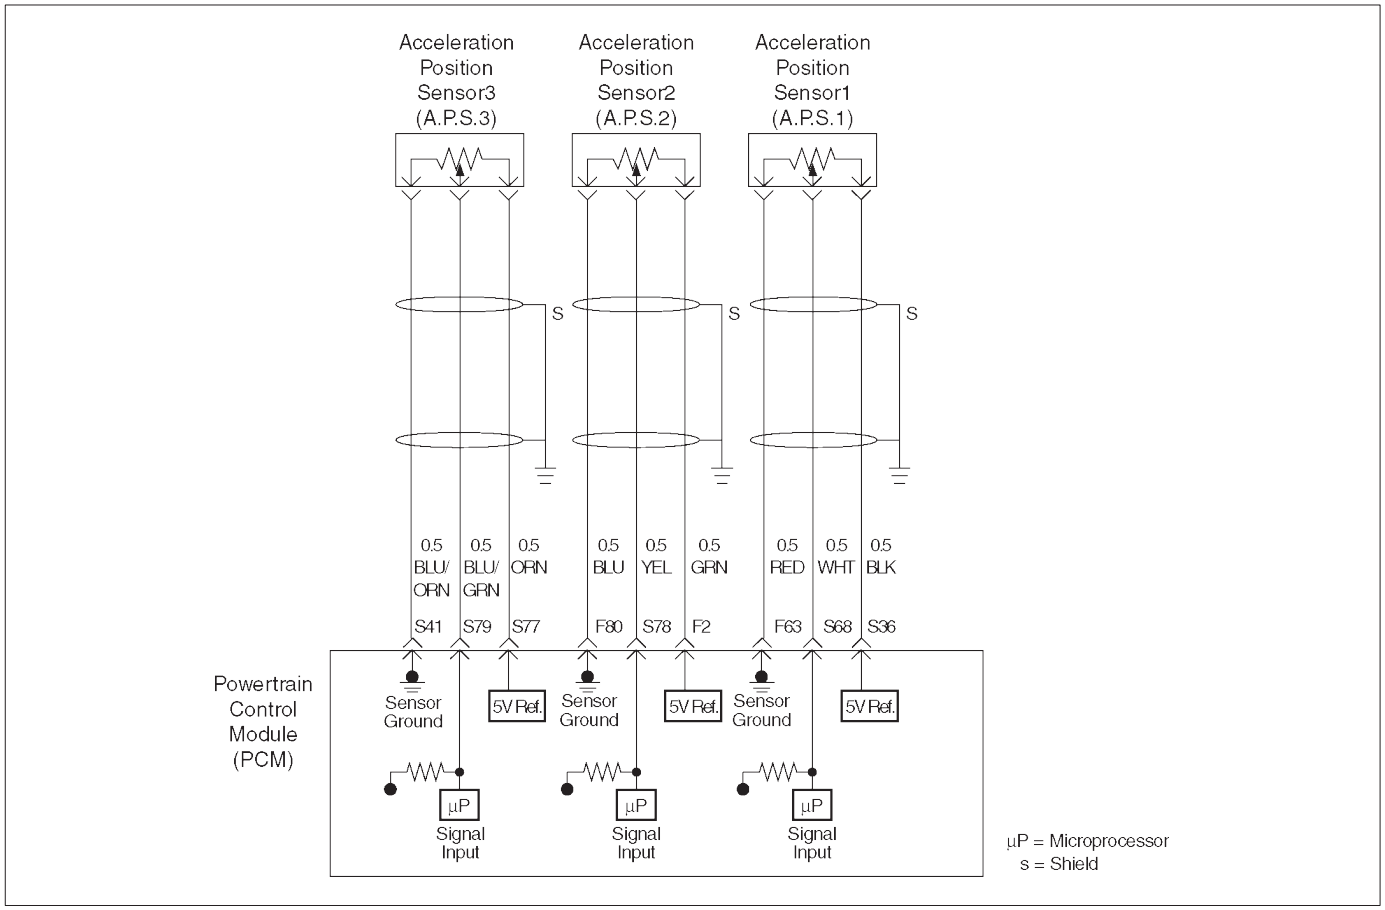Diagnostic Trouble Code (DTC) P1280 APS 2 Circuit Fault



D06RY00075

Circuit Description

- The acceleration position (AP) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle (AP2) will vary about 87 % at idle position to about 13 % at wide open throttle(WOT).

  This code detects a continuous short to ground or high in either the cicuit or the sensor.

Conditions for setting the DTC

- The Ignition is “ON”.
- The acceleration pedal angle is less than 2.5 % or more than 97 % for 12 counts within 500 test samples.

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1280 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1280 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the APP sensor 2 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1280 cannot be duplicated, the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.


  If it is determined that the DTC occurs intermittently, performing the DTC

P1280 Diagnostic Chart may isolate the cause of the fault.

DTC P1280 - APS 2 Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition ON” but not engine run. 4. Observe the AP angle reading on the Tech 2 while alowly opening the throttle. Does the AP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle APS2 = 85~89% Wide open throttle APS2 = 11~15%	Go to *Step 3*	Go to *Step 4*
3	Was the DTC P1280 stored?	—	Check the procedure. Go to *Step 8*	Refer to *Diagnostid Aids*
4	1. Connect a test light between the 5 Voltge supply circuit and the AP2 sensor signal circuit at the AP sensor harness connector. 2. Observe the AP sensor reading on the Tech 2. Is the AP sensor reading near the specified value?	5V	Go to *Step 5*	Go to *Step 6*
5	Check the following items; 1. AP2 signal circuit for a short to voltage. 2. AP2 sensor ground circuit for high resistance between the PCM and the AP sensor. 3. AP2 sensor ground circuit for a poor connection. 4. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	Check the following items; 1. AP2 signal circuit or 5 volge supply circuit for a poor connection. 2. AP2 signal circuit or 5 volge supply circuit for high resistance between the PCM and the AP2 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Replace the AP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 8*
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed.Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

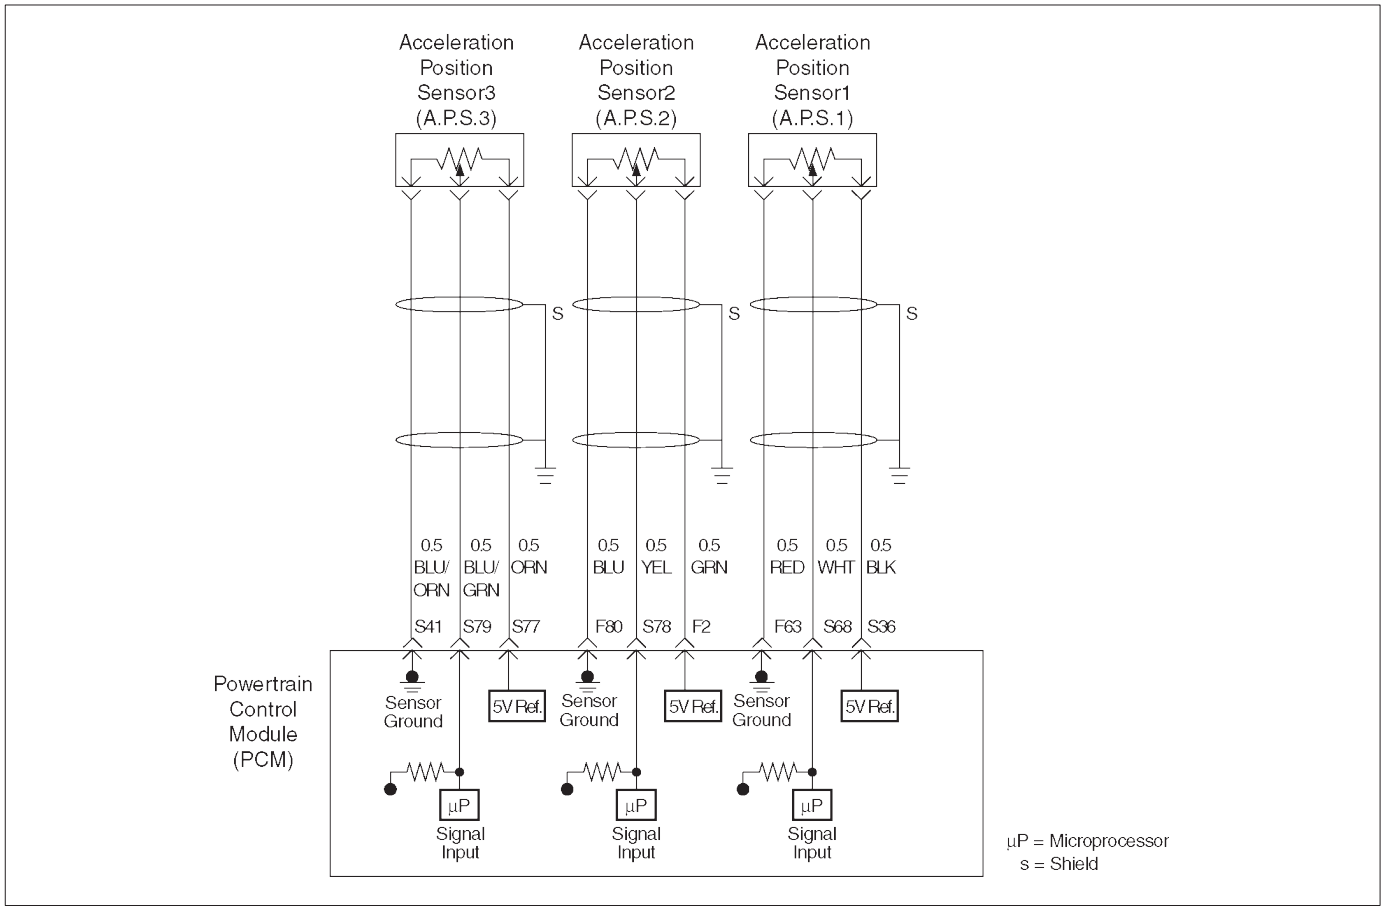Diagnostic Trouble Code (DTC) P1285 APS 3 Circuit Fault



D06RY00075

Circuit Description

- The acceleration position (AP) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle (AP3) will vary about 87 % at idle position to about 34 % at wide open throttle(WOT).

  This code detects a continuous short to ground or high in either the circuit or the sensor.

Conditions for setting the DTC

- The Ignition is “ON”.
- The acceleration pedal angle is less than 2.5 % or more than 97 % for 12 counts within 500 test samples.

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1285 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1285 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- The MAP sensor shares a 5 Volt reference with the Fuel Tank Pressure, APS1, APS3 and EGR value.
- The MAP sensor shares a ground with the Fuel Tank Pressure, the ECT sensor, and the Transmission Fluid.
- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the APP sensor 3 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1285 cannot be duplicated, the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.


  If it is determined that the DTC occurs intermittently, performing the DTC

P1285 Diagnostic Chart may isolate the cause of the fault.

DTC P1285 – APS 3 Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition ON” but not engine run. 4. Observe the AP angle reading on the Tech 2 while alowly opening the throttle. Does the AP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle APS3 = 85~89% Wide open throttle APS3 = 32~36%	Go to *Step 3*	Go to *Step 4*
3	Was the DTC P1285 stored?	—	Go to *Step 8*	Check the procedure. Refer to *Diagnostic Aids*
4	1. Connect a test light between the 5 Voltge supply circuit and the AP3 sensor signal circuit at the AP sensor harness connector. 2. Observe the AP sensor reading on the Tech 2. Is the AP sensor reading near the specified value?	5V	Go to *Step 5*	Go to *Step 6*
5	1. Check the following items; AP3 signal circuit for a short to voltage. 2. AP3 sensor ground circuit for high resistance between the PCM and the AP sensor. 3. AP3 sensor ground circuit for a poor connection. 4. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	Check the following items; 1. AP3 signal circuit or 5 volge supply circuit for a poor connection. 2. AP3 signal circuit or 5 volge supply circuit for high resistance between the PCM and the AP3 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Replace the AP sensor. Was a problem corrected	—	Verify repair	Go to *Step 8*
8	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released ornot. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

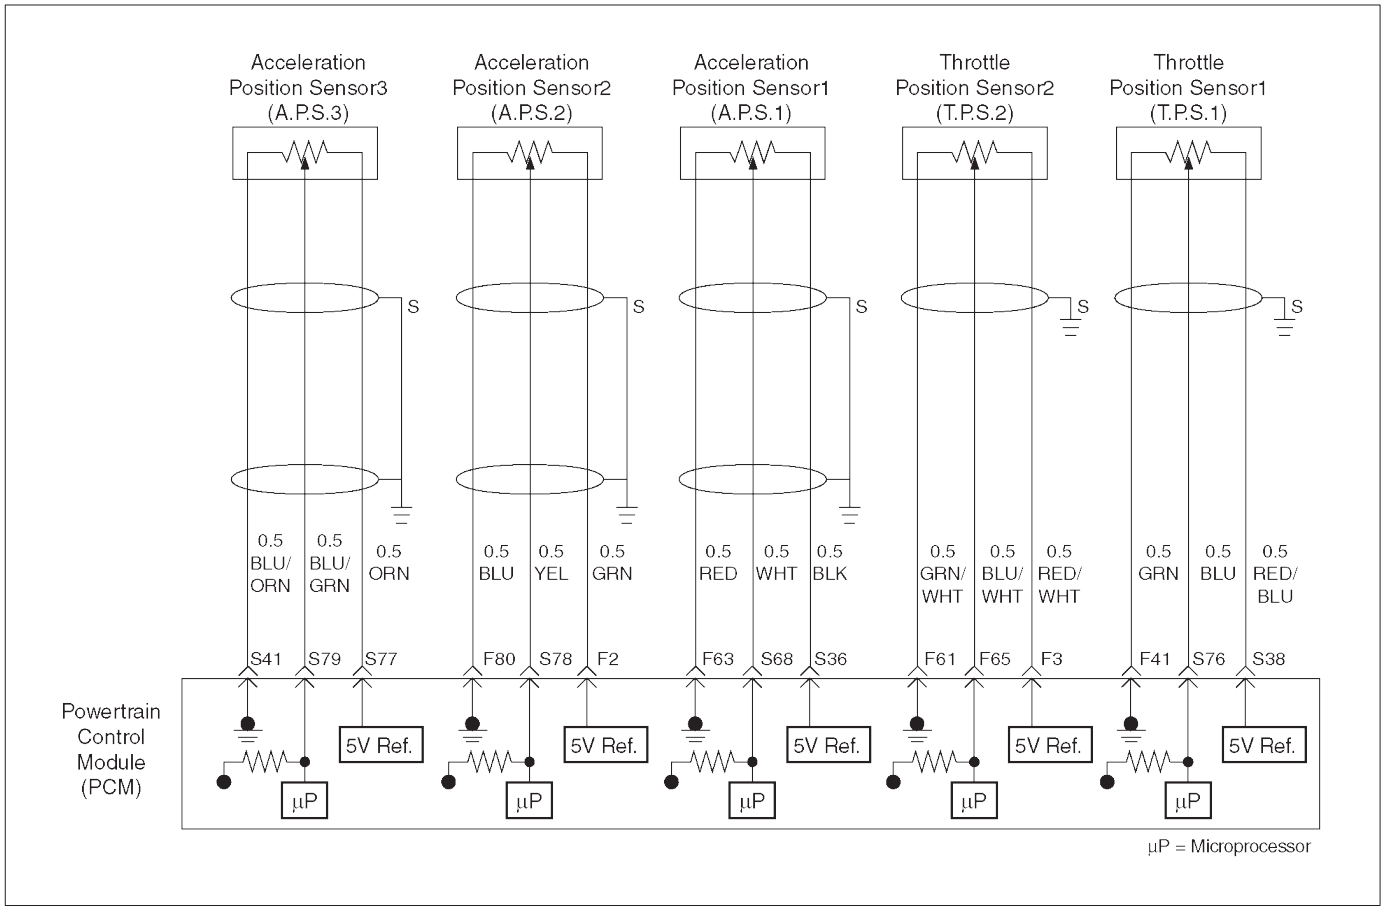Diagnostic Trouble Code (DTC) P1290 ETC Forced Idle Mode



D06RY00157

Circuit Description

- The acceleration position (AP) sensor circuit provides a voltage signal relative to acceleration pedal angle.

  The acceleration pedal angle (AP1) will vary about 13 % at idle position to about 87 % at wide open throttle (WOT).

  This code detects that if the systm is in Forced Idle Mode. (Fail safe Mode)

Conditions for setting the DTC

- The Ignition is “ON”.
- Forced Idle Mode is active. (Fail safe Mode)

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1290 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1290 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the APP sensor 1, APP sensor 2, APP sensor 3 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1290 cannot be duplicated, the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.


  If it is determined that the DTC occurs intermittently, performing the DTC

P1290 Diagnostic Chart may isolate the cause of the fault.

DTC P1290 - ETC Forced Idle Mode

Step	Action	Value(s)	Yes	No
1	Was the “On - Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Check for a poor conection at the AP1,AP2,AP3 sensor harness conector. 2. If a problem found, repair as necessary. Was a problem found ?	—	Verify repair	Go to *Step 3*
3	1. Check the curcuit between the PCM and each terminal of AP1,AP2 and AP3 sensor. 2. If the curcuit is open or shorted, repair it as necessary. Was the curcuit open or short?	—	Vefiry repair	Go to *Step 4*
4	Replace the AP sensor. Is the action complate?	—	Go to *Step 5*	—
5	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition ON” but not engine run. 4. Observe the AP angle reading on the Tech 2 while alowly opening the throttle. Does the AP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle APS1 = 11~15% APS2 = 85~89% APS3 = 85~89% Wide open throttle APS1 = 85~89 APS2 = 11~15% APS3 = 32~36%	—	Go to *Step 6*
6	Replace the PCM; The replacement PCM must be programmed. Refer to *ON–Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complate?	—	Verify repair	—

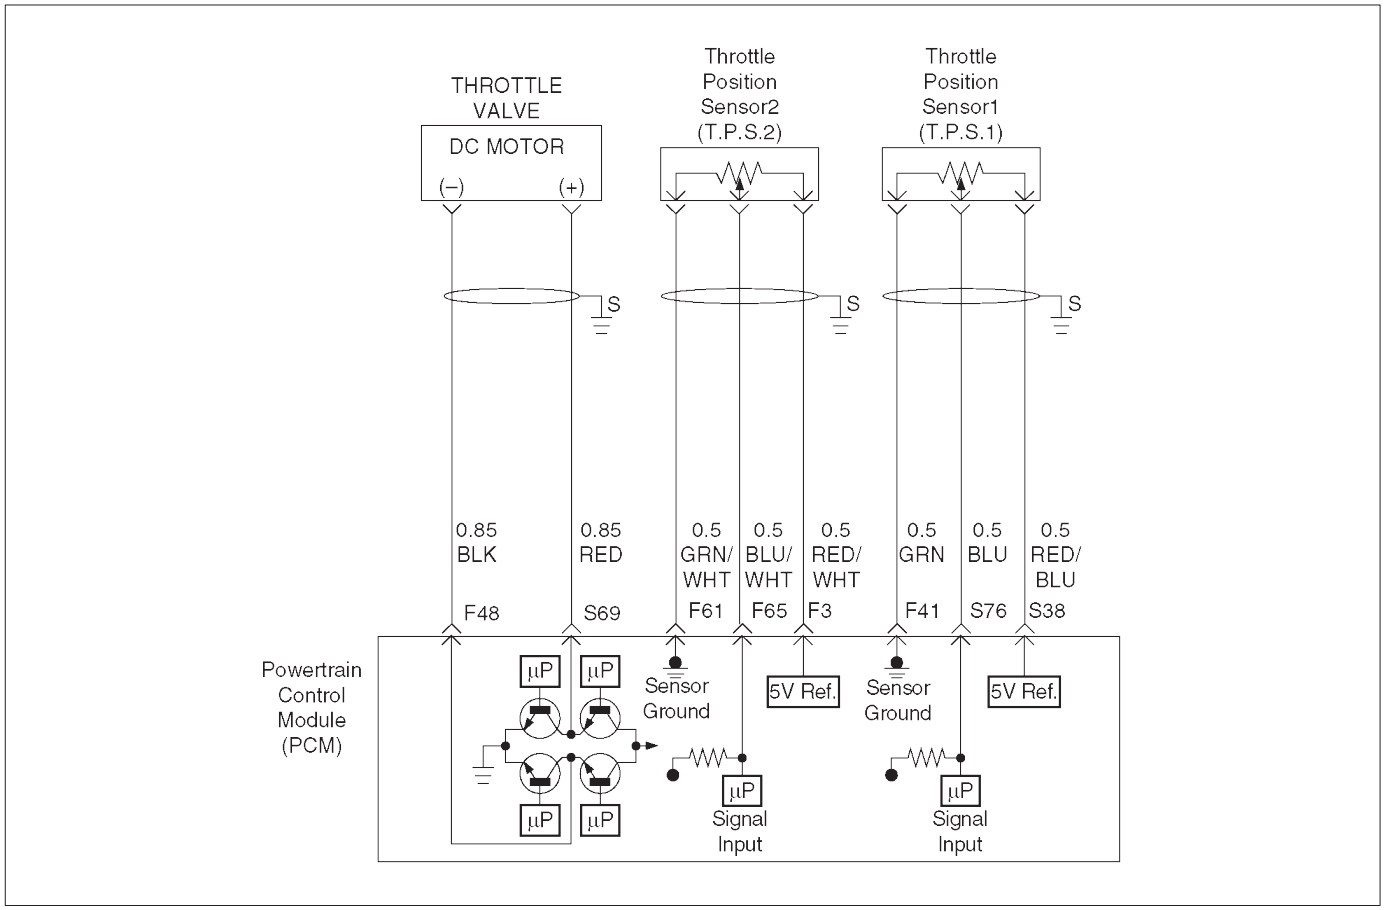Diagnostic Trouble Code (DTC) P1295 Power Management Mode



D06RY00088

Circuit Description

- The throttle position (TP) sensor circuit provides a voltage signal relative to throttle position (blade angle).

  The throttle blade angle will vary about 8 % at closed throttle to about 92 % at wide open throttle (WOT).
- The DC motor circuit provides a voltage signal relative to command throttle position (blade angle).
- The mass air flow (MAF) sensor measures the amount of air which passes through it into the engine during a given time. The powertrain Control Module (PCM) uses the mass air flow information to monitor engine operating conditions for fuel delivery calculations.

  A large quantitiy of air entering the engine indicates an accleration or high load situation, while a small quantity or air indicates deceleration or idle.

  The MAF sensor produces a frequency signal which can be monitored using a Tech 2. The frequency will vary within a range of around 4 to 7g/s at idle to around 25 to 40g/s at maximum engine load.
- This DTC ditects that if the systm is in PowerManagement Mode.(Fail safe Mode)

Conditions for setting the DTC

- The ignition is “ON”.
- Power Management Mode is active. (Fail safe Mode)

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1295 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1295 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the

TP sensor 1, TP sensor 2 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.


A change in the display will indicate the location of the fault.If DTC P1295 cannot be duplicated, the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1295 Diagnostic Chart may isolate the cause of the fault.

DTC P1295 - Power Management Mode

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition “ON” but not engine run. 4. Observe the TP angle reading on the Tech 2 while alowly opening the throttle. NOTE: The value check of TPS must be performed in less than 15 seconds. Does the TP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle TPS1= 6~12% TPS2= 88~94% Wide open throttle TPS1= 79~83% TPS2= 19~23%	Go to *Step 4*	Go to *Step 5*
4	Was the DTC P1295 stored?	—	Go to *Step 9*	Check the procedure. Refer to *Diagnostic Aids*
5	1. Check the curcuit between the PCM and each terminal of TP1 and TP2 sensor. Was the curcuit open or shorted?	—	Verify repair	Go to *Step 7*
6	1. Repair the faulty wiring harness. Was a problem corrected?	—	Verify repair	Go to *Step 7*
7	1. Ignition “On”, engine “Off”. 2. Operate the throttle lever by hand (Don’t operate the acceleration pedal). Was the DTC P1515 or P1516 stored?	—	Go to *Step 9*	Go to *Step 8*
8	1. Replace the TP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to ON–Vehicle Service in Power Control Module and Sensors for procedures. And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the adtion complete?	—	Varify repair	—

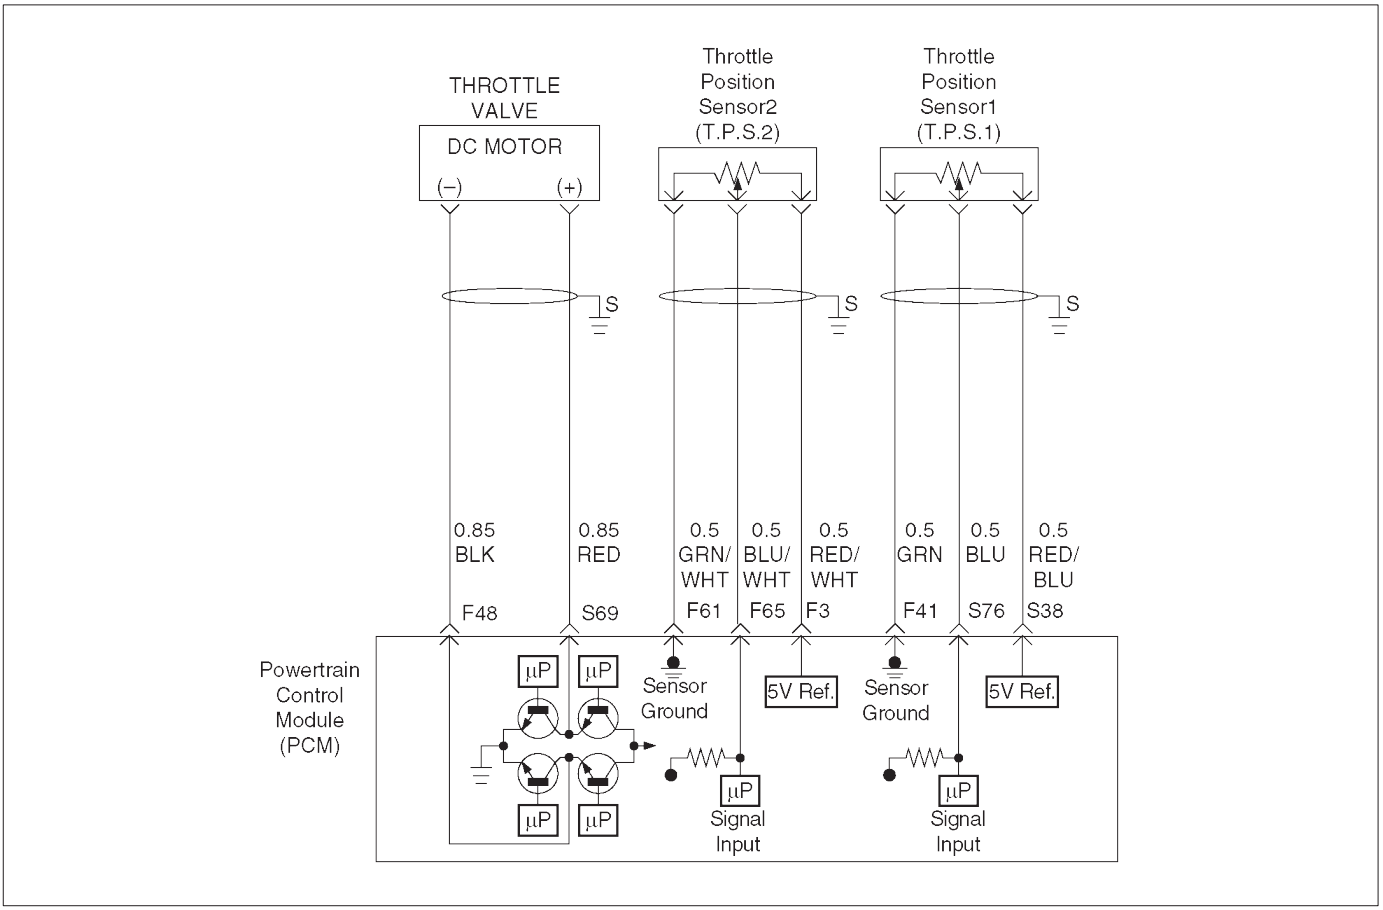Diagnostic Trouble Code (DTC)
P1299 ETC Forced Engine Shutdown Mode



D06RY00088

Circuit Description

- The throttle position sensor circuit provides a voltage signal relative to throttle position (blade angle).

  The throttle blade angle will vary about 8% at closed throttle to about 92% at wide open throttle(WOT).
- The DC motor circuit provides a voltage signal relative to command throttle position (blade angle).
- The mass air flow (MAF) sensor measures the amount of air which passes through it into the engine during a given time. The powertrain Control Module (PCM) uses the mass air flow information to monitor engine operating conditions for fuel delivery calculations. A laege quantitiy of air entering the engine indicates an accleration or high load situation, while a small quantity or air indicates deceleration or idle.

  The MAF sensor produces a frequency signal which can be monitored using a Tech 2. The frequency will vary within a range of around 4 to 7g/s at idle to around 25 to 40g/s at maximum engine load.
- This DTC ditects if the system is in ECT Forced Engine Shutdown Mode.(Fail safe Mode)

Conditions for setting the DTC

- The ignition is “ON”.
- ECT Forced Engine Shutdown Mode is active. (Fail safe Mode)

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1299 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1299 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the

TP sensor 1, TP sensor 2 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.


A change in the display will indicate the location of the fault. If DTC P1299 cannot be duplicated, the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1299 Diagnostic Chart may isolate the cause of the fault.

DTC P1299 - ETC Forced Engine Shutdown Mode

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition “ON” but not engine run. 4. Observe the TP angle reading on the Tech 2 while alowly opening the throttle. NOTE: The value check of TPS must be performed in less than 15 seconds. Does the TP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle TPS1= 6~12% TPS2= 88~94% Wide open throttle TPS1= 79~83% TPS2= 19~23%	Go to *Step 4*	Go to *Step 5*
4	Was the DTC P1299 stored?	—	Go to *Step 9*	Check the procedure. Refer to *Diagnostic Aids*
5	1. Check the curcuit between the PCM and each terminal of TP1 and TP2 sensor. Was the curcuit open or shorted?	—	Verify repair	Go to *Step 7*
6	1. Repair the faulty wiring harness. Was a problem corrected?	—	Verify repair	Go to *Step 7*
7	1. Ignition “On”, engine “Off”. 2. Operate the throttle lever by hand (Don’t operate the acceleration pedal). Was the DTC P1515 or P1516 stored?	—	Go to *Step 9*	Go to *Step 8*
8	1. Replace the TP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 9*
9	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to ON–Vehicle Service in Power Control Module and Sensors for procedures. And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the adtion complete?	—	Varify repair	—

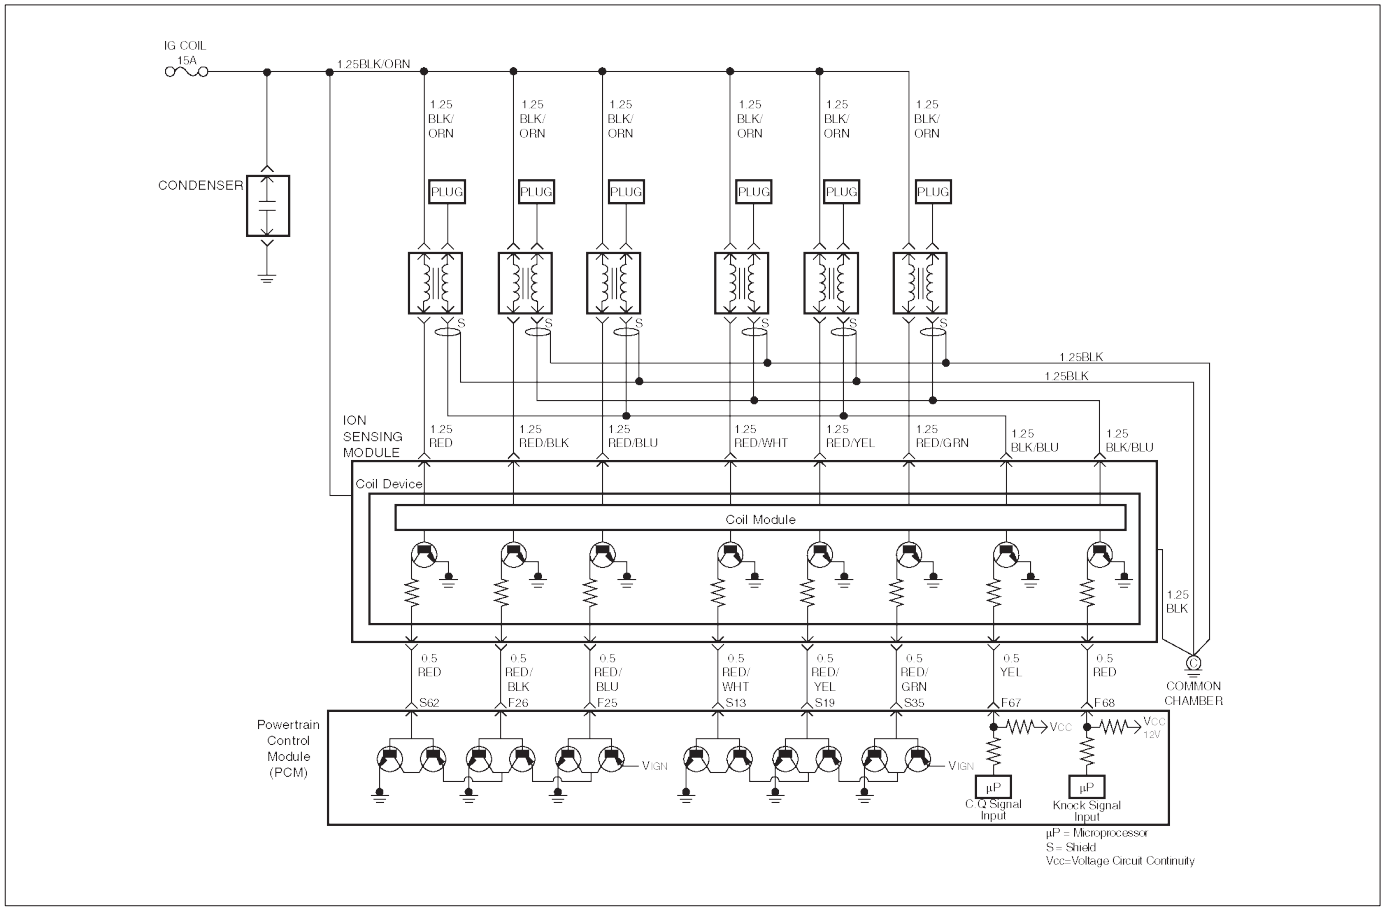Diagnostic Trouble Code (DTC)
P1310 ION Sensing Module Diagnosis



D06R200098

Circuit Description

The Power Control Module (PCM) checks the validity of the signals used in the ION Sensing module at the following engine operating conditions.

- The Deceleration Fuel Cut Off (DFCO) test is performed to evaluate the Combustion Quality (CQ) signal pulse width
- If it is below a predetermined value, the value it is expected to be during DFCO conditions. If the CQ signal pulse width is above the predetermined threshold, the fail counter will be incremented. If the failure counter exceeds the calibration, then the test is complete and a failure will be reported.
- The Power Enrichment (PE) test is performed to evaluate the Combustion Quality (CQ) signal pulse width
- If it is below a predetermined value, the value is expected to be during PE conditions.

  If the CQ signal pulse width is above the predetermined threshold, the fail counter will be incremented. If the failure counter exceeds the calibration, then the test is complete and a failure will be reported.
- The Combustion Quality (CQ) test is performed to check if inappropriate (CQ) signal status were detected. If missing CQ pulses or multiple CQ pulses or CQ pulse width calculation errors were detected, the fail counter will be incremented. If the failure counter exceeds the calibration, then the test is complete and a failure will be reported.

Conditions for setting the DTC

- Ignition voltage is between 10volt and 16 volts.
- MAP sensor signal is between 26kPa and 100 kPa.
- Fuel level is more than 19%.
- Engine speed is between 650rpm and 6500rpm.
- No Crank DTCs set.
- No System voltage DTCs set.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1310 will clear after 40 consecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1310 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1310 cannot be duplicated, the information included in the Failure Records data can be useful in determined vehicle mileage since the DTC was last set.

  If it is determined that the DTC occurs intermittently, performing the DTC P1310 Diagnostic Chart may isolate the cause of the fault.


DTC P1310 - ION Sensing Module Diagnostic

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor “DTC” info for DTC P1310. Does the Tech 2 indicate DTC P1310 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Ignition “OFF”. 2. Disconnect the ION Sensing module. 3. Disconnect the PCM. Is the action complete?	—	Go to *Step 4*	Go to *Step 3*
4	Check the ION Sensing harness between the PCM and ION Sensing module circuit harness connector. Was a problem found?	—	Verify repair	Go to *Step 6*
5	1. Disconnect the ignition coil. Is the action complete?	—	Go to *Step 6*	Go to *Step 5*
6	Check the ION Sensing harness between the ignition coil and ION Sensing module circuit at the ION Sensing Module harness connector. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Check the following items; 1. Ignition coil and ignition coil circuit. 2. Ignition coil ground circuit for a poor connection. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	Replace the Ignition coil. Is the action complete?	—	Verify repair	Go to *Step 9*
9	Check the following items; 1. ION Sensing module ground circuit for a poor connection. 2. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*

DTC P1310 - ION Sensing Module Diagnostic (Cont'd)

Step	Action	Value(s)	Yes	No
10	Replace the ION Sensing module. Is the action complete?	—	Verify repair	Go to *Step 11*
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

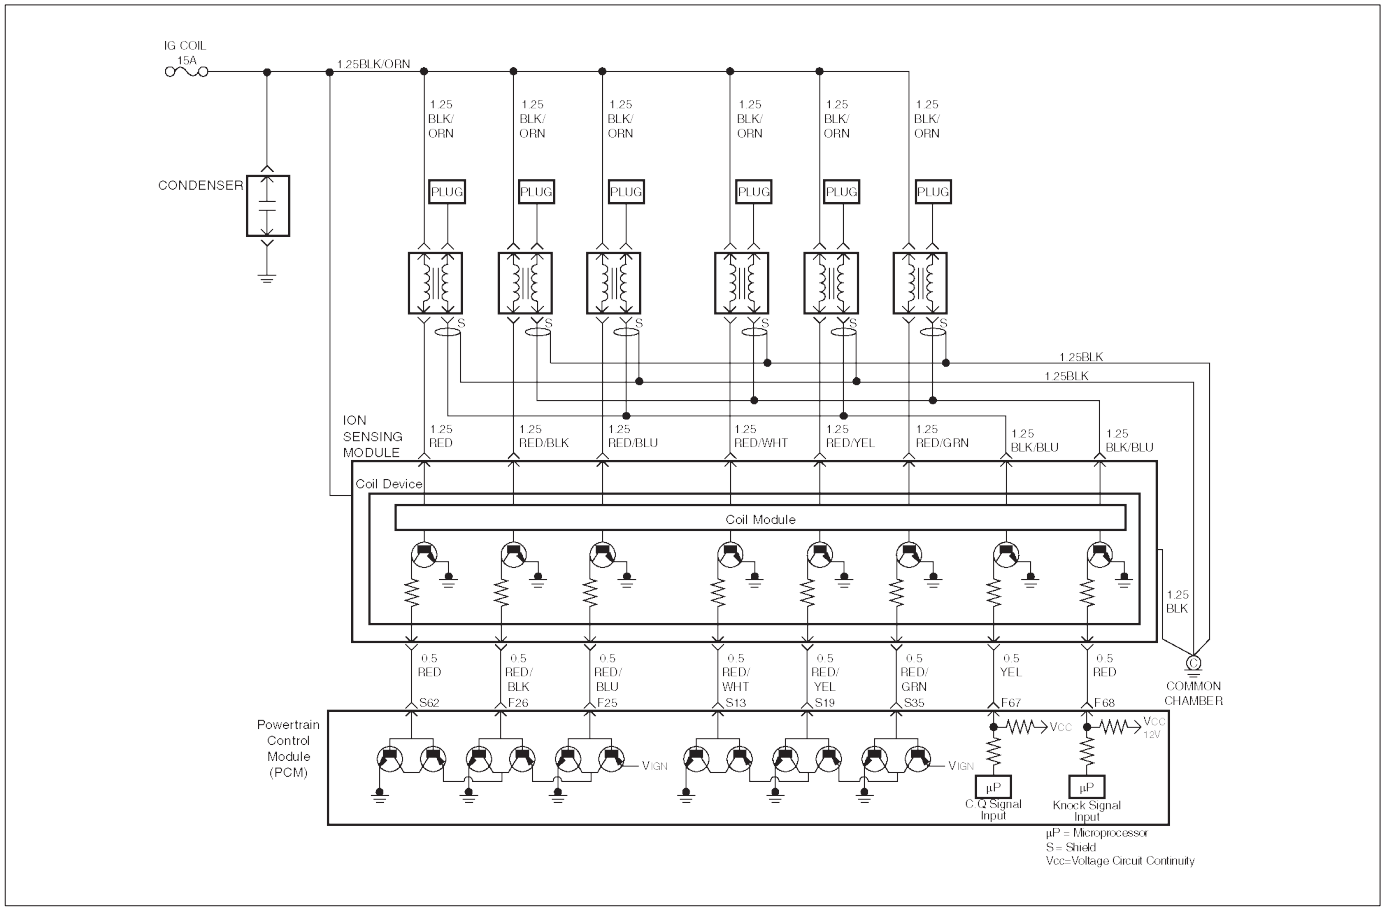Diagnostic Trouble Code (DTC)
P1311 ION Sensing Module SEC Line 1 Circuit Fault



D06R200098

Circuit Description

- The Power Control Module (PCM) will compare the secondary current reading to predetermined maximum and minimum thresholds.

  If the secondary current signal pulse width is out of the predetermined range, the fail counter will be incremented. If the failure counter exceeds the calibration, then the PCM is complete and a failure will be reported. If the sample counter threshold is reached before the failure threshold, then the PCM is complete and pass will be reported.

  This PCM will detect an open/short circuit in the secondary current sense input circuit, misfire on the entire bank for the secondary current sense input circuit, coil failure, and same internal Ignition Current Sense System (ICSS) module faults.

Conditions for setting the DTC

- Ignition voltage is between 10volt and 16 volts.
- MAP sensor signal is between 26kPa and 100 kPa.
- Fuel level is more than 19%.
- Engine speed is between 650rpm and 6500rpm.
- ION Sensing Module circuit is open or shorted signals on the SEC 1 line.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1311 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P1311 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the moving connectors and wiring harnesses related to the sensor.
- A change in the display will indicate the location of the fault. If DTC P1311 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set.
- If it is determined that the DTC occurs intermittently, performing the DTC P1311 Diagnostic Chart may isolate the cause of the fault.


DTC P1311 - ION Sensing Module SEC Line 1 Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor “DTC” info for DTC P1311. Does the Tech 2 indicate DTC P1311 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Ignition “OFF”. 2. Disconnect the ION Sensing module. 3. Disconnect the PCM. Is the action complete?	—	Go to *Step 4*	Go to *Step 3*
4	Check the ION Sensing module harness between the PCM and ION Sensing module circuit at the ION Sensing module harness connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Disconnect the ignition coil. Is the action complete?	—	Go to *Step 6*	Go to *Step 5*
6	Check the ION Sensing module harness between the ignition coil and ION Sensing module circuit at the SEC line 1 harness connector. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Check the following items; 1. Ignition coil and ignition coil circuit. 2. Ignition coil ground circuit for a poor connection. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	Replace the Ignition coil. Is the action complete?	—	Verify repair	Go to *Step 9*
9	Check the following items; 1. ION Sensing module ground circuit for a poor connection. 2. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*

DTC P1311 - ION Sensing Module SEC Line 1 Circuit Fault (Cont'd)

Step	Action	Value(s)	Yes	No
10	Replace the ION Sensing module. Is the action complete?	—	Verify repair	Go to *Step 11*
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

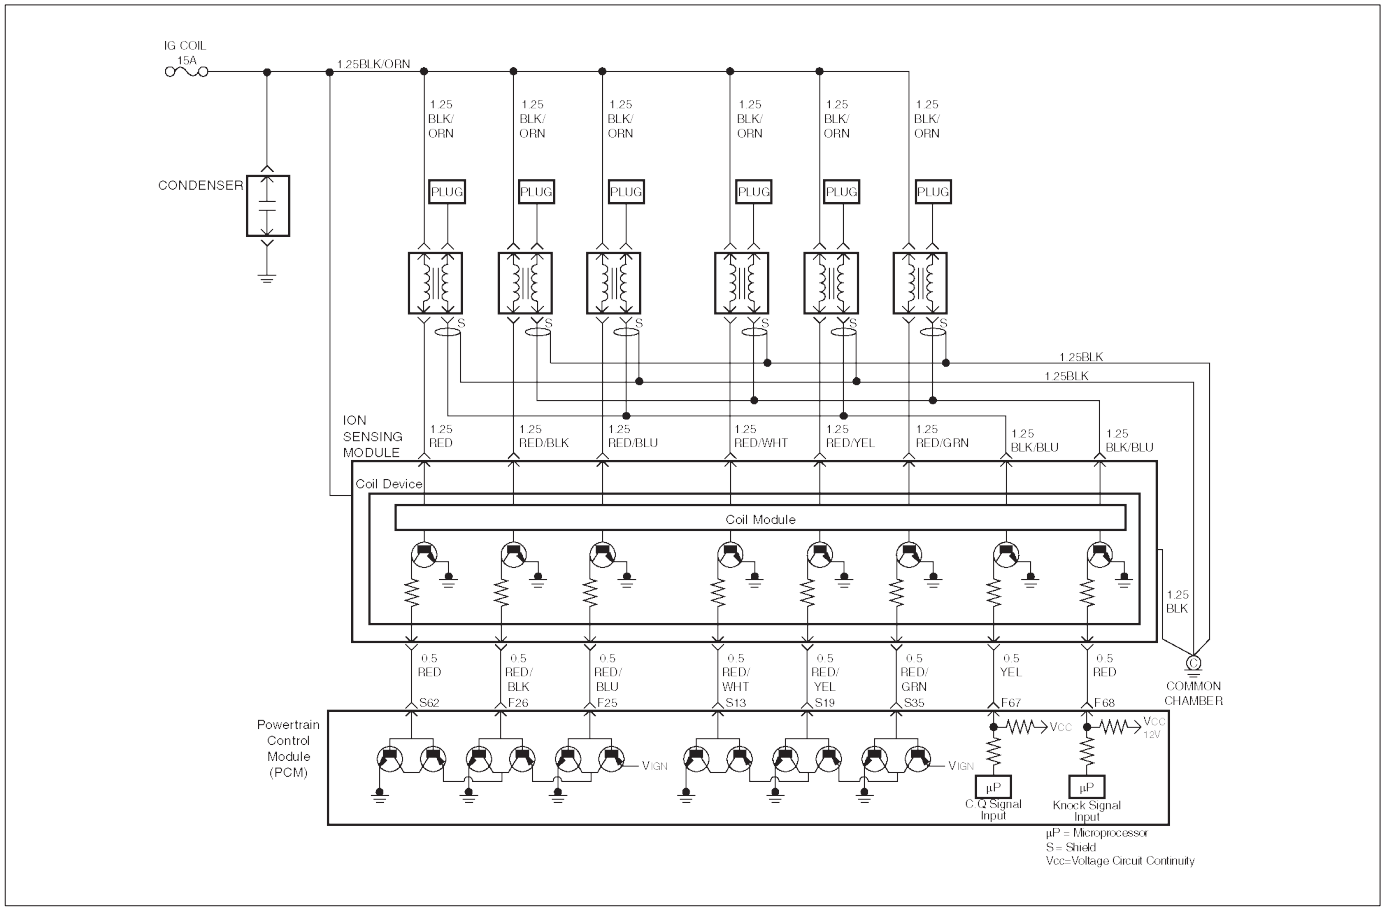Diagnostic Trouble Code (DTC)
P1312 ION Sensing Module SEC Line 2 Circuit Fault



D06R200098

Circuit Description

- The Power Control Module (PCM) will compare the secondary current reading to predetermined maximum and minimum thresholds.

  If the secondary current signal pulse width is out of the predetermined range, the fail counter will be incremented. If the fail counter exceeds the calibration, then the PCM is complete and a failure will be reported. If the sample counter threshold is reached before the failure threshold, then the PCM is complete and pass will be reported.

  This PCM will detect an open/short circuit in the secondary current sense input circuit, misfire on the entire bank for the secondary current sense input circuit, coil failure, and same internal Ignition Current Sense System (ICSS) module faults.

Conditions for setting the DTC

- Ignition voltage is between 10volt and 16 volts.
- MAP sensor signal is between 26kPa and 100 kPa.
- Fuel level is more than 19%.
- Engine speed is between 650rpm and 6500rpm.
- ION Sensing Module circuit is open or shorted signals on the SEC 2 line.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1312 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P1312 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the moving connectors and wiring harnesses related to the sensor.

A change in the display will indicate the location of the fault. If DTC P1312 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1312 Diagnostic Chart may isolate the cause of the fault.


DTC P1312 - ION Sensing Module SEC Line 2 Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor “DTC” info for DTC P1312. Does the Tech 2 indicate DTC P1312 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Ignition “OFF”. 2. Disconnect the ION Sensing module. 3. Disconnect the PCM. Is the action complete?	—	Go to *Step 4*	Go to *Step 3*
4	Check the ION Sensing module harness between the PCM and ICSS module circuit at the ION Sensing Module harness connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Disconnect the ignition coil. Is the action complete?	—	Go to *Step 6*	Go to *Step 5*
6	Check the ION Sensing module harness between the ignition coil and ION Sensing module circuit at the SEC line 2 harness connector. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Check the following items; 1. Ignition coil and ignition coil circuit. 2. Ignition coil ground circuit for a poor connection. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	Replace the Ignition coil. Is the action complete?	—	Verify repair	Go to *Step 9*
9	Check the following items; 1. ION Sensing module ground circuit for a poor connection. 2. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*

DTC P1312 - ION Sensing Module SEC Line 2 Circuit Fault (Cont'd)

Step	Action	Value(s)	Yes	No
10	Replace the ION Sensing module. Is the action complete?	—	Verify repair	Go to *Step 11*
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

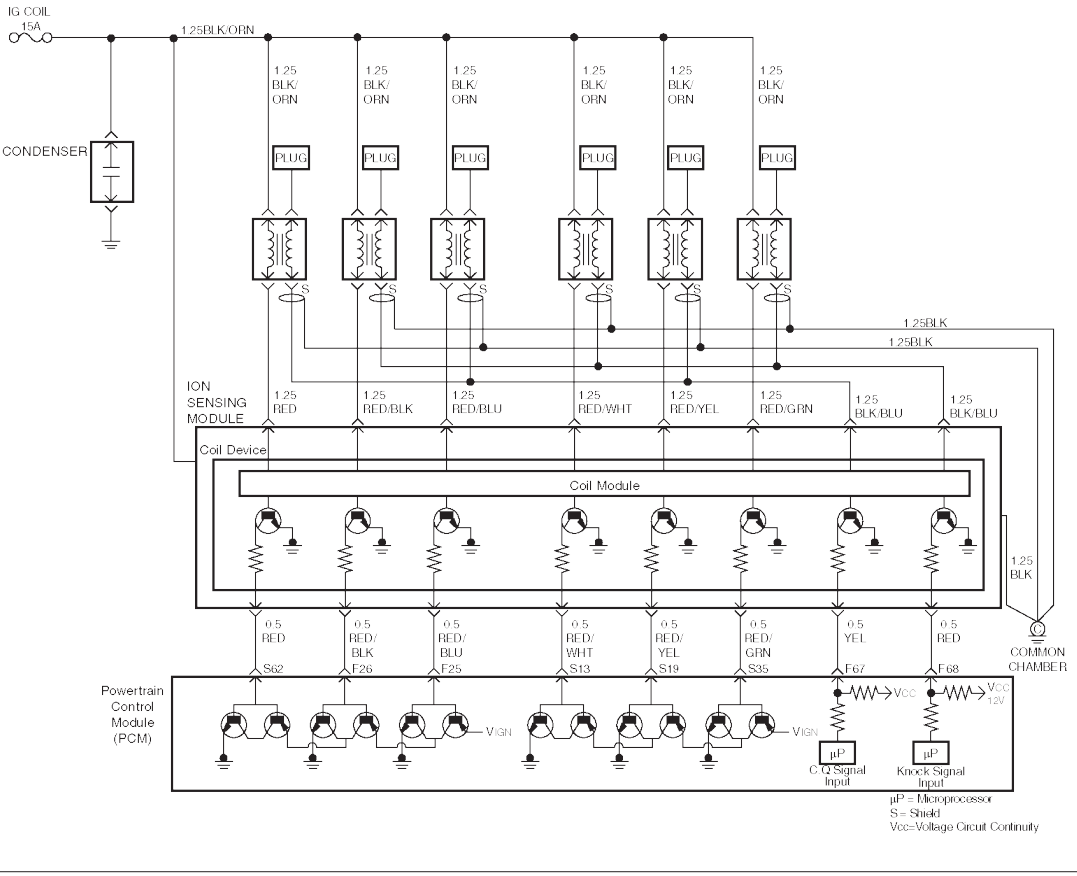Diagnostic Trouble Code (DTC)
P1326 ION Sensing Module Combustion Quality Input Circuit Fault



D06R200098

Circuit Description

The Power Control Module (PCM) checks the validity of the signals used in the ION Sensing module at the following engine operating conditions.

- The test is performed to evacuate the Combustion Quality (CQ) signal pulse width if it is within a predetermined range. If the CQ signal pulse width is out of the predetermined range, the fail counter will be incremented. If the failure counter exceeds the calibration, then test is complete and a failure will be reported. If the sample counter threshold is reached before the failure threshold, then the test is complete and a pass will be reported. This test will detect an open/short in the CQ line circuit, ION Sensing module faults and analog input faults in the PCM.

Conditions for setting the DTC

- Ignition voltage is between 10volt and 16 volts.
- No Crank DTCs set.
- No cylinder ID DTCs set.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1326 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P1326 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1326 cannot be duplicated, the information included in the Failure Records data can

be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1326 Diagnostic Chart may isolate the cause of the fault.


DTC P1326 - ION Sensing Module Combustion

Step	Action	Value(s)	Yes	No
1	Was the "On-Board (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF". 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor "DTC" info for DTC P1326. Does the Tech 2 indicate DTC P1326 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Ignition "OFF". 2. Disconnect the ION Sensing module. 3. Disconnect the PCM. Is the action complete?	—	Go to *Step 4*	Go to *Step 3*
4	Check the ION Sensing module harness between the PCM and ION Sensing module circuit at the QC line harness connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Disconnect the ignition coil. Is the action complete?	—	Go to *Step 6*	Go to *Step 5*
6	Check the ION Sensing module harness between the ignition coil and ICSS module circuit at the ION Sensing Module harness connector. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Check the following items; 1. Ignition coil and ignition coil circuit. 2. Ignition coil ground circuit for a poor connection. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	Replace the Ignition coil. Is the action complete?	—	Verify repair	Go to *Step 9*
9	Check the following items; 1. ION Sensing module ground circuit for a poor connection. 2. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*

DTC P1326 - ION Sensing Module Combustion (Cont'd)

Step	Action	Value(s)	Yes	No
10	Replace the ION Sensing module. Is the action complete?	—	Verify repair	Go to *Step 11*
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin .Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

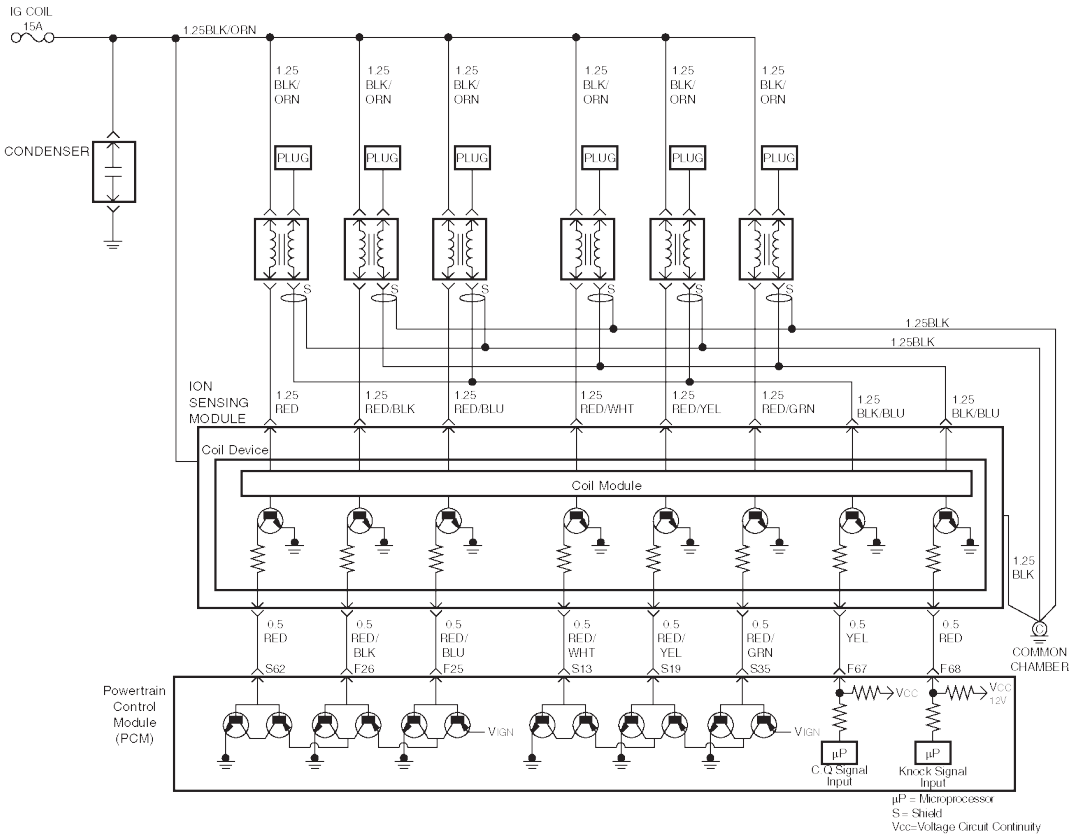Diagnostic Trouble Code (DTC)
P1340 ION Sensing Module Cylinder ID Fault (Cylinder Synchronization Fail)



D06R200098

Circuit Description

The Power Control Module (PCM) checks the validity of the signals used in the ION Sensing module at the following engine operating conditions.

- This test will return a fault if the cylinder synchronization routine has not been completed after a predetermined number of events after crank. This test will detect fault that will prevent the PCM from synchronization, such as Knock Signal (KI) - Combustion Quality (CQ) lines being swapped, shorted spark plugs, ION Sensing module faults, an PCM hardware faults.

Conditions for setting the DTC

- Ignition voltage is between 11volts and 16 volts.
- Engine speed is between 650rpm and 6250rpm.
- No ECT DTCs set.
- No injector DTCs set.
- No Fuel Trim DTCs set.
- No Misfire DTCs set.
- No system voltage DTCs set.

Action Taken When the DTC Sets

- The PCM will ON the MIL after second trip with detected the fault.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1340 will clear after 40 consecutive trip cycles during which the warm up cycles have occurred without a fault.
- DTC P1340 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connections.
- Misrouted harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness–Inspect the wiring harness for damage. If the harness appears to be OK, observe the moving connectors and wiring harnesses related to the sensor.

A change in the display will indicate the location of the fault. If DTC P1340 cannot be duplicated, the information included in the Failure Records data can be useful in determining vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1340 Diagnostic Chart may isolate the cause of the fault.


DTC P1340 - ION Sensing Module Cylinder ID Fault (Cylinder Synchronization Fail)

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “ON”, engine “OFF”. 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor “ DTC” info for DTC P1340. Does the Tech 2 indicate DTC P1340 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Ignition “OFF”. 2. Disconnect the ION Sensing module. 3. Disconnect the PCM. Is the action complete?	—	Go to *Step 4*	Go to *Step 3*
4	Check the ION Sensing module harness between the PCM and ICSS module circuit at the QC line harness connector. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Disconnect the ignition coil. Is the action complete?	—	Go to *Step 6*	Go to *Step 5*
6	Check the ION Sensing module harness between the ignition coil and ION Sensing module circuit at the ION Sensing Module harness connector. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Check the following items; 1. Ignition coil and ignition coil circuit. 2. Ignition coil ground circuit for a poor connection. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	Replace the Ignition coil. Is the action complete?	—	Verify repair	Go to *Step 9*
9	Check the following items; 1. ION Sensing module ground circuit for a poor connection. 2. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*

DTC P1340 - ION Sensing Module Cylinder ID Fault (Cylinder Synchronization Fail) (Cont'd)

Step	Action	Value(s)	Yes	No
10	Replace the ION Sensing module. Is the action complete?	—	Verify repair	Go to *Step 11*
11	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

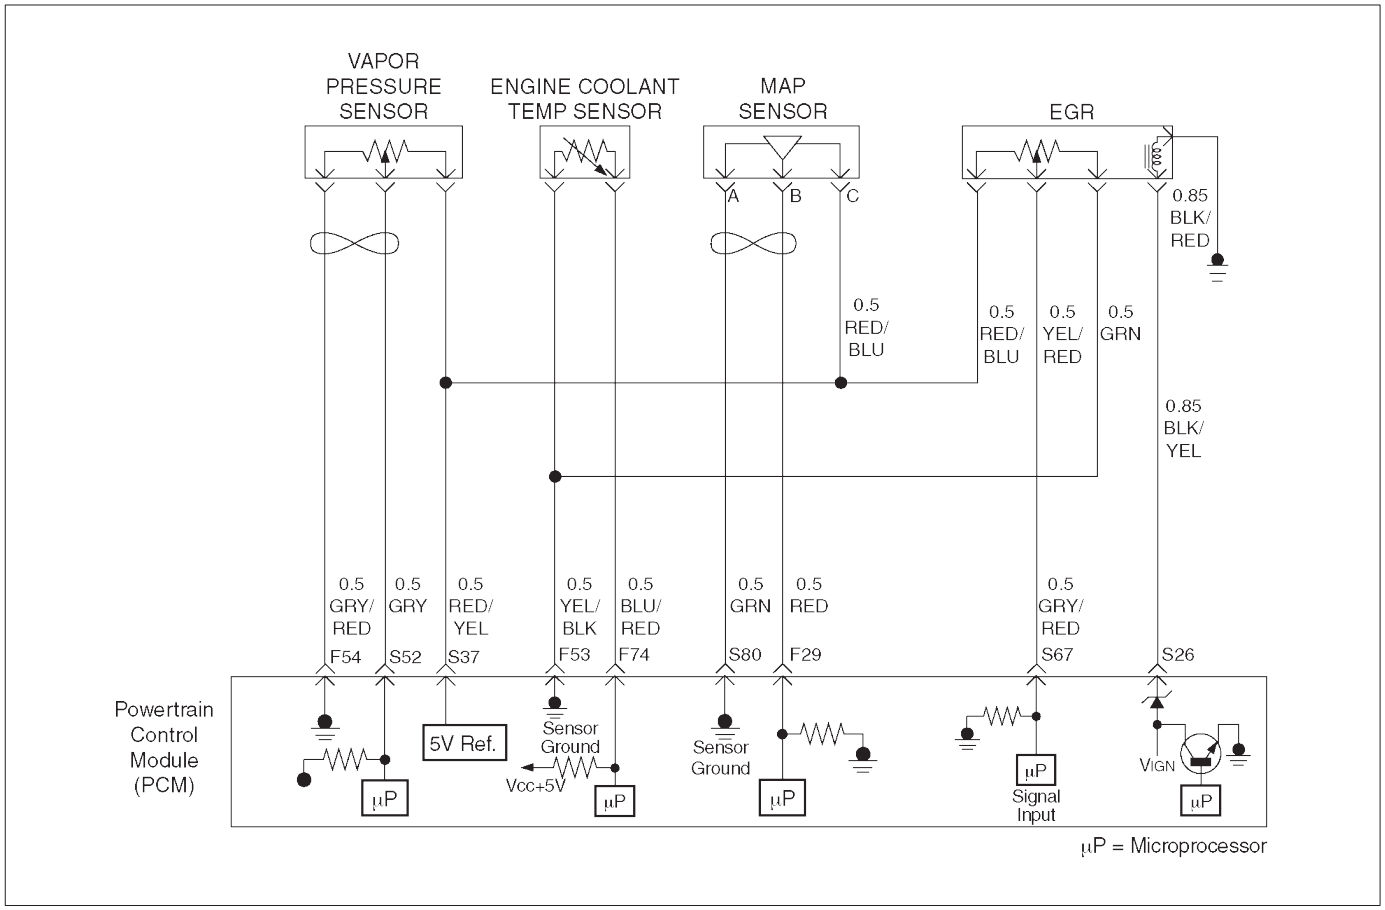Diagnostic Trouble Code (DTC) P1404 EGR Stuck Closed



Circuit Description

The powertrain control module (PCM) monitors the EGR valve pintle position input to ensure that the valve responds properly to commands from the PCM, and to detect a fault if current pintle zero position is different from the learned zero position. If the PCM detects a pintle position signal indicates more than 30 % different between current zero position and the learned zero position for more than 5 seconds, and this condition exists 3 times during trip, then the PCM will set DTC P1404.

Conditions for Setting the DTC

- Ignition voltage is between 11 and 16 volts.
- Intake Air temp is more than 3°C.
- Desired EGR position is more than 3 %.
- Difference of EGR pintle position between current and the learned zero is more than 30 % for more than 5 seconds, and exists three times to the above condition during a trip the PCM will set DTC 1404. Then it trigger the PCM light on.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after consecutive 2nd trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1404 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1404 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Excessive carbon deposit on EGR valve shaft and/or foreign material may cause the EGR valve not to fully seat. The carbon deposit may occur by unusual port operation. Remove foreign material and/or excessive carbon deposit on EGR valve shaft and to allow the EGR valve to be fully seated.
- Poor connection or damaged harness – Inspect the wiring harness for damage.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.


DTC P1404 – EGR Stuck Closed

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition "ON", engine "OFF", review and record Tech 2 Failure Records Data. 2. Operate the vehicle within Failure Records conditions as noted. 3. Using a Tech 2, monitor "DTC inf." for DTC P1404 until the DTC P1404 test runs. Note the result. Does the Tech 2 indicates DTC P1404 failed this ignition?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Disconnect the EGR valve harness connector. 2. Inspect the EGR valve and connectors for damaged pin or terminals. Were there any damaged pins or terminals?	—	Go to *Step 4*	Go to *Step 5*
4	Repair the damaged pin or terminal. Is the action complete?	—	Verify repair	—
5	1. Remove EGR valve from Engine. 2. Inspect EGR valve for any excessive carbon deposit on EGR shaft. 3. Inspect for any foreign material inside of EGR valve. Was excessive carbon deposit on EGR valve shaft and/or foreign material in EGR valve ?	—	Go to *Step 6*	Go to *Step 7*
6	1. Clean up EGR valve shaft and inside of EGR valve. 2. Remove foreign material from EGR valve. 3. Visually inspect damage of pintle and seat to see if it is bent. If damaged, leakage may occur. Was there any severe damage which affects function?	—	Go to *Step 9*	Verify repair Go to *Step 7*
7	1. Install the EGR valve. 2. Ignition "OFF". 3. Install the Tech 2. 4. Run the engine at idle. 5. On the Tech 2, select EGR Control Test. 6. Use the "UP" arrow to increase the EGR from 0% to 40%. Did EGR work properly?	—	Verify repair	Go to *Step 8*
8	1. Reset the learned zero EGR valve position. 2. Repeat step 7. Did EGR work properly?	—	Verify repair	Go to *Step 9*

DTC P1404 – EGR Stuck Closed (Cont'd)

Step	Action	Value(s)	Yes	No
9	Replace the EGR valve. Does DTC P1404 still fail "DTC" test on the Tech 2?	—	Go to *Step 10*	Verify repair
10	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

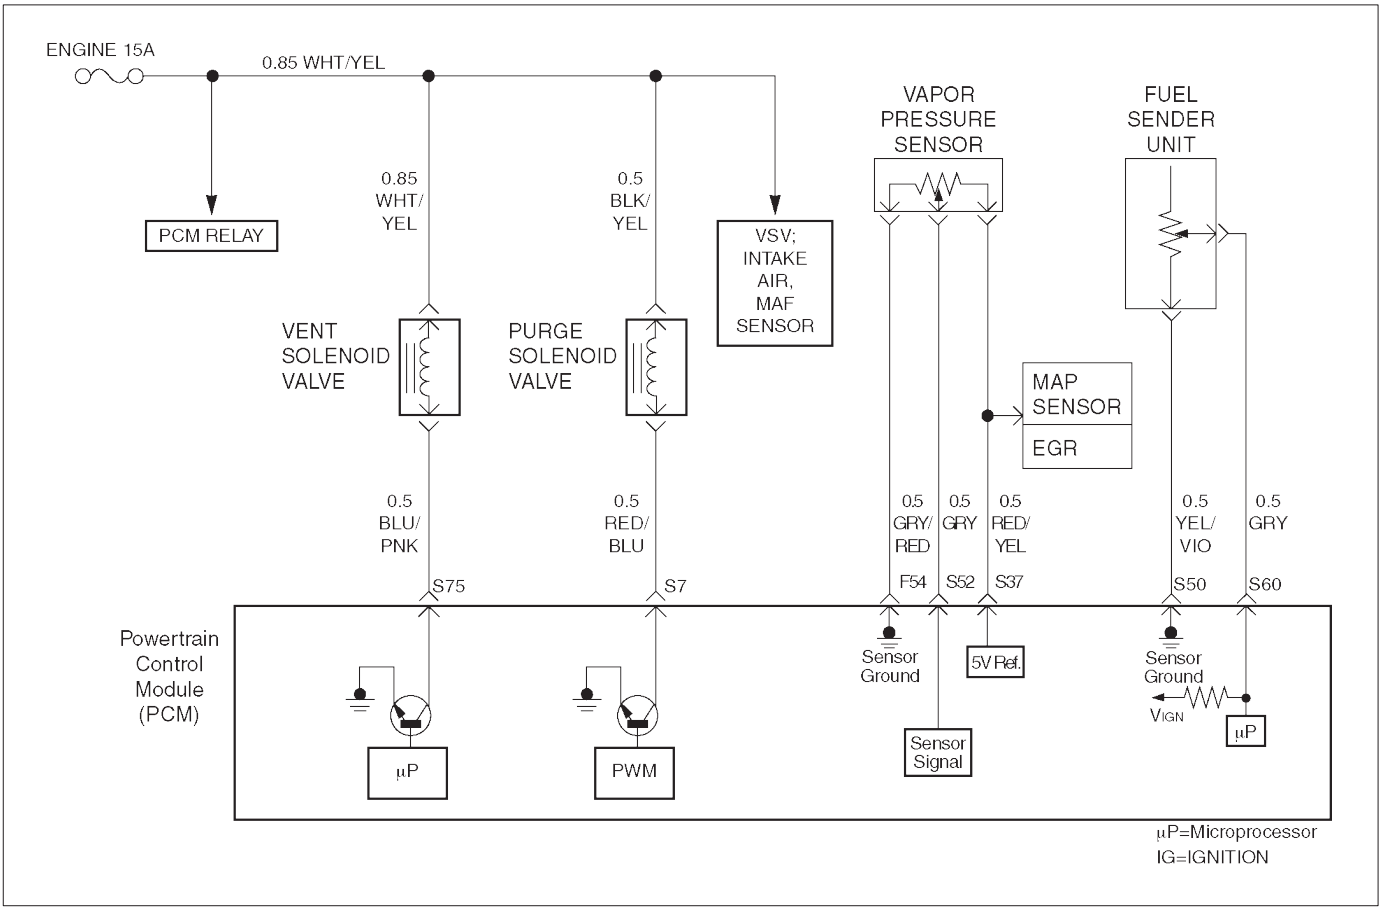Diagnostic Trouble Code (DTC)
P1441 EVAP System Flow During Non-Purge



D06R200084

Circuit Description

Canister purge is controlled by a solenoid valve that allows manifold vacuum to purge the canister. The powertrain control module (PCM) supplies a ground to energize the solenoid valve (purge “ON”). The EVAP purge solenoid control is pulse-width modulated (PWM) or turned “ON” and “OFF” several times a second. The duty cycle (pulse width) is determined by engine operating conditions including load, throttle position, coolant temperature and ambient temperature. The duty cycle is calculated by the PCM and the output is commanded when the appropriate conditions have been met.

Conditions for Setting the DTC

- No active ECT sensor, IAT sensor, MAP sensor, or TP sensor DTCs set.
- BARO reading is above 85 kPa.
- Engine coolant temperature is below 70˚C (158˚F).
- Start-up intake air temperature (IAT) and start-up engine coolant temperature (ECT) are both above 5˚C (41˚F).
- The difference between start-up ECT and start-up IAT is less than 25˚C (45˚F).
- TP sensor indicates a throttle position above 12%.
- Battery voltage is between 11.5 volts and 16 volts.
- Engine speed is between 800 and 6,000 RPM.
- Canister purge duty cycle is below 3%.
- Fuel level is between 15% and 85%.
- All conditions are present for at least 3 seconds.

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) after the second consecutive trip in which the fault is detected.
- The PCM will store conditions which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1441 will clear after 40 consecutive warm–up cycles have occurred without a fault.
- DTC P1441 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wring harness for damage. A change in the display will indicate the location of the fault.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

3. Determines if the PCM is able to control the EVAP purge solenoid valve.
4. Determines if the DTC will set under the conditions present when the DTC was originally stored. If not, the fault is intermittent.
5. Checks for a grounded EVAP purge solenoid driver circuit, a faulty EVAP vacuum switch, or a leaking EVAP purge solenoid valve.


DTC P1441 – EVAP System Flow During Non-Purge

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “OFF”. 2. Remove the fuel filler cap. 3. Ignition “ON”. 4. Observe “Fuel Tank Pressure” on the Tech 2. Is “Fuel Tank Pressure” at the specified value?	1.51V	Go to *Step 3*	Go to *DTC P0452 or P0453*
3	1. Re-install the fuel filler cap. 2. Using the Tech 2, command the EVAP Vent Solenoid Valve “ON” (Closed). 3. Disconnect the canister side rubber hose end that hose is connected between the Purge Solenoid Valve and Canister. **IMPORTANT:** Before continuing with the diagnosis, zero the EVAP pressure/purge cart J41413 (refer to the tool operating instructions). And them monitor the fuel tank inner pressure using the Tech 2. Does the fuel tank pressure remain the specified value?	1.52 - 1.60V	Go to *Step 4*	Go to *Step 6*
4	1. Disconnect the EVAP pressure/purge cart J41413, and then plug the hose end. 2. Disconnect the rubber hose end of engine vacuum source side, (the hose connected between Purge Solenoid Valve and engine). 3. Connect the vacuum hand pump to this rubber hose end. 4. Then apply the -15 in H2O vacuum by the vacuum pump. 5. Monitor the fuel tank inner pressure using the Tech 2. Does the fuel tank inner pressure hold the specified value?	1.47 - 1.51V	Go to *Step 6*	Go to *Step 5*
5	Replace the Purge Solenoid Valve.	—	Verify Repair	—

DTC P1441 – EVAP System Flow During Non-Purge (Cont'd)

Step	Action	Value(s)	Yes	No
6	1. Check leaks, kinks or pinched hoses at the EVAP system rubber hose line, and also check if the rubber hoses are correctly connected or not. 2. Check for a leak from Vent Solenoid Valve and EVAP system rubber hoses, and also check for clogged Filter of air separator which is located near the vent solenoid valve. Was a problem found? Using the Vacuum Hose Routing Diagram, repair or re-connect the rubber hoses correctly.	—	Verify Repair	Go to *Step 7*
7	1. Start engine. 2. Remove the Fuel Filler cap. 3. Using the Tech 2, command the EVAP Vent Solenoid Valve "ON" (closed) and Purge Solenoid Valve "OFF" (0%). 4. Replace the Fuel Filler Cap. 5. Run the engine at 2500RPM constant while monitoring "Fuel Tank Vacuum" on the Tech 2. Does the fuel tank vacuum remain at the specified value while the EVAP Vent Solenoid Valve "ON" (closed) and Purge Solenoid Valve "OFF" (0%)?	30 - 40 %	Verify Repair	Check the Procedure Refer to *Diagnostic Aids*

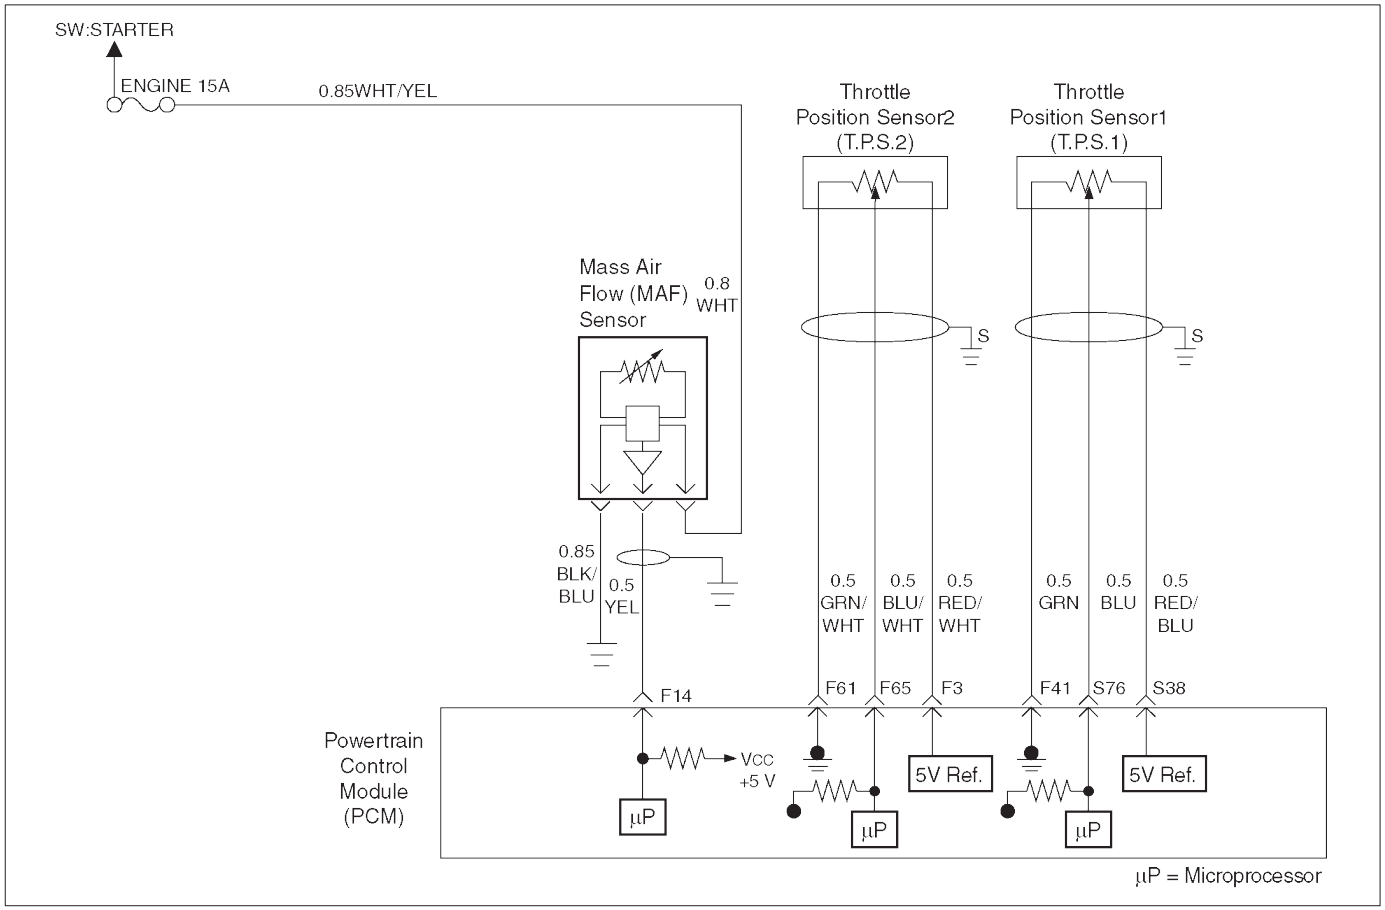Diagnostic Trouble Code (DTC)
P1514 TPS - MAF Correlation Error



Circuit Description

- The throttle position (TP) sensor circuit provides a voltage signal relative to throttle blade angle.

  The throttle blade angle will vary about 8 % at closed throttle to about 92 % at wide open throttle (WOT).
- The mass air flow (MAF) sensor measures the amount of air which passes through it into the engine during a given time. The powertrain Control Module (PCM) uses the mass air flow information to monitor engine operating conditions for fuel delivery calculations.

  A large quantitiy of air entering the engine indicates an accleration or high load situation, while a small quantity or air indicates deceleration or idle.

  The MAF sensor produces a frequency signal which can be monitored using a Tech 2. The frequency will vary within a range of around 4 to 7g/s at idle to around 25 to 40g/s at maximum engine load.

Conditions for setting the DTC

- The engine is running.
- No MAF sensor DTCs are set.
- Throttle actuation mode is not off.
- MAF reading-ETC estimated air flow is less than 40g/s for 250 failres within test 1000 test samples (15.6 m sec).

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1514 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1514 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM - Inspect harness connectors for backed out terminals, improper mating,broken locks, improperly formed or damaged terminals,and poor terminal to wire connection.
- Damaged harness - Inspect the wiring harness for damage. If the harness appears to be OK, observe the Mass Air Flow, TP sensor 1, TP sensor 2 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.
- Plugged intake air duct or filter element
- A wide - open throttle acceleration from a stop should cause the mass air flow displayed on a Tech 2 to increase from about 3 – 7 g/s at idle to 100 g/s or greater at the time of the 1 – 2 shift. If not, check for a restriction.

A change in the display will indicate the location of the fault. If DTC P1514 cannot be duplicated, the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1514 Diagnostic Chart may isolate the cause of the fault.

DTC P1514 - TPS-MAF Correlation Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Ignition “ON,” engine “OFF.” 2. Review and record Tech 2 Failure Records data. 3. Operate the vehicle within Failure Records conditions as noted. 4. Using a Tech 2, monitor “DTC” info for DTC P1514. Does the Tech 2 indicate DTC P1514 failed this ignition?	—	Go to *Step 4*	Check the procedure. Refer to *Diagnostic Aids*
4	1. Start the engine. 2. With the engine idling, monitor “MAF Frequency” display on the Tech 2. Is the “MAF Frequency” below the specified value?	3 ~ 7 g/s	Go to *Step 5*	Go to *Step 8*
5	1. Ignition “OFF.” 2. Disconnect the MAF sensor connector. 3. Ignition “ON,” engine idling. 4. Using a Tech 2, monitor “MAF Frequency.” Does the Tech 2 indicate a “MAF Frequency” at the specified value?	0g/s	Go to *Step 6*	Go to *Step 7*
6	Replace the MAF sensor. Is the action complete?	—	Verify repair	—
7	1. Check the MAF harness for incorrect routing near high voltage components (solenoids, relays, motors). 2. If incorrect routing is found, correct the harness routing. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. With the engine idling, monitor “MAF Frequency.” display on the Tech 2. 2. Quickly snap open throttle to wide open throttle while under a road load and record value. Does the Tech 2 indicate a “MAF Frequency” at thespecified value?	3 ~ 7 g/s	Go to *Step 6*	Go to *Step 9*


DTC P1514 - TPS-MAF Correlation Error (Cont'd)

Step	Action	Value(s)	Yes	No
9	1. Ignition"ON", engine not running. 2. Observe the MAP reading on the Tech 2. Is the MAP reading less than the specified value?	100 kPa	Go to *Step 10*	Go to *Step 13*
10	1. Disconnect the MAP sensor. 2. Connect a test 5 volt reference circuit and the MAP signal at the MAP sensor harness connector. 3. Observe the MAP reading on the Tech 2. Is the MAP reading less than the specified value? (If no, start with diagnosis chart for other sensors in the circuit and see if 5Vreturns.)	5V	Go to *Step 11*	Go to *Step 18*
11	1. Check the MAP signal circuit between the PCM and MAP ground circuit. 2. If the MAP signal circuit is open or shoted, repair it as necessary. Was the MAP signal circuit open or shorted?	—	Verify repair	Go to *Step 12*
12	Replace the MAP sensor. Is the action complete?	—	Verify repair	—
13	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition "OFF". 3. Ignition "ON" but not engine run. 4. Observe the TP angle reading on the Tech 2 while alowly opening the throttle. NOTE: The value check of TPS must be performed in less than 15 seconds. Does the TP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle TPS1= 6~12% TPS2= 88~94% Wide open throttle TPS1= 79~83% TPS2= 19~23%	Go to *Step 18*	Go to *Step 14*
14	1. Connect a DVM between the 5Volt reference circuit and the TP1 and TP2 sensor ground circuit at the TP sensor harness connector. 2. Observe the voltage using a DVM. Is the voltage near the specified value?	5V	Go to *Step 15*	Go to *Step 18*
15	Check the following items; 1. TP1 and TP2 signal circuit for a short to voltage. 2. TP1 and TP2 sensor ground circuit for high resistance between the PCM and the TP sensor. 3. TP1 and TP2 sensor ground circuit for a poor connection. 4. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 16*

DTC P1514 - TPS-MAF Correlation Error (Cont'd)

Step	Action	Value(s)	Yes	No
16	Check the following items; 1. TP1and TP2 signal circuit or 5 volt reference circuit for a poor connection. 2. TP1 and TP2 signal circuit or 5 volt reference circuit for high resistance between the PCM and the TP1and TP2 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 17*
17	Replace the TP sensor. Was a problem corrected?	—	Verify repair	Go to *Step 18*
18	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin.Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

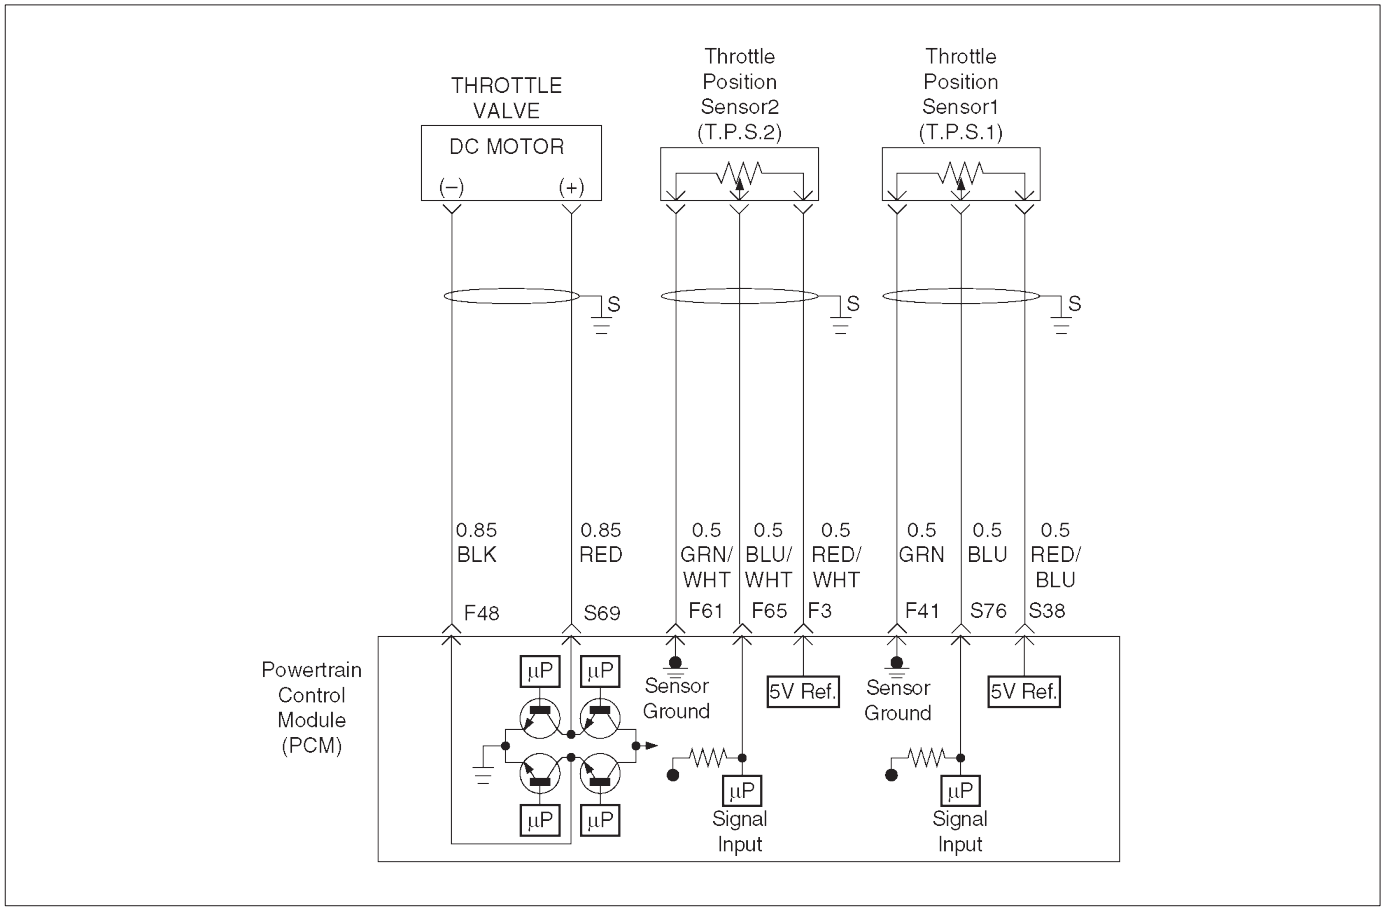Diagnostic Trouble Code (DTC)
P1515 Command - Actual TPS Correlation Error



D06RY00088

Circuit Description

- The throttle position (TP) sensor circuit provides a voltage signal relative to throttle position (blade angle).

  The throttle blade angle will vary about 8 % at closed throttle to about 92 % at wide open throttle(WOT).
- The DC motor circuit provides a voltage signal relative to command throttle position (blade angle).
- This DTC ditects the difference between actual throttle position and command throttle position.

Conditions for setting the DTC

- The ignition is “ON”.
- Throttle actuation mode is normal.
- Command Throttle position - Actual Throttle position is more than + 5 % for 100 counts within test 1000 test samples (15.6 m sec) else Actual Throttle position is less than + 40 % and Command Throttle position - Actual Throttle position is more than - 5 % or Command Throttle position - Actual Throttle position is more than - 20 % for 150 failres within test 1000 test samples (15.6 m sec).

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1515 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1515 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, mproper mating, locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the TP sensor 1, TP sensor 2 display on the Tech2 while

moving connectors and wiring harnesses related to the sensor.

A change in the display will indicate the location of the fault. If DTC P1515 cannot be duplicated, the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1515 Diagnostic Chart may isolate the cause of the fault.


DTC P1515 - Command - Actual TPS Correlation Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Ignition “On,” engine “Off.” 2. Operate the throttle lever by hand (Don’t operate the acceleration pedal). Was the DTC P1515 or P1516 stored?	—	Go to *Step 4*	Go to *Step 6*
4	1. Check the DC mortor harness between the PCM and DC mortor curcuit at the DC mortor harness connector. 2. If a problem found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Replace the throttle assembly (DC mortor). Is the action complete?	—	Verify repair	—
6	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition “ON” but not engine run. 4. Observe the TP angle reading on the Tech 2 while alowly opening the throttle. NOTE: The value check of TPS must be performed in less than 15 seconds. Does the TP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle TPS1= 6~12% TPS2= 88~94% Wide open throttle TPS1= 79~83% TPS2= 19~23%	Go to *Step 10*	Go to *Step 7*
7	Check the following items; 1. TP1 and TP2 signal circuit for a short to voltage. 2. TP1 and TP2 sensor ground circuit for high resistance between the PCM and the TP sensor. 3. TP1and TP2 sensor ground circuit for a poor connection. 4. If a problem is found,repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*

DTC P1515 - Command - Actual TPS Correlation Error (Cont'd)

Step	Action	Value(s)	Yes	No
8	Check the following items; 1. TP1 and TP2 signal circuit or 5 volt reference circuit for a poor connection. 2. TP1 and TP2 signal circuit or 5 volt reference circuit for high resistance between the PCM and the TP1 and TP2 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
9	Replace the TP sensor. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

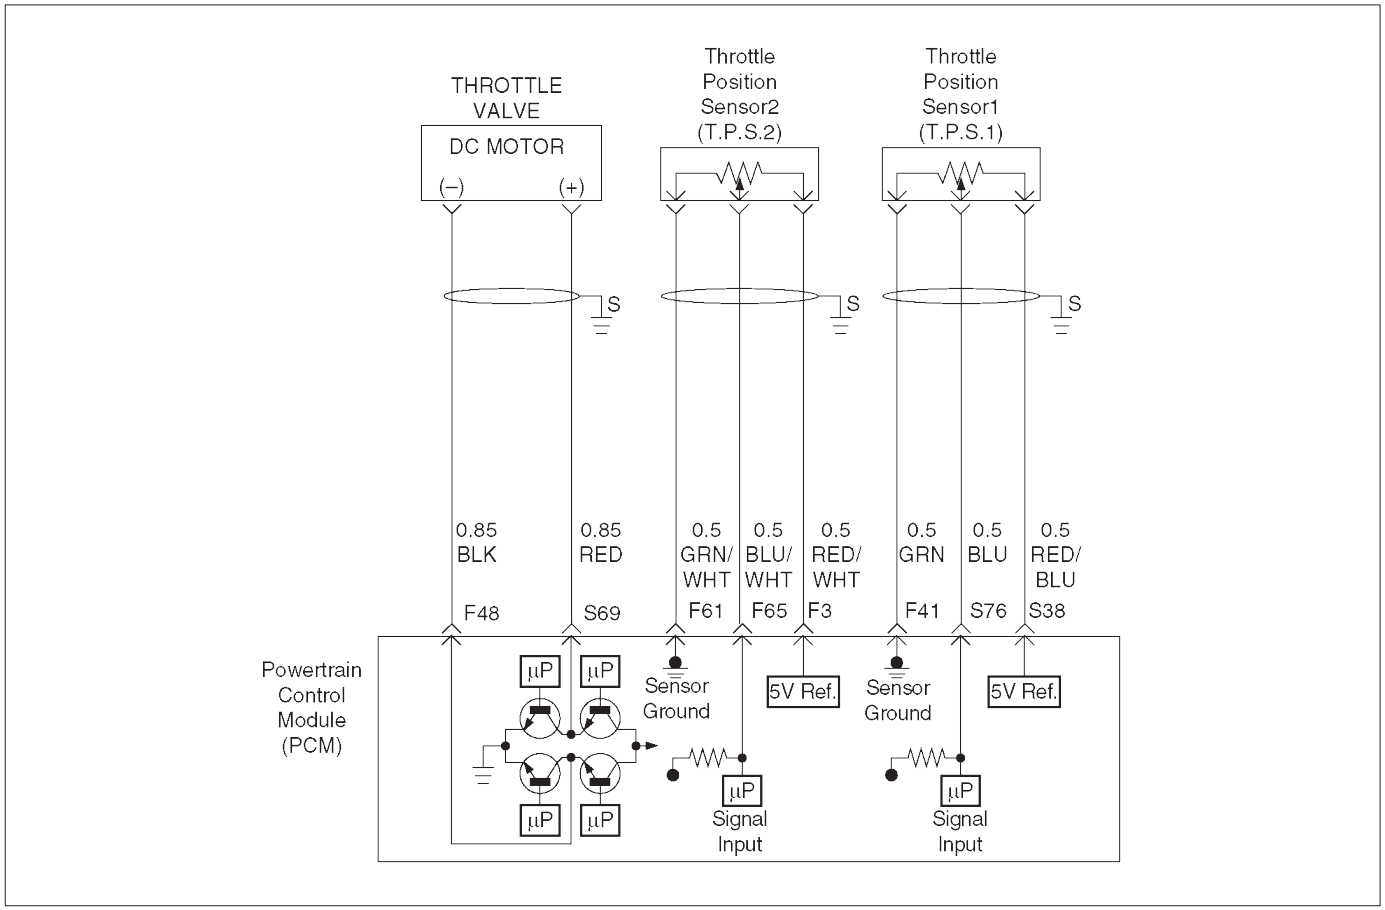Diagnostic Trouble Code (DTC)
P1516 Command - Actual TPS Correlation Error



Circuit Description

- The throttle position (TP) sensor circuit provides a voltage signal relative to throttle position (blade angle). The throttle blade angle will vary about 8% at closed throttle to about 92 % at wide open throttle (WOT).
- The DC motor circuit provides a voltage signal relative to command throttle position (blade angle).
- This DTC detects the dufference between actual throttle position and command throttle position in steady state.

Conditions for setting the DTC

- The ignition is “ON”.
- Throttle Actuation mode is normal.
- Command Throttle position-Actual Throttle positionis less than 8 % when desird TPS is sutudy wihtin 0.5 %for 30 second within test samples (30 second)

Action Taken When the DTC Sets

- The PCM will illuminate the malfunction indicator lamp (MIL) the first time the fault is detected.
- The PCM calculates an air flow value based on idle air control valve position, throttle position, RPM and barometric pressure.
- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1516 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1516 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Damaged harness - Inspect the wiring harness for damage. If the harness appears to be OK, observe the TP sensor 1, TP sensor 2 display on the Tech2 while moving connectors and wiring harnesses related to the sensor.

A change in the display will indicate the location of the fault. If DTC P1516 cannot be duplicated, the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1516 Diagnostic Chart may isolate the cause of the fault.


DTC P1516 - Command - Actual TPS Correlation Error

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Ignition “On,” engine “Off.” 2. Operate the throttle lever by hand (Don’t operate the acceleration pedal). Was the DTC P1515 or P1516 stored?	—	Go to *Step 4*	Go to *Step 6*
4	1. Check the DC mortor harness between the PCM and DC mortor curcuit at the DC mortor harness connector. 2. If a problem found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*
5	Replace the throttle assembly (DC mortor). Is the action complete?	—	Verify repair	—
6	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition “ON” but not engine run. 4. Observe the TP angle reading on the Tech 2 while alowly opening the throttle. NOTE: The value check of TPS must be performed in less than 15 seconds. Does the TP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle TPS1= 6~12% TPS2= 88~94% Wide open throttle TPS1= 79~83% TPS2= 19~23%	Go to *Step 10*	Go to *Step 7*
7	Check the following items; 1. TP1 and TP2 signal circuit for a short to voltage. 2. TP1 and TP2 sensor ground circuit for high resistance between the PCM and the TP sensor. 3. TP1and TP2 sensor ground circuit for a poor connection. 4. If a problem is found,repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*

DTC P1516 - Command - Actual TPS Correlation Error (Cont'd)

Step	Action	Value(s)	Yes	No
8	Check the following items; 1. TP1 and TP2 signal circuit or 5 volt reference circuit for a poor connection. 2. TP1 and TP2 signal circuit or 5 volt reference circuit for high resistance between the PCM and the TP1 and TP2 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
9	Replace the TP sensor. Was a problem found?	—	Verify repair	Go to *Step 10*
10	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

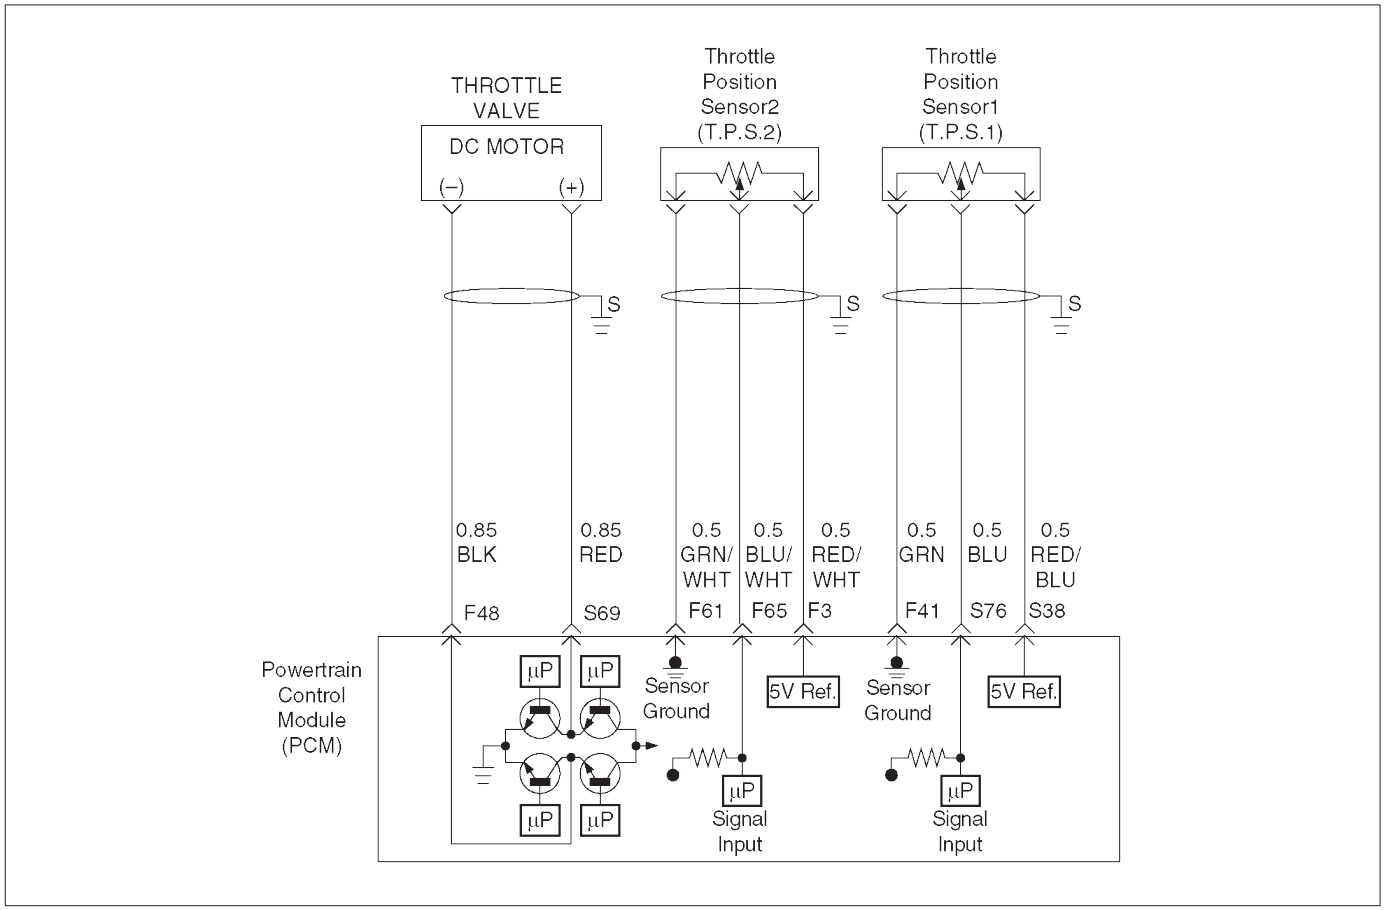Diagnostic Trouble Code (DTC)
P1523 Actuator Control Return Performance



D06RY00088

Circuit Description

- The throttle position (TP) sensor circuit provides a voltage signal relative to throttle position (blade angle).

  The throttle blade angle will vary about 8 % at closed throttle to about 92 % at wide open throttle(WOT).
- The DC motor circuit provides a voltage signal relative to command throttle position (blade angle).
- This DTC ditects if the throttle return to the default position at key on, steady state.

Conditions for setting the DTC

- The ignition is “ON”.
- Normalized TPS is less than 7 % or Normalized TPS is more than 25 %.

Action Taken When the DTC Sets

- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1523 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1523 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids

An intermittent may be caused by the following:

- Poor connectons.
- Mis routed harness.
- Rubbed through wire insulation.
- Broken wire inside the insulation.

Check for the following conditions:

- Poor connection at PCM-Inspect harness connectors for backed out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal to wire connection.
- Throttle function: Check for the throttle function. When ignition switch “ON” that throttle lever is smooth operated by step on the acceleration pedal.
- Damaged harness-Inspect the wiring harness for damage. If the harness appears to be OK, observe the TP sensor 1, TP sensor 2 display on the Tech 2 while moving connectors and wiring harnesses related to the sensor.

  A change in the display will indicate the location of the fault. If DTC P1523 cannot be duplicated, the information included in the Faillure Records data can be useful in determined vehicle mileage since the DTC was last set.

If it is determined that the DTC occurs intermittently, performing the DTC P1523 Diagnostic Chart may isolate the cause of the fault.


DTC P1523 - Actuator Control Return Performance

Step	Action	Value(s)	Yes	No
1	Was the “On-Board (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the “Electric Throttle Control (ETC) System Check” performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Warming up the engine until the ECT rise at 80˚C 2. Ignition “OFF”. 3. Ignition “ON” but not engine run. 4. Observe the TP angle reading on the Tech 2 while alowly opening the throttle. NOTE: The value check of TPS must be performed in less than 15 seconds. Does the TP angle increase steadily and evenly from the closed throttle value to the wide open throttle value?	Closed throttle TPS1= 6~12% TPS2= 88~94% Wide open throttle TPS1= 79~83% TPS2= 19~23%	Go to *Step 7*	Go to *Step 4*
4	1. Ignition “OFF.” 2. Disconnect the DC motor. Is the DC motor reading near the specified value?	0.3 ~ 100 Ω	Go to *Step 5*	Go to *Step 6*
5	1. Check the DC motor harness between the PCM and DC Motor circuit at the DC motor harness connector. 2. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
6	Replace the throttle assembly (DC motor). Is the action complete?	—	Verify repair	Go to *Step 5*
7	Was the DTC P1523 stored?	—	Go to *Step 12*	Check the procedure. Refer to *Diagnostic Aids*
8	1. Connect a DVM between the 5Volt reference circuit and the TP1 and TP2 sensor ground circuit at the TP sensor harness connector. 2. Observe the voltage using a DVM. Is the voltage near the specified value?	5V	Go to *Step 9*	Go to *Step 10*
9	Check the following items; 1. TP1 and TP2 signal circuit for a short to voltage. 2. TP1 and TP2 sensor ground circuit for high resistance between the PCM and the TP sensor. 3. TP1and TP2 sensor ground circuit for a poor connection. 4. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*

DTC P1523 - Actuator Control Return Performance (Cont'd)

Step	Action	Value(s)	Yes	No
10	Check the following items; 1. TP1and TP2 signal circuit or 5 volt reference circuit for a poor connection. 2. TP1 and TP2 signal circuit or 5 volt reference circuit for high resistance between the PCM and the TP1and TP2 sensor. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
11	Replace the TP sensor. Was a problem found?	—	Verify repair	—
12	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *ON-Vehicle Service in Power Control Module and Sensors for procedures.* And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replasement PCM. Is the action complete?	—	Verify repair	—

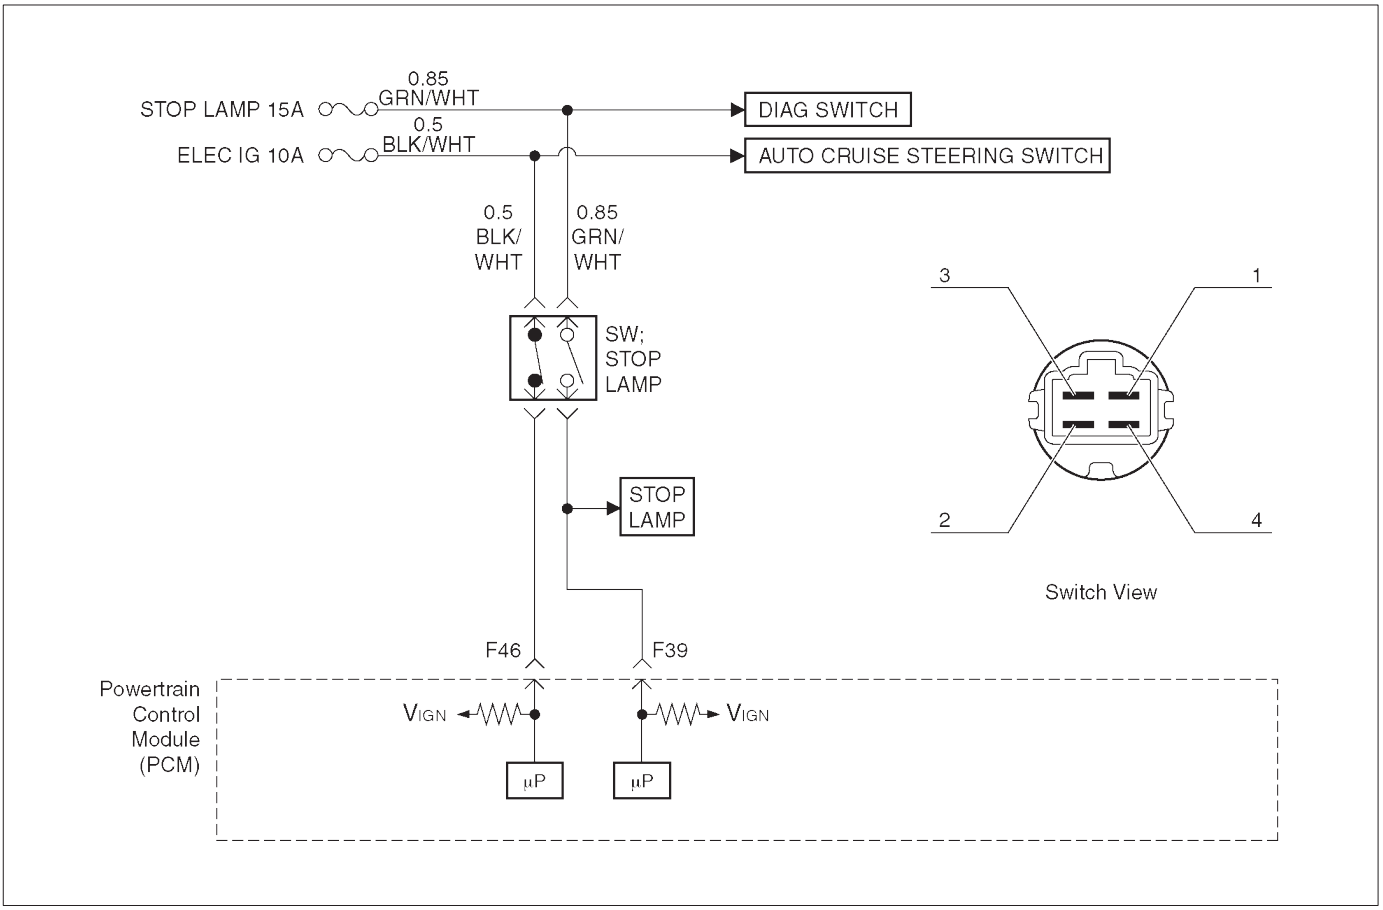Diagnostic Trouble Code (DTC) P1574 Brake Switch No Operation



D06R200076

Circuit Description

The brake switch has 3 functions.

- Brake pedal operation check
- Brake light operation (On and off)
- Cruise control (Cancel)

The PCM receives vehicle speed and switch position signals from the brake switch. The PCM sets brake operating conditions in response to these signals.
If the brake switch is on, the brake system is in normal operation (cruise control cancelled).

Conditions for Setting the DTC

- Two break switch signals do not acknowledge after signal changed.
- Switch does not change during accelerating vehicle or decelerating.
- VSS is not fault.
- Engine is running.

Action Taken When the DTC Sets

- The PCM will not turn the malfunction indicator lamp (MIL) “ON”.
- The PCM will store conditions which were present when the DTC was set as Failure Records only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the DTC

- DTC P1574 can be cleared by using the scan tool “Clear Info” function or by disconnecting the PCM battery feed.


Diagnostic Aids

- Damaged harness–Inspect the wiring harness for damage. If the harness appears to be OK, observe the fuel level display on the scan tool while moving connectors and wiring harnesses related to the sensor. A change in the display will indicate the location of the fault.

DTC P1574 Brake Switch No Operation

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Ignition “Off”. Engine “Off”. 2. Check following fuses. • BACK 15A • STOP LAMP 15A 3. If a problem found repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 3*
3	1. Make adjustment to the brake switch. (Refer to *“Brake switch” in “10A CRUISE CONTROL SYSTEM”*.) 2. If a problem found repair as necessary. Was the problem found?	—	Verify repair	Go to *Step 4*
4	1. Push the shaft on brake switch. 2. Check shaft operation for smooth movement. 3. If a problem found repair as necessary. Was the problem found?	—	Verify repair	Go to *Step 5*
5	1. Disconnect the connector at brake switch. 2. Check following terminal pin by ohmmeter. (Leave the shaft position at brake switch. Don’t push it.) • Between pin 1 and pin 2 • Between pin 3 and pin 4 Was it specified value?	Between pin1 and pin2 is 0Ω, Between pin3 and pin4 is ∞Ω	Go to *Step 6*	Go to *Step 9*
6	1. Disconnect the connector at brake switch. 2. Check following terminal pin at ohmmeter. (Don’t press the button of the brake switch.) • Between pin 1 and pin 2 • Between pin 3 and pin 4 Was it specified value?	Between pin1 and pin2 is ∞Ω, Between pin3 and pin4 is 0Ω	Go to *Step 7*	Go to *Step 9*
7	1. Probe related circuits for open or short to ground. 2. If a problem was found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Was the action completed?	—	Verify repair	—
9	1. Replace the brake switch. Was the action completed?	—	Verify repair	—

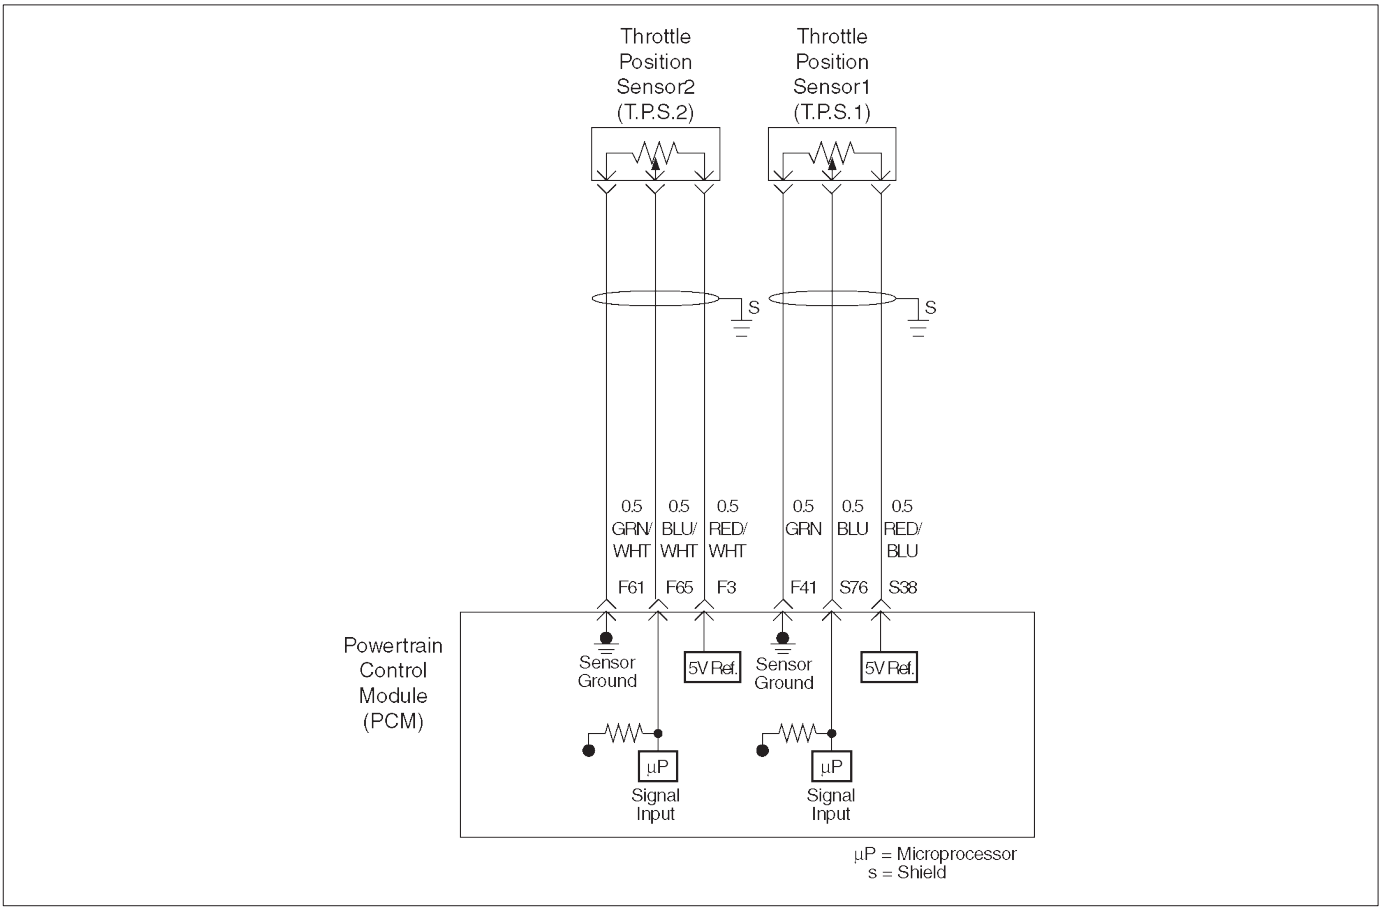Diagnostic Trouble Code (DTC)
P1635 Reference Voltage # 1 Circuit Fault



D06RY00077

Circuit Description

The TP sensor # 1 shares a 5 Volt reference with the PCM.
If the PCM detects the 5 Volt reference for the TP sensor # 1 is failure, DTCP1635 will be set.

Conditions for setting the DTC

- The ignition is “ON”.
- The 5 Volt reference voltage for the TP sensor # 1 is less than 4 volts.
- The 5 Volt reference voltage for the TP sensor # 1 is more than 5 volts.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL) .
- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1635 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1635 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed. Tech2 “ Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Trouble Code (DTC)
P1635 Reference Voltage # 1 Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board(OBD)System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Connect a DVM between the 5volt reference curcuit and the TP1 and TP2 sensor ground curcuit. 2. Check the voltage using a DVM. Is the voltage near the specified value?	5V	Varify repair	Go to *Step 3*
3	1. Check the TPS1and TPS2 5 volt reference curcuit. 2. If the curcuit is open or shorted, repair it as necessary. Was the curcuit open or short?	—	Varify repair	Go to *Step 4*
4	1. Check the TP1 and TP2 sensor ground curcuit. 2. If the curcuit is open or shorted, repair it as necessary. Was the curcuit open or short?	—	Varify repair	Go to *Step 5*
5	1. Observe the battery voltage and circuit. 2. If a problem found, repair it as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to ON–Vehicle Service in Power Control Module and Sensors for procedures. And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the adtion complete?	—	Verify repair	—

Diagnostic Trouble Code (DTC) P1636 PCM RAM Stack

Circuit Description

The powertrain control module (PCM) monitors unexpected PCM reset. This will not turn on MIL light on, only record code DTC P1636.

Conditions for Setting the DTC

- Clock or COP (Computer Operating Properly) reset.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set as Failure Records only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1636 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1636 can be cleared by using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Aids


Check for the following conditions:

- P1636 stored alone does not need diagnosis. Clear DTC code.

DTC P1636 – PCM RAM Stack

Step	Action	Value(s)	Yes	No
1	Was the “On-Board Diagnostic (OBD) System Check” performed?	—	Go to Step 2	Go to *OBD System Check*
2	1. Ignition is “ON”. 2. Install the Tech 2. 3. Start the engine and let it Idle. 4. On the Tech 2, select “DTC info”. Does the Tech 2 indicate DTC P1636 failed?	—	Go to *Step 3*	Check the Procedure Refer to *Diagnostic Aids*
3	1. Ignition is “ON”. 2. Clear DTC P1636 by using the Tech 2 “Clear Info”. 3. Start the engine and let it Idle. 4. On the Tech 2, select “DTC info”. Does the Tech 2 indicate DTC P1636 failed?	—	Go to *Step 4*	Check the Procedure Refer to *Diagnostic Aids*
4	1. Check for aftermarket electronics, such as transceiver, stereos, and anti theft devices. They may radiate EMI into the control system if they are improperly installed. (This may cause a false sensor reading and turn on the MIL.) 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	—

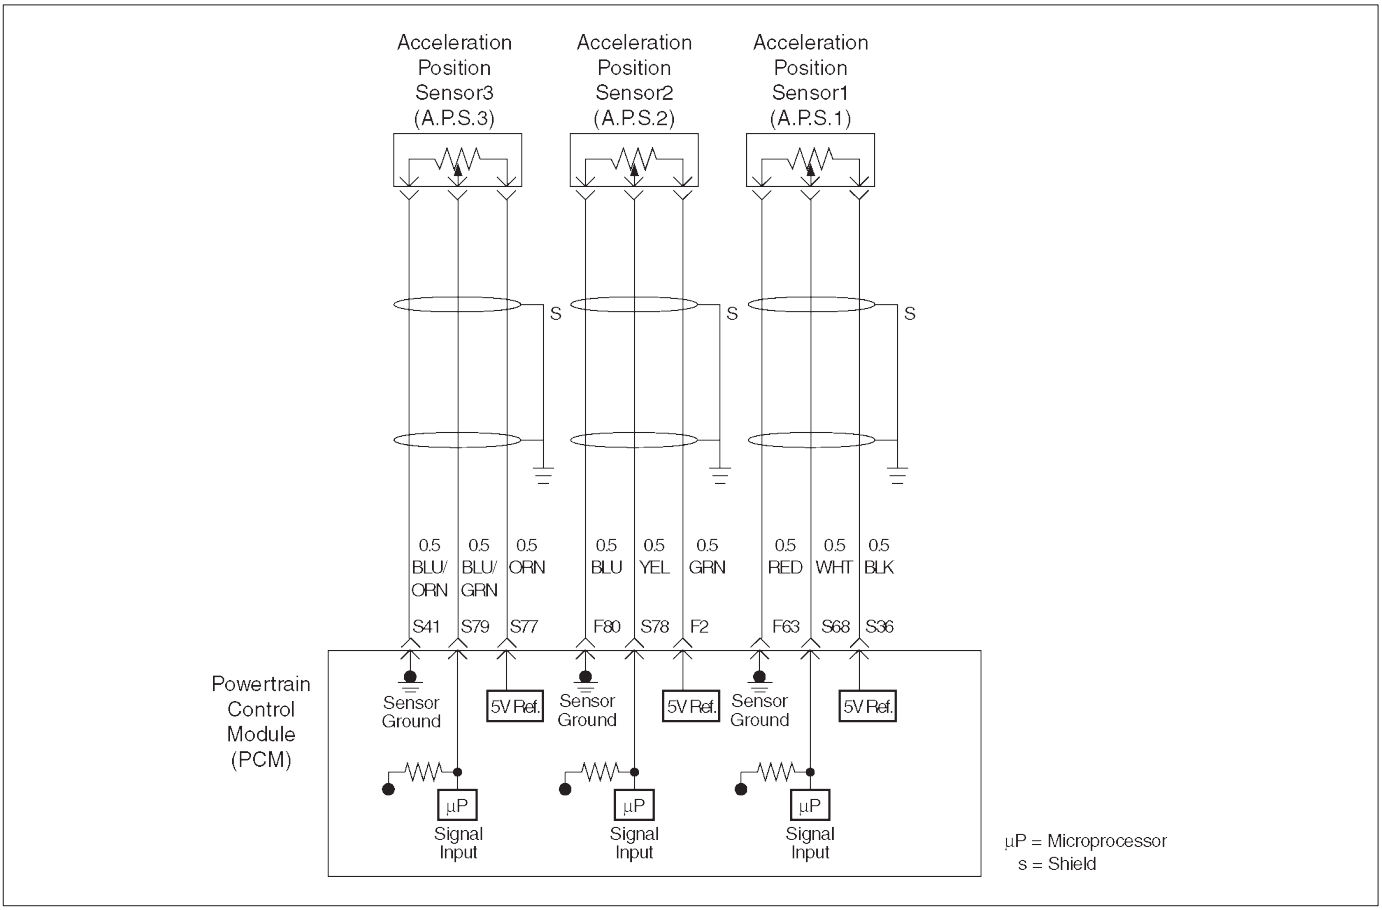Diagnostic Trouble Code (DTC)
P1639 Reference Voltage # 2 Circuit Fault



D06RY00075

Circuit Description

The TP sensor # 1 shares a 5 Volt reference with the PCM.
If the PCM detects the 5 Volt reference for the AP sensor # 1 is failure, DTCP1635 will be set.

Conditions for setting the DTC

- The ignition is “ON”.
- The 5 Volt reference voltage for the AP sensor # 1 is less than 4 volts.
- The 5 Volt reference voltage for the AP sensor # 1 is more than 5 volts.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL) .
- The PCM will store condition which were present when the DTC was set as Freeze Frame and in the Failure Records data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL “OFF” on the third consecutive trip cycle during which the diagnostic has been run and the fault condtion is no longer present.
- A history DTC P1639 will clear after 40 cosecutive trip cycle during which the warm up cycles have occurred without a fault.
- DTC P1639 can be cleared using the Tech 2 “Clear Info” function or by disconnecting the PCM battery feed. Tech2 “ Clear Info” function or by disconnecting the PCM battery feed.

Diagnostic Trouble Code (DTC)
P1639 Reference Voltage # 2 Circuit Fault

Step	Action	Value(s)	Yes	No
1	Was the “On-Board(OBD)System Check” performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Connect a DVM between the 5volt reference curcuit and the AP1, AP2 and AP3 sensor ground curcuit. 2. Check the voltage using a DVM. Is the voltage near the specified value?	5V	Varify repair	Go to *Step 3*
3	1. Check the APS1, APS2 and APS3 5 volt reference curcuit. 2. If the curcuit is open or shorted, repair it as necessary. Was the curcuit open or short?	—	Varify repair	Go to *Step 4*
4	1. Check the AP1, AP2 and AP3 sensor ground curcuit. 2. If the curcuit is open or shorted, repair it as necessary. Was the curcuit open or short?	—	Varify repair	Go to *Step 5*
5	1. Observe the battery voltage and circuit. 2. If a problem found, repair it as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to ON–Vehicle Service in Power Control Module and Sensors for procedures. And also refer to latest Service Bulletin. Check to see if the latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the adtion complete?	—	Verify repair	—

Diagnostic Trouble Code (DTC) P1640 Driver-1-Output Circuit Fault (ODM)

Circuit Description

Output driver modules (ODMs) are used by the powertrain control module (PCM) to turn "ON" many of the current-driven devices that are needed to control various engine and transmission functions. Each ODM is capable of controlling up to 7 separate outputs by applying ground to the device which the PCM is commanding "ON".

Unlike the Quad Driver Modules (QDMs) used in prior model years, ODMs have the capability of diagnosing each output circuit individually. DTC P1640 set indicates an improper voltage level has been detected on an ODM output.

Since A/C is an option, No A/C will cause the air conditioning clutch relay output to always fail. If a fault is seen on the air conditioning clutch relay output, it will not be logged as a fault until the A/C request input interrupts a high voltage, indicating that A/C has been installed.

Conditions for Setting the DTC

- Ignition "ON".
- Engine running.
- Ignition voltage is above 13.2 volts for 4 seconds.
- Output voltage does not equal ignition voltage when output is "OFF" or output voltage is not less than 1 volt when output is "ON".
- Above conditions occur for at least 1 second.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set as Failure Records only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- A history DTC P1640 will clear after 40 consecutive warm-up cycles occur without a fault.
- DTC P1640 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage, If the harness appears to be OK, disconnect the PCM, turn the ignition "ON" and observe a voltmeter connected to the suspect driver circuit at the PCM harness connector while moving connectors and wiring harnesses related to the MIL. A change in voltage will indicate the location of the fault.
- Poor connection at component – Examine for damaged connectors, unplugged connector, or damaged terminals at the following locations: Instrument cluster harness, canister purge solenoid, A/C clutch relay. An open ignition feed circuit at any of these components will cause DTC P1640 to be set.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

DTC P1640 – Driver-1-Output Circuit Fault (ODM)

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Check the fuse for the driver circuit that was shown as faulty. Was the fuse blown?	—	Go to *Step 3*	Go to *Step 4*
3	1. Check for a short to ground between the fuse and the affected component. 2. Replace the fuse after making any necessary repairs. Is the action complete?	—	Verify repair	—
4	Disconnect the PCM connector for the affected driver circuit. Is there any damage to the PCM pin or connector?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the damaged pin or terminal. Is the action complete?	—	Verify repair	—
6	Were either of the lamp circuits for "Check Engine" or "Check Trans" indicated as faulty by the Tech 2?	—	Go to *Step 7*	Go to *Step 13*

DTC P1640 – Driver-1-Output Circuit Fault (ODM) (Cont'd)

Step	Action	Value(s)	Yes	No
7	1. Leave the PCM connector for the lamp driver circuit disconnected. 2. Ignition "ON". 3. Using a DVM, check the voltage at the PCM connector for the affected lamp driver circuit. Was the voltage equal to the specified value?	B+	Go to *Step 15*	Go to *Step 8*
8	1. Ignition "ON". 2. Check for battery voltage at the fuse for the affected lamp circuit. Was battery voltage available at the fuse?	—	Go to *Step 10*	Go to *Step 9*
9	Repair the open circuit between the ignition switch and the fuse. Is the action complete?	—	Verify repair	—
10	1. Ignition "OFF". 2. Disconnect the PCM connector for the affected driver terminal. 3. Connect an ohmmeter between a good ground and the PCM connector for the affected driver. Did the ohmmeter indicate continuity?	—	Go to *Step 11*	Go to *Step 12*
11	Repair the short to ground between the affected component and its PCM driver terminal. Is the action complete?	—	Verify repair	—
12	Repair the open circuit between the fuse and the PCM driver terminal for the affected circuit. Is the action complete?	—	Verify repair	—
13	1. Connect the PCM. 2. Start the engine and let it idle. 3. Backprobe the affected terminal at the PCM with a DVM. Was the voltage equal to the specified value?	+B	Go to *Step 15*	Go to *Step 14*
14	1. Run the engine at idle. 2. Check for battery voltage at the fuse for the affected circuit. Was battery voltage available at the fuse?	—	Go to *Step 10*	Go to *Step 9*
15	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

Diagnostic Trouble Code (DTC)
P1650 Quad Driver Module "A" Fault

Circuit Description

The Quad Driver Module (QDMs) are used by the powertrain control module (PCM) to turn "ON" current–driven devices that are needed to control two engine functions. The PCM monitors open or short circuit of either of Canister Control Purge (CCP) Vent solenoid or Variable Intake Manifold (VIM).

Conditions for Setting the DTC

- Ignition "ON".
- Engine running.
- Ignition voltage.
- Output voltage does not equal voltage and is not less than 1 volt when out put is "ON".
- Above conditions occur for at least 0.5 second.

Action Taken When the DTC Sets

- The PCM will not illuminate the malfunction indicator lamp (MIL).
- The PCM will store conditions which were present when the DTC was set as Failure Records only. This information will not be stored as Freeze Frame data.

Conditions for Clearing the MIL/DTC

- The PCM will turn the MIL "OFF" on the third consecutive trip cycle during which the diagnostic has been run and the fault condition is no longer present.
- A history DTC P1650 will clear after 40 consecutive warm-up cycles have occurred without a fault.
- DTC P1650 can be cleared by using the Tech 2 "Clear Info" function or by disconnecting the PCM battery feed.

Diagnostic Aids

Check for the following conditions:

- Poor connection at PCM – Inspect harness connectors for backed-out terminals, improper mating, broken locks, improperly formed or damaged terminals, and poor terminal-to-wire connection.
- Damaged harness – Inspect the wiring harness for damage, If the harness appears to be OK, disconnect the PCM, turn the ignition "ON" and observe a voltmeter connected to the suspect driver circuit at the PCM harness connector while moving connectors and wiring harnesses relates to the MIL. A change in voltage will indicate the location of the fault.
- Poor connection at component – Examine for damaged connectors, unplugged connector, or damaged terminals at the following locations: canister purge solenoid, fuel level sensor. An open ignition feed circuit at any of these components will cause DTC P1650 to be set.

Reviewing the Failure Records vehicle mileage since the diagnostic test last failed may help determine how often the condition that caused the DTC to be set occurs. This may assist in diagnosing the condition.

The following PCM pins are controlled by Quad driver modules (QDMs):

- S74 – VIM
- S48 – Canister control purge

Test Description

Number(s) below refer to the step number(s) on the Diagnostic Chart.

4. The Tech 2 Driver Module Status indicates the PCM pin that is affected.

9. The Tech 2 may indicate "short circuit" even when the problem is an open circuit. The cause of an open circuit may be in the component itself.

11. A short to ground on the ignition side of the component will blow the fuse. Since the fuse was checked in Step 2, a short to ground would be between the affected component and the PCM.

DTC P1650 – Quad Driver Module (QDM) Fault

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Check the fuse for the driver circuit that was shown as faulty. Was the fuse blown?	—	Go to *Step 3*	Go to *Step 4*
3	1. Check for a short to ground between the fuse and the affected component. 2. Replace the fuse after making any necessary repairs. Is the action complete?	—	Verify repair	—
4	Disconnect the PCM connector for the affected driver circuit. Is there any damage to the PCM pin or connector?	—	Go to *Step 5*	Go to *Step 6*
5	Repair the damaged pin or terminal. Is the action complete?	—	Verify repair	—
6	Were either of the lamp circuits for "Check Engine" or "Check Trans". indicated as faulty by the Tech 2?	—	Go to *Step 7*	Go to *Step 13*
7	1. Leave the PCM connector for the lamp driver circuit disconnected. 2. Ignition "ON". 3. Using a DVM, check the voltage at the PCM connector for the affected lamp driver circuit. Was the voltage equal to the specified value?	B+	Go to *Step 15*	Go to *Step 8*
8	1. Ignition "ON". 2. Check for battery voltage at the fuse for the affected lamp circuit. Was battery voltage available at the fuse?	—	Go to *Step 10*	Go to *Step 9*
9	Repair the open circuit between the ignition switch and the fuse. Is the action complete?	—	Verify repair	—
10	1. Ignition "OFF". 2. Disconnect the PCM connector for the affected driver terminal. 3. Connect an ohmmeter between a good ground and the PCM connector for the affected driver. Did the ohmmeter indicate continuity?	—	Go to *Step 11*	Go to *Step 12*
11	Repair the short to ground between the affected component and its PCM driver terminal. Is the action complete?	—	Verify repair	—
12	Repair the open circuit between the fuse and the PCM driver terminal for the affected circuit. Is the action complete?	—	Verify repair	—

DTC P1650 – Quad Driver Module (QDM) Fault (Cont'd)

Step	Action	Value(s)	Yes	No
13	1. Connect the PCM. 2. Start the engine and let it idle. 3. Backprobe the affected terminal at the PCM with a DVM. Was the voltage equal to the specified value?	+B	Go to *Step 15*	Go to *Step 14*
14	1. Run the engine at idle. 2. Check for battery voltage at the fuse for the affected circuit. Was battery voltage available at the fuse?	—	Go to *Step 10*	Go to *Step 9*
15	Replace the PCM. **IMPORTANT:** The replacement PCM must be programmed. Refer to *On-Vehicle Service* in *Powertrain Control Module and Sensors* for procedures. And also refer to latest Service Bulletin. Check to see if the Latest software is released or not. And then Down Load the LATEST PROGRAMMED SOFTWARE to the replacement PCM. Is the action complete?	—	Verify repair	—

Symptom Diagnosis

Preliminary Checks

Before using this section, perform the "On-Board Diagnostic (OBD) System Check" and verify all of the following items:

- The powertrain control module (PCM), and malfunction indicator lamp (MIL) (Check Engine lamp) and Reduced Power Lamp (RPL) are operating correctly.
- There are no DTC(s) stored.
- Tech 2 data is within normal operating range. Refer to *Typical Scan Data Values*.
- Verify the customer complaint and locate the correct symptom in the table of contents. Perform the procedure included in the symptom chart.

Visual/Physical Check

Several of the symptom procedures call for a careful visual/physical check. This can lead to correcting a problem without further checks and can save valuable time.

This check should include the following items:

- PCM grounds for cleanliness, tightness and proper location.
- Vacuum hoses for splits, kinks, and proper connections, as shown on the "Vehicle Emission Control Information" label. Check thoroughly for any type of leak or restriction.
- Air intake ducts for collapsed or damaged areas.
- Air leaks at throttle body mounting area, mass air flow (MAF) sensor and intake manifold sealing surfaces.
- Ignition components for cracking, hardness, and carbon tracking.
- Wiring for proper connections, pinches and cuts.

Intermittents

IMPORTANT: An intermittent problem may or may not turn on the malfunction indicator lamp (MIL) or store a DTC. DO NOT use the Diagnostic Trouble Code (DTC) charts for intermittent problems. The fault must be present to locate the problem.

Most intermittent problems are caused by faulty electrical connections or wiring. Perform a careful visual/physical check for the following conditions:

- Poor mating of the connector halves or a terminal not fully seated in the connector (backed out).
- Improperly formed or damaged terminal.
- All connector terminals in the problem circuit should be carefully checked for proper contact tension.
- Poor terminal-to-wire connection. This requires removing the terminal from the connector body to check.

Road test the vehicle with a J 39200 Digital Multimeter connected to a suspected circuit. An abnormal voltage when the malfunction occurs is a good indication that there is a fault in the circuit being monitored.

Use a Tech 2 to help detect intermittent conditions. The scan tool has several features that can be used to locate an intermittent condition. Use the following feature to find intermittent faults:

- Using a Tech 2's "Freeze Frame" buffer or "Failure Records" buffer can aid in locating an intermittent condition. Review and record the information in the freeze frame or failure record associated with the intermittent DTC being diagnosed. The vehicle can be driven within the conditions that were present when the DTC originally set.

To check for loss of diagnostic code memory, disconnect the MAP sensor and idle the engine until the MIL (Check Engine lamp) comes on. DTC P0107 should be stored and kept in memory when the ignition is turned "OFF". If not, the PCM is faulty. When this test is completed, make sure that you clear the DTC P0107 from memory.

An intermittent MIL (Check Engine lamp) with no stored DTC may be caused by the following:

- Ignition coil shorted to ground and arcing.
- MIL (Check Engine lamp) wire to PCM shorted to ground.
- Poor PCM grounds. Refer to the PCM wiring diagrams.

Check for improper installation of electrical options such as lights, cellular phones, etc. Check all wires from the PCM to the ignition coils for poor connections.

Check for an open diode across the A/C compressor clutch and check for other open diodes (refer to wiring diagrams in *Electrical Diagnosis*).

If problem has not been found, refer to *PCM Connector Symptom* tables.

- Check the "Calibration ID" of the PCM, and compare it with the latest Isuzu service bulletins and/or Isuzu EEPROM reprogramming equipment to determine if an update to the PCM's reprogrammable memory has been released. To check the "Calibration ID", connect the Tech 2, then look for "Powertrain", then select "Calibration ID". This identifies the contents of the reprogrammable software and calibration contained in the PCM. If the "Calibration ID" is not the most current available, it is advisable to reprogram the PCM's EEPROM memory, which may either help identify a hard-to-find problem or may fix the problem.
- Calibration ID (example)

Part number	9377709
Broadcast Code	CYYD
Identifier	801

Hard Start Symptom

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Engine cranks, but does not start for a long time. Does eventually run, or may start but immediately stall. Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the "Electric Throttle Control (ETC) System Check" performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Verify repair	Go to *Step 4*
4	Was a visual/physical check performed?	—	Go to *Step 5*	Go to *Visual/ Physical Check*
5	Check engine coolant temperature (ECT) sensor for shift in value. After 8 hours with the hood up and the engine not running, connect the Tech 2. With the ignition "ON" and the engine not running, compare engine coolant temperature to intake air temperature. Are ECT and IAT within the specified value of each other?	± 5°C (± 9°F)	Go to *Step 9*	Go to *Step 6*
6	1. Using a Tech 2, display the engine coolant temperature and note the value. 2. Check the resistance of the engine coolant temperature sensor. 3. Refer to *Engine Coolant Temperature Sensor Temperature vs. Resistance* chart on *DTC P0118 Diagnostic Support* for resistance specifications. Is the resistance value near the resistance for the temperature noted?	—	Go to *Step 8*	Go to *Step 7*
7	Replace the ECT sensor. Is the action complete?	—	Verify repair	—
8	Locate and repair high resistance or poor connection in the ECT signal circuit or the ECT sensor ground. Is the action complete?	—	Verify repair	—
9	1. Check for a faulty, plugged, or incorrectly installed PCV valve. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*
10	1. Check for water- or alcohol-contaminated fuel. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
11	1. Perform the procedure in *Fuel System Pressure Test*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*

Hard Start Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
12	1. Check for proper ignition voltage output with spark tester J 26792 (ST-125). Refer to *Electric Ignition System* for procedure. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 13*
13	1. Remove spark plugs. Check for wet plugs, cracks, wear, improper gap, burned electrodes, or heavy deposits. Refer to *Electronic Ignition System*. NOTE: If spark plugs are gas or oil fouled, the cause of the fouling must be determined before replacing the spark plugs. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 14*
14	1. Check for a loose ignition coil ground and ION Sensing module circuit. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 15*
15	1. Remove the ignition coils and check the ignition coils for cracks or carbon tracking. 2. If a problem is found, replace affected coil(s) as necessary. Was a problem found?	—	Verify repair	Go to *Step 16*
16	1. Check for the following engine mechanical problems (refer to *Engine Mechanical*): • Low compression • Leaking cylinder head gaskets • Worn or incorrect camshaft • Camshaft drive belt slipped or stripped 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 17*
17	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: • Visual/physical inspection • Tech 2 data • Freeze Frame data/Failure Records buffer • All electrical connections within a suspected circuit and/or system. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Surges and/or Chuggles Symptom

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Engine power variation under steady throttle or cruise. Feels like the vehicle speeds up and slows down with no change in the accelerator pedal. Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the "Electric Throttle Control (ETC) System Check" performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Verify repair	Go to *Step 4*
4	Was a visual/physical check performed?	—	Go to *Step 5*	Go to *Visual/ Physical Check*
5	Be sure that the driver understands transmission torque converter clutch and A/C compressor operation as explained in the owner's manual. Inform the customer how the TCC and the A/C clutch operate. Is the customer experiencing a normal condition?	—	System OK	Go to *Step 6*
6	1. Check the fuel control heated oxygen sensors (HO2S, B1S1 and B2S1). The fuel control heated oxygen sensors (HO2S) should respond quickly to different throttle positions. If they don't, check them for silicone or other contaminants from fuel or use of improper RTV sealant. The sensors may have a white powdery coating. Silicon contamination causes a high but false HO2S signal voltage (rich exhaust indication). The PCM will then reduce the amount of fuel delivered to the engine, causing a severe driveability problem. For more information, refer to *Powertrain Control Module (PCM) and Sensors*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Check the fuel pressure. Refer to *Fuel System Pressure Test*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	Monitor the long term fuel trim on the Tech 2. Is the long term fuel trim significantly in the negative range (rich condition)?	—	Go to *Step 9*	Go to *Step 10*
9	1. Check items that can cause the engine to run rich. Refer to *Diagnostic Aids* in *DTC P0172 Diagnostic Support*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 11*	Verify repair

Surges and/or Chuggles Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
10	1. Check items that can cause the engine to run lean. Refer to *Diagnostic Aids* in *DTC P0171*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 11*	Verify repair
11	1. Check for proper ignition voltage output with spark tester J 26792 (ST-125). Refer to *Electric Ignition System* for procedure. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	1. Check for a loose ignition coil ground and ION Sensing module circuit. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 13*
13	1. Check the ignition coils for cracks or carbon tracking. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 14*
14	1. Remove the spark plugs and check for wet plugs, cracks, wear, improper gap, burned electrodes, or heavy deposits. Refer to *Electronic Ignition System*. NOTE: If spark plugs are gas or oil fouled, the cause of the fouling must be determined before replacing the spark plugs. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 15*
15	1. Check the injector connections. 2. If any of the injector connectors are connected to an incorrect cylinder, correct as necessary. Was a problem found?	—	Verify repair	Go to *Step 16*
16	1. Check PCM grounds for the cleanliness, tightness and proper locations. Refer to the PCM wiring diagrams in *Electrical Diagnosis*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 17*
17	1. Check MAF sensor connections. 2. If a problem is found, replace the faulty terminals as necessary. Refer to *Electrical Diagnosis* for wiring repair procedures. Was a problem found?	—	Verify repair	Go to *Step 18*
18	1. Visually/physically check vacuum hoses for splits, kinks, and proper connections and routing as shown on the "Vehicle Emission Control Information" label. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 19*

Surges and/or Chuggles Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
19	1. Check the exhaust system for possible restriction: • Inspect the exhaust system for damaged or collapsed pipes. • Inspect the muffler for heat distress or possible internal failure. • Check for a possible plugged three-way catalytic converter by checking the exhaust system back pressure. Refer to *Restricted Exhaust System Check*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 20*
20	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: • Visual/physical inspection • Tech 2 data • Freeze Frame data/Failure Records buffer • All electrical connections within a suspected circuit and/or system. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Lack of Power, Sluggish, or Spongy Symptoms

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Engine delivers less than expected power. Little or no increase in speed when accelerator pedal is pushed down part-way. Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the "Electric Throttle Control (ETC) System Check" performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Verify repair	Go to *Step 4*
4	Was a visual/physical check performed?	—	Go to *Step 5*	Go to *Visual/ Physical Check*
5	1. Remove and check the air filter element for dirt or restrictions. Refer to *Air Intake System* in *ON-Vehicle Service*. 2. Replace the air filter element if necessary. Was a repair required?	—	Verify repair	Go to *Step 6*
6	1. Check for low fuel pressure. Refer to *Fuel System Pressure Test*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Check for water- or alcohol-contaminated fuel. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Install the Tech 2. 2. Run the engine at idle. 3. On the Tech 2, select F3: Miscellaneous Test, F6: Variable Intake Manifold. 4. Repeat Switch ON or OFF of VIM solenoid valve by using the Tech 2. 5. Check to see if the actuator works normally. 6. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
9	1. Check for proper ignition voltage output with spark tester J 26792 (ST-125). Refer to *Electronic Ignition System* for procedure. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*

Lack of Power, Sluggish, or Spongy Symptoms (Cont'd)

Step	Action	Value(s)	Yes	No
10	1. Remove the spark plugs and check for wet plugs, cracks, wear, improper gap, burned electrodes, or heavy deposits. Refer to *Electronic Ignition System*. NOTE: If spark plugs are gas or oil fouled, the cause of the fouling must be determined before replacing the spark plugs. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
11	1. Check the ignition coils for cracks or carbon tracking. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	1. Check the PCM grounds for cleanliness, tightness and proper locations. Refer to the PCM wiring diagrams in *Electrical Diagnosis*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 13*
13	1. Check the exhaust system for possible restriction: ● Inspect the exhaust system for damaged or collapsed pipes. ● Inspect the muffler for heat distress or possible internal failure. ● Check for a possible plugged three-way catalytic converter by checking the exhaust system back pressure. Refer to *Restricted Exhaust System Check*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 14*
14	1. Check the torque converter clutch (TCC) for proper operation. Refer to *4L30-E Transmission Diagnosis*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 15*
15	1. Check for an engine mechanical problem. Check for low compression, incorrect or worn camshaft, loose timing belt, etc. Refer to *Engine Mechanical*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 16*
16	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: ● Visual/physical inspection ● Tech 2 data ● Freeze Frame data/Failure Records buffer ● All electrical connections within a suspected circuit and/or system. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Detonation/Sparks Knock Symptoms

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** A mild to severe ping, usually worse under acceleration. The engine makes sharp metallic knocks that change with throttle opening. Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Verify repair	Go to *Step 3*
3	Was a visual/physical check performed?	—	Go to *Step 4*	Go to *Visual/ Physical Check*
4	If Tech 2 readings are normal (refer to *Typical Scan Values*) and there are no engine mechanical faults, fill the fuel tank with a known quality gasoline that has a minimum octane rating of 87 and re-evaluate the vehicle performance. Is detonation present?	—	Go to *Step 5*	Verify repair
5	1. Check the transmission range switch circuit. Use a Tech 2 and be sure the Tech 2 indicates that the vehicle is in drive with the gear selector in drive or overdrive. 2. If a problem is found, diagnose and repair the transmission range switch as necessary (refer to *4L30-E Automatic Transmission Diagnosis*). Was a problem found?	—	Verify repair	Go to *Step 6*
6	1. Check TCC operation. Refer to *4L30-E Transmission Diagnosis*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Check for obvious overheating problems: • Low engine coolant. • Restricted air flow to radiator, or restricted water flow through radiator. • Correct coolant solution should be a 50/50 mix of approved antifreeze/coolant and water. Refer to *Engine Cooling*. • EGR operation. Refer to *DTC P0401*. • ION sensing module fault. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Ignition "OFF". 2. Disconnect the ION sensing module. 3. Disconnect the PCM. Is the action complete?	—	Go to *Step 9*	—
9	Check the ION sensing harness between the PCM (F68) and ION sensing module circuit (RED Wire) at the KI line harness connector. Was a problem found?	—	Verify repair	Go to *Step 10*

Detonation/Sparks Knock Symptoms (Cont'd)

Step	Action	Value(s)	Yes	No
10	1. Disconnect the ignition coil. Is the action complete?	—	Go to *Step 11*	—
11	Check the ION sensing harness between the ignition coil and ION sensing module circuit at the DC motor harness connector. Was a problem found?	—	Verify repair	Go to *Step 12*
12	Check the following items; 1. Ignition coil and ignition coil circuit. 2. Ignition coil ground circuit for a poor connection. 3. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Verify repair	Go to *Step 13*
13	Replace the Ignition coil. Is the action complete?	—	Verify repair	Go to *Step 14*
14	Check the following items; 1. ION sensing module ground circuit for a poor connection. 2. If a problem is found, repair wiring harness as necessary. Was a problem found?	—	Go to *Step 10*	Go to *Step 15*
15	Replace the ION sensing module. Is the action complete?	—	Verify repair	Go to *Step 16*
16	1. Check fuel pressure. Refer to Chart Fuel System Pressure Test. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 17*
17	1. Check items that can cause an engine to run lean (long term fuel trim significantly in the positive range). For a lean condition, refer to *Diagnostic Aids* in *DTC P0171 Diagnostic Support*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 18*
18	1. Spark plugs for proper heat range. Refer to *General Information*. 2. If incorrect spark plugs are installed, replace spark plugs as necessary. Did any spark plugs require replacement?	—	Verify repair	Go to *Step 19*
19	1. Remove excessive carbon buildup with a top engine cleaner. Refer to instructions on the top engine cleaner can. 2. Re-evaluate vehicle performance. Is detonation still present?	—	Go to *Step 20*	Verify repair

Detonation/Sparks Knock Symptoms (Cont'd)

Step	Action	Value(s)	Yes	No
20	1. Check for an engine mechanical problem. Perform a cylinder compression check. Refer to *Engine Mechanical*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 21*
21	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: ● Visual/physical inspection ● Tech 2 data ● Freeze Frame data/Failure Records buffer ● All electrical connections within a suspected circuit and/or system. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Rough, Unstable, or Incorrect Idle, Stalling Symptom

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Engine runs unevenly at idle. If severe, the engine or vehicle may shake. Engine idle speed may vary in RPM. Either condition may be severe enough to stall the engine. Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the "Electric Throttle Control (ETC) System Check" performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Go to *Step 14*	Go to *Step 4*
4	Was a visual/physical check performed?	—	Go to *Step 5*	Go to *Visual/ Physical Check*
5	1. Check the PCM grounds for cleanliness, tightness and proper routing. Refer to the PCM wiring diagrams in *Electrical Diagnosis*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	Observe the long term fuel trim on the Tech 2. Is the long term fuel trim significantly in the negative range (rich condition)?	—	Go to *Step 7*	Go to *Step 8*
7	1. Check items that can cause the engine to run rich. Refer to *Diagnostic Aids* in *DTC P0172 Diagnostic Support*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*
8	Is the long term fuel trim significantly in the positive range (lean condition)?	—	Go to *Step 9*	Go to *Step 10*
9	1. Check items that can cause the engine to run lean. Refer to *Diagnostic Aids* in *DTC P0171 Diagnostic Support*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*
10	1. Check for incorrect idle speed. Ensure that the following conditions are present: • The engine is fully warm. • The accessories are "OFF". 2. Using a Tech 2, monitor the Engine Speed. Is the Engine Speed within the specified values?	Desired Idle Speed	Go to *Step 12*	Go to *Step 11*

Rough, Unstable, or Incorrect Idle, Stalling Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
11	1. Visually/physically inspect for the following conditions: • Restricted air intake system. Check for a possible collapsed air intake duct, restricted air filter element, or foreign objects blocking the air intake system. • Large vacuum leak. Check for a condition that causes a large vacuum leak, such as an incorrectly installed or faulty crankcase ventilation valve or a disconnected brake booster hose. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
12	Check the injector connections. If any of the injectors are connected to an incorrect cylinder, correct as necessary. Was a problem found?	—	Verify repair	Go to *Step 13*
13	1. Perform the "Injector Coil/Balance Test" in *Fuel Metering System*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 14*
14	1. Check for fuel in the pressure regulator vacuum hose. 2. If fuel is present, replace the fuel pressure regulator assembly. Refer to *Fuel Metering System*. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 15*
15	1. Check for proper ignition voltage output with spark tester J 26792 (ST-125). Refer to *Electronic Ignition System* for the procedure. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 16*
16	1. Remove spark plugs. Check for wet plugs, cracks, wear, improper gap, burned electrodes, or heavy deposits. Refer to *Electronic Ignition System*. NOTE: If spark plugs are gas or oil fouled, the cause of the fouling must be determined before replacing the spark plugs. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 17*
17	1. Check for a loose ignition coil ground and ION Sensing Module circuit. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 18*
18	1. Check ignition coils for cracks or carbon tracking. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 19*

Rough, Unstable, or Incorrect Idle, Stalling Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
19	Using a Tech 2, monitor the throttle position 1 and 2 angle with the engine idling. Is the TP angle at the specified value and steady?	8 ~ 10%	Go to *Step 20*	Refer to *DTC* for further diagnosis
20	1. Check the positive crankcase ventilation (PCV) valve for proper operation. Refer to *Crankcase Ventilation System*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 21*
21	1. Check the transmission range switch circuit. Use a Tech 2 and be sure the Tech 2 indicates that the vehicle is in drive with the gear selector in drive or overdrive. 2. If a problem is found, diagnose and repair the transmission range switch as necessary (refer to *4L30-E Automatic Transmission Diagnosis*). Was a problem found?	—	Verify repair	Go to *Step 22*
22	1. Check for the following engine mechanical items. Refer to *Engine Mechanical* for diagnosis procedures: • Low compression • Sticking or leaking valves • Worn camshaft lobe(s) • Camshaft drive belt slipped or stripped • Incorrect valve timing • Worn rocker arms • Broken valve springs 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 23*
23	1. Check for faulty motor mounts. Refer to *Engine Mechanical* for inspection of mounts. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 24*
24	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: • Visual/physical inspection • Tech 2 data • Freeze Frame data/Failure Records buffer • All electrical connections within a suspected circuit and/or system. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Poor Fuel Economy Symptom

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Fuel economy, as measured by an actual road test, is noticeably lower than expected. Also, economy is noticeably lower than it was on this vehicle at one time, as previously shown by an actual road test. (Non-standard tires will cause odometer readings to be incorrect, and that may cause fuel economy to appear poor when it is actually normal.) Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Verify repair	Go to *Step 3*
3	Was a visual/physical check performed?	—	Go to *Step 4*	Go to *Visual/ Physical Check*
4	Check owner's driving habits. ● Is the A/C "ON" full time (defroster mode "ON")? ● Are tires at the correct pressure? ● Are excessively heavy loads being carried? ● Is acceleration too much, too often? Was a problem found?	—	Go to *Step 5*	Go to *Step 6*
5	Review the items in Step 4 with the customer and advise as necessary. Is the action complete?	—	System OK	—
6	1. Visually/physically check: Vacuum hoses for splits, kinks, and improper connections and routing as shown on the "Vehicle Emission Control Information" label. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Remove and check the air filter element for dirt or for restrictions. Refer to *Air Intake System*. 2. Replace the air filter element if necessary. Was a repair required?	—	Verify repair	Go to *Step 8*
8	1. Remove spark plugs and check for wet plugs, cracks, wear, improper gap, burned electrodes, or heavy deposits. Refer to *Spark Plug Replacement*. NOTE: If spark plugs are gas or oil fouled, the cause of the fouling must be determined before replacing the spark plugs. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
9	1. Check for low engine coolant level. Refer to *Engine Cooling*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*

Poor Fuel Economy Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
10	1. Check for an incorrect or faulty engine thermostat. Refer to *Engine Cooling*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
11	1. Check for low engine compression. Refer to *Engine Mechanical*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	1. Check the TCC operation. Refer to *4L30-E Transmission Diagnosis*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 13*
13	1. Check the exhaust system for possible restriction: ● Inspect the exhaust system for damaged or collapsed pipes. ● Inspect the muffler for heat distress or possible internal failure. ● Check for a possible plugged three-way catalytic converter by checking the exhaust system back pressure. Refer to *Restricted Exhaust System Check*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 14*
14	Check for proper calibration of the speedometer. Does the speed indicated on the speedometer closely match the vehicle speed displayed on the Tech 2?	—	Go to *Step 16*	Go to *Step 15*
15	Diagnose and repair an inaccurate speedometer condition as necessary. Refer to *Vehicle Speed Sensor* in *Electrical Diagnosis*. Was a problem found?	—	Verify repair	—
16	1. Check the air intake system and the crankcase for air leaks. Refer to *Air Intake System* and *Crankcase Ventilation System*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 17*
17	1. Review all diagnostic procedures within this table. 2. When all procedures have been completed and no malfunctions have been found, review/inspect the following: ● Visual/physical inspection ● Tech 2 data ● Freeze Frame data/Failure Records buffer ● All connections within a suspected circuit and/or system. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 18*
18	Perform the procedure in *Fuel System Pressure Test*. Was the fuel pressure normal?	—	Contact Technical Assistance	Verify repair

Excessive Exhaust Emissions or Odors Symptom

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Vehicle fails an emission test. Vehicle has excessive "rotten egg" smell. (Excessive odors do not necessarily indicate excessive emissions.) Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Go to *Step 13*	Go to *Step 3*
3	Was a thorough visual/physical check performed?	—	Go to *Step 4*	Go to *Visual/ Physical Check*
4	1. Check for vacuum leaks. Check vacuum lines, intake manifold, throttle body, etc. 2. If a problem is found, repair as necessary. Were any vacuum leaks located?	—	Go to *Step 13*	Go to *Step 5*
5	1. Check the fuel cap for proper installation. 2. Secure the fuel cap if necessary. Was the fuel cap installed properly?	—	Go to *Step 6*	Go to *Step 13*
6	1. Check the fuel pressure. Perform the procedure in *Fuel System Pressure Test*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 13*	Go to *Step 7*
7	1. Check for a faulty, plugged, or incorrectly installed crankcase ventilation valve; also check the crankcase ventilation system for plugging. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 13*	Go to *Step 8*
8	1. Check the injector connections. 2. If any of the injectors are connected to an incorrect cylinder, correct as necessary. Was a problem found?	—	Go to *Step 13*	Go to *Step 9*
9	1. Perform the "Injector Coil/Balance Test" in *Fuel Metering System*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 13*	Go to *Step 10*
10	1. Refer to *Engine Cooling* for cooling system diagnosis. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 13*	Go to *Step 11*
11	1. Check EVAP canister for fuel loading. Refer to *Evaporative Emission Control System*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 13*	Go to *Step 12*

Excessive Exhaust Emissions or Odors Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
12	1. Remove excessive carbon buildup with a top engine cleaner. Refer to the instructions on the top engine cleaner can. 2. Perform the exhaust emission test. Does the vehicle pass the test?	—	System OK	Go to *Step 14*
13	Perform the exhaust emission test. Does the vehicle pass the test?	—	System OK	Go to *Step 14*
14	Does the exhaust emission test indicate excessive CO and HC levels or is long term fuel trim significantly in the negative range (rich condition)?	—	Go to *Step 15*	Go to *Step 16*
15	1. Check items that can cause the engine to run rich. Refer to *Diagnostic Aids* in *DTC P0172 Diagnostic Support*. Make any necessary repairs. 2. Perform the exhaust emission test. Does the vehicle pass the test?	—	System OK	Go to *Step 17*
16	1. Check items that can cause the engine to run lean. Refer to *Diagnostic Aids* in *DTC P0171 Diagnostic Support*. Make any necessary repairs. 2. Perform the exhaust emission test. Does the vehicle pass the test?	—	System OK	Go to *Step 17*
17	1. Check the EGR system (refer to *DTC P0401*). 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 13*	Go to *Step 18*
18	1. Check for an engine mechanical problem. Perform a cylinder compression check (refer to *Engine Mechanical*). 2. If a problem is found, repair as necessary. Was a problem found?	—	Go to *Step 13*	Go to *Step 19*
19	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: • Visual/physical inspection • Tech 2 data • Freeze Frame data/Failure Records butter • All electrical connections within a suspected circuit and/or system. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Dieseling, Run-On Symptom

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Engine continues to run after key is turned "OFF," but runs very rough. If engine runs smooth, check ignition switch and adjustment. Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Verify repair	Go to *Step 3*
3	Was a visual/physical check performed?	—	Go to *Step 4*	Go to *Visual/ Physical Check*
4	1. Check for a short between B+ and any of the ignition feed circuits. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: • Visual/physical inspection • Tech 2 data • Freeze Frame data/Failure Records butter • All electrical connections within a suspected circuit and/or system 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Backfire Symptom

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Fuel ignites in the intake manifold, or in the exhaust system, making a loud popping noise. Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Verify repair	Go to *Step 3*
3	Was a visual/physical check performed?	—	Go to *Step 4*	Go to *Visual/ Physical Check*
4	1. Check for proper ignition voltage coil output with spark tester J 26792 (ST-125). Refer to *Electric Ignition System* for procedure. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 5*
5	1. Remove spark plugs and check for wet plugs, cracks, wear, improper gap, burned electrodes, or heavy deposits. Refer to *Electronic Ignition System*. NOTE: If spark plugs are gas or oil fouled, the cause of the fouling must be determined before replacing the spark plugs. Refer to *DTC P0172* to determine the cause of a rich condition or *Engine Mechanical* for an oil fouling condition. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	1. Visually/physically inspect the ignition coils for cracks. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	1. Check for an intermittent ignition system malfunction: • Intermittent CKP 58X signal. • Intermittent ignition feed circuit or sensor ground circuit to the crankshaft position sensor. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 8*
8	1. Check the fuel pressure. Refer to *Fuel System Pressure Test*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*

Backfire Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
9	1. Check for the following engine mechanical conditions. Refer to *Engine Mechanical* for diagnosis procedures: ● Low compression ● Sticking or leaking valves ● Worn camshaft lobe(s) ● Camshaft drive belt slipped or stripped ● Incorrect valve timing 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*
10	1. Check the intake and exhaust manifold(s) for casting flash. Refer to *Engine Mechanical*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
11	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: ● Visual/physical inspection ● Tech 2 data ● Freeze Frame data/Failure Records butter ● All electrical connections within a suspected circuit and/or system. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Cuts Out, Misses Symptom

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Steady pulsation or jerking that follows engine speed; usually more pronounced as engine load increases. Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Go to *Step 14*	Go to *Step 3*
3	Was a visual/physical check performed?	—	Go to *Step 4*	Go to *Visual/ Physical Check*
4	Was the "Electric Throttle Control (ETC) System Check" performed?	—	Go to *Step 5*	Go to *ETC System Check*
5	1. Check the PCM grounds for clearness, tightness and proper routing. Refer to the PCM wiring diagrams in *Electrical Diagnosis*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	Observe the long term fuel trim on the Tech 2. Is the long term fuel trim significantly in the negative range (rich condition)?	—	Go to *Step 7*	Go to *Step 8*
7	1. Check items that can cause the engine to run rich. Refer to *Diagnostic Aids* in *DTC P0172 Diagnostic Support*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*
8	Is the long term fuel trim significantly in the positive range (lean condition)?	—	Go to *Step 9*	Go to *Step 10*
9	1. Check items that can cause the engine to run lean. Refer to *Diagnostic Aids* in *DTC P0171 Diagnostic Support*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 10*
10	1. Check for incorrect idle speed. Ensure that the following conditions are present: • The engine is fully warm. • The accessories are "off". 2. Using a Tech 2, monitor the Engine Speed. Is the Engine Speed within the specified values?	Desired Idle Speed	Go to *Step 12*	Go to *Step 11*

Cuts Out, Misses Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
11	1. Visually/physically inspect for the following conditions: • Restricted air intake system. Check for a possible collapsed air intake duct, restricted air filter element, or foreign objects blocking the air intake system. • Large vacuum leak. Check for a condition that causes a large vacuum leak, such as an incorrectly installed or faulty PCV valve or brake booster hose disconnected . 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 9*
12	Check the injector connections. If any of the injectors are connected to an incorrect cylinder, correct as necessary. Was a problem found?	—	Verify repair	Go to *Step 13*
13	1. Perform the "Injector Coil/Balance Test" in *Fuel Metering System*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 14*
14	1. Check for fuel in the pressure regulator vacuum hose. 2. If fuel is present, replace the fuel pressure regulator assembly. Refer to *Fuel Metering System*. 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 15*
15	1. Check for proper ignition voltage output with spark tester J 26792 (ST-125). Refer to *Electronic Ignition System* for the procedure. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 16*
16	1. Remove spark plugs. Check for wet plugs, cracks, wear, improper gap, burned electrodes, or heavy deposits. Refer to *Electronic Ignition System*. NOTE: If spark plugs are gas or oil fouled, the cause of the fouling must be determined before replacing the spark plugs. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 17*
17	1. Check for a loose ignition coil ground and ION Sensing module circuit. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 18*
18	1. Check ignition coils for cracks or carbon tracking. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 19*
19	Using a Tech 2, monitor the TP 1, 2 angle with the engine idling. Is the TP angle at the specified value and steady?	8 ~ 10%	Go to *Step 20*	Refer to *DTC P0123* for further diagnosis

Cuts Out, Misses Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
20	1. Check the PCV valve for proper operation. Refer to *Crankcase Ventilation System*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 21*
21	1. Check the transmission range switch circuit. Use a Tech 2 and be sure the Tech 2 indicates that the vehicle is in drive with the gear selector in drive or overdrive. 2. If a problem is found, diagnose and repair the transmission range switch as necessary (refer to *4L30-E Automatic Transmission Diagnosis*). Was a problem found?	—	Verify repair	Go to *Step 22*
22	1. Check the following engine mechanical items. Refer to *Engine Mechanical* for diagnosis procedures: ● Low compression ● Sticking or leaking valves ● Worn camshaft lobe(s) ● Camshaft drive belt slipped or stripped ● Incorrect valve timing ● Worn rocker arms ● Broken valve springs 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 23*
23	1. Check for faulty motor mounts. Refer to *Engine Mechanical* for inspection of mounts. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 24*
24	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: ● Visual/physical inspection ● Tech 2 data ● Freeze Frame data/Failure Records butter ● All electrical connections within a suspected circuit and/or system 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Hesitation, Sag, Stumble Symptom

Step	Action	Value(s)	Yes	No
1	**DEFINITION:** Momentary lack of response as the accelerator is pushed down. Can occur at any vehicle speed. Usually most pronounced when first trying to make the vehicle move, as from a stop sign. May cause the engine to stall if severe enough. Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	Was the "Electric Throttle Control (ETC) System Check" performed?	—	Go to *Step 3*	Go to *ETC System Check*
3	1. Perform a bulletin search. 2. If a bulletin that addresses the symptom is found, correct the condition as instructed in the bulletin. Was a bulletin found that addresses the symptom?	—	Verify repair	Go to *Step 4*
4	Was a visual/physical check performed?	—	Go to *Step 5*	Go to *Visual/ Physical Check*
5	1. Check the fuel control heated oxygen sensors (HO2S, B1S1 and B2S1). The fuel control heated oxygen sensors (HO2S) should respond quickly to different throttle positions. If they don't, check them for silicon or other contaminants from fuel or use of improper RTV sealant. The sensors may have a white powdery coating. Silicon contamination causes a high but false HO2S signal voltage (rich exhaust indication). The PCM will then reduce the amount of fuel delivered to the engine, causing a severe driveability problem. For more information, refer to *Powertrain Control Module (PCM) and Sensors*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 6*
6	1. Check the fuel pressure. Refer to *Fuel System Pressure Test.* 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 7*
7	Observe the TP 1, 2 angle display on the Tech 2 while slowly increasing accelerator pedal depression. Does the TP angle display steadily increase from 8 ~ 10% at closed throttle to 90 ~ 92% at WOT?	—	Go to *Step 8*	Go to *Step 9*
8	Monitor the long term fuel trim on the Tech 2. Is the long term fuel trim significantly in the negative range (rich condition)?	—	Go to *Step 9*	Go to *Step 10*
9	1. Check items that can cause the engine to run rich. Refer to *Diagnostic Aids* in *DTC P0172 Diagnostic Support*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*

Hesitation, Sag, Stumble Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
10	1. Check items that can cause the engine to run lean. Refer to *Diagnostic Aids* in *DTC P0171 Diagnostic Support*. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 11*
11	1. Check for proper ignition voltage output with spark tester J 26792 (ST-125). Refer to *Electronic Ignition System* for the procedure. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 12*
12	1. Check for a loose ignition coil ground and ION Sensing module circuit. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 13*
13	1. Check the ignition coils for cracks or carbon tracking. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 14*
14	1. Remove spark plugs and check for wet plugs, cracks, wear, improper gap, burned electrodes, or heavy deposits. Refer to *Electronic Ignition System*. NOTE: If spark plugs are gas or oil fouled, the cause of the fouling must be determined before replacing the spark plugs. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 15*
15	1. Check the PCM grounds for clearness, tightness and proper routing. Refer to the PCM wiring diagrams in Electrical Diagnosis. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 16*
16	1. Check the MAF sensor connections. 2. If a problem is found, replace the faulty terminals as necessary. Refer to *Electrical Diagnosis* for wiring repair procedures. Was a problem found?	—	Verify repair	Go to *Step 17*

Hesitation, Sag, Stumble Symptom (Cont'd)

Step	Action	Value(s)	Yes	No
17	1. Visually/physically check vacuum hoses for splits, kinks, and proper connections and routing as shown on the "Vehicle Emission Control Information" label. 2. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Go to *Step 18*
18	1. Review all diagnostic procedures within this table. 2. If all procedures have been completed and no malfunctions have been found, review/inspect the following: ● Visual/physical inspection ● Tech 2 data ● Freeze Frame data/Failure Records butter ● All electrical connections within a suspected circuit and/or system 3. If a problem is found, repair as necessary. Was a problem found?	—	Verify repair	Contact Technical Assistance

Bank 1 Restricted Exhaust System Check

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Remove the Bank 1 HO2S 2. 2. Install the Exhaust Backpressure Tester (BT-8515-V or equivalent) in place of the Bank 1 HO2S 2. 3. Run the engine at normal operating temperature. 4. Increase the engine speed to 2000 RPM and allow 10 seconds for pressure to build. 5. Observe the exhaust system backpressure reading on the gauge. Does the reading exceed the amount in the value column?	8.62 kPa (1.25 psi)	Go to *Step 3*	Go to *Step 4*
3	Repair the restriction in the exhaust system after the catalytic converter. Possible faults include: • Collapsed pipe • Heat distress • Internal muffler failure Is the action complete?	—	Verify repair	—
4	1. Install the Bank 1 HO2S 2. 2. Install the Exhaust Backpressure Tester in place of Bank 1 HO2S 1. 3. Run the engine at normal operating temperature. 4. Increase the engine speed to 2000 RPM and allow 10 seconds for pressure to build. 5. Observe the exhaust system backpressure reading on the gauge. Does the reading exceed the amount in the value column?	8.62 kPa (1.25 psi)	Go to *Step 5*	No trouble found. If a driveability symptom exists, refer to symptom charts
5	Repair the restriction in the catalytic converter. Is the action complete?	—	Verify repair	—

NOTE: DTCs will be set by running the vehicle to normal operating temperature after a cold start with the O2 sensor disconnected. After performing these tests, use the Tech 2 to erase the DTCs that were set by the lack of O2 sensor activity.

Bank 2 Restricted Exhaust System Check

Step	Action	Value(s)	Yes	No
1	Was the "On-Board Diagnostic (OBD) System Check" performed?	—	Go to *Step 2*	Go to *OBD System Check*
2	1. Remove the Bank 2 HO2S 2. 2. Install the Exhaust Backpressure Tester (BT-8515-V or equivalent) in place of the Bank 2 HO2S 2. 3. Run the engine at normal operating temperature. 4. Increase the engine speed to 2000 RPM and allow 10 seconds for pressure to build. 5. Observe the exhaust system backpressure reading on the gauge. Does the reading exceed the amount in the value column?	8.62 kPa (1.25 psi)	Go to *Step 3*	Go to *Step 4*
3	Repair the restriction in the exhaust system after the catalytic converter. Possible faults include: • Collapsed pipe • Heat distress • Internal muffler failure Is the action complete?	—	Verify repair	—
4	1. Install the Bank 2 HO2S 2. 2. Install the Exhaust Back pressure Tester in place of Bank 1 HO2S 1. 3. Run the engine at normal operating temperature. 4. Increase the engine speed to 2000 RPM and allow 10 seconds for pressure to build. 5. Observe the exhaust system backpressure reading on the gauge. Does the reading exceed the amount in the value column?	8.62 kPa (1.25 psi)	Go to *Step 5*	No trouble found. If a driveability symptom exists, refer to symptom charts
5	Repair the restriction in the catalytic converter. Is the action complete?	—	Verify repair	—

NOTE: DTCs will be set by running the vehicle to normal operating temperature after a cold start with the O2 sensor disconnected. After performing these tests, use the Tech 2 to erase the DTCs that were set by the lack of O2 sensor activity.

Default Matrix Table

Service Procedure Default Strategy

A referral strategy has been established to assist the technician with additional information when the cause of the failure cannot be determined. If no problem is found after performing diagnostics, then refer to the default matrix table for further diagnostic information.

Default Matrix Table

Strategy Based Diagnostic Charts	Initial Diagnosis	Default Section(s)
On-Board Diagnostic (OBD) System Check	Vehicle does not enter diagnostics.	Chassis Electrical
On-Board Diagnostic (OBD) System Check	Vehicle enters diagnostics and communicates with the Tech 2. MIL is “ON” in diagnostics. Engine does not start and run.	Ignition System Check
On-Board Diagnostic (OBD) System Check	Engine starts and runs, no PCM codes set. Customer complains of vibration.	—
On-Board Diagnostic (OBD) System Check	Engine starts and runs, no PCM codes set. Customer complains of harsh or soft shift, poor performance, delayed or no engagement into drive or reverse, transmission fluid leak, transmission noise or vibration, or improper TCC operation.	Automatic Transmission
PCM Power and Ground Check	On-Board Diagnostic (OBD) System Check.	Chassis Electrical
PCM Power and Ground Check	On-Board Diagnostic (OBD) System Check. PCM power and ground circuits OK. Data link voltage incorrect.	Chassis Electrical
On-Board Diagnostic (OBD) System Check	Engine starts and runs, no PCM codes set. Customer complains of harsh or soft shift, poor performance, delayed or no engagement into drive or reverse, transmission fluid leak, transmission noise or vibration, or improper TCC operation.	Automatic Transmission

Symptoms	Initial Diagnosis	Default Section(s)
Intermittents	1. On-board Diagnostic (OBD) system check. 2. Careful visual/physical inspections.	Chassis Electrical
Hard Starts	1. OBD system check. 2. ETC system check. 3. Sensors (ECT, MAP, MAF, TP) ; MAP output chart. 4. Fuel system electrical test, fuel system diagnosis. 5. Ignition system.	Engine Mechanical, Ignition System Check, Exhaust System Diagnosis

Symptoms	Initial Diagnosis	Default Section(s)
Surges and/or Chuggles	1. OBD system check. 2. ETC system check. 3. Heated oxygen sensors. 4. Fuel system diagnosis. 5. Ignition system.	Calibration ID/Service Bulletins, Ignition System Check, Generator Output, Exhaust System Diagnosis, 4L30-E System Test
Lack of Power, Sluggish or Spongy	1. OBD system check. 2. ETC system check. 3. Fuel system diagnosis. 4. Ignition system. 5. EGR operation. 6. EGR system check.	Refer to *Exhaust System* in *Engine Exhaust*, TCC Operation, Calibration ID/Service Bulletins
Detonation/Spark Knock	1. OBD system check. 2. Transmission range switch. 3. EGR operation. 4. EGR system check. 5. TCC operation. 6. Fuel system diagnosis. 7. Ignition system. 8. ION sensing module check.	TCC operation, Cooling System, Ignition System Check, Calibration ID/Service Bulletins
Rough, Unstable, or Incorrect Idle, Stalling	1. OBD system check. 2. ETC system check. 3. Fuel injector and fuel injector balance test. 4. EVAP emission canister purge valve check. 5. Ignition system. 6. EGR operation.	MAP Output Check, Throttle Linkage, EGR System Check, A/C Clutch Control Circuit Diagnosis, Crankcase Ventilation System, Calibration ID/Service Bulletins, Generator Output Voltage (refer to *Chassis Electrical*), Exhaust Diagnosis
Poor Fuel Economy	1. OBD system check. 2. Careful visual/physical inspection. 3. Ignition system. 4. Cooling system.	TCC Operation, Exhaust System (refer to *Engine Exhaust*)
Hesitation, Sag, Stumble	1. OBD system check. 2. ETC system check. 3. TP. 4. MAP output check. 5. Fuel system diagnosis. 6. Fuel injector and fuel injector balance test. 7. EVAP emission canister purge valve. 8. Ignition system.	EGR Operation, EGR System Check, Generator Output Voltage (refer to *Chassis Electrical*), Calibration ID/Service Bulletins, Ignition System Check
Cuts Out, Misses	1. OBD system check. 2. Cylinder balance test. 3. ETC system check.	Ignition System Check
Engine Cranks But Will Not Run	1. OBD system check.	Fuel System Electrical Diagnosis, Fuel System Diagnosis, Fuel Injector and Fuel Injector Balance Test.


Symptoms	Initial Diagnosis	Default Section(s)
Excessive Exhaust Emissions or Odors	1. OBD system check. 2. Emission test. 3. Cooling system. 4. Fuel system diagnosis. 5. Fuel injector and fuel injector balance test. 6. EVAP emission canister purge valve. 7. Crankcase ventilation system. 8. Ignition system. 9. MAP output check.	EGR System Check, Exhaust Diagnosis, Calibration ID/Service Bulletins
Dieseling, Run-On	1. OBD system check. 2. Careful visual/physical inspection. 3. Fuel system diagnosis.	—
Backfire	1. OBD system check. 2. Ignition system. 3. Fuel system diagnosis. 4. Fuel injector and fuel injector balance test. 5. EGR operation, EGR system check.	Exhaust System Diagnosis, Intake Casting Flash, Ignition System Check
Misfire	1. OBD system check. 2. Ignition system. 3. Fuel system diagnosis. 4. Fuel injector and fuel injector balance test.	Vibrations, Transmission, Driveshaft and Axle
Catalyst Monitor	1. OBD system check. 2. Careful visual/physical inspection. 3. Heated oxygen sensors.	Exhaust System
Fuel Trim	1. OBD system check. 2. Careful visual/physical inspection. 3. Fuel system diagnosis. 4. Heated oxygen sensors, MAF sensors.	Exhaust System Intake Air System
Evaporative Emissions	1. OBD system check. 2. Careful visual/physical inspection. 3. Fuel system diagnosis.	—
Heated Oxygen Sensors	1. OBD system check. 2. Careful visual/physical inspection.	Exhaust System

On Vehicle Service Crankshaft Position (CKP) Sensor

Removal Procedure

1. Disconnect the negative battery cable.
2. Disconnect the electrical connector to the CKP sensor.
3. Remove one bolt and the CKP sensor from the right side of the engine block, just behind the mount.

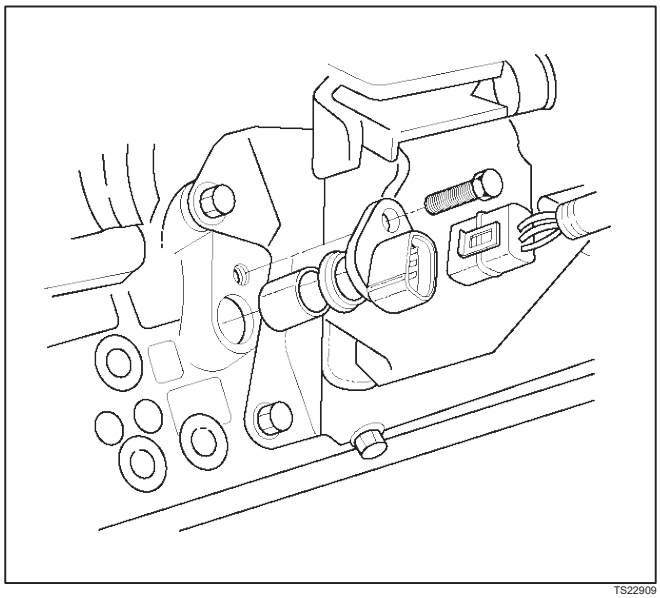NOTE: Use caution to avoid any hot oil that might drip out.



TS22909

Inspection Procedure

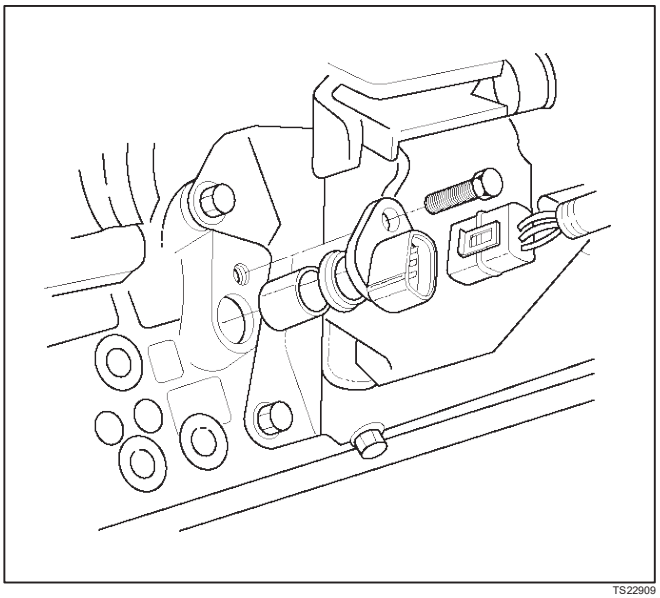
1. Inspect the sensor O-ring for cracks or leaks.
2. Replace the O-ring if it is worn or damaged.
3. Lubricate the new O-ring with engine oil.
4. Install the lubricated O-ring.

Installation Procedure

1. Install the CKP sensor in the engine block.
2. Install the CKP sensor mounting bolt.

Tighten

- **Tighten the mounting bolt to 9 N·m (78 lb in.).**



TS22909

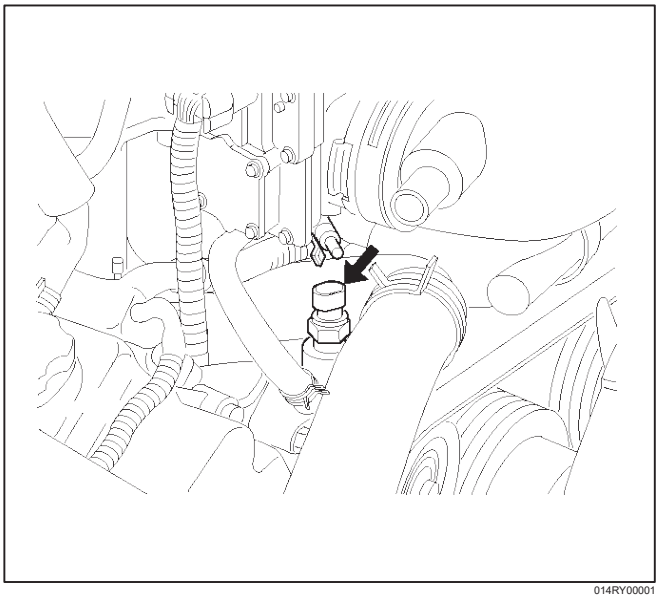
3. Connect the electrical connector to the CKP sensor.
4. Connect the negative battery cable.

Engine Coolant Temperature (ECT) Sensor

Removal Procedure


NOTE: Care must be taken when handling the engine coolant temperature (ECT) sensor. Damage to the ECT sensor will affect proper operation of the fuel injection system.

1. Disconnect the negative battery cable.
2. Drain the radiator coolant. Refer to *Draining and Refilling Cooling System* in *Engine Cooling* section.
3. Disconnect the electrical connector.



014RY00001

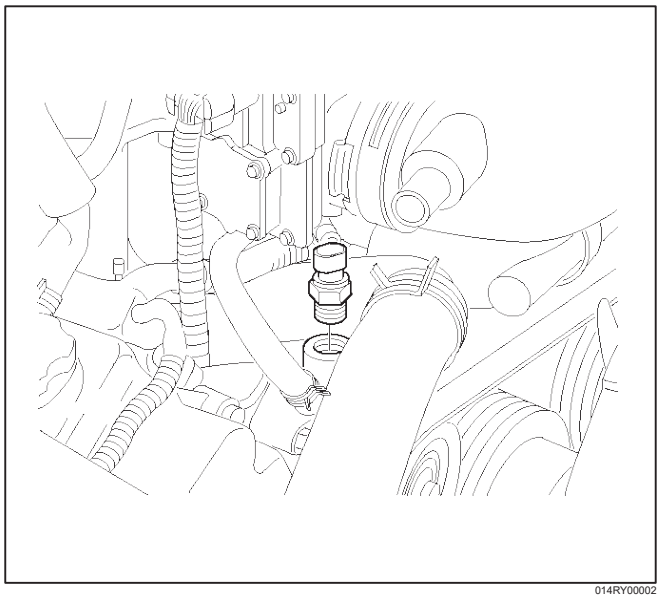4. Remove the ECT sensor from the coolant crossover.




014RY00002

Installation Procedure

1. Apply sealer or the equivalent to the threads of the ECT sensor.
2. Install the ECT sensor in the coolant crossover.


Tighten

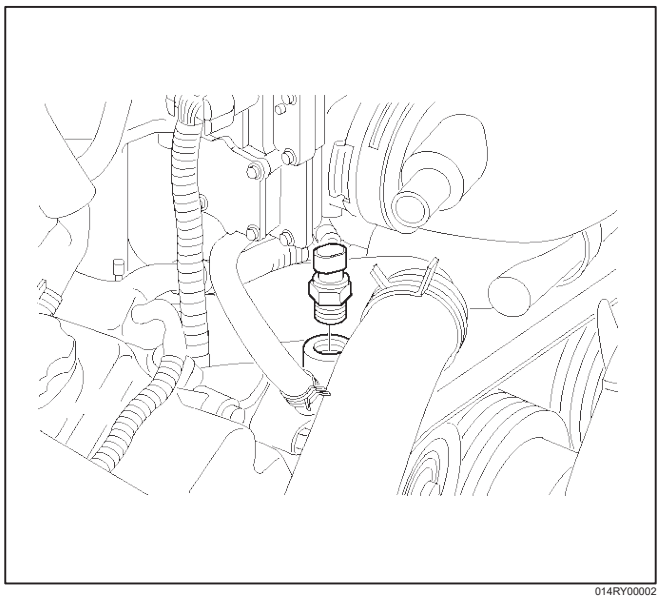- **Tighten the ECT sensor to 30 N·m (22 lb ft.).**



014RY00002

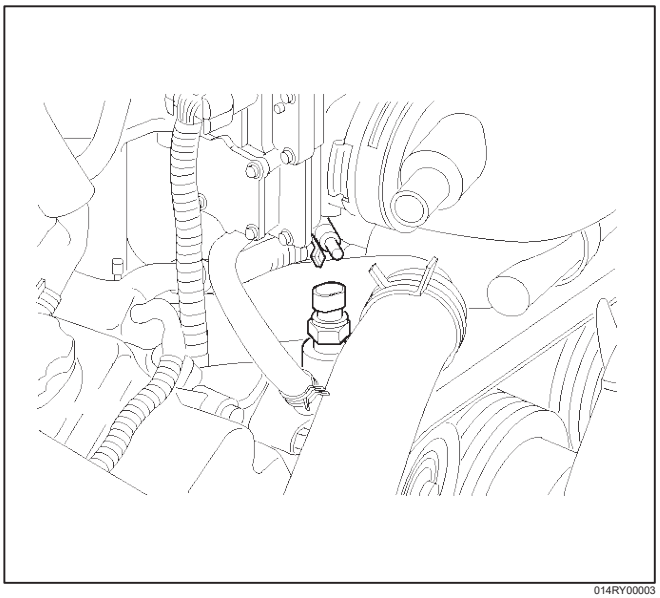3. Connect the electrical connector.




014RY00003

4. Fill the radiator with coolant. Refer to *Draining and Refilling Cooling System* in *Engine Cooling* section.
5. Connect the negative battery cable.

Heated Oxygen Sensor (HO2S)


Removal Procedure

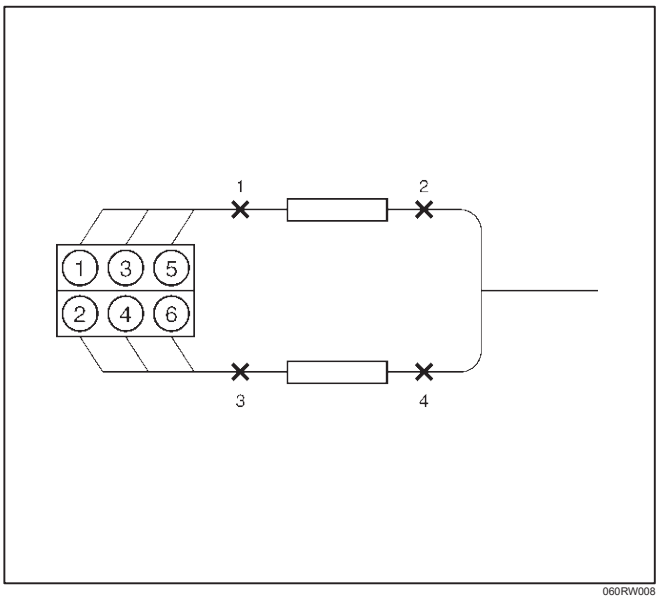1. Disconnect the negative battery cable.
2. Locate the four oxygen sensors.




060RW008

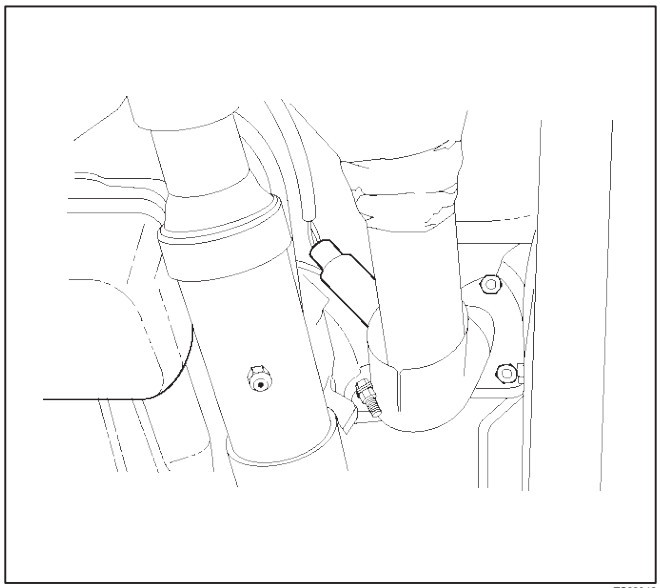
- Bank 1 sensor 1 is mounted on the exhaust pipe ahead of the right-hand catalytic converter.


TS22912

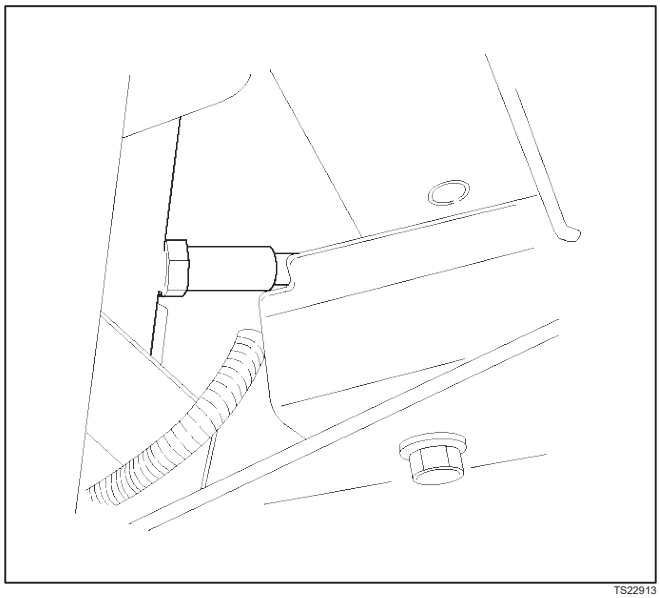
- Bank 1 sensor 2 is mounted behind the right-hand catalytic converter.


TS22913

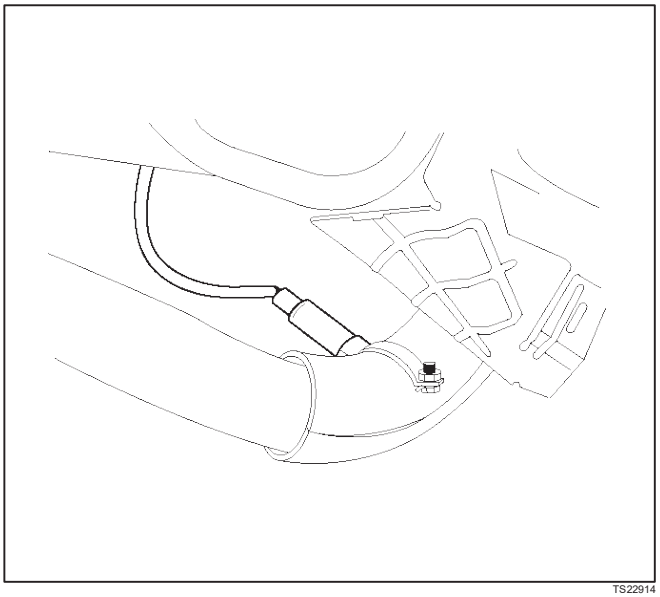
- Bank 2 sensor 1 is mounted on the exhaust pipe ahead of the left-hand catalytic converter.


TS22914

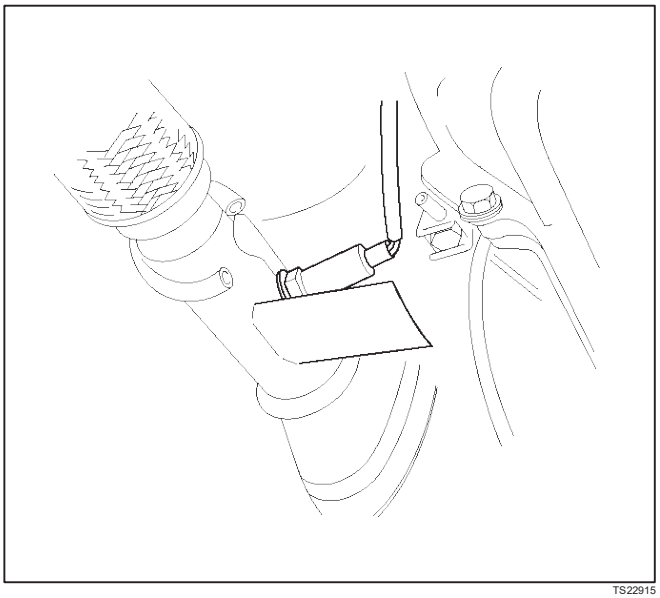- Bank 2 sensor 2 is mounted behind the left-hand catalytic converter.


TS22915

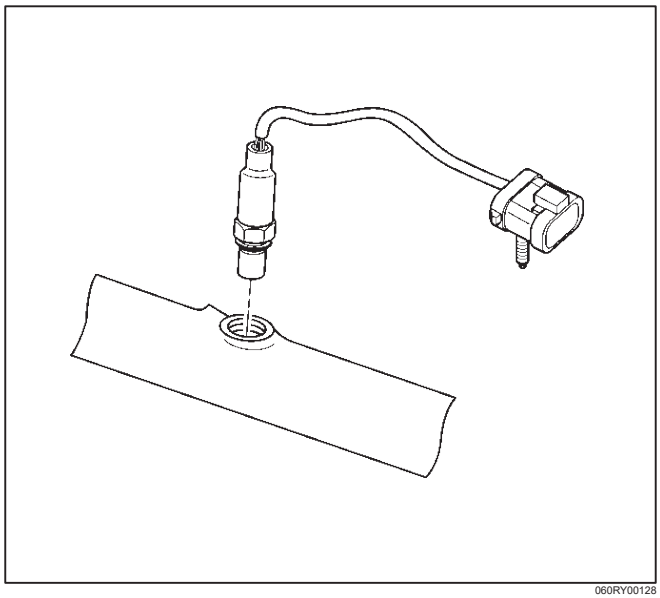
3. Disconnect the pigtail from the wiring harness.


060RY00128

IMPORTANT: The pigtail is permanently attached to the sensor. Be careful not to pull the wires out.

NOTE: Do not use a torch to remove an HO2S unless the sensor is being replaced. Using a torch could damage the sensor.

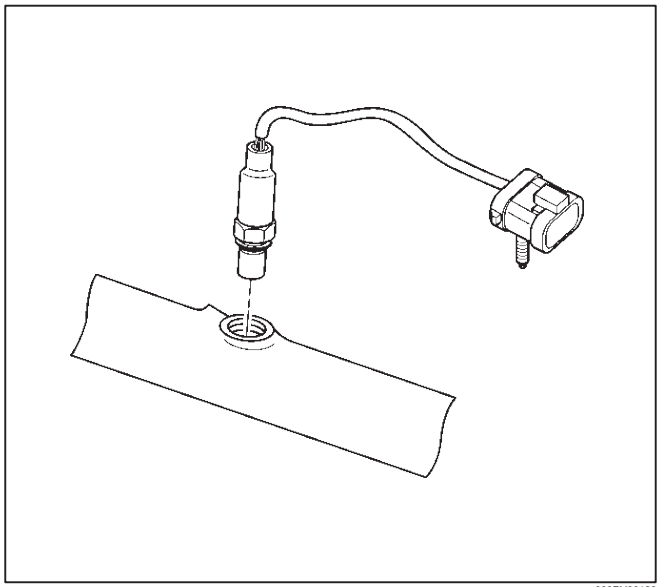
4. Remove the sensor from the exhaust pipe.
   - Because of the expansion and contraction of the metal in the exhaust system over time, this may be difficult if the engine temperature is below 48°C (120°F).


060RY00128

Inspection Procedure

All four sensors are identical. Inspect each in the same way.

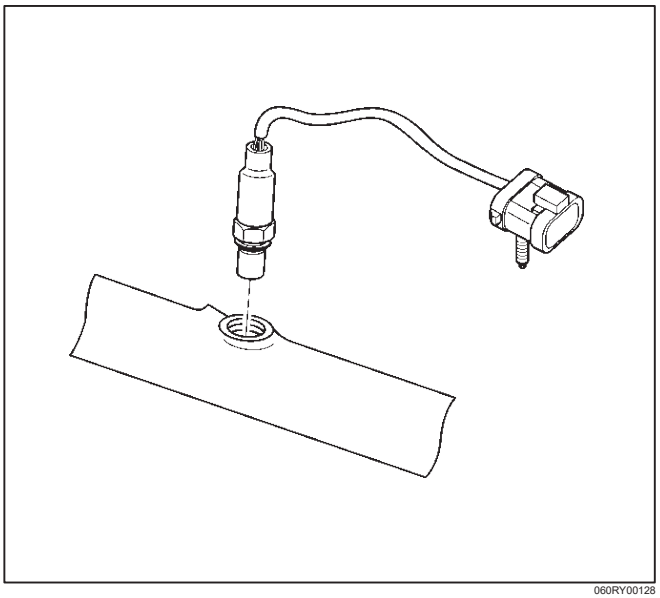1. Inspect the pigtail and the electrical connector for grease, dirt, corrosion, and bare wires or worn insulation.
2. Inspect the louvered end of the sensor for grease, dirt, or other contaminations.


060RY00128

Installation Procedure

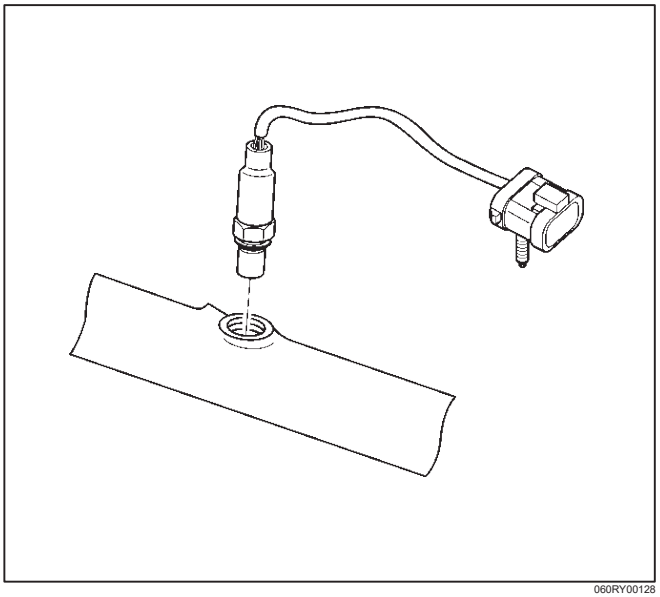
IMPORTANT:

- There is a special anti-seize compound on the HO2S threads. This compound consists of glass beads suspended in a liquid graphite solution. The graphite burns away with engine heat, but the glass beads will remain, making the sensor easier to remove.
- New or service sensors will already have the compound applied to the threads. If a sensor is removed and is to be reinstalled for any reason, the threads must have anti-seize compound applied.

1. Apply anti-seize compound or the equivalent to the threads of the oxygen sensor, if necessary.
2. Install the oxygen sensor on the exhaust pipe in its original position.

Tighten

- **Tighten the oxygen sensor to 55 N·m (40 lb ft.).**



060RY00128

3. Connect the pigtail to the wiring harness.
4. Connect the negative battery cable.

Intake Air Temperature (IAT) Sensor

Removal Procedure

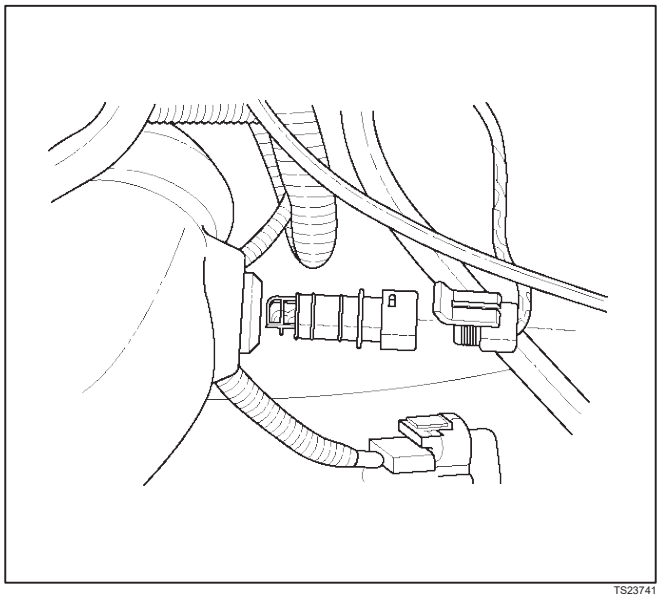
1. Disconnect the negative battery cable.
2. Remove the engine cover
3. The IAT sensor is located in the intake air duct, behind the throttle body.
4. Disconnect the electrical connector from the IAT sensor.


TS23741

5. Remove the IAT sensor from the intake air duct by using a rocking motion while pulling the sensor.

Installation Procedure

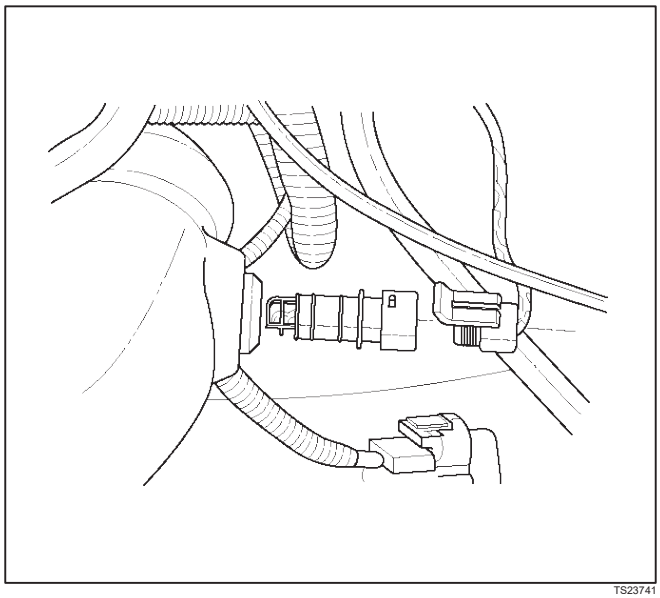1. Install the IAT sensor into the grommet in the intake air duct.
2. Correct the IAT electrical connector.



TS23741

3. Install the engine cover.
4. Connect the negative battery cable.

ION Sensing Module

Removal Procedure

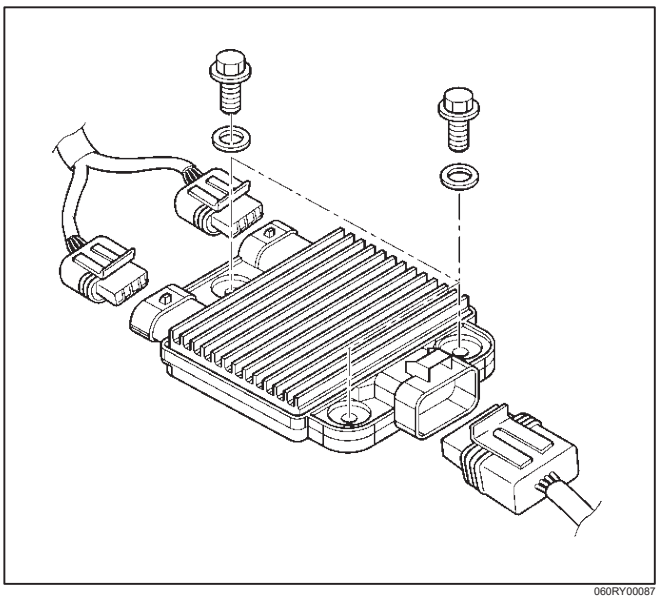1. Disconnect the negative battery cable.
2. Disconnect the ION sensing module connector.
3. Remove the bolts and the ION sensing module from the common chamber.


060RY00087

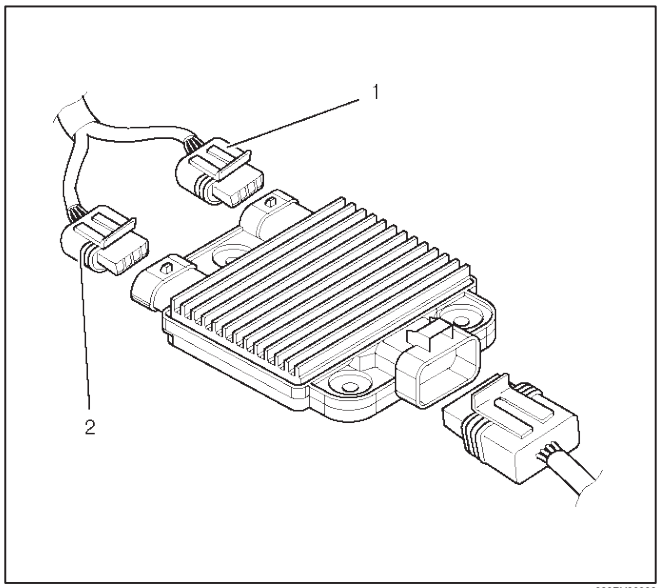
Installation Procedure

1. Install the ION sensing module on the common chamber with the bolts.

Tighten

- **Tighten the ION sensing module to 4 N·m (35 lb in.).**

2. Connect the ION sensing module connectors as shown in the illustration.



060RY00003

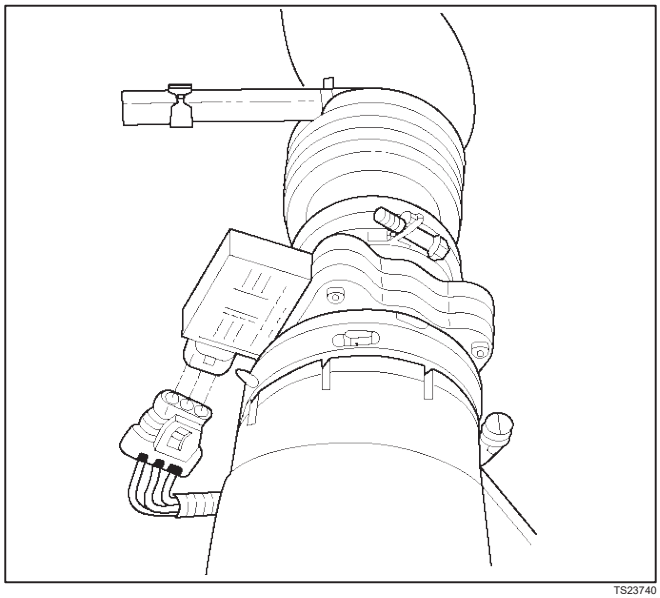
Legend
(1) Green Color Connector
(2) Blue Color Connector

3. Connect the negative battery cable.


Mass Air Flow (MAF) Sensor

Removal Procedure

1. Disconnect the negative battery cable.
2. Disconnect the electrical connector from the MAF sensor.



TS23740

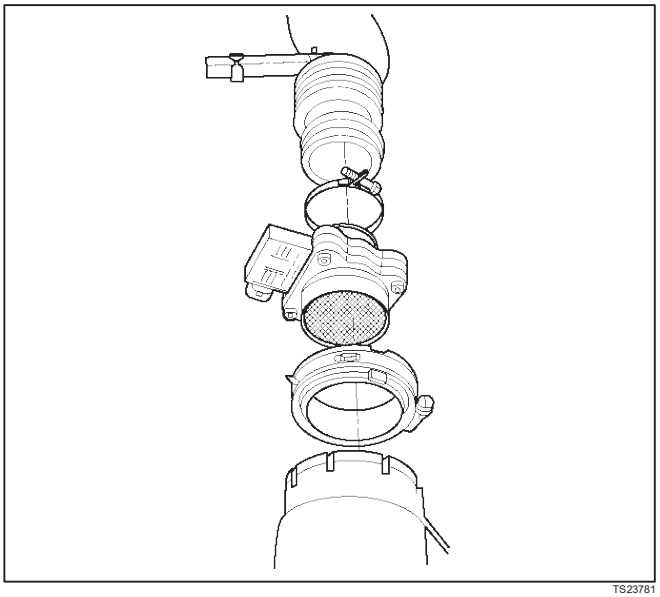3. Loosen the clamps which secure the intake air duct and the air cleaner to the MAF sensor.
4. Remove the intake air duct from the MAF sensor.
5. Remove the MAF sensor from the air cleaner.


TS23781

Installation Procedure

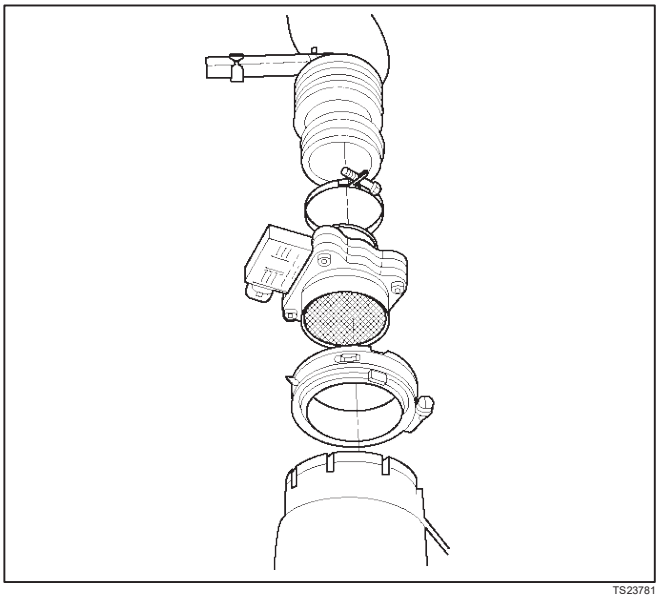1. Install the MAF sensor on the air cleaner with the clamp.
2. Install the intake air duct and the clamp on the MAF sensor.



TS23781

3. Tighten the clamps to secure the MAF sensor to the intake air duct and the air cleaner.
4. Connect the MAF electrical connector.
5. Connect the negative battery cable.


Manifold Absolute Pressure (MAP) Sensor

Removal Procedure

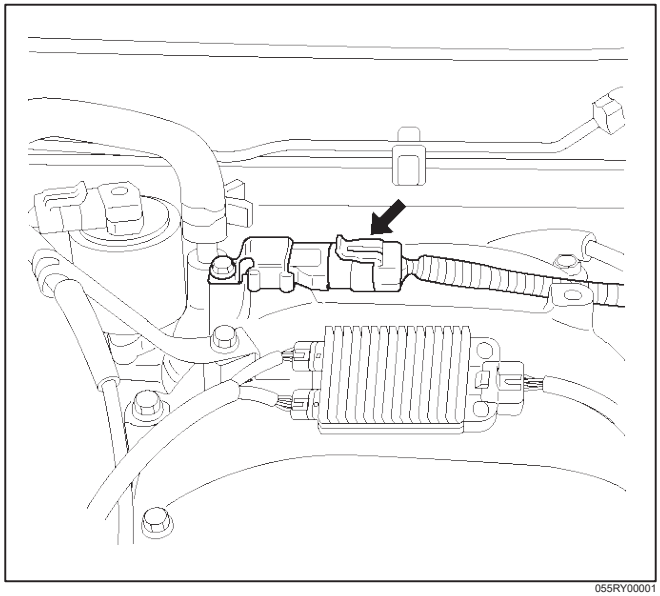1. Disconnect the negative battery cable.
2. Disconnect the electrical connector from the MAP sensor.



055RY00001

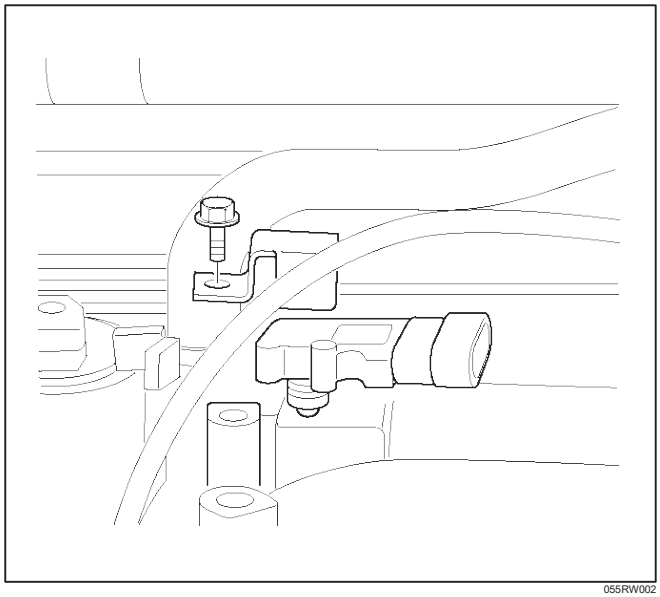3. Remove the bolt securing the MAP sensor to the mounting bracket on the common chamber.
4. Remove the MAP sensor from the mounting bracket.


055RW002

Installation Procedure

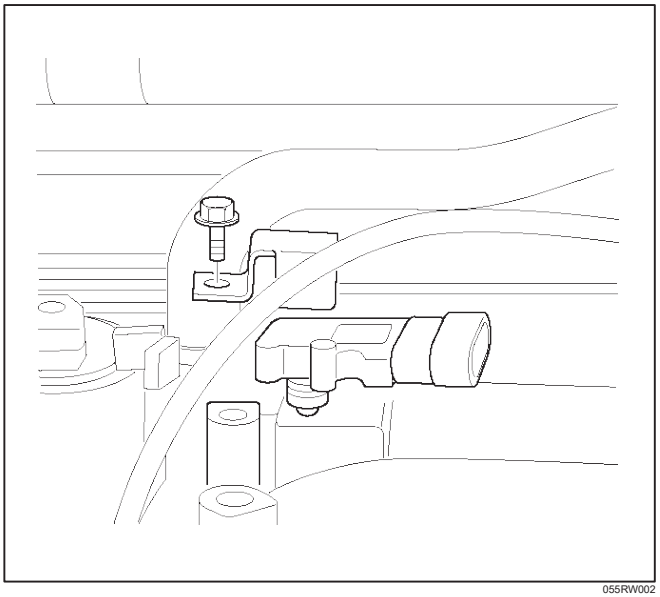1. Install the MAP sensor in the mounting bracket.



055RW002

2. Install the mounting bracket retaining bolt on the common chamber.

Tighten

- **Tighten the bolt to 20 N·m (12 lb ft.).**

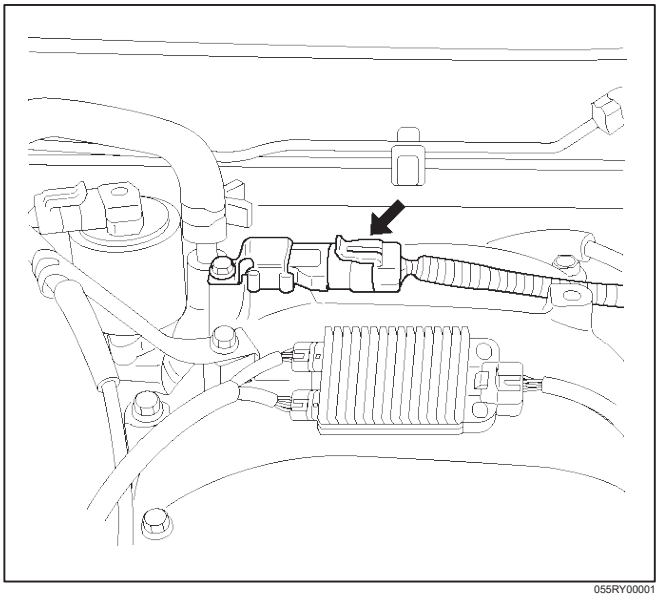3. Connect the MAP electrical connector.


055RY00001

4. Connect the negative battery cable.

Malfunction Indicator Lamp (MIL)

Removal and Installation Procedure

Refer to Warning light bulb, indicator light valve, illumination light bulb, A/T indicator light bulb in Meter and Gauge.

Reduced Power Lamp

The reduced power lamp (RPL) turns on when the ignition key is moved to the ON position. It should turn off in approximately 3 seconds or immediately after the engine starts.
If the RPL turns on during vehicle operation, a vehicle system failure resulting in reduced engine output is indicated.
If both the reduced RPL and the check engine light turn on, a serious problem affecting vehicle performance is indicated.
Refer to the *OBD system check NO and RPL "ON" steady* in this manual.

Powertrain Control Module (PCM)

Service Precaution

NOTE: To prevent possible electrostatic discharge damage to the PCM, do not touch the connector pins or soldered components on the circuit board.

Electrostatic Discharge (ESD) Damage

Electronic components used in the control systems are often designed to carry very low voltage. Electronic components are susceptible to damage caused by electrostatic discharge. Less than 100 volts of static electricity can cause damage to some electronic components. By comparison, it takes as much as 4,000 volts for a person to even feel the zap of a static discharge.
There are several ways for a person to become statically charged. The most common methods of charging are by friction and by induction. An example of charging by friction is a person sliding across a car seat.
Charging by induction occurs when a person with well insulated shoes stands near a highly charged object and momentarily touches ground. Charges of the same polarity are drained off leaving the person highly charged with the opposite polarity. Static charges can cause damage, therefore, it is important to use care when handling and testing electronic components.

NOTE: To prevent possible Electrostatic Discharge damage, follow these guidelines:

- Do not touch the control module connector pins or soldered components on the control module circuit board.
- Do not open the replacement part package until the part is ready to be installed.
- Before removing the part from the package, ground the package to a known good ground on the vehicle.
- If the part has been handled while sliding across the seat, or while sitting down from a standing position, or while walking a distance, touch a known good ground before installing the part.

NOTE: To prevent internal PCM damage, the ignition must be in the "OFF" position in order to disconnect or reconnect power to the PCM (for example: battery cable, PCM pigtail, PCM fuse, jumper cables, etc.).

IMPORTANT: When replacing the production PCM with a service PCM, it is important to transfer the broadcast code and production PCM number to the service PCM label. This will allow positive identification of PCM parts throughout the service life of the vehicle. Do not record this information on the metal PCM cover.

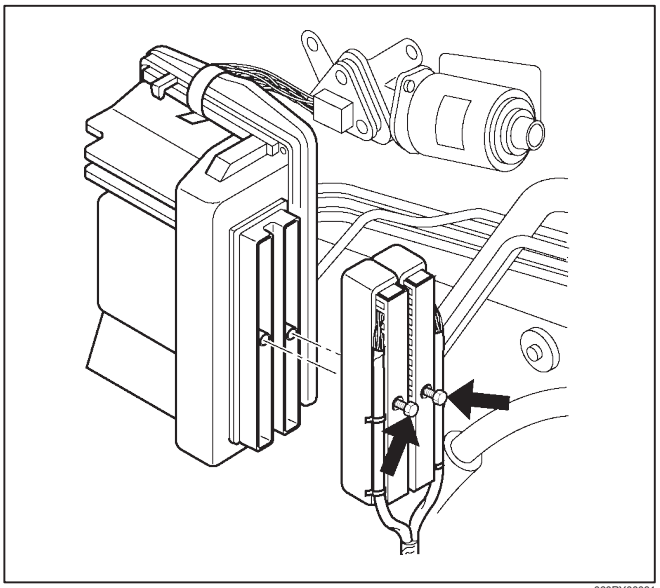
IMPORTANT: The ignition should always be in the "OFF" position in order to install or remove the PCM connectors.

Service of the PCM should normally consist of either replacement of the PCM or EEPROM programming. If the diagnostic procedures call for the PCM to be replaced, the PCM should be checked first to ensure it is the correct part. If it is, remove the faulty PCM and install the new service PCM.

The service PCM EEPROM will not be programmed. DTC P0601 indicates the check sum error.


Removal Procedure

1. Disconnect the negative battery cable.
2. Block the wheels.
3. Remove the two screws from the PCM electrical connectors.
4. Disconnect the PCM electrical connectors.




060RY00031

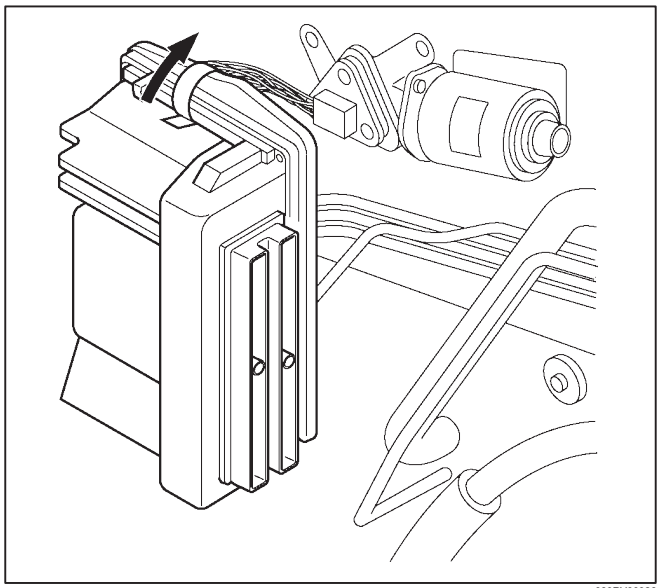5. After removing the clip which fixes the PCM to the bracket, remove PCM.



060RY00026

Installation Procedure

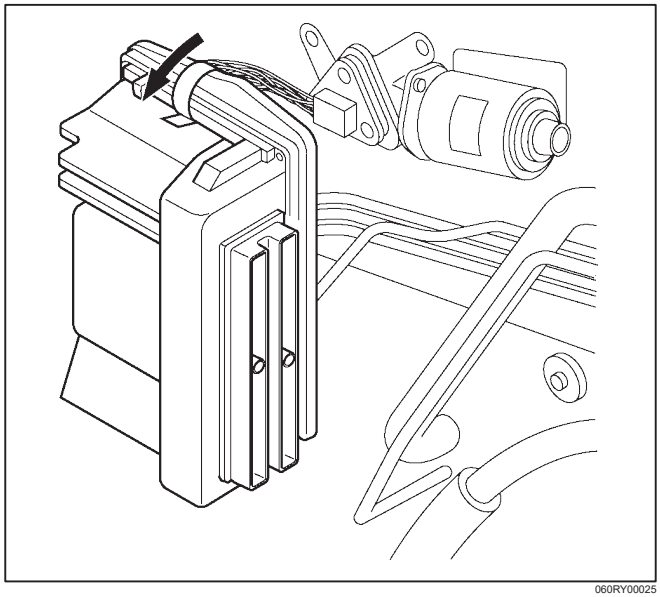1. Install the PCM to bracket and fix with the clip.


060RY00025

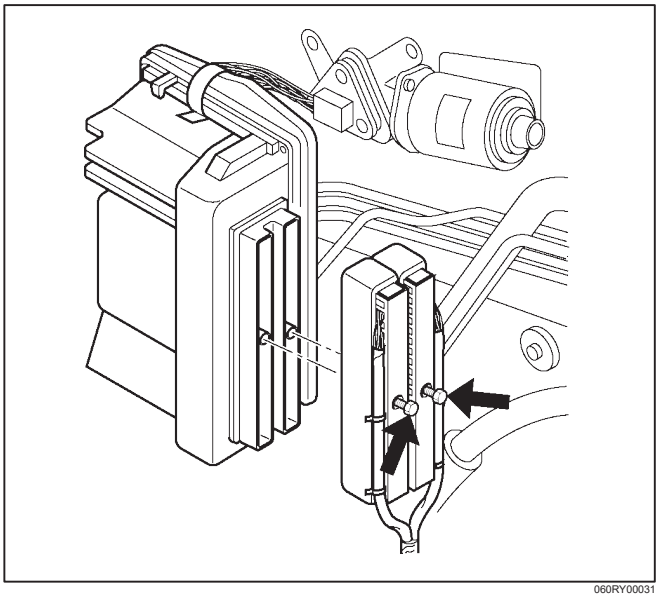2. Connect the PCM electrical connectors.
3. Install the two screws to PCM electrical connectors.


060RY00031

EEPROM

General Description

The Electronically Erasable Programmable Read Only Memory (EEPROM) is a permanent memory that is physically soldered within the PCM. The EEPROM contains program and calibration information that the PCM needs to control powertrain operation.

EEPROM Programming

1. Set-up – Ensure that the following conditions have been met:
   - The battery is fully charged.
   - The ignition is “ON.”
   - The Vehicle Interface Module cable connection at the DLC is secure.
2. Program the PCM using the latest software matching the vehicle. Refer to up-to-date Techline equipment user’s instructions.
3. If the PCM fails to program, proceed as follows:
   - Ensure that all PCM connections are OK.
   - Check the Techline equipment for the latest software version.
   - Attempt to program the PCM. If the PCM still cannot be programmed properly, replace the PCM. The replacement PCM must be programmed.

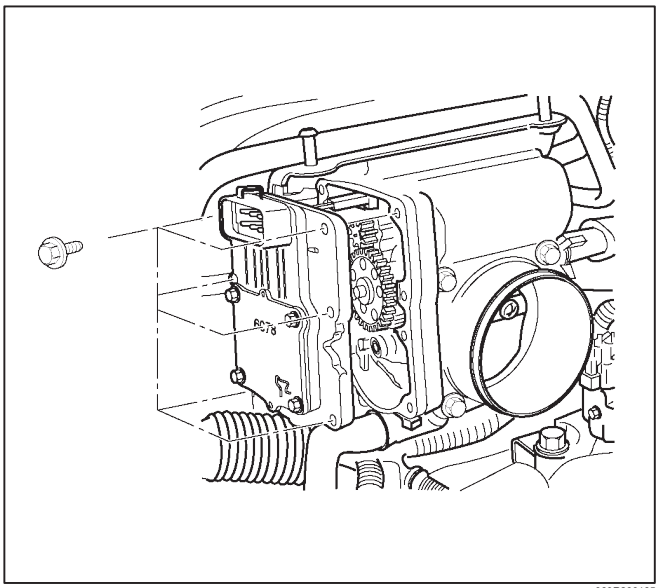
Functional Check

1. Perform the On-Board Diagnostic System Check.
2. Start the engine and run for one minute.
3. Scan for DTCs using the Tech 2.

Throttle Position (TP) Sensor

Removal Procedure

1. Disconnect the negative battery cable.
2. Disconnect the TPS electrical connector.
3. Remove the bolts and the TP sensor from the throttle body.



060R200185

NOTE: Do not clean the TP sensor by soaking it in solvent. The sensor will be damaged as a result.

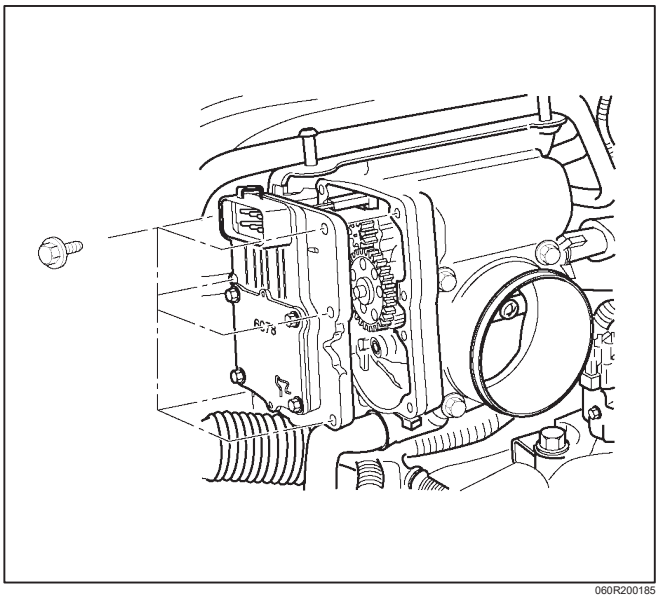
Function Check

Use a Tech 2 to check the TP sensor output voltage at closed throttle.

- The voltage should be TP1 about 0.4V, TP2 about 4.6V and TP3 about 4.6V.
- If the reading is abnormal value, check the throttle shaft to see if it is binding.

Installation Procedure

1. Install the TP sensor on the throttle body with the bolts.



060R200185

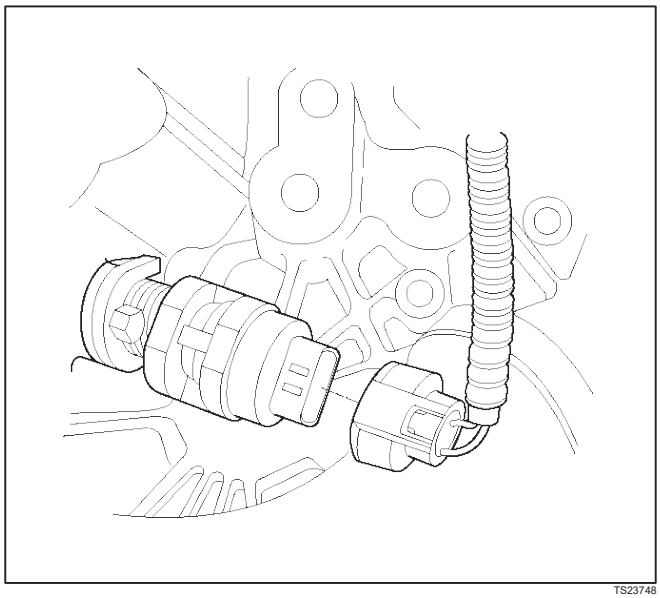
2. Connect the TP electrical connector.
3. Install the negative battery cable.

Vehicle Speed Sensor (VSS)

Removal Procedure


CAUTION: The VSS is located on the right side of the transfer case just ahead of the rear propeller shaft and very close to the exhaust pipes for 4WD and on the extension cover for 2WD. Be sure that the exhaust pipes are cool enough to touch before trying to remove the VSS. If the pipes are hot, you could be burned.

1. Disconnect the negative battery cable.
2. Disconnect the VSS electrical connector.


TS23748

3. Remove the bolt and the clamp securing the VSS in place.

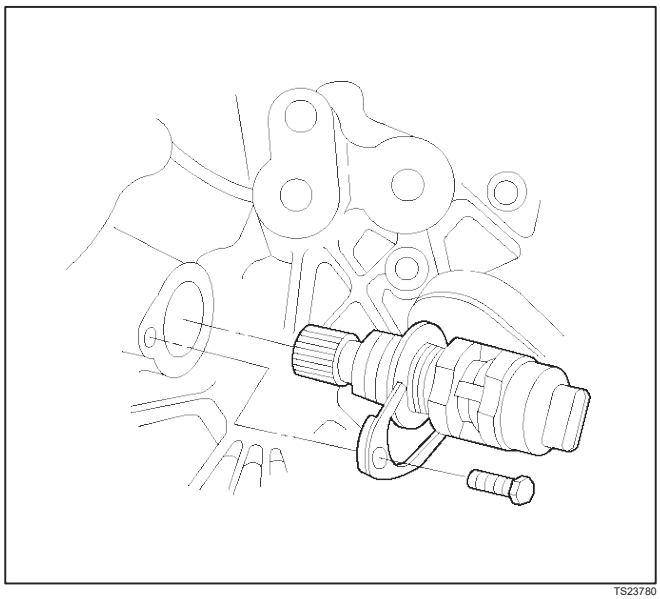IMPORTANT: Have a container ready to catch any fluid that leaks out when the VSS is removed from the transfer case for 4WD and on the extension cover for 2WD.


TS23780

4. Remove the VSS from the transfer case by wiggling it slightly and pulling it straight out.

Inspection Procedure

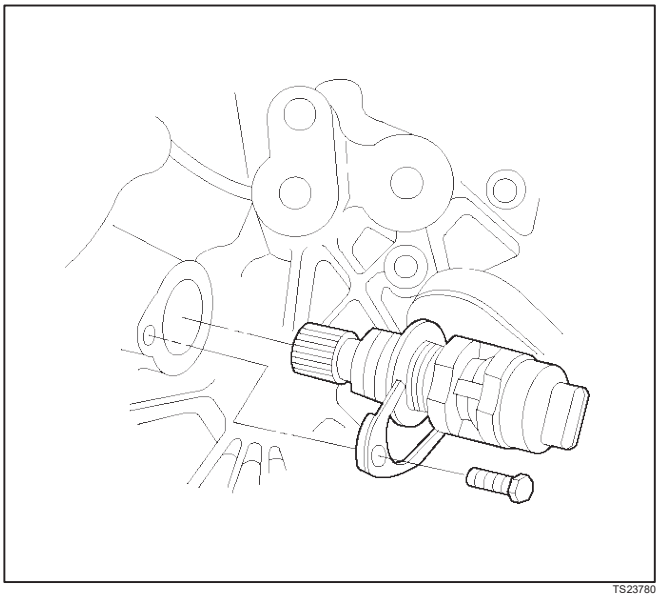
1. Inspect the electrical connector for signs of corrosion or warping. Replace the VSS if the electrical connector is corroded or warped.
2. Inspect the VSS driven gear for chips, breaks, or worn condition. Replace the VSS if the driven gear is chipped, broken or worn.
3. Inspect the O-ring for wear, nicks, tears, or looseness. Replace the O-ring if necessary.

Installation Procedure


1. Install the VSS in the transfer case with the notch for the connector facing the rear.
2. Secure the VSS in place with the clamp and the bolt.

Tighten

- **Tighten the bolt to 16 N·m (12 lb ft.).**


TS23780

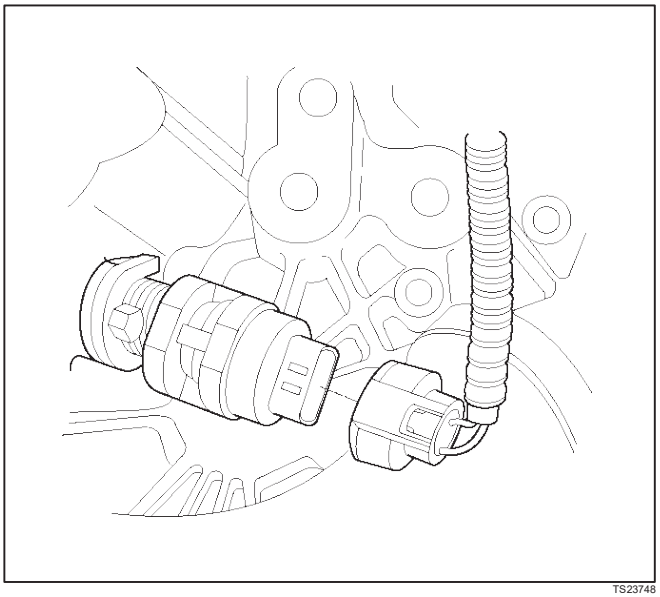3. Connect the VSS electrical connector.



TS23748

4. Check the transfer case oil level. Add fluid if necessary.
5. Connect the negative battery cable.


Air Cleaner/Air Filter

Removal Procedure

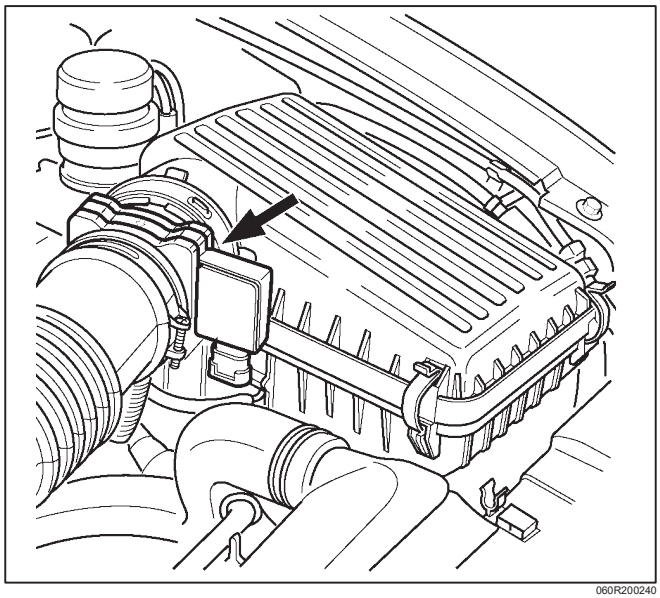1. Loosen the clamp between the air cleaner lid and the mass air flow sensor.


060R200240

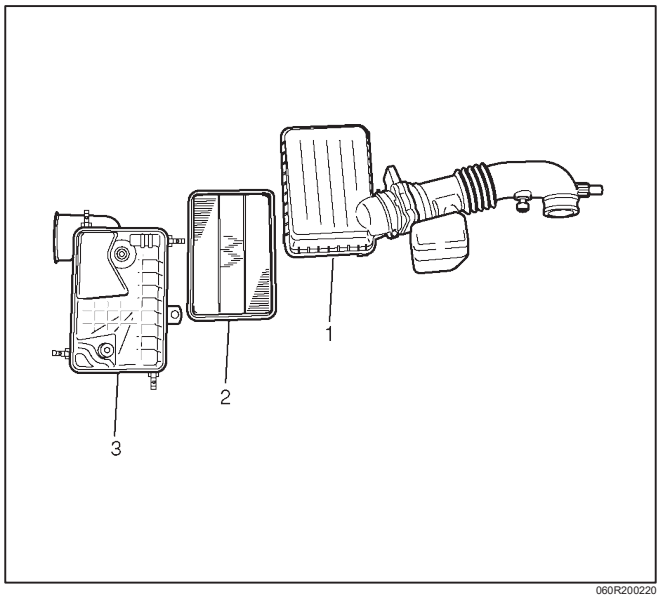2. Release the four latches securing the lid to the air cleaner housing.
3. Remove the air cleaner lid.
4. Remove the air filter element.
5. Remove the retaining bolts and the air cleaner housing from the vehicle.




060R200220

Legend

(1) Air Cleaner Lid
(2) Air Filter Element
(3) Air Cleaner Housing

Installation Procedure

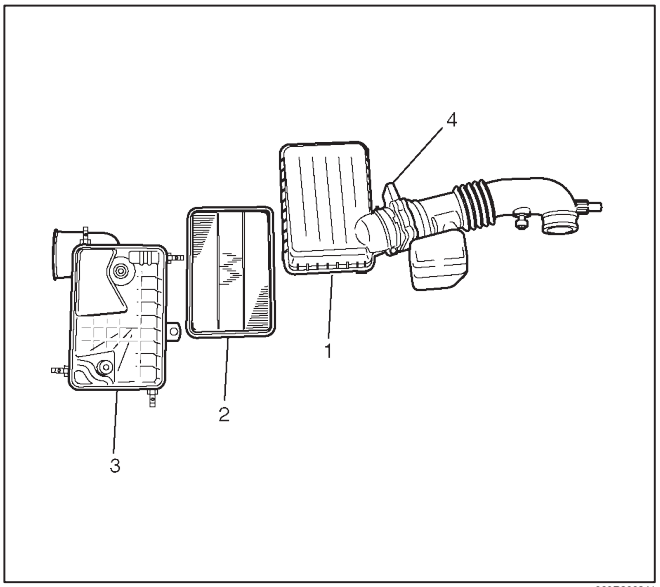1. Install the air cleaner housing in the vehicle with the retaining bolts.
2. Install the air filter element in the air cleaner housing.
3. Install the air cleaner lid on the MAF sensor and the air cleaner housing.



060R200241

Legend

(1) Air Cleaner Lid
(2) Air Filter Element
(3) Air Cleaner Housing
(4) Mass Air Flow Sensor

4. Tighten the clamp and secure the four latches between the lid and the air cleaner housing.

Common Chamber

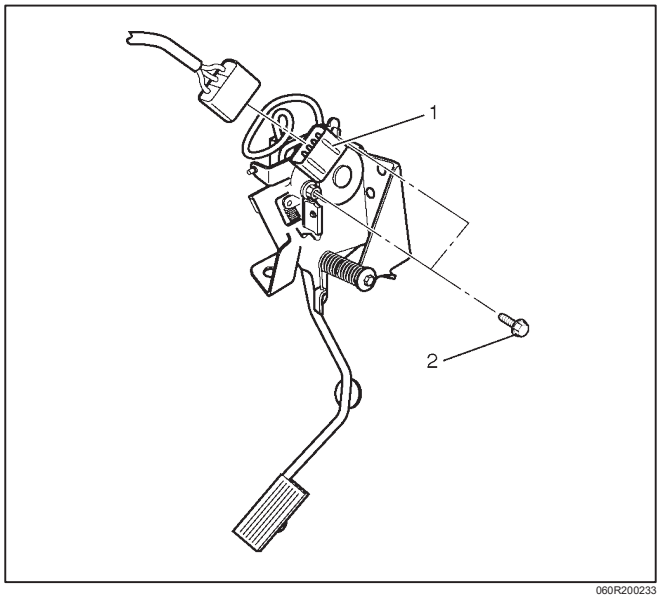
Removal and Installation Procedure

Refer to Common Chamber in Engine Mechanical section.

Accelerator Pedal Replacement

Removal Procedure

1. Disconnect the negative battery cable.
2. Disconnect the electrical harness from the accelerator position sensor.




060R200233

Legend

(1) Accelerator Position Sensor
(2) Accelerator Pedal Assembly

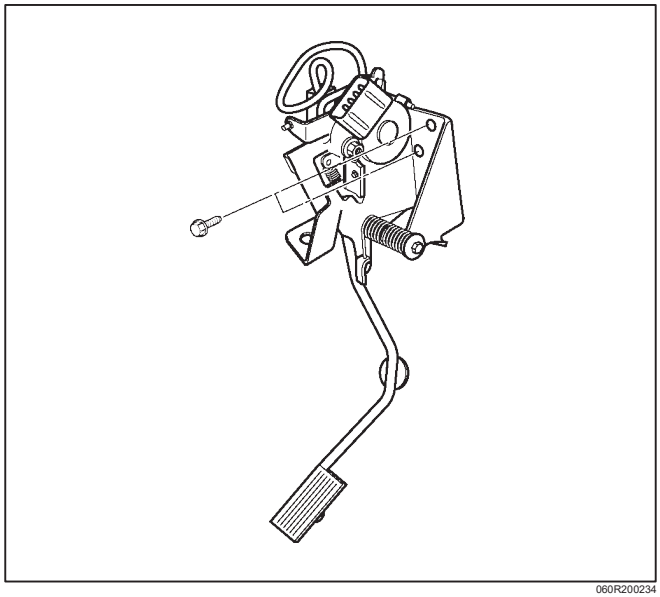3. Remove the two screws from the accelerator pedal assembly.



060R200234

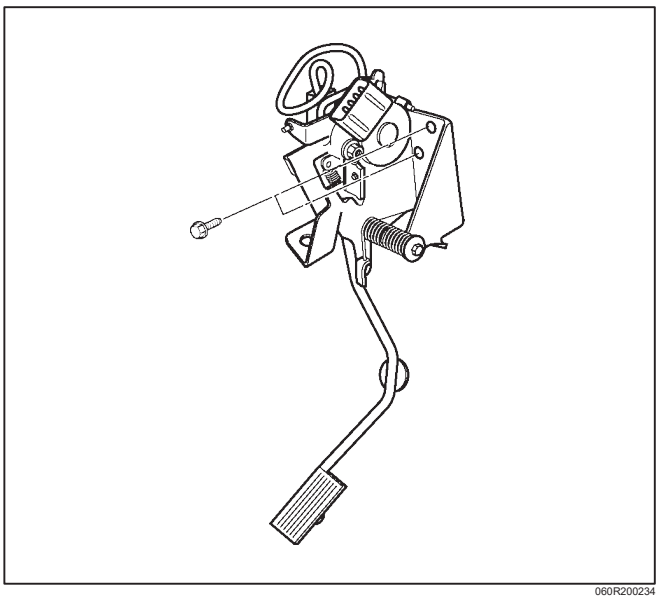
4. Remove the accelerator pedal assembly from the bulkhead.

Installation Procedure

1. Install the accelerator pedal assembly on the bulkhead.
2. Install the two screws to the accelerator pedal assembly.


Tighten

- **Tighten the screws to 22 N·m (16 lb ft.).**



060R200234

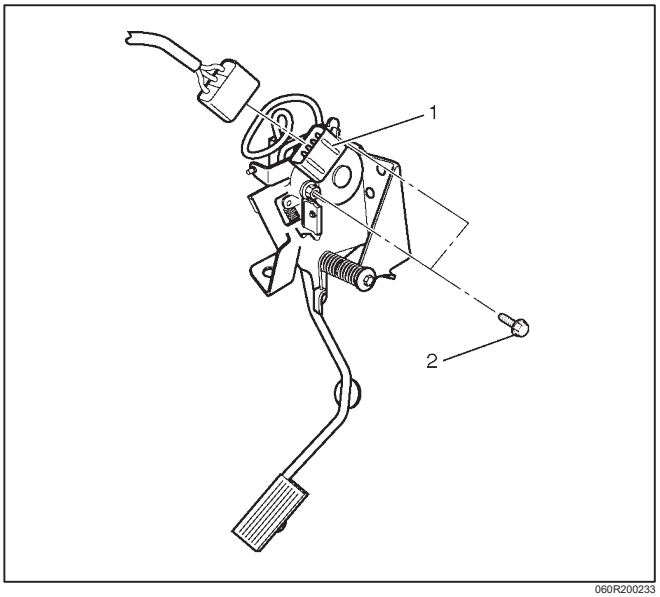3. Connect the electrical harness to the accelerator position sensor.



060R200233

Legend

(1) Accelerator Position Sensor
(2) Accelerator Pedal Assembly

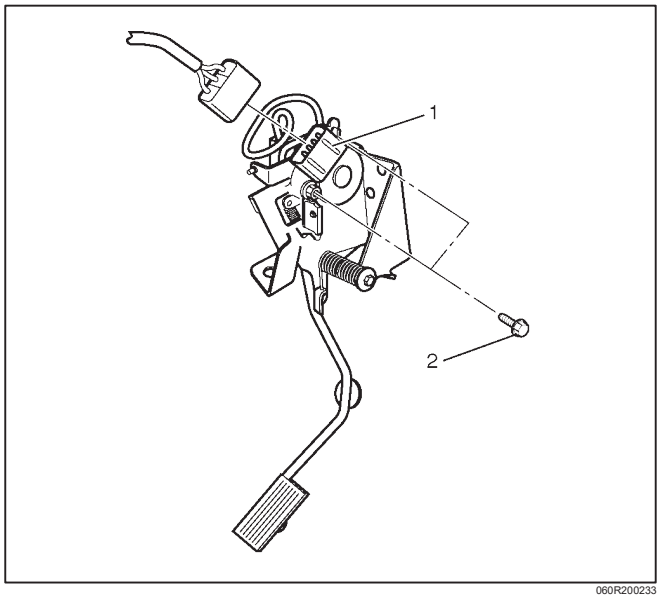
4. Install the negative battery cable.

Accelerator Position Sensor Replacement

CAUTION: Remove the Accelerator (A) pedal assembly as a unit to have it serviced. Do not remove the Accelerator Position (AP) sensor on the A pedal. If the AP sensor is removed for emergency cause, refer to following items as necessary.

Removal Procedure


1. Disconnect the negative battery cable.
2. Disconnect the electrical harness from the AP sensor.



060R200233

Legend
(1) AP Sensor
(2) A Pedal Assembly

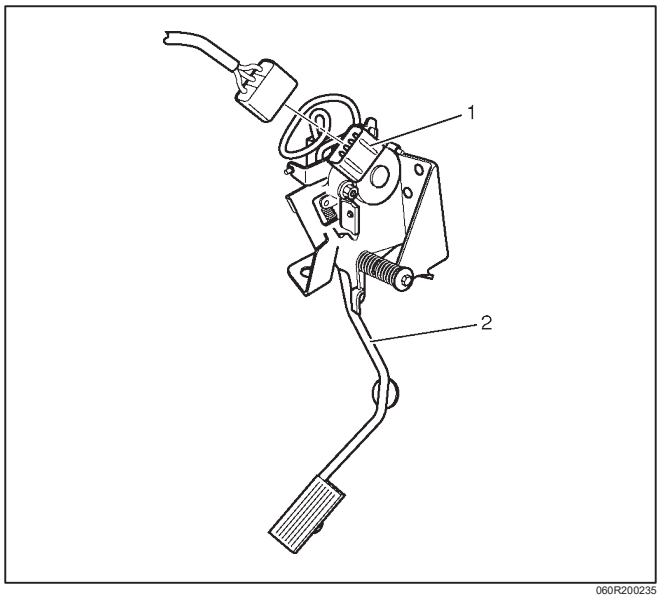3. Remove the AP sensor.



060R200235

Legend
(1) AP Sensor
(2) AP Screw

4. Remove all grease residues from the Accelerator Position Sensor mounting
5. Clean all connector pins with contact cleaner. Use LOCTITE® / Permatex Electrical Contact Cleaner, or equivalent.

NOTE: Do not use brake cleaner or carburetor spray.

Installation Procedure

1. Install the accelerator position (AP) sensor to bolts with accelerator (A) pedal.
2. Connect the connector to AP sensor.
3. Install the negative battery cable.

Accelerator Position Sensor Adjustment

AP sensor is controled three maltiple control system, and adjust the idle position and WOT position are between A and B for AP sensor 1, AP sensor 2, and AP sensor 3. Refer to *"How to adjust for AP sensor".*


Removal Procedure

1. Disconnect the negative battery cable.
2. Disconnect the electrical harness from the AP sensor.

How To Adjust For AP Sensor


1. Connect the Tech 2 to DLC on vehicle.
2. Ignition "ON," engine "OFF.".
3. Display the APS date list. Check the following item for AP position (%).

	AP position (%)	
	Idle position A	WOT position B
APS1	11 – 15%	85 – 89%
APS2	85 – 89%	11 – 15%
APS3	85 – 89%	32 – 36%

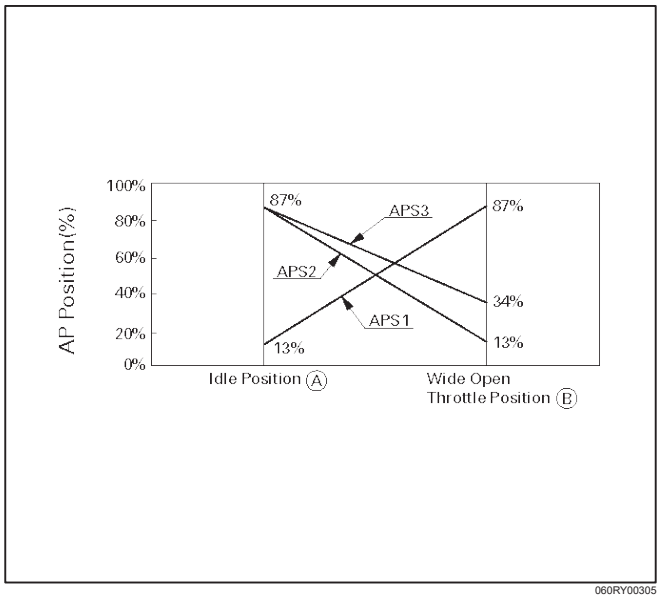

060RY00305

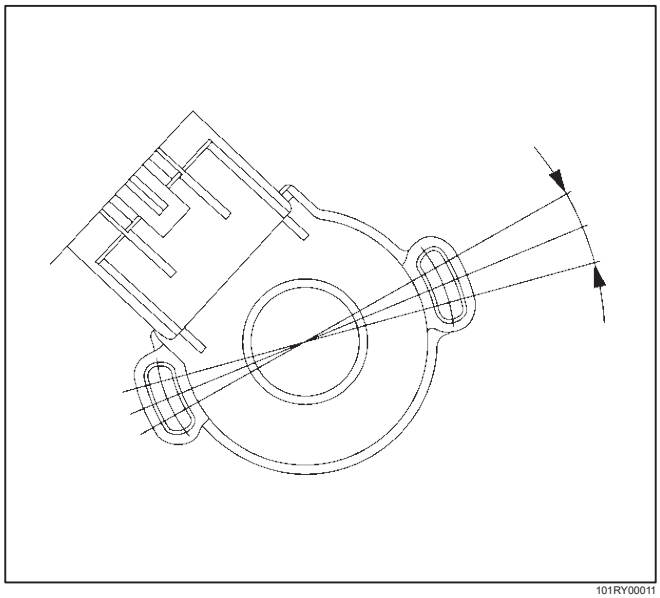
4. If the problem was found, adjust as necessary.


101RY00011

Fuel Filler Cap

General Description

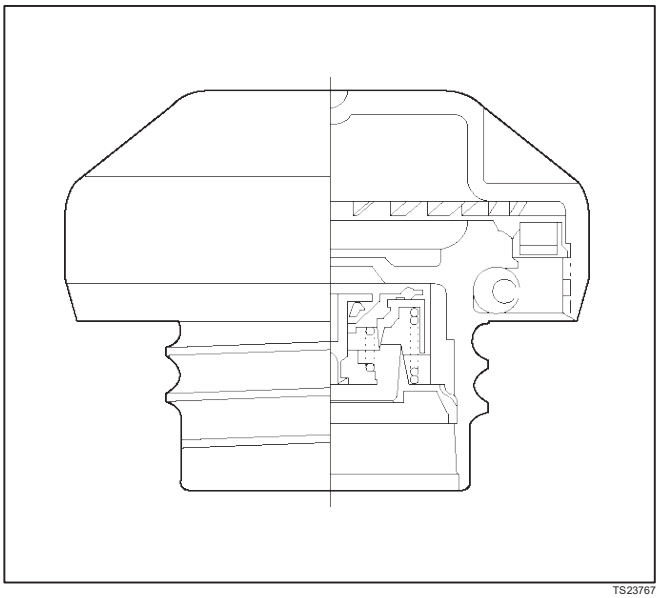The fuel filler cap includes a vacuum valve and a pressure valve.
If high vacuum or high pressure occurs in the fuel tank, each valve works to adjust the pressure in order to prevent damage to the tank.


TS23767

Inspection Procedure

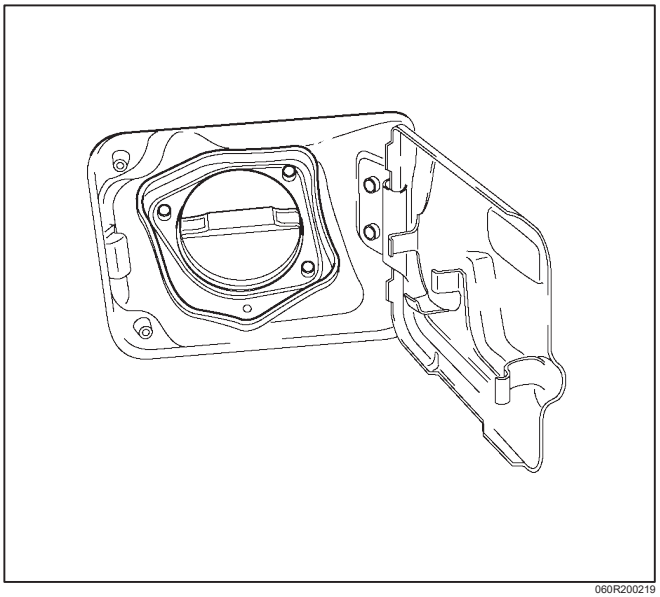
NOTE: Replace the fuel filler cap with the same type of filler cap that was originally installed on the vehicle.

- Check the seal ring in the filler cap for any abnormality and for seal condition.
- Replace the filler cap if any abnormality is found.


Fuel Filter

Removal Procedure

1. Disconnect the negative battery cable.
2. Remove the fuel filler cap.


060R200219

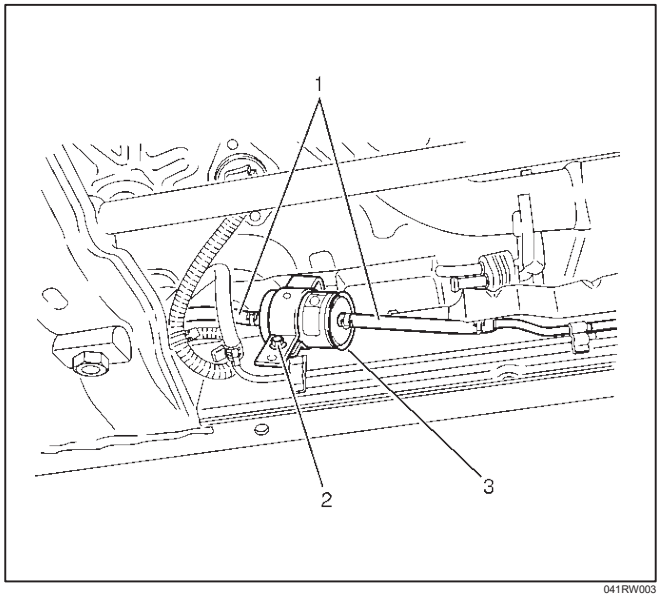3. Disconnect the fuel hose from the fuel filter on the engine side.
4. Disconnect the fuel hose from the fuel filter on the fuel tank side.
5. Remove the bolt on the fuel filter holder.




041RW003

Legend
(1) Fuel Hose
(2) Fuel Filter Fixing Bolt
(3) Fuel Filter

6. Remove the fuel filter.

Inspection Procedure

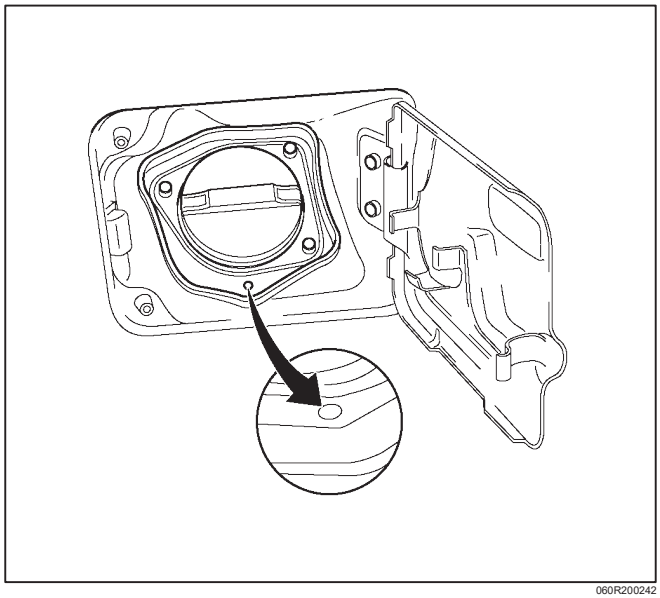1. Replace the fuel filter when the following occur:
   - Fuel leaks from the fuel filter body.
   - The fuel filter body is damaged.
   - The fuel filter is clogged with dirt or sediment.
2. If the drain hole is clogged, clean the drain.



060R200242

Installation Procedure

1. Install the fuel filter in the correct direction.
2. Install the bolt on the fuel filter holder.

Tighten
- **Tighten the screws to 20 N·m (14 lb ft.).**

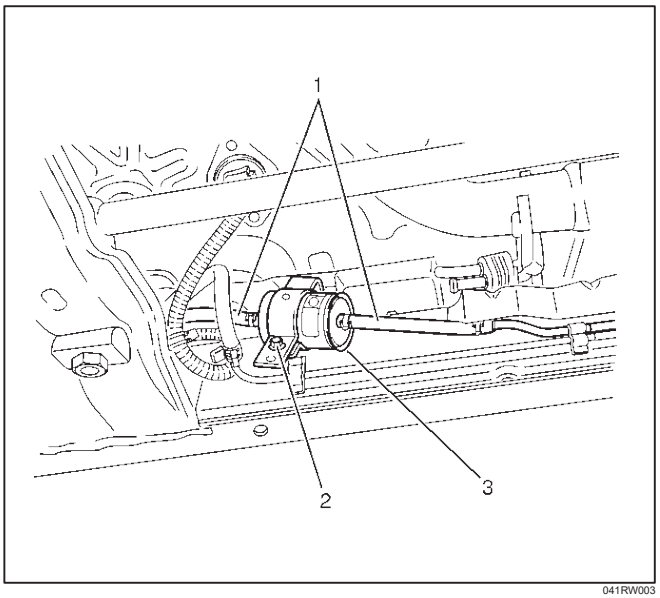
3. Connect the fuel hose on the engine side.
4. Connect the fuel hose on the fuel tank side.



041RW003

Legend
(1) Fuel Hose
(2) Fuel Filter Fixing Bolt
(3) Fuel Filter

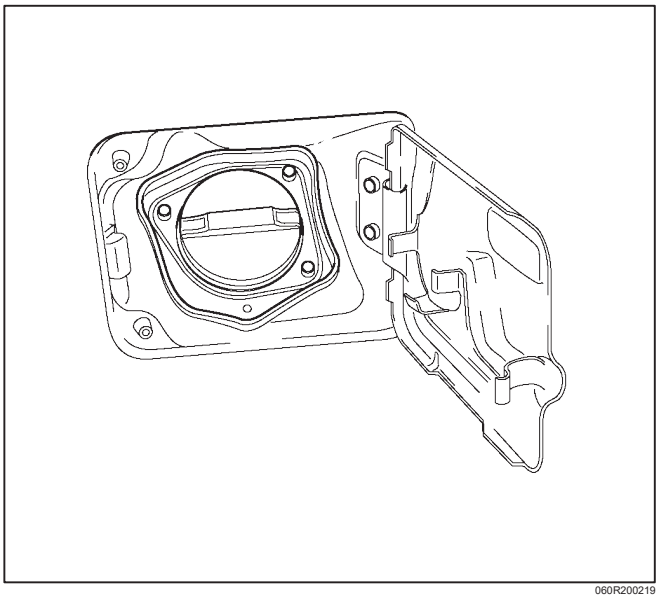5. Install the fuel filler cap.



060R200219

6. Connect the negative battery cable.

Fuel Gauge Unit

Removal Procedure

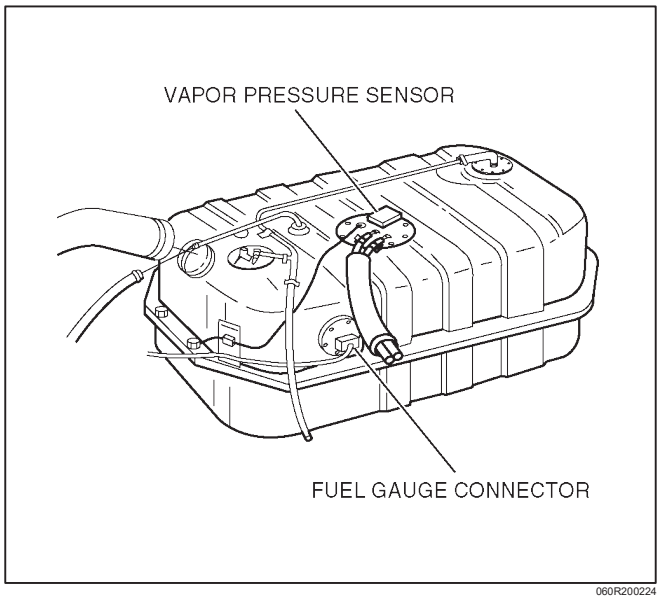Refer to *Fuel Tank* section.



060R200224

Fuel Injectors

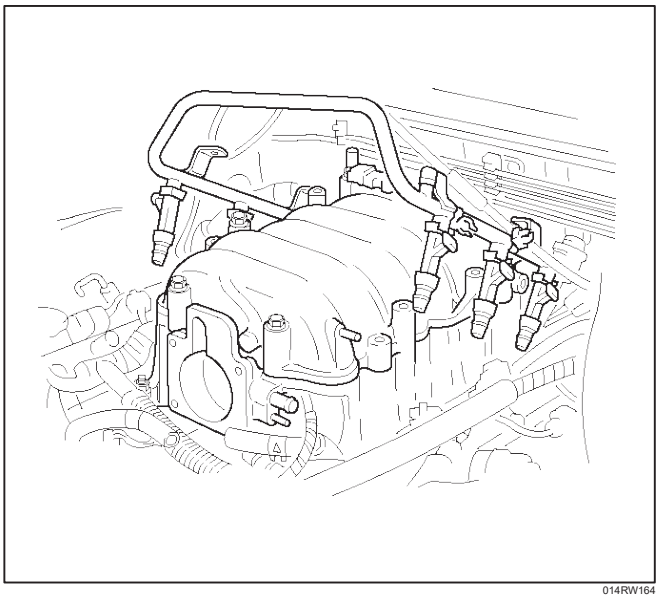
Removal Procedure

NOTE: If the fuel injectors are leaking, the engine oil may be contaminated with fuel. Check the oil for signs of contamination and change the oil and the filter if necessary.

NOTE: Use care in removing the fuel injectors in order to prevent damage to the fuel injector electrical connector pins or the fuel injector nozzles. The fuel injector is an electrical component and should not be immersed in any type of cleaner as this may damage the fuel injector.


IMPORTANT: Fuel injectors are serviced as a complete assembly only.

1. Disconnect the negative battery cable.
2. Remove the common chamber. Refer to *Common Chamber in Engine Mechanical* section.
3. Remove the fuel rail. Refer to *Fuel Rail* section.



014RW164

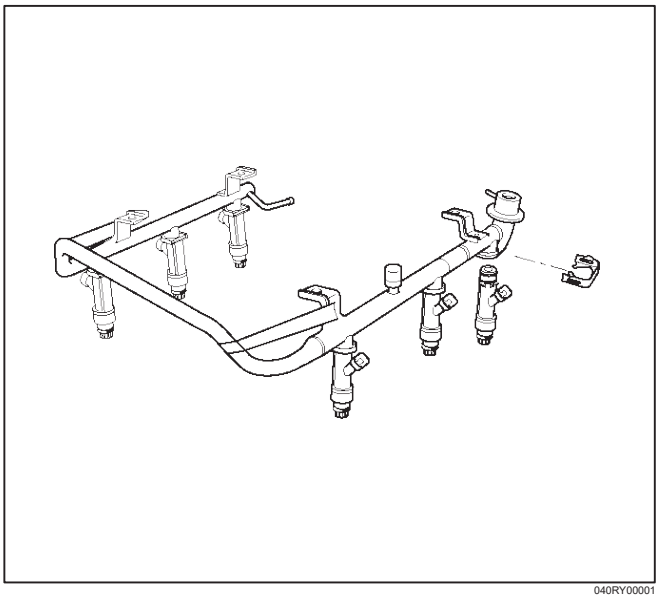4. Remove the injector retainer clip.



040RY00001

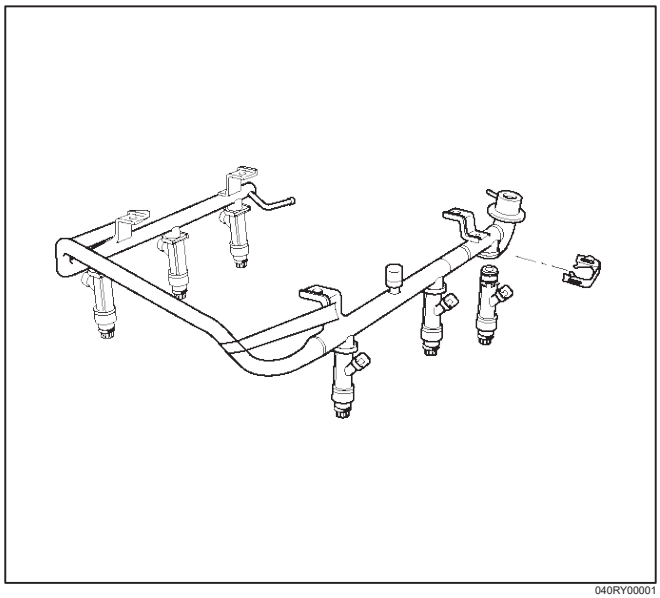
5. Remove the fuel injector assembly.
6. Remove the O-ring from the fuel injector.
7. Remove the O-ring backup from the fuel injector .

Inspection Procedure

1. Inspect the O-rings for cracks or leaks.
2. Replace worn or damaged O-rings.
3. Lubricate the new O-rings with engine oil before installation.


Installation Procedure

1. Install the O-ring backup on the fuel injector.
2. Install the new O-ring on the fuel injector.
3. Install the fuel injector on the fuel rail.



040RY00001

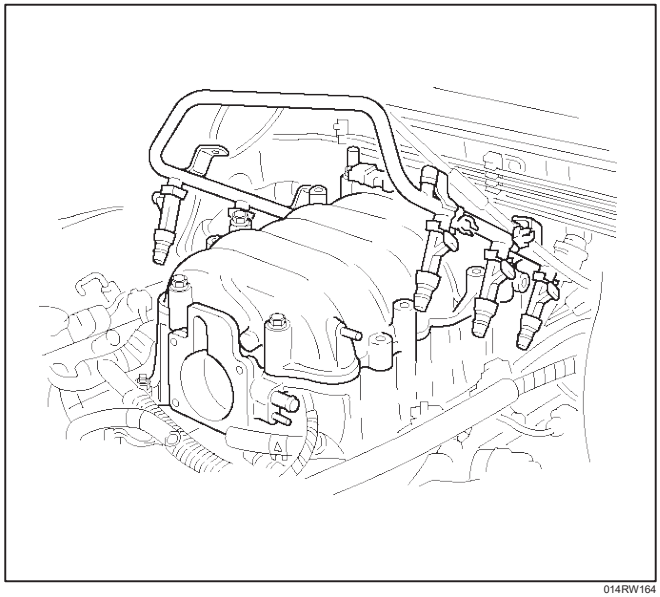4. Use new fuel injector retainer clips to retain the fuel injector to the fuel rail.
5. Coat the end of the fuel injector with gasoline.
6. Install the fuel rail. Refer to *Fuel Rail* section.



014RW164

7. Install the common chamber. Refer to *Common Chamber in Engine Mechanical* section.
8. Install the engine cover.
9. Connect the negative battery cable.

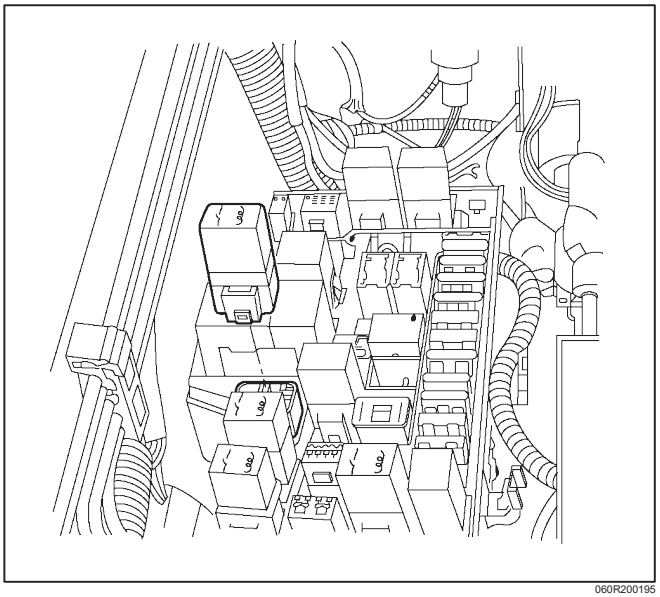
Fuel Metering System

Fuel Pressure Relief Procedure

CAUTION: To reduce the risk of fire and personal injury, there are necessary to relieve the fuel system pressure before filler and gauge unit servicing the fuel system components.

CAUTION: After relieving the system pressure, a small amount of fuel may be released when servicing fuel lines or connections. Reduce the chance of personal injury by covering the fuel line fittings with a shop towel before you disconnect the fittings. The towels will absorb any fuel that may leak out. When the disconnect is completed, place the towel in an approved container.

1. Remove the fuel cap.
2. Remove the fuel pump relay from the underhood relay box. Refer to *Fuel Pump Relay* section.




060R200195

3. Start the engine and allow it to stall.
4. Crank the engine for 30 seconds.
5. Disconnect the negative battery cable.

Fuel Pump Assembly

Removal Procedure

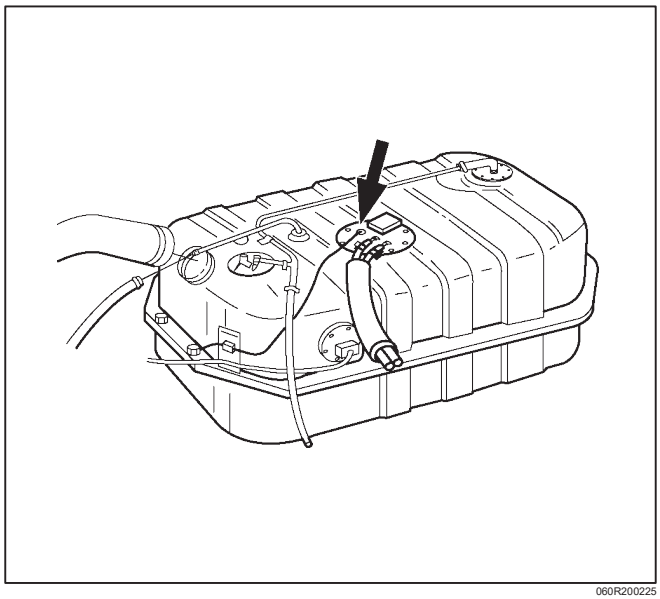Refer to *Fuel Tank* section.




060R200225

Fuel Pump Relay


Removal Procedure

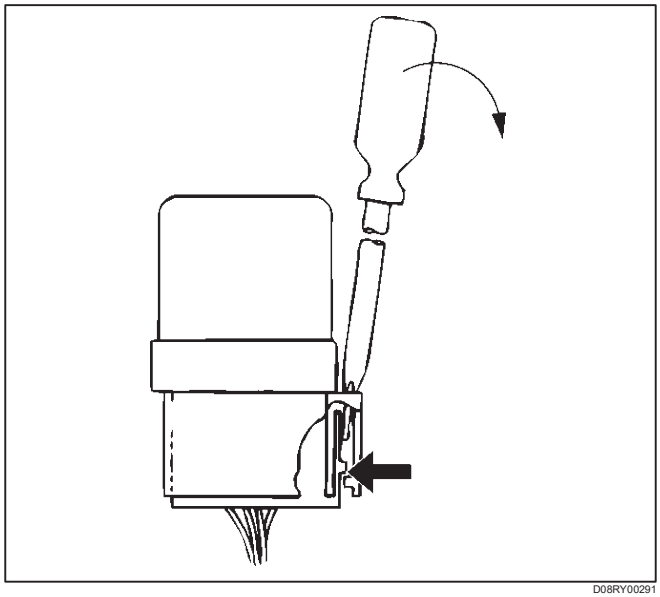1. Remove the fuse and relay box cover from under the hood.
2. Consult the diagram on the cover to determine which is the correct relay.
3. Insert a small screwdriver into the catch slot on the forward side of the fuel pump relay.
   - The screwdriver blade will release the catch inside.



D08RY00291

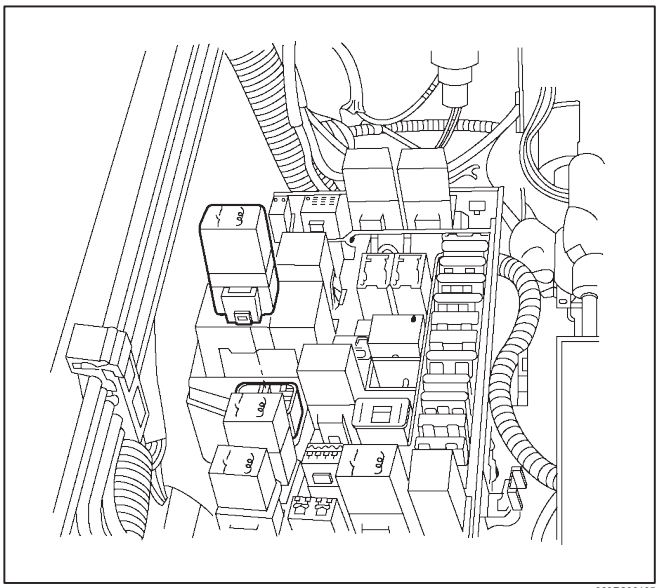
4. Pull the relay straight up and out of the fuse and relay box.



060R200195

Installation Procedure

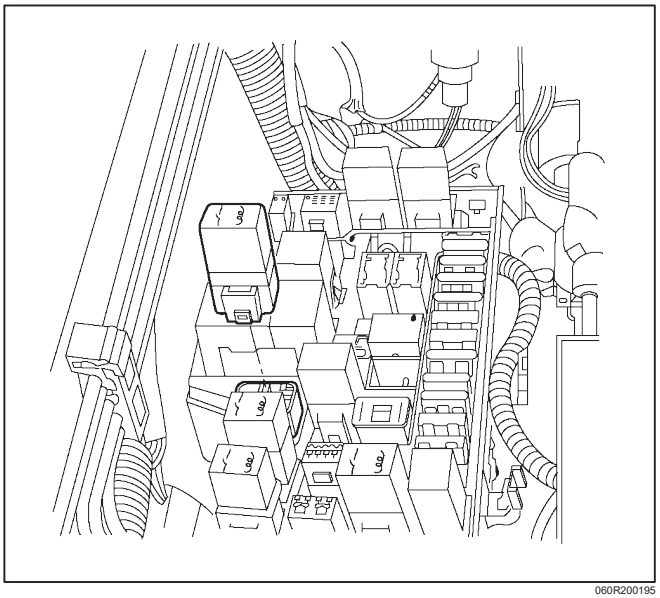1. Insert the relay into the correct place in the fuse and relay box with the catch slot facing forward.
2. Press down until the catch engages.
   - An audible “click” will be heard.



060R200195

3. Install the fuse and relay box cover.

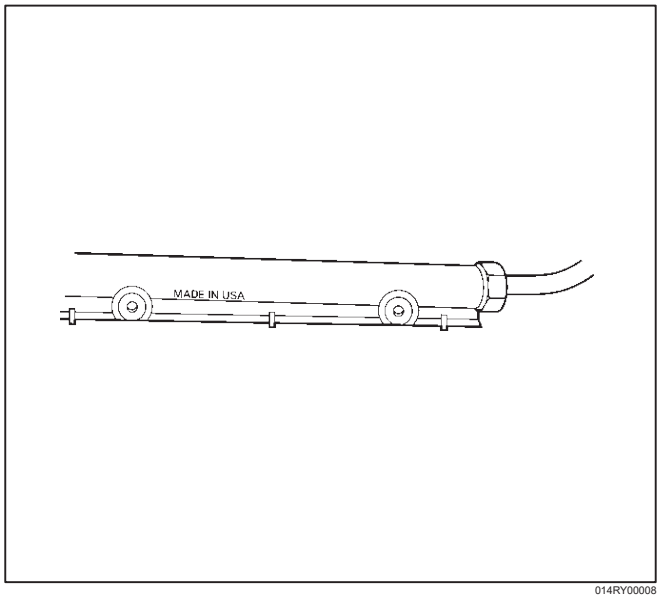
Fuel Rail Assembly

Removal Procedure

NOTE:

- Do not attempt to remove the fuel inlet fitting on the fuel rail. It is staked in place. Removing the fuel inlet fitting will result in damage to the fuel rail or the internal O-ring seal.
- Use care when removing the fuel rail assembly in order to prevent damage to the injector electrical connector terminals and the injector spray tips.
- Fittings should be capped and holes plugged during servicing to prevent dirt and other contaminants from entering open lines and passages.


IMPORTANT: An eight-digit identification number is stamped on the side of the fuel rail. Refer to this number when you service the fuel rail or when a replacement part is required.



014RY00008

Before removal, the fuel rail assembly may be cleaned with a spray type engine cleaner. Follow the spray package instructions. Do not immerse the fuel rails in liquid cleaning solvent.

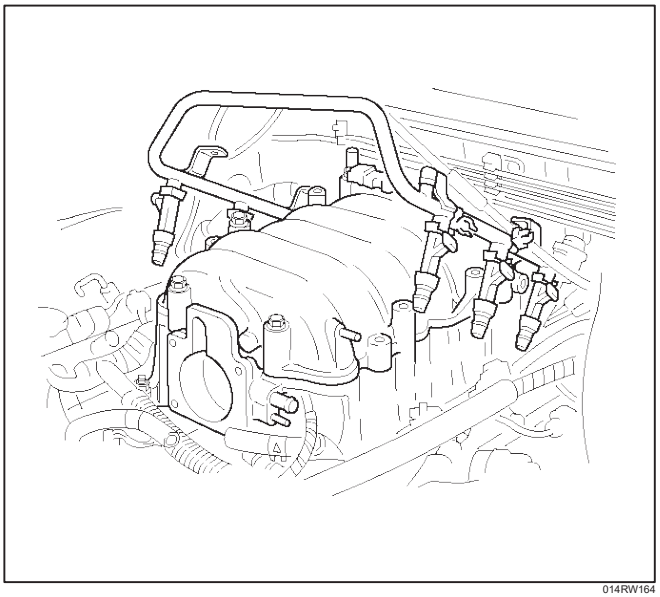
1. Depressurize the fuel system. Refer to Fuel Pressure Relief Procedure in this Section.
2. Disconnect the negative battery cable.
3. Remove the engine cover.
4. Disconnect the throttle position sensor electrical connector from throttle body.
5. Disconnect the connectors from manifold absolute pressure sensor, solenoid valve, electric vacuum sensing valve.
6. Disconnect the vacuum hose on canister VSV and positive crankcase ventilation hose.
7. Remove the common chamber. Refer to the common chamber in Engine Mechanical section.
   1. Lift up carefully on the fuel injectors. Do not separate the fuel injectors from the fuel rail.
   2. If an injector becomes separated from the fuel rail, the infector O-ring seals and the retainer clip must be replaced.
   3. Drain residual fuel into an approved container.


014RW164

8. If removal of the fuel pressure regulator is necessary, refer to *Fuel Pressure Regulator* section.
9. If removal of the fuel injectors is necessary, refer to *Fuel Injectors* section.

Installation Procedure

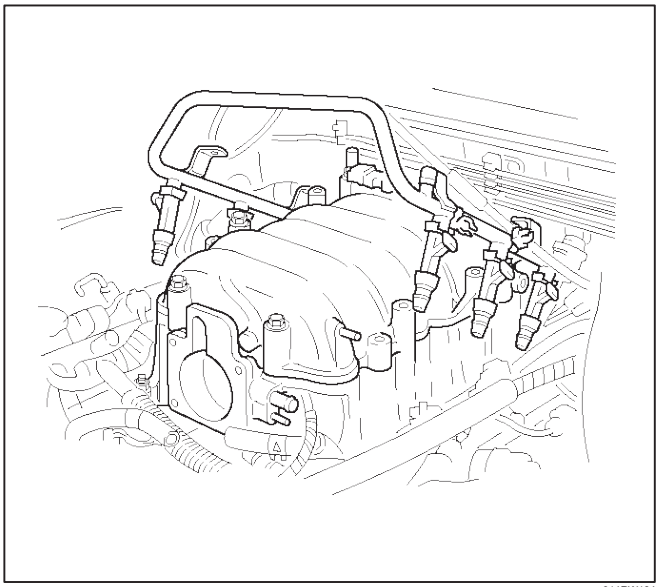1. If the fuel injectors were removed, install them. Refer to *Fuel Injectors* section.
2. If the fuel pressure regulator was removed, install it. Refer to *Fuel Pressure Regulator* section.
3. Install the common chamber. Refer to common chamber in engine Mechanical section.


014RW164

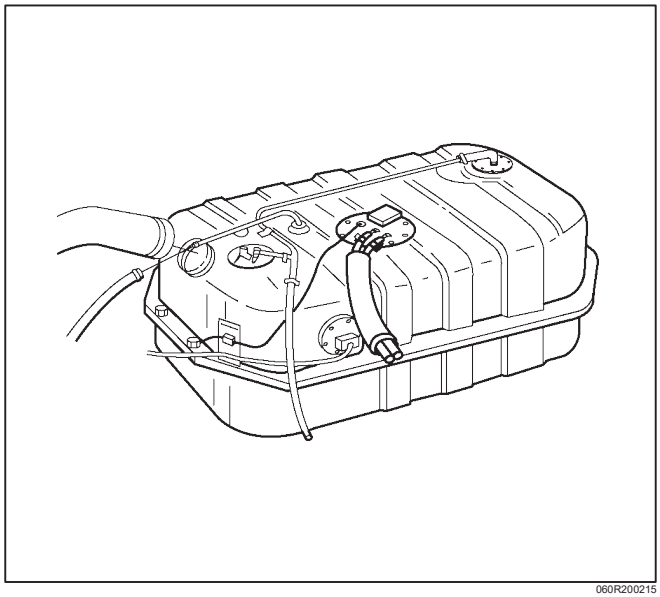
4. Connect the vacuum hose on Canister VSV and positive crankcase ventilation hose.

5. Connect the connectors to manifold absolute pressure sensor, solenoid valve, electric vacuum sensing valve.
6. Connect the throttle position sensor electrical connector to throttle body.
7. Install the engine cover.
8. Connect the negative battery cable.
9. Crank the engine until it starts. Cranking the engine may take longer than usual due to trapped air in the fuel rail and in the injectors.

Fuel Tank

Removal Procedure

Refer to *Fuel Tank* section.




060R200215

Throttle Body (TB)


Removal Procedure

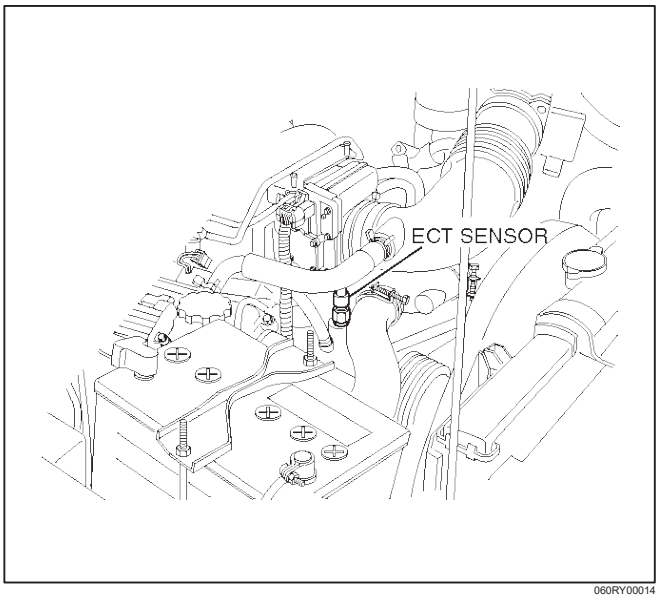1. Disconnect the negative battery cable.
2. Drain the cooling system. Refer to *Cooling System* section.
3. Disconnect the electrical connectors:
   - Throttle position (TP) sensor.
   - Intake air temperature (IAT) sensor. Refer to *Intake Air Temperature Sensor* section.



060RY00014

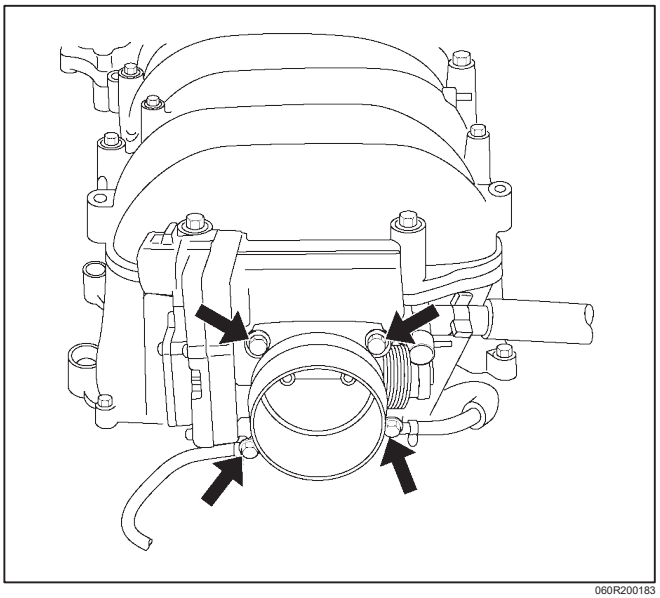4. Disconnect the vacuum hose below the air horn.
5. Remove the intake air duct clamp.
6. Disconnect the intake air duct.
7. Disconnect the coolant lines from the throttle body.
8. Remove the bolts from the common chamber.
9. Remove the throttle body from the common chamber.
10. Remove the gasket from the common chamber.



060R200183

11. Remove the TP sensor. Refer to *Throttle Position (TP) Sensor* section.

Inspection Procedure

NOTE: Do not use solvent of any type when you clean the gasket surfaces on the intake manifold and the throttle body assembly. The gasket surfaces and the throttle body assembly may be damaged as a result.

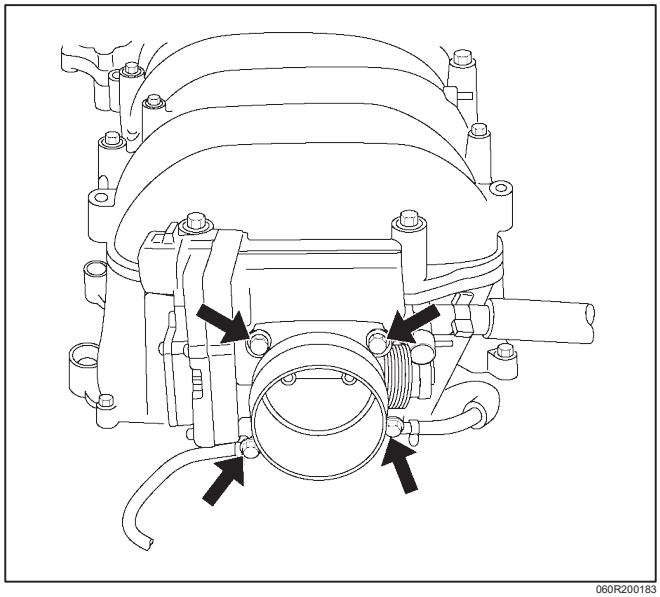
- If the throttle body gasket needs to be replaced, remove any gasket material that may be stuck to the mating surfaces of the manifold.
- Do not leave any scratches in the aluminum casting.

Installation Procedure

1. Install the TP sensor. Refer to *Throttle Position (TP) Sensor* section.
2. Install the gasket on the common chamber.
3. Install the throttle body on the common chamber.
4. Secure the gasket and the throttle body with the four bolts.
   - The vacuum lines must be properly routed under the throttle body before tightening the mounting bolts.


Tighten

- **Tighten the throttle body mounting bolts to 10 N·m (87 lb in).**



060R200183

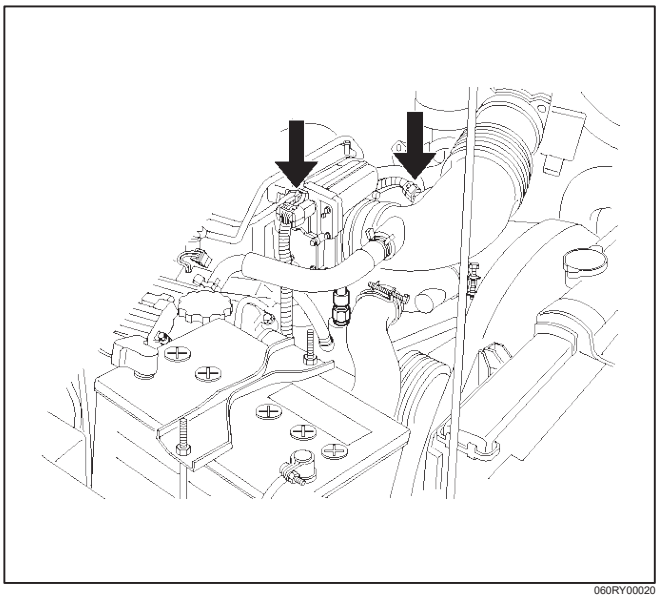5. Install the coolant lines.
6. Connect all the vacuum lines.
7. Install the intake air duct.
8. Tighten the intake air duct clamp.
9. Connect all the electrical connectors:
   - Throttle position (TP) sensor.
   - Intake air temperature (IAT) sensor. Refer to *Intake Air Temperature Sensor* section.




060RY00020

10. Install the accelerator cable assembly. Refer to *Accelerator Cable in Engine Speed Control System* section.
11. Fill the cooling system. Refer to *Cooling System* section.
12. Install the negative battery cable.

Electronic Ignition System

Removal Procedure

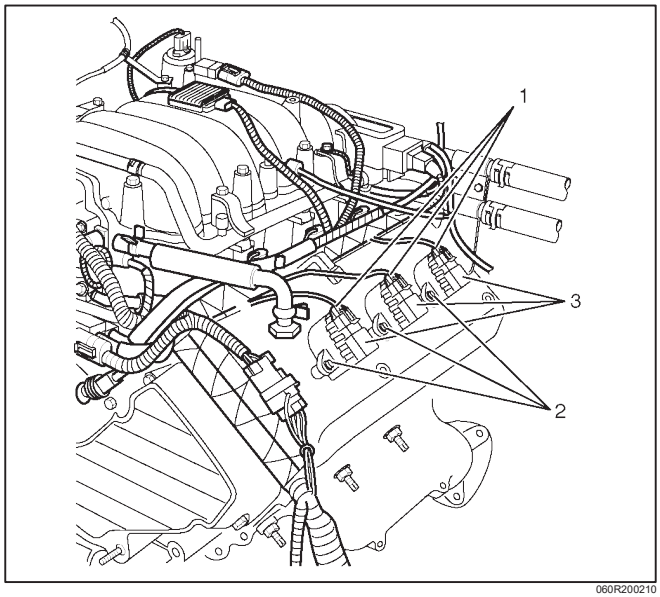1. Disconnect the negative battery cable.
2. Disconnect the ignition coil connector at the ignition coil assemblies.
3. Remove the two screws that secure the ignition coil assemblies to the rocker cover.



060R200210

Legend

(1) Ignition Coil Connectors
(2) Bolts
(3) Ignition Coil Assemblies

4. Remove the ignition coil assemblies and the spark plug boot from the spark plug.
   - Twist the ignition coil assemblies while pulling it straight up.
5. Use the appropriate spark plug socket in order to remove the spark plug from the engine.

Installation Procedure

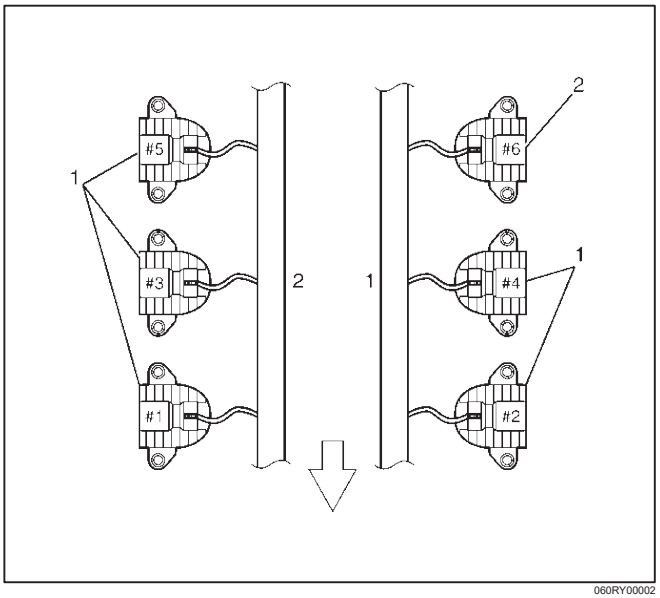
NOTE: The plug must thread smoothly into the cylinder head and be fully seated. Use a thread chaser if necessary to clean the threads in the cylinder head. Cross-threading or failure to fully seat the spark plug can cause plug overheating, exhaust blow-by gases, or thread damage. Do not overtighten the spark plugs. Over tightening can cause aluminum threads to strip.

1. Install the spark plug in the engine. Use the appropriate spark plug socket.

   Tighten

   - **Tighten the spark plug to 18 N·m (13 lb ft.).**
2. Install the ignition coil assemblies and spark plug boot over the spark plug.

CAUTION: Ignition coil assembly #6 is different from ignition coil assembly #1 to #5. Ignition coil assemblies #6 is short type. Be careful it when installing ignition coil assembly of #6.




060RY00002

Legend

(1) Long Type Ignition Coil Assemblies (#1 ~ #5)
(2) Short Type Ignition Coil Assembly (#6)

3. Install ignition coil assemblies and tighten the fixing bolts to the specified torque.

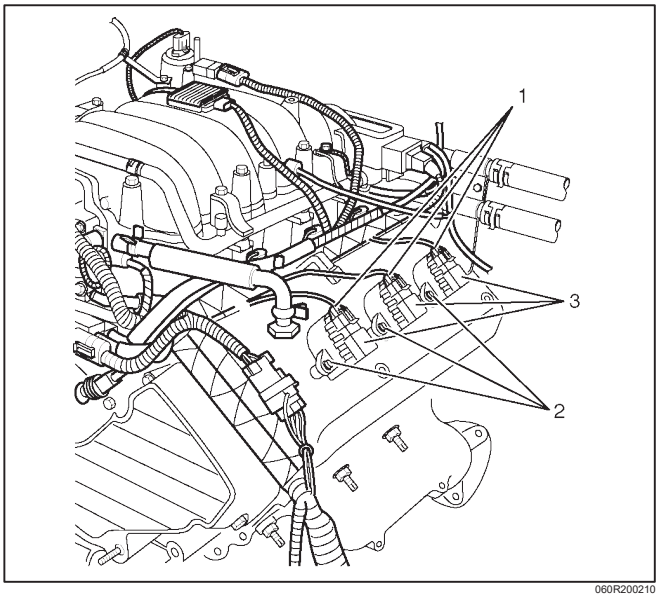   Torque: 4 N·m (35.4 lb in)



060R200210

Legend

(1) Ignition Coil Connectors
(2) Bolts
(3) Ignition Coil Assemblies

4. Connect the ignition coil connector at the ignition coil assemblies.
5. Connect the negative battery cable.

Catalytic Converter

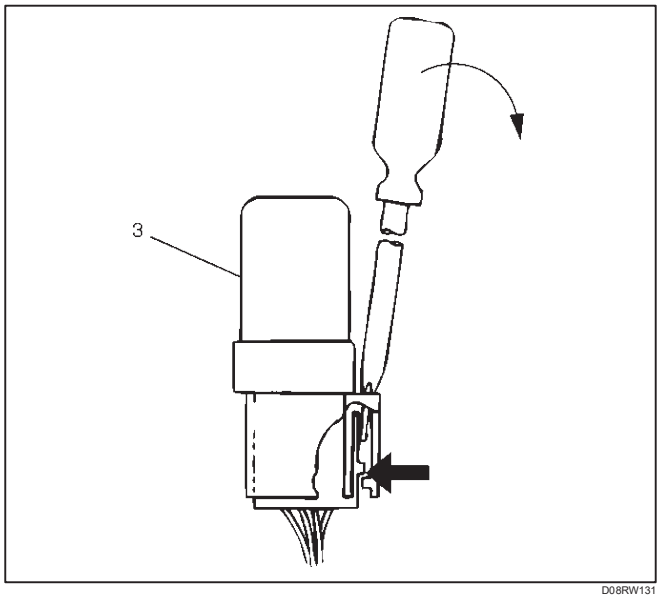
Removal and Installation Procedure

Refer to *Engine Exhaust in Engine* section.

Air Conditioning Thermo Relay


Removal Procedure

1. Remove the fuse and relay box cover from under the hood.
2. Consult the diagram on the cover to determine which is the correct relay.
3. Insert a small screwdriver into the catch slot on the forward side of the fuel pump relay.
   - The screwdriver blade will release the catch inside.



D08RW131

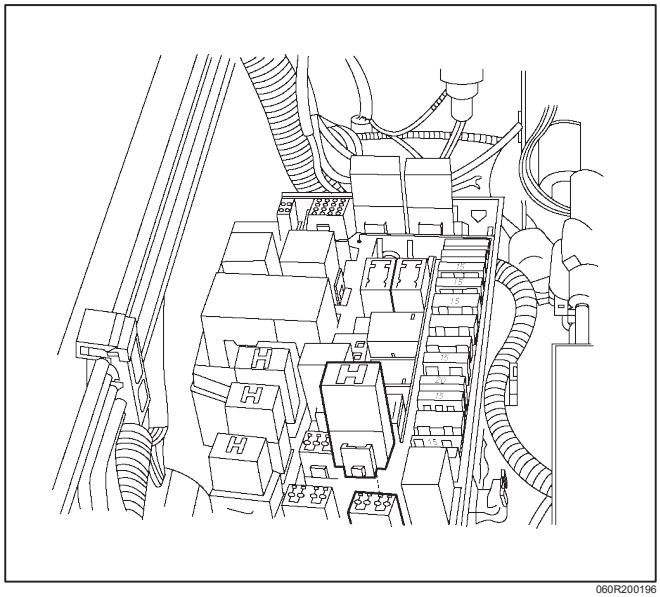
4. Pull the relay straight up and out of the fuse and relay box.



060R200196

Installation Procedure

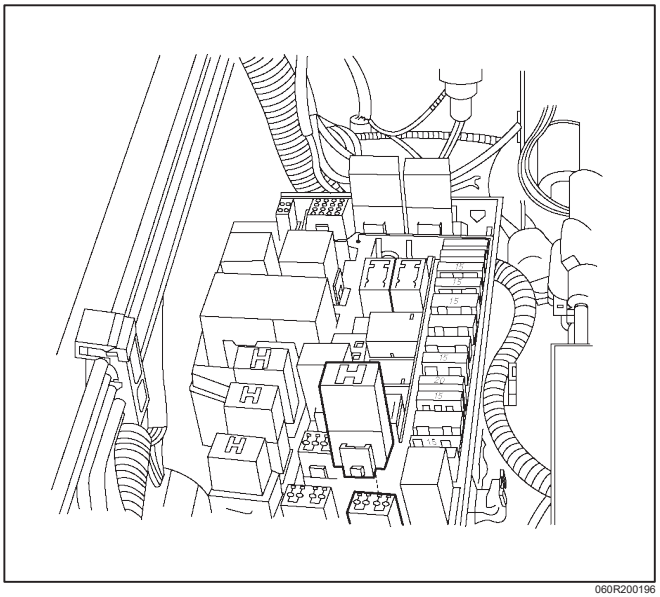1. Insert the relay into the correct place in the fuse and relay box with the catch slot facing forward.
2. Press down until the catch engages.
   - An audible “click” will be heard.
3. Install the fuse and relay box cover.



060R200196

EVAP Canister Hoses

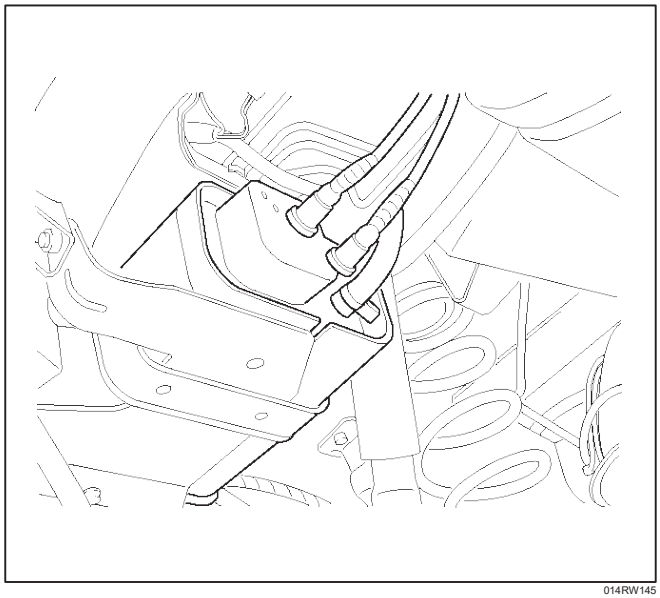
Service Information

To view the routing of the EVAP canister hoses, refer to *Vehicle Emission Control Information* in *Diagnosis*. Use 6148M or equivalent when you replace the EVAP canister hoses.

EVAP Canister


Removal Procedure

1. Disconnect the negative battery cable.
2. Disconnect the three hoses from the EVAP canister.




014RW145

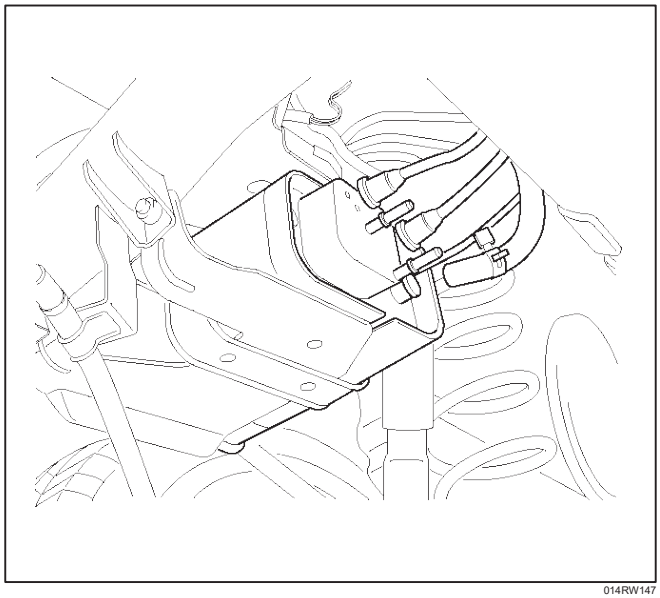3. Disconnect the fuel vapor connector and the purge hose from the EVAP canister vent solenoid.



014RW147

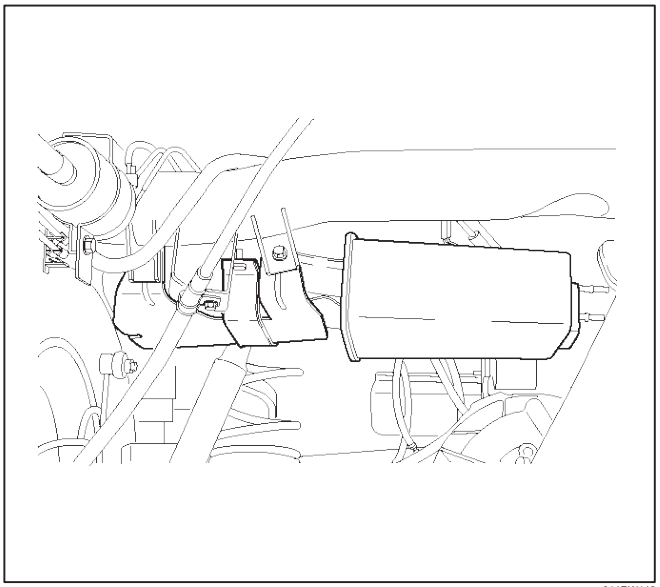4. Remove the retaining two bolts on the mounting bracket and slide the canister out of mounting bracket.




014RW146

Inspection Procedure

1. Inspect the hoses for cracks and leaks.
2. Inspect the canister for a damaged case.


Installation Procedure

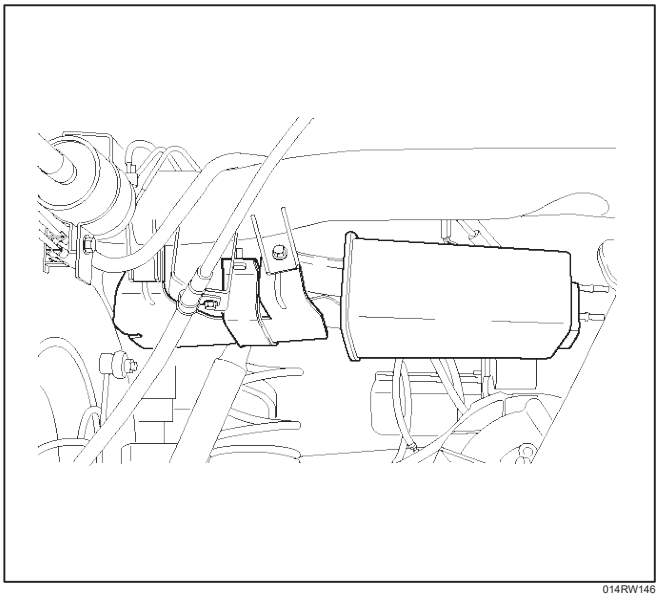1. Slide the canister into mounting bracket and install the mounting bracket two bolts.



014RW146

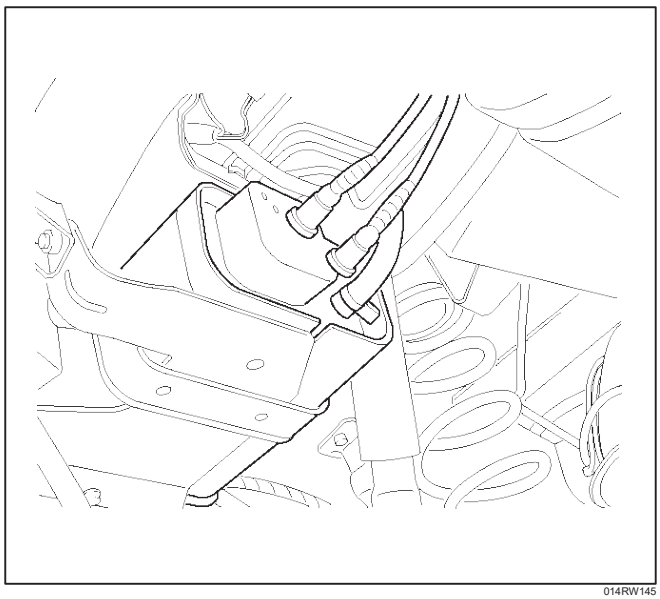2. Connect the fuel vapor connector to the EVAP canister vent solenoid.
3. Connect the three hoses to the EVAP canister.




014RW145

4. Disconnect the negative battery cable.

EVAP Canister Vent Solenoid


Removal Procedure

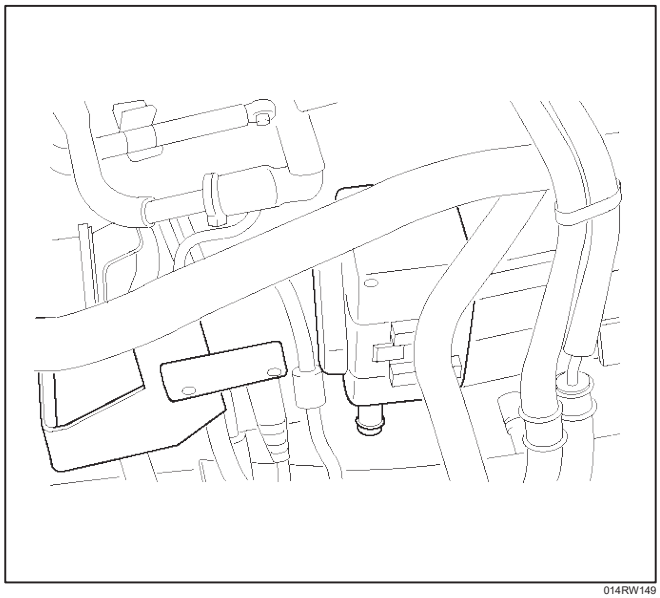1. Disconnect the negative battery cable.
2. Slide out the EVAP canister vent solenoid from mounting bracket.



014RW149

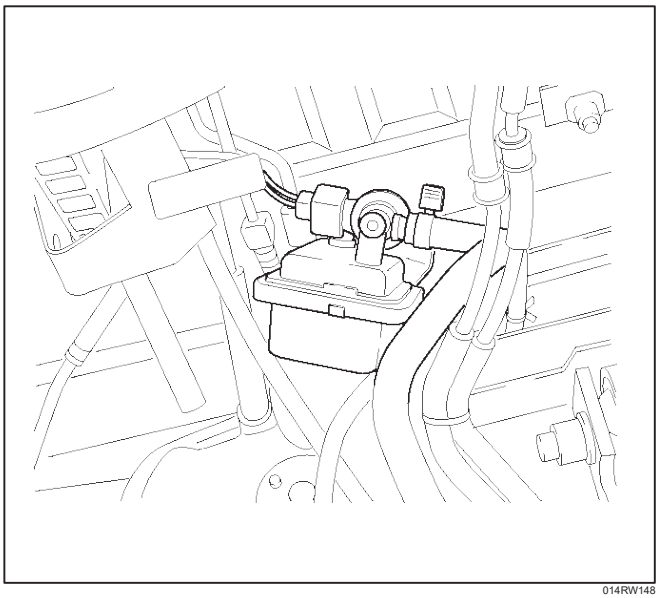3. Disconnect the connector and hose.




014RW148

Inspection Procedure

1. Check for cracks or leaks.
2. Energize the solenoid and try to blow through it. The solenoid should not allow passage of air when energized. (J 35616 Connector Test Kit can be used to easily attach jumper wires from the battery to the solenoid).


Installation Procedure

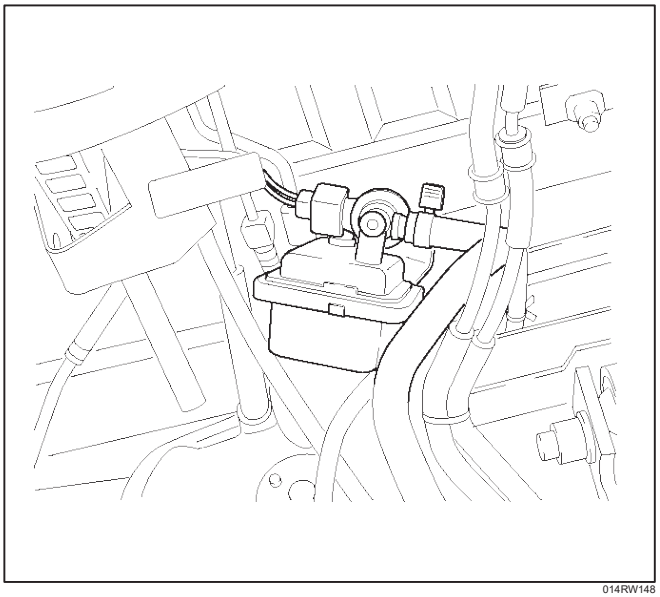1. Connect the connector and hose.



014RW148

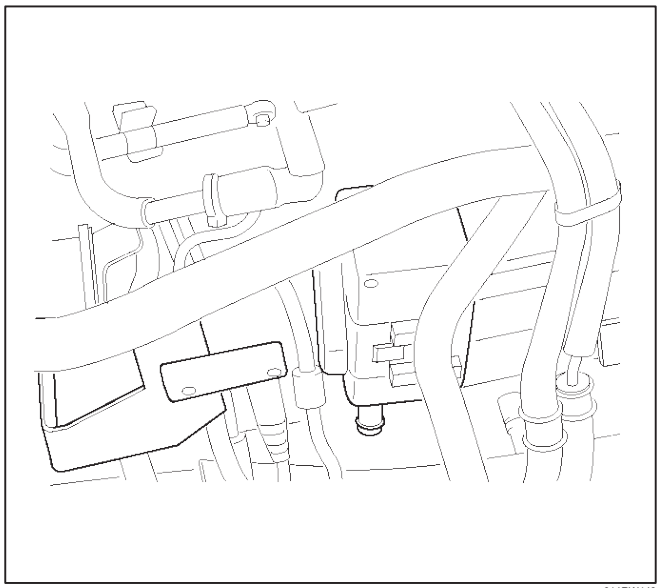2. Slide the EVAP canister vent solenoid into mounting bracket.




3. Connect the negative battery cable.

Fuel Tank Pressure (Vapor Pressure) Sensor

Removal Procedure

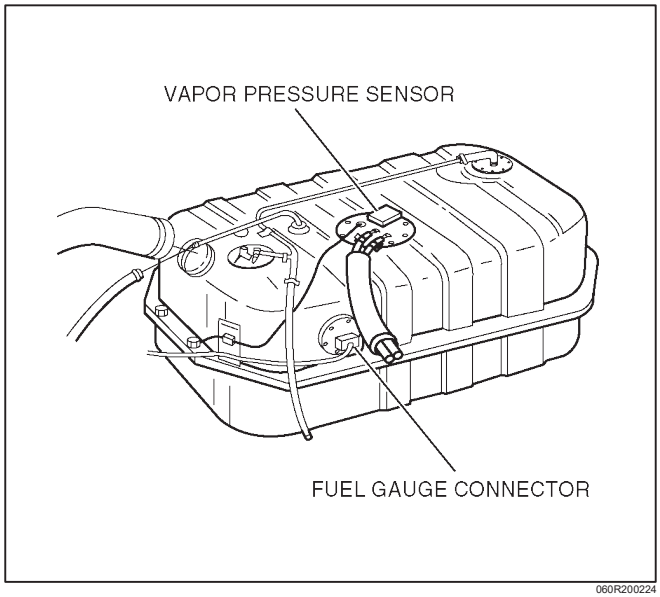1. Remove the fuel pump assembly. Refer to *Fuel Tank In Fuel Pump*.
2. Carefully pry the fuel tank pressure sensor out of the top of the fuel pump assembly.




Inspection Procedure

1. Inspect the vapor pressure sensor for cracks in the housing and corrosion on the electrical terminals.
2. Inspect the rubber grommet for tears and signs of rot.

Installation Procedure

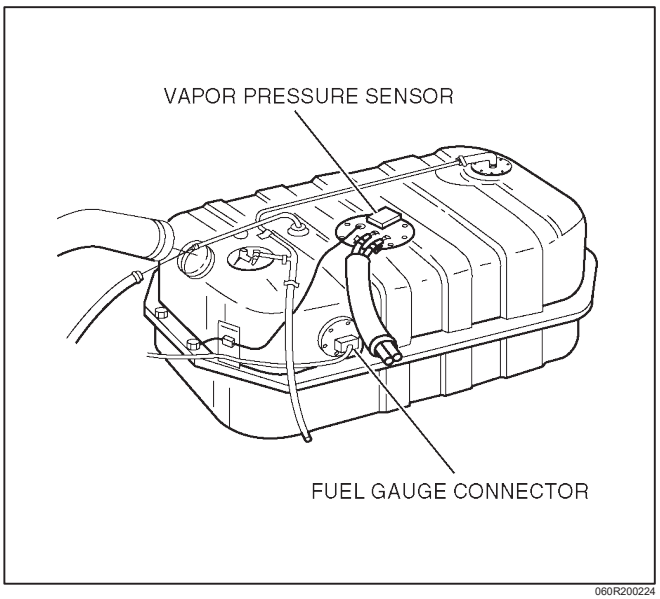1. Install the rubber grommet on the fuel pump assembly.




2. Install the fuel tank vapor pressure sensor on the fuel pump assembly.
   - Insert the sensor nipple firmly into the grommet.
   - Keep twisting and pushing the sensor until the wide portion of the nipple shows on the other side of the grommet.
3. Install the fuel pump assembly on the fuel tank. Refer to *Fuel Tank In Fuel Pump.*.

EVAP Canister Purge Solenoid (Purge Duty Solenoid Valve)

Removal Procedure

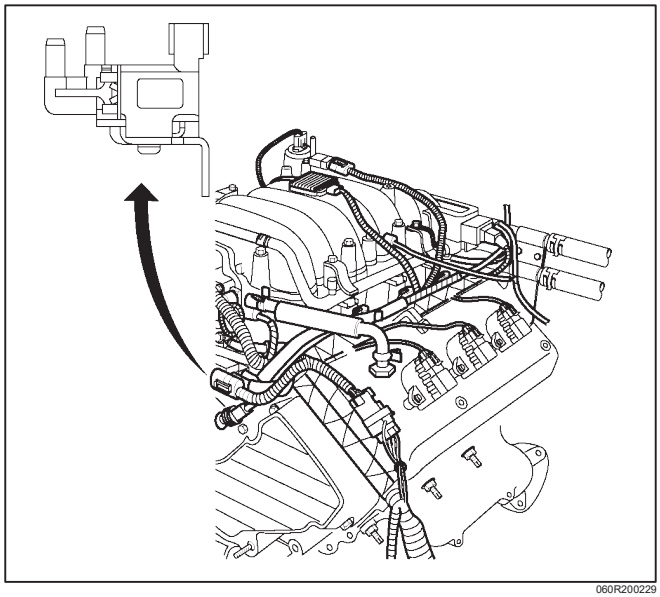1. Disconnect the negative battery cable.
2. Disconnect the electrical connector from the EVAP canister purge solenoid.
3. Disconnect the vacuum hoses from the EVAP canister purge solenoid.



060R200229

4. Remove the EVAP canister purge solenoid retaining bolt from the common chamber.
5. Remove the EVAP canister purge solenoid.

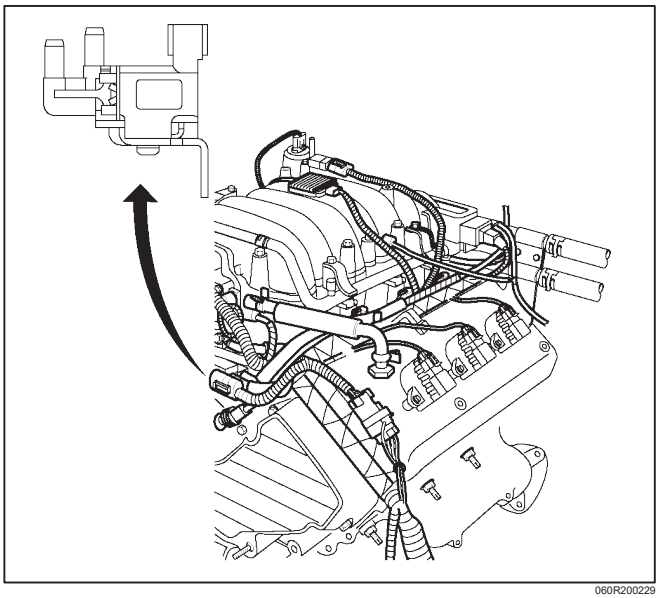
Installation Procedure

1. Install the EVAP canister purge solenoid on the upper intake manifold.
2. Install the EVAP canister purge solenoid retaining bolt.

Tighten

- **Tighten the bolts to 20 N·m (16 lb ft.).**

3. Connect the vacuum hoses to the EVAP canister purge solenoid.
4. Connect the electrical connector to the EVAP canister purge solenoid.



060R200229

Fuel Tank Vent Valve (Vent Solenoid Valve)

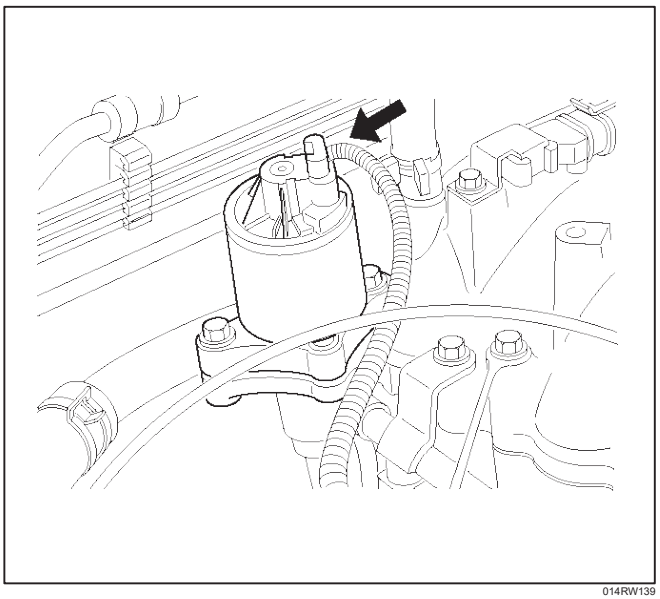
Removal and Installation Procedure

Refer to *Fuel Pump* section.

Linear Exhaust Gas Recirculation (EGR) Valve


Removal Procedure

1. Disconnect the negative battery cable.
2. Disconnect the electrical connector at the EGR valve.



014RW139

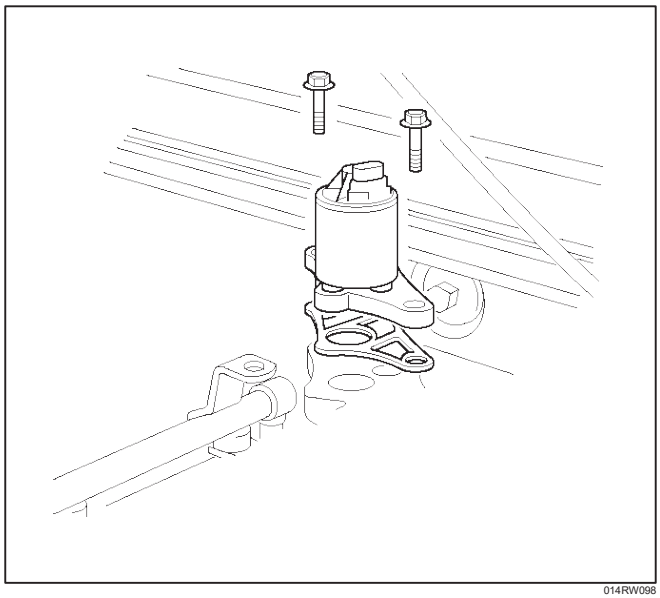3. Remove the bolts from the common chamber.


014RW098

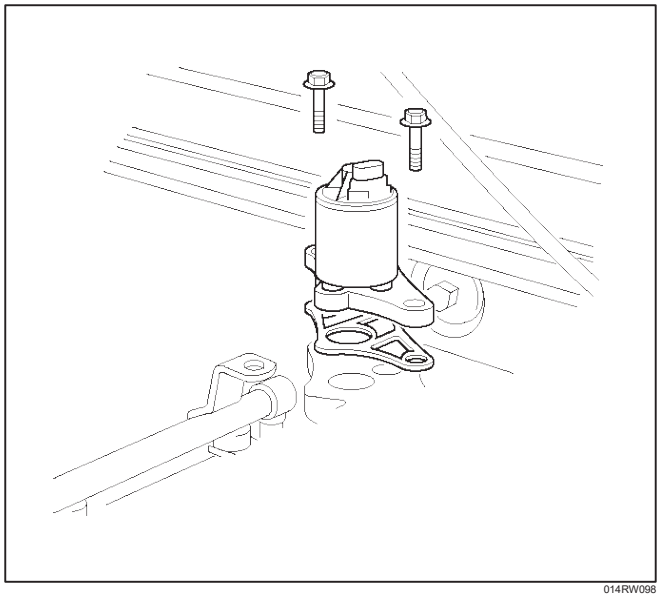
4. Remove the EGR valve from the common chamber manifold.
5. Remove the gasket from the common chamber manifold.

Installation Procedure


1. Install the gasket on the common chamber.
2. Install the EGR valve on the common chamber.
3. Secure the EGR valve and the gasket with the bolts.

Torque: 25 N·m (18 lb ft)

NOTE: It is possible to install the EGR valve rotated 180° from the correct position. Make sure that the base of the valve is placed so that it aligns with the mounting flange.


014RW098

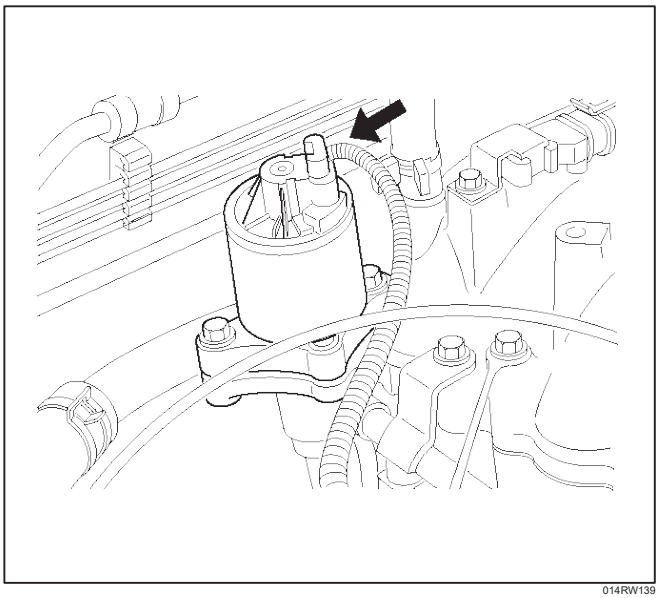4. Connect the electrical connector at the EGR valve.



014RW139

5. Connect the negative battery cable.

Positive Crankcase Ventilation (PCV) Valve

Removal Procedure

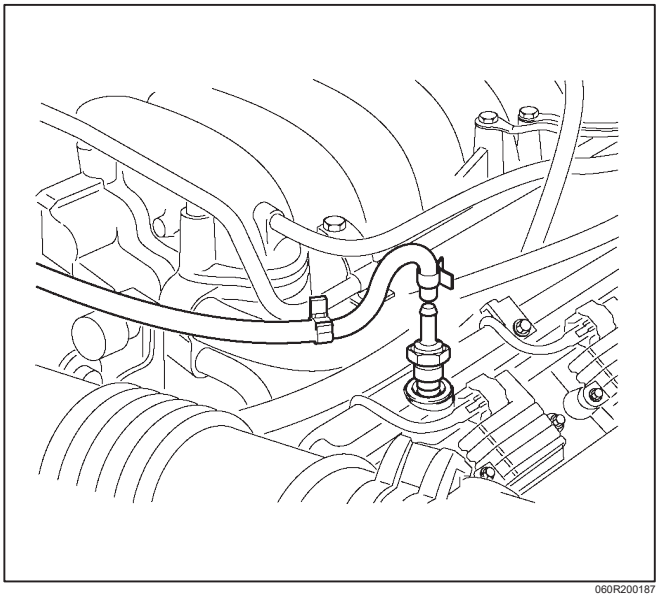1. Remove the vacuum hose at the PCV valve.
   - Slide the clamp back to release the hose.
2. Pull the PCV valve from the rubber grommet in the right valve cover.


060R200187

Inspection Procedure

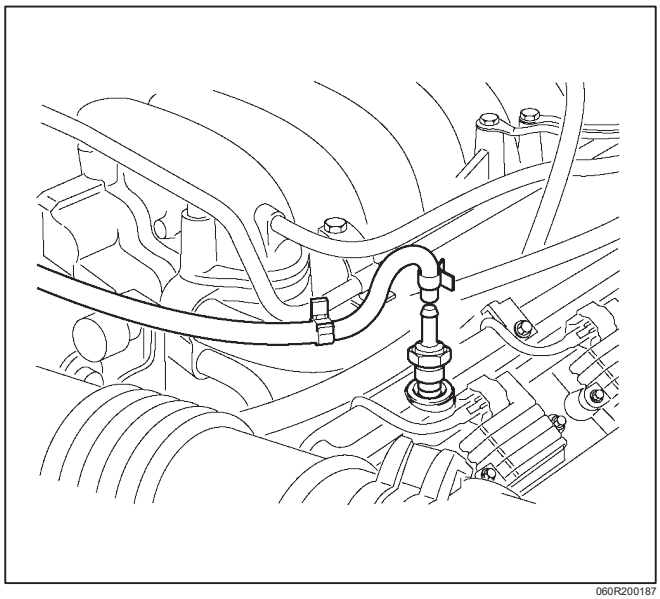
Before inspecting the PCV valve, make sure that the hoses are connected properly and are in good condition. Also check that the oil pan and rocker cover gaskets are sealing properly.

PCV Valve

1. Run the engine at normal operating temperature.
2. Disconnect the valve from the rocker cover.
   RESULT: A hissing noise should be heard from the valve. If no noise is heard, the PCV valve or hose is plugged.
3. Remove the PCV valve from the engine.
   a. Blow air into the rocker cover side of the valve.
   RESULT: Air should pass freely.
   b. Blow air into the air cleaner side of the valve.
   RESULT: Air should not pass through the valve.
4. Re-install the PCV valve and remove the oil filler cap.
   RESULT: A small vacuum should be felt at the oil filler hole.

Installation Procedure

1. Push the PCV valve into the rubber grommet in the left valve cover.
2. Install the vacuum hose on the PCV valve and secure the vacuum hose with the clamp.



060R200187

Wiring and Connectors

Wiring Harness Service

The control module harness electrically connects the control module to the various solenoids, switches and sensors in the vehicle engine compartment and passenger compartment.
Replace wire harnesses with the proper part number replacement.
Because of the low amperage and voltage levels utilized in powertrain control systems, it is essential that all wiring in environmentally exposed areas be repaired with crimp and seal splice sleeves.
The following wire harness repair information is intended as a general guideline only. Refer to *Chassis Electrical* section for all wire harness repair procedures.

Connectors and Terminals

Use care when probing a connector and when replacing terminals. It is possible to short between opposite terminals. Damage to components could result. Always use jumper wires between connectors for circuit checking. NEVER probe through Weather-Pack seals. Use an appropriate connector test adapter kit which contains an assortment of flexible connectors used to probe terminals during diagnosis. Use an appropriate fuse remover and test tool for removing a fuse and to adapt the fuse holder to a meter for diagnosis.
Open circuits are often difficult to locate by sight because oxidation or terminal misalignment are hidden by the connectors. Merely wiggling a connector on a sensor, or in the wiring harness, may temporarily correct the open circuit. Intermittent problems may also be caused by oxidized or loose connections.
Be certain of the type of connector/terminal before making any connector or terminal repair. Weather-Pack and Com-Pack III terminals look similar, but are serviced differently.

PCM Connectors and Terminals

Removal Procedure

1. Remove the connector terminal retainer.
2. Push the wire connected to the affected terminal through the connector face so that the terminal is exposed.
3. Service the terminal as necessary.

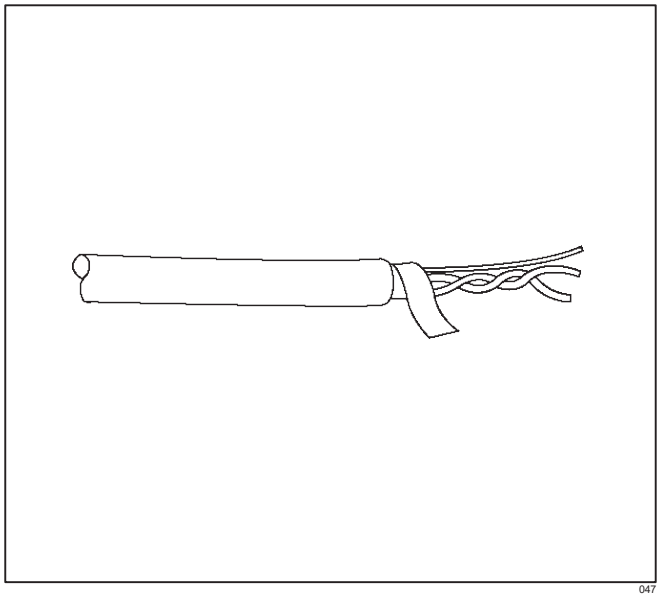
Installation Procedure

1. Bend the tab on the connector to allow the terminal to be pulled into position within the connector.
2. Pull carefully on the wire to install the connector terminal retainer.


Wire Harness Repair: Twisted Shielded Cable

Removal Procedure

1. Remove the outer jacket.
2. Unwrap the aluminum/mylar tape. Do not remove the mylar.




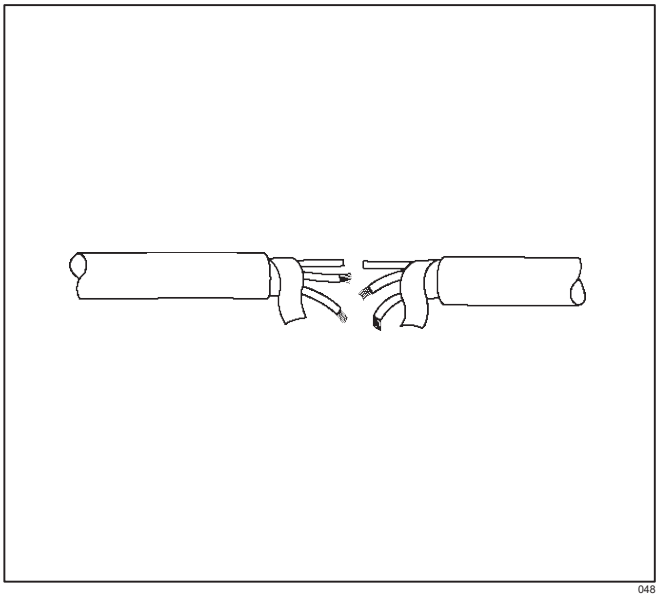3. Untwist the conductors.
4. Strip the insulation as necessary.




Installation Procedure

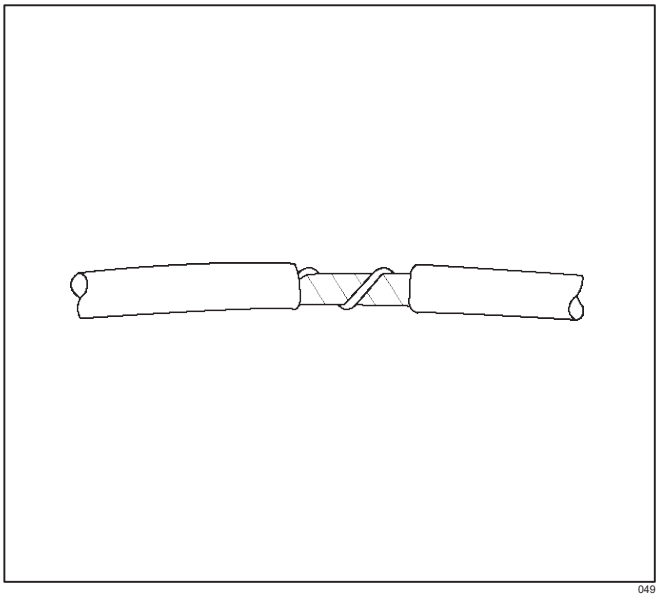1. Splice the wires using splice clips and rosin core solder.
2. Wrap each splice to insulate.
3. Wrap the splice with mylar and with the drain (uninsulated) wire.



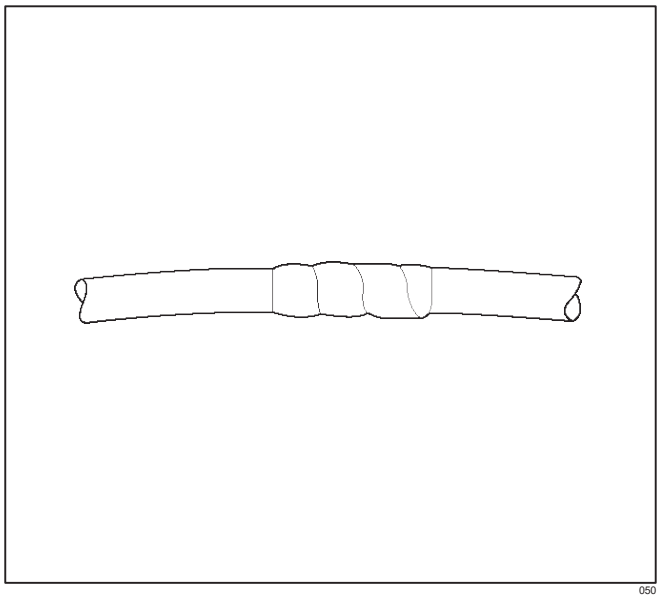
4. Tape over the whole bundle to secure.


050

Twisted Leads


Removal Procedure

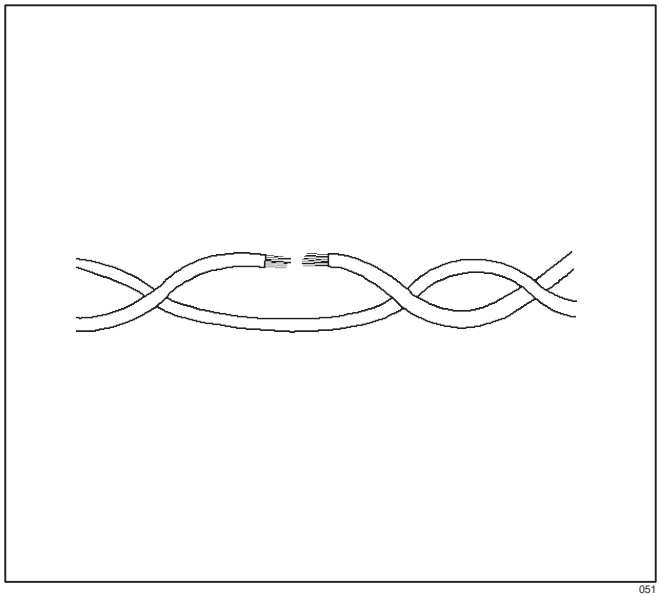1. Locate the damaged wire.
2. Remove the insulation as required.



051

Installation Procedure

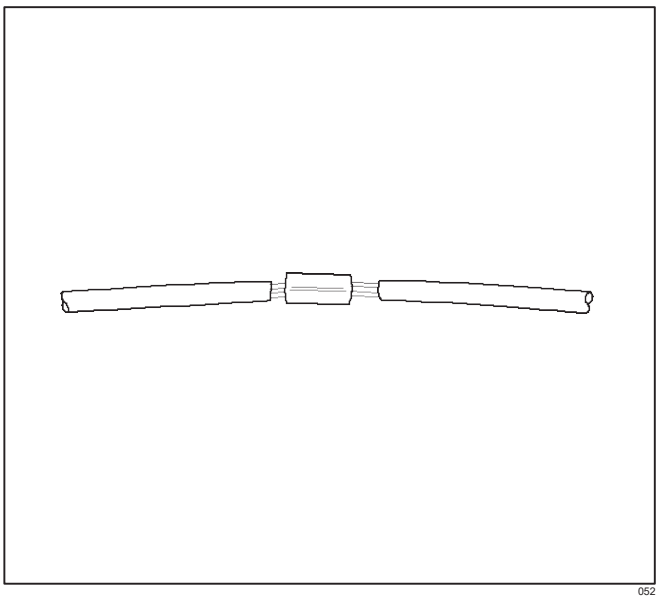
1. Use splice clips and rosin core solder in order to splice the two wires together.


052

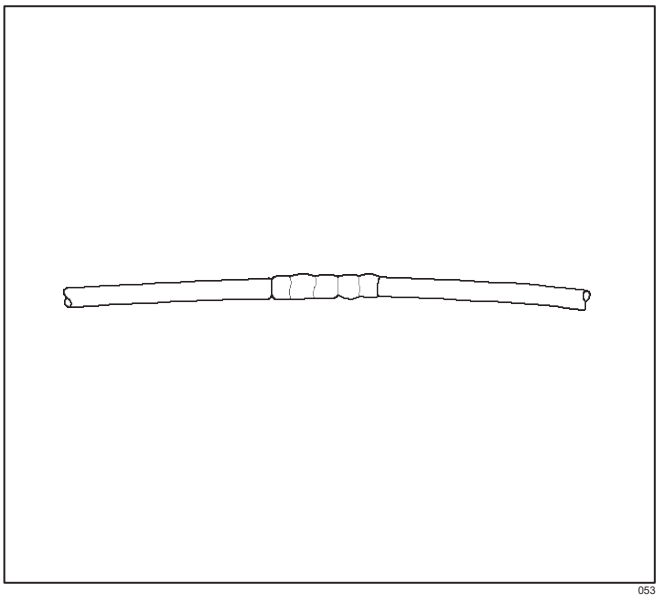
2. Cover the splice with tape in order to insulate it from the other wires.


053

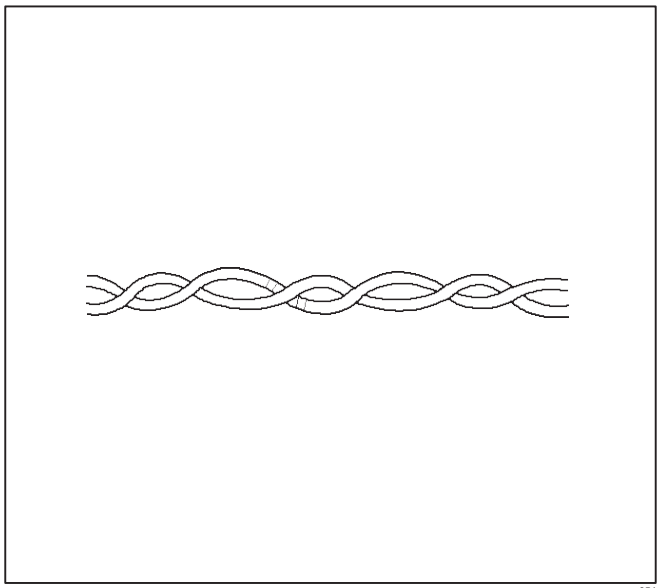3. Twist the wires as they were before starting this procedure.



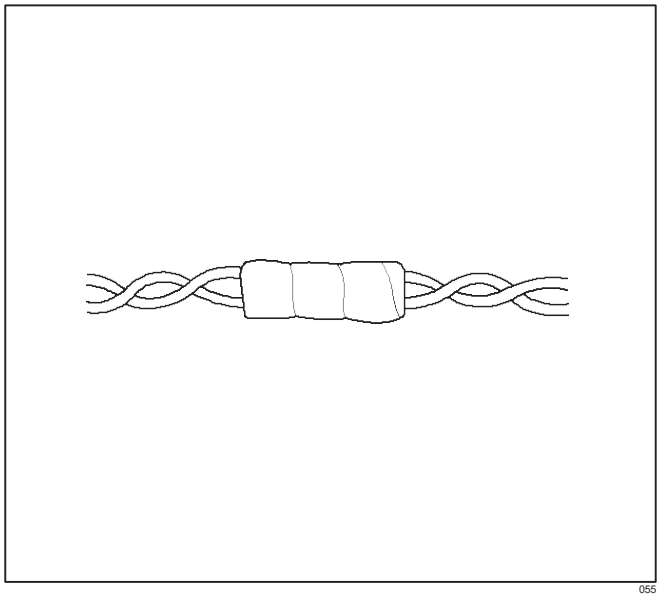4. Tape the wires with electrical tape. Hold in place.



Weather-Pack Connector

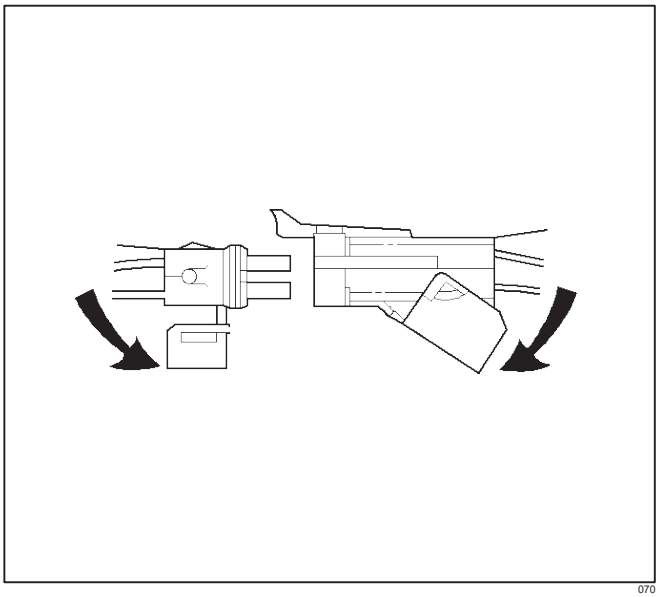
Tools Required

J 28742-A Weather-Pack II Terminal Remover

Removal Procedure


A Weather-Pack connector can be identified by a rubber seal at the rear of the connector. This engine room connector protects against moisture and dirt, which could form oxidation and deposits on the terminals. This protection is important, because of the low voltage and the low amperage found in the electronic systems.

1. Open the secondary lock hinge on the connector.




2. Use tool J 28742-A or the equivalent to remove the pin and the sleeve terminals. Push on J 28742-A to release.

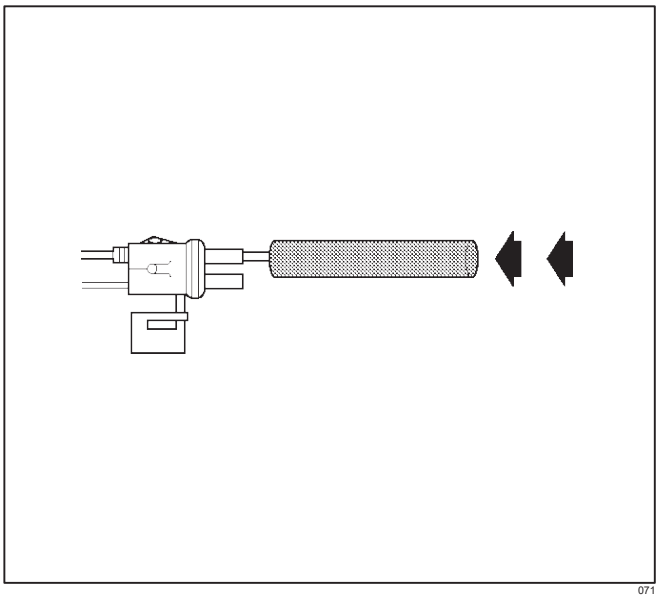NOTE: Do the use an ordinary pick or the terminal may be bent or deformed. Unlike standard blade terminals, these terminals cannot be straightened after they have been improperly bent.



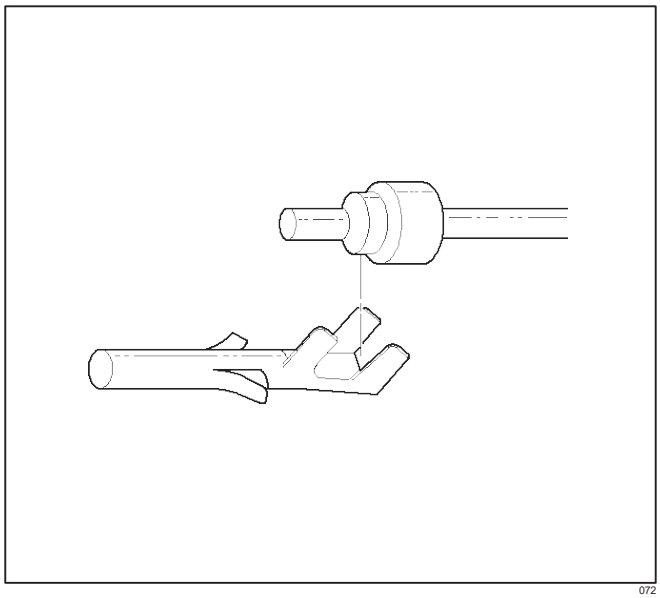
3. Cut the wire immediately behind the cable seal.




Installation Procedure

Make certain the connectors are properly seated and all of the sealing rings are in place when you reconnect the leads. The secondary lock hinge provides a backup locking feature for the connector. The secondary lock hinge is used for added reliability. This flap should retain the terminals even if the small terminal lock tangs are not positioned properly.
Do not replace the Weather-Pack connections with standard connections. Read the instructions provided with the Weather-Pack connector and terminal packages.

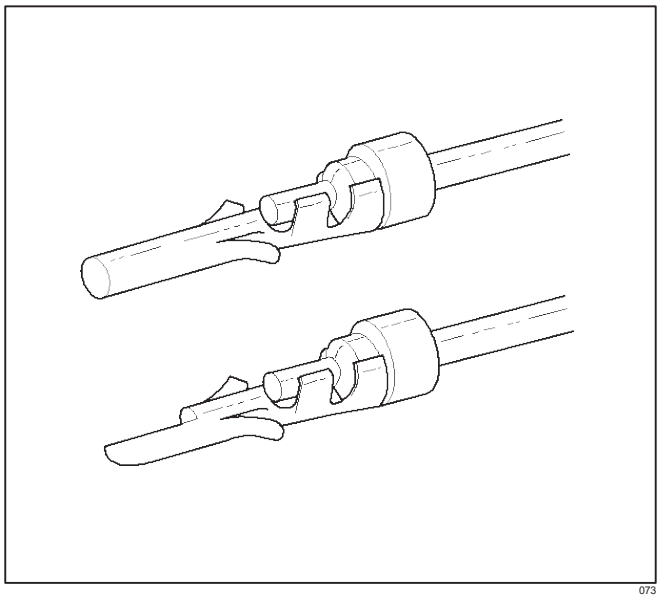1. Replace the terminal.
2. Slip the new seal onto the wire.
3. Strip 5 mm (0.2”) of insulation from the wire.
4. Crimp the terminal over the wire and the seal.



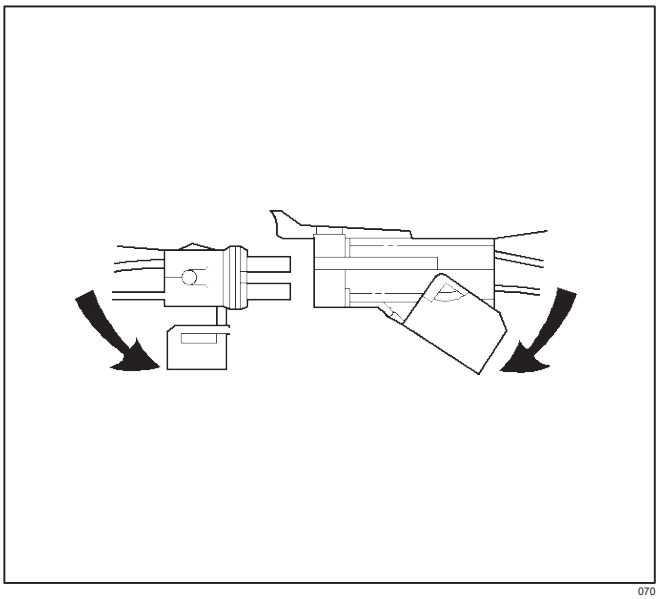5. Push the terminal and the connector to engage the locking tangs.



6. Close the secondary locking hinge.

Com-Pack III

General Information

The Com-Pack III terminal looks similar to some Weather-Pack terminals. This terminal is not sealed and is used where resistance to the environment is not required. Use the standard method when repairing a terminal. Do not use the Weather-Pack terminal tool J 28742-A or equivalent. These will damage the terminals.

Metri-Pack

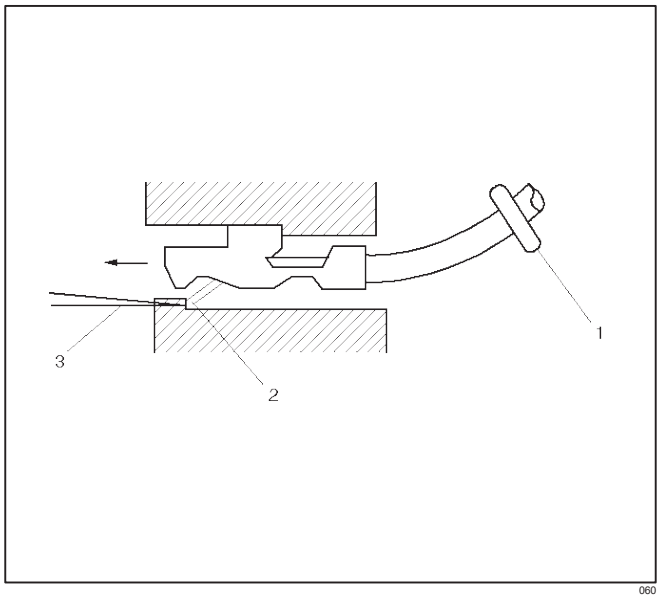
Tools Required

J 35689 Terminal Remover

Removal Procedure

Some connectors use terminals called Metri-Pack Series 150. These may be used at the engine coolant temperature (ECT) sensor.

1. Slide the seal (1) back on the wire.
2. Insert the J 35689 tool or equivalent (3) in order to release the terminal locking tang (2).




3. Push the wire and the terminal out through the connector. If you reuse the terminal, reshape the locking tang.

Installation Procedure

Metri-Pack terminals are also referred to as “pull-to-seat” terminals.

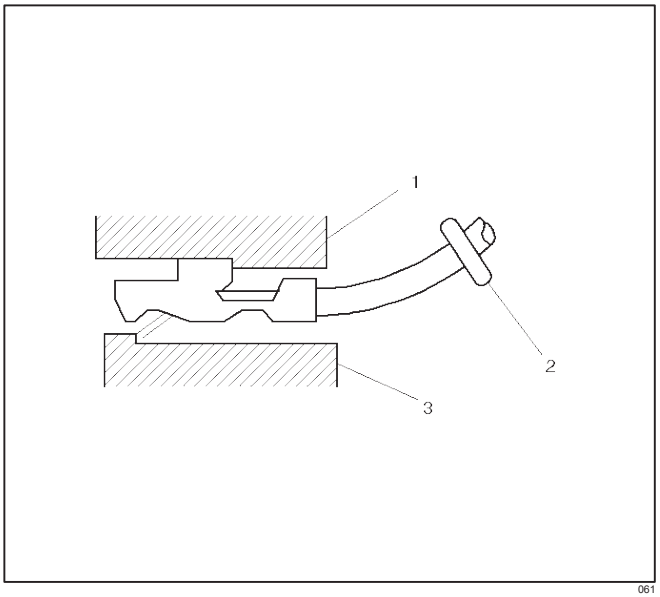1. In order to install a terminal on a wire, the wire must be inserted through the seal (2) and through the connector (3).
2. The terminal (1) is then crimped onto the wire.



3. Then the terminal is pulled back into the connector to seat it in place.

General Description (PCM and Sensors)

58X Reference PCM Input

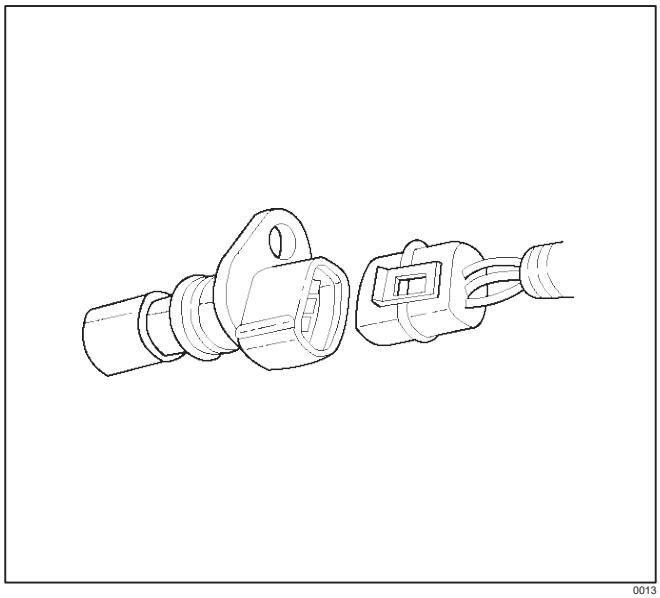
The powertrain control module (PCM) uses this signal from the crankshaft position (CKP) sensor to calculate engine RPM and crankshaft position at all engine speeds. The PCM also uses the pulses on this circuit to initiate injector pulses. If the PCM receives no pulses on this circuit, DTC P0337 will set. The engine will not start and run without using the 58X reference signal.

A/C Request Signal

This signal tells the PCM when the A/C mode is selected at the A/C control head. The PCM uses this to adjust the idle speed before turning “ON” the A/C clutch. The A/C compressor will be inoperative if this signal is not available to the PCM.
Refer to *A/C Clutch Circuit Diagnosis* section for A/C wiring diagrams and diagnosis for the A/C electrical system.

Crankshaft Position (CKP) Sensor


The crankshaft position (CKP) sensor provides a signal used by the powertrain control module (PCM) to calculate the ignition sequence. The CKP sensor initiates the 58X reference pulses which the PCM uses to calculate RPM and crankshaft position.
Refer to *Electronic Ignition System* section for additional information.



0013

Engine Coolant Temperature (ECT) Sensor

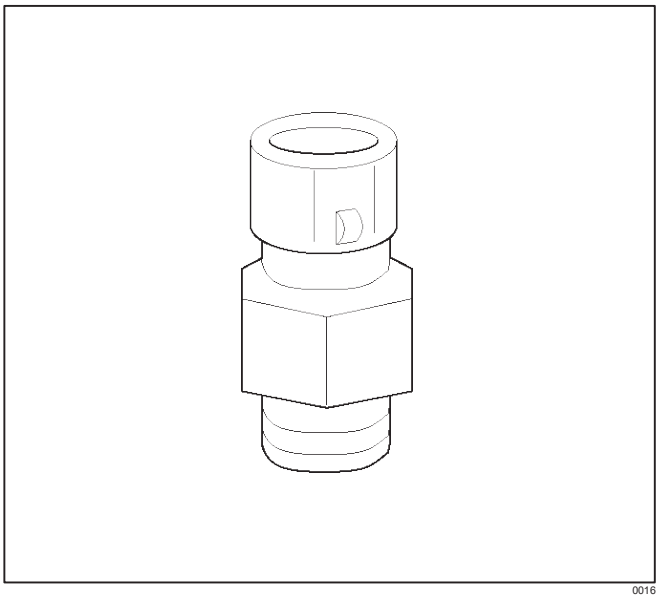The engine coolant temperature (ECT) sensor is a thermistor (a resistor which changes value based on temperature) mounted in the engine coolant stream. Low coolant temperature produces a high resistance of 100,000 ohms at –40˚C (–40˚F). High temperature causes a low resistance of 70 ohms at 130˚C (266˚F). The PCM supplies a 5-volt signal to the ECT sensor through resistors in the PCM and measures the voltage. The signal voltage will be high when the engine is cold and low when the engine is hot. By measuring the voltage, the PCM calculates the engine coolant temperature. Engine coolant temperature affects most of the systems that the PCM controls.
The Tech 2 displays engine coolant temperature in degrees. After engine start-up, the temperature should rise steadily to about 85˚C (185˚F). It then stabilizes when the thermostat opens. If the engine has not been run for several hours (overnight), the engine coolant temperature and intake air temperature displays should be close to each other. A hard fault in the engine coolant sensor circuit will set DTC P0177 or DTC P0118. An intermittent fault will set a DTC P1114 or P1115.



0016

Electrically Erasable Programmable Read Only Memory (EEPROM)

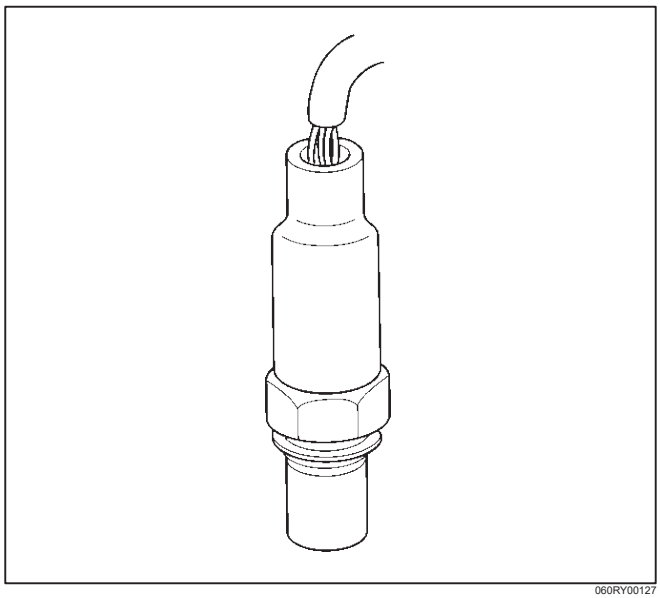
The electrically erasable programmable read only memory (EEPROM) is a permanent memory chip that is physically soldered within the PCM. The EEPROM contains the program and the calibration information that the PCM needs to control powertrain operation.
Unlike the PROM used in past applications, the EEPROM is not replaceable. If the PCM is replaced, the new PCM will need to be programmed. Equipment containing the correct program and calibration for the vehicle is required to program the PCM.

Fuel Control Heated Oxygen Sensors

The fuel control heated oxygen sensors (Bank 1 HO2S 1 and Bank 2 HO2S 1) are mounted in the exhaust stream where they can monitor the oxygen content of the exhaust gas. The oxygen present in the exhaust gas reacts with the sensor to produce a voltage output. This voltage should constantly fluctuate from approximately 100 mV to 900 mV. The heated oxygen sensor voltage can be monitored with a Tech 2. By monitoring the voltage output of the oxygen sensor, the PCM calculates the pulse width command for the injectors to produce the proper combustion chamber mixture.

- Low HO2S voltage is a lean mixture which will result in a rich command to compensate.
- High HO2S voltage is a rich mixture which will result in a lean command to compensate.

An open Bank 1 HO2S 1 signal circuit will set a DTC P0134 and the Tech 2 will display a constant voltage between 400-500 mV. A constant voltage below 300 mV in the sensor circuit (circuit grounded) will set DTC P0131. A constant voltage above 800 mV in the circuit will set DTC P0132. Faults in the Bank 2 HO2S 1 signal circuit will cause DTC 0154 (open circuit), DTC P0151 (grounded circuit), or DTC P0152 (signal voltage high) to set. A fault in the Bank 1 HO2S 1 heater circuit will cause DTC P0135 to set. A fault in the Bank 2 HO2S 1 heater circuit will cause DTC P0155 to set. The PCM can also detect HO2S response problems. If the response time of an HO2S is determined to be too slow, the PCM will store a DTC that indicates degraded HO2S performance.



060RY00127

Catalyst Monitor Heated Oxygen Sensors


Three-way catalytic converters are used to control emissions of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx). The catalyst within the converters promotes a chemical reaction. This reaction oxidizes the HC and CO present in the exhaust gas and converts them into harmless water vapor and carbon dioxide. The catalyst also reduces NOx by converting it to nitrogen. The PCM can monitor this process using the Bank 1 HO2S 2 and the Bank 2 HO2S 2 heated oxygen sensors. The Bank 1 HO2S 1 and the Bank 2 HO2S 1 sensors produce an output signal which indicates the amount of oxygen present in the exhaust gas entering the three-way catalytic converter. The Bank 1 HO2S 2 and the Bank 2 HO2S 2 sensors produce an output signal which indicates the oxygen storage capacity of the catalyst. This indicates the catalyst's ability to efficiently convert exhaust gases. If the catalyst is operating efficiently, the Bank 1 HO2S 1 and the Bank 2 HO2S 1 signals will be more active than the signals produced by the Bank 1 HO2S 2 and the Bank 2 HO2S 2 sensors.

The catalyst monitor sensors operate the same as the fuel control sensors. The Bank 1 HO2S 2 and the Bank 2 HO2S 2 sensors' main function is catalyst monitoring, but they also have a limited role in fuel control. If a sensor output indicates a voltage either above or below the 450 mV bias voltage for an extended period of time, the PCM will make a slight adjustment to fuel trim to ensure that fuel delivery is correct for catalyst monitoring.

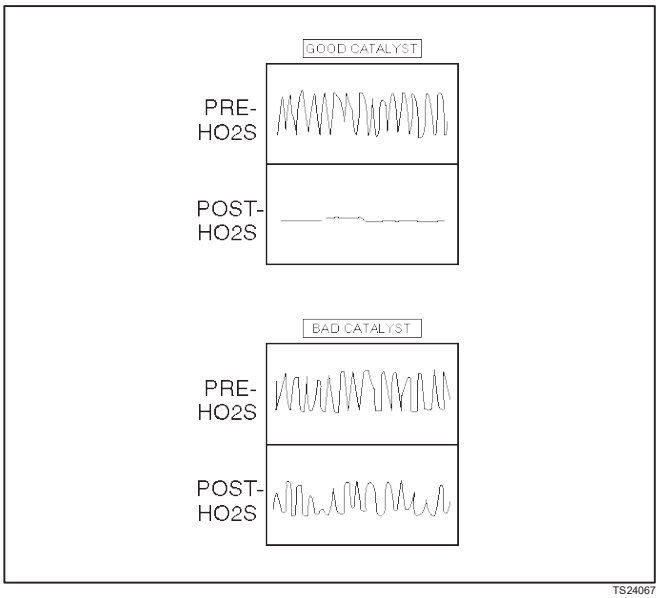A problem with the Bank 1 HO2S 2 signal circuit will set DTC P0137, P0138, or P0140, depending on the specific condition. A problem with the Bank 2 HO2S 2 signal circuit will set DTC P0157, P0158, or P0160, depending on the specific condition. A fault in the heated oxygen sensor heater element or its ignition feed or ground will result in lower sensor response. This may cause incorrect catalyst monitor diagnostic results.



TS24067

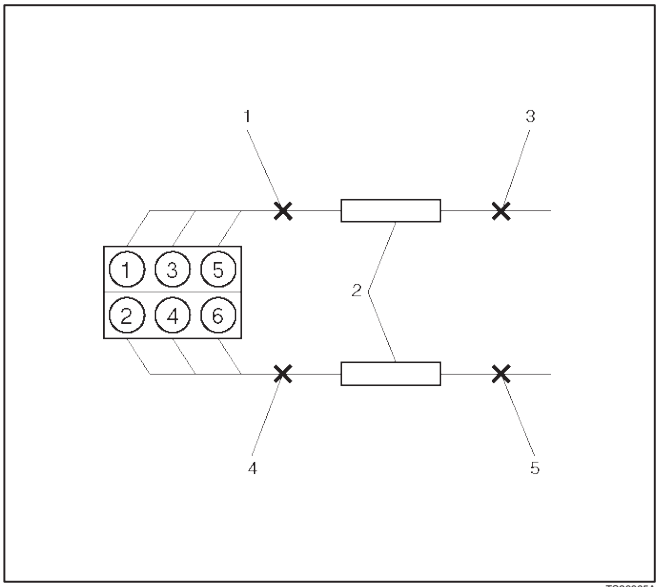

TS23365A

Legend

(1) Bank 1 Sensor 1 (Fuel Control)
(2) Catalytic Converter
(3) Bank 1 Sensor 2 (Catalyst Monitor)
(4) Bank 2 Sensor 1 (Fuel Control)
(5) Bank 2 Sensor 2 (Catalyst Monitor)

Intake Air Temperature (IAT) Sensor

The intake air temperature (IAT) sensor is a thermistor which changes its resistance based on the temperature of air entering the engine. Low temperature produces a high

resistance of 100,000 ohms at –40˚C (–40˚F). High temperature causes low resistance of 70 ohms at 130˚C (266˚F) . The PCM supplies a 5-volt signal to the sensor through a resistor in the PCM and monitors the signal voltage. The voltage will be high when the incoming air is cold. The voltage will be low when the incoming air is hot. By measuring the voltage, the PCM calculates the incoming air temperature. The IAT sensor signal is used to adjust spark timing according to the incoming air density.
The Tech 2 displays the temperature of the air entering the engine. The temperature should read close to the ambient air temperature when the engine is cold and rise as underhood temperature increases. If the engine has not been run for several hours (overnight), the IAT sensor temperature and engine coolant temperature should read close to each other. A fault in the IAT sensor circuit will set DTC P0112 or DTC P0113.

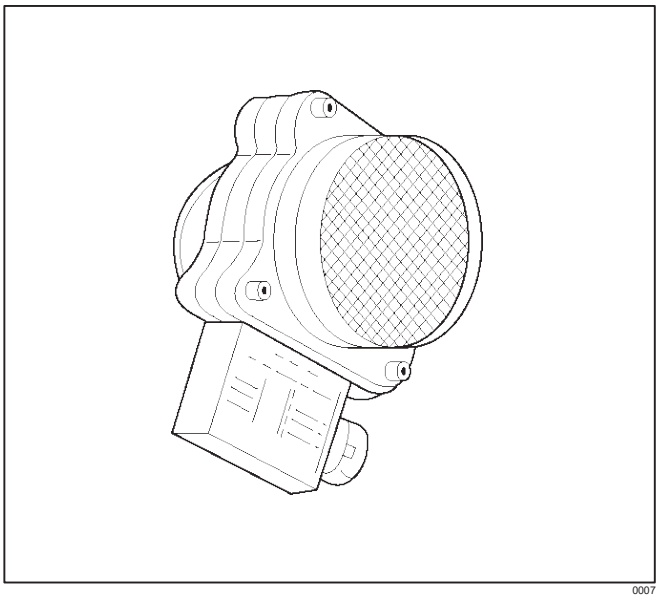
Linear Exhaust Gas Recirculation (EGR) Control

The PCM monitors the exhaust gas recirculation (EGR) actual position and adjusts the pintle position accordingly. The PCM uses information from the following sensors to control the pintle position:

- Engine coolant temperature (ECT) sensor.
- Throttle position (TP) sensor.
- Mass air flow (MAF) sensor.

Mass Air Flow (MAF) Sensor

The mass air flow (MAF) sensor measures the difference between the volume and the quantity of air that enters the engine. “Volume” means the size of the space to be filled. “Quantity” means the number of air molecules that will fit into the space. This information is important to the PCM because heavier, denser air will hold more fuel than lighter, thinner air. The PCM adjusts the air/fuel ratio as needed depending on the MAF value. The Tech 2 reads the MAF value and displays it in terms of grams per second (gm/s). At idle, the Tech 2 should read between 4-7 gm/s on a fully warmed up engine. Values should change quickly on acceleration. Values should remain stable at any given RPM. A failure in the MAF sensor or circuit will set DTC P0101, DTC P0102, or DTC P0103.



0007

Manifold Absolute Pressure (MAP) Sensor

The manifold absolute pressure (MAP) sensor responds to changes in intake manifold pressure (vacuum). The MAP sensor signal voltage to the PCM varies from below 2 volts at idle (high vacuum) to above 4 volts with the ignition ON, engine not running or at wide-open throttle (low vacuum).
The MAP sensor is used to determine the following:

- Manifold pressure changes while the linear EGR flow test diagnostic is being run. Refer to *DTC P0401*.
- Barometric pressure (BARO).

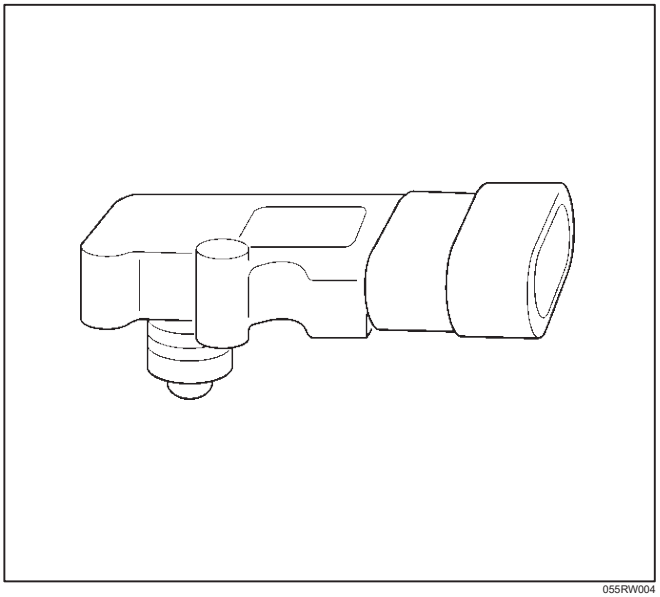If the PCM detects a voltage that is lower than the possible range of the MAP sensor, DTC P0107 will be set. A signal voltage higher than the possible range of the sensor will set DTC P0108. An intermittent low or high voltage will set DTC P1107, respectively. The PCM can detect a shifted MAP sensor. The PCM compares the MAP sensor signal to a calculated MAP based on throttle position and various engine load factors. If the PCM detects a MAP signal that varies excessively above or below the calculated value, DTC P0106 will set.


055RW004

Powertrain Control Module (PCM)

The powertrain control module (PCM) is located in the passenger compartment below the center console. The PCM controls the following:

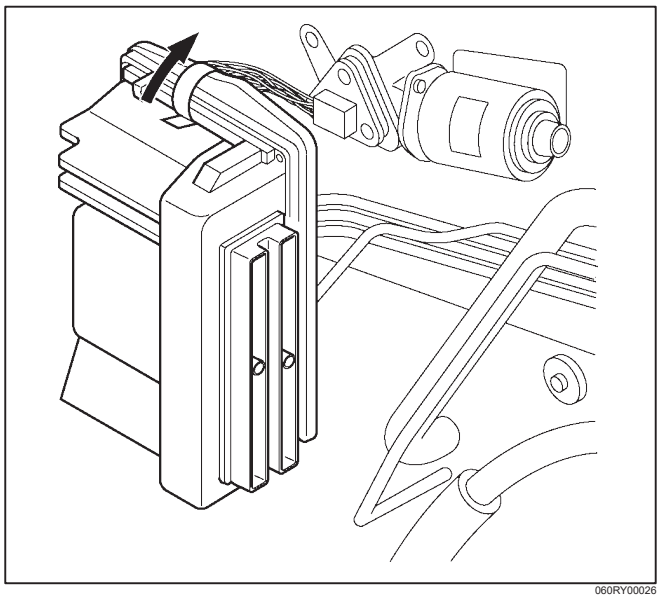
- Fuel metering system.
- Transmission shifting (automatic transmission only).
- Ignition timing.
- On-board diagnostics for powertrain functions.

The PCM constantly observes the information from various sensors. The PCM controls the systems that affect vehicle performance. The PCM performs the diagnostic function of the system. It can recognize operational problems, alert the driver through the MIL (Check Engine lamp), and store diagnostic trouble codes (DTCs). DTCs identify the problem areas to aid the technician in making repairs.

PCM Function

The PCM supplies either 5 or 12 volts to power various sensors or switches. The power is supplied through resistances in the PCM which are so high in value that a test light will not light when connected to the circuit. In some cases, even an ordinary shop voltmeter will not give an accurate reading because its resistance is too low. Therefore, a digital voltmeter with at least 10 megohms input impedance is required to ensure accurate voltage readings. Tool J 39200 meets this requirement. The PCM controls output circuits such as the injectors, fan relays, etc., by controlling the ground or the power feed circuit through transistors or through either of the following two devices:

- Output Driver Module (ODM)
- Quad Driver Module (QDM)



060RY00026

PCM Components

The PCM is designed to maintain exhaust emission levels to government mandated standards while providing excellent driveability and fuel efficiency. The PCM monitors numerous engine and vehicle functions via electronic sensors such as the throttle position (TP) sensor, heated oxygen sensor (HO2S), and vehicle speed sensor (VSS). The PCM also controls certain engine operations through the following:

- Fuel injector control
- Ignition control module
- ION sensing module
- Automatic transmission shift functions
- Cruise control
- Evaporative emission (EVAP) purge
- A/C clutch control

PCM Voltage Description

The PCM supplies a buffered voltage to various switches and sensors. It can do this because resistance in the PCM is so high in value that a test light may not illuminate when connected to the circuit. An ordinary shop voltmeter may not give an accurate reading because the voltmeter input impedance is too low. Use a 10-megohm input impedance digital voltmeter (such as J 39200) to assure accurate voltage readings.

The input/output devices in the PCM include analog-to-digital converters, signal buffers, counters, and special drivers. The PCM controls most components with electronic switches which complete a ground circuit when turned “ON.” These switches are arranged in groups of 4 and 7, called either a surface-mounted quad driver module (QDM), which can independently control up to 4 output terminals, or QDMs which can independently control up to 7 outputs. Not all outputs are always used.

PCM Input/Outputs

Inputs – Operating Conditions Read

- Air Conditioning “ON” or “OFF”
- Engine Coolant Temperature
- Crankshaft Position
- Exhaust Oxygen Content
- Electronic Ignition
- Manifold Absolute Pressure
- Battery Voltage
- Throttle Position
- Vehicle Speed
- Fuel Pump Voltage
- Power Steering Pressure
- Intake Air Temperature
- Mass Air Flow
- Engine Knock
- Acceleration Position

Outputs – Systems Controlled

- EVAP Canister Purge
- Exhaust Gas Recirculation (EGR)
- Ignition Control
- Fuel Control
- ION Sensing Module
- Electric Fuel Pump
- Air Conditioning

- Diagnostics
  - Malfunction Indicator Lamp
  - Data Link Connector (DLC)
  - Data Output
- Transmission Control Module

PCM Service Precautions

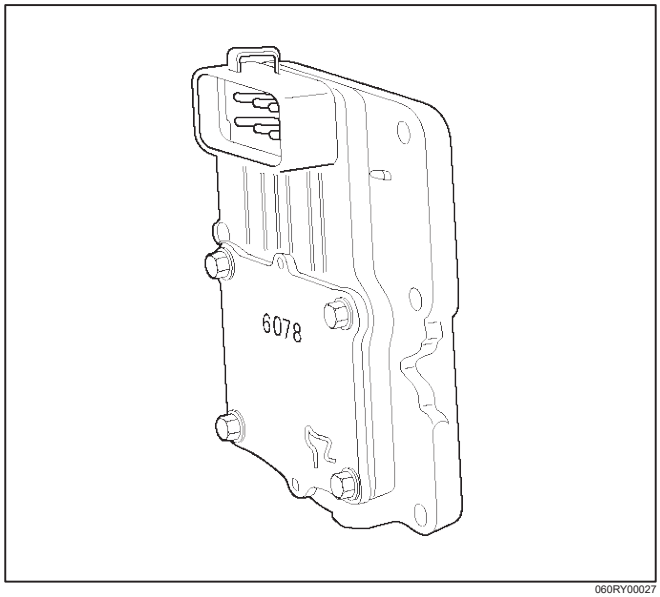
The PCM is designed to withstand normal current draws associated with vehicle operation. Avoid overloading any circuit. When testing for opens and shorts, do not ground or apply voltage to any of the PCM's circuits unless instructed to do so. These circuits should only be tested using digital voltmeter J 39200. The PCM should remain connected to the PCM or to a recommended breakout box.

Reprogramming The PCM

Reprogramming of the PCM is done without removing it from the vehicle . This provides a flexible and cost-effective method of making changes in software calibrations.
Refer to the latest Techline information on reprogramming or flashing procedures.

Throttle Position (TP) Sensor

The throttle position (TP) sensor is a potentiometer connected to the throttle shaft on the throttle body. The PCM monitors the voltage on the signal line and calculates throttle position. As the throttle valve angle is changed (accelerator pedal moved), the TP sensor signal also changes. At a closed throttle position, the output of the TP1 sensor is low. As the throttle valve opens, the output increases so that at wide open throttle (WOT), the output voltage should be above 92% (Tech 2 Display).
The PCM calculates fuel delivery based on throttle valve angle (driver demand). A broken or loose TP sensor may cause intermittent bursts of fuel from an injector and unstable idle because the PCM thinks the throttle is moving.



060RY00027

Transmission Fluid Temperature (TFT) Sensor

The transmission fluid temperature sensor is a thermistor which changes its resistance based on the temperature of the transmission fluid. For a complete description of the TFT sensor, refer to *4L30-E Automatic Transmission Diagnosis* section.
A failure in the TFT sensor or associated wiring will cause DTC P0712 or DTC P0713 to set. In this case, engine coolant temperature will be substituted for the TFT sensor value and the transmission will operate normally.

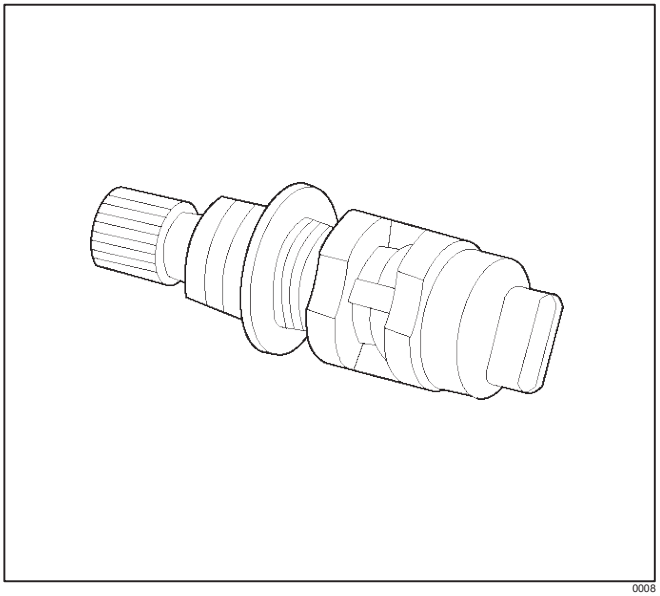
Transmission Range Switch (Mode Switch)

IMPORTANT: The vehicle should not be driven with the transmission range switch disconnected; idle quality will be affected.

The four inputs from the transmission range switch indicate to the PCM which position is selected by the transmission selector lever. This information is used for ignition timing, EVAP canister purge, EGR operation.
For more information on the transmission on the transmission range switch, refer to *4L30-E Automatic Transmission* section.

Vehicle Speed Sensor (VSS)

The PCM determines the speed of the vehicle by converting a pulsing voltage signal from the vehicle speed sensor (VSS) into miles per hour. The PCM uses this signal to operate the cruise control, speedometer, and the TCC and shift solenoids in the transmission. For more information on the TCC and shift solenoids, refer to *4L30-E Automatic Transmission* section.


0008

Use of Circuit Testing Tools

Do not use a test light to diagnose the powertrain electrical systems unless specifically instructed by the diagnostic procedures. Use Connector Test Adapter Kit J 35616 whenever diagnostic procedures call for probing connectors.

Aftermarket Electrical and Vacuum Equipment

Aftermarket (add-on) electrical and vacuum equipment is defined as any equipment which connects to the vehicle's electrical or vacuum systems that is installed on a vehicle after it leaves the factory. No allowances have been made in the vehicle design for this type of equipment.

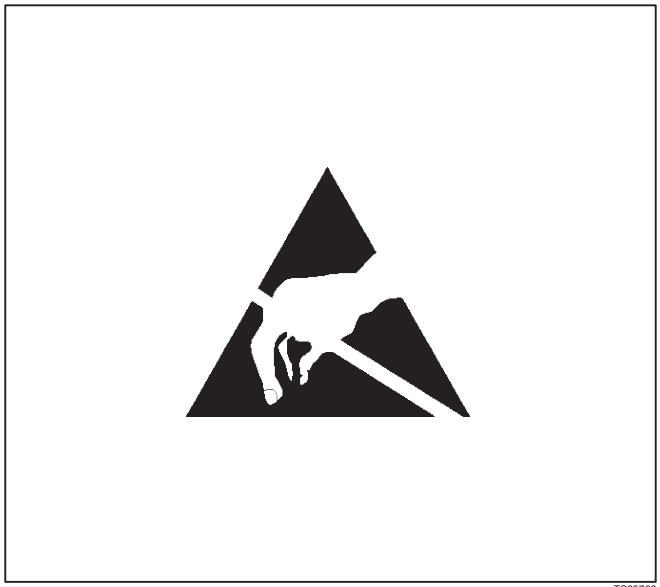
NOTE: No add-on vacuum equipment should be added to this vehicle.

NOTE: Add-on electrical equipment must only be connected to the vehicle's electrical system at the battery (power and ground).

Add-on electrical equipment, even when installed to these guidelines, may still cause the powertrain system to malfunction. This may also include equipment not connected to the vehicle electrical system such as portable telephones and radios. Therefore, the first step in diagnosing any powertrain problem is to eliminate all aftermarket electrical equipment from the vehicle. After this is done, if the problem still exists, it may be diagnosed in the normal manner.

Electrostatic Discharge Damage

Electronic components used in the PCM are often designed to carry very low voltage. Electronic components are susceptible to damage caused by electrostatic discharge. Less than 100 volts of static electricity can cause damage to some electronic components. By comparison, it takes as much as 4000 volts for a person to feel even the zap of a static discharge.



TS23793

There are several ways for a person to become statically charged. The most common methods of charging are by friction and induction.

- An example of charging by friction is a person sliding across a vehicle seat.
- Charge by induction occurs when a person with well insulated shoes stands near a highly charged object and momentary touches ground. Charges of the same polarity are drained off leaving the person highly charged with the opposite polarity. Static charges can cause damage, therefore it is important to use care when handling and testing electronic components.

NOTE: To prevent possible electrostatic discharge damage, follow these guidelines:

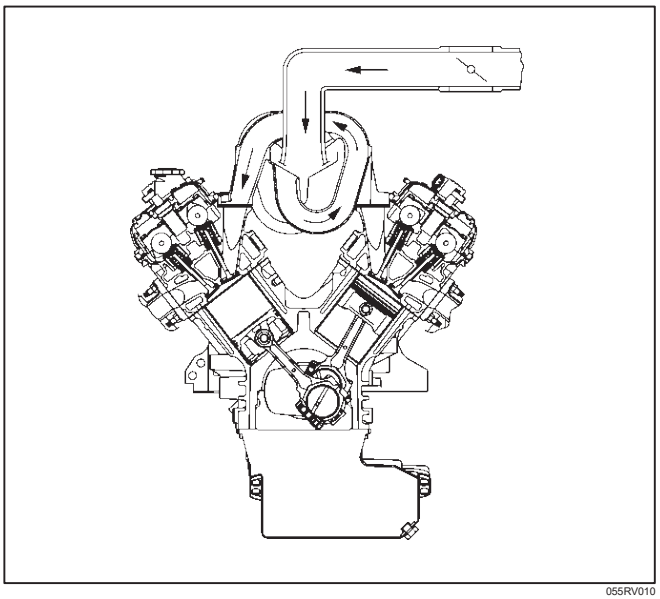
- Do not touch the PCM connector pins or soldered components on the PCM circuit board.
- Do not open the replacement part package until the part is ready to be installed.
- Before removing the part from the package, ground the package to a known good ground on the vehicle.
- If the part has been handled while sliding across the seat, while sitting down from a standing position, or while walking a distance, touch a known good ground before installing the part.

General Description (Air Induction)

Air Induction System

The air induction system filters contaminants from the outside air, and directs the progress of the air as it is drawn into the engine. A remote-mounted air cleaner prevents dirt and debris in the air from entering the engine. The air duct assembly routes filtered air to the throttle body. Air enters the engine by to following steps:

1. Through the throttle body.
2. Into the common chamber.
3. Through the cylinder head intake ports.
4. Into the cylinders.



055RV010

General Description (Fuel Metering)

Acceleration Mode

The PCM provides extra fuel when it detects a rapid increase in the throttle position and the air flow.

Battery Voltage Correction Mode

When battery voltage is low, the PCM will compensate for the weak spark by increasing the following:

- The amount of fuel delivered.
- The idle RPM.
- Ignition dwell time.

Clear Flood Mode

Clear a flooded engine by pushing the accelerator pedal down all the way. The PCM then de-energizes the fuel injectors. The PCM holds the fuel injectors de-energized as long as the throttle remains above 80% and the engine speed is below 800 RPM. If the throttle position becomes less than 80%, the PCM again begins to pulse the injectors “ON” and “OFF,” allowing fuel into the cylinders.

Deceleration Mode

The PCM reduces the amount of fuel injected when it detects a decrease in the throttle position and the air flow. When deceleration is very fast, the PCM may cut off fuel completely for short periods.

Engine Speed/Vehicle Speed/Fuel Disable Mode

The PCM monitors engine speed. It turns off the fuel injectors when the engine speed increases above 6400 RPM. The fuel injectors are turned back on when engine speed decreases below 6150 RPM.

Fuel Cutoff Mode

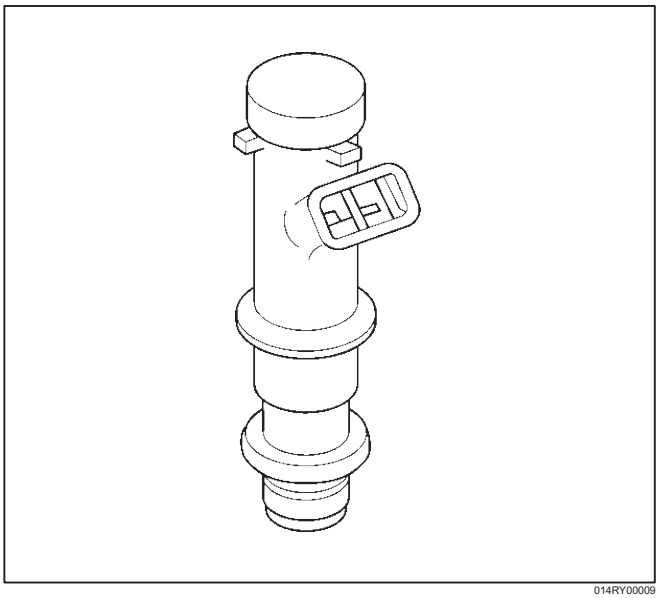
No fuel is delivered by the fuel injectors when the ignition is “OFF.” This prevents engine run-on. In addition, the PCM suspends fuel delivery if no reference pulses are detected (engine not running) to prevent engine flooding.

Fuel Injector

The sequential multiport fuel injection (SFI) fuel injector is a solenoid-operated device controlled by the PCM. The PCM energizes the solenoid, which opens a valve to allow fuel delivery.

The fuel is injected under pressure in a conical spray pattern at the opening of the intake valve. Excess fuel not used by the injectors passes through the fuel pressure regulator before being returned to the fuel tank.

A fuel injector which is stuck partly open will cause a loss of fuel pressure after engine shut down, causing long crank times.



014RY00009

Fuel Metering System Components

The fuel metering system is made up of the following parts:

- The fuel injectors.
- The throttle body.
- The fuel rail.
- The fuel pressure regulator.
- The PCM.
- The crankshaft position (CKP) sensor.
- The ION sensing module.
- The fuel pump.
- The fuel pump relay.

Basic System Operation

The fuel metering system starts with the fuel in the fuel tank. An electric fuel pump, located in the fuel tank, pumps fuel to the fuel rail through an in-line fuel filter. The pump is designed to provide fuel at a pressure above the pressure needed by the injectors. A fuel pressure regulator in the fuel rail keeps fuel available to the fuel injectors at a constant pressure. A return line delivers unused fuel back to the fuel tank. Refer to *Section 6C* for further information on the fuel tank, line filter, and fuel pipes.

Fuel Metering System Purpose

The basic function of the air/fuel metering system is to control the air/fuel delivery to the engine. Fuel is delivered to the engine by individual fuel injectors mounted in the intake manifold near each intake valve.

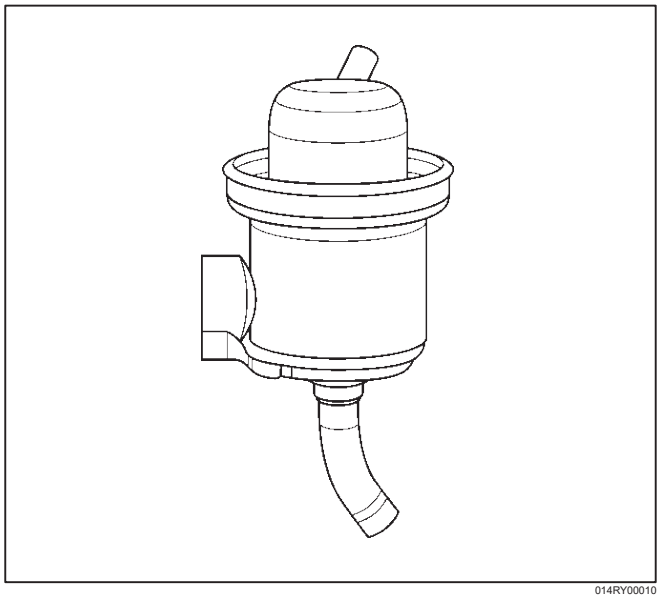
The main control sensor is the heated oxygen sensor (HO2S) located in the exhaust system. The HO2S tells the PCM how much oxygen is in the exhaust gas. The PCM changes the air/fuel ratio to the engine by controlling the amount of time that fuel injector is “ON.” The best mixture to minimize exhaust emissions is 14.7 parts of air to 1 part of gasoline by weight, which allows the catalytic converter to operate most efficiently. Because of the constant measuring and adjusting of the air/fuel ratio, the fuel injection system is called a “closed loop” system.

The PCM monitors signals from several sensors in order to determine the fuel needs of the engine. Fuel is delivered under one of several conditions called “modes.” All modes are controlled by the PCM.

Fuel Pressure Regulator

The fuel pressure regulator is a diaphragm-operated relief valve mounted on the fuel rail with fuel pump pressure on one side and manifold pressure on the other side. The fuel pressure regulator maintains the fuel pressure available to the injector at three times barometric pressure adjusted for engine load. It may be serviced separtely.

If the pressure is too low, poor performance and a DTC P0131, DTC P0151,DTC P0171 or DTC P1171 will be the result. If the pressure is too high, excessive odor and/or a DTC P0132, DTC P0152,DTC P0172 will be the result. Refer to *Fuel System Diagnosis* for information on diagnosing fuel pressure conditions.



014RY00010

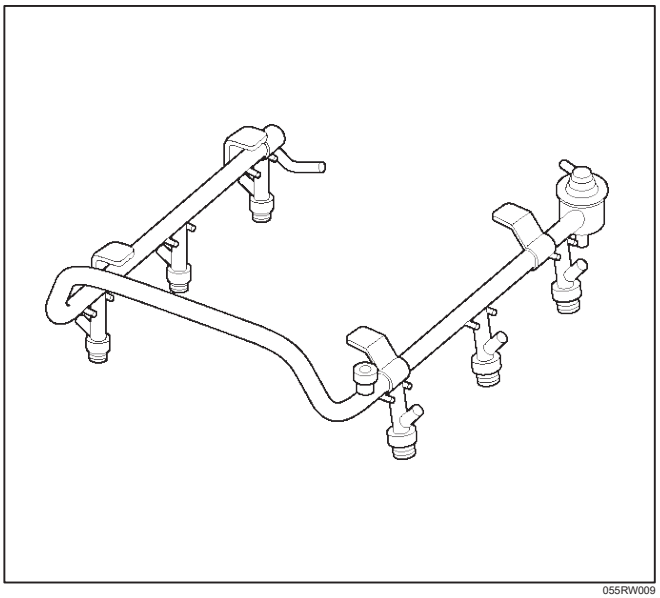
Fuel Pump Electrical Circuit

When the key is first turned “ON,” the PCM energizes the fuel pump relay for two seconds to build up the fuel pressure quickly. If the engine is not started within two seconds, the PCM shuts the fuel pump off and waits until the engine is cranked. When the engine is cranked and the 58 X crankshaft position signal has been detected by the PCM, the PCM supplies 12 volts to the fuel pump relay to energize the electric in-tank fuel pump.

An inoperative fuel pump will cause a “no-start” condition. A fuel pump which does not provide enough pressure will result in poor performance.

Fuel Rail

The fuel rail is mounted to the top of the engine and distributes fuel to the individual injectors. Fuel is delivered to the fuel inlet tube of the fuel rail by the fuel lines. The fuel goes through the fuel rail to the fuel pressure regulator. The fuel pressure regulator maintains a constant fuel pressure at the injectors. Remaining fuel is then returned to the fuel tank.



055RW009

Run Mode

The run mode has the following two conditions:

- Open loop
- Closed loop

When the engine is first started the system is in “open loop” operation. In “open loop,” the PCM ignores the signal from the heated oxygen sensor (HO2S). It calculates the air/fuel ratio based on inputs from the TP, ECT, and MAF sensors.

The system remains in “open loop” until the following conditions are met:

- The HO2S has a varying voltage output showing that it is hot enough to operate properly (this depends on temperature).
- The ECT has reached a specified temperature.
- A specific amount of time has elapsed since starting the engine.
- Engine speed has been greater than a specified RPM since start-up.

The specific values for the above conditions vary with different engines and are stored in the programmable read only memory (PROM). When these conditions are met, the system enters “closed loop” operation. In “closed loop,” the PCM calculates the air/fuel ratio (injector on-time) based on the signal from the HO2S. This allows the air/fuel ratio to stay very close to 14.7:1.

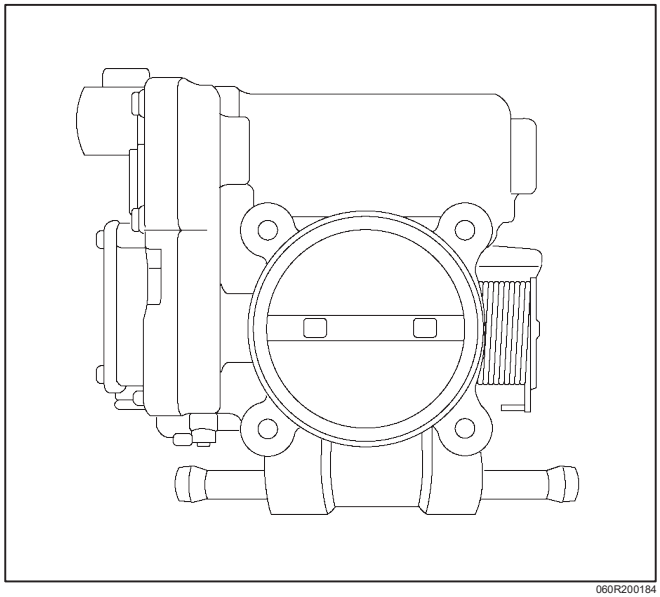
Starting Mode

When the ignition is first turned “ON,” the PCM energizes the fuel pump relay for two seconds to allow the fuel pump to build up pressure. The PCM then checks the engine coolant temperature (ECT) sensor and the throttle position (TP) sensor to determine the proper air/fuel ratio for starting.

The PCM controls the amount of fuel delivered in the starting mode by adjusting how long the fuel injectors are energized by pulsing the injectors for very short times.

Throttle Body Unit

The throttle body has a throttle plate to control the amount of air delivered to the engine. The TP sensor are also mounted on the throttle body. Vacuum ports located behind the throttle plate provide the vacuum signals needed by various components.
Engine coolant is directed through a coolant cavity in the throttle body to warm the throttle valve and to prevent icing.


060R200184

General Description (Electronic Ignition System)

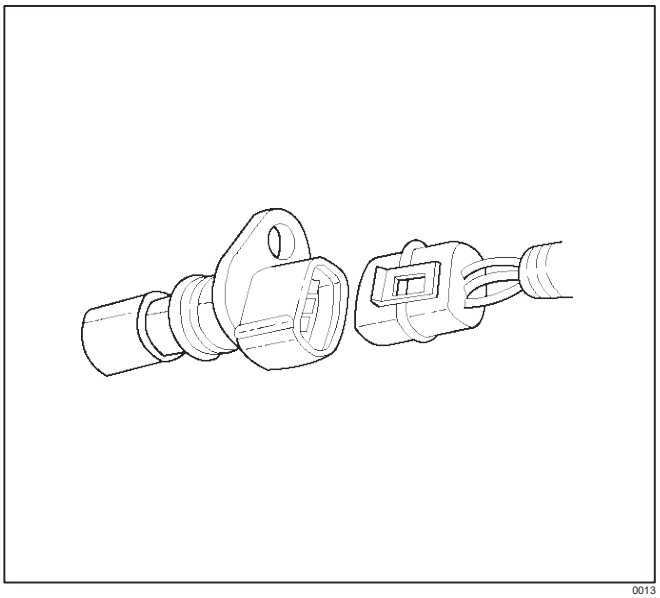
Crankshaft Position (CKP) Sensor

The crankshaft position (CKP) sensor provides a signal used by the powertrain control module (PCM) to calculate the ignition sequence. The sensor initiates the 58X reference pulses which the PCM uses to calculate RPM and crankshaft position. Refer to *Electronic Ignition System* section for additional information.

Electronic Ignition


The electronic ignition system controls fuel combustion by providing a spark to ignite the compressed air/fuel mixture at the correct time. To provide optimum engine performance, fuel economy, and control of exhaust emissions, the PCM controls the spark advance of the ignition system. Electronic ignition has the following advantages over a mechanical distributor system:

- No moving parts.
- Less maintenance.
- Remote mounting capability.
- No mechanical load on the engine.
- More coil cooldown time between firing events.
- Elimination of mechanical timing adjustments.
- Increased available ignition coil saturation time.


0013

Ignition Coils

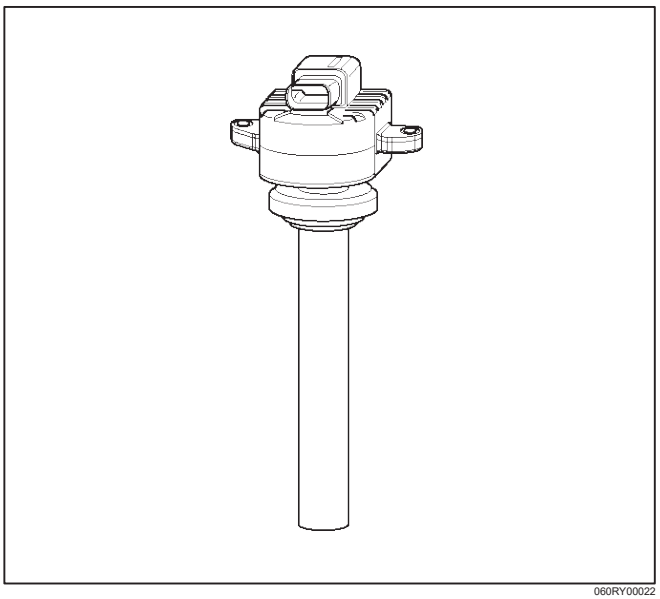A separate coil-at-plug module is located at each spark plug. The coil-at-plug module is attached to the engine with two screws. It is installed directly to the spark plug by an electrical contact inside a rubber boot. A three-way connector provides 12-volt primary supply from the 15-amp ignition fuse, a ground-switching trigger line from the PCM, and a ground.



060RY00022

Ignition Control


The ignition control (IC) spark timing is the PCM's method of controlling the spark advance and the ignition dwell.
The IC spark advance and the ignition dwell are calculated by the PCM using the following inputs:

- Engine speed.
- Crankshaft position (58X reference).
- Engine coolant temperature (ECT) sensor.
- Throttle position (TP) sensor.
- ION sensing module.
- Park/Neutral position (PRNDL input).

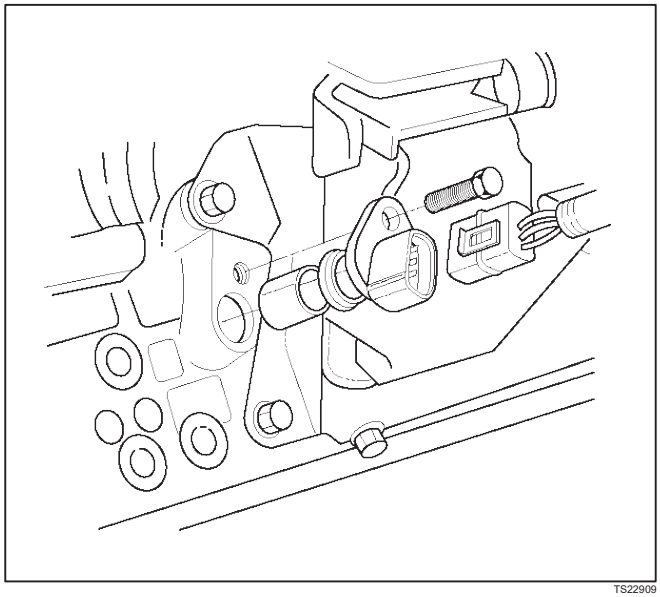- Vehicle speed (vehicle speed sensor).
- PCM and ignition system supply voltage.
- The crankshaft position (CKP) sensor sends the PCM a 58X signal related to the exact position of the crankshaft.


TS22909

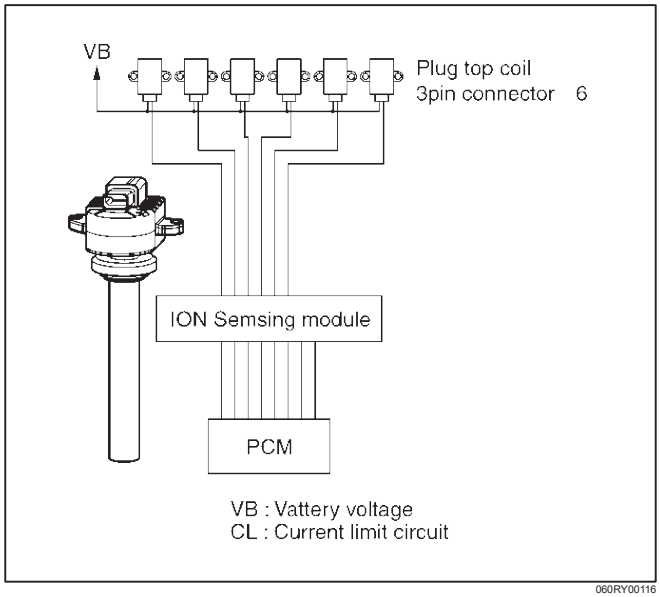Based on these sensor signals and engine load information, the PCM sends 5V to each ignition coil.



060RY00116

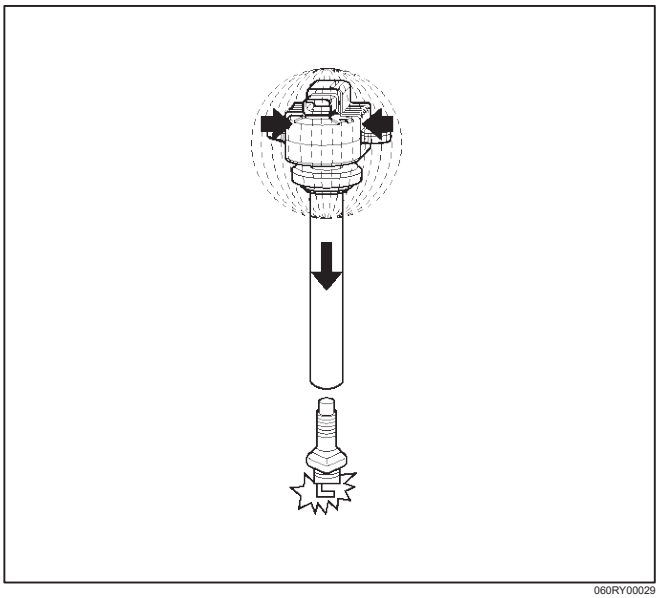
This module has the function to energize and de-energize the primary ignition coil in response to signals from the PCM. The Throttle PCM controls ignition timing and dwell time.

Continuity and out-or-range value check:

This diagnosis detects open circuit or short-circuiting in the Electronic Spark Timing (EST) line by monitoring EST signals. A failure determination is made when the signal voltage remains higher or lower than the threshold for corresponding fault code beyond a predetermined time period.

Diagnosis enabling conditions are as follows:

- RPM is higher than the specified threshold.
- EST line is enabled.


060RY00029

Ignition Control PCM Output

The PCM provides a zero volt (actually about 100 mV to 200 mV) or a 5-volt output signal to the ignition control (IC) module. Each spark plug has its own primary and secondary ignition coil assembly (”coil-at-plug”) located at the spark plug itself. When the ignition coil receives the 5-volt signal from the PCM, it provides a ground path for the B+ supply to the primary side of the coil-at -plug module. When the PCM shuts off the 5-volt signal to the ION sensing module, the ground path for the primary coil is broken. The magnetic field collapses and induces a high voltage secondary impulse which fires the spark plug and ignites the air/fuel mixture.

The circuit between the PCM and the ignition coil is monitored for open circuits, shorts to voltage, and shorts to ground. If the PCM detects one of these events, it will set one of the following DTCs:

- P0351: Ignition coil Fault on Cylinder #1
- P0352: Ignition coil Fault on Cylinder #2
- P0353: Ignition coil Fault on Cylinder #3
- P0354: Ignition coil Fault on Cylinder #4
- P0355: Ignition coil Fault on Cylinder #5
- P0356: Ignition coil Fault on Cylinder #6

Powertrain Control Module (PCM)

The PCM is responsible for maintaining proper spark and fuel injection timing for all driving conditions. To provide optimum driveability and emissions, the PCM monitors the input signals from the following components in order to calculate spark timing:

- Engine coolant temperature (ECT) sensor.
- Intake air temperature (IAT) sensor.
- Mass air flow (MAF) sensor.
- PRNDL input from transmission range switch.
- Throttle position (TP) sensor.
- Vehicle speed sensor (VSS) .
- Crankshaft position (CKP) sensor.

Spark Plug

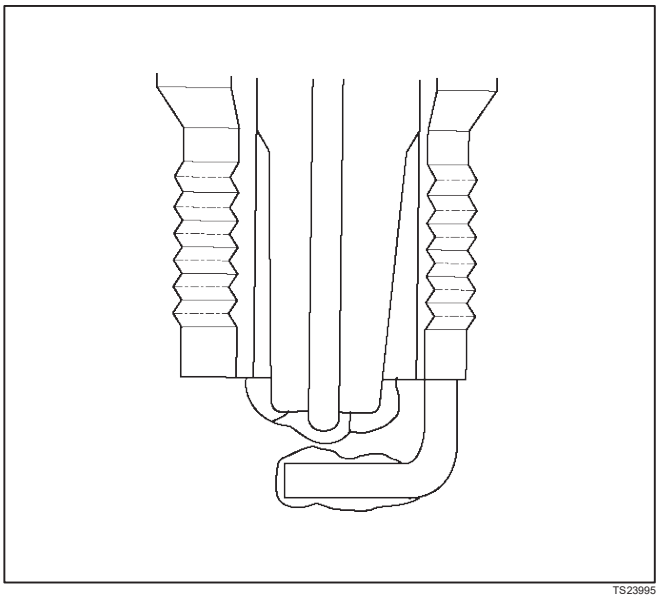
Although worn or dirty spark plugs may give satisfactory operation at idling speed, they frequency fail at higher engine speeds. Faulty spark plugs may cause poor fuel economy, power loss, loss of speed, hard starting and generally poor engine performance. Follow the scheduled maintenance service recommendations to ensure satisfactory spark plug performance. Refer to *Maintenance and Lubrication* section.

Normal spark plug operation will result in brown to grayish-tan deposits appearing on the insulator portion of the spark plug. A small amount of red-brown, yellow, and white powdery material may also be present on the insulator tip around the center electrode. These deposits are normal combustion by-products of fuels and lubricating oils with additives. Some electrode wear will also occur. Engines which are not running properly are often referred to as “misfiring.” This means the ignition spark is not igniting the air/fuel mixture at the proper time. While other ignition and fuel system causes must also be considered, possible causes include ignition system conditions which allow the spark voltage to reach ground in some other manner than by jumping across the air gap at the tip of the spark plug, leaving the air/fuel mixture unburned. Refer to *DTC P0300*. Misfiring may also occur when the tip of the spark plug becomes overheated and ignites the mixture before the spark jumps. This is referred to as “pre-ignition.”

Spark plugs may also misfire due to fouling, excessive gap, or a cracked or broken insulator. If misfiring occurs before the recommended replacement interval, locate and correct the cause.


Carbon fouling of the spark plug is indicated by dry, black carbon (soot) deposits on the portion of the spark plug in the cylinder. Excessive idling and slow speeds under light engine loads can keep the spark plug temperatures so low that these deposits are not burned off. Very rich fuel mixtures or poor ignition system output may also be the cause. Refer to DTC P0172.

Oil fouling of the spark plug is indicated by wet oily deposits on the portion of the spark plug in the cylinder, usually with little electrode wear. This may be caused by oil during break-in of new or newly overhauled engines. Deposit fouling of the spark plug occurs when the normal red-brown, yellow or white deposits of combustion by products become sufficient to cause misfiring. In some cases, these deposits may melt and form a shiny glaze on the insulator around the center electrode. If the fouling is found in only one or two cylinders, valve stem clearances or intake valve seals may be allowing excess lubricating oil to enter the cylinder, particularly if the deposits are heavier on the side of the spark plug facing the intake valve.



TS23995

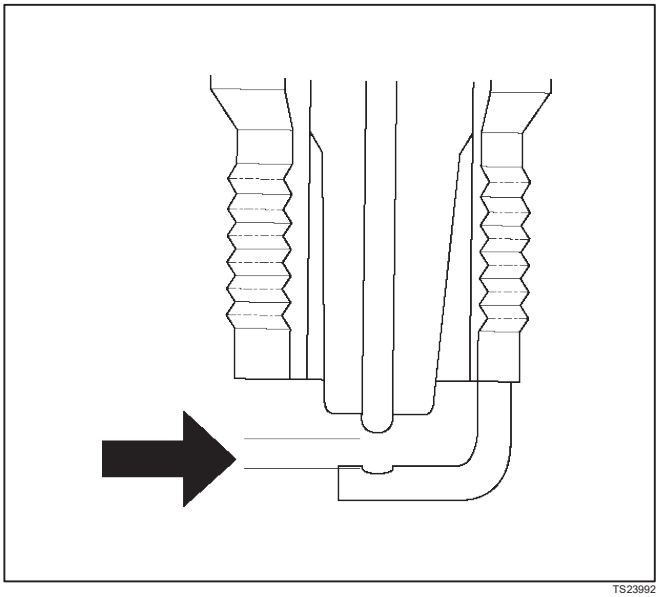
Excessive gap means that the air space between the center and the side electrodes at the bottom of the spark plug is too wide for consistent firing. This may be due to improper gap adjustment or to excessive wear of the electrode during use. A spark plug gap that is too small may cause an unstable idle condition. Excessive gap wear can be an indication of continuous operation at high speeds or with engine loads, causing the spark to run too hot. Another possible cause is an excessively lean fuel mixture.



TS23992

Low or high spark plug installation torque or improper seating can result in the spark plug running too hot and can cause excessive center electrode wear. The plug and the cylinder head seats must be in good contact for proper heat transfer and spark plug cooling. Dirty or damaged threads in the head or on the spark plug can keep it from seating even though the proper torque is applied. Once spark plugs are properly seated, tighten them to the torque shown in the Specifications Table. Low torque may result in poor contact of the seats due to a loose spark plug. Overtightening may cause the spark plug shell to be stretched and will result in poor contact

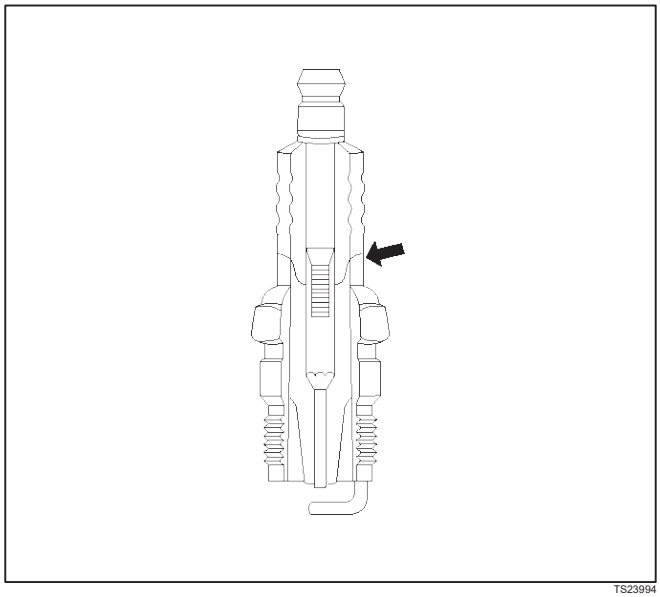between the seats. In extreme cases, exhaust blow-by and damage beyond simple gap wear may occur.
Cracked or broken insulators may be the result of improper installation, damage during spark plug re-gapping, or heat shock to the insulator material. Upper insulators can be broken when a poorly fitting tool is used during installation or removal, when the spark plug is hit from the outside, or is dropped on a hard surface. Cracks in the upper insulator may be inside the shell and not visible. Also, the breakage may not cause problems until oil or moisture penetrates the crack later.


TS23994

A/C Clutch Diagnosis

A/C Clutch Circuit Operation

A 12-volt signal is supplied to the A/C request input of the PCM when the A/C is selected through the A/C control switch.
The A/C compressor clutch relay is controlled through the PCM. This allows the PCM to modify the idle air control position prior to the A/C clutch engagement for better idle quality. If the engine operating conditions are within their specified calibrated acceptable ranges, the PCM will enable the A/C compressor relay. This is done by providing a ground path for the A/C relay coil within the PCM. When the A/C compressor relay is enabled, battery voltage is supplied to the compressor clutch coil. The PCM will enable the A/C compressor clutch whenever the engine is running and the A/C has been requested. The PCM will not enable the A/C compressor clutch if any of the following conditions are met:

- The throttle is greater than 90%.
- The engine speed is greater than 6315 RPM.
- The ECT is greater than 119°C (246°F).
- The IAT is less than 5°C (41°F).
- The throttle is more than 80% open.

A/C Clutch Circuit Purpose

The A/C compressor operation is controlled by the powertrain control module (PCM) for the following reasons:

- It improvises idle quality during compressor clutch engagement.
- It improvises wide open throttle (WOT) performance.
- It provides A/C compressor protection from operation with incorrect refrigerant pressures.

The A/C electrical system consists of the following components:

- The A/C control head.
- The A/C refrigerant pressure switches.
- The A/C compressor clutch.
- The A/C compressor clutch relay.
- The PCM.

A/C Request Signal

This signal tells the PCM when the A/C mode is selected at the A/C control head. The PCM uses this to adjust the idle speed before turning on the A/C clutch. The A/C compressor will be inoperative if this signal is not available to the PCM.
Refer to *A/C Clutch Circuit Diagnosis* section for A/C wiring diagrams and diagnosis for A/C electrical system.

General Description (Evaporative (EVAP) Emission System)

EVAP Emission Control System Purpose

The basic evaporative emission (EVAP) control system used on all vehicles is the charcoal canister storage method. Gasoline vapors from the fuel tank flow into the canister through the inlet labeled “TANK.” These vapors are absorbed into the activated carbon (charcoal) storage device (canister) in order to hold the vapors when the vehicle is not operating. The canister is purged by PCM control when the engine coolant temperature is over 60˚C (140˚F), the IAT reading is over 10˚C (50˚F), and the engine has been running. Air is drawn into the canister through the air inlet grid. The air mixes with the vapor and the mixture is drawn into the intake manifold.

EVAP Emission Control System Operation

The EVAP canister purge is controlled by a solenoid valve that allows the manifold vacuum to purge the canister. The powertrain control module (PCM) supplies a ground to energize the solenoid valve (purge on). The EVAP purge solenoid control is pulse-width modulated (PWM) (turned on and off several times a second). The duty cycle (pulse width) is determined by engine operating conditions including load, throttle positron, coolant temperature and ambient temperature. The duty cycle is calculated by the PCM. The output is commanded when the appropriate conditions have been met. These conditions are:

- The engine is fully warmed up.
- The engine has been running for a specified time.
- The IAT reading is above 10˚C (50˚F).

A continuous purge condition with no purge commanded by the PCM will set a DTC P1441.

Poor idle, stalling and poor driveability can be caused by:

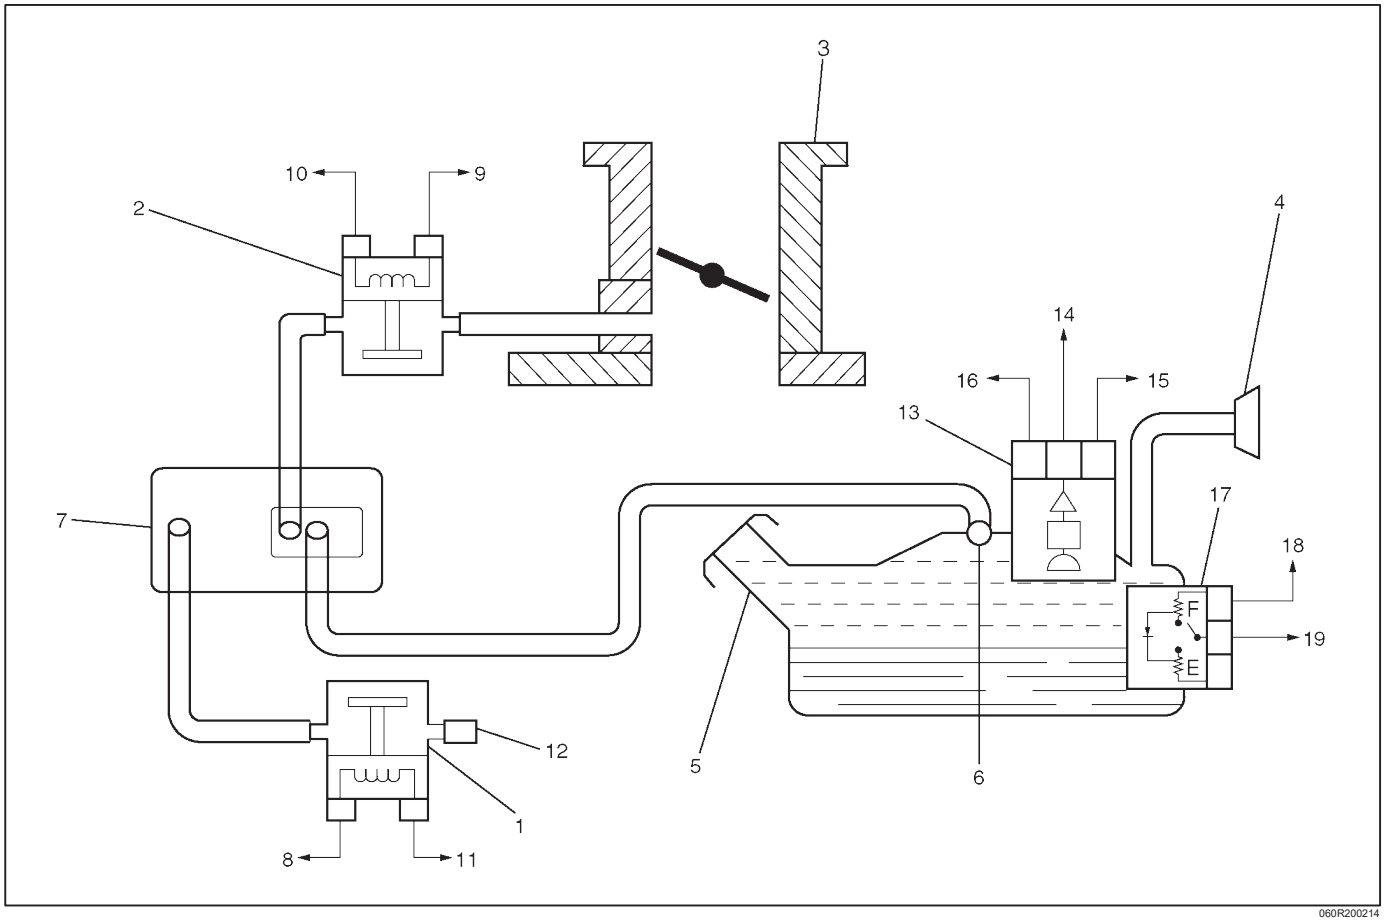
- A malfunctioning purge solenoid.
- A damaged canister.
- Hoses that are split, cracked, or not connected properly.

Enhanced Evaporative Emission Control System

The basic purpose of the Enhanced Evaporative Emissions control system is the same as other EVAP systems. A charcoal-filled canister captures and stores gasoline fumes. When the PCM determines that the time is right, it opens a purge valve which allows engine vacuum to draw the fumes into the intake manifold.

The difference between this and other systems is that the PCM monitors the vacuum and/or pressure in the system to determine if there is any leakage. If the PCM determines that the EVAP system is leaking or not functioning properly, it sets a Diagnostic Trouble Code (DTC) in the PCM memory.

The enhanced EVAP system is required to detect evaporative fuel system leaks as small as 0.040 in. (1.0 mm) between the fuel filler cap and purge solenoid. The system can test the evaporative system integrity by applying a vacuum signal (ported or manifold) to the fuel tank to create a small vacuum. The PCM then monitors the ability of the system to maintain the vacuum. If the vacuum remains for a specified period of time, there are no evaporative leaks and a PASS report is sent to the diagnostic executive. If there is a leak, the system either will not achieve a vacuum, or a vacuum cannot be maintained. Usually, a failure can only be detected after a cold start with a trip of sufficient length and driving conditions to run the needed tests. The enhanced EVAP system diagnostic will conduct up to eight specific sub-tests to detect fault conditions. If the diagnostic fails a sub-test, the PCM will store a Diagnostic Trouble Code (DTC) to indicate the type of detected.



Legend

(1) Vent Solenoid
(2) EVAP Purge Solenoid
(3) Throttle Body
(4) Fuel Filler Neck
(5) Fuel Tank
(6) Rollover Valve
(7) EVAP Canister
(8) Ignition Feed
(9) Ignition Feed
(10) EVAP Purge Solenoid Driver Signal from PCM
(11) Vent Solenoid Driver Signal from PCM
(12) Vent Filter
(13) Fuel Tank Pressure Sensor
(14) Fuel Tank Pressure Signal to PCM
(15) 5 Volt Reference “A” Circuit from PCM
(16) Sensor Ground Circuit from PCM
(17) Fuel Level Sensor
(18) Fuel Level Signal to PCM
(19) 5 Volt Return

Electrical Components

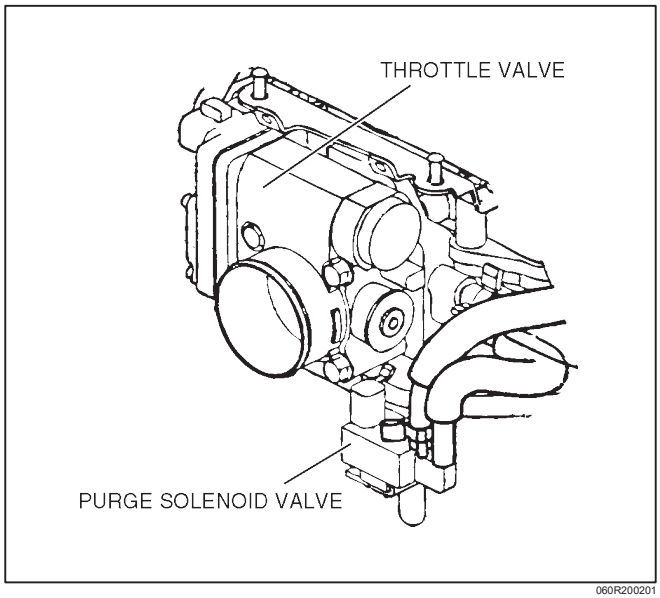
The electrical components that make up the enhanced EVAP system are:

- Fuel Tank Pressure Sensor. The fuel tank pressure sensor is a three-wire strain gauge sensor similar to a common MAP sensor. However, the fuel tank pressure sensor has very different electrical characteristics due to its pressure differential design. The sensor measures the difference between the air pressure (or vacuum) in the fuel tank and the outside air pressure.

  The sensor mounts at the top of the fuel pump assembly. A three-wire electrical harness connects it to the PCM. The PCM supplies a five-volt reference voltage and a ground to the sensor. The sensor will return a voltage between 0.1 and 4.9 volts. When the air pressure in the fuel tank is equal to the outside air pressure, such as when the fuel cap is removed, the output voltage of the sensor will be 1.3 to 1.7 volts.


  When the air pressure in the fuel tank is 4.5 in. H2O (1.25 kPa), the sensor output voltage will be 0.5 ± 0.2 V. When there is neither vacuum nor pressure in the fuel tank, the sensor voltage will be 1.5 V. At –14 in. H2O (–3.75 kPa), the sensor voltage will be 4.5 ± 0.2 V.

- EVAP Canister Purge Solenoid. Normally closed, the purge solenoid opens upon the PCM's signal to allow engine vacuum to purge gasoline fumes from the canister. Mounted on the water pipe to front of the engine assembly.




060R200201

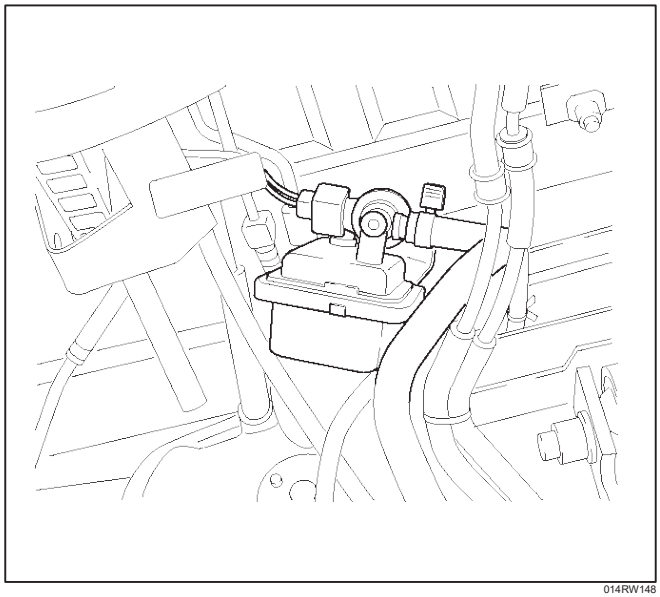
- EVAP Canister Vent Solenoid. Located next to the canister, the vent solenoid opens to allow air into the EVAP system. Fresh air is necessary to completely remove gasoline fumes from the canister during purge. The EVAP vent solenoid closes to seal off the evaporative emissions system for leak testing.


014RW148

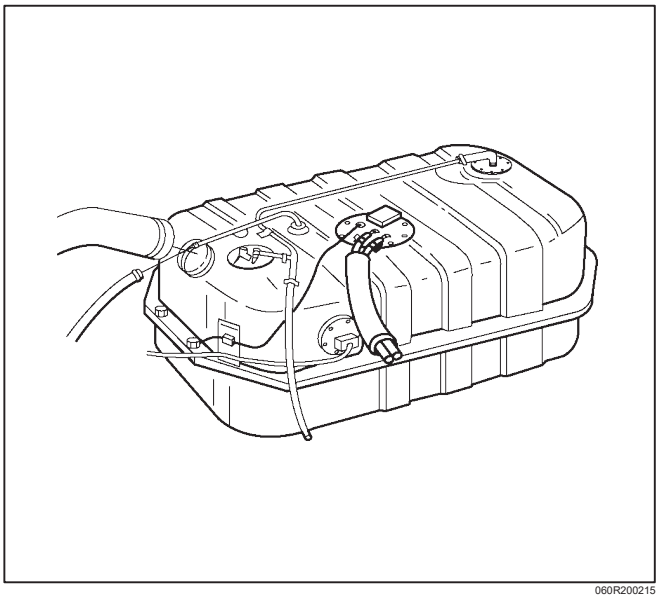- Fuel Level Sensor. The fuel level sensor is an important input to the PCM for the enhanced EVAP system diagnostic. The PCM needs fuel level information to know the volume of fuel in the tank. The fuel level affects the rate of change of air pressure in the EVAP system. Several of the enhanced EVAP system diagnostic sub-tests are dependent upon correct fuel level information. The diagnostic will not run when the tank is less than 15% or more than 85% full. Be sure to diagnose any Fuel Level Sensor DTCs first, as they can cause other DTCs to set.



060R200215

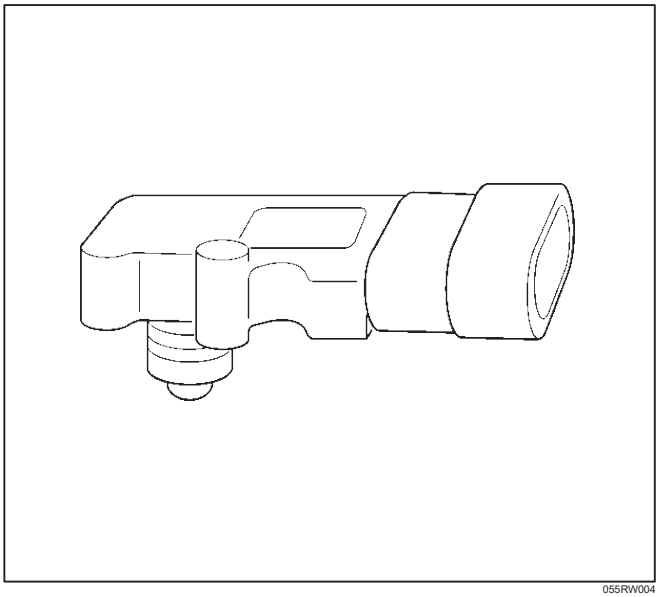- Manifold Absolute Pressure (MAP) Sensor. The PCM compares the signals from the fuel tank pressure sensor and the MAP sensor to ensure that a relative vacuum is maintained the EVAP system.


055RW004

Non-Electrical Components

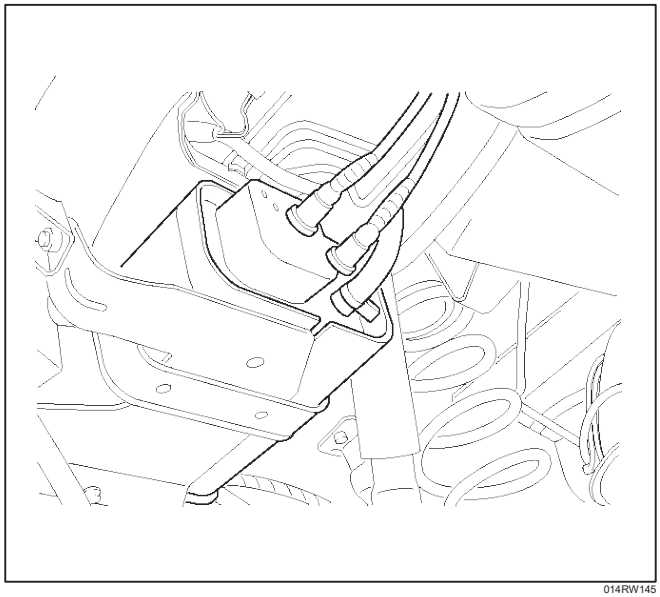- Purge/Vacuum Hoses. Made of rubber compounds, these hoses route the gasoline fumes from their sources to the canister and from the canister to the intake air flow.
- EVAP Canister. Mounted on a bracket ahead of the fuel tank, the canister stores fuel vapors until the PCM determines that engine conditions are right for them to be remove and burned.
- Fuel Tank. The tank has a built-in air space designed for the collection of gasoline fumes.


014RW145

- Vacuum Source. The vacuum source is split between two ports, one on either side of the throttle body.
- Fuel Cap. The fuel cap is designed to be an integral part of the EVAP system.

System Fault Detection

The EVAP leak detection strategy is based on applying vacuum to the EVAP system and monitoring vacuum decay. The PCM monitors vacuum level via the fuel tank pressure sensor. At an appropriate time, the EVAP purge solenoid and the EVAP vent solenoid are turned “ON,” allowing the engine vacuum to draw a small vacuum on the entire evaporative emission system.

After the desired vacuum level has been achieved, the EVAP purge solenoid is turned “OFF,” sealing the system. A leak is detected by monitoring for a decrease in vacuum level over a given time period, all other variables remaining constant. A small leak in the system will cause DTC P0442 to be set.

If the desired vacuum level cannot be achieved in the test described above, a large leak or a faulty EVAP purge solenoid is indicated.

Leaks can be caused by the following conditions:

- Disconnected or faulty fuel tank pressure sensor
- Missing or faulty fuel cap
- Disconnected, damaged, pinched, or blocked EVAP purge line
- Disconnected or damaged EVAP vent hose
- Disconnected, damaged, pinched, or blocked fuel tank vapor line
- Disconnected or faulty EVAP purge solenoid
- Disconnected or faulty EVAP vent solenoid
- Open ignition feed circuit to the EVAP vent or purge solenoid
- Damaged EVAP canister
- Leaking fuel sender assembly O-ring
- Leaking fuel tank or fuel filler neck

A restricted or blocked EVAP vent path is detected by drawing vacuum into the EVAP system, turning “OFF” the EVAP vent solenoid and the EVAP purge solenoid (EVAP vent solenoid “OPEN,” EVAP purge Pulse Width Modulate (PWM) “0%”) and monitoring the fuel tank vacuum sensor input. With the EVAP vent solenoid open, any vacuum in the system should decrease quickly unless the vent path is blocked. A blockage like this will set DTC P0446 and can be caused by the following conditions:

- Faulty EVAP vent solenoid (stuck closed)
- Plugged, kinked or pinched vent hose
- Shorted EVAP vent solenoid driver circuit
- Plugged EVAP canister

The PCM supplies a ground to energize the purge solenoid (purge “ON”). The EVAP purge control is PWM, or turned “ON” and “OFF,” several times a second. The duty cycle (pulse width) is determined by engine operating conditions including load, throttle position, coolant temperature and ambient temperature. The duty cycle is calculated by the PCM and the output is commanded when the appropriate conditions have been met.

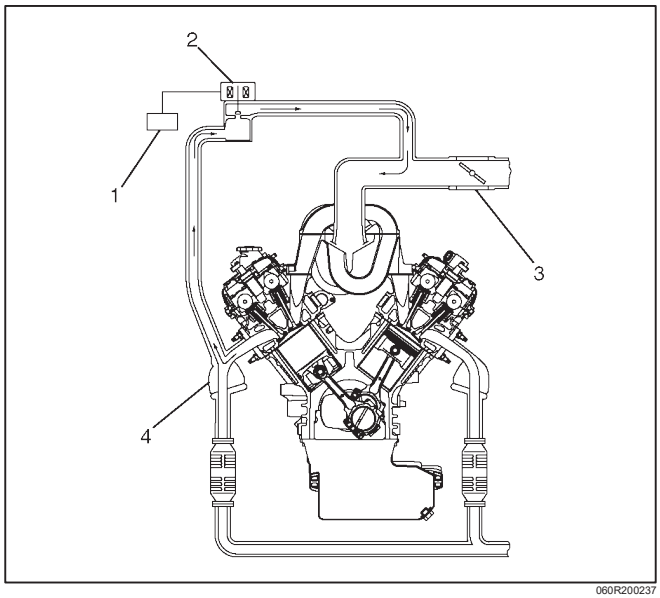
The system checks for conditions that cause the EVAP system to purge continuously by commanding the EVAP vent solenoid “ON” and the EVAP purge solenoid “OFF” (EVAP vent solenoid “CLOSED,” EVAP purge PWM “0%”). If fuel tank vacuum level increases during the test, a continuous purge flow condition is indicated, which will set a DTC P1441. This can be cause by the following conditions:

- EVAP purge solenoid leaking
- EVAP purge and engine vacuum lines switched at the EVAP purge solenoid
- EVAP purge solenoid driver circuit grounded

General Description (Exhaust Gas Recirculation (EGR) System)

EGR Purpose

The exhaust gas recirculation (EGR) system is use to reduce emission levels of oxides of nitrogen (NOx). NOx emission levels are caused by a high combustion temperature. The EGR system lowers the NOx emission levels by decreasing the combustion temperature.



060R200237

Linear EGR Valve

The main element of the system is the linear EGR valve. The EGR valve feeds small amounts of exhaust gas back into the combustion chamber. The fuel/air mixture will be diluted and combustion temperatures reduced.

Linear EGR Control

The PCM monitors the EGR actual positron and adjusts the pintle position accordingly. The uses information from the following sensors to control the pintle position:

- Engine coolant temperature (ECT) sensor.
- Throttle position (TP) sensor.
- Mass air flow (MAF) sensor.

Linear EGR Valve Operation and Results of Incorrect Operation

The linear EGR valve is designed to accurately supply EGR to the engine independent of intake manifold vacuum. The valve controls EGR flow from the exhaust to the intake manifold through an orifice with a PCM controlled pintle. During operation, the PCM controls pintle position by monitoring the pintle position feedback signal. The feedback signal can be monitored with a Tech 2 as “Actual EGR Pos.” “Actual EGR Pos.” should always be near the commanded EGR position (”Desired EGR Pos.”). If a problem with the EGR system will not allow the PCM to control the pintle position properly, DTC P1406 will set. The PCM also tests for EGR flow. If incorrect flow is detected, DTC P0401 will set. If DTCs P0401 and/or P1406 are set, refer to the DTC charts.

The linear EGR valve is usually activated under the following conditions:

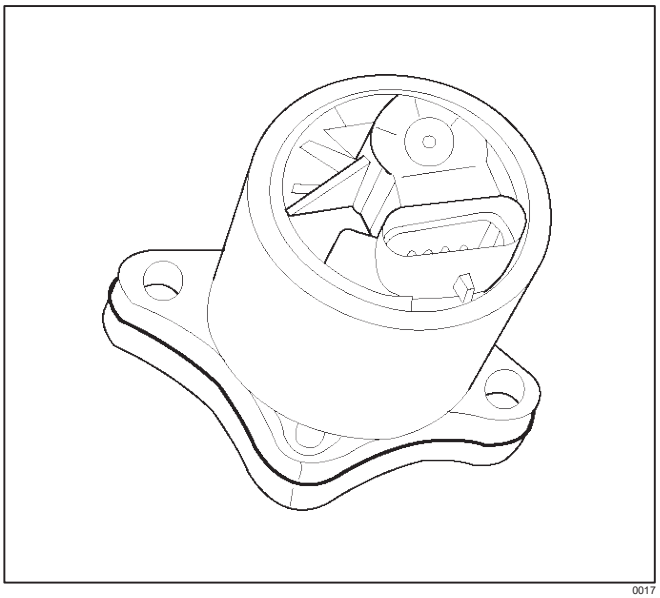
- Warm engine operation.
- Above-idle speed.

Too much EGR flow at idle, cruise or cold operation may cause any of the following conditions to occur:

- Engine stalls after a cold start.
- Engine stalls at idle after deceleration.
- Vehicle surges during cruise.
- Rough idle.
- DTC P0300 (misfire detected).

Too little or no EGR flow may allow combustion temperatures to get too high. This could cause:

- Spark knock (detonation).
- Engine overheating.
- Emission test failure.
- DTC P0401 (EGR flow test).
- Poor fuel economy.


0017

EGR Pintle Position Sensor

The PCM monitors the EGR valve pintle position input to endure that the valve responds properly to commands from the PCM and to detect a fault if the pintle position sensor and control circuits are open or shorted. If the PCM detects a pintle position signal voltage outside the normal range of the pintle position sensor, or a signal voltage that is not within a tolerance considered acceptable for proper EGR system operation, the PCM will set DTC P1406.

General Description (Positive Crankcase Ventilation (PCV) System)

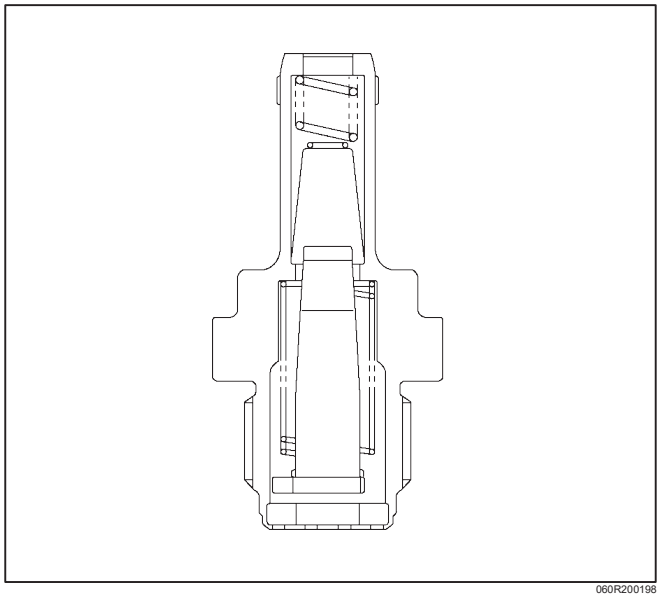
Crankcase Ventilation System Purpose

The crankcase ventilation system is use to consume crankcase vapors in the combustion process instead of venting them to the atmosphere. Fresh air from the throttle body is supplied to the crankcase and mixed with blow-by gases. This mixture is then passed through the positive crankcase ventilation (PCV) valve into the common chamber.

Crankcase Ventilation System Operation


The primary control is through the positive crankcase ventilation (PCV) valve. The PCV valve meters the flow at a rate that depends on the intake vacuum. The PCV valve restricts the flow when the inlet vacuum is highest. In

addition, the PCV valve can seal the common chamber off in case of sudden high pressure in the crankcase.



060R200198

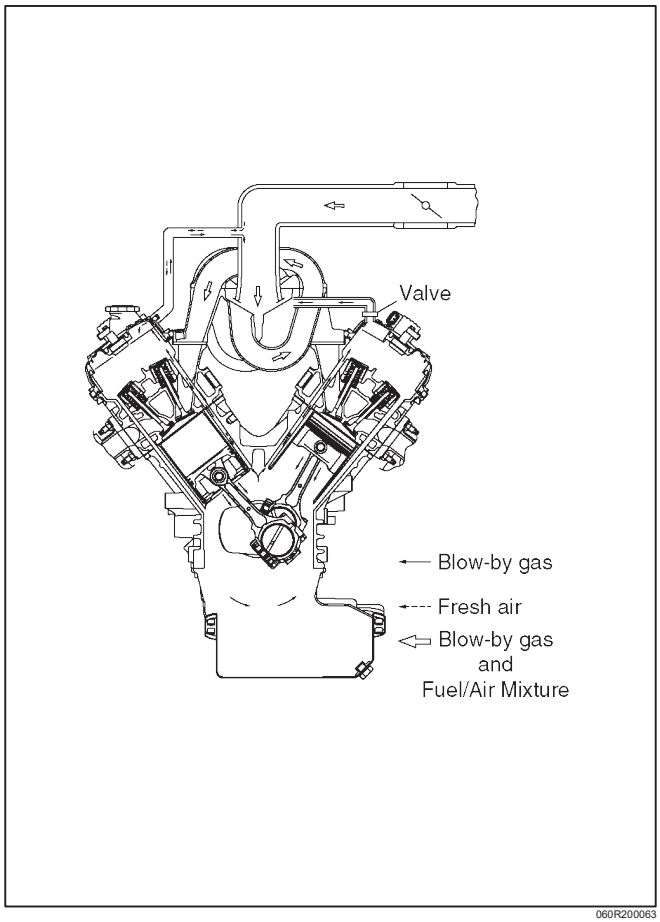While the engine is running, exhaust fuses and small amounts of the fuel/air mixture escape past the piston rings and enter the crankcase. These gases are mixed with clean air entering through a tube from the air intake duct.



060R200063

During normal, part-throttle operation, the system is designed to allow crankcase gases to flow through the PCV valve into the throttle body to be consumed by normal combustion.

A plugged valve or PCV hose may cause the following conditions:

- Rough idle.
- Stalling of slow idle speed.
- Oil leaks.
- Sludge in the engine.

A leaking PCV hose would cause:

- Rough idle.
- Stalling.
- High idle speed.

Special Tools

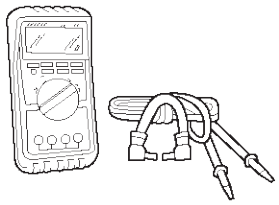
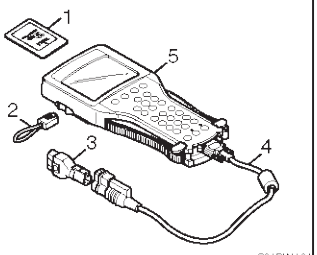
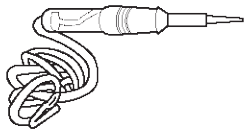
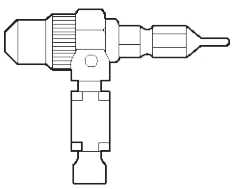
ILLUSTRATION	**TOOL NO.** TOOL NAME
	**J 39200** High Impedance Multimeter (Digital Voltmeter – DVM)
	(1) PCMCIA Card (2) RS232 Loop Back Connector (3) SAE 16/19 Adapter (4) DLC Cable (5) TECH–2
	**J 34142-B** Unpowered Test Light
	Connector Test Adapter Kit J 35616-A/BT-8637
	**J 26792/BT-7220-1** Spark Tester
	**J 34730-E** Port Fuel Injection Diagnostic Kit

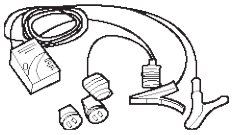
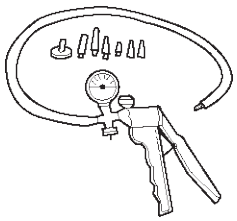
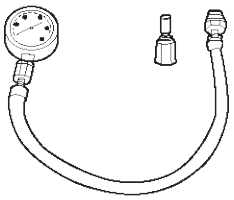
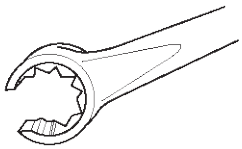

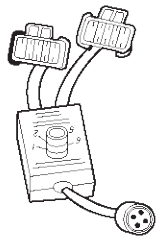
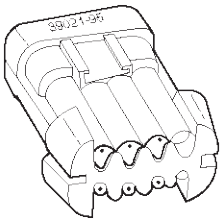
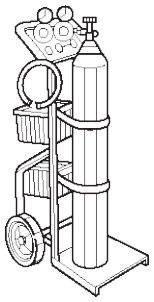
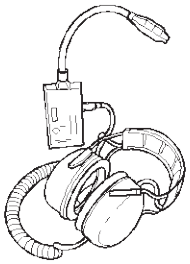
ILLUSTRATION	**TOOL NO.** TOOL NAME
	**J 37027-A** IAC Motor Analyzer
	**J 23738-A** Vacuum Pump with Gauge
	**BT-8515/8515V** Exhaust Back Pressure Tester
	**J 39194-B** Heated Oxygen Sensor Wrench
	**J 35689-A** Terminal Remover
	**J 28742-A** Weather Pack II Terminal Remover

ILLUSTRATION	**TOOL NO.** TOOL NAME
	**J 39021-90** Injector Switch Box
	**J 39021-65** Injector Test Light
	**J 41413**[1] EVAP Pressure/Purge Diagnostic Station
	**J 41416**[2] Ultrasonic Leak Detector

1. J 41413 EVAP Pressure/Purge Diagnostic Station is a multipurpose tool which is used to perform several diagnostic procedures for enhanced emission testing. The station will accommodate a nitrogen gas filled cylinder which is used to pressurize the vehicle EVAP system for a leakdown test and leak location test when a vehicle is repaired for leakage in the enhanced evaporative emission control system. It also has two additional gauges (inches of mercury and inches of water) which are used to measure both source vacuum and EVAP canister purge vacuum to verify correct operation and vapor flow within the canister purge circuit.
2. J 41416 Ultrasonic Leak Detector is a microprocessor-based device used to detect leaks in the enhanced evaporative emission control system. The evaporative system is pressurized to 30 inches of water using the J 41413 EVAP Pressure/Purge Diagnostic System. Small leaks in the EVAP system will emit sound at a high frequency undetectable by a human ear but detectable with the J 41416. The technician traces along the evaporative system and can pinpoint leaks due to corroded lines, cracked hoses, or a damaged EVAP component. The detector includes a high quality set of headphones to block out surrounding shop noise and the LED sensitivity meter allows a visual reference for locating leaks in conjunction with the audio output heard through the headphones. Powered by (1) nine volt battery.