2007 ACCESSORIES & EQUIPMENT

Seat Hardware, Trim, and Upholstery - Avalanche, Escalade, Suburban, Tahoe & Yukon

SPECIFICATIONS

FASTENER TIGHTENING SPECIFICATIONS

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Front Memory Seat Switch Screw	2 N.m	18 lb in
Front Seat Adjuster Outer Finish Cover Screw	2 N.m	18 lb in
Front Seat Armrest Screw	3 N.m	25 lb in
Front Seat Back Frame Bolt	9 N.m	80 lb in
Front Seat Bolt	45 N.m	33 lb ft
Front Seat Cushion Frame Nut	9 N.m	80 lb in
Front Seat Nut	45 N.m	33 lb ft
Memory Seat Module Bolt	9 N.m	80 lb in
Rear Armrest Bolt	9 N.m	80 lb in
Rear Seat Assembly Nut	45 N.m	33 lb ft
Rear Seat Belt Buckle Anchor Nut	45 N.m	33 lb ft
Rear Seat Cushion Compartment Screw	2 N.m	18 lb in
Rear Seat Cushion Frame	9 N.m	80 lb in
Rear Seat Recliner Bolt	9 N.m	80 lb in
Rear Seat Riser Finish Cover Screw	2 N.m	18 lb in
Rear Seat Riser Inner Bolt	9 N.m	80 lb in
Rear Seat Riser Outer Bolt	9 N.m	80 lb in
Rear Seat Shoulder Belt Bezel Screw	2 N.m	18 lb in
Rear Seat #2 Back Bolt	9 N.m	80 lb in
Rear Seat #2 Latch Release Handle Nut	9 N.m	80 lb in
Rear Seat #2 Latch Release Handle Screw	9 N.m	80 lb in
Rear Seat #2 Load Floor Latch Bolt	9 N.m	80 lb in
Rear Seat #2 Shoulder Belt Bezel Screw	2 N.m	18 lb in
Seat Assembly Forward Nut	45 N.m	33 lb ft
Seat Assembly Rearward Nut	45 N.m	33 lb ft
Seat Cushion Trim Panel Screw	2 N.m	18 lb in

REPAIR INSTRUCTIONS

FRONT SEAT REPLACEMENT - BUCKET

cardiagn.com

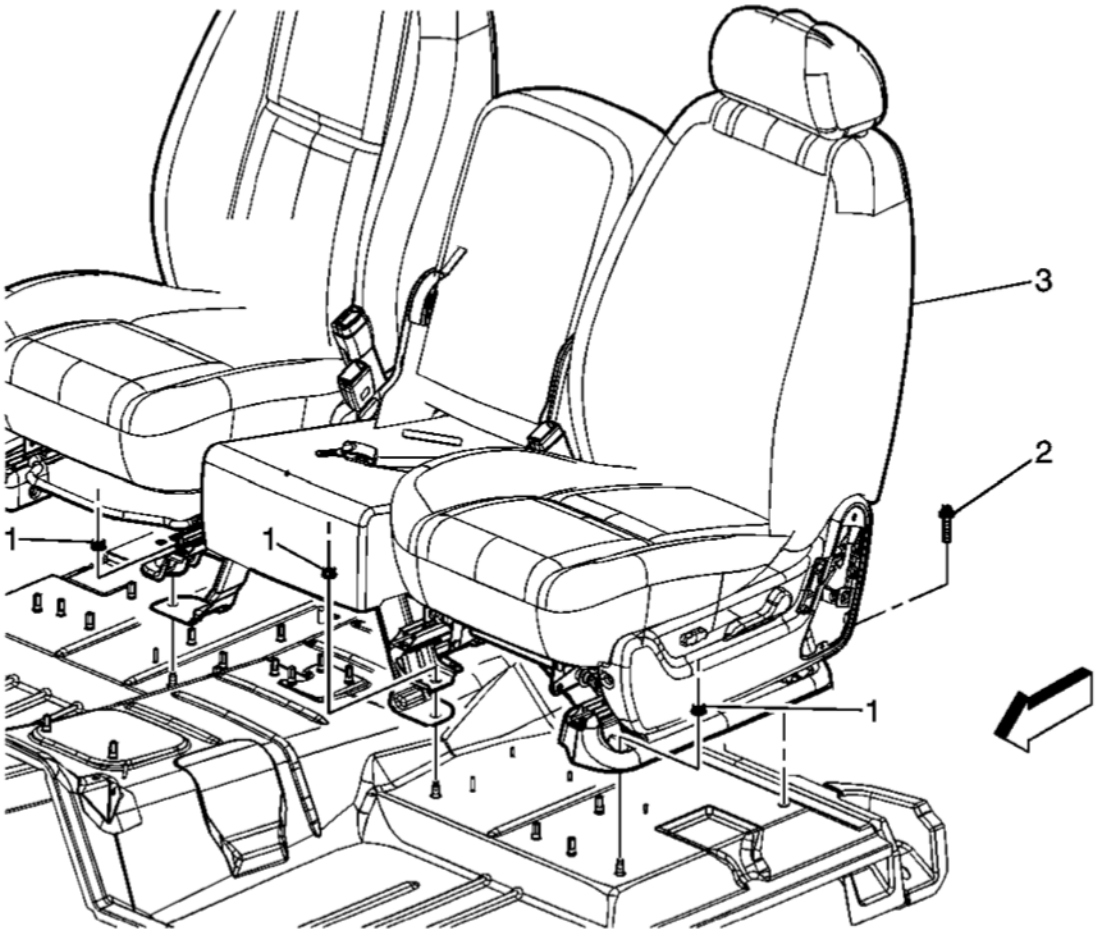


Fig. 1: Front Seat Assembly & Components
Courtesy of GENERAL MOTORS CORP.

Front Seat Replacement - Bucket

Callout	Component Name
Preliminary Procedure 1. Remove the front seat adjuster covers. Refer to **Front Seat Adjuster Track Finish Cover Replacement**. 2. Disconnect the seat belt from the seat. Refer to **Seat Belt Retractor Pretensioner Replacement - Front** .	
1	Front Seat Assembly Nut (Qty: 2) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 45 N.m (33 lb ft)

cardiagn.com

	Tip: Adjust the seat rearward to access to the nuts.
2	Front Seat Assembly Bolt (Qty: 2) **Tighten:** 45 N.m (33 lb ft) **Tip:** Adjust the seat forward to access the bolts.
3	Front Seat Assembly **Tip:** • Disconnect the electrical connector. • If removing and installing seat the center seat or floor console do not need to be removed.

SEAT REPLACEMENT - CENTER

cardiagn.com

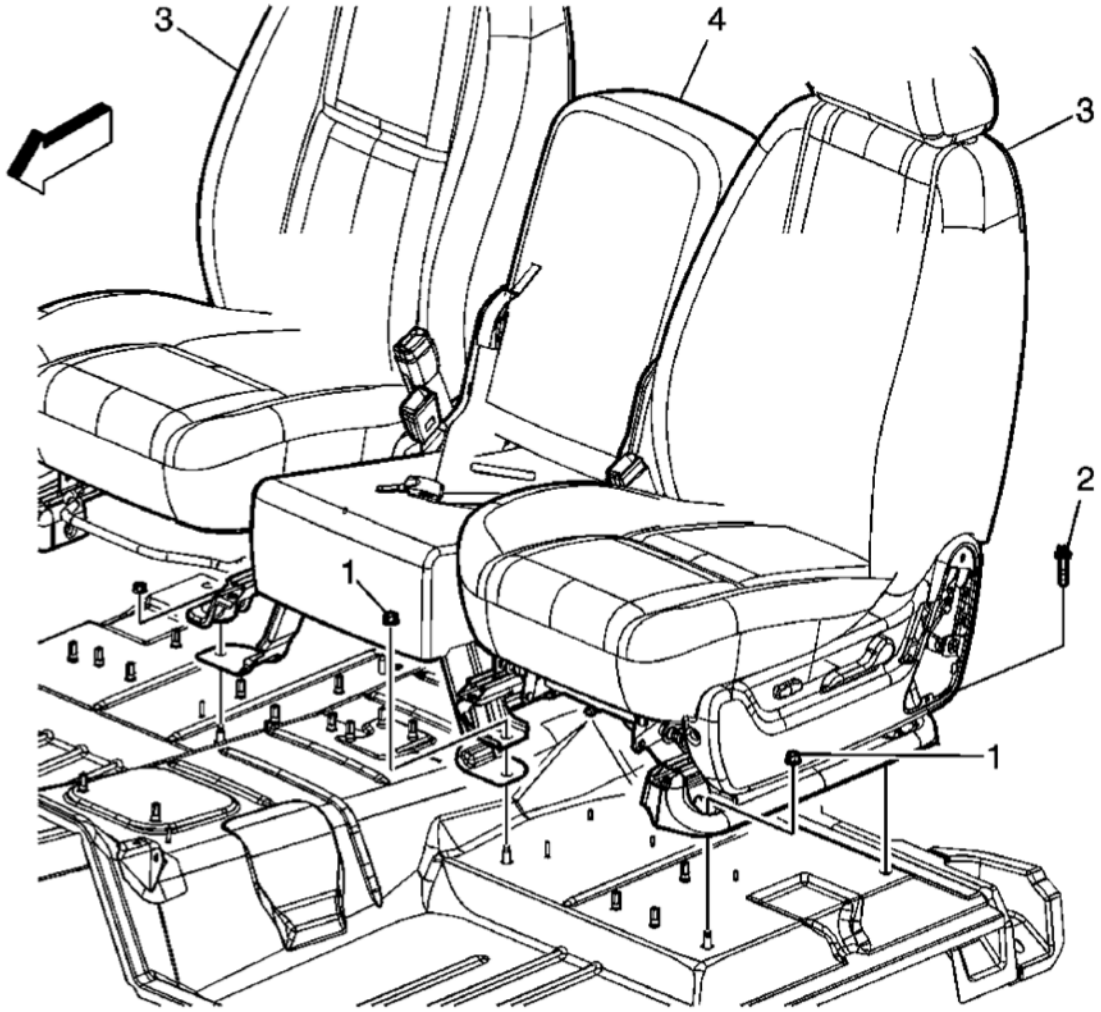


Fig. 2: Front Seat Assembly & Components
Courtesy of GENERAL MOTORS CORP.

Seat Replacement - Center

Callout	Component Name
Preliminary Procedure 1. Remove the front seat adjuster covers. Refer to **Front Seat Adjuster Track Finish Cover Replacement**. 2. Disconnect the seat belt from the seat. Refer to **Seat Belt Retractor Pretensioner Replacement - Front** .	
1	Front Seat Assembly Nut (Qty: 4) **Tip:** Adjust the seat rearward to access the nuts. **NOTE:**

cardiagn.com

	Refer to Fastener Notice . **Tighten:** 45 N.m (33 lb ft)
2	Front Seat Assembly Bolt (Qty: 4) **Tip:** Adjust the seat forward to access the bolts. **Tighten:** 45 N.m (33 lb ft)
3	Front Seat Assembly (Qty: 2) **Tip:** Disconnect the electrical connector.
4	Front Center Seat Assembly

TRIM PANEL REPLACEMENT - REAR SEAT BACK (AVALANCHE/ESCALADE EXT)

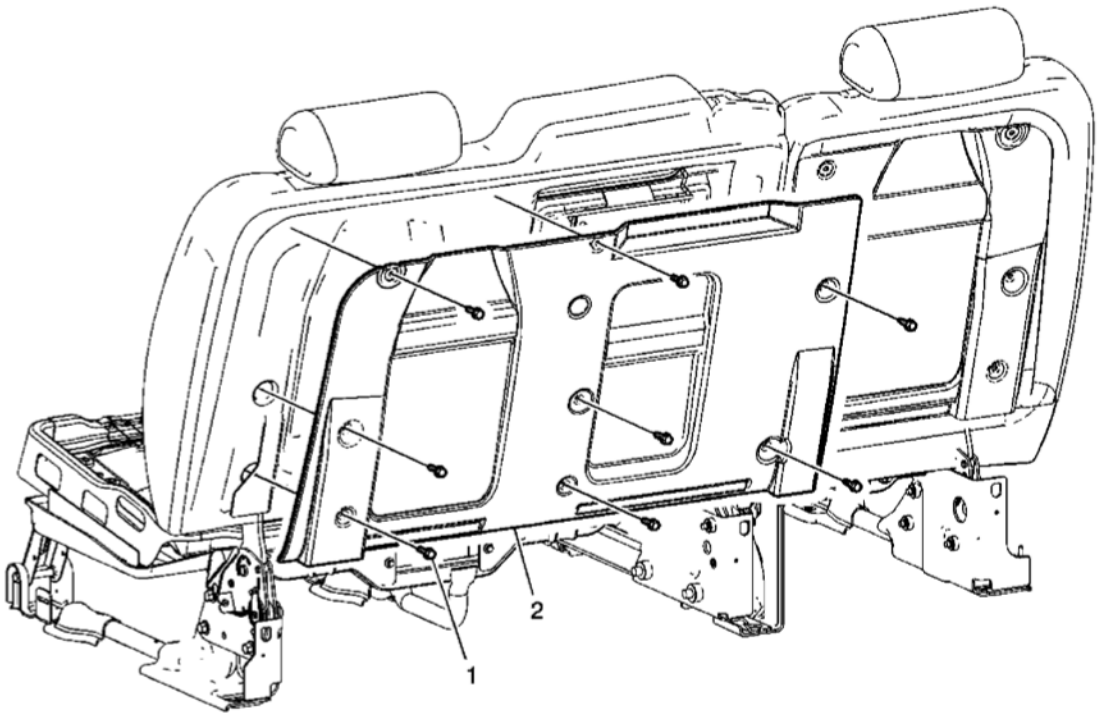


Fig. 3: View Of Rear Seat Back Trim Panel & Bolts
Courtesy of GENERAL MOTORS CORP.

Trim Panel Replacement - Rear Seat Back (Avalanche/Escalade EXT)

Callout	Component Name
NOTE: **Refer to Fastener Notice .** **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.	
	Rear Seat Back Trim Panel Bolt (Qty: 8)

cardiagn.com

1	**Tighten:** 3 N.m (25 lb in)
2	Rear Seat Back Cushion Trim Panel

FRONT SEAT ADJUSTER REPLACEMENT (MANUAL)

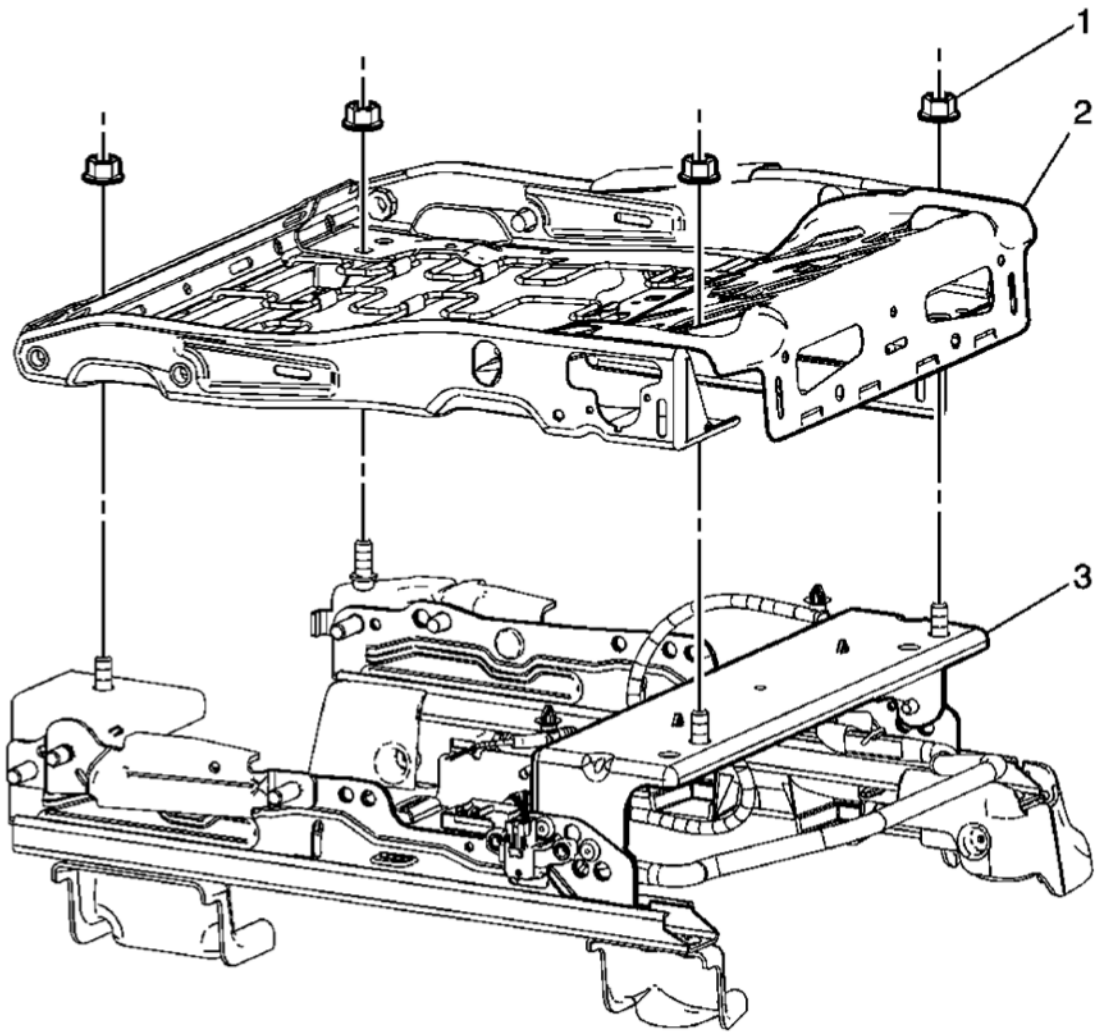


Fig. 4: Front Seat Adjuster Assembly & Components
Courtesy of GENERAL MOTORS CORP.

Front Seat Adjuster Replacement (Manual)

Callout	Component Name
Preliminary Procedure	
1. Remove the front seat. Refer to **Front Seat Replacement - Bucket**.	
2. Remove the seat cushion cover and pad assembly. Refer to **Seat Cushion Trim Cover and Pad**	

cardiagn.com

	Replacement.
1	Front Seat Cushion Frame Nut (Qty: 4) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
2	Front Seat Cushion Frame
3	Front Seat Manual Adjuster Assembly

FRONT SEAT ADJUSTER TRACK FINISH COVER REPLACEMENT

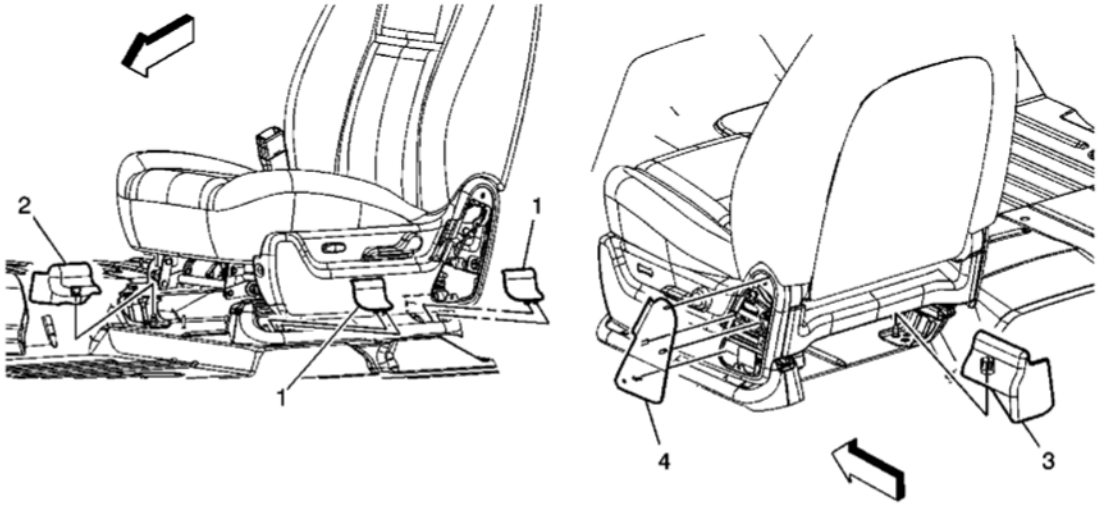


Fig. 5: View Of Front Seat Adjuster Track Finish Cover & Components
Courtesy of GENERAL MOTORS CORP.

Front Seat Adjuster Track Finish Cover Replacement

Callout	Component Name
1	Front Seat Adjuster Finish Cover (Qty: 2) **Tip:** The 2 side covers snap into place.
2	Inner Adjuster Track Front Finish Cover **Tip:** The inboard front cover snaps into place.
3	Inner Adjuster Track Rear Finish Cover **Tip:** The inboard rear cover snaps into place.
4	Front Seat Adjuster Finish Cover **Tip:** The seat belt cover snaps into place.

FRONT SEAT ARMREST REPLACEMENT

cardiagn.com

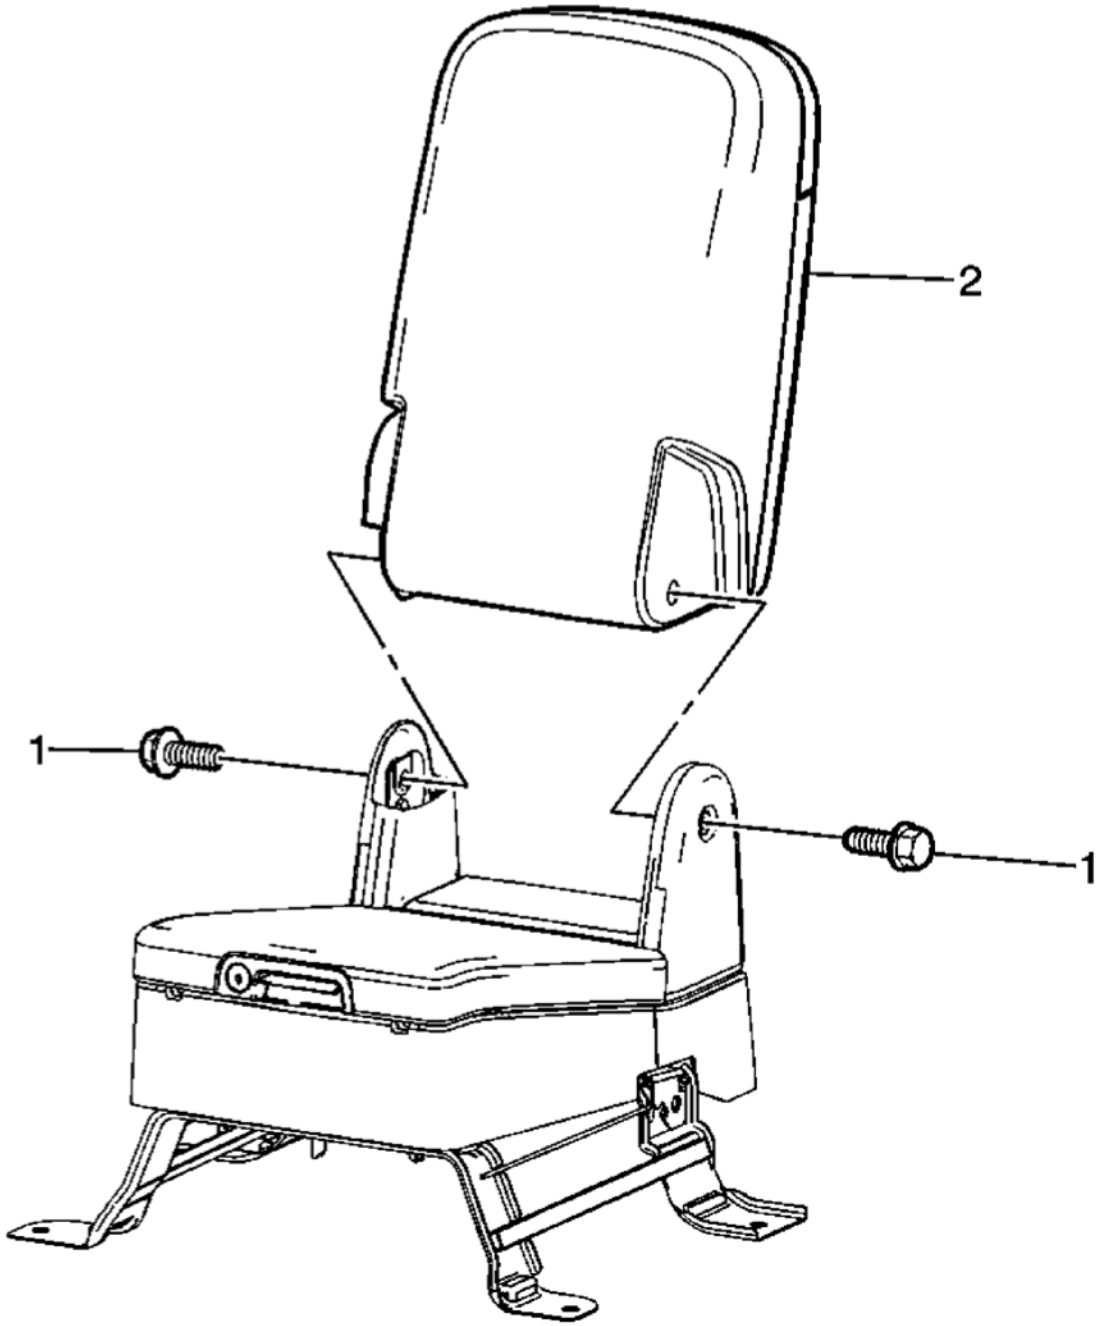


Fig. 6: View Of Front Seat Armrest Assembly & Screws
Courtesy of GENERAL MOTORS CORP.

Front Seat Armrest Replacement

Callout	Component Name
	Front Seat Armrest Screw (Qty: 2)

cardiagn.com

1	**NOTE:** **Refer to Fastener Notice .** **Tighten:** 3 N.m (25 lb in)
2	Front Seat Armrest Assembly

HEAD RESTRAINT REPLACEMENT

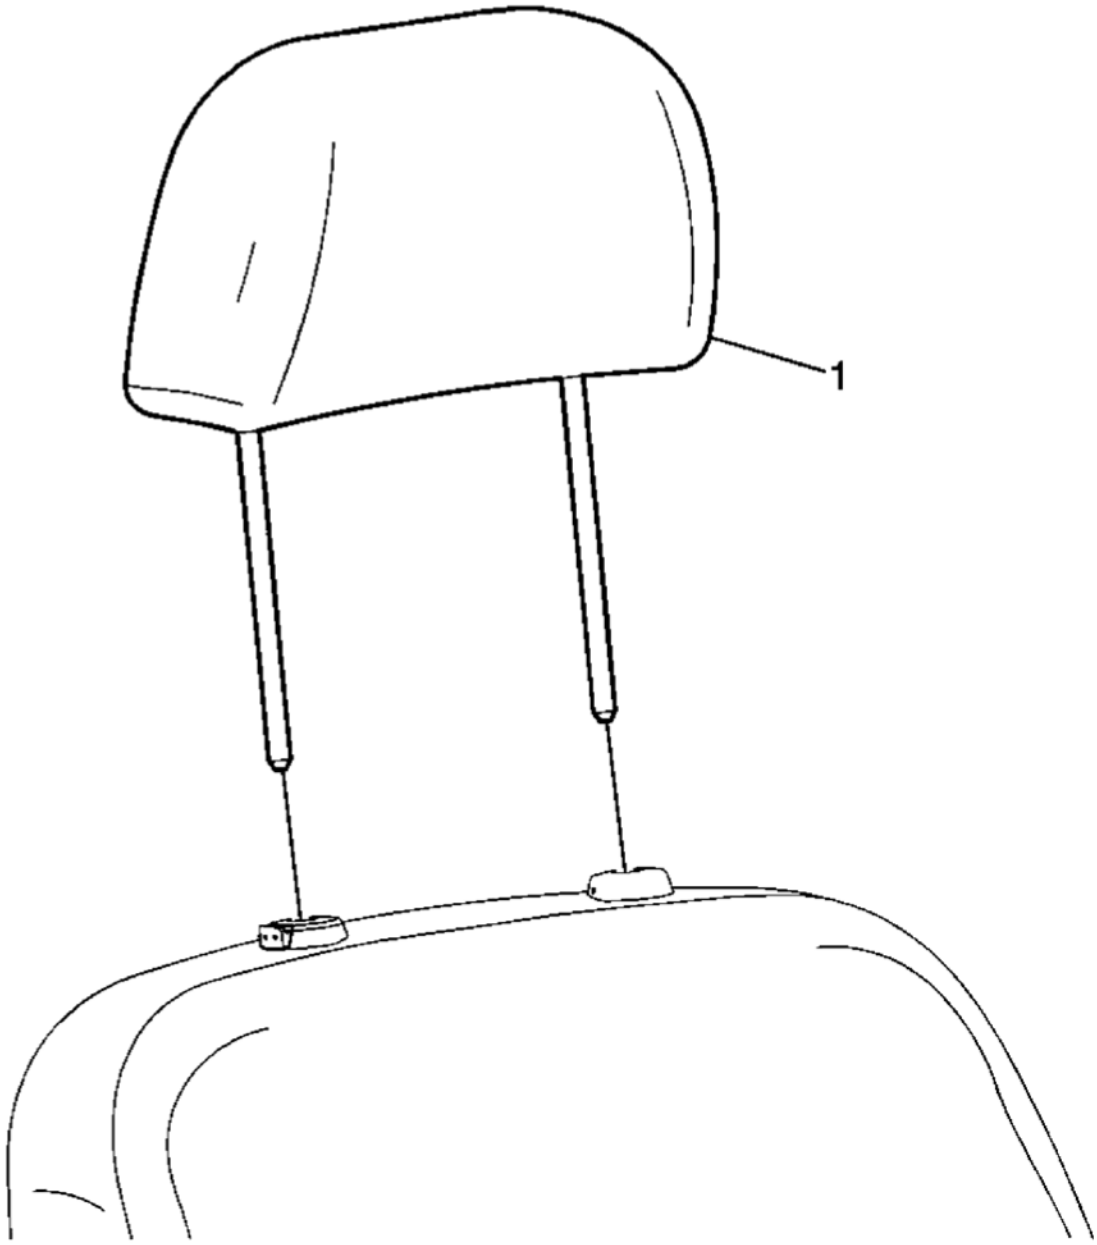


Fig. 7: View Of Front Seat Head Restraint

cardiagn.com

Courtesy of GENERAL MOTORS CORP.

Head Restraint Replacement

Callout	Component Name
1	Restraint, Front Seat Head **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.

HEAD RESTRAINT GUIDE REPLACEMENT

cardiagn.com

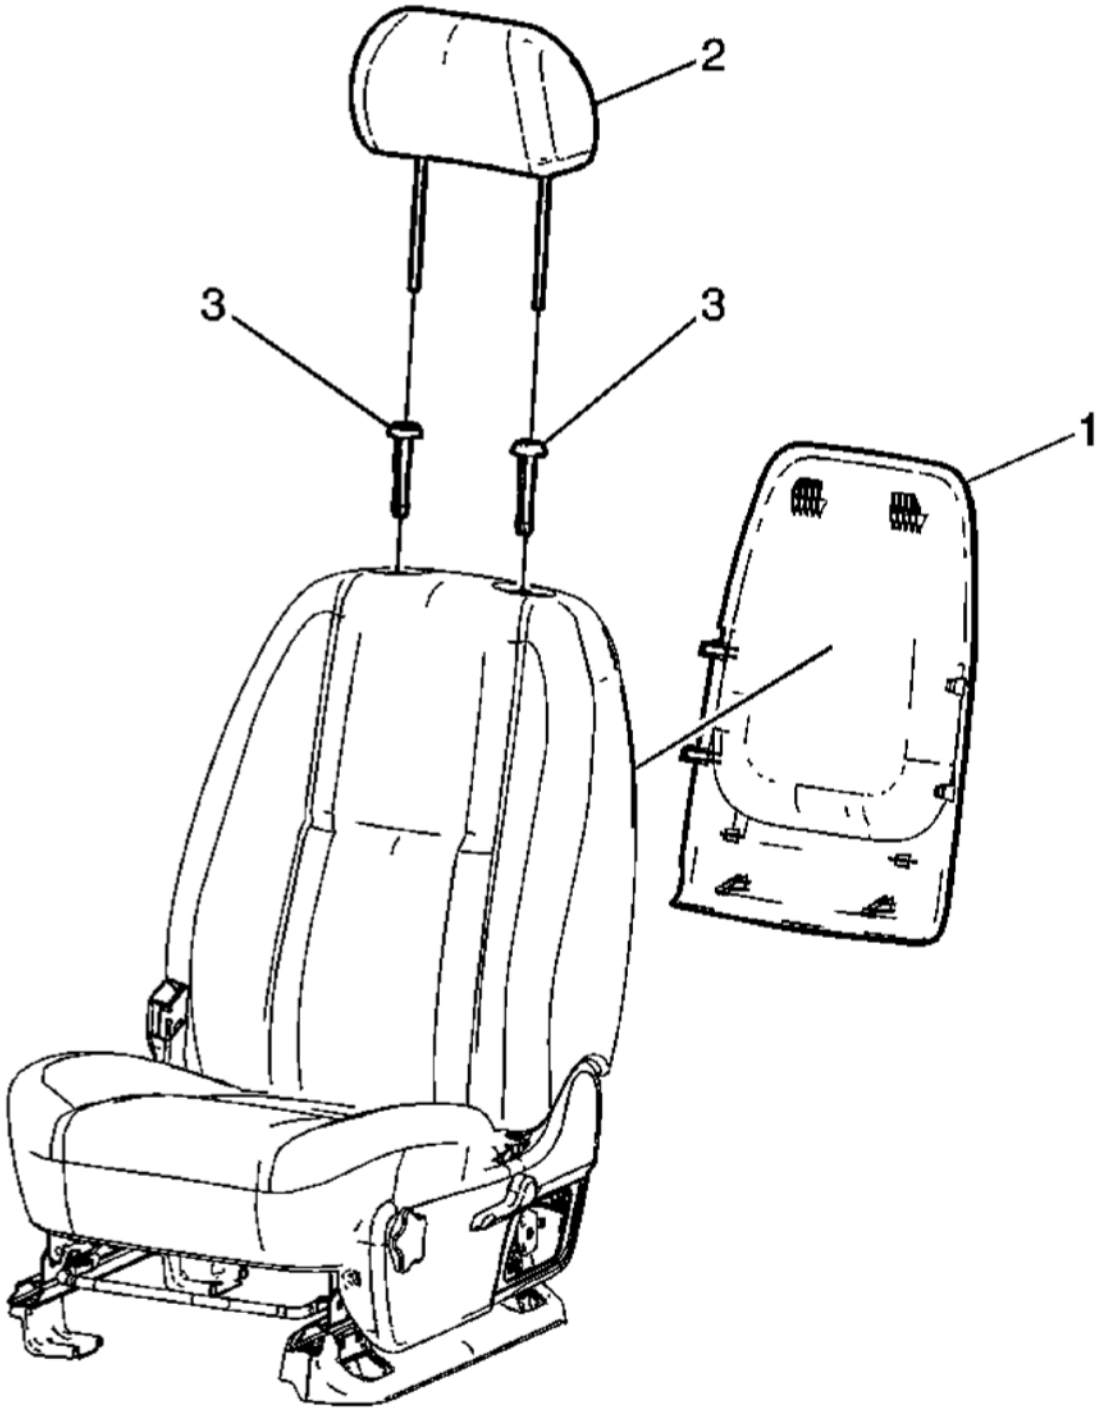


Fig. 8: View Of Front Seat Head Restraint Assembly & Components
Courtesy of GENERAL MOTORS CORP.

Head Restraint Guide Replacement

Callout	Component Name

1	Front Seat Back Cushion Finish Panel **Tip:** Using a nylon flat-bladed tool, push the tabs in on the side of the panel to release from the seat back to remove.
2	Front Seat Head Restraint Assembly **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
3	Front Seat Head Restraint Guide (Qty: 2) **Tip:** Squeeze the bottom of the guide together and push up to remove from the seat back.

FRONT SEAT CUSHION FRAME REPLACEMENT

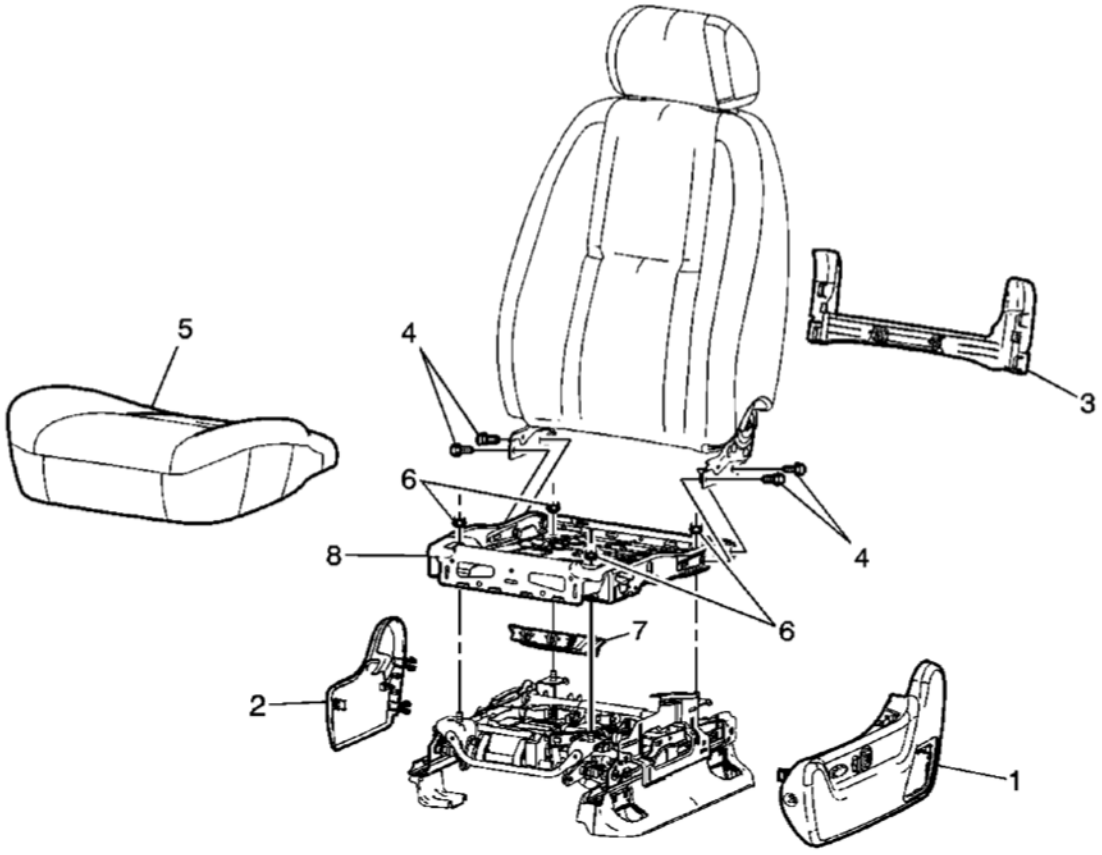


Fig. 9: View Of Front Seat Cushion Frame & Components
Courtesy of GENERAL MOTORS CORP.

Front Seat Cushion Frame Replacement

Callout	Component Name

cardiagn.com

Preliminary Procedure: Remove the front seat. Refer to **Front Seat Replacement - Bucket**.	
1	Front Seat Adjuster Outer Finish Cover Refer to **Seat Cushion Outer Trim Panel Replacement - Front Seat (Manual)** or **Seat Cushion Outer Trim Panel Replacement - Front Seat (Power)**.
2	Front Seat Adjuster Inner Finish Cover Refer to **Seat Cushion Inner Trim Panel Replacement - Front**.
3	Front Seat Riser Finish Cover **Tip:** Pull rearward to disengage the cover from the seat riser.
4	Seat Back Frame Bolt (Qty: 4) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
5	Seat Cushion Cover and Pad Refer to **Seat Cushion Trim Cover and Pad Replacement**.
6	Front Seat Cushion Frame Nut (Qty: 4) Refer to **Front Seat Adjuster Replacement (Power)** . **Tighten:** 9 N.m (80 lb in)
7	Heated Seat Module **Tip:** Disconnect the electrical connector.
8	Front Seat Cushion Frame **Tip:** If working on the passenger seat, remove the inflatable restraint passenger presence system. Refer to **Inflatable Restraint Passenger Presence System Replacement - Front** .

SEAT CUSHION OUTER TRIM PANEL REPLACEMENT - FRONT SEAT (MANUAL)

cardiagn.com

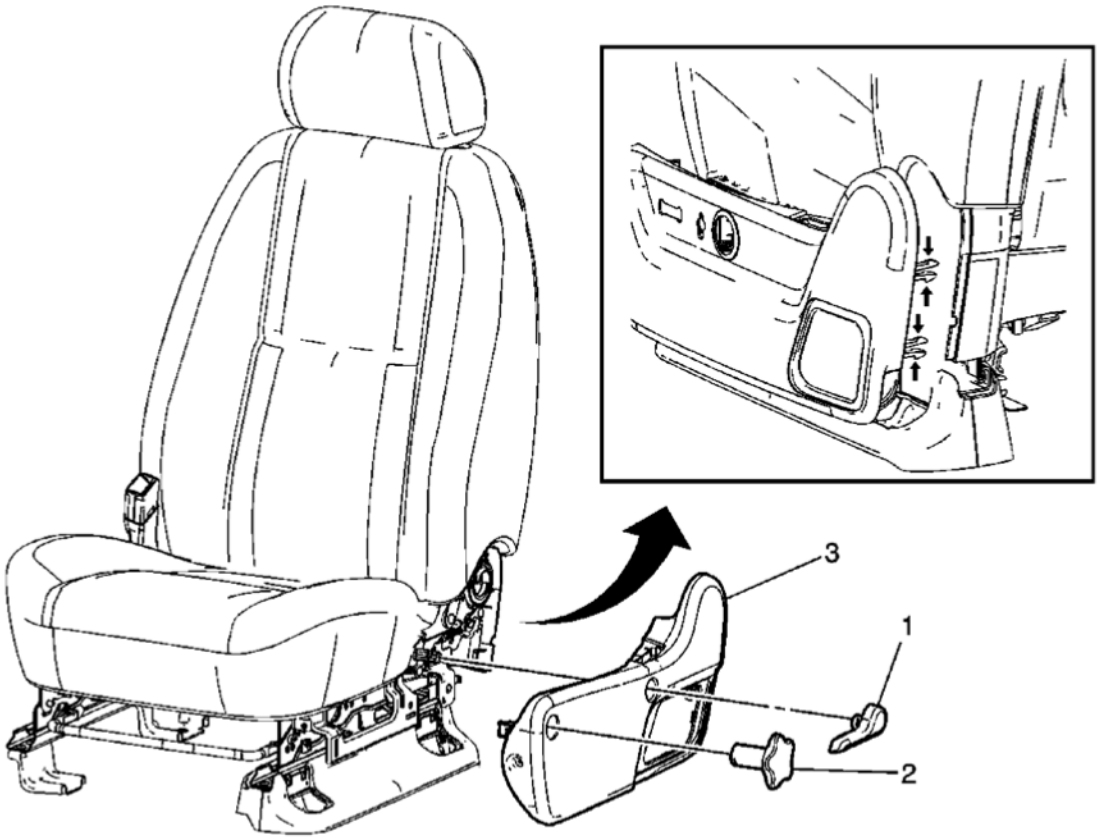


Fig. 10: View Of Front Seat Adjuster Outer Finish Cover, Recliner Cover & Manual Lumbar Knob
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Outer Trim Panel Replacement - Front Seat (Manual)

Callout	Component Name
1	Front Seat Recliner Lever **Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the lever.
2	Front Seat Manual Lumbar Knob **Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the knob.
3	Front Seat Adjuster Outer Finish Cover **Tip:** 1. Remove the screw from front of the cover. 2. Squeeze the tabs in the rear of the cover together to disengage the outer trim cover from the rear trim cover. 3. Pull outward to release the retainers from the seat assembly. 4. Disconnect the electrical connectors.

cardiagn.com

	NOTE: **Refer to Fastener Notice .** **Tighten:** 2 N.m (18 lb in)

SEAT CUSHION OUTER TRIM PANEL REPLACEMENT - FRONT SEAT (POWER)

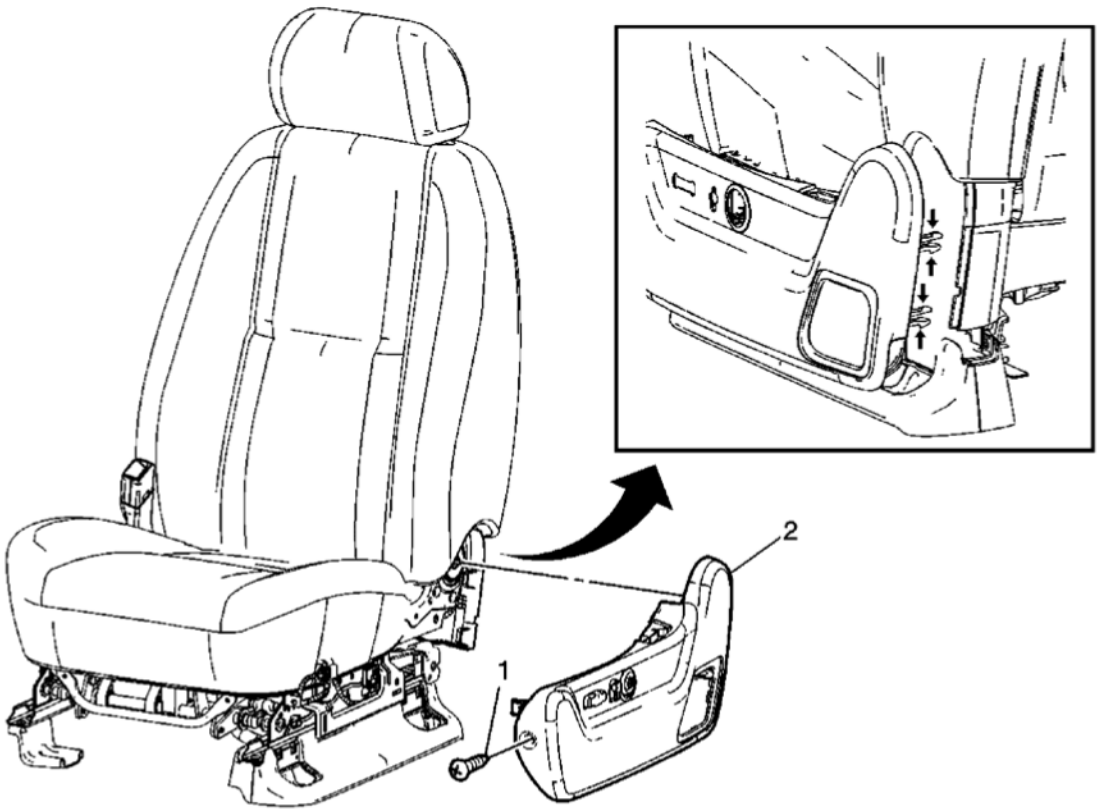


Fig. 11: View Of Front Seat Adjuster Outer Finish Cover & Screw
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Outer Trim Panel Replacement - Front Seat (Power)

Callout	Component Name
1	Front Seat Adjuster Outer Finish Cover Screw **NOTE:** **Refer to Fastener Notice .** **Tighten:** 2 N.m (18 lb in)
	Front Seat Adjuster Outer Finish Cover **Tip:**

cardiagn.com

2	1. Squeeze the tabs in the rear of the cover together to disengage the outer trim cover from the rear trim cover. 2. Pull outward to release the retainers from the seat assembly. 3. Disconnect the electrical connectors. 4. If replacing the finish cover, remove the switches and install on new finish cover.

SEAT CUSHION INNER TRIM PANEL REPLACEMENT - FRONT

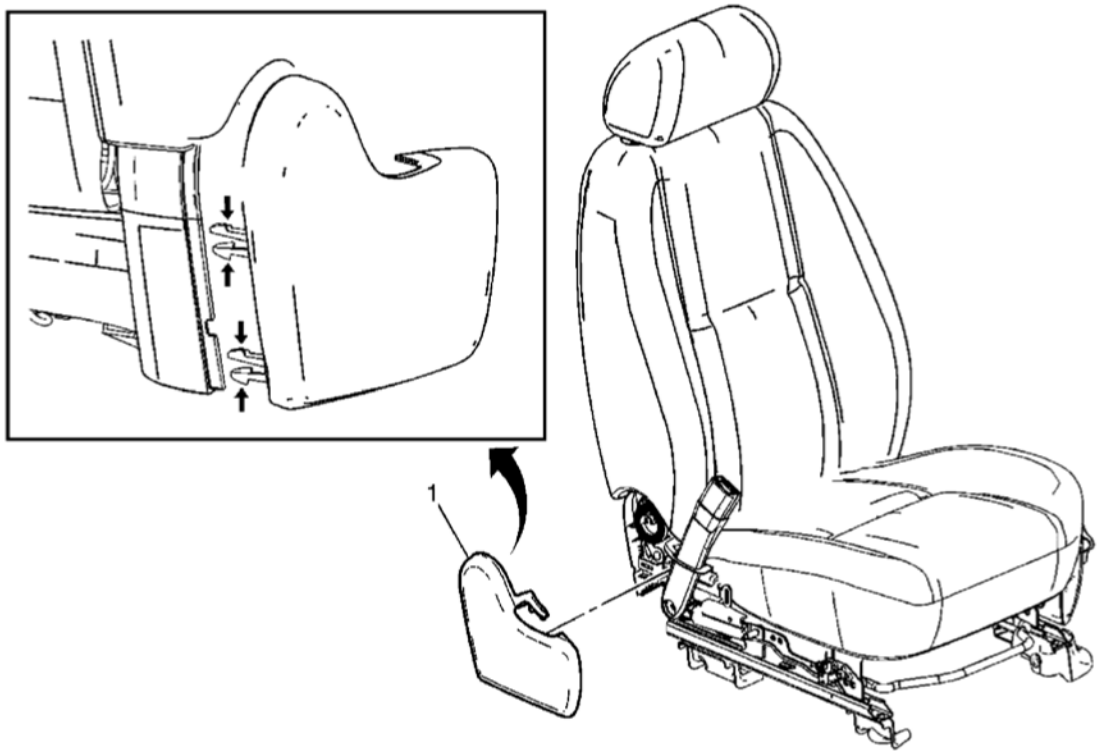


Fig. 12: Front Seat Adjuster Inner Finish Cover
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Inner Trim Panel Replacement - Front

Callout	Component Name
Preliminary Procedure: Remove the front seat. Refer to **Front Seat Replacement - Bucket**.	
1	Front Seat Adjuster Inner Finish Cover **Tip:** 1. Disengage the bezel around the seat belt buckle. 2. Squeeze the tabs in the rear of the cover together to disengage the outer trim cover from the rear trim cover.

cardiagn.com

	3. Pull outward to release the retainers from the seat assembly.

SEAT CUSHION TRIM COVER AND PAD REPLACEMENT

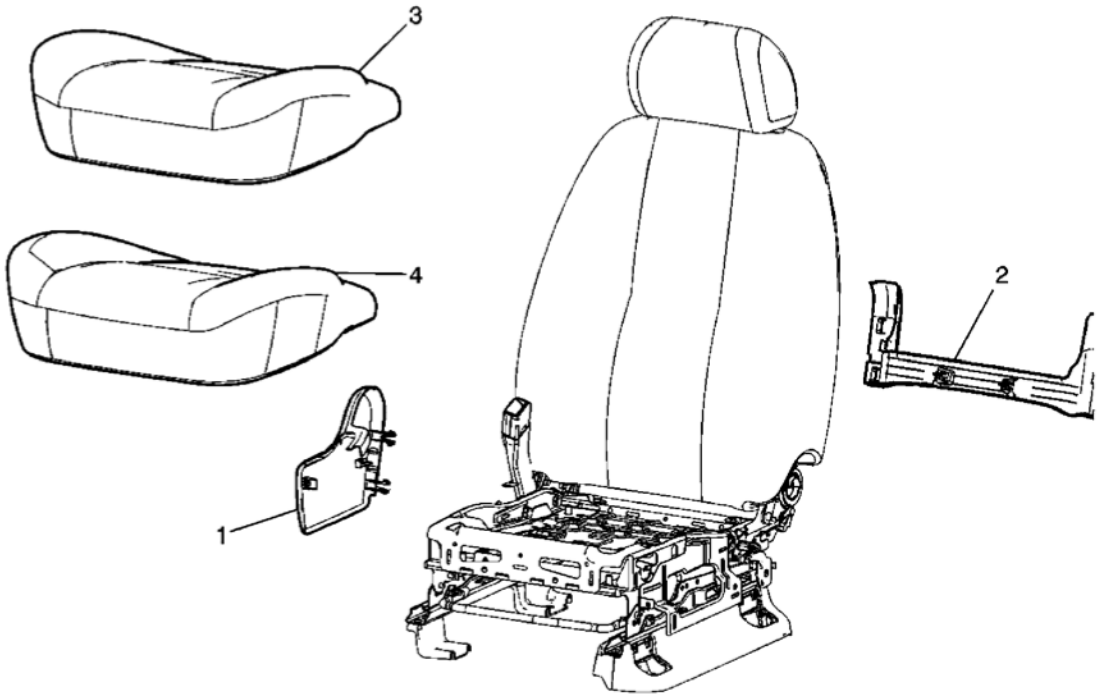


Fig. 13: View Of Seat Cushion Trim Cover, Pad & Components
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Trim Cover and Pad Replacement

Callout	Component Name
Preliminary Procedure 1. Remove the front seat. Refer to **Front Seat Replacement - Bucket**. 2. Remove the front seat recliner lever, if equipped. Refer to **Seat Back Recliner Handle Replacement - Front**. 3. Remove the front seat manual lumbar knob, if equipped. Refer to **Lumbar Support Knob Replacement**. 4. Remove the front seat adjuster outer finish cover. Refer to **Seat Cushion Outer Trim Panel Replacement - Front Seat (Manual)** or **Seat Cushion Outer Trim Panel Replacement - Front Seat (Power)**.	
1	Front Seat Adjuster Inner Finish Cover Refer to **Seat Cushion Inner Trim Panel Replacement - Front**.
2	Front Seat Riser Finish Cover **Tip:** Pull rearward to disengage the cover from the seat riser.

cardiagn.com

3	Front Seat Cushion Cover and Pad **Tip:** 1. Disengage the j-channel retainers from the seat cushion frame. 2. Remove the seat cushion cover and pad from the seat cushion frame as an assembly.
4	Front Seat Cushion Pad

FRONT SEAT BACK COVER AND CUSHION PAD REPLACEMENT

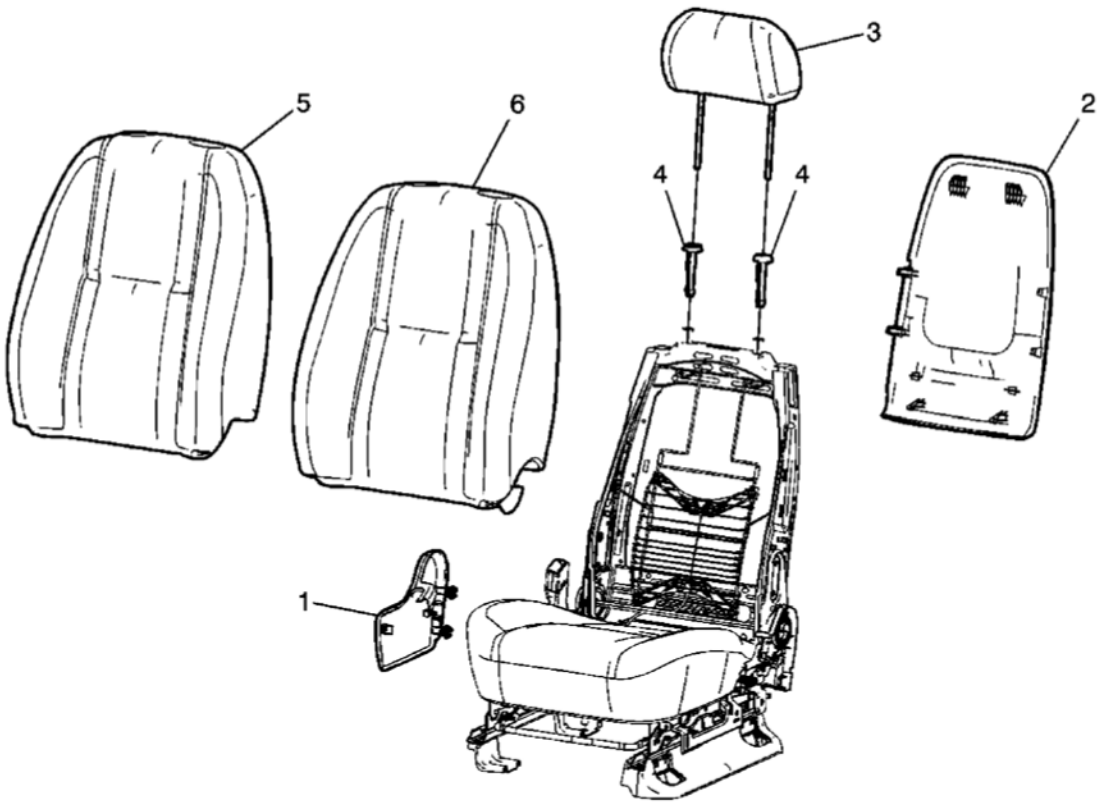


Fig. 14: View Of Front Seat Back Cover, Cushion Pad & Seat Components
Courtesy of GENERAL MOTORS CORP.

Front Seat Back Cover and Cushion Pad Replacement

Callout	Component Name
Preliminary Procedure	
	1. Remove the front seat. Refer to **Front Seat Replacement - Bucket**. 2. Remove the front seat recliner lever, if equipped. Refer to **Seat Back Recliner Handle Replacement - Front**. 3. Remove the front seat manual lumbar knob, if equipped. Refer to **Lumbar Support Knob Replacement**.

cardiagn.com

4. Remove the front seat adjuster outer finish cover. Refer to **Seat Cushion Outer Trim Panel Replacement - Front Seat (Manual)** or **Seat Cushion Outer Trim Panel Replacement - Front Seat (Power)**.	
1	Front Seat Adjuster Inner Finish Cover Refer to **Seat Cushion Inner Trim Panel Replacement - Front**.
2	Front Seat Back Cushion Finish Panel **Tip:** Using a nylon flat bladed tool push the tabs in on the side of the panel to release from the seat back to remove.
3	Front Seat Head Restraint Assembly **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
4	Front Seat Head Restraint Guide (Qty: 2) **Tip:** Squeeze the bottom of the guide together and push up to remove from the seat back.
5	Seat Back Cushion Cover **Tip:** 1. Disengage the j-channel retainers from the seat back cushion frame. 2. Remove the rear seat recliner to seat cushion frame bolt on each side and tilt the seat back forward to make it easier to remove and install the cover. 3. Disconnect the blower from the seat back cushion pad, if equipped. 4. Remove the air duct, if equipped. 5. Disconnect the electrical connectors that attach to the seat back cushion, if equipped. 6. Remove the seat back cushion cover and pad from the seat cushion frame as an assembly. 7. Pull the cover away from the pad to disengage the retainers
6	Seat Back Cushion Pad

FRONT SEAT BACK FRAME REPLACEMENT

cardiagn.com

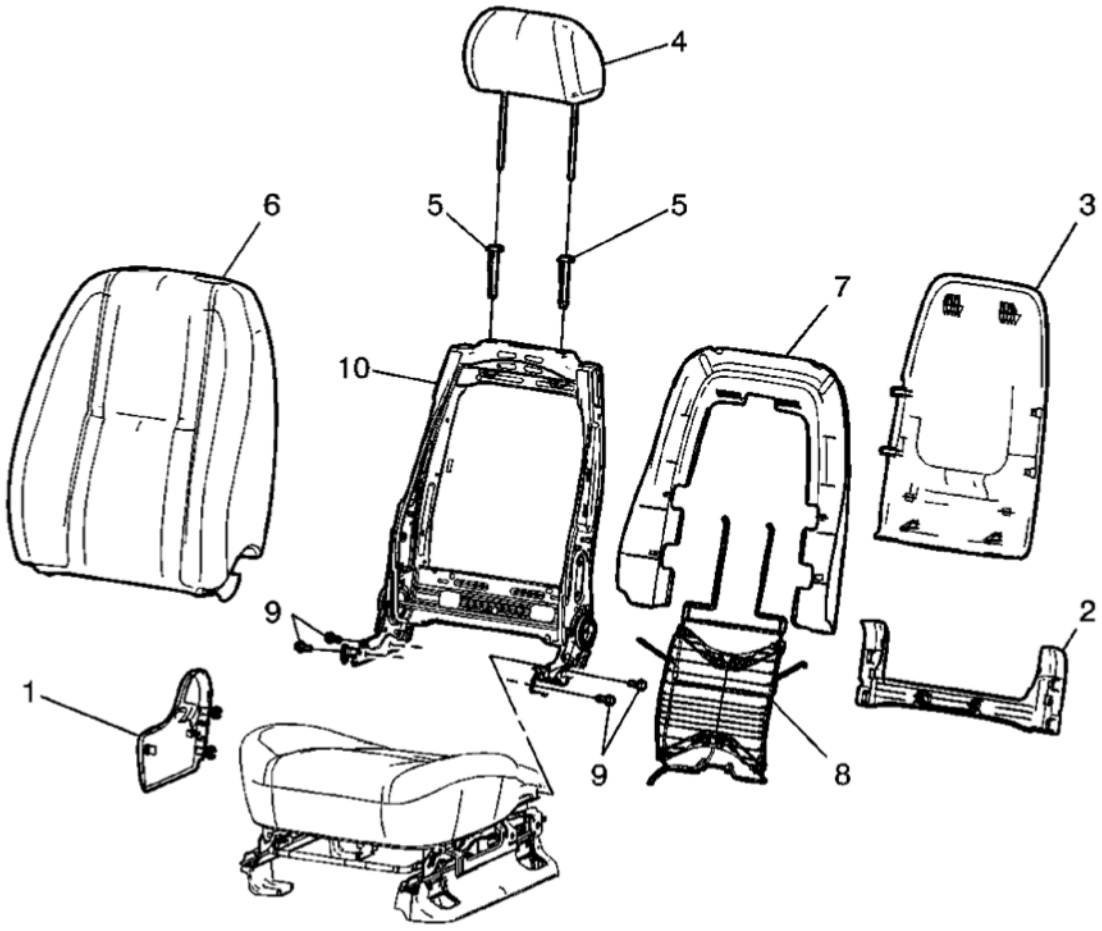


Fig. 15: View Of Front Seat Components
Courtesy of GENERAL MOTORS CORP.

Front Seat Back Frame Replacement

Callout	Component Name
Preliminary Procedure 1. Remove the front seat. Refer to **Front Seat Replacement - Bucket**. 2. Remove the front seat recliner lever, if equipped. Refer to **Seat Back Recliner Handle Replacement - Front**. 3. Remove the front seat manual lumbar knob, if equipped. Refer to **Lumbar Support Knob Replacement**. 4. Remove the front seat adjuster outer finish cover. Refer to **Seat Cushion Outer Trim Panel Replacement - Front Seat (Manual)** or **Seat Cushion Outer Trim Panel Replacement - Front Seat (Power)**.	
1	Front Seat Adjuster Inner Finish Cover Refer to **Seat Cushion Inner Trim Panel Replacement - Front**.

cardiagn.com

2	Front Seat Back Cushion Finish Panel **Tip:** Using a nylon flat bladed tool push the tabs in on the side of the panel to release from the seat back to remove.
3	Front Seat Riser Finish Cover **Tip:** Pull rearward to disengage the cover from the seat riser.
4	Front Seat Head Restraint Assembly **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
5	Front Seat Head Restraint Guide (Qty: 2) **Tip:** Squeeze the bottom of the guide together and push up to remove from the seat back.
6	Seat Back Cushion Cover and Pad Refer to **Front Seat Back Cover and Cushion Pad Replacement**.
7	Front Seat Back Finish Panel Support
8	Seat Lumbar Subsystem **Tip:** 1. Disconnect the cable. 2. Pull the retainers out at the bottom and then slide the upper spring wire out from the top of the seat frame.
9	Seat Back Frame Bolt (Qty: 4) **NOTE:** Refer to Fastener Notice . **Tighten:** 9 N.m (80 lb in)
10	Seat Back Frame

FRONT SEAT RECLINER KNOB REPLACEMENT

cardiagn.com

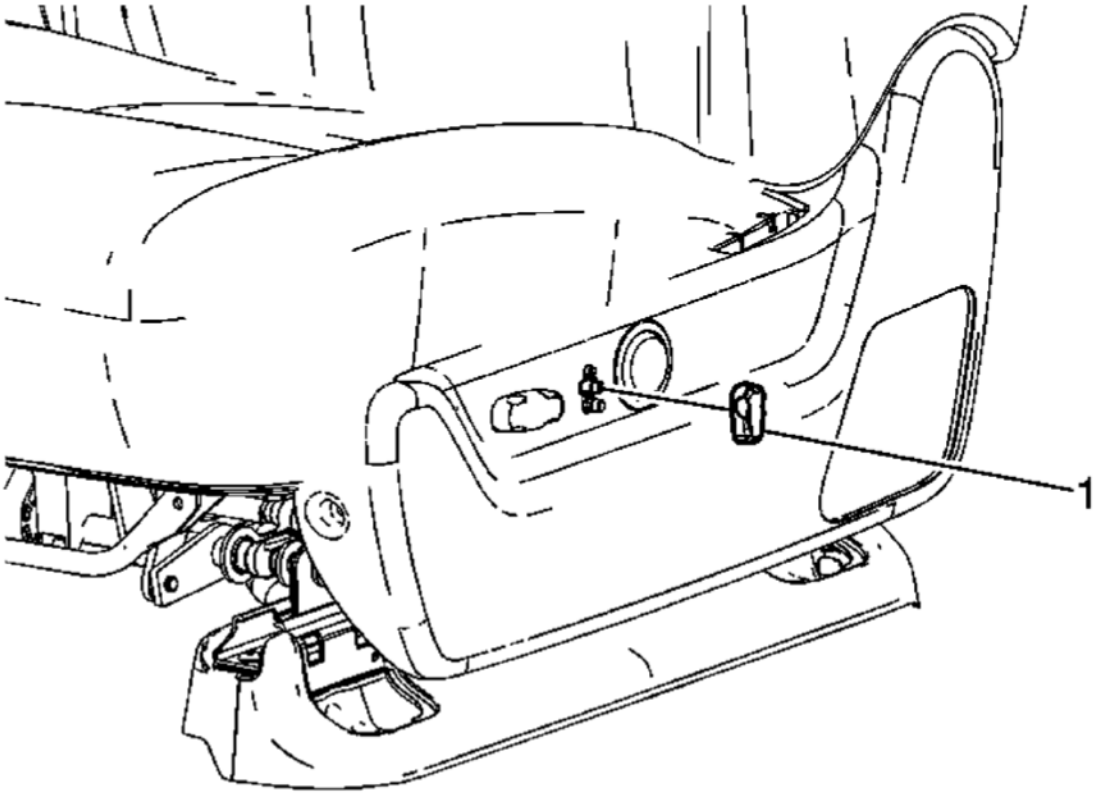


Fig. 16: Front Seat Recliner Switch Knob
Courtesy of GENERAL MOTORS CORP.

Front Seat Recliner Knob Replacement

Callout	Component Name
1	Front Seat Recliner Switch Knob **Tip:** Pull outward from seat to remove. If too tight, a flat-bladed tool may be used to help disengage the knob from the switch.

FRONT SEAT BACK HINGE AND RECLINER MECHANISM REPLACEMENT

cardiagn.com

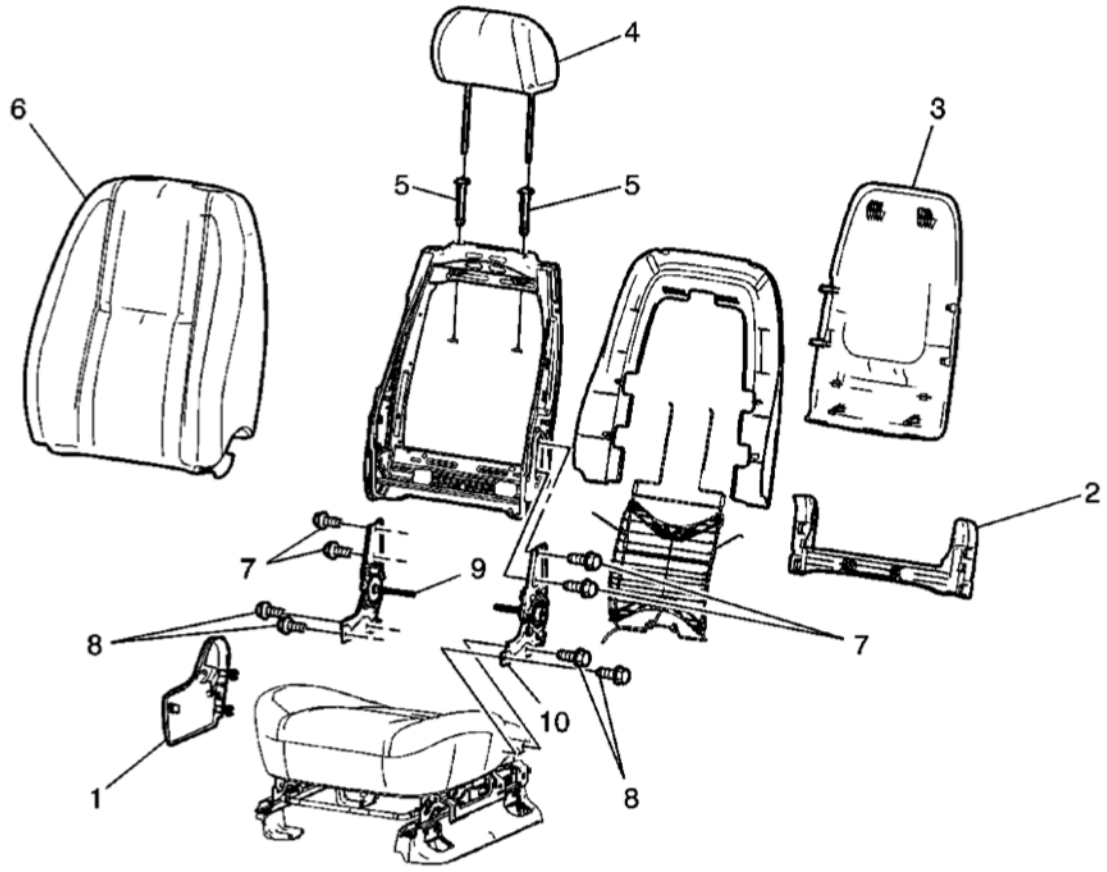


Fig. 17: View Of Front Seat Components
Courtesy of GENERAL MOTORS CORP.

Front Seat Back Hinge and Recliner Mechanism Replacement

Callout	Component Name
3	Front Seat Adjuster Outer Finish Cover Refer to **Seat Cushion Outer Trim Panel Replacement - Front Seat (Manual)** or **Seat Cushion Outer Trim Panel Replacement - Front Seat (Power)**.
Preliminary Procedure: Remove the front seat. Refer to **Front Seat Replacement - Bucket**.	
1	Front Seat Adjuster Inner Finish Cover Refer to **Seat Cushion Inner Trim Panel Replacement - Front**.
2	Front Seat Back Cushion Finish Panel **Tip:** Using a nylon flat-bladed tool, push the tabs in on the side of the panel to release from the seat back to remove.
3	Front Seat Riser Finish Cover **Tip:** Pull rearward to disengage the cover from the seat riser.
	Front Seat Head Restraint Assembly **Tip:**

cardiagn.com

4	1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
5	Front Seat Head Restraint Guide (Qty: 2) **Tip:** Squeeze the bottom of the guide together and push up to remove from the seat back.
6	Seat Back Cushion Cover and Pad Refer to **Front Seat Back Cover and Cushion Pad Replacement**.
7	Seat Back Frame Bolt (Qty: 4) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
8	Seat Cushion Frame Bolt (Qty: 4) **Tighten:** 9 N.m (80 lb in)
9	Seat Inner Recliner Assembly **Tip:** Remove the power seat recliner motor bolt, if equipped. Refer to **Power Recliner Motor Replacement - Front Seat** .
10	Seat Outer Recliner Assembly

SEAT BACK RECLINER HANDLE REPLACEMENT - FRONT

cardiagn.com

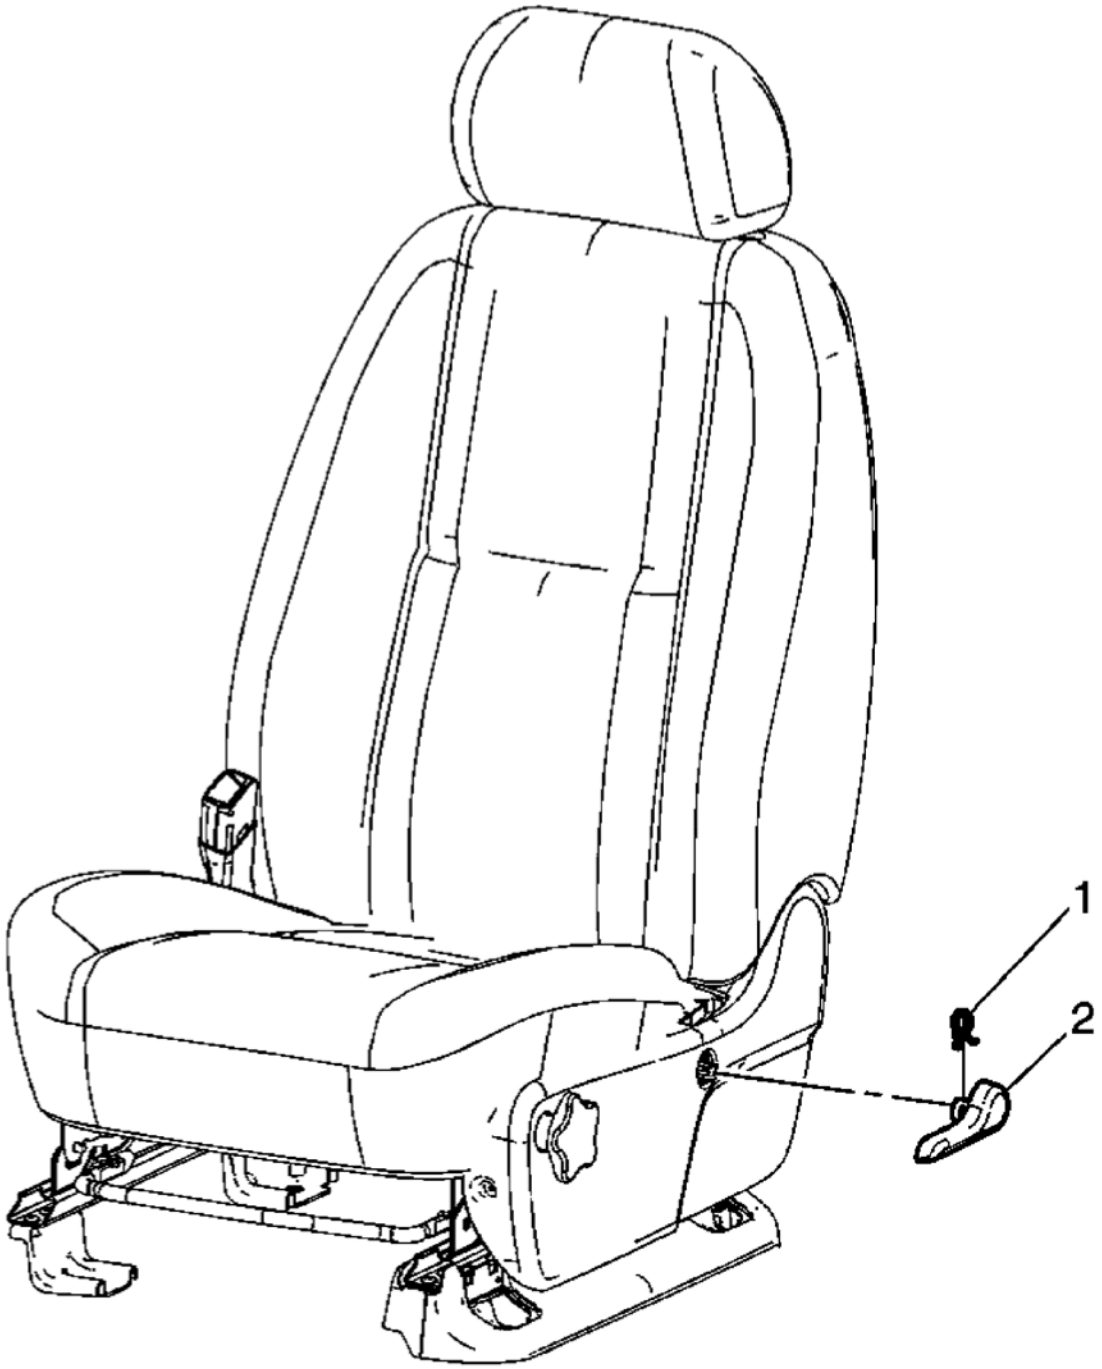


Fig. 18: View Of Front Seat Recliner Lever
Courtesy of GENERAL MOTORS CORP.

Seat Back Recliner Handle Replacement - Front

Callout	Component Name
	Front Seat Recliner Lever Clip

cardiagn.com

1	**Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the lever.
2	Front Seat Recliner Lever

FRONT SEAT BACK PANEL REPLACEMENT

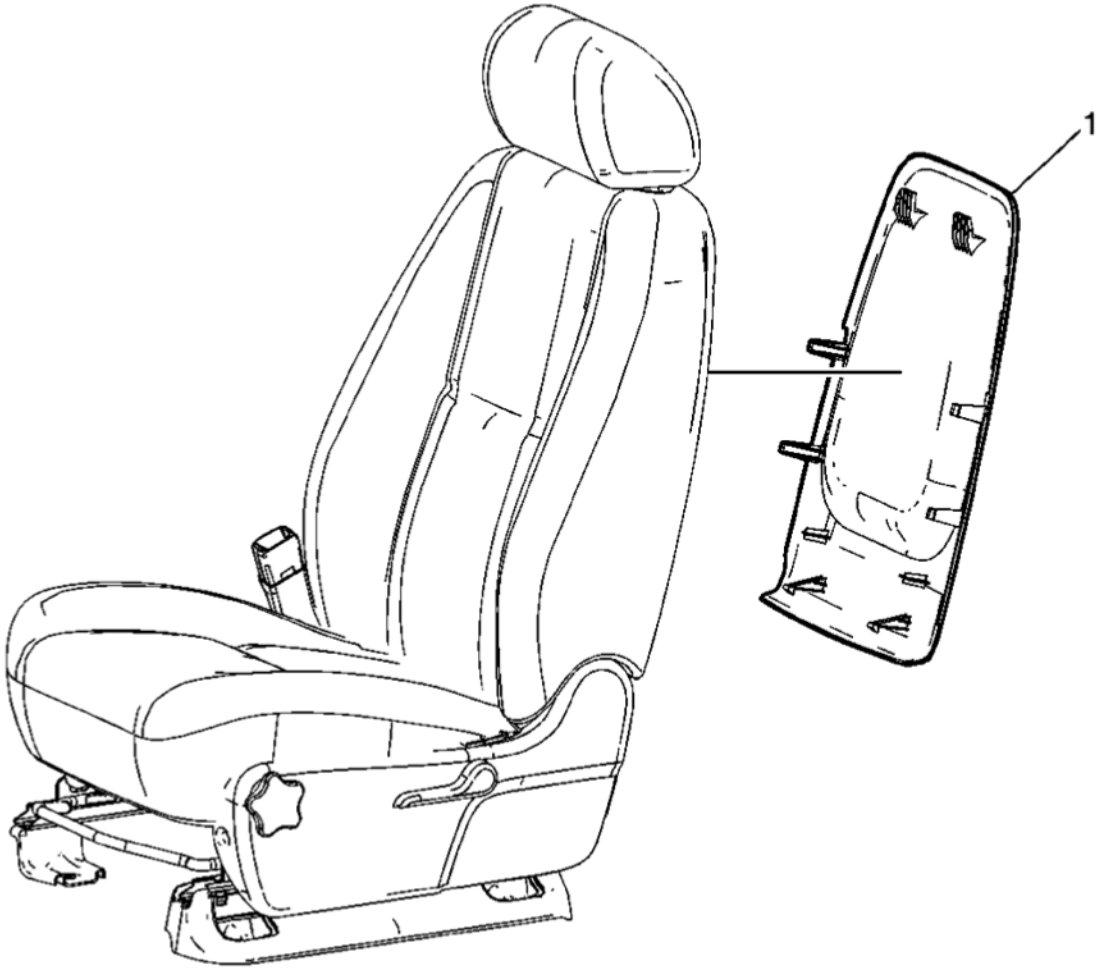


Fig. 19: View Of Front Seat Back Panel
Courtesy of GENERAL MOTORS CORP.

Front Seat Back Panel Replacement

Callout	Component Name
1	Front Seat Back Cushion Finish Panel **Tip:** Using a nylon flat-bladed tool, push the tabs in on the side of the panel to release from the seat back to remove.

LUMBAR REPLACEMENT - FRONT SEAT (MANUAL)

cardiagn.com

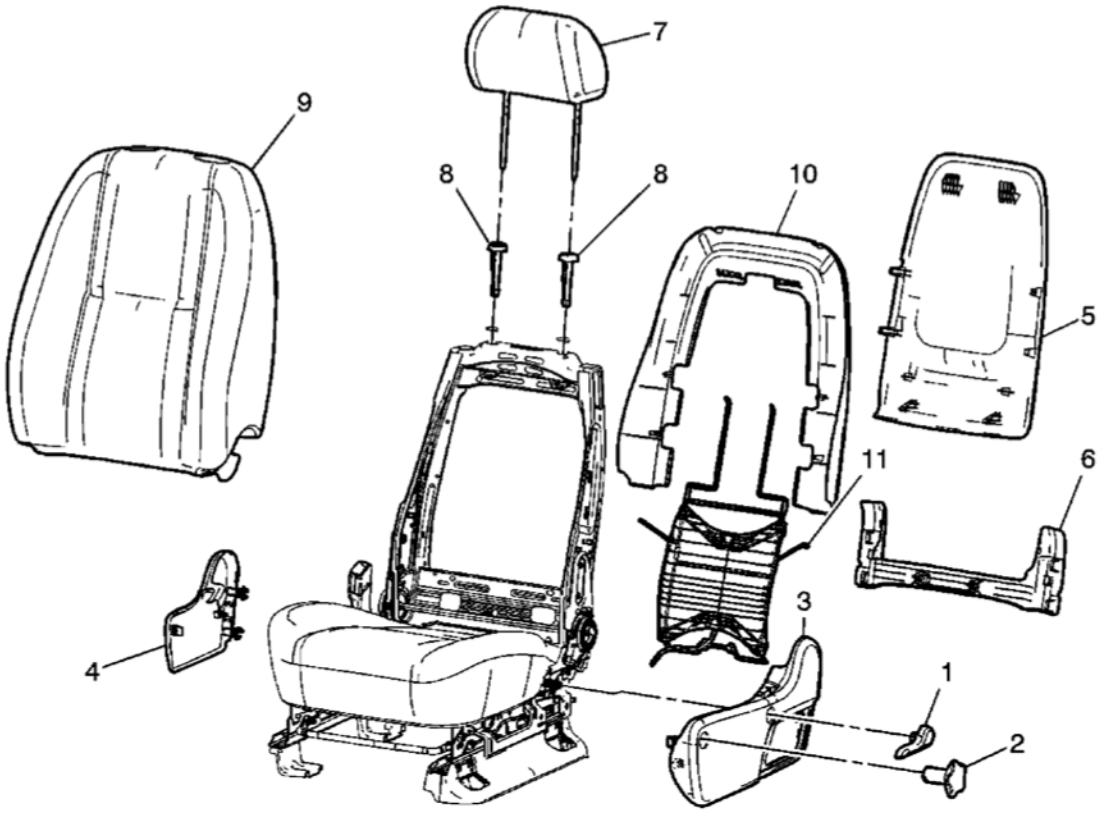


Fig. 20: View Of Front Seat Components
Courtesy of GENERAL MOTORS CORP.

Lumbar Replacement - Front Seat (Manual)

Callout	Component Name
Preliminary Procedure: Remove the front seat. Refer to **Front Seat Replacement - Bucket**.	
1	Front Seat Recliner Lever **Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the lever.
2	Front Seat Manual Lumbar Knob **Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the knob.
3	Front Seat Adjuster Outer Finish Cover Refer to **Seat Cushion Outer Trim Panel Replacement - Front Seat (Manual)** or **Seat Cushion Outer Trim Panel Replacement - Front Seat (Power)**.
4	Front Seat Adjuster Inner Finish Cover Refer to **Seat Cushion Inner Trim Panel Replacement - Front**.
5	Front Seat Back Cushion Finish Panel **Tip:** Using a nylon flat-bladed tool, push the tabs in on the side of the panel to release from the seat back to remove.

cardiagn.com

6	Front Seat Riser Finish Cover **Tip:** Pull rearward to disengage the cover from the seat riser.
7	Front Seat Head Restraint Assembly **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
8	Front Seat Head Restraint Guide (Qty: 2) **Tip:** Squeeze the bottom of the guide together and push up to remove from the seat back.
9	Seat Back Cushion Cover and Pad Refer to **Front Seat Back Cover and Cushion Pad Replacement**.
10	Front Seat Back Finish Panel Support
11	Seat Lumbar Subsystem **Tip:** 1. Disconnect the cable. 2. Pull the retainers out at the bottom and then slide the upper spring wire out from the top of the seat frame.

LUMBAR SUPPORT KNOB REPLACEMENT

cardiagn.com

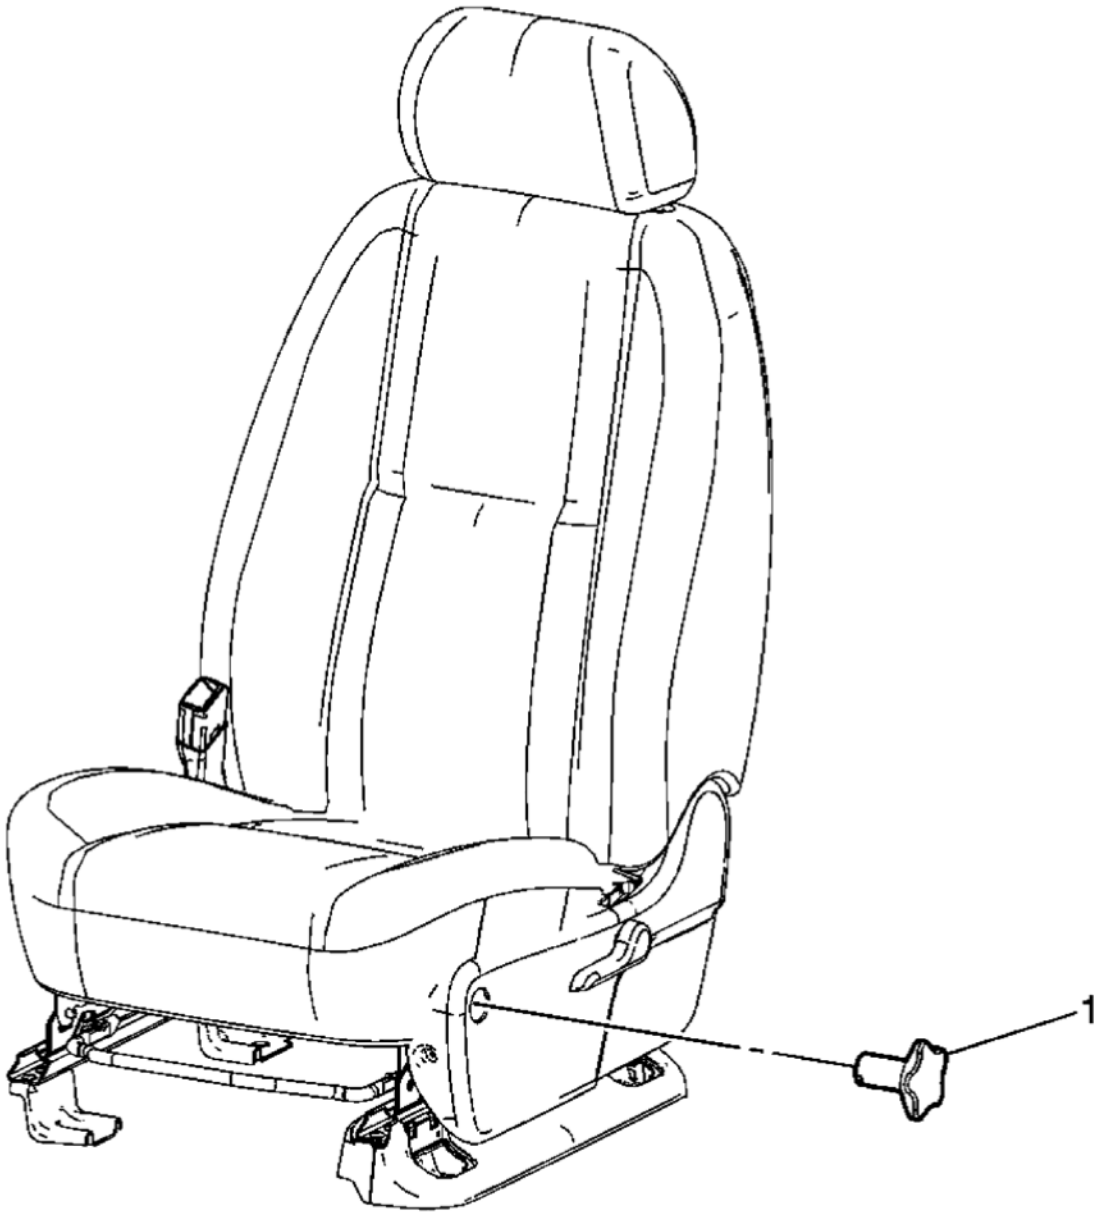


Fig. 21: View Of Front Seat Manual Lumbar Knob
Courtesy of GENERAL MOTORS CORP.

Lumbar Support Knob Replacement

Callout	Component Name
1	Front Seat Manual Lumbar Knob **Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the knob.

REAR SEAT REPLACEMENT (AVALANCHE/ESCALADE EXT)

cardiagn.com

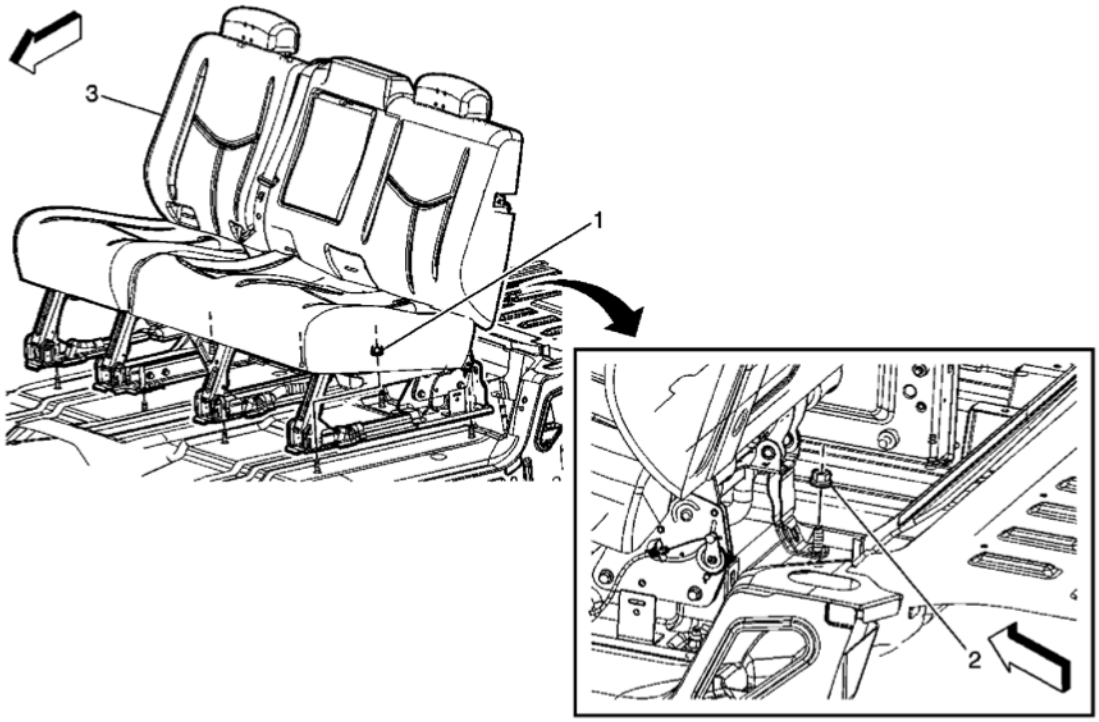


Fig. 22: View Of Rear Seat Assembly, Nuts & Rear Seat Belt Buckle Anchor Nut
Courtesy of GENERAL MOTORS CORP.

Rear Seat Replacement (Avalanche/Escalade EXT)

Callout	Component Name
	1. Remove the jack access cover and jack from the vehicle. 2. Remove the rear seat track finish cover.
1	Rear Seat Assembly Nut (Qty: 7) **Tip:** Remove the adjuster cover to access the nuts. **NOTE:** **Refer to Fastener Notice .** **Tighten:** 45 N.m (33 lb ft)
2	Rear Seat Belt Buckle Anchor Nut **Tip:** The nut is located behind the seat. **Tighten:** 45 N.m (33 lb ft)
3	Rear Seat Assembly **Tip:** Disconnect the electrical connector, if equipped.

REAR SEAT REPLACEMENT (TAHOE/YUKON/ESCALADE WITH BUCKET)

cardiagn.com

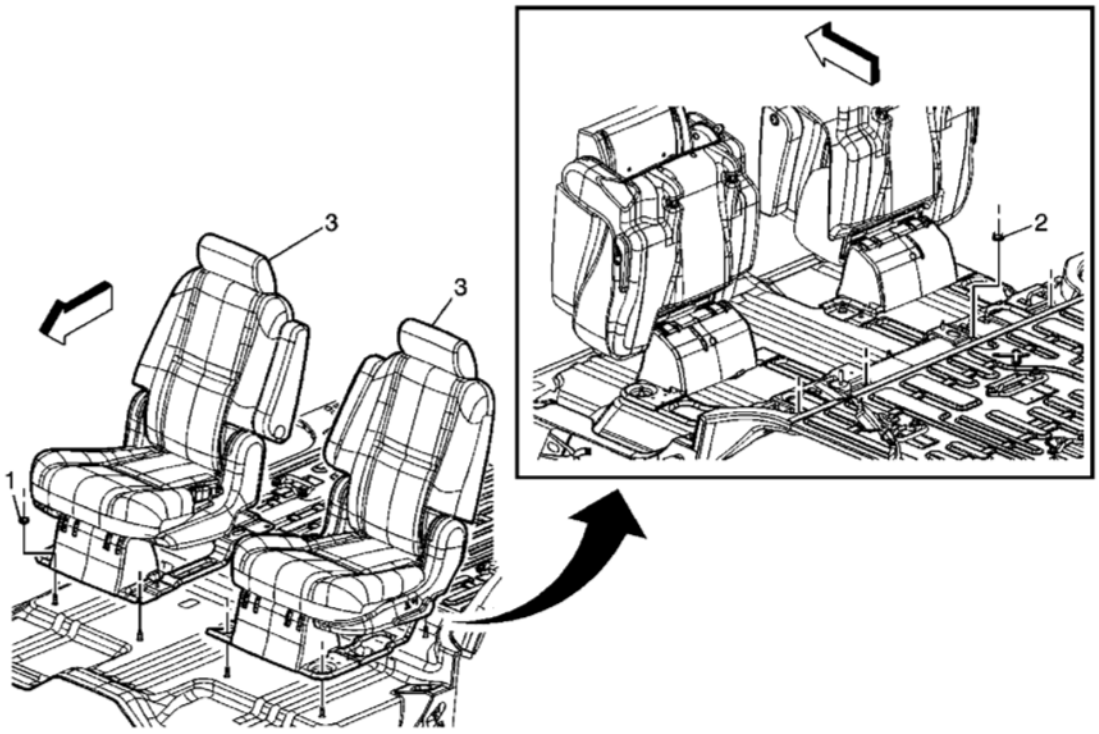


Fig. 23: View Of Rear Seat Assembly & Nuts
Courtesy of GENERAL MOTORS CORP.

Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
NOTE: Refer to **Fastener Notice** . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Assembly Forward Nut (Qty: 4) **Tip:** Fold the seat forward and remove the floor cover to access the nuts. **Tighten:** 45 N.m (33 lb ft)
2	Rear Seat Assembly Rearward Nut (Qty: 4) **Tighten:** 45 N.m (33 lb ft)
3	Rear Seat Assembly **Tip:** Disconnect the electrical connector, if equipped.

REAR SEAT REPLACEMENT (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

cardiagn.com

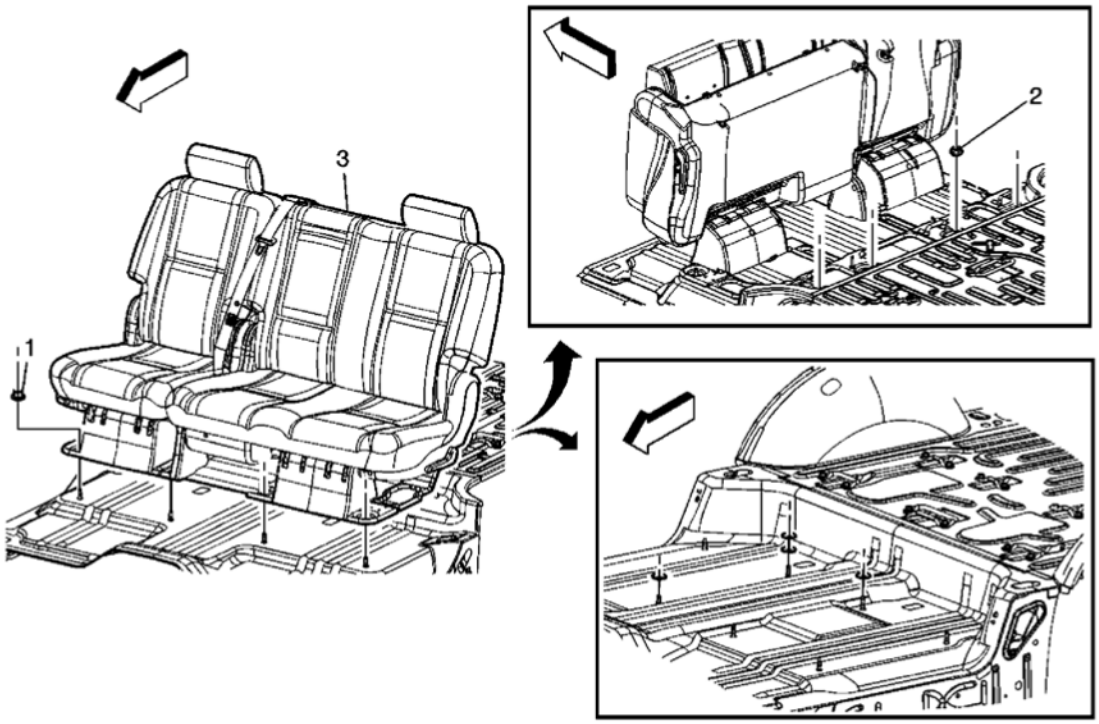


Fig. 24: View Of Rear Seat Assembly & Nuts
Courtesy of GENERAL MOTORS CORP.

Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
NOTE: Refer to **Fastener Notice** . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Assembly Forward Nut (Qty: 4) **Tip:** Fold the seat forward and remove the floor cover to access the nuts. **Tighten:** 45 N.m (33 lb ft)
2	Rear Seat Assembly Rearward Nut (Qty: 4) **Tighten:** 45 N.m (33 lb ft)
3	Rear Seat Assembly **Tip:** 1. Disconnect the electrical connector, if equipped. 2. Remove the seat with the aid of an assistant; the seat is very heavy.

REAR SEAT ARMREST REPLACEMENT (AVALANCHE/ESCALADE EXT)

cardiagn.com

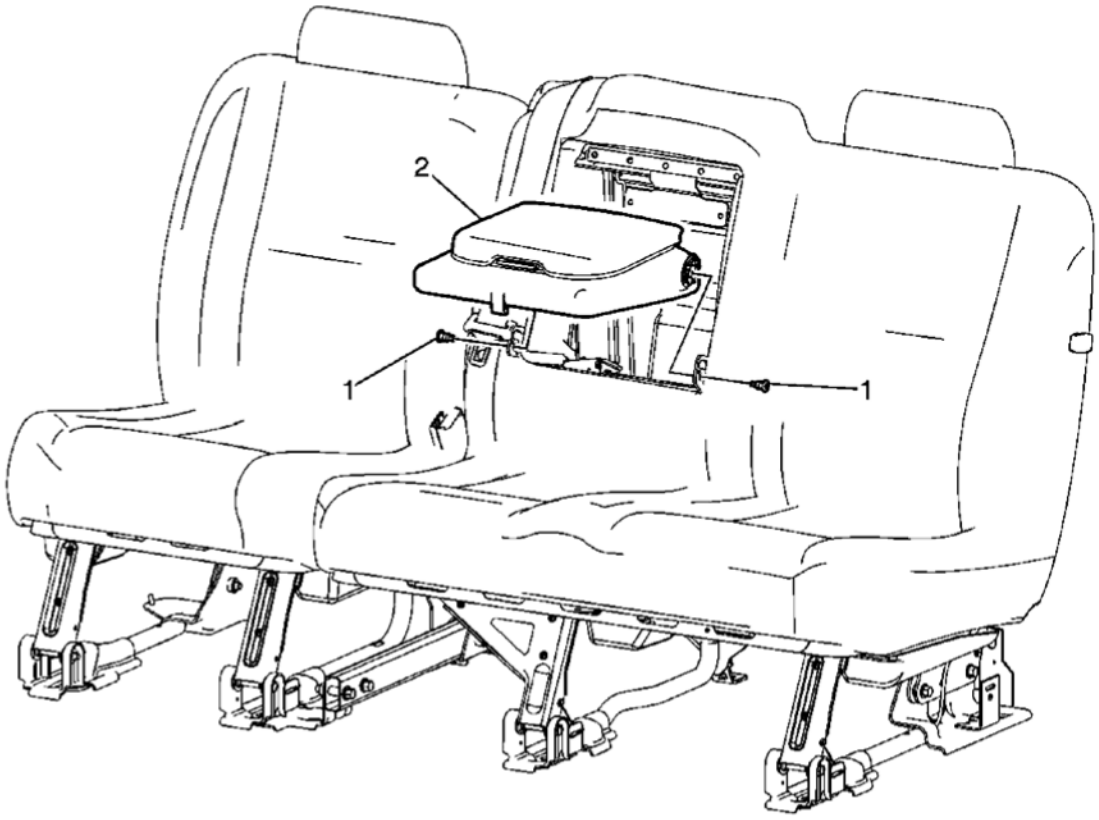


Fig. 25: View Of Rear Seat Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Armrest Replacement (Avalanche/Escalade EXT)

Callout	Component Name
1	Rear Seat Back Trim Panel Refer to **Trim Panel Replacement - Rear Seat Back (Avalanche/Escalade EXT)**.
2	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
3	Rear Seat Head Restraint Guides **Tip:** Squeeze the bottom of the head restraint guide together and push up to remove.
4	Rear Seat Shoulder Belt Opening Bezel Refer to **Rear Seat Shoulder Belt Opening Bezel Replacement (Avalanche/Escalade EXT)** or **Rear Seat Shoulder Belt Opening Bezel Replacement (Tahoe/Yukon/Escalade Rear Seat No. 2)**.
	Rear Seat Back Cushion Cover and Pad

cardiagn.com

5	Refer to **Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
6	Rear Seat Armrest Bolt (Qty: 2) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
7	Rear Seat Armrest Assembly

REAR SEAT ARMREST REPLACEMENT (TAHOE/YUKON/ESCALADE WITH BUCKET)

cardiagn.com

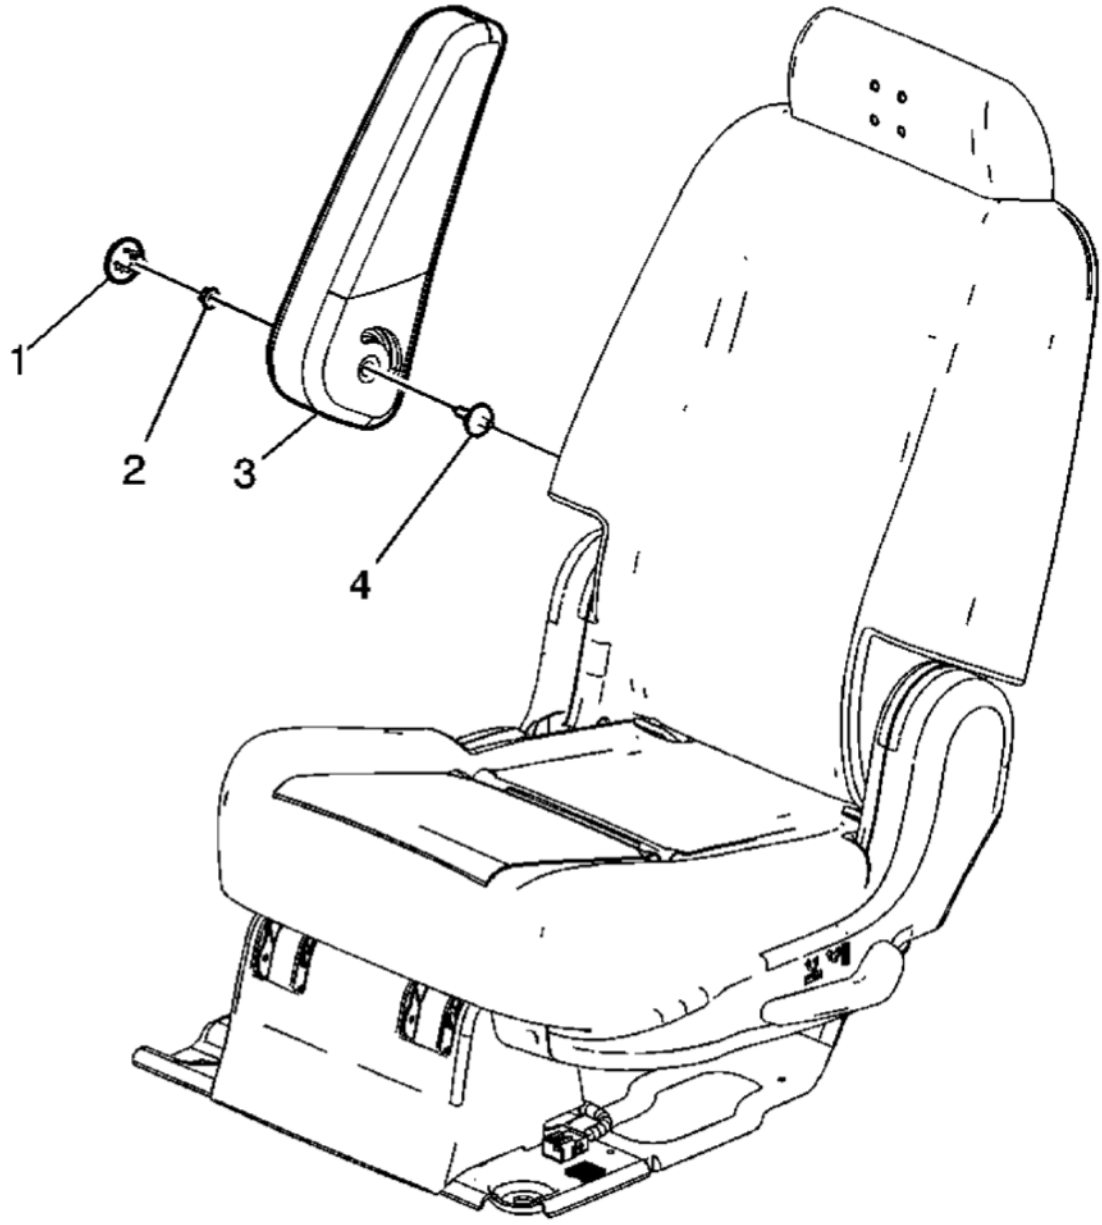


Fig. 26: View Of Rear Seat Armrest, Bolt & Finish Cover
Courtesy of GENERAL MOTORS CORP.

Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
1	Rear Seat Armrest Bolt Finish Cover
2	Rear Armrest Bolt **Tighten:** 9 N.m (80 lb in)
3	Rear Seat Armrest

cardiagn.com

REAR SEAT ARMREST REPLACEMENT (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

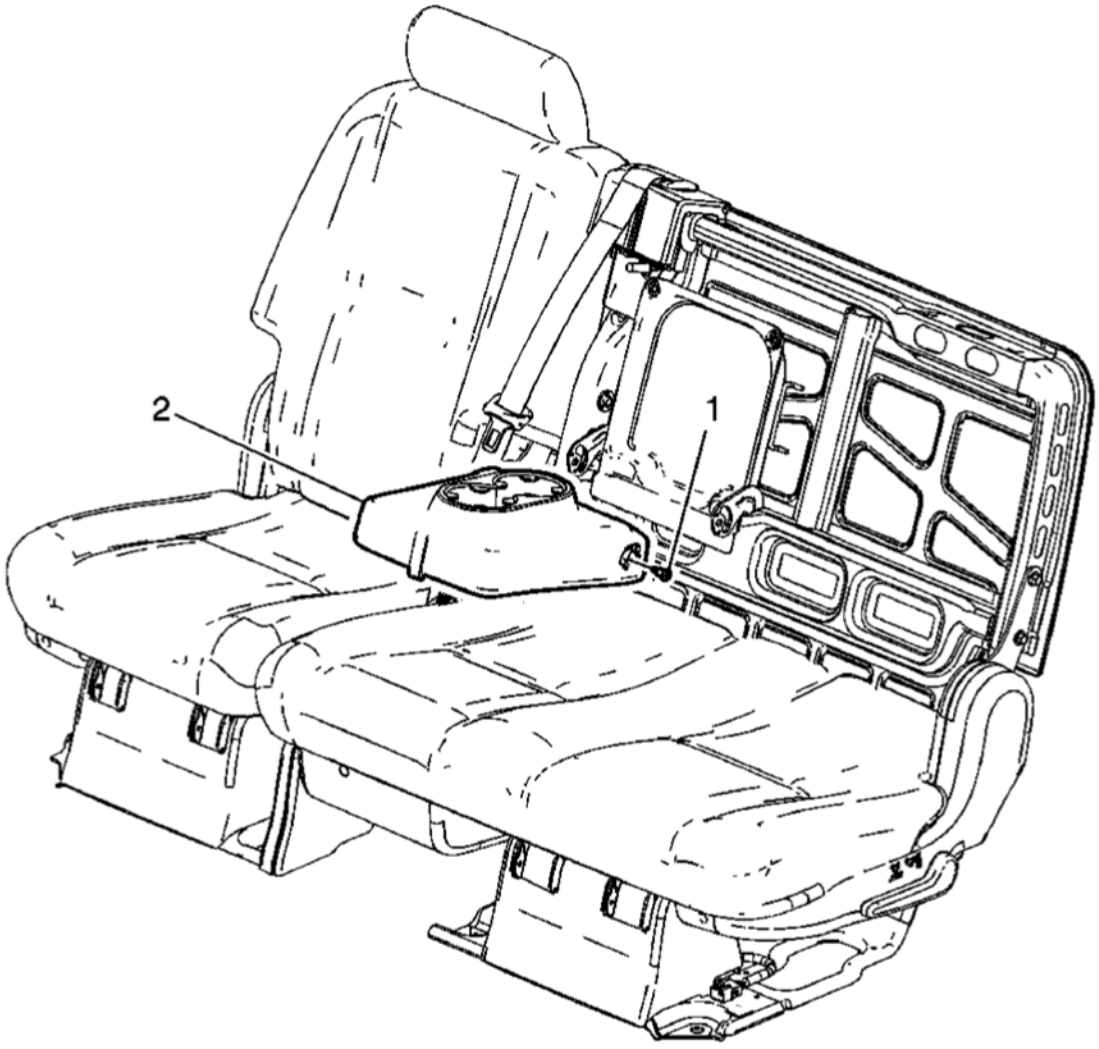


Fig. 27: View Of Rear Seat Armrest & Bolts
Courtesy of GENERAL MOTORS CORP.

Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
NOTE: Refer to Fastener Notice . **Fastener Tightening Specifications:** Refer to Fastener Tightening Specifications.**Preliminary Procedure:** Remove the seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT) or Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket) or Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench).	

cardiagn.com

1	Rear Armrest Bolt (Qty: 2) **Tighten:** 9 N.m (80 lb in)
2	Rear Seat Armrest

REAR SEAT ARMREST MOUNT PANEL REPLACEMENT (AVALANCHE/ESCALADE EXT)

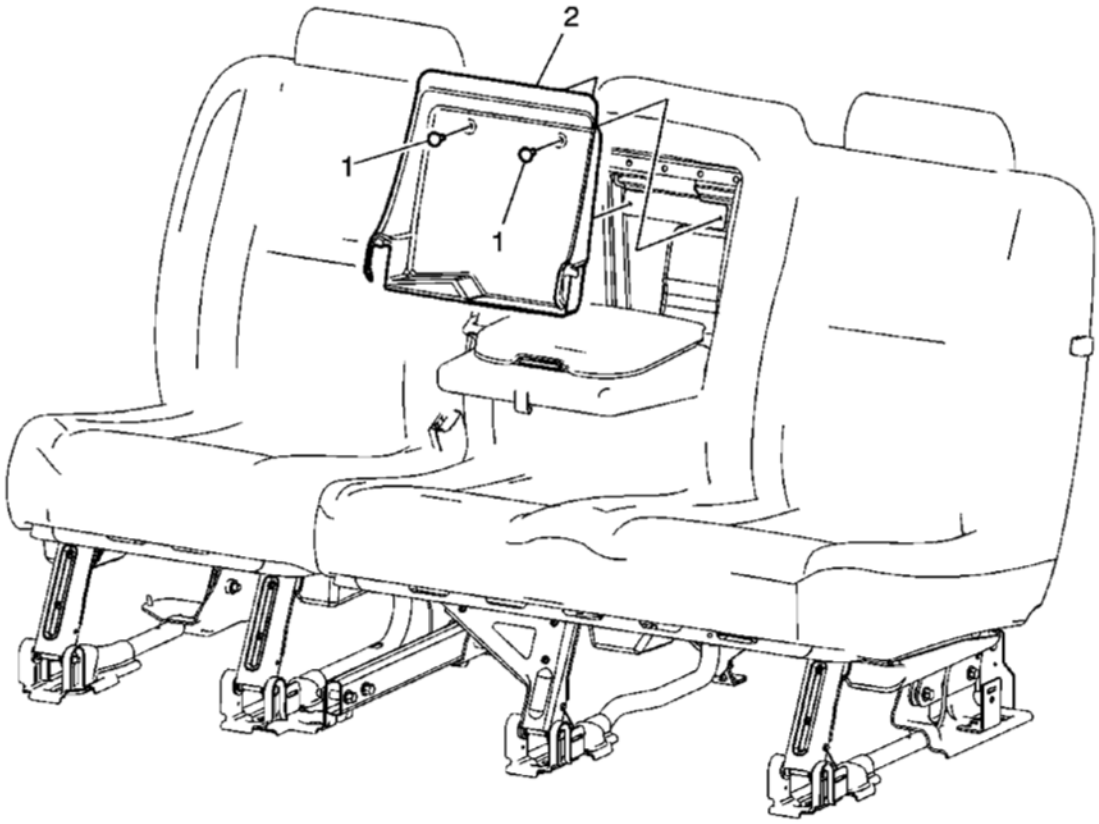


Fig. 28: View Of Rear Seat Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Armrest Mount Panel Replacement (Avalanche/Escalade EXT)

Callout	Component Name
1	Rear Seat Back Trim Panel Refer to **Trim Panel Replacement - Rear Seat Back (Avalanche/Escalade EXT)**.
2	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.

cardiagn.com

3	Rear Seat Head Restraint Guides **Tip:** Squeeze the bottom of the head restraint guide together and push up to remove.
4	Rear Seat Shoulder Belt Opening Bezel Refer to **Rear Seat Shoulder Belt Opening Bezel Replacement (Avalanche/Escalade EXT)** or **Rear Seat Shoulder Belt Opening Bezel Replacement (Tahoe/Yukon/Escalade Rear Seat No. 2)**.
5	Rear Seat Back Cushion Cover and Pad Refer to **Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
6	Rear Seat Armrest Assembly Refer to **Rear Seat Armrest Replacement (Avalanche/Escalade EXT)** or **Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
7	Rear Seat Armrest Mounting Panel Retainer (Qty: 2)
8	Rear Seat Armrest Mounting Panel

REAR SEAT STRUT REPLACEMENT

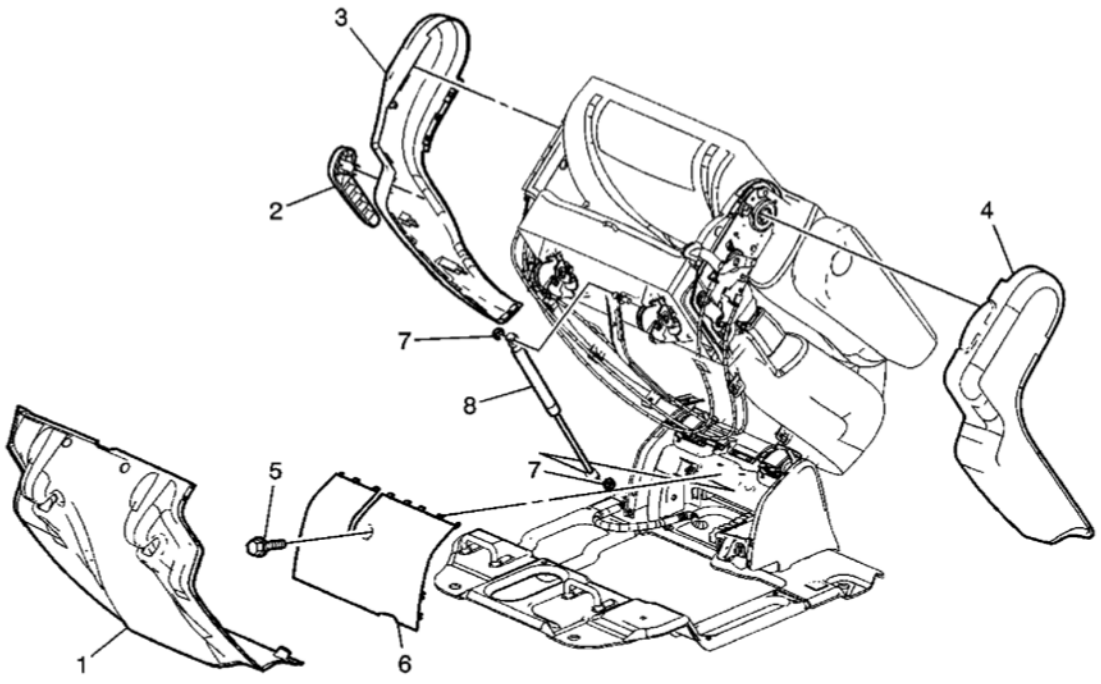


Fig. 29: View Of Rear Seat Strut Assembly & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Strut Replacement

Callout	Component Name

cardiagn.com

1	Rear Seat Cushion Trim Panel Refer to **Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Split Bench)**.
2	Rear Seat Recliner Handle Refer to **Seat Back Recliner Handle Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)**.
3	Rear Seat Recliner Outer Finish Cover Refer to **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Split Bench)**.
4	Rear Seat Recliner Inner Finish Cover Refer to **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Split Bench)**.
5	Rear Seat Riser Finish Cover **Tip:** Tilt the seat assembly up and forward to gain access to remove the screw.
6	Rear Seat Riser Finish Cover
7	Rear Seat Strut Retainer Clip (Qty: 2)
8	Rear Seat Strut Assembly

REAR SEAT HINGE BRACKET REPLACEMENT

cardiagn.com

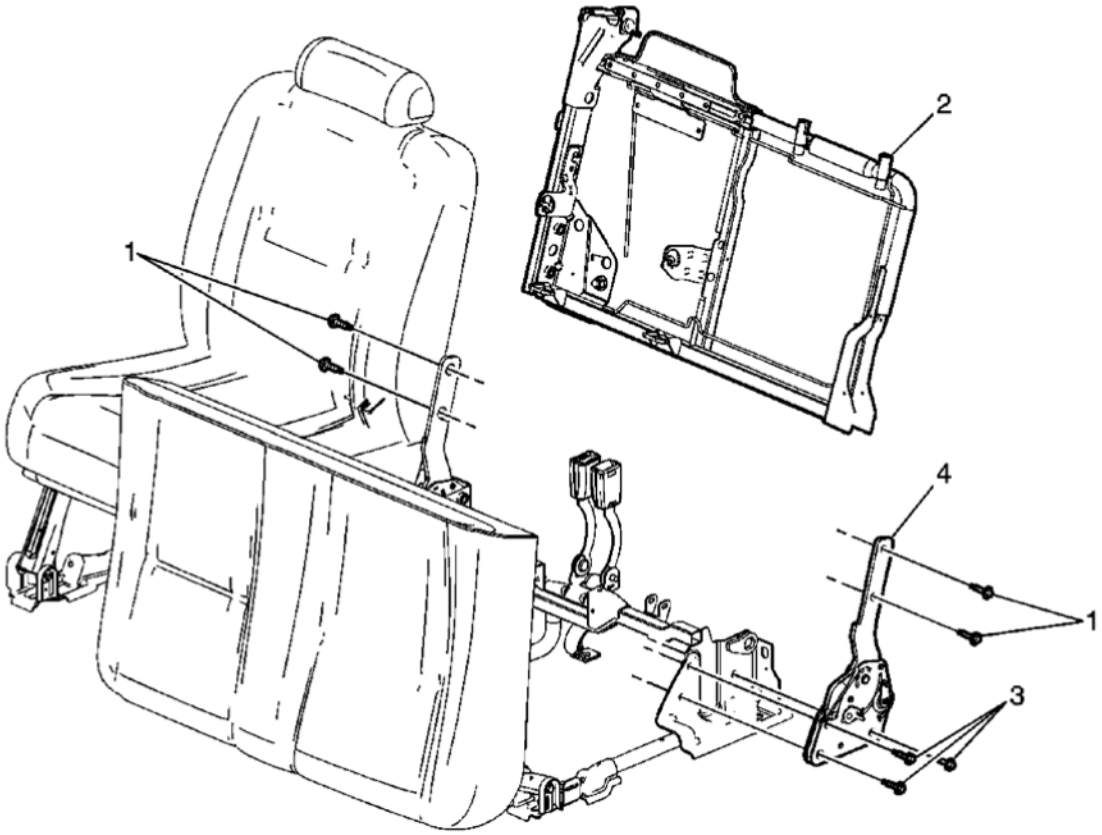


Fig. 30: View Of Rear Seat Hinge Bracket & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Hinge Bracket Replacement

Callout	Component Name
Preliminary Procedure: Remove the rear seat back cushion cover and pad. Refer to **Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Back Bolt (Qty: 4) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
2	Rear Seat Back Cushion Frame Refer to **Front Seat Back Frame Replacement**.
3	Rear Seat Hinge Bracket Bolts (Qty: 3)

cardiagn.com

	Tighten: 9 N.m (80 lb in)
4	Rear Seat Hinge Bracket

REAR SEAT LATCH RELEASE HANDLE REPLACEMENT (REAR NO. 2)

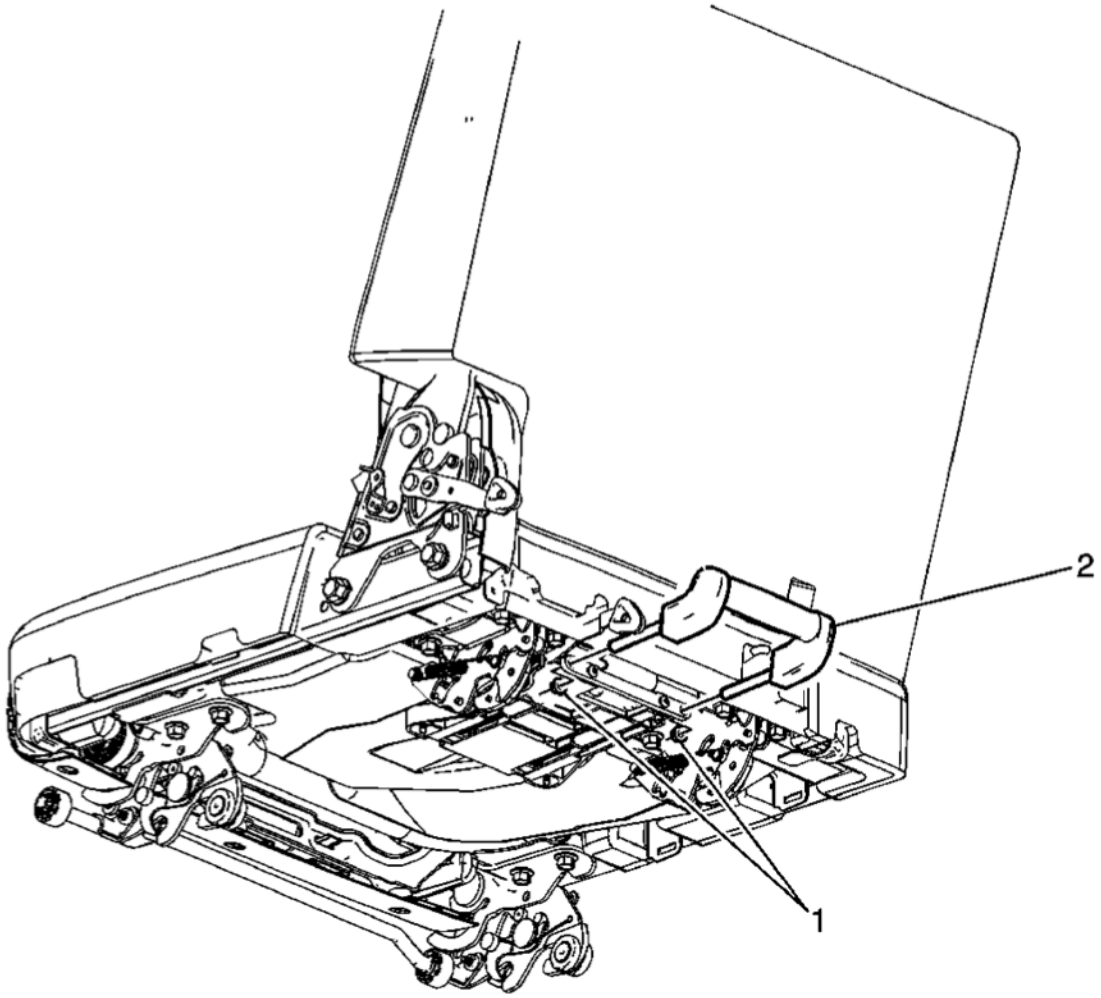


Fig. 31: View Of Rear Seat Latch Release Handle Assembly & Nut
Courtesy of GENERAL MOTORS CORP.

Rear Seat Latch Release Handle Replacement (Rear No. 2)

Callout	Component Name
Preliminary Procedure	
1. Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**.	
2. Remove the lower finish cover. Refer to **Seat Cushion Panel Replacement - Rear No. 2 (AS3)** or **Seat Cushion Panel Replacement - Rear No. 2 (AW2)**.	

cardiagn.com

1	Rear Seat Latch Release Handle Nut (Qty: 2) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
2	Rear Seat Latch Release Handle Assembly

HEAD RESTRAINT REPLACEMENT - REAR NO. 1 (AVALANCHE/ESCALADE EXT)

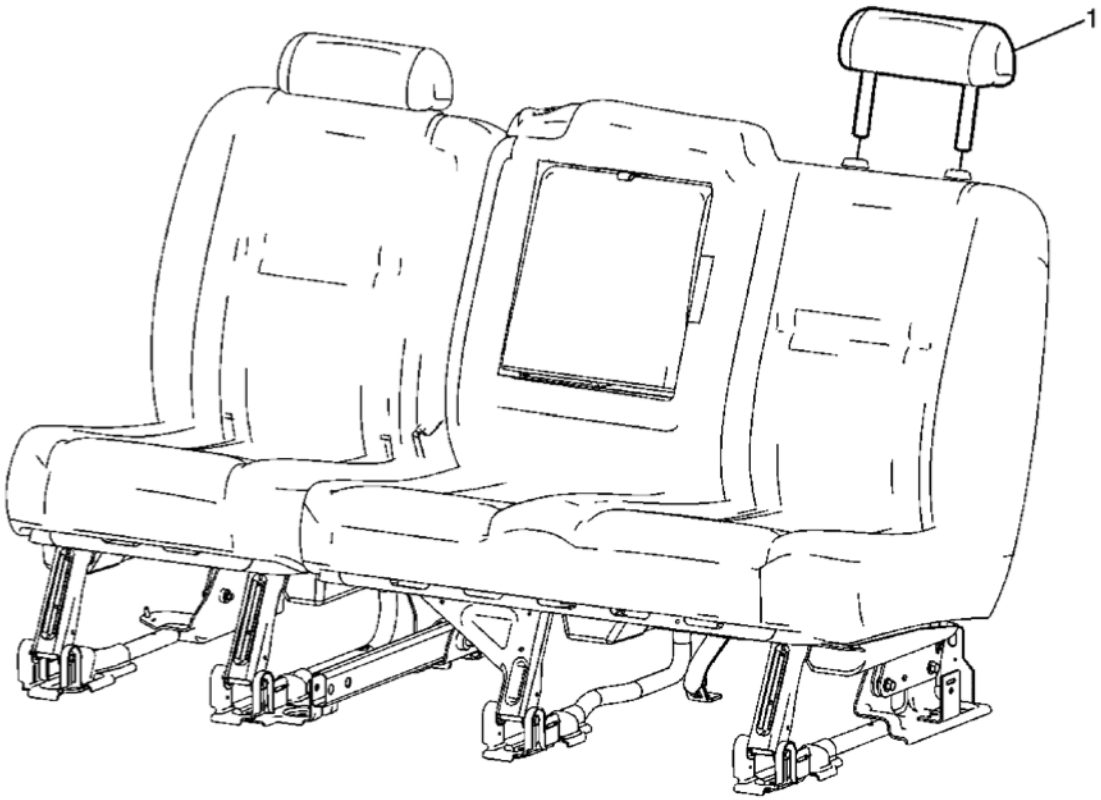


Fig. 32: View Of Rear Seat Head Restraint
Courtesy of GENERAL MOTORS CORP.

Head Restraint Replacement - Rear No. 1 (Avalanche/Escalade EXT)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position.

cardiagn.com

	2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.

HEAD RESTRAINT REPLACEMENT - REAR NO. 1 (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

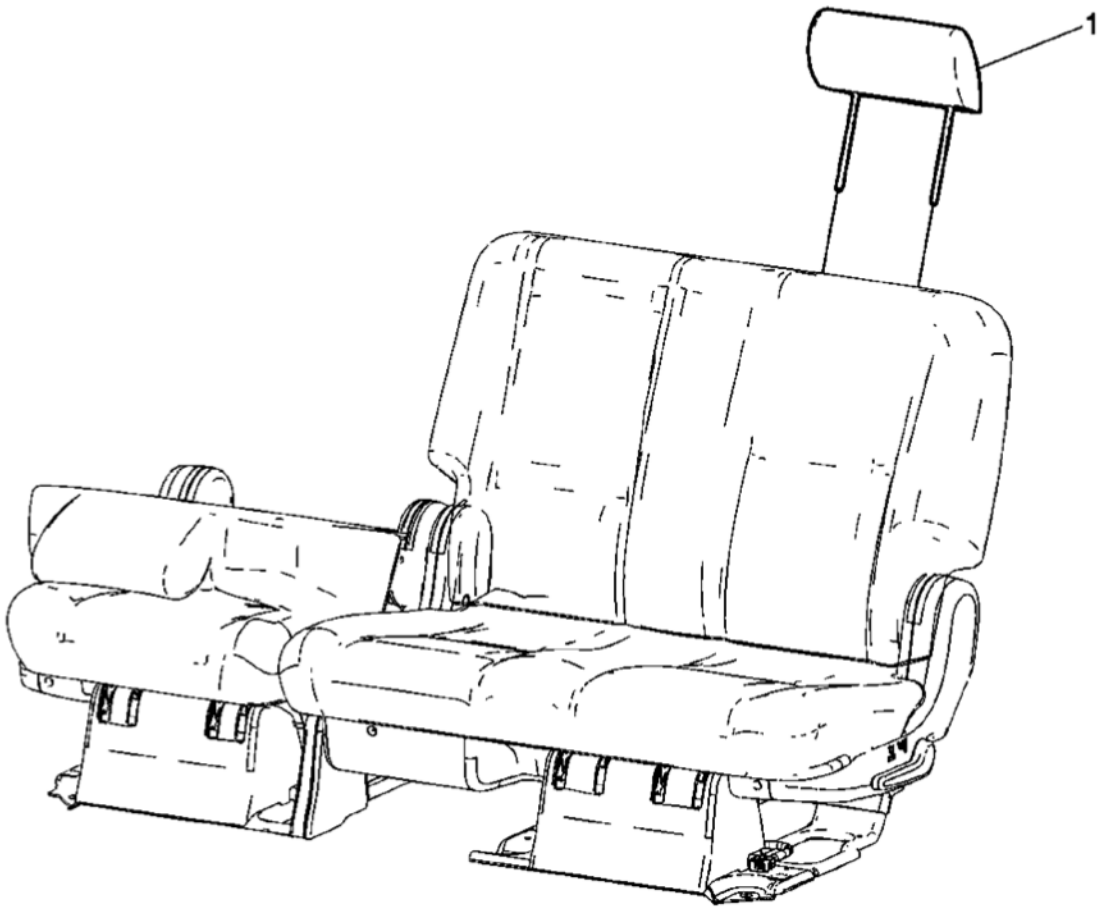


Fig. 33: View Of Rear Seat Head Restraint
Courtesy of GENERAL MOTORS CORP.

Head Restraint Replacement - Rear No. 1 (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head

cardiagn.com

	restraint guide and pull upward to remove.

HEAD RESTRAINT GUIDE REPLACEMENT - REAR NO. 1 (AVALANCHE/ESCALADE EXT)

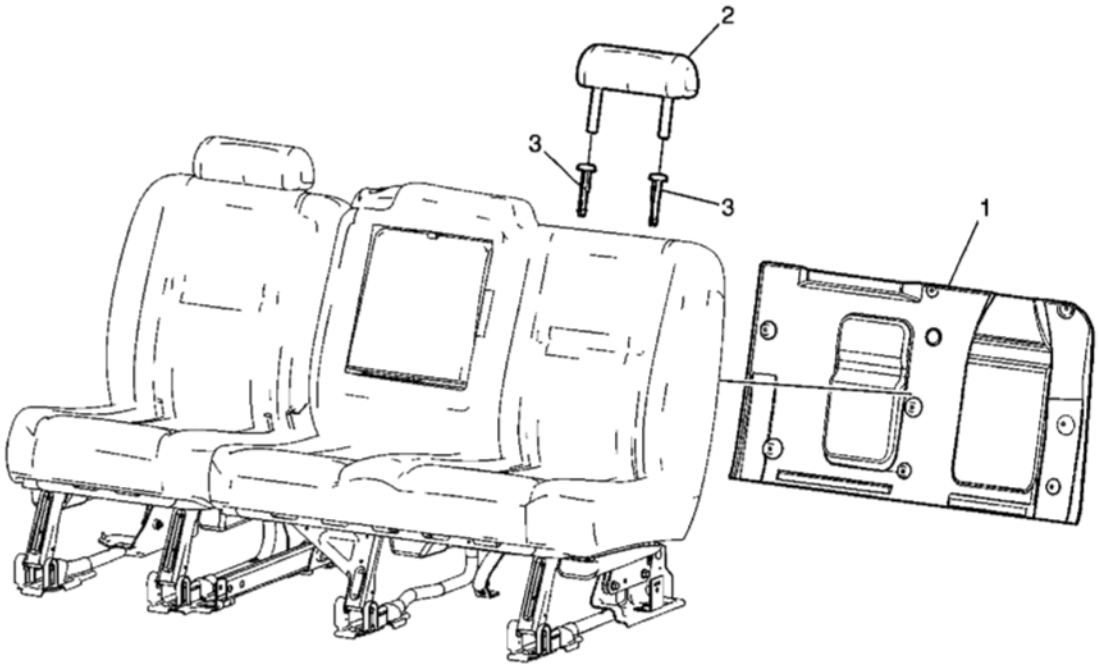


Fig. 34: View Of Rear Seat Head Restraint & Components
Courtesy of GENERAL MOTORS CORP.

Head Restraint Guide Replacement - Rear No. 1 (Avalanche/Escalade EXT)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Back Trim Panel Refer to **Trim Panel Replacement - Rear Seat Back (Avalanche/Escalade EXT)**.
2	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
3	Rear Seat Head Restraint Guides **Tip:** Squeeze the bottom of the head restraint guide together and push up to remove.

HEAD RESTRAINT GUIDE REPLACEMENT - REAR NO. 1 (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

cardiagn.com

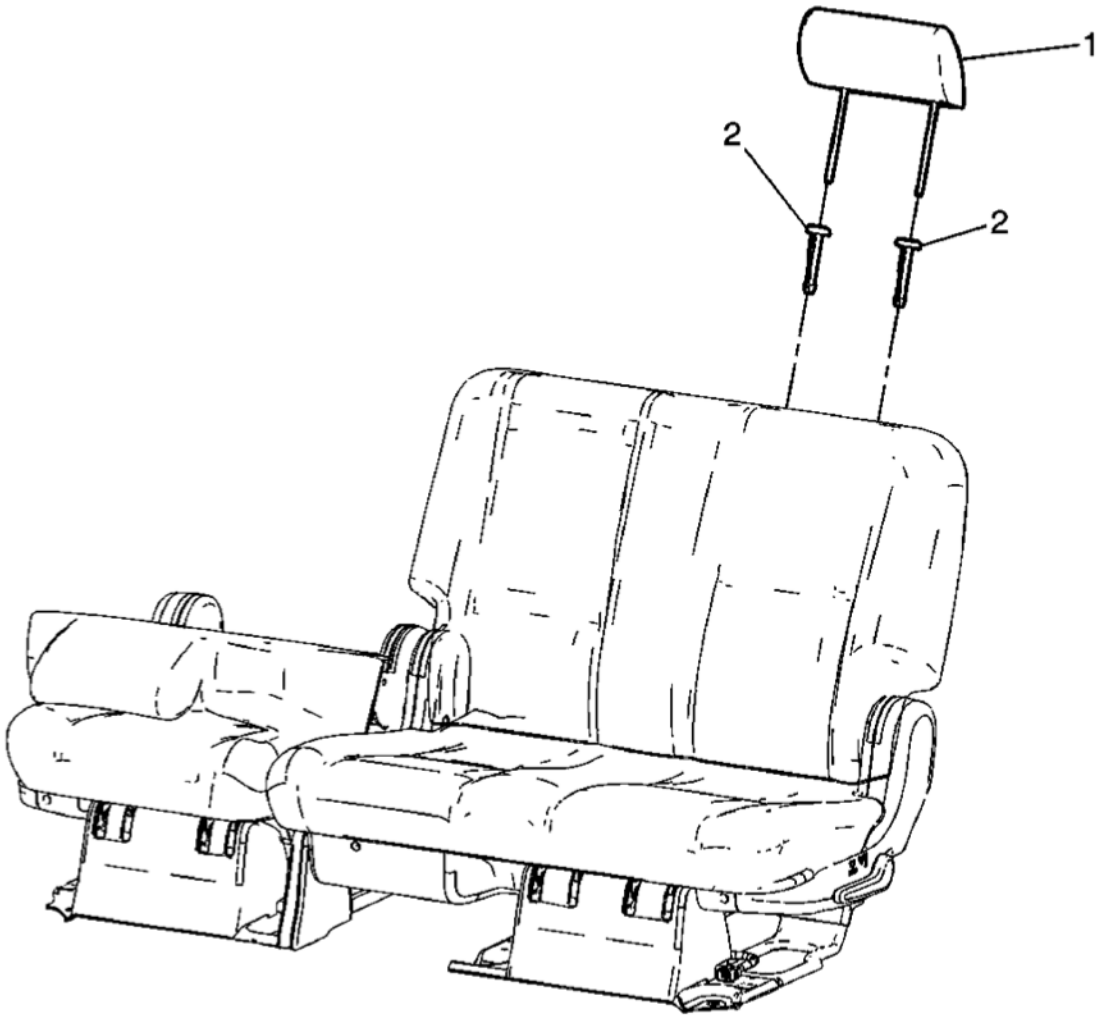


Fig. 35: View Of Rear Seat Head Restraints & Guides
Courtesy of GENERAL MOTORS CORP.

Head Restraint Guide Replacement - Rear No. 1 (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**. **Preliminary Procedure:** Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head

cardiagn.com

	restraint guide and pull upward to remove.
2	Rear Seat Head Restraint Guides **Tip:** 1. Release the j-channel at the bottom of the seat back and pull the seat back cover up enough to gain access to the head restraint guides. 2. Squeeze the bottom of the head restraint guide together and push up to remove.

REAR SEAT RISER REPLACEMENT (AVALANCHE/ESCALADE EXT)

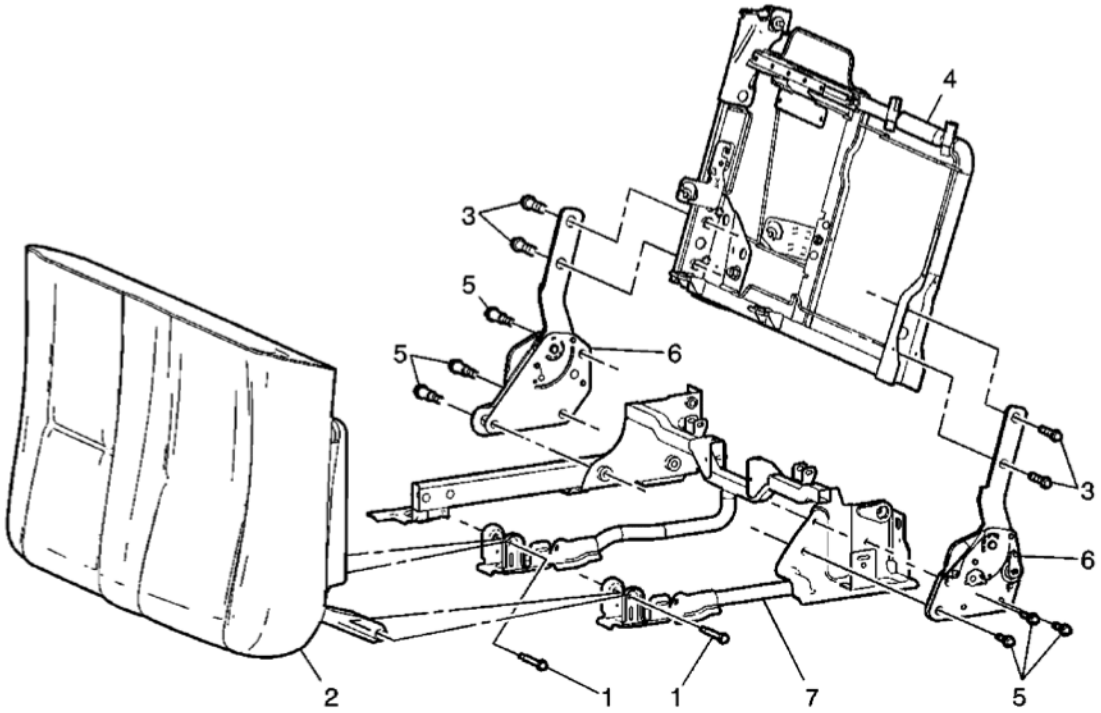


Fig. 36: View Of Rear Seat Riser & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Riser Replacement (Avalanche/Escalade EXT)

Callout	Component Name
NOTE: **Refer to Fastener Notice .** **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**. **Preliminary Procedure** 1. Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat**	

cardiagn.com

Replacement (Tahoe/Yukon/Escalade with Bucket) or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.

2. Remove the rear seat back cushion cover and pad. Refer to **Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.

1	Rear Seat Riser Bolt (Qty: 2) **Tighten:** 9 N.m (80 lb in)
2	Rear Seat Cushion Assembly
3	Rear Seat Back Bolt (Qty: 4) **Tighten:** 9 N.m (80 lb in)
4	Rear Seat Back Cushion Frame Refer to **Front Seat Back Frame Replacement**.
5	Rear Seat Hinge Bracket Bolts (Qty: 6) **Tighten:** 9 N.m (80 lb in)
6	Rear Seat Hinge Bracket (Qty: 2)
7	Rear Seat Riser

REAR SEAT RISER REPLACEMENT (TAHOE/YUKON/ESCALADE WITH BUCKET)

cardiagn.com

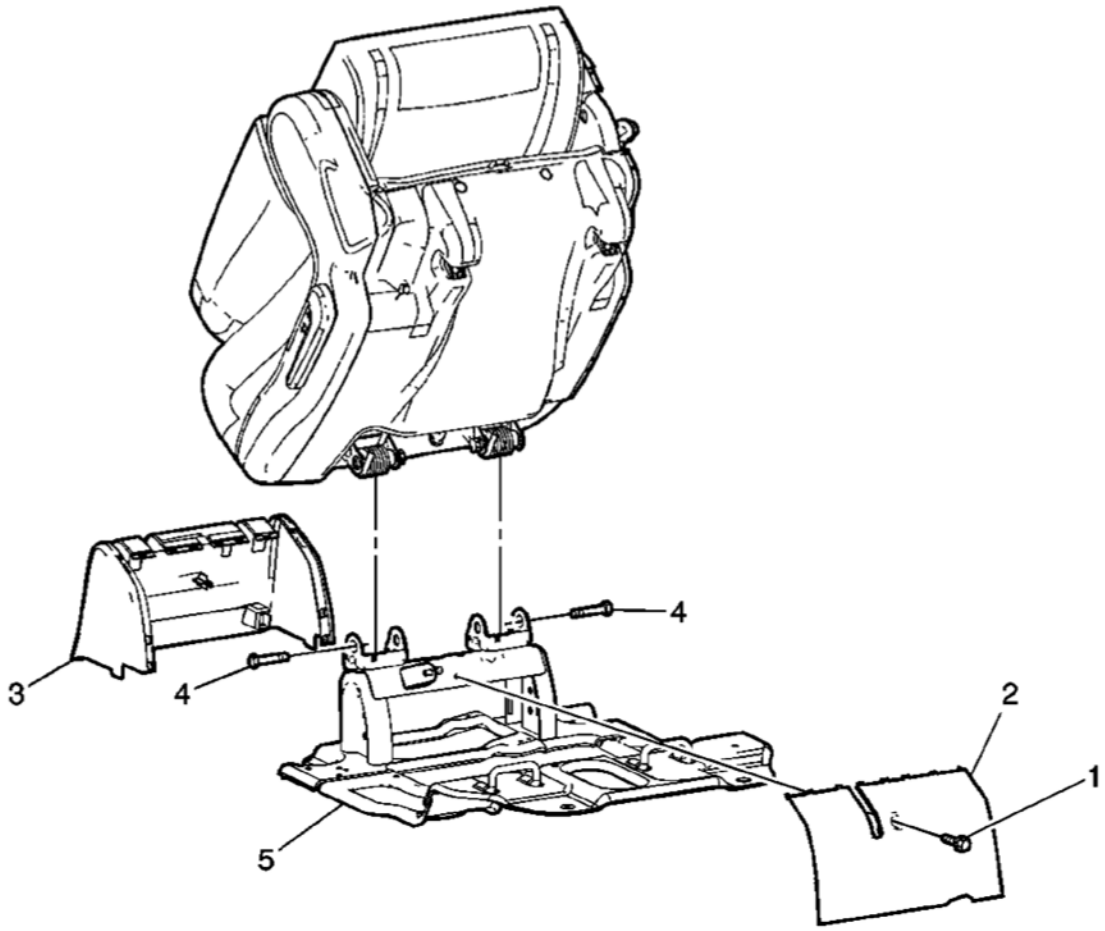


Fig. 37: View Of Rear Seat Riser & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Riser Replacement (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
NOTE: Refer to **Fastener Notice** . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.**Preliminary Procedure:** Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Riser Finish Cover Screw **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Riser Finish Cover
3	Rear Seat Riser Finish Cover
	Rear Seat Riser Bolt (Qty: 2)

cardiagn.com

4	**Tighten:** 9 N.m (80 lb in)
5	Rear Seat Riser **Tip:** Disconnect the seat riser strut from the seat riser.

REAR SEAT RISER REPLACEMENT (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

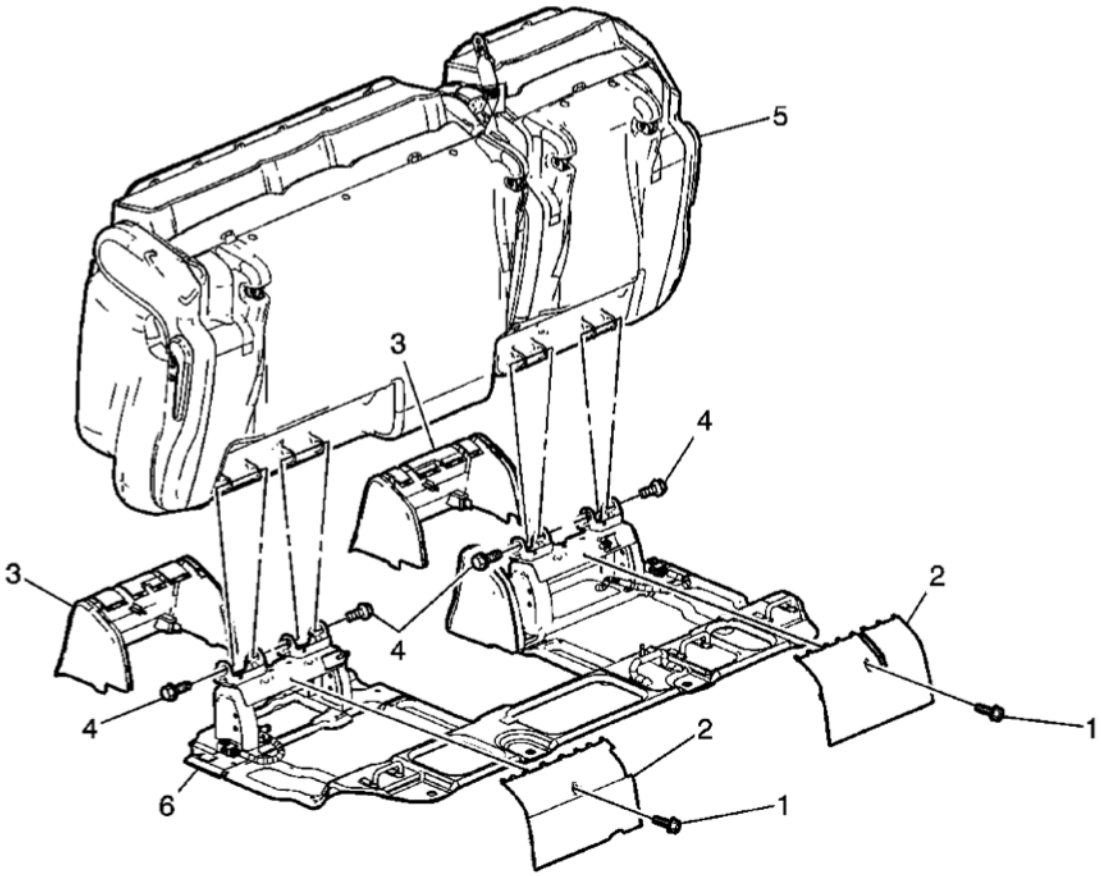


Fig. 38: View Of Rear Seat Riser & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Riser Replacement (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
NOTE: Refer to Fastener Notice . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.**Preliminary Procedure:** Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	

cardiagn.com

1	Rear Seat Riser Finish Cover Screw (Qty: 2) **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Riser Finish Cover (Qty: 2)
3	Rear Seat Riser Finish Cover (Qty: 2)
4	Rear Seat Riser Bolt (Qty: 4) **Tighten:** 9 N.m (80 lb in)
5	Rear Seat Assembly **Tip:** Disconnect the seat riser struts from the seat riser and lift the seats off the riser assembly.
6	Rear Seat Riser

REAR SEAT LATCH REPLACEMENT (SPLIT BENCH)

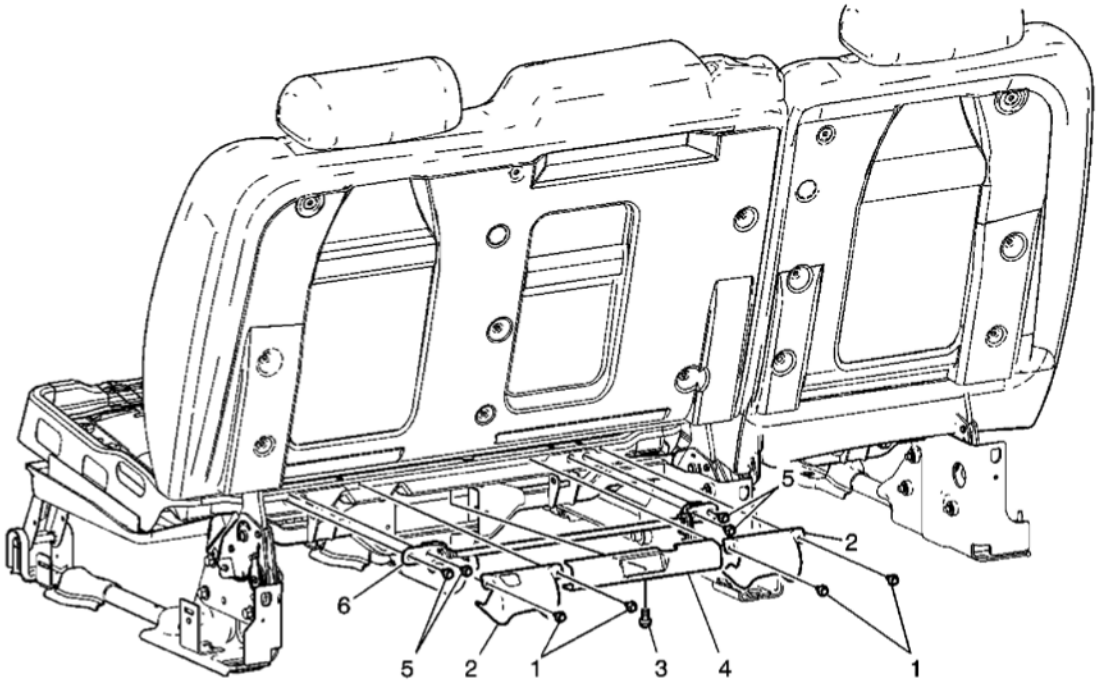


Fig. 39: View Of Rear Seat Latch & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Latch Replacement (Split Bench)

Callout	Component Name
NOTE: **Refer to Fastener Notice .** **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.	

cardiagn.com

1	Rear Seat Latch Cover Bolt (Qty: 4) **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Latch Cover
3	Rear Seat Latch Center Cover Bolt **Tighten:** 2 N.m (18 lb in)
4	Rear Seat Latch Center Cover
5	Rear Seat Latch Bolts (Qty: 4) **Tighten:** 9 N.m (80 lb in)
6	Rear Seat Latch

REAR SEAT CUSHION COVER AND PAD REPLACEMENT (AVALANCHE/ESCALADE EXT)

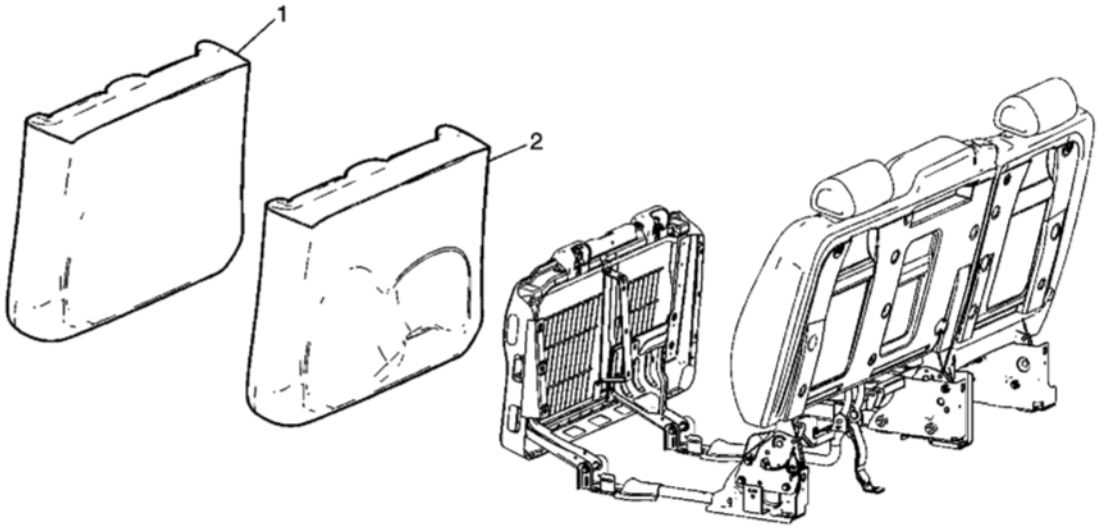


Fig. 40: View Of Rear Seat Cushion Pad & Cover
Courtesy of GENERAL MOTORS CORP.

Rear Seat Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)

Callout	Component Name

Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.

Preliminary Procedure

1. Unlatch the rear seat cushion and fold forward.
2. Remove the rear seat cushion trim panel. Refer to **Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Trim Panel Replacement - Rear No.1**

cardiagn.com

	(Tahoe/Yukon/Escalade with Split Bench).
1	Rear Seat Cushion Cover **Tip:** Remove the seat cushion cover and pad as an assembly and then separate if needed.
2	Rear Seat Cushion Pad

REAR SEAT CUSHION COVER AND PAD REPLACEMENT (TAHOE/YUKON/ESCALADE WITH BUCKET)

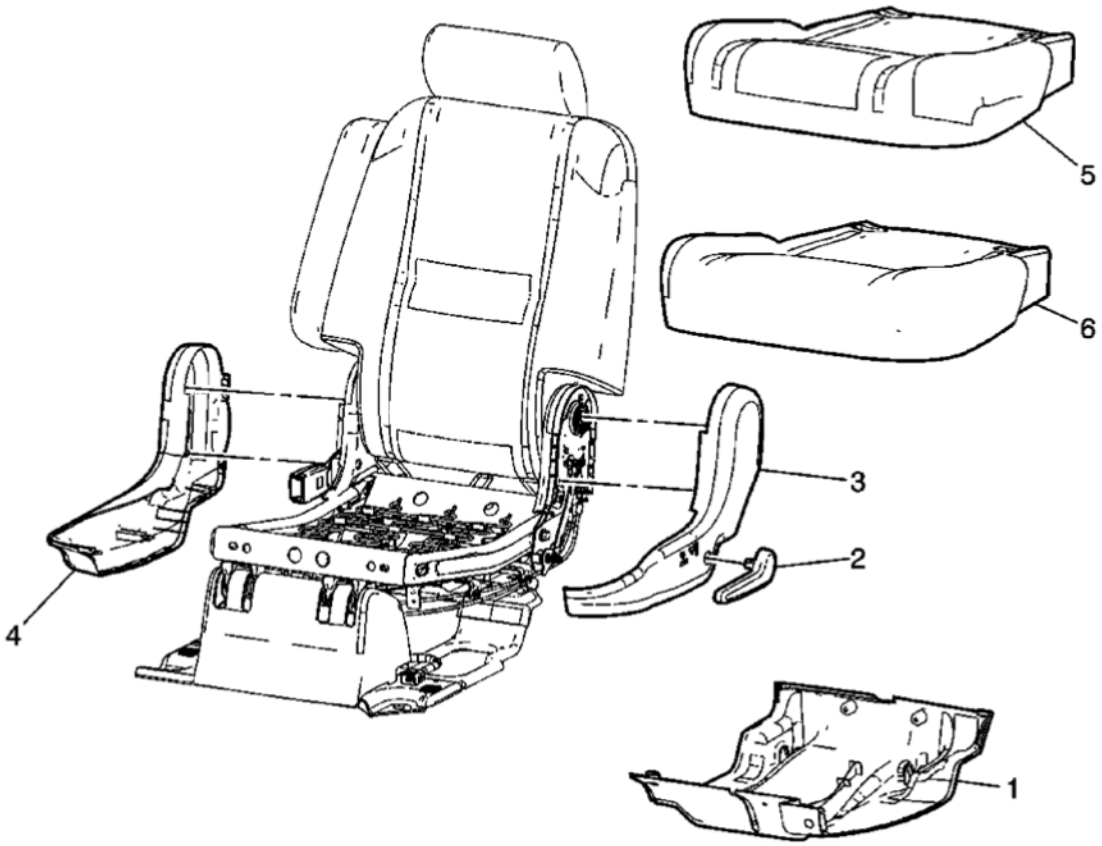


Fig. 41: View Of Rear Seat Cushion Cover, Pad & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Cushion Trim Panel Refer to **Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade**

cardiagn.com

	with Bucket) or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Split Bench)**.
2	Rear Seat Recliner Handle Refer to **Seat Back Recliner Handle Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)**.
3	Rear Seat Recliner Outer Finish Cover Refer to **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Split Bench)**.
4	Rear Seat Recliner Inner Finish Cover Refer to **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Split Bench)**.
5	Rear Seat Cushion Cover **Tip:** 1. Disconnect the seat cushion cover j-channel from the seat cushion frame. 2. Disconnect the electrical connector if equipped with heated seat. 3. Pull the seat cushion cover away from the seat cushion pad to disengage the retaining channel.
6	Rear Seat Cushion Pad

REAR SEAT CUSHION COVER AND PAD REPLACEMENT (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

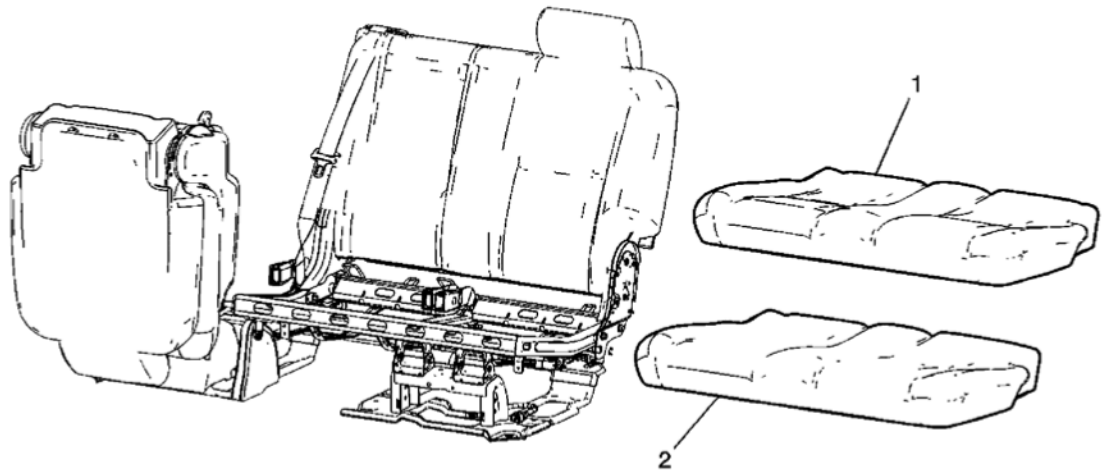


Fig. 42: View Of Rear Seat Cushion Cover & Pad
Courtesy of GENERAL MOTORS CORP.

Rear Seat Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name

cardiagn.com

Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.

Preliminary Procedure

1. Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
2. Remove the recliner handle. Refer to **Seat Back Recliner Handle Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)**.
3. Remove the outer finish cover. Refer to **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Split Bench)**.
4. Remove the inner finish cover. Refer to **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Split Bench)**.
5. Remove the cushion lower trim cover. Refer to **Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Split Bench)**.

1	Rear Seat Cushion Cover **Tip:** 1. Disconnect the seat cushion cover j-channel from the seat cushion frame. 2. Disconnect the electrical connector if equipped with heated seat. 3. Pull the seat cushion cover away from the seat cushion pad to disengage the retaining channel.
2	Rear Seat Cushion Pad

REAR SEAT CUSHION COMPARTMENT REPLACEMENT (TAHOE/YUKON/ESCALADE REAR SEAT NO. 2)

cardiagn.com

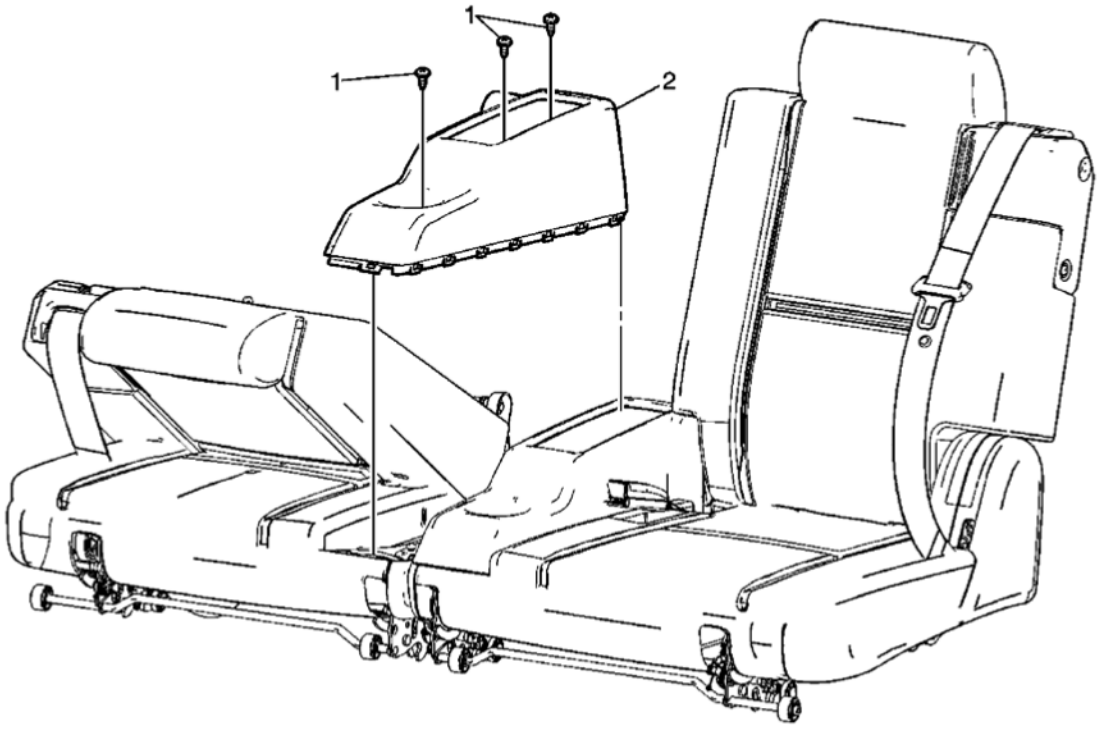


Fig. 43: View Of Rear Seat Cushion Compartment & Screws
Courtesy of GENERAL MOTORS CORP.

Rear Seat Cushion Compartment Replacement (Tahoe/Yukon/Escalade Rear Seat No. 2)

Callout	Component Name
1	Rear Seat Cushion Compartment Screw (Qty: 3) **NOTE:** **Refer to Fastener Notice .** **Tip:** Remove the liner to access the screws. **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Cushion Compartment

REAR SEAT CUSHION FRAME REPLACEMENT (AVALANCHE/ESCALADE EXT)

cardiagn.com

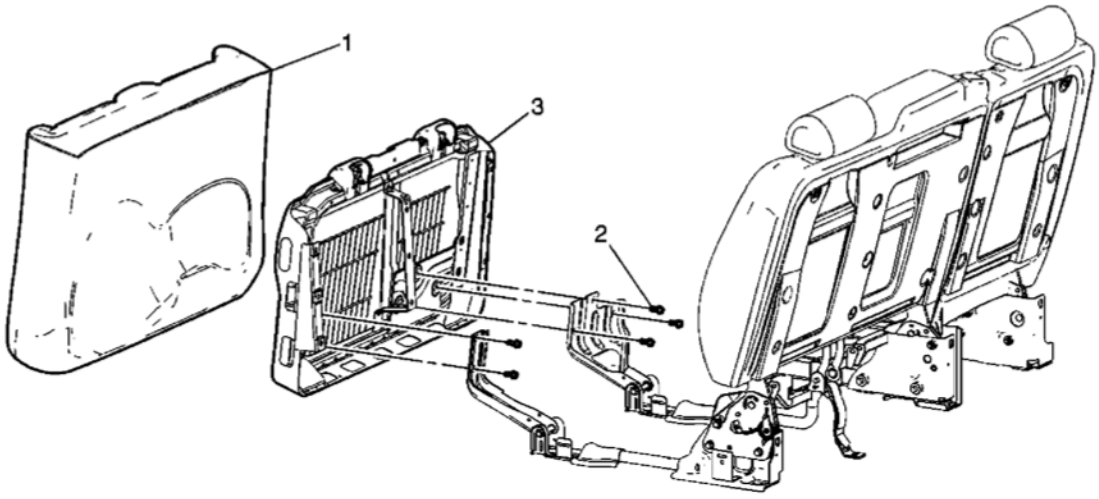


Fig. 44: View Of Rear Seat Cushion Frame & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Cushion Frame Replacement (Avalanche/Escalade EXT)

Callout	Component Name
NOTE: Refer to **Fastener Notice** . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**. **Preliminary Procedure** 1. Unlatch the rear seat cushion and fold forward. 2. Remove the rear seat cushion trim panel. Refer to **Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Cushion Cover and Pad Refer to **Rear Seat Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
2	Rear Seat Riser Front Bracket Bolt (Qty: 5) **Tighten:** 9 N.m (80 lb in)
3	Rear Seat Cushion Frame

REAR SEAT CUSHION FRAME REPLACEMENT (TAHOE/YUKON/ESCALADE WITH BUCKET)

cardiagn.com

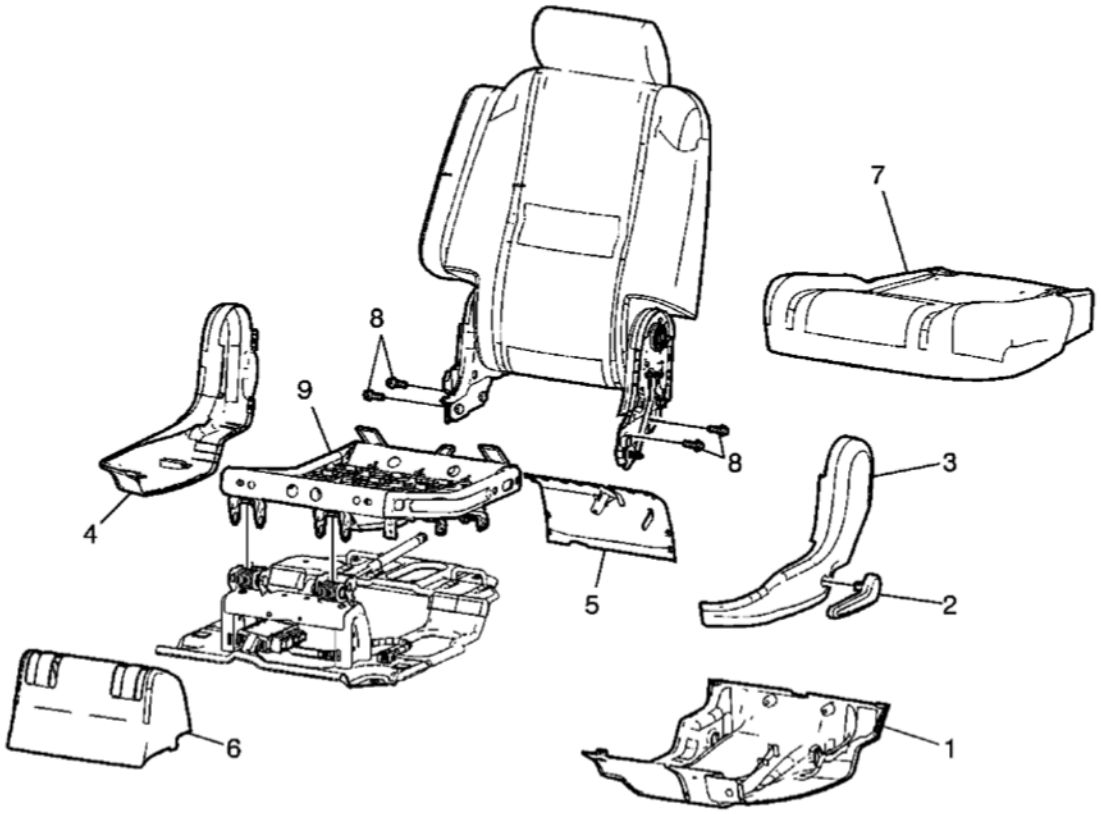


Fig. 45: View Of Rear Seat Cushion Frame & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Cushion Frame Replacement (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
NOTE: Refer to **Fastener Notice** . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.**Preliminary Procedure:** Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Cushion Trim Panel Refer to **Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Split Bench)**.
2	Rear Seat Recliner Handle Refer to **Seat Back Recliner Handle Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)**.
	Rear Seat Recliner Outer Finish Cover

cardiagn.com

3	Refer to **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Split Bench)**.
4	Rear Seat Recliner Inner Finish Cover Refer to **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Split Bench)**.
5	Rear Seat Riser Finish Cover **Tip:** Tilt the seat assembly up and forward to gain access to remove the screw.
6	Rear Seat Riser Finish Cover
7	Rear Seat Cushion Cover and Pad Refer to **Rear Seat Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
8	Rear Seat Recliner Bolts (Qty: 4) **Tighten:** 9 N.m (80 lb in)
9	Rear Seat Cushion Frame **Tip:** Disconnect the seat riser strut from the seat cushion frame.

REAR SEAT CUSHION FRAME REPLACEMENT (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

cardiagn.com

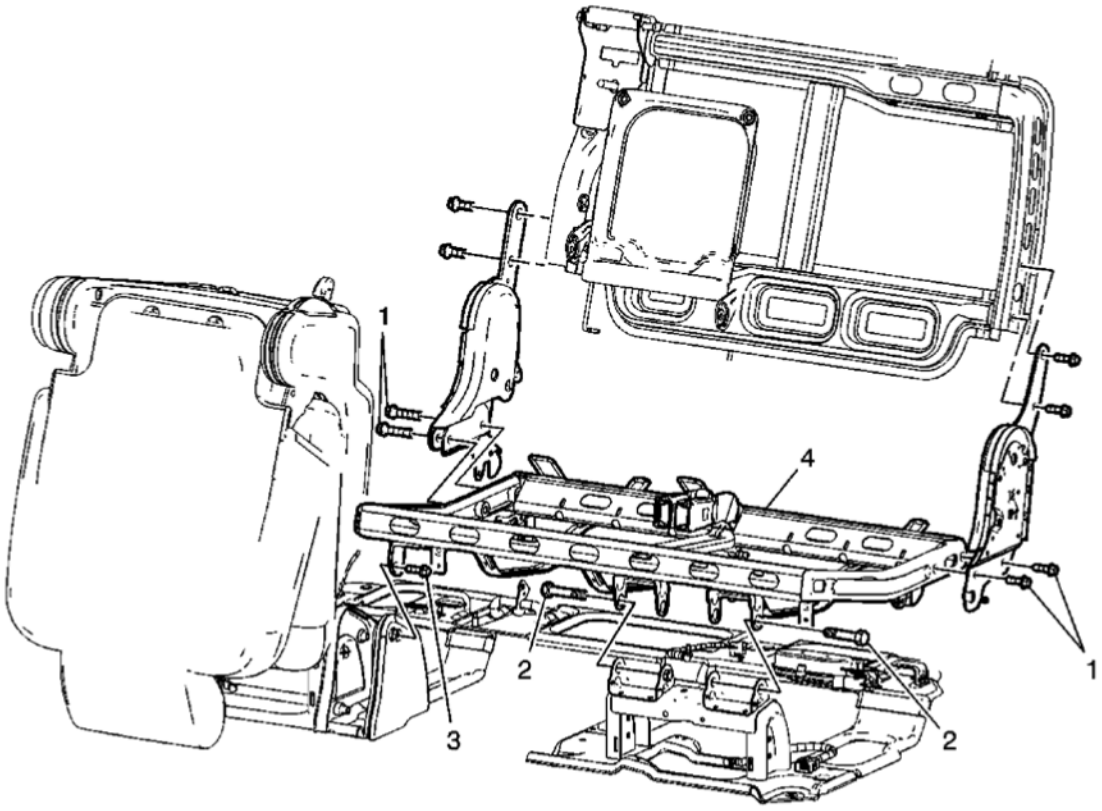


Fig. 46: View Of Rear Seat Cushion Frame & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Cushion Frame Replacement (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name

NOTE:
Refer to **Fastener Notice** .

Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.

Preliminary Procedure

1. Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
2. Remove the recliner handle. Refer to **Seat Back Recliner Handle Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)**.
3. Remove the outer finish cover. Refer to **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Split Bench)**.
4. Remove the inner finish cover. Refer to **Seat Cushion Inner Panel Replacement - Rear**


cardiagn.com

(Tahoe/Yukon/Escalade with Bucket) or **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Split Bench)**.

5. Remove the cushion lower trim cover. Refer to **Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Split Bench)**.
6. Remove the seat cushion cover and pad. Refer to **Rear Seat Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.

1	Rear Seat Recliner Bolt (Qty: 4) **Tighten:** 9 N.m (80 lb in)
2	Rear Seat Riser Outer Bolt (Qty: 2) **Tighten:** 9 N.m (80 lb in)
3	Rear Seat Riser Inner Bolt **Tighten:** 9 N.m (80 lb in)
4	Rear Seat Cushion Frame **Tip:** Disconnect the rear seat strut from the seat cushion frame.

SEAT CUSHION LATCH RELEASE ASSEMBLY REPLACEMENT - REAR (AVALANCHE/ESCALADE EXT)

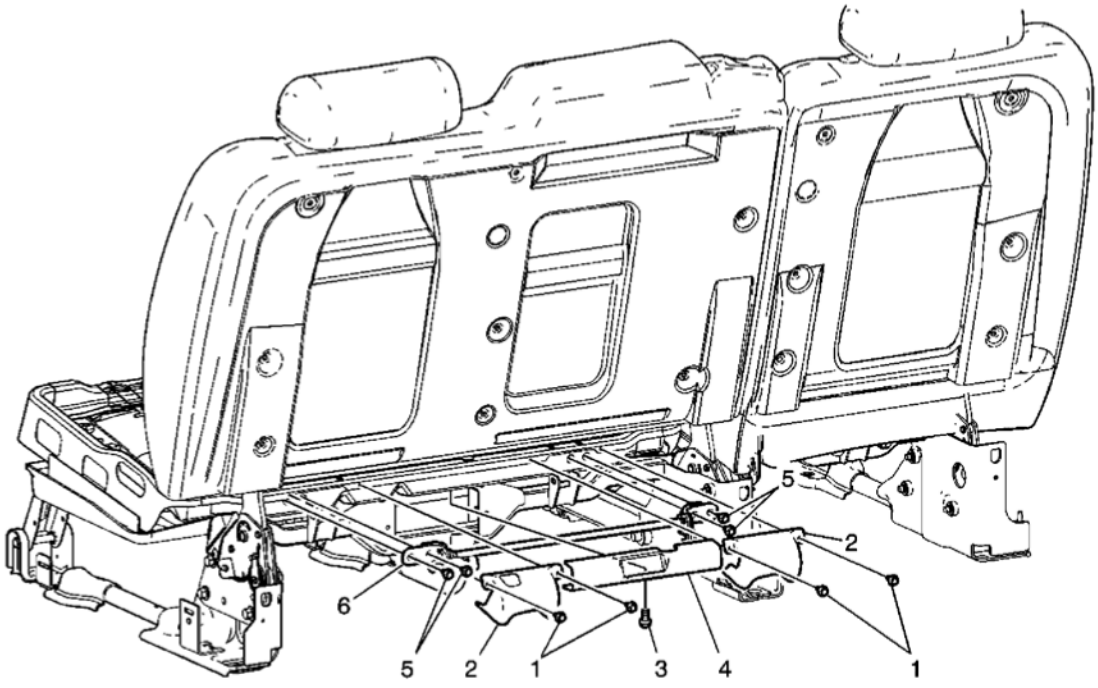

cardiagn.com

Fig. 47: View Of Rear Seat Latch & Components
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Latch Release Assembly Replacement - Rear (Avalanche/Escalade EXT)

Callout	Component Name
NOTE: Refer to Fastener Notice . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Latch Cover Bolt (Qty: 4) **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Latch Cover
3	Rear Seat Latch Center Cover Bolt **Tighten:** 2 N.m (18 lb in)
4	Rear Seat Latch Center Cover
5	Rear Seat Latch Bolts (Qty: 4) **Tighten:** 9 N.m (80 lb in)
6	Rear Seat Latch

SEAT CUSHION INNER PANEL REPLACEMENT - REAR (TAHOE/YUKON/ESCALADE WITH BUCKET)

cardiagn.com

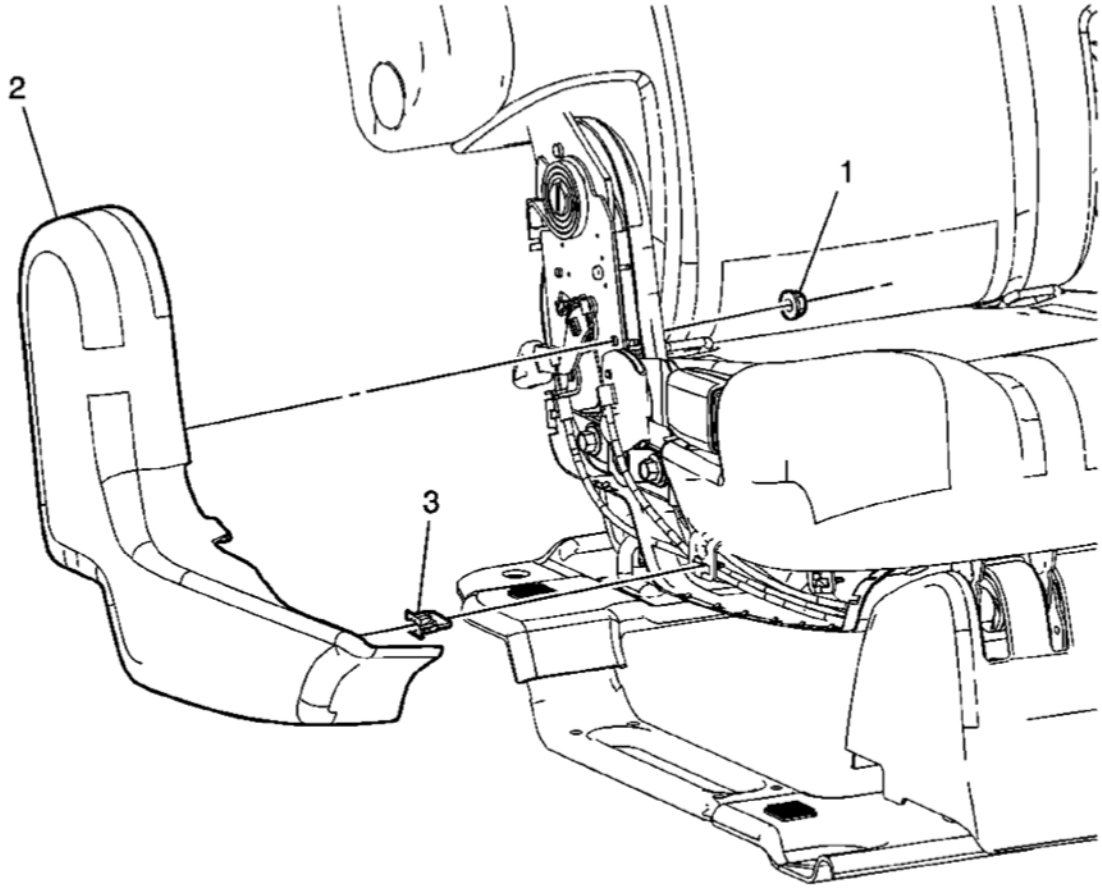


Fig. 48: View Of Rear Seat Recliner Inner Finish Cover & Components
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Recliner Inner Finish Cover Nut **Tip:** The nut is located in a recessed hole on the inboard side of the inner trim panel.
2	Rear Seat Recliner Inner Finish Cover **Tip:** Pull away from seat to disengage the integral retainers.
3	Rear Seat Recliner Inner Finish Cover Retainer Clip (Qty: 2)

SEAT CUSHION INNER PANEL REPLACEMENT - REAR (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

cardiagn.com

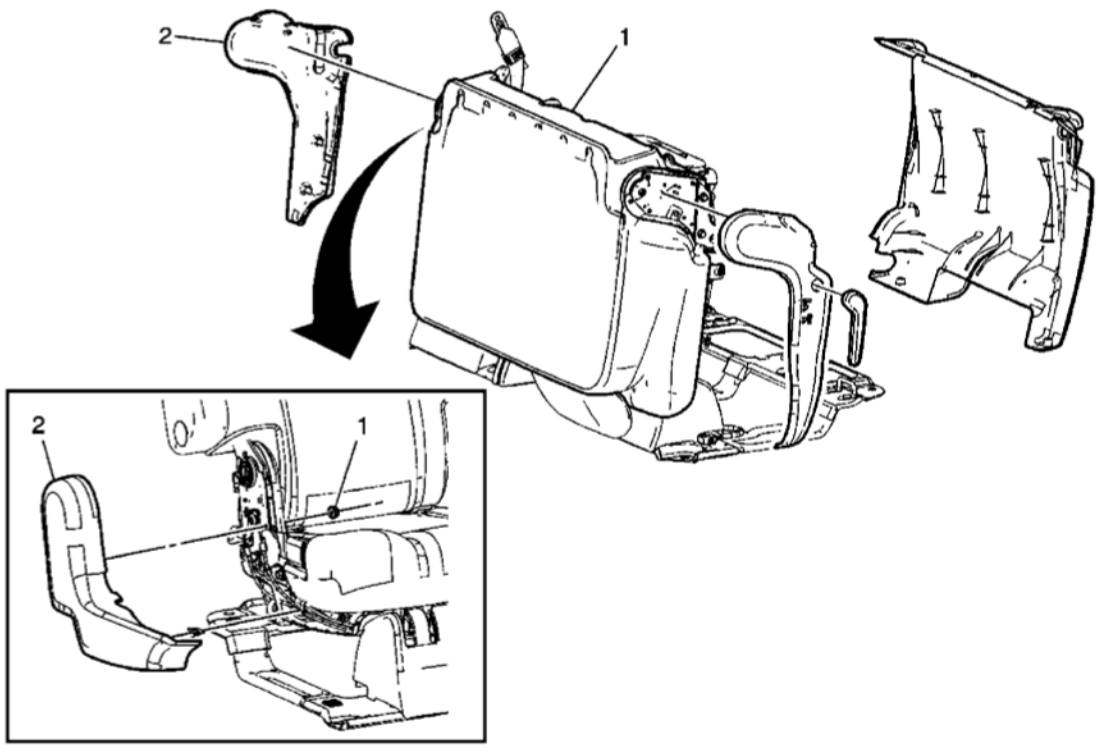


Fig. 49: View Of Rear Seat Recliner Inner Finish Cover & Nut
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Recliner Inner Finish Cover Nut **Tip:** The nut is located in a recessed hole on the inboard side of the inner trim panel.
2	Rear Seat Recliner Inner Finish Cover **Tip:** Pull away from seat to disengage the integral retainers.

SEAT CUSHION OUTER TRIM PANEL REPLACEMENT - REAR SEAT (TAHOE/YUKON/ESCALADE WITH BUCKET)

cardiagn.com

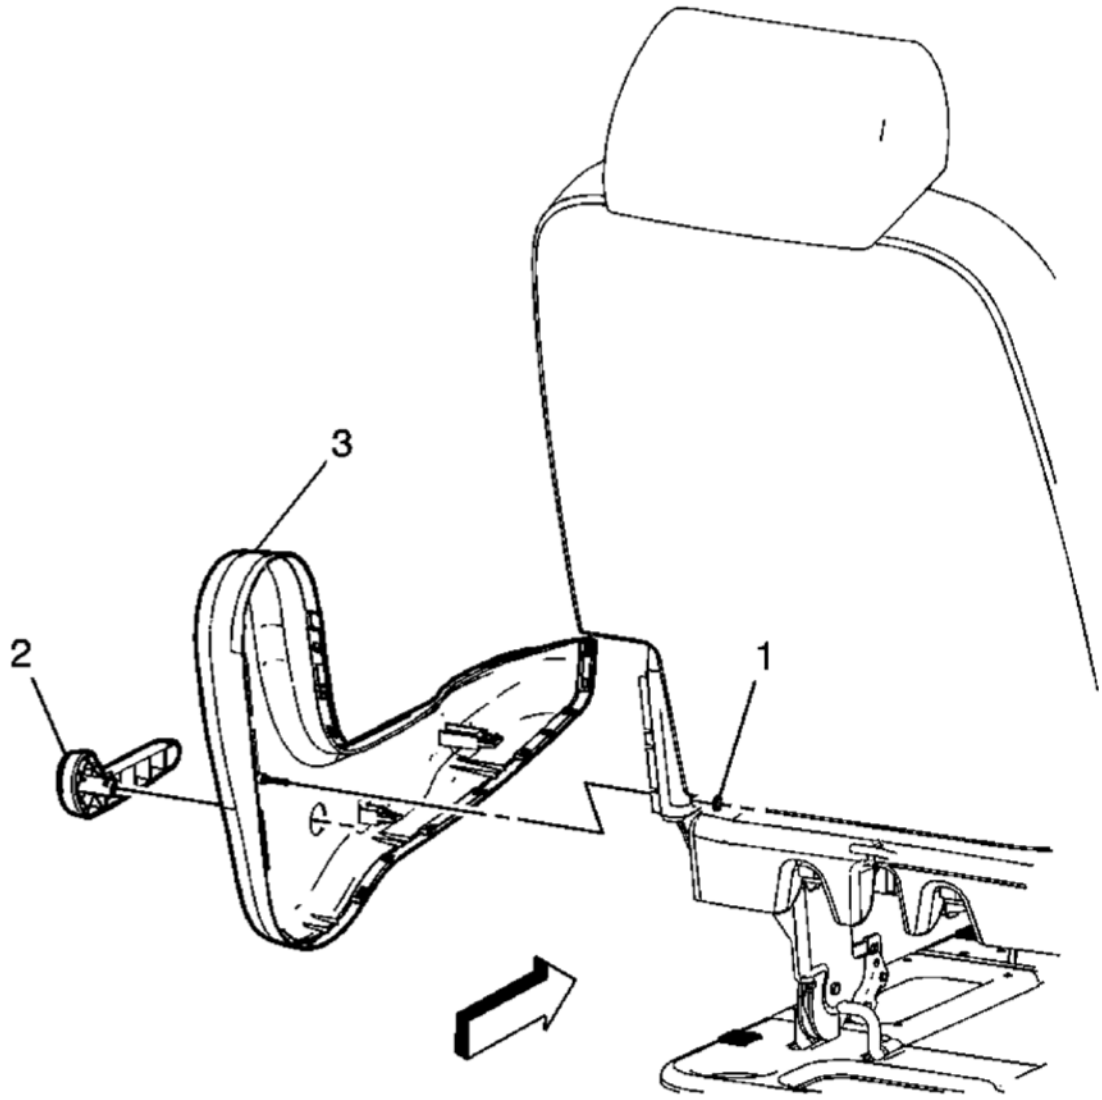


Fig. 50: View Of Rear Seat Cushion Outer Trim Panel & Components
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
1	Rear Seat Cushion Trim Panel Refer to **Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Split Bench)**.
2	Rear Seat Recliner Handle Refer to **Seat Back Recliner Handle Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)**.
3	Rear Seat Recliner Outer Finish Cover

cardiagn.com

SEAT CUSHION OUTER TRIM PANEL REPLACEMENT - REAR SEAT (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

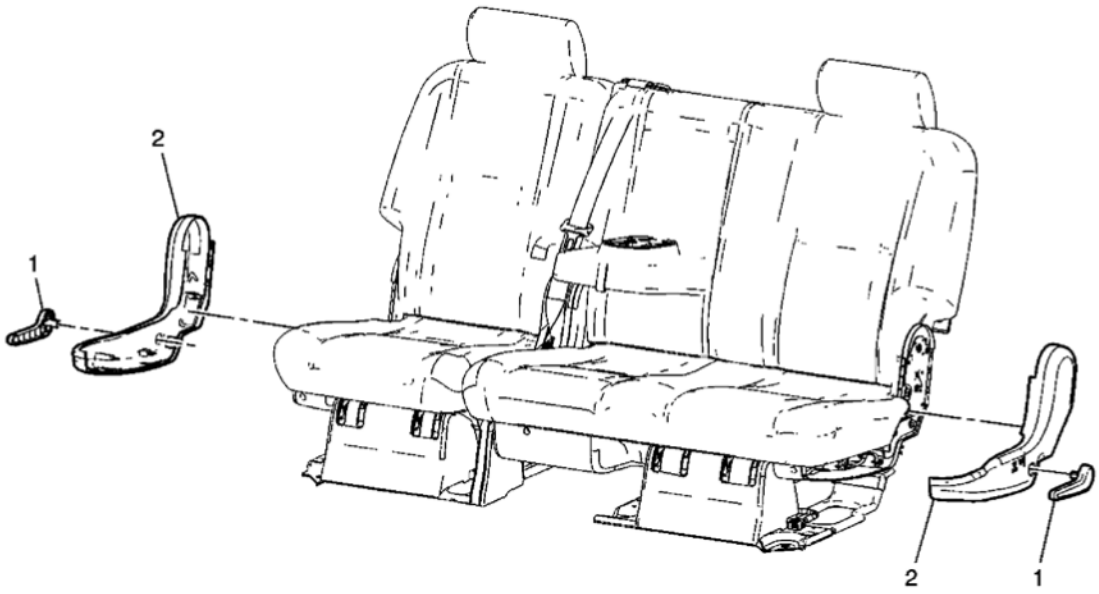


Fig. 51: View Of Rear Seat Cushion Outer Trim Panel & Components
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Recliner Handle **Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the handle.
2	Rear Seat Recliner Outer Finish Cover

SEAT CUSHION TRIM PANEL REPLACEMENT - REAR NO.1 (AVALANCHE/ESCALADE EXT)

cardiagn.com

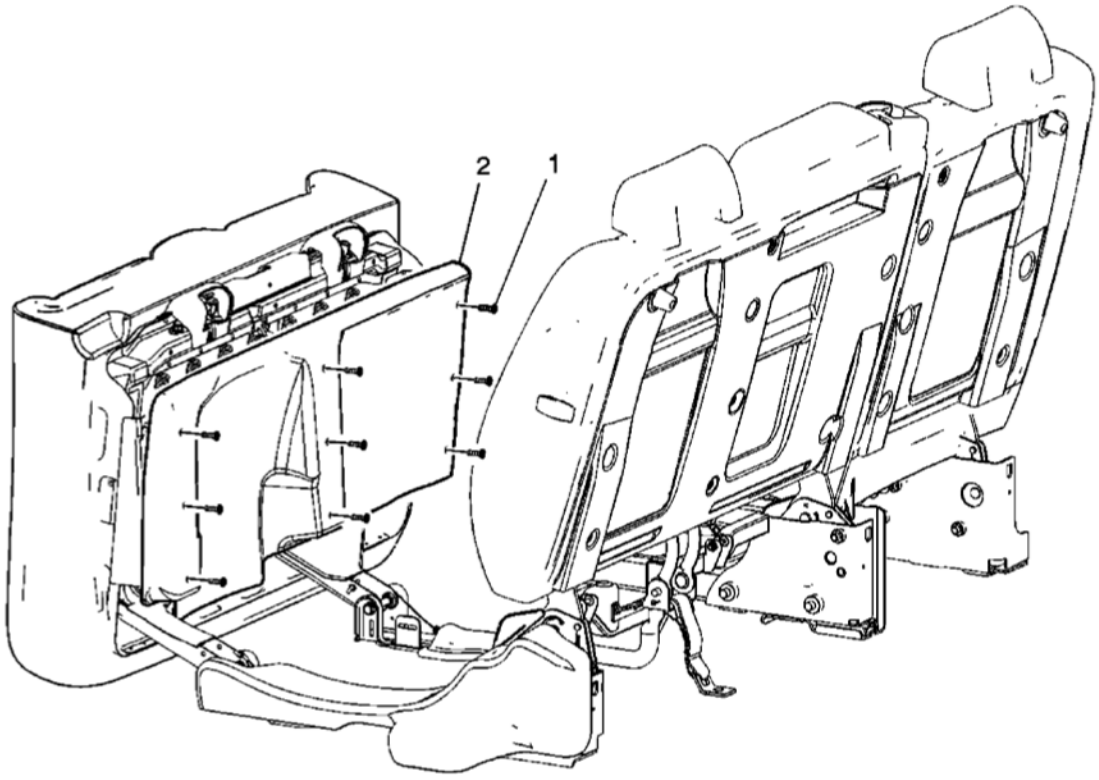


Fig. 52: View Of Rear Seat Cushion Trim Panel & Bolts
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)

Callout	Component Name
Preliminary Procedure: Unlatch the rear seat cushion and fold forward.	
1	Rear Seat Cushion Trim Panel Bolt (Qty: 9) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Cushion Trim Panel

SEAT CUSHION TRIM PANEL REPLACEMENT - REAR NO.1 (TAHOE/YUKON/ESCALADE WITH BUCKET)

cardiagn.com

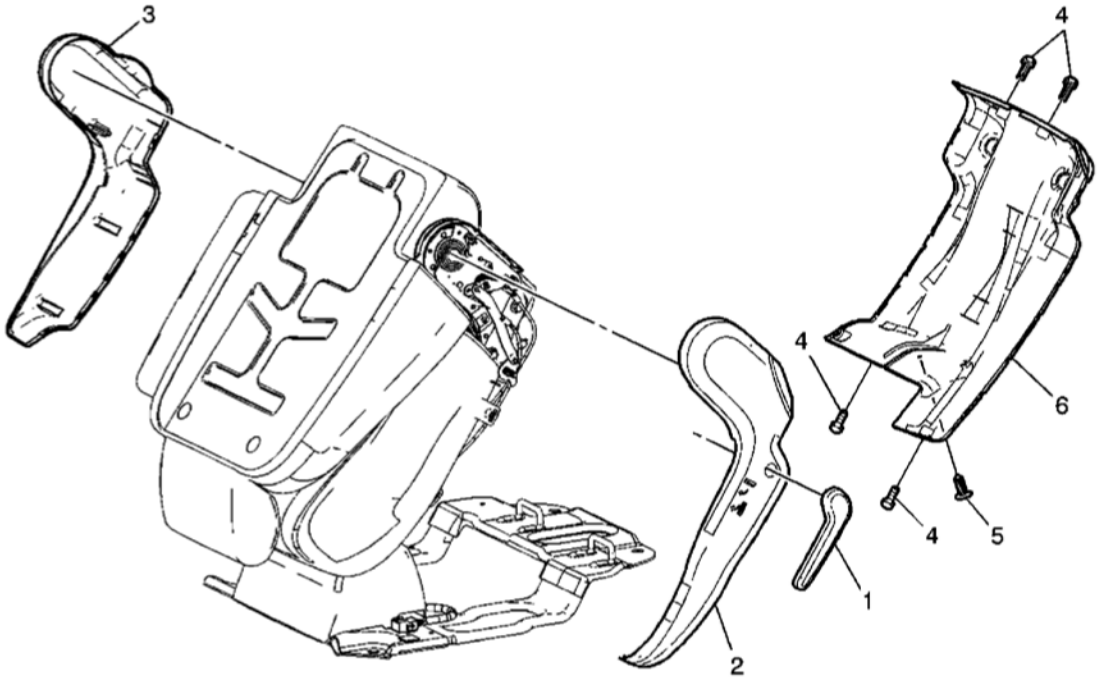


Fig. 53: View Of Rear Seat Cushion Trim Panel & Components
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
NOTE: Refer to **Fastener Notice** . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Recliner Handle **Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the handle.
2	Rear Seat Recliner Outer Finish Cover
3	Rear Seat Recliner Inner Finish Cover
4	Rear Seat Cushion Trim Panel Screws (Qty: 4) **Tighten:** 2 N.m (18 lb in)
5	Rear Seat Cushion Trim Panel Push In Retainer
6	Rear Seat Cushion Trim Panel

SEAT CUSHION TRIM PANEL REPLACEMENT - REAR NO.1 (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

cardiagn.com

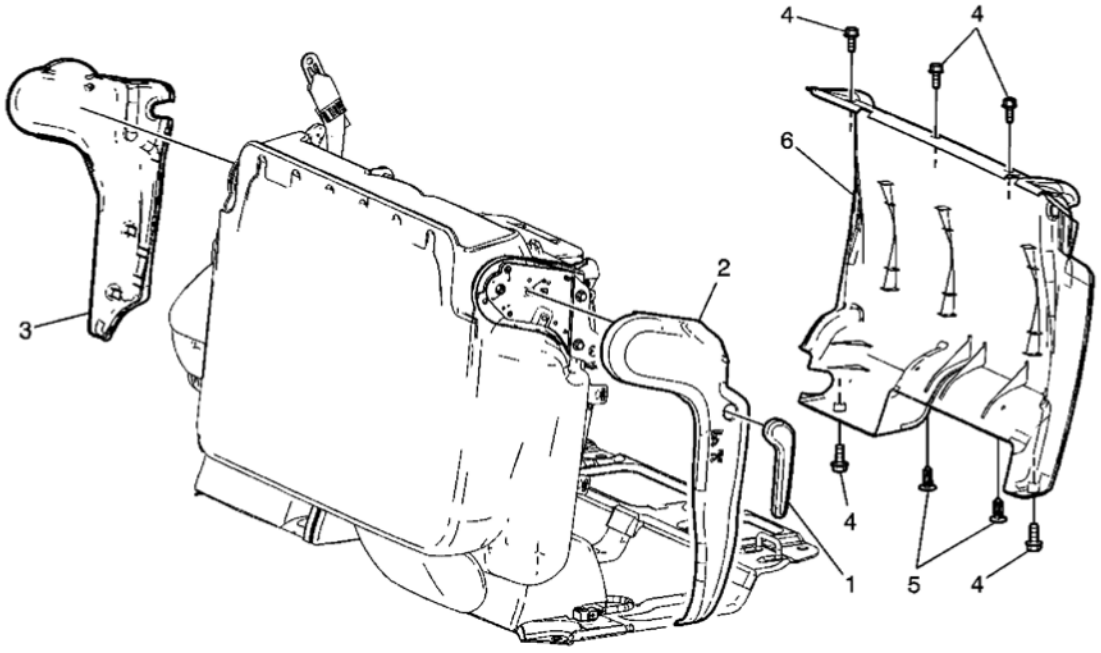


Fig. 54: View Of Rear Seat Cushion Trim Panel & Components
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
NOTE: Refer to **Fastener Notice** . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.**Tip:** The 60 percent seat is shown, the 40 percent seat is similar.	
1	Rear Seat Recliner Handle **Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release the handle.
2	Rear Seat Recliner Outer Finish Cover
3	Rear Seat Recliner Inner Finish Cover
4	Rear Seat Cushion Trim Panel Screws (Qty: 5) **Tighten:** 2 N.m (18 lb in)
5	Rear Seat Cushion Trim Panel Push In Retainer (Qty: 2)
6	Rear Seat Cushion Trim Panel

REAR SEAT BACK CUSHION LATCH CABLE REPLACEMENT (TAHOE/YUKON/ESCALADE WITH BUCKET)

cardiagn.com

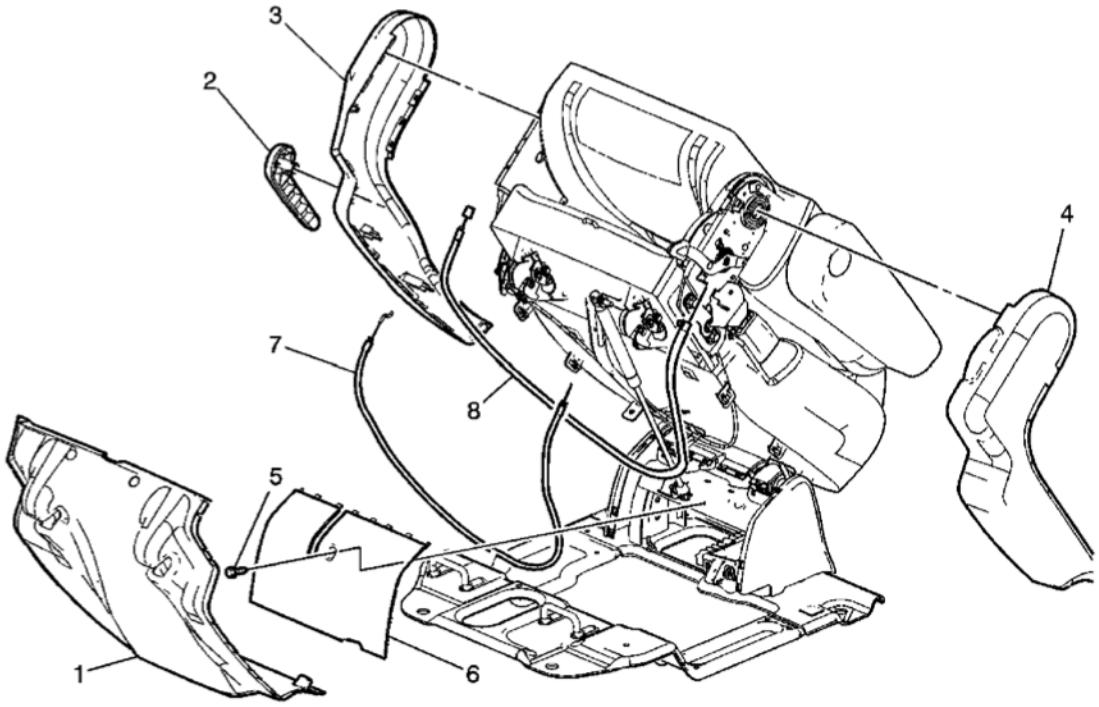


Fig. 55: View Of Rear Seat Back Cushion Latch Cable & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Back Cushion Latch Cable Replacement (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Cushion Trim Panel Refer to **Seat Cushion Trim Panel Replacement - Rear No.1 (Avalanche/Escalade EXT)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Trim Panel Replacement - Rear No.1 (Tahoe/Yukon/Escalade with Split Bench)**.
2	Rear Seat Recliner Handle Refer to **Seat Back Recliner Handle Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)**.
3	Rear Seat Recliner Outer Finish Cover Refer to **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Outer Trim Panel Replacement - Rear Seat (Tahoe/Yukon/Escalade with Split Bench)**.
4	Rear Seat Recliner Inner Finish Cover Refer to **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)** or **Seat Cushion Inner Panel Replacement - Rear (Tahoe/Yukon/Escalade with**

cardiagn.com

	Split Bench).
5	Rear Seat Riser Finish Cover Screw **Tip:** Tilt the seat assembly up and forward to gain access to remove the screw. **NOTE:** **Refer to Fastener Notice .** **Tighten:** 2 N.m (18 lb in)
6	Rear Seat Riser Finish Cover
7	Rear Seat Latch Cable
8	Rear Seat Back Cushion Latch Cable

REAR SEAT SHOULDER BELT OPENING BEZEL REPLACEMENT (AVALANCHE/ESCALADE EXT)

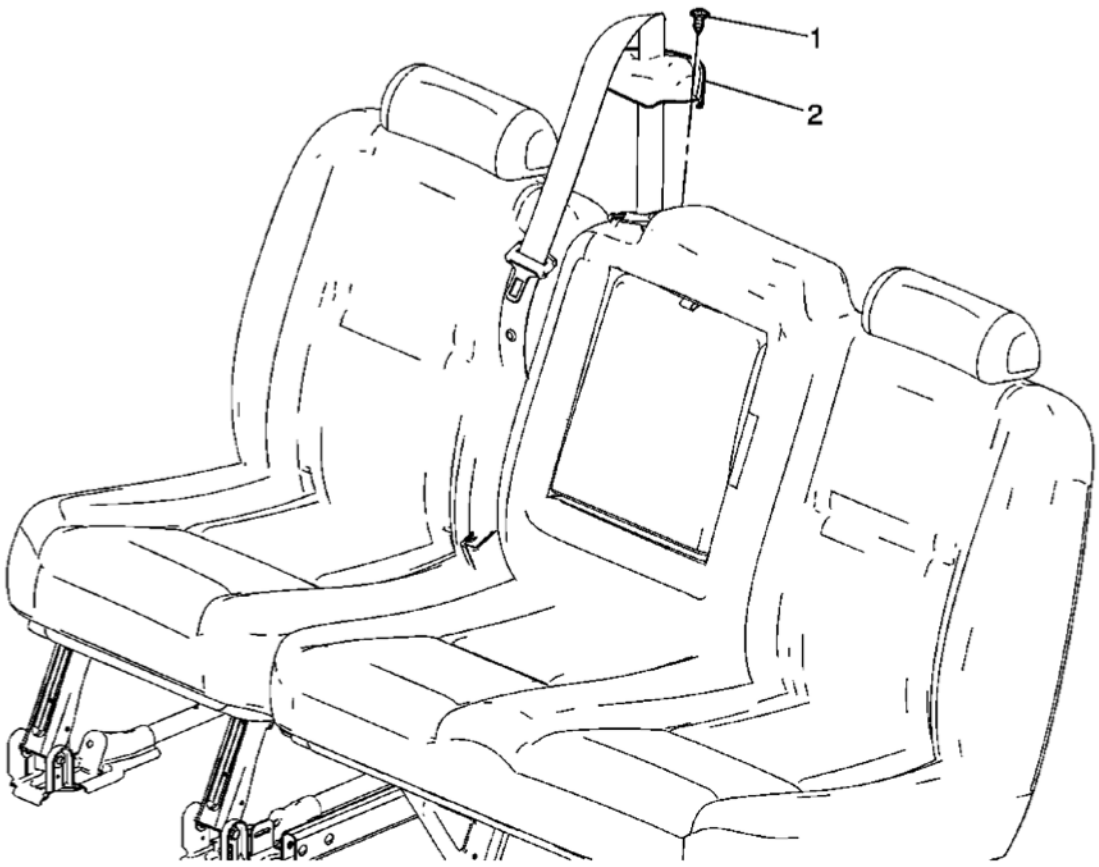


Fig. 56: View Of Rear Seat Shoulder Belt Opening Bezel & Screw
Courtesy of GENERAL MOTORS CORP.

Rear Seat Shoulder Belt Opening Bezel Replacement (Avalanche/Escalade EXT)

cardiagn.com

Callout	Component Name
1	Rear Seat Shoulder Belt Opening Bezel Screw **NOTE:** **Refer to Fastener Notice .** **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Shoulder Belt Opening Bezel **Tip:** Slide the bezel along the seat belt and remove with belt assembly.

REAR SEAT SHOULDER BELT OPENING BEZEL REPLACEMENT (TAHOE/YUKON/ESCALADE REAR SEAT NO. 2)

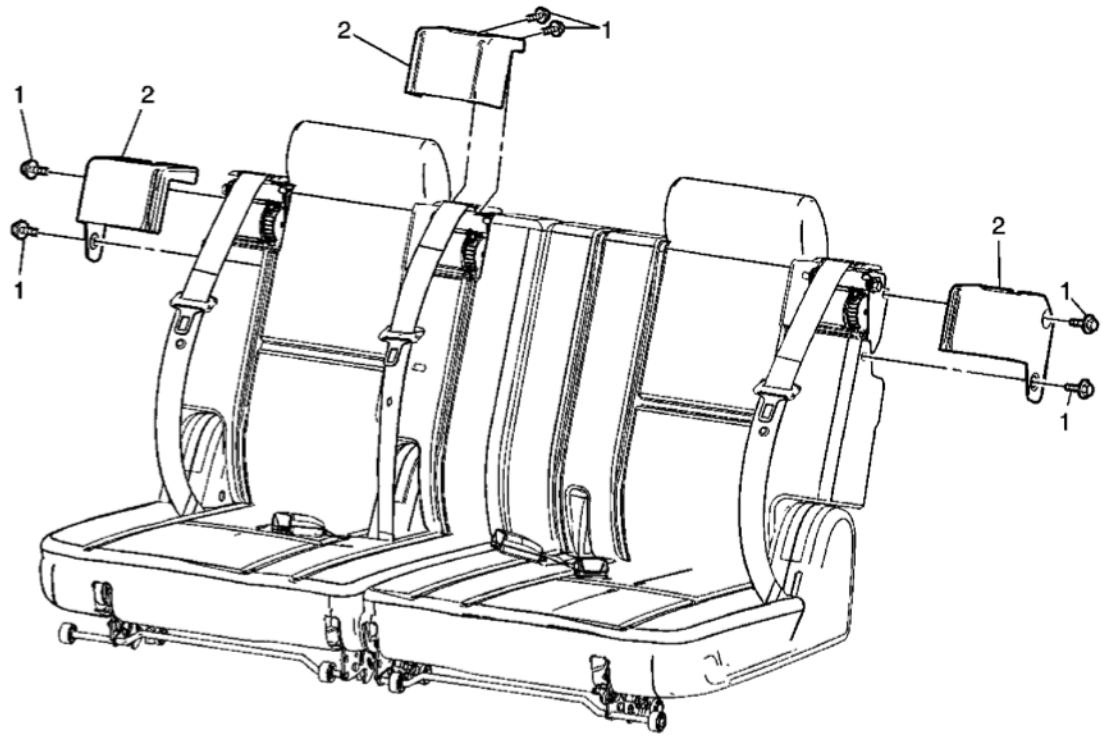


Fig. 57: View Of Rear Seat Shoulder Belt Opening Bezel & Screws
Courtesy of GENERAL MOTORS CORP.

Rear Seat Shoulder Belt Opening Bezel Replacement (Tahoe/Yukon/Escalade Rear Seat No. 2)

Callout	Component Name
	NOTE: **Refer to Fastener Notice .** **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.

cardiagn.com

1	Rear Seat Shoulder Belt Bezel Screw (Qty: 2) **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Shoulder Belt Bezel **Tip:** Slide the belt out through the slit in the back of the bezel.

REAR SEAT BACK CUSHION COVER AND PAD REPLACEMENT (AVALANCHE/ESCALADE EXT)

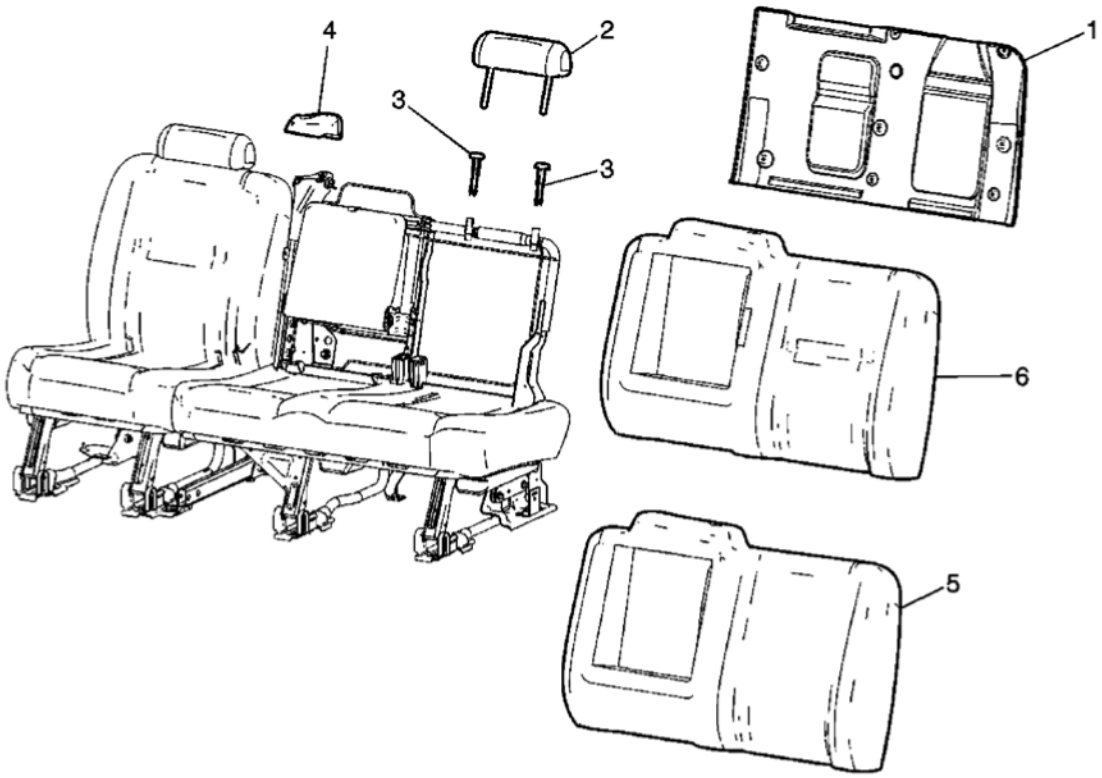


Fig. 58: View Of Rear Seat Back Cushion Cover, Pad & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Back Trim Panel Refer to **Trim Panel Replacement - Rear Seat Back (Avalanche/Escalade EXT)**.
	Rear Seat Head Restraint **Tip:**

cardiagn.com

2	1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
3	Rear Seat Head Restraint Guides **Tip:** Squeeze the bottom of the head restraint guide together and push up to remove.
4	Rear Seat Shoulder Belt Opening Bezel Refer to **Rear Seat Shoulder Belt Opening Bezel Replacement (Avalanche/Escalade EXT)** or **Rear Seat Shoulder Belt Opening Bezel Replacement (Tahoe/Yukon/Escalade Rear Seat No. 2)**.
5	Rear Seat Back Cushion Cover **Tip:** Remove the seat back cushion cover and pad as an assembly then separate as necessary.
6	Rear Seat Back Cushion Pad

REAR SEAT BACK CUSHION COVER AND PAD REPLACEMENT (TAHOE/YUKON/ESCALADE WITH BUCKET)

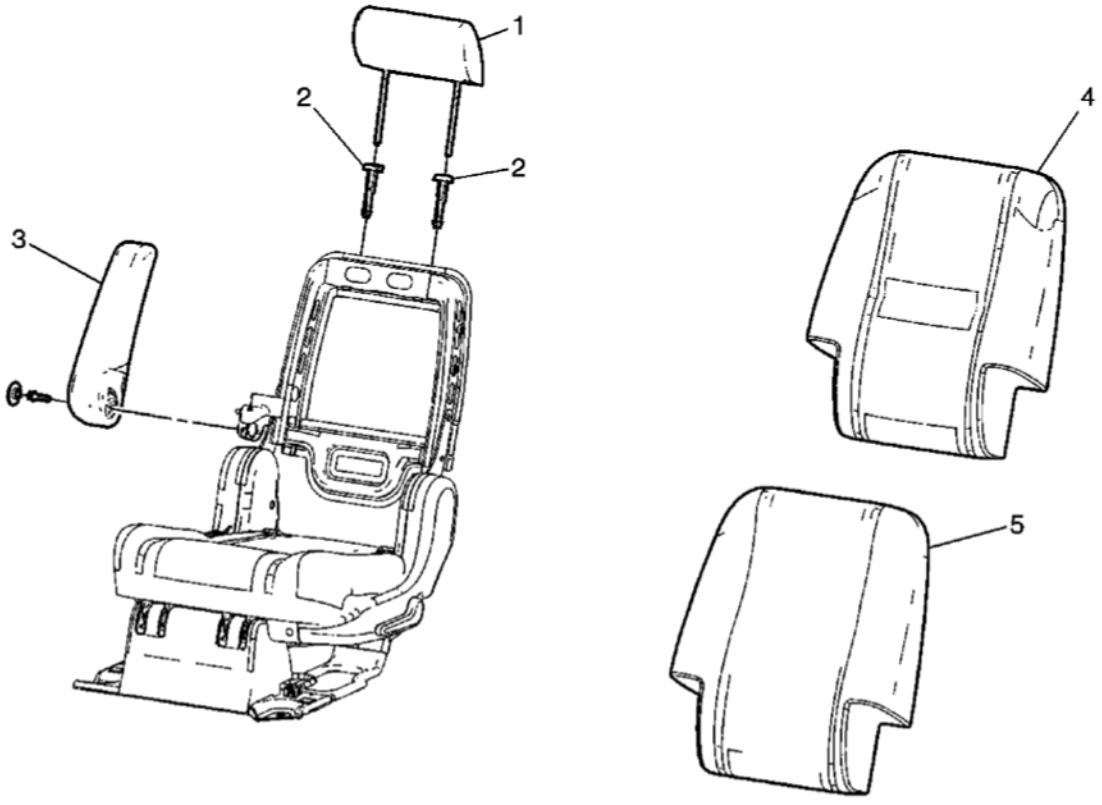


Fig. 59: View Of Rear Seat Back Cushion Cover, Pad & Components
Courtesy of GENERAL MOTORS CORP.

cardiagn.com

Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
2	Rear Seat Head Restraint Guides **Tip:** Squeeze the bottom of the head restraint guide together and push up to remove.
3	Rear Seat Armrest Refer to **Rear Seat Armrest Replacement (Avalanche/Escalade EXT)** or **Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
4	Rear Seat Back Cushion Cover **Tip:** 1. Disconnect the seat back cushion cover j-channel from the seat cushion frame. 2. Disconnect the electrical connector if equipped with heated seat. 3. Pull the seat back cushion cover away from the seat cushion pad to disengage the retaining channel.
5	Rear Seat Back Cushion Pad

REAR SEAT BACK CUSHION COVER AND PAD REPLACEMENT (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

cardiagn.com

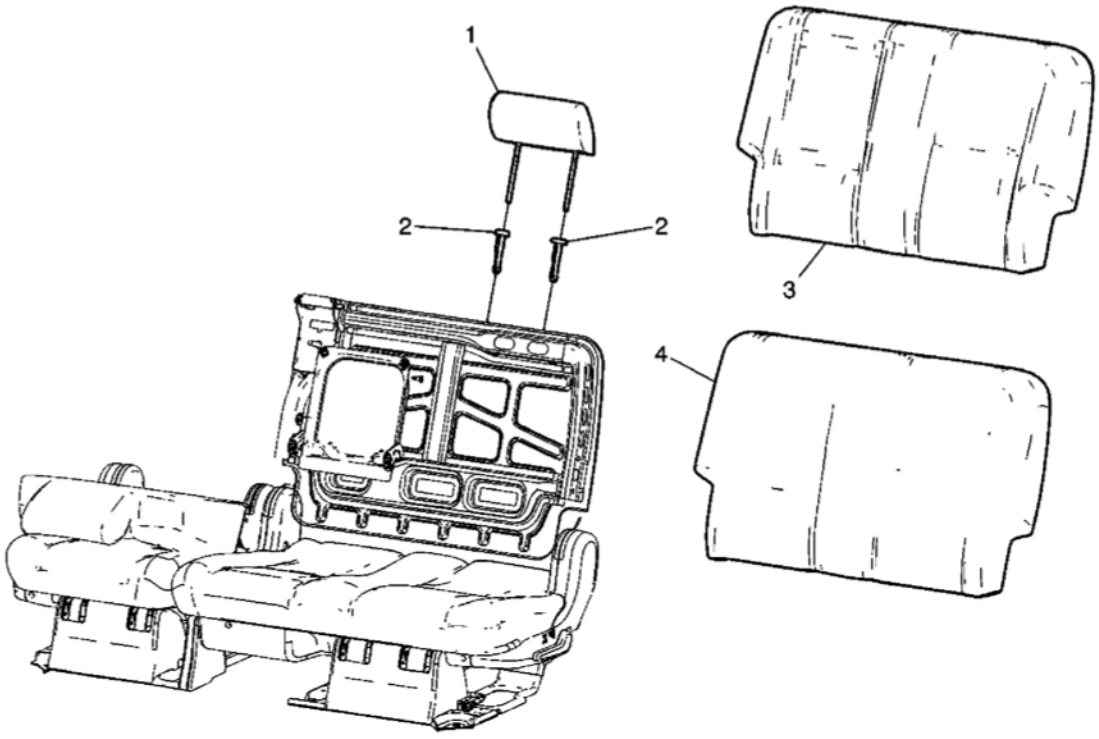


Fig. 60: View Of Rear Seat Back Cushion Cover, Pad & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
2	Rear Seat Head Restraint Guides **Tip:** Squeeze the bottom of the head restraint guide together and push up to remove.
3	Rear Seat Back Cushion Cover **Tip:** 1. Disconnect the seat back cushion cover j-channel from the seat cushion frame. 2. Disconnect the electrical connector if equipped with heated seat.

cardiagn.com

	3. Pull the seat back cushion cover away from the seat cushion pad to disengage the retaining channel.
4	Rear Seat Back Cushion Pad

SEAT BACK CUSHION LATCH COVER - (REAR NO. 1) (AVALANCHE/ESCALADE EXT)

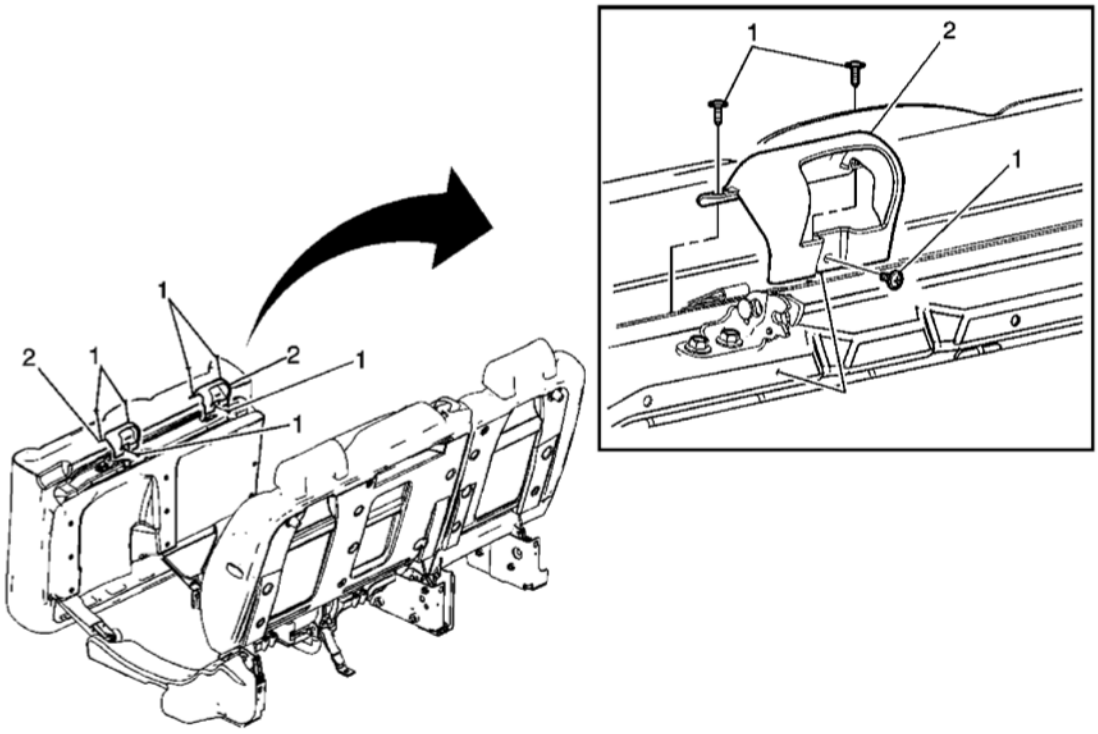


Fig. 61: View Of Rear Seat Latch Trim Cover & Screws
Courtesy of GENERAL MOTORS CORP.

Seat Back Cushion Latch Cover - (Rear No. 1) (Avalanche/Escalade EXT)

Callout	Component Name
Preliminary Procedure: Unlatch the rear seat cushion and fold forward.	
1	Rear Seat Latch Trim Cover Screw (Qty: 6) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Latch Trim Cover (Qty: 2)

REAR SEAT BACK CUSHION FRAME REPLACEMENT (AVALANCHE/ESCALADE EXT)

cardiagn.com

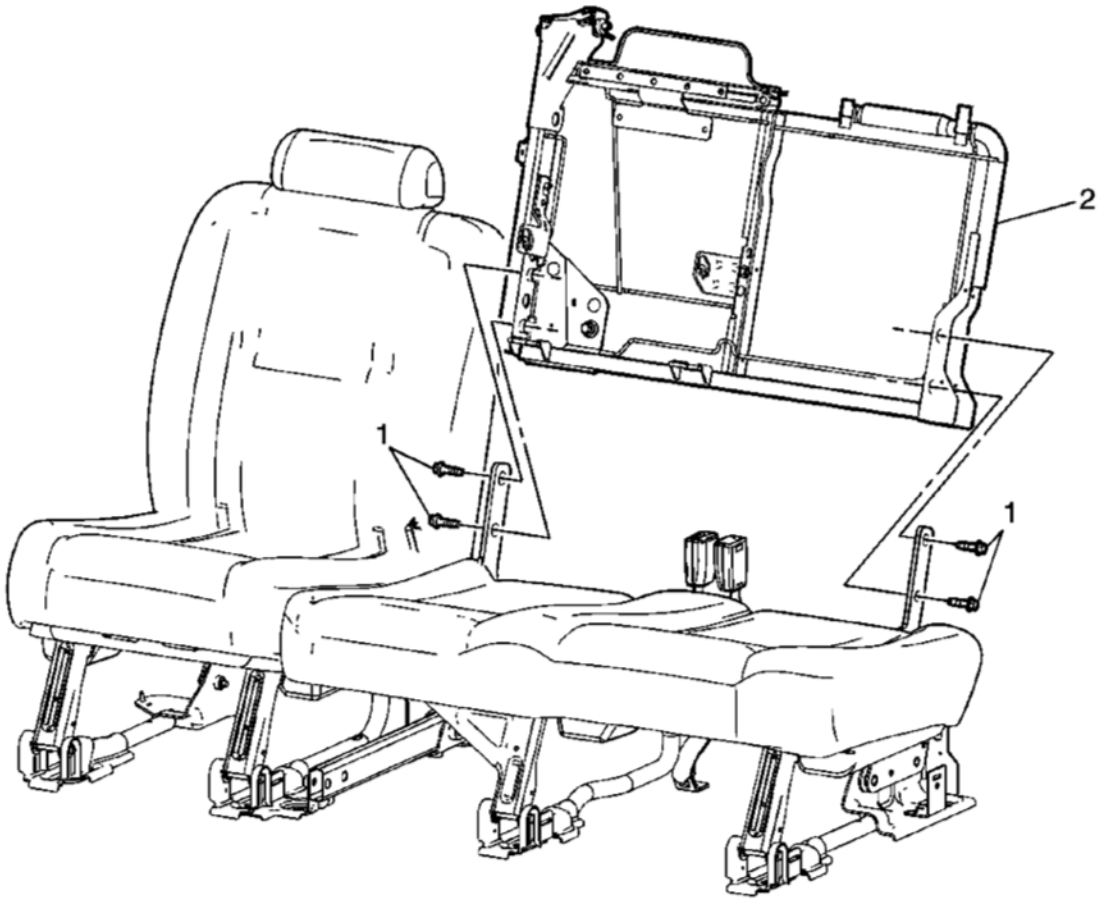


Fig. 62: View Of Rear Seat Back Frame & Bolts
Courtesy of GENERAL MOTORS CORP.

Rear Seat Back Cushion Frame Replacement (Avalanche/Escalade EXT)

Callout	Component Name
NOTE: Refer to **Fastener Notice** . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.**Preliminary Procedure:** Remove the rear seat back cushion cover and pad. Refer to **Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Back Frame Bolt (Qty: 4) **Tighten:** 9 N.m (80 lb in)
2	Rear Seat Back Frame **Tip:** When replacing the frame transfer components as necessary.

cardiagn.com

REAR SEAT BACK CUSHION FRAME REPLACEMENT (TAHOE/YUKON/ESCALADE WITH BUCKET)

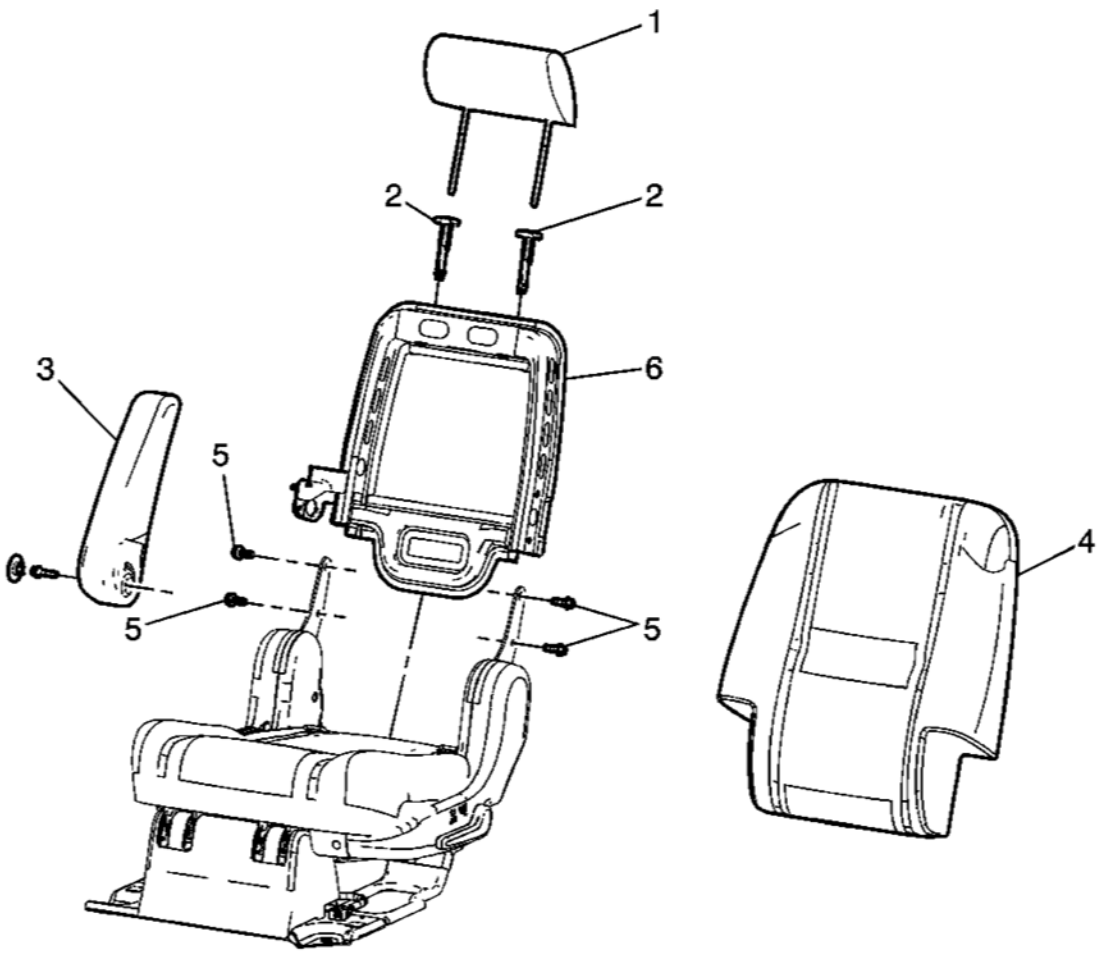


Fig. 63: View Of Rear Seat Back Cushion Frame & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Back Cushion Frame Replacement (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head

cardiagn.com

	restraint guide and pull upward to remove.
2	Rear Seat Head Restraint Guides **Tip:** Squeeze the bottom of the head restraint guide together and push up to remove.
3	Rear Seat Armrest Refer to **Rear Seat Armrest Replacement (Avalanche/Escalade EXT)** or **Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
4	Rear Seat Back Cushion Cover and Pad Refer to **Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
5	Rear Seat Back Recliner Bolts (Qty: 4) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
6	Rear Seat Back Cushion Frame

REAR SEAT BACK CUSHION FRAME REPLACEMENT (TAHOE/YUKON/ESCALADE WITH SPLIT BENCH)

cardiagn.com

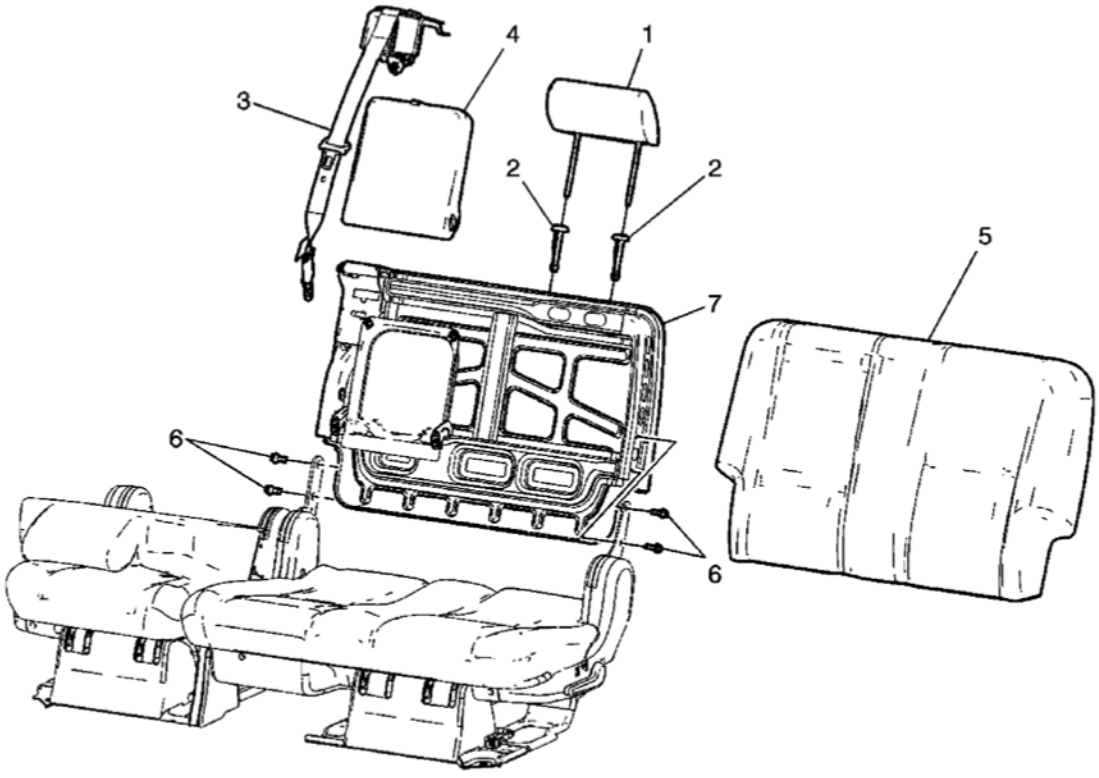


Fig. 64: View Of Rear Seat Back Cushion Frame & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Back Cushion Frame Replacement (Tahoe/Yukon/Escalade with Split Bench)

Callout	Component Name
NOTE: Refer to Fastener Notice . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.**Preliminary Procedure:** Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
2	Rear Seat Head Restraint Guides **Tip:** Squeeze the bottom of the head restraint guide together and push up to remove.
	Rear Center Seat Belt Retractor Assembly

cardiagn.com

3	Refer to **Seat Belt Retractor Replacement - No. 1 Rear Center (Split Bench)** .
4	Rear Seat Armrest Refer to **Rear Seat Armrest Replacement (Avalanche/Escalade EXT)** or **Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Armrest Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
5	Rear Seat Back Cushion Cover and Pad Refer to **Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket)** or **Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench)**.
6	Rear Seat Back Recliner Bolts (Qty: 4) **Tighten:** 9 N.m (80 lb in)
7	Rear Seat Back Cushion Frame

SEAT BACK RECLINER HANDLE REPLACEMENT - REAR (TAHOE/YUKON/ESCALADE WITH BUCKET)

cardiagn.com

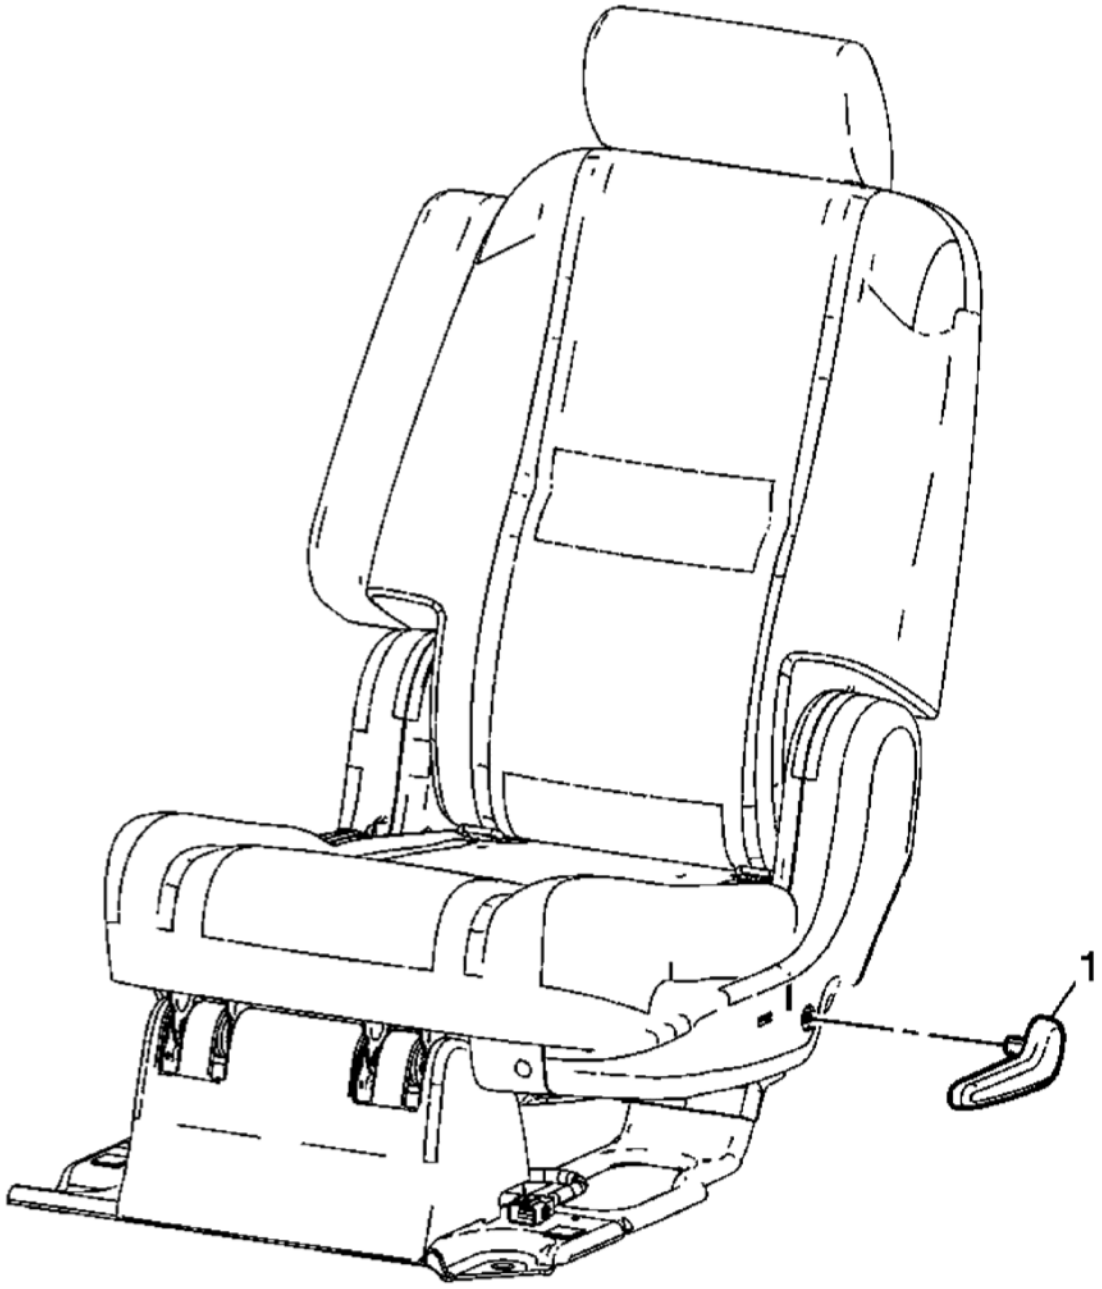


Fig. 65: View Of Rear Seat Recliner Handle
Courtesy of GENERAL MOTORS CORP.

Seat Back Recliner Handle Replacement - Rear (Tahoe/Yukon/Escalade with Bucket)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Recliner Handle **Tip:** Using a flat-bladed tool, push the retainer clip downward and pull outward to release

cardiagn.com

	the handle.

SEAT BACK HINGE REPLACEMENT - REAR (AVALANCHE/ESCALADE EXT)

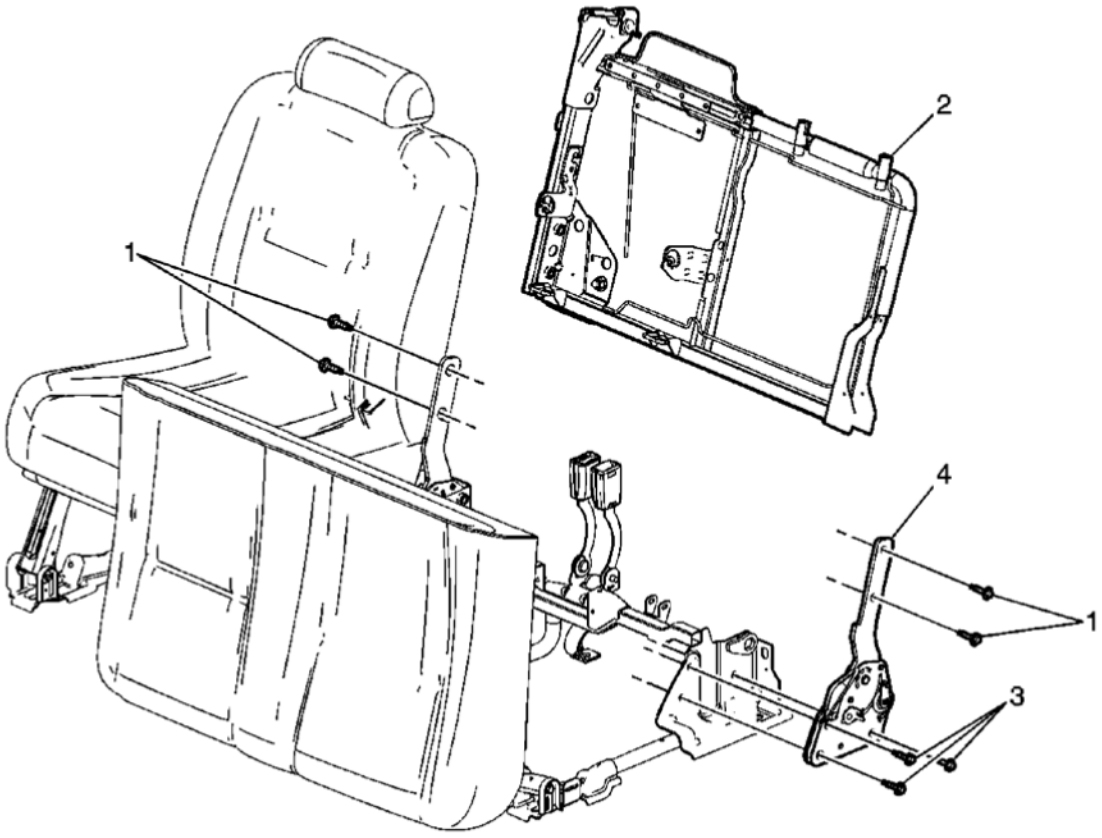


Fig. 66: View Of Rear Seat Back Hinge Bracket & Components
Courtesy of GENERAL MOTORS CORP.

Seat Back Hinge Replacement - Rear (Avalanche/Escalade EXT)

Callout	Component Name
NOTE: Refer to Fastener Notice . **Fastener Tightening Specifications:** Refer to Fastener Tightening Specifications.**Preliminary Procedure:** Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement (Avalanche/Escalade EXT) or Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Bucket) or Rear Seat Back Cushion Cover and Pad Replacement (Tahoe/Yukon/Escalade with Split Bench).	
1	Rear Seat Back Bolt (Qty: 4) **Tighten:** 9 N.m (80 lb in)

cardiagn.com

2	Rear Seat Back Cushion Frame Refer to **Front Seat Back Frame Replacement**.
3	Rear Seat Hinge Bracket Bolts (Qty: 3) **Tighten:** 9 N.m (80 lb in)
4	Rear Seat Hinge Bracket

REAR NUMBER 2 SEAT REPLACEMENT (SUBURBAN/YUKON XL)

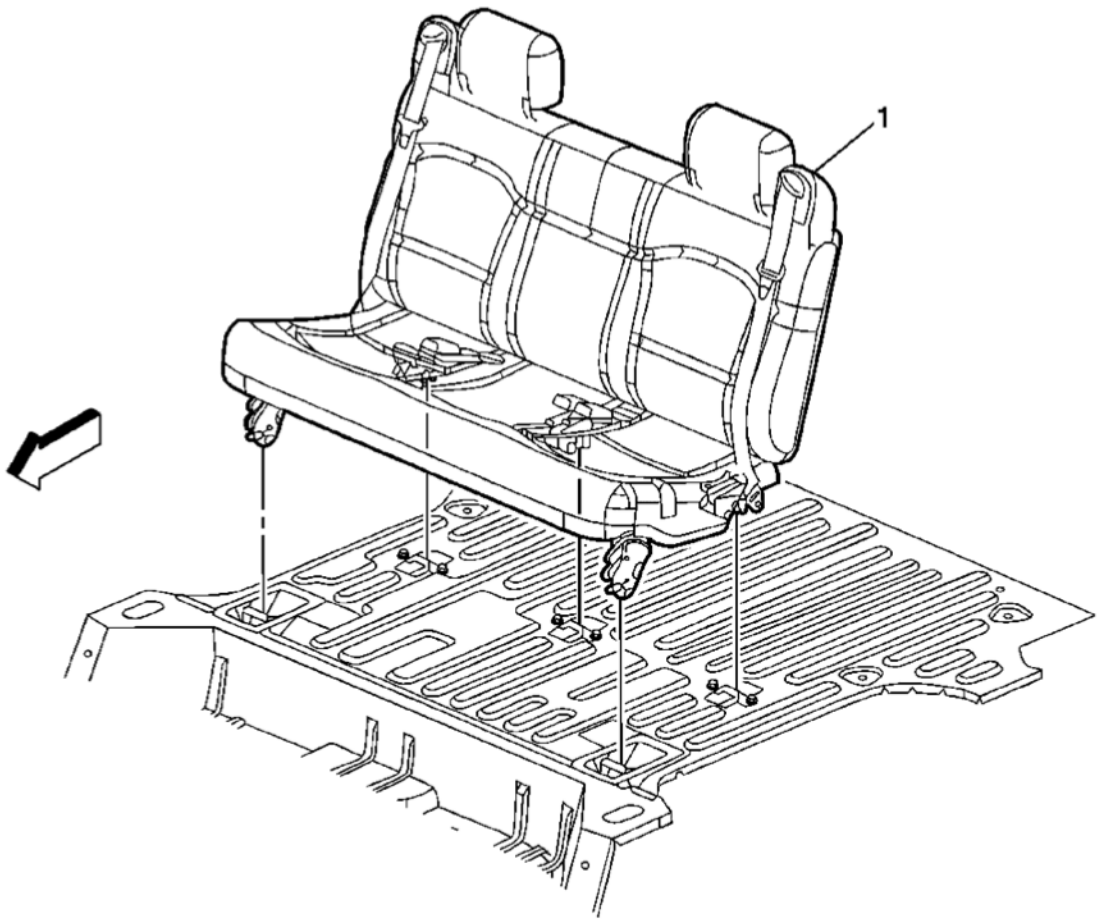


Fig. 67: View Of Rear Seat Assembly
Courtesy of GENERAL MOTORS CORP.

Rear Number 2 Seat Replacement (Suburban/Yukon XL)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Assembly **Tip:** Pull on the release then tilt the seat forward and up to remove.

cardiagn.com

REAR NUMBER 2 SEAT REPLACEMENT (TAHOE/YUKON/ESCALADE)

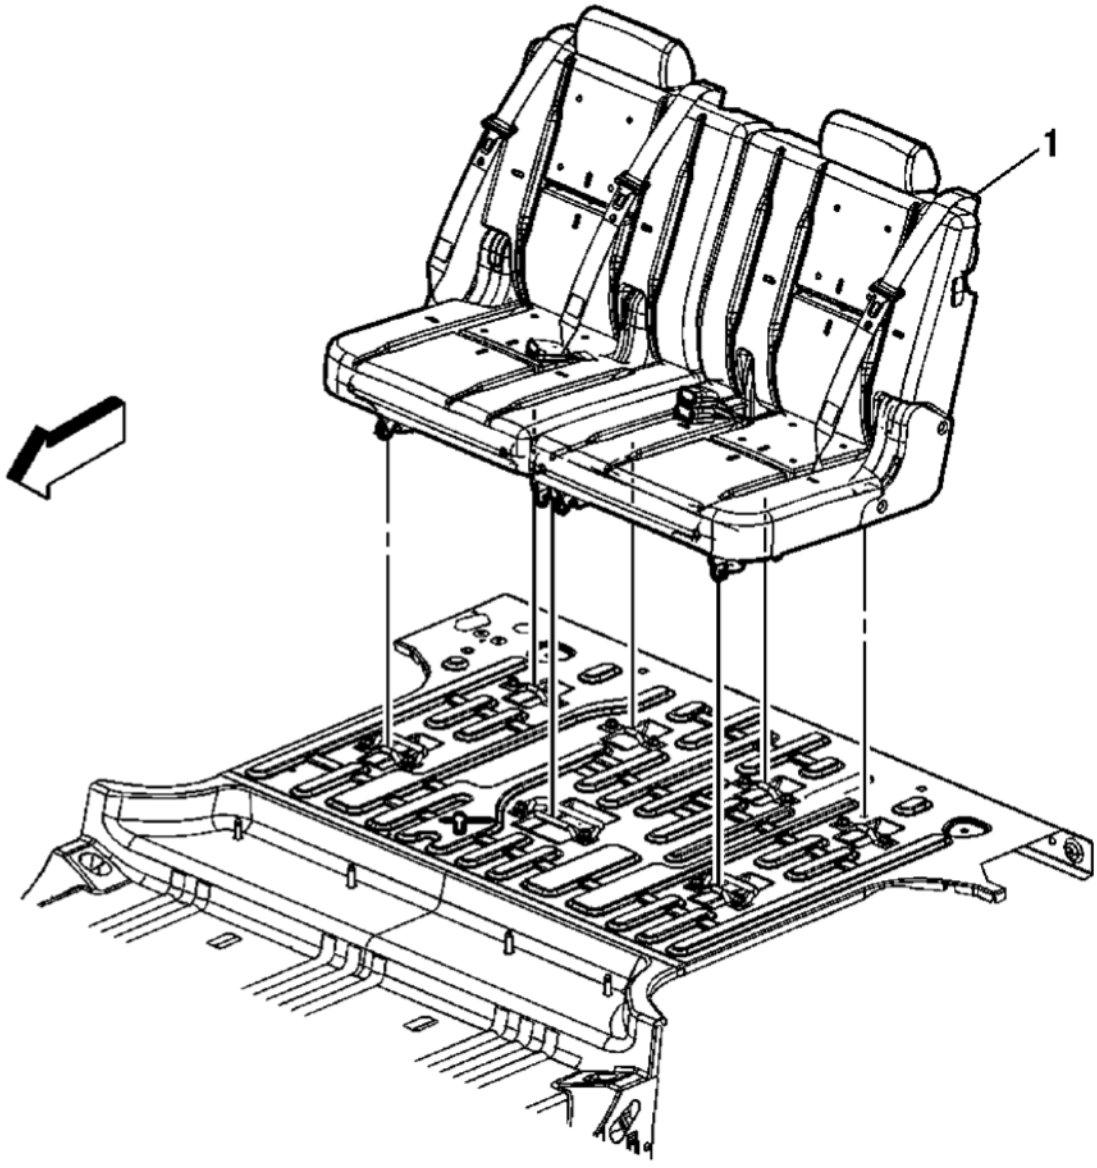


Fig. 68: View Of Rear Seat Assembly
Courtesy of GENERAL MOTORS CORP.

Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**.	
1	Rear Seat Assembly **Tip:** Pull on the release then tilt the seat forward and up to remove.

REAR SEAT NUMBER 2 BACK CUSHION LATCH COVER REPLACEMENT (AS3)

cardiagn.com

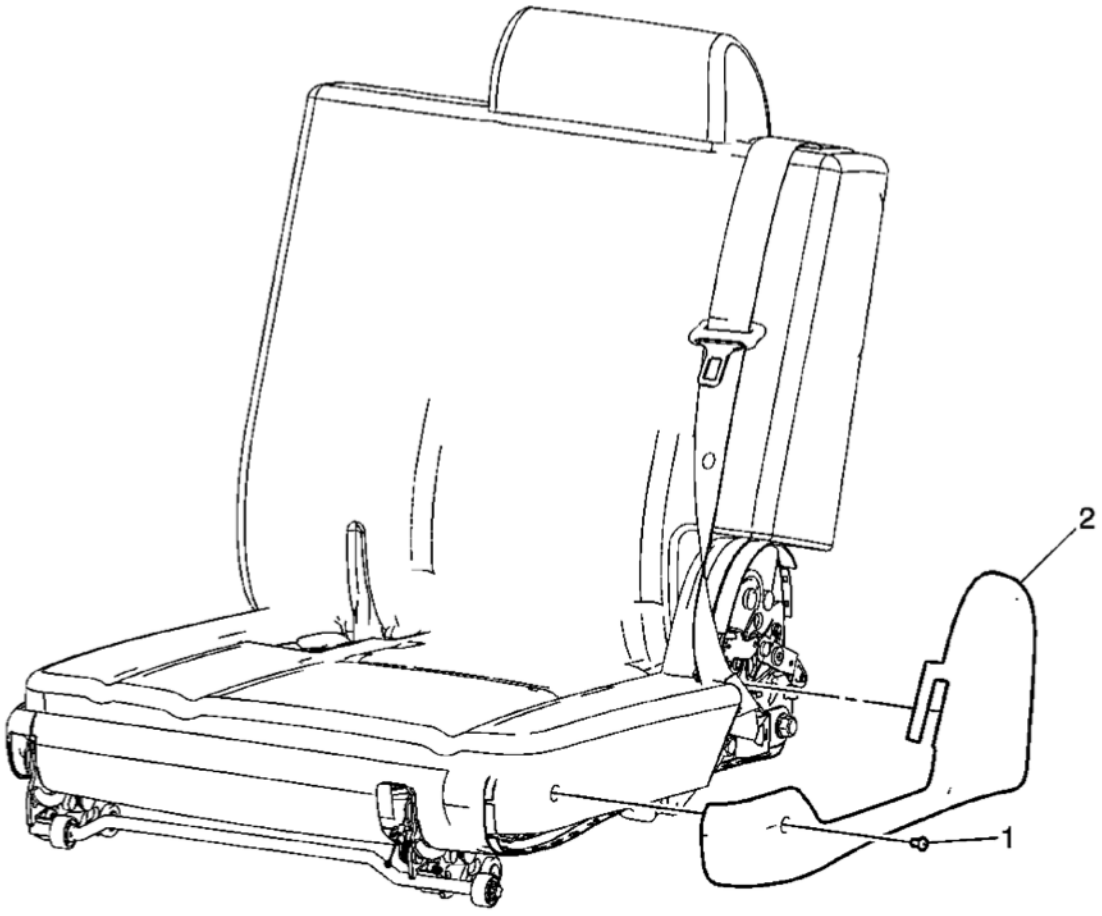


Fig. 69: View Of Rear Seat No. 2 Back Cushion Latch Finish Cover & Screw
Courtesy of GENERAL MOTORS CORP.

Rear Seat Number 2 Back Cushion Latch Cover Replacement (AS3)

Callout	Component Name
1	Rear Seat No. 2 Back Cushion Latch Finish Cover Screw **NOTE:** **Refer to Fastener Notice in Cautions and Notices.** **Tighten:** 2 N.m (18 lb in)
2	Rear Seat No. 2 Back Cushion Latch Finish Cover **Tip:** Pull away from the seat to disengage the integral retainers.

REAR SEAT NUMBER 2 BACK CUSHION LATCH COVER REPLACEMENT (AW2)

cardiagn.com

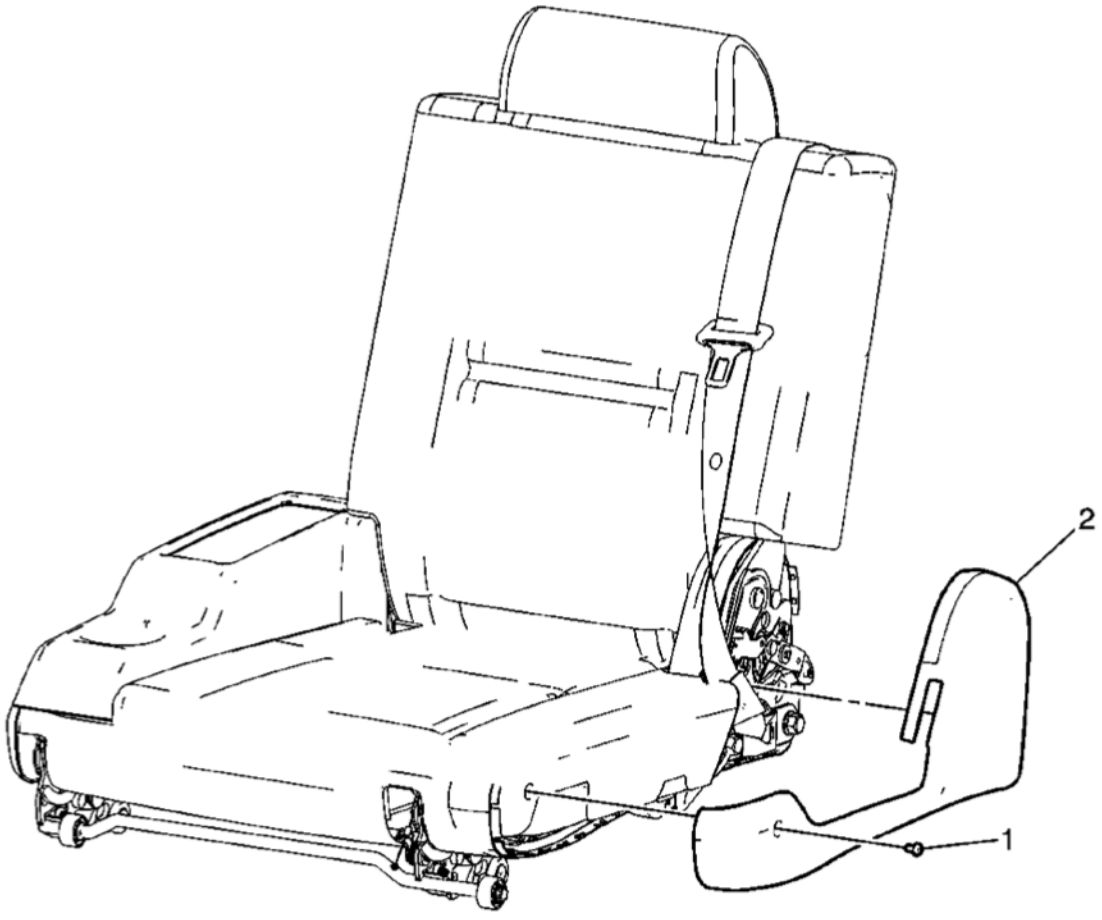


Fig. 70: View Of Rear Seat No. 2 Back Cushion Latch Finish Cover & Screw
Courtesy of GENERAL MOTORS CORP.

Rear Seat Number 2 Back Cushion Latch Cover Replacement (AW2)

Callout	Component Name
1	Rear Seat No. 2 Back Cushion Latch Finish Cover Screw **NOTE:** **Refer to Fastener Notice in Cautions and Notices.** **Tighten:** 2 N.m (18 lb in)
2	Rear Seat No. 2 Back Cushion Latch Finish Cover **Tip:** Pull away from the seat to disengage the integral retainers.

REAR SEAT NUMBER 2 BACK CUSHION LATCH CABLE REPLACEMENT

cardiagn.com

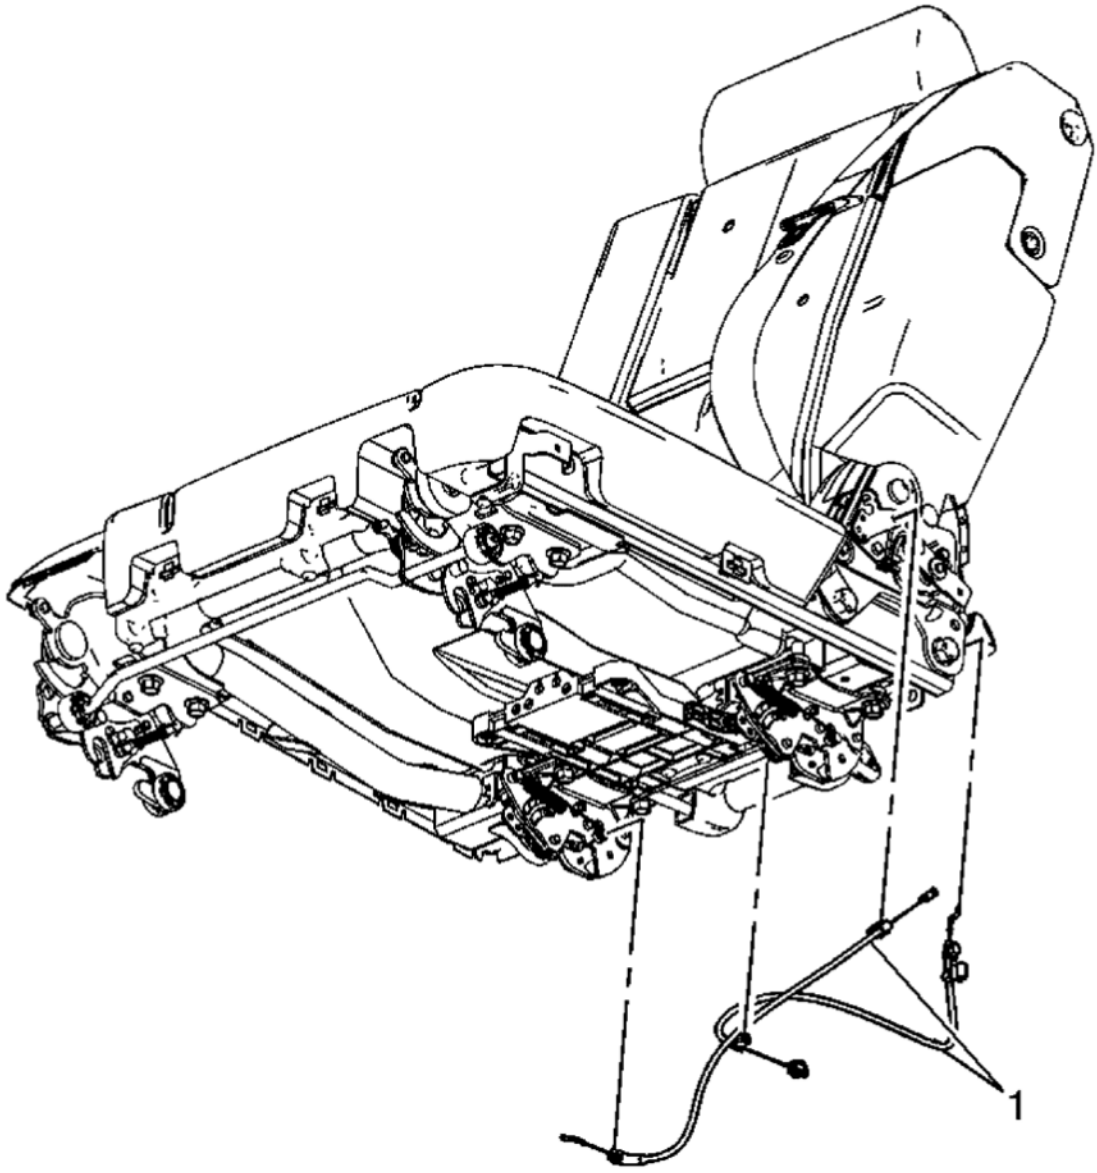


Fig. 71: View Of Rear Seat No. 2 Back Cushion Latch Cable Assembly
Courtesy of GENERAL MOTORS CORP.

Rear Seat Number 2 Back Cushion Latch Cable Replacement

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**. 2. Remove the rear seat cushion trim covers. Refer to **Seat Cushion Panel Replacement - Rear No. 2 (AS3)** or **Seat Cushion Panel Replacement - Rear No. 2 (AW2)**.	

cardiagn.com

1	Rear Seat #2 Back Cable Assembly

SEAT CUSHION COVER AND PAD REPLACEMENT - REAR NO. 2

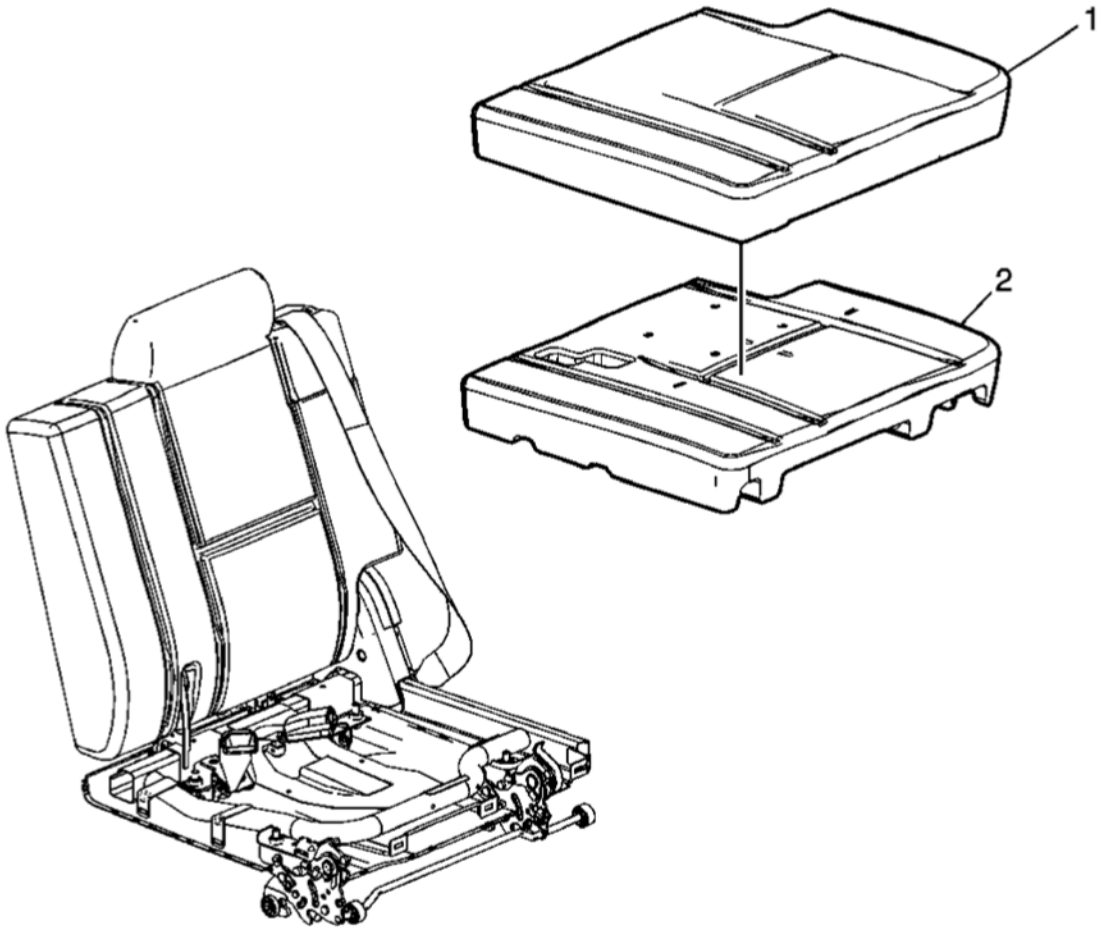


Fig. 72: View Of Rear Seat No. 2 Cushion Pad & Cover
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Cover and Pad Replacement - Rear No. 2

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**. 2. Remove the rear seat cushion finish covers. Refer to **Seat Cushion Panel Replacement - Rear No. 2 (AS3)** or **Seat Cushion Panel Replacement - Rear No. 2 (AW2)**.	
1	Rear Seat No. 2 Cushion Cover **Tip:** Disconnect the j-channel from the seat cushion frame and remove the cushion cover and pad as an assembly.

cardiagn.com

2	Rear Seat No. 2 Cushion Pad **Tip:** Pull the seat cushion cover off the pad to disengage the retainers.

SEAT CUSHION FRAME REPLACEMENT - REAR NO. 2

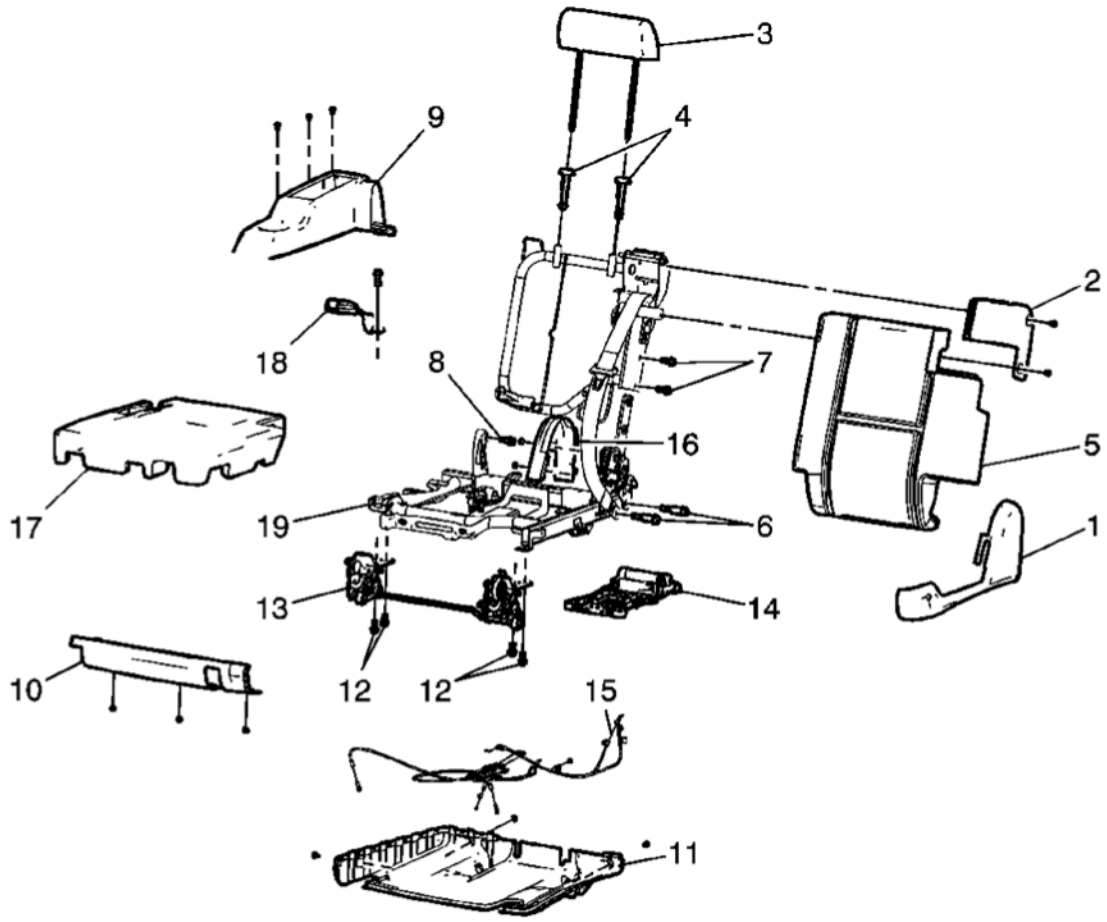


Fig. 73: View Of Rear Seat No. 2 & Components
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Frame Replacement - Rear No. 2

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**.	
1	Rear Seat No. 2 Back Cushion Latch Finish Cover Refer to **Seat Cushion Panel Replacement - Rear No. 2 (AS3)** or **Seat Cushion Panel Replacement - Rear No. 2 (AW2)**.
2	Rear Seat Hinge Finish Cover Refer to **Rear Seat Number 2 Hinge Finish Cover Replacement**.

cardiagn.com

3	Rear Seat No. 2 Head Restraint Assembly Refer to **Head Restraint Replacement - Rear No. 2**.
4	Rear Seat No. 2 Head Restraint Guide (Qty: 2) Refer to **Head Restraint Guide Assembly Replacement - Rear No. 2**.
5	Rear Seat Back No. 2 Cushion Cover and Pad Refer to **Seat Back Cover and Pad Replacement - Rear No. 2**.
6	Rear Seat No. 2 Cushion Frame Bolt (Qty: 2) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
7	Rear Seat No. 2 Back Bolt (Qty: 2) **Tighten:** 9 N.m (80 lb in)
8	Rear Seat No. 2 Back Bolt **Tighten:** 9 N.m (80 lb in)
9	Rear Seat No. 2 Cushion Compartment Refer to **Rear Seat Cushion Compartment Replacement (Tahoe/Yukon/Escalade Rear Seat No. 2)**.
10	Rear Seat No. 2 Back Cushion Latch Cover Refer to **Seat Cushion Panel Replacement - Rear No. 2 (AS3)** or **Seat Cushion Panel Replacement - Rear No. 2 (AW2)**.
11	Rear Seat No. 2 Back Cushion Latch Cover Refer to **Seat Cushion Panel Replacement - Rear No. 2 (AS3)** or **Seat Cushion Panel Replacement - Rear No. 2 (AW2)**.
12	Rear Seat No. 2 Load Floor Latch Bolt (Qty: 4) **Tighten:** 9 N.m (80 lb in)
13	Rear Seat No. 2 Load Floor Latch Refer to **Rear Seat Number 2 Riser Latch Assembly Replacement**.
14	Rear Seat No. 2 Latch Release Handle Assembly Refer to **Rear Seat Number 2 Load Floor Latch Cable Replacement**.
15	Rear Seat No. 2 Back Cushion Latch Cable Refer to **Rear Seat Number 2 Back Cushion Latch Cable Replacement**.
16	Rear Seat No. 2 Back Inner Hinge Finish Panel
17	Rear Seat No. 2 Cushion Cover and Pad Refer to **Seat Cushion Cover and Pad Replacement - Rear No. 2**.
18	Rear Seat No. 2 Belt Buckle Refer to **Seat Belt Buckle Replacement - No. 2 Rear** .
19	Rear Seat No. 2 Cushion Frame Refer to **Seat Cushion Frame Replacement - Rear No. 2**.

cardiagn.com

SEAT CUSHION PANEL REPLACEMENT - REAR NO. 2 (AS3)

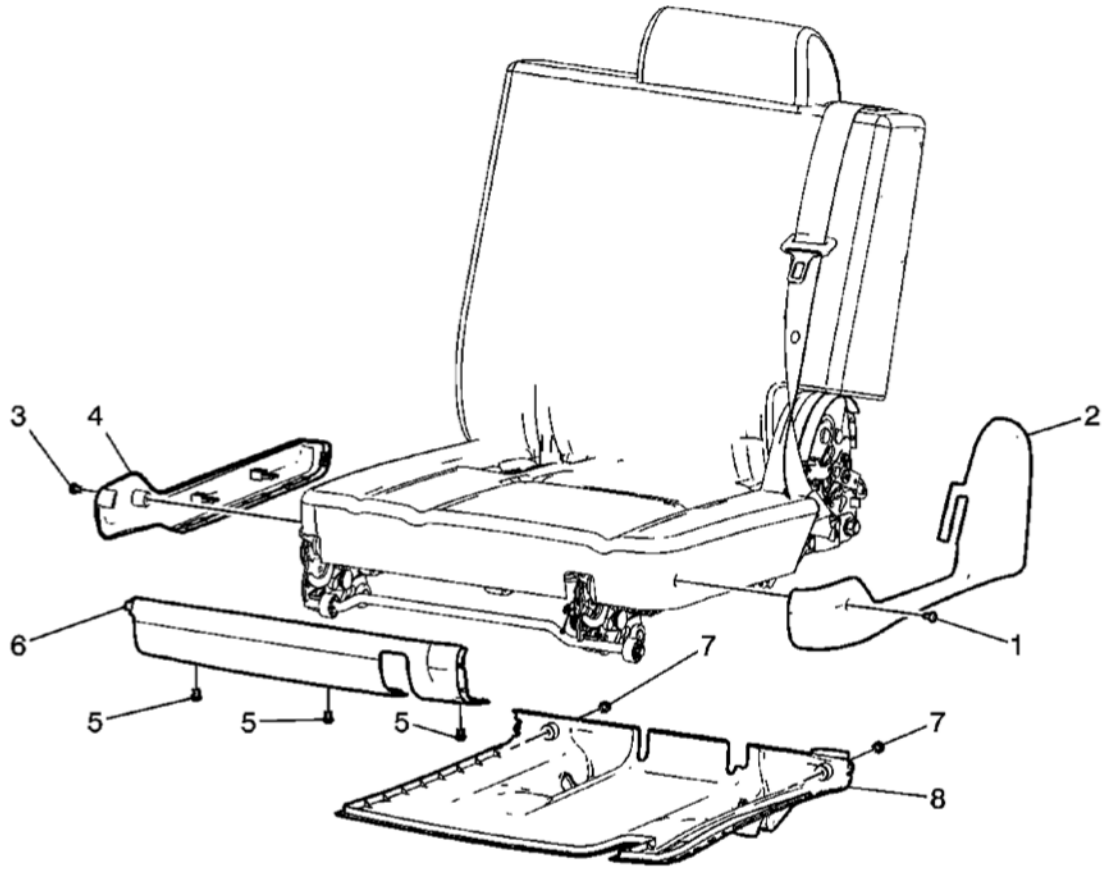


Fig. 74: View Of Rear Seat No. 2 Cushion Panel & Components
Courtesy of GENERAL MOTORS CORP.

Seat Cushion Panel Replacement - Rear No. 2 (AS3)

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**.	
1	Rear Seat No. 2 Back Cushion Latch Finish Cover Screw **NOTE:** **Refer to Fastener Notice in Cautions and Notices.** **Tighten:** 2 N.m (18 lb in)
2	Rear Seat No. 2 Back Cushion Latch Finish Cover
3	Rear Seat No. 2 Back Hinge Finish Cover Screw

cardiagn.com

	Tighten: 2 N.m (18 lb in)
4	Rear Seat No. 2 Back Hinge Finish Cover
5	Rear Seat No. 2 Back Cushion Latch Cover Screw (Qty: 3) **Tighten:** 2 N.m (18 lb in)
6	Rear Seat No. 2 Back Cushion Latch Cover
7	Rear Seat No. 2 Back Cushion Latch Cover Screw (Qty: 2) **Tighten:** 2 N.m (18 lb in)
8	Rear Seat No. 2 Back Cushion Latch Cover

SEAT CUSHION PANEL REPLACEMENT - REAR NO. 2 (AW2)

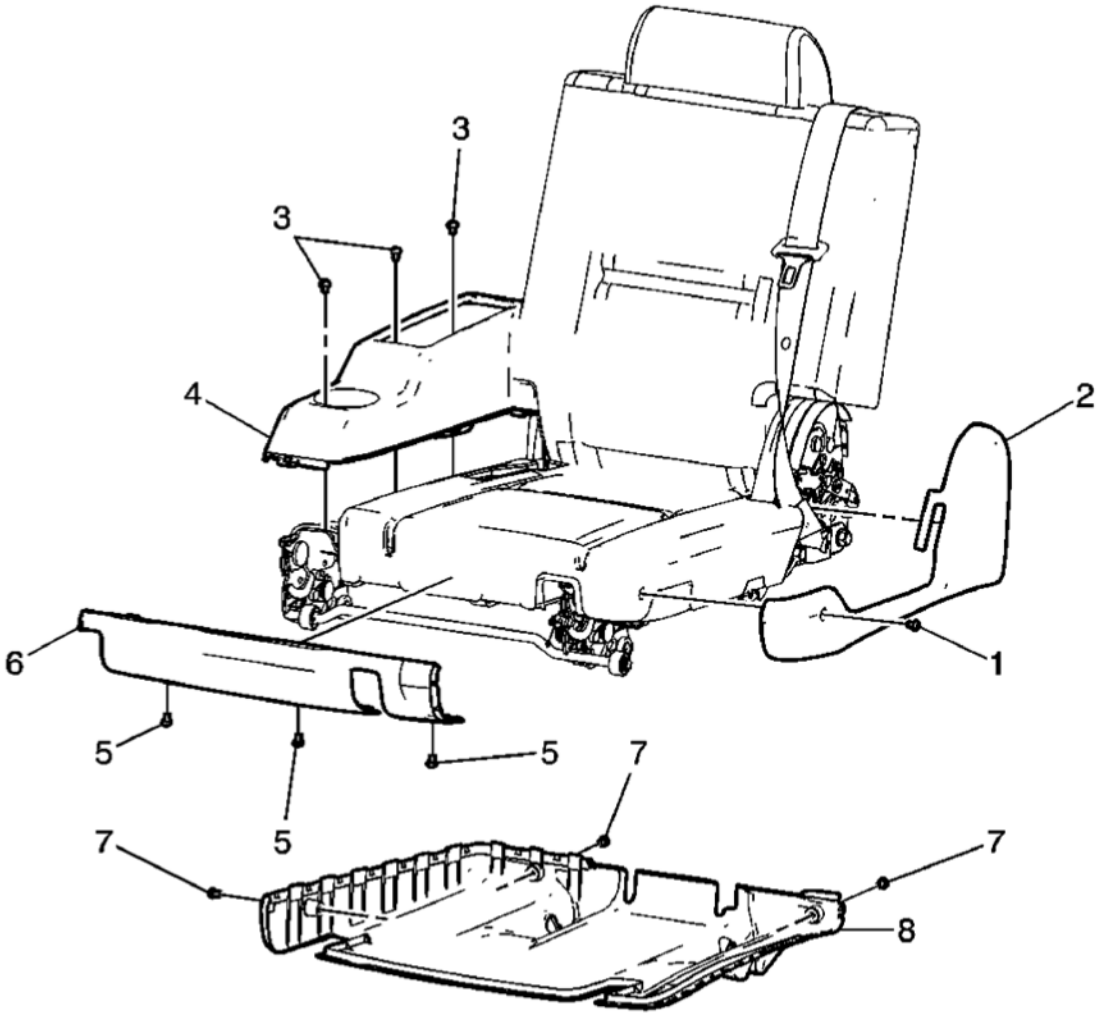


Fig. 75: View Of Rear Seat No. 2 Cushion Panel & Components
Courtesy of GENERAL MOTORS CORP.

cardiagn.com

Seat Cushion Panel Replacement - Rear No. 2 (AW2)

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**.	
1	Rear Seat No. 2 Back Cushion Latch Finish Cover Screw **NOTE:** **Refer to Fastener Notice in Cautions and Notices.** **Tighten:** 2 N.m (18 lb in)
2	Rear Seat No. 2 Back Cushion Latch Finish Cover
3	Rear Seat No. 2 Cushion Compartment Screw (Qty: 3) **Tighten:** 2 N.m (18 lb in)
4	Rear Seat No. 2 Cushion Compartment
5	Rear Seat No. 2 Back Cushion Latch Cover Screw (Qty: 3) **Tighten:** 2 N.m (18 lb in)
6	Rear Seat No. 2 Back Cushion Latch Cover
7	Rear Seat No. 2 Back Cushion Latch Cover Screw (Qty: 3) **Tighten:** 2 N.m (18 lb in)
8	Rear Seat No. 2 Back Cushion Latch Cover

HEAD RESTRAINT REPLACEMENT - REAR NO. 2

cardiagn.com

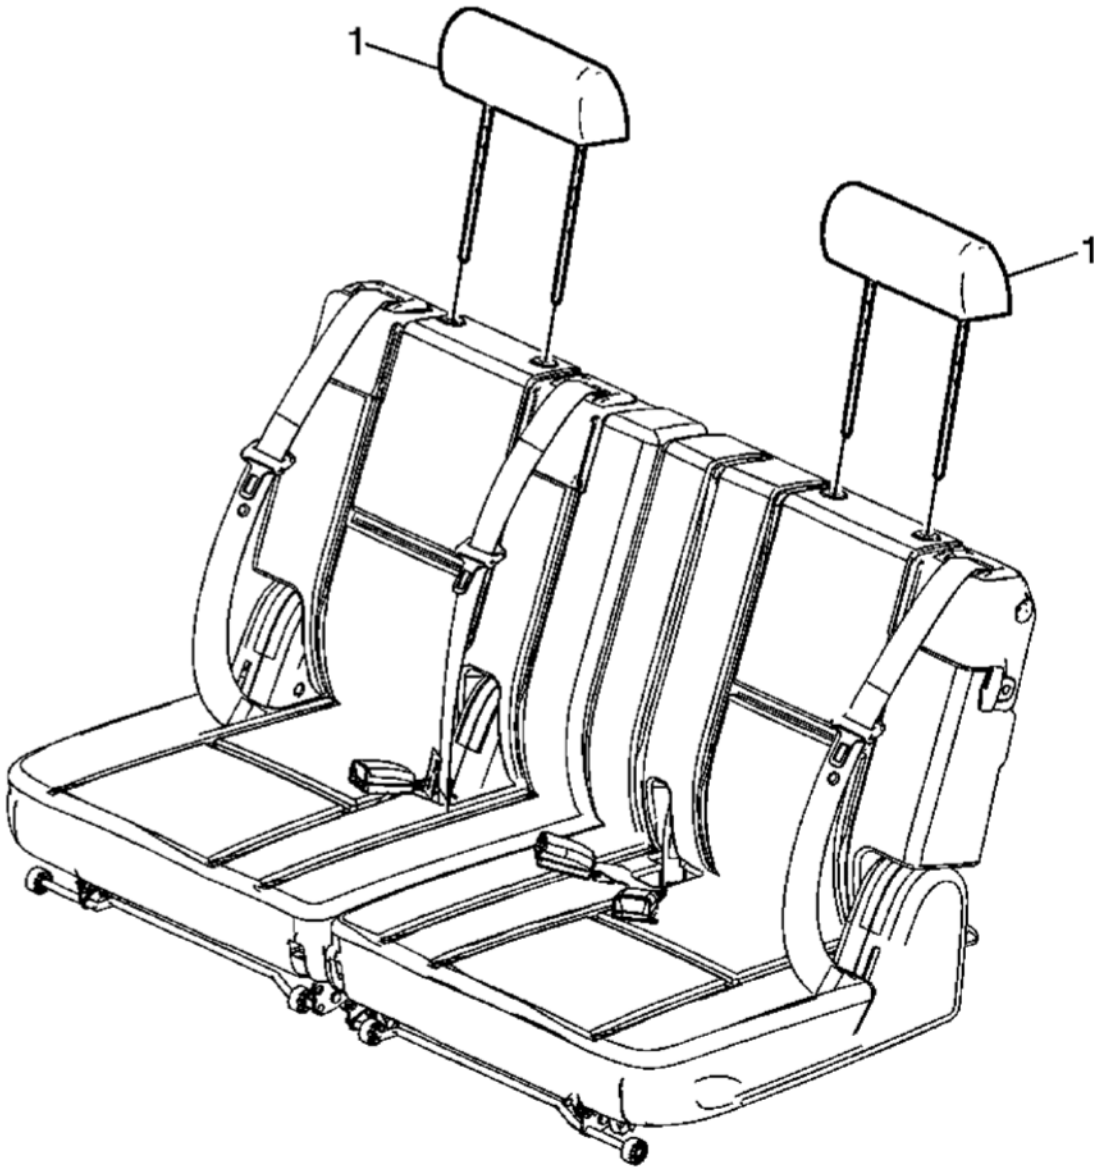


Fig. 76: View Of Rear Seat Head Restraints
Courtesy of GENERAL MOTORS CORP.

Head Restraint Replacement - Rear No. 2

Callout	Component Name
1	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.

cardiagn.com

HEAD RESTRAINT GUIDE ASSEMBLY REPLACEMENT - REAR NO. 2

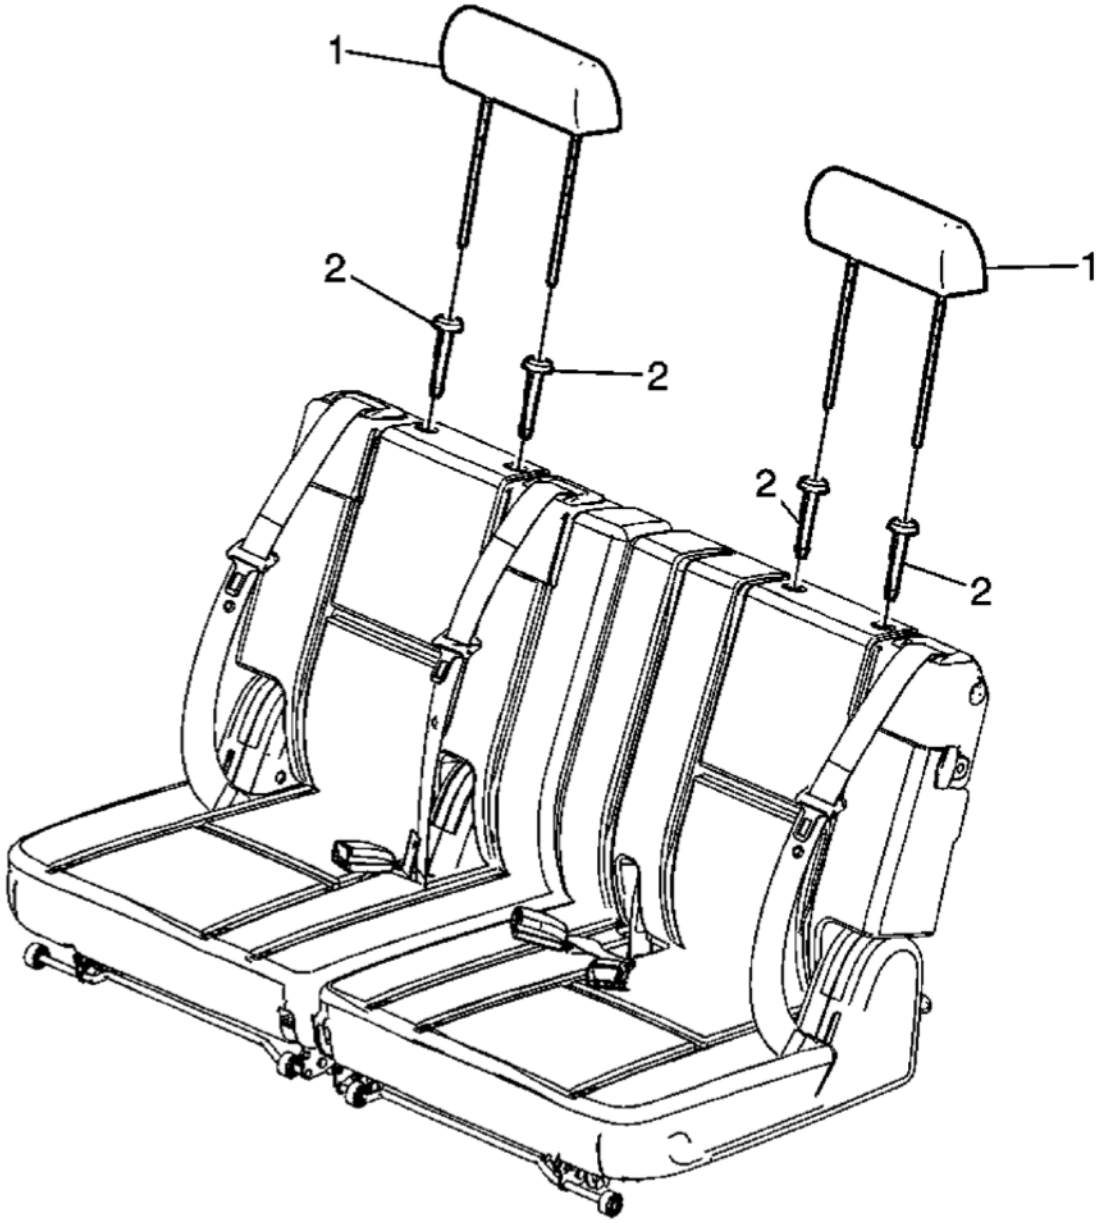


Fig. 77: View Of Rear Seat Head Restraints & Guides
Courtesy of GENERAL MOTORS CORP.

Head Restraint Guide Assembly Replacement - Rear No. 2

Callout	Component Name
Fastener Tightening Specifications: Refer to **Fastener Tightening Specifications**. **Preliminary Procedure:** Remove the rear seat. Refer to **Rear Seat Replacement (Avalanche/Escalade EXT)** or **Rear Seat**	

cardiagn.com

Replacement (Tahoe/Yukon/Escalade with Bucket) or **Rear Seat Replacement (Tahoe/Yukon/Escalade with Split Bench)**.	
1	Rear Seat Head Restraint **Tip:** 1. Depress the button on the inboard head restraint guide to raise the head restraint to the full up position. 2. Insert a small diameter tool into the hole on the inboard side of the outboard head restraint guide and pull upward to remove.
2	Rear Seat Head Restraint Guides **Tip:** 1. Release the j-channel at the bottom of the seat back and pull the seat back cover up enough to gain access to the head restraint guides. 2. Squeeze the bottom of the head restraint guide together and push up to remove.

SEAT BACK COVER AND PAD REPLACEMENT - REAR NO. 2

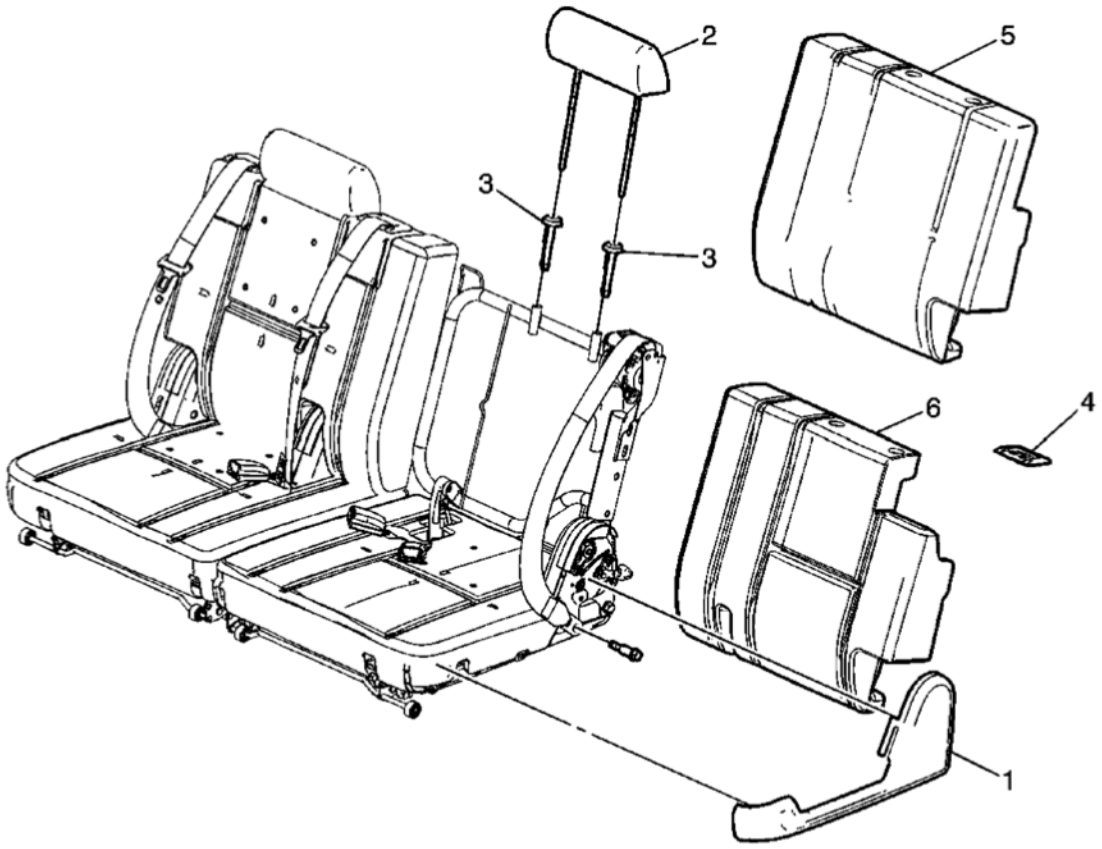


Fig. 78: View Of Rear Seat Back Components
Courtesy of GENERAL MOTORS CORP.

cardiagn.com

Seat Back Cover and Pad Replacement - Rear No. 2

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**.	
1	Rear Seat Hinge Finish Cover Refer to **Rear Seat Number 2 Back Cushion Hinge Finish Cover Replacement (AW2)**.
2	Rear Seat Head Restraint Assembly Refer to **Head Restraint Replacement - Rear No. 2**.
3	Rear Seat Head Restraint Guide (Qty: 2) Refer to **Head Restraint Guide Assembly Replacement - Rear No. 2**.
4	Rear Seat Shoulder Belt Bezel Screw (Qty: 2) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 2 N.m (18 lb in)
5	Rear Seat Shoulder Belt Bezel Refer to **Rear Seat Shoulder Belt Opening Bezel Replacement (Avalanche/Escalade EXT)** or **Rear Seat Shoulder Belt Opening Bezel Replacement (Tahoe/Yukon/Escalade Rear Seat No. 2)**.
6	Rear Seat Back #2 Cushion Cover **Tip:** Disconnect the seat back cushion cover j-channel from the seat cushion frame.
7	Rear Seat #2 Cushion Pad **Tip:** Pull the seat back cushion cover away from the seat cushion pad to disengage the retaining channel.

SEAT BACK FRAME REPLACEMENT - REAR NO. 2

cardiagn.com

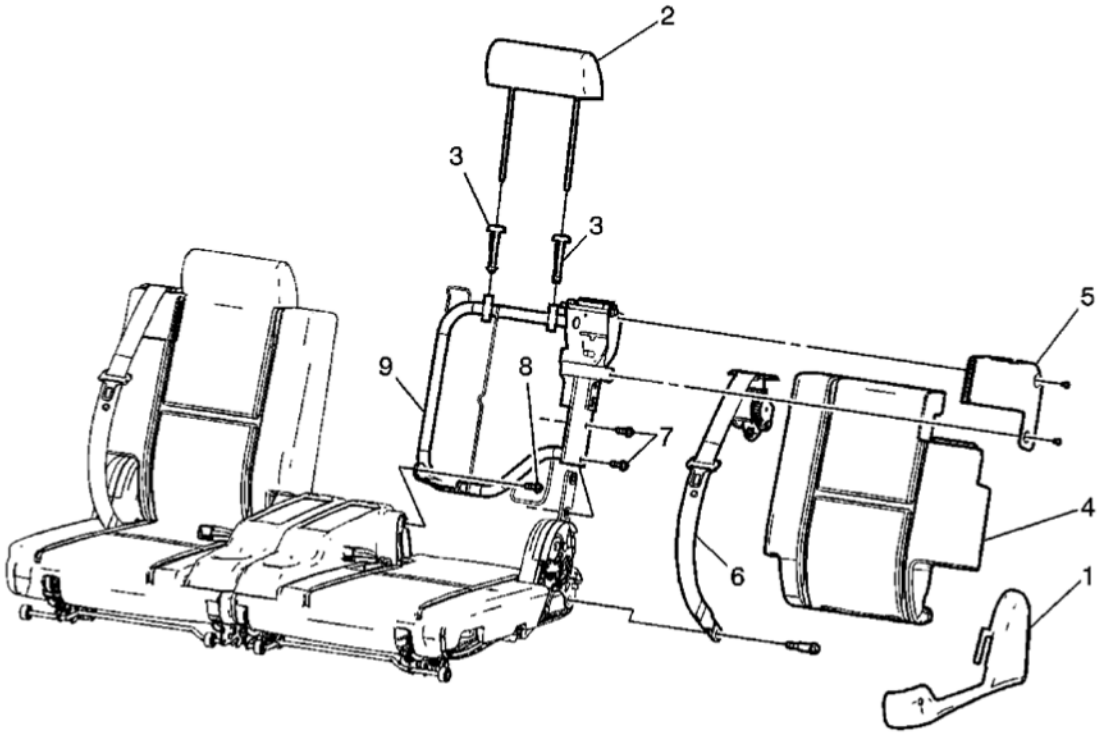


Fig. 79: View Of Rear Seat Frame No. 2 & Components
Courtesy of GENERAL MOTORS CORP.

Seat Back Frame Replacement - Rear No. 2

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**.	
1	Rear Seat Hinge Finish Cover Refer to **Rear Seat Number 2 Back Cushion Hinge Finish Cover Replacement (AW2)**.
2	Rear Seat Shoulder Belt Bezel Refer to **Rear Seat Shoulder Belt Opening Bezel Replacement (Avalanche/Escalade EXT)** or **Rear Seat Shoulder Belt Opening Bezel Replacement (Tahoe/Yukon/Escalade Rear Seat No. 2)**.
3	Rear Seat Head Restraint Assembly Refer to **Head Restraint Replacement - Rear No. 2**.
4	Rear Seat Head Restraint Guide (Qty: 2) Refer to **Head Restraint Guide Assembly Replacement - Rear No. 2**.
5	Rear Seat Back #2 Cushion Cover and Pad Refer to **Seat Back Cover and Pad Replacement - Rear No. 2**.
6	Rear Seat #2 Belt Retractor Assembly Refer to **Seat Belt Retractor Replacement - No. 2 Rear** .
	Rear Seat #2 Back Bolt (Qty: 2)

cardiagn.com

7	**NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
8	Rear Seat #2 Back Bolt **Tighten:** 9 N.m (80 lb in)
9	Rear Seat #2 Back Frame

REAR SEAT NUMBER 2 HINGE FINISH COVER REPLACEMENT

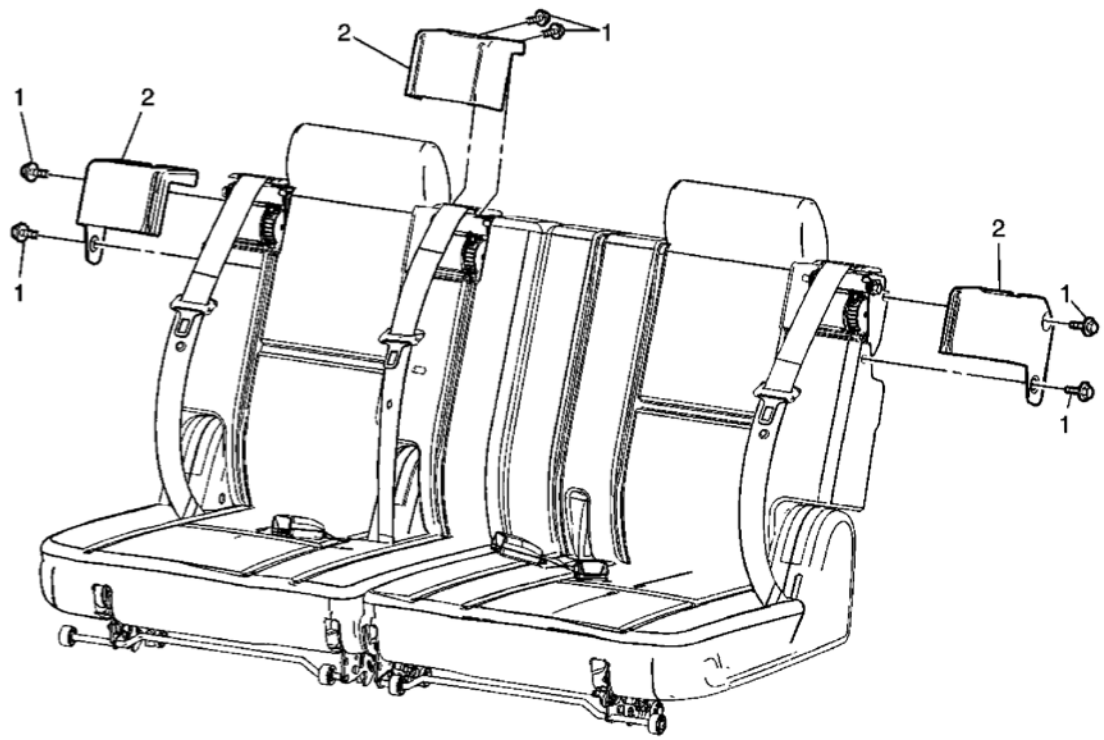


Fig. 80: View Of Rear Seat Hinge Finish Cover & Screws
Courtesy of GENERAL MOTORS CORP.

Rear Seat Number 2 Hinge Finish Cover Replacement

Callout	Component Name
Preliminary Procedure: Remove the Rear Seat No. 2 Back Cushion Cover. Refer to **Seat Back Cover and Pad Replacement - Rear No. 2**.	
1	Rear Seat Hinge Finish Cover Screw (Qty: 2) **NOTE:**

cardiagn.com

	Refer to Fastener Notice . **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Hinge Finish Cover **Tip:** Slide the belt out through the slit in the back of the bezel.

REAR SEAT NUMBER 2 BACK CUSHION HINGE FINISH COVER REPLACEMENT (AW2)

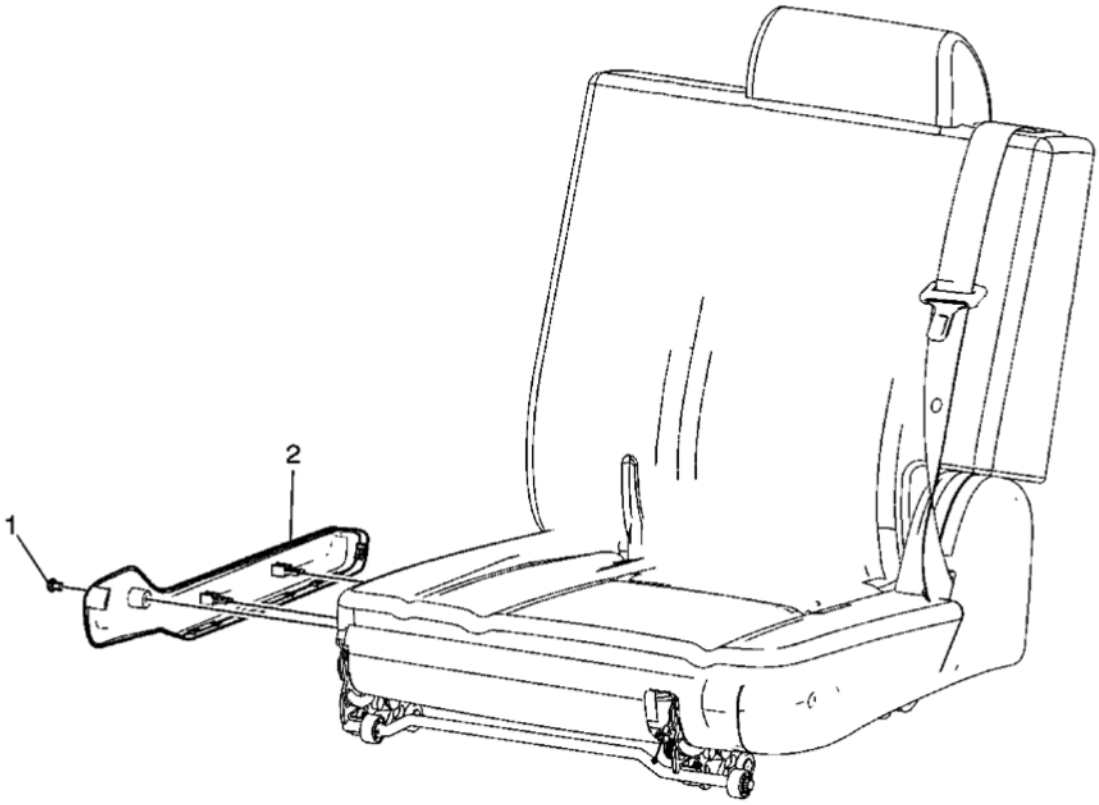


Fig. 81: View Of Rear Seat No.2 Back Cushion Hinge Finish Cover & Screw
Courtesy of GENERAL MOTORS CORP.

Rear Seat Number 2 Back Cushion Hinge Finish Cover Replacement (AW2)

Callout	Component Name
1	Rear Seat No. 2 Back Cushion Hinge Finish Cover Screw **NOTE:** **Refer to Fastener Notice in Cautions and Notices.** **Tighten:** 2 N.m (18 lb in)
	Rear Seat No. 2 Back Cushion Hinge Finish Cover **Tip:**

cardiagn.com

2	1. Tilt the opposite seat forward to allow access to the inner finish cover. 2. Pull away from the seat to disengage the integral retainers.

REAR SEAT RISER FINISH COVER REPLACEMENT (TAHOE/YUKON/ESCALADE W/BUCKET)

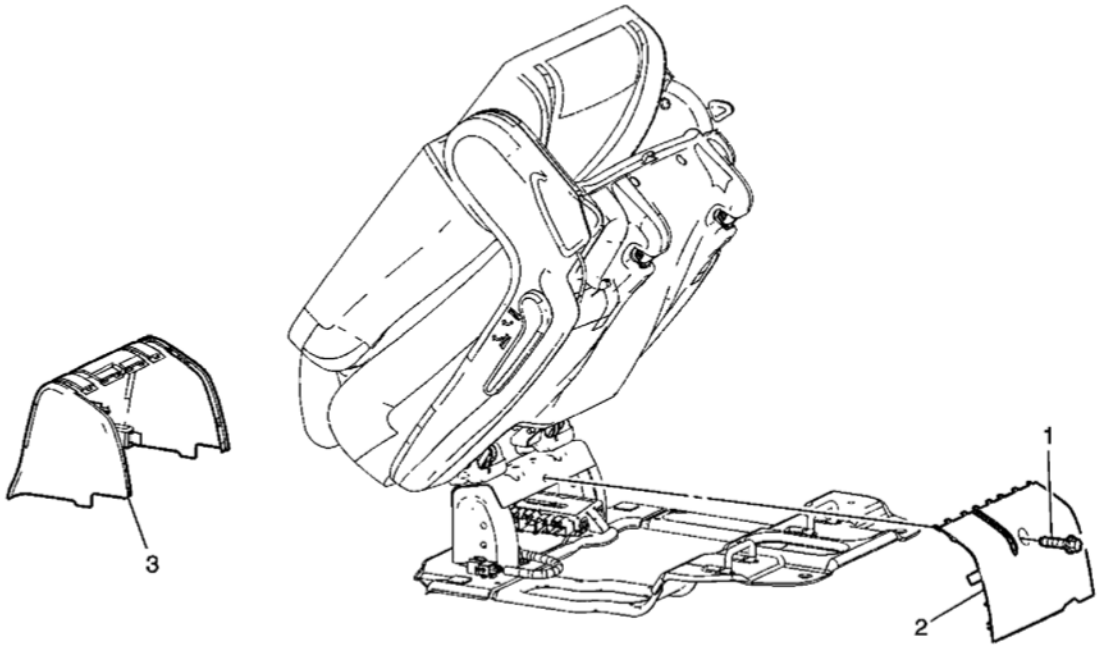


Fig. 82: View Of Rear Seat Riser Finish Covers & Screw
Courtesy of GENERAL MOTORS CORP.

Rear Seat Riser Finish Cover Replacement (Tahoe/Yukon/Escalade w/Bucket)

Callout	Component Name
Preliminary Procedures 1. Flip and fold the rear seat forward. 2. Remove the rear seat floor filler trim cover.	
1	Rear Seat Riser Finish Cover Screw **NOTE:** **Refer to Fastener Notice .** **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Riser Finish Cover
3	Rear Seat Riser Finish Cover

REAR SEAT RISER FINISH COVER REPLACEMENT (TAHOE/YUKON/ESCALADE W/SPLIT

cardiagn.com

BENCH)

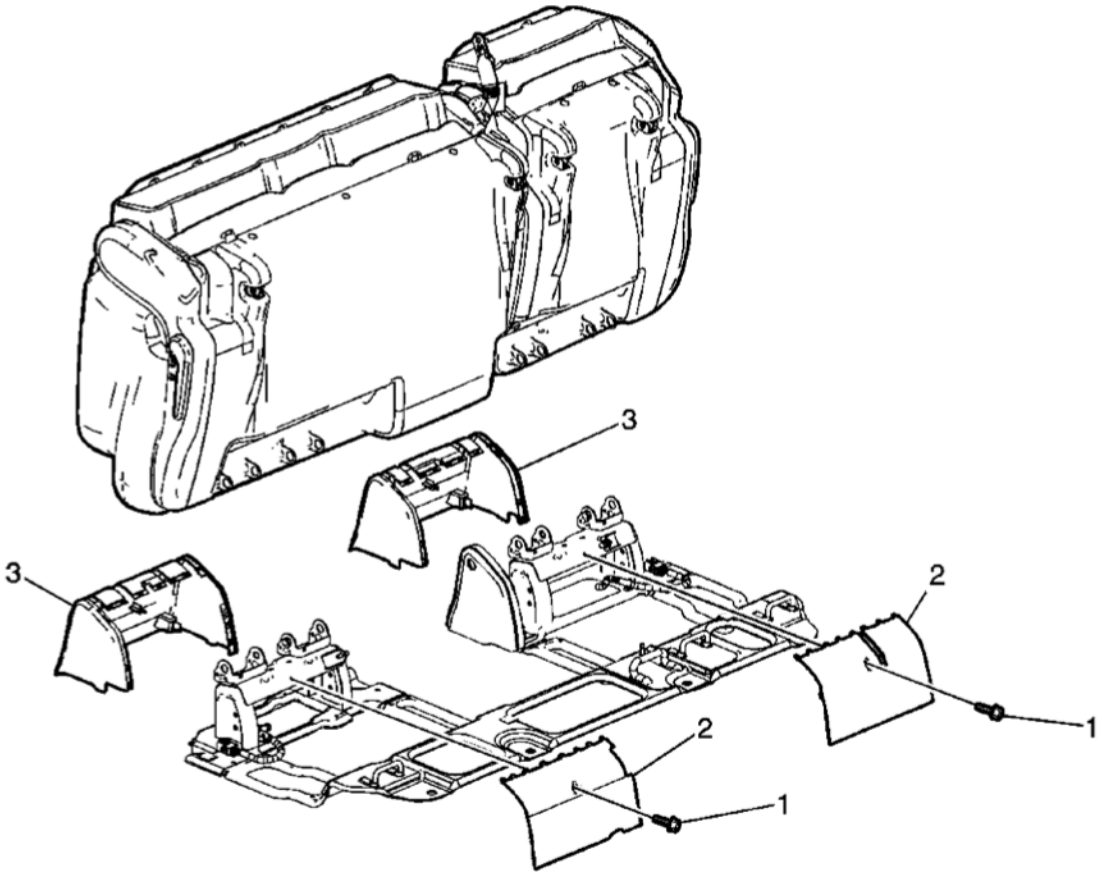


Fig. 83: View Of Rear Seat Riser Finish Covers & Screws
Courtesy of GENERAL MOTORS CORP.

Rear Seat Riser Finish Cover Replacement (Tahoe/Yukon/Escalade w/Split Bench)

Callout	Component Name
Preliminary Procedures 1. Flip and fold the rear seat forward. 2. Remove the rear seat floor filler trim cover.	
1	Rear Seat Riser Finish Cover Screw (Qty: 2) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 2 N.m (18 lb in)
2	Rear Seat Riser Finish Cover (Qty: 2)
3	Rear Seat Riser Finish Cover (Qty: 2)

cardiagn.com

REAR SEAT RISER FINISH COVER REPLACEMENT (AVALANCHE/ESCALADE EXT)

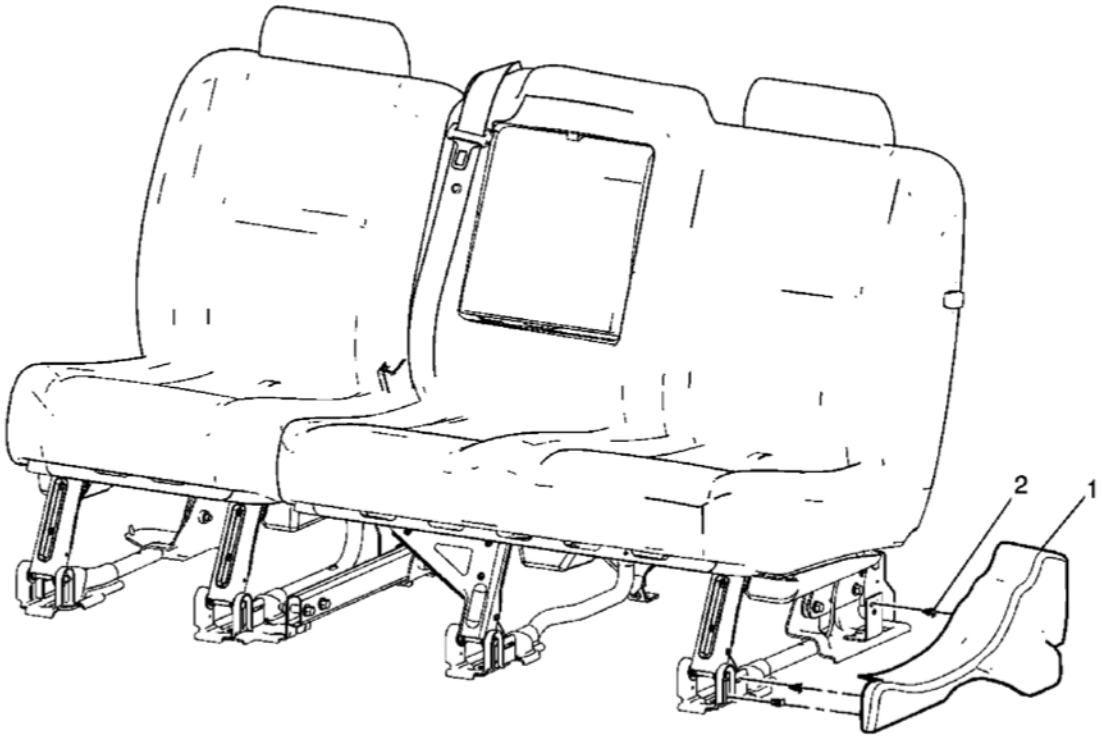


Fig. 84: View Of Rear Seat Track Finish Cover & Retainer Clips
Courtesy of GENERAL MOTORS CORP.

Rear Seat Riser Finish Cover Replacement (Avalanche/Escalade EXT)

Callout	Component Name
1	Rear Seat Track Finish Cover
2	Rear Seat Track Finish Cover Retainer Clip (Qty: 3)

REAR SEAT NUMBER 2 LOAD FLOOR LATCH CABLE REPLACEMENT

cardiagn.com

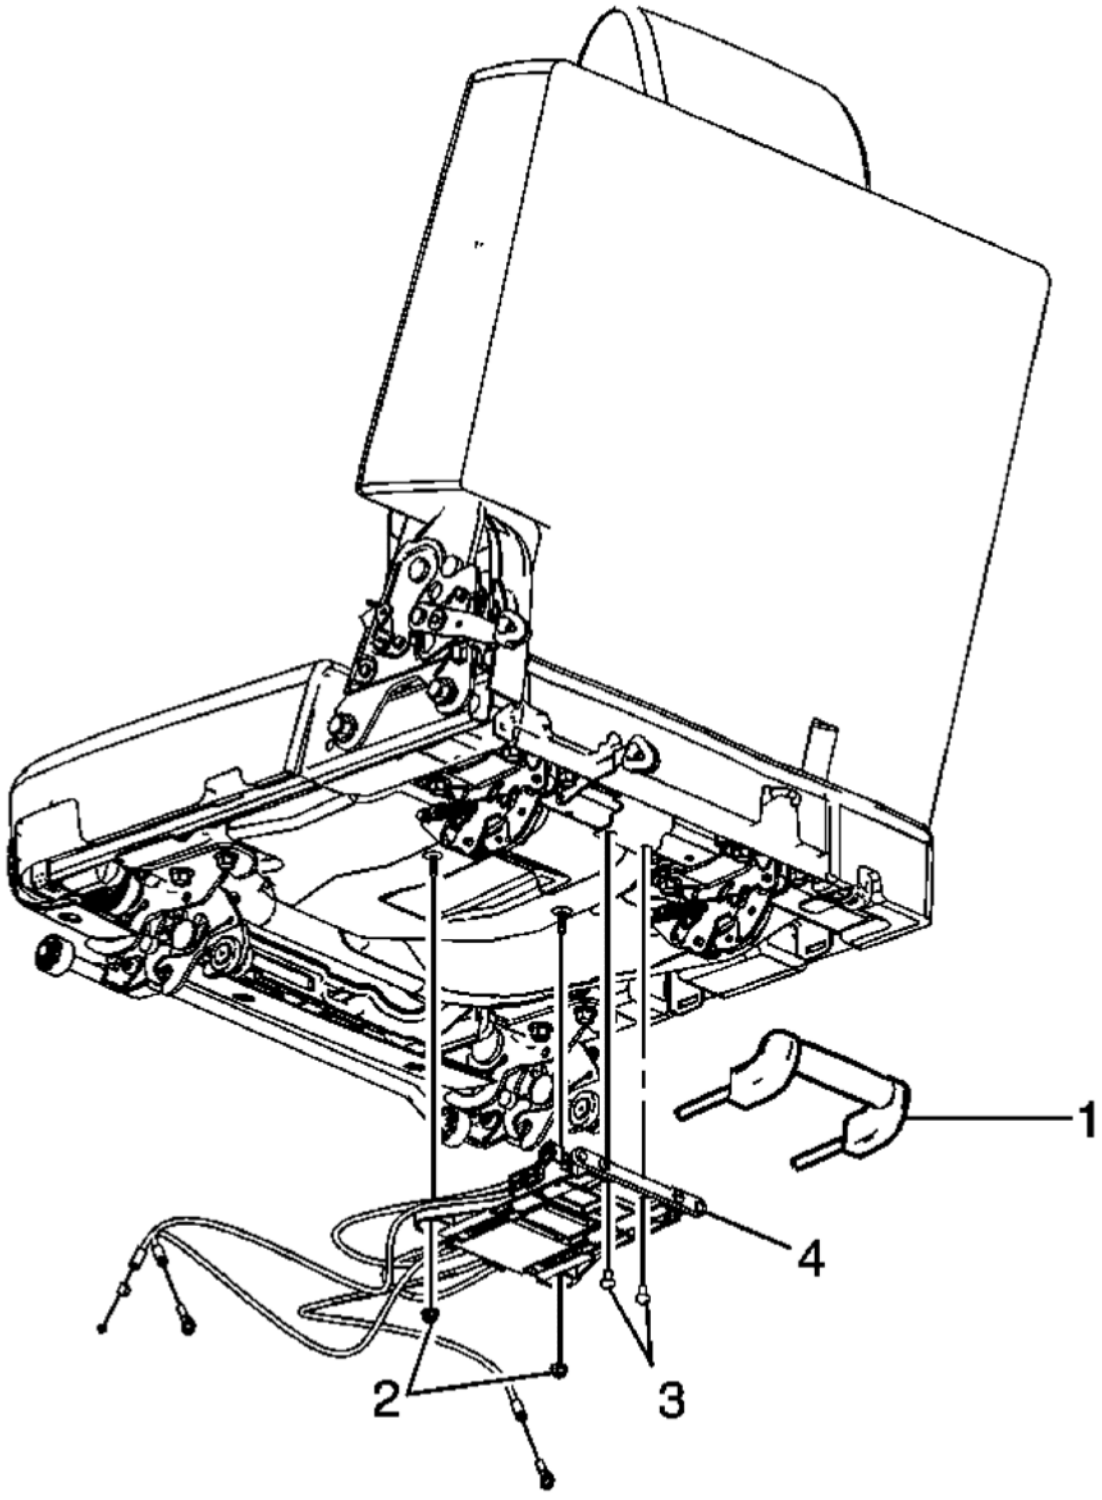


Fig. 85: View Of Rear Seat No. 2 Back Cushion Latch, Nuts & Bolts
Courtesy of GENERAL MOTORS CORP.

cardiagn.com

Rear Seat Number 2 Load Floor Latch Cable Replacement

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**. 2. Remove the rear seat cushion trim covers. Refer to **Seat Cushion Panel Replacement - Rear No. 2 (AS3)** or **Seat Cushion Panel Replacement - Rear No. 2 (AW2)**.	
1	Rear Seat Latch Release Handle Refer to **Rear Seat Latch Release Handle Replacement (Rear No. 2)**.
2	Rear Seat No. 2 Back Cushion Latch Nut (Qty: 2) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
3	Rear Seat No. 2 Back Cushion Latch Bolt (Qty: 2) **Tighten:** 9 N.m (80 lb in)
4	Rear Seat No. 2 Back Cushion Latch **Tip:** Release the latch cables from the seat, note the locations for installation.

REAR SEAT NUMBER 2 LOAD FLOOR LATCH REPLACEMENT

cardiagn.com

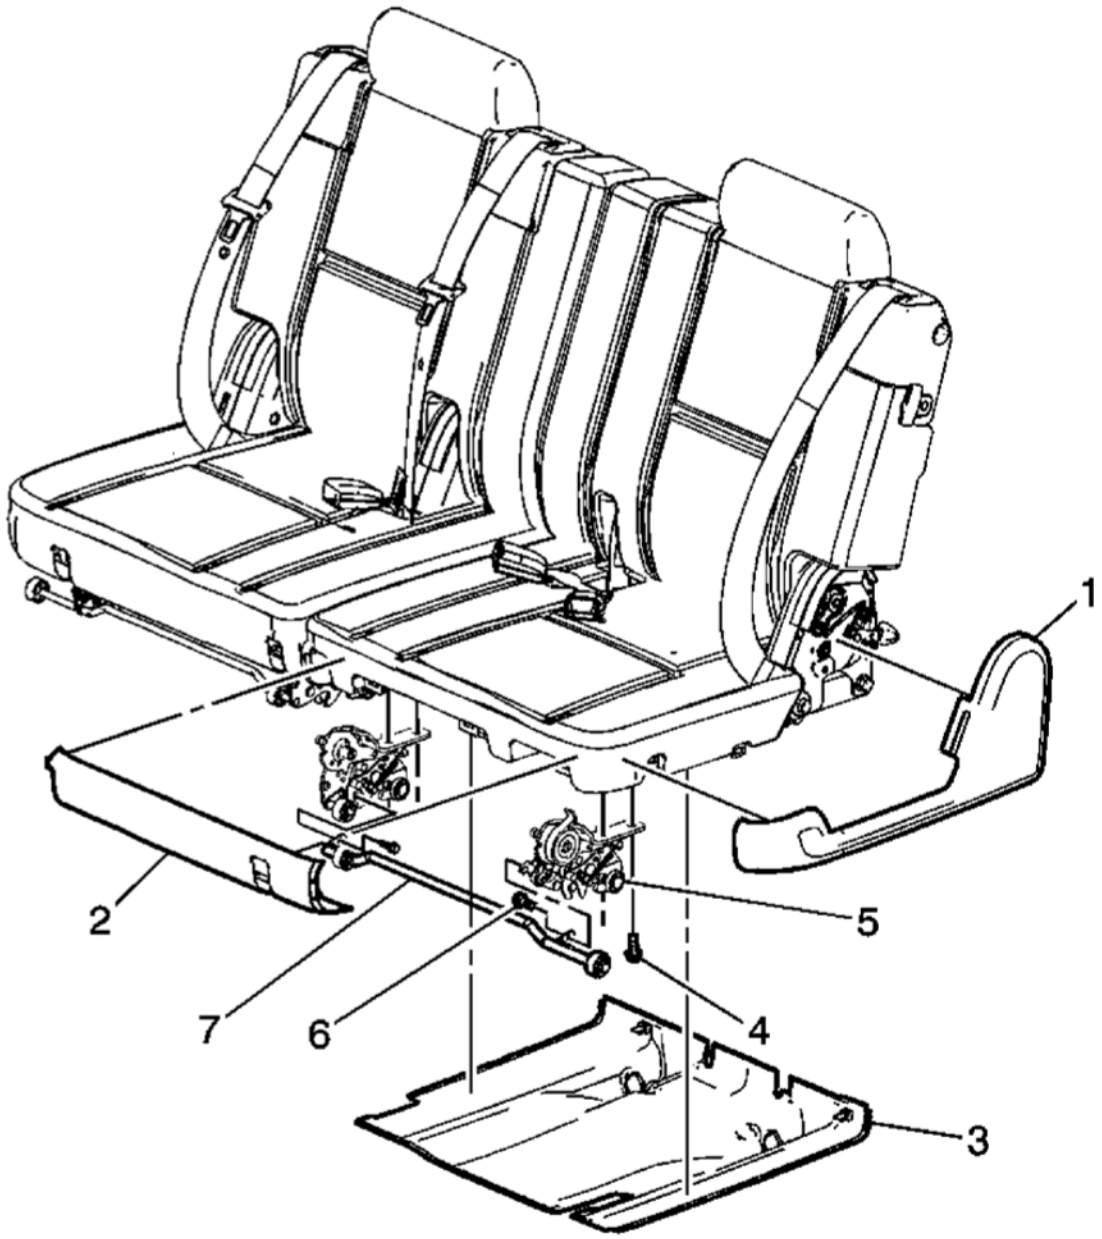


Fig. 86: Rear Seat No. 2 Load Floor Latch & Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Number 2 Load Floor Latch Replacement

Callout	Component Name
Preliminary Procedure: Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)** or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**.	
1	Rear Seat No. 2 Back Latch Finish Cover Refer to **Rear Seat Number 2 Back Cushion Latch Cover Replacement (AS3)** or **Rear**

cardiagn.com

	Seat Number 2 Back Cushion Latch Cover Replacement (AW2).
2	Rear Seat No. 2 Back Cushion Latch Cover Refer to **Seat Cushion Panel Replacement - Rear No. 2 (AS3)** or **Seat Cushion Panel Replacement - Rear No. 2 (AW2)**.
3	Rear Seat No. 2 Back Cushion Latch Cover Refer to **Seat Cushion Panel Replacement - Rear No. 2 (AS3)** or **Seat Cushion Panel Replacement - Rear No. 2 (AW2)**.
4	Rear Seat #2 Load Floor Latch Bolt (Qty: 4) **NOTE:** **Refer to Fastener Notice .** **Tighten:** 9 N.m (80 lb in)
5	Rear Seat #2 Load Floor Latch **Tip:** Release the cables from the latch, note cable location for installation.

REAR SEAT NUMBER 2 RISER LATCH ASSEMBLY REPLACEMENT

cardiagn.com

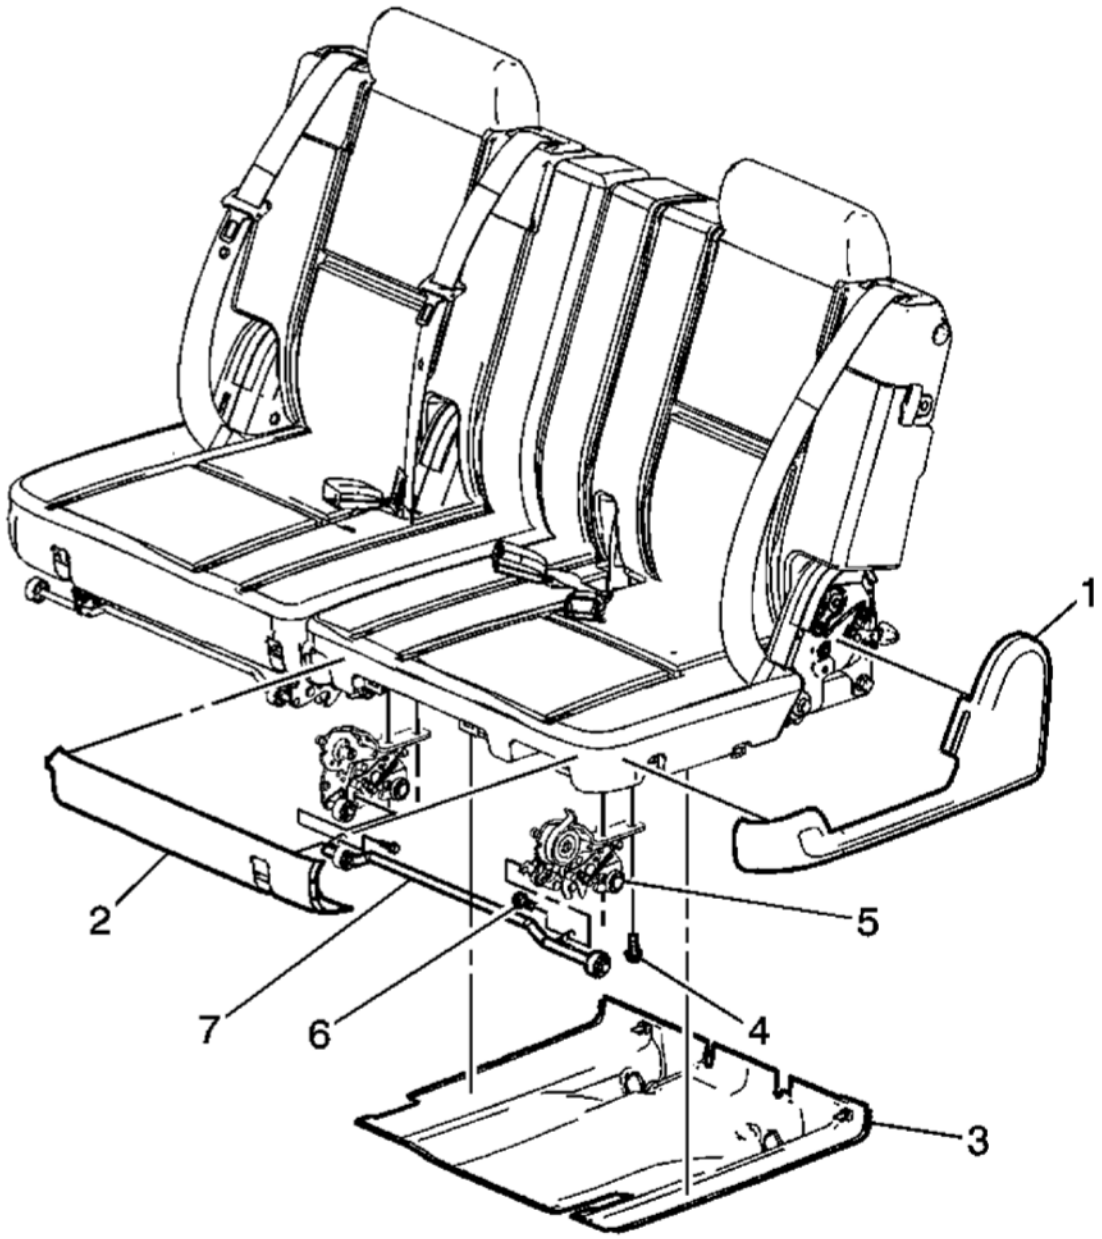


Fig. 87: View Of Rear Seat No. 2 Riser Latch Assembly Components
Courtesy of GENERAL MOTORS CORP.

Rear Seat Number 2 Riser Latch Assembly Replacement

Callout	Component Name
NOTE: Refer to Fastener Notice . **Fastener Tightening Specifications:** Refer to **Fastener Tightening Specifications**.**Preliminary Procedure:** Remove the rear seat. Refer to **Rear Number 2 Seat Replacement (Suburban/Yukon XL)**	

cardiagn.com

or **Rear Number 2 Seat Replacement (Tahoe/Yukon/Escalade)**.	
1	Rear Seat Hinge Finish Cover
2	Rear Seat Cushion Trim Panel
3	Rear Seat Latch Trim Cover
4	Rear Seat #2 Load Floor Latch Bolt (Qty: 4) **Tighten:** 9 N.m (80 lb in)
5	Rear Seat #2 Load Floor Latch

cardiagn.com