2008 ESCAPE Wiring Diagrams

FOREWORD

This wiring diagram incorporates the wiring schematics of the ESCAPE and available optional equipment. Actual vehicle wiring may vary slightly depending on optional equipment or local specifications, or both.

For proper repair and maintenance, a thorough familiarization with this manual is important, and it should always be kept in a handy place for quick and easy reference.

All the contents of this manual, including drawings and specifications, are the latest available at the time of printing. As modifications affecting repair or maintenance occur, relevant information supplementary to this volume will be made available at Ford dealers. This manual should be kept up-to-date.

Ford Motor Company reserves the right to alter the specifications and contents of this manual without obligation or advance notice.
All rights reserved. No part of this book may be reproduced or used in any form or by any means, electronic or mechanical—including photocopying and recording and the use of any kind of information storage and retrieval system—without permission in writing.

Ford Motor Company

APPLICATION:
This manual is applicable to vehicles beginning with the Vehicle Identification Numbers (VIN), and related materials shown on the following page.

CONTENTS

TITLE	SECTION
GENERAL INFORMATION	00
ENGINE	01
SUSPENSION	02
DRIVELINE/AXLE	03
BRAKES	04
TRANSMISSION/ TRANSAXLE	05
STEERING	06
HEATER, VENTILATION & AIR CONDITIONING (HVAC)	07
RESTRAINTS	08
BODY & ACCESSORIES	09

https://www.auto-manual.com/

VEHICLE IDENTIFICATION NUMBERS (VIN)
(CHASSIS NUMBERS)

https://www.auto-manual.com/

LFA	CKZTNX*2	000001–
LFA	CLZTNX*2	000001–
LFA	CMZTVX*2	000001–
LFA	CNZTVX*2	000001–
LFA	CWZTNX*2	000001–
LFA	CXZTVX*2	000001–
LFA	CYZTVX*2	000001–
LFA	YKZTNX*2	000001–
LFA	YLZTNX*2	000001–
LFA	YMZTVX*2	000001–
LFA	YNZTVX*2	000001–
LFA	YWZTNX*2	000001–
LFA	YXZTVX*2	000001–
LFA	YYZTVX*2	000001–

SYSTEM INDEX

https://www.auto-manual.com/

00 GENERAL INFORMATION

R READINGW IRING DIAGRAMS
- VEHICLE IDENTIFICATION NUMBER (VIN) CODE 2
- VEHICLE IDENTIFICATION NUMBERS (VIN) 3
- CONTENTS OF WIRING DIAGRAMS 4
- GROUND POINTS 5
- SYSTEM CIRCUIT DIAGRAM/ CONNECTOR DIAGRAM 6
- ROUTING DIAGRAM 8
- HARNESS SYMBOLS 9
- WIRING COLOR CODE 9
- SYMBOLS 9
- SERVICE WARNING AND CAUTION FOR VEHICLES WITH SRS AIR BAG SYSTEM 12
- SERVICE WARNING FOR VEHICLES WITH DISCHARGE HEADLIGHT 12
- ABBREVIATIONS USED IN THIS MANUAL 12

P ELECTRICAL SYSTEM GENERAL PROCEDURES 14

POWER,G ROUND & COMMON CONNECTOR

E ELECTRICALW IRING SCHEMATIC 18
F FUSE BOX 20
J CENTRAL JUNCTION BOX (CJB) 22
C COMMON CONNECTOR LIST 24
G GROUND POINT 28

DATA LINK CONNECTOR

D DATA LINK CONNECTOR
- AJ (3.0L Duratec) 30
- L3 32

01 ENGINE

12 COOLING SYSTEM
- AJ (3.0L Duratec) 34
- L3 36

14 FUEL SYSTEM 38

17 CHARGING SYSTEM
- AJ (3.0L Duratec) 40
- L3 42

19 STARTING SYSTEM
- AJ (3.0L Duratec) 44
- L3 46

20 CRUISE CONTROL SYSTEM
- AJ (3.0L Duratec) 48

40 CONTROL SYSTEM
- AJ (3.0L Duratec):INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION 52
- L3:INCLUDES AUTOMATIC TRANSAXLE CONTROL INFORMATION 70

03 DRIVELINE/AXLE

18 4-WHEEL DRIVE
- ELECTRONIC 4WD CONTROL SYSTEM (TRIBUTE) ... 86

04 BRAKES

13 ANTILOCK BRAKE SYSTEM
- AJ (3.0L Duratec) 88
- L3 90

05 TRANSMISSION/TRANSAXLE

18 AUTOMATIC TRANSAXLE SHIFT MECHANISM
- KEY INTERLOCK SYSTEM 92
- SHIFT-LOCK SYSTEM 92

07 HEATER, VENTILATION &A IR CONDITIONING (HVAC)

40 CONTROL SYSTEM
- EATC SYSTEM 94
- HEATER AND MANUAL AIR CONDITIONER SYSTEM 98
- A/C COMPRESSOR CONTROL 102

08 RESTRAINTS

10 AIR BAG SYSTEM
- AIR BAG SYSTEM (INCLUDES PRE-TENSIONER SEAT BELT INFORMATION) 104

09 BODY & ACCESSORIES

12 GLASS/WINDOWS/MIRRORS
- REAR WINDOW DEFROSTER 108
- POWER WINDOW SYSTEM
  - WITH AUTO SWITCH 110
  - WITHOUT AUTO SWITCH 114
- POWER OUTER MIRROR 118
- POWER SEAT 120

14 SECURITYA ND LOCKS
- POWER DOOR LOCK SYSTEM WITHOUT DOUBLE LOCKING SYSTEM 122
- IMMOBILIZER SYSTEM (PATS) 126
- KEYLESS ENTRY SYSTEM 128

15 SUNROOF 130

18 LIGHTING SYSTEMS
- HEADLIGHT 132
- LICENSE PLATE LIGHT 136
- PARKING LIGHT 136
- TAILLIGHT 136
- FRONT FOG LIGHT 138
- READ FOG LAMPS J87S USE LHD 144
- TURN AND HAZARD WARNING LIGHT 144
- BACK-UP LIGHT 148
- BRAKE LIGHT 150
- HIGH-MOUNT BRAKE LIGHT 150
- CARGO COMPARTMENT LIGHT 152
- INTERIOR LIGHT 152
- MAP LIGHT 152
- COURTESY LIGHT 154
- ILLUMINATION LIGHT 156
- HEADLIGHT LEVELING SYSTEM 162
- VANITY MIRROR ILLUMINATION 164

19 WIPER/WASHER SYSTEM
- WINDSHIELD WIPER AND WASHER 166
- REAR WIPER AND WASHER
  - TRIBUTE 168
  - ESCAPE 170

20 ENTERTAINMENT
- ACCESSORY SOCKET 172
- CIGARETTE LIGHTER 172
- AUDIO SYSTEM 174
- USB&AUX-IN 178
- CD CHANGER 180
- AUDIO WOOFER SYSTEM AT-3 182

21 POWER SYSTEMS
- IGNITION SWITCH 184


22 INSTRUMENTATION/DRIVER INFO.
- INSTRUMENT CLUSTER 188
- HORN 198

40 CONTROL SYSTEM
- GEM (GENERIC ELECTRONIC MODULE) 200

50 BACK SONAR SYSTEM
- BACK SONAR SYSTEM (J87R) 206

Two digits (section ID) indicated in front of each title are commonly used with the Workshop Manual.

VEHICLE IDENTIFICATION NUMBER (VIN) CODE

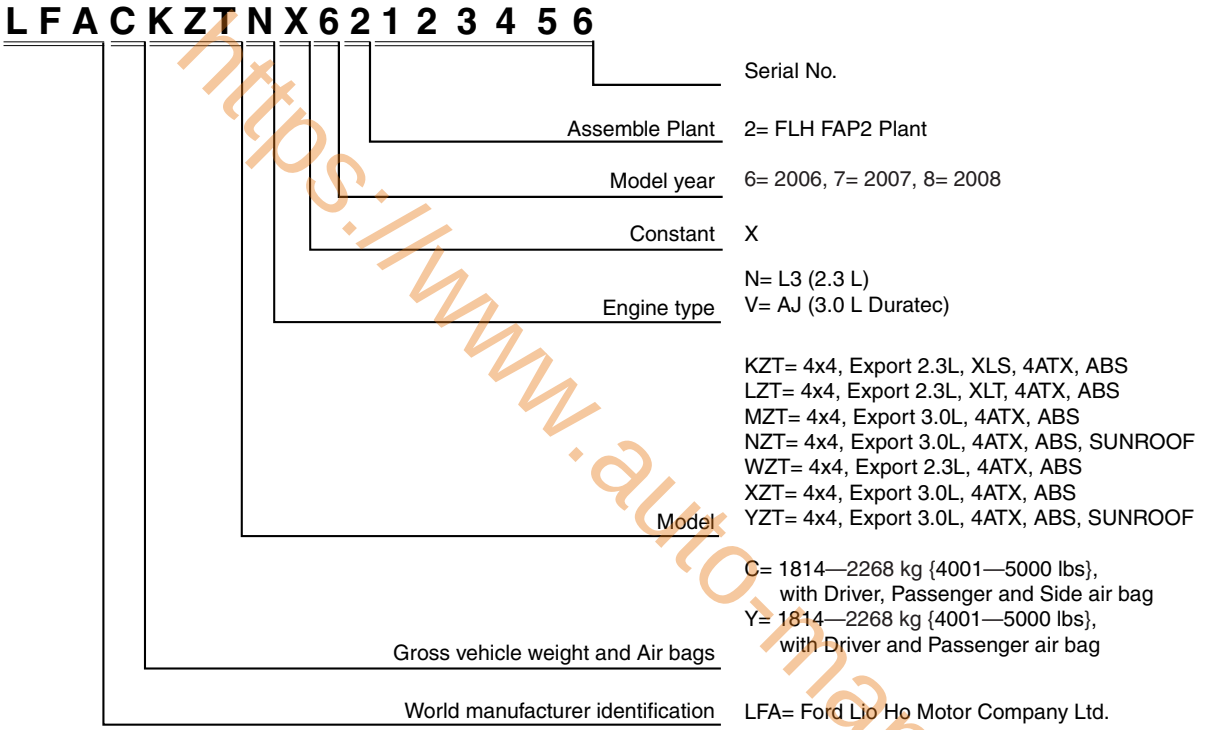

https://www.auto-manual.com/


VEHICLE IDENTIFICATION NUMBERS (VIN)

LFA	CKZTNX*2	000001–
LFA	CLZTNX*2	000001–
LFA	CMZTVX*2	000001–
LFA	CNZTVX*2	000001–
LFA	CWZTNX*2	000001–
LFA	CXZTVX*2	000001–
LFA	CYZTVX*2	000001–
LFA	YKZTNX*2	000001–
LFA	YLZTNX*2	000001–
LFA	YMZTVX*2	000001–
LFA	YNZTVX*2	000001–
LFA	YWZTNX*2	000001–
LFA	YXZTVX*2	000001–
LFA	YYZTVX*2	000001–

https://www.auto-manual.com/

CONTENTS OF WIRING DIAGRAMS

- This manual comprises the sections shown below.

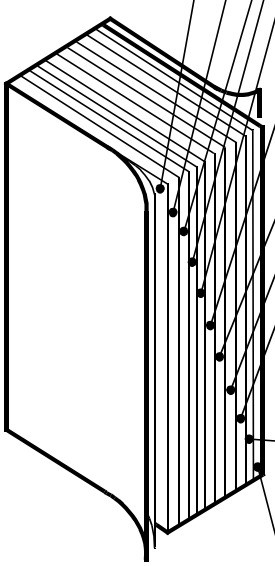

GENERAL INFORMATION	00	R	Reading wiring diagrams	A how-to on using and reading wiring diagrams, using test equipment, checking harness and connectors, and finding trouble spots
		P	Electrical system general procedures	
		E	Electrical wiring schematic	Shows main fuses and other fuses for each system
		F	Fuse box complete wiring system	Shows internal circuits and connectors
		J	Joint box/Junction box complete wiring system	
		C	Common connector list	Shows connectors common throughout system
		G	Ground point	Ground routes from and to the battery
		D	Data link connector	Shows circuit and connector diagrams and component and connector location diagrams
ENGINE	01	12	Cooling system	
		14	Fuel system	
		17	Charging system	
		18	Ignition system	
		19	Starting system	
		20	Cruise control system	
		40	Control system	
SUSPENSION	02	12	Wheel and tires	
DRIVELINE/AXLE	03	18	4-Wheel drive	
BRAKES	04	13	Antilock brake system	
		14	Traction control system	
		15	Dynamic stability control	
TRANSMISSION/TRANSAXLE	05	13	Automatic transmission	
		14	Automatic transmission shift mechanism	
		17	Automatic transaxle	
		18	Automatic transaxle shift mechanism	
STEERING	06	13	Electric power steering (EPS)	
		14	Power steering	
HEATER, VENTILATION & AIR CONDITIONING (HVAC)	07	40	Control system	
RESTRAINTS	08	10	Air bag system	
		11	Seat belt	
BODY & ACCESSORIES	09	12	Glass/Windows/Mirrors	
		13	Seats	
		14	Security and locks	
		15	Sunroof	
		18	Lighting systems	
		19	Wiper/Washer system	
		20	Entertainment	
		21	Power systems	
		22	Instrumentation/Driver info.	
		40	Control system	
AI			Alphabetical Index	Gives page number of circuit diagram for each component


Depending on the vehicle model, the actual sections may be different.



https://www.autoManuals.com/

GROUND POINTS

- This shows ground points of the harness.

GROUND POINTS (4SD)

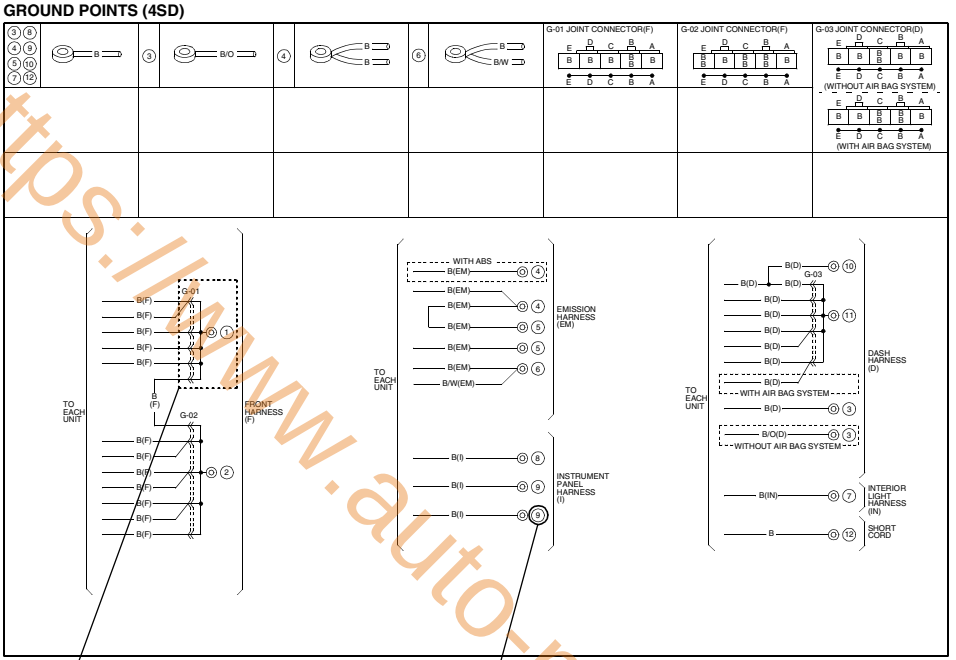


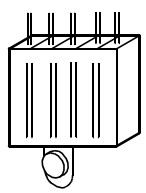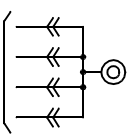Ground indication	
On vehide	Indication
	To circuit 

On circuit diagrams and ground points

The ground connection numbers in system circuit diagrams correspond to those in the ground point diagram.

CONTROL SYSTEM

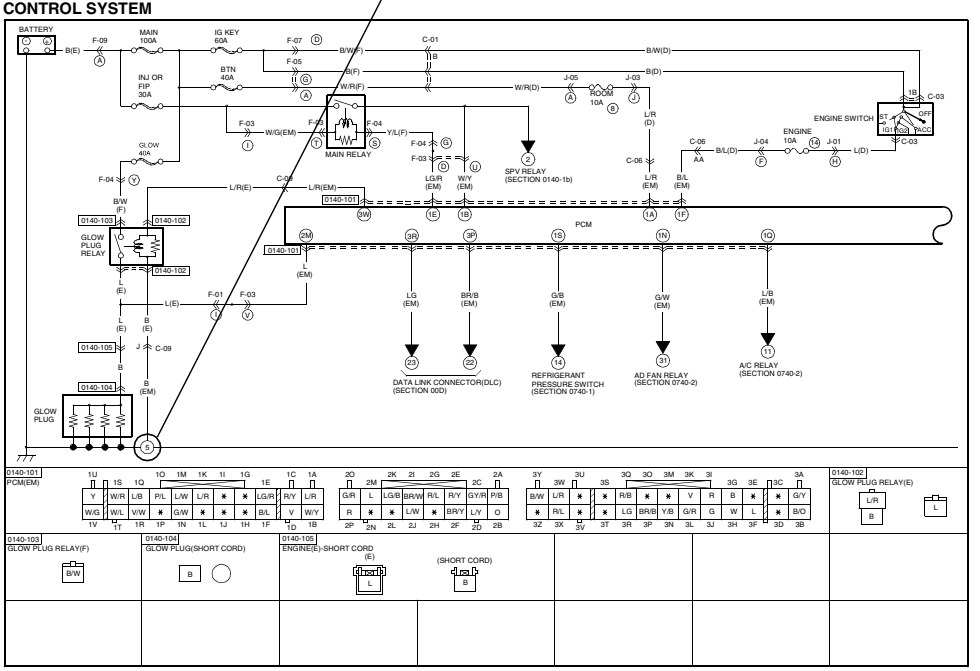


https://www.auto-manual.com/

SYSTEM CIRCUIT DIAGRAM/CONNECTOR DIAGRAM

- These diagrams show the circuits for each system, from the power supply to the ground. The power supply side is on the upper part of the page, the ground side on the lower part. The diagrams describe circuits with the ignition switch off.

  Below is an explanation of the various points in the diagram.

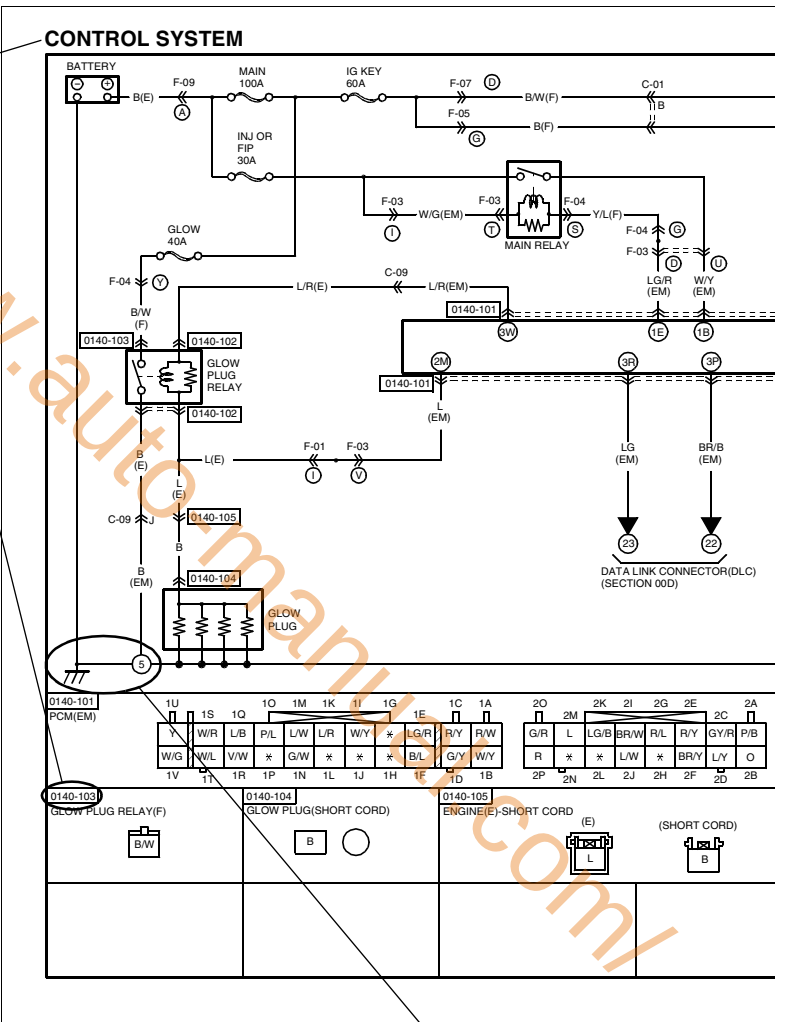

Connector code





The prefix letter indicates the system in which the connector is used.

- **F**: Fuse box connectors
- **J**: Joint box/Junction box connectors
- **C**: Common connectors
- **G**: Ground point connectors
- **D**: Data link connector

0112: Cooling system connectors
0114: Fuel system connectors
0117: Charging system connectors
0118: Ignition system connectors
0119: Starting system connectors
0120: Cruise control system connectors
0140: Engine control system connectors
0212: Wheel and tires connectors
0318: 4-Wheel drive connectors
0413: Antilock brake system connectors
0414: Traction control system connectors
0415: Dynamic stability control connectors
0513: Automatic transmission connectors
0514: Automatic transmission shift mechanism connectors
0517: Automatic transaxle connectors
0518: Automatic transaxle shift mechanism connectors
0613: Electric power steering (EPS) connectors
0614: Power steering connectors
0740: Heater, ventilation & air conditioning (HVAC) control system connectors
0810: Air bag system connectors
0811: Seat belt connectors
0912: Glass/Windows/Mirrors connectors
0913: Seats connectors
0914: Security and locks connectors
0915: Sunroof connectors
0918: Lighting systems connectors
0919: Wiper/Washer system connectors
0920: Entertainment connectors
0921: Power systems
0922: Instrumentation/Driver info. Connectors
0940: Control system

Ground numbers


A harness ground is represented differently than a unit ground.

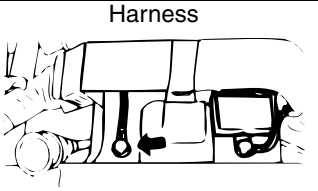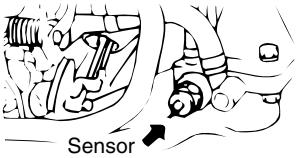Types of grounds	Symbol
Harness 	
Unit 	

https://www.auto-manuals.com/

The number indicates that the circuit continues to the related system diagram.

System code

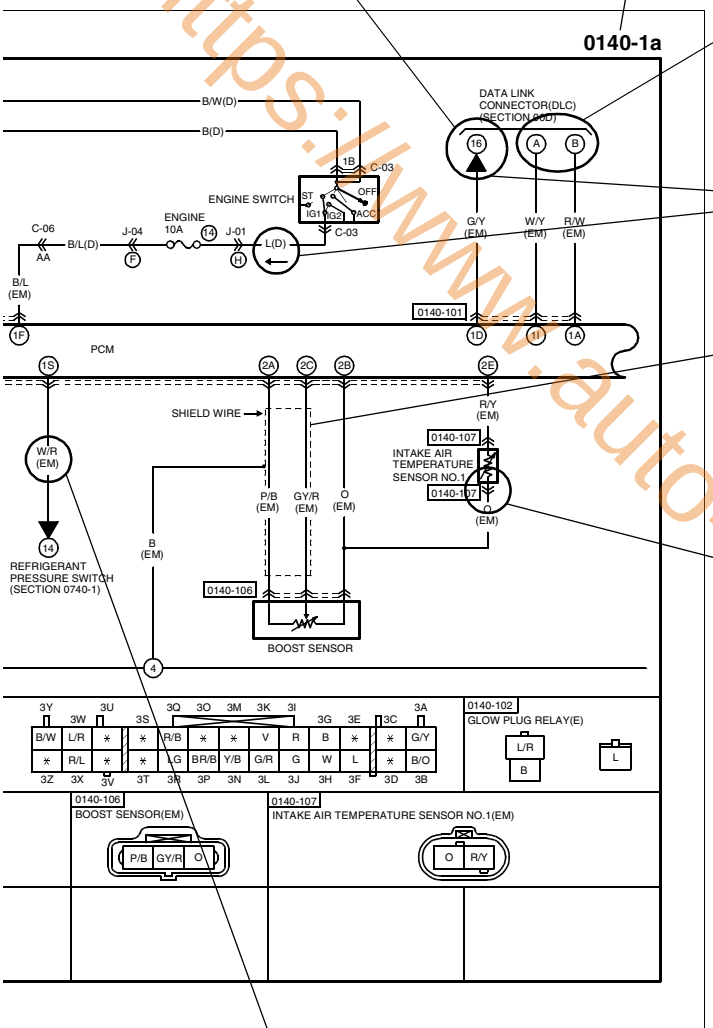

Multiplex communication

Indicates communication with connected parts. Signals are transmitted back and forth between connected parts.

Current symbol




Current flows in the direction of the arrow.

Indicates shielded wire.*

* Shielded wire :
Prevents signal disturbances from electrical interference.
Wire is covered by a metal meshing for grounding.


Connector symbols

- Male and female connectors are represented as follows in the circuit and connector diagrams.

		Circuit diagram symbol	Connector diagram symbol
Male			
Female			

- Like connectors are linked by dashed lines between the connector symbols.
- Connector diagrams show connectors on the harness side. The terminal indicates the view from the harness side.

(Example)

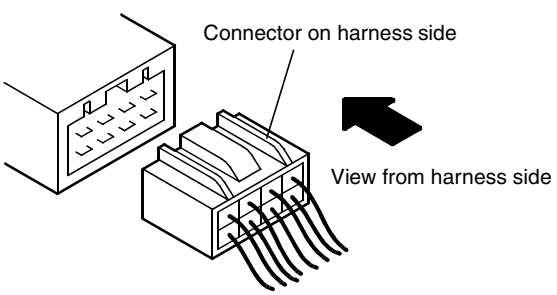


- Colors for connectors except white are given in locations.
- Unused terminals are indicated by ∗.

Wire color code (harness symbol)

- Two-color wires are indicated by a two-letter symbol.The first indicates the base color of the wire, the second the color of the stripe.
  For example:
  W/R is a white wire with a red strip
  BR/Y is a brown wire with a yellow strip

Symbol
(Example)

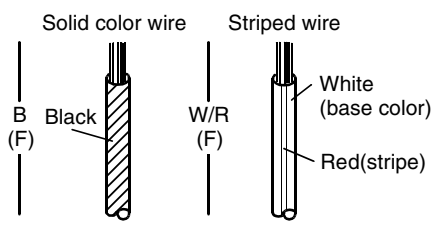

- The harness symbol is in ( ) following the harness symbols (refer to P-9.).

https://www.auto-manual.com/

ROUTING DIAGRAM

- The routing diagram shows where electrical components are on the system circuit diagram by call out line and connector symbols.

https://www.auto-manual.com/

Connector symbol

Shows the system that uses the connector.

(Example)


Connector	Symbol
Common connectors	C-02
System connectors	0922-05

Component name

Shows the names of components in routing diagrams.

Ground symbol

Shows the ground in system diagrams.

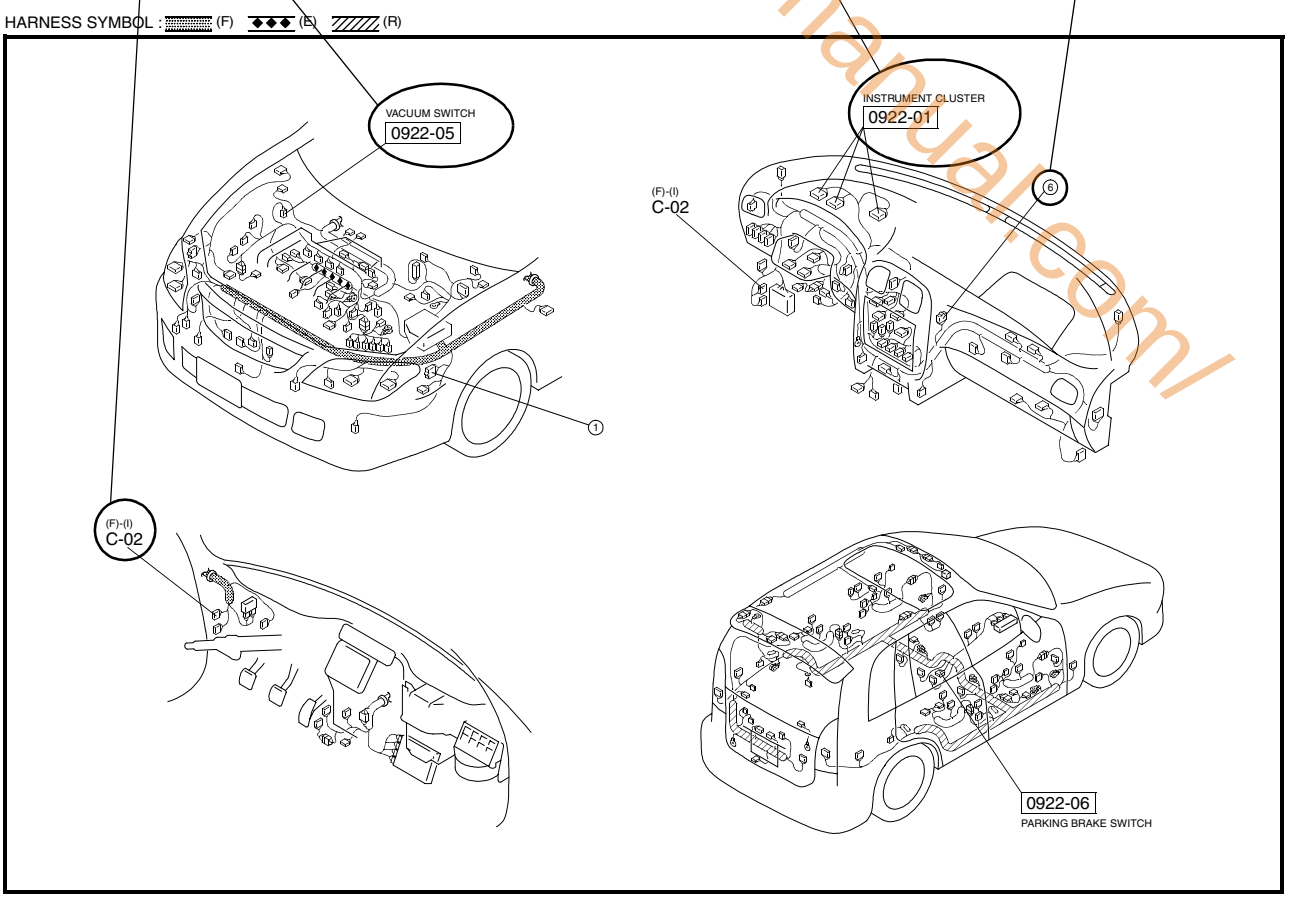







HARNESS SYMBOLS

DESCRIPTION OF HARNESS	SYMBOL		DESCRIPTION OF HARNESS	SYMBOL	
FRONT HARNESS	(F)		DOOR No. 1 HARNESS	(DR1)	
FRONT No. 2 HARNESS	(F2)		DOOR No. 2 HARNESS	(DR2)	—
ENGINE HARNESS	(E)		DOOR No. 3 HARNESS	(DR3)	
DASH HARNESS	(D)		DOOR No. 4 HARNESS	(DR4)	
REAR HARNESS	(R)		FLOOR HARNESS	(FR)	—
REAR No. 2 HARNESS	(R2)		INTERIOR LIGHT HARNESS	(IN)	—
REAR No. 3 HARNESS	(R3)		A/C HARNESS	(AC)	—
INSTRUMENT PANEL HARNESS	(I)	—	INJECTION HARNESS	(INJ)	—
EMISSION HARNESS	(EM)		HAND BRAKE HARNESS	(HB)	—
EMISSION No. 2 HARNESS	(EM2)	—			
EMISSION No. 3 HARNESS	(EM3)				

WIRING COLOR CODE













COLOR	CODE	COLOR	CODE
BLACK	B	ORANGE	O
BLUE	L	PINK	P
BROWN	BR	RED	R
DARK BLUE	DL	SKY BLUE	SB
DARK GREEN	DG	TAN	T
GRAY	GY	VIOLET	V
GREEN	G	WHITE	W
LIGHT BLUE	LB	YELLOW	Y
LIGHT GREEN	LG		









SYMBOLS








Symbol	Meaning	Symbol	Meaning
Battery 	• Generates electricity through chemical reaction. • Supplies direct current to circuits.	Light  	• Emits light and generates heat when current flows through filament.
Ground (1) 	• Connecting point to vehicle body or other ground wire where current flows from positive to negative terminal of battery. • Ground (1) indicates a ground point to body through wire harness. • Ground (2) indicates point where component is grounded directly to body. Remarks • Current will not flow through a circuit if ground is faulty.	Resistance 	• A resistor with a constant value. • Mainly used to protect electrical components in circuits by maintaining rated voltage.
Ground (2) 			
Ground (3) 		Motor 	• Converts electrical energy into mechanical energy.




https://www.auto-manual.com/

https://www.auto-manual.com/

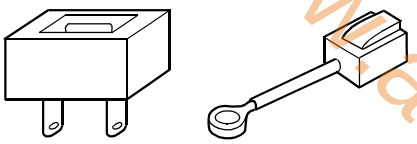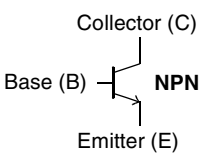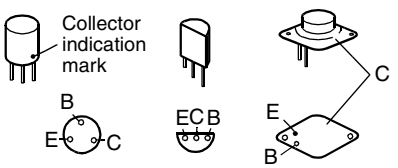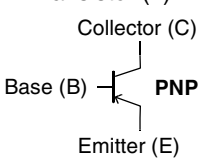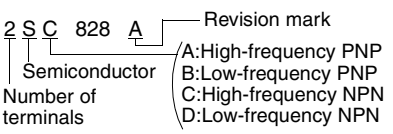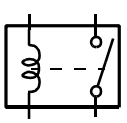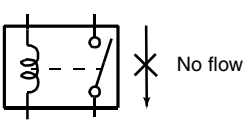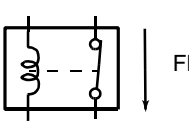Symbol	Meaning
Fuse 	• Melts when current flow exceeds that specified for circuit, interrupts current flow. Precautions • Do not replace with fuses exceeding specified capacity. <Blade type> <Tube type>  <Cartridge type> <Fusible link> 
Fuse (For high current fuse)/ Fusible link 	
Transistor (1)  	• Electrical switching component. • Turns on when voltage is applied to the base (B). 
Transistor (2)  	• Reading code. 
Switch (1)  Normally open	• Allows or breaks current flow by opening and closing curcuits.
Switch (2)  Normally closed	
Autostop switch 	• Automatically shuts off circuit when certain conditions are met.
Relay (1)  Normally open	• Current flowing through coil produces electromagnetic force causing contact to open or close. No current to coil  Current to coil 

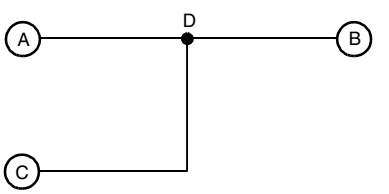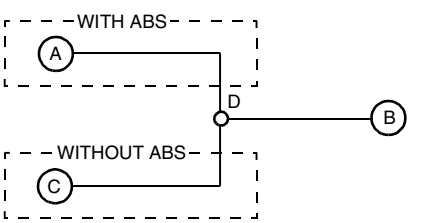Symbol	Meaning
Pump  	• Pulls in and discharges gases and liquids.
Cigarette lighter 	• Electrical coil that generates heat.
Accessory socket 	• Interior power supply.
Horn 	• Generates sound when current flows.
Speaker 	
Heater 	• Generates heat when current flows.
Ignition switch  	• Turning ignition key switches circuit to operate various component. (NOTE) Ignition switch is called engine switch on diesel vehicles.
Harness **Connection**  When circuit C-D is connected to circuit A-B, the connection D is indicated by a black dot. **Selection**  Diversion point D for the different circuits according to the vehicle's specification is indicated by a white dot.	 For vehicles with ABS, use the A-B circuit.  For vehicles without ABS, use the C-B circuit.

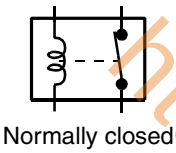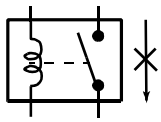Symbol	Meaning	Symbol	Meaning
Relay (2)  Normally closed	• Current flowing through coil produces electromagnetic force causing contact to close. No current to coil  Flow Current to coil  No flow		
Sensor (1) 	• Detects characteristics such as intake manifold vacuum and airflow amount according to resistance variation.	Solenoid 	• Current flowing through coil generates electromagnetic force to operate plungers.
Sensor (2) 	• Detects resistance variation according to operation of other parts.	Diode 	• Known as a semiconductor rectifier, the diode allows current flow in one direction only. Cathode(K) Anode(A) Flow of electric current
Sensor (3) 	• A resistor whose resistance variation according to temperature variation. • When temperature increases, resistance decreases.		
Sensor (4) 	• Detects pulse signals from rotating object.	Light-emitting diode (LED) 	• A diode that lights when current flows. • Unlike ordrinary bulbs, the diode does not generate heat when lit. Cathode(K) Anode(A) Cathode(K) Anode(A) Flow of current
Sensor (5) 	• Generates potential difference when tension or pressure is applied.		
Capacitor 	• Component that temporarily stores electrical charge.	Reference diode (Zener diode) 	• Allows current to flow in one direction up to a certain voltage; allows current to flow in the other direction once that voltage is exceeded.

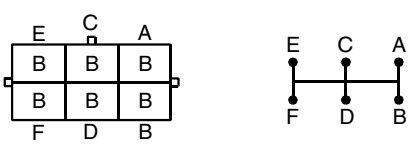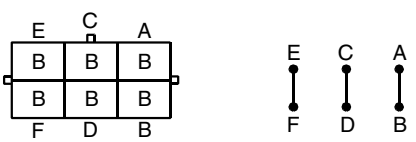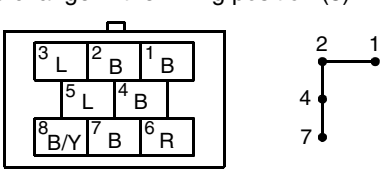Symbol	Meaning
Extent of the change in the wiring position (1) 	• The wiring position can be exchanged freely within the connector.
Extent of the change in the wiring position (2) 	• The wiring position can be exchanged according to the following combinations only. Between A and B, Between C and D, Between E and F
Extent of the change in the wiring position (3) 	• The wiring position can be exchanged according to the following combinations only. Between 1, 2, 4 and 7. • The wiring positions may be indicated by numbers for some connectors.

https://www.auto-manuals.com/

SERVICE WARNING AND CAUTION FOR VEHICLES WITH SRS AIR BAG SYSTEM

If the SRS air bag system inspection and servicing is not done using the correct procedure, an air bag could operate (deploy) accidentally, which may cause injury or the system to operate (deploy) improperly.
Always follow the service warnings and cautions when performing the SRS air bag system-related inspection or servicing.

SERVICE WARNING FOR VEHICLES WITH DISCHARGE HEADLIGHT

If the discharge headlight inspection and servicing is not done using the correct procedure, it could result in electrical shock.
Always follow the service warnings when performing the discharge headlight-related inspection or servicing.

ABBREVIATIONS USED IN THIS MANUAL

3GR	THIRD GEAR
4GR	FOURTH GEAR
A	AMPERE
A/C	AIR CONDITIONING
A/F	AIR FUEL
AAS	AUTO ADJUSTING SUSPENSION
ABS	ANTI-LOCK BRAKING SYSTEM
ACC	ACCESSORIES
ACV	AIR CONTROL VALVE
ADD	ADDITIONAL
AIS	AIR INJECTION SYSTEM
ALL	AUTOMATIC LOAD LEVELING
AM	AMPLITUDE MODULATION
AMP	AMPLIFIER
ANT	ANTENNA
ASV	AIR SUPPLY VALVE
AT	AUTOMATIC TRANSMISSION
ATX	AUTOMATIC TRANSAXLE
B+	BATTERY POSITIVE VOLTAGE
BAC	BYPASS AIR CONTROL
CAN	CONTROLLER AREA NETWORK
CIGAR	CIGARETTE
CIS	CONTINUOUS FUEL INJECTION SYSTEM
CKP	CRANKSHAFT POSITION SENSOR
CM	CONTROL MODULE
CMP	CAMSHAFT POSITION SENSOR
COMBI	COMBINATION
CON	CONDITIONER
CONT	CONTROL
CPU	CENTRAL PROCESSING UNIT
DEF	DEFROSTER
DI	DISTRIBUTOR IGNITION
DLC	DATA LINK CONNECTOR
DLI	DISTRIBUTORLESS IGNITION
DOHC	DOUBLE-OVERHEAD CAMSHAFT
DRL	DAYTIME RUNNING LIGHT
DTC	DIAGNOSTIC TROUBLE CODE(S)
DTM	DIAGNOSTIC TEST MODE
ECPS	ELECTRONICALLY CONTROLLED POWER STEERING
ECT	ENGINE CONTROL TEMPERATURE

EGR	EXHAUST GAS RECIRCULATION
EHPAS	ELECTRO HYDRAULIC POWER ASSIST STEERING
EI	ELECTRONIC IGNITION
ELEC	ELECTRIC
ELR	EMERGENCY LOCKING RETRACTOR
ET	ELECTRONIC THROTTLE
EPS	ELECTRIC POWER STEERING
EVAP	EVAPORATIVE EMISSION
F	FRONT
F/I	FUEL INJECTOR
FICB	FAST-IDLE CAM BREAKER
FM	FREQUENCY MODULATION
FP	FUEL PUMP
FPR	FUEL PUMP RELAY
GEN	GENERATOR
GND	GROUND
H/D	HEATER/DEFROSTER
HEAT	HEATER
HI	HIGH
HO2S	HEATED OXYGEN SENSOR
HS	HIGH SPEED
HU	HYDRAULIC UNIT
IAC	IDLE AIR CONTROL
IAT	INTAKE AIR TEMPERATURE
IG	IGNITION
ILLUMI	ILLUMINATION
INT	INTERMITTENT
JB	JOINT BOX
KS	KNOCK SENSOR
LCD	LIQUID CRYSTAL DISPLAY
LF	LEFT FRONT
LH	LEFT HAND
LO	LOW
LR	LEFT REAR
M	MOTOR
MAF	MASS AIR FLOW
MAP	MANIFOLD ABSOLUTE PRESSURE
MFI	MULTIPORT FUEL INJECTION
MID	MIDDLE
MIL	MALFUNCTION INDICATOR LAMP
MIN	MINUTE

https://www.auto-manual.com/

MIX	MIXTURE
MPX	MULTIPLEX
MS	MIDDLE SPEED
MT	MANUAL TRANSMISSION
MTX	MANUAL TRANSAXLE
N	NEUTRAL
NC	NORMALLY CLOSED
NO	NORMALLY OPEN
O2S	OXYGEN SENSOR
OBD	ON-BOARD DIAGNOSTIC
O/D	OVER DRIVE
OFF	SWITCH OFF
ON	SWITCH ON
OSC	OSCILLATOR
P	POWER
P/S	POWER STEERING
PCM	POWERTRAIN CONTROL MODULE
PJB	PASSENGER JUNCTION BOX
PNP	PARK/NEUTRAL POSITION
PRC	PRESSURE REGULATOR CONTROL
PRG	PURGE SOLENOID VALVE
PSP	POWER STEERING PRESSURE
PTC	POSITIVE TEMPERATURE COEFFICIENT HEATER
PWM	PULSE WIDTH MODULATION
QSS	QUICK-START SYSTEM
R	REAR
REC	RECIRCULATION
RES	REAR ENTERTAINMENT SYSTEM
RF	RIGHT FRONT
RH	RIGHT HAND
RPM	REVOLUTIONS PER MINUTE
RR	RIGHT REAR
SAS	SOPHISTICATED AIR BAG SENSOR
SFI	SEQUENTIAL MULTIPOINT FUEL INJECTION
SOL	SOLENOID
SPV	SPILL VALVE
ST	START
SW	SWITCH
TC	TURBOCHARGER
TCC	TORQUE CONVERTER CLUTCH
TCM	TRANSMISSION(TRANSAXLE) CONTROL MODULE
TCS	TRACTION CONTROL SYSTEM
TEMP	TEMPERATURE
TFT	TRANSAXLE FLUID TEMPERATURE
TICS	TRIPLE INDUCTION CONTROL SYSTEM
TNS	TAIL NUMBER SIDE LIGHTS

TP	THROTTLE POSITION SENSOR
TR	TRANSMISSION(TRANSAXLE) RANGE
TWS	TOTAL WIRING SYSTEM
V	VOLT
VAF	VOLUME AIR FLOW SENSOR
VENT	VENTILATION
VICS	VARIABLE INERTIA CHARGING SYSTEM
VOL	VOLUME
VR	VOLTAGE REGULATOR
VRIS	VARIABLE RESONANCE INDUCTION SYSTEM
VSS	VEHICLE SPEED SENSOR
VTCS	VARIABLE TUMBLE CONTROL SYSTEM
W	WATT(S)
WOT	WIDE OPEN THROTTLE


http://www.auto-manual.com/

ELECTRICAL PARTS

B6U000000006W03

Battery Cable


- Before disconnecting connectors or removing electrical parts, disconnect the negative battery cable.

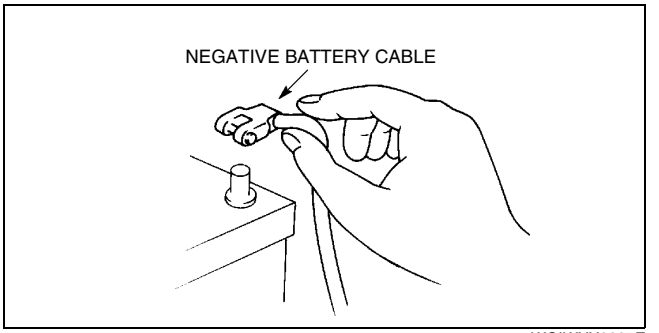

WGIWXX0007E

Wiring Harness


- To remove the wiring harness from the clip in the engine room, pry up the hook of the clip using a flathead screwdriver.

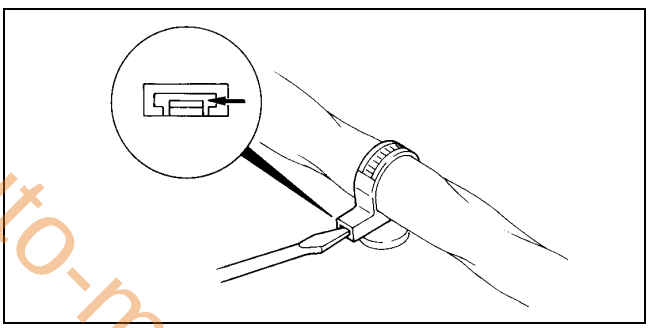

WGIWXX0039E

Caution

- **Do not remove the Harness protective tape. Otherwise, the wires could rub against the body, which could result in water penetration and electrical shorting.**

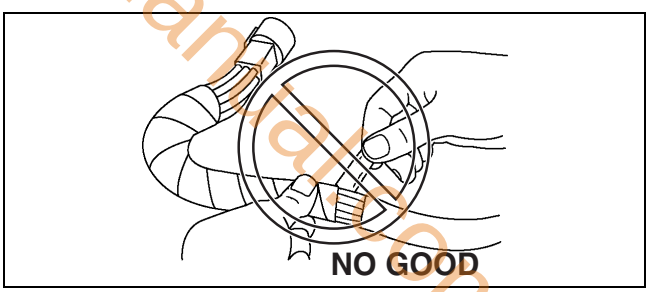

WGIWXX0040E


CONNECTORS

Data Link Connector

- Insert the probe into the terminal when connecting a jumper wire to the data link connector.

Caution


- **Inserting a jumper wire probe into the data link connector terminal may damage the terminal.**

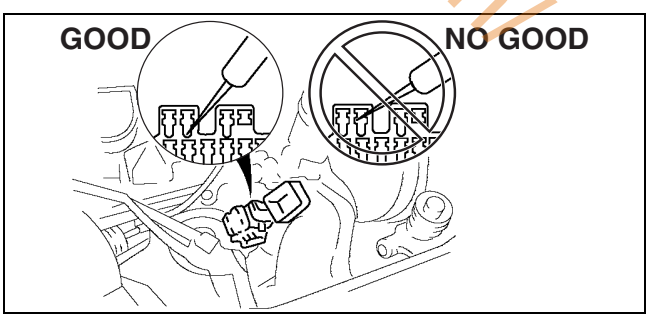

X3U000WAY

Disconnecting Connectors


- When disconnecting connector, grasp the connectors, not the wires.

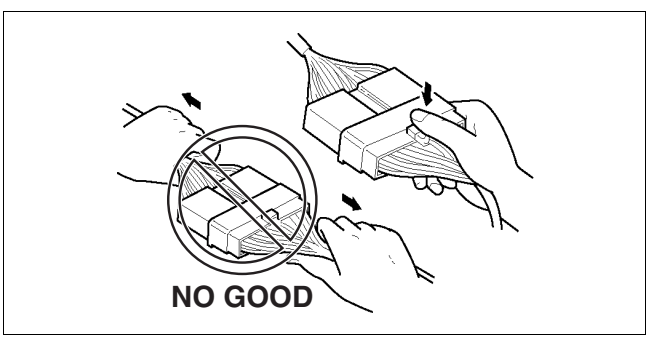

WGIWXX0041E

https://www.auto-manuals.com/


- Connectors can be disconnected by pressing or pulling the lock lever as shown.

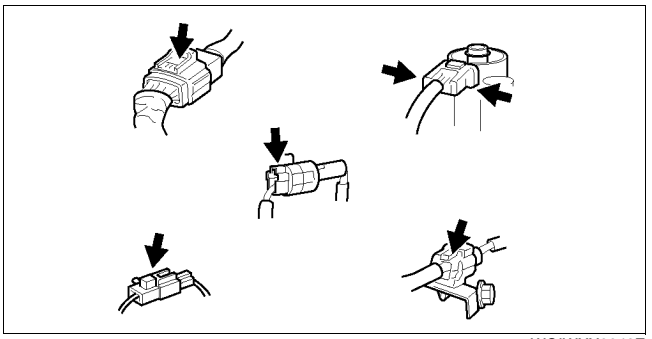

WGIWXX0042E

Locking Connector


- When locking connectors, listen for a click indicating they are securely locked.

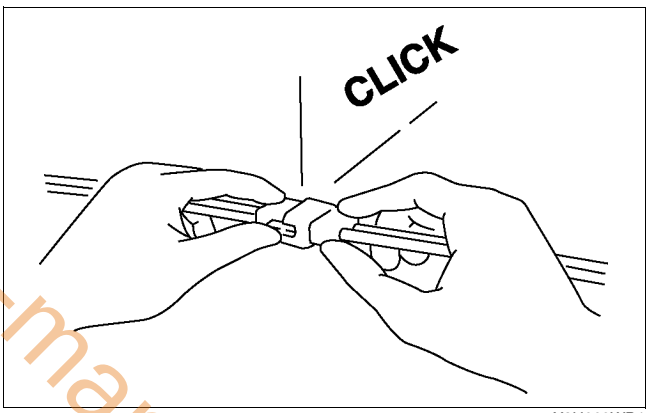

X3U000WB1

Inspection

- When a tester is used to inspect for continuity or measuring voltage, insert the tester probe from the wiring harness side.

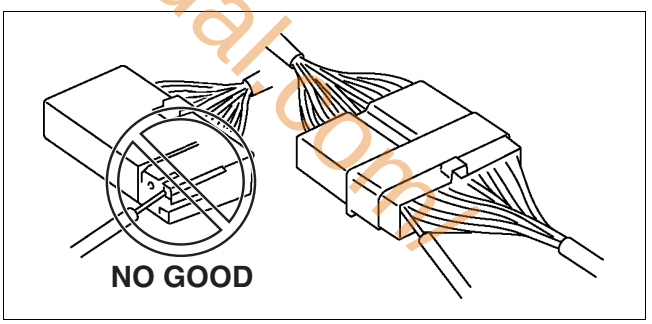


WGIWXX0044E

- Inspect the terminals of waterproof connectors from the connector side since they cannot be accessed from the wiring harness side.

Caution

- **To prevent damage to the terminal, wrap a thin wire around the tester probe before inserting into terminal.**

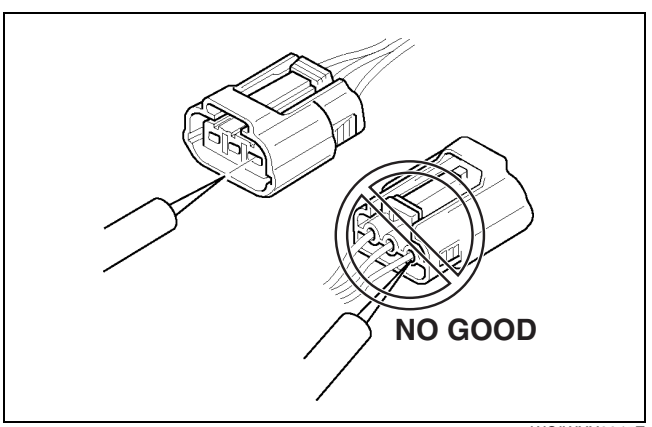


WGIWXX0045E

https://www.auto-manual.com/

Terminals

Inspection


- Pull lightly on individual wires to verify that they are secured in the terminal.

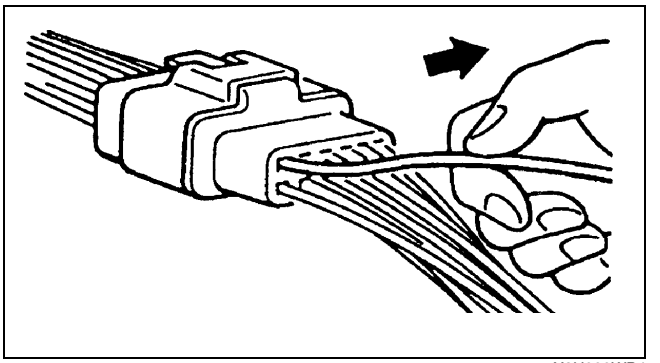

X3U000WB4

Replacement


- Use the appropriate tools to remove a terminal as shown. When installing a terminal, be sure to insert it until it locks securely.
- Insert a thin piece of metal from the terminal side of the connector and with the terminal locking tab pressed down, pull the terminal out from the connector.

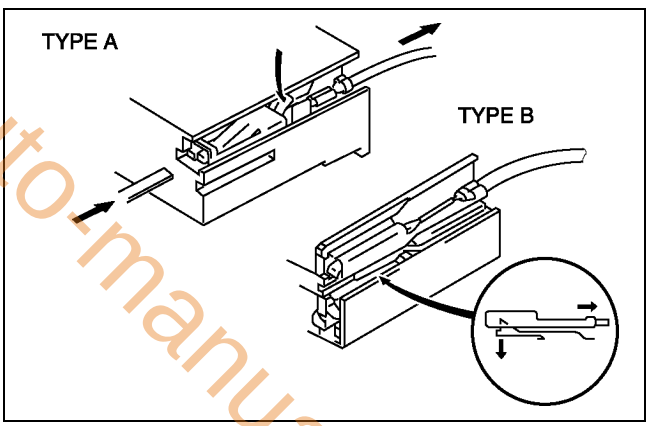

X3U000WB5

Sensors, Switches, And Relays

- Handle sensors, switches, and relays carefully. Do not drop them or strike them against other objects.

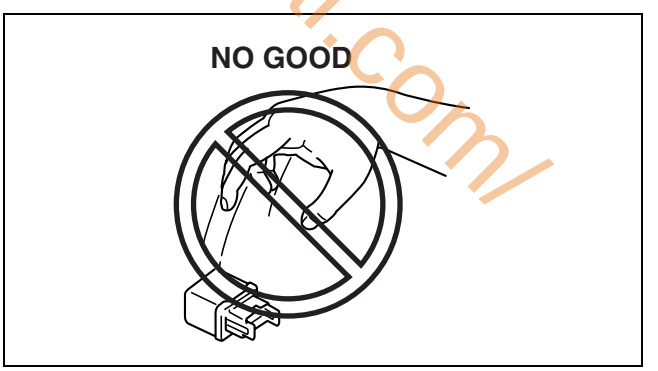


X3U000WB6

Fuse

Replacement


- When replacing a fuse, be sure to replace it with one of the same capacity. If a fuse fails again, the circuit probably has a short and the wiring should be inspected.
- Be sure the negative battery terminal is disconnected before replacing a main fuse.

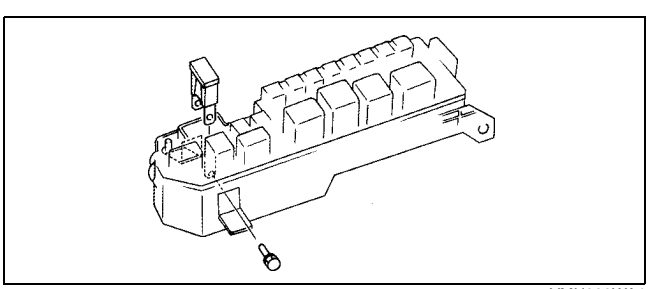

YMU000WA1

https://www.auto-manual.com/

- When replacing a pullout fuse, use the fuse puller.

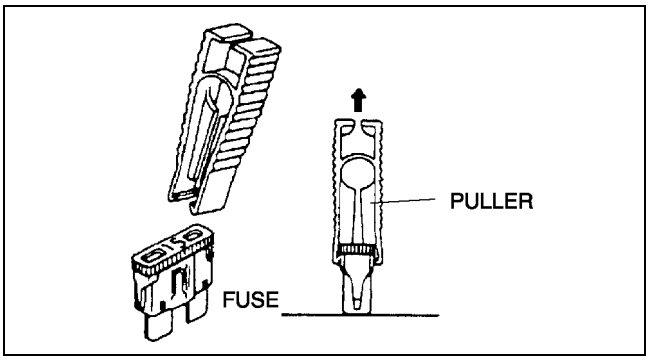

YMU000WAK


ELECTRICAL TROUBLESHOOTING TOOLS

Jumper Wire

- A jumper wire is used to create a temporary circuit. Connect the jumper wire between the terminals of a circuit to bypass a switch.


Caution

- **Do not connect a jumper wire from the power source line to a body ground. This may cause burning or other damage to wiring harnesses or electronic components.**

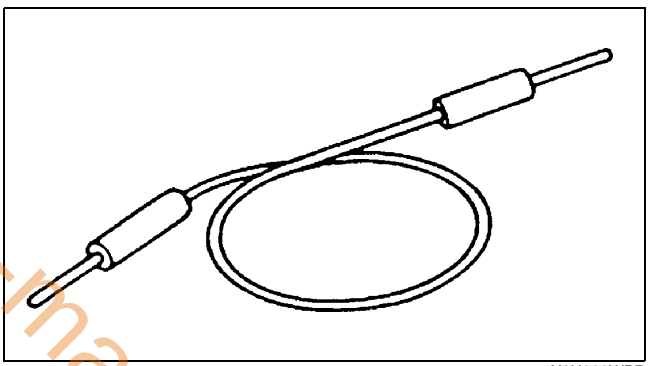
X3U000WBB

Voltmeter

- The DC voltmeter is used to measure circuit voltage. A voltmeter with a range of **15 V or more** is used by connecting the positive (+) probe (red lead wire) to the point where voltage will be measured and the negative (-) probe (black lead wire) to a body ground.

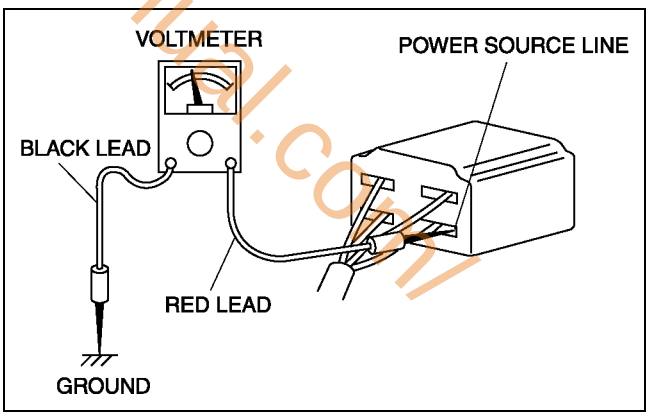


X3U000WBC

Ohmmeter

- The ohmmeter is used to measure the resistance between two points in a circuit and to inspect for continuity and short circuits.

Caution


- **Do not connect the ohmmeter to any circuit where voltage is applied. This will damage the ohmmeter.**

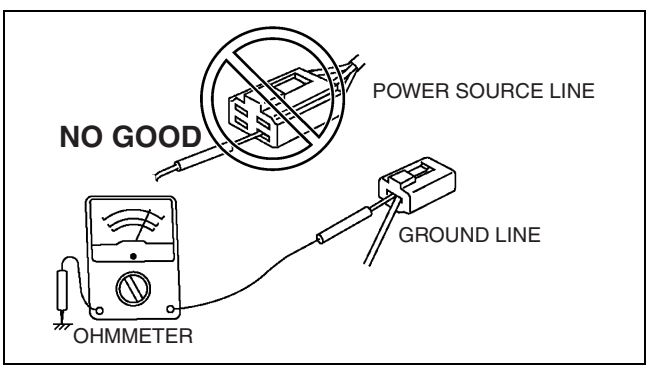

YMU000WAL


https://www.auto-manual.com/

ELECTRICAL WIRING SCHEMATIC

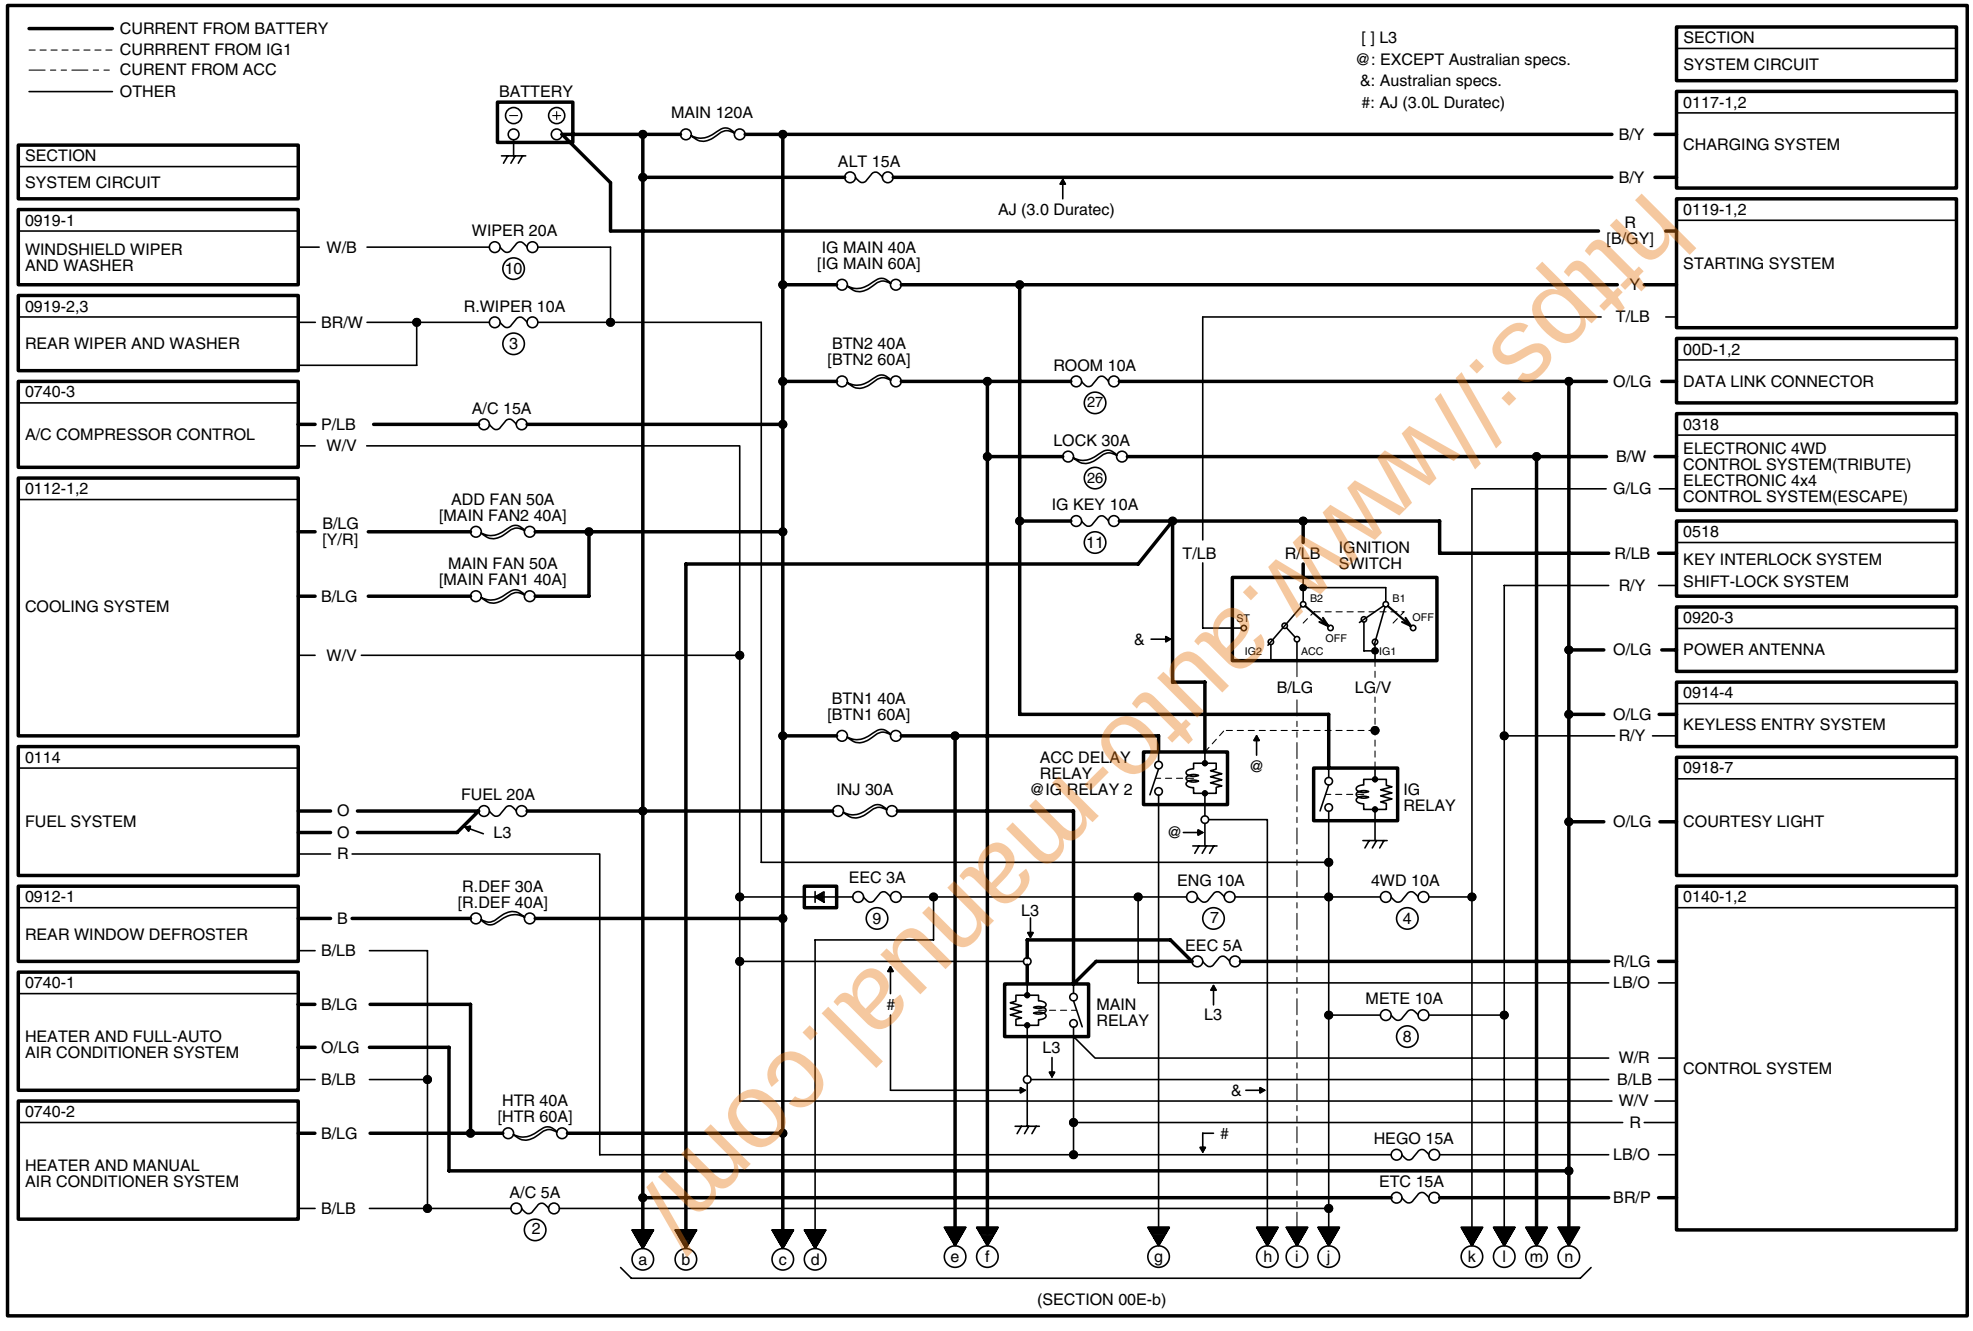


http://www.auto-manual.com/

ELECTRICAL WIRING SCHEMATIC

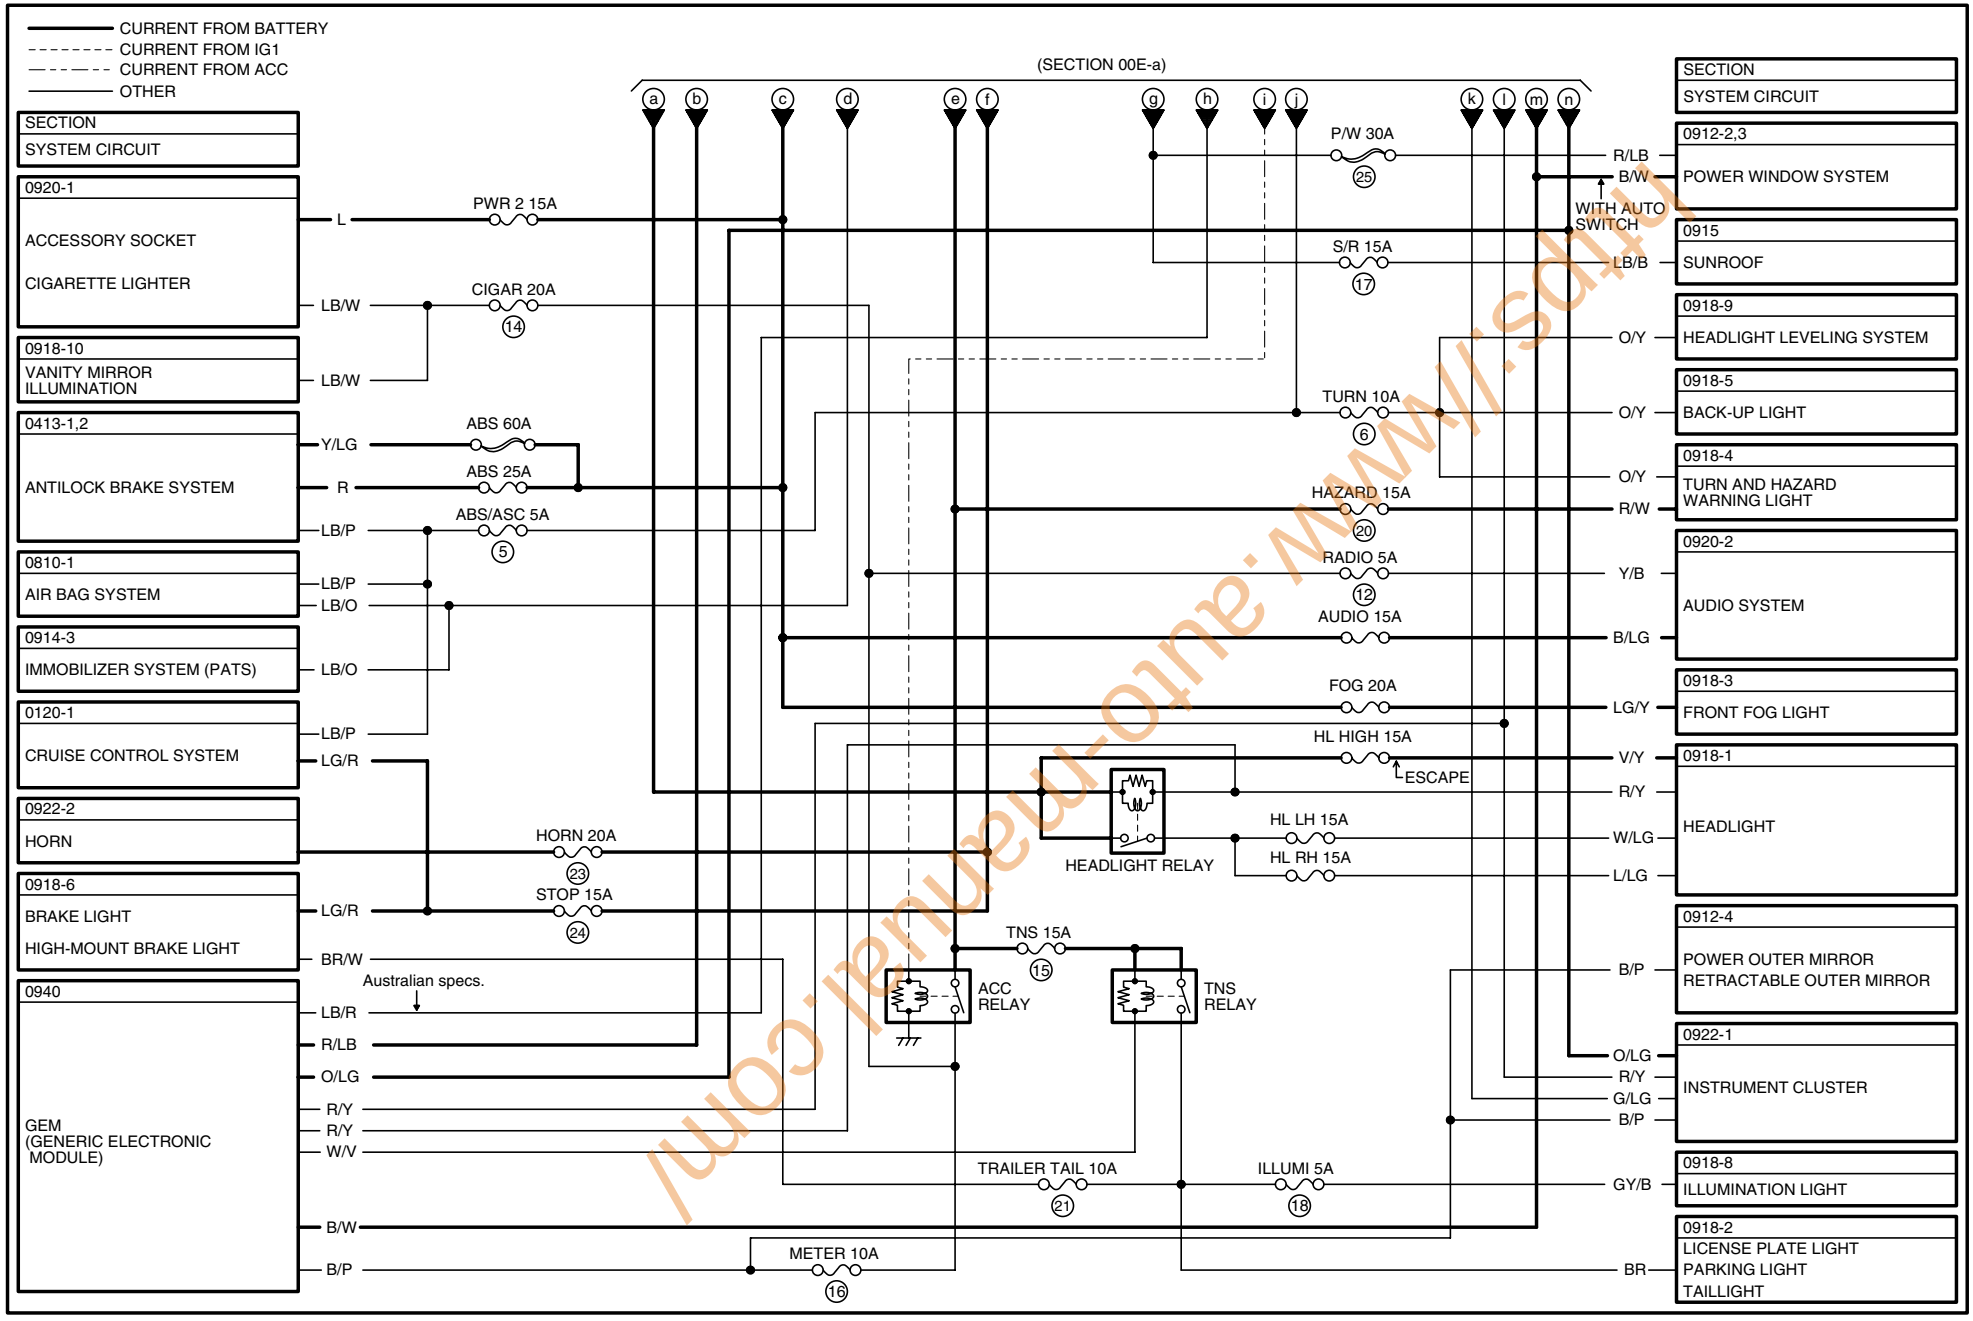

https://www.auto-manual.com/

F-01 MAIN FUSE BLOCK
(BATTERY JUNCTION BOX)

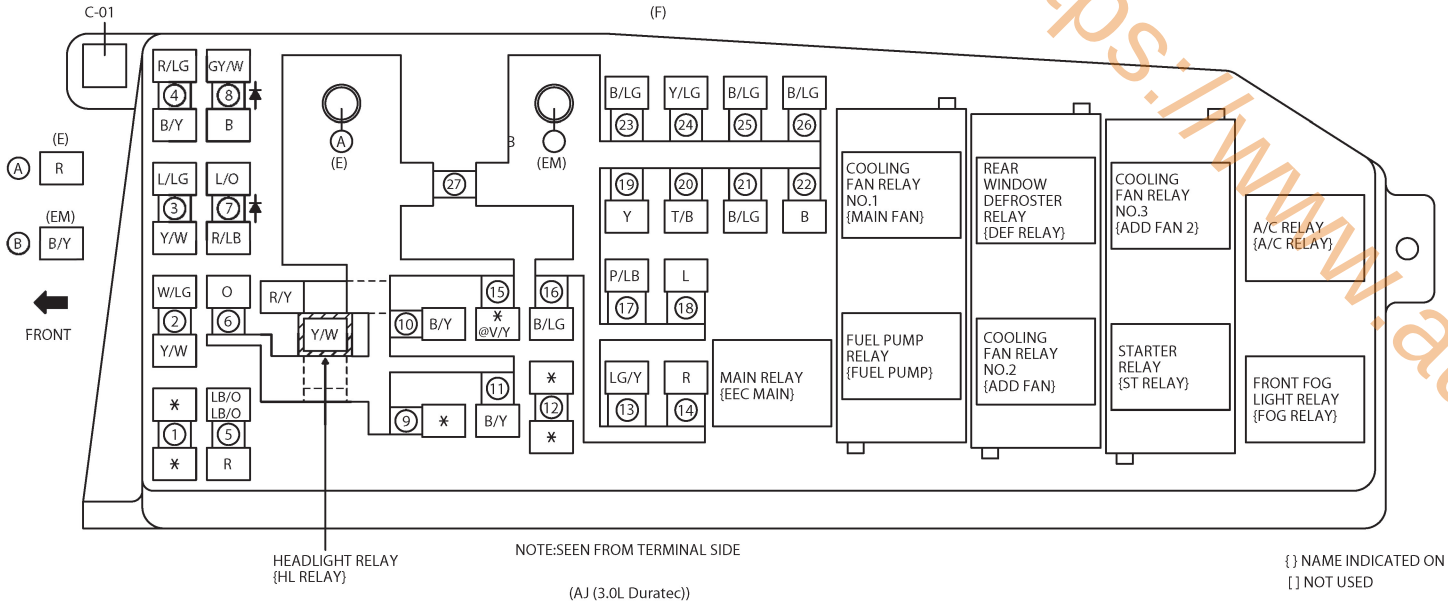


NOTE:SEEN FROM TERMINAL SIDE

(AJ (3.0L Duratec))

NO.	FUSE NAME	FUSE	NO.	FUSE NAM E	FUSE
①	[HORN]	[15A]	⑮	(HL HIGH)	(15A)
②	HL LH	15A	⑯	AUDIO	15A
③	HL RH	15A	⑰	A/C	15A
④	EEC	5A	⑱	PWR 2	15A
⑤	HEGO	15A	⑲	IG MAIN	40A
⑥	FUEL	20A	⑳	BTN1	40A
⑦	DIODE	✱	㉑	BTN2	40A
⑧	DIODE	✱	㉒	R.DEF	30A
⑨	✱	✱	㉓	HTR	40A
⑩	INJ	30A	㉔	ABS	60A
⑪	ALT	15A	㉕	MAIN FAN	50A
⑫	[HLEV.]	[10A]	㉖	ADD FAN	50A
⑬	FOG	20A	㉗	MAIN	120A
⑭	ABS	25A			

{ } NAME INDICATED ON FUSE BOX COVER
[ ] NOT USED
✱: VACANT
( ) IF EQUIPPED
@: ESCAPE

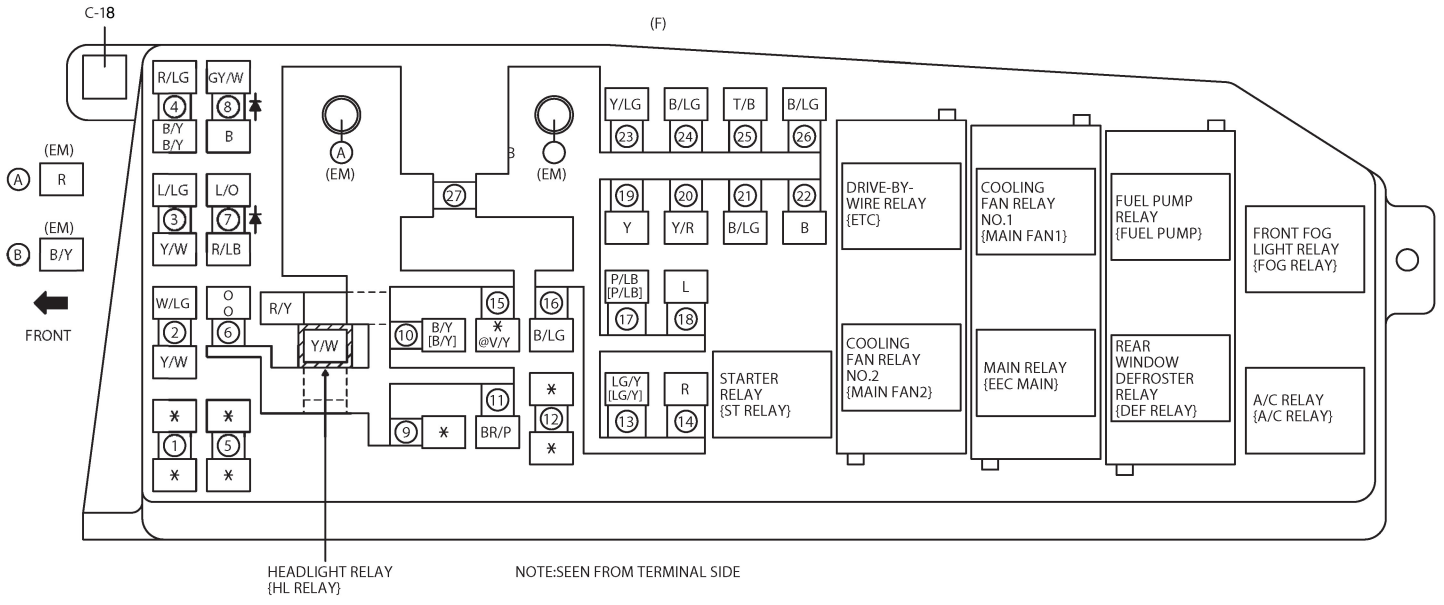

NOTE:SEEN FROM TERMINAL SIDE

(L3)

NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
①	✱	✱	⑮	(HL HIGH)	(15A)
②	HL LH	15A	⑯	AUDIO	15A
③	HL RH	15A	⑰	A/C	15A
④	EEC	5A	⑱	PWR 2	15A
⑤	✱	✱	⑲	IG MAIN	60A
⑥	FUEL	20A	⑳	MAIN FAN2	40A
⑦	DIODE	✱	㉑	BTN2	60A
⑧	DIODE	✱	㉒	R.DEF	40A
⑨	✱	✱	㉓	ABS	60A
⑩	INJ	30A	㉔	MAIN FAN1	40A
⑪	ETC	10A	㉕	BTN1	60A
⑫	[HLEV.]	[10A]	㉖	HTR	60A
⑬	FOG	20A	㉗	MAIN	120A
⑭	ABS	25A			


{ } NAME INDICATED ON FUSE BOX COVER
( ) IF EQUIPPED
[ ] NOT USED
✱: VACANT
@: ESCAPE

https://www.auto-manual.com/

https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK

CENTRAL JUNCTION BOX (CJB)

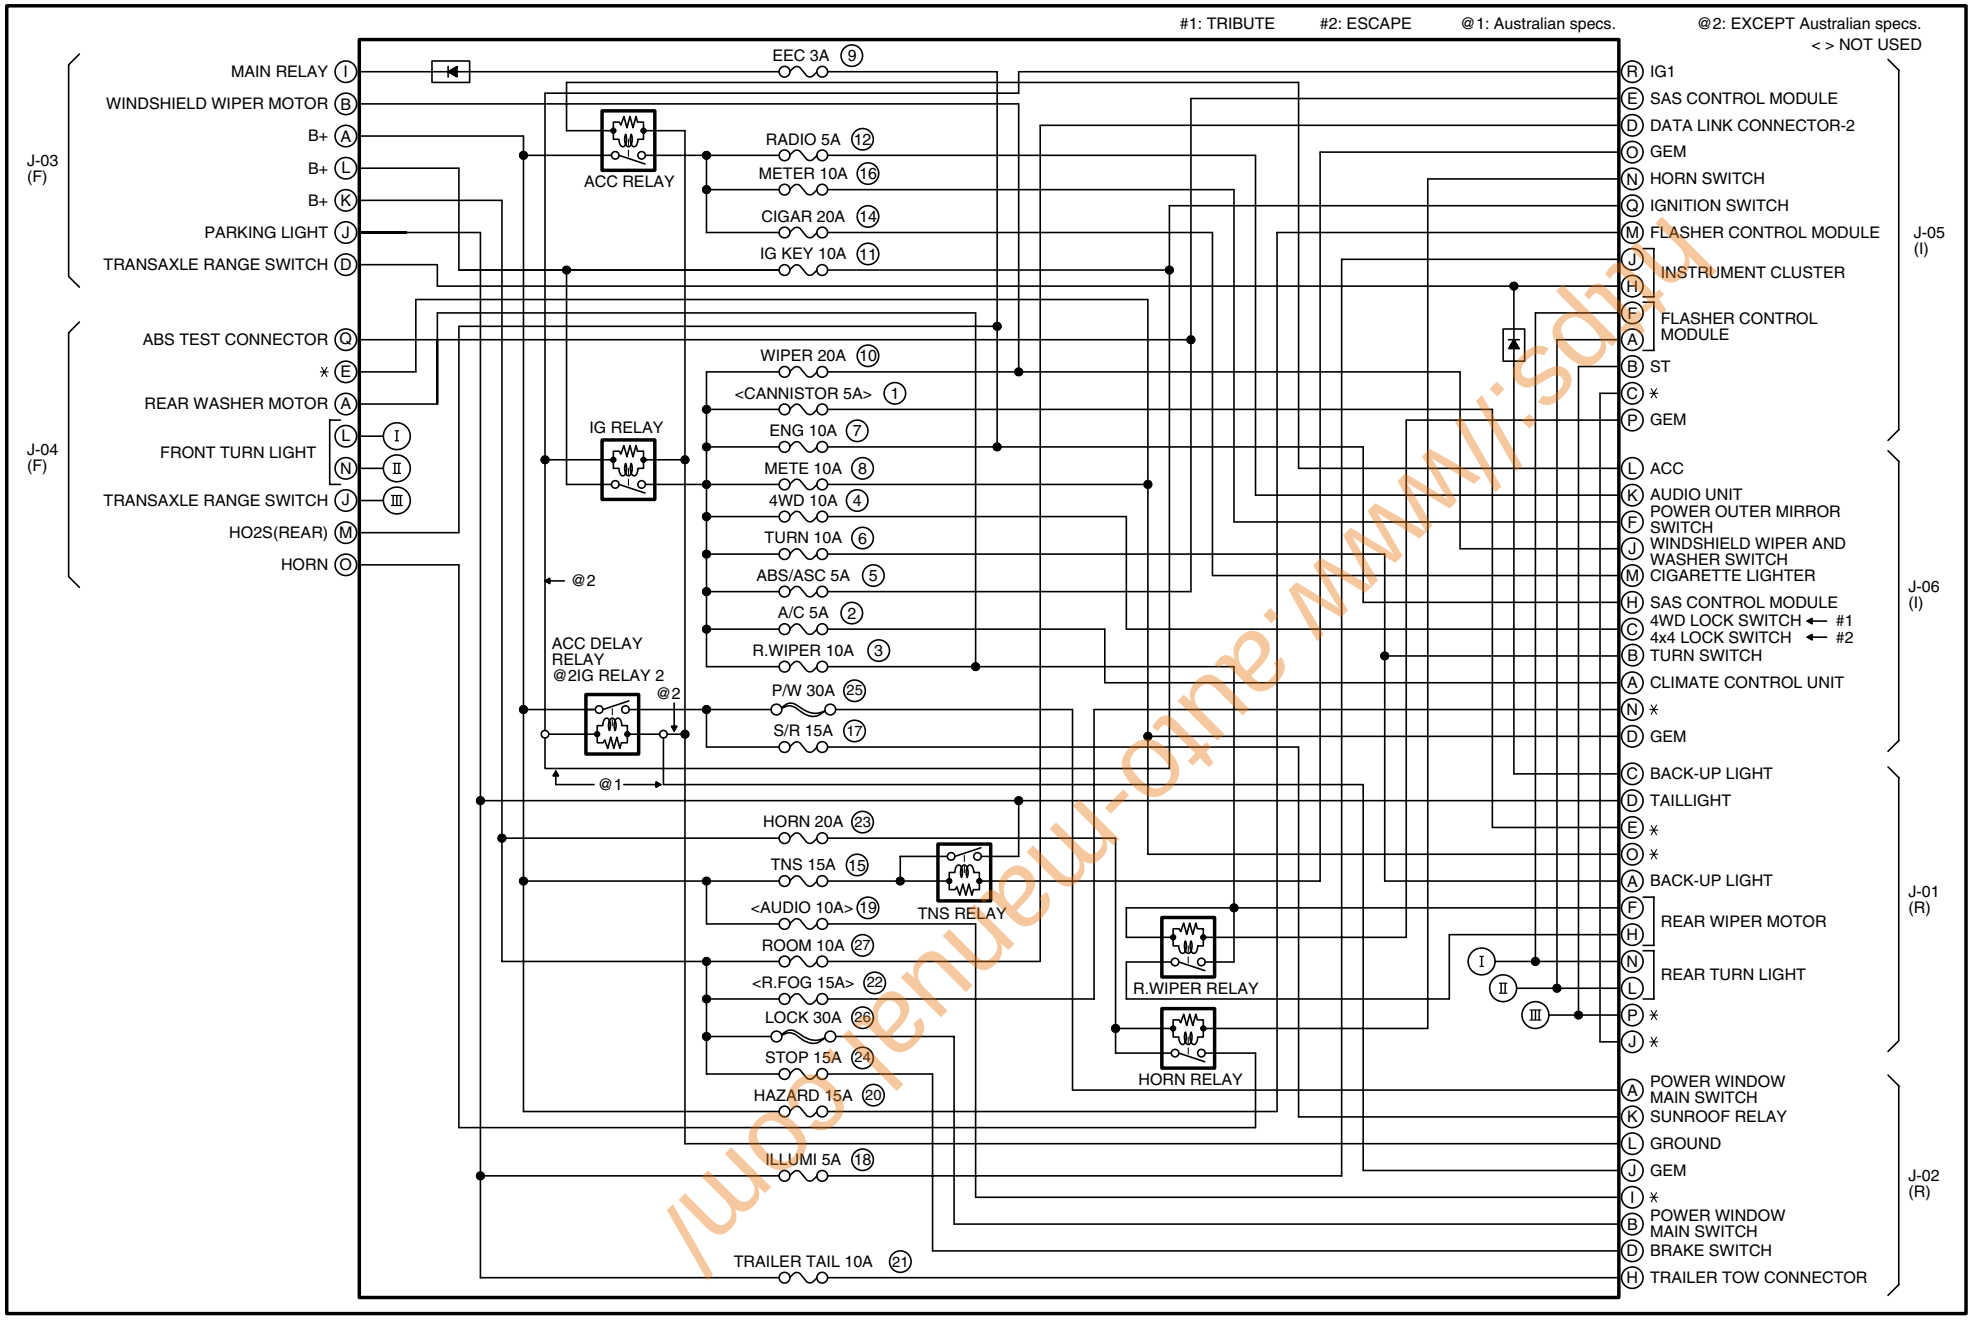


www.sdrenault-one.com/


CENTRAL JUNCTION BOX (CJB)

( ) IF EQUIPPED < > NOT USED
@: EXCEPT Australian specs.

NO.	FUSE NAME	FUSE	NO.	FUSE NAME	FUSE
1	<CANNISTOR>	<5A>	15	TNS	15A
2	A/C	5A	16	METER	10A
3	R.WIPER	10A	17	(S/R)	(15A)
4	4WD	10A	18	ILLUMI	5A
5	ABS/ASC	5A	19	<AUDIO>	<10A>
6	TURN	10A	20	HAZARD	15A
7	ENG	10A	21	TRAILER TAIL	10A
8	METE	10A	22	<R.FOG>	<15A>
9	EEC	3A	23	HORN	20A
10	WIPER	20A	24	STOP	15A
11	IG KEY	10A	25	P/W	30A
12	RADIO	5A	26	LOCK	30A
13	SPARE	———	27	ROOM	10A
14	CIGAR	20A			

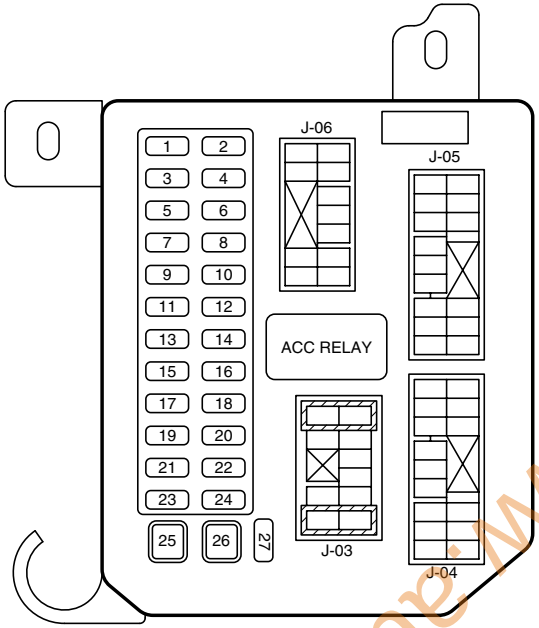

FRONT SIDE

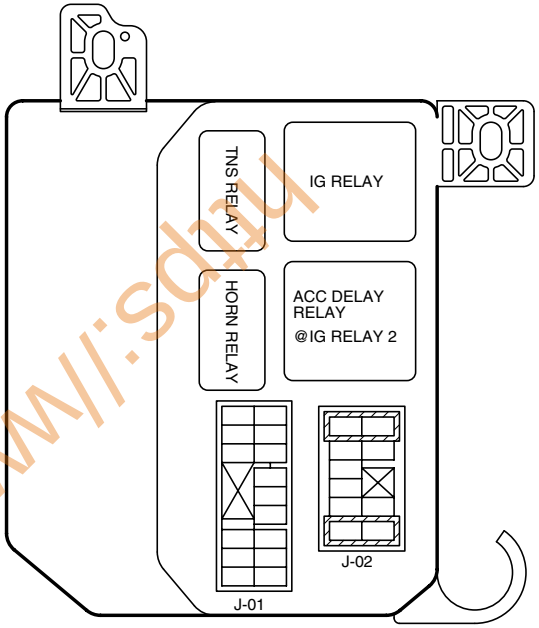

REAR SIDE

J-01 REAR HARNESS(R)

Q	O	M				E	C	A
*	*	*				*	B/P	O/Y
*	*	W/LB	LG/W	*	B/LB	BR/W	BR	*
R	P	N	L	J	H	F	D	B

*: VACANT

J-02 REAR HARNESS(R)

K	I			C	A
LB/B	* [R/Y]			LG/O	R/LB
B	* @LB/R	* #BR/W	*	LG/R	B/W
L	J	H	F	D	B

[ ] NOT USED
@: Australian specs.
#: WITH TRAILER TOW CONNECTOR
*: VACANT

J-03 FRONT HARNESS(F)

K	I		C	A
B/LG	W/V		*	T/B
Y	BR	*	B/P	W/B
L	J	H	F	D	B

*: VACANT

J-04 FRONT HARNESS(F)

Q	O	M				E	C	A
LB/P	L	LB/O				*	*	BR/W
*	*	LG/W	W/LB	T/LB	*	*	*	*
R	P	N	L	J	H	F	D	B

*: VACANT

J-05 INSTRUMENT PANEL HARNESS(I)

Q	O	M				E	C	A
R/LB	W/V	R/W				LB/P	*	LG/W
LG/V	G/V	Y/LG	*	GY/B	B/P	W/LB	O/LG	T/LB
R	P	N	L	J	H	F	D	B

*: VACANT

J-06 INSTRUMENT PANEL HARNESS(I)


M	K			C	A
LB/W	Y/B			G/LG	B/LB
*	B/LG	W/B	LB/O	B/P	R/Y	O/Y
N	L	J	H	F	D	B

*: VACANT

http://www.auto-manual.com/


COMMON CONNECTOR LIST

C-01 FRONT(F)-ENGINE(E)




(AJ (3.0L Duratec))

C-02 IGNITION SWITCH/ KEY INTERLOCK SOLENOID/ KEY REMINDER SWITCH(I)




[ ] WITH KEY INTERLOCK SYSTEM
∗: VACANT

C-03 FRONT(F)-INSTRUMENT PANEL(I)

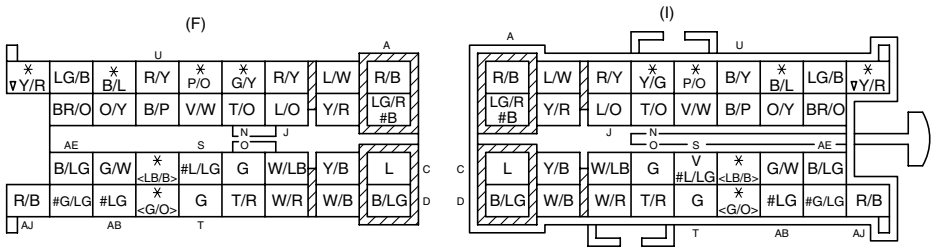


< > WITH CRUISE CONTROL SYSTEM
( ) AUTO A/C
#: L3
▽: WITH THEFT-DETERRENT SYSTEM
∗: VACANT

C-04 FRONT(F)-REAR(R)

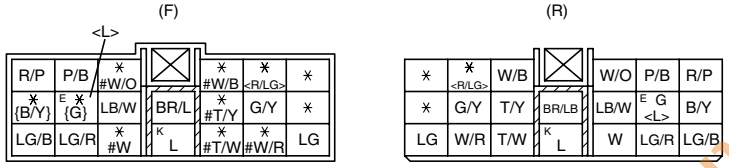


{ } AJ (3.0L Duratec)
< > L3/WITH CRUISE CONTROL SYSTEM
#: L3
∗: VACANT

C-05 FRONT(F)-EMISSION(EM)

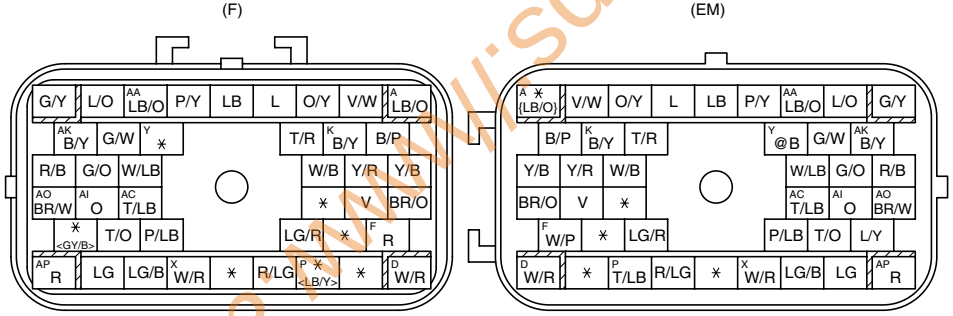

(AJ (3.0L Duratec))

< > WITH CRUISE CONTROL SYSTEM
{ } WITH HEATED OXYGEN SENSOR
@: NOT USED
∗: VACANT

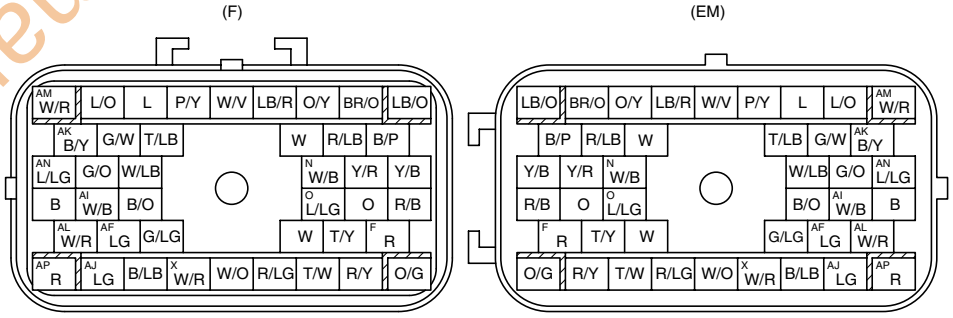


(L3)

[ ] NOT USED
∗: VACANT

https://www.auto-manual.com/

COMMON CONNECTOR LIST


C-06 EMISSION(EM)-INJECTION(INJ)

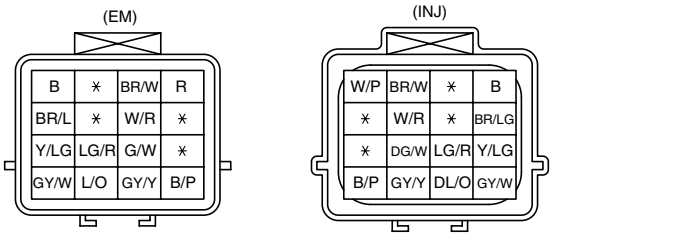

✳: VACANT

(AJ (3.0L Duratec))


C-07 EMISSION(EM)-INJECTION(INJ)

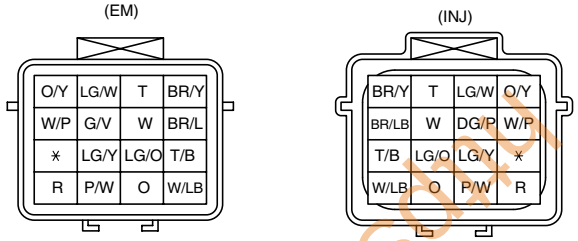

✳:VACANT


(AJ (3.0L Duratec))

C-08 INSTRUMENT PANEL(I)-REAR(R)

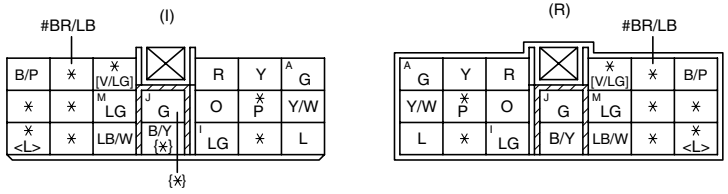

{ } L3
< > L3/WITH CRUISE CONTROL SYSTEM
[ ] WITH RETRACTABLE OUTER MIRROR
#: MANUAL A/C
✳: VACANT

C-09 INSTRUMENT PANEL(I)-REAR(R)

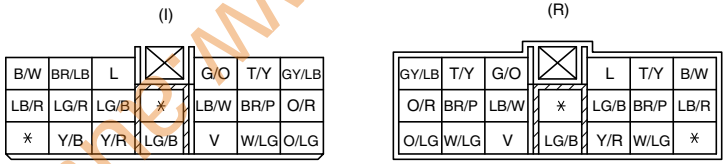

C-10 EMISSION(EM)-INJECTION(INJ)




✳:VACANT

(L3)

www.auto-manual.com/


COMMON CONNECTOR LIST

C-11 REAR(R)-D00R NO.1(DR1)

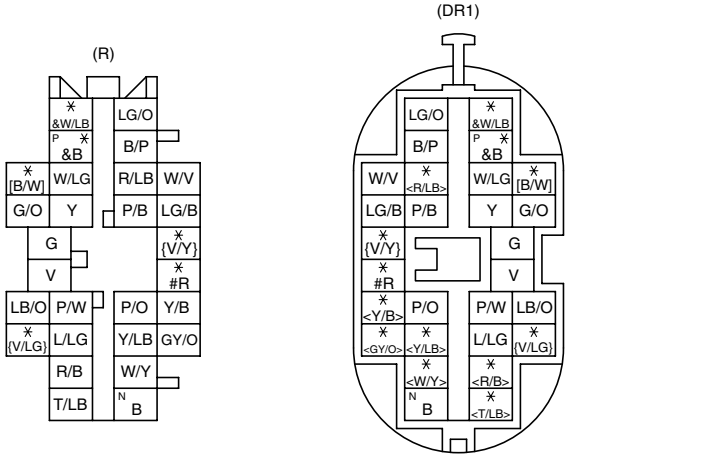


< > WITH POWER WINDOW SYSTEM
[ ] WITH POWER WINDOW SYSTEM (WITH AUTO SWITCH)
{ } WITH RETRACTABLE OUTER MIRROR
&: WITH FRONT SIDE TURN LIGHT
#: WITH DOUBLE LOCKING SYSTEM
∗: VACANT

C-12 REAR(R)-DOOR NO.2(DR2)

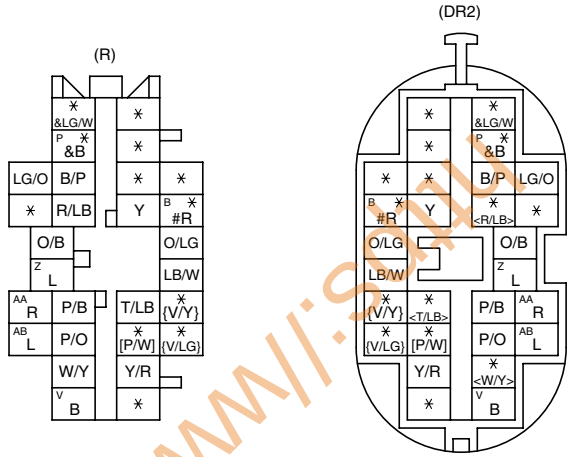


< > WITH POWER WINDOW SYSTEM
[ ] WITH DOOR LOCK SWITCH LF
{ } WITH RETRACTABLE OUTER MIRROR
&: WITH FRONT SIDE TURN LIGHT
#: WITH DOUBLE LOCKING SYSTEM
∗: VACANT

C-13 REAR(R)-DOOR NO.3(DR3)

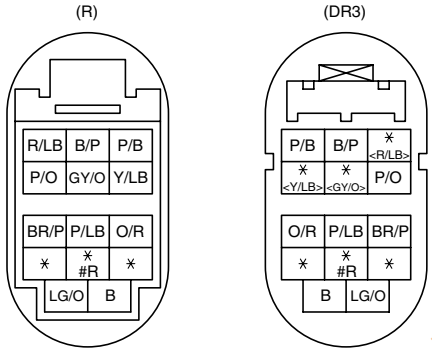

< > WITH POWER WINDOW SYSTEM
#: WITH DOUBLE LOCKING SYSTEM
∗: VACANT

C-14 REAR(R)-DOOR NO.4(DR4)

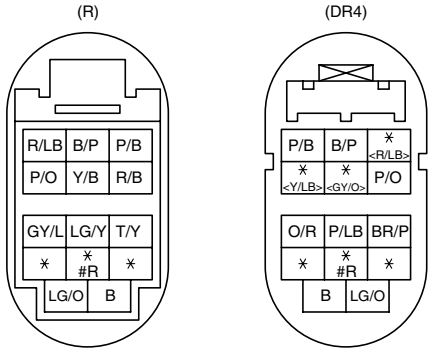

< > WITH POWER WINDOW SYSTEM
#: WITH DOUBLE LOCKING SYSTEM
∗: VACANT

https://www.auto-manual.com/

COMMON CONNECTOR LIST

C-15 REAR(R)-REAR NO.2(R2)

(R)

LG	BR/W	W/V	O/B	P/B	BR	BR/LB
∗	B/LB	LB/B	Y/R	P/O	∗	B

(R2)

BR/L	BR	P/B	O/B	W/V	BR/W	LG
B	∗	P/O	Y/R	LB/B	B/LB	∗

∗: VACANT

C-16 REAR(R)-INTERIOR LIGHT(IN)

(R)

∗			LB/W
∗ [LB/B]	V/O	LG/O	B

(IN)

LB/W			∗
B	LG/O	V/O	∗ [LB/B]

[ ] WITH SUNROOF
∗: VACANT

C-17 REAR NO.2(R2)-REAR NO.3(R3)

(R2)

B	∗	∗	P/B	BR	W/V	Y/R
∗	∗	∗	P/O	∗	LB/B	O/B

(R3)

Y/R	W/V	BR	P/B	∗	∗	B
O/B	LB/B	∗	P/O	∗	∗	∗

∗: VACANT

C-18 FRONT(F)-EMISSION(EM)

(F)

W/P

(EM)

W/P

(L3)

C-20 FRONT(F)-INSTRUMENT PANEL (I)

(F)

∗ @V/Y	∗ @G
∗ #SB/W	∗ #O/Y

(I)

∗ @G	∗
∗ #O/Y	∗ #LB/W

@V/Y
V/Y

@: ESCAPE
#: WITH HEADLIGHT LEVELING SYSTEM
∗: VACANT

C-21 FRONT(F)-EMISSION(EM)

(F)

∗ [B/LG]	∗	∗ [G/O]
∗ [LB/B]	∗ [L]	∗ [O/LB]

(EM)


∗ [G/O]	∗ @GY/B	∗ [R/LG]
∗ [O/LB]	∗ [L]	∗ [LB/B]

(L3)


[ ] WITH CRUISE CONTROL SYSTEM
@: NOT USED
∗: VACANT

https://www.auto-manual.com/


GROUND POINT

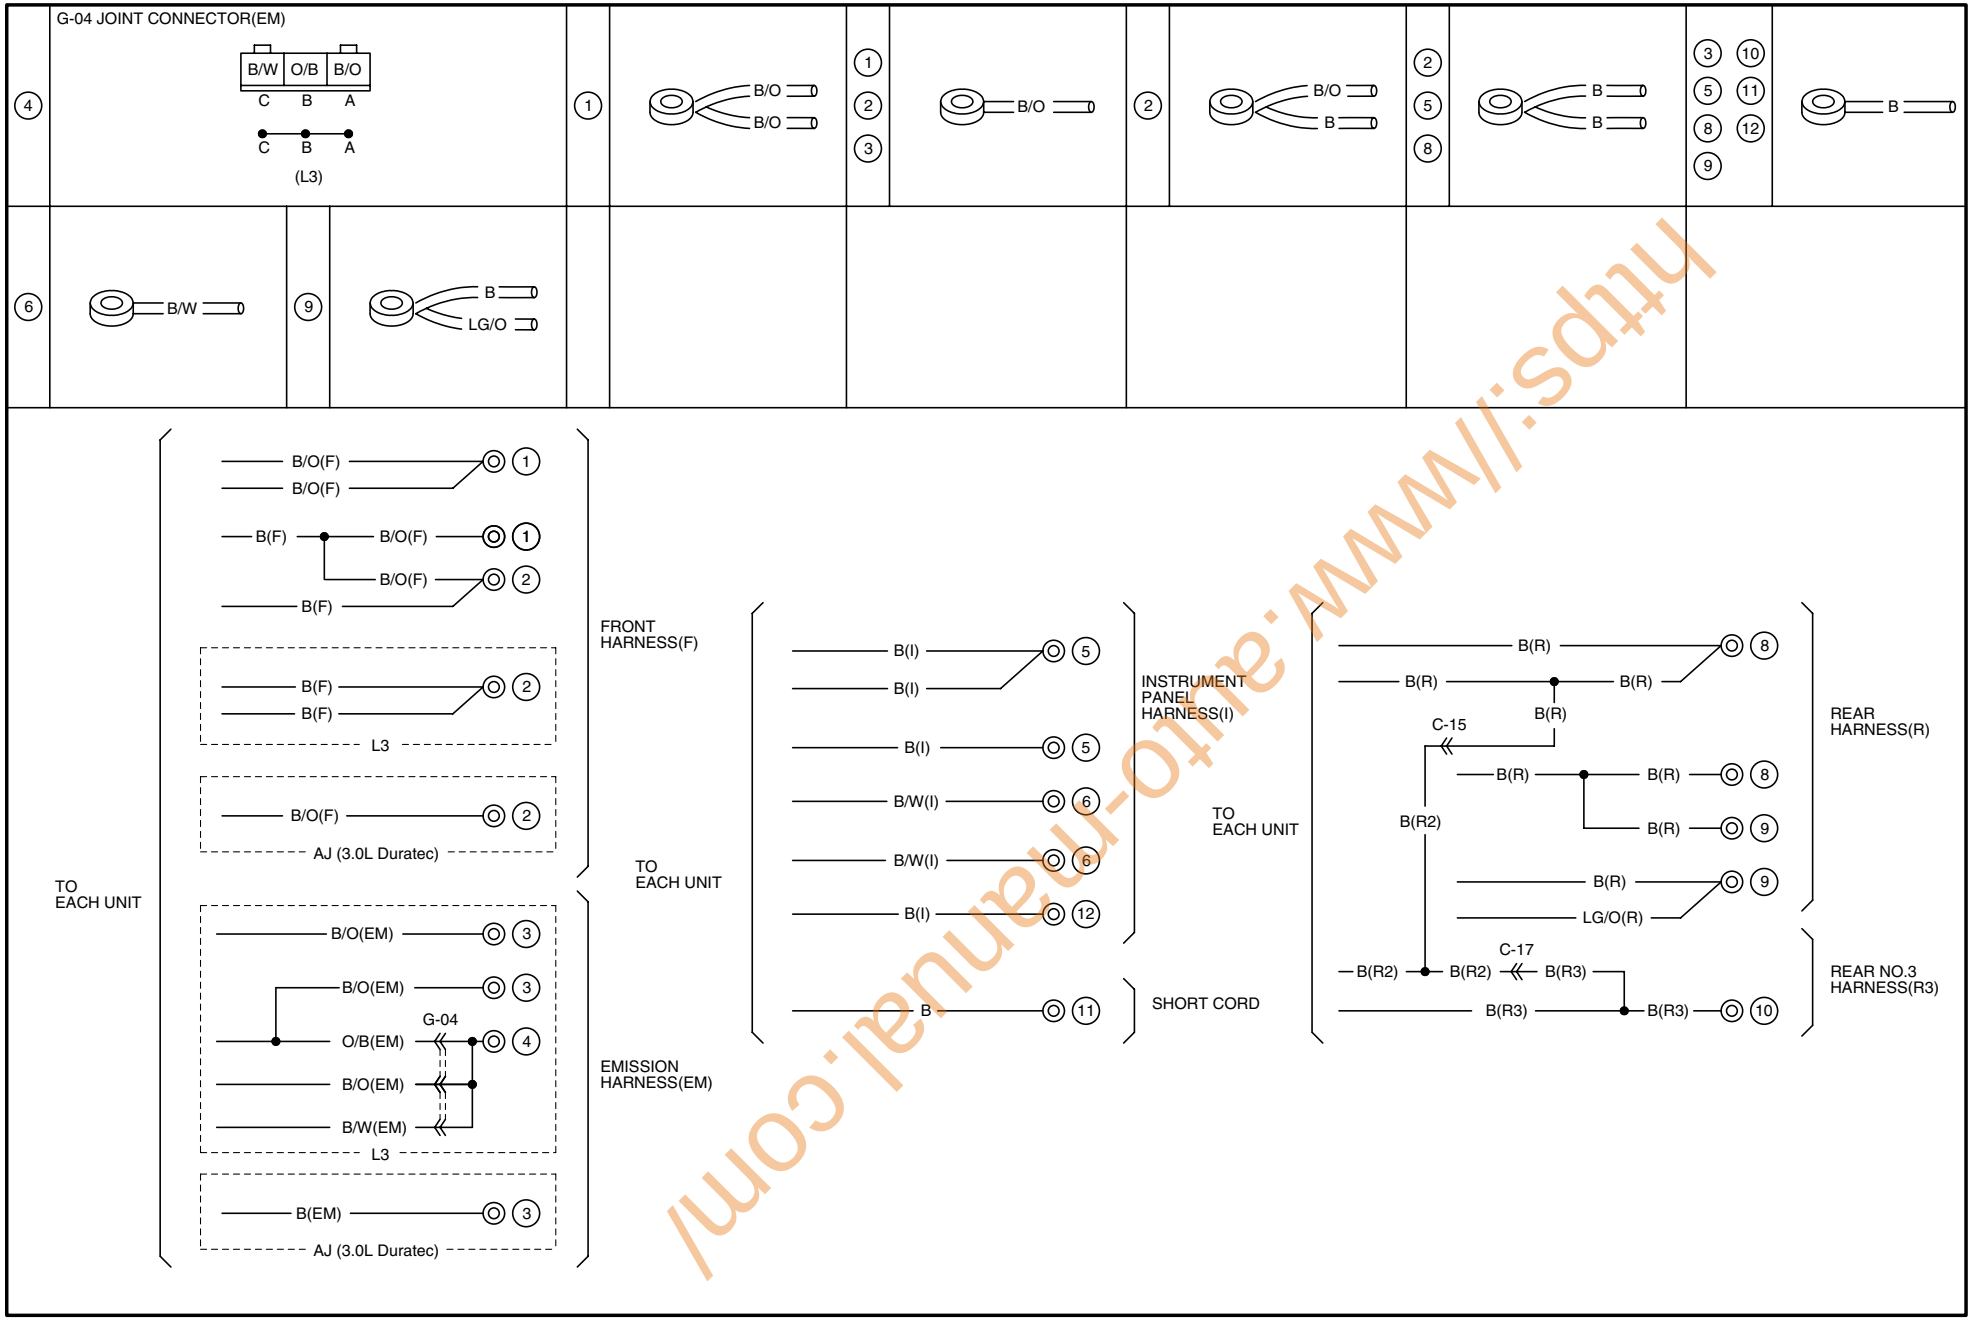


https://www.auto-manual.com/

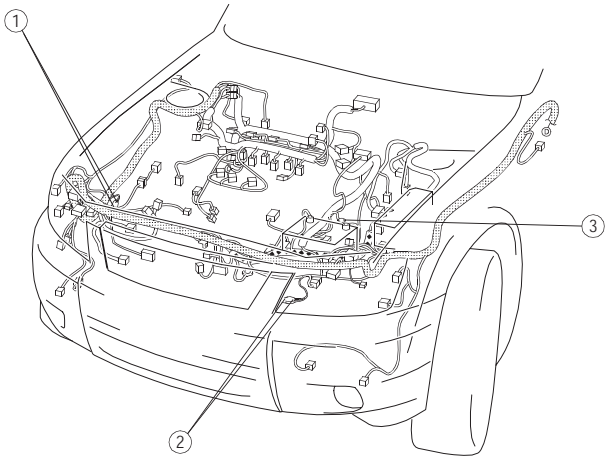


[AJ(3.0L Duratec)]

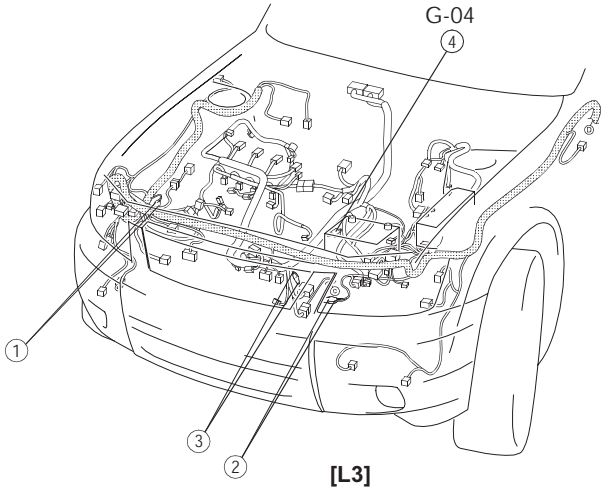


[L3]

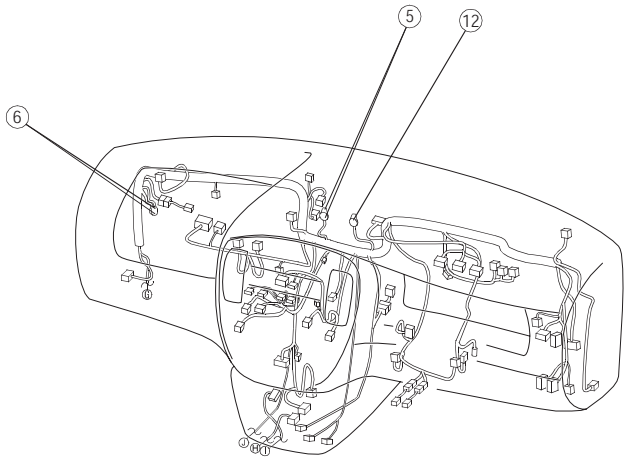

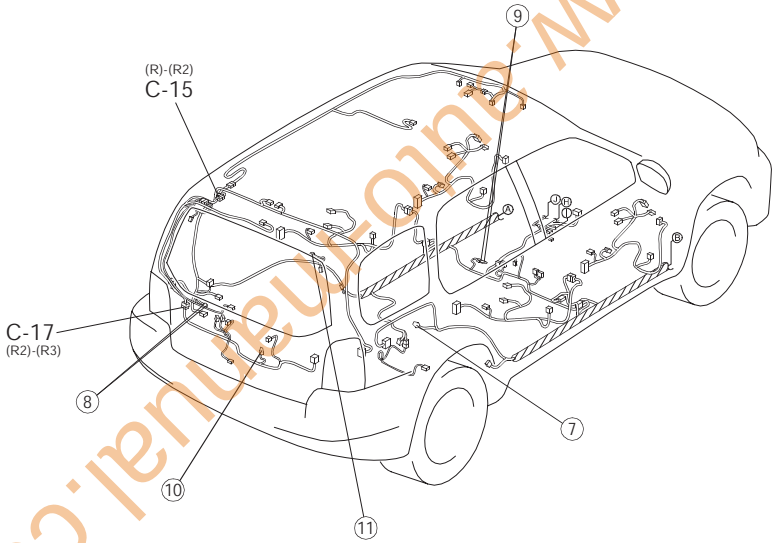


https://www.autoManual.com/

DATA LINK CONNECTOR (AJ (3.0L Duratec))

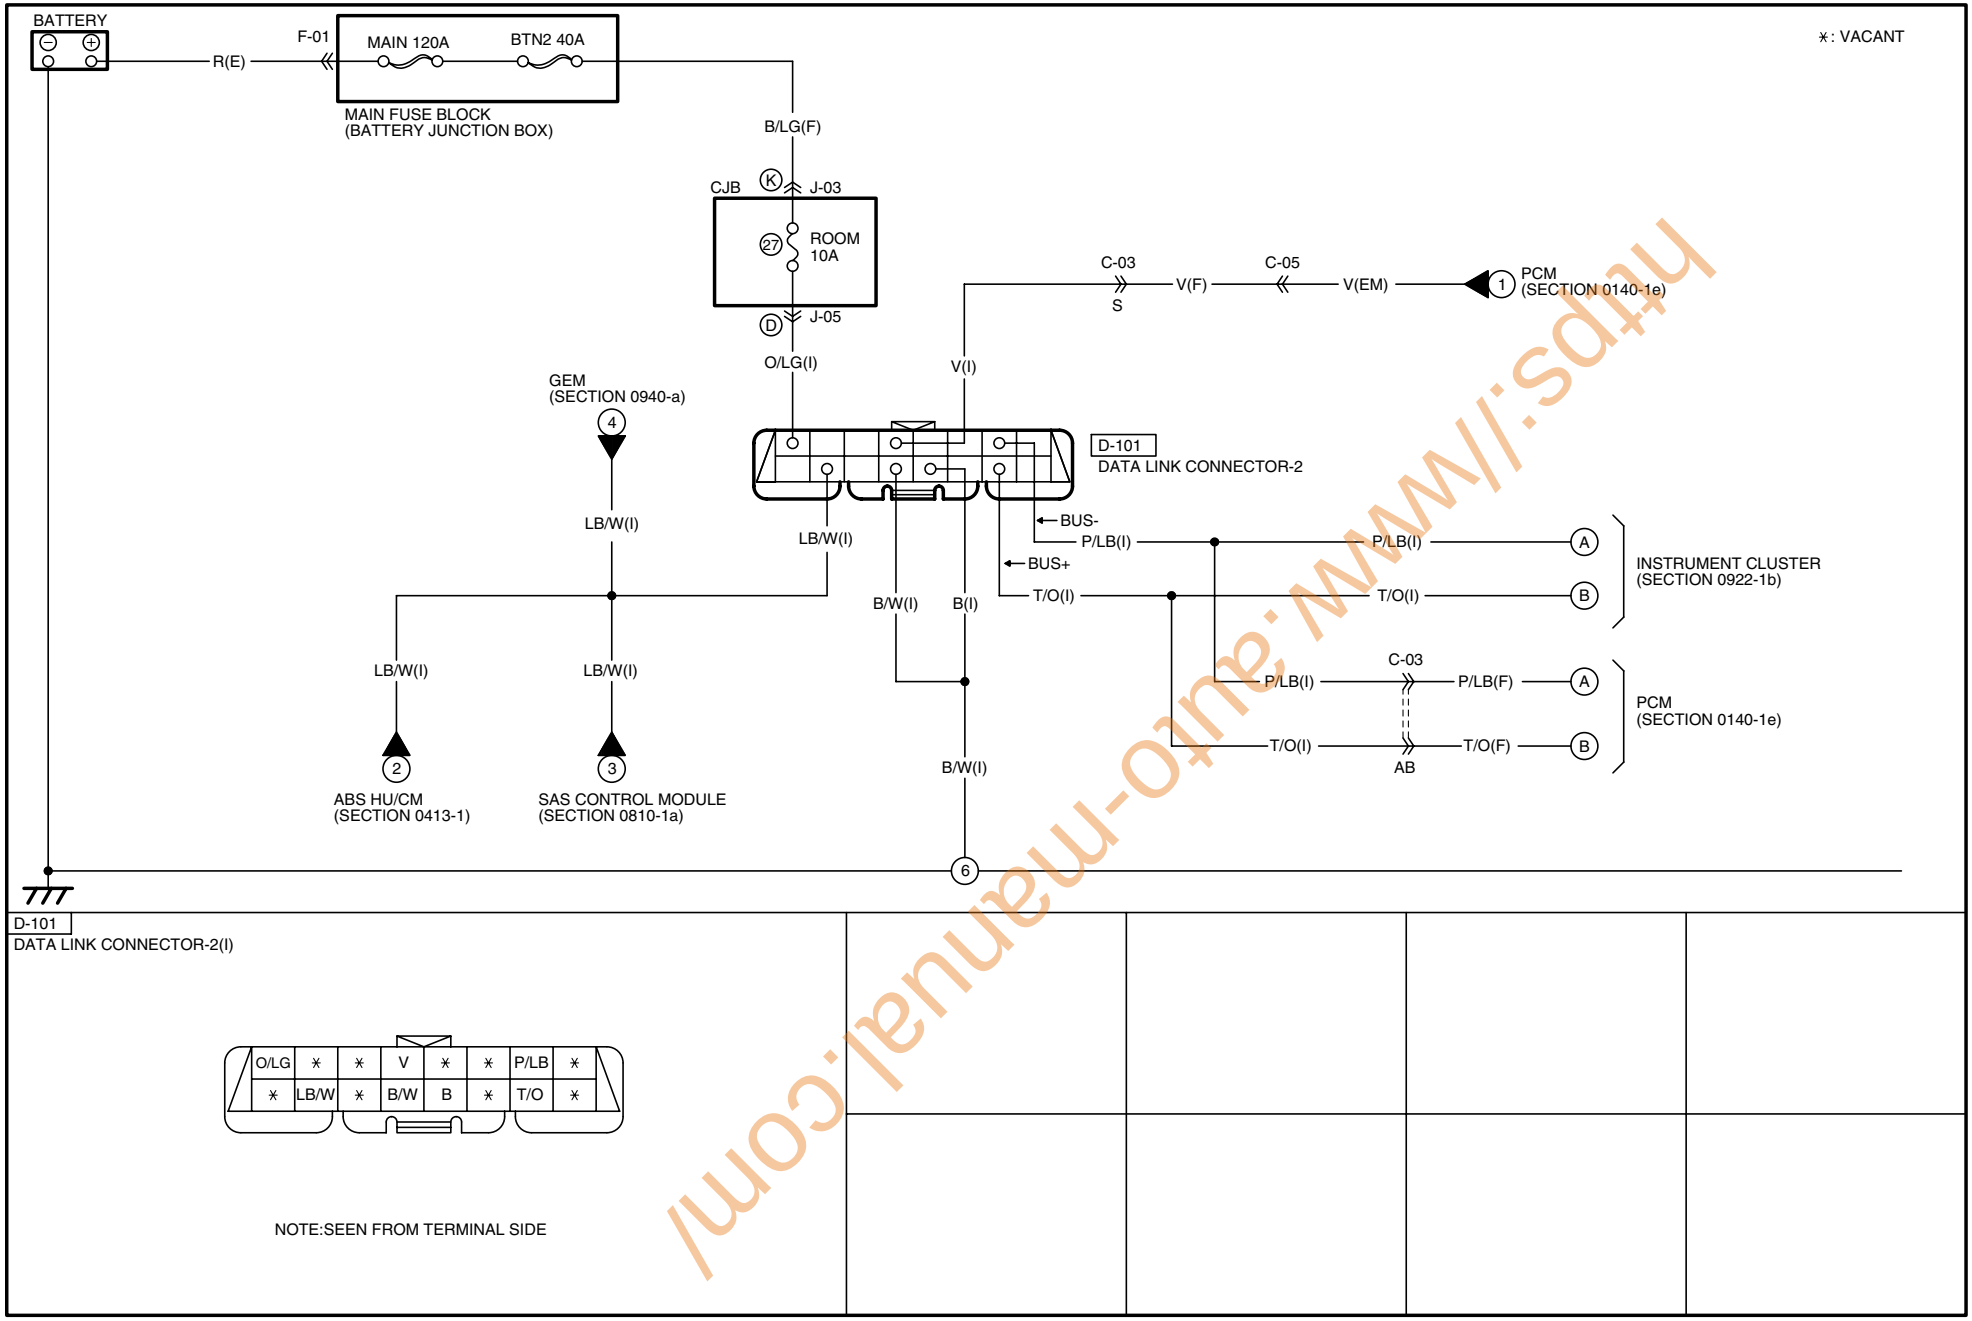


https://www.auto-manual.com/

HARNESS SYMBOL : (F) (E) (R)

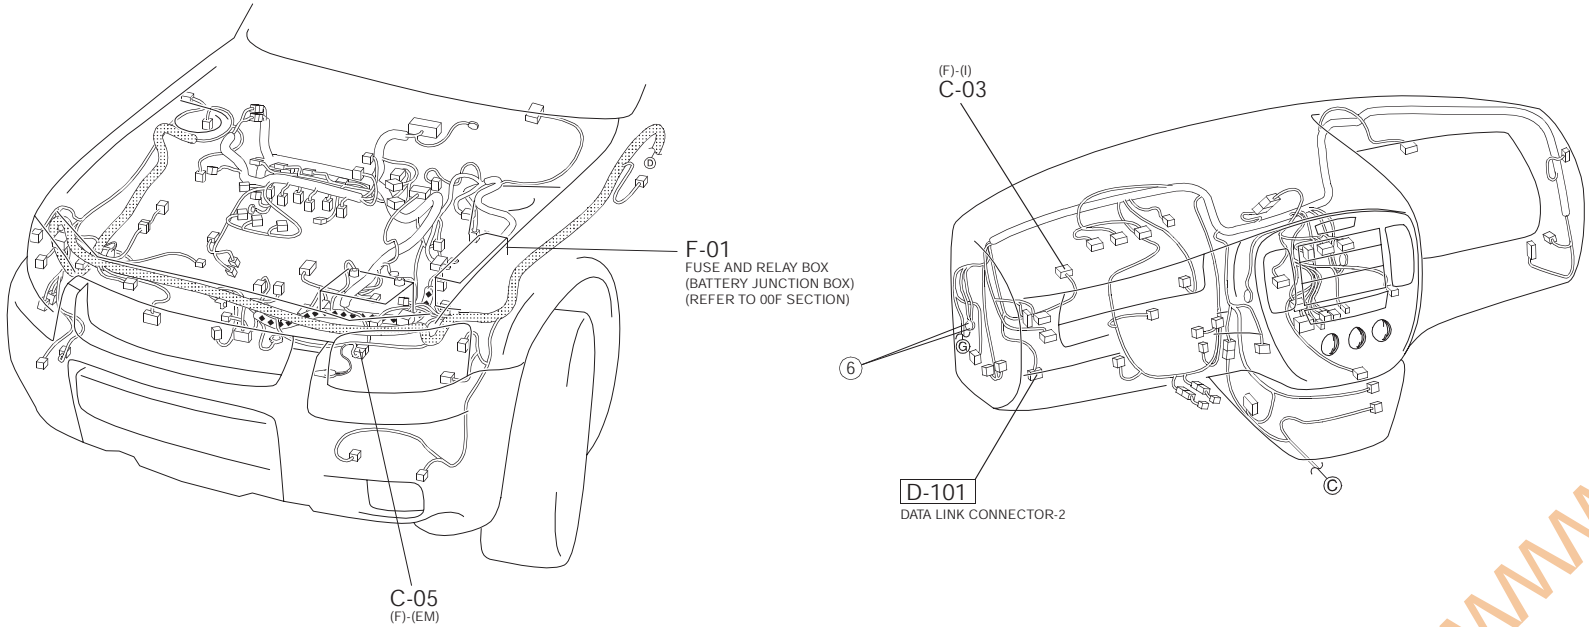

https://www.auto-manual.com/


DATA LINK CONNECTOR (L3)

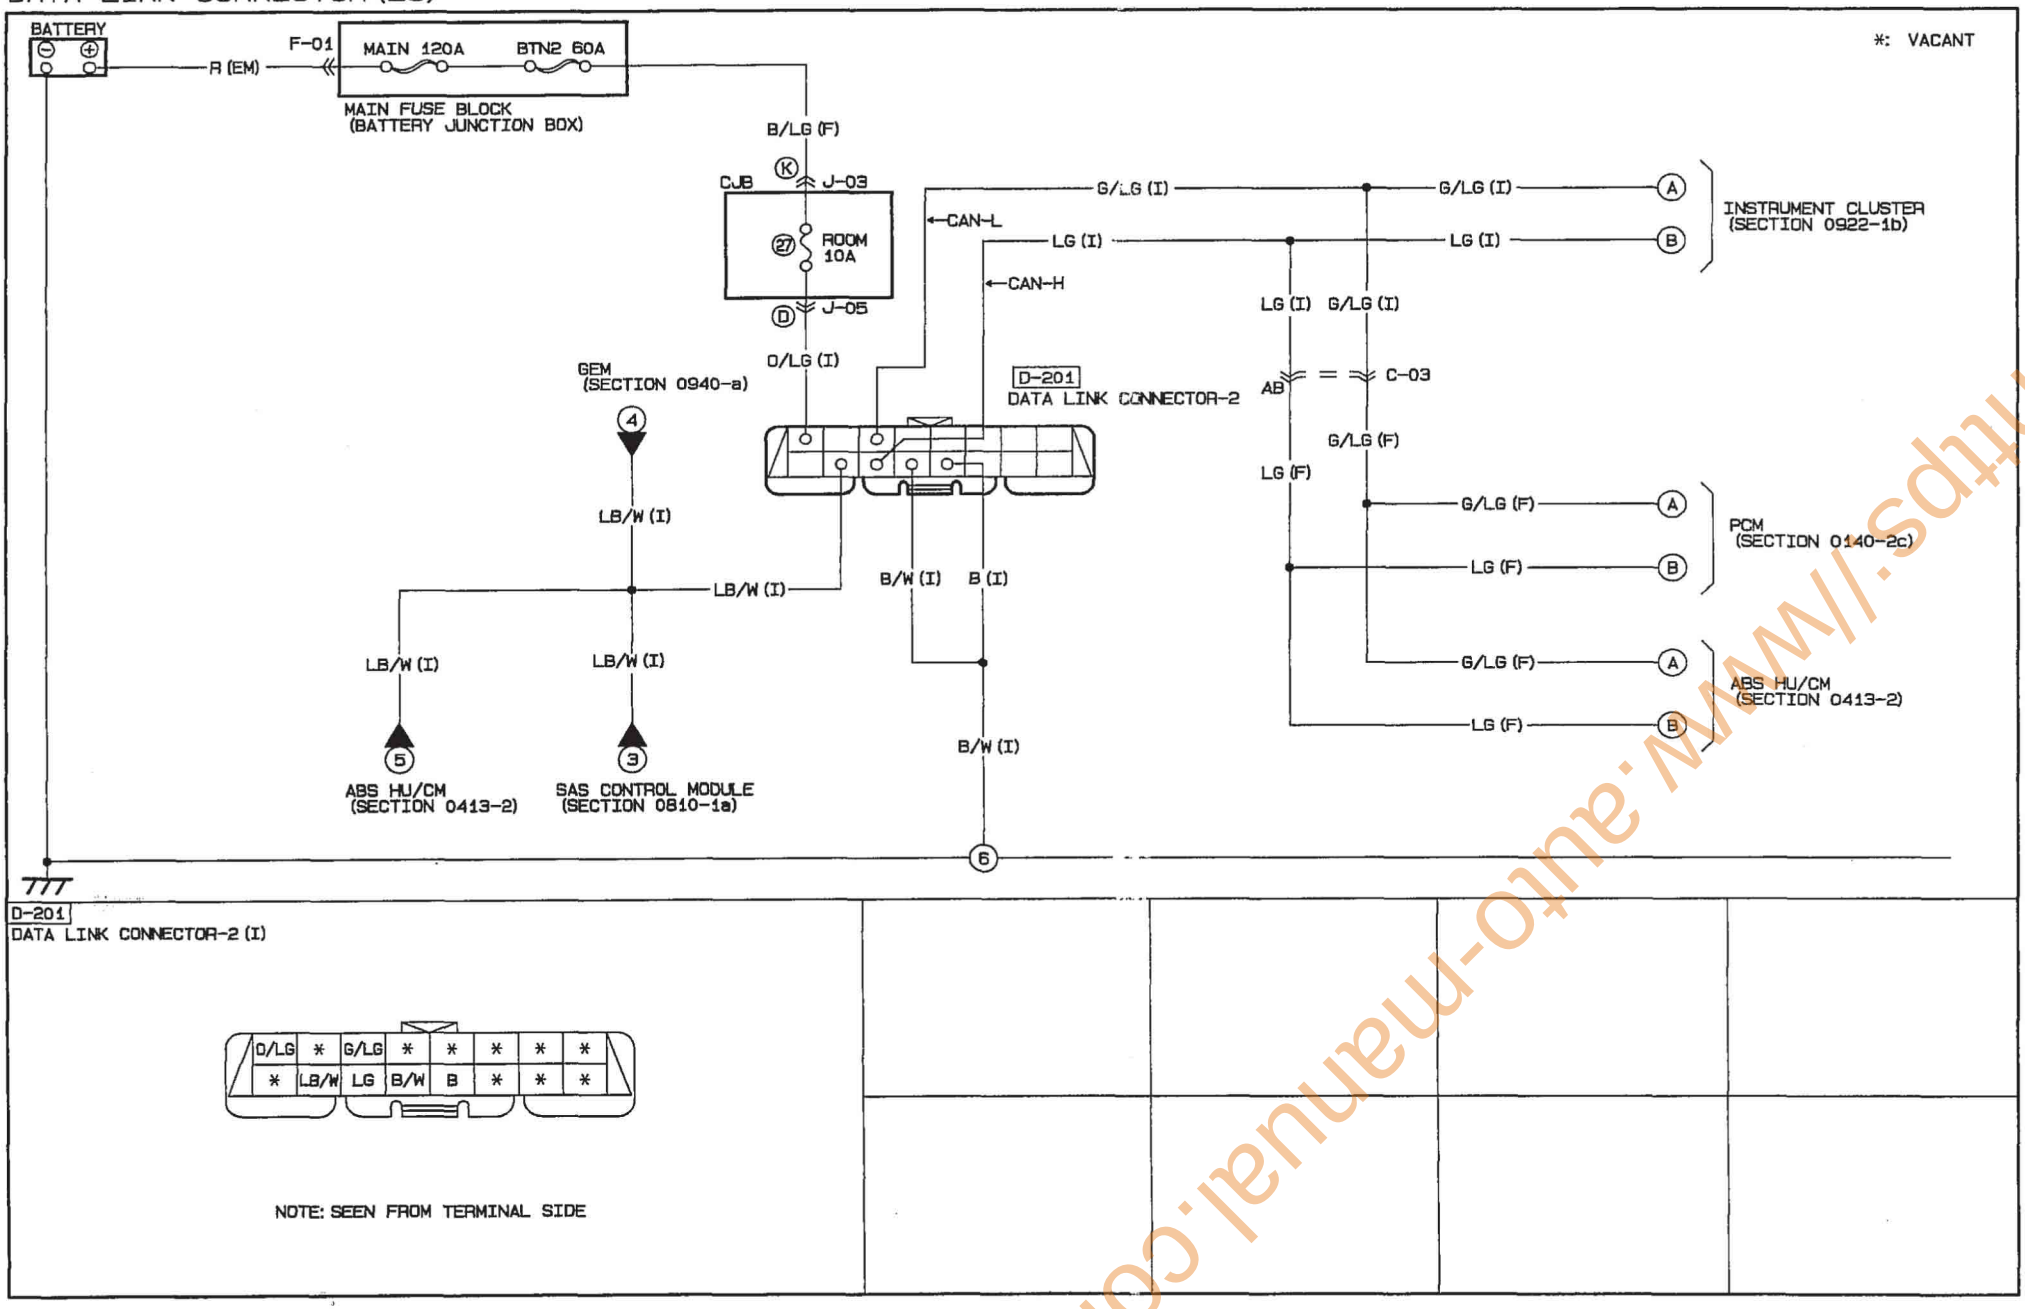

D-201
DATA LINK CONNECTOR-2 (I)


NOTE: SEEN FROM TERMINAL SIDE

https://www.auto-manual.com/

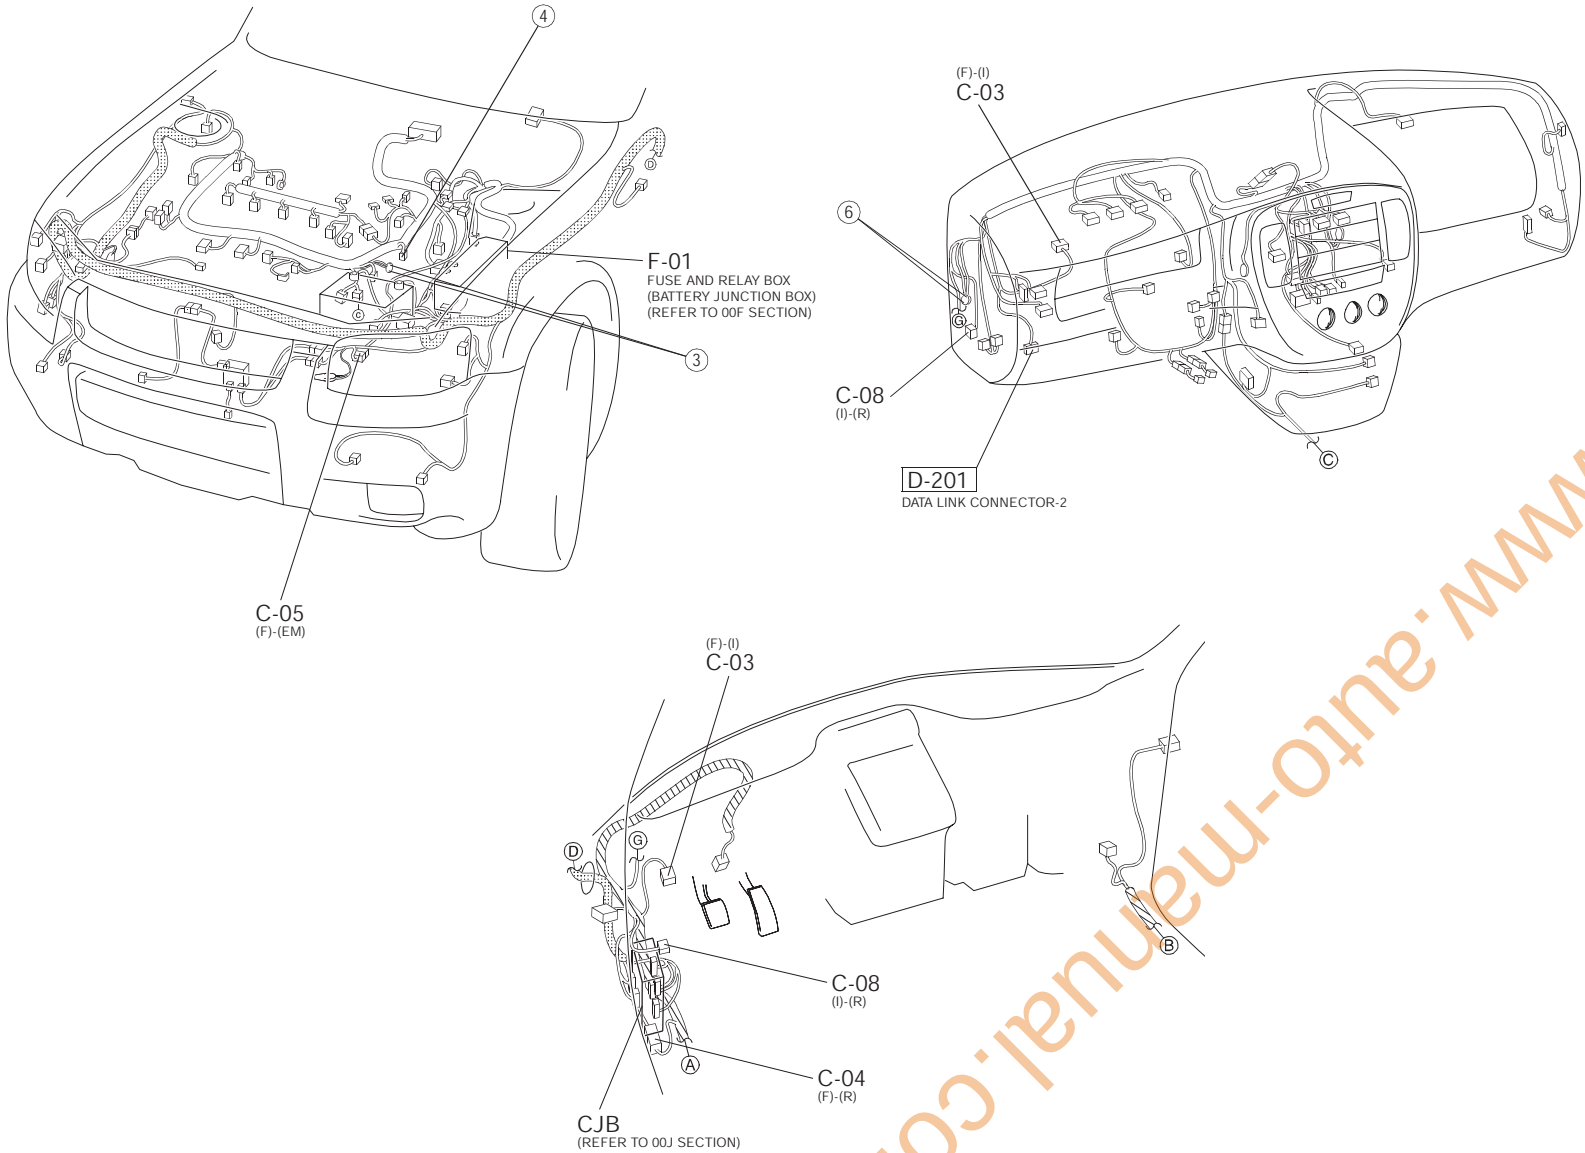


https://www.auto-manual.com/


COOLING SYSTEM (AJ (3.0L Duratec))



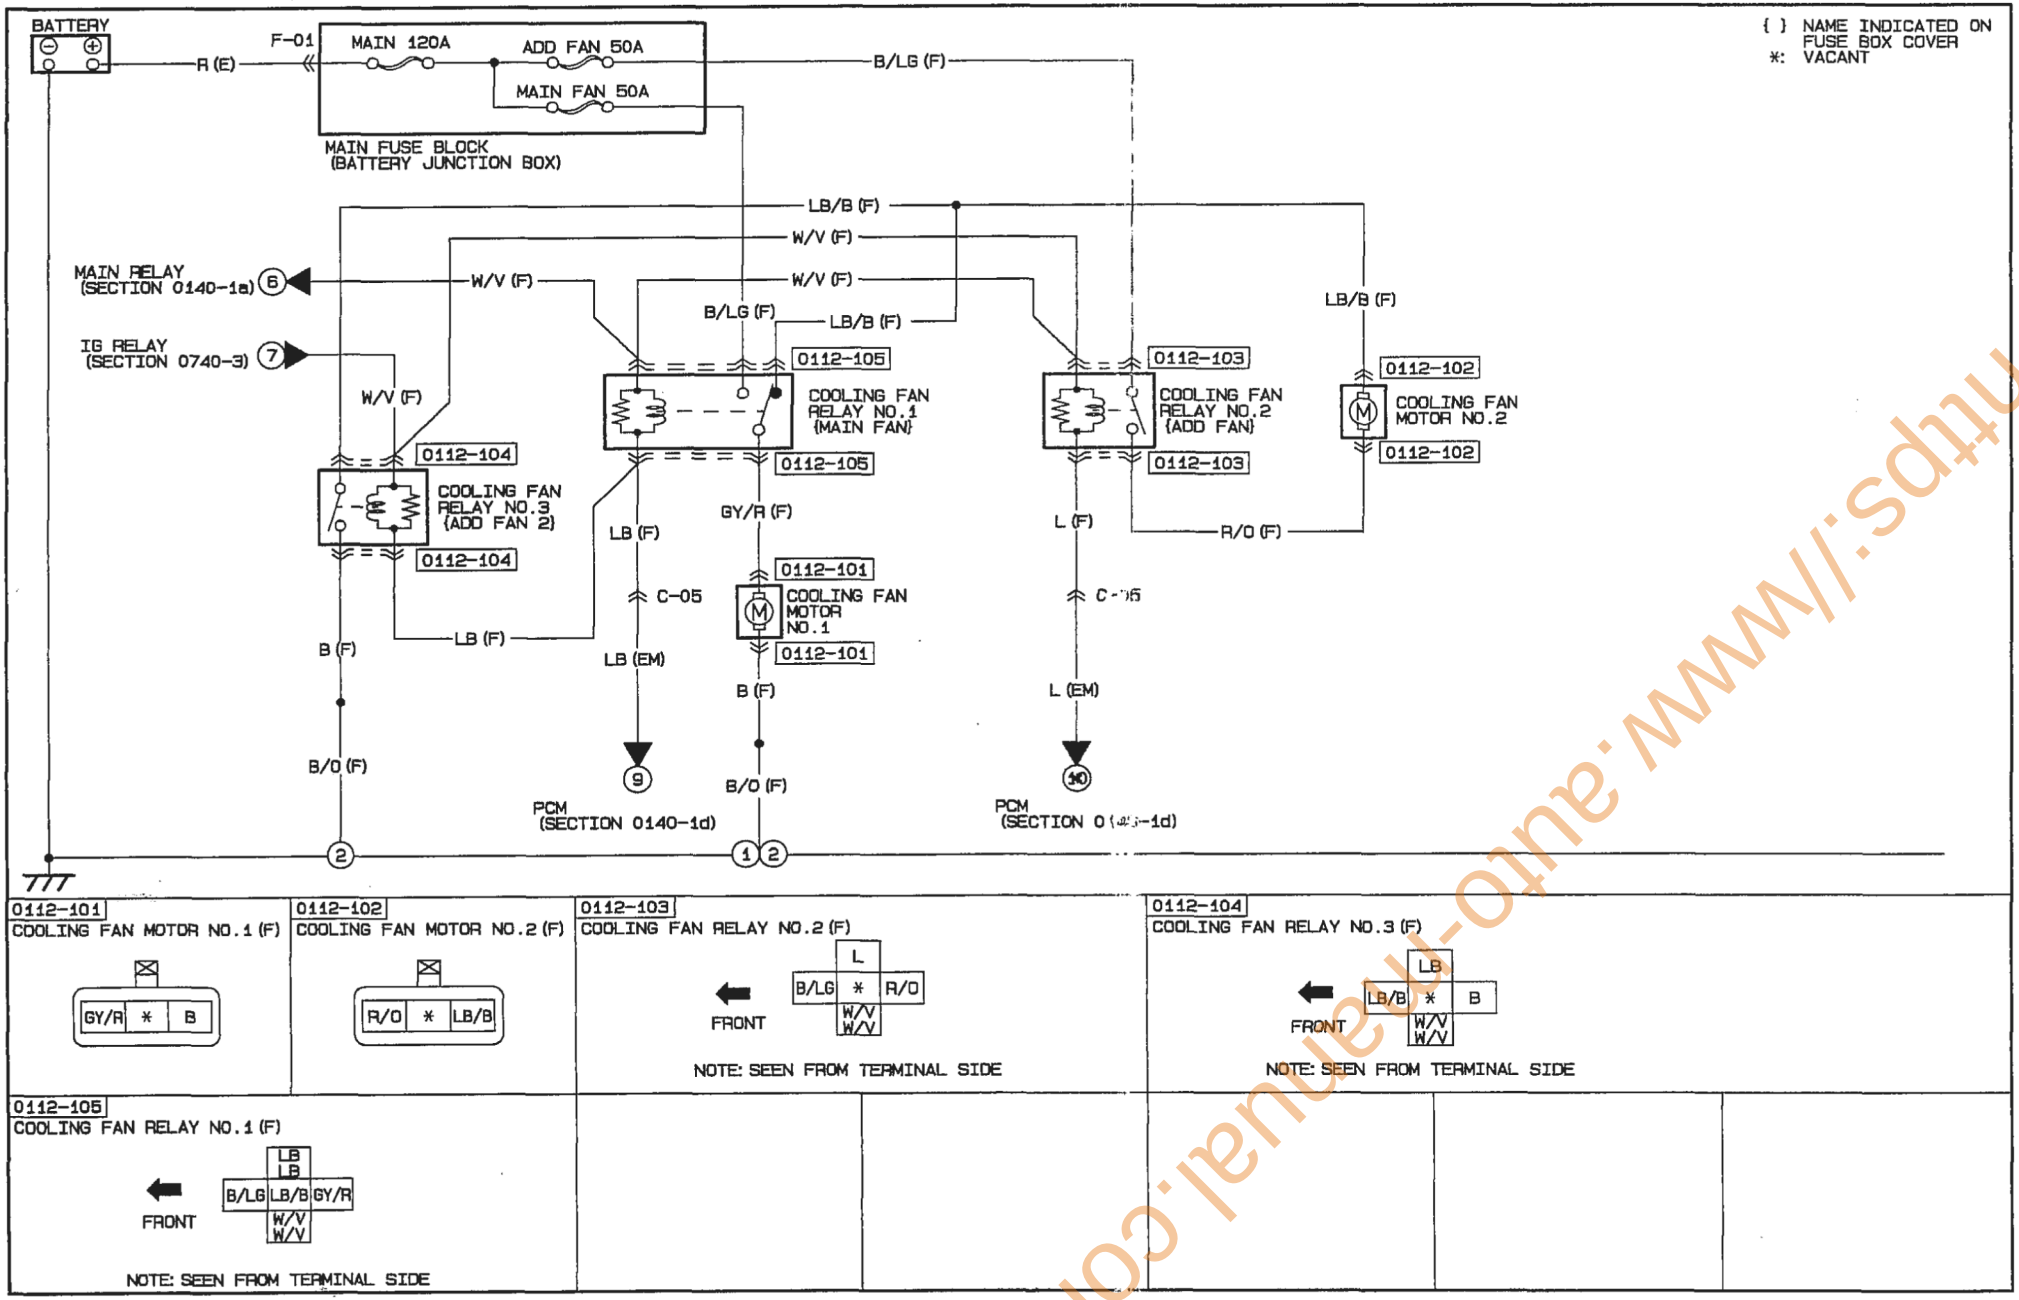


https://www.auto-manual.com/

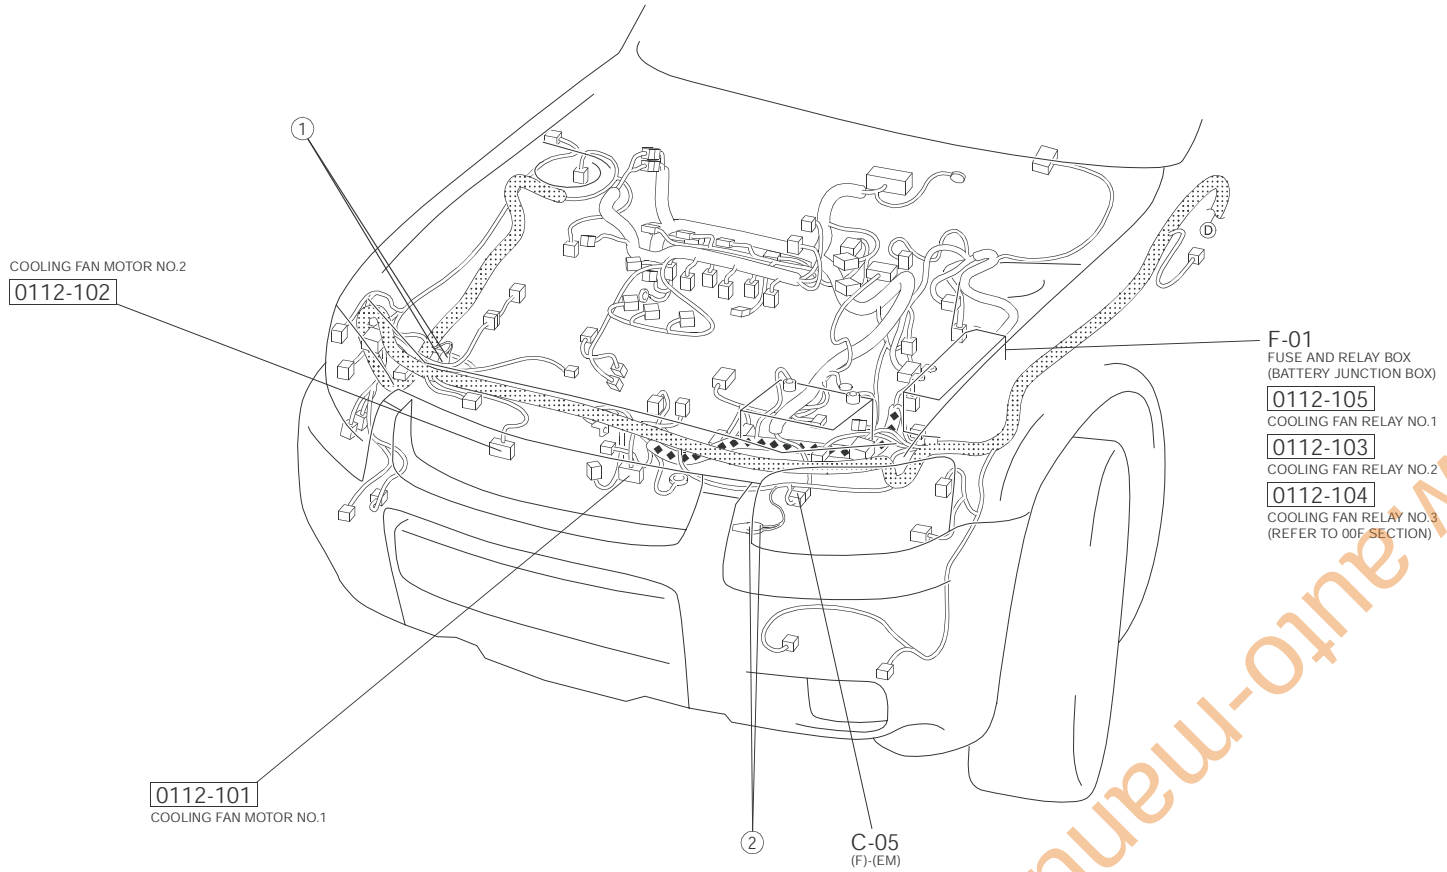



https://www.auto-manual.com/

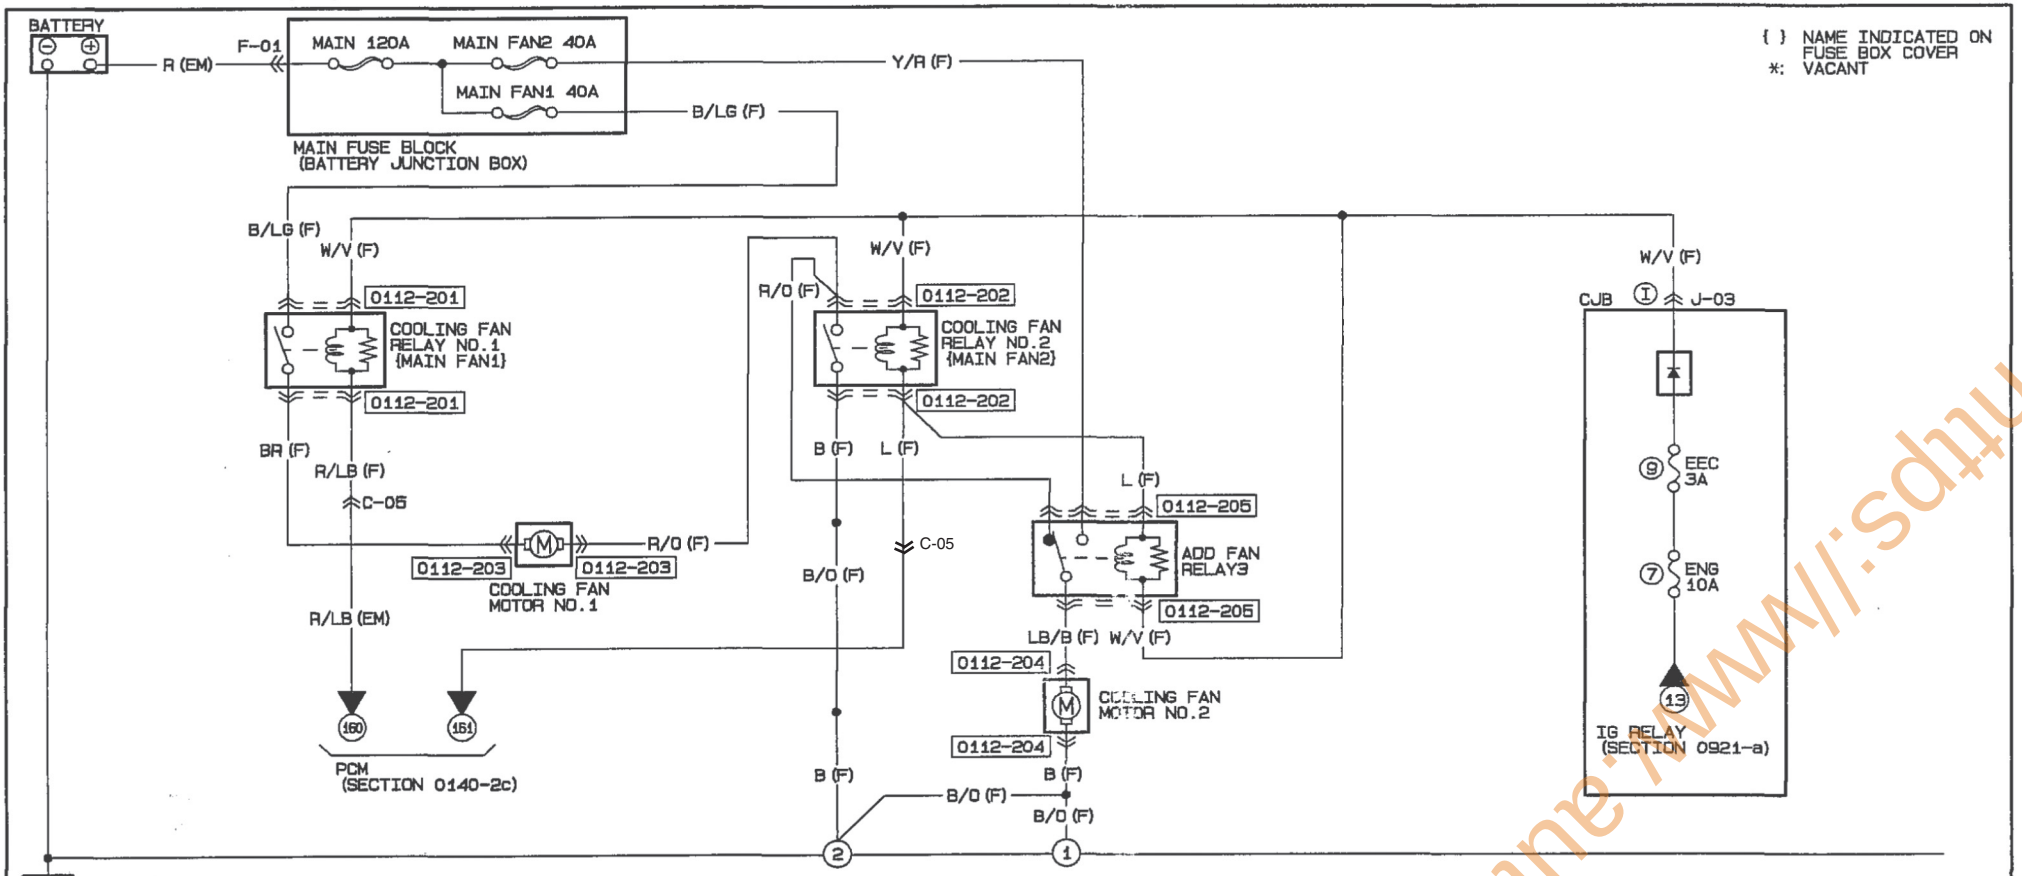

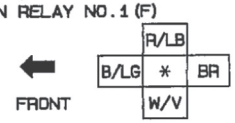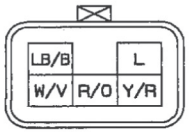
0112-201 COOLING FAN RELAY NO.1 (F)	0112-202 COOLING FAN RELAY NO.2 (F)	0112-203 COOLING FAN MOTER NO.1 (F)	0112-204 COOLING FAN MOTER NO.2 (F)	0112-205 ADD FAN RELAY3 (F)
				
NOTE: SEEN FROM TERMINAL SIDE	NOTE: SEEN FROM TERMINAL SIDE			

https://www.auto-manual.com/

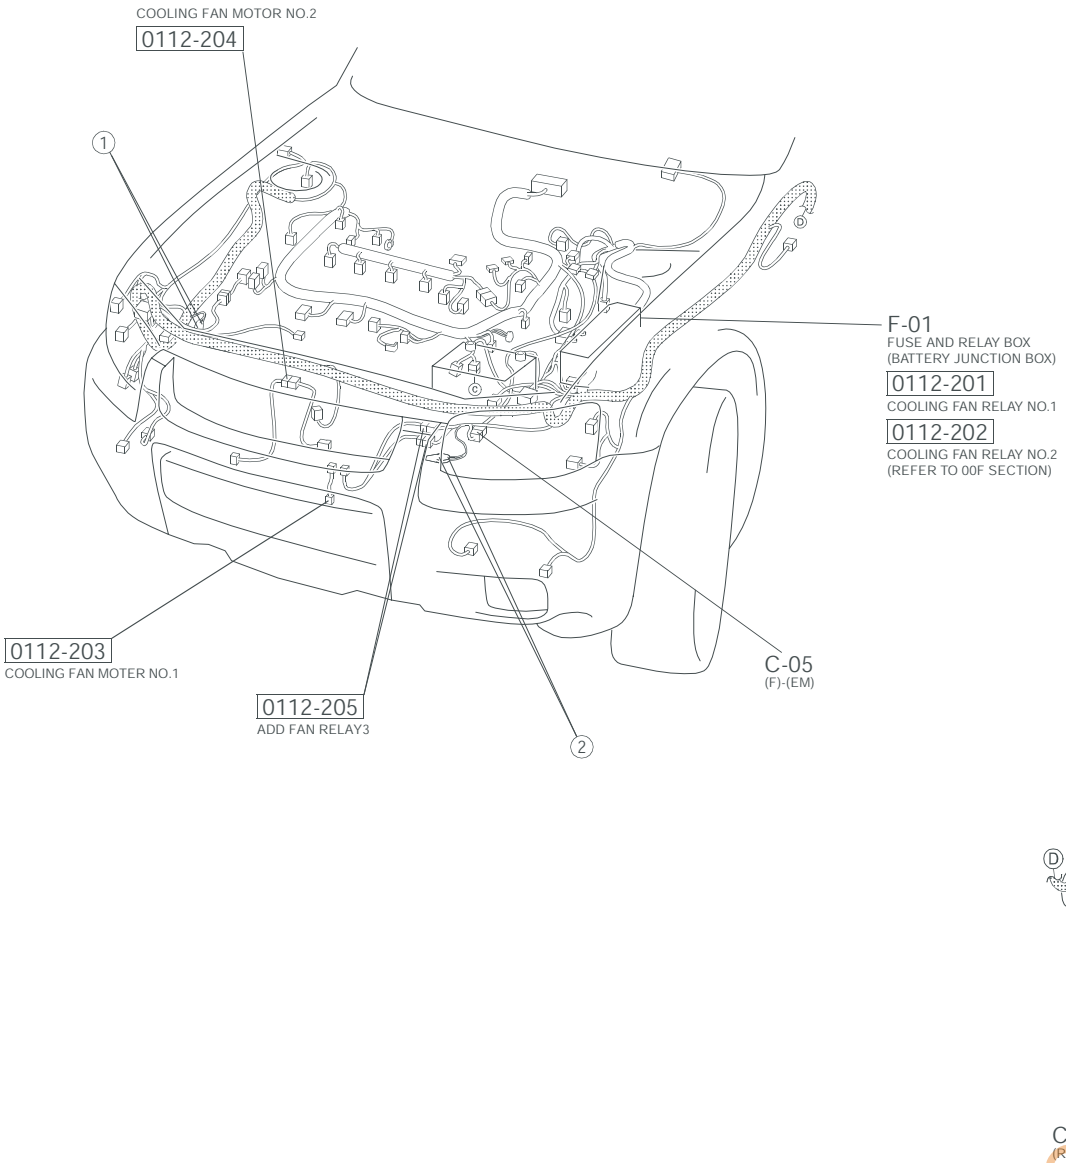


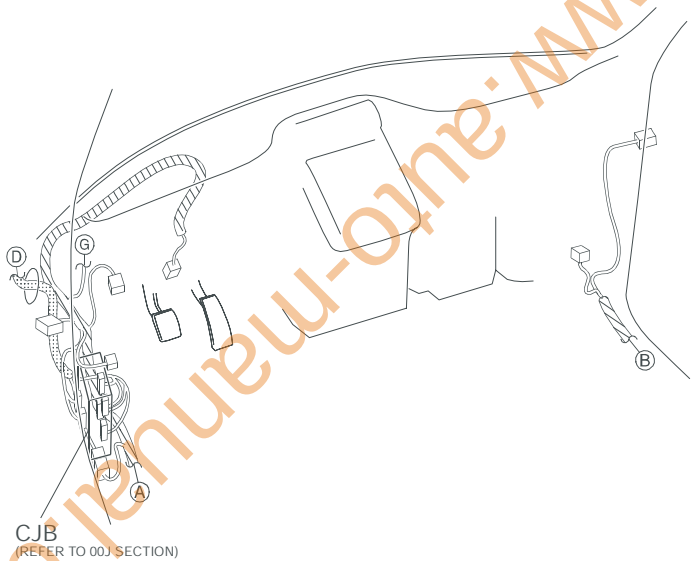


https://www.auto-manual.com/

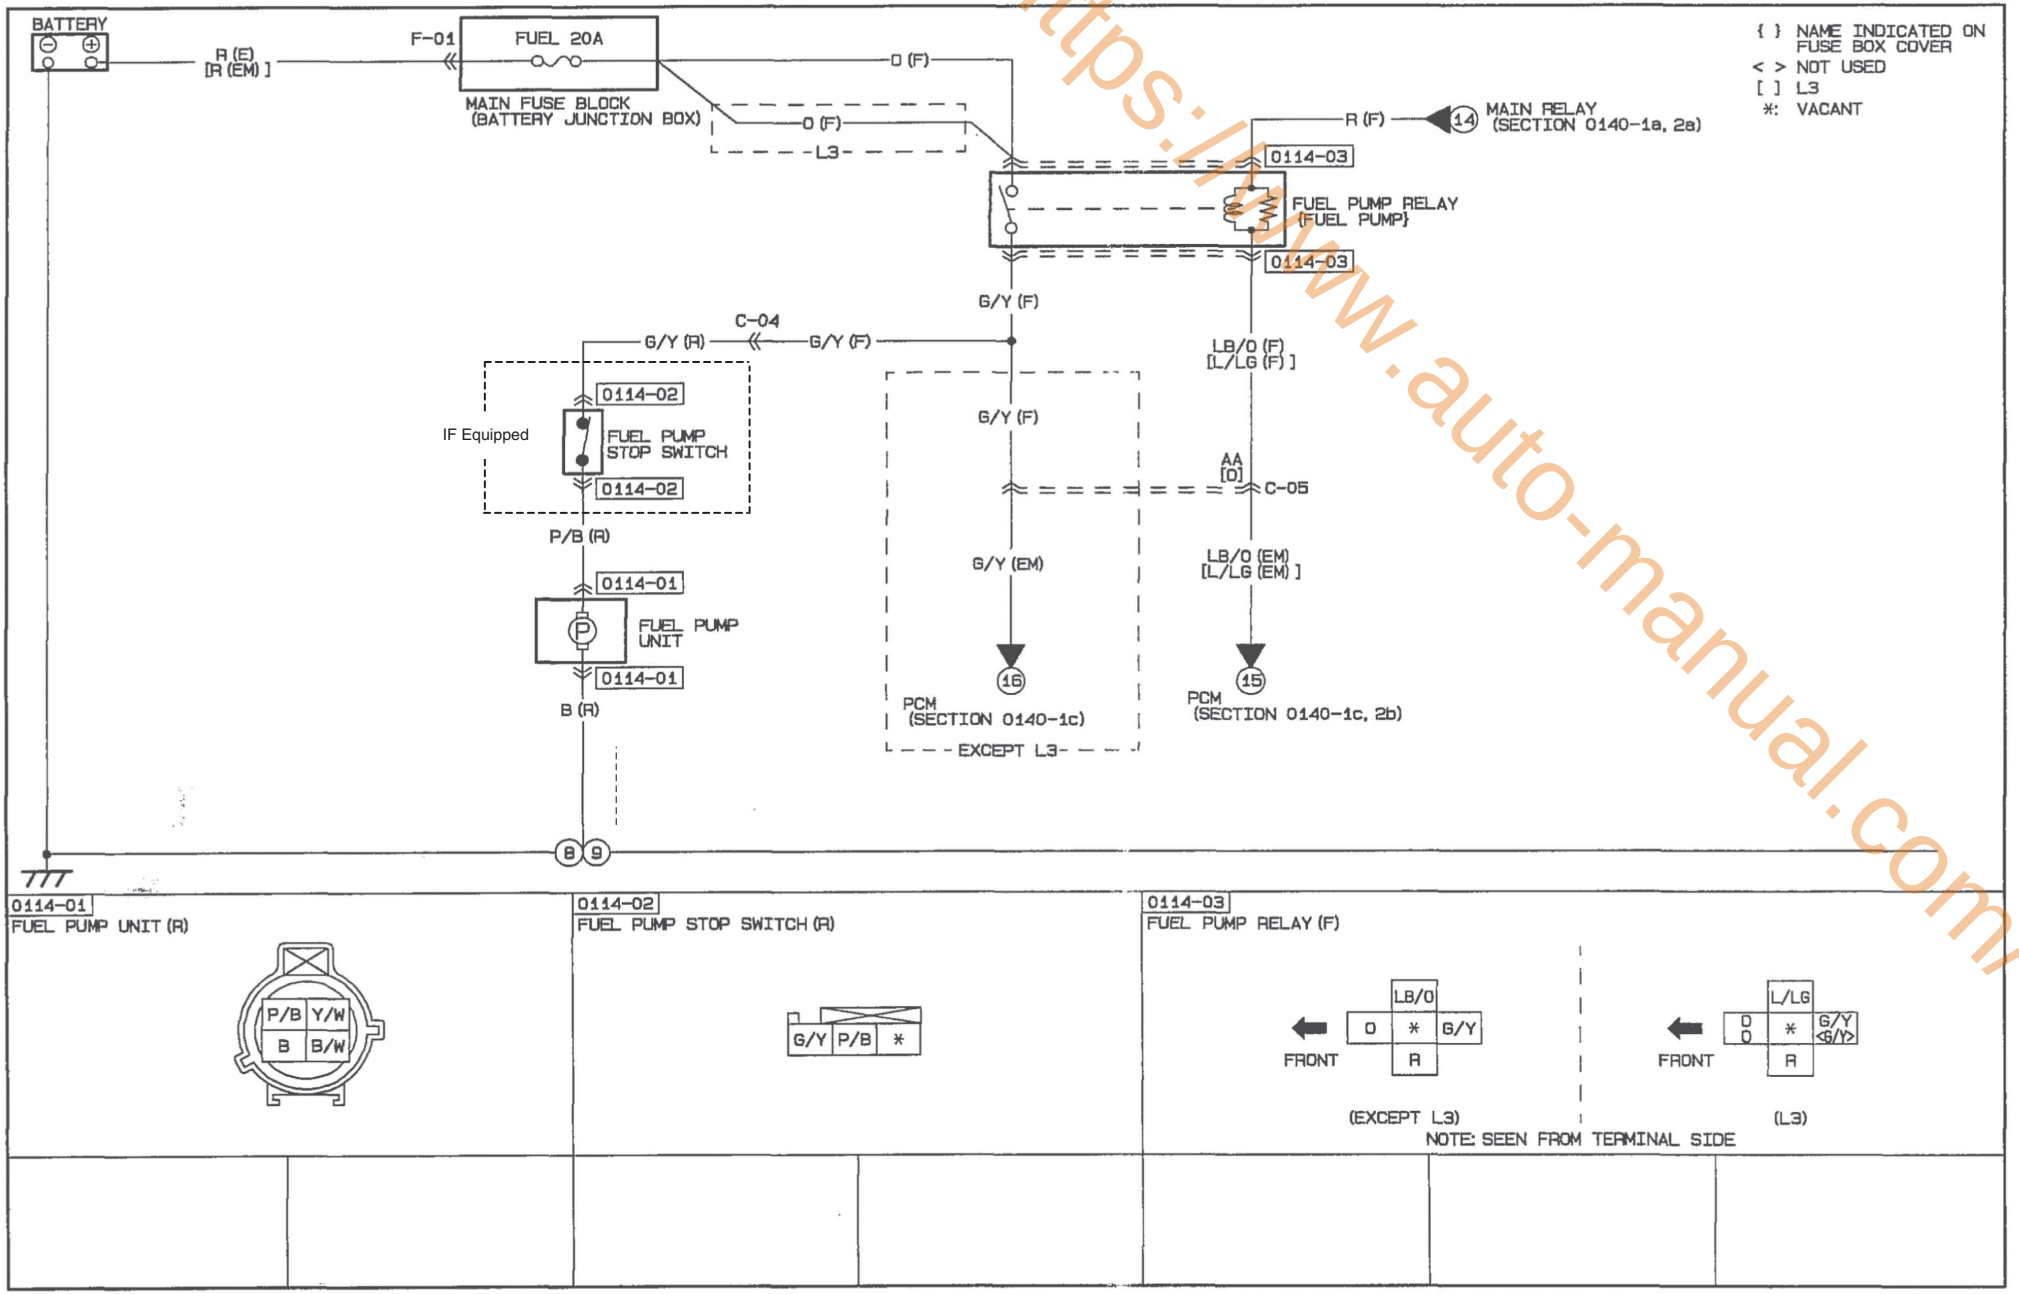


https://www.auto-manual.com/

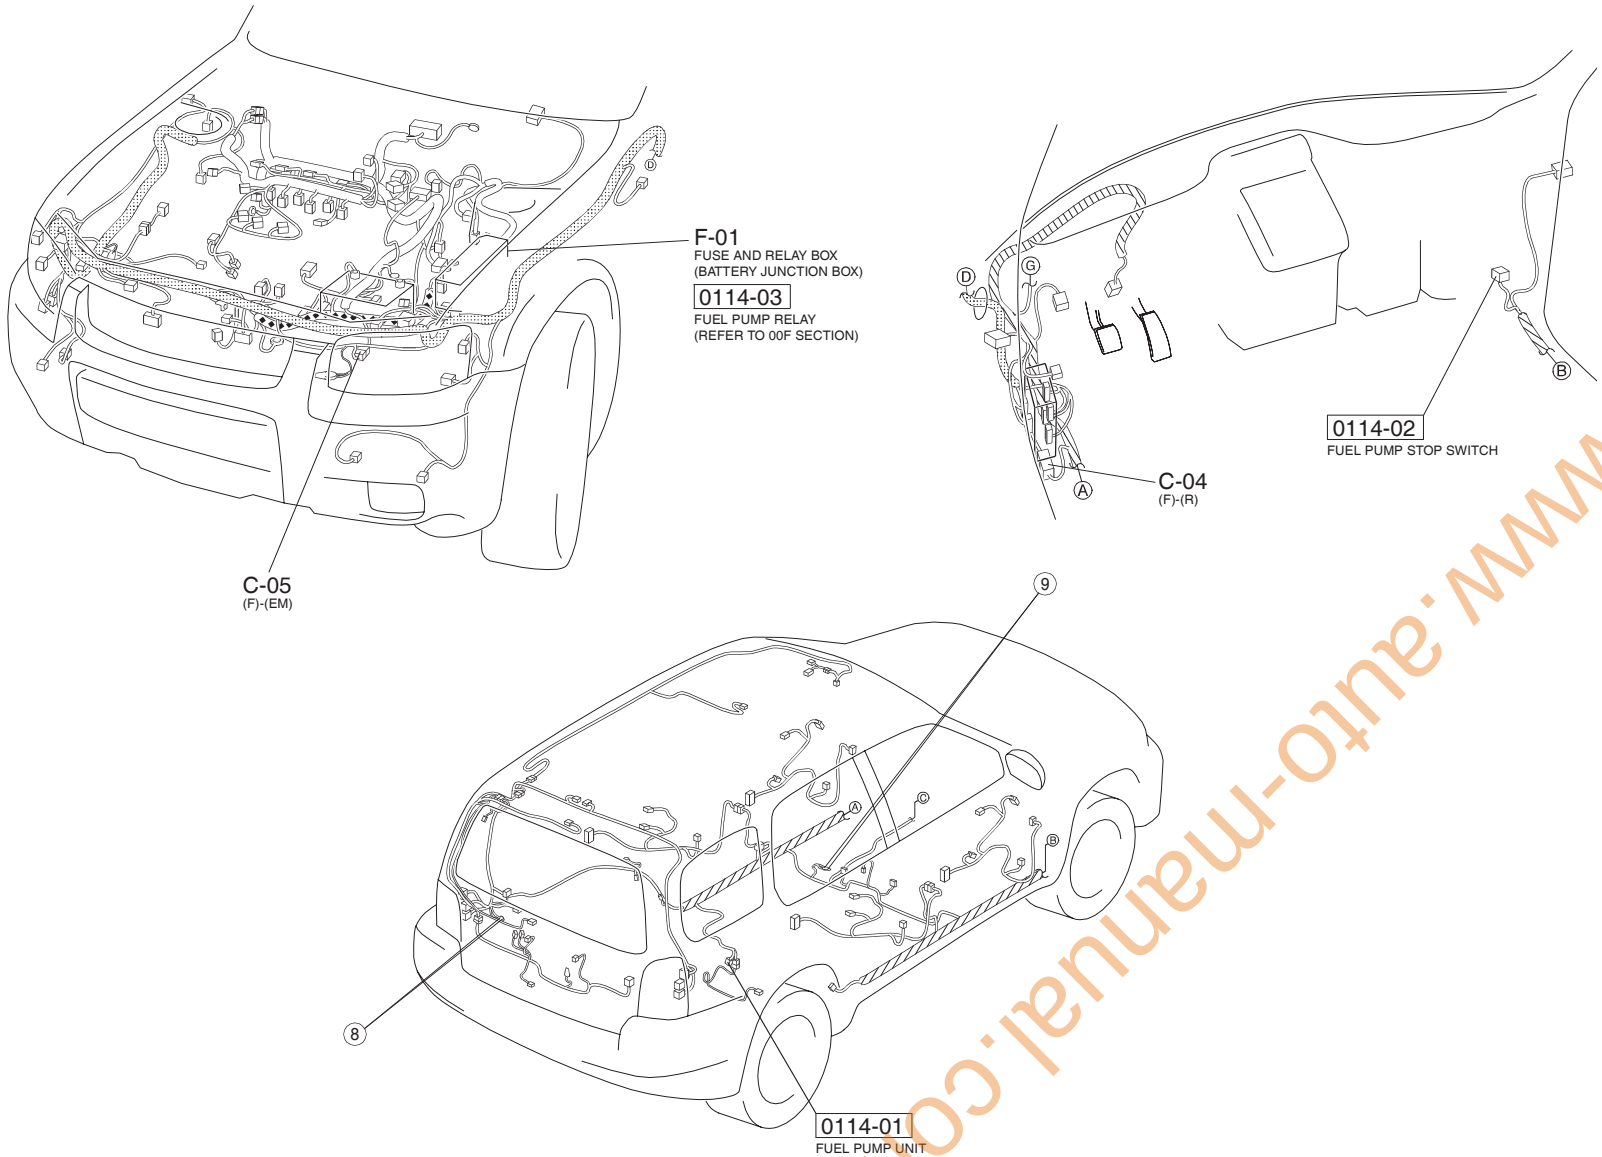


https://www.auto-manual.com/

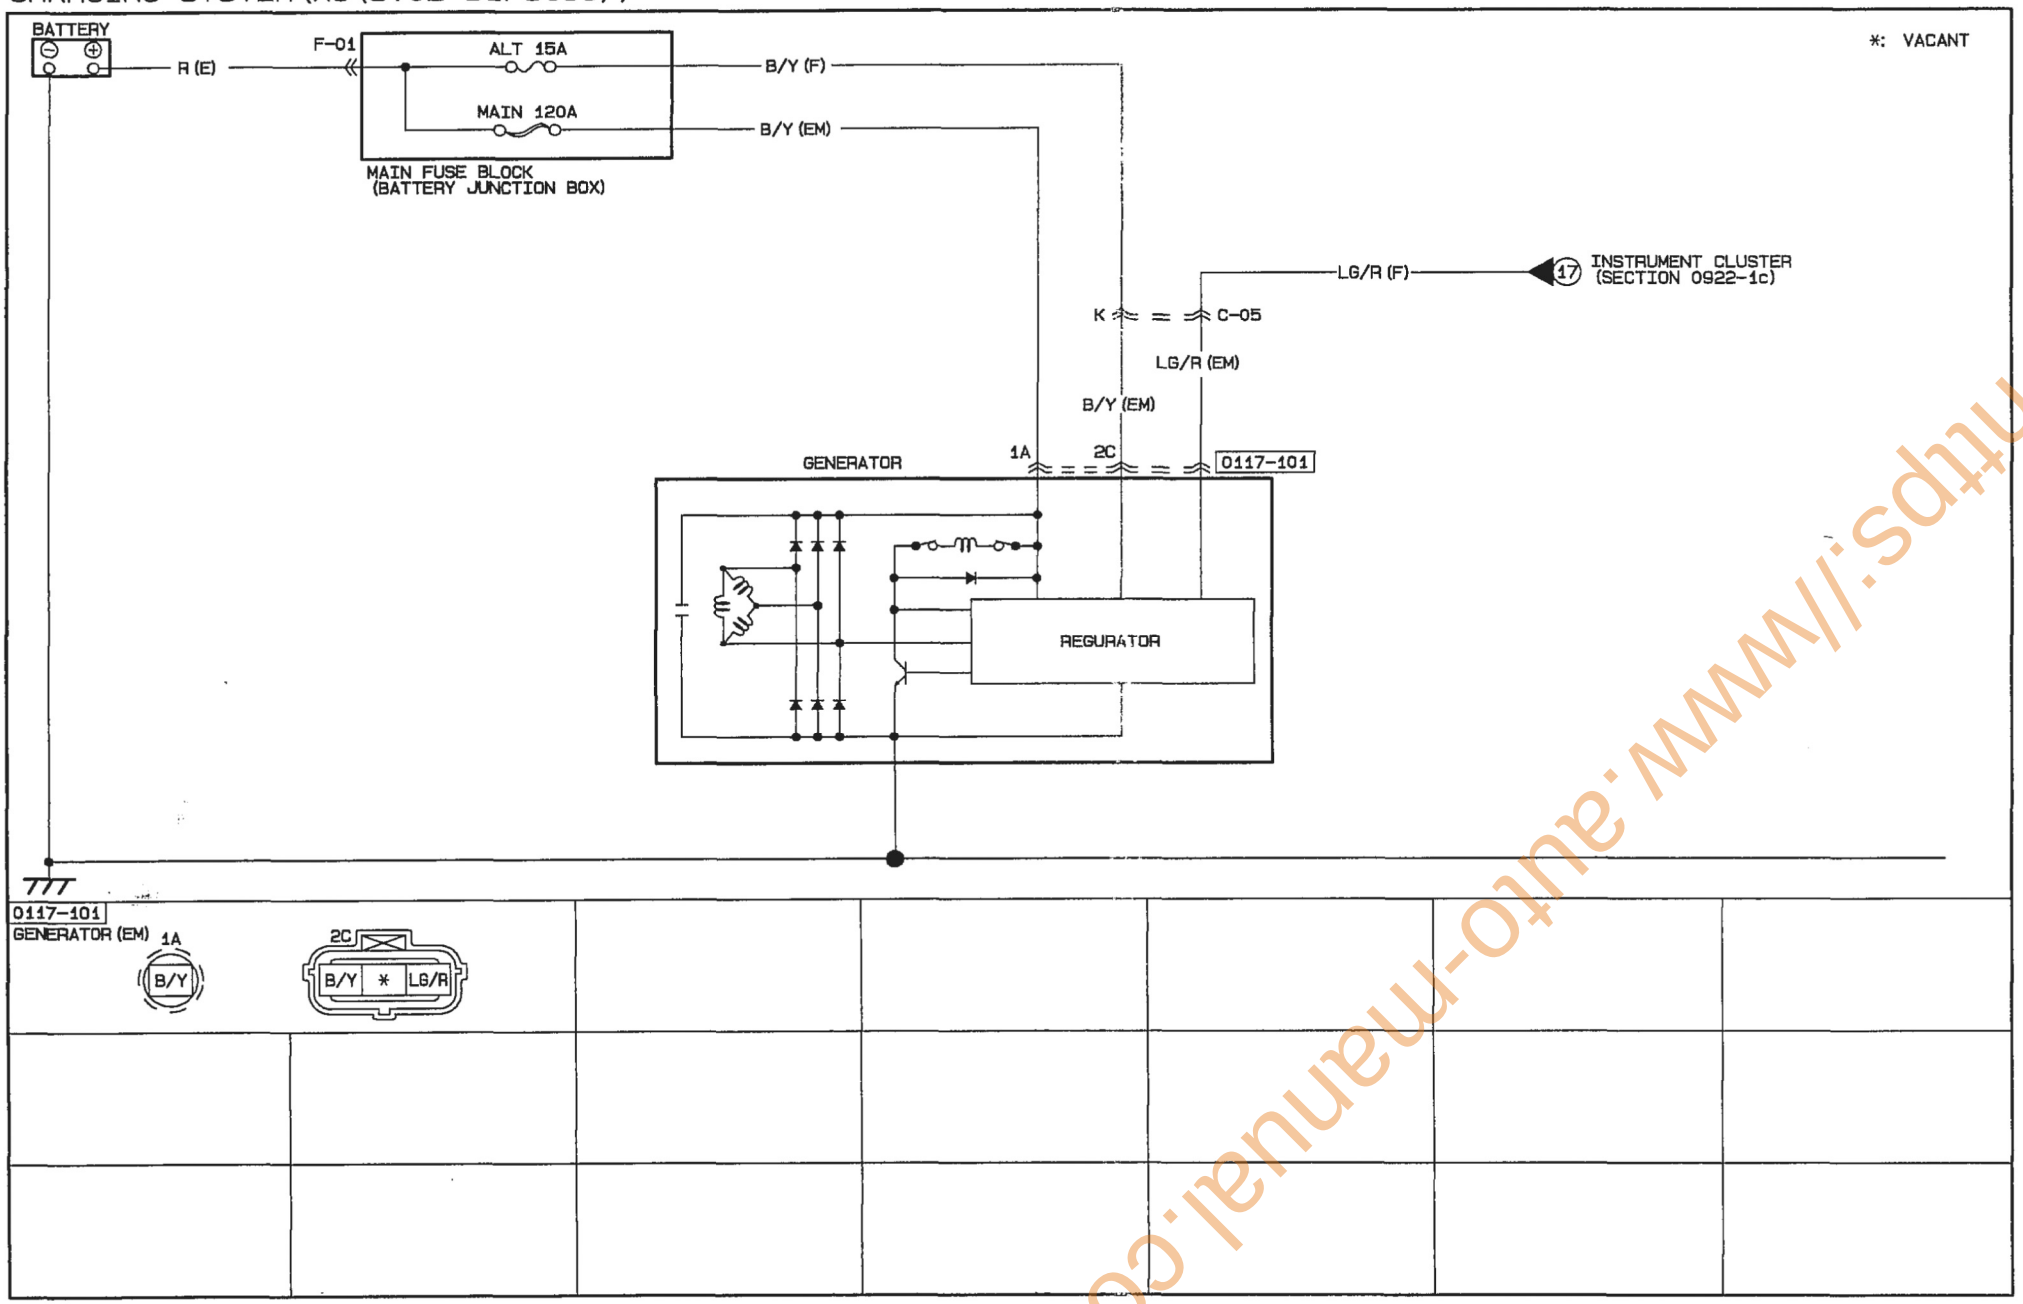

https://www.auto-manual.com/

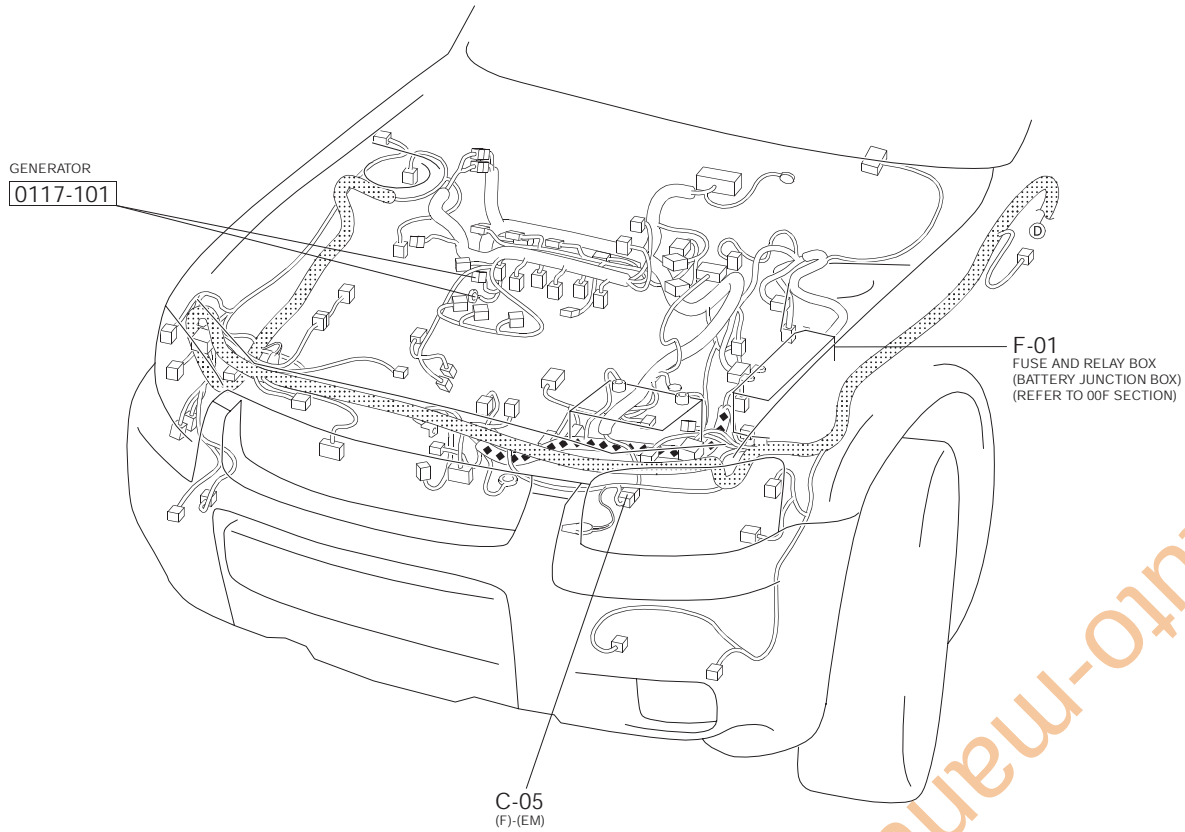

https://www.auto-manual.com/

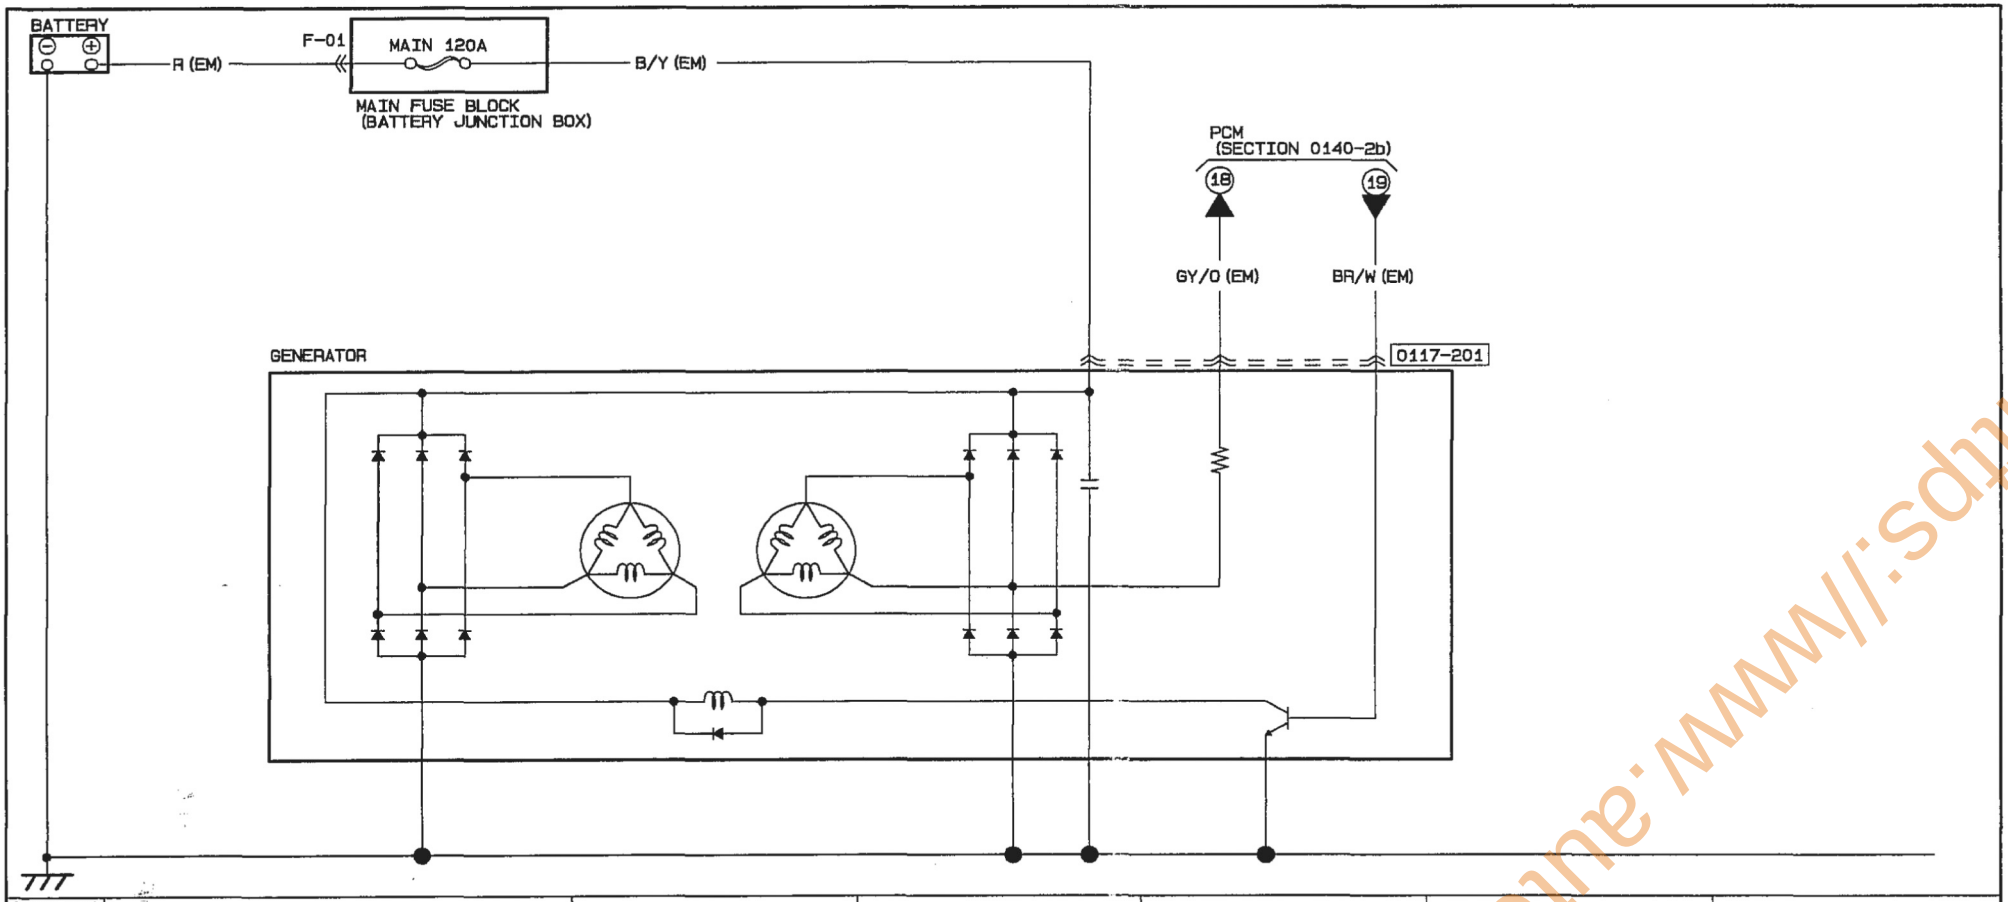


0117-201
GENERATOR (EM)






https://www.auto-manual.com/

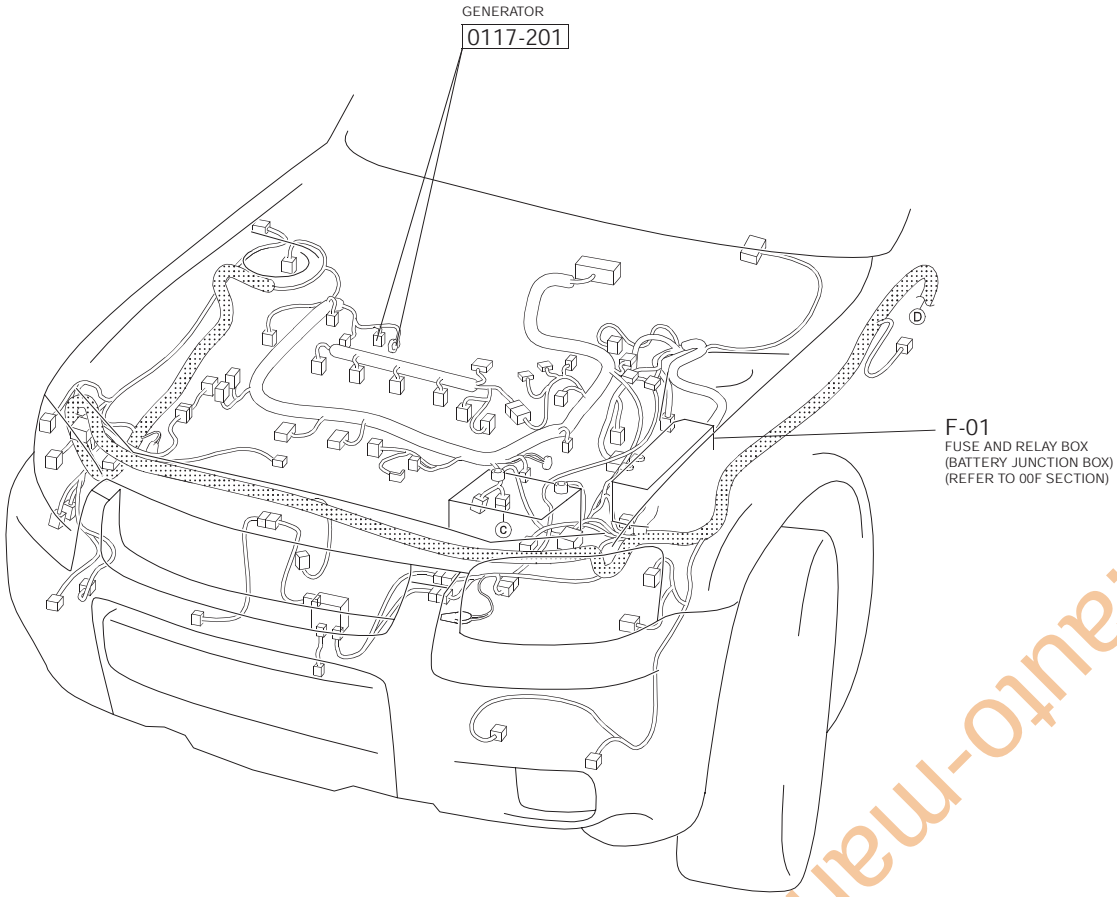

https://www.auto-manual.com/

STARTING SYSTEM (AJ (3.0L Duratec))

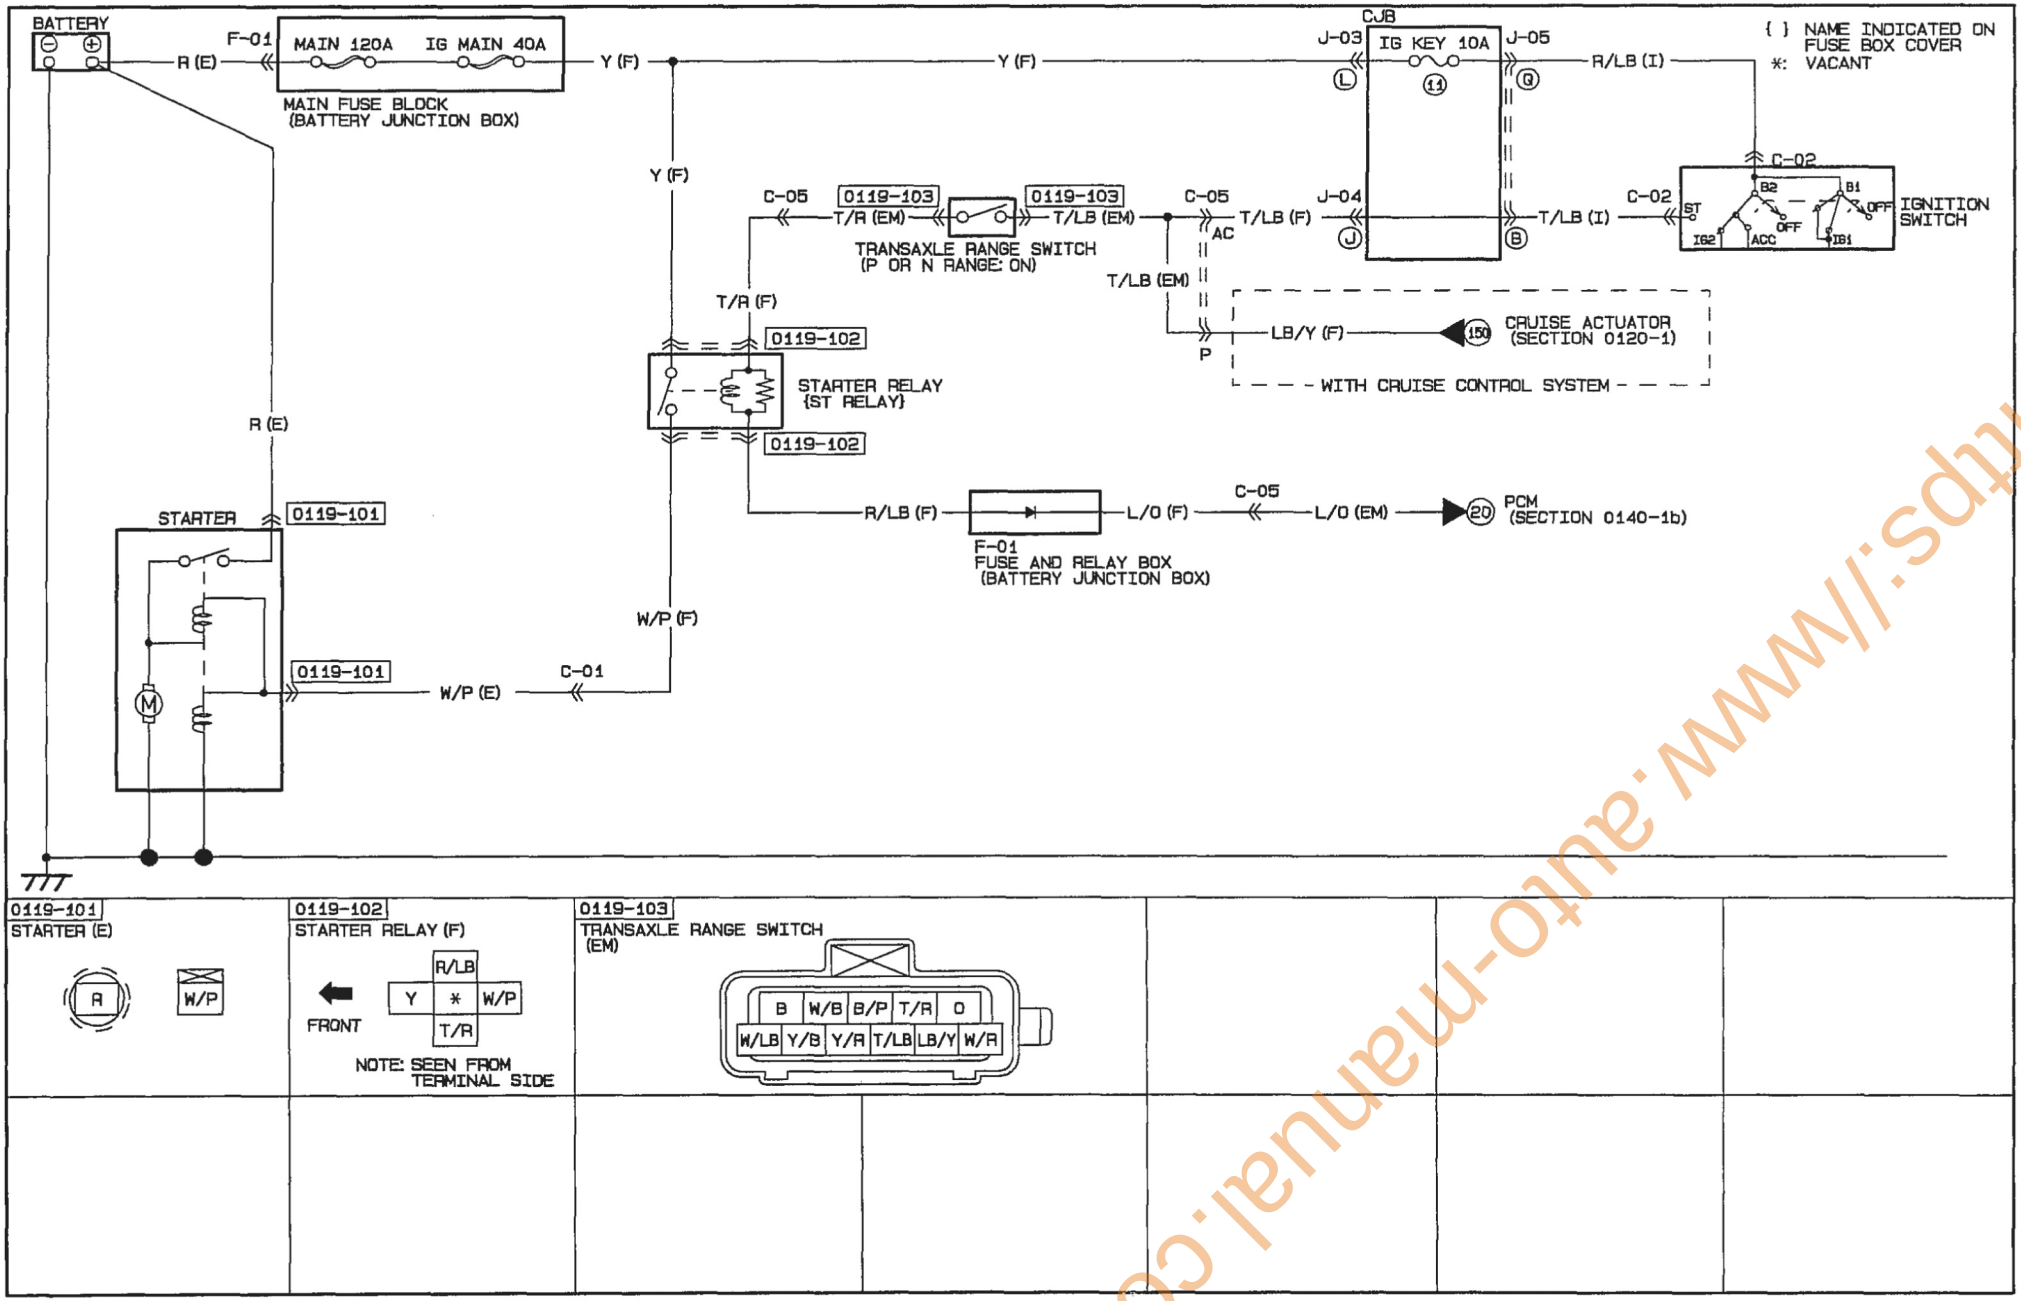

0119-101 STARTER (E)


0119-102 STARTER RELAY (F)

NOTE: SEEN FROM TERMINAL SIDE

0119-103 TRANSAXLE RANGE SWITCH (EM)


https://www.auto-manual.com/

HARNESS SYMBOL : (F) (E) (R)

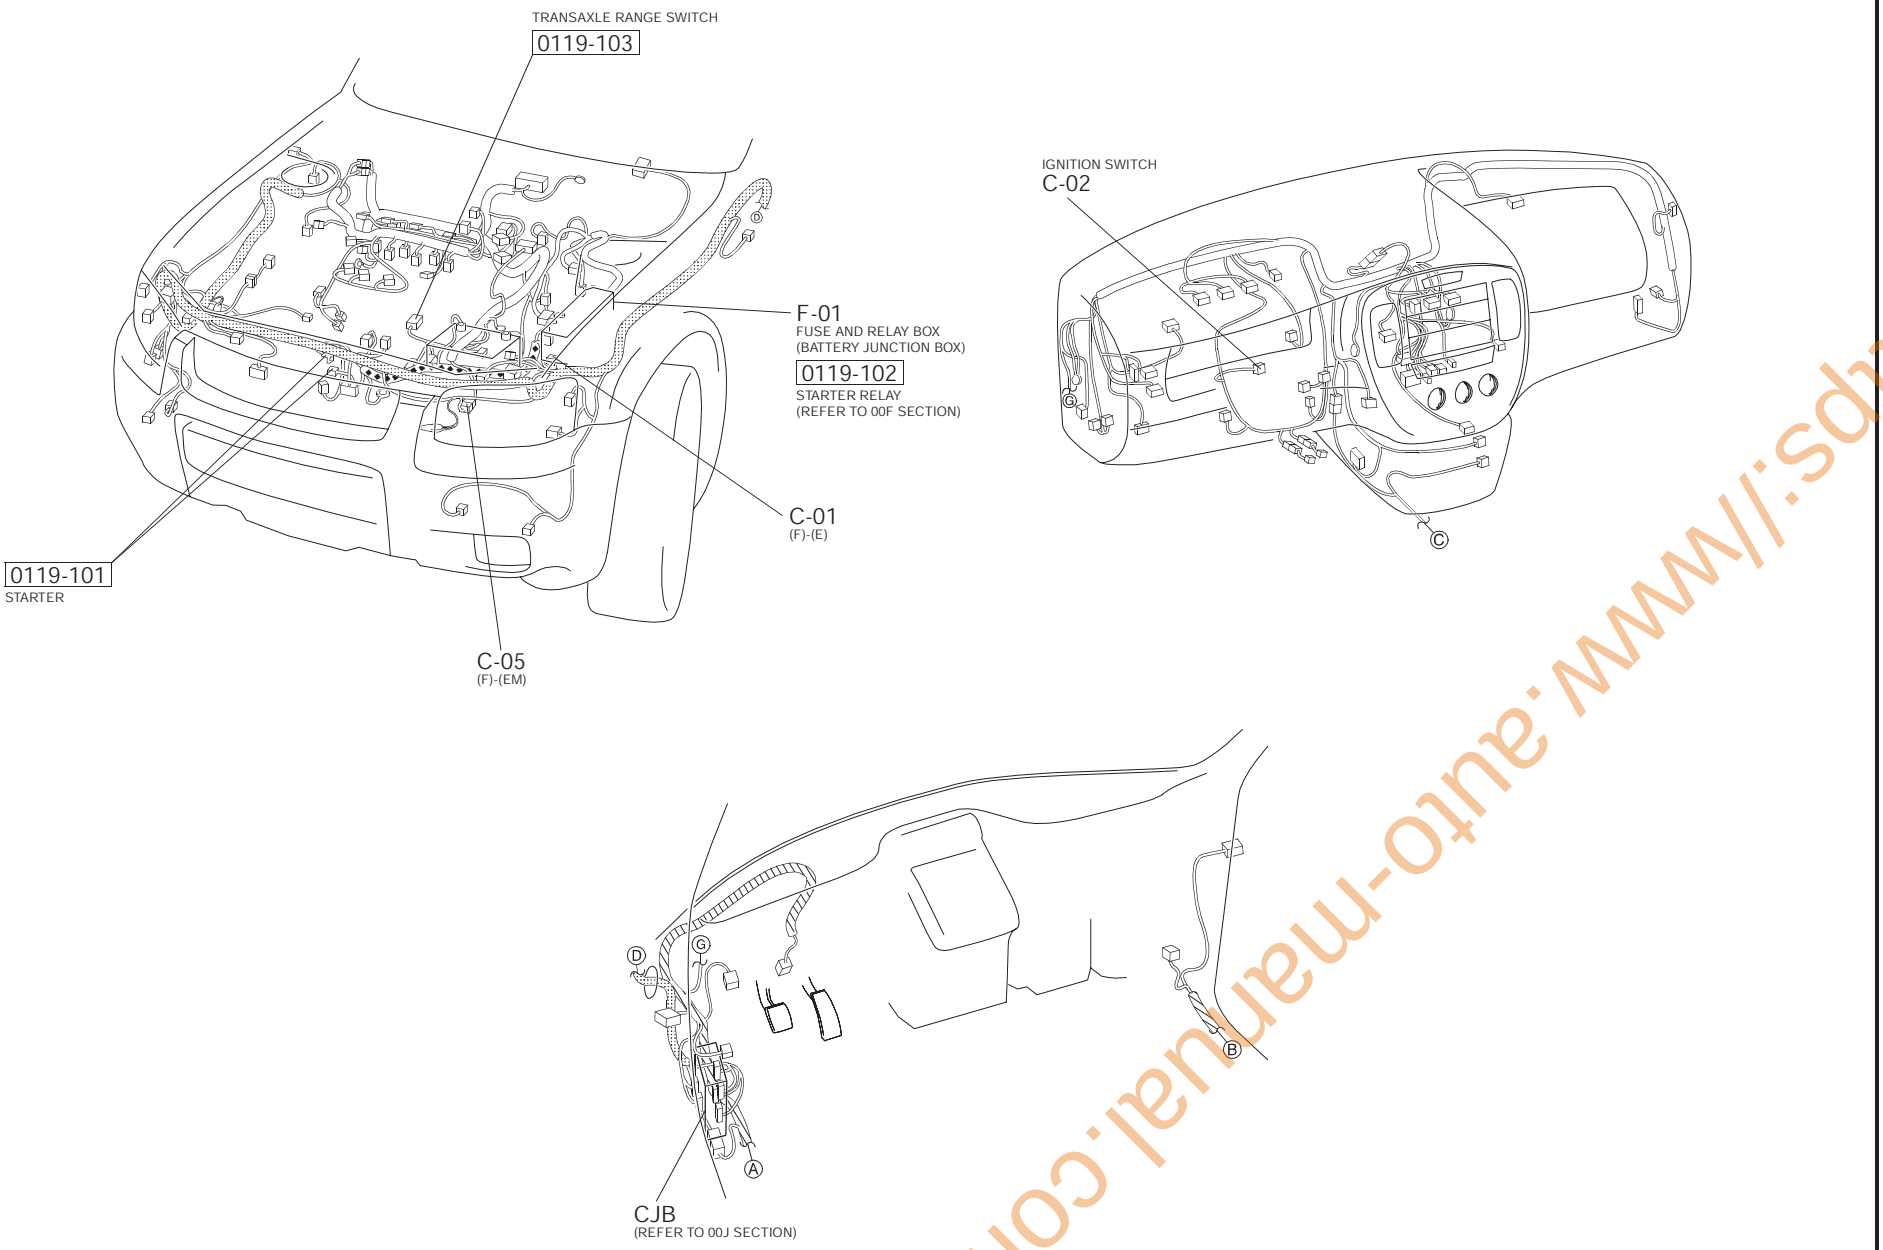

https://www.auto-manual.com/


STARTING SYSTEM (L3)

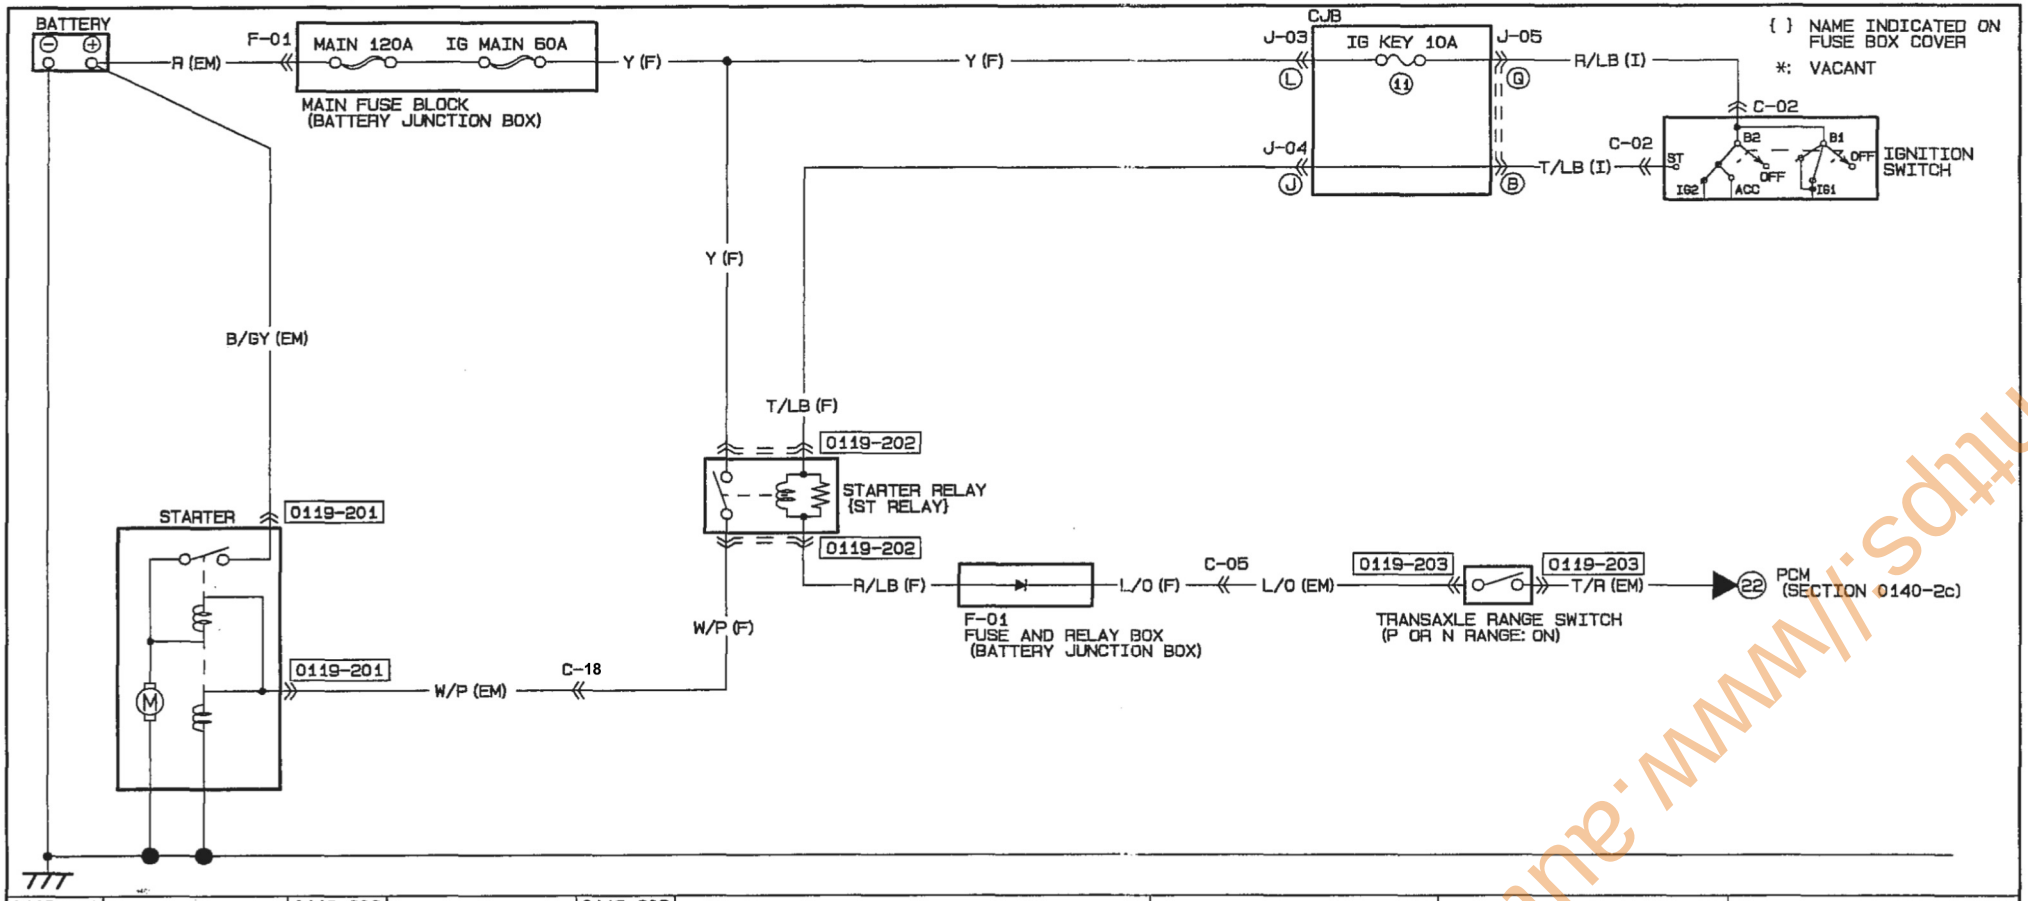

0119-201 STARTER (EM)




0119-202 STARTER RELAY (F)




NOTE: SEEN FROM TERMINAL SIDE

0119-203 TRANSAXLE RANGE SWITCH (EM)




https://www.auto-manual.com/

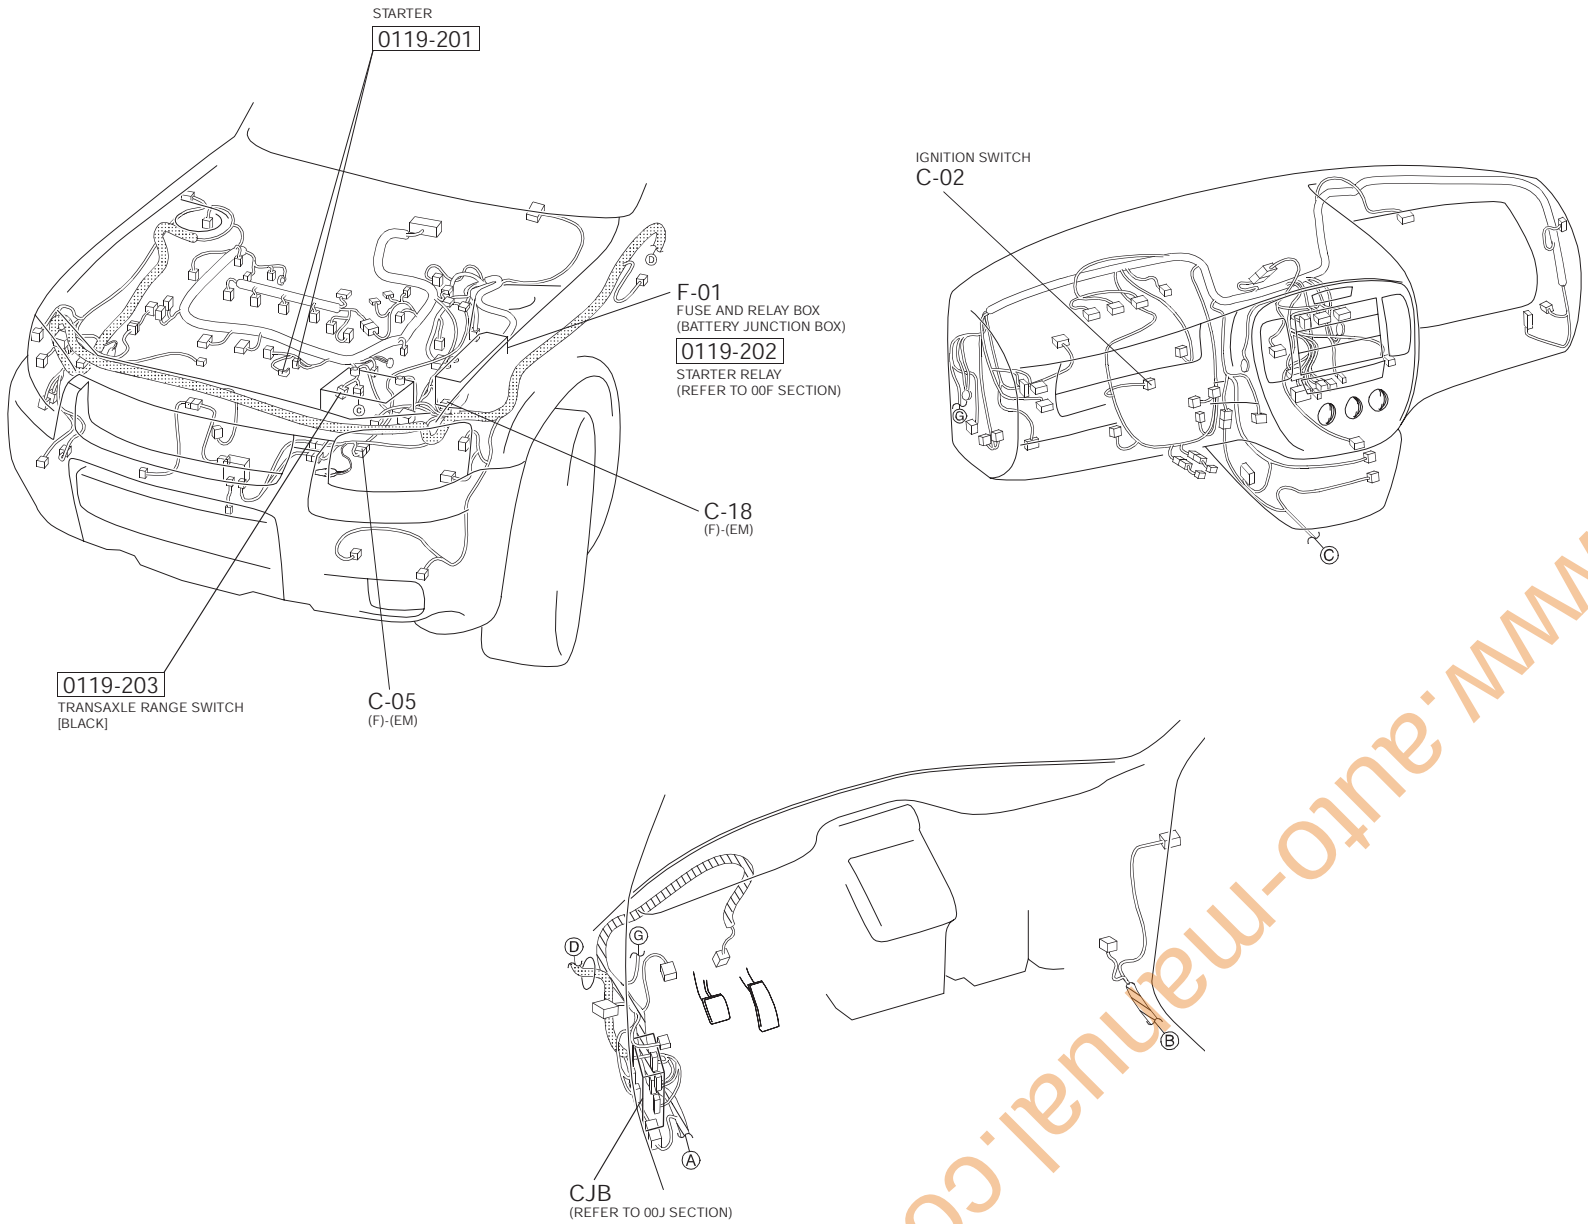

https://www.auto-manual.com/

CRUISE CONTROL SYSTEM (AJ (3.0L Duratec)) If Equipped

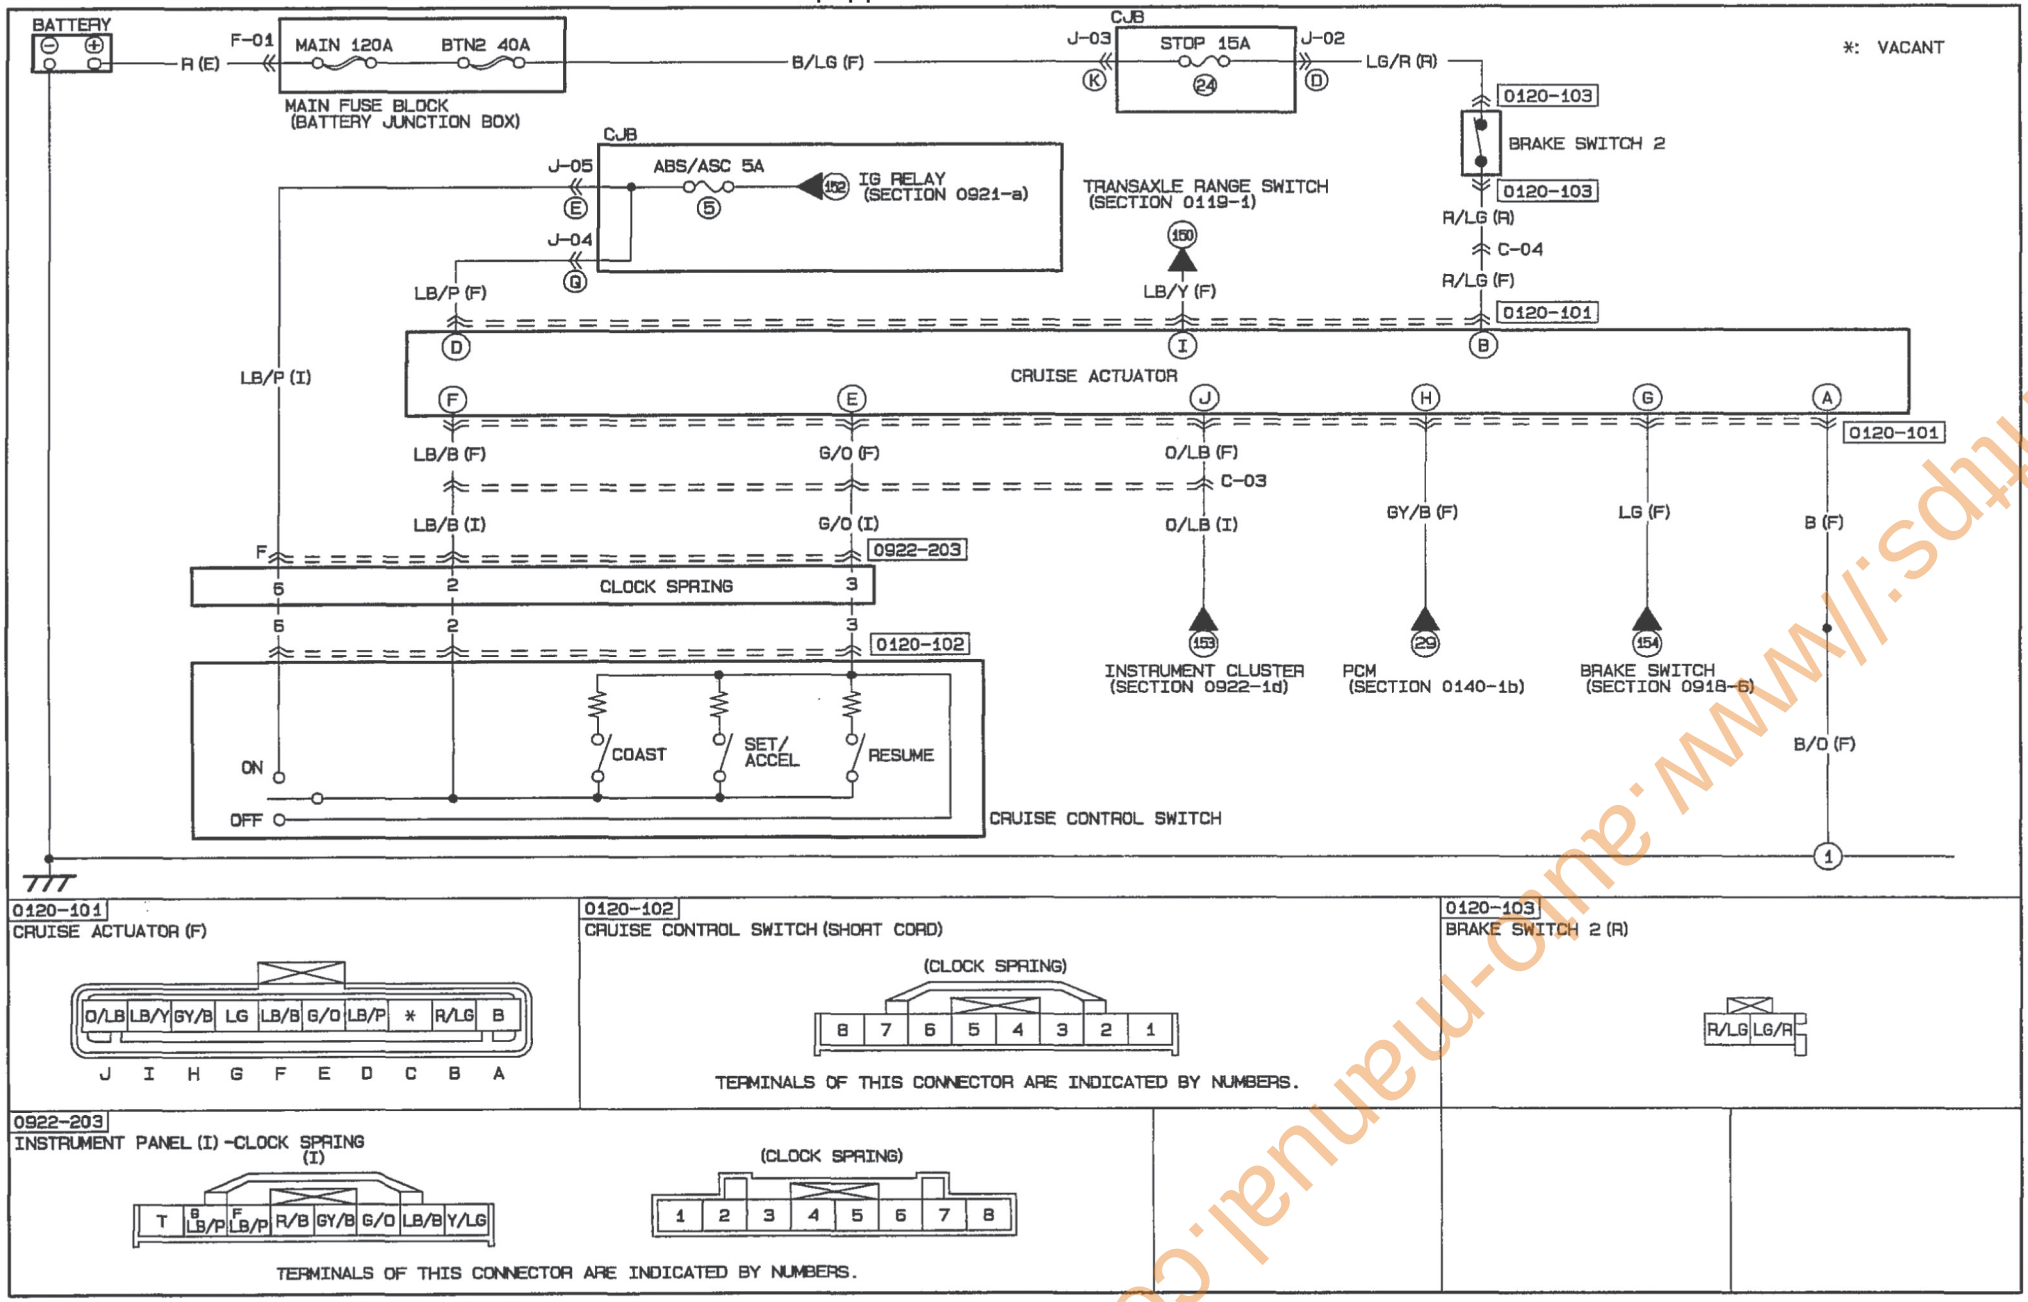

0120-101 CRUISE ACTUATOR (F)

0120-102 CRUISE CONTROL SWITCH (SHORT CORD)

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0120-103 BRAKE SWITCH 2 (R)

0922-203 INSTRUMENT PANEL (I) -CLOCK SPRING (I)

(CLOCK SPRING)

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

https://www.auto-manual.com/

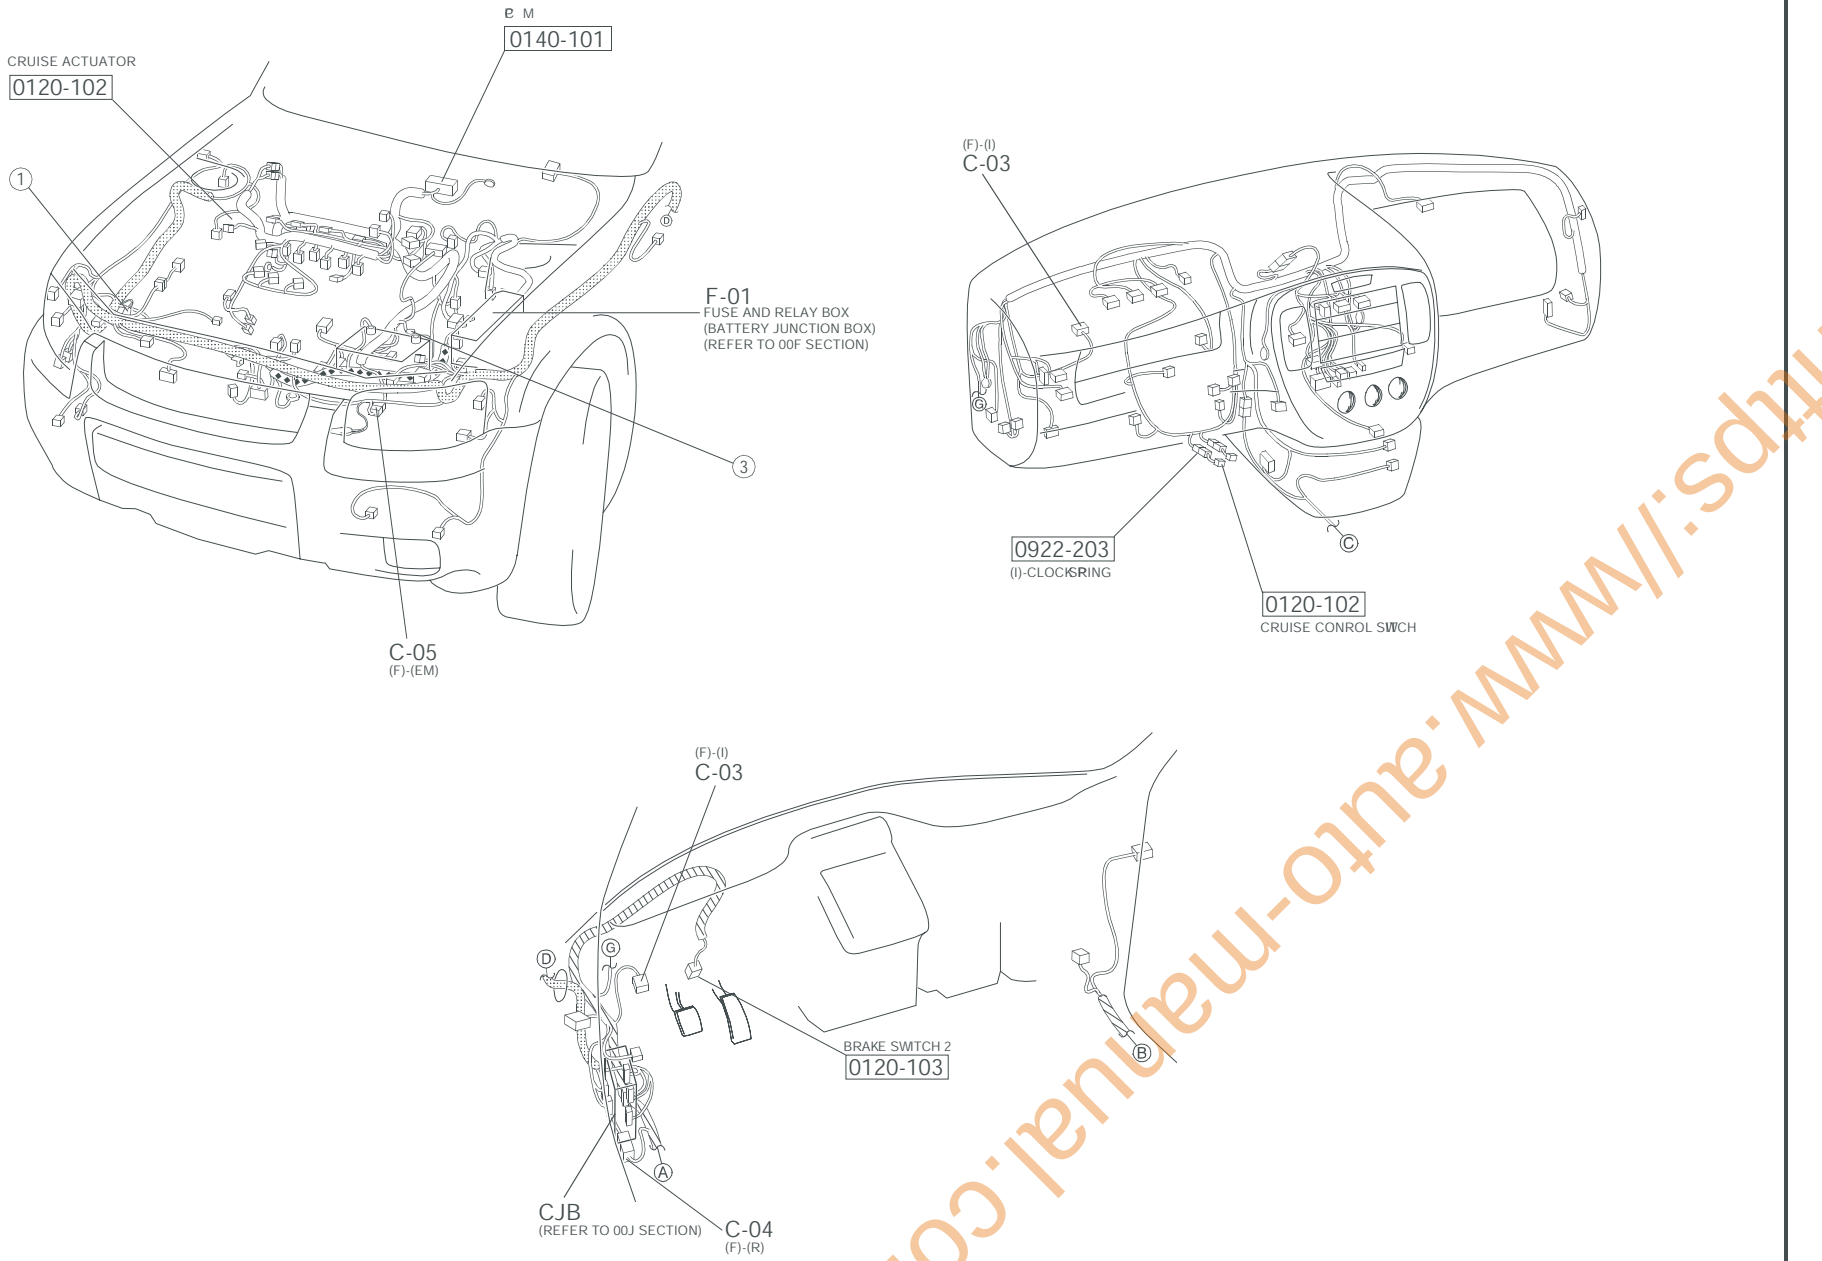


https://www.auto-manual.com/

https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK

https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK

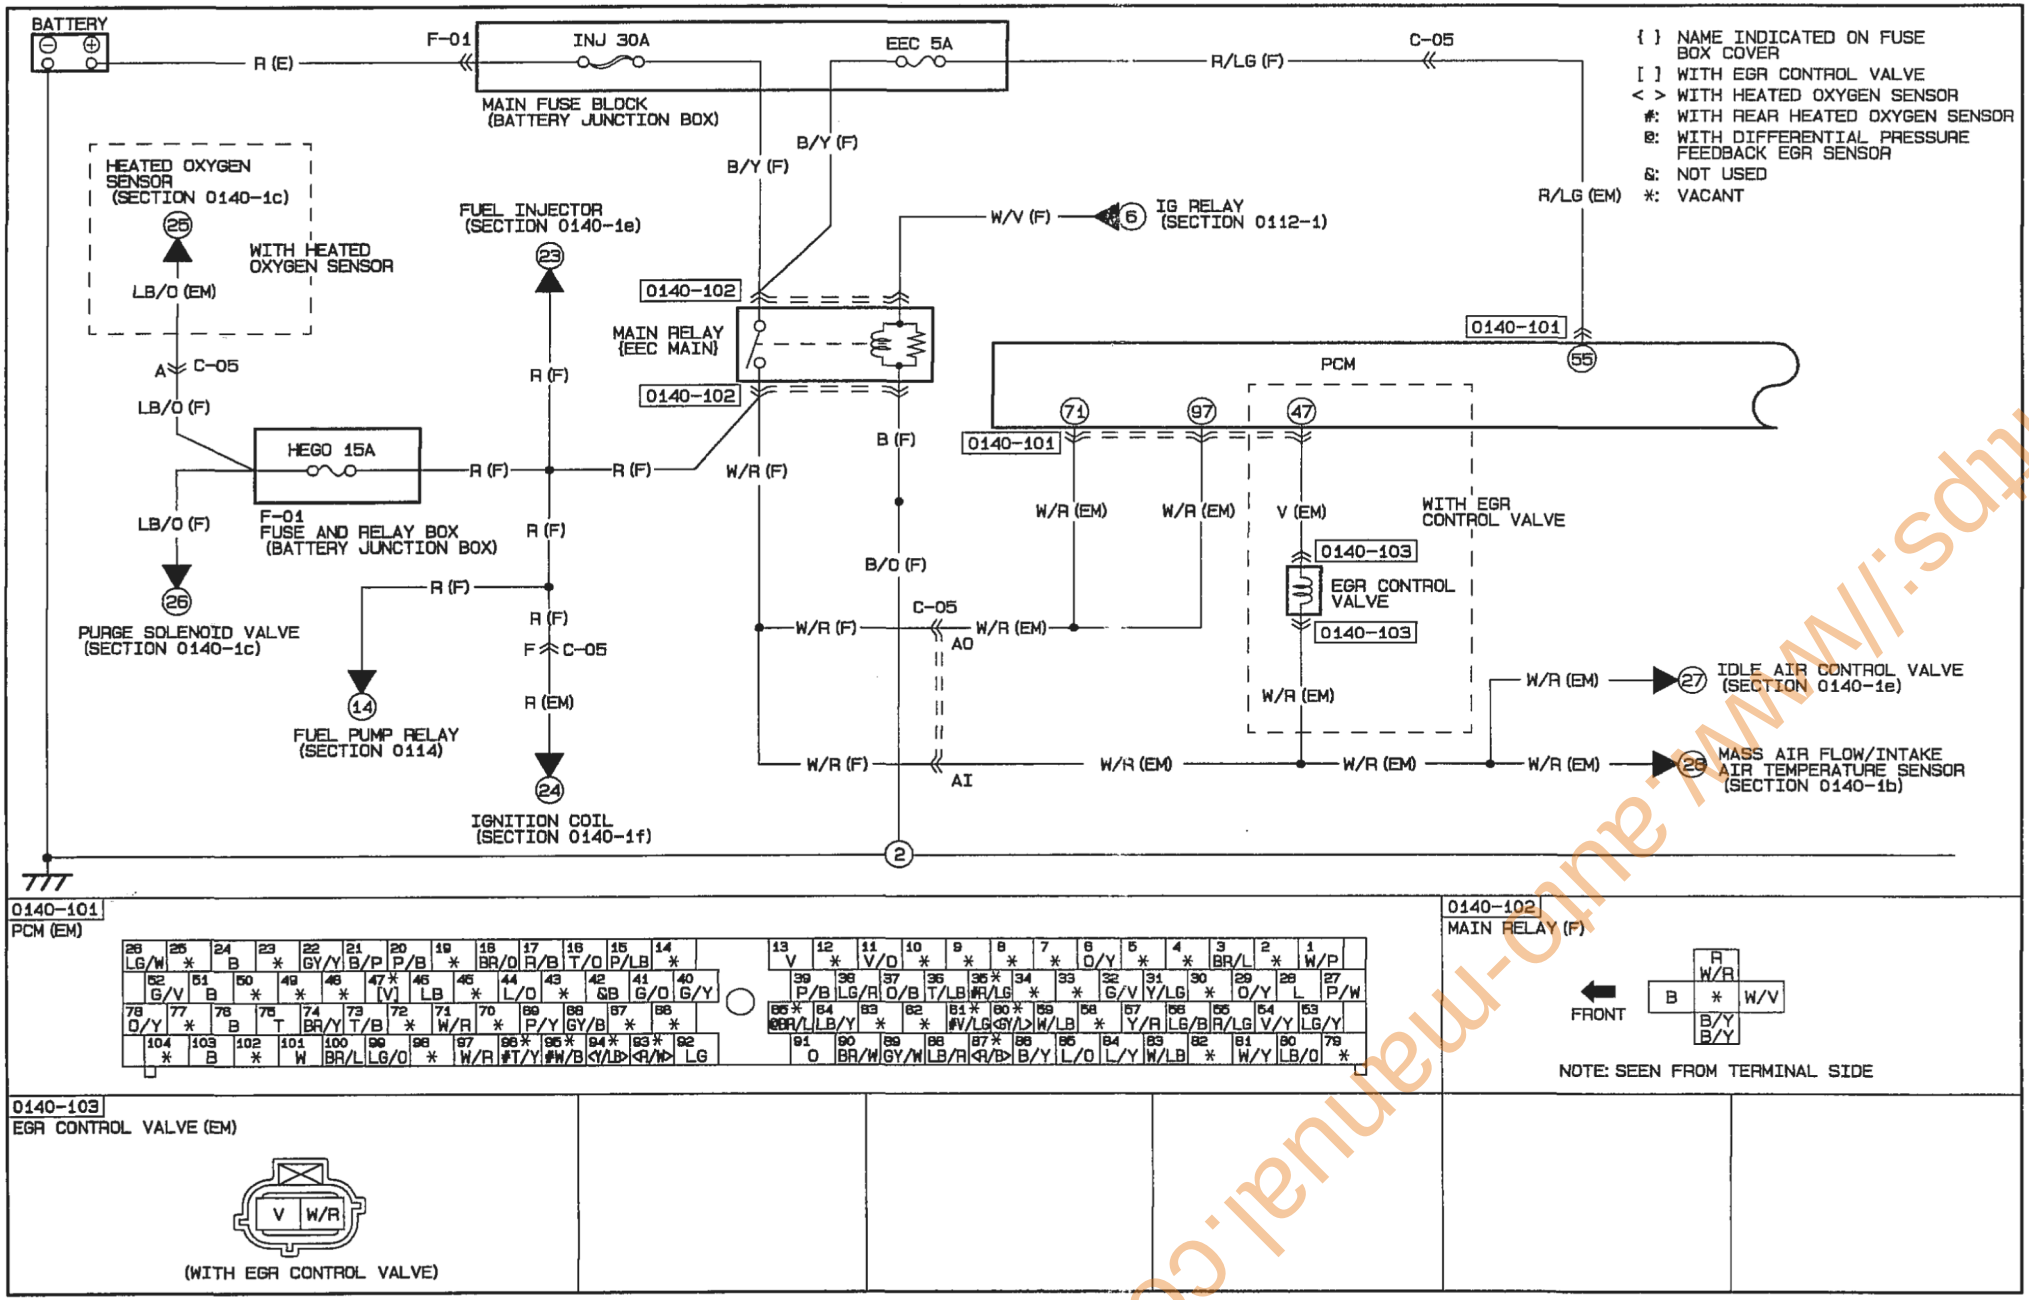

0140-101
PCM (EM)

26	25	24	23	22	21	20	19	18	17	16	15	14
LG/W	*	B	*	GY/Y	B/P	P/B	*	BR/O	R/B	T/O	P/LB	*
52	51	50	49	48	47	46	45	44	43	42	41	40
G/V	B	*	*	*	[V]	LB	*	L/O	*	&B	G/O	G/Y
78	77	76	75	74	73	72	71	70	69	68	67	66
O/Y	*	B	T	BR/Y	T/B	*	W/R	*	P/Y	GY/B	*	*
104	103	102	101	100	99	98	97	96	95	94	93	92
*	B	*	W	BR/L	LG/O	*	W/R	#T/Y	#W/B	<Y/LB>	<R/W>	LG

13	12	11	10	9	8	7	6	5	4	3	2	1
V	*	V/O	*	*	*	*	O/Y	*	*	BR/L	*	W/P
39	38	37	36	35	34	33	32	31	30	29	28	27
P/B	LG/R	O/B	T/LB	#R/LG	*	*	G/V	Y/LG	*	O/Y	L	P/W
65	64	63	62	61	60	59	58	57	56	55	54	53
@BR/L	LB/Y	*	*	#V/LG	<GY/L>	W/LB	*	Y/R	LG/B	R/LG	V/Y	LG/Y
91	90	89	88	87	86	85	84	83	82	81	80	79
O	BR/W	GY/W	LB/R	<R/B>	B/Y	L/O	L/Y	W/LB	*	W/Y	LB/O	*

0140-102
MAIN RELAY (F)


NOTE: SEEN FROM TERMINAL SIDE

0140-103
EGR CONTROL VALVE (EM)


(WITH EGR CONTROL VALVE)

http://www.auto-manual.com/


HARNESS SYMBOL : (F) (E) (R)

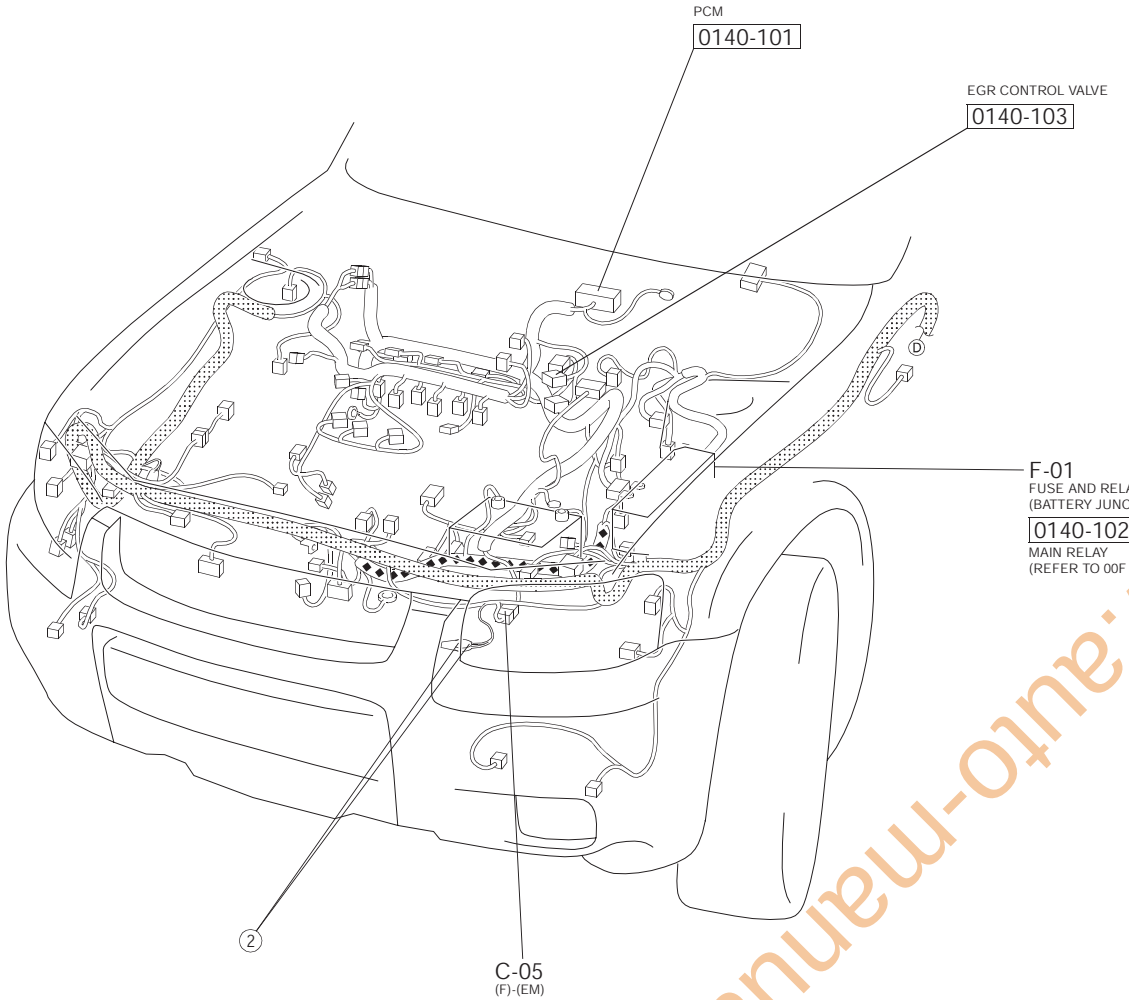


https://www.auto-manual.com/

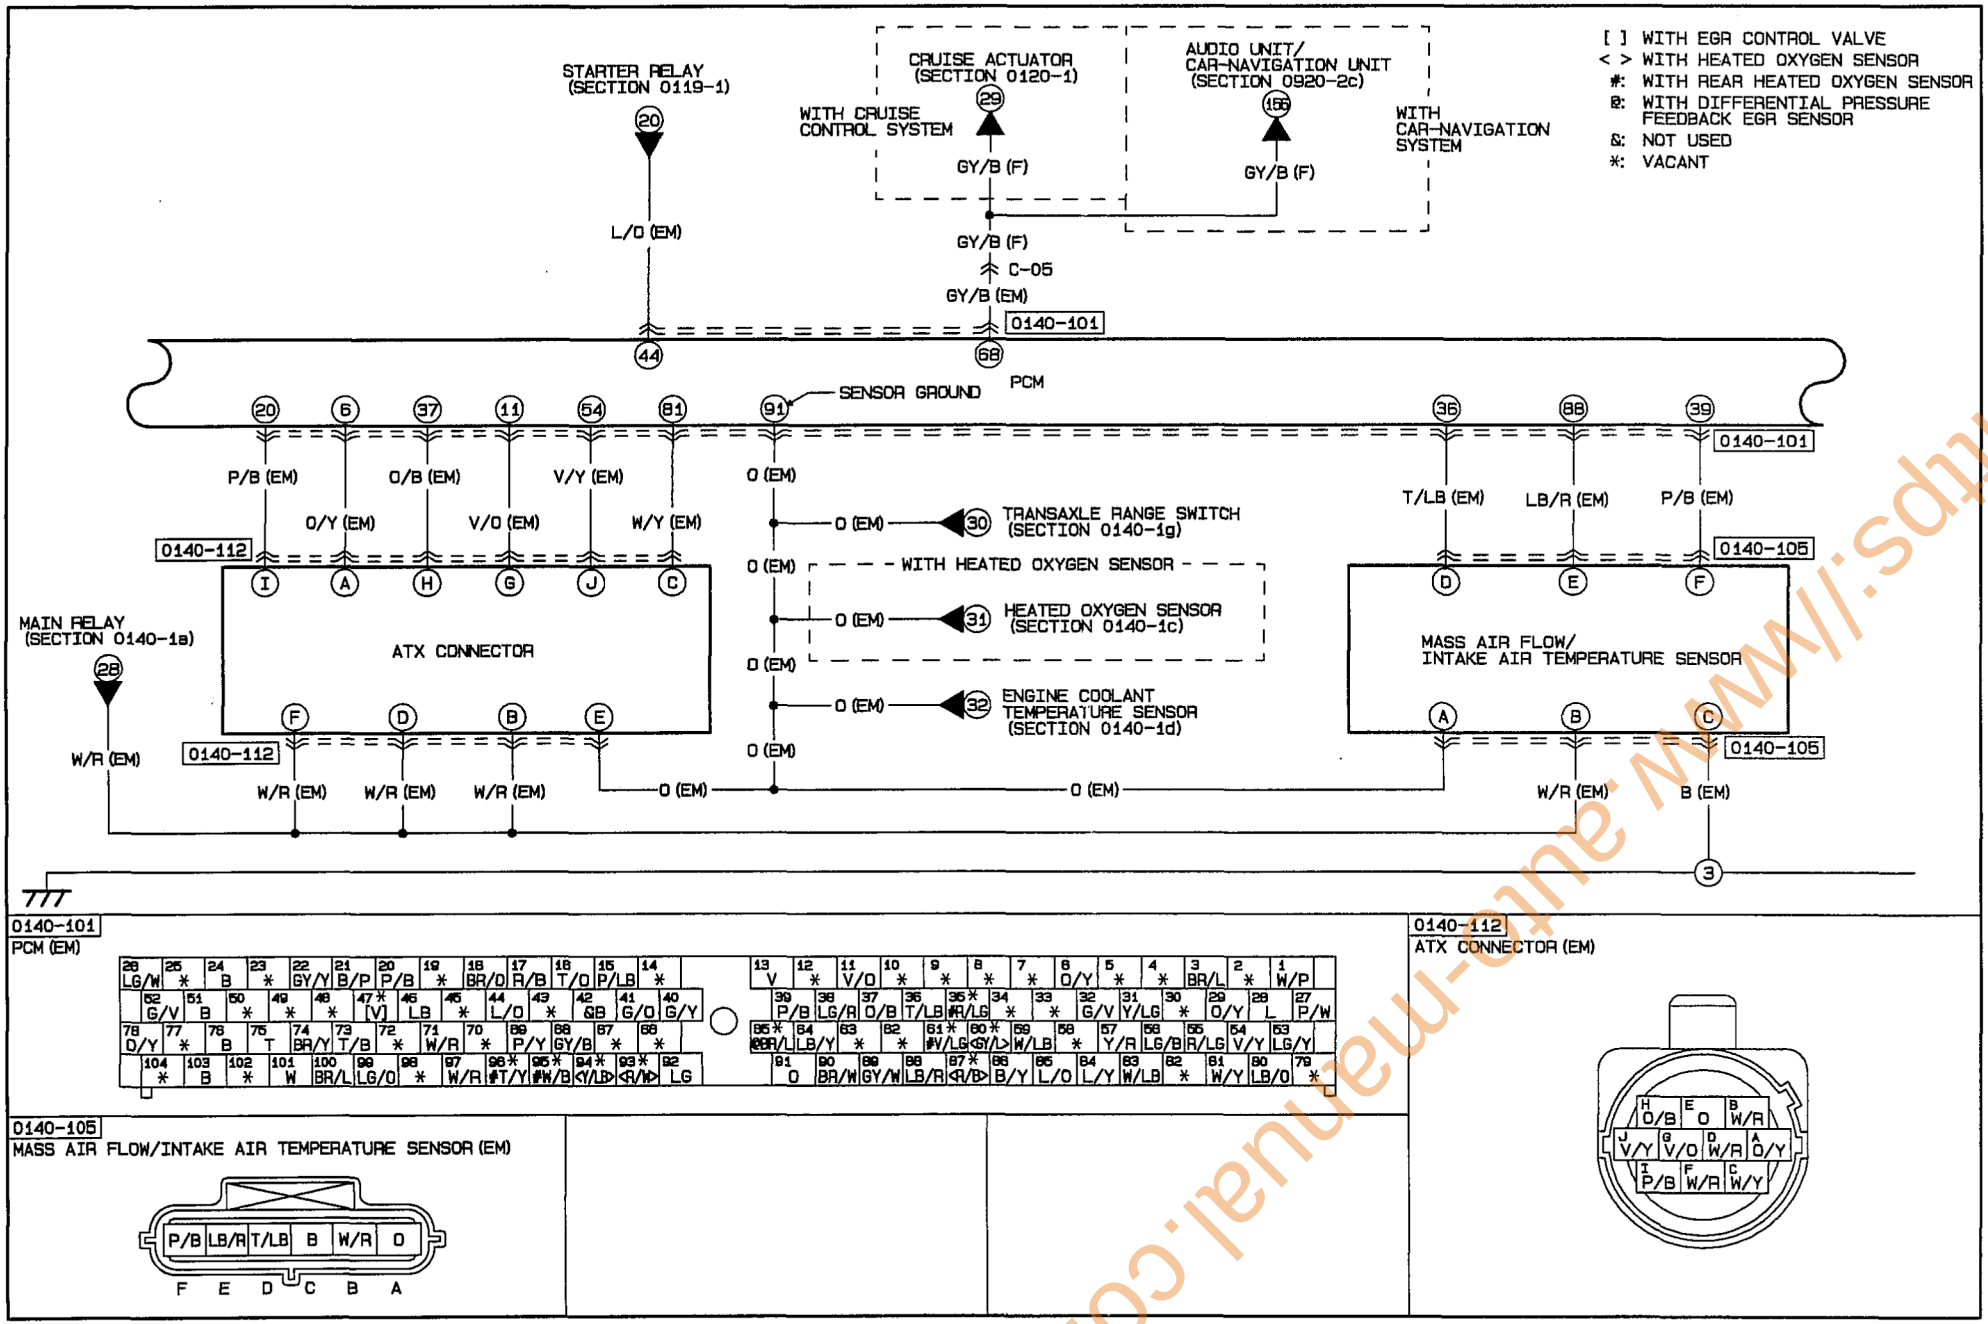


http://www.auto-manual.com/

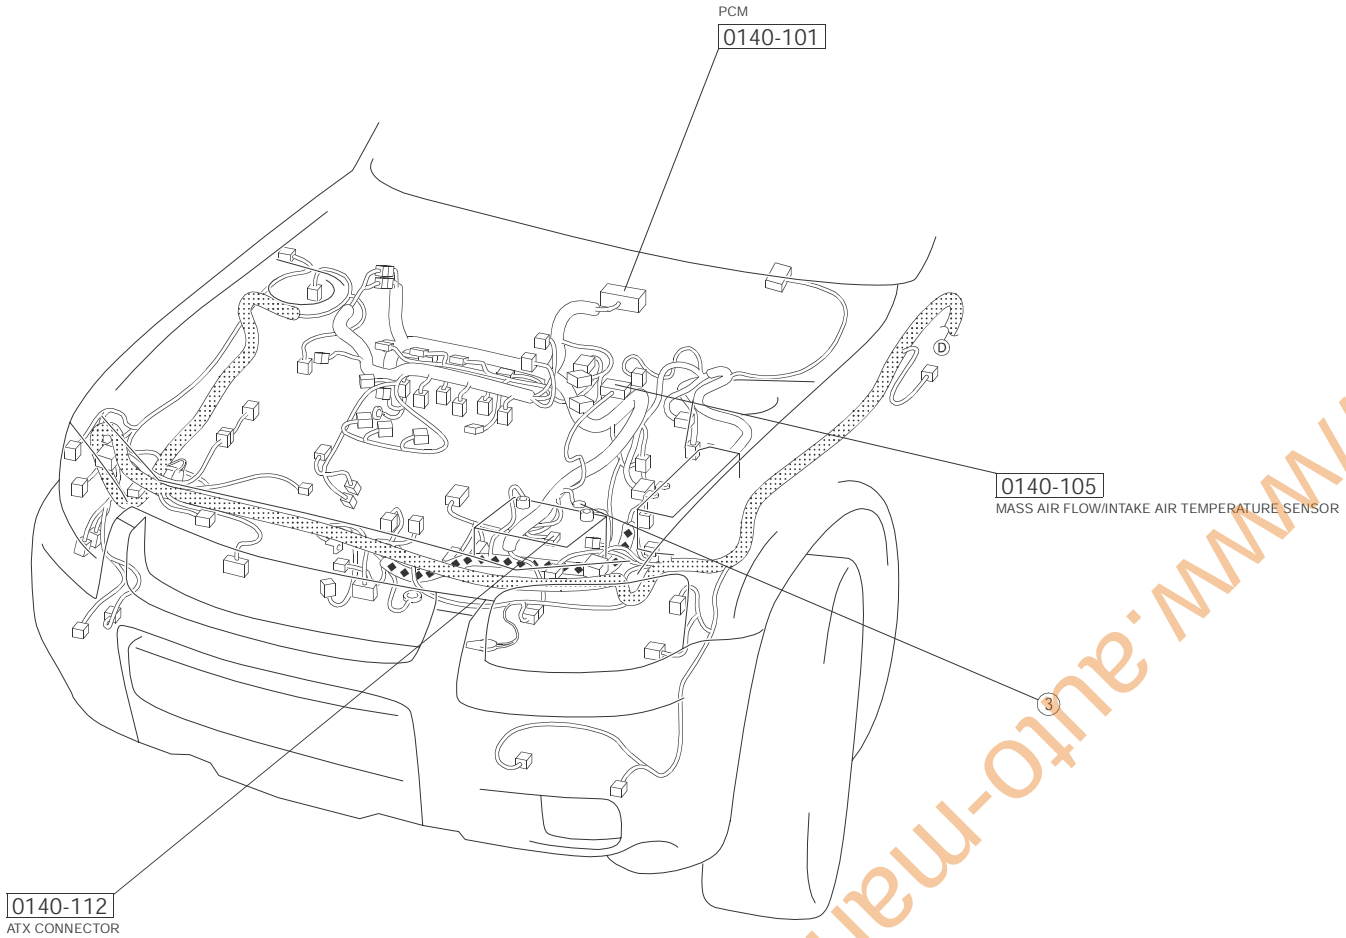

https://www.auto-manual.com/

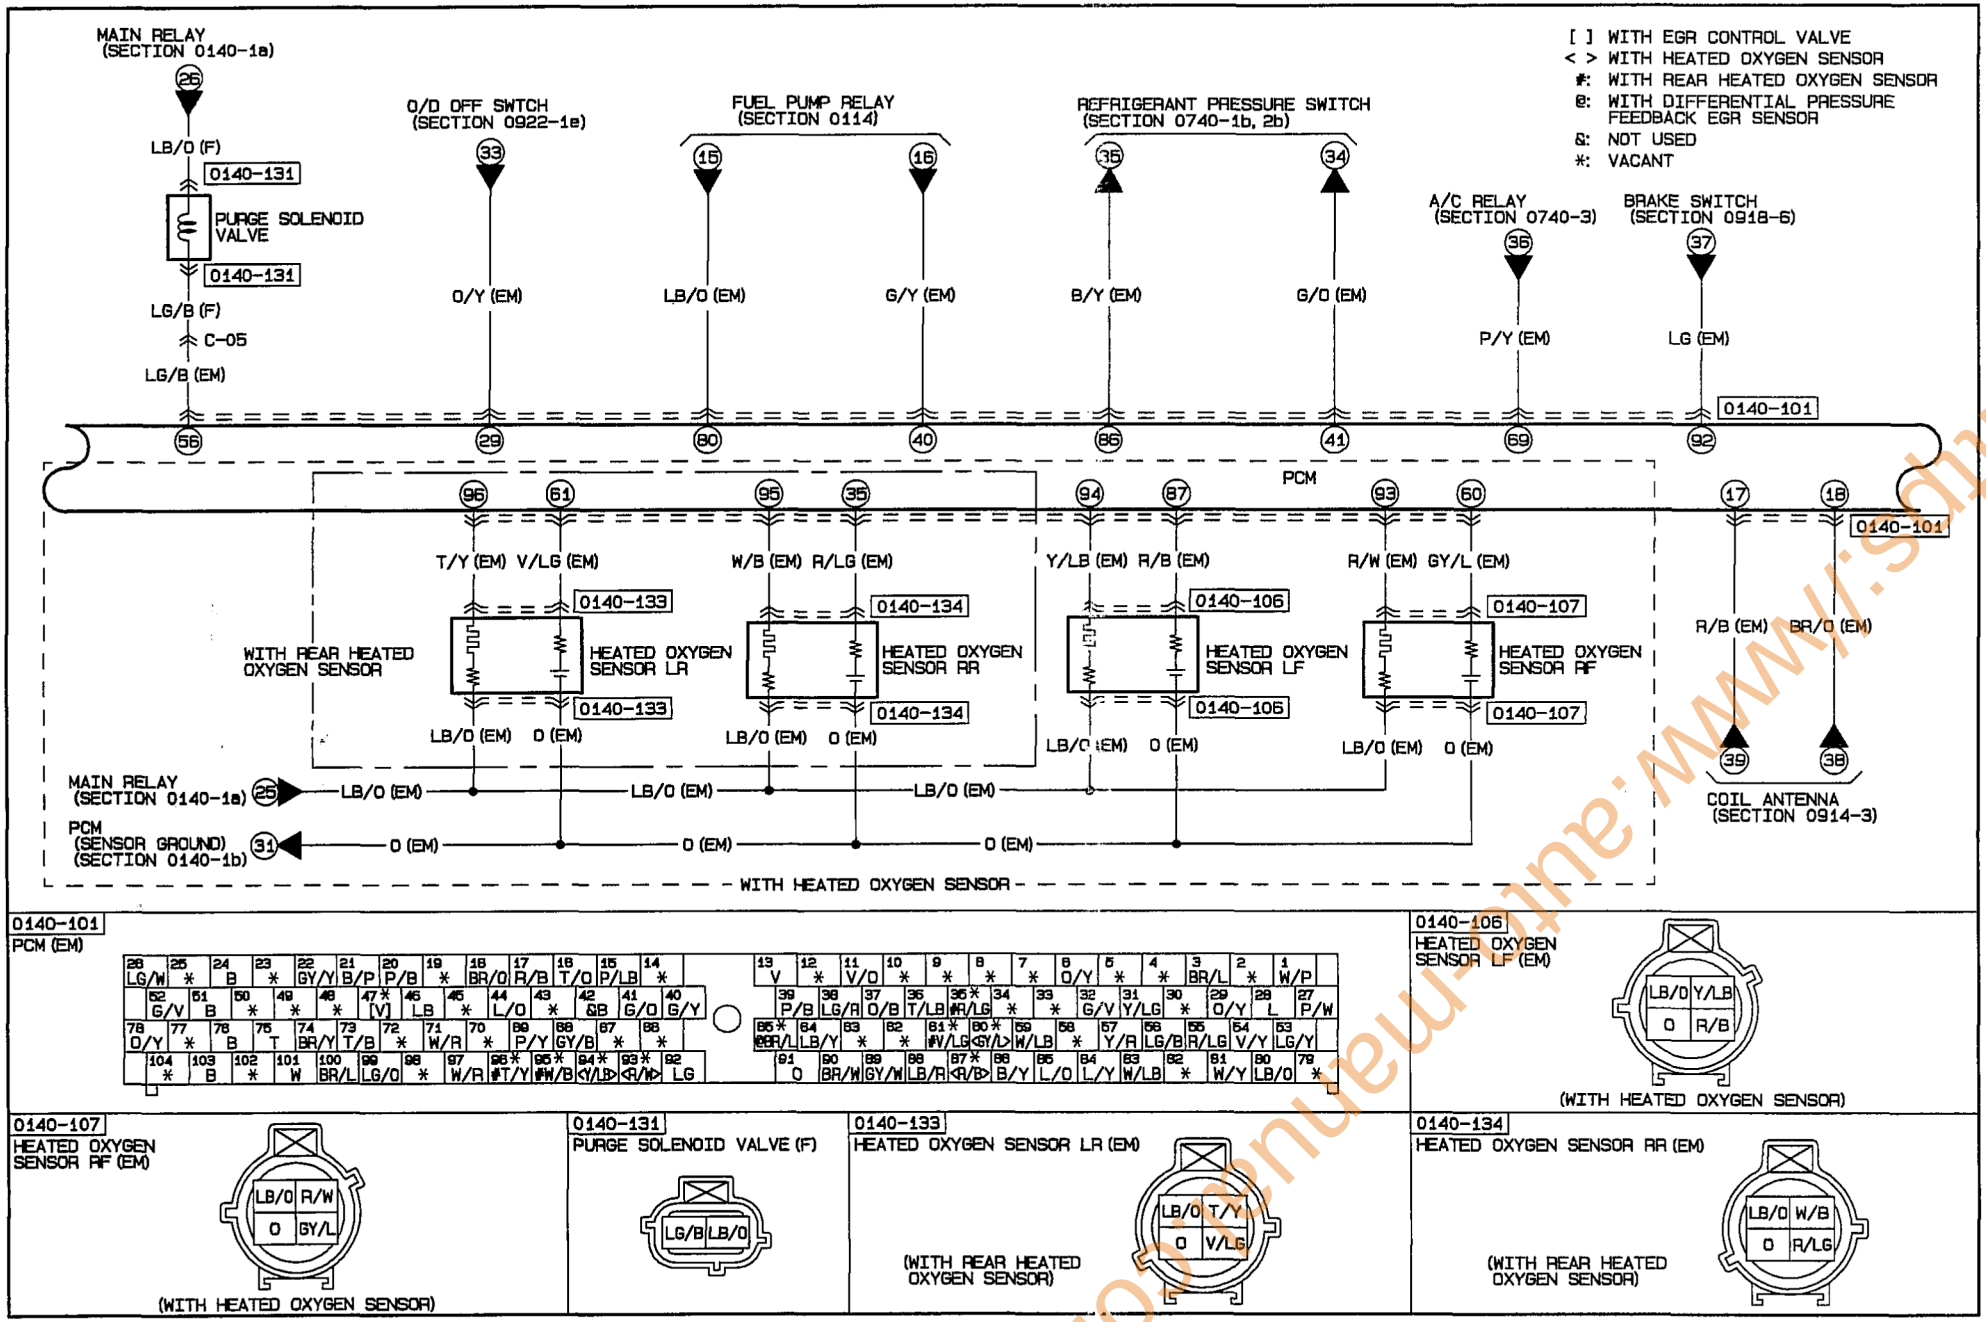


http://www.autoepcmanuals.com/

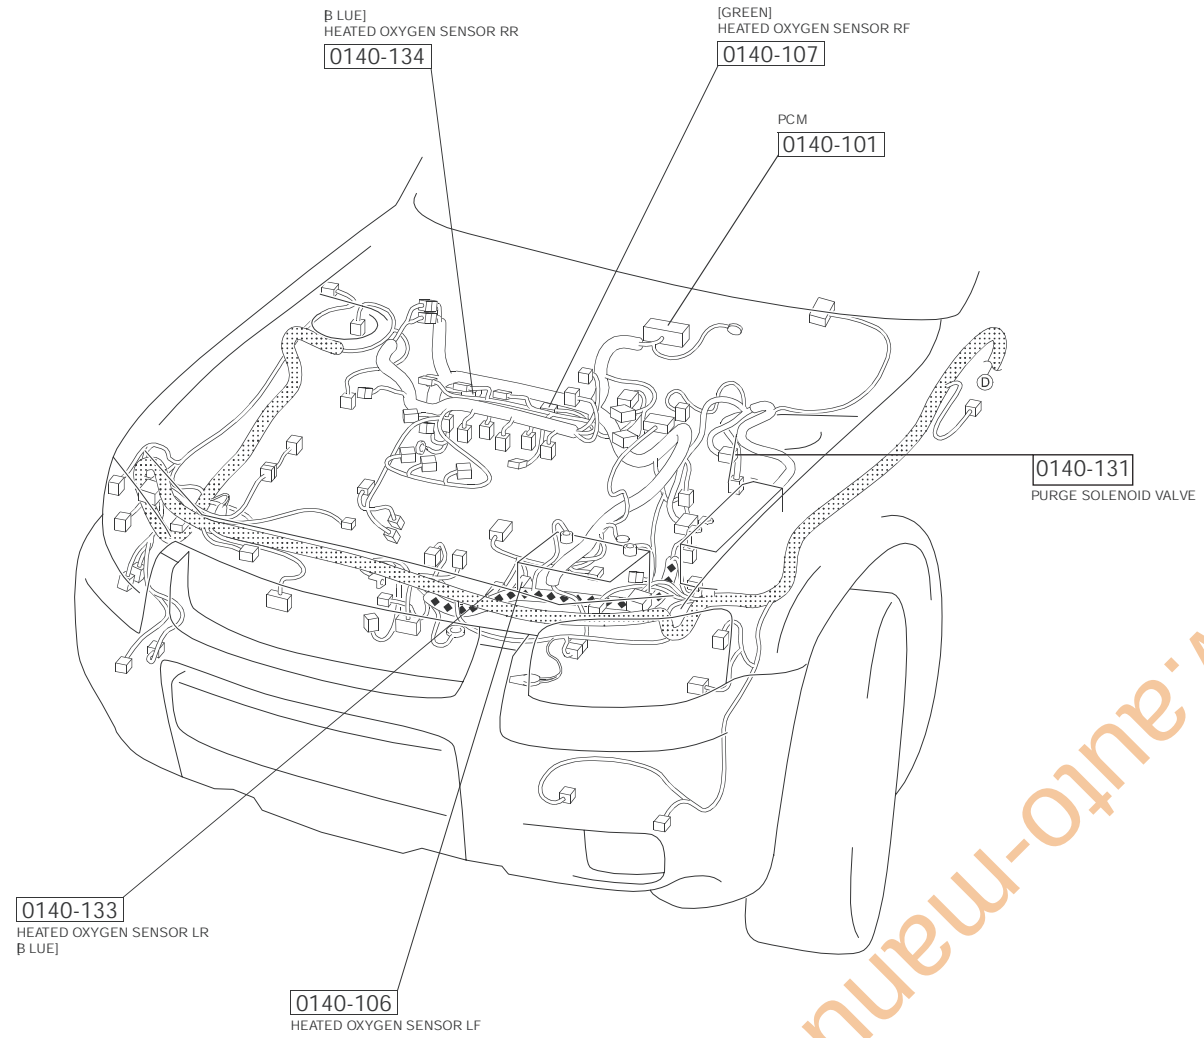

https://www.auto-manual.com/

[ ] WITH EGR CONTROL VALVE
< > WITH HEATED OXYGEN SENSOR
#: WITH REAR HEATED OXYGEN SENSOR
@: WITH DIFFERENTIAL PRESSURE FEEDBACK EGR SENSOR
&: NOT USED
*: VACANT

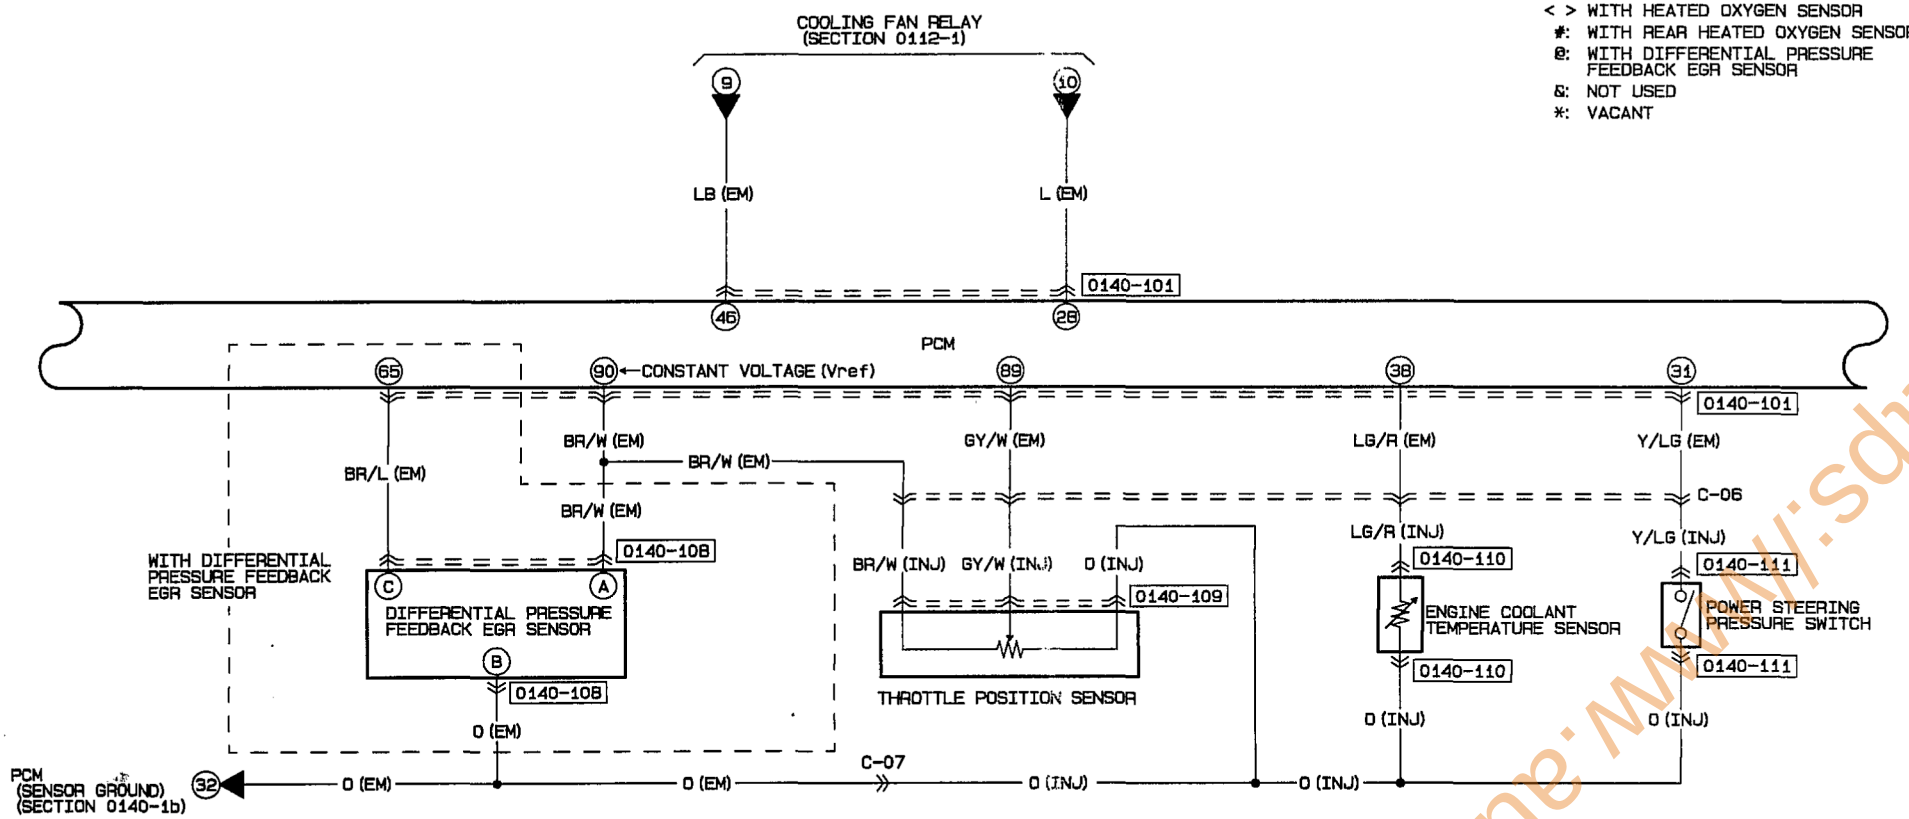


0140-101
PCM (EM)

26	25	24	23	22	21	20	19	18	17	16	15	14
LG/W	*	B	*	GY/Y	B/P	P/B	*	BR/O	R/B	T/O	P/LB	*
52	51	50	49	48	47	46	45	44	43	42	41	40
G/V	B	*	*	*	[V] *	LB	*	L/O	*	&B	G/O	G/Y
78	77	76	75	74	73	72	71	70	69	68	67	66
O/Y	*	B	T	BR/Y	T/B	*	W/R	*	P/Y	GY/B	*	*
104	103	102	101	100	99	98	97	96	95	94	93	92
*	B	*	W	BR/L	LG/O	*	W/R	#T/Y *	#W/B *	<Y/LB> *	<R/W> *	LG

13	12	11	10	9	8	7	6	5	4	3	2	1
V	*	V/O	*	*	*	*	O/Y	*	*	BR/L	*	W/P
39	38	37	36	35	34	33	32	31	30	29	28	27
P/B	LG/R	O/B	T/LB	#R/LG *	*	*	G/V	Y/LG	*	O/Y	L	P/W
65	64	63	62	61	60	59	58	57	56	55	54	53
@BR/L	LB/Y	*	*	#V/LG *	<GY/L> *	W/LB	*	Y/R	LG/B	R/LG	V/Y	LG/Y
91	90	89	88	87	86	85	84	83	82	81	80	79
O	BR/W	GY/W	LB/R	<R/B> *	B/Y	L/O	L/Y	W/LB	*	W/Y	LB/O	*

0140-108
DIFFERENTIAL PRESSURE FEEDBACK EGR SENSOR (EM)

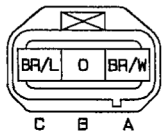

(WITH DIFFERENTIAL PRESSURE FEEDBACK EGR SENSOR)

0140-109
THROTTLE POSITION SENSOR (INJ)




0140-110
ENGINE COOLANT TEMPERATURE SENSOR (INJ)




0140-111
POWER STEERING PRESSURE SWITCH (INJ)



www.sdtuning-cars.com/

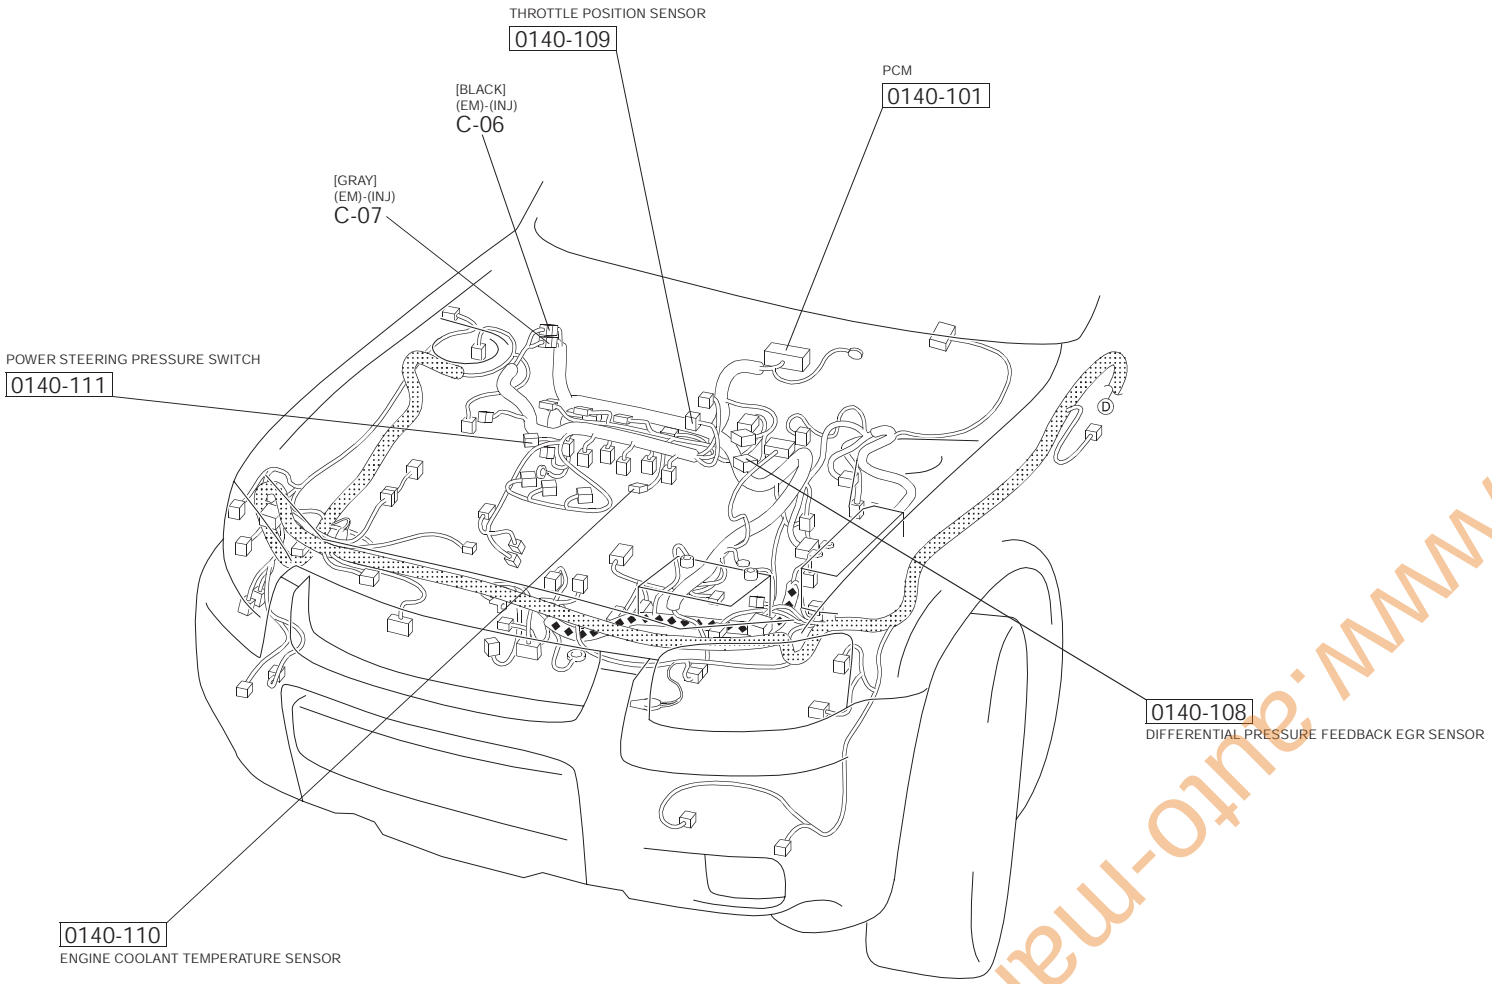

https://www.auto-manual.com/

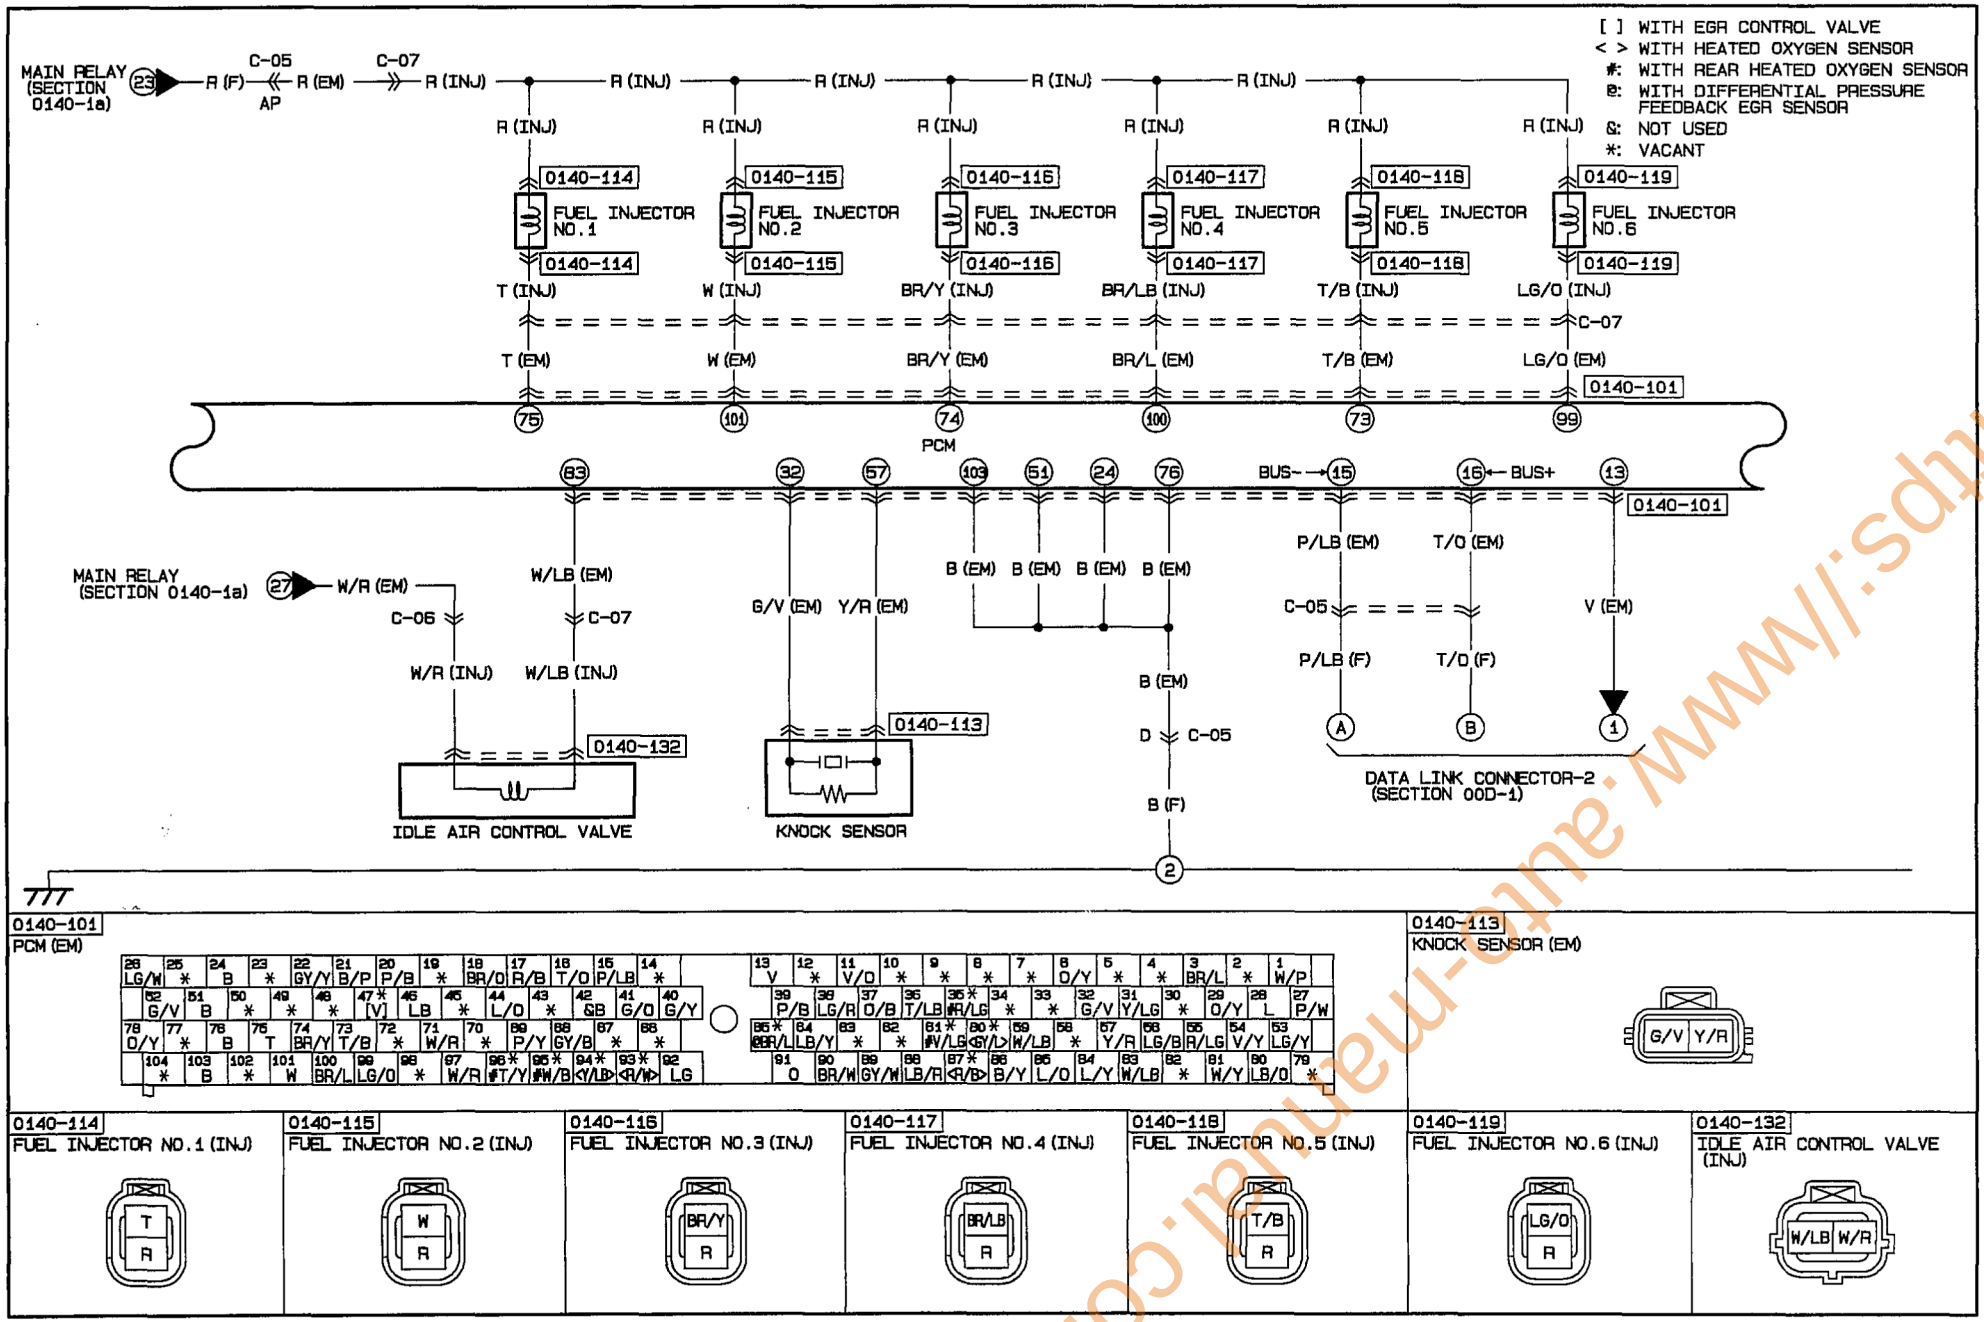

0140-101 PCM (EM)

26	25	24	23	22	21	20	19	18	17	16	15	14
LG/W	*	B	*	GY/Y	B/P	P/B	*	BR/O	R/B	T/O	P/LB	*

52	51	50	49	48	47	46	45	44	43	42	41	40
G/Y	B	*	*	*	[V]	LB	*	L/O	*	GB	G/O	G/Y

78	77	76	75	74	73	72	71	70	69	68	67	66
O/Y	*	B	T	BR/Y	T/B	*	W/R	*	P/Y	GY/B	*	*

104	103	102	101	100	99	98	97	96	95	94	93	92
*	B	*	W	BR/L	LG/O	*	W/R	#T/Y	#W/B	<Y/LB>	<R/W>	LG

13	12	11	10	9	8	7	6	5	4	3	2	1
V	*	V/O	*	*	*	*	O/Y	*	*	BR/L	*	W/P

39	38	37	36	35	34	33	32	31	30	29	28	27
P/B	LG/R	O/B	T/LB	#R/LG	*	*	G/V	Y/LG	*	O/Y	L	P/W

65	64	63	62	61	60	59	58	57	56	55	54	53
@BR/L	LB/Y	*	*	#V/LG	<GY/L>	W/LB	*	Y/R	LG/B	R/LG	V/Y	LG/Y

91	90	89	88	87	86	85	84	83	82	81	80	79
O	BR/W	GY/W	LB/R	<R/B>	B/Y	L/O	L/Y	W/LB	*	W/Y	LB/O	*

0140-113 KNOCK SENSOR (EM)

0140-114 FUEL INJECTOR NO.1 (INJ)

0140-115 FUEL INJECTOR NO.2 (INJ)

0140-116 FUEL INJECTOR NO.3 (INJ)


0140-117 FUEL INJECTOR NO.4 (INJ)

0140-118 FUEL INJECTOR NO.5 (INJ)


0140-119 FUEL INJECTOR NO.6 (INJ)

0140-132 IDLE AIR CONTROL VALVE (INJ)


https://www.auto-manual.com/

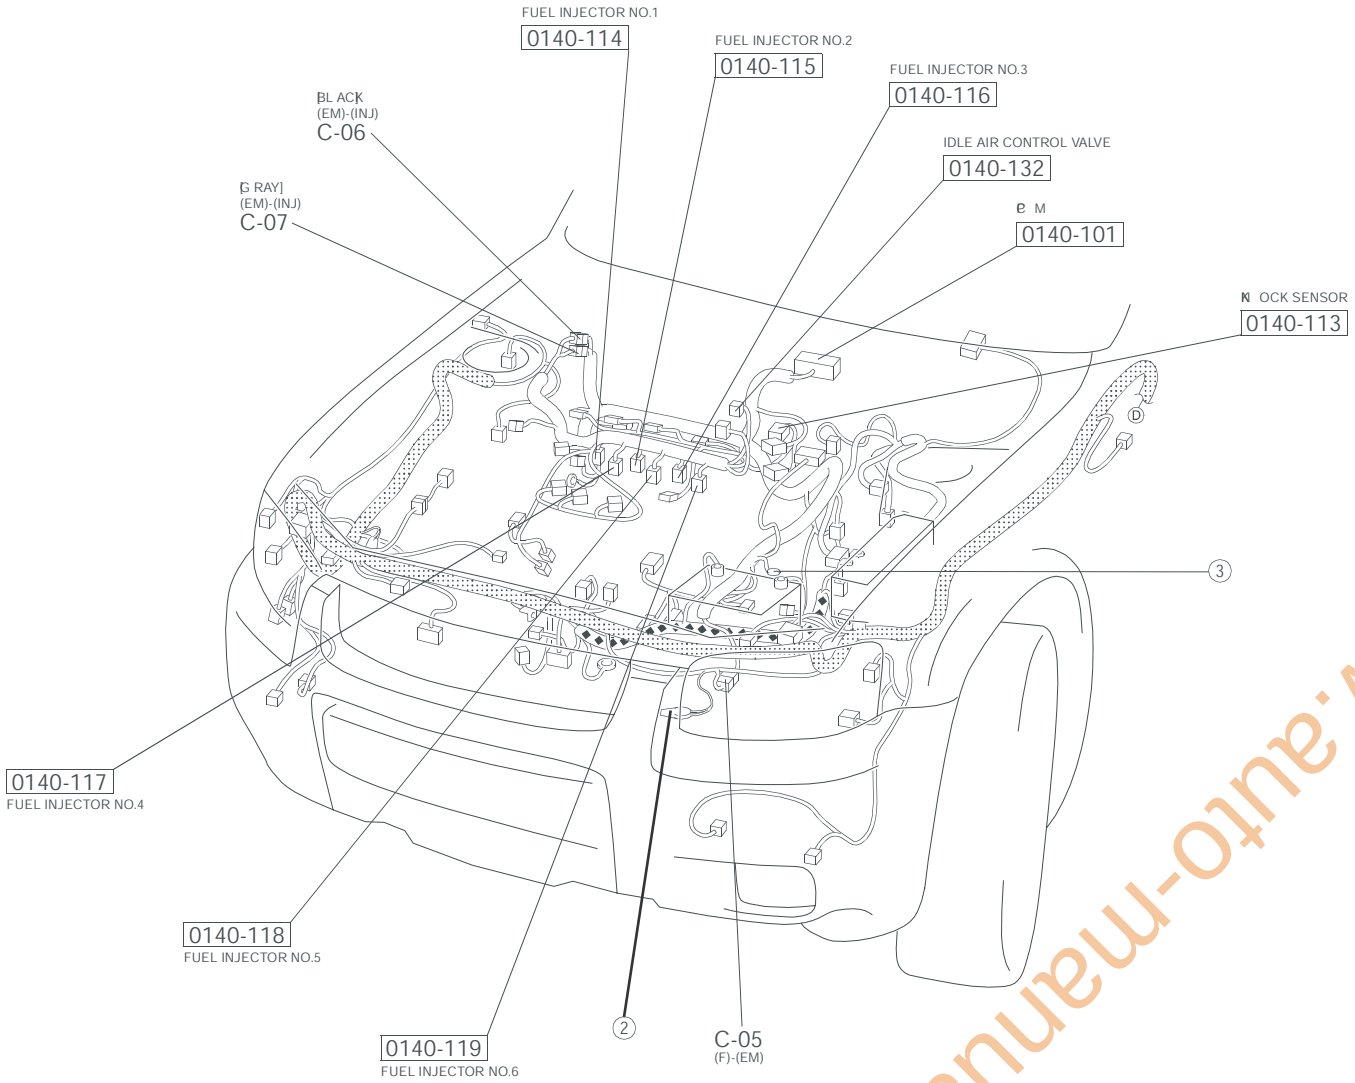

https://www.auto-manual.com/

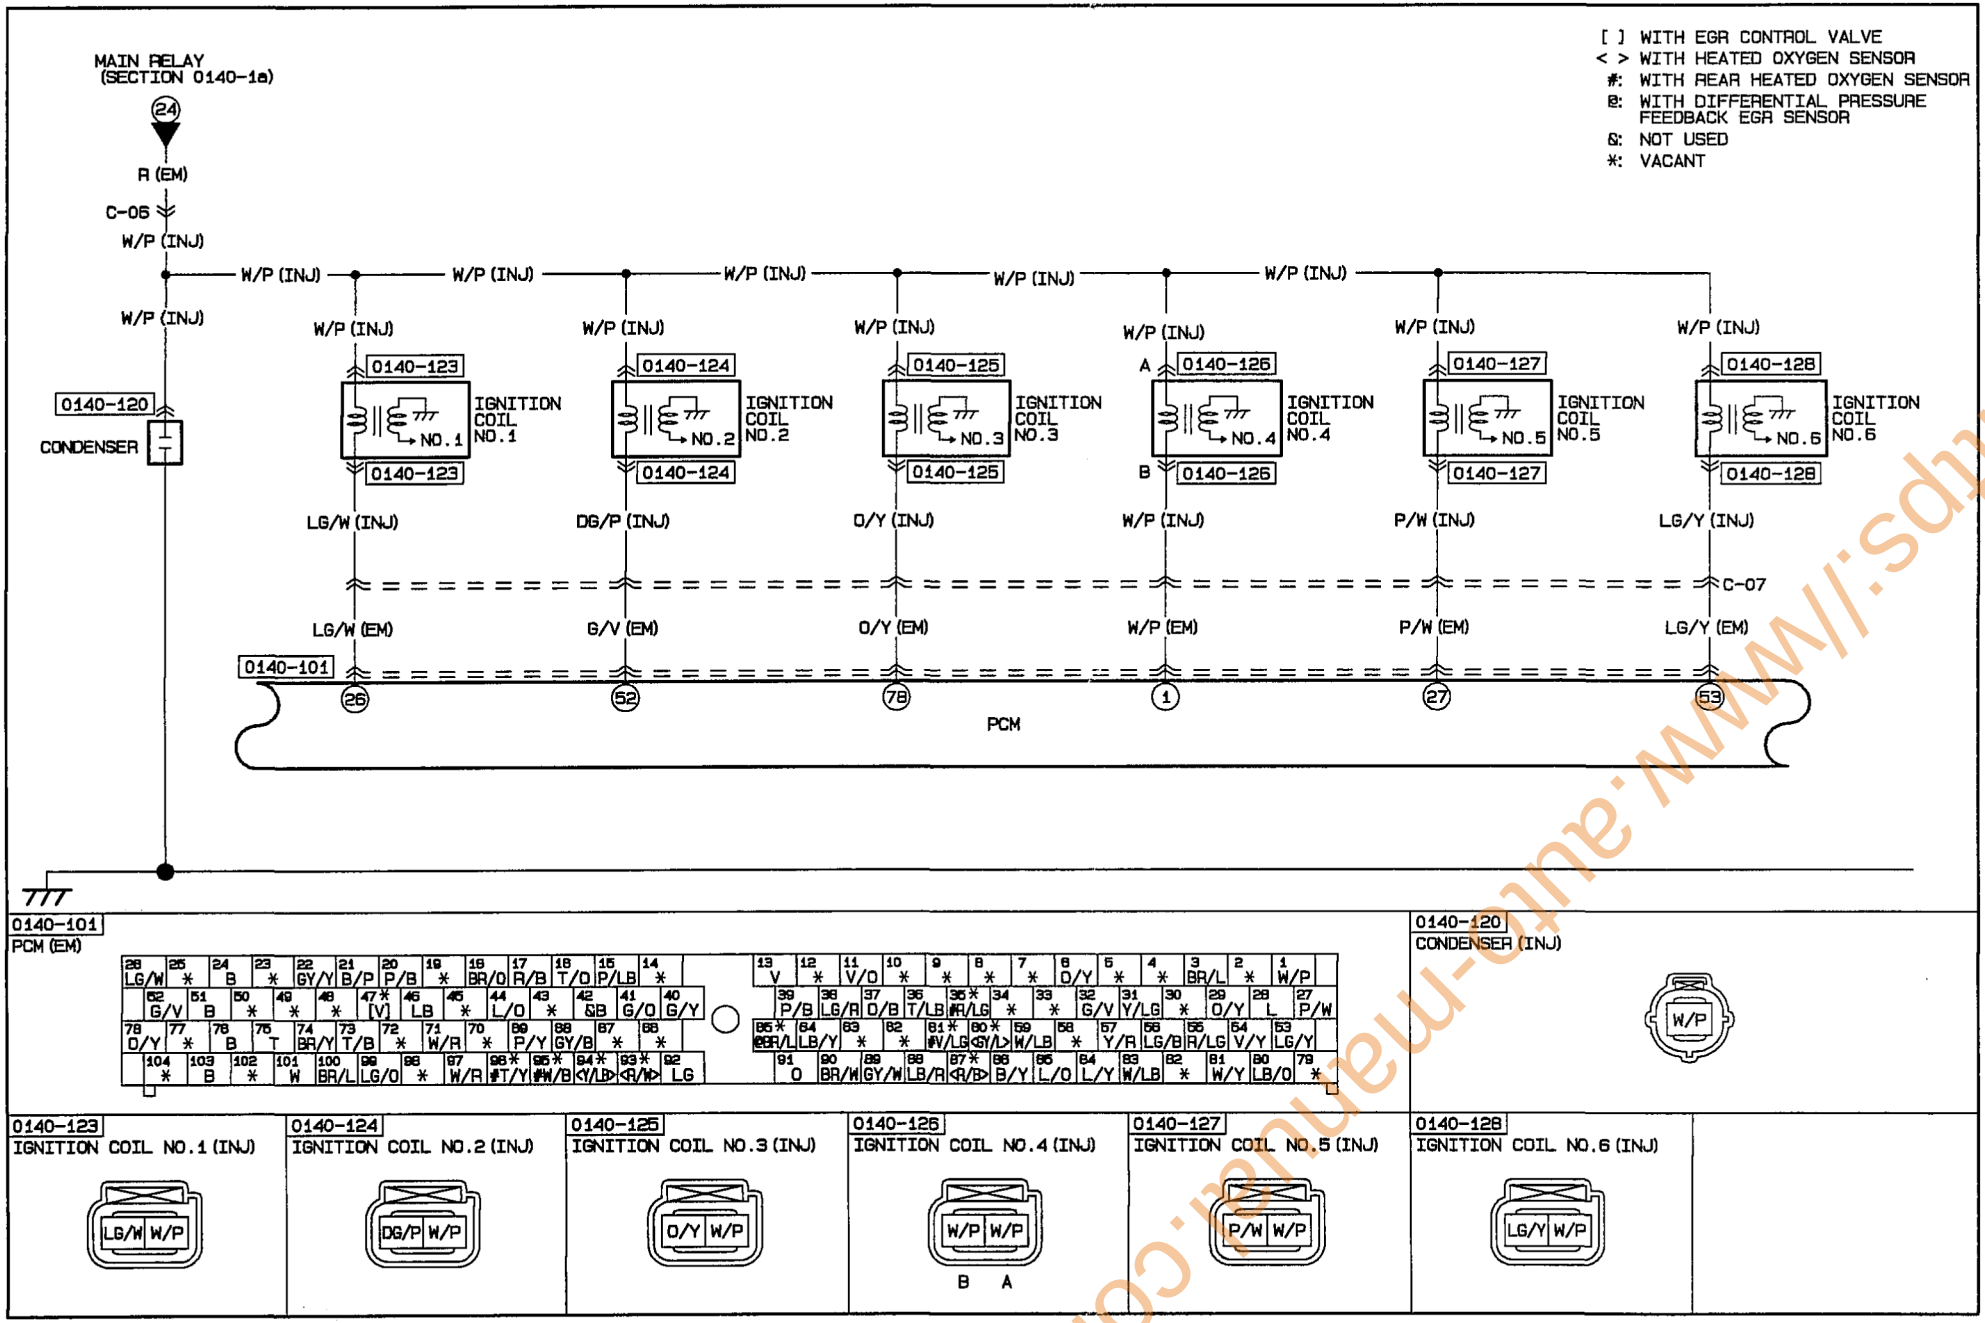


https://www.auto-manual.com/

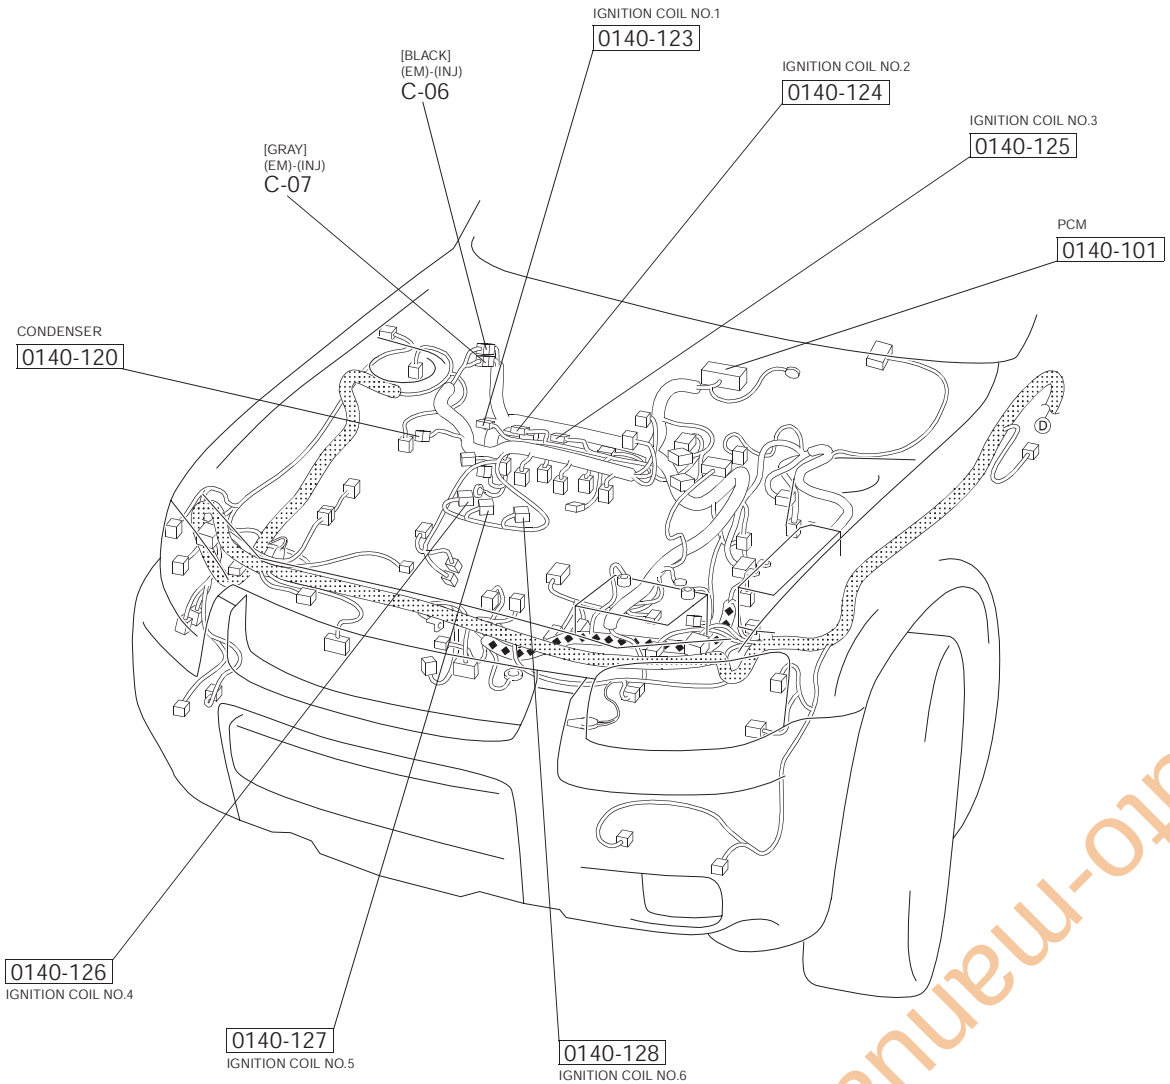

https://www.auto-manual.com/

[ ] WITH EGR CONTROL VALVE
< > WITH HEATED OXYGEN SENSOR
#: WITH REAR HEATED OXYGEN SENSOR
@: WITH DIFFERENTIAL PRESSURE FEEDBACK EGR SENSOR
&: NOT USED
*: VACANT

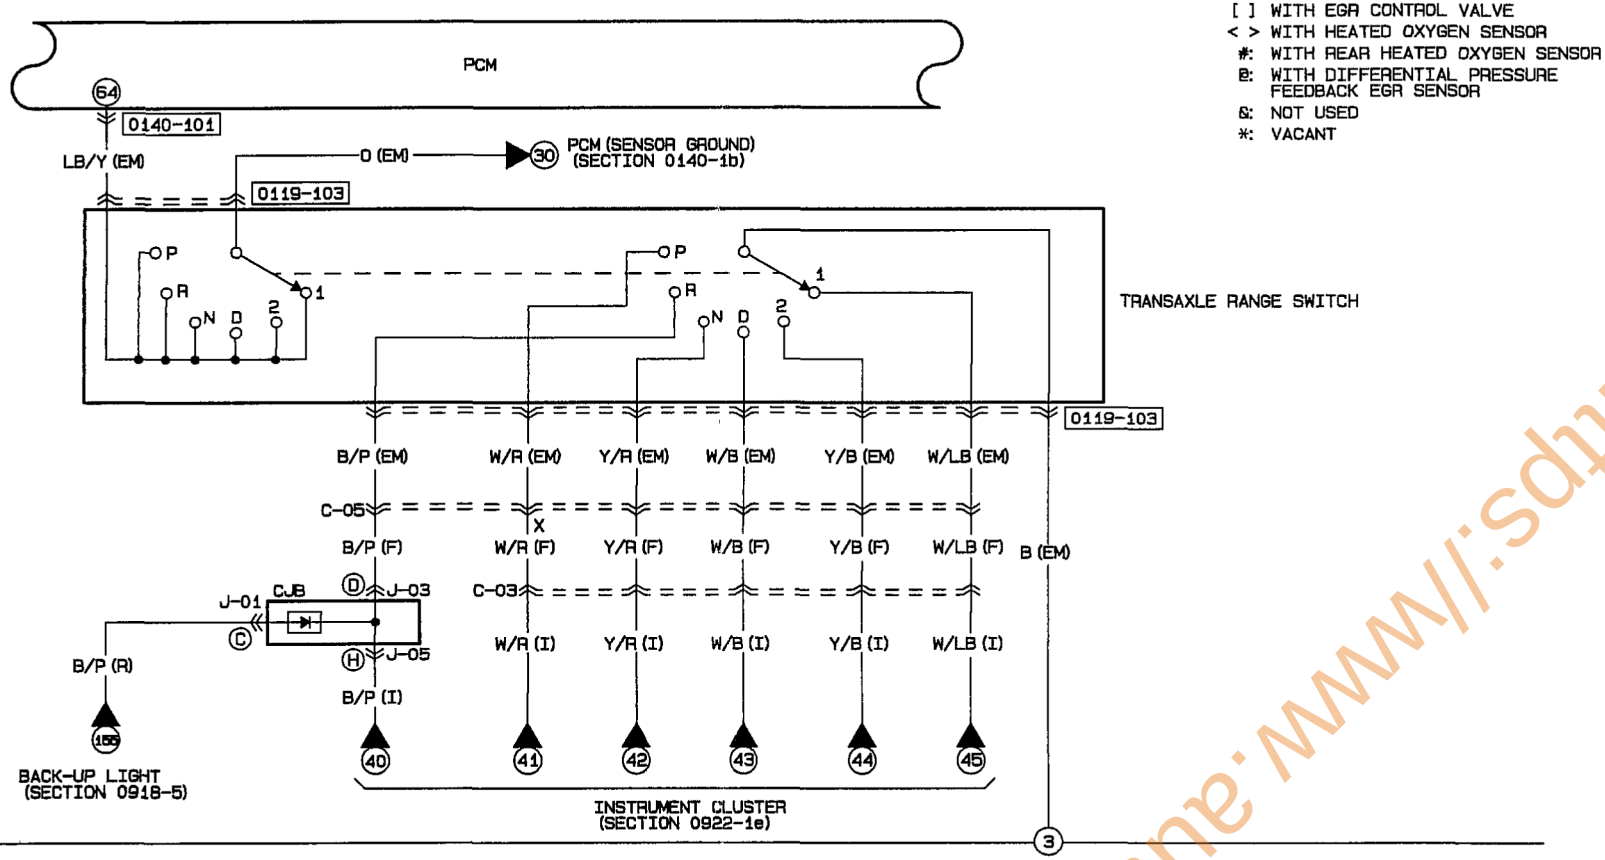


0140-101
PCM (EM)


26 LG/W	25 *	24 B	23 *	22 GY/Y	21 B/P	20 P/B	19 *	18 BR/O	17 R/B	16 T/O	15 P/LB	14 *			
52 G/Y	51 B	50 *	49 *	48 *	47 * [V]	46 LB	45 *	44 L/O	43 *	42 &B	41 G/O	40 G/Y			
78 O/Y	77 *	76 B	75 T	74 BR/Y	73 T/B	72 *	71 W/R	70 *	69 P/Y	68 GY/B	67 *	66 *			
104 *	103 B	102 *	101 W	100 BR/L	99 LG/O	98 *	97 W/R	96 * #T/Y	95 * #W/B	94 * <Y/LB>	93 * <R/W>	92 LG			

13 V	12 *	11 V/O	10 *	9 *	8 *	7 *	6 O/Y	5 *	4 *	3 BR/L	2 *	1 W/P			
39 P/B	38 LG/R	37 O/B	36 T/LB	35 * #R/LG	34 *	33 *	32 G/V	31 Y/LG	30 *	29 O/Y	28 L	27 P/W			
85 * @BR/L	84 LB/Y	83 *	82 *	81 * #V/LG	80 * <GY/L>	79 W/LB	78 *	77 Y/R	76 LG/B	75 R/LG	74 V/Y	73 LG/Y			
91 O	90 BR/W	89 GY/W	88 LB/R	87 * <R/B>	86 B/Y	85 L/O	84 L/Y	83 W/LB	82 *	81 W/Y	80 LB/O	79 *			


0119-103
TRANSAXLE RANGE SWITCH (EM)

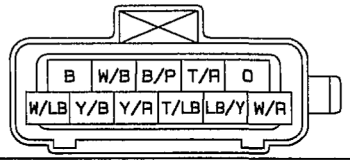

https://www.auto-manual.com/

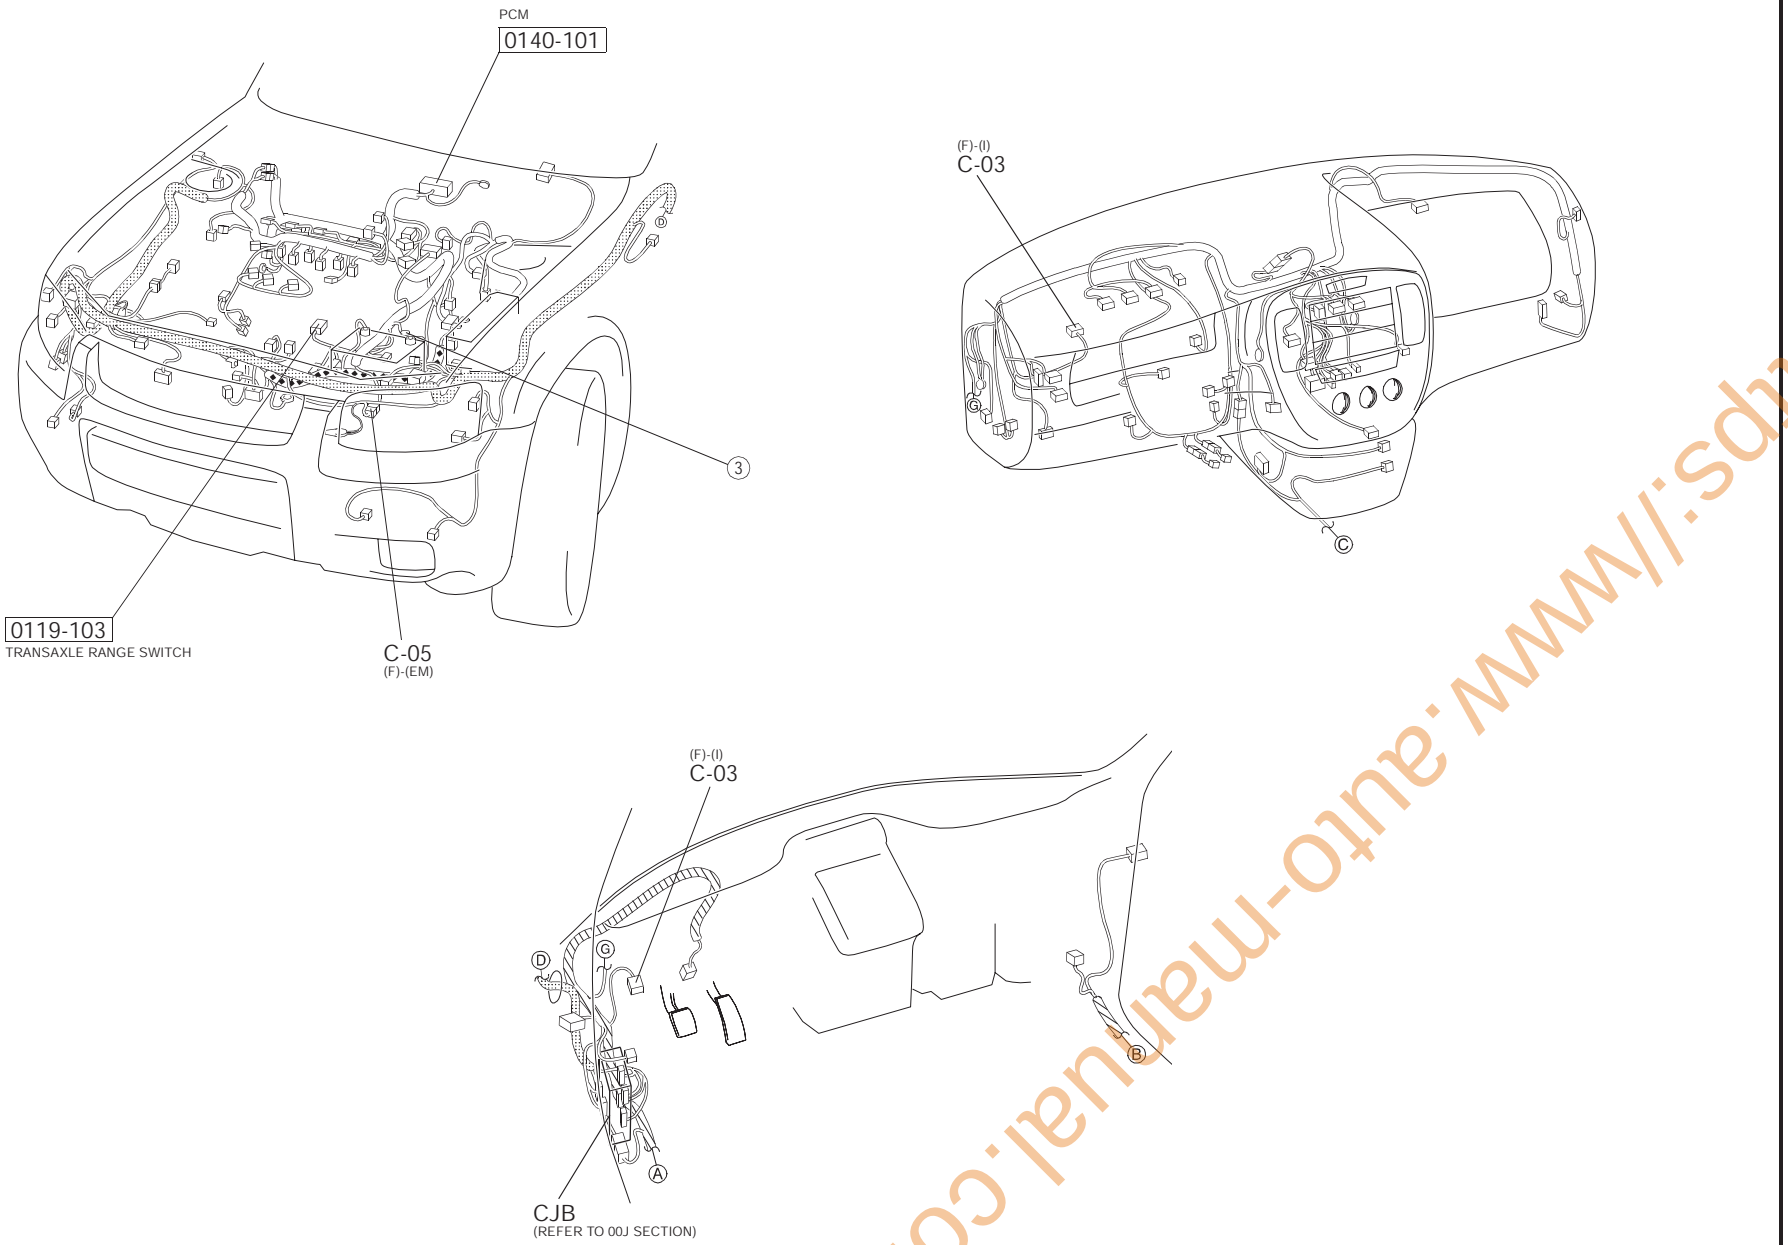

https://www.auto-manual.com/

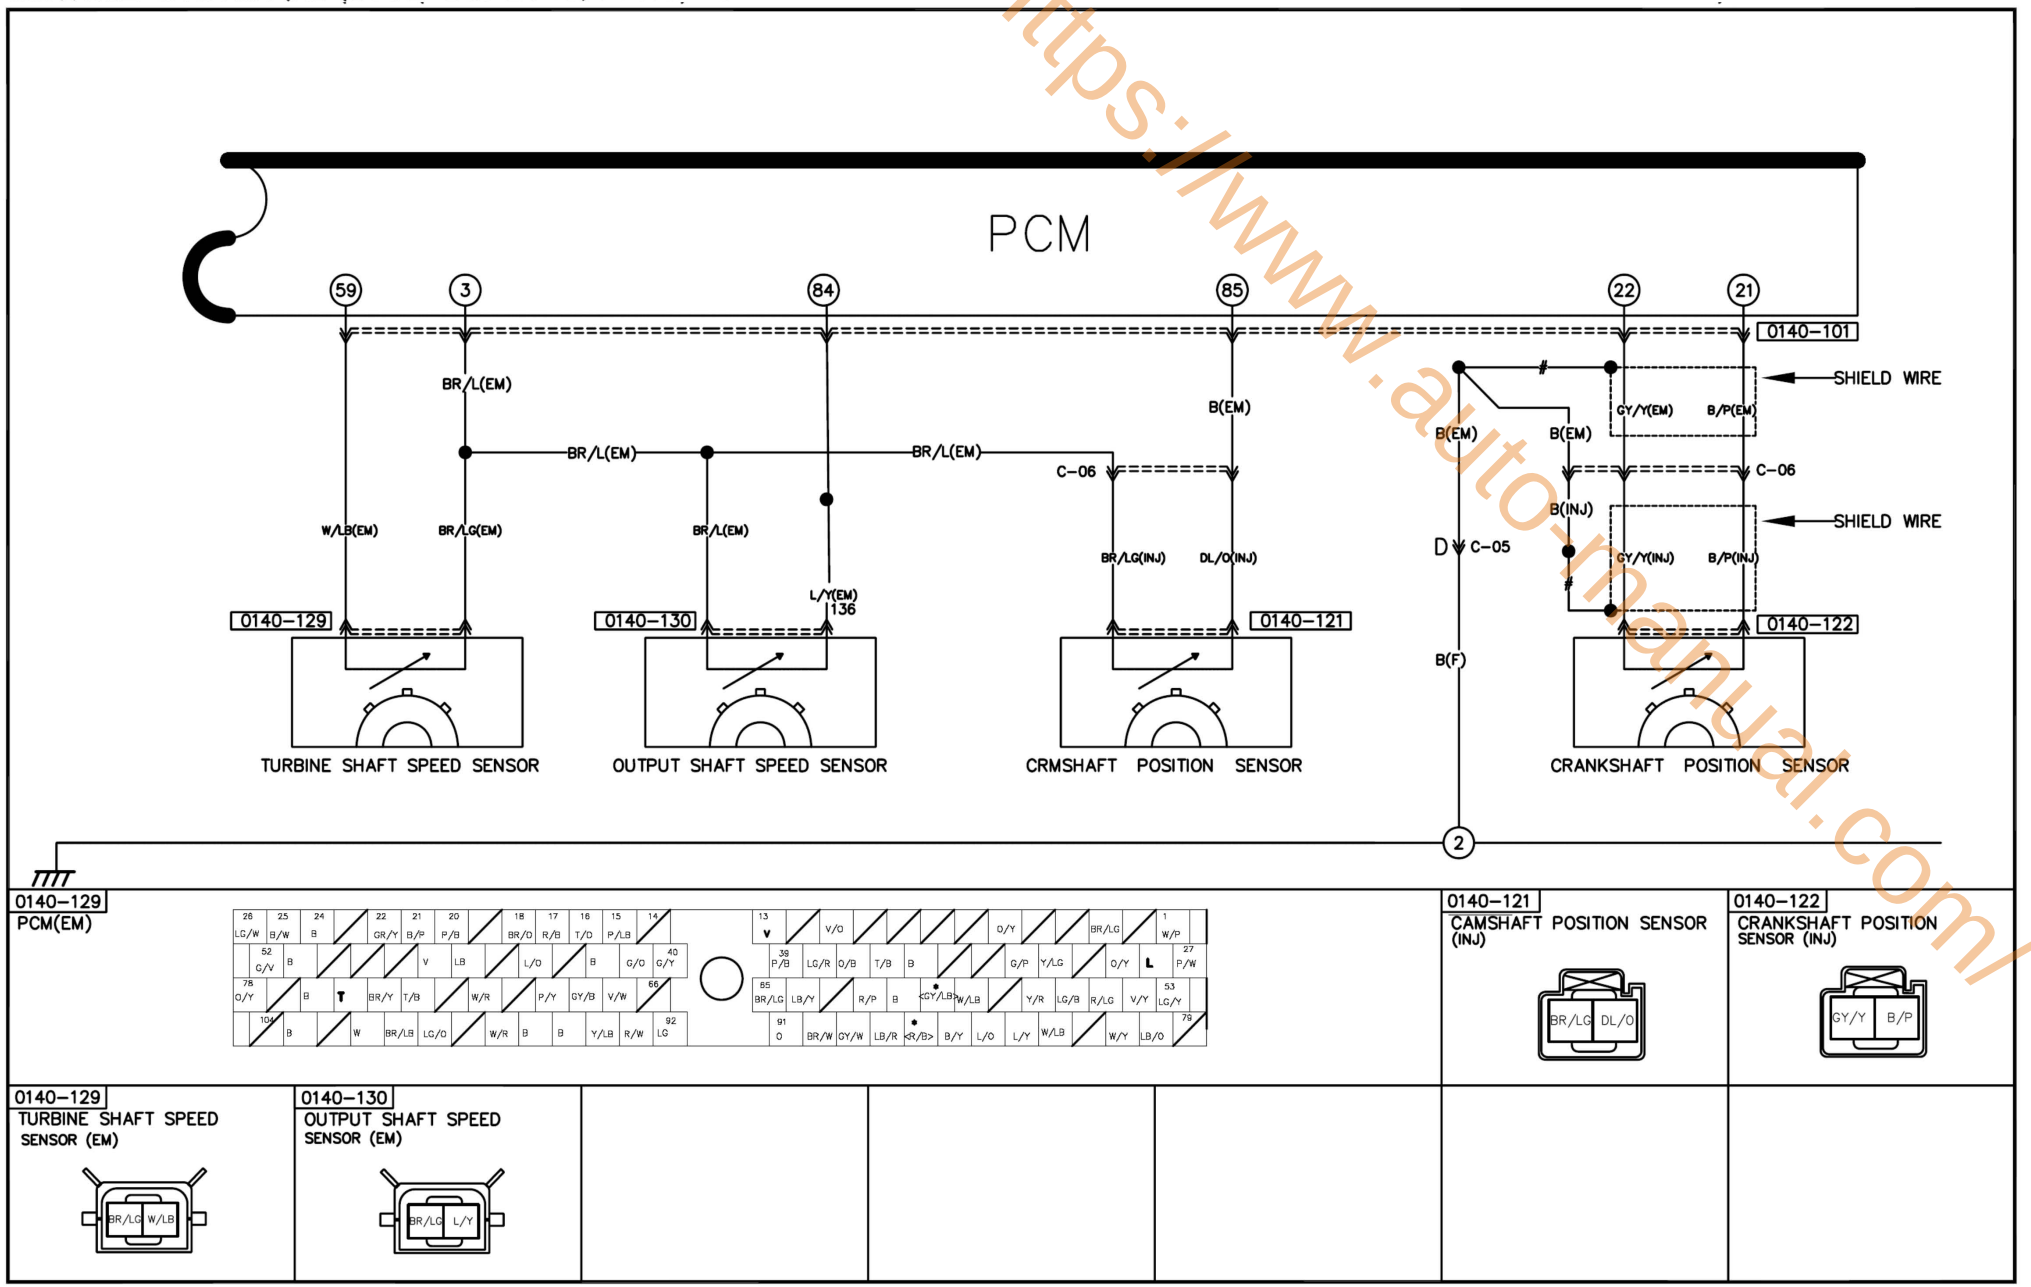

0140-129
PCM(EM)


0140-121
CAMSHAFT POSITION SENSOR (INJ)

0140-122
CRANKSHAFT POSITION SENSOR (INJ)


0140-129
TURBINE SHAFT SPEED SENSOR (EM)

0140-130
OUTPUT SHAFT SPEED SENSOR (EM)


https://www.auto-manual.com/

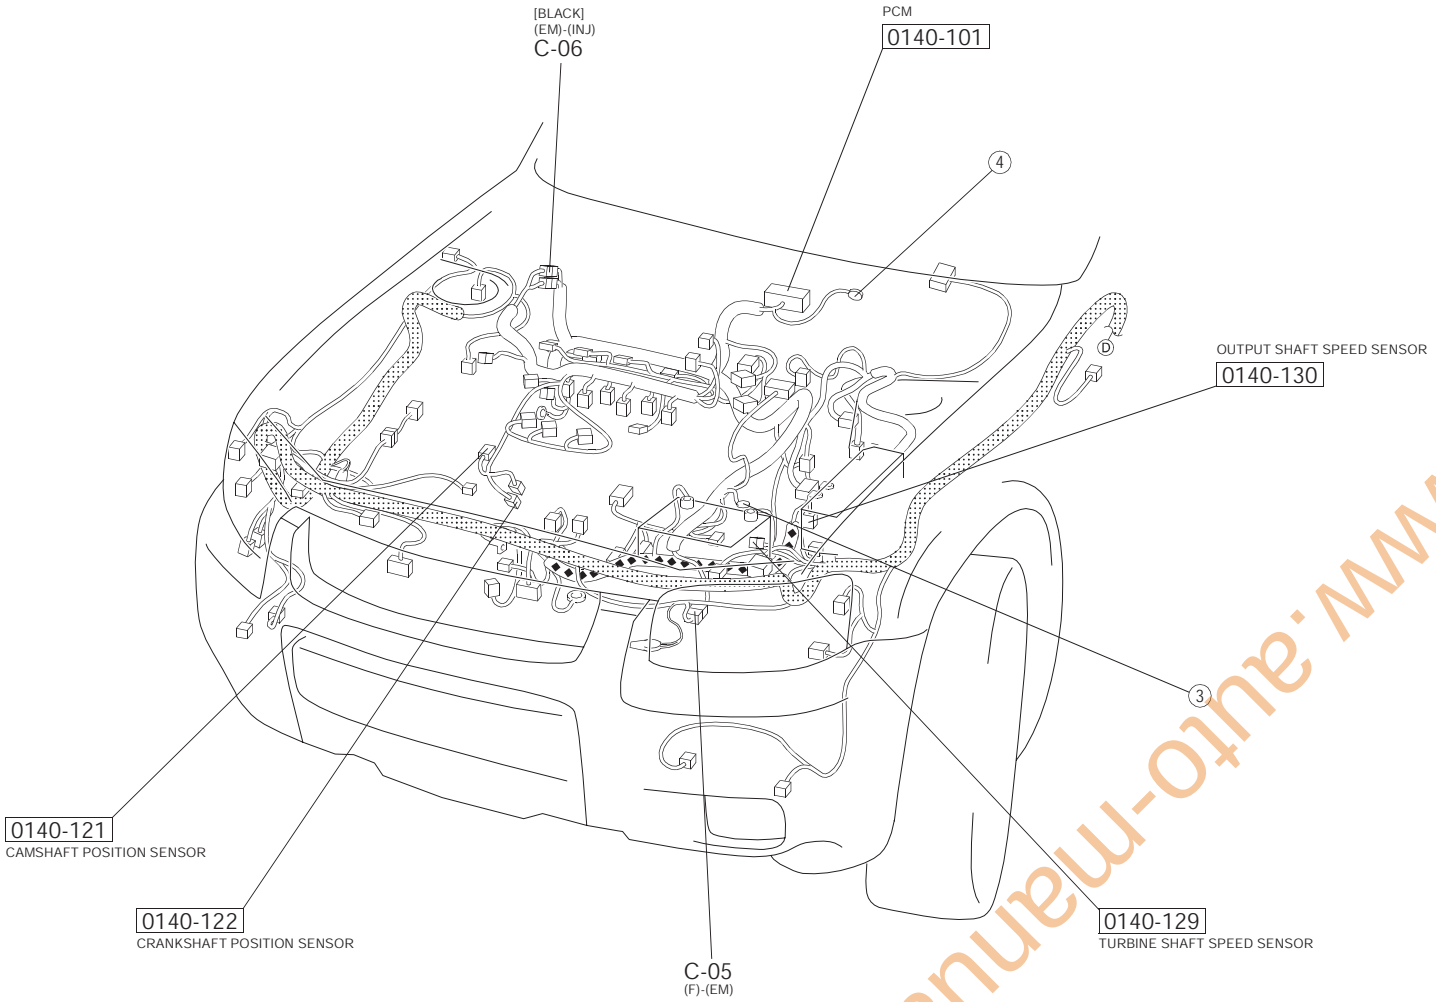

https://www.auto-manual.com/

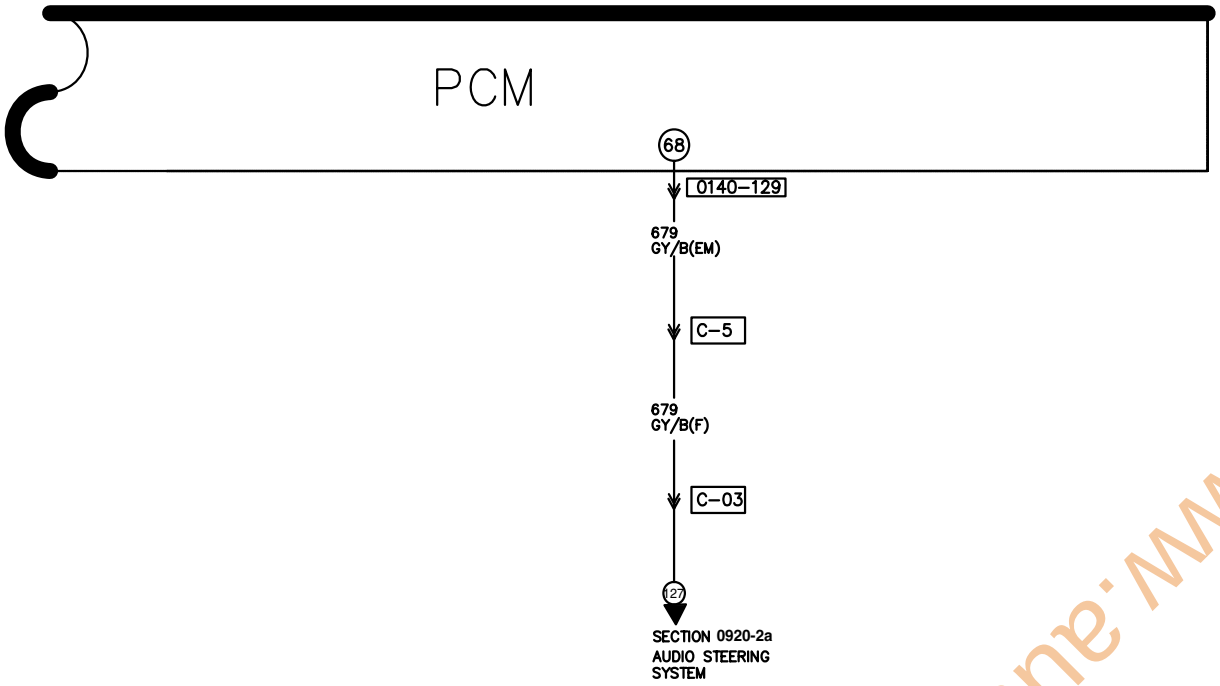


0140–129

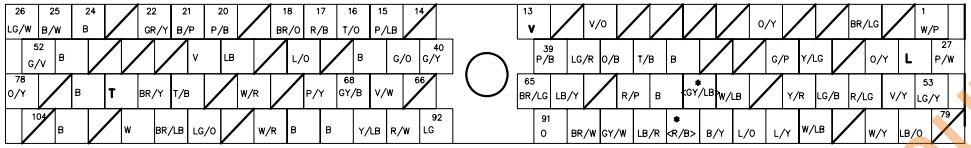


C–03

FRONT(F)–INSTRUMENT PANEL(I)

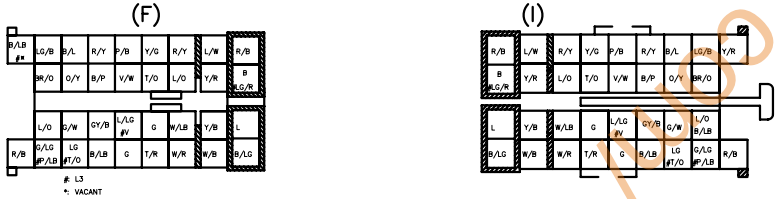


C–05 FRONT(F) / EMEMISSION(EM)
FOR AJ (3.0L MODLE) USE

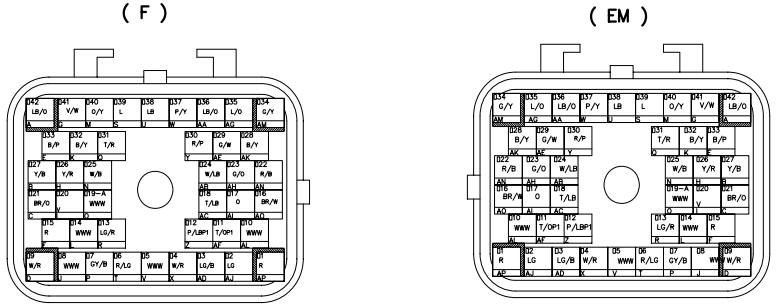


https://www.auto-manual.com/

https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK

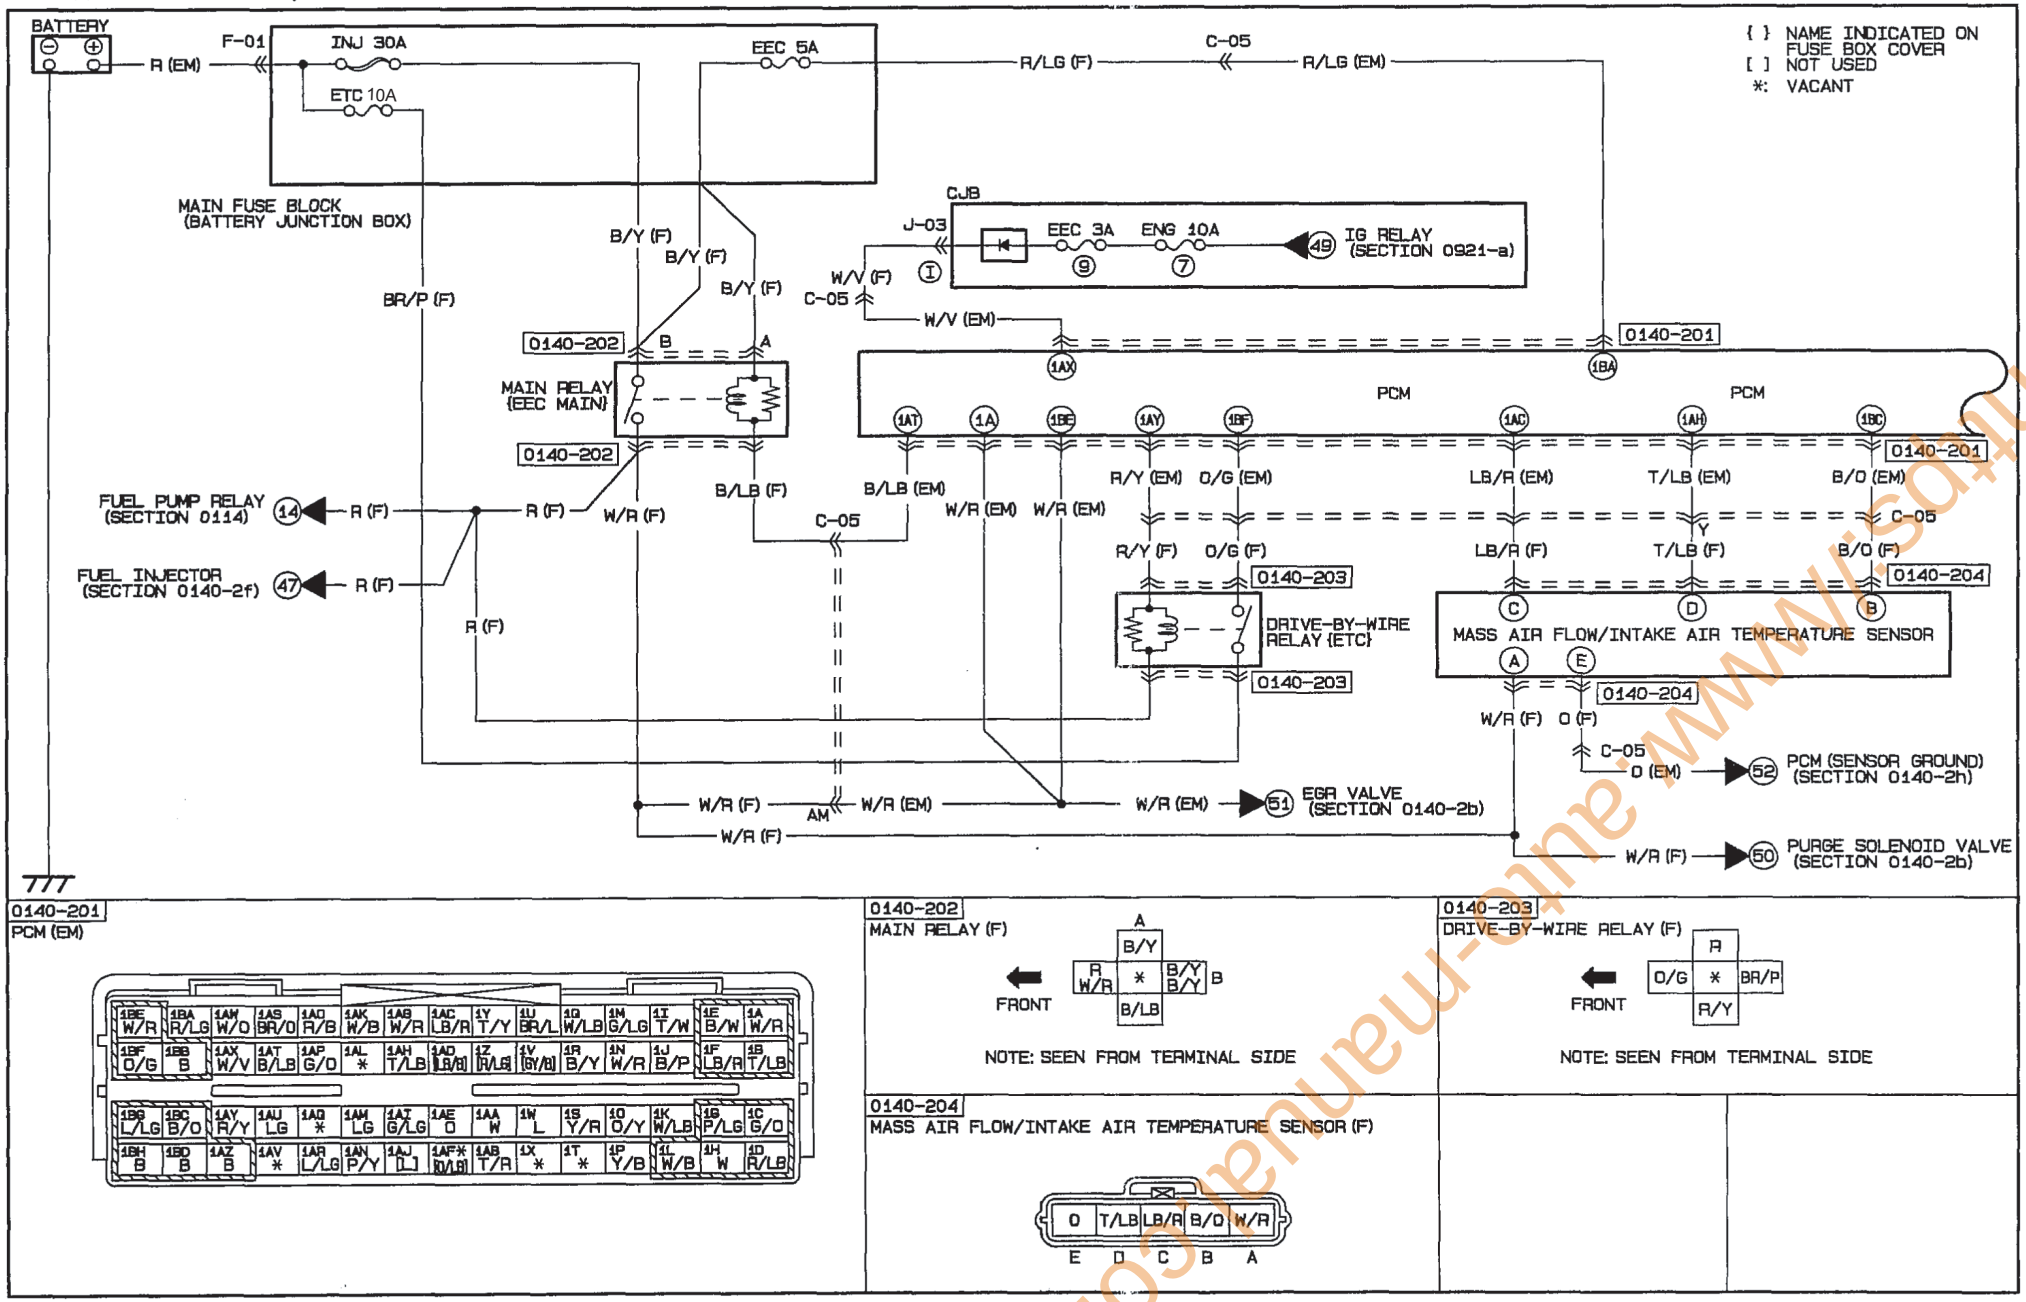


http://www.auto-manuals.com/

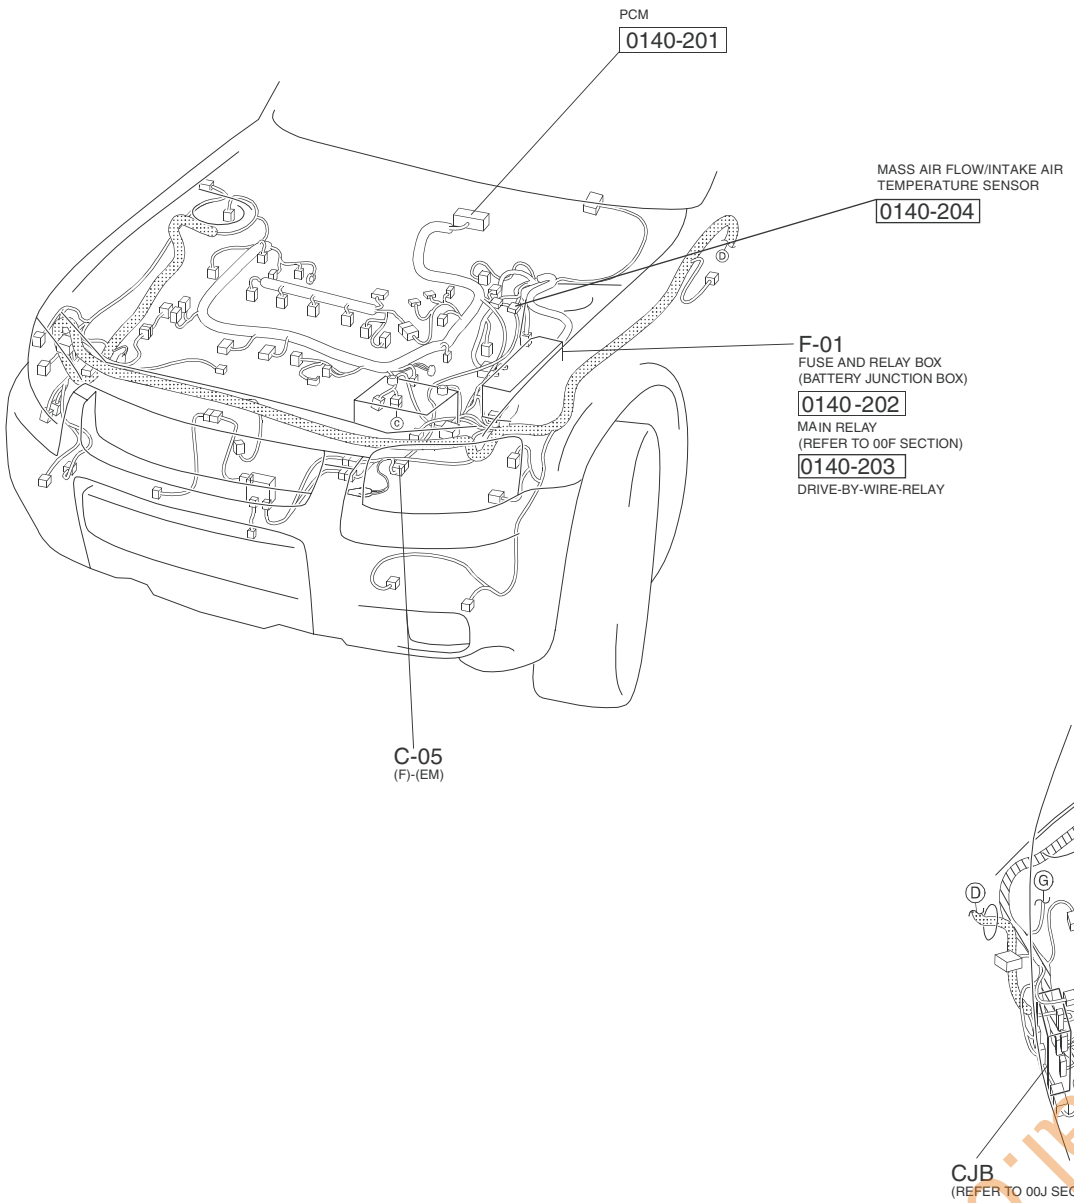

https://www.auto-manual.com/

[ ] NOT USED
*: VACANT

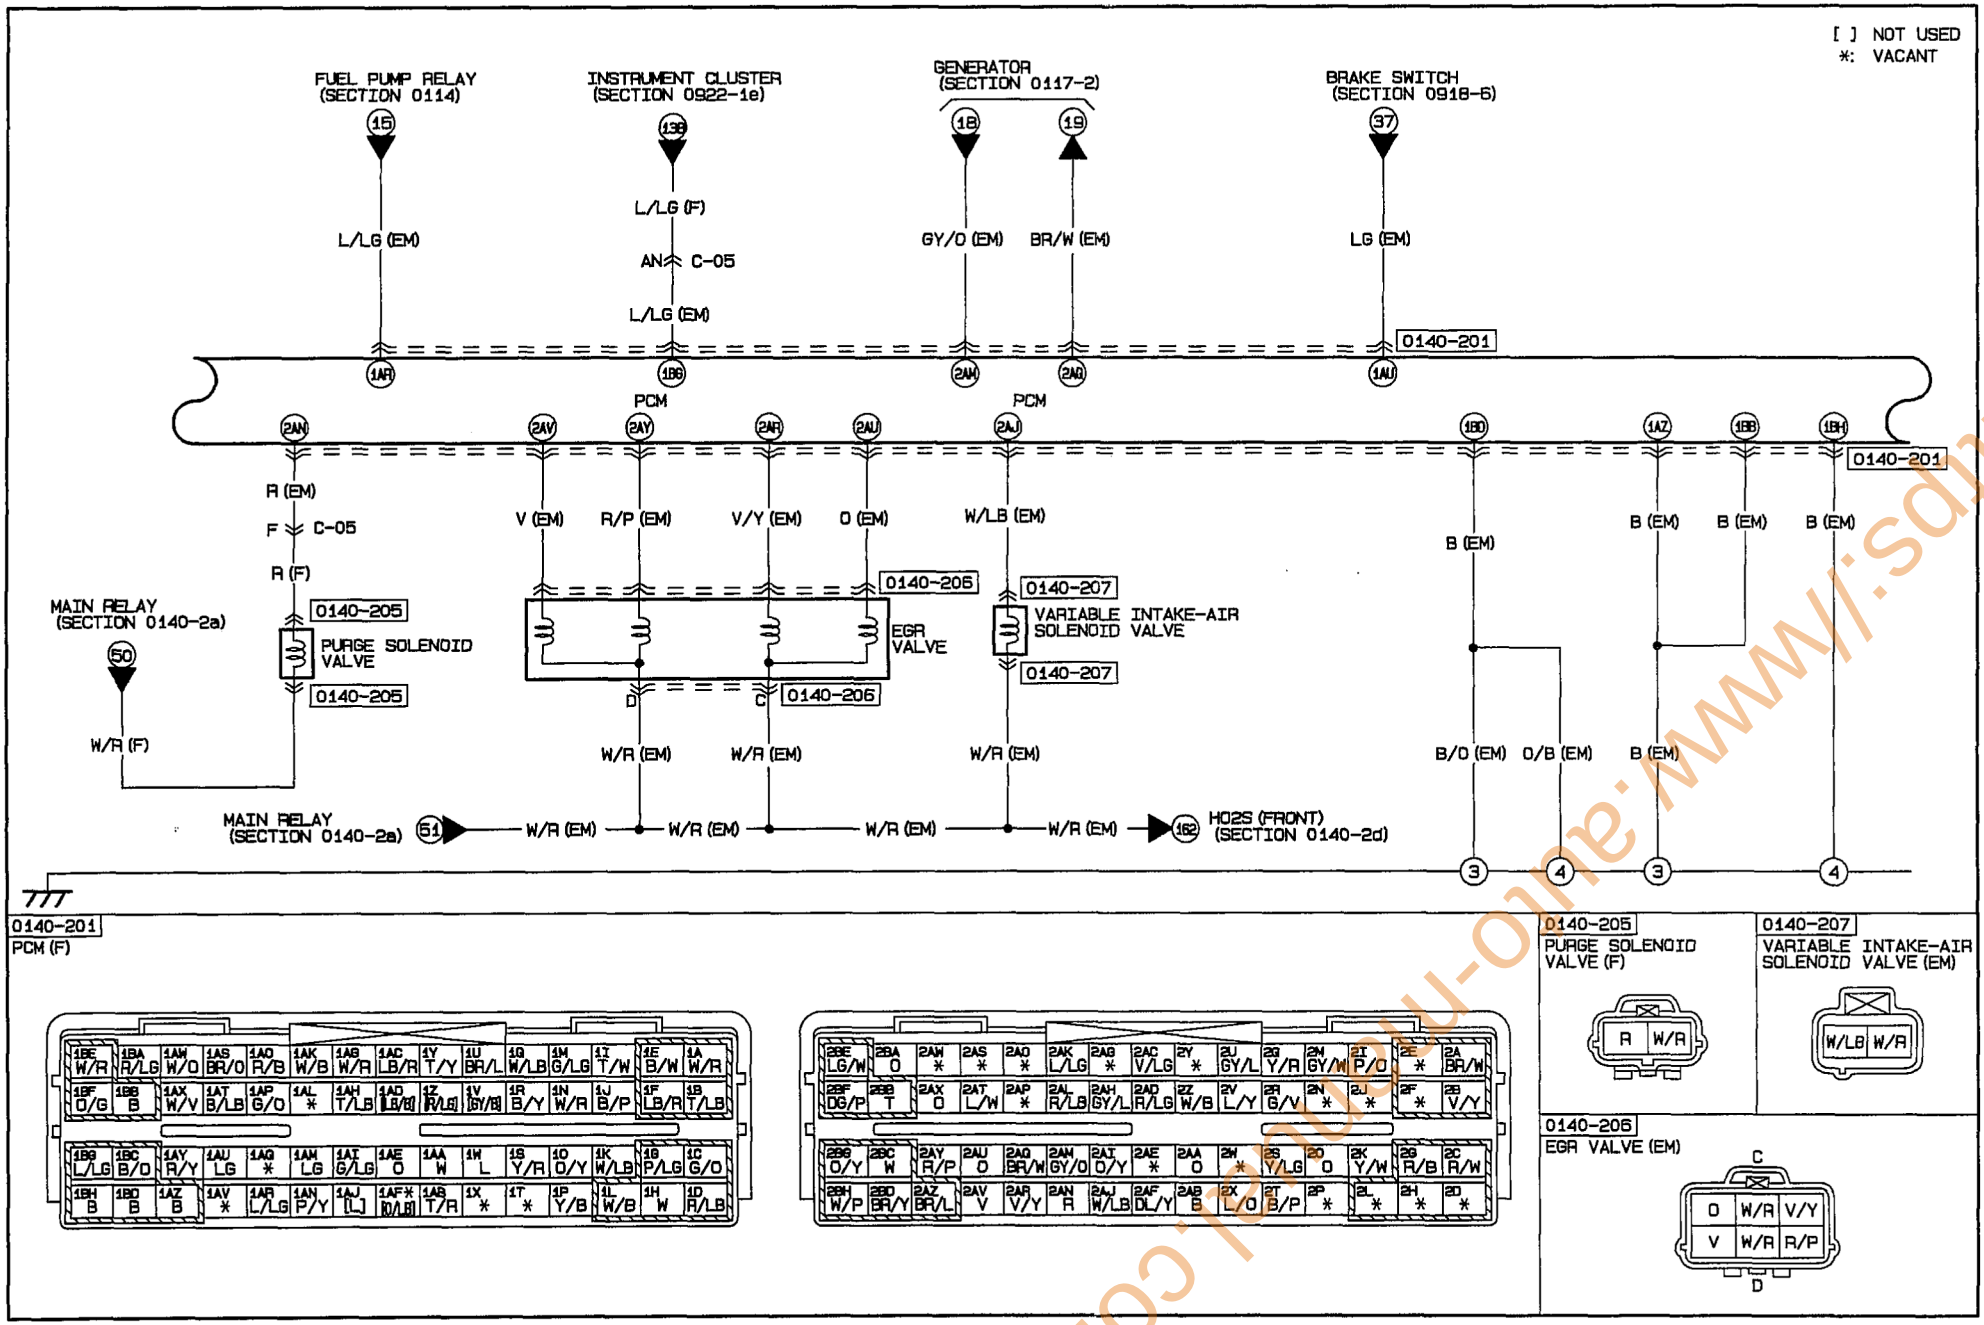


0140-201
PCM (F)

0140-205
PURGE SOLENOID VALVE (F)


0140-207
VARIABLE INTAKE-AIR SOLENOID VALVE (EM)

0140-206
EGR VALVE (EM)


http://www.auto-manual.com/

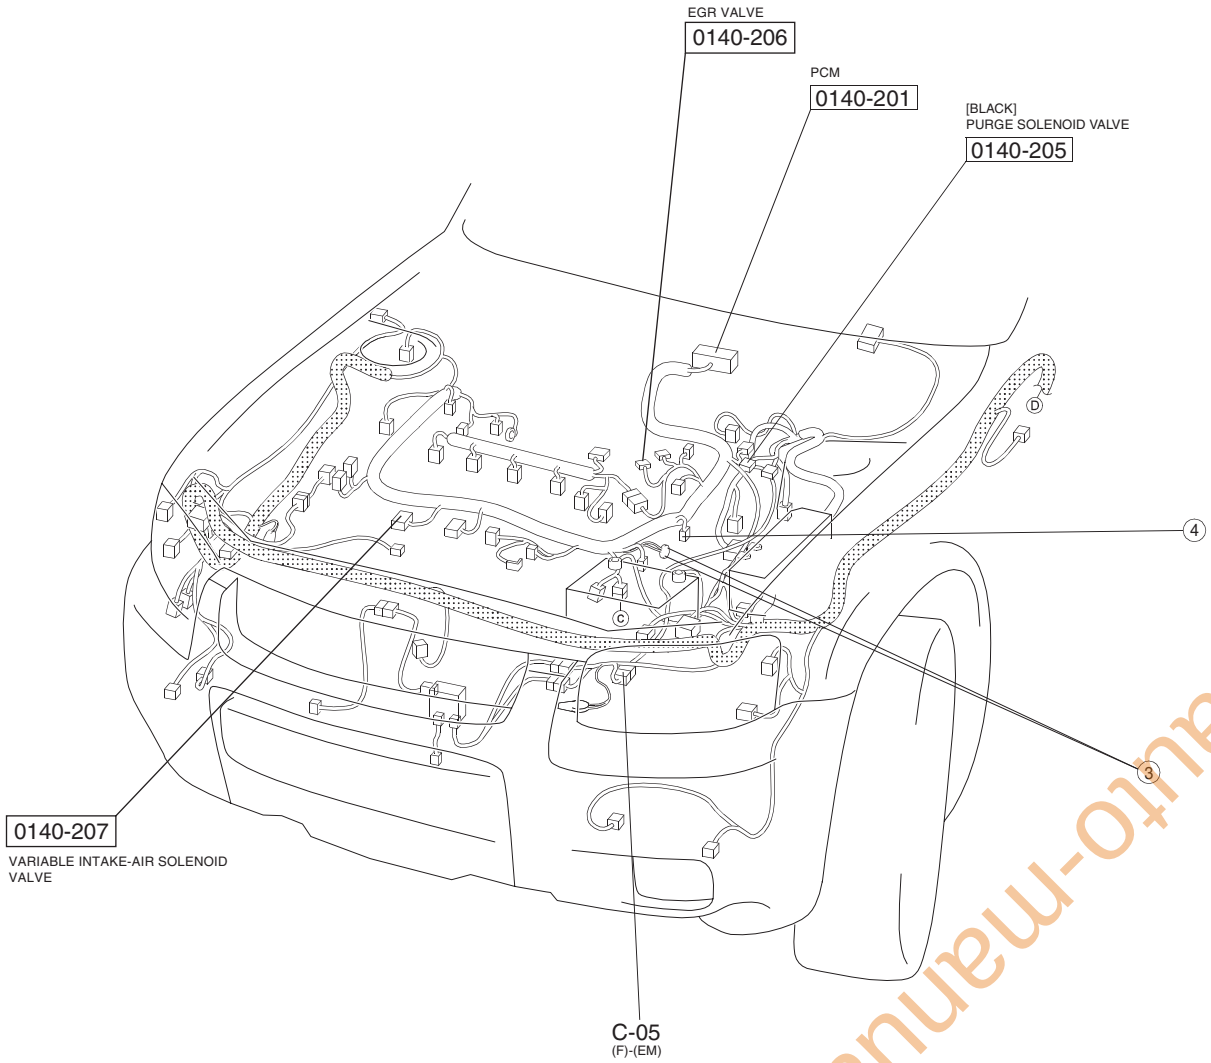


https://www.auto-manual.com/

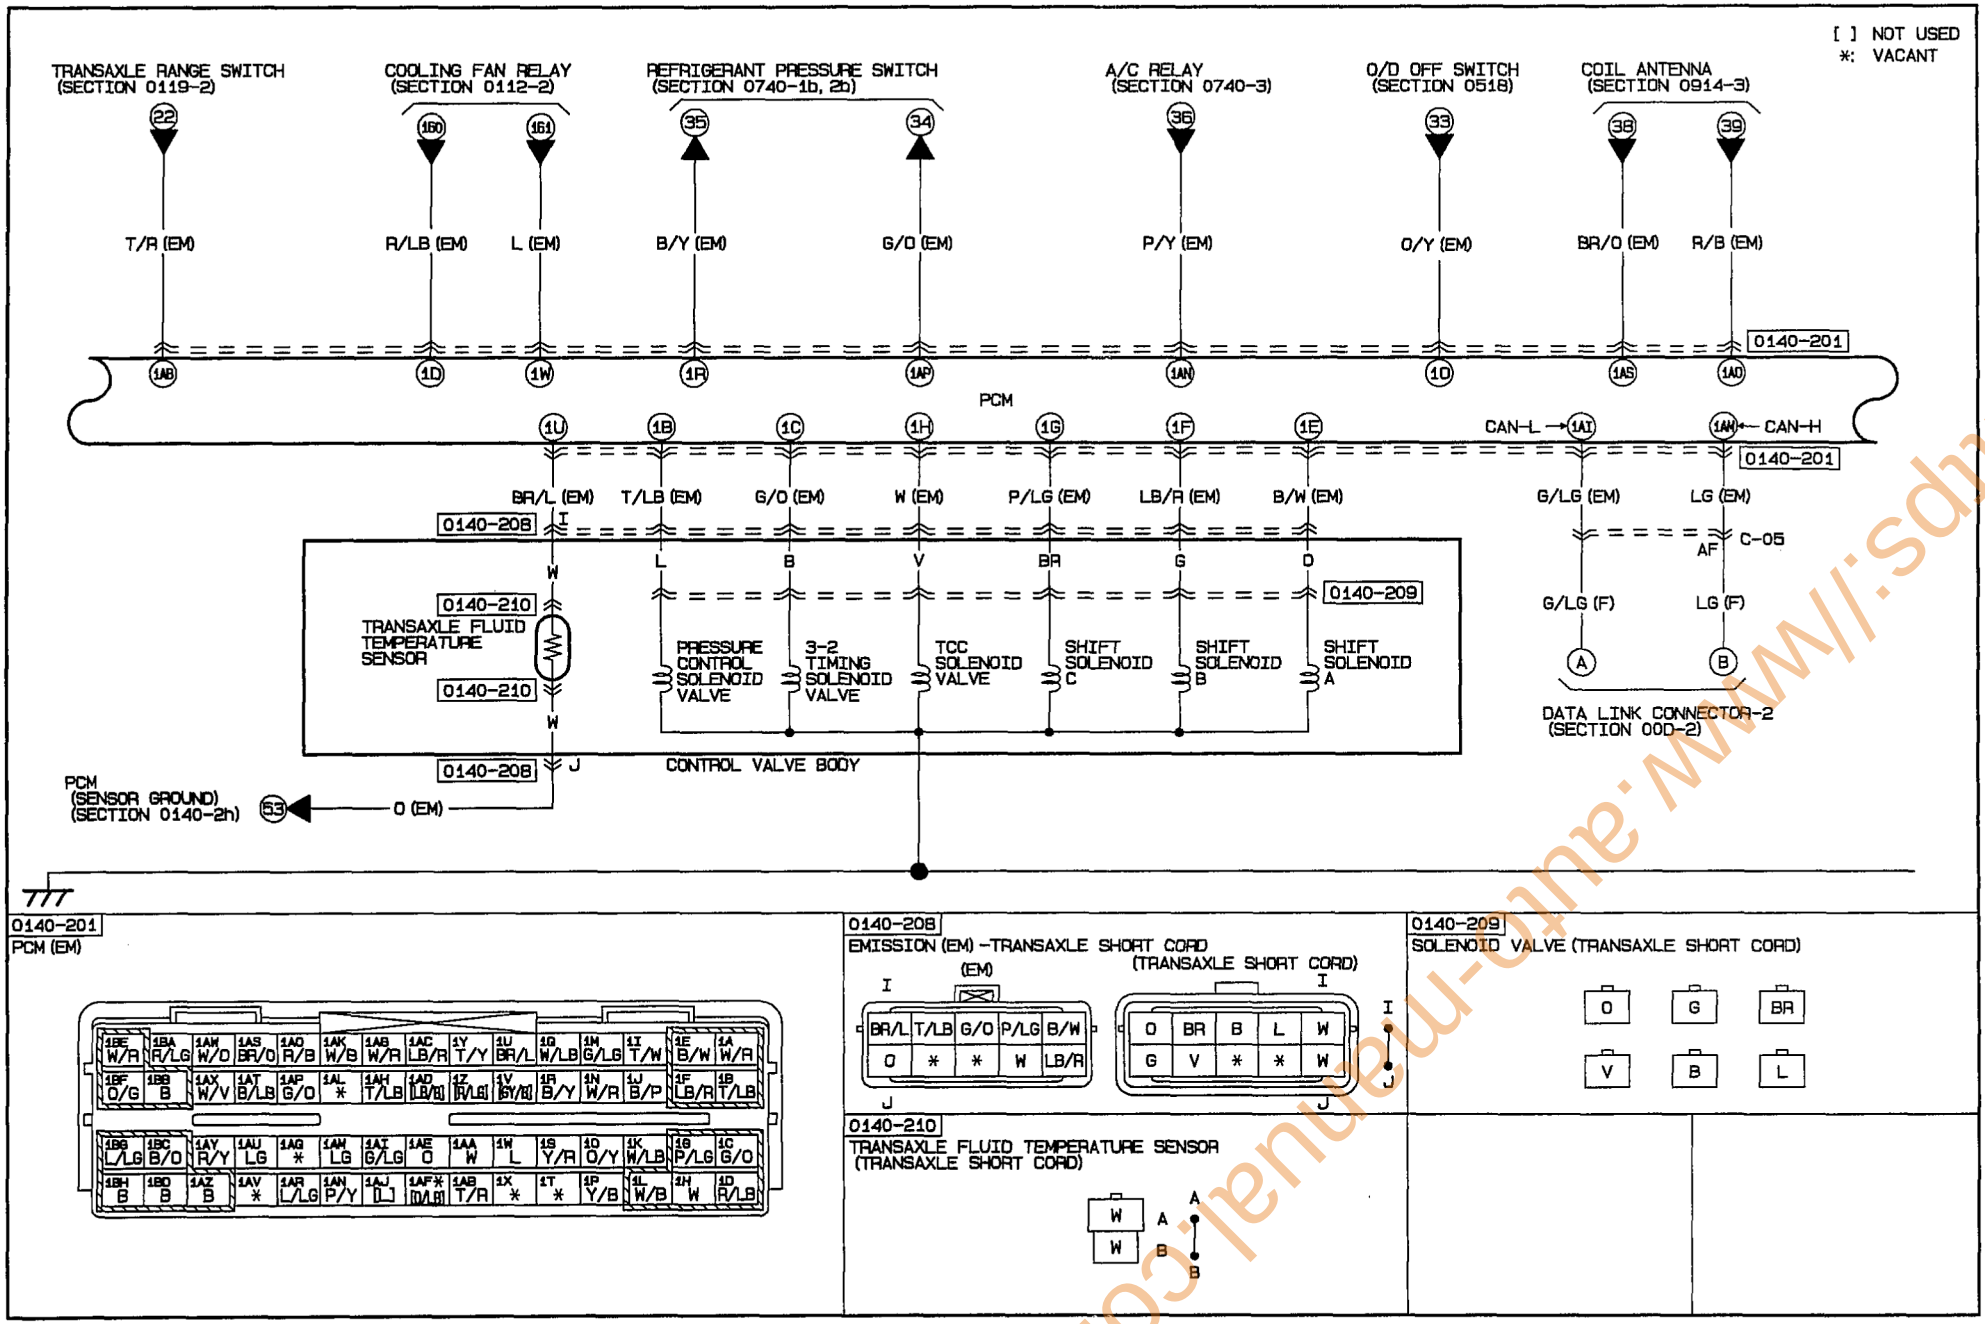


https://www.auto-manual.com/

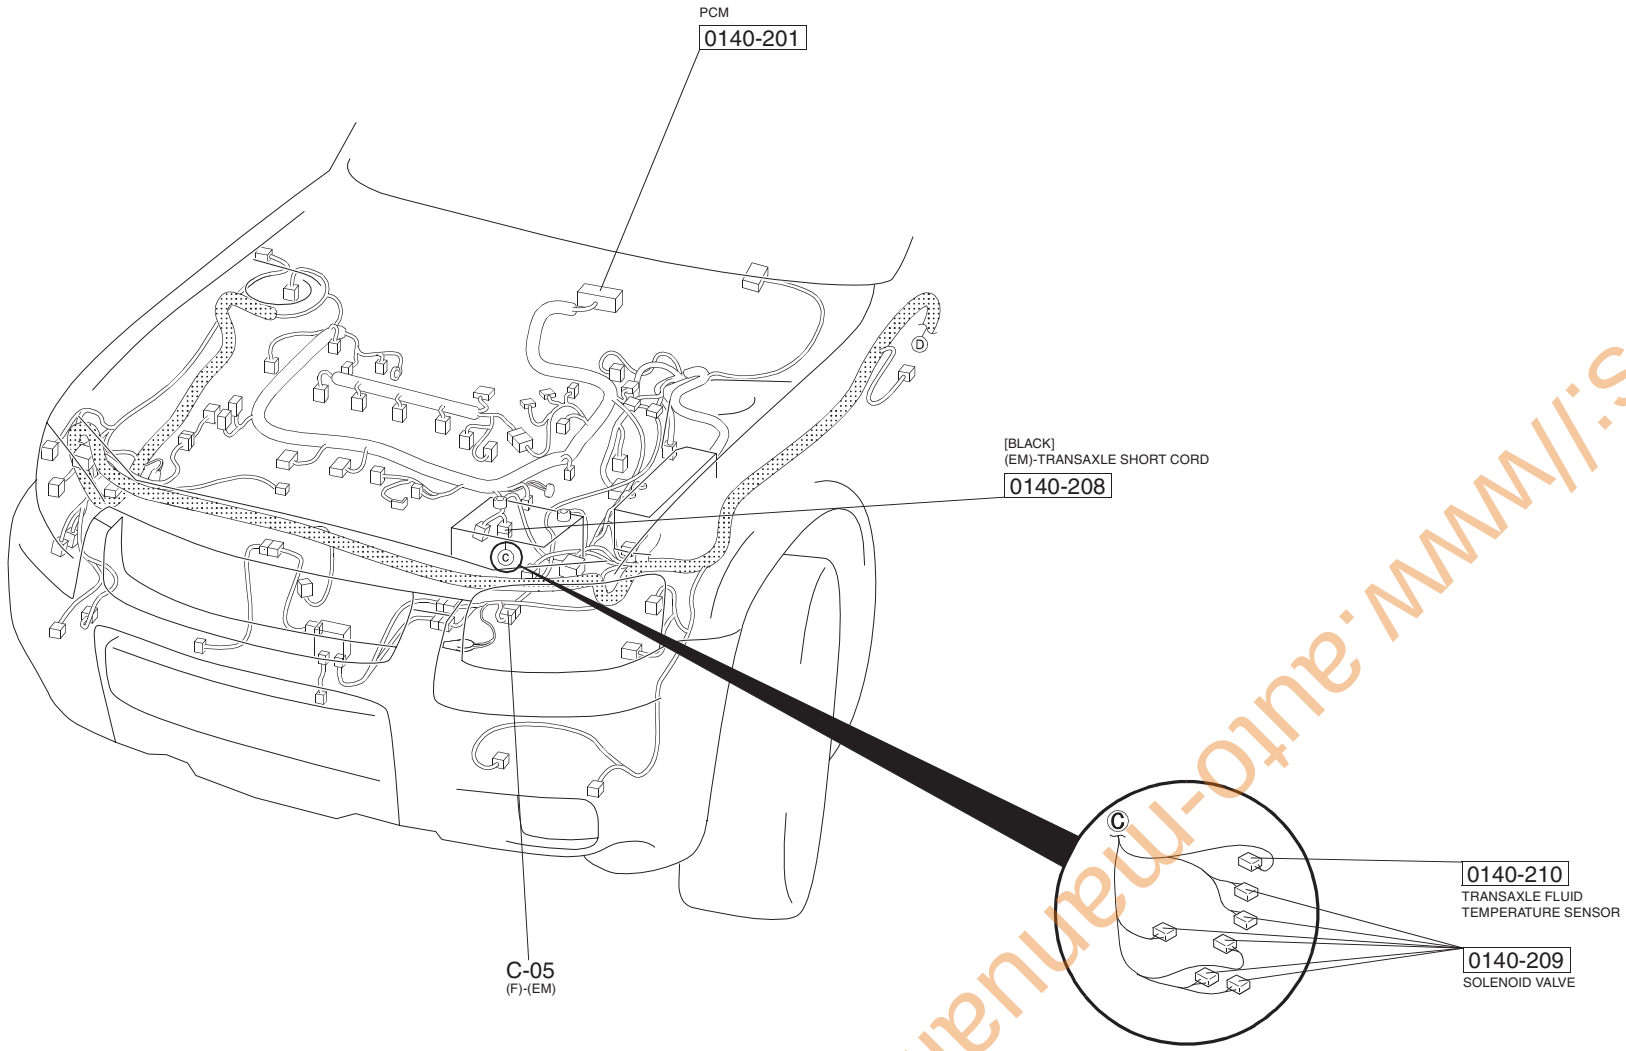


https://www.auto-manual.com/

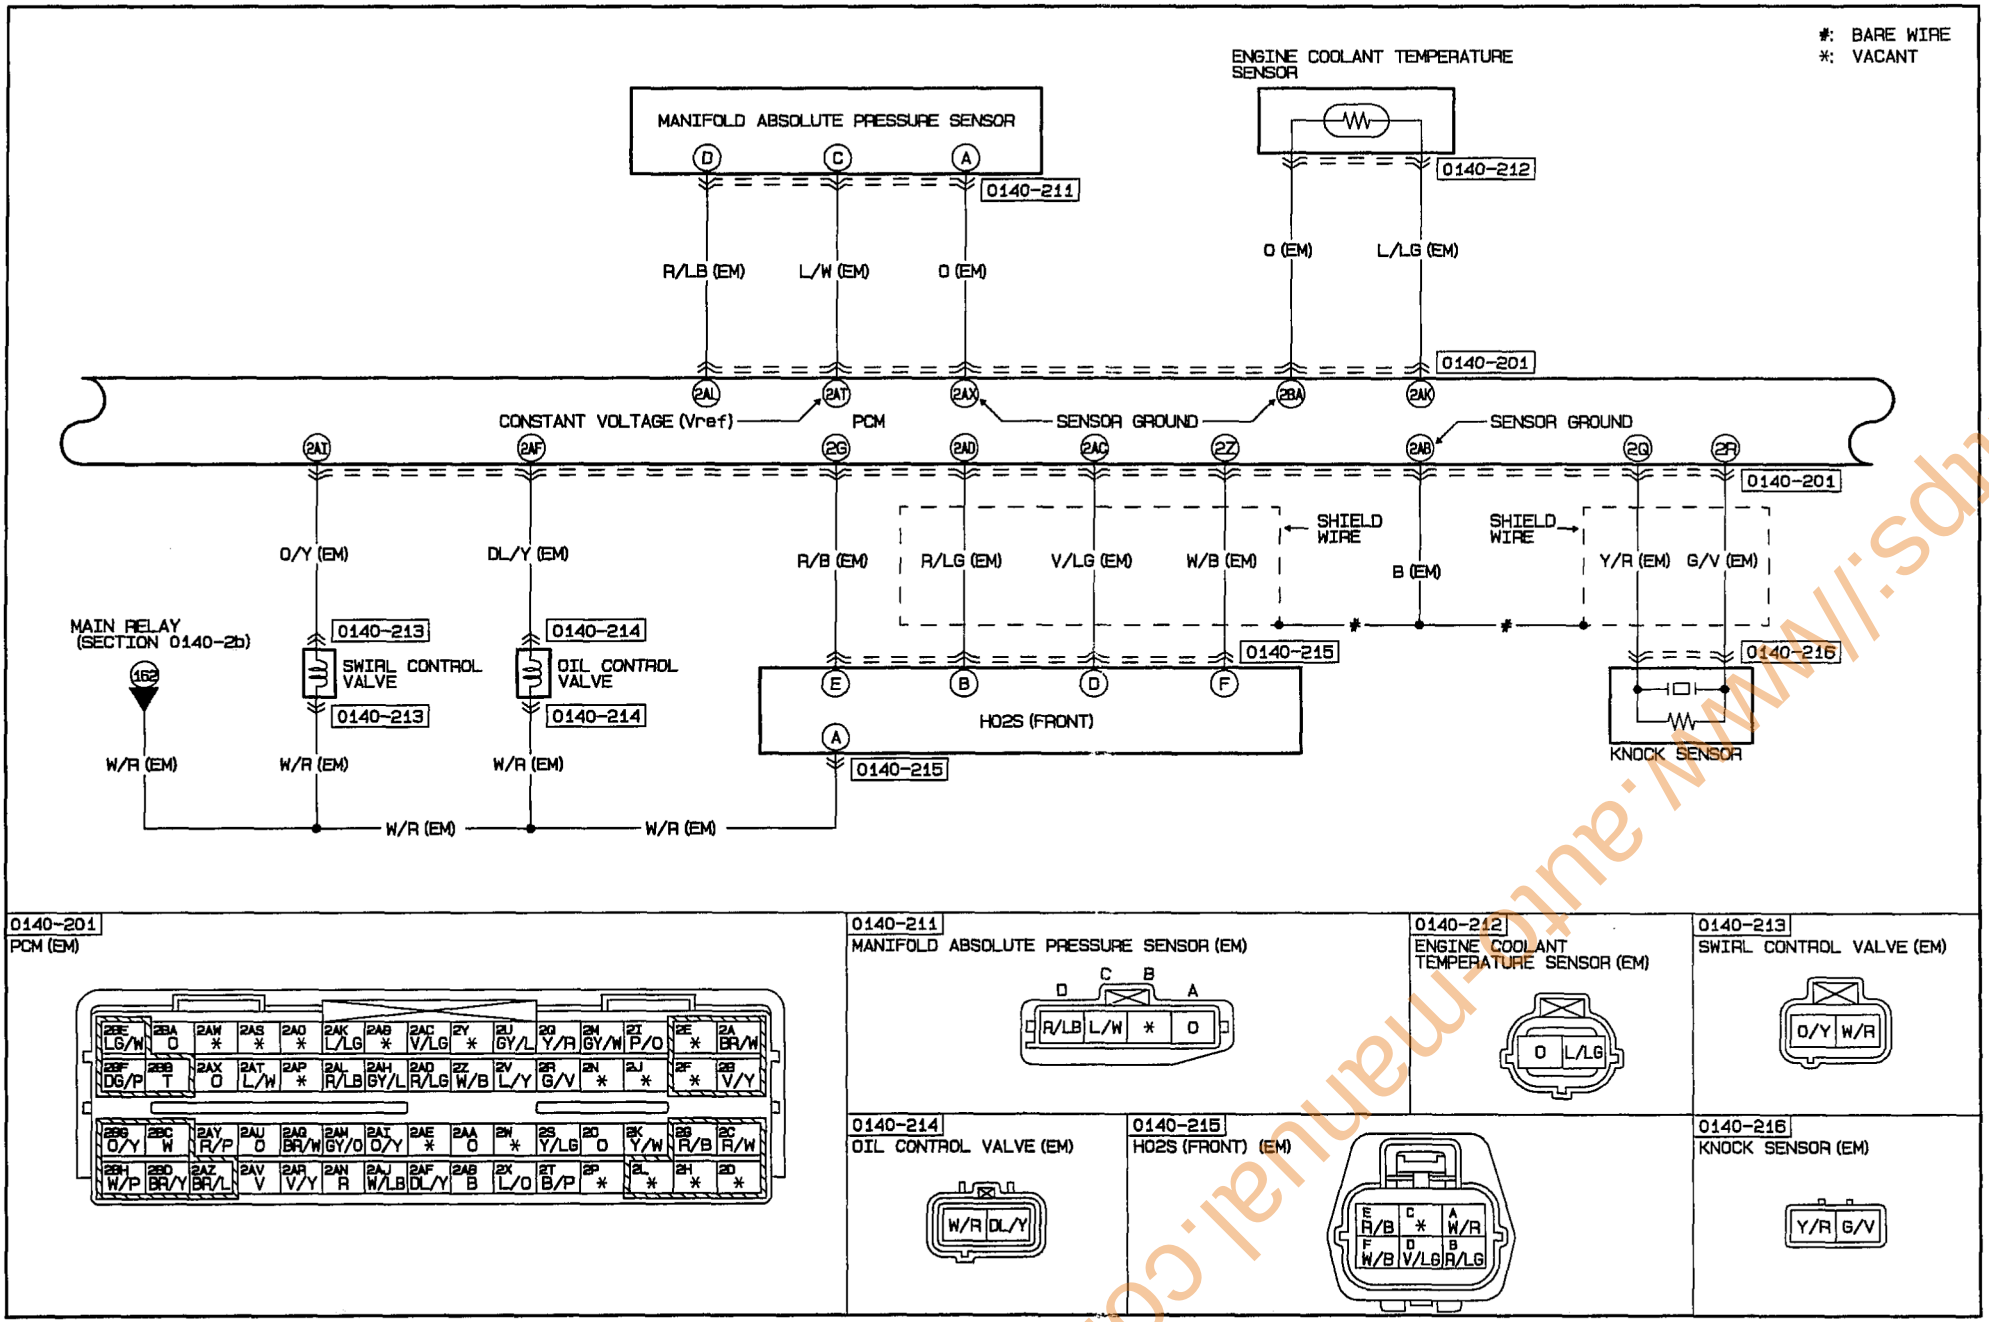


https://www.automanual.com/

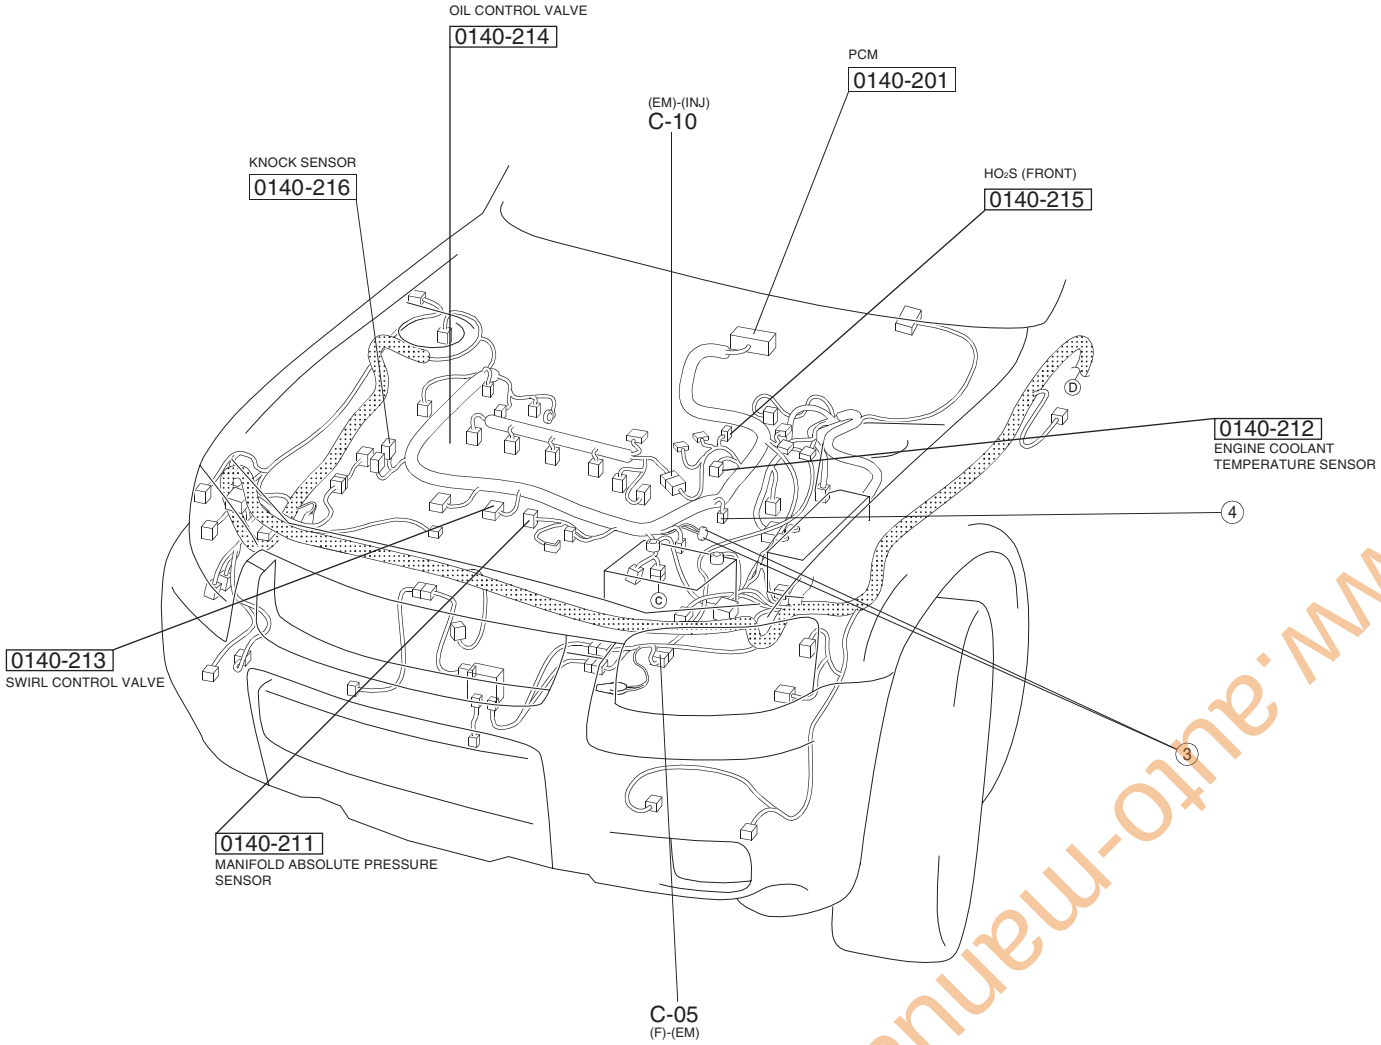


https://www.auto-manual.com/

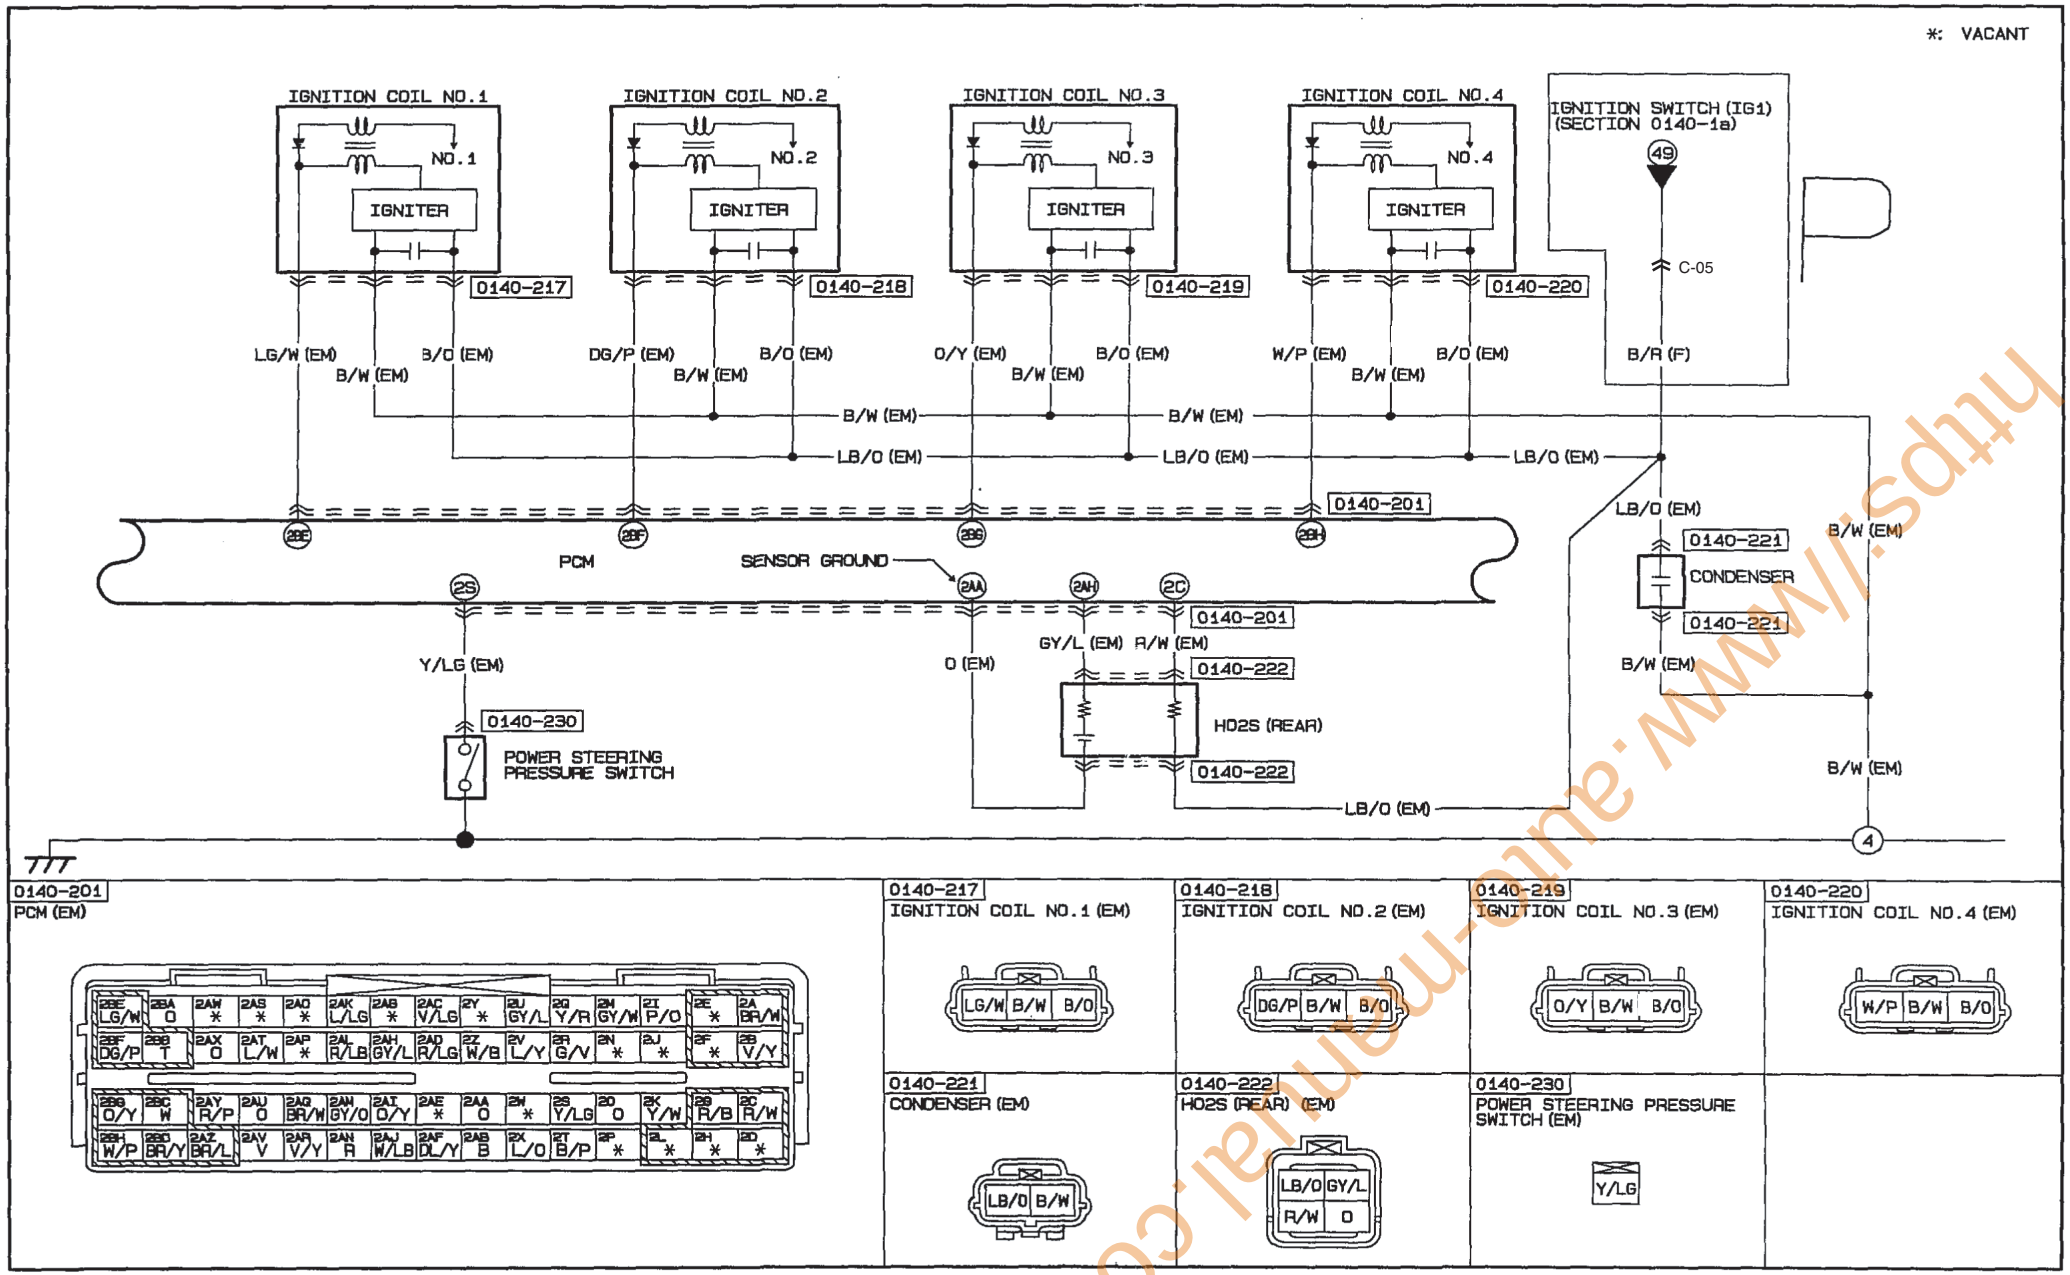


https://www.auto-manual.com/

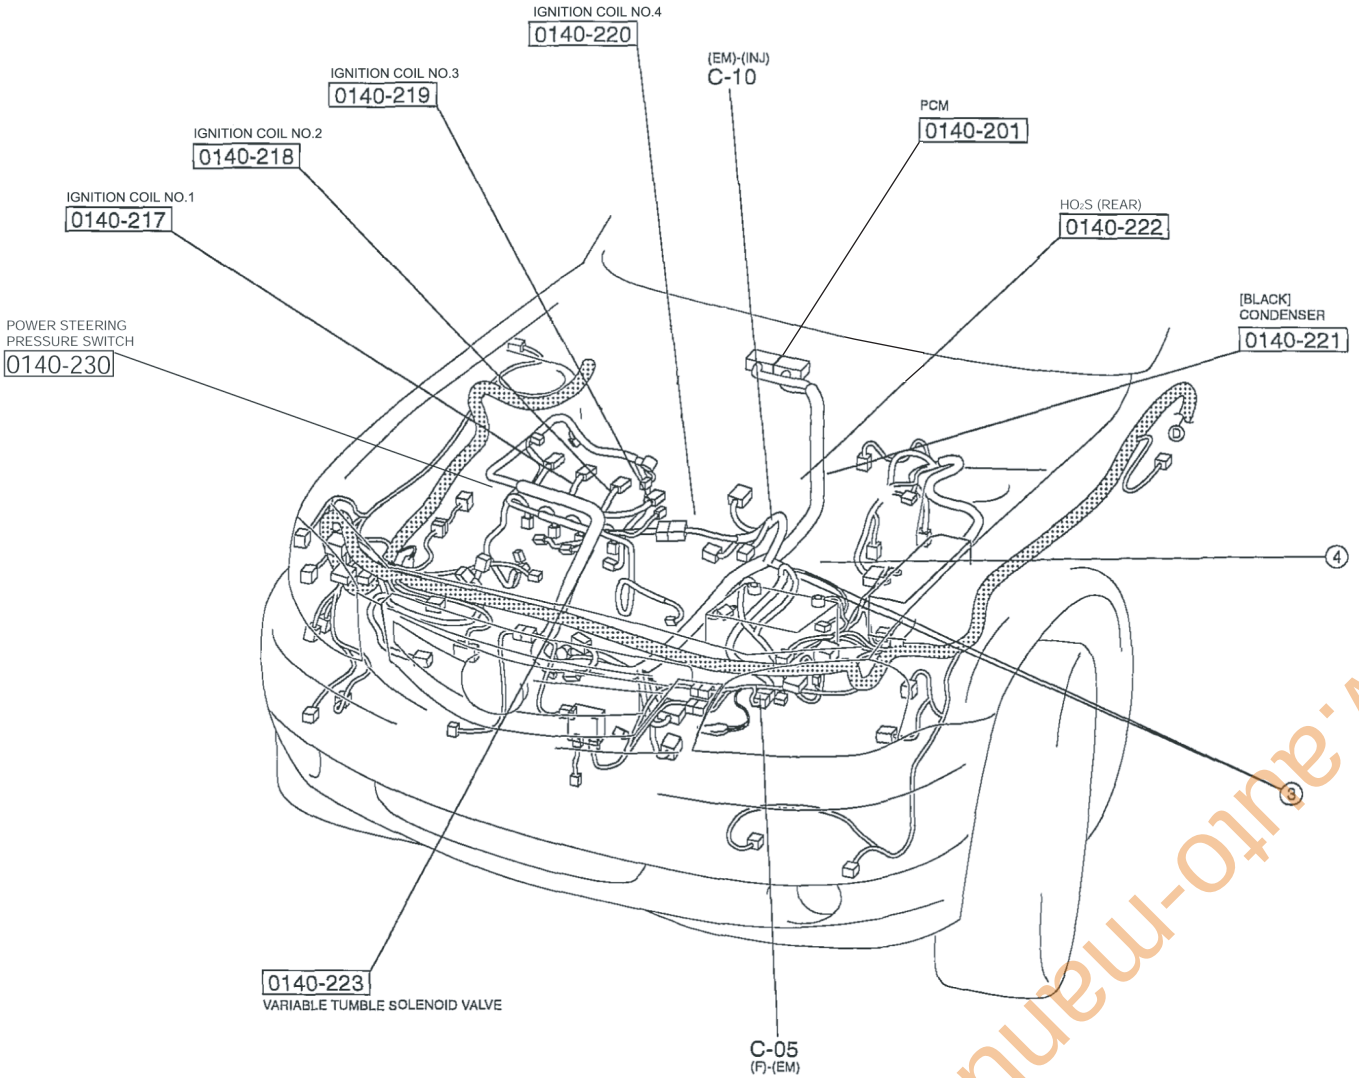

https://www.auto-manual.com/

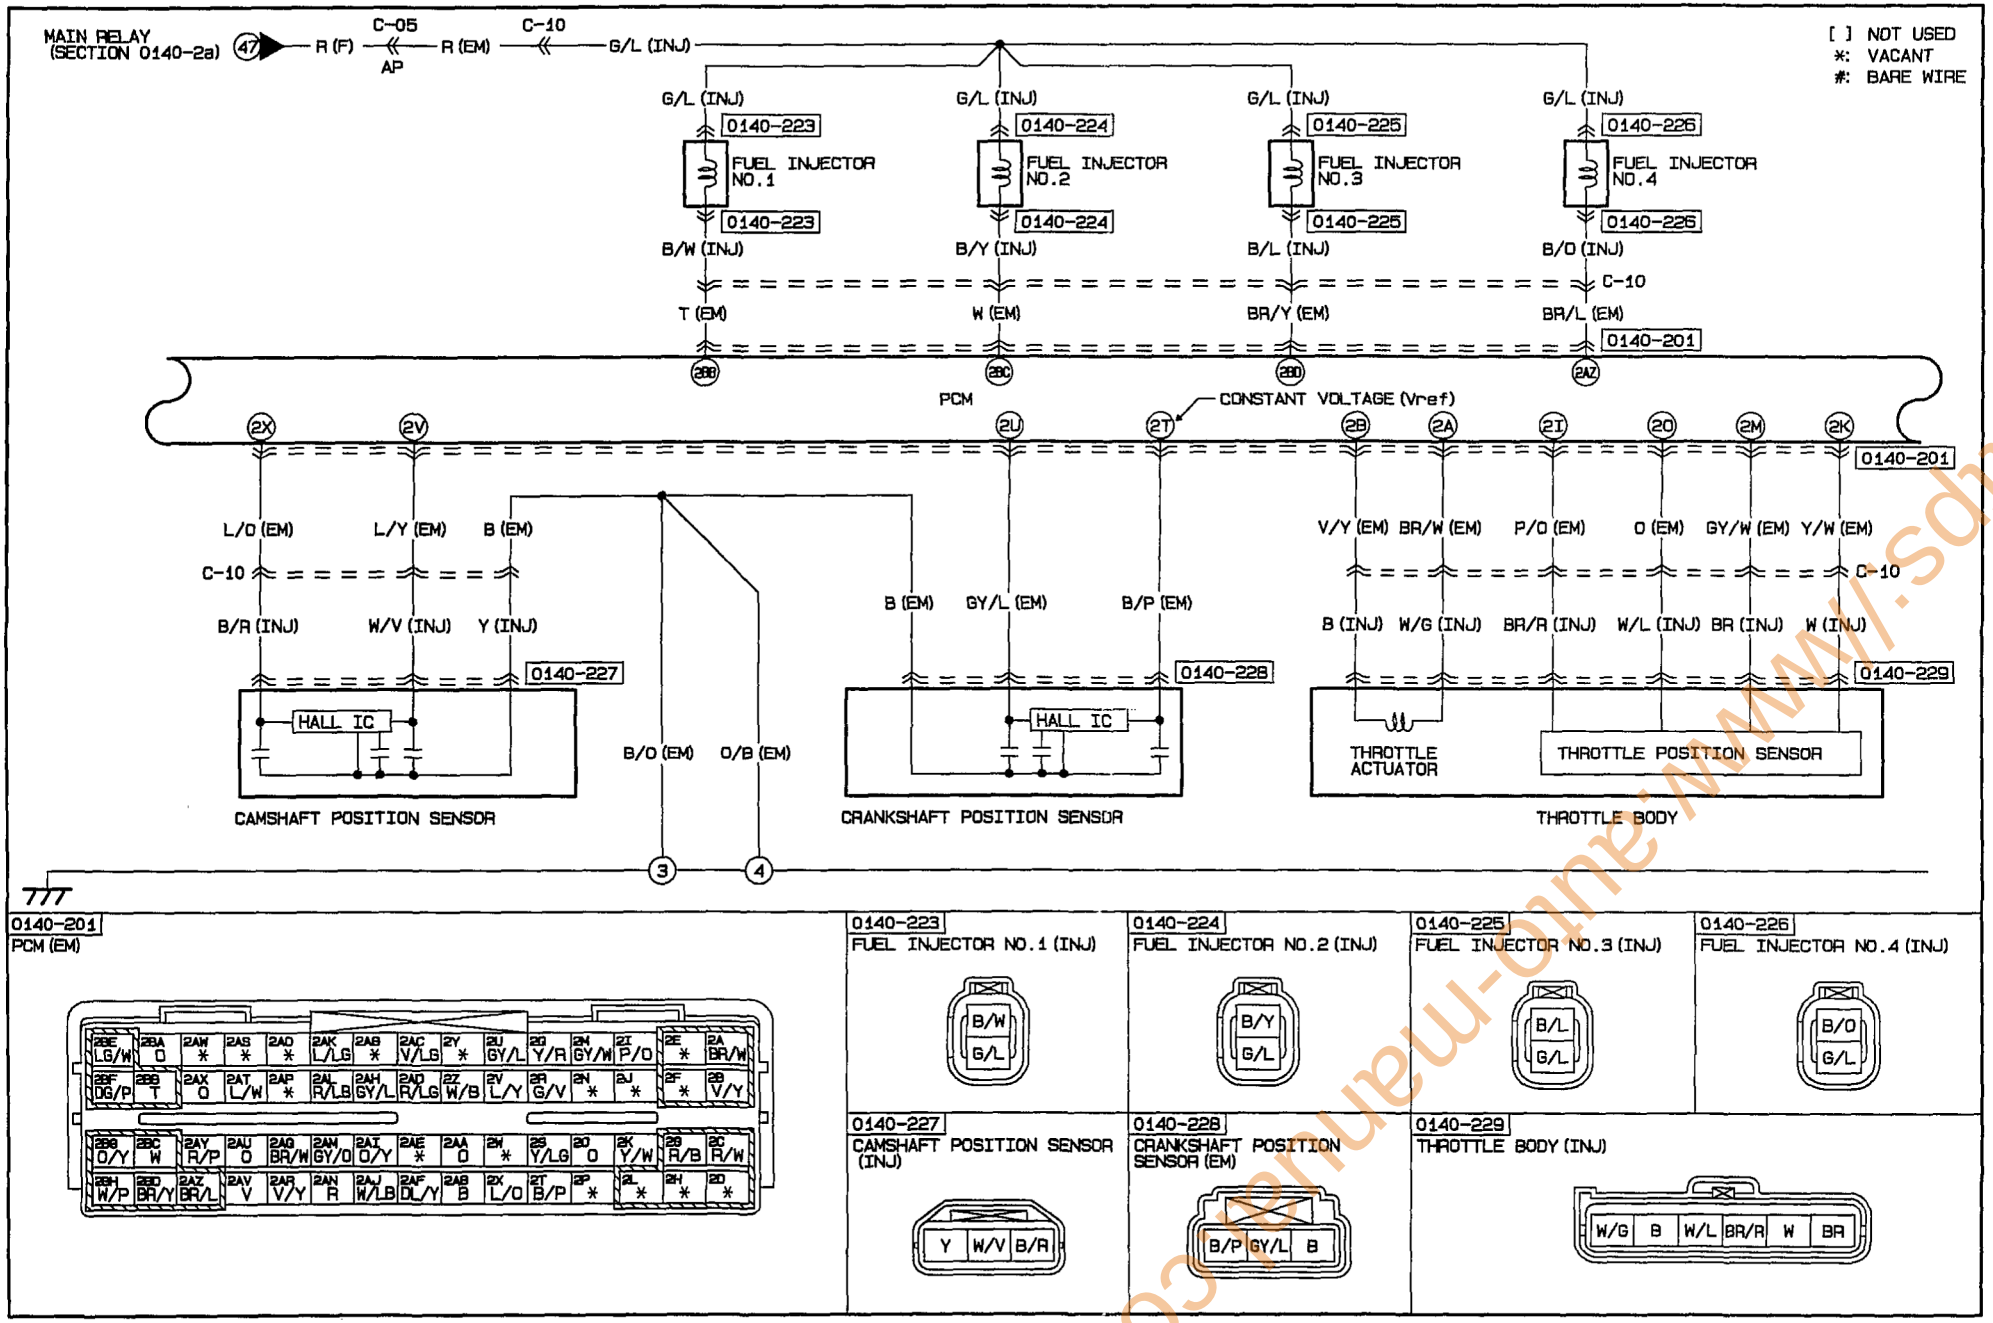


http://www.auto-manuals.com/

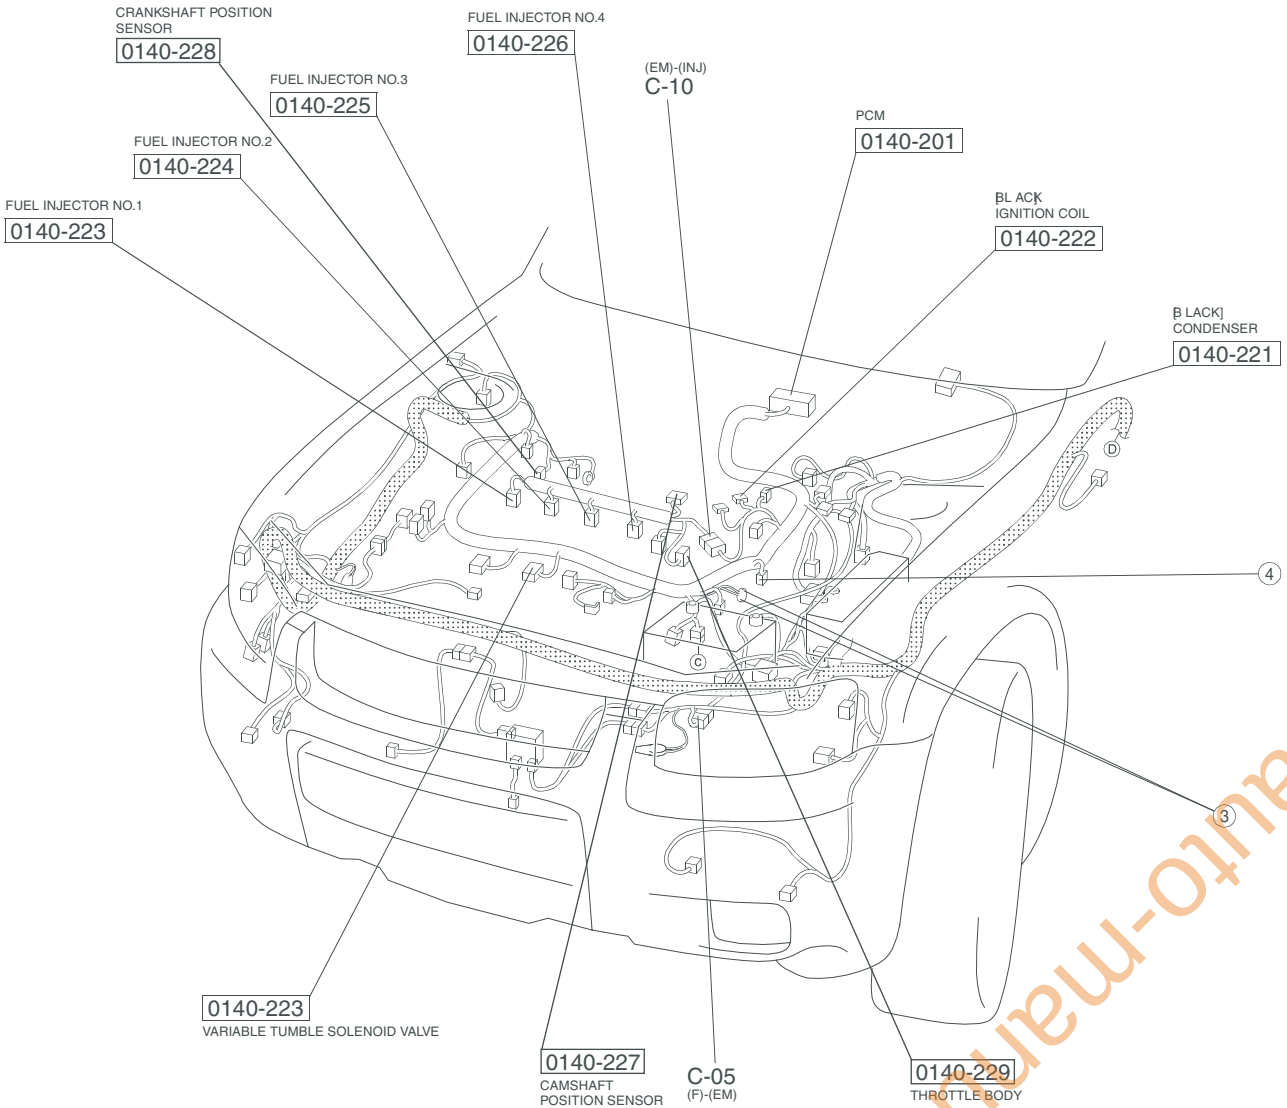


https://www.auto-manual.com/


[ ] NOT USED
*: VACANT

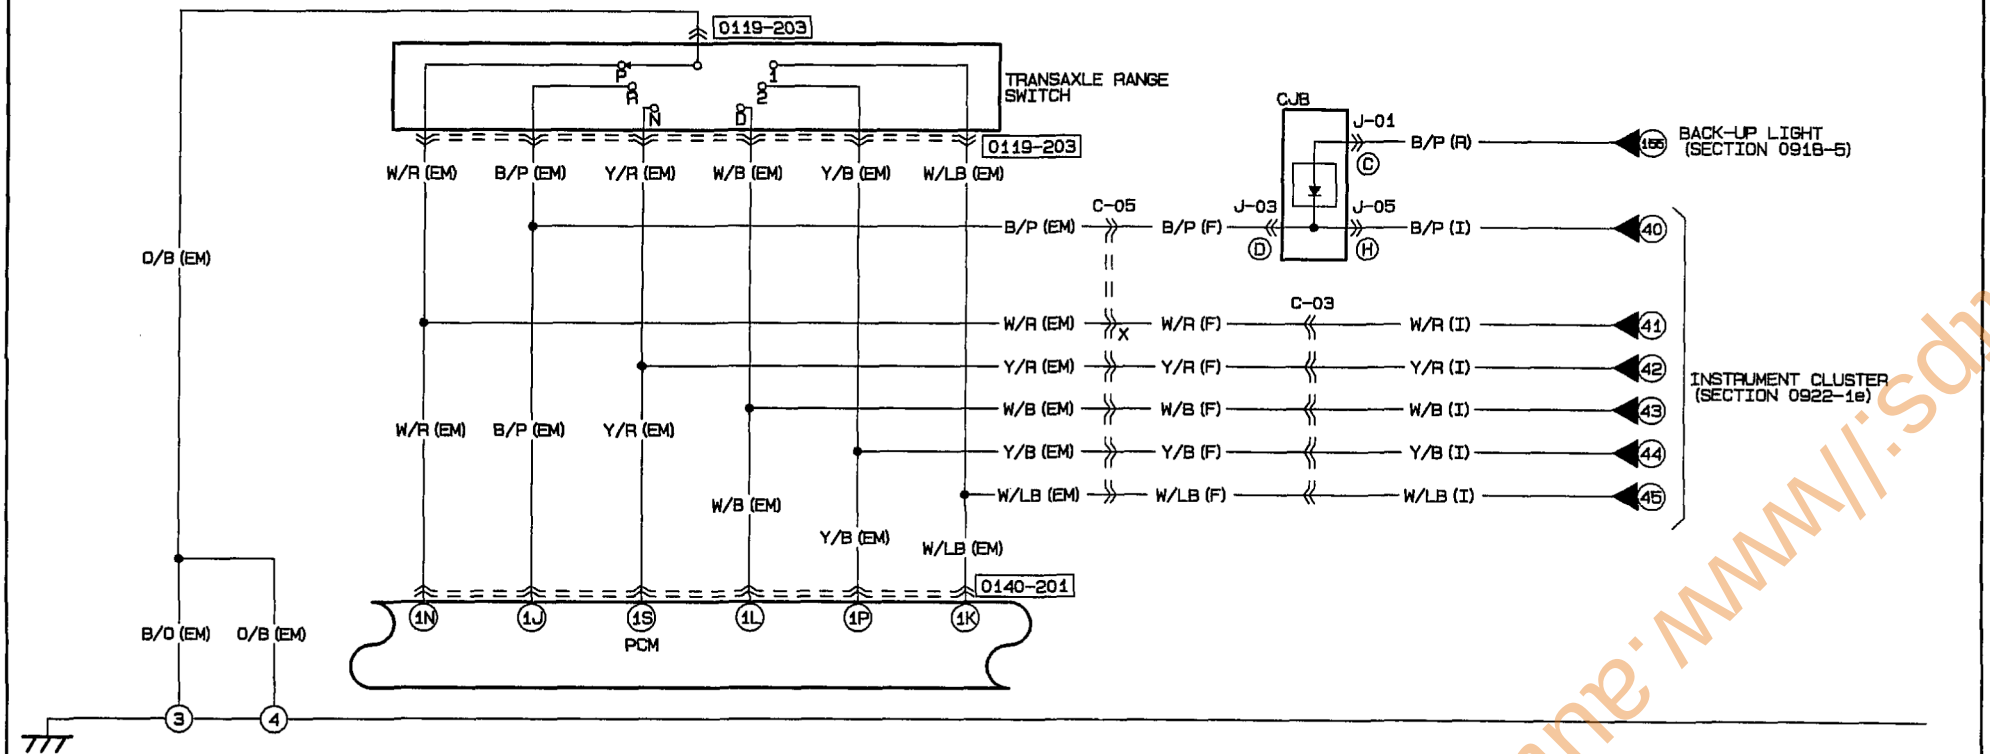


0140-201
PCM (EM)

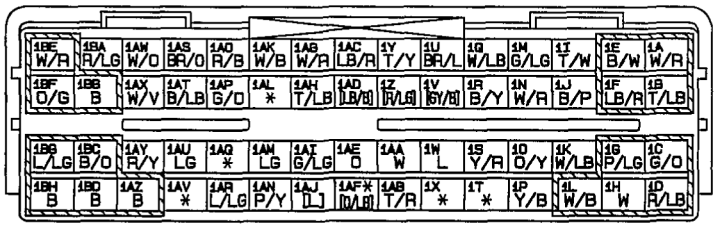


0119-203
TRANSAXLE RANGE SWITCH (EM)




https://www.auto-manual.com/

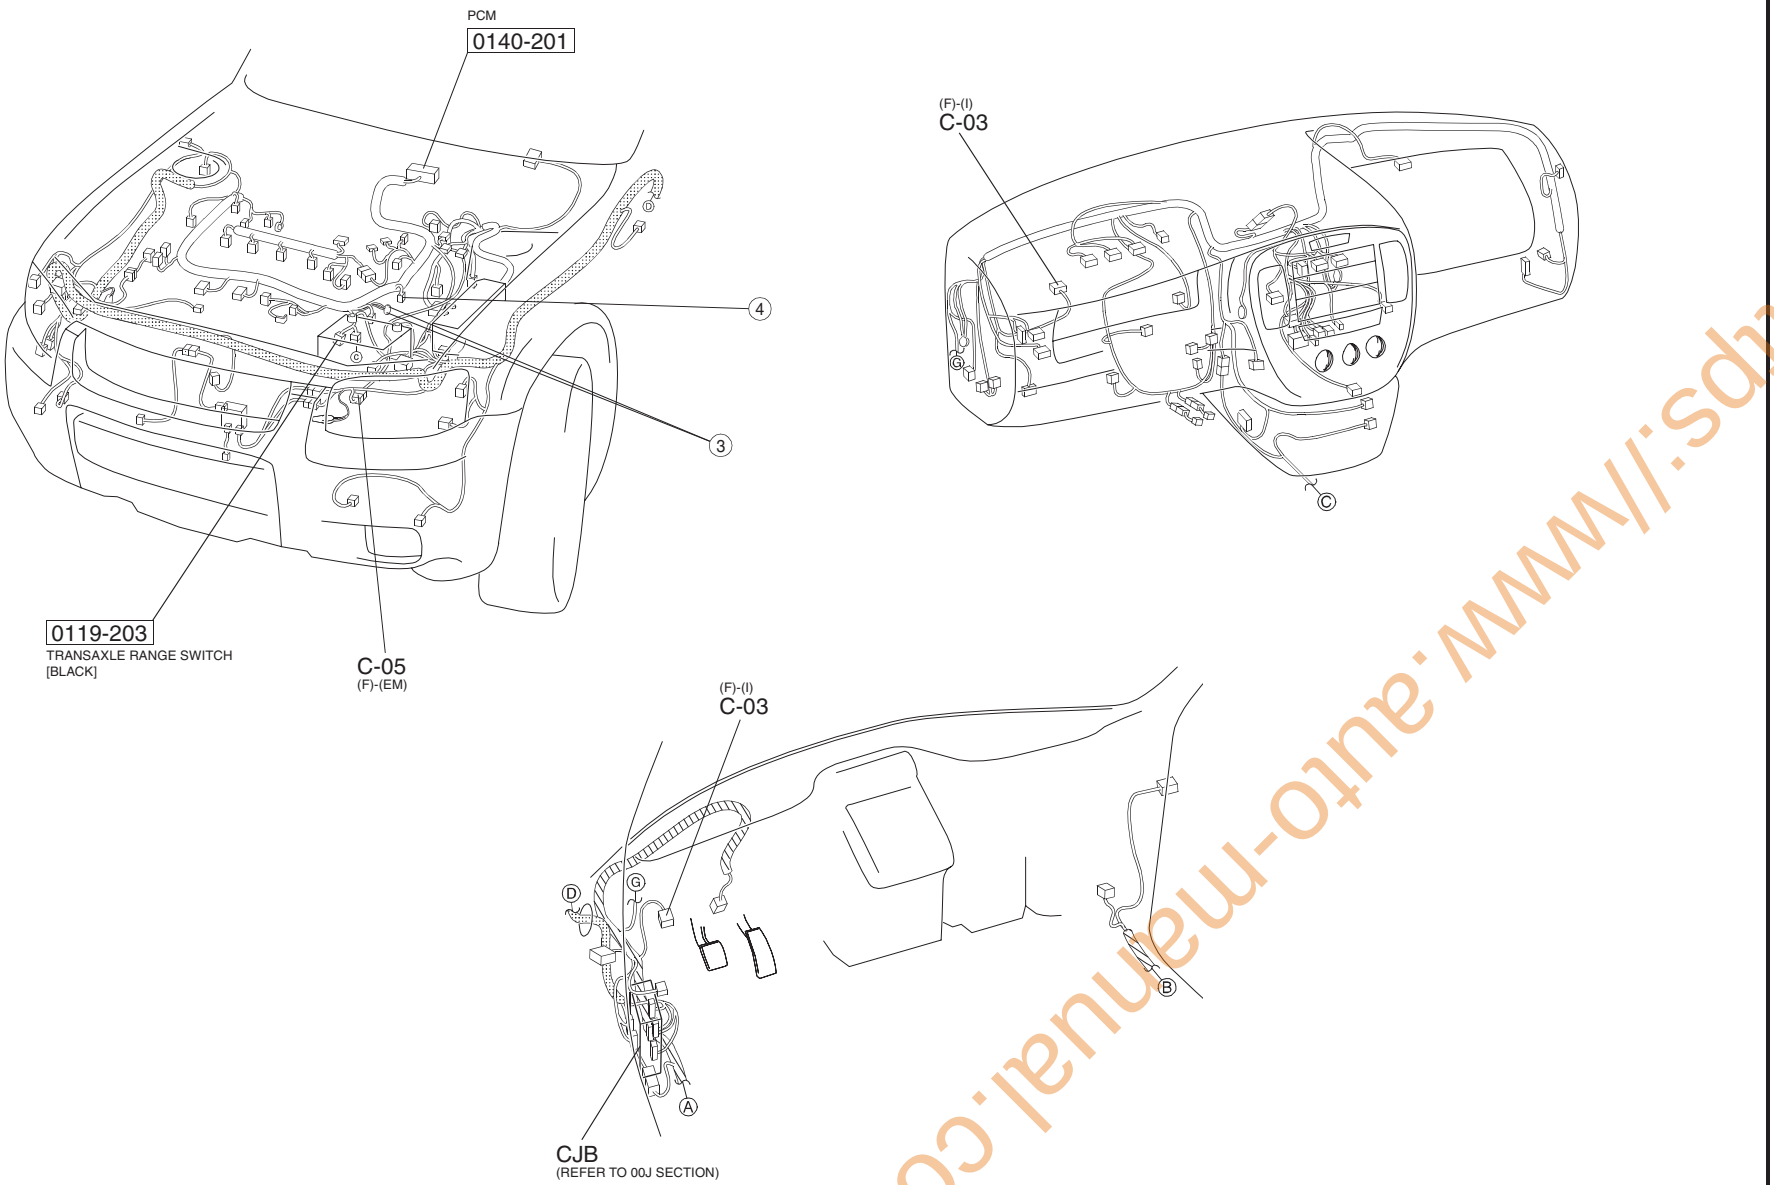


https://www.auto-manual.com/

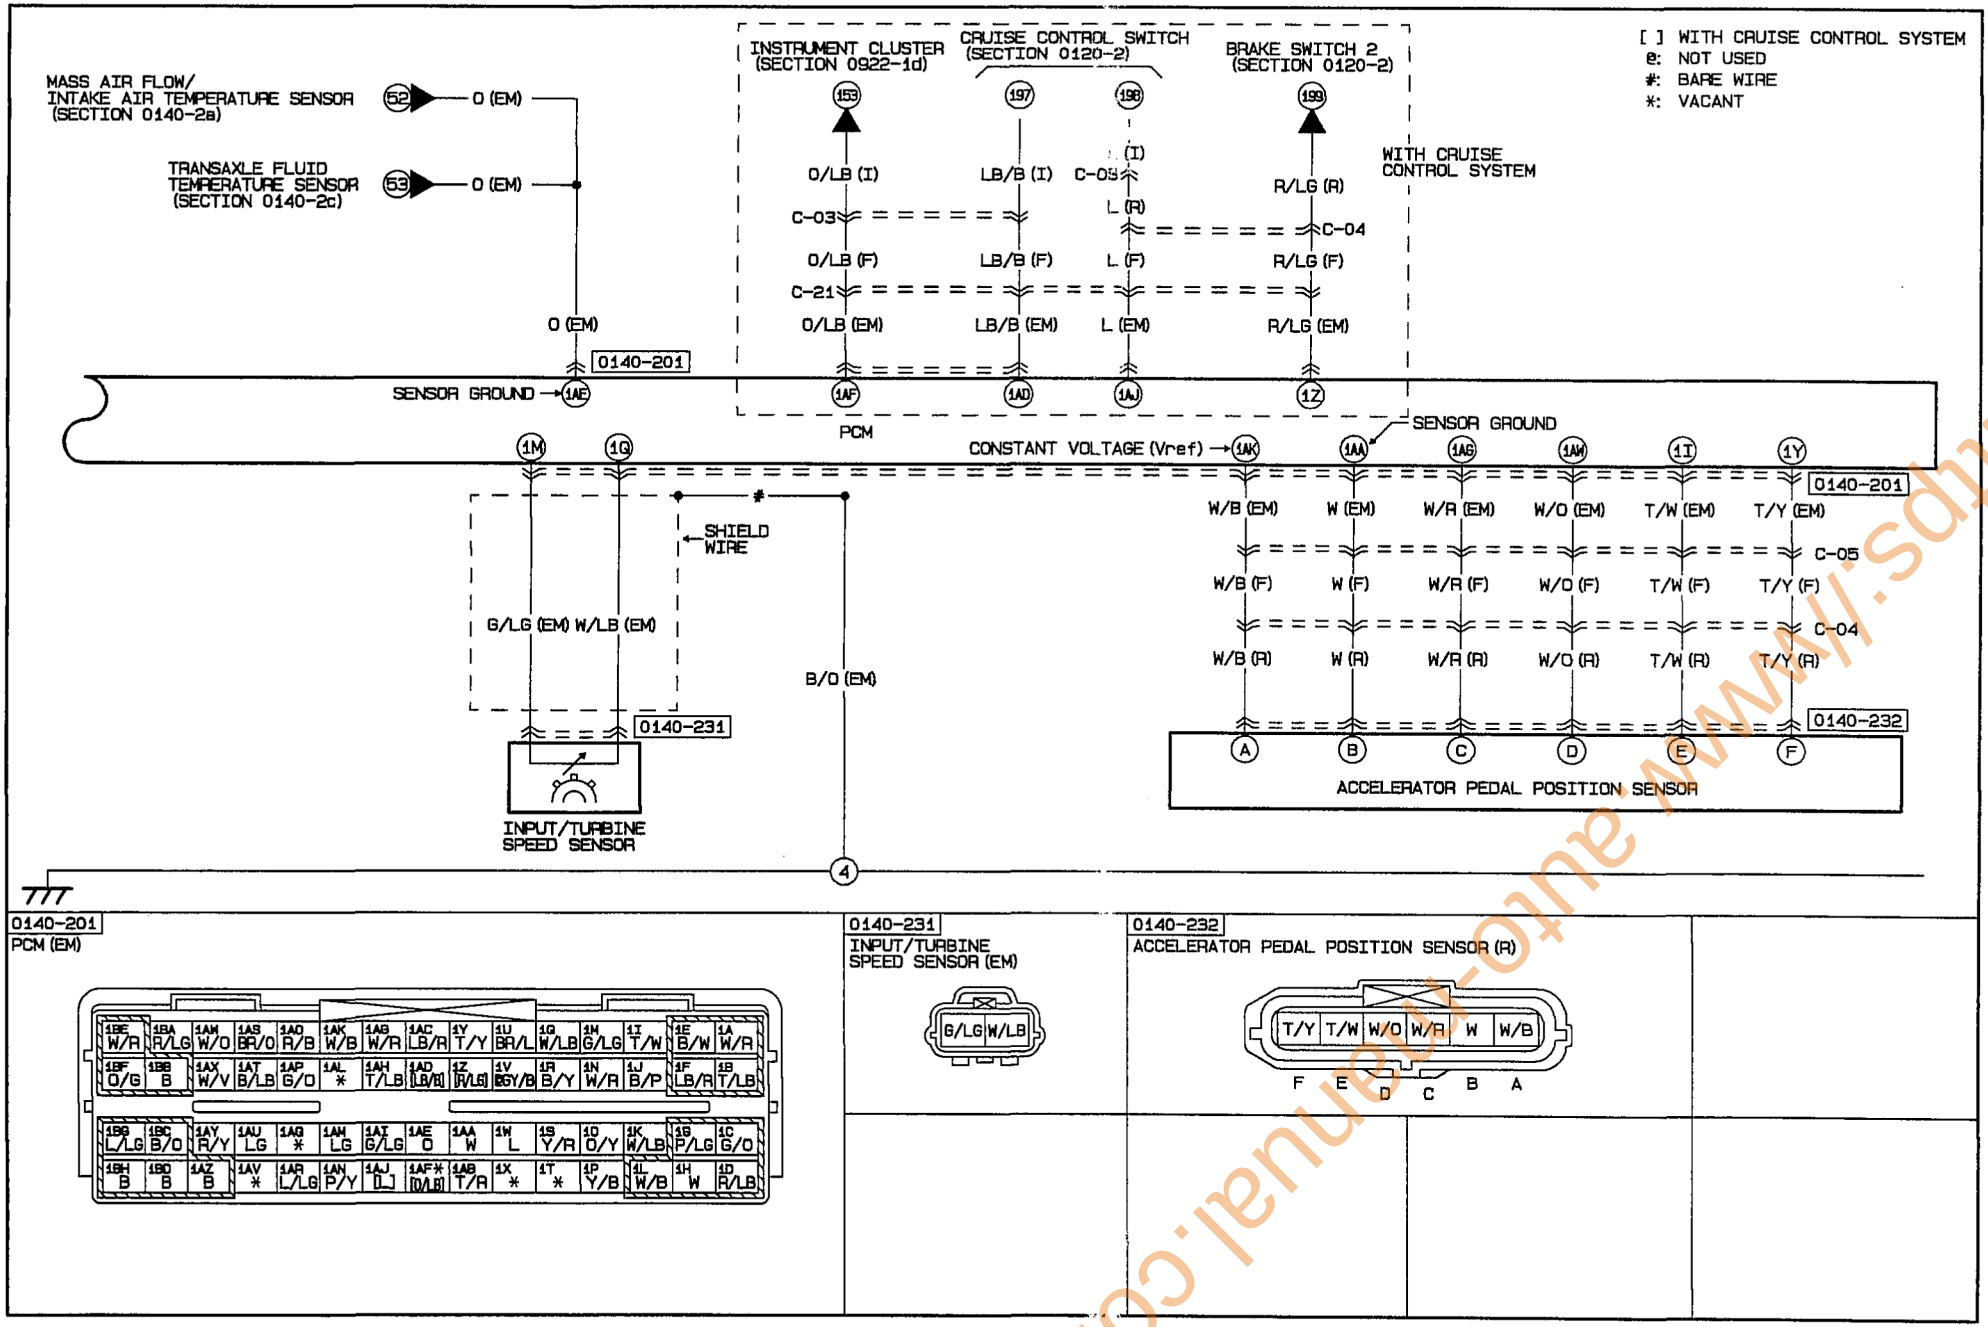


www.auto-manual.com/

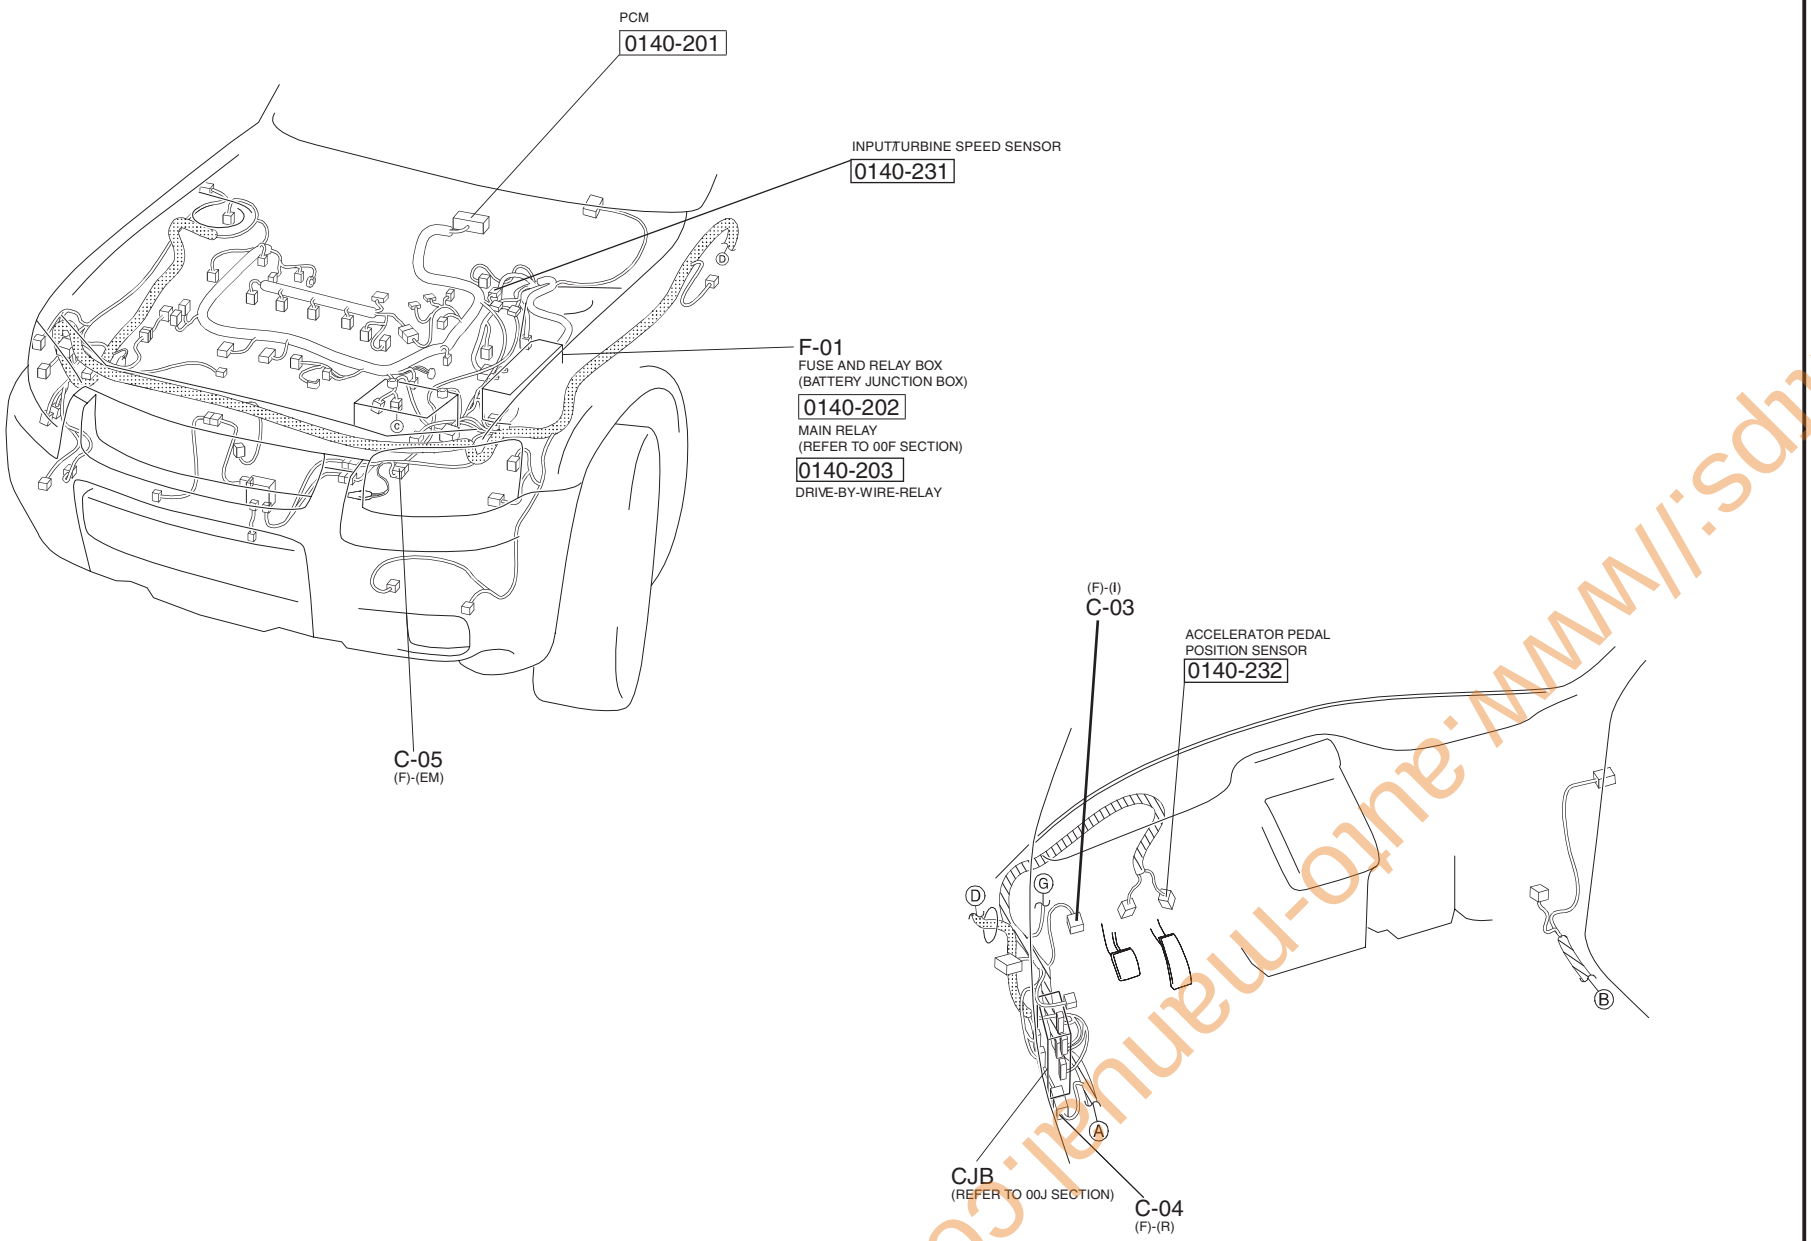



https://www.auto-manual.com/

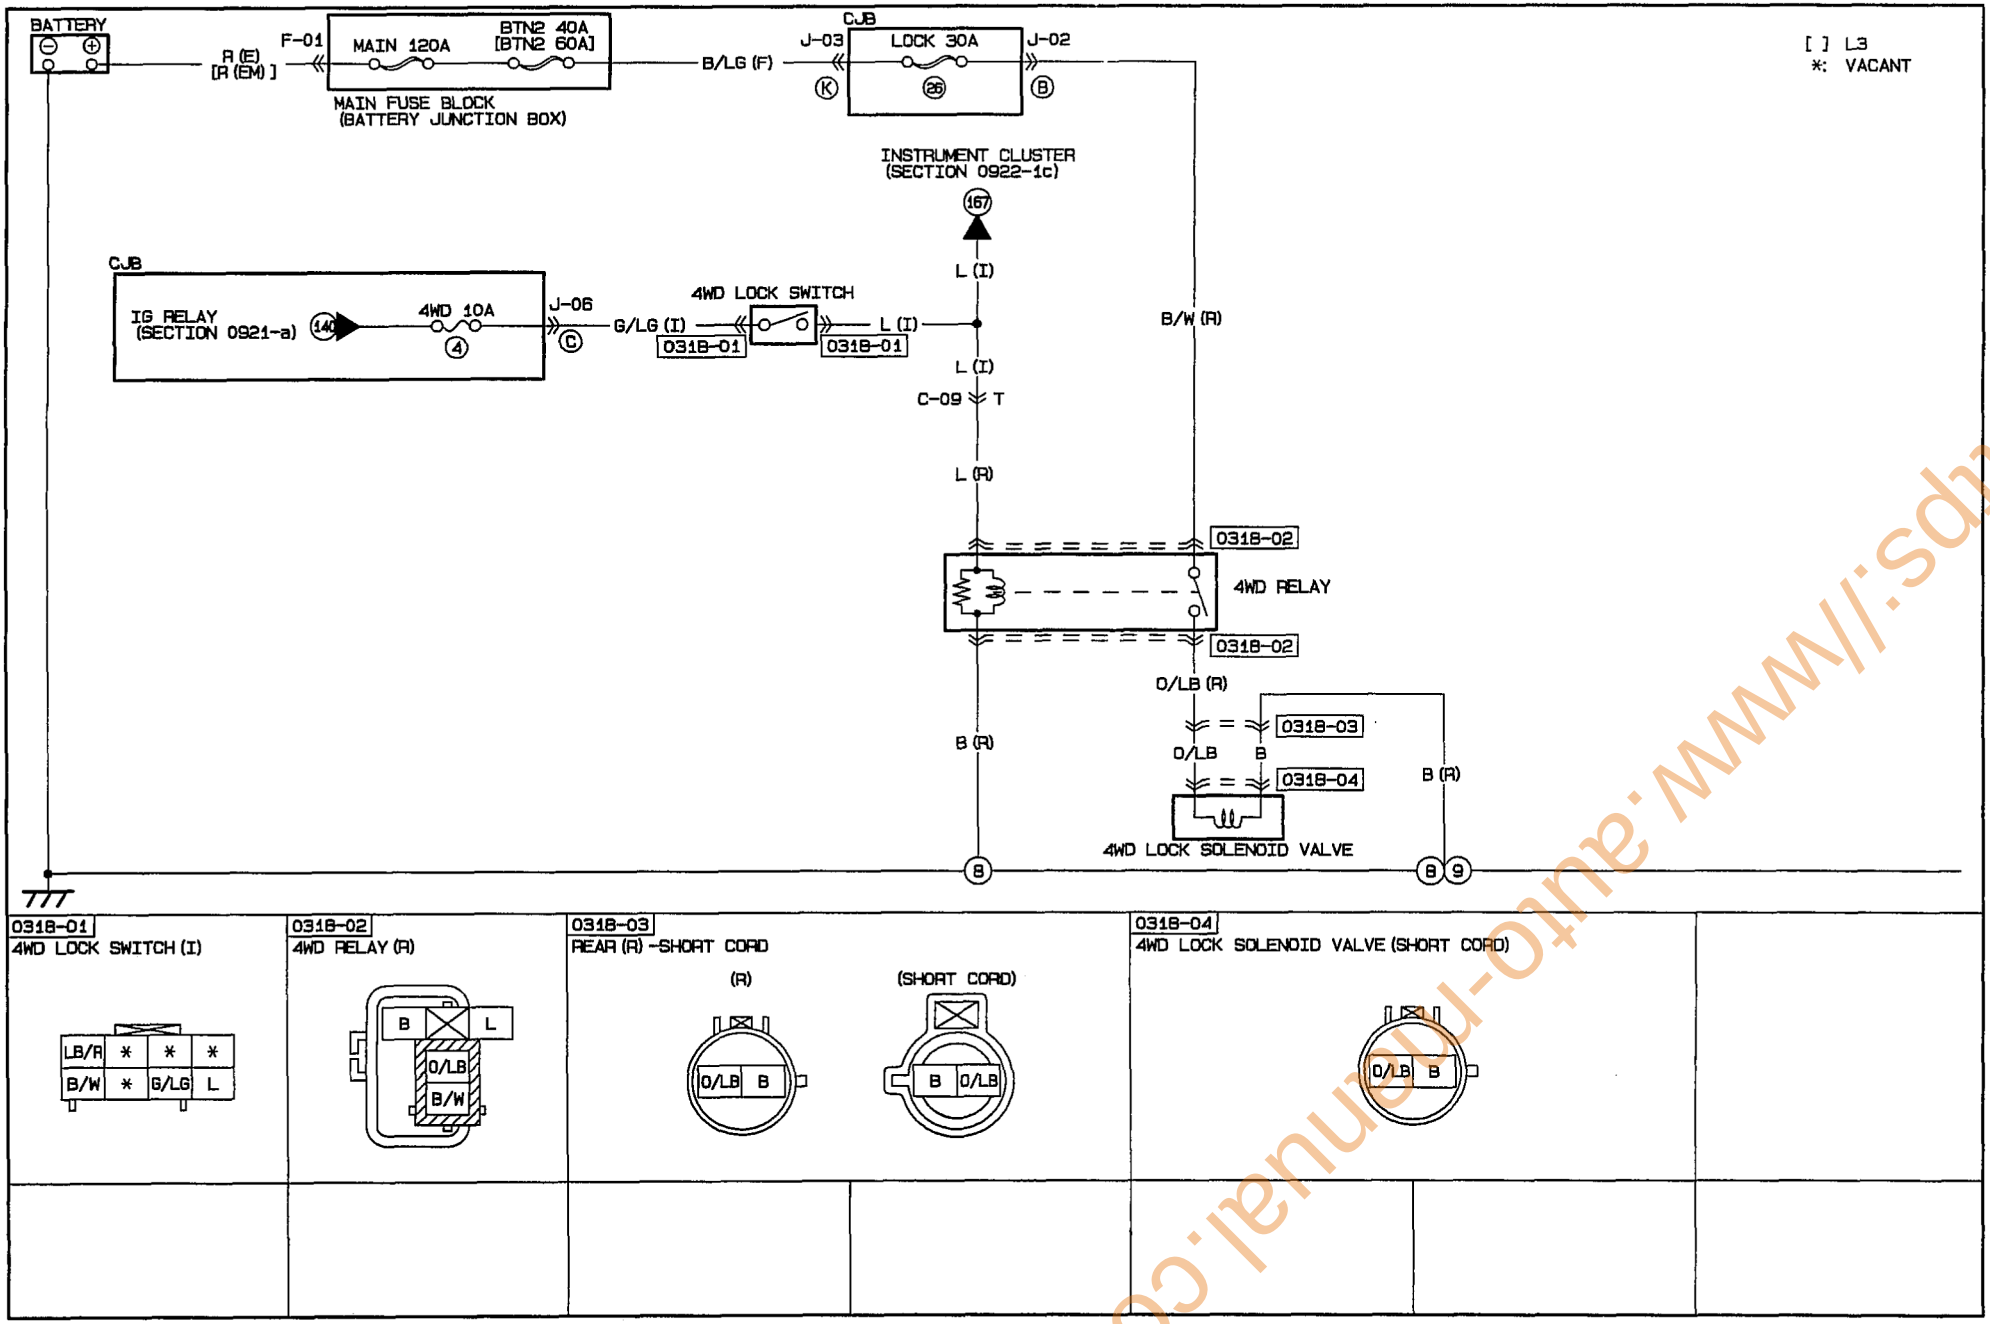


https://www.auto-manual.com/

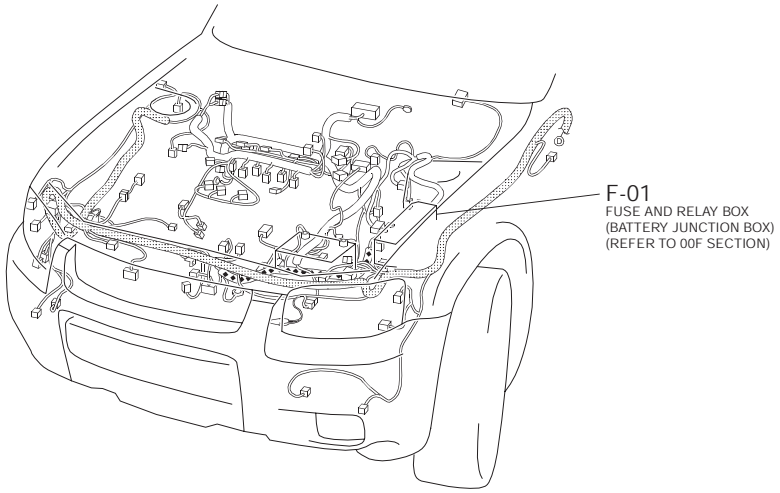


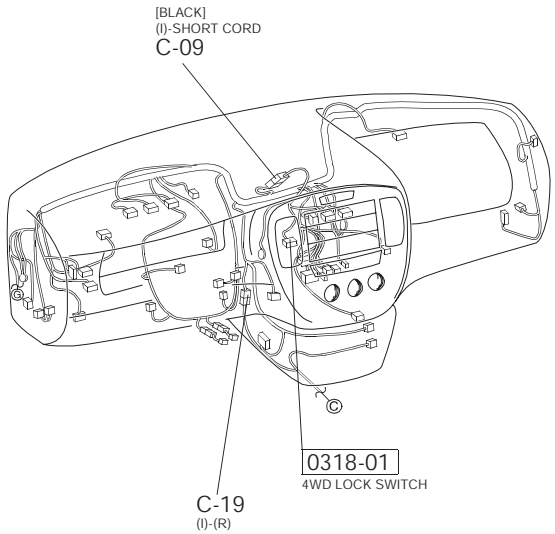

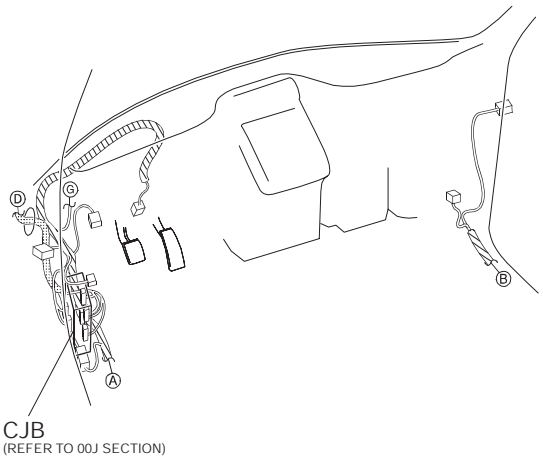

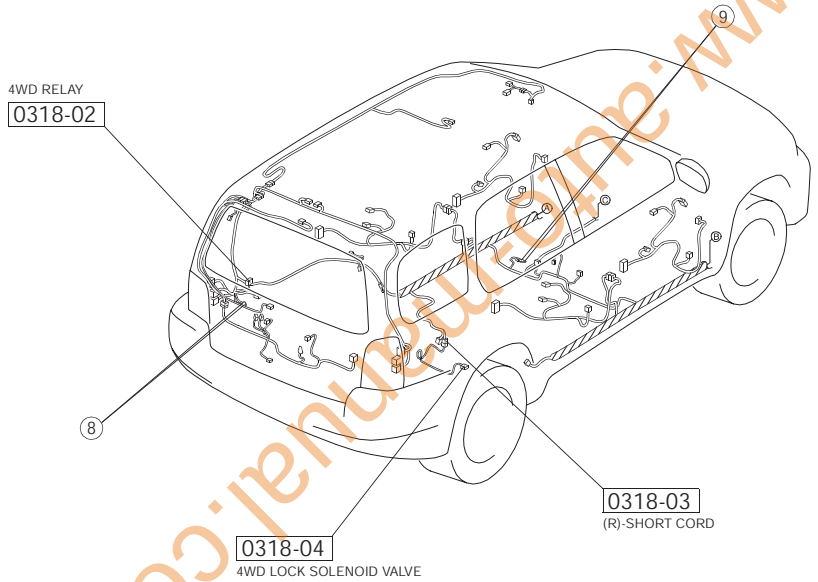

https://www.autoepcmanual.com/

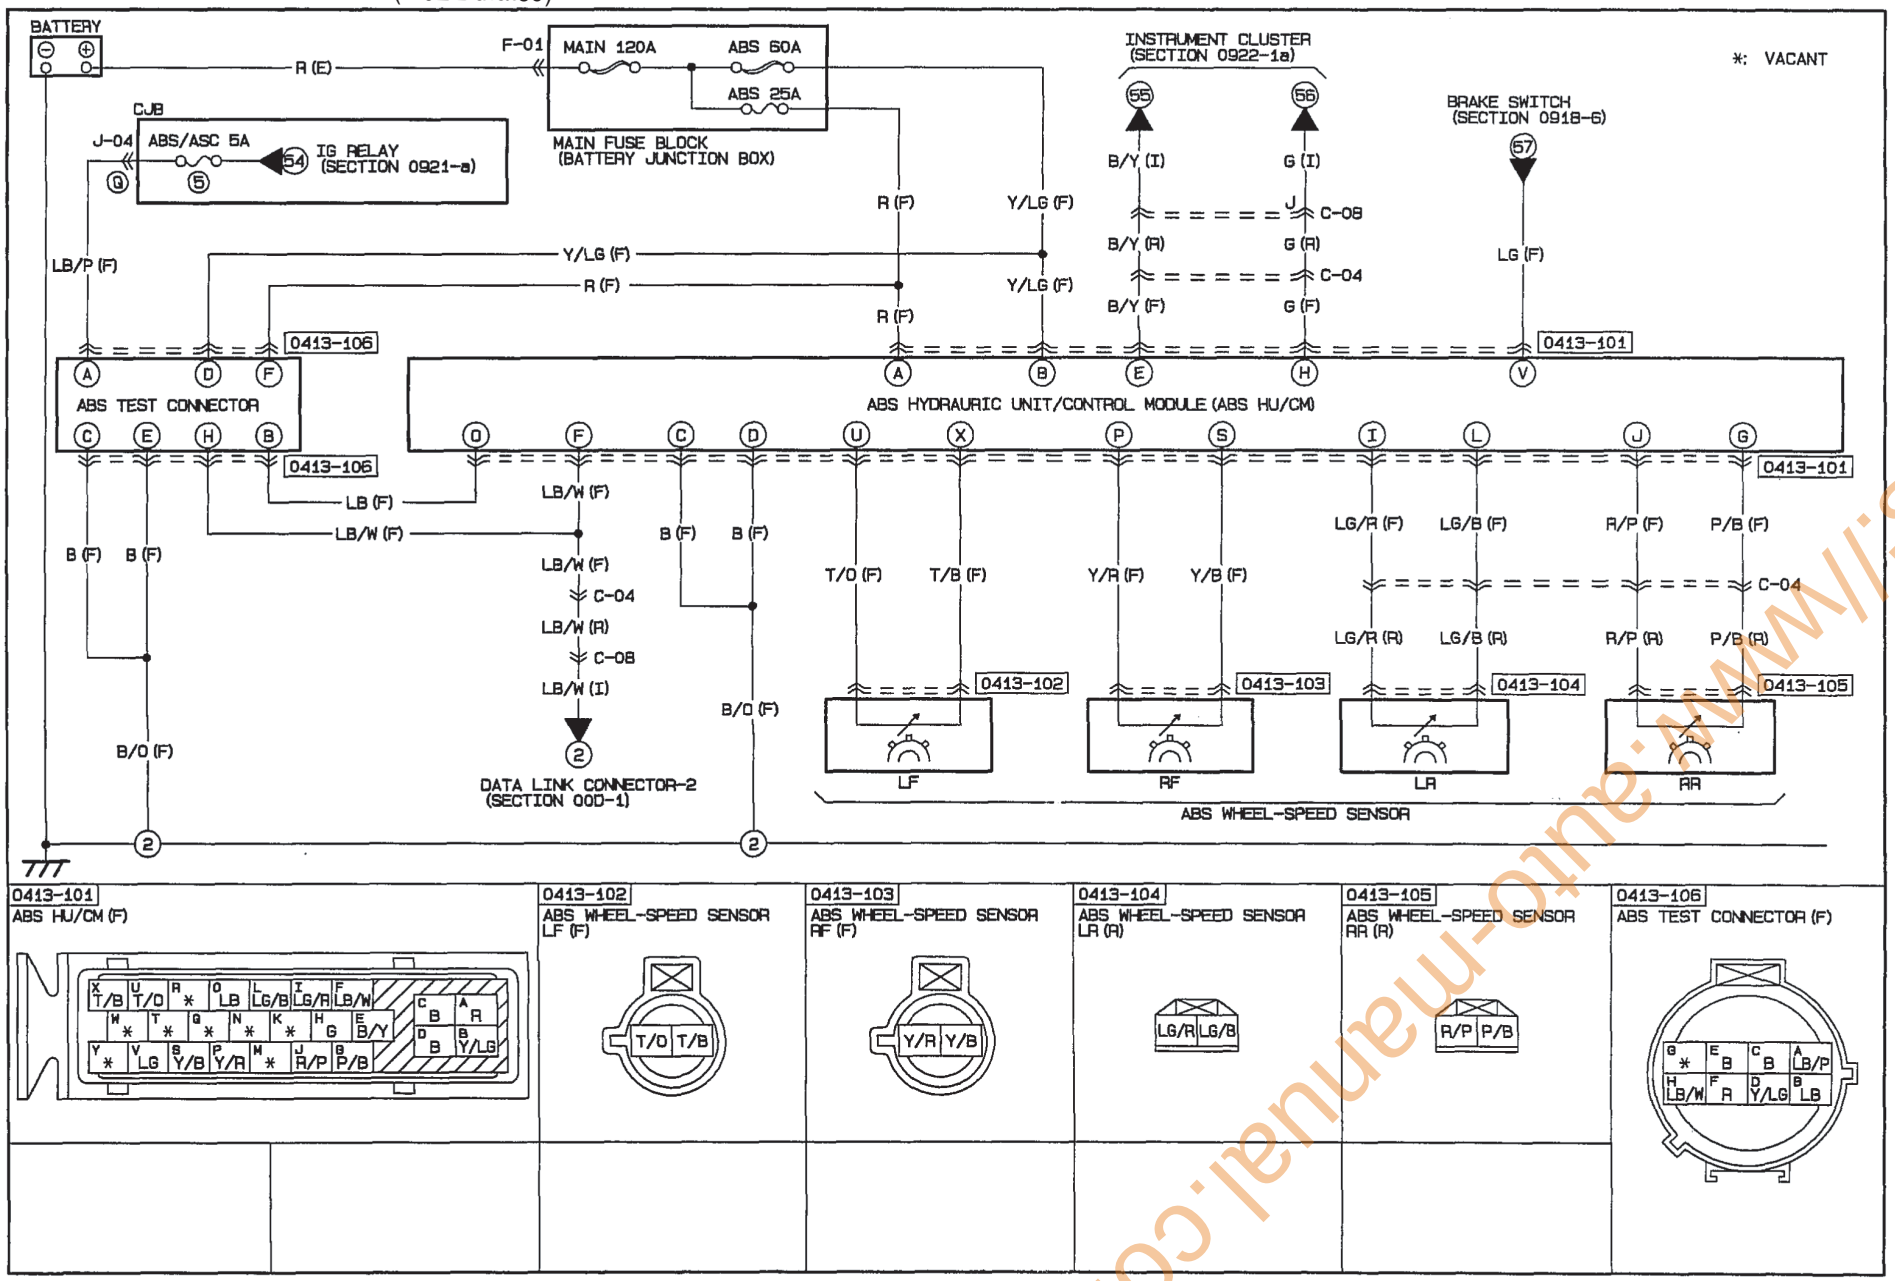

0413-101 ABS HU/CM (F)

0413-102 ABS WHEEL-SPEED SENSOR LF (F)


0413-103 ABS WHEEL-SPEED SENSOR RF (F)


0413-104 ABS WHEEL-SPEED SENSOR LR (R)


0413-105 ABS WHEEL-SPEED SENSOR RR (R)


0413-106 ABS TEST CONNECTOR (F)

https://www.auto-manual.com/

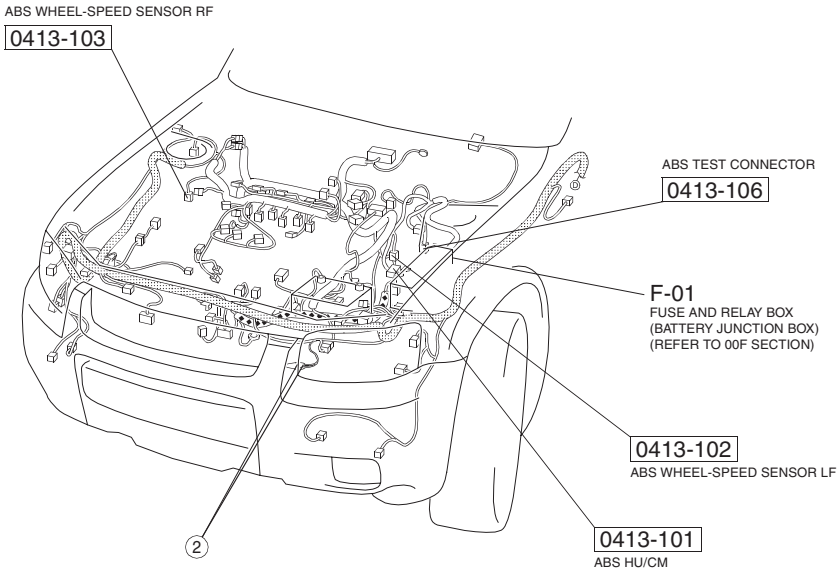


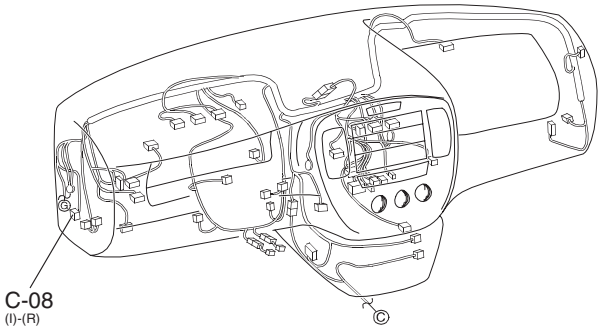

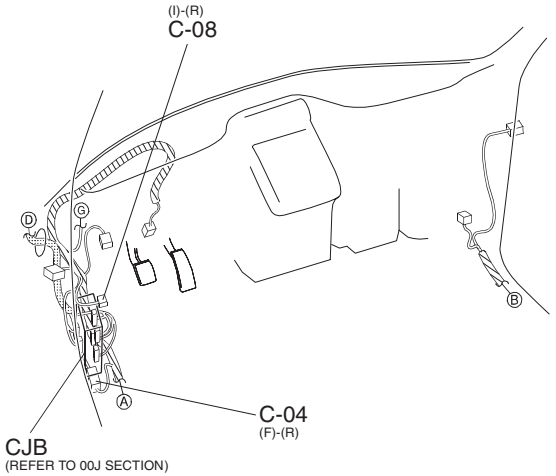


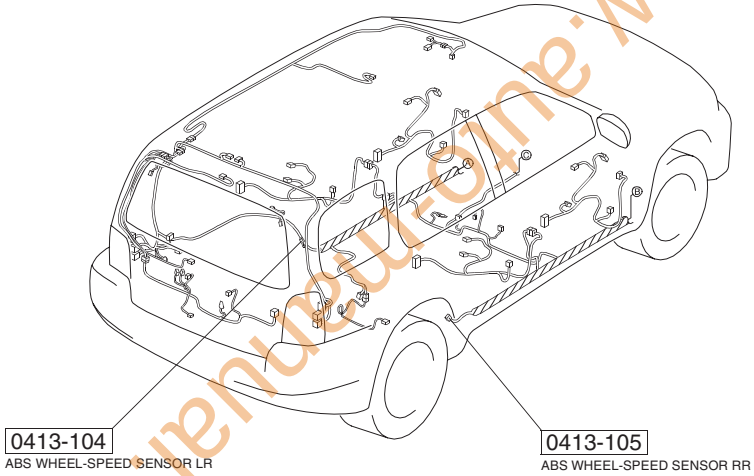



https://www.auto-manual.com/

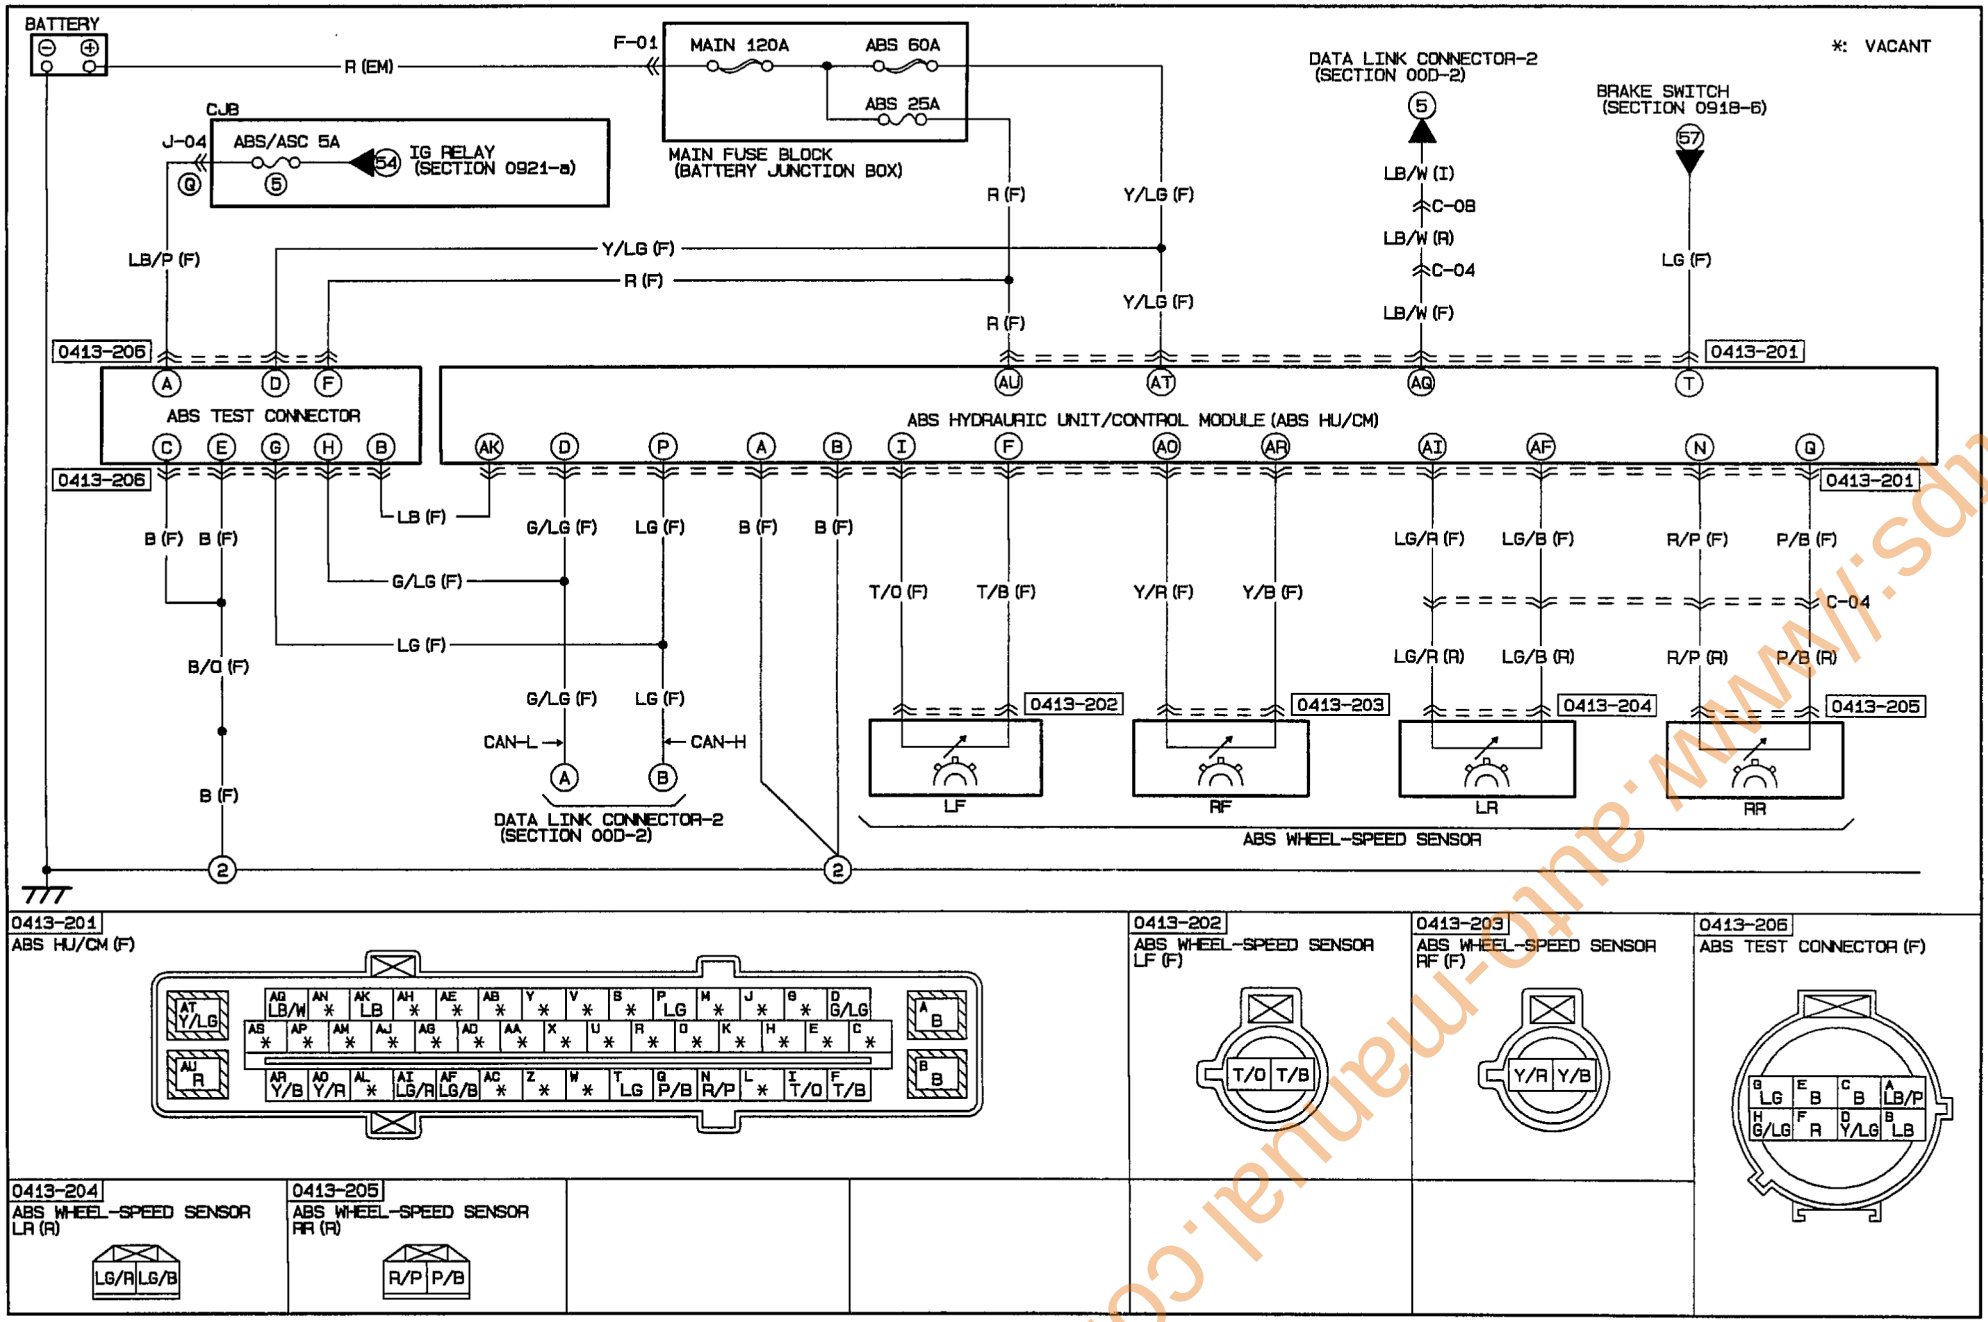


https://www.auto-manual.com/

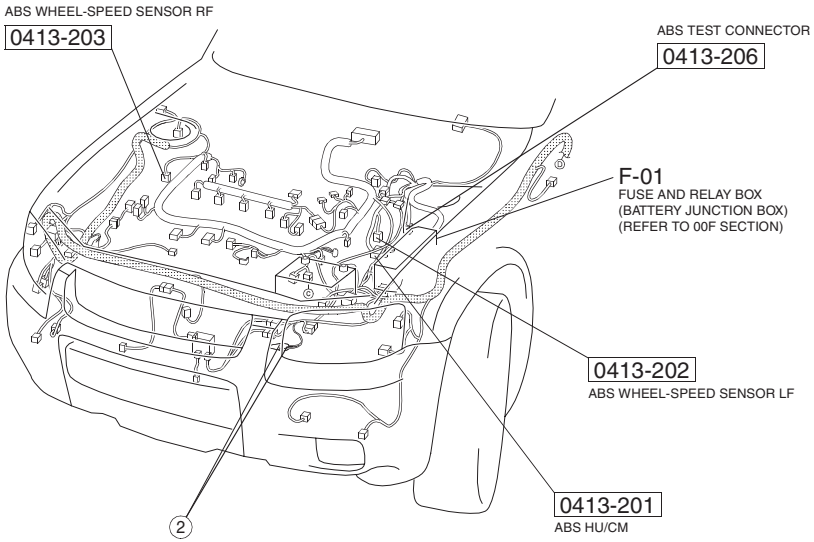


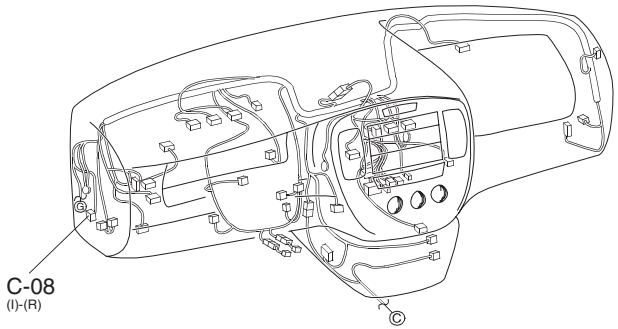

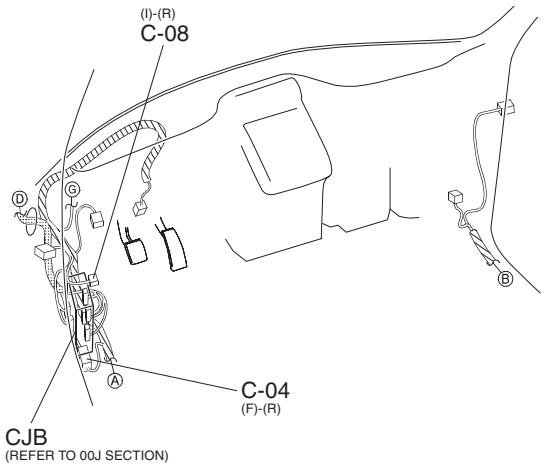


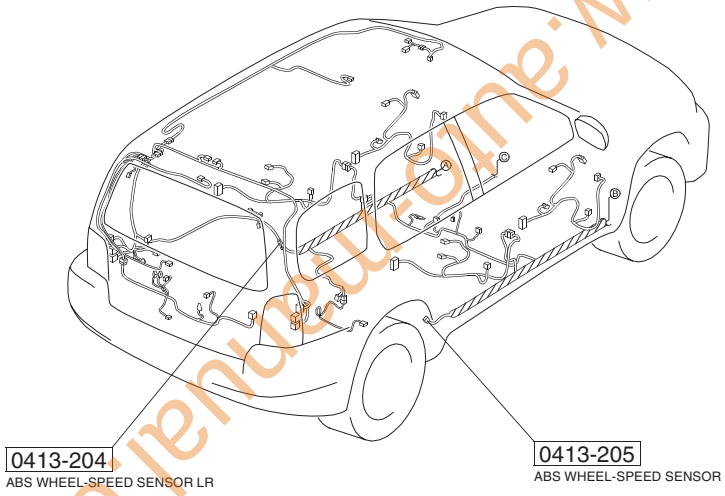


https://www.auto-manual.com/

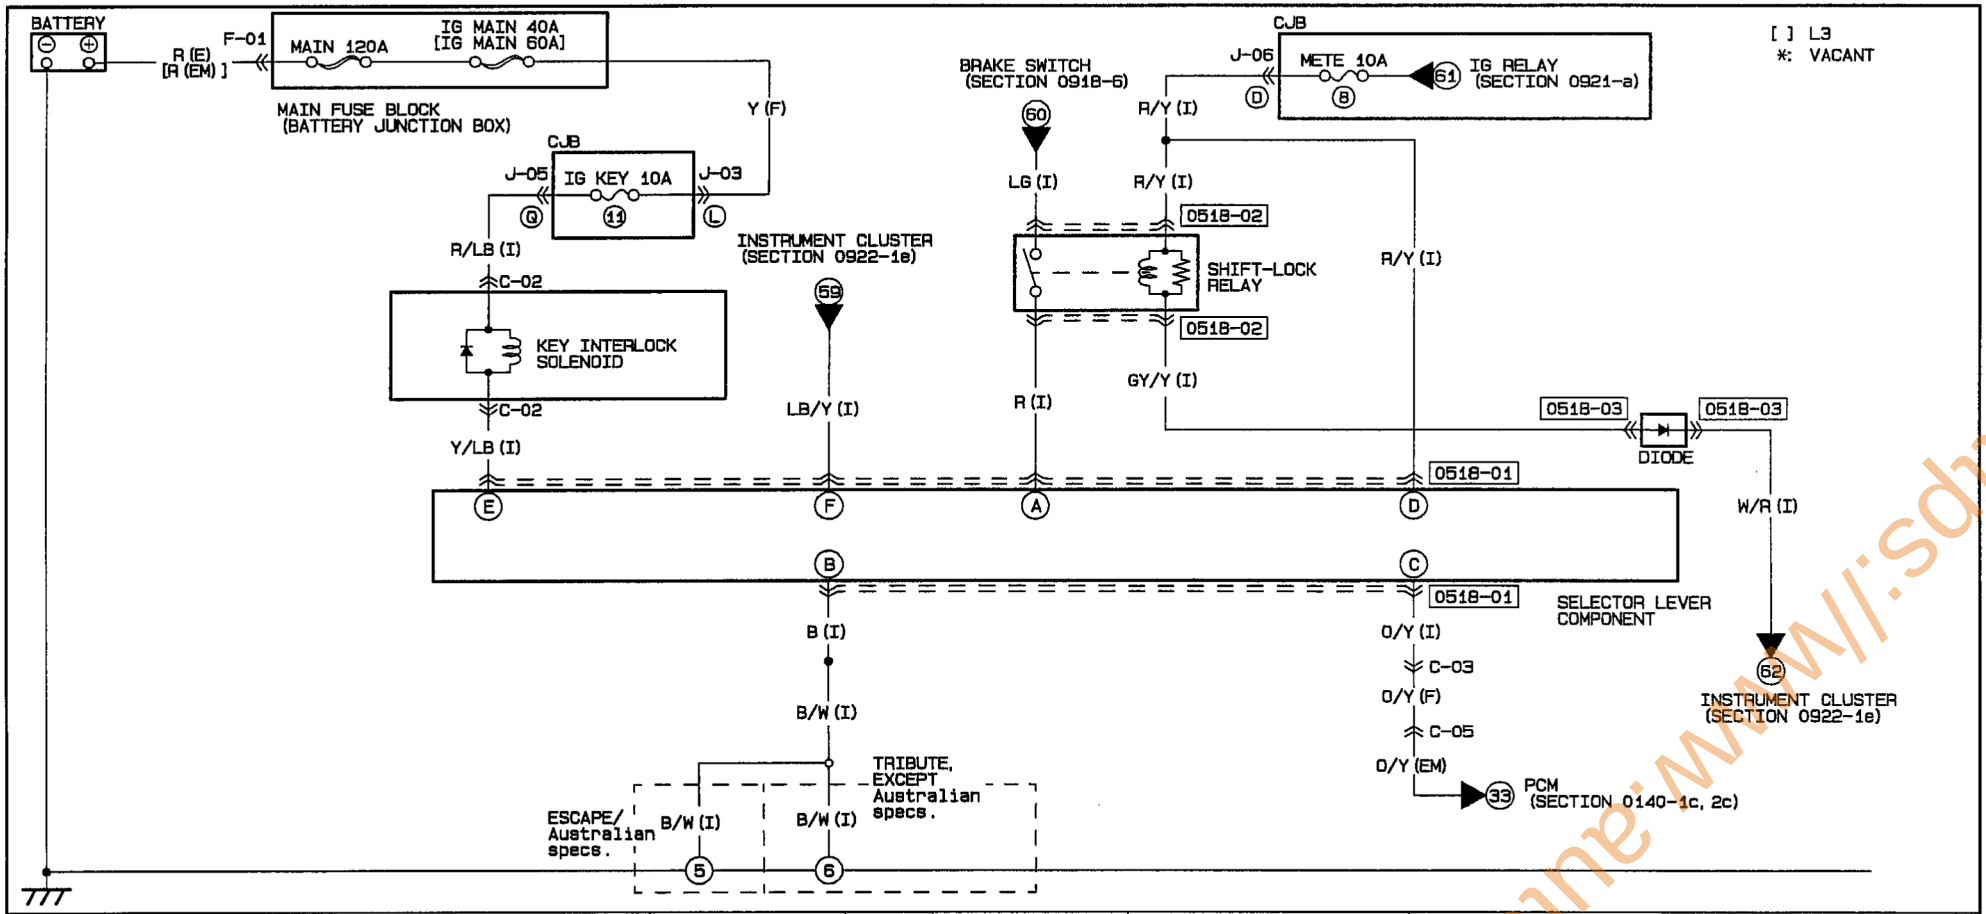


0518-01
SELECTOR LEVER COMPONENT (I)
[NOT-P POSITION SWITCH/O/D OFF SWITCH/
P POSITION SWITCH/SHIFT-LOCK SOLENOID]

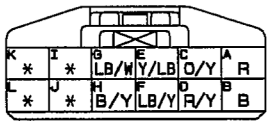


0518-02
SHIFT-LOCK RELAY (I)

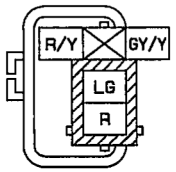


0518-03
DIODE (I)



https://www.auto-manual.com/

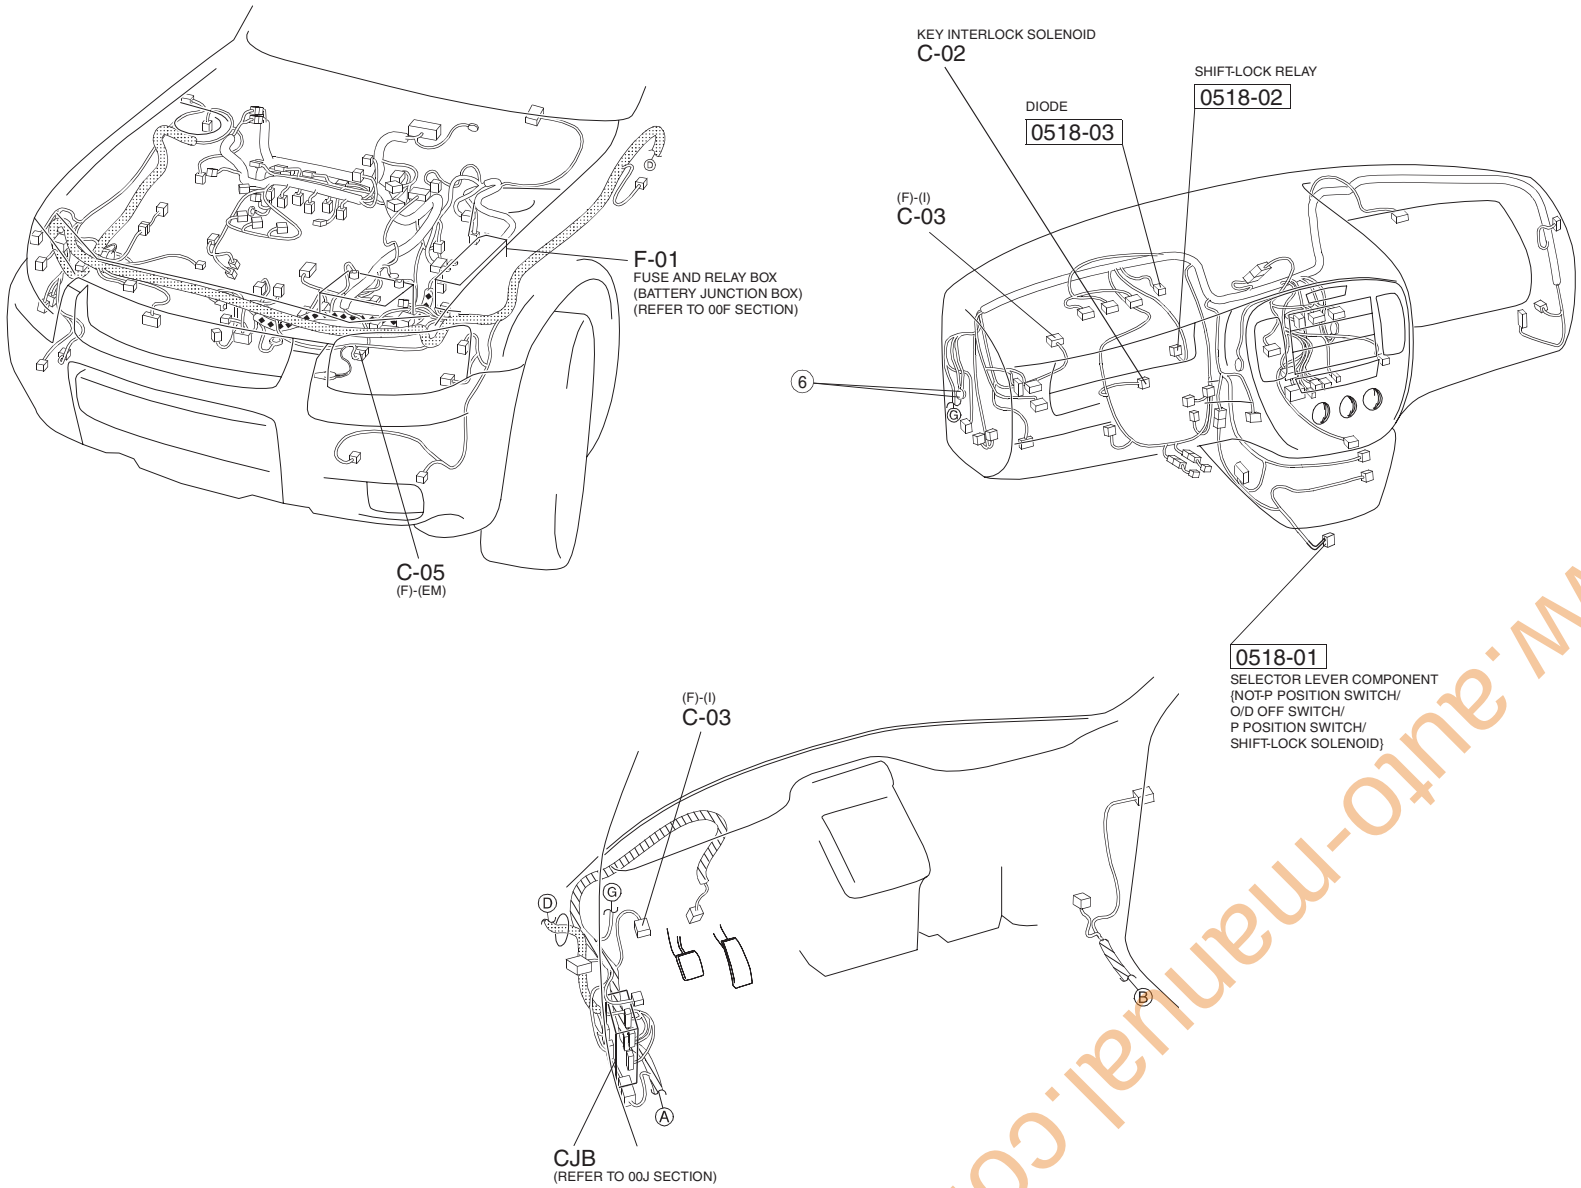

https://www.auto-manual.com/

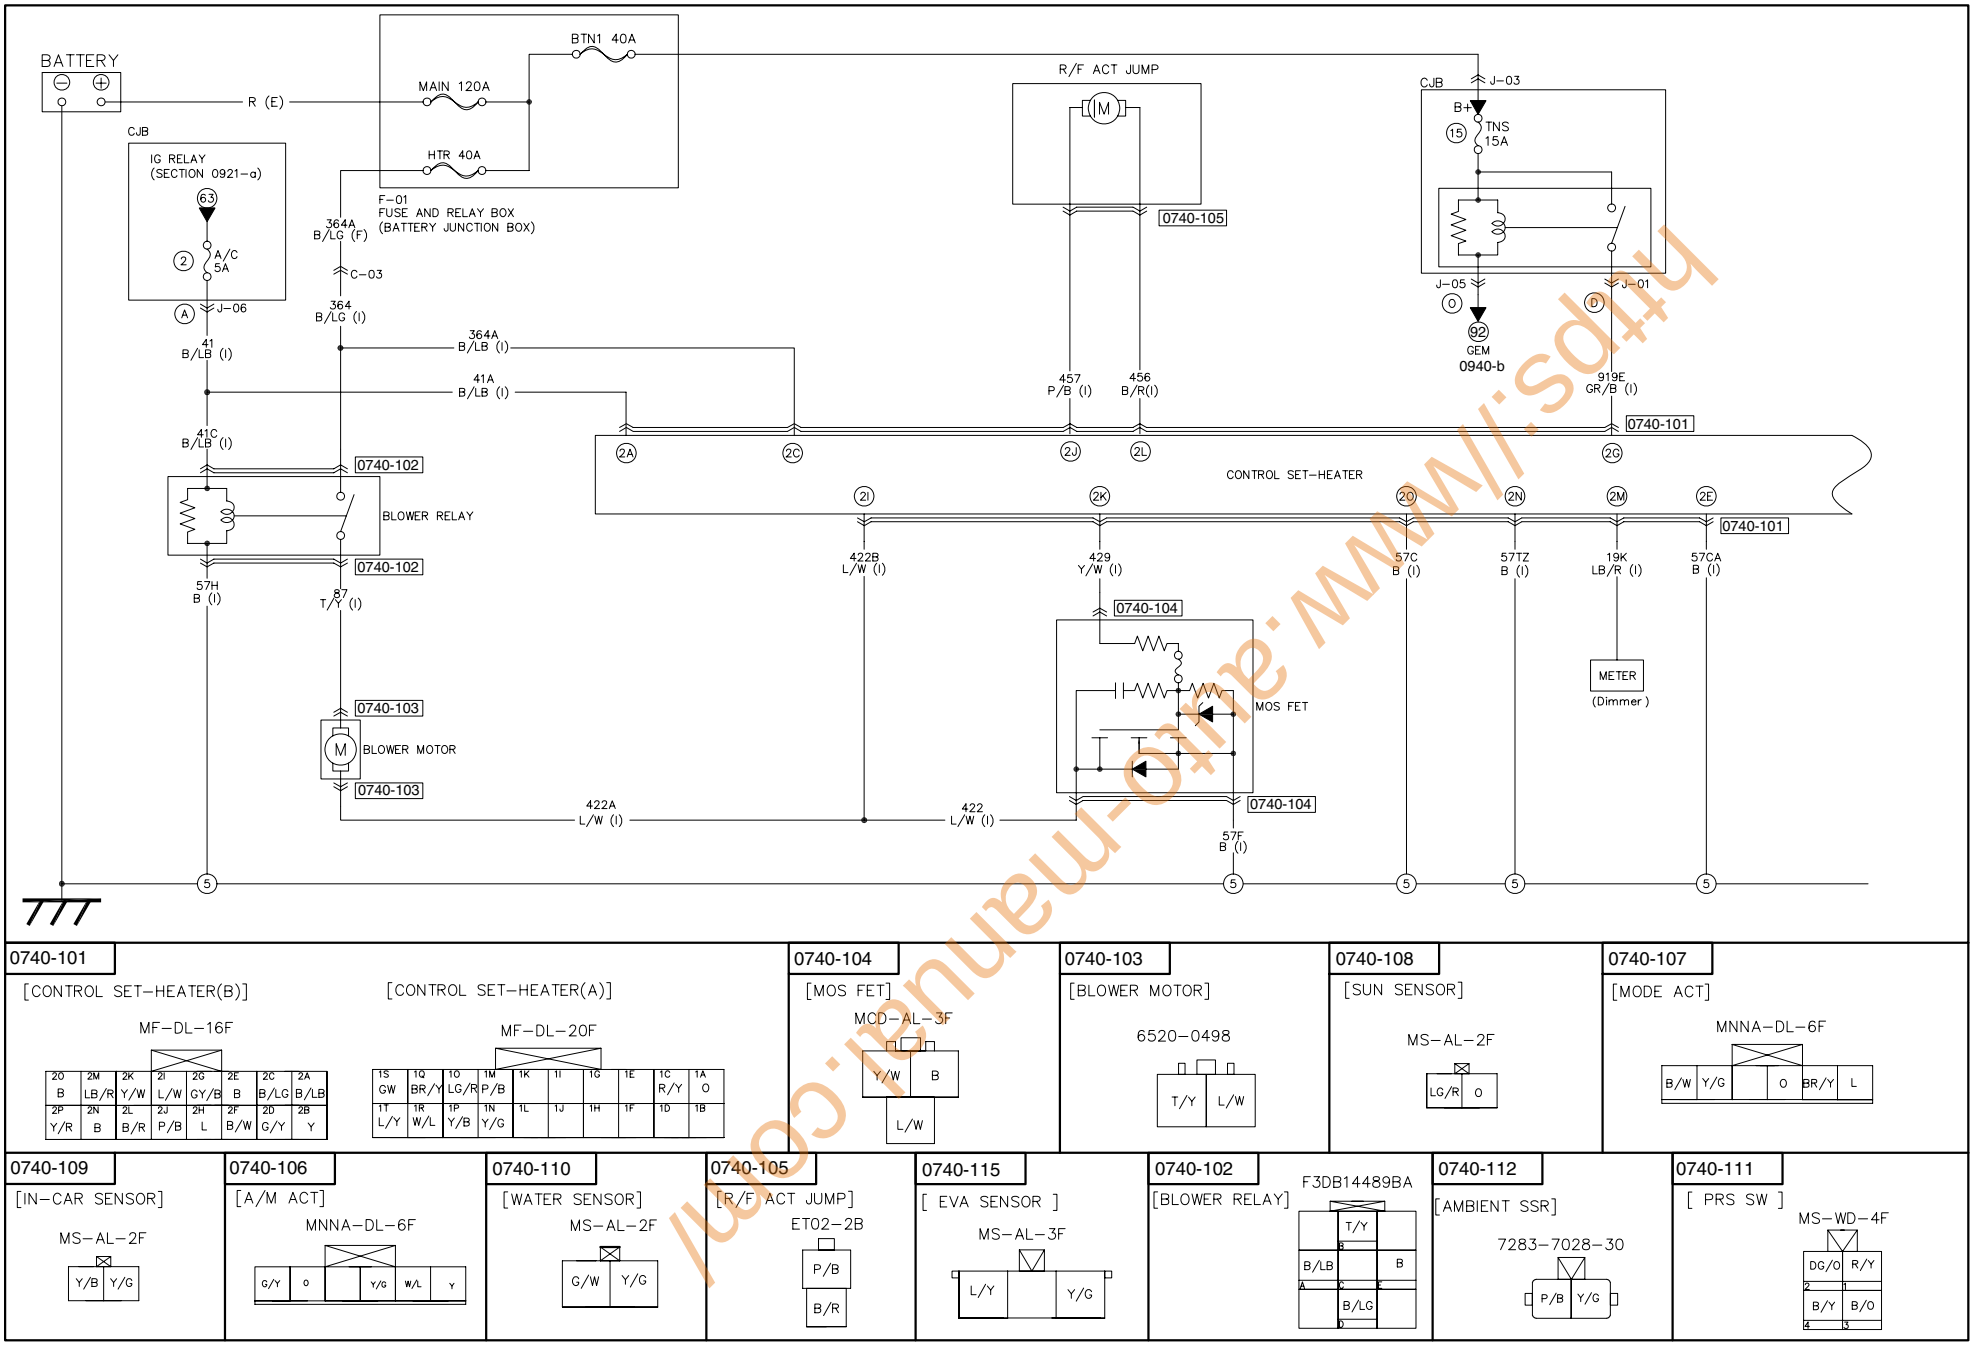

0740-101 [CONTROL SET-HEATER(B)]

MF-DL-16F

2O B	2M LB/R	2K Y/W	2I L/W	2G GY/B	2E B	2C B/LG	2A B/LB
2P Y/R	2N B	2L B/R	2J P/B	2H L	2F B/W	2D G/Y	2B Y

0740-101 [CONTROL SET-HEATER(A)]

MF-DL-20F

1S GW	1Q BR/Y	1O LG/R	1M P/B	1K	1I	1G	1E	1C R/Y	1A O
1T L/Y	1R W/L	1P Y/B	1N Y/G	1L	1J	1H	1F	1D	1B

0740-104 [MOS FET]

MCD-AL-3F

0740-103 [BLOWER MOTOR]

6520-0498

0740-108 [SUN SENSOR]

MS-AL-2F

0740-107 [MODE ACT]

MNNA-DL-6F

B/W	Y/G		O	BR/Y	L

0740-109 [IN-CAR SENSOR]

MS-AL-2F

Y/B	Y/G

0740-106 [A/M ACT]

MNNA-DL-6F

G/Y	O		Y/G	W/L	Y

0740-110 [WATER SENSOR]

MS-AL-2F

G/W	Y/G

0740-105 [R/F ACT JUMP]

ET02-2B

P/B
B/R

0740-115 [EVA SENSOR]

MS-AL-3F

L/Y	Y/G

0740-102 [BLOWER RELAY]

F3DB14489BA


0740-112 [AMBIENT SSR]

7283-7028-30


0740-111 [PRS SW]

MS-WD-4F


www.auto-manual.com

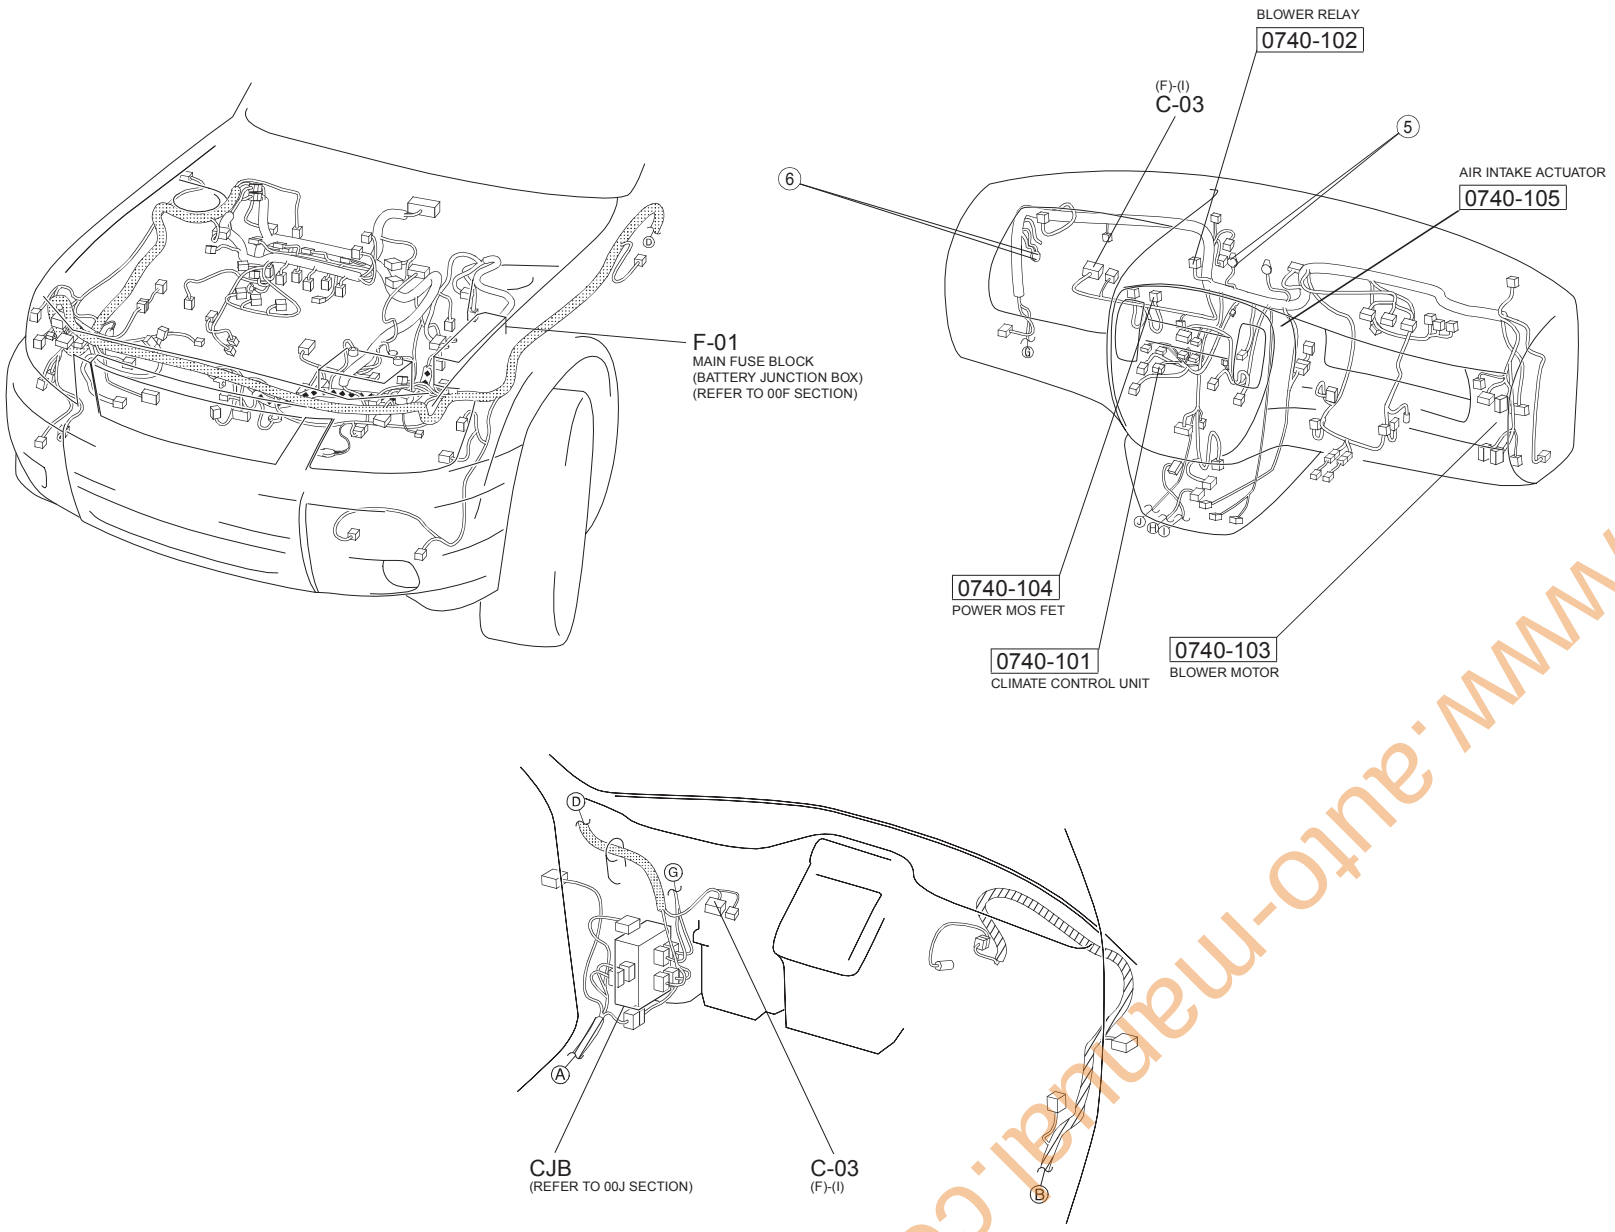


https://www.auto-manual.com/

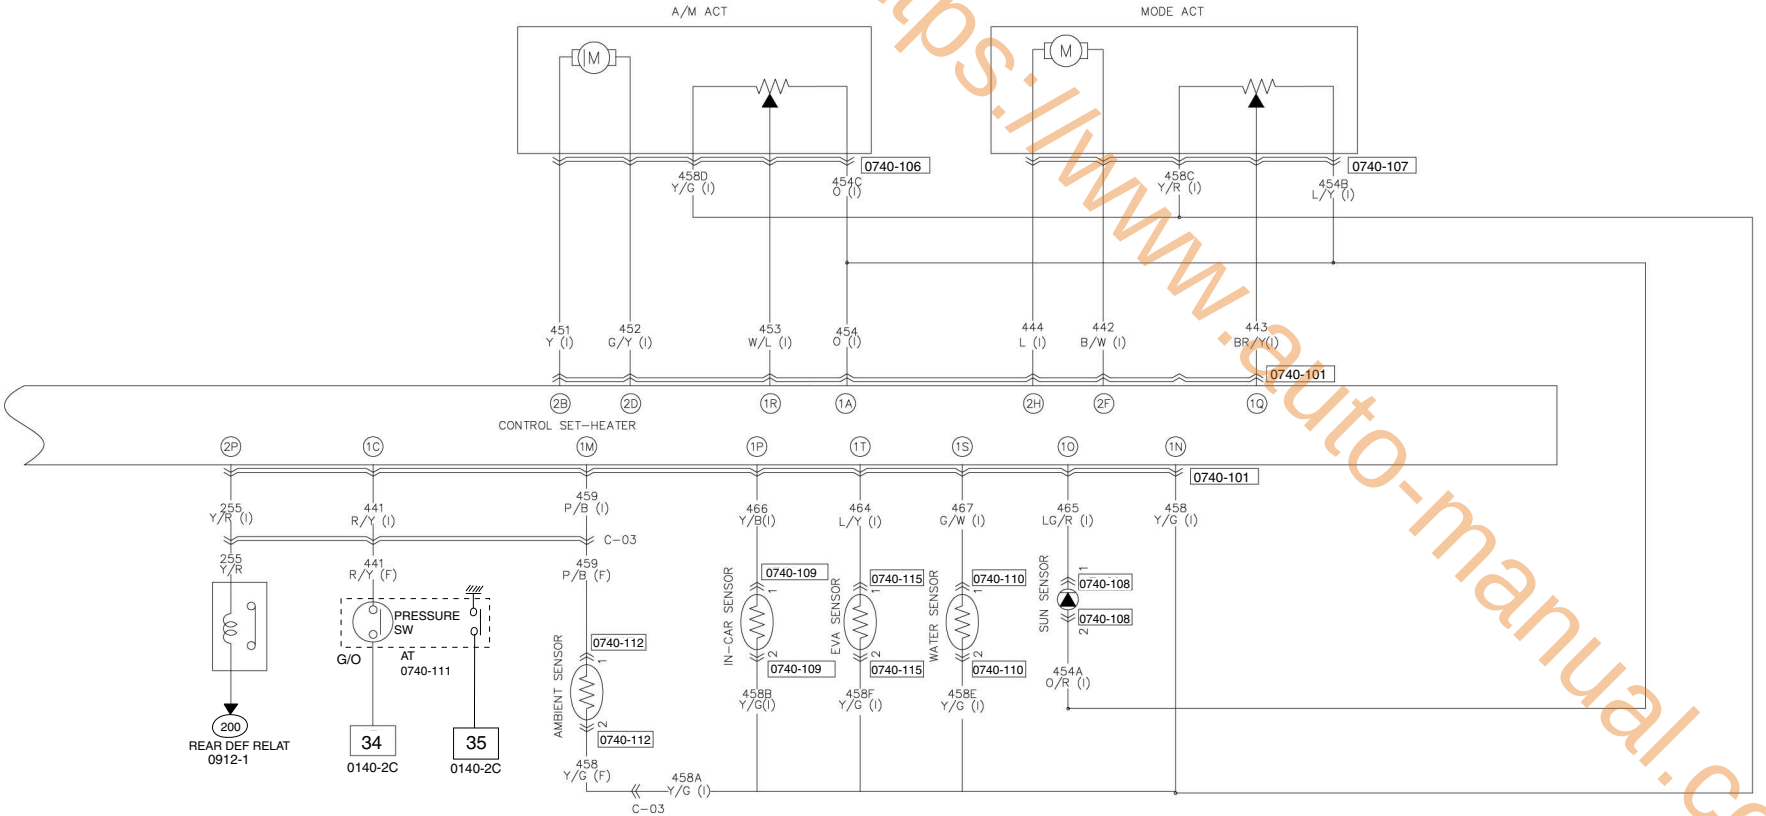

https://www.auto-manual.com/

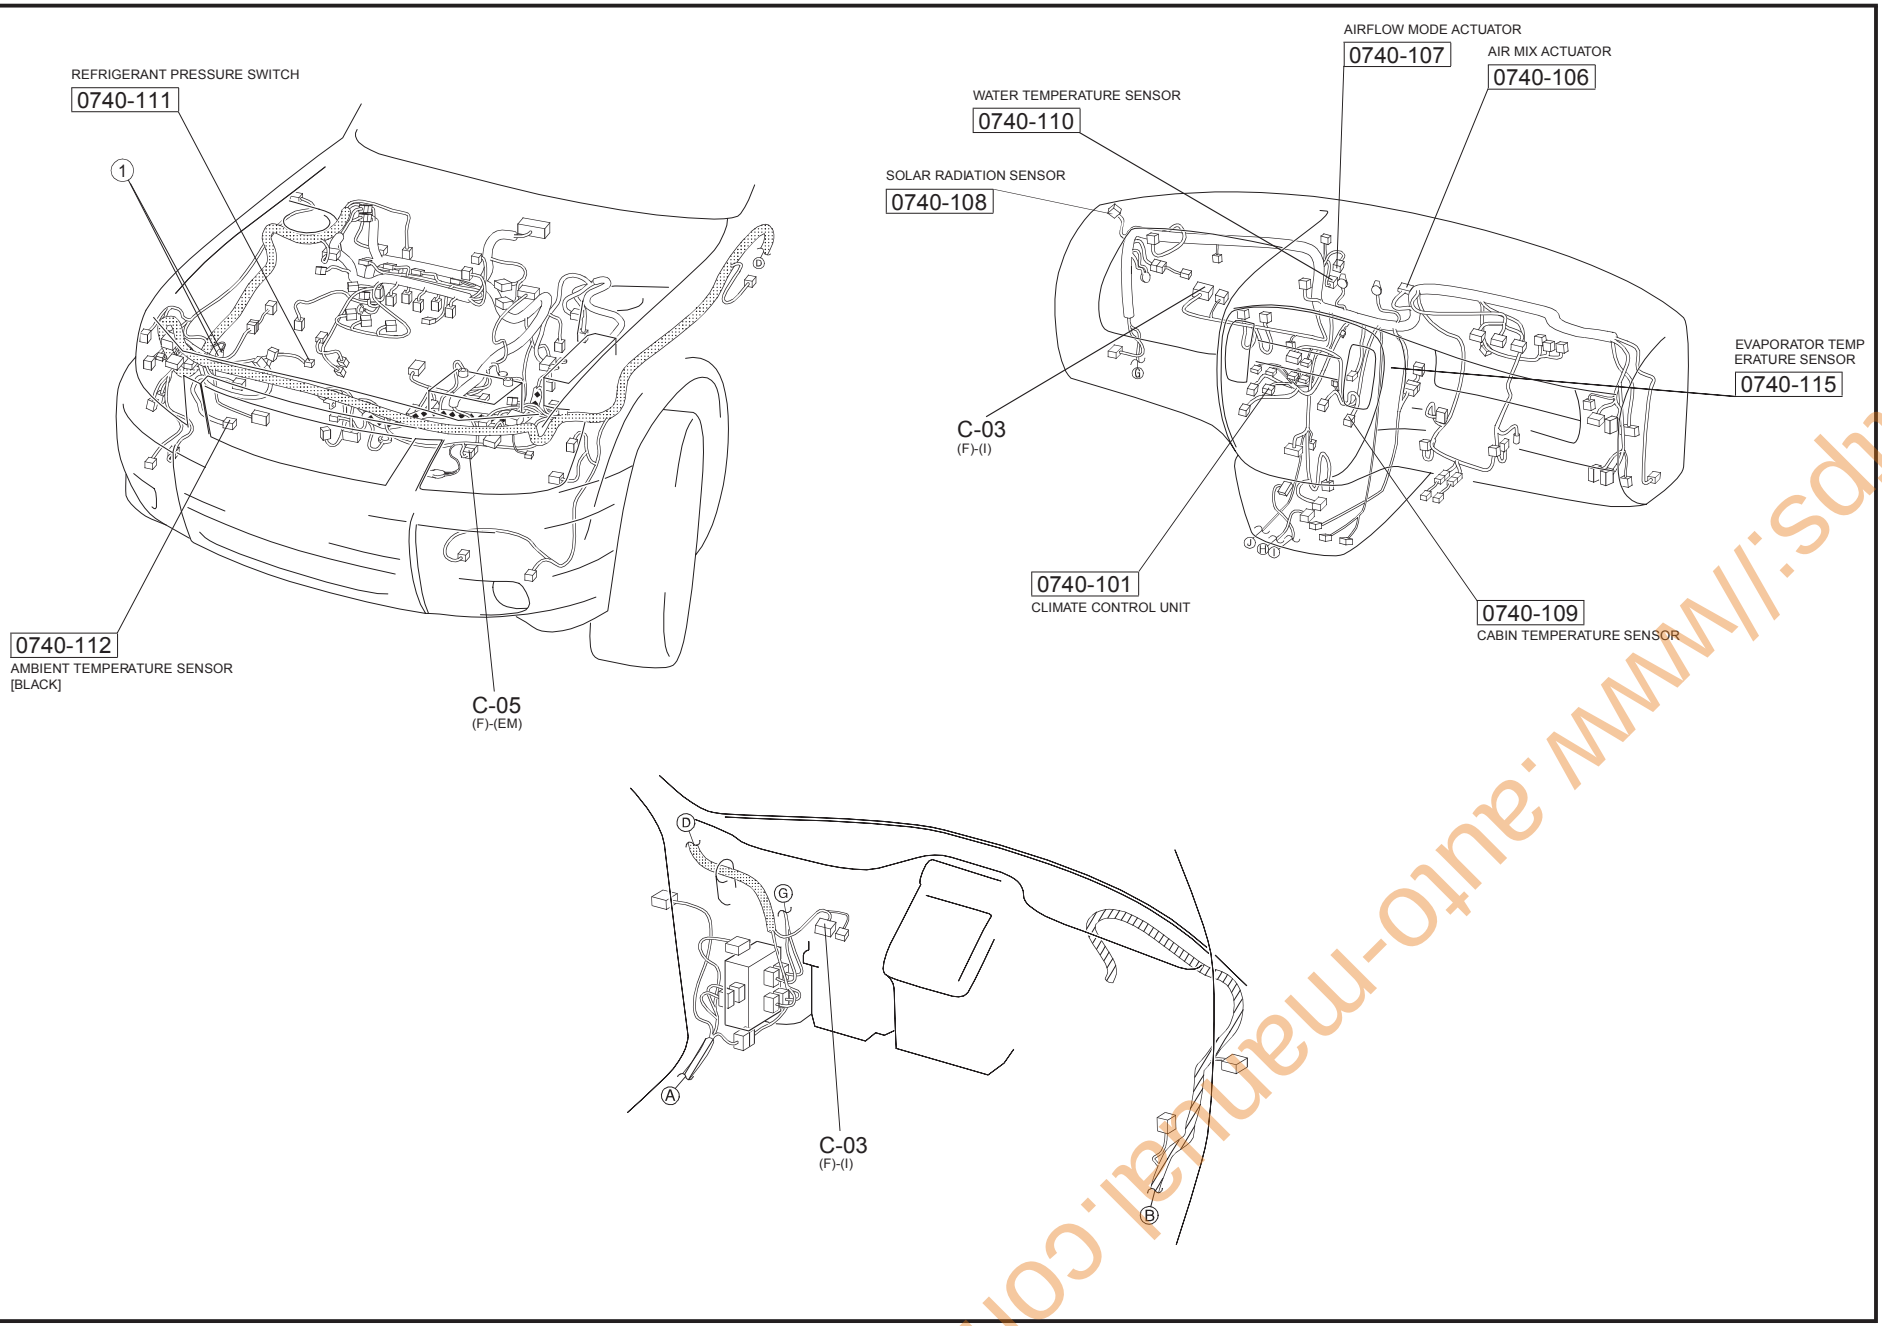


https://www.auto-manual.com/

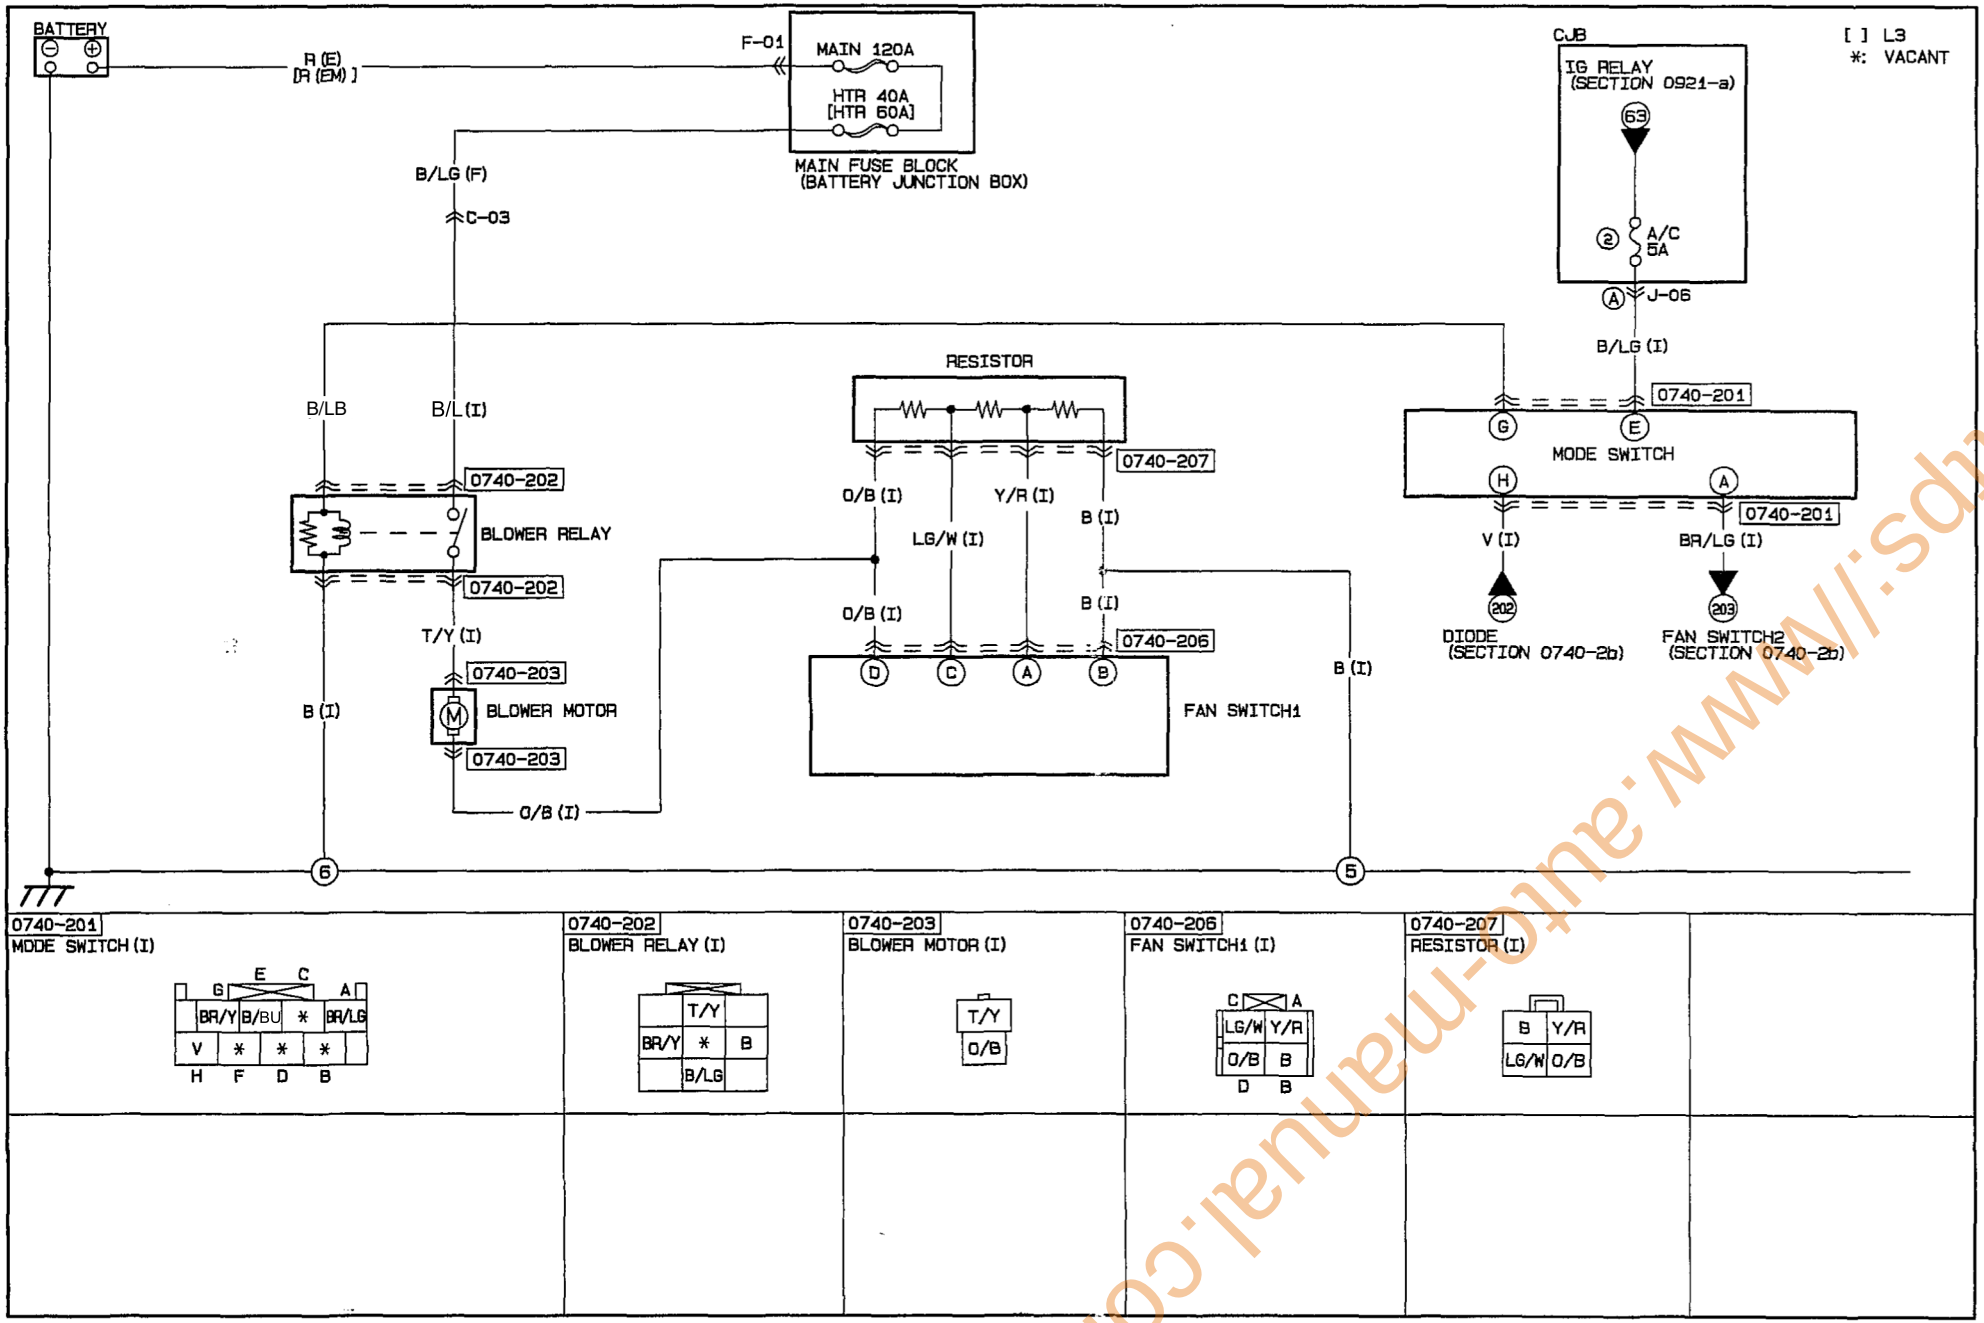


0740-201 MODE SWITCH (I)	0740-202 BLOWER RELAY (I)	0740-203 BLOWER MOTOR (I)	0740-206 FAN SWITCH1 (I)	0740-207 RESISTOR (I)	

https://www.auto-manual.com/

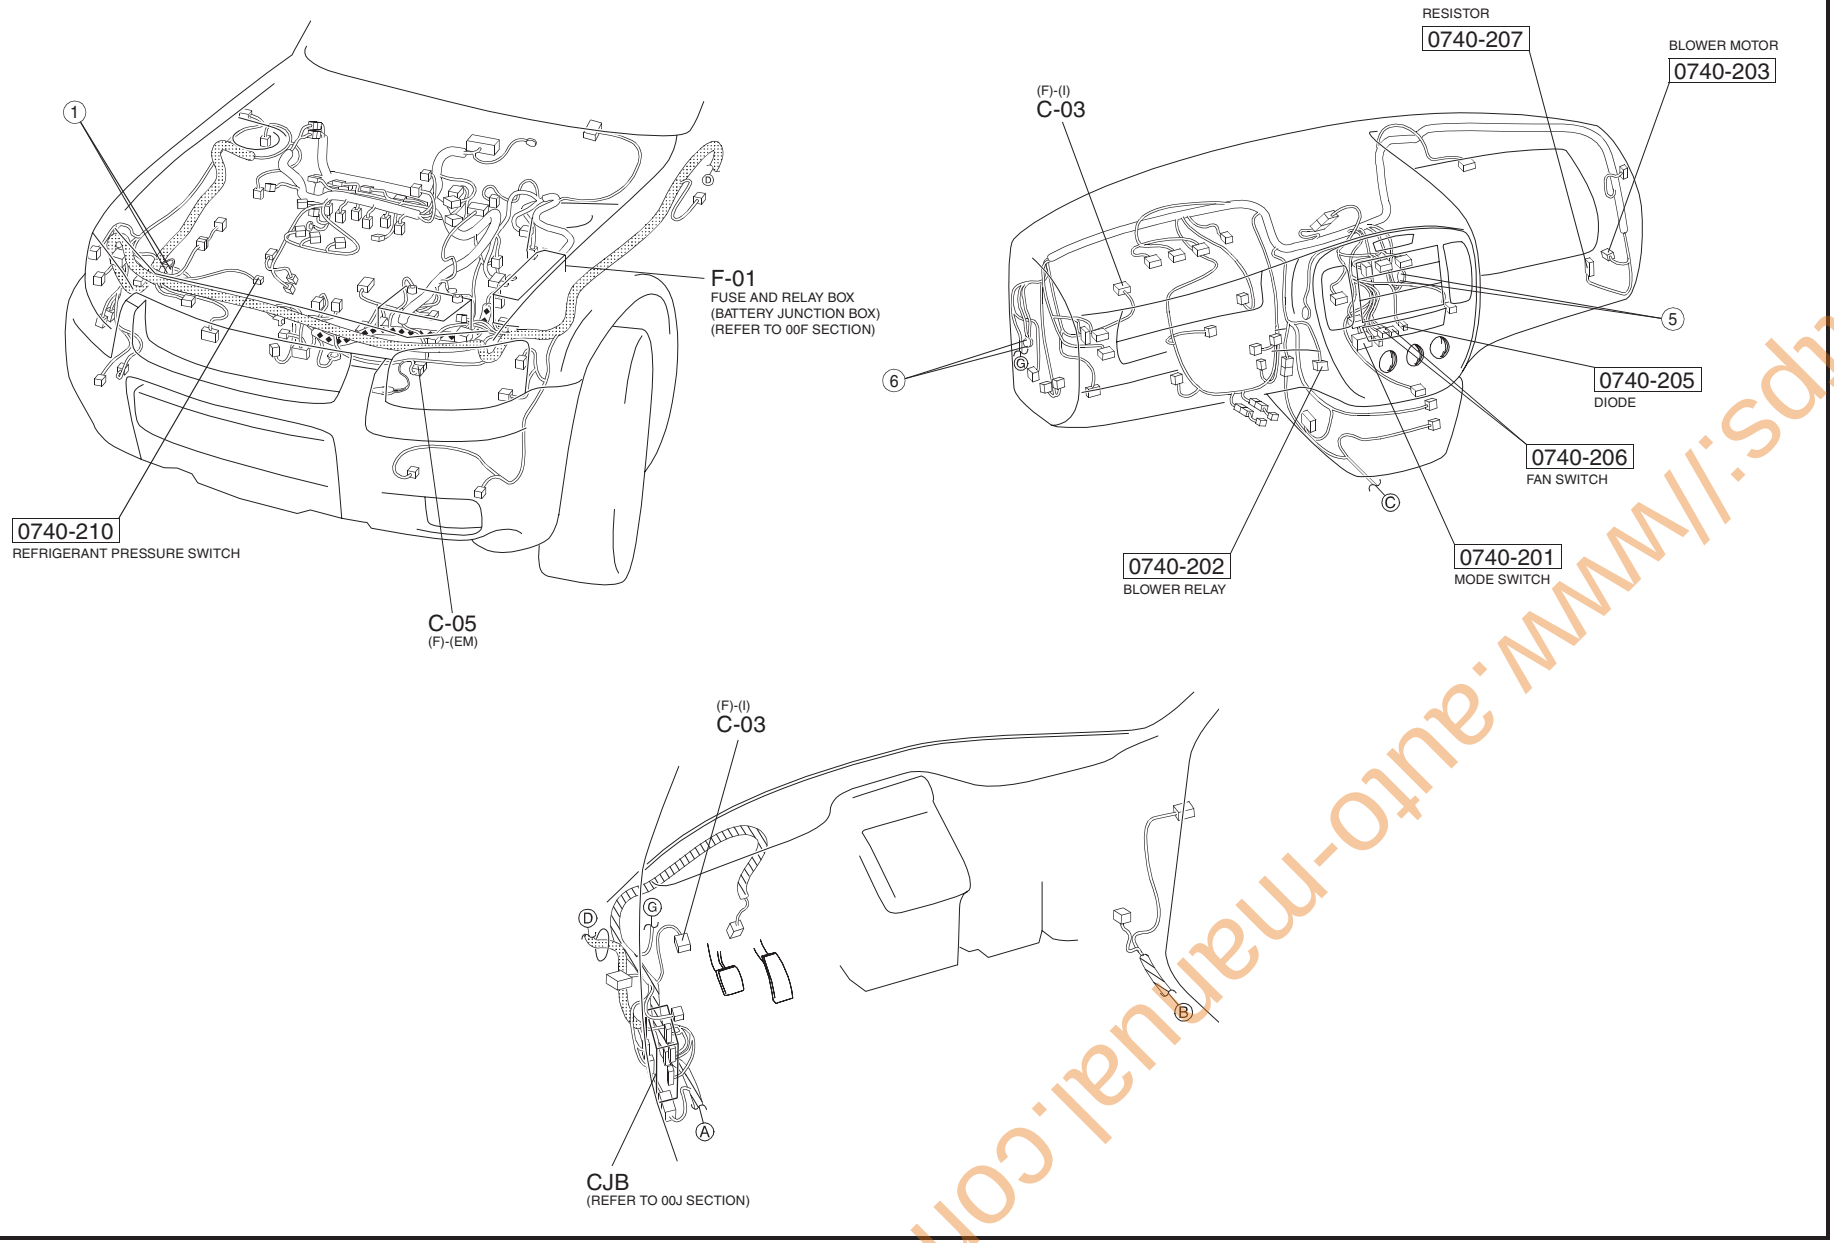


https://www.auto-manual.com/

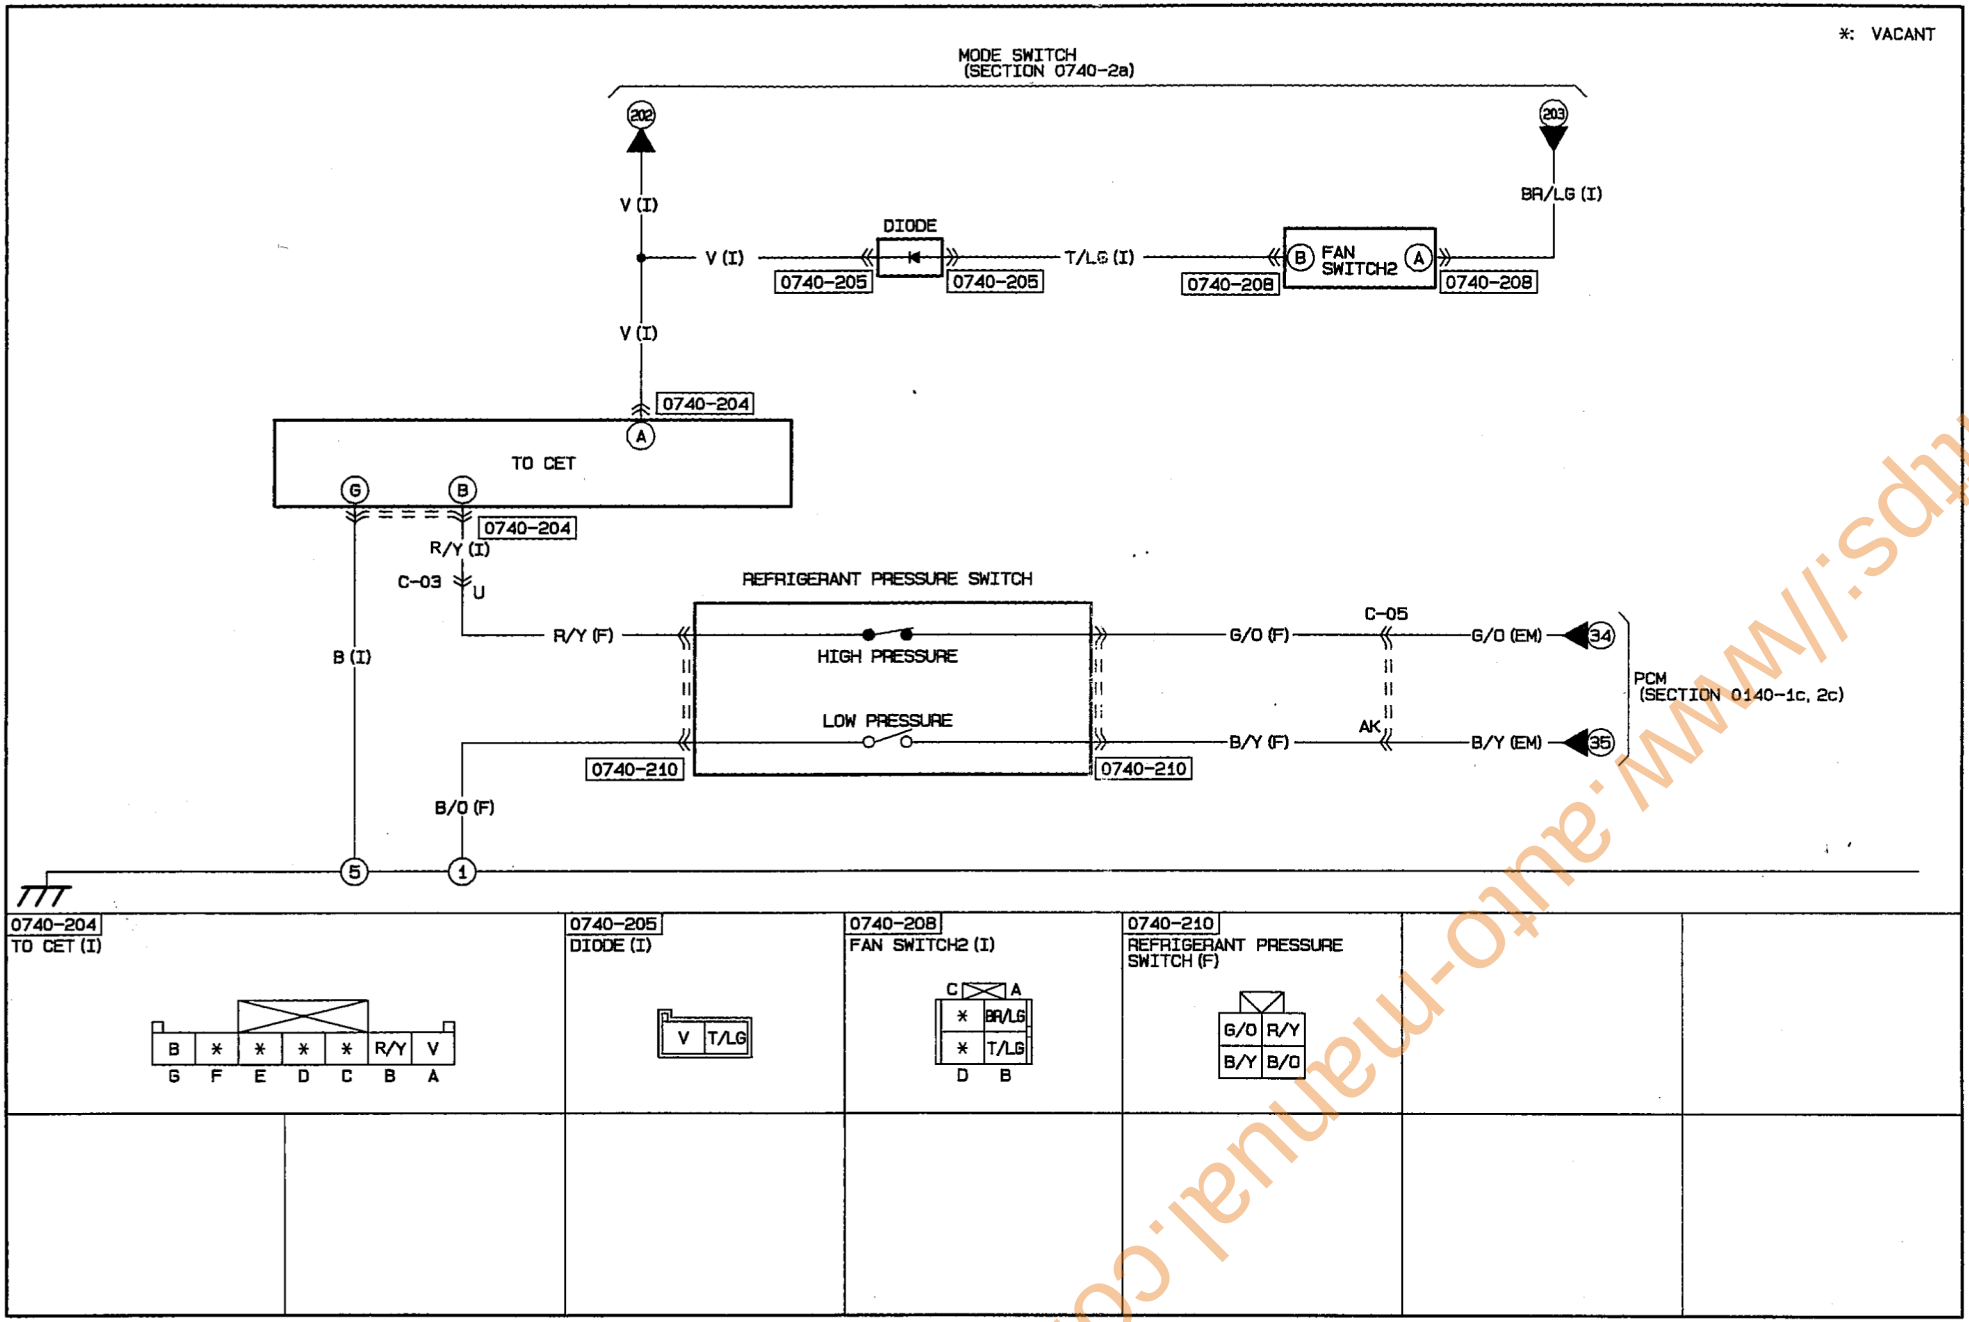


0740-204 TO CET (I)	0740-205 DIODE (I)	0740-208 FAN SWITCH2 (I)	0740-210 REFRIGERANT PRESSURE SWITCH (F)		
B * * * * R/Y V G F E D C B A	V T/LG	C A * BR/LG * T/LG D B	G/O R/Y B/Y B/O		


https://www.auto-manual.com/

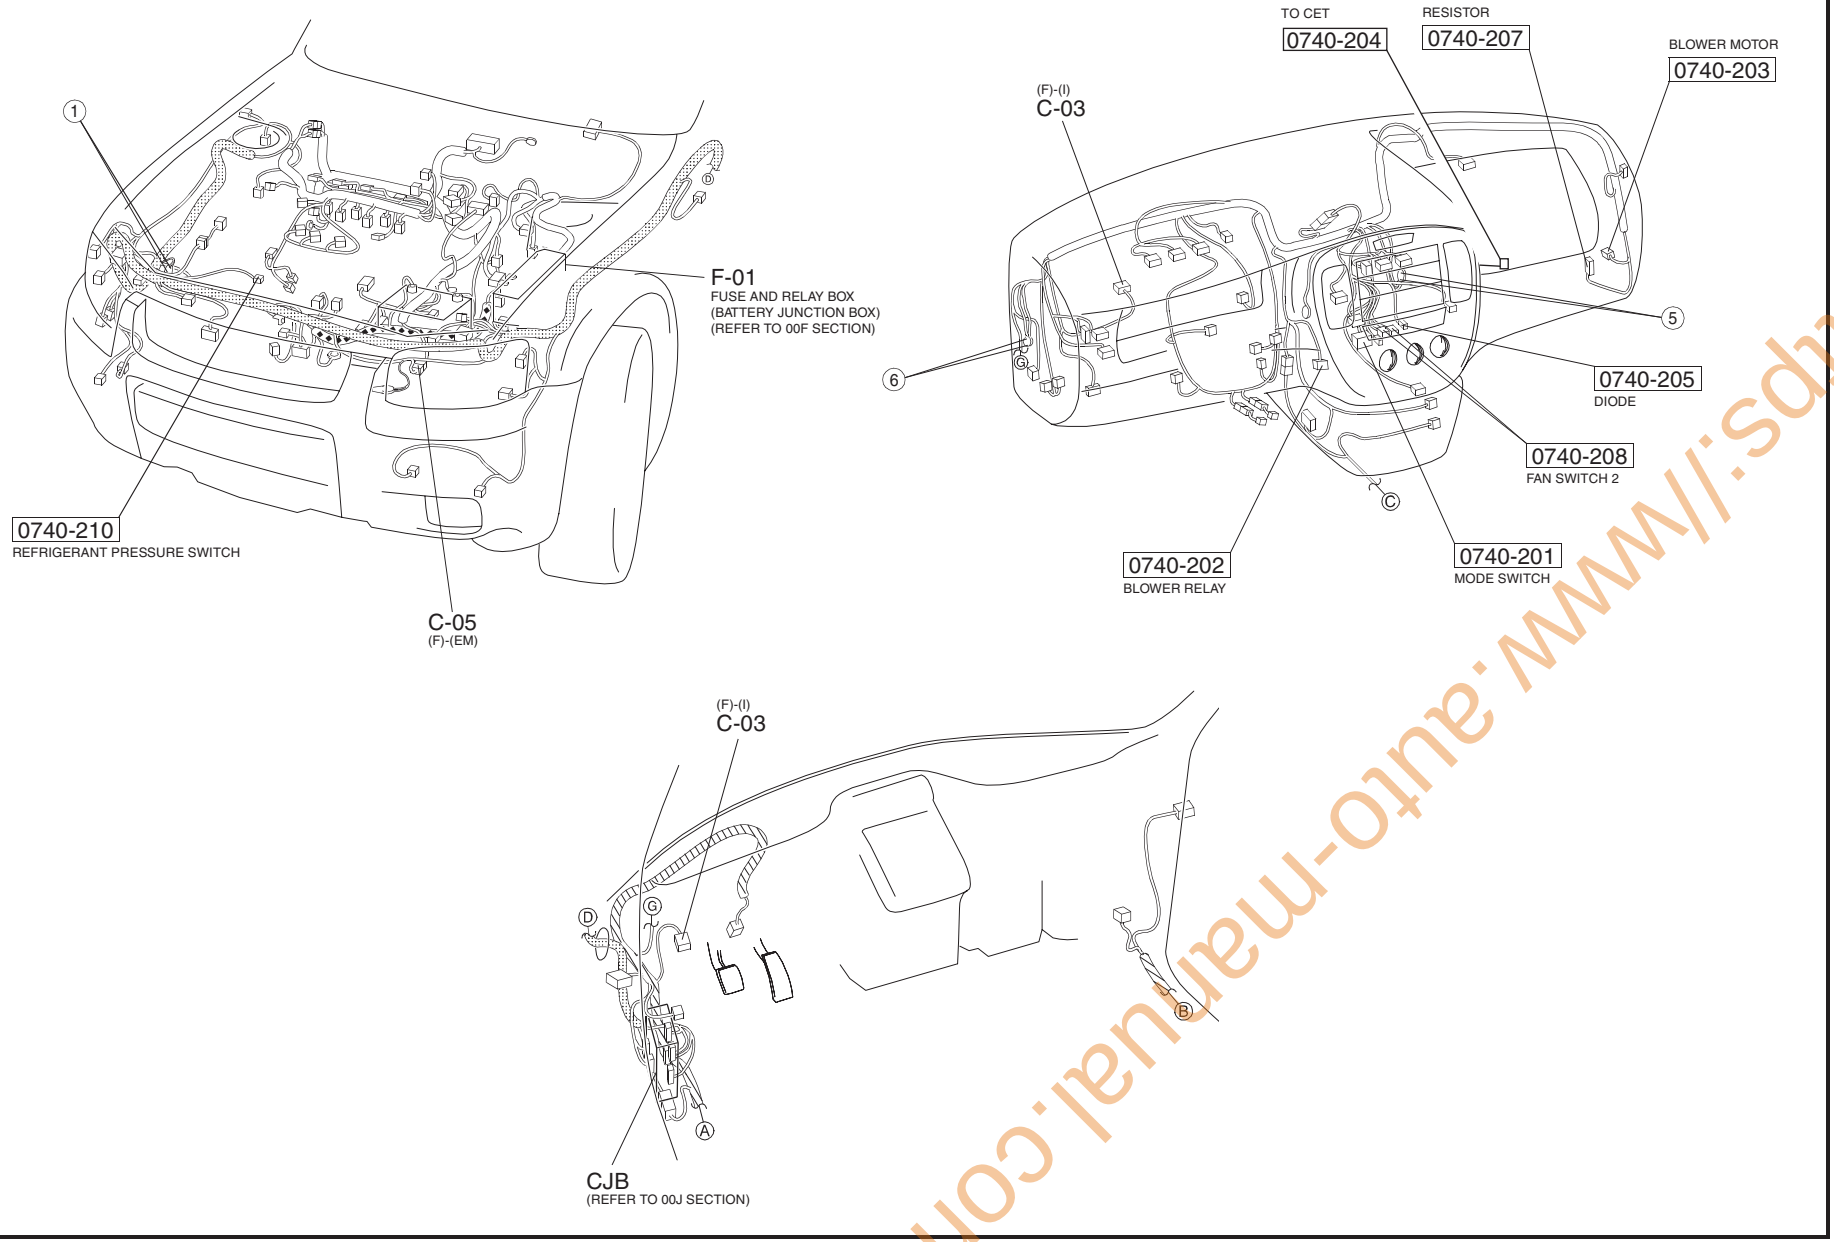


https://www.auto-manual.com/

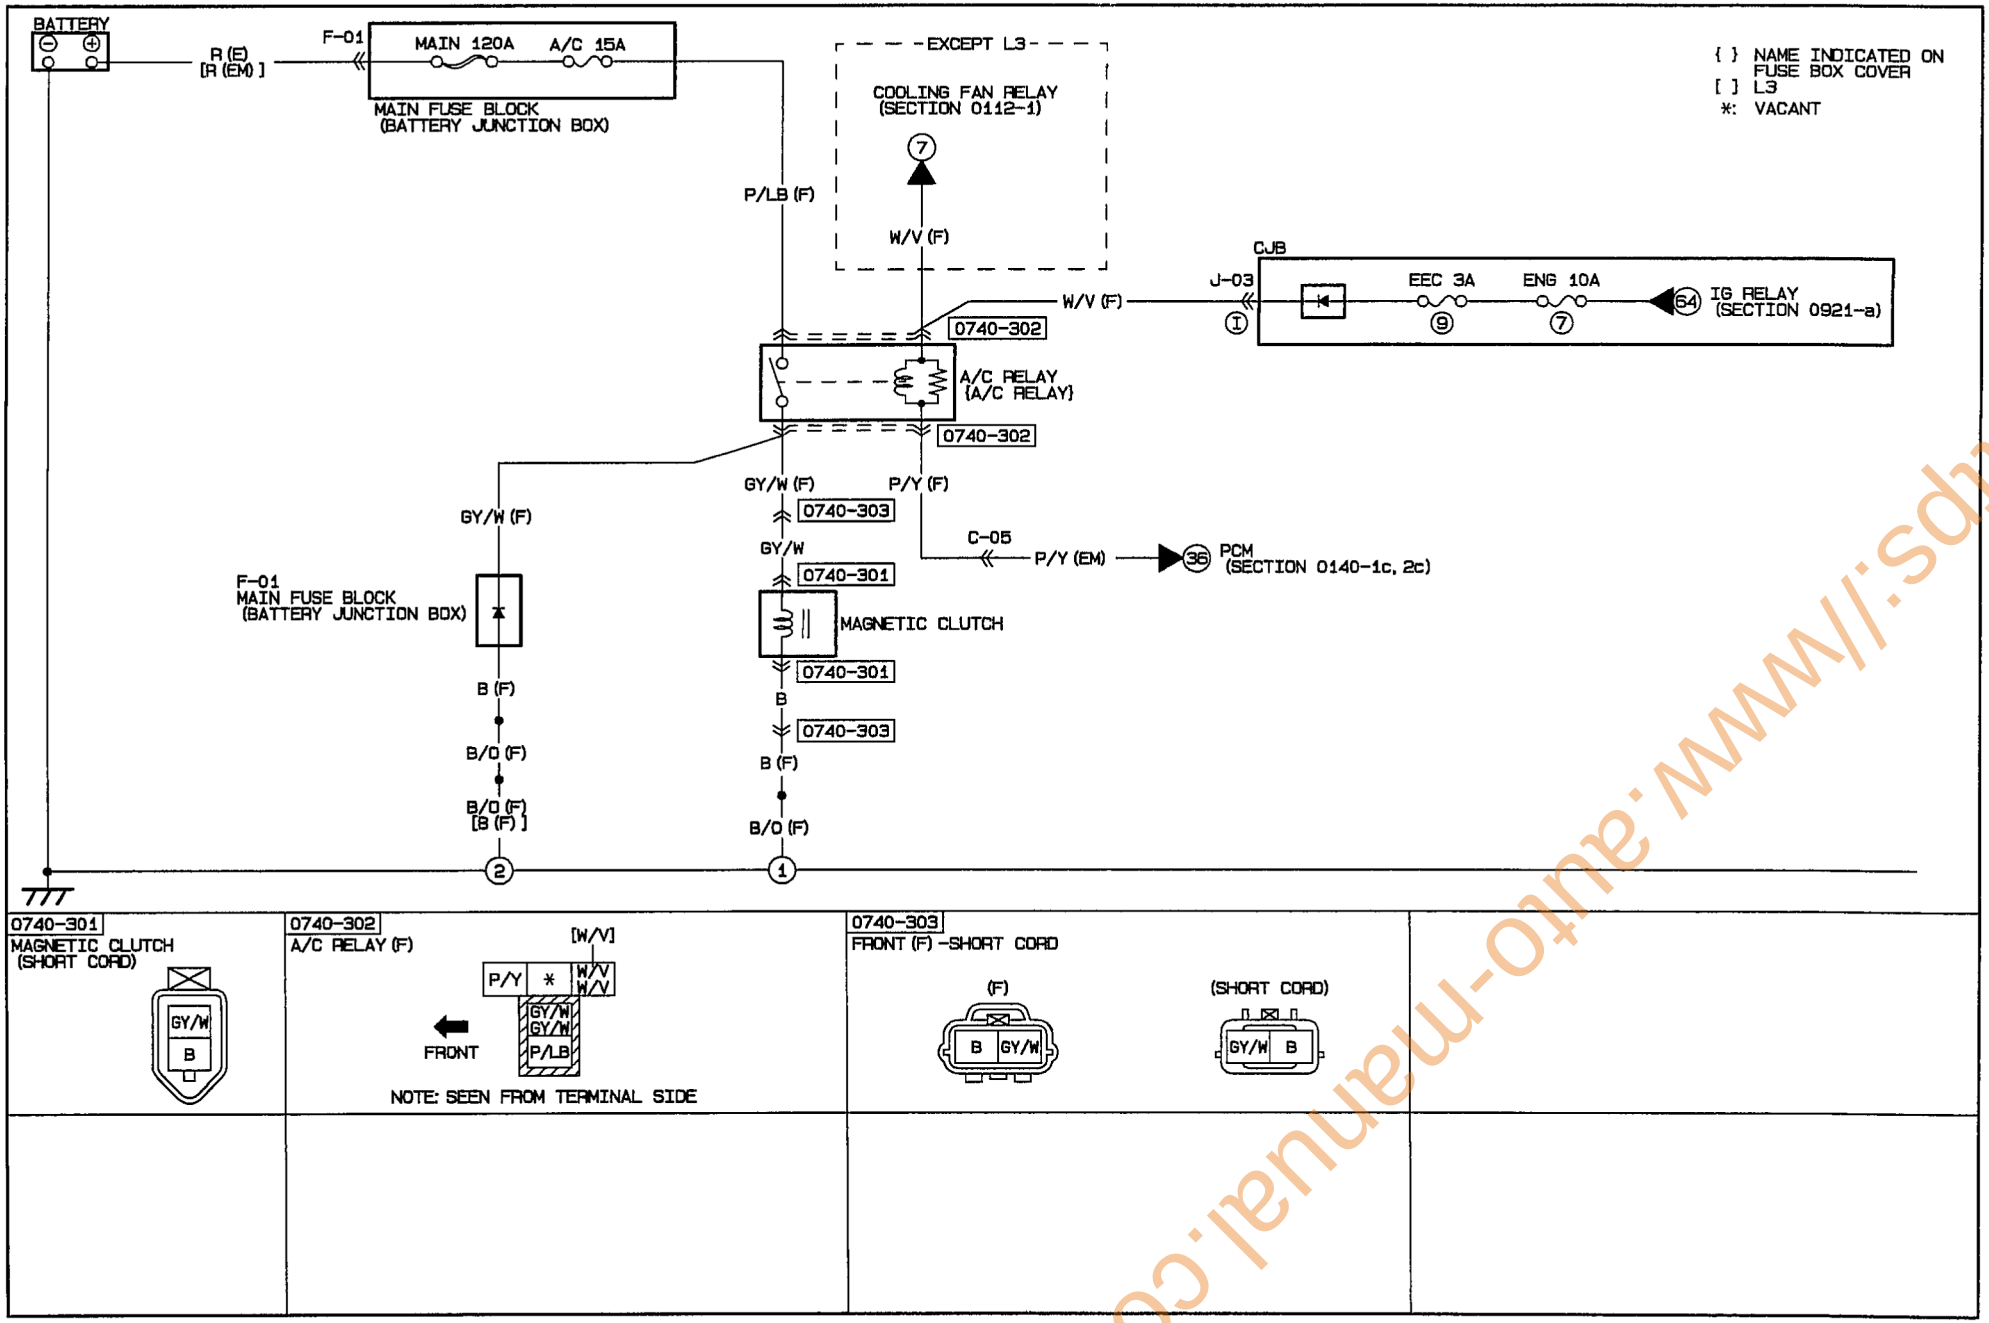


https://www.auto-manual.com/

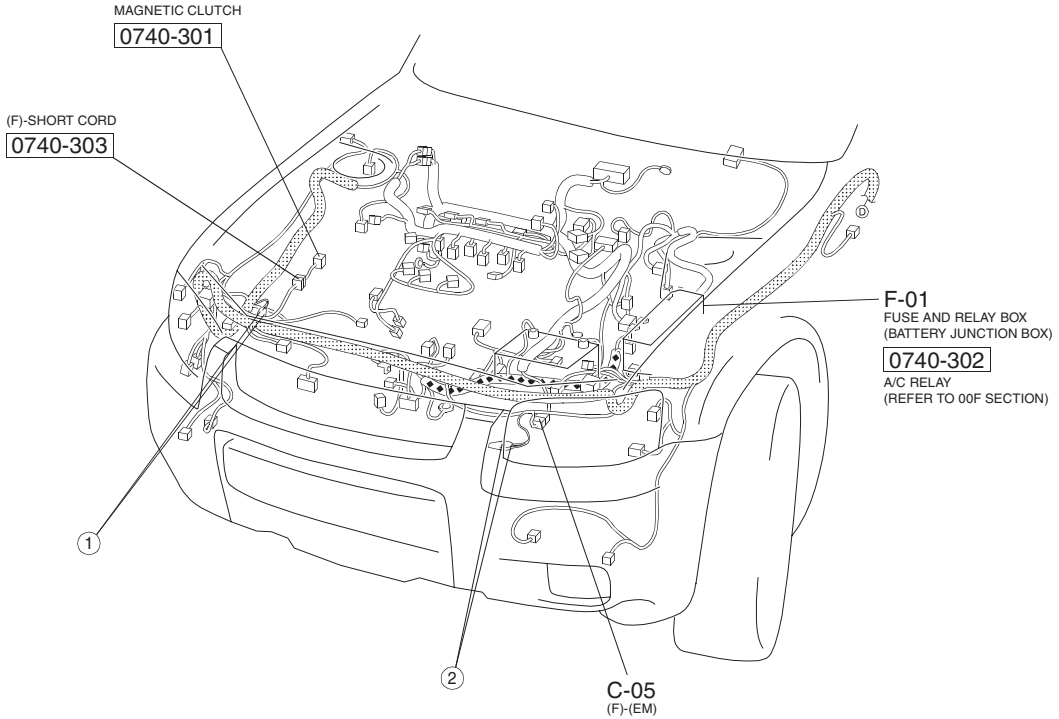

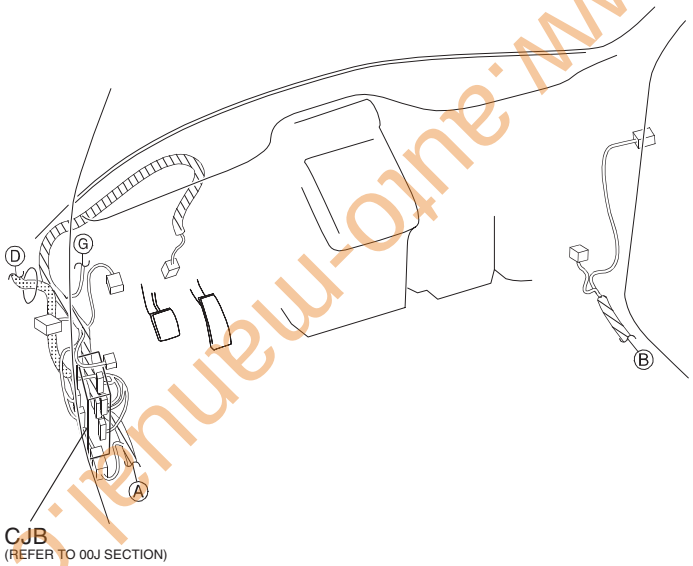

https://www.auto-manual.com/

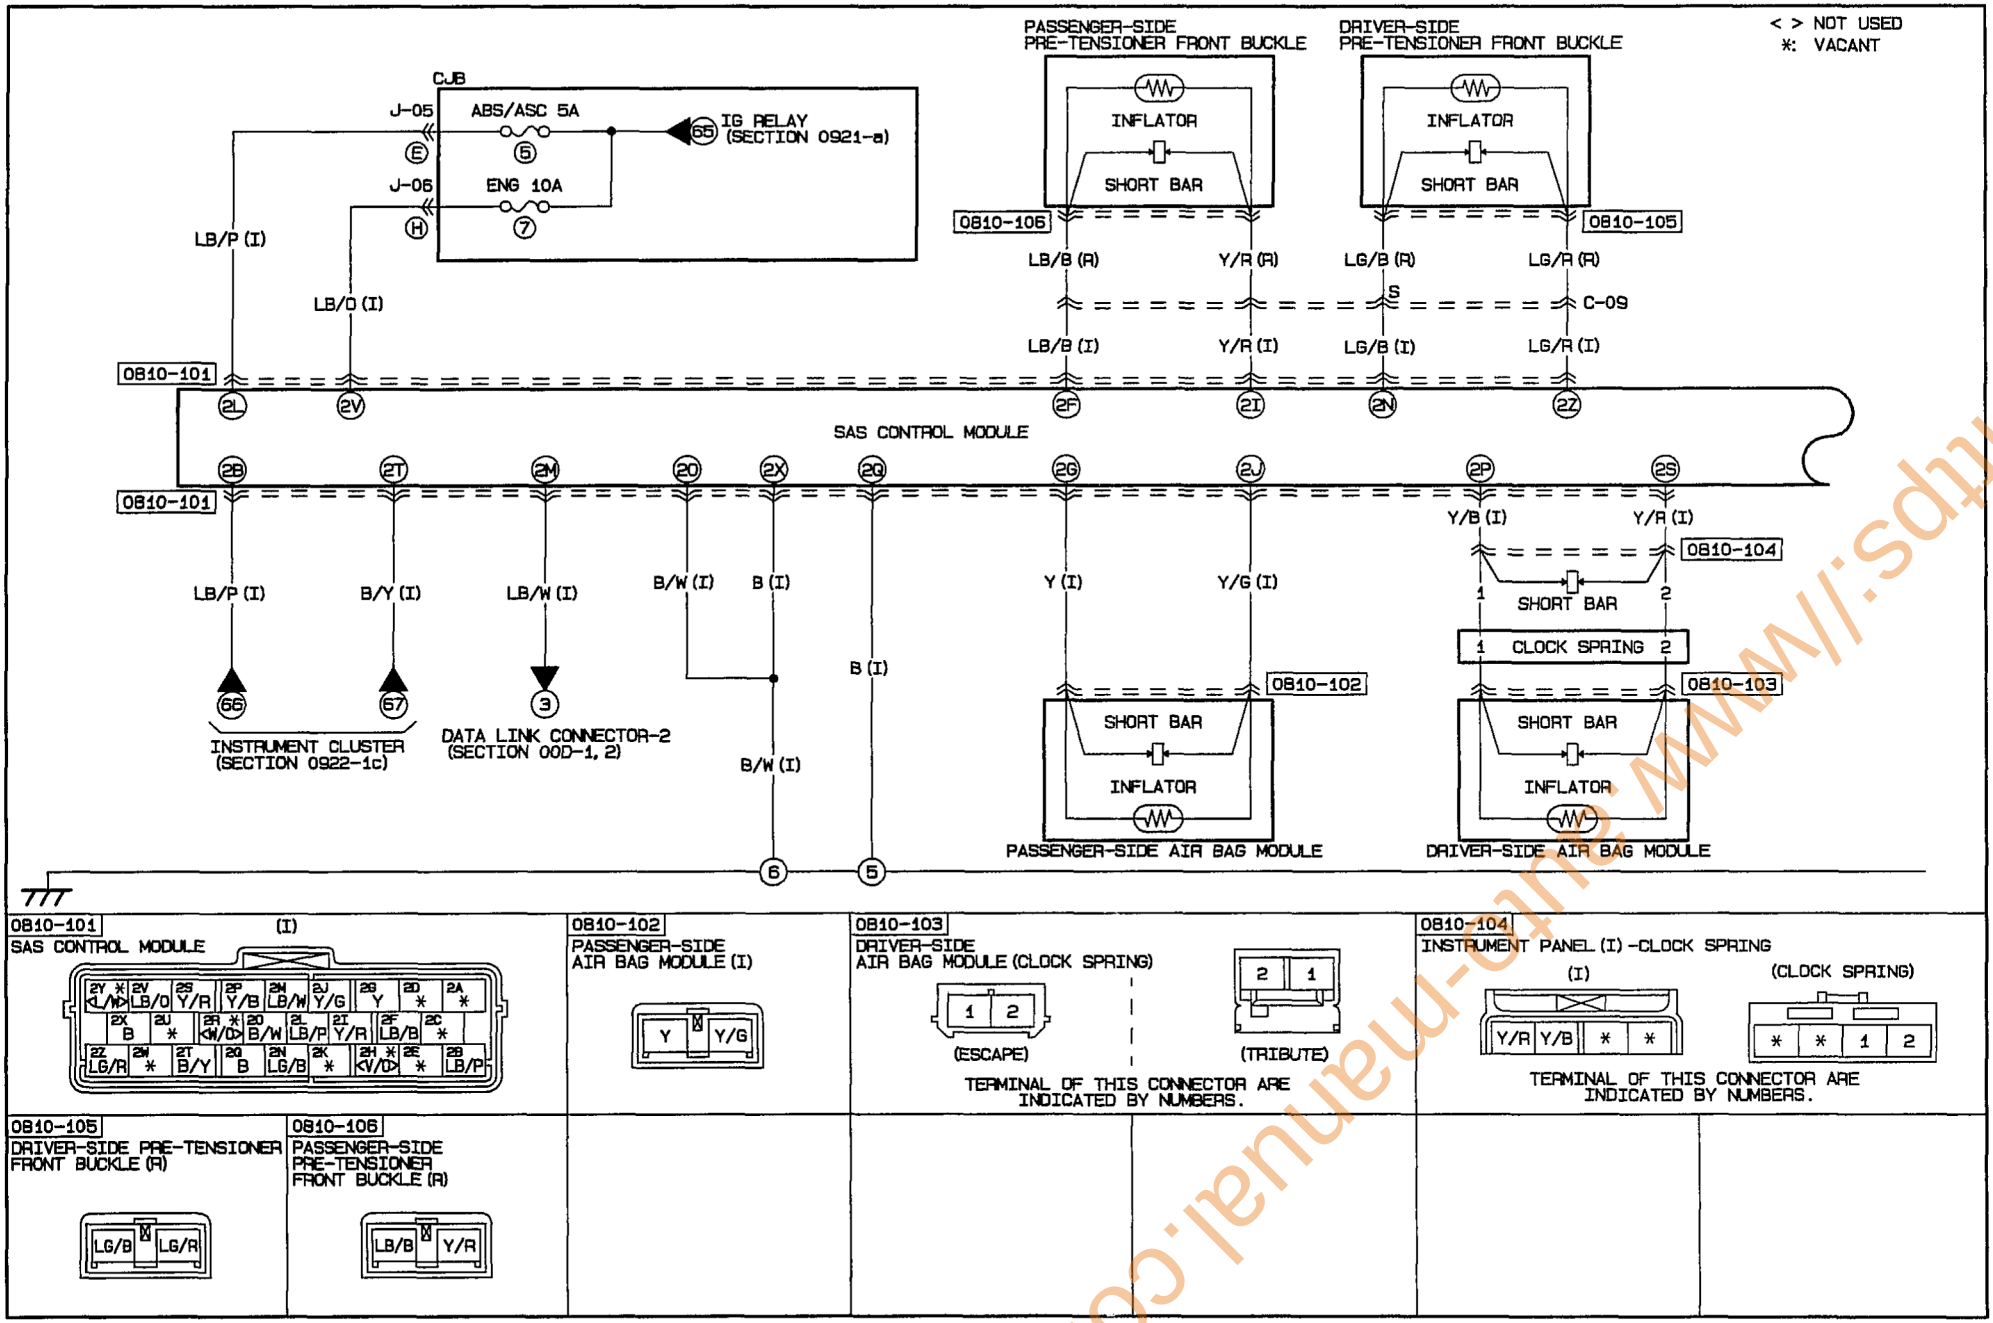

0810-101 SAS CONTROL MODULE (I)

0810-102 PASSENGER-SIDE AIR BAG MODULE (I)

0810-103 DRIVER-SIDE AIR BAG MODULE (CLOCK SPRING)

(ESCAPE) (TRIBUTE)

TERMINAL OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0810-104 INSTRUMENT PANEL (I) -CLOCK SPRING

TERMINAL OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0810-105 DRIVER-SIDE PRE-TENSIONER FRONT BUCKLE (A)


0810-106 PASSENGER-SIDE PRE-TENSIONER FRONT BUCKLE (A)

https://www.auto-manual.com/

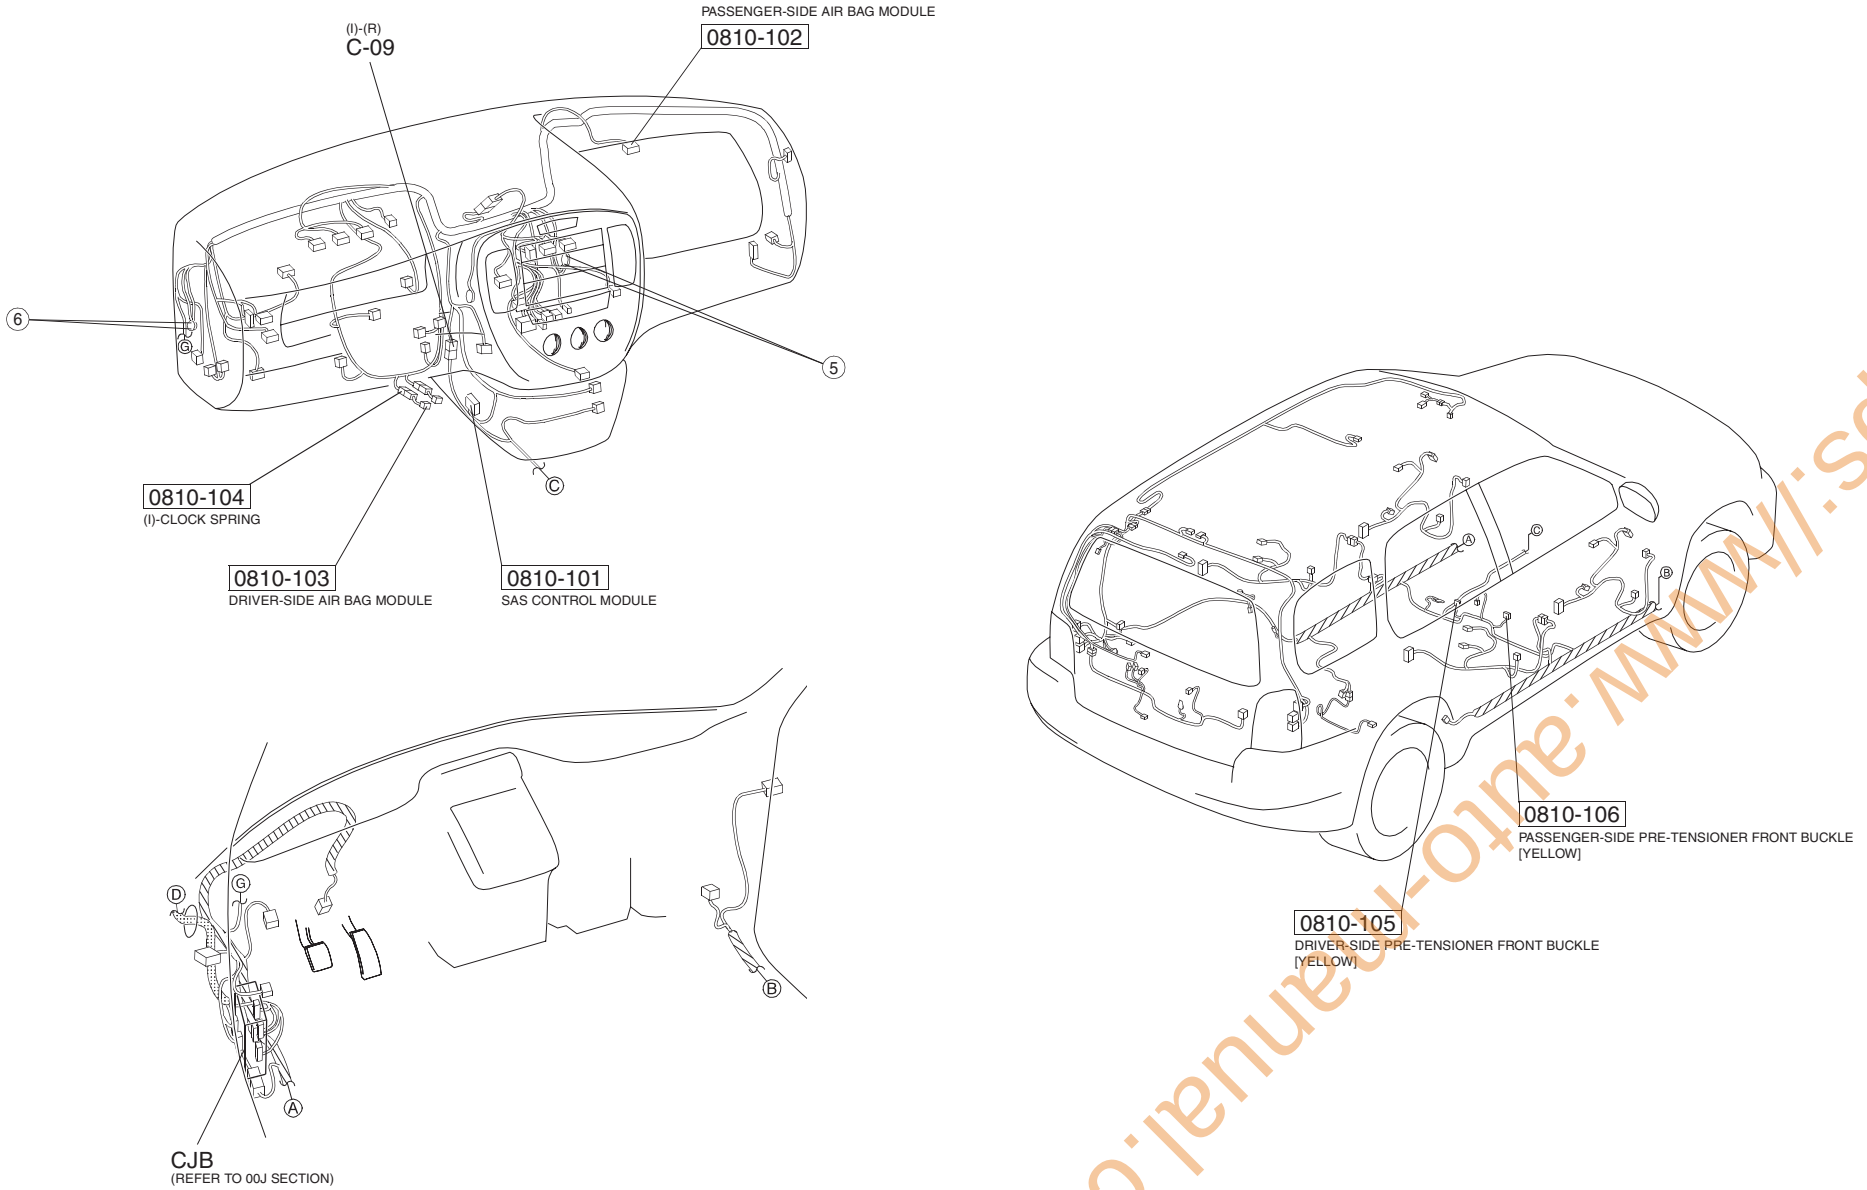


https://www.auto-manual.com/

*: VACANT

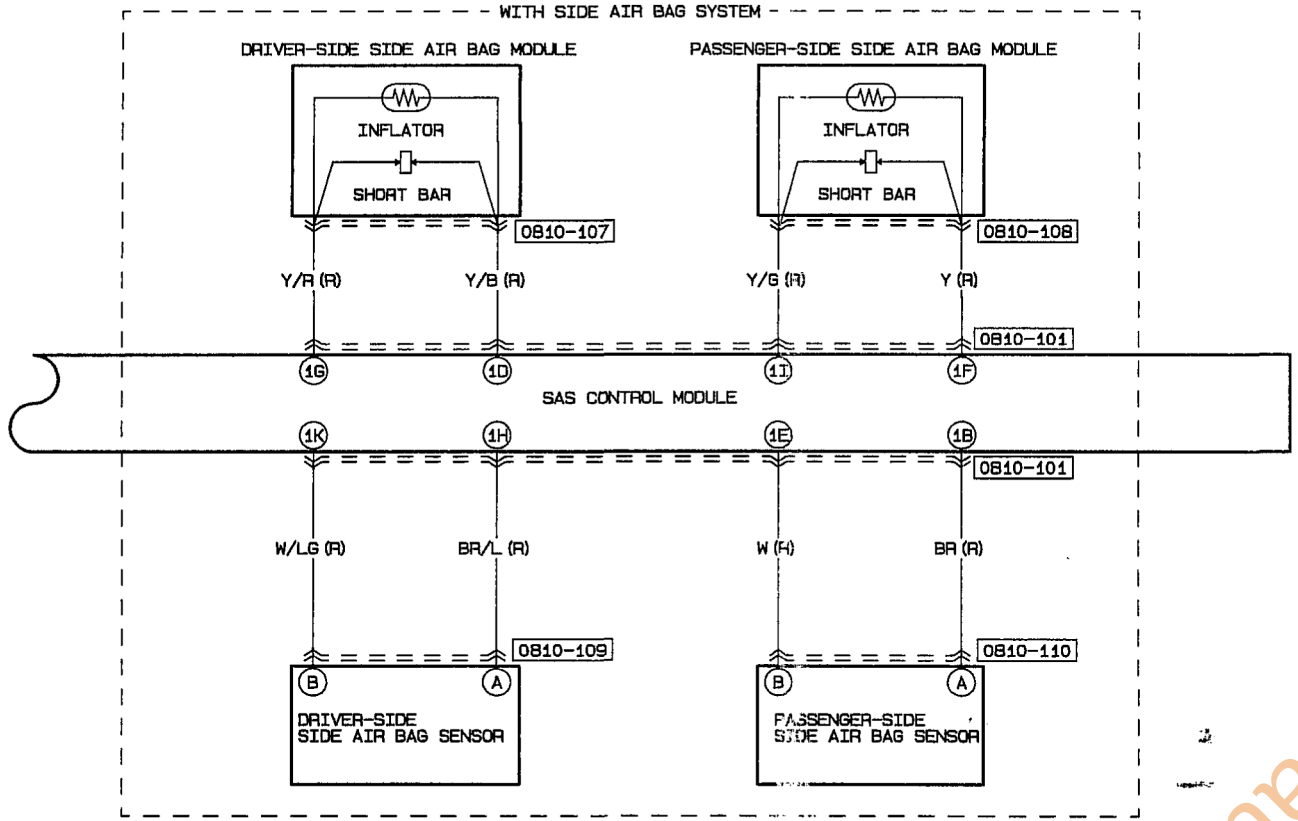

0810-101
SAS CONTROL MODULE

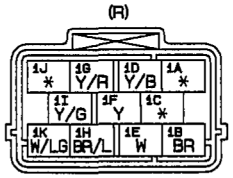

(WITH SIDE AIR BAG SYSTEM)

0810-107
DRIVER-SIDE SIDE AIR BAG MODULE (R)



(WITH SIDE AIR BAG SYSTEM)

0810-108
PASSENGER-SIDE SIDE AIR BAG MODULE (R)




(WITH SIDE AIR BAG SYSTEM)

0810-109
DRIVER-SIDE SIDE AIR BAG SENSOR (R)




(WITH SIDE AIR BAG SYSTEM)


0810-110
PASSENGER-SIDE SIDE AIR BAG SENSOR (R)



(WITH SIDE AIR BAG SYSTEM)


https://www.auto-manual.com/

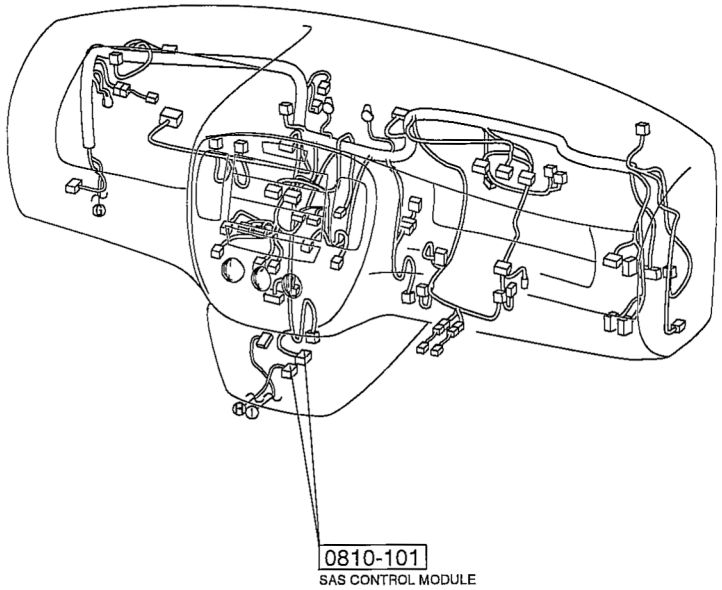

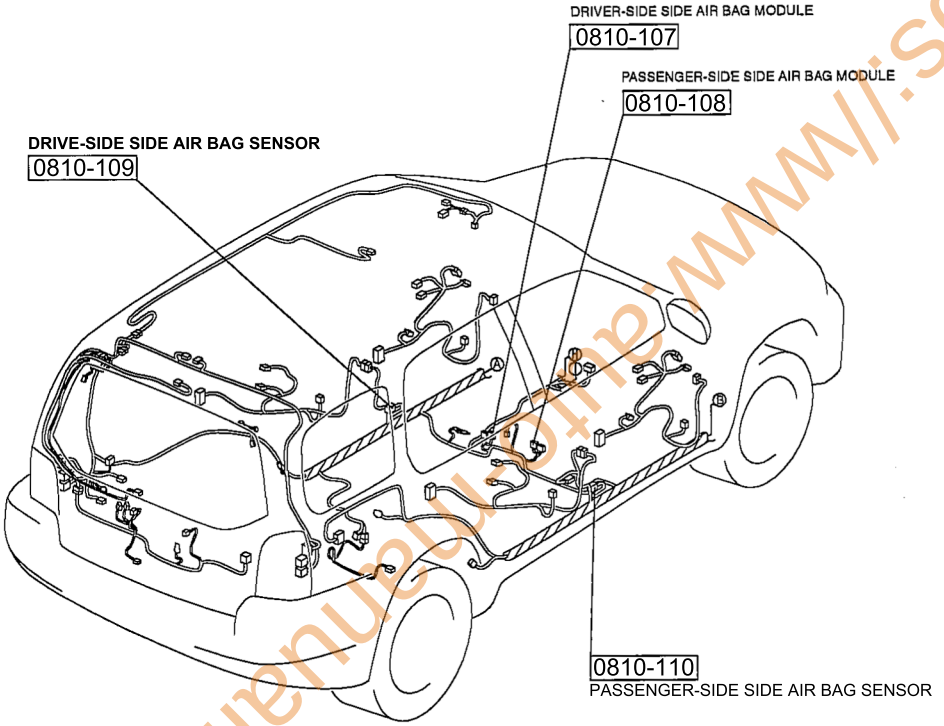

https://www.autoepcmanual.com/

REAR WINDOW DEFROSTER

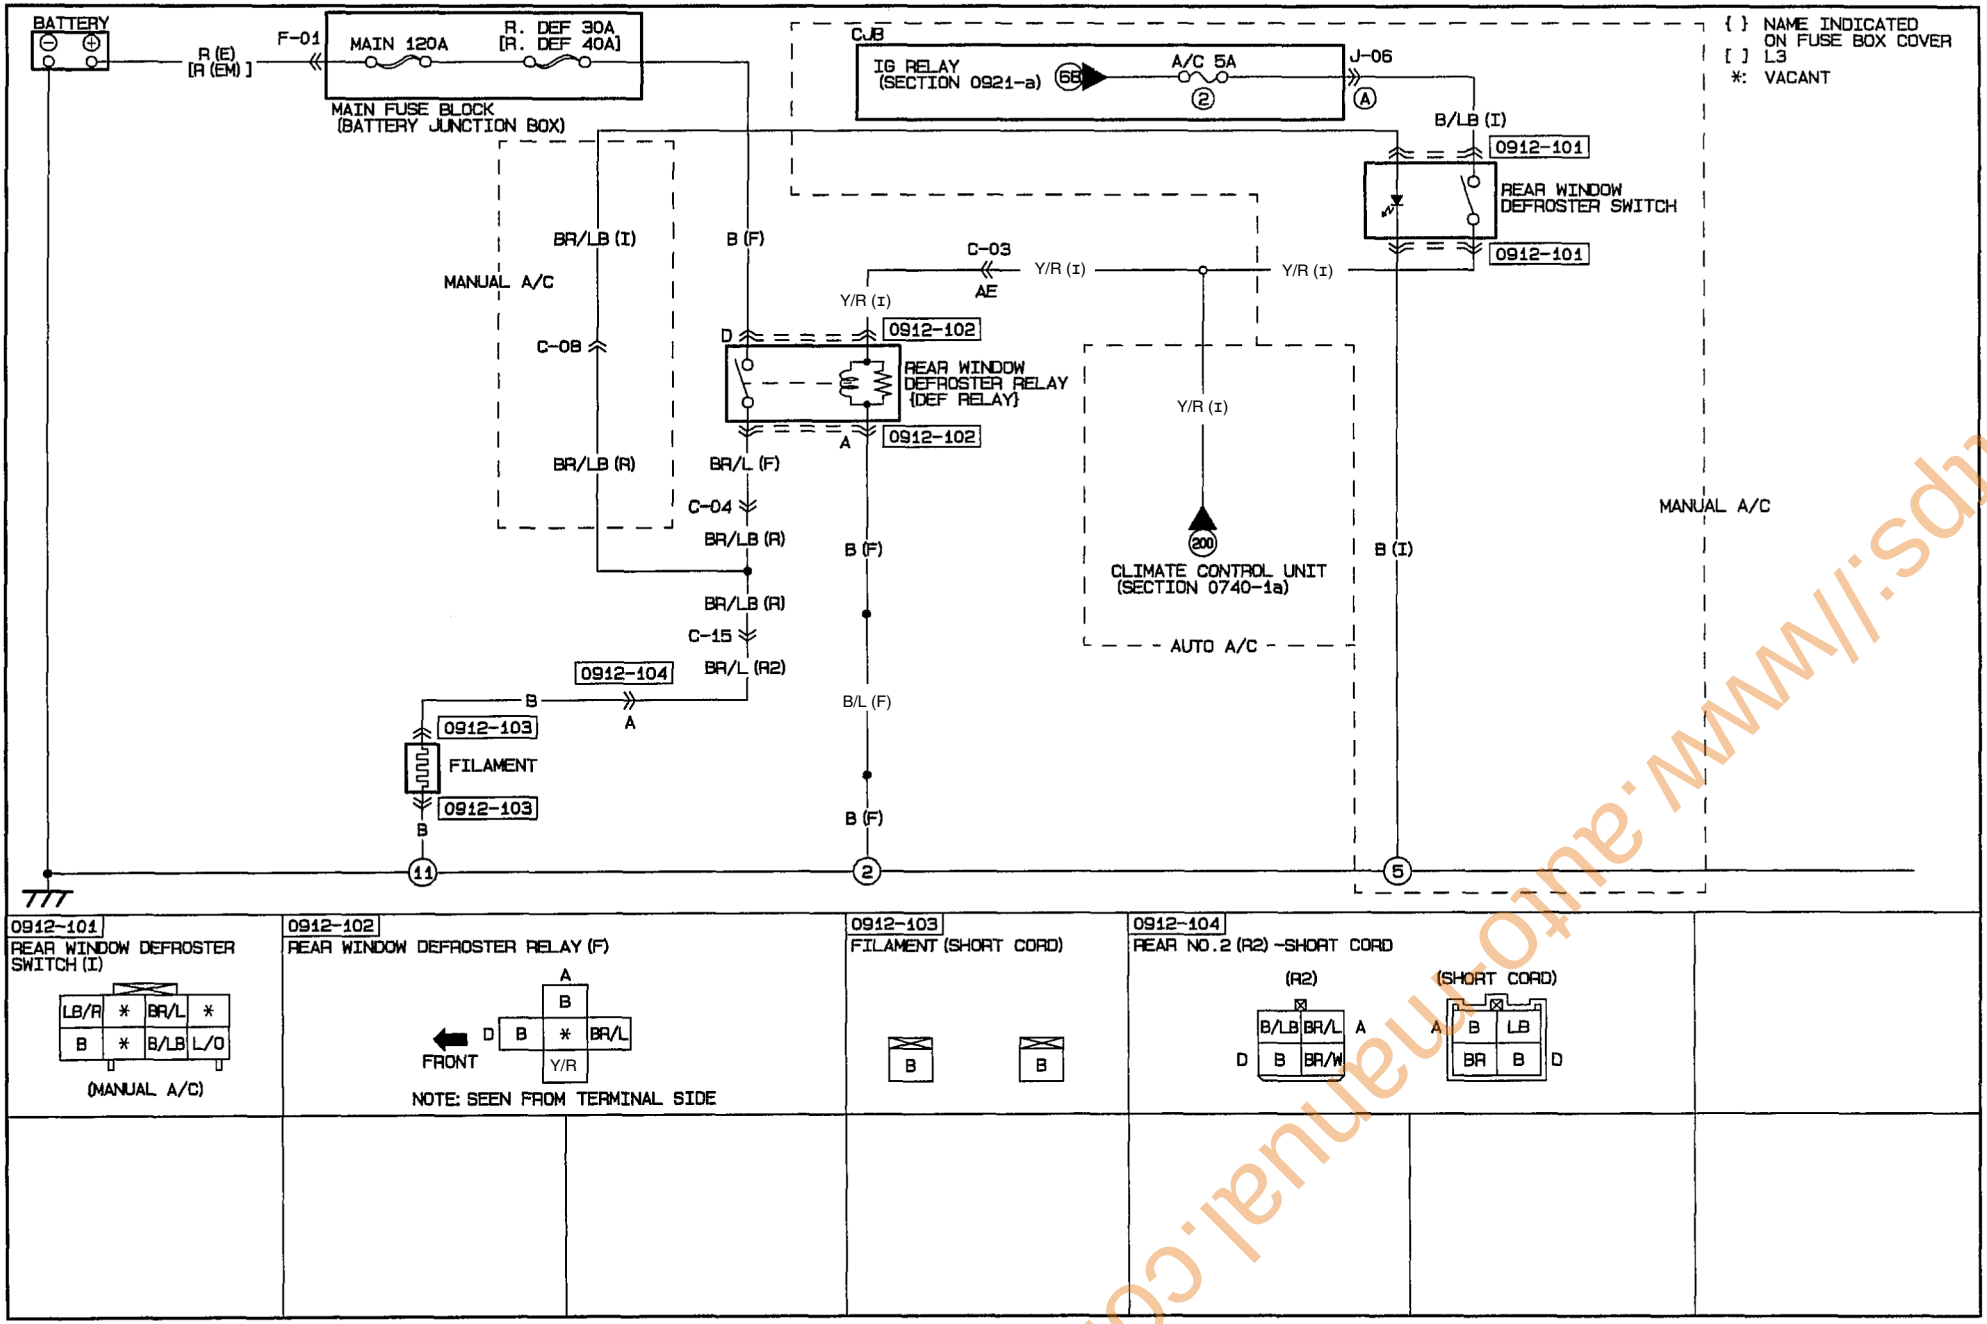

0912-101 REAR WINDOW DEFROSTER SWITCH (I)

(MANUAL A/C)


0912-102 REAR WINDOW DEFROSTER RELAY (F)

NOTE: SEEN FROM TERMINAL SIDE

0912-103 FILAMENT (SHORT CORD)


0912-104 REAR NO.2 (R2) -SHORT CORD

https://www.auto-manual.com/

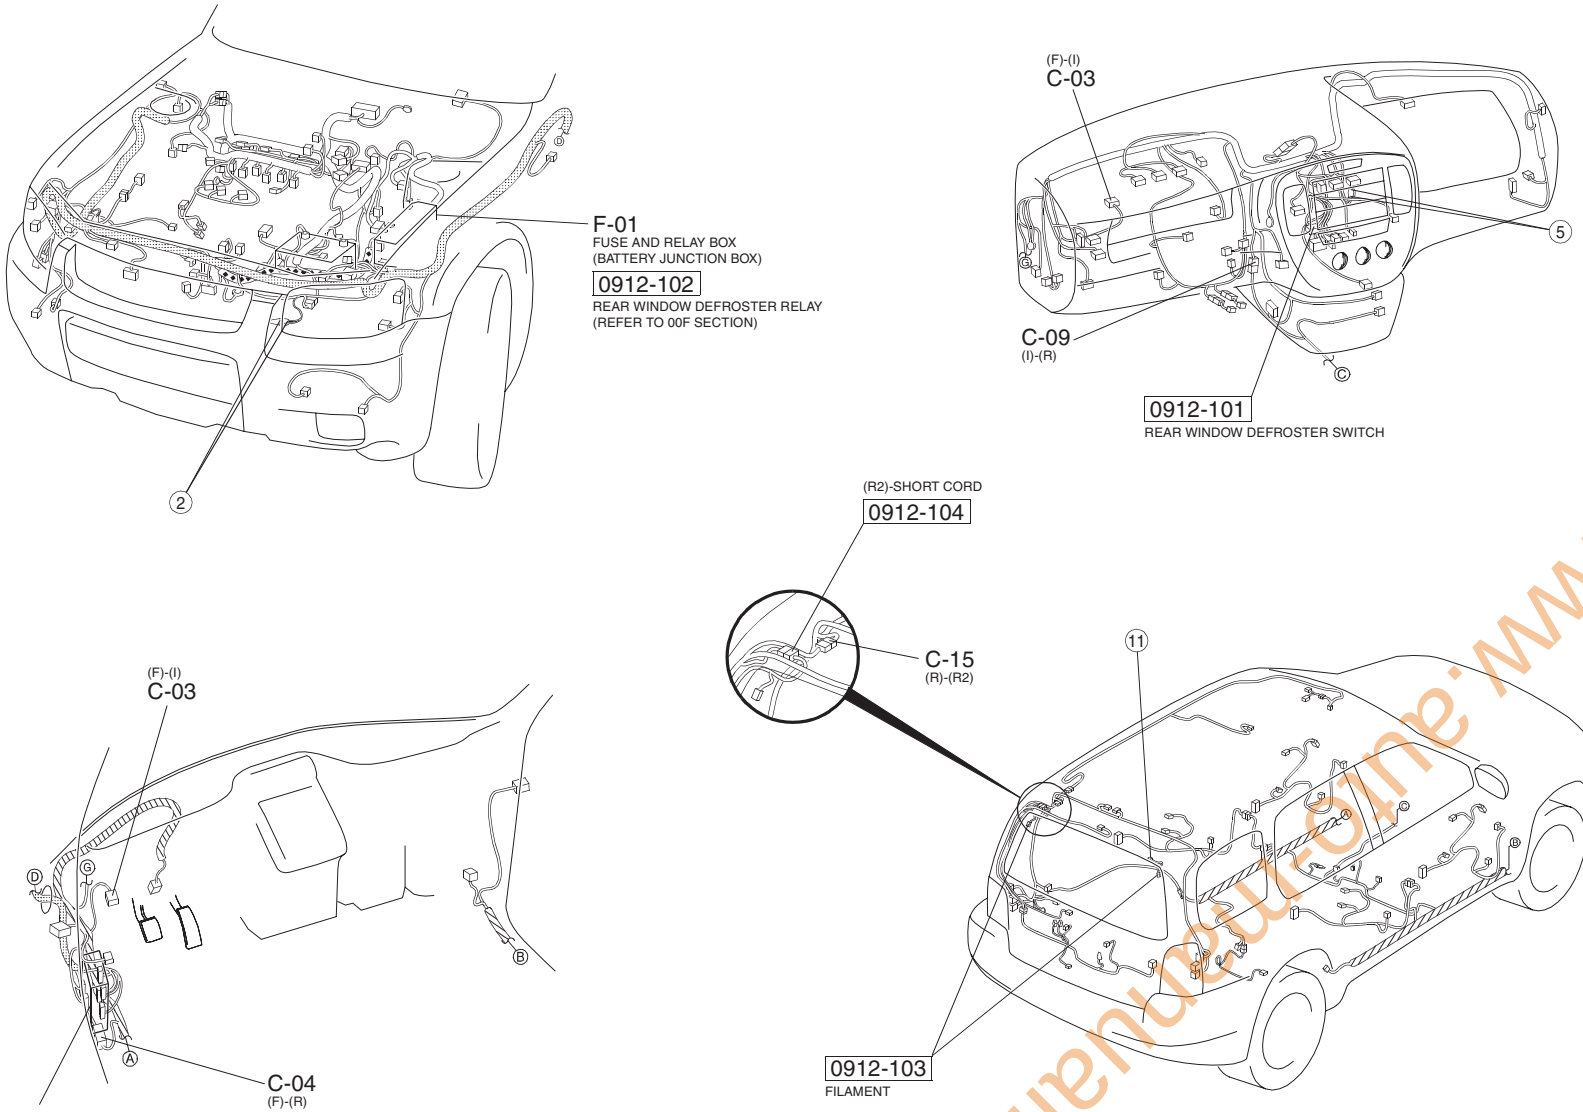



https://www.auto-manual.com/

POWER WINDOW SYSTEM (WITH AUTO SWITCH)

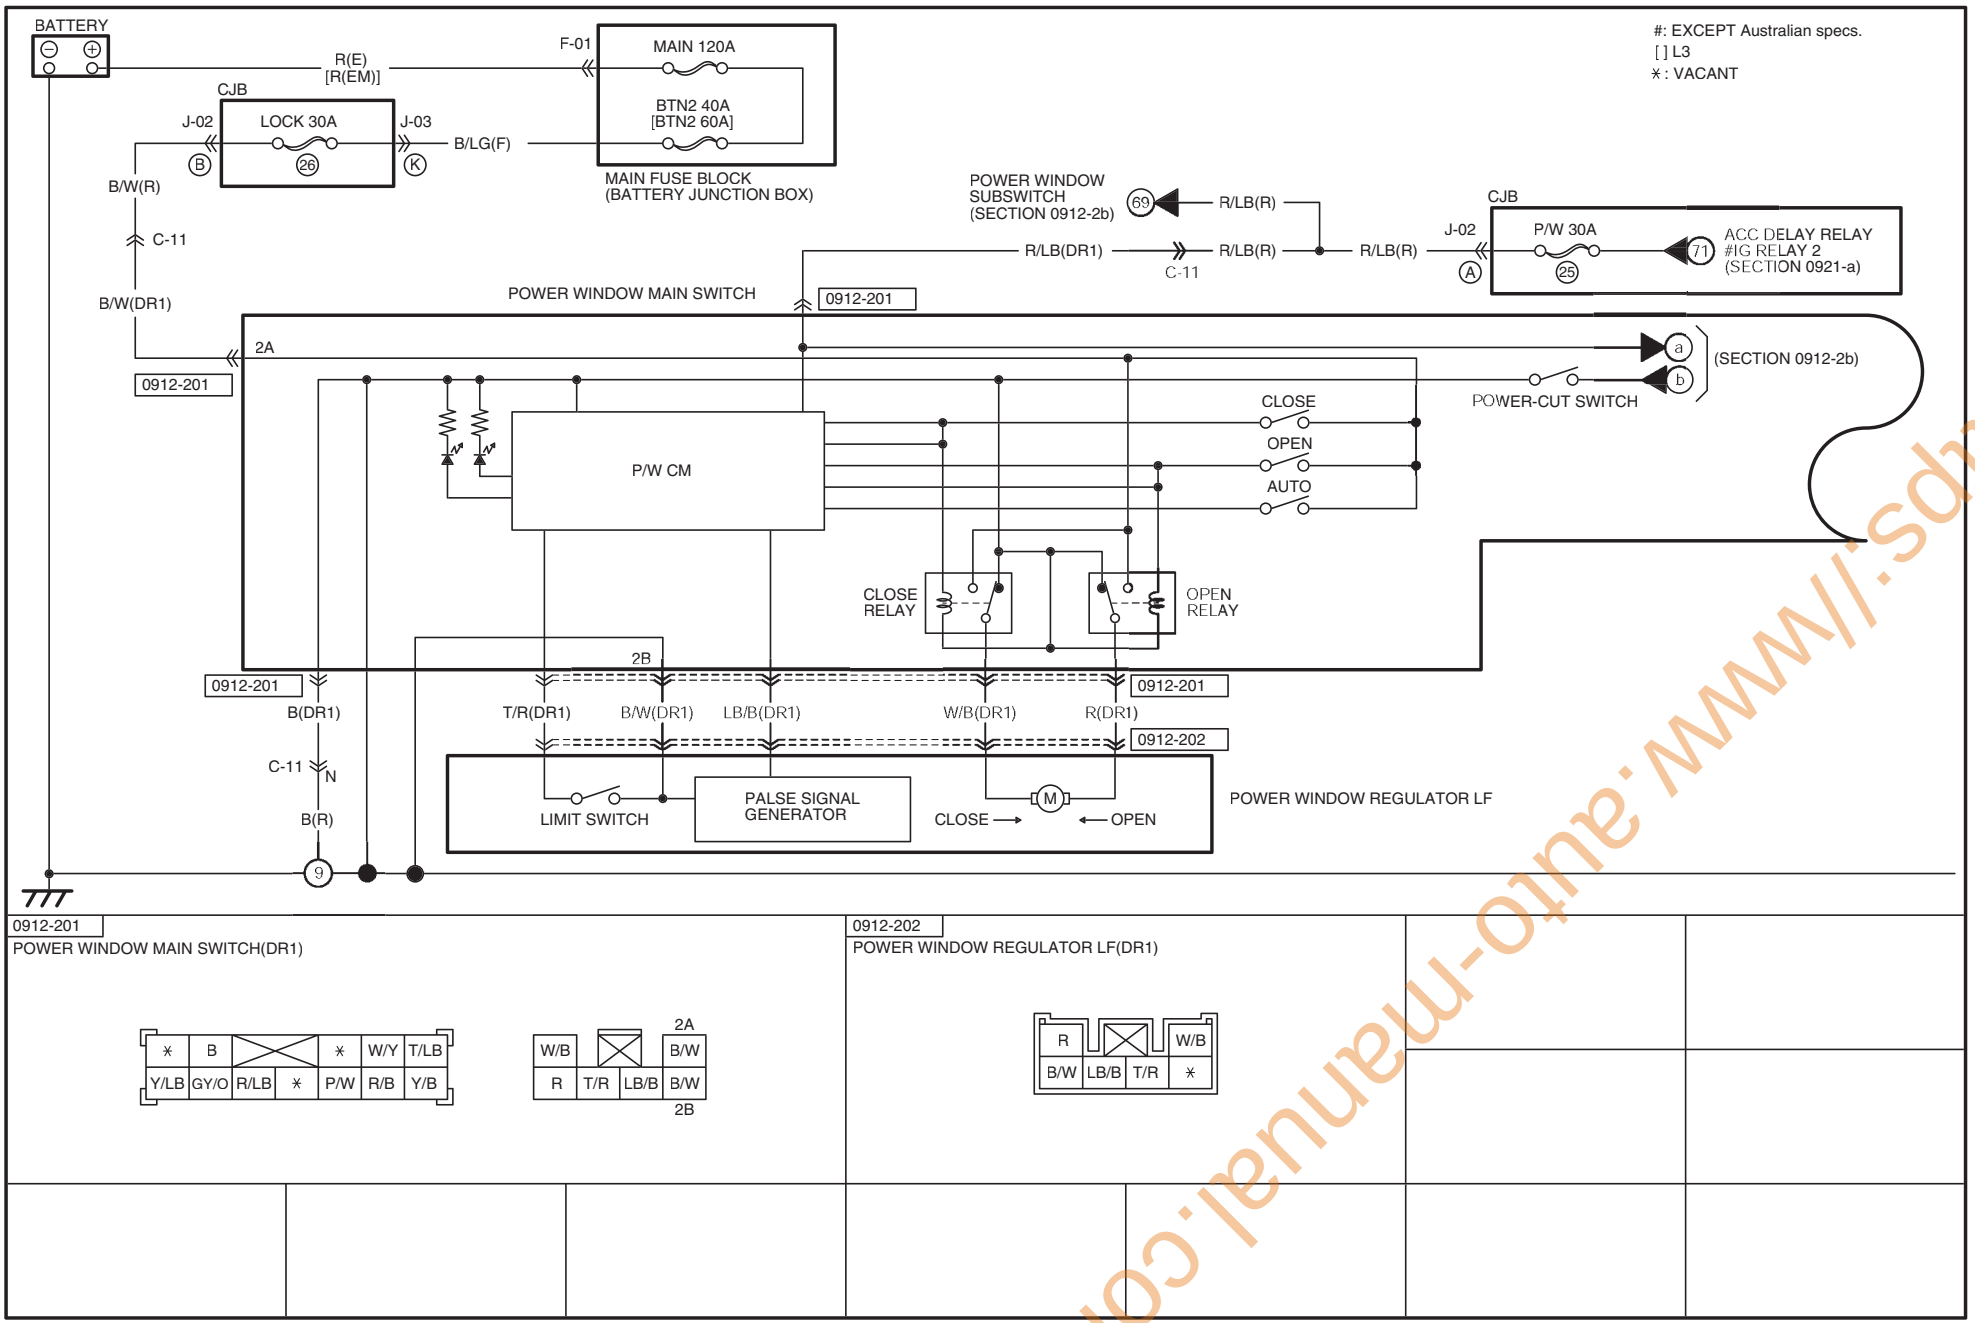


https://www.auto-manual.com/

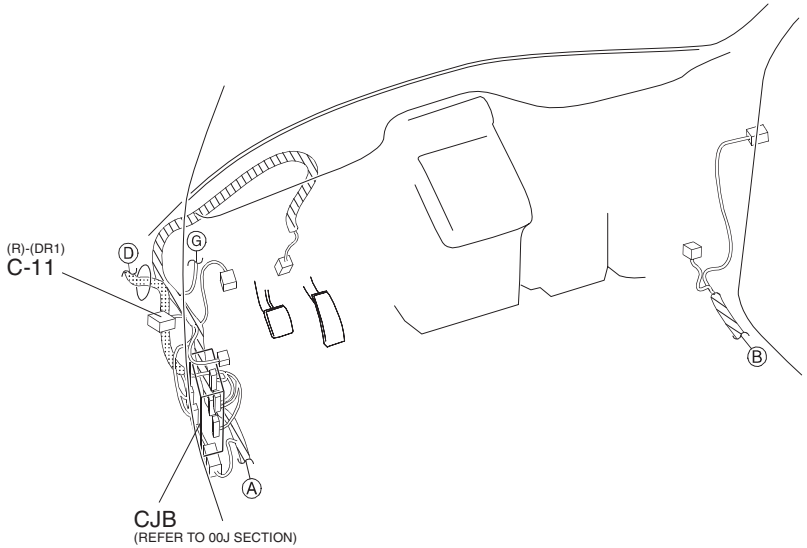

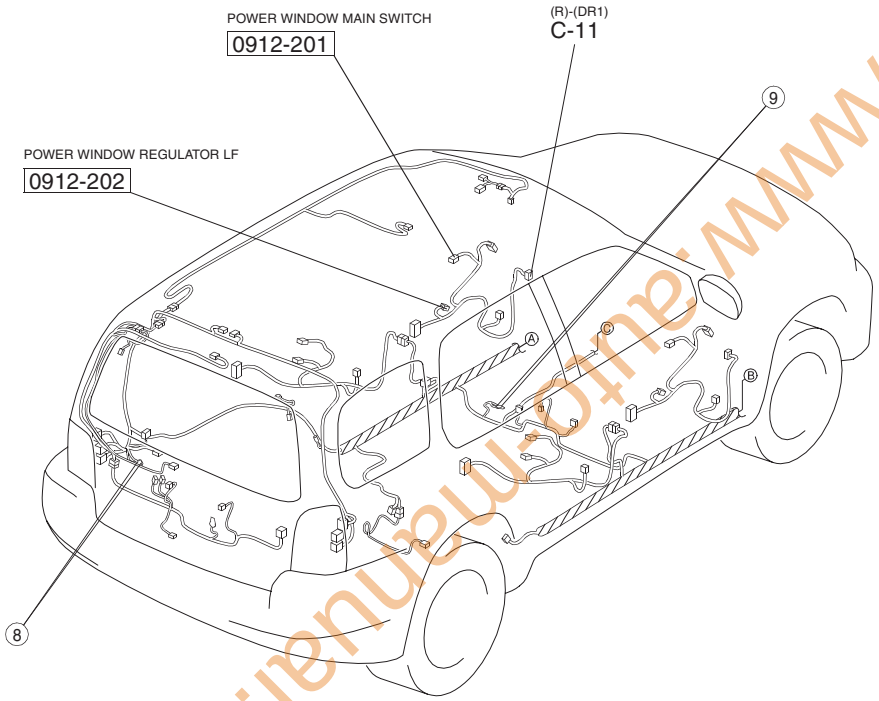

https://www.automanual.com/

POWER WINDOW SYSTEM (WITH AUTO SWITCH)

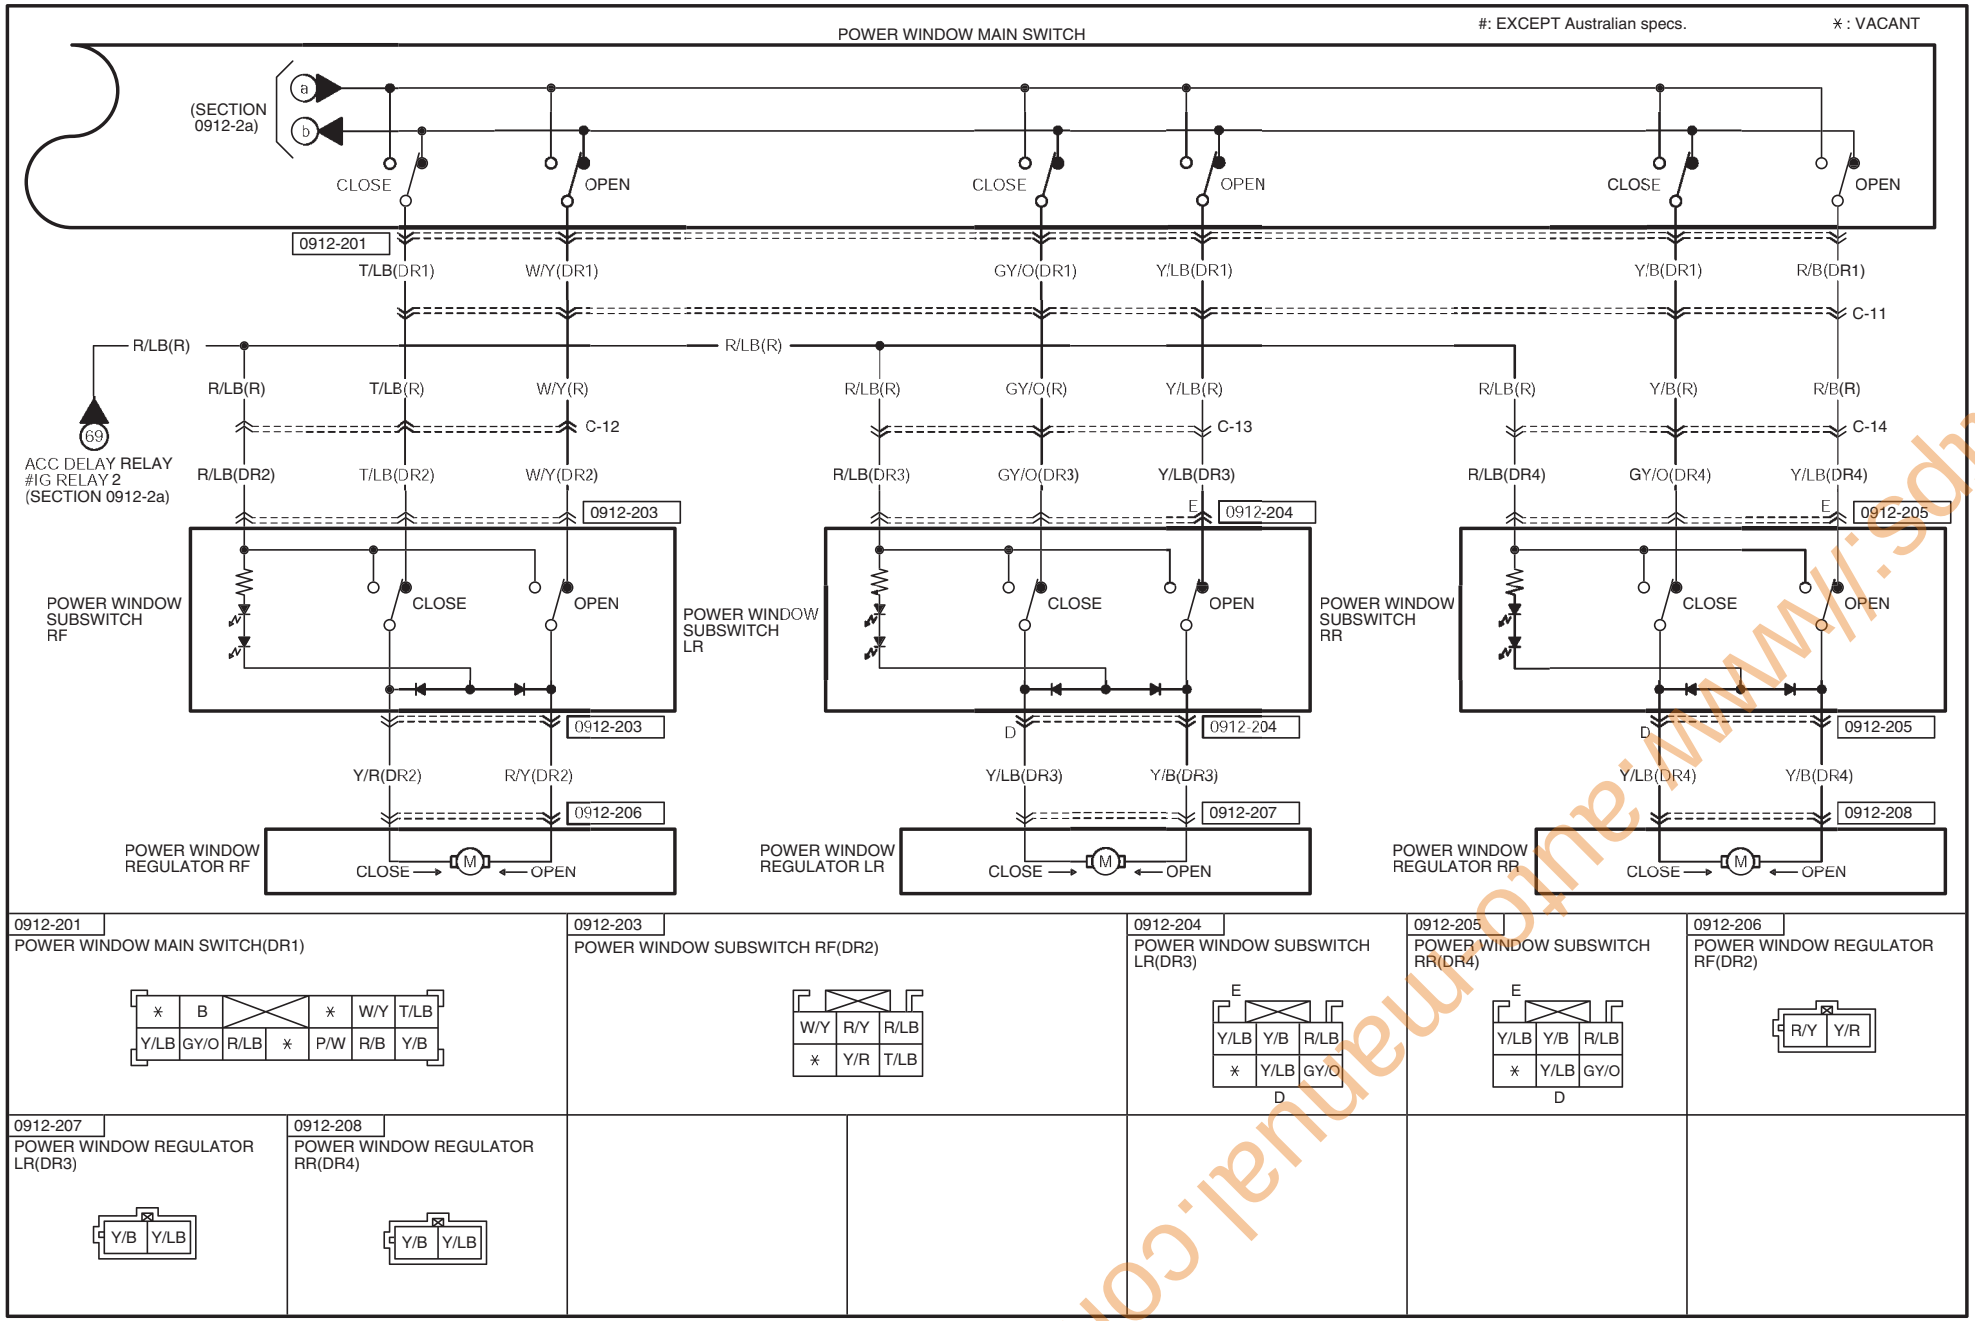

0912-201 POWER WINDOW MAIN SWITCH(DR1)

∗	B		∗	W/Y	T/LB	
Y/LB	GY/O	R/LB	∗	P/W	R/B	Y/B

0912-203 POWER WINDOW SUBSWITCH RF(DR2)

W/Y	R/Y	R/LB
∗	Y/R	T/LB

0912-204 POWER WINDOW SUBSWITCH LR(DR3)

E

Y/LB	Y/B	R/LB
∗	Y/LB	GY/O

D

0912-205 POWER WINDOW SUBSWITCH RR(DR4)

E

Y/LB	Y/B	R/LB
∗	Y/LB	GY/O

D

0912-206 POWER WINDOW REGULATOR RF(DR2)

R/Y	Y/R


0912-207 POWER WINDOW REGULATOR LR(DR3)

Y/B	Y/LB

0912-208 POWER WINDOW REGULATOR RR(DR4)


Y/B	Y/LB

http://www.autoManual.com/

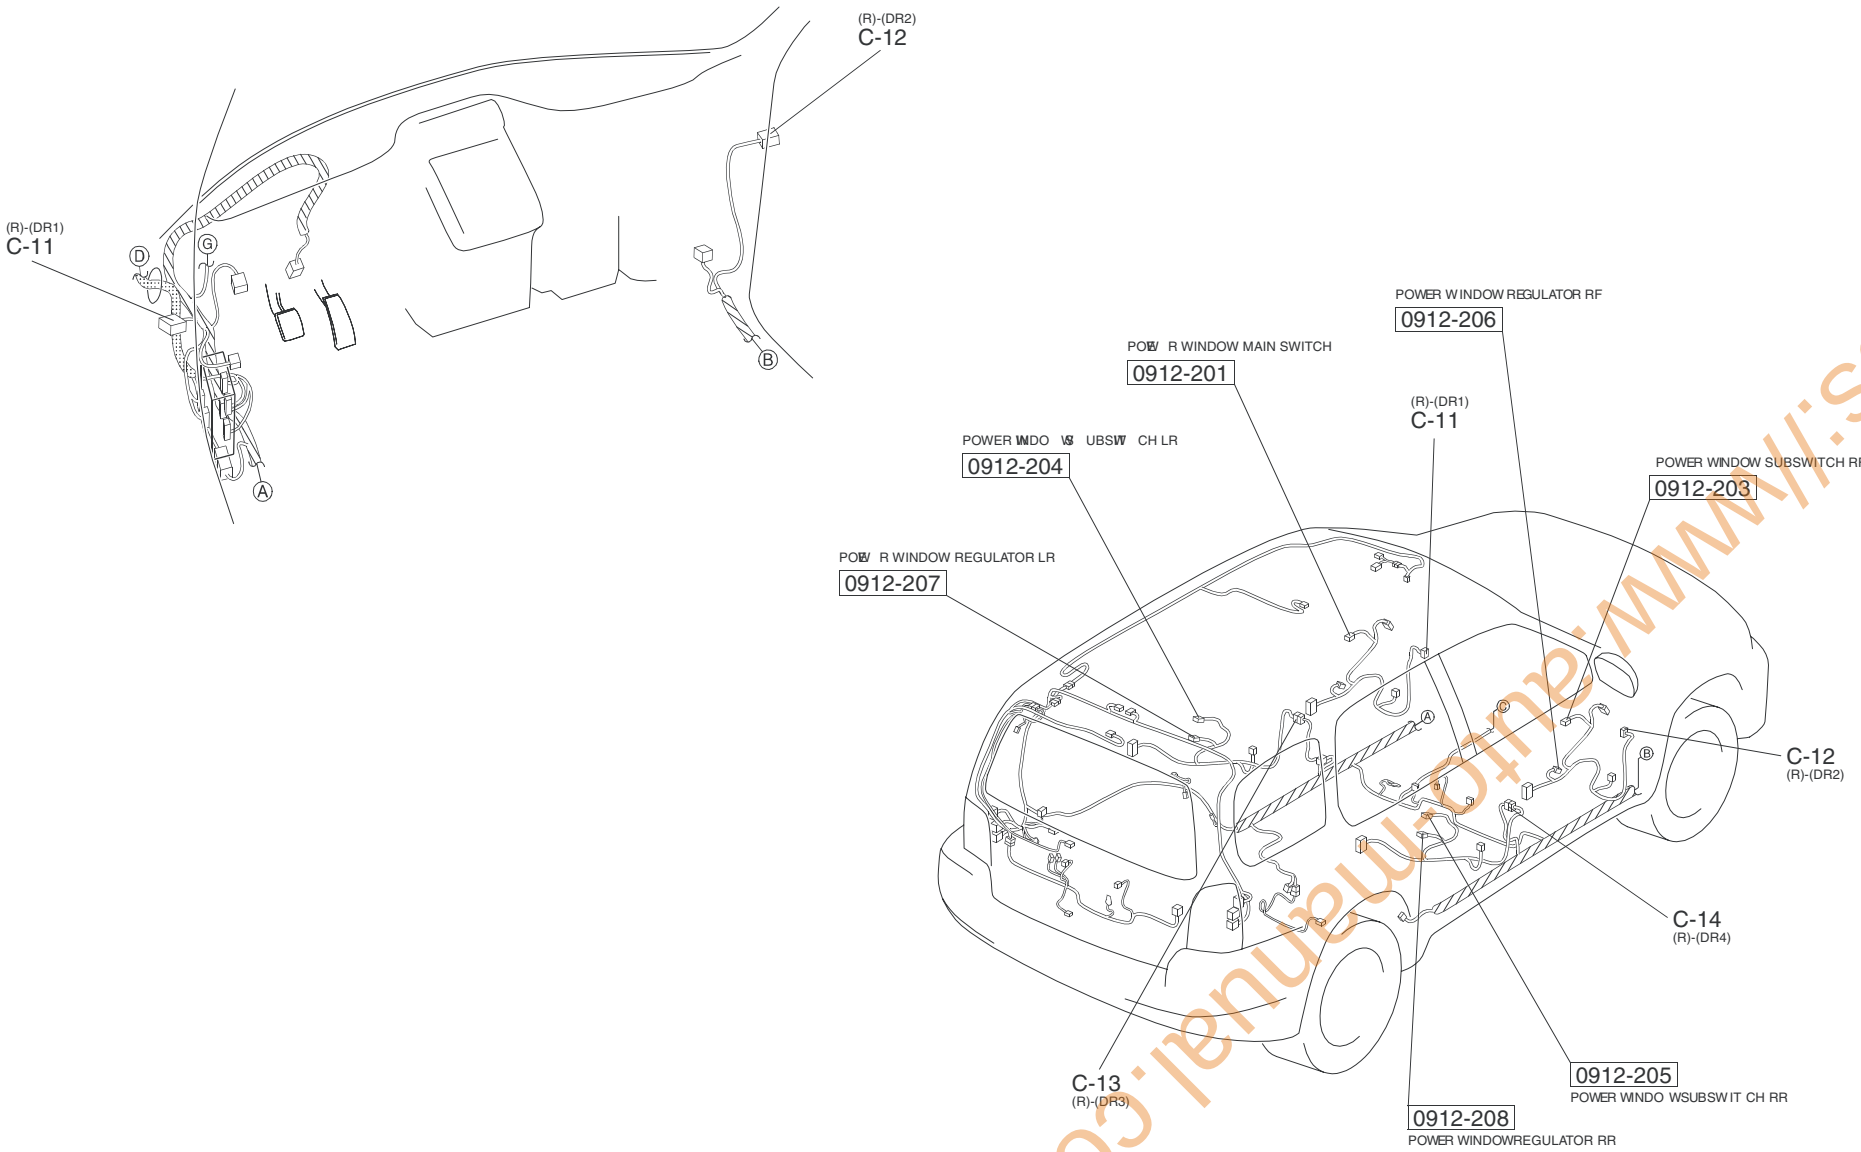



https://www.automanual.com/

POWER WINDOW SYSTEM (WITHOUT AUTO SWITCH)

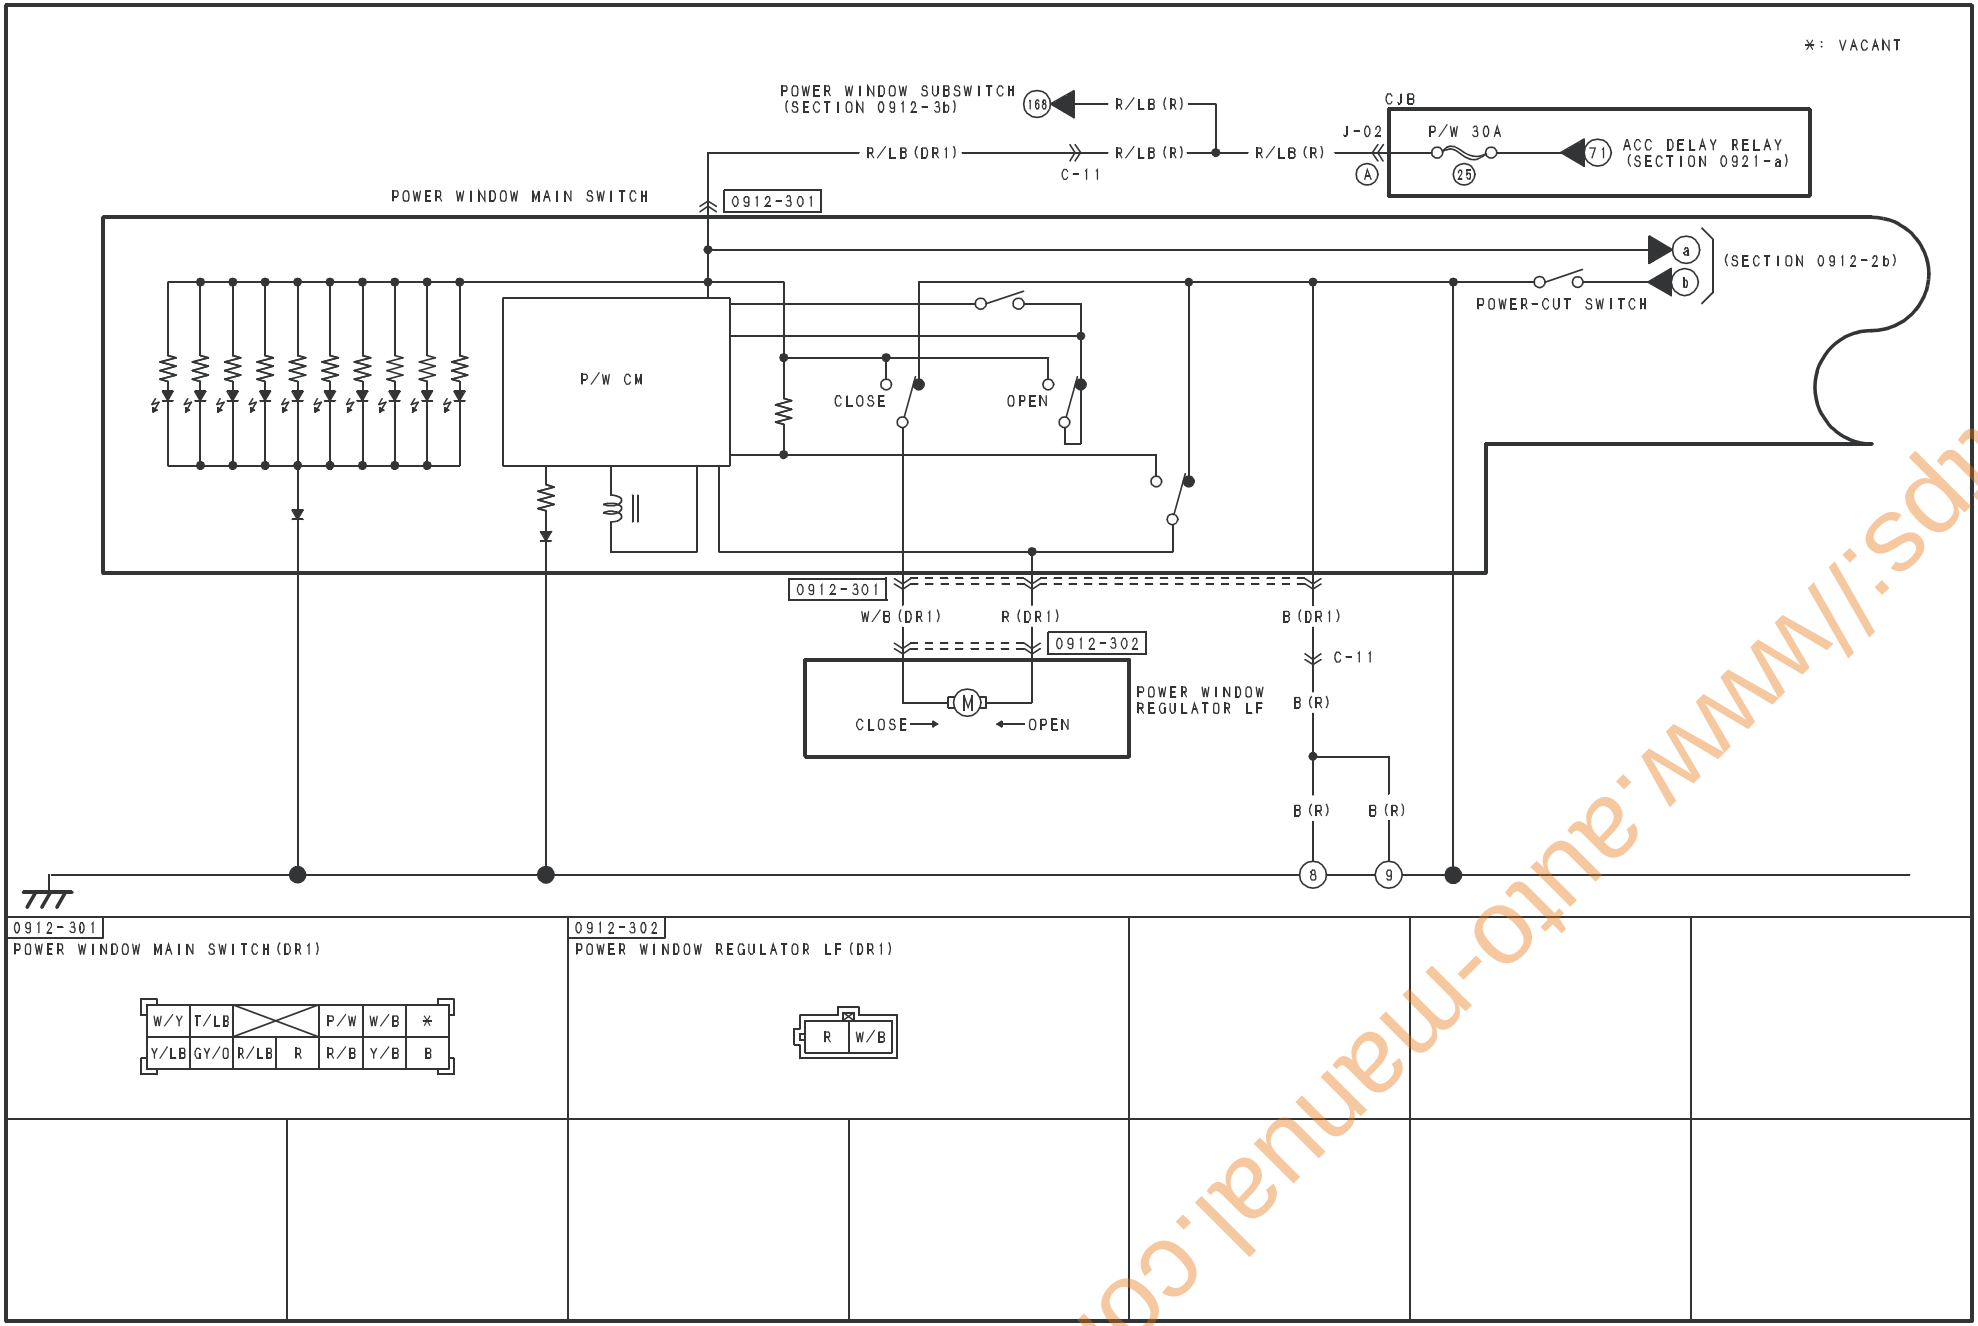


https://www.auto-manual.com/

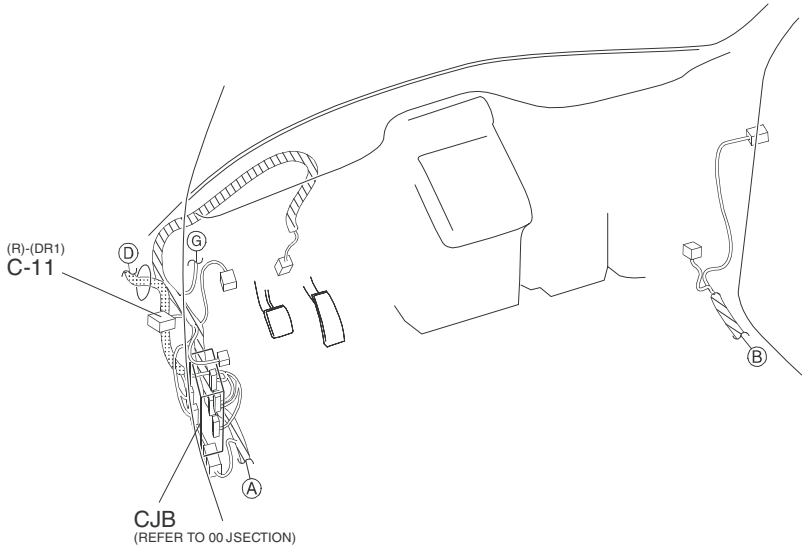

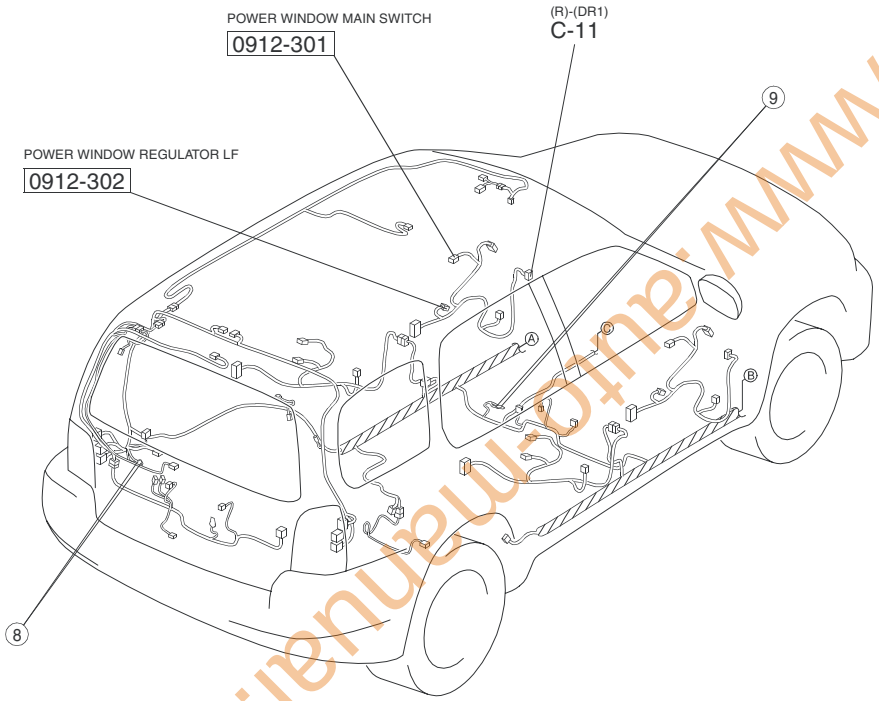

https://www.automanual.com/

POWER WINDOW SYSTEM(WITHOUT AUTO SWITCH)

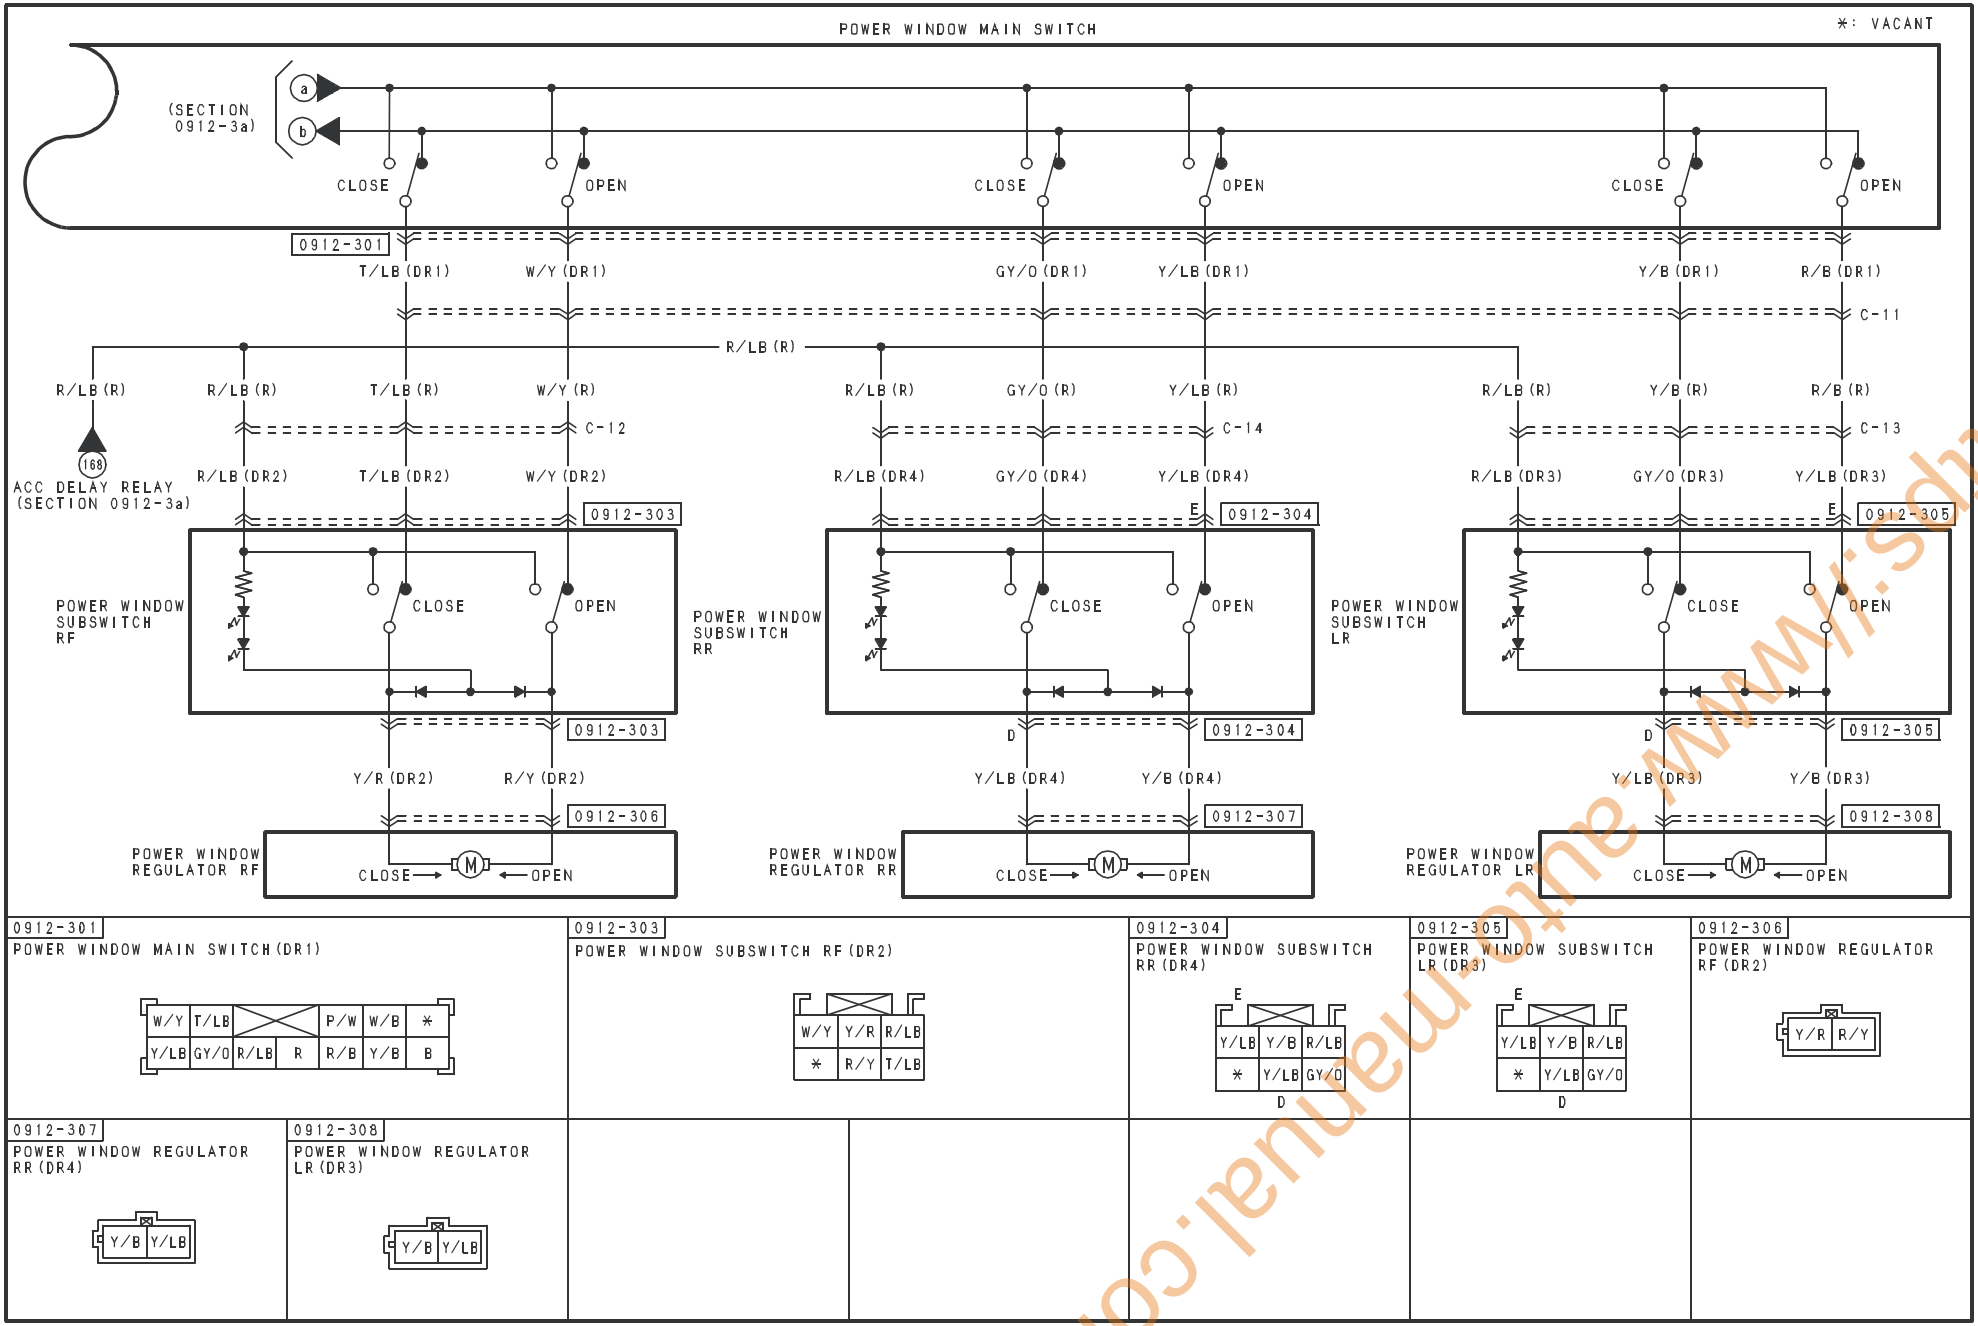

0912-301 POWER WINDOW MAIN SWITCH (DR1)

W/Y	T/LB		P/W	W/B	*	
Y/LB	GY/O	R/LB	R	R/B	Y/B	B

0912-303 POWER WINDOW SUBSWITCH RF (DR2)

W/Y	Y/R	R/LB
*	R/Y	T/LB

0912-304 POWER WINDOW SUBSWITCH RR (DR4)

E

Y/LB	Y/B	R/LB
*	Y/LB	GY/O

D

0912-305 POWER WINDOW SUBSWITCH LR (DR3)

E

Y/LB	Y/B	R/LB
*	Y/LB	GY/O

D

0912-306 POWER WINDOW REGULATOR RF (DR2)

Y/R	R/Y


0912-307 POWER WINDOW REGULATOR RR (DR4)

Y/B	Y/LB


0912-308 POWER WINDOW REGULATOR LR (DR3)

Y/B	Y/LB

https://www.auto-manual.com/

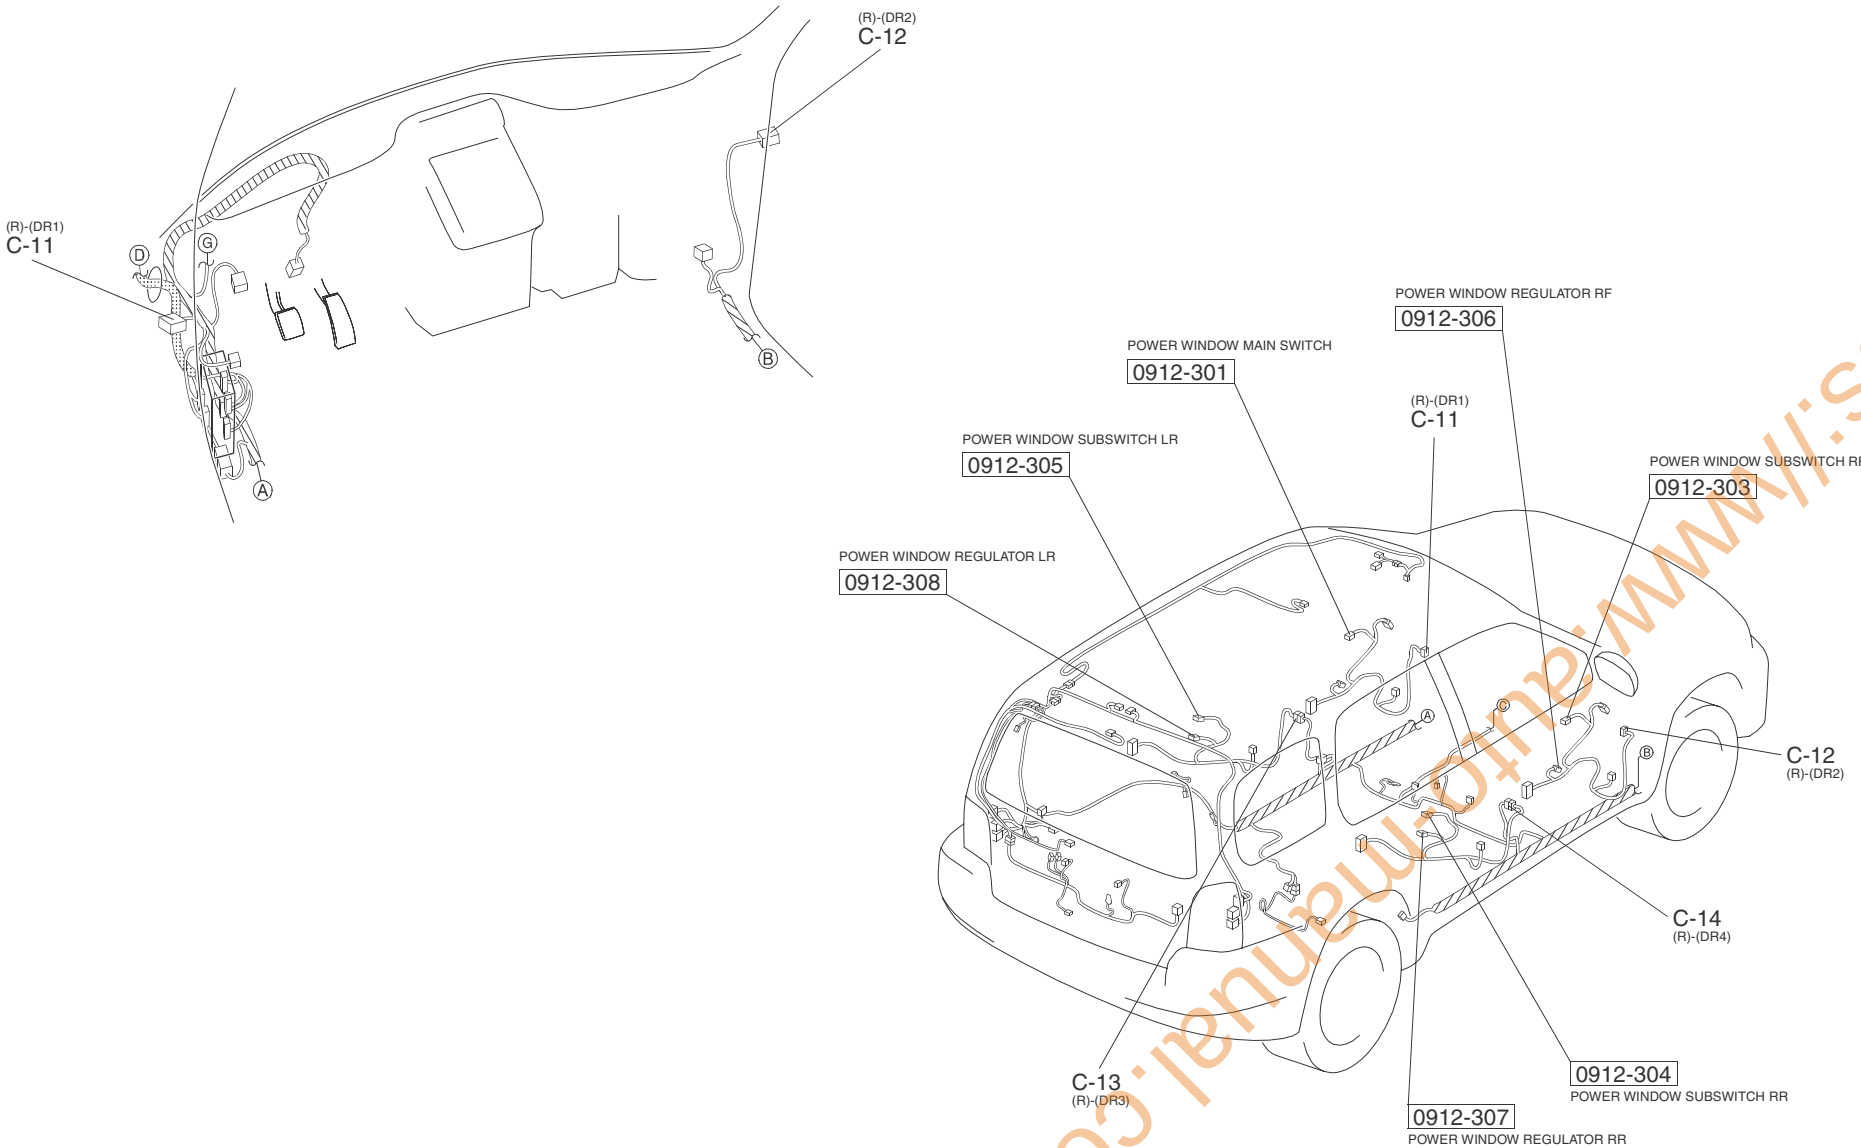

https://www.autoManual.com/

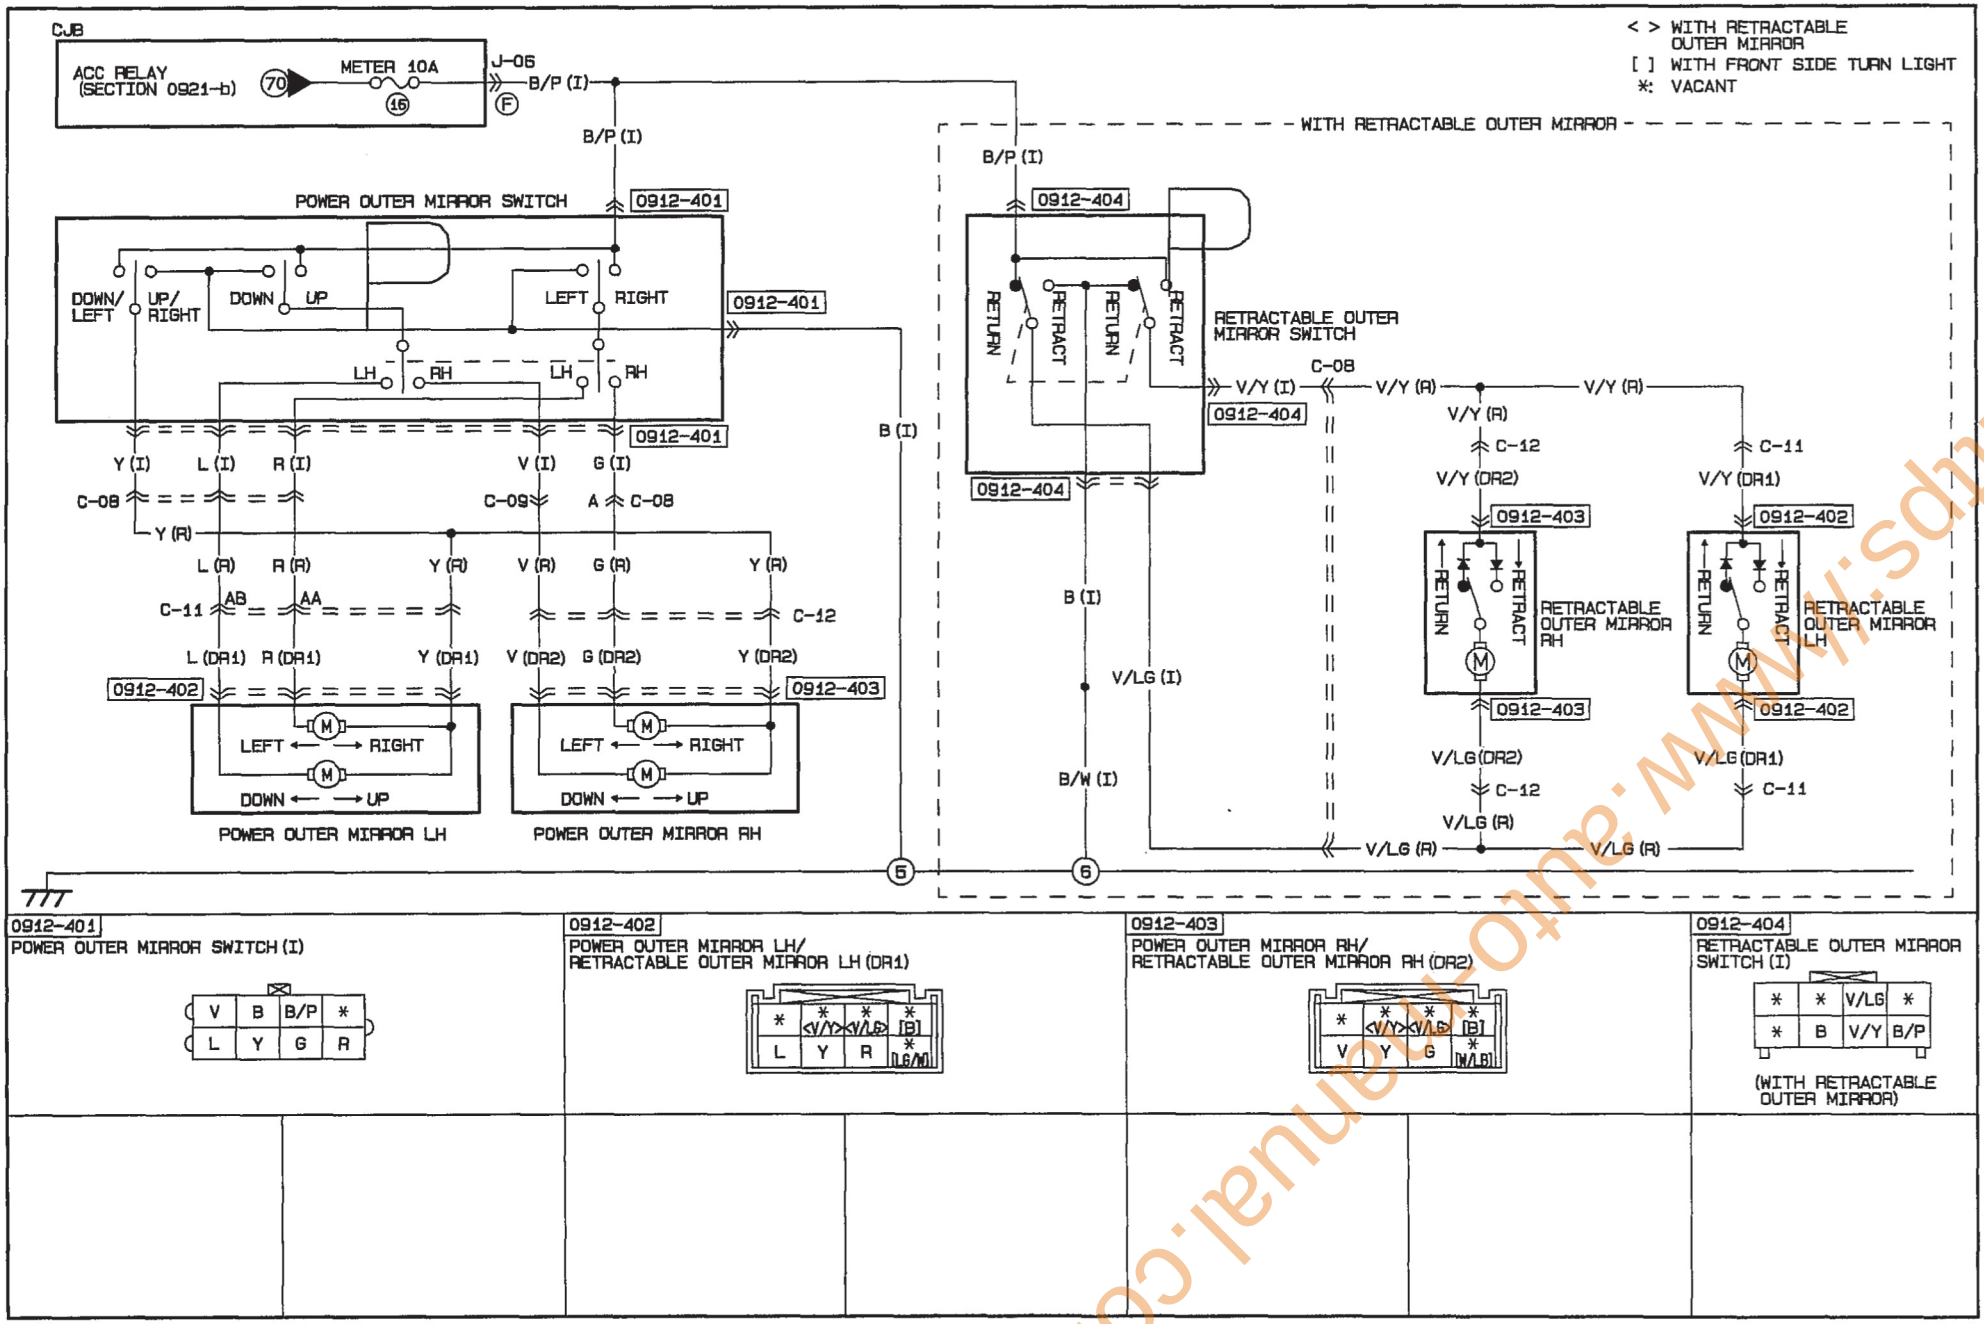

0912-401
POWER OUTER MIRROR SWITCH (I)

V	B	B/P	*
L	Y	G	R

0912-402
POWER OUTER MIRROR LH/
RETRACTABLE OUTER MIRROR LH (DR1)

*	* <V/Y>	* <V/LG>	* [B]	
L	Y	R	* [LG/W]	

0912-403
POWER OUTER MIRROR RH/
RETRACTABLE OUTER MIRROR RH (DR2)


*	* <V/Y>	* <V/LG>	* [B]	
V	Y	G	* [W/LB]	

0912-404
RETRACTABLE OUTER MIRROR SWITCH (I)


*	*	V/LG	*
*	B	V/Y	B/P

(WITH RETRACTABLE OUTER MIRROR)


https://www.auto-manual.com/

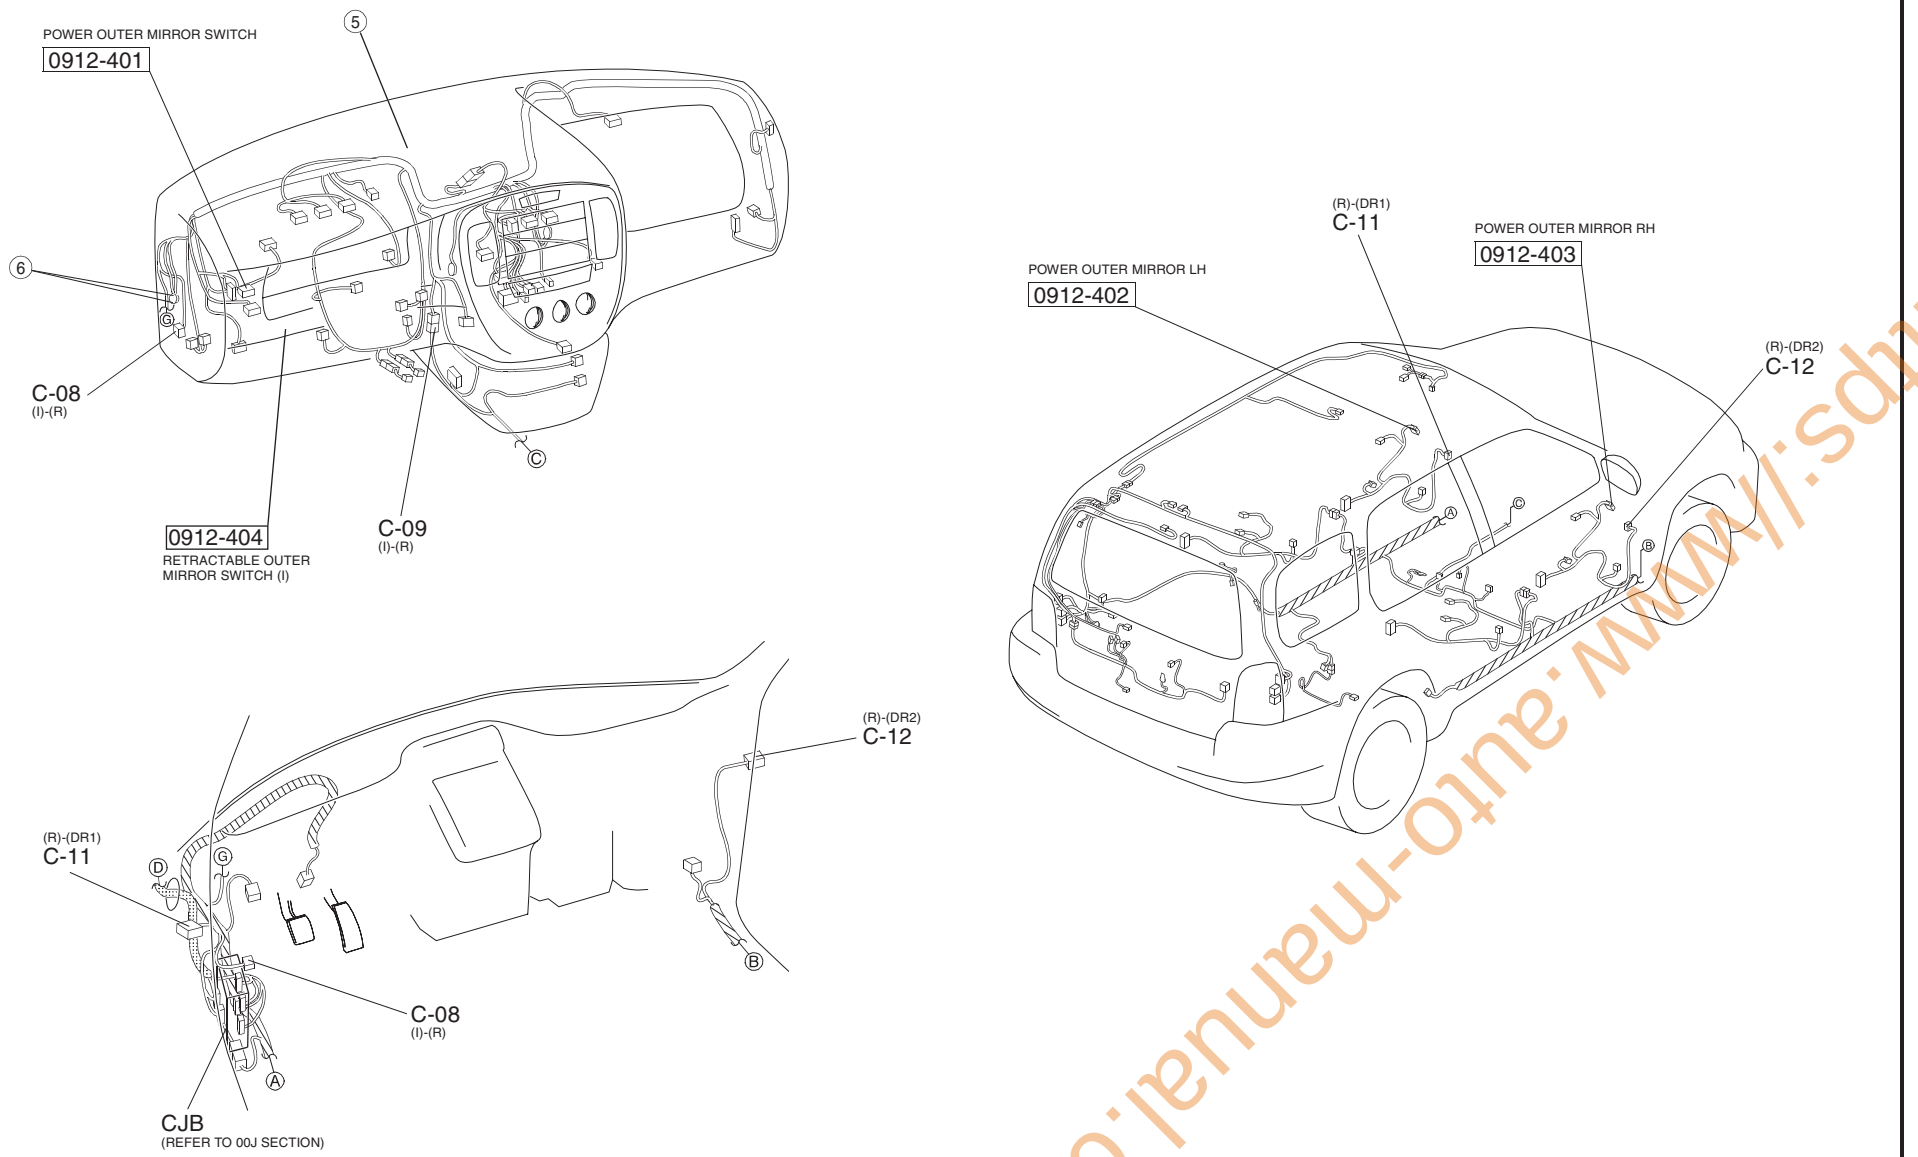

https://www.auto-manual.com/

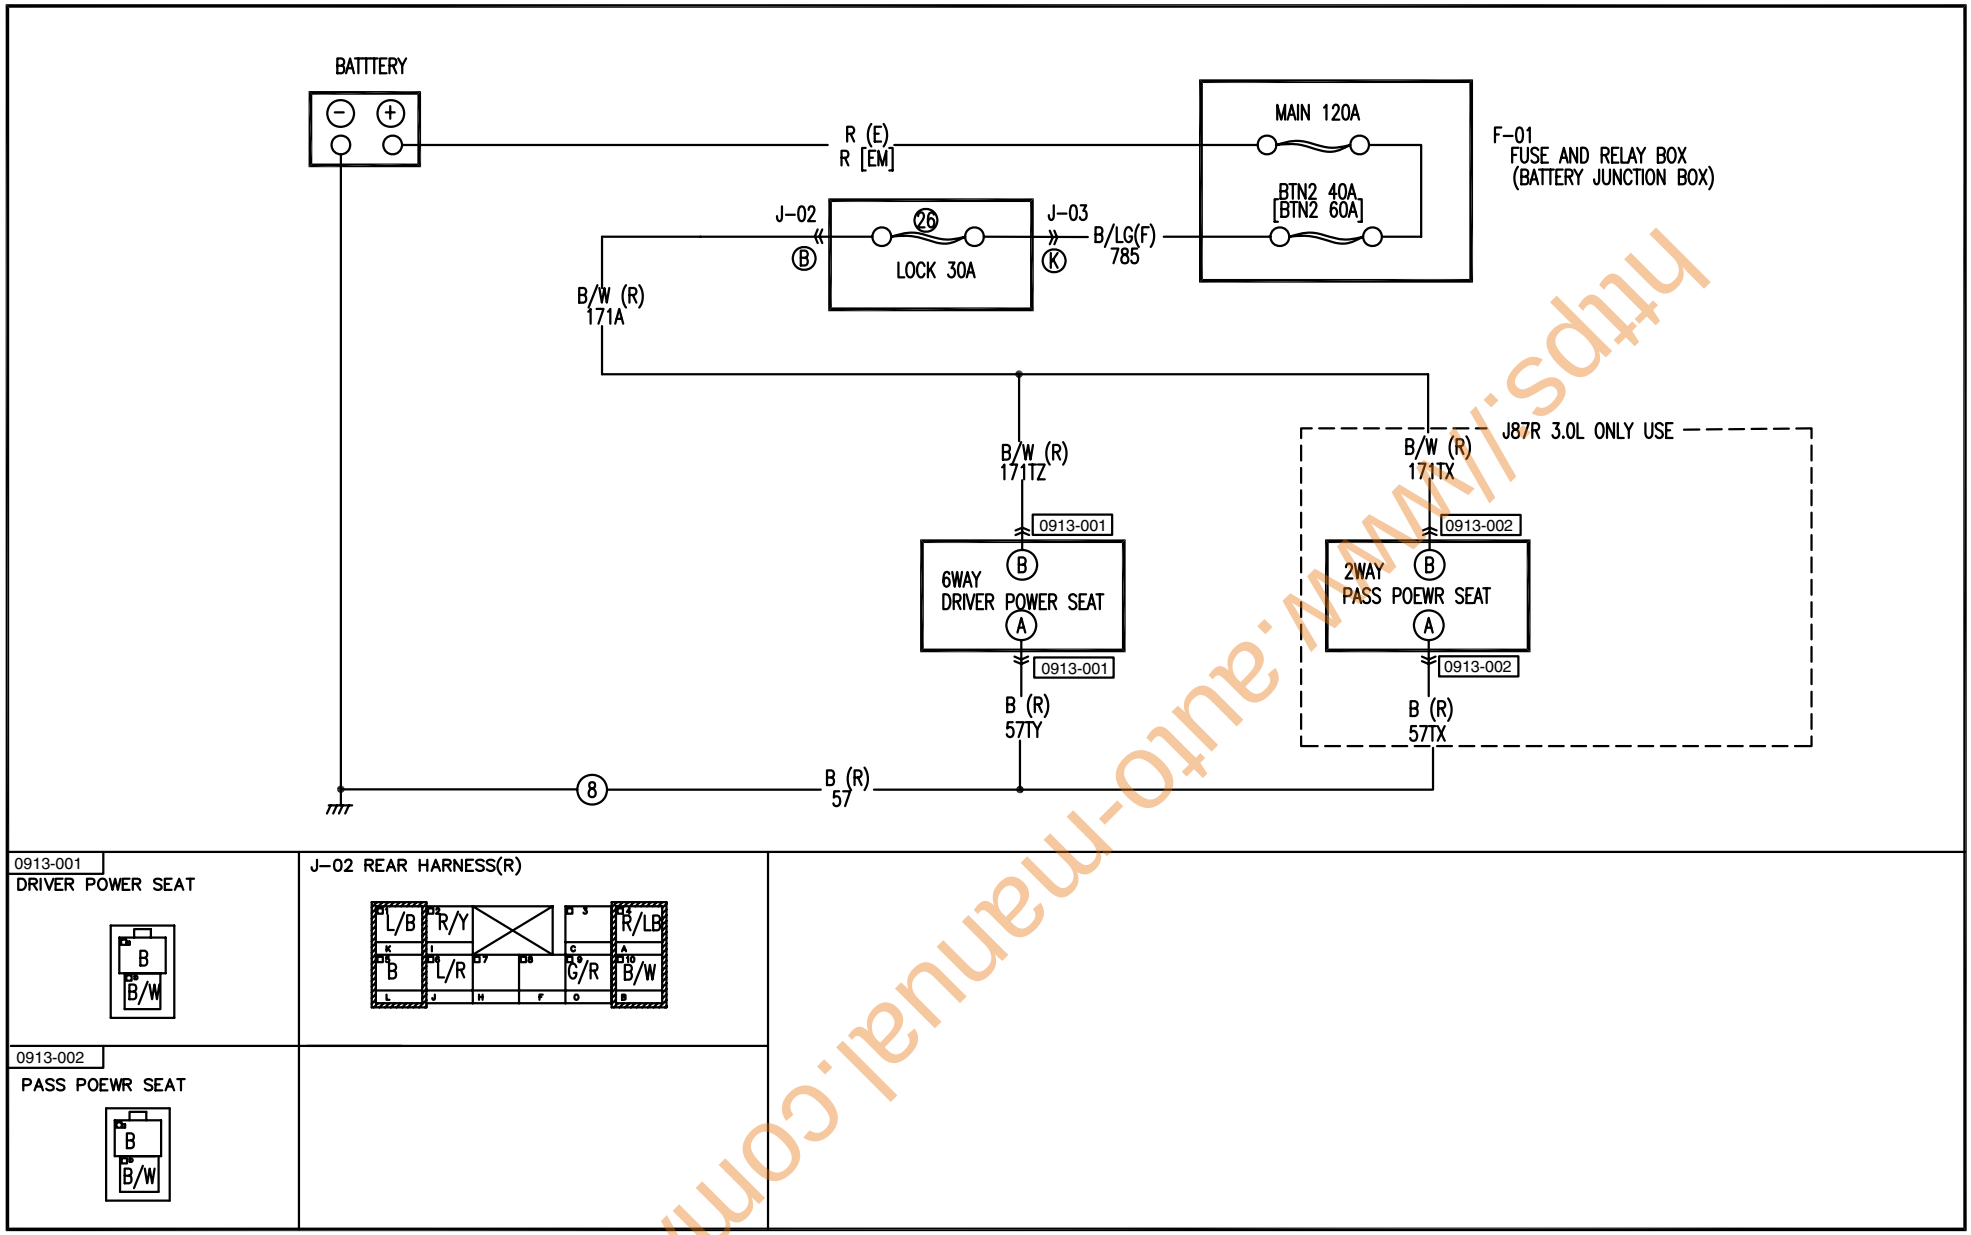


https://www.auto-manual.com/

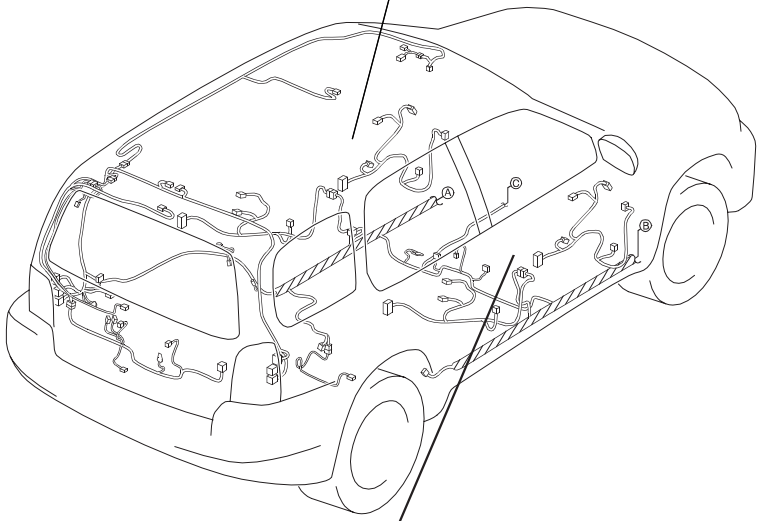


https://www.auto-manual.com/

POWER DOOR LOCK SYSTEM(WITHOUT DOUBLE LOCKING SYSTEM)

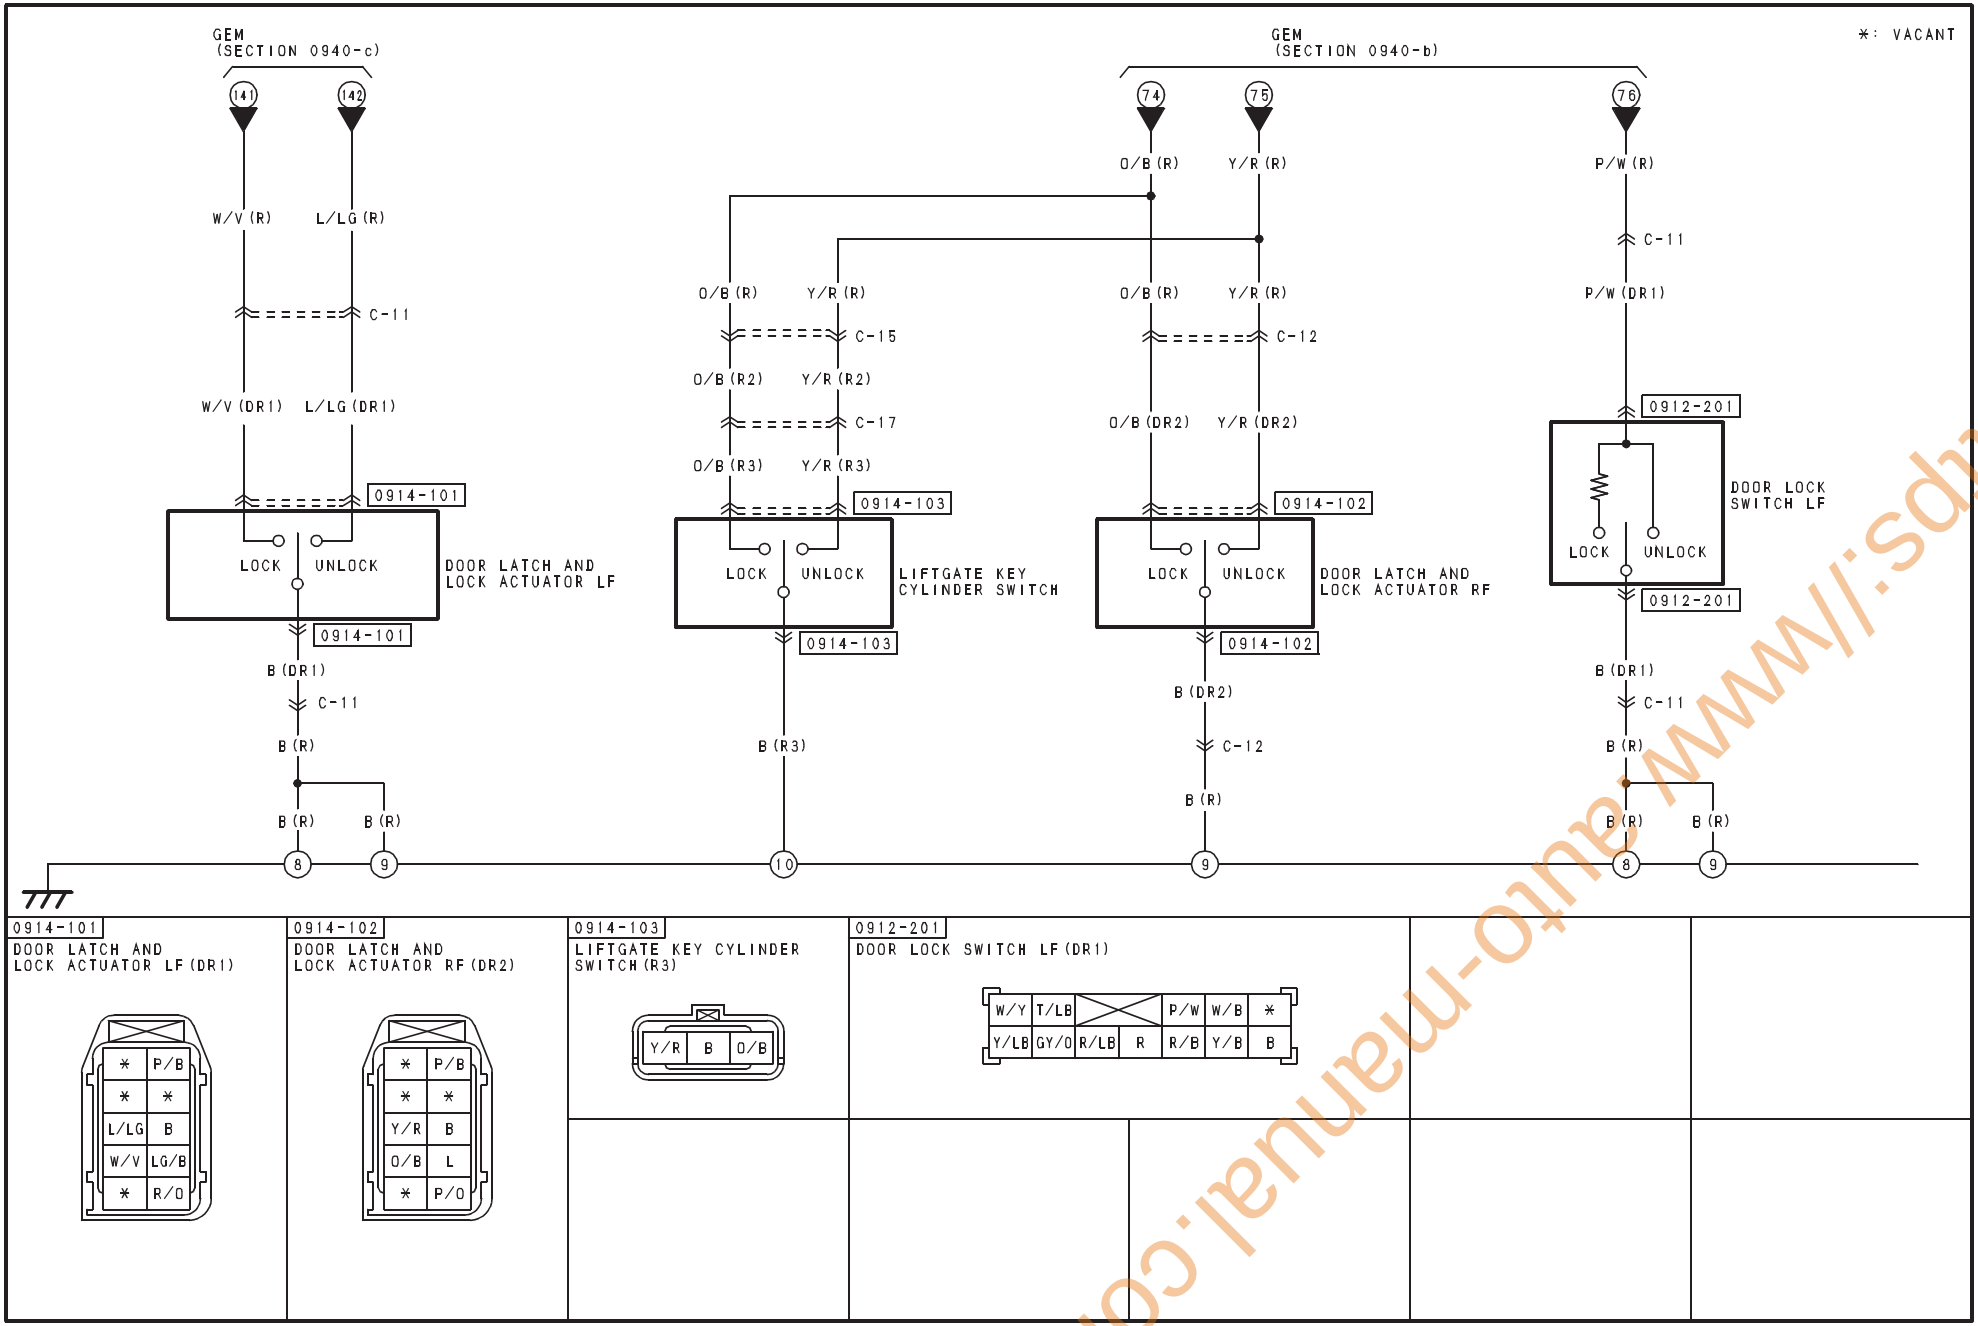


https://www.auto-manual.com/





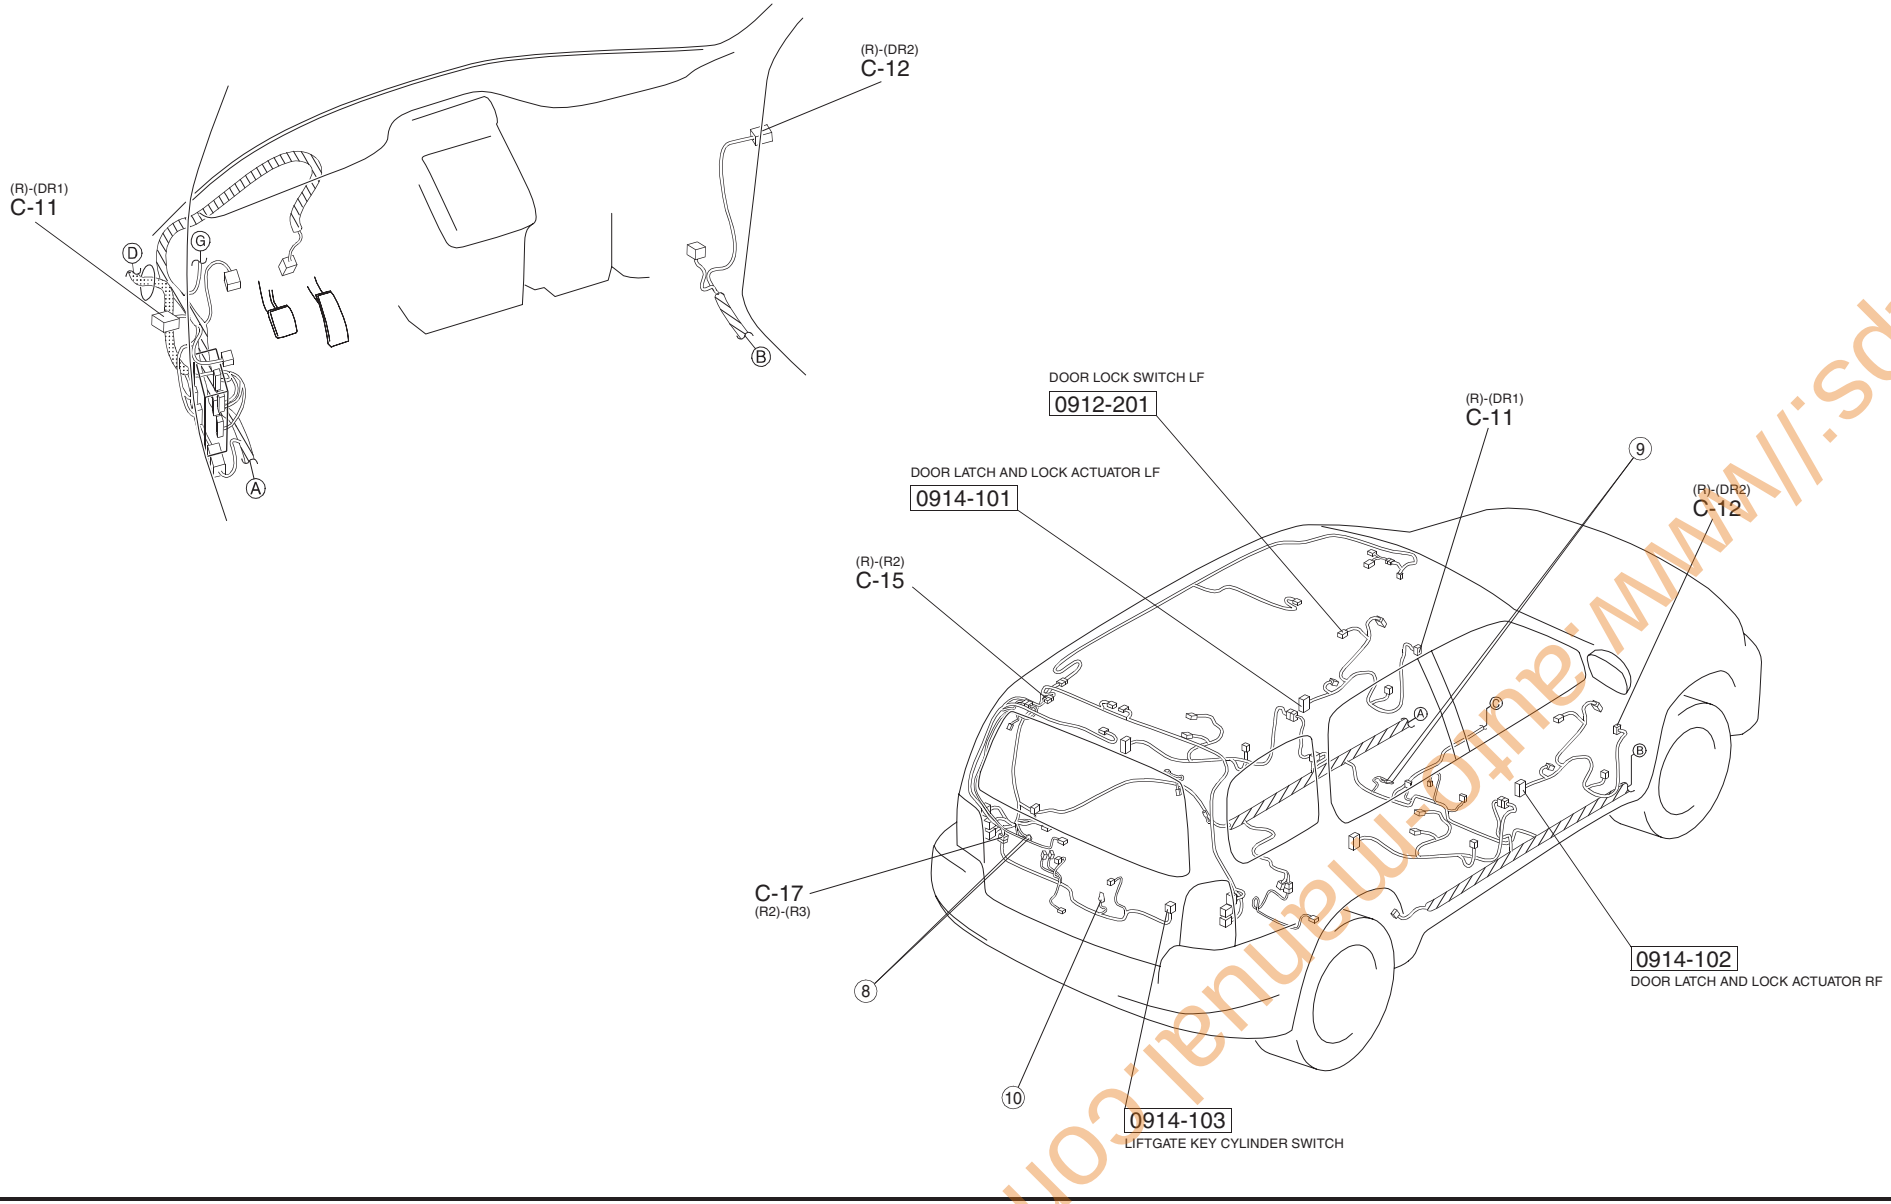


https://www.automanual.com/


POWER DOOR LOCK SYSTEM(WITHOUT DOUBLE LOCKING SYSTEM)

*: VACANT

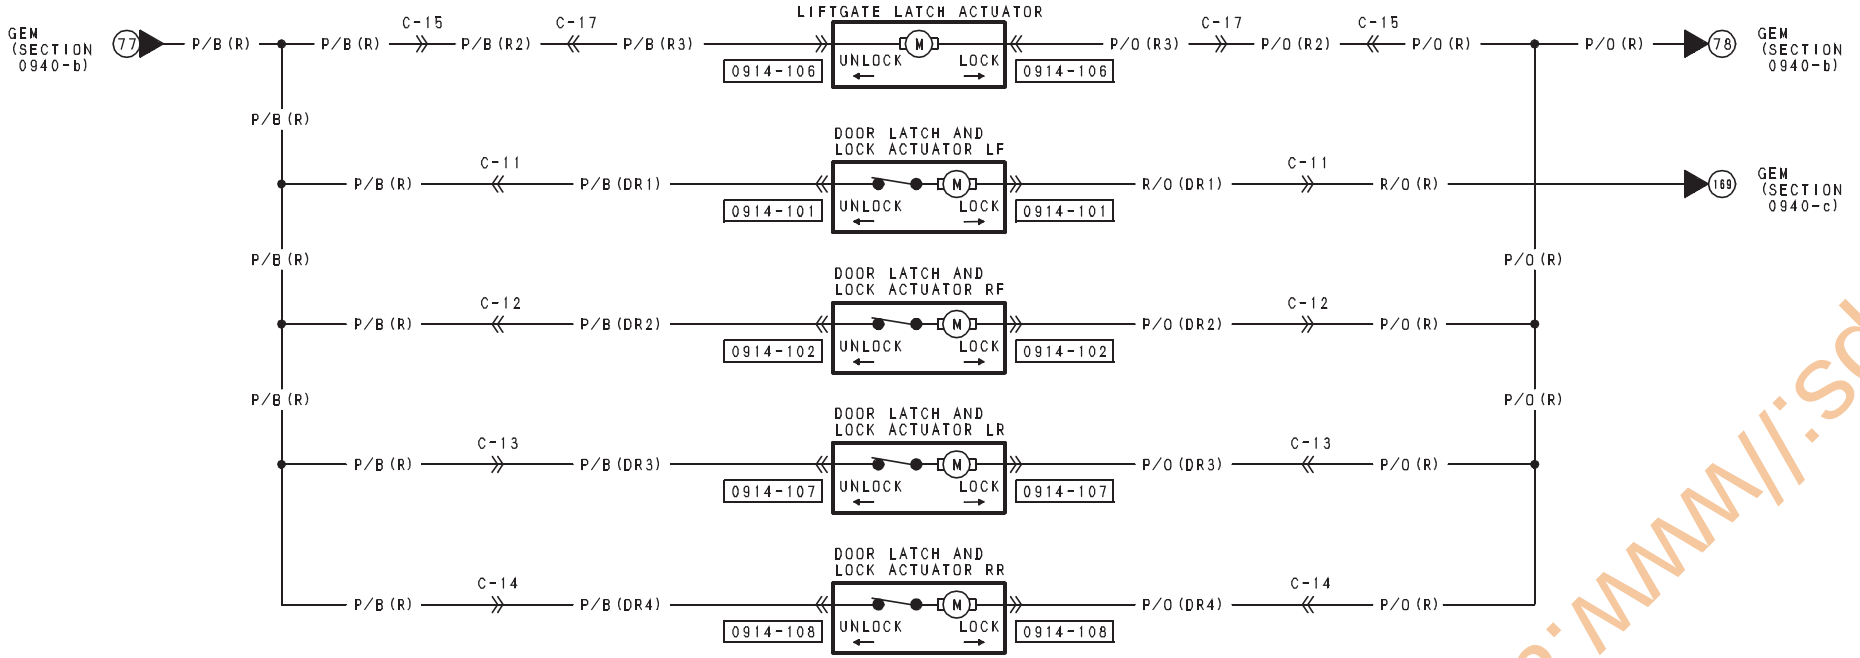


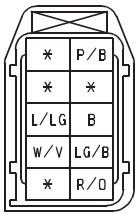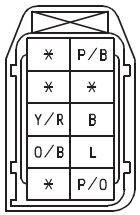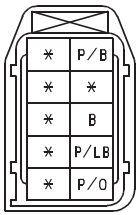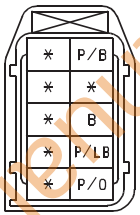0914-101	0914-102	0914-106	0914-107	0914-108		
DOOR LATCH AND LOCK ACTUATOR LF (DR1)	DOOR LATCH AND LOCK ACTUATOR RF (DR2)	LIFTGATE LATCH ACTUATOR (R3)	DOOR LATCH AND LOCK ACTUATOR LR (DR3)	DOOR LATCH AND LOCK ACTUATOR RR (DR4)		
						


https://www.auto-manual.com/

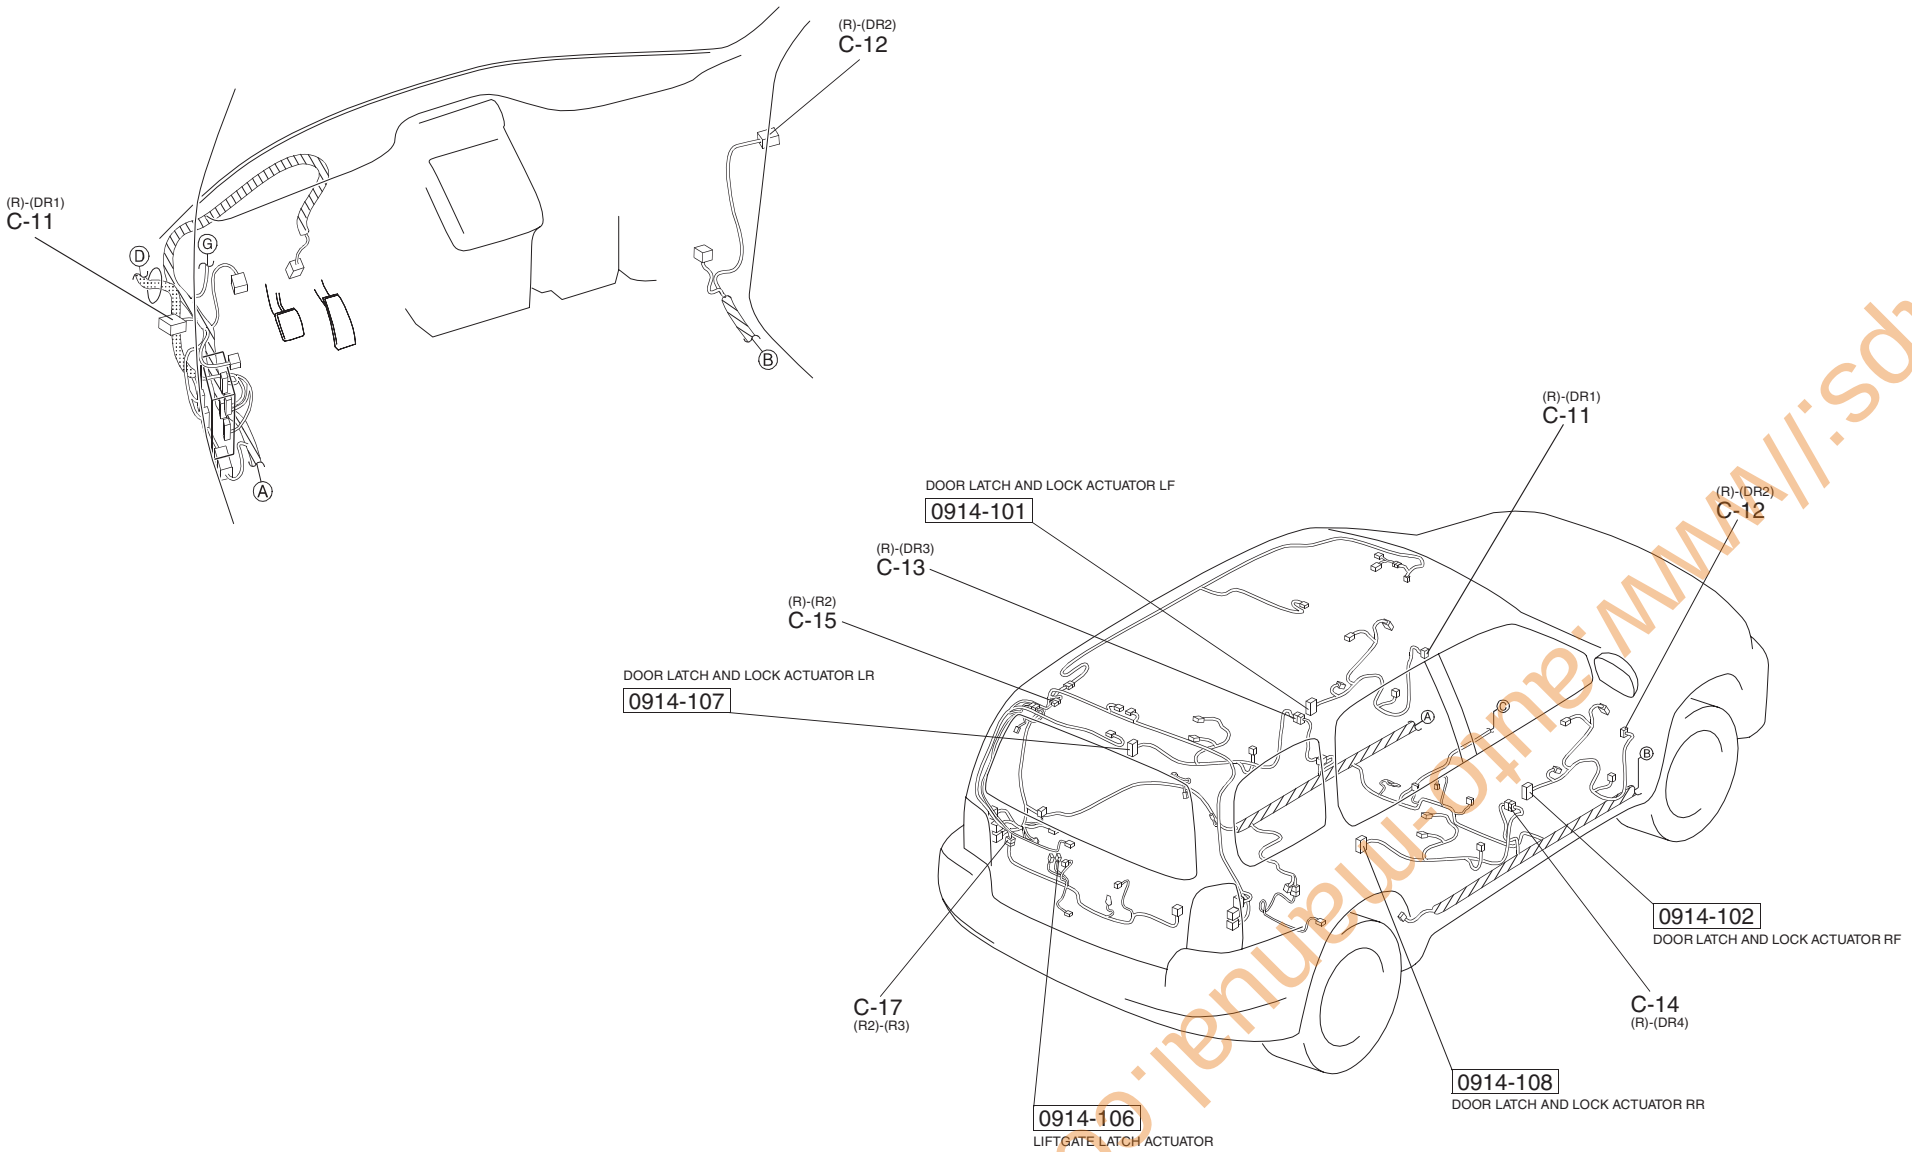



https://www.automanual.com/

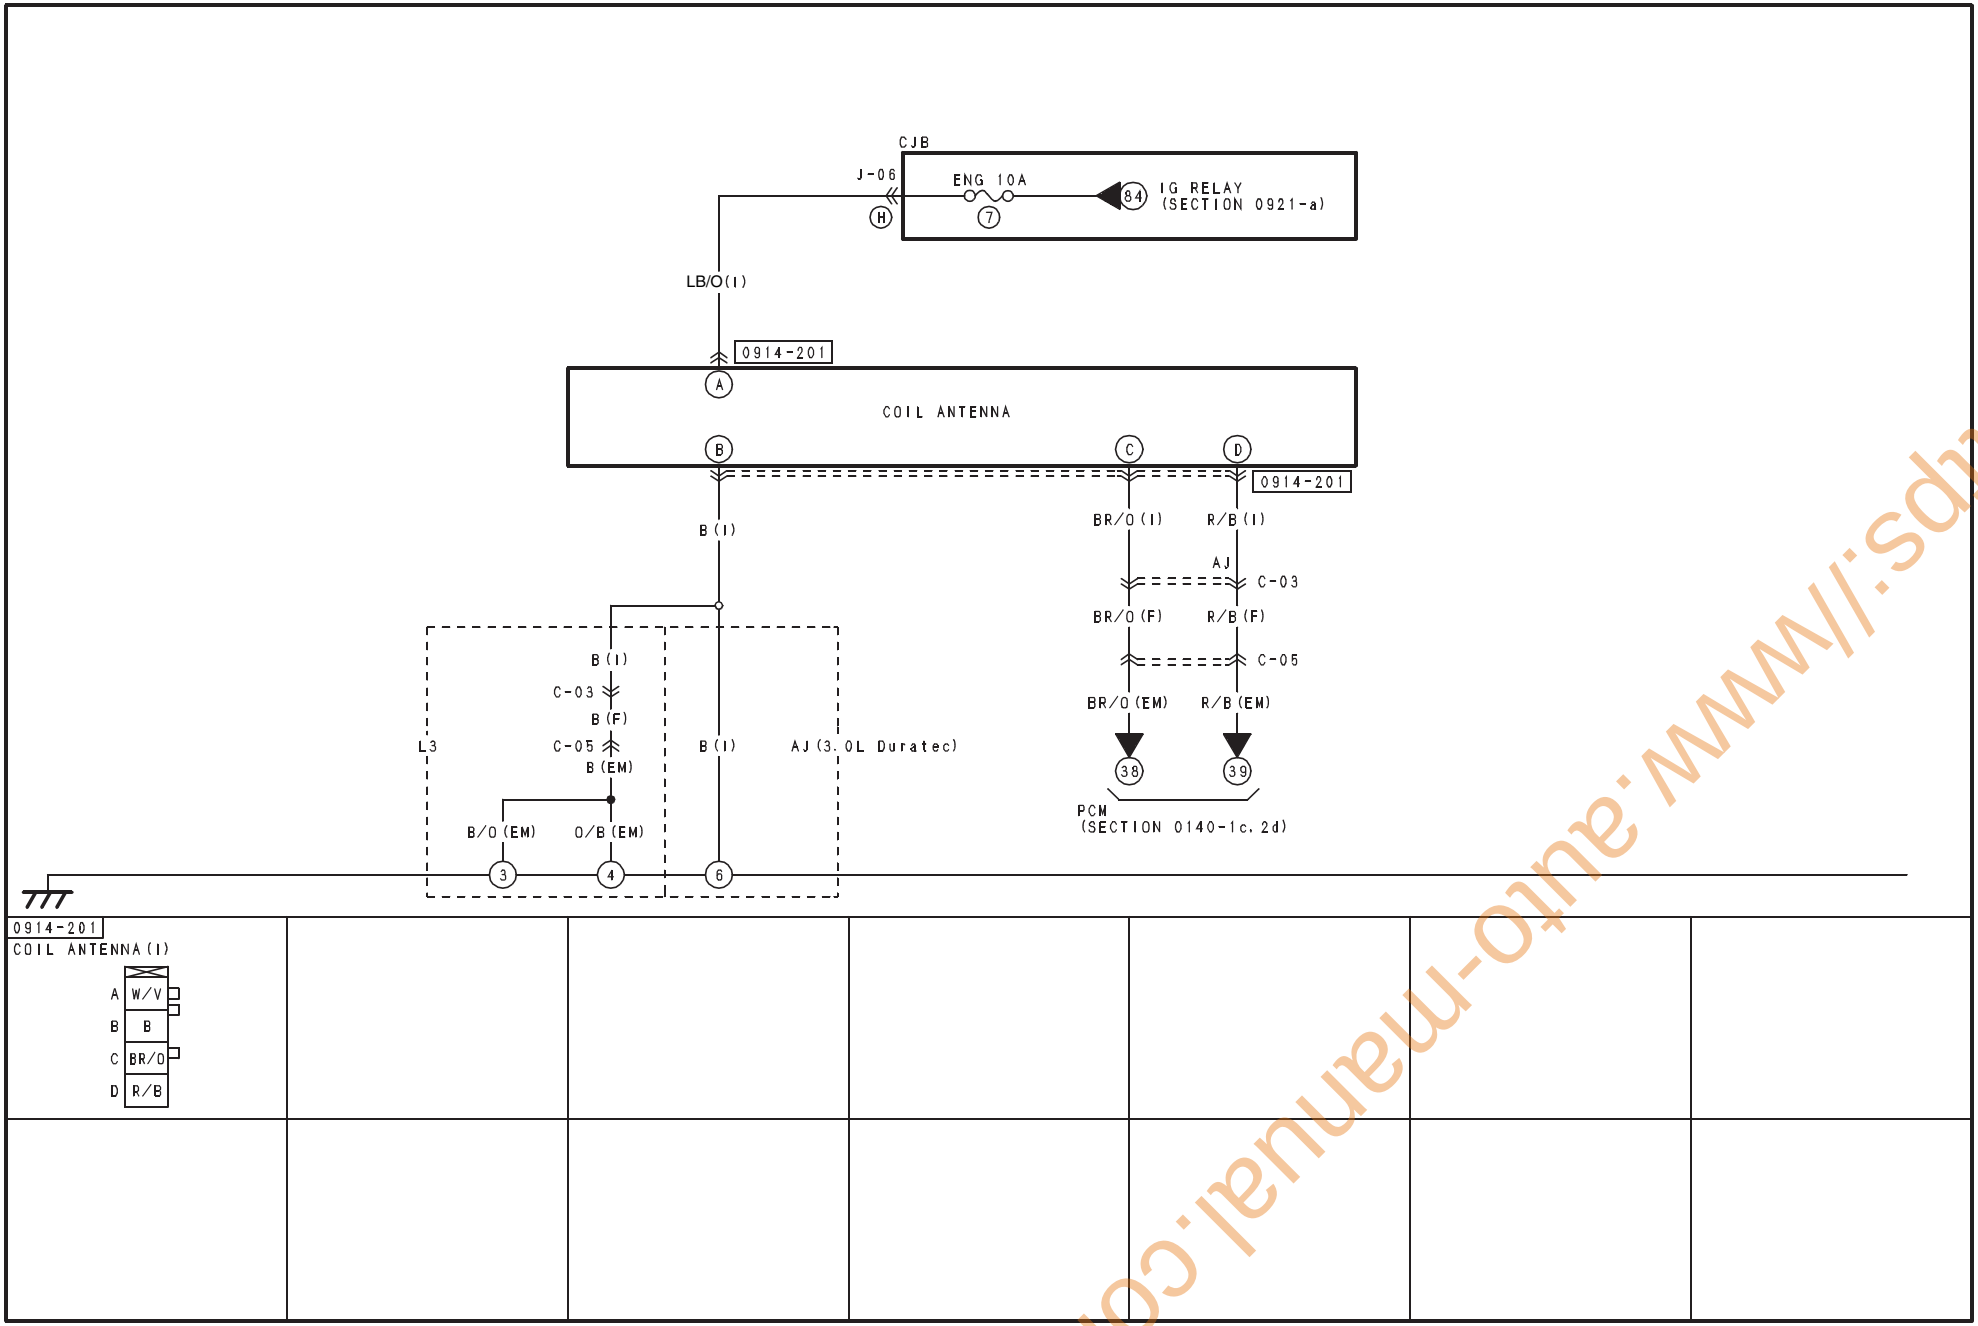


https://www.auto-manual.com/

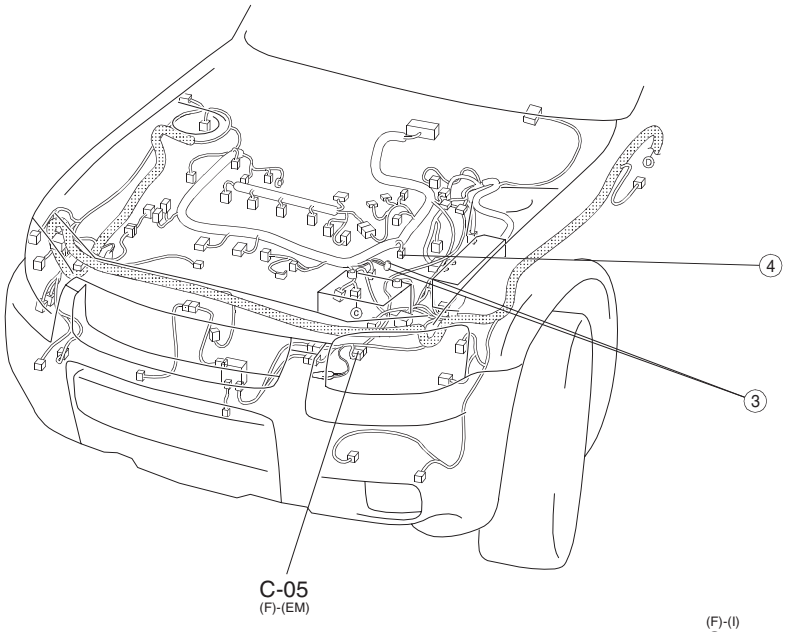

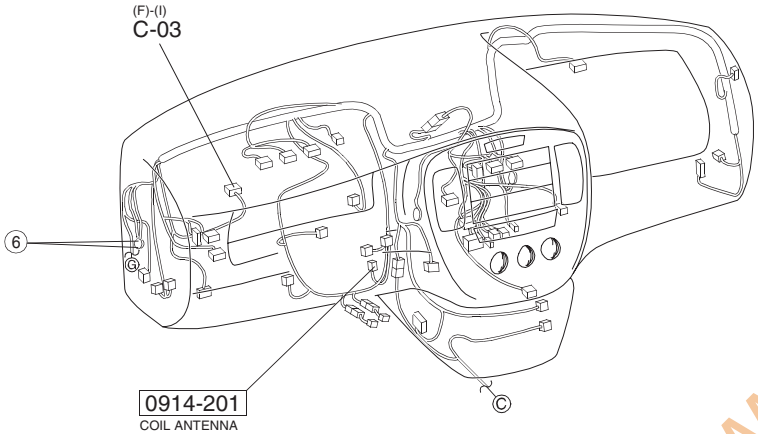


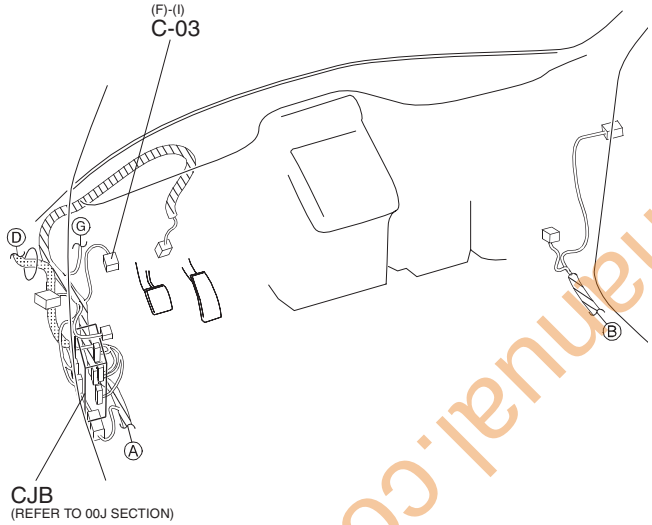



https://www.auto-manual.com/

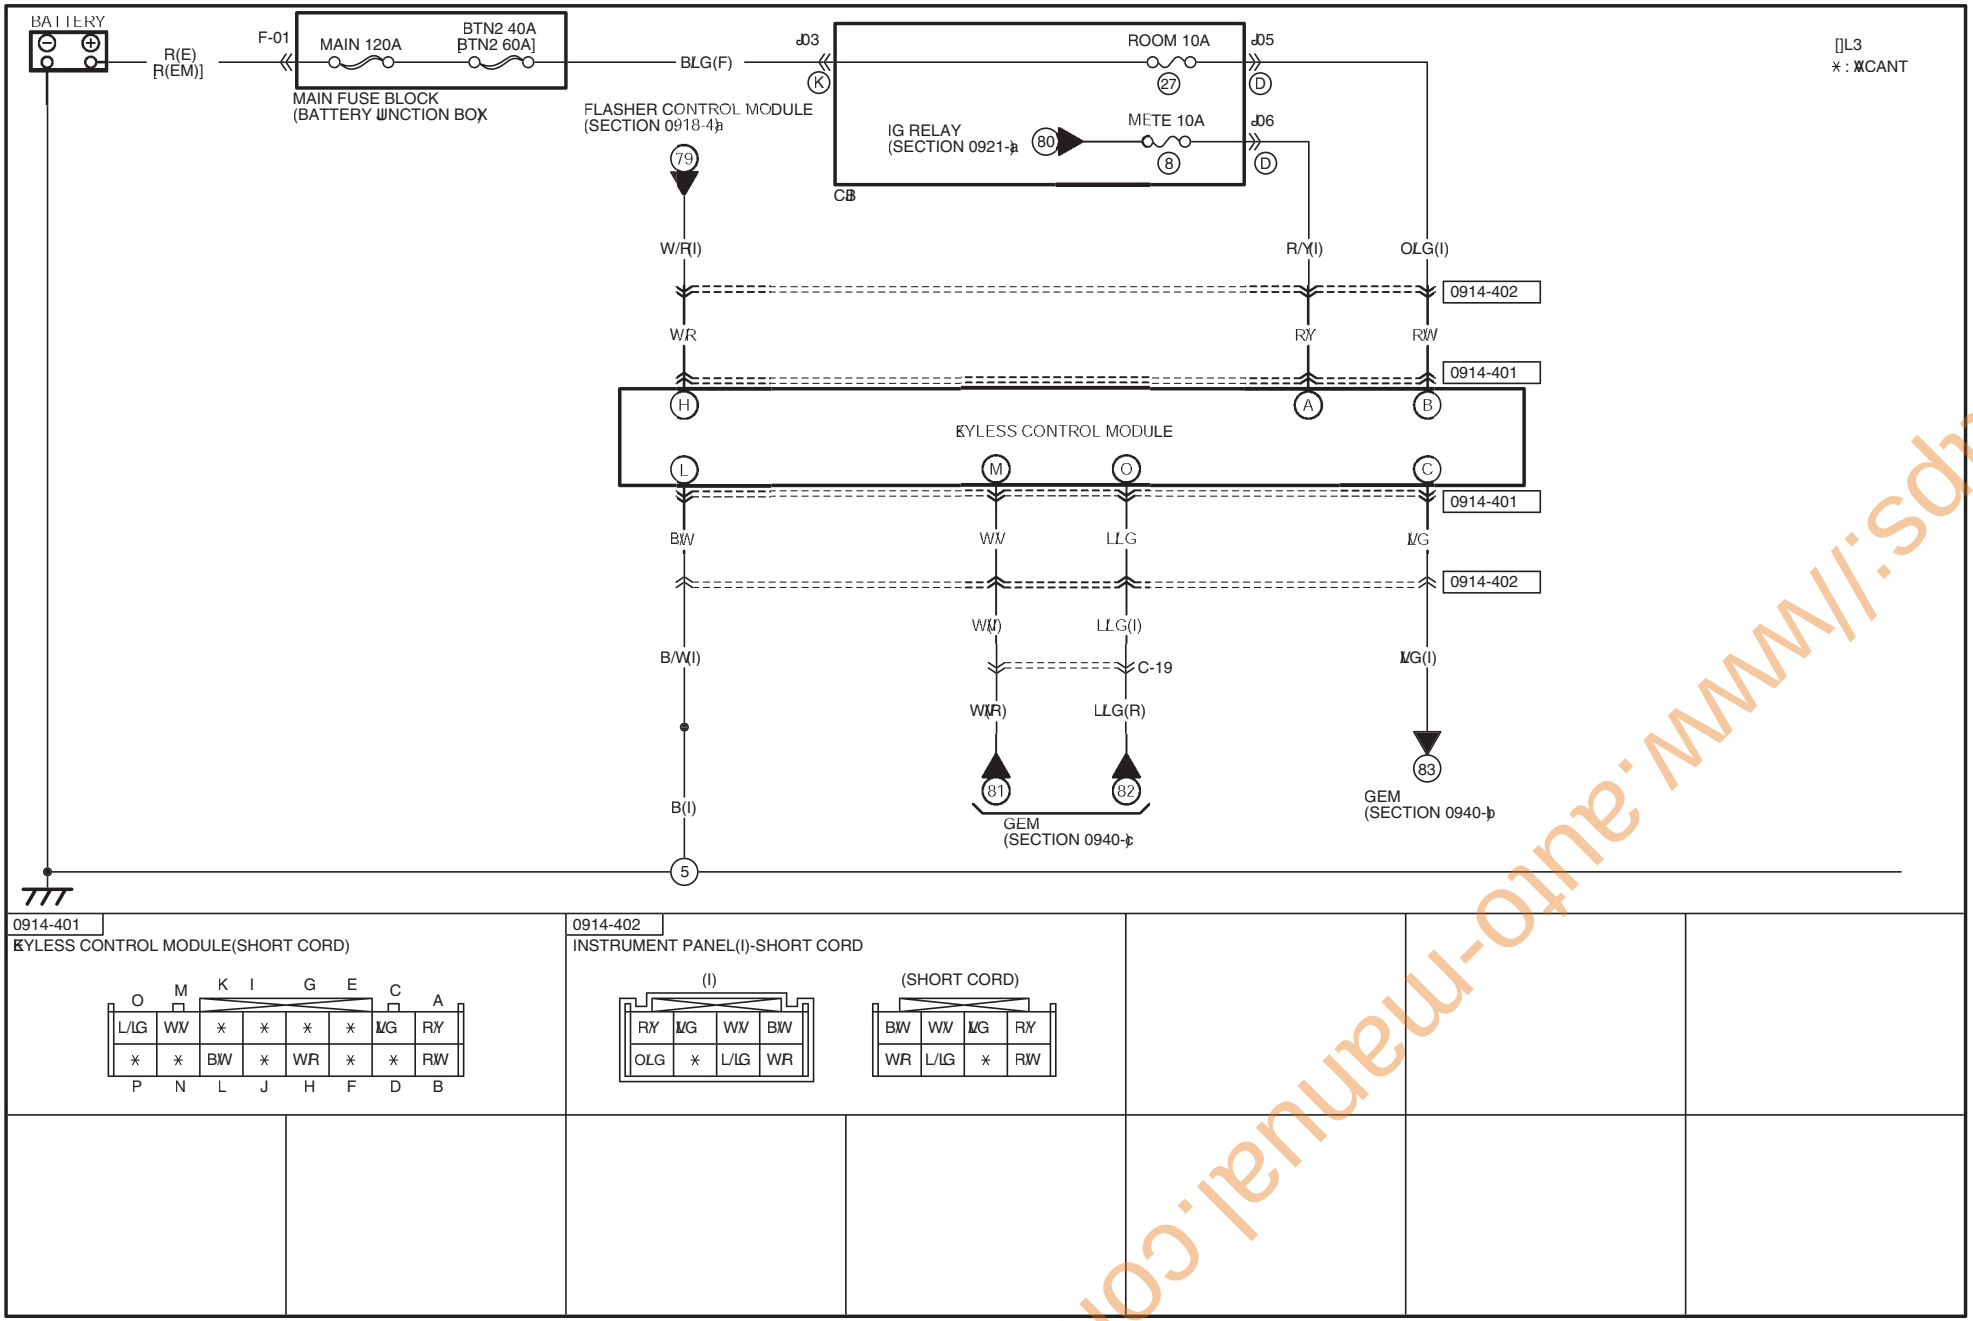


https://www.auto-manual.com/

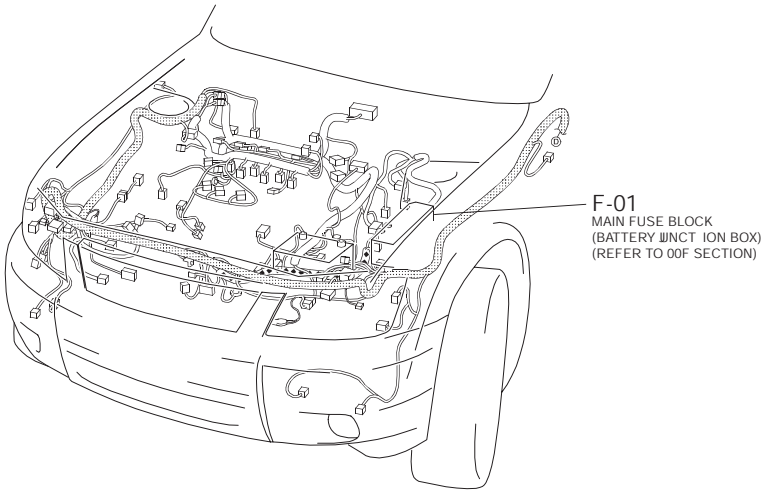


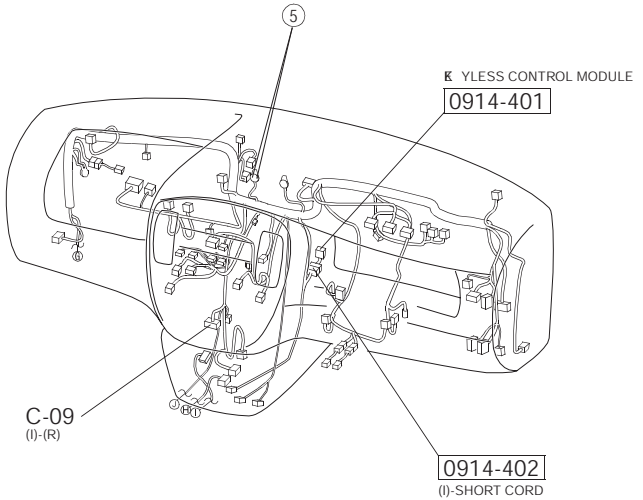

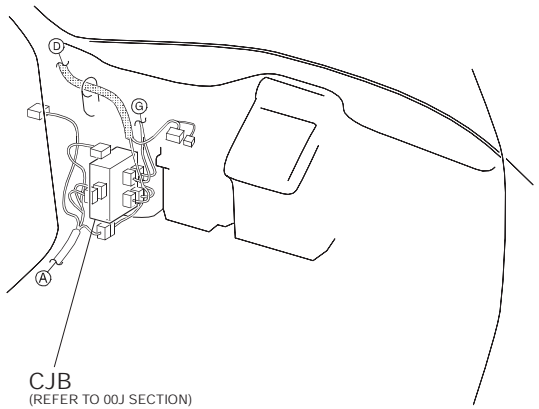


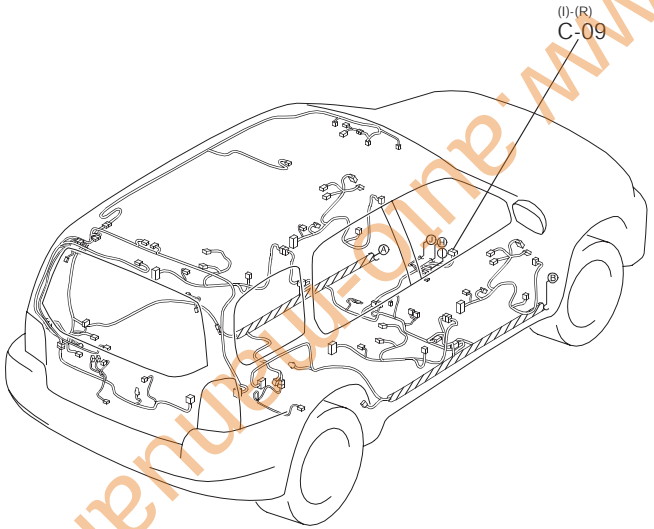

https://www.auto-manual.com/

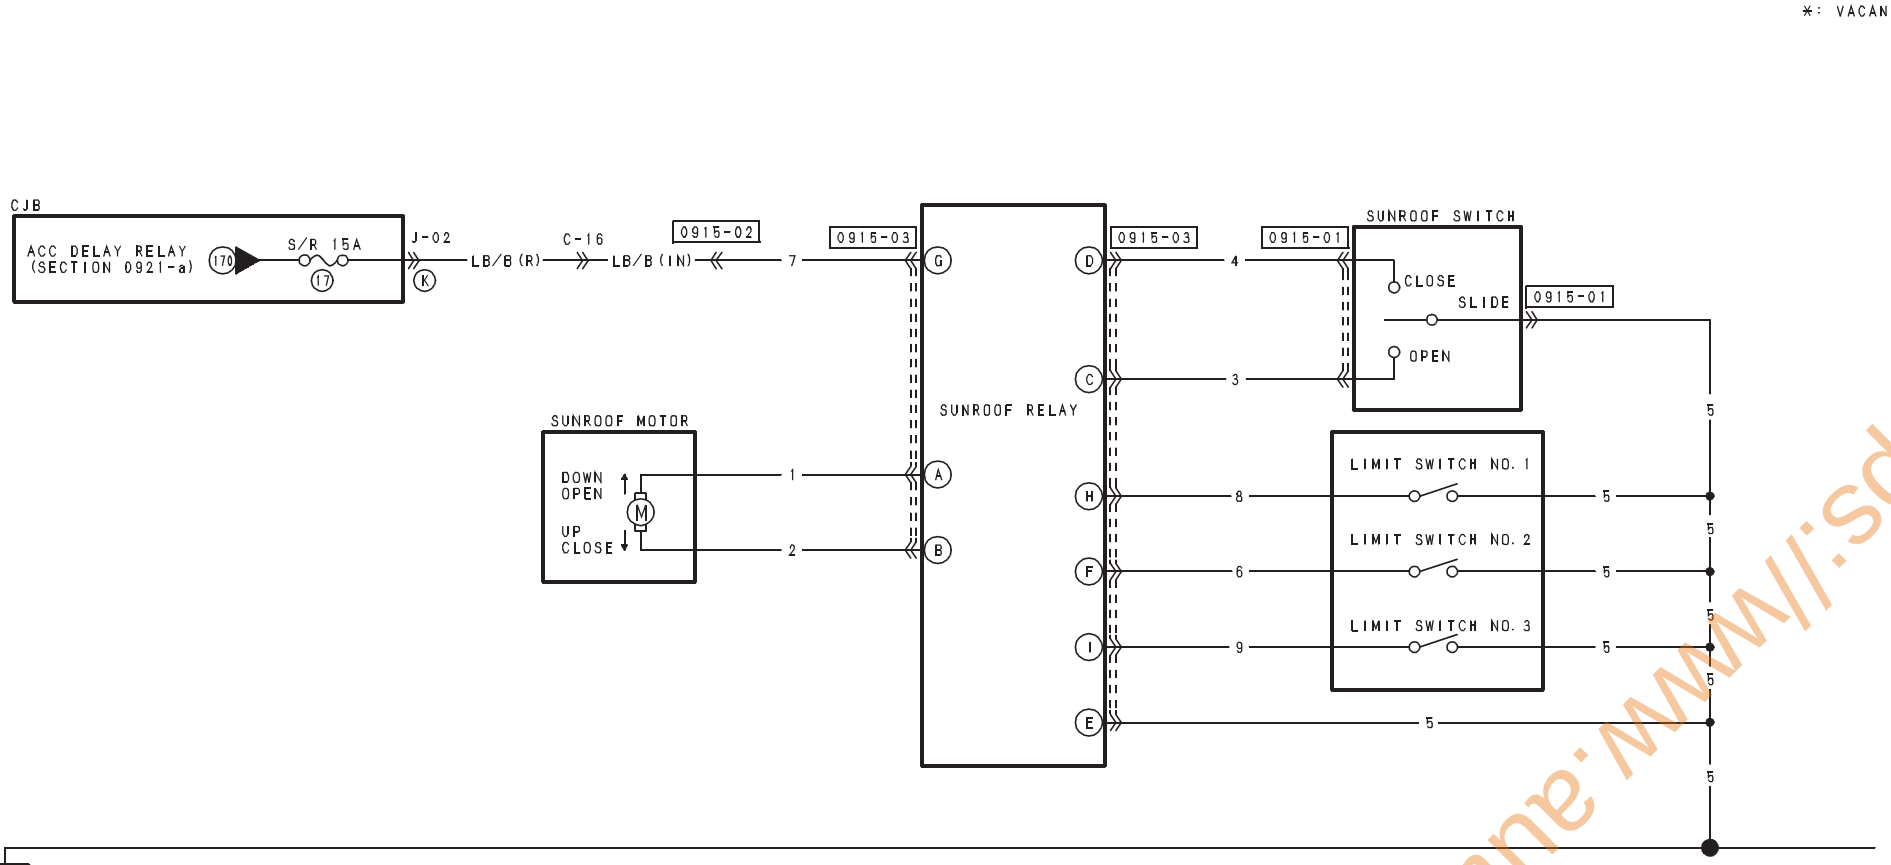


0915-01
SUNROOF SWITCH (SHORT CORD)




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0915-02
INTERIOR LIGHT (IN) -SHORT CORD

(IN)




(SHORT CORD)




TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


0915-03
SUNROOF RELAY (SHORT CORD)

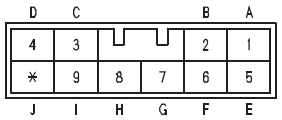

TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.


https://www.auto-manual.com/

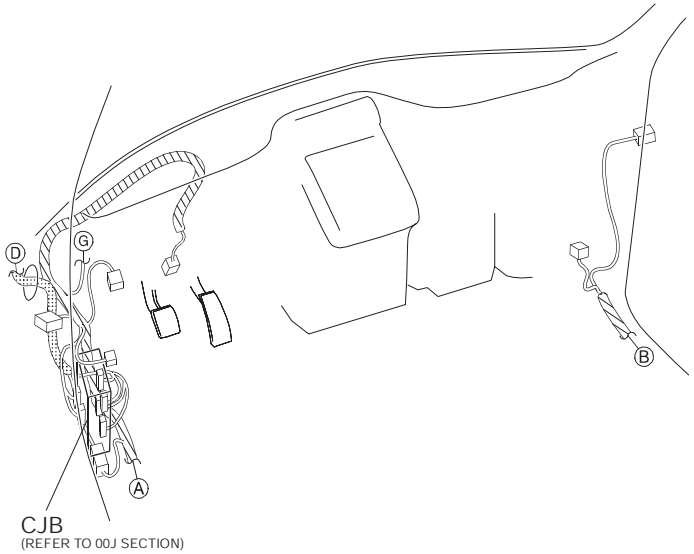

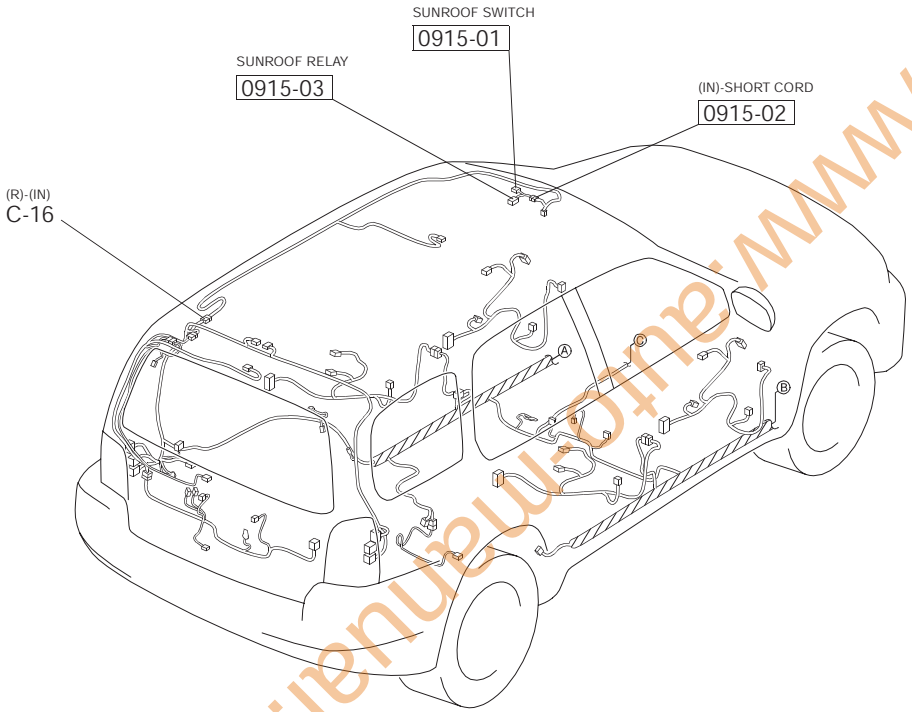


https://www.automanual.com/

HEAD LIGHT (2.3L)

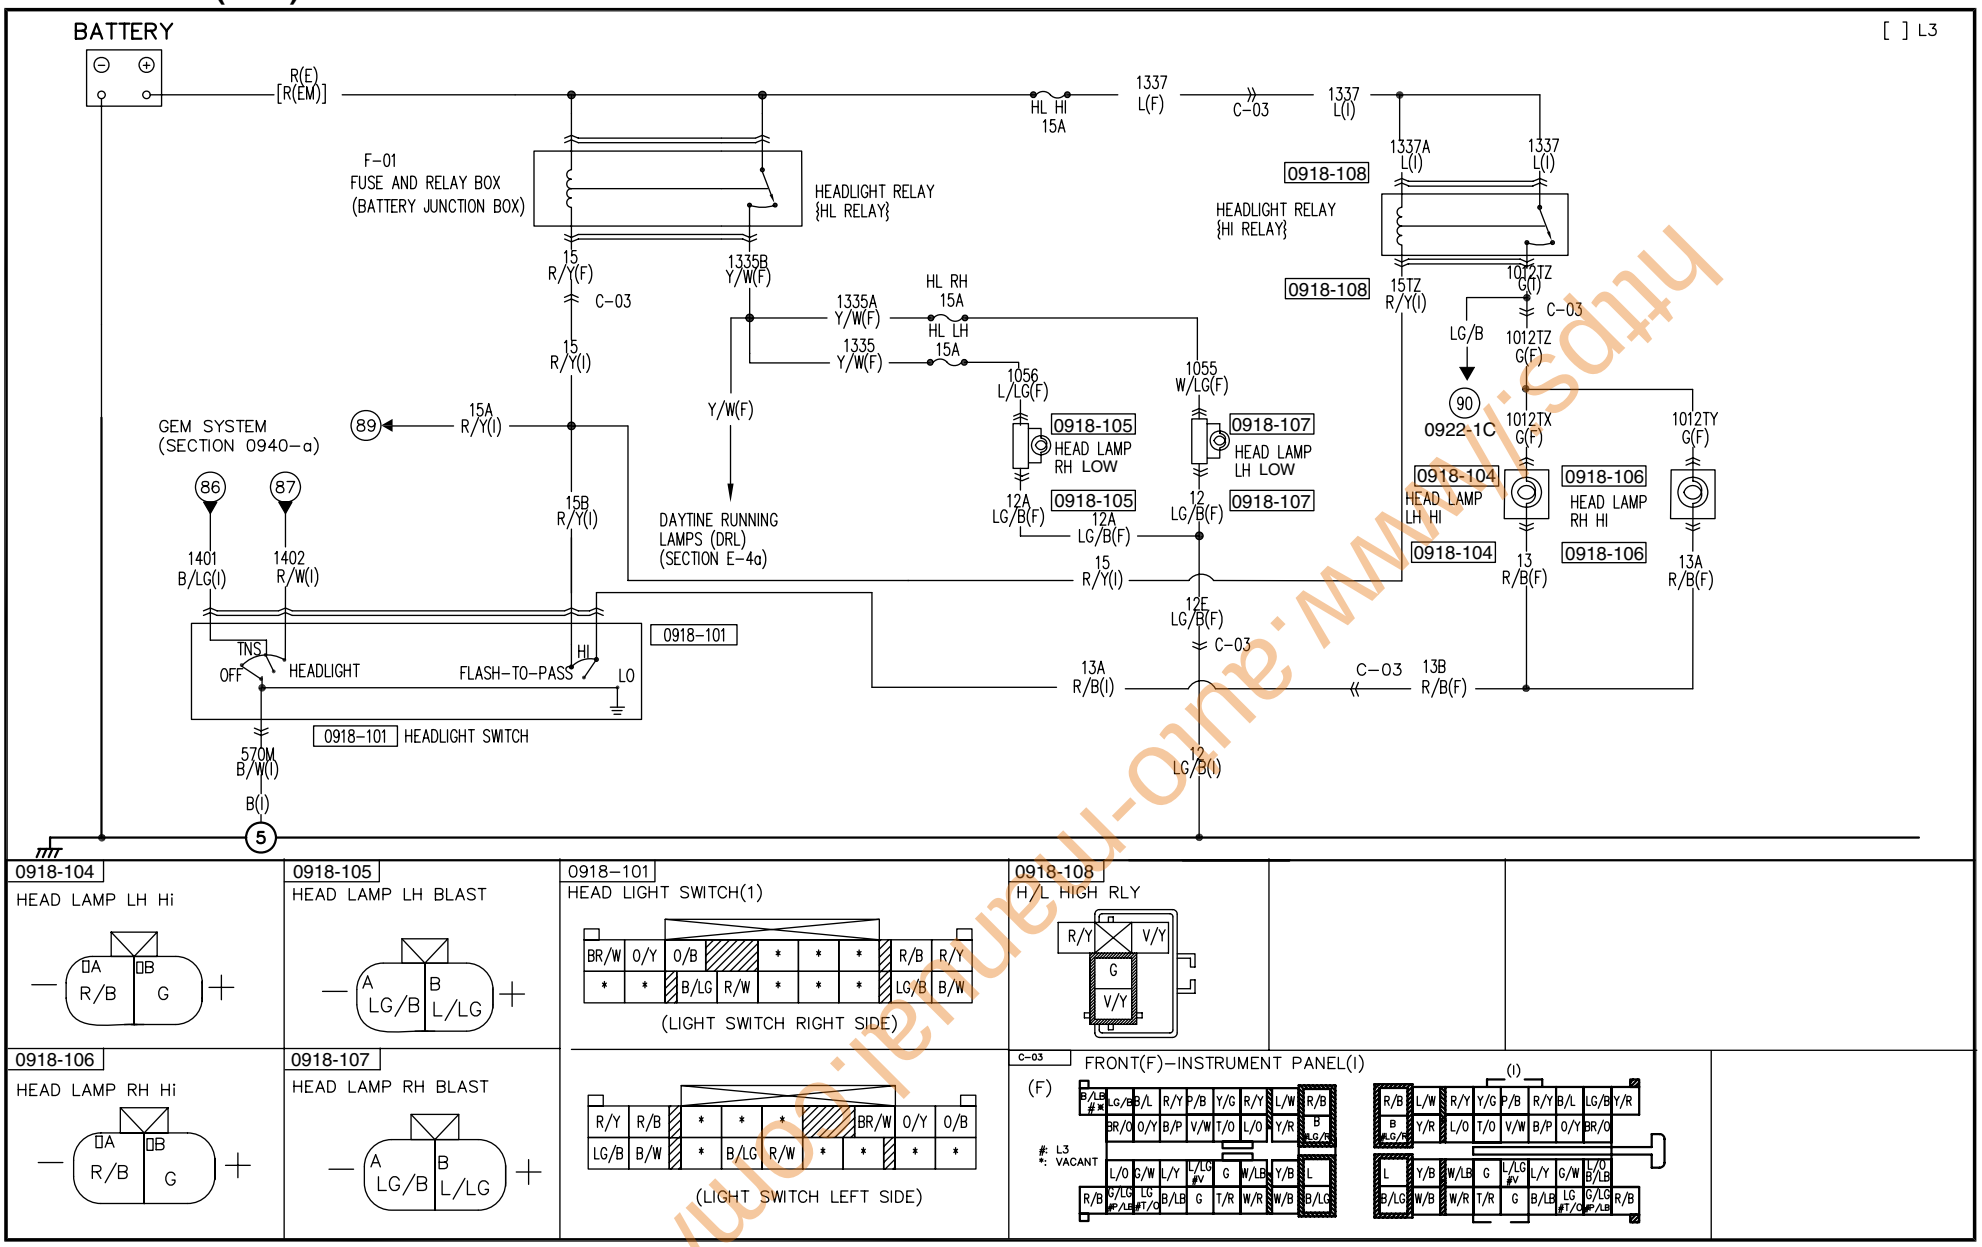


https://www.isuzu-manuals.com/

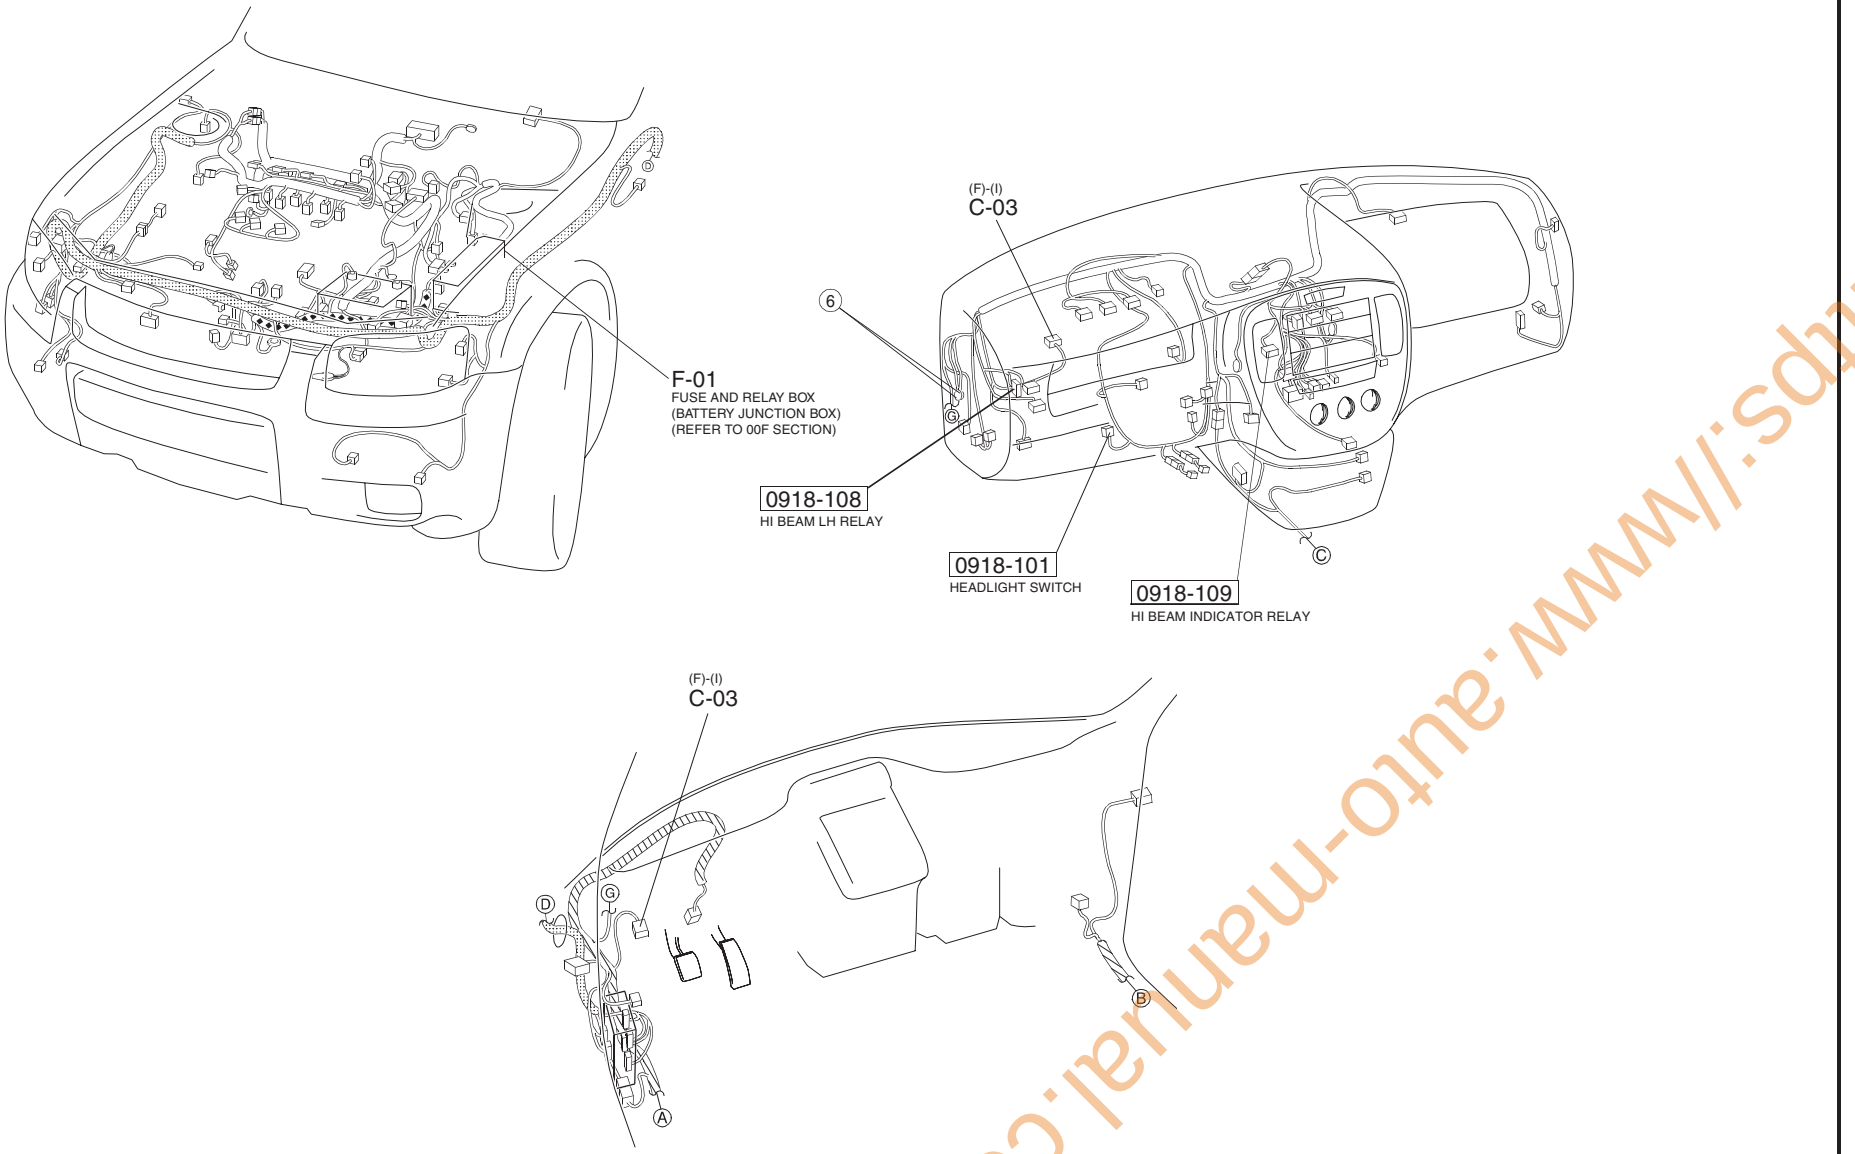


https://www.auto-manual.com/

HID HEAD LIGHT (J87 3.0 USE)

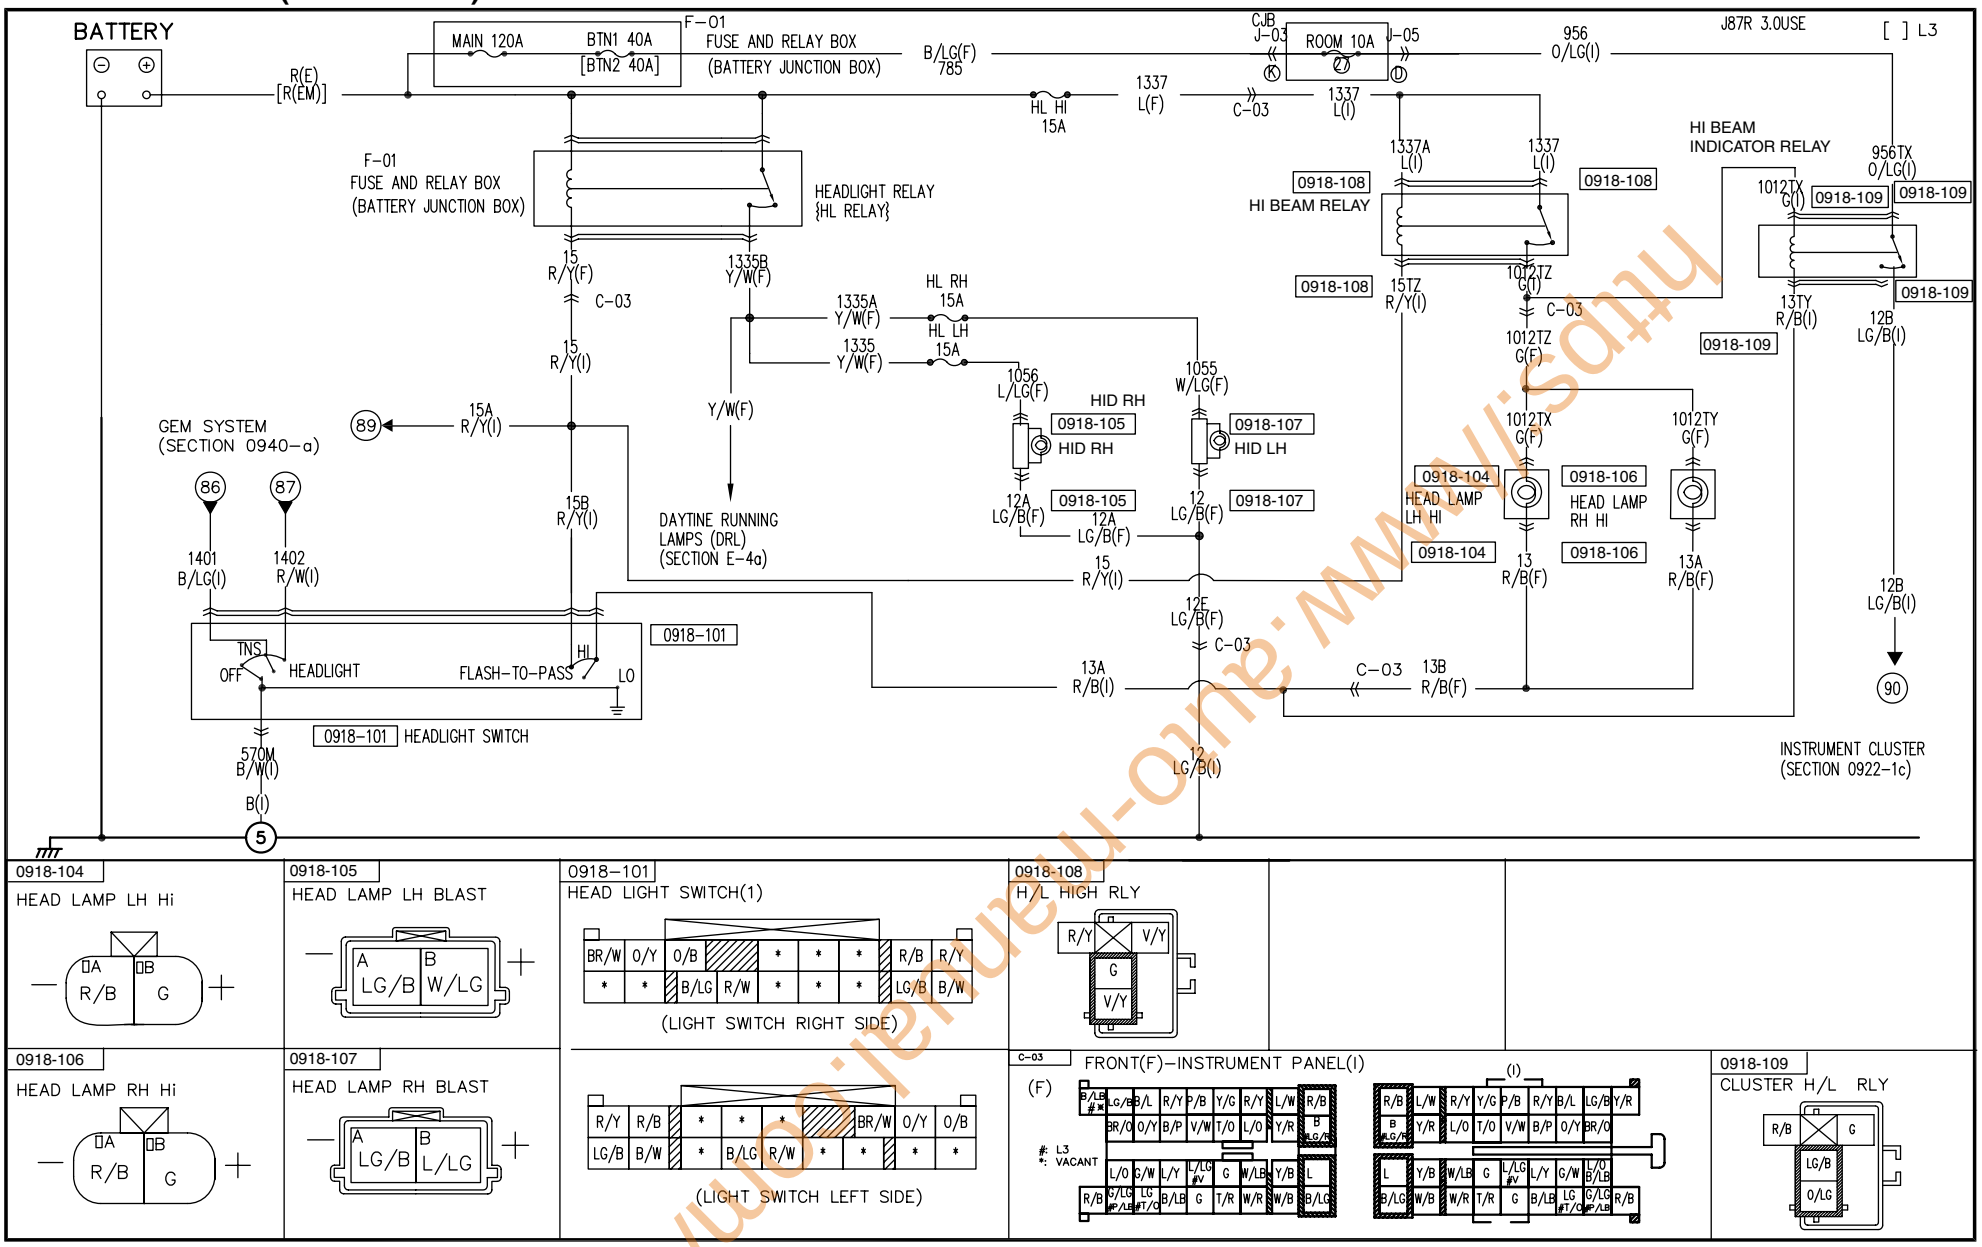


https://www.auto-manuals.com/

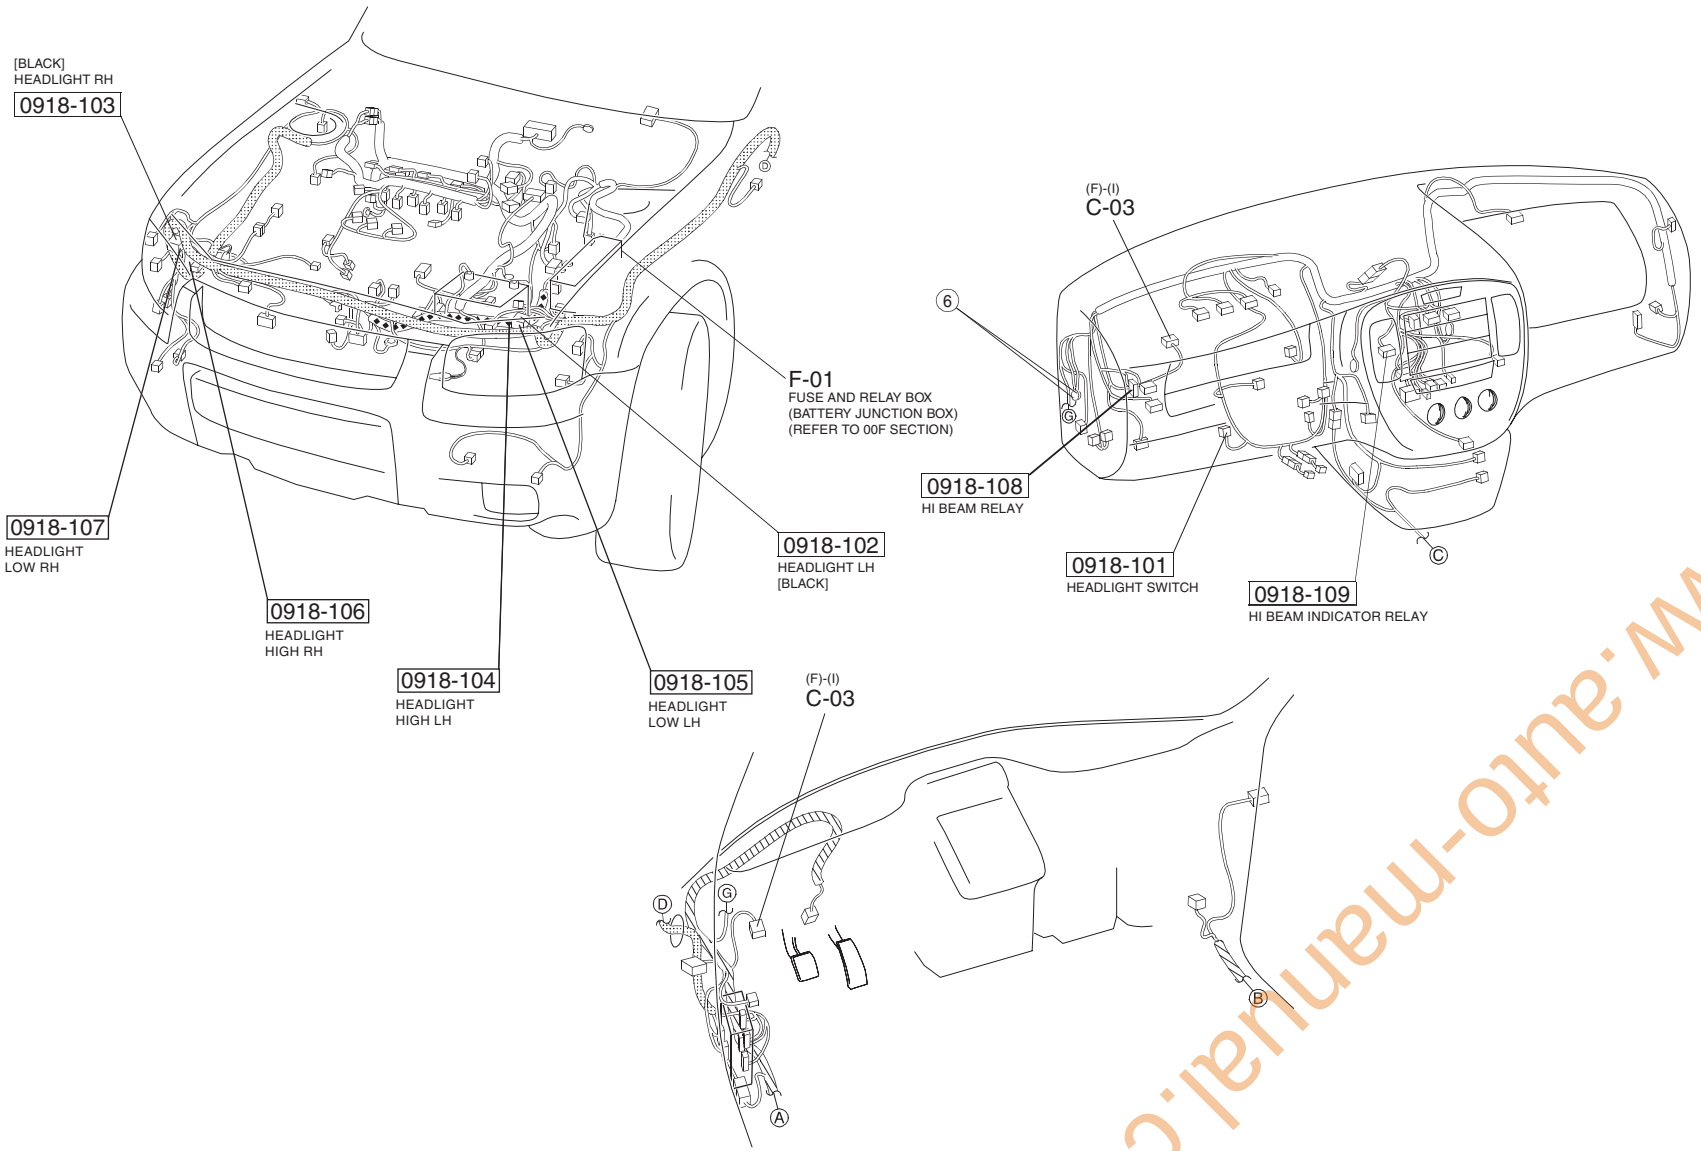


https://www.auto-manual.com/


LICENSE PLATE LIGHT/PARKING LIGHT/TAILLIGHT

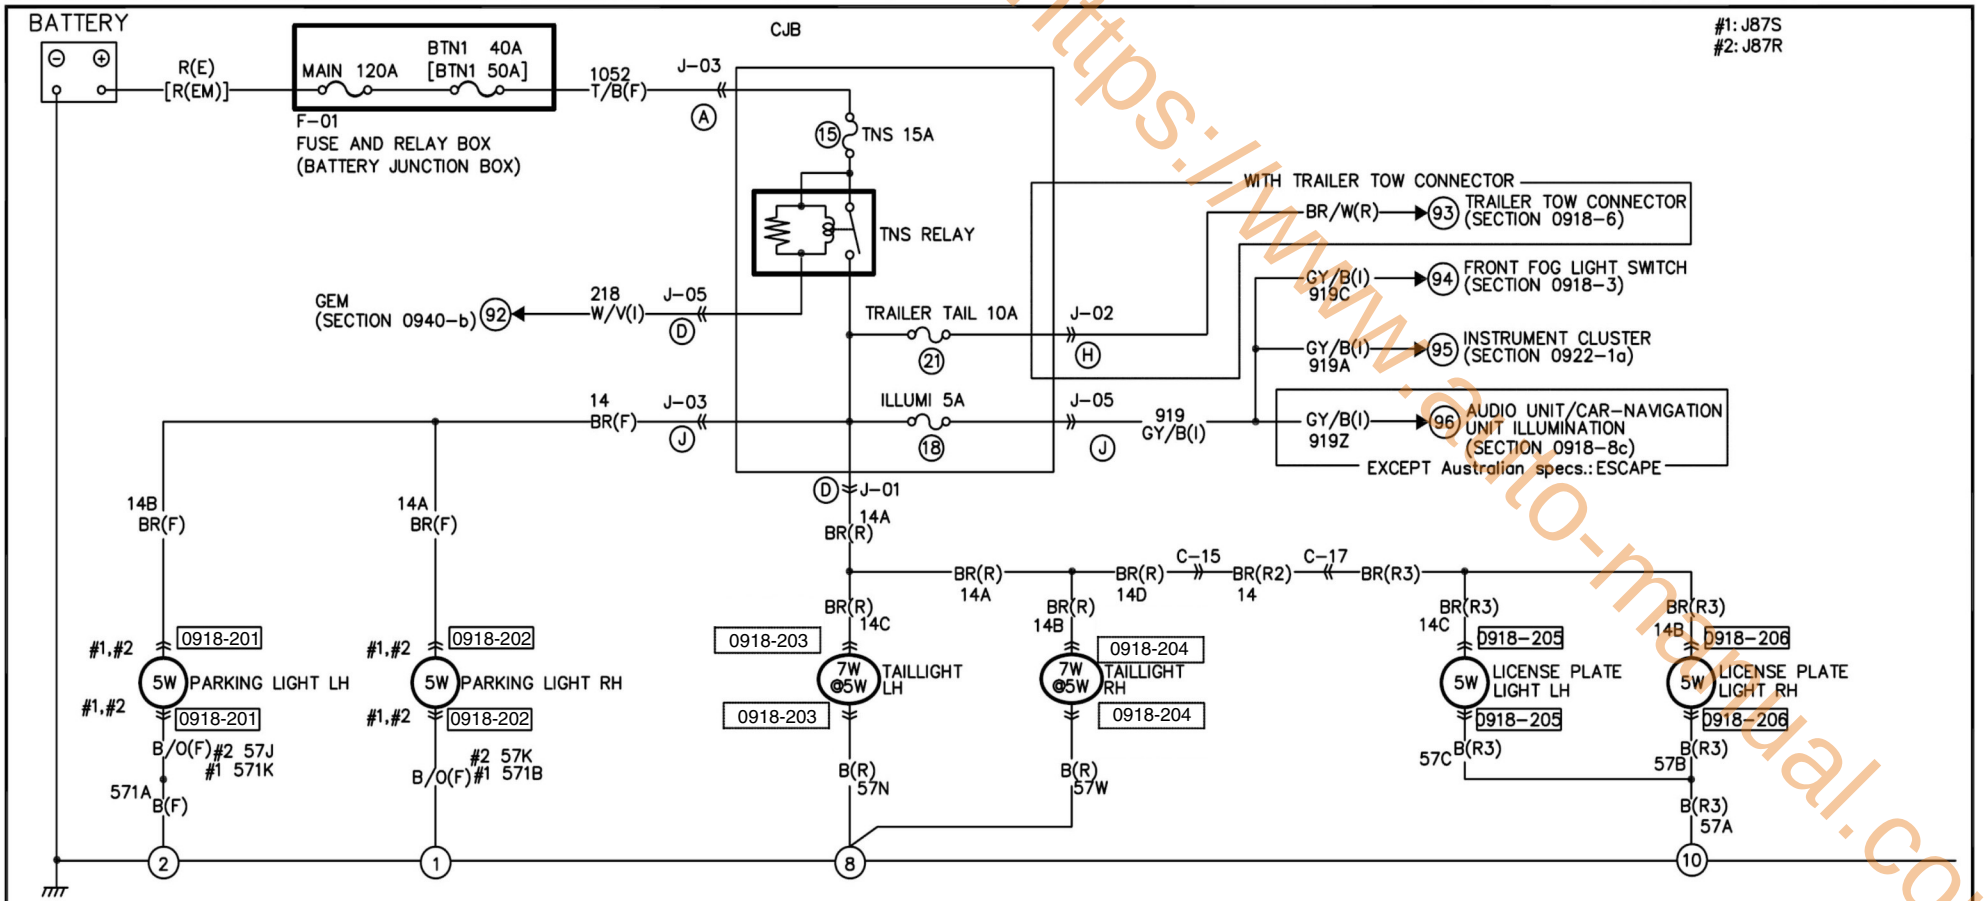

0918-201
PARKING LIGHT LH(F)




0918-202
PARKING LIGHT RH(F)




0918-203
TAILLIGHT LH(R)





0918-204
TAILLIGHT RH(R)






0918-205
LICENSE PLATE LIGHT LH(R3)



0918-206
LICENSE PLATE LIGHT RH(R3)




https://www.auto-manual.com/

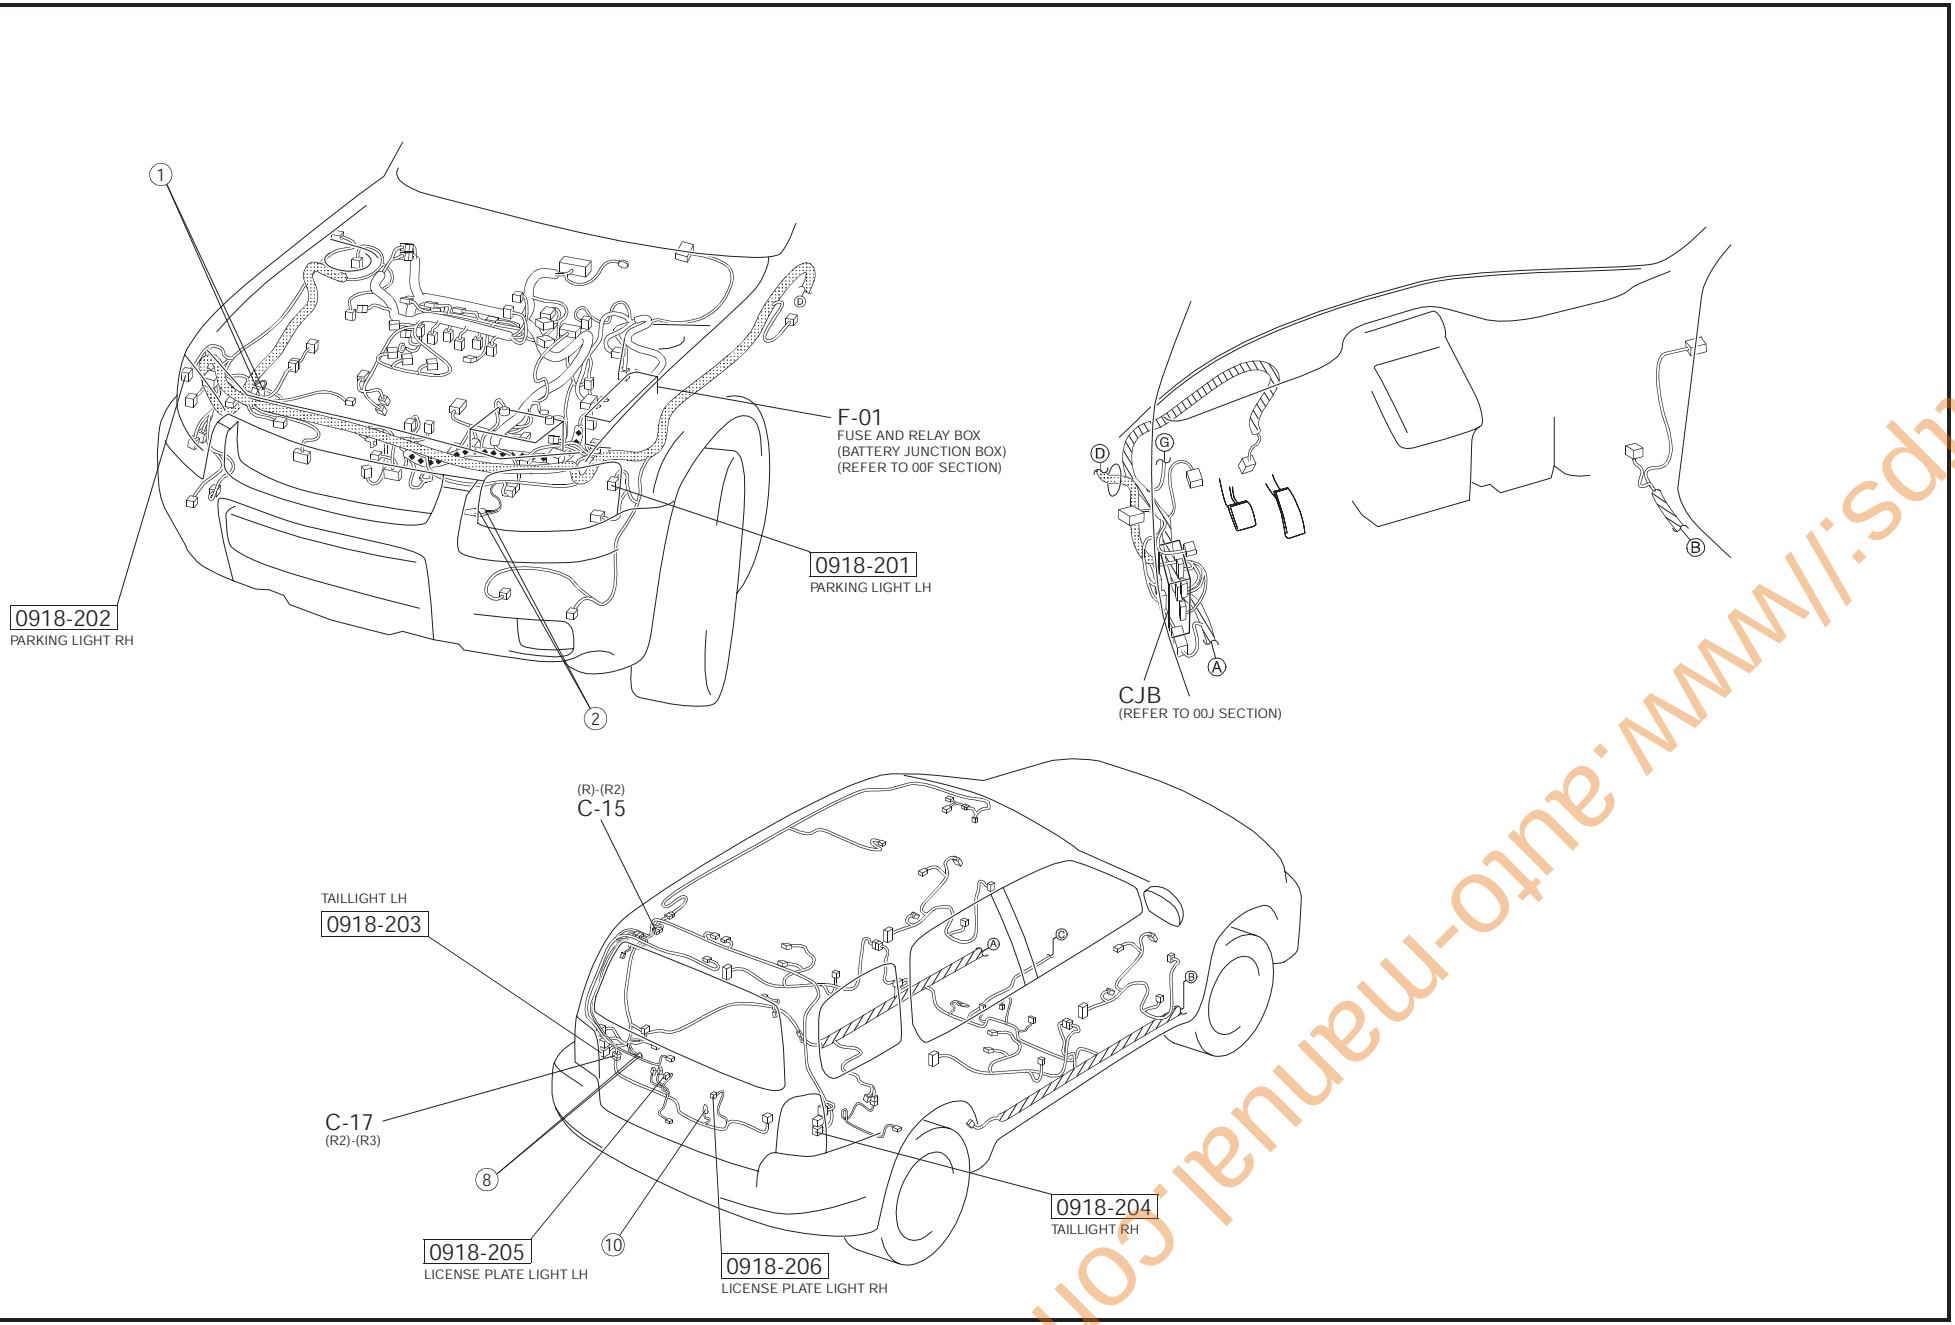


https://www.auto-manual.com/

FRONT FOG LIGHT

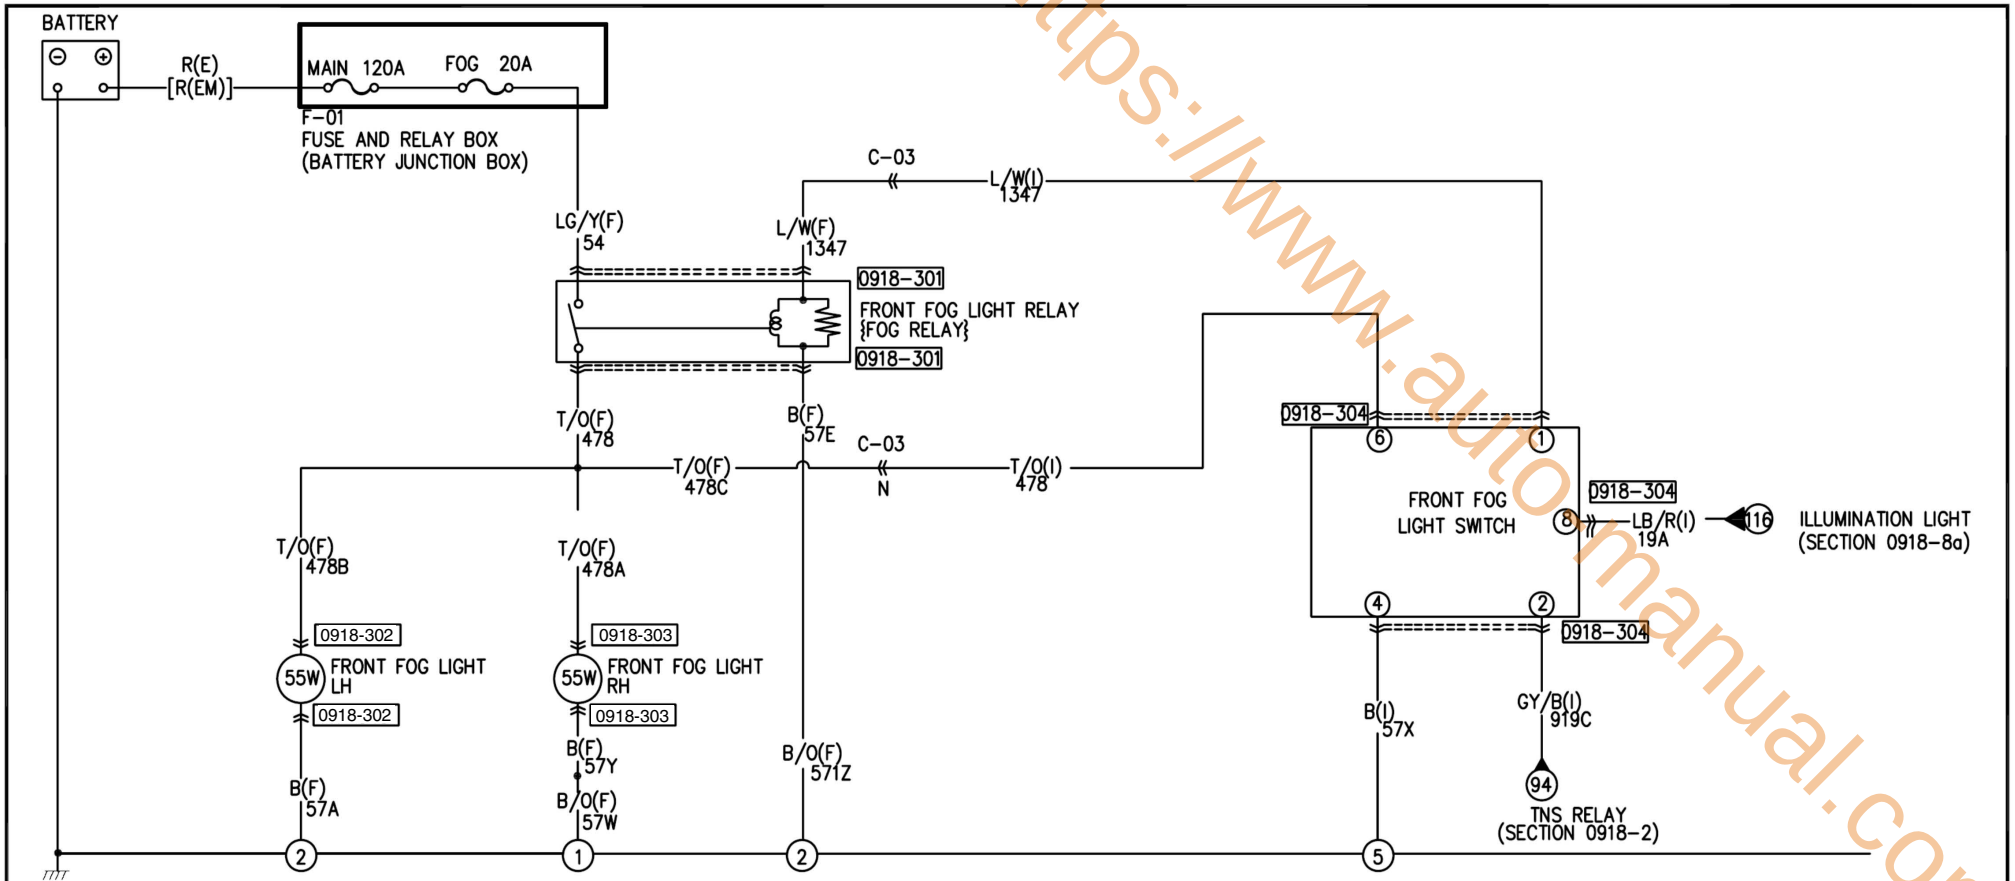


0918-301 FRONT FOG LIGHT RELAY(F)

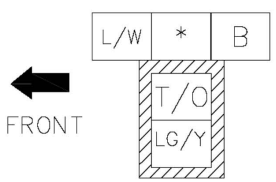


NOTE: SEEN FROM TERMINAL SIDE


0918-302 FRONT FOG LIGHT LH(F)

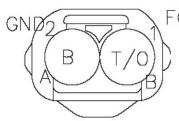


0918-303 FRONT FOG LIGHT RH(F)

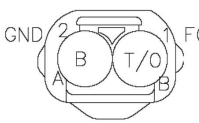

0918-304 FRONT FOG LIGHT SWITCH(I)

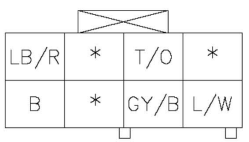


https://www.automanual.com/

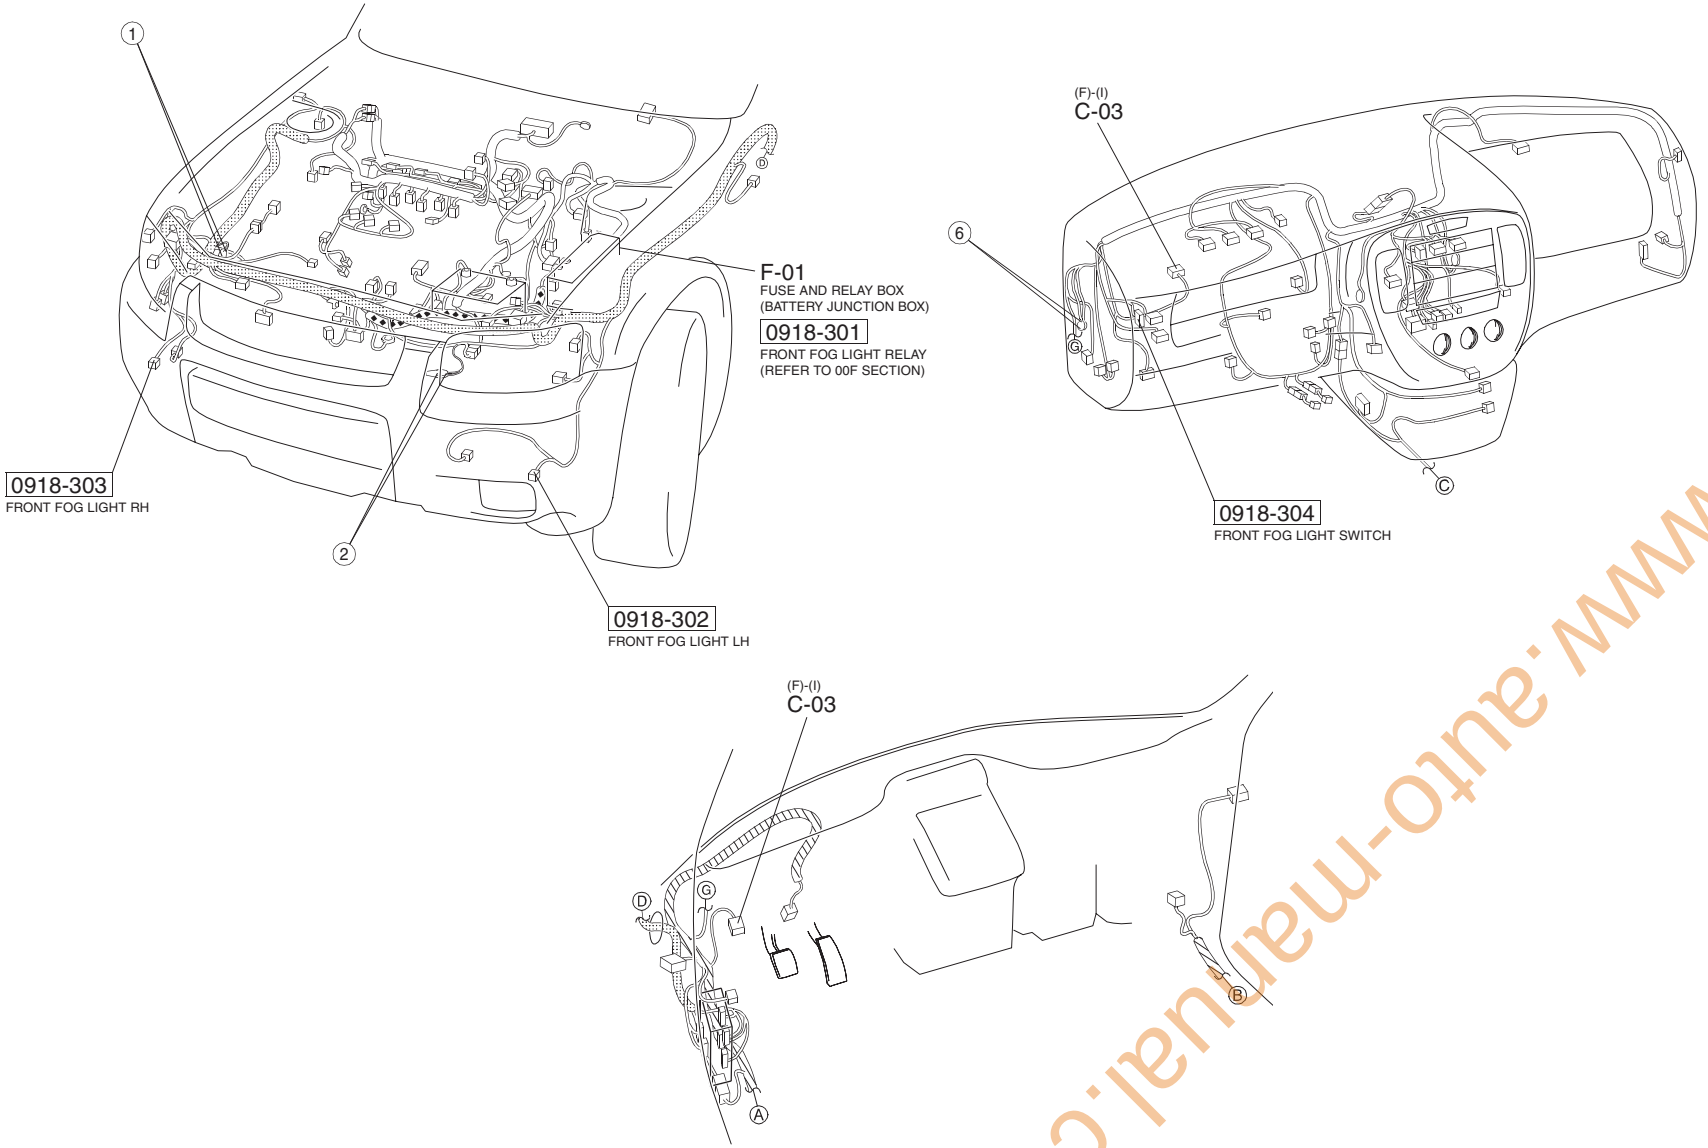

https://www.auto-manual.com/

REAR FOG LAMPS J87S USE LHD(1/2)(IF EQUIPPED)

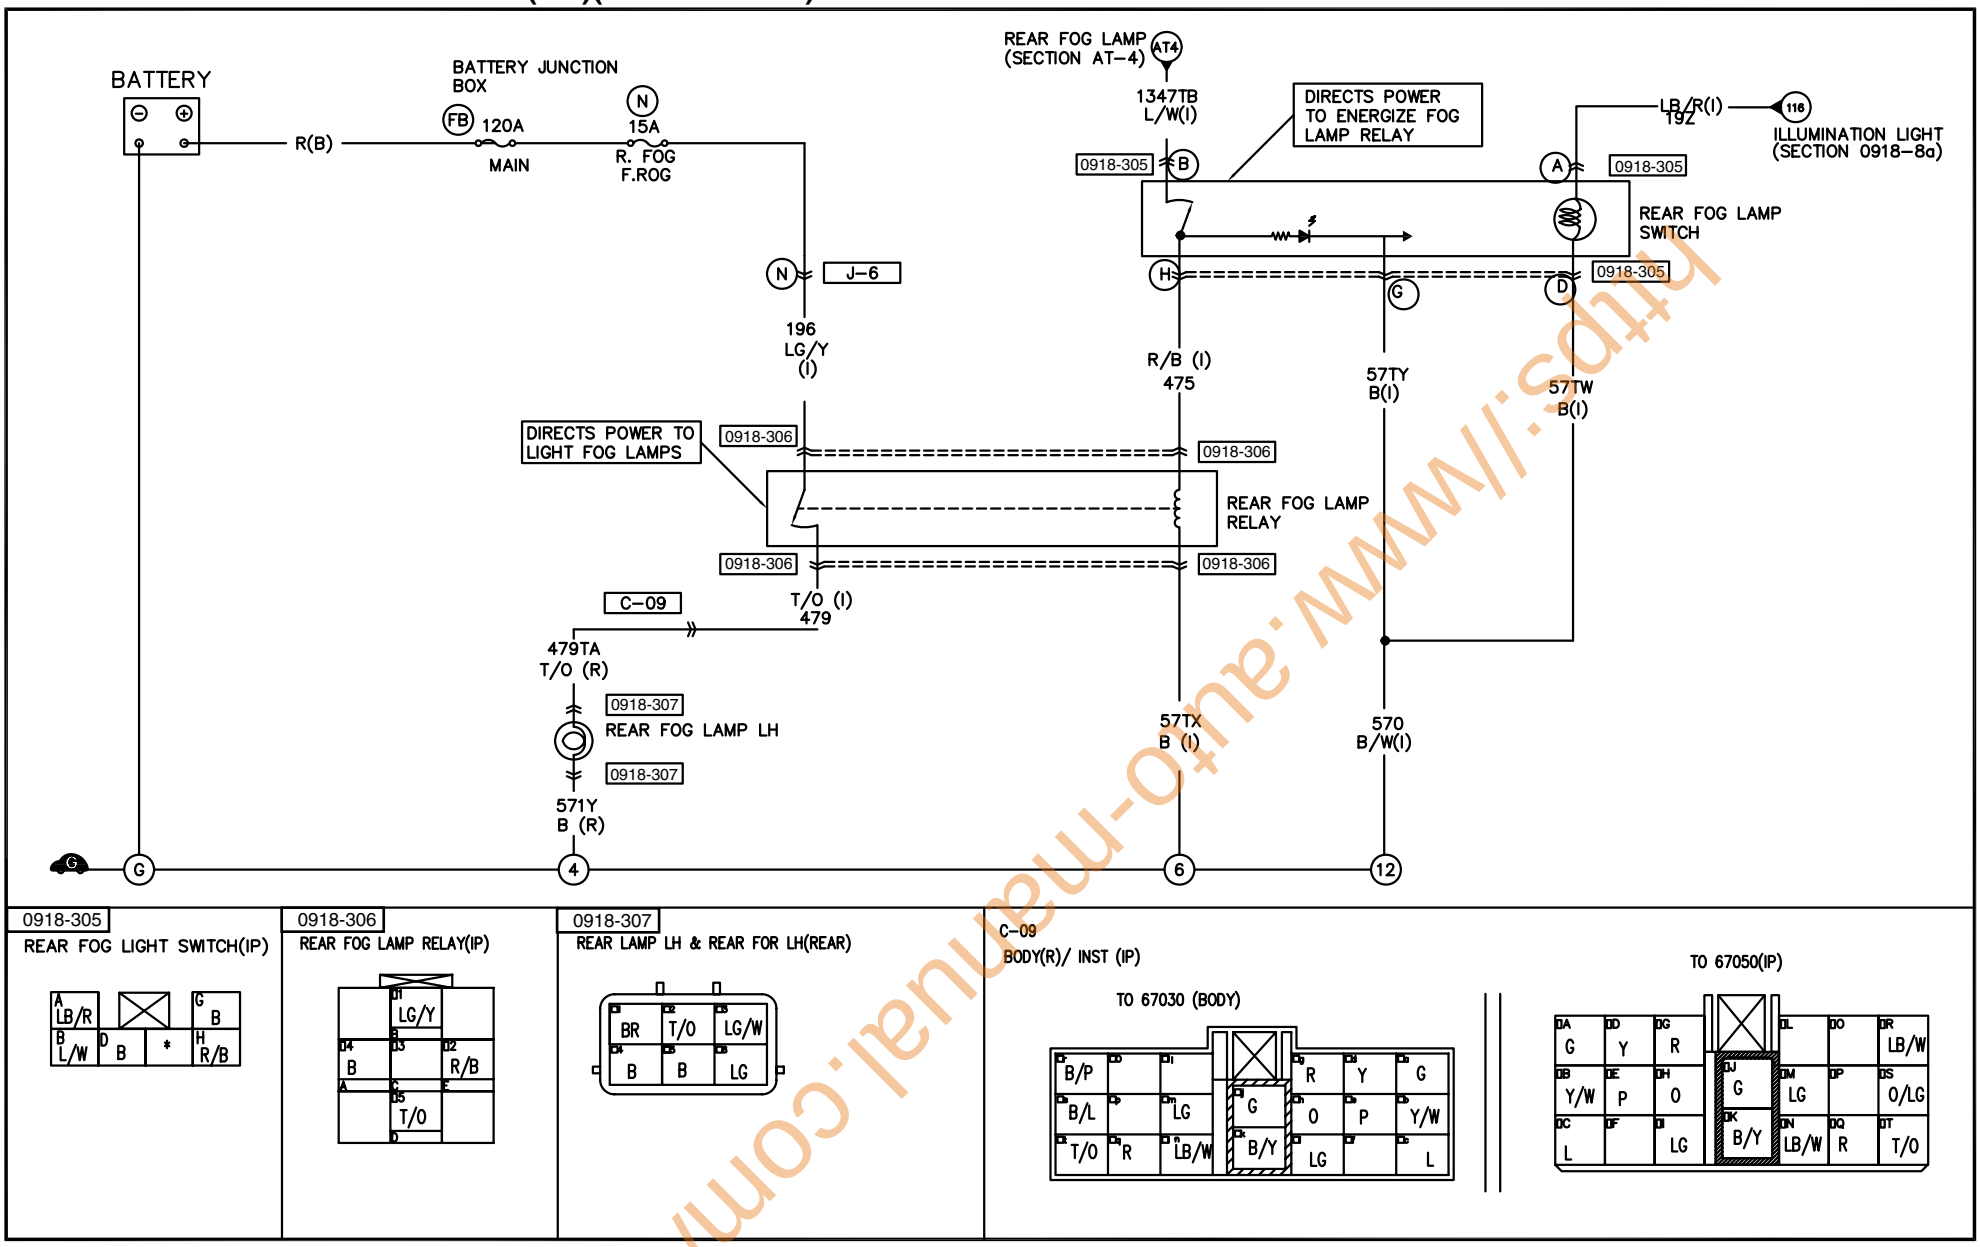


https://www.auto-manual.com/

https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK

J-06
INSTRUMENT PANEL HARNESS(I)

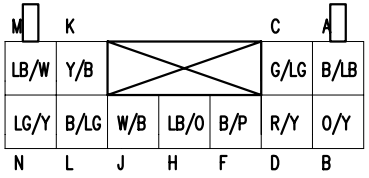


https://www.auto-manual.com/


https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK


TURN AND HAZARD WARNING LIGHT

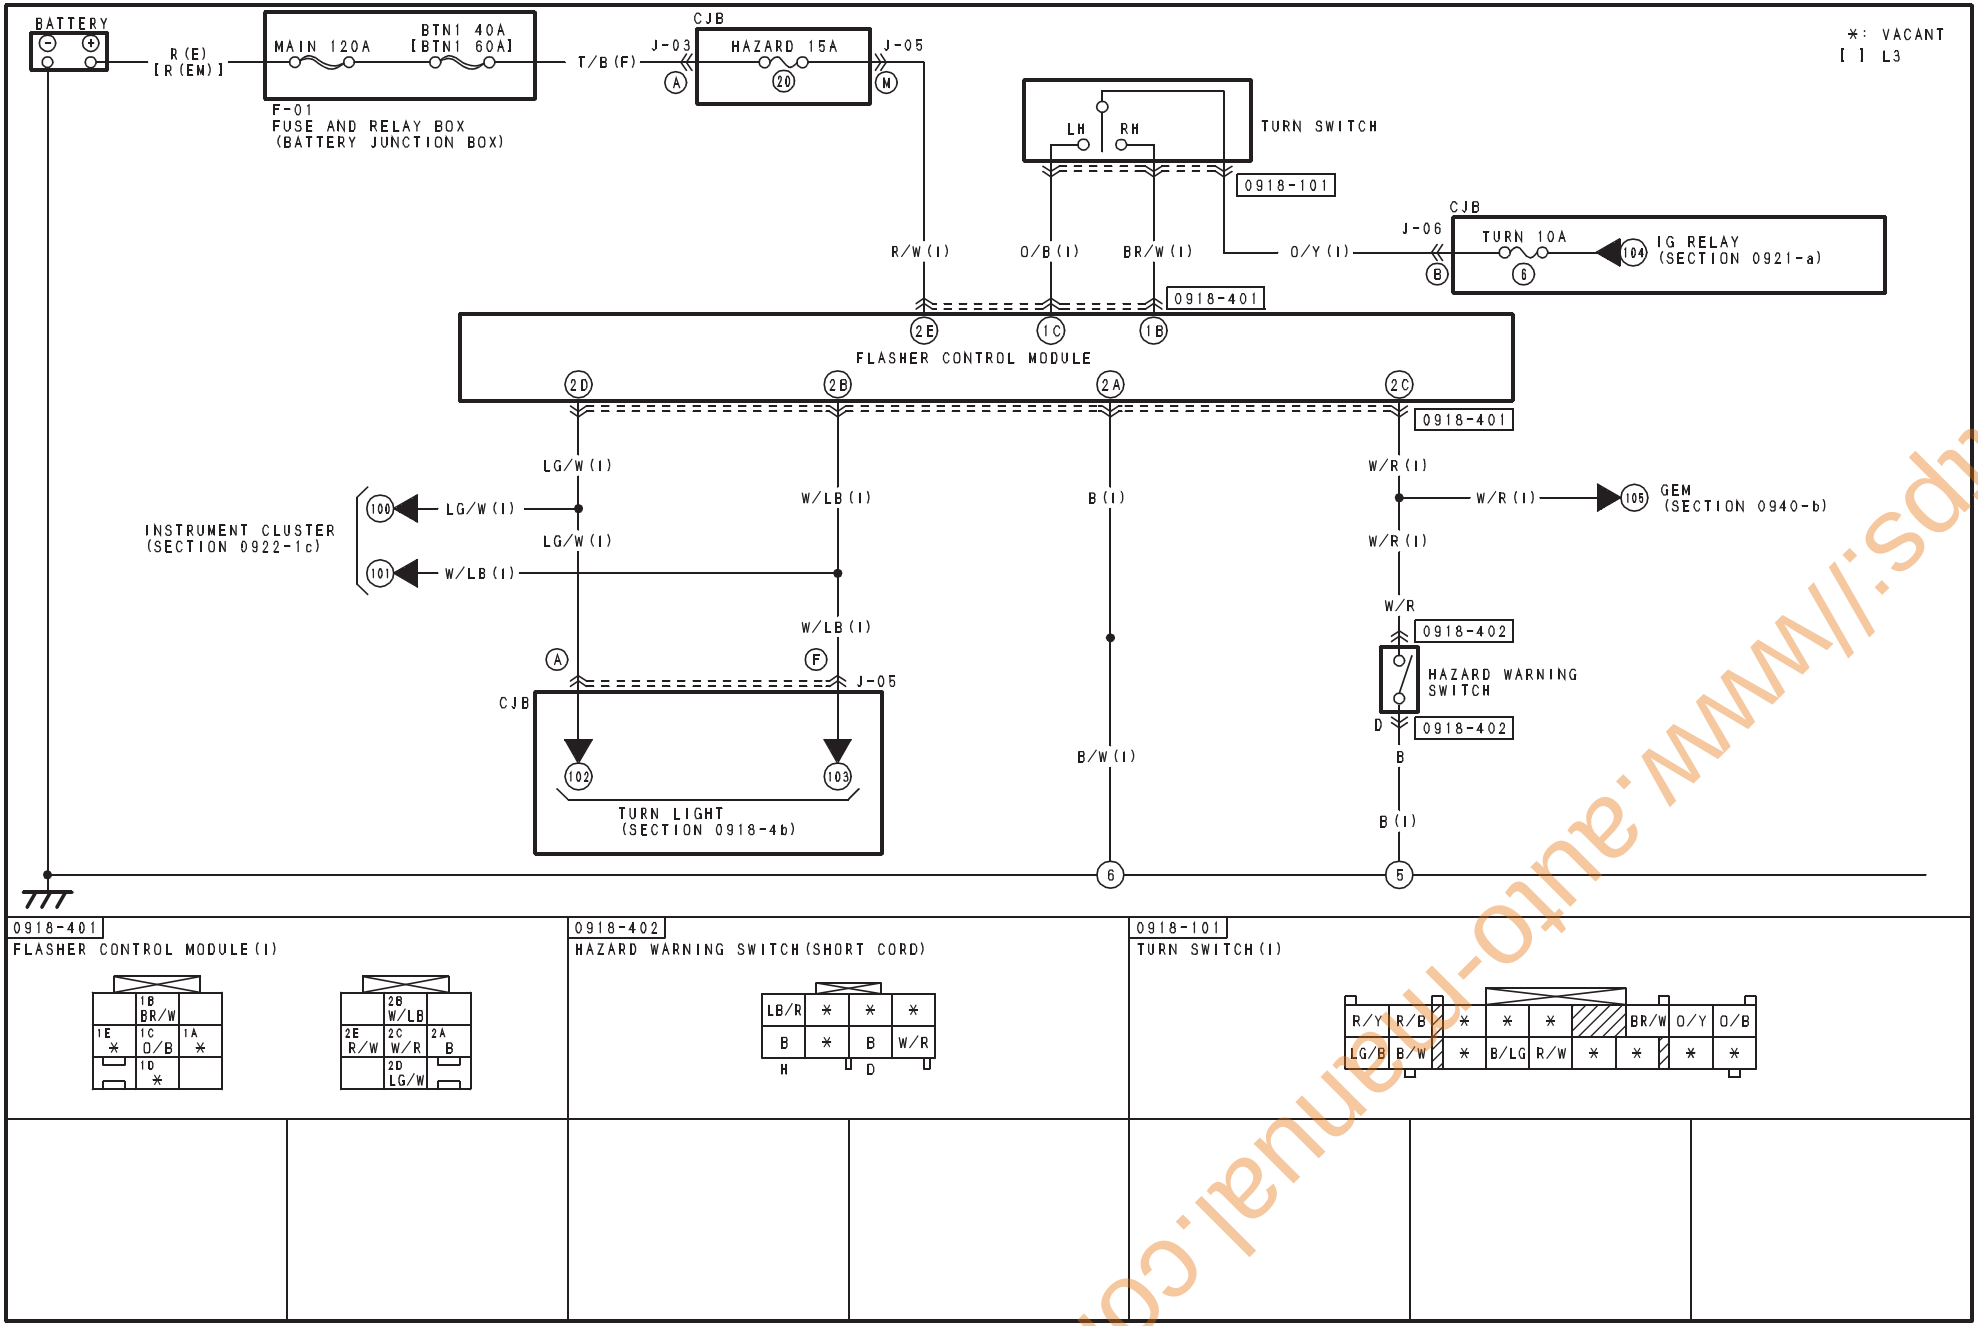


https://www.auto-manual.com/

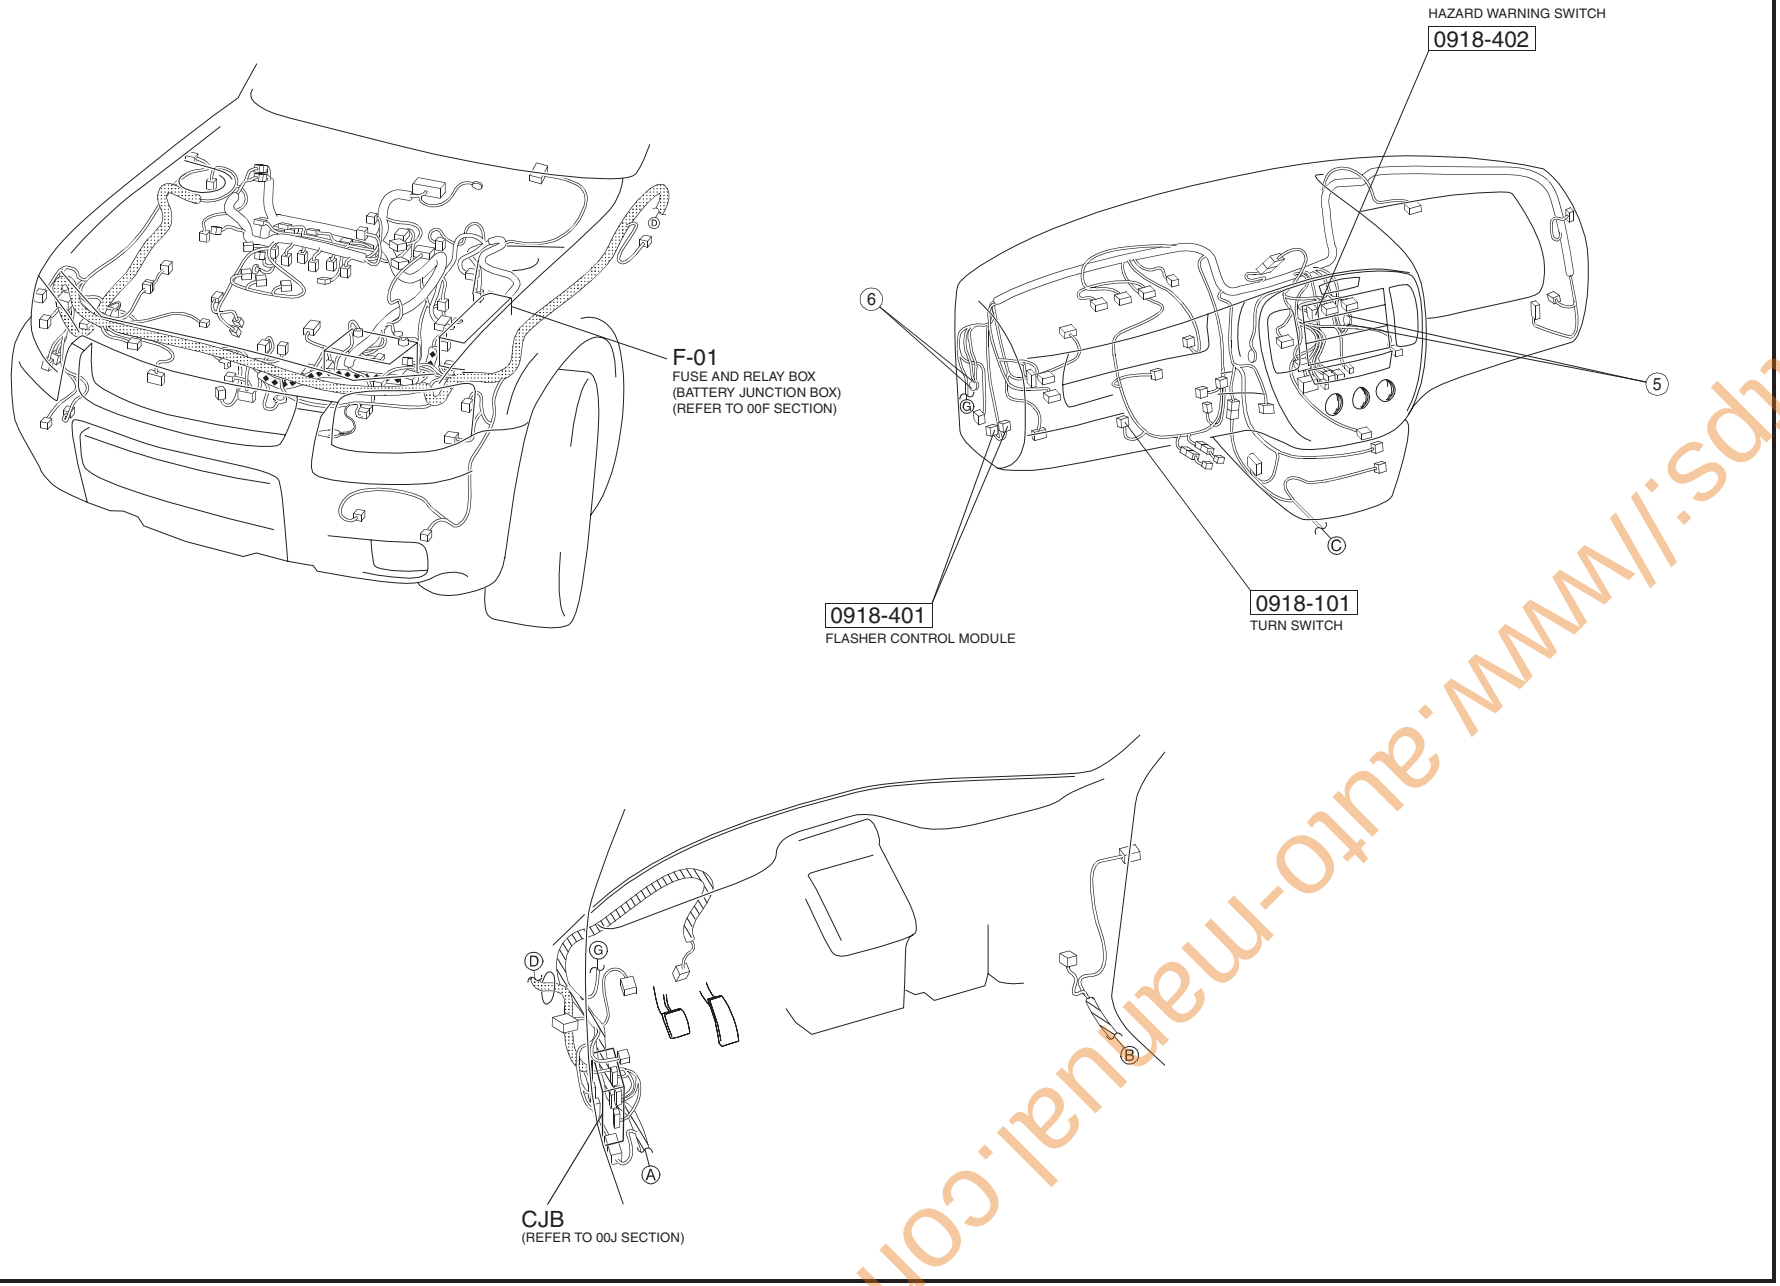


https://www.auto-manual.com/

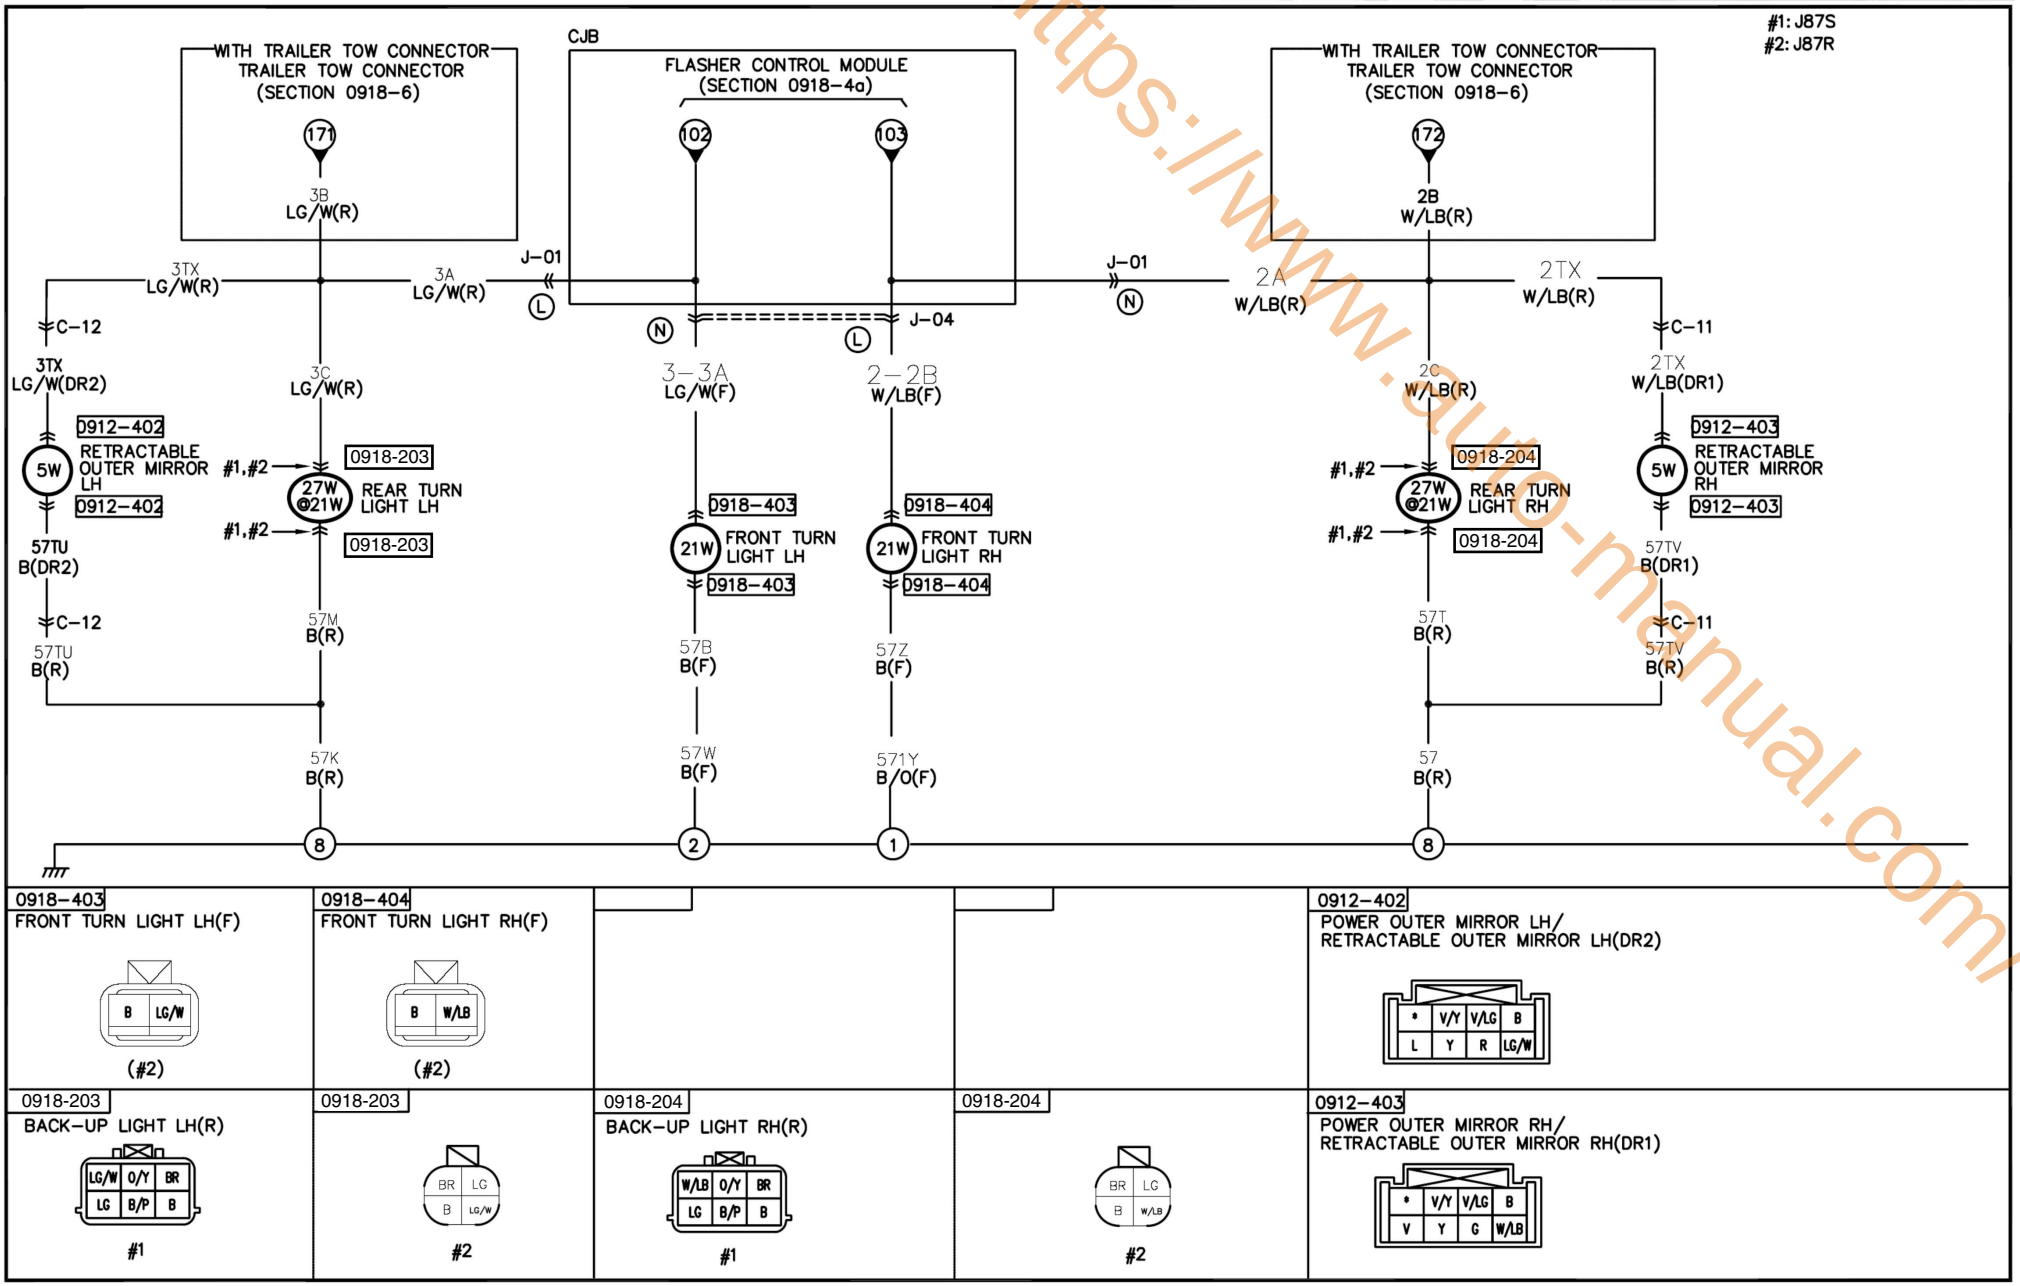

https://www.auto-manual.com/

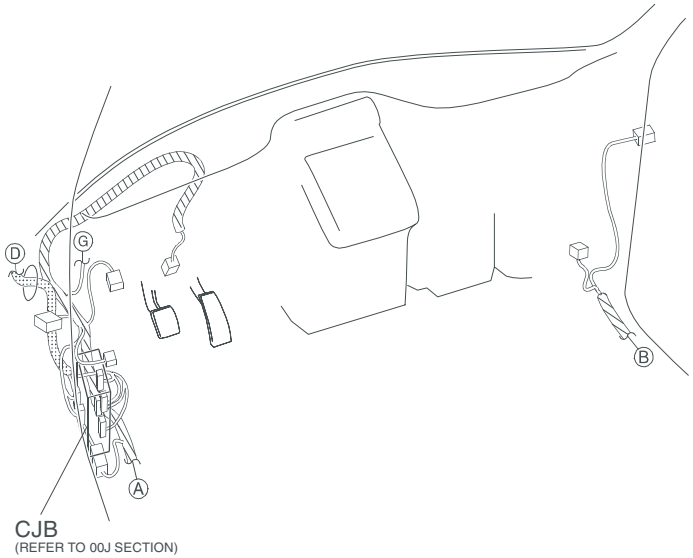


CJB
(REFER TO 00J SECTION)

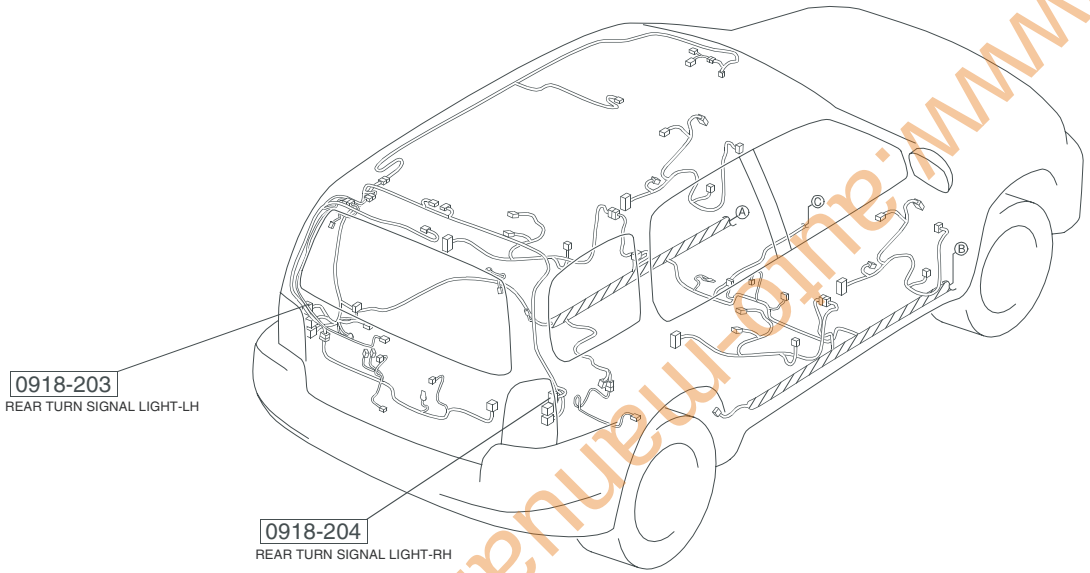


0918-203
REAR TURN SIGNAL LIGHT-LH


0918-204
REAR TURN SIGNAL LIGHT-RH

https://www.auto-manual.com/

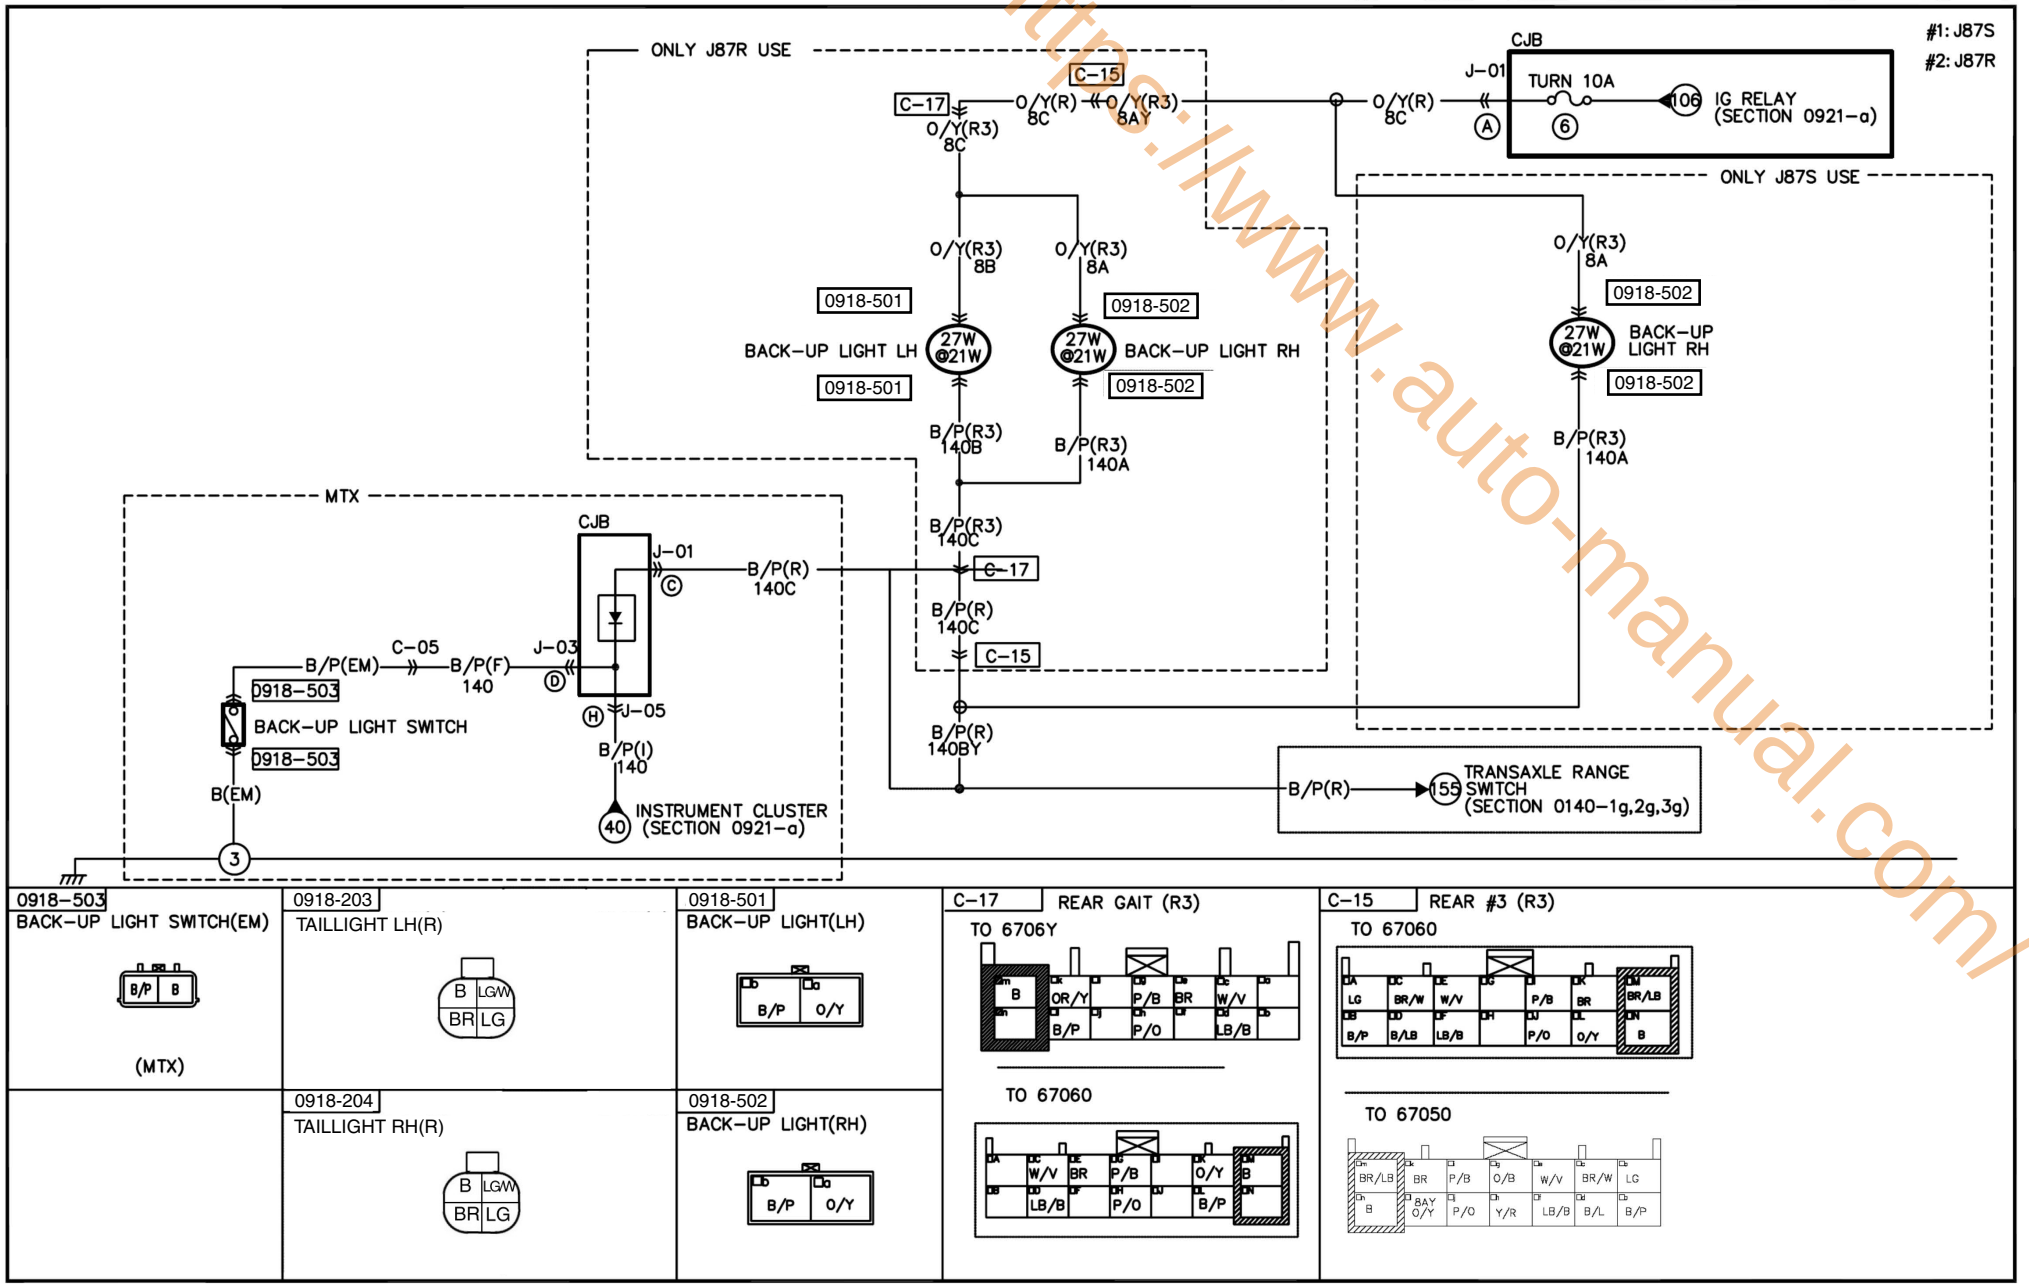


https://www.auto-manual.com/

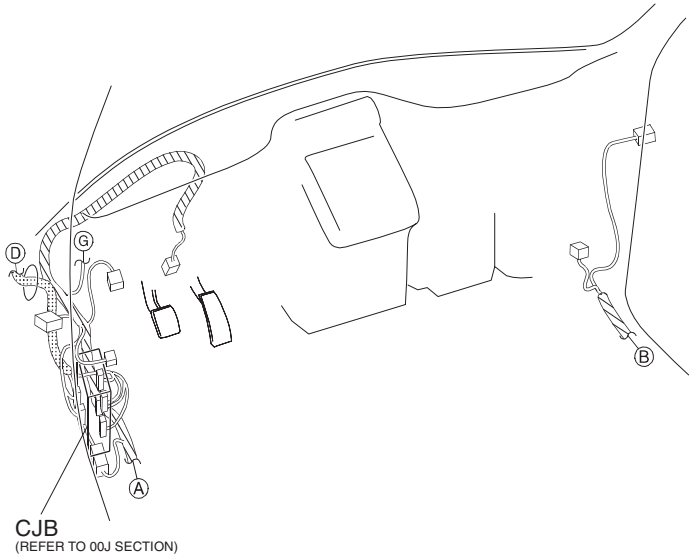

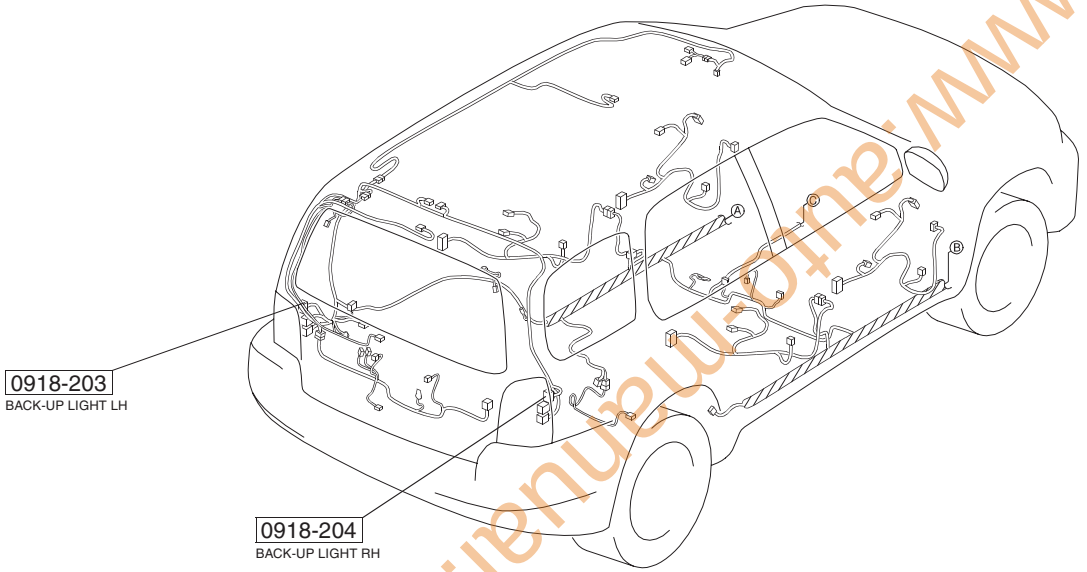

https://www.autoemanual.com/

BRAKE LIGHT/HIGH-MOUNT BRAKE LIGHT

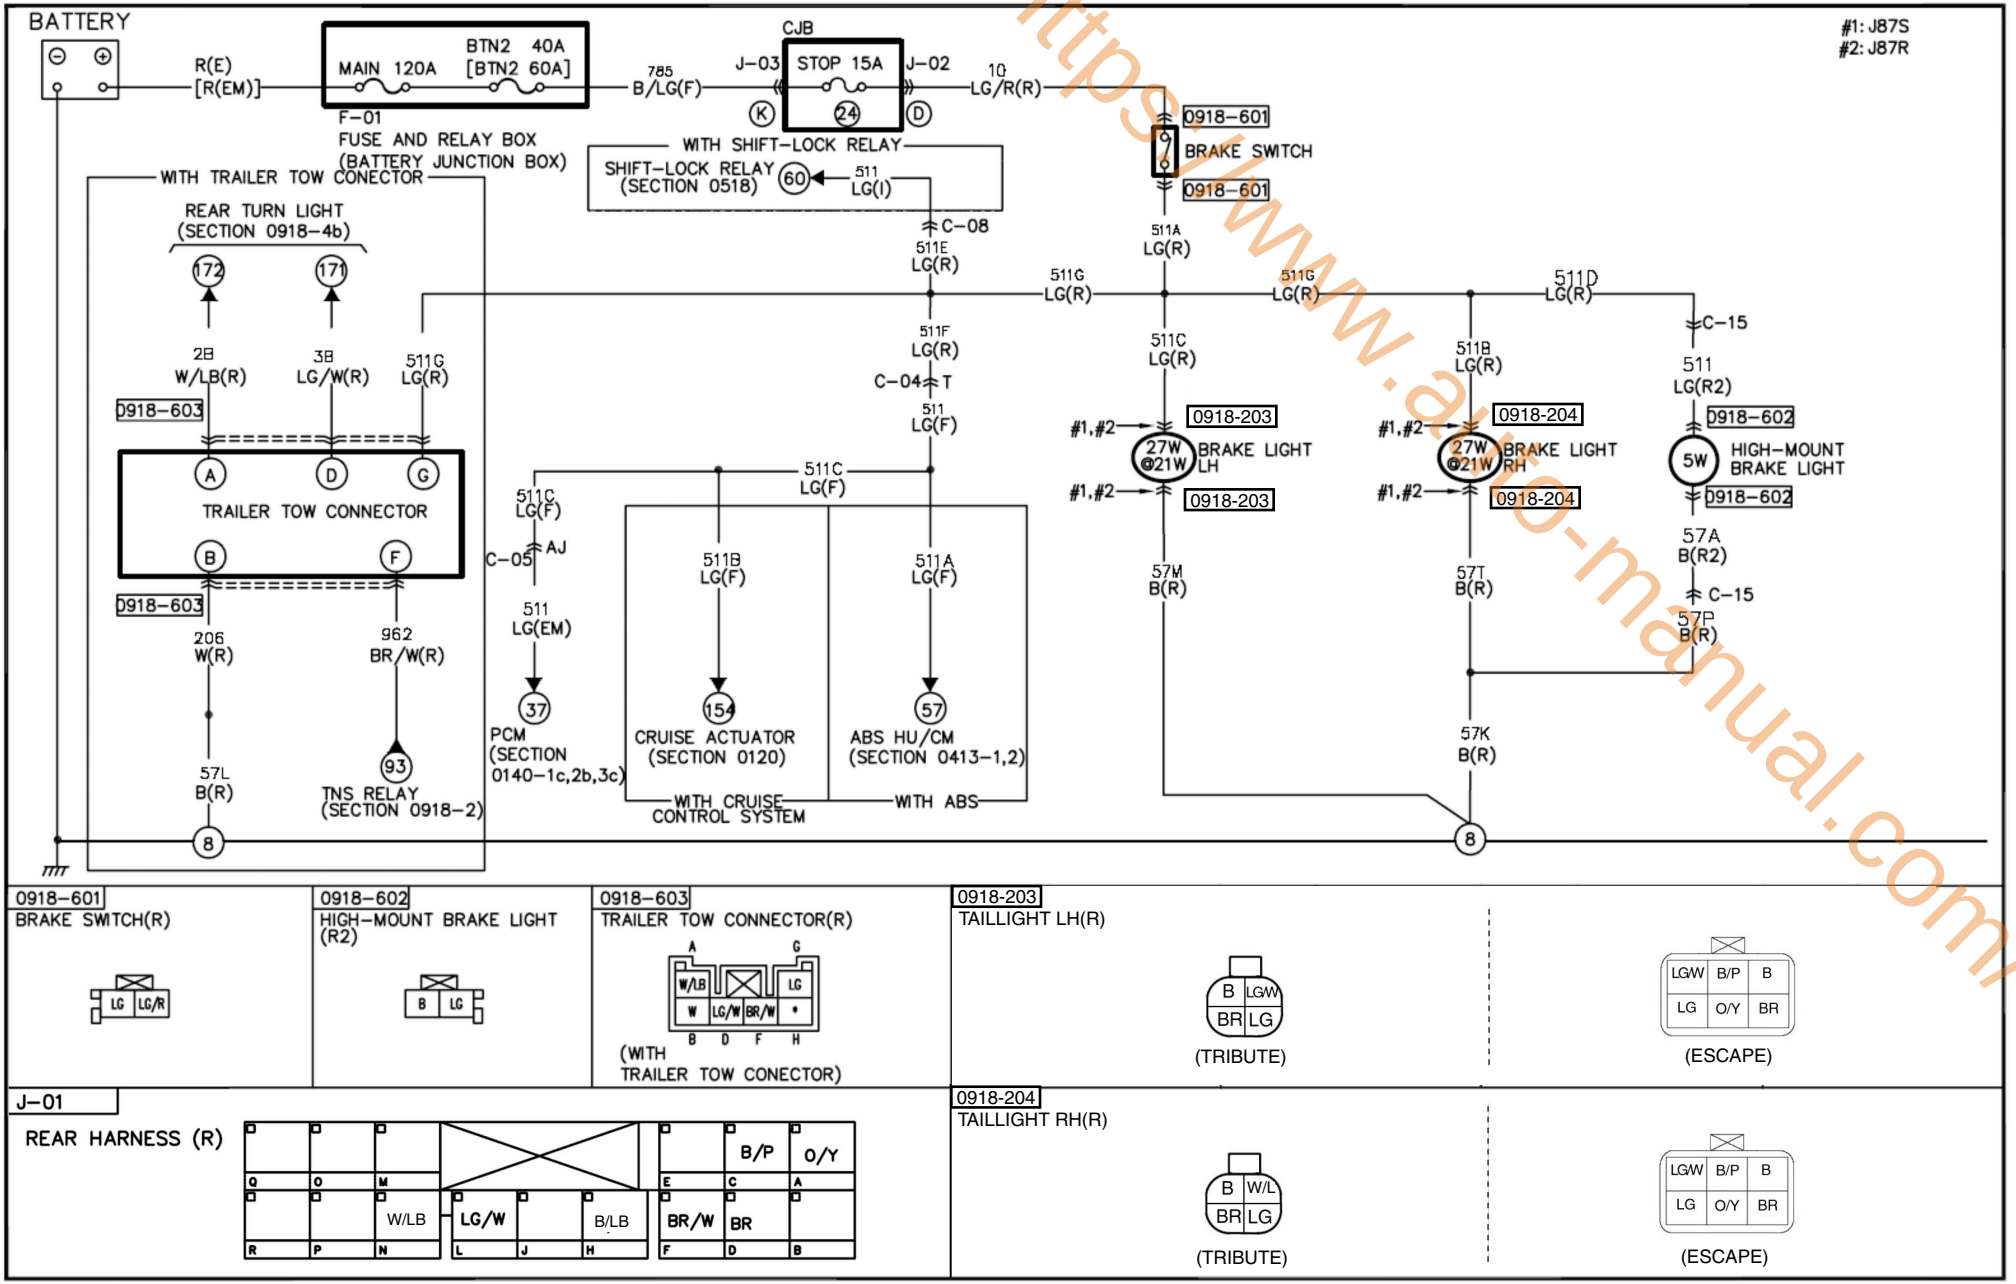

0918-601 BRAKE SWITCH(R)

0918-602 HIGH-MOUNT BRAKE LIGHT (R2)

0918-603 TRAILER TOW CONNECTOR(R)

(WITH TRAILER TOW CONECTOR)

0918-203 TAILLIGHT LH(R)

(TRIBUTE)

(ESCAPE)


J-01 REAR HARNESS (R)


0918-204 TAILLIGHT RH(R)


(TRIBUTE)


(ESCAPE)

https://www.auto-manual.com/

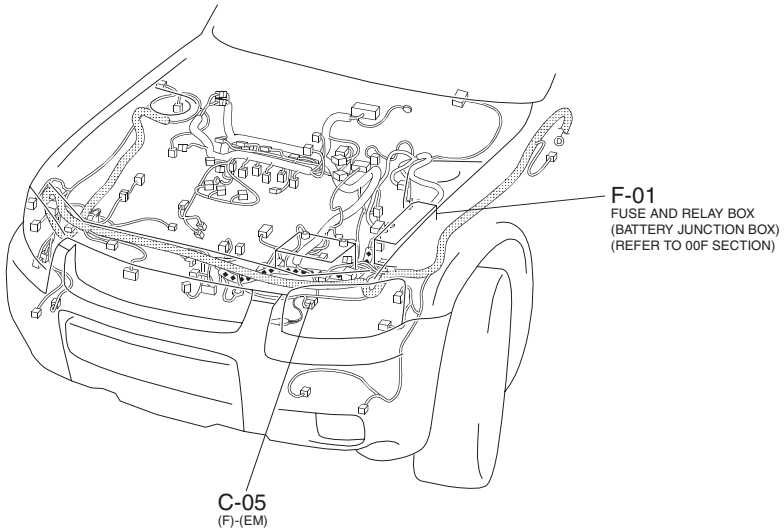


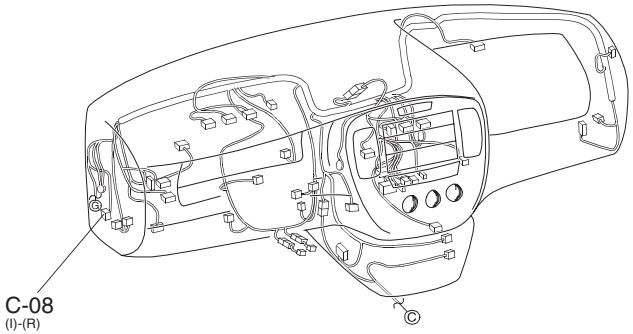

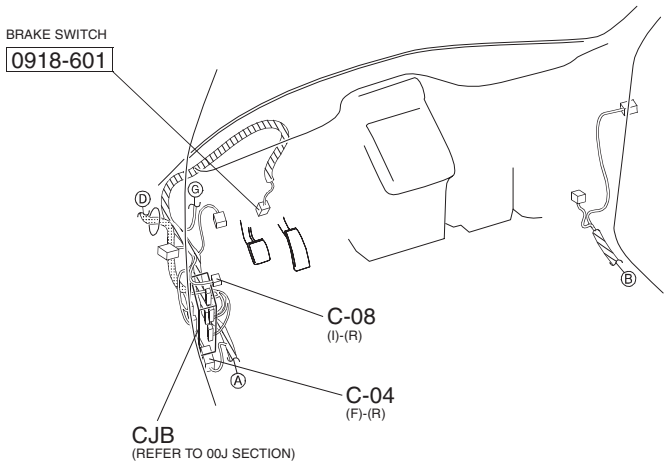


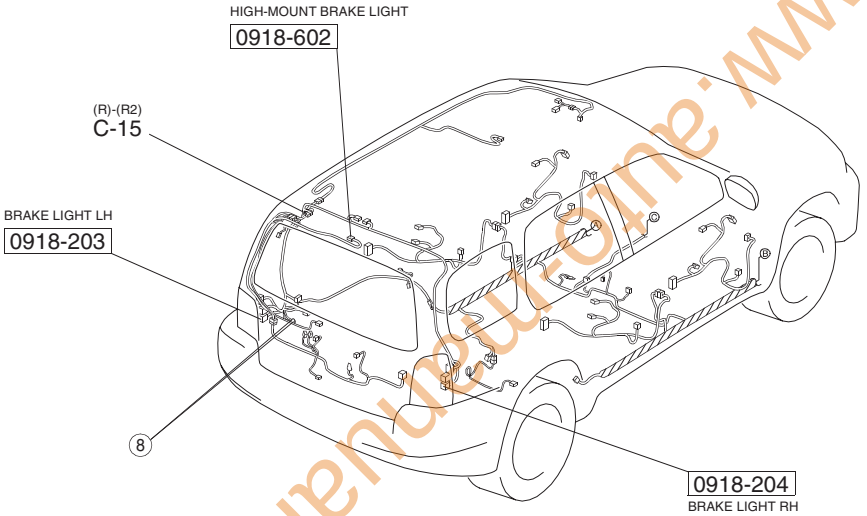


https://www.auto-manual.com/

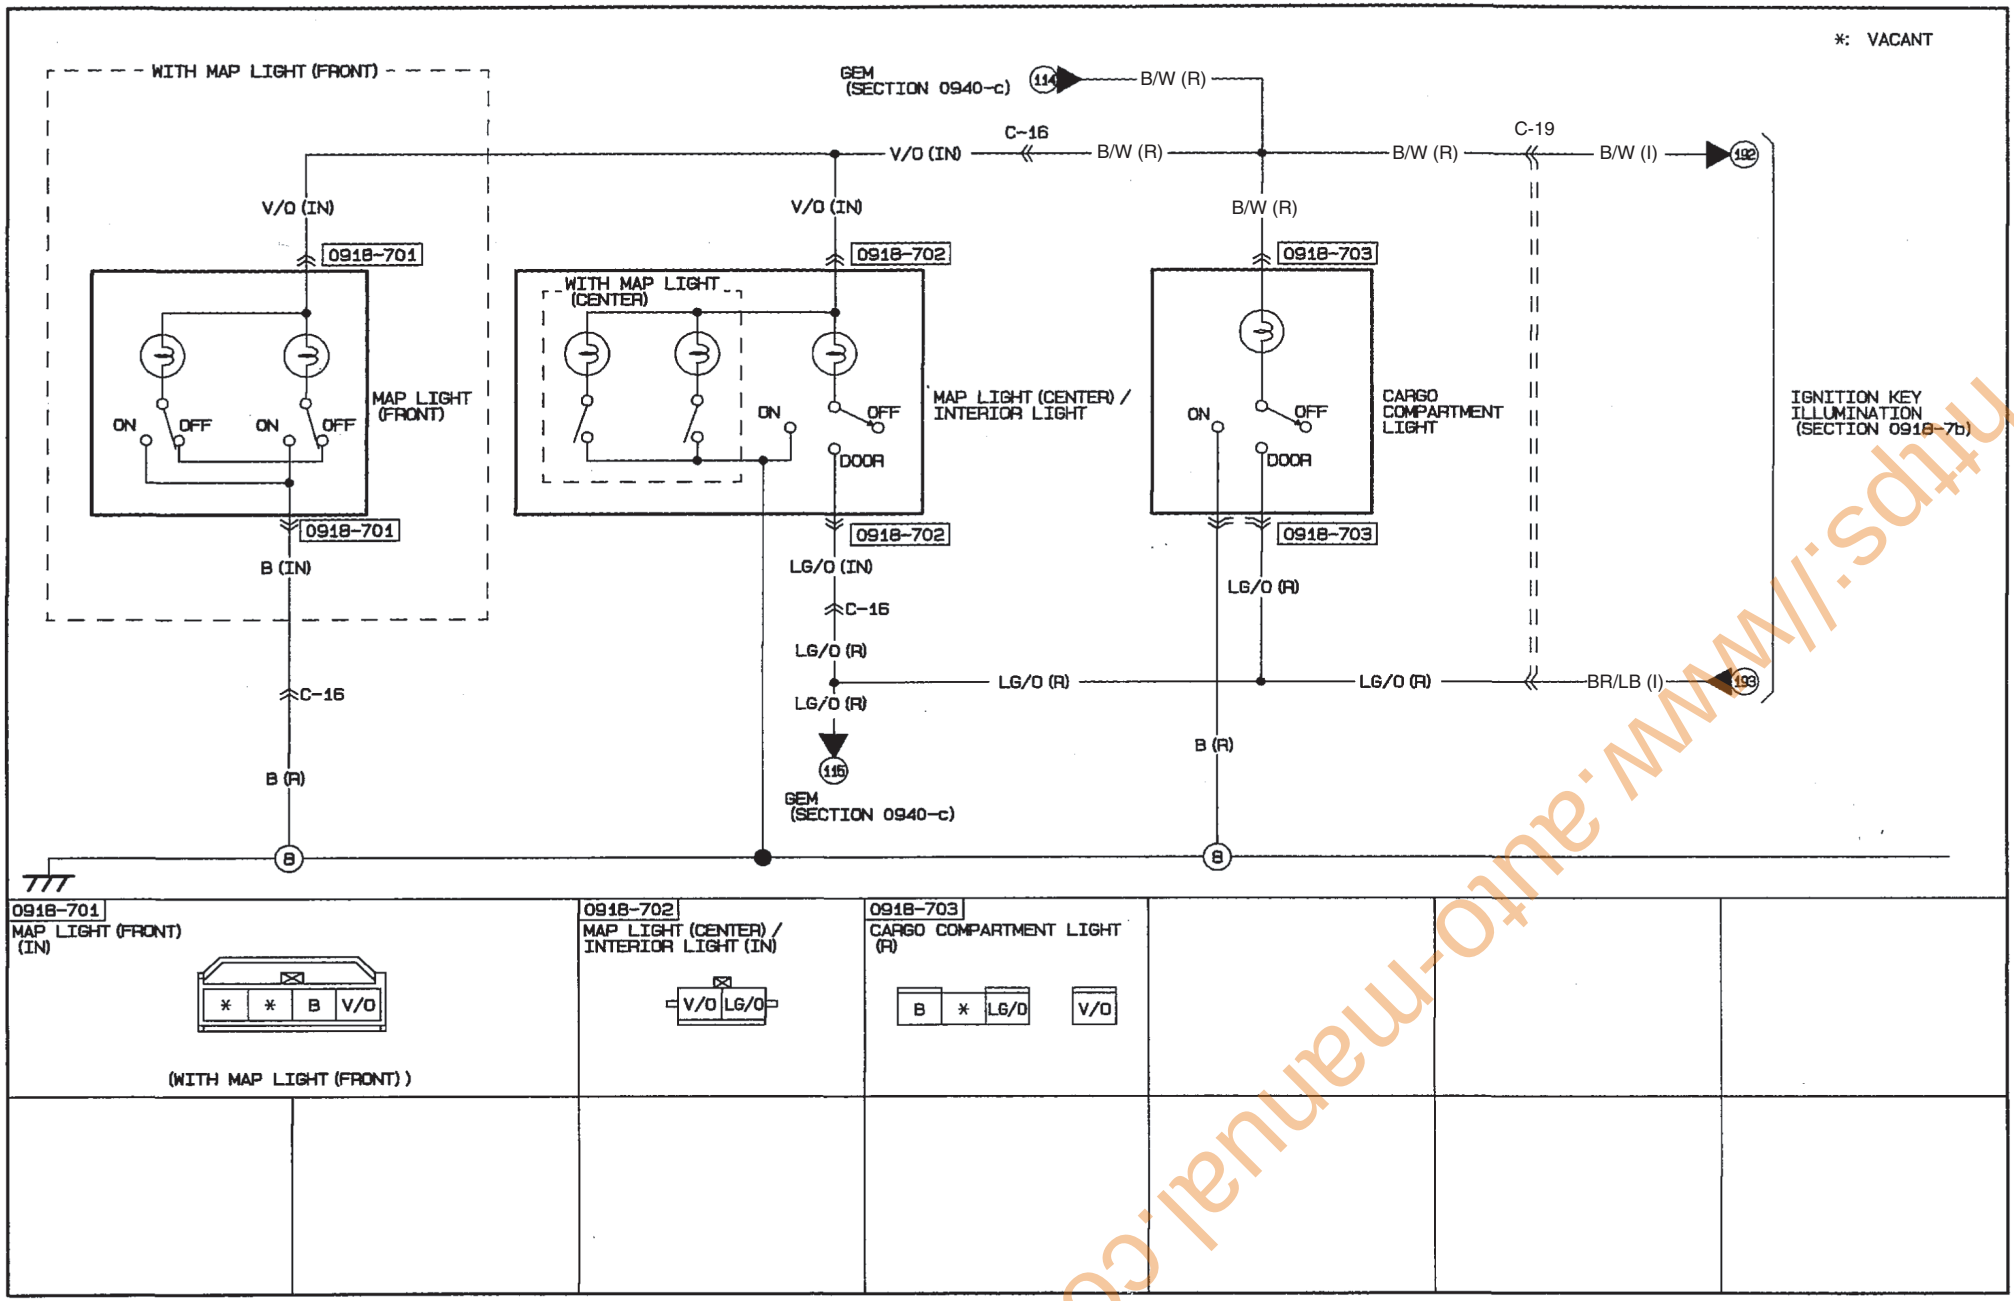

https://www.auto-manual.com/

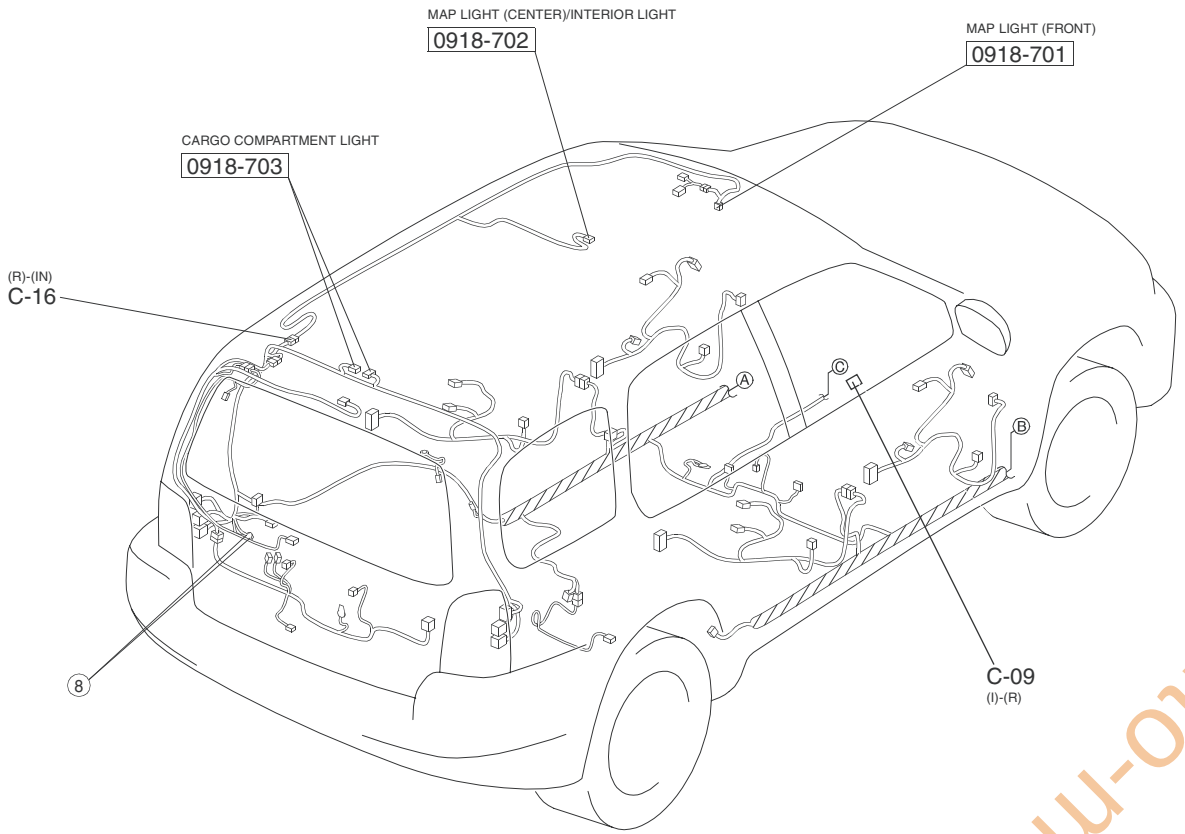



https://www.auto-manual.com/

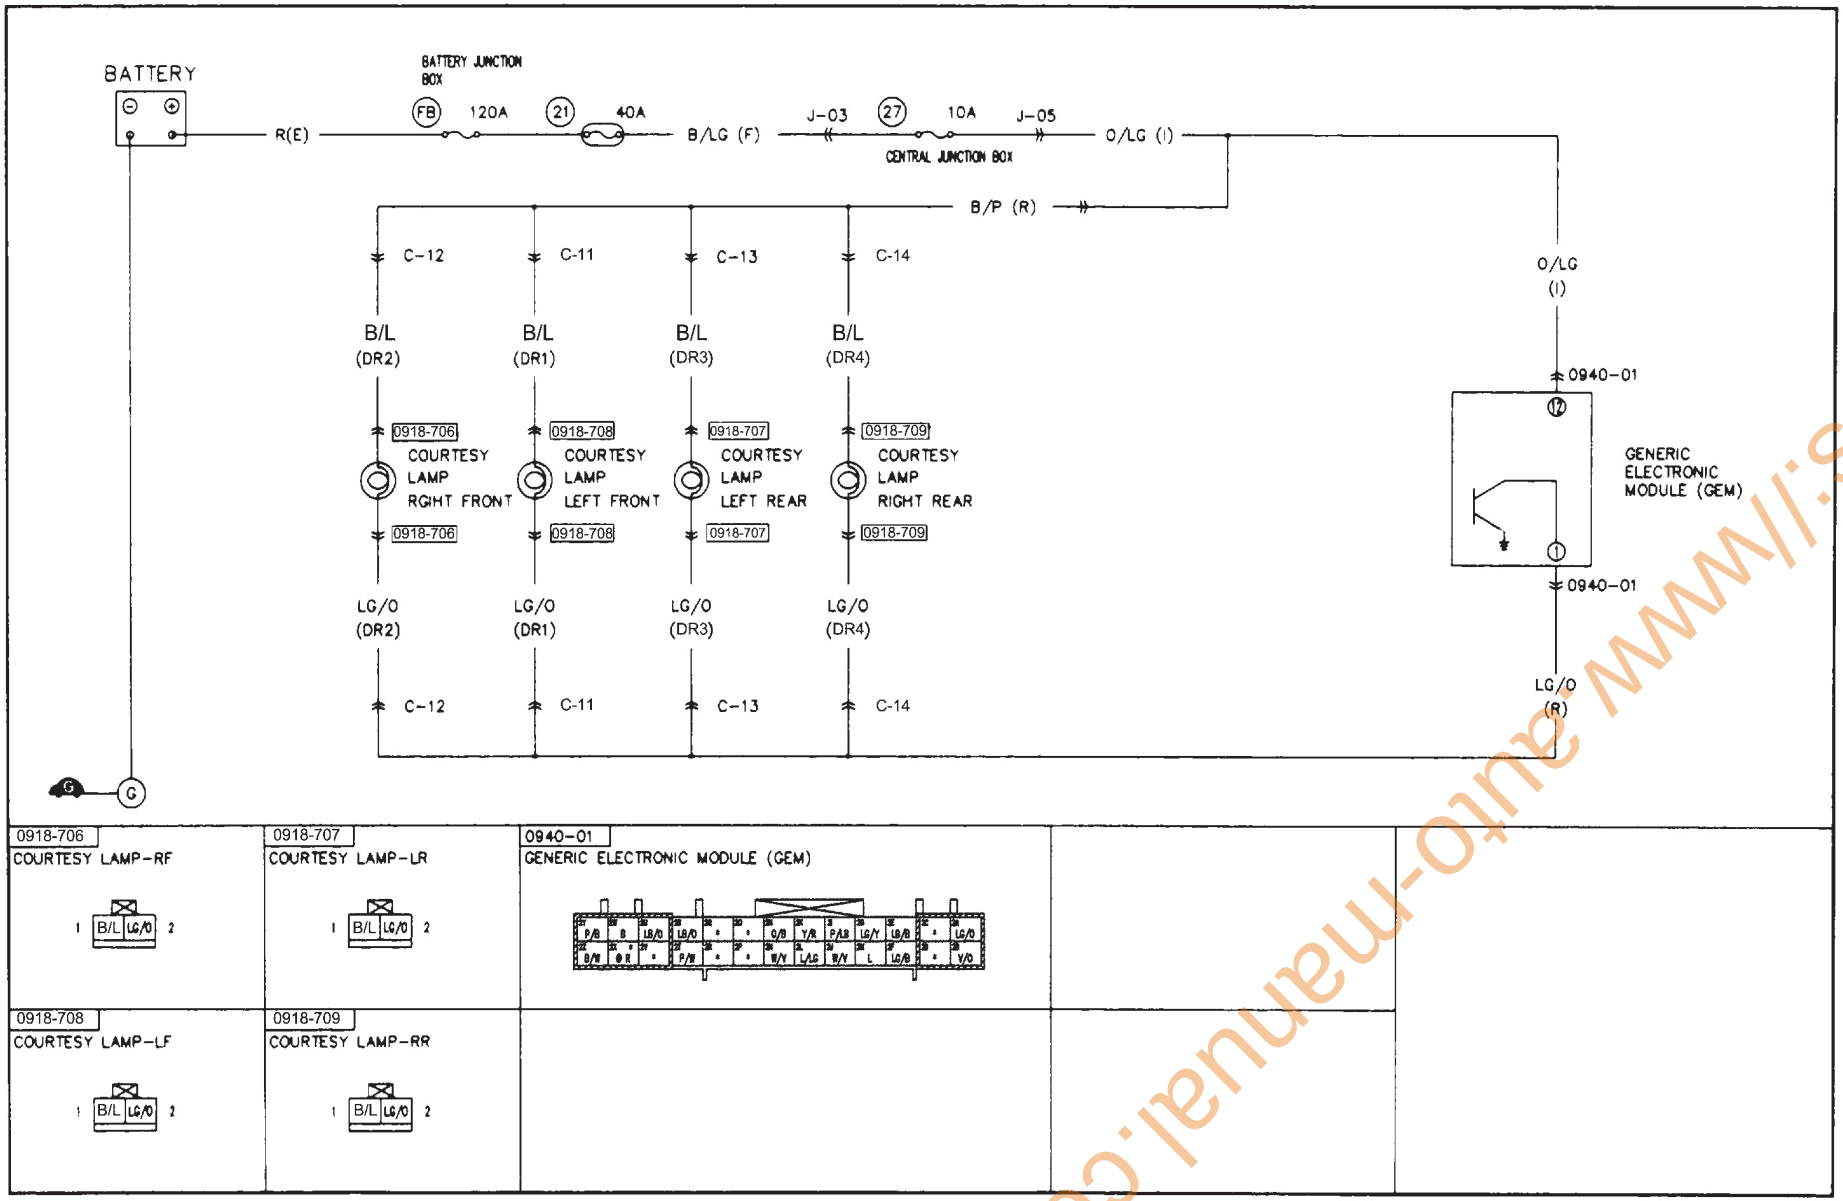



0918-706	0918-707	0940-01		
COURTESY LAMP-RF	COURTESY LAMP-LR	GENERIC ELECTRONIC MODULE (GEM)		
0918-708	0918-709			
COURTESY LAMP-LF	COURTESY LAMP-RR			

https://www.auto-manual.com/

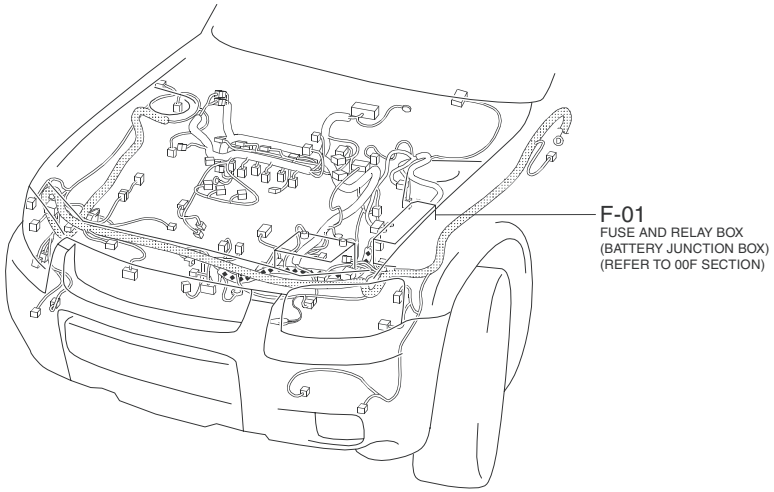


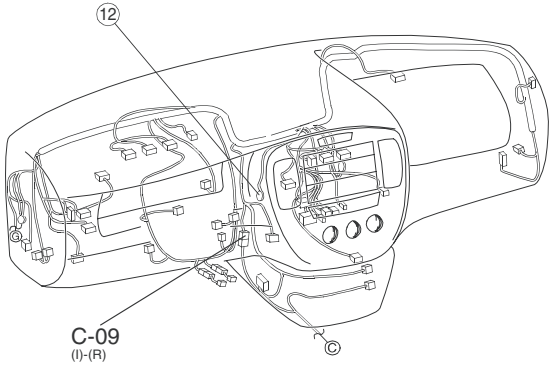

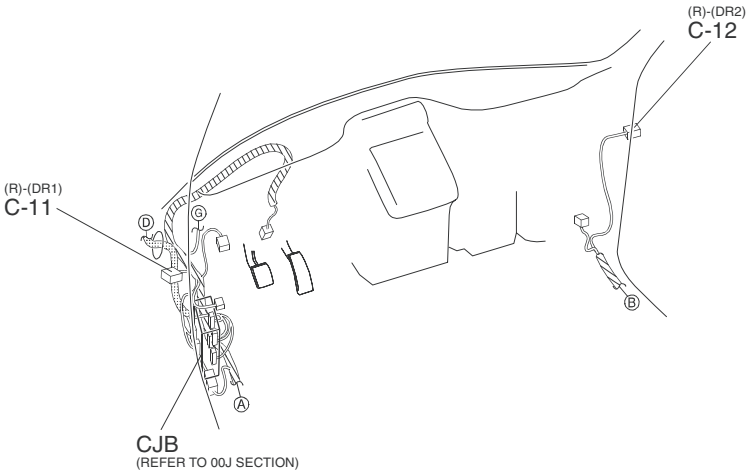

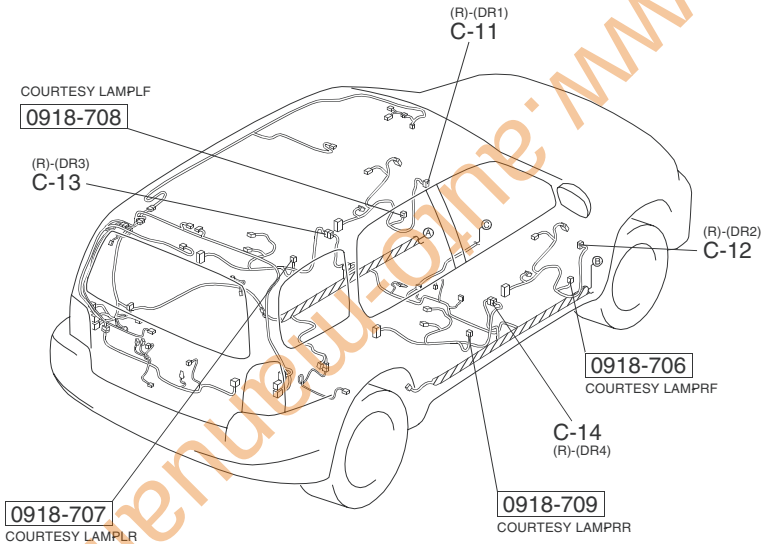

https://www.auto-manual.com/

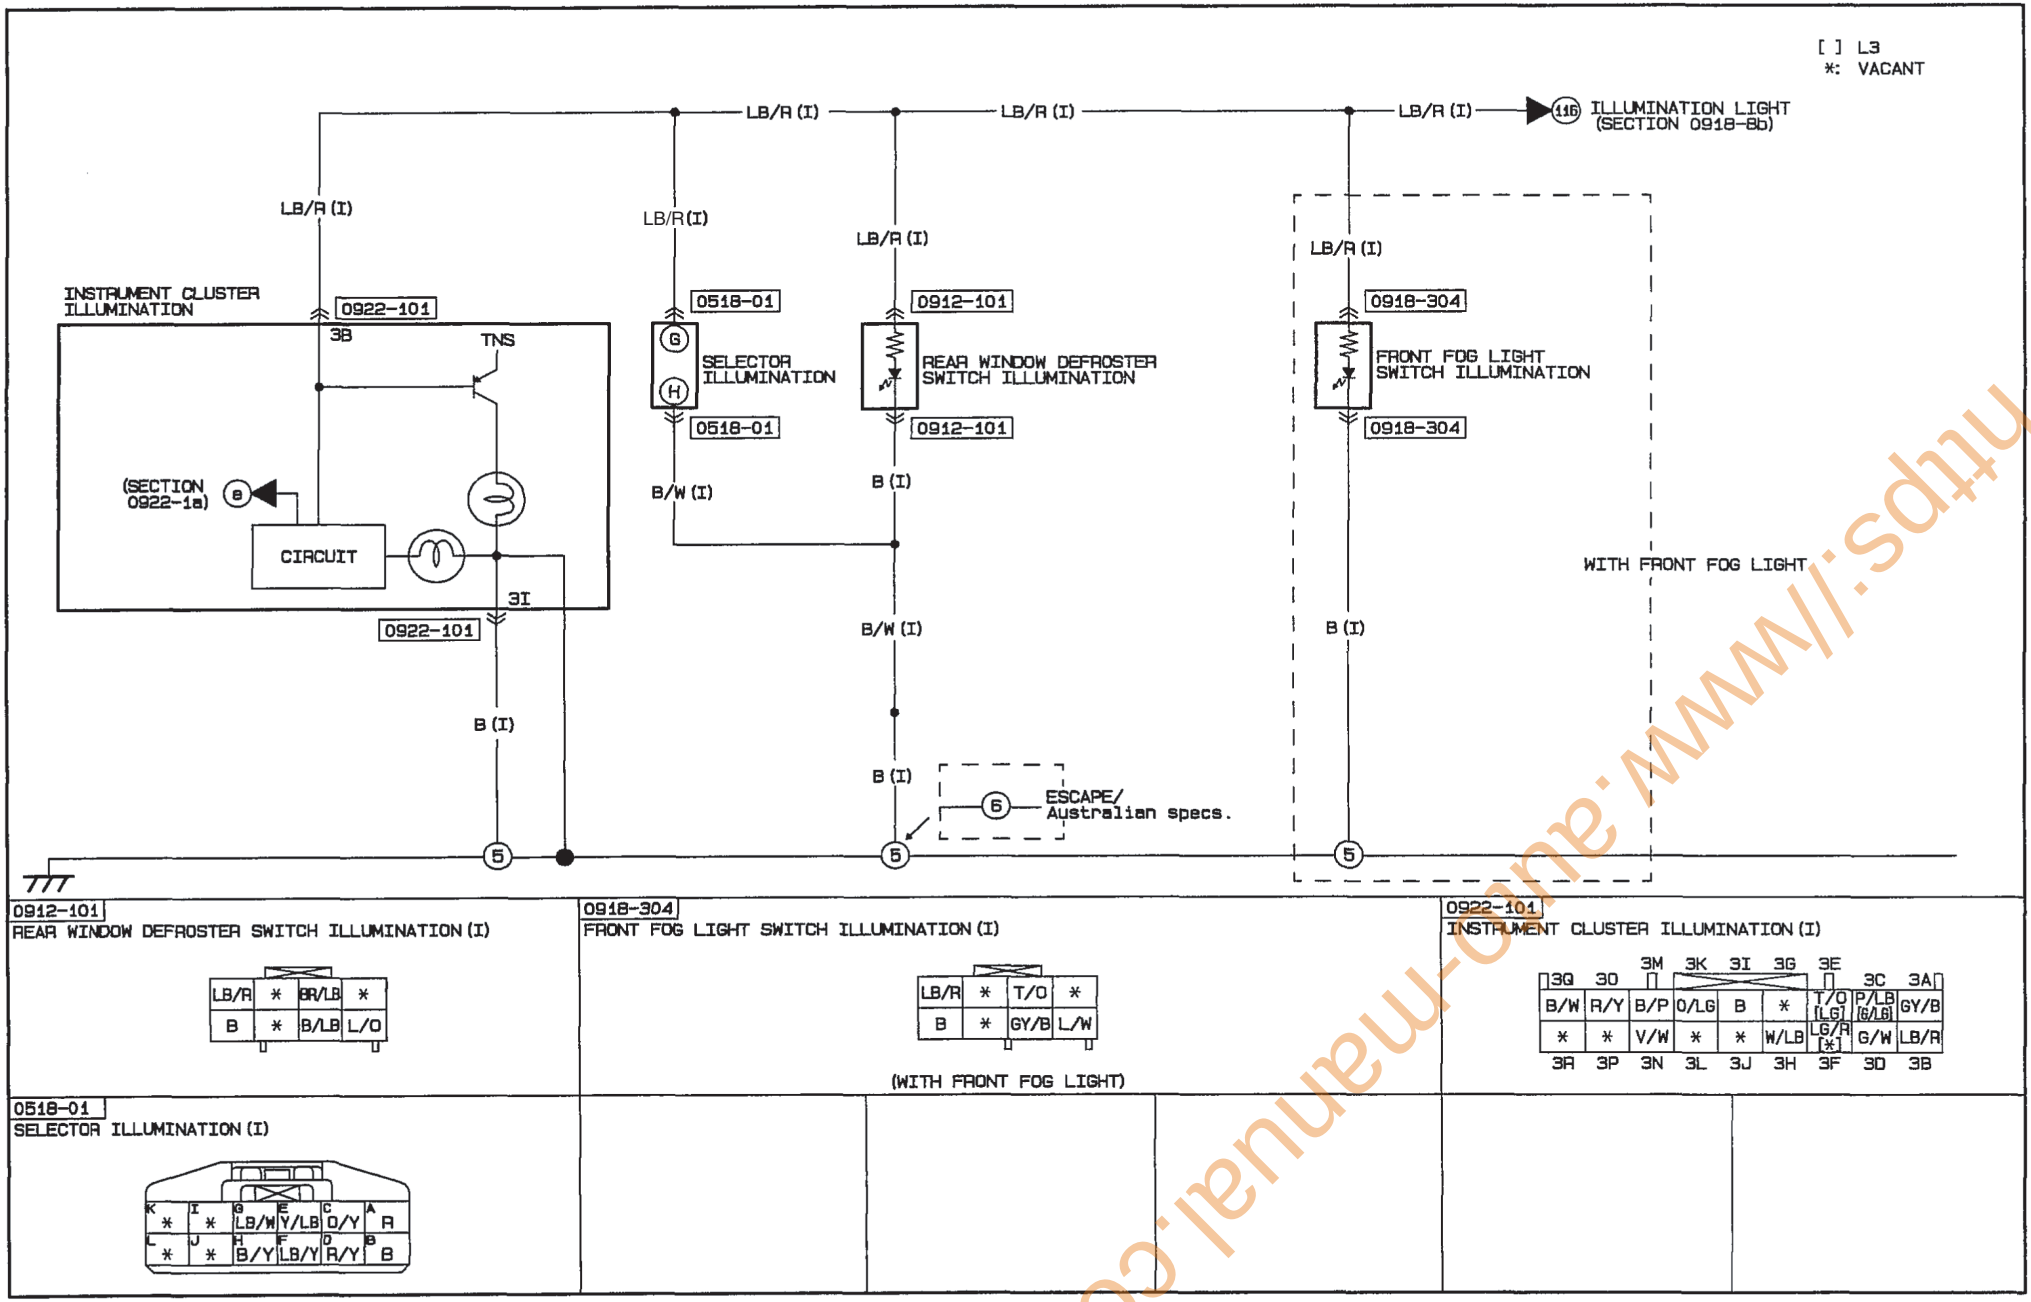

0912-101
REAR WINDOW DEFROSTER SWITCH ILLUMINATION (I)

LB/R	*	BR/LB	*
B	*	B/LB	L/O

0918-304
FRONT FOG LIGHT SWITCH ILLUMINATION (I)

LB/R	*	T/O	*
B	*	GY/B	L/W

(WITH FRONT FOG LIGHT)


0922-101
INSTRUMENT CLUSTER ILLUMINATION (I)

3Q	3O	3M	3K	3I	3G	3E	3C	3A
B/W	R/Y	B/P	O/LG	B	*	T/O [LG]	P/LB [G/LG]	GY/B
*	*	V/W	*	*	W/LB	G/R [*]	G/W	LB/R
3R	3P	3N	3L	3J	3H	3F	3D	3B


0518-01
SELECTOR ILLUMINATION (I)

K *	I *	G LB/W	E Y/LB	C O/Y	A R
L *	J *	H B/Y	F LB/Y	D R/Y	B B

https://www.auto-manual.com/

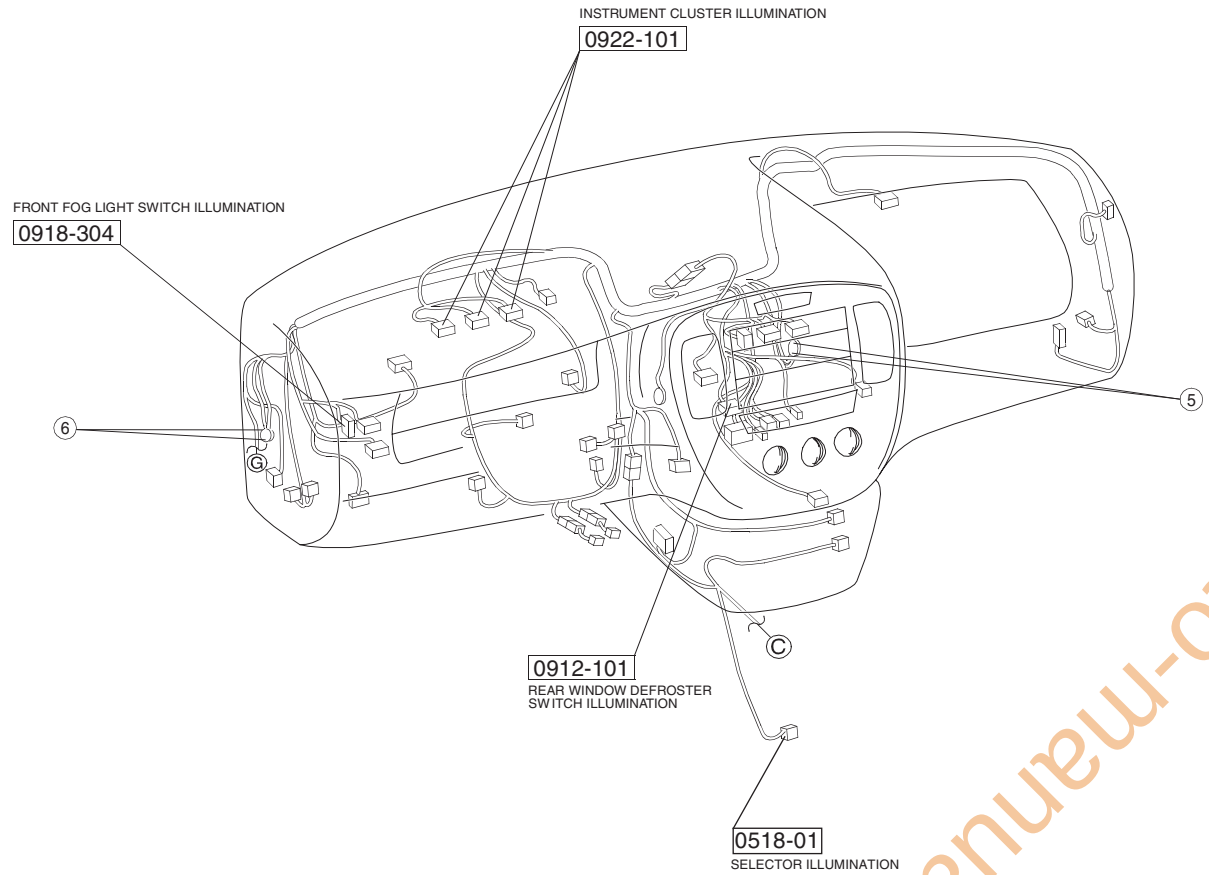

https://www.auto-manual.com/

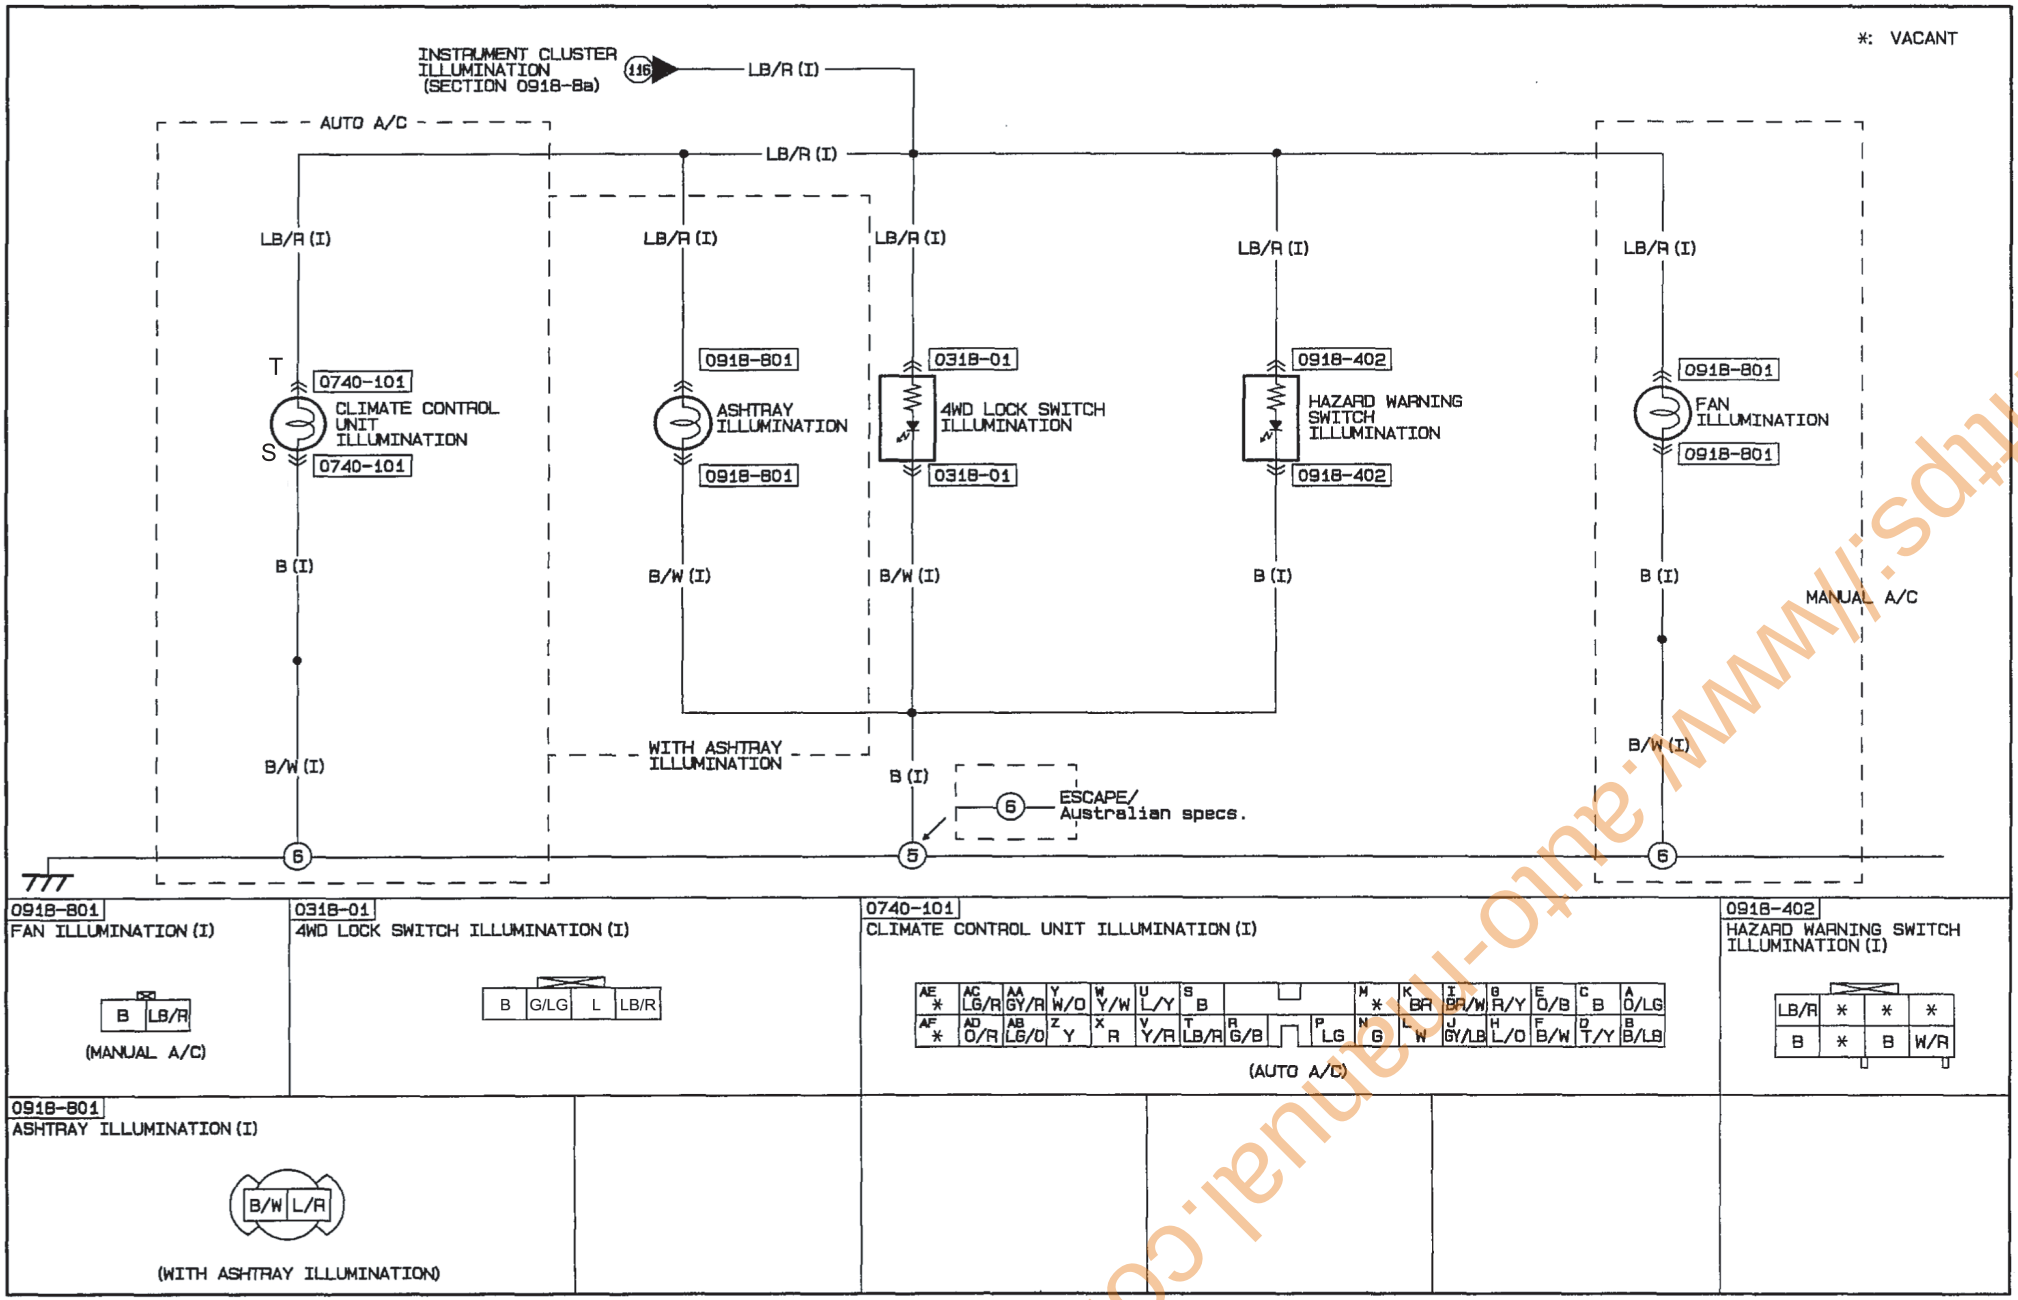

0918-801
FAN ILLUMINATION (I)

B	LB/R

(MANUAL A/C)

0318-01
4WD LOCK SWITCH ILLUMINATION (I)

B	G/LG	L	LB/R

0740-101
CLIMATE CONTROL UNIT ILLUMINATION (I)

AE *	AC LG/R	AA GY/R	Y W/O	W Y/W	U L/Y	S B		M *	K BR	I BR/W	B R/Y	E O/B	C B	A O/LG
AF *	AD O/R	AB LG/O	Z Y	X R	V Y/R	T LB/R	R G/B	P LG	N G	L W	J GY/LB	H L/O	F B/W	D T/Y	B B/LB

(AUTO A/C)

0918-402
HAZARD WARNING SWITCH ILLUMINATION (I)


LB/R	*	*	*
B	*	B	W/R

0918-801
ASHTRAY ILLUMINATION (I)


B/W	L/R

(WITH ASHTRAY ILLUMINATION)

https://www.auto-manual.com/

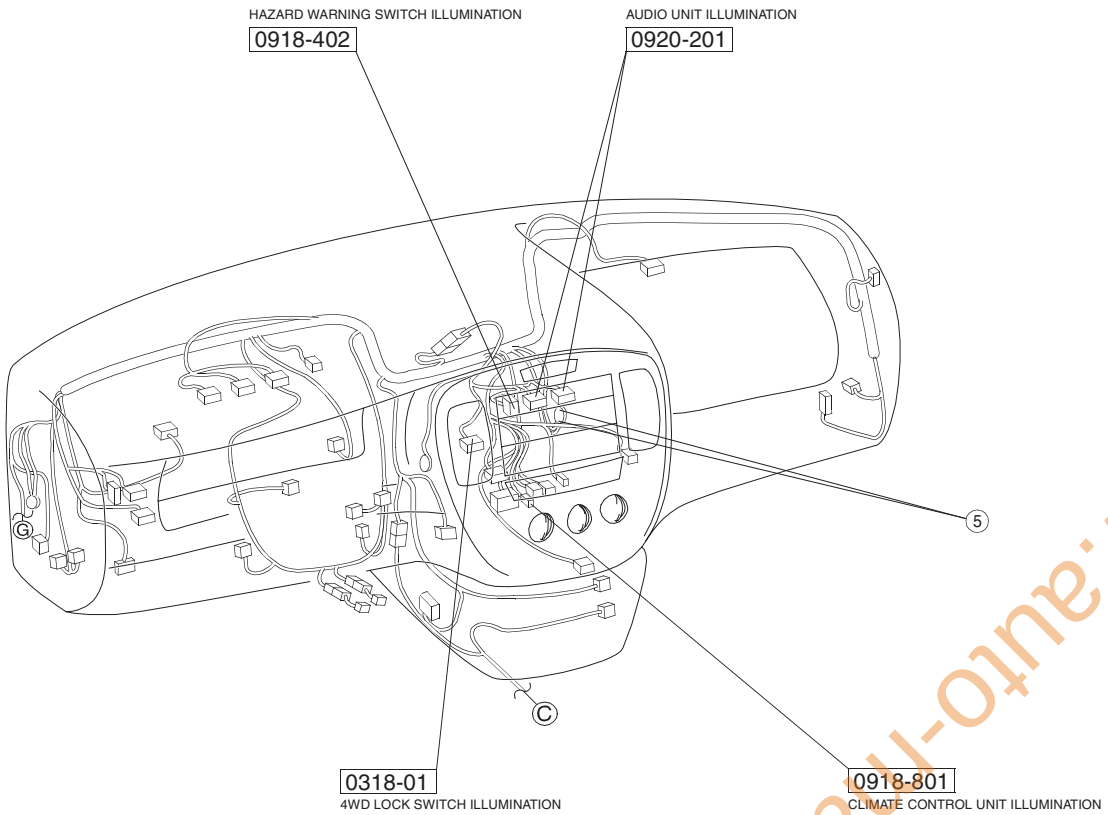

https://www.auto-manual.com/

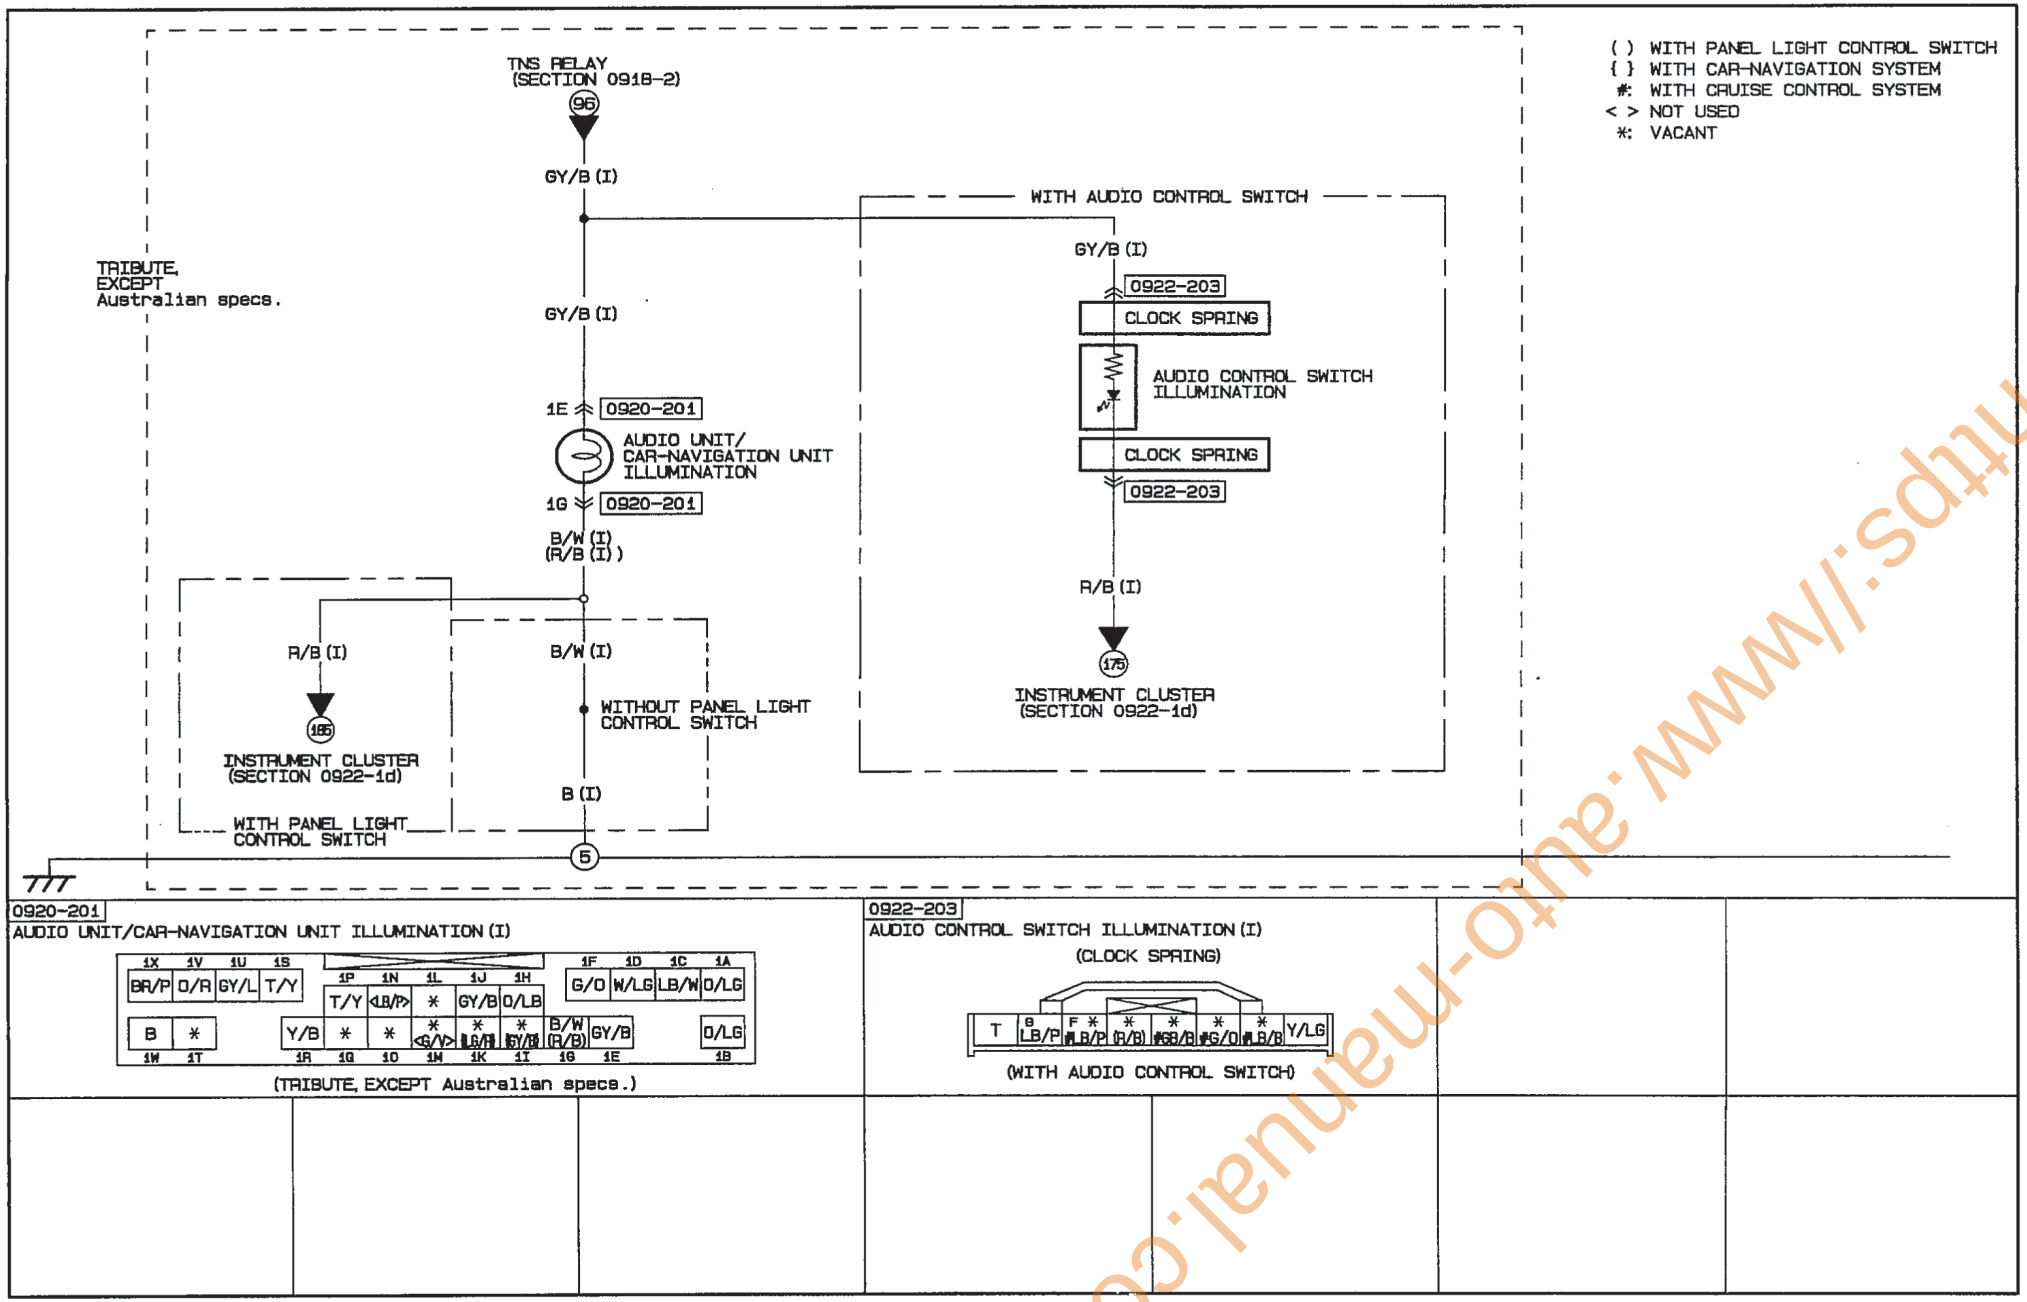


0920-201
AUDIO UNIT/CAR-NAVIGATION UNIT ILLUMINATION (I)

(TRIBUTE, EXCEPT Australian specs.)


0922-203
AUDIO CONTROL SWITCH ILLUMINATION (I)
(CLOCK SPRING)

(WITH AUDIO CONTROL SWITCH)


https://www.auto-manual.com/

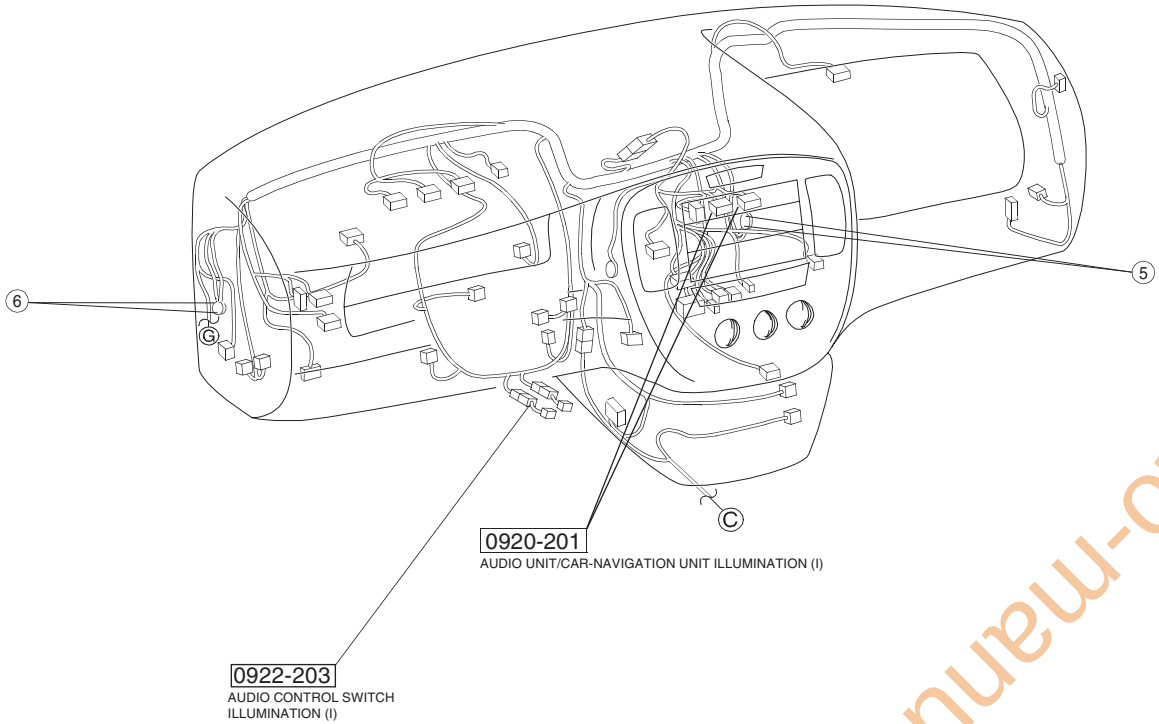


https://www.auto-manual.com/

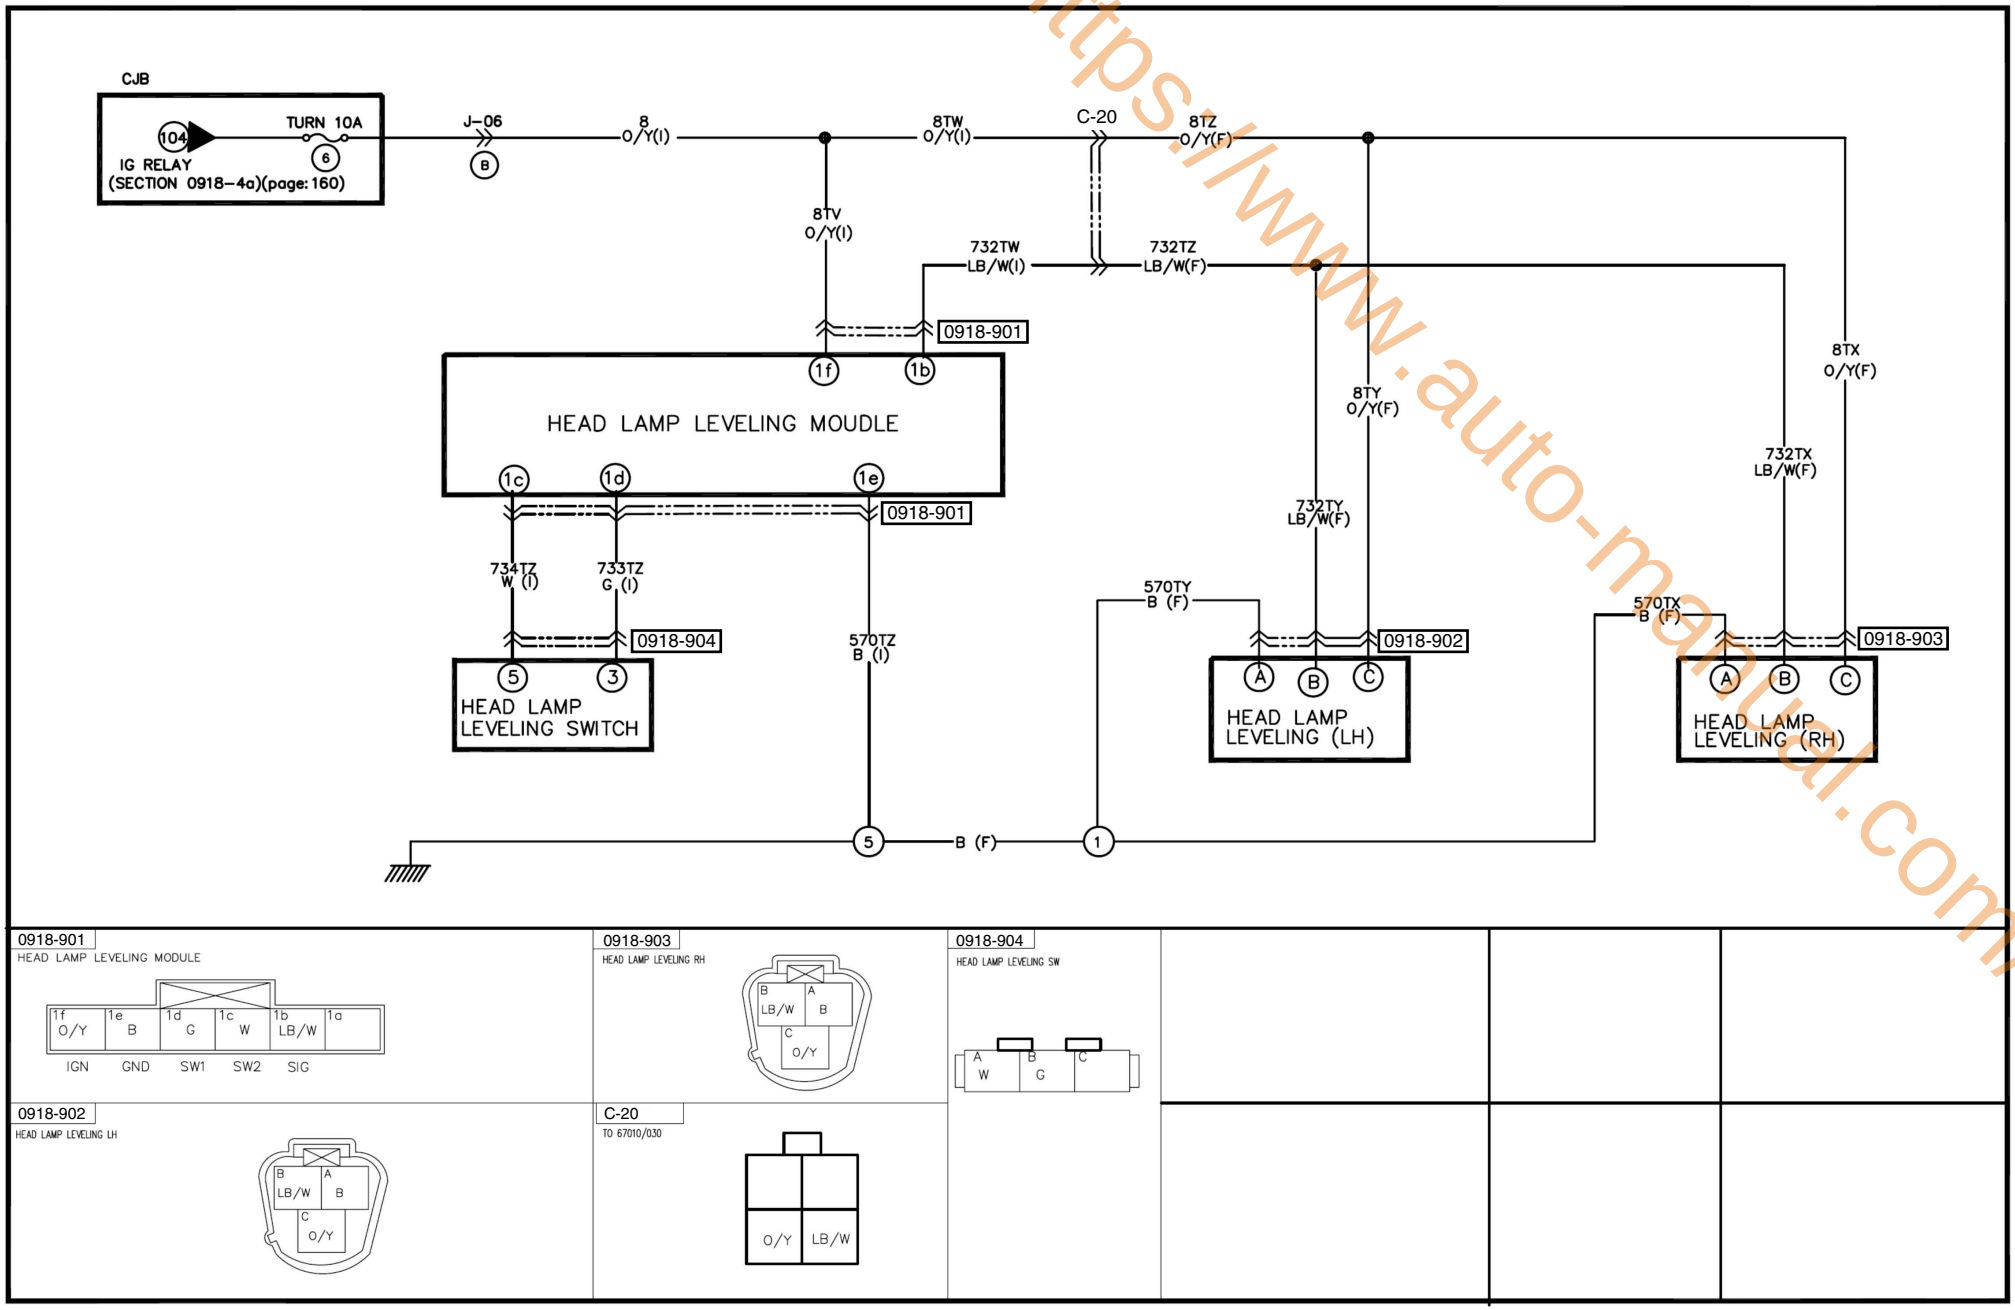

https://www.auto-manual.com/

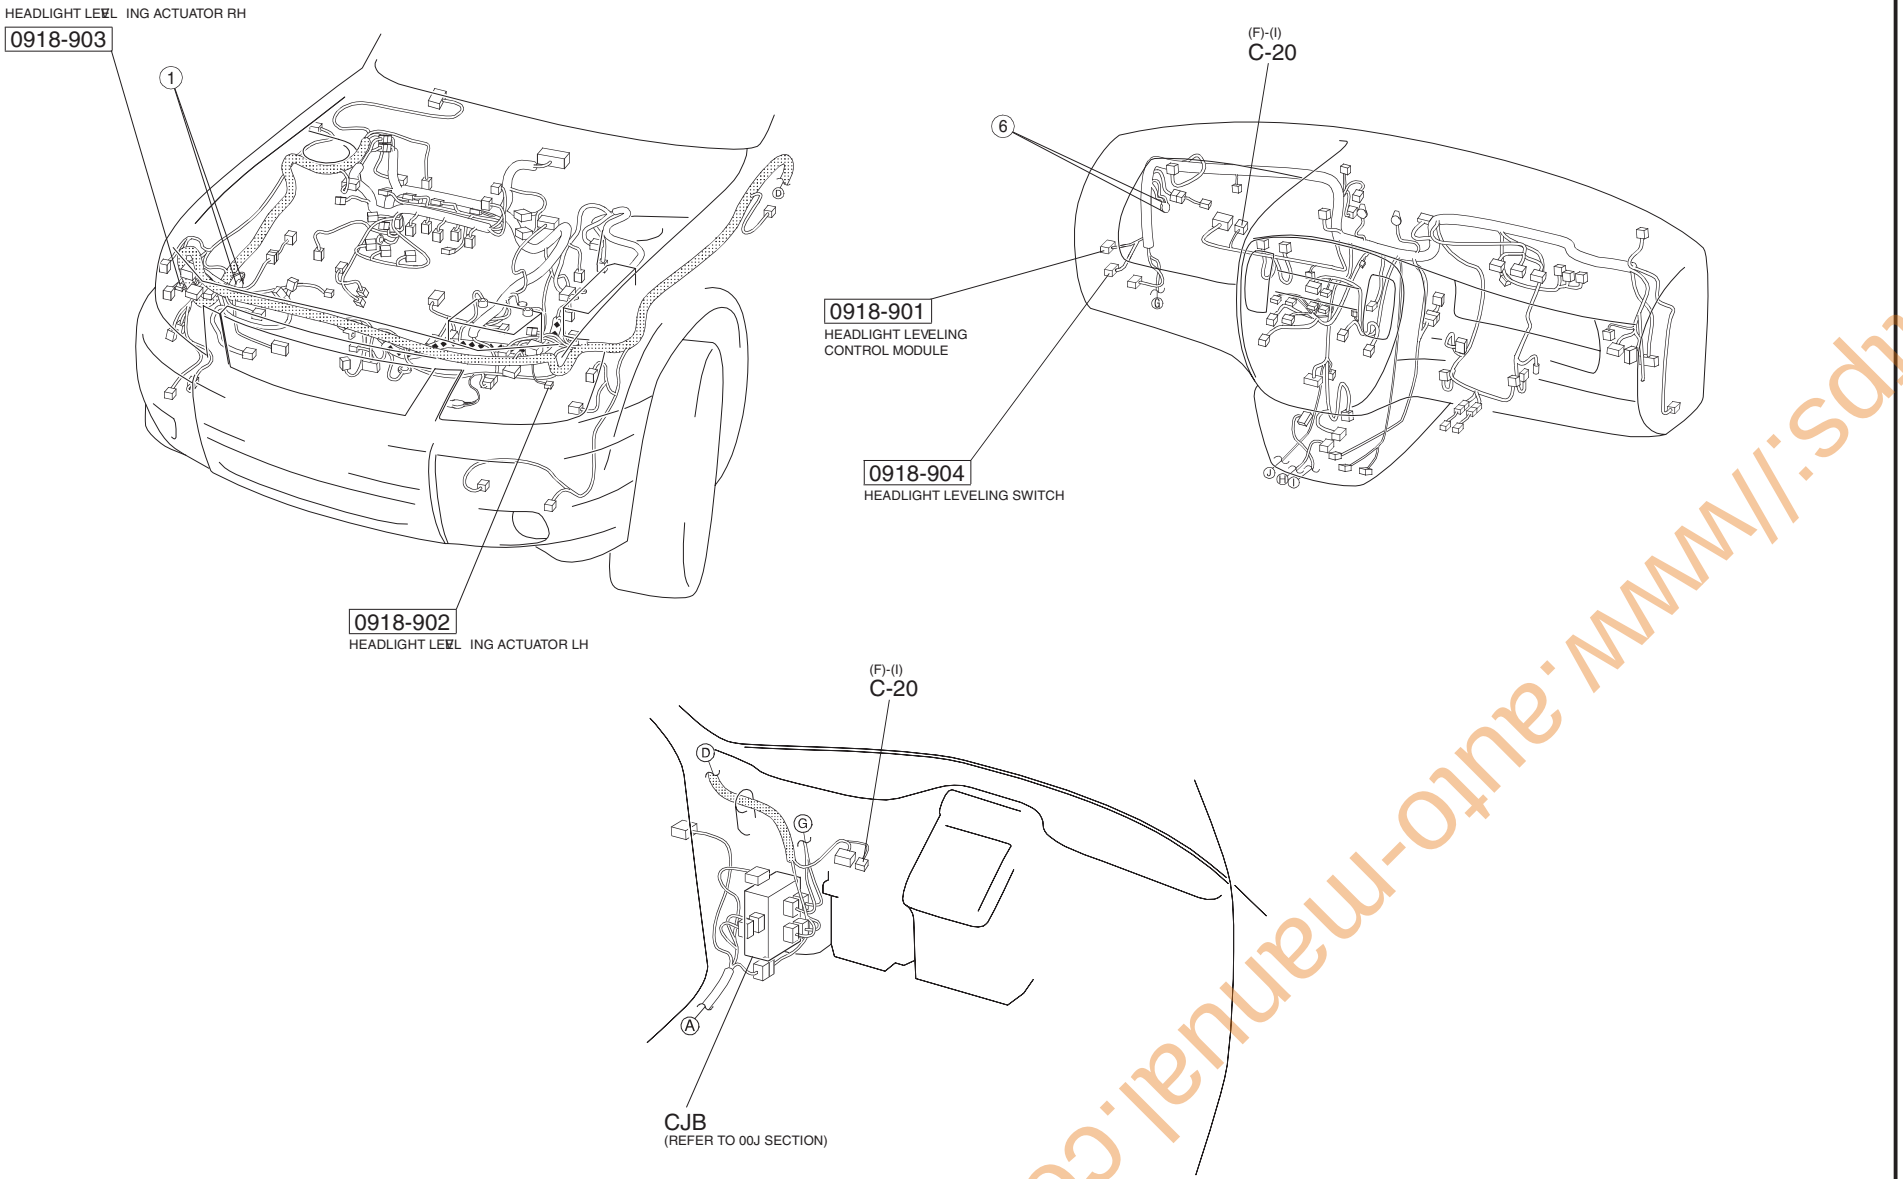



https://www.auto-manual.com/

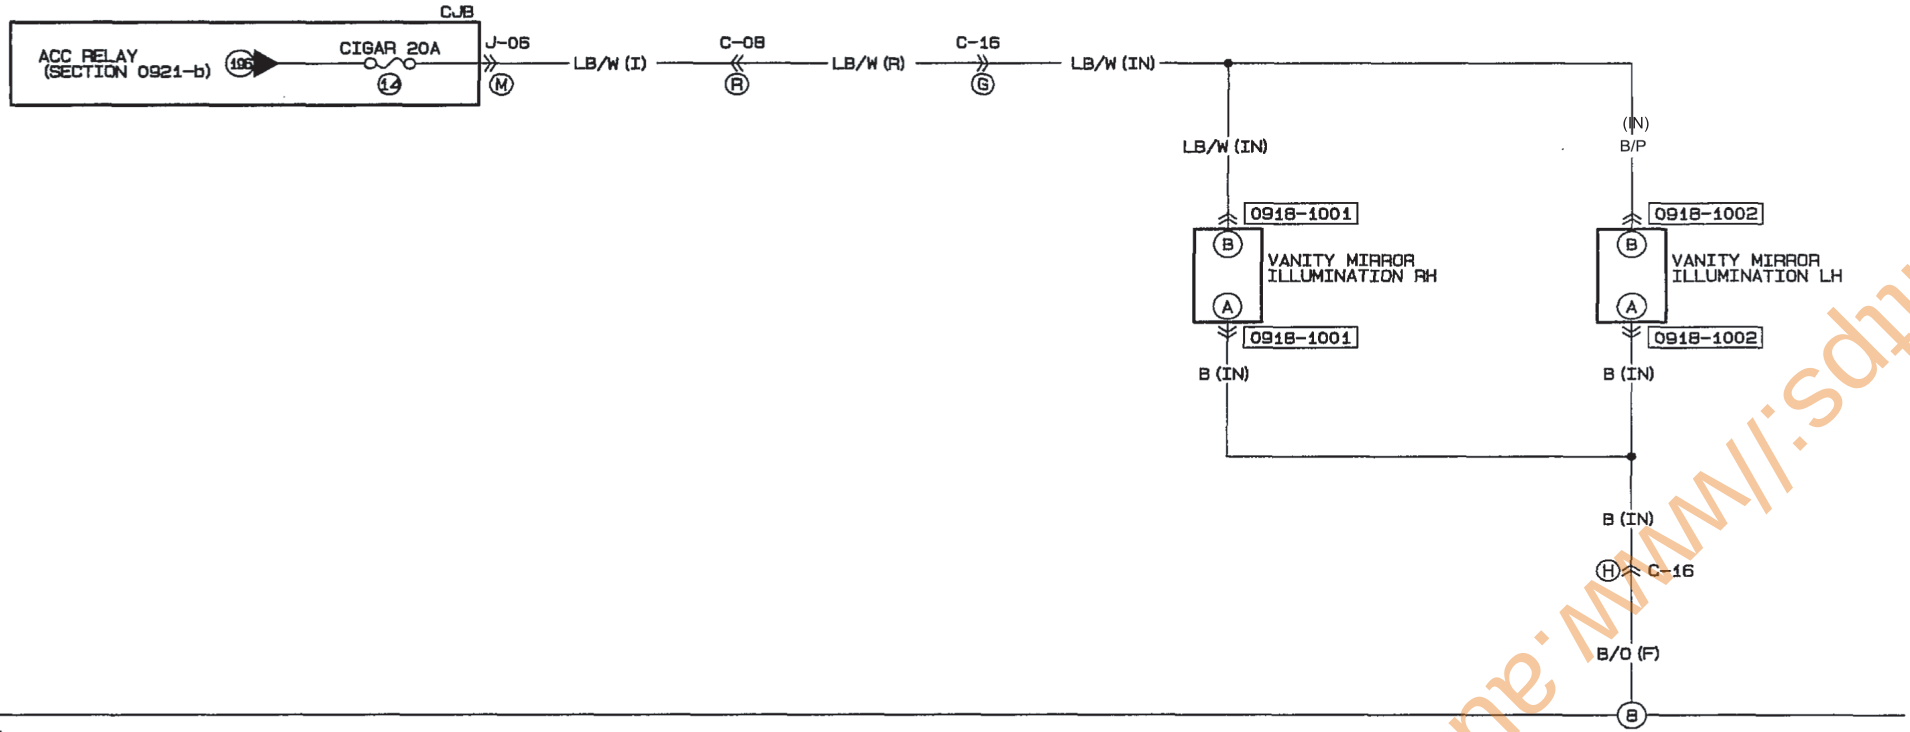


0918-1001 VANITY MIRROR ILLUMINATION RH (IN)	0918-1002 VANITY MIRROR ILLUMINATION LH (IN)					
LB/W B	B/P B					

https://www.auto-manual.com/

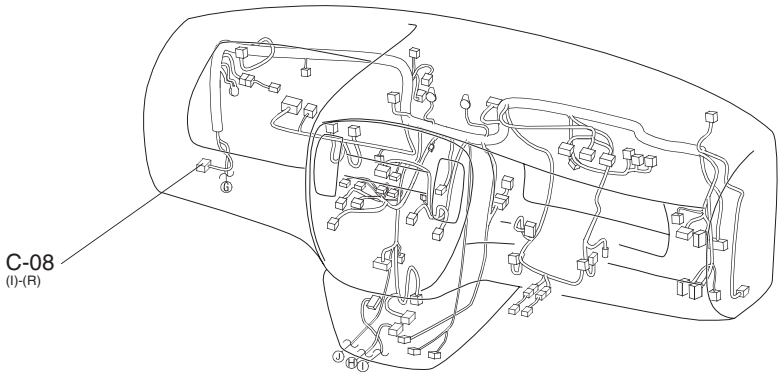


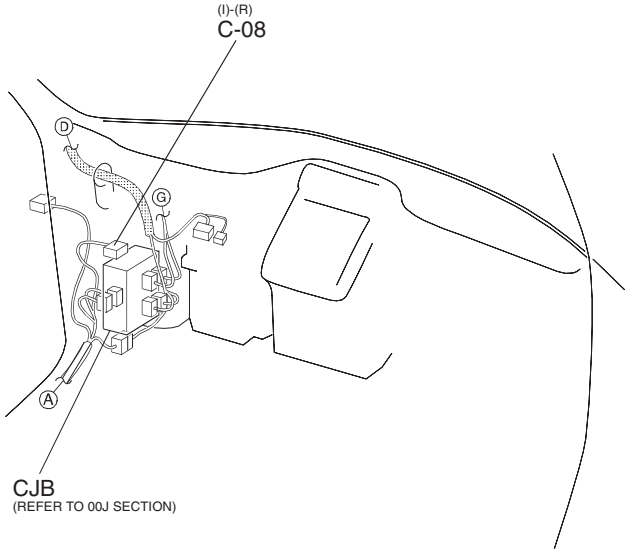

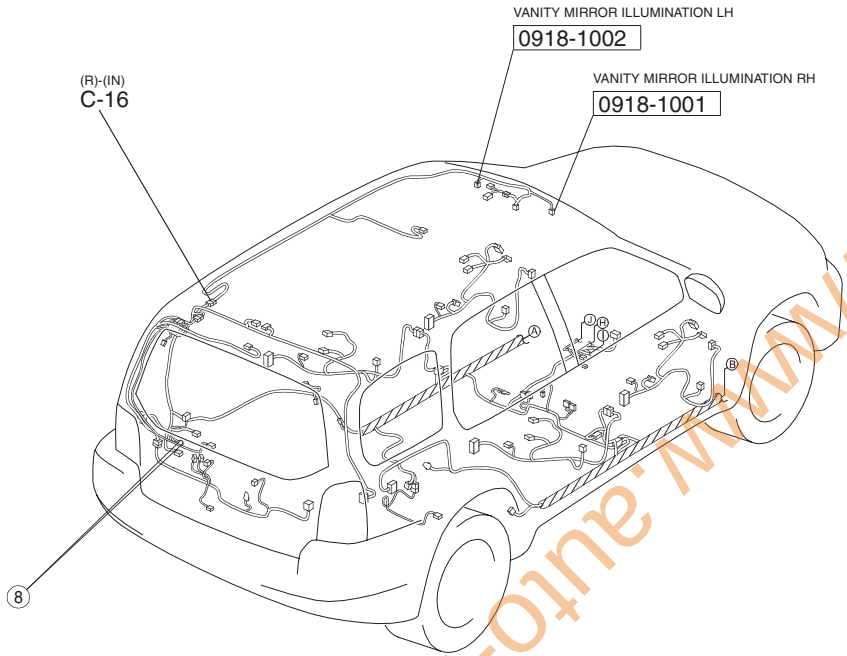

https://www.auto-manual.com/

WINDSHIELD WIPER AND WASHER

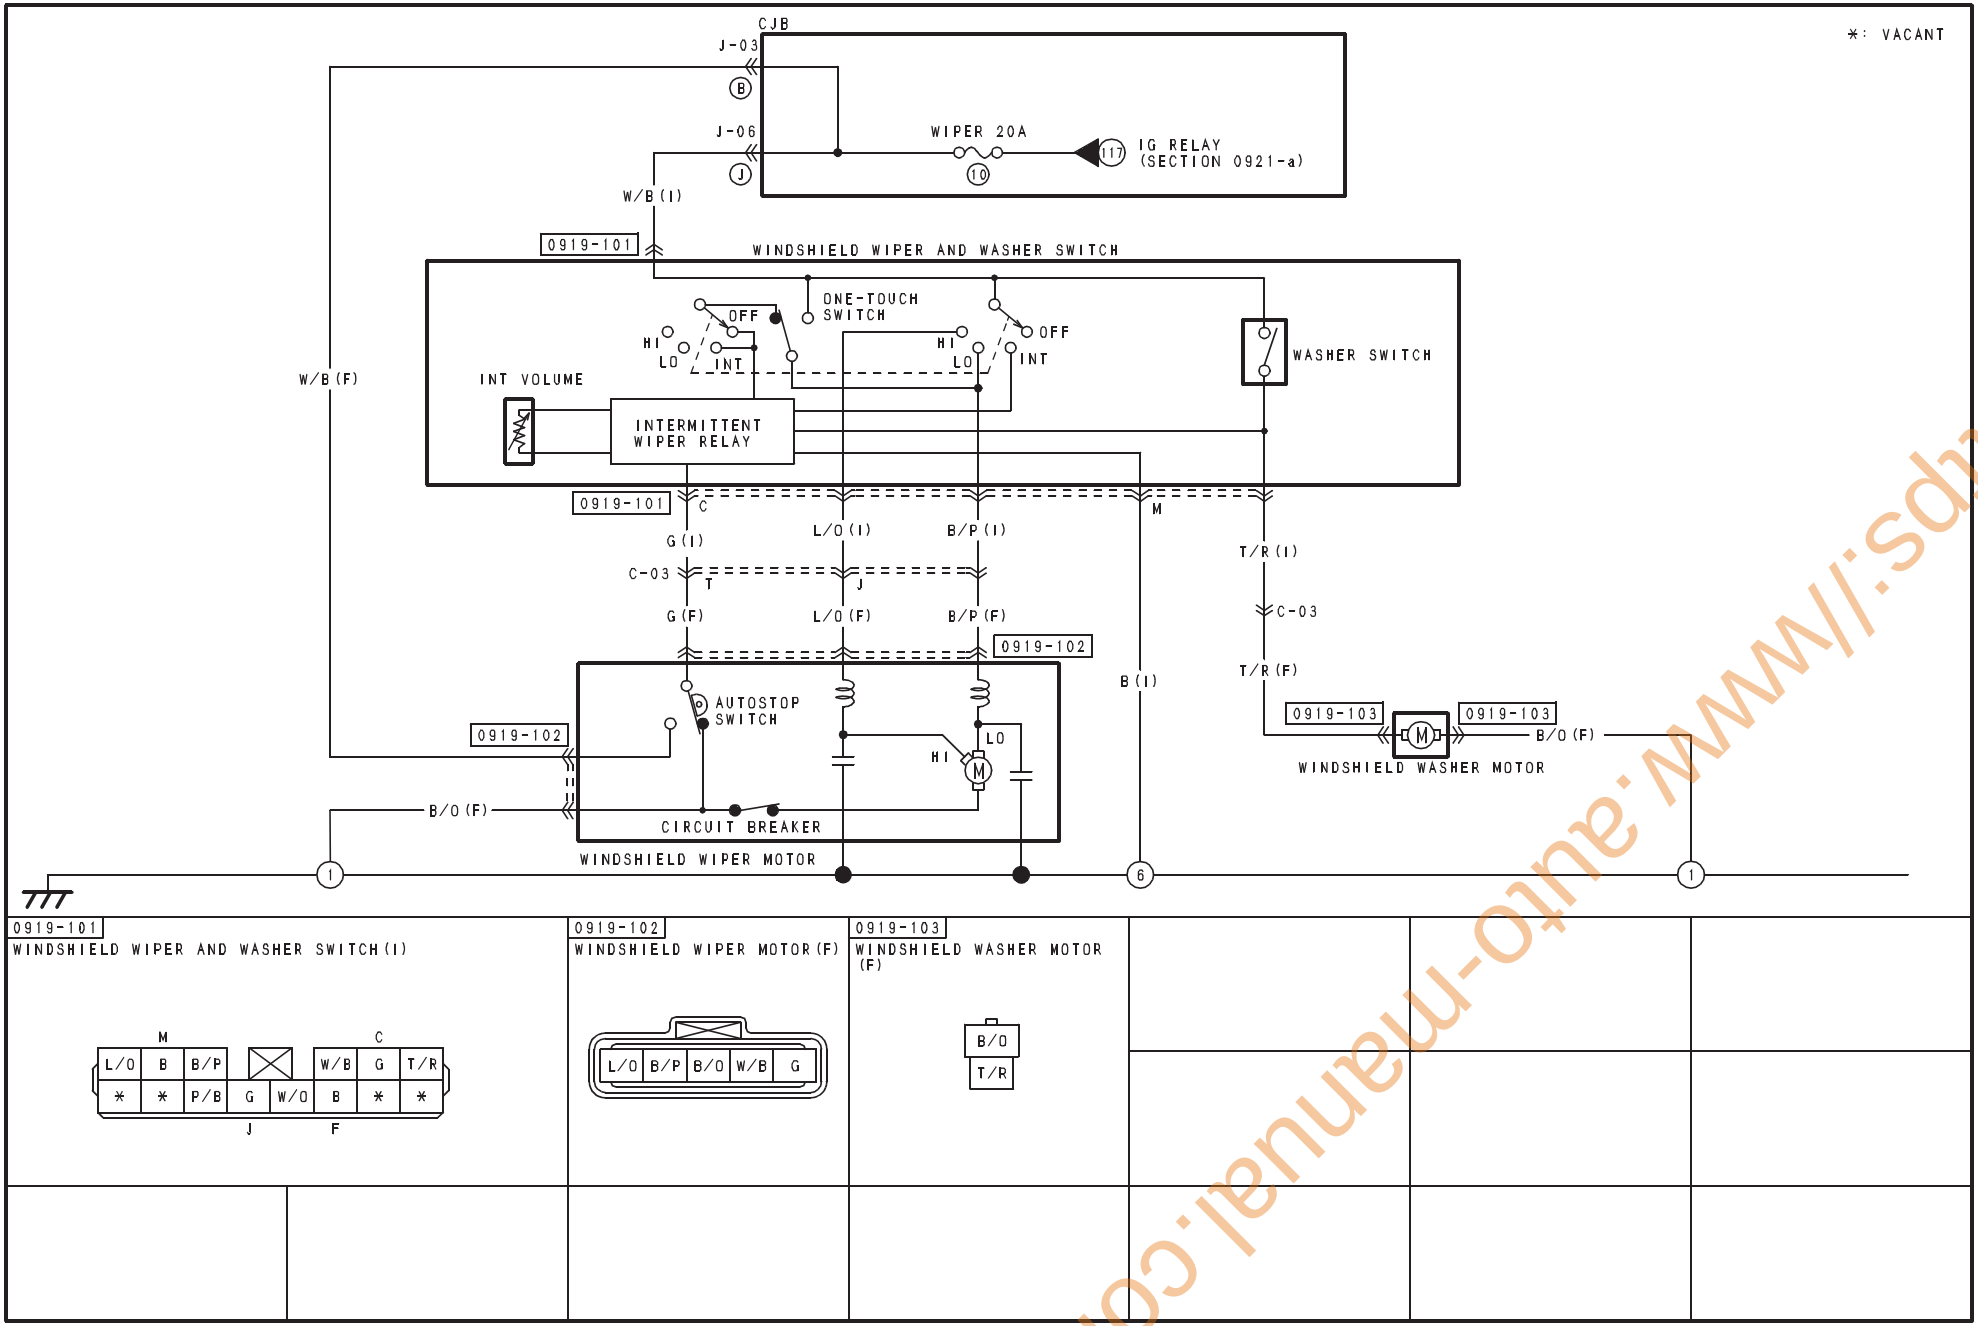


0919-101 WINDSHIELD WIPER AND WASHER SWITCH (I)


0919-102 WINDSHIELD WIPER MOTOR (F)

0919-103 WINDSHIELD WASHER MOTOR (F)

https://www.auto-manual.com/

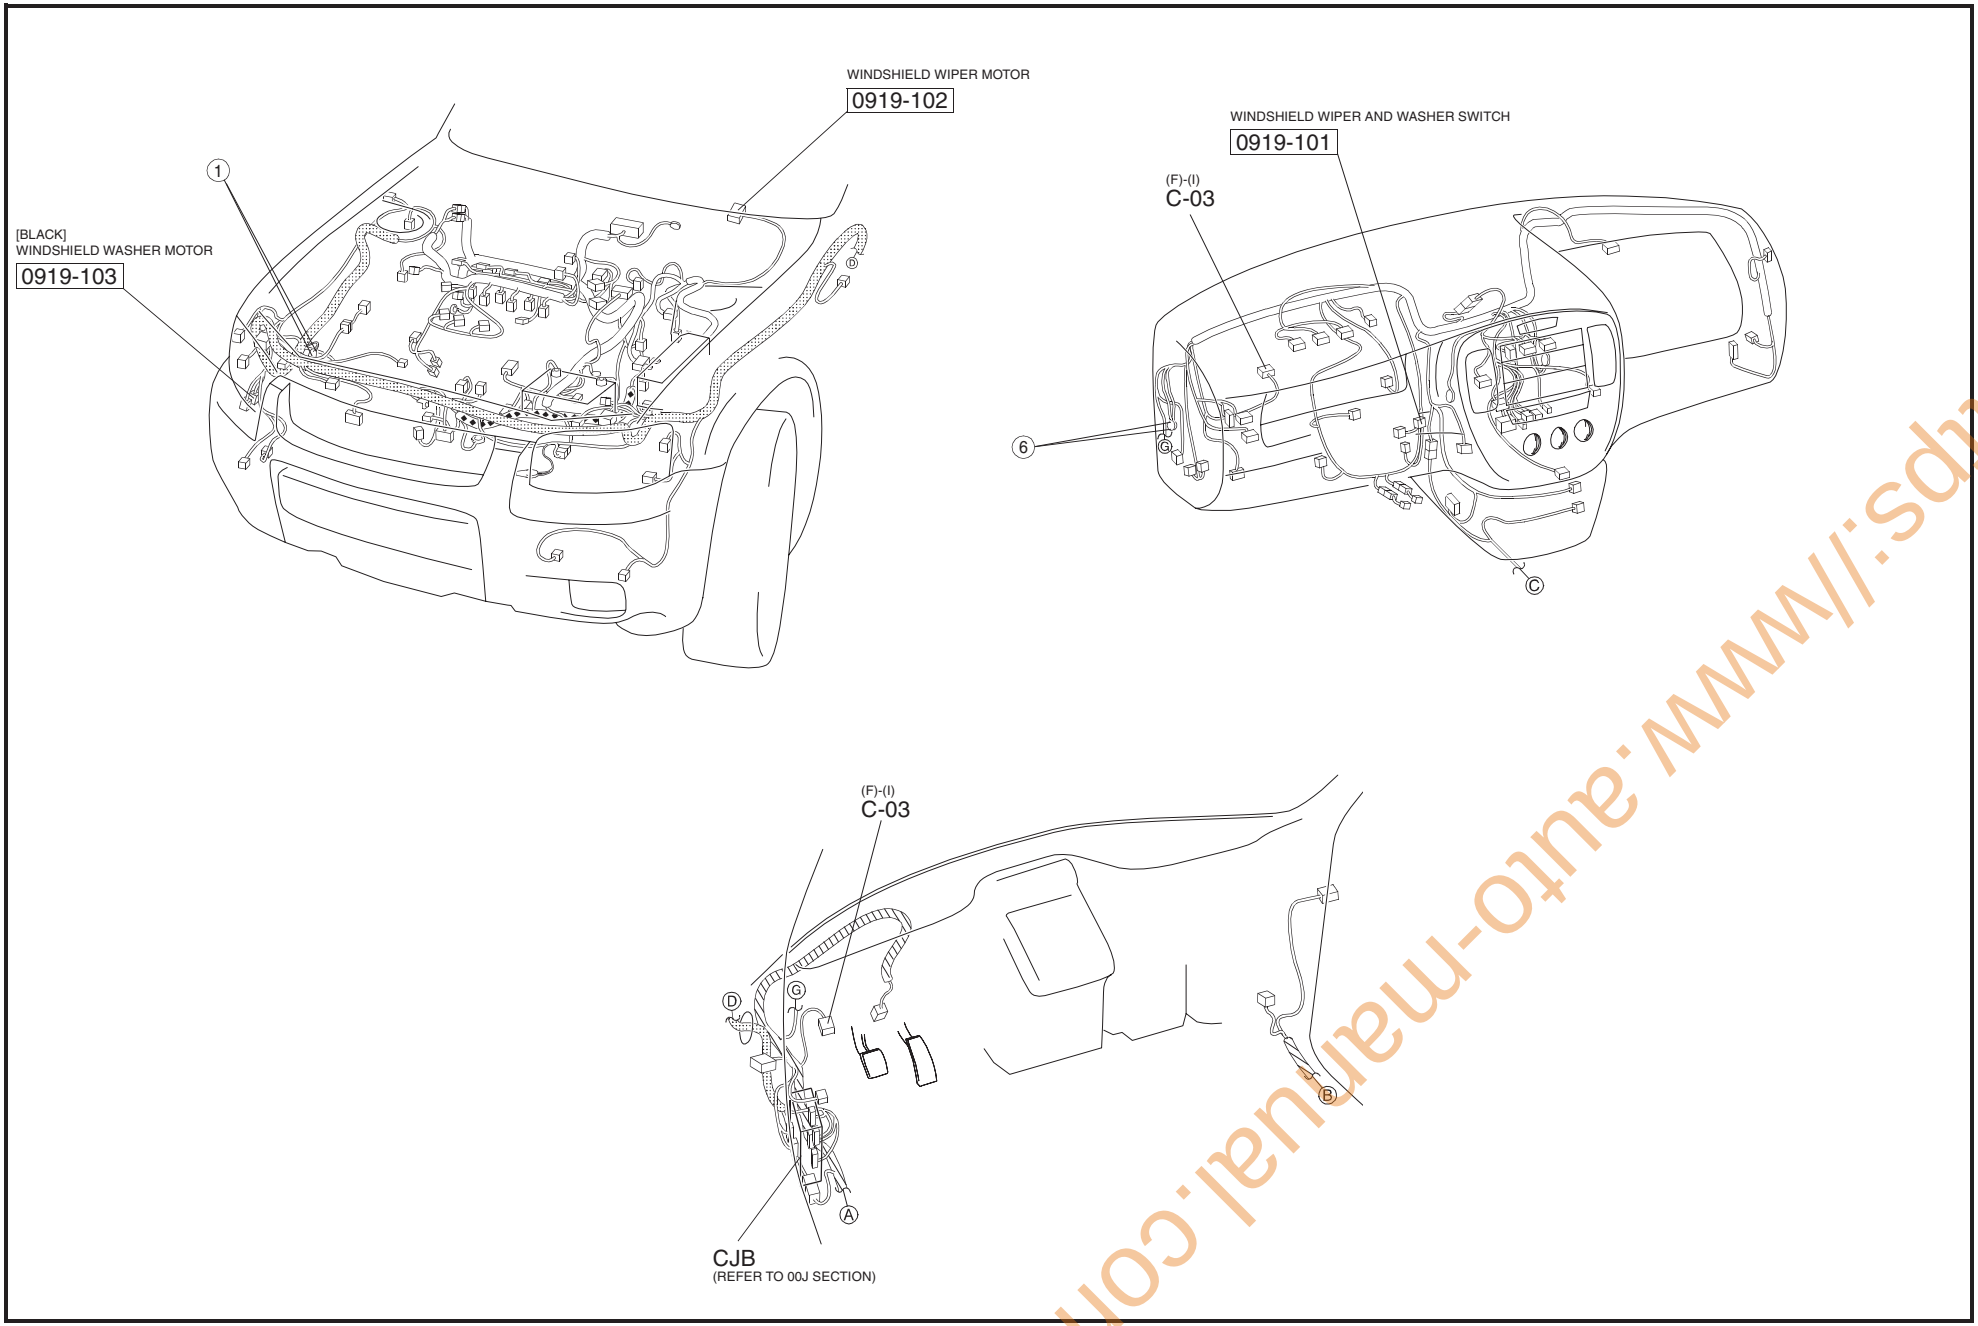

https://www.auto-manual.com/

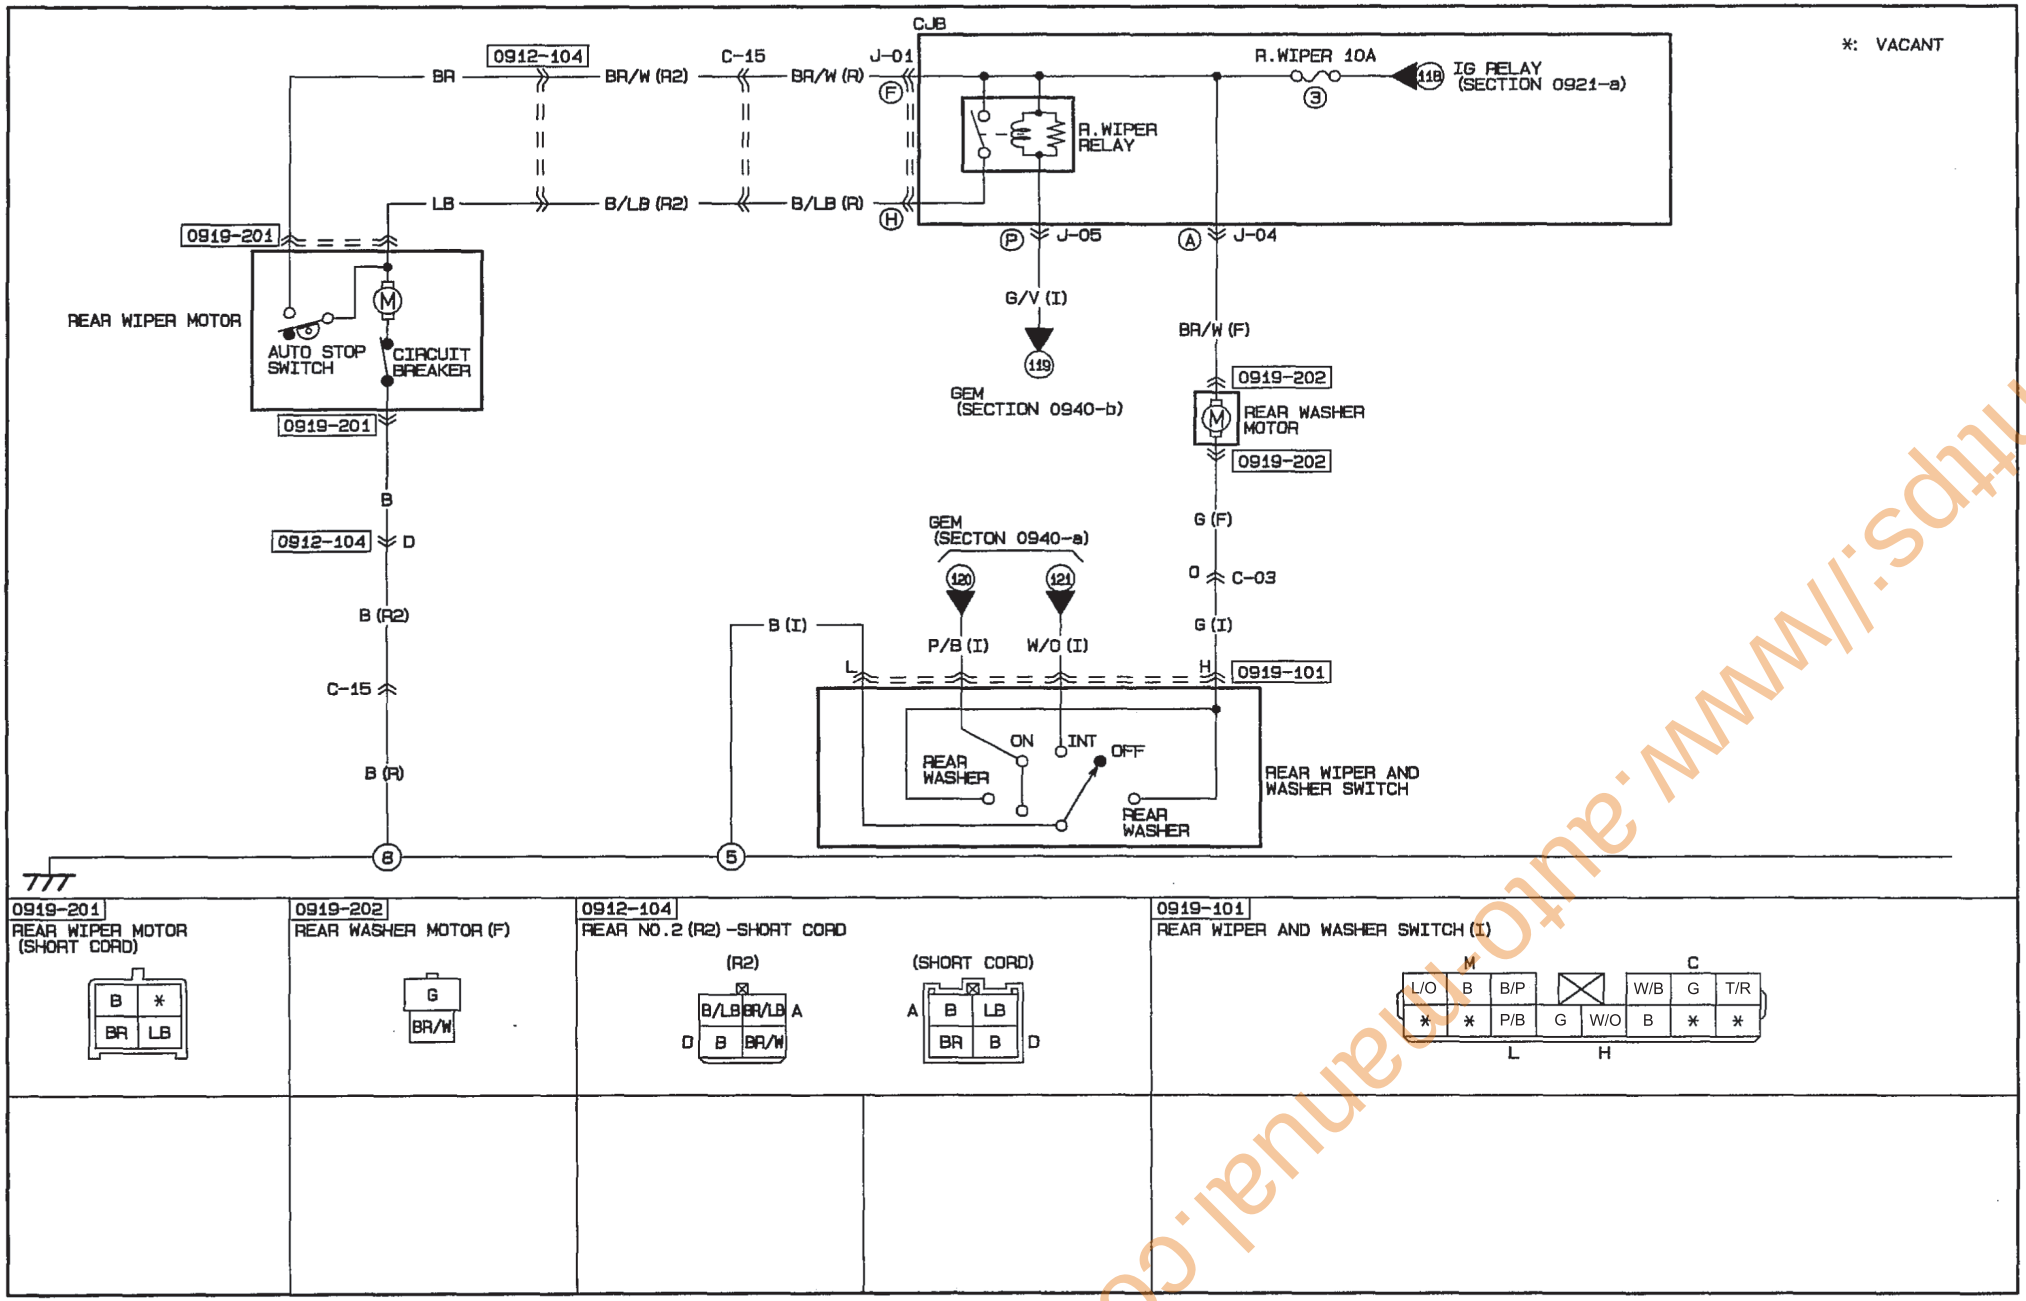

0919-201 REAR WIPER MOTOR (SHORT CORD)

0919-202 REAR WASHER MOTOR (F)


0912-104 REAR NO.2 (R2) -SHORT CORD

(R2)

(SHORT CORD)


0919-101 REAR WIPER AND WASHER SWITCH (I)

https://www.automanual.com/

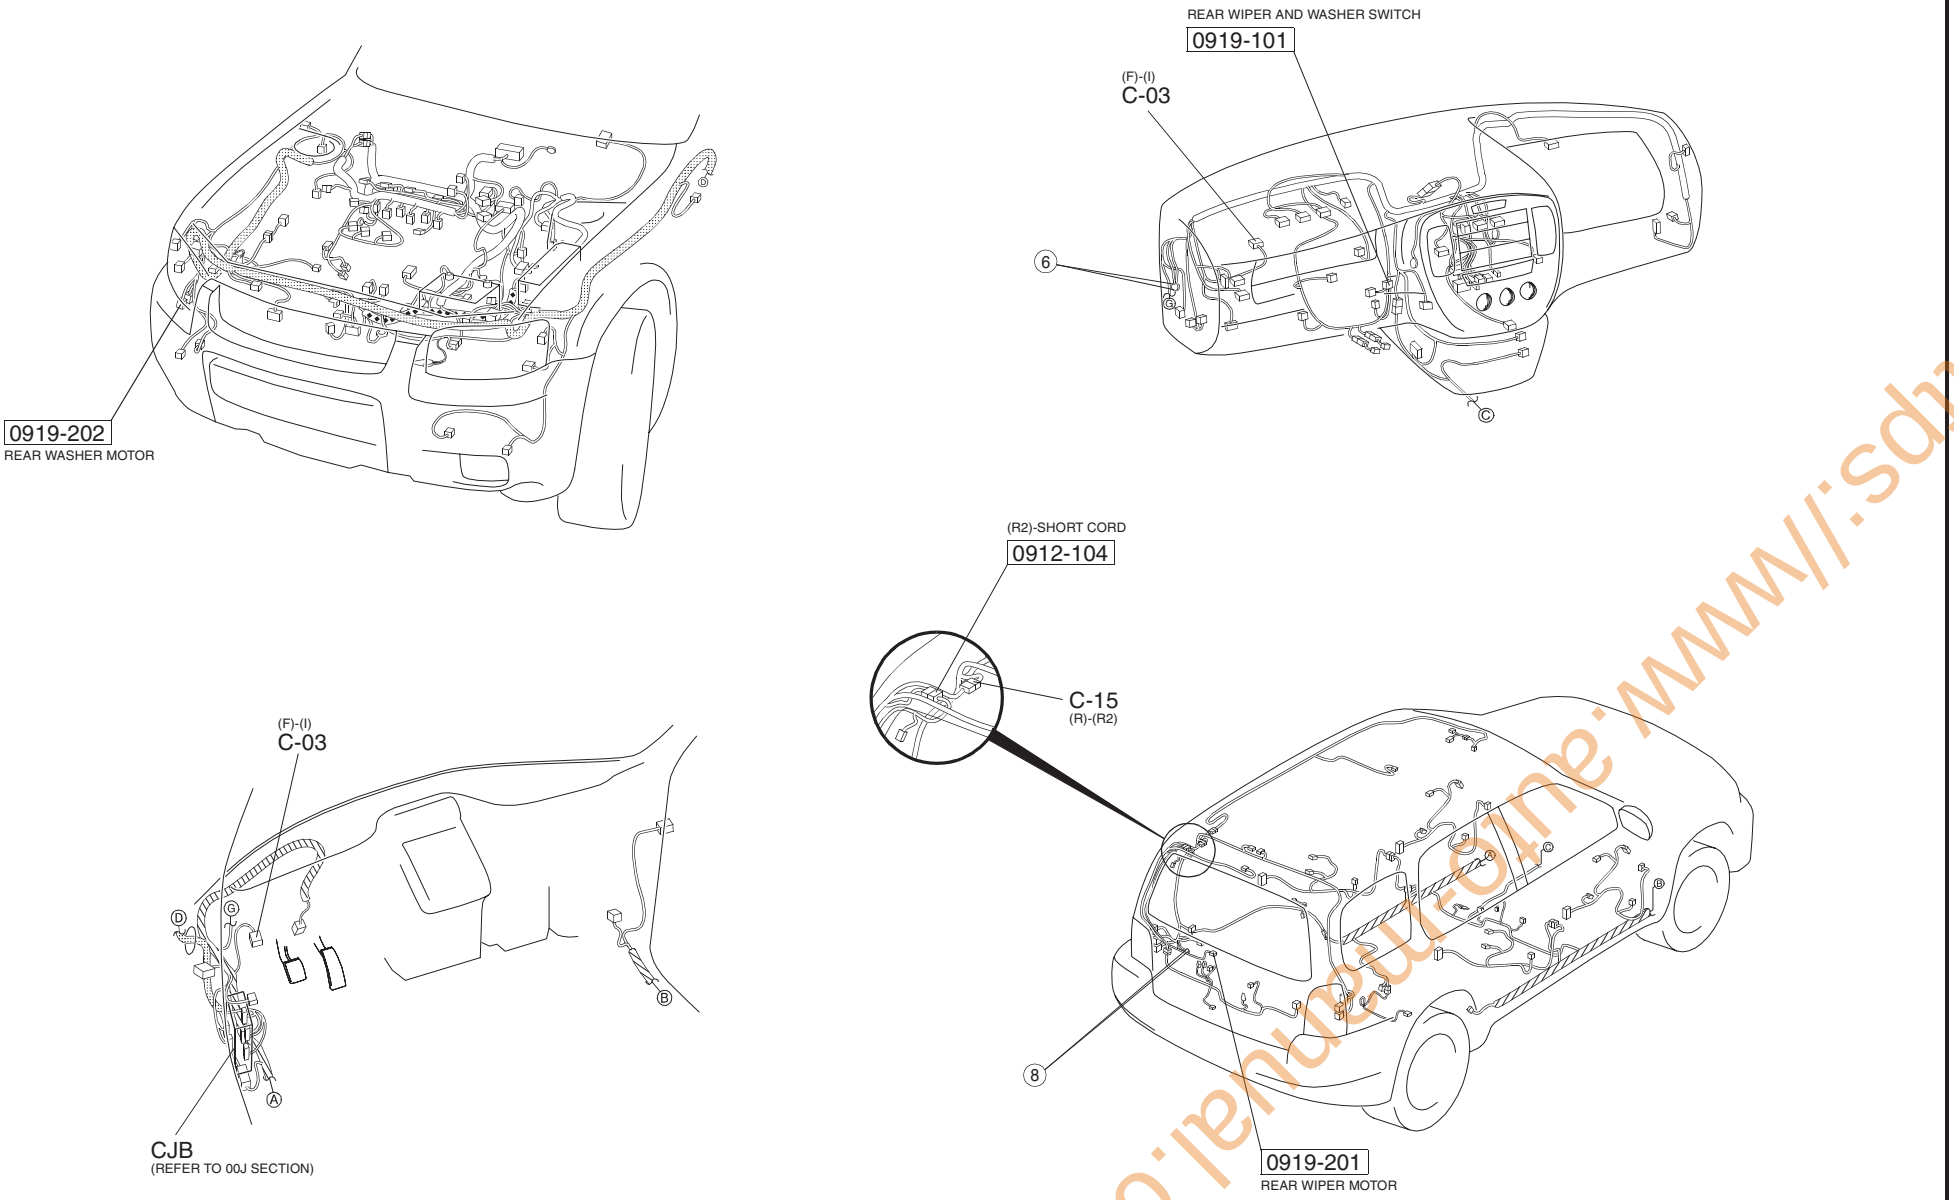


https://www.auto-manual.com/

REARW IPERA NDWA SHER (ESCAPE)

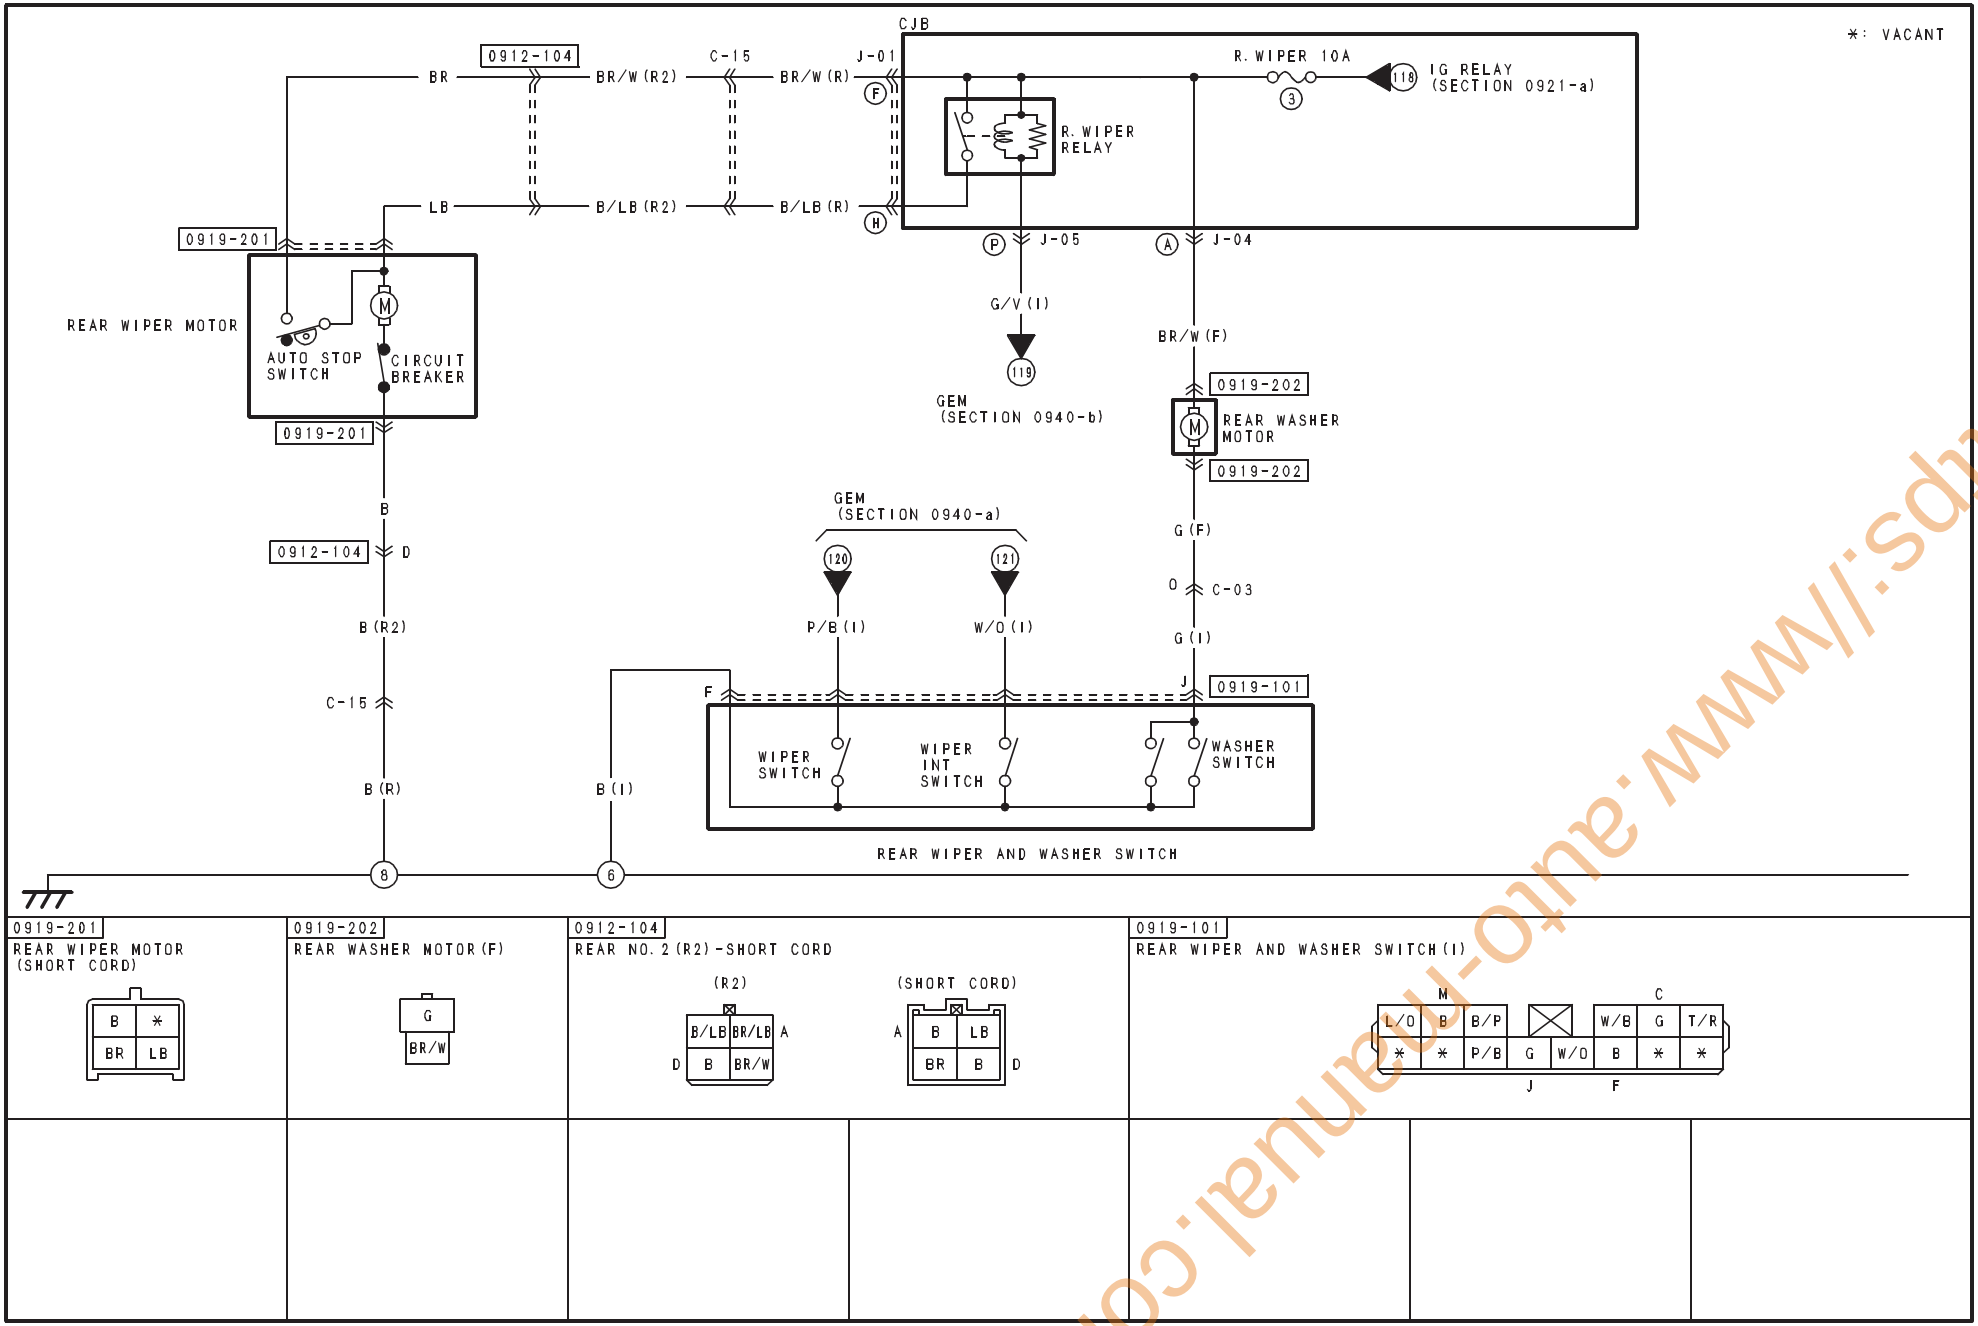


https://www.auto-manual.com/

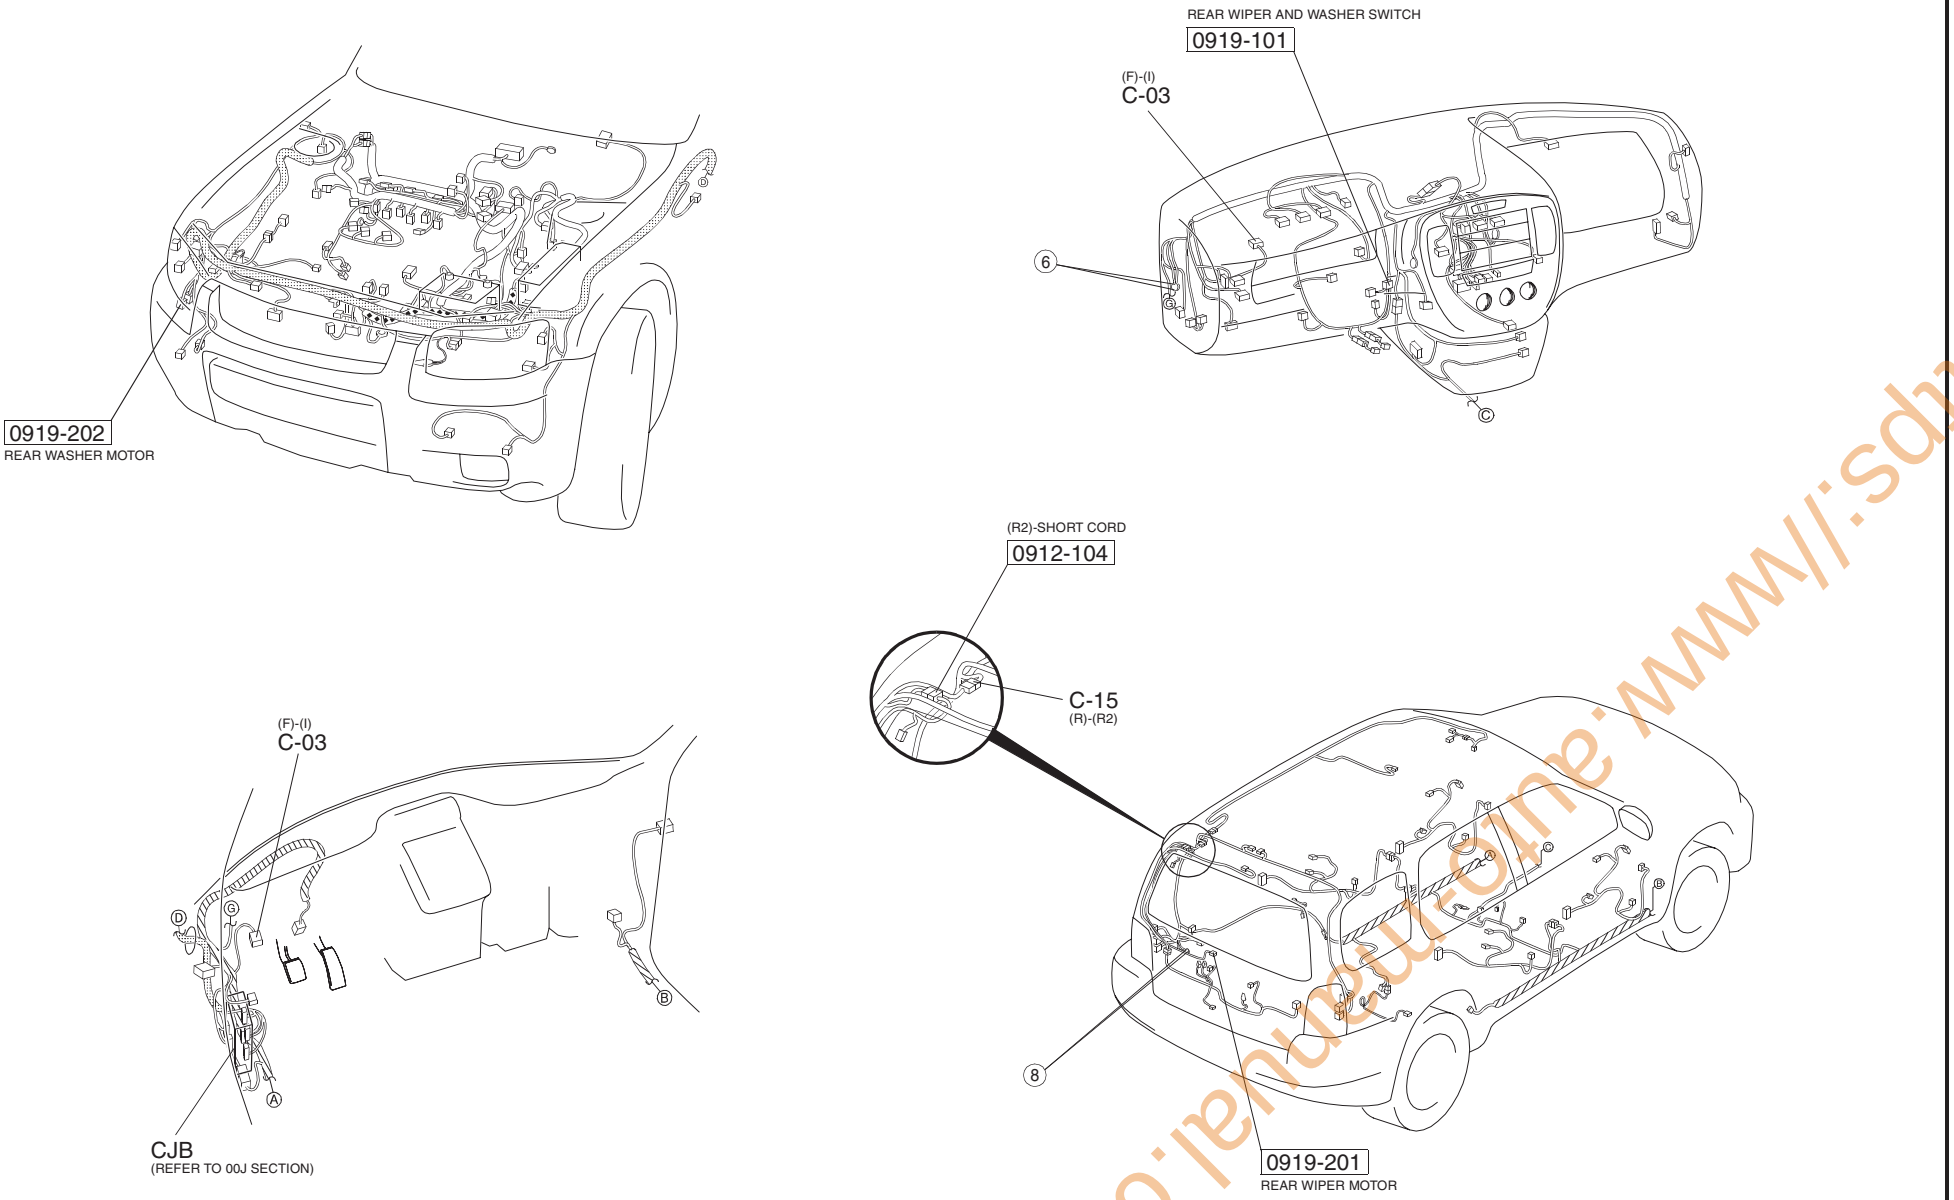


https://www.auto-manual.com/


ACCESSORY SOCKET/CIGARETTE LIGHTER

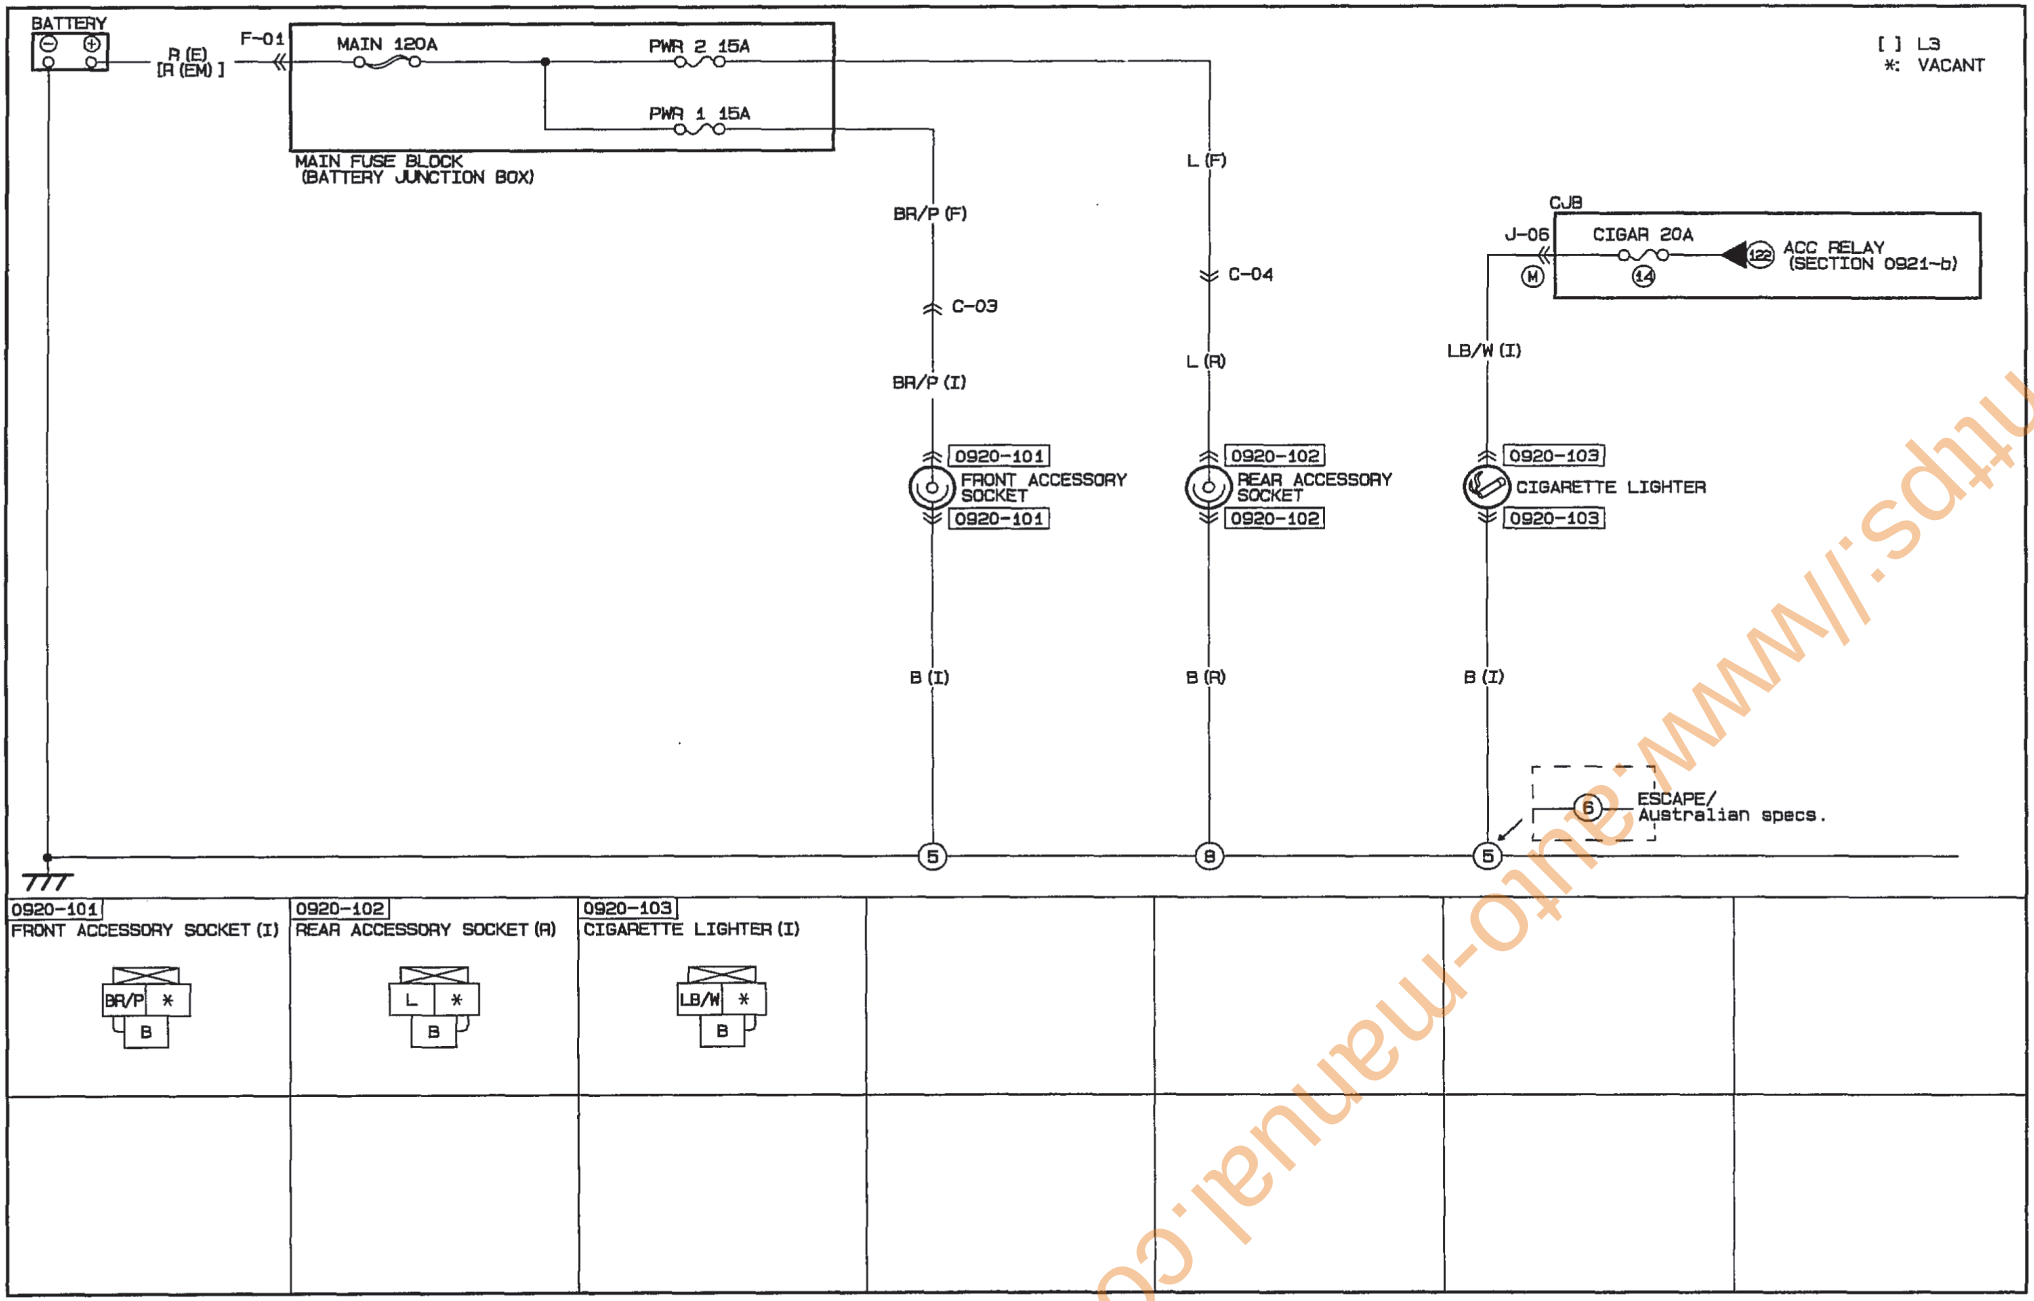



0920-101 FRONT ACCESSORY SOCKET (I)	0920-102 REAR ACCESSORY SOCKET (R)	0920-103 CIGARETTE LIGHTER (I)				
BR/P * B	L * B	LB/W * B				

https://www.auto-manual.com/

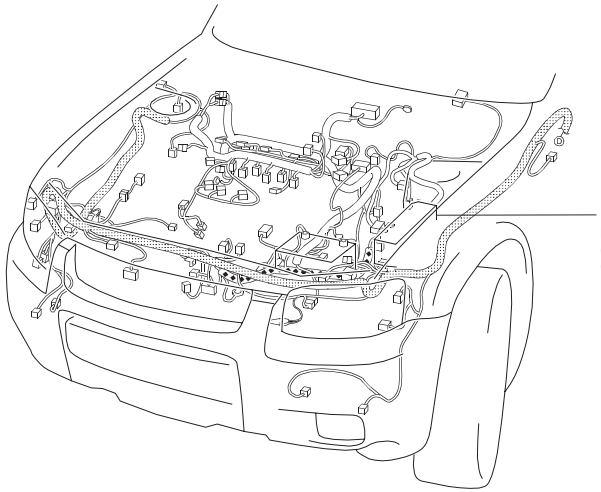


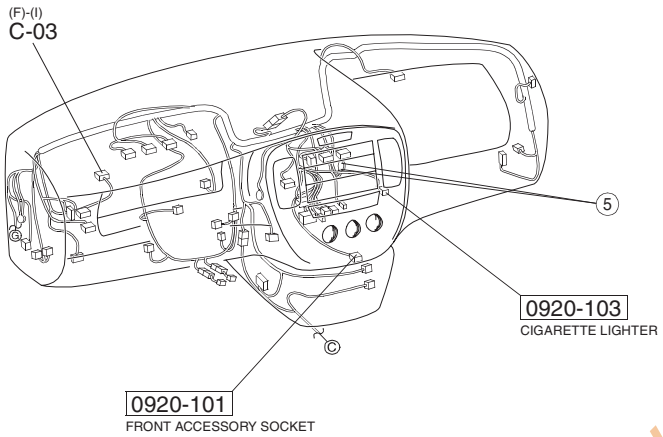

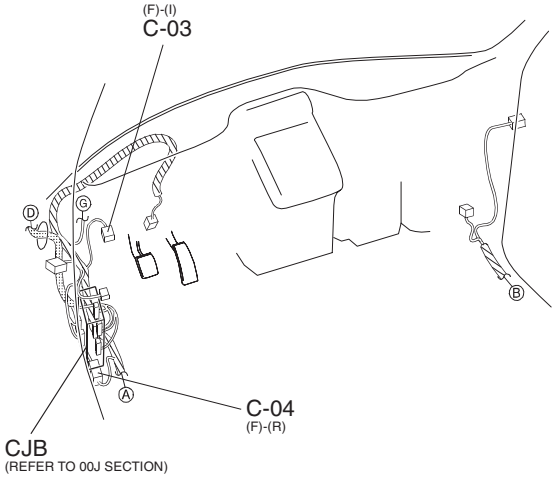


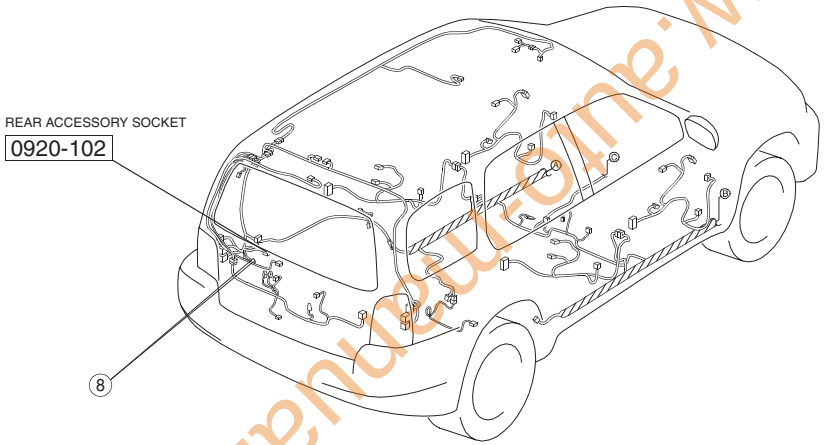



https://www.auto-manual.com/

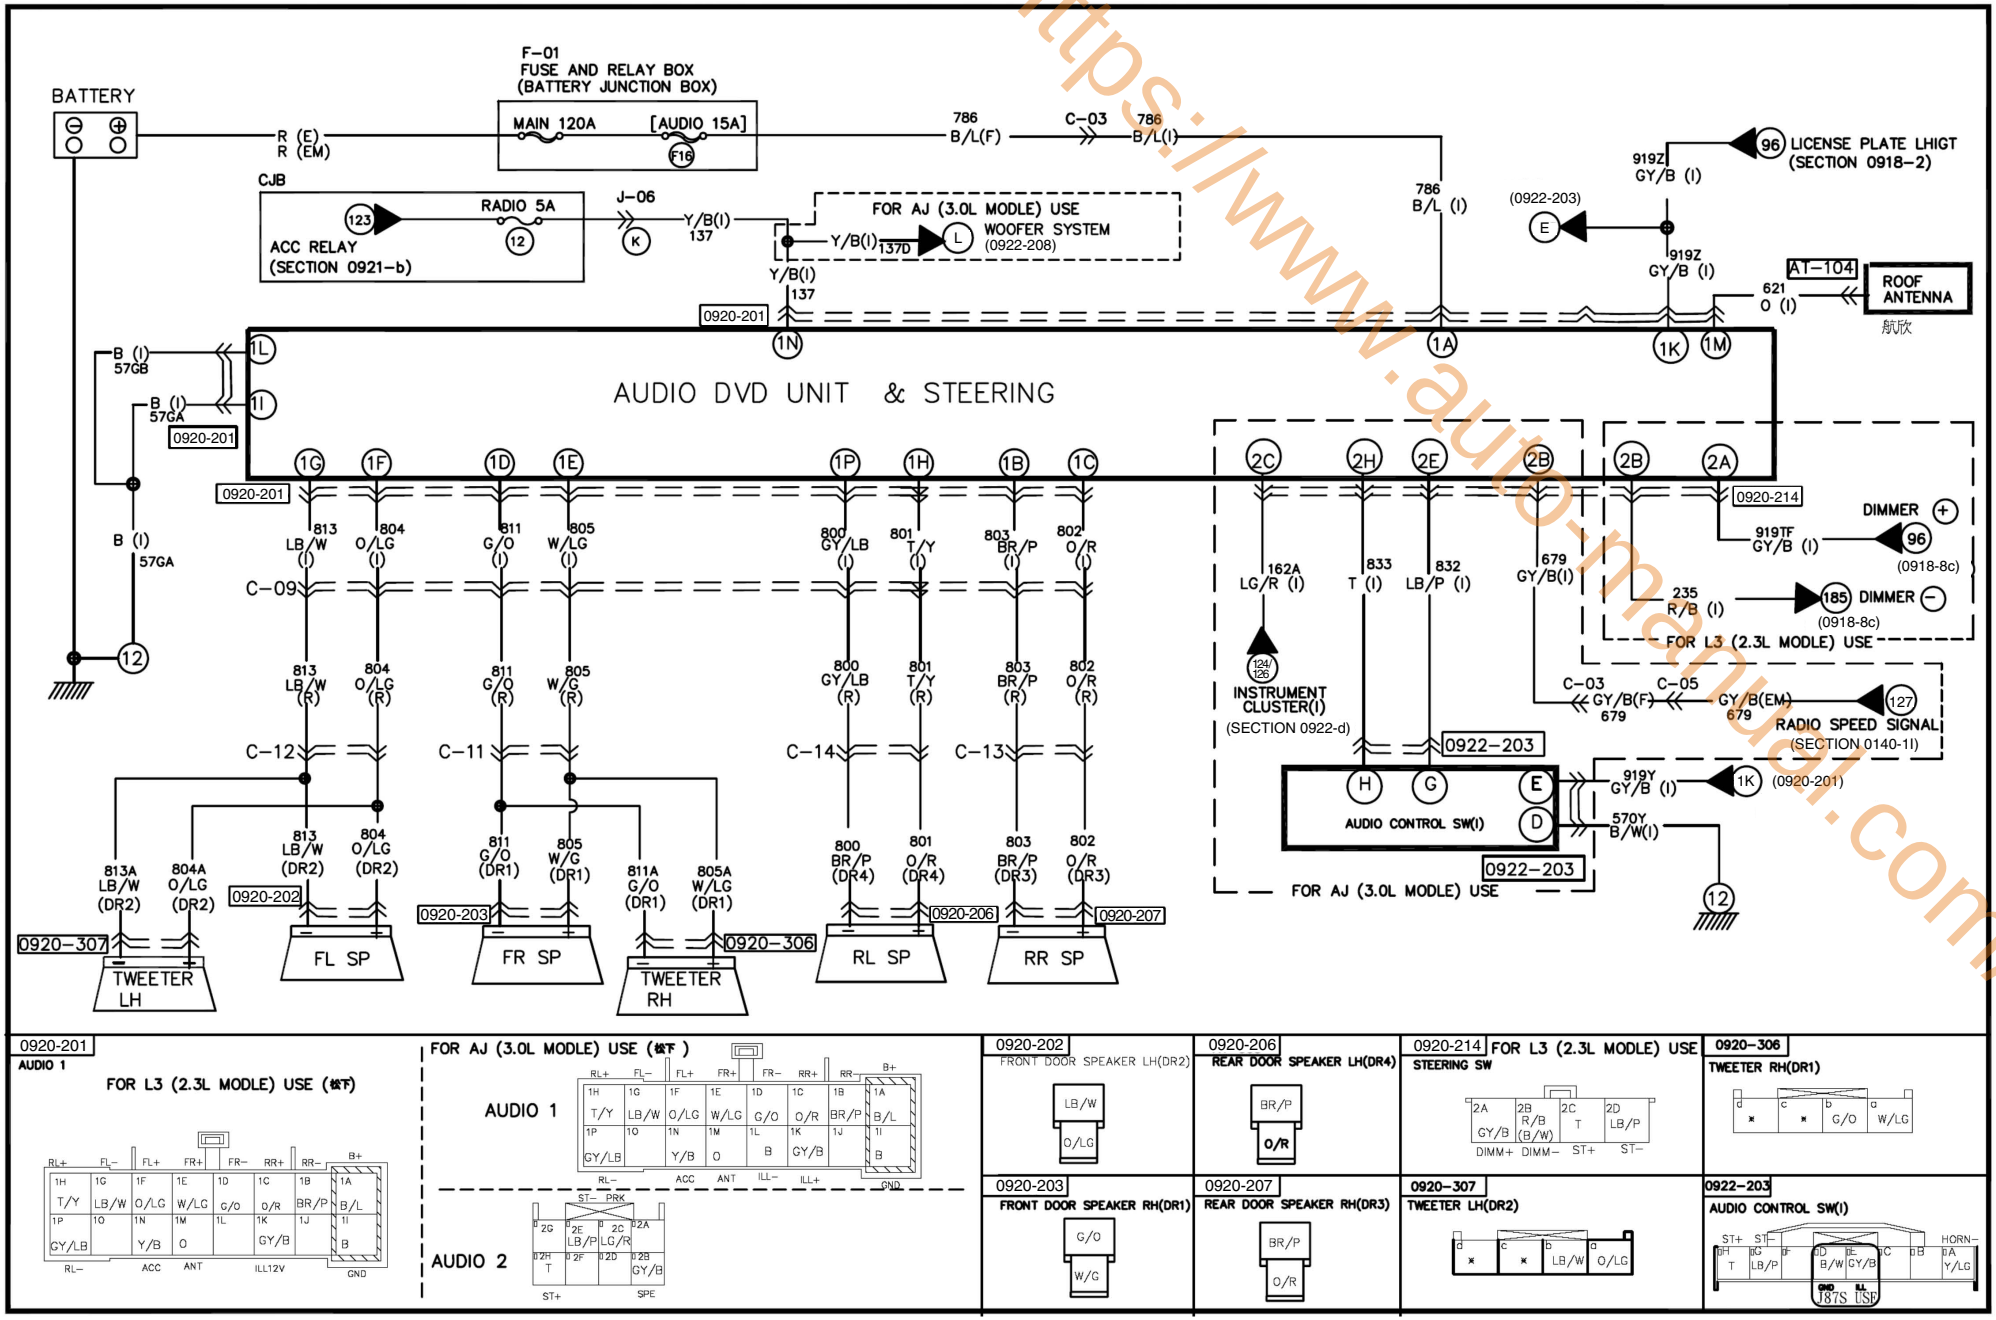


https://www.auto-manual.com/

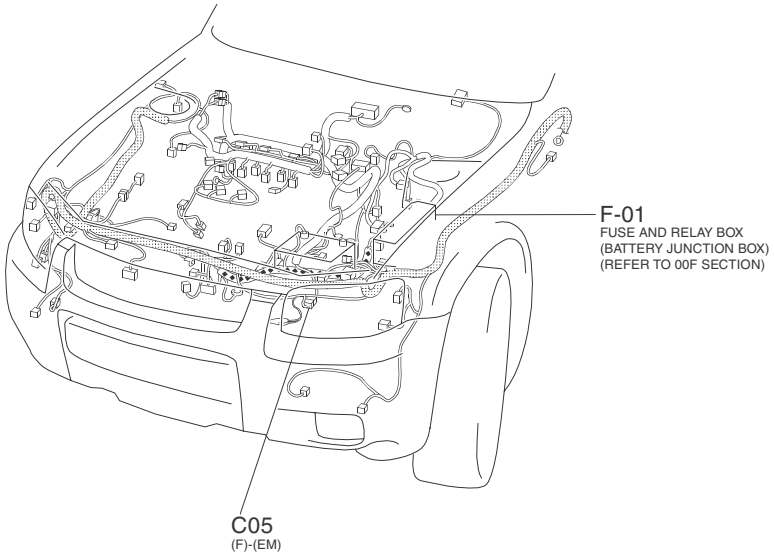

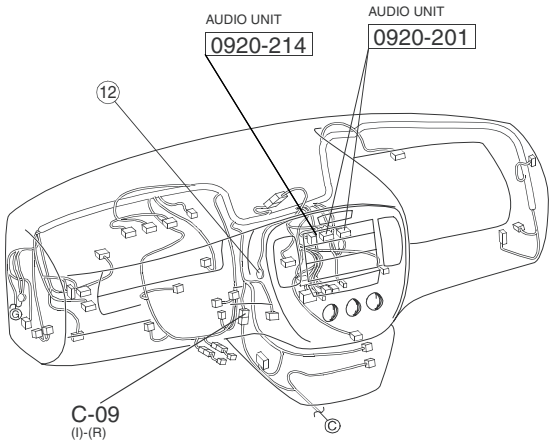

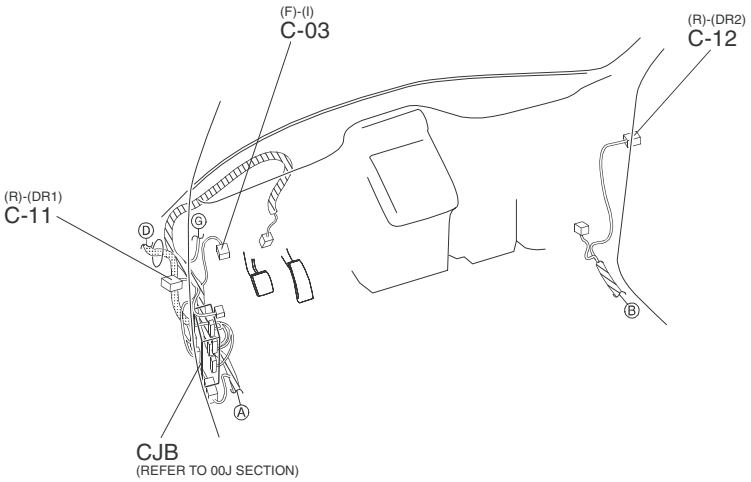

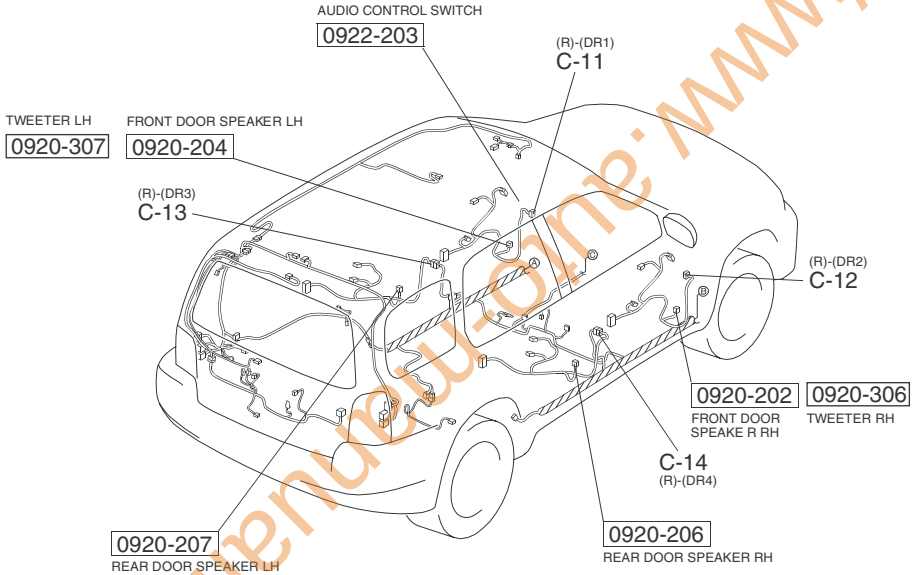


https://www.auto-manual.com/

https://www.auto-manual.com/


C-05 FRONT(F) / EMEMISSION(EM)

FOR AJ (3.0L MODLE) USE

(F)

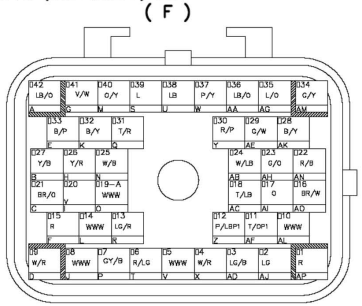


(EM)

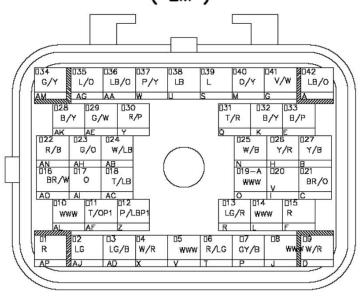


C-03

FRONT(F)-INSTRUMENT PANEL(I)

(F)

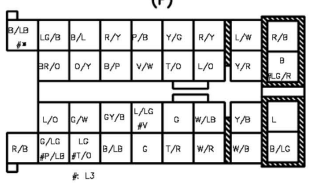



(I)

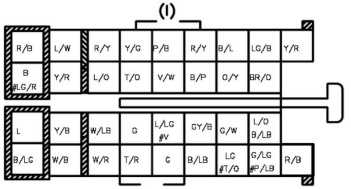



AT-104


ROOF ANTENNA(I)



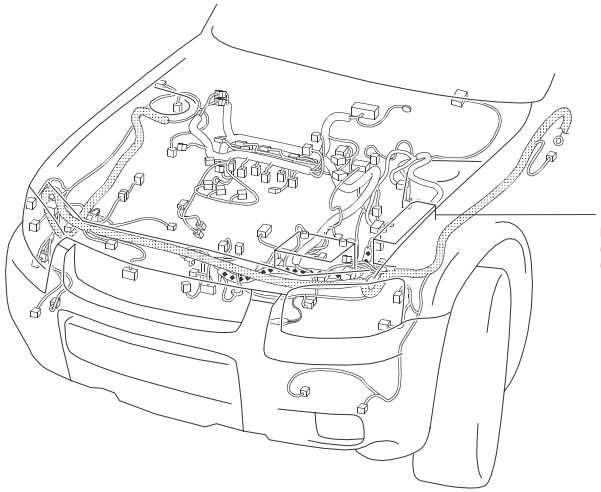


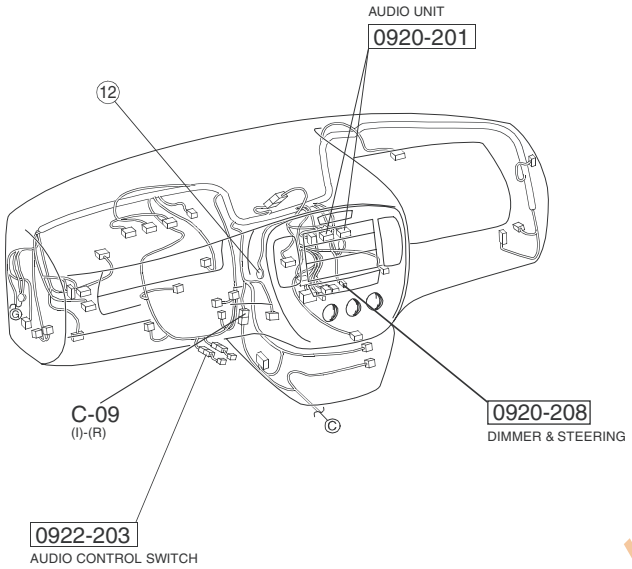

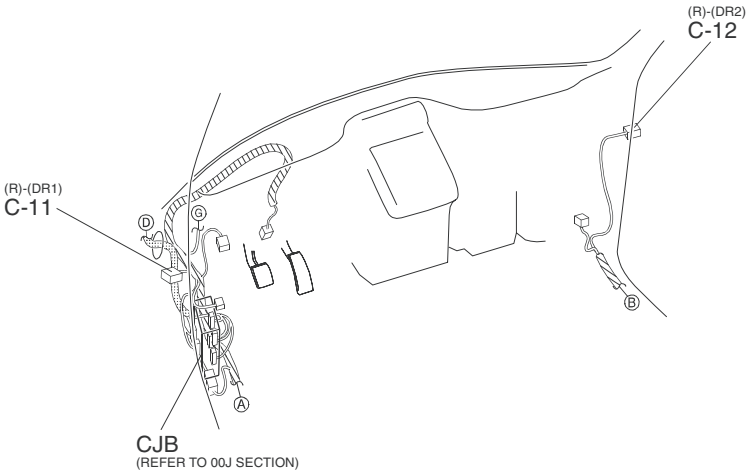


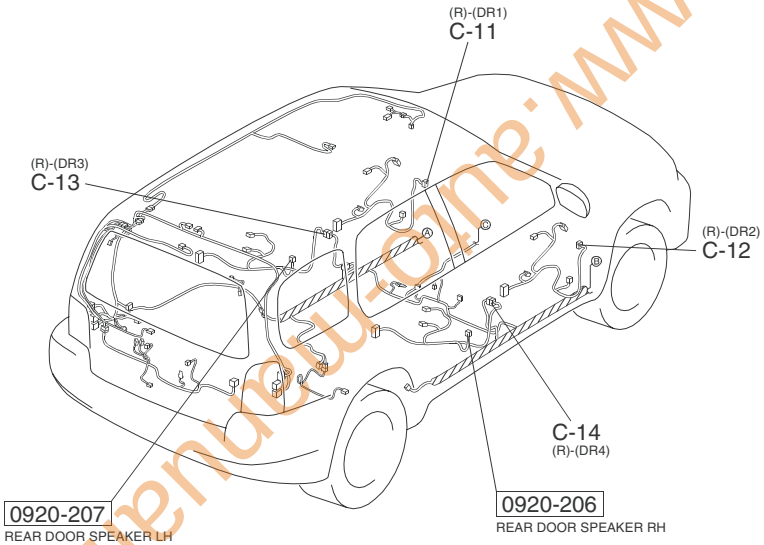

https://www.auto-manual.com/

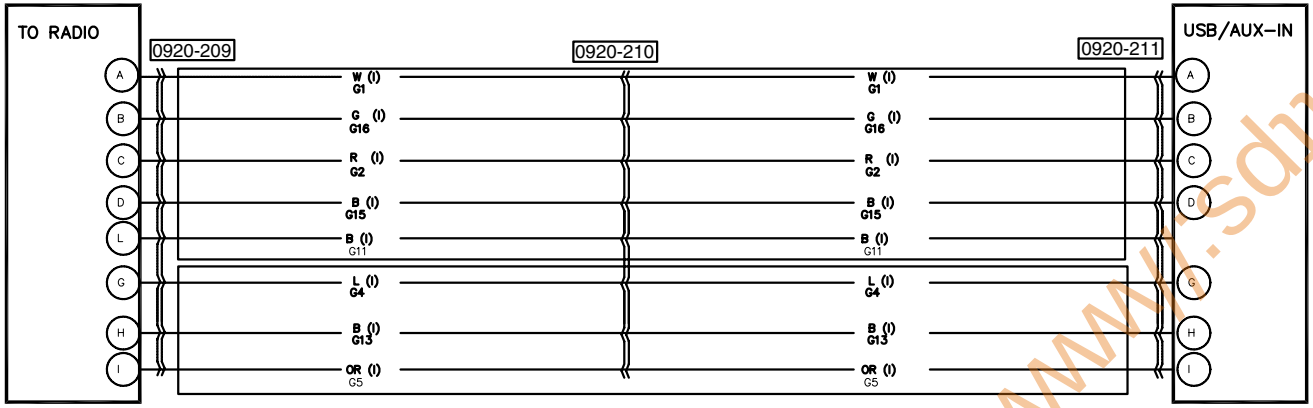


0920-209
INST(IP)

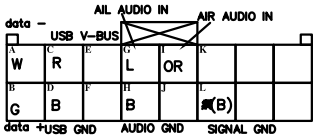


0920-210
INST(IP)


[TO 67831]



[TO 67030]




0920-211
USB&AUX−IN FEEDER



https://www.auto-manual.com/

https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK

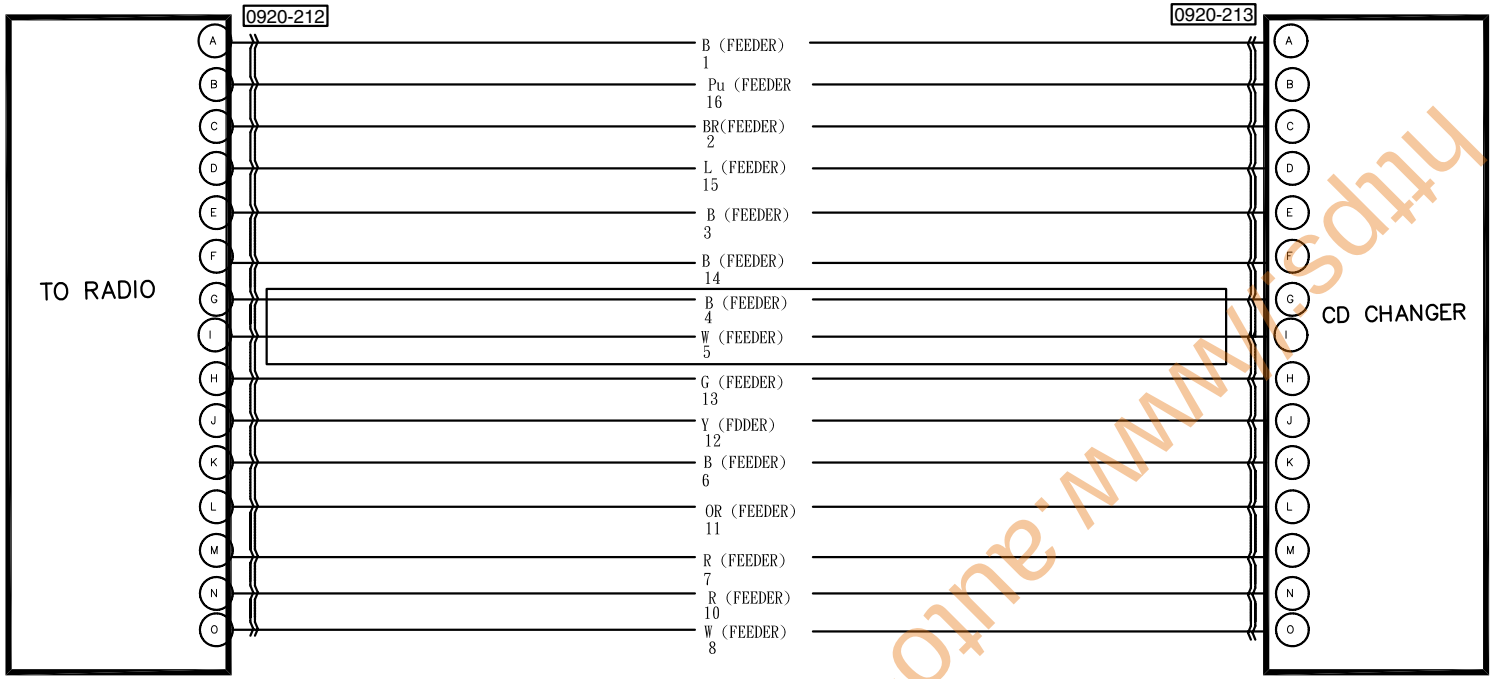

0920-212
TO RADIO

		P GND	A GND CDL		A GND		
ILL−	ACC					CDR	VCD
O	M	K	I	G	E	C	A
W S03	R S02	B S02	W S01	B S01	B	BR	B
P	N	L	J	H	F	D	B
	R	OR	Y	G	B S03	L	Pu
	CD	CC	CRM	ACC	V GND	BAT+	ILL+

0920-213
CD CHANGER


		P GND	A GND CDL		A GND		
ILL−	ACC					CDR	VCD
O	M	K	I	G	E	C	A
W S03	R S02	B S02	W S01	B S01	B	BR	B
P	N	L	J	H	F	D	B
	R	OR	Y	G	B S03	L	Pu
	CD	CC	CRM	ACC	V GND	BAT+	ILL+

https://www.auto-manual.com/

https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK

AUDIO WOOFER SYSTEM AT-3 (FOR AJ (3.0 MODEL USE))

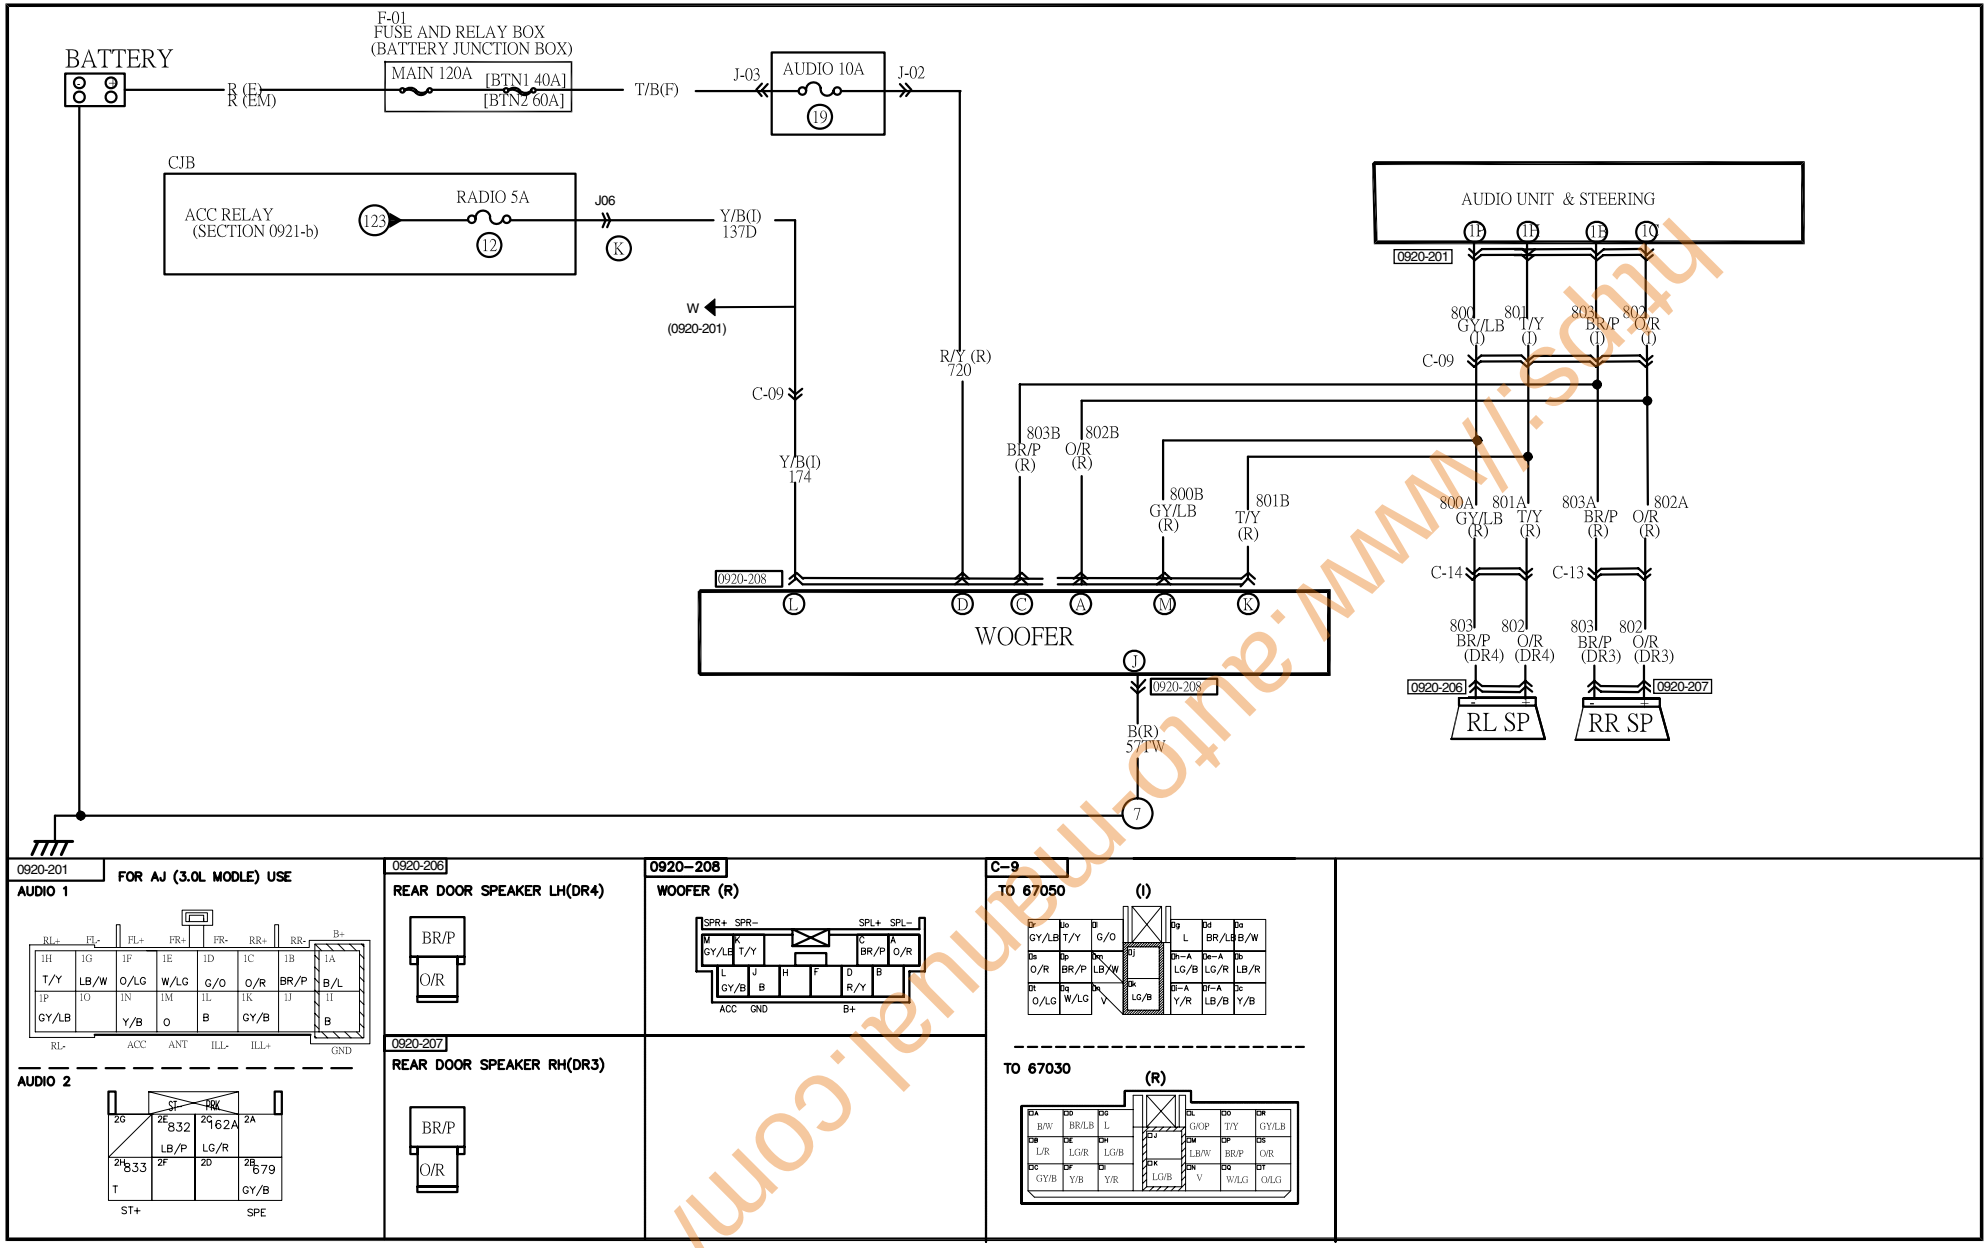


www.autoManual.com/


https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK


IGNITION SWITCH

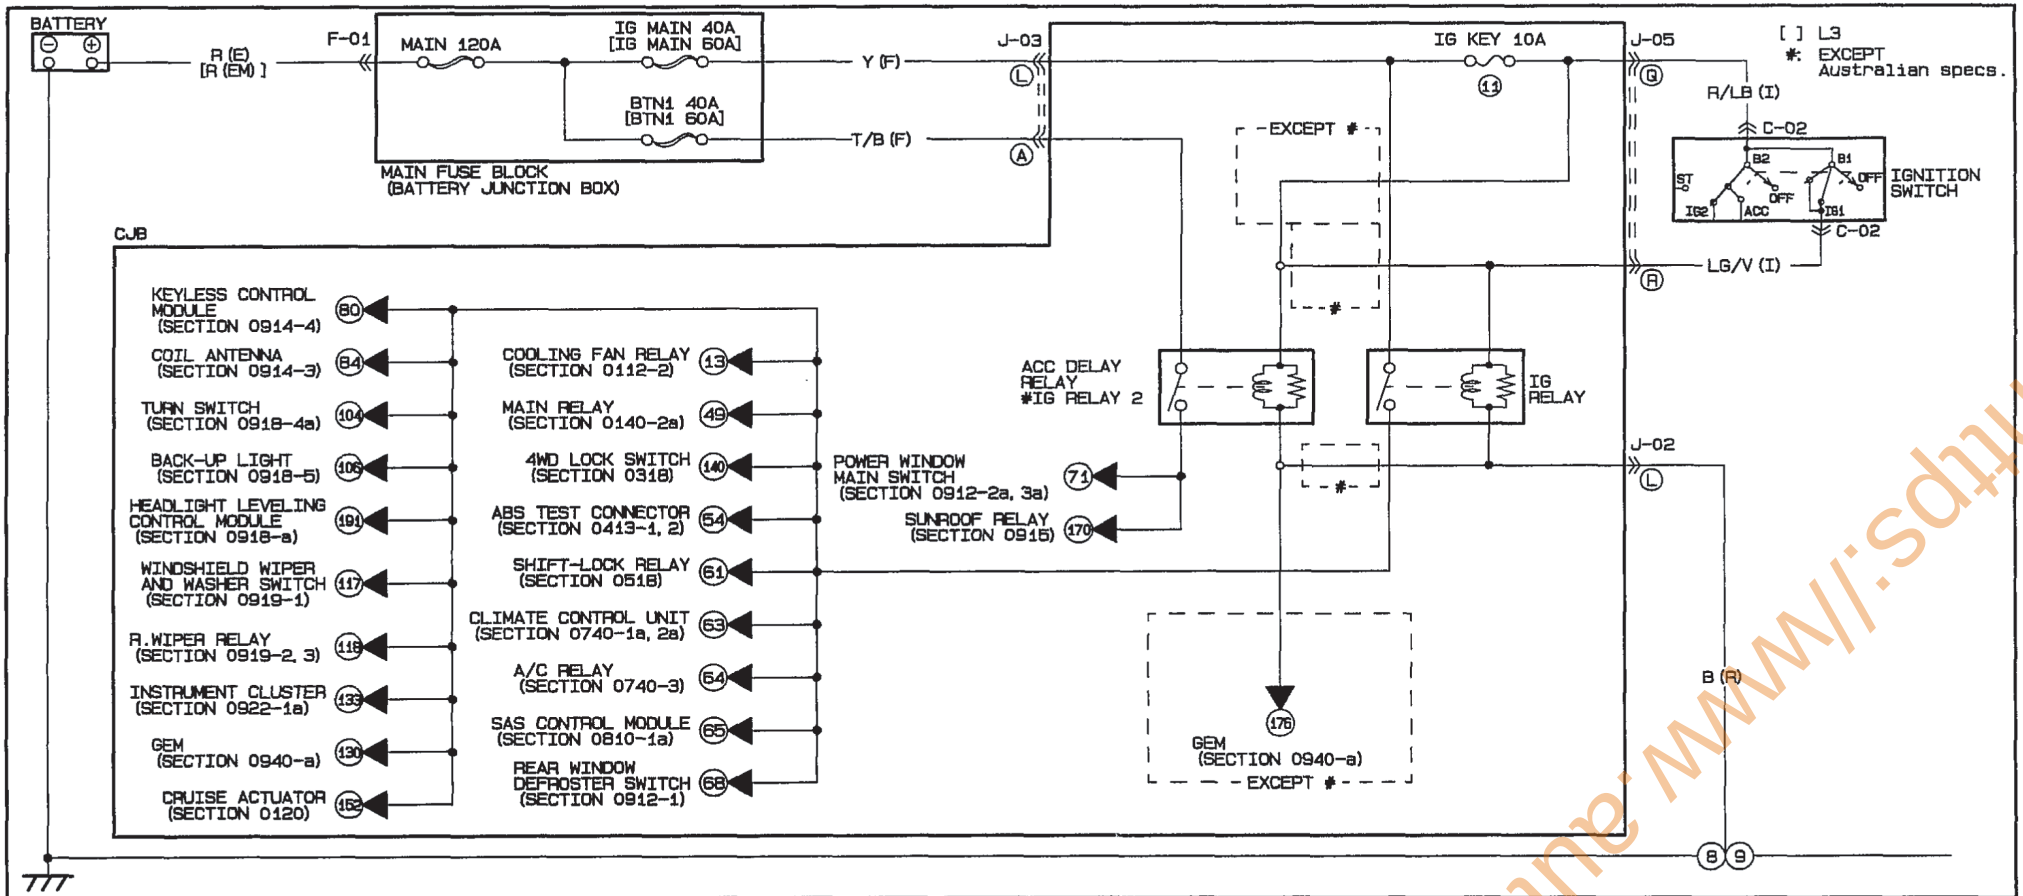


https://www.auto-manual.com/

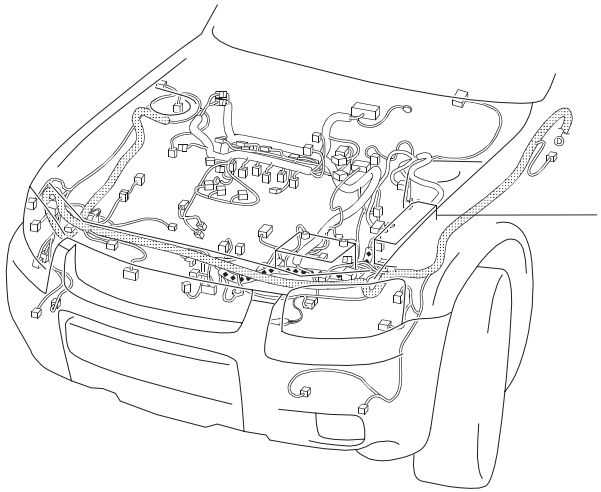


F-01
FUSE AND RELAY BOX
(BATTERY JUNCTION BOX)
(REFER TO 00F SECTION)

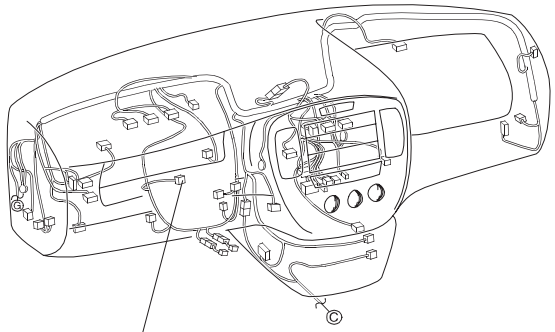

C-02
IGNITION SWITCH

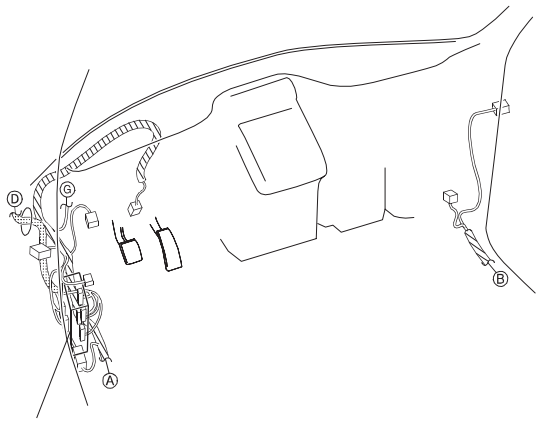


CJB
(REFER TO 00J SECTION)

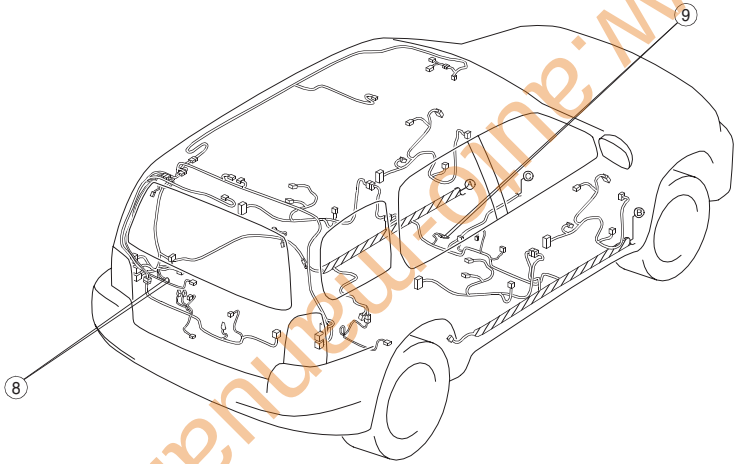


https://www.autoepcmanual.com/


IGNITION SWITCH

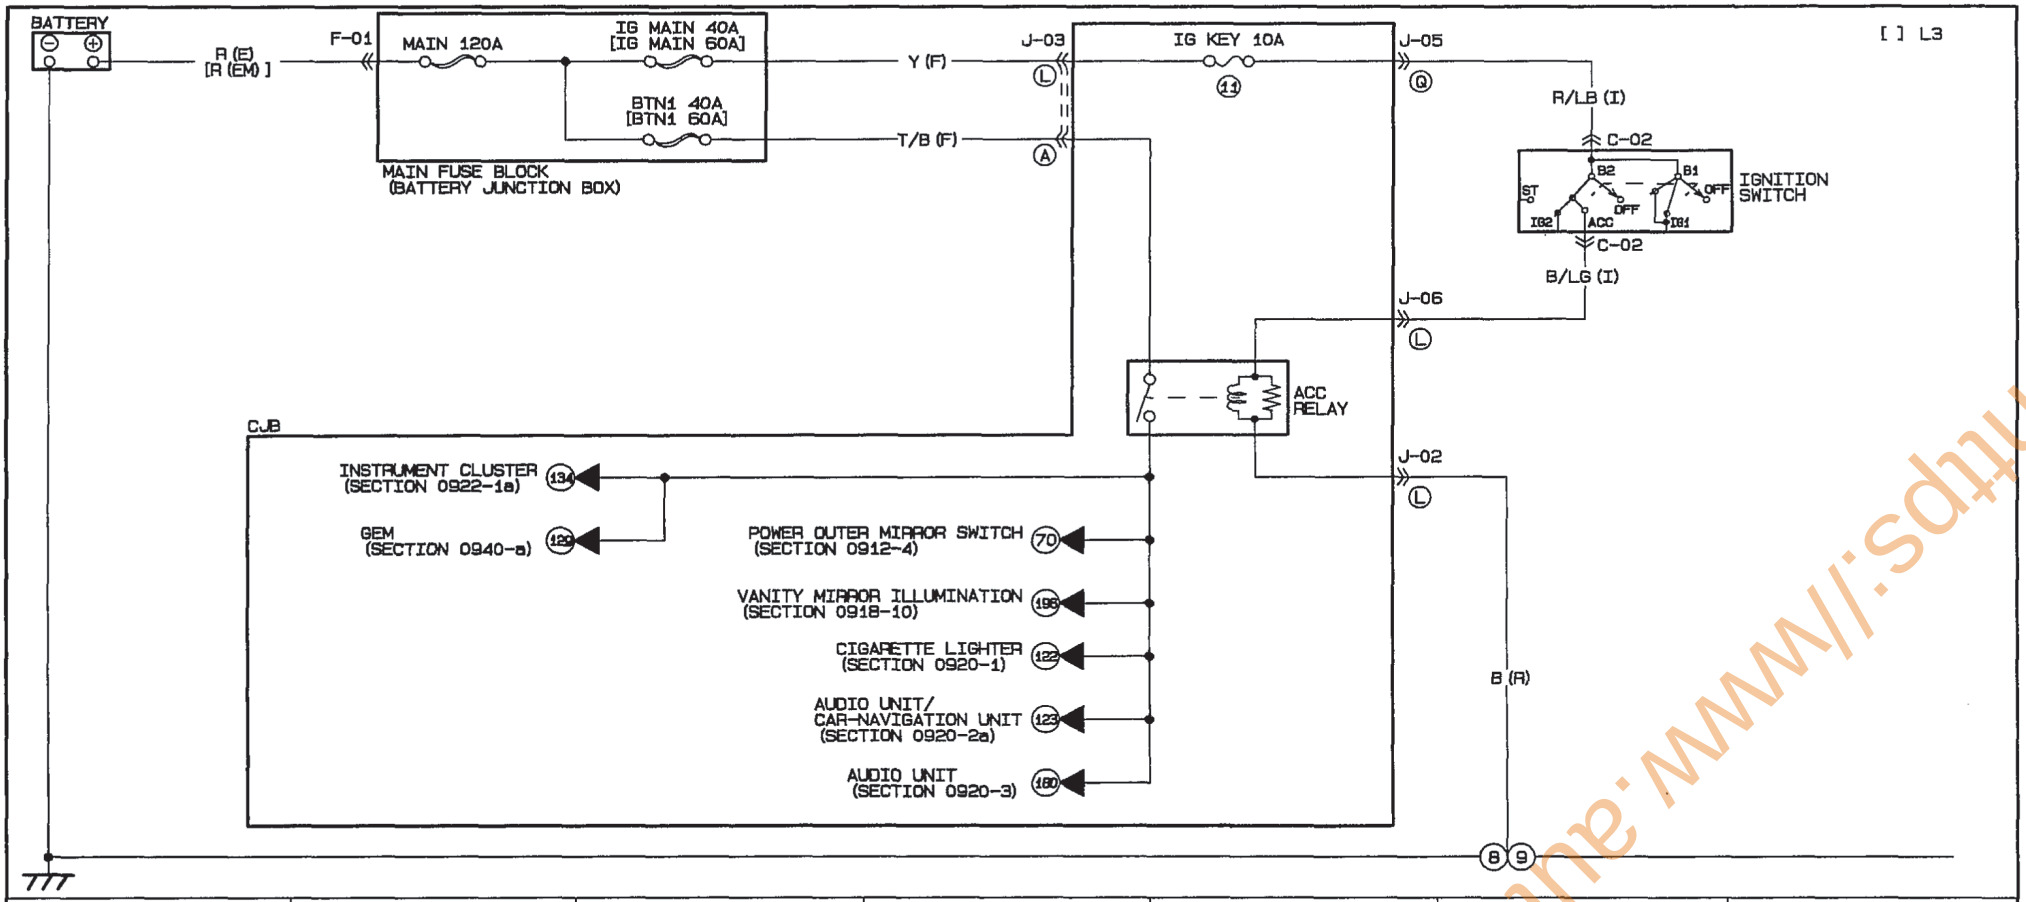


https://www.auto-manual.com/

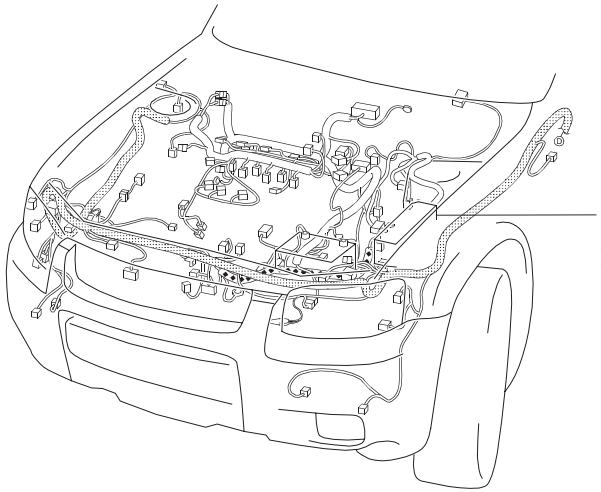


F-01
FUSE AND RELAY BOX
(BATTERY JUNCTION BOX)
(REFER TO 00F SECTION)

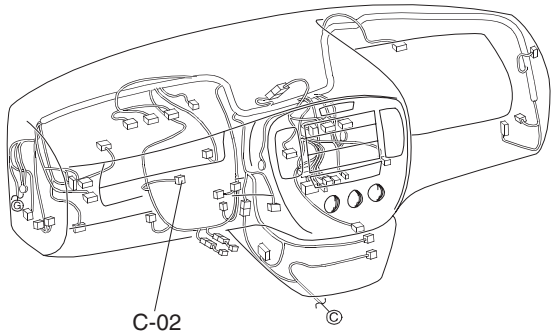


C-02
IGNITION SWITCH

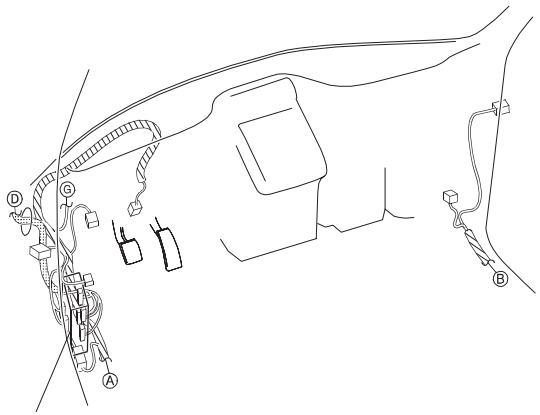

CJB
(REFER TO 00J SECTION)

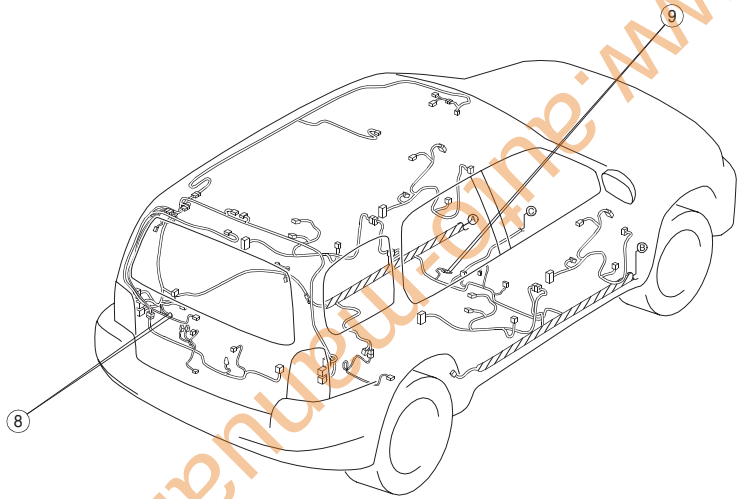

https://www.auto-manual.com/

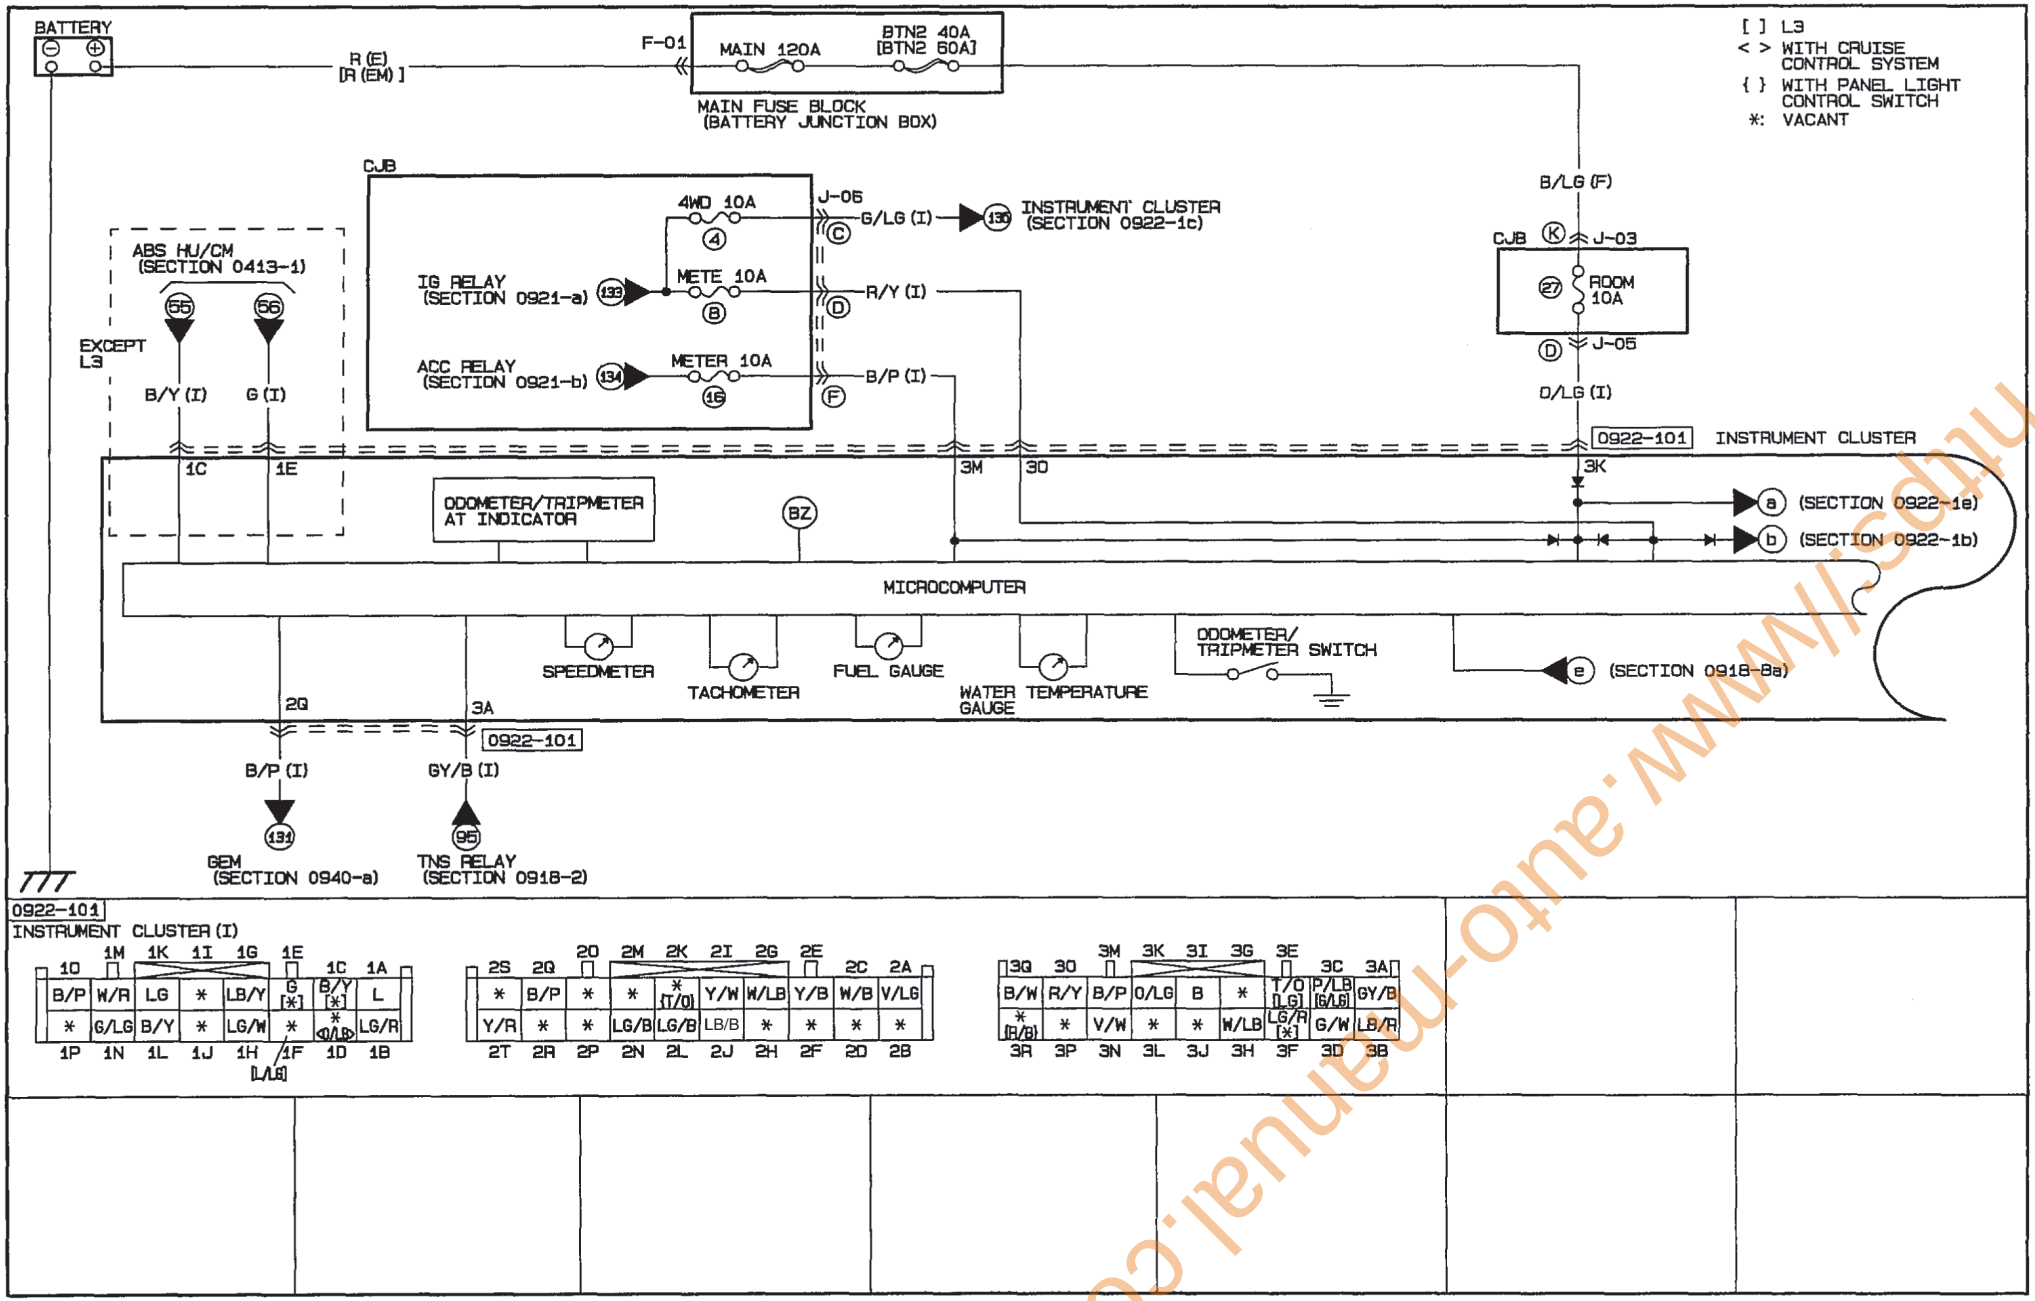


0922-101
INSTRUMENT CLUSTER (I)


1D	1M	1K	1I	1G	1E	1C	1A
B/P	W/R	LG	*	LB/Y	G [*]	B/Y [*]	L
*	G/LG	B/Y	*	LG/W	*	* [O/LB]	LG/R
1P	1N	1L	1J	1H	1F [L/LB]	1D	1B


2S	2Q	2O	2M	2K	2I	2G	2E	2C	2A
*	B/P	*	*	* [T/O]	Y/W	W/LB	Y/B	W/B	V/LG
Y/R	*	*	LG/B	LG/B	LB/B	*	*	*	*
2T	2R	2P	2N	2L	2J	2H	2F	2D	2B

3Q	3O	3M	3K	3I	3G	3E	3C	3A
B/W	R/Y	B/P	O/LG	B	*	T/O [LG]	P/LB [G/LG]	GY/B
* [B/B]	*	V/W	*	*	W/LB	LG/R [*]	G/W	LB/R
3R	3P	3N	3L	3J	3H	3F	3D	3B


https://www.auto-manual.com/

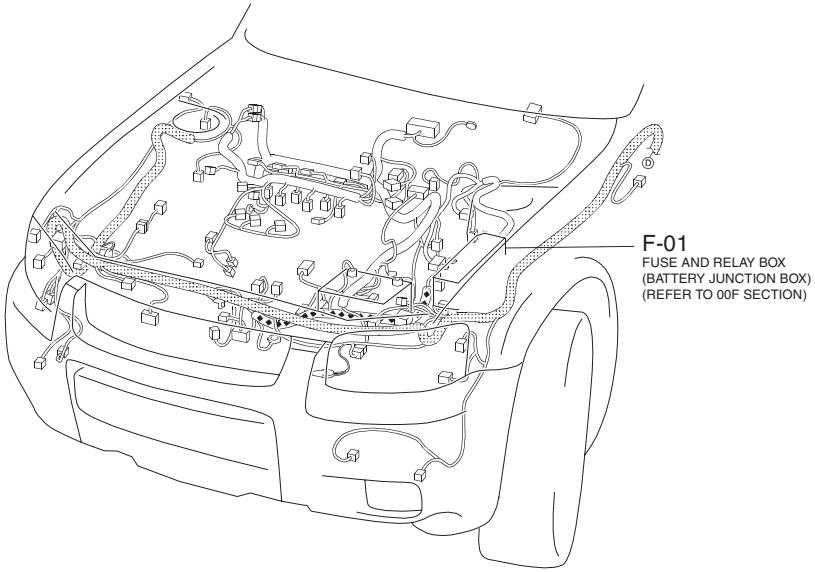

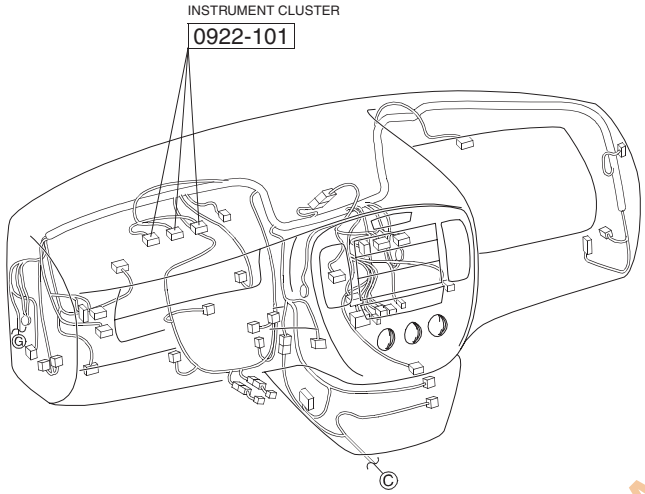

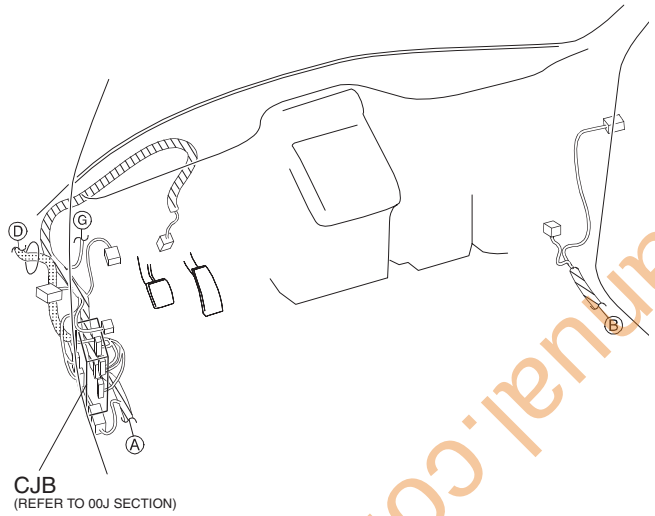


https://www.auto-manual.com/

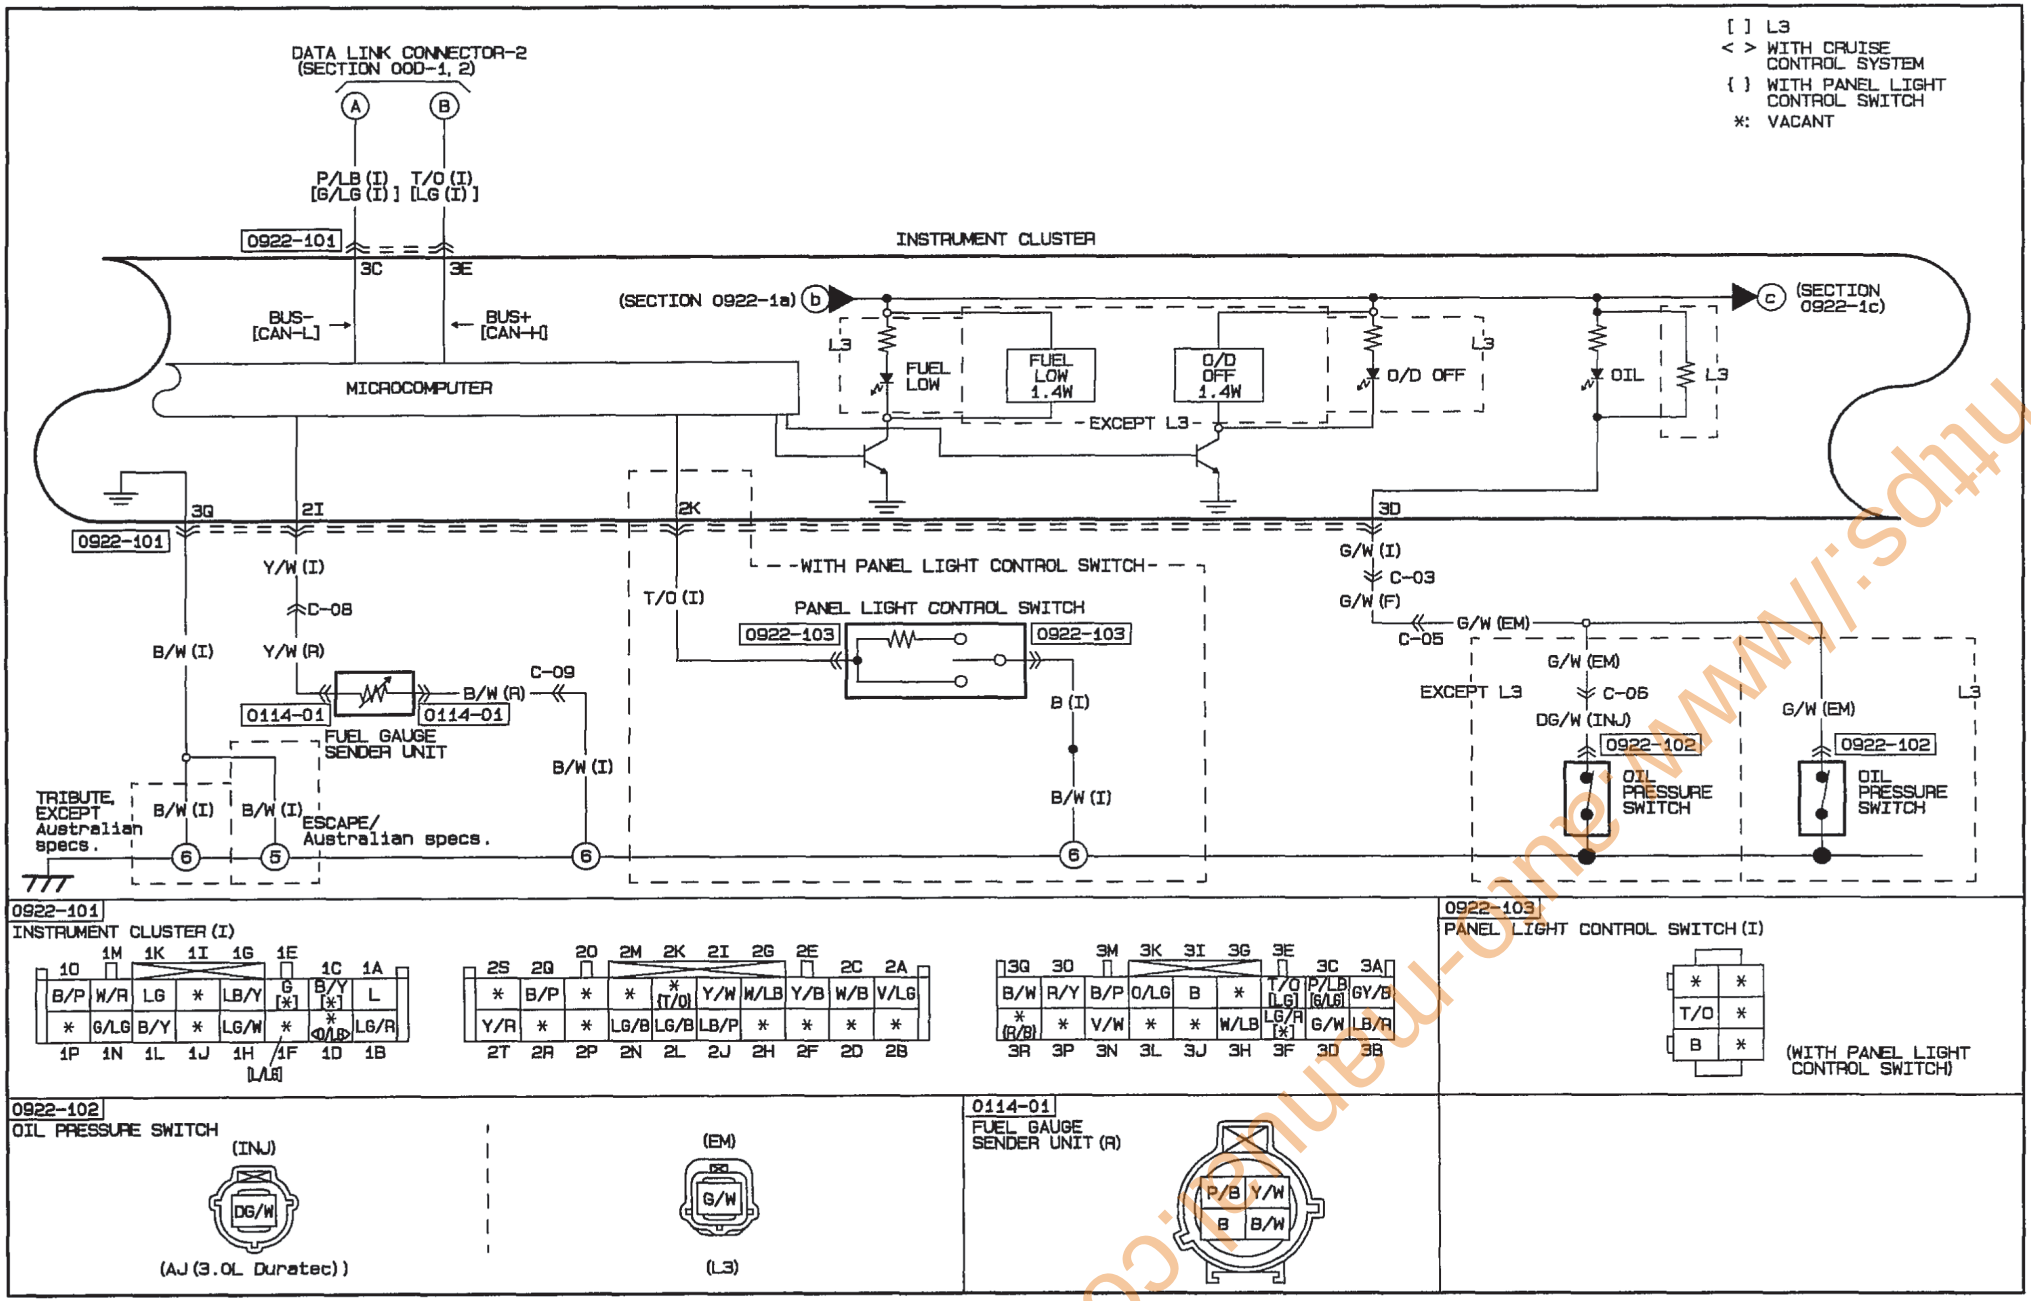


https://www.manualslib.com/


HARNESS SYMBOL : (F) (E) (R)

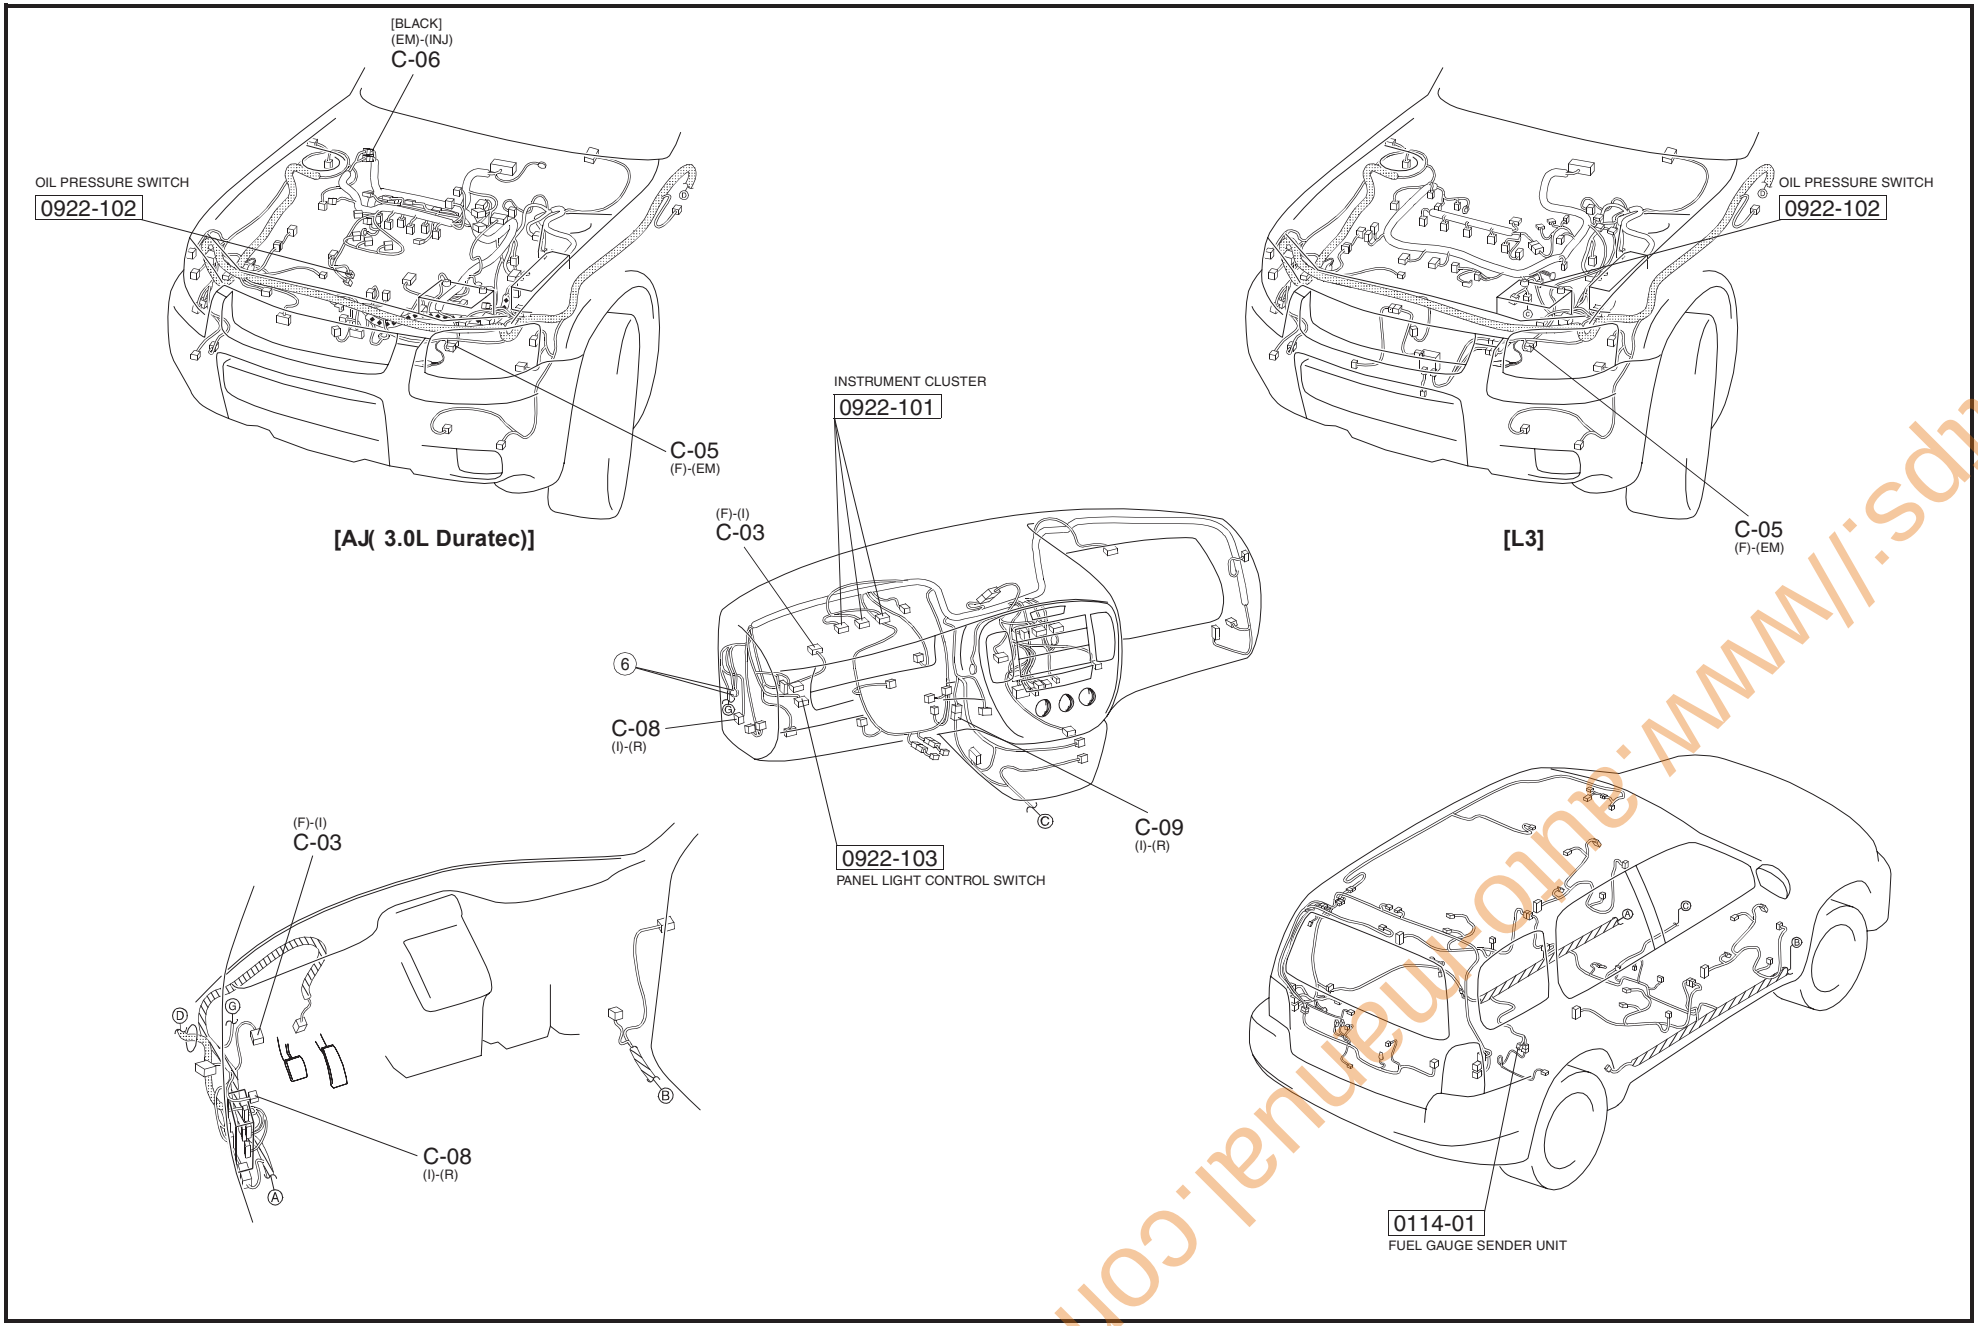


https://www.autoinfanual.com/

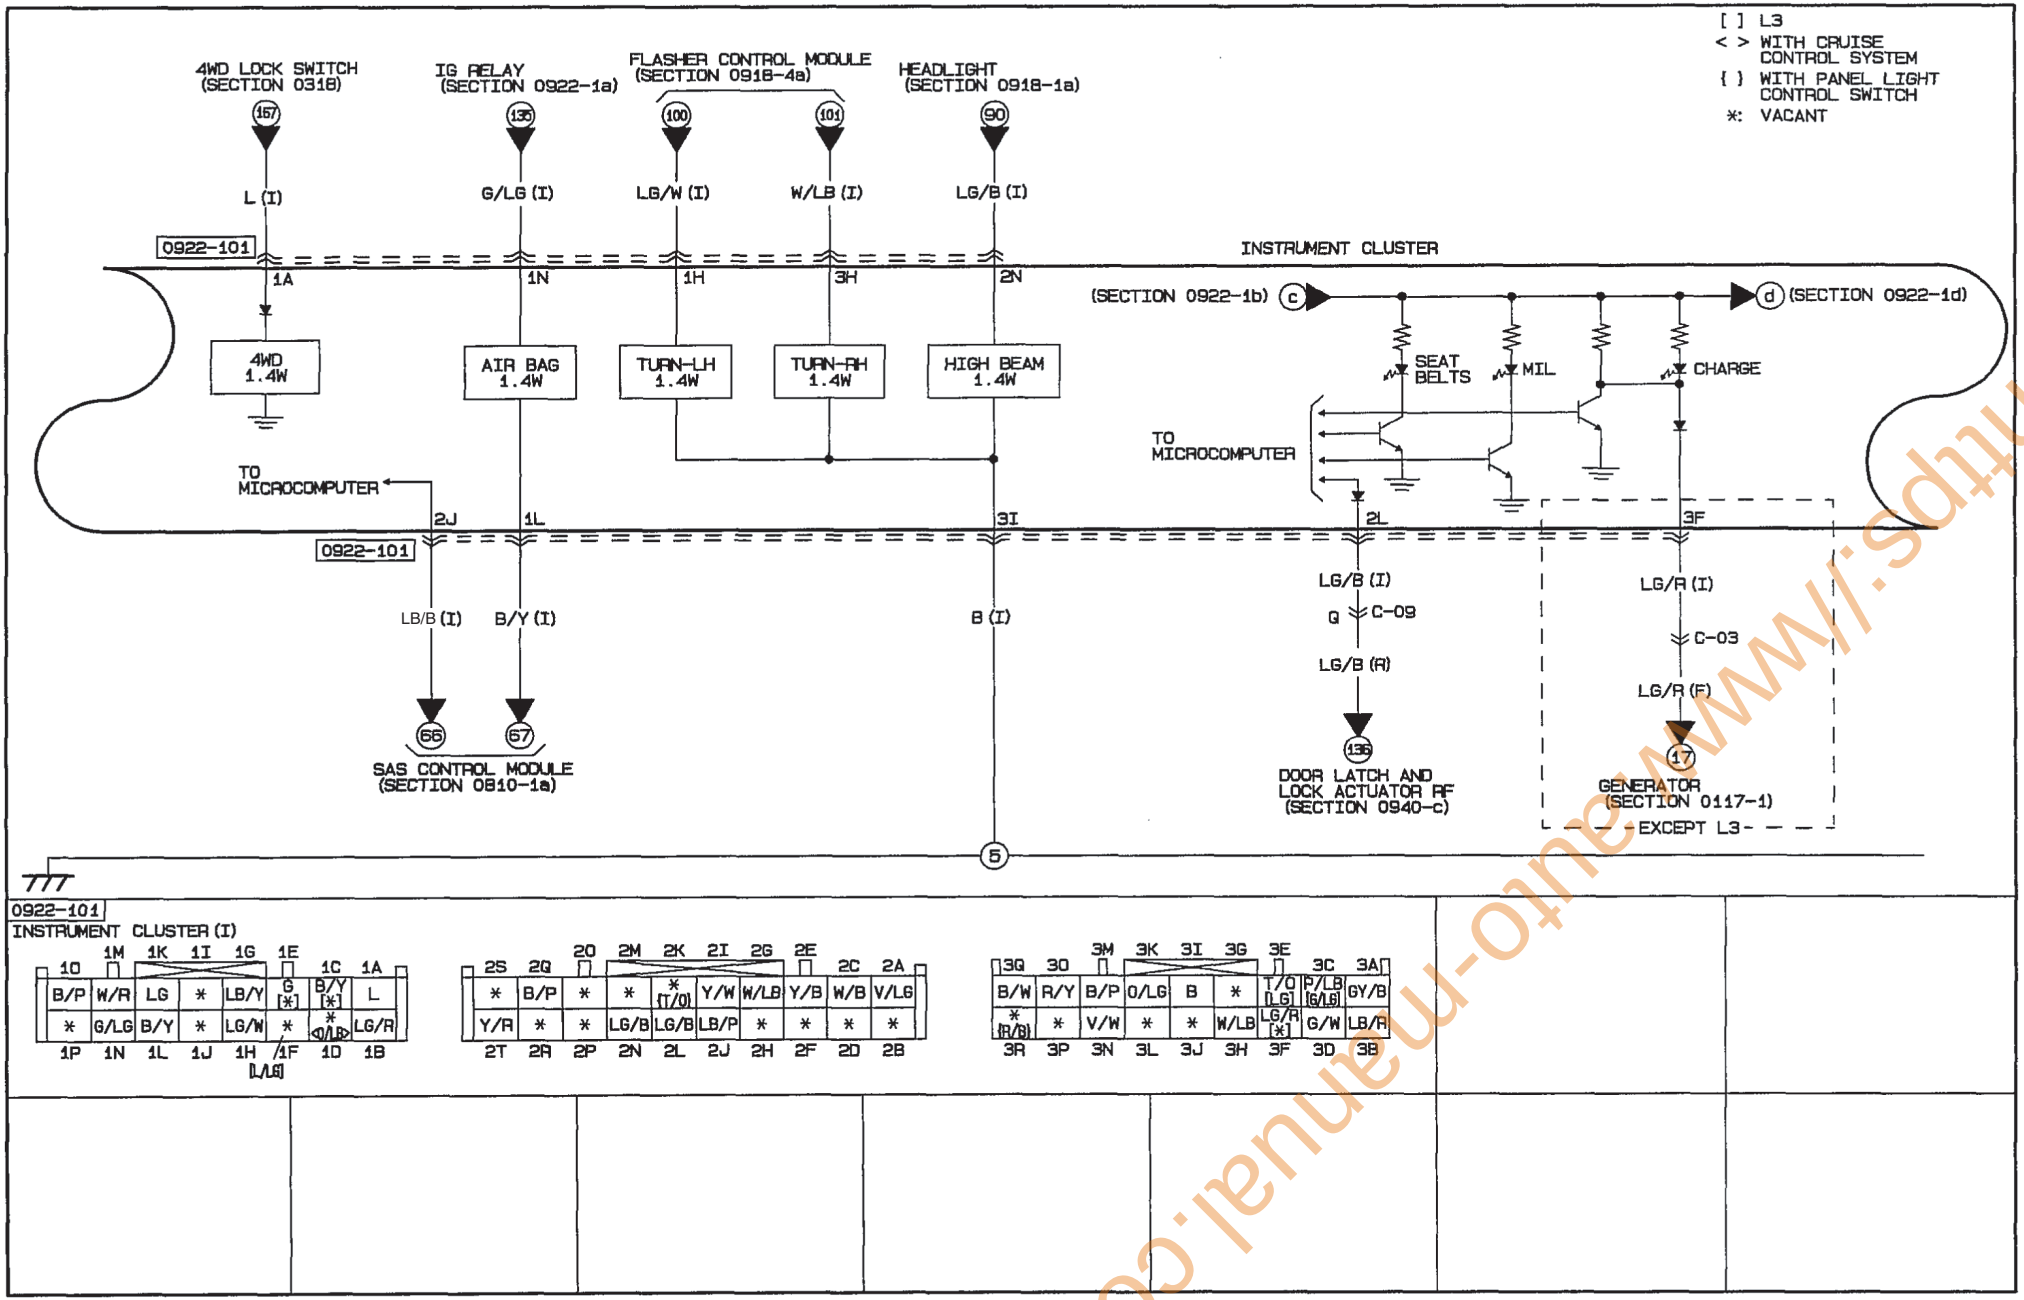


https://www.auto-manual.com/

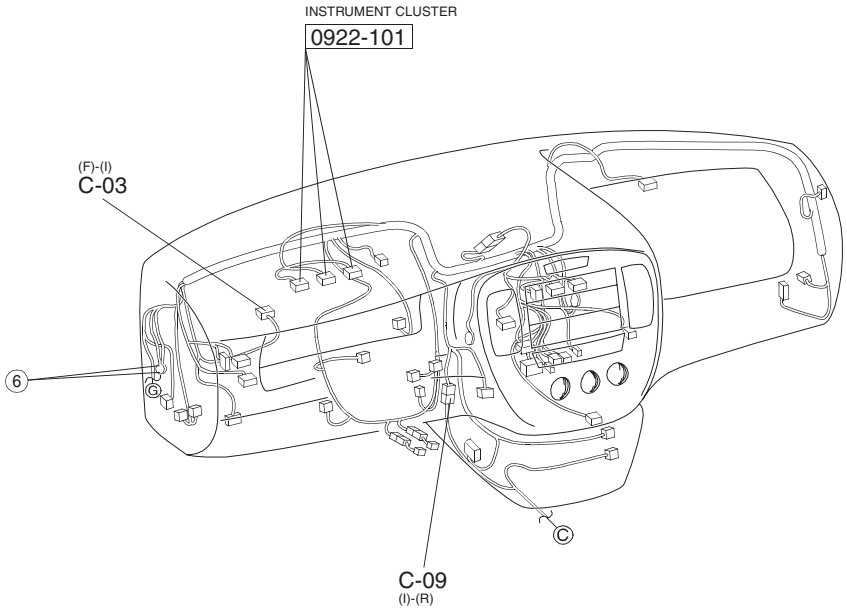

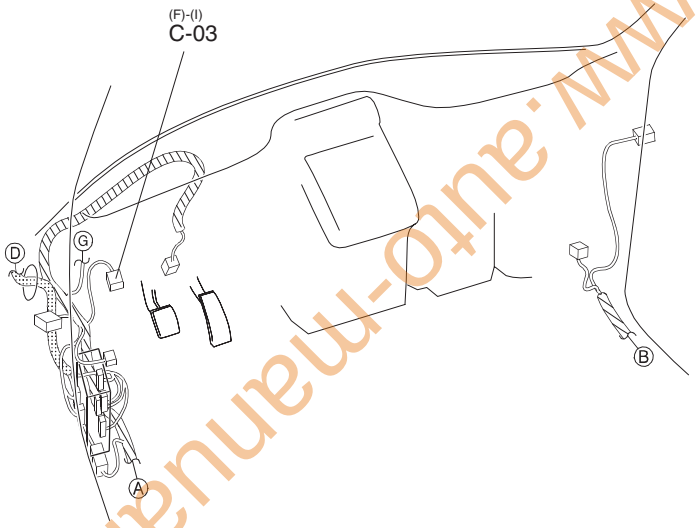

https://www.auto-manual.com/

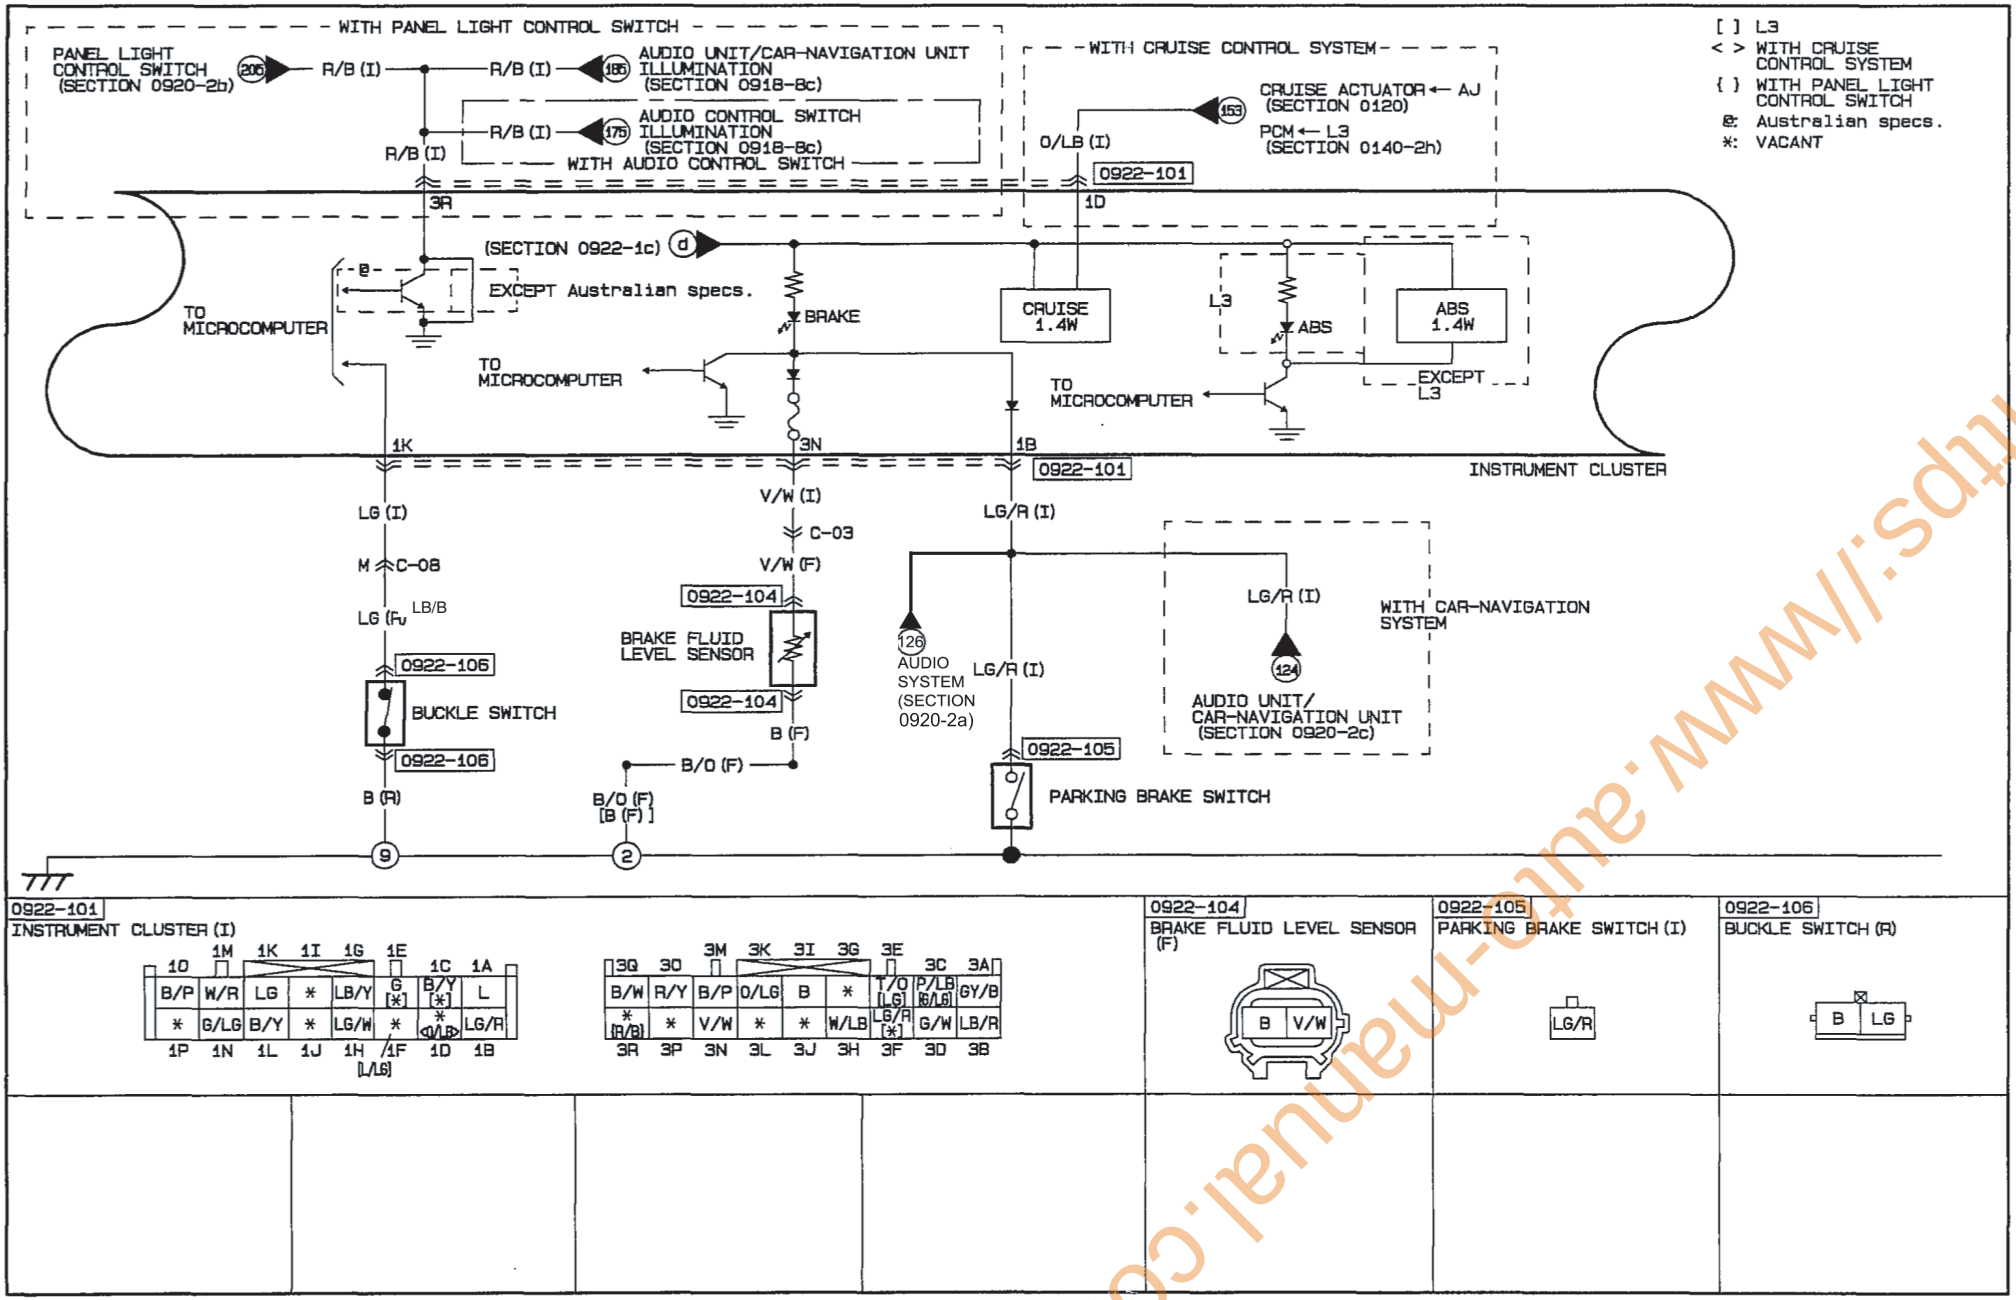

0922-101
INSTRUMENT CLUSTER (I)

1O	1M	1K	1I	1G	1E	1C	1A
B/P	W/R	LG	*	LB/Y	G [*]	B/Y [*]	L
*	G/LG	B/Y	*	LG/W	*	* <V/LB>	LG/R
1P	1N	1L	1J	1H	1F [L/LG]	1D	1B


3Q	3O	3M	3K	3I	3G	3E	3C	3A
B/W	R/Y	B/P	O/LG	B	*	T/O [LG]	P/LB [G/LG]	GY/B
* [R/B]	*	V/W	*	*	W/LB	LG/R [*]	G/W	LB/R
3R	3P	3N	3L	3J	3H	3F	3D	3B


0922-104
BRAKE FLUID LEVEL SENSOR (F)


0922-105
PARKING BRAKE SWITCH (I)


0922-106
BUCKLE SWITCH (R)

https://www.auto-manual.com/

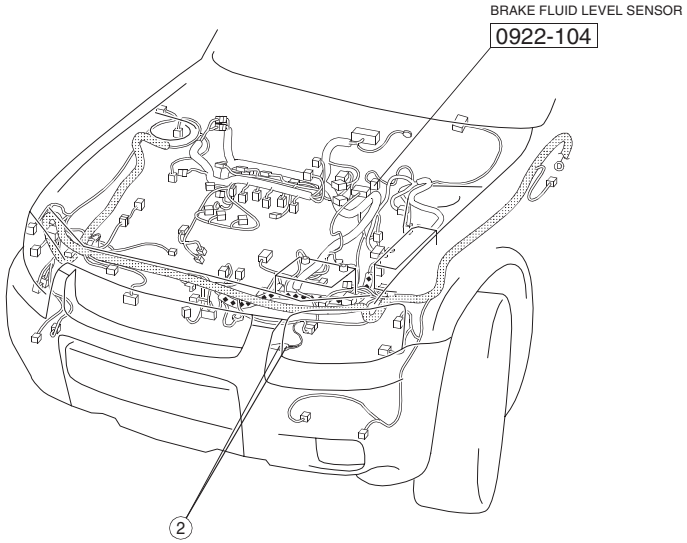


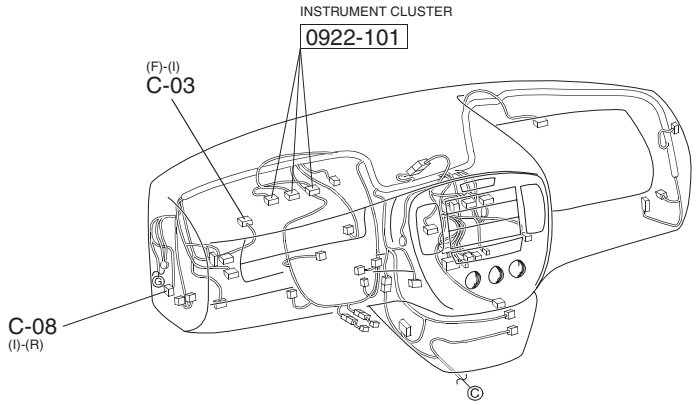

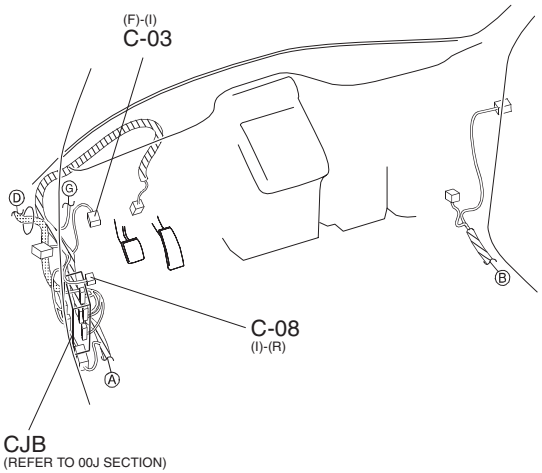


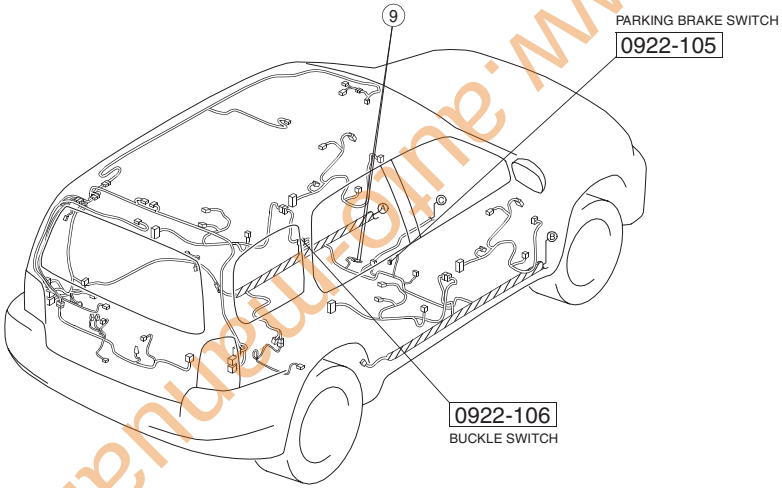


https://www.autoepcmanual.com/

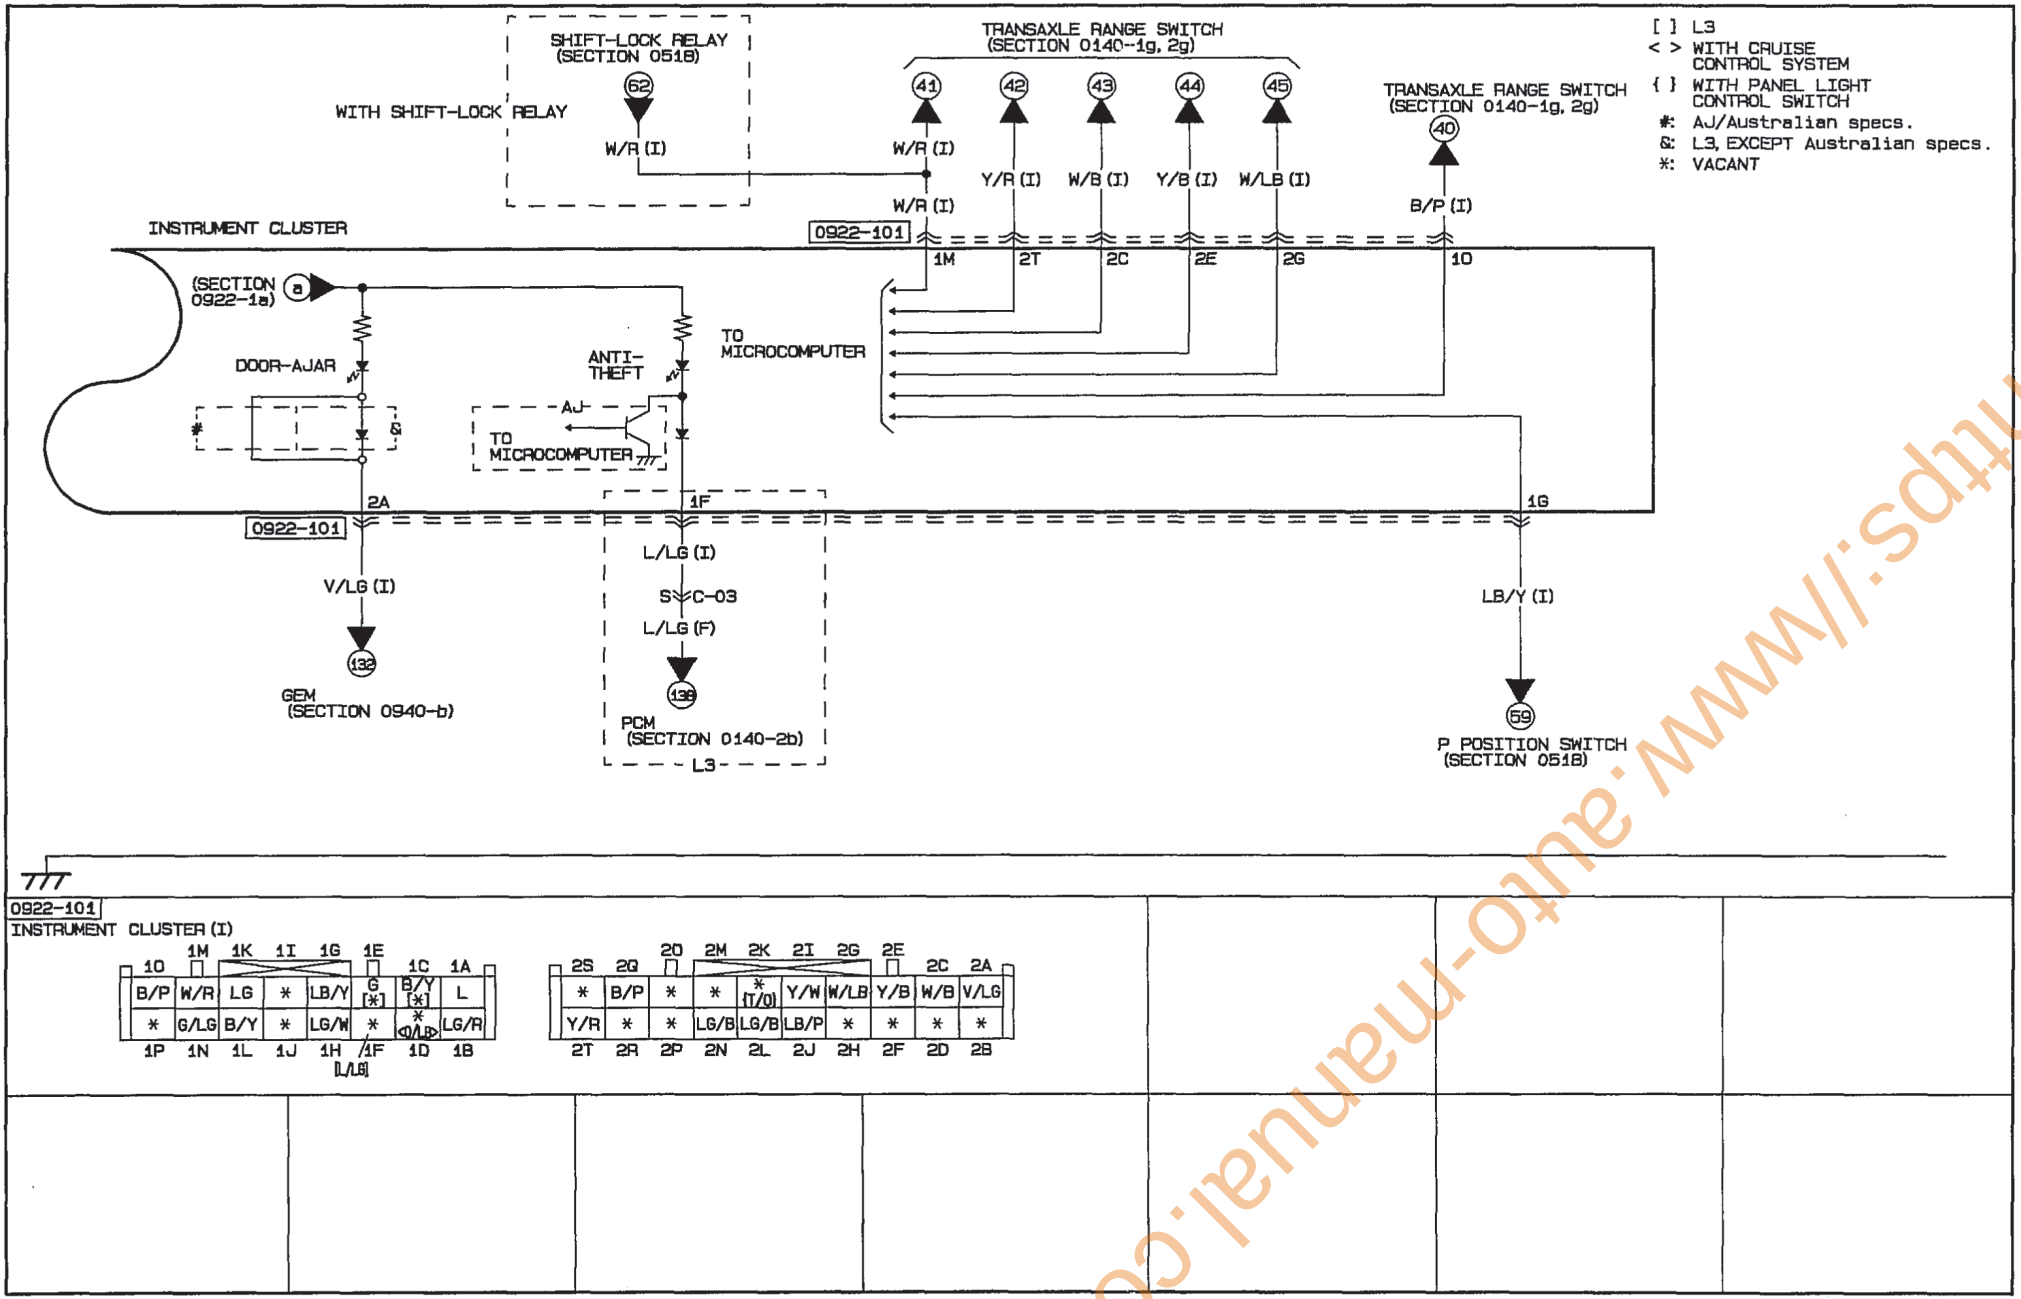


https://www.auto-manual.com/

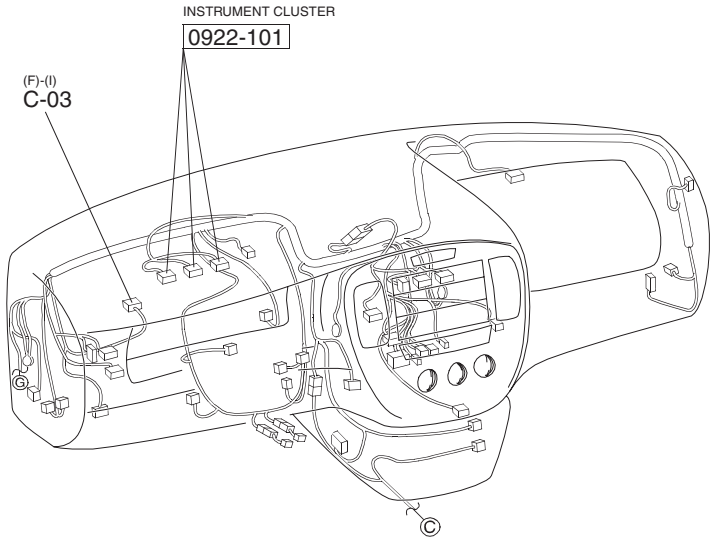


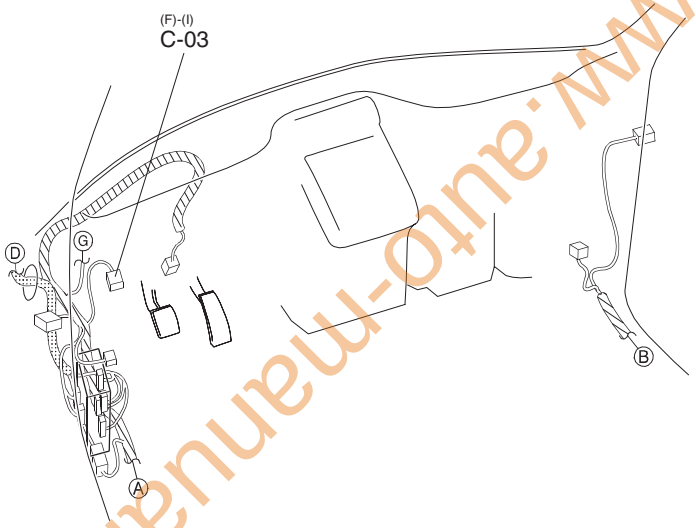


https://www.auto-manual.com/

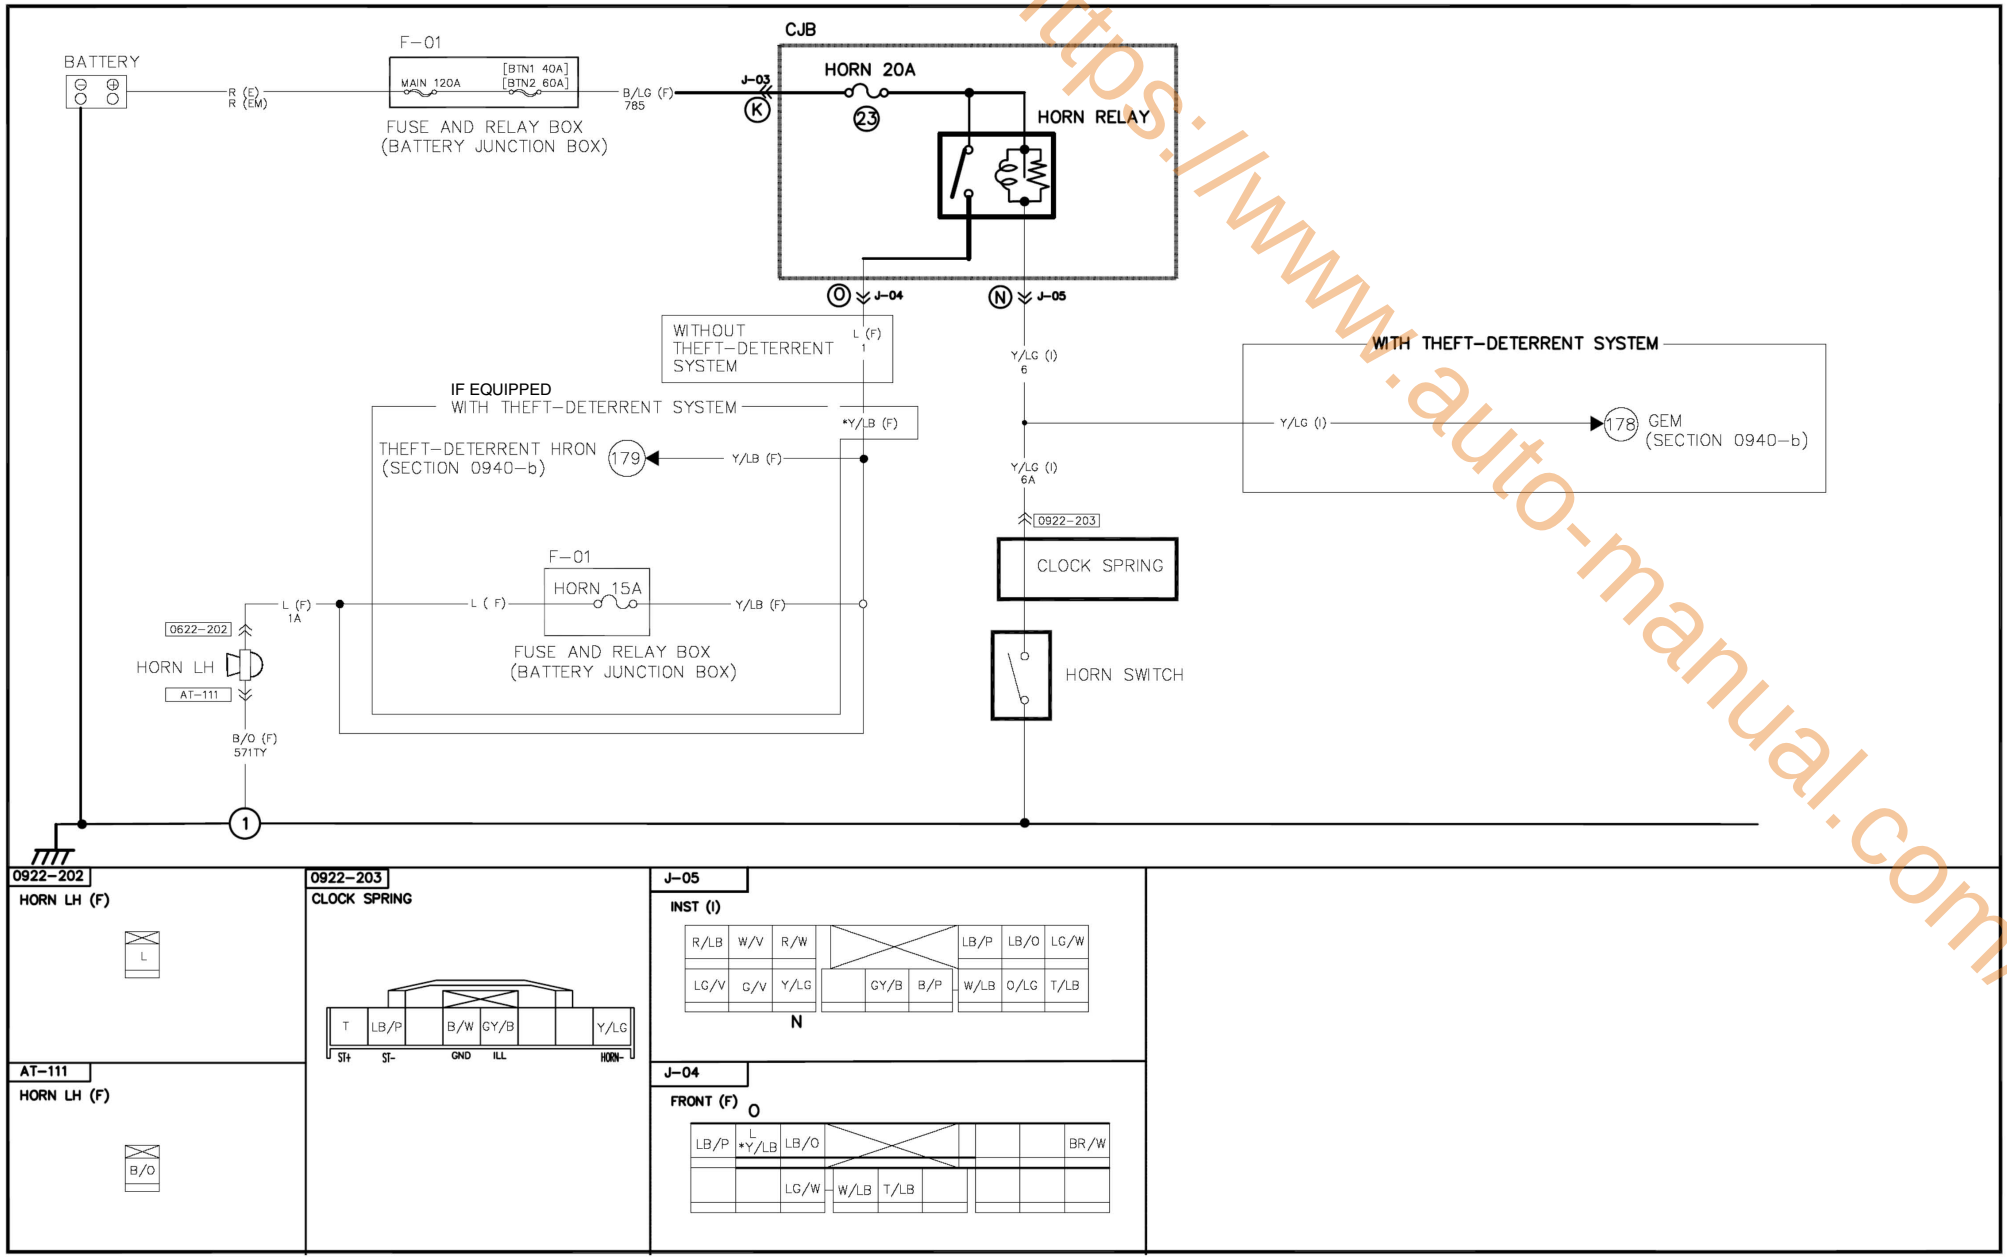


https://www.auto-manual.com/

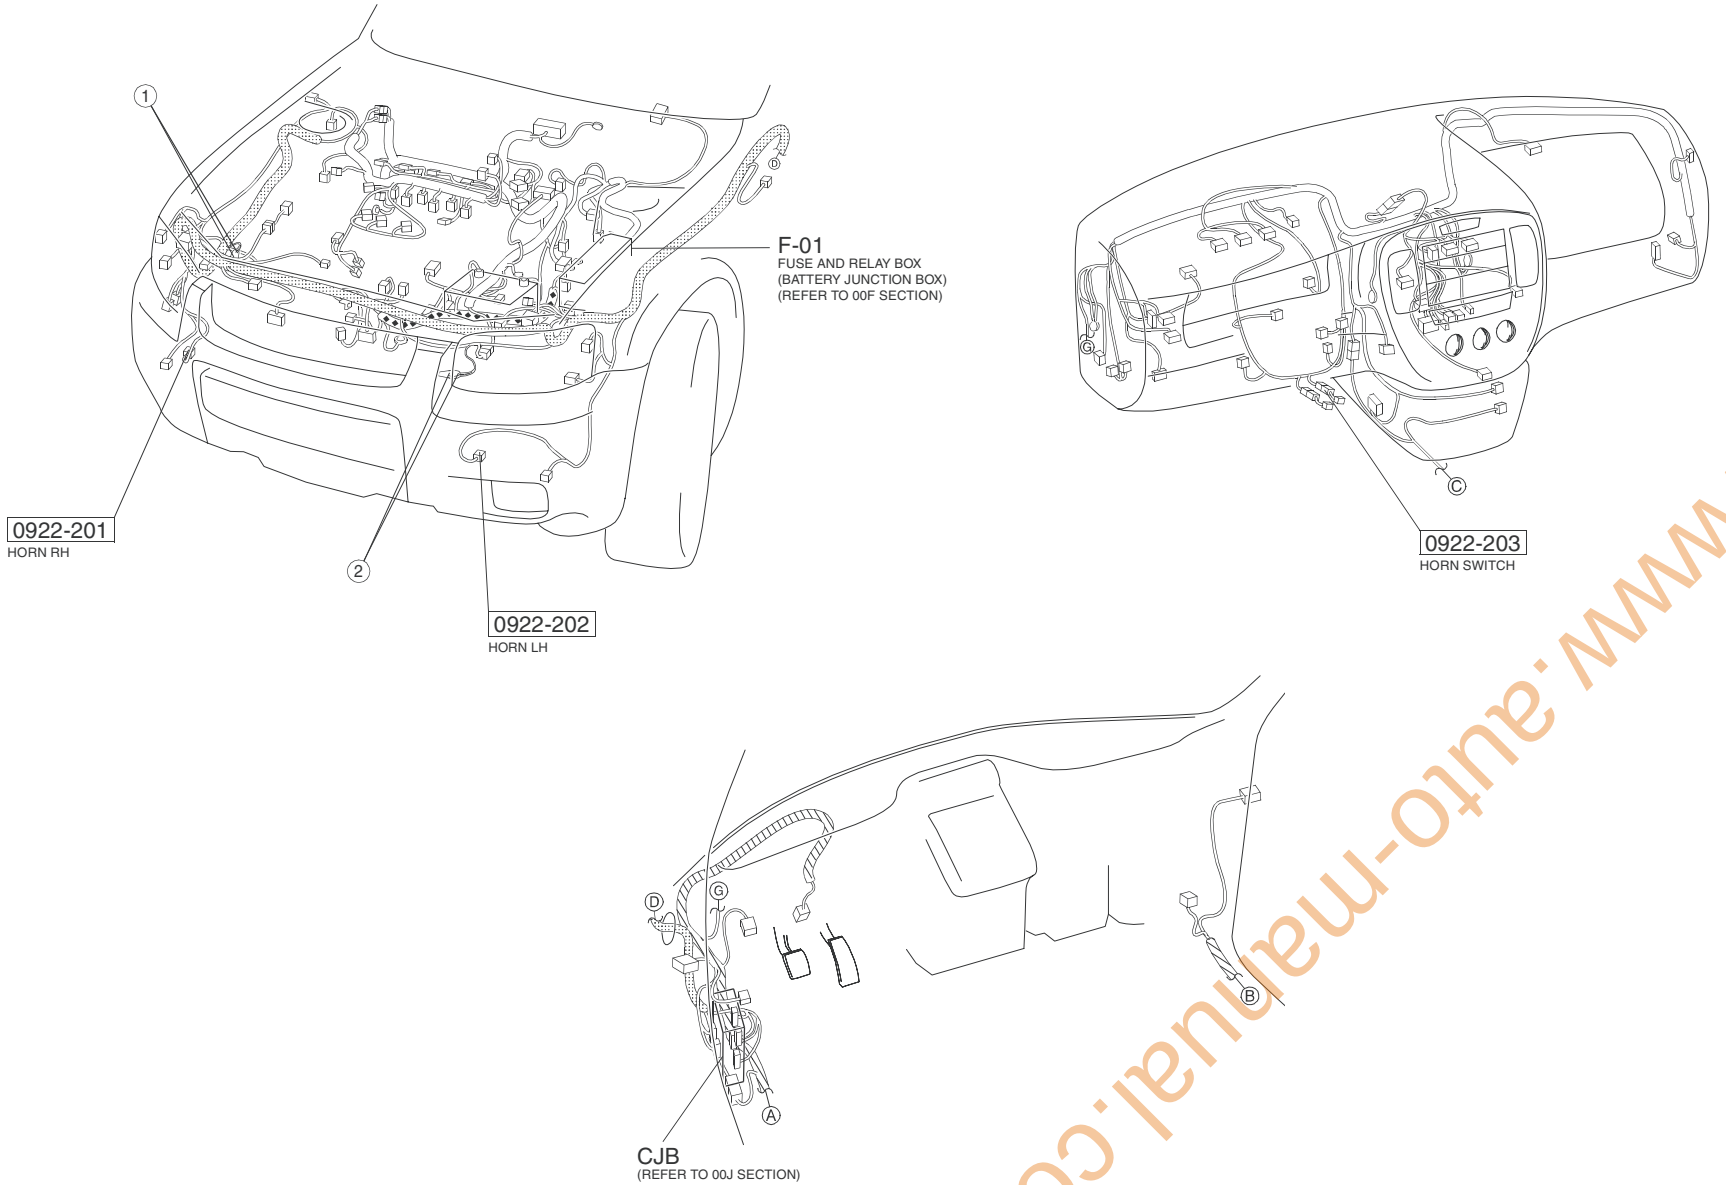


https://www.auto-manual.com/

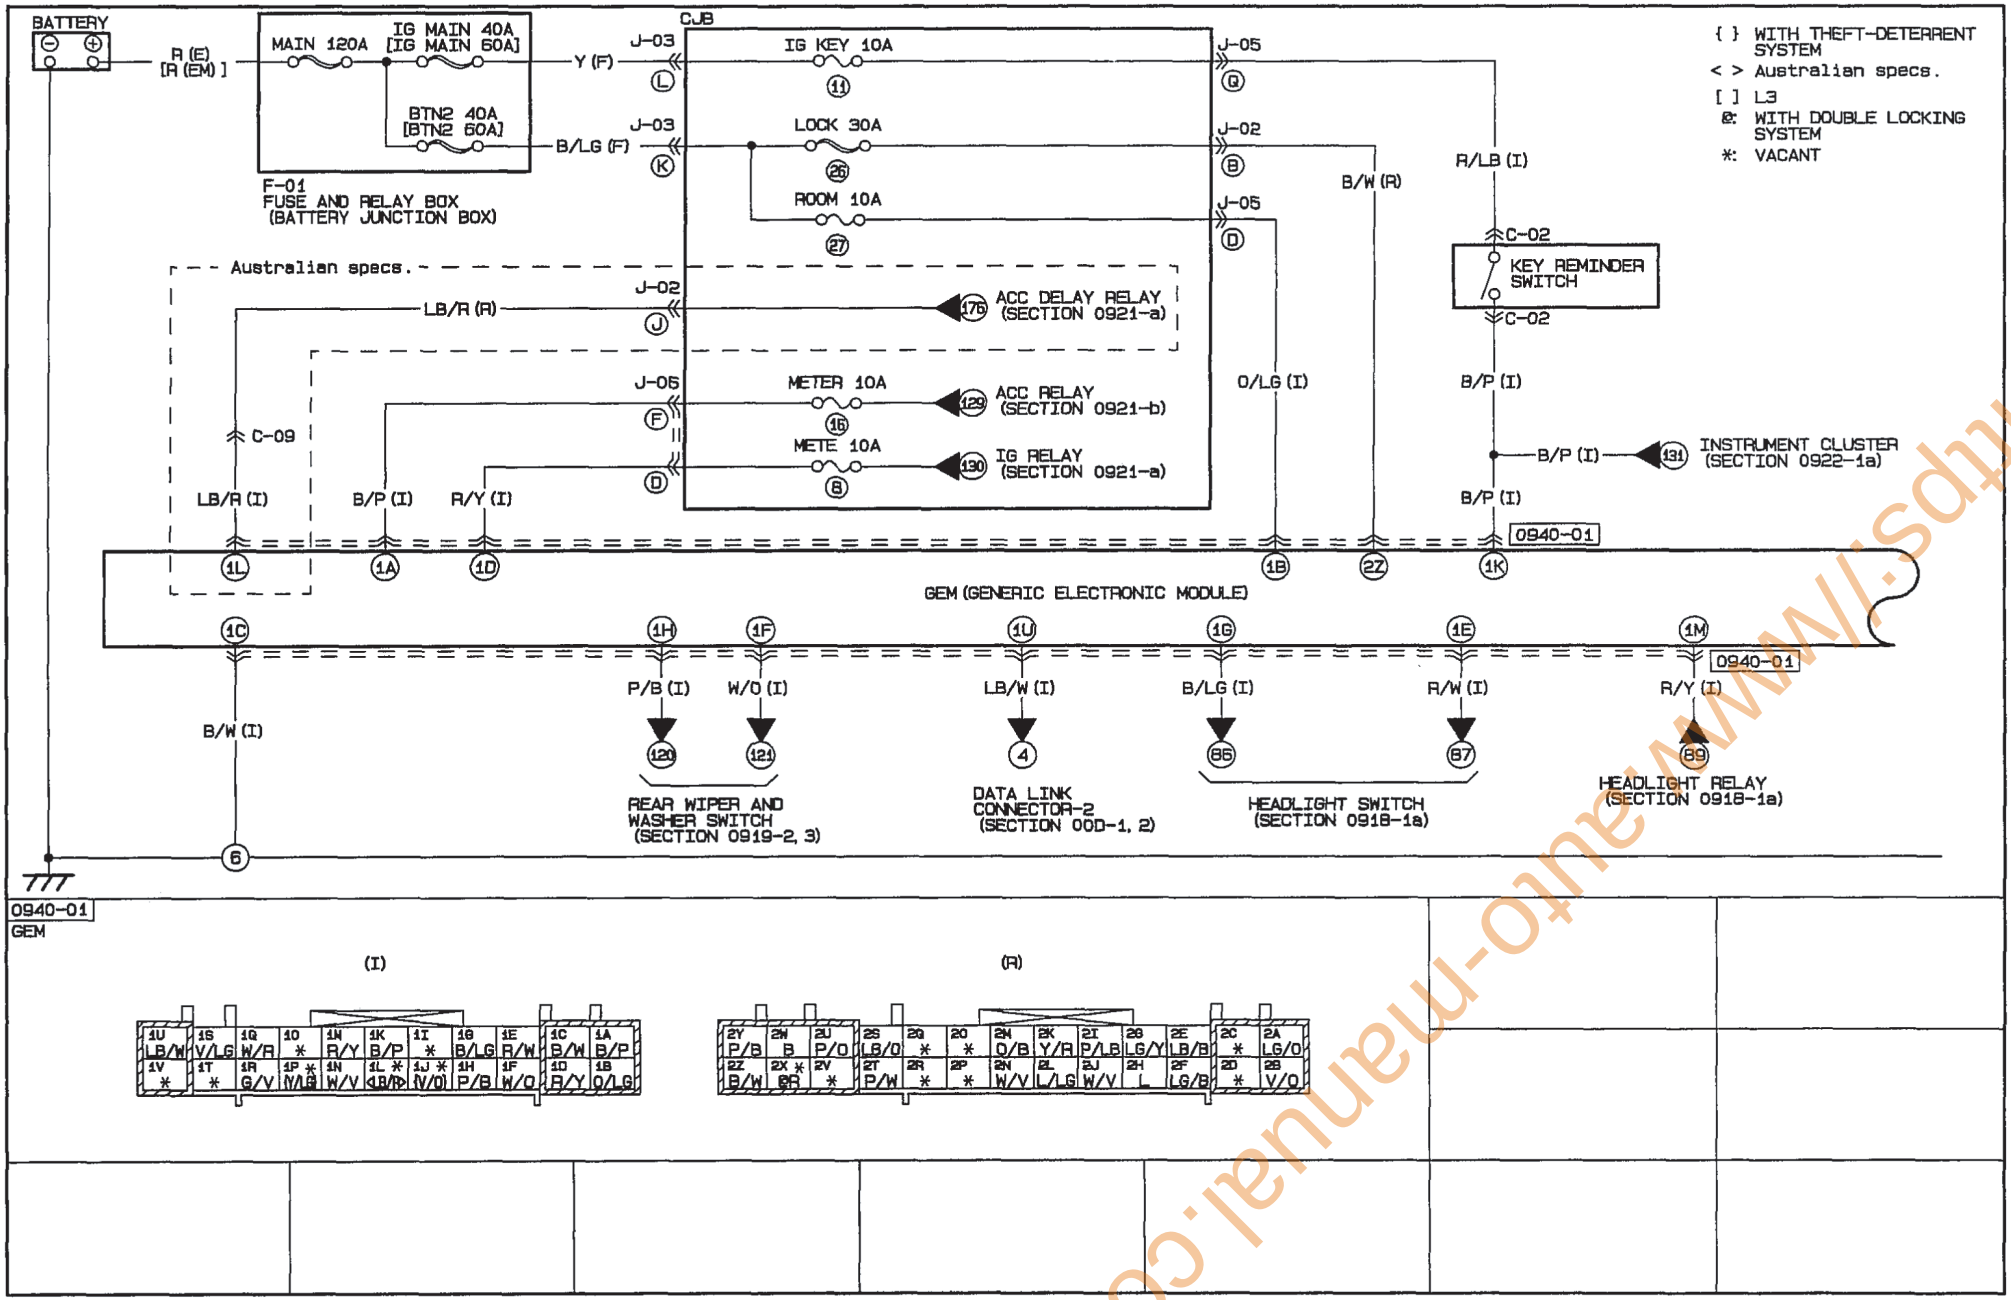


https://www.auto-manual.com/

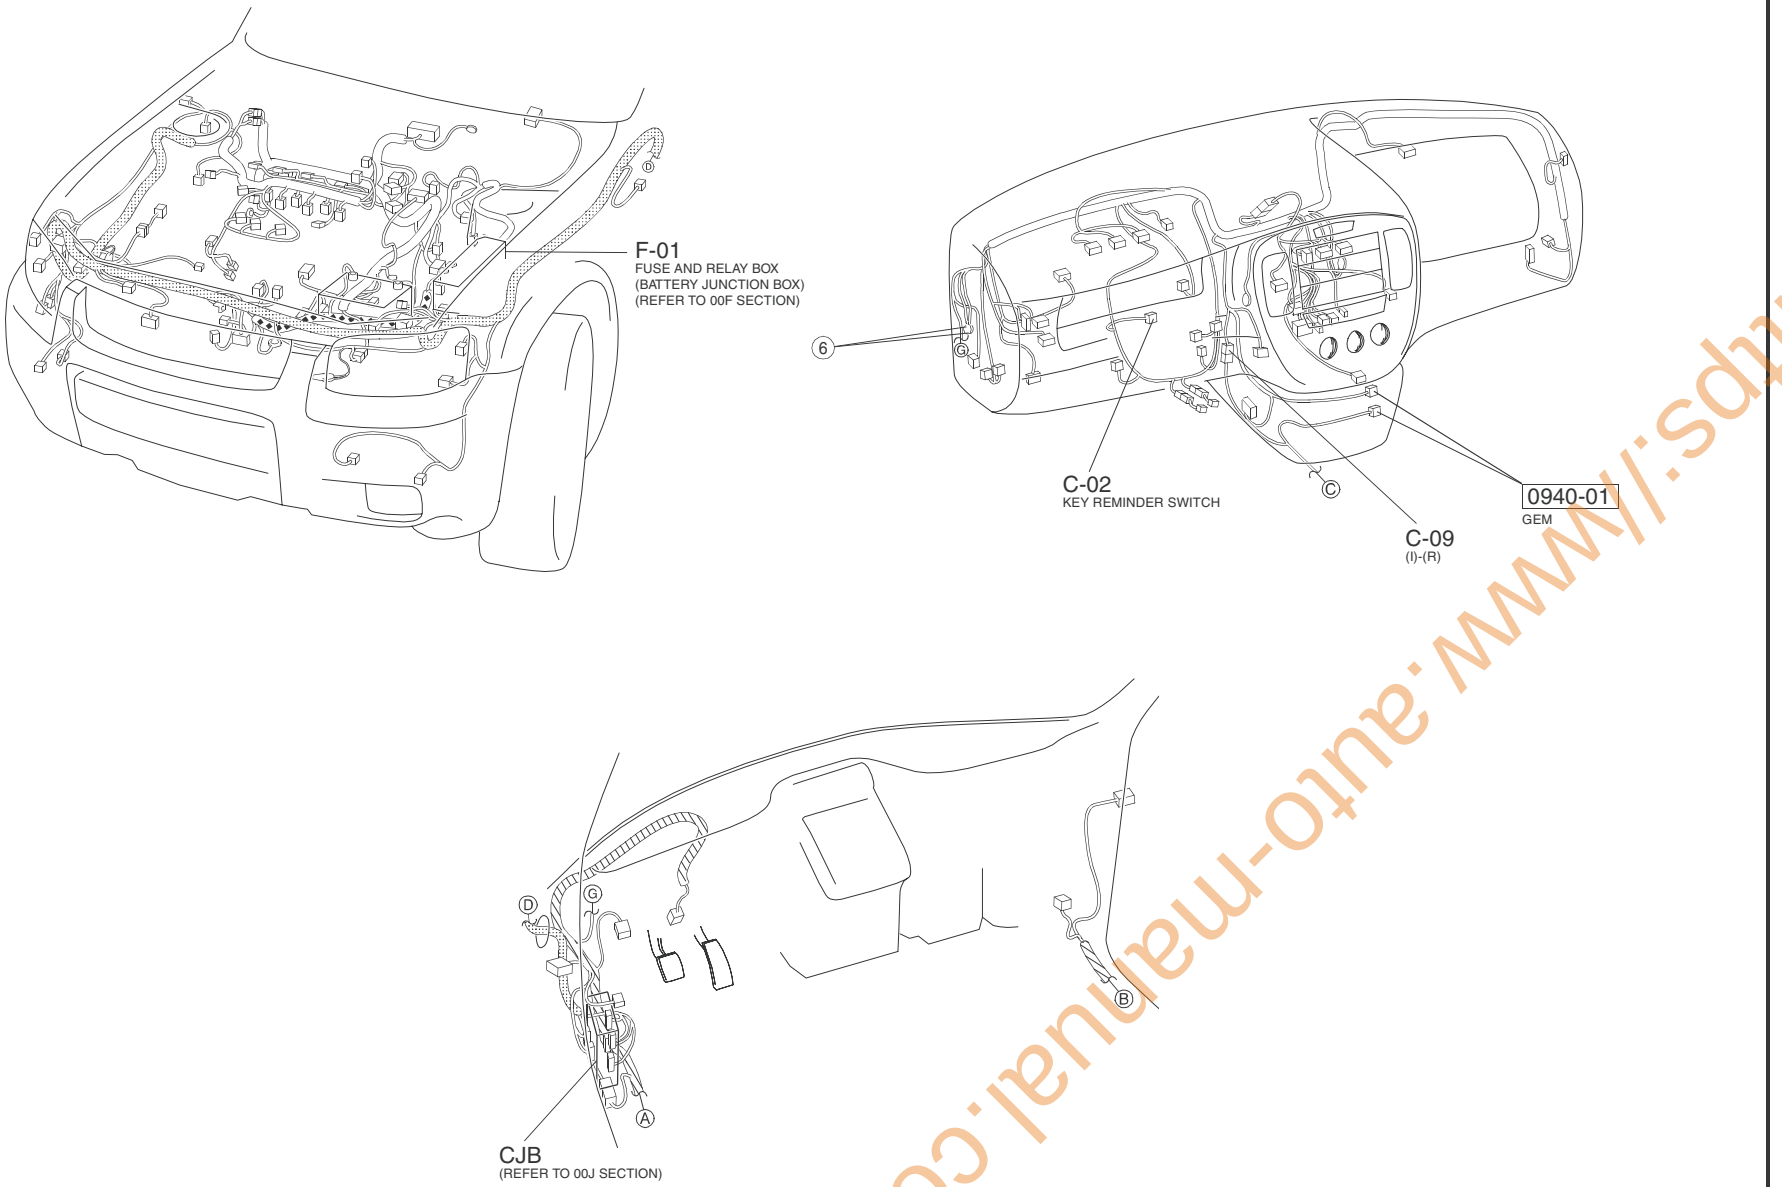



https://www.auto-manual.com/

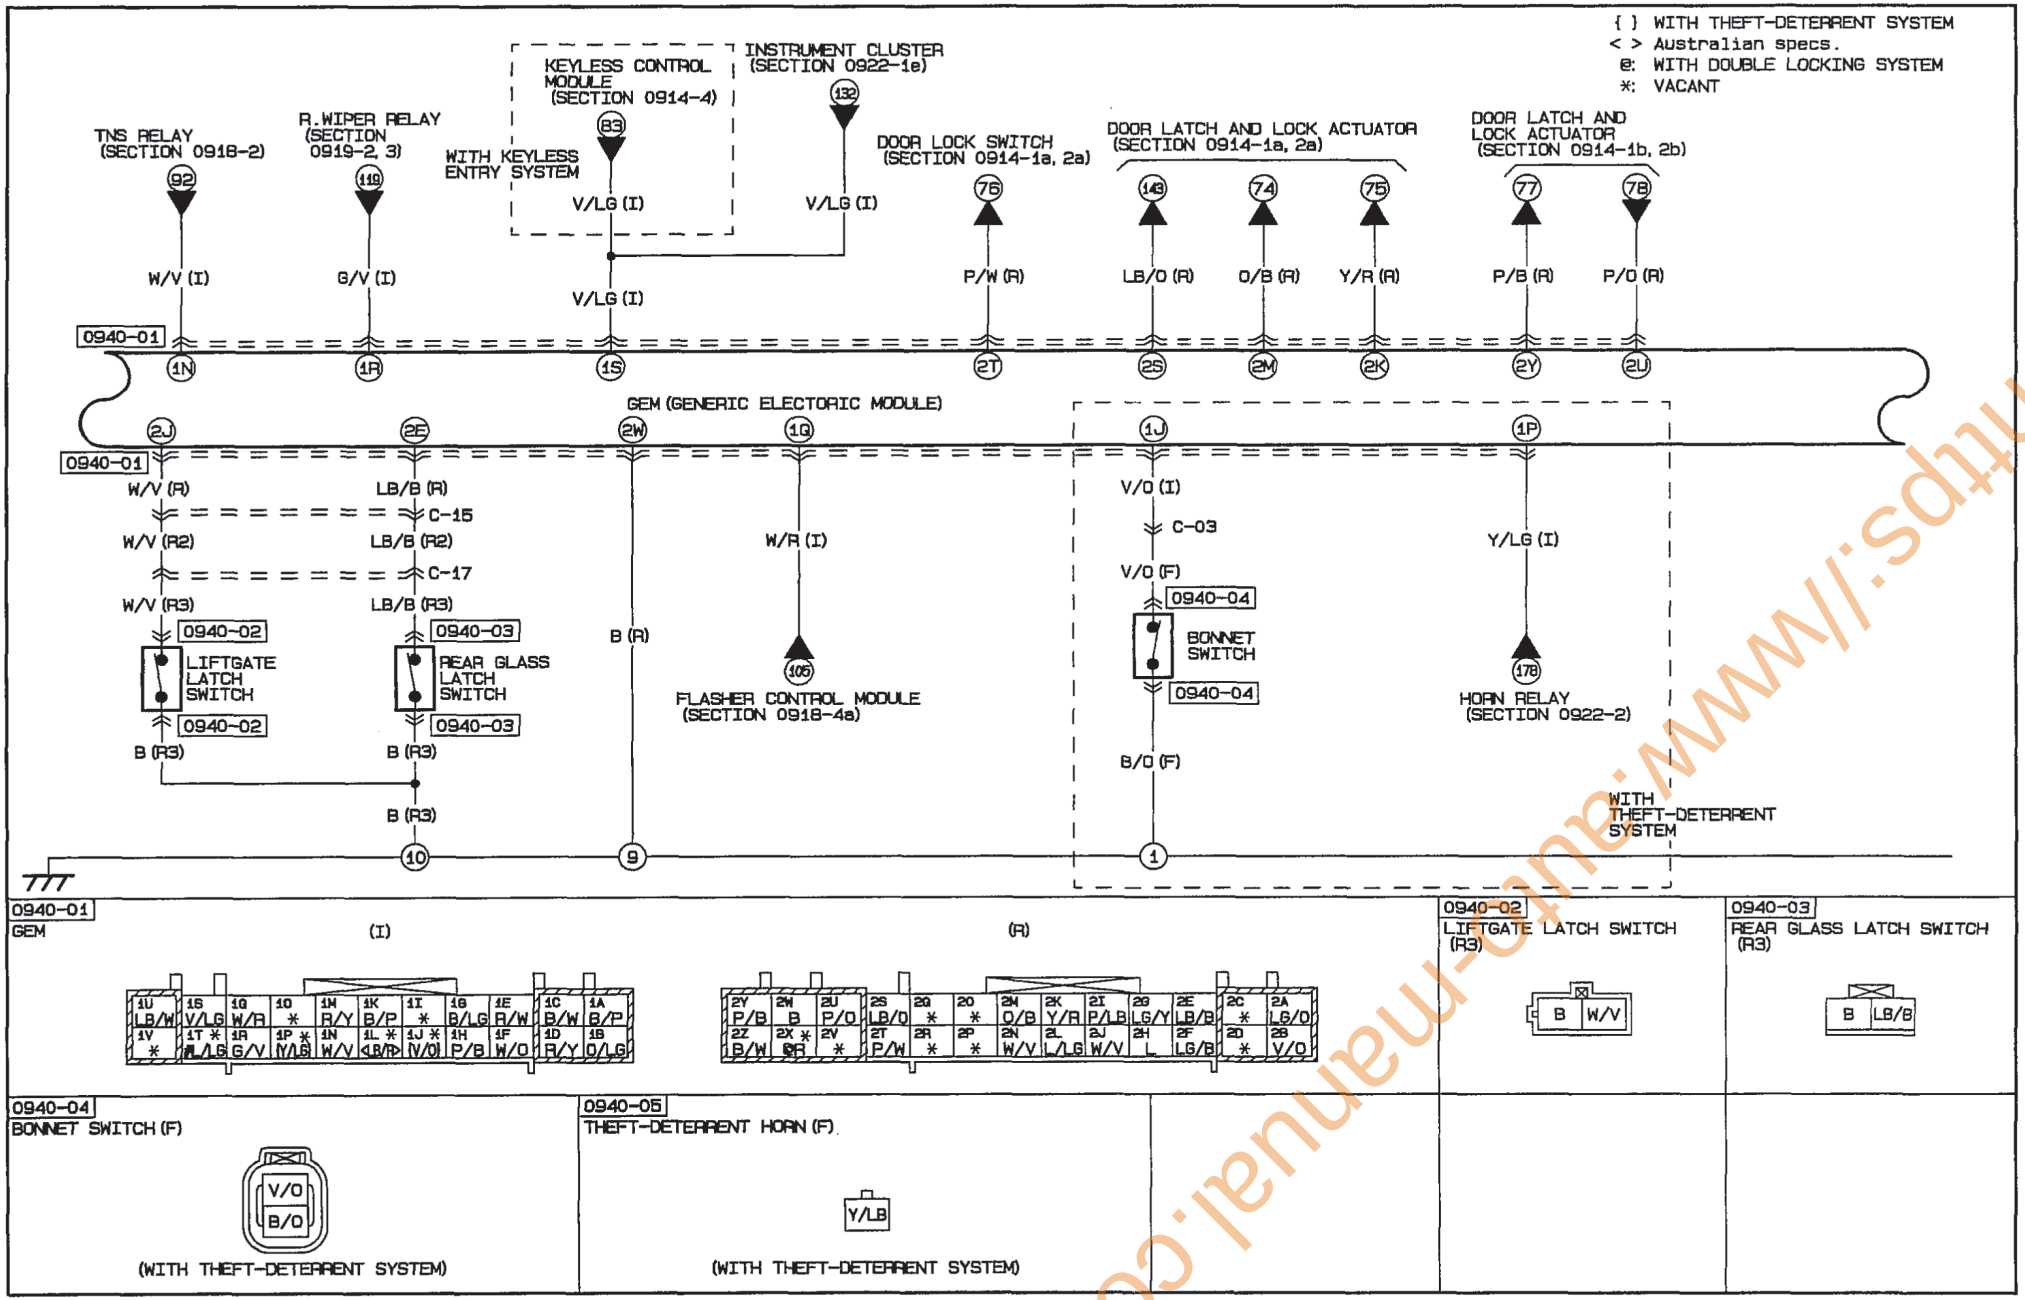


https://www.auto-manual.com/

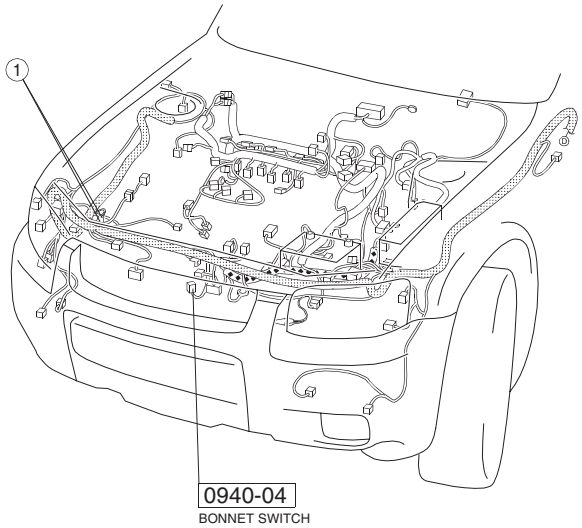


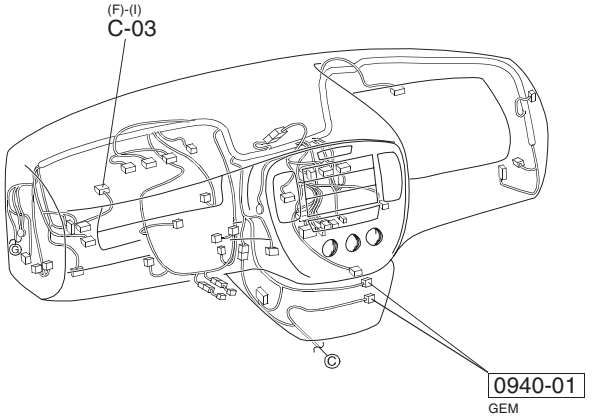

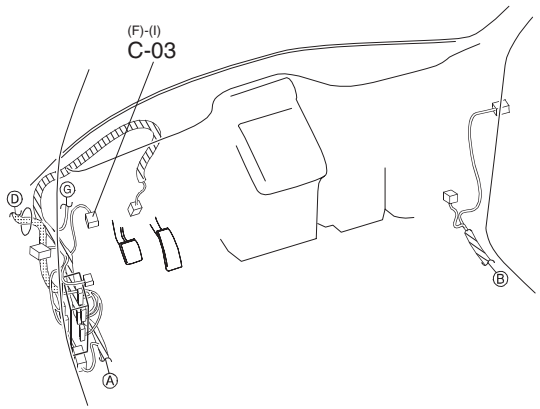


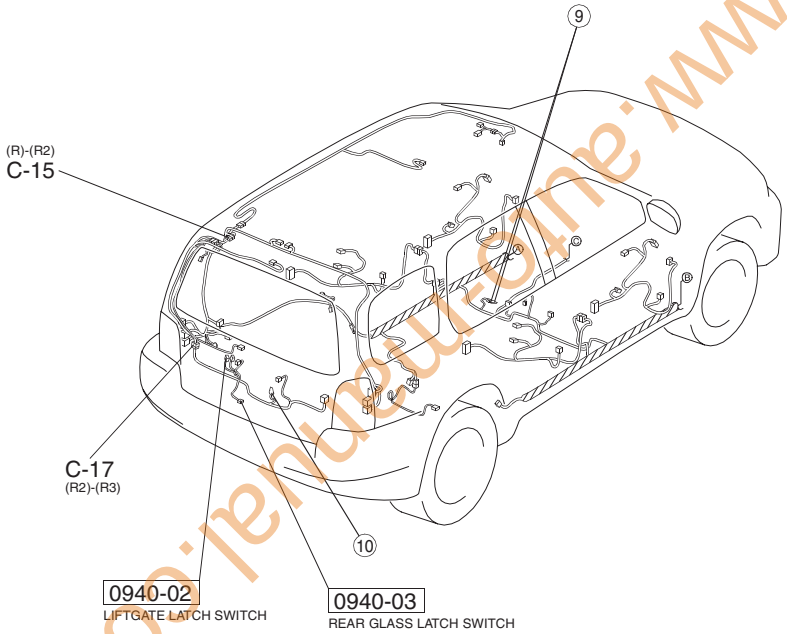



https://www.autoepcmanual.com/

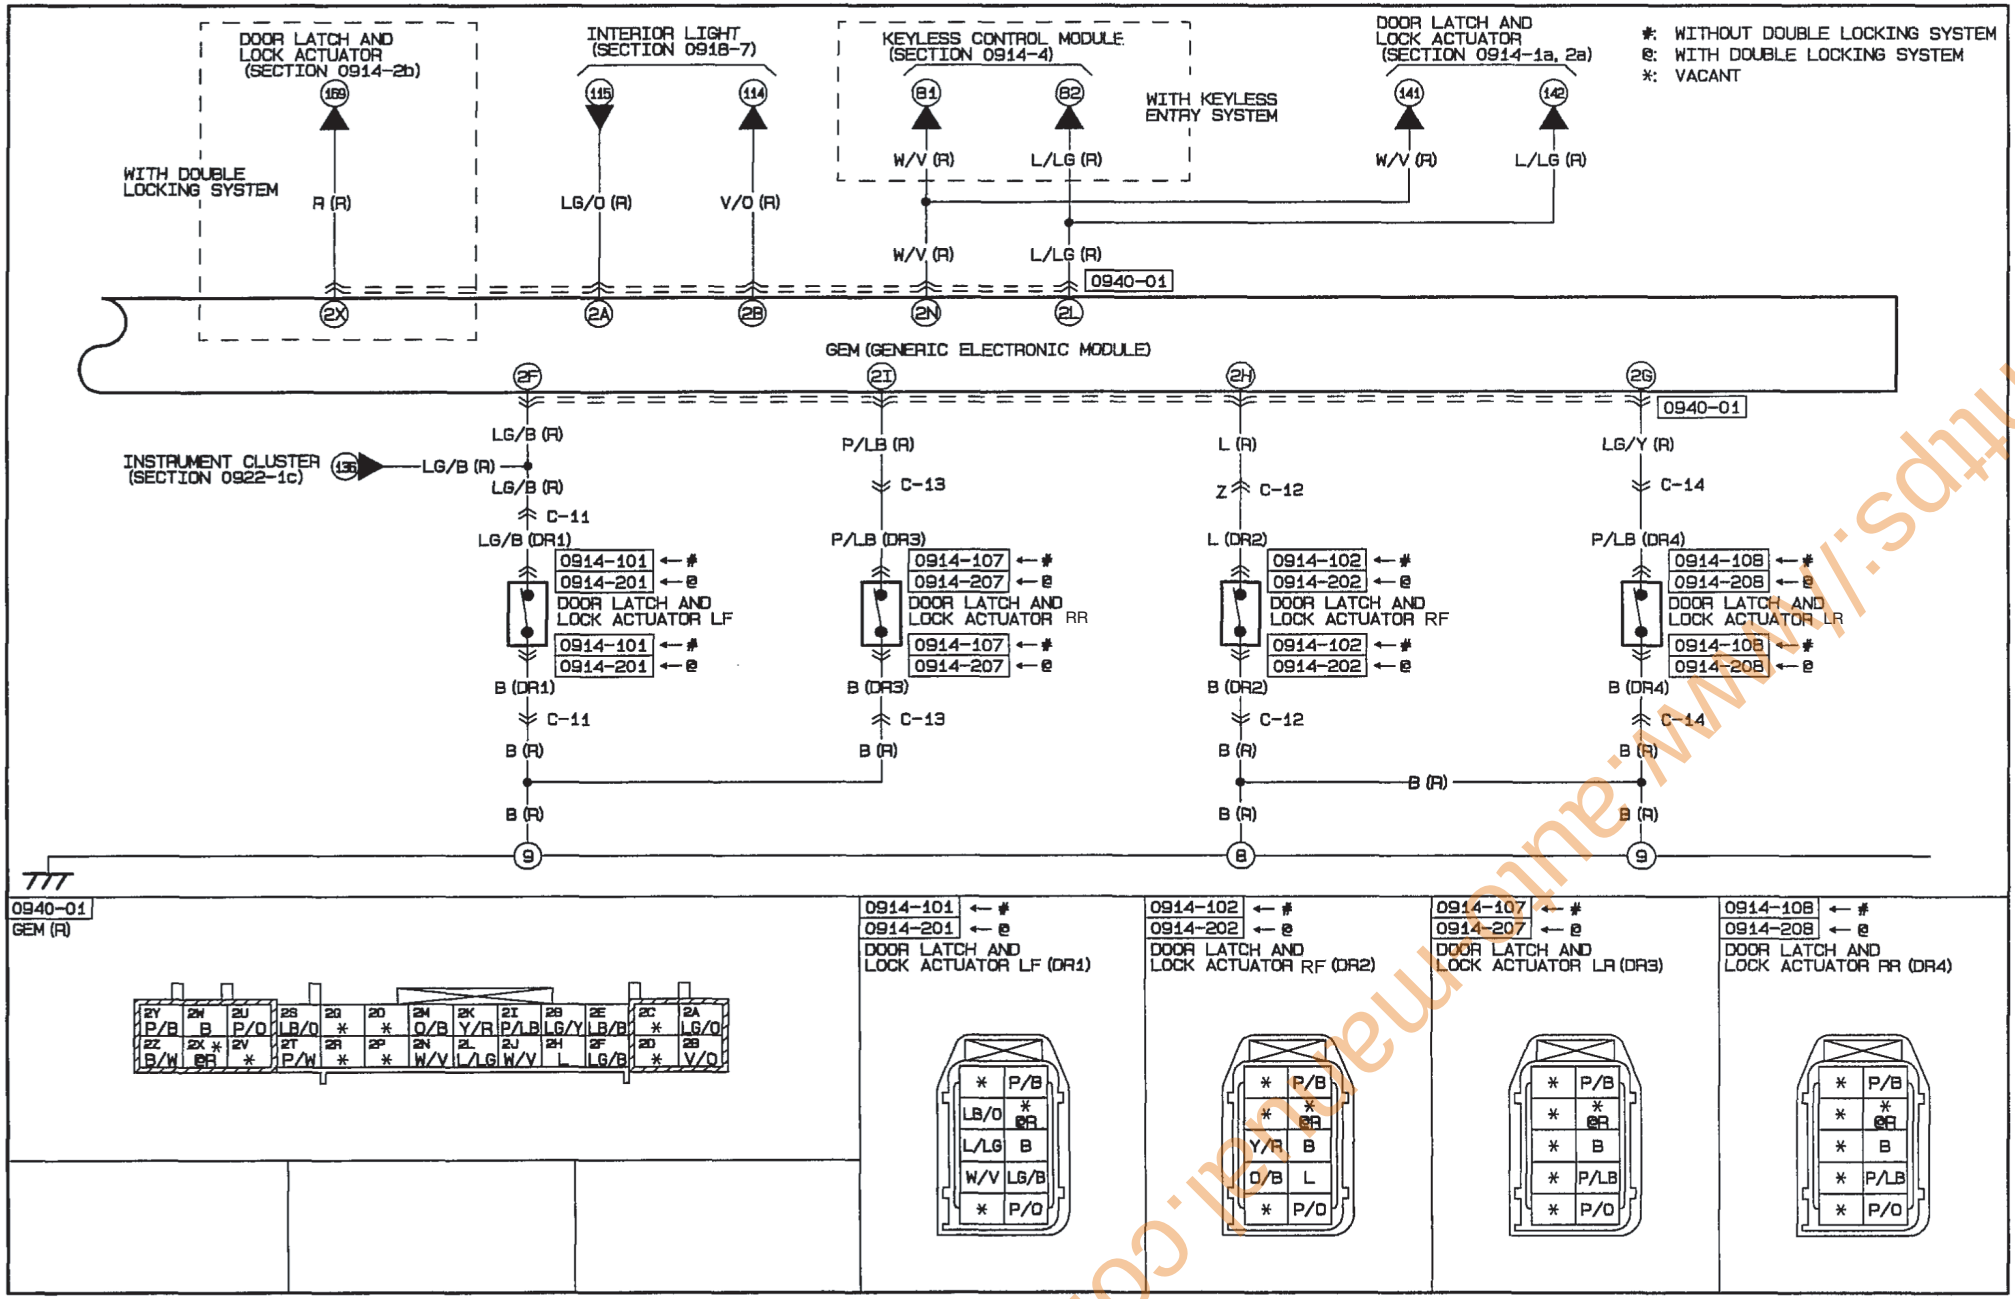

https://www.automanuali.com/

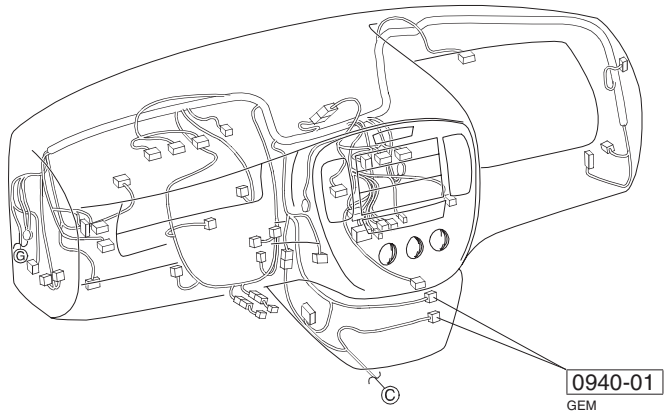


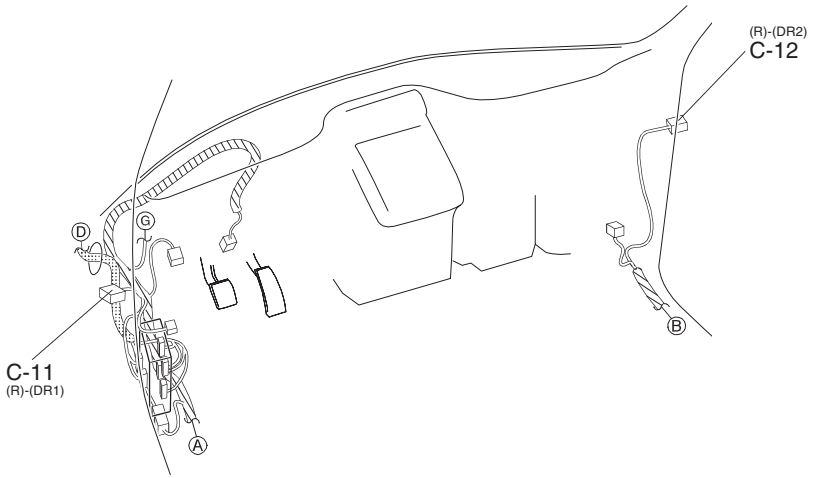

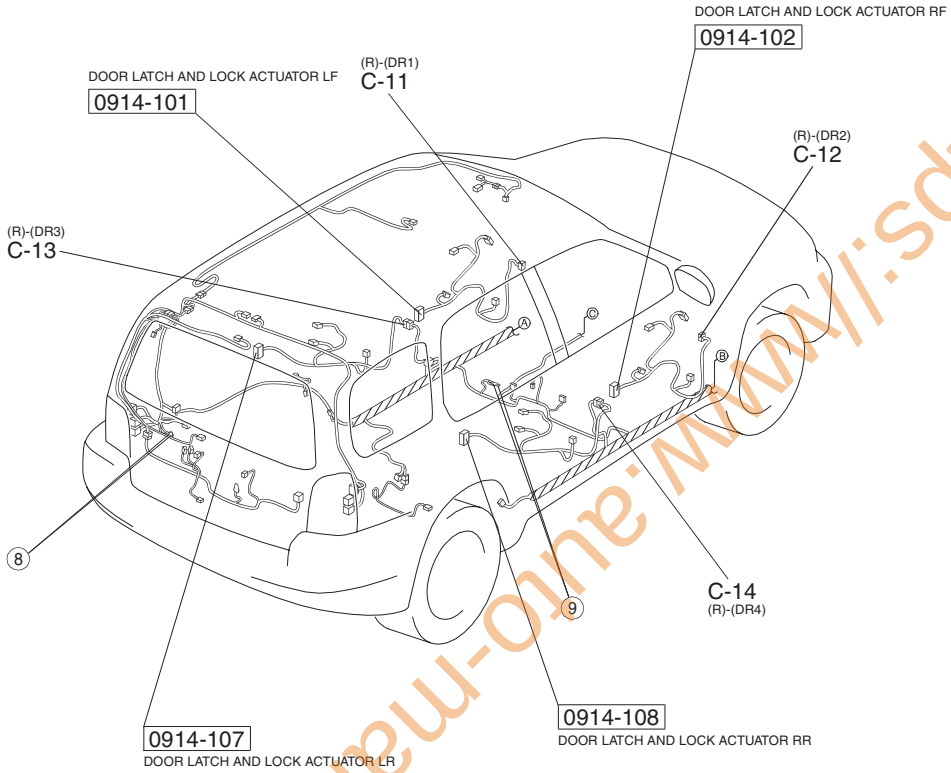

https://www.auto-manual.com/

BACK SONAR SYSTEM (J87R)

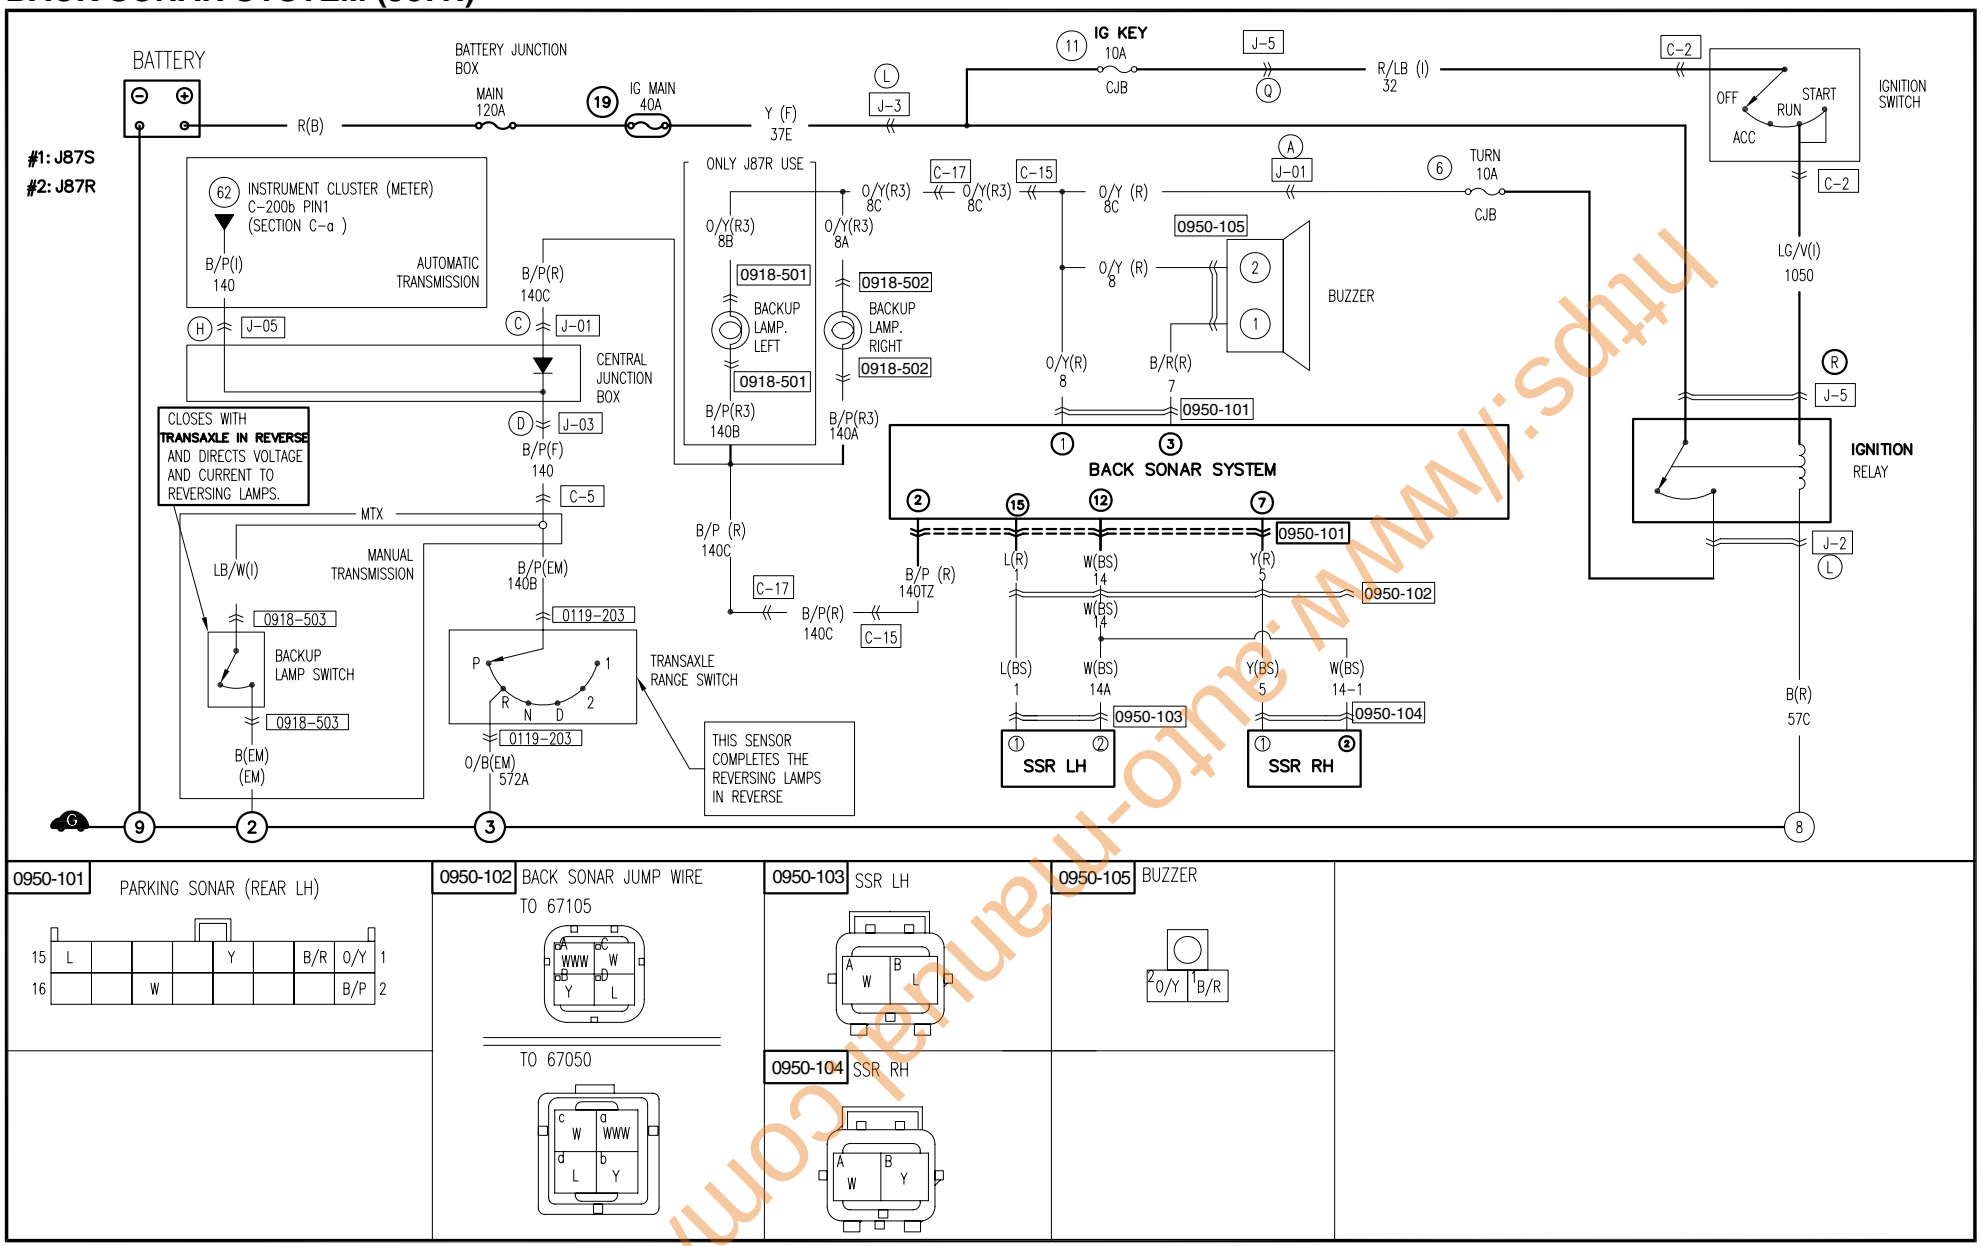


http://www.auto-manual.com/


https://www.auto-manual.com/

THIS PAGE INTENTIONALLY LEFT BLANK

BACK SONAR SYSTEM (J87R)

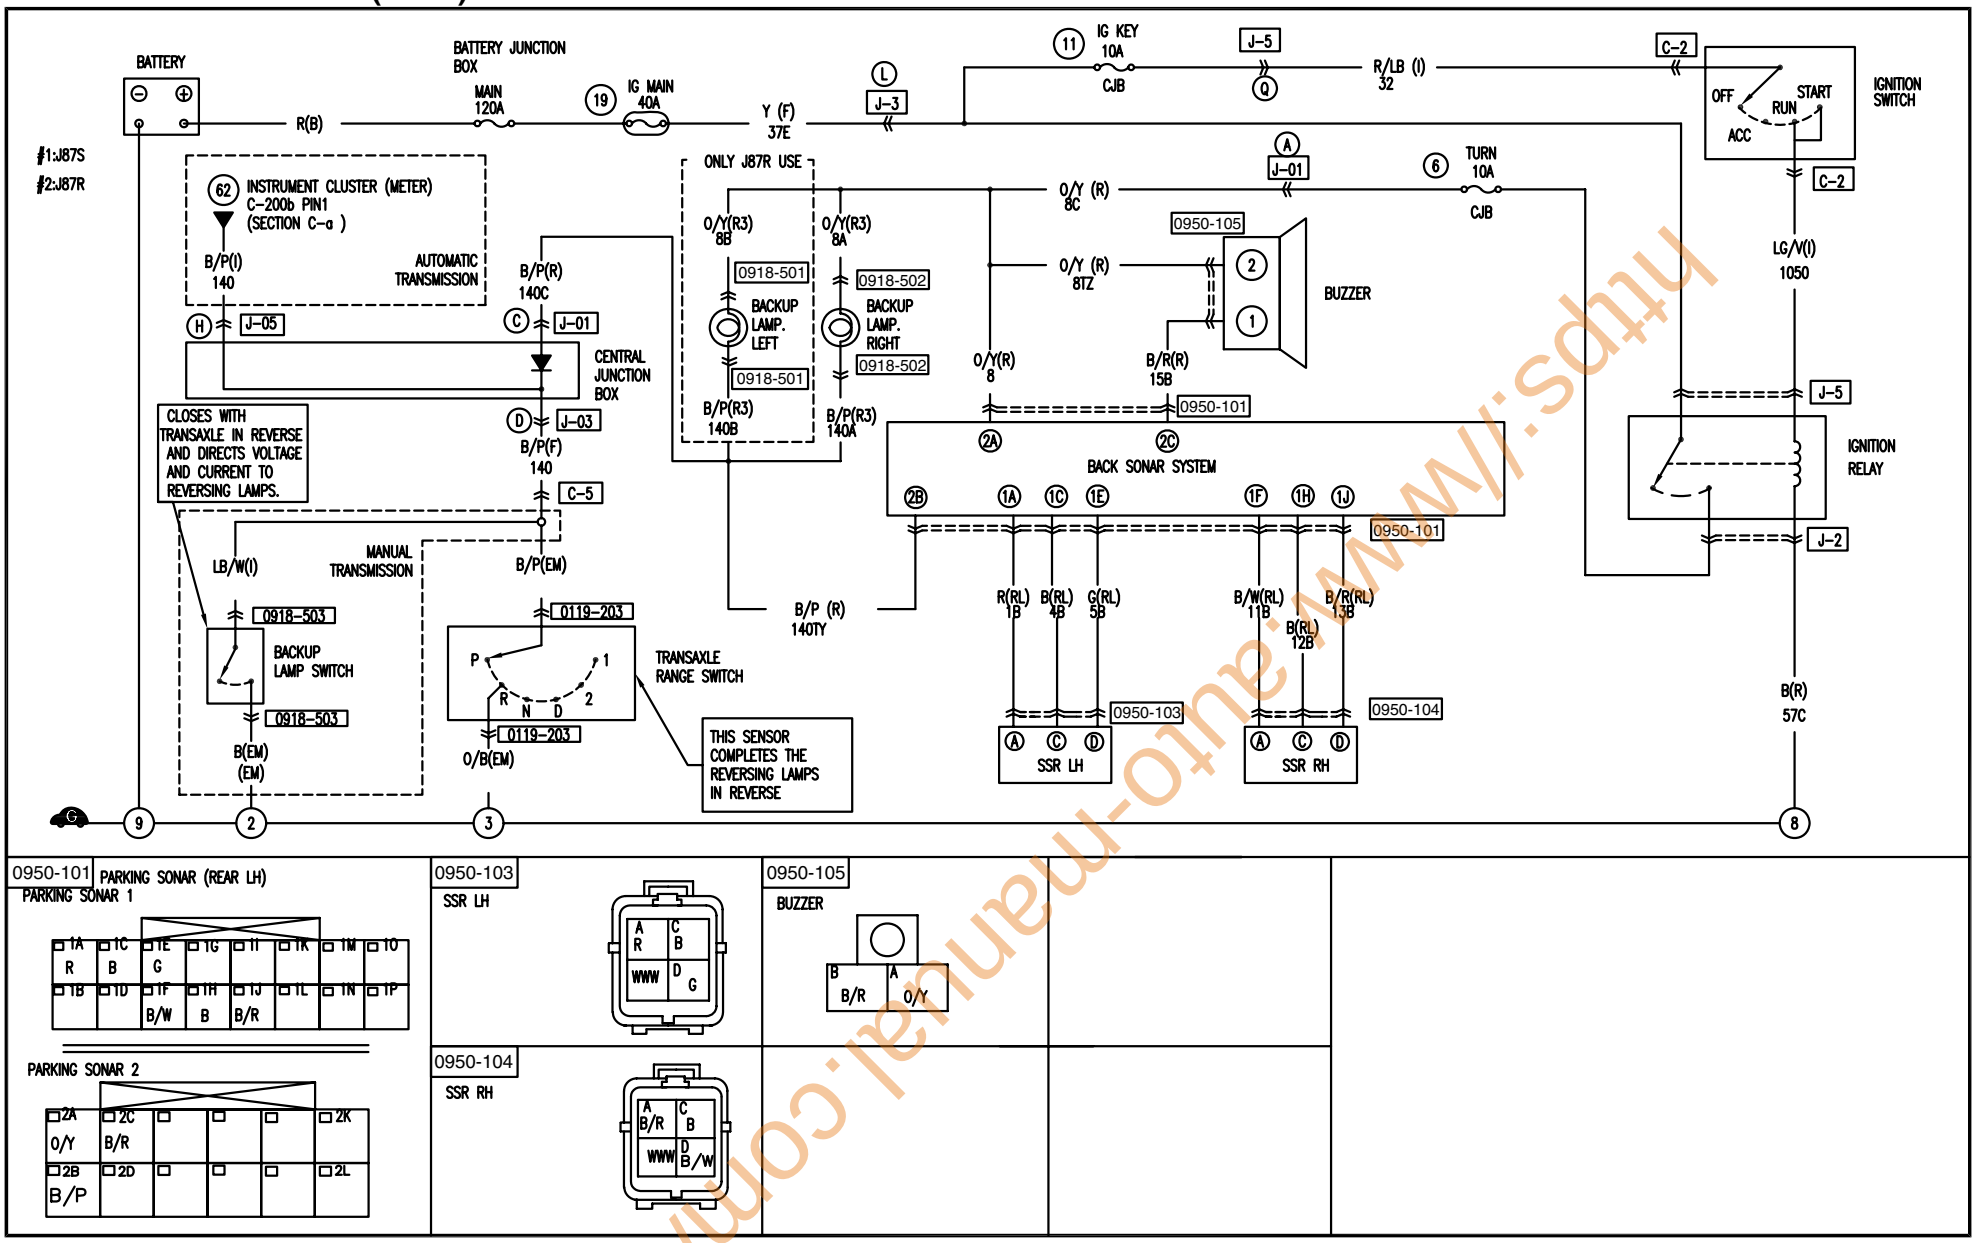

https://www.auto-manual.com/

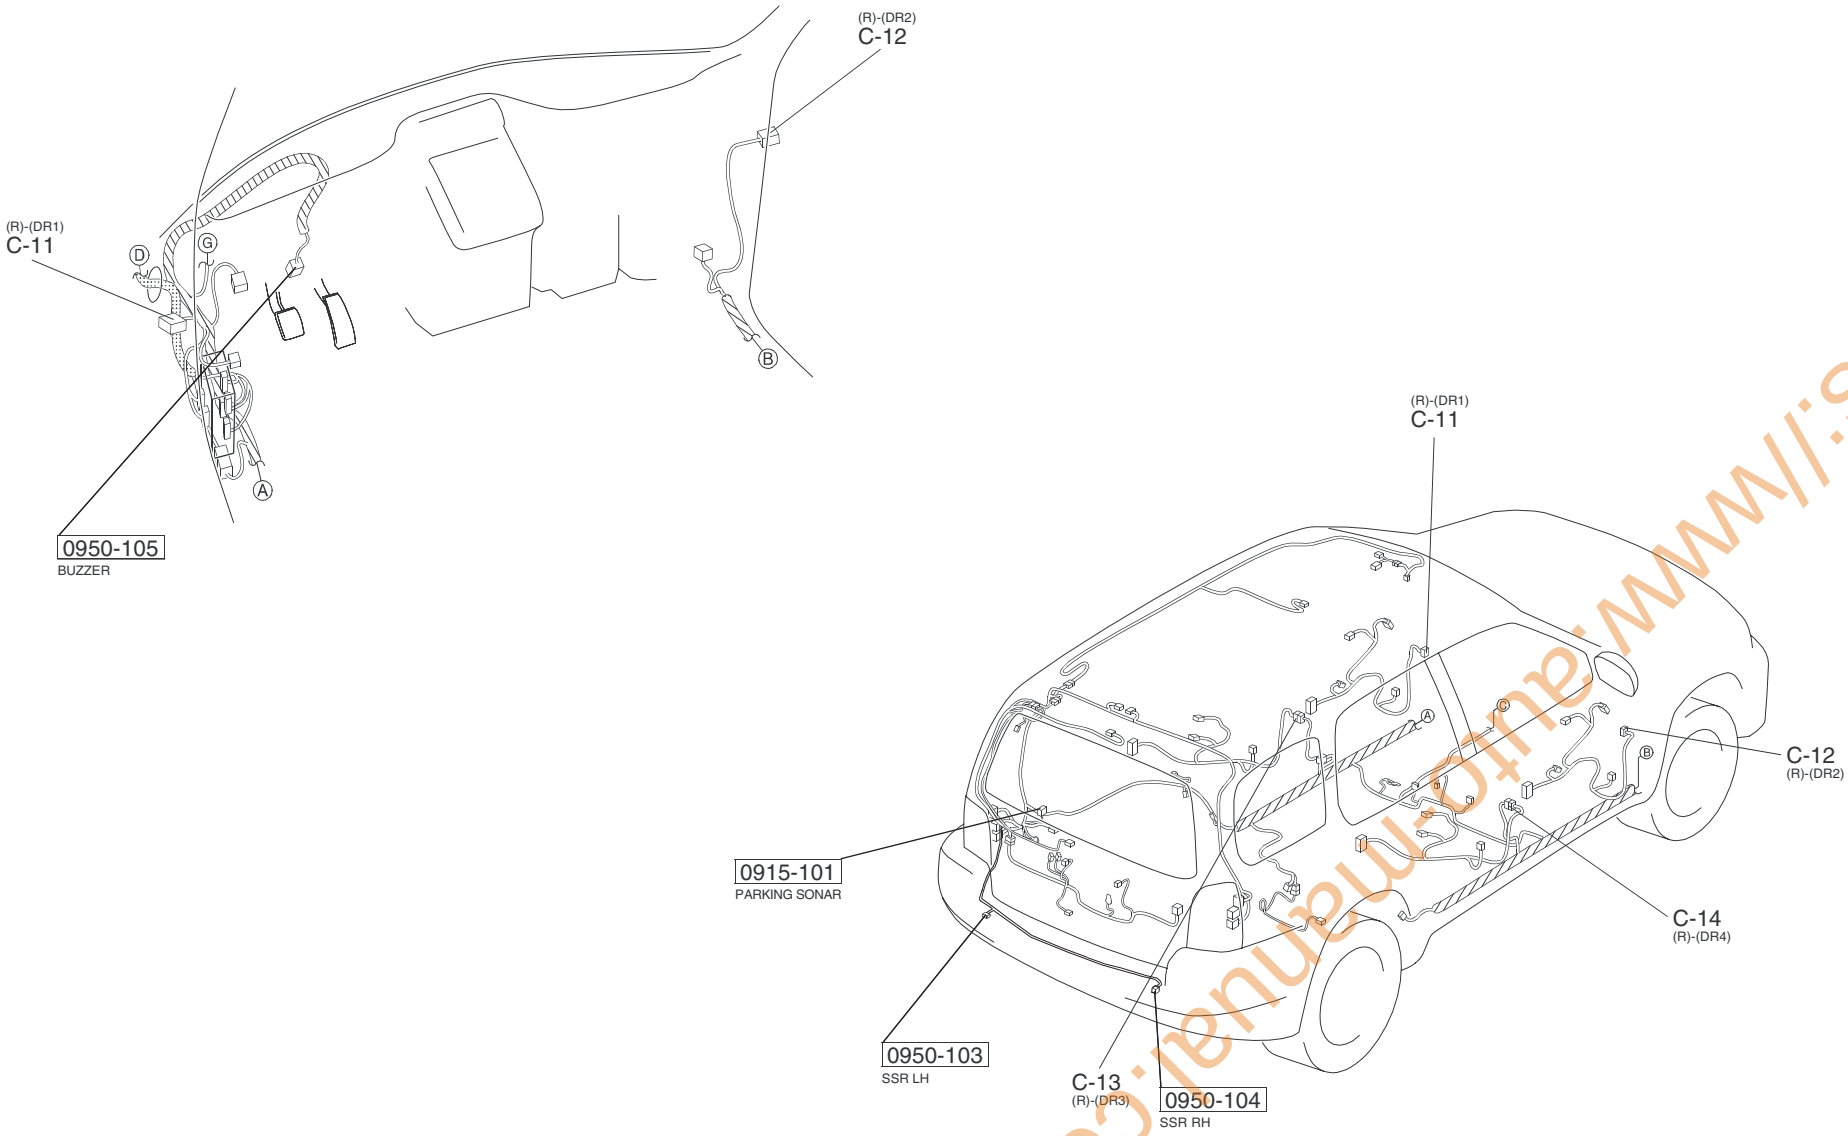

https://www.automanual.com/