Focus Wiring Diagrams

Table of Contents

Group 1 – General Information

General Information
- Table of Contents 100-00-00-1
- Systems Overview 100-00-01-1
- Index 100-00-02-1
- Introduction 100-00-03-1
- Symbols 100-00-04-1
- Wiring Harness Overview 100-00-06-1

Group 2 – Chassis

Brake System
- Anti–Lock Control 206-09A-00-1
- Anti–Lock Control – Stability Assist 206-09C-00-1

Steering System
- Power Steering 211-02-00-1

Group 3 – Powertrain

Engine
- Engine Cooling – 1.6L (Z6) 303-03A-00-1
- Engine Cooling – 1.8/2.0L Duratec–HE (MI4) 303-03B-00-1
- Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel . 303-03C-00-1
- Fuel Charging and Controls – 1.6L (Z6) 303-04A-00-1
- Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4) 303-04B-00-1
- Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel . 303-04C-00-1
- Starting System 303-06-00-1
- Engine Ignition – 1.6L (Z6) 303-07A-00-1
- Engine Ignition – 1.8/2.0L Duratec–HE (MI4) 303-07B-00-1
- Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel . 303-07C-00-1
- Electronic Engine Controls – 1.6L (Z6) 303-14A-00-1
- Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4) 303-14B-00-1
- Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel . 303-14C-00-1
- Automatic Transmission 307-01-00-1
- Speed Control 310-03-00-1

Group 4 – Electrical

Climate Control System
- Air Conditioning – without EATC . . . 412-03-00-1
- Air Conditioning – with EATC 412-03-00-6

Instrumentation and Warning Systems
- Instrument Cluster and Panel Illumination 413-00-00-1
- Instrument Cluster 413-01-00-1
- Horn 413-06-00-1
- Clock 413-07-00-1
- Parking Aid 413-13-00-1
- Generator and Regulator 414-02-00-1

Audio Systems
- Audio Unit 415-01-00-1
- Speakers 415-03-00-1

Lighting
- Exterior Lighting – Headlamps 417-01-00-1
- Exterior Lighting – Stop Lamps 417-01-00-3
- Exterior Lighting – Turn Signal Lamps 417-01-00-6
- Exterior Lighting – Position and Parking Lamps 417-01-00-11
- Exterior Lighting – Licence plate illumination 417-01-00-13
- Exterior Lighting – Fog lamps 417-01-00-14
- Exterior Lighting – Reversing lamps 417-01-00-16
- Interior Lighting 417-02-00-1

Electrical Distribution
- Module Communications Network . . 418-00-00-1

Electronic Feature Group
- Anti–Theft – Active 419-01A-00-1
- Anti–Theft – Passive 419-01B-00-1
- Multifunction Electronic Control Modules 419-10-00-1

Group 5 – Body and Paint

Chassis

Rear View Mirrors 501-09-00-1
Seating 501-10-00-1
Glass, Frames and Mechanisms – with front power windows 501-11-00-1
Glass, Frames and Mechanisms – with front and rear power windows . . 501-11-00-3
Glass, Frames and Mechanisms – Heated rear window 501-11-00-11
Glass, Frames and Mechanisms – Heated power mirrors 501-11-00-13
Instrument Panel and Console 501-12-00-1
Handles, Locks, Latches and Entry Systems – with central locking 501-14-00-1
Handles, Locks, Latches and Entry Systems – with double locking 501-14-00-25
Wipers and Washers 501-16-00-1
Roof Opening Panel 501-17-00-1
Safety Belt System 501-20A-00-1
Supplemental Restraint System 501-20B-00-1

Group 7 – General Wiring Information

Fuse and Relay Information 700-01-00-1
Power Distribution 700-02-00-1
Fuse Details 700-03-00-1
Ground Distribution 700-04-00-1
Component Location Charts 700-05-00-1
Component Location Views 700-06-00-1
Connector Views 700-07-00-1

The illustrations, technical information, data and descriptive text in this issue, to the best of our knowledge, were correct at the time of going to print. The right to make changes at any time, without notice, is reserved as part of Ford's policy of continuous development and improvement.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

Published by Ford Motor Company Ltd/Ford Werke AG.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic, mechanical, photocopying, recording, translating or by other means without prior written permission of Ford Motor Company Ltd/Ford Werke AG.

© Ford Motor Company Ltd/Ford Werke AG 2004

Systems Overview

Engine Cooling – 1.6L (Z6)
303–03A–00–1

Engine Cooling – 1.8/2.0L Duratec–HE (MI4)
303–03B–00–1

Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel
303–03C–00–1

Fuel Charging and Controls – 1.6L (Z6)
303–04A–00–1

Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)
303–04B–00–1

Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel
303–04C–00–1

Starting System
303–06–00–1

Engine Ignition – 1.6L (Z6)
303–07A–00–1

Engine Ignition – 1.8/2.0L Duratec–HE (MI4)
303–07B–00–1

Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel
303–07C–00–1

Electronic Engine Controls – 1.6L (Z6)
303–14A–00–1

Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)
303–14B–00–1

Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel
303–14C–00–1

Automatic Transmission
307–01–00–1

Speed Control
310–03–00–1

Generator and Regulator
414–02–00–1

Air Conditioning – without EATC
412–03–00–1

Air Conditioning – with EATC
412–03–00–7

Instrument Cluster and Panel Illumination
413–00–00–1

Instrument Cluster
413–01–00–1

Horn
413–06–00–1

Clock
413–07–00–1

Audio Unit
415–01–00–1

Speakers
415–03–00–1

Module Communications Network
418–00–00–1

Anti–Theft – Active
419–01A–00–1

Anti–Theft – Passive
419–01B–00–1

Multifunction Electronic Control Modules
419–10–00–1

Instrument Panel and Console
501–12–00–1

Safety Belt System
501–20A–00–1

Supplemental Restraint System
501–20B–00–1

Interior Lighting
417–02–00–1

Roof Opening Panel
501–17–00–1

Glass, Frames and Mechanisms – Heated rear window
501–11–00–11

Exterior Lighting – Stop Lamps
417–01–00–3


Exterior Lighting – Turn Signal Lamps
417–01–00–6

Exterior Lighting – Position and Parking Lamps
417–01–00–11

Exterior Lighting – Licence plate illumination
417–01–00–13

Exterior Lighting – Fog lamps
417–01–00–14

Exterior Lighting – Reversing lamps
417–01–00–16

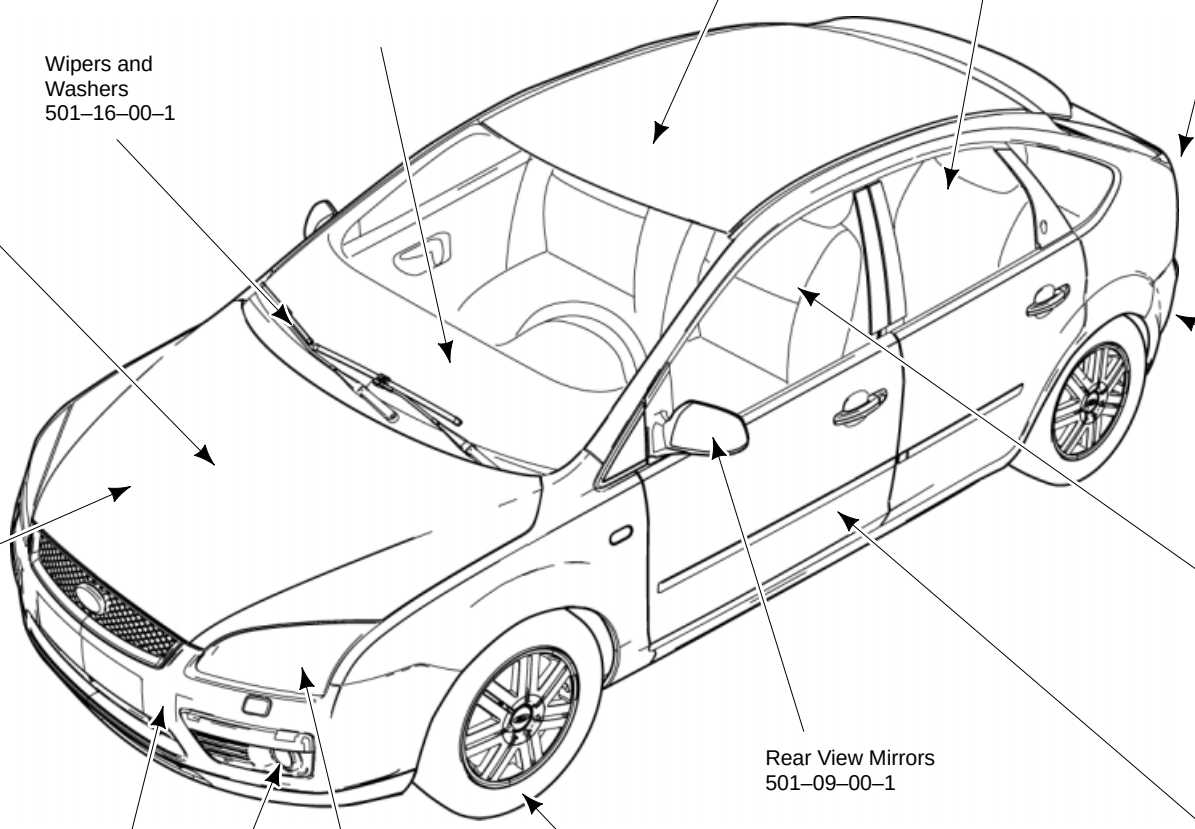

Wipers and Washers
501–16–00–1

Parking Aid
413–13–00–1

Seating
501–10–00–1

Rear View Mirrors
501–09–00–1

Glass, Frames and Mechanisms – Heated power mirrors
501–11–00–3

Glass, Frames and Mechanisms – with front power windows
501–11–00–1

Glass, Frames and Mechanisms – with front and rear power windows
501–11–00–3

Handles, Locks, Latches and Entry Systems – with central locking
501–14–00–1

Handles, Locks, Latches and Entry Systems – with double locking
501–14–00–25

Exterior Lighting – Fog lamps
417–01–00–14

Exterior Lighting – Headlamps
417–01–00–1

Exterior Lighting – Turn Signal Lamps
417–01–00–6

Exterior Lighting – Position and Parking Lamps
417–01–00–11

Anti–Lock Control
206–09A–00–1

Anti–Lock Control – Stability Assist
206–09C–00–1

Power Steering
211–02–00–1

-1

A/C Compressor clutch, Y16 412–03–00–13
A/C Compressor clutch, Y16 412–03–00–14
A/C Compressor clutch, Y16 412–03–00–3
A/C Compressor clutch, Y16 412–03–00–4
A/C Compressor clutch, Y16 412–03–00–5
A/C high–pressure switch, N126 412–03–00–15
A/C high–pressure switch, N126 412–03–00–5
A/C low–pressure switch, N246 412–03–00–13
A/C low–pressure switch, N246 412–03–00–14
A/C low–pressure switch, N246 412–03–00–15
A/C low–pressure switch, N246 412–03–00–3
A/C low–pressure switch, N246 412–03–00–4
A/C low–pressure switch, N246 412–03–00–5
A/C pressure sensor, B308 . . . . . 303–03A–00–1
A/C pressure sensor, B308 . . . . . 303–03B–00–1
A/C pressure sensor, B308 . . . . . 303–14A–00–5
A/C pressure sensor, B308 . . . . . 303–14B–00–2
A/C pressure sensor, B308 412–03–00–13
A/C pressure sensor, B308 412–03–00–14
A/C pressure sensor, B308 412–03–00–3
A/C pressure sensor, B308 412–03–00–4
A/C Wide Open Throttle (WOT) relay, K32 412–03–00–13
A/C Wide Open Throttle (WOT) relay, K32 412–03–00–14
A/C Wide Open Throttle (WOT) relay, K32 412–03–00–15
A/C Wide Open Throttle (WOT) relay, K32 412–03–00–3
A/C Wide Open Throttle (WOT) relay, K32 412–03–00–4
A/C Wide Open Throttle (WOT) relay, K32 412–03–00–5
ABS module, A7 . . . . . 206–09A–00–2
Accelerator pedal position sensor, B129 . . . . . 303–14B–00–6
Accelerator pedal position sensor, B129 . . . . . 303–14C–00–7
Air Conditioning – with EATC 412–03–00–6
Air Conditioning – without EATC 412–03–00–1
Air temperature door motor, LH side, M100 412–03–00–10
Air temperature door motor, RH side, M101 412–03–00–10
Antenna, A151 413–07–00–1
Antenna, A151 415–01–00–1
Anti–Lock Control – Stability Assist 206–09C–00–1
Anti–Lock Control 206–09A–00–1
Anti–Theft – Active 419–01A–00–1
Anti–Theft – Passive 419–01B–00–1
Anti–theft alarm horn, H5 . . . . . 419–01A–00–1
Audio Unit 415–01–00–1
Automatic Transmission 307–01–00–1
Automatic transmission control module, A120 700–04–00–25
Barometric Absolute Pressure (BAP) sensor, B70 . . . . . 303–14A–00–5
Battery, O1 303–06–00–1
Battery, O1 303–06–00–2
Battery, O1 303–06–00–5
Battery, O1 414–02–00–1

Battery, O1 414–02–00–2
Battery, O1 414–02–00–3
Battery, O1 700–02–00–1
Battery Junction Box (BJB), P93 307–01–00–4
Battery Junction Box (BJB), P93 700–02–00–1
Battery Junction Box (BJB), P93 700–03–00–2
Blower motor, M3 412–03–00–1
Blower motor, M3 412–03–00–7
Blower motor relay, K14 412–03–00–7
Blower motor resistor, R21 412–03–00–1
Boost pressure sensor, B108 . . . . . 303–14C–00–5
Brake fluid level switch, N1 413–01–00–2
Brake pedal position switch, N82 . . . . . 206–09A–00–1
Brake pedal position switch, N82 . . . . . 206–09C–00–1
Brake pedal position switch, N82 310–03–00–2
Brake pedal position switch, N82 413–01–00–11
Brake pedal position switch, N82 413–01–00–12
Buzzer, H9 413–13–00–1
Buzzer, H9 413–13–00–2
Buzzer, H9 413–13–00–3
Buzzer, H9 413–13–00–4
Camshaft position sensor, B41 . . . . . 303–07A–00–1
Camshaft position sensor, B41 . . . . . 303–07B–00–1
Camshaft position sensor, B41 . . . . . 303–14A–00–3
Camshaft position sensor, B41 . . . . . 303–14B–00–3
Camshaft position sensor, B41 . . . . . 303–14C–00–6
Catalyst monitor sensor, B192 . . . . . 303–14A–00–4
Catalyst monitor sensor, B192 . . . . . 303–14B–00–1
Central Junction Box (CJB), P91 700–02–00–2
Central Junction Box (CJB), P91 700–03–00–2
Cigar lighter, front, R42 501–12–00–1
Clock 413–07–00–1
Clock spring, P13 310–03–00–1
Clock spring, P13 413–06–00–1
Clutch pedal position switch, N81 . . . . . 303–14A–00–3
Clutch pedal position switch, N81 . . . . . 303–14B–00–6
Clutch pedal position switch, N81 . . . . . 303–14C–00–7
Clutch pedal position switch, N81 310–03–00–2
Clutch pedal position switch, N81 413–01–00–11
Clutch pedal position switch, N81 413–01–00–12
Component Location Charts 700–05–00–1
Component Location Views 700–06–00–1
Connector Views 700–07–00–1
Coolant shutoff valve, Y186 . . . . . 303–14C–00–2
Cooling fan module, A118 . . . . . 303–03A–00–1
Cooling fan module, A118 . . . . . 303–03B–00–1
Cooling fan module, A118 . . . . . 303–03C–00–1
Crankshaft position sensor, B43 . . . . . 303–07A–00–1
Crankshaft position sensor, B43 . . . . . 303–07B–00–1

-3

Crankshaft position sensor, B43 . . . . . 303–14A–00–3
Crankshaft position sensor, B43 . . . . . 303–14B–00–3
Crankshaft position sensor, B43 . . . . . 303–14C–00–5
Crash sensor, B177 . . . . . 501–20B–00–2
Data Link Connector (DLC), D20 418–00–00–1
Defrost mode actuator, M210 412–03–00–12
Discharge temperature sensor, floor, LH side, B304 412–03–00–9
Discharge temperature sensor, floor, RH side, B305 412–03–00–9
Discharge temperature sensor, panel, LH side, B306 412–03–00–9
Discharge temperature sensor, panel, RH side, B307 412–03–00–9
Door control module, driver, A351 501–09–00–4
Door control module, driver, A351 501–11–00–5
Door control module, driver, A351 501–11–00–7
Door control module, driver, A351 501–11–00–9
Door control module, driver, A351 501–14–00–20
Door control module, driver, A351 501–14–00–32
Door control module, driver, A351 501–14–00–44
Door control module, driver, A351 501–14–00–8
Door control module, LH side rear, A353 501–11–00–5
Door control module, LH side rear, A353 501–11–00–9
Door control module, LH side rear, A353 501–14–00–10
Door control module, LH side rear, A353 501–14–00–22
Door control module, LH side rear, A353 501–14–00–34
Door control module, LH side rear, A353 501–14–00–46
Door control module, passenger, A352 . . . . . 419–01A–00–5
Door control module, passenger, A352 501–09–00–3
Door control module, passenger, A352 501–11–00–4
Door control module, passenger, A352 501–11–00–8
Door control module, passenger, A352 501–14–00–21
Door control module, passenger, A352 501–14–00–33
Door control module, passenger, A352 501–14–00–45
Door control module, passenger, A352 501–14–00–9
Door control module, RH side rear, A354 501–11–00–10
Door control module, RH side rear, A354 501–11–00–6
Door control module, RH side rear, A354 501–14–00–11
Door control module, RH side rear, A354 501–14–00–23
Door control module, RH side rear, A354 501–14–00–35
Door control module, RH side rear, A354 501–14–00–47
Door lock unit, driver side front, A172 501–14–00–14
Door lock unit, driver side front, A172 501–14–00–2
Door lock unit, driver side front, A172 501–14–00–20
Door lock unit, driver side front, A172 501–14–00–26
Door lock unit, driver side front, A172 501–14–00–32
Door lock unit, driver side front, A172 501–14–00–38
Door lock unit, driver side front, A172 501–14–00–44
Door lock unit, driver side front, A172 501–14–00–8
Door lock unit, LH rear, A275 501–14–00–10
Door lock unit, LH rear, A275 501–14–00–16
Door lock unit, LH rear, A275 501–14–00–22

Door lock unit, LH rear, A275 501–14–00–28
Door lock unit, LH rear, A275 501–14–00–34
Door lock unit, LH rear, A275 501–14–00–4
Door lock unit, LH rear, A275 501–14–00–40
Door lock unit, LH rear, A275 501–14–00–46
Door lock unit, passenger side front, A173 501–14–00–15
Door lock unit, passenger side front, A173 501–14–00–21
Door lock unit, passenger side front, A173 501–14–00–27
Door lock unit, passenger side front, A173 501–14–00–3
Door lock unit, passenger side front, A173 501–14–00–33
Door lock unit, passenger side front, A173 501–14–00–39
Door lock unit, passenger side front, A173 501–14–00–45
Door lock unit, passenger side front, A173 501–14–00–9
Door lock unit, RH rear, A276 501–14–00–11
Door lock unit, RH rear, A276 501–14–00–16
Door lock unit, RH rear, A276 501–14–00–23
Door lock unit, RH rear, A276 501–14–00–28
Door lock unit, RH rear, A276 501–14–00–35
Door lock unit, RH rear, A276 501–14–00–4
Door lock unit, RH rear, A276 501–14–00–40
Door lock unit, RH rear, A276 501–14–00–47
Door lock unit, tailgate, A333 501–14–00–12
Door lock unit, tailgate, A333 501–14–00–17
Door lock unit, tailgate, A333 501–14–00–24
Door lock unit, tailgate, A333 501–14–00–29
Door lock unit, tailgate, A333 501–14–00–36
Door lock unit, tailgate, A333 501–14–00–41
Door lock unit, tailgate, A333 501–14–00–48
Door lock unit, tailgate, A333 501–14–00–5
Driver air bag unit, A42 . . . . . 501–20B–00–3
Driver seat backrest motor, M230 501–10–00–1
Driver seat height motor, M158 501–10–00–1
Driver seat horizontal motor, M227 501–10–00–1
EGR stepper motor, M251 . . . . . 303–14A–00–2
EGR stepper motor, M251 . . . . . 303–14B–00–4
EGR throttle actuator, M252 . . . . . 303–14C–00–2
Electrical Hydraulic Power Assist Steering (EHPAS) module, A357 211–02–00–1
Electrical Hydraulic Power Assist Steering (EHPAS) module, A357 700–03–00–1
Electronic Automatic Temperature Control (EATC) module, A205 412–03–00–10
Electronic Automatic Temperature Control (EATC) module, A205 412–03–00–12
Electronic Automatic Temperature Control (EATC) module, A205 412–03–00–9
Electronic Engine Controls – 1.6L (Z6) 303–14A–00–1
Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4) 303–14B–00–1
Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel 303–14C–00–1
Electronic Stability Program (ESP) module, A176 . . . . . 206–09C–00–1
Electronic Stability Program (ESP) switch, N346 . . . . . 206–09C–00–1
Electronic Throttle Control (ETC) module, A464 . . . . . 303–14B–00–2
Engine compartment switch, N21 . . . . . 419–01A–00–1
Engine Coolant Temperature (ECT) sensor, B10 . . . . . 303–03A–00–1

-5

Engine Coolant Temperature (ECT) sensor, B10 . . . . . 303–03B–00–1
Engine Coolant Temperature (ECT) sensor, B10 . . . . . 303–03C–00–1
Engine Coolant Temperature (ECT) sensor, B10 . . . . . 303–14A–00–4
Engine Coolant Temperature (ECT) sensor, B10 . . . . . 303–14B–00–2
Engine Coolant Temperature (ECT) sensor, B10 . . . . . 303–14C–00–5
Engine Cooling – 1.6L (Z6) 303–03A–00–1
Engine Cooling – 1.8/2.0L Duratec–HE (MI4) 303–03B–00–1
Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel 303–03C–00–1
Engine Ignition – 1.6L (Z6) 303–07A–00–1
Engine Ignition – 1.8/2.0L Duratec–HE (MI4) 303–07B–00–1
Evaporative emission canister purge valve, Y1 . . . . . 303–14A–00–3
Evaporative emission canister purge valve, Y1 . . . . . 303–14B–00–4
Exhaust Gas Recirculation (EGR) valve, Y2 . . . . . 303–14C–00–6
Exterior Lighting – Fog lamps 417–01–00–14
Exterior Lighting – Headlamps 417–01–00–1
Exterior Lighting – Licence plate illumination 417–01–00–13
Exterior Lighting – Position and Parking Lamps 417–01–00–11
Exterior Lighting – Reversing lamps 417–01–00–16
Exterior Lighting – Stop Lamps 417–01–00–3
Exterior Lighting – Turn Signal Lamps 417–01–00–6
Exterior mirror, driver side, A355 501–09–00–1
Exterior mirror, driver side, A355 501–09–00–2
Exterior mirror, driver side, A355 501–09–00–3
Exterior mirror, driver side, A355 501–09–00–5
Exterior mirror, passenger side, A356 501–09–00–1
Exterior mirror, passenger side, A356 501–09–00–2
Exterior mirror, passenger side, A356 501–09–00–4
Exterior mirror, passenger side, A356 501–09–00–5
F1 700–02–00–1
F1 700–03–00–1
F2 700–02–00–1
F2 700–03–00–1
F3 700–02–00–1
F3 700–02–00–2
F3 700–03–00–2
F4 700–02–00–1
F4 700–03–00–3
F6 700–02–00–1
F6 700–03–00–4
F7 700–02–00–1
F7 700–03–00–4
F8 700–02–00–1
F8 700–03–00–4
F9 700–02–00–1
F9 700–02–00–6
F9 700–03–00–5
F10 700–02–00–1
F10 700–03–00–6
F11 700–02–00–1

-6

F11 700–02–00–3
F11 700–02–00–4
F11 700–03–00–7
F12 700–02–00–1
F12 700–03–00–8
F13 700–02–00–1
F13 700–03–00–9
F19 700–02–00–3
F19 700–02–00–4
F19 700–03–00–10
F20 700–02–00–1
F20 700–03–00–11
F22 700–02–00–3
F22 700–02–00–4
F22 700–03–00–11
F24 700–02–00–1
F24 700–03–00–12
F25 700–02–00–3
F25 700–02–00–4
F25 700–03–00–13
F25 700–03–00–14
F25 700–03–00–15
F27 700–02–00–1
F27 700–03–00–16
F30 700–02–00–1
F30 700–03–00–17
F30 700–03–00–18
F31 700–02–00–1
F31 700–03–00–19
F32 700–02–00–6
F32 700–03–00–20
F33 700–02–00–6
F33 700–03–00–21
F33 700–03–00–22
F34 700–02–00–6
F34 700–03–00–23
F34 700–03–00–24
F34 700–03–00–25
F35 700–02–00–6
F35 700–03–00–26
F35 700–03–00–27
F35 700–03–00–28
F36 700–02–00–6
F36 700–03–00–29
F36 700–03–00–30
F36 700–03–00–31
F37 700–03–00–32
F38 700–03–00–32
F39 700–02–00–1

F39 700–03–00–3
F39 700–03–00–33
F40 700–02–00–1
F40 700–03–00–3
F40 700–03–00–34
F41 700–02–00–2
F41 700–03–00–2
F41 700–03–00–34
F42 700–02–00–3
F42 700–02–00–4
F42 700–03–00–34
F43 700–02–00–2
F43 700–03–00–2
F43 700–03–00–35
F44 700–02–00–2
F44 700–03–00–2
F44 700–03–00–36
F46 700–02–00–2
F46 700–03–00–2
F46 700–03–00–36
F47 700–03–00–37
F48 700–02–00–2
F48 700–03–00–2
F48 700–03–00–37
F49 700–02–00–2
F49 700–03–00–2
F49 700–03–00–38
F50 700–02–00–2
F50 700–03–00–2
F50 700–03–00–38
F51 700–02–00–2
F51 700–03–00–2
F51 700–03–00–38
F52 700–02–00–1
F52 700–02–00–3
F52 700–02–00–4
F52 700–03–00–3
F52 700–03–00–39
F53 700–03–00–40
F54 700–03–00–41
F55 700–02–00–2
F55 700–03–00–2
F55 700–03–00–42
F57 700–02–00–1
F57 700–03–00–3
F57 700–03–00–42
F58 700–02–00–1
F58 700–03–00–3
F58 700–03–00–43

F59 700–02–00–2
F59 700–03–00–2
F59 700–03–00–43
F60 700–03–00–44
F61 700–03–00–44
F62 700–02–00–1
F62 700–03–00–3
F62 700–03–00–44
F63 700–03–00–45
F65 700–02–00–3
F65 700–02–00–4
F65 700–03–00–45
F66 700–02–00–3
F66 700–02–00–4
F66 700–03–00–46
F67 700–02–00–3
F67 700–02–00–4
F67 700–03–00–46
F68 700–02–00–3
F68 700–02–00–4
F68 700–03–00–47
F69 700–03–00–48
F70 700–02–00–3
F70 700–02–00–4
F70 700–03–00–49
F71 700–02–00–3
F71 700–02–00–4
F71 700–03–00–50
F72 700–02–00–2
F72 700–03–00–2
F72 700–03–00–50
F73 700–03–00–50
F74 700–02–00–3
F74 700–02–00–4
F74 700–03–00–51
F75 700–02–00–3
F75 700–02–00–4
F75 700–03–00–52
F75 700–03–00–53
F75 700–03–00–54
F76 700–02–00–3
F76 700–02–00–4
F76 700–03–00–55
F77 700–02–00–2
F77 700–03–00–2
F77 700–03–00–55
F78 700–02–00–1
F78 700–03–00–3
F78 700–03–00–56

-9

F79 700–02–00–1
F79 700–03–00–3
F79 700–03–00–57
F80 700–02–00–1
F80 700–03–00–3
F80 700–03–00–57
F81 700–02–00–1
F81 700–03–00–3
F81 700–03–00–58
F82 700–02–00–1
F82 700–03–00–3
F82 700–03–00–58
F83 700–02–00–1
F83 700–03–00–3
F83 700–03–00–59
F84 700–03–00–60
F84 700–03–00–61
F1000 700–02–00–1
F1000 700–03–00–62
F1000 700–03–00–63
Fog lamp, LH front, E43 417–01–00–14
Fog lamp, LH front, E43 417–01–00–15
Fog lamp, RH front, E42 417–01–00–14
Fog lamp, RH front, E42 417–01–00–15
Footwell lamp, LH front, E61 417–02–00–2
Footwell lamp, LH front, E61 417–02–00–3
Footwell lamp, RH front, E62 417–02–00–2
Footwell lamp, RH front, E62 417–02–00–3
Fuel Charging and Controls – 1.6L (Z6) 303–04A–00–1
Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4) 303–04B–00–1
Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel 303–04C–00–1
Fuel filler flap lock motor, M90 501–14–00–14
Fuel filler flap lock motor, M90 501–14–00–2
Fuel filler flap lock motor, M90 501–14–00–26
Fuel filler flap lock motor, M90 501–14–00–38
Fuel heater, R32 . . . . . 303–04C–00–2
Fuel heater relay, K69 . . . . . 303–04C–00–2
Fuel injector 1, Y108 . . . . . 303–04A–00–1
Fuel injector 1, Y108 . . . . . 303–04B–00–1
Fuel injector 1, Y108 . . . . . 303–04C–00–1
Fuel injector 2, Y109 . . . . . 303–04A–00–1
Fuel injector 2, Y109 . . . . . 303–04B–00–1
Fuel injector 2, Y109 . . . . . 303–04C–00–1
Fuel injector 3, Y110 . . . . . 303–04A–00–1
Fuel injector 3, Y110 . . . . . 303–04B–00–1
Fuel injector 3, Y110 . . . . . 303–04C–00–1
Fuel injector 4, Y111 . . . . . 303–04A–00–1
Fuel injector 4, Y111 . . . . . 303–04B–00–1
Fuel injector 4, Y111 . . . . . 303–04C–00–1

Fuel metering valve, Y165 . . . . . 303–04C–00–1
Fuel metering valve, Y165 . . . . . 303–14C–00–4
Fuel pressure solenoid valve, Y47 . . . . . 303–04C–00–1
Fuel pressure solenoid valve, Y47 . . . . . 303–14C–00–4
Fuel pump relay, K4 . . . . . 303–14A–00–6
Fuel pump relay, K4 . . . . . 303–14B–00–5
Fuel rail pressure transducer sensor, B225 . . . . . 303–04C–00–1
Fuel rail pressure transducer sensor, B225 . . . . . 303–14C–00–5
Fuel tank unit, A31 413–01–00–3
Fuel temperature sensor, B109 . . . . . 303–04C–00–1
Fuel temperature sensor, B109 . . . . . 303–14C–00–5
Fuse and Relay Information 700–01–00–1
Fuse Details 700–03–00–1
G1 700–04–00–1
G7 700–04–00–2
G8 700–04–00–1
G12 700–04–00–3
G12 700–04–00–4
G19 700–04–00–5
G20 700–04–00–6
G20 700–04–00–7
G31 700–04–00–8
G37 700–04–00–9
G39 700–04–00–7
G45 700–04–00–10
G45 700–04–00–11
G53 700–04–00–12
G53 700–04–00–13
G53 700–04–00–14
G53 700–04–00–15
G55 700–04–00–16
G56 700–04–00–17
G57 700–04–00–18
G58 700–04–00–19
G58 700–04–00–38
G60 700–04–00–20
G63 700–04–00–21
G64 700–04–00–22
G64 700–04–00–23
G68 700–04–00–25
G70 700–04–00–26
G70 700–04–00–27
G72 700–04–00–28
G74 700–04–00–29
G74 700–04–00–30
G74 700–04–00–36
G74 700–04–00–37
G75 700–04–00–31
G75 700–04–00–32

G77 700–04–00–33
G77 700–04–00–34
G77 700–04–00–35
G78 700–04–00–19
G78 700–04–00–29
G78 700–04–00–30
G78 700–04–00–36
G78 700–04–00–37
G78 700–04–00–38
Gearshift lever unit, N93 307–01–00–1
Generator, O5 414–02–00–1
Generator, O5 414–02–00–2
Generator, O5 414–02–00–3
Generator and Regulator 414–02–00–1
Glass, Frames and Mechanisms – Heated power mirrors 501–11–00–13
Glass, Frames and Mechanisms – Heated rear window 501–11–00–11
Glass, Frames and Mechanisms – with front and rear power windows 501–11–00–3
Glass, Frames and Mechanisms – with front power windows 501–11–00–1
Glove compartment lamp, E28 417–02–00–2
Glove compartment lamp, E28 417–02–00–3
Glow plug 1, P16 . . . . . 303–07C–00–1
Glow plug 2, P17 . . . . . 303–07C–00–1
Glow plug 3, P18 . . . . . 303–07C–00–1
Glow plug 4, P19 . . . . . 303–07C–00–1
Glow plug control module (GPCM), A407 . . . . . 303–07C–00–1
Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel 303–07C–00–1
Ground Distribution 700–04–00–1
Handles, Locks, Latches and Entry Systems – with central locking 501–14–00–1
Handles, Locks, Latches and Entry Systems – with double locking 501–14–00–25
Hazard flasher switch, N49 417–01–00–6
Headlamp, LH side, E1 417–01–00–1
Headlamp, LH side, E1 417–01–00–11
Headlamp, LH side, E1 417–01–00–12
Headlamp, LH side, E1 417–01–00–2
Headlamp, LH side, E1 417–01–00–8
Headlamp, RH side, E7 417–01–00–1
Headlamp, RH side, E7 417–01–00–11
Headlamp, RH side, E7 417–01–00–12
Headlamp, RH side, E7 417–01–00–2
Headlamp, RH side, E7 417–01–00–8
Headlamp switch, N120 413–00–00–1
Headlamp switch, N120 417–01–00–1
Headlamp switch, N120 417–01–00–11
Headlamp switch, N120 417–01–00–12
Headlamp switch, N120 417–01–00–13
Headlamp switch, N120 417–01–00–14
Headlamp switch, N120 417–01–00–15
Headlamp switch, N120 417–01–00–2
Heated rear window relay, K1 501–11–00–11

Heated rear window relay, K1 501–11–00–12
Heated rear window relay, K1 700–02–00–3
Heated rear window relay, K1 700–02–00–4
Heated rear window switch, N10 501–11–00–11
Heated rear window switch, N10 501–11–00–12
Heater control module, A128 412–03–00–1
Heater control module, A128 412–03–00–2
Heat exchanger shutoff valve, Y183 412–03–00–2
Heat exchanger shutoff valve, Y183 412–03–00–8
Heat exchanger shutoff valve relay, K403 412–03–00–2
Heat exchanger shutoff valve relay, K403 412–03–00–8
High mounted stop lamp, E174 417–01–00–3
High mounted stop lamp, E174 417–01–00–4
Horn, H1 413–06–00–1
Horn 413–06–00–1
Horn relay, K33 413–06–00–1
Horn switch, N54 413–06–00–1
Idle speed control valve, Y13 . . . . . 303–04A–00–1
Ignition coil, cylinder 1, T6 . . . . . 303–07A–00–1
Ignition coil, cylinder 1, T6 . . . . . 303–07B–00–1
Ignition coil, cylinder 2, T7 . . . . . 303–07A–00–1
Ignition coil, cylinder 2, T7 . . . . . 303–07B–00–1
Ignition coil, cylinder 3, T8 . . . . . 303–07A–00–1
Ignition coil, cylinder 3, T8 . . . . . 303–07B–00–1
Ignition coil, cylinder 4, T9 . . . . . 303–07A–00–1
Ignition coil, cylinder 4, T9 . . . . . 303–07B–00–1
Ignition relay, K41 700–02–00–8
Ignition switch, N278 303–06–00–2
Ignition switch, N278 303–06–00–5
Ignition switch, N278 700–02–00–3
Ignition switch, N278 700–02–00–4
Ignition transformer capacitor, U1 . . . . . 303–07A–00–1
In–vehicle temperature sensor, B206 412–03–00–9
Index 100–00–02–1
Inertia Fuel Shutoff (IFS) switch, N316 . . . . . 303–14A–00–6
Inertia Fuel Shutoff (IFS) switch, N316 . . . . . 303–14B–00–5
Inlet air control valve solenoid, Y218 . . . . . 303–04A–00–1
Inlet air control valve solenoid, Y218 . . . . . 303–14B–00–4
Instrument cluster, A30 413–01–00–1
Instrument Cluster 413–01–00–1
Instrument Cluster and Panel Illumination 413–00–00–1
Instrument Panel and Console 501–12–00–1
Intake Air Temperature (IAT) sensor, B213 . . . . . 303–14C–00–5
Interior lamp, front, E18 417–02–00–1
Interior lamp, rear, E19 417–02–00–1
Interior Lighting 417–02–00–1
Introduction 100–00–03–1
Knock sensor, B45 . . . . . 303–07A–00–1
Knock sensor, B45 . . . . . 303–14A–00–3

Knock sensor 1, B105 . . . . . 303–07B–00–1
Knock sensor 1, B105 . . . . . 303–14B–00–3
Knock sensor 2, B106 . . . . . 303–07B–00–1
Knock sensor 2, B106 . . . . . 303–14B–00–3
Licence plate lamp, LH side, E34 417–01–00–13
Licence plate lamp, RH side, E35 417–01–00–13
Luggage compartment lamp, E57 417–02–00–2
Mass Air Flow (MAF) sensor, B22 . . . . . 303–14C–00–3
Mass Air Flow/Intake Air Temperature (MAF/IAT) sensor, B433 . . . . . 303–14A–00–2
Micropol antenna, A378 415–01–00–2
Module Communications Network 418–00–00–1
Multifunction Electronic Control Modules 419–10–00–1
Neutral position switch, N152 . . . . . 303–14A–00–2
Oil pressure switch, N17 . . . . . 303–14A–00–2
Oil pressure switch, N17 413–01–00–1
Output Shaft Speed (OSS) sensor, B110 307–01–00–3
Output Shaft Speed (OSS) sensor, B110 307–01–00–6
Outside air temperature sensor, B73 419–10–00–3
Panel/floor mode actuator, M250 412–03–00–12
Parking Aid 413–13–00–1
Parking aid module, A265 413–13–00–1
Parking aid sensor, centre rear, B336 413–13–00–4
Parking aid sensor, LH front, B309 413–13–00–2
Parking aid sensor, rear, inner left, B169 413–13–00–3
Parking aid sensor, rear, inner right, B170 413–13–00–3
Parking aid sensor, rear, outer left, B168 413–13–00–3
Parking aid sensor, rear, outer left, B168 413–13–00–4
Parking aid sensor, rear, outer right, B171 413–13–00–3
Parking aid sensor, rear, outer right, B171 413–13–00–4
Parking aid sensor, RH front, B301 413–13–00–2
Parking aid switch, front, N359 413–13–00–1
Parking brake switch, N63 413–01–00–2
Passenger Air bag Deactivation (PAD) switch, N475 . . . . . 501–20B–00–1
Passenger air bag deactivation indicator, E224 . . . . . 501–20B–00–1
Passenger air bag unit, A43 . . . . . 501–20B–00–4
Passive anti–theft system transceiver module, A102 . . . . . 419–01B–00–1
Power Distribution 700–02–00–1
Power hold relay, K13 . . . . . 303–14A–00–1
Power hold relay, K13 . . . . . 303–14B–00–4
Power hold relay, K13 . . . . . 303–14C–00–1
Power hold relay, K13 . . . . . 303–14C–00–2
Power hold relay, K13 . . . . . 303–14C–00–3
Power hold relay, K13 700–02–00–5
Power hold relay, K13 700–02–00–6
Power hold relay, K13 700–02–00–7
Power mirror fold switch, N279 501–09–00–5
Power Steering 211–02–00–1
Power steering pressure switch, N96 . . . . . 303–14A–00–2
Powertrain control module (PCM), A147 . . . . . 303–04A–00–1

Powertrain control module (PCM), A147 . . . . . 303–04B–00–1
Powertrain control module (PCM), A147 . . . . . 303–04C–00–1
Powertrain control module (PCM), A147 . . . . . 303–07A–00–1
Powertrain control module (PCM), A147 . . . . . 303–07B–00–1
Powertrain control module (PCM), A147 . . . . . 303–07C–00–1
Powertrain control module (PCM), A147 . . . . . 303–14A–00–1
Powertrain control module (PCM), A147 . . . . . 303–14C–00–1
Powertrain control module (PCM), A147 . . . . . 303–14C–00–5
Pre–catalyst heated oxygen sensor (HO2S), B89 . . . . . 303–14A–00–4
Pre–catalyst heated oxygen sensor (HO2S), B89 . . . . . 303–14B–00–1
Radio, A11 415–01–00–1
Radio, A11 415–01–00–2
Radio, A11 415–01–00–4
Radio remote control switch, N214 415–01–00–3
Rear fog lamp, LH side, E89 417–01–00–15
Rear fog lamp, RH side, E86 417–01–00–15
Rear lamp assembly, LH side, E9 417–01–00–11
Rear lamp assembly, LH side, E9 417–01–00–12
Rear lamp assembly, LH side, E9 417–01–00–14
Rear lamp assembly, LH side, E9 417–01–00–16
Rear lamp assembly, LH side, E9 417–01–00–18
Rear lamp assembly, LH side, E9 417–01–00–20
Rear lamp assembly, LH side, E9 417–01–00–4
Rear lamp assembly, LH side, E9 417–01–00–9
Rear lamp assembly, RH side, E10 417–01–00–11
Rear lamp assembly, RH side, E10 417–01–00–12
Rear lamp assembly, RH side, E10 417–01–00–14
Rear lamp assembly, RH side, E10 417–01–00–16
Rear lamp assembly, RH side, E10 417–01–00–18
Rear lamp assembly, RH side, E10 417–01–00–20
Rear lamp assembly, RH side, E10 417–01–00–4
Rear lamp assembly, RH side, E10 417–01–00–9
Rear View Mirrors 501–09–00–1
Rear window heater, R19 501–11–00–11
Rear window heater, R19 501–11–00–12
Rear window wiper motor, M9 501–16–00–4
Rear window wiper motor, M9 501–16–00–5
Rear window wiper relay, K64 501–16–00–5
Recirculated air actuator, M69 412–03–00–11
Recirculated air actuator, M69 412–03–00–2
Remote keyless entry (RKE) module, A190 501–14–00–1
Remote keyless entry (RKE) module, A190 501–14–00–13
Remote keyless entry (RKE) module, A190 501–14–00–18
Remote keyless entry (RKE) module, A190 501–14–00–25
Remote keyless entry (RKE) module, A190 501–14–00–30
Remote keyless entry (RKE) module, A190 501–14–00–37
Remote keyless entry (RKE) module, A190 501–14–00–42
Remote keyless entry (RKE) module, A190 501–14–00–6
Restraints Control Module (RCM), A208 . . . . . 501–20A–00–1

-15

Reversing lamp, left, E105 417–01–00–17
Reversing lamp, left, E105 417–01–00–19
Reversing lamp, left, E105 417–01–00–21
Reversing lamp, right, E109 417–01–00–17
Reversing lamp, right, E109 417–01–00–19
Reversing lamp, right, E109 417–01–00–21
Reversing lamps relay, K273 307–01–00–5
Reversing lamps relay, K273 417–01–00–16
Reversing lamps relay, K273 417–01–00–17
Reversing lamp switch, N394 417–01–00–20
Reversing lamp switch, N394 417–01–00–21
Roof Opening Panel 501–17–00–1
Roof opening panel control switch, N230 501–17–00–1
Roof opening panel module, A26 501–17–00–1
S5 413–00–00–1
S6 700–04–00–6
S7 700–04–00–7
S8 417–02–00–2
S9 . . . . . 303–07A–00–1
S9 700–04–00–20
S10 417–01–00–6
S11 . . . . . 303–14A–00–4
S12 700–04–00–2
S15 700–04–00–3
S15 700–04–00–13
S15 700–04–00–15
S24 412–03–00–1
S48 307–01–00–1
S48 700–03–00–49
S49 413–13–00–2
S49 413–13–00–3
S49 413–13–00–4
S49 700–03–00–49
S51 . . . . . 303–14A–00–2
S52 . . . . . 303–07A–00–1
S52 700–03–00–21
S53 700–04–00–18
S53 700–04–00–24
S53 700–04–00–25
S54 700–03–00–27
S54 700–03–00–28
S58 307–01–00–2
S63 . . . . . 303–03A–00–1
S63 . . . . . 303–03B–00–1
S65 700–03–00–31
S66 700–04–00–22
S66 700–04–00–23
S67 . . . . . 303–14B–00–2
S71 417–01–00–14

S71 417–01–00–15
S72 . . . . . 303–07A–00–1
S72 417–01–00–14
S72 417–01–00–15
S74 700–04–00–25
S75 700–04–00–20
S77 . . . . . 303–14A–00–5
S80 . . . . . 303–07A–00–1
S80 . . . . . 303–14A–00–3
S81 418–00–00–8
S81 418–00–00–10
S82 418–00–00–8
S82 418–00–00–10
S85 418–00–00–11
S86 418–00–00–11
S95 700–03–00–24
S105 413–06–00–1
S108 417–01–00–14
S108 417–01–00–15
S109 700–04–00–17
S111 700–04–00–17
S112 417–01–00–3
S112 417–01–00–4
S113 418–00–00–8
S113 418–00–00–9
S114 418–00–00–8
S114 418–00–00–9
S115 418–00–00–2
S115 418–00–00–8
S116 418–00–00–2
S116 418–00–00–8
S118 700–04–00–8
S119 700–03–00–6
S120 700–03–00–26
S120 700–03–00–27
S120 700–03–00–28
S121 700–04–00–9
S125 417–01–00–7
S126 417–01–00–7
S127 418–00–00–2
S128 418–00–00–2
S145 413–13–00–3
S145 413–13–00–4
S158 501–14–00–3
S158 501–14–00–15
S160 501–14–00–2
S160 501–14–00–14
S162 700–02–00–3
S162 700–02–00–4

S163 501–14–00–26
S163 501–14–00–38
S164 700–03–00–14
S164 700–03–00–15
S171 413–01–00–8
S171 700–04–00–4
S173 501–11–00–12
S174 501–11–00–12
S175 413–13–00–2
S179 412–03–00–9
S180 412–03–00–9
S187 700–04–00–27
S194 700–04–00–4
S194 700–04–00–12
S196 700–04–00–33
S196 700–04–00–35
S197 700–04–00–3
S197 700–04–00–13
S199 700–04–00–27
S200 700–04–00–34
S202 700–03–00–52
S203 700–04–00–5
S204 700–04–00–25
S206 700–04–00–28
S213 417–02–00–1
S213 417–02–00–4
S214 418–00–00–4
S215 418–00–00–4
S219 418–00–00–5
S219 418–00–00–6
S219 418–00–00–7
S220 418–00–00–5
S220 418–00–00–6
S220 418–00–00–7
S222 418–00–00–5
S222 418–00–00–6
S223 418–00–00–5
S223 418–00–00–6
S224 307–01–00–5
S225 307–01–00–5
S230 . . . . . 206–09A–00–2
S230 . . . . . 206–09C–00–2
S231 . . . . . 206–09A–00–2
S231 . . . . . 206–09C–00–2
S232 . . . . . 206–09A–00–2
S232 . . . . . 206–09C–00–2
S233 . . . . . 206–09A–00–2
S233 . . . . . 206–09C–00–2
S234 . . . . . 206–09A–00–2


S234 . . . . . 206–09C–00–2
S235 . . . . . 206–09A–00–2
S235 . . . . . 206–09C–00–2
S236 . . . . . 206–09A–00–2
S236 . . . . . 206–09C–00–2
S237 . . . . . 206–09A–00–2
S237 . . . . . 206–09C–00–2
S690 307–01–00–3
S690 700–04–00–23
S1000 303–06–00–1
S1000 303–06–00–2
S1000 414–02–00–1
S1000 700–03–00–62
Safety belt buckle switch, N124 413–01–00–5
Safety belt buckle switch, N124 . . . . . 501–20A–00–1
Safety Belt System 501–20A–00–1
Safety belt tensioner, driver seat, A117 . . . . . 501–20A–00–1
Safety belt tensioner, passenger seat, A116 . . . . . 501–20A–00–1
Seat control switch, driver, N242 501–10–00–1
Seating 501–10–00–1
Second horn, H4 413–06–00–1
Side air bag module, driver, A242 . . . . . 501–20B–00–5
Side air bag module, passenger, A245 . . . . . 501–20B–00–5
Side air bag sensor, driver, B238 . . . . . 501–20B–00–2
Side air bag sensor, passenger, B239 . . . . . 501–20B–00–2
Side turn signal lamp, LH side, E45 417–01–00–7
Side turn signal lamp, LH side, E45 417–01–00–8
Side turn signal lamp, RH side, E44 417–01–00–7
Side turn signal lamp, RH side, E44 417–01–00–8
Spark plugs, P136 . . . . . 303–07B–00–1
Speaker 1, LH front, Y101 415–03–00–1
Speaker 1, LH front, Y101 415–03–00–2
Speaker 1, LH rear door, Y70 415–03–00–1
Speaker 1, LH rear door, Y70 415–03–00–2
Speaker 1, RH front, Y103 415–03–00–1
Speaker 1, RH front, Y103 415–03–00–2
Speaker 1, RH rear door, Y72 415–03–00–1
Speaker 1, RH rear door, Y72 415–03–00–2
Speaker 2, LH front, Y102 415–03–00–1
Speaker 2, LH front, Y102 415–03–00–2
Speaker 2, RH front, Y104 415–03–00–1
Speaker 2, RH front, Y104 415–03–00–2
Speakers 415–03–00–1
Speed Control 310–03–00–1
Speed control switch, N201 310–03–00–1
Starter motor, M8 303–06–00–1
Starter motor, M8 303–06–00–2
Starter motor, M8 303–06–00–3
Starter motor, M8 303–06–00–4

Starter motor, M8 303–06–00–5
Starter relay, K22 303–06–00–1
Starter relay, K22 303–06–00–3
Starter relay, K22 303–06–00–4
Starter relay, K22 303–06–00–5
Starting System 303–06–00–1
Start inhibit/reversing lamp switch, N397 307–01–00–2
Steering column multifunction switch, N282 417–01–00–2
Steering column multifunction switch, N282 417–01–00–6
Steering column position sensor, B218 211–02–00–1
Steering position sensor, B36 . . . . . 206–09C–00–3
Stop lamp switch, N318 307–01–00–1
Stop lamp switch, N318 307–01–00–4
Stop lamp switch, N318 417–01–00–4
Stop lamp switch, N318 417–01–00–5
Sunload sensor, B72 412–03–00–9
Supplemental Restraint System 501–20B–00–1
Swirl control solenoid valve, Y57 . . . . . 303–04A–00–1
Swirl control solenoid valve, Y57 . . . . . 303–04B–00–1
Symbols 100–00–04–1
Systems Overview 100–00–01–1
Tailgate/decklid release switch, N155 501–14–00–12
Tailgate/decklid release switch, N155 501–14–00–17
Tailgate/decklid release switch, N155 501–14–00–24
Tailgate/decklid release switch, N155 501–14–00–29
Tailgate/decklid release switch, N155 501–14–00–36
Tailgate/decklid release switch, N155 501–14–00–41
Tailgate/decklid release switch, N155 501–14–00–48
Tailgate/decklid release switch, N155 501–14–00–5
Temperature manifold absolute pressure sensor, B142 . . . . . 303–14B–00–2
Throttle Position Sensor (TPS), B8 . . . . . 303–14A–00–5
Transmission control module (TCM), A318 307–01–00–5
Transmission control module (TCM), A318 307–01–00–6
Transmission hardware unit, A40 307–01–00–2
Transmission hardware unit, A40 307–01–00–6
Transmission range sensor, B120 307–01–00–5
Transmission speed sensor, B80 . . . . . 303–14A–00–4
Turbine Shaft Speed (TSS) sensor, B44 307–01–00–3
Turbine Shaft Speed (TSS) sensor, B44 307–01–00–6
Turbo geometry position sensor, B196 . . . . . 303–14C–00–6
Turn signal lamp, LH rear, E49 417–01–00–10
Turn signal lamp, RH rear, E48 417–01–00–10
Two–way washer pump motor, M74 501–16–00–2
Vanity mirror lamp, LH side, E30 417–02–00–4
Vanity mirror lamp, RH side, E31 417–02–00–4
Variable geometry turbo actuator, M253 . . . . . 303–14C–00–3
Vehicle speed sensor (VSS), B11 . . . . . 303–14B–00–4
Water–in–fuel sensor, B12 . . . . . 303–14C–00–1
Wheel speed sensor, LH side front, B15 . . . . . 206–09A–00–2

Wheel speed sensor, LH side front, B15 . . . . . 206–09C–00–2
Wheel speed sensor, LH side rear, B17 . . . . . 206–09A–00–2
Wheel speed sensor, LH side rear, B17 . . . . . 206–09C–00–2
Wheel speed sensor, RH side front, B14 . . . . . 206–09A–00–2
Wheel speed sensor, RH side front, B14 . . . . . 206–09C–00–2
Wheel speed sensor, RH side rear, B16 . . . . . 206–09A–00–2
Wheel speed sensor, RH side rear, B16 . . . . . 206–09C–00–2
Window control/power mirror adjust switch, driver, N388 413–00–00–5
Window control/power mirror adjust switch, driver, N388 501–09–00–1
Window control/power mirror adjust switch, driver, N388 501–09–00–2
Window control switch, LH rear, N298 501–11–00–5
Window control switch, LH rear, N298 501–11–00–9
Window control switch, passenger side front, N297 501–11–00–1
Window control switch, passenger side front, N297 501–11–00–2
Window control switch, passenger side front, N297 501–11–00–4
Window control switch, passenger side front, N297 501–11–00–8
Window control switch, RH rear, N299 501–11–00–10
Window control switch, RH rear, N299 501–11–00–6
Window regulator motor, driver side front, M122 501–11–00–1
Window regulator motor, driver side front, M122 501–11–00–2
Window regulator motor, passenger side front, M123 501–11–00–1
Window regulator motor, passenger side front, M123 501–11–00–2
Windshield wiper motor, M111 501–16–00–1
Wiper/washer switch, N104 419–10–00–11
Wiper/washer switch, N104 501–16–00–4
Wiper/washer switch, N104 501–16–00–5
Wipers and Washers 501–16–00–1
Wiring Harness Overview 100–00–06–1
Yaw rate sensor, B174 . . . . . 206–09C–00–3

Note

All wiring connections between components are shown exactly as they exist in the vehicles. It is important to realise, however, that no attempt has been made on the schematic to represent components and wiring as they physically appear on the vehicle. For example, a 4-foot length of wire is treated no differently in a schematic from one which is only a few inches long. Furthermore, to aid in understanding electrical (electronic) operation, wiring inside complicated components has been simplified.

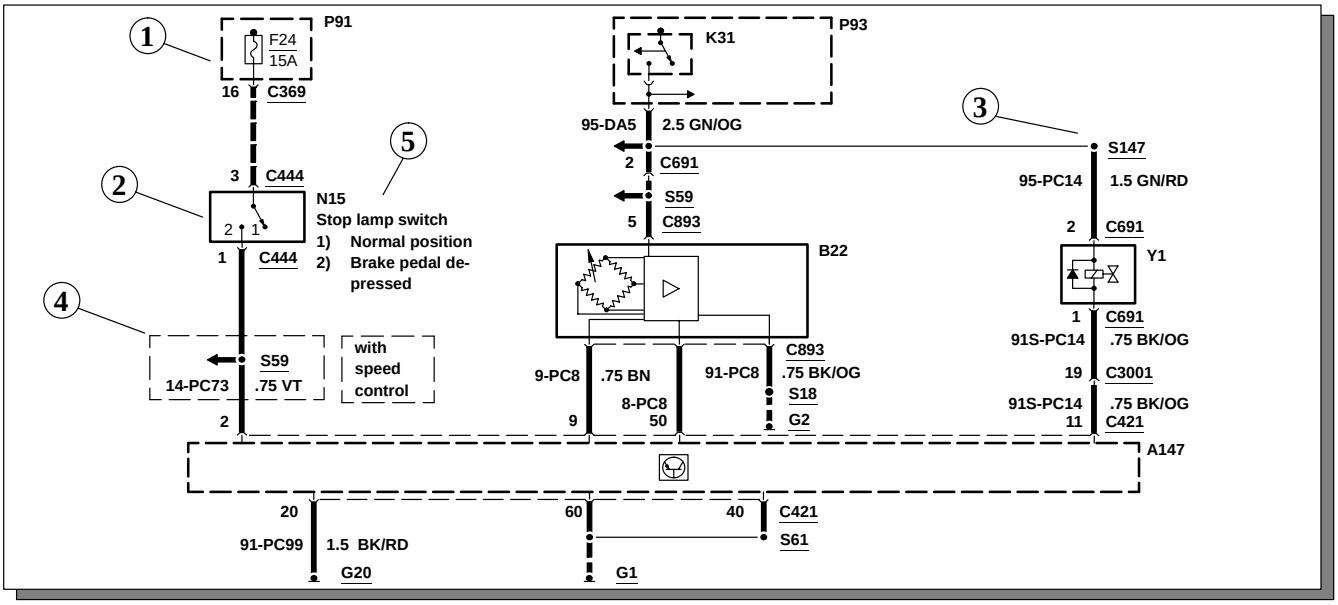

Complete Circuit Operation

Each circuit is shown completely and independently in one chapter or “cell”. Other components which are connected to the circuit may not be shown unless they influence the circuit operation.

Current Flow (1)

Each cell normally starts with the component that powers the circuit such as a fuse or the ignition switch. Current flow is shown from the power source at the top of the page to ground at the bottom of the page.

Switch Positions (2)

Within the schematic, all switches, sensors and relays are shown “at rest” (as if the ignition switch were OFF).

Splices (3)

An arrow indicates that the splice is not shown completely. The page where the splices appears in full is listed in the Index.

Boxes (4)


A thin dashed box on a schematic indicates a part of the circuit which is only present for a particular vehicle model, country, or option. These qualifiers will be shown next to the box on the schematic.

Component Names and Notes (5)

Component names are placed on the right hand side of each component. Any notes that describe switch positions or operating conditions follow the name. Descriptions of the internals of the component (e.g. “Speed sensor”) are also included here.


Fuse and Relay Information

The “Fuse and Relay Information” cell (700-01-00) contains a view of the Fuse-/Relay Box in which all fuses and relays are identified. Cell 700-01-00 also specifies in table format which circuits/systems are protected by each fuse.

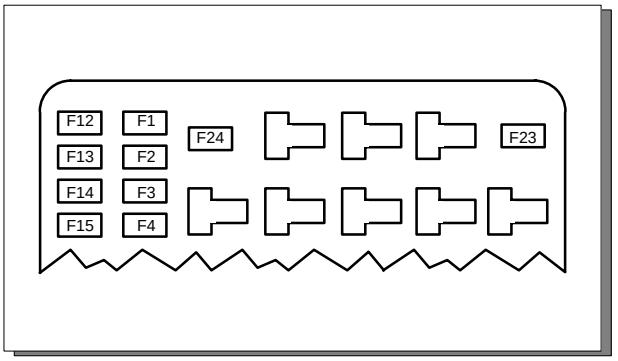


Power Distribution


The “Power Distribution” cell (700-02-00) shows the current feed circuit. The current path is shown from the battery to the ignition switch and to all fuses.

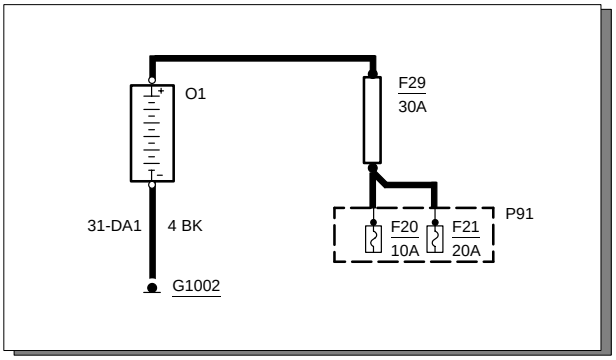

Fuse Details

The “Fuse Details” cell (700-03-00) shows the circuits protected by each fuse. The circuit is traced from the fuse to the component. All details (wires, splices, connectors) between the fuse and the first component a9e shown.

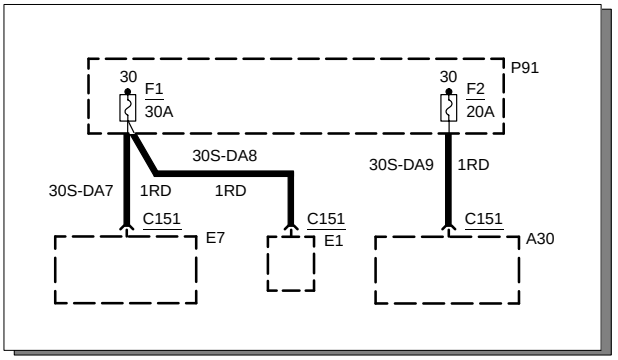


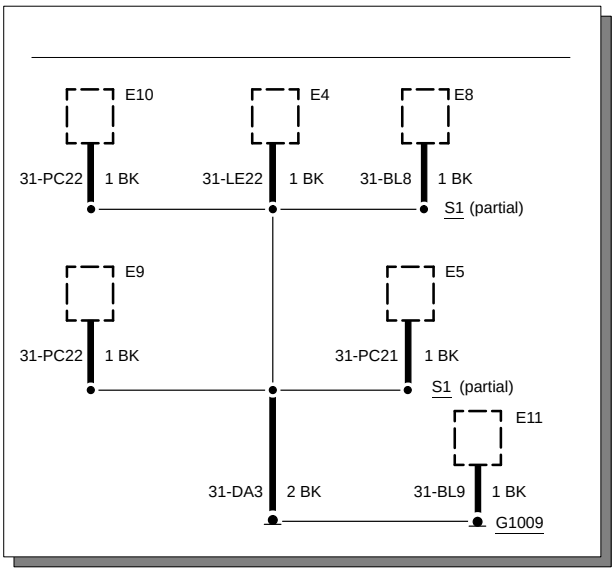

Ground Distribution

Cell 700-04-00 contains the schematics that show the complete details for each ground connection or main ground splice. This is useful in diagnosing a problem affecting several components at once (poor ground connection or ground splice). All Details (wires, splices, connectors) between the ground point and the components are shown. These ground connection details are shown here in order to keep the individual cell schematics as uncluttered as possible.

Splices with a large number of wires may be split in order to improve the graphic representation. A thin line is then used to indicate the unity of the split splice.

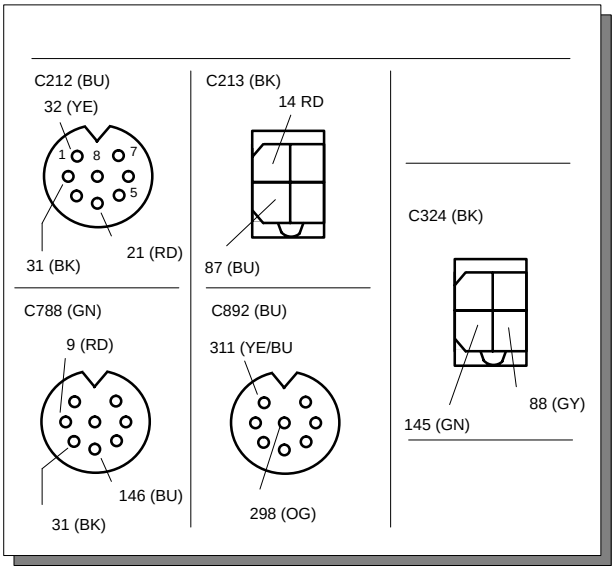


Component Identification Information

Component Identification Information begins in cell 700-06-00 and consists of
(1) Component Location Chart (List),
(2) Component Location Views, and
(3) Connector Views (Faces).
The **Component Location Chart** helps the user find where the various items depicted on the schematic can physically be found on the vehicle. A brief written description of the location is given, along with a reference to the component location views.
The **Component Location Views** show the components and their connecting wires as they can be found on the vehicle.
The **Connector Views** show the cavity or pin locations of all connectors. They are shown as they would appear to a user probing the wires with the connector disconnected.


Note:


Connector colours are portrayed in the following manner:

when both sides of the connector have the same colour

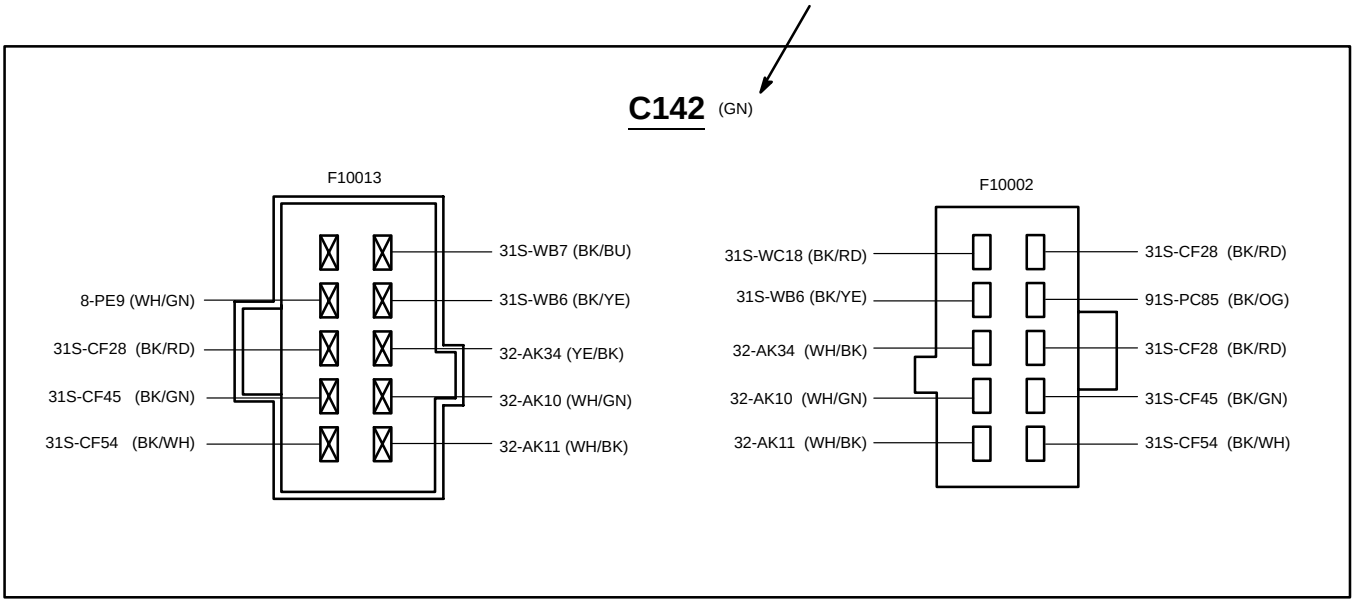

when the male and female sides of the connector have different colours

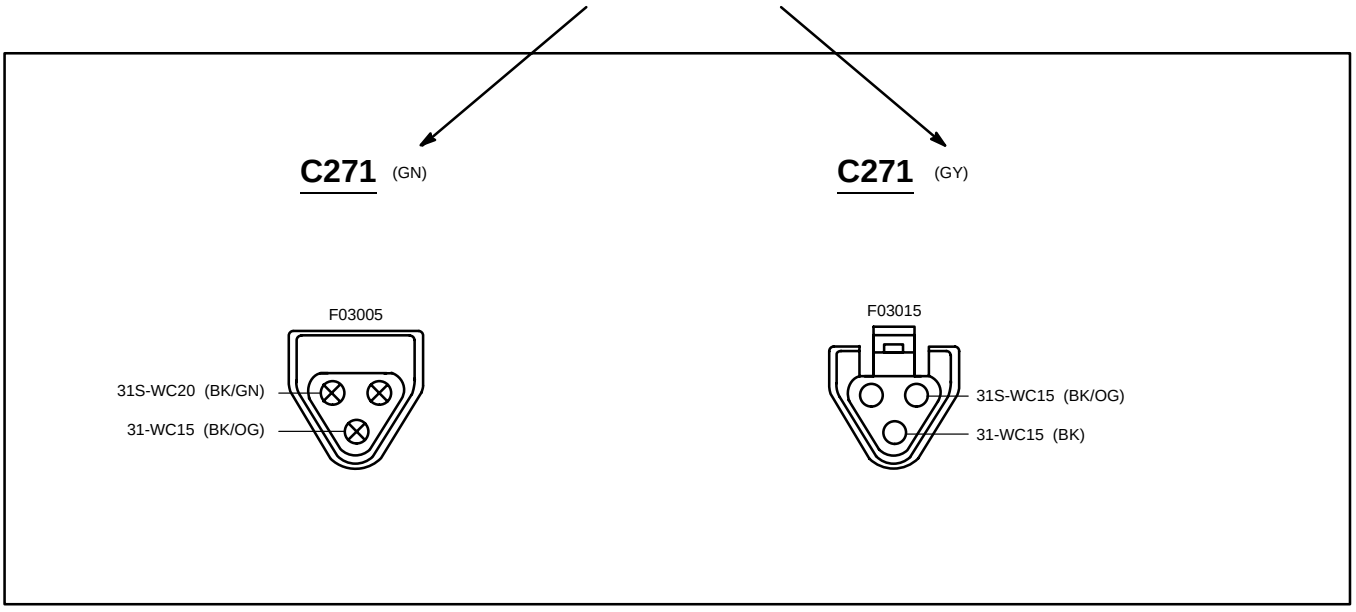

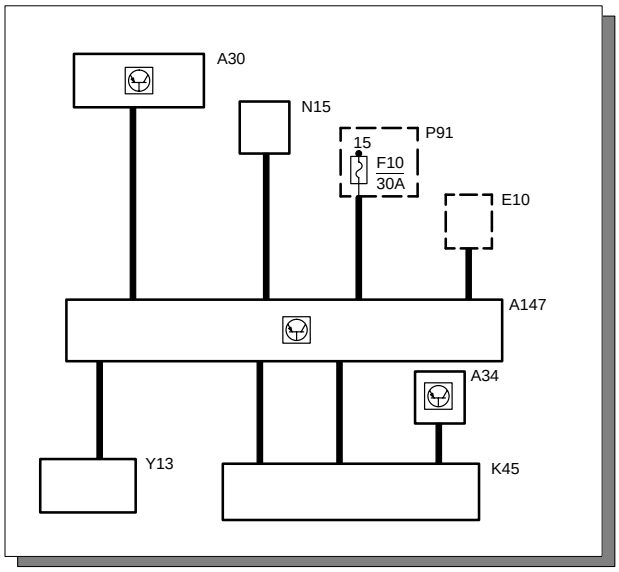

Block Diagrams

Block diagrams can be found at the beginning of some cells. These diagrams provide an overview of the systems detailed on the pages that follow them. All components connected to the control module are shown in order to provide easy understanding of the system component interactions.


Circuit Numbering and Wire Identification

Circuit Numbering:

Ford has introduced a world-wide uniform system for circuit numbering and wire identification. The system is called Function - System Connection, or FSC for short.

FSC was developed mainly to assist in vehicle development and production processes, but is also helpful in helping the technician troubleshoot electrical circuits.

Example:

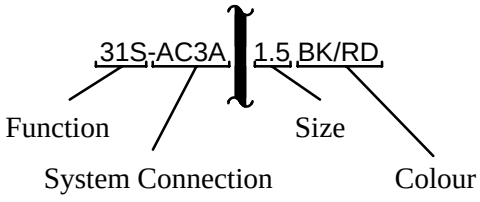

Function:

The first two digits identify the function of the wire. In this case, the function code includes the letter “S” to indicate it is an additionally switched function. The function part of the circuit number is the most helpful to the technician in troubleshooting a circuit. The function codes are based on some DIN designations used previously, with new numbers added for overload-protected functions, sensor functions, data links and special electronic module functions. A complete list of function codes and their descriptions is included in cell 100-00-04 “Symbols”.

System Connection (including branch):

Systems are related to subsets of the vehicle circuitry. A complete list of the system codes can be found in cell 100-00-04 “Symbols”.

Immediately following the system letter code is the connection number specific to that system. A branch identification is used to differentiate wires in one connection with the same function.

Wire Identification (wire colours):

The wire identification consists of a basic colour and an identification colour, and is determined directly from the wire's circuit number. In the wiring diagrams the wire colours will be located separately next to the wires as before.

The basic and identification colours are abbreviated using the international norm IEC 757. The abbreviations are listed in cell 100-00-04 "Symbols".

Each function code has a specific basic colour associated with it which can also be seen in the chart of function codes in cell 100-00-04 "Symbols". The identification colour is a coloured stripe used to differentiate several wires with the same function within one component connector.

One essential difference from the previous wire colouring system is the change of some of the basic wire colours. Ground circuits, previously assigned the basic colour brown (BN) are now black (BK).

Using the circuit number and wire identification used in the above example we know the following information about the wire.



Function: 31 = Ground
S = Additionally switched circuit


System: AC = Headlamp levelling

Connection: 3 = Switch connection
A = Branch


Size: 1.5 = 1.5 mm^2

Colour: BK = Basic colour black
(determined by function 31)
RD = Identification colour red
(red stripe)

Symbols

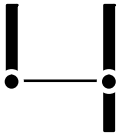

Distributed splice

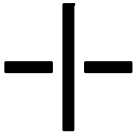

Crossed wiring without connection



Splice

Removable connection



Ground




Connector



Female connector

Male connector




Entire component




Part of a component




Component case directly attached to metal part of vehicle (ground)




Component with screw terminals



Connector attached to component



Connector attached to component lead (pigtail)

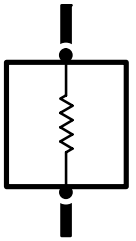


Wire resistance



Resistor or heating element



Potentiometer (pressure or temperature)



Potentiometer (outside influence)

Symbols



Battery




Circuit breaker




Fuse



Fusible link

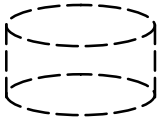


Shield



Signal horn or speaker



Steering column slip ring




Temperature dependent circuit breaker



Diode, current flows in direction of arrow



Light emitting diode (LED)



Capacitor




Variable capacitor




Piezoelectric sensor


Symbols




Coil



Solenoid controlled valve or clutch solenoid



Transistor



Lamp



Bifilament lamp




High beam symbol



Rear fog lamp symbol



Front fog lamp symbol




Hall sensor




Clock spring



Buzzer

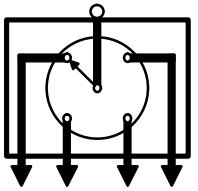


Distributor



Shorting bar connector

Symbols

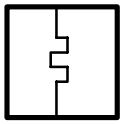


Heating element

Conductor loop



Fuel sender

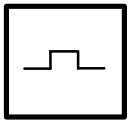

Thermal timer relay



AC voltage




Filter



Gauges



Antenna



Ignition coil assembly



Permanent magnet, one–speed–motor




Permanent magnet, two–speed–motor



Busbar



Turn signal symbol

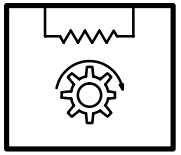


ABS wheel sensor

Symbols




A thick dashed line represents 2 or more wires

A thin dashed line represents a continuation

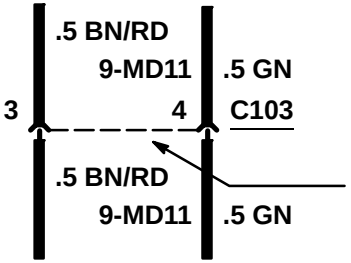


Two connections (pins) in the same connector


Dashed line indicates terminals for the same connector

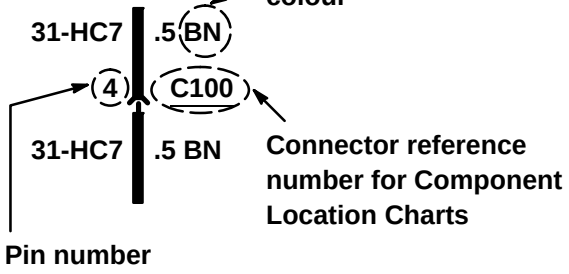

Wire insulation is one colour with another colour stripe (green with white)

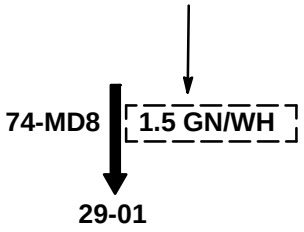


Circuit references a wire which connects to another circuit

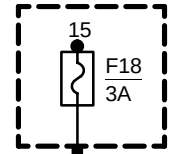

P91
Central Junction Box (CJB)


Other circuits which share fuse 18, but are not shown, can be referenced in Fuse Details

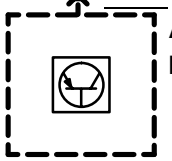


A11
Radio



M111
Windshield wiper motor

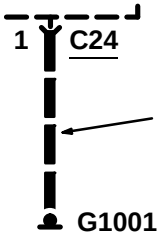


Other circuits which are also grounded at G1001, but are not shown, can be referenced in Ground Distribution

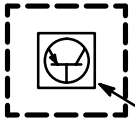


A7
ABS module

Symbol indicates a solid state device (consists only of electronic parts)

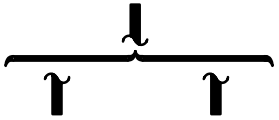

A choice bracket shows wiring differences between models, countries or options

Circuit number

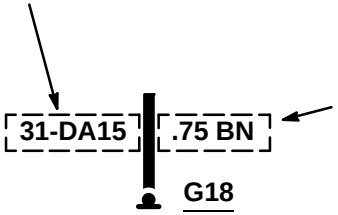


Wire size in mm^2


Wire attached to metal part of car (grounded)

Ground reference number for Component Location Charts


Symbols

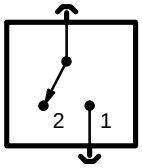

One pole, two position switch

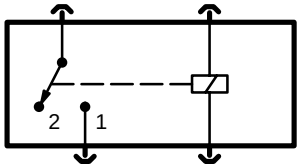


Relay

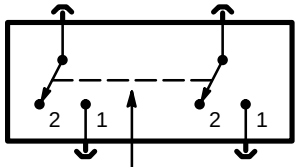


Switches that move together


Dashed line shows a mechanical connection between switches

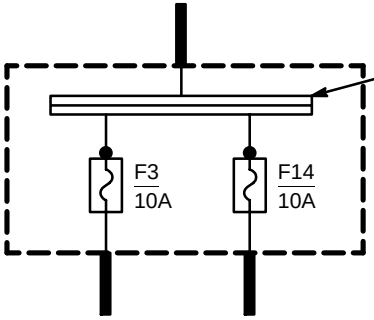

Busbar

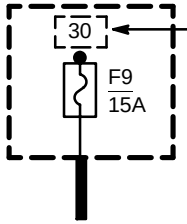

Indicates that fuse is supplied with power at all times

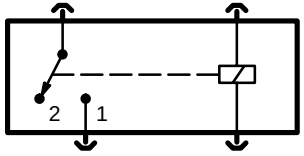

Normally open contact


When coil is energised, switch is pulled closed

Terminal number

Component number

Name of component


Details about component or operation

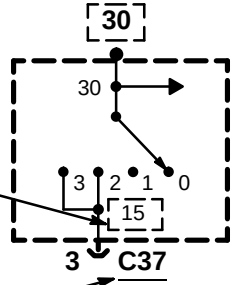


”15” is supplied with battery voltage in position 2 or 3

Component connector number

Symbols

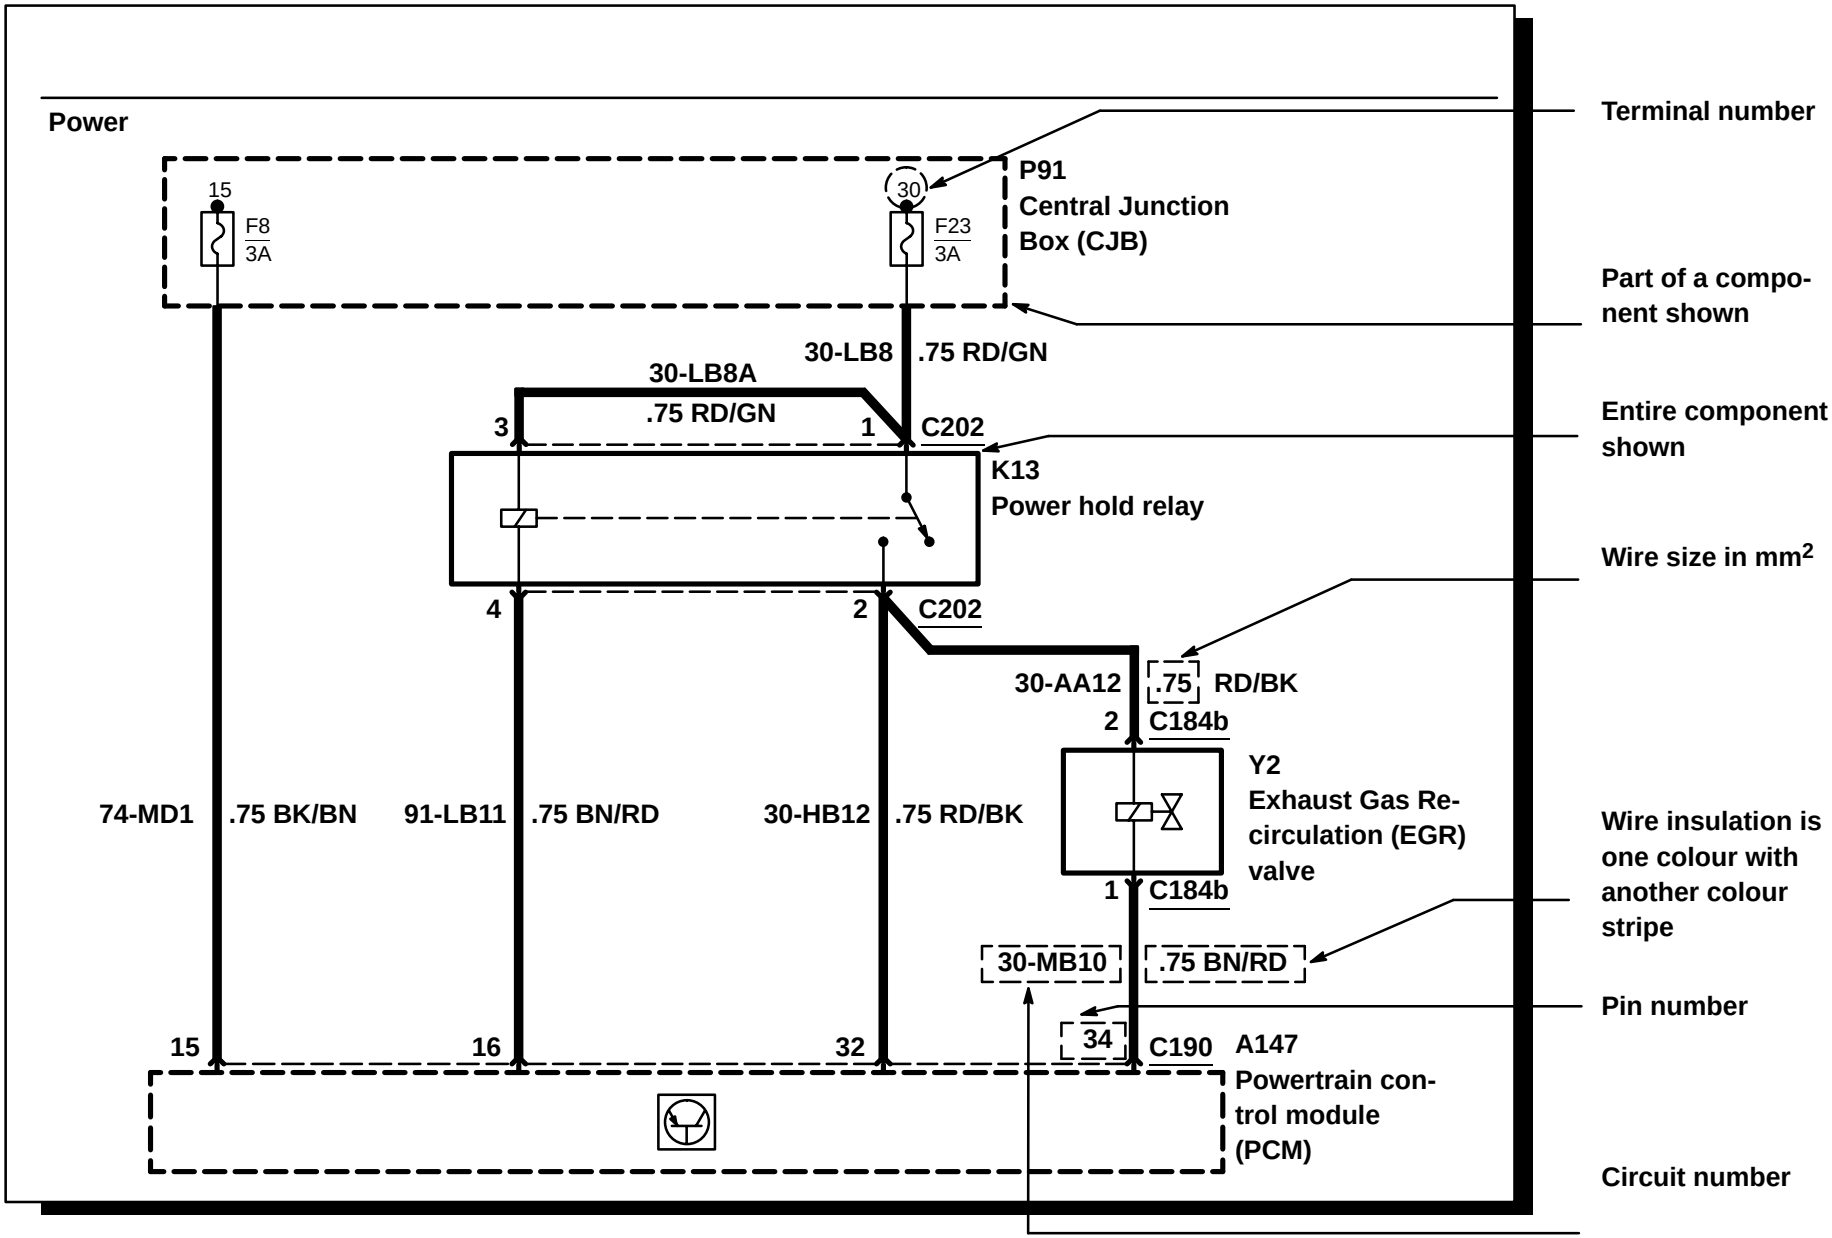
Power
15
F8
3A
30
F23
3A
P91
Central Junction
Box (CJB)
30-LB8 .75 RD/GN
30-LB8A
.75 RD/GN
3
1
C202
K13
Power hold relay
4
2
C202
30-AA12
.75
RD/BK
2
C184b
Y2
Exhaust Gas Re-
circulation (EGR)
valve
74-MD1 .75 BK/BN
91-LB11 .75 BN/RD
30-HB12 .75 RD/BK
1
C184b
30-MB10
.75 BN/RD
34
C190
A147
Powertrain con-
trol module
(PCM)
15
16
32
Terminal number
Part of a compo-
nent shown
Entire component
shown
Wire size in mm2
Wire insulation is
one colour with
another colour
stripe
Pin number
Circuit number

Symbols

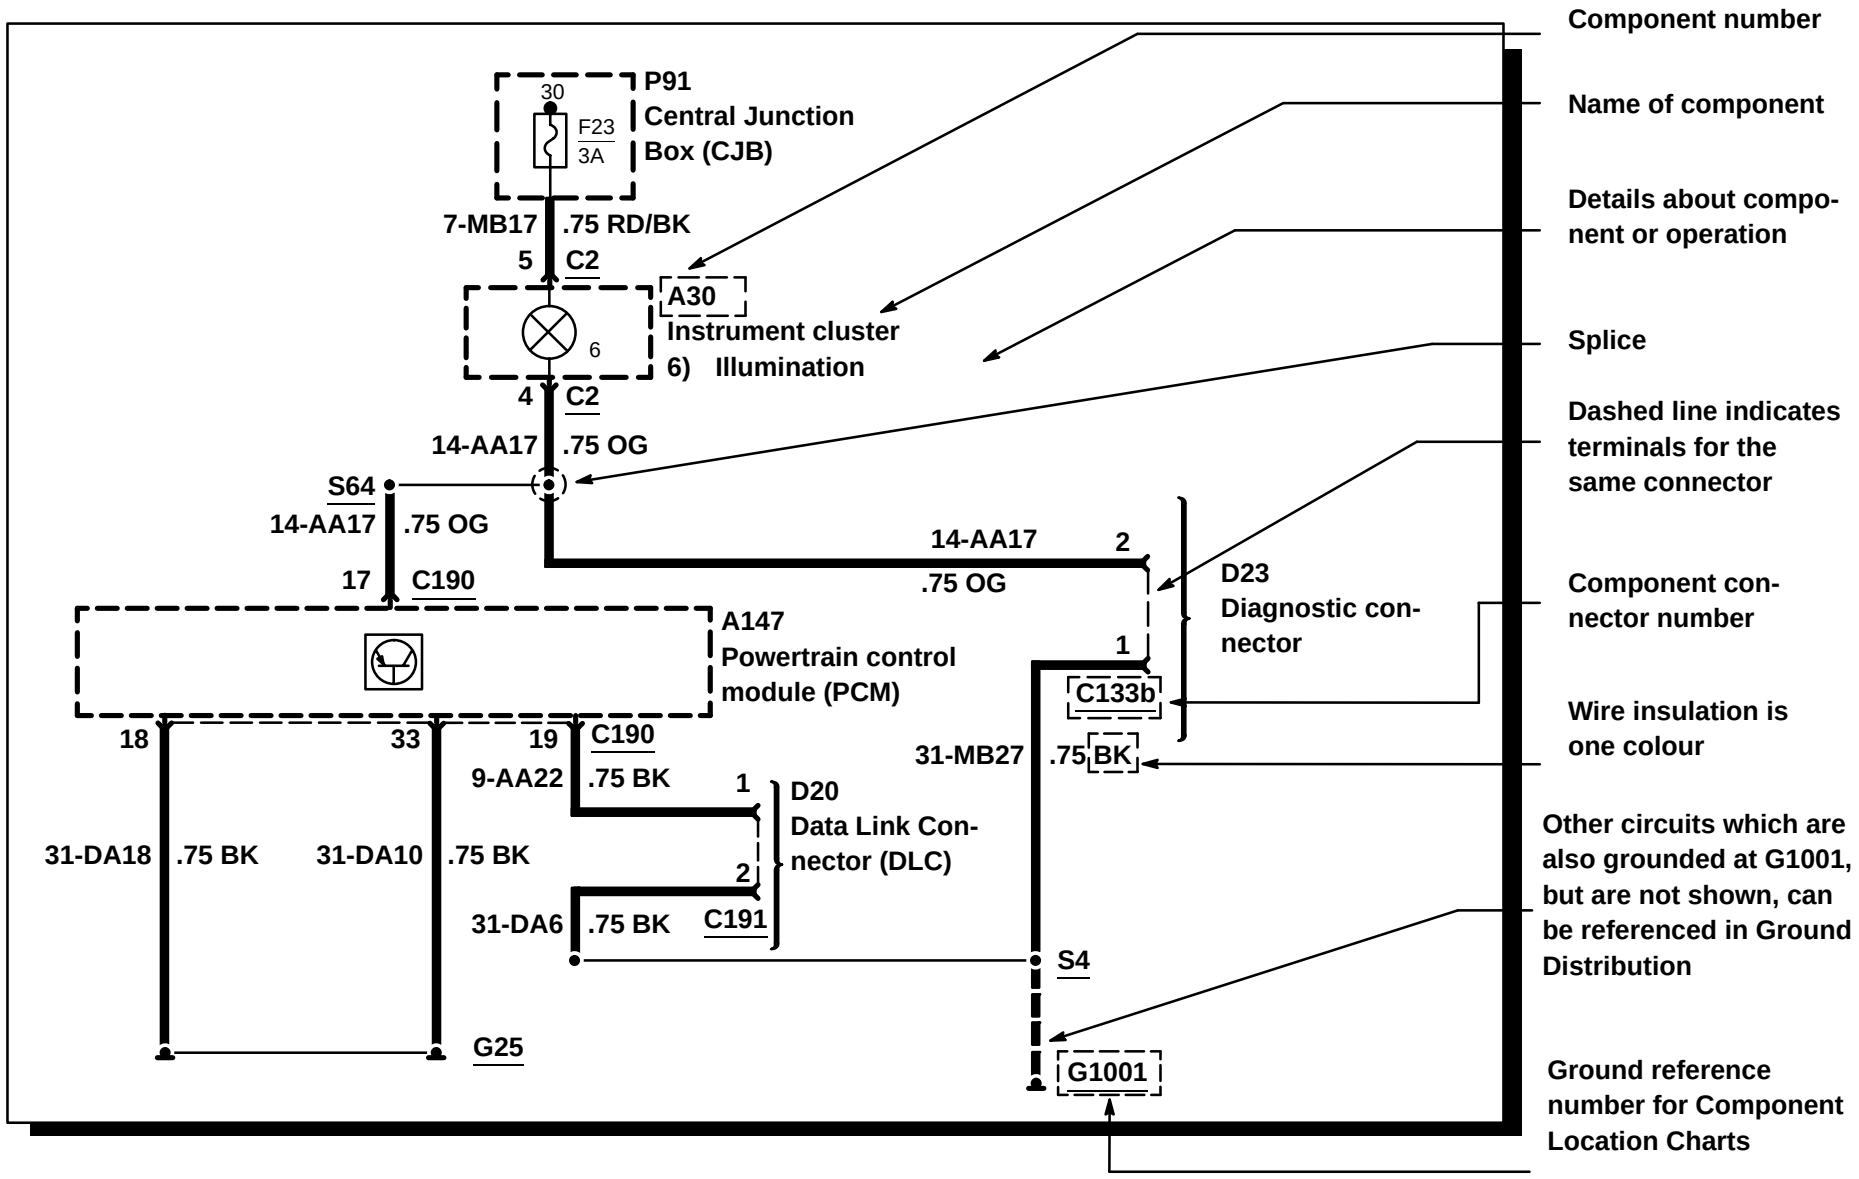
Component number
Name of component
Details about component or operation
Splice
Dashed line indicates terminals for the same connector
Component connector number
Wire insulation is one colour
Other circuits which are also grounded at G1001, but are not shown, can be referenced in Ground Distribution
Ground reference number for Component Location Charts
P91
Central Junction Box (CJB)
30
F23
3A
7-MB17 .75 RD/BK
5 C2
A30
Instrument cluster
6) Illumination
6
4 C2
14-AA17 .75 OG
S64
14-AA17 .75 OG
17 C190
A147
Powertrain control module (PCM)
14-AA17 .75 OG
2
D23
Diagnostic connector
1
C133b
31-MB27 .75 BK
18
33
19 C190
9-AA22 .75 BK
1
D20
Data Link Connector (DLC)
2
31-DA18 .75 BK
31-DA10 .75 BK
31-DA6 .75 BK C191
S4
G25
G1001

Symbols

Number	Description	Basic colour
1	Audio signal positive	WH
2	Audio signal negative	GY
3	Audio signal reference (return/ shield)	BN
4	Data link, bus positive	GY
5	Data link, bus positive	BU
6	Data link, bus shield	NO
7	Constant DC voltage, other than battery	YE
8	Sensor signal (X–direction, forward, upward)	WH
9	Sensor signal return (reference/ground)	BN
10	Sensor signal (Y–direction, reverse, downward)	GY
15	Battery voltage, hot in Start and Run only	GN
20	Battery voltage, hot in Run only	PK
29	Battery voltage, hot at all times (secondary fused)	OG
30	Battery voltage, hot at all times (not fused and primary fused)	RD
31	Ground	BK
32	Switched between: Battery voltage, Ground or Open Circuit (Plus for: front down, open, mirror leftward, unlock, on)	WH
33	Switched between: Battery voltage, Ground or Open Circuit (Plus for: front up, close, mirror rightward, lock, off)	YE
34	Switched between: Battery voltage, Ground or Open Circuit (Plus for: rear up, mirror upward, forward or module settings)	BU
35	Switched between: Battery voltage, Ground or Open Circuit (Plus for: rear down, mirror downward, reverse or inductor output voltage)	VT
48	Drain wire	NO
49	Pulsed power feed	BU
50	Battery voltage, hot in Start only	GY
59	AC Power	GY
64	DC voltage, hot only if engine runs	BU
75	Battery voltage, hot in Run and Accessory only	YE
91	Ground	BK

Symbols – System Codes

Distribution Systems

DA: Splices distribution
DB: Busbars
DC: Circuit protection – Battery Junction Box (BJB)
DD: Circuit protection – Central Junction Box (CJB)
DE: Ground
DF: Junction block
DG: Circuit protection – Auxiliary fuse box
DH: Distribution – Auxiliary fuse box
DJ: Auxiliary distribution
DK: Integrated components

Data Bus Systems

EA: ACP Bus
EB: ALT Bus
EC: CAN Bus
ED: DCL Bus
EE: ISO Bus
EG: SCP Bus

Power Convenience Systems

AA: Door locks and decklid (including: remote keyless entry/global closing)
AD: Power mirrors
AG: Power roof
AH: Power seats
AJ: Power windows
AL: Power steering column
AM: Power doors

Basic Systems

BA: Charge (including: ammeter/voltmeter)
BB: Start

Chassis Systems

CC: Ride suspension
CD: Suspension (air/self–leveling)
CE: Power steering (variable automatic power assist)
CF: Anti–lock brakes/traction control
CG: Brakes (engine/exhaust/jake)

Climate Systems

FA: Climate 1
FB: Climate 2
FC: Climate, auxiliary heater

Information and Warning Systems

GA: Gauges – level/pressure/temperature
GB: Gauges miscellaneous (including: speedometer/clock)
GC: Indicator – level/pressure/temperature
GE: Auxiliary warning/bulb outage
GG: Instrument cluster
GH: Trip computer
GJ: Horn
GK: Navigation
GL: Anti–theft
GM: Audio warning (including: buzzers/chimes)
GN: parking aid
GP: Vehicle emergency monitoring

Heated Systems

HA: Auxiliary (including: air/filter/lighter)
HB: De–ice (including: mirrors/washer jets/windows)
HC: Heated seats

Occupant Restraint Systems

JA: Air Bags

Wiper and Washer Systems

KA: Wiper/washer

Lighting Systems

LB: Courtesy (glove comp./hood/luggage comp./map/recharg. flashlight/vanity)
LC: Entry (including: dome/floor/door)
LD: Fog/flood/driving
LE: Head (including: concealed/dim–dip/daytime running)
LF: Parking/marker/licence/clearance
LG: Turn signal/cornering/hazard/stop/reverse
LH: Switch illumination
LK: Instrument Illumination

Entertainment and Communication Systems

MC: Communication
MD: Entertainment

Special Vehicles (unique)

NA: Ambulance
NB: Police
NC: Taxi
ND: Trailer

Powertrain Control Systems

PA: Engine control (common, cooling and extra carbureted)
PG: Vehicle speed and engine RPM

Symbols


LHD	Left–hand–drive vehicles
RHD	Right–hand–drive vehicles

Country codes

A	Austria
B	Belgium
CH	Switzerland
CZ	Czech Republic
D	Germany
DK	Denmark
E	Spain
F	France
GR	Greece
H	Hungary
I	Italy
IS	Iceland
N	Norway
NL	Netherlands
P	Portugal
S	Sweden
FIN	Finland

Wire colours	
BK	Black
BN	Brown
BU	Blue
GN	Green
GY	Grey
LG	Light green
NA	Natural
OG	Orange
PK	Pink
RD	Red
SR	Silver
VT	Violet
WH	White
YE	Yellow


Wiring Harness Overview – LHD, before 11/2004

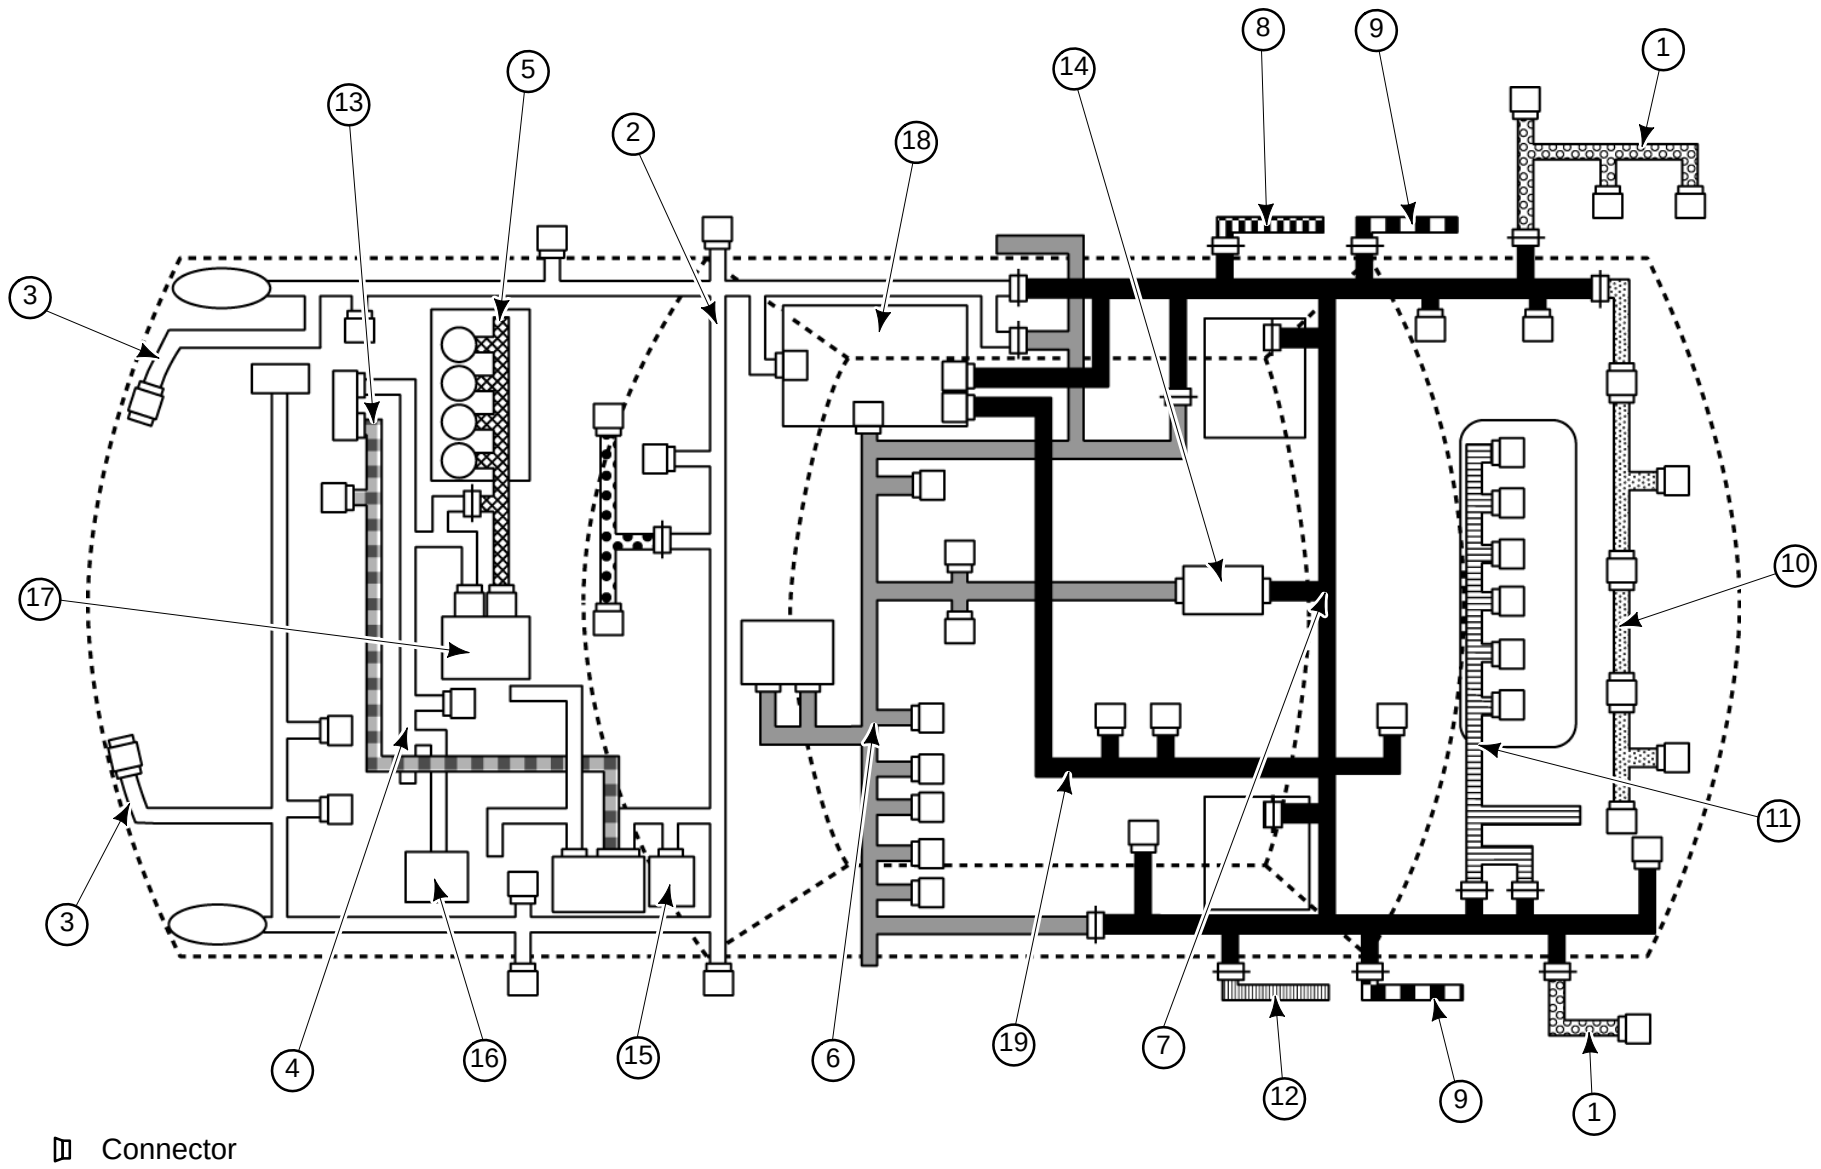

Connector

Item	Part Number	Description	Item	Part Number	Description
1	2B325	Wiring harness – Brake warning switch	11	17N400	Wiring harness – Tailgate/rear doors
2	14K733	Wiring harness – Engine compartment	12	14A584	Wiring harness – Doors
3	15K867	Wiring harness – Park position module, trailer tow control unit	13	14A280	Wiring harness – Battery
4	12A690	Wiring harness – Engine control	14	–	Restraints Control Module (RCM)
5	9H589	Wiring harness – Engine control	15	–	ABS module
6	14401	Main wiring harness	16	–	Battery Junction Box (BJB)
7	14014	Wiring harness – Door to door	17	–	Power Control Module (PCM)
8	14K138	Wiring harness – Passenger door	18	–	Central Junction Box (CJB)
9	14240	Wiring harness – Rear doors	19	14335	Wiring harness – Interior illumination
10	15K868	Wiring harness – Parking aid sensor, rear			


Wiring Harness Overview – RHD, before 11/2004

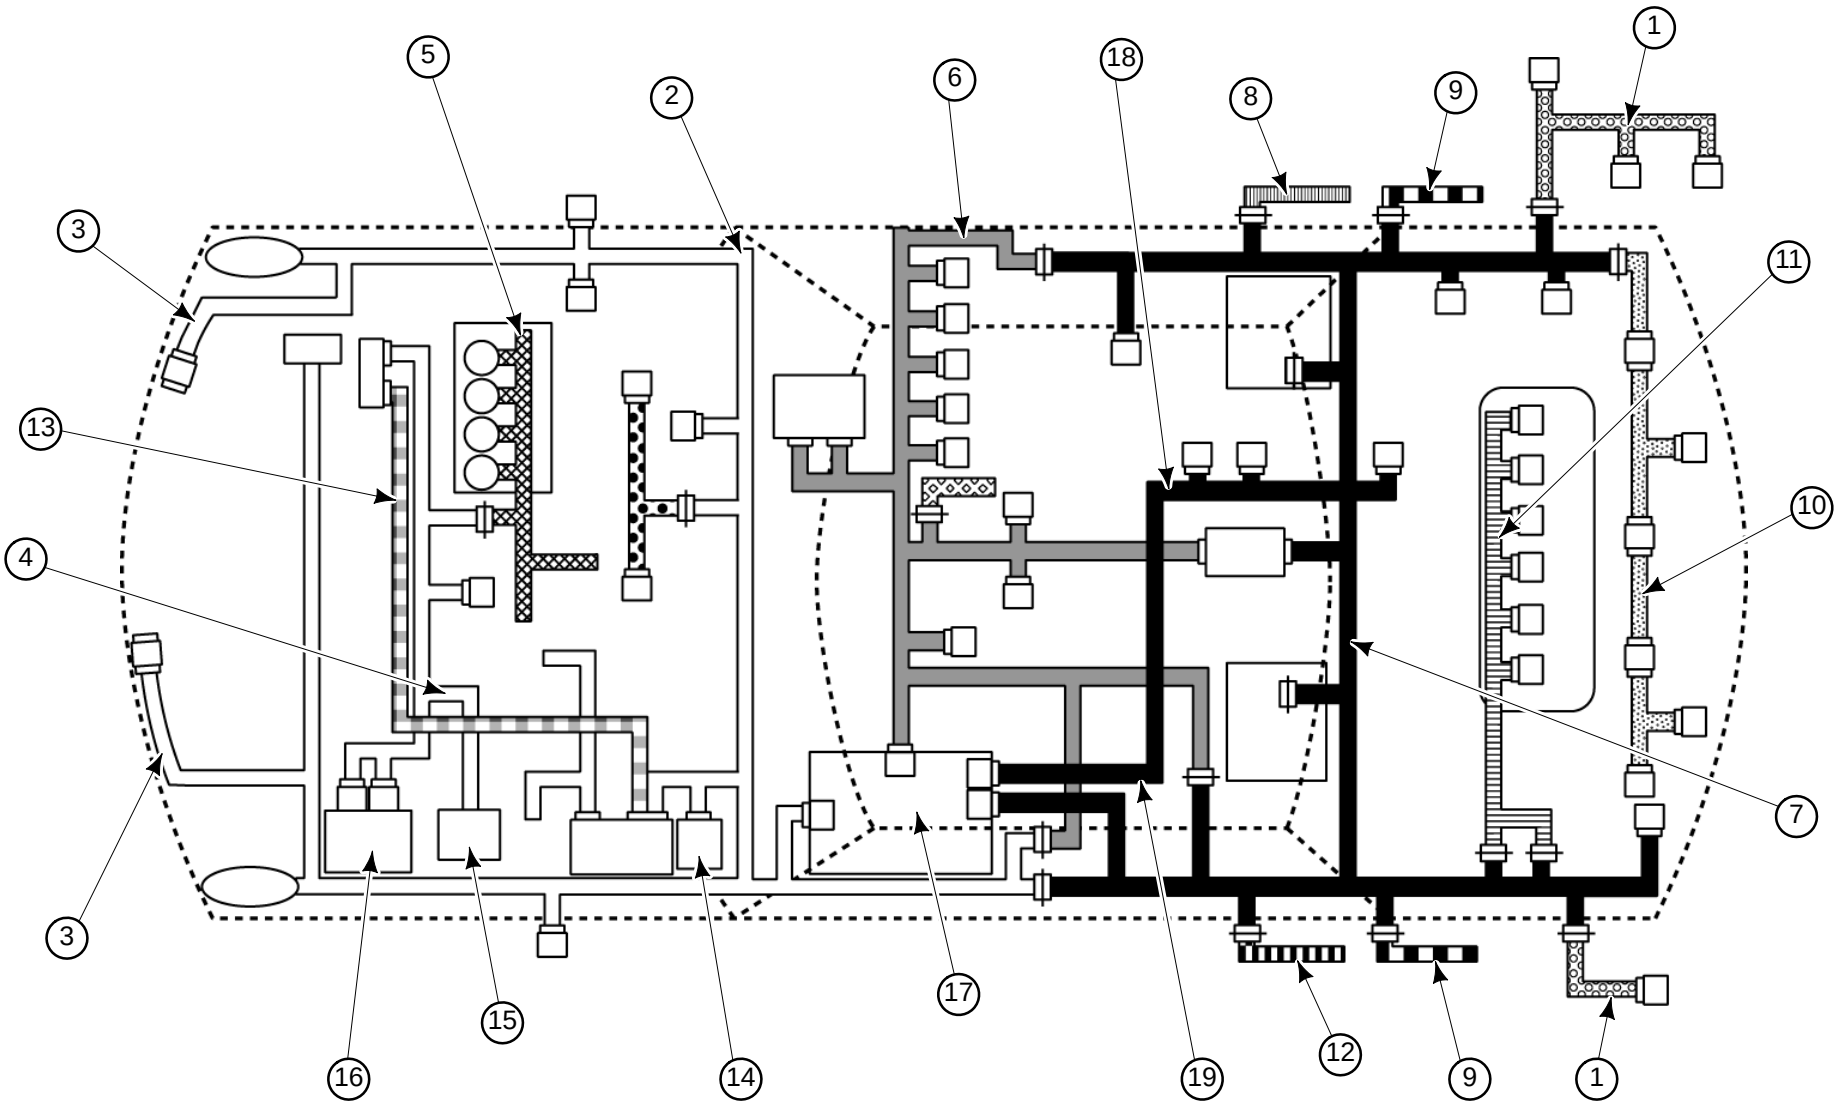

Connector

Item	Part Number	Description	Item	Part Number	Description
20	2B325	Wiring harness – Brake warning switch	30	17N400	Wiring harness – Tailgate/rear doors
21	14K733	Wiring harness – Engine compartment	31	14K138	Wiring harness – Passenger door
22	15K867	Wiring harness – Park position module, trailer tow control unit	32	14A280	Wiring harness – Battery
23	12A690	Wiring harness – Engine control	33	–	Restraints Control Module (RCM)
24	9H589	Wiring harness – Engine control	15	–	ABS module
25	14401	Main wiring harness	16	–	Battery Junction Box (BJB)
26	14014	Wiring harness – Door to door	17	–	Power Control Module (PCM)
27	14A584	Wiring harness – Doors	18	–	Central Junction Box (CJB)
28	14240	Wiring harness – Rear doors	19	14335	Wiring harness – Interior illumination
29	15K868	Wiring harness – Parking aid sensor, rear			


Wiring Harness Overview – LHD, as of 11/2004

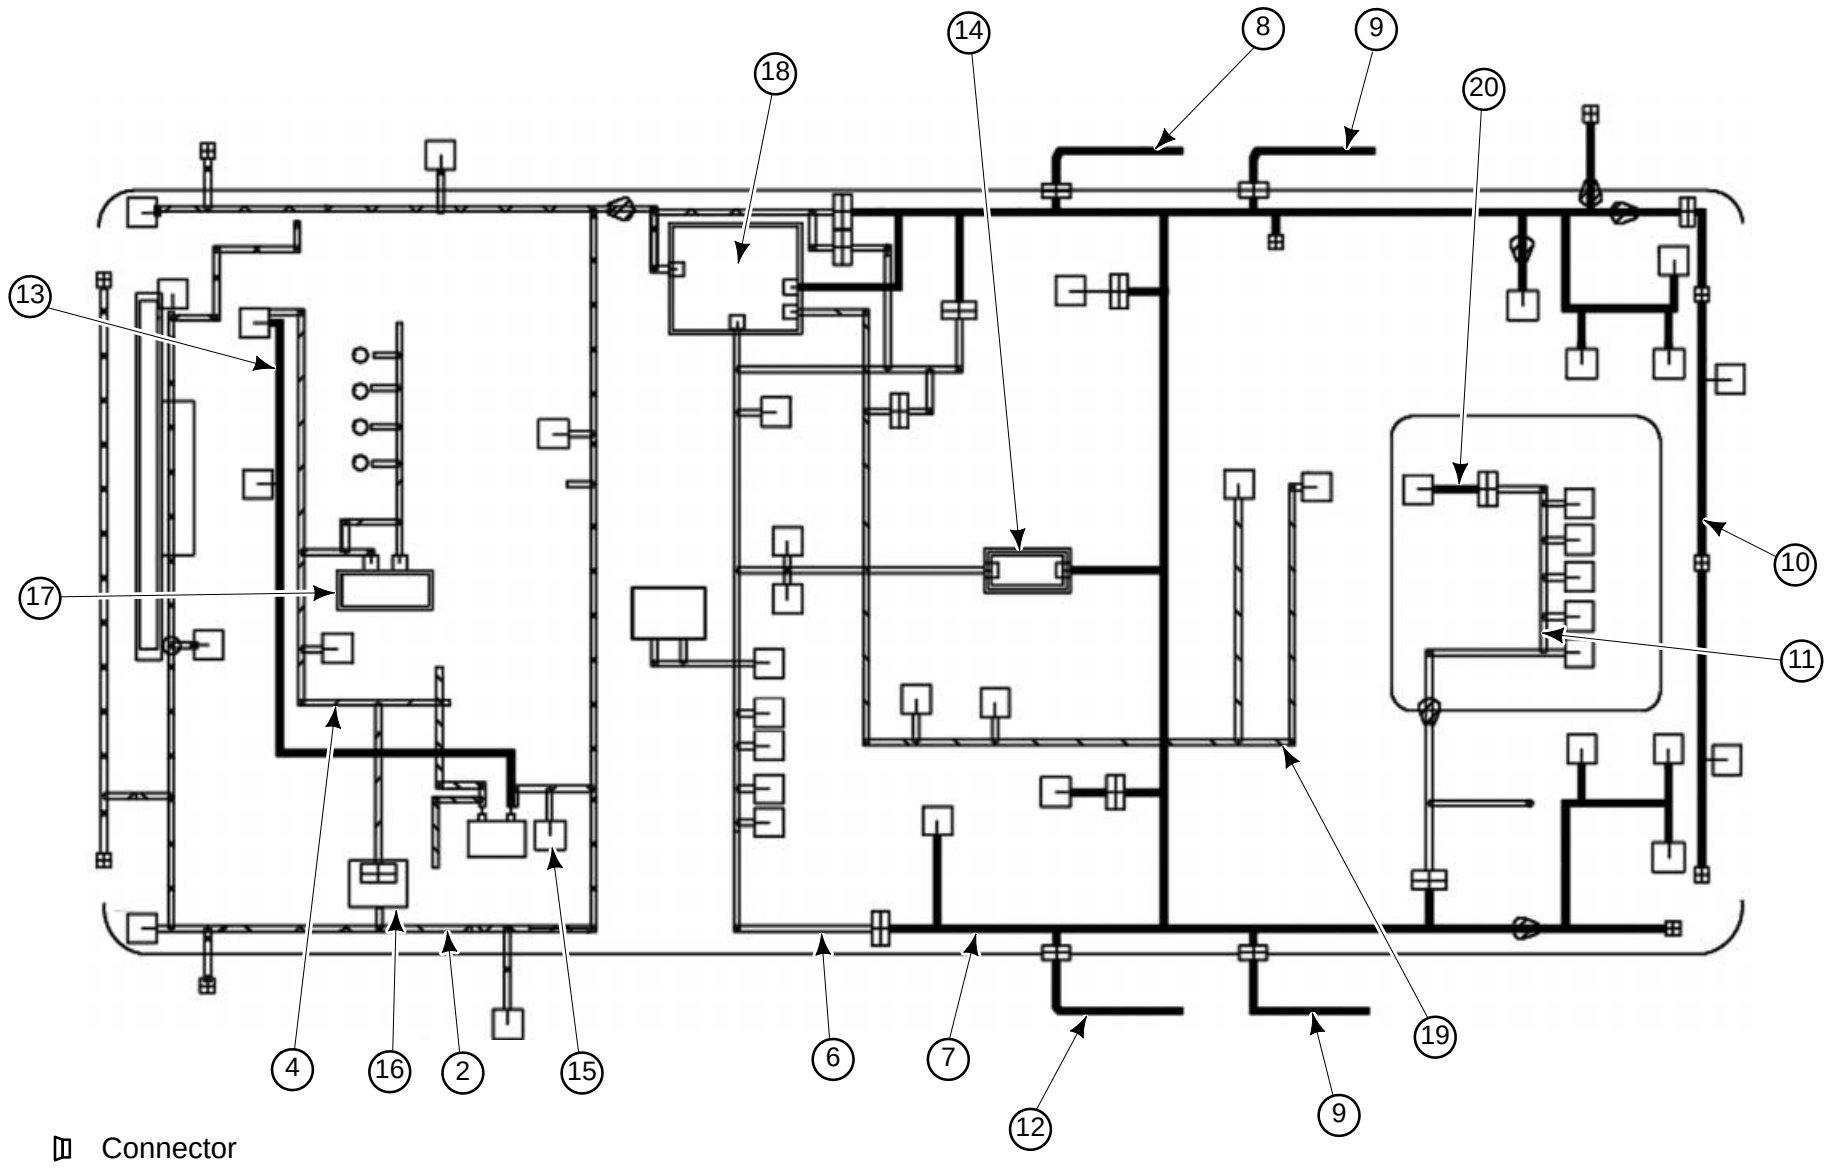

Connector

Item	Part Number	Description
2	14K733	Wiring harness – Engine compartment
4	12A690	Wiring harness – Engine control
6	14401	Main wiring harness
7	14014	Wiring harness – Door to door
8	14K138	Wiring harness – Passenger door
9	14240	Wiring harness – Rear doors
340	15K868	Wiring harness – Parking aid sensor, rear
11	17N400	Wiring harness – Tailgate/rear doors
135	14A584	Wiring harness – Driver door
136	14A280	Wiring harness – Battery
137	–	Restraints Control Module (RCM)
138	–	ABS module
139	–	Battery Junction Box (BJB)
140	–	Power Control Module (PCM)
141	–	Central Junction Box (CJB)
142	14335	Wiring harness – Interior illumination
20	13B551	Wiring harness – High mounted stop lamp

Wiring Harness Overview – RHD, as of 11/2004

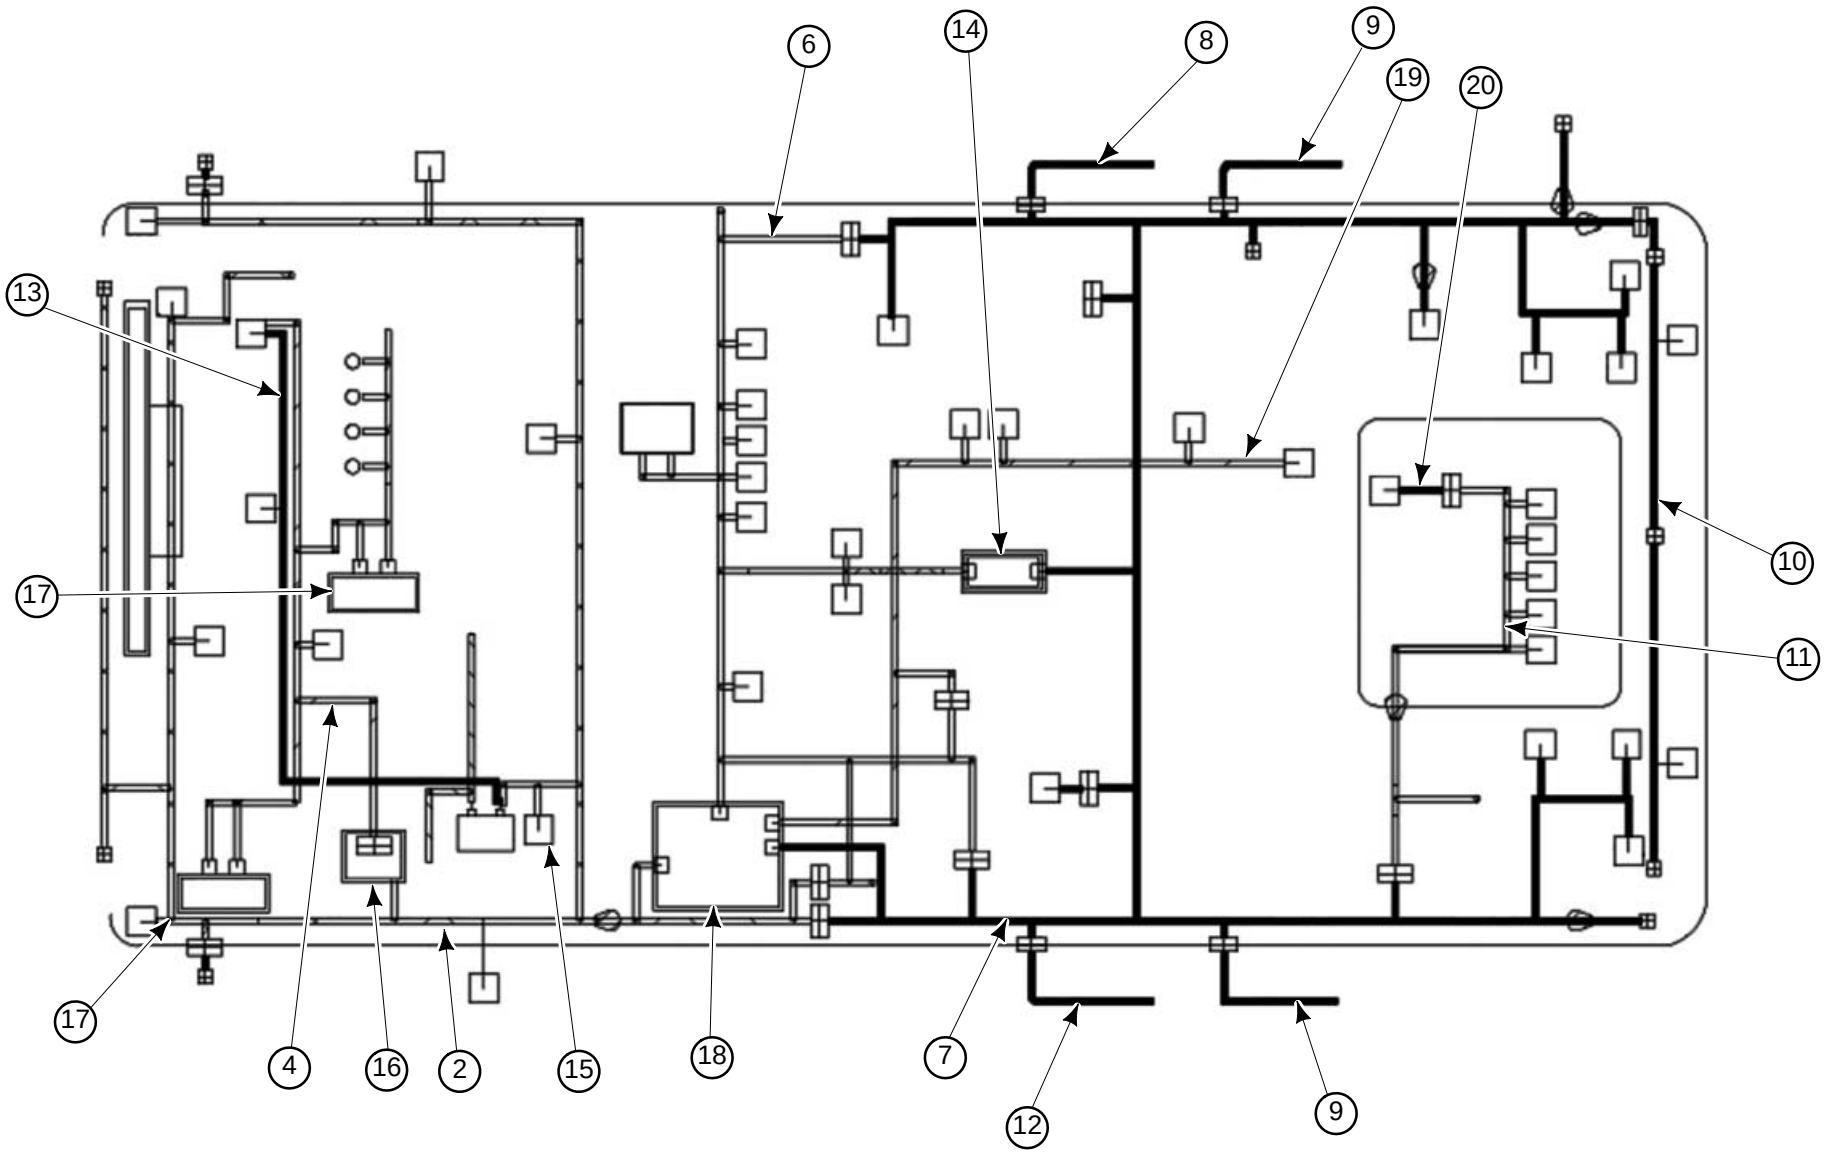


Connector

Item	Part Number	Description
2	14K733	Wiring harness – Engine compartment
4	12A690	Wiring harness – Engine control
6	14401	Main wiring harness
7	14014	Wiring harness – Door to door
8	14A584	Wiring harness – Driver door
9	14240	Wiring harness – Rear doors
430	15K868	Wiring harness – Parking aid sensor, rear
11	17N400	Wiring harness – Tailgate/rear doors
144	14K138	Wiring harness – Passenger door

Item	Part Number	Description
145	14A280	Wiring harness – Battery
146	–	Restraints Control Module (RCM)
15	–	ABS module
16	–	Battery Junction Box (BJB)
17	–	Power Control Module (PCM)
18	–	Central Junction Box (CJB)
19	14335	Wiring harness – Interior illumination
20	13B551	Wiring harness – High mounted stop lamp


Wiring Harness Overview – China

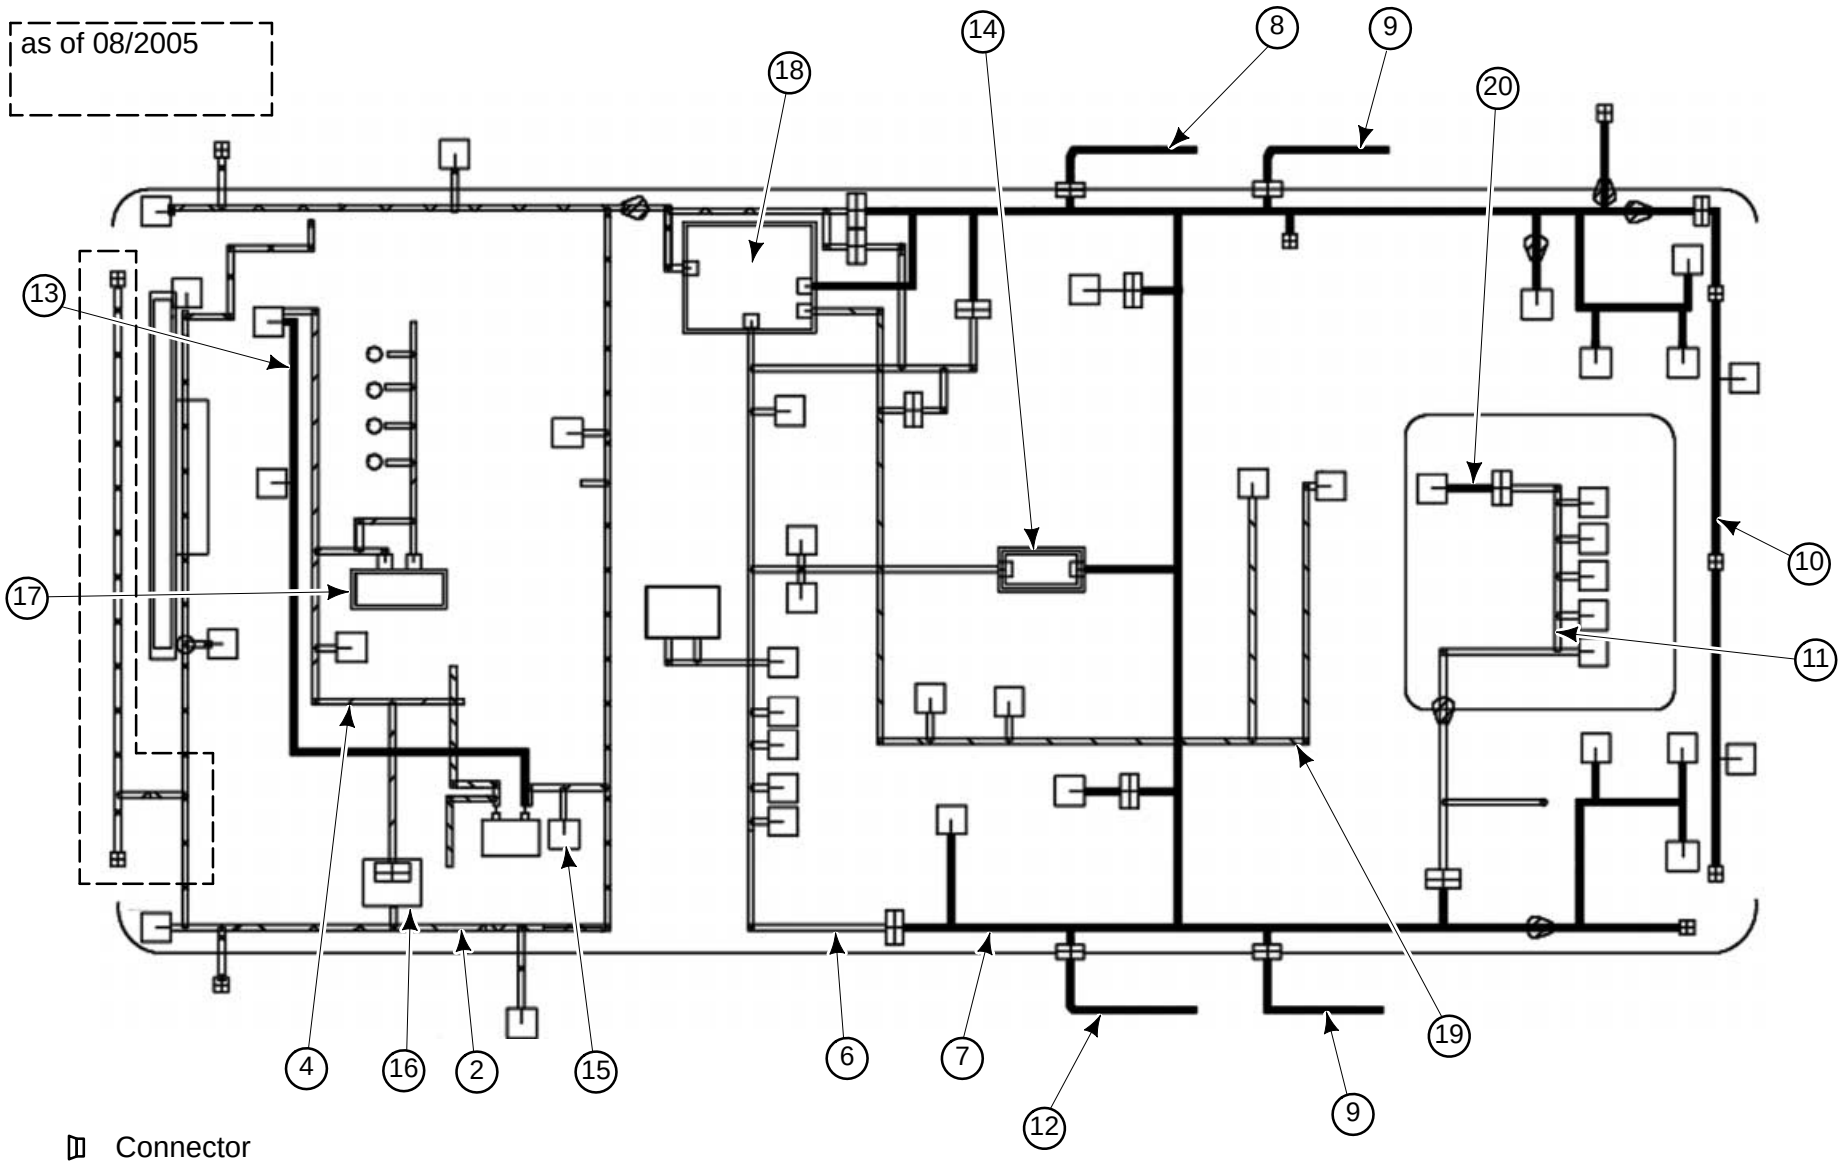


Connector

Item	Part Number	Description
2	14K733	Wiring harness – Engine compartment
4	12A690	Wiring harness – Engine control
6	14401	Main wiring harness
7	14014	Wiring harness – Door to door
8	14K138	Wiring harness – Passenger door
9	14240	Wiring harness – Rear doors
470	15K868	Wiring harness – Parking aid sensor, rear
11	17N400	Wiring harness – Tailgate/rear doors
148	14A584	Wiring harness – Driver door
149	14A280	Wiring harness – Battery
150	–	Restraints Control Module (RCM)
151	–	ABS module
152	–	Battery Junction Box (BJB)
153	–	Power Control Module (PCM)
154	–	Central Junction Box (CJB)
155	14335	Wiring harness – Interior illumination
20	13B551	Wiring harness – High mounted stop lamp


Anti–Lock Control

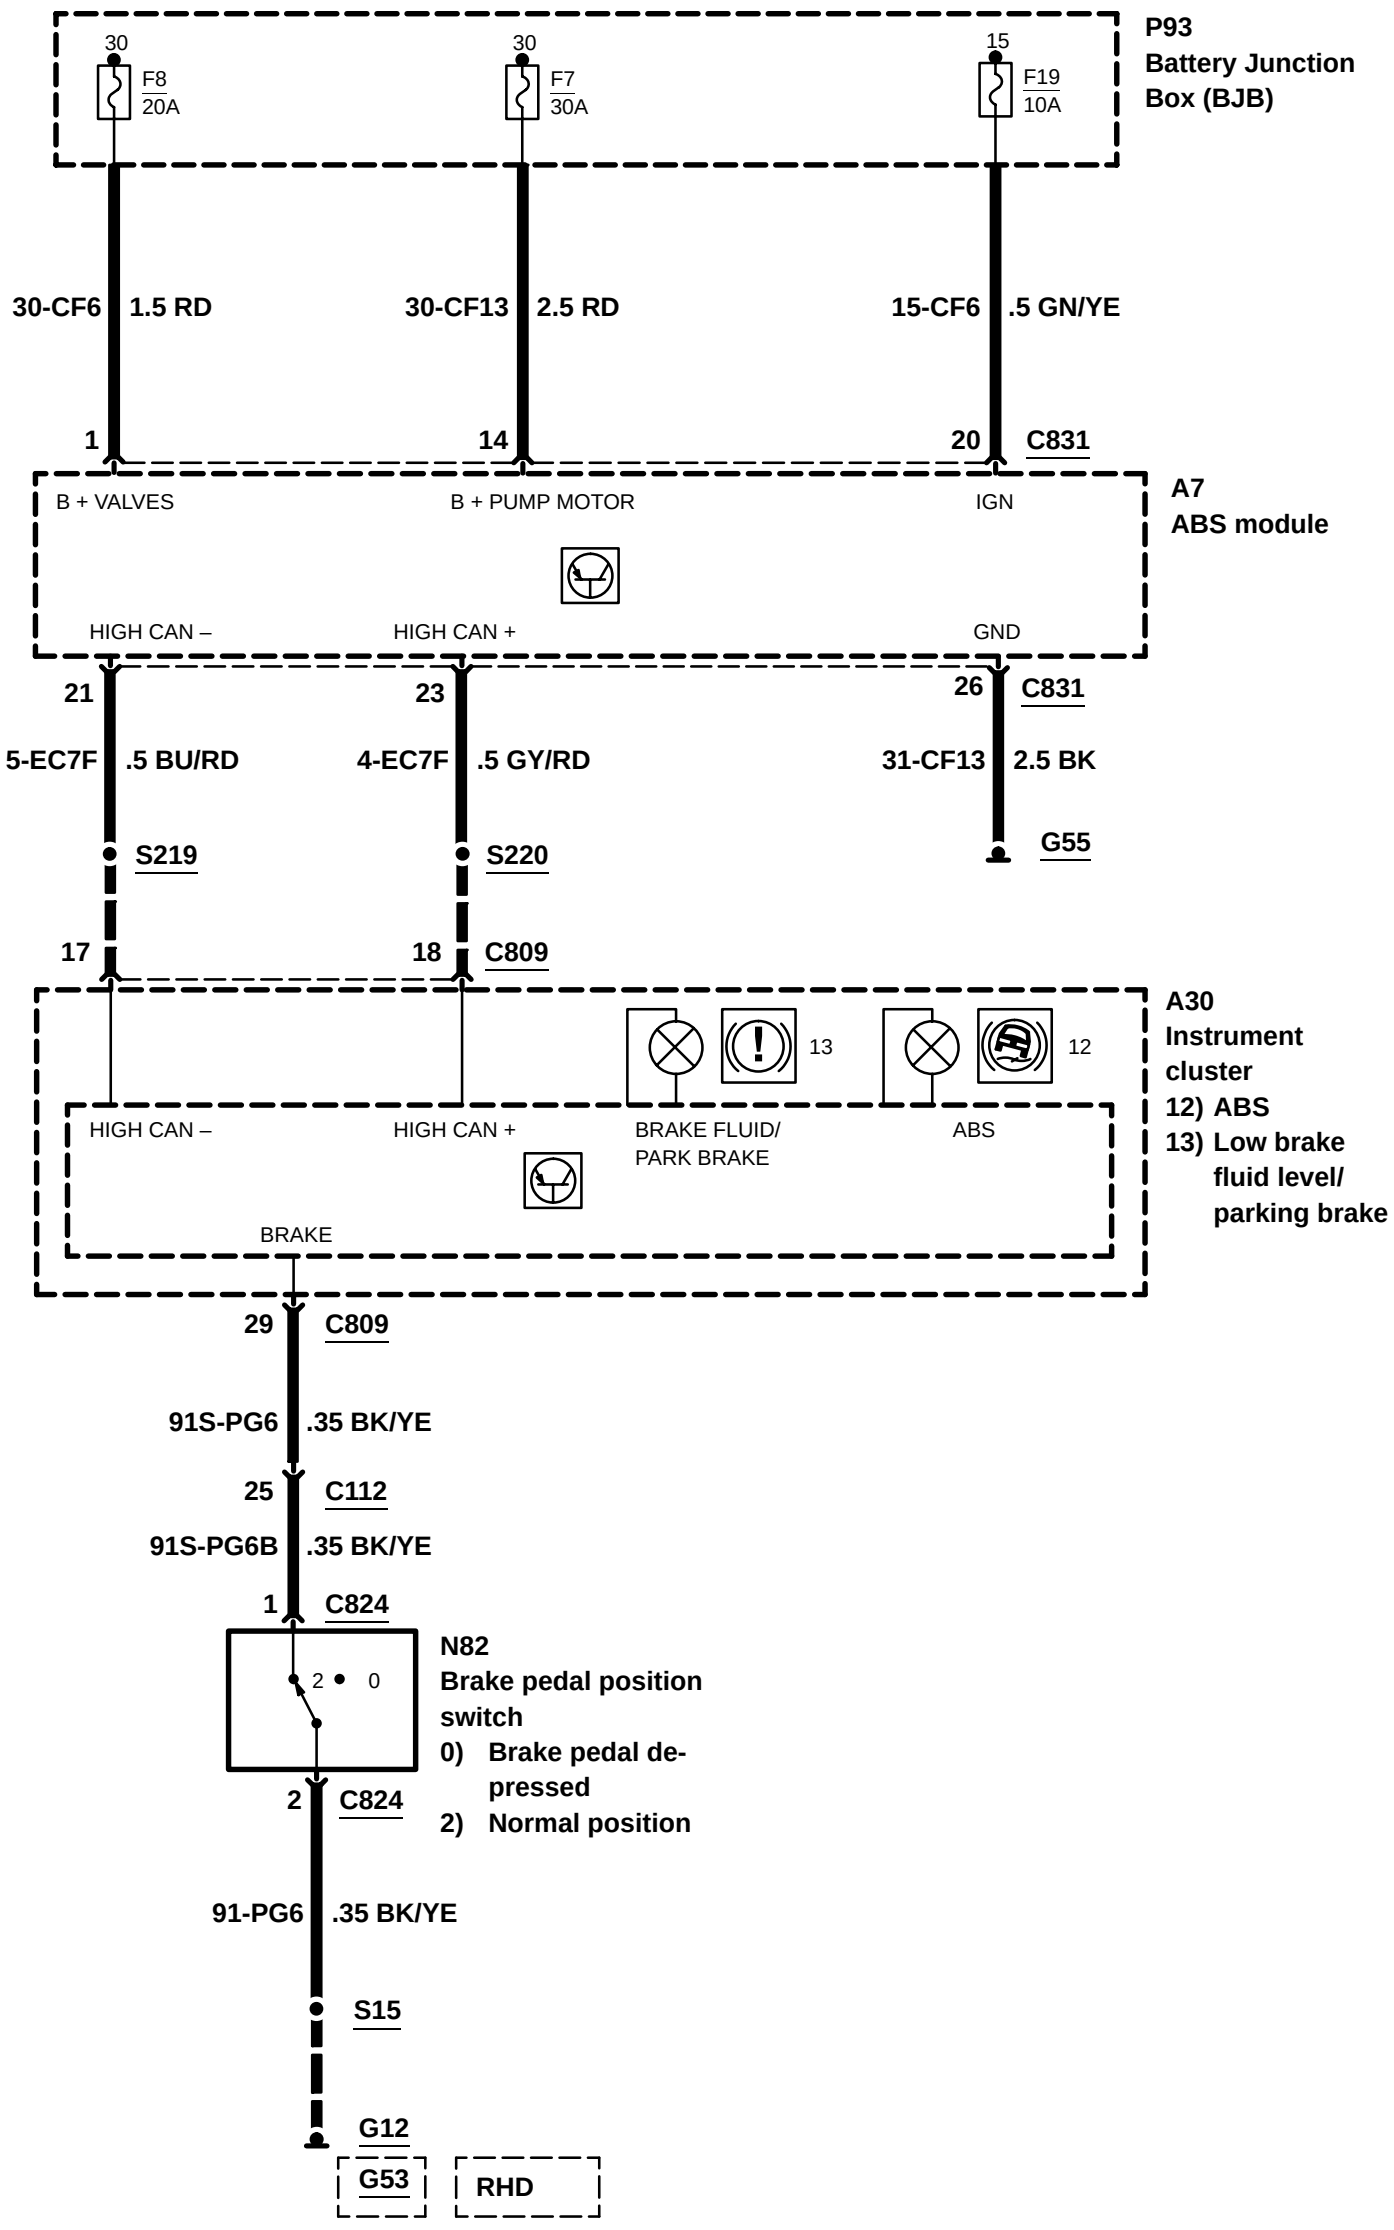


Anti–Lock Control

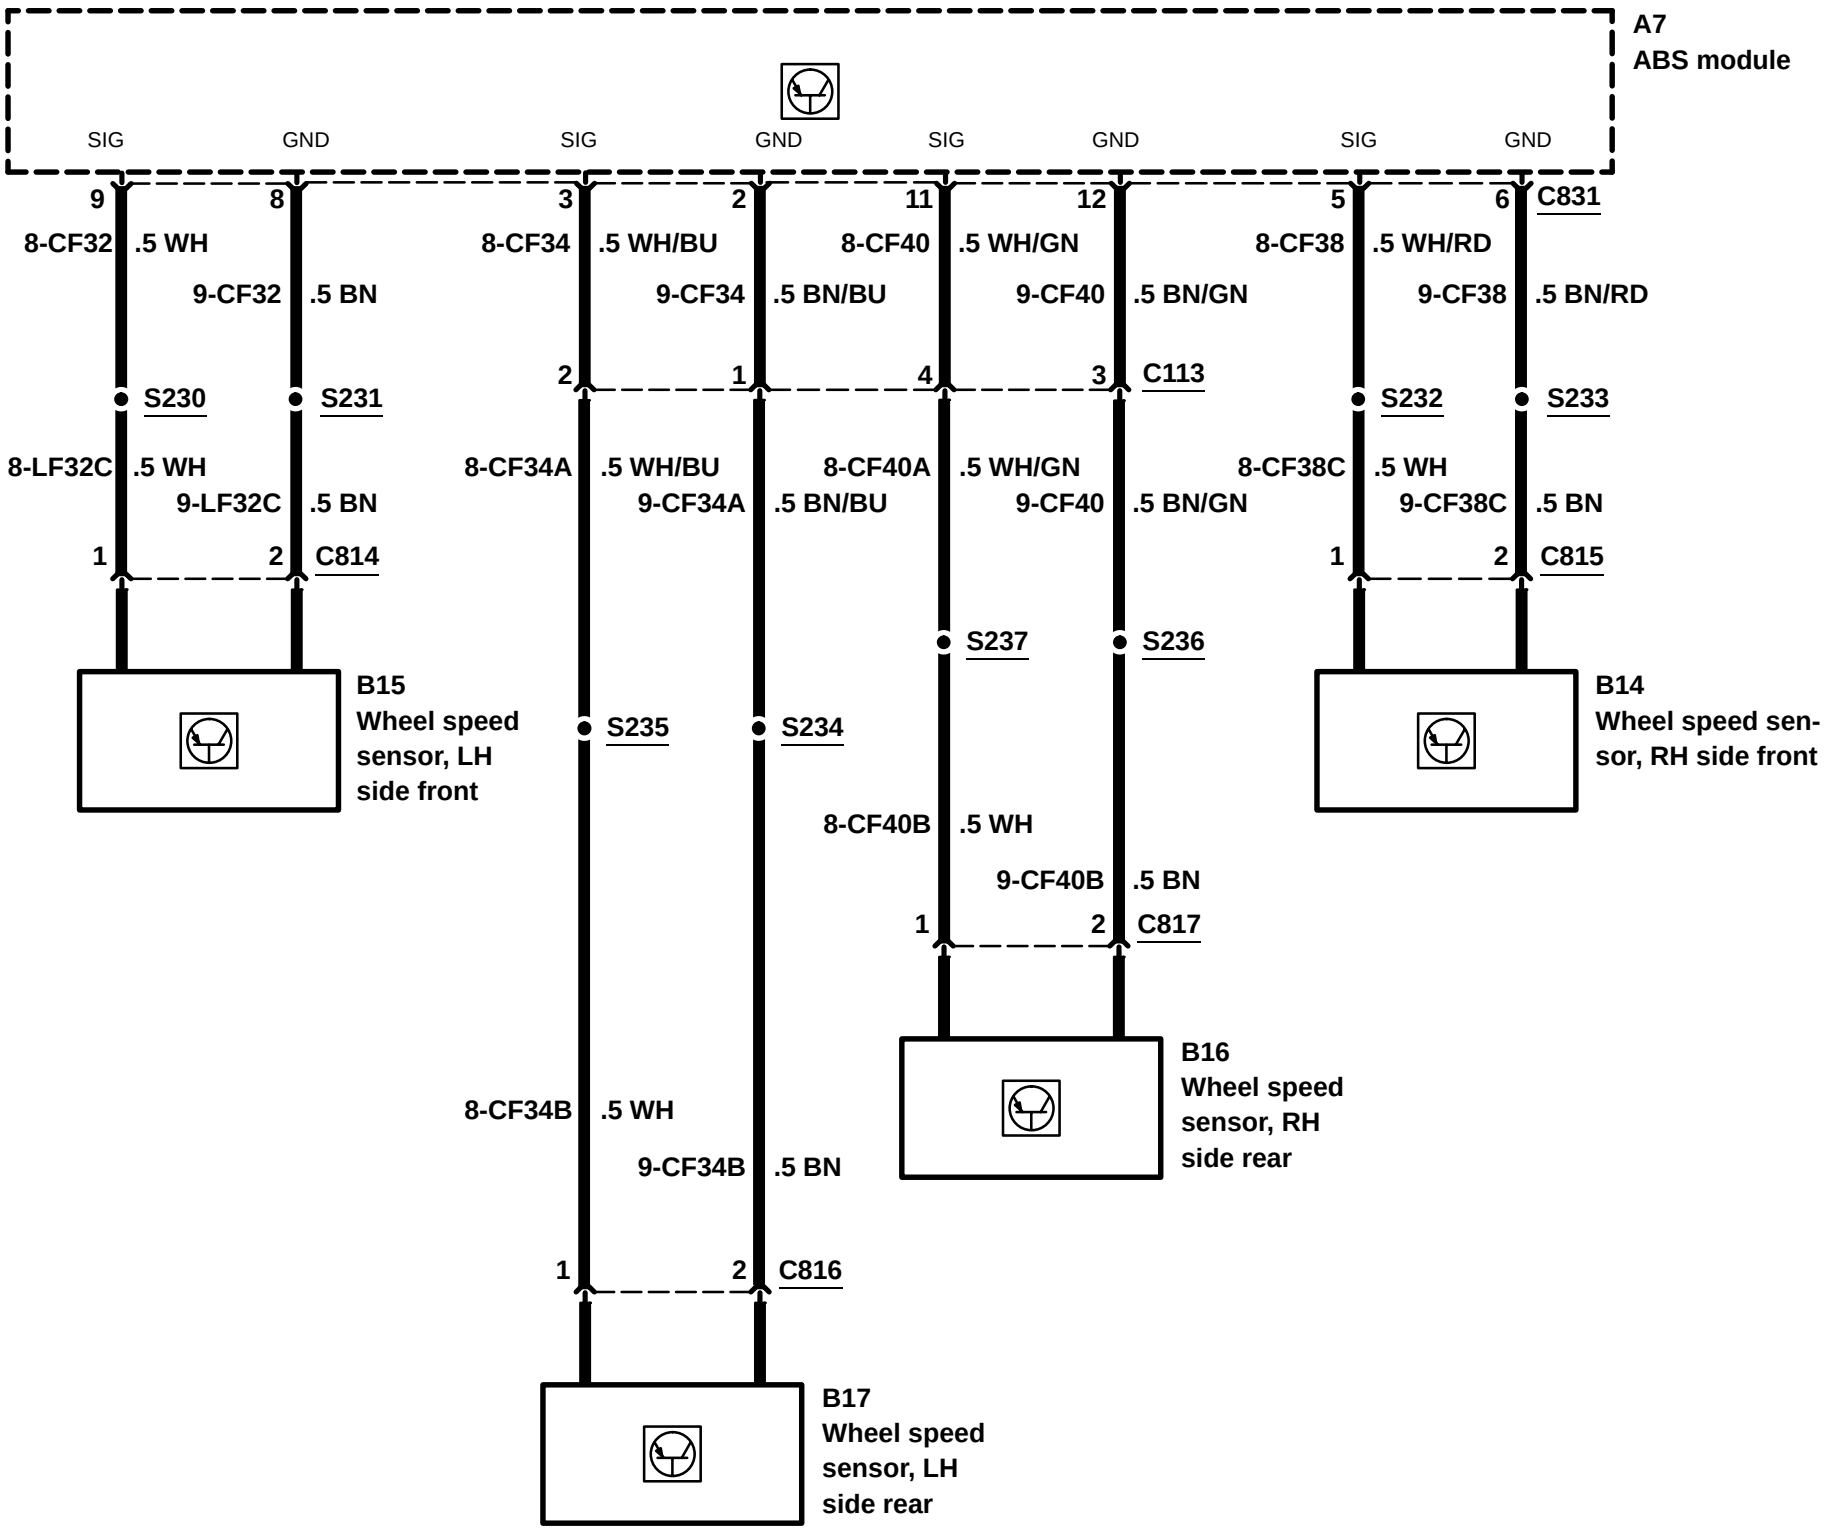


Anti–Lock Control – Stability Assist

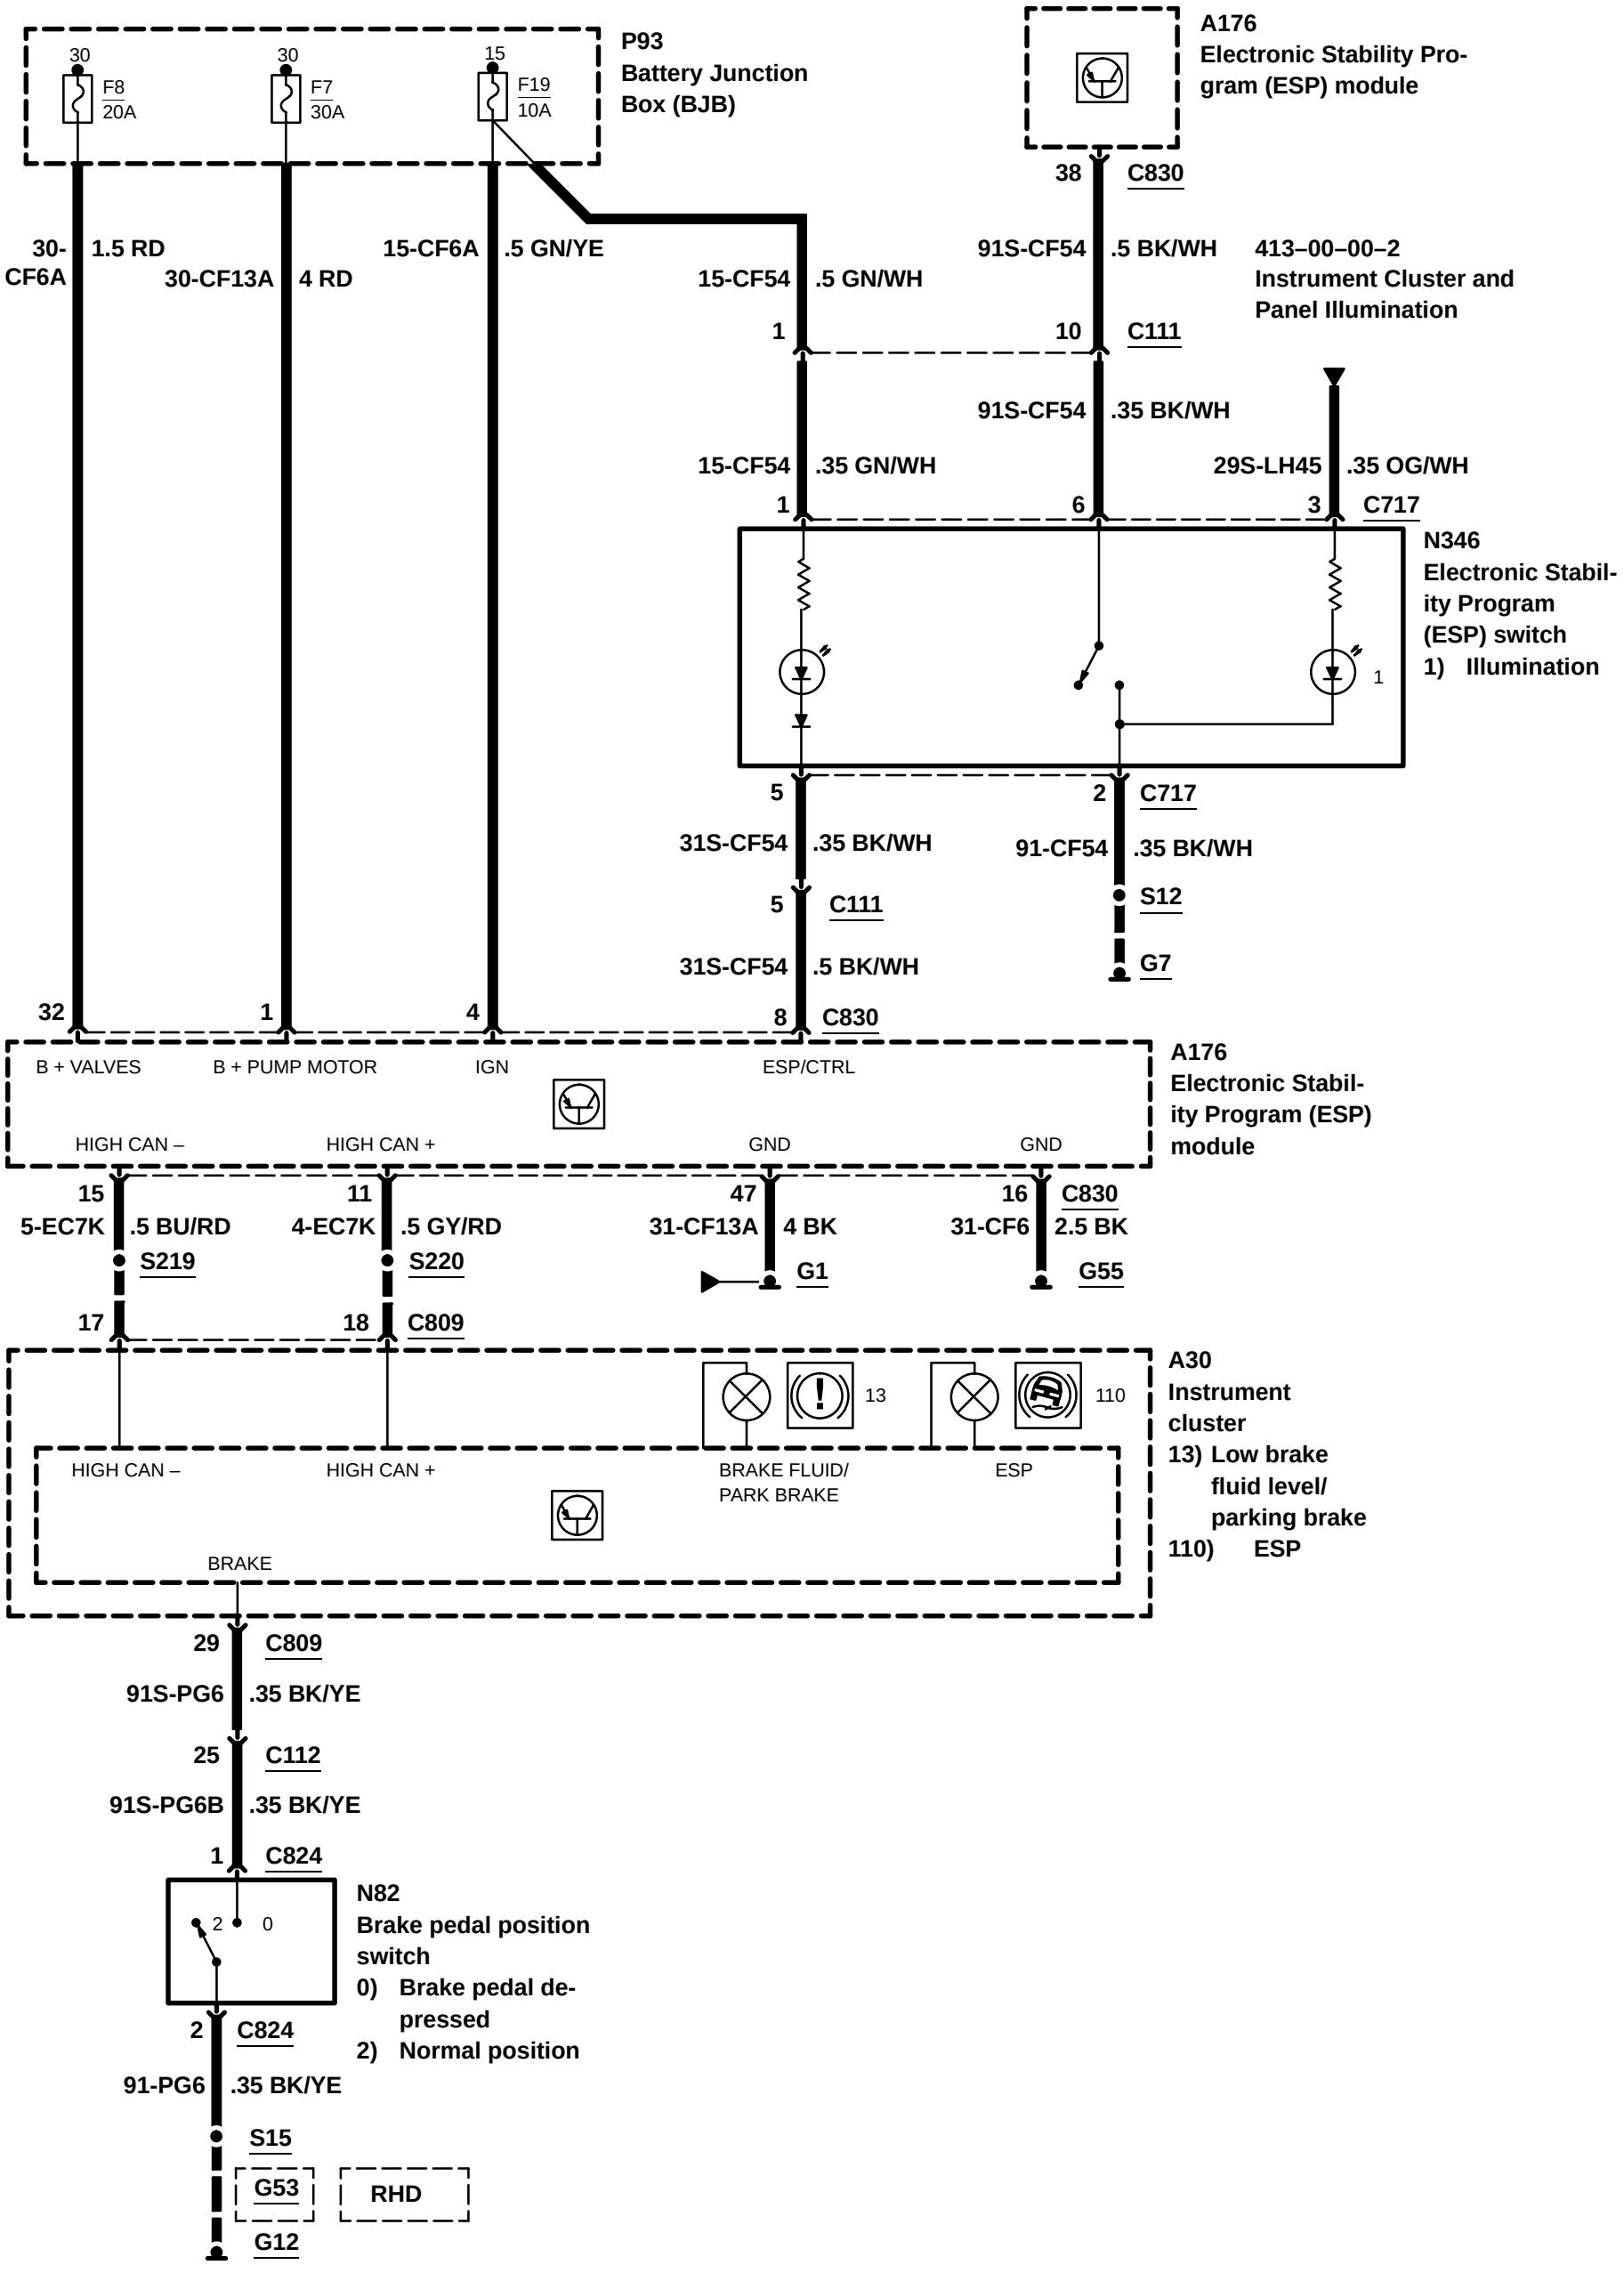


Anti–Lock Control – Stability Assist

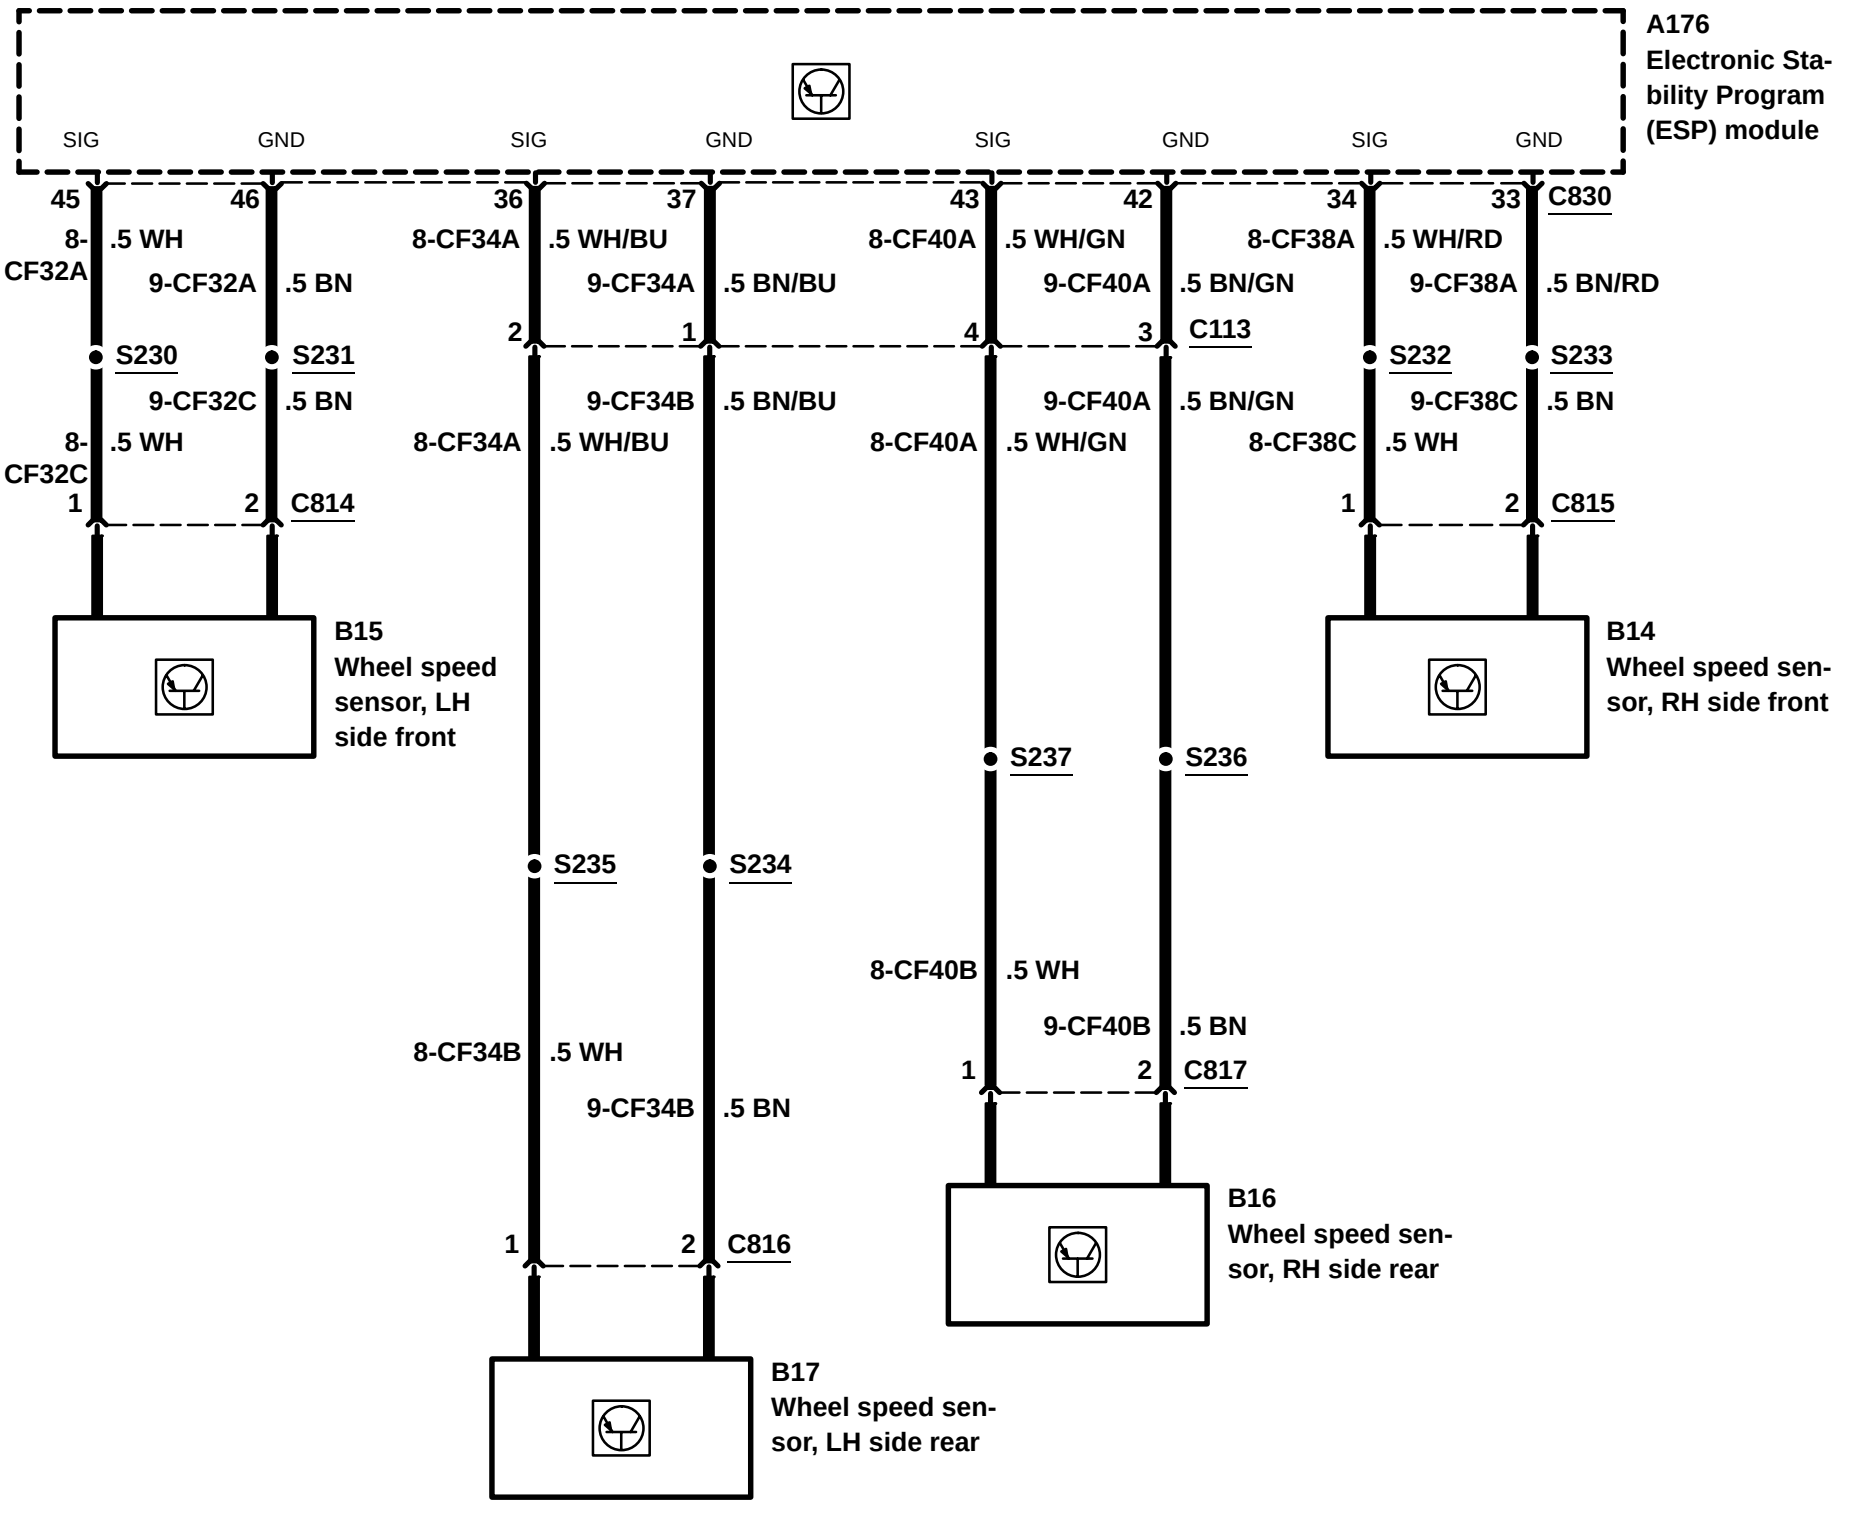


Anti–Lock Control – Stability Assist

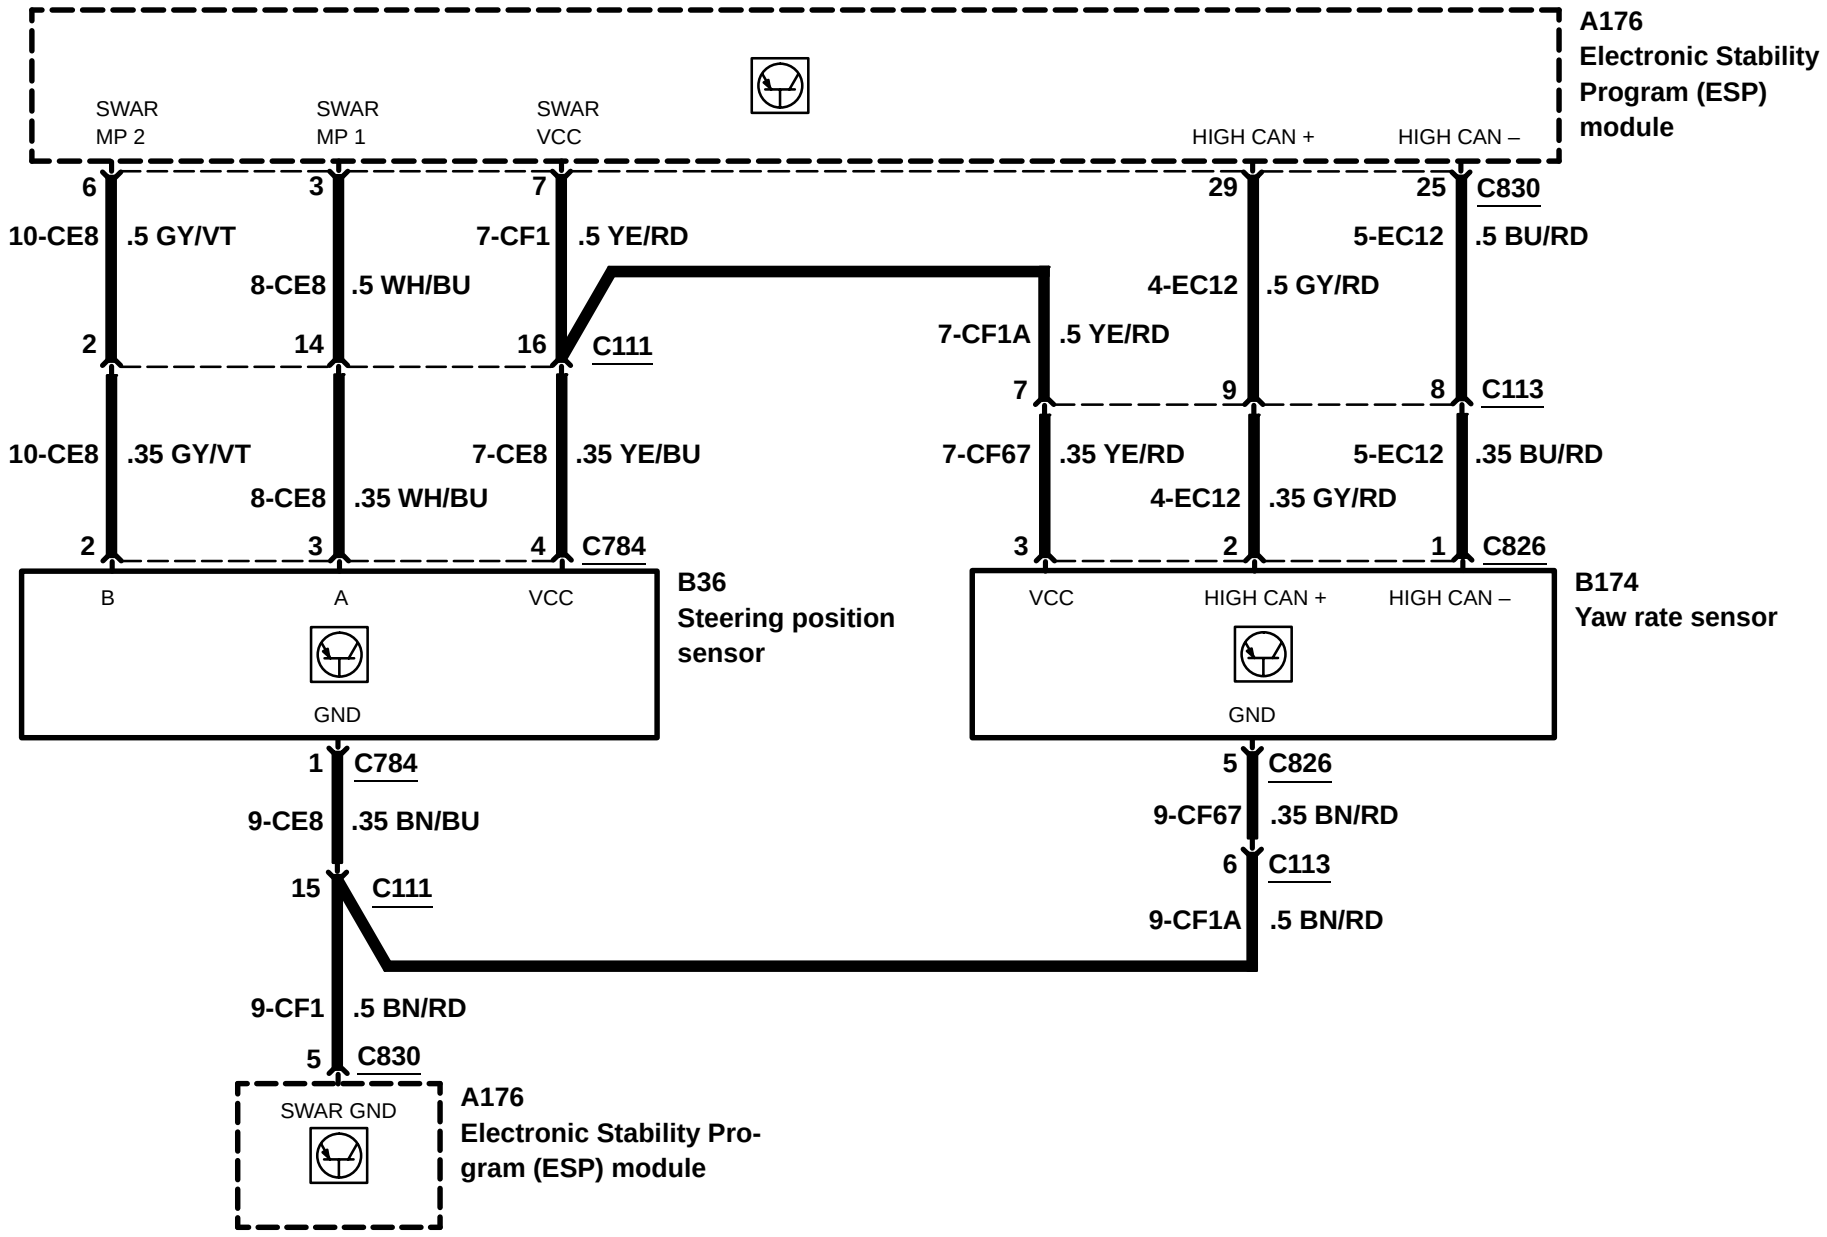


Power Steering

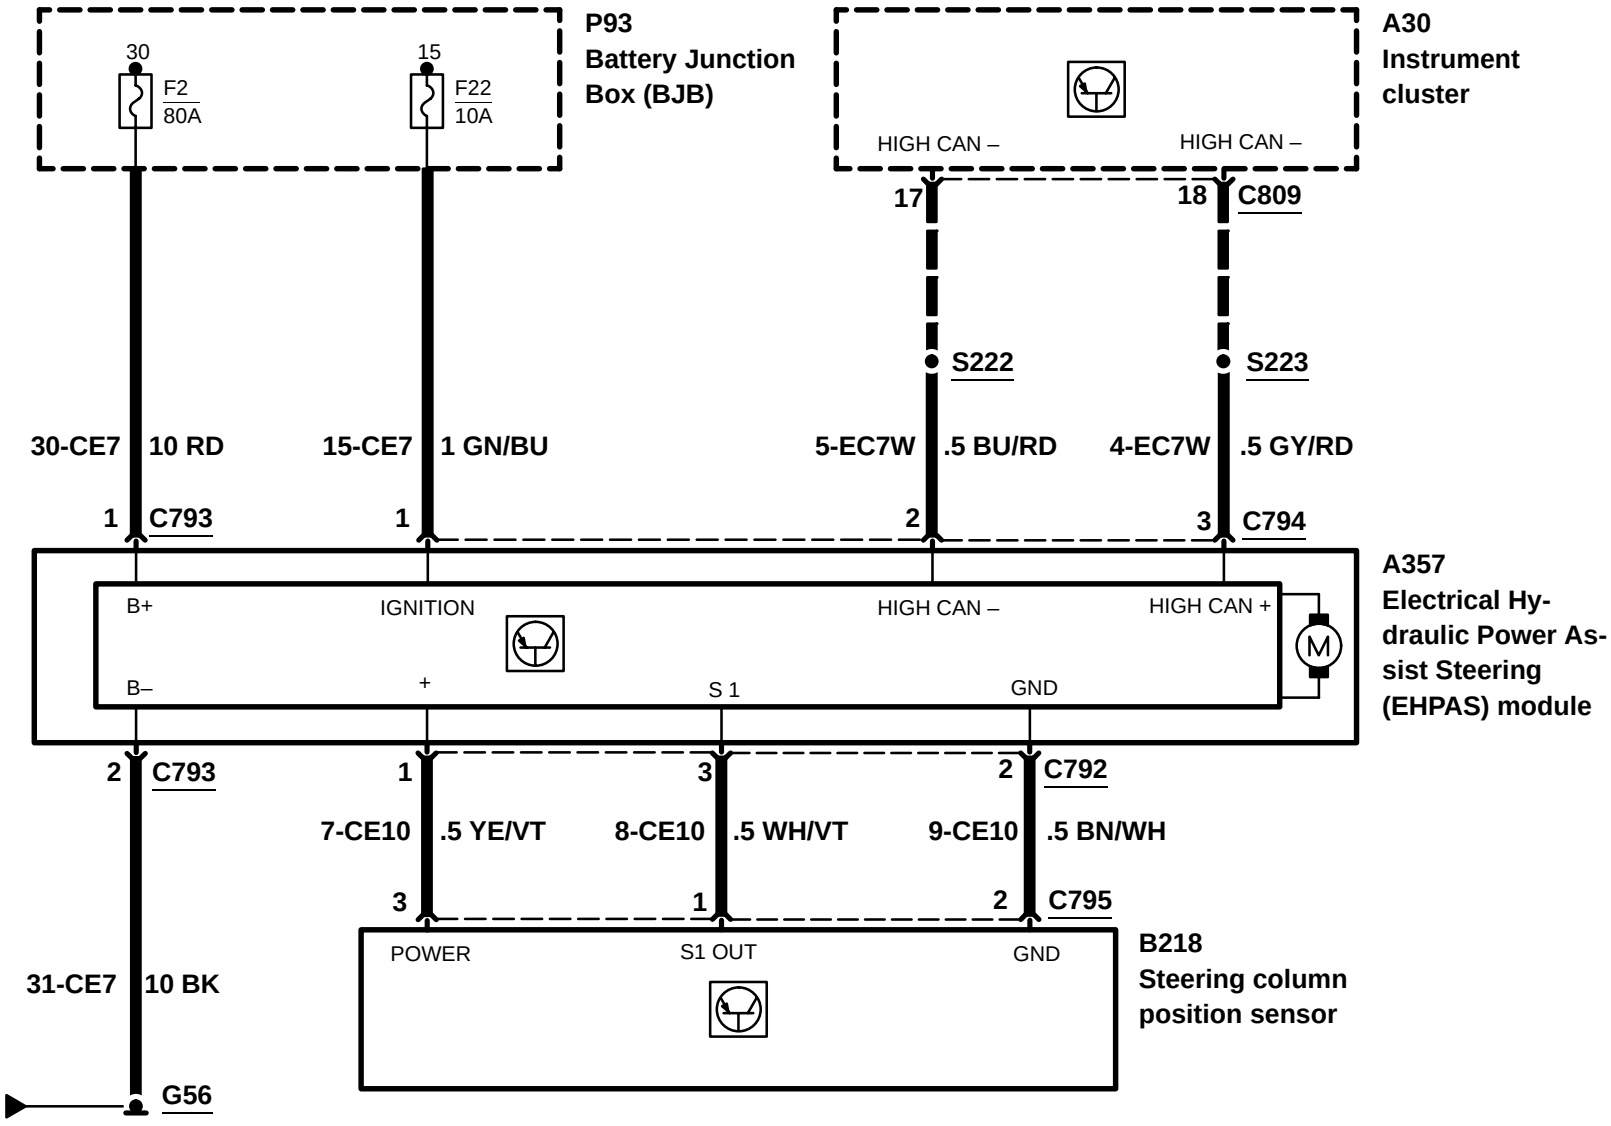


Engine Cooling – 1.6L (Z6)

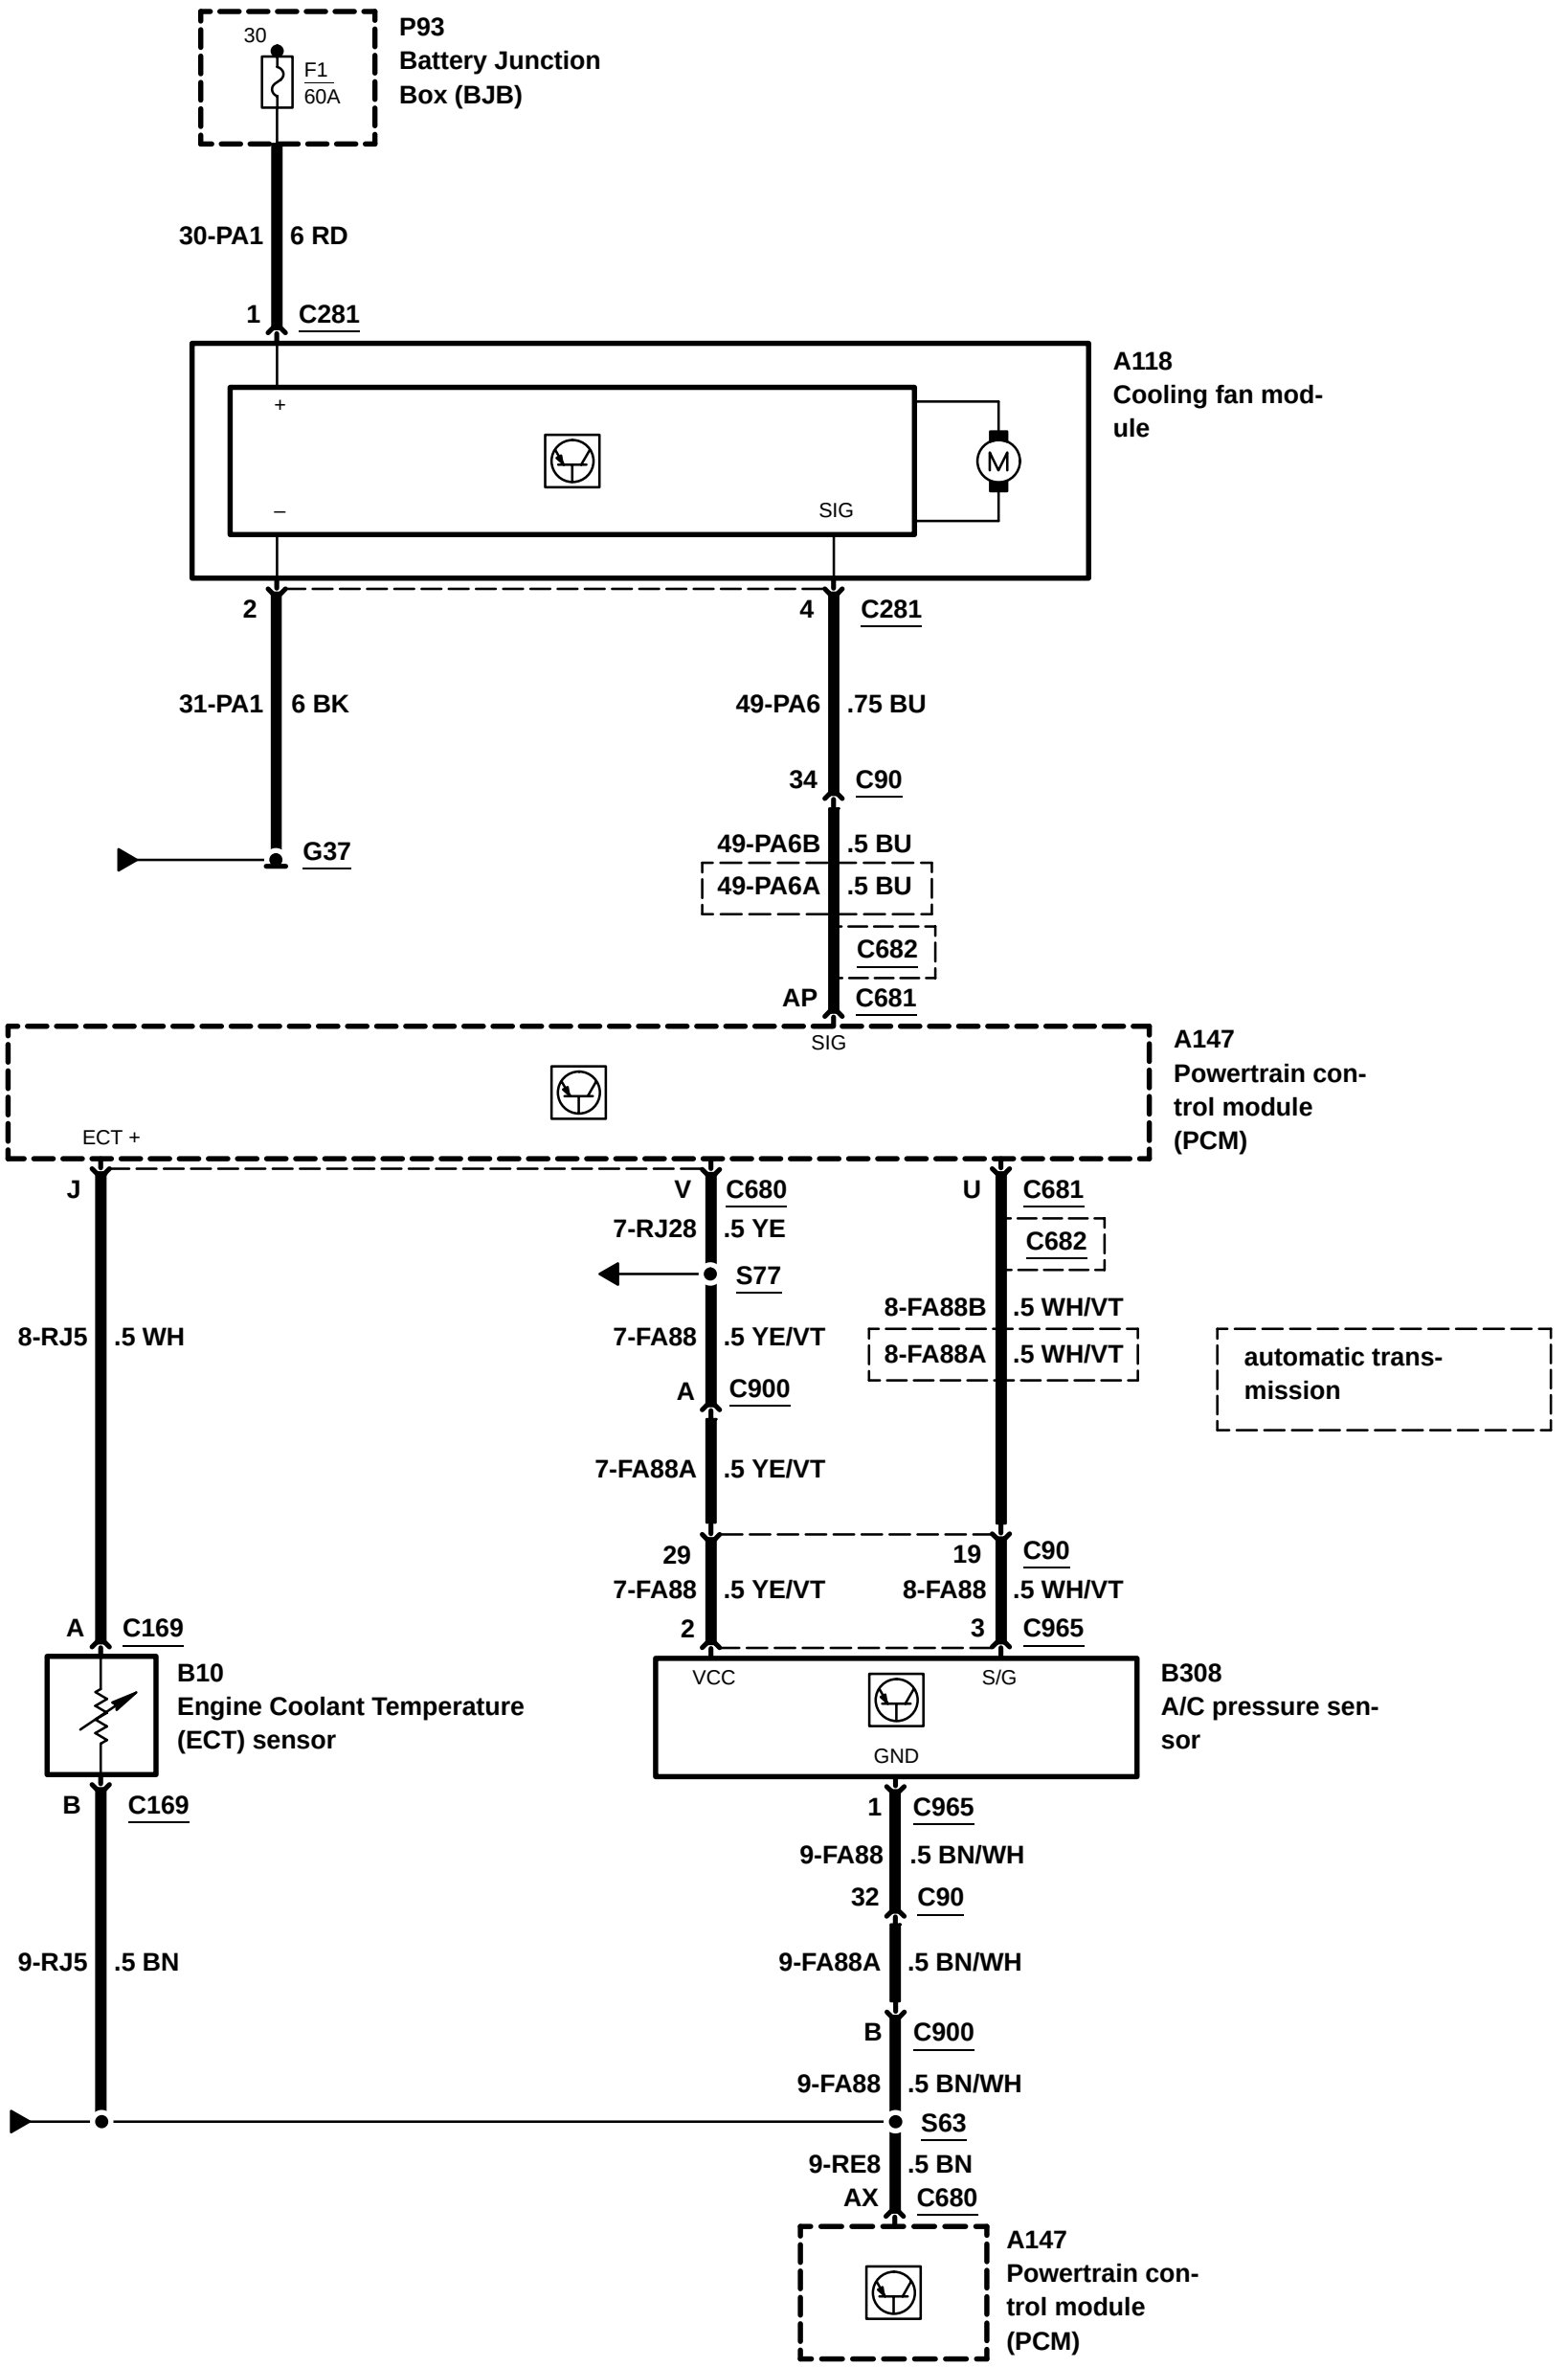


Engine Cooling – 1.8/2.0L Duratec–HE (MI4)

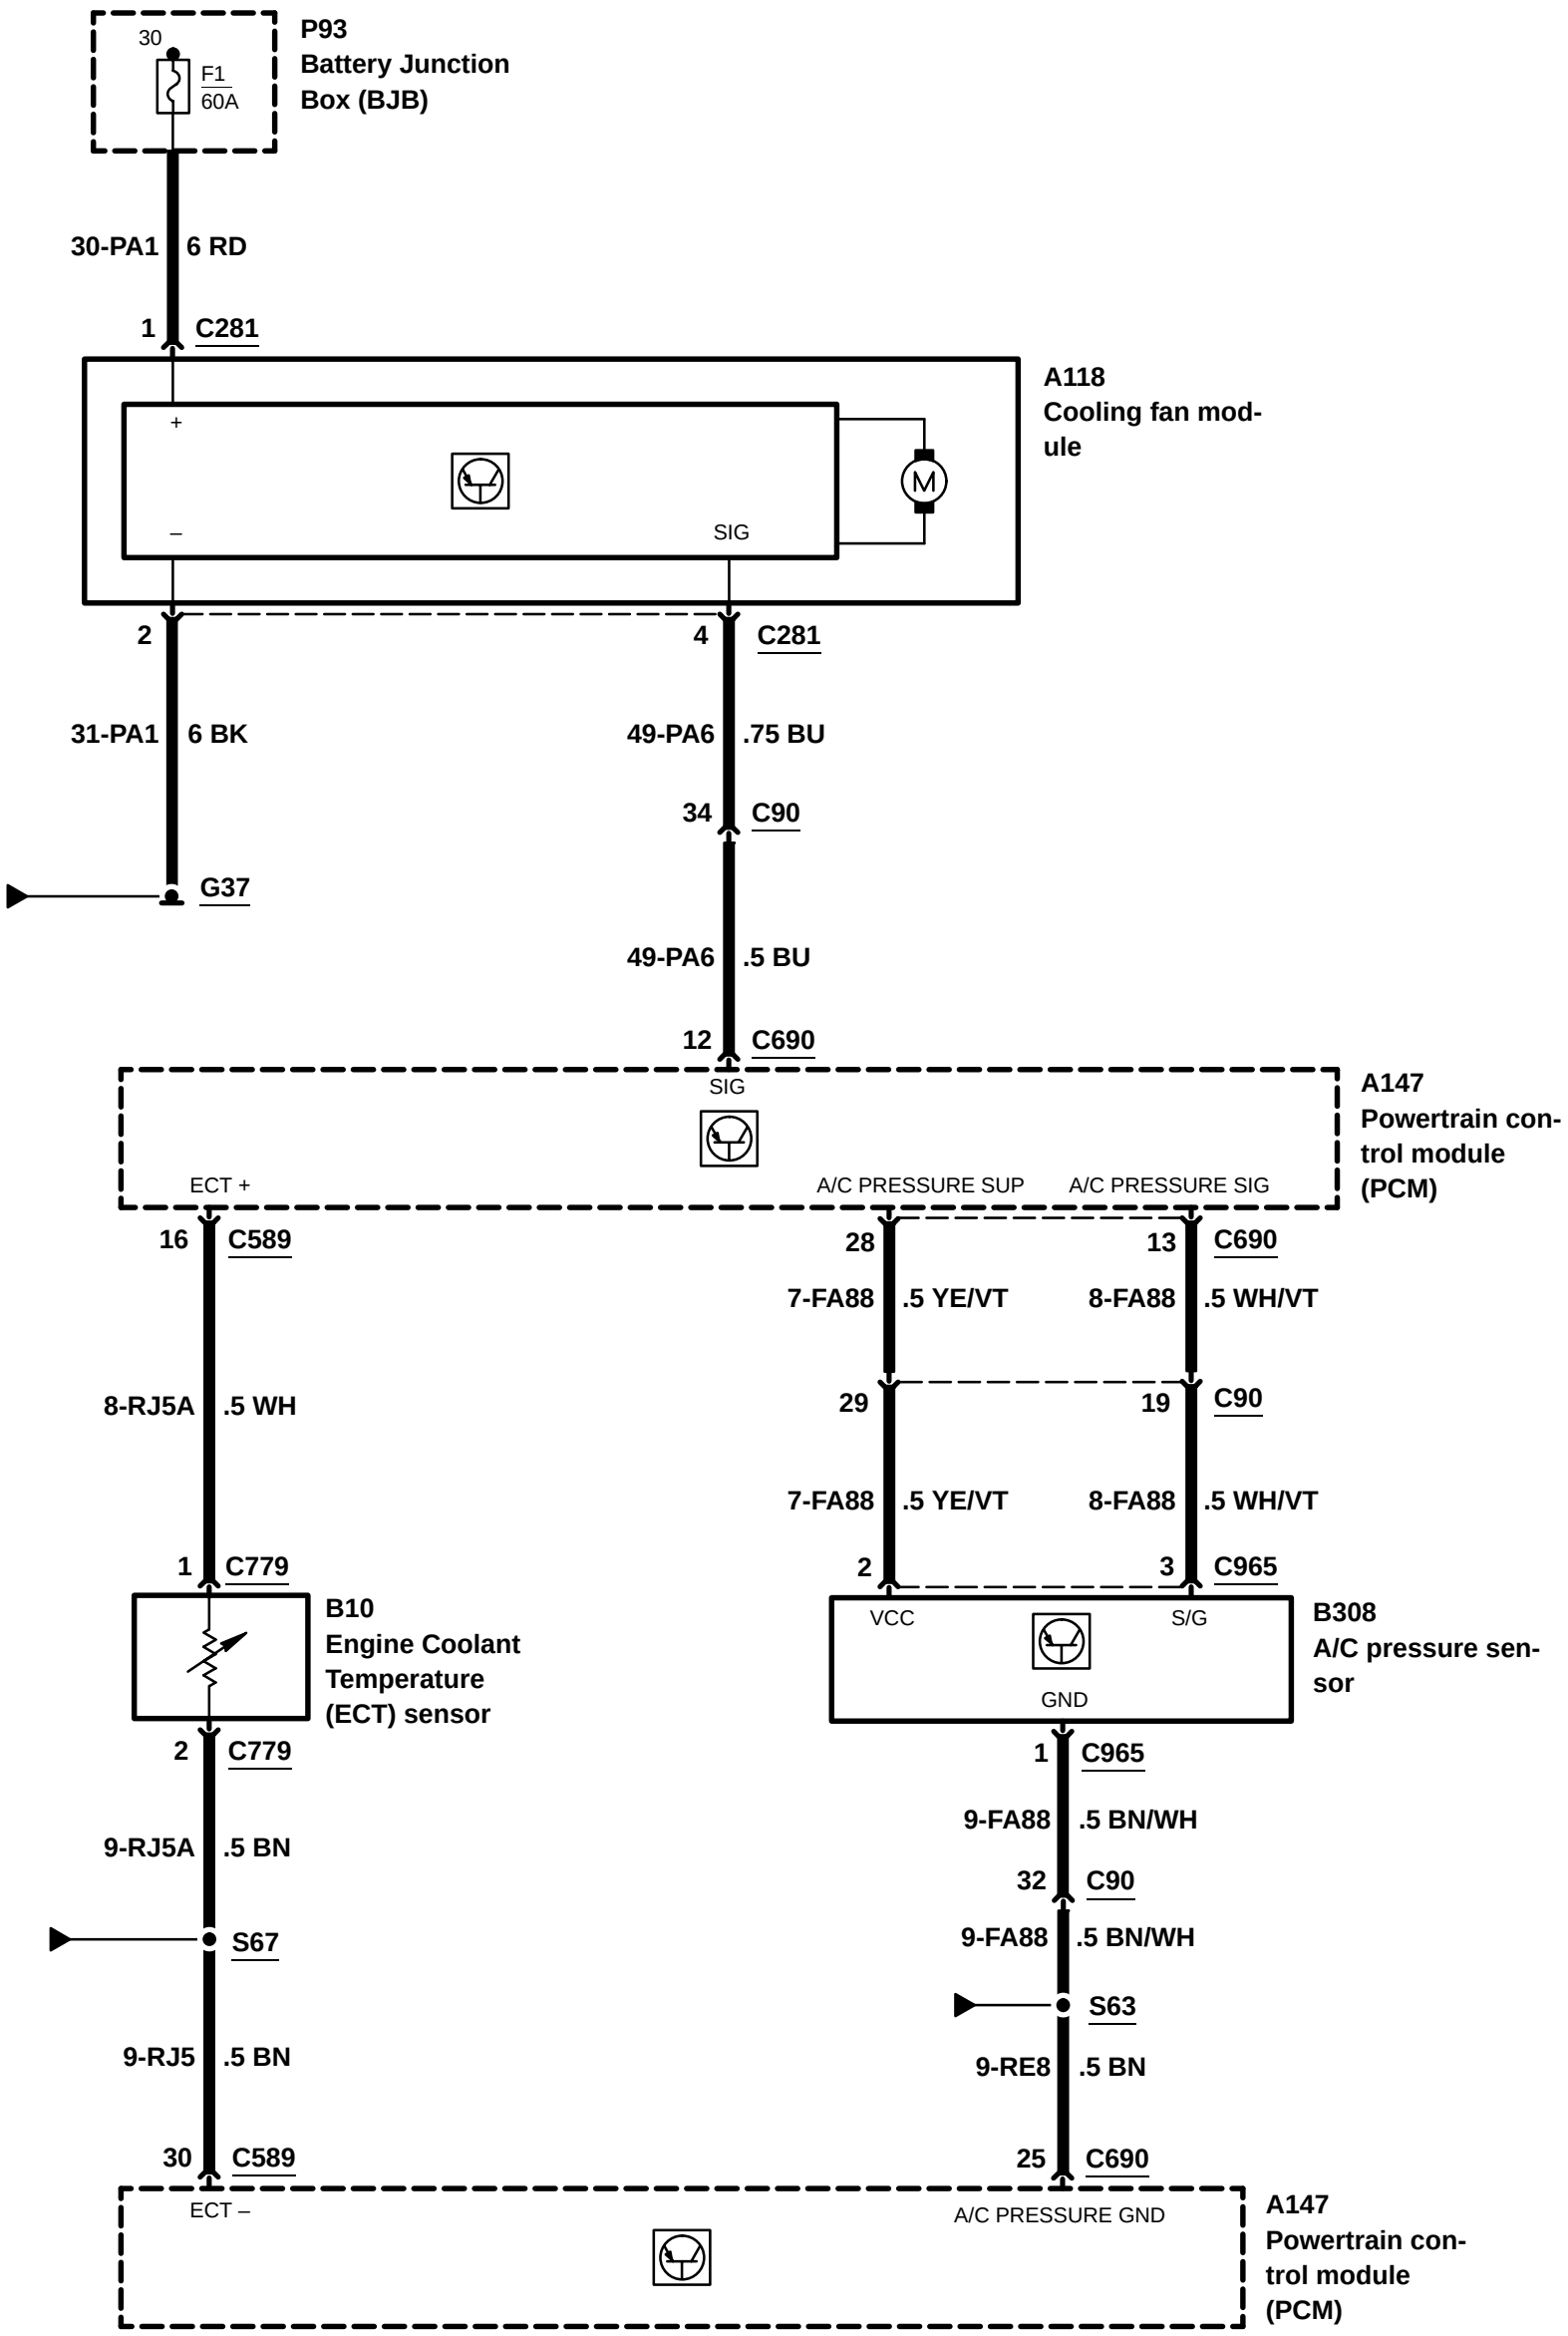


Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel

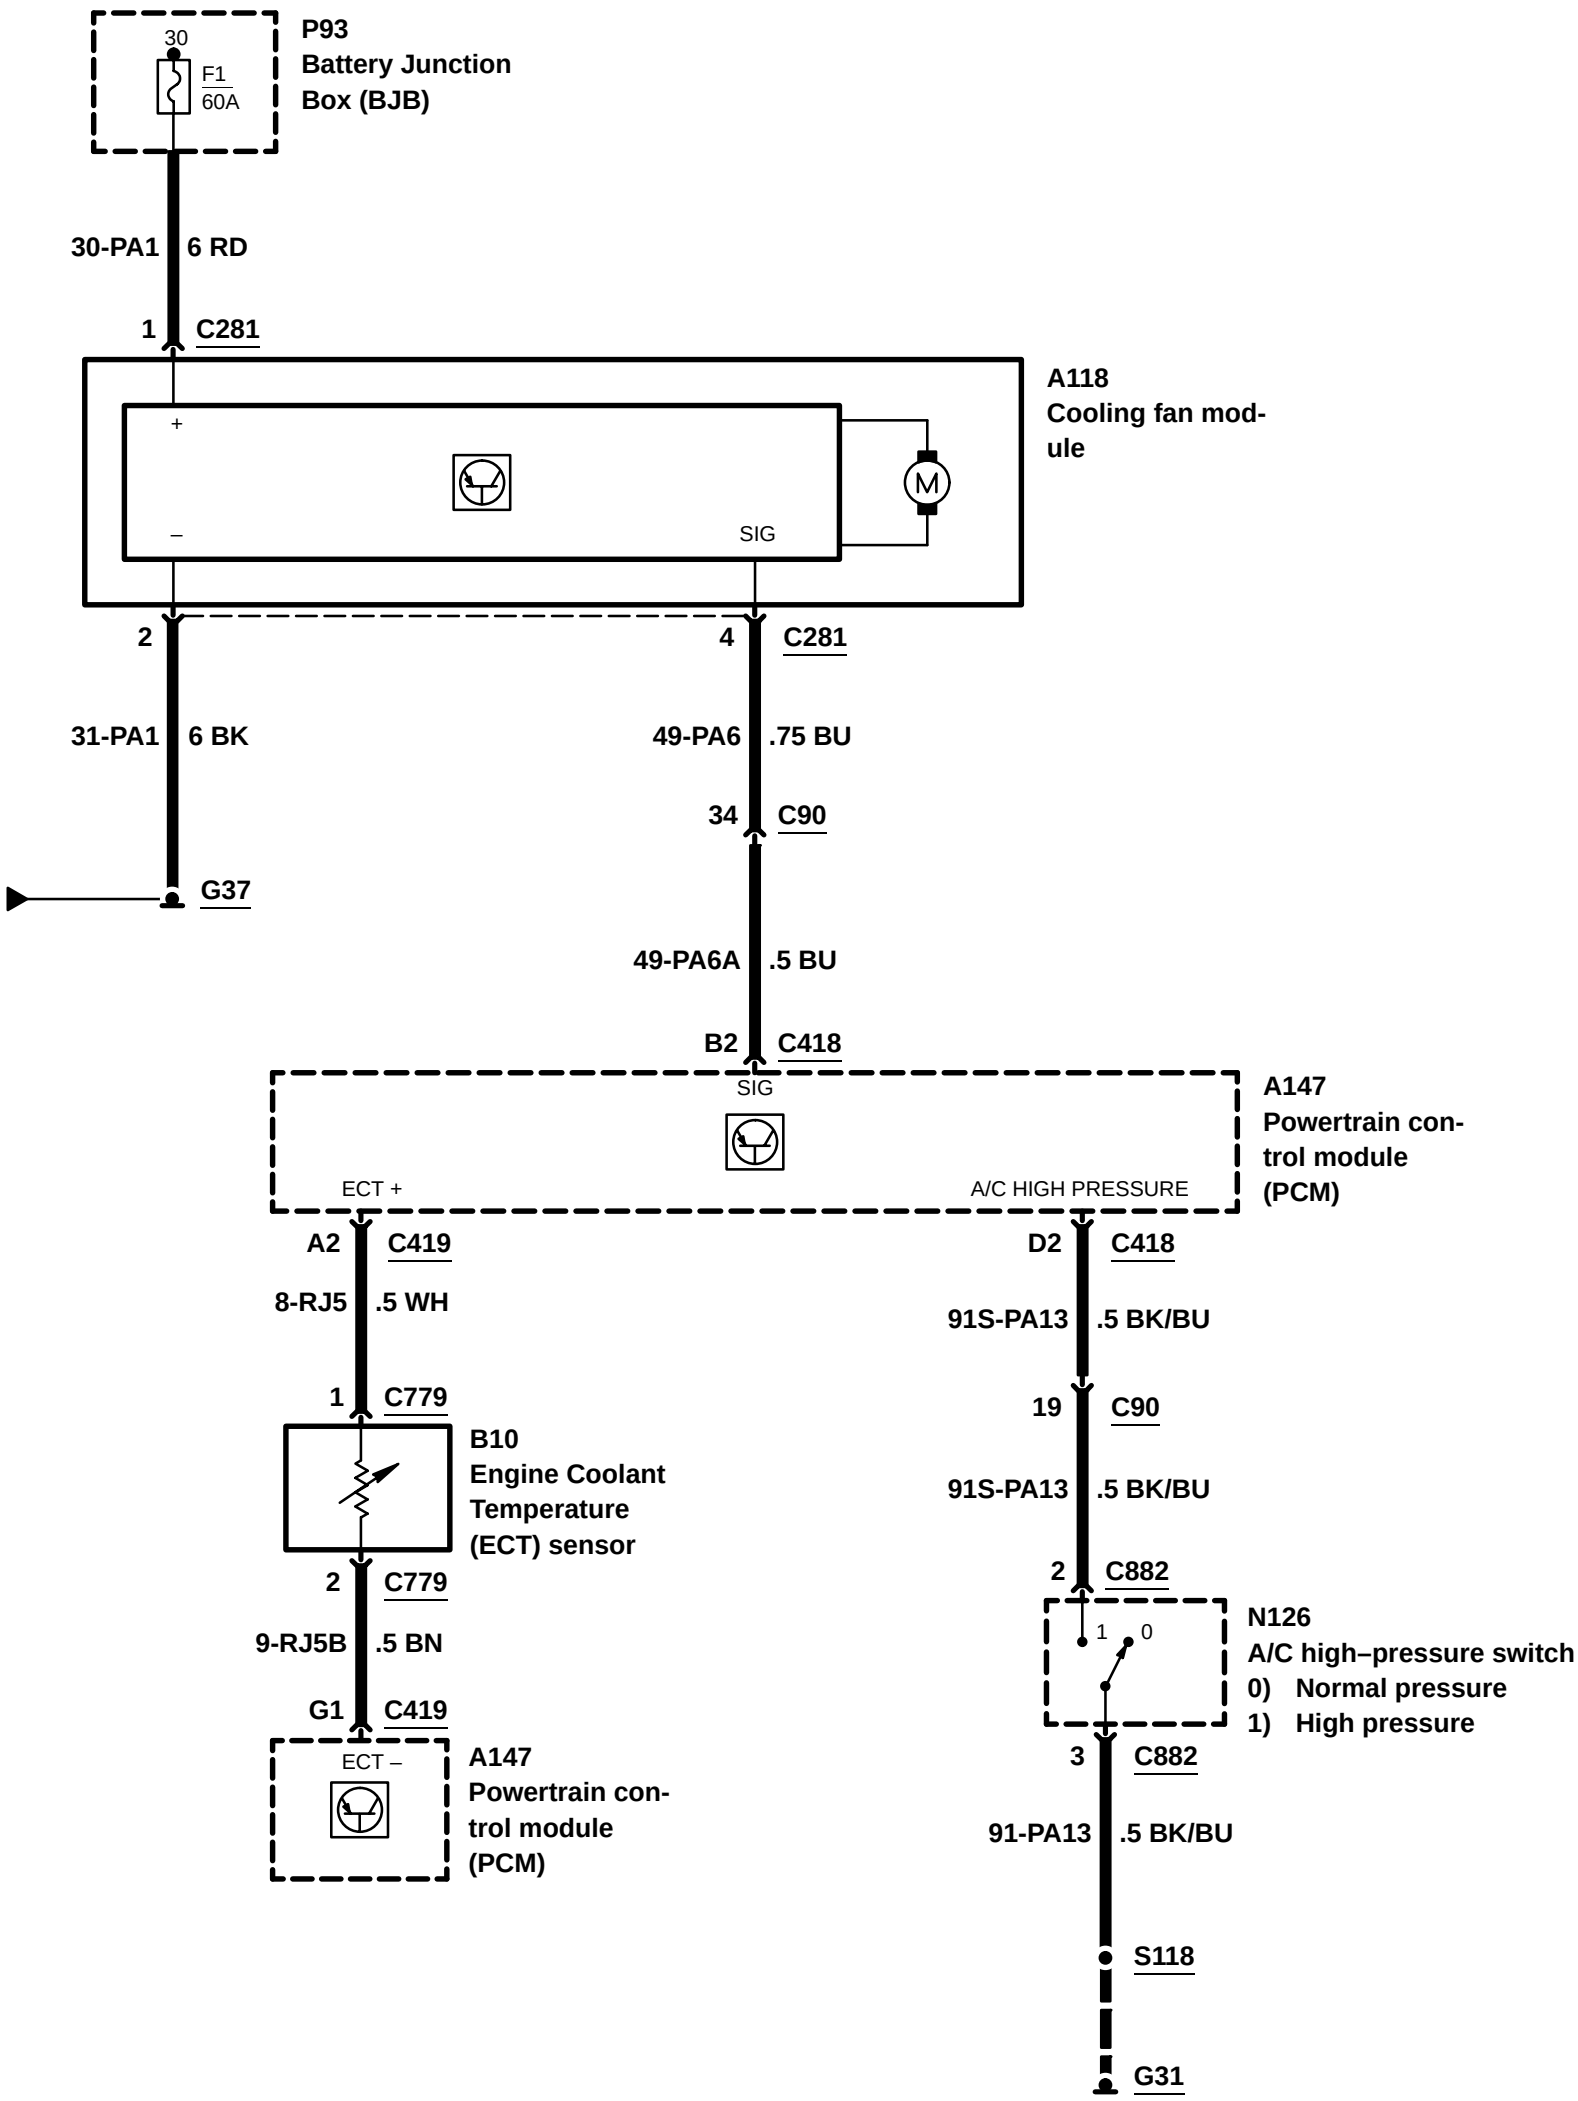


Fuel Charging and Controls – 1.6L (Z6)

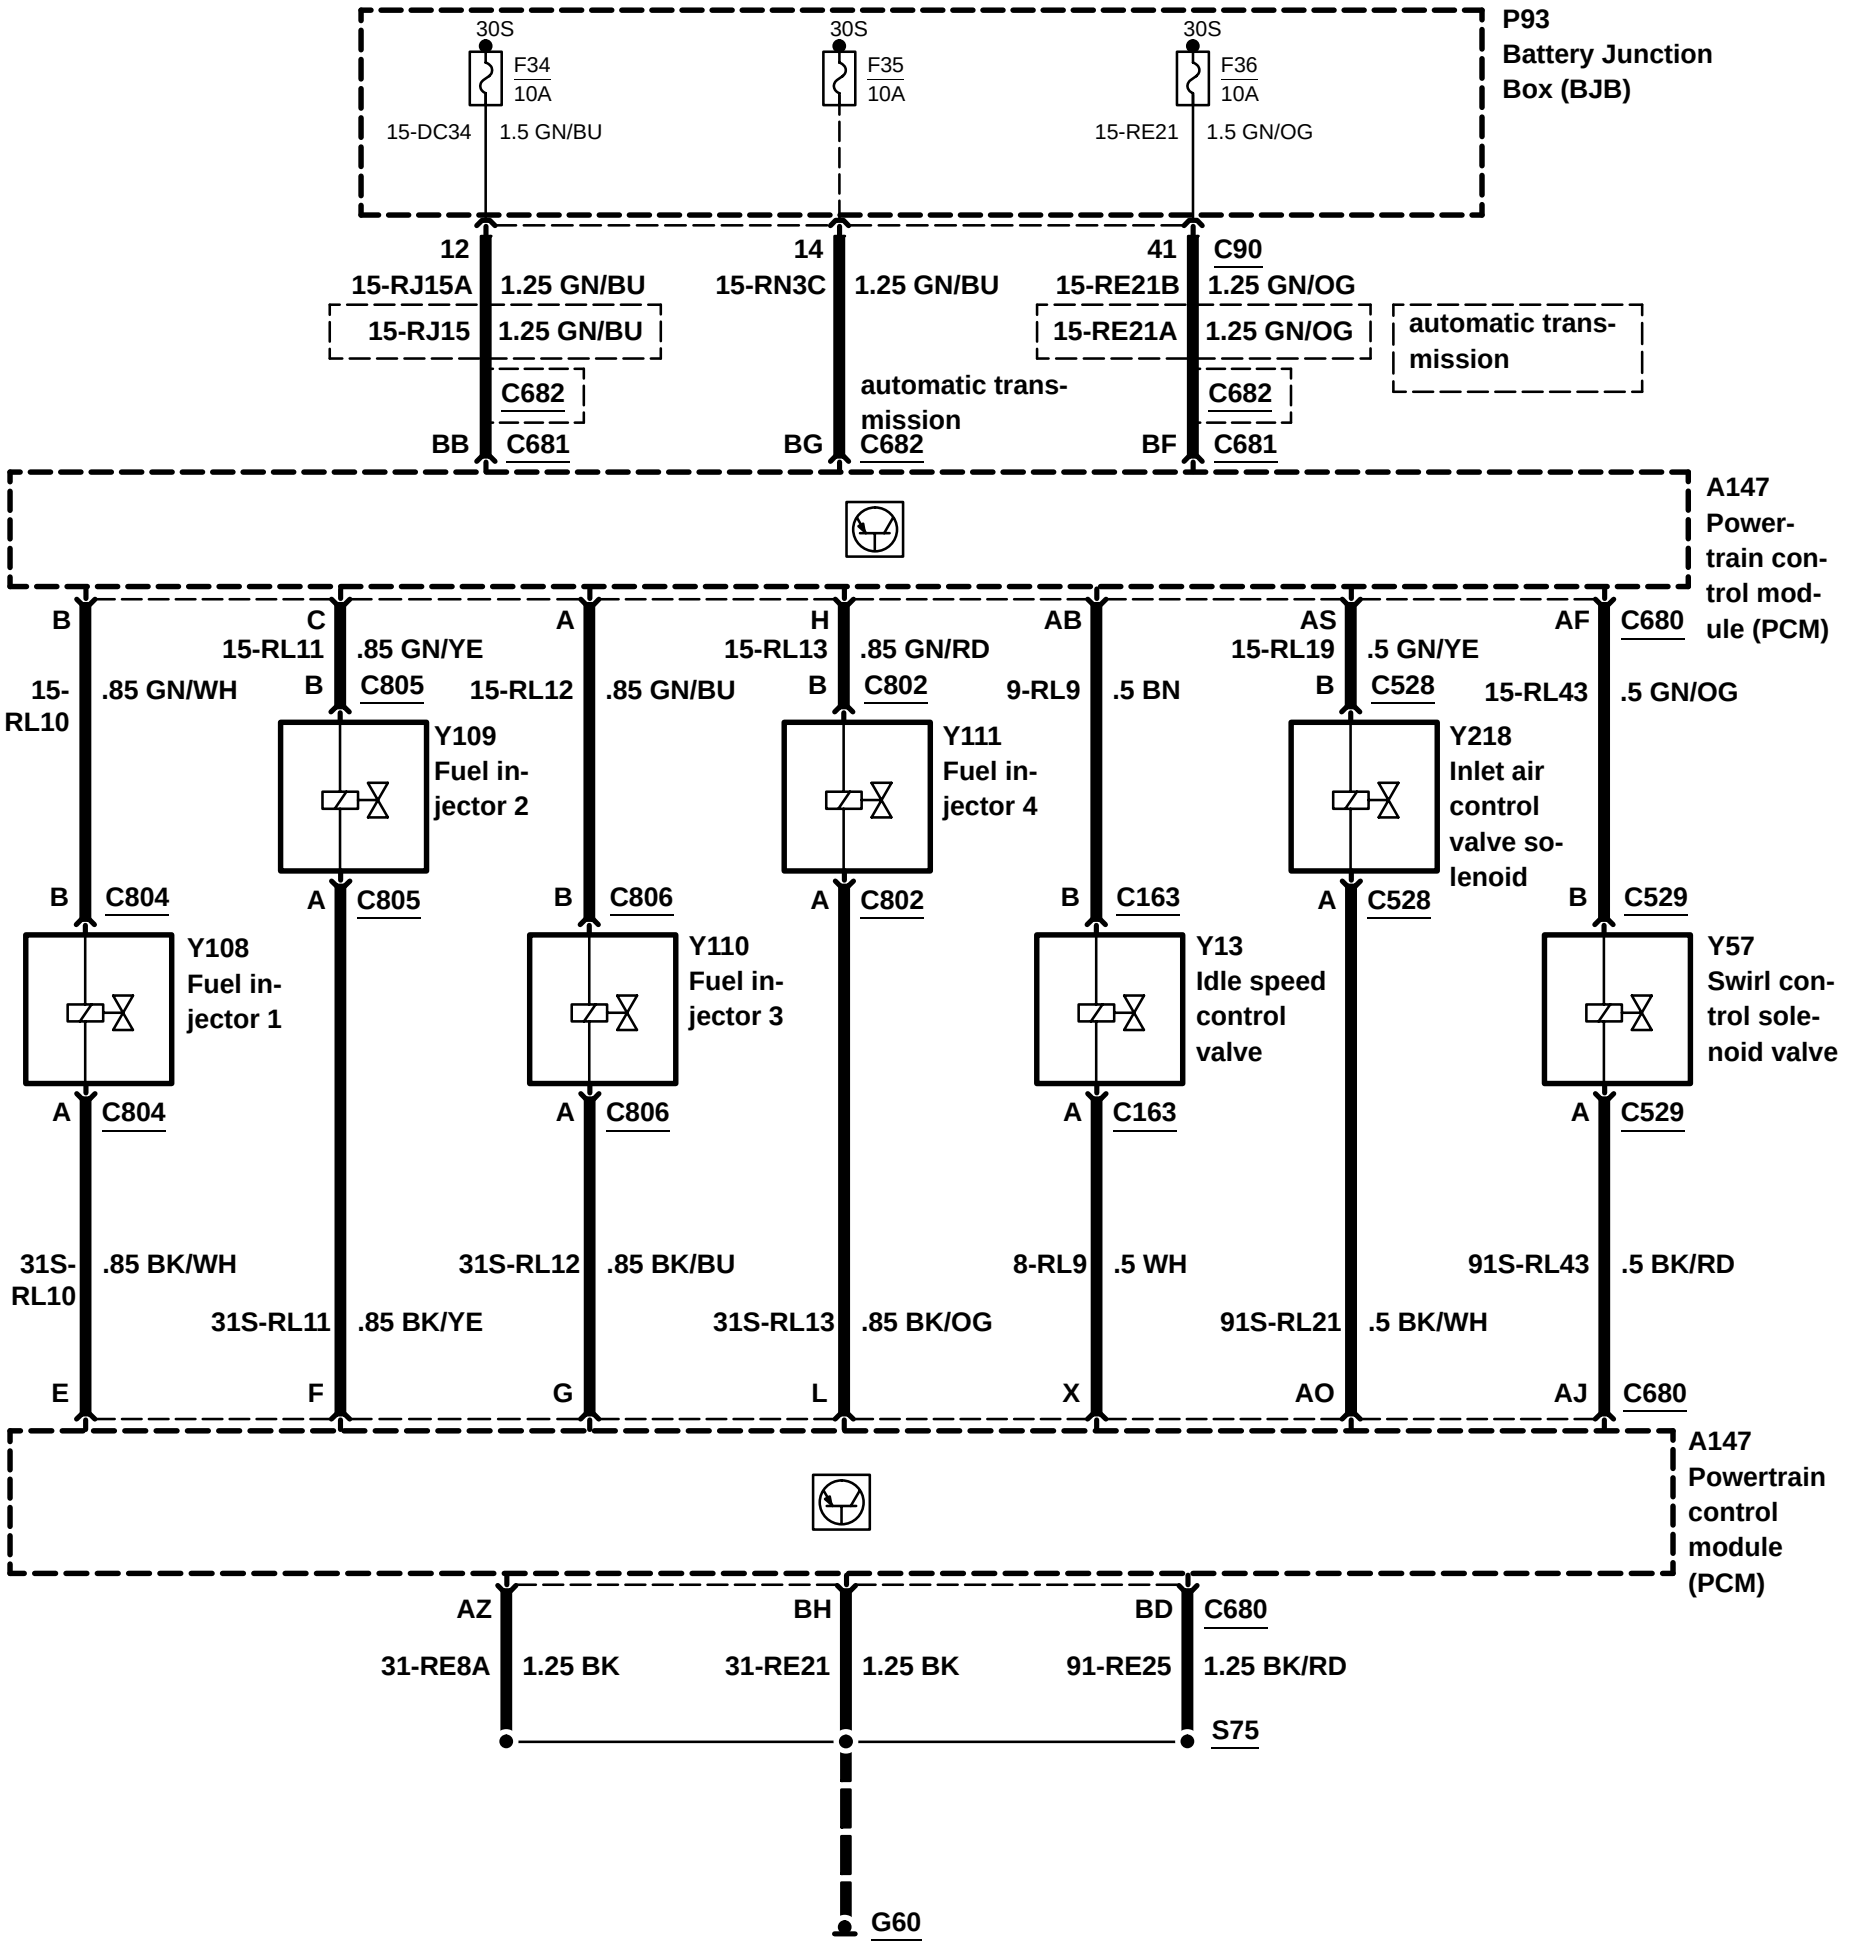


Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)

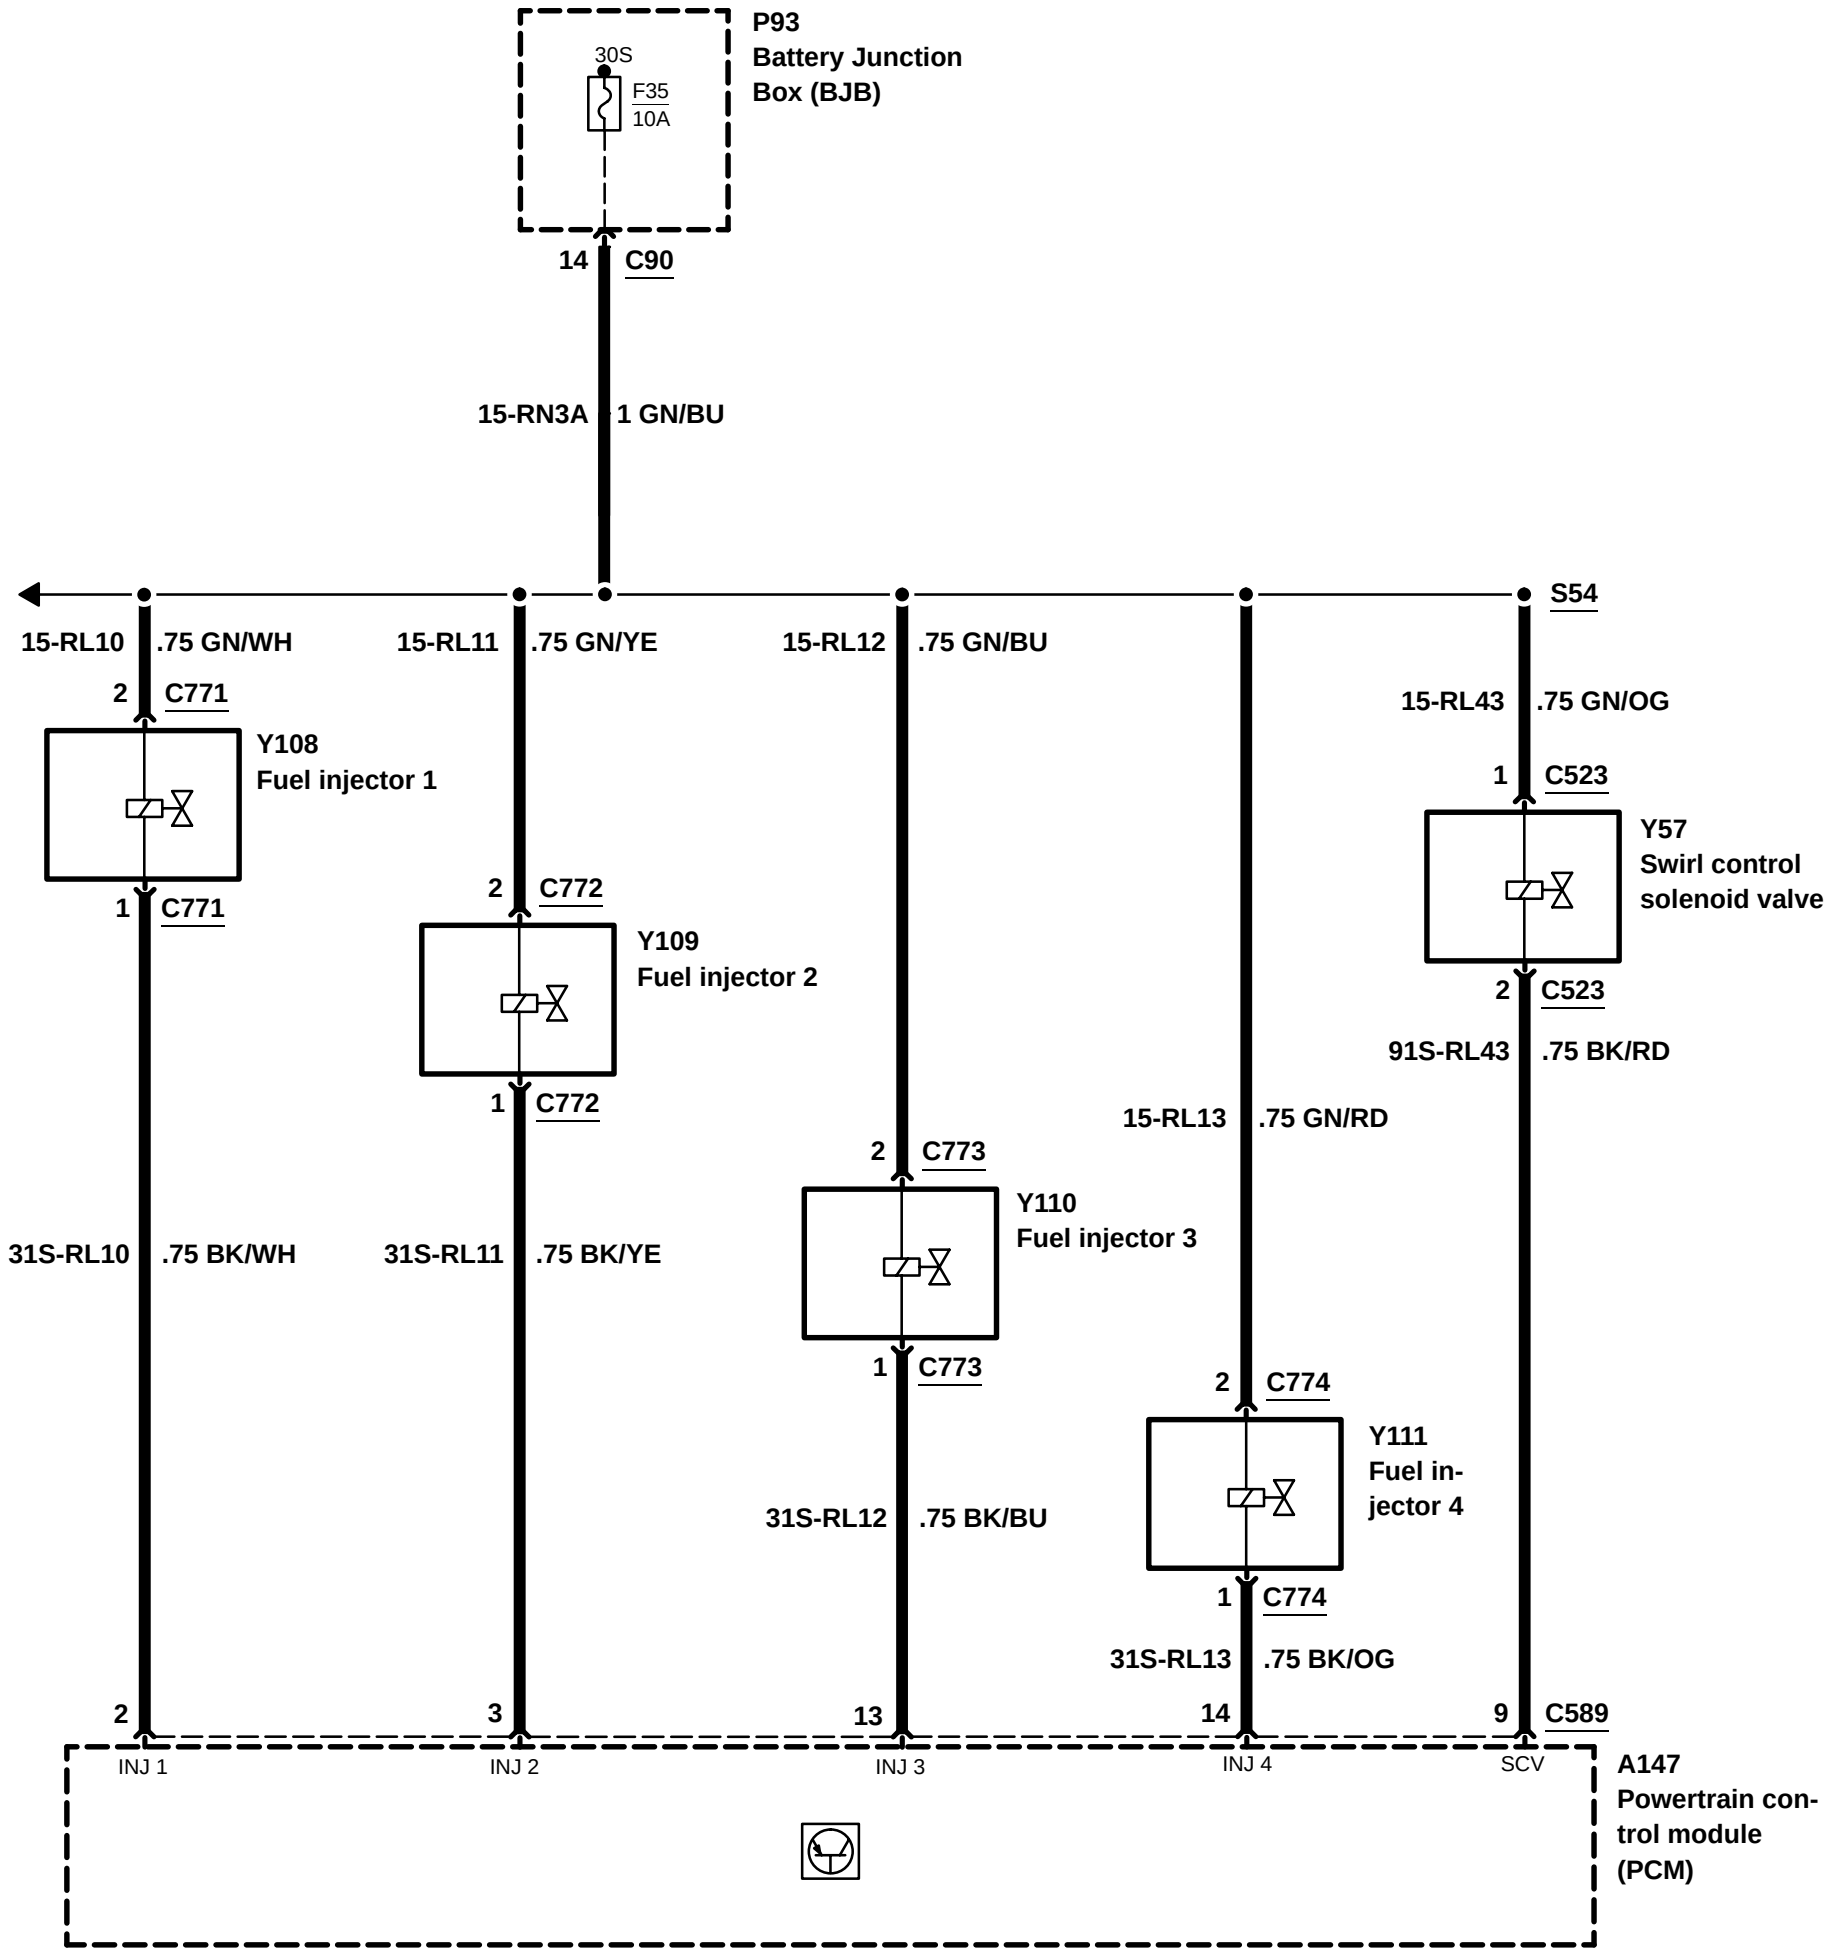


Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel

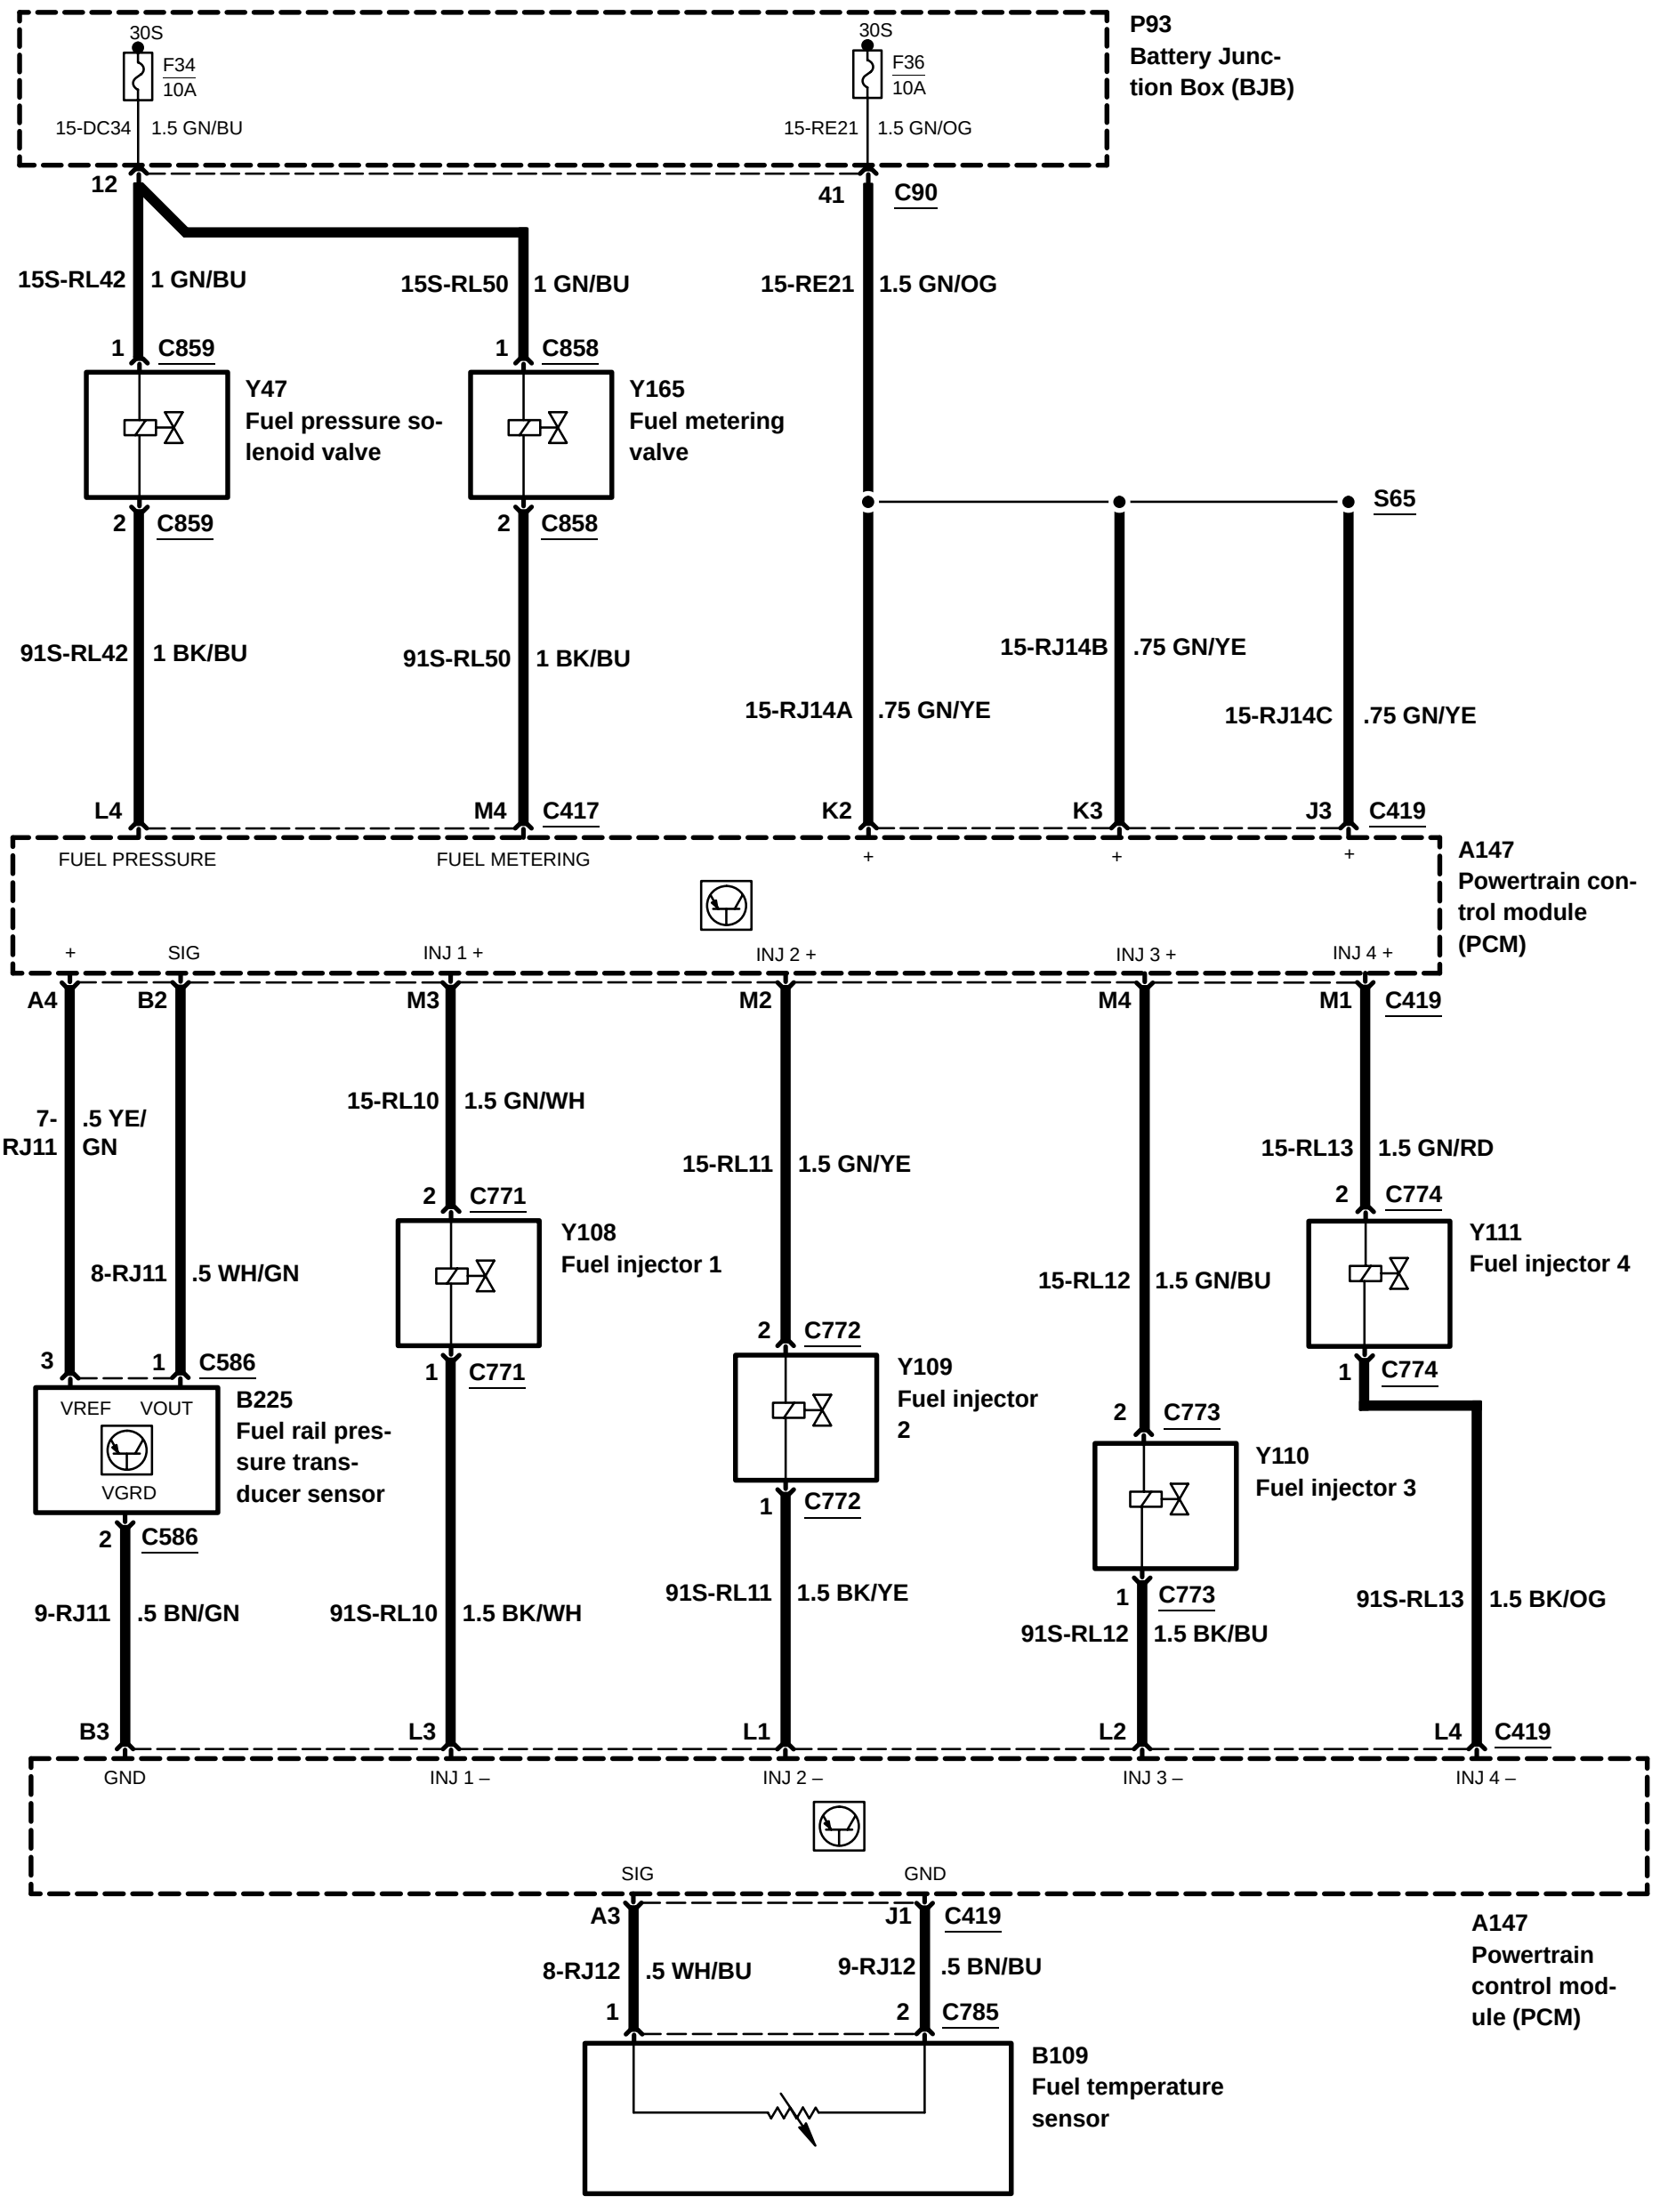


Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel

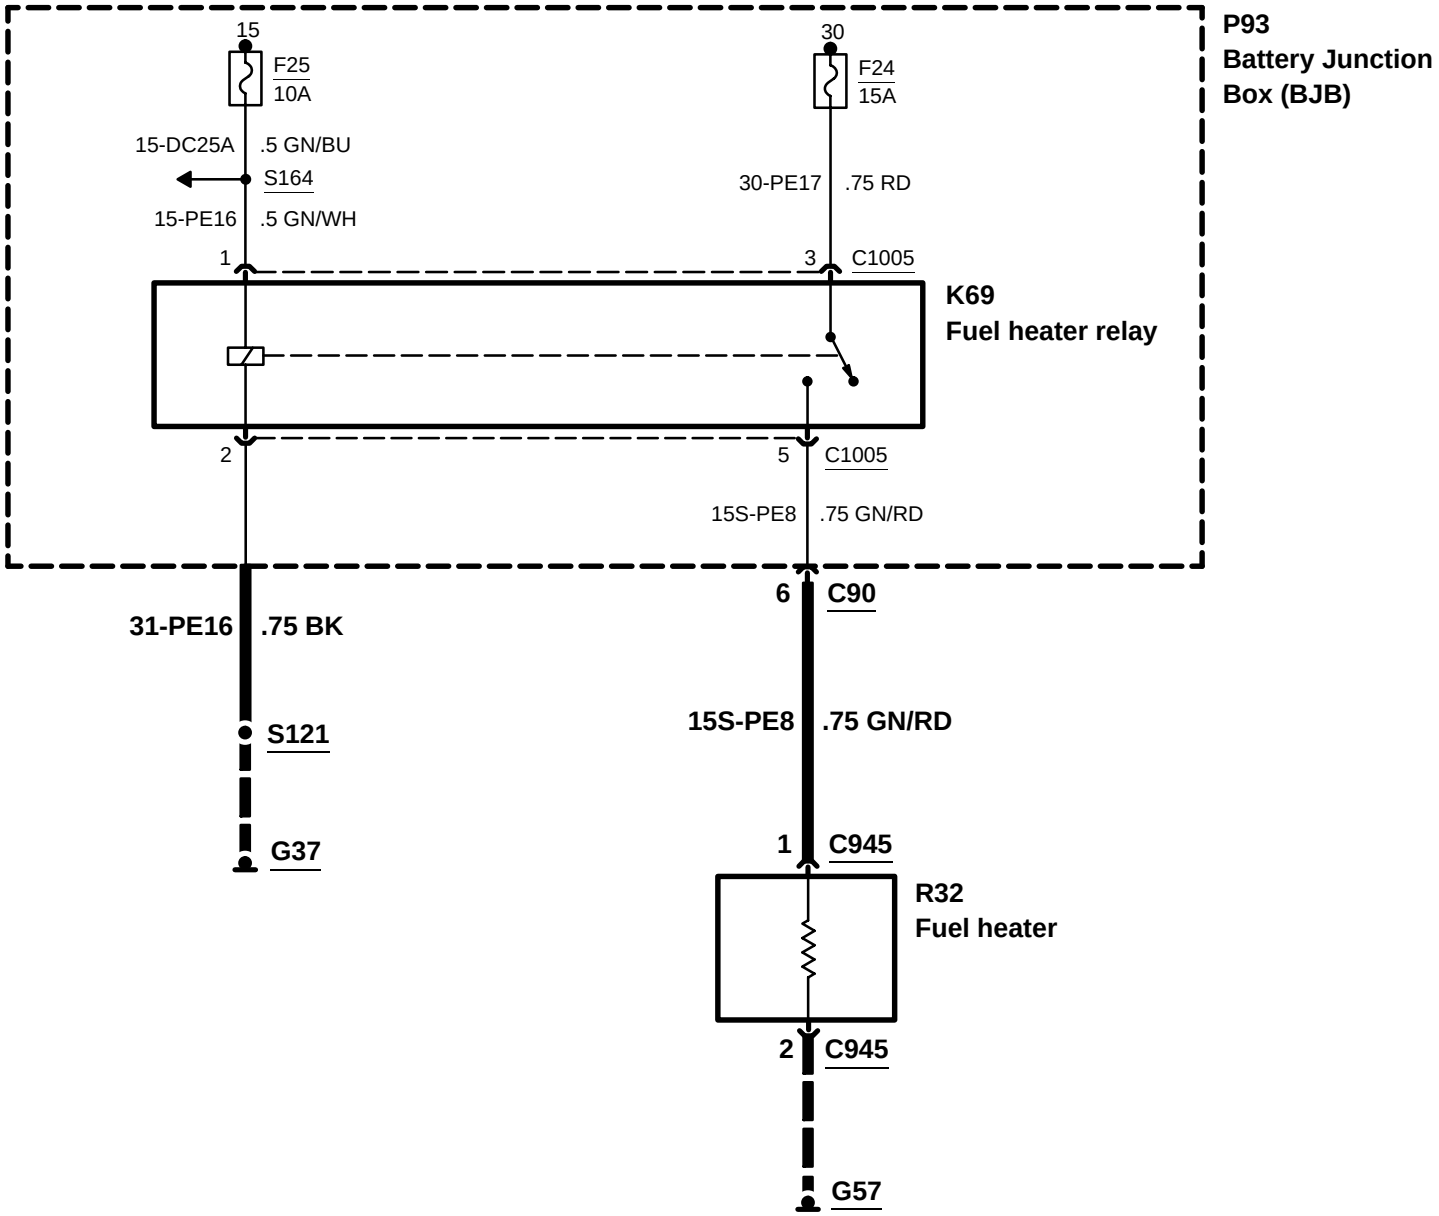


Starting System – 1.6L (Z6), manual transmission

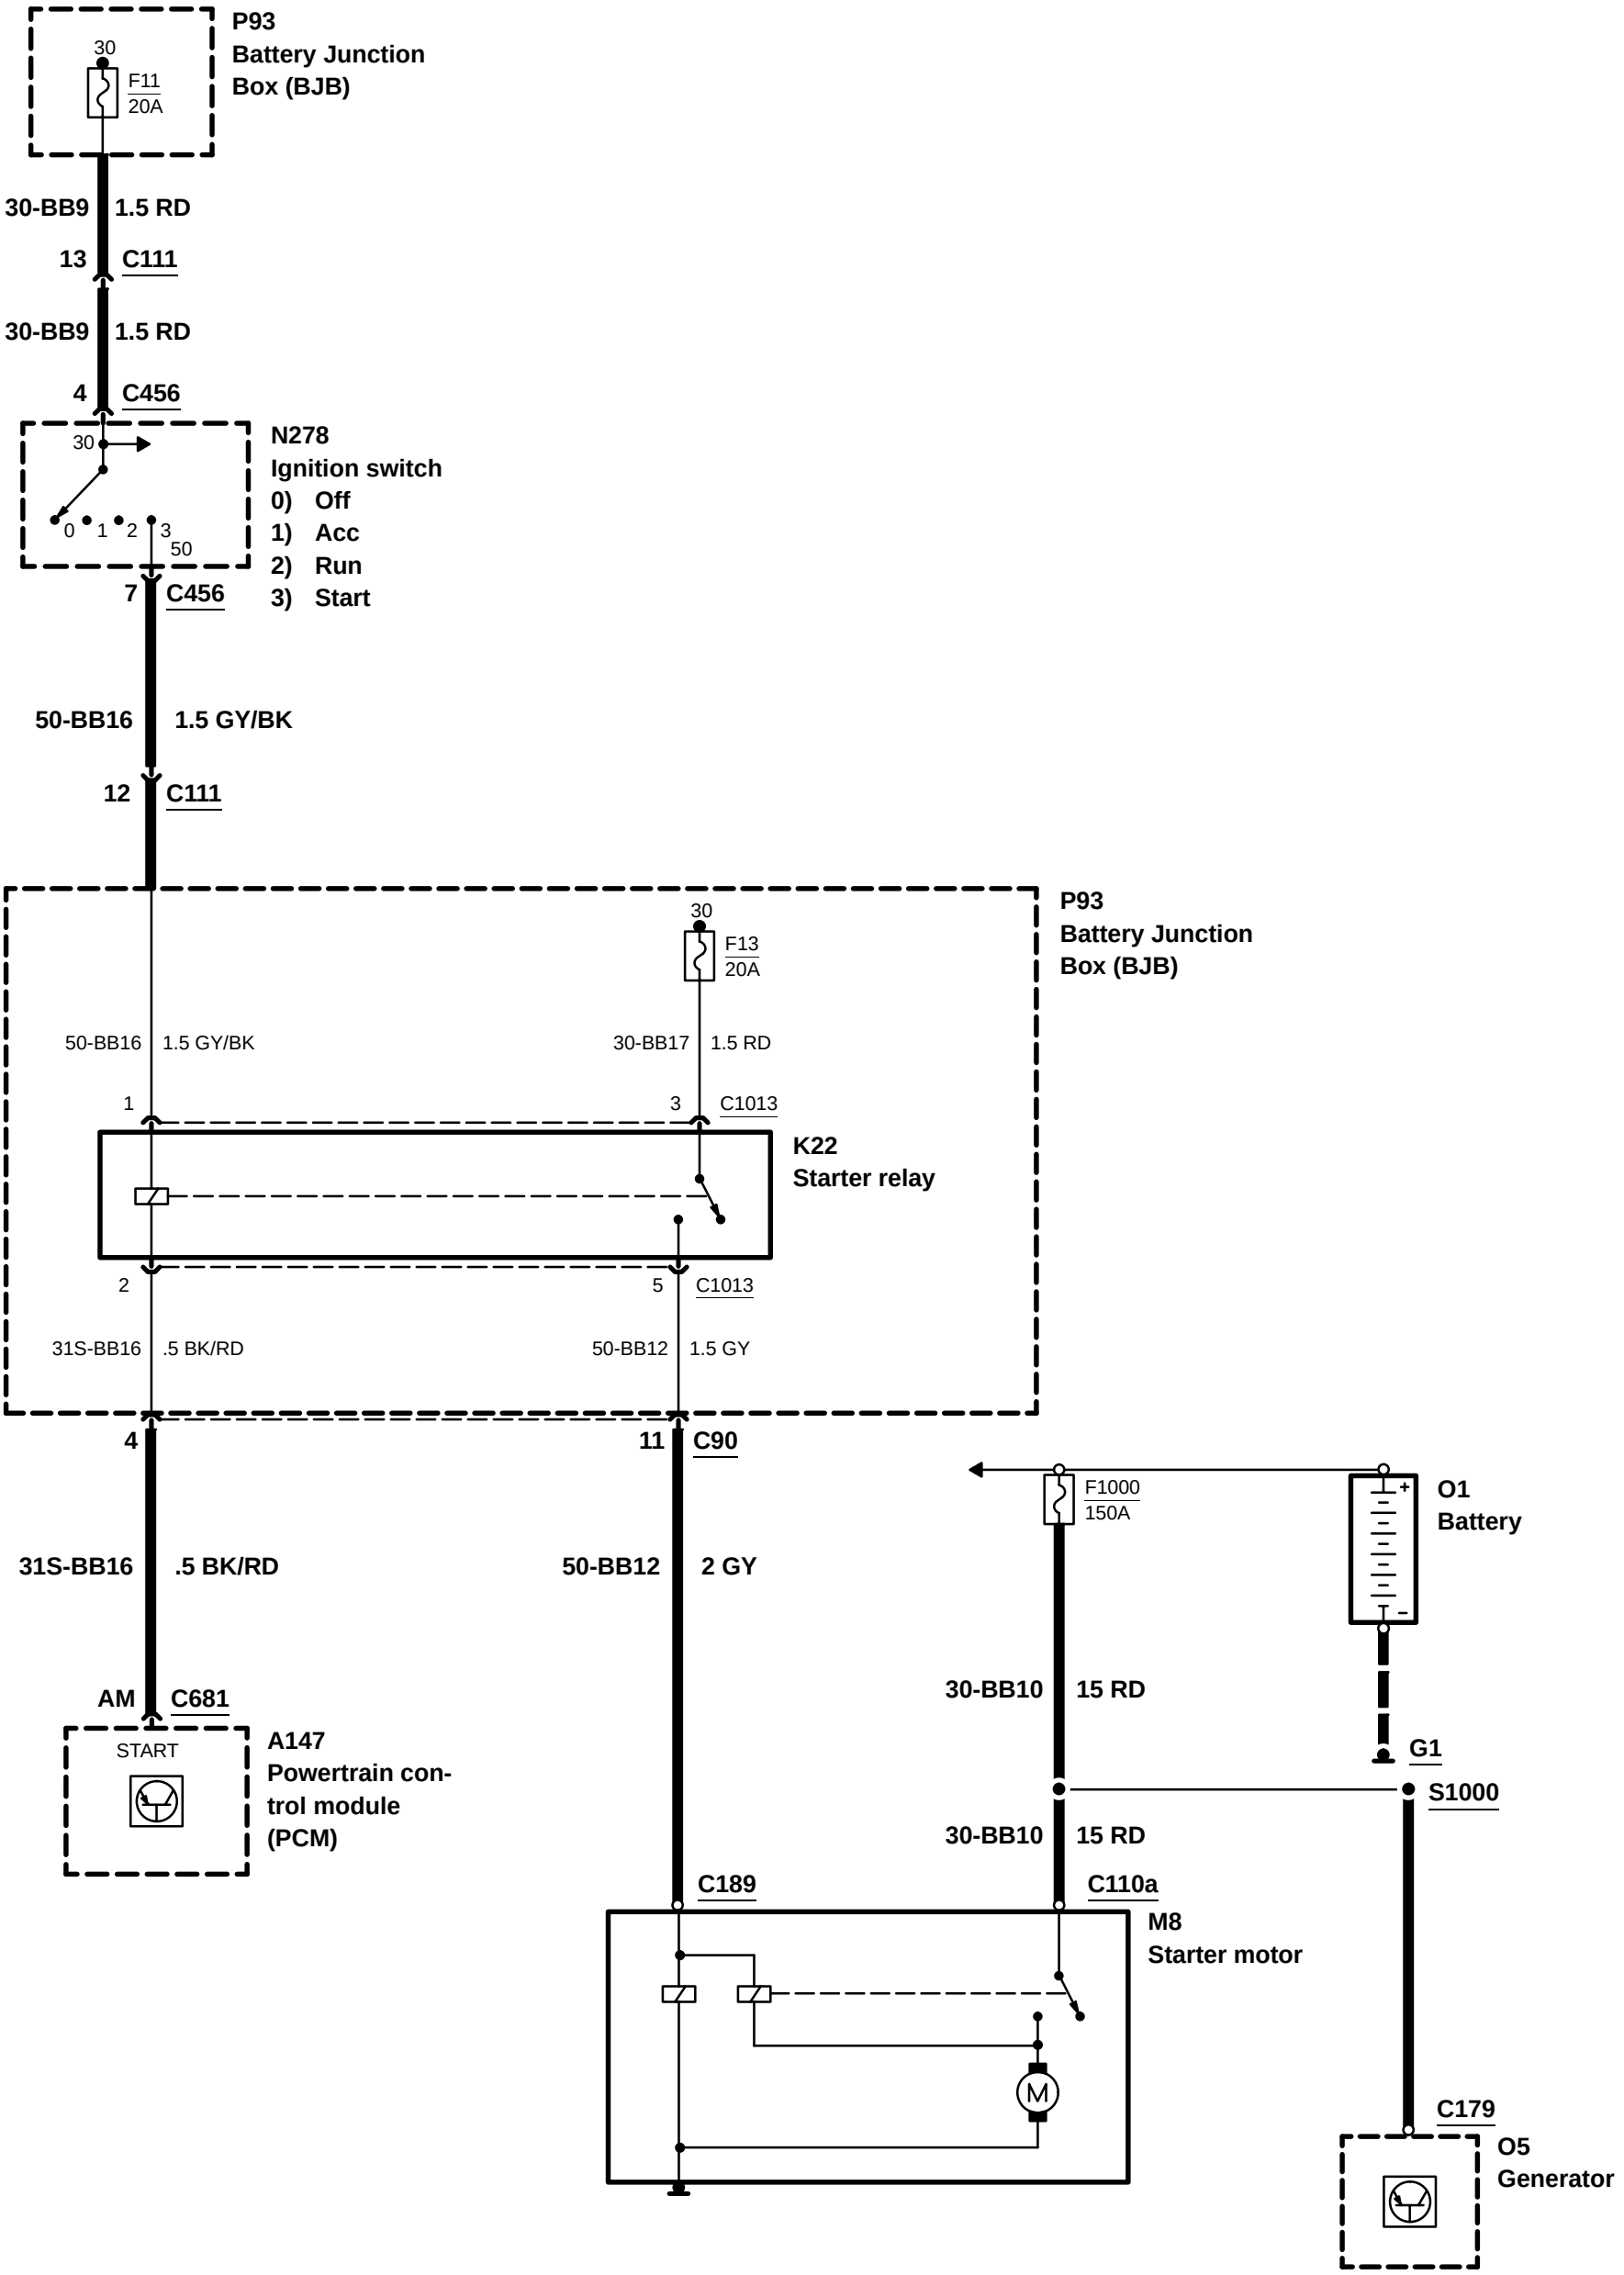


Starting System – 1.6L (Z6), automatic transmission

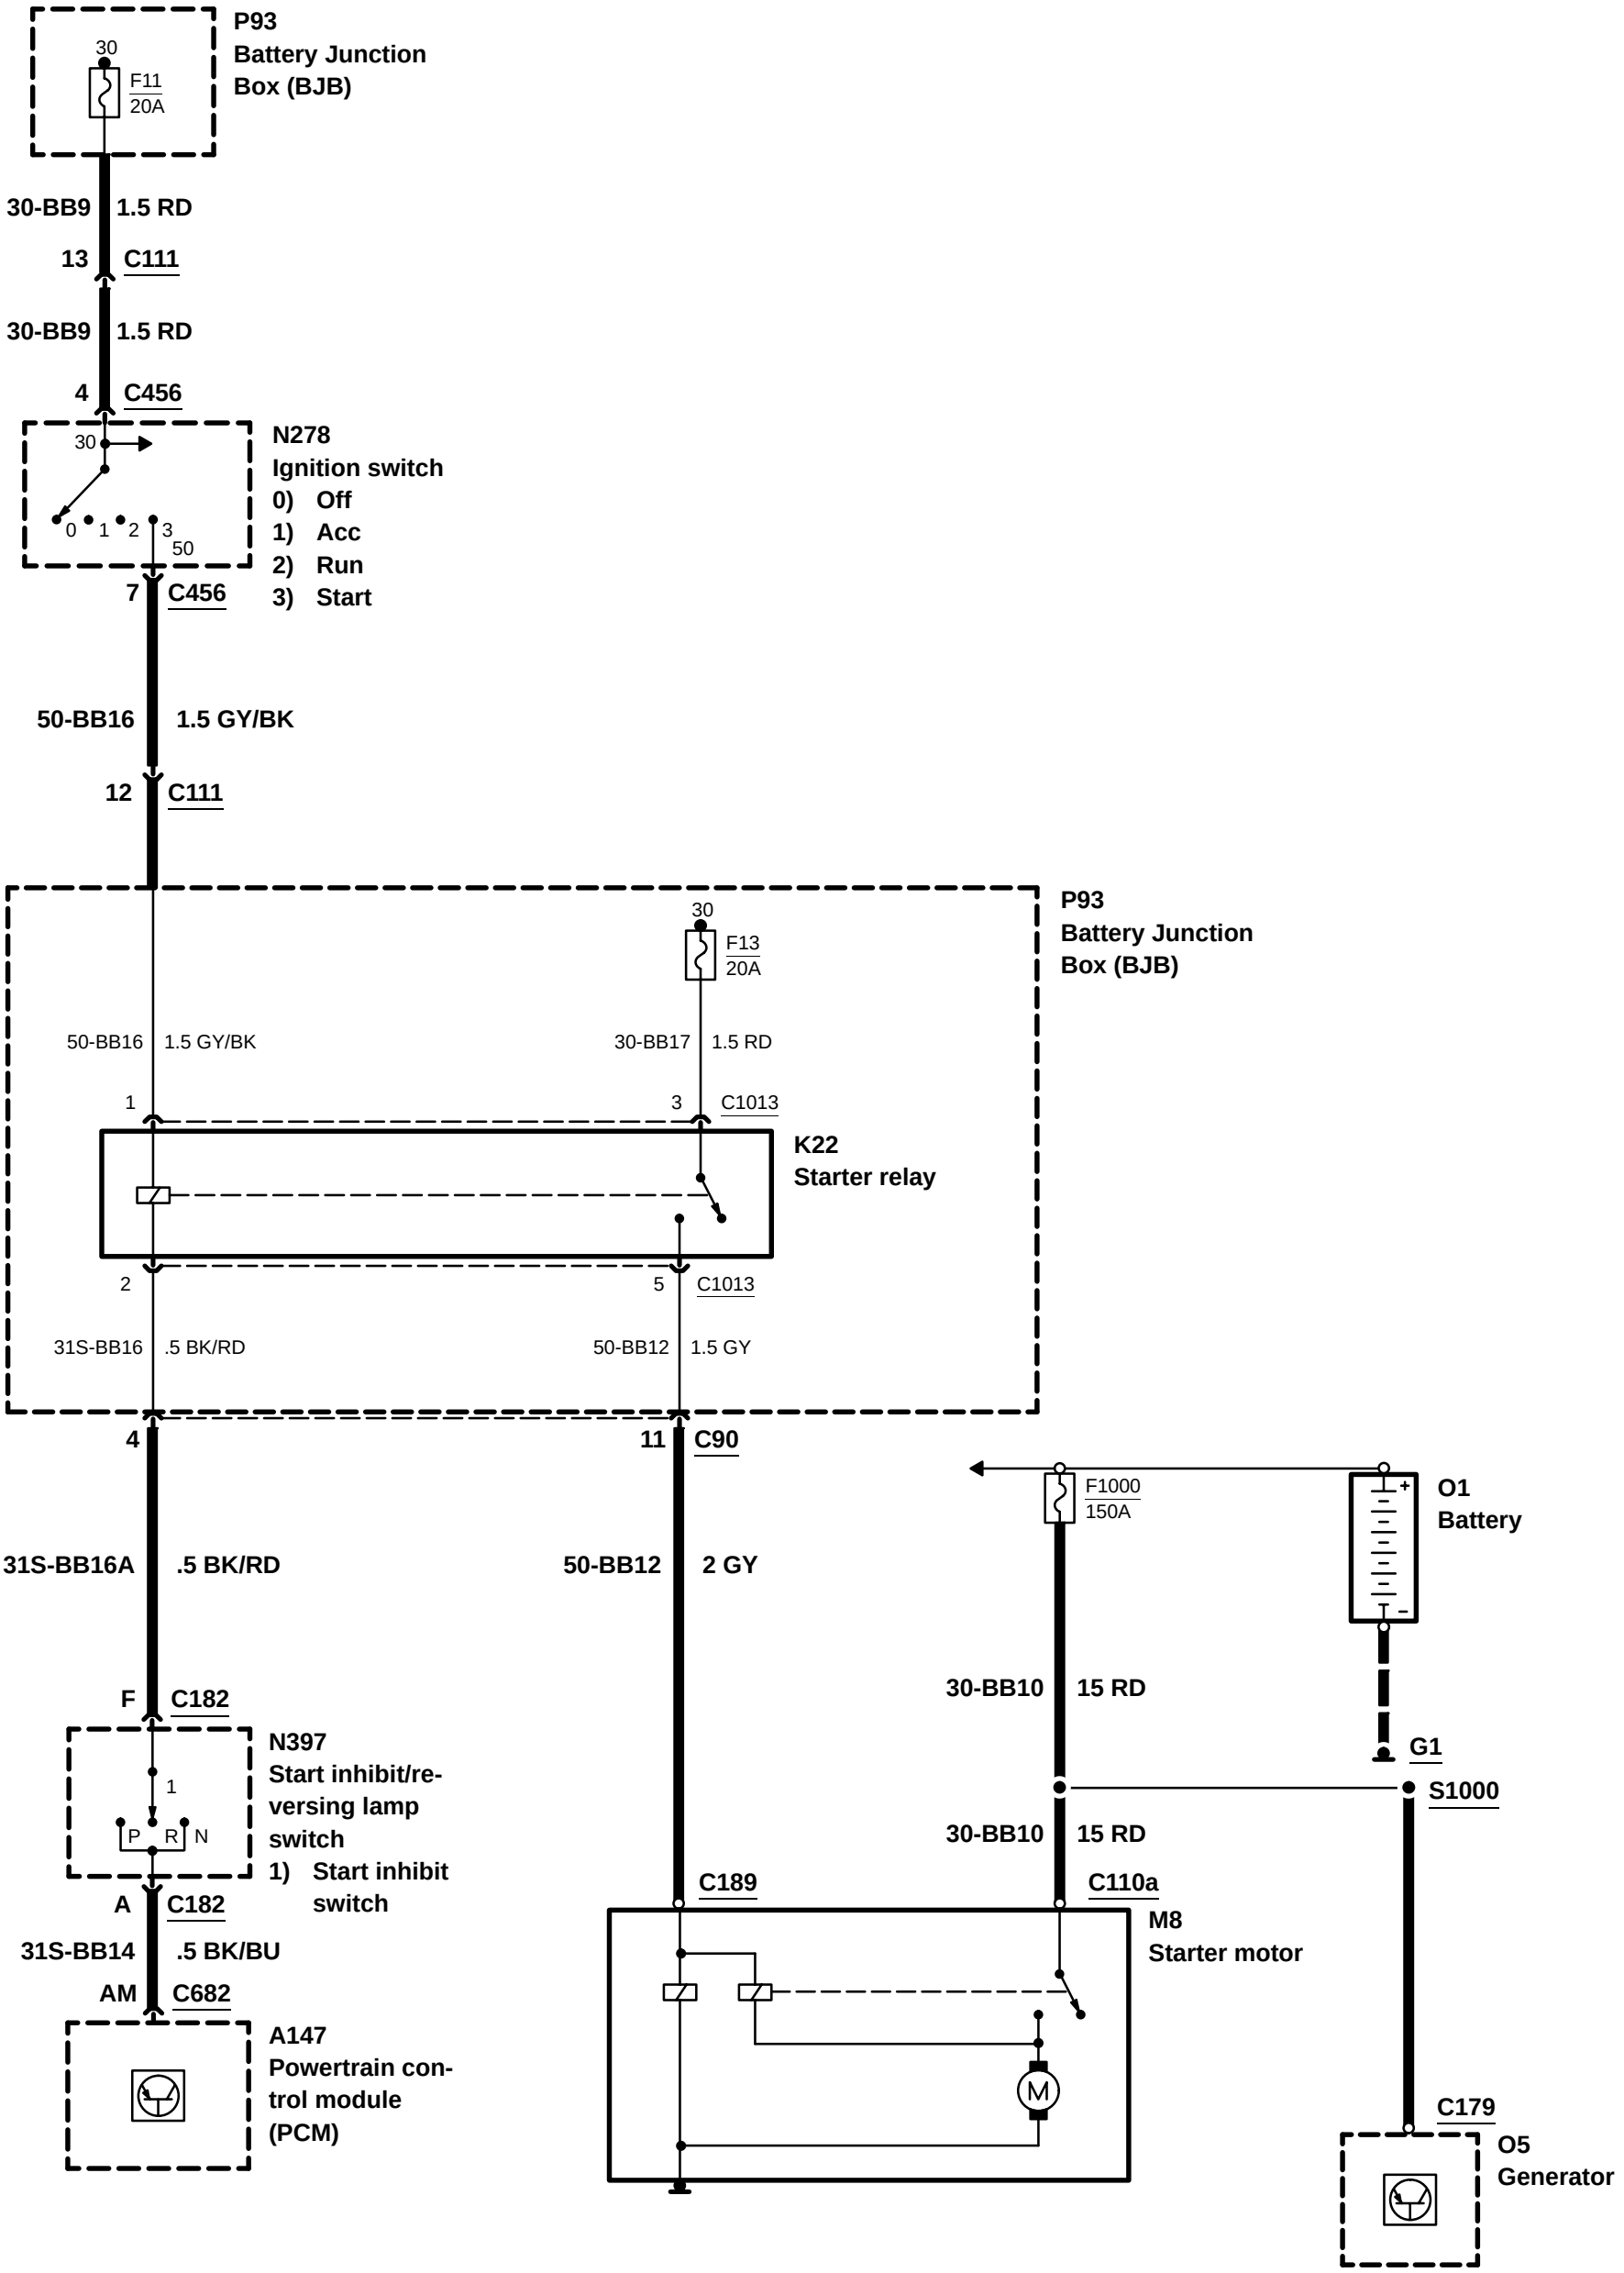


Starting System – 1.8/2.0L Duratec–HE (MI4), manual transmission

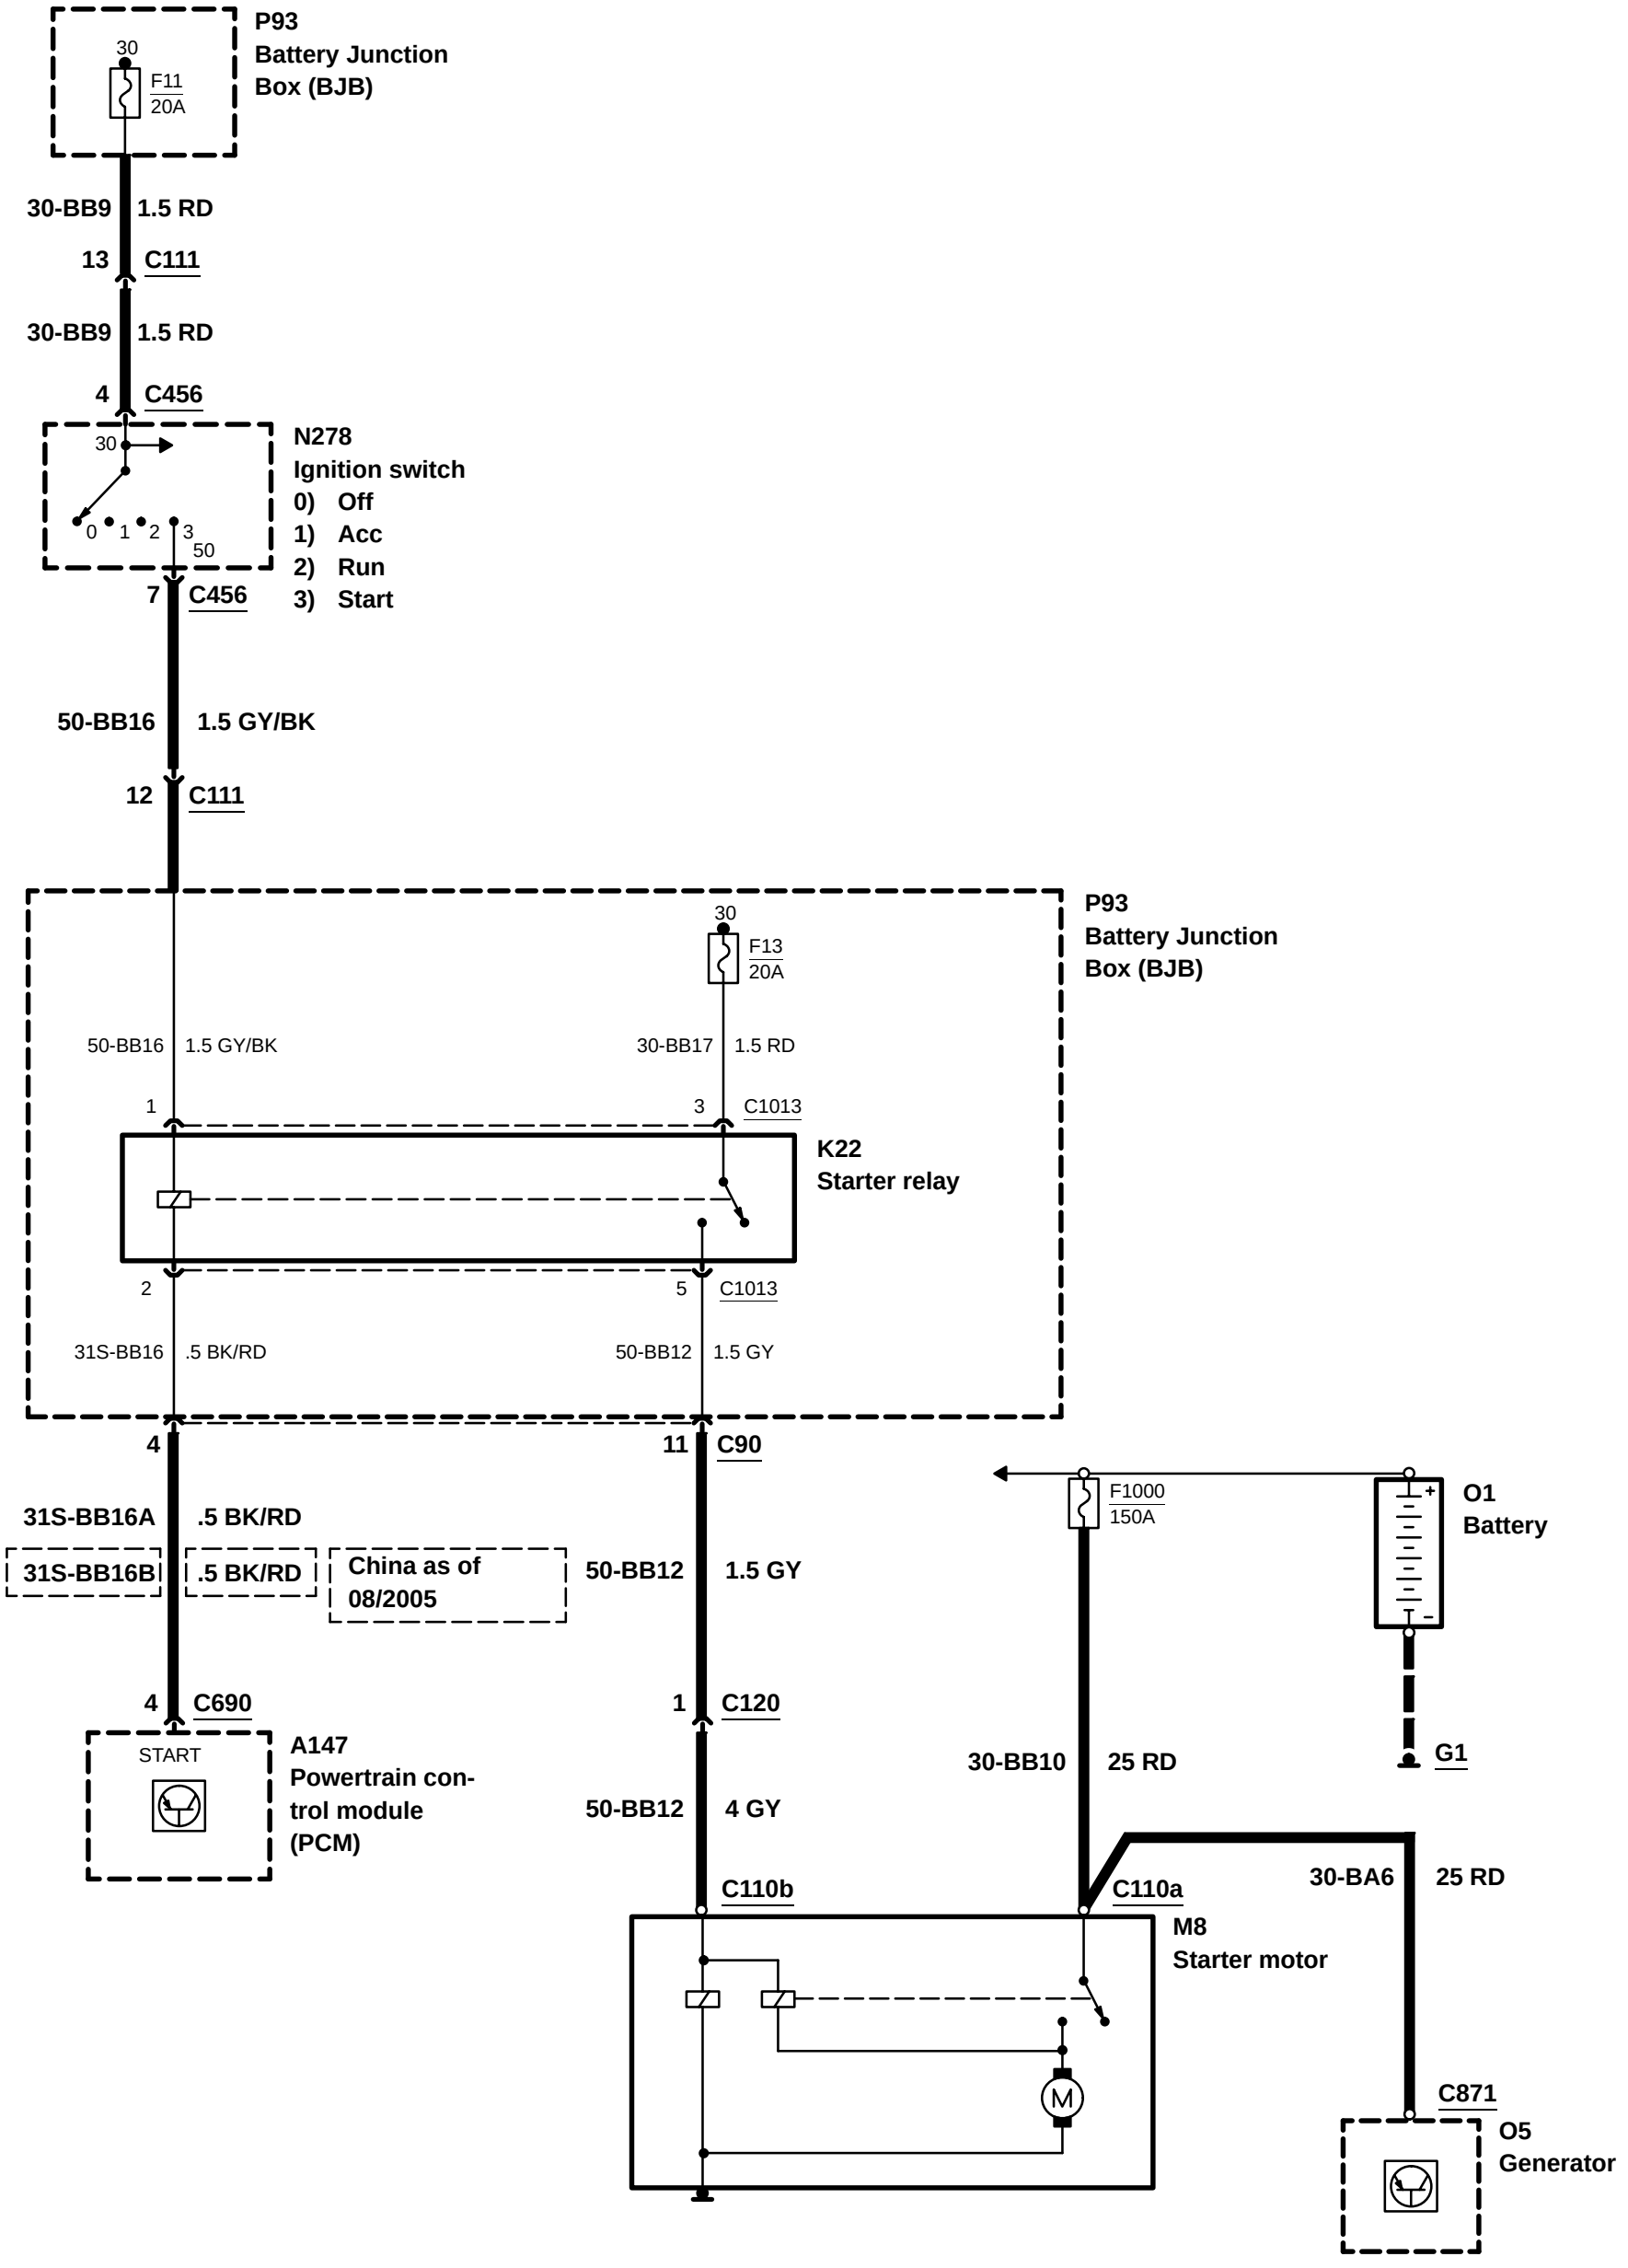


Starting System – 1.8/2.0L Duratec–HE (MI4), automatic transmission

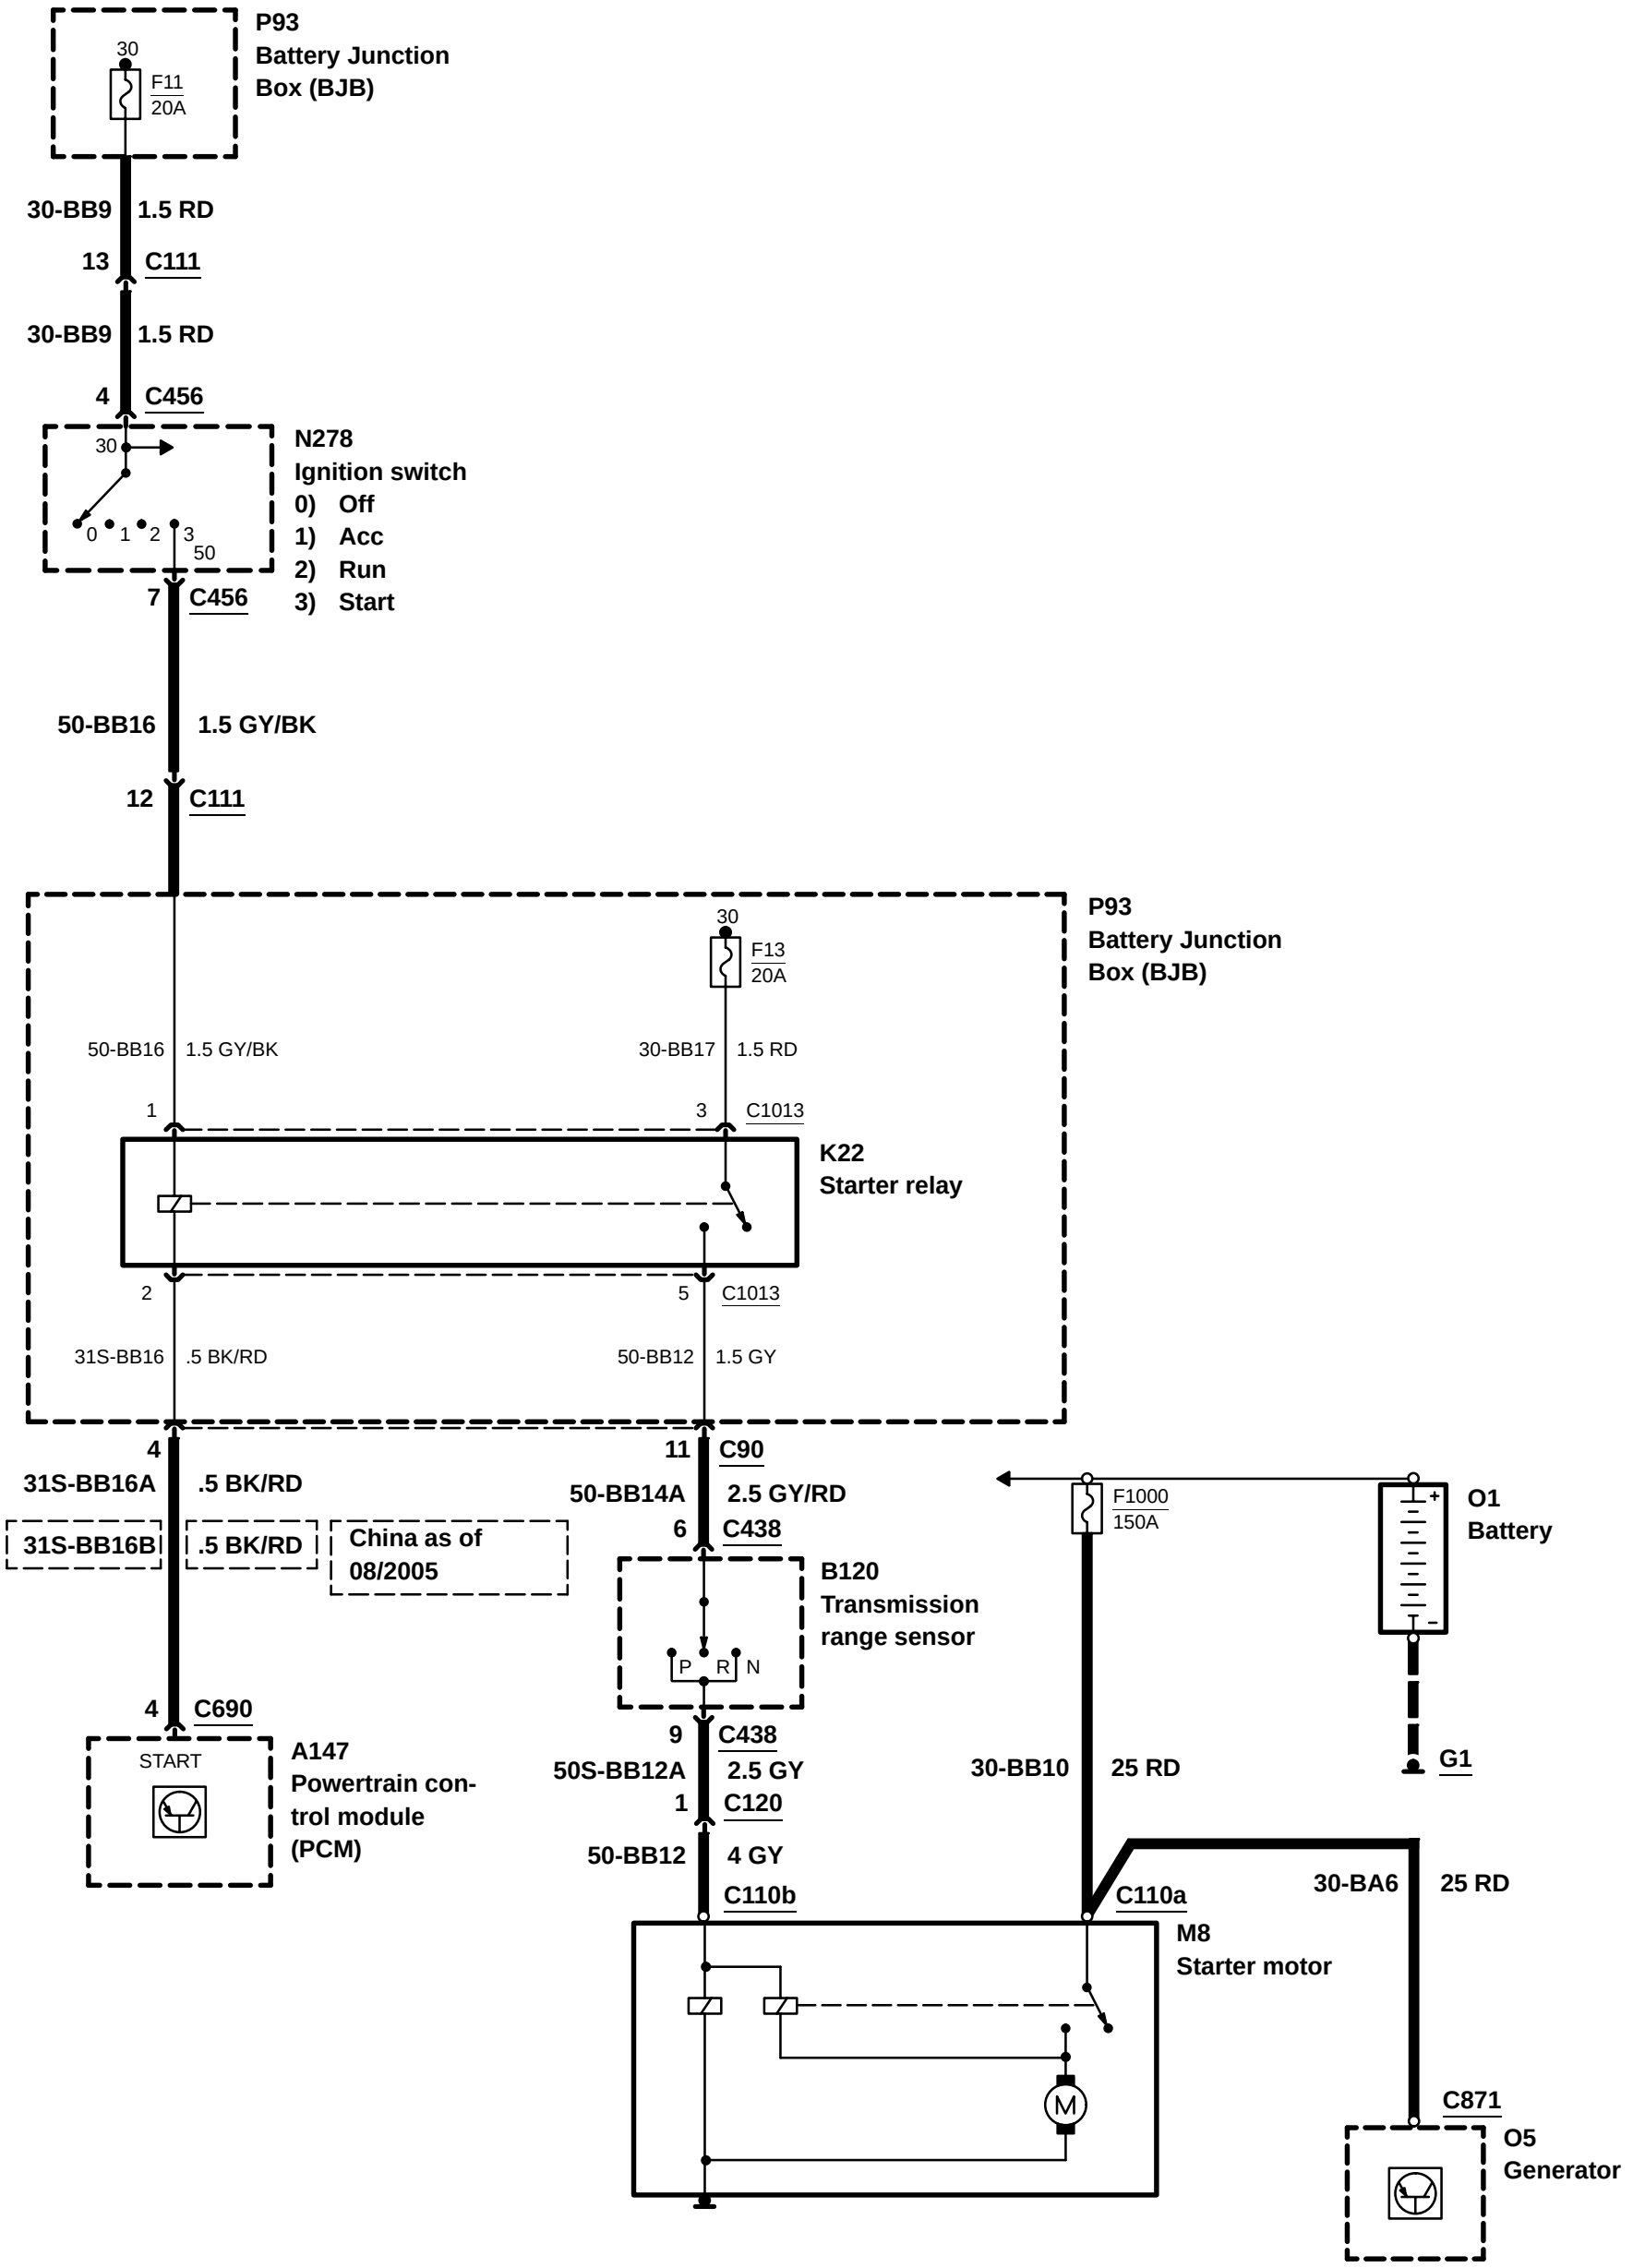


Starting System – 2.0L Duratorq–TDCi (DW) Diesel

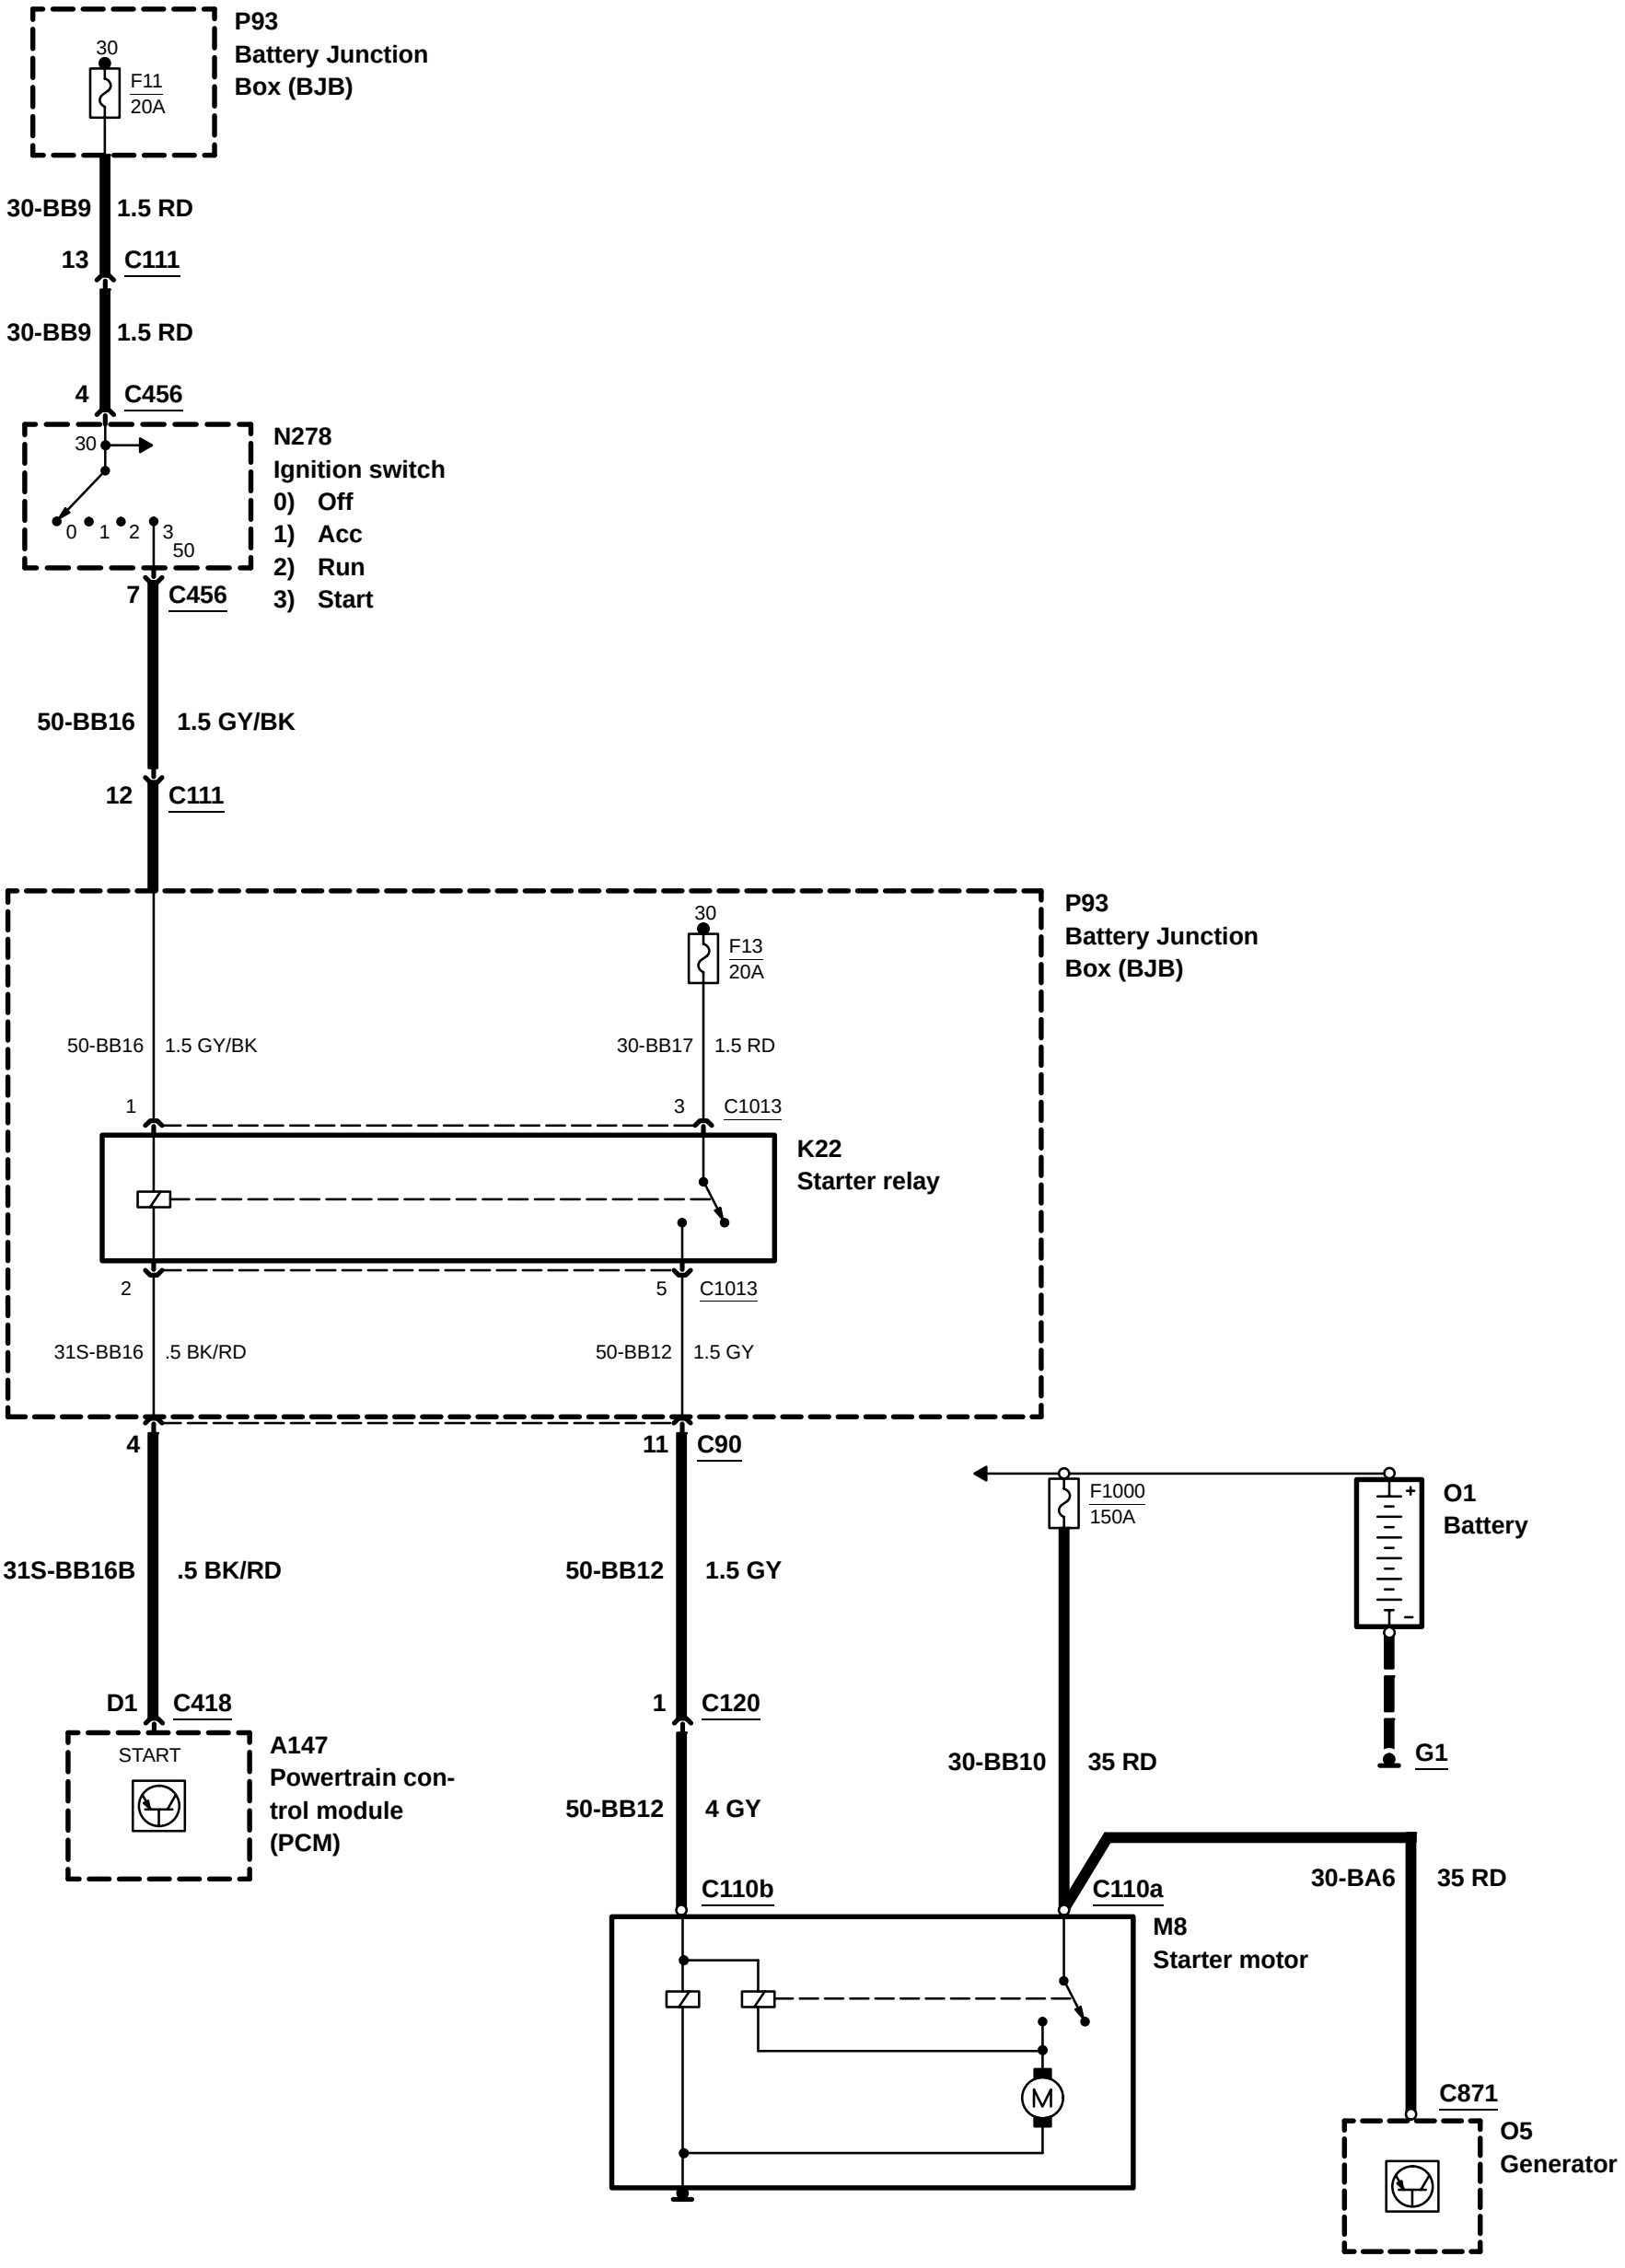


Engine Ignition – 1.6L (Z6)

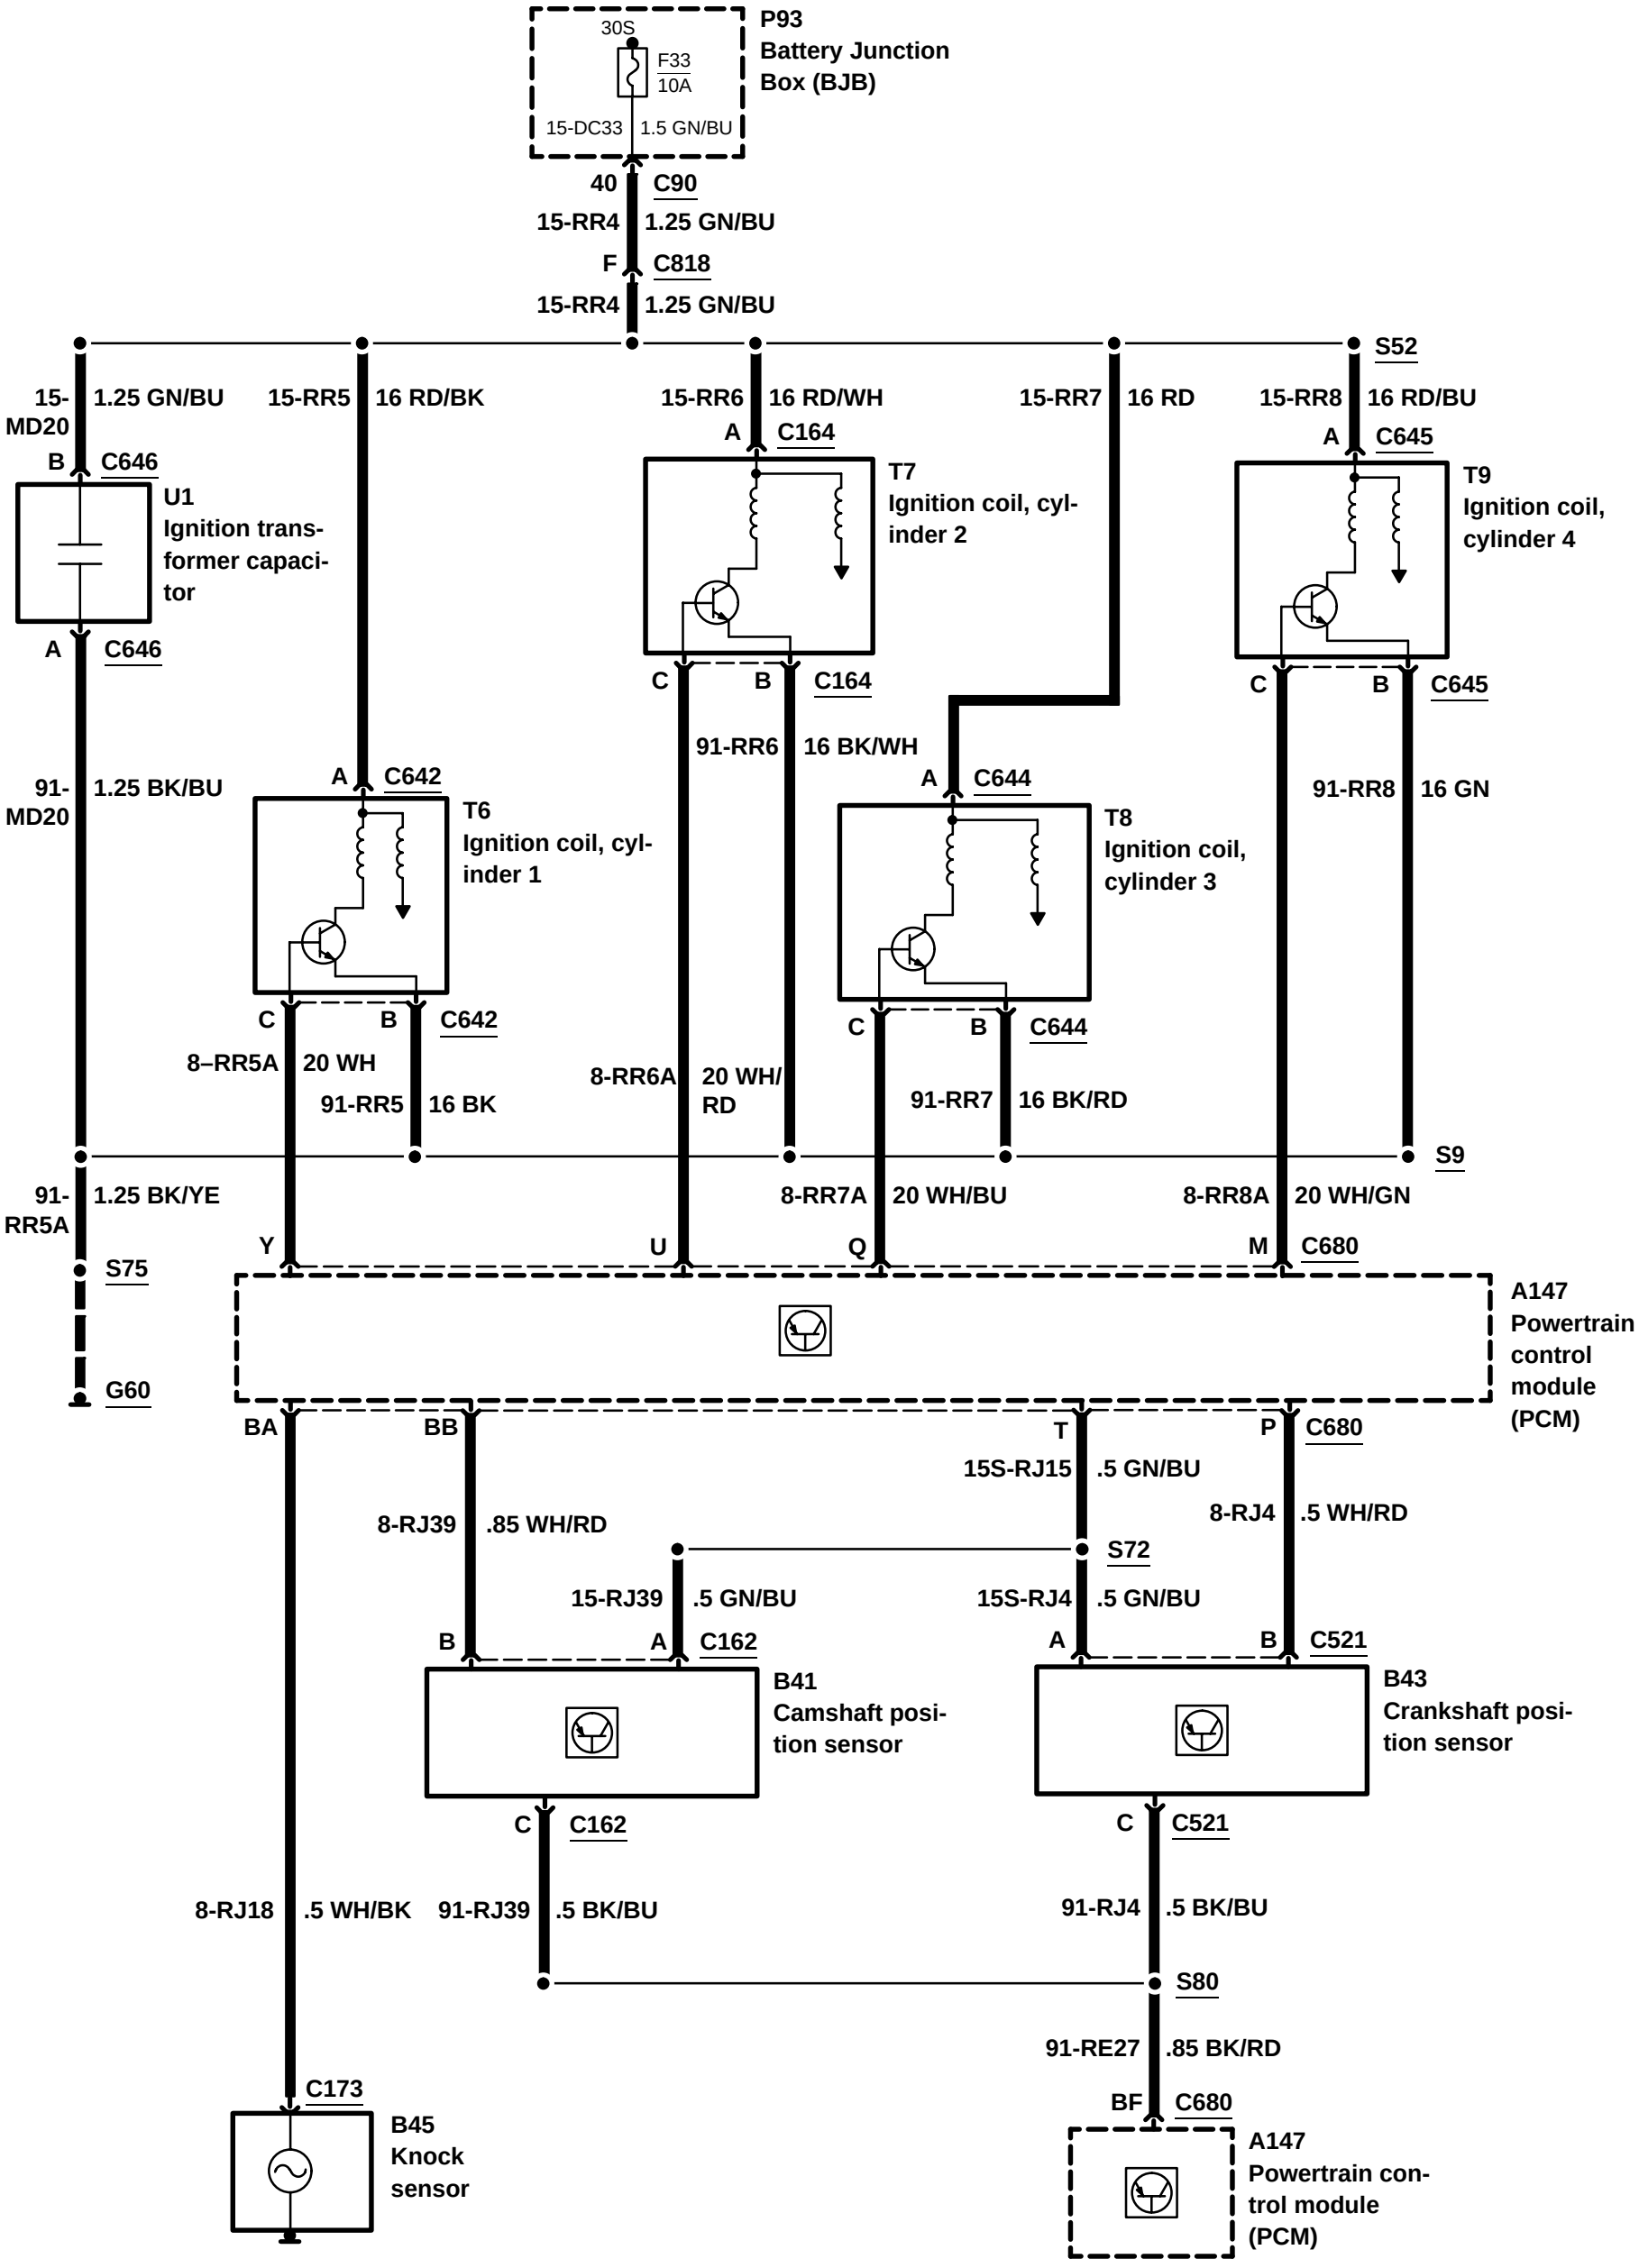


Engine Ignition – 1.8/2.0L Duratec–HE (MI4)

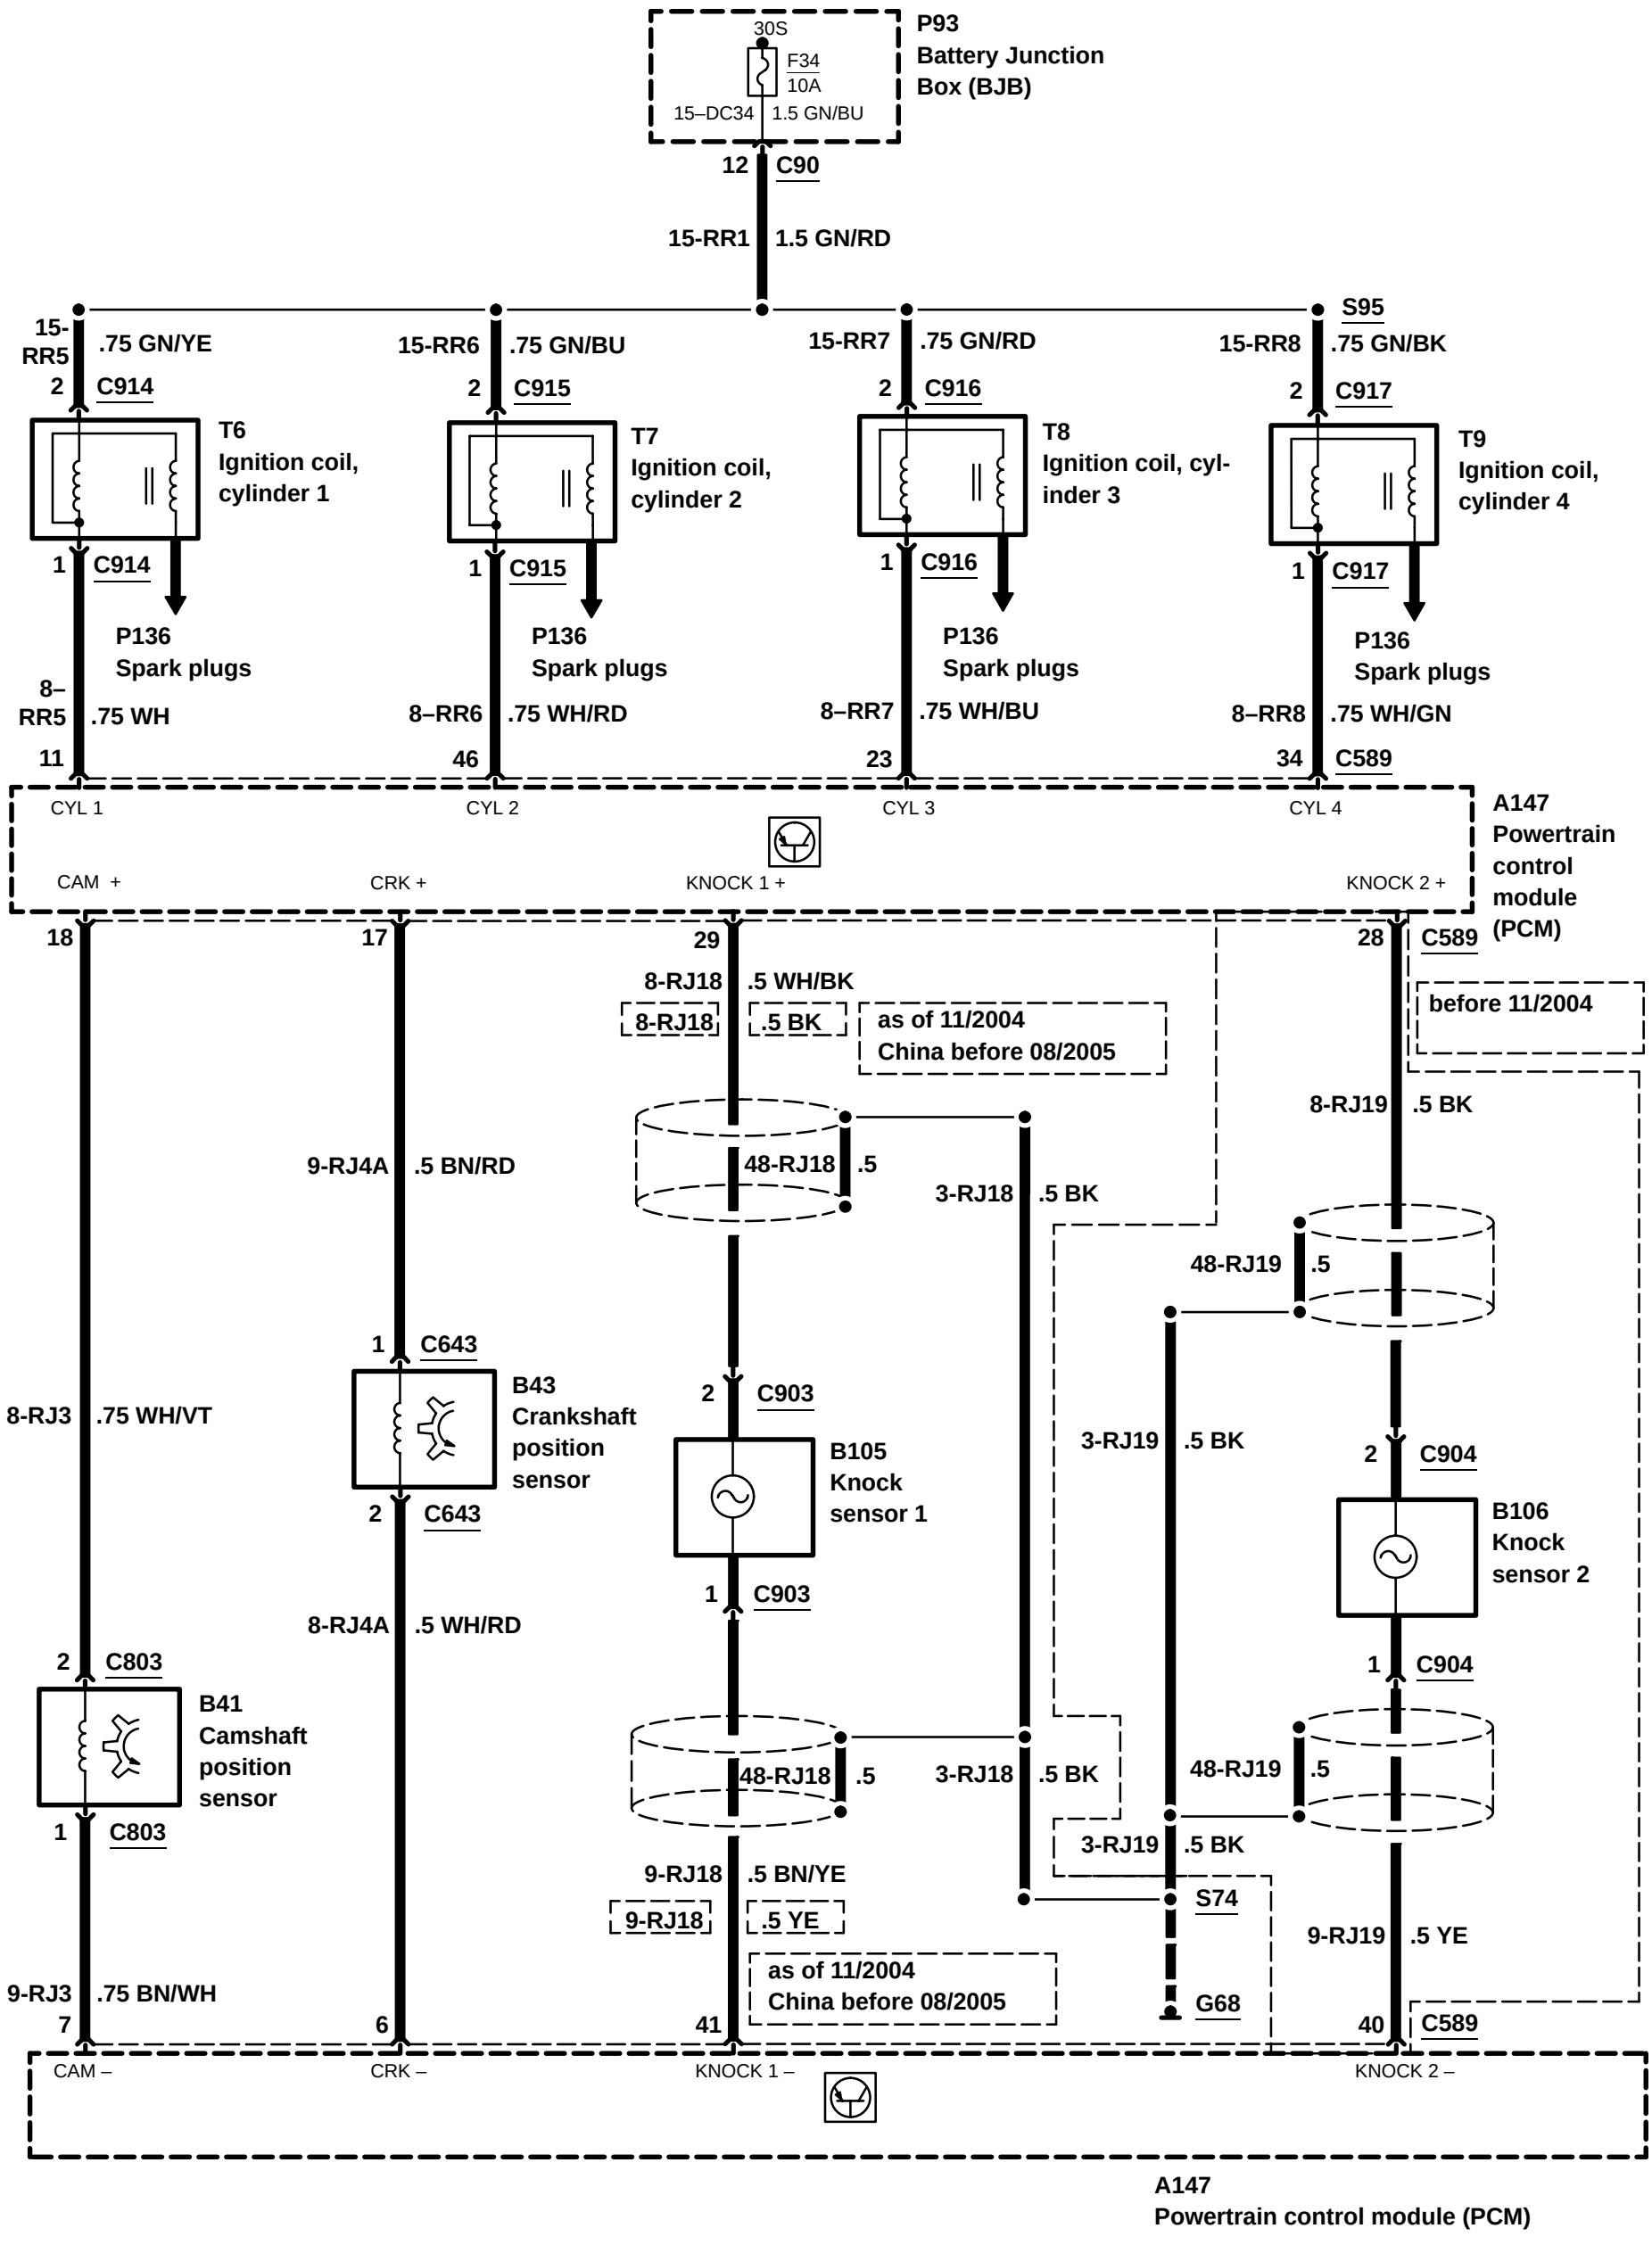


Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel

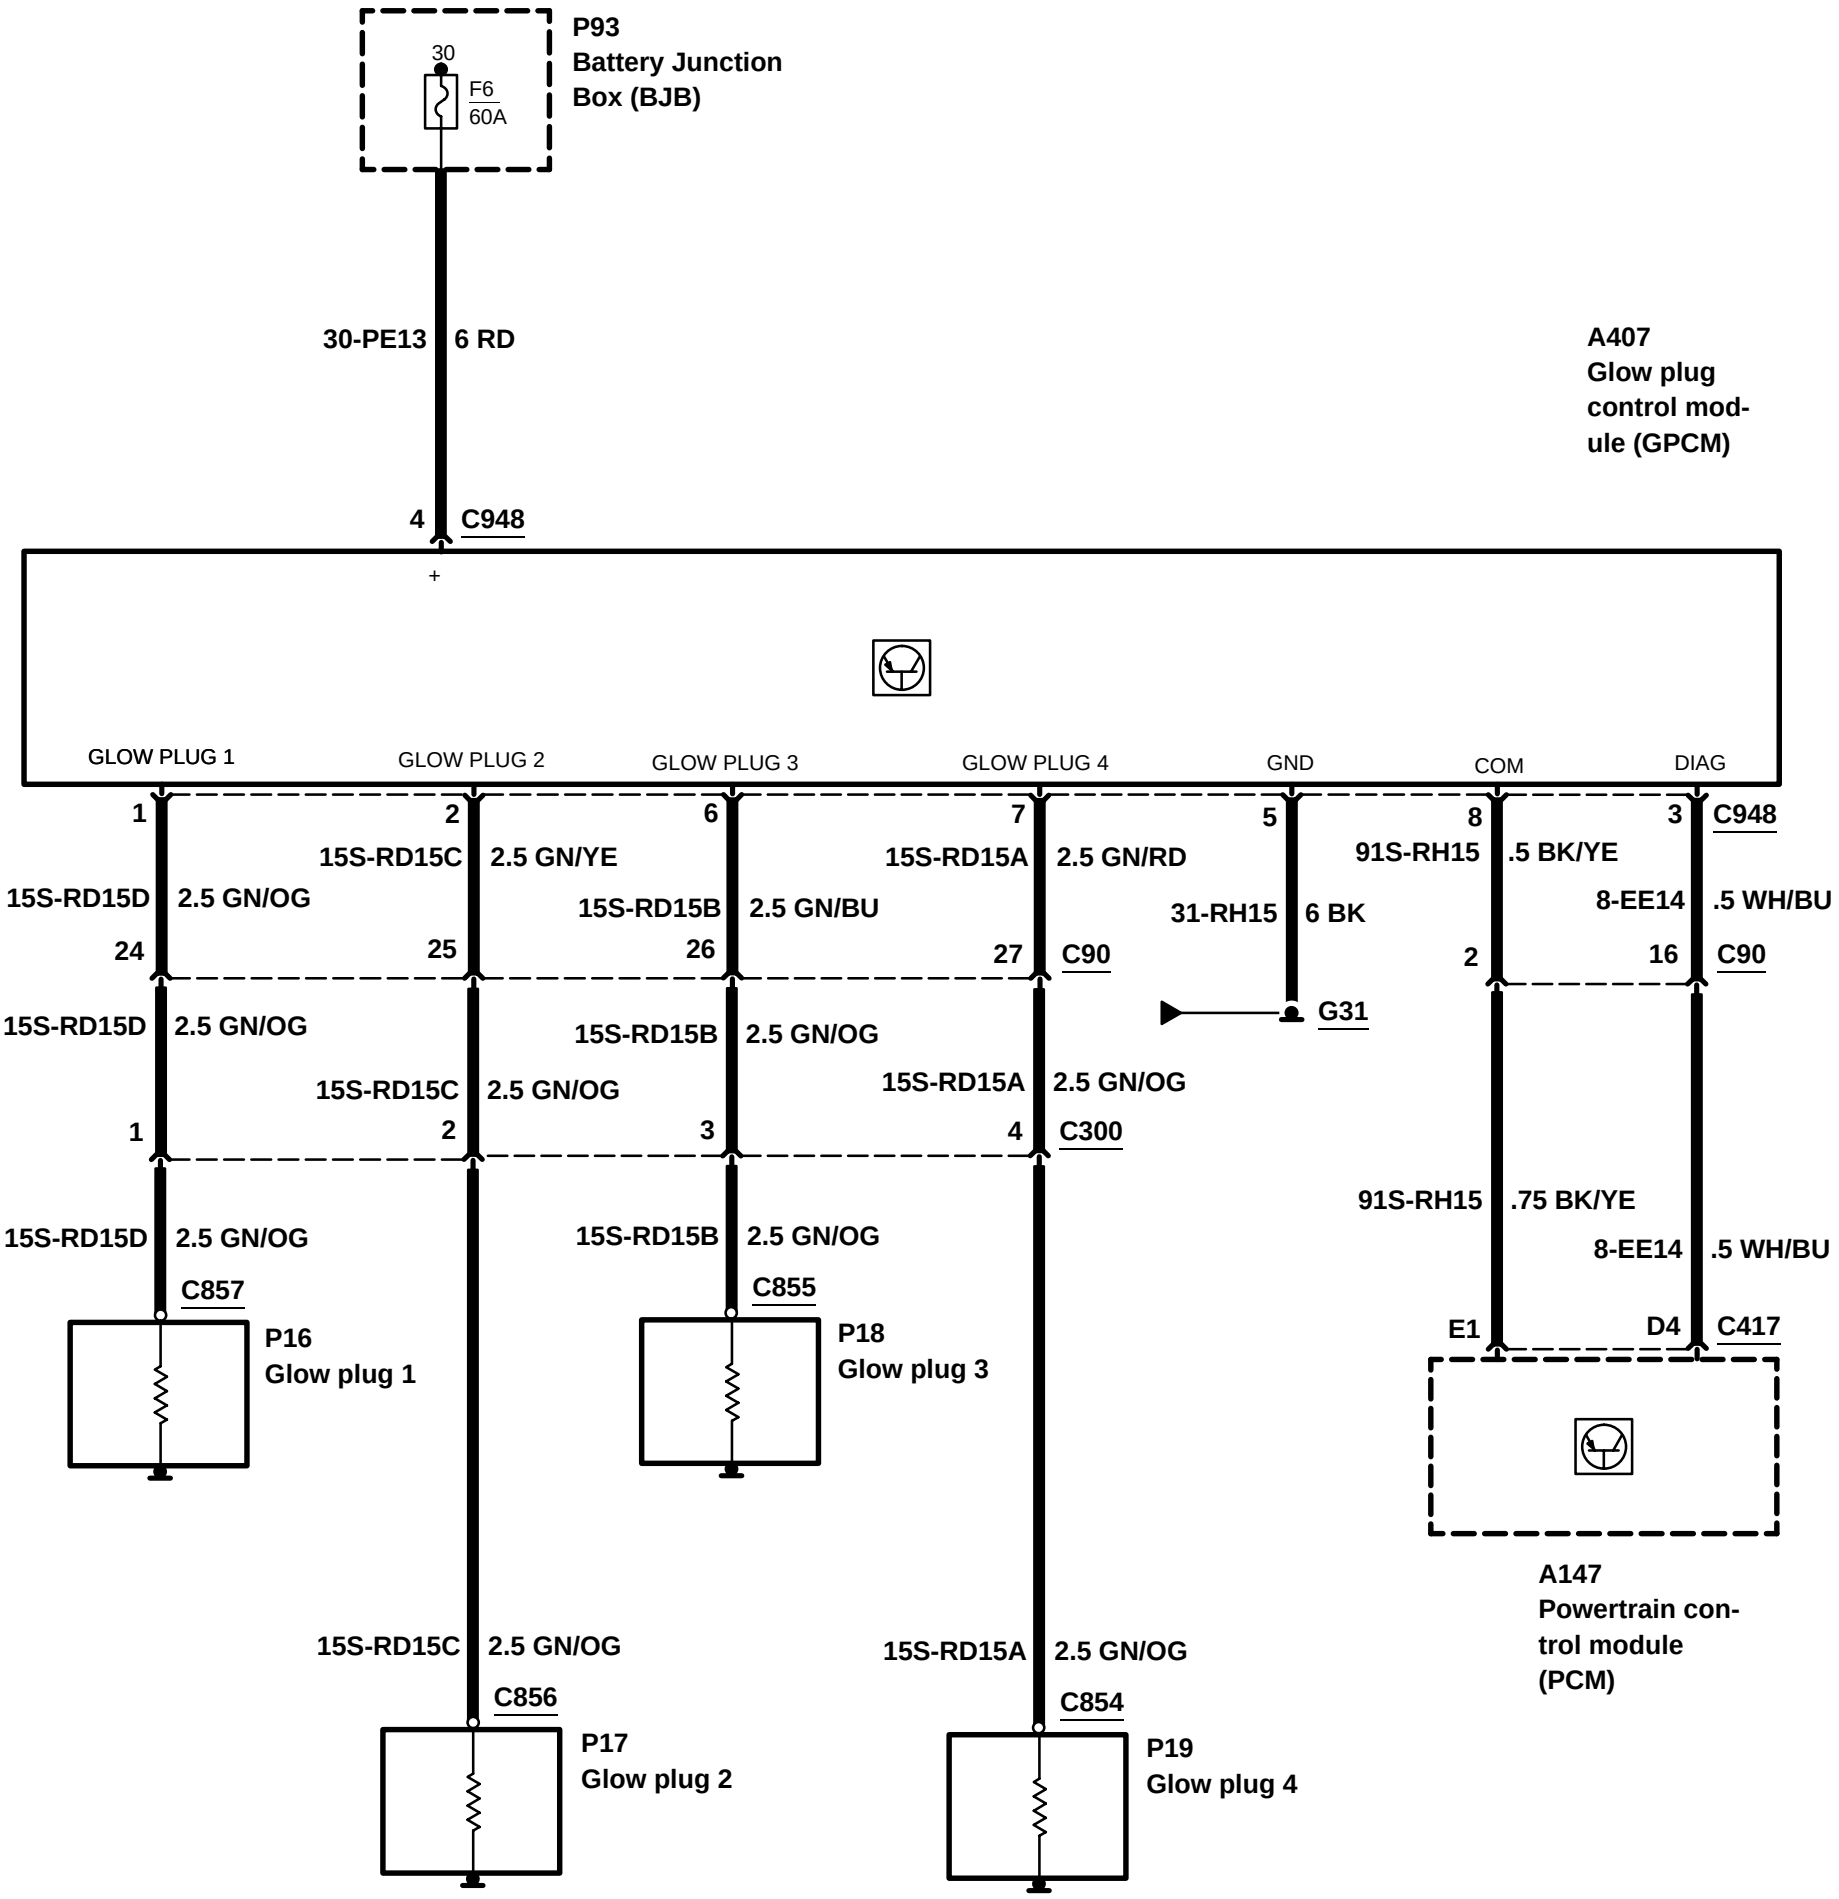


Electronic Engine Controls – 1.6L (Z6)

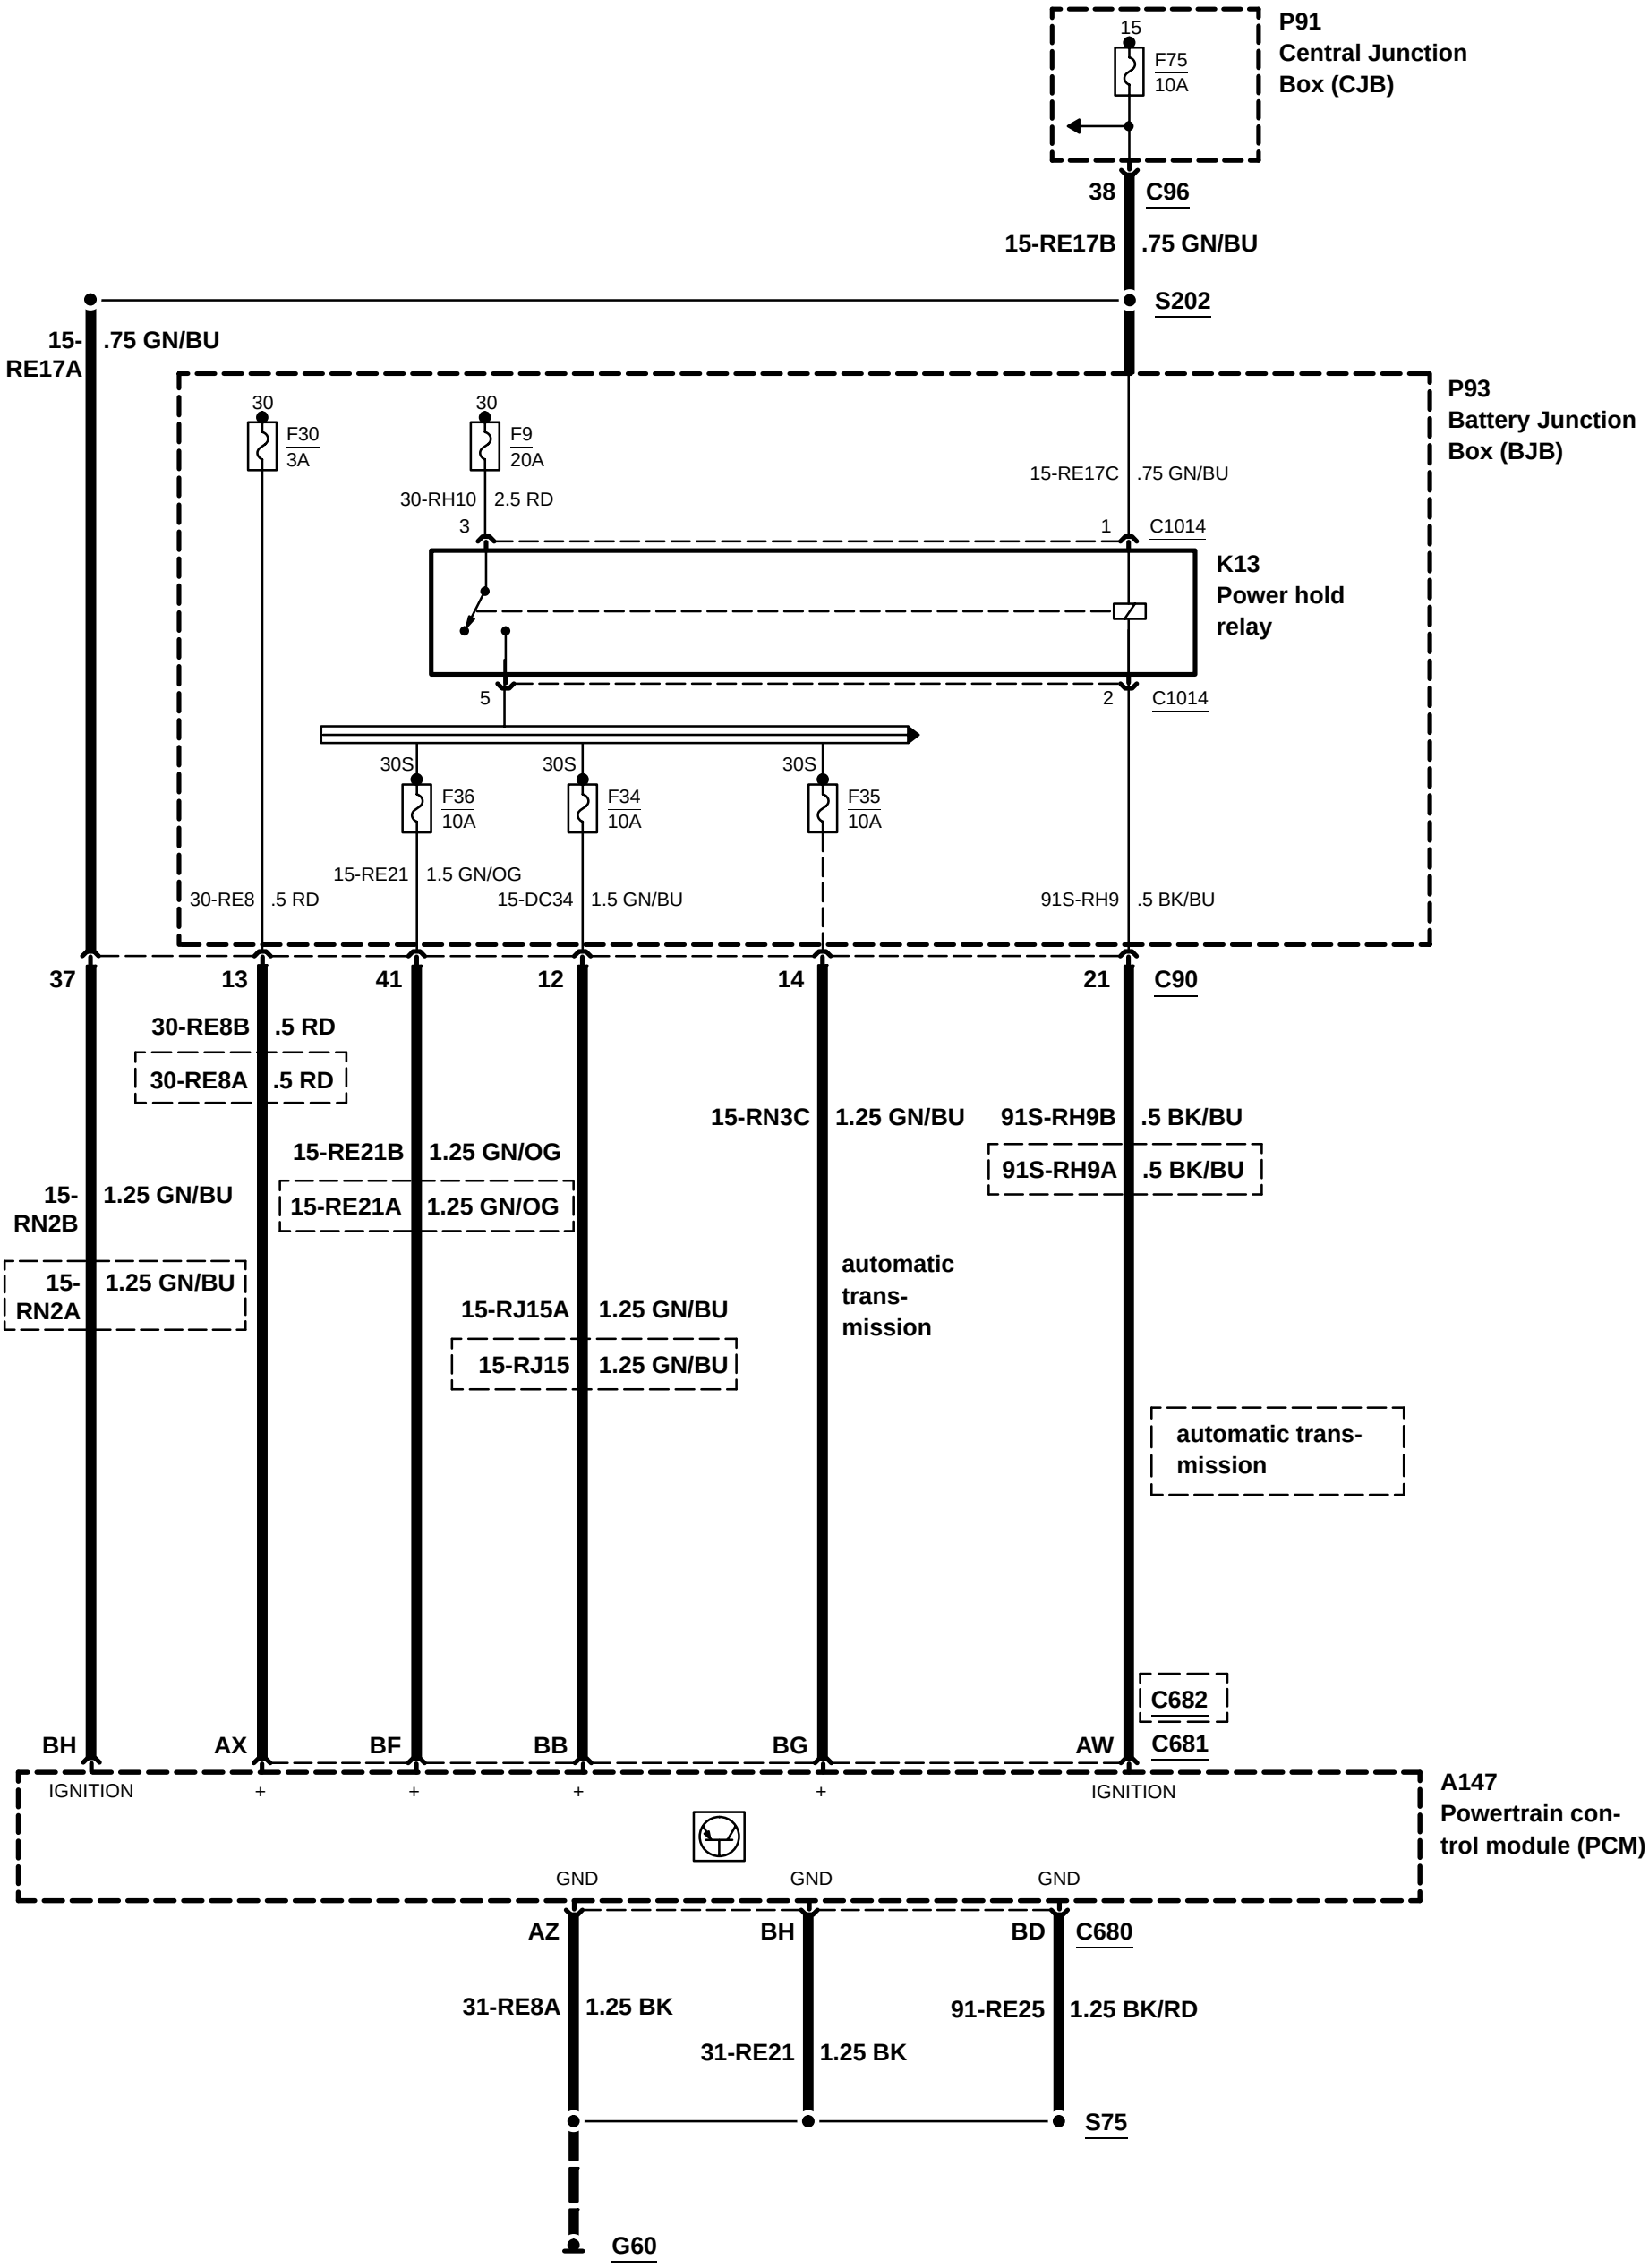


Electronic Engine Controls – 1.6L (Z6)

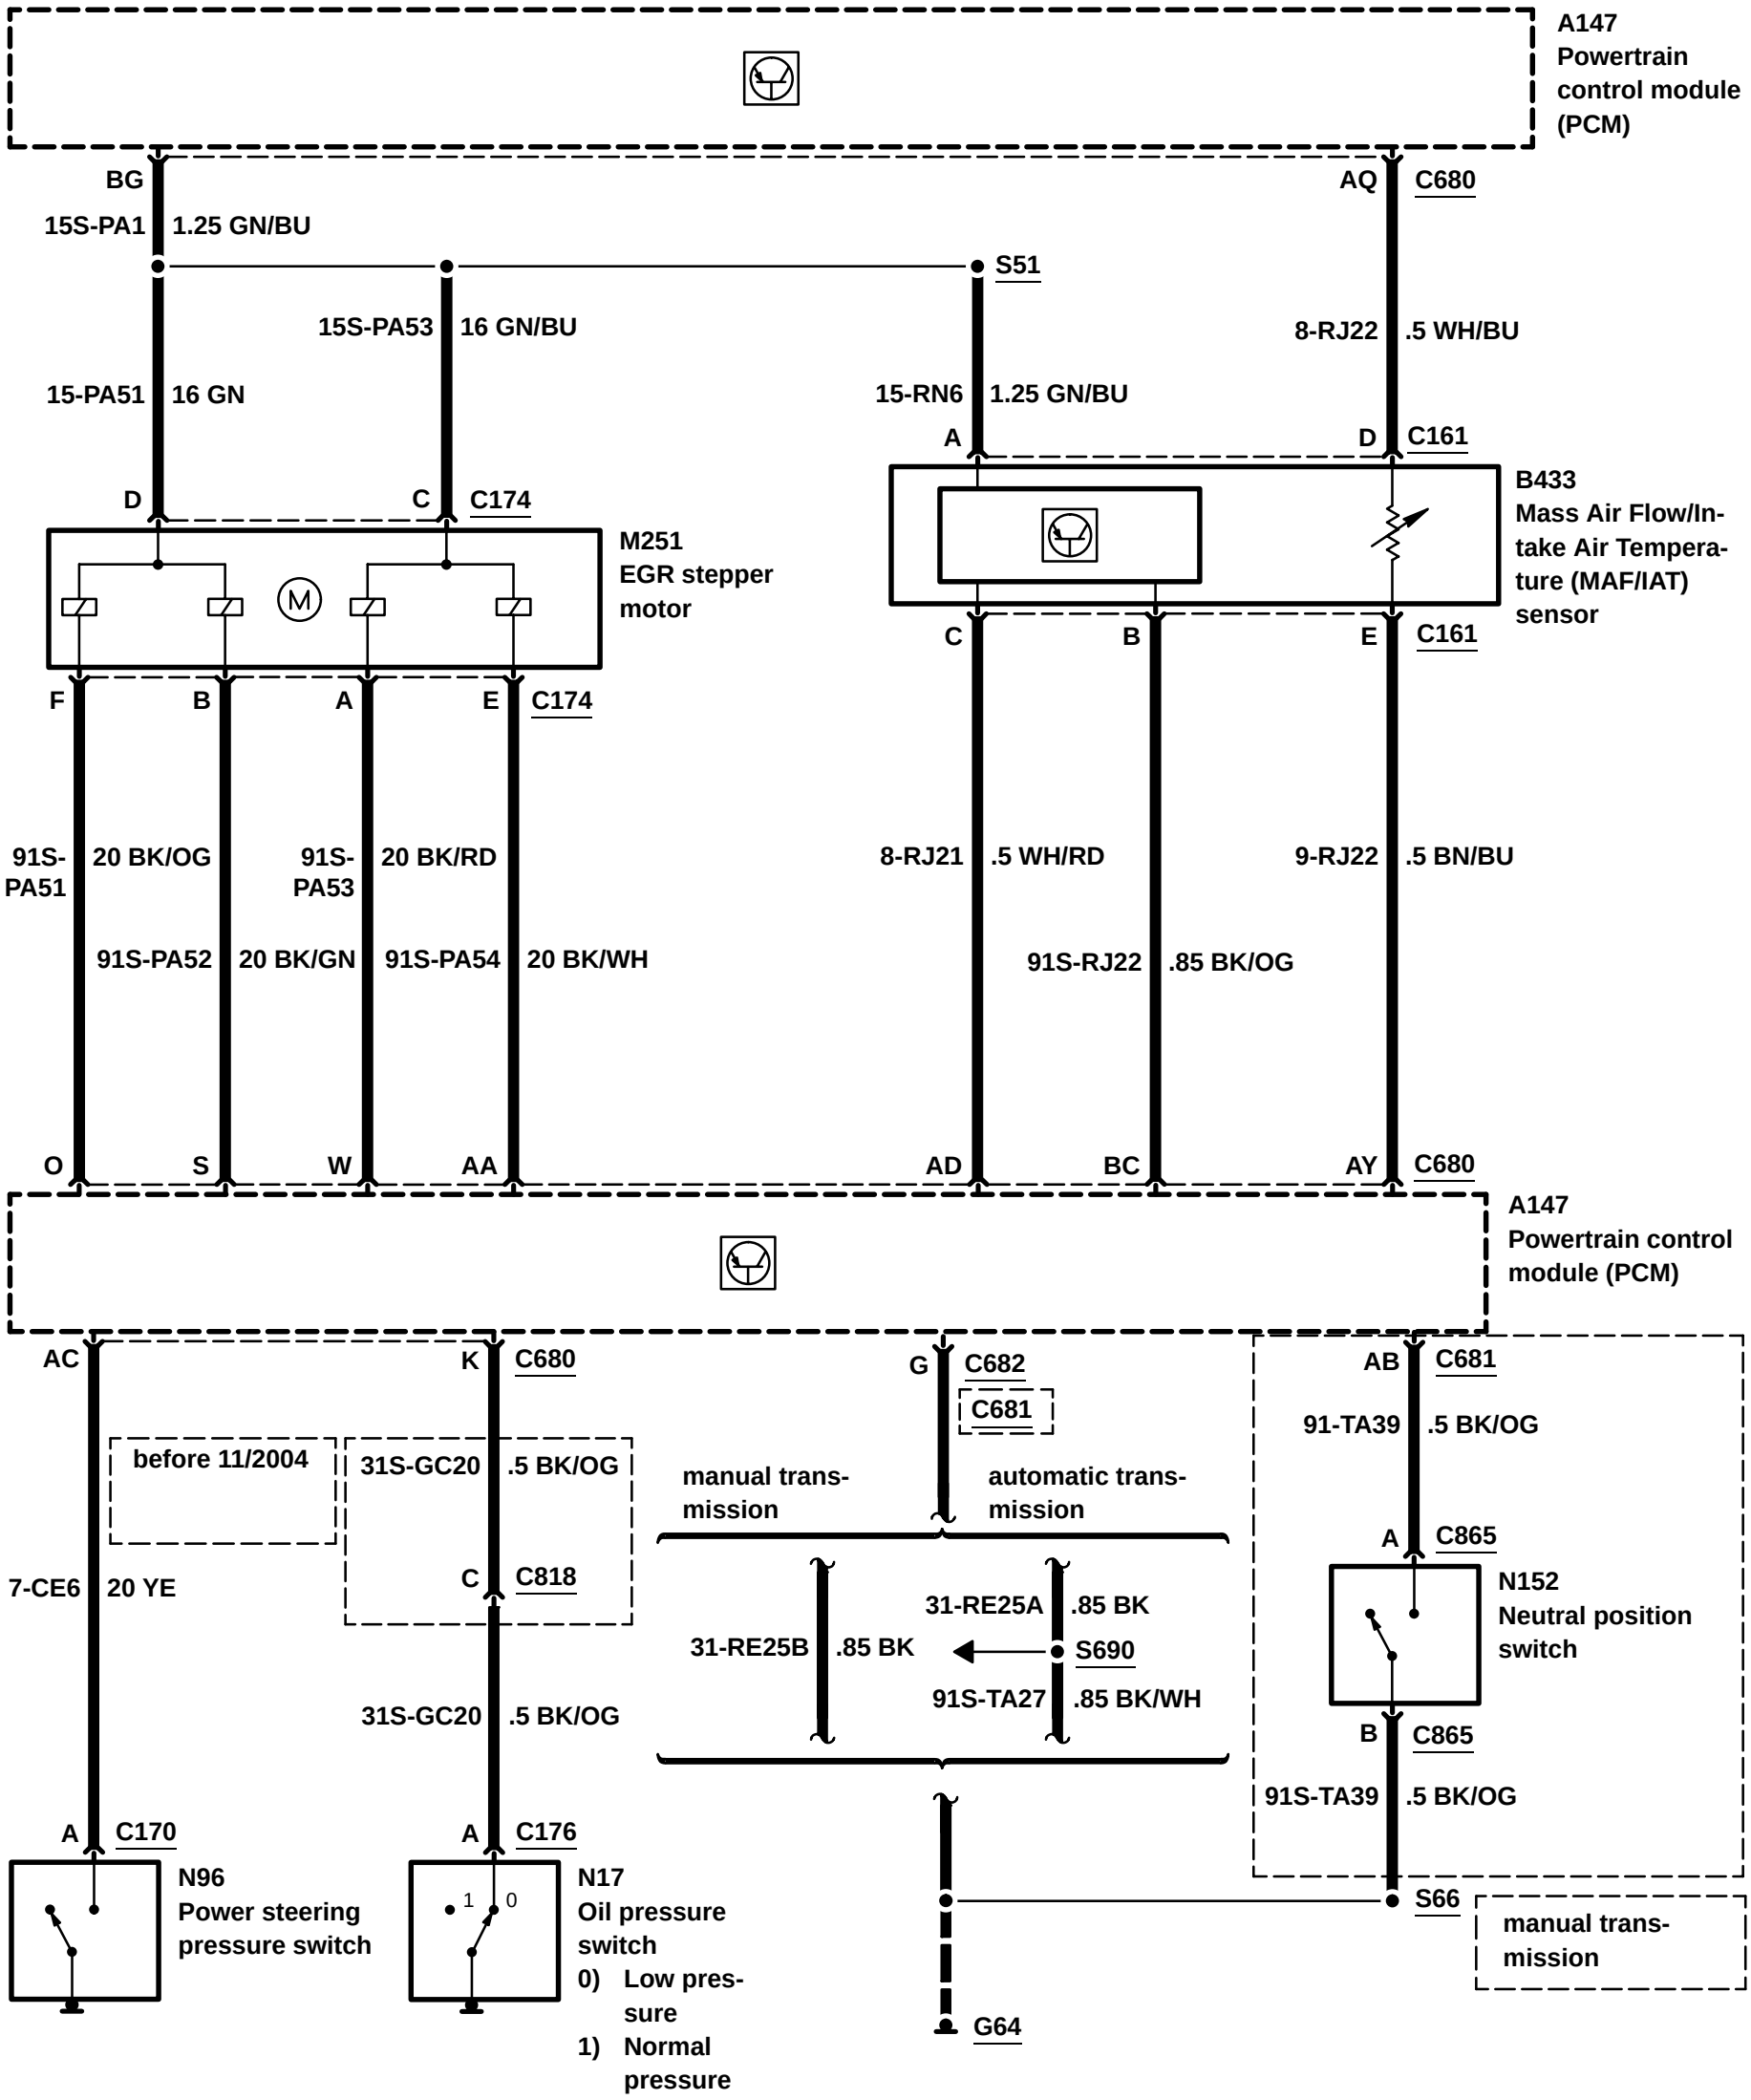


Electronic Engine Controls – 1.6L (Z6)

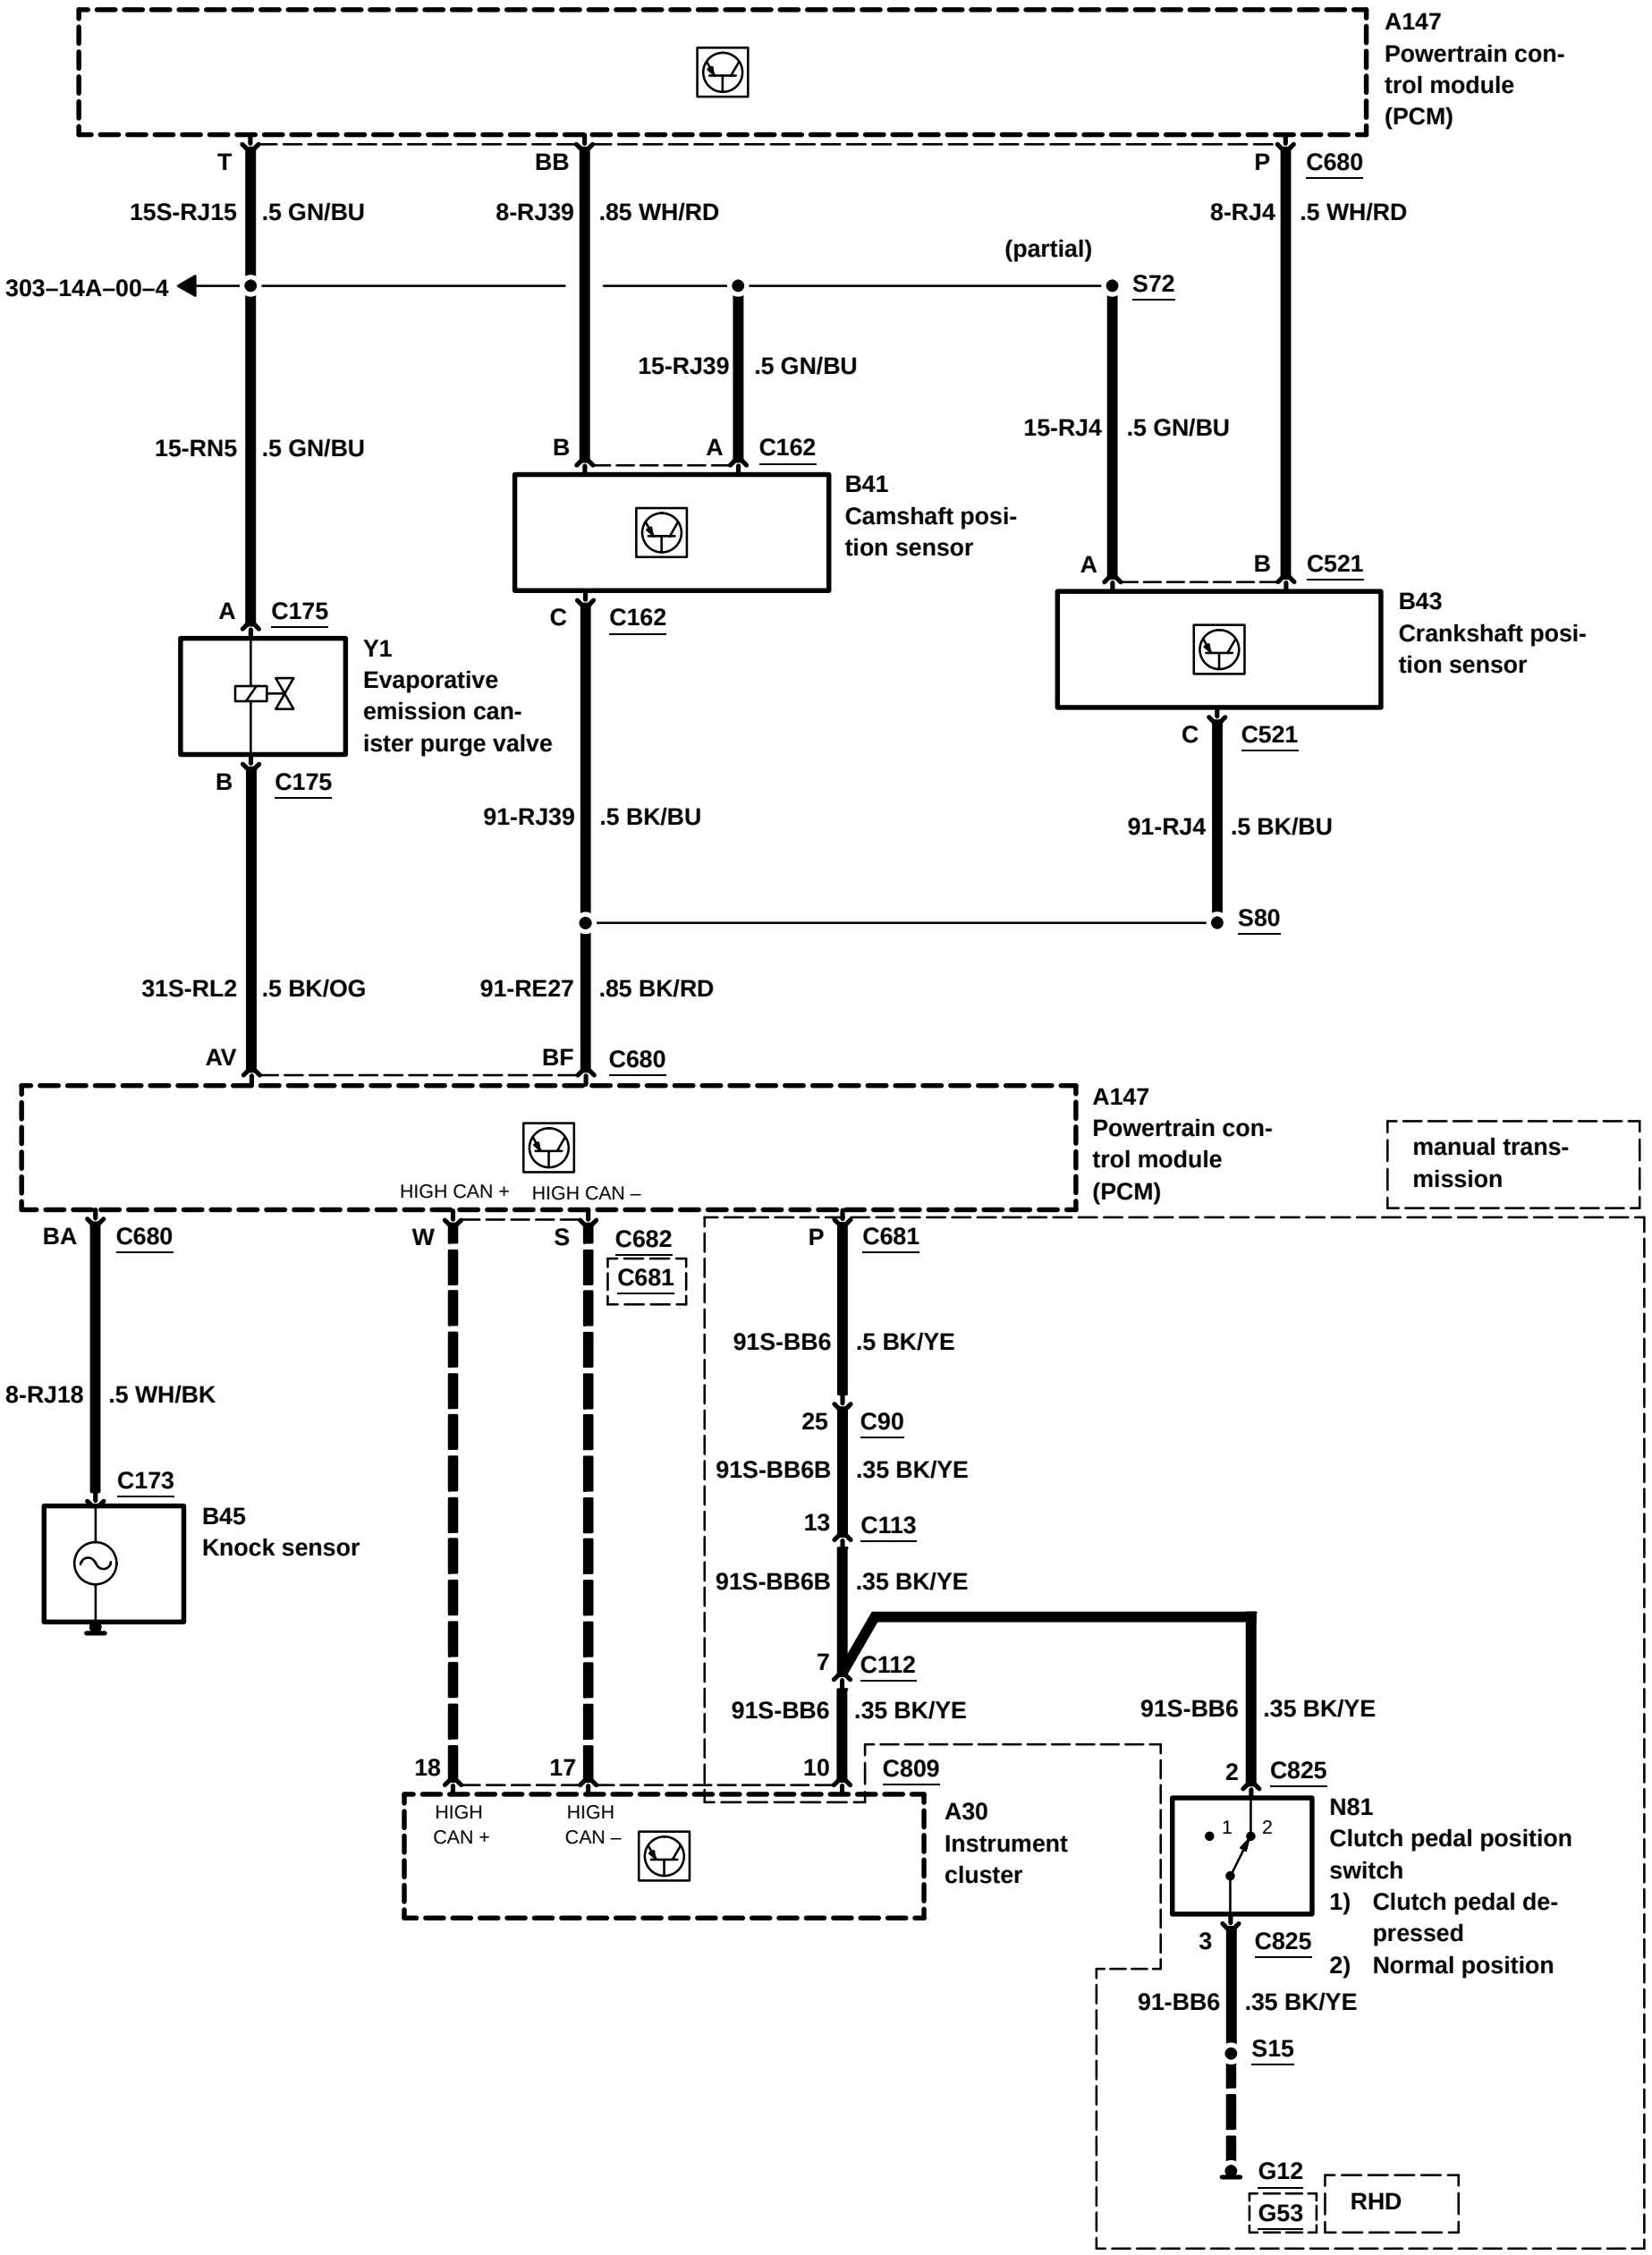


Electronic Engine Controls – 1.6L (Z6)

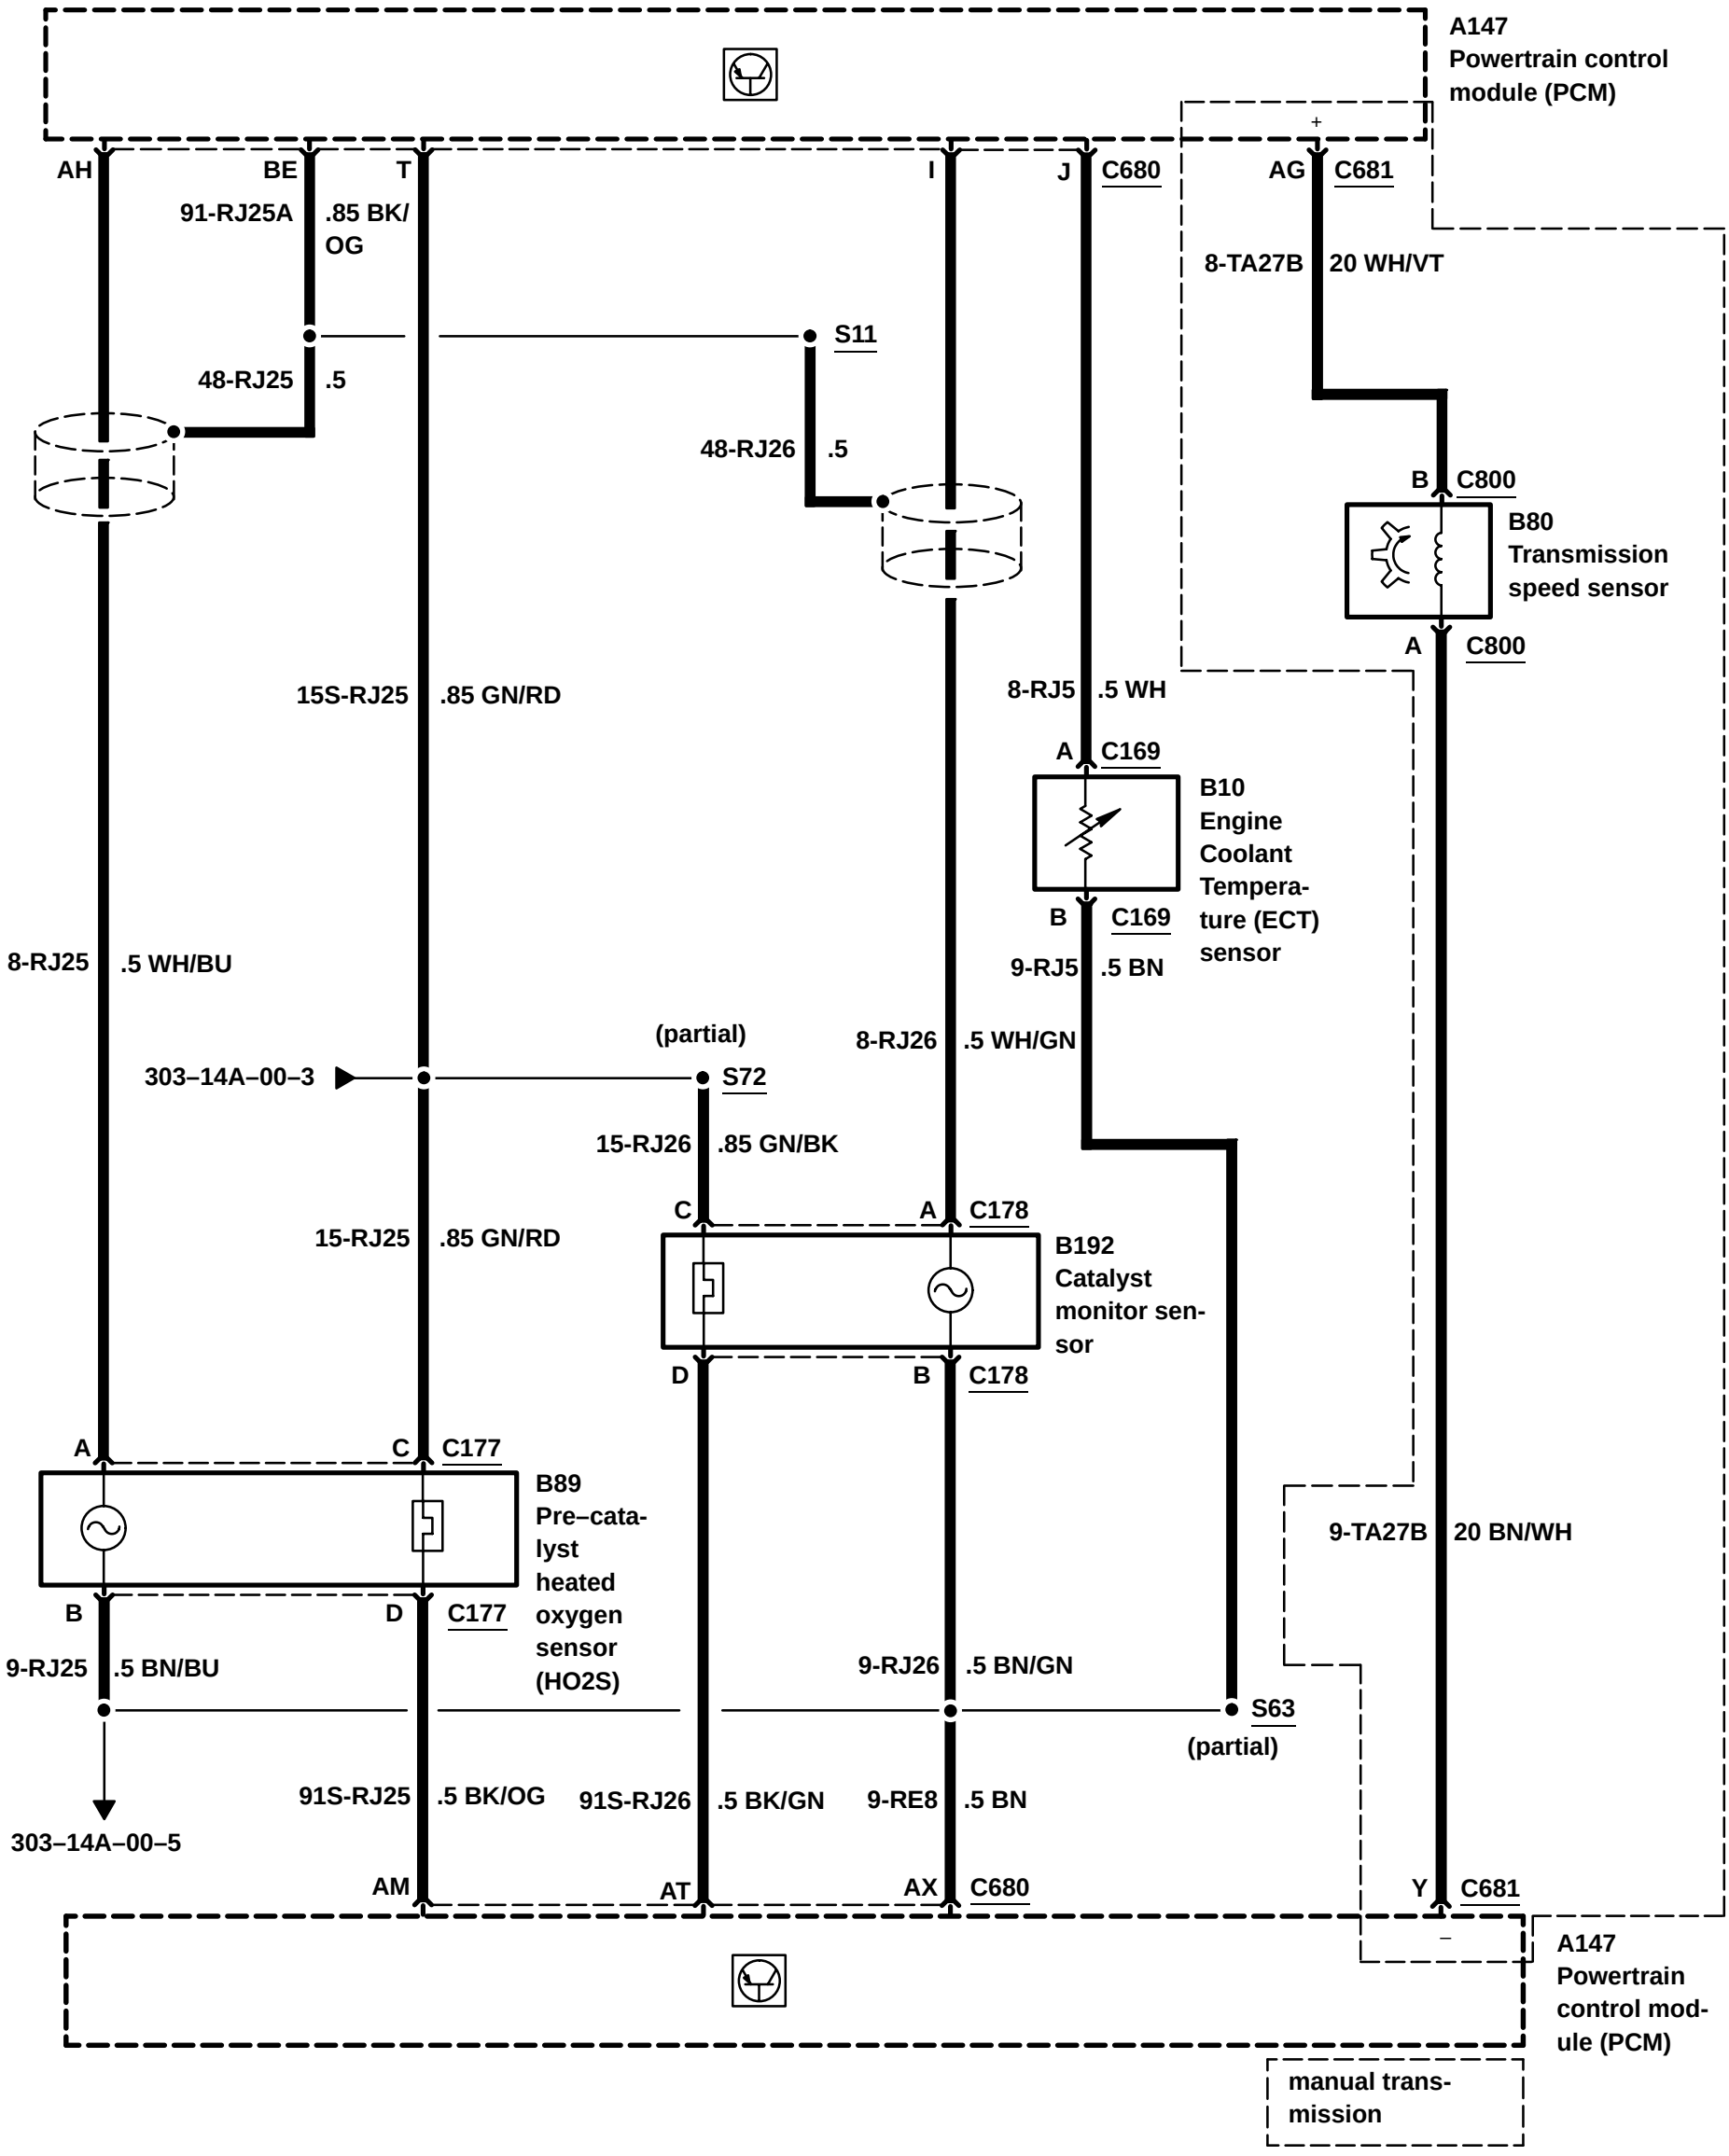


Electronic Engine Controls – 1.6L (Z6)

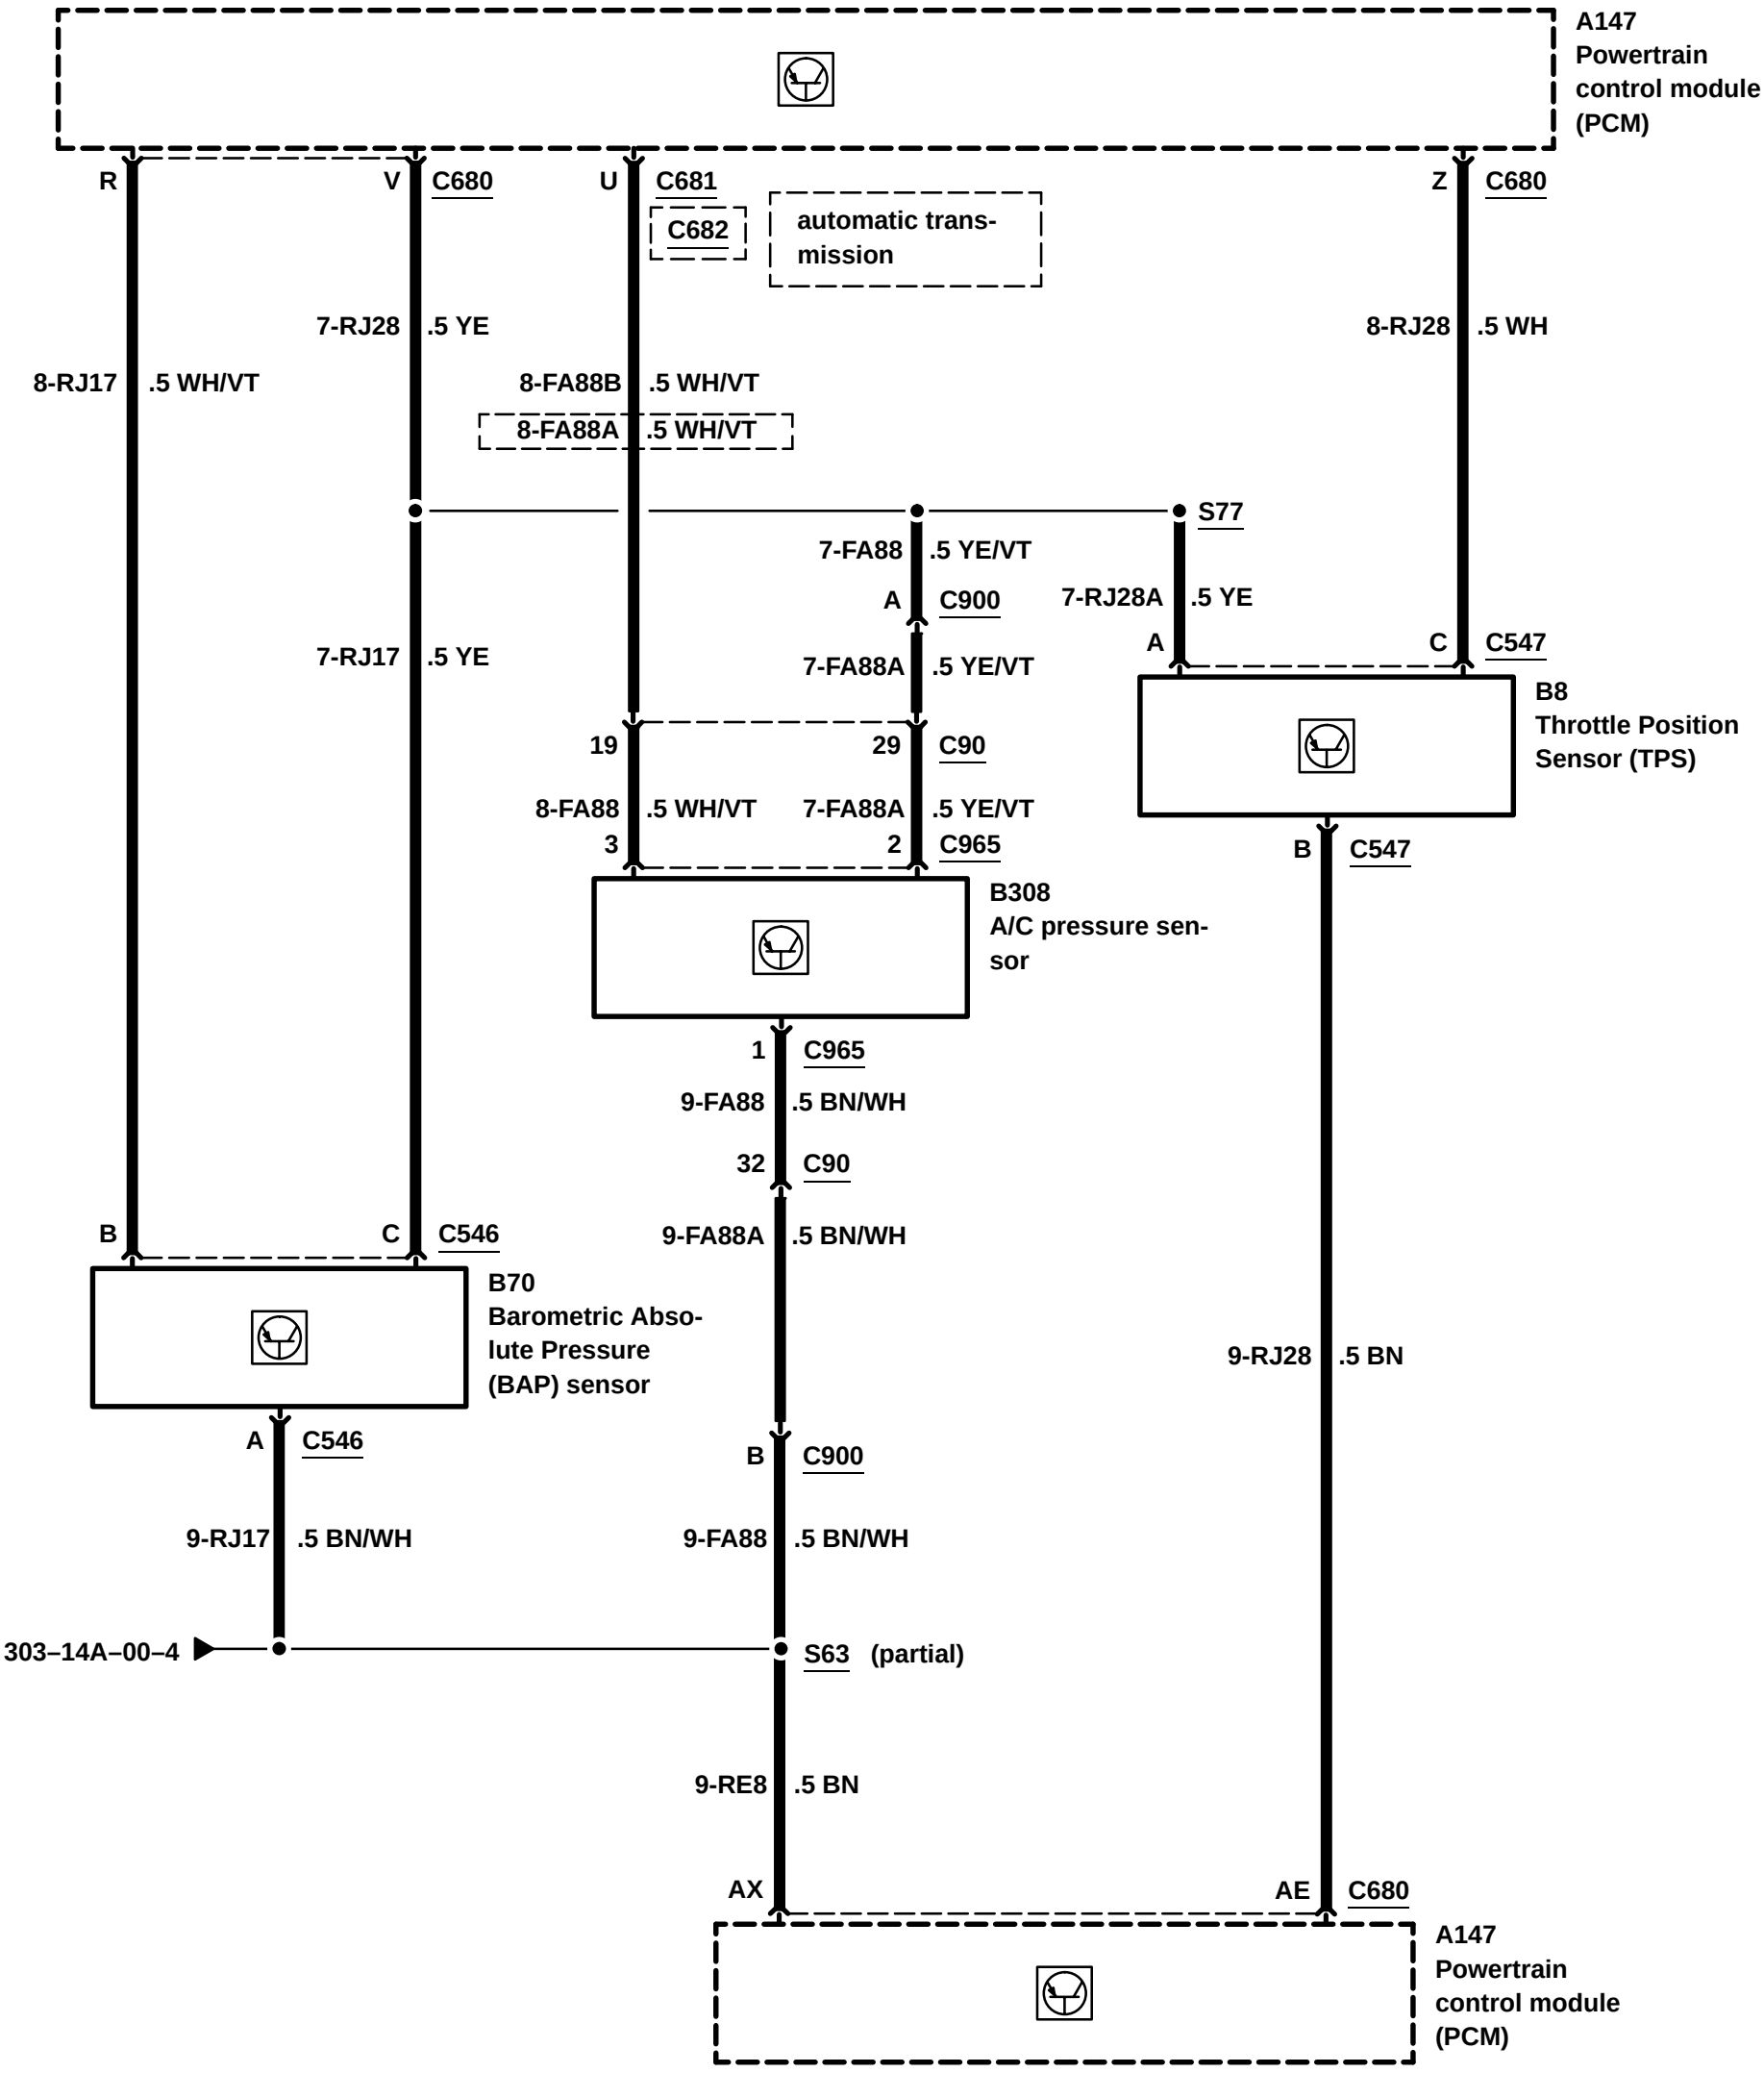

Electronic Engine Controls – 1.6L (Z6)

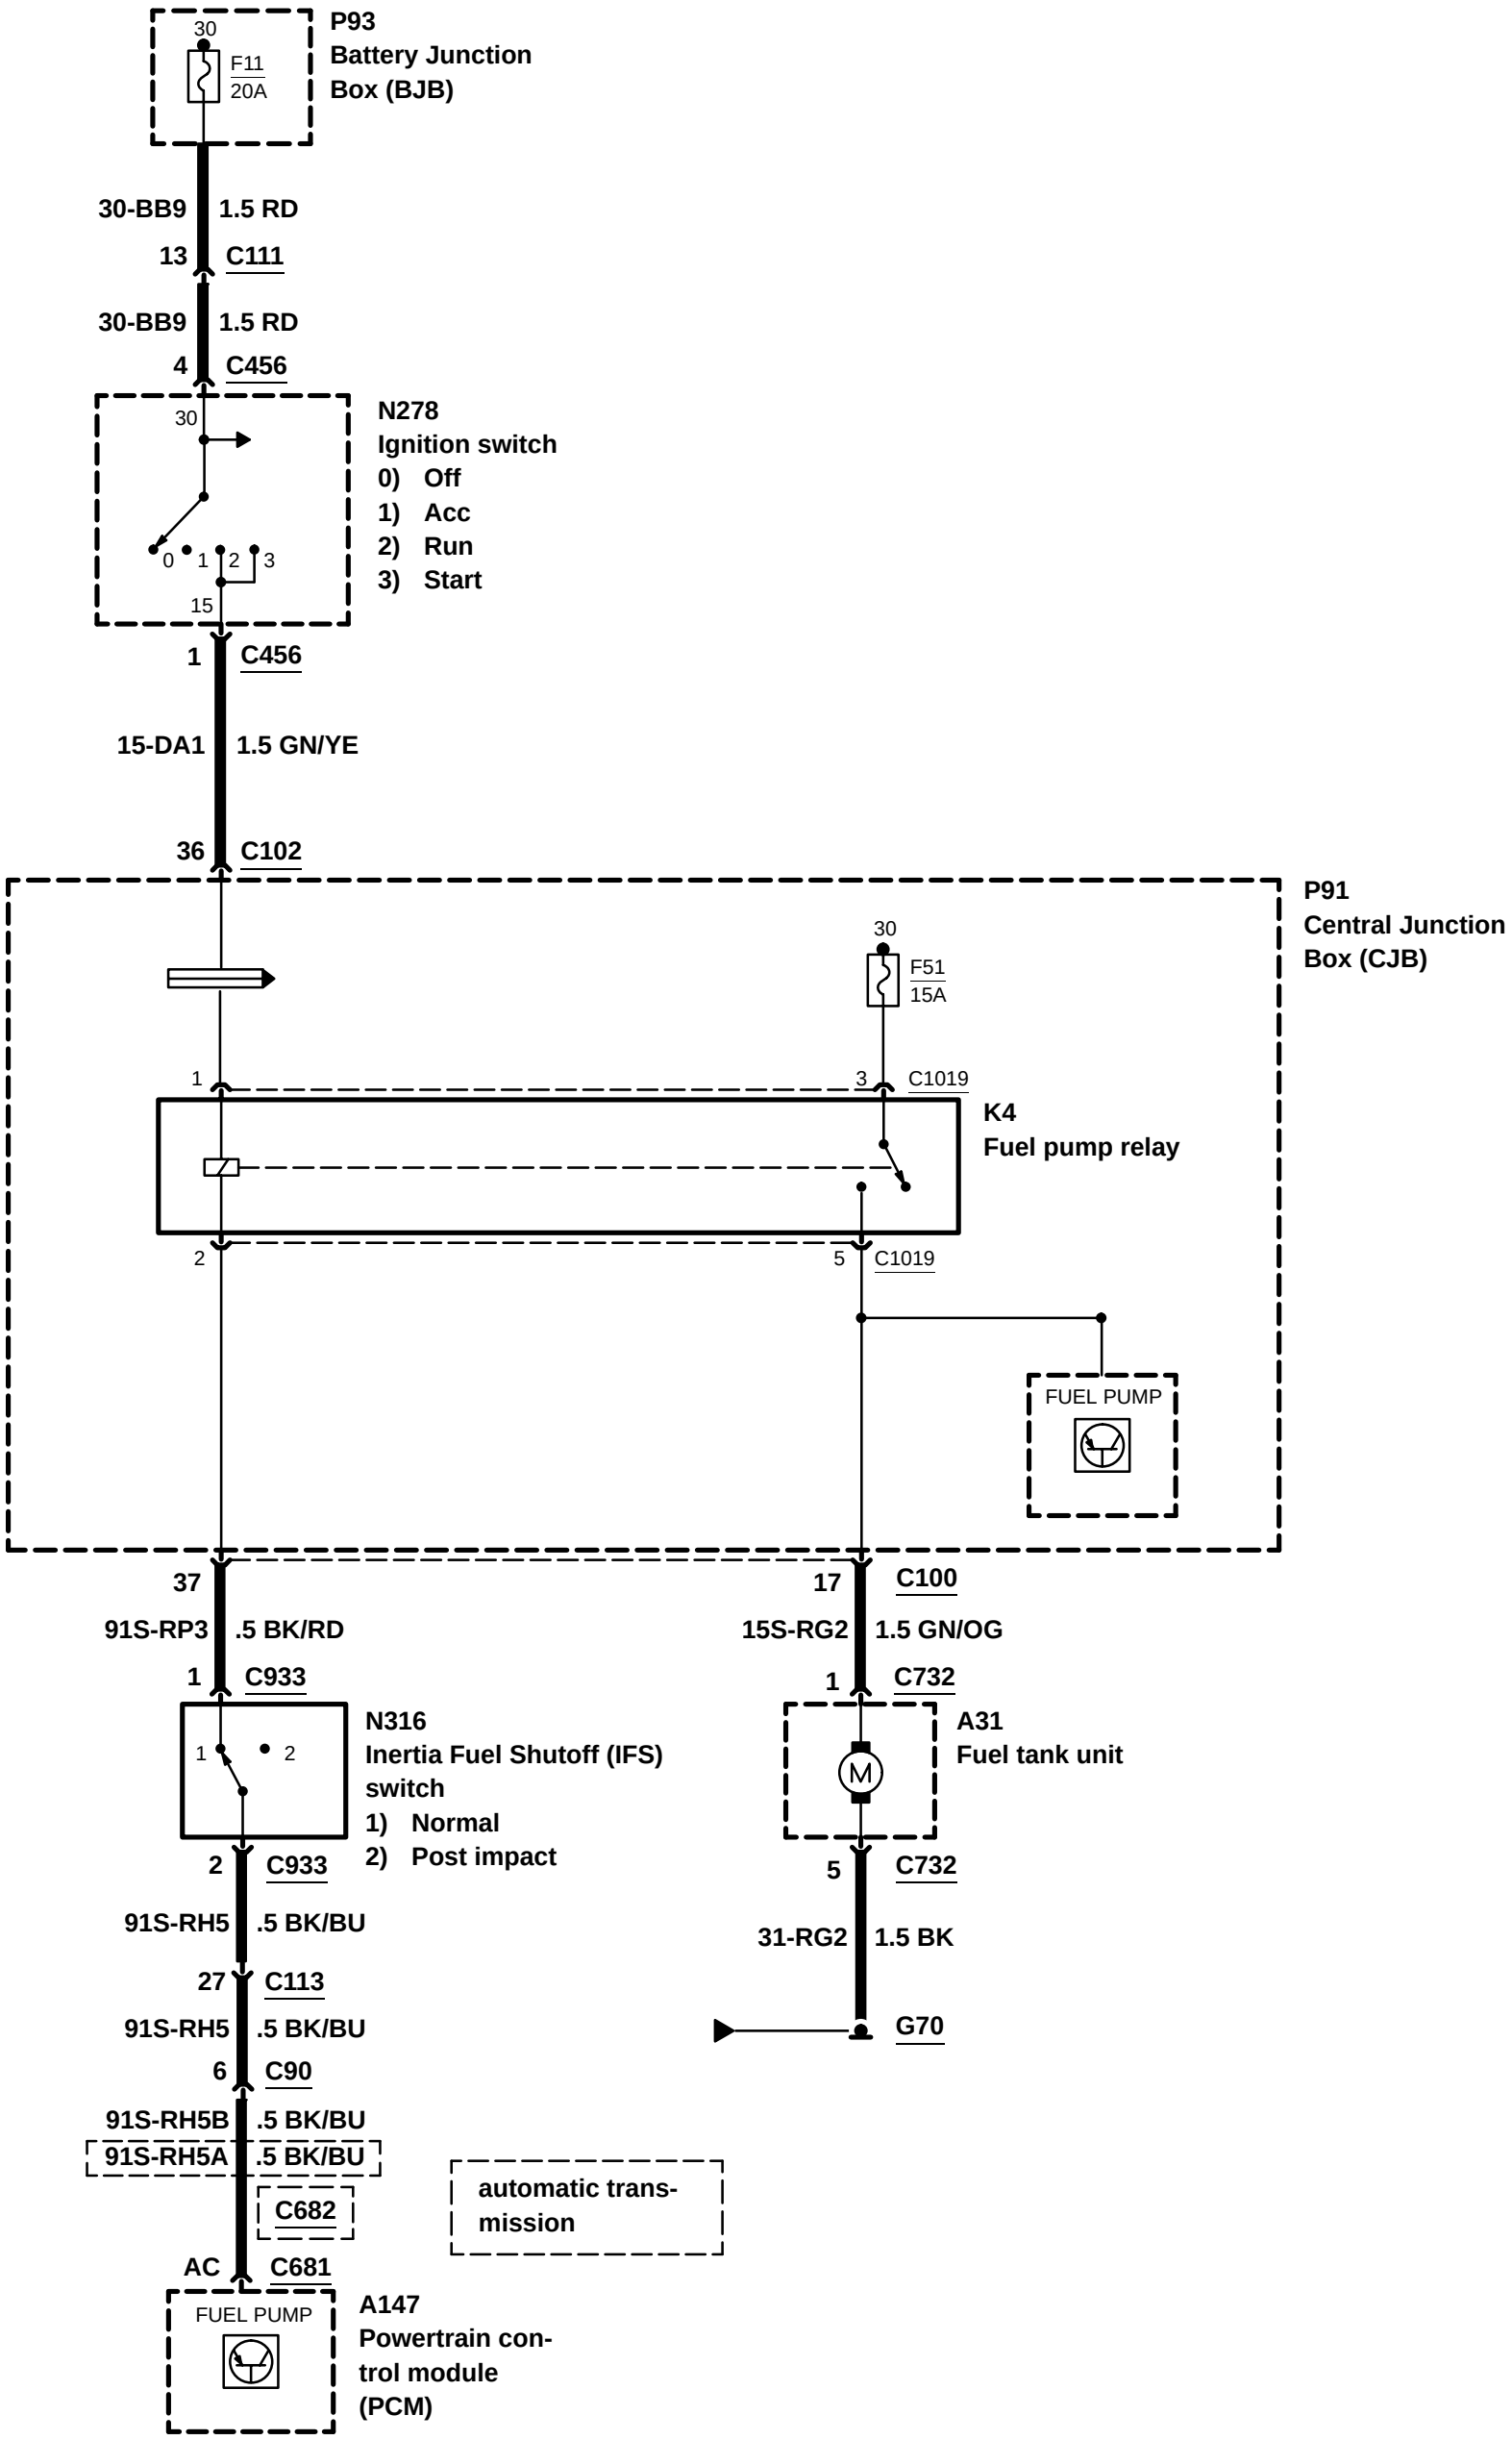


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

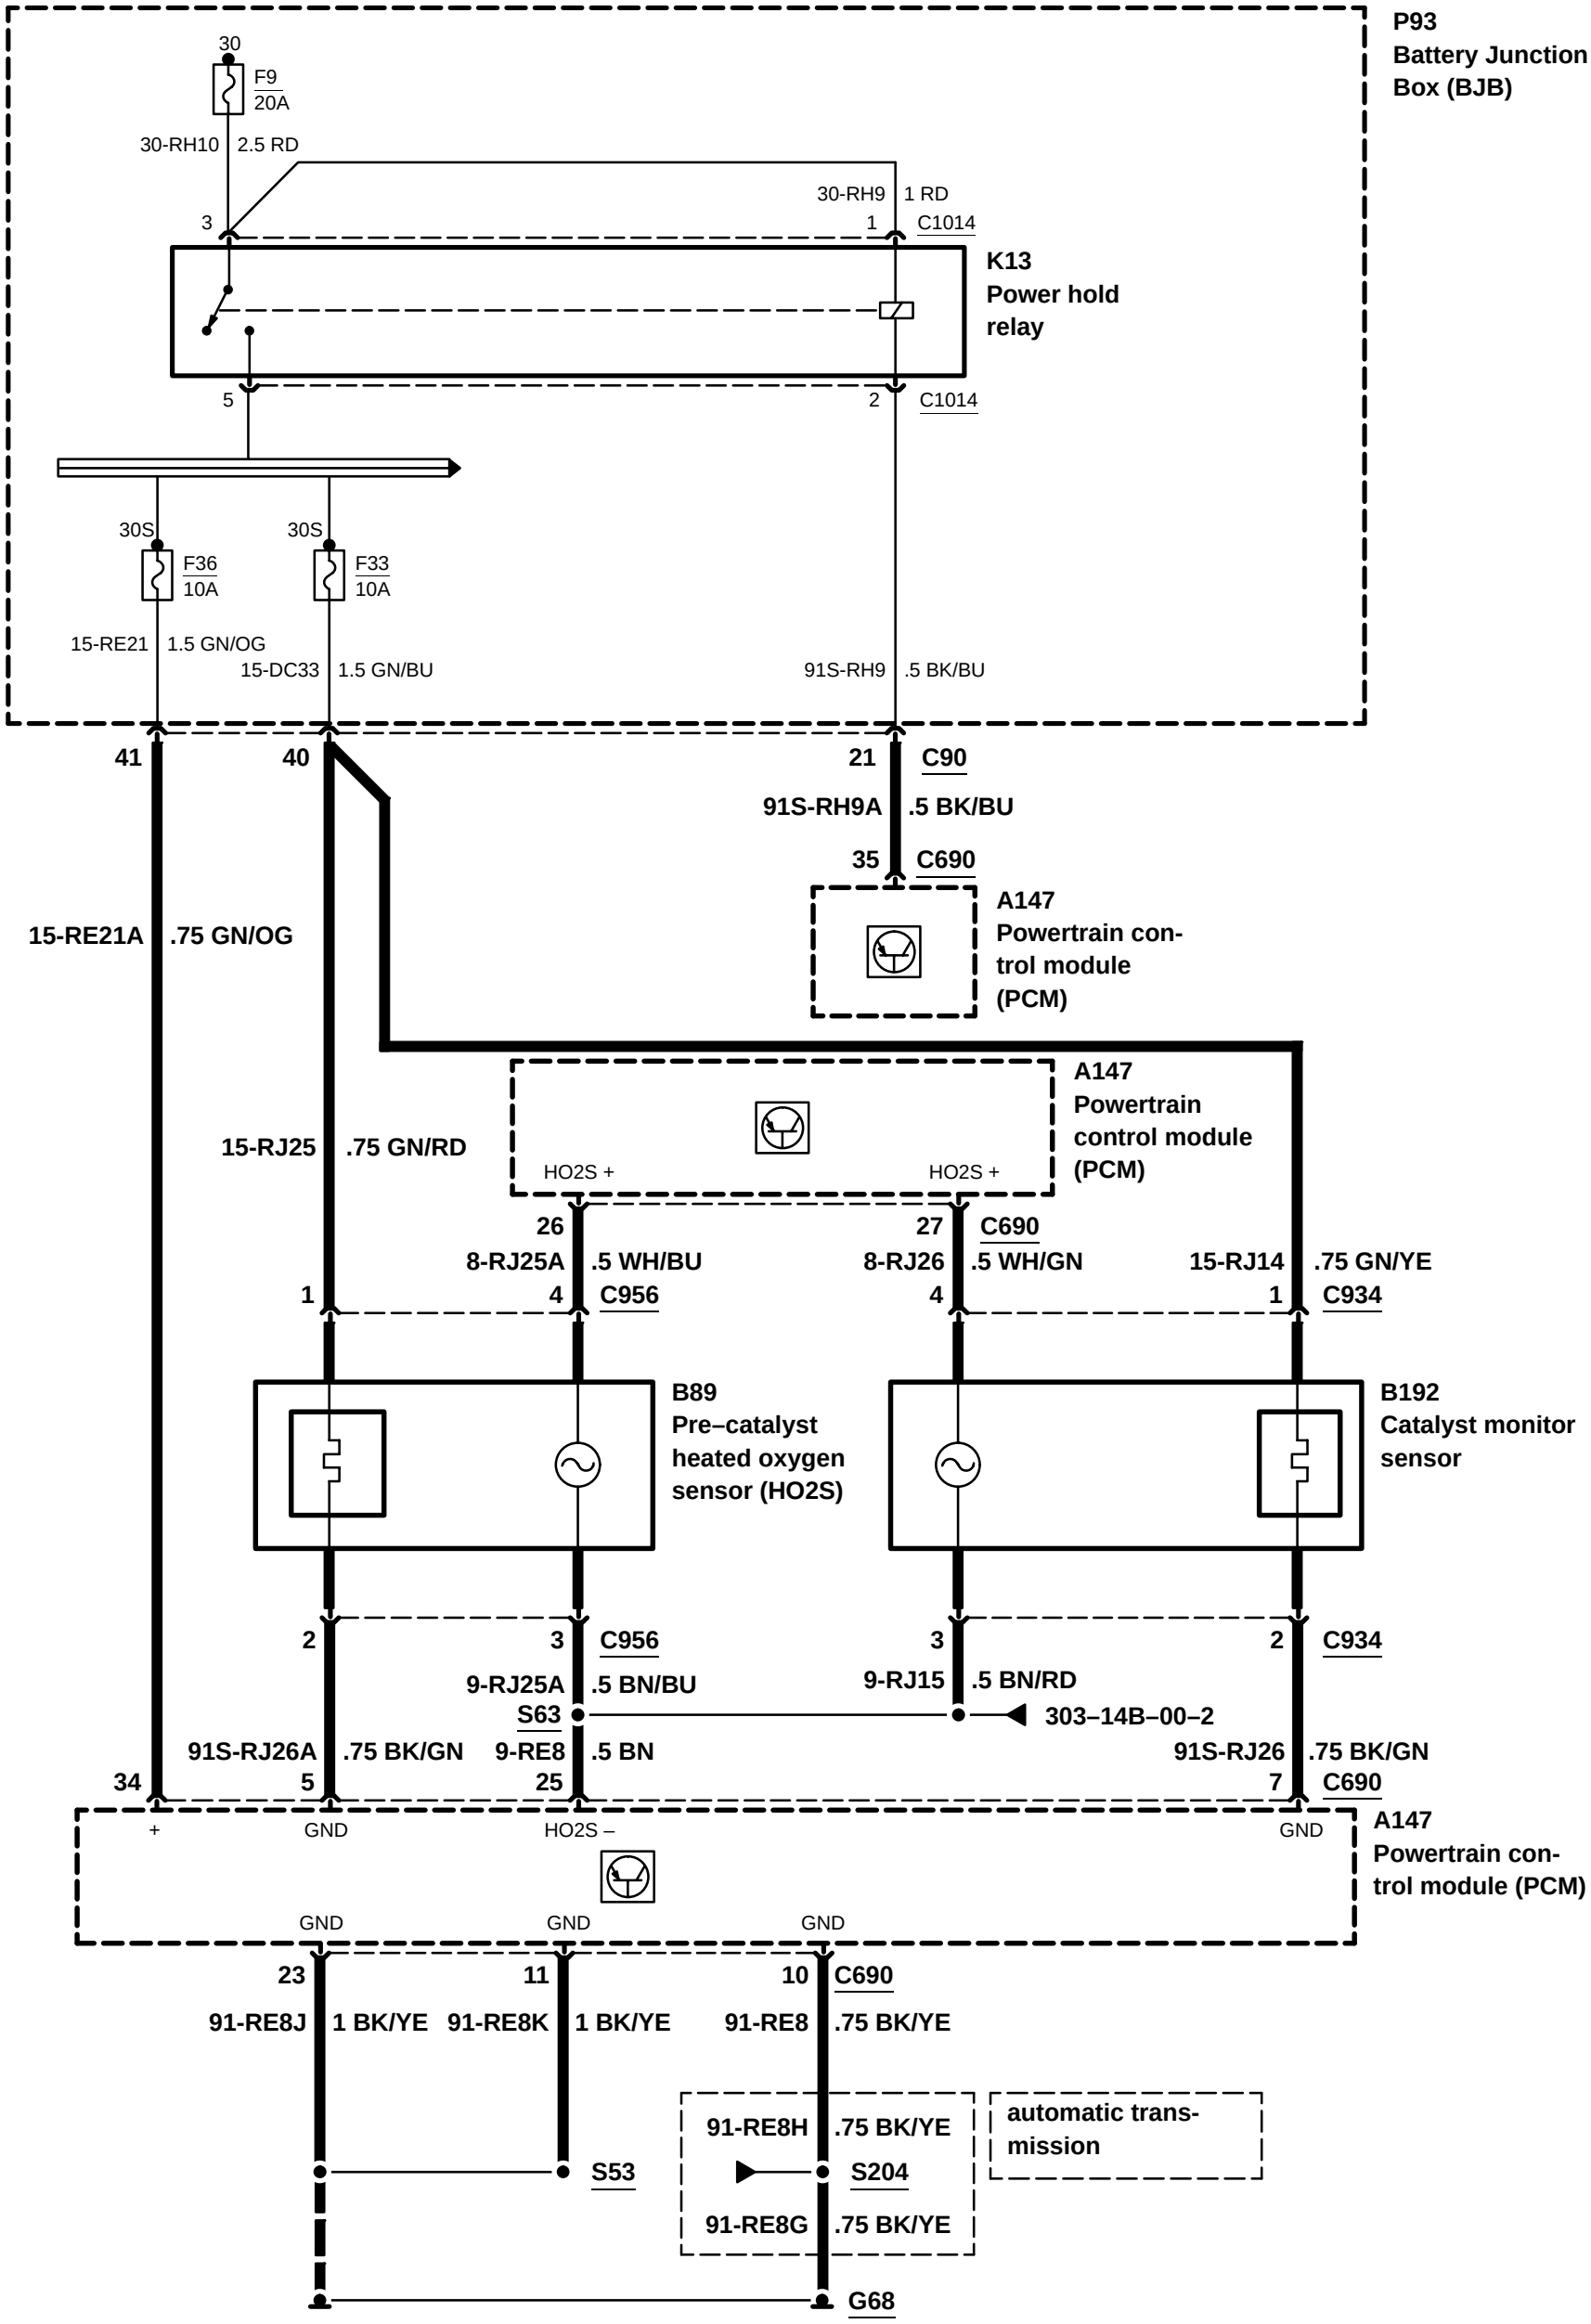


P93
Battery Junction
Box (BJB)


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

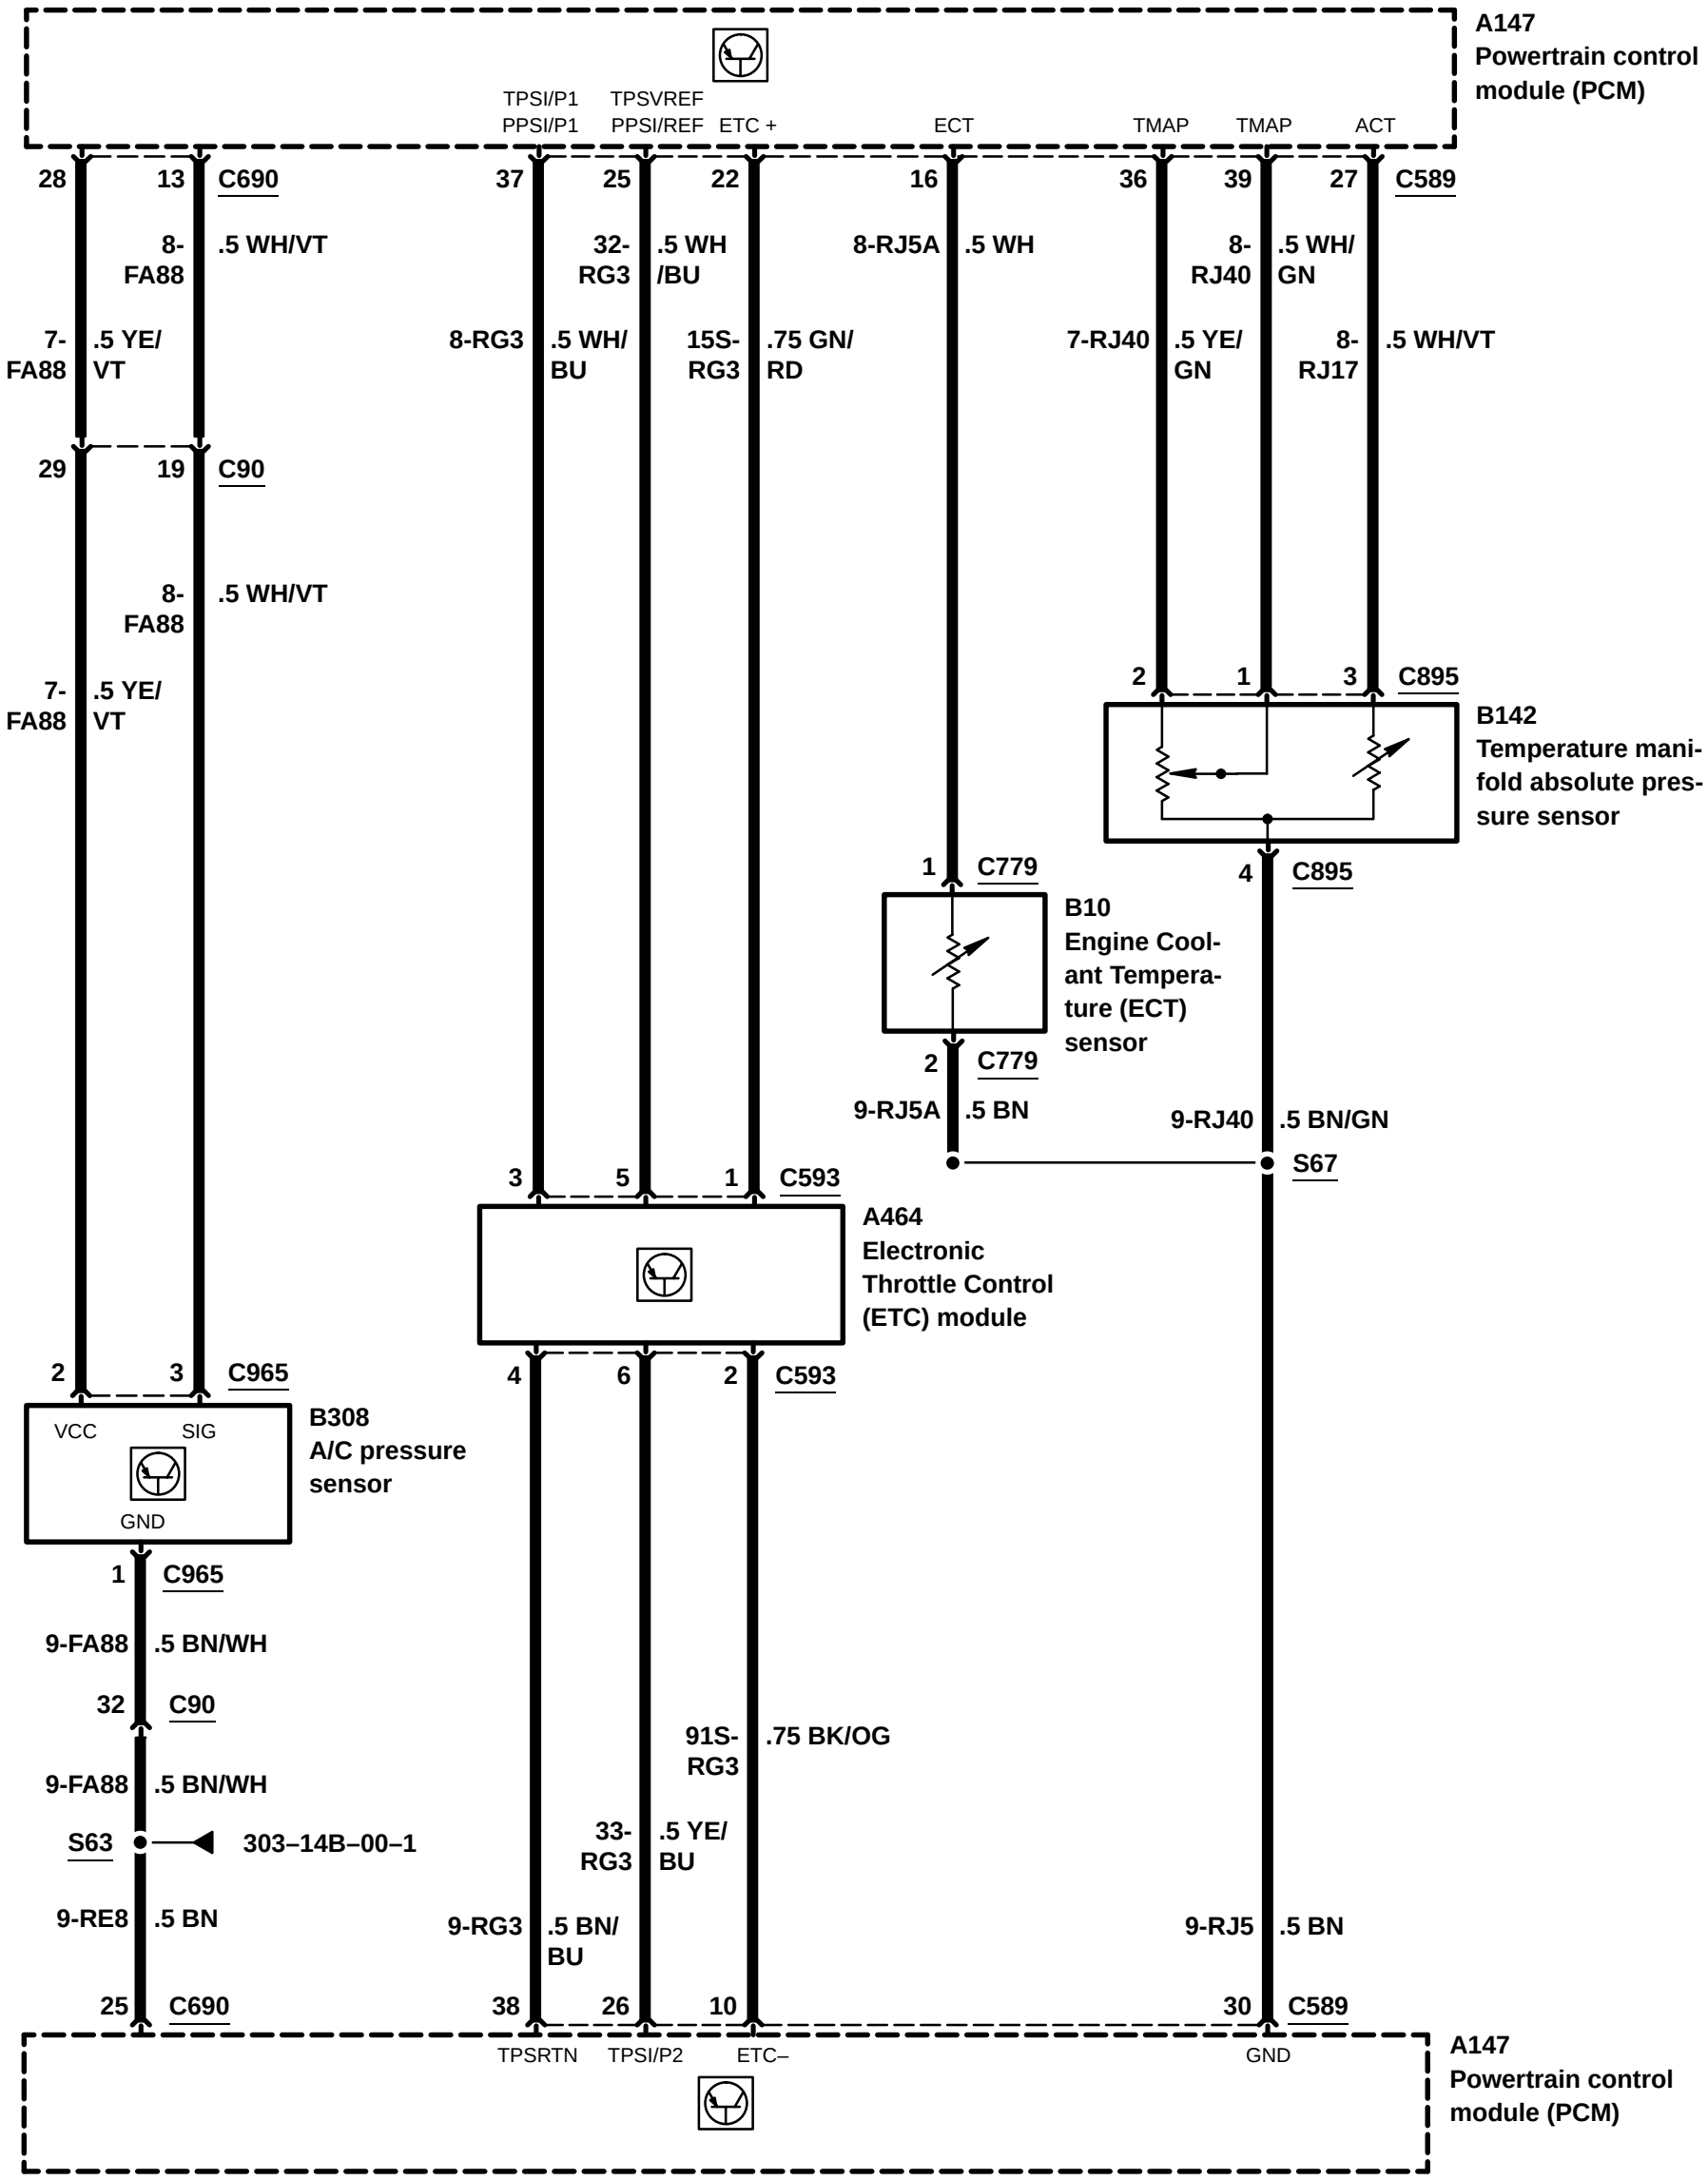


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

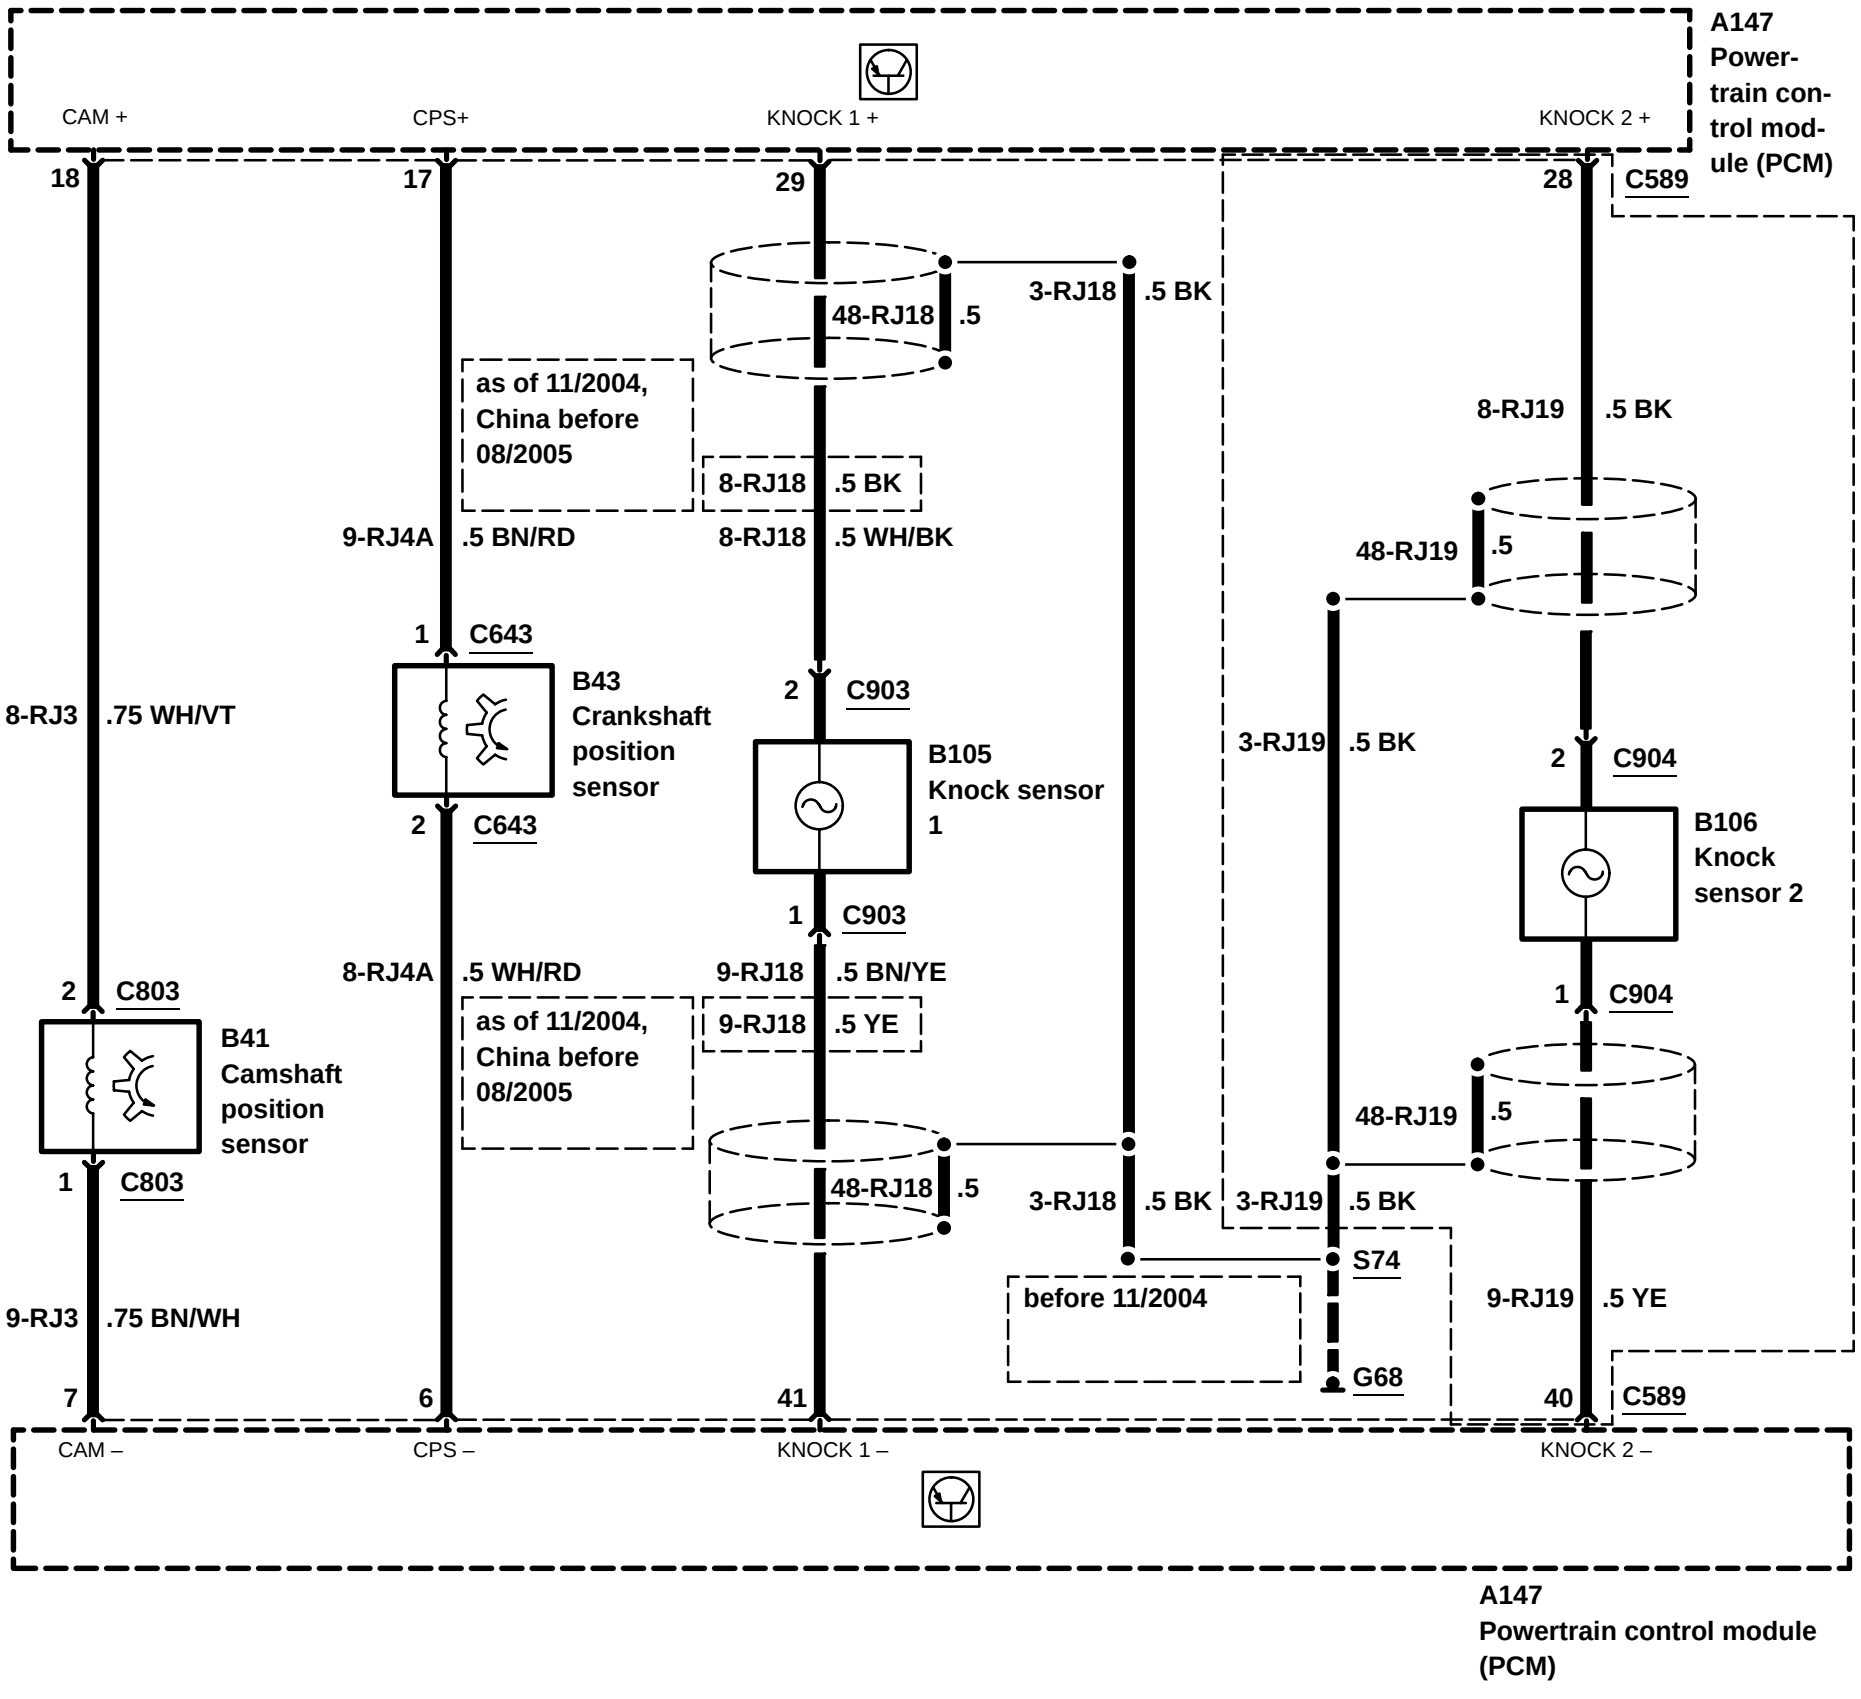


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

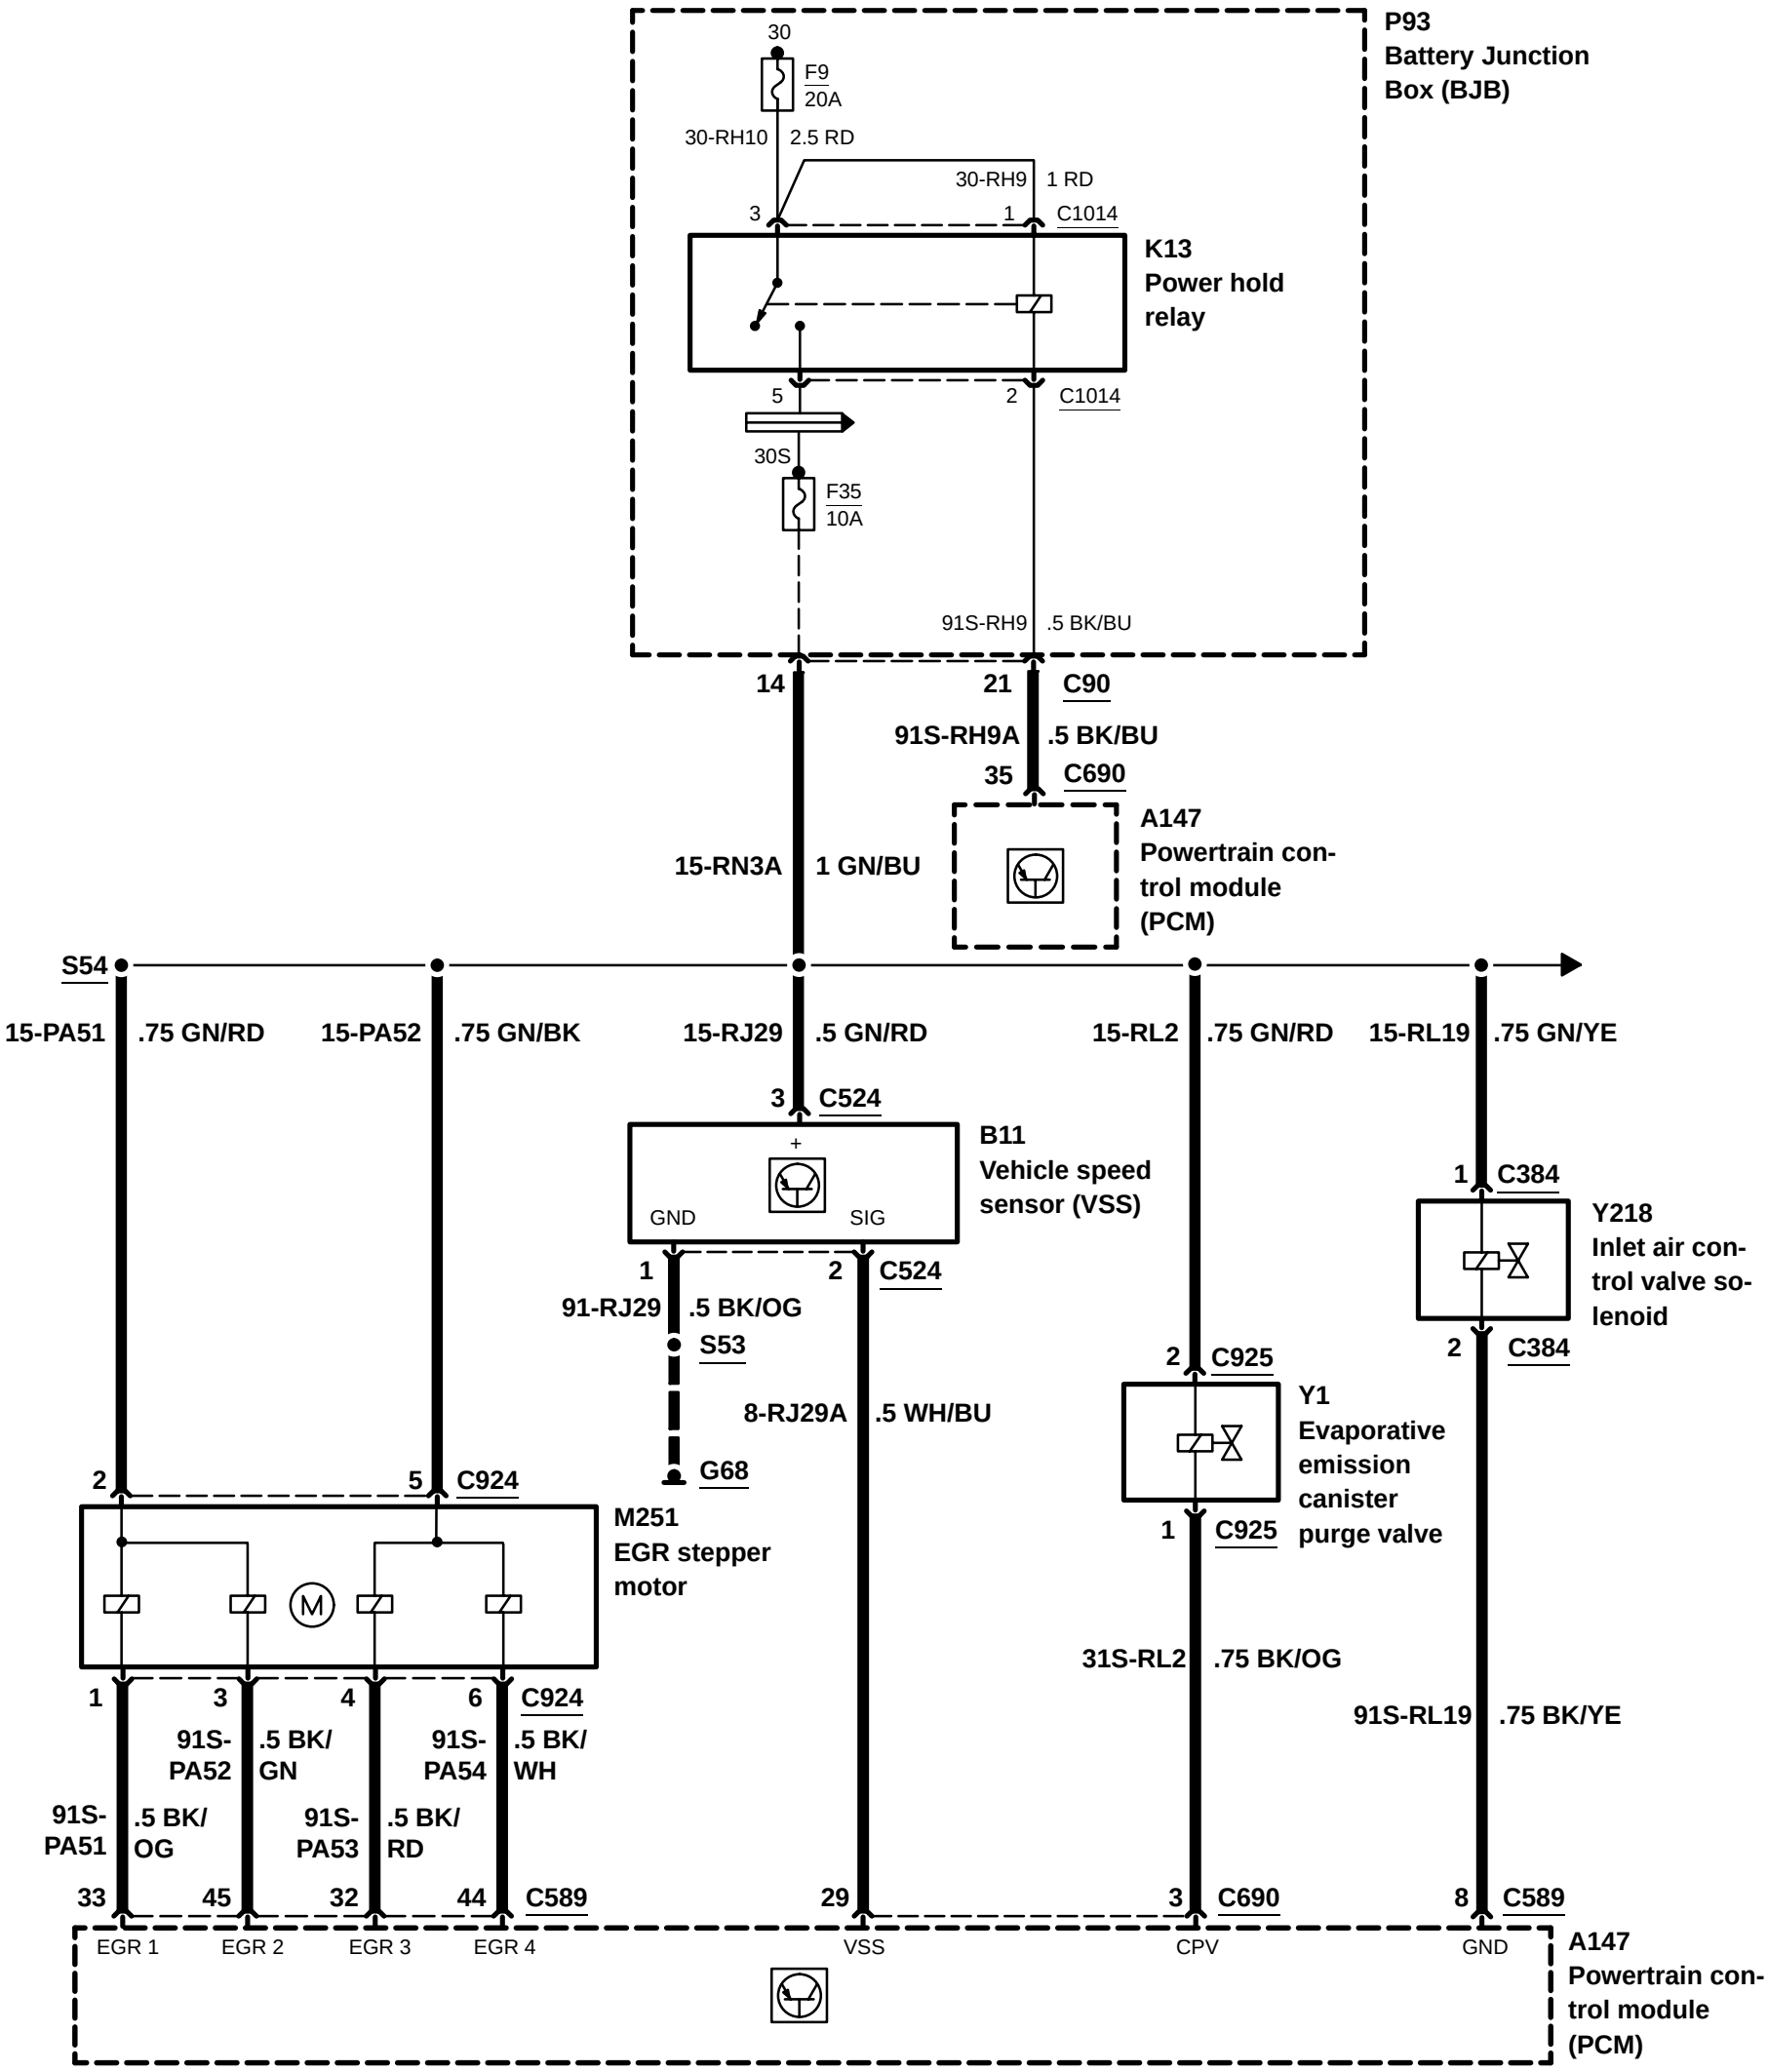


Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

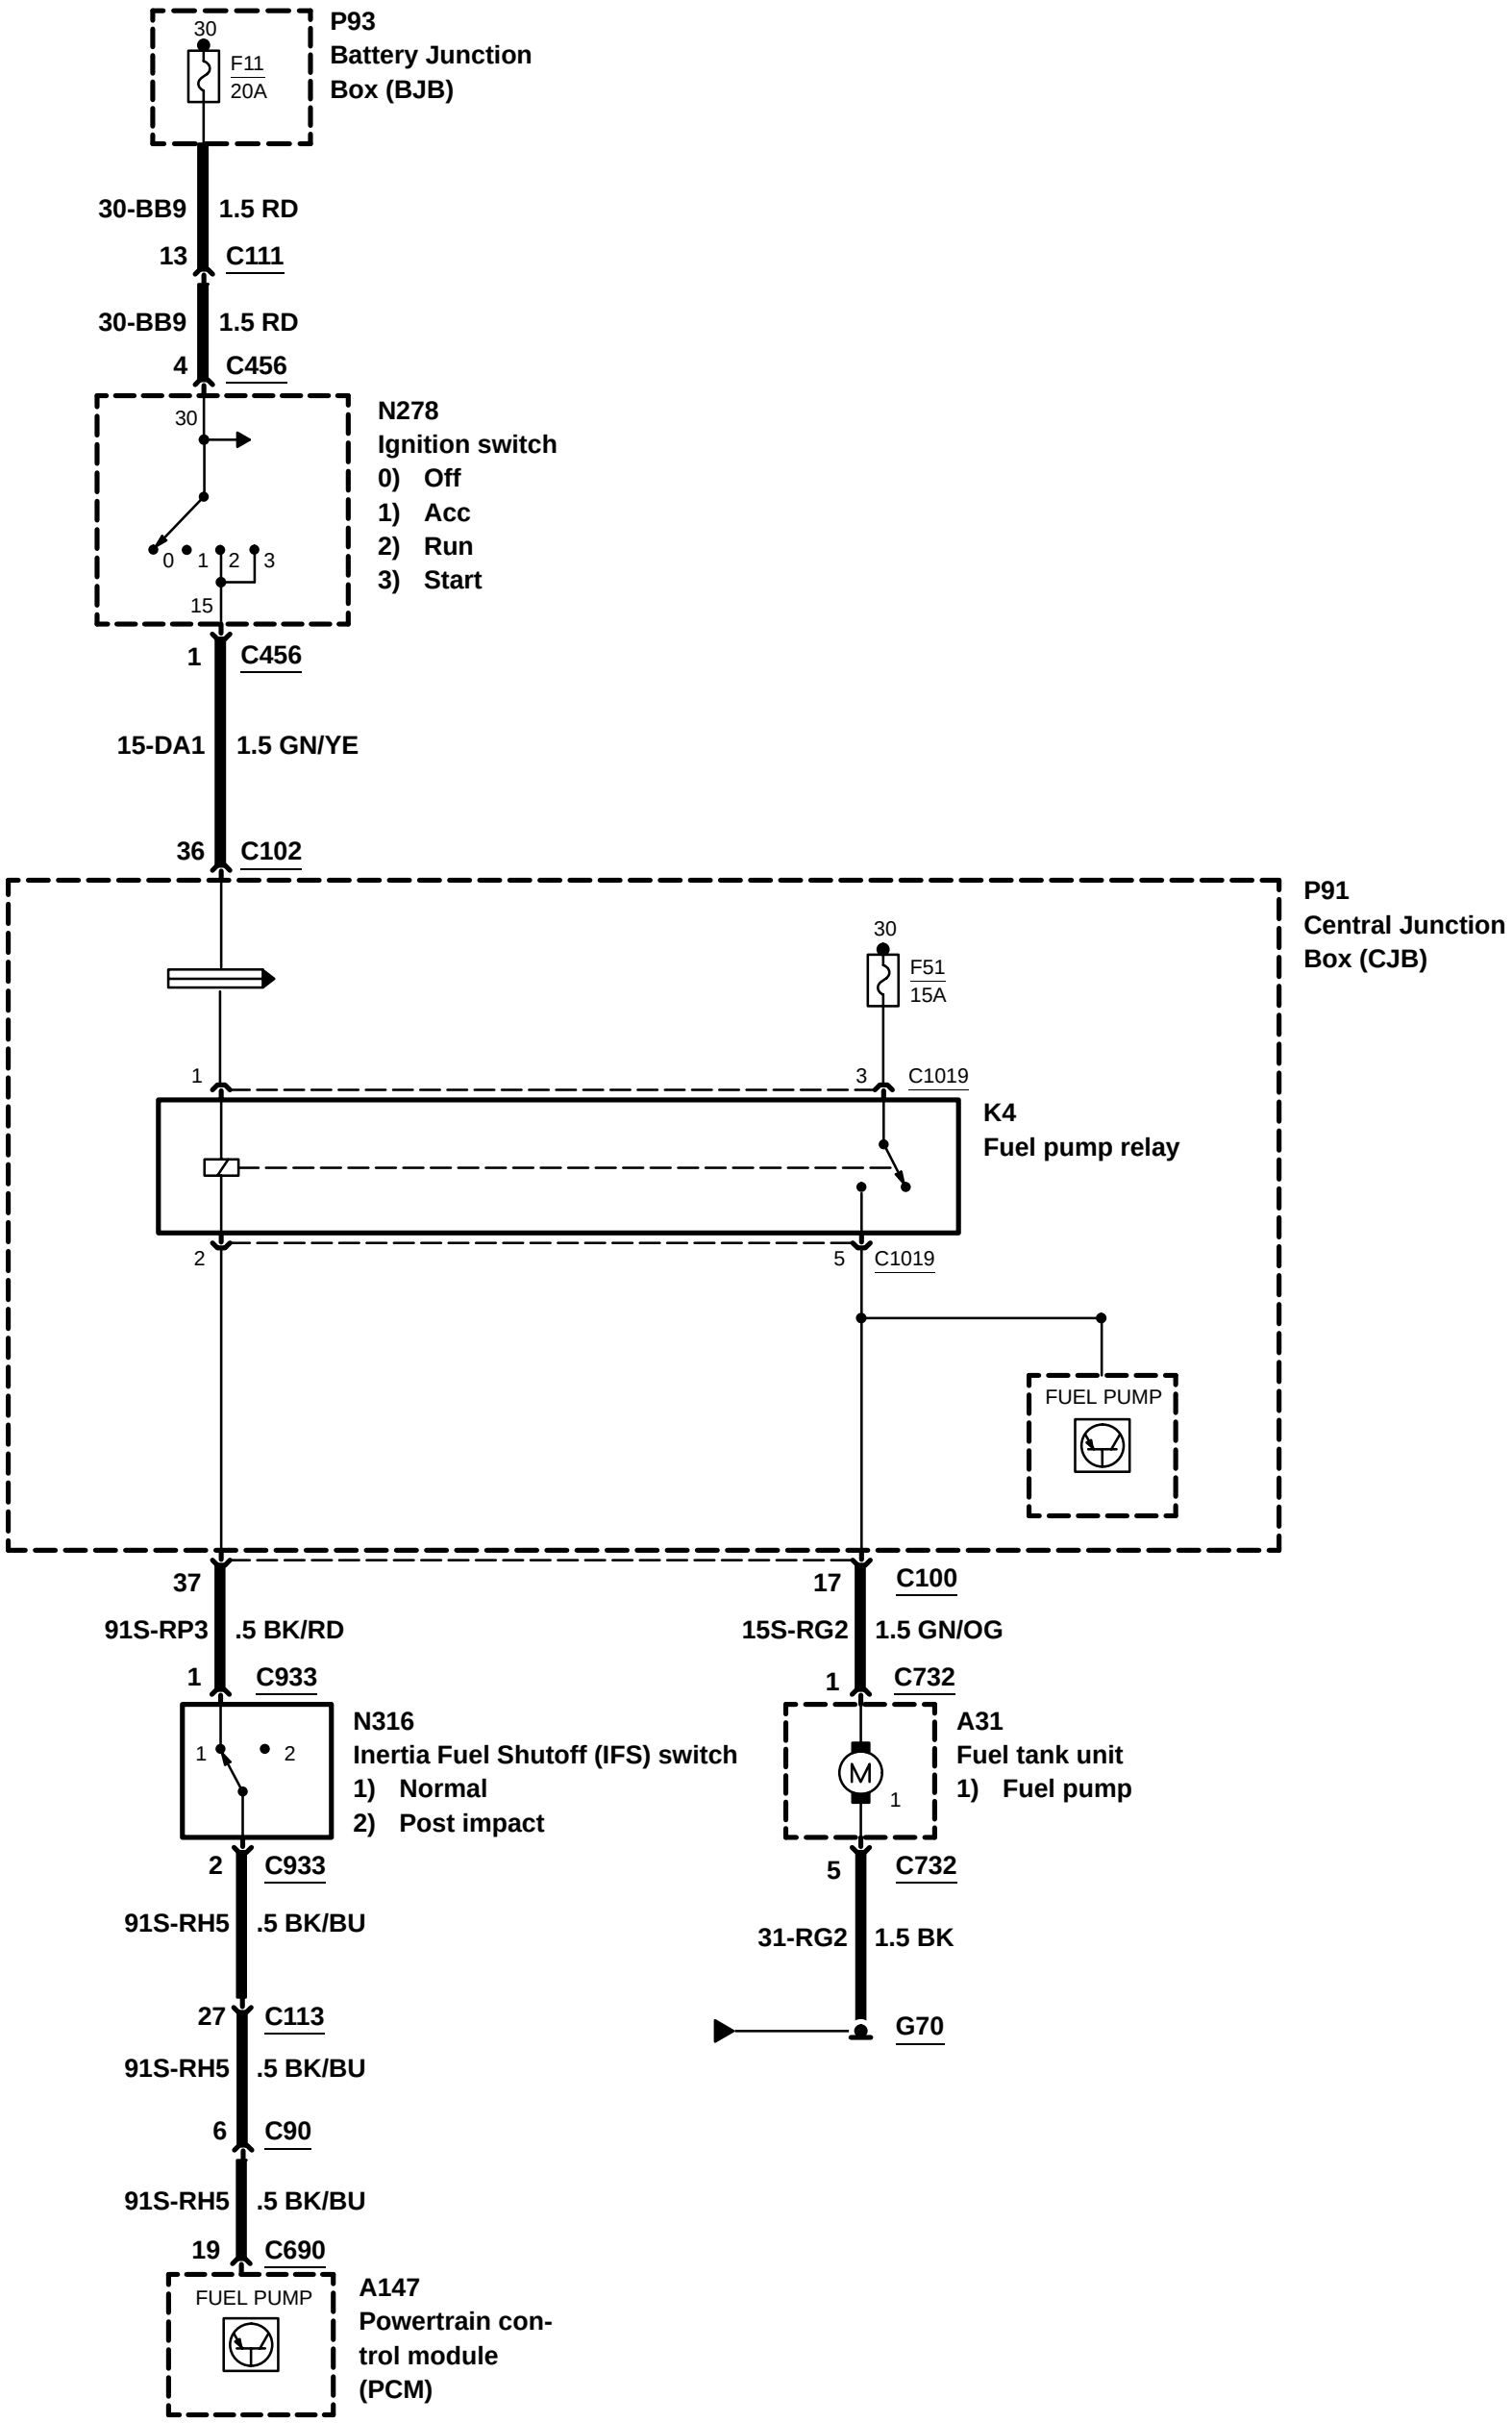

Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)

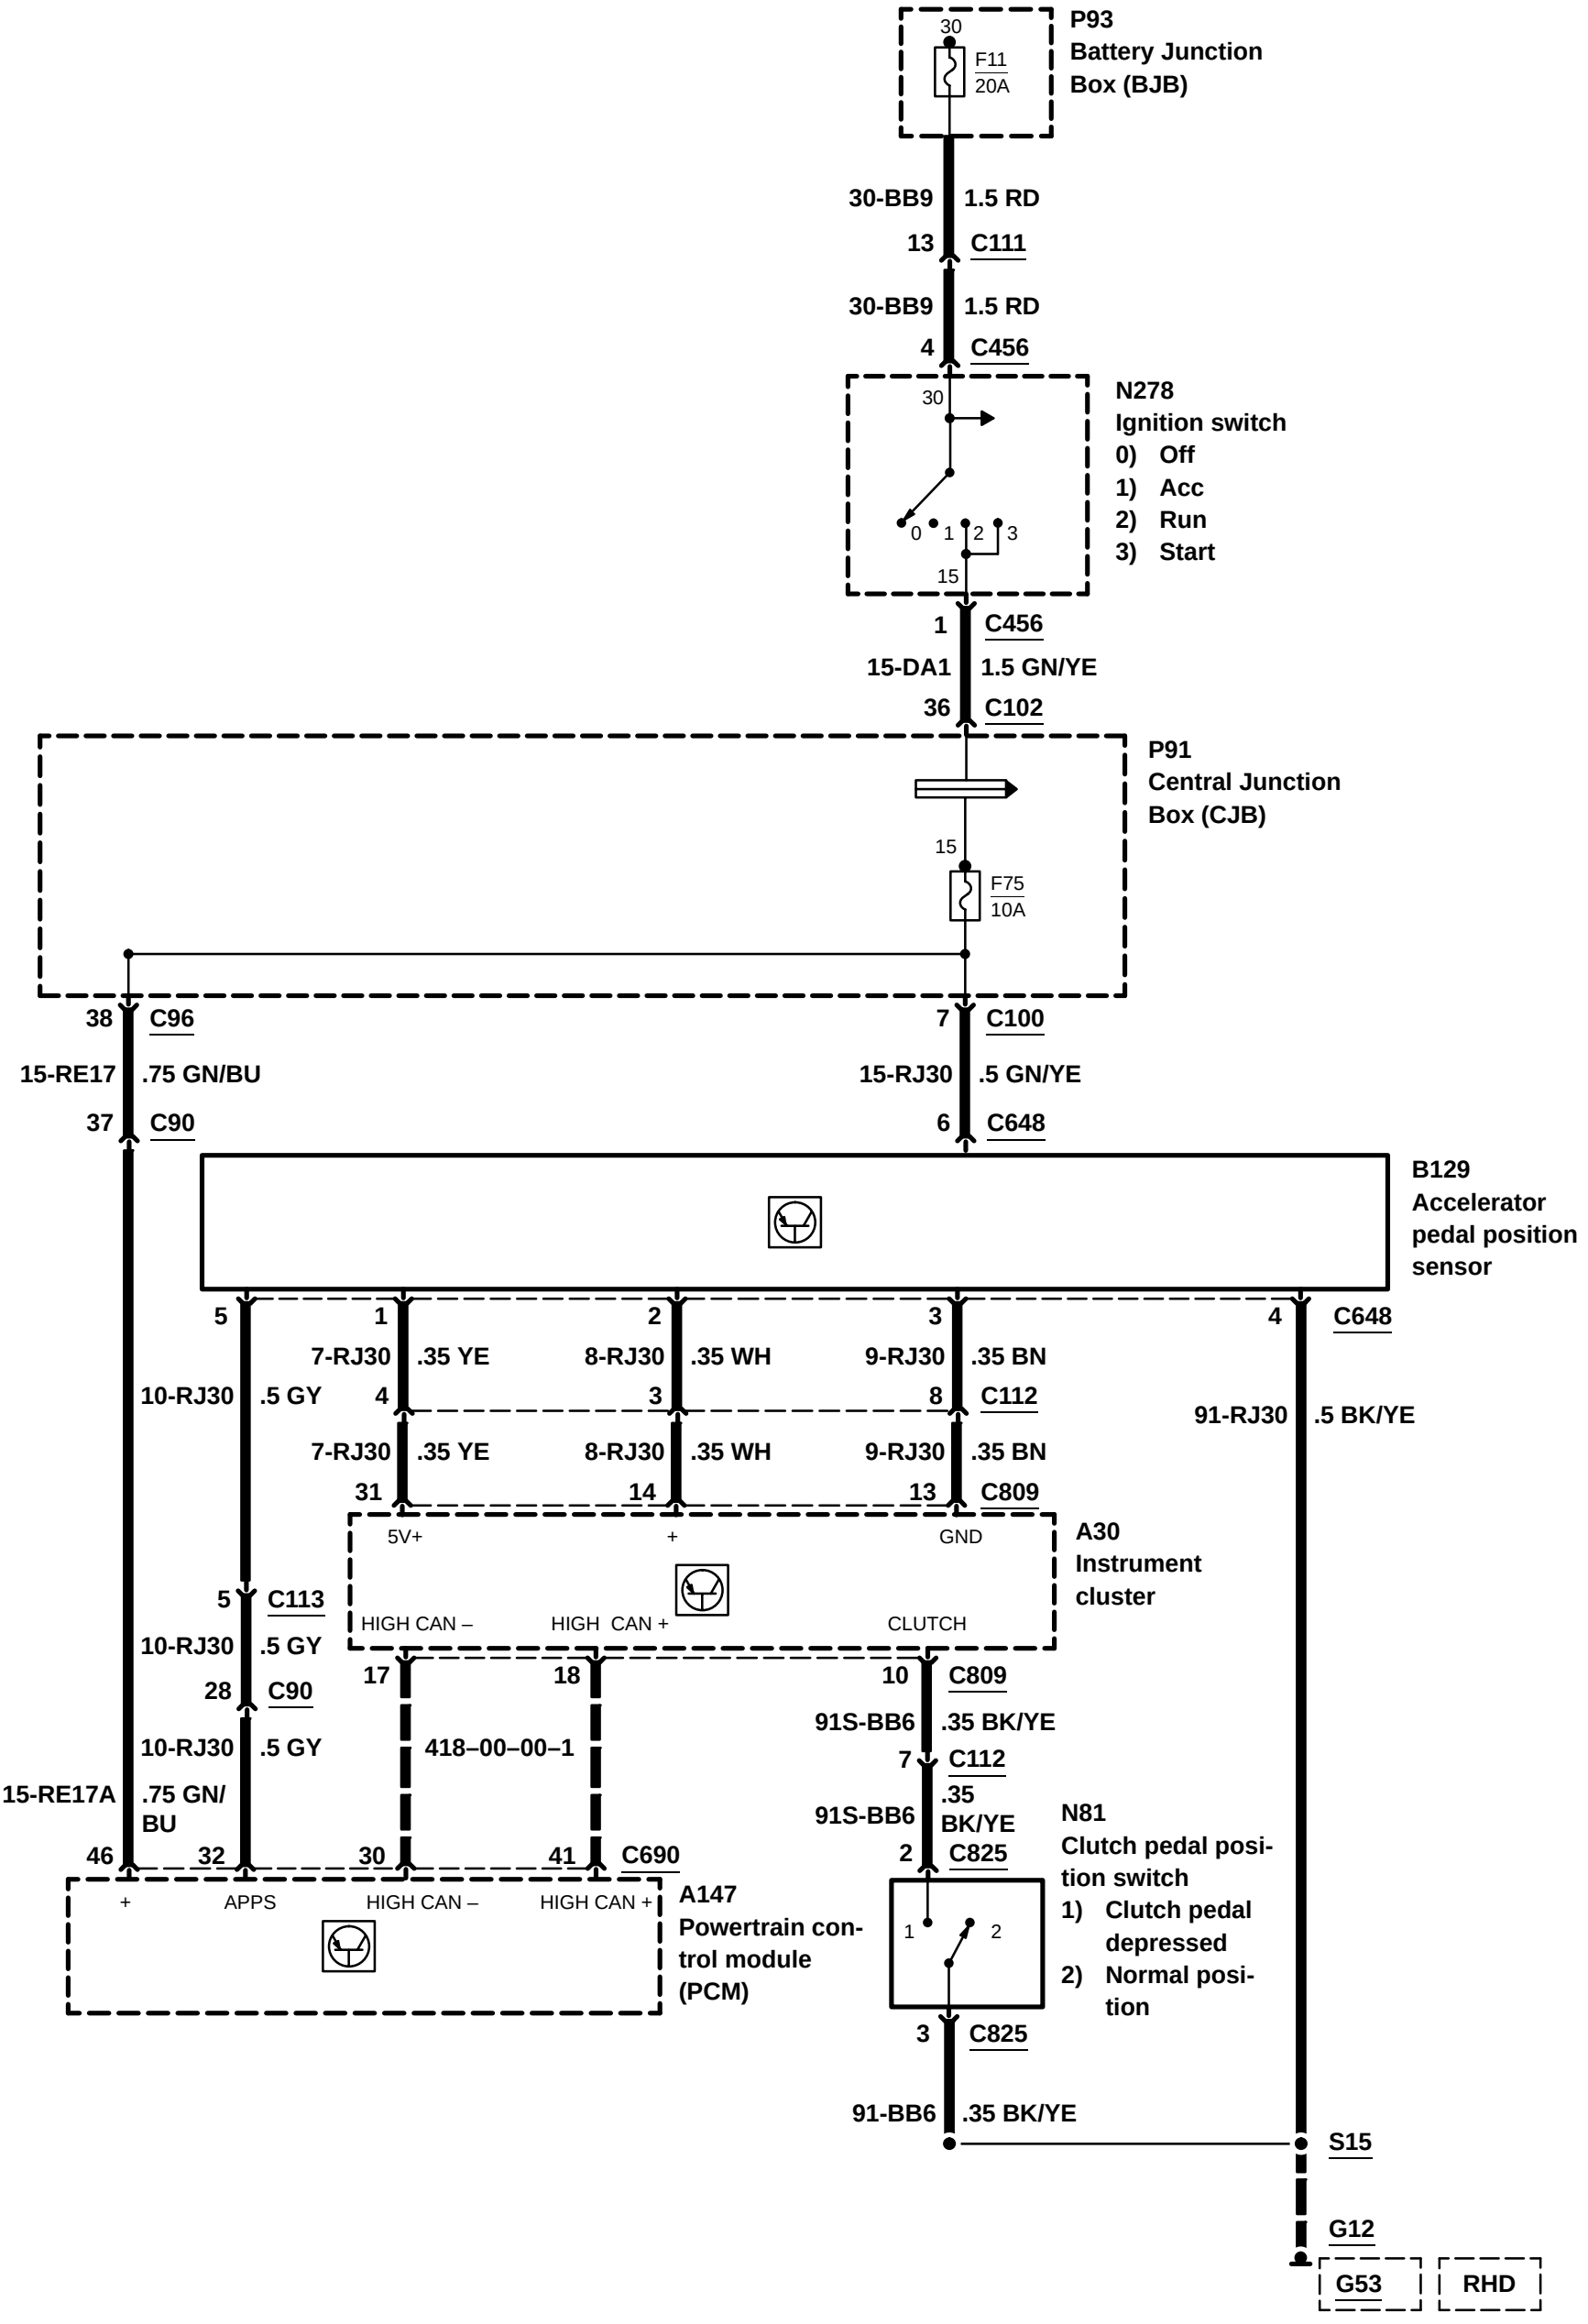


Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel

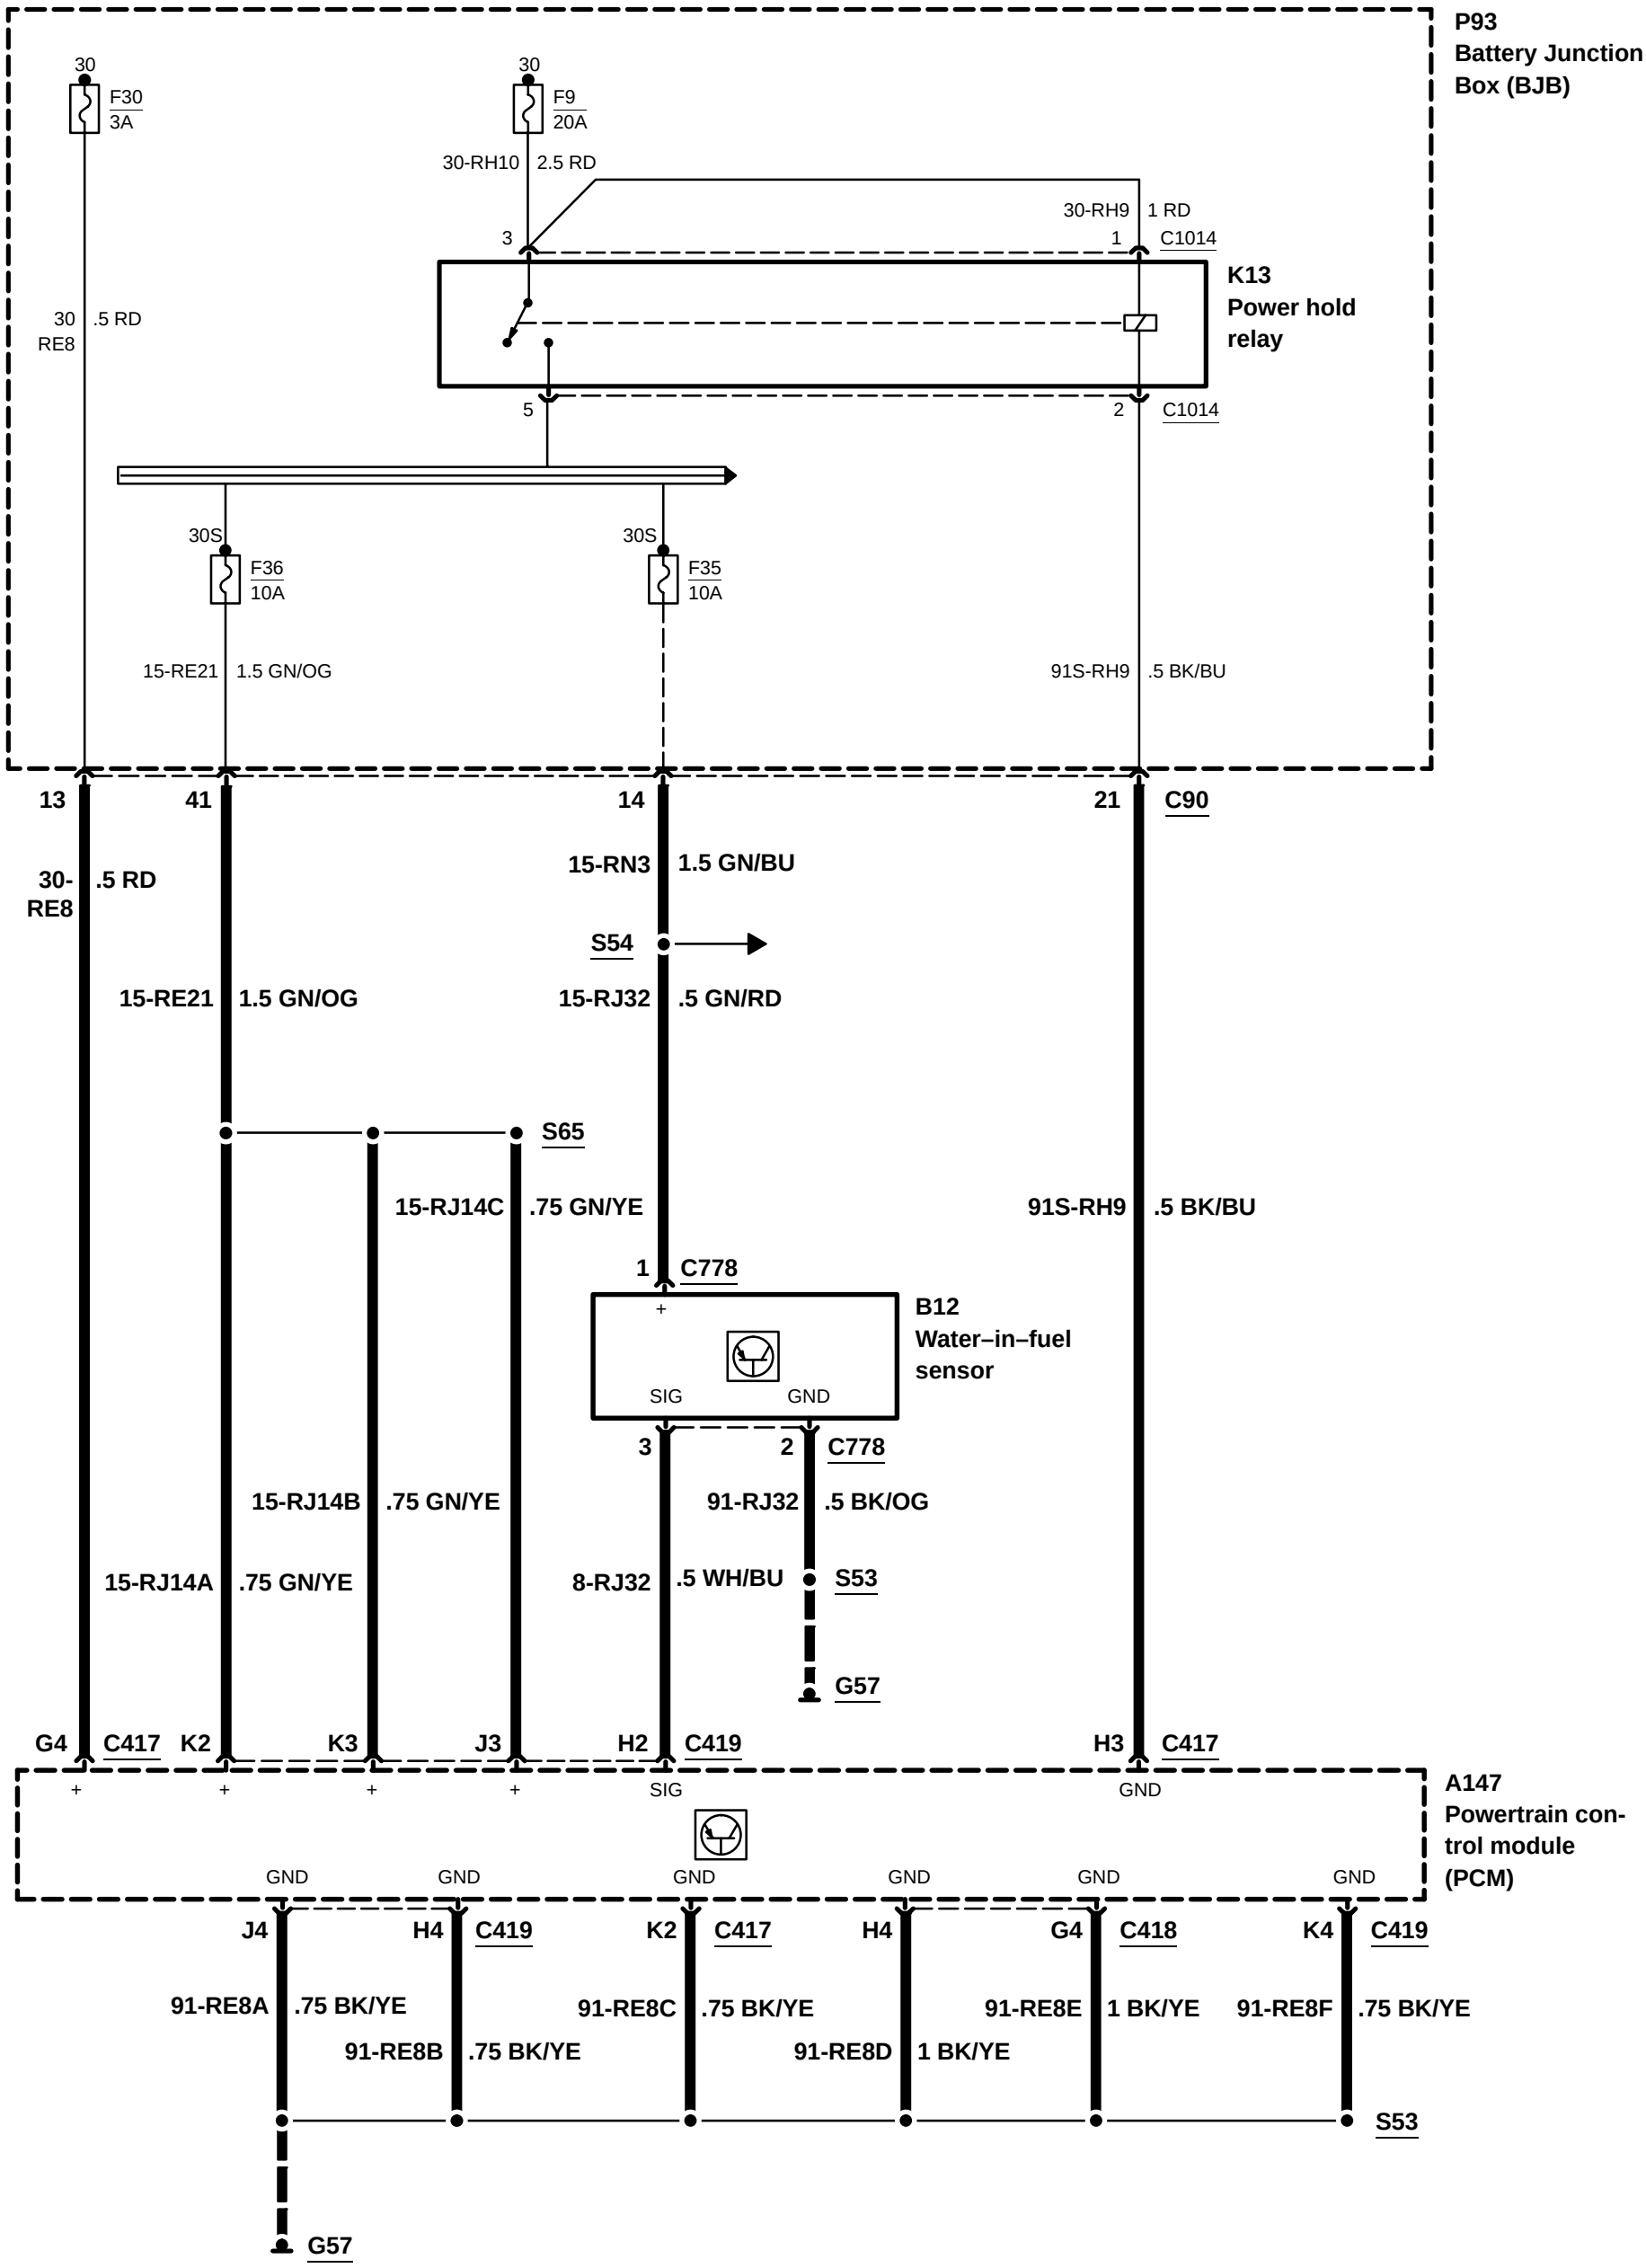


P93
Battery Junction Box (BJB)


Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel

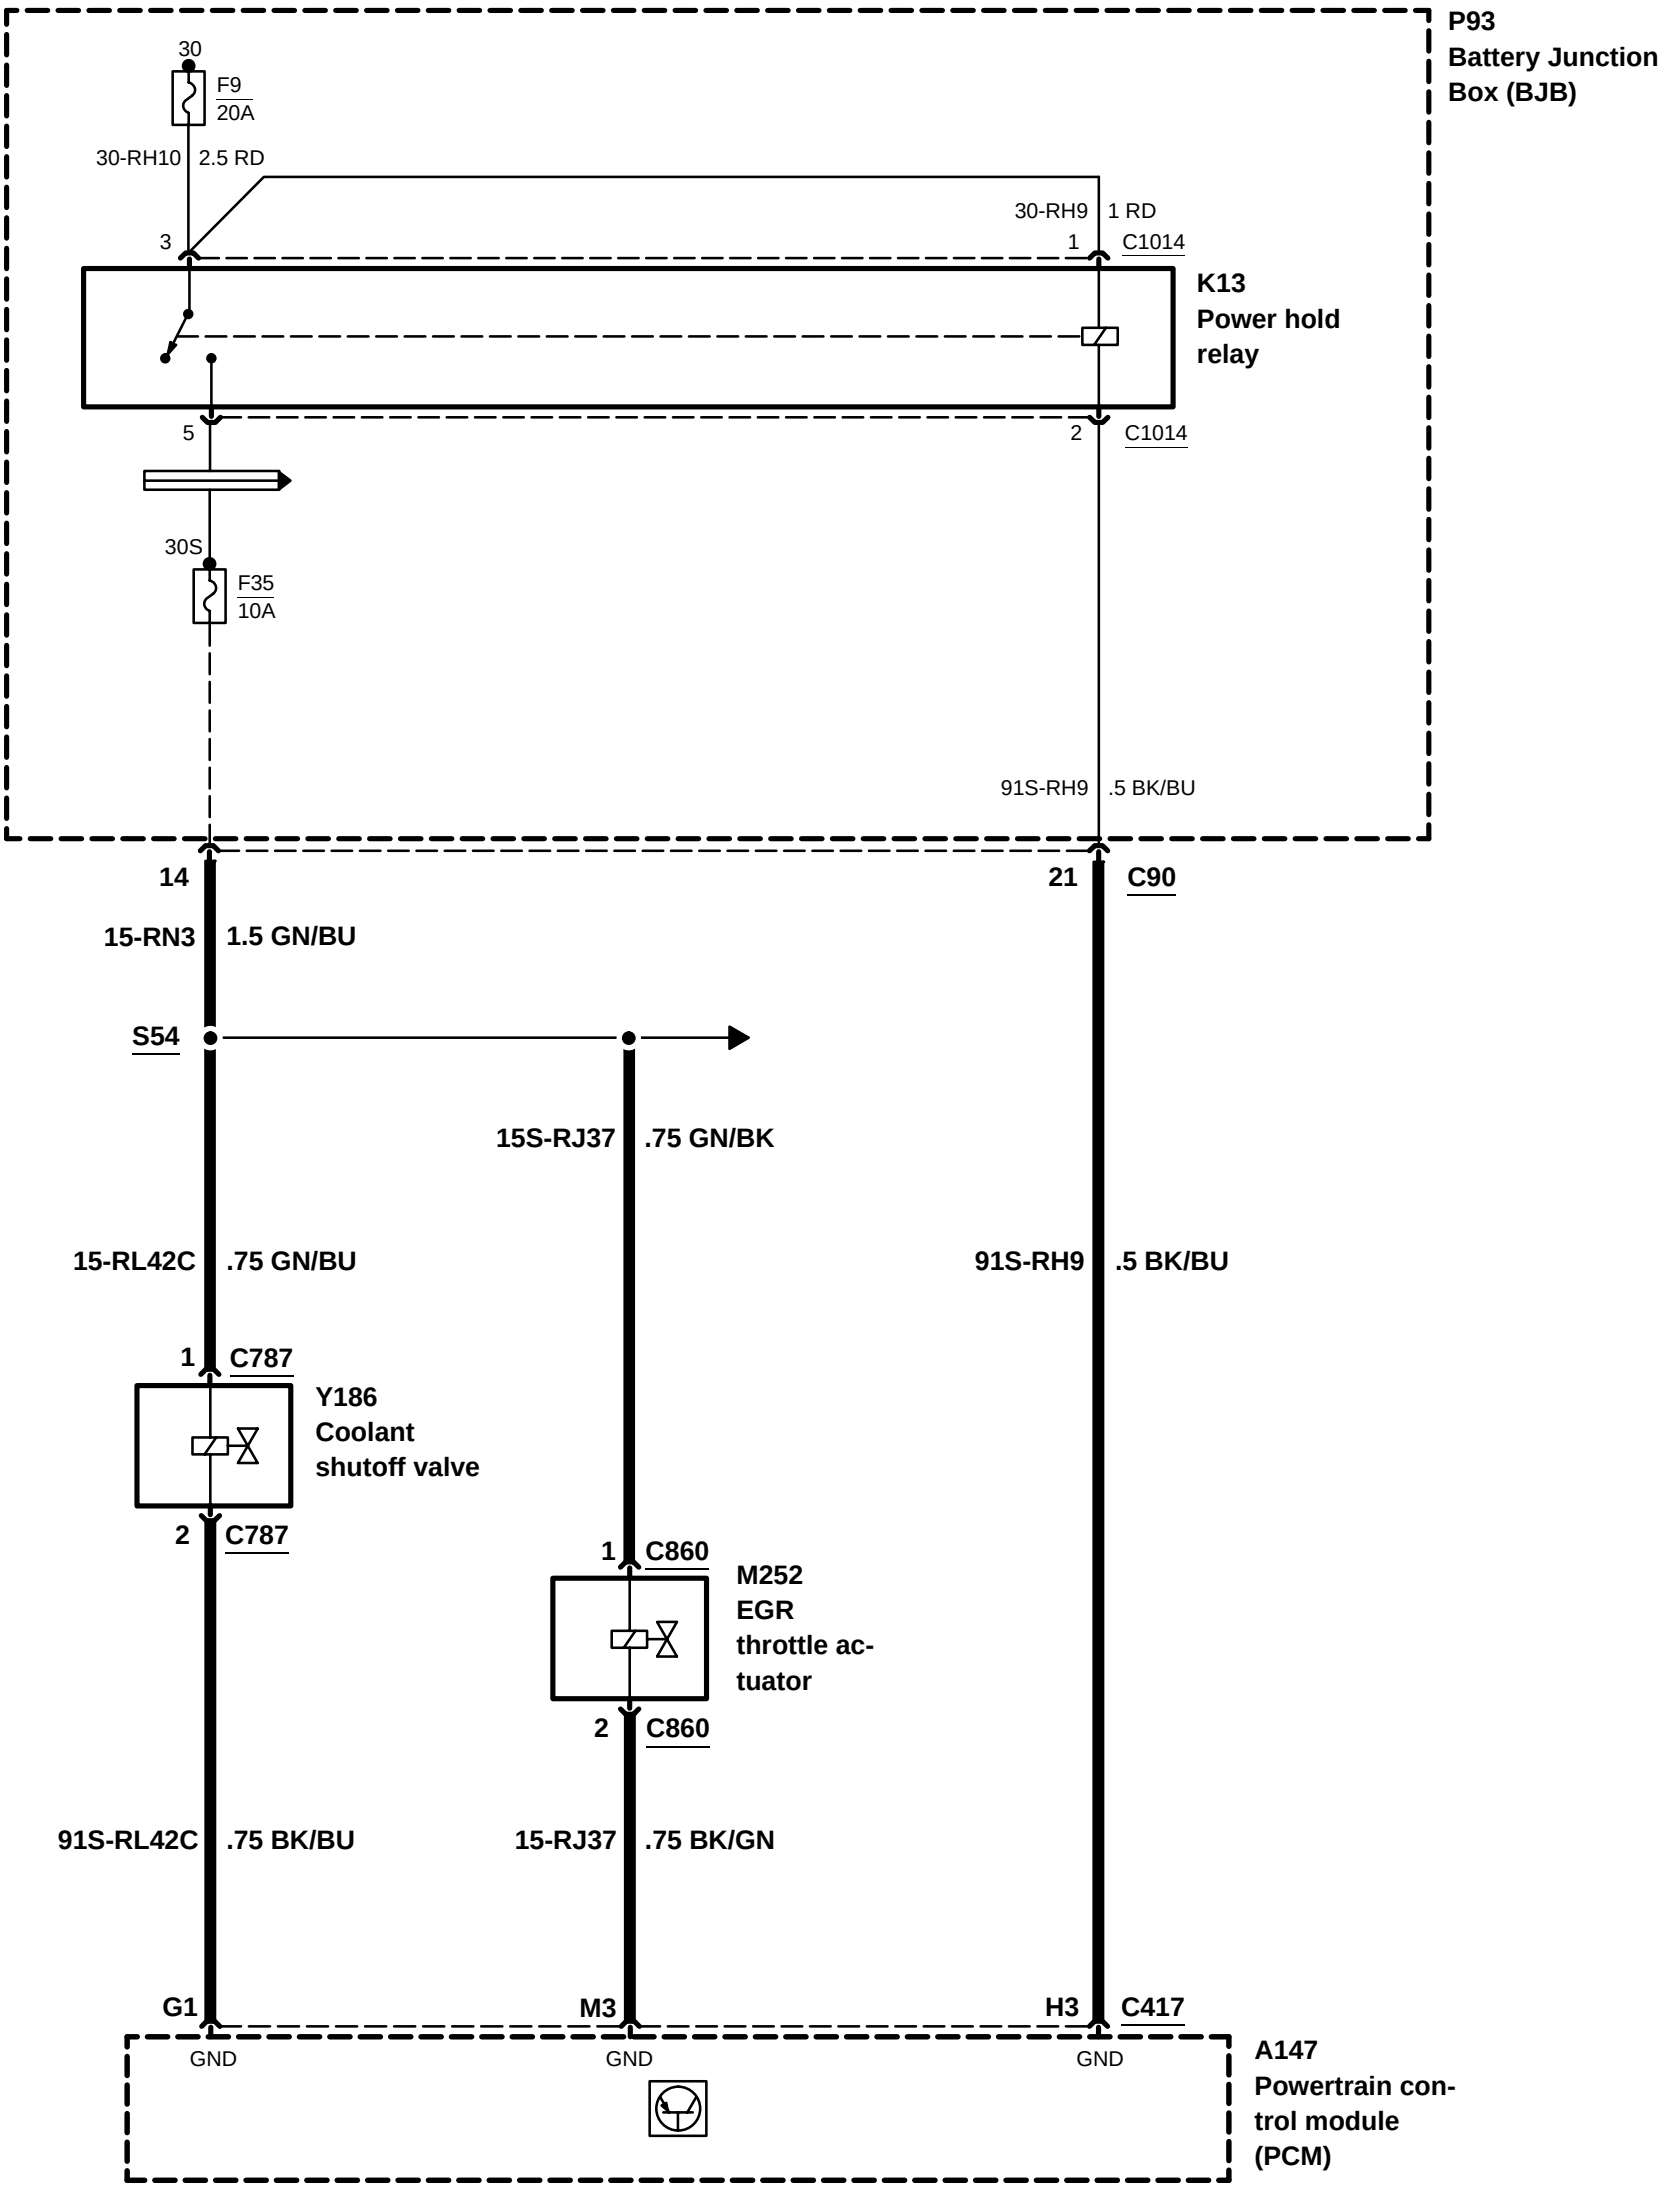


Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel

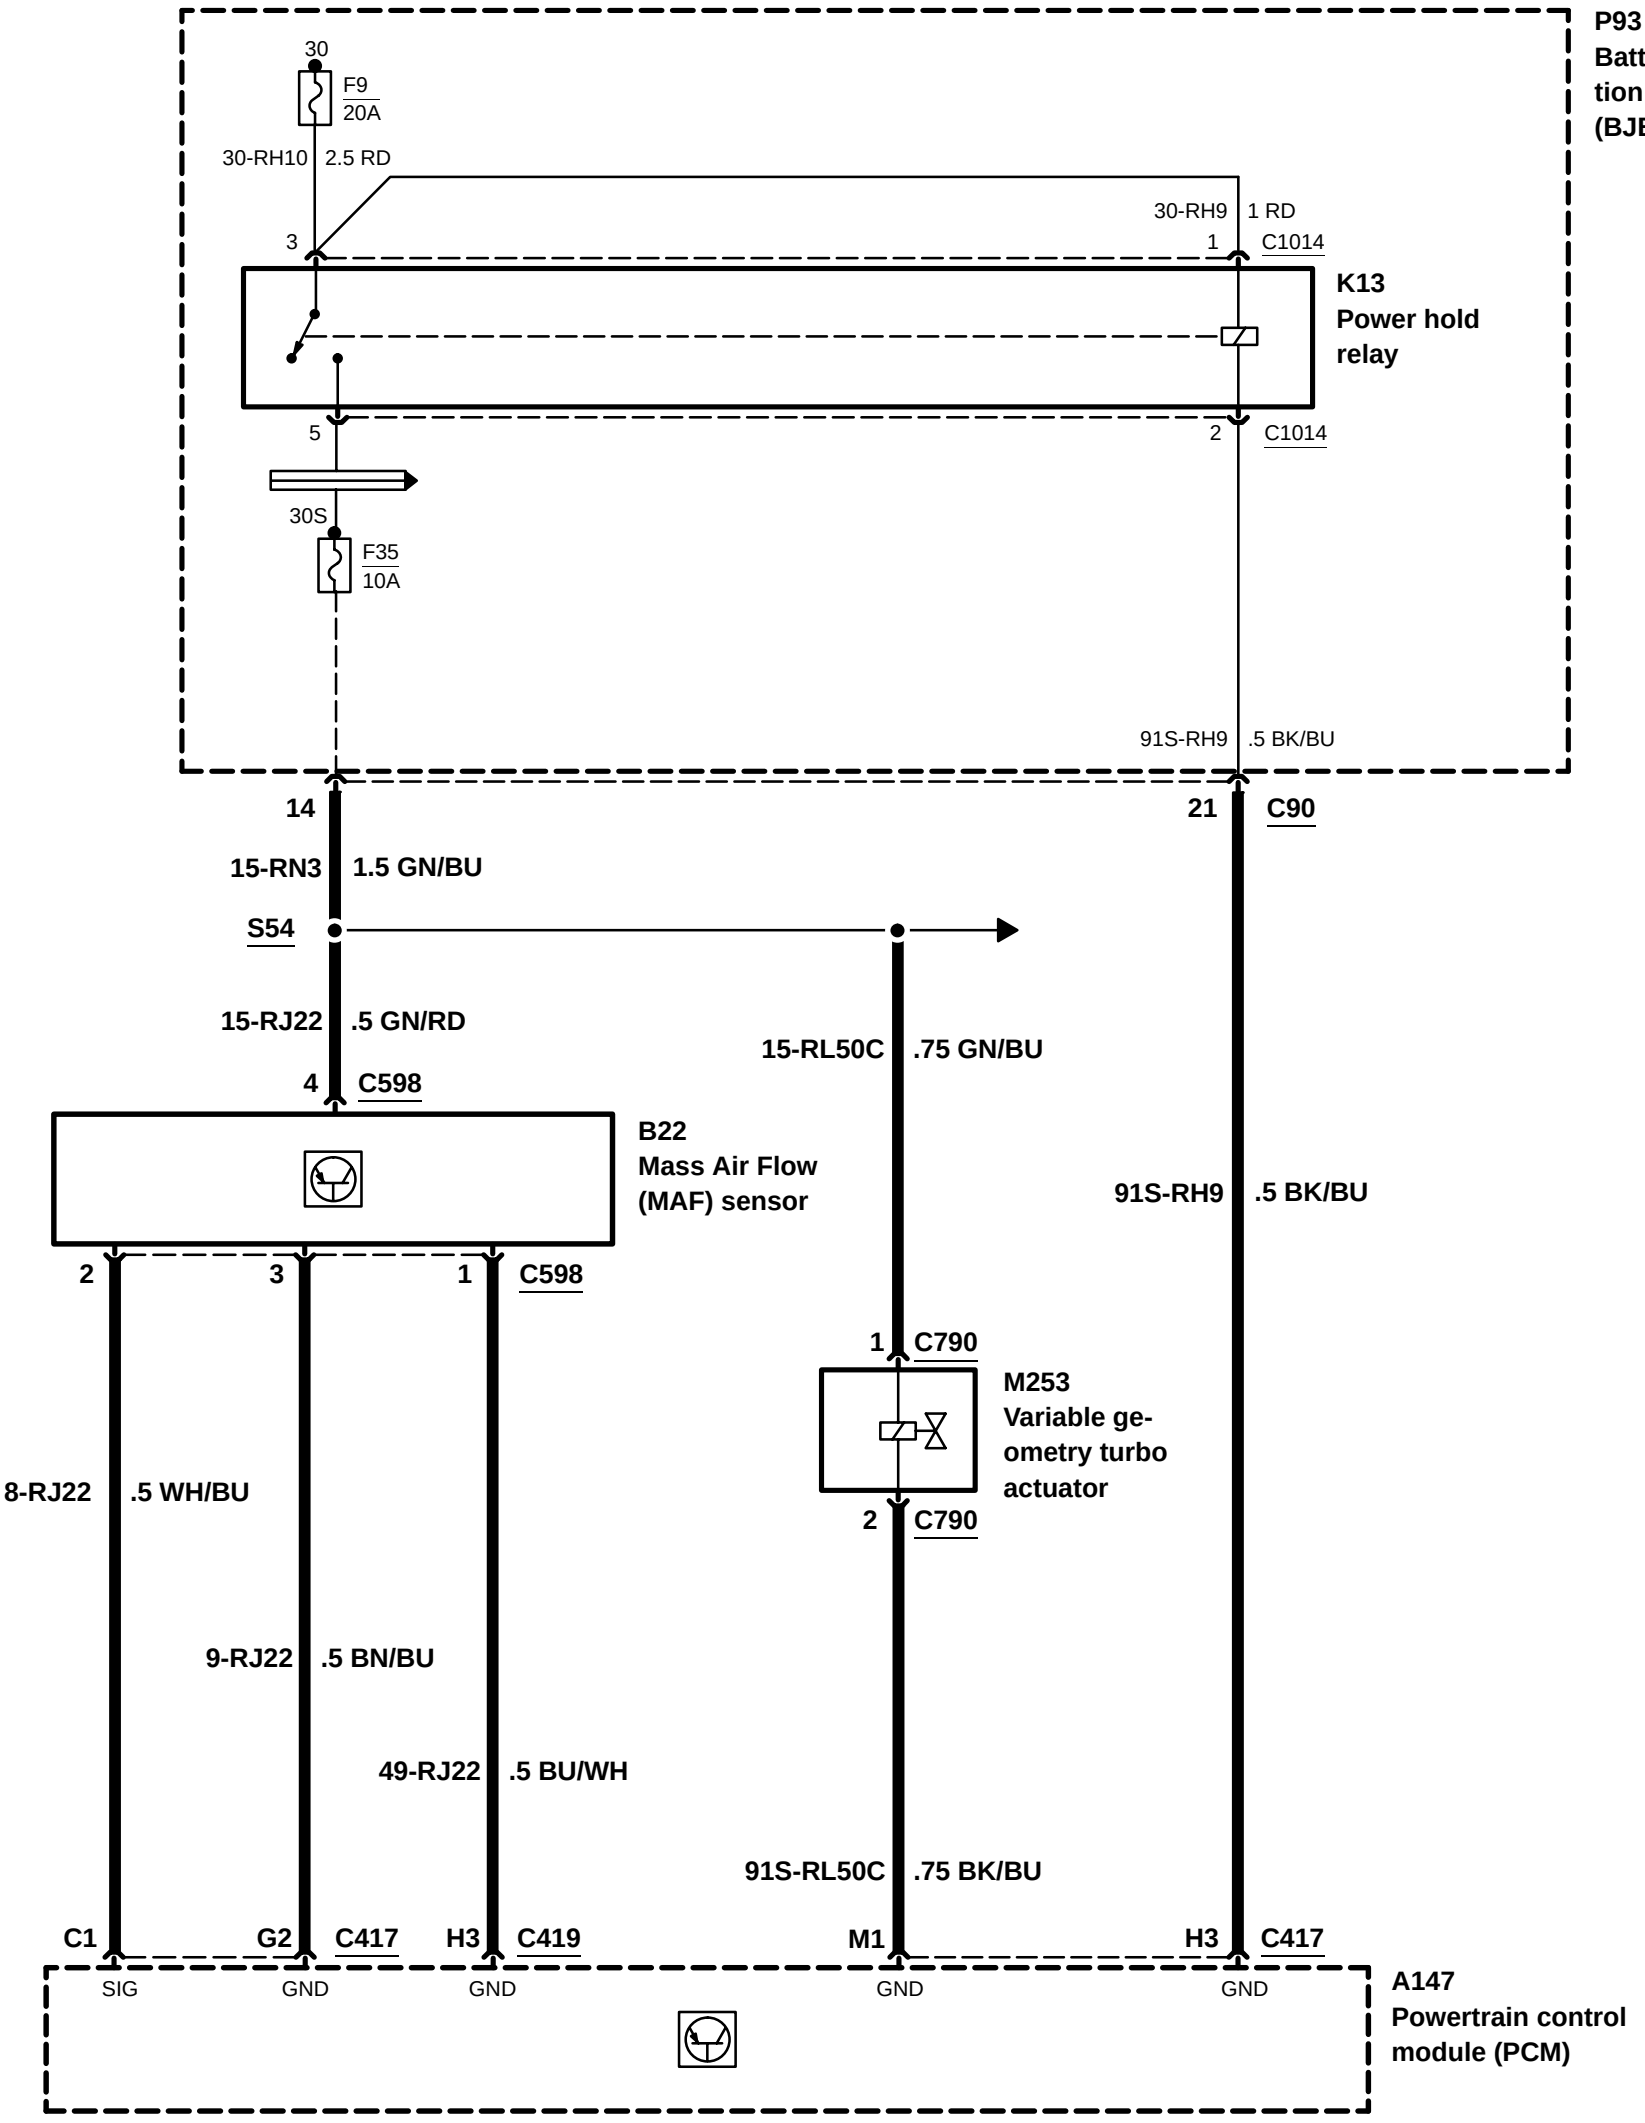


Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel

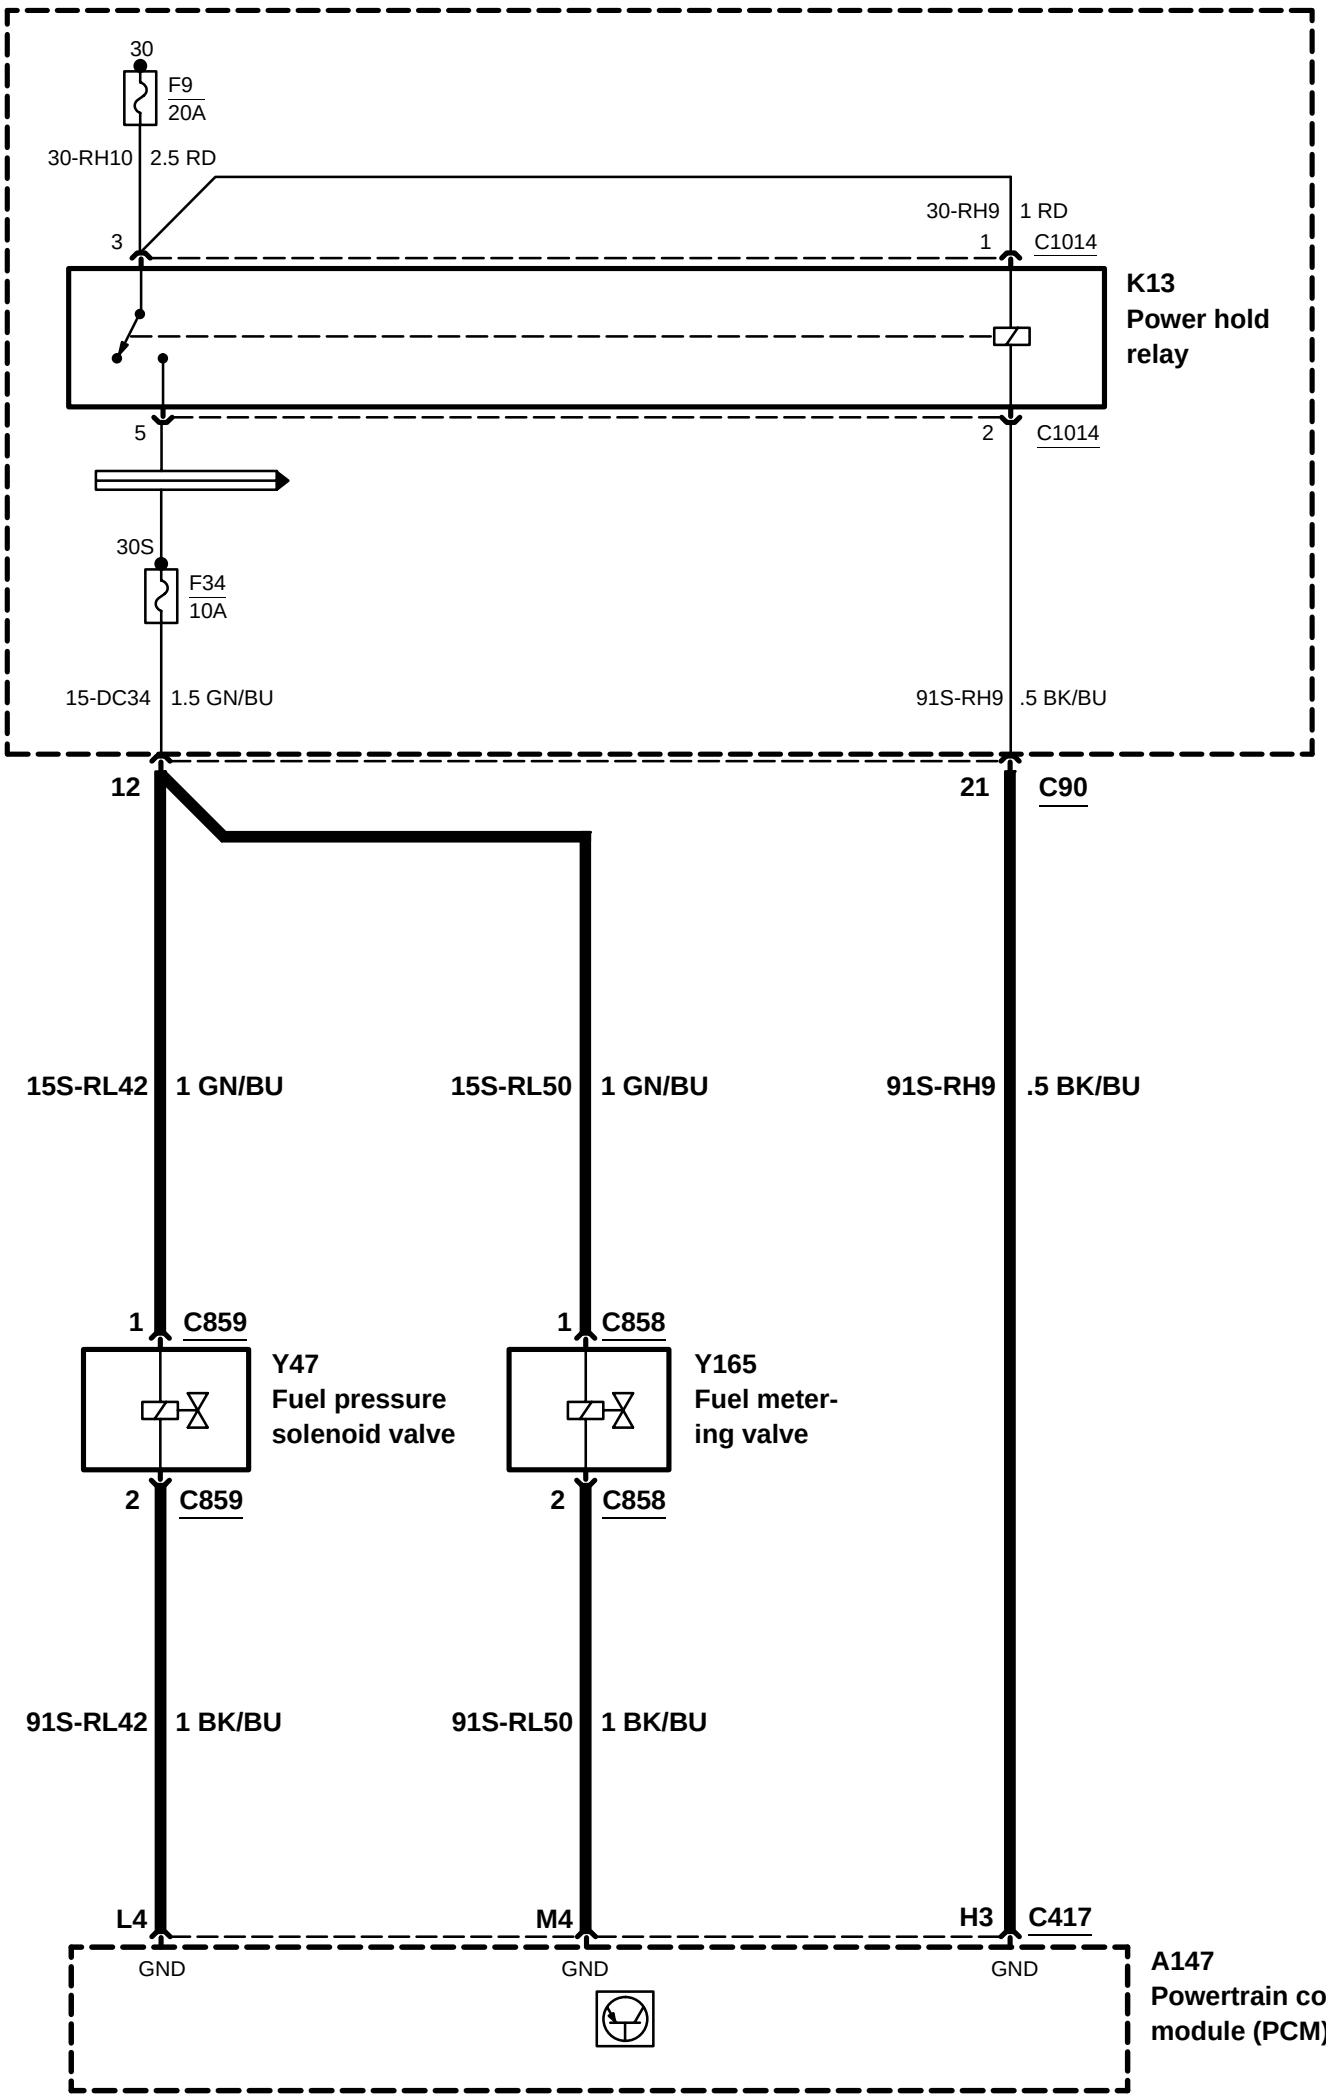


Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel

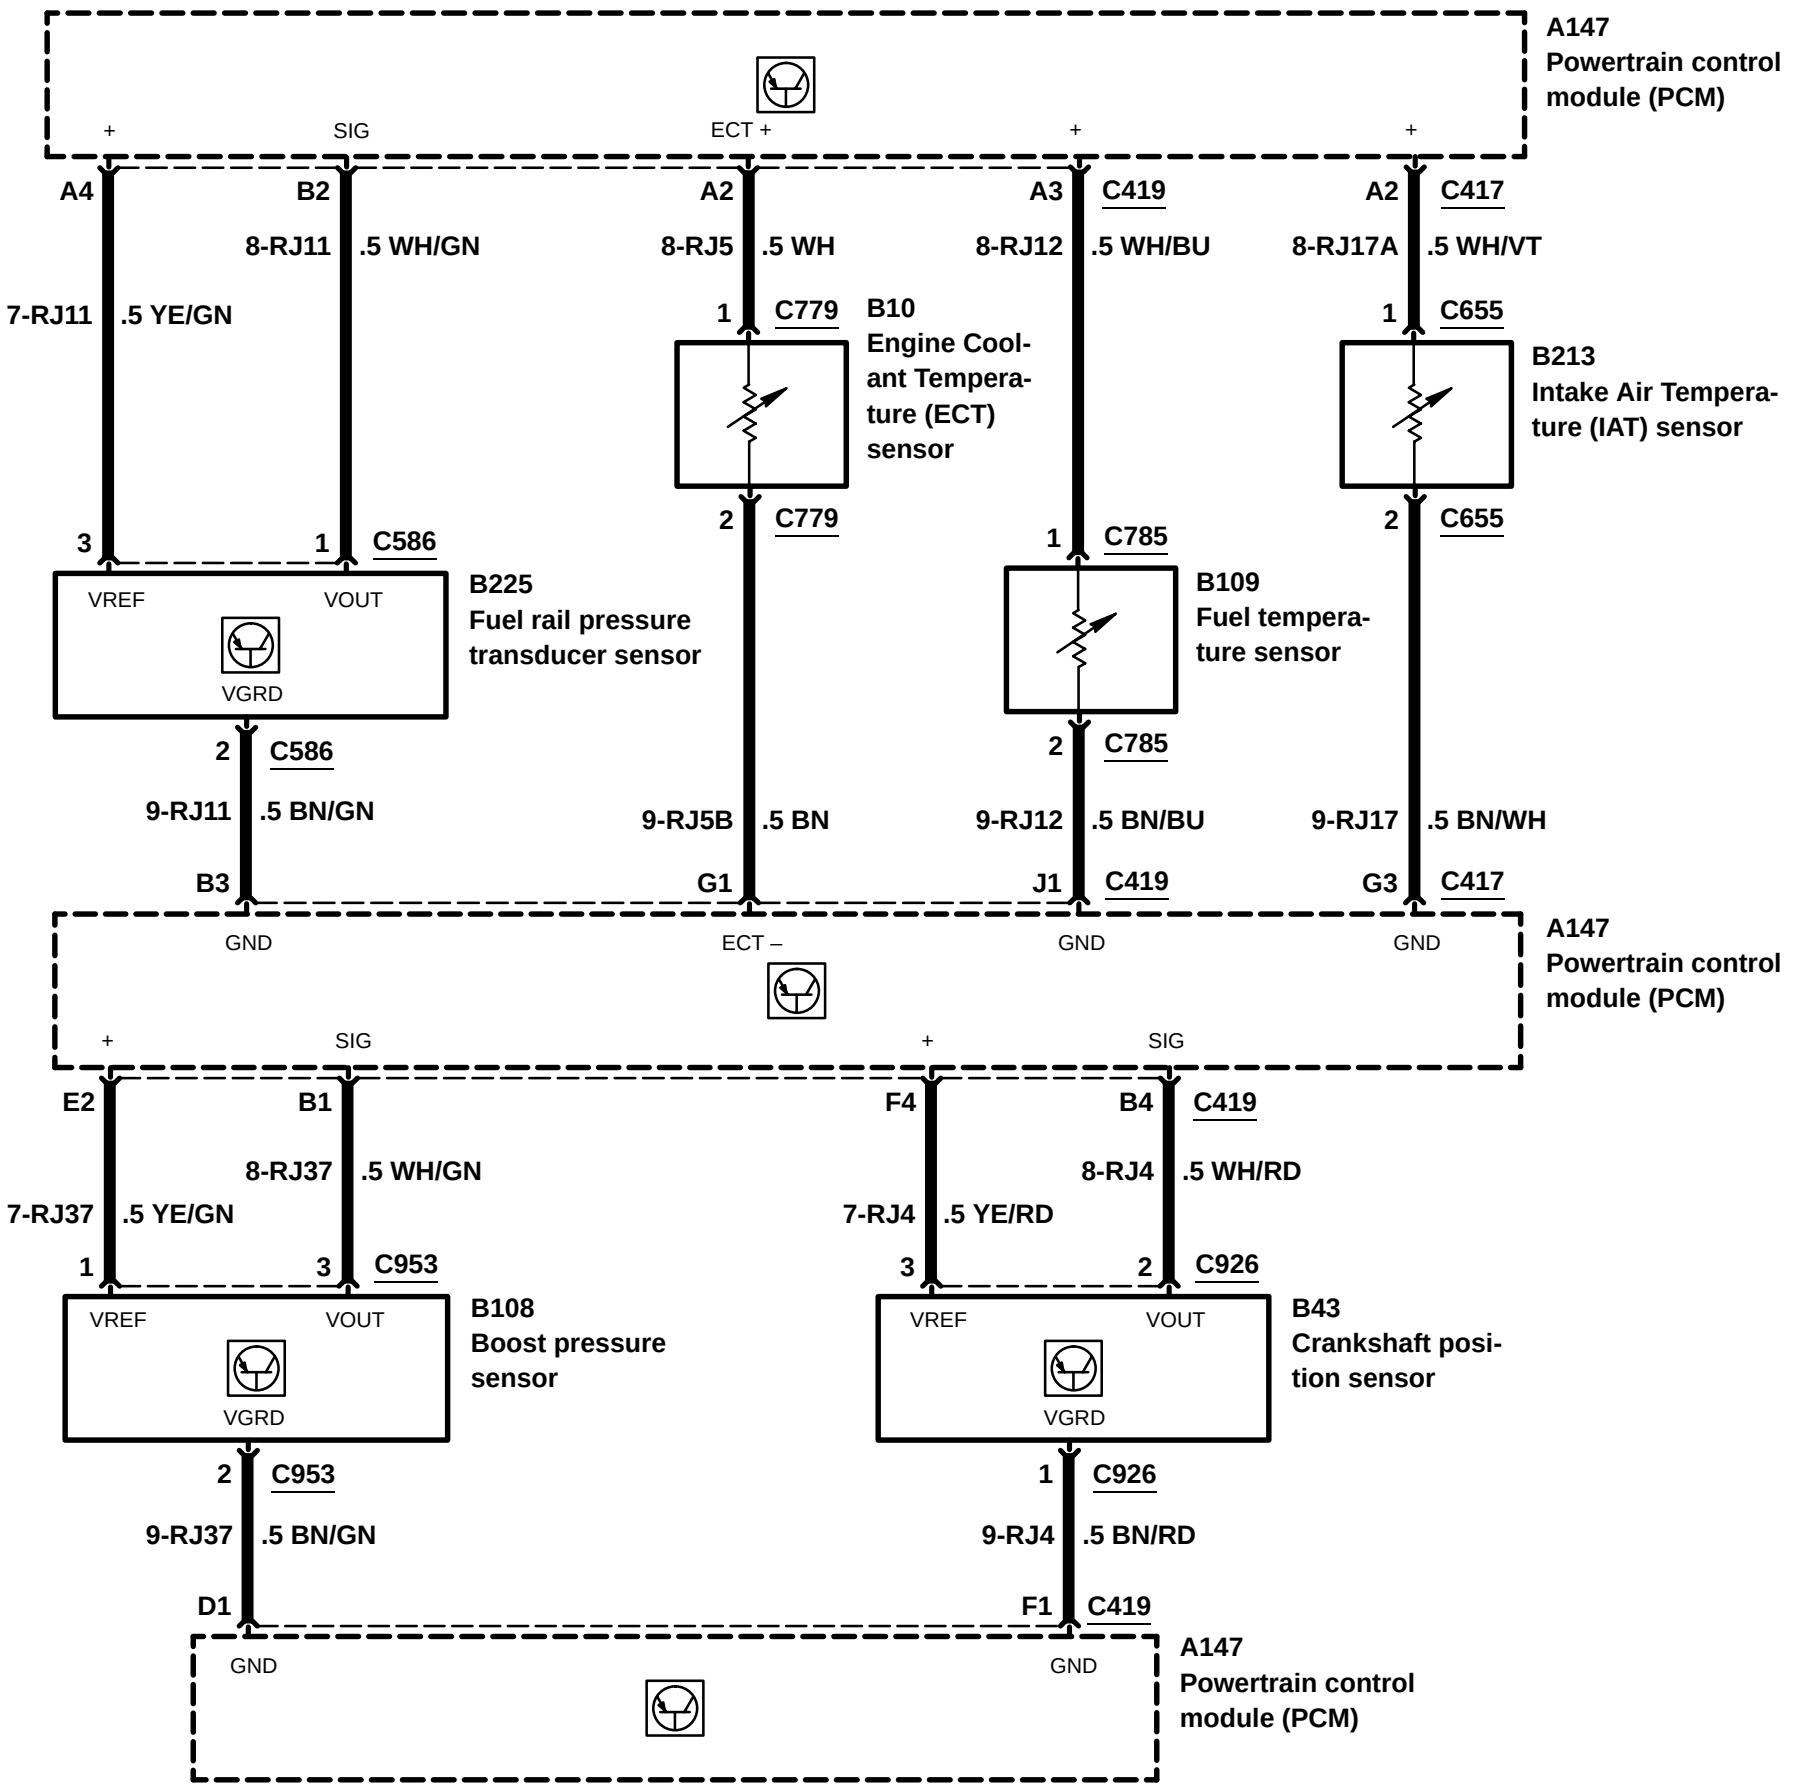


Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel

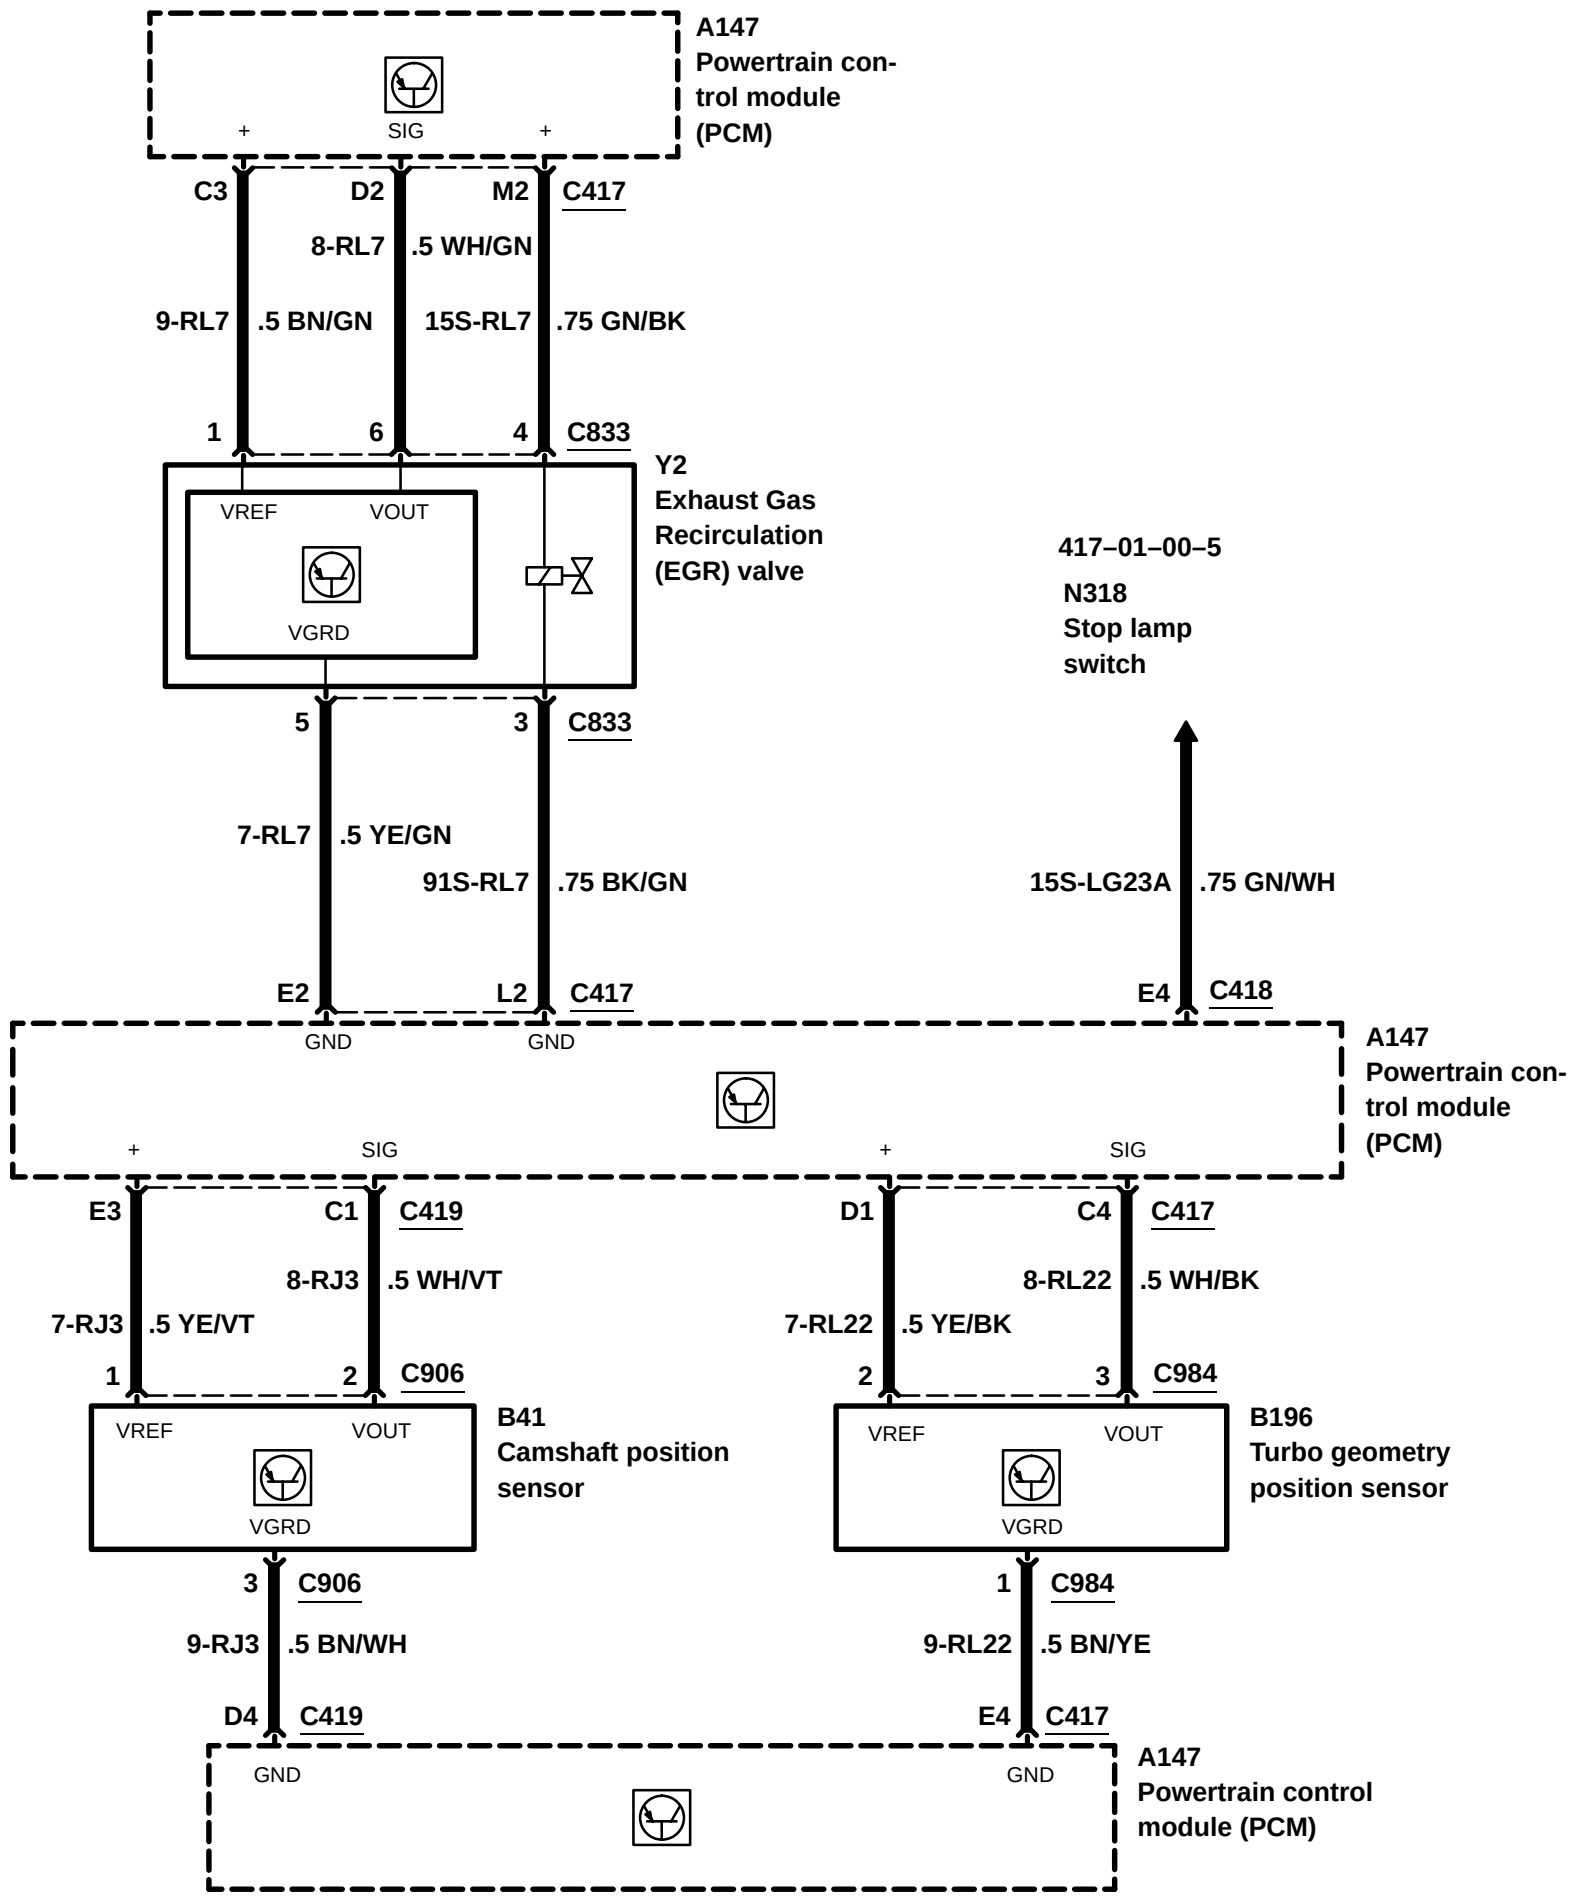


Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel

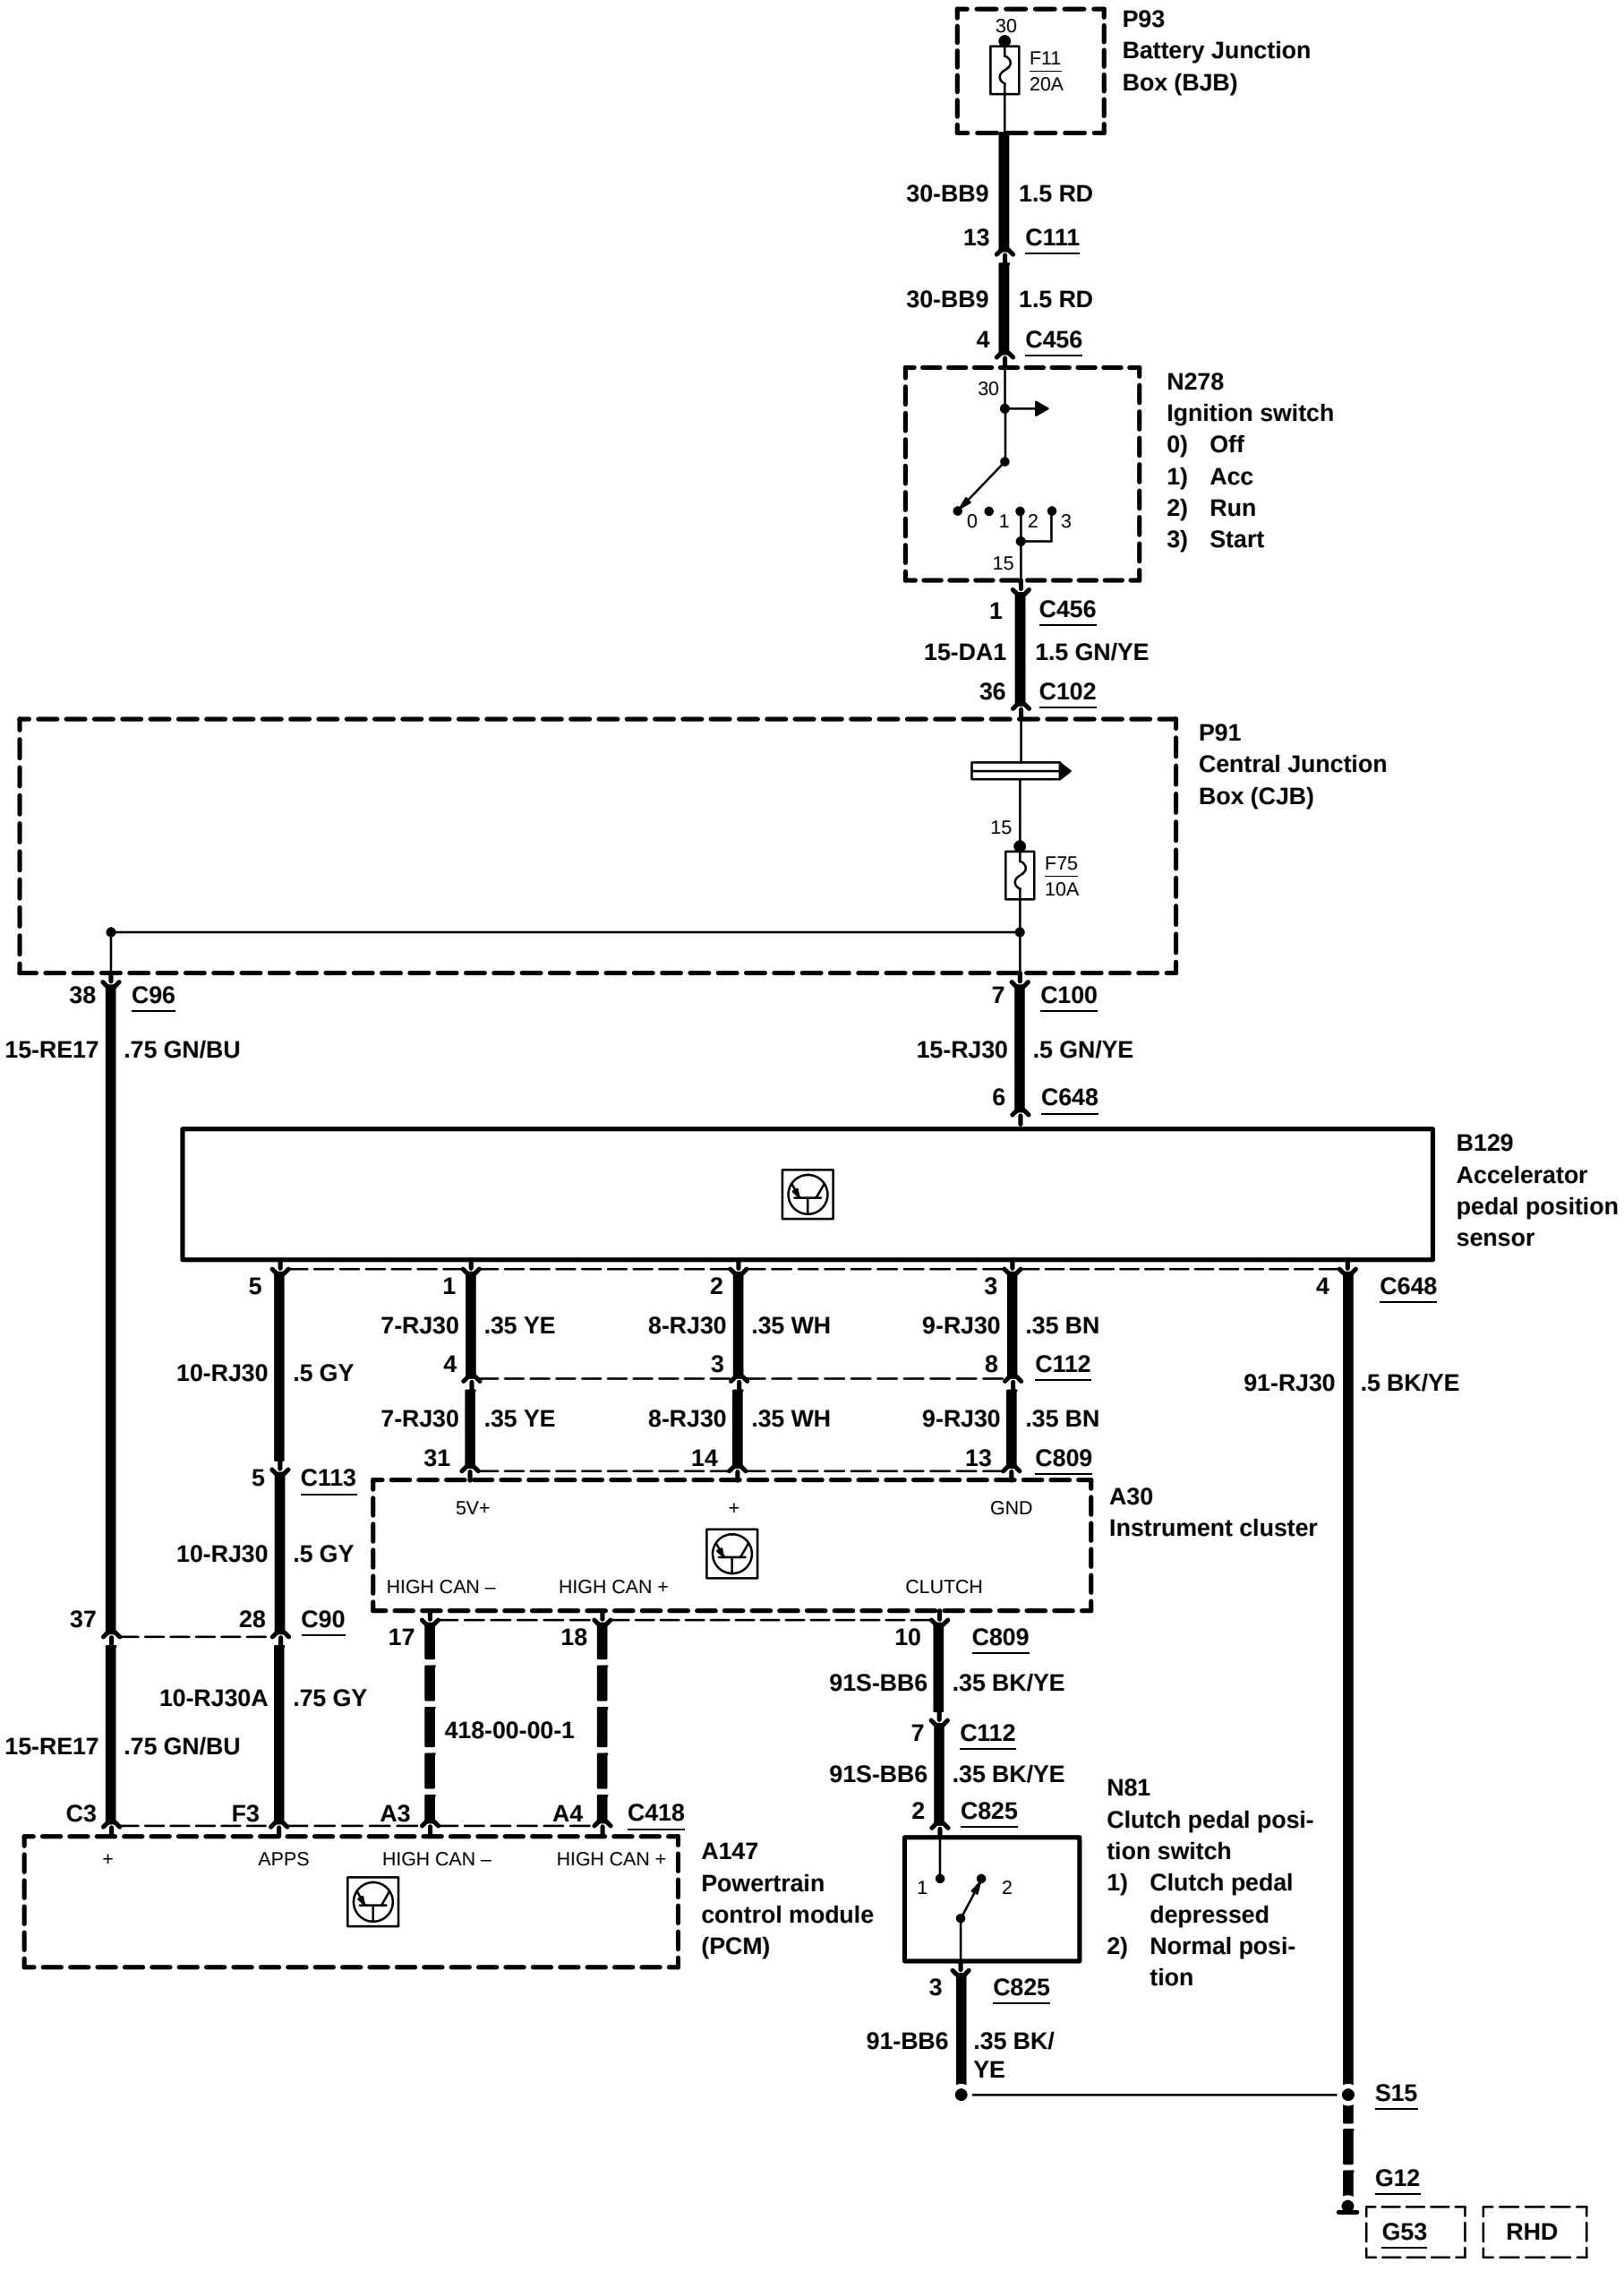


Automatic Transmission – 1.6L (Z6)

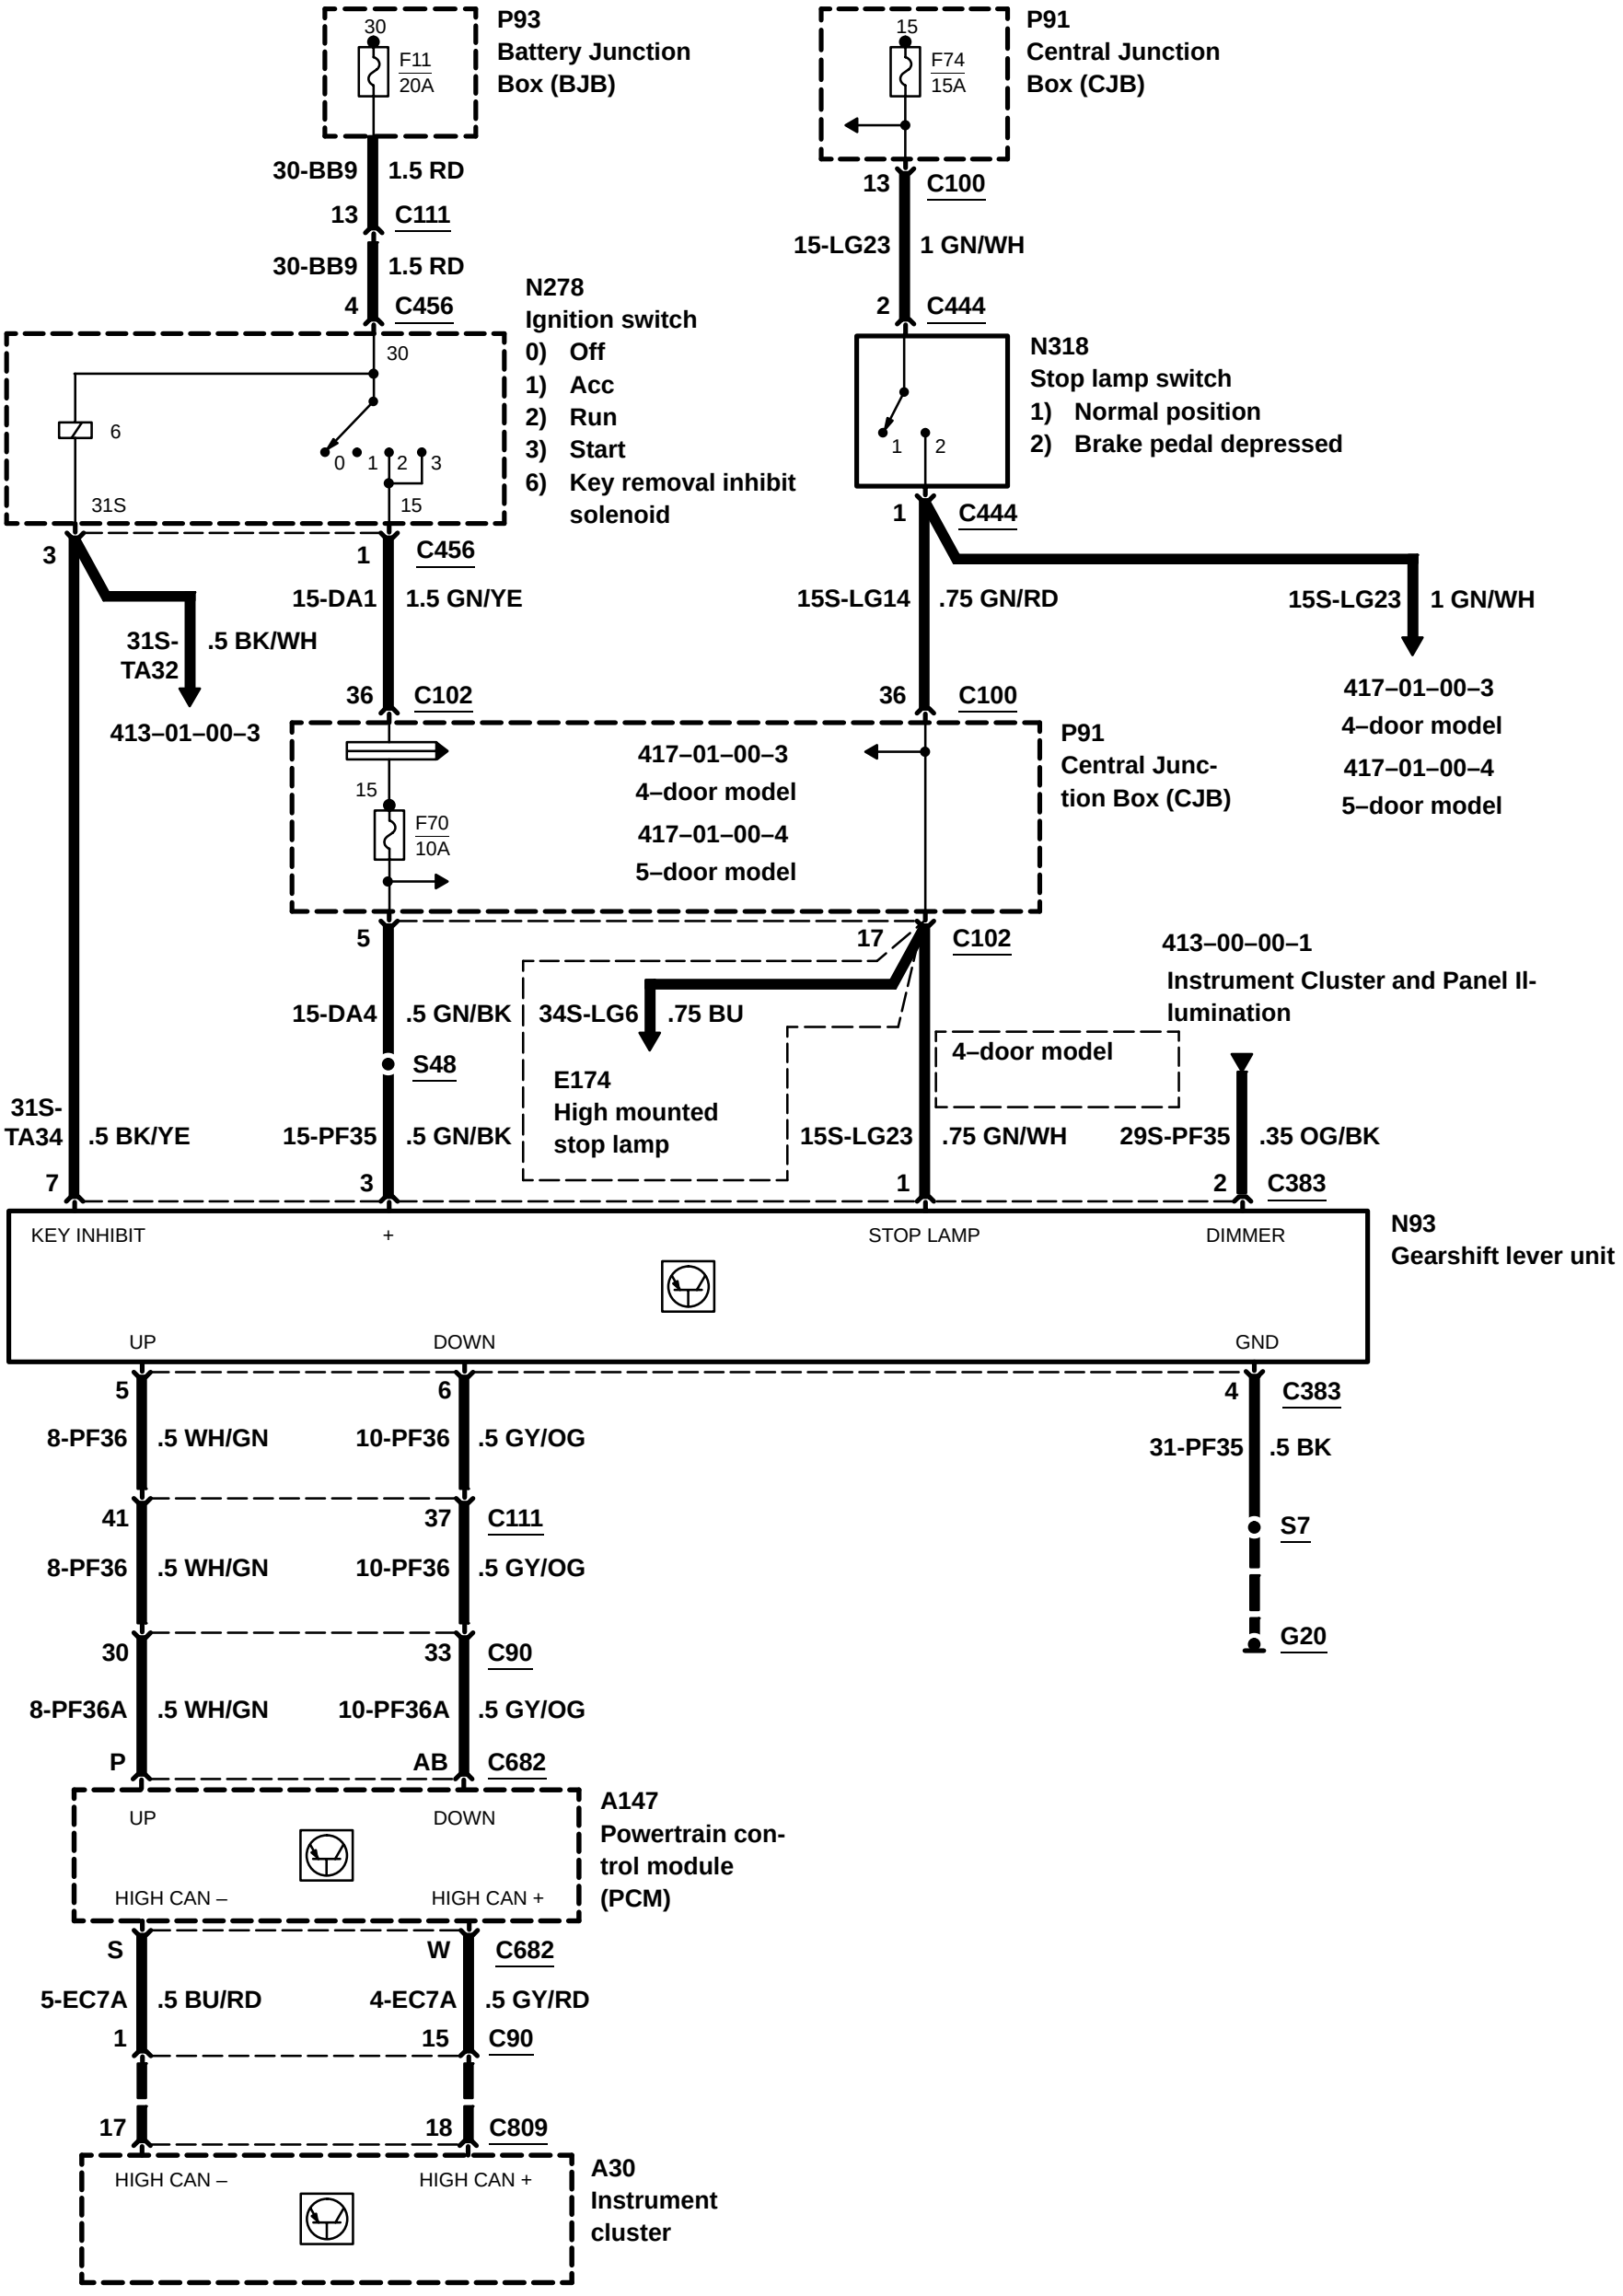


Automatic Transmission – 1.6L (Z6)

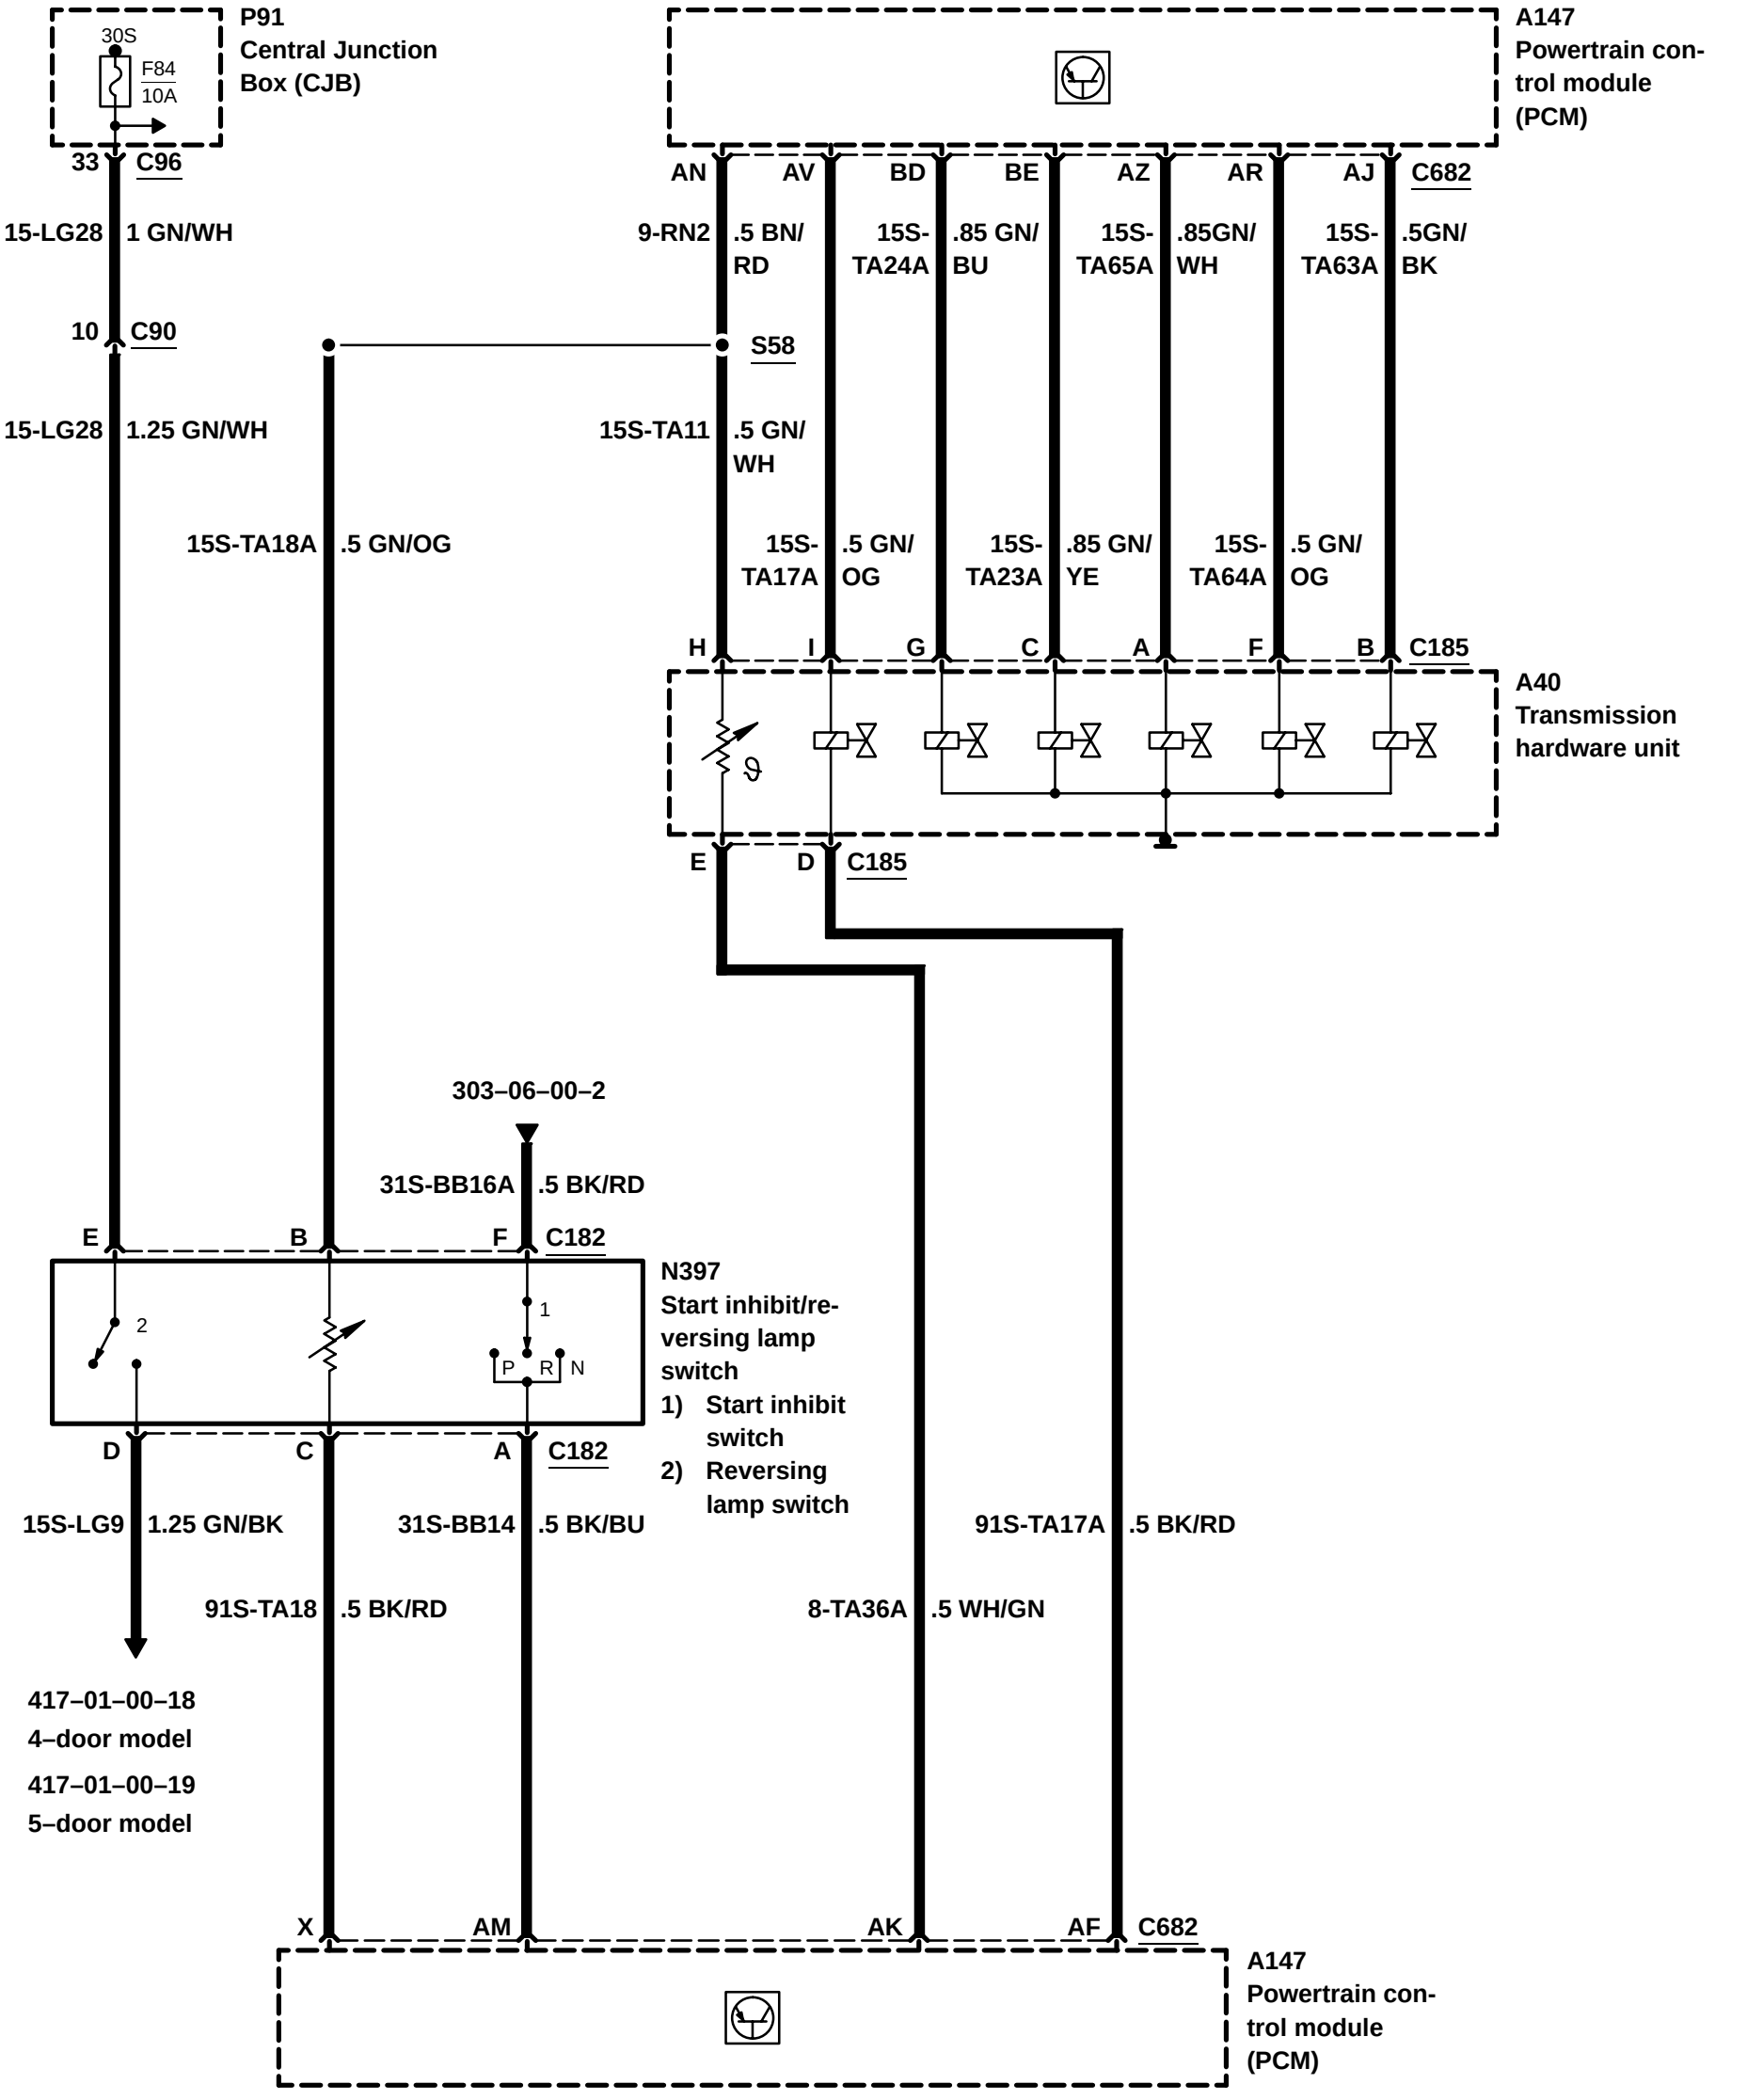


Automatic Transmission – 1.6L (Z6)

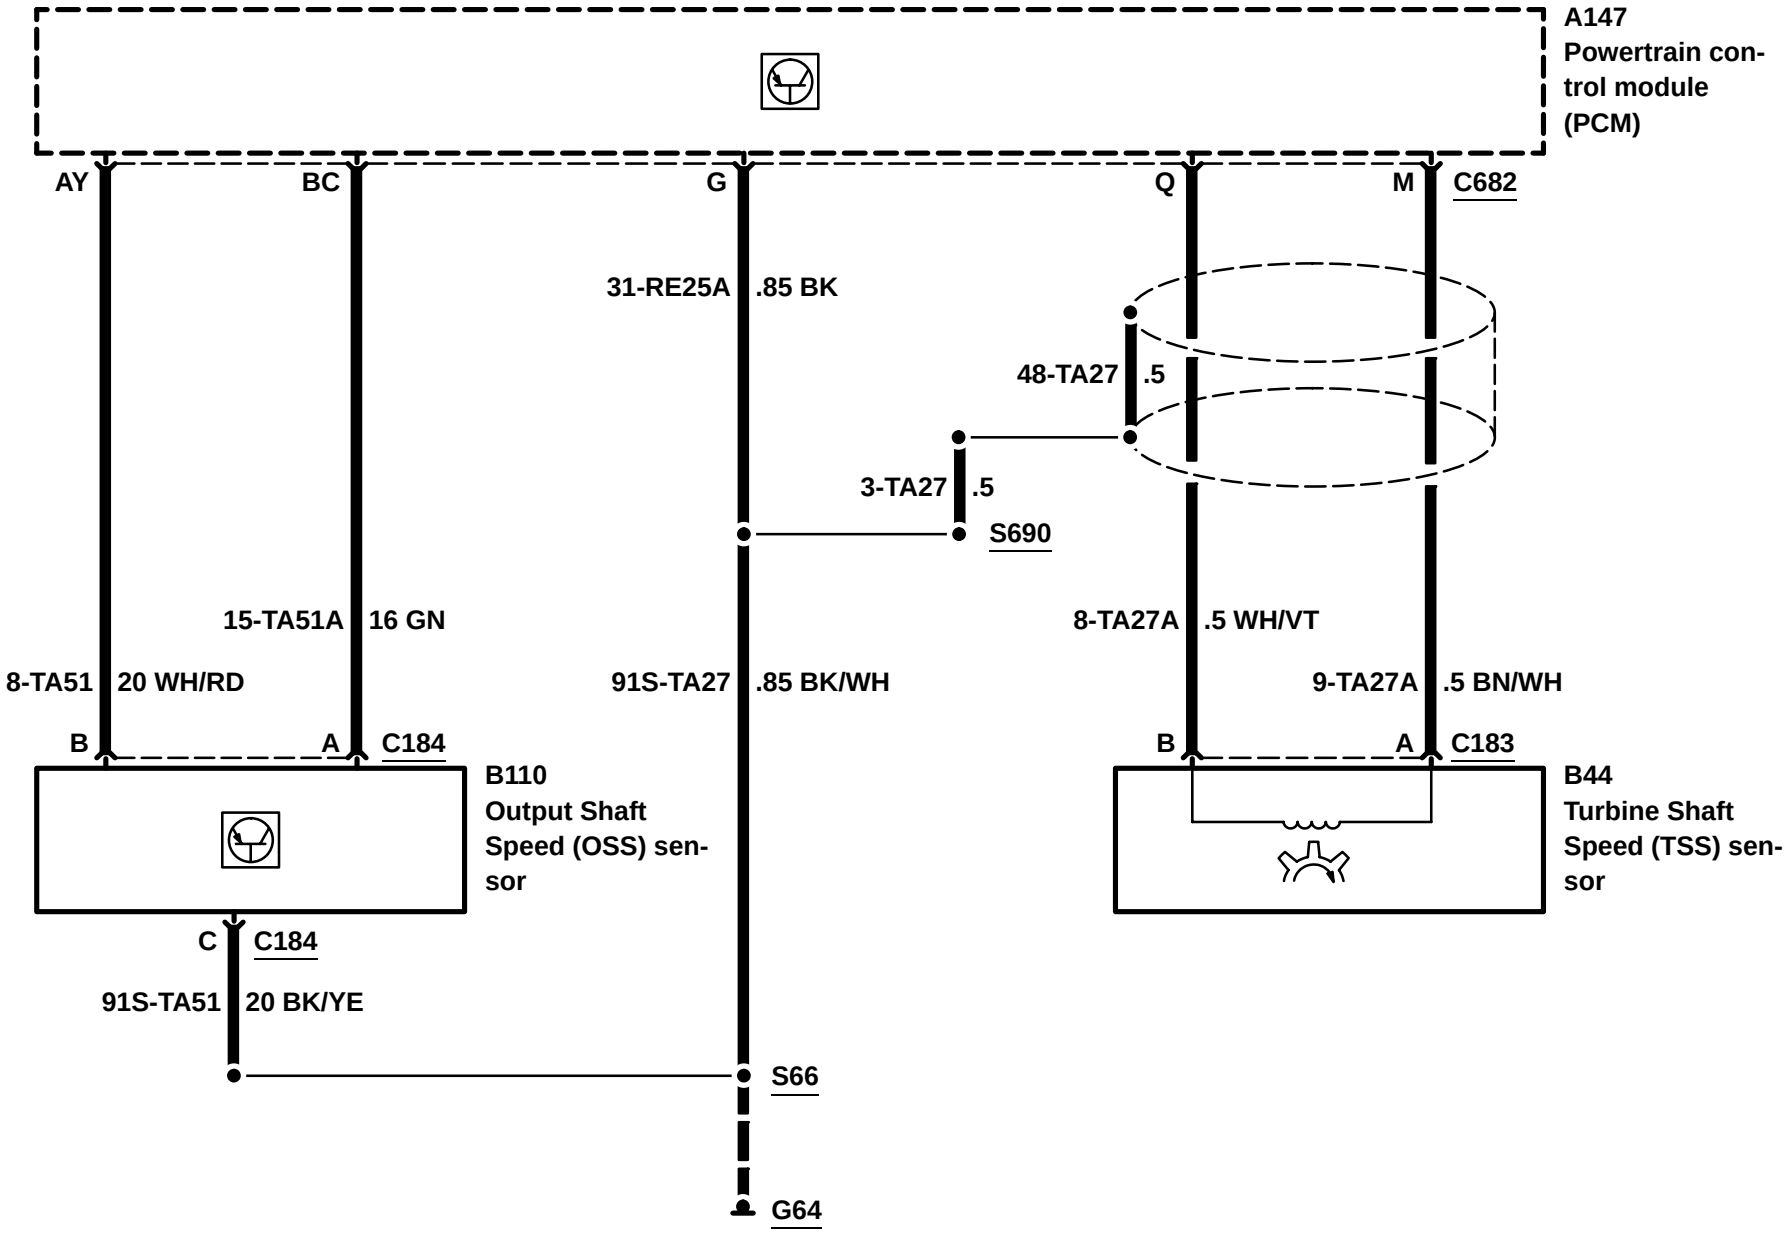


Automatic Transmission – 1.8/2.0L Duratec–HE (MI4)

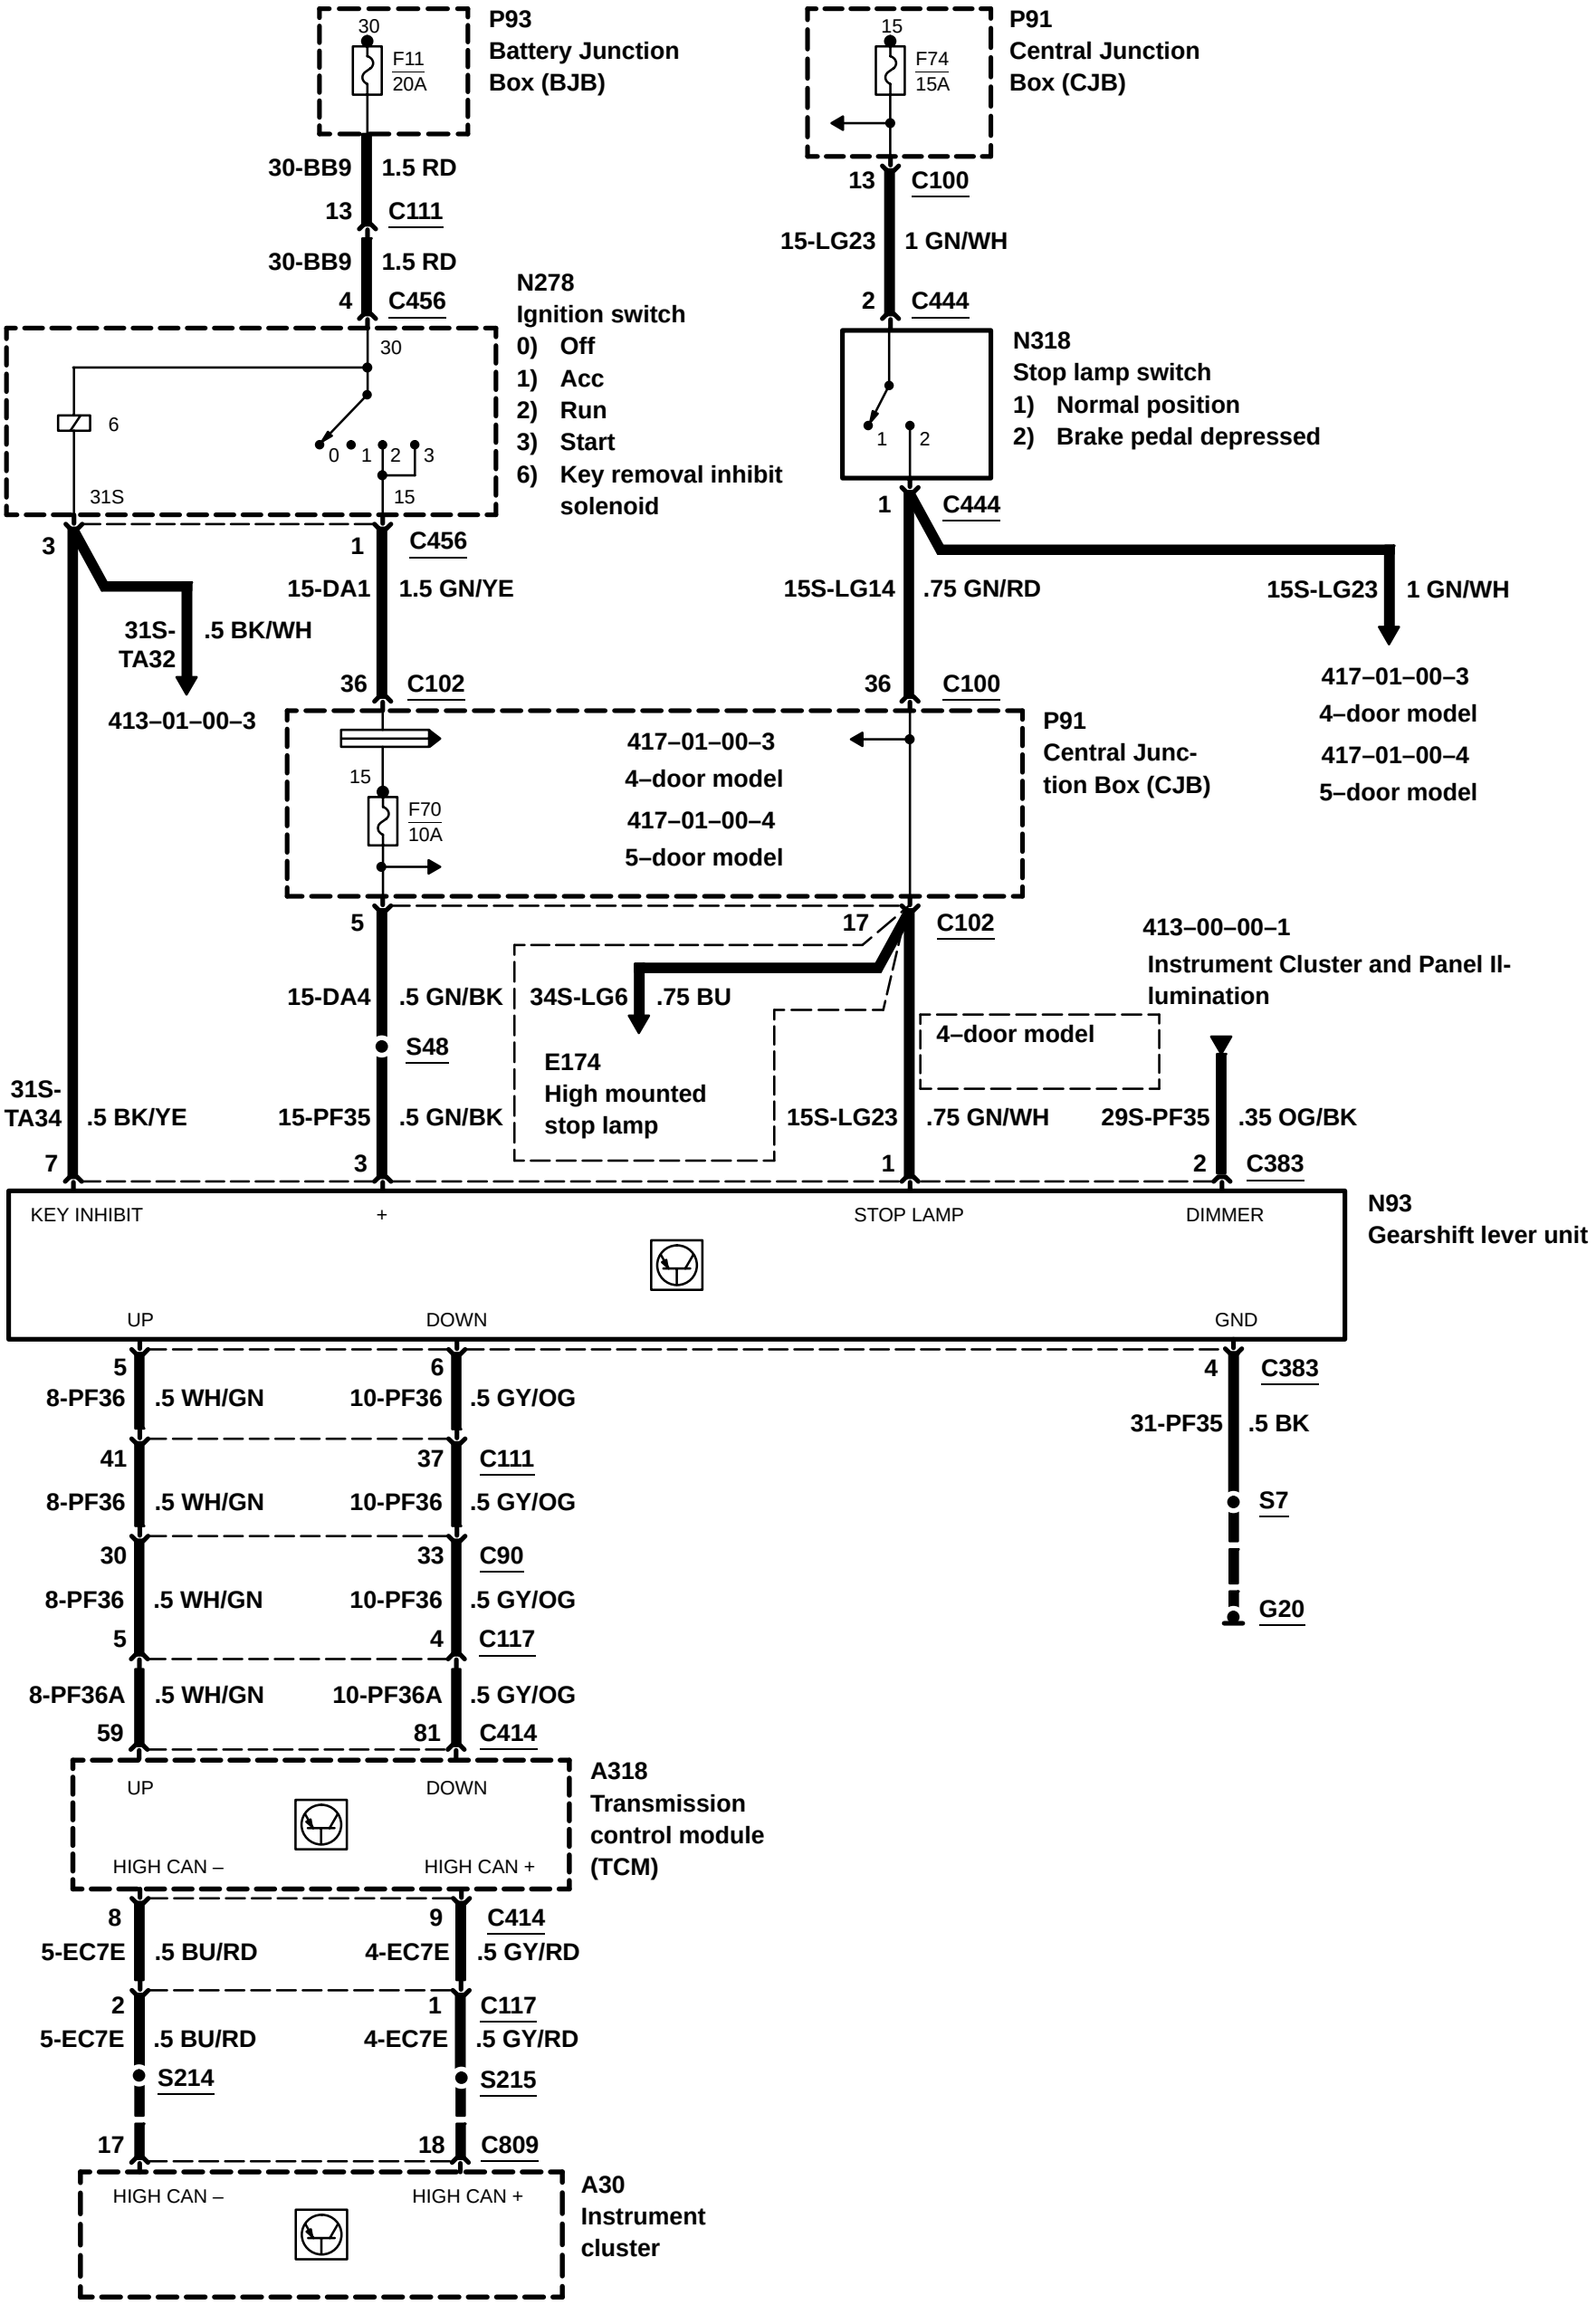


Automatic Transmission – 1.8/2.0L Duratec–HE (MI4)

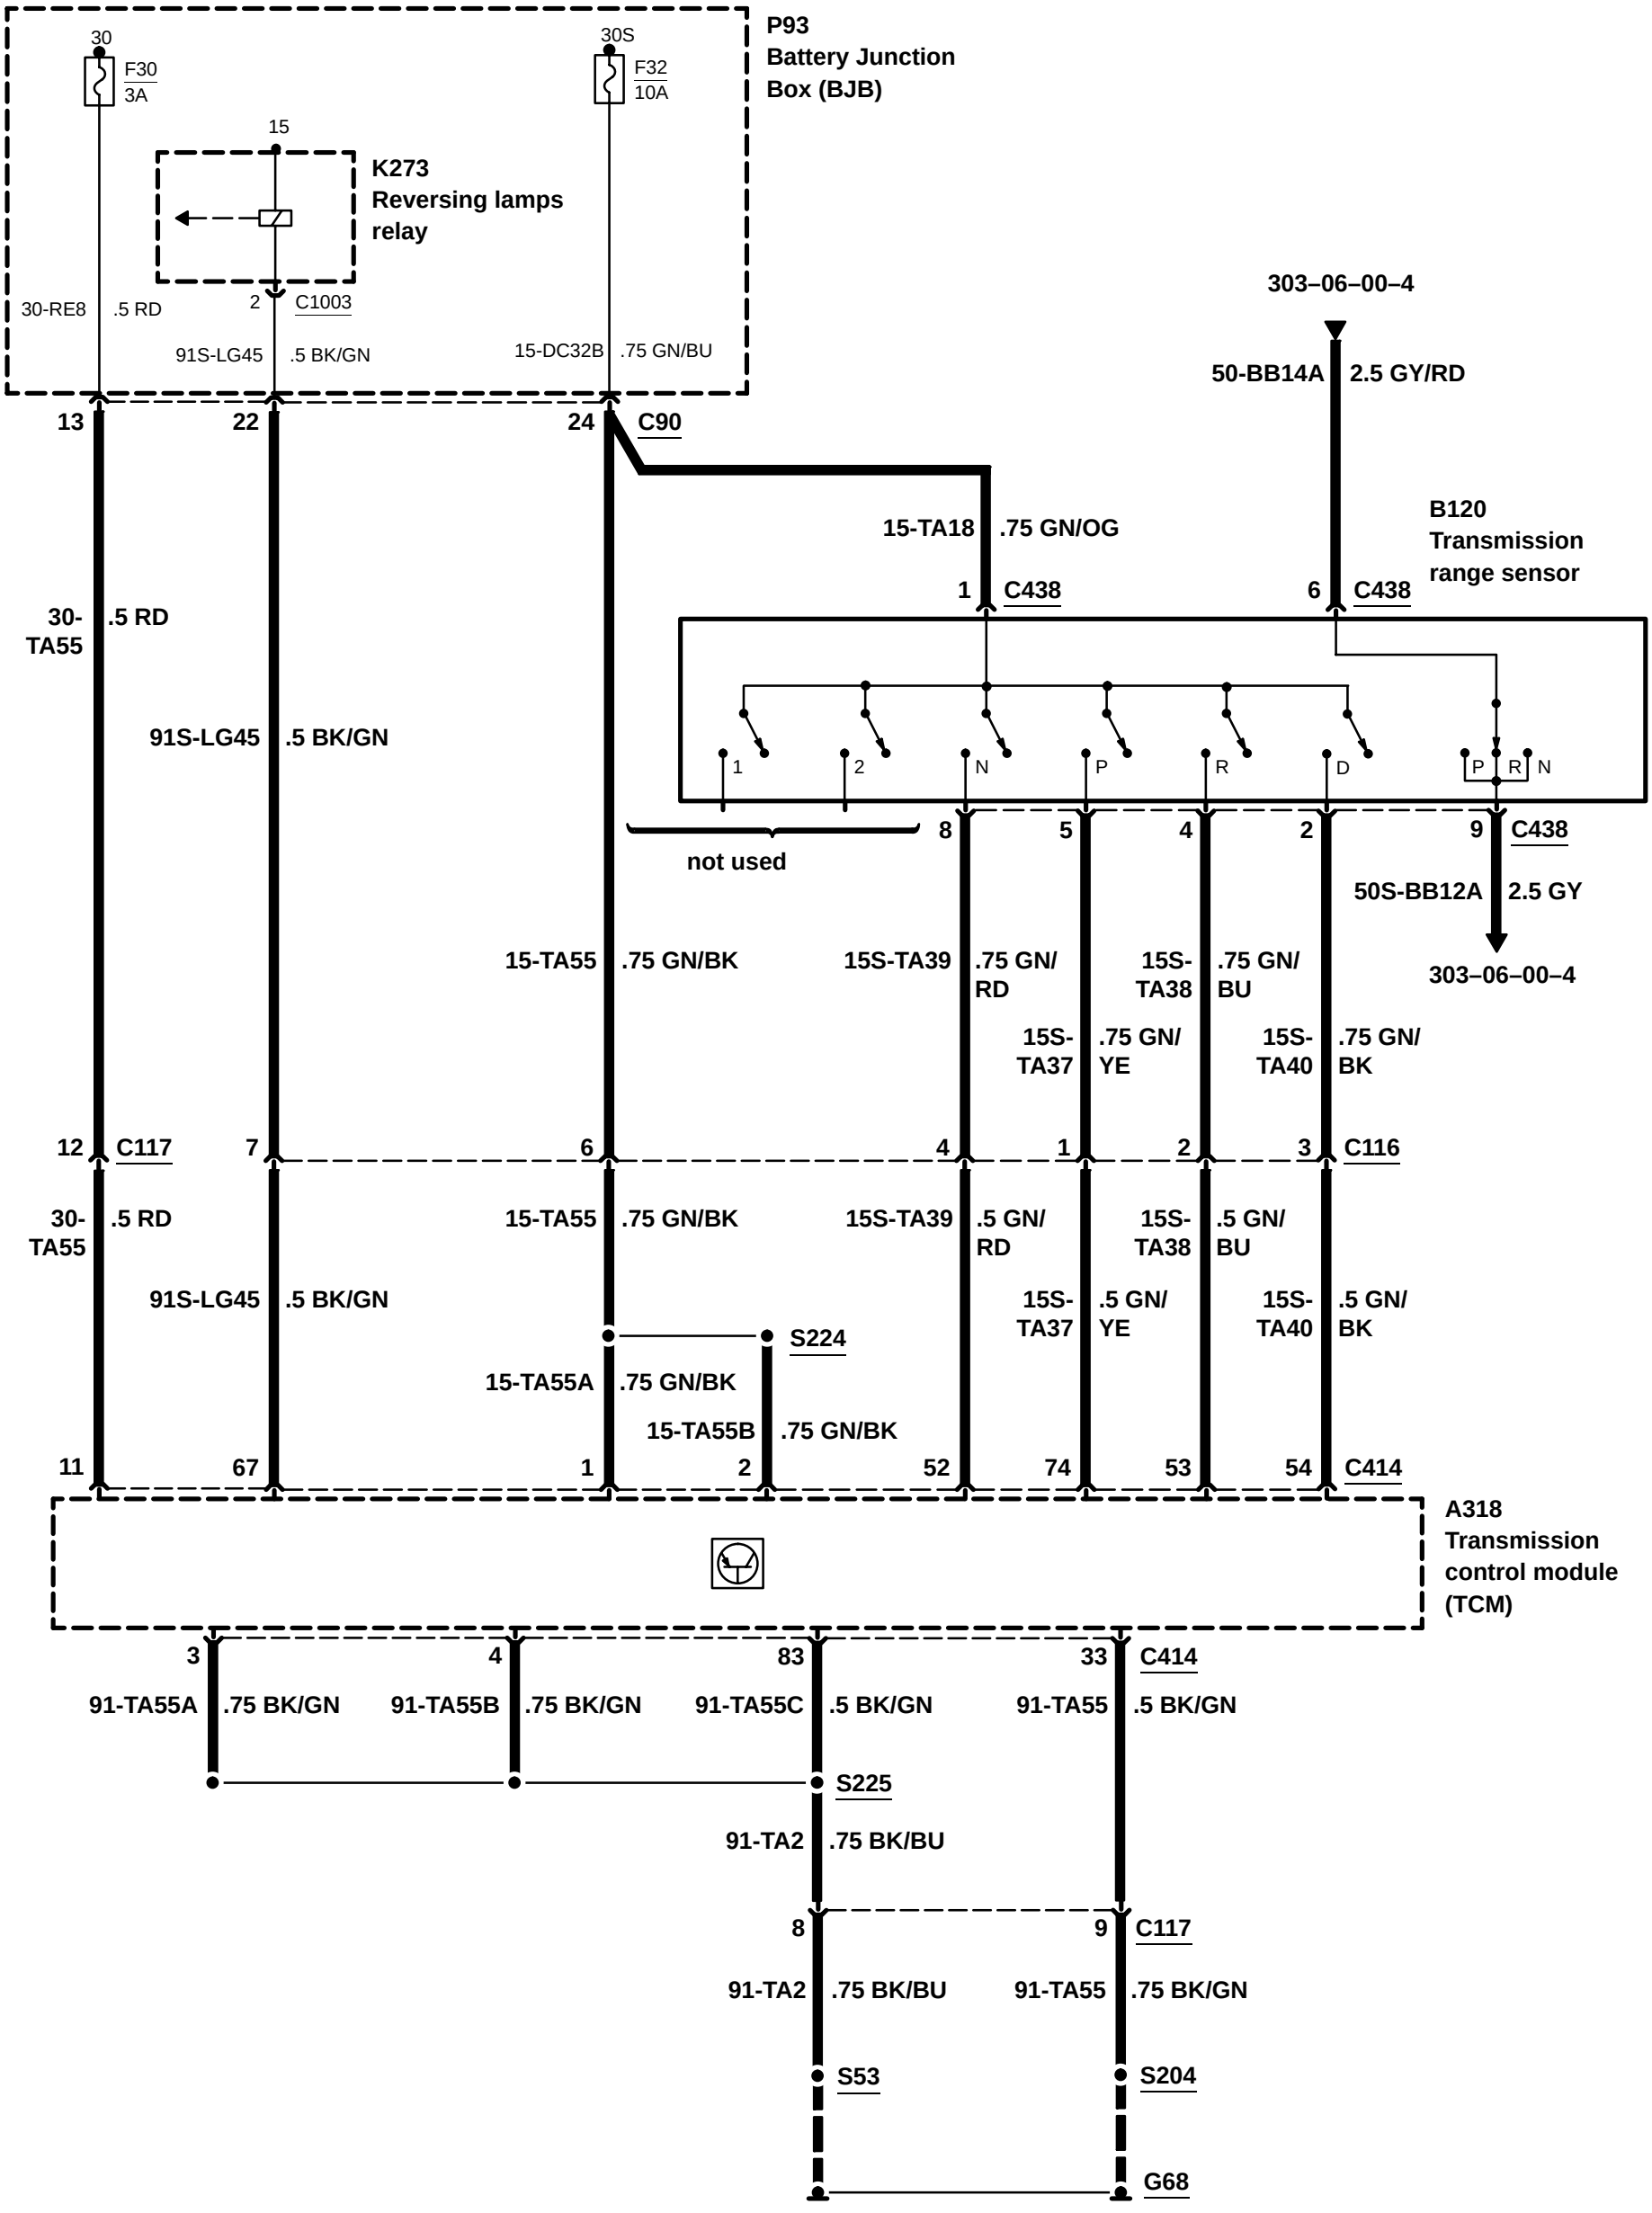


Automatic Transmission – 1.8/2.0L Duratec–HE (MI4)

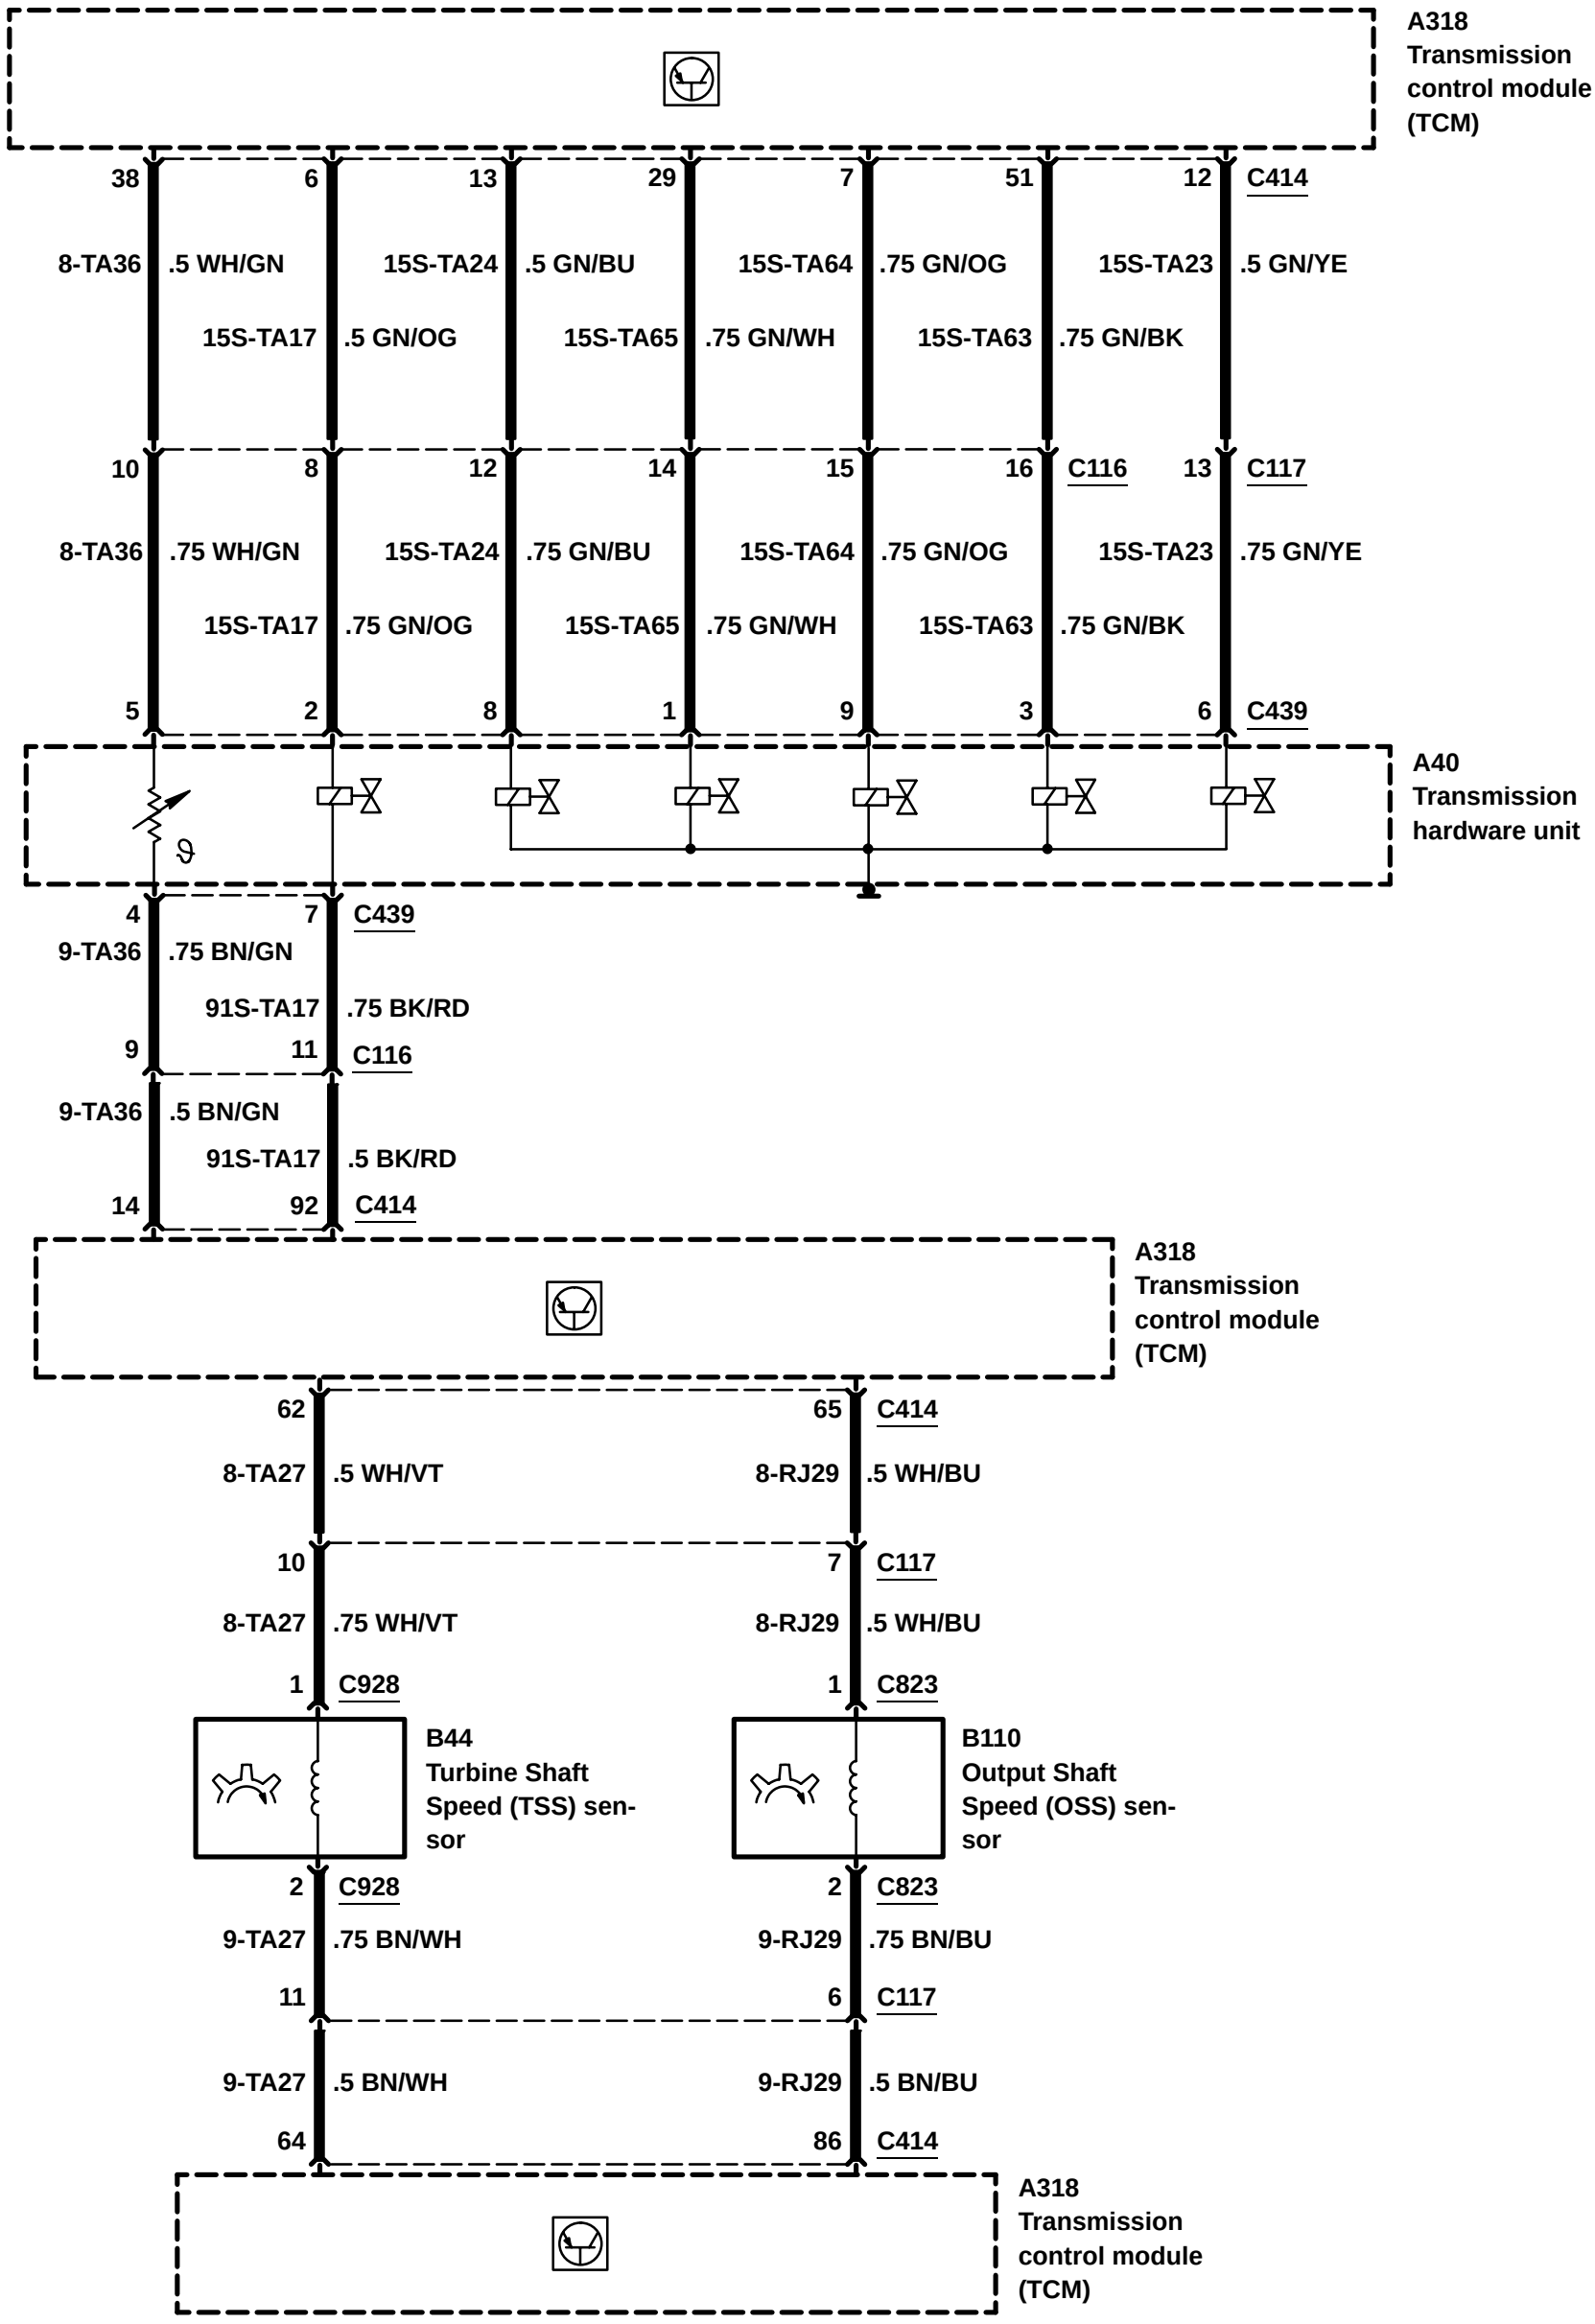

Speed Control

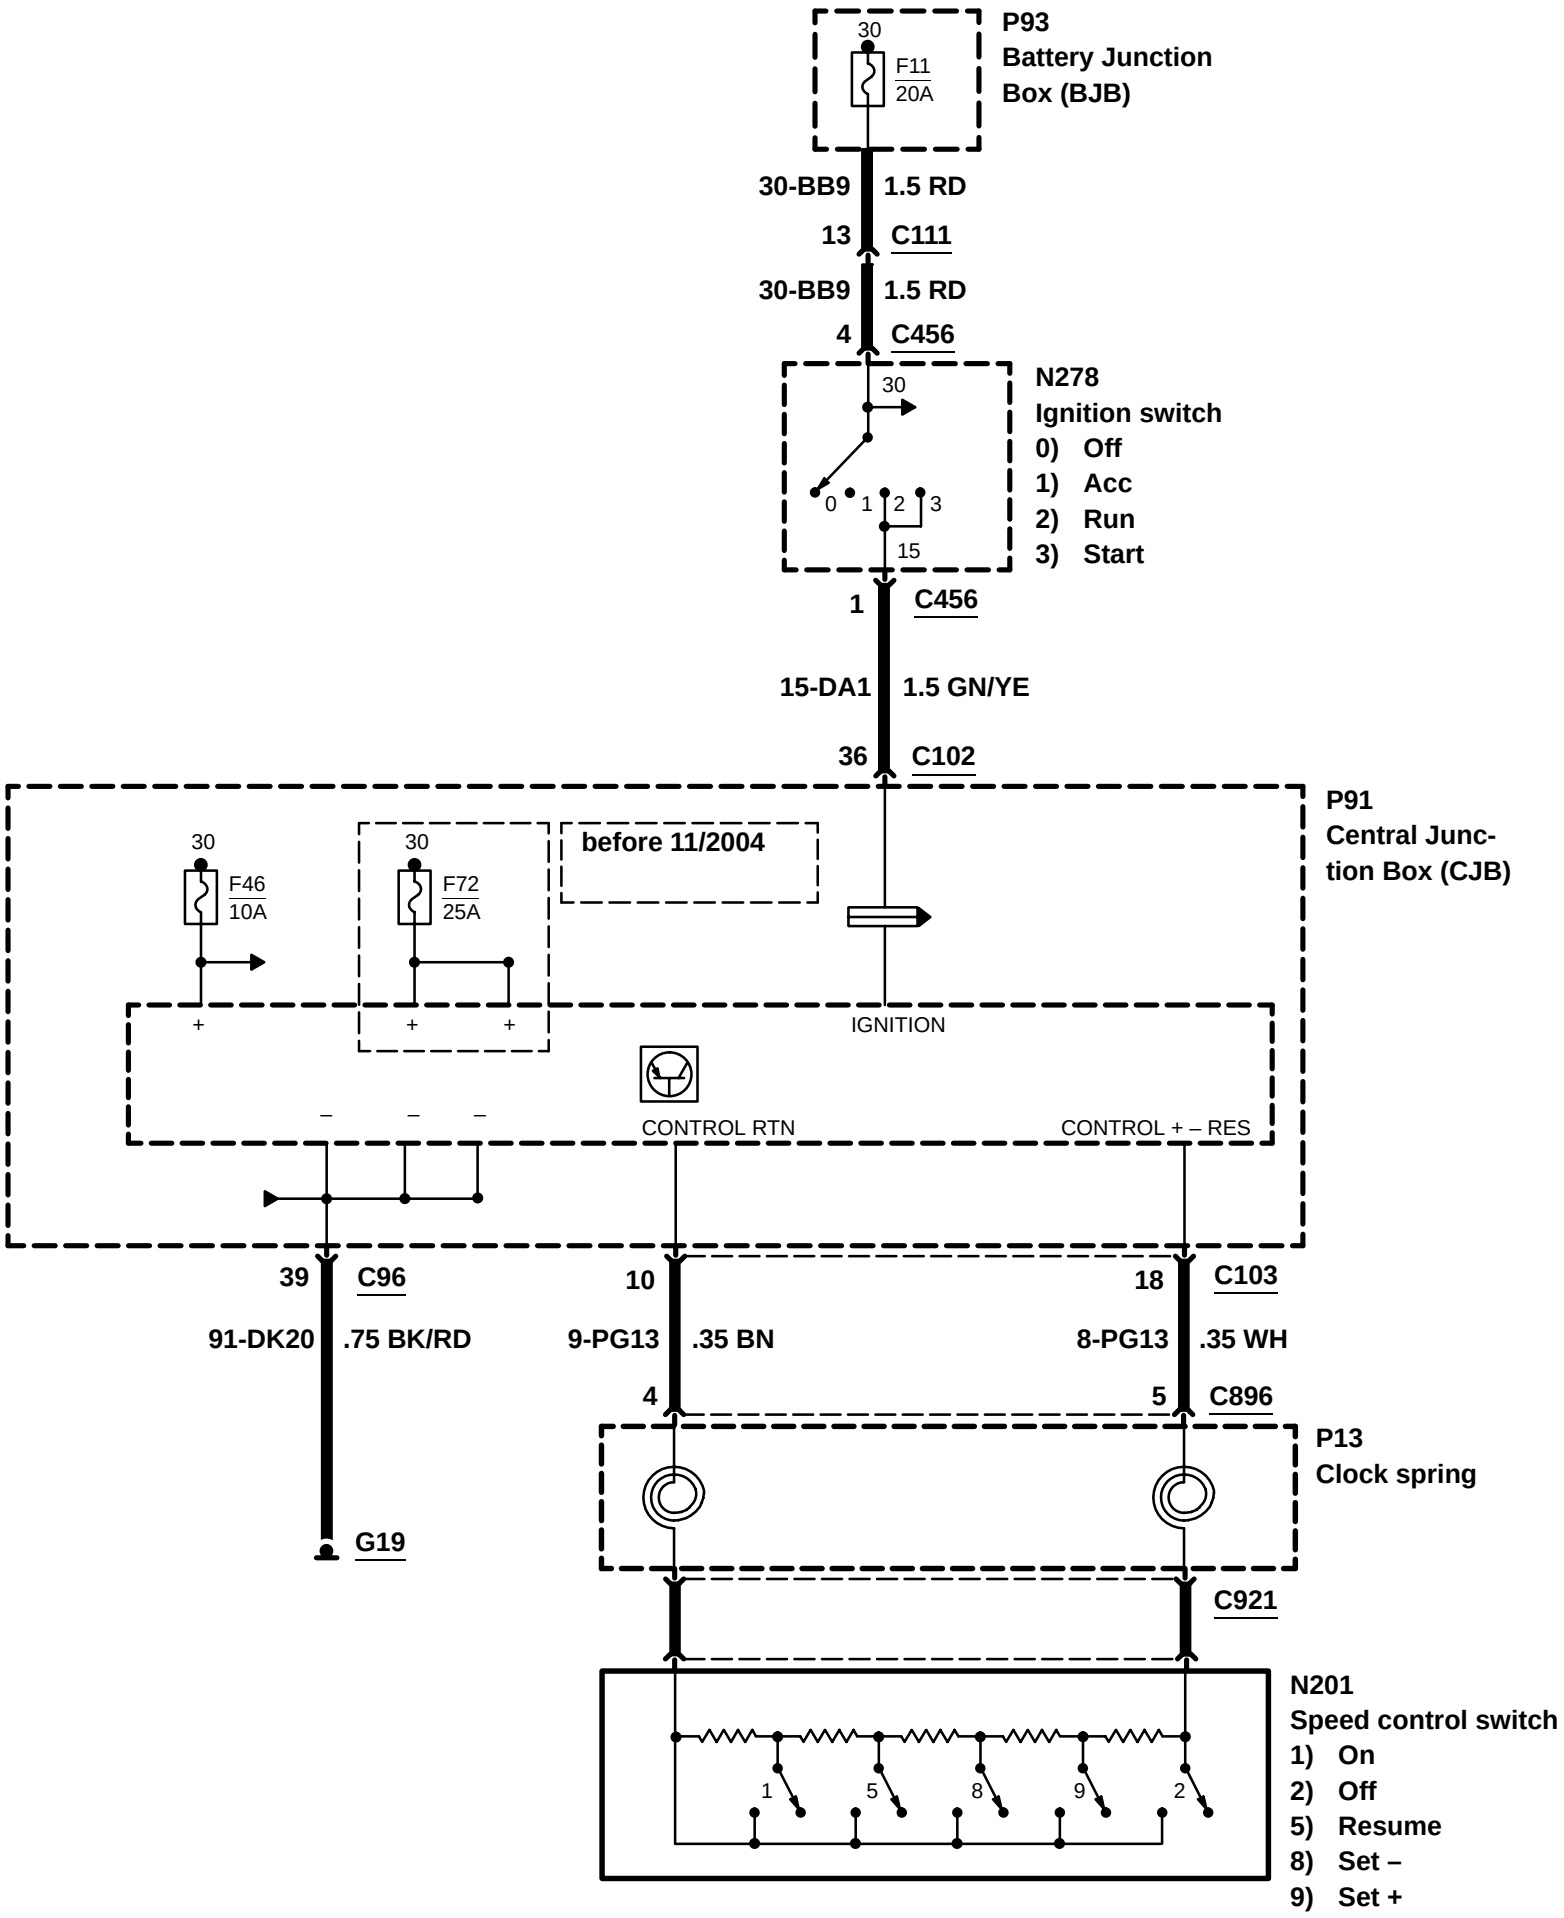

Speed Control

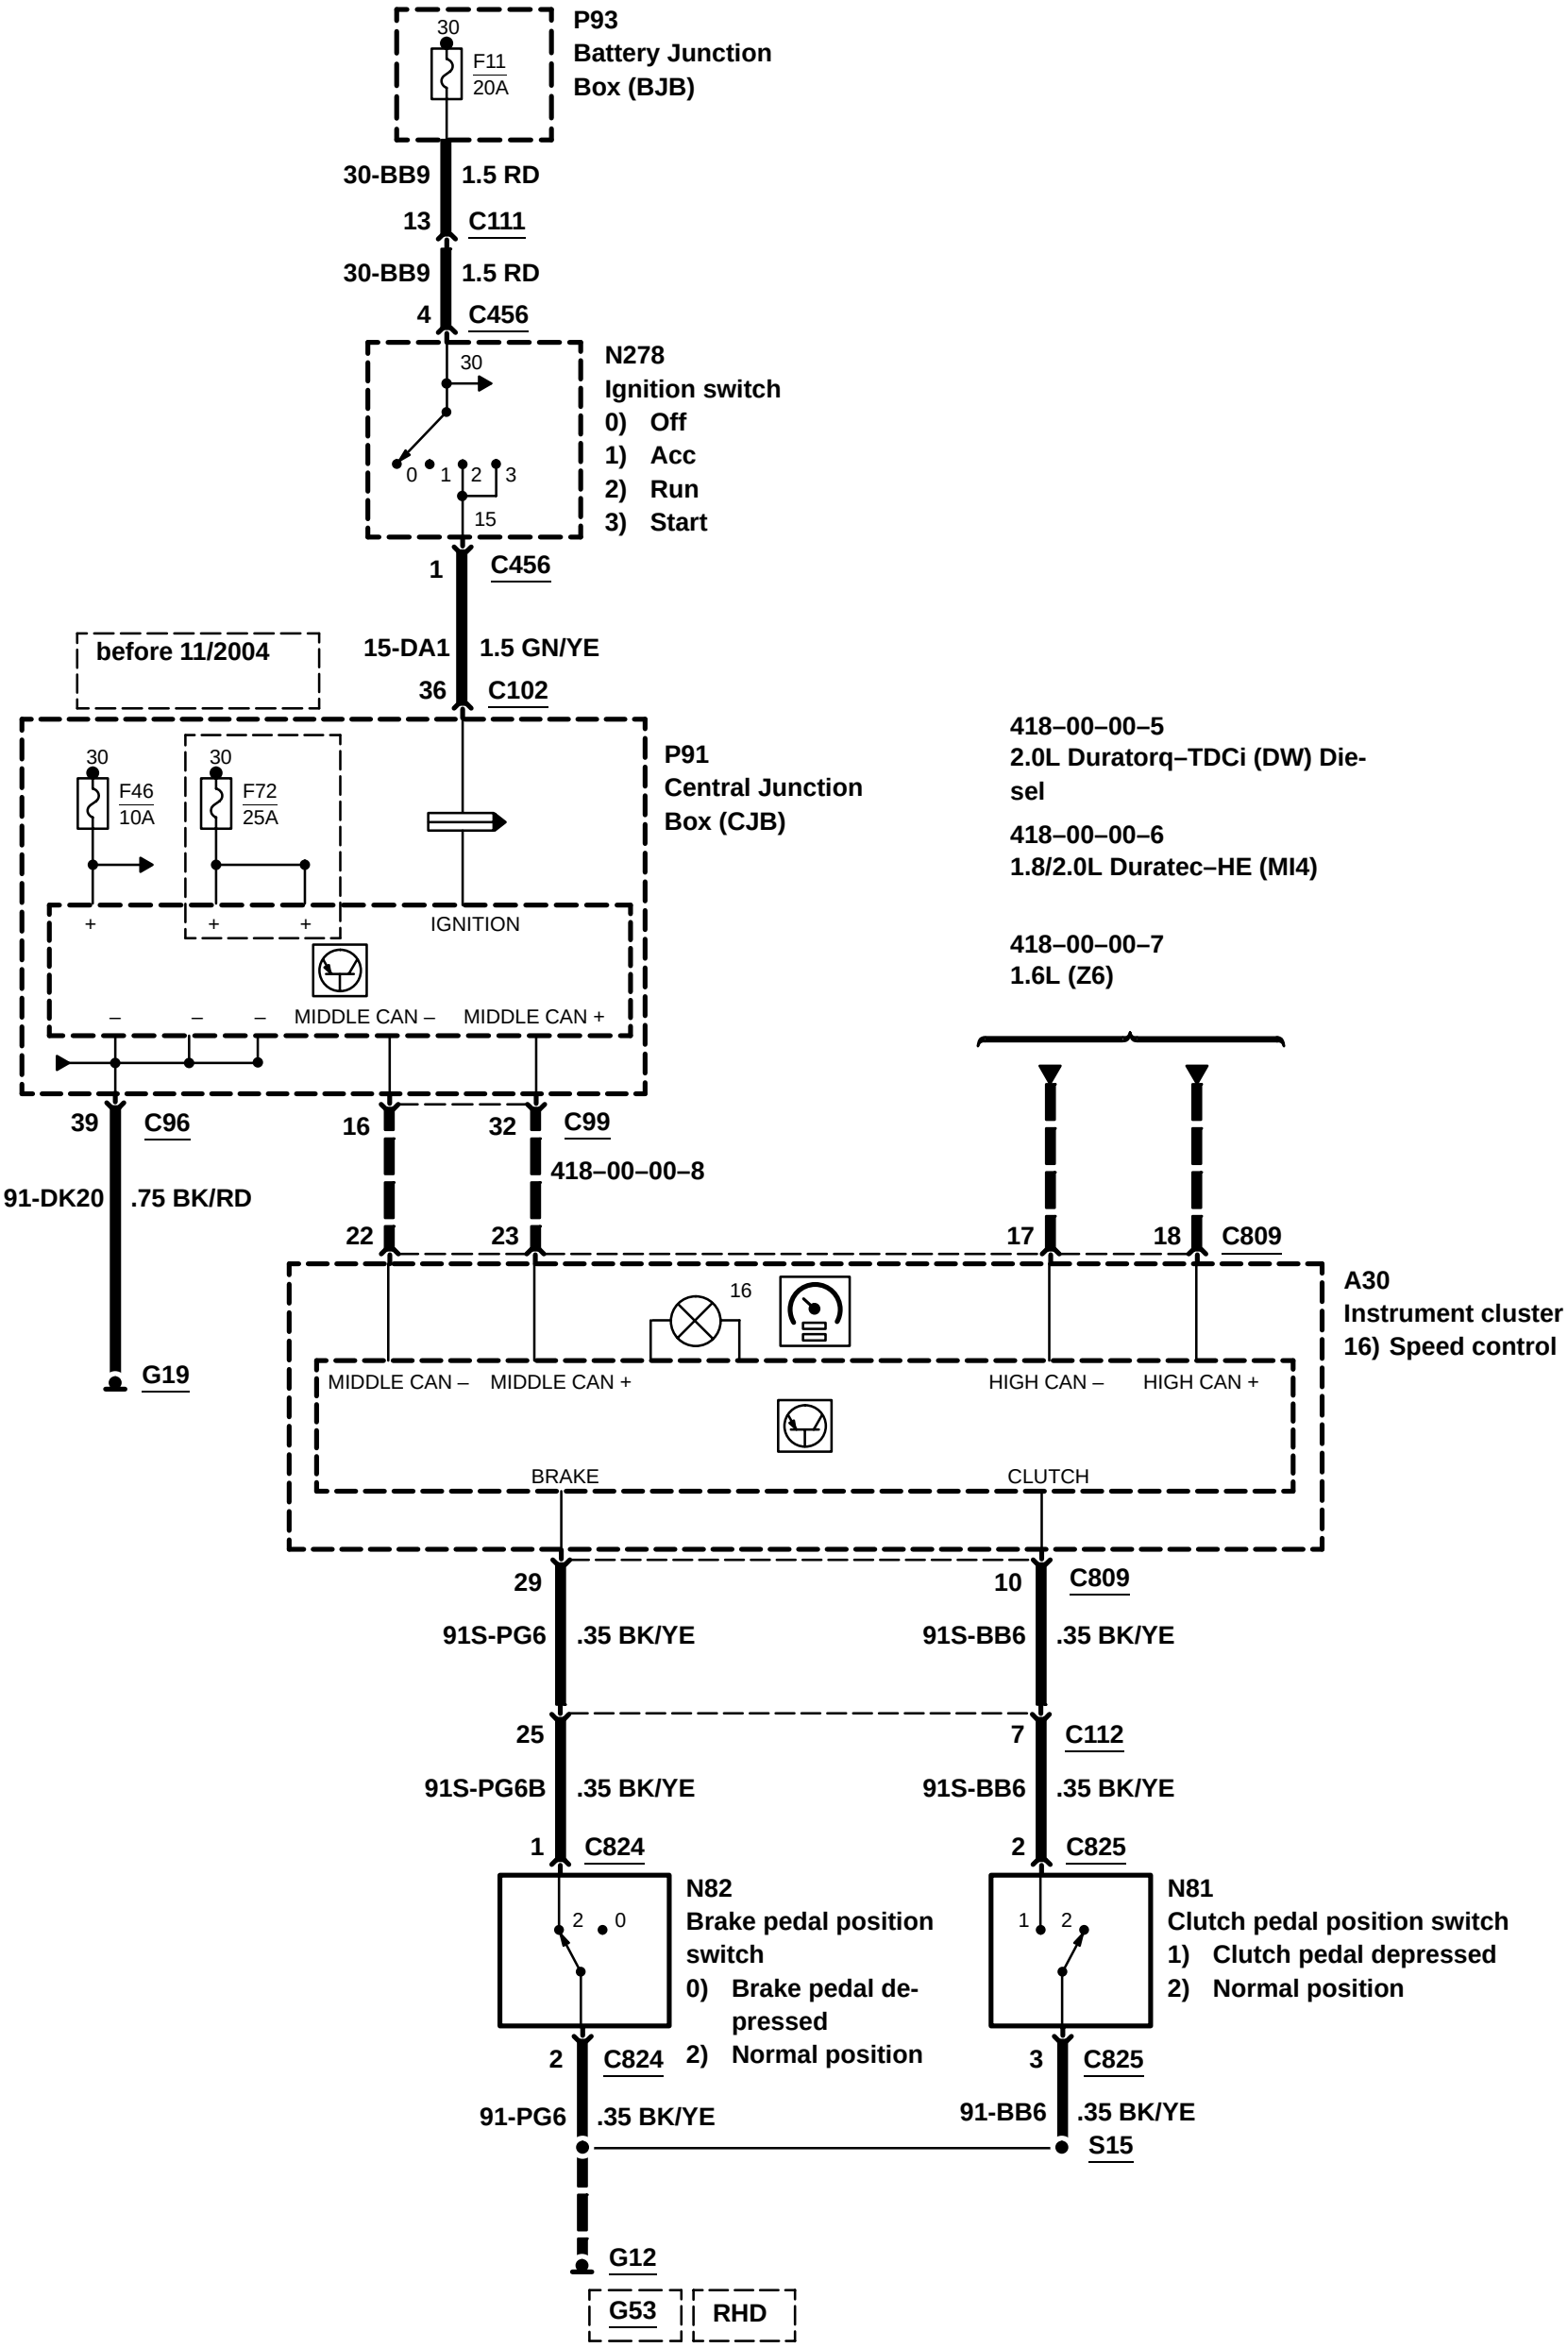


418–00–00–5
2.0L Duratorq–TDCi (DW) Diesel


418–00–00–6
1.8/2.0L Duratec–HE (MI4)

418–00–00–7
1.6L (Z6)


Air Conditioning – without EATC

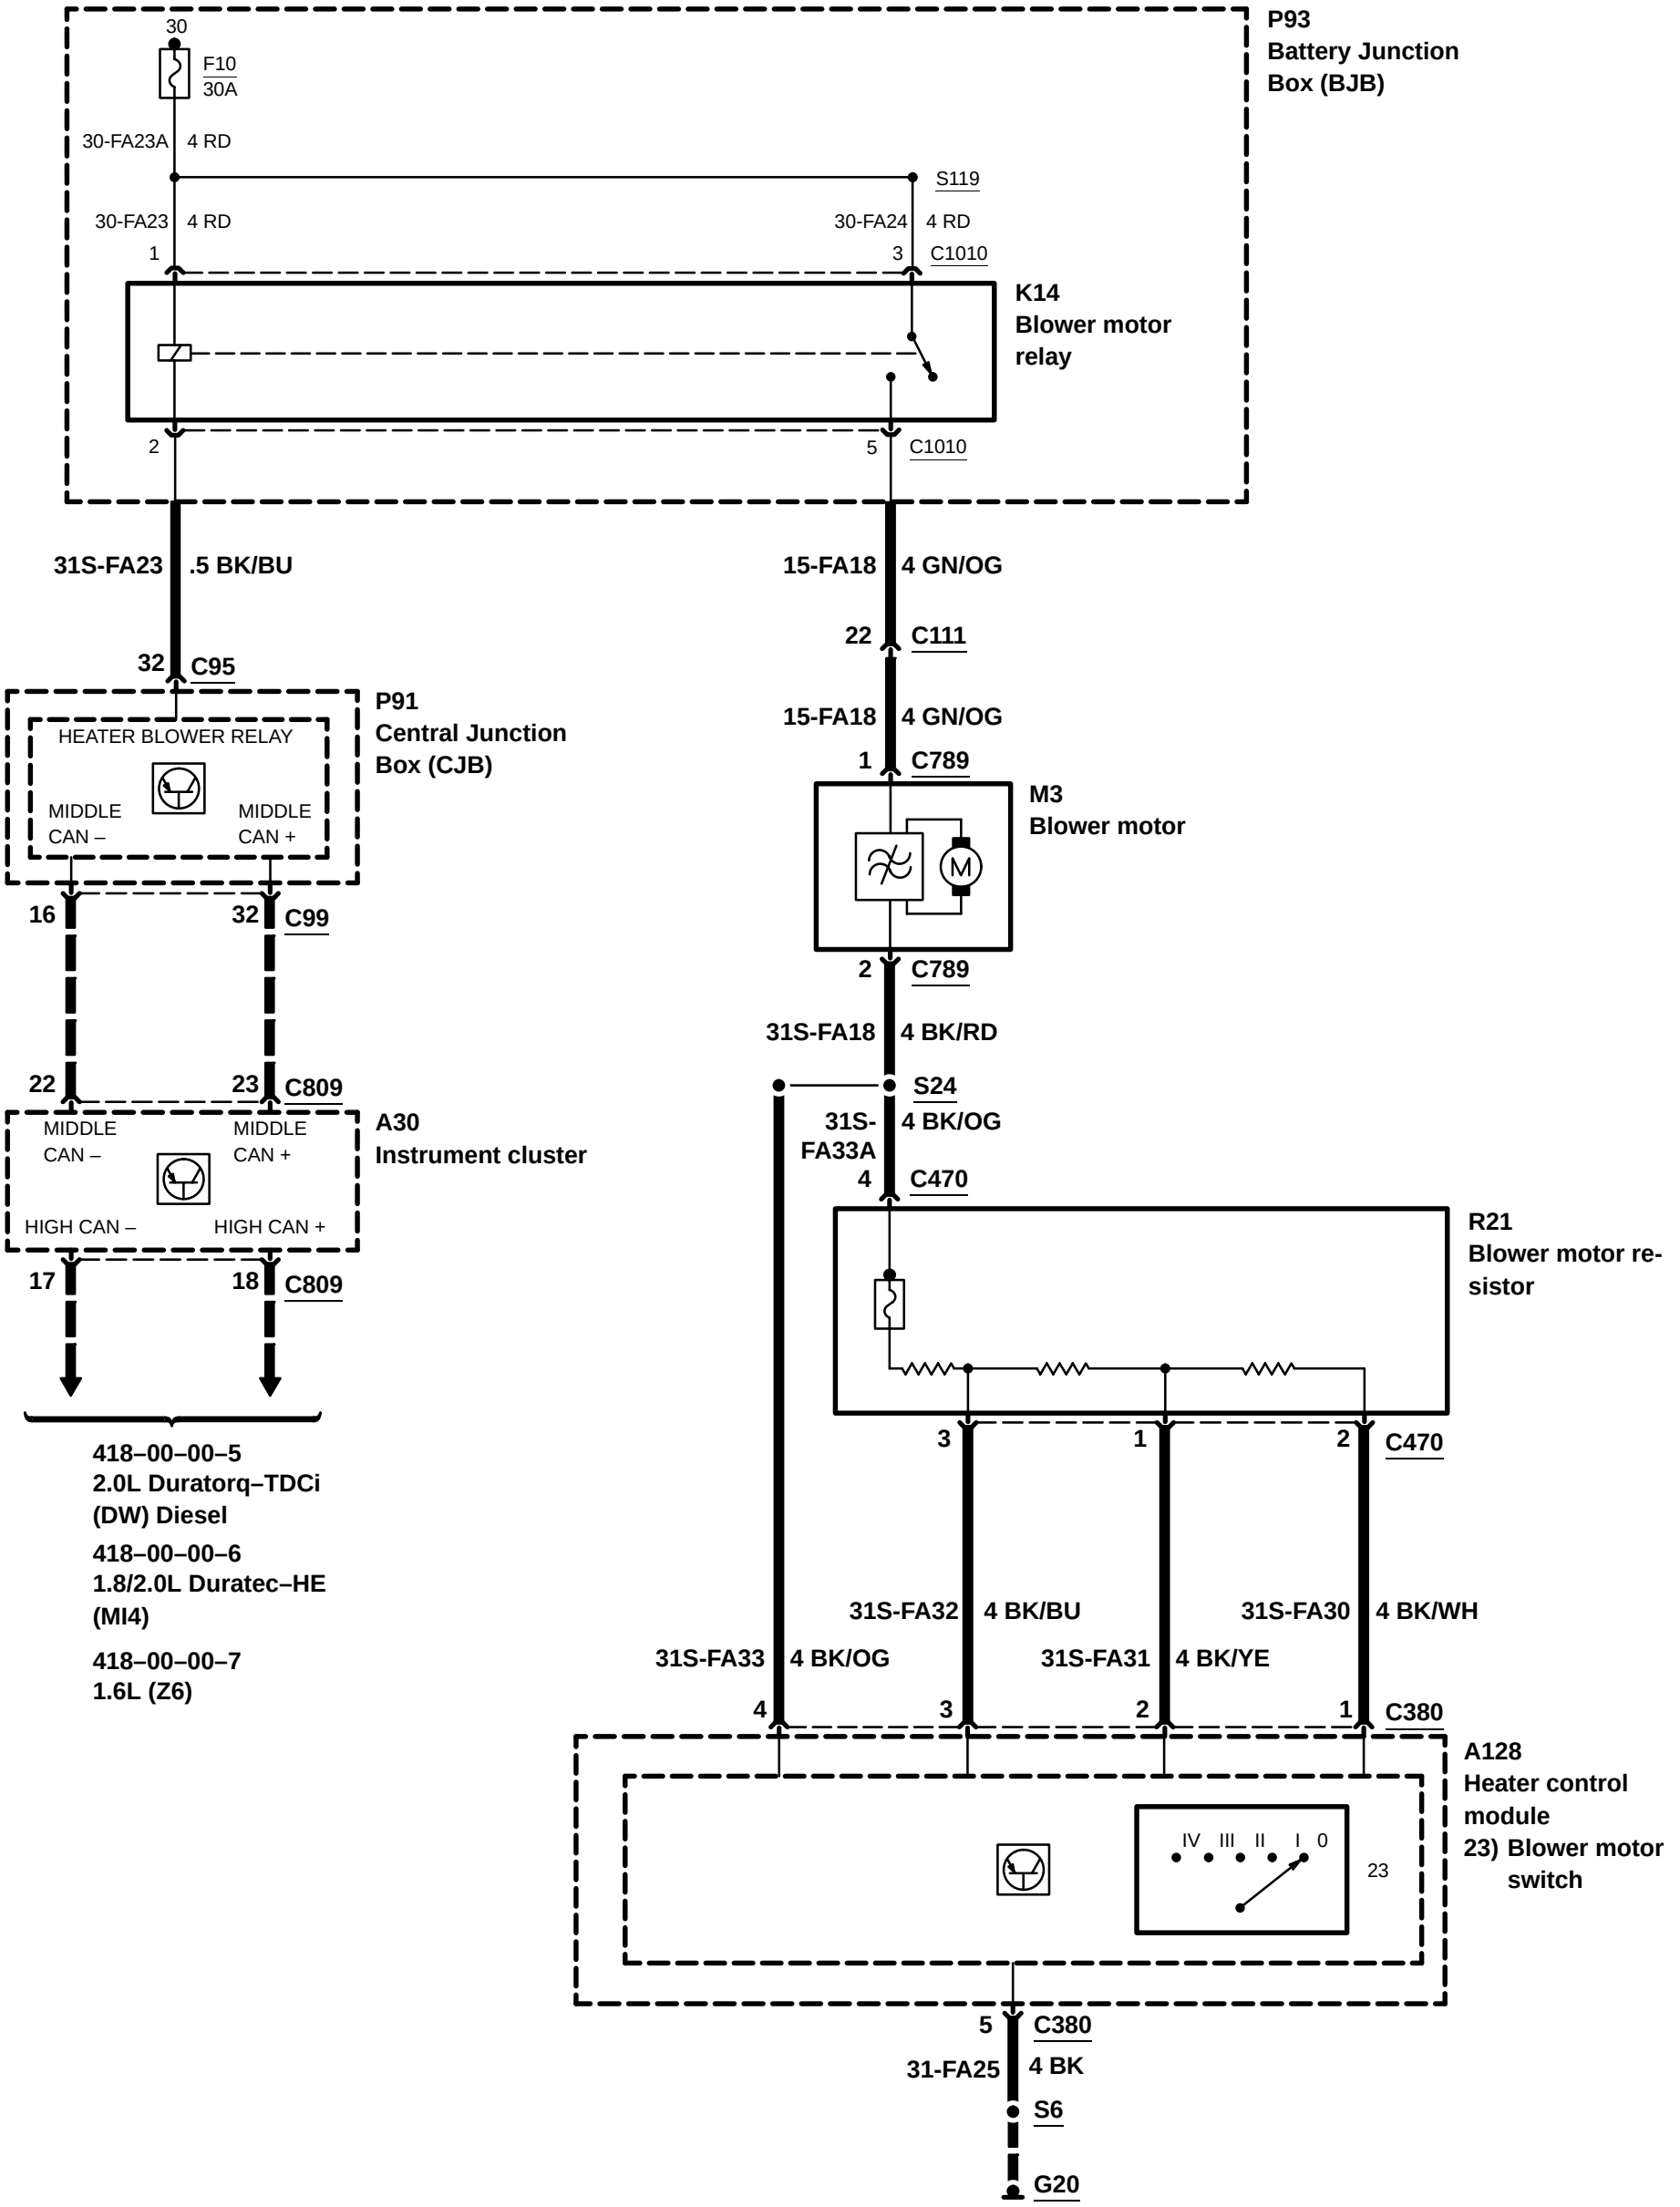


Air Conditioning – without EATC

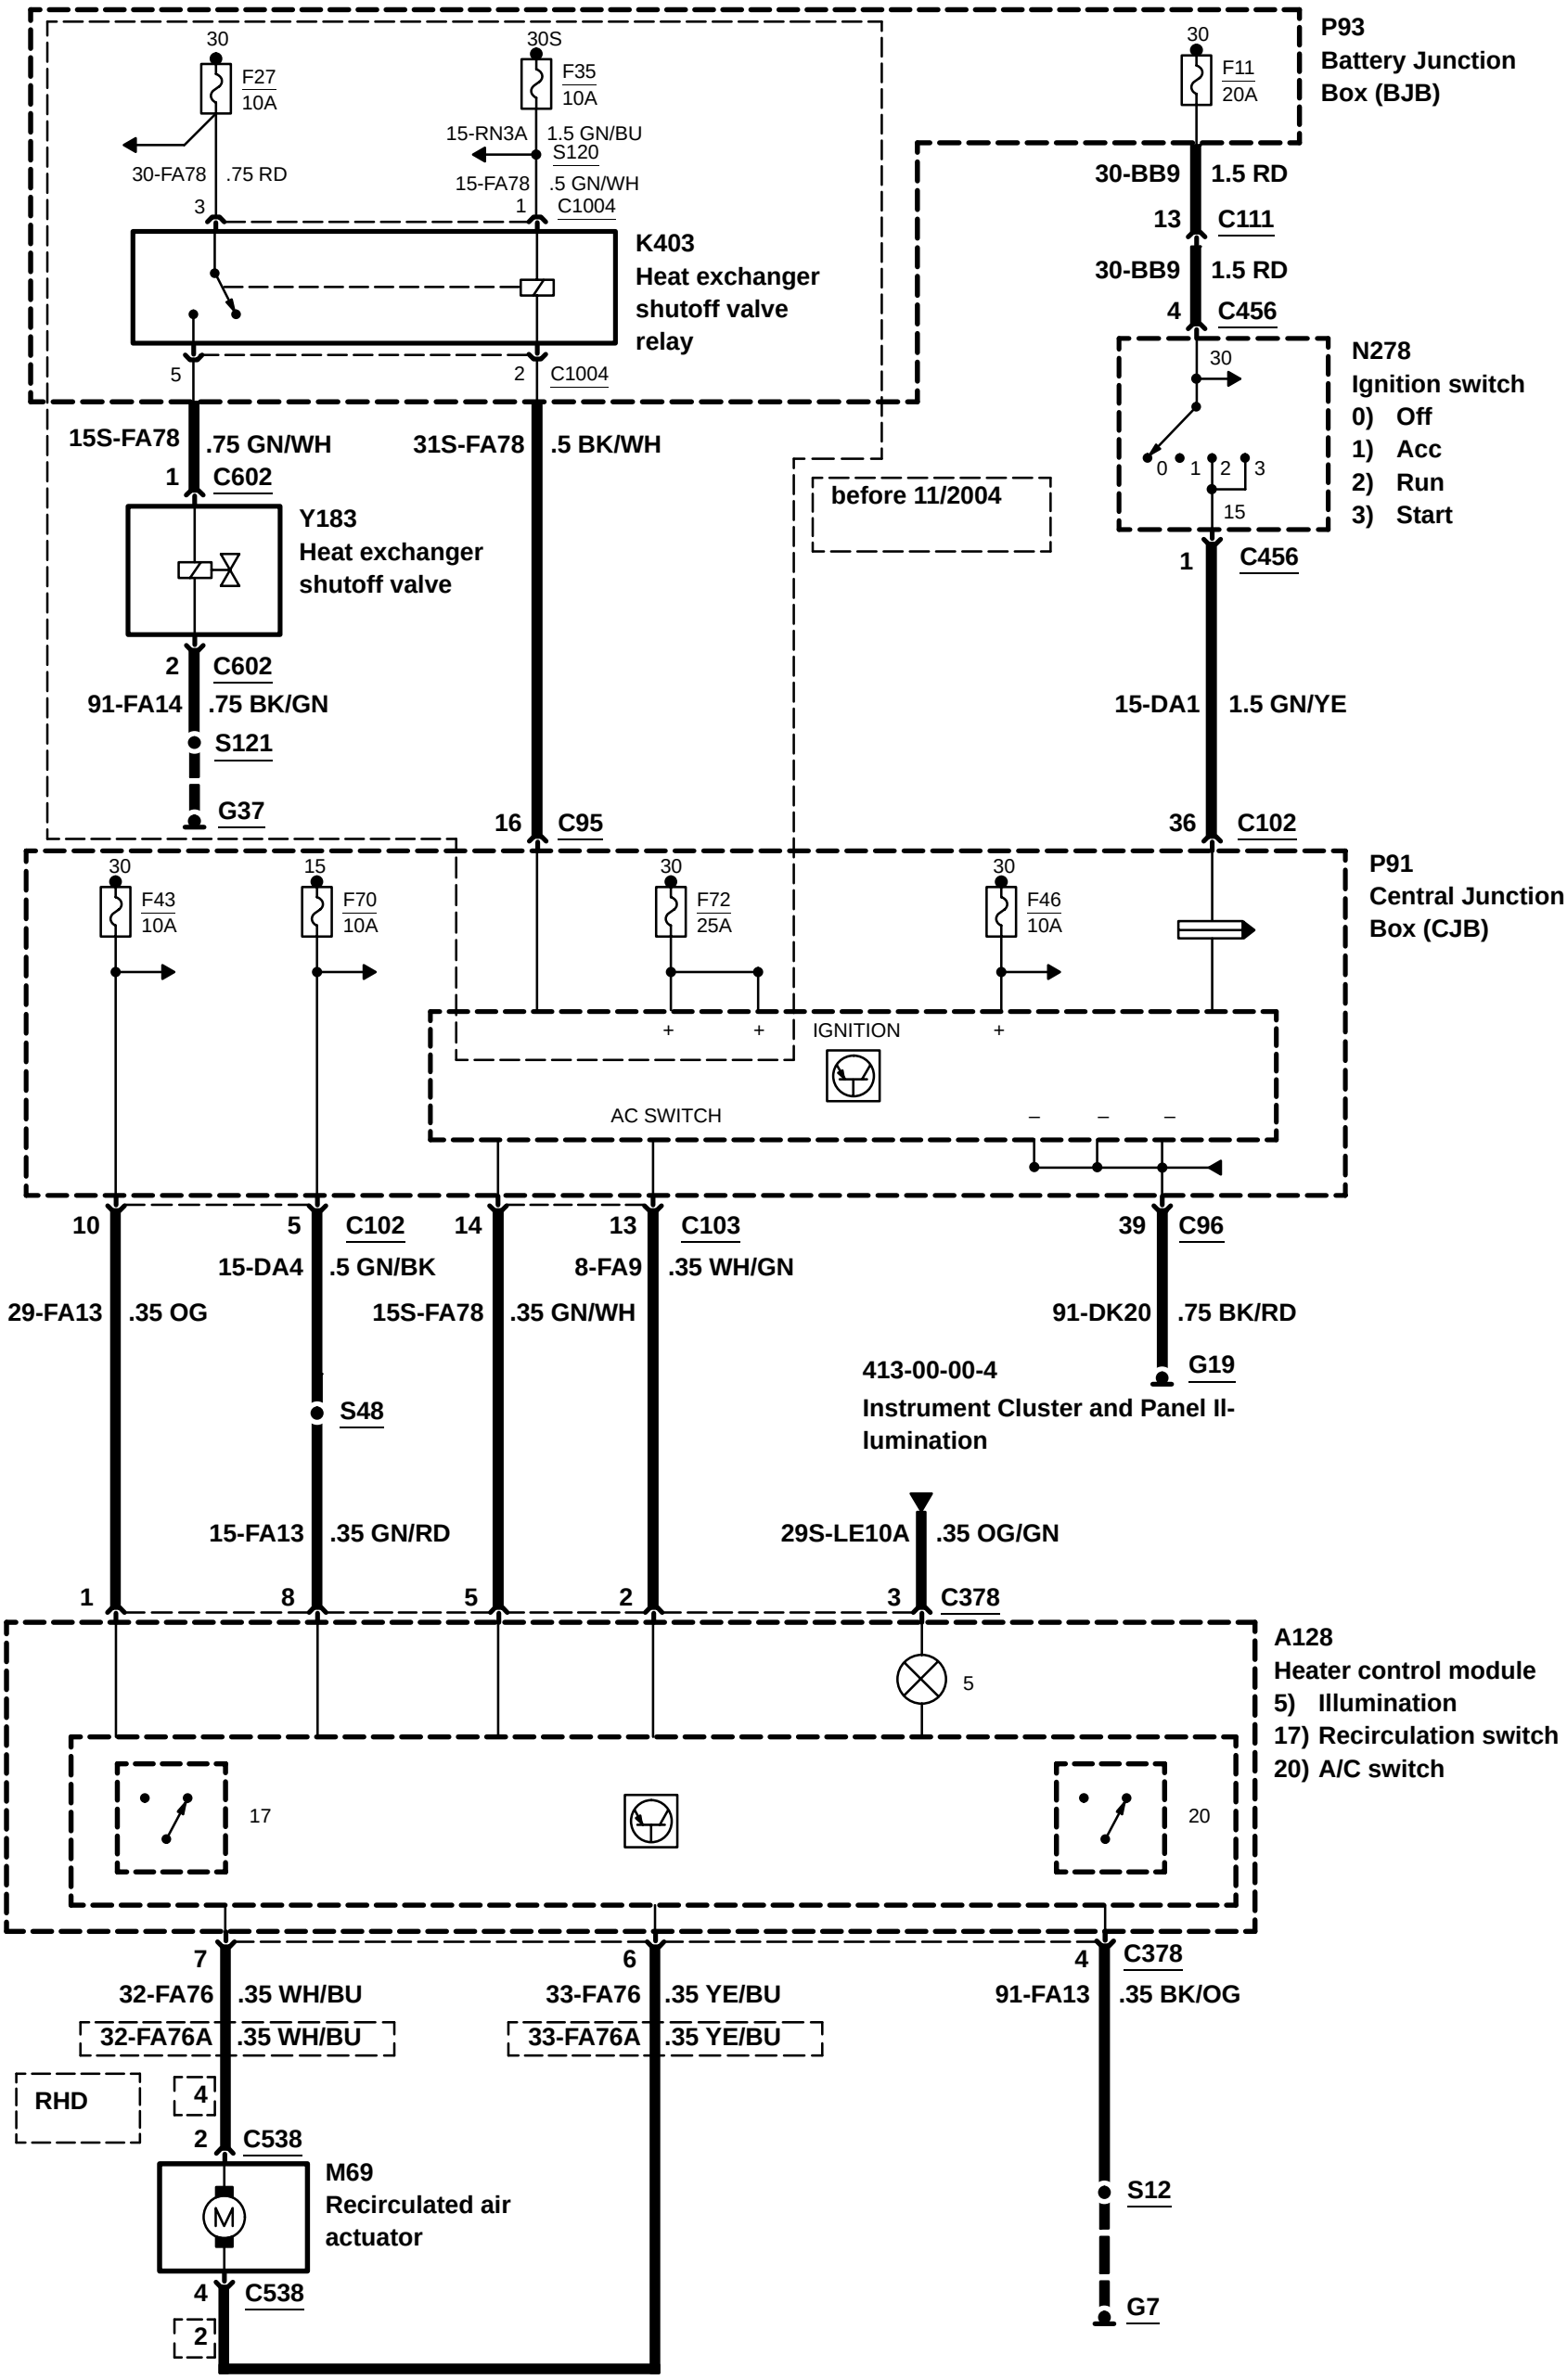


Air Conditioning – without EATC, 1.6L (Z6)

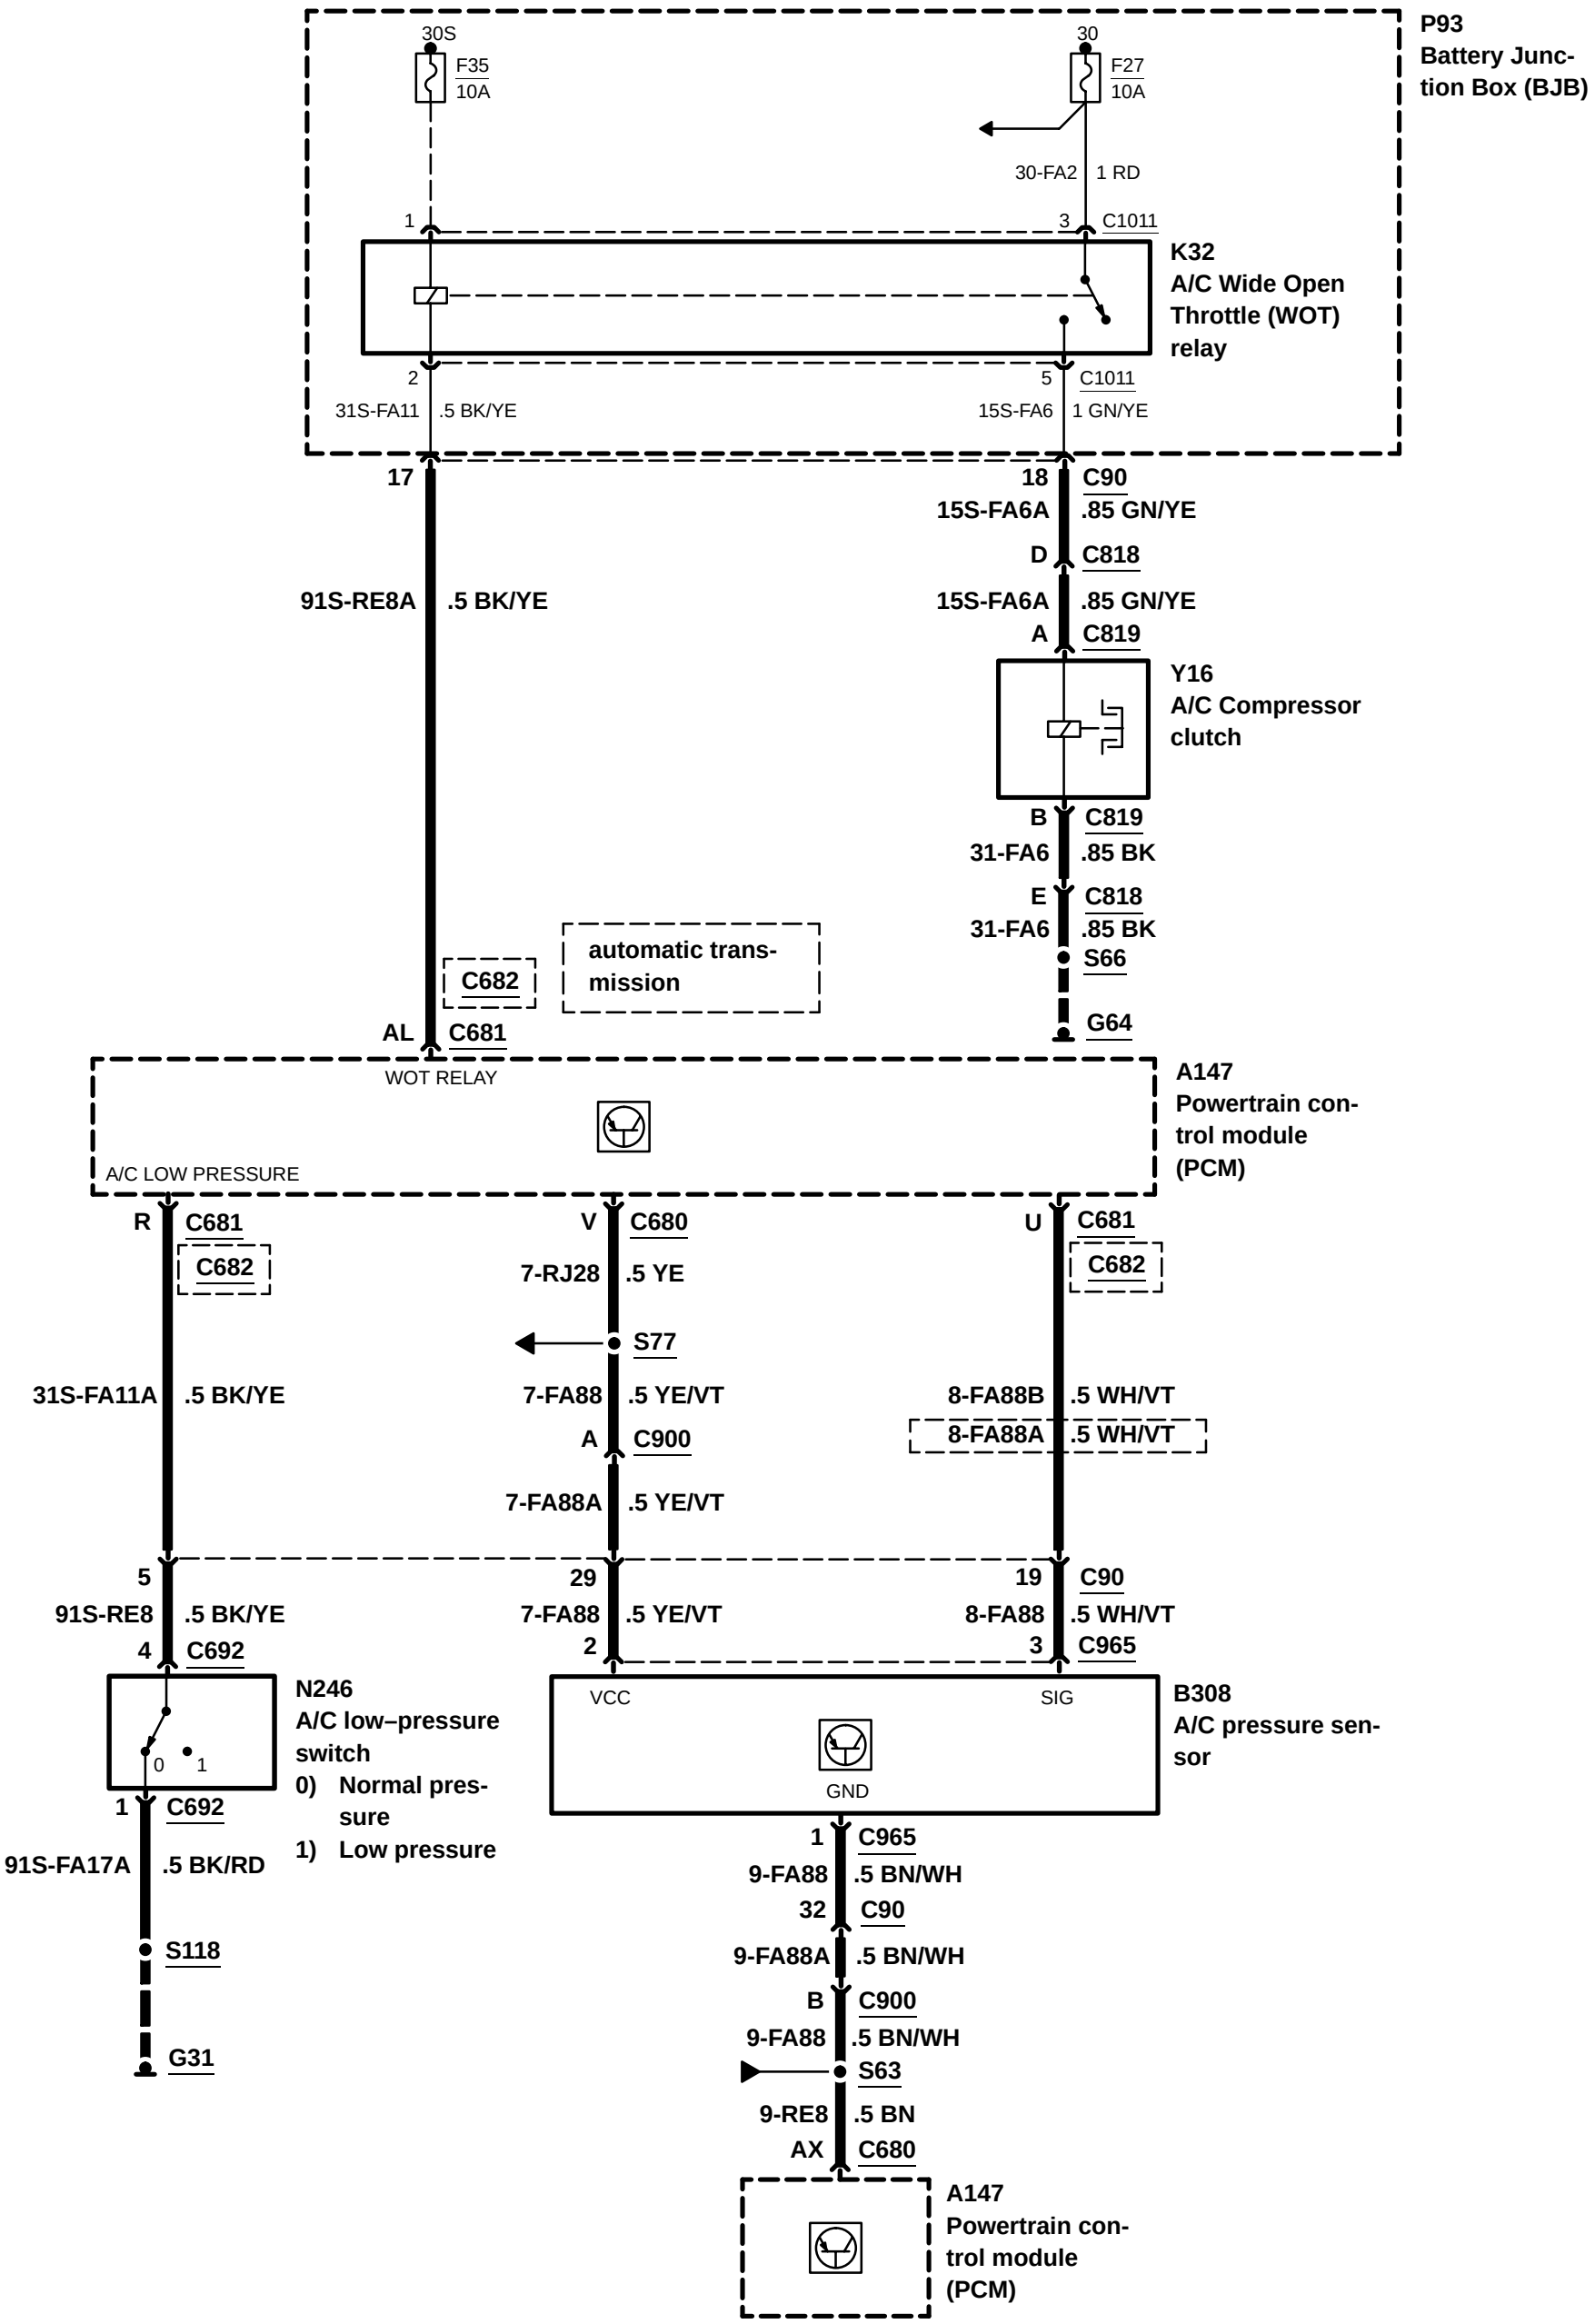


Air Conditioning – without EATC, 1.8/2.0L Duratec–HE (MI4)

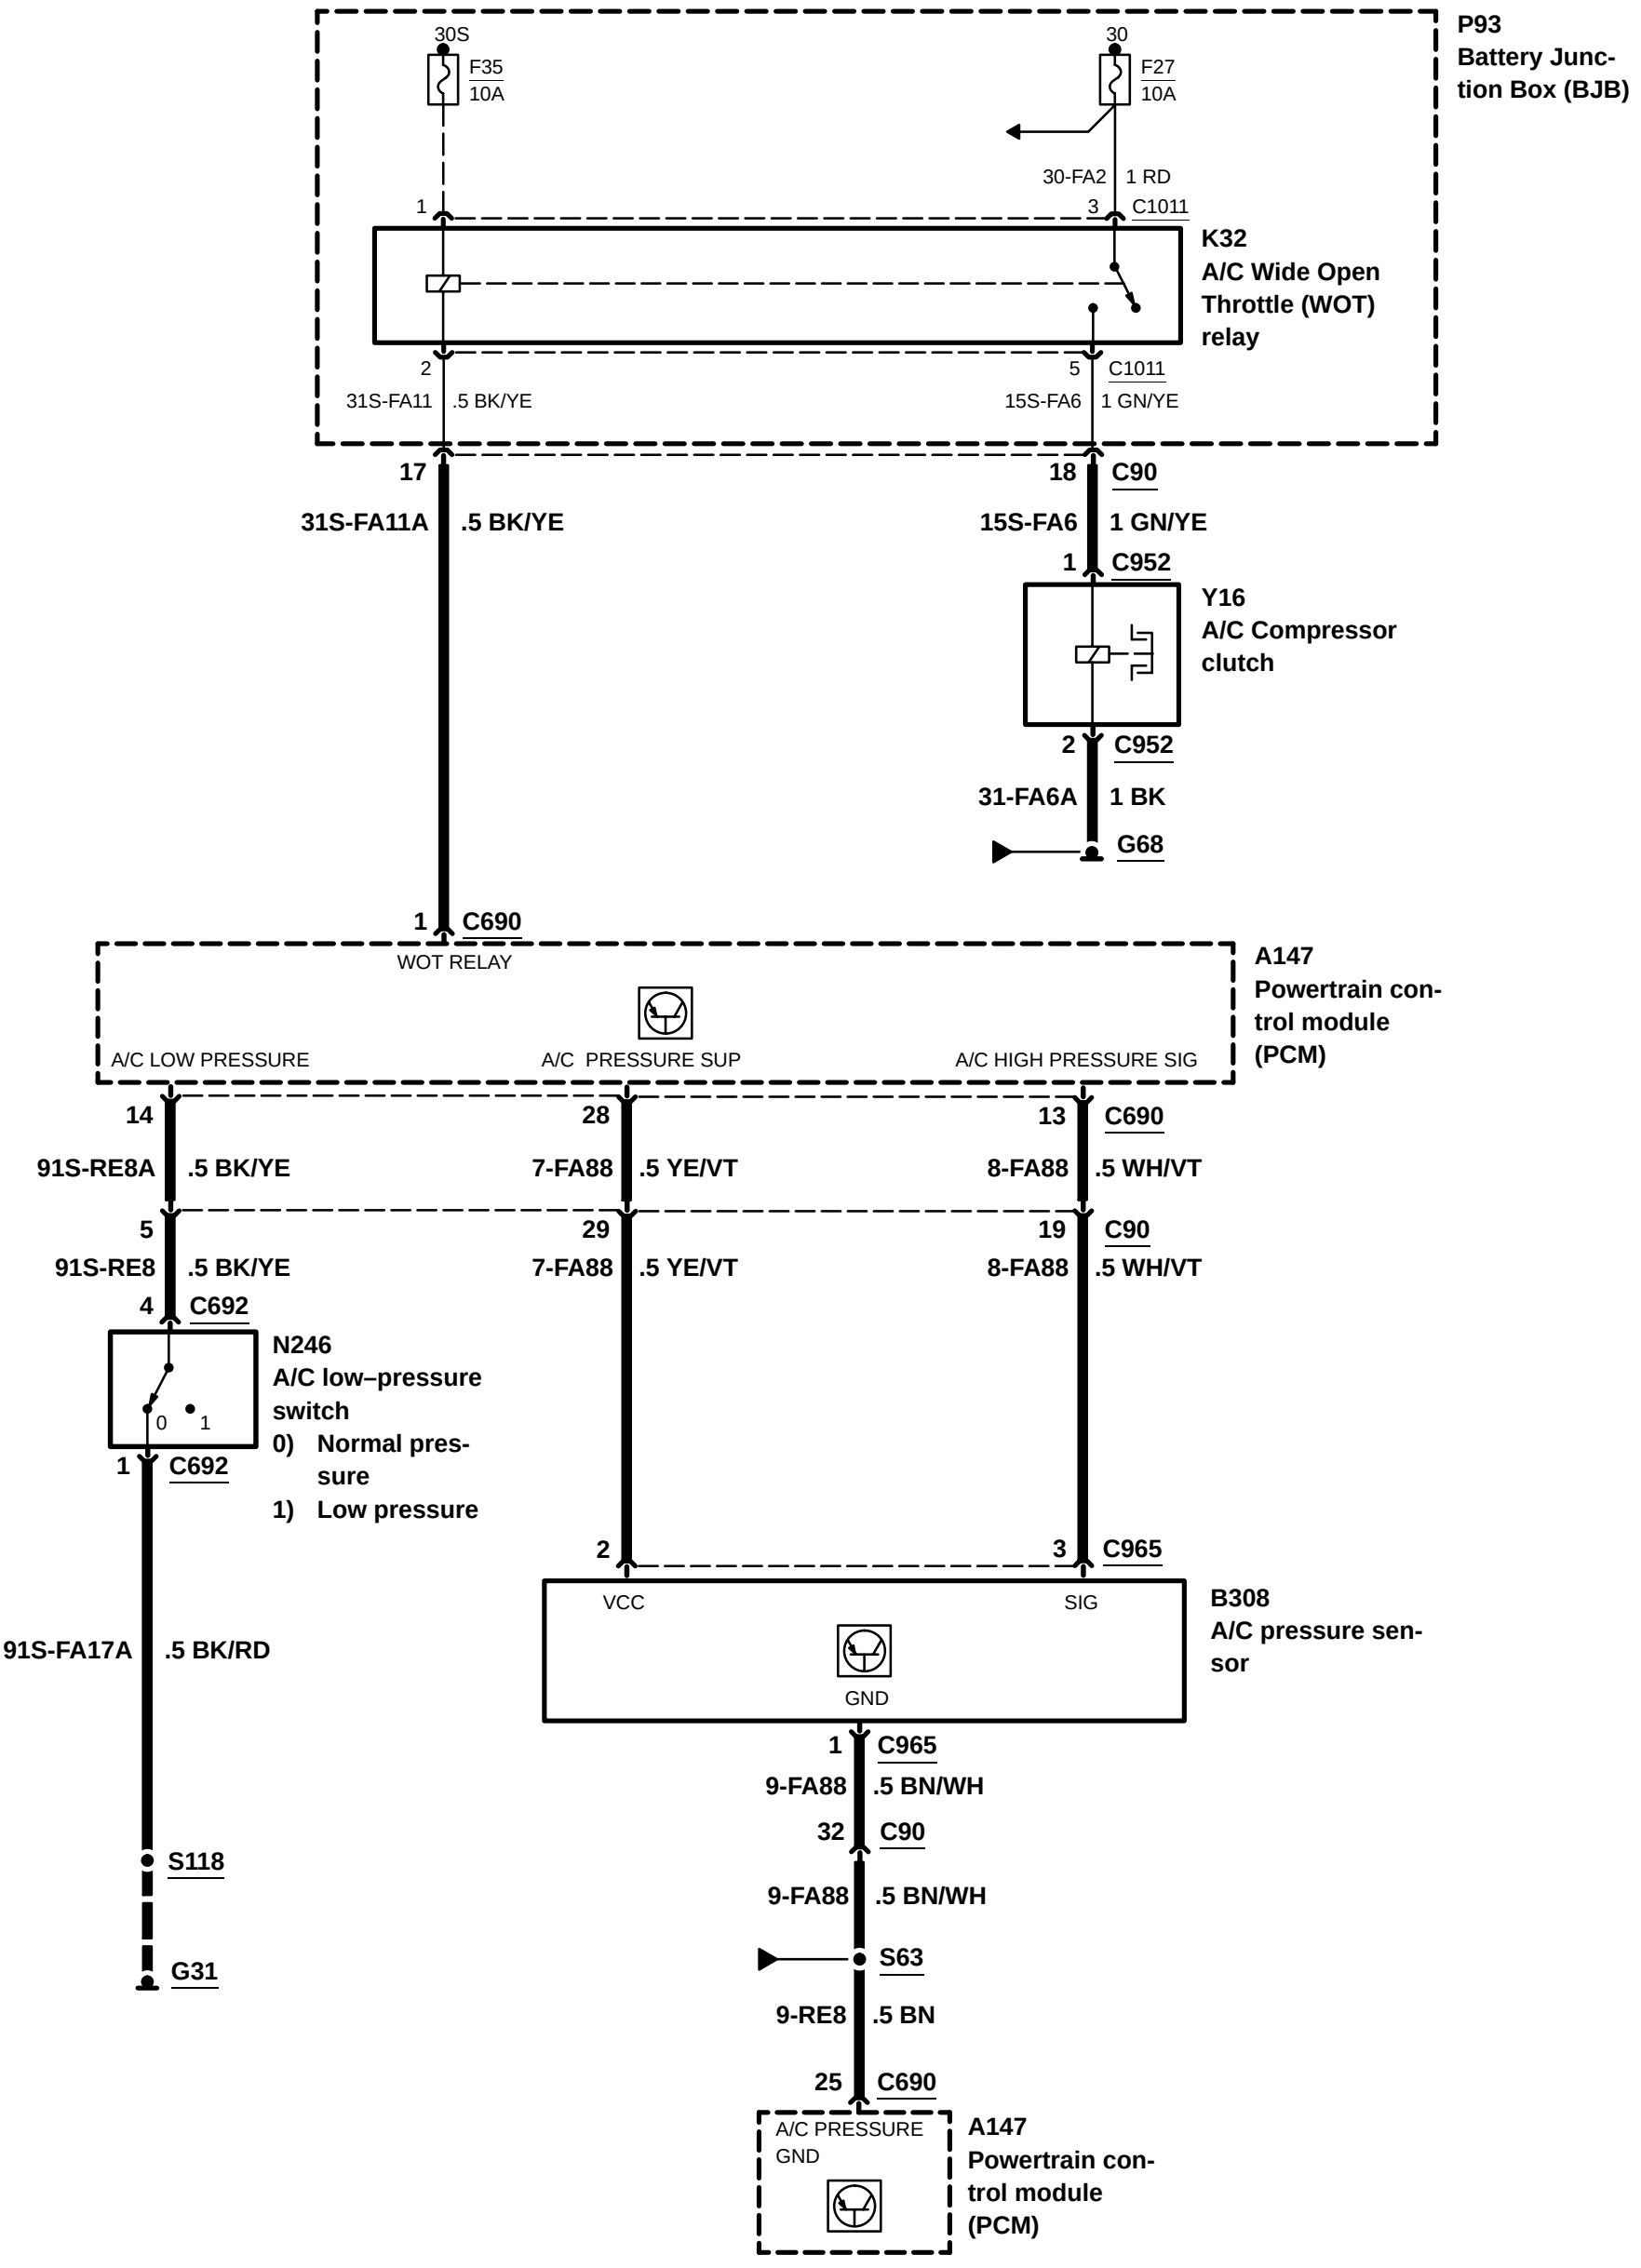


Air Conditioning – without EATC, 2.0L Duratorq–TDCi (DW) Diesel

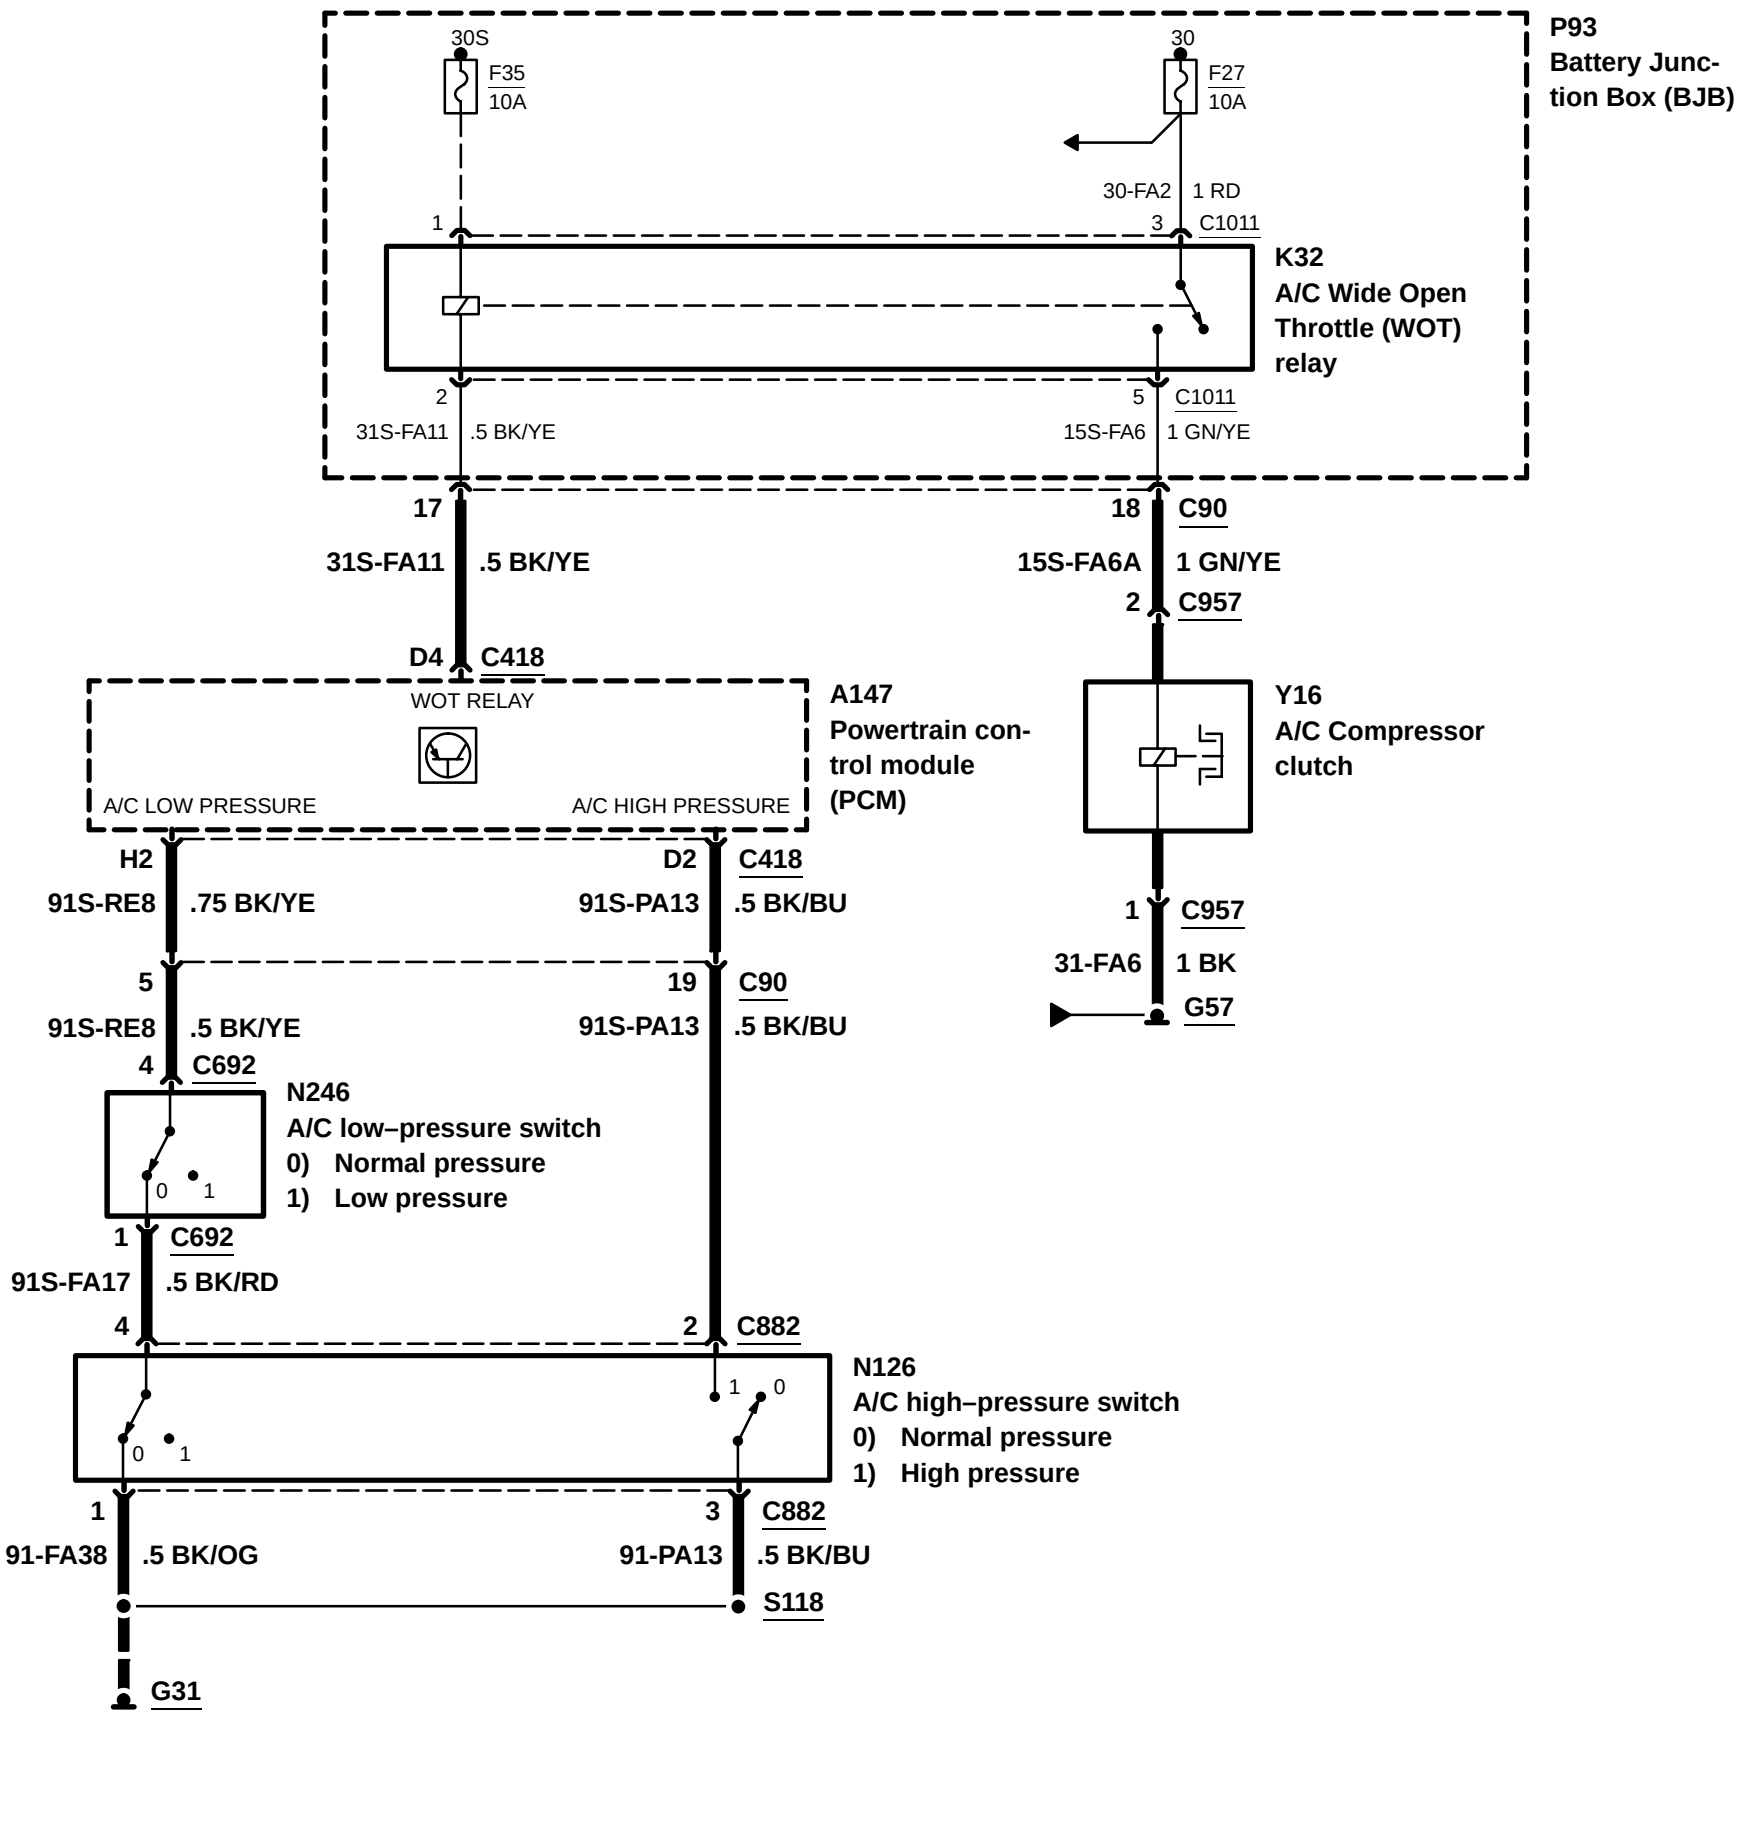

Air Conditioning – with EATC

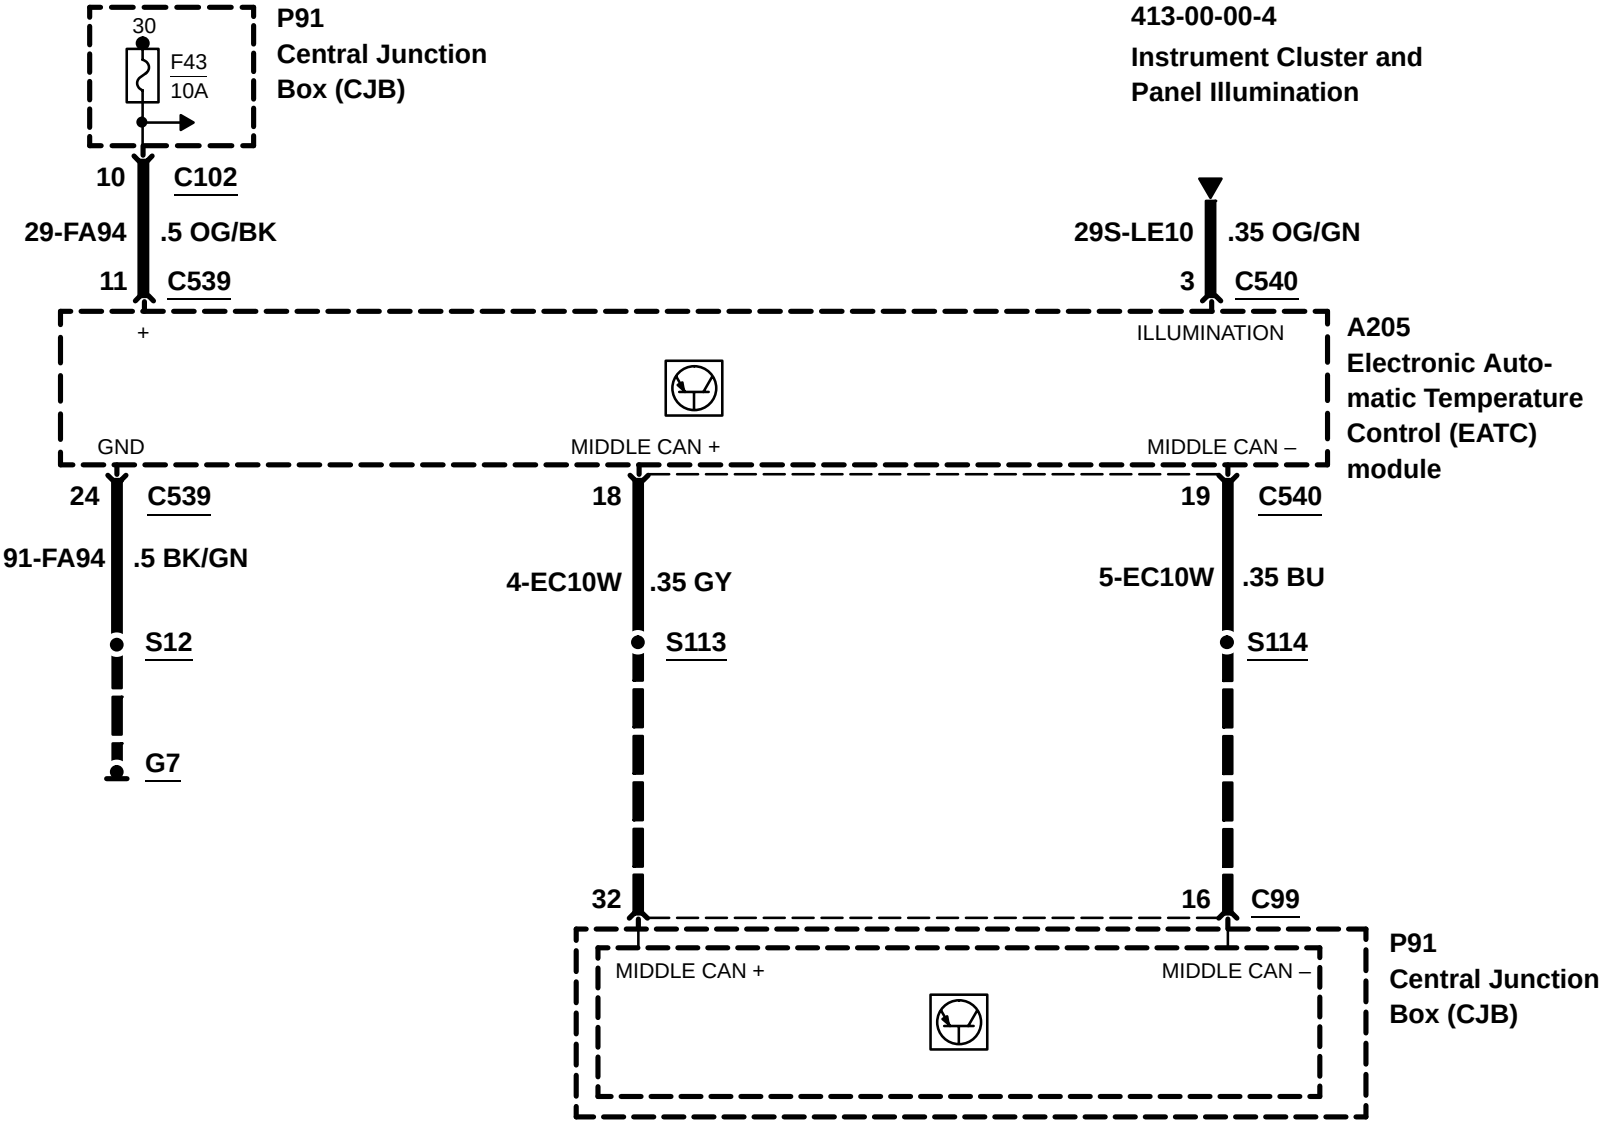

Air Conditioning – with EATC

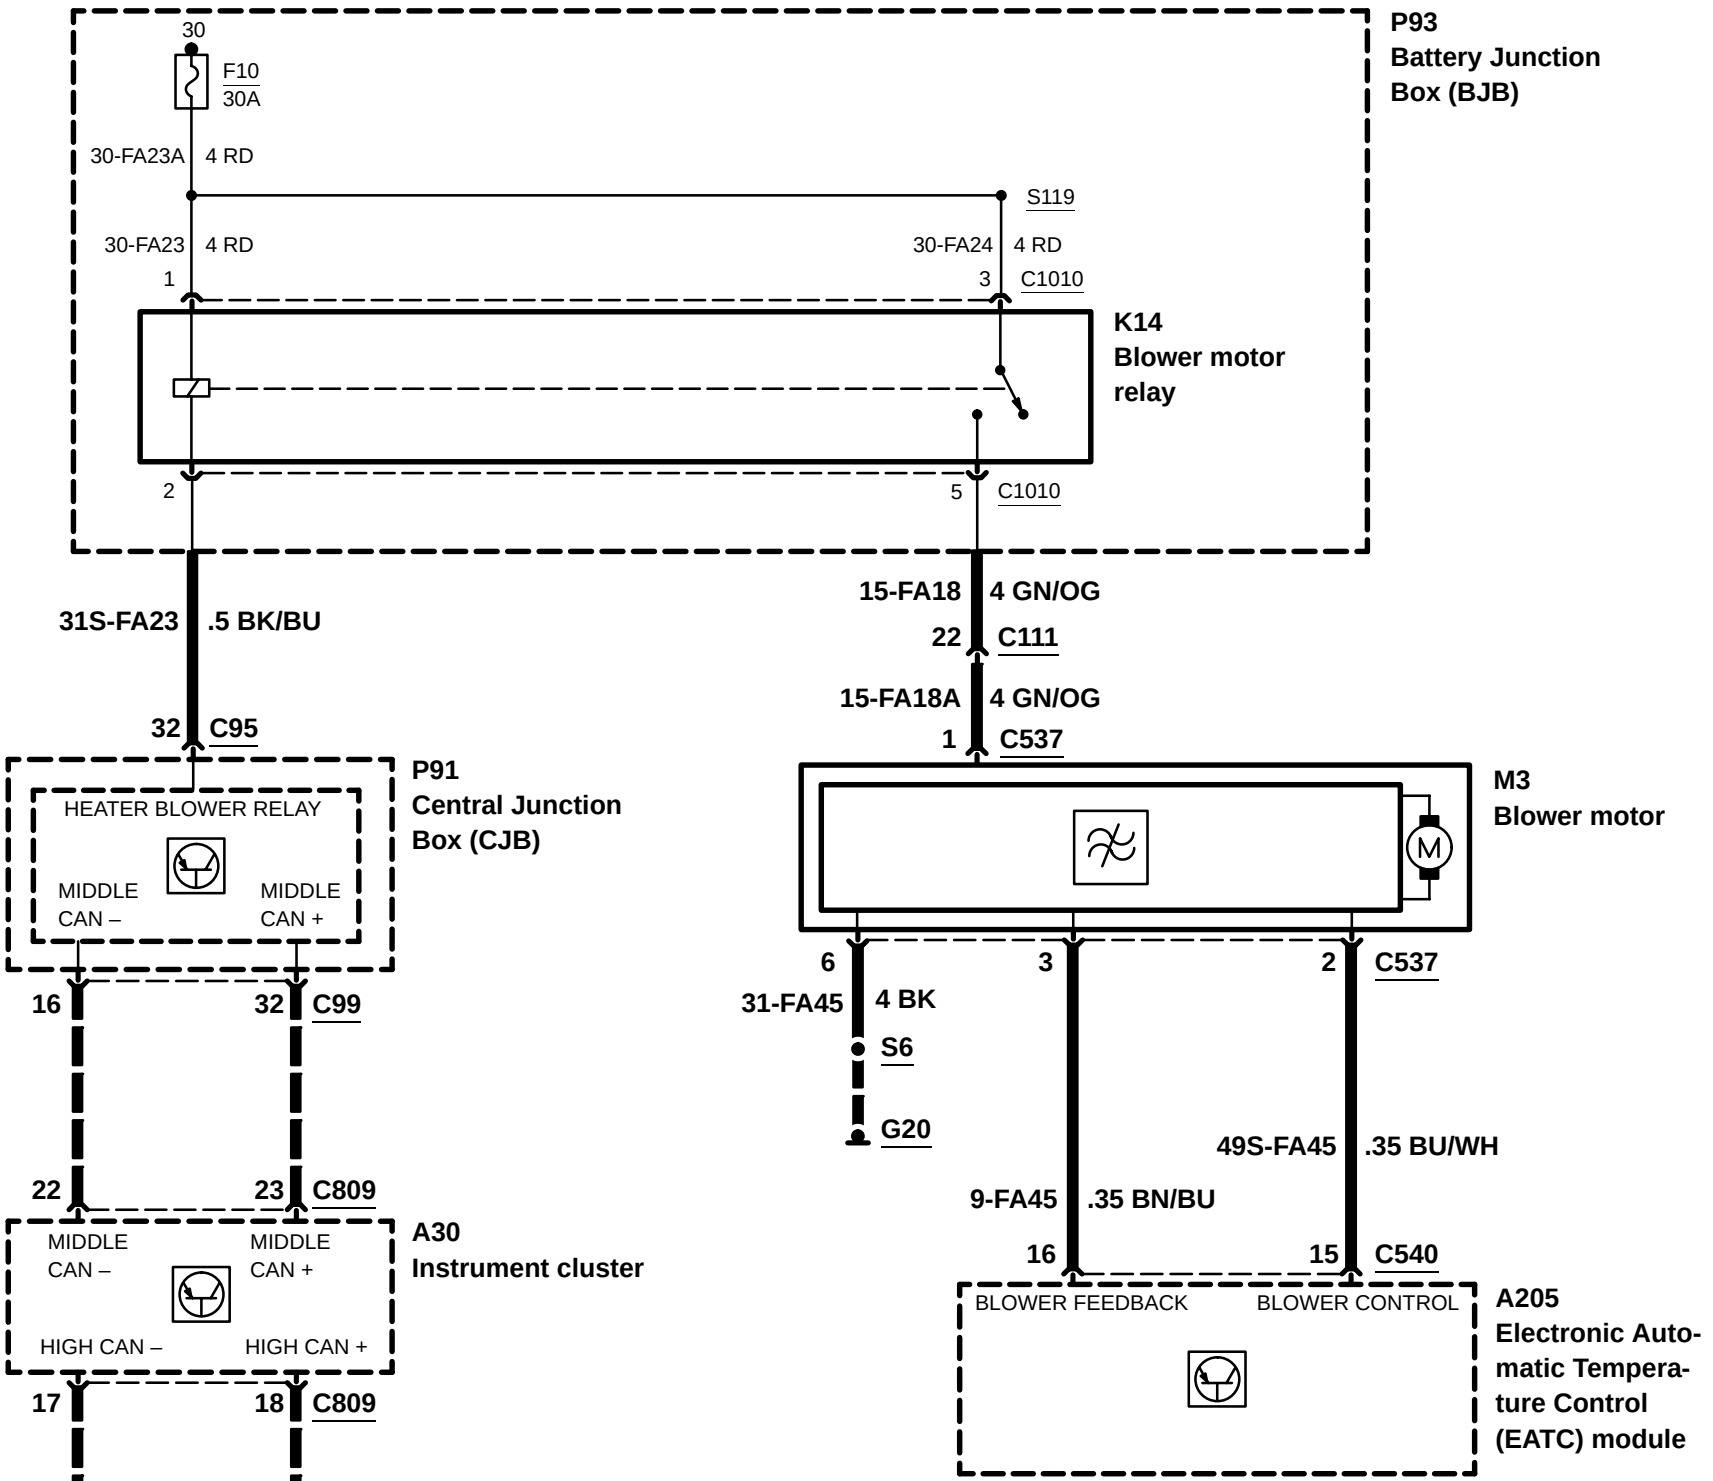


418–00–00–5
2.0L Duratorq–TDCi (DW) Diesel


418–00–00–6
1.8/2.0L Duratec–HE (MI4)

418–00–00–7
1.6L (Z6)


Air Conditioning – with EATC

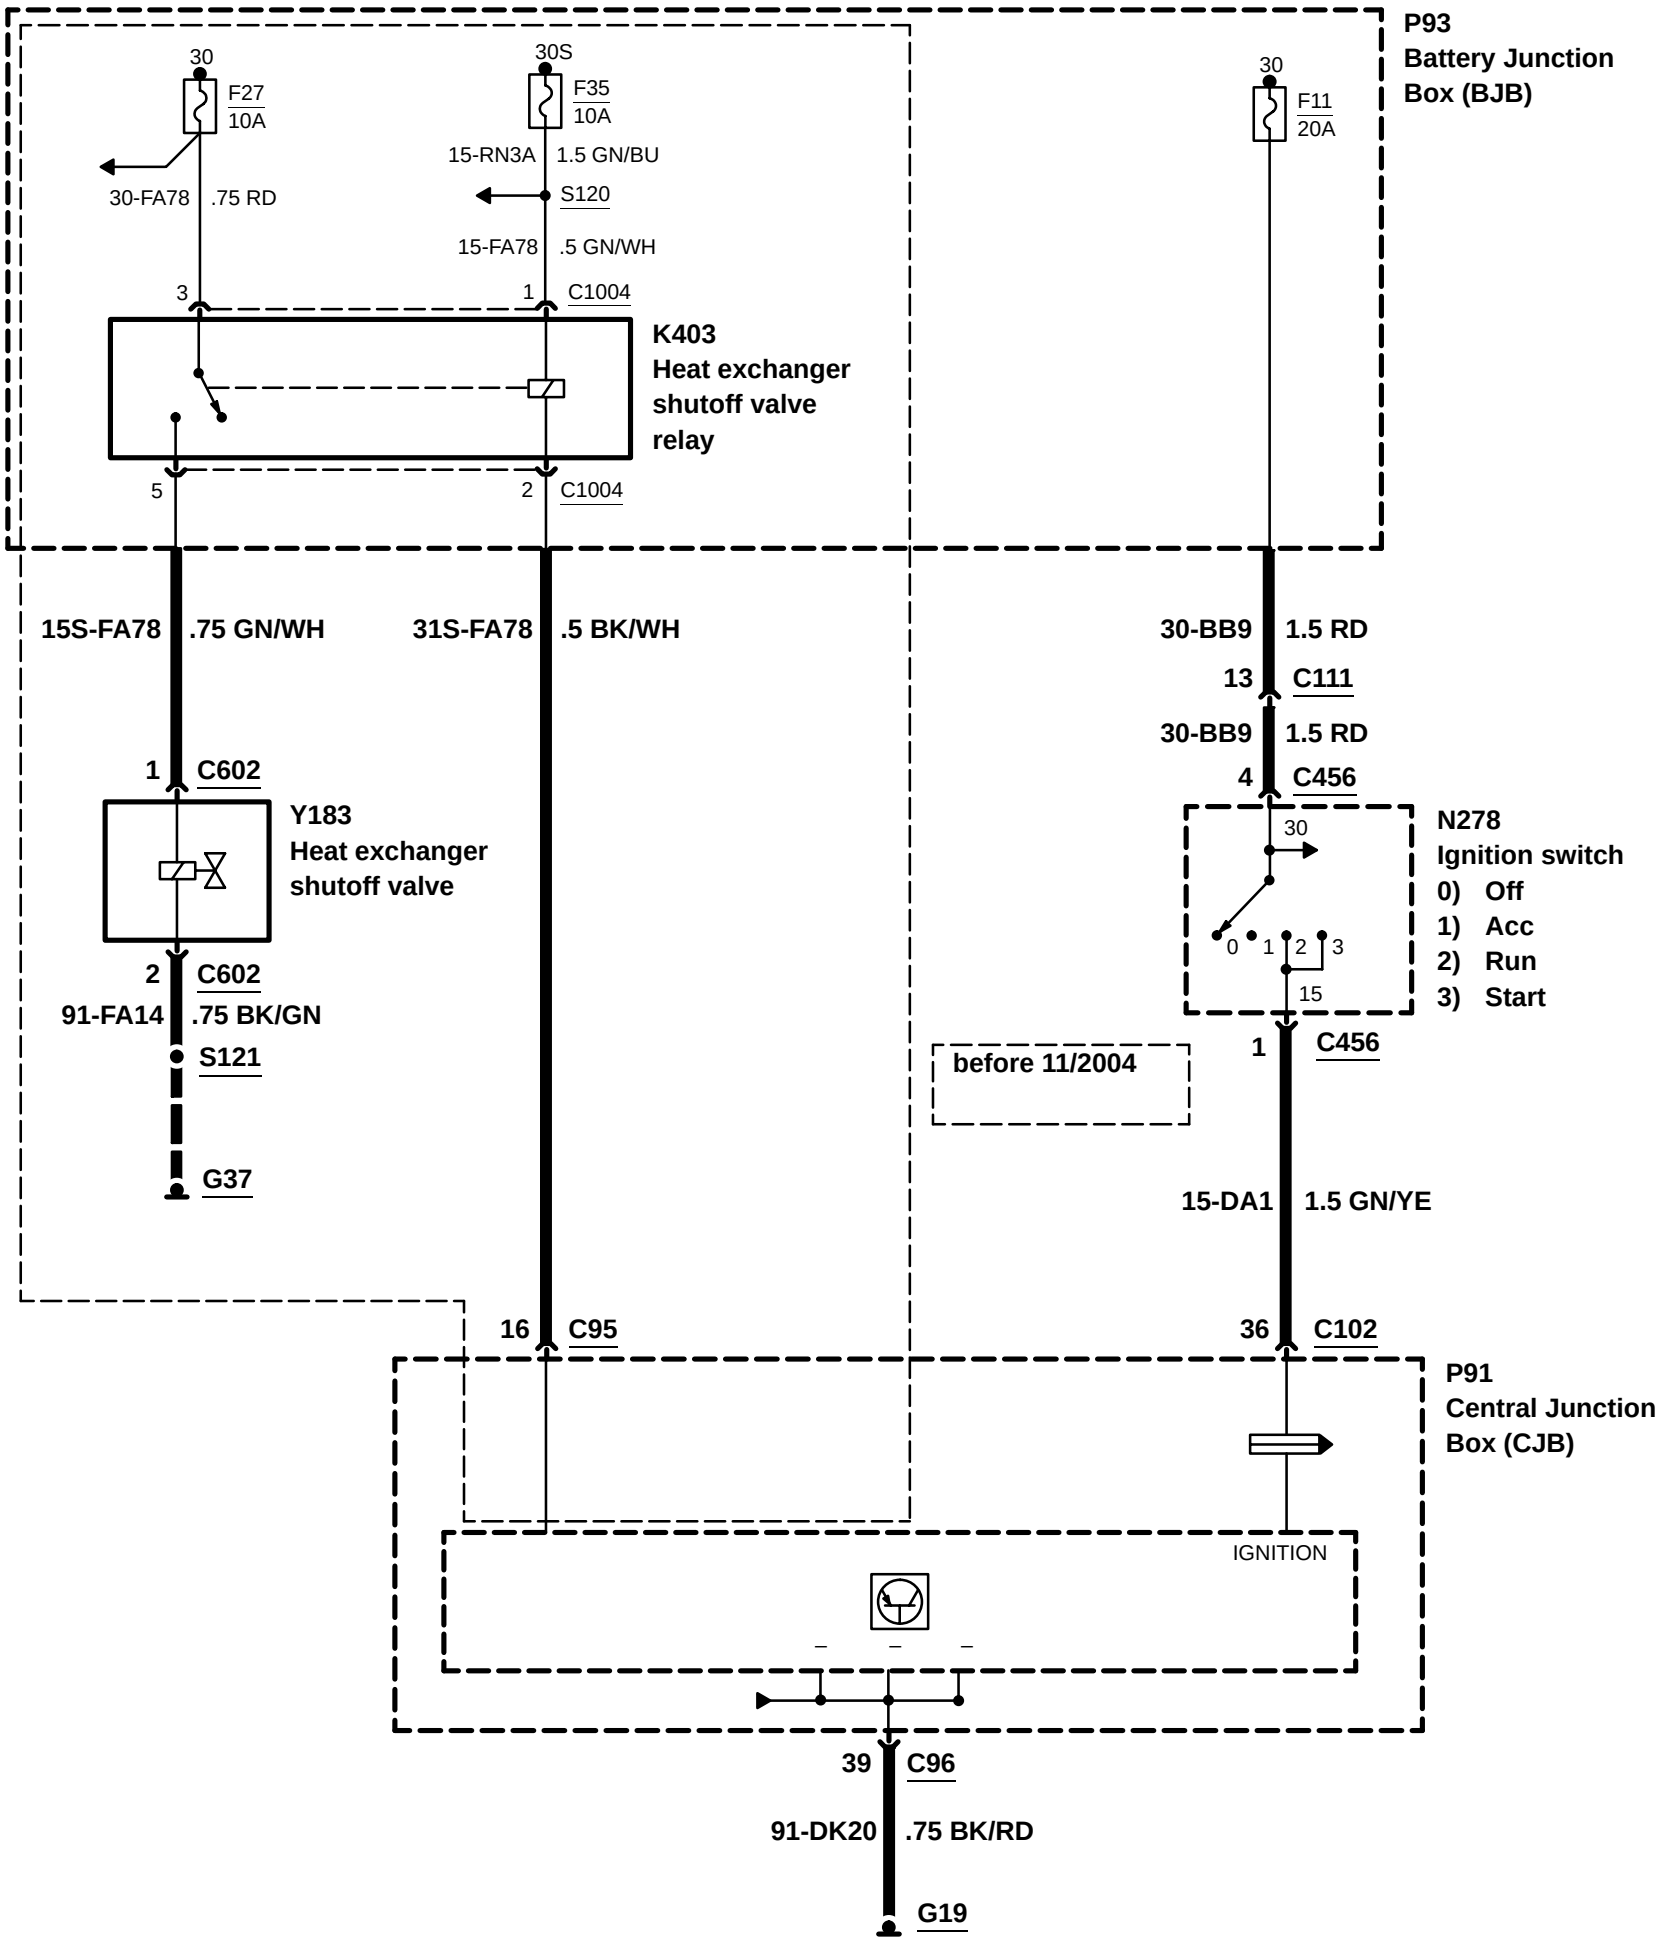


Air Conditioning – with EATC

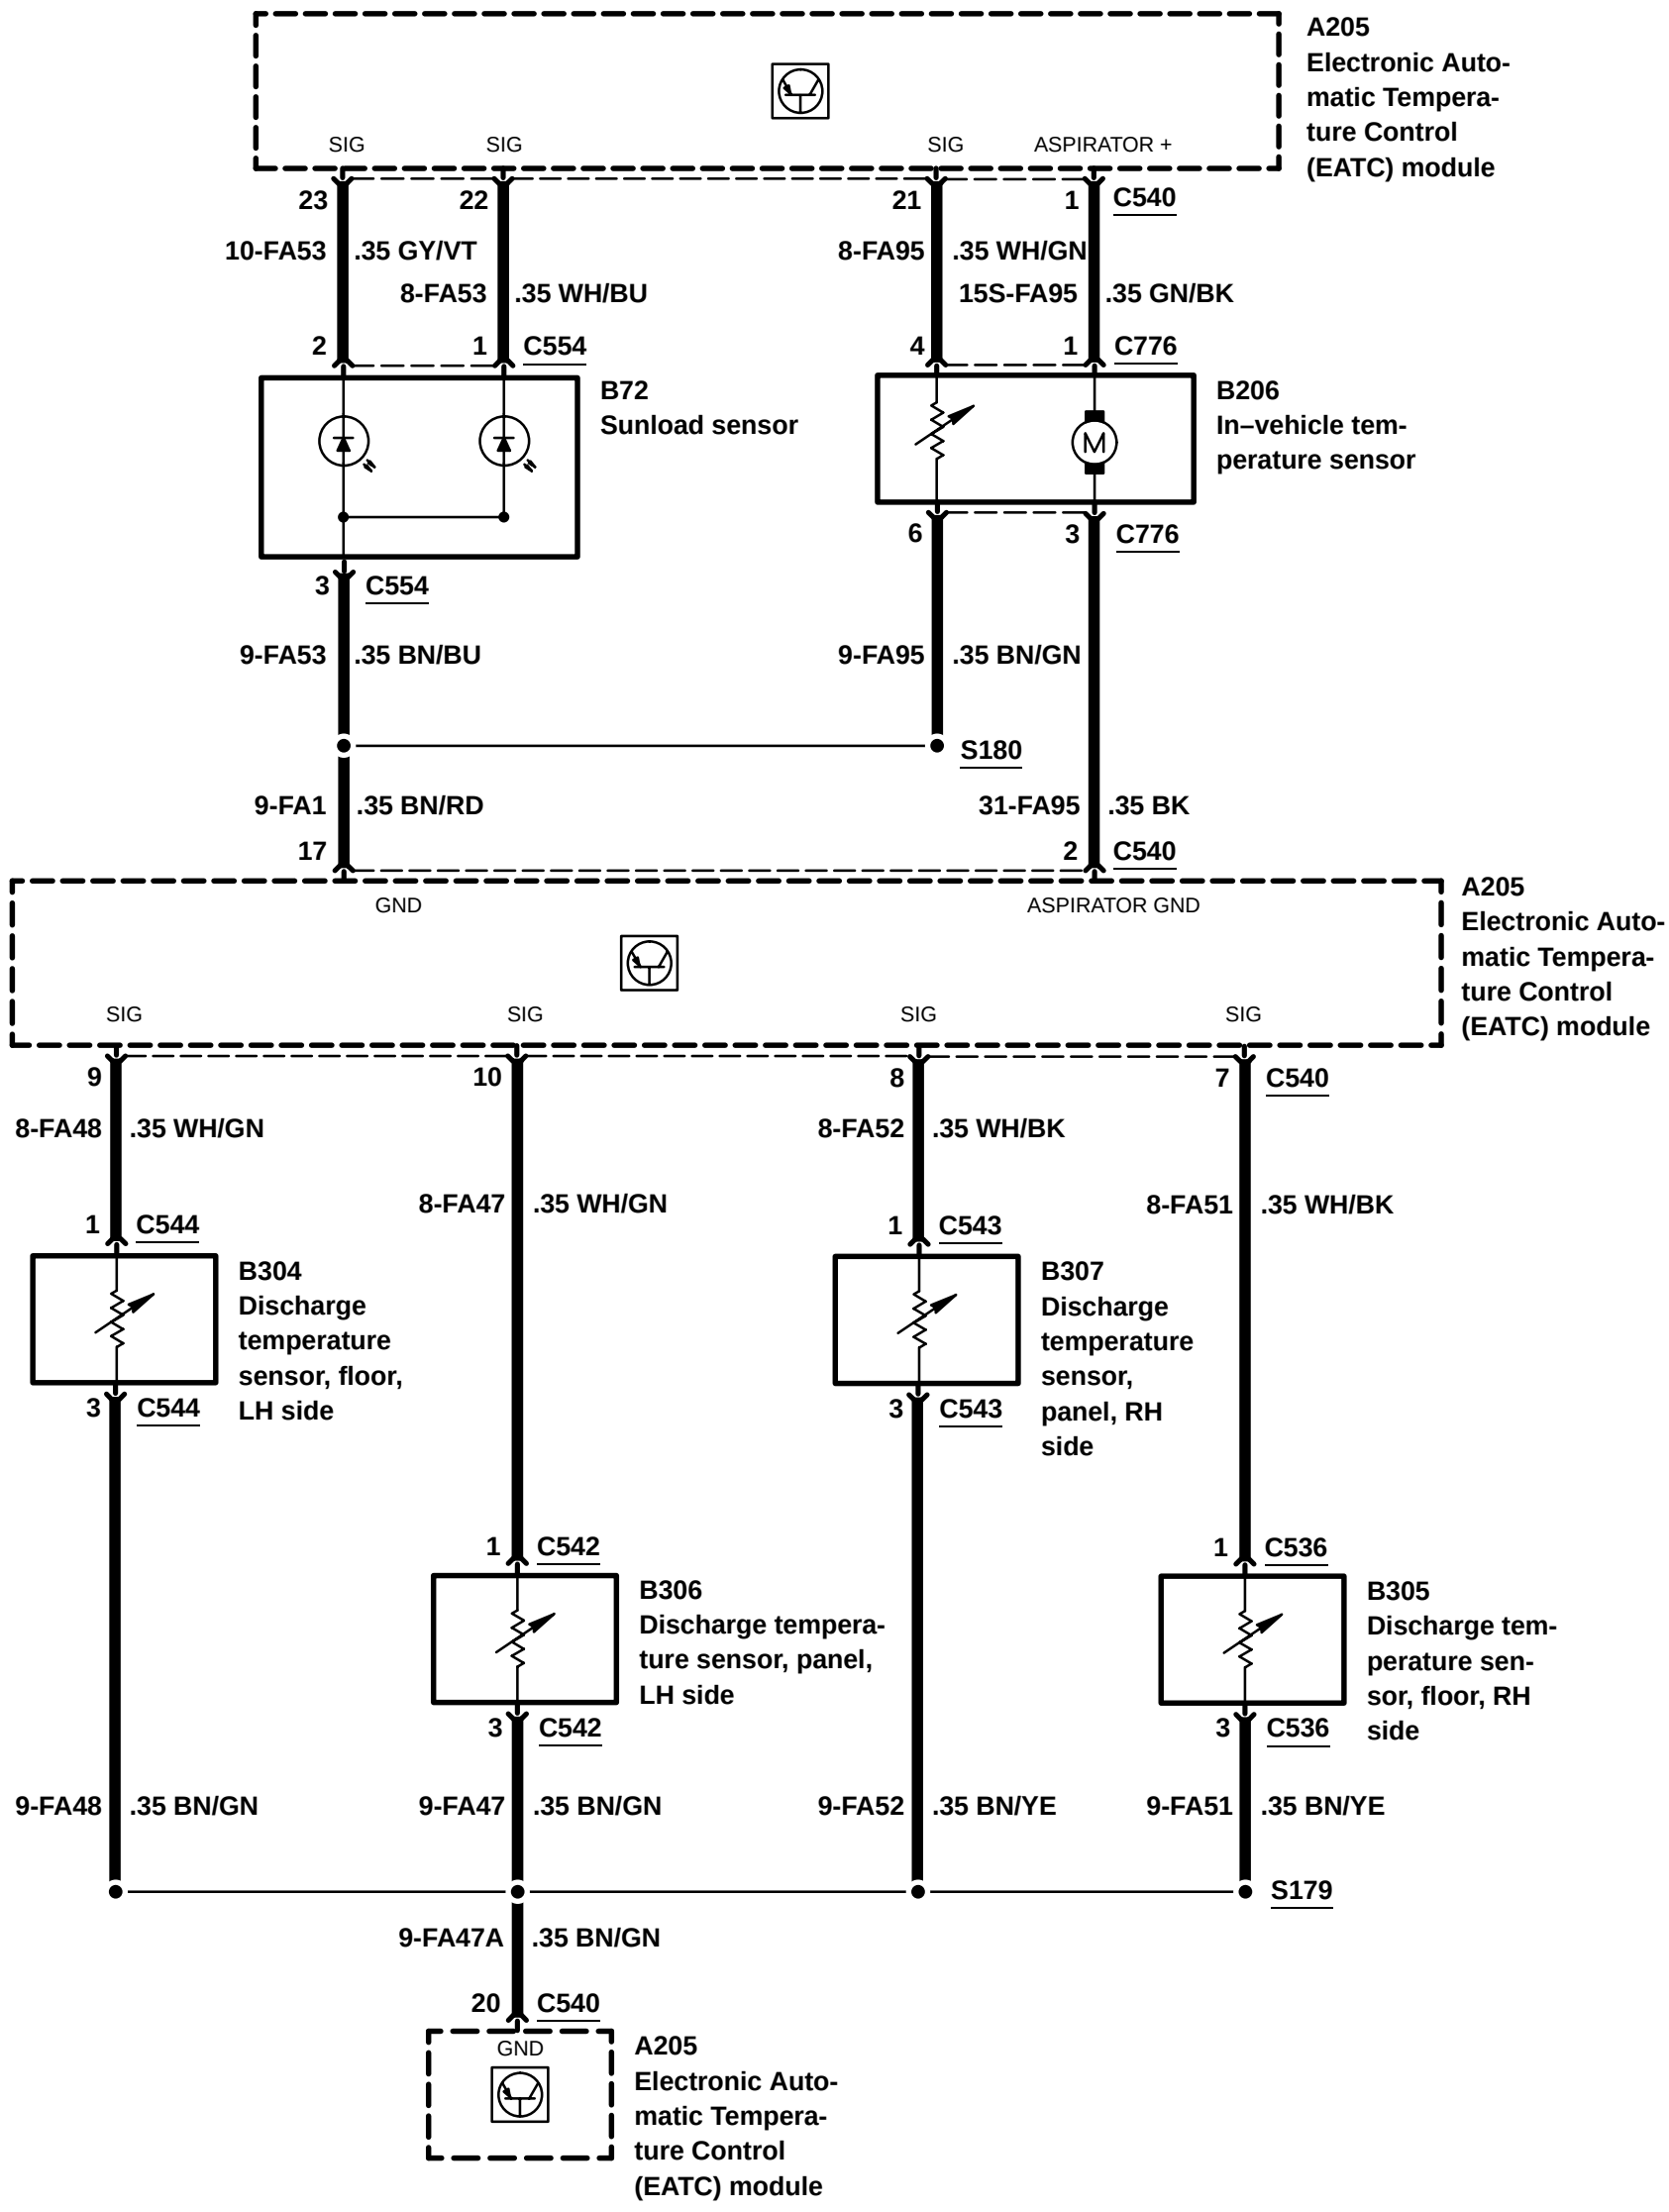


Air Conditioning – with EATC

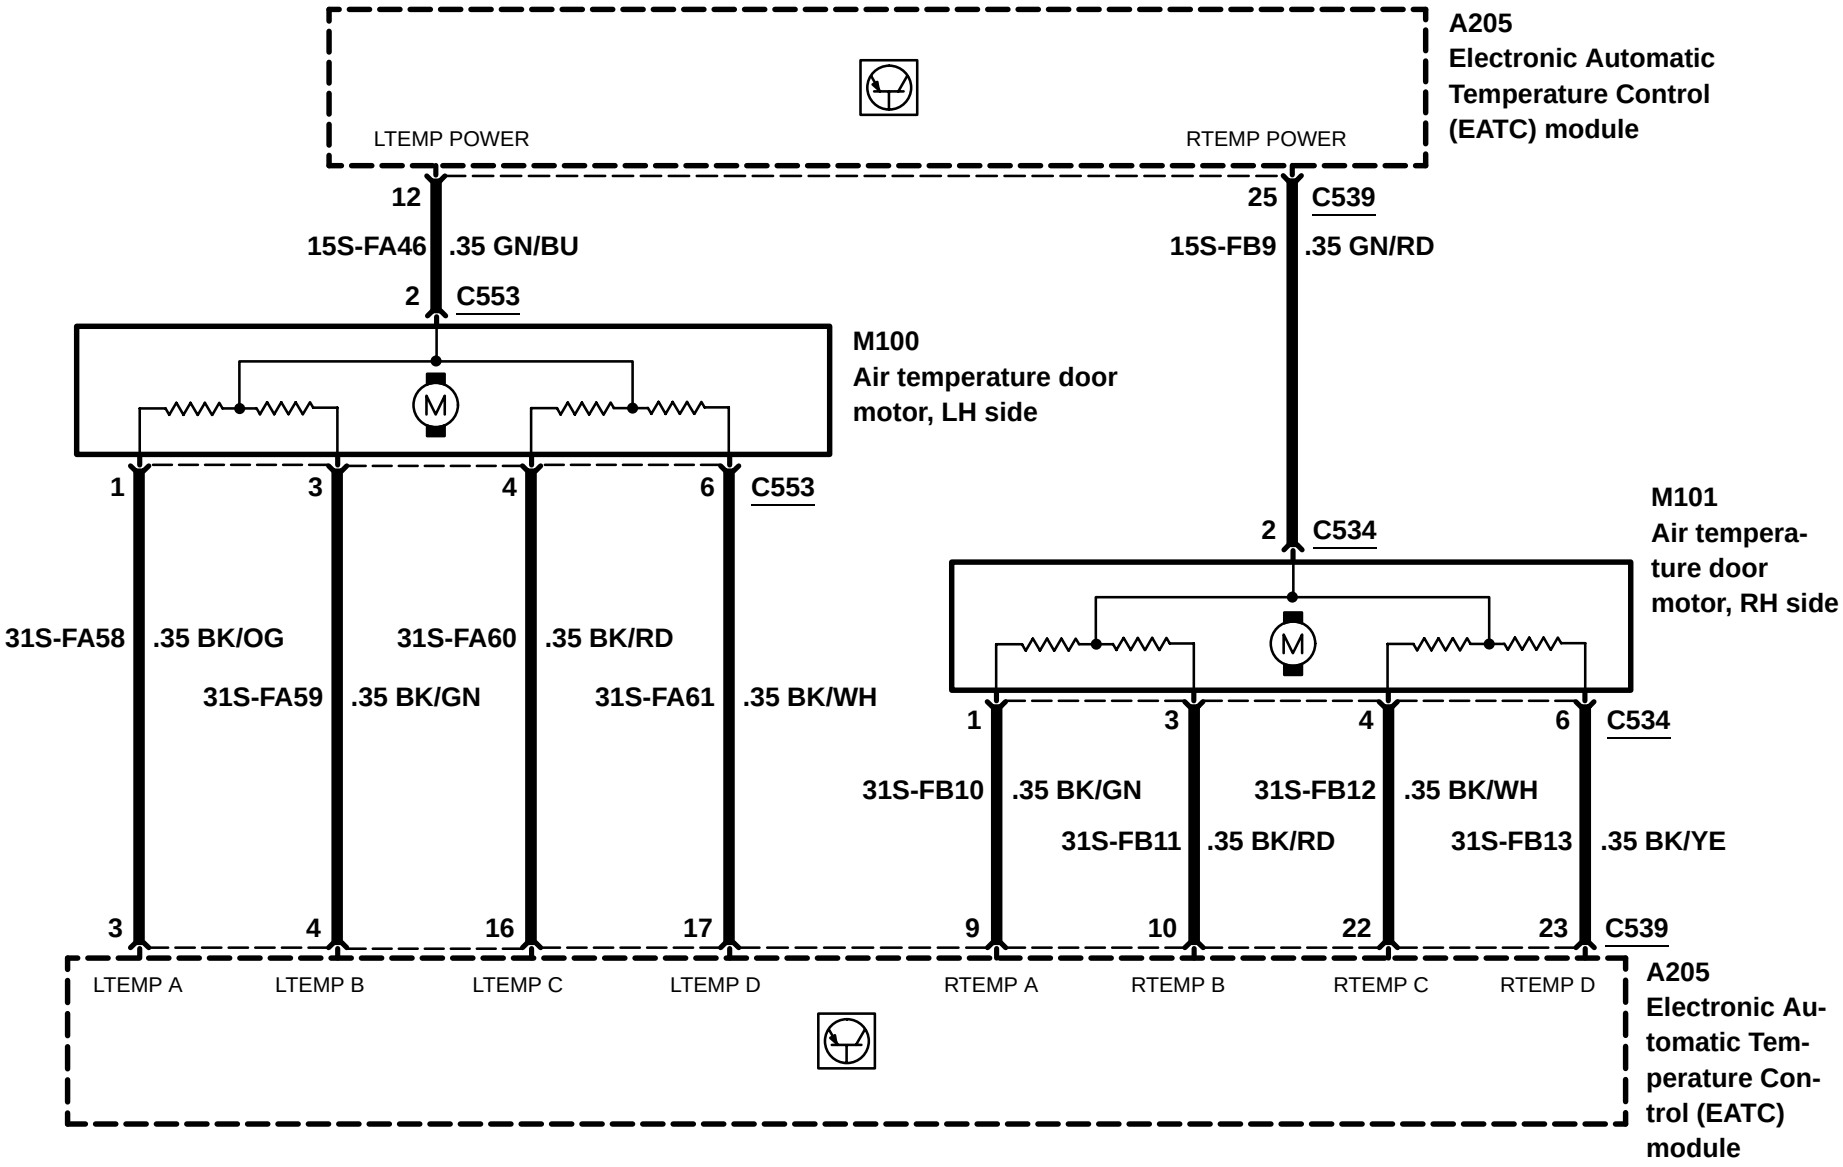


Air Conditioning – with EATC

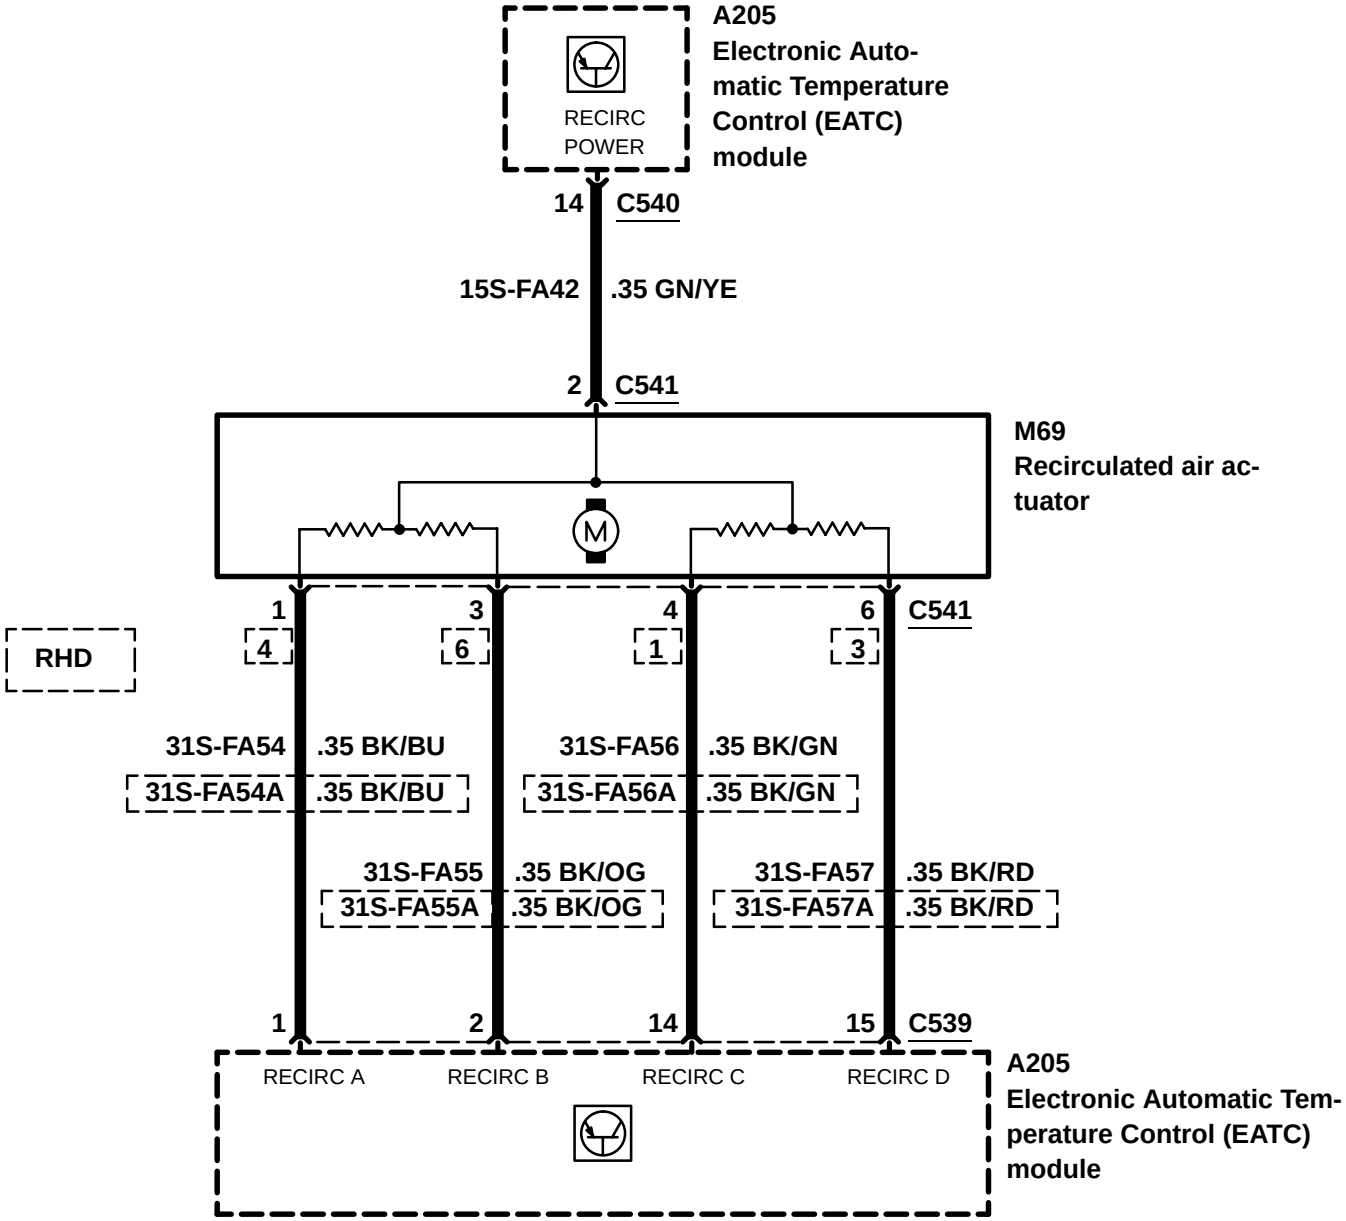


Air Conditioning – with EATC

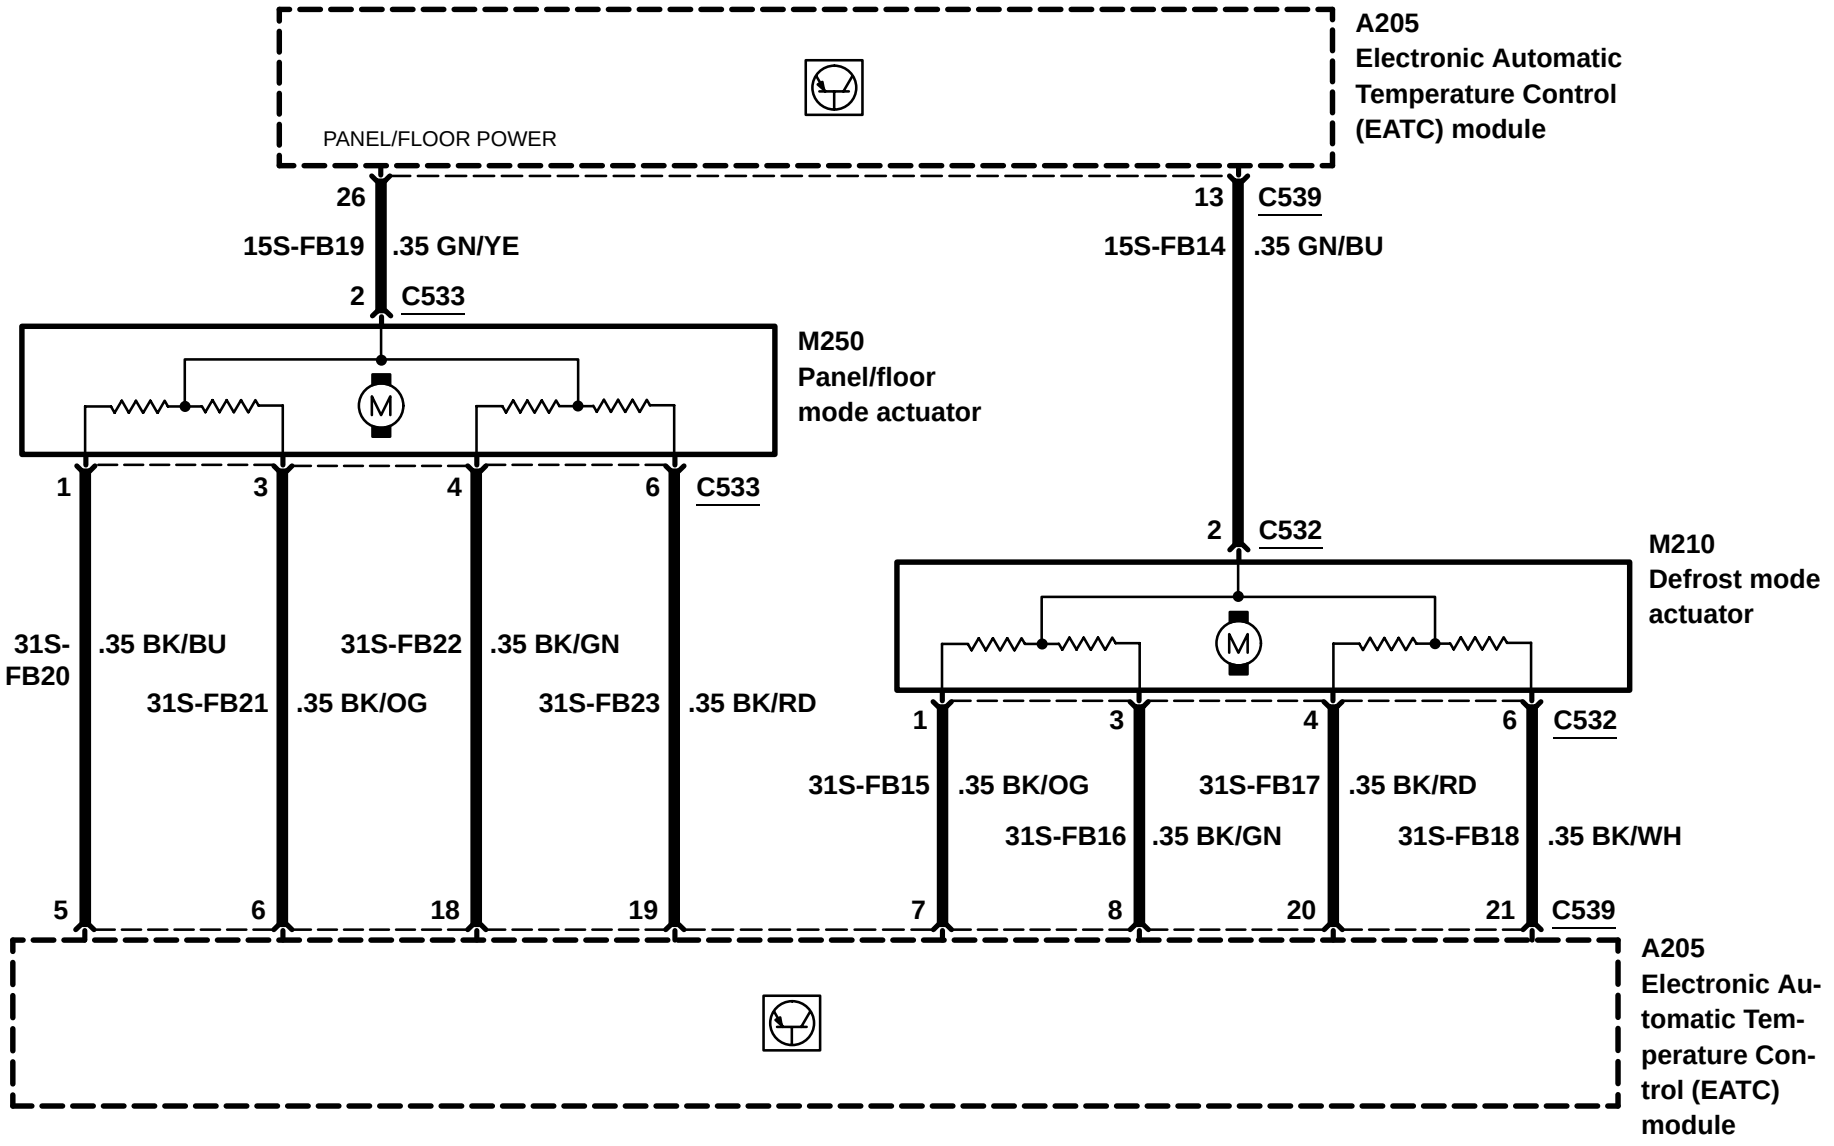


Air Conditioning – with EATC, 1.6L (Z6)

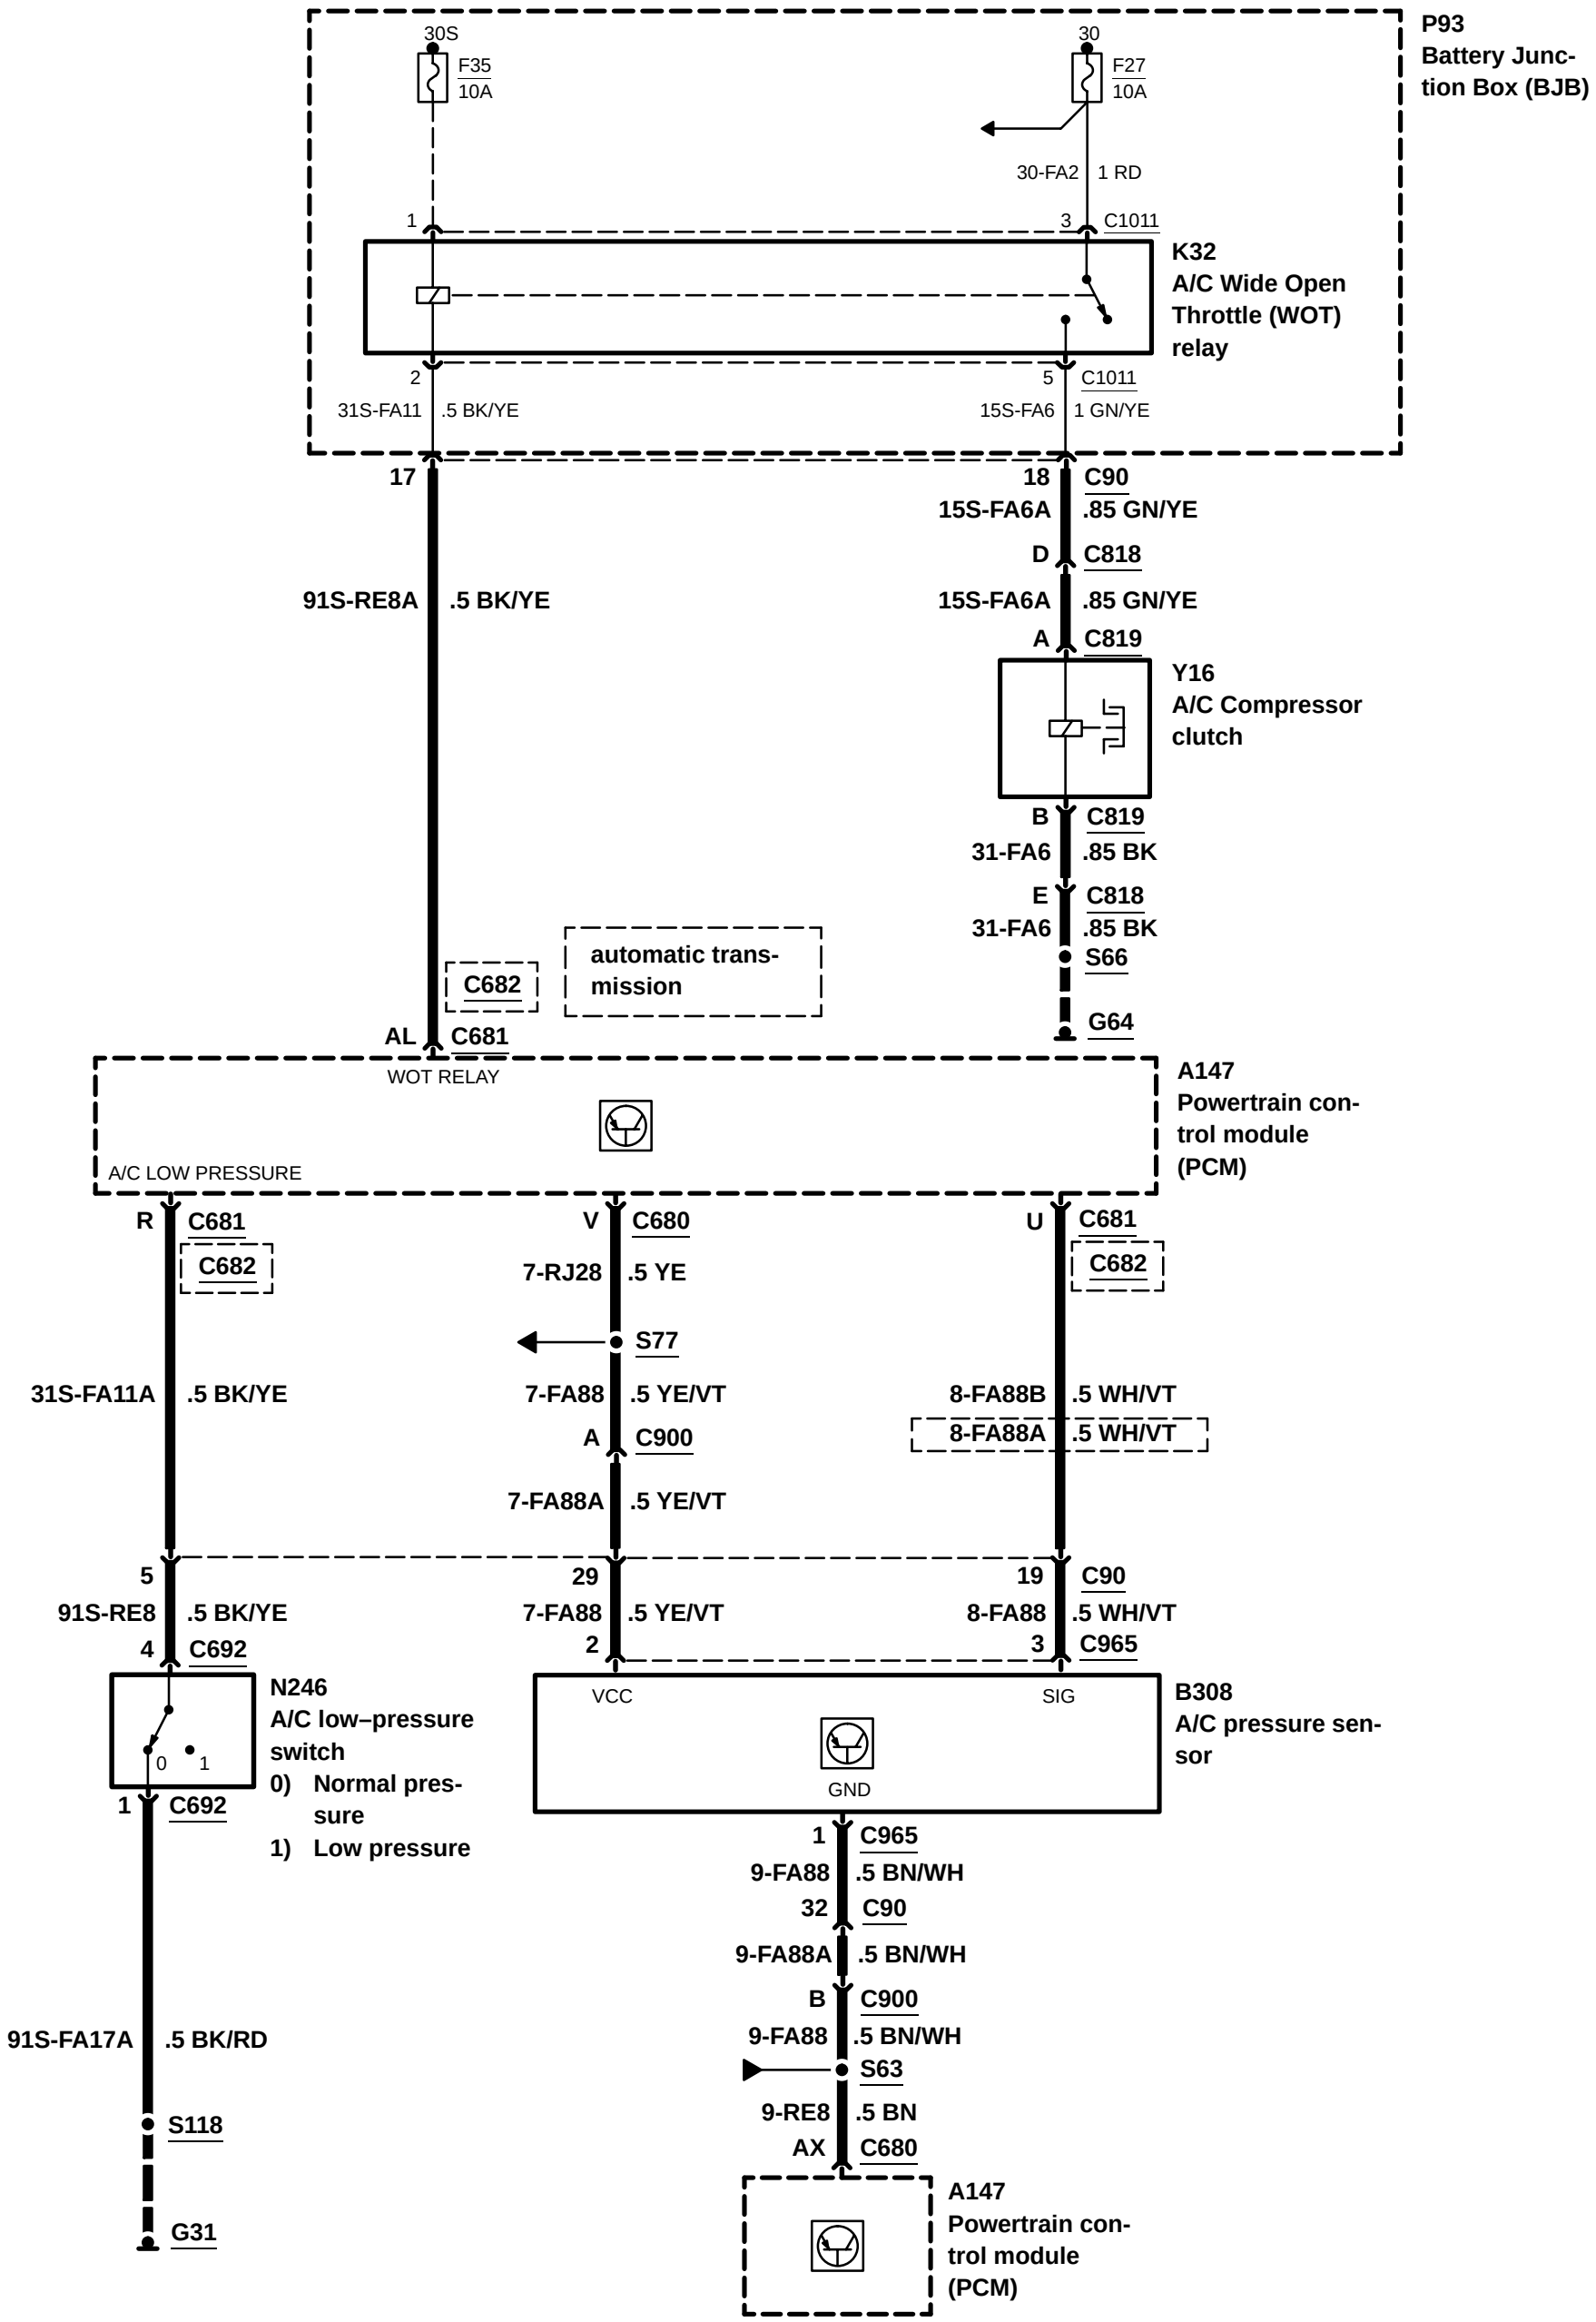


Air Conditioning – with EATC, 1.8/2.0L Duratec–HE (MI4)

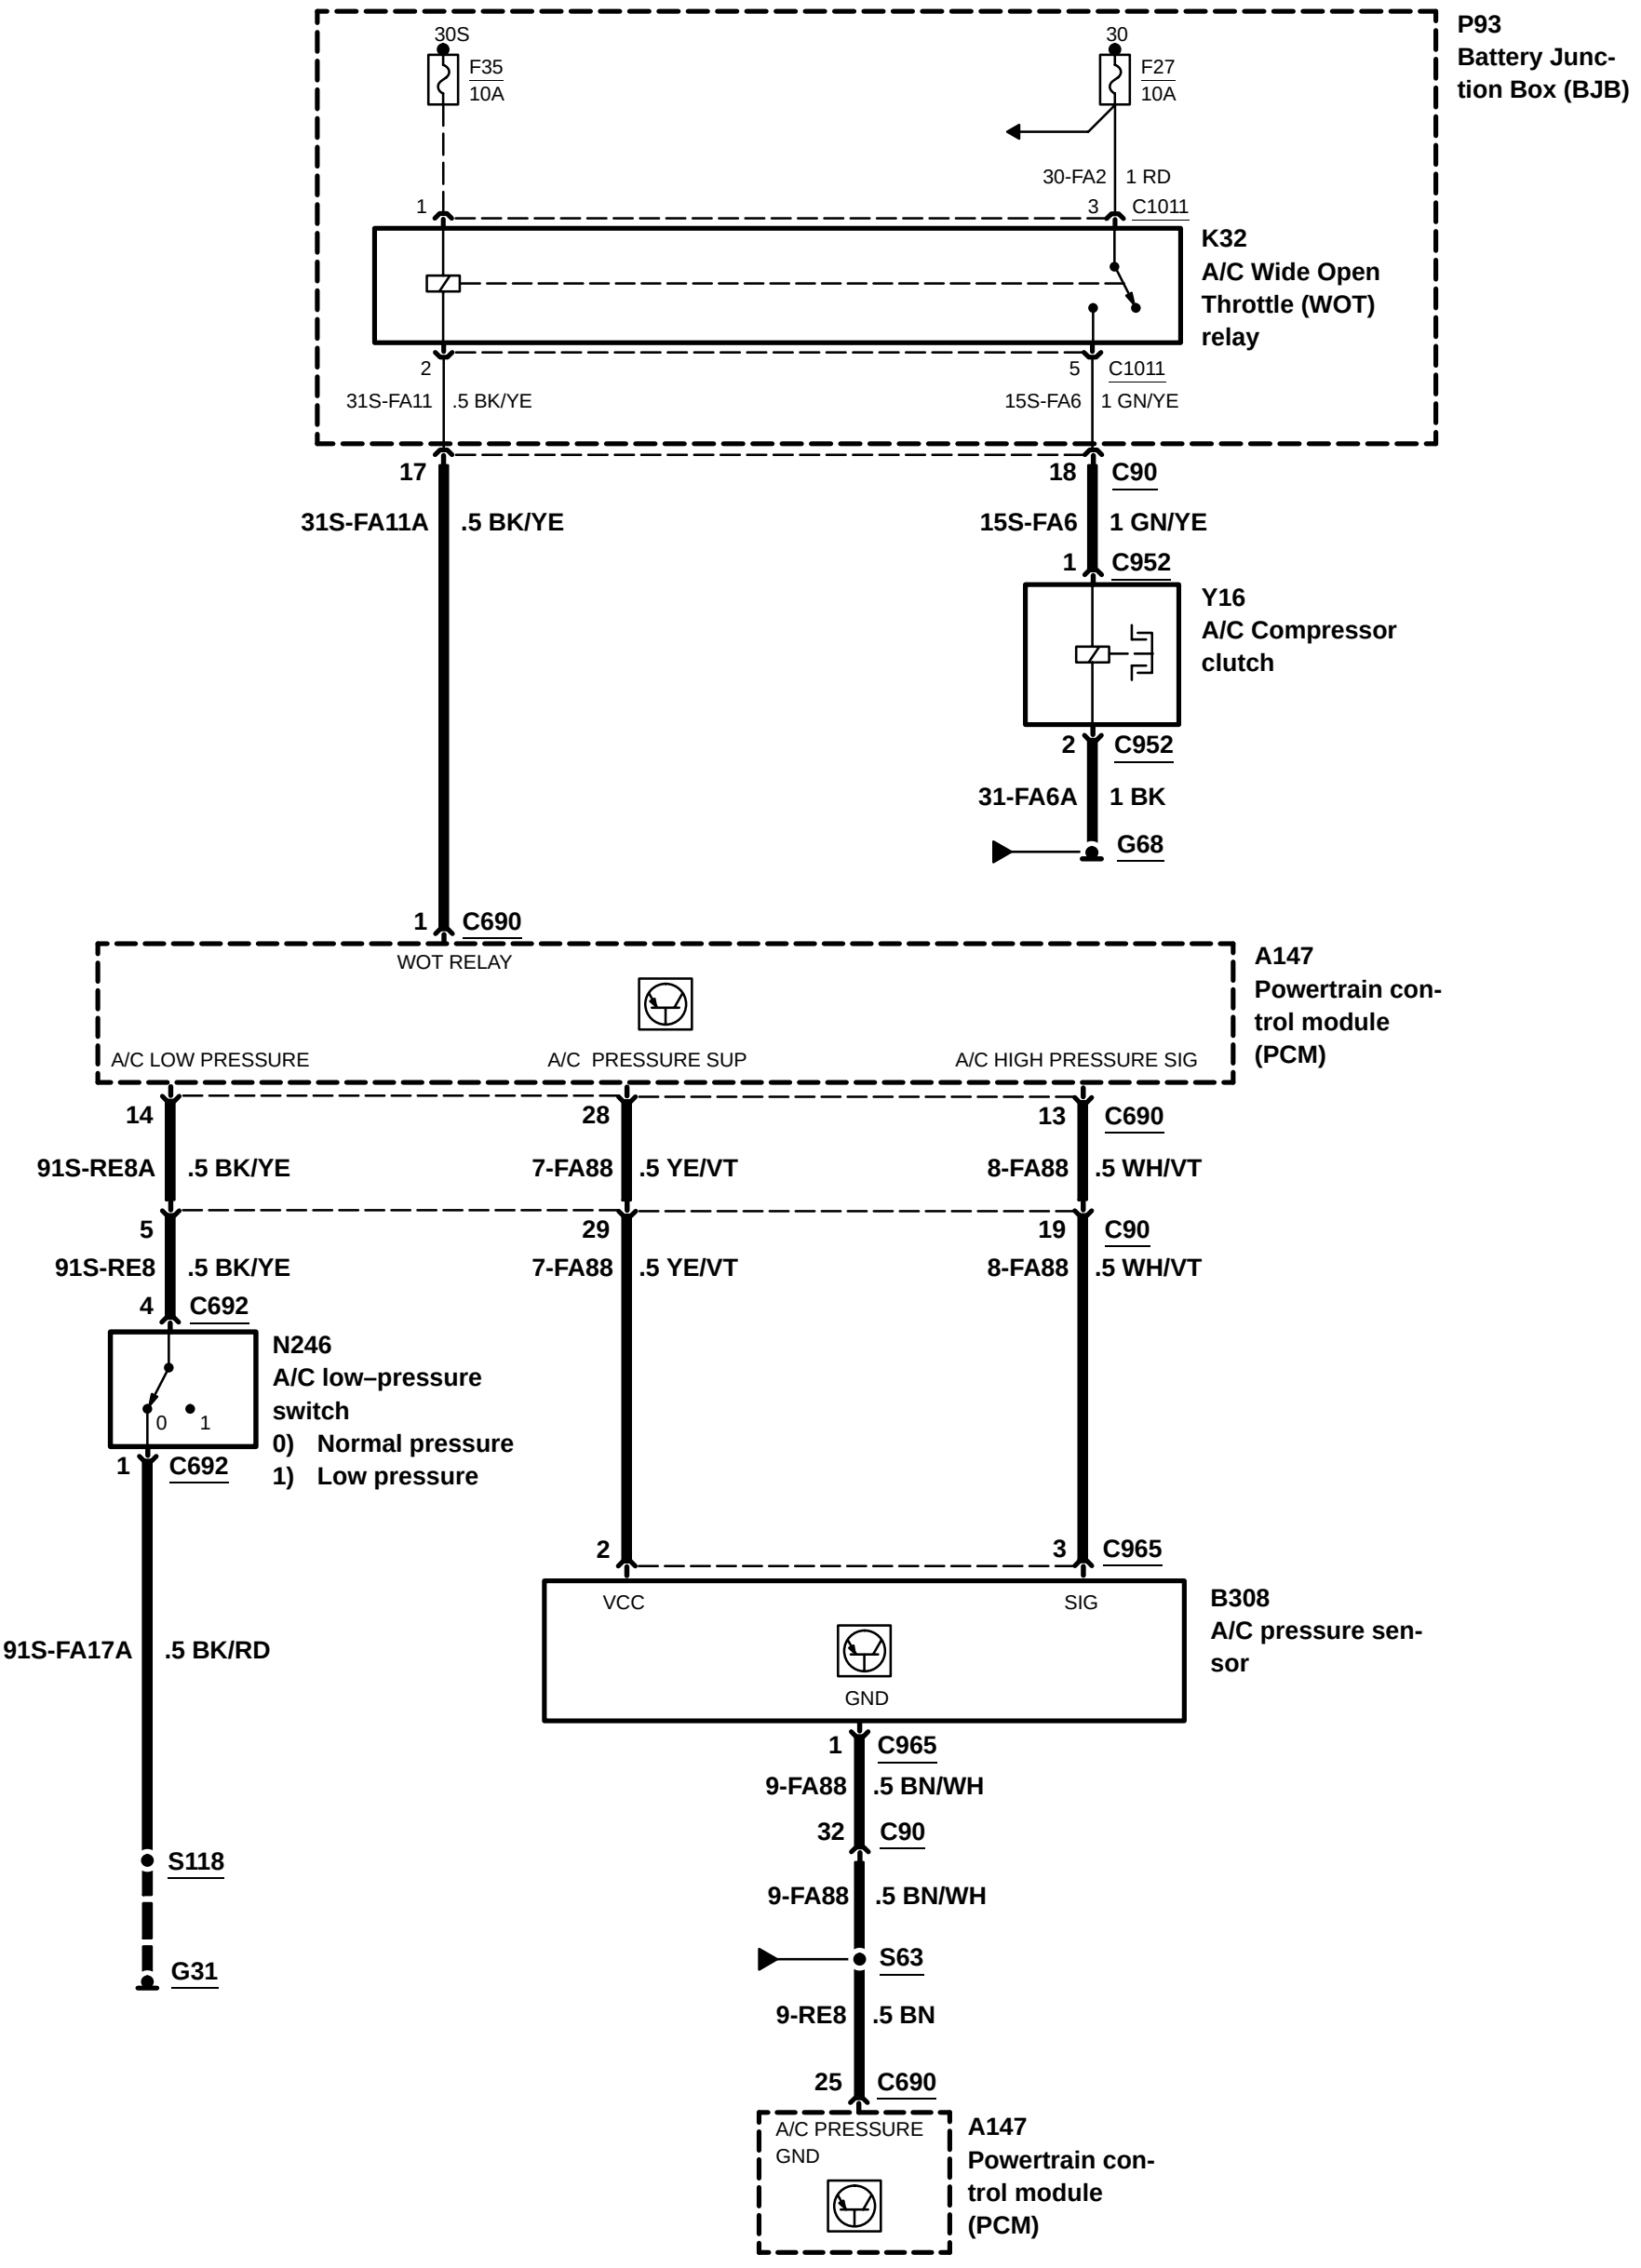


Air Conditioning – with EATC, 2.0L Duratorq–TDCi (DW) Diesel

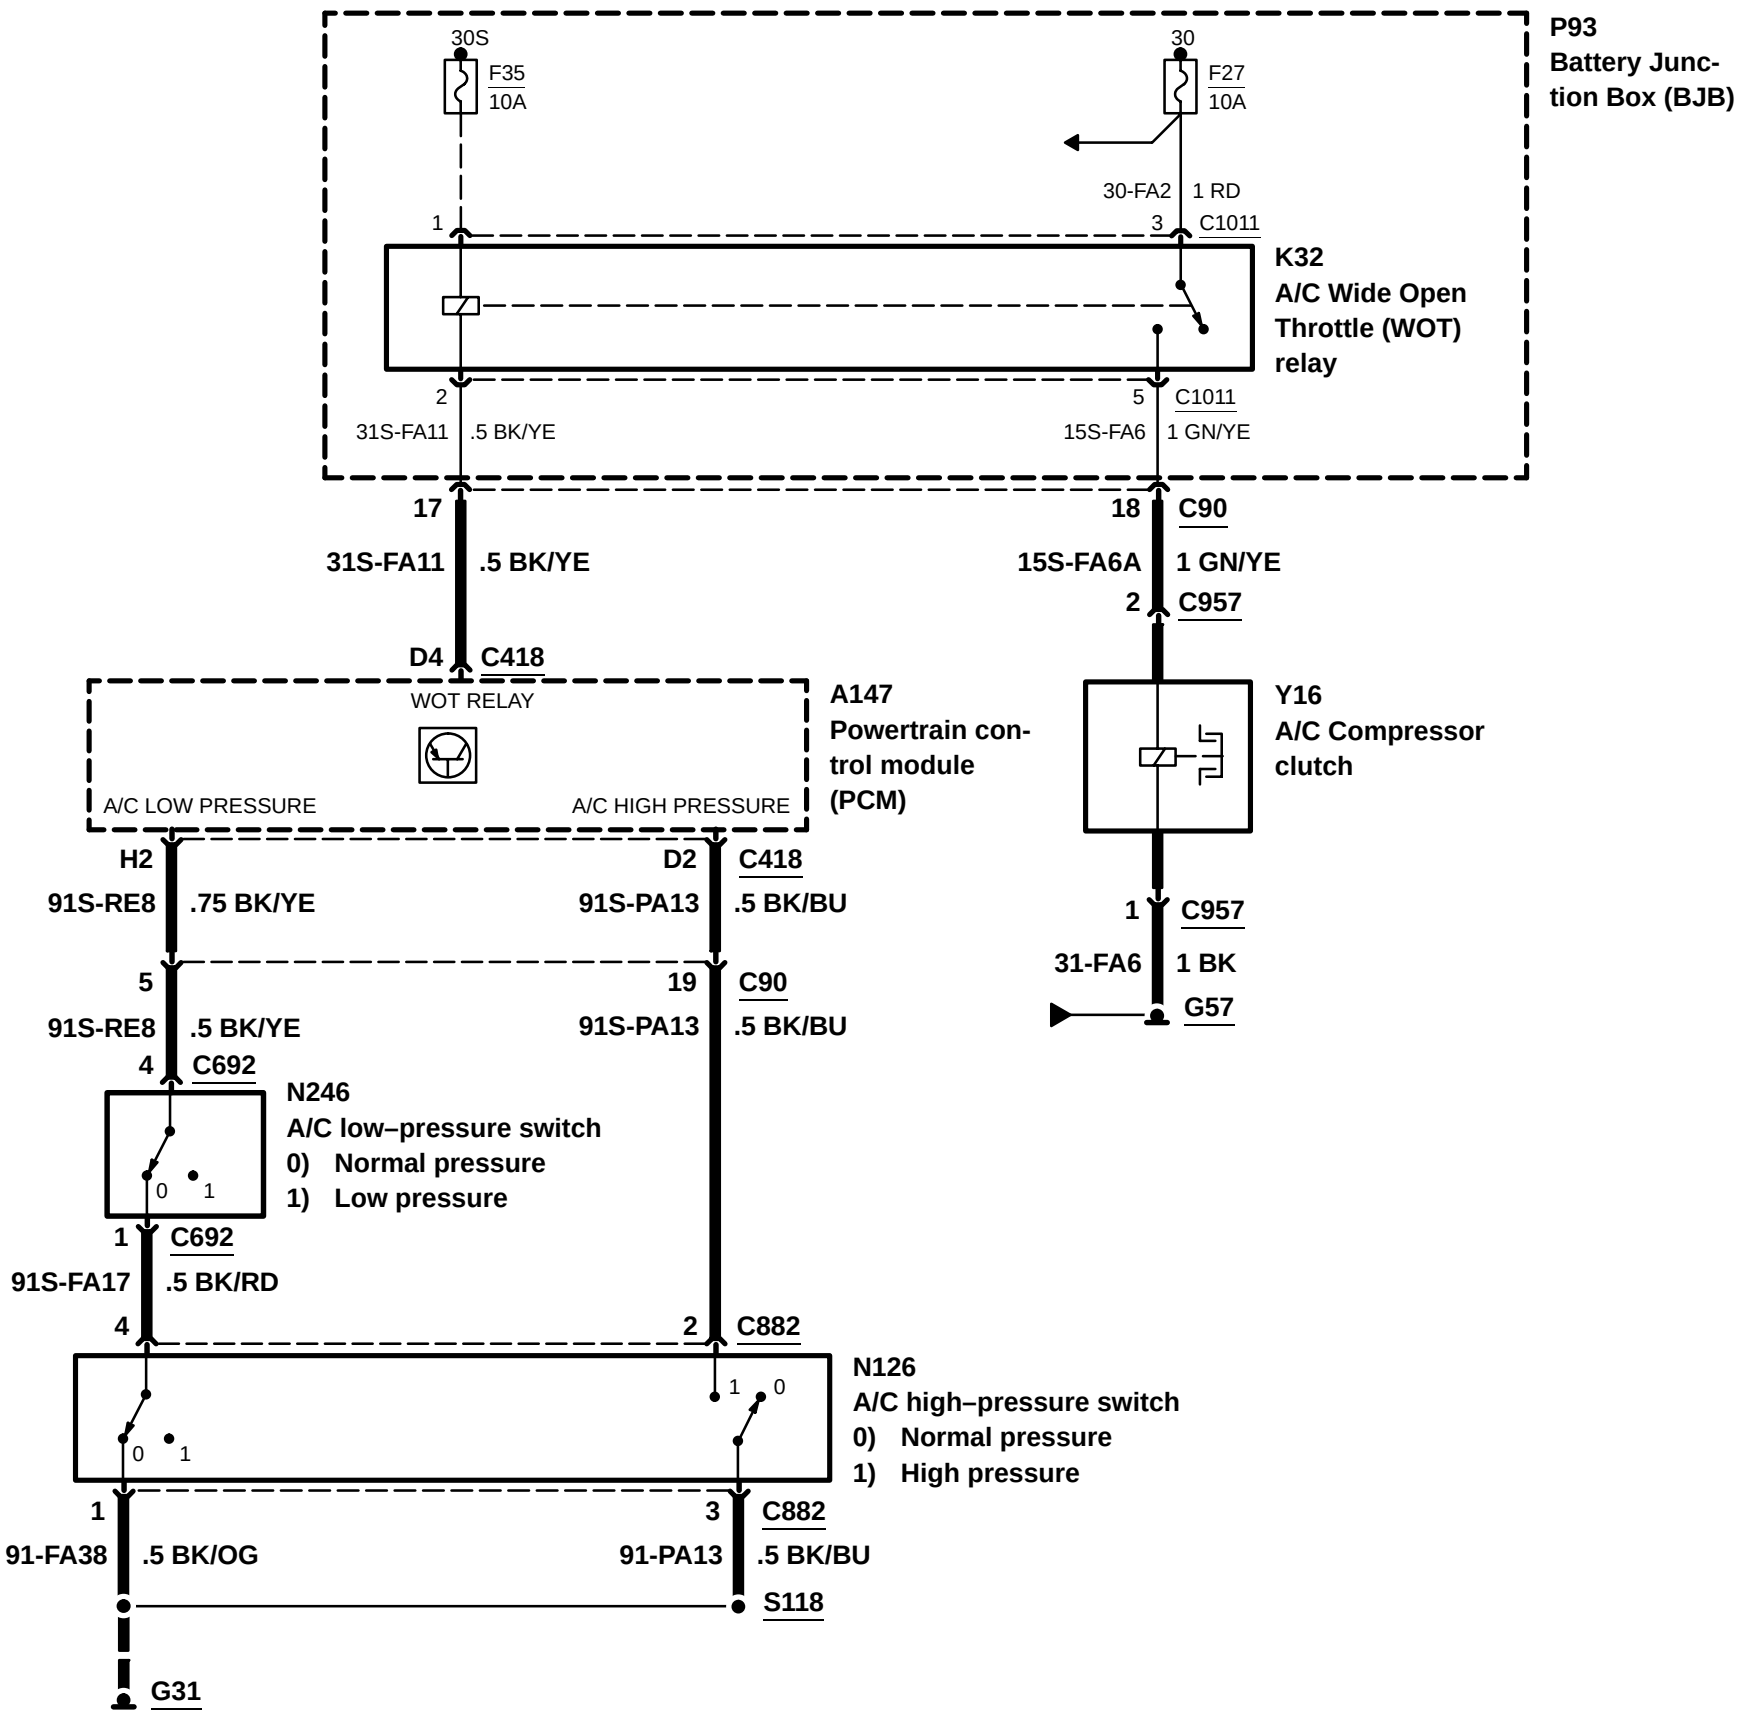


Instrument Cluster and Panel Illumination

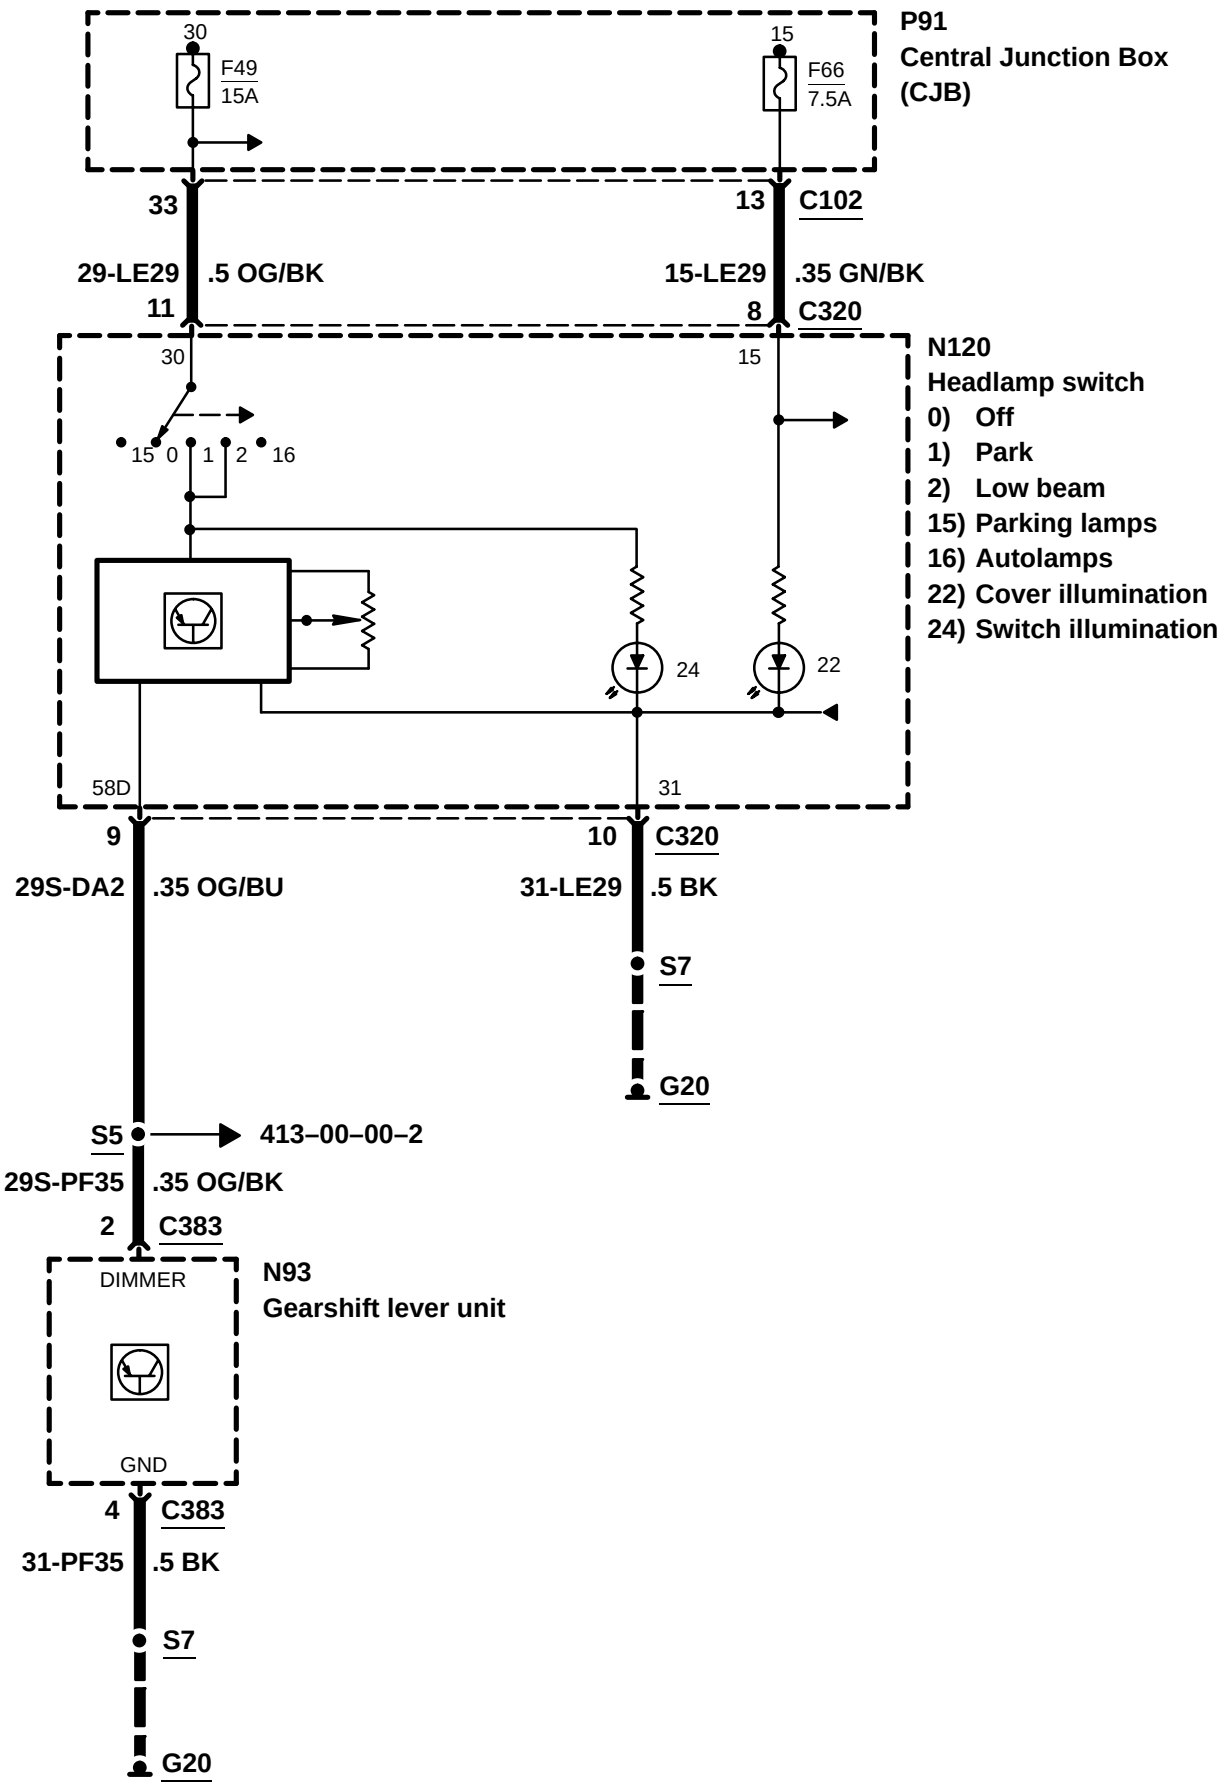


Instrument Cluster and Panel Illumination

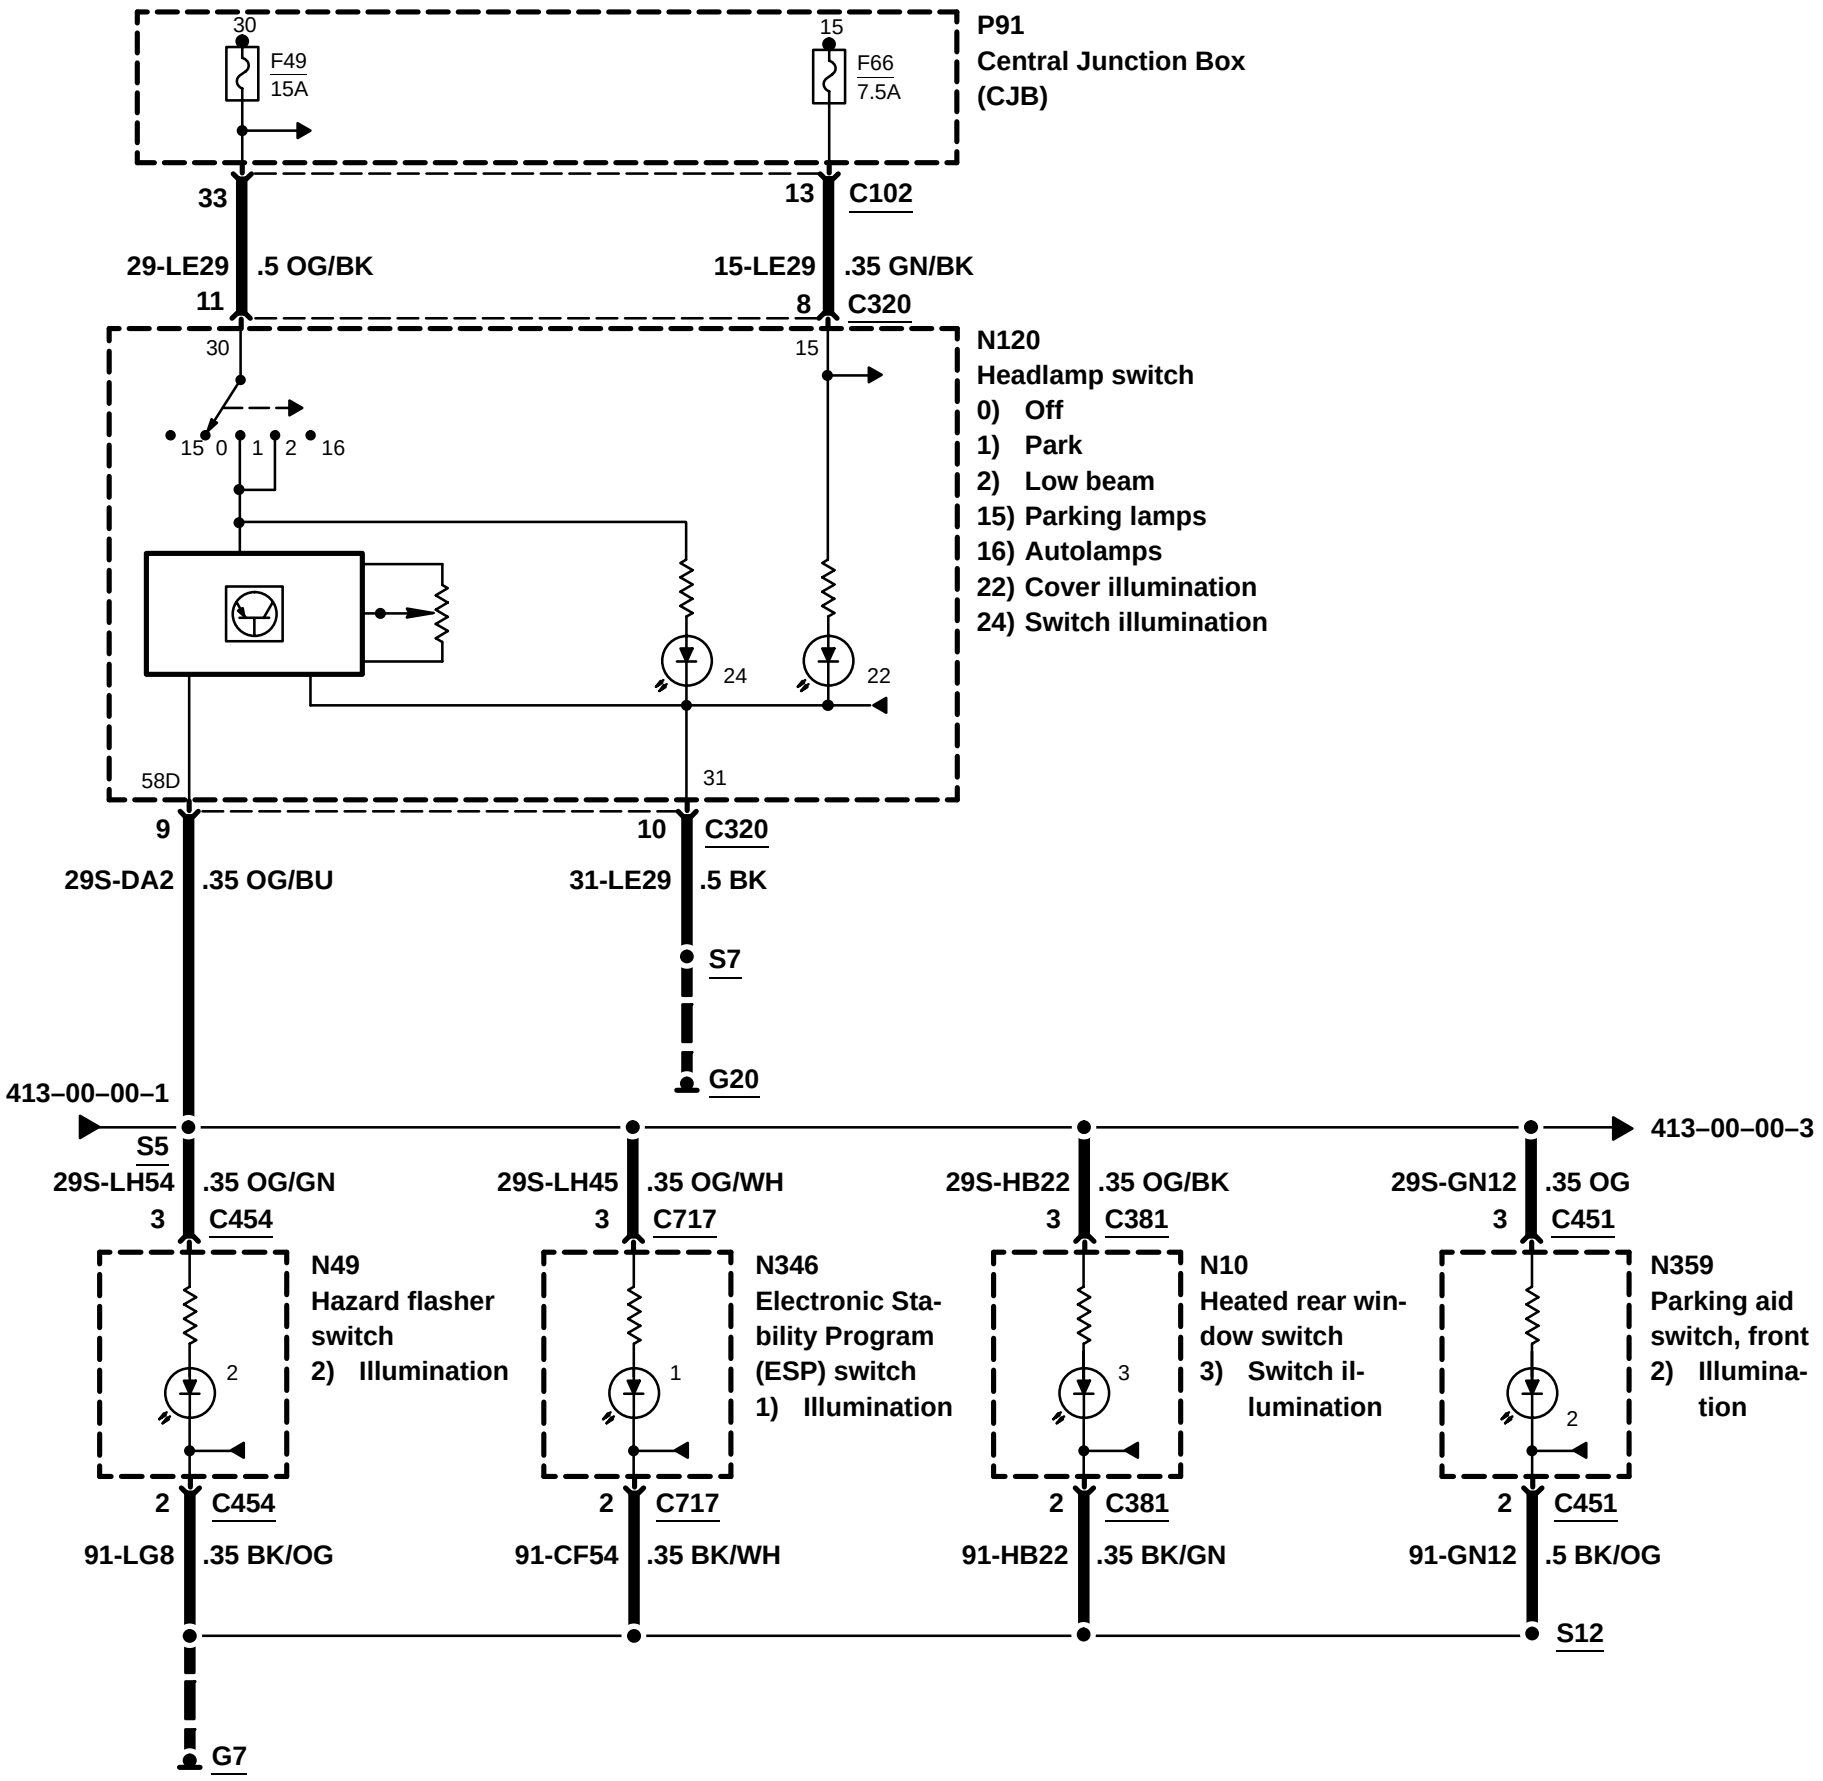


Instrument Cluster and Panel Illumination

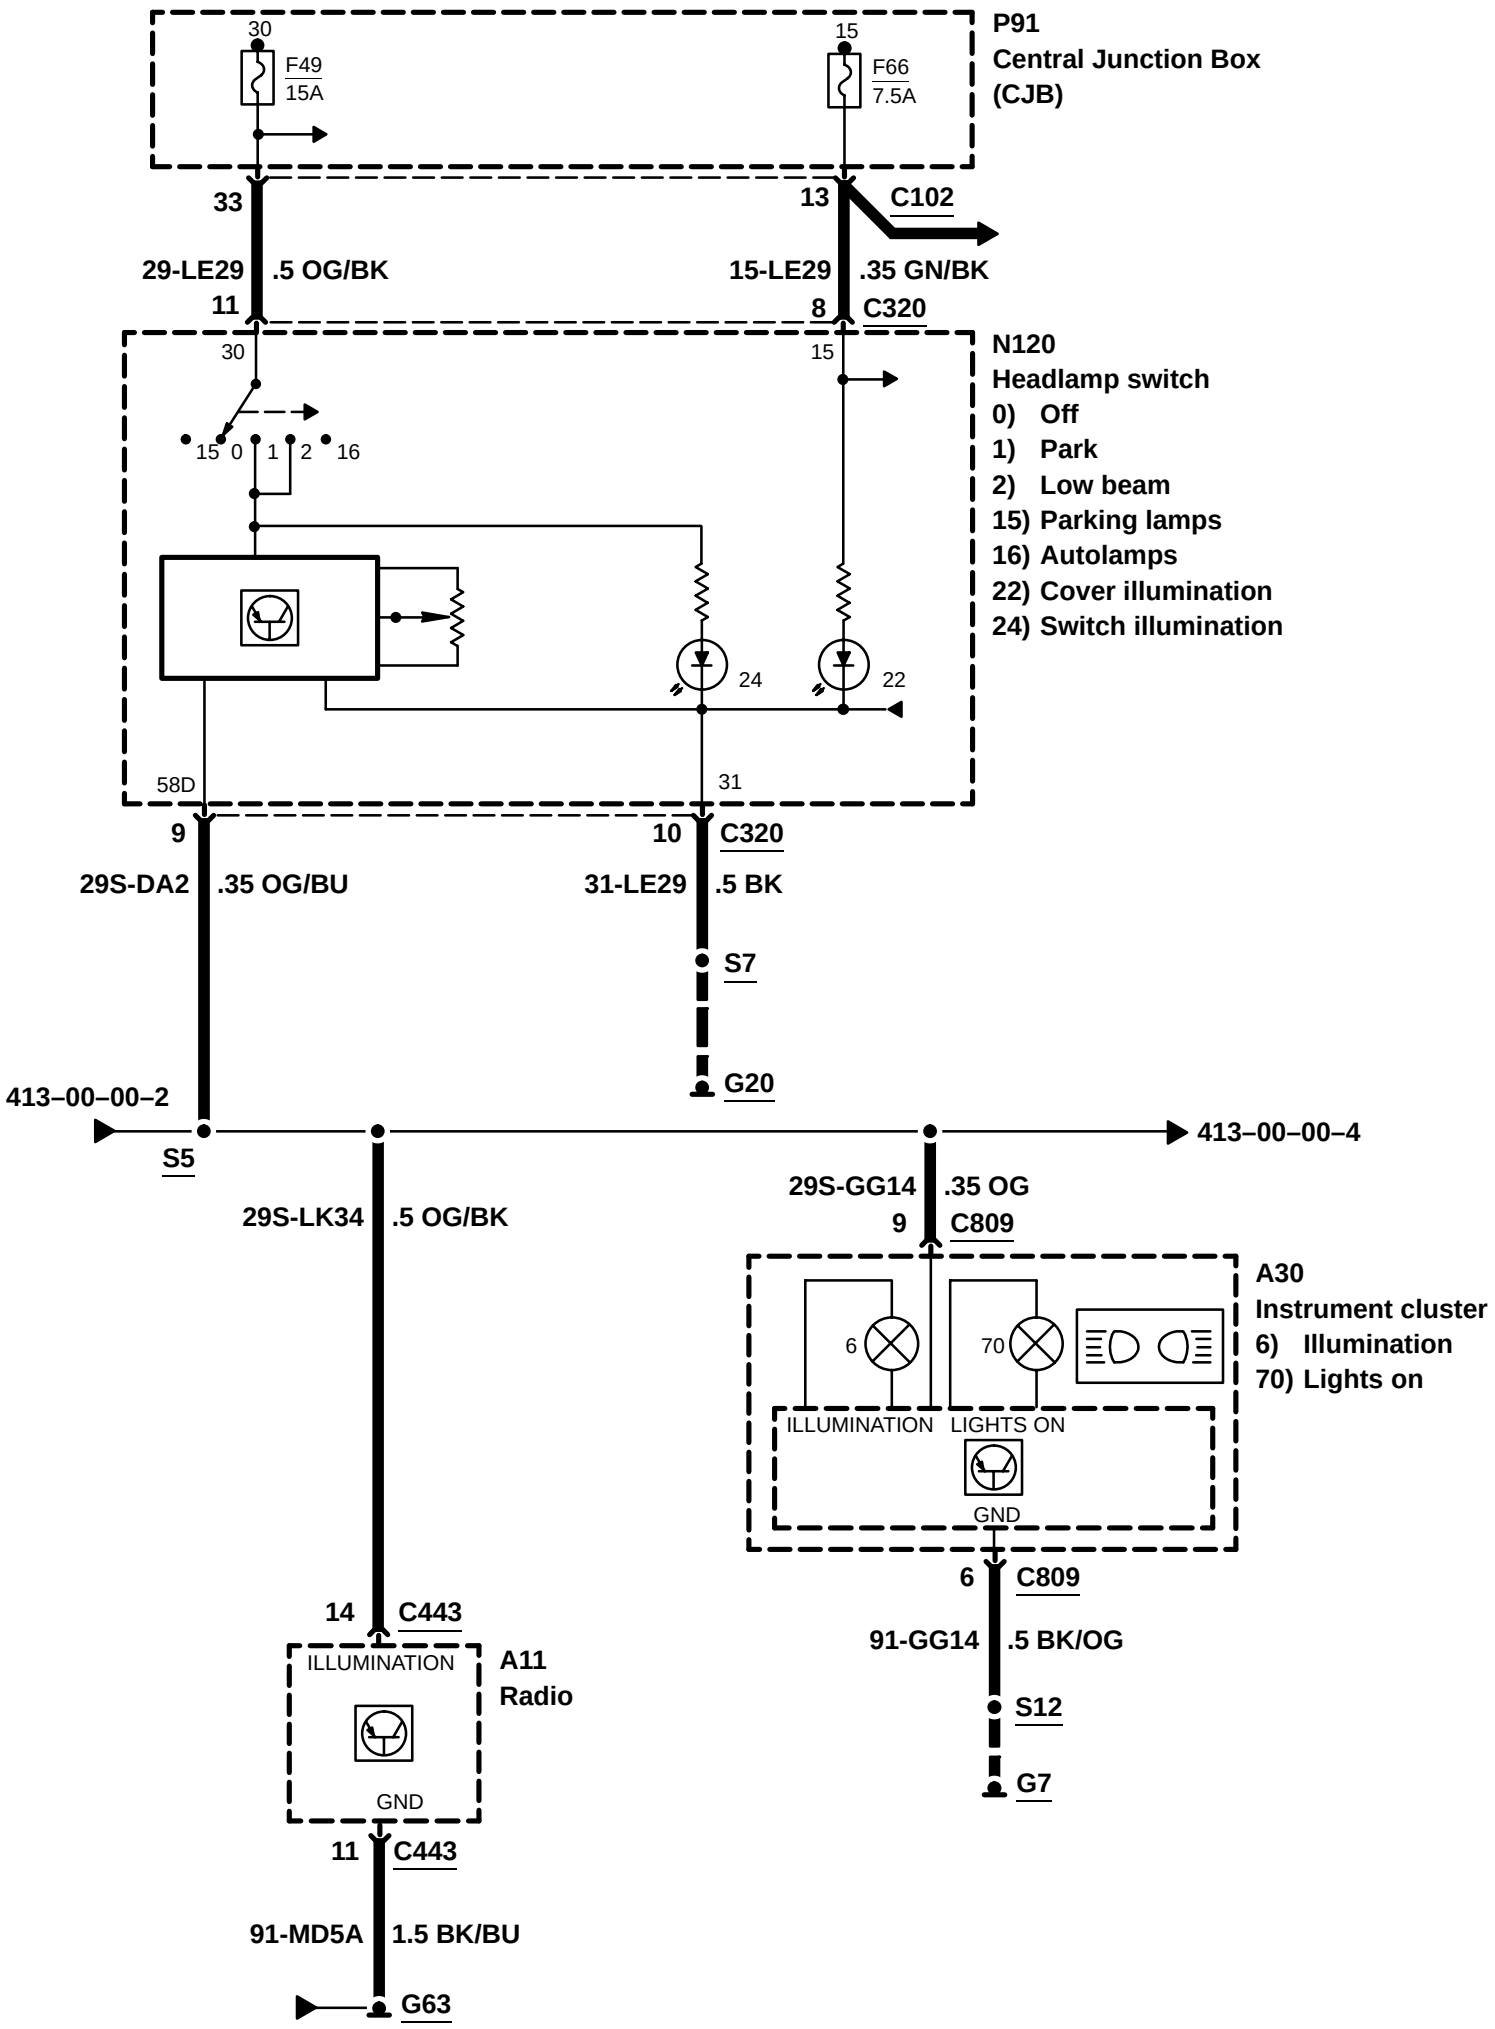


Instrument Cluster and Panel Illumination

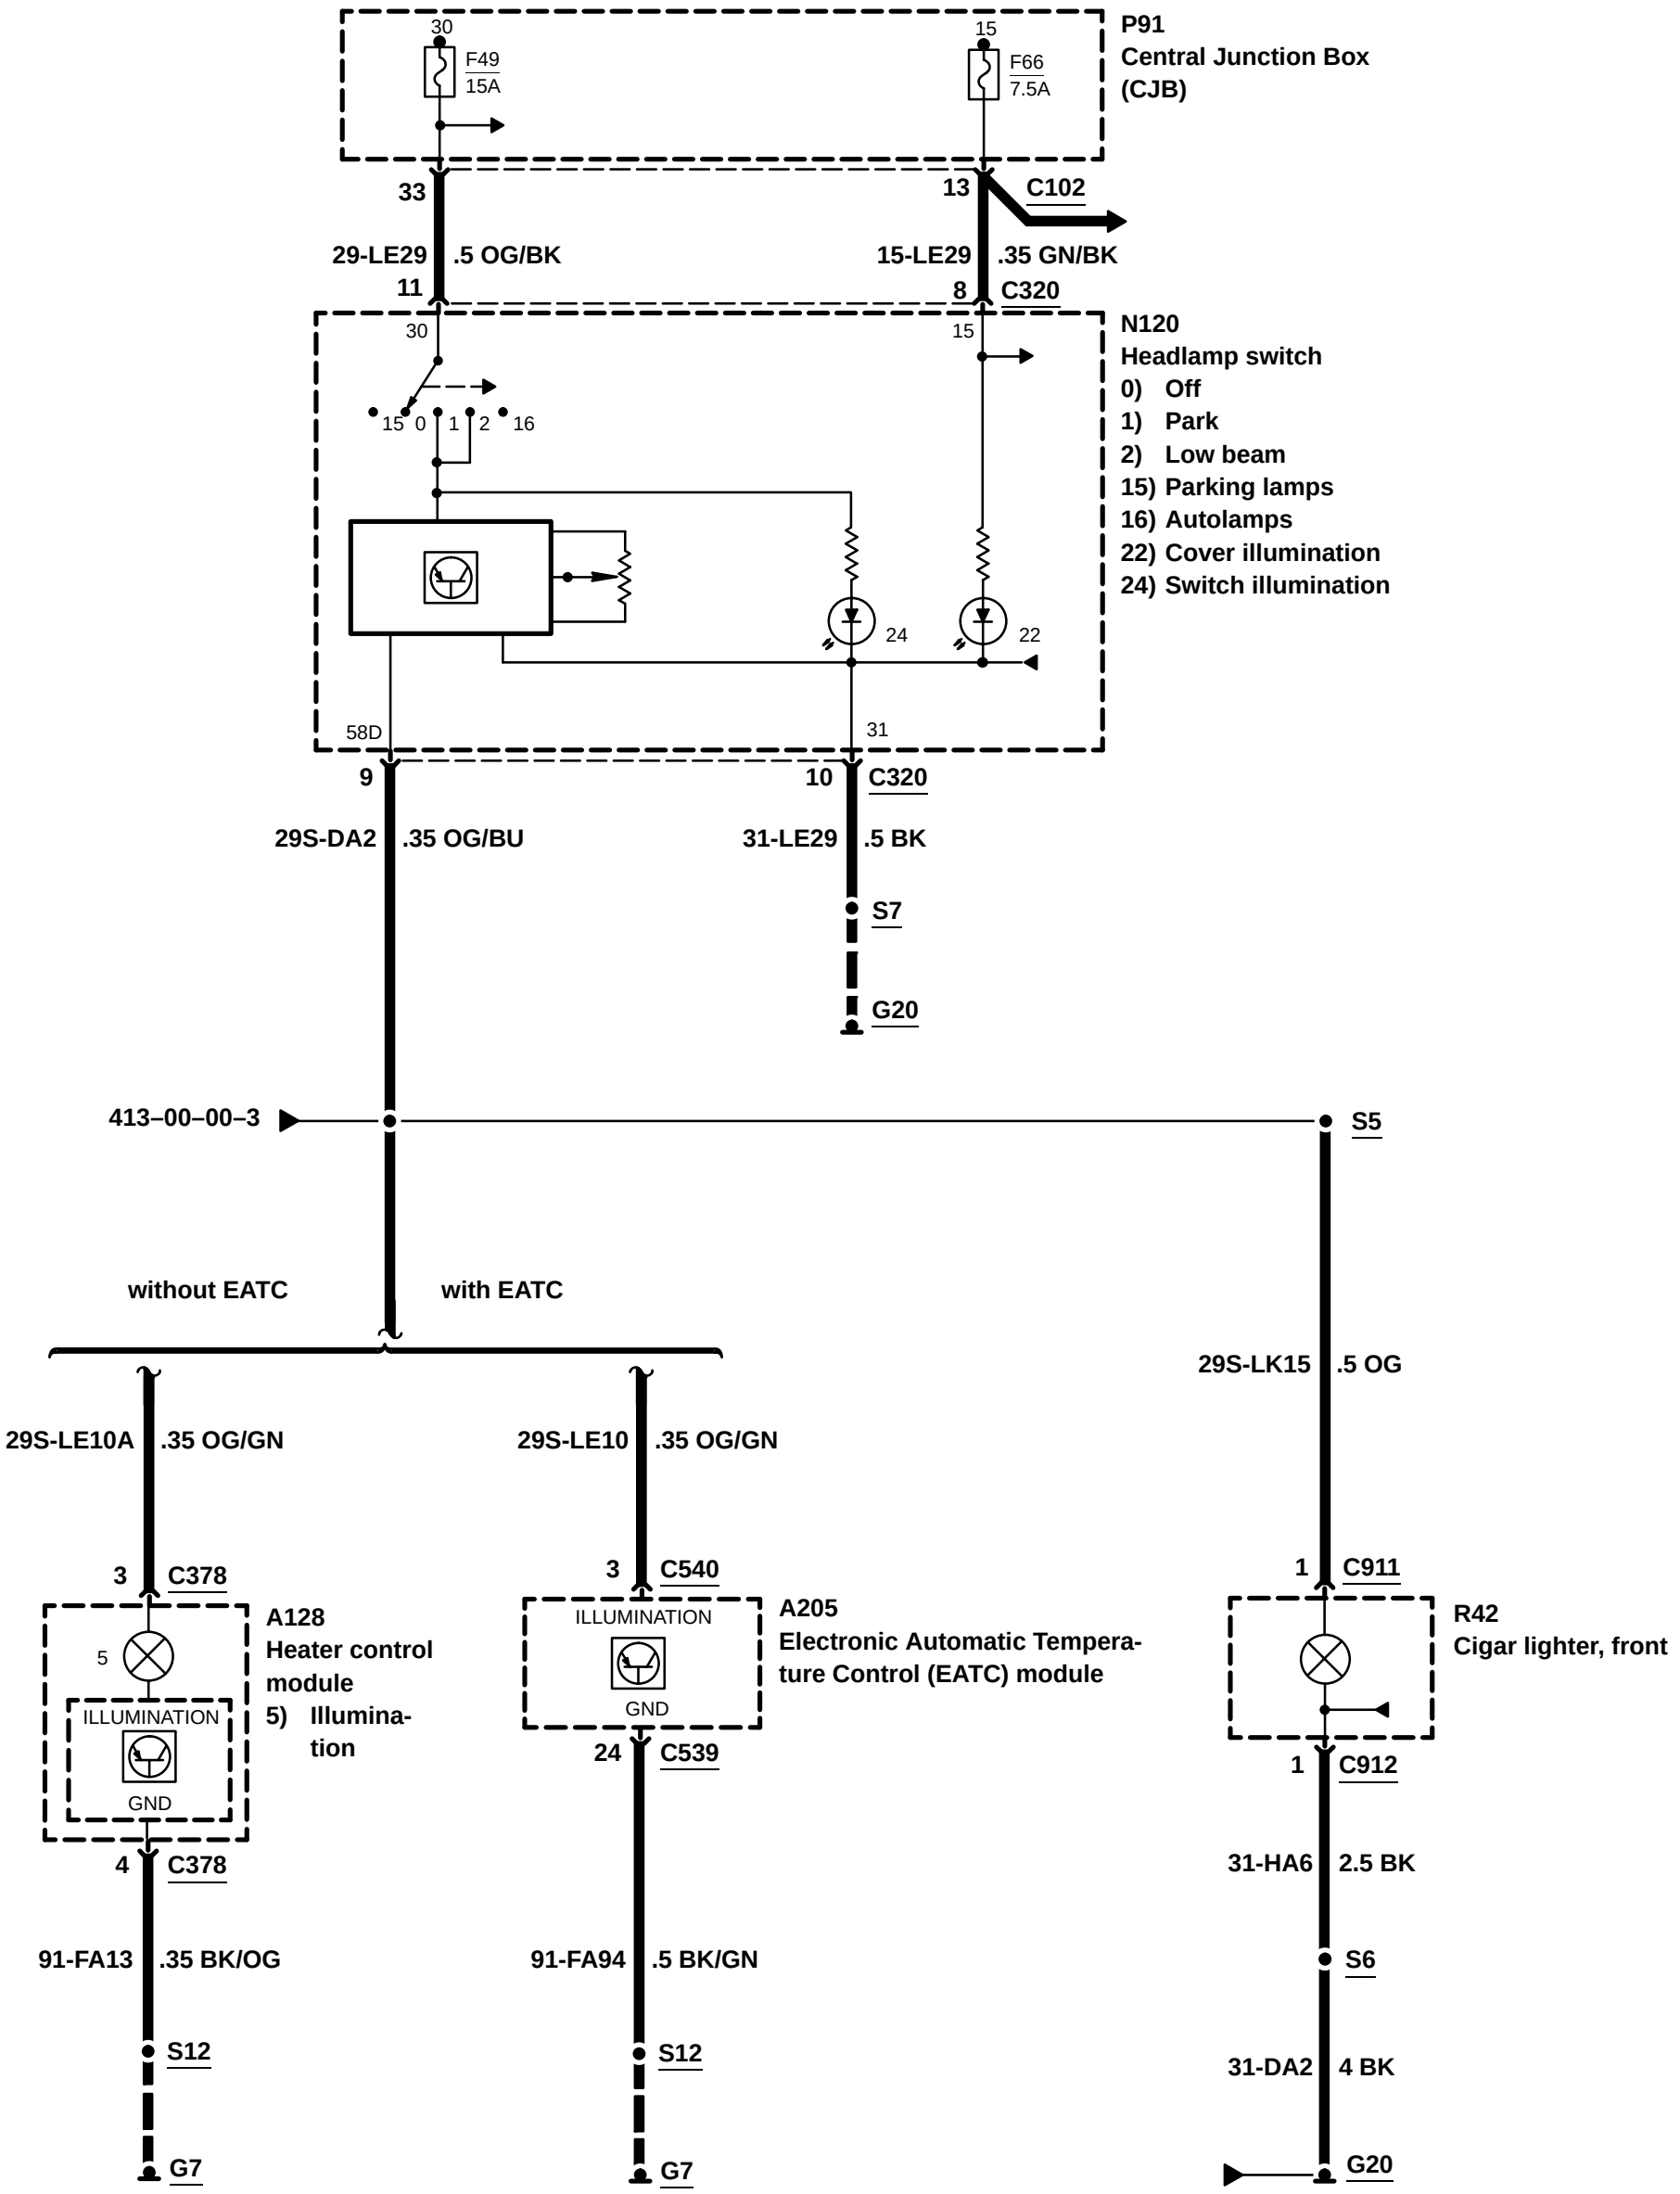


Instrument Cluster and Panel Illumination – with front power windows

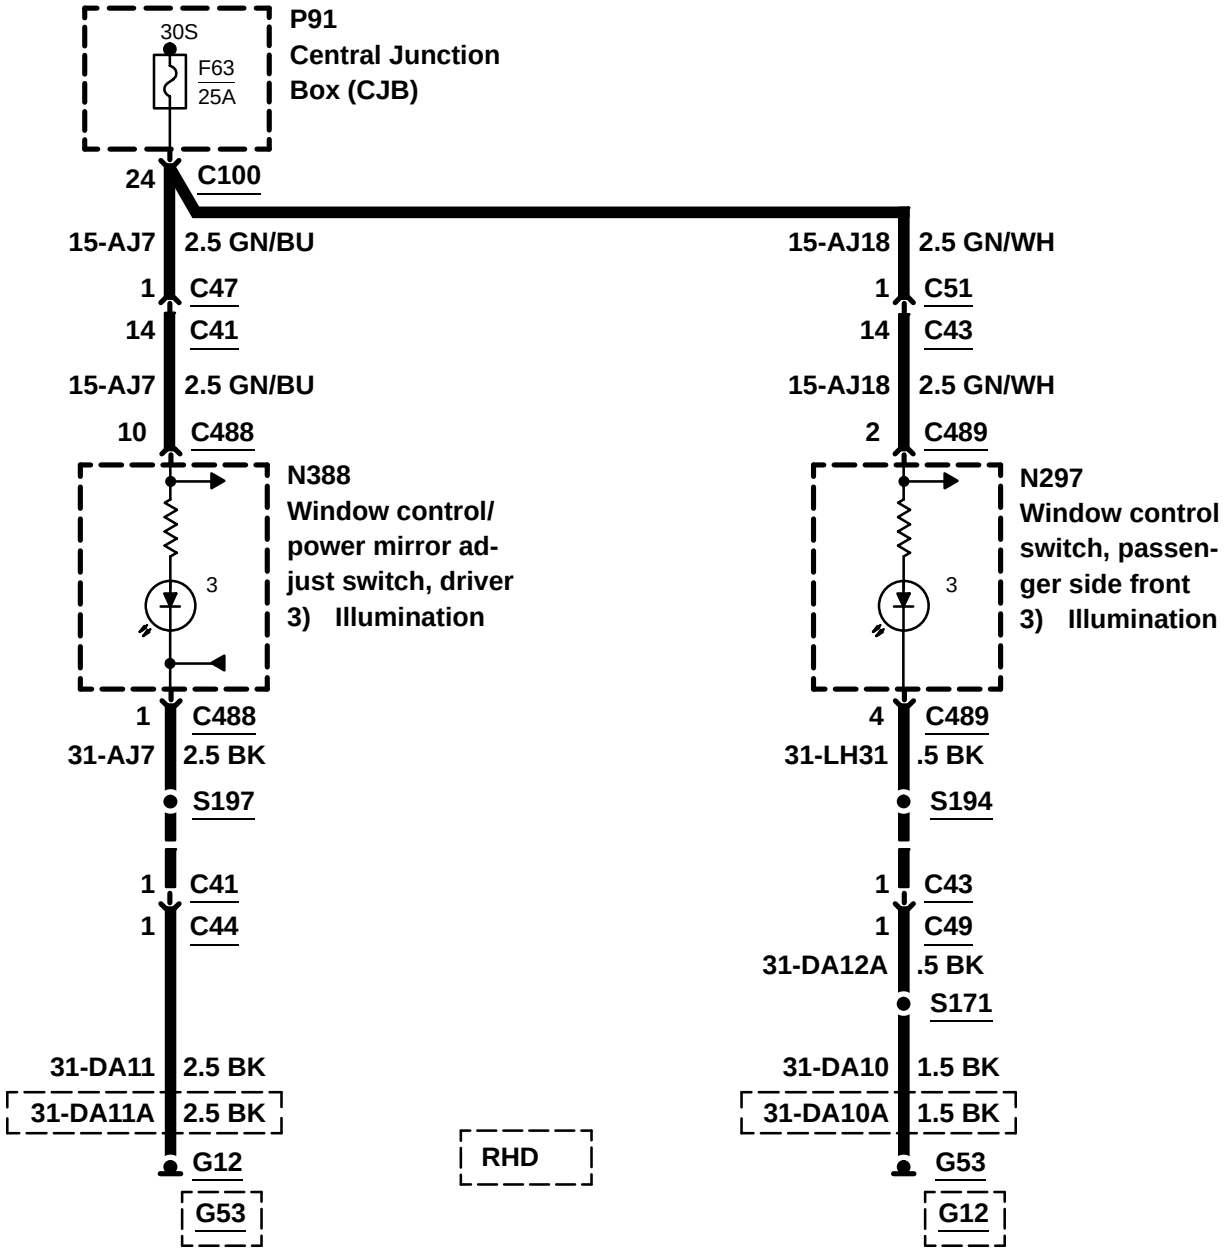


Instrument Cluster and Panel Illumination – with front and rear power windows

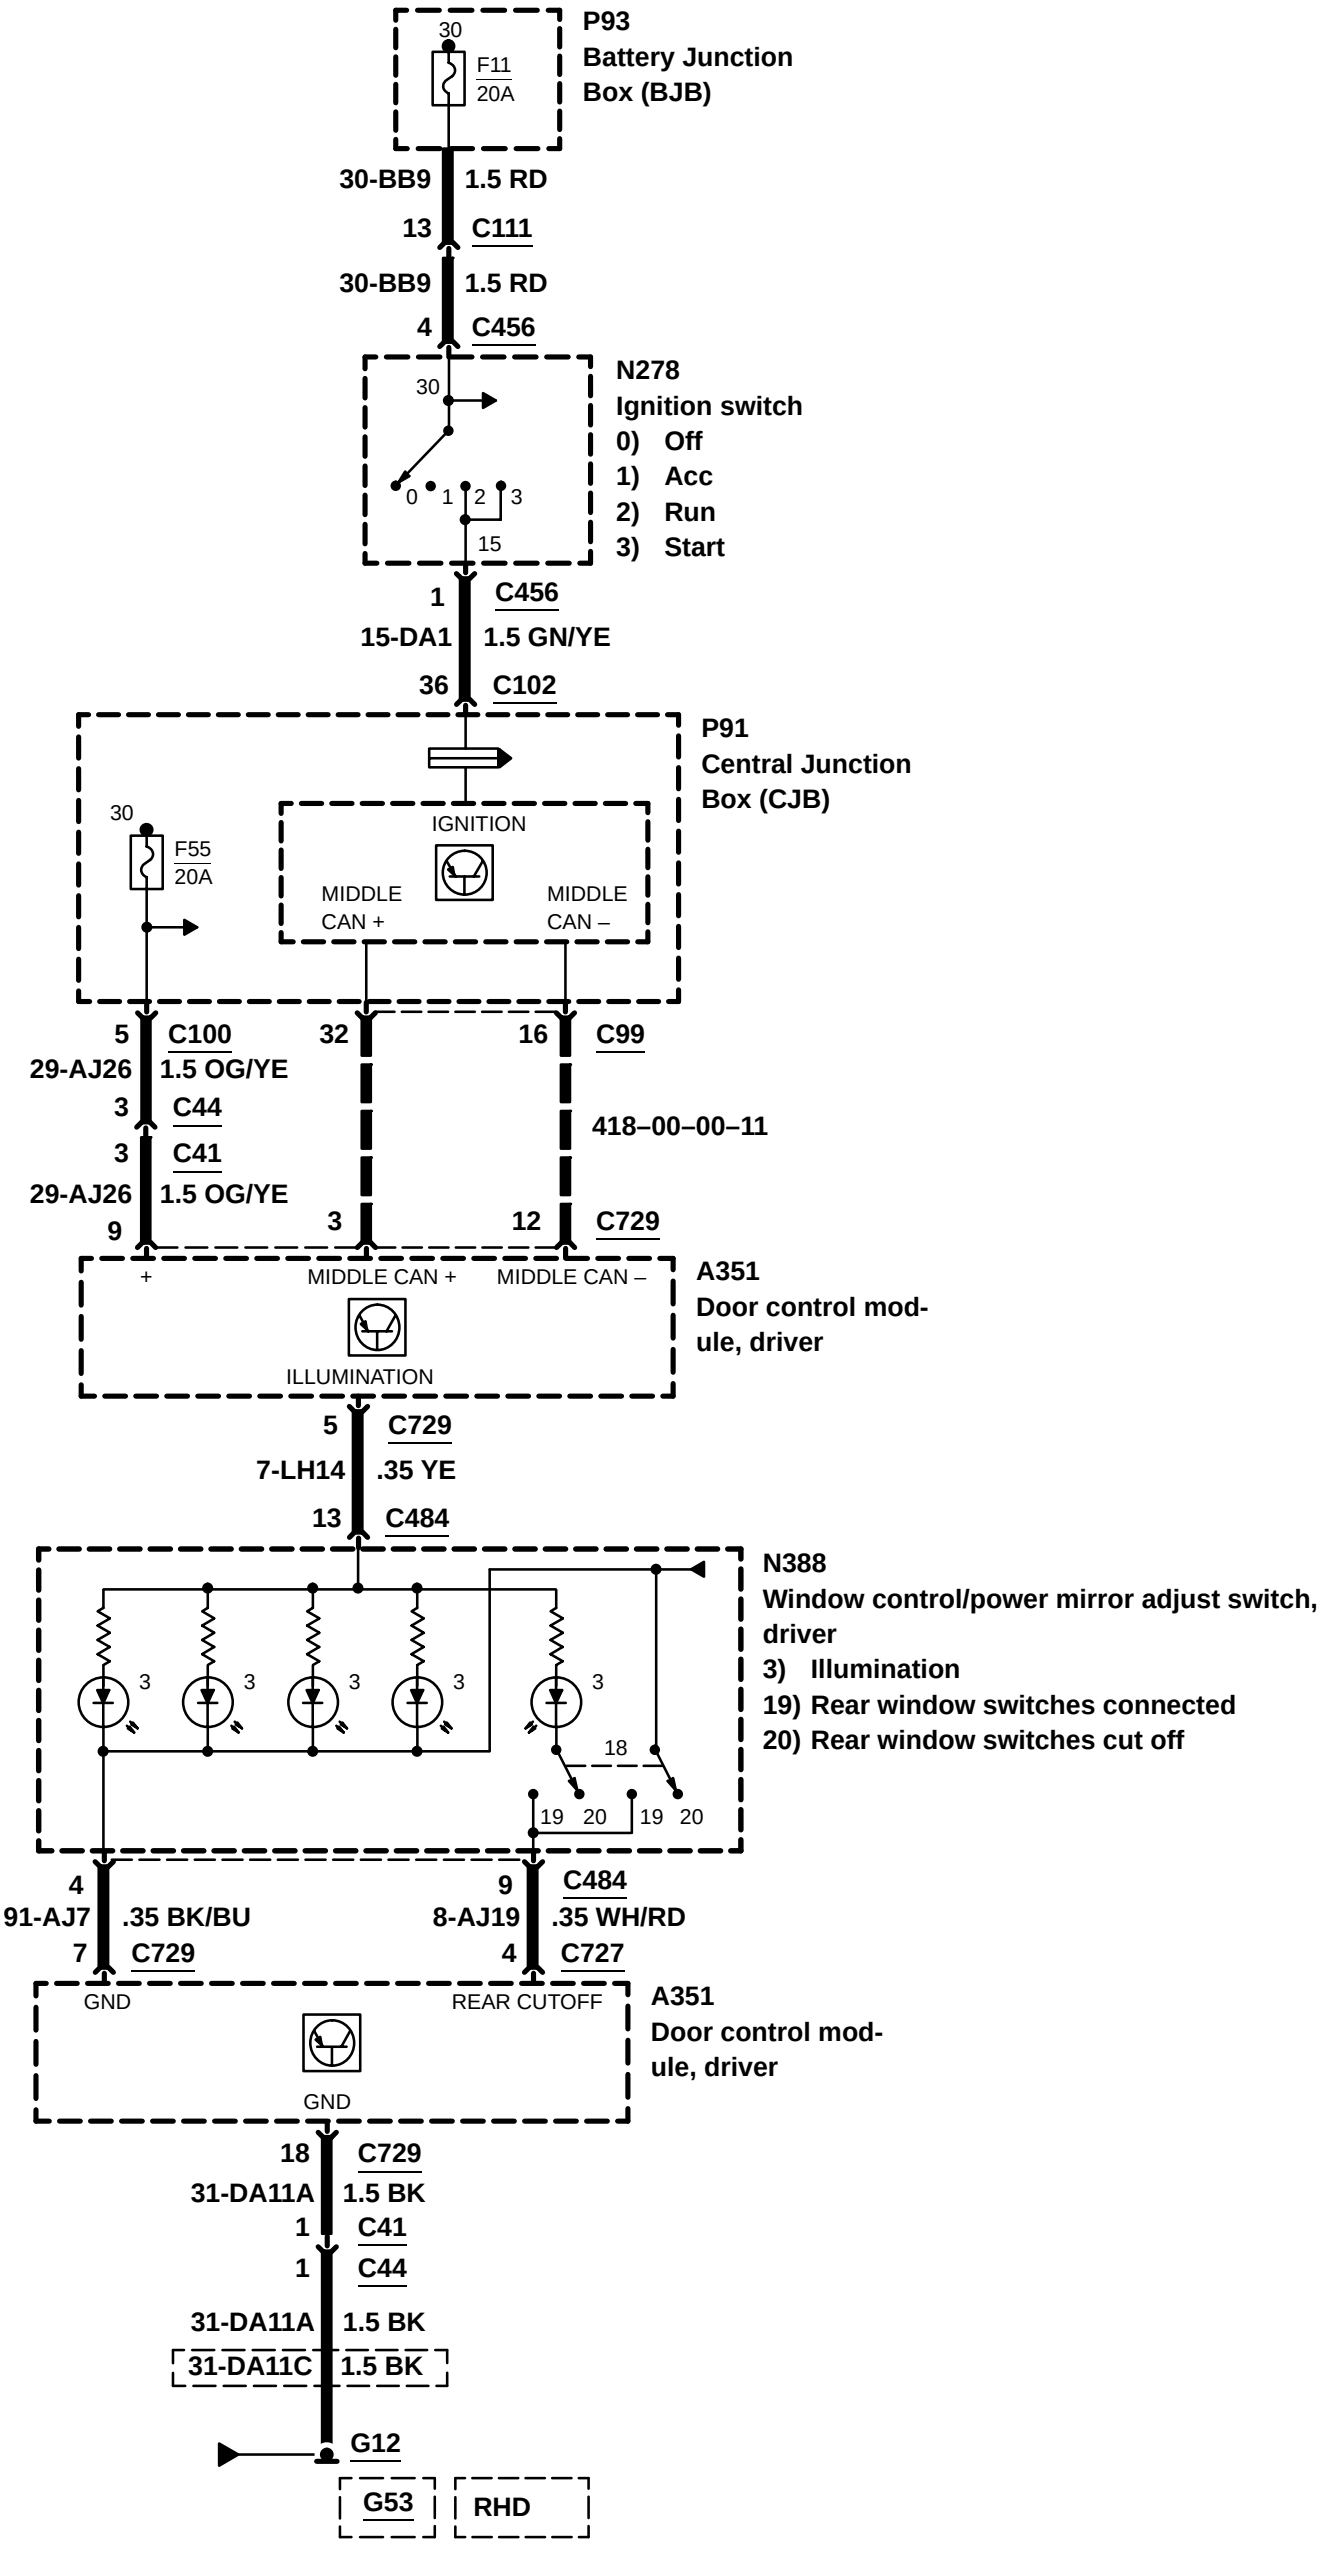


Instrument Cluster and Panel Illumination – with front and rear power windows

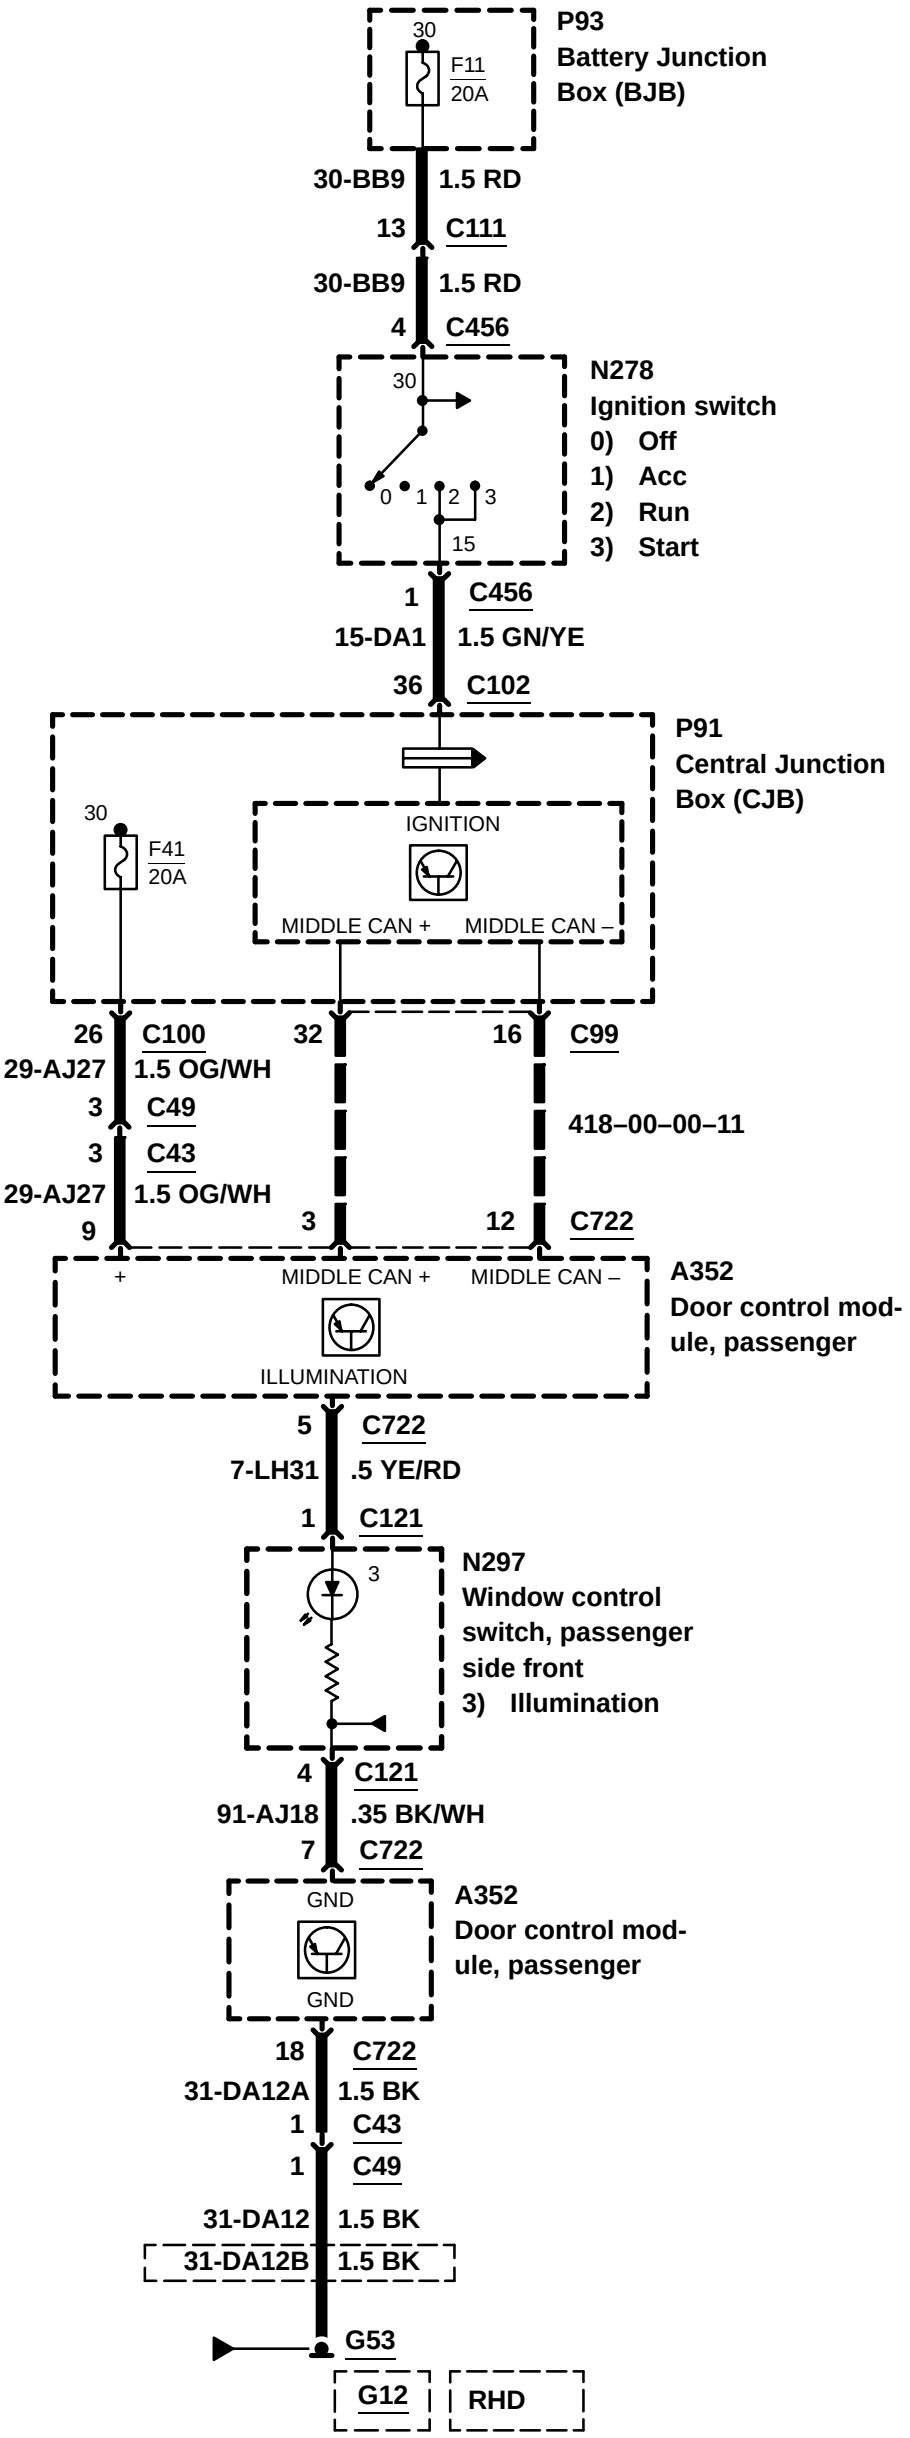


Instrument Cluster and Panel Illumination – with front and rear power windows

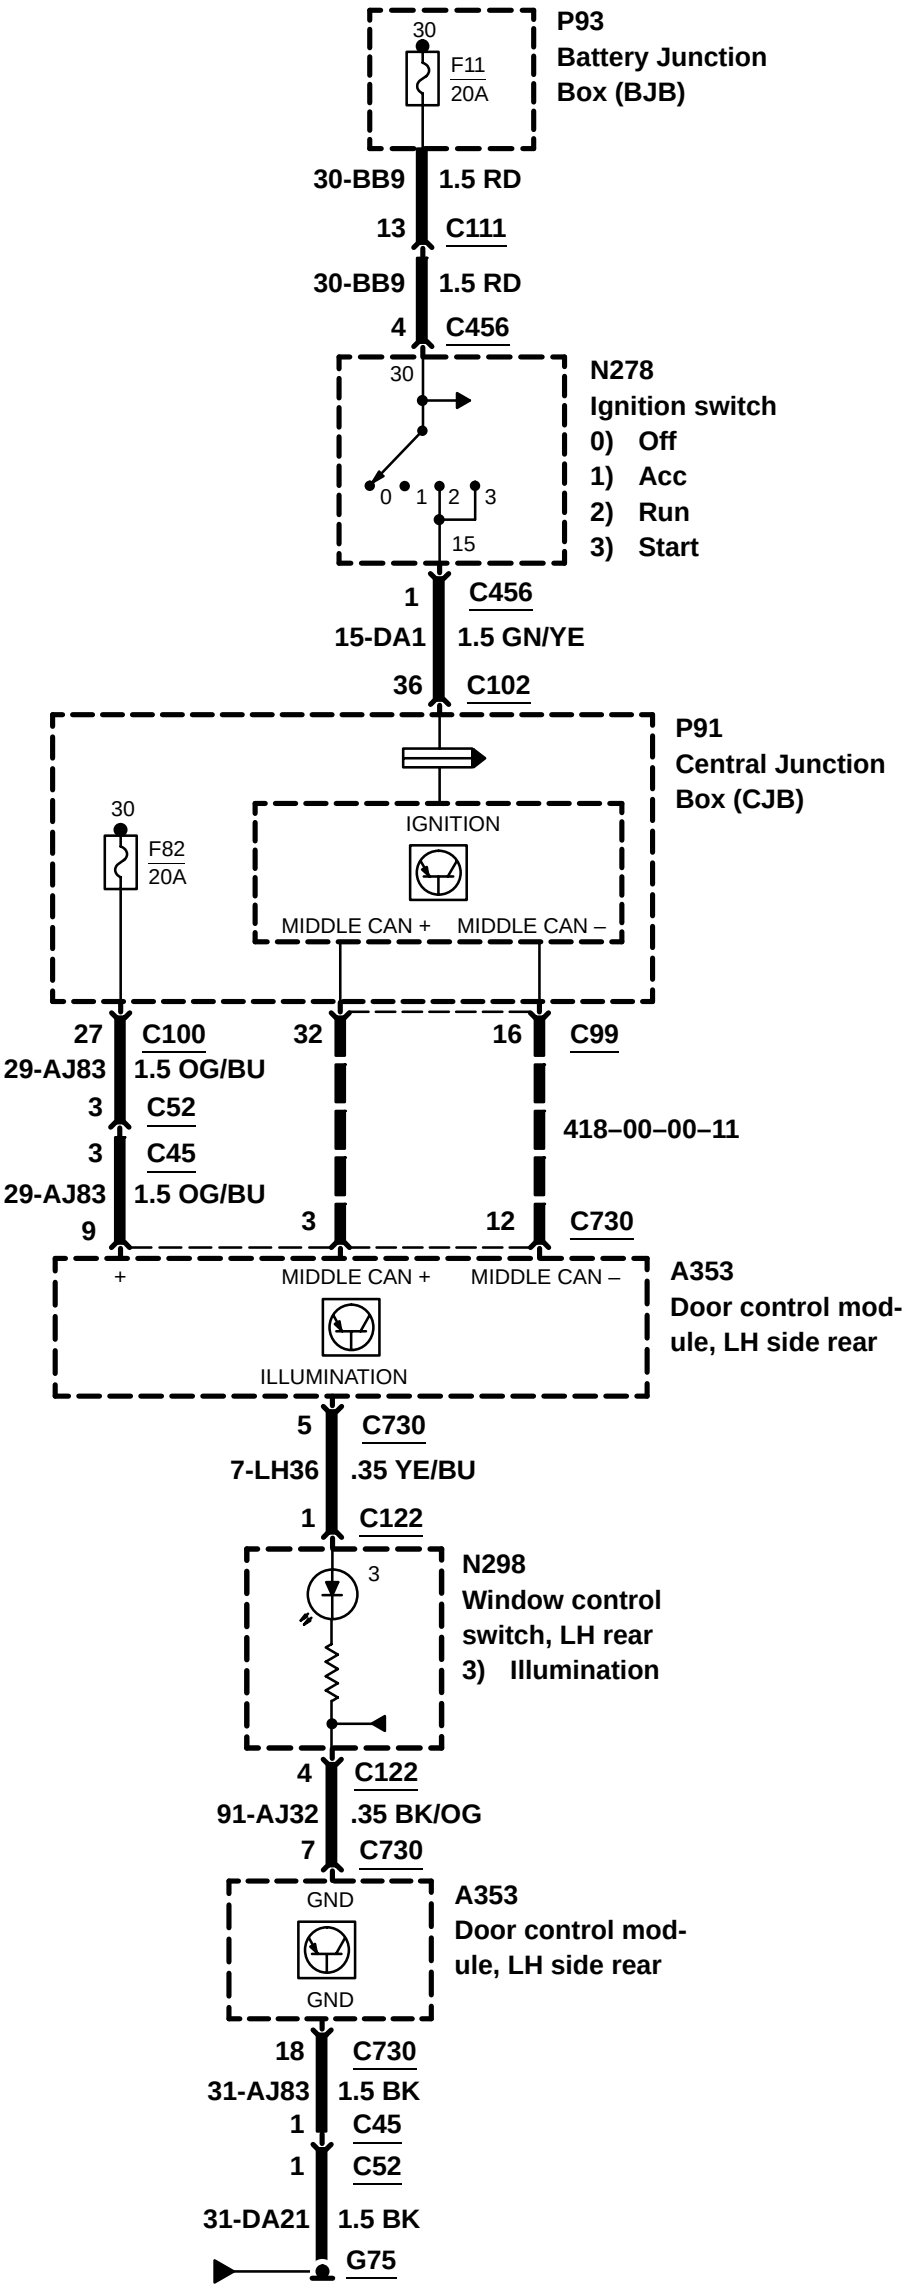


Instrument Cluster and Panel Illumination – with front and rear power windows

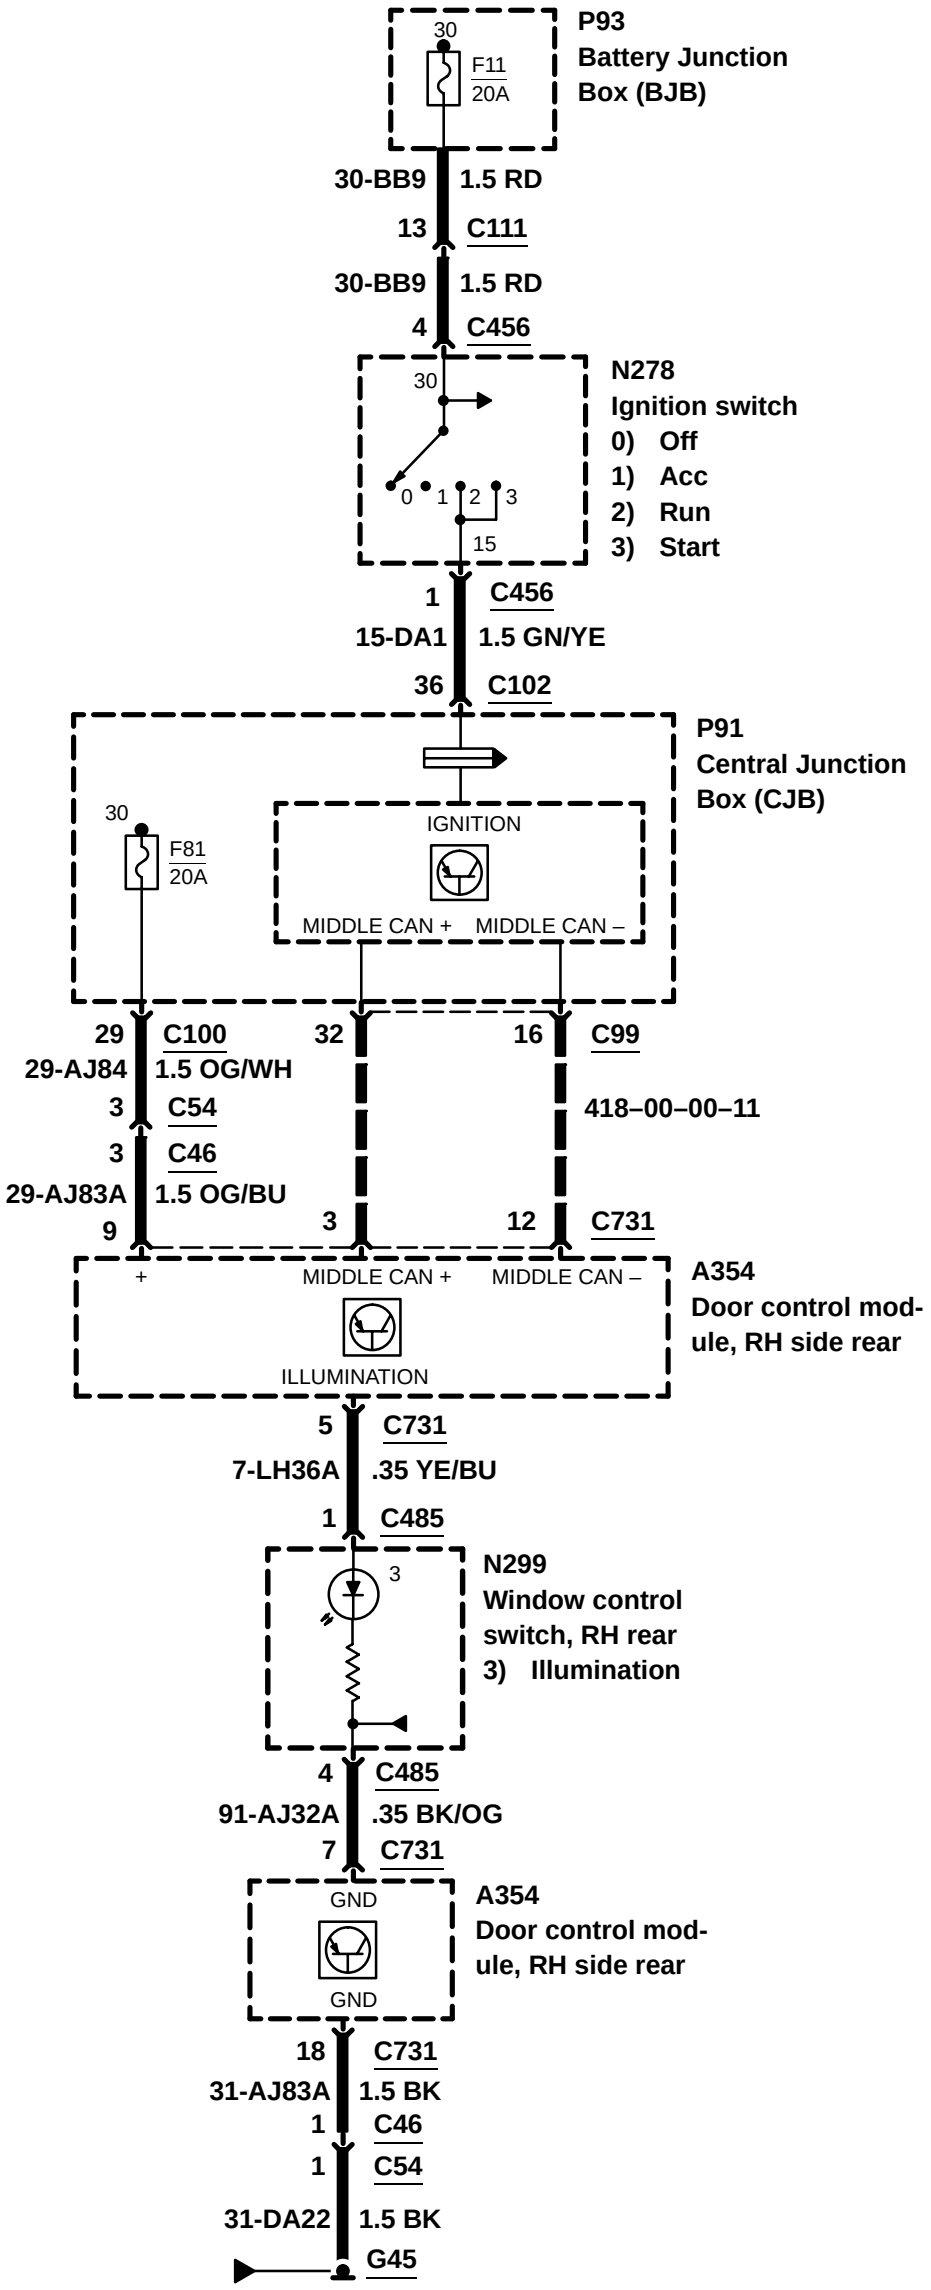

Instrument Cluster and Panel Illumination

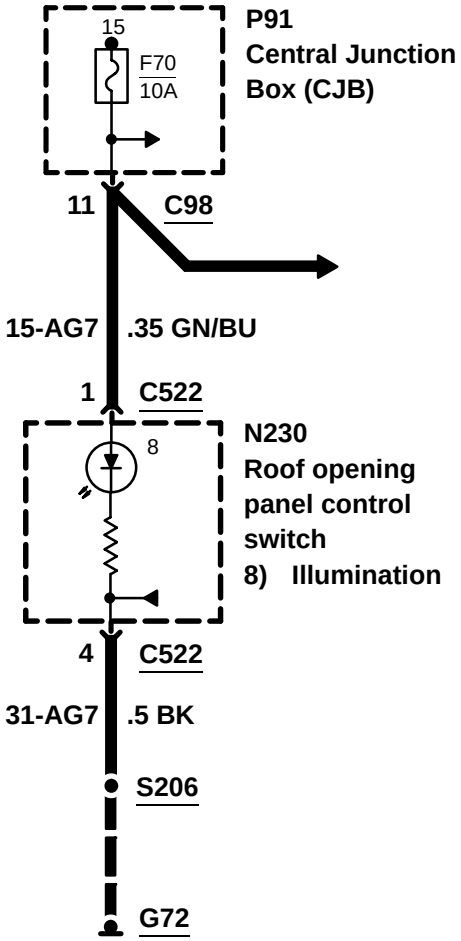


Instrument Cluster

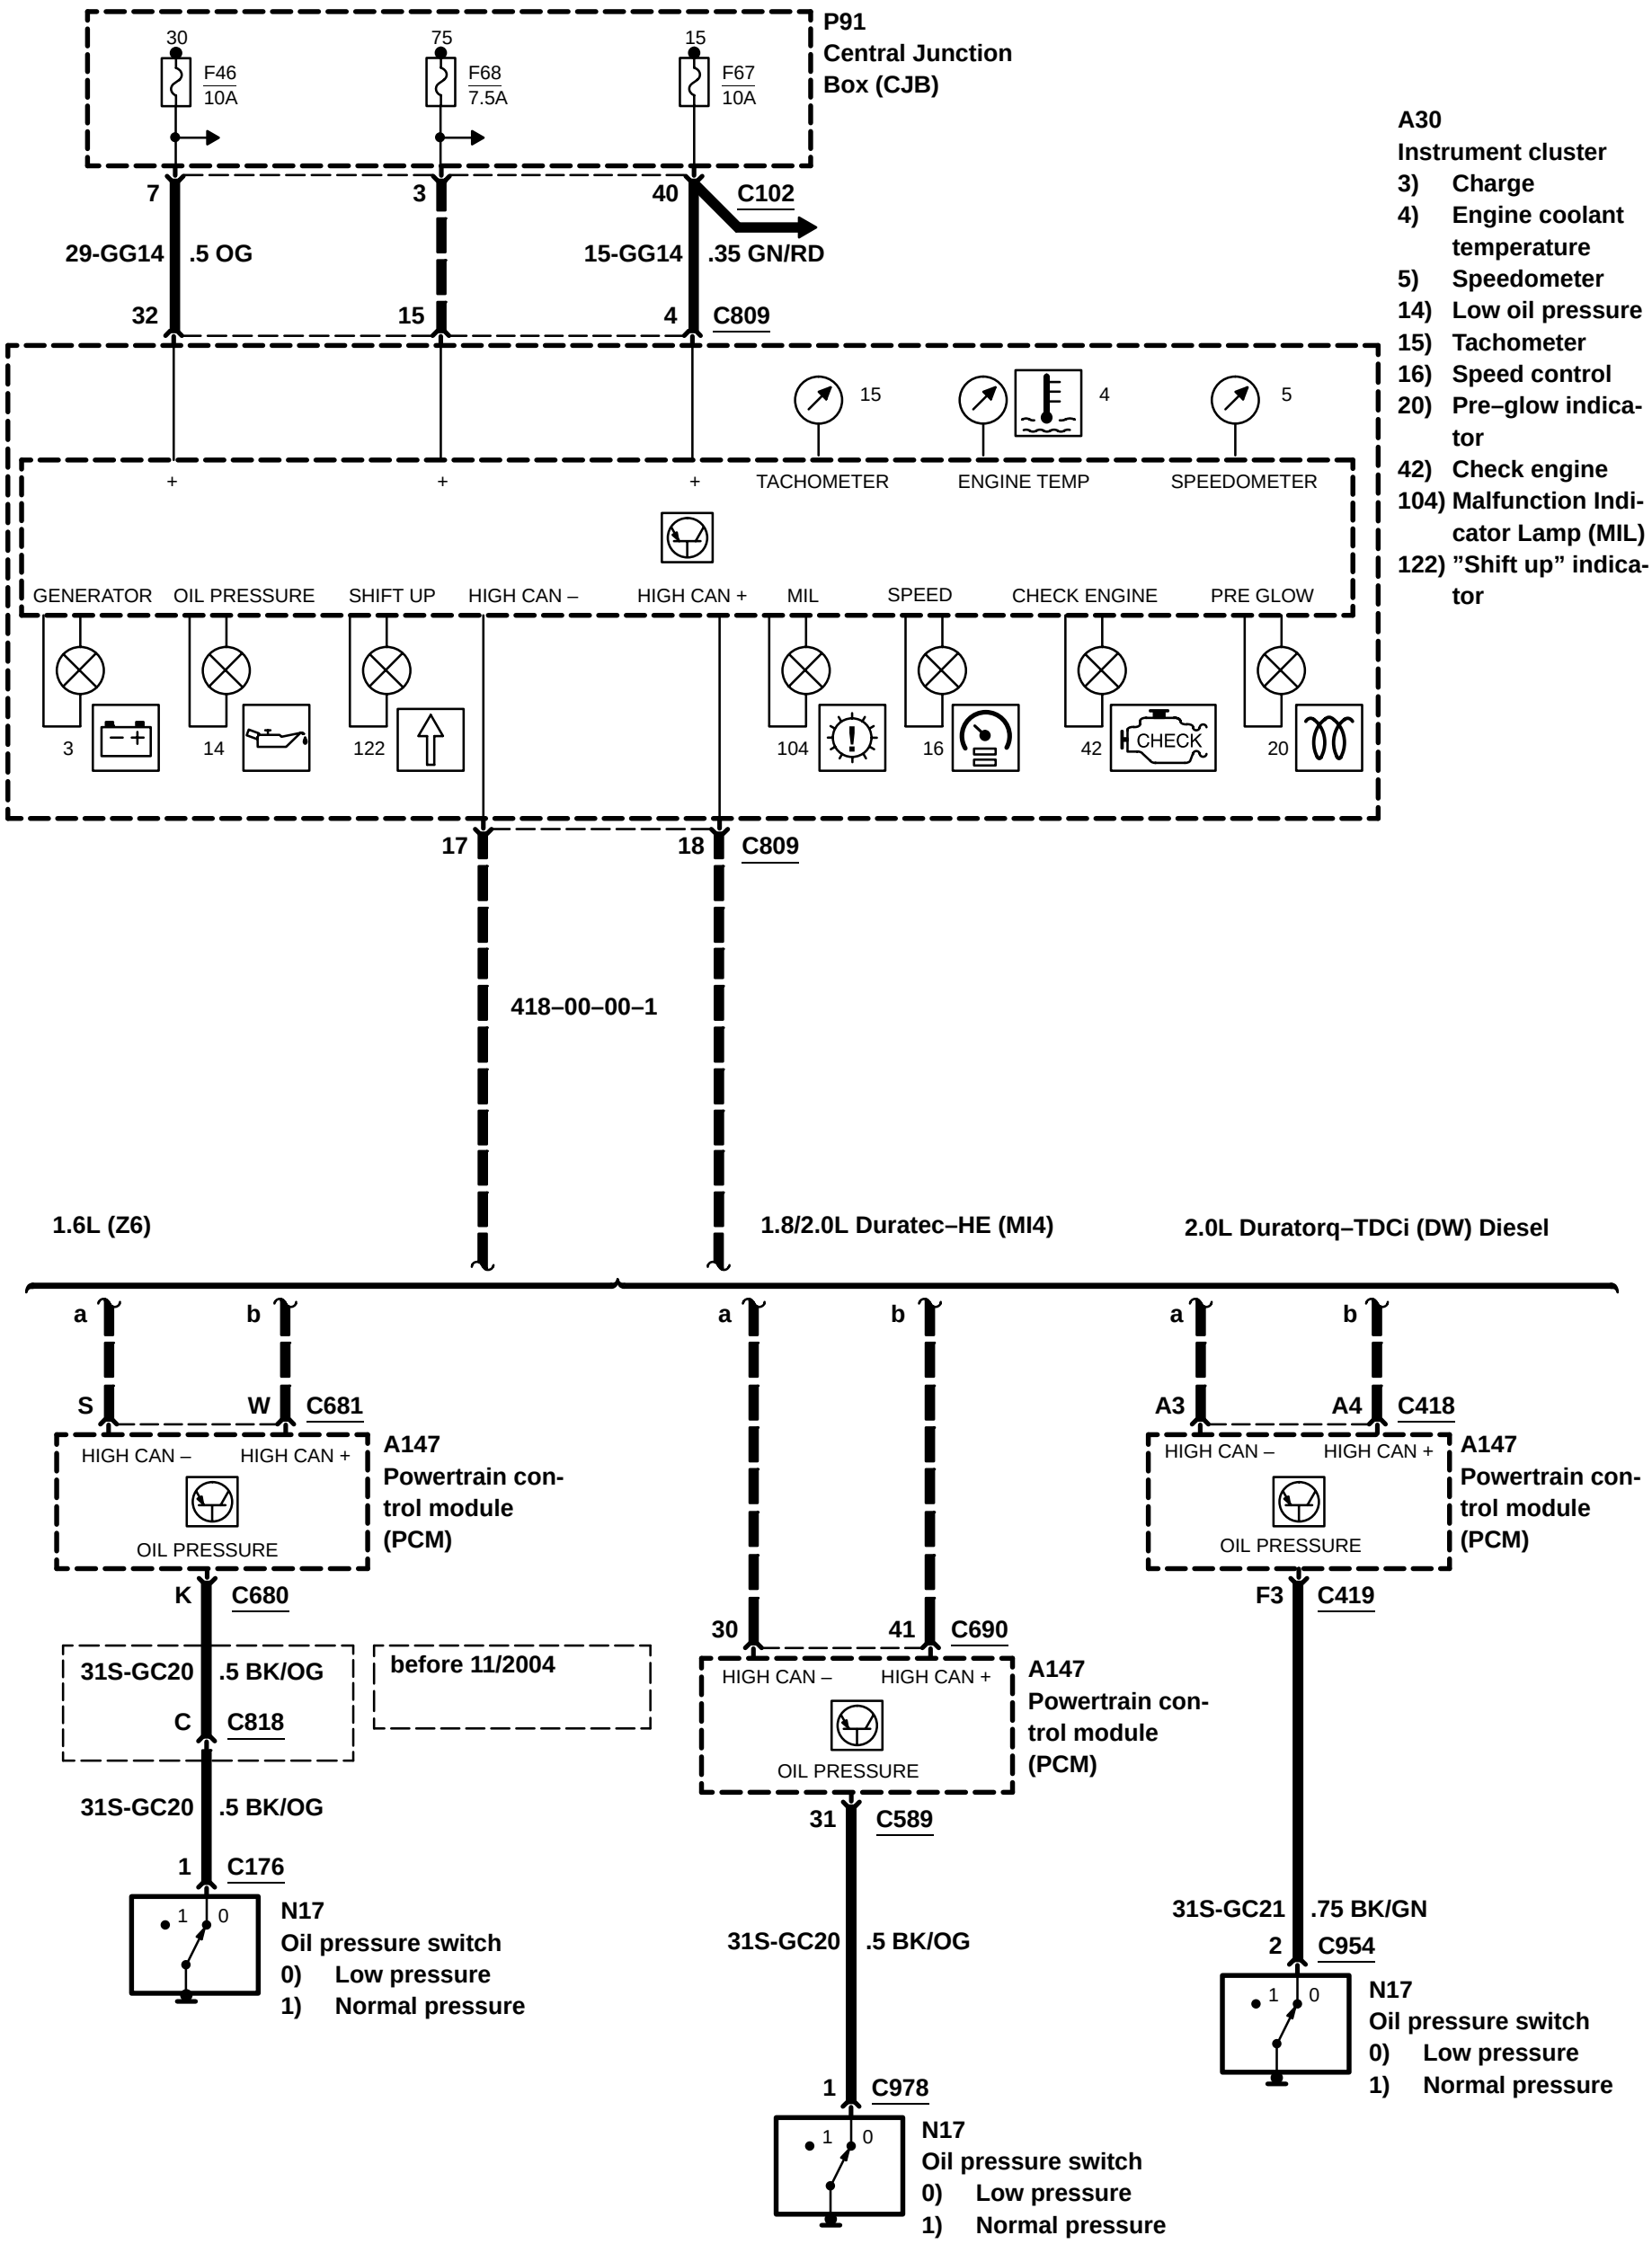


A30
Instrument cluster

3) Charge
4) Engine coolant temperature
5) Speedometer
14) Low oil pressure
15) Tachometer
16) Speed control
20) Pre–glow indicator
42) Check engine
104) Malfunction Indicator Lamp (MIL)
122) "Shift up" indicator


Instrument Cluster

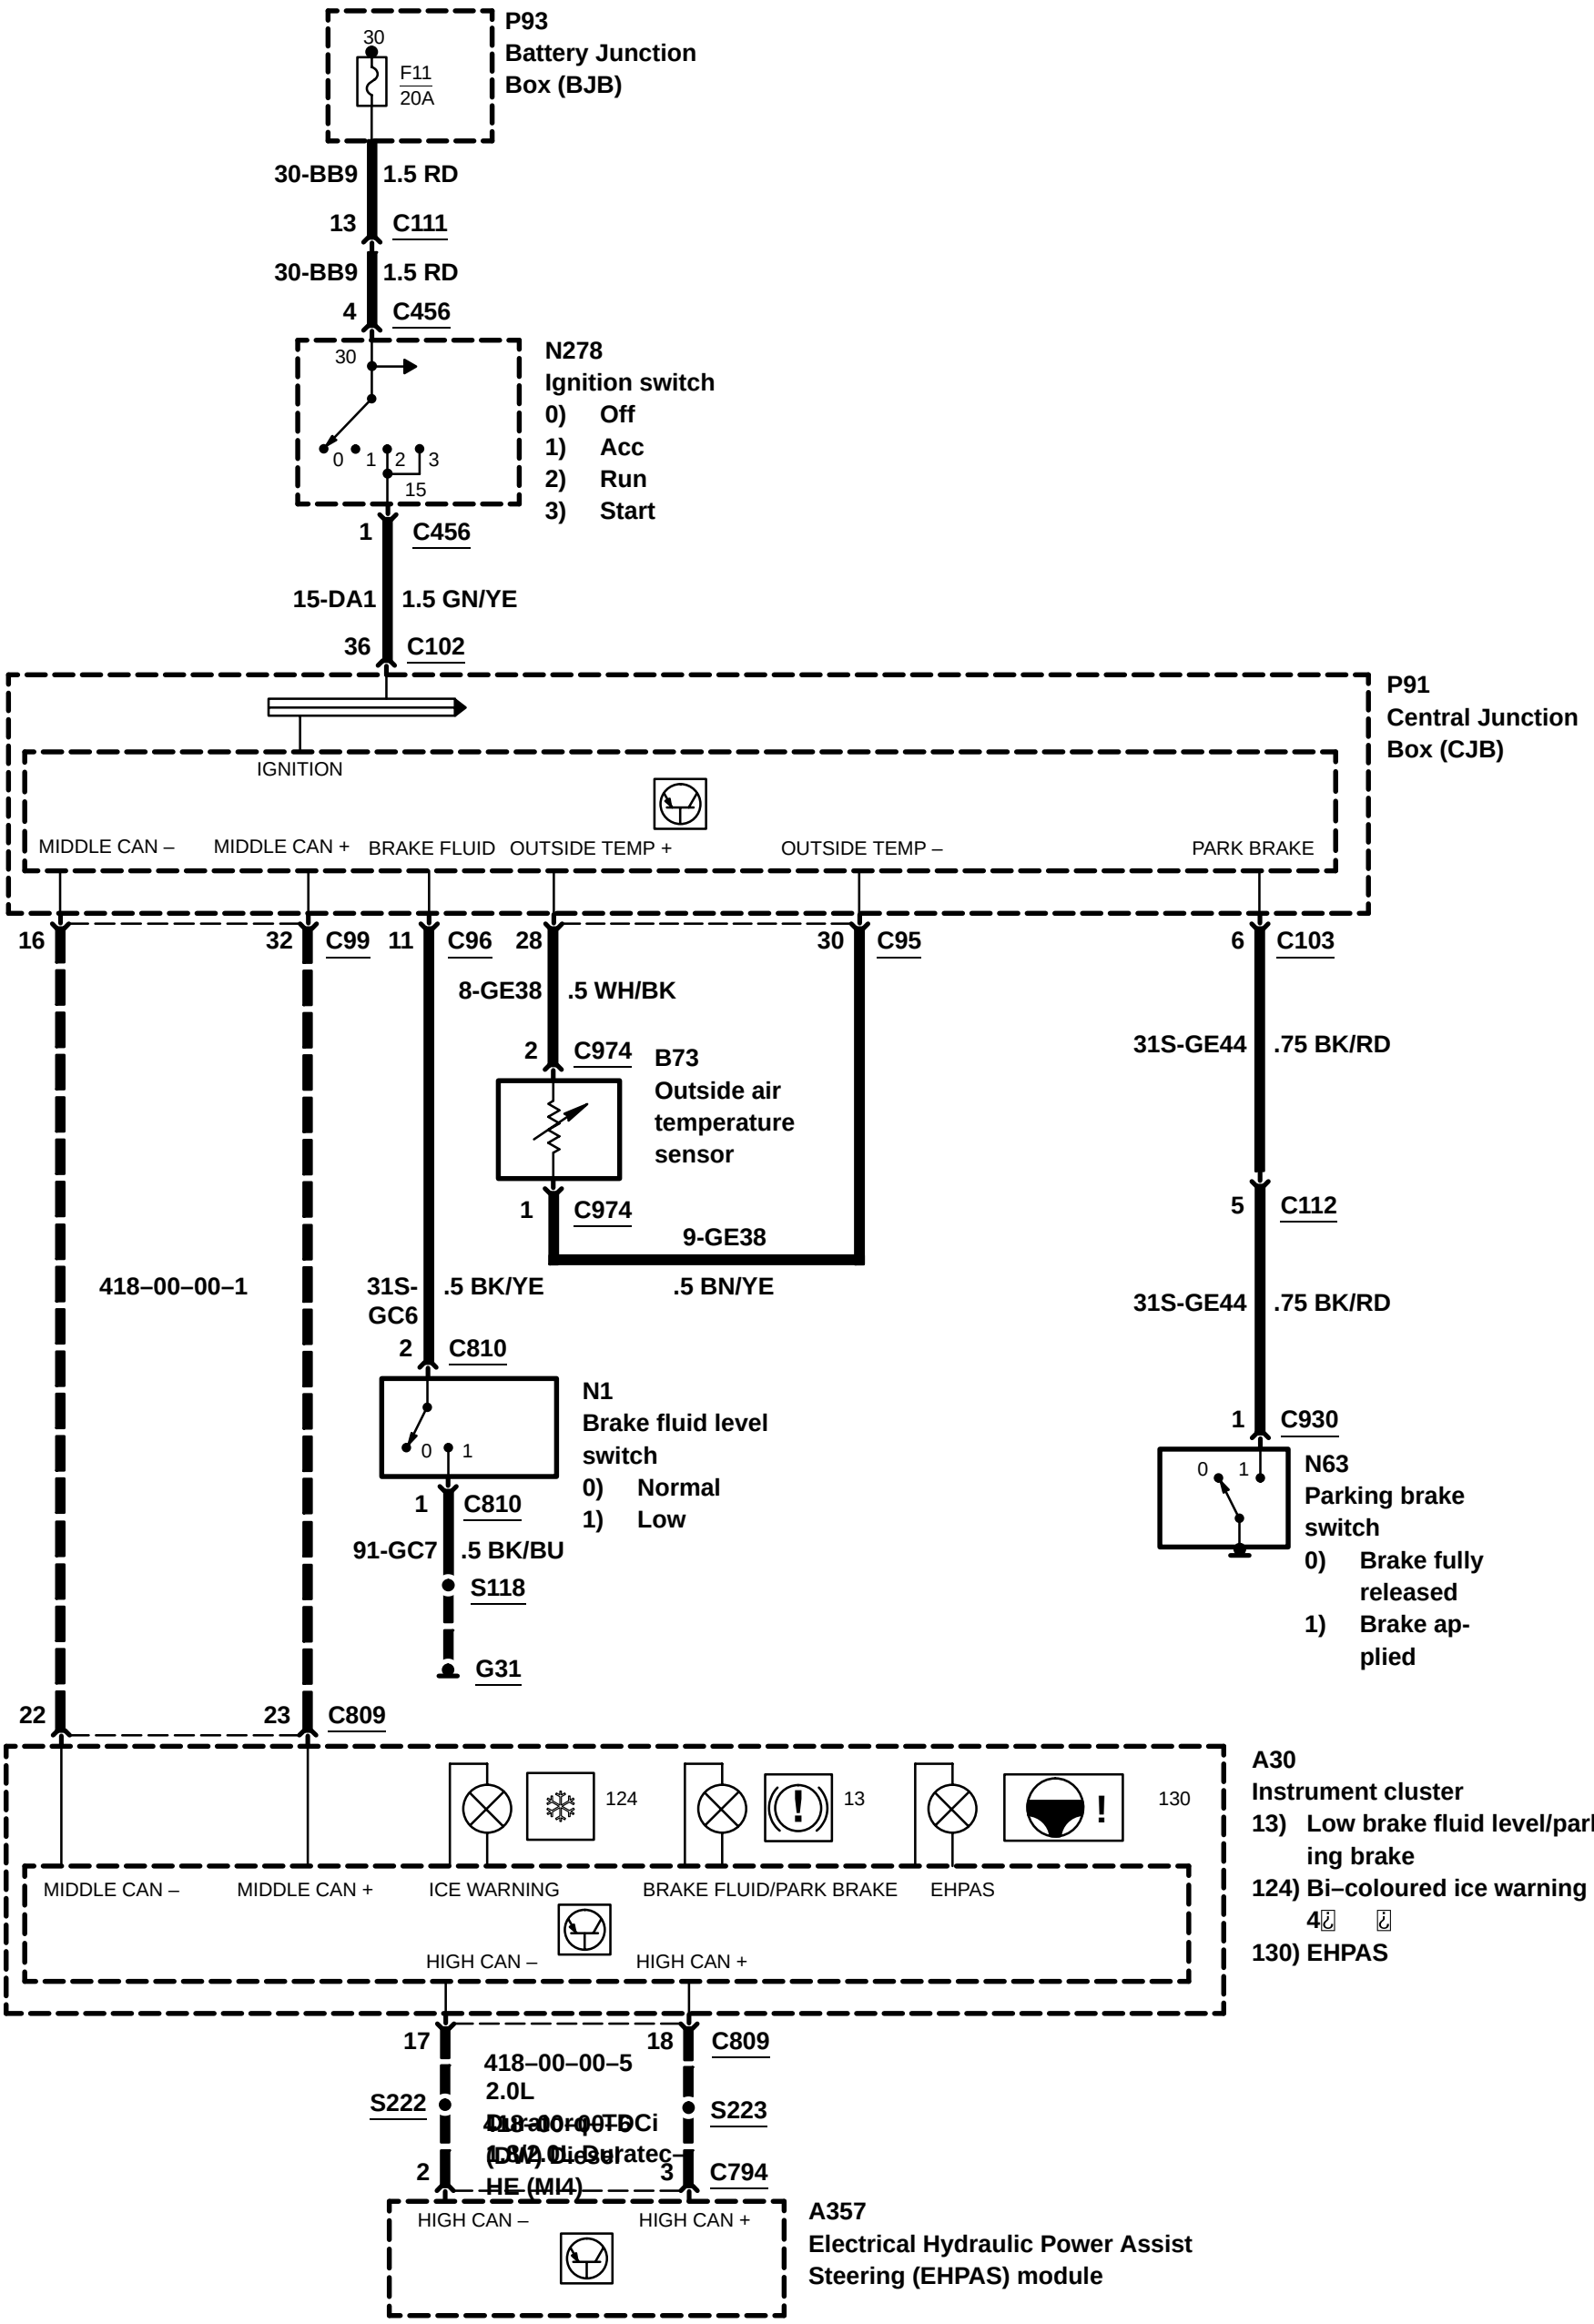


Instrument Cluster

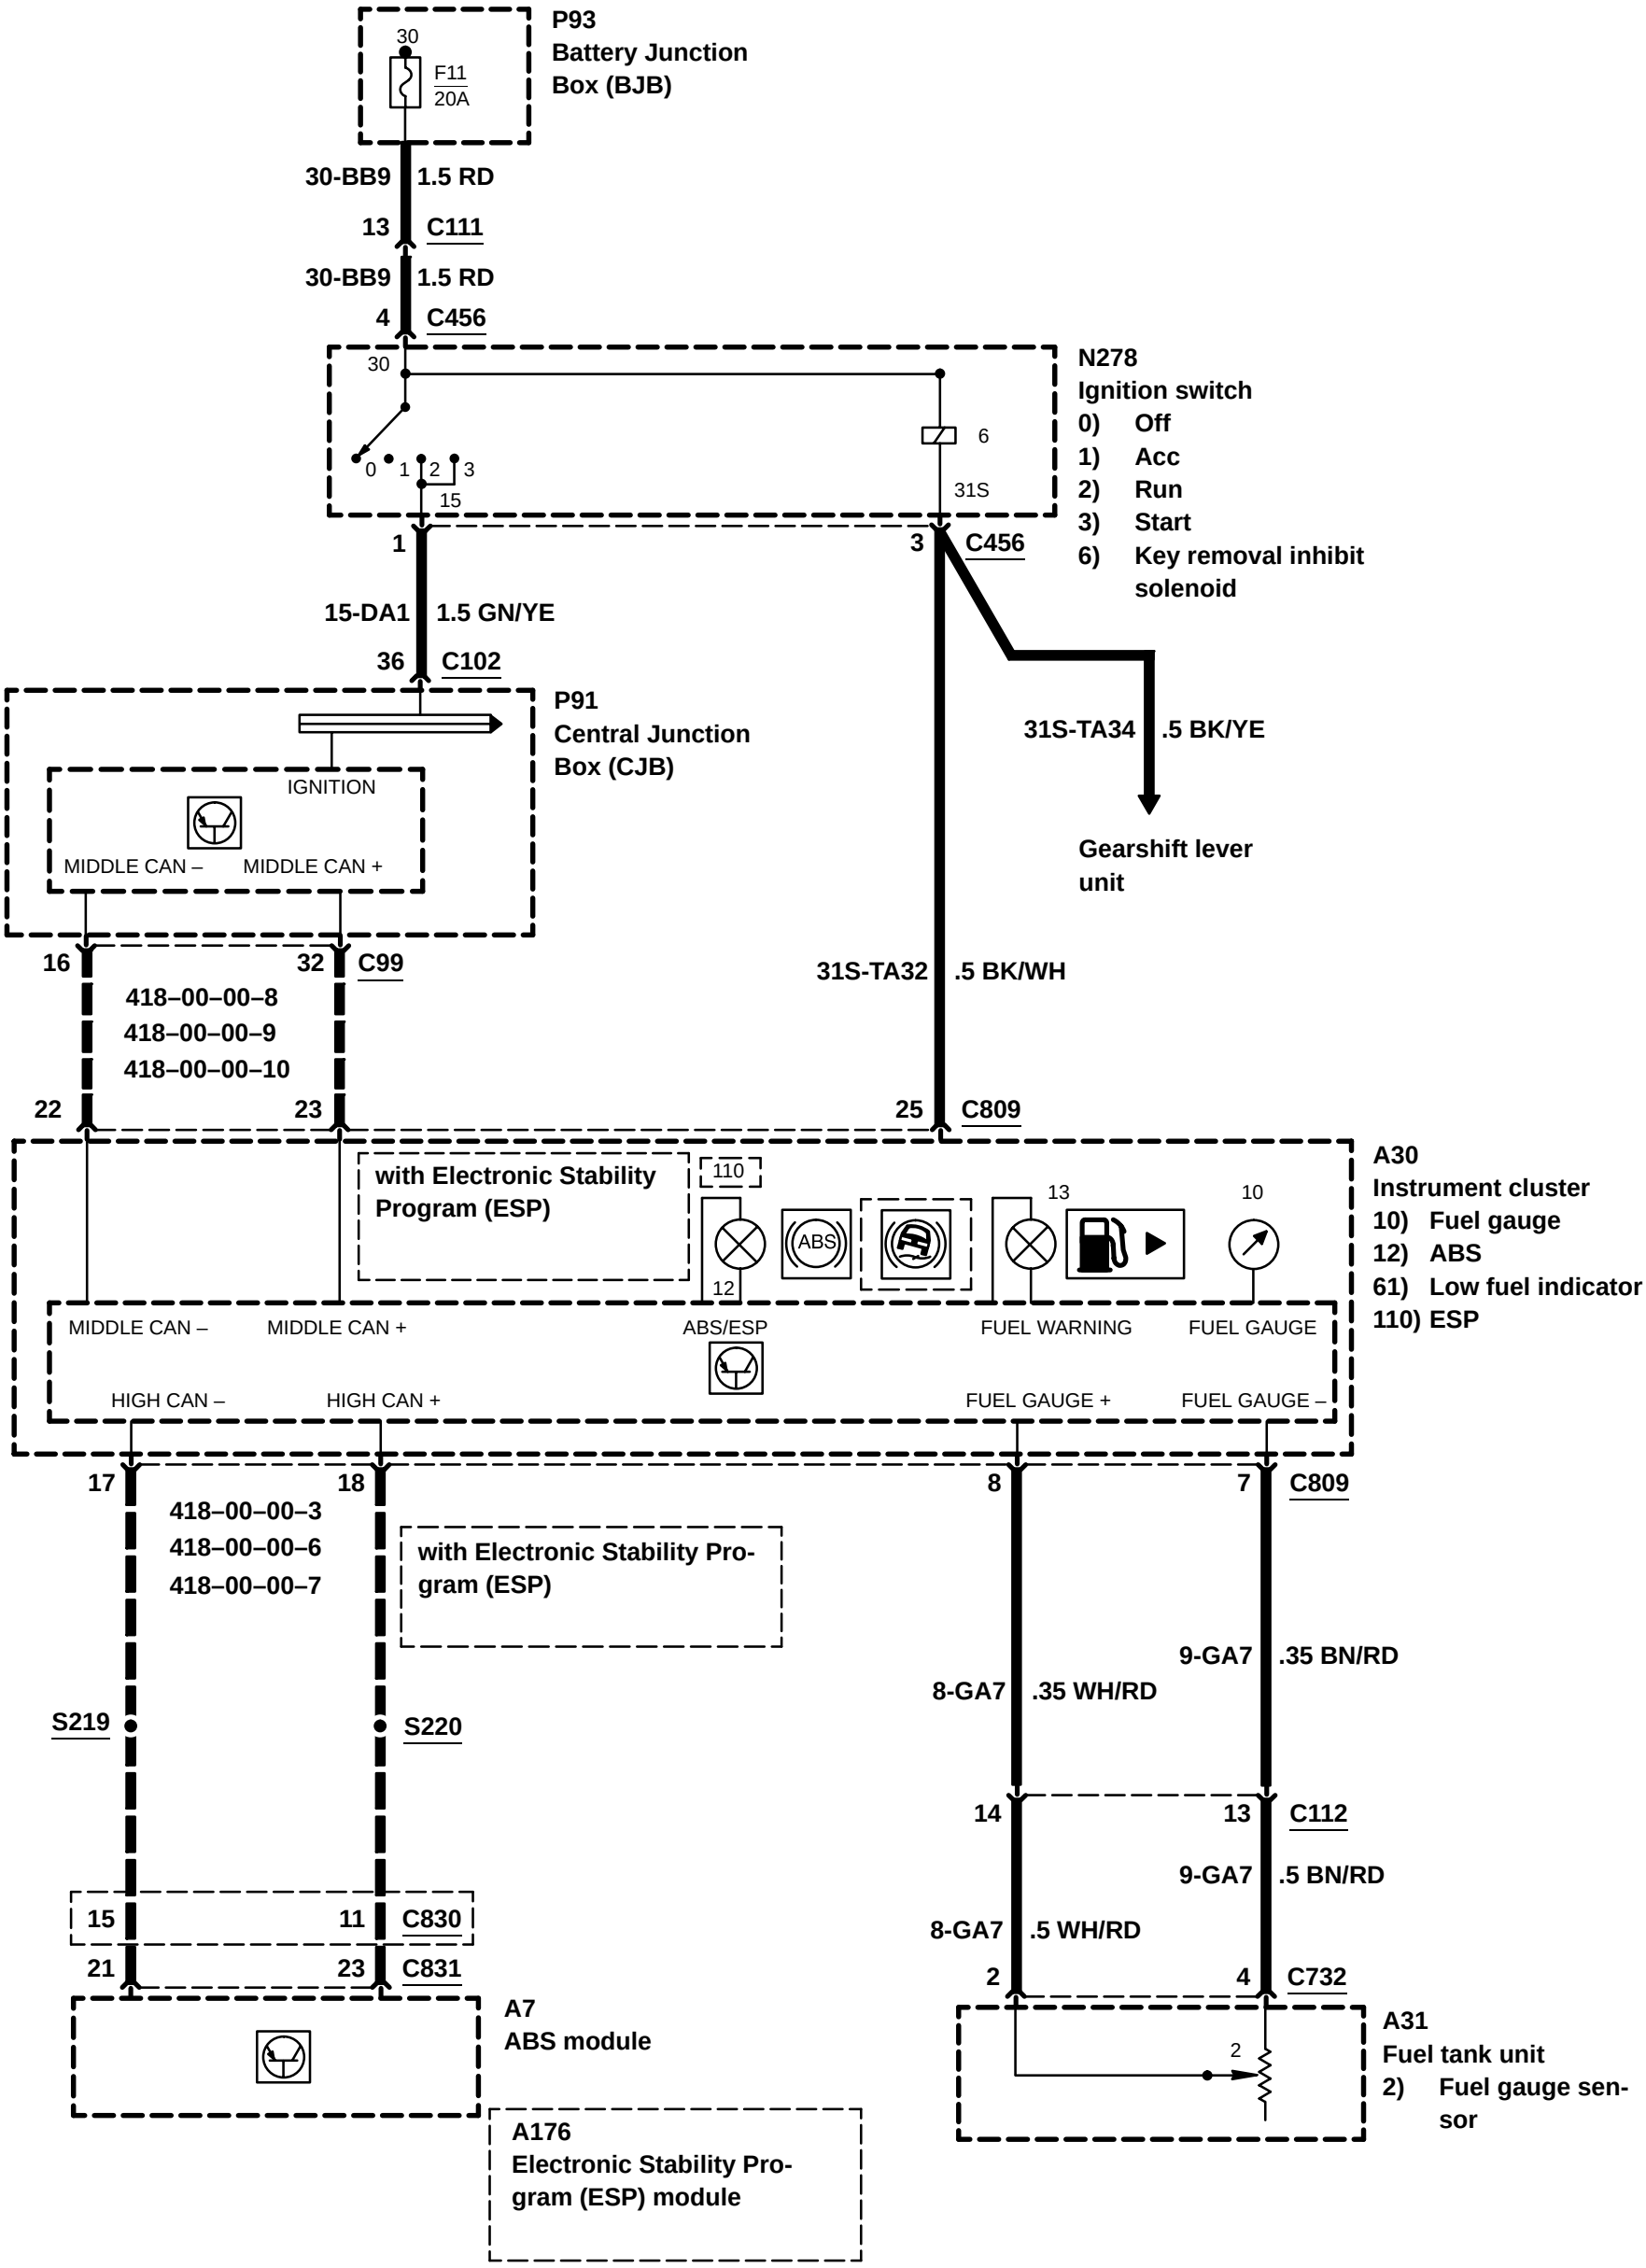


Instrument Cluster

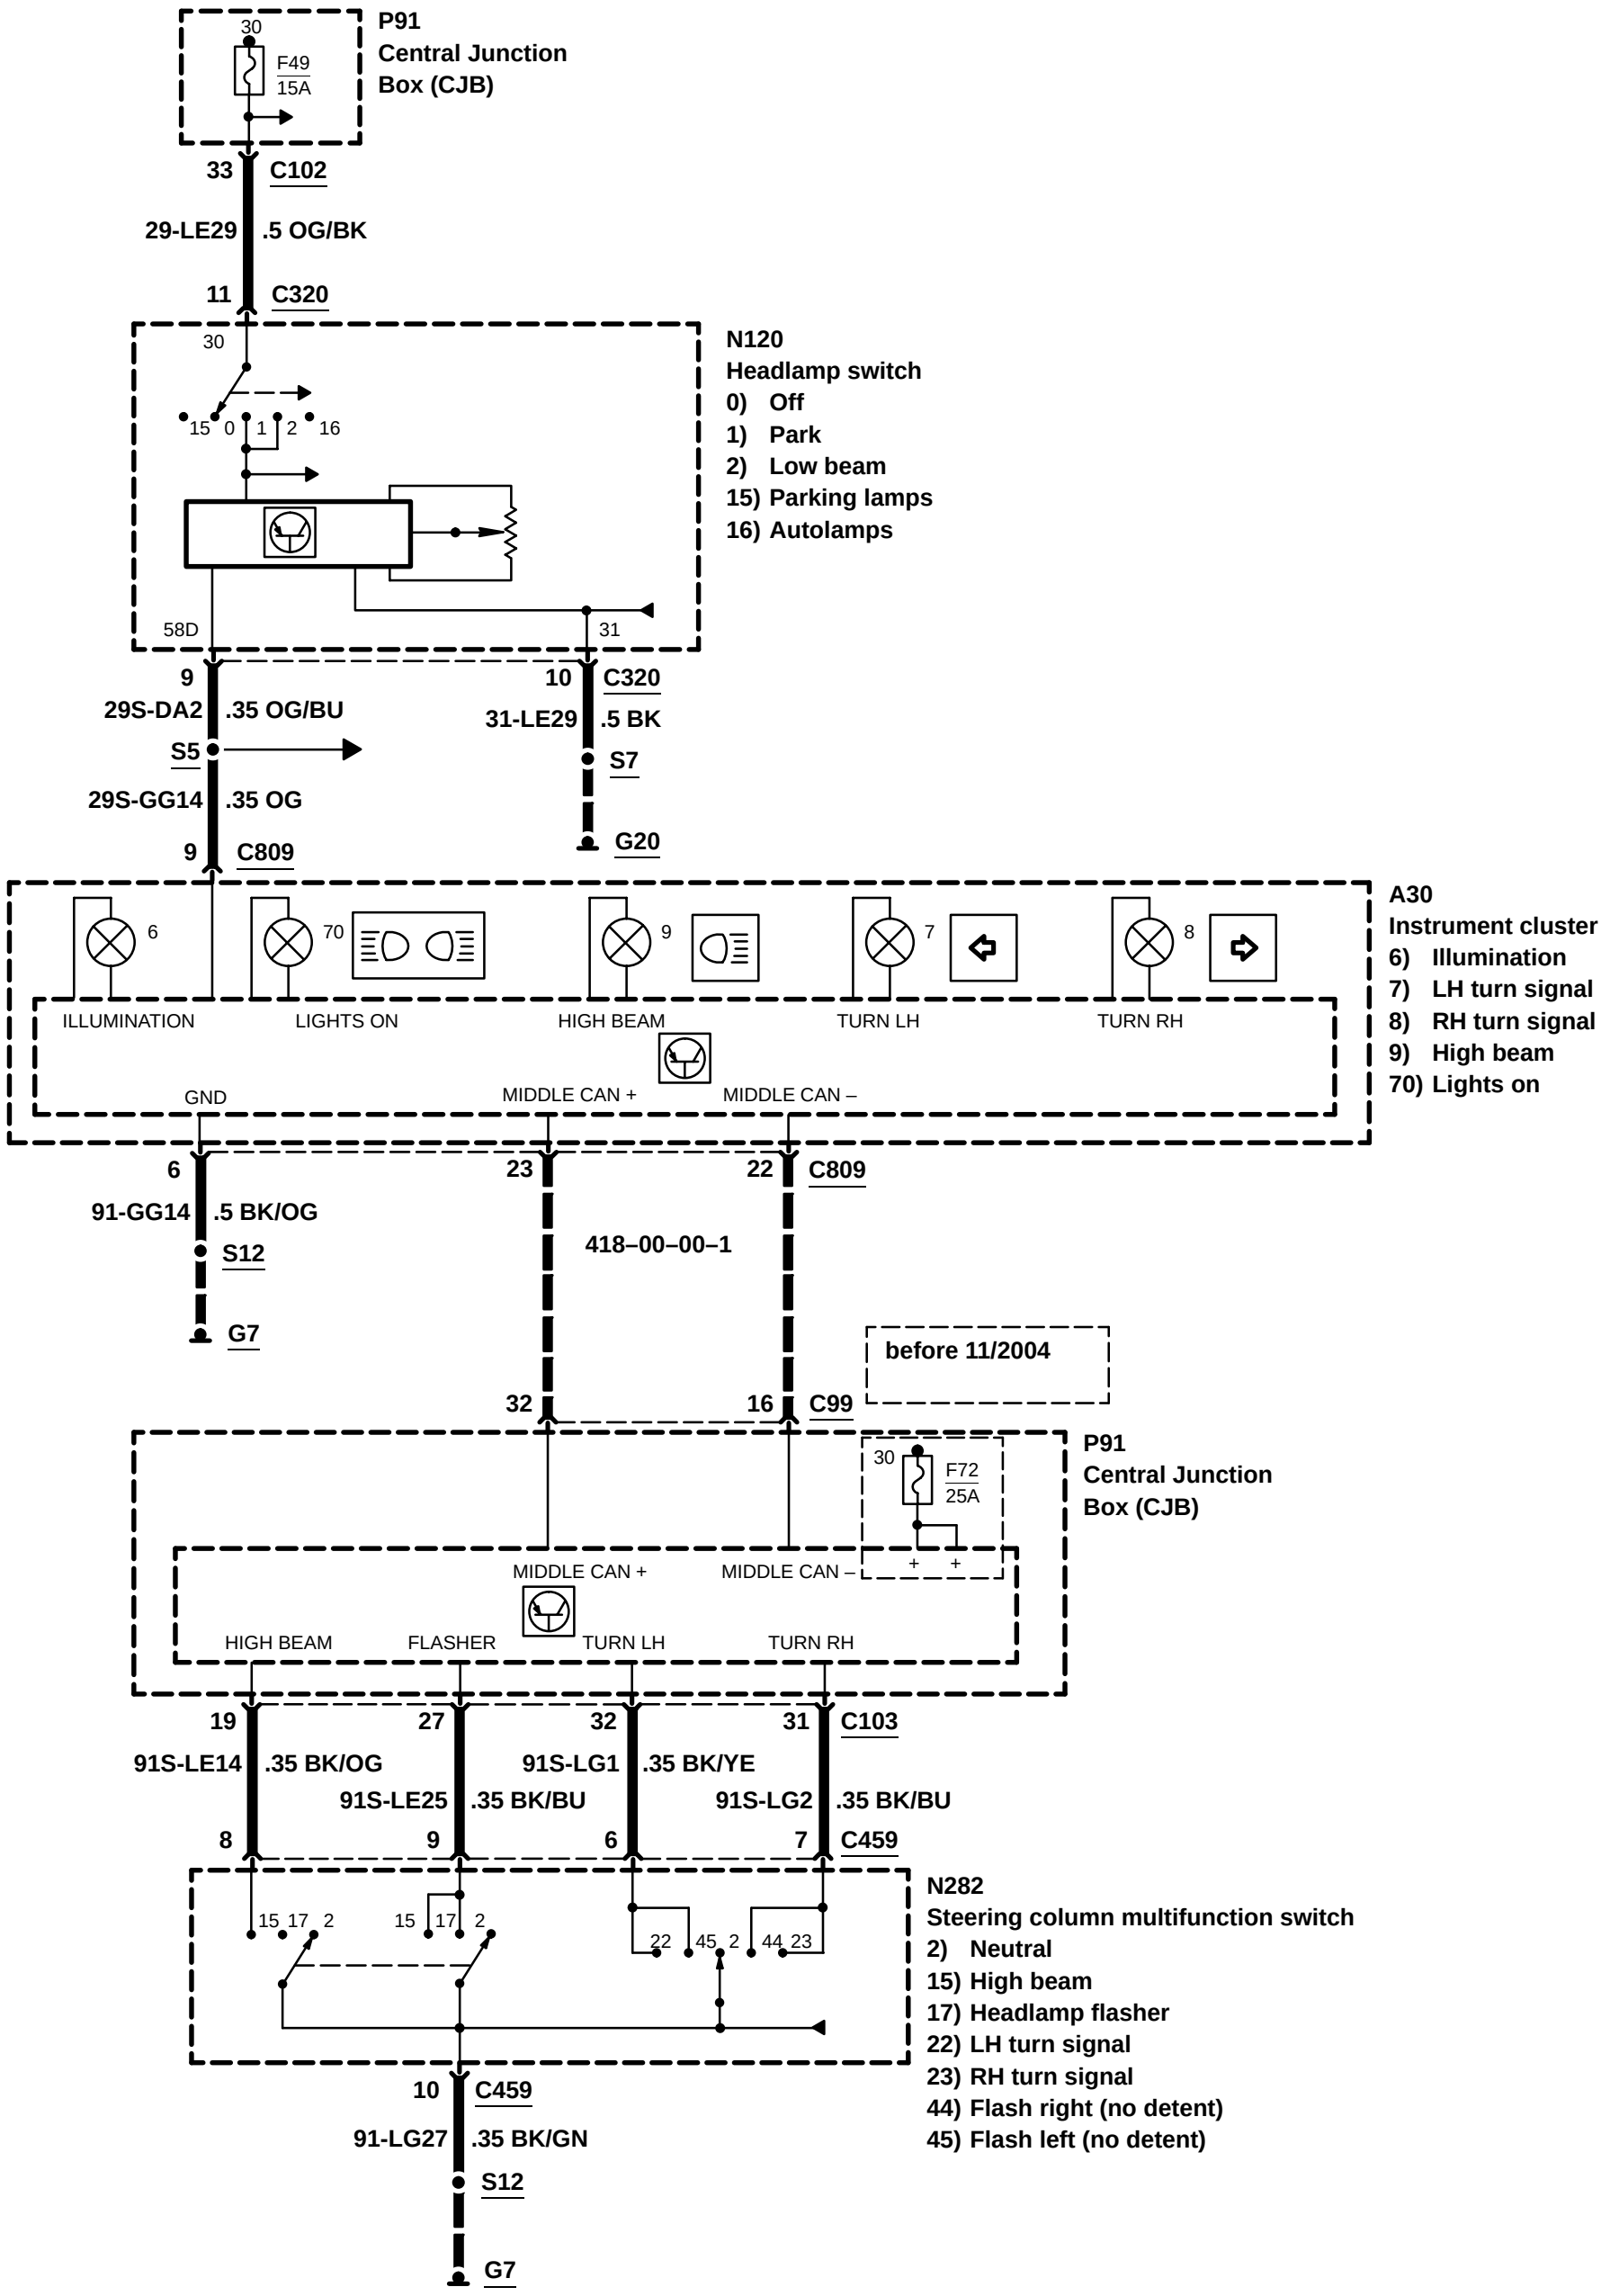


Instrument Cluster

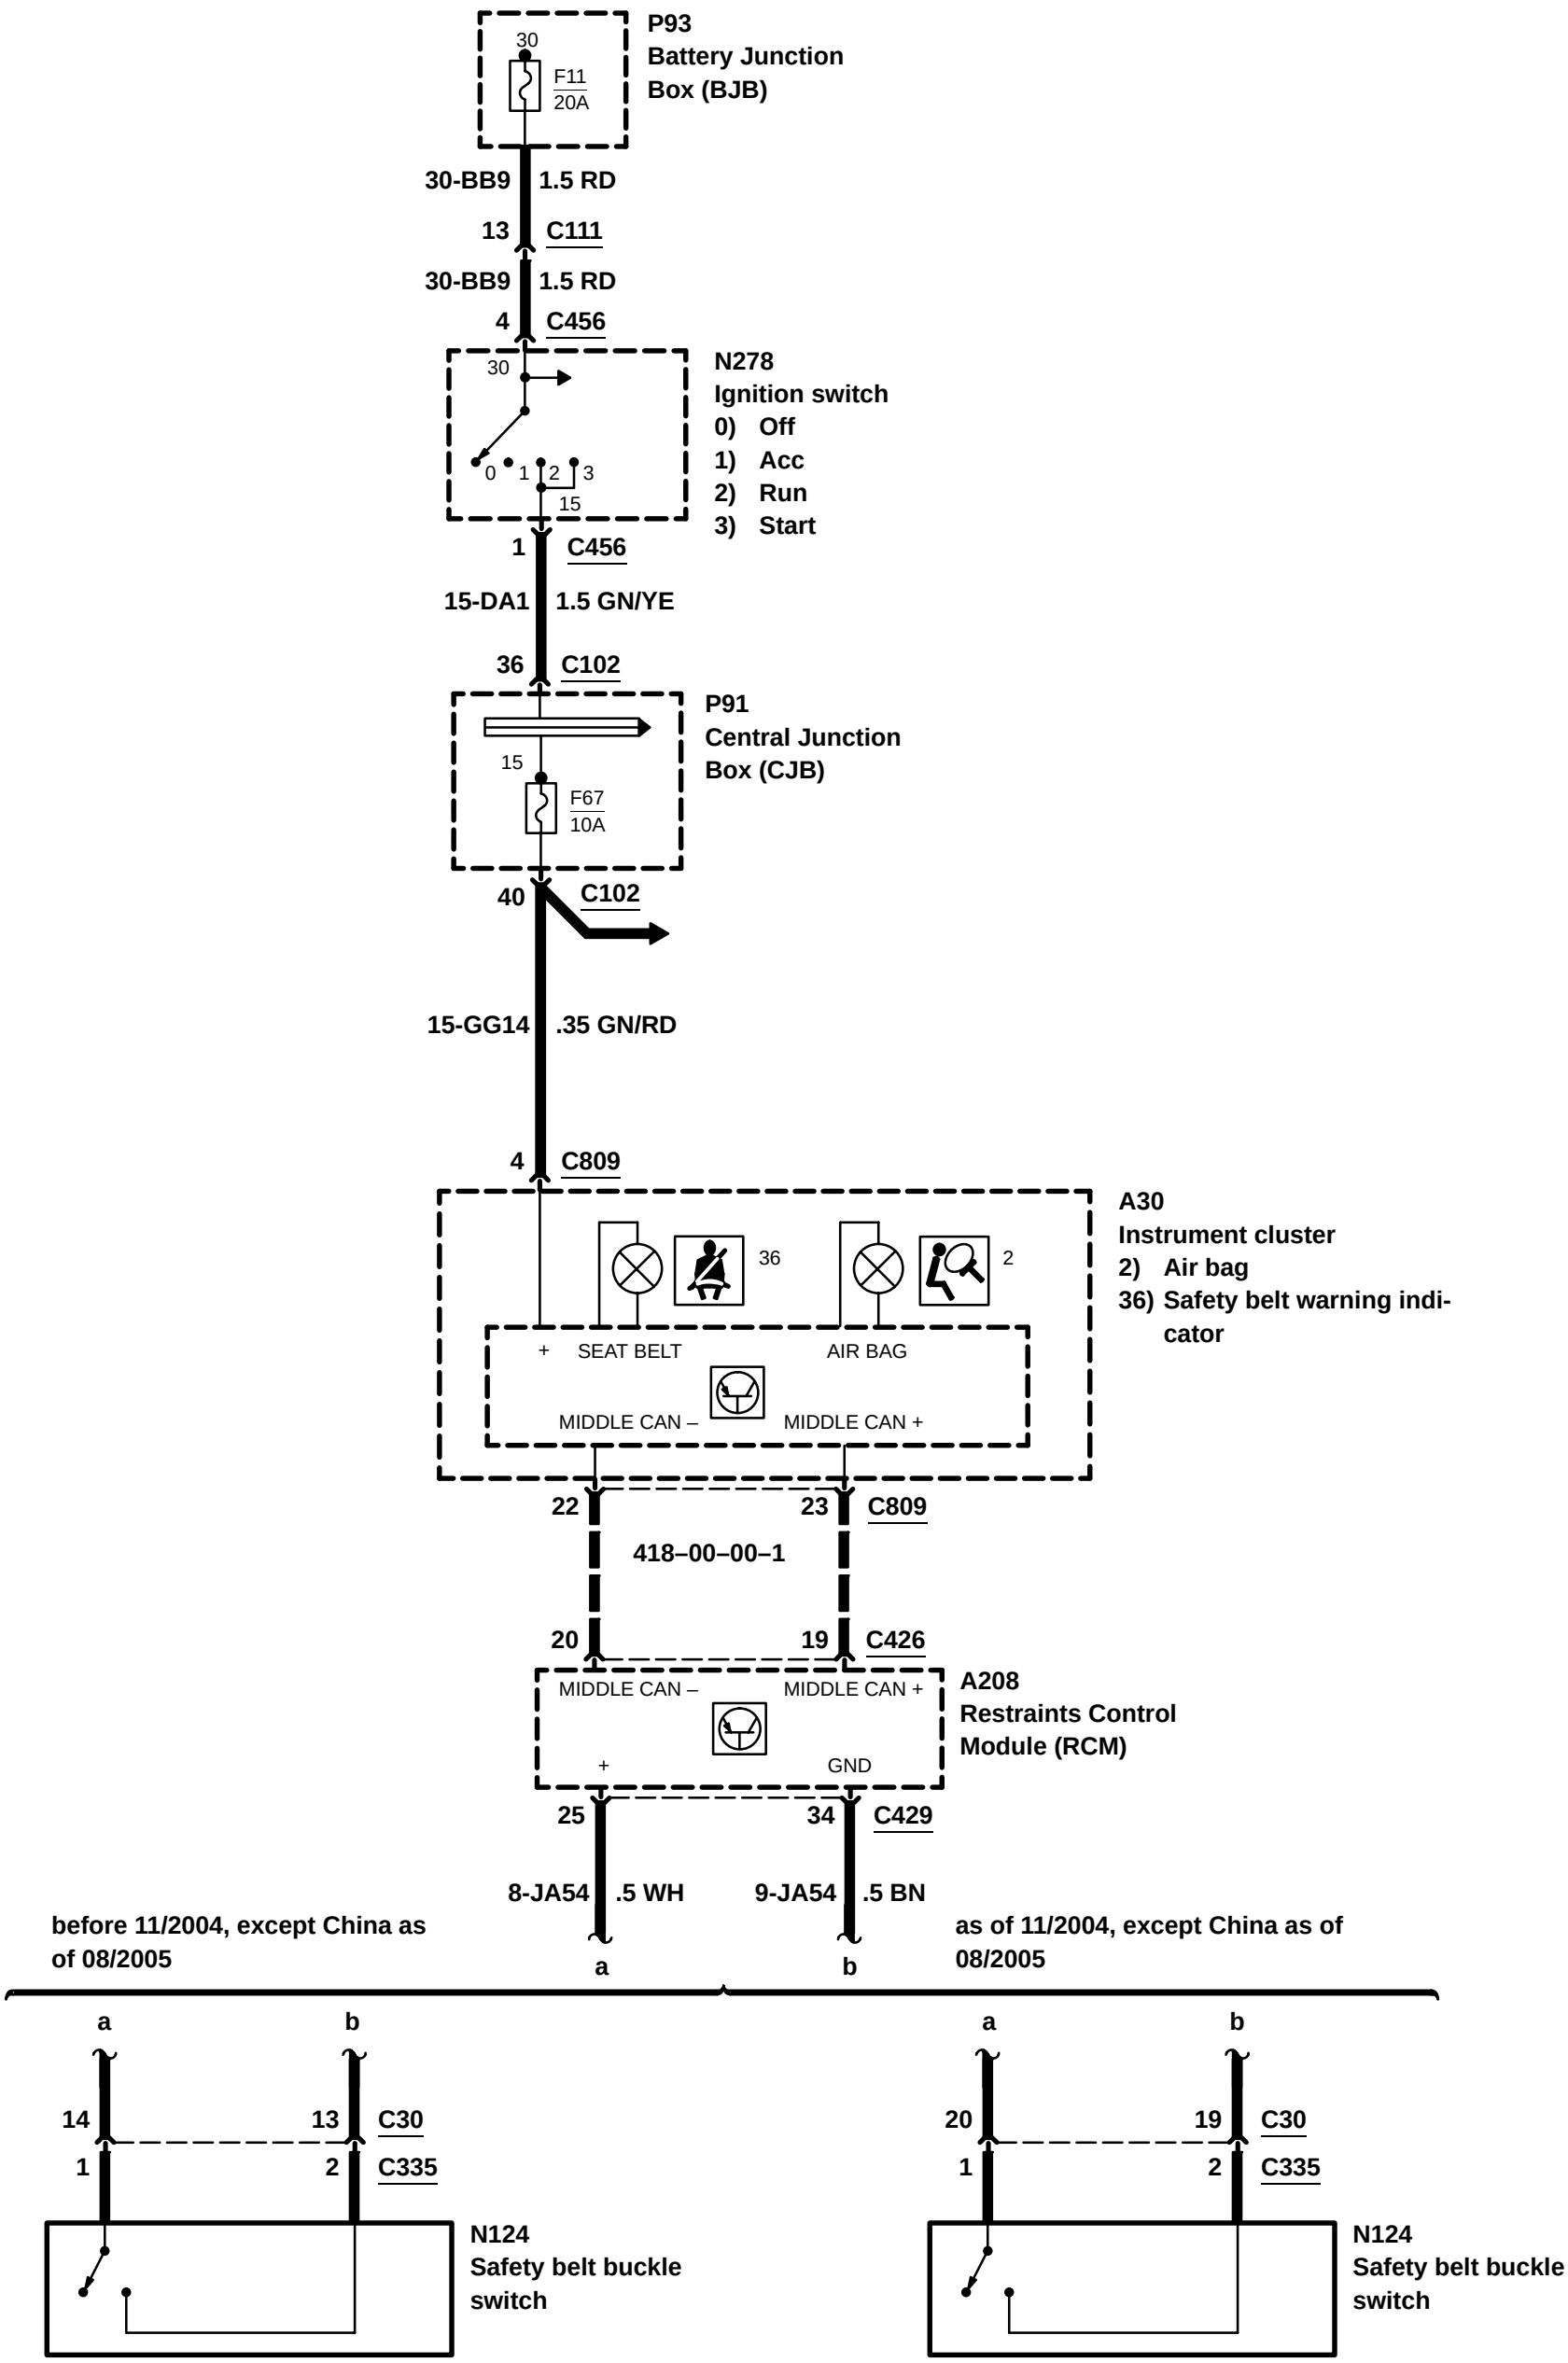


Instrument Cluster

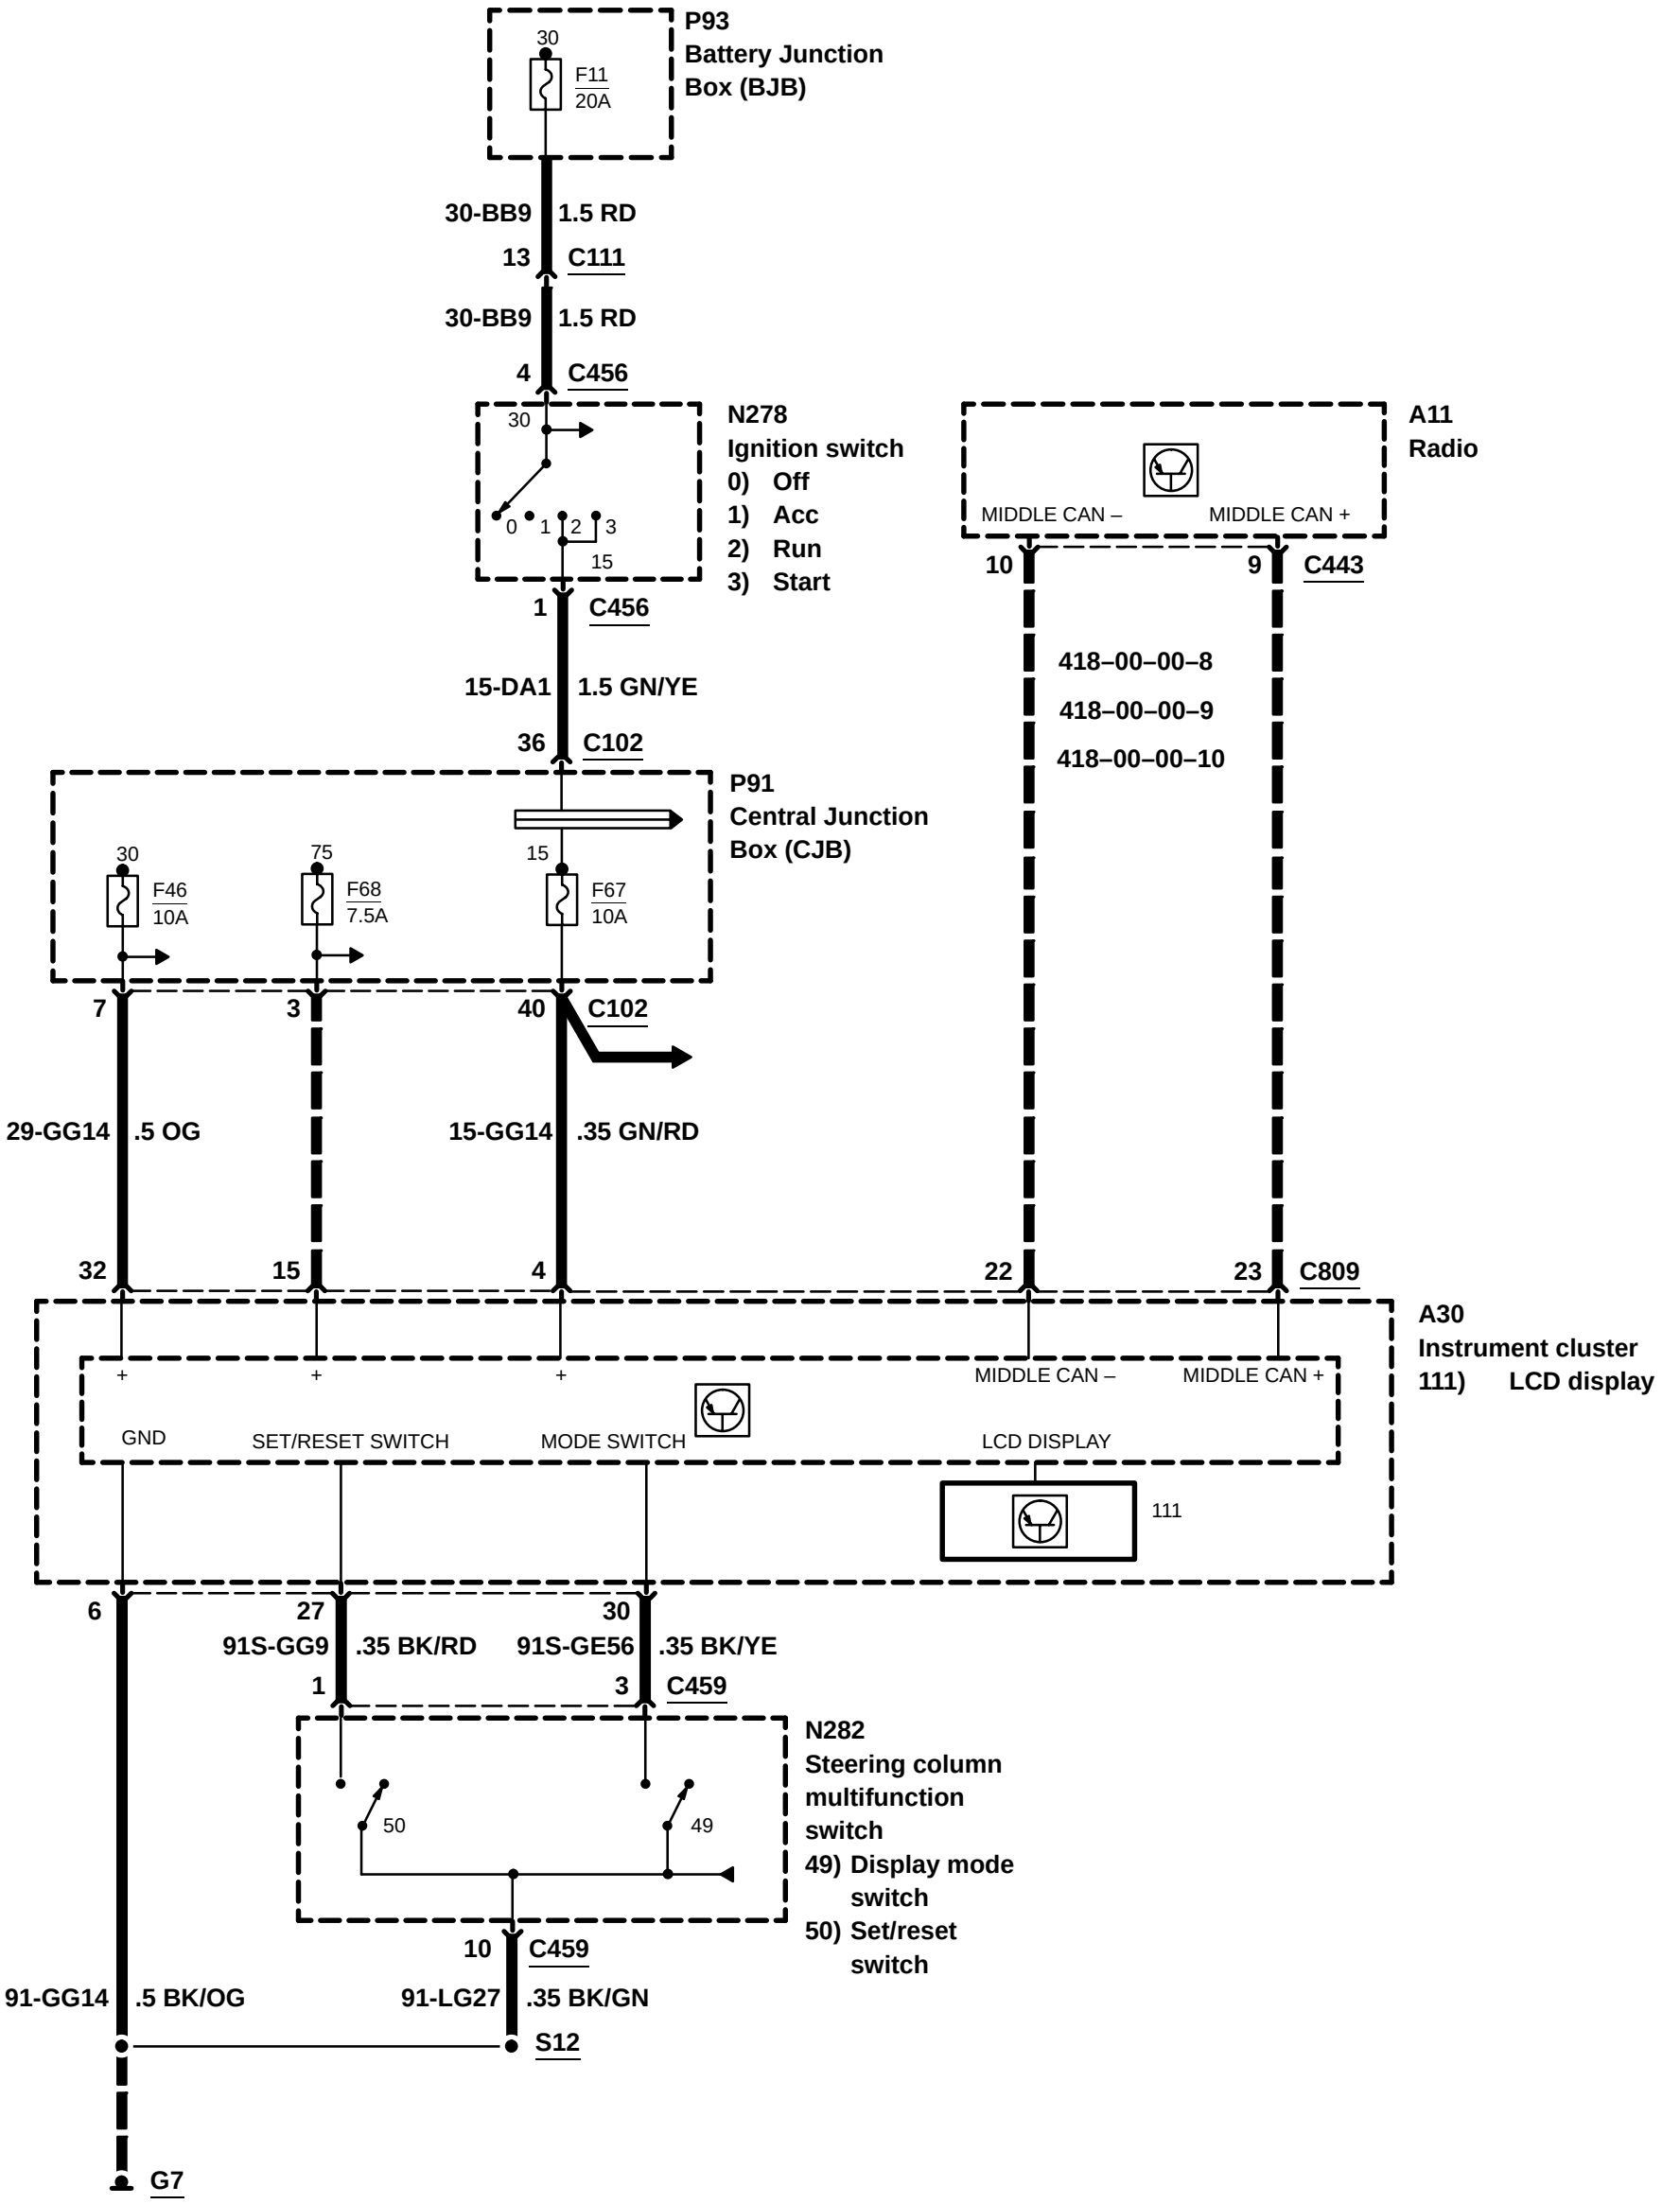


Instrument Cluster – with front power windows

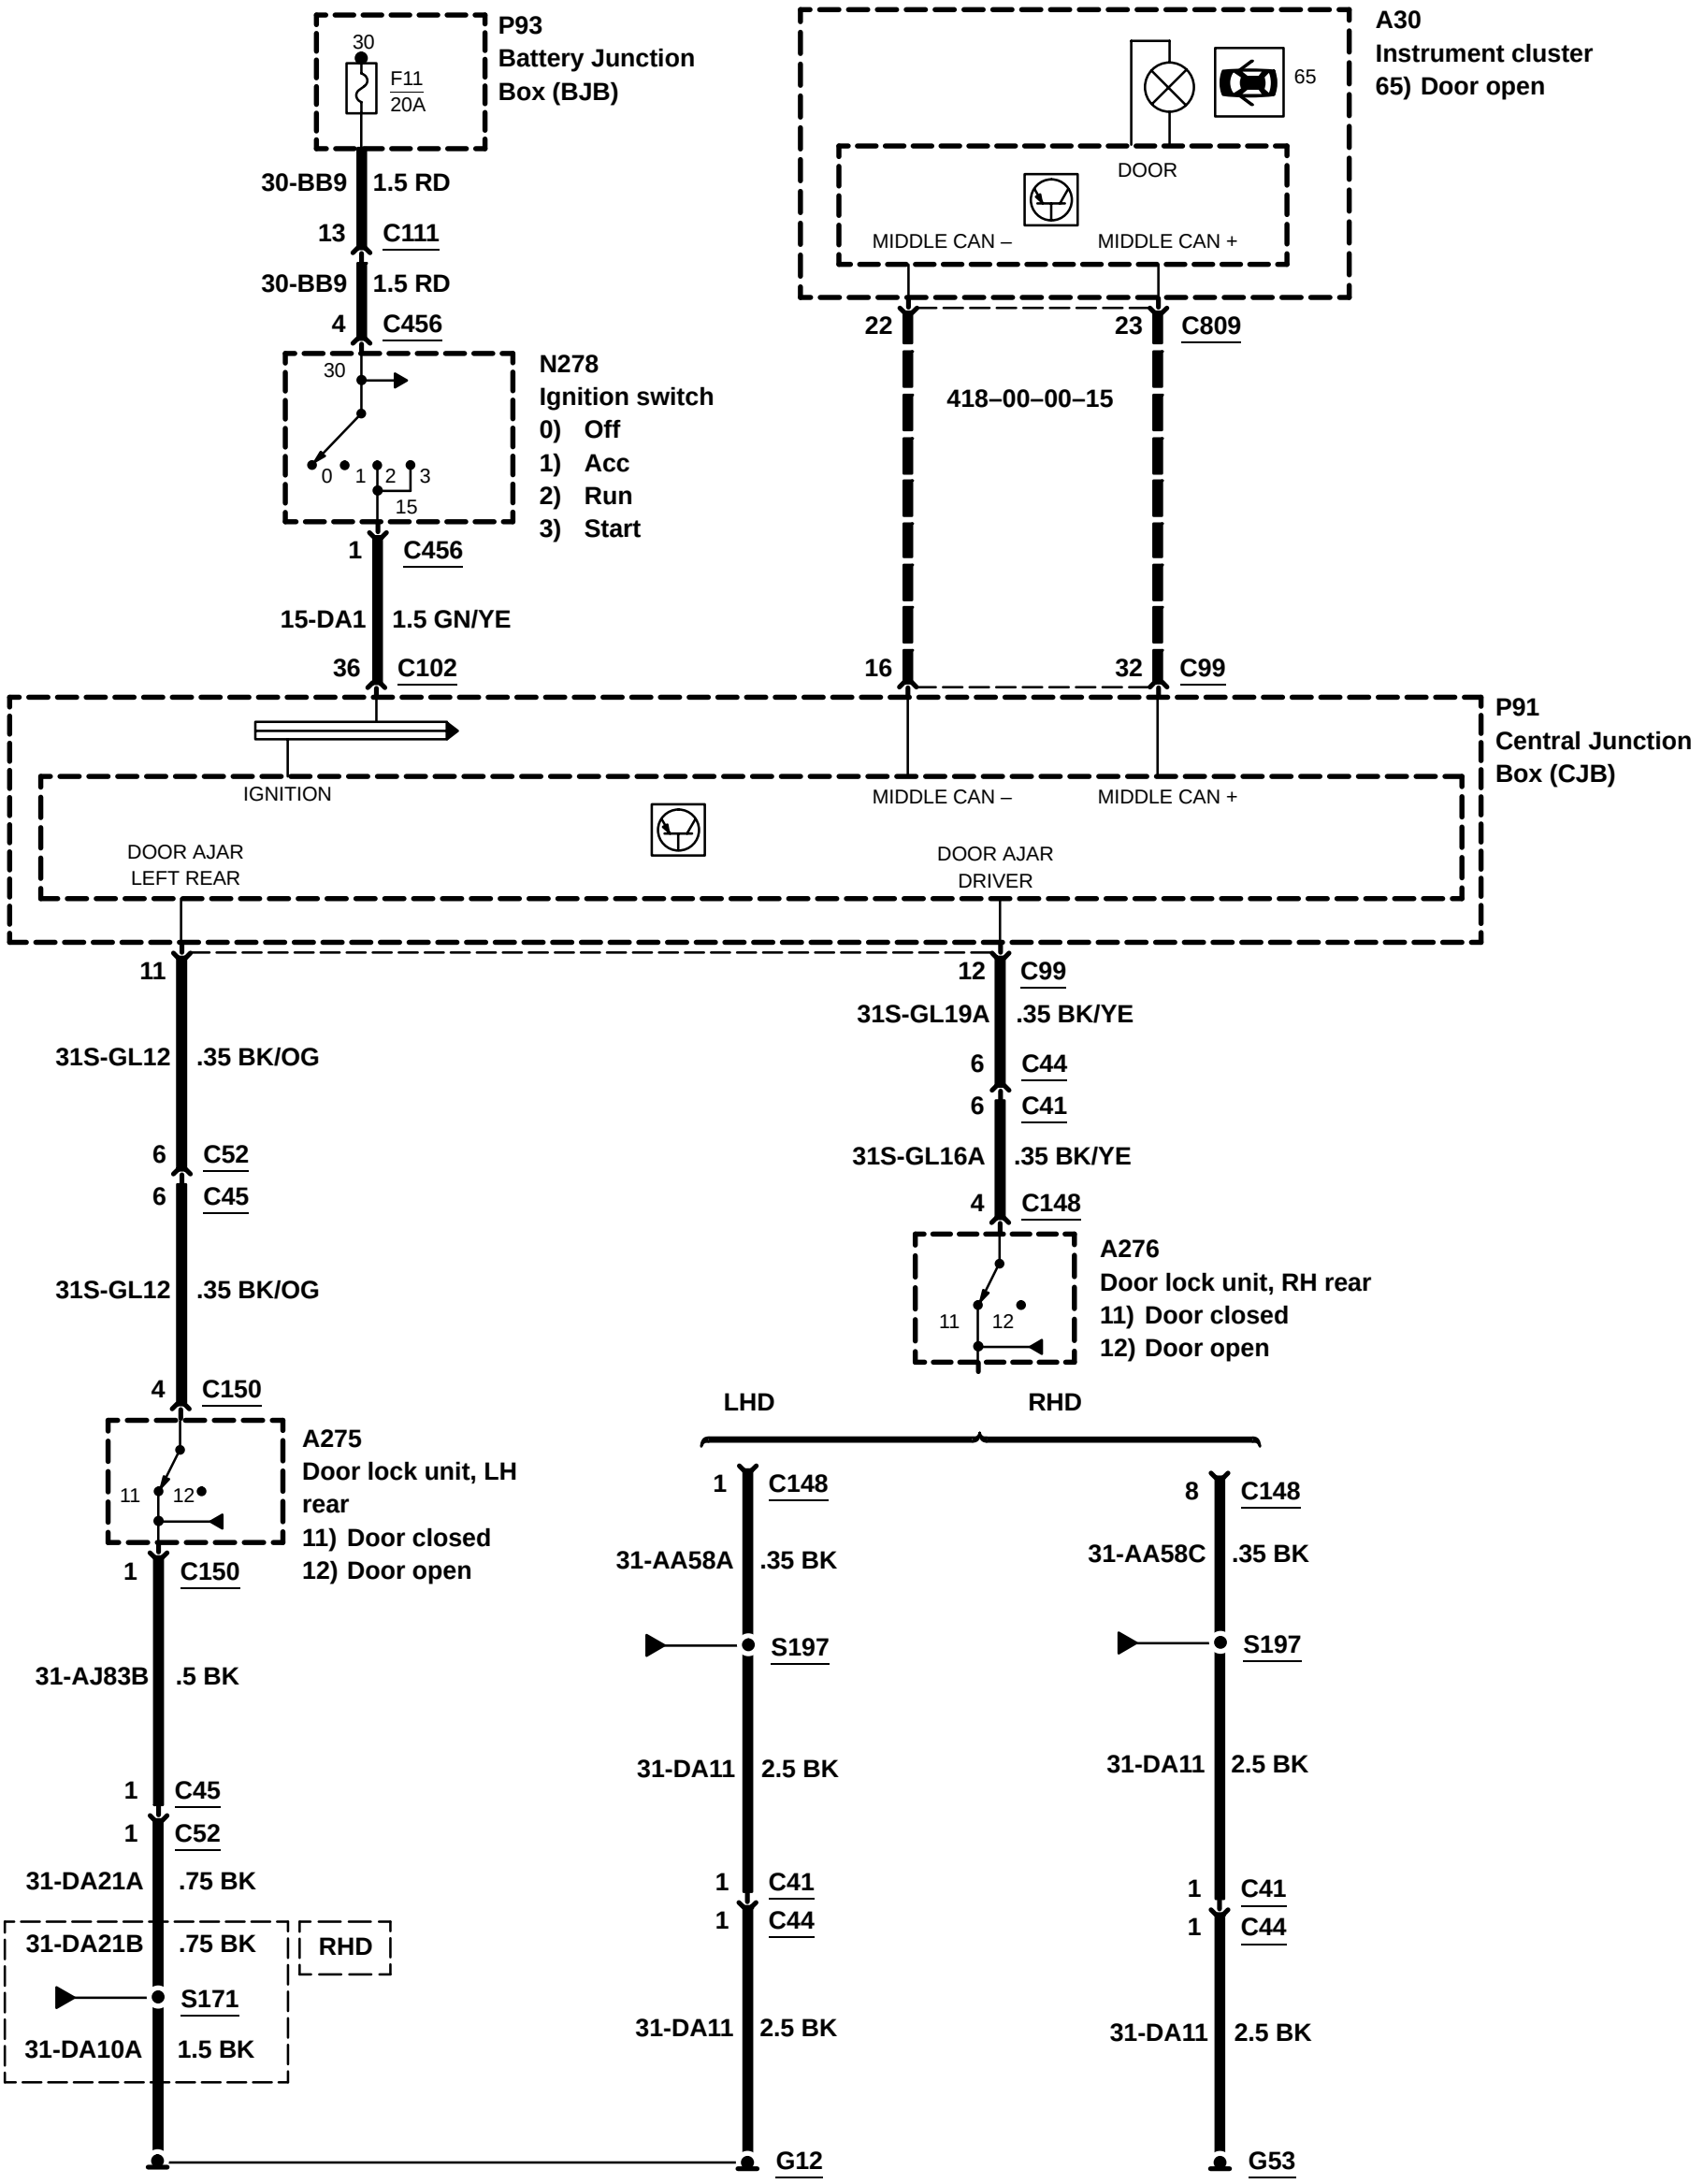


Instrument Cluster – with front power windows

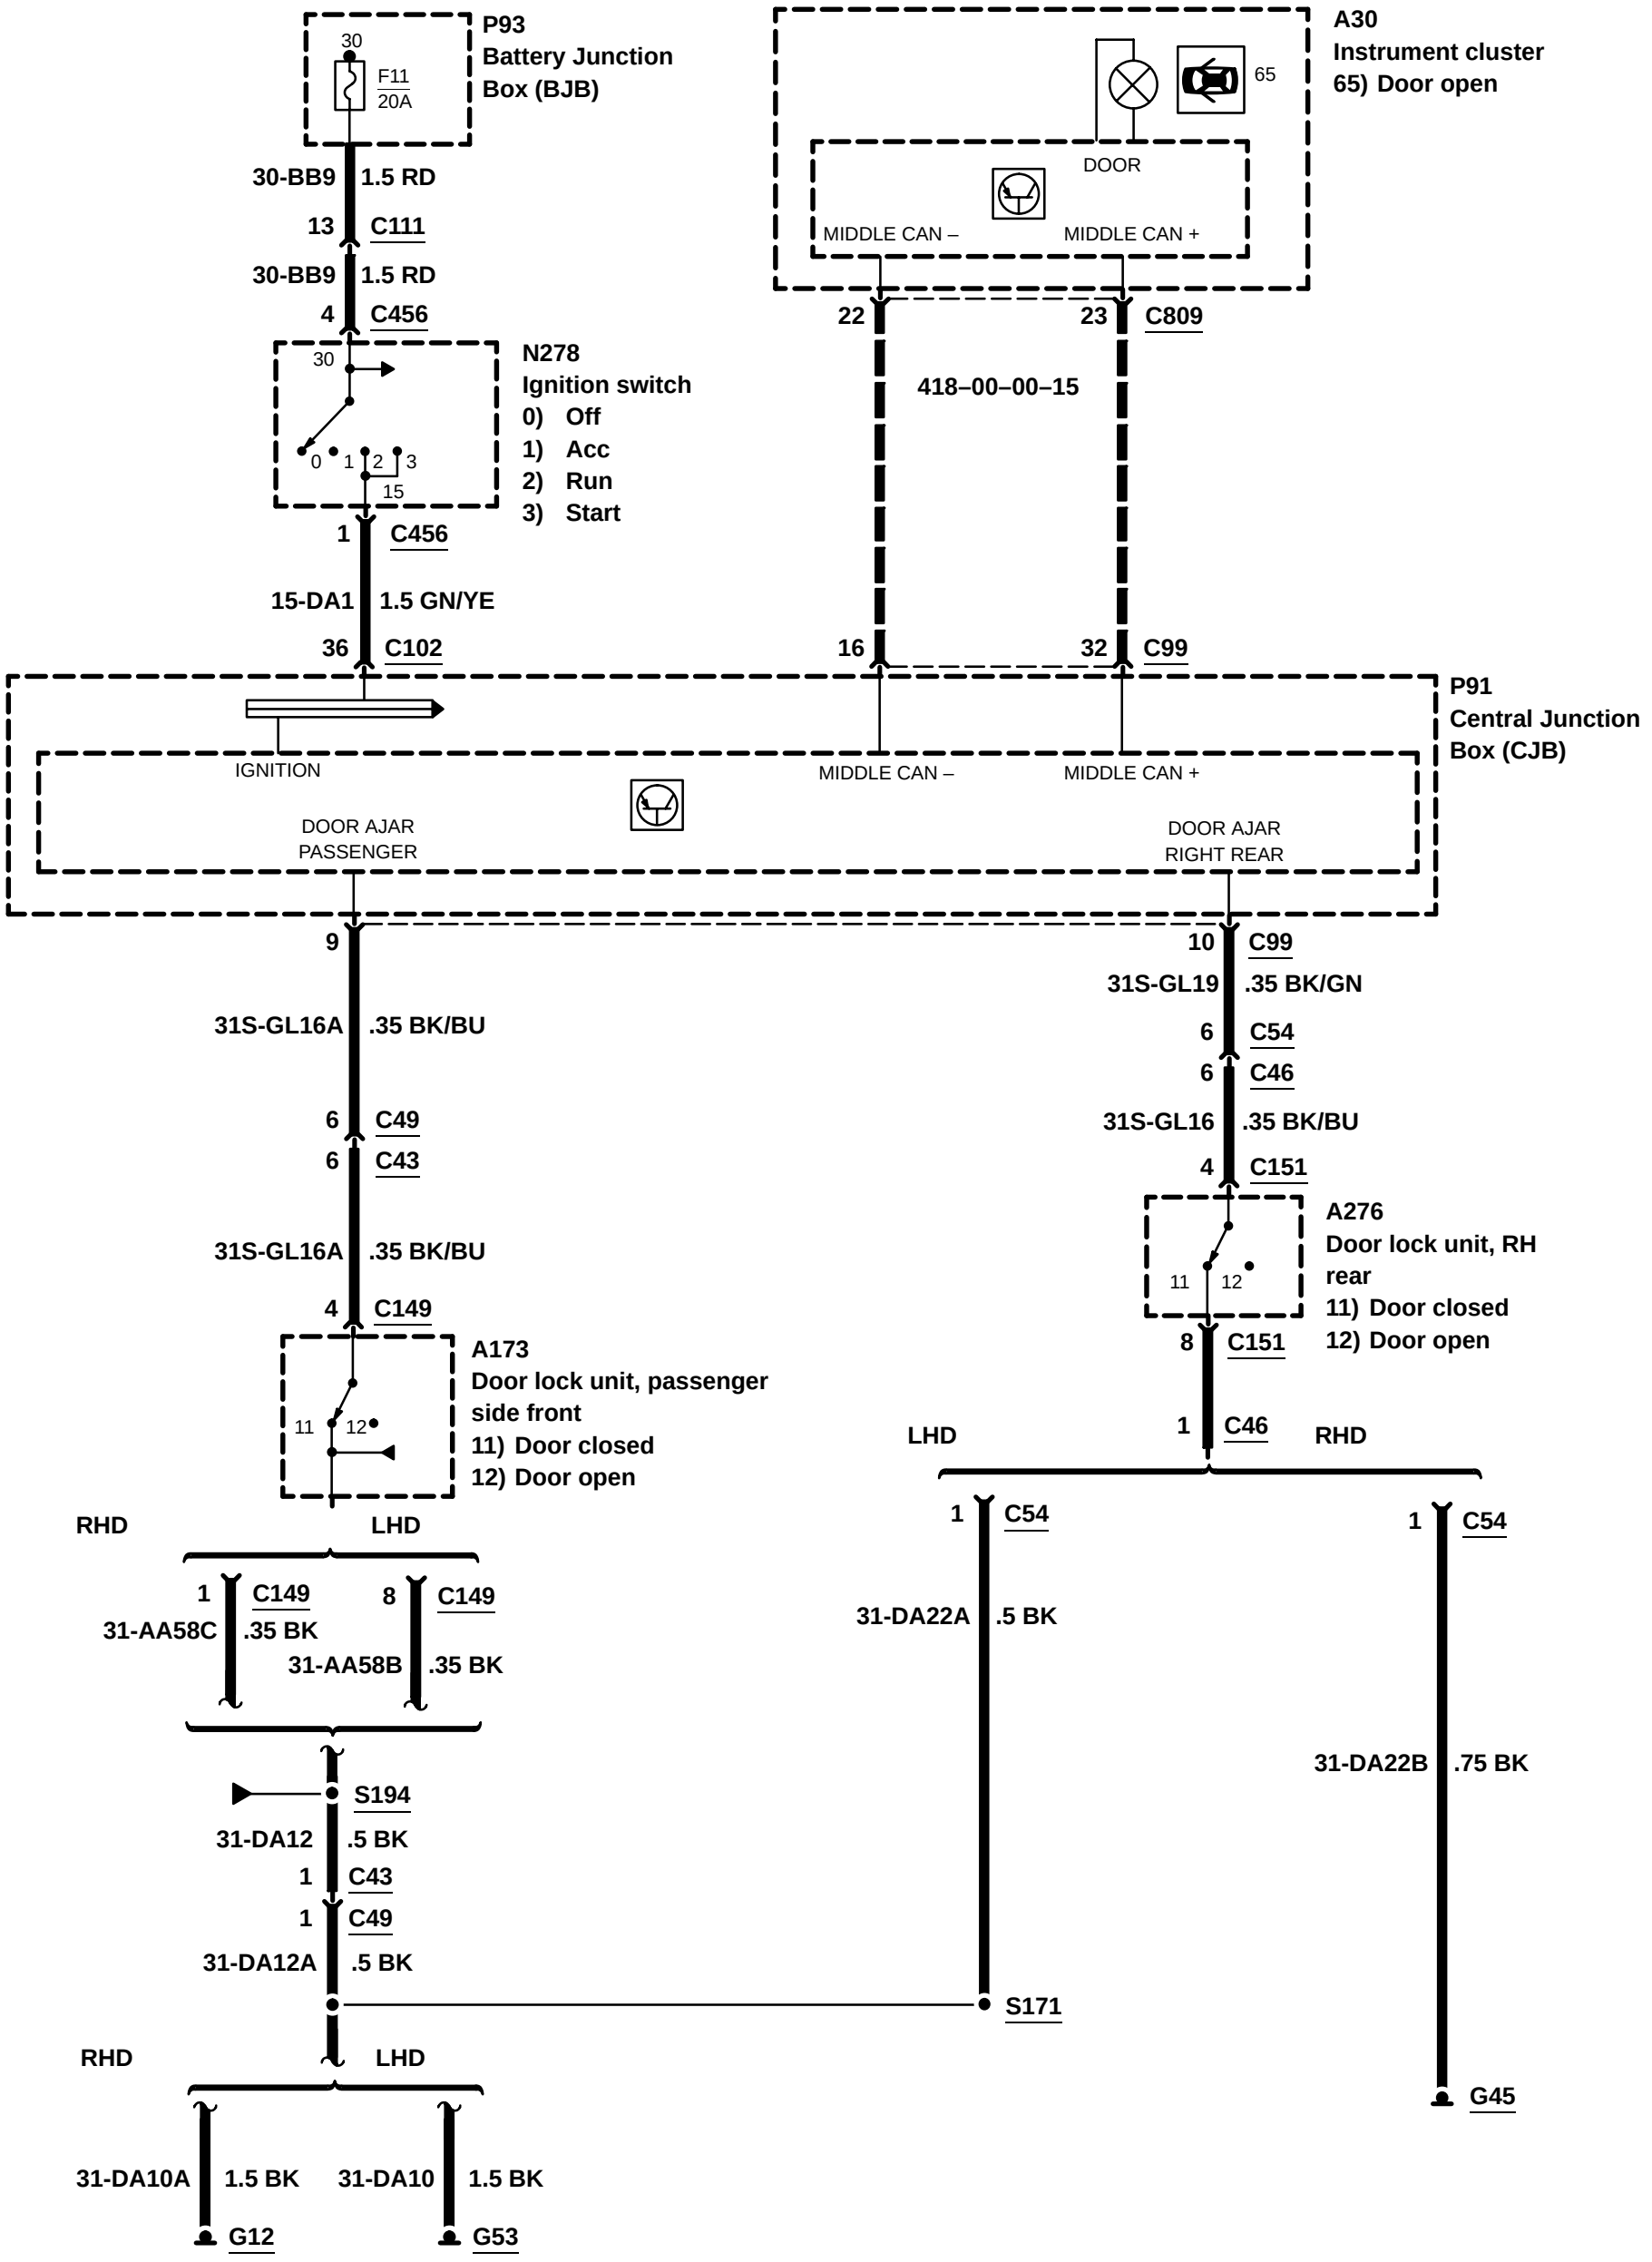


Instrument Cluster – with front and rear power windows

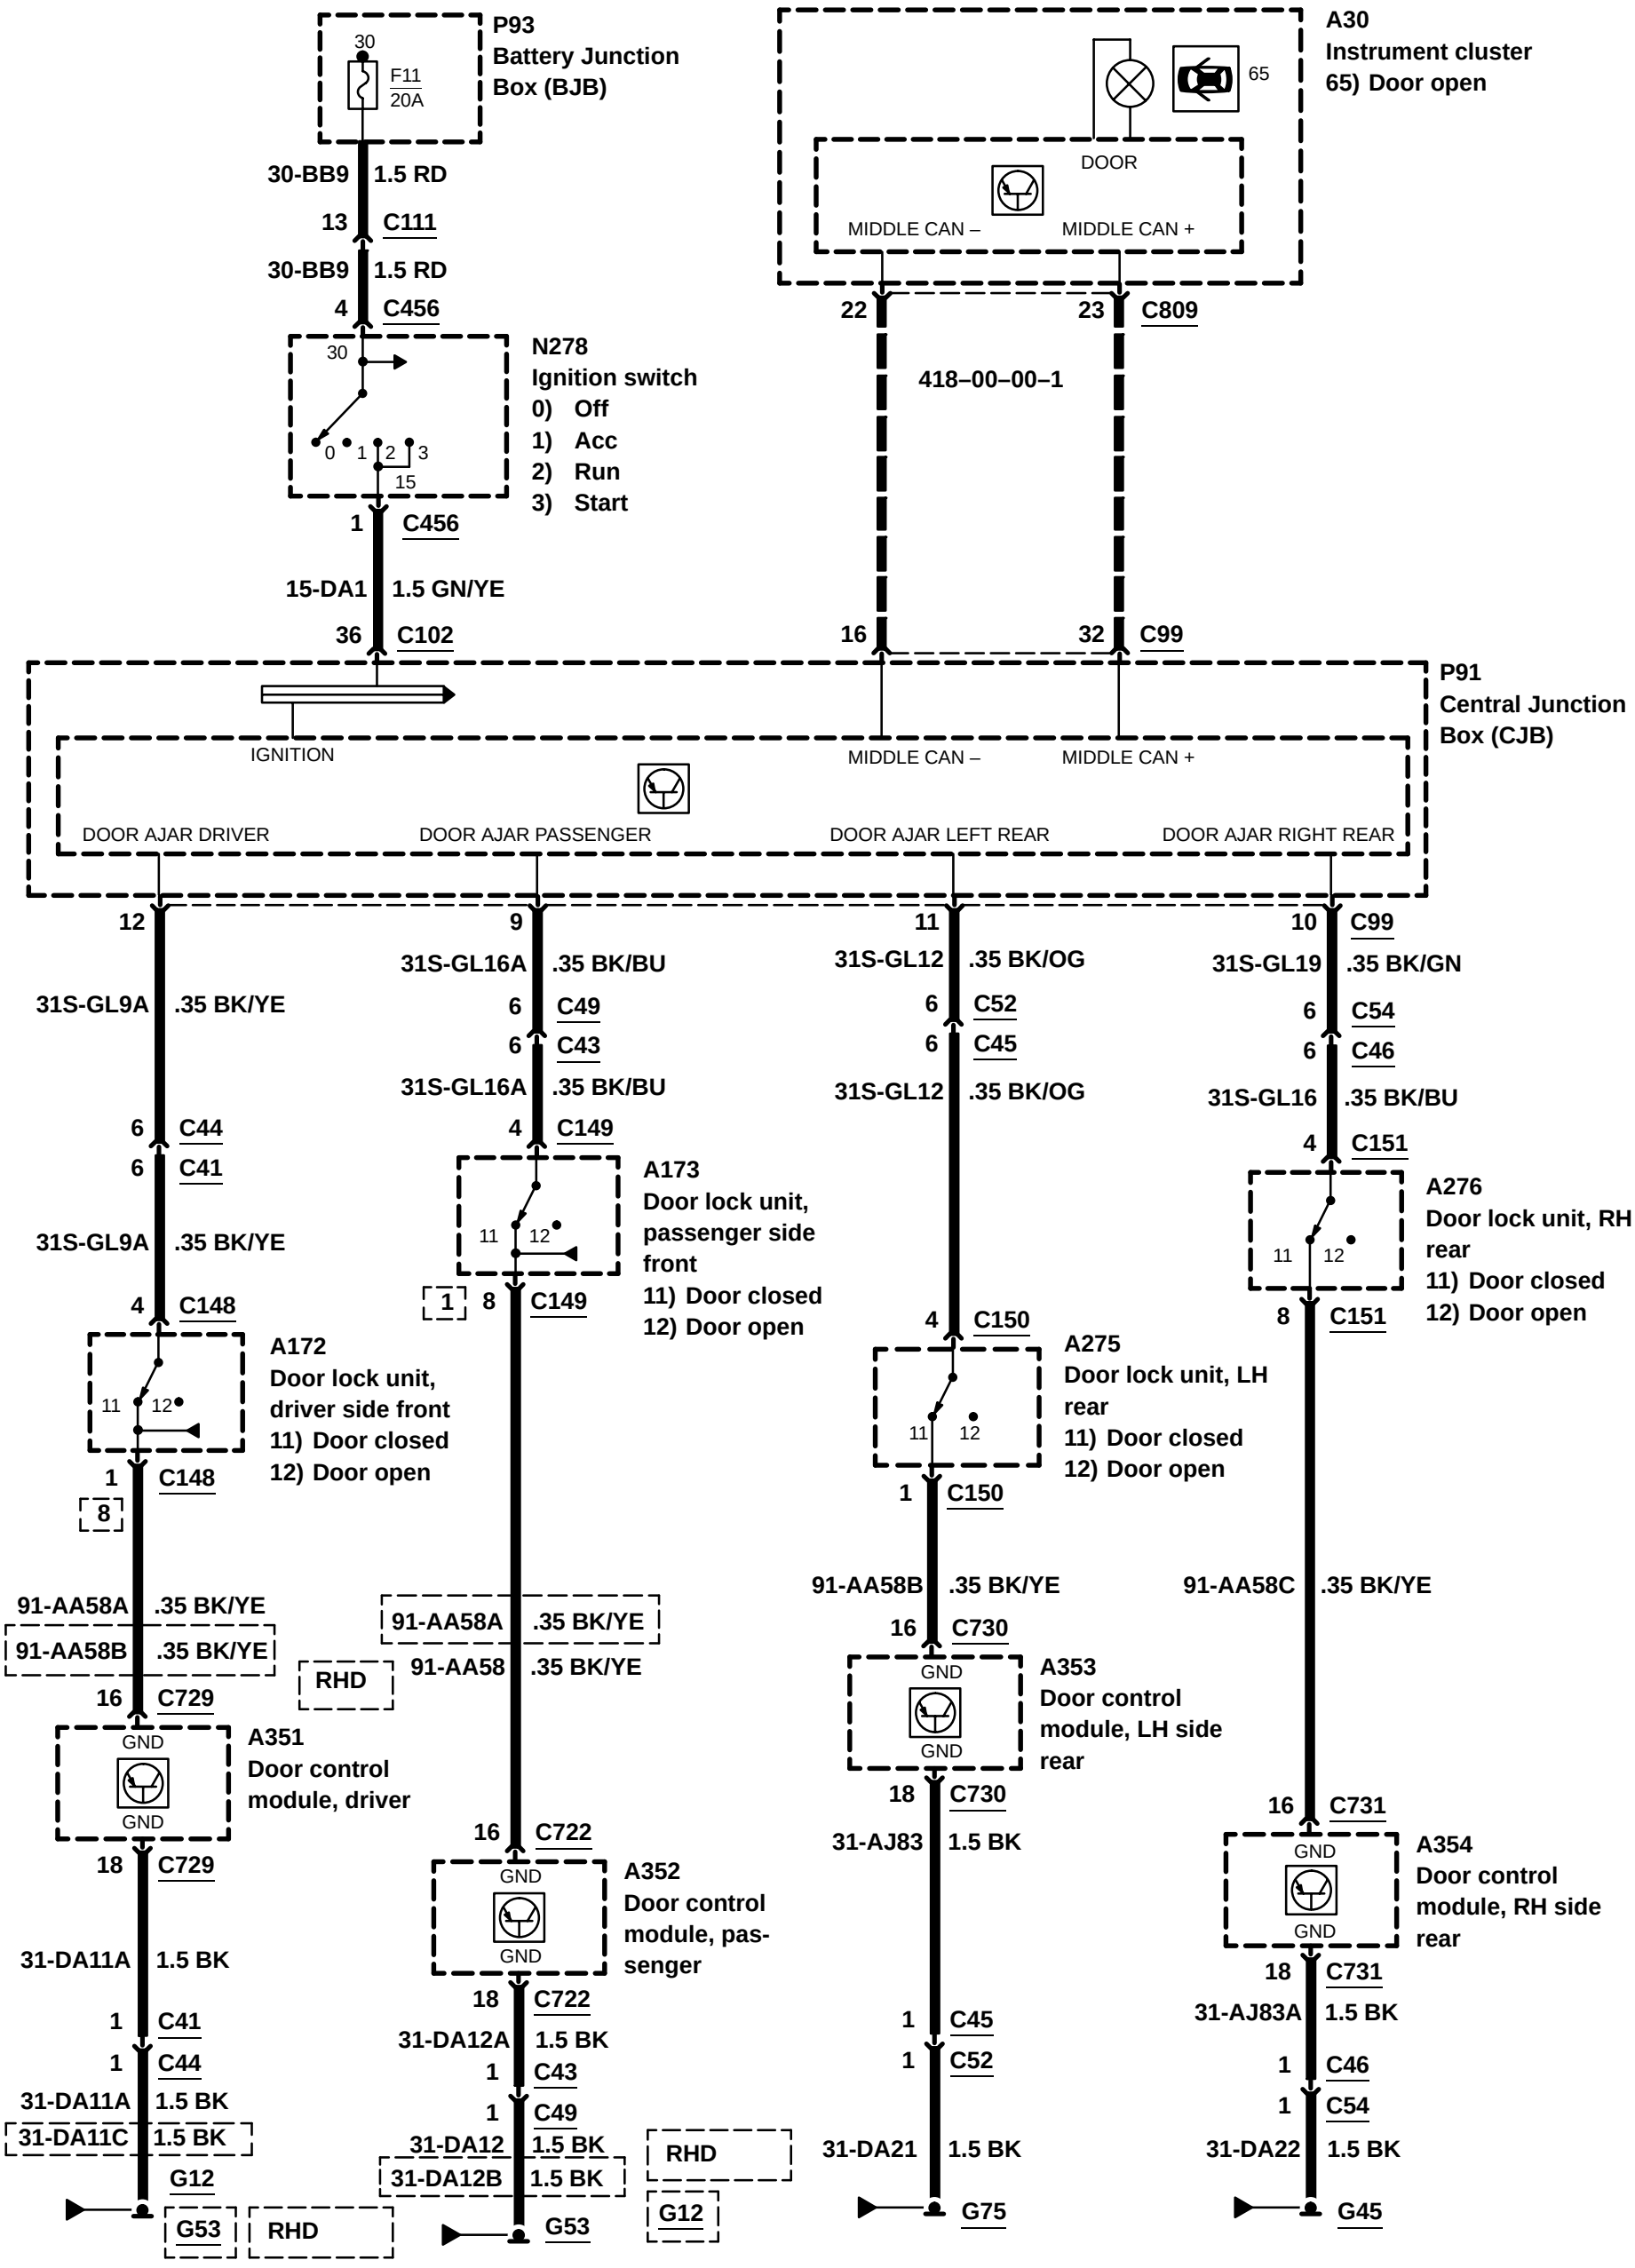


Instrument Cluster

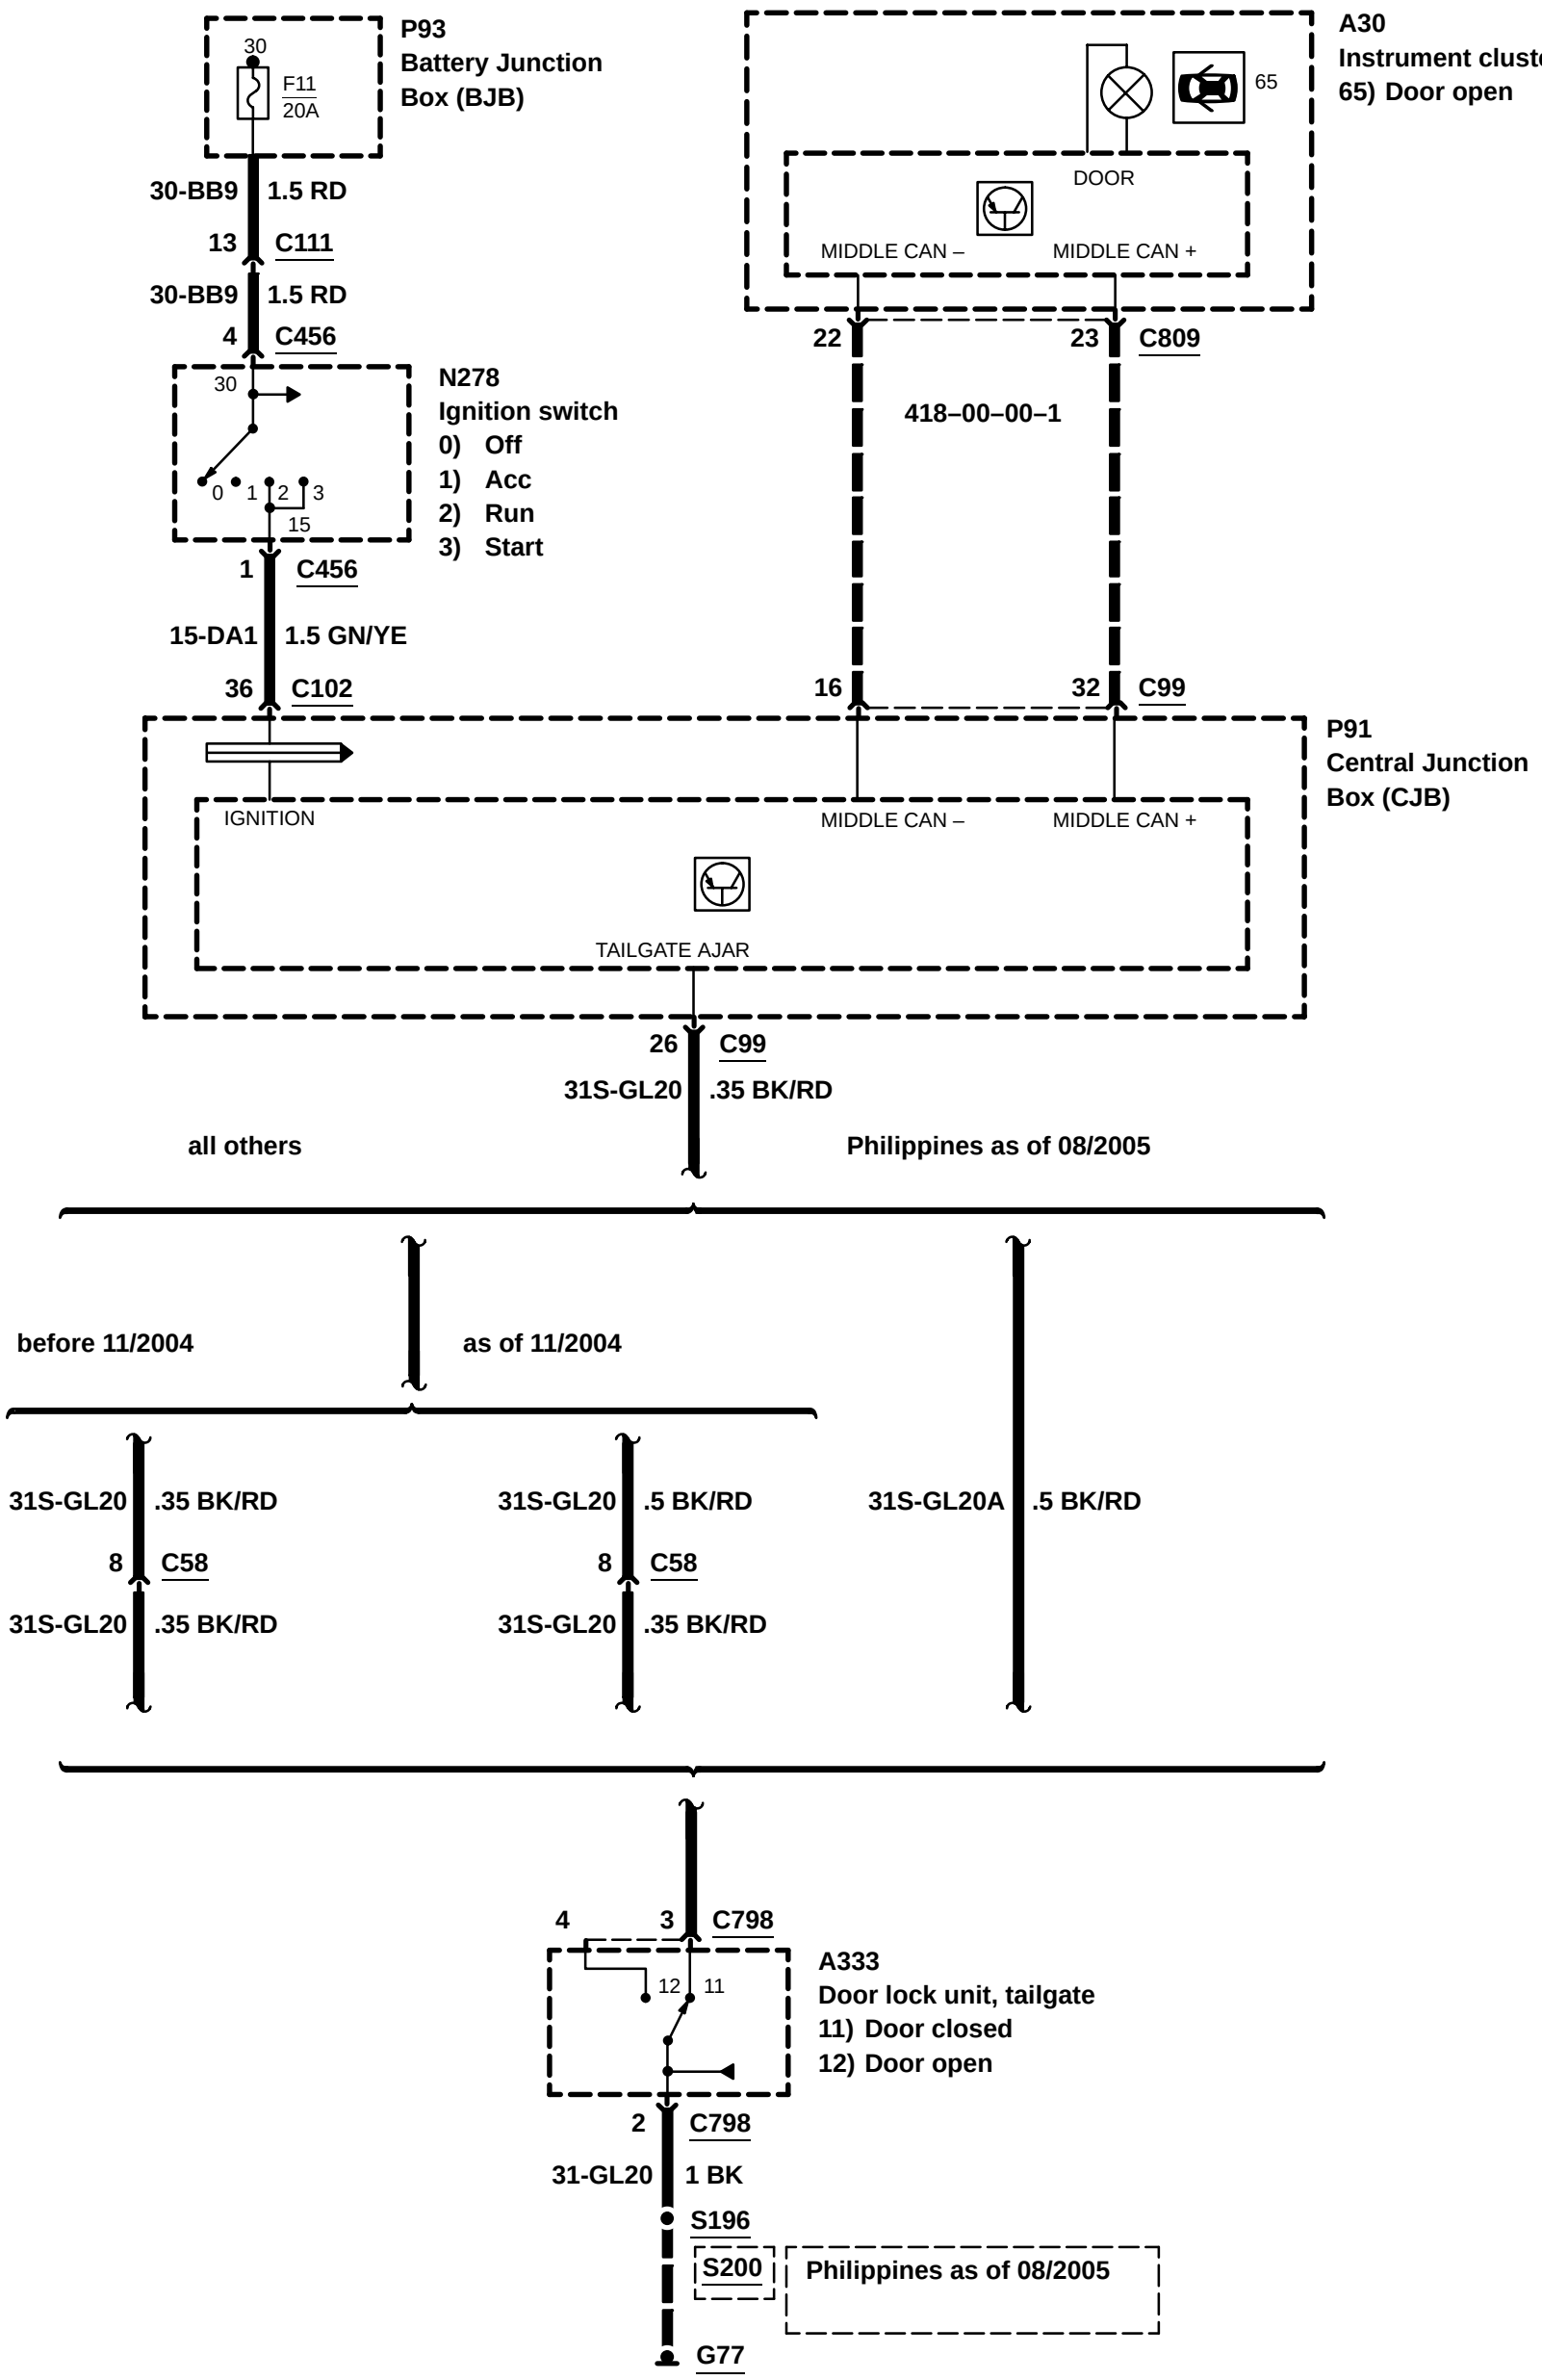


Instrument Cluster – 1.6L (Z6) manual transmission

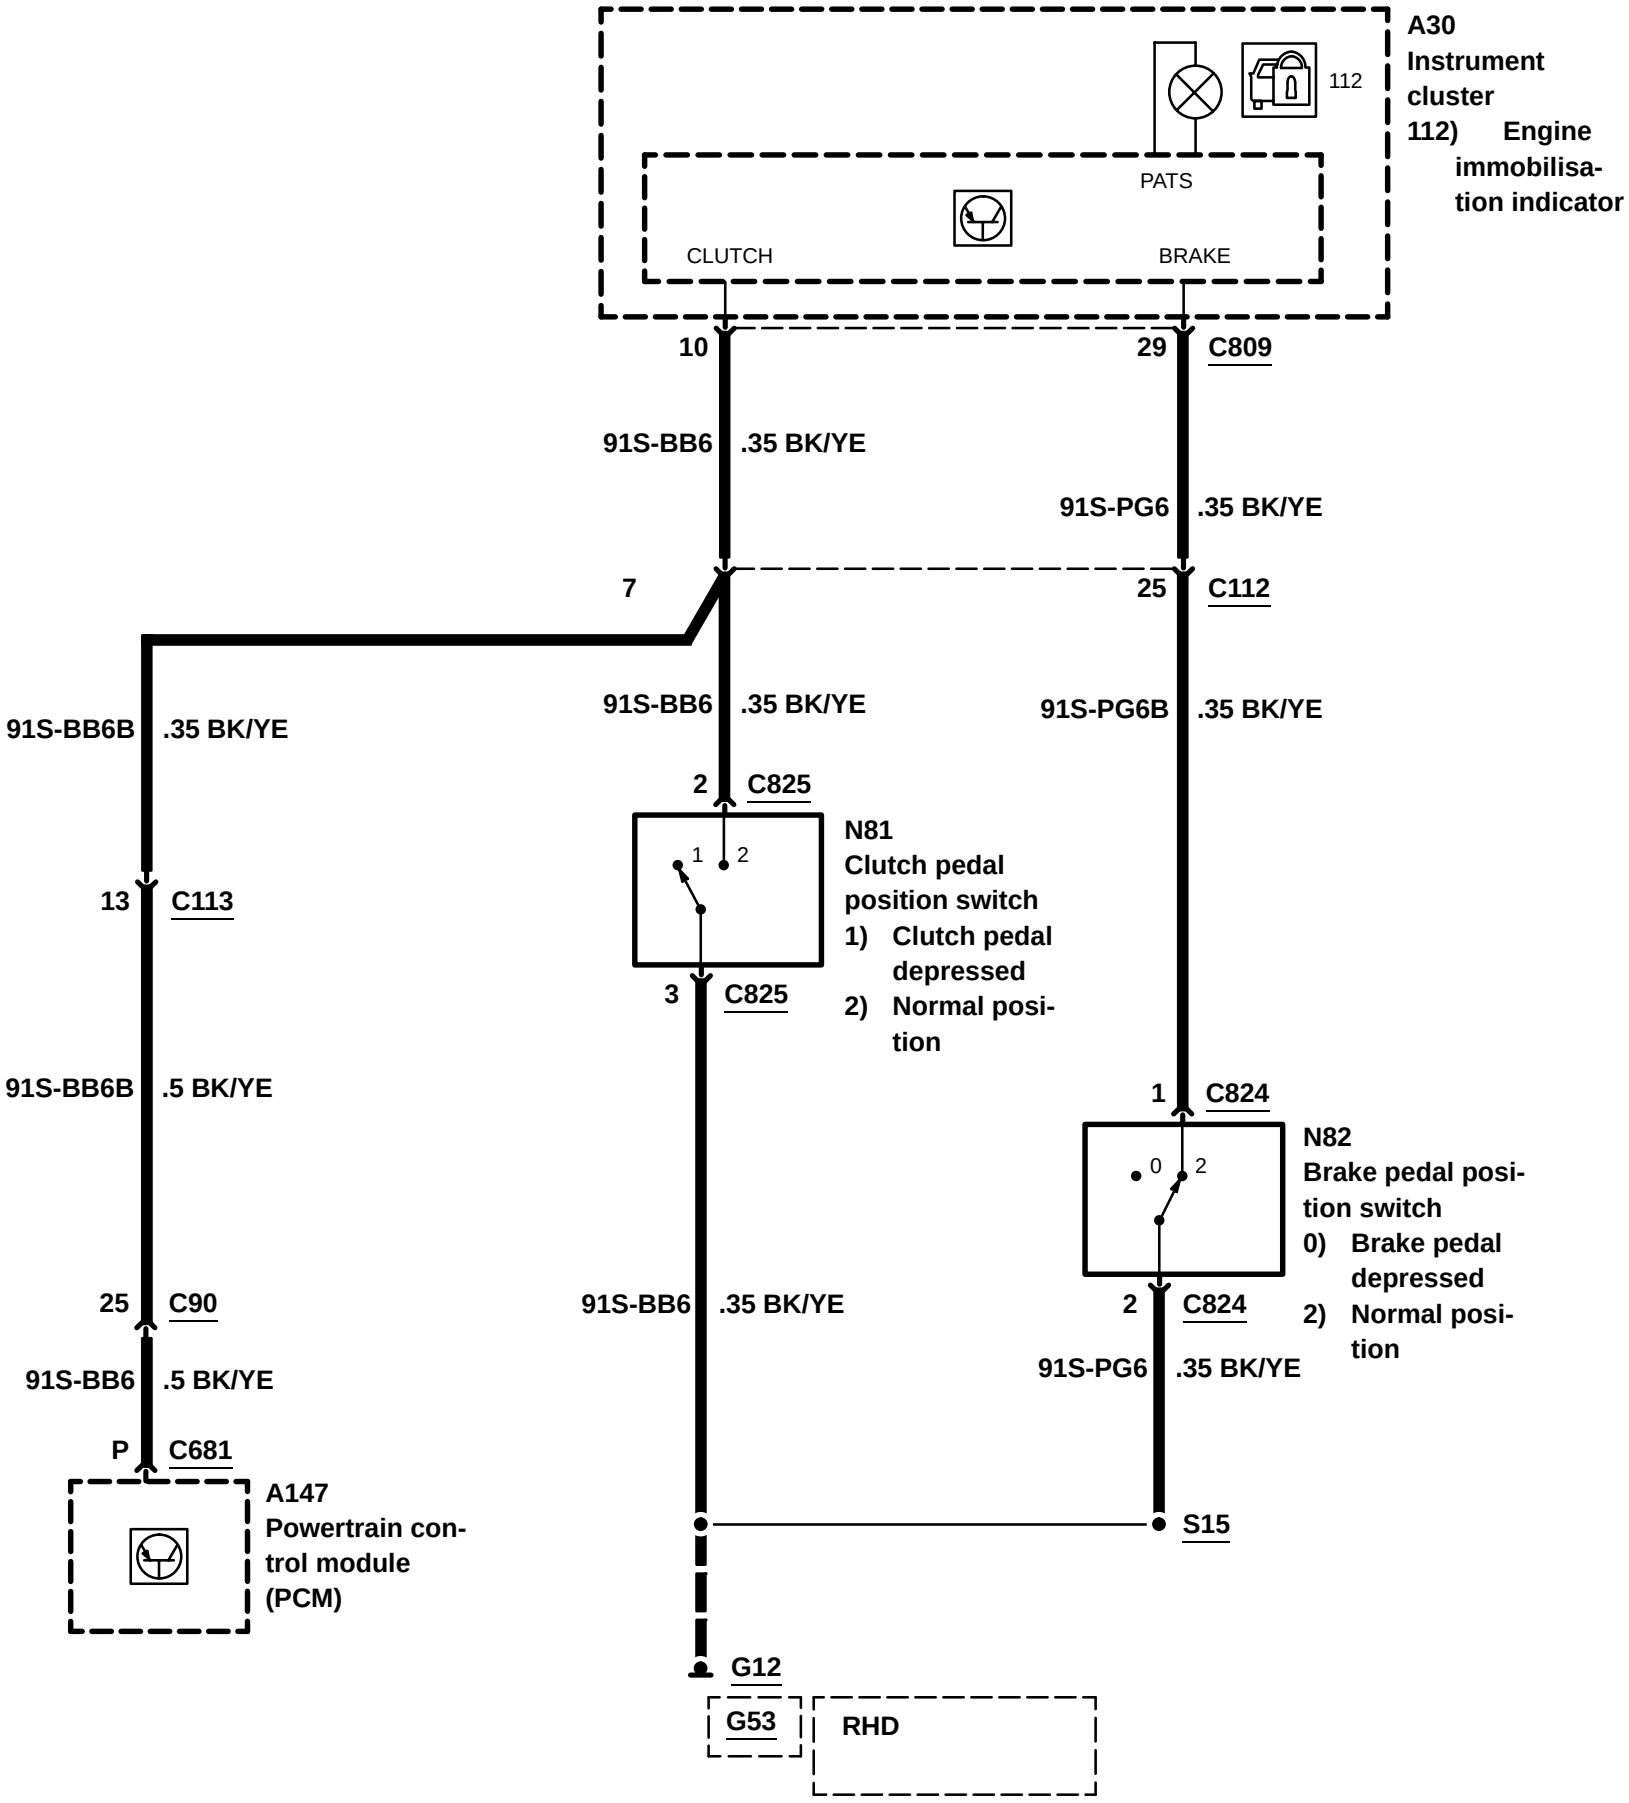


Instrument Cluster – except 1.6L (Z6) manual transmission

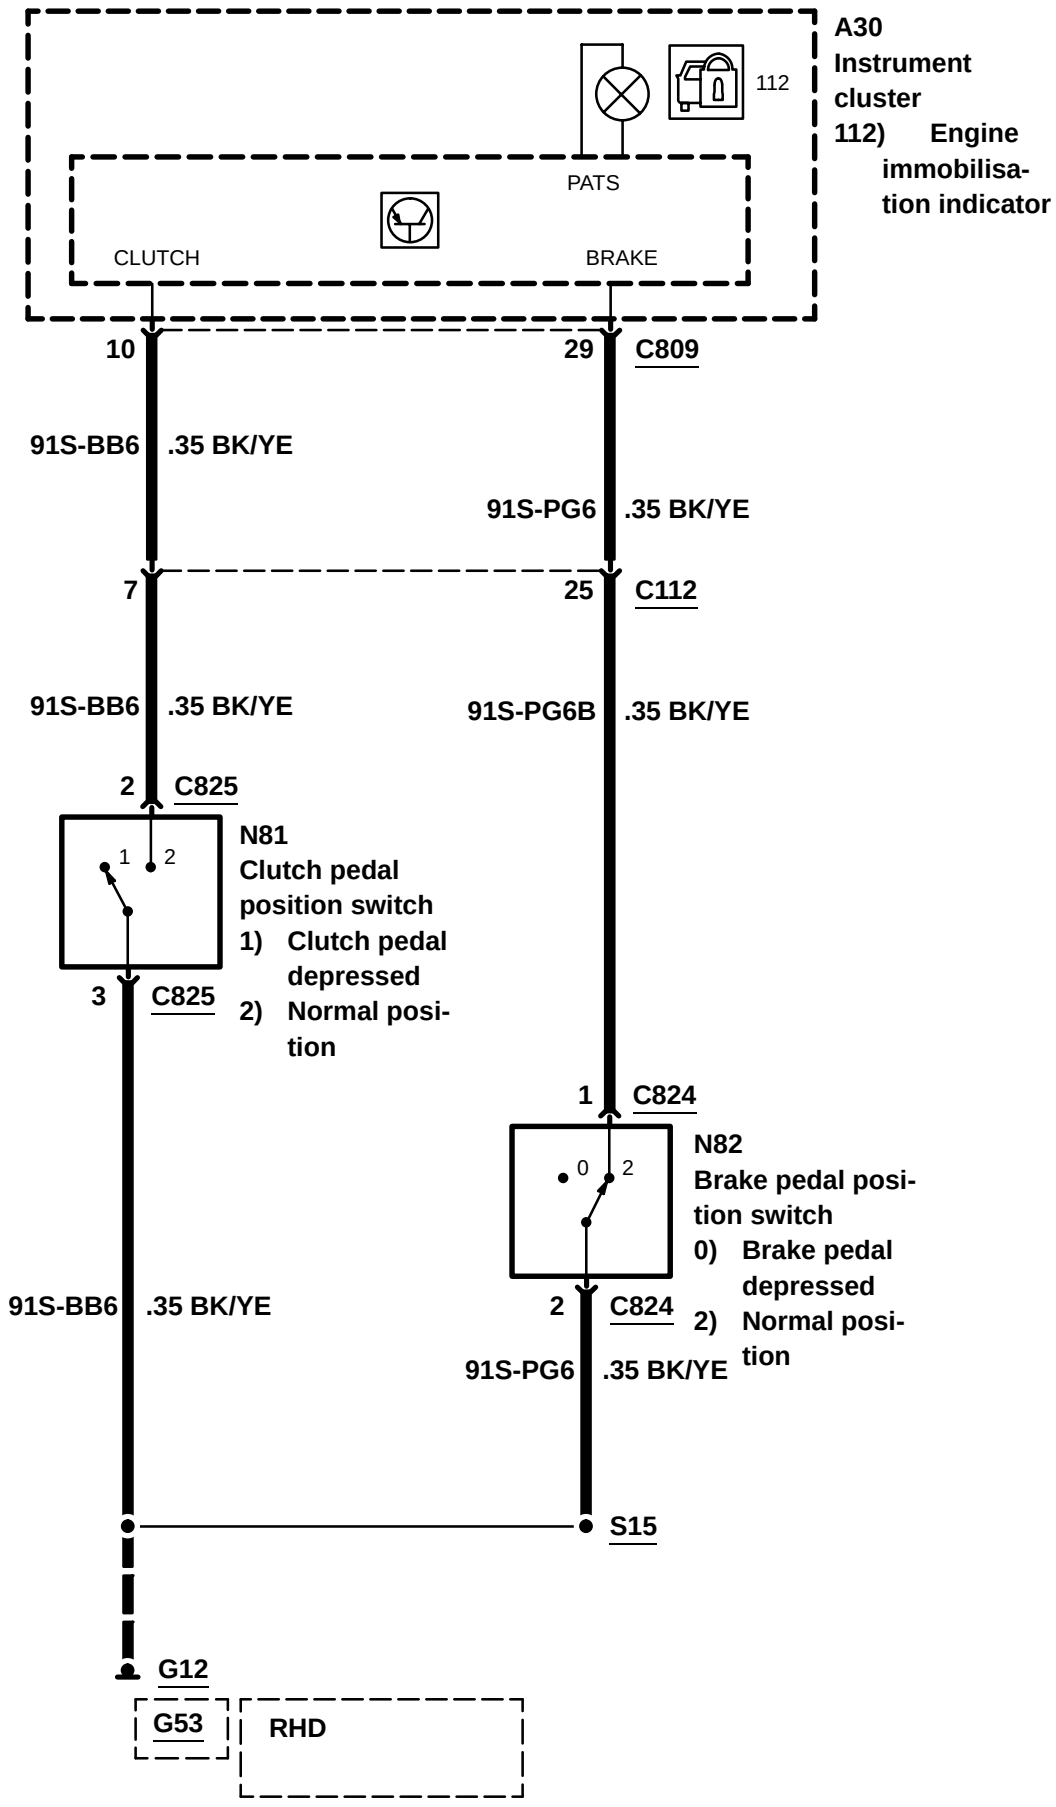


Instrument Cluster

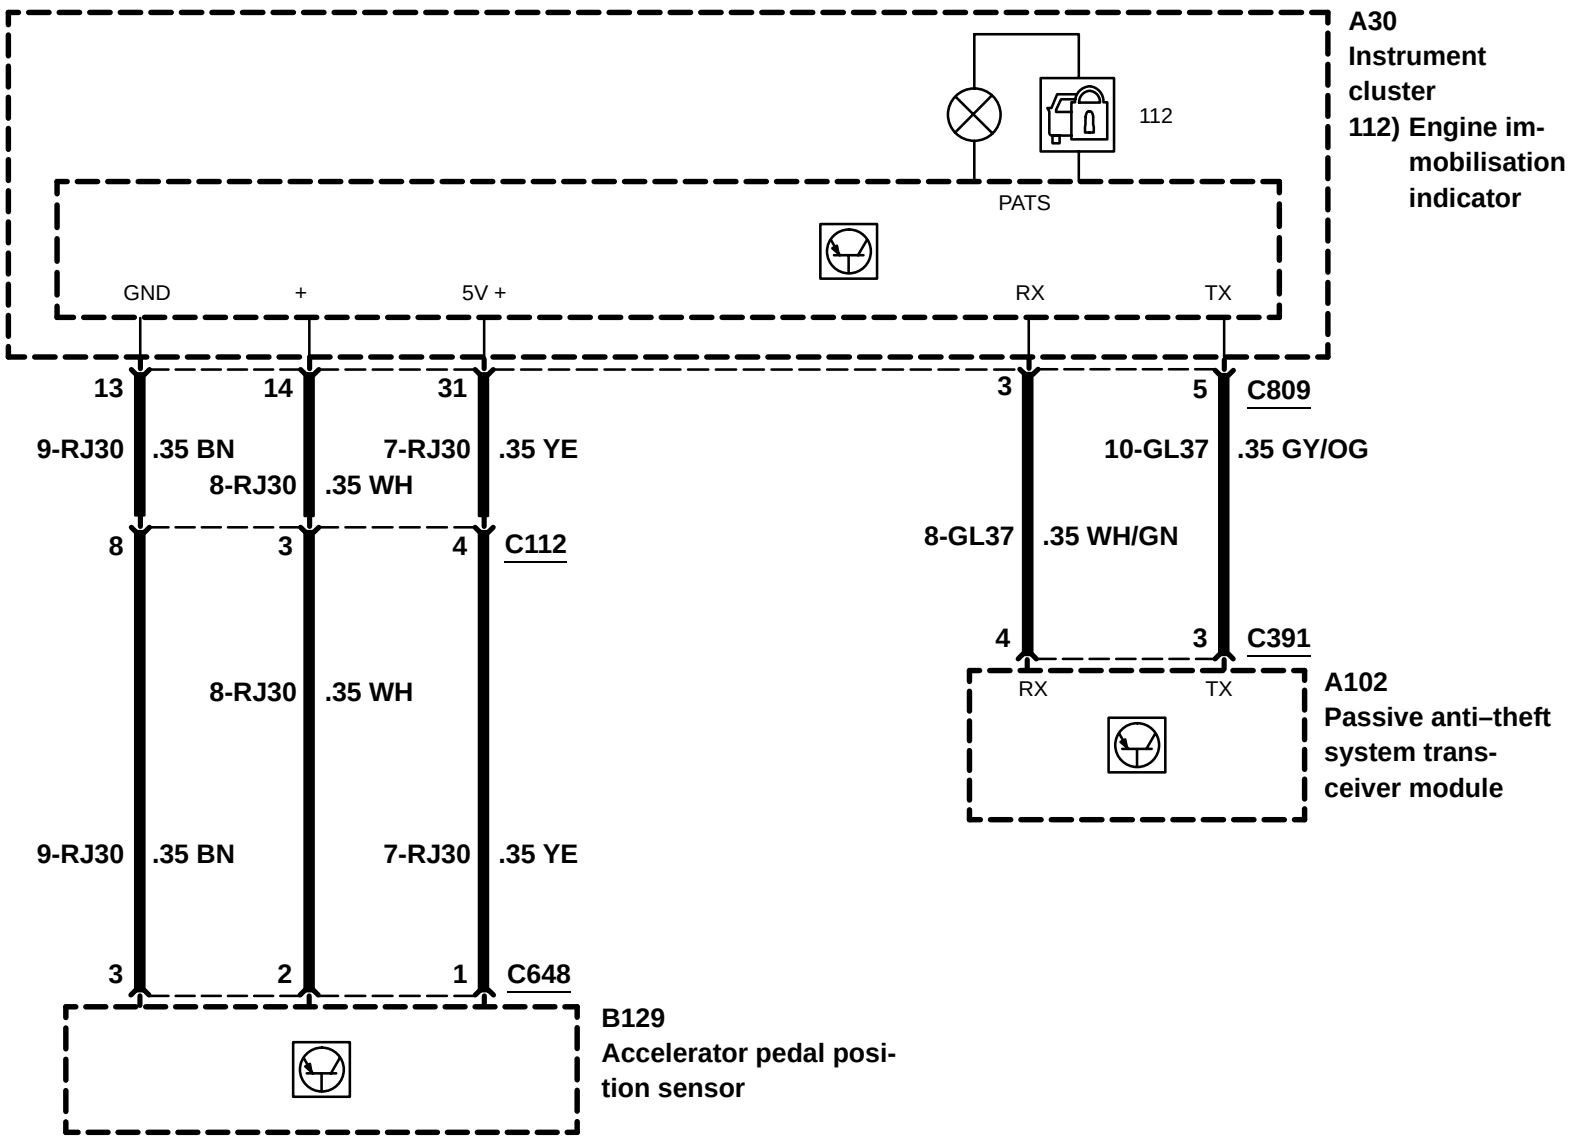


Horn – Taiwan, South Africa, Philippines

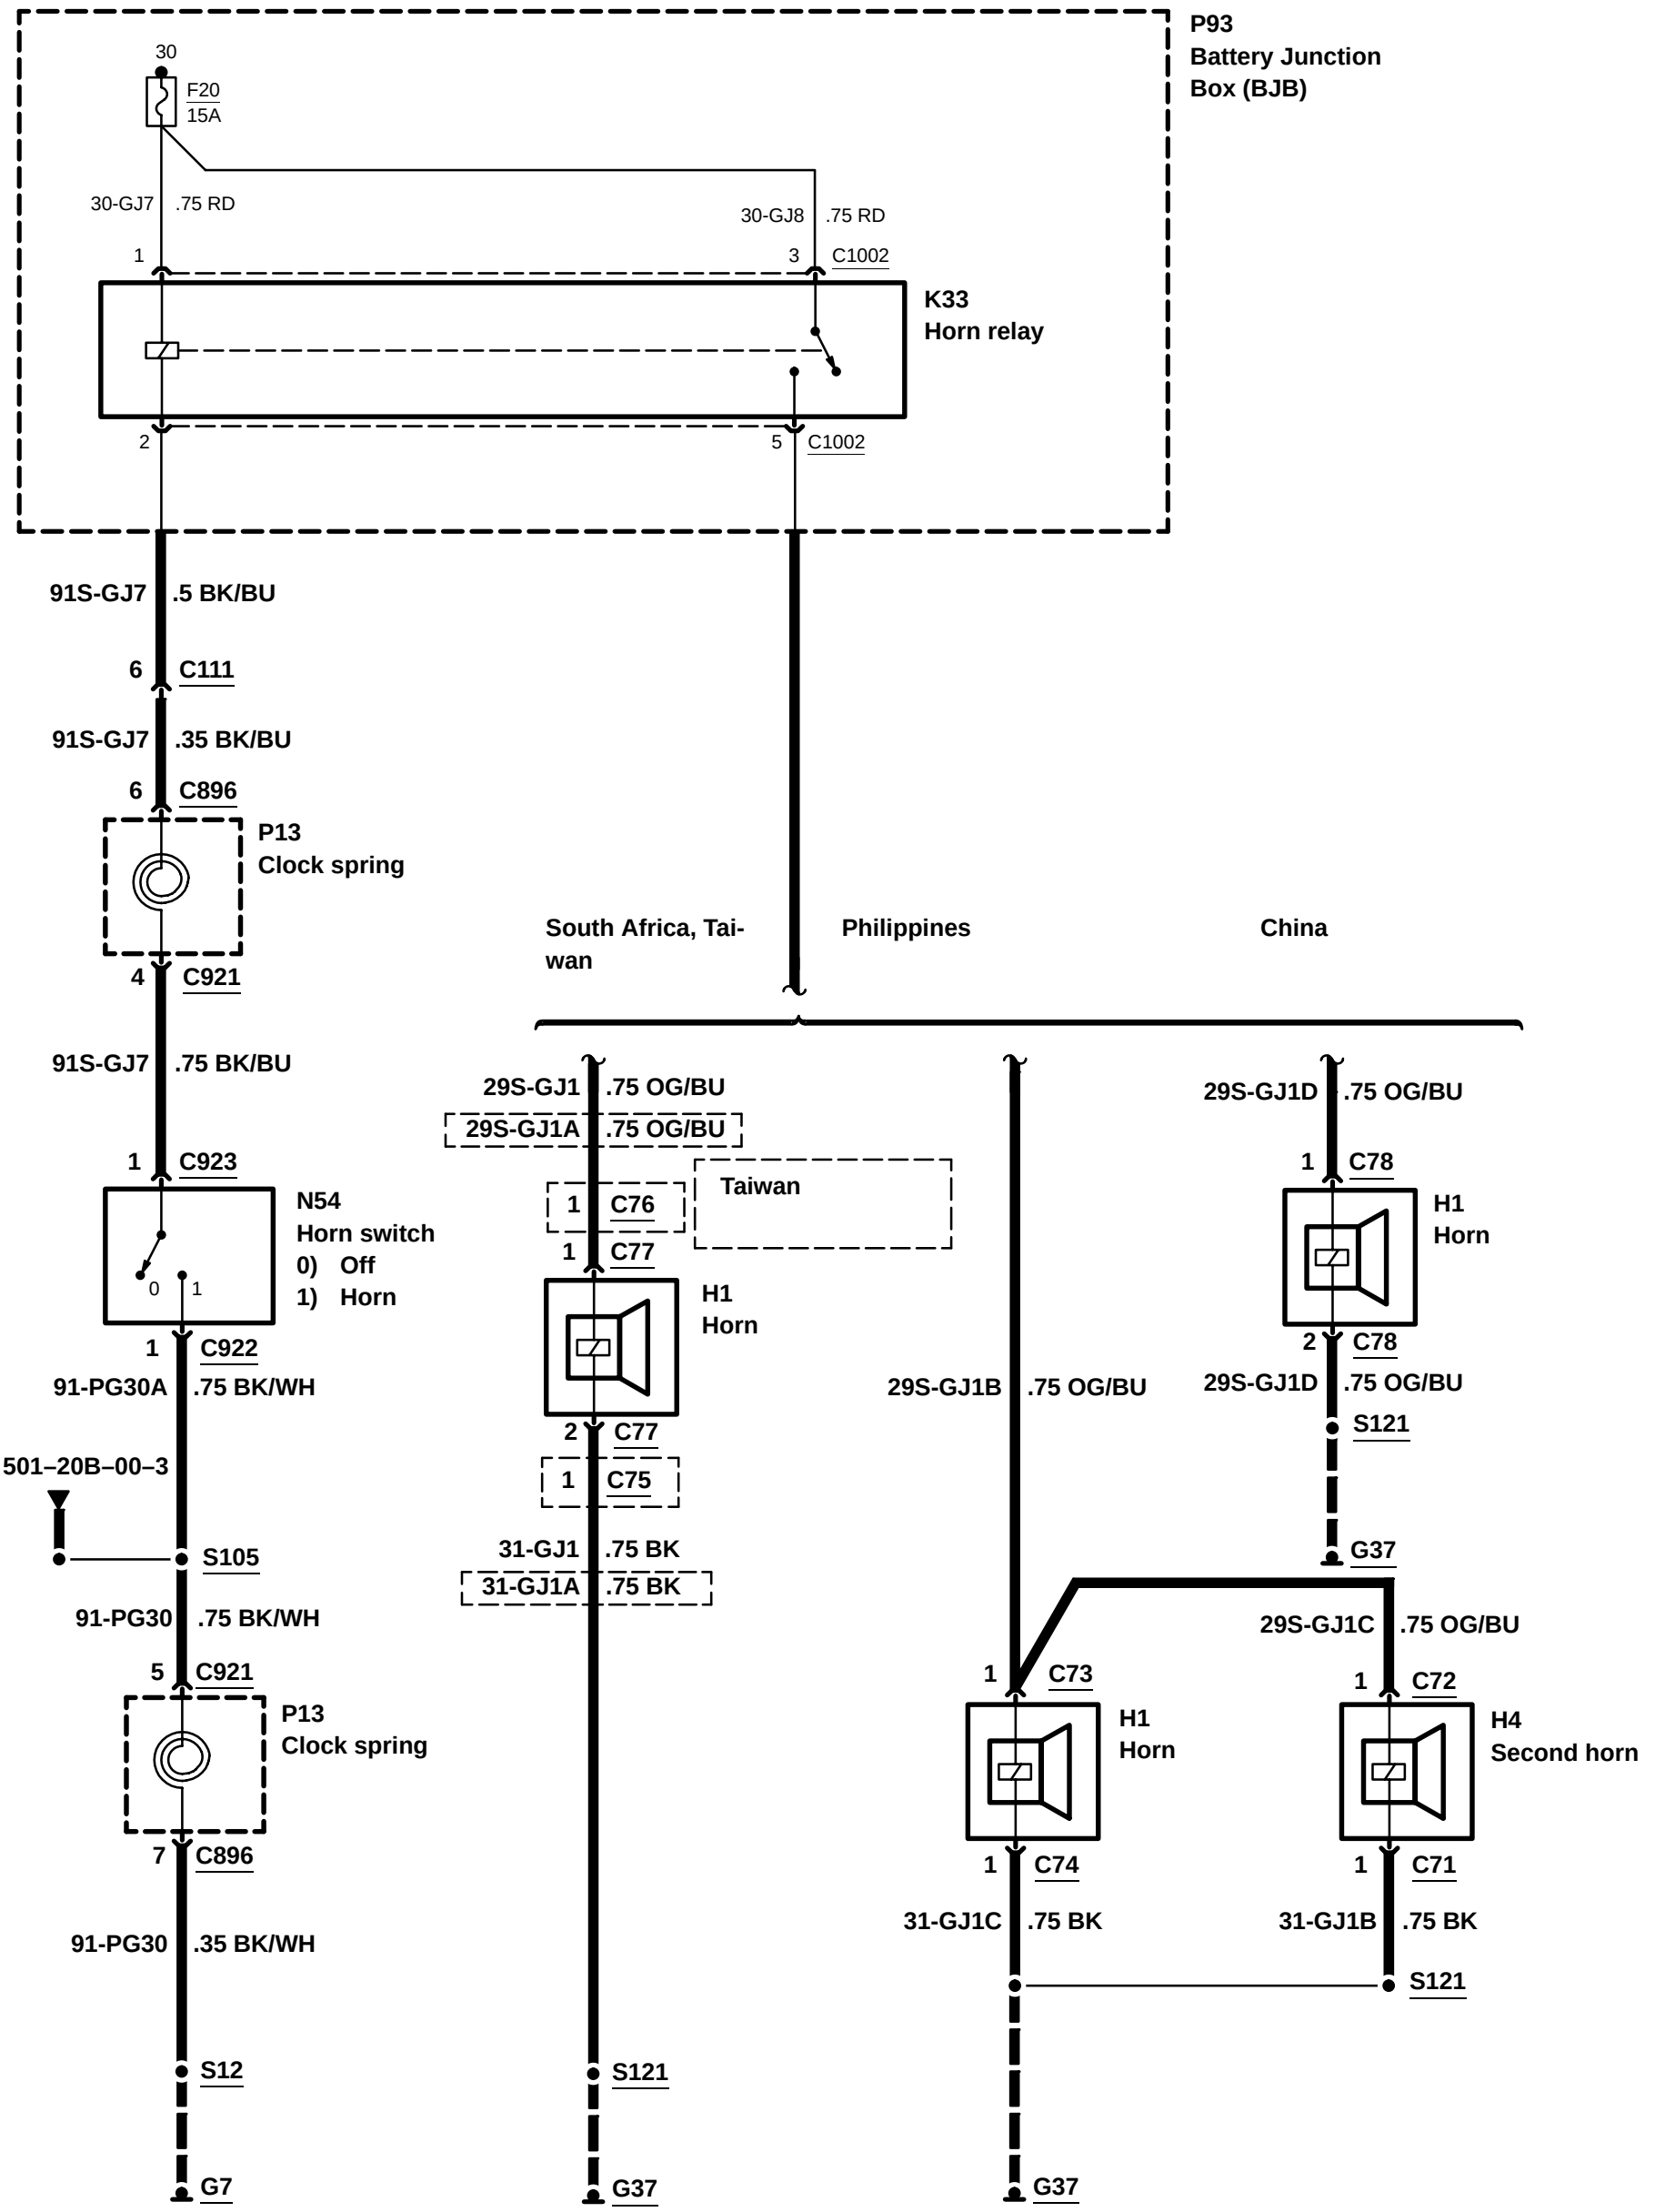


Clock

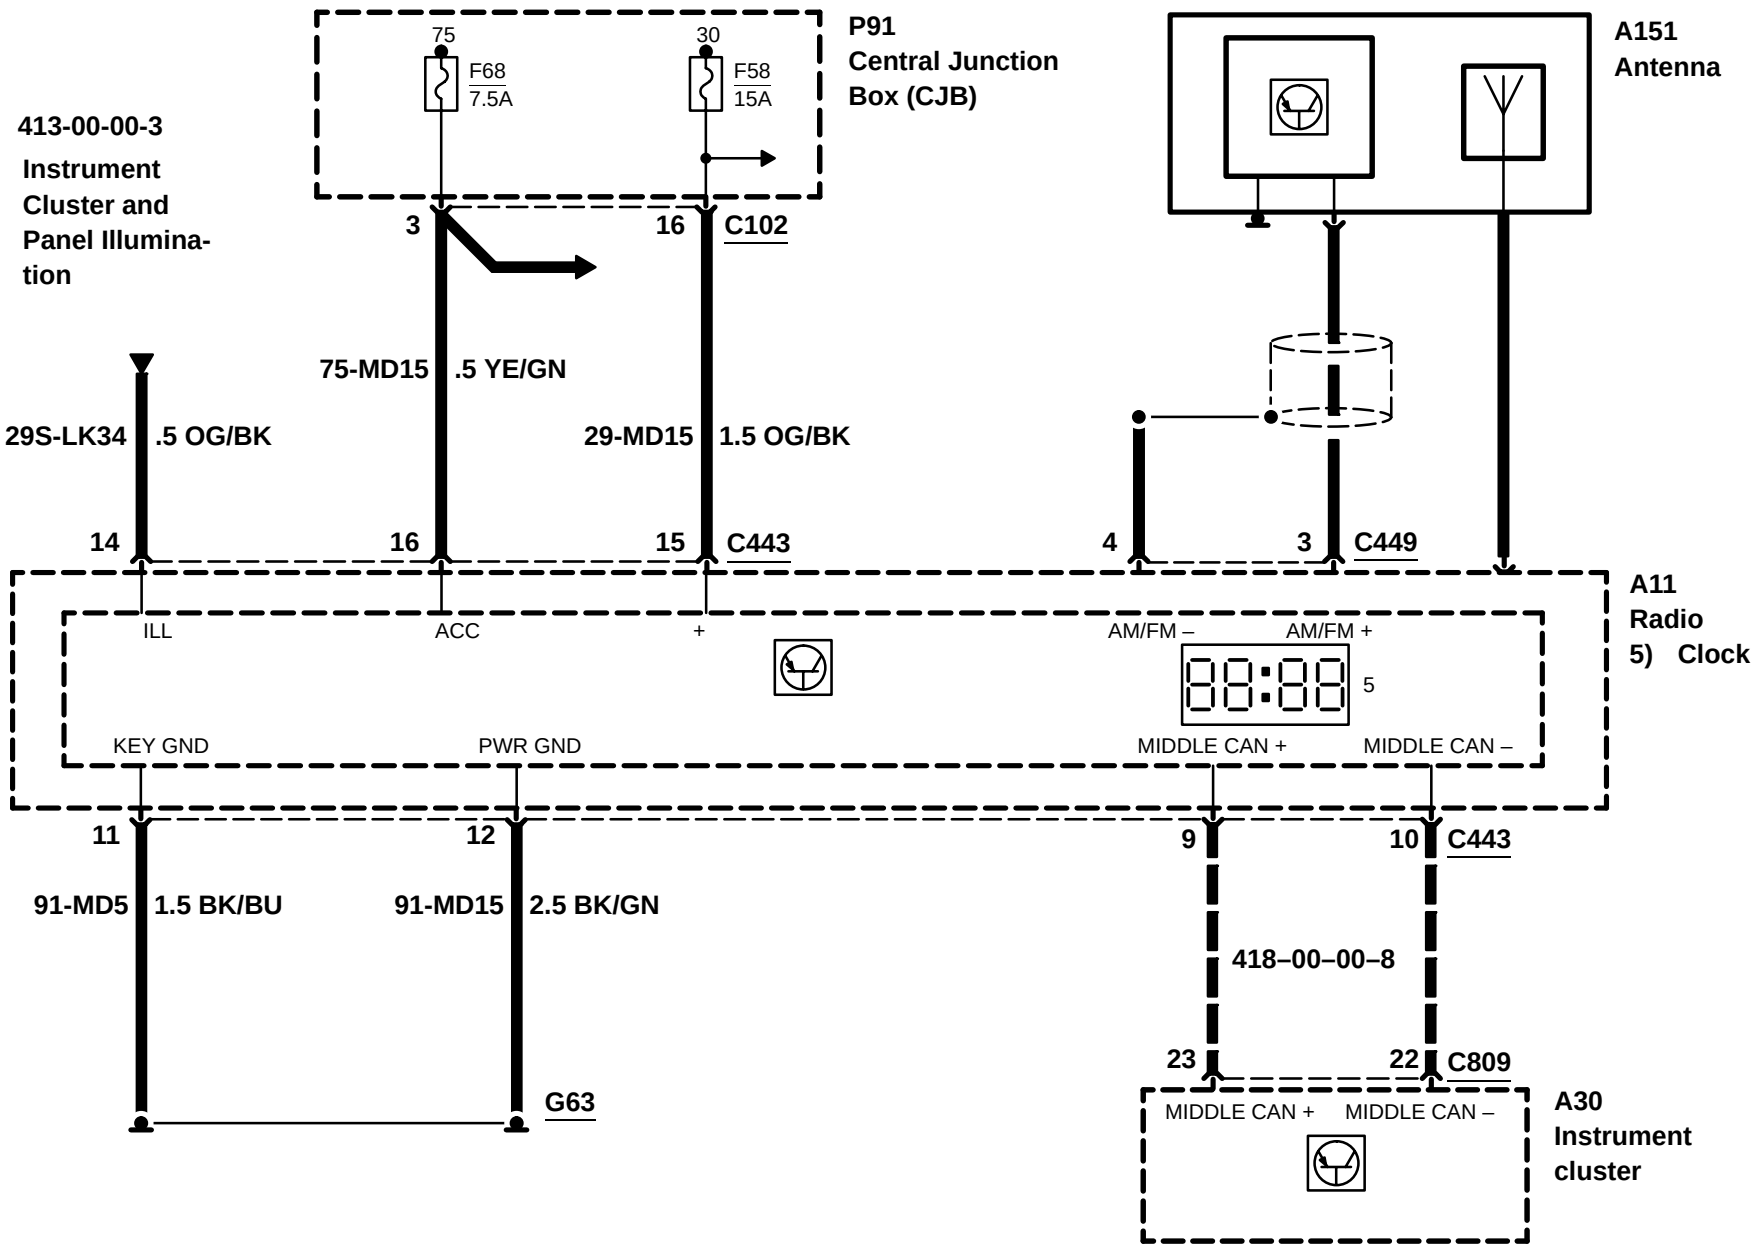
P91
Central Junction
Box (CJB)
75
30
F68
7.5A
F58
15A
A151
Antenna
413-00-00-3
Instrument
Cluster and
Panel Illumina-
tion
3
16
C102
75-MD15 .5 YE/GN
29S-LK34 .5 OG/BK
29-MD15 1.5 OG/BK
14
16
15
C443
4
3
C449
A11
Radio
5) Clock
ILL
ACC
+
AM/FM –
AM/FM +
5
KEY GND
PWR GND
MIDDLE CAN +
MIDDLE CAN –
11
12
9
10
C443
91-MD5 1.5 BK/BU
91-MD15 2.5 BK/GN
418–00–00–8
23
22
C809
G63
A30
Instrument
cluster
MIDDLE CAN +
MIDDLE CAN –


Parking Aid

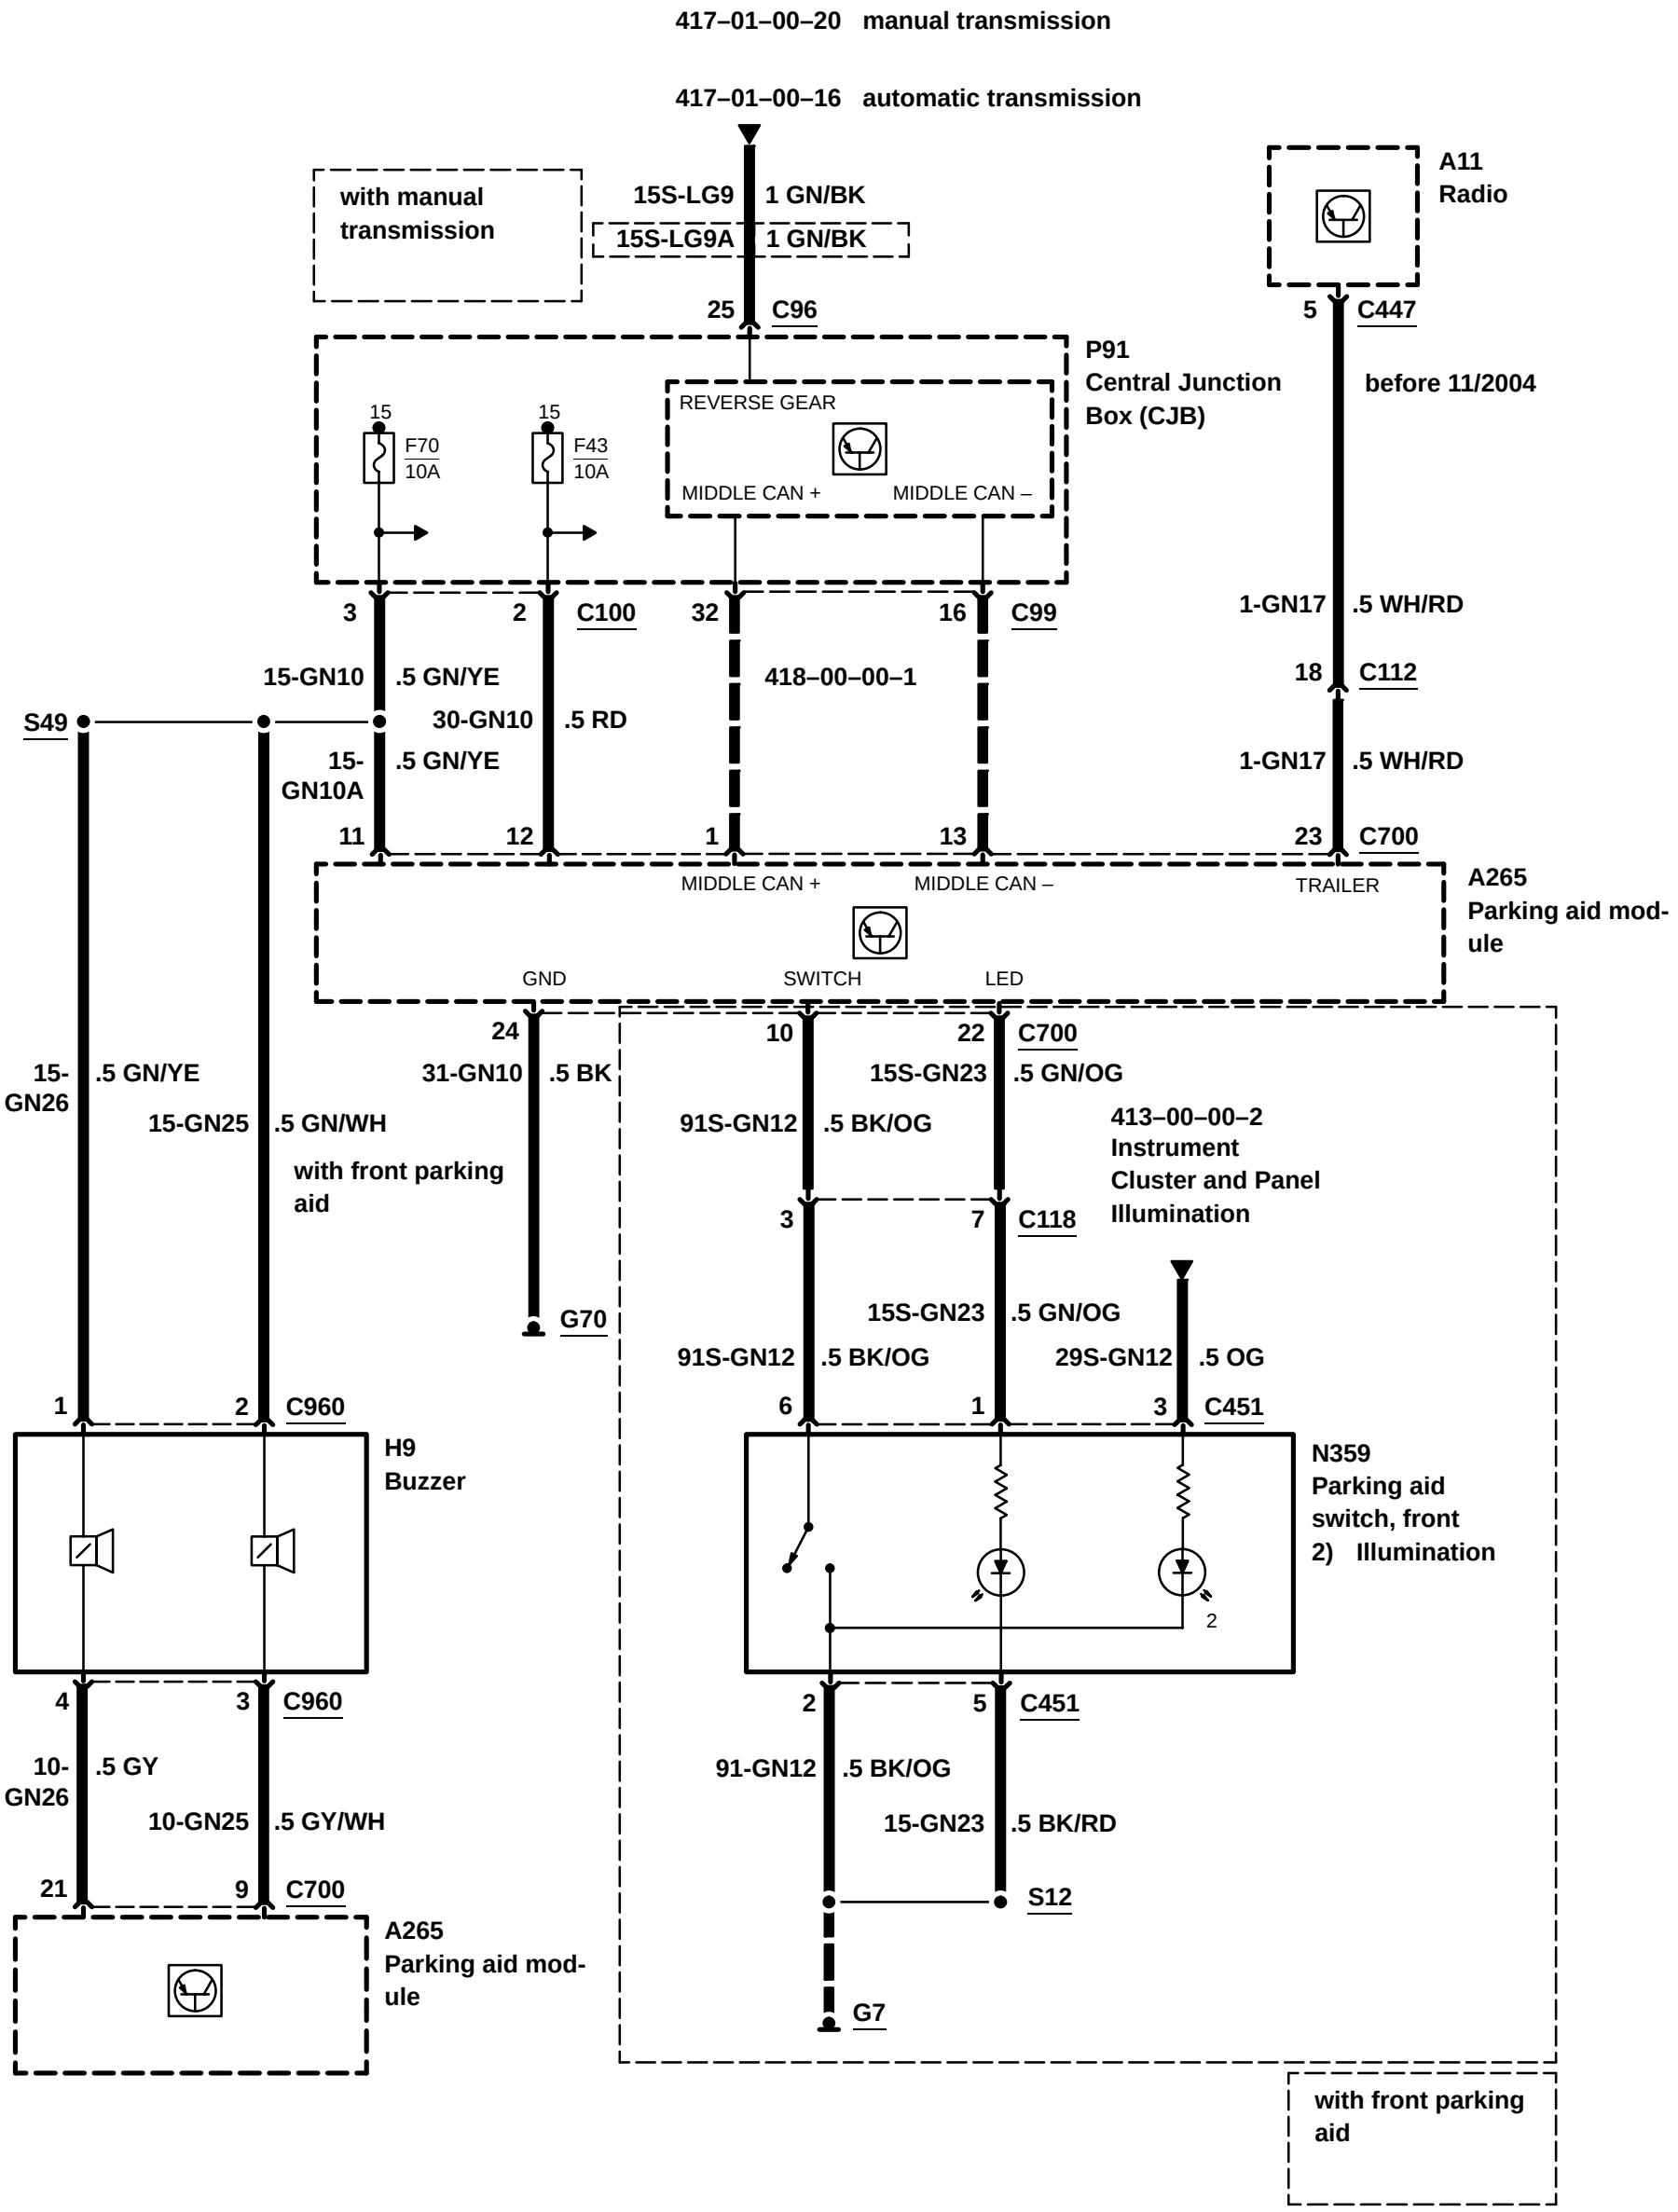
417–01–00–20 manual transmission
417–01–00–16 automatic transmission
with manual transmission
15S-LG9 1 GN/BK
15S-LG9A 1 GN/BK
25 C96
P91
Central Junction Box (CJB)
REVERSE GEAR
15
F70
10A
15
F43
10A
MIDDLE CAN +
MIDDLE CAN –
3
2
C100
32
16
C99
15-GN10 .5 GN/YE
30-GN10 .5 RD
418–00–00–1
S49
15-GN10A .5 GN/YE
11
12
1
13
MIDDLE CAN +
MIDDLE CAN –
A11
Radio
5 C447
before 11/2004
1-GN17 .5 WH/RD
18 C112
1-GN17 .5 WH/RD
23 C700
TRAILER
A265
Parking aid module
GND
SWITCH
LED
24
31-GN10 .5 BK
G70
10
22
C700
15S-GN23 .5 GN/OG
91S-GN12 .5 BK/OG
413–00–00–2
Instrument Cluster and Panel Illumination
3
7
C118
15S-GN23 .5 GN/OG
91S-GN12 .5 BK/OG
29S-GN12 .5 OG
15-GN26 .5 GN/YE
15-GN25 .5 GN/WH
with front parking aid
1
2
C960
6
1
3
C451
H9
Buzzer
N359
Parking aid switch, front
2) Illumination
2
4
3
C960
2
5
C451
10-GN26 .5 GY
10-GN25 .5 GY/WH
91-GN12 .5 BK/OG
15-GN23 .5 BK/RD
21
9
C700
S12
A265
Parking aid module
G7
with front parking aid


Parking Aid – front bumper

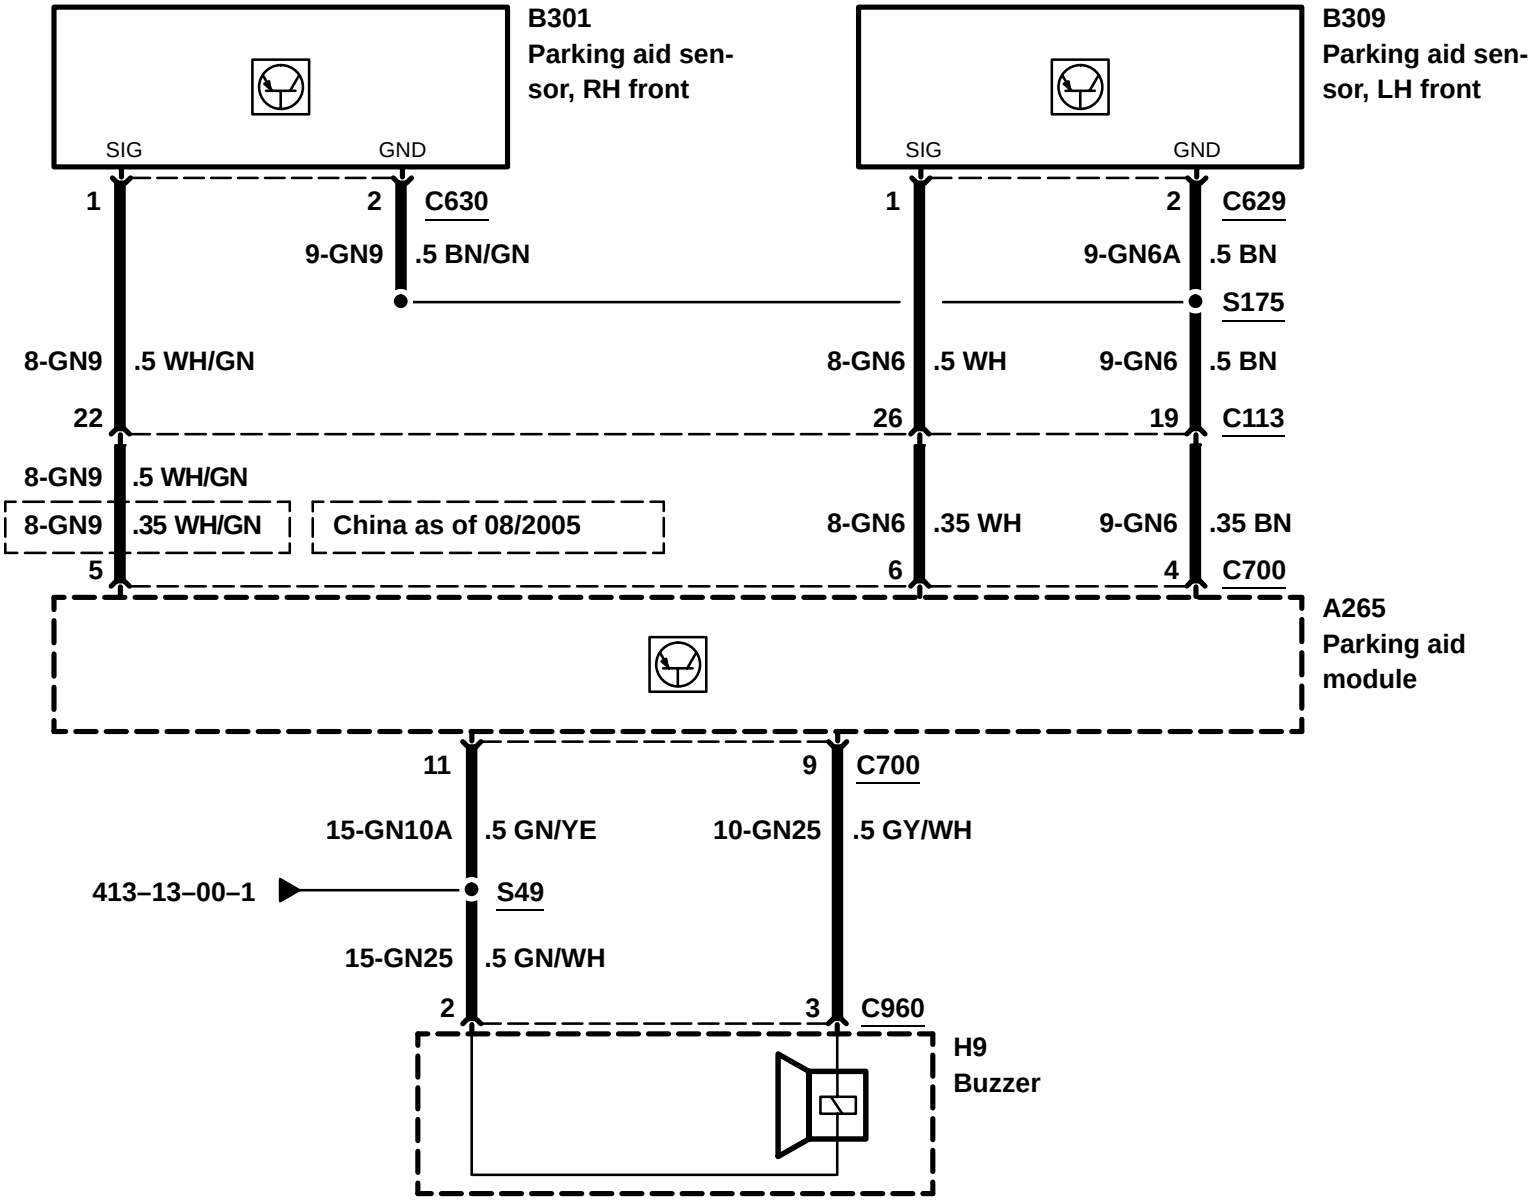


Parking Aid – rear bumper, before 11/2004

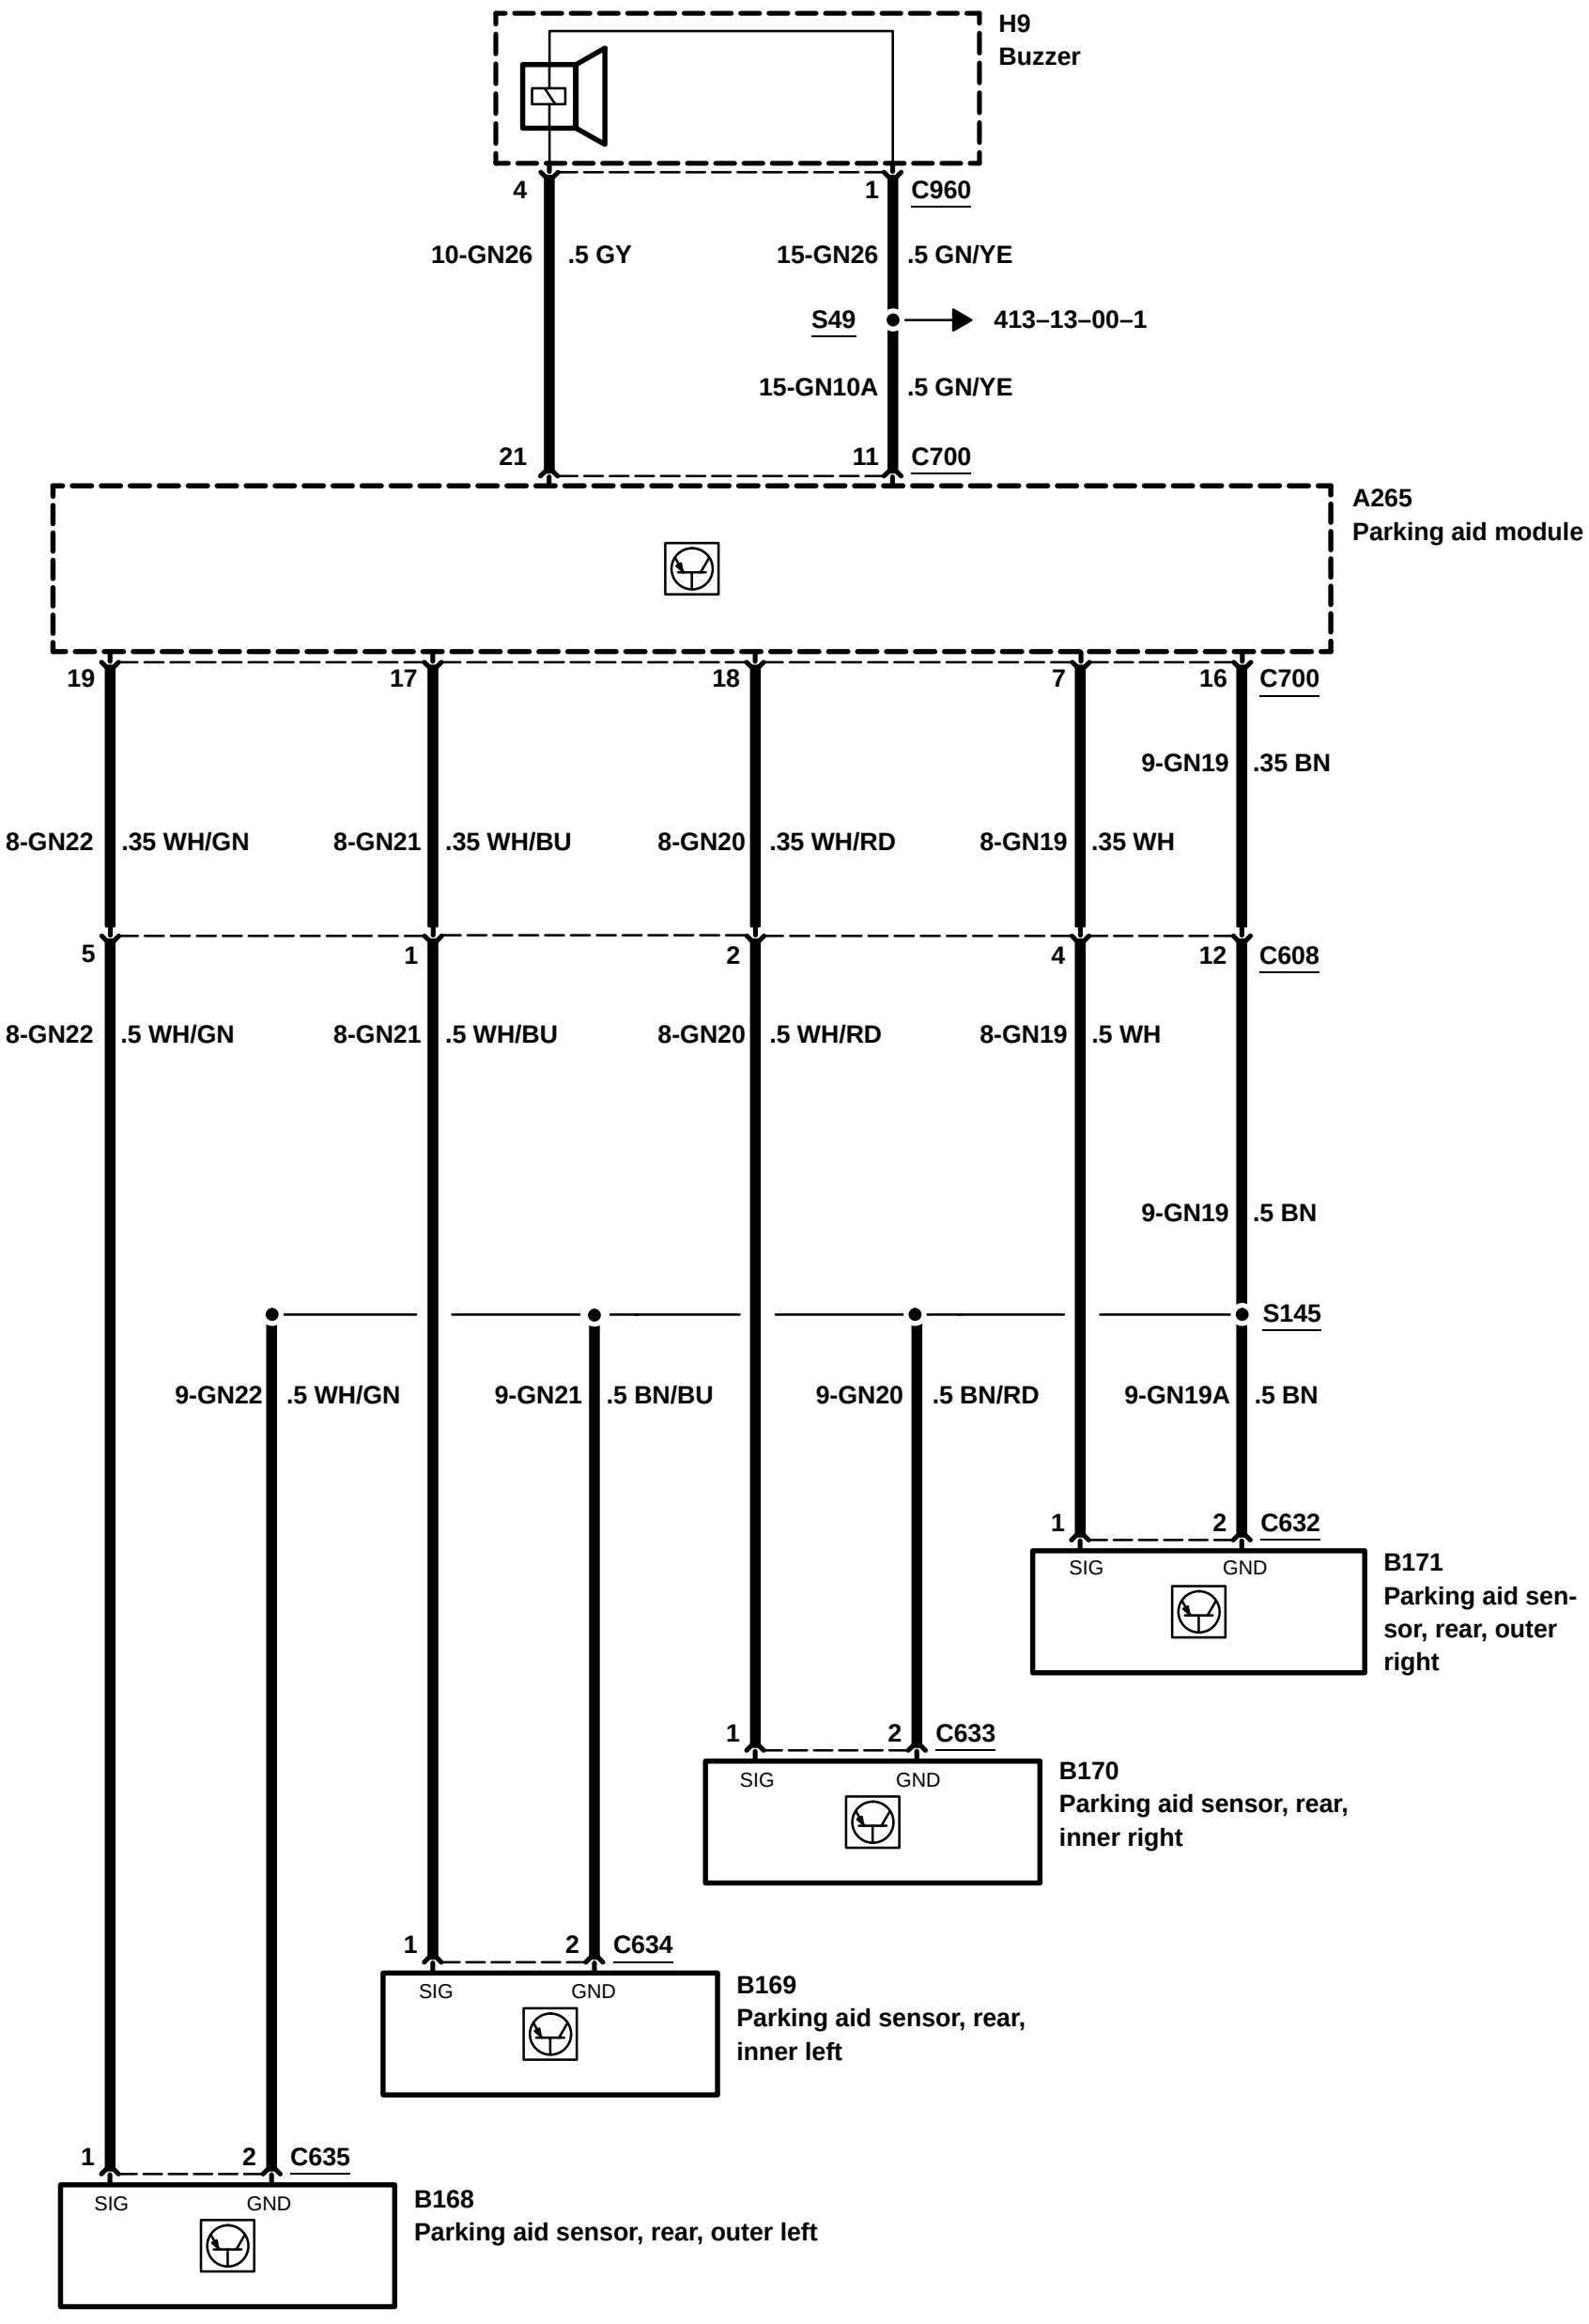


Parking Aid – rear bumper, as of 11/2004

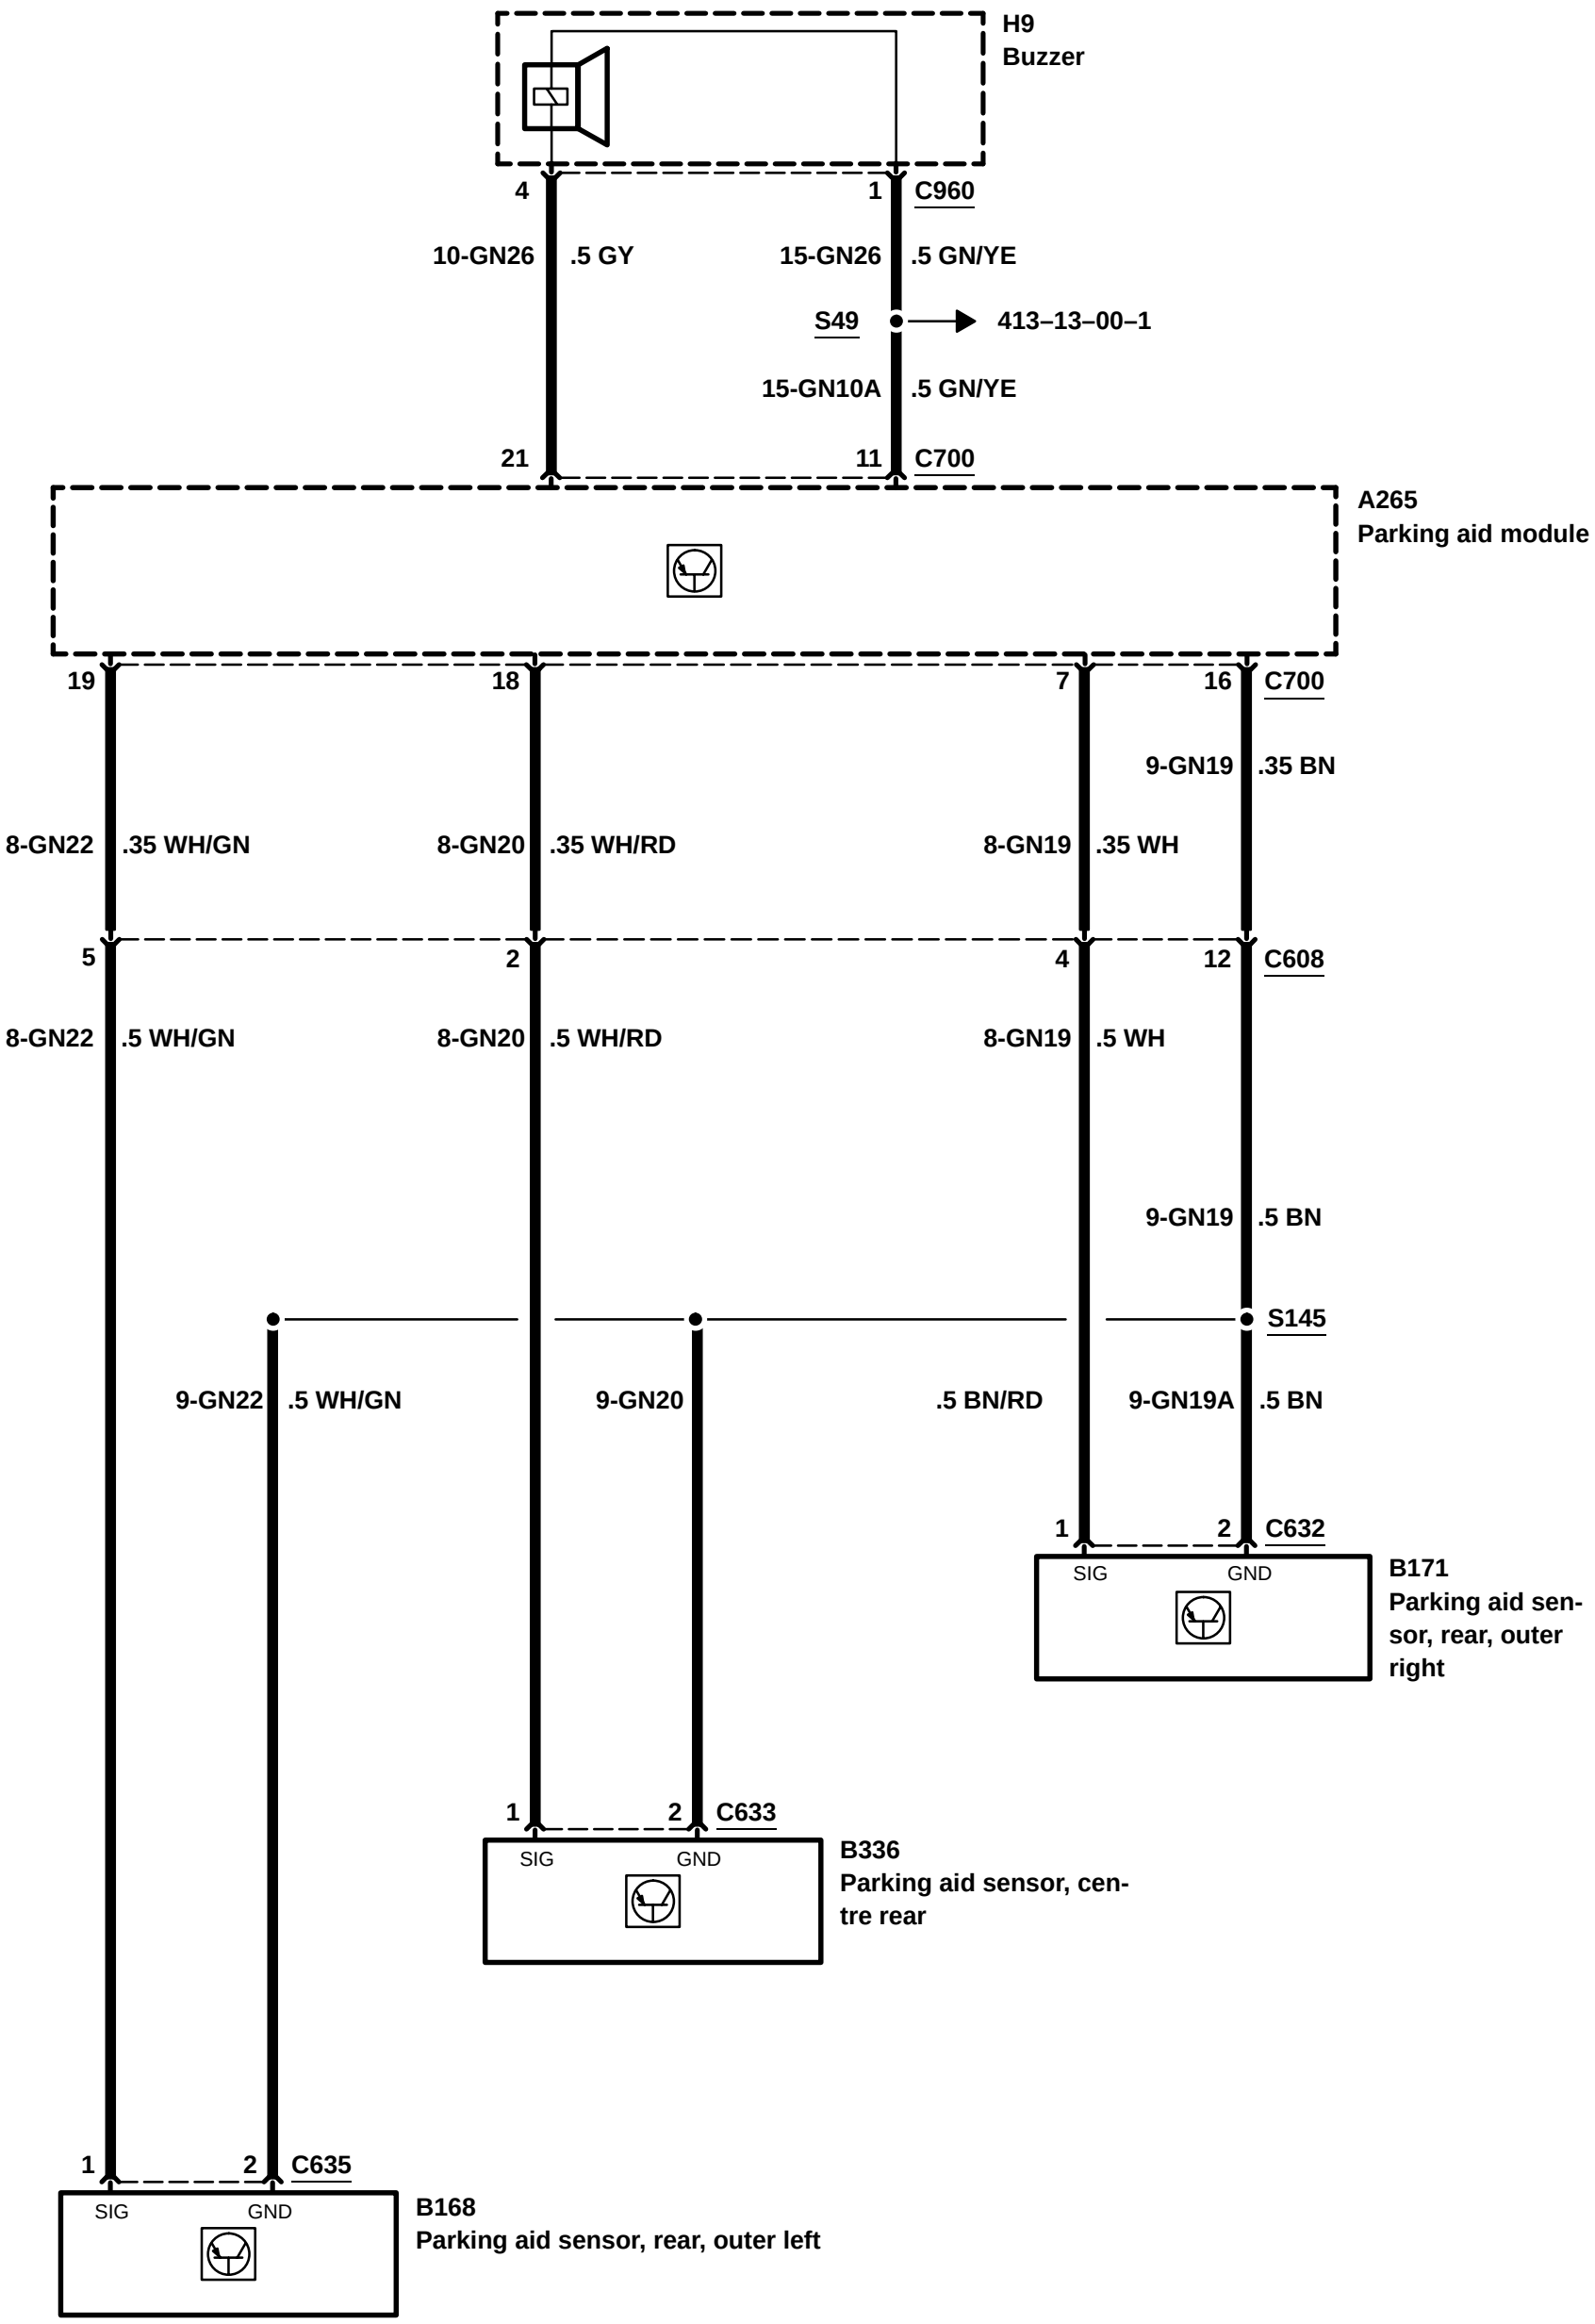


Generator and Regulator – 1.6L (Z6)

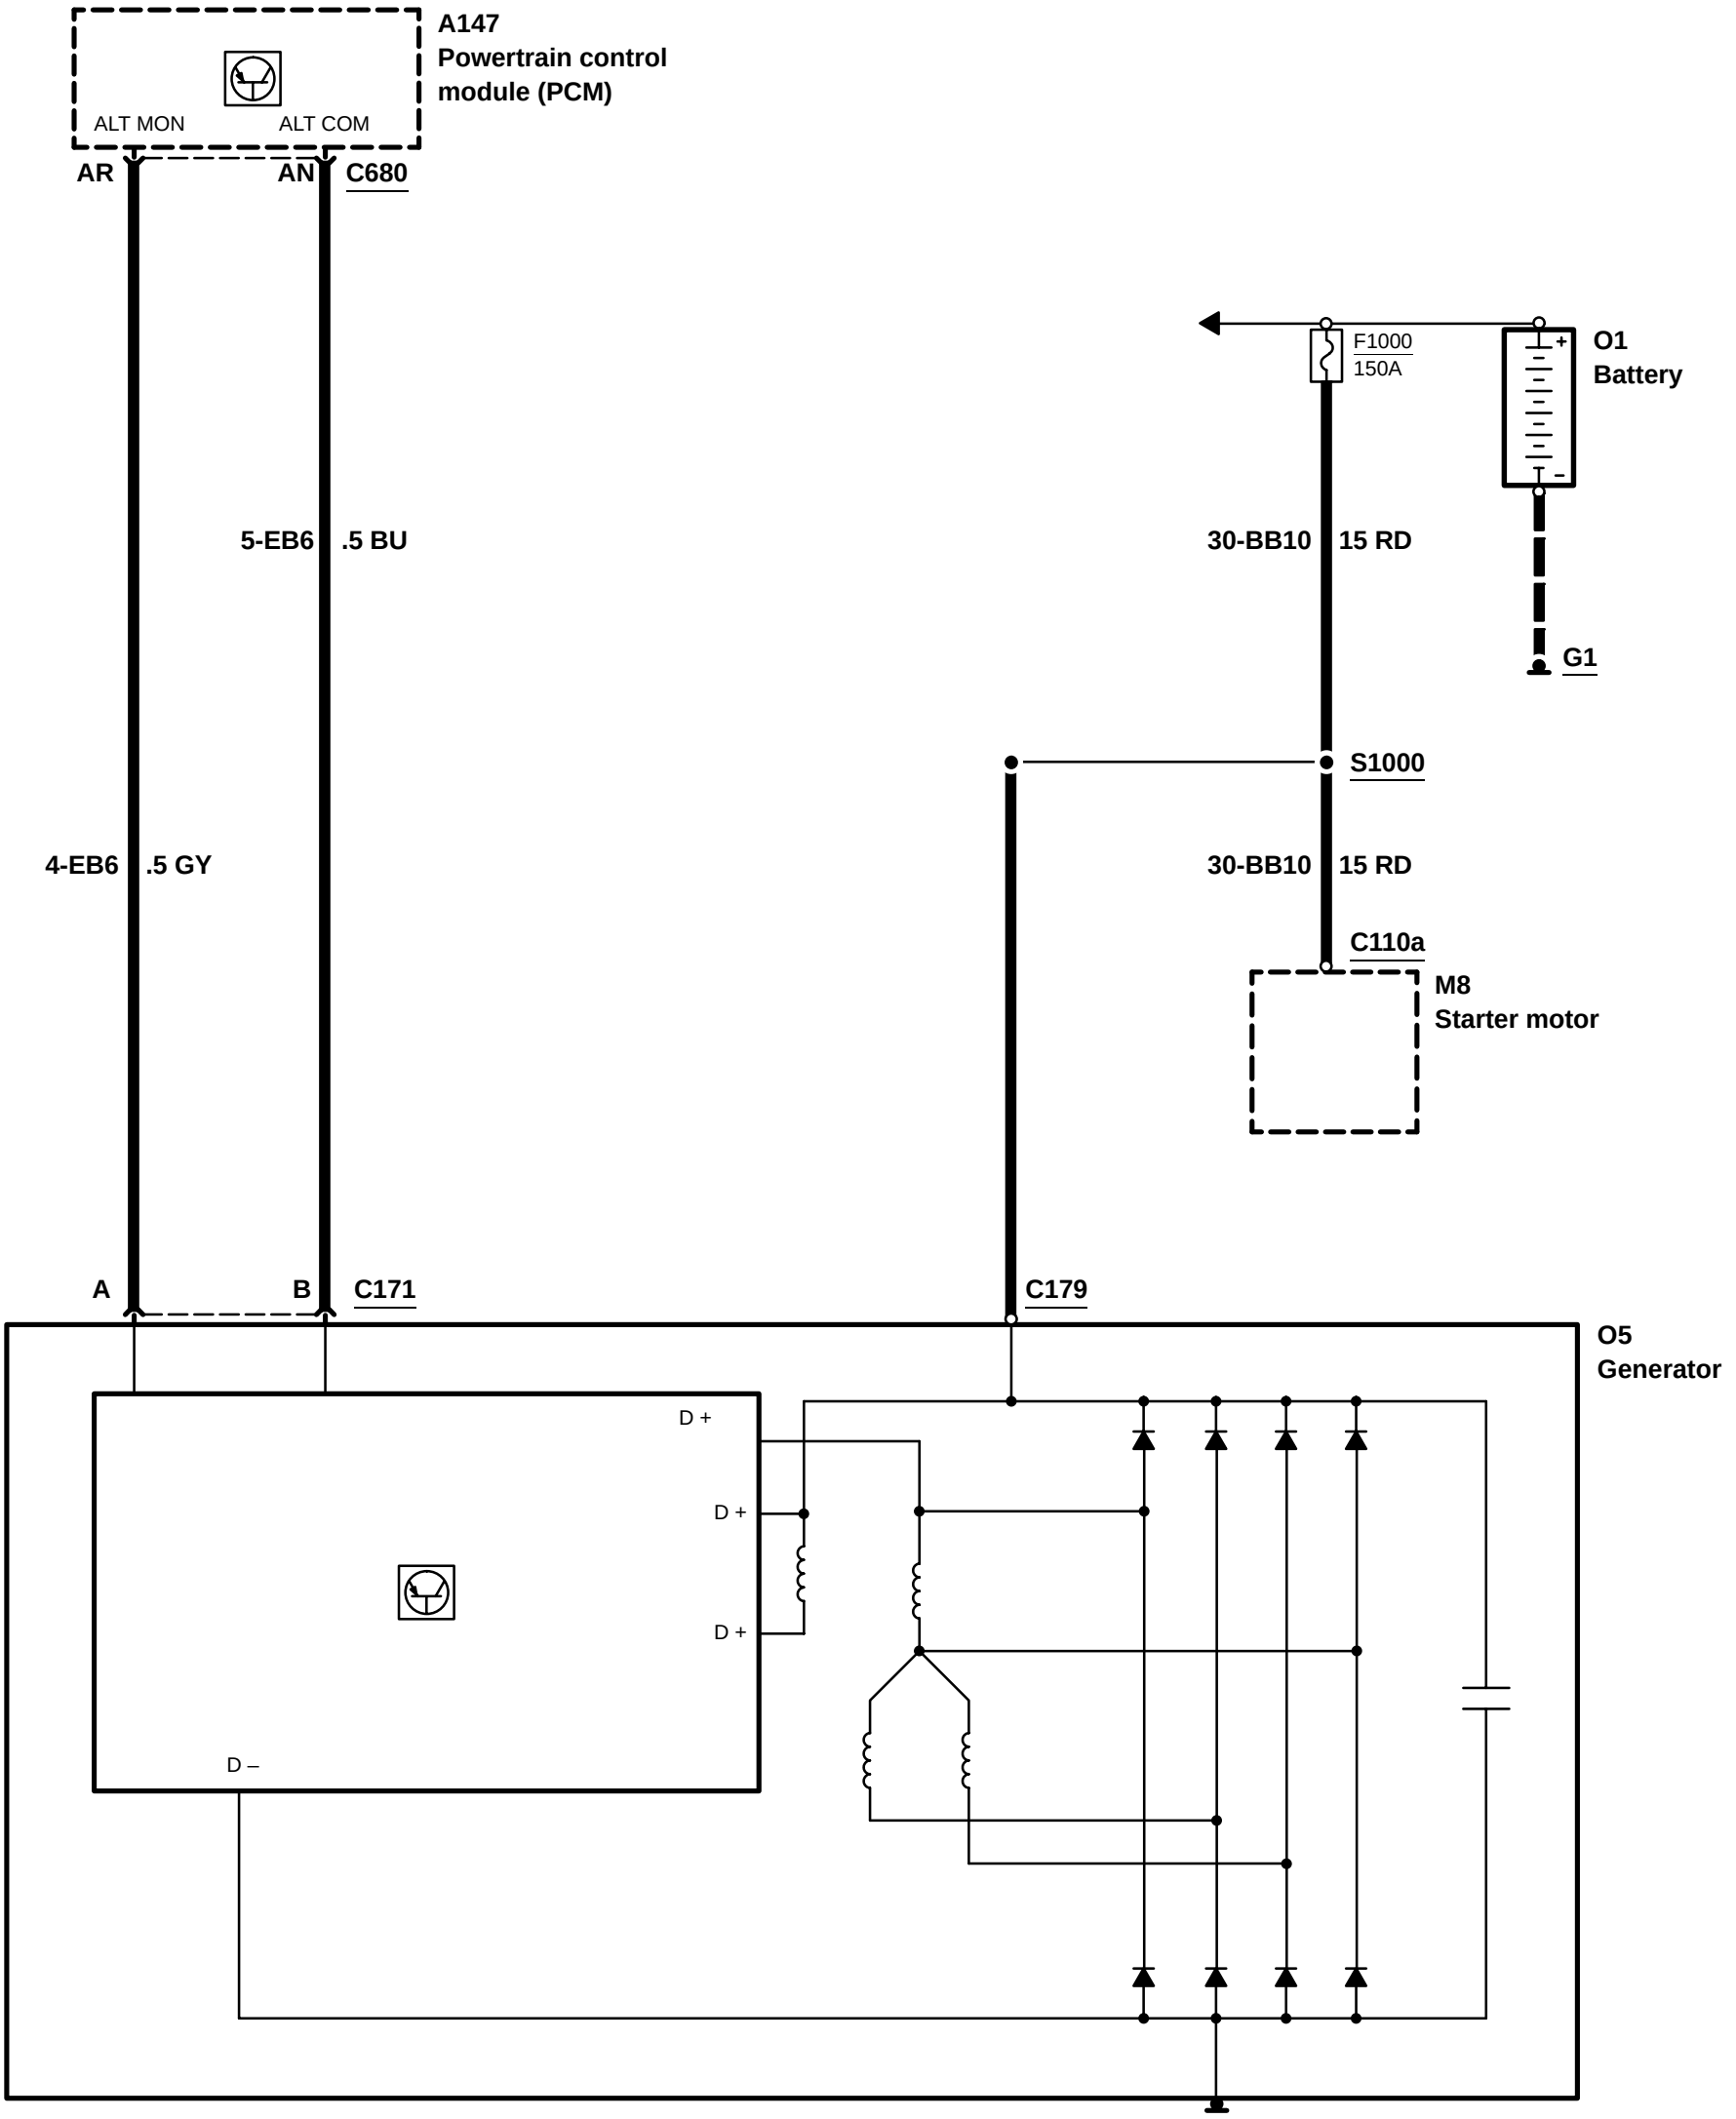


Generator and Regulator – 1.8/2.0L Duratec–HE (MI4)

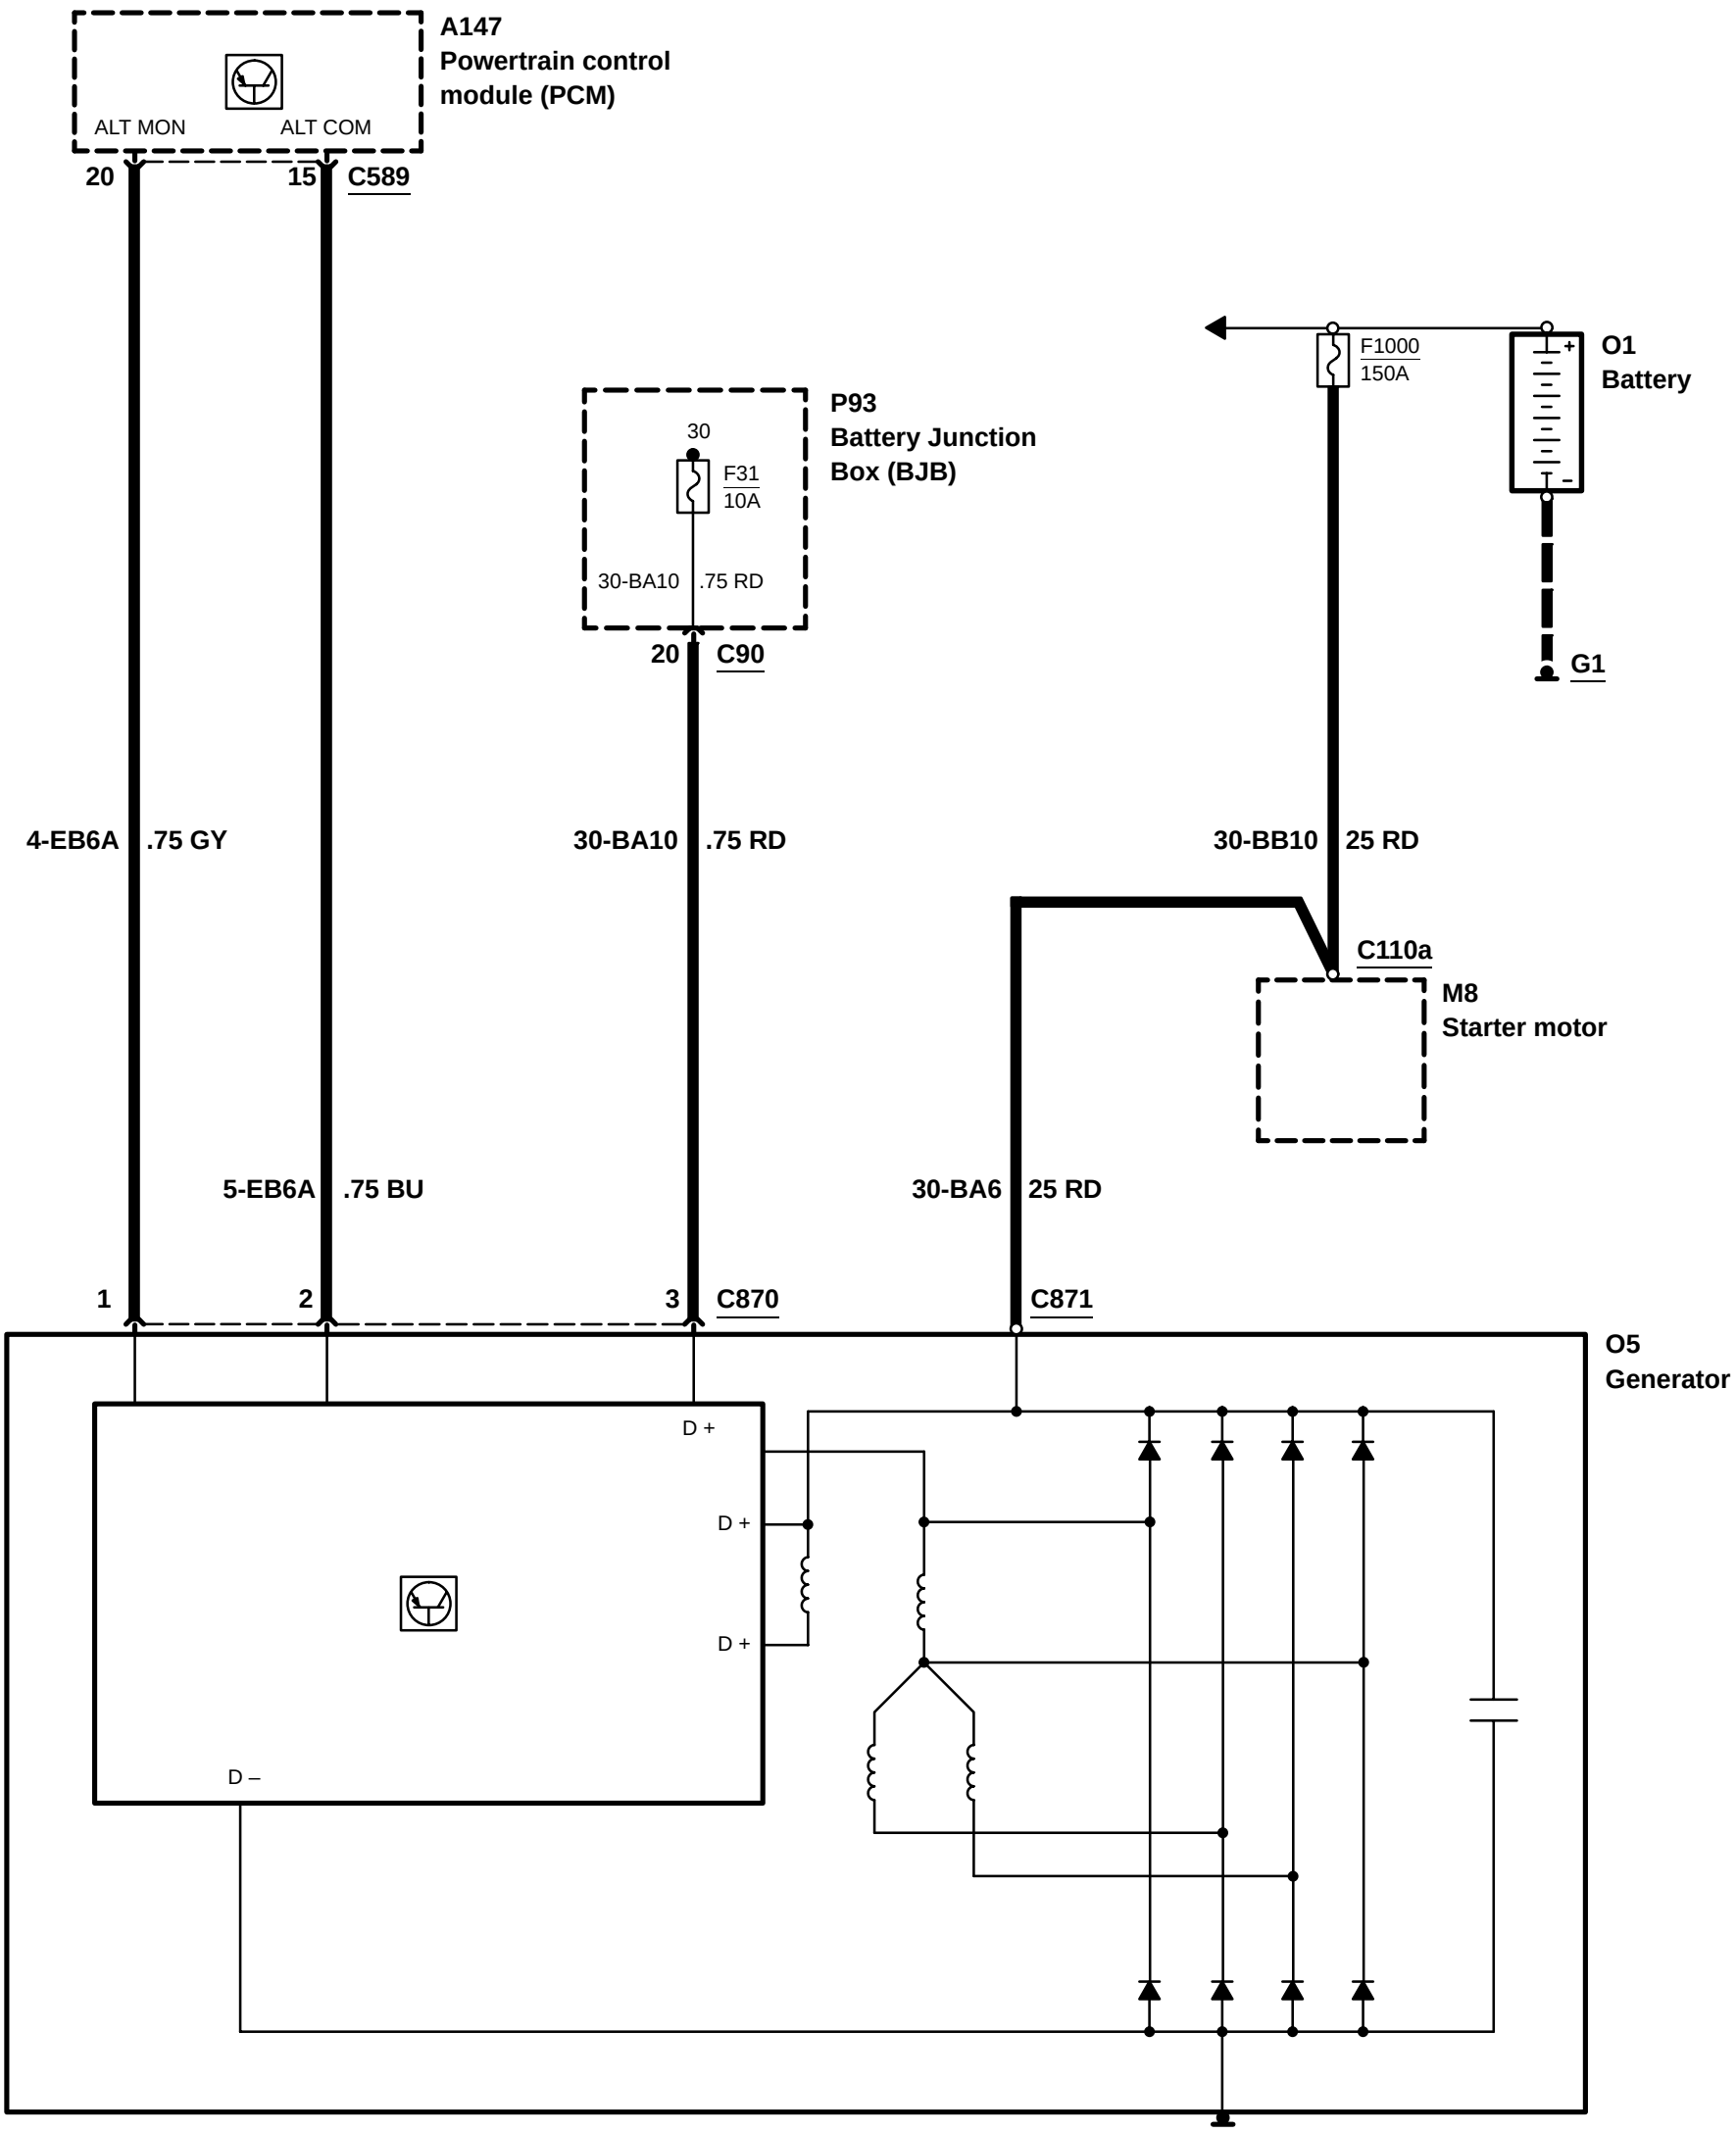


Generator and Regulator – 2.0L Duratorq–TDCi (DW) Diesel

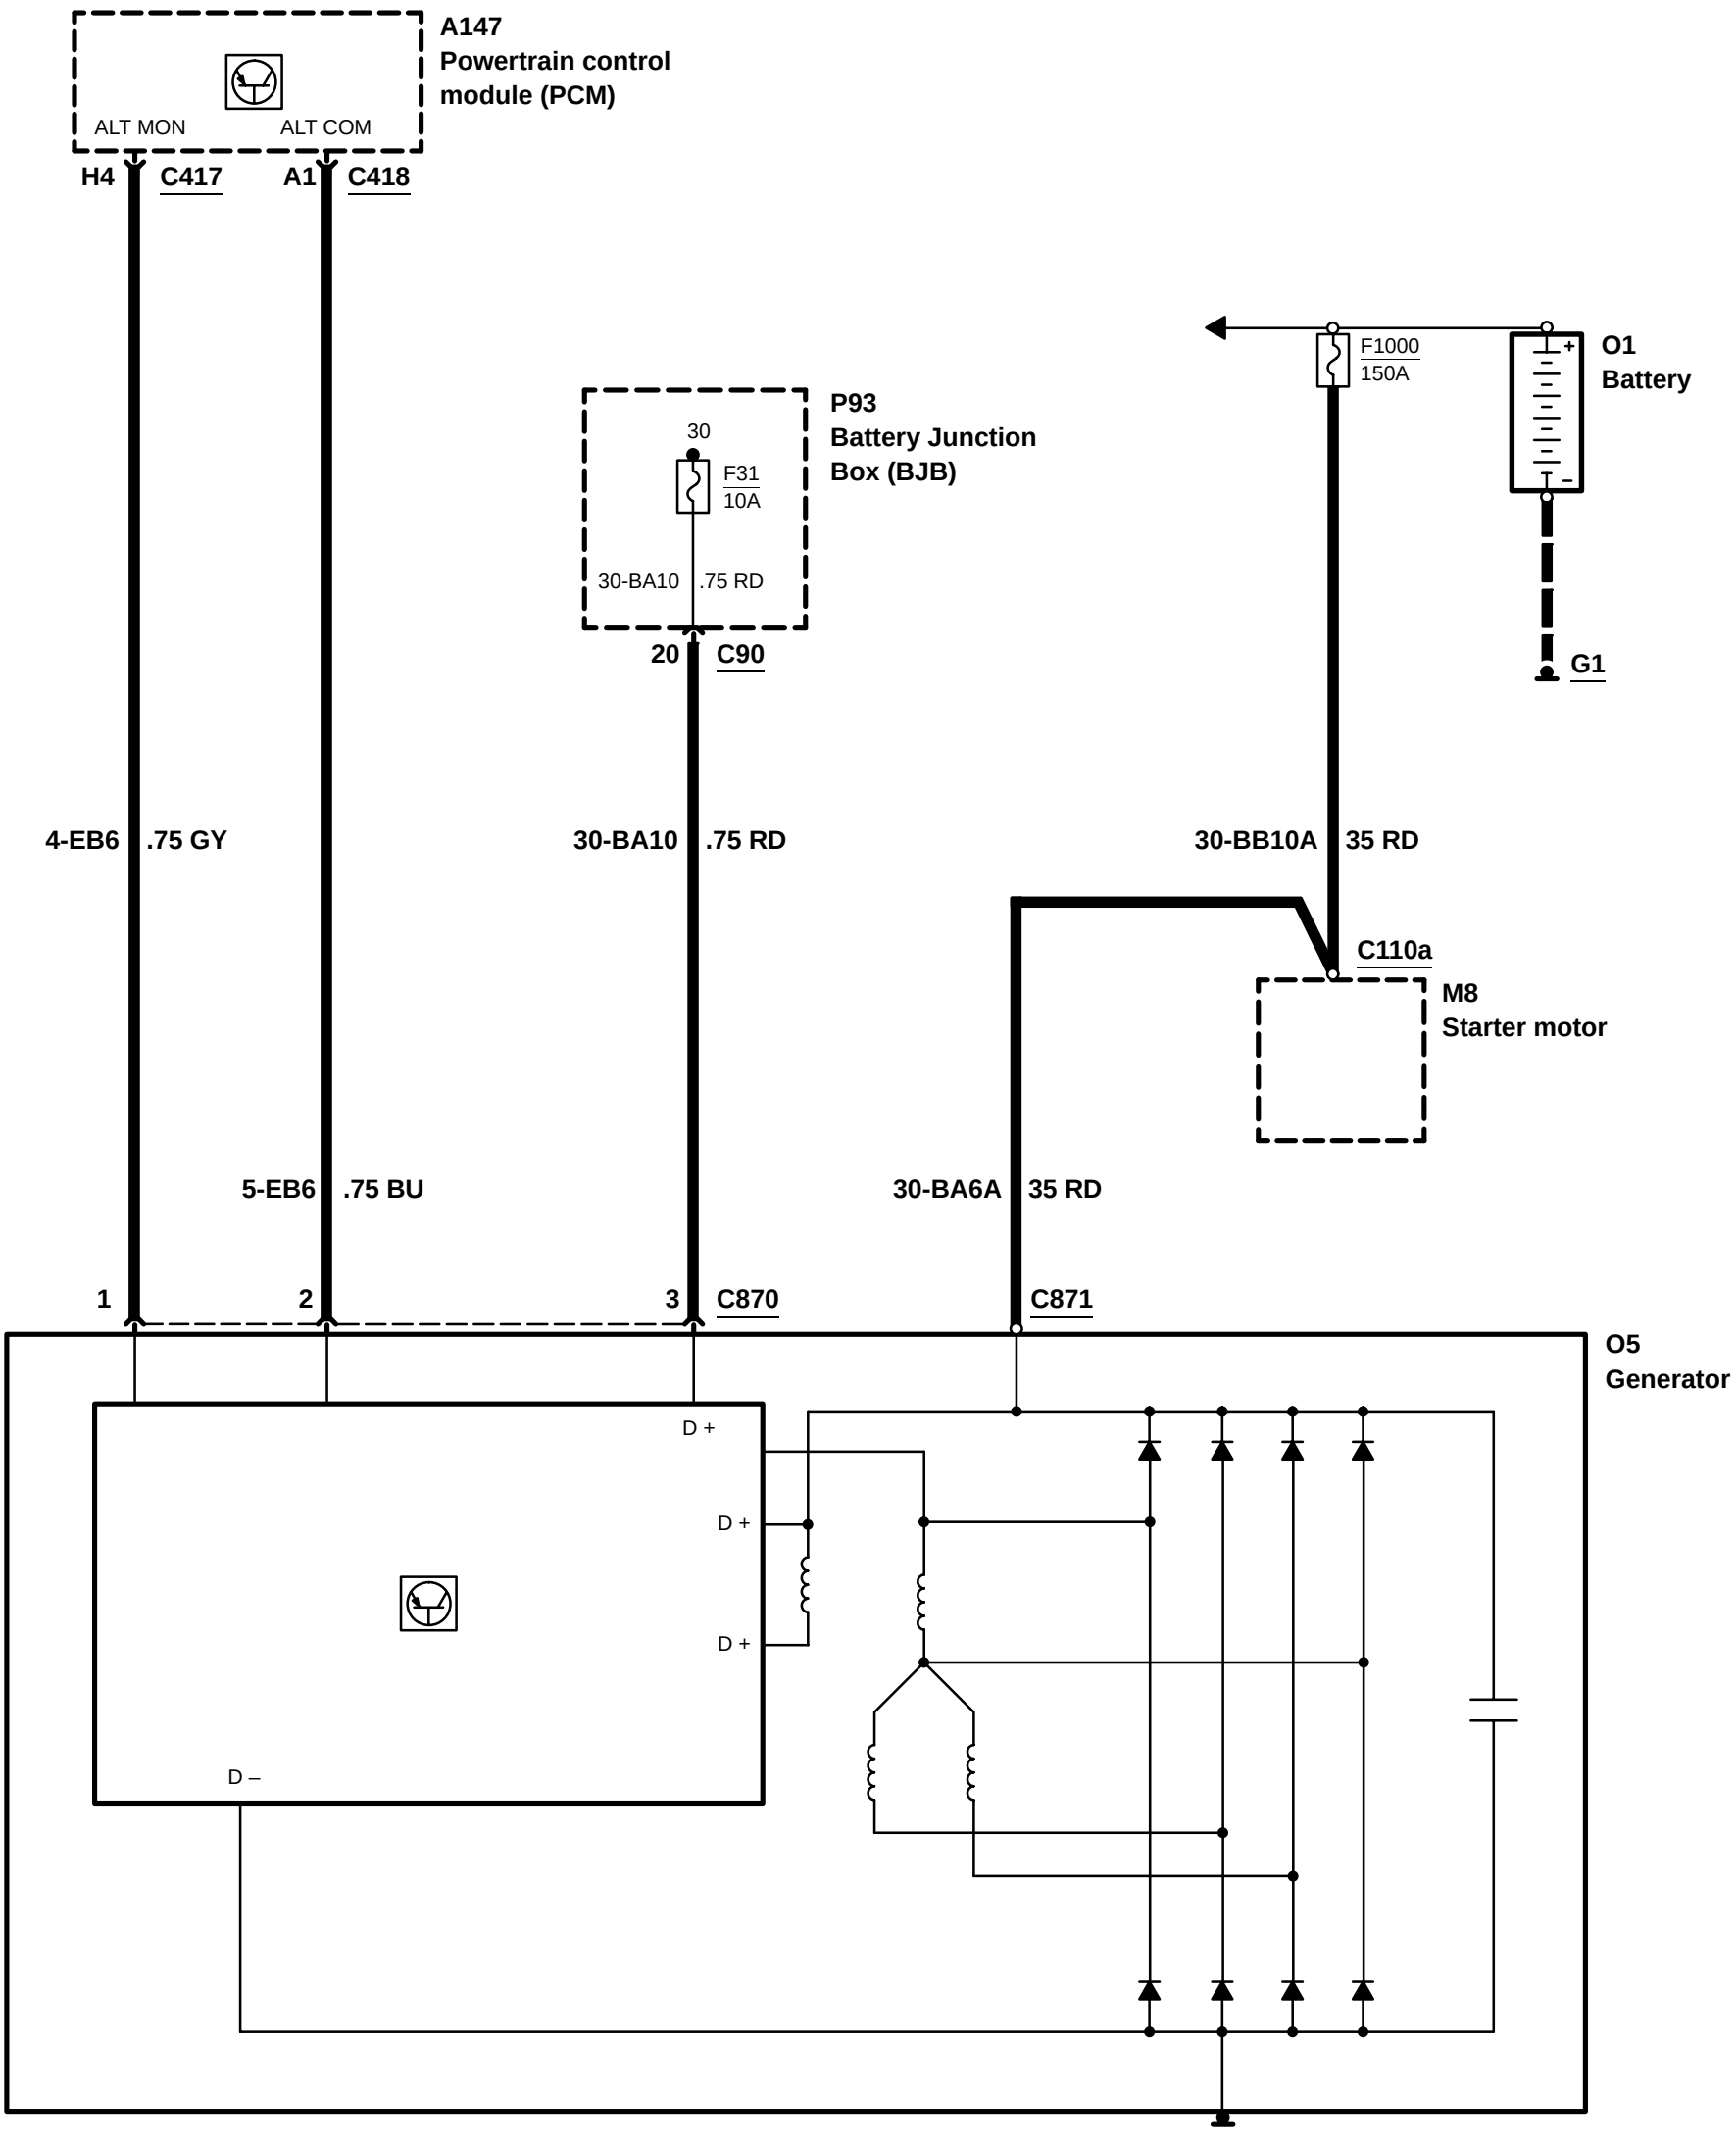


Audio Unit – except Taiwan

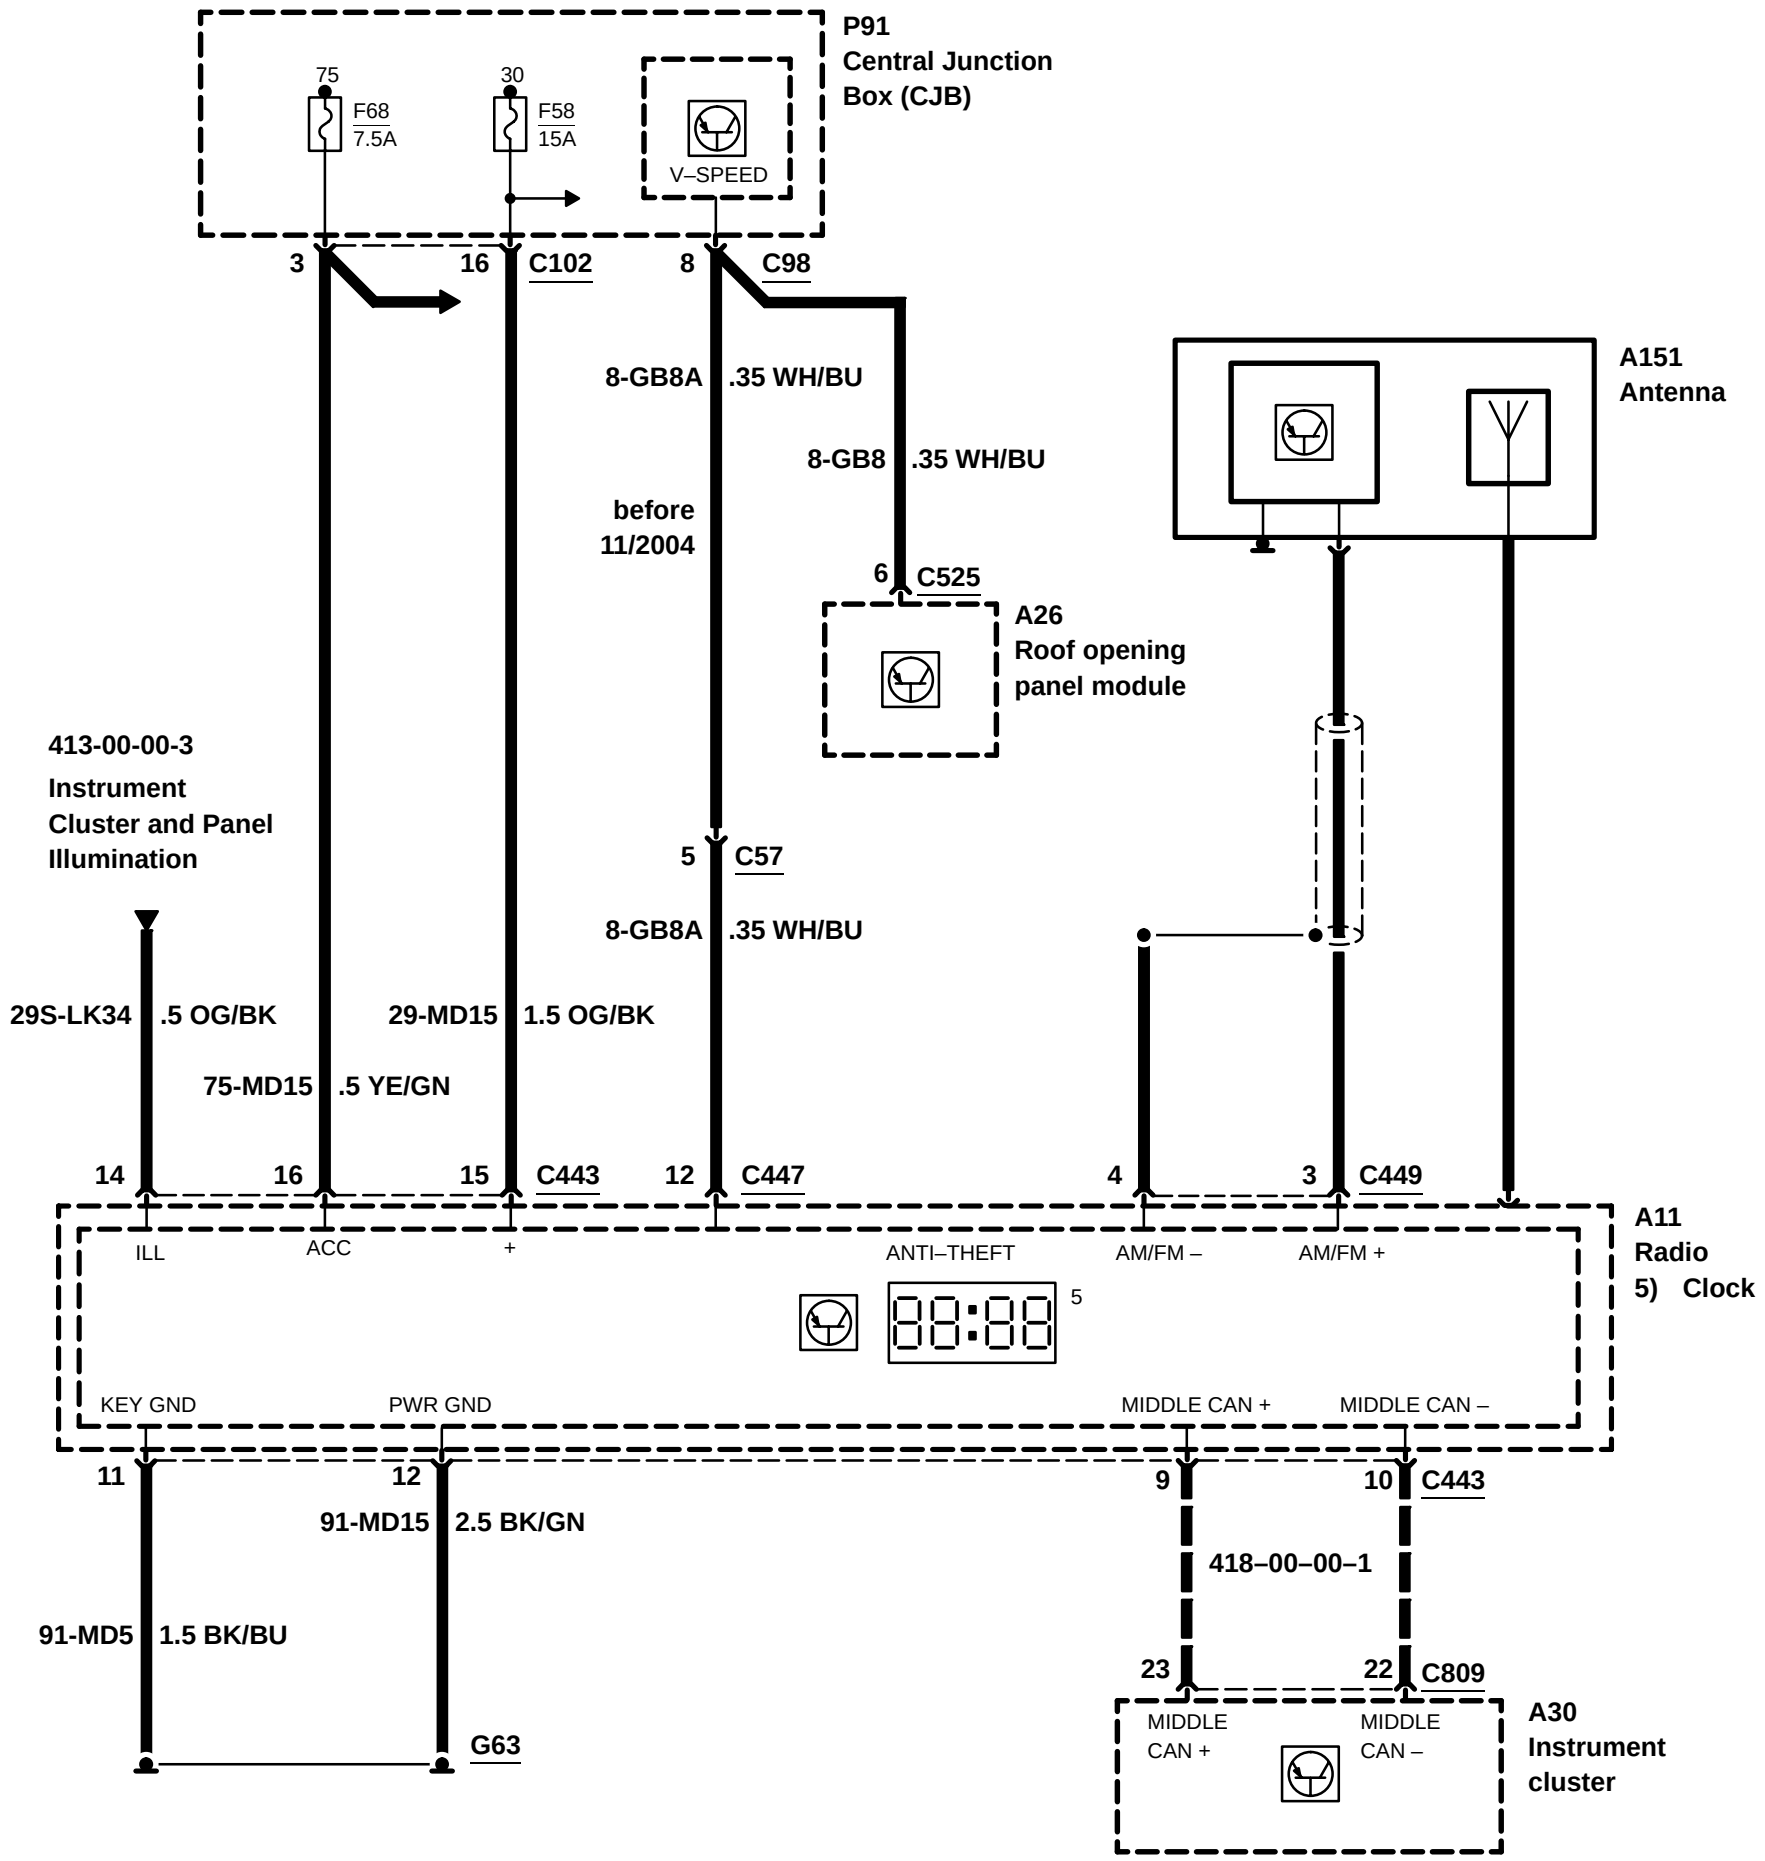


Audio Unit – Taiwan

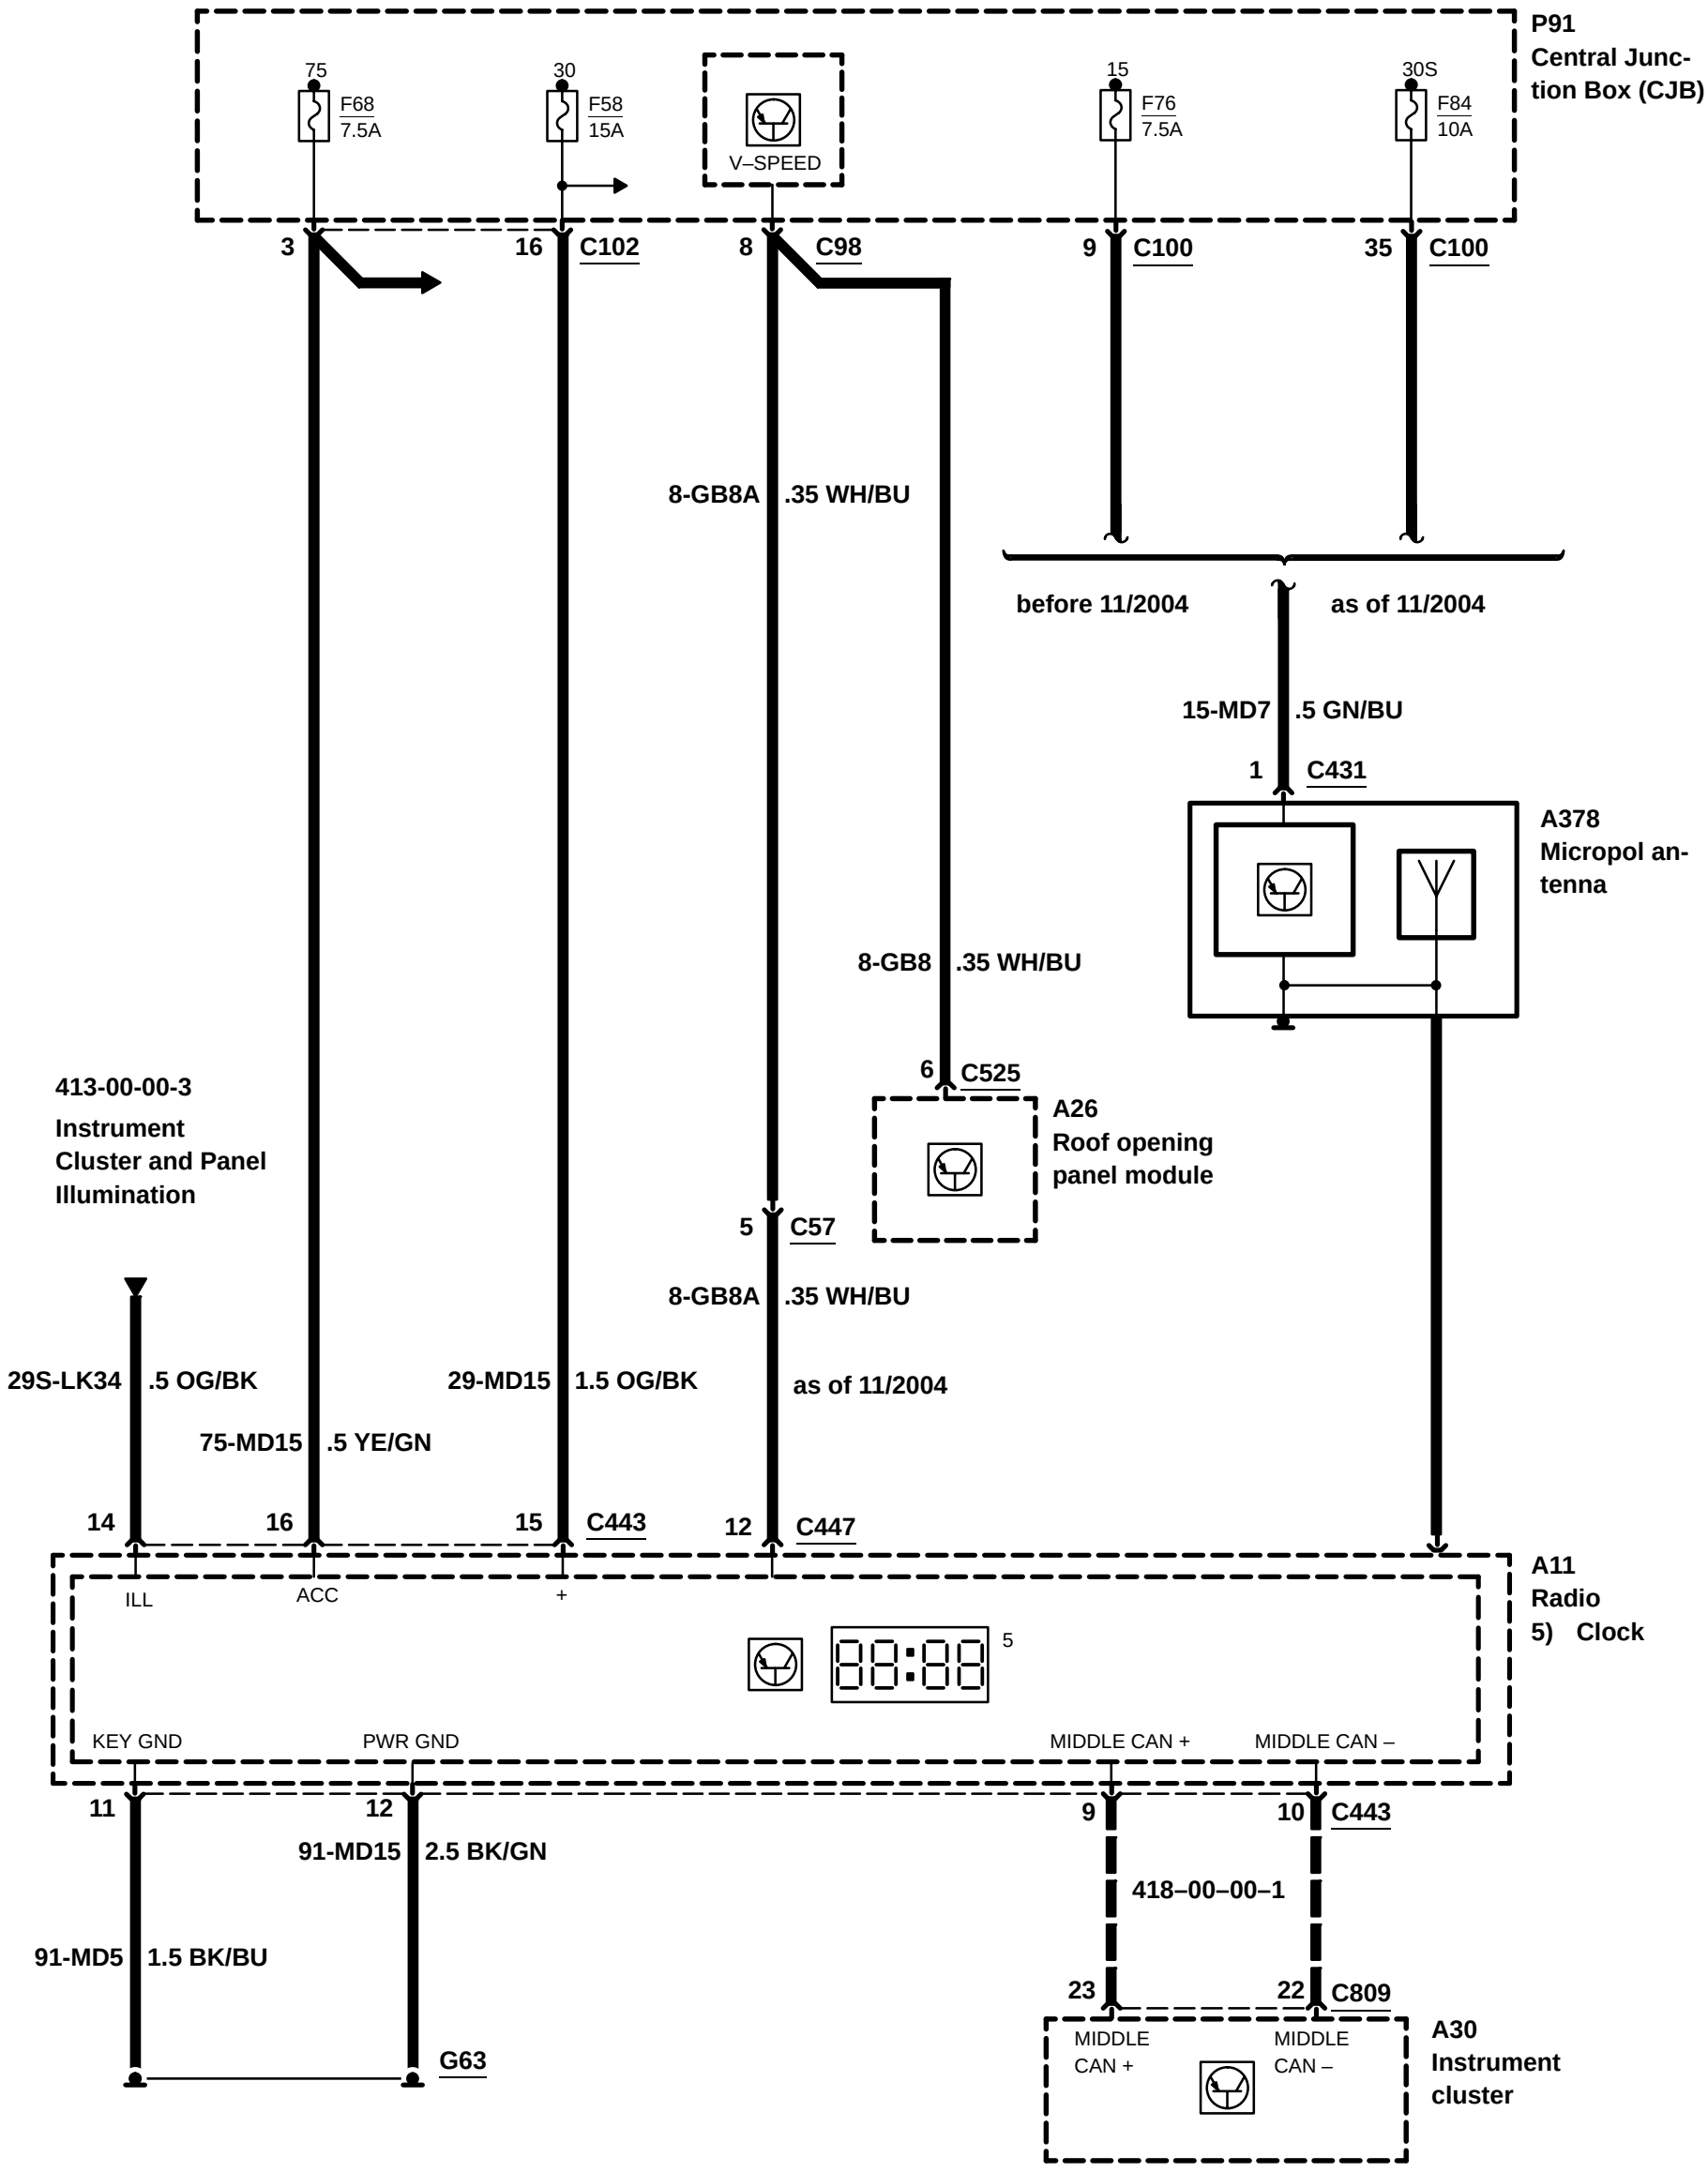


Audio Unit

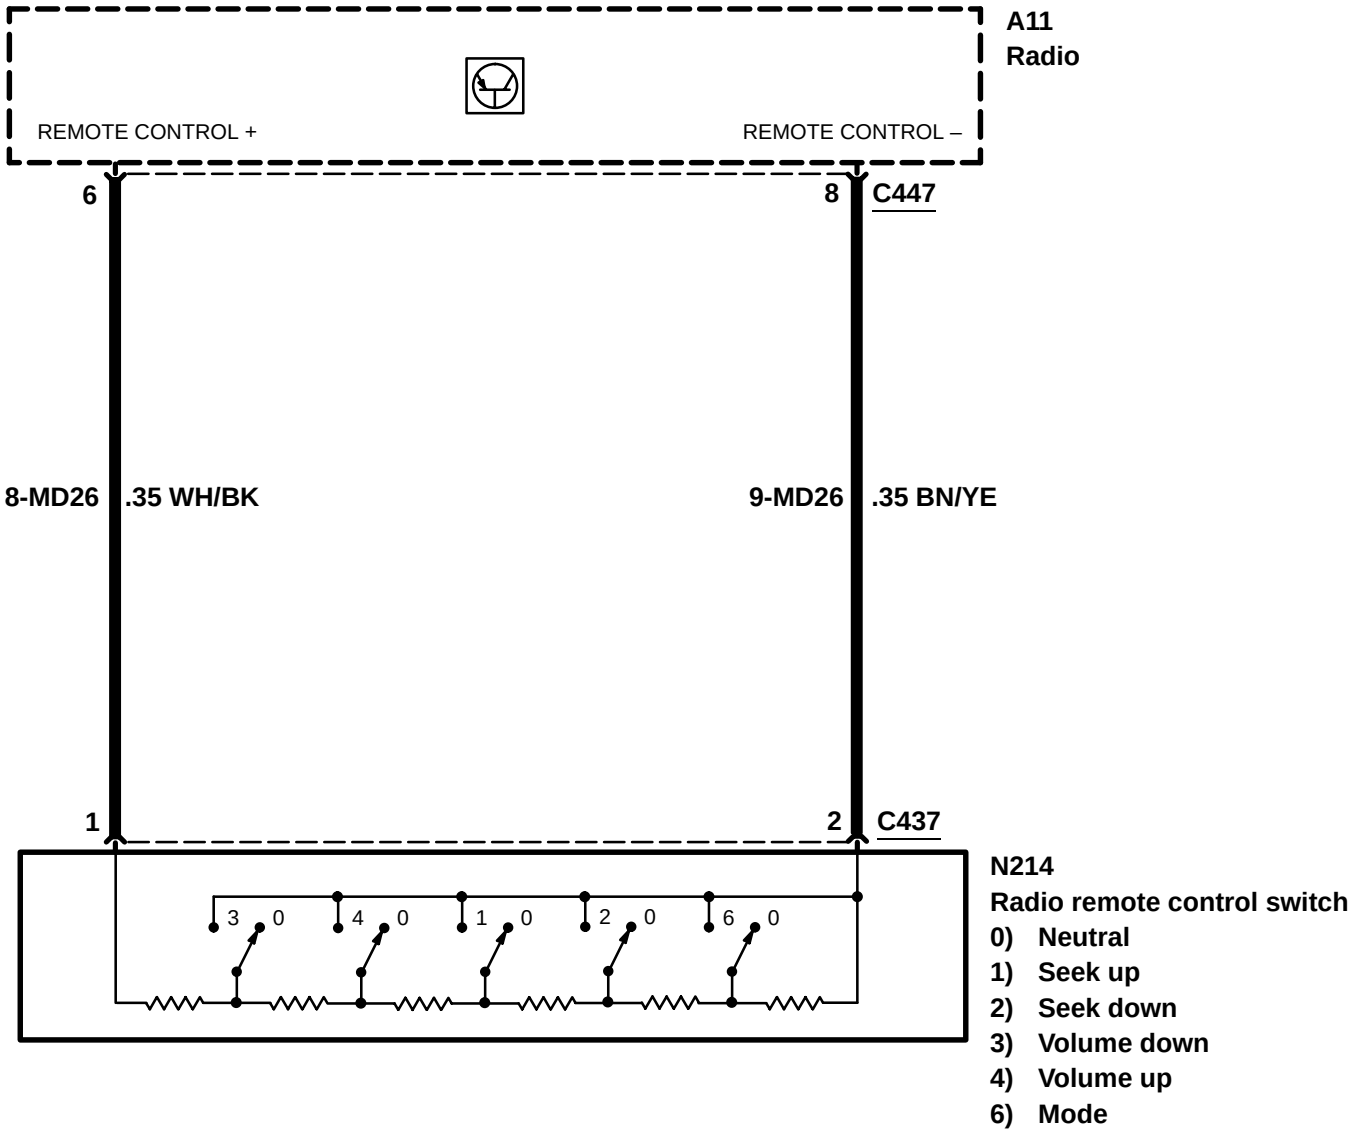
A11
Radio
REMOTE CONTROL +
REMOTE CONTROL –
6
8
C447
8-MD26
.35 WH/BK
9-MD26
.35 BN/YE
1
2
C437
3 0
4 0
1 0
2 0
6 0
N214
Radio remote control switch
0) Neutral
1) Seek up
2) Seek down
3) Volume down
4) Volume up
6) Mode


Audio Unit

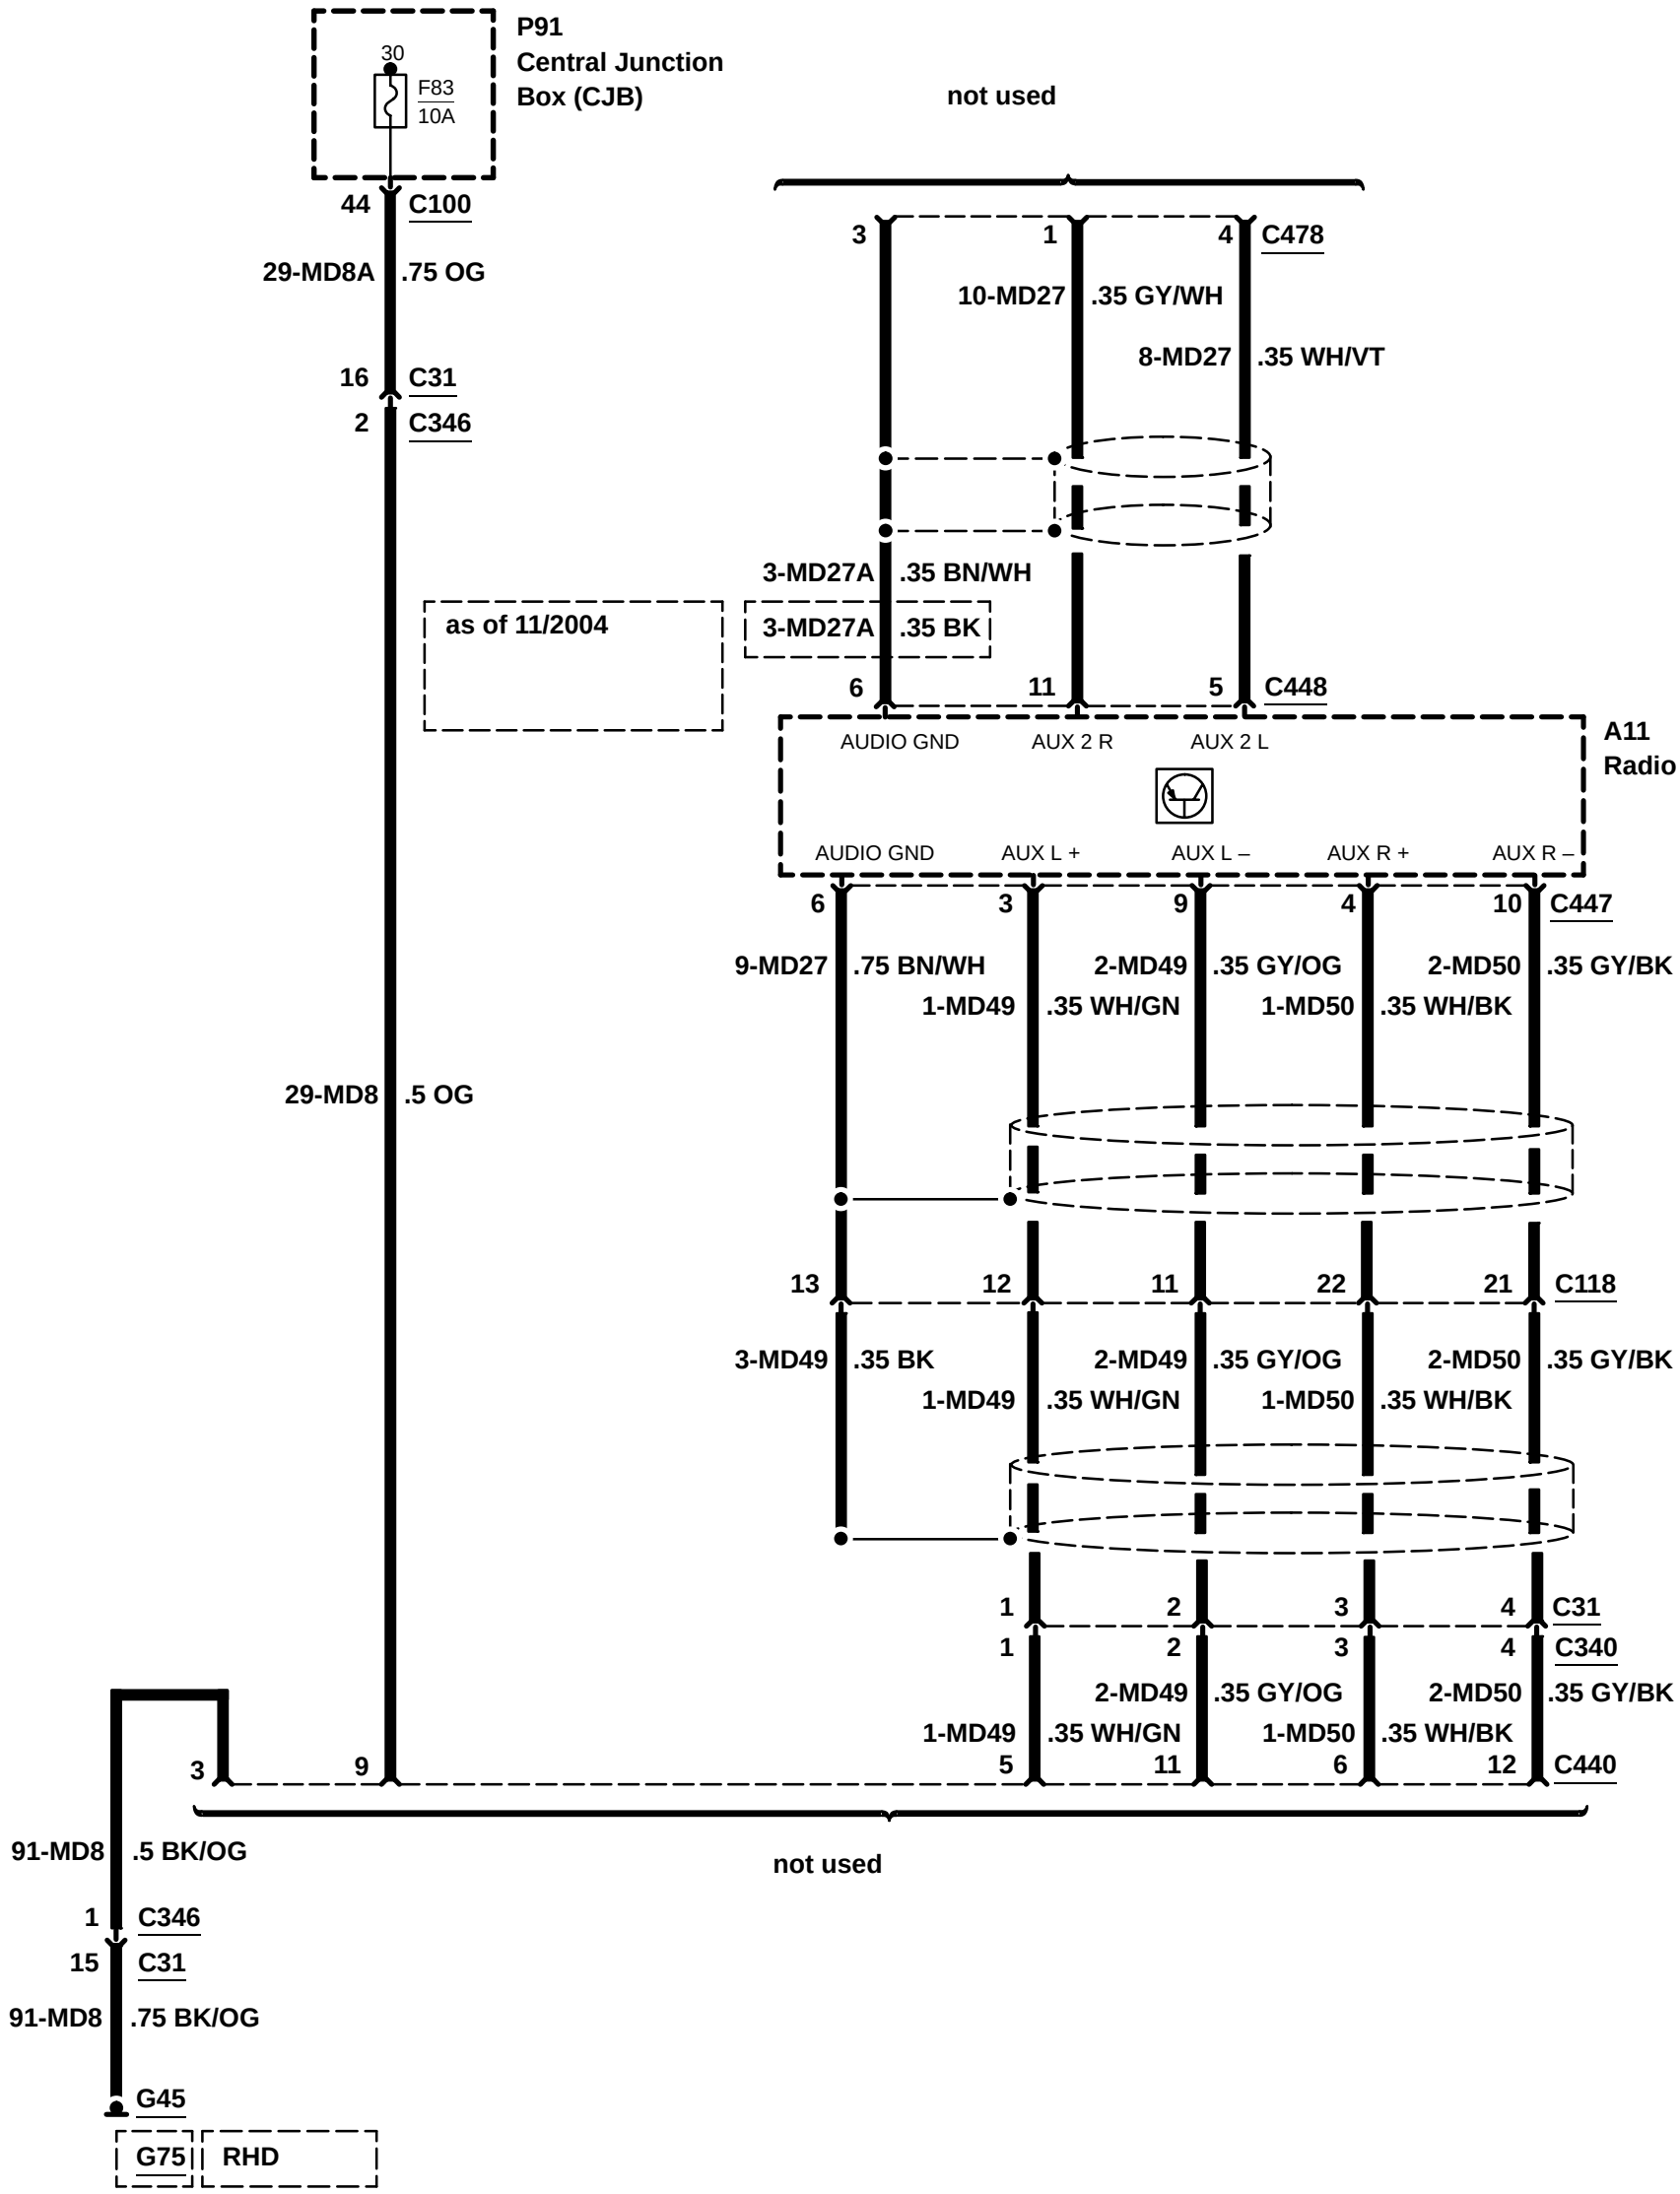
P91
Central Junction Box (CJB)
30
F83
10A
not used
44 C100
29-MD8A .75 OG
16 C31
2 C346
3 1 4 C478
10-MD27 .35 GY/WH
8-MD27 .35 WH/VT
3-MD27A .35 BN/WH
as of 11/2004
3-MD27A .35 BK
6 11 5 C448
A11
Radio
AUDIO GND
AUX 2 R
AUX 2 L
AUDIO GND
AUX L +
AUX L –
AUX R +
AUX R –
6 3 9 4 10 C447
9-MD27 .75 BN/WH
1-MD49 .35 WH/GN
2-MD49 .35 GY/OG
1-MD50 .35 WH/BK
2-MD50 .35 GY/BK
29-MD8 .5 OG
13 12 11 22 21 C118
3-MD49 .35 BK
1-MD49 .35 WH/GN
2-MD49 .35 GY/OG
1-MD50 .35 WH/BK
2-MD50 .35 GY/BK
1 2 3 4 C31
1 2 3 4 C340
1-MD49 .35 WH/GN
2-MD49 .35 GY/OG
1-MD50 .35 WH/BK
2-MD50 .35 GY/BK
3 9 5 11 6 12 C440
not used
91-MD8 .5 BK/OG
1 C346
15 C31
91-MD8 .75 BK/OG
G45
G75
RHD


Speakers – LHD

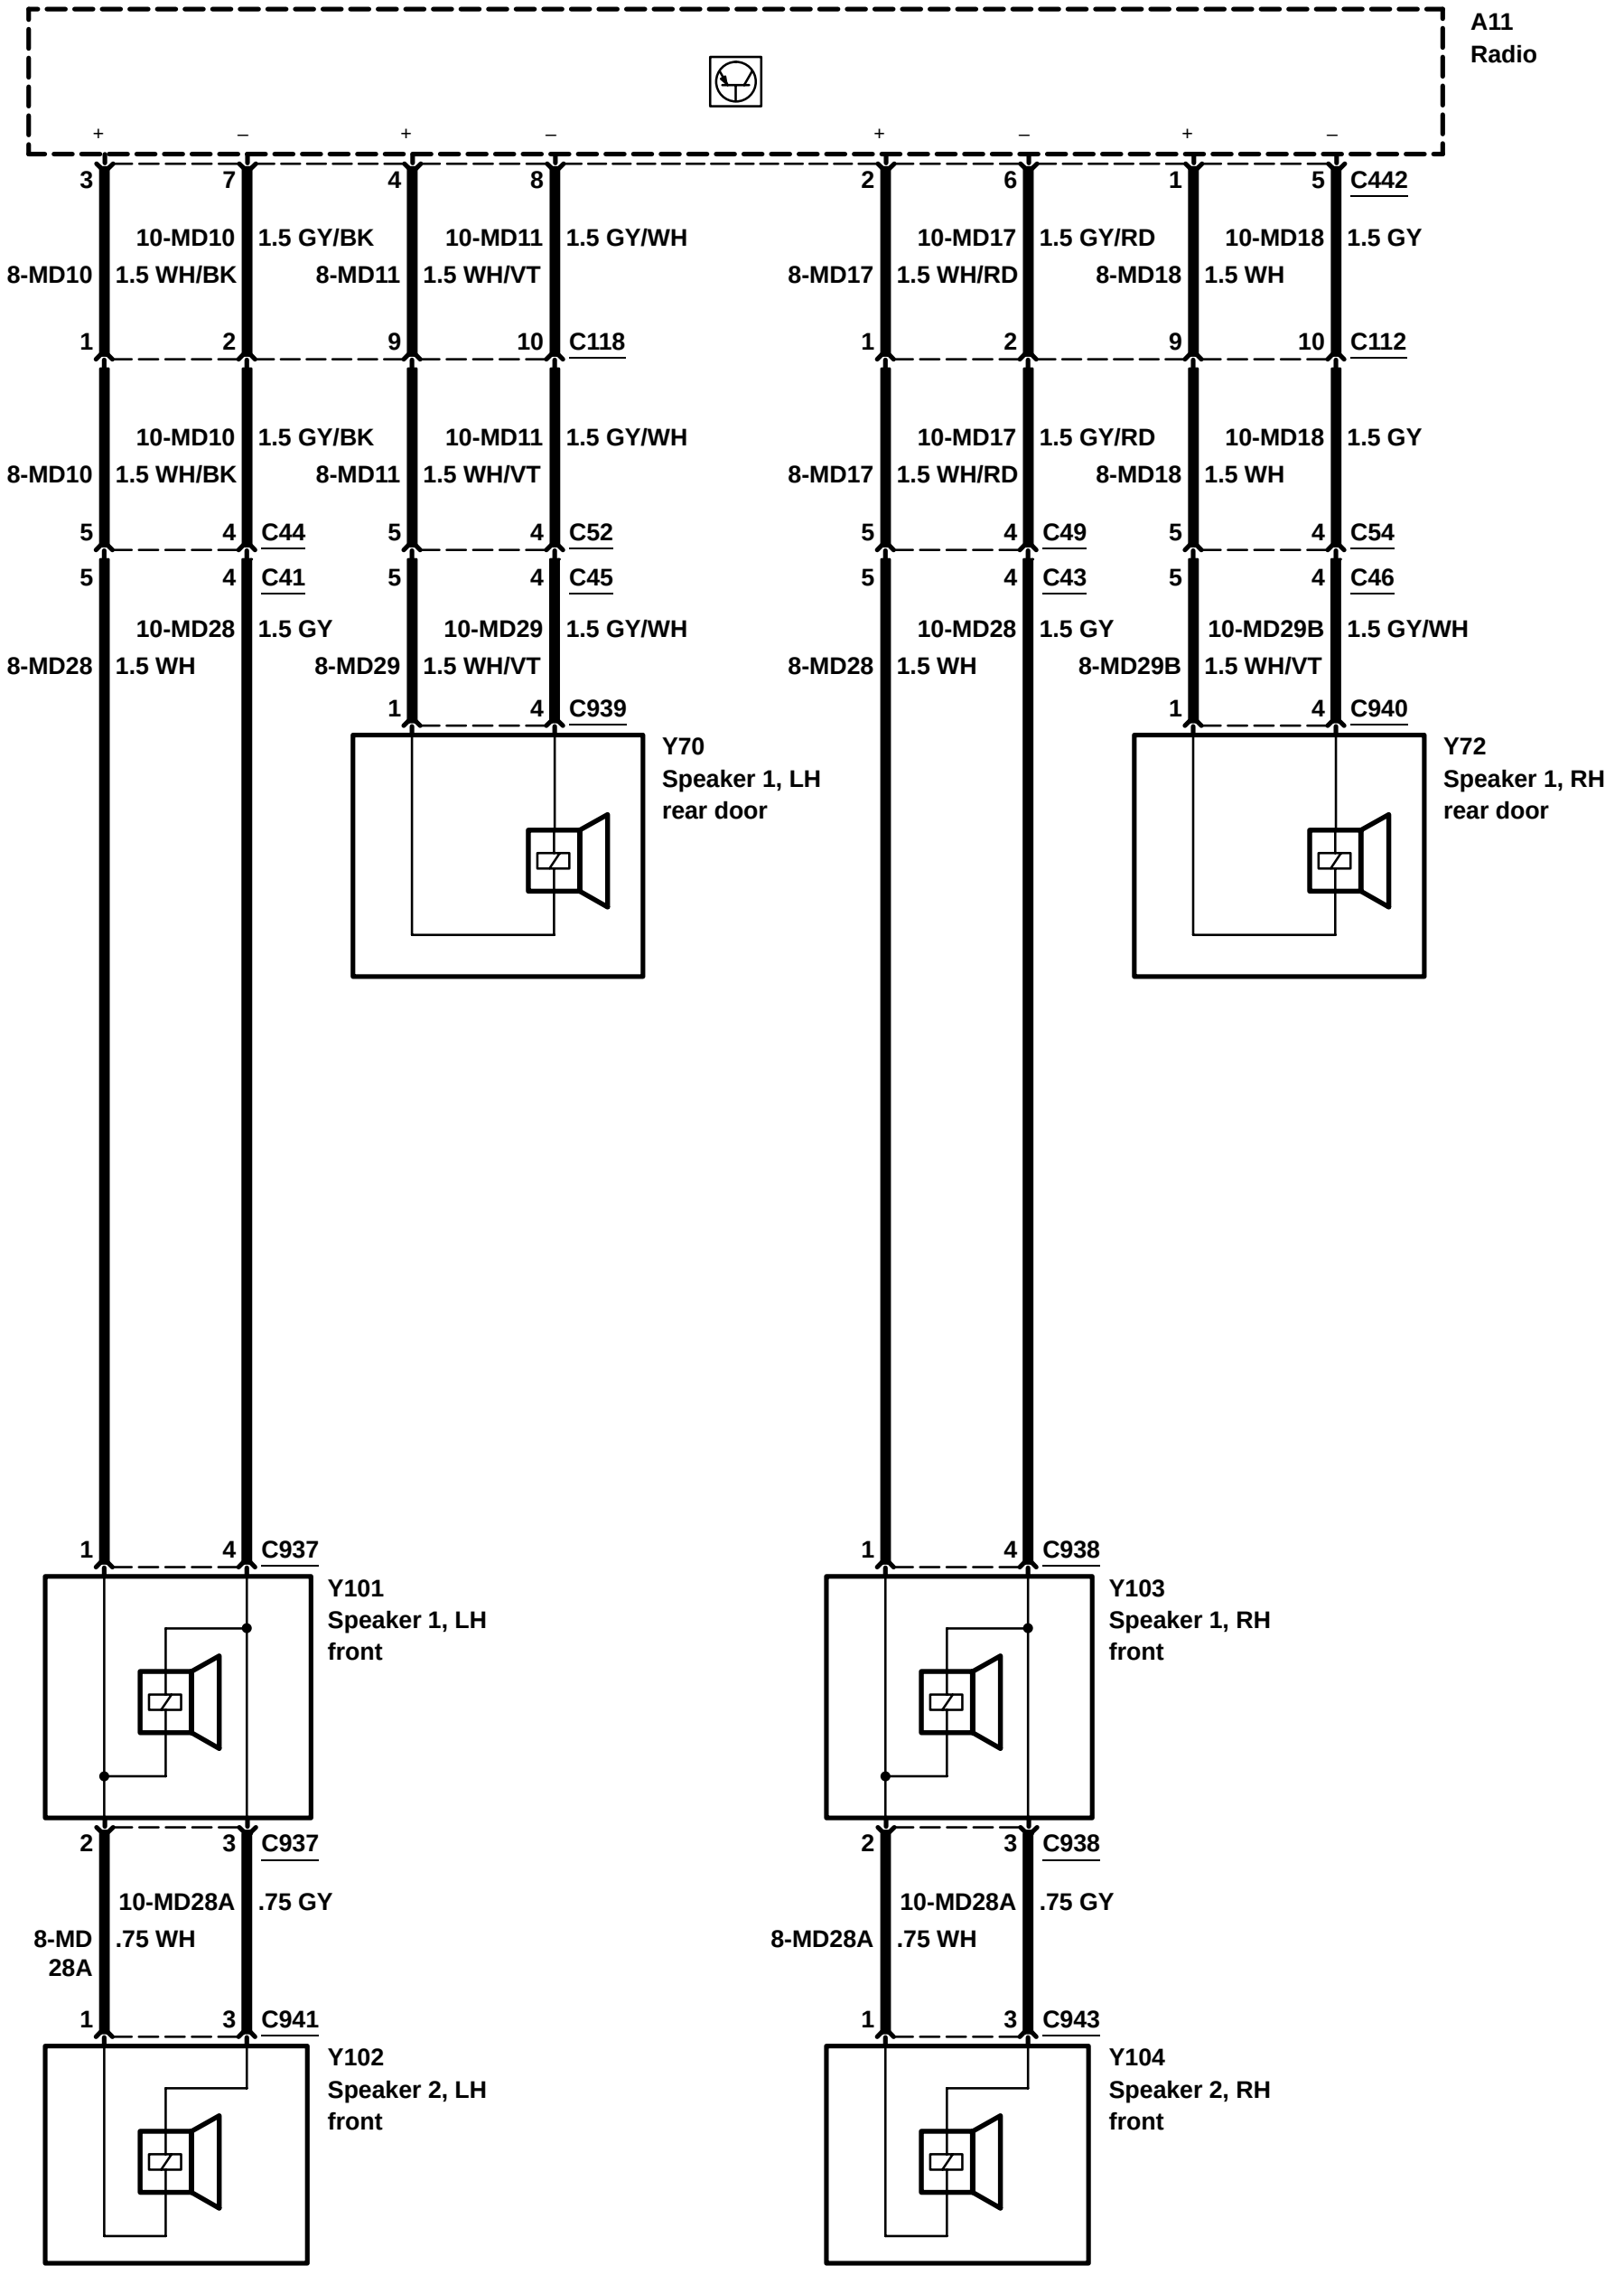


Speakers – RHD

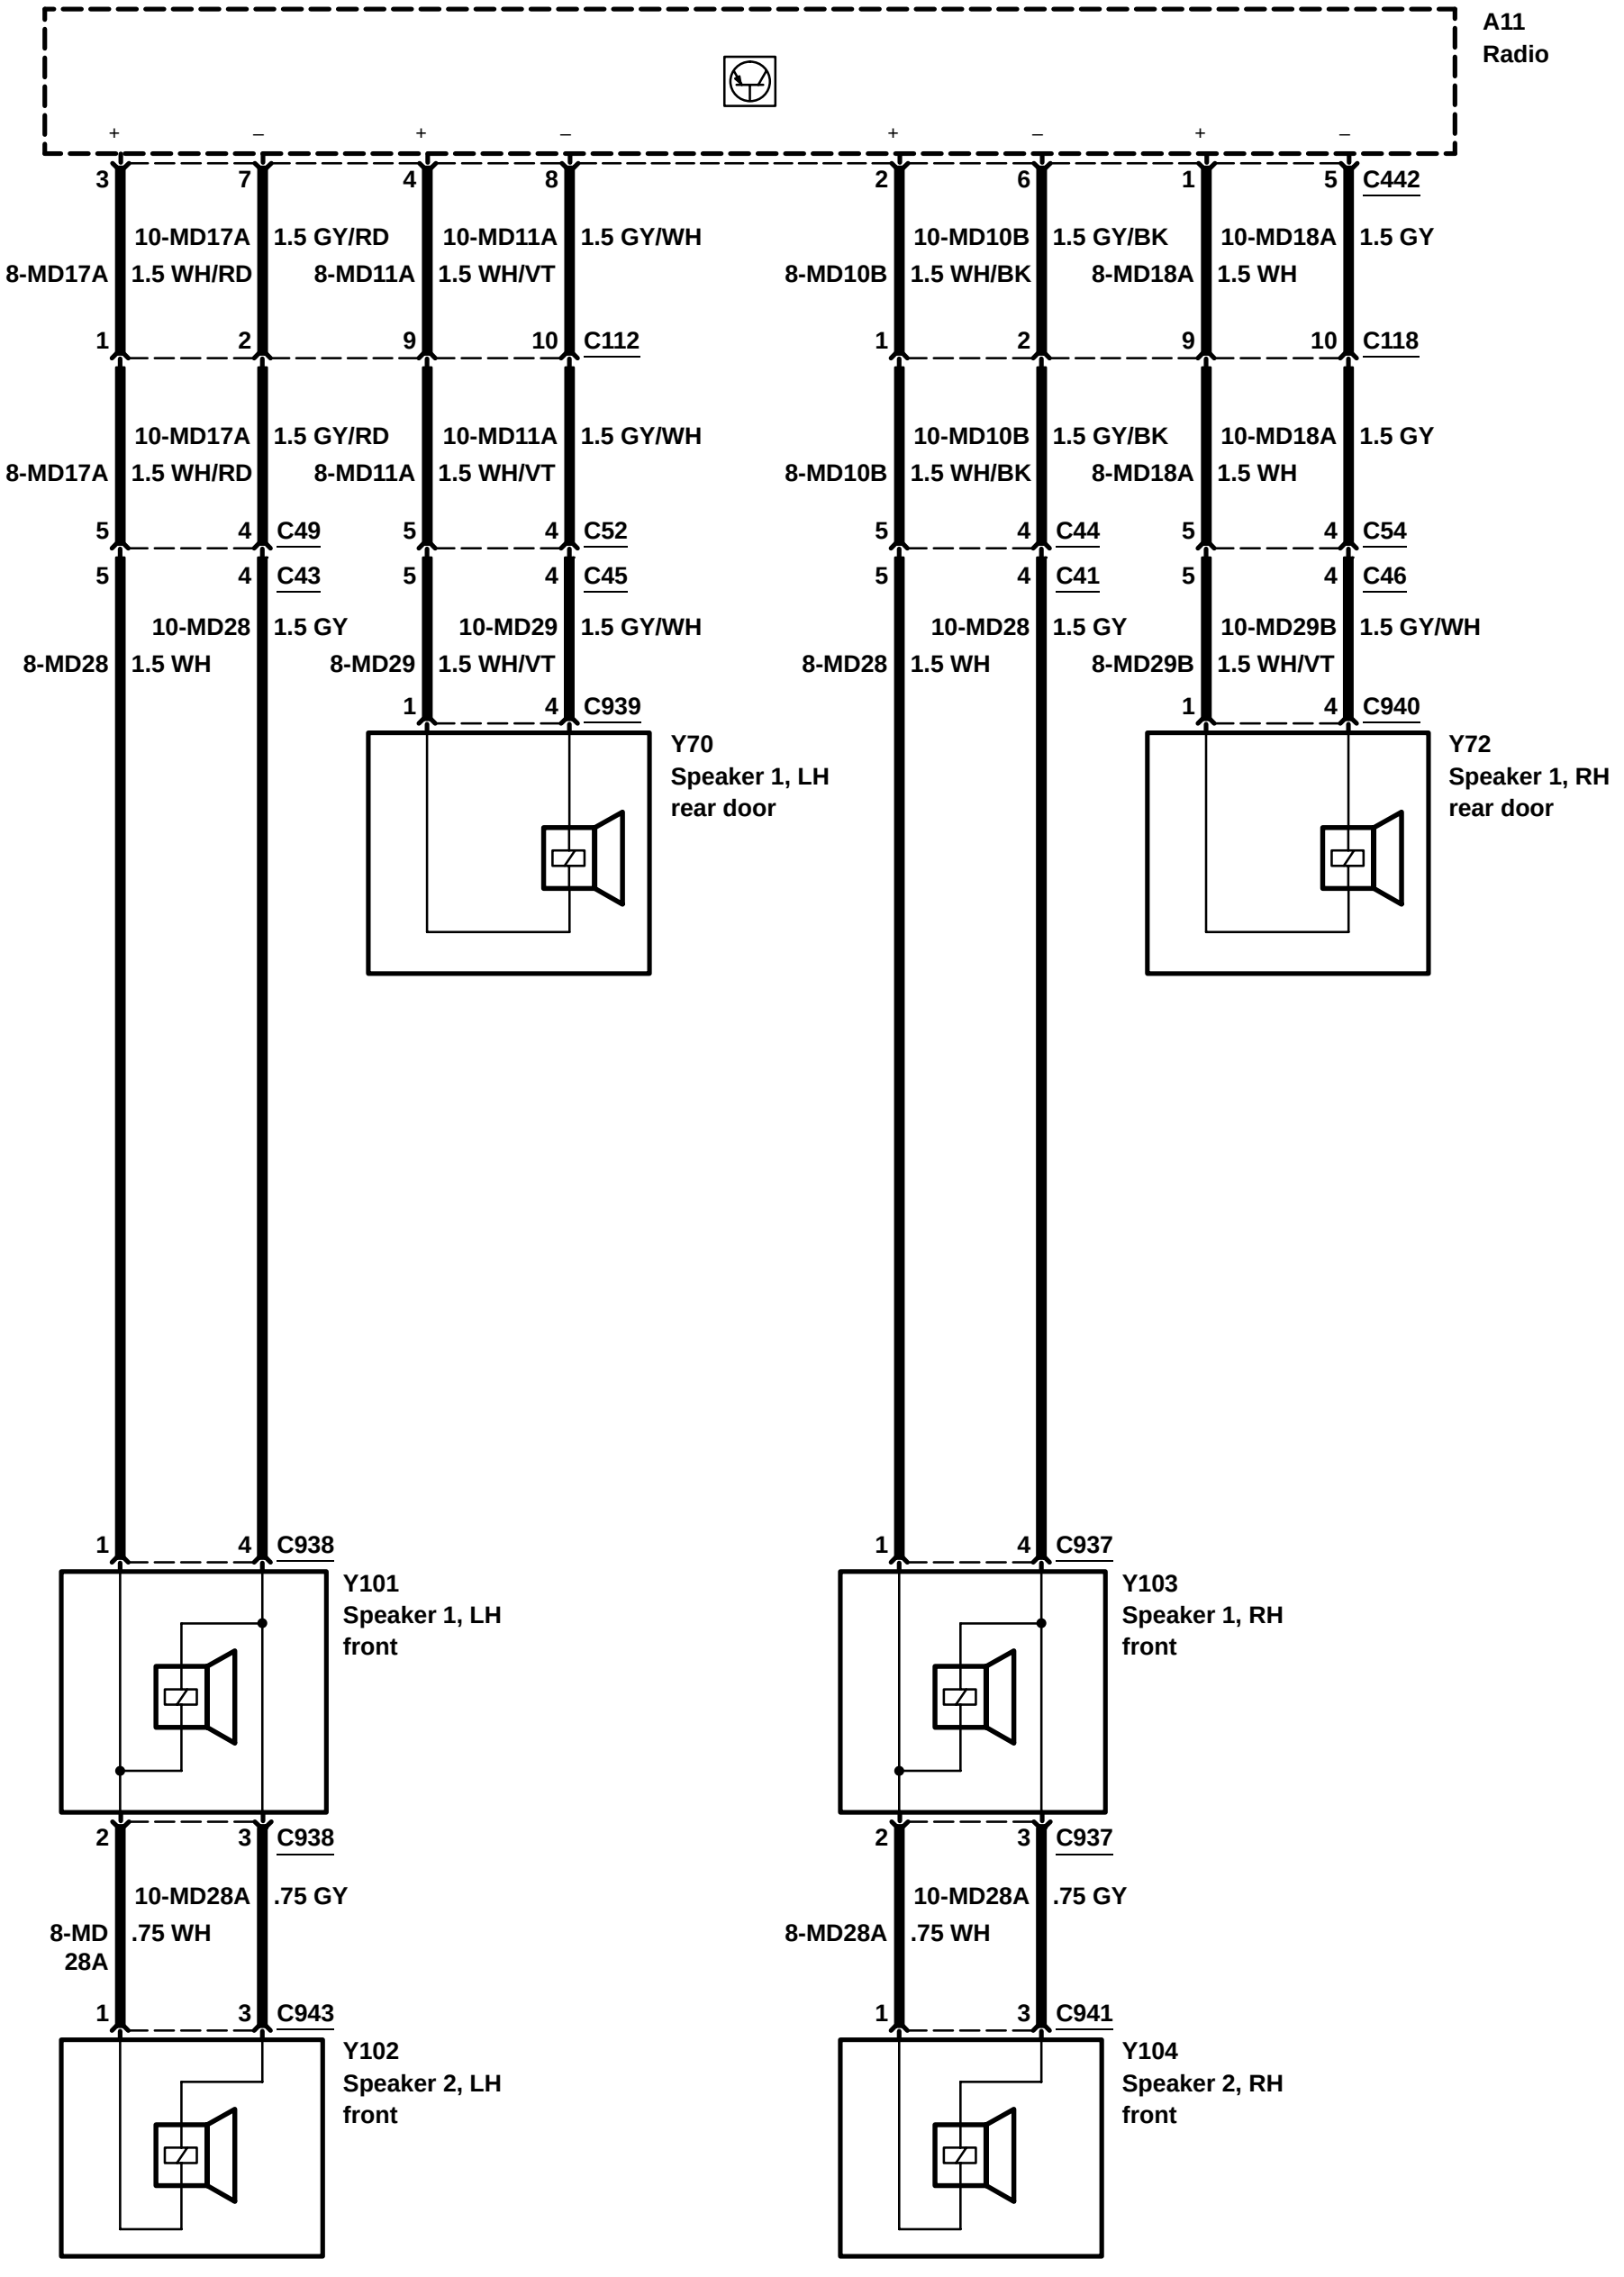


Exterior Lighting – Headlamps, Low beam

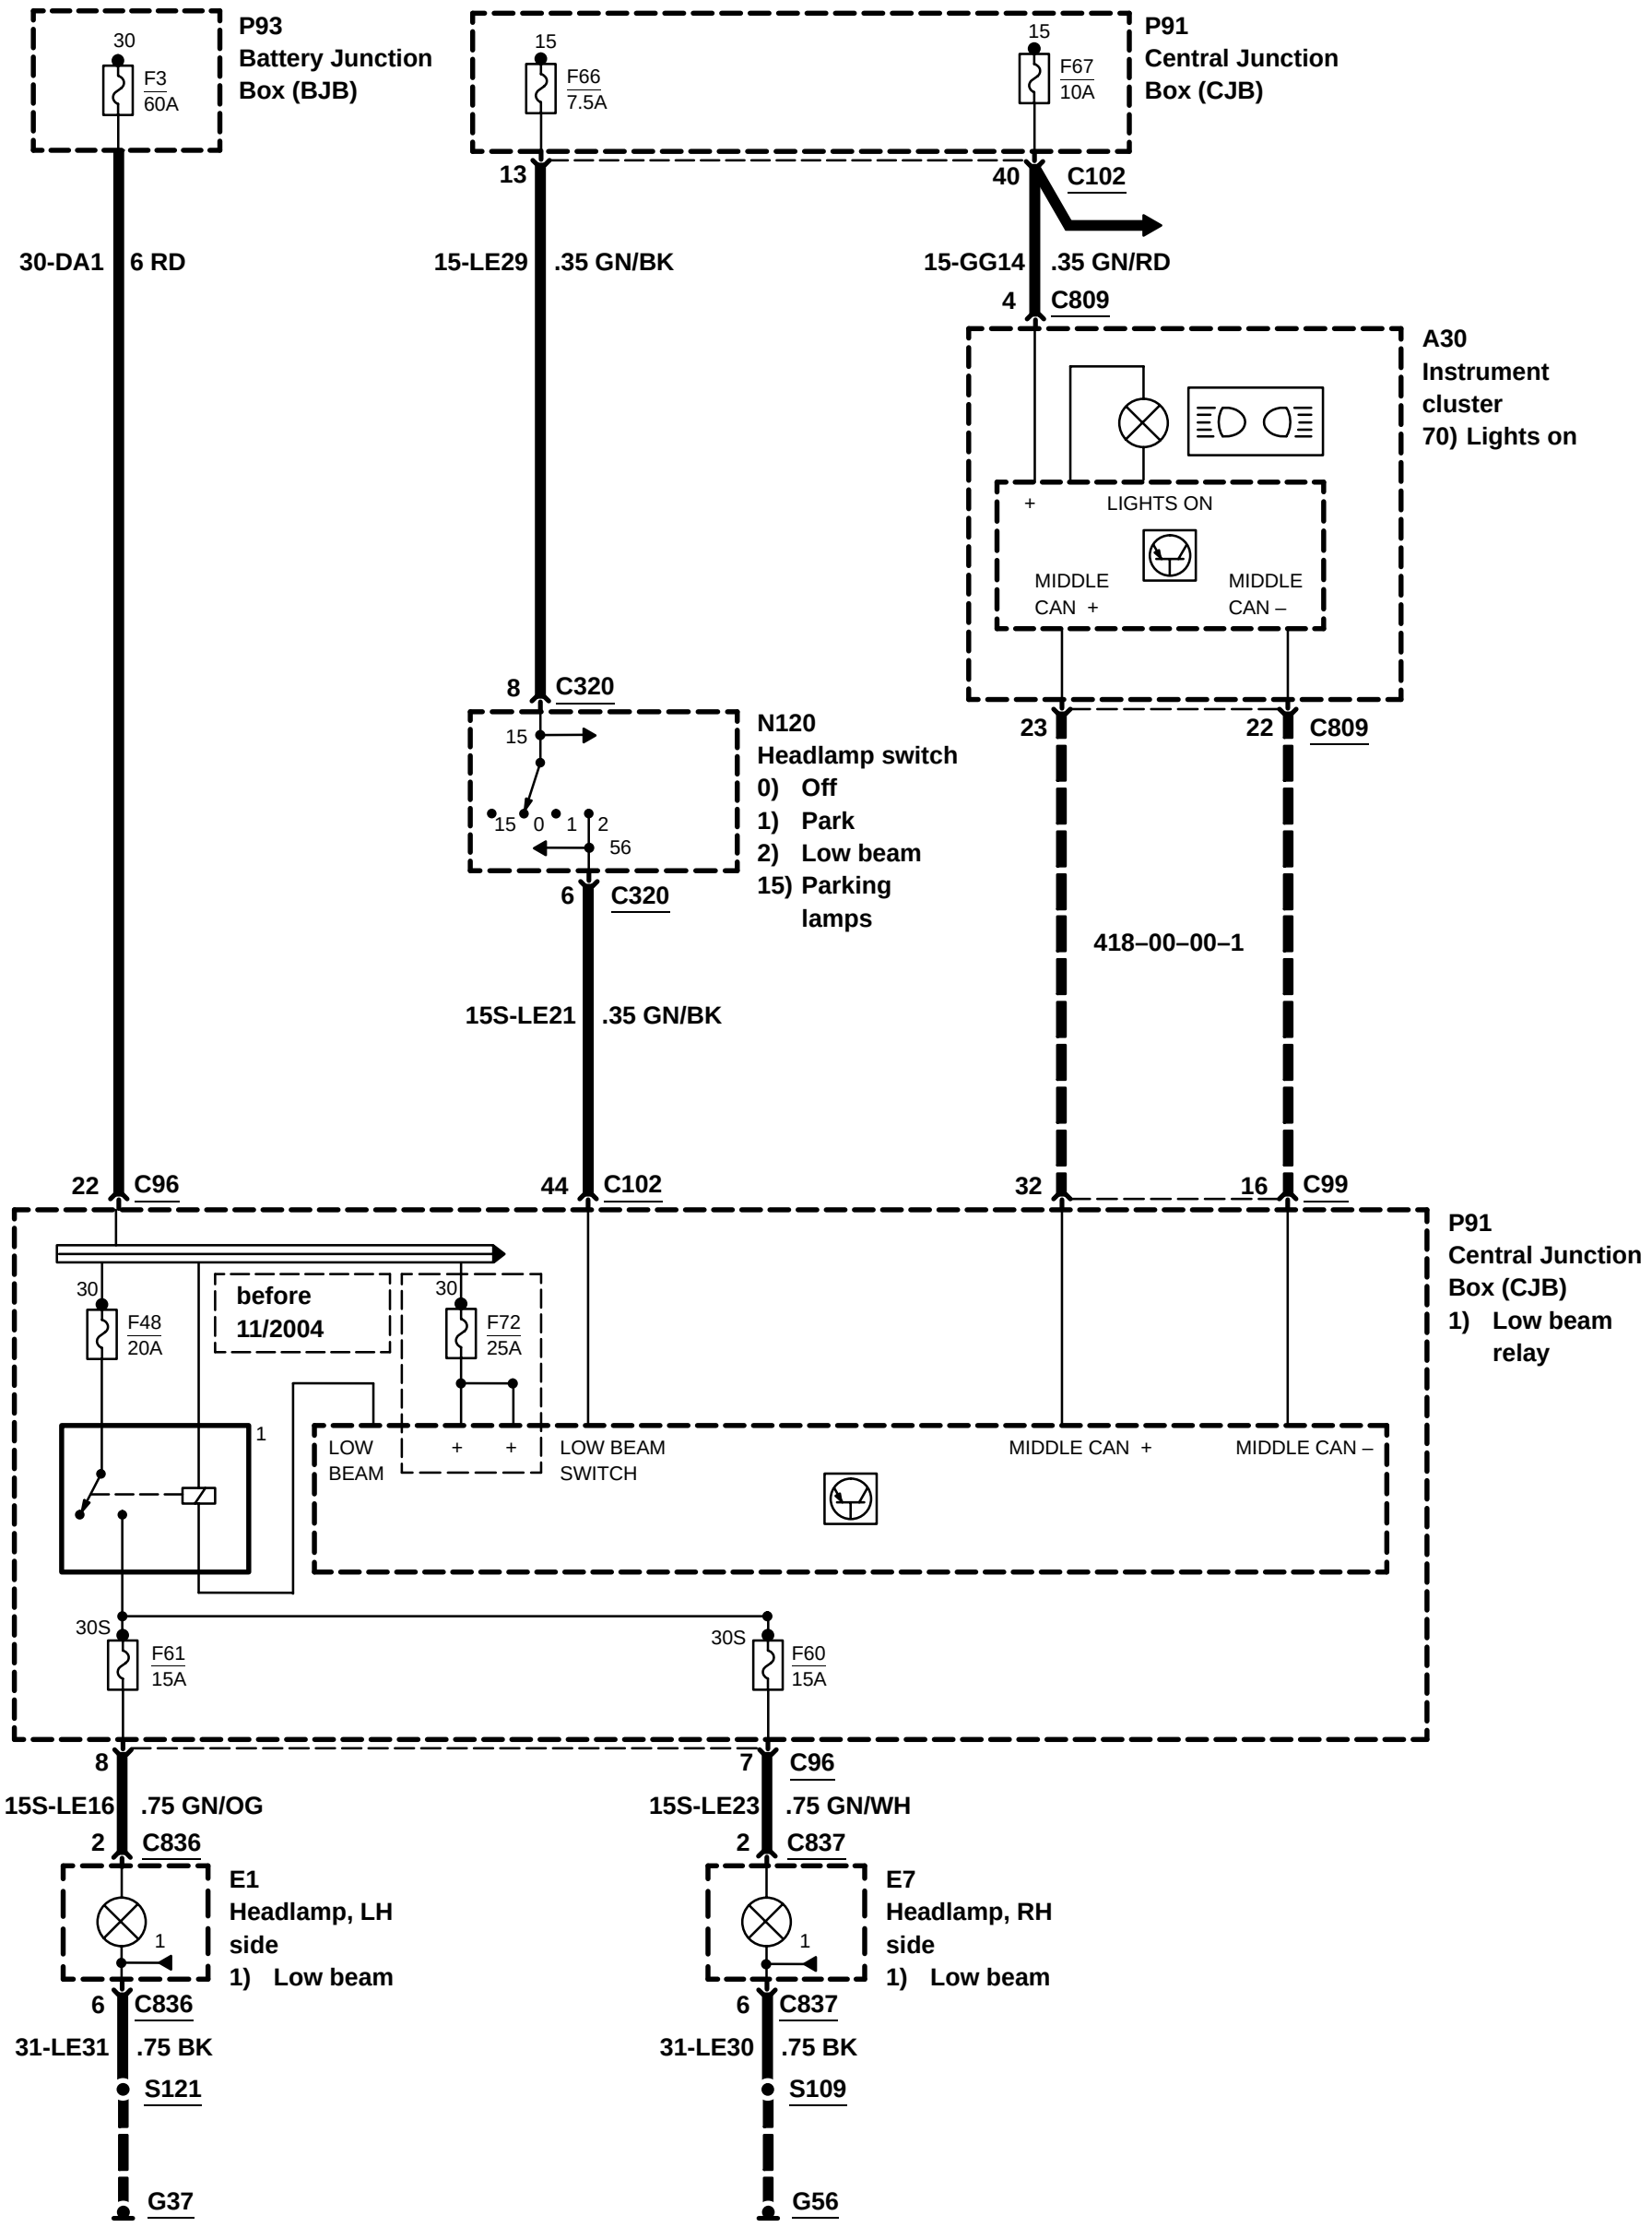


Exterior Lighting – Headlamps, High beam

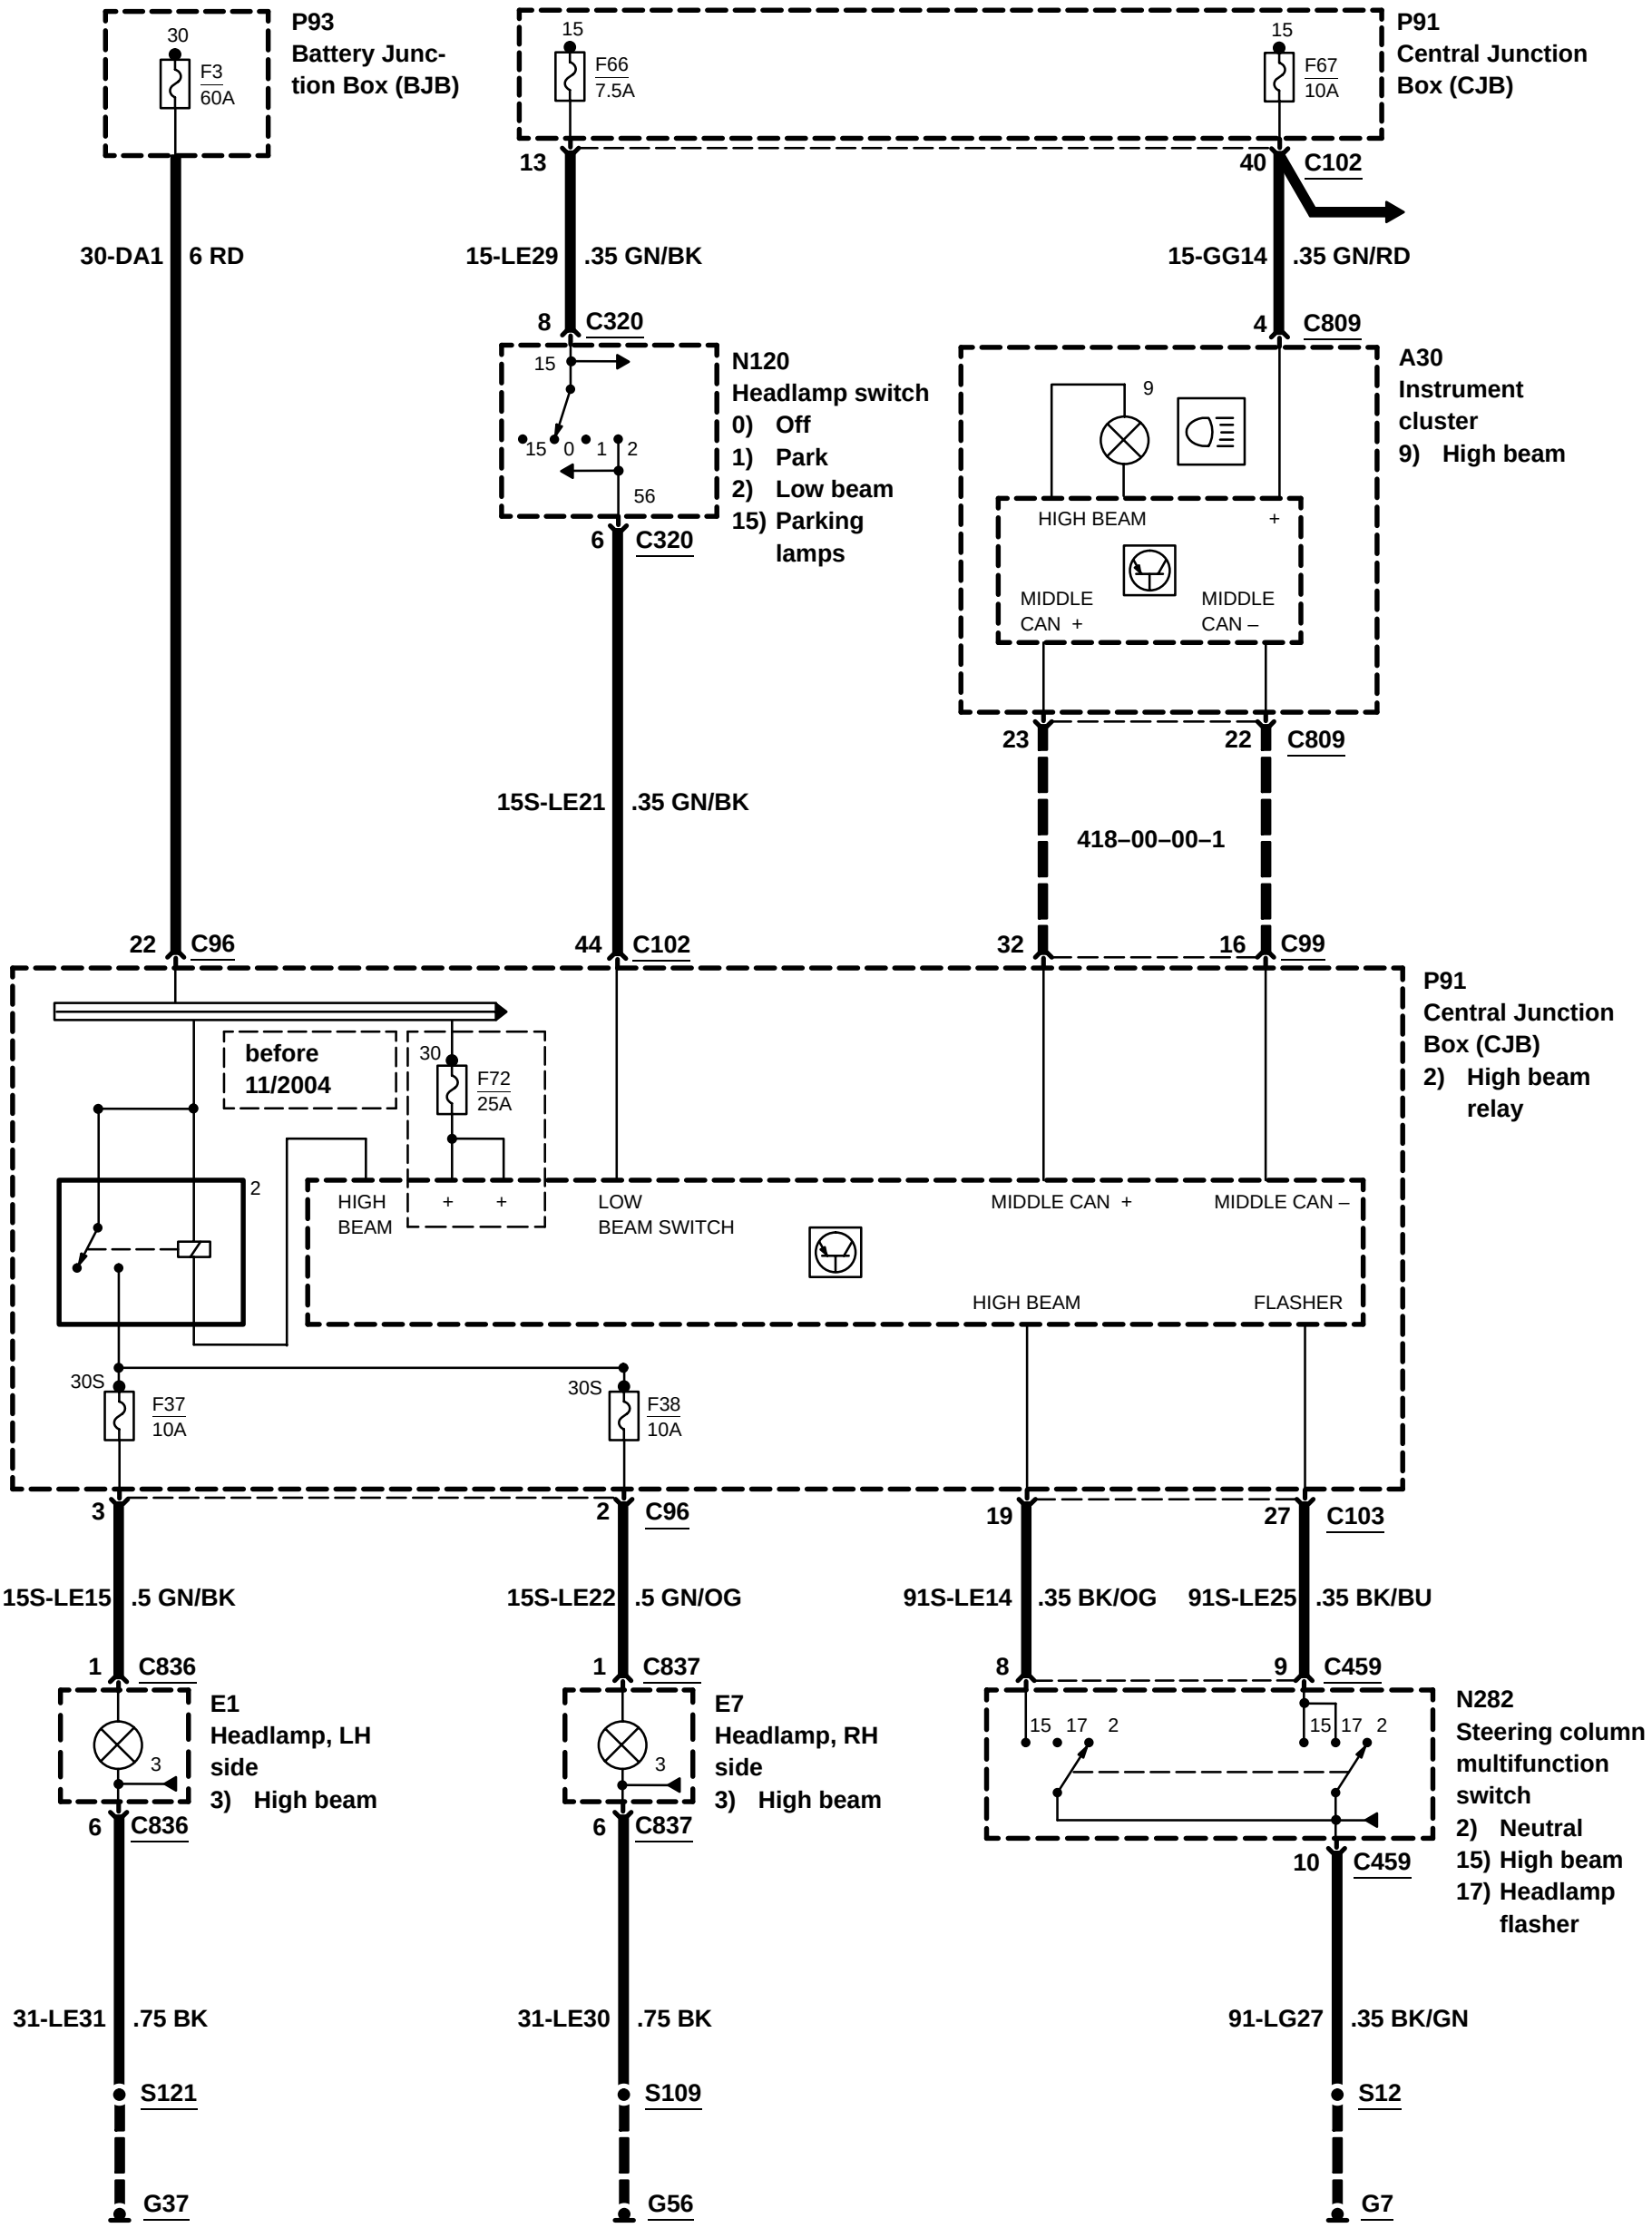


Exterior Lighting – Stop Lamps, 4–door model

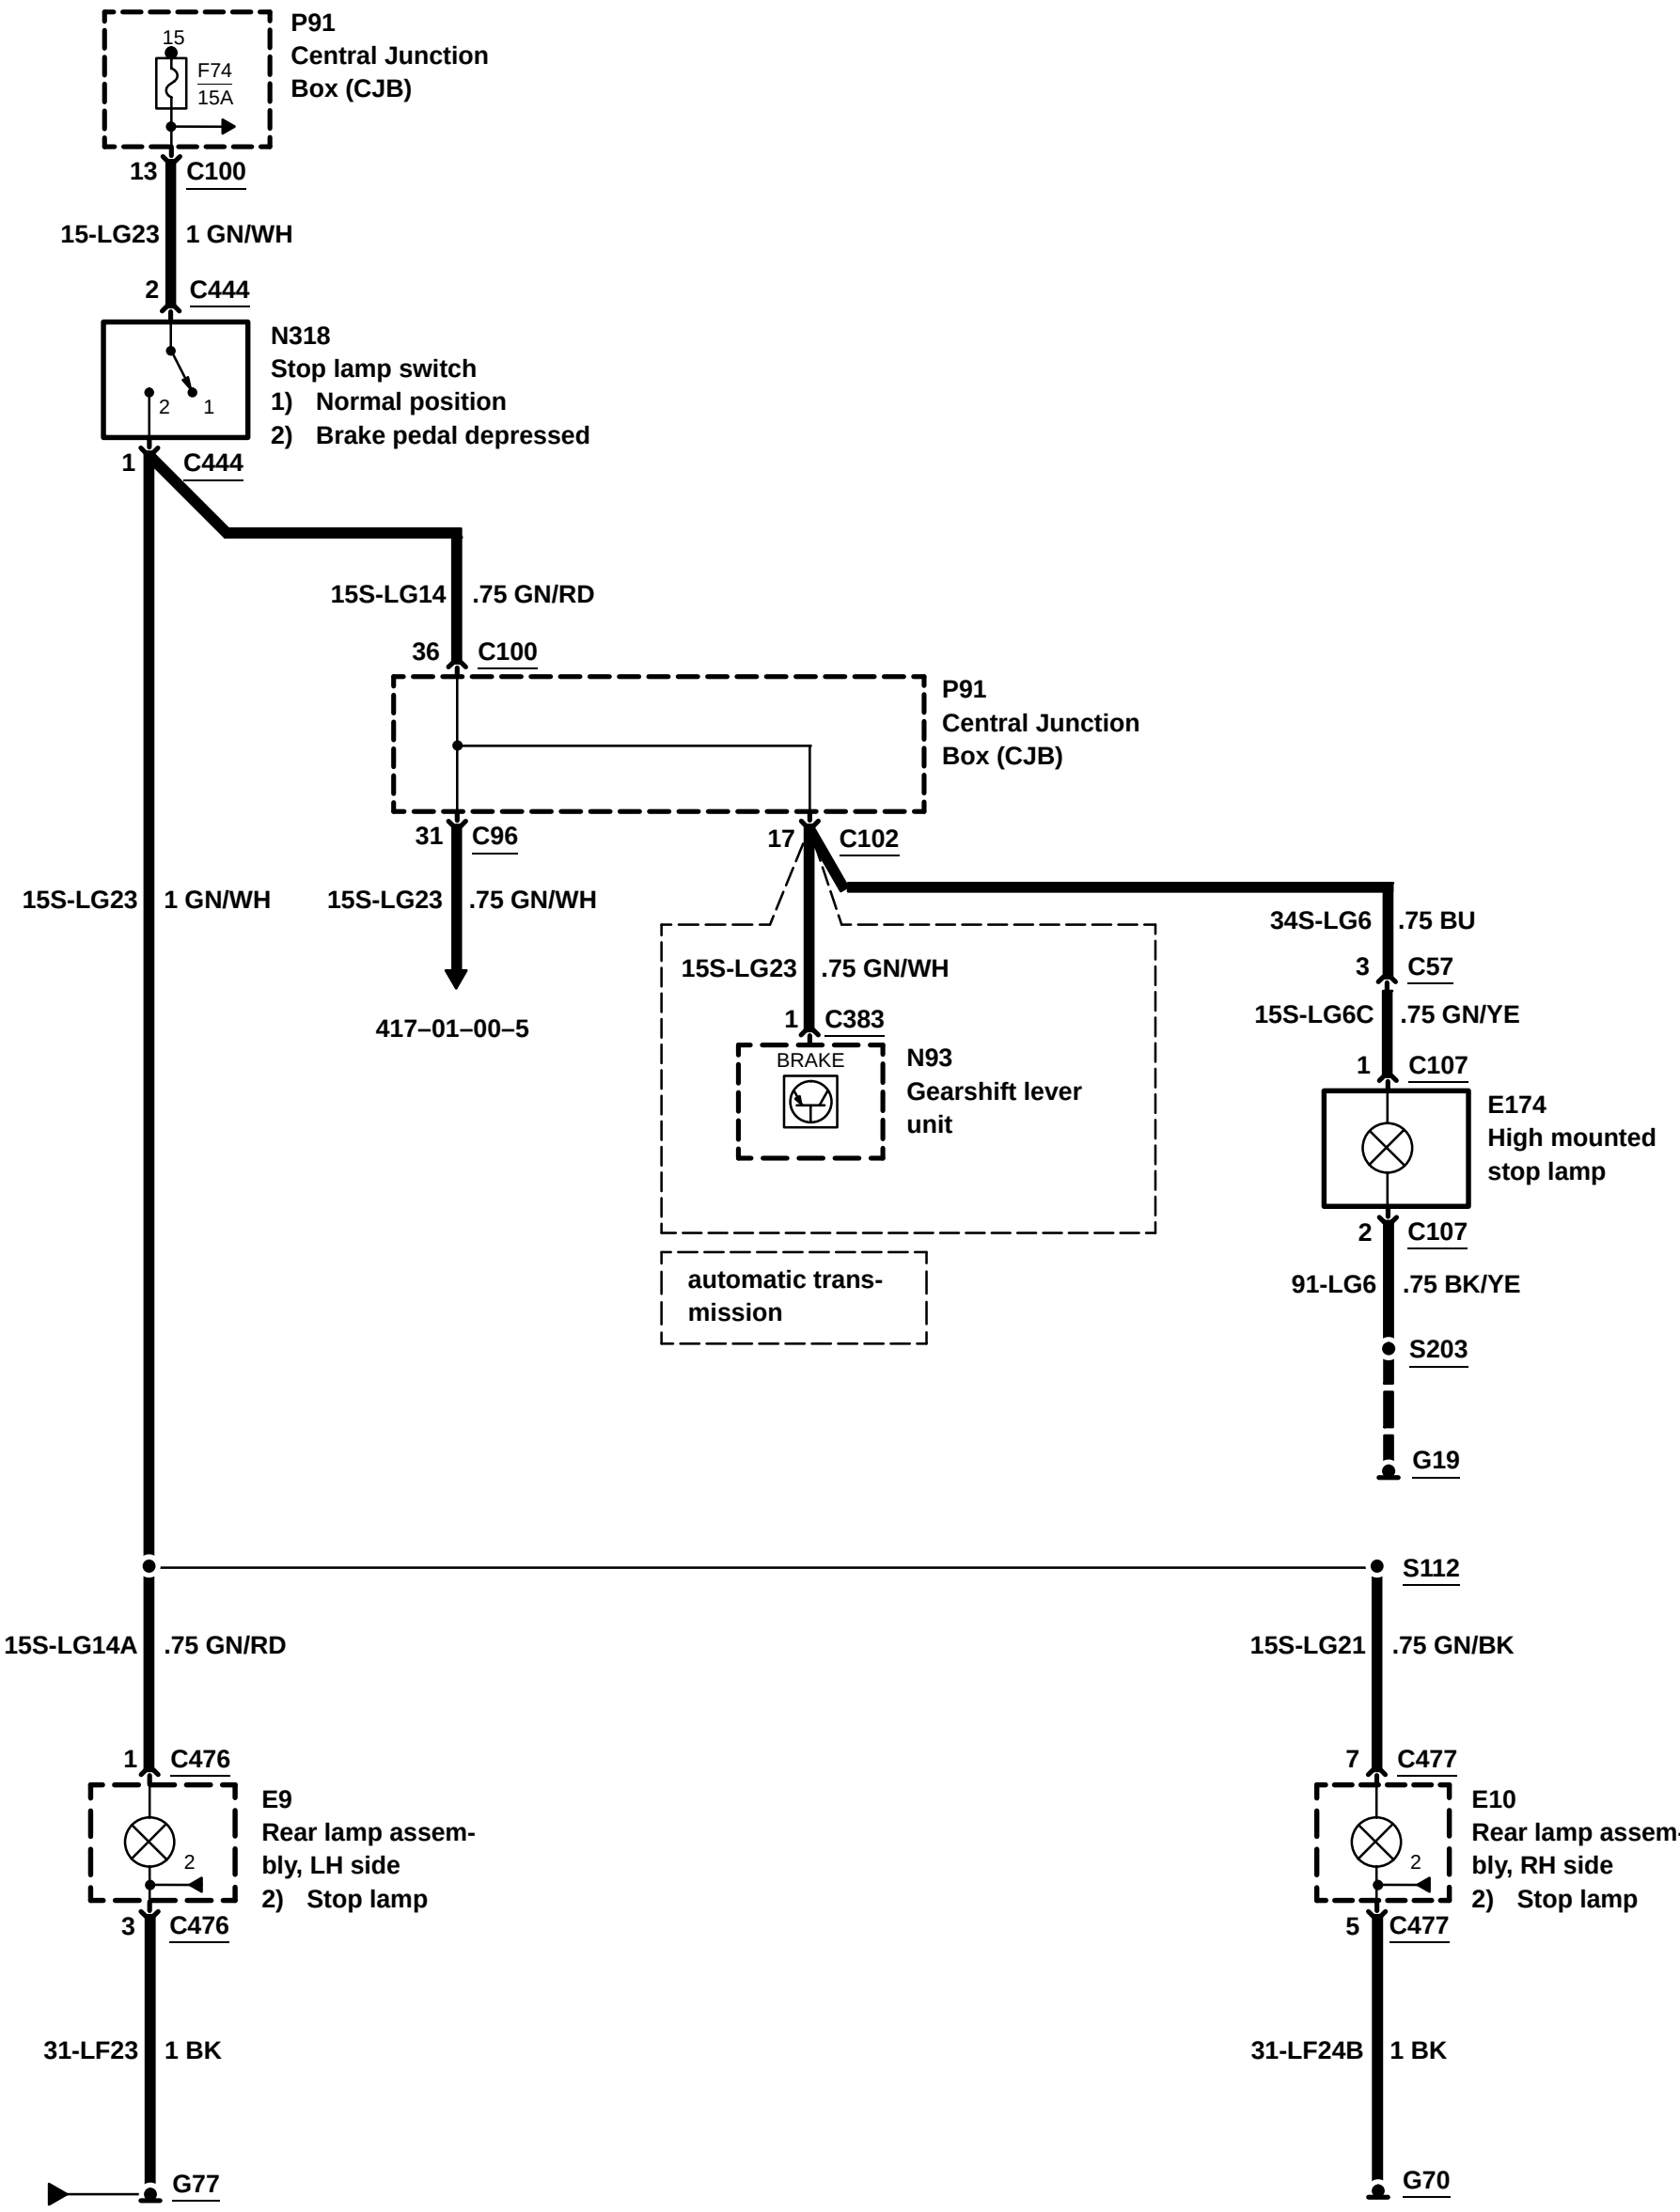


Exterior Lighting – Stop Lamps – 5–door model

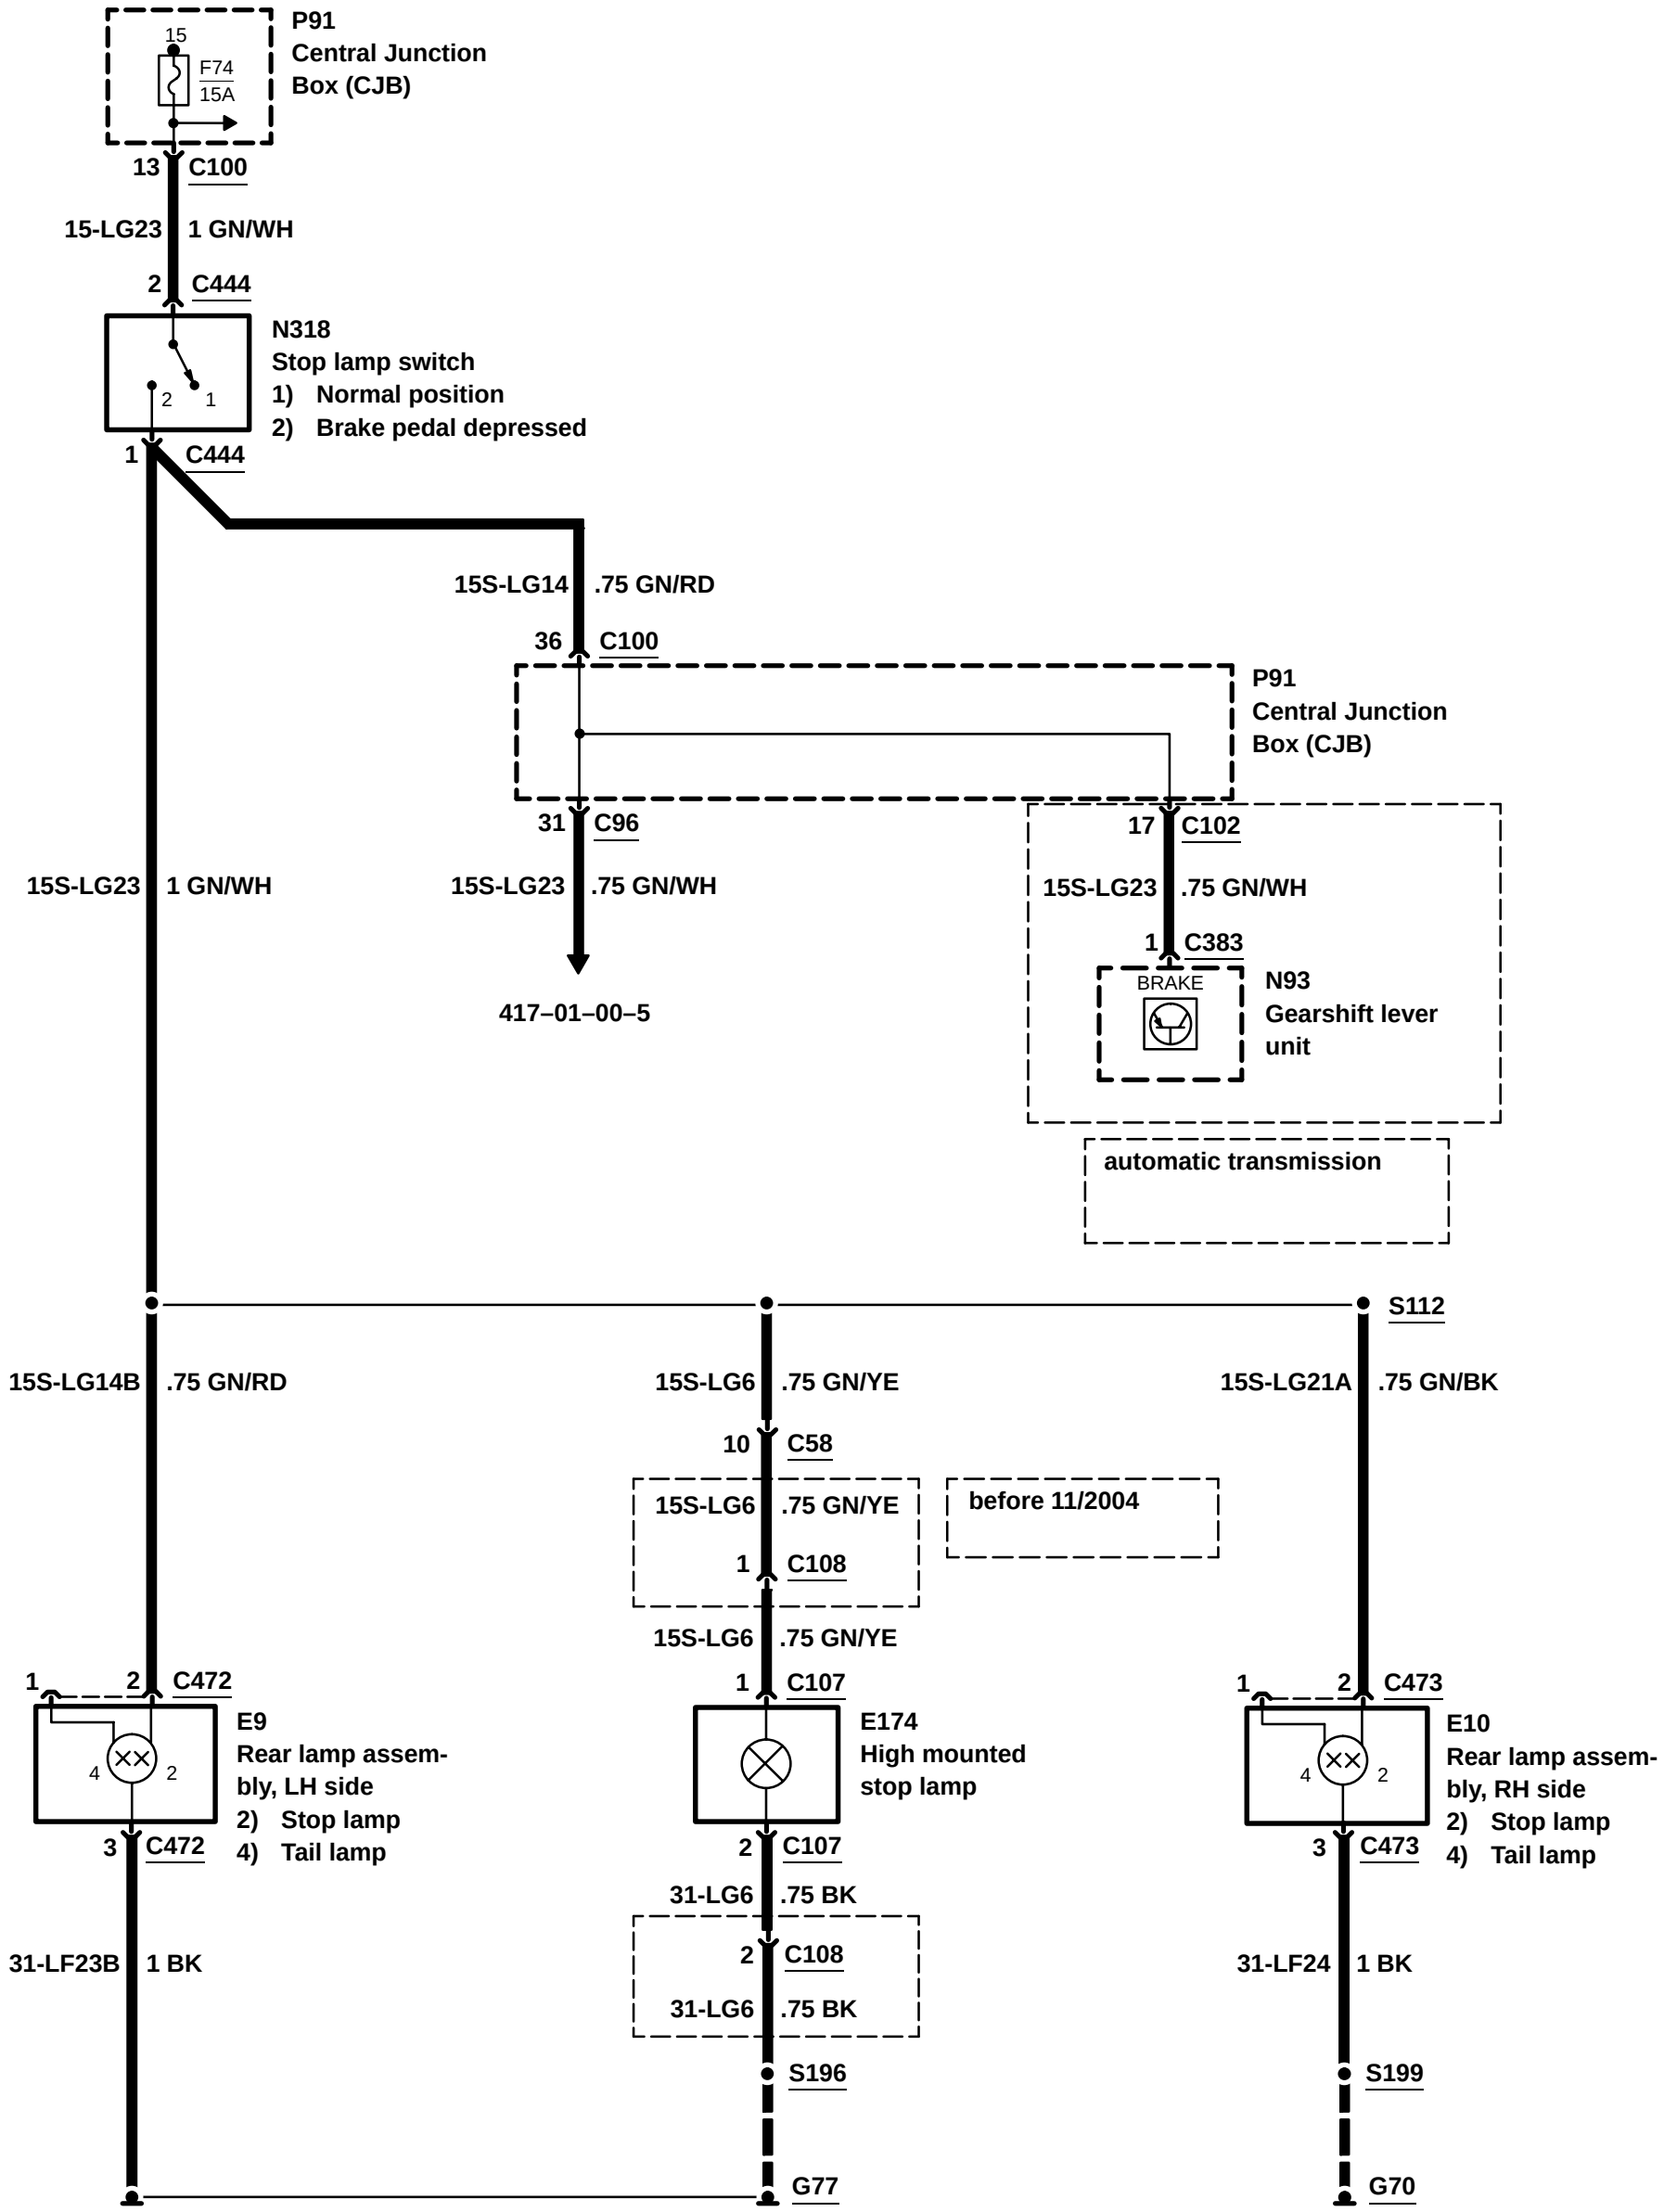


Exterior Lighting – Stop Lamps

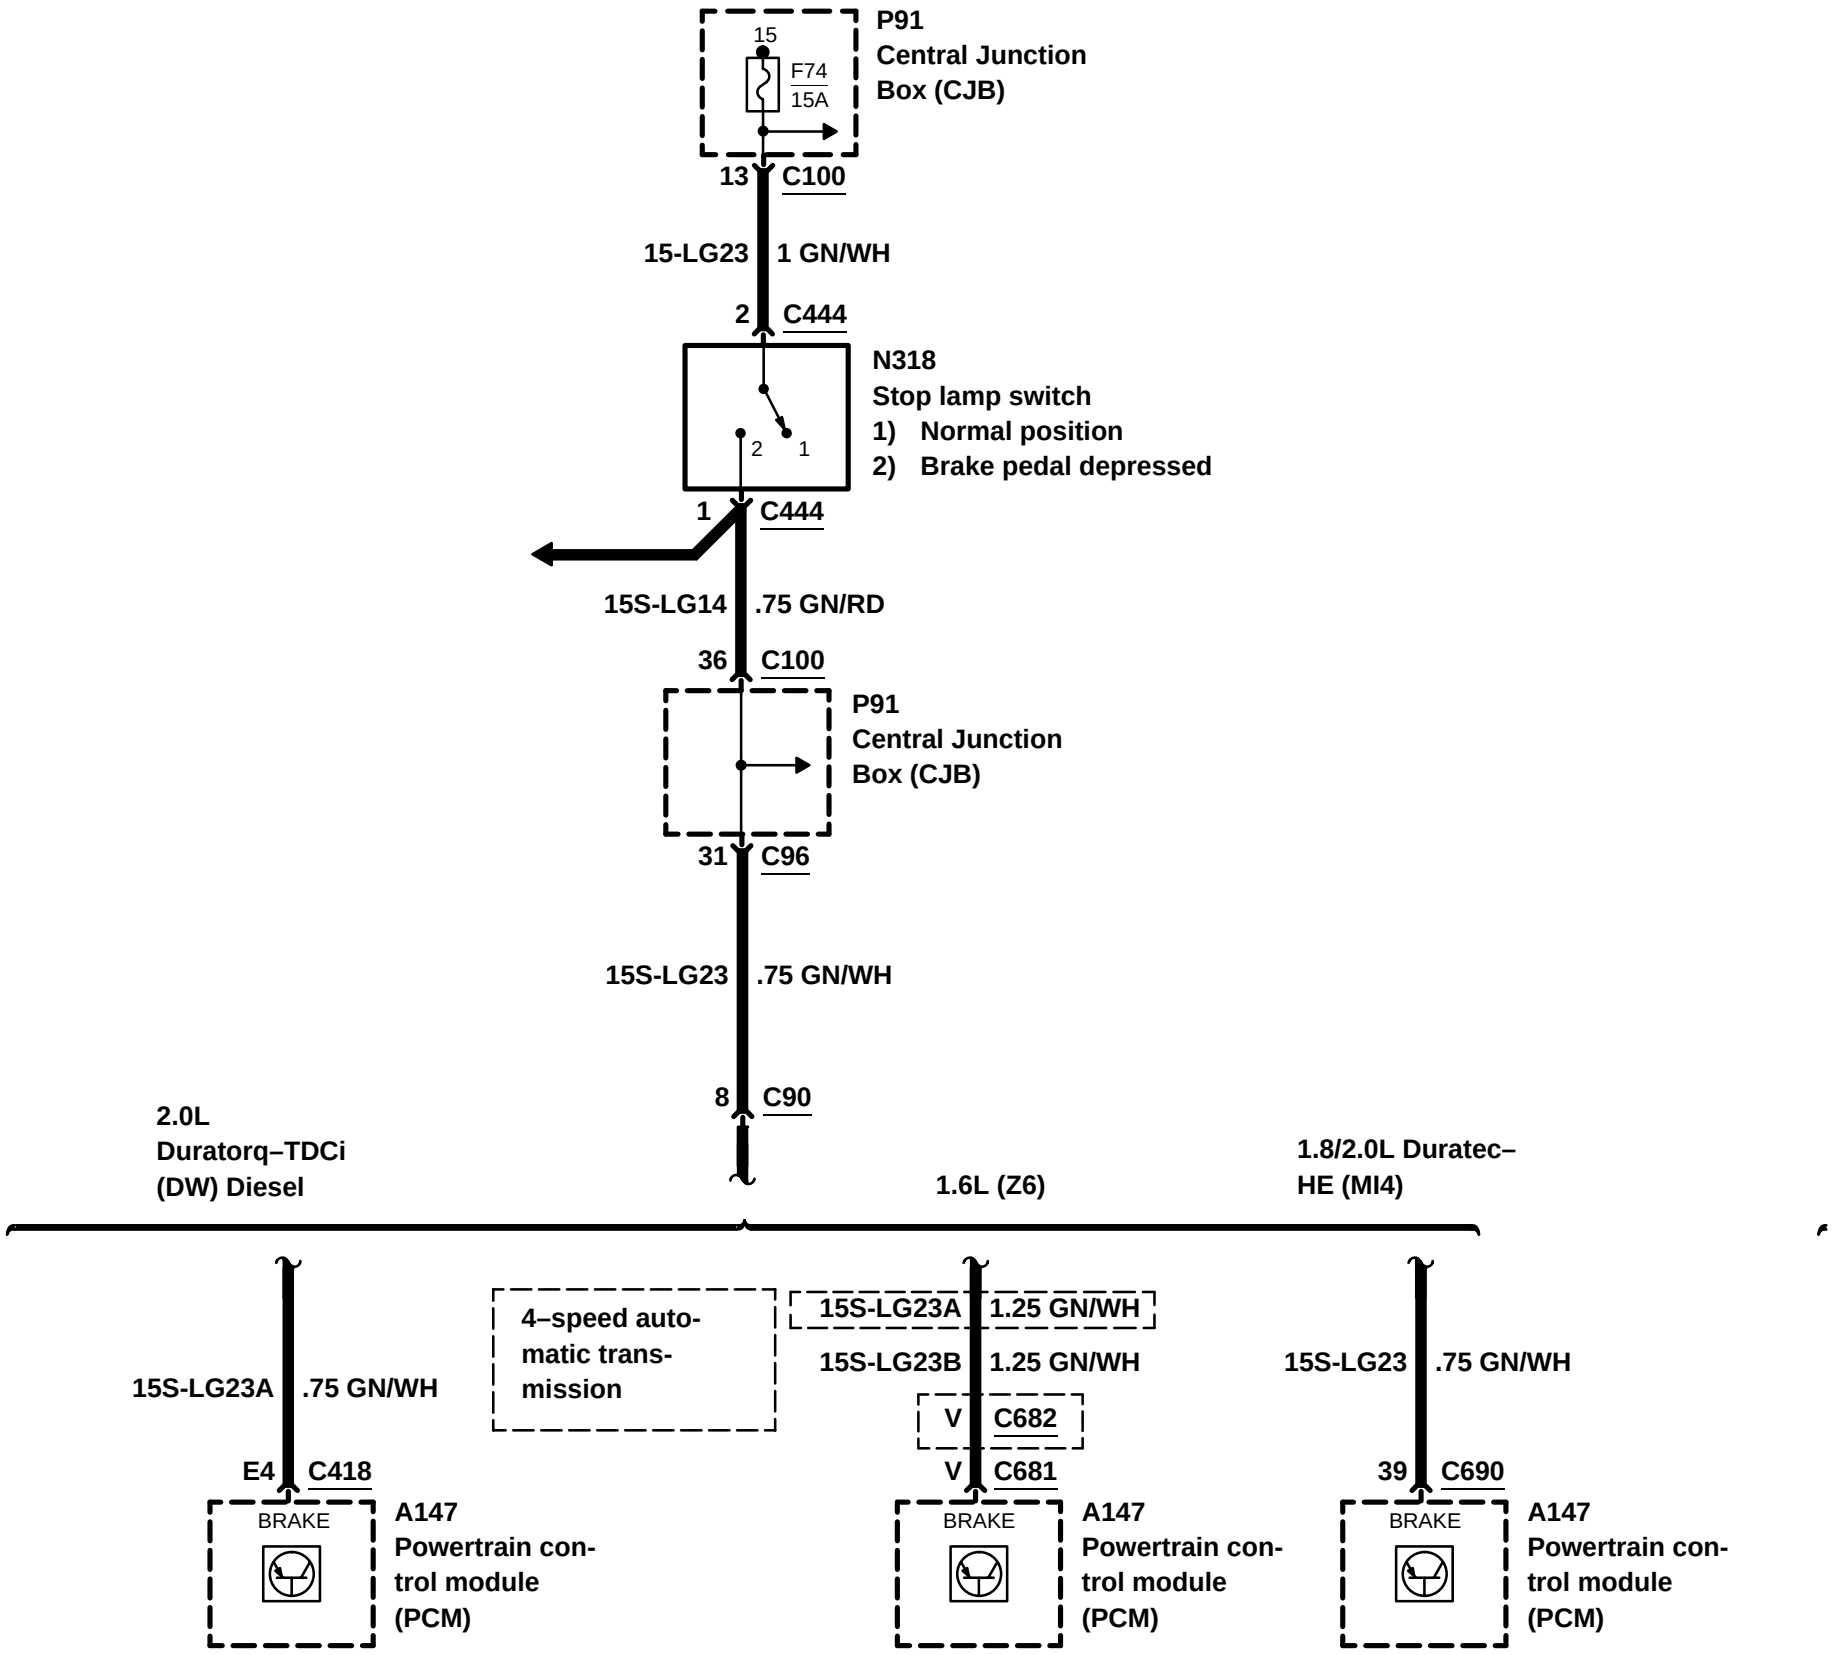


Exterior Lighting – Turn Signal Lamps

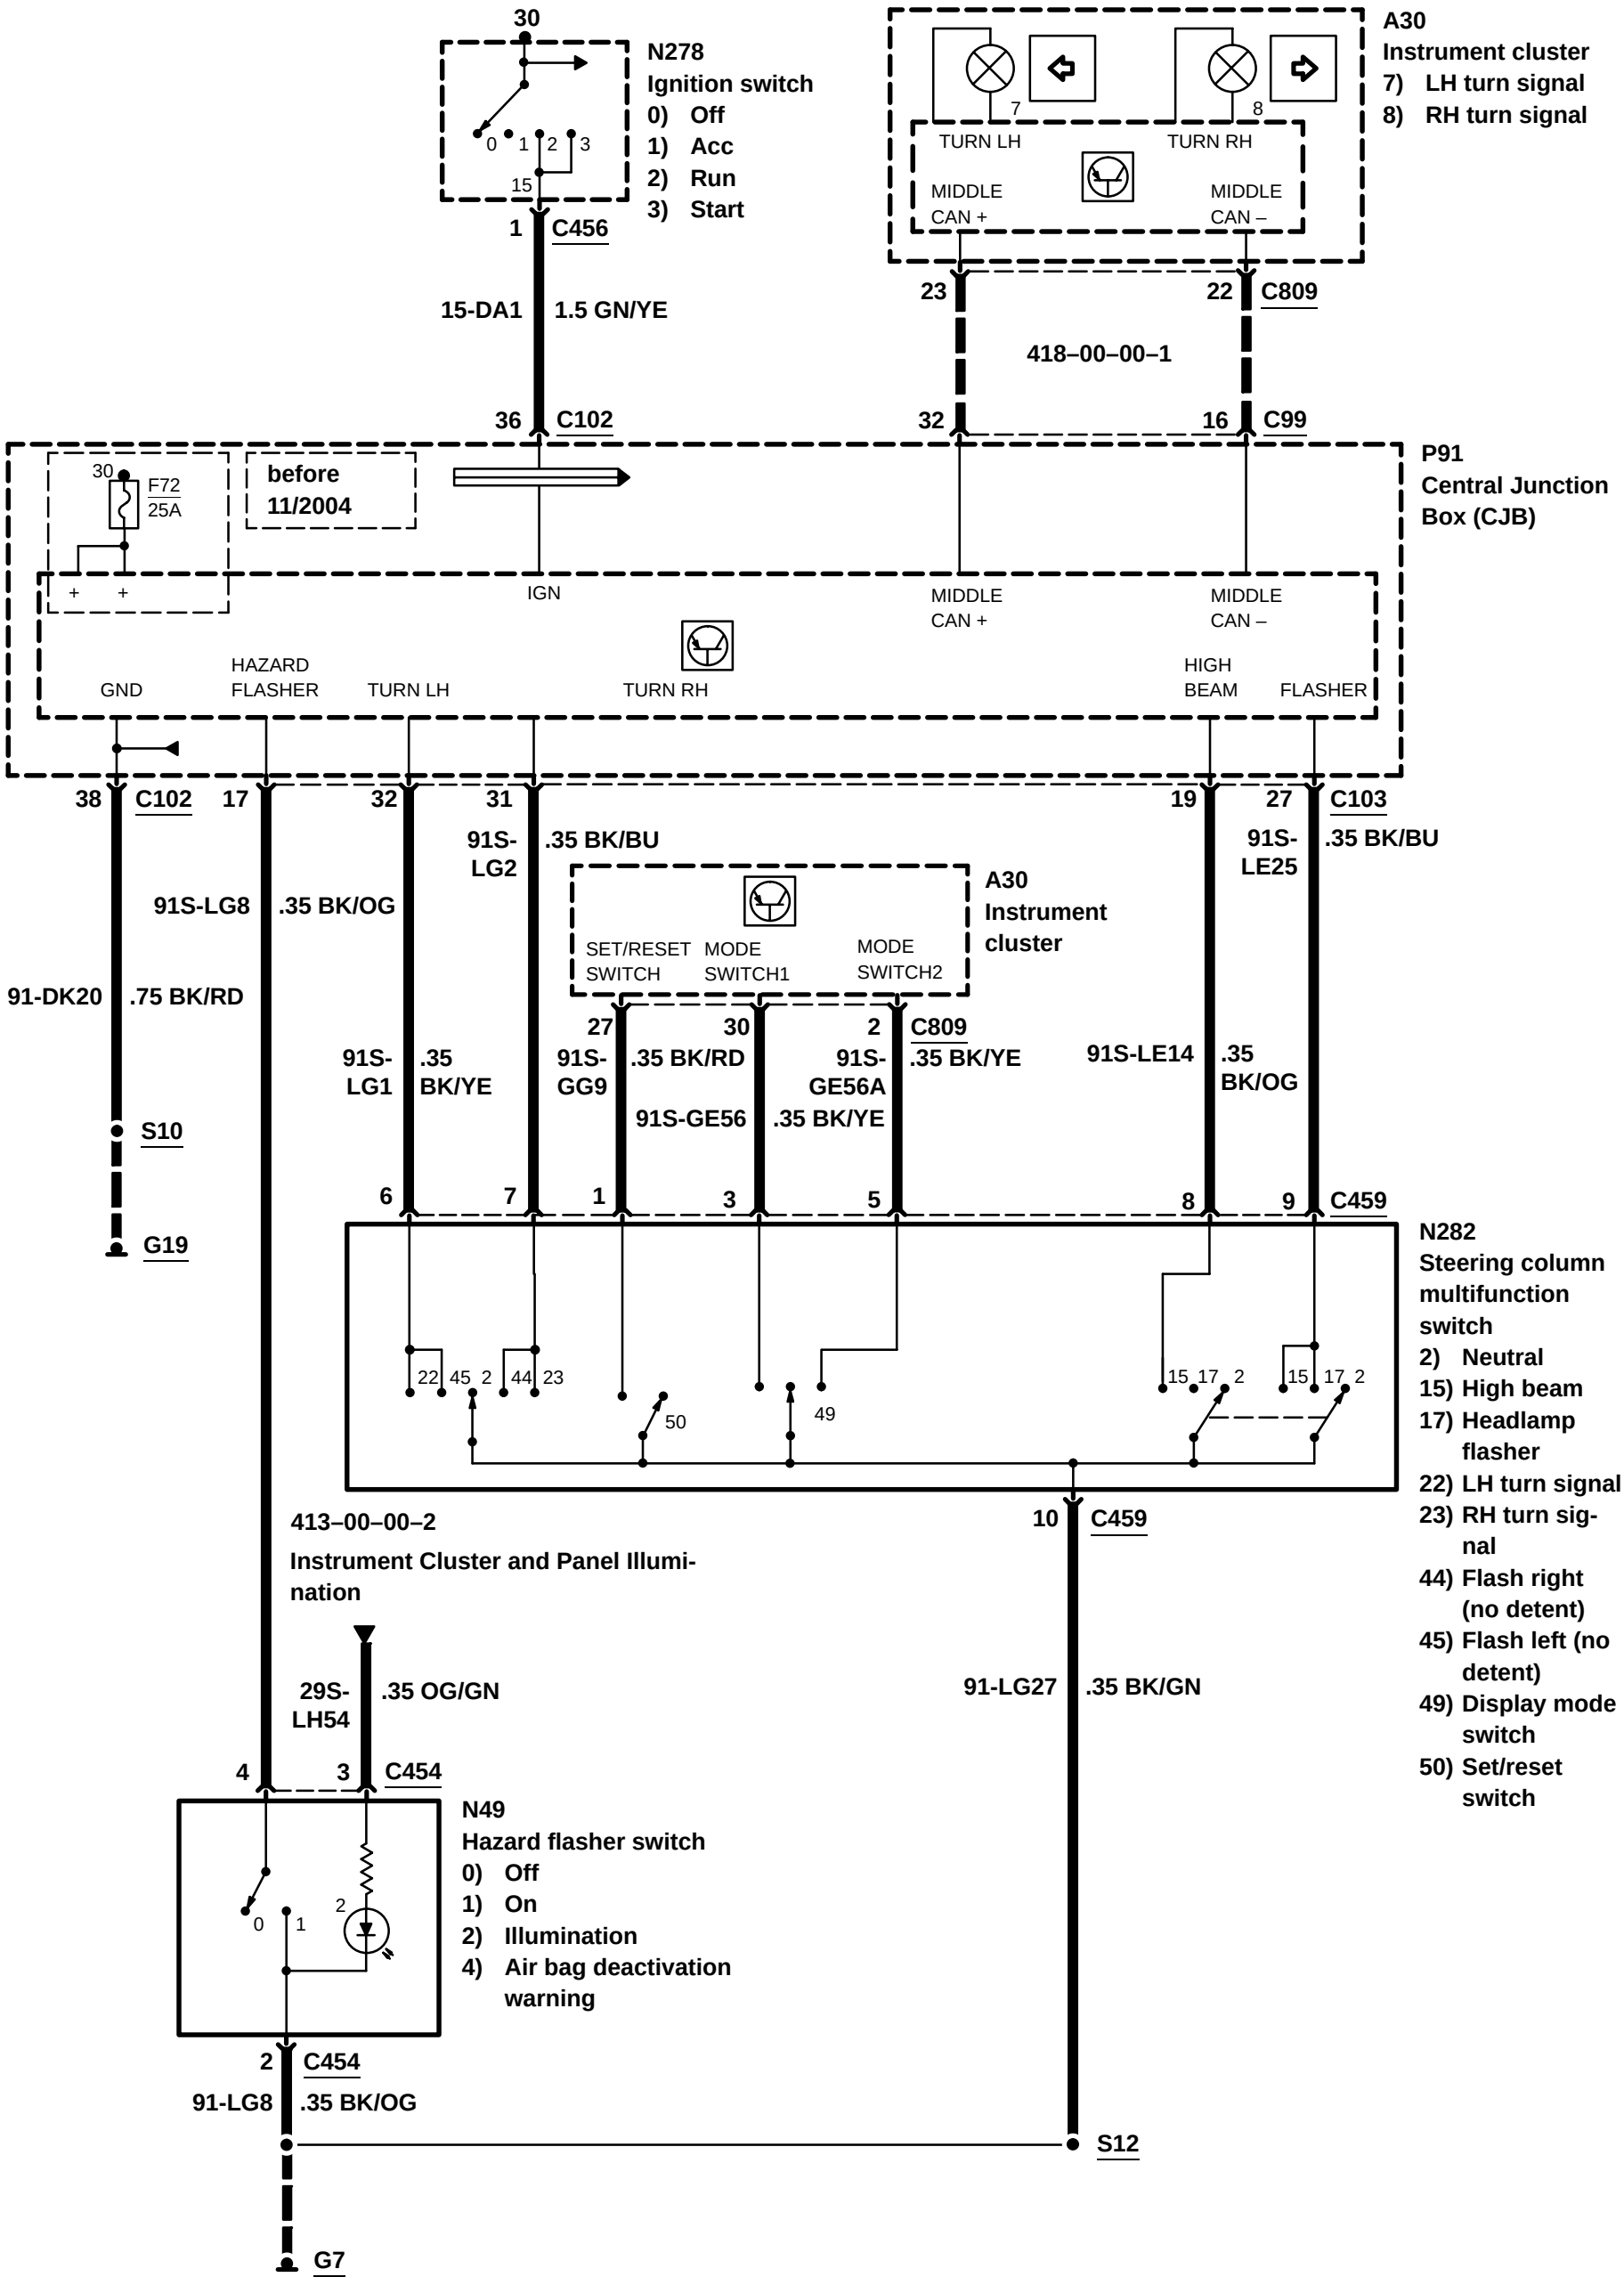


Exterior Lighting – Turn Signal Lamps, front

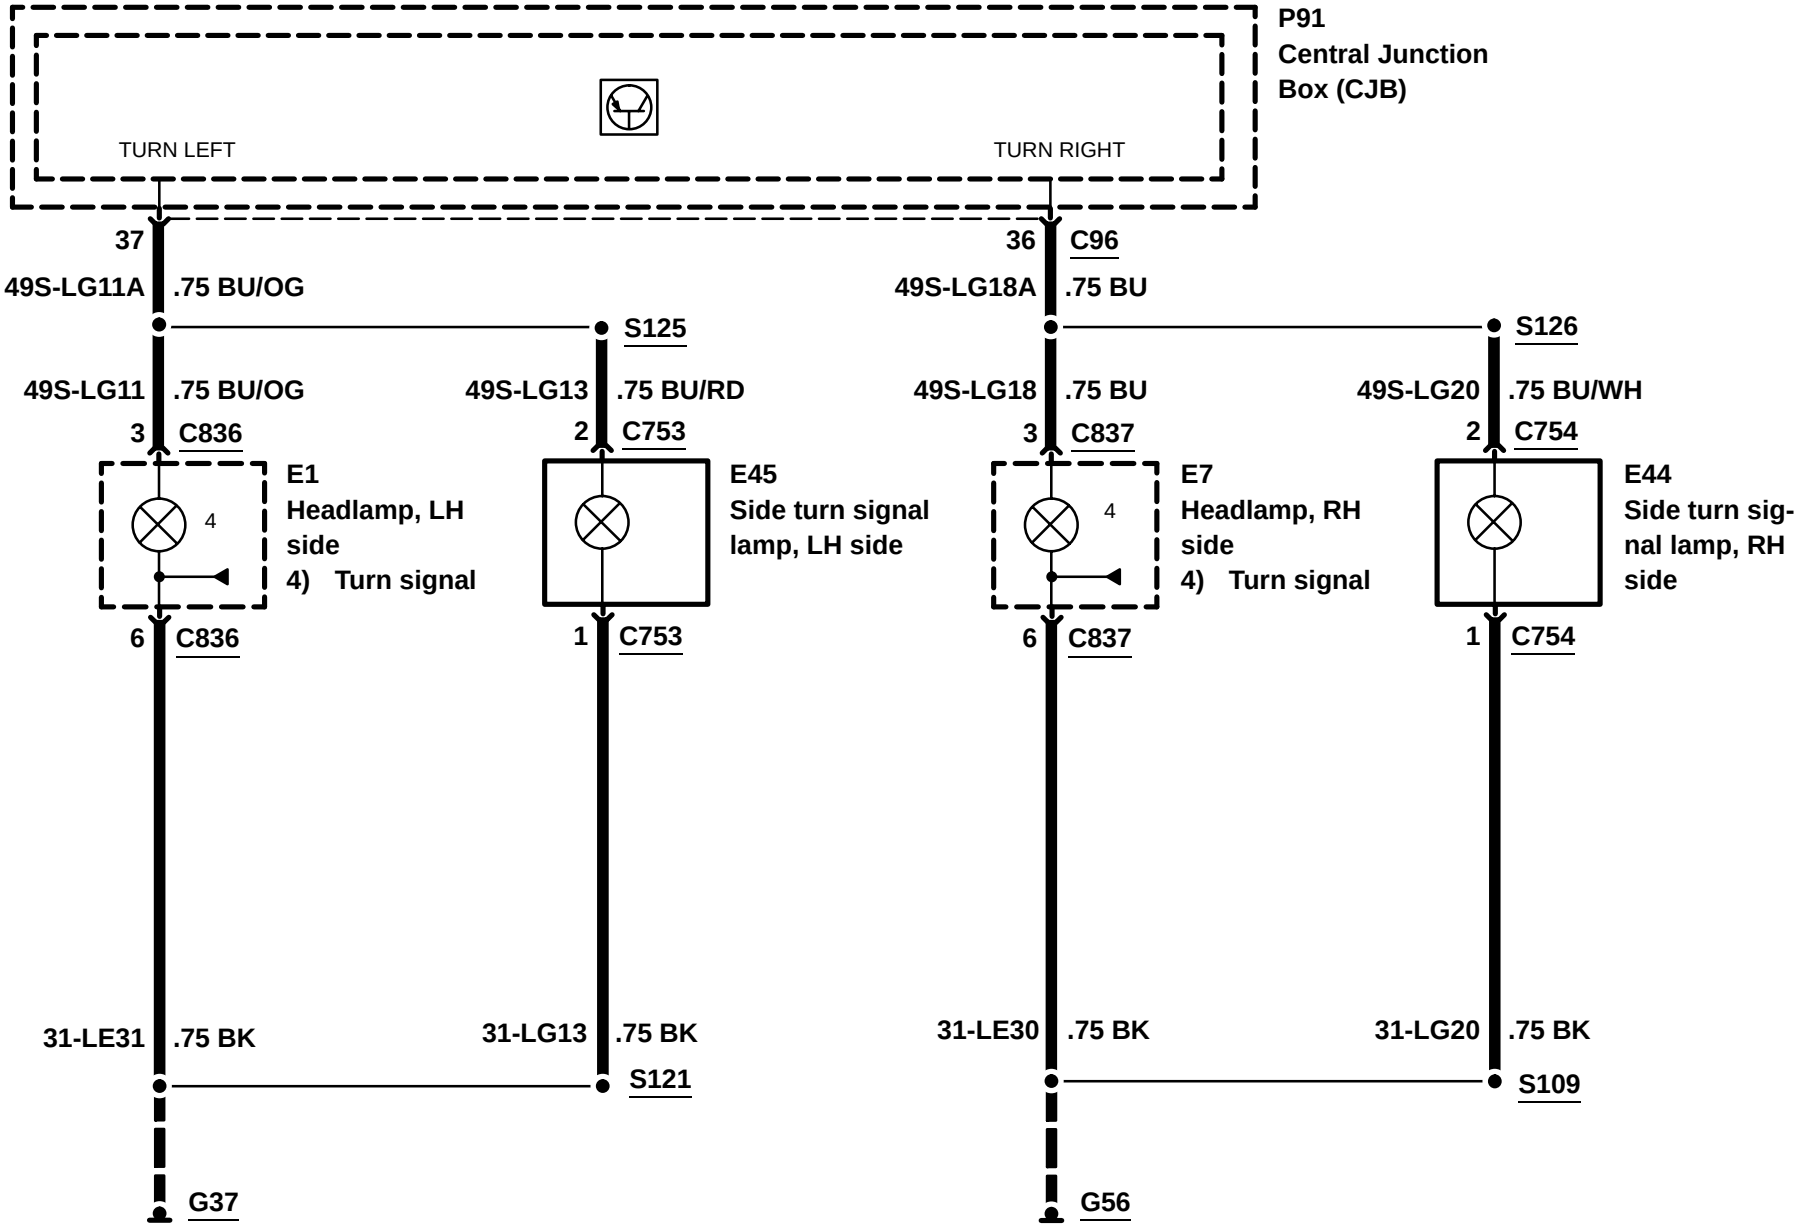


Exterior Lighting – Turn Signal Lamps, front, China as of 08/2005

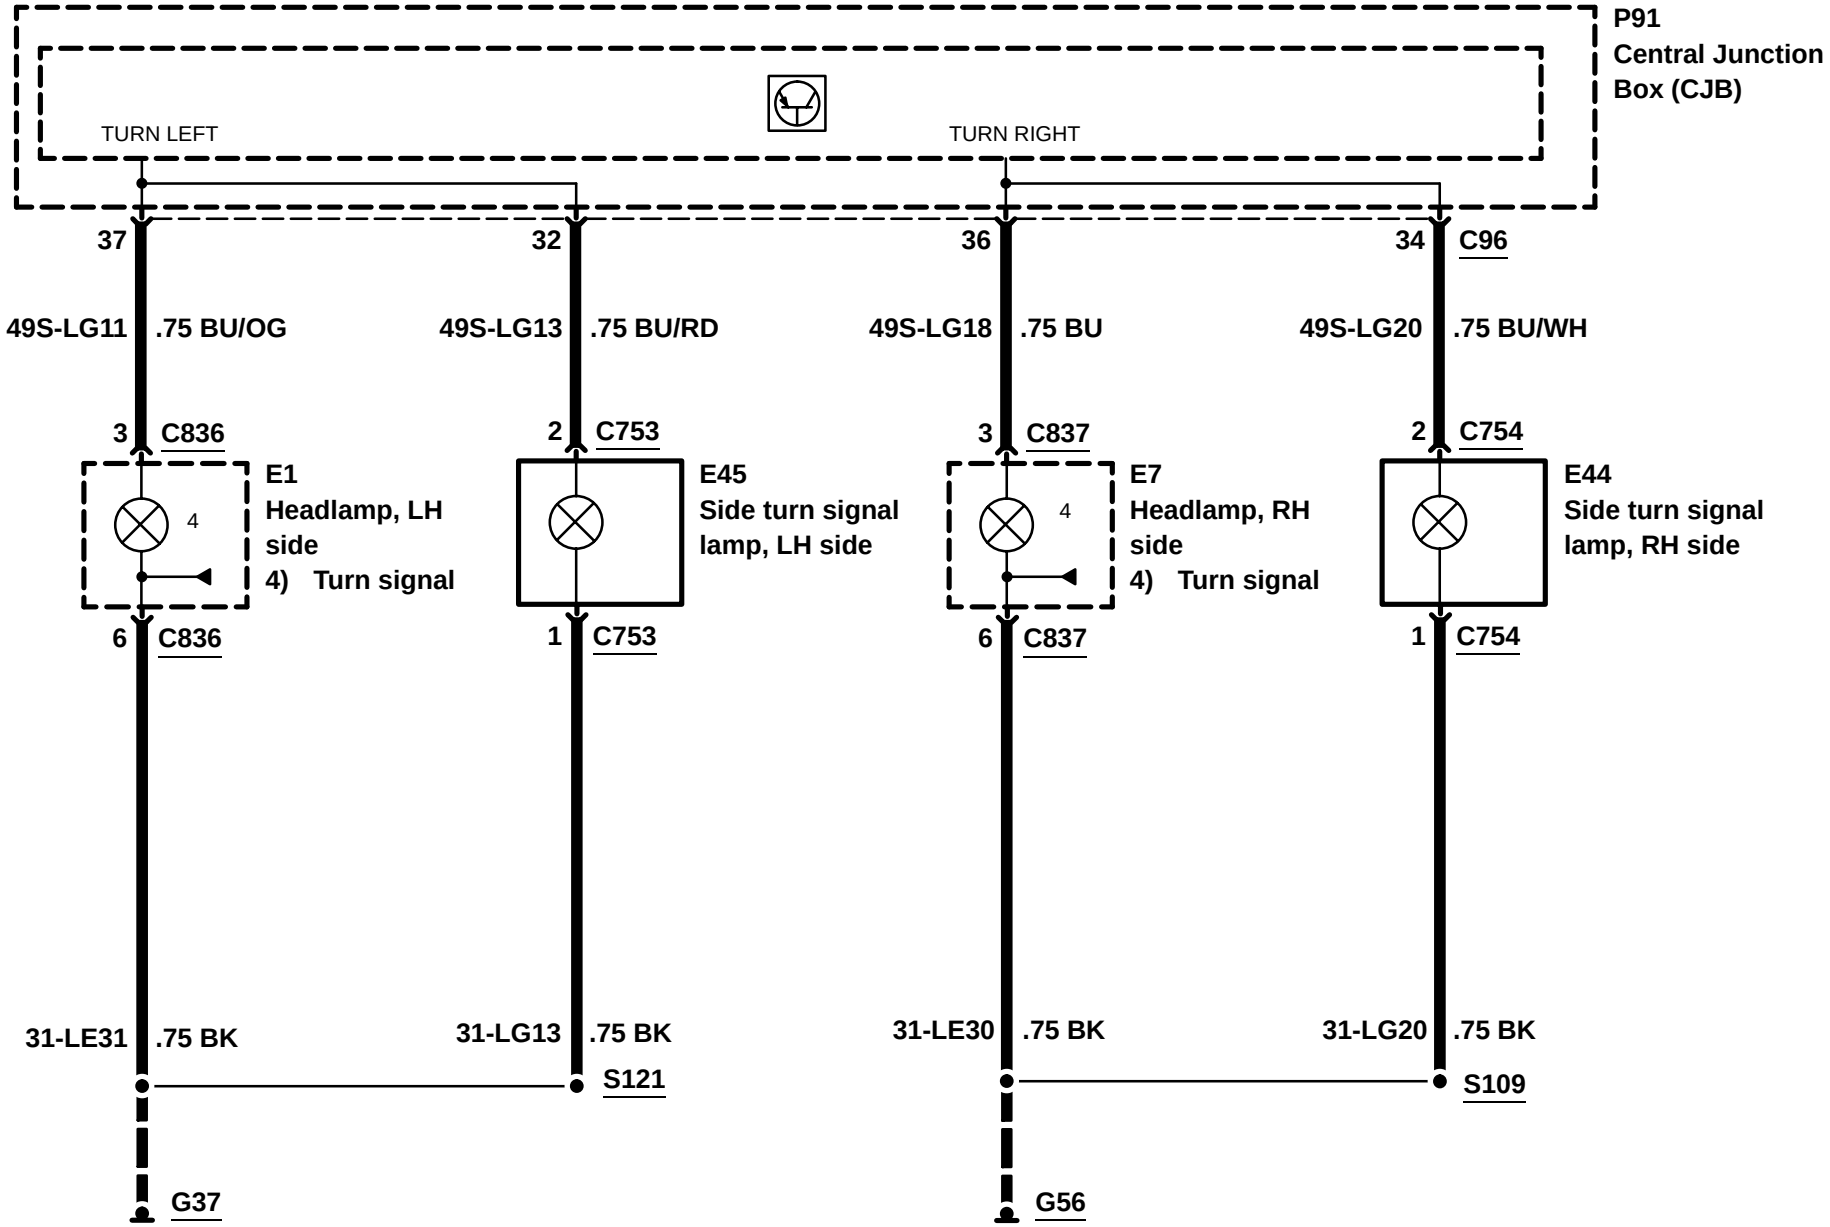


Exterior Lighting – Turn Signal Lamps, rear, 4–door model

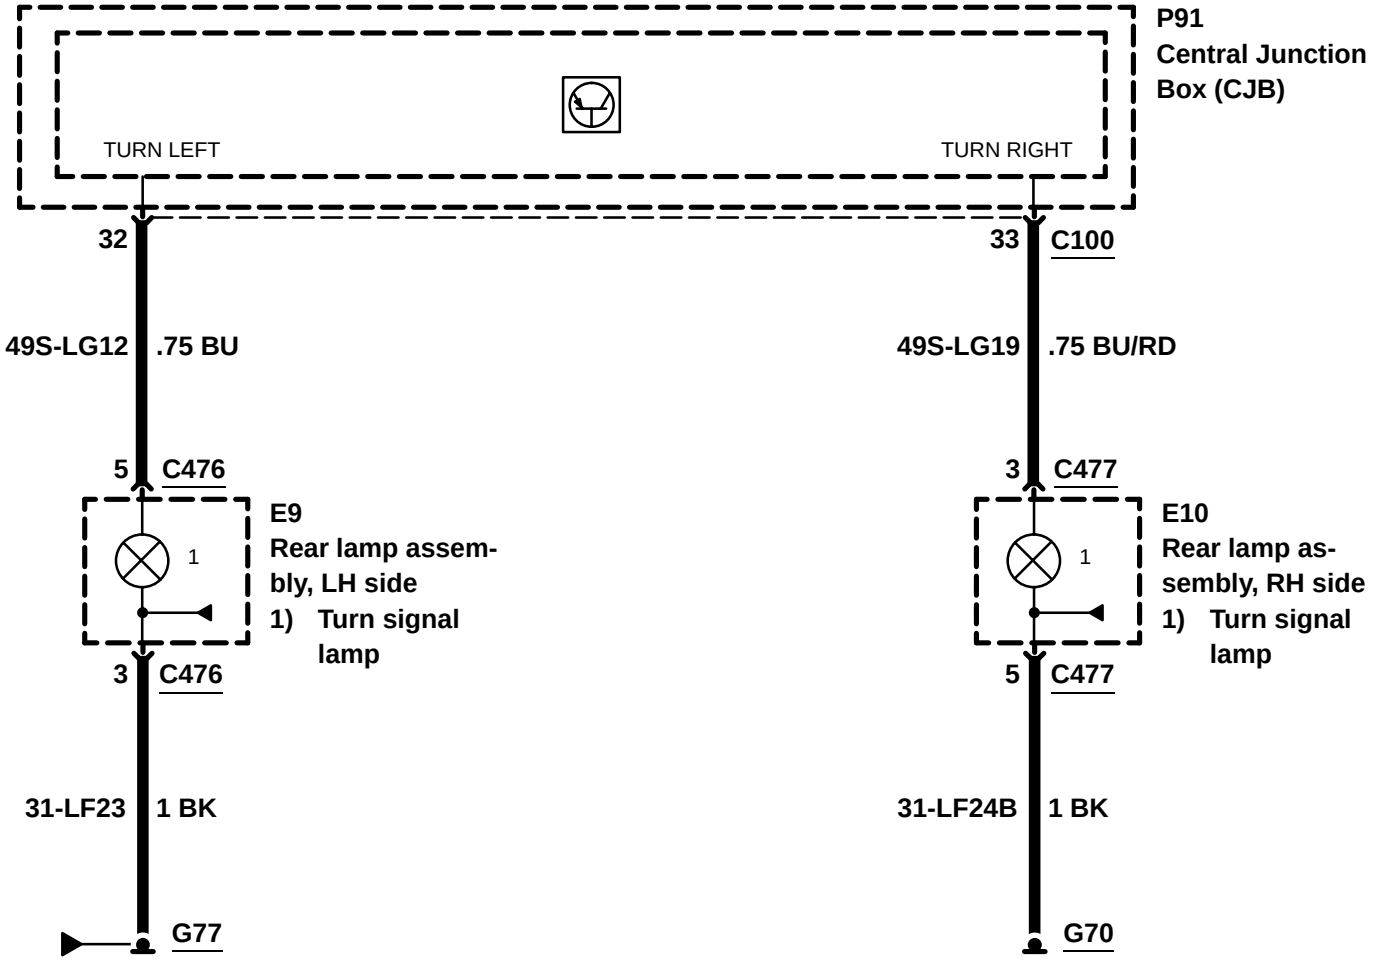


Exterior Lighting – Turn Signal Lamps, rear, 5–door model

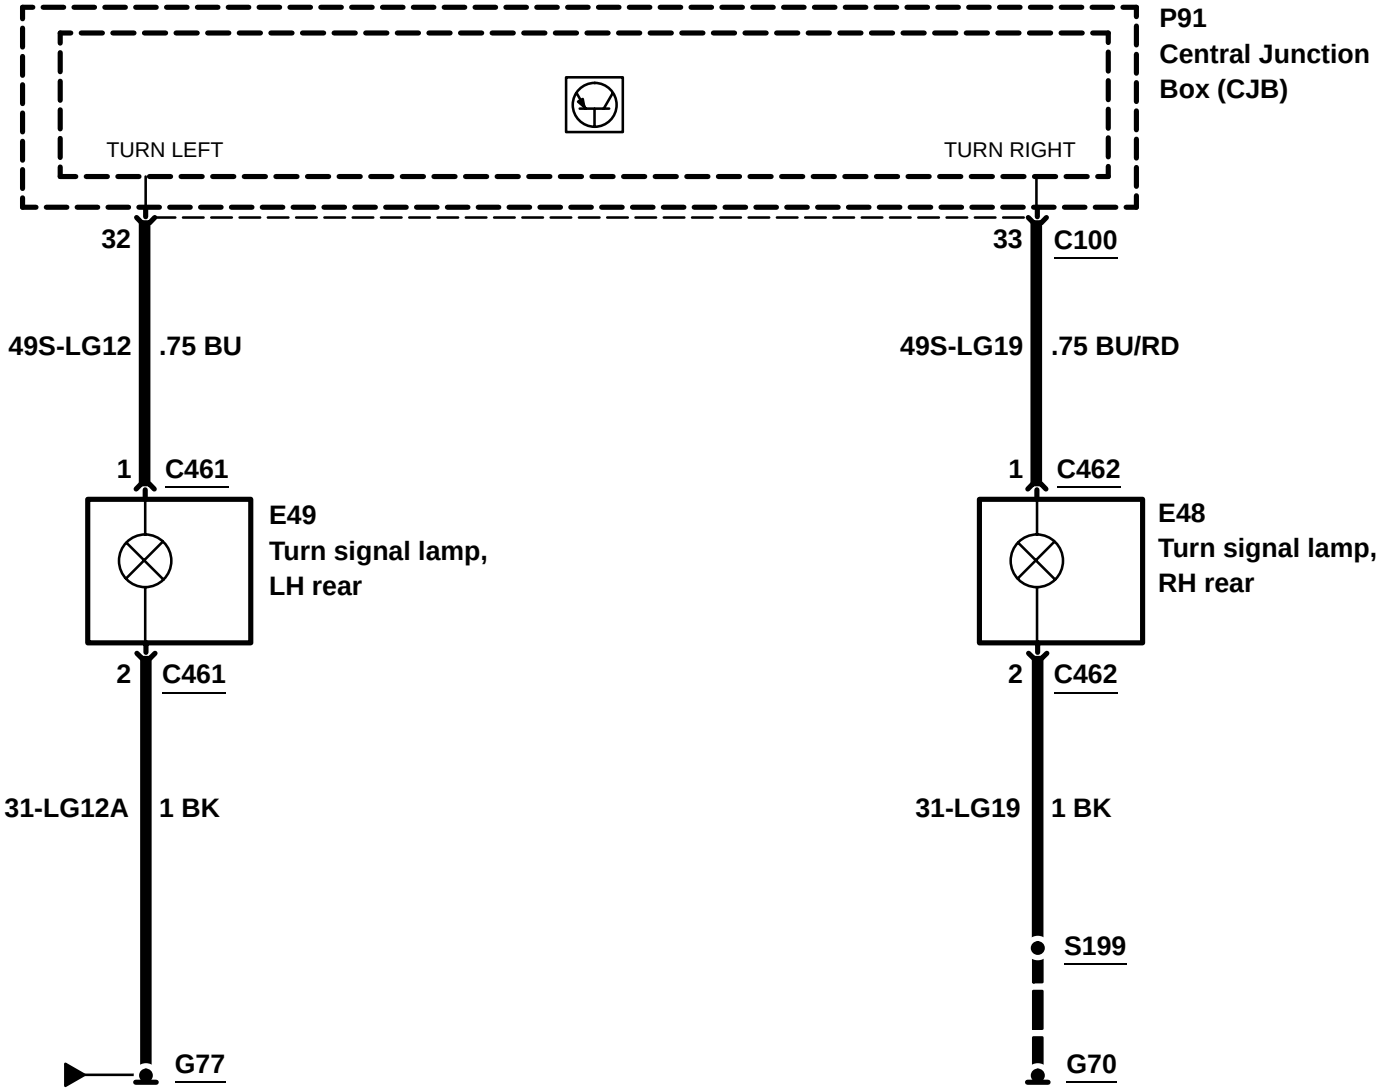


Exterior Lighting – Position and Parking Lamps, 4–door model

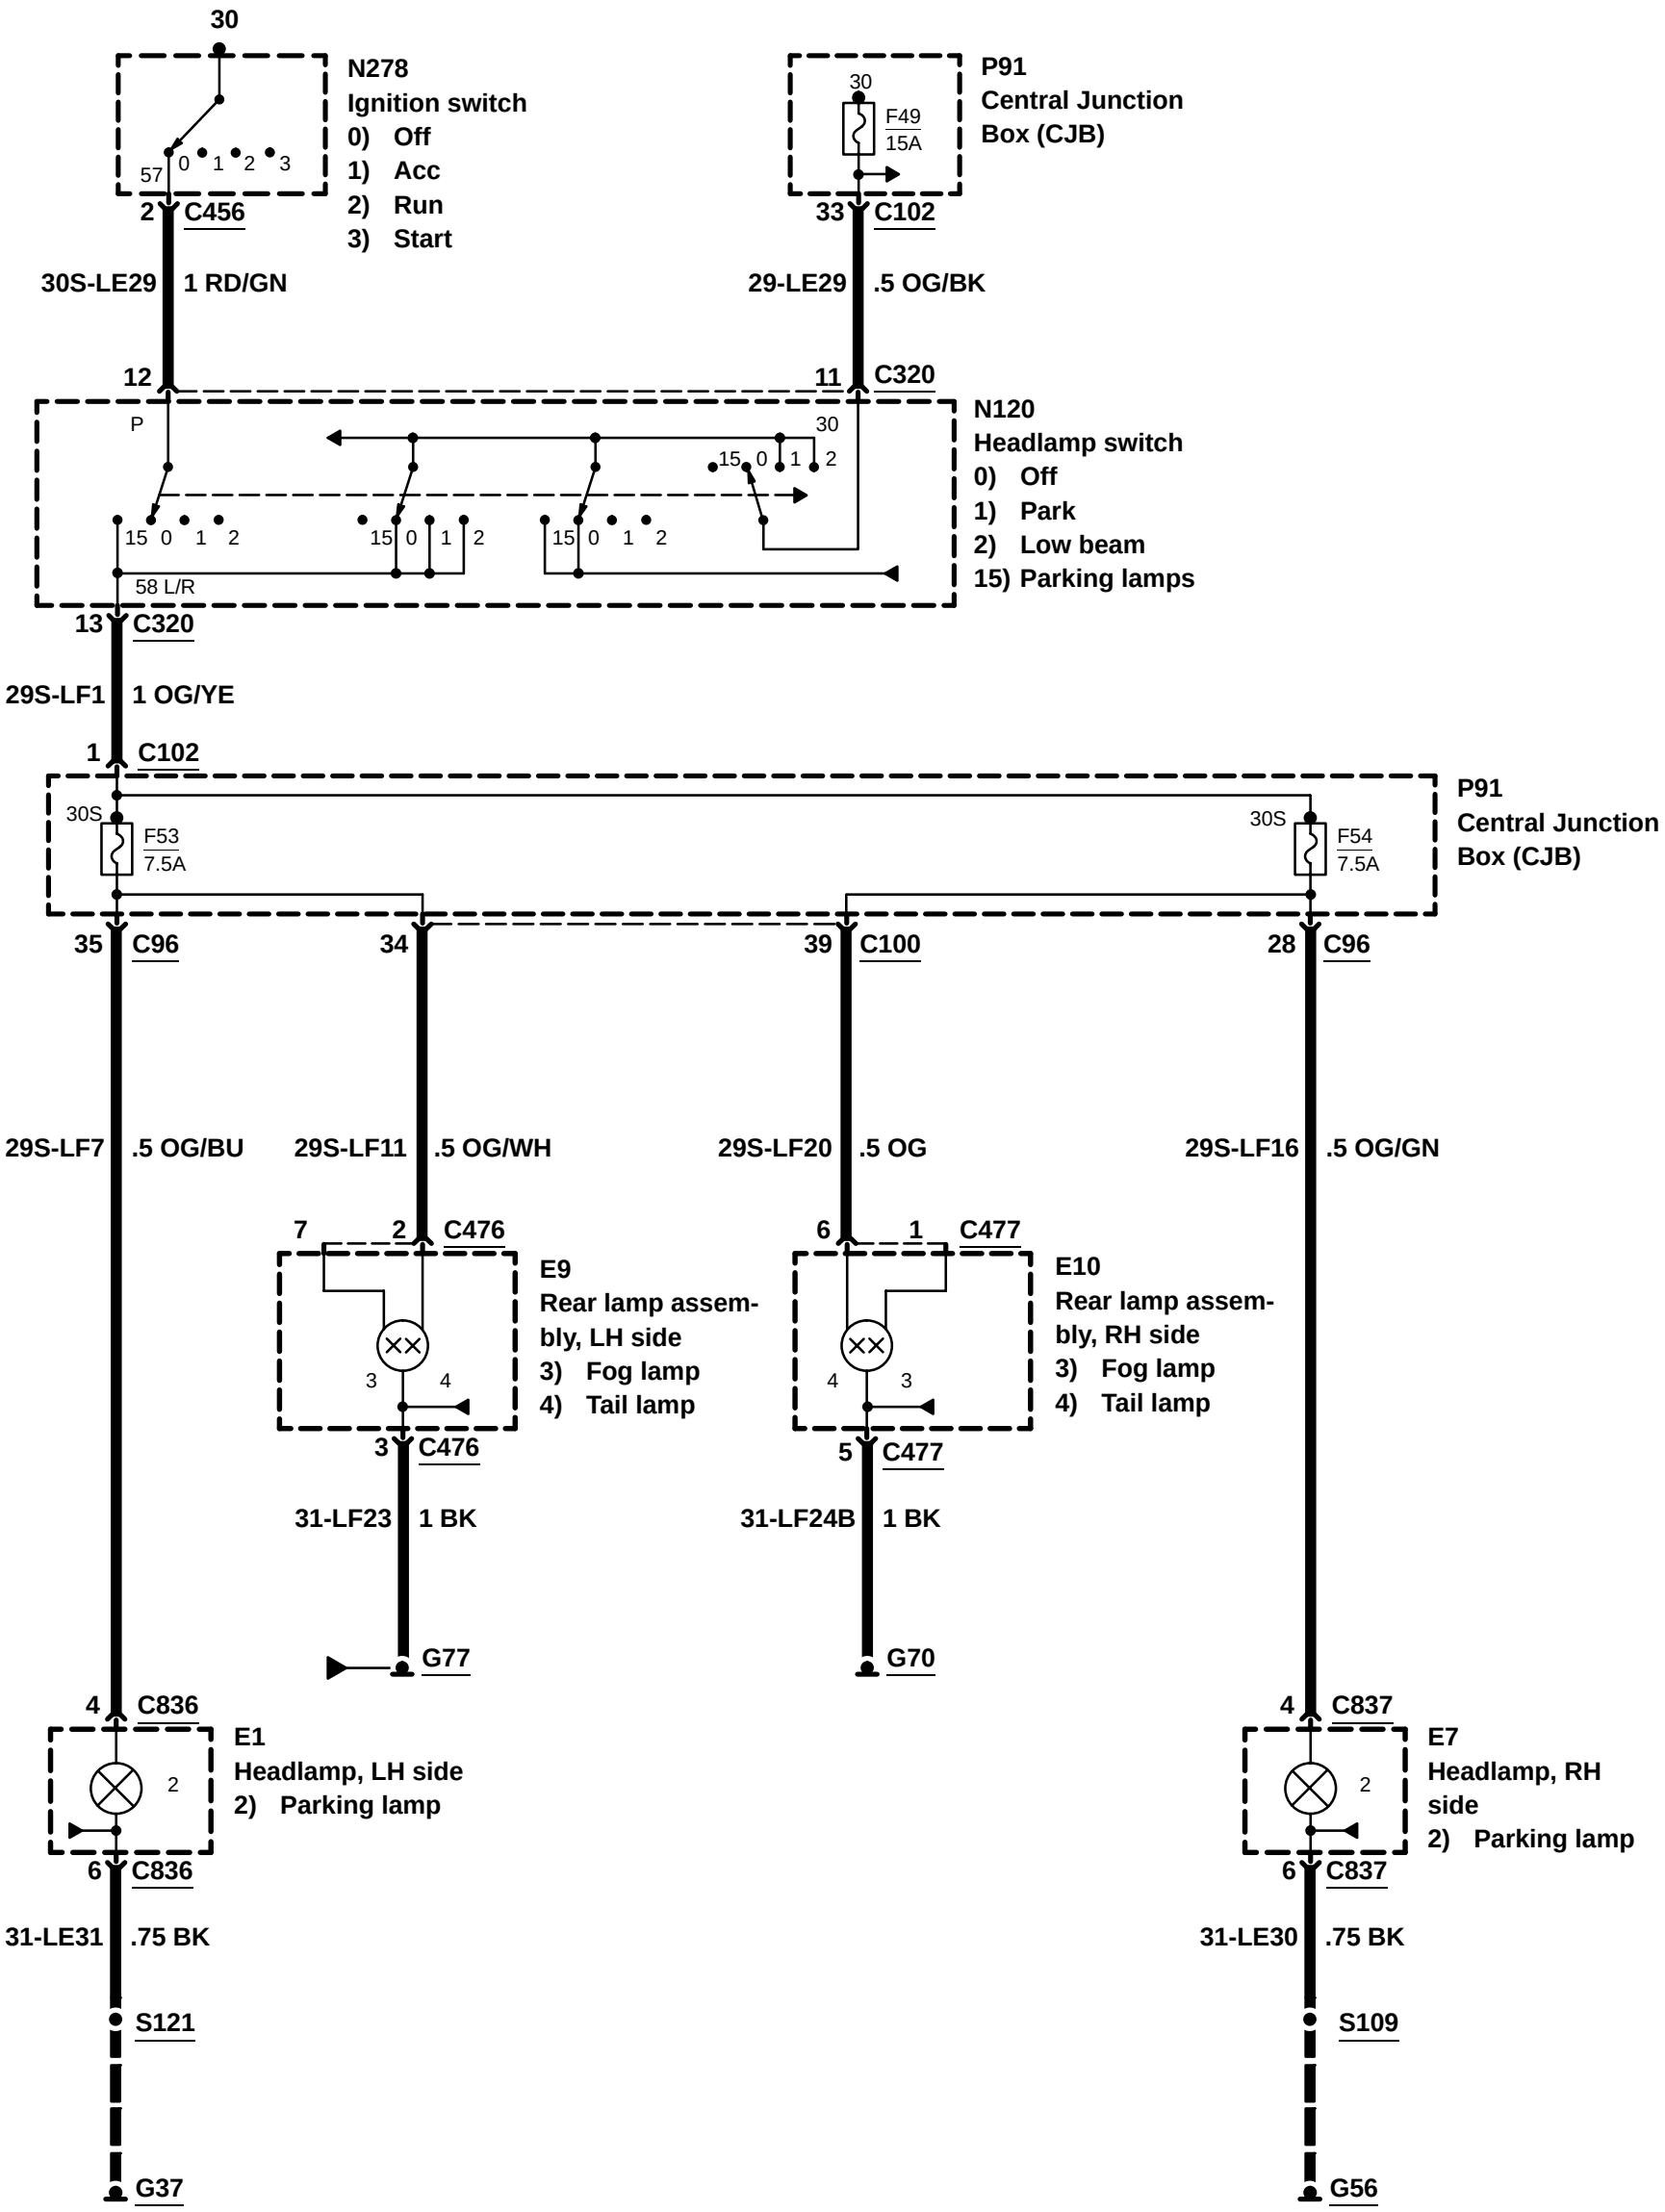


Exterior Lighting – Position and Parking Lamps, 5–door model

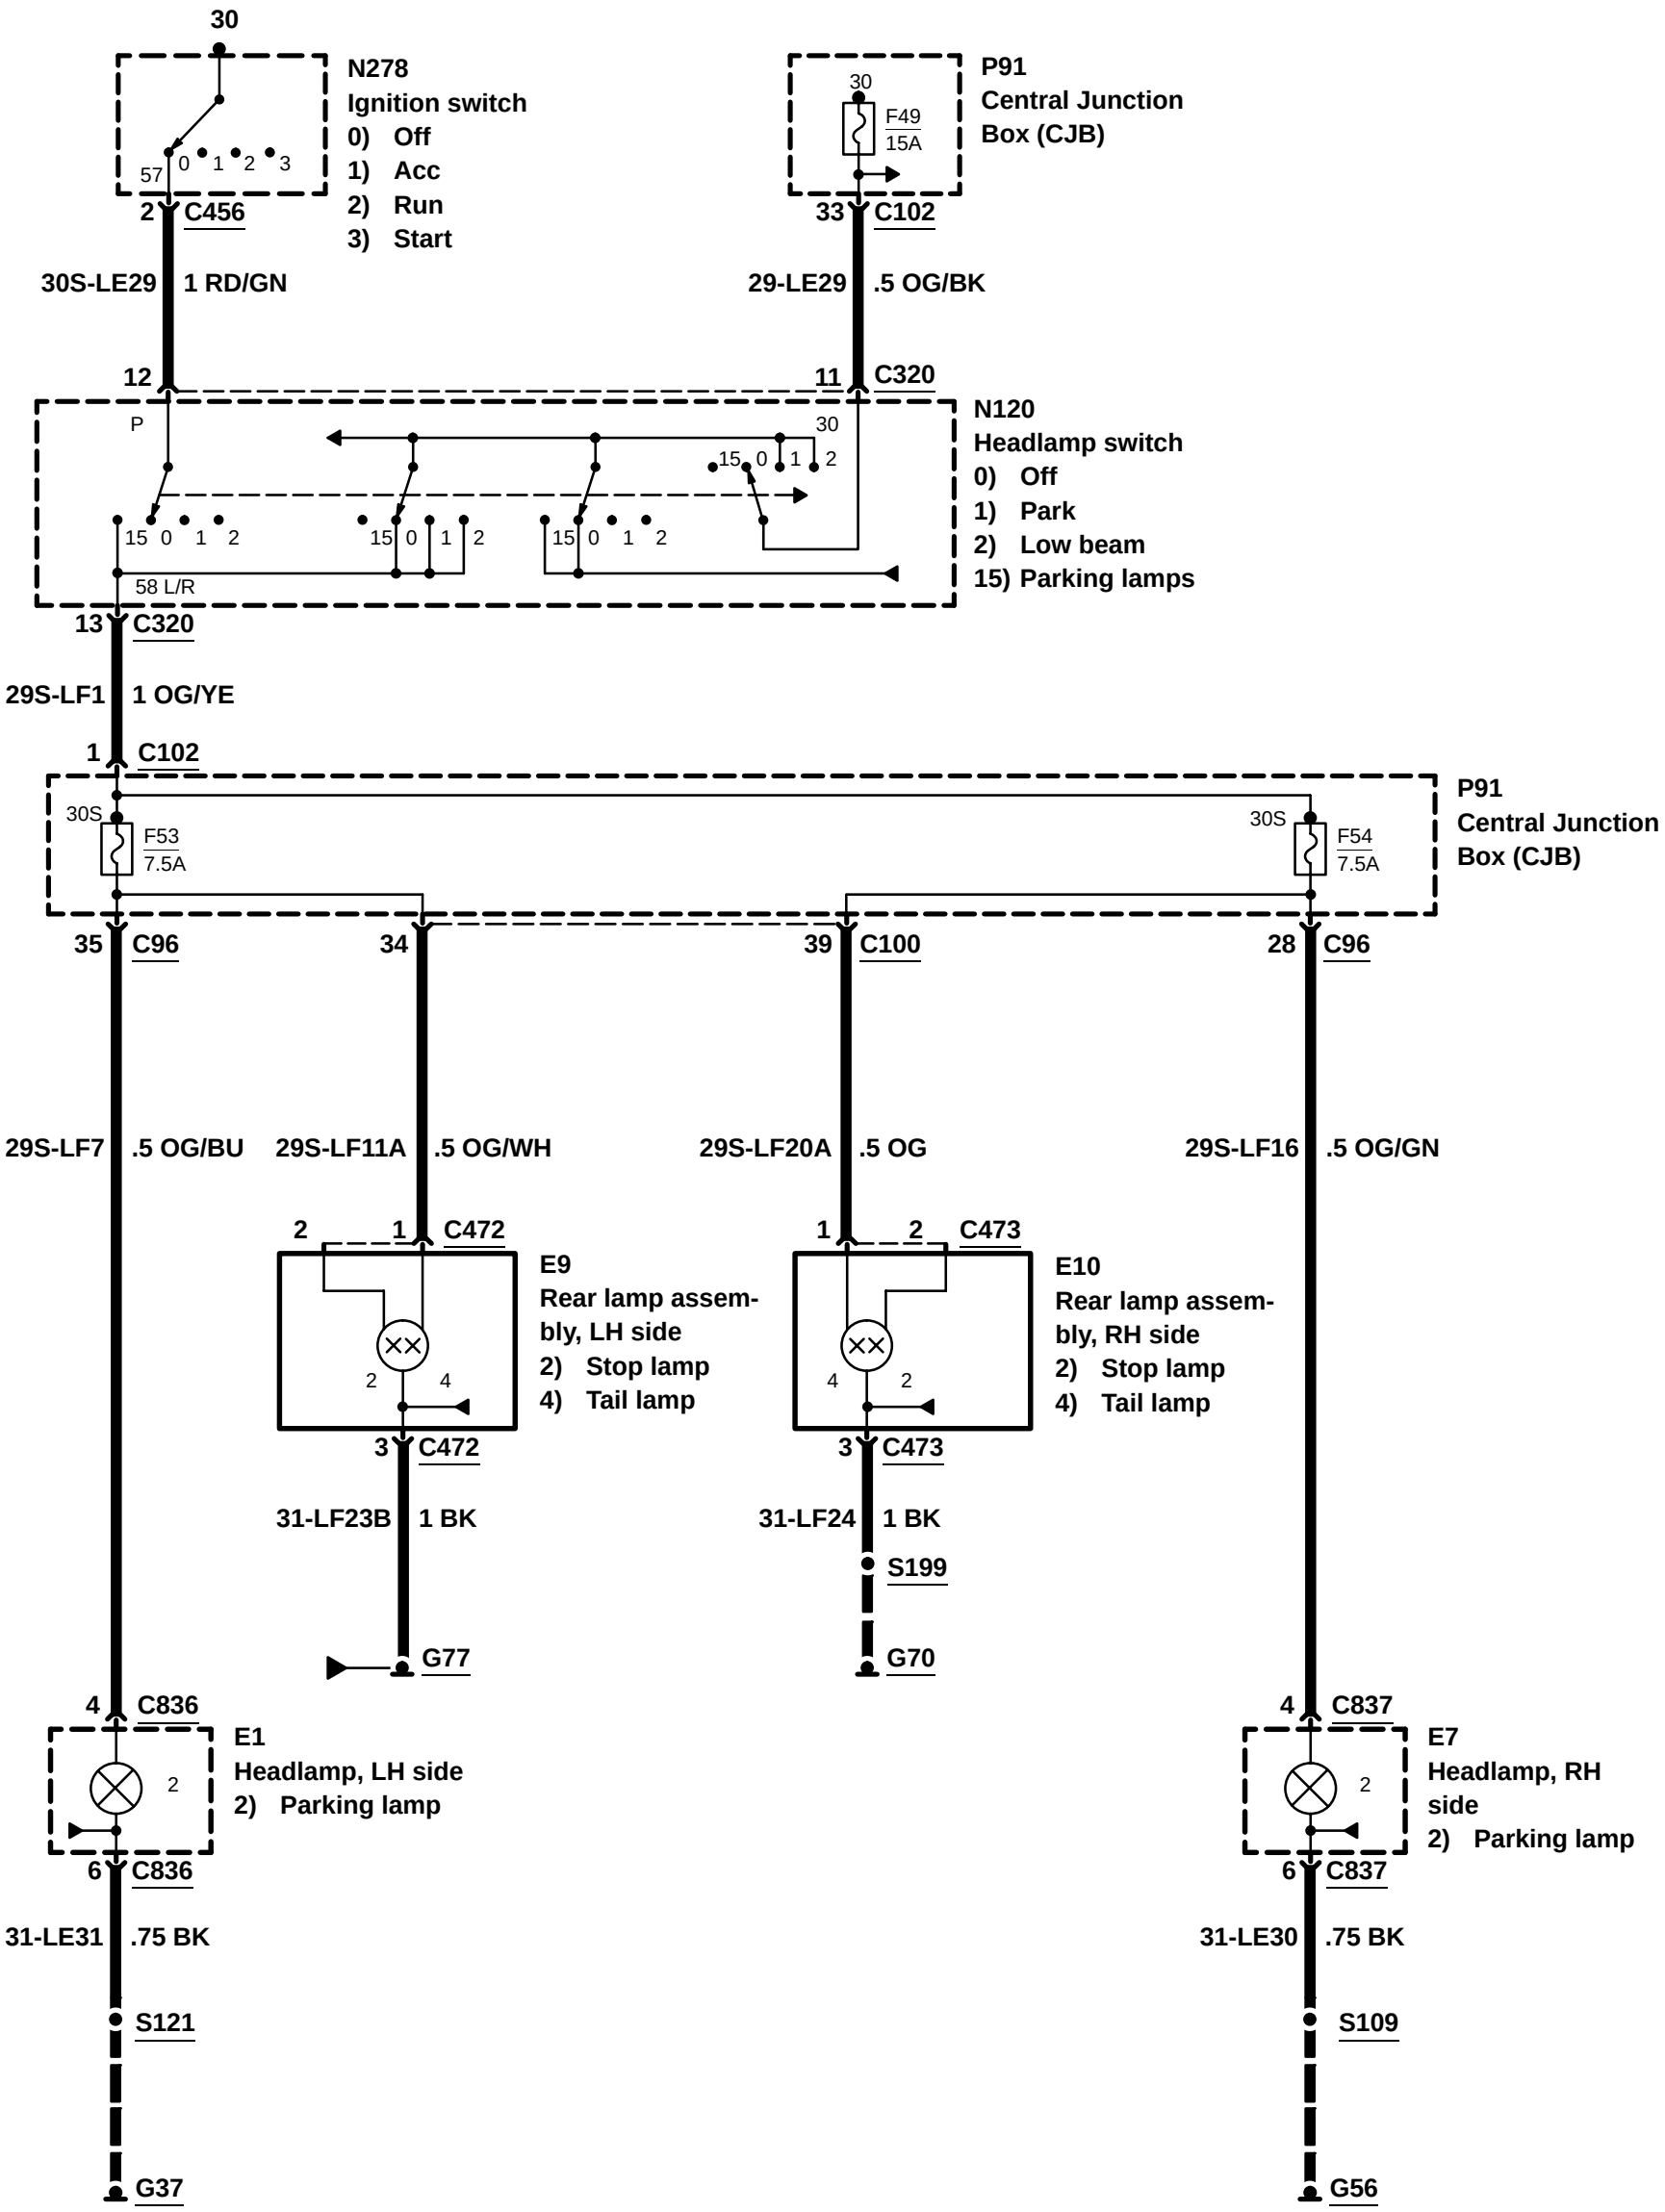


Exterior Lighting – Licence Plate Illumination

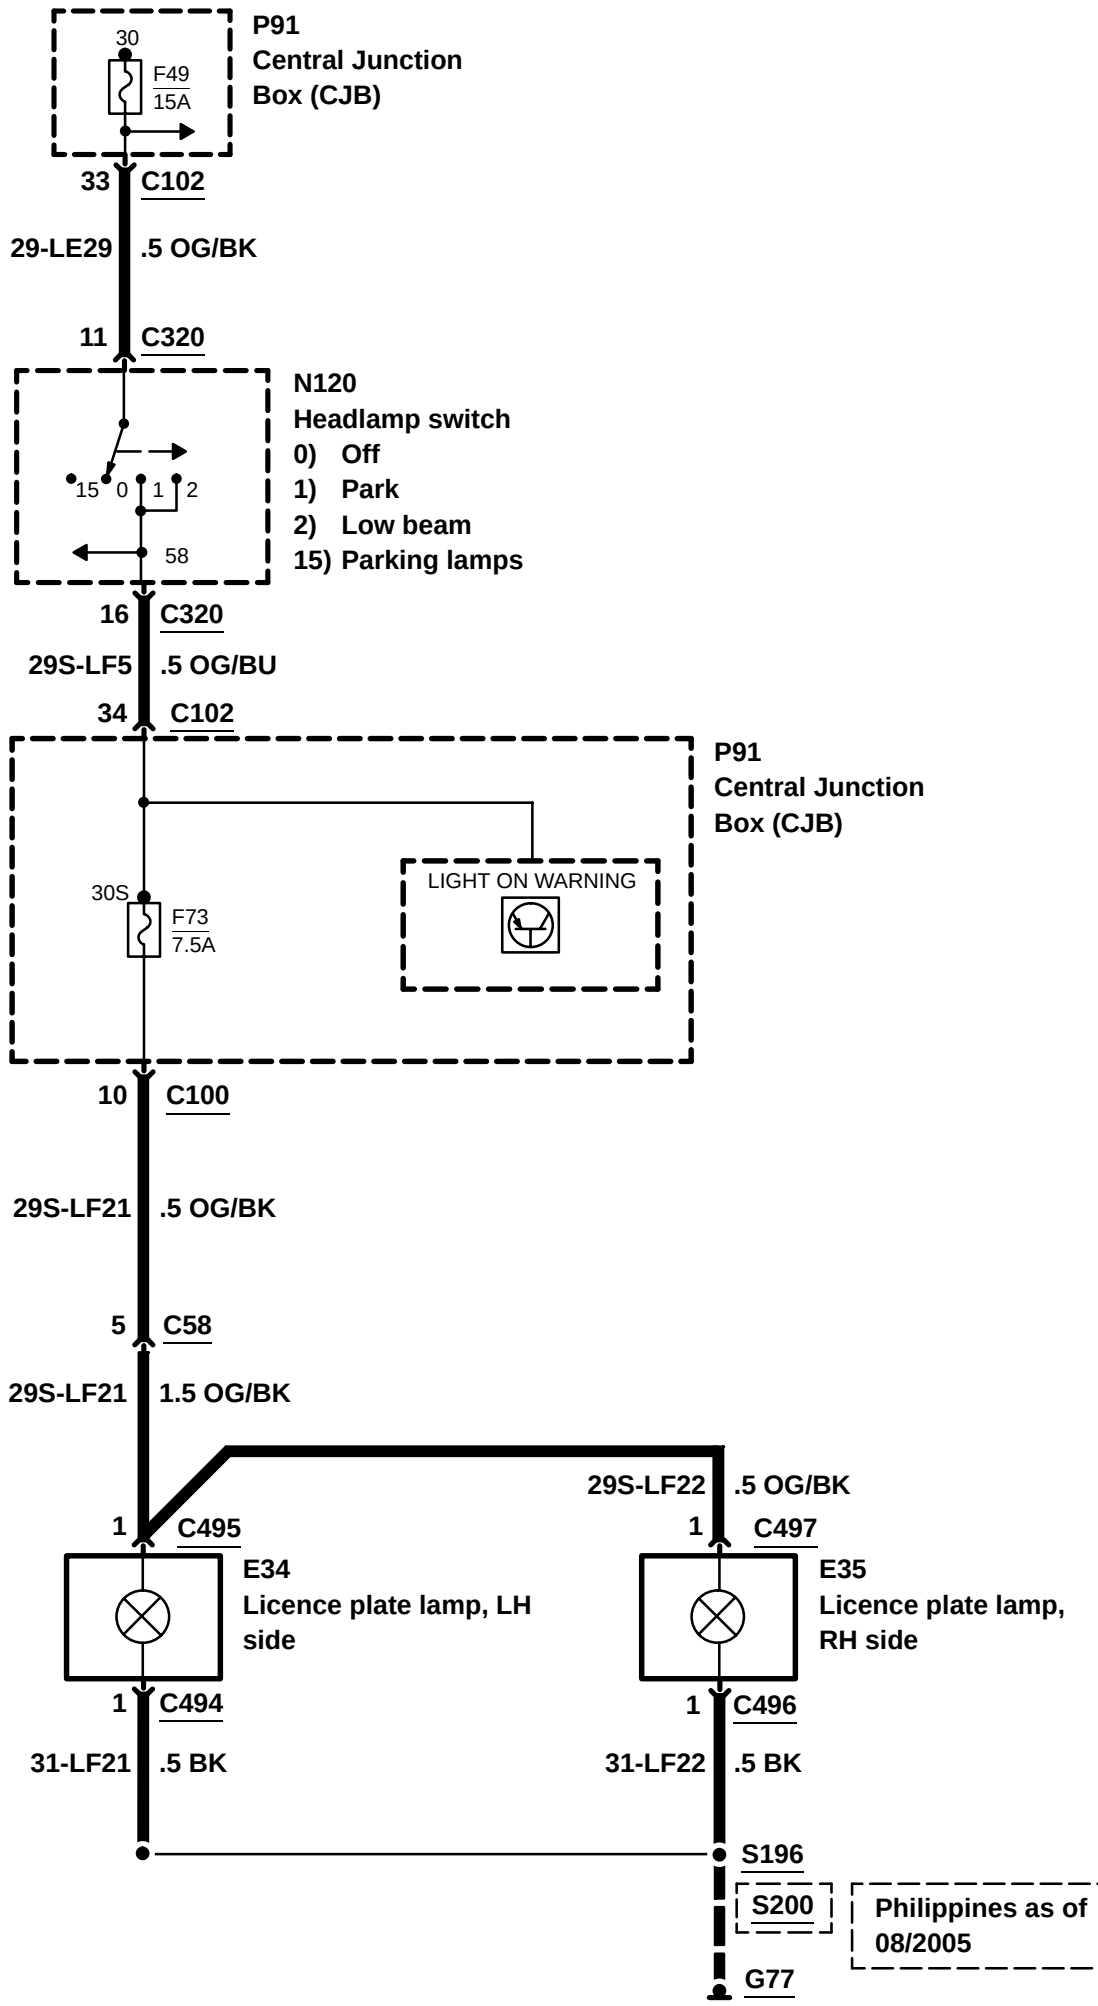


Exterior Lighting – Fog lamps, 4–door model

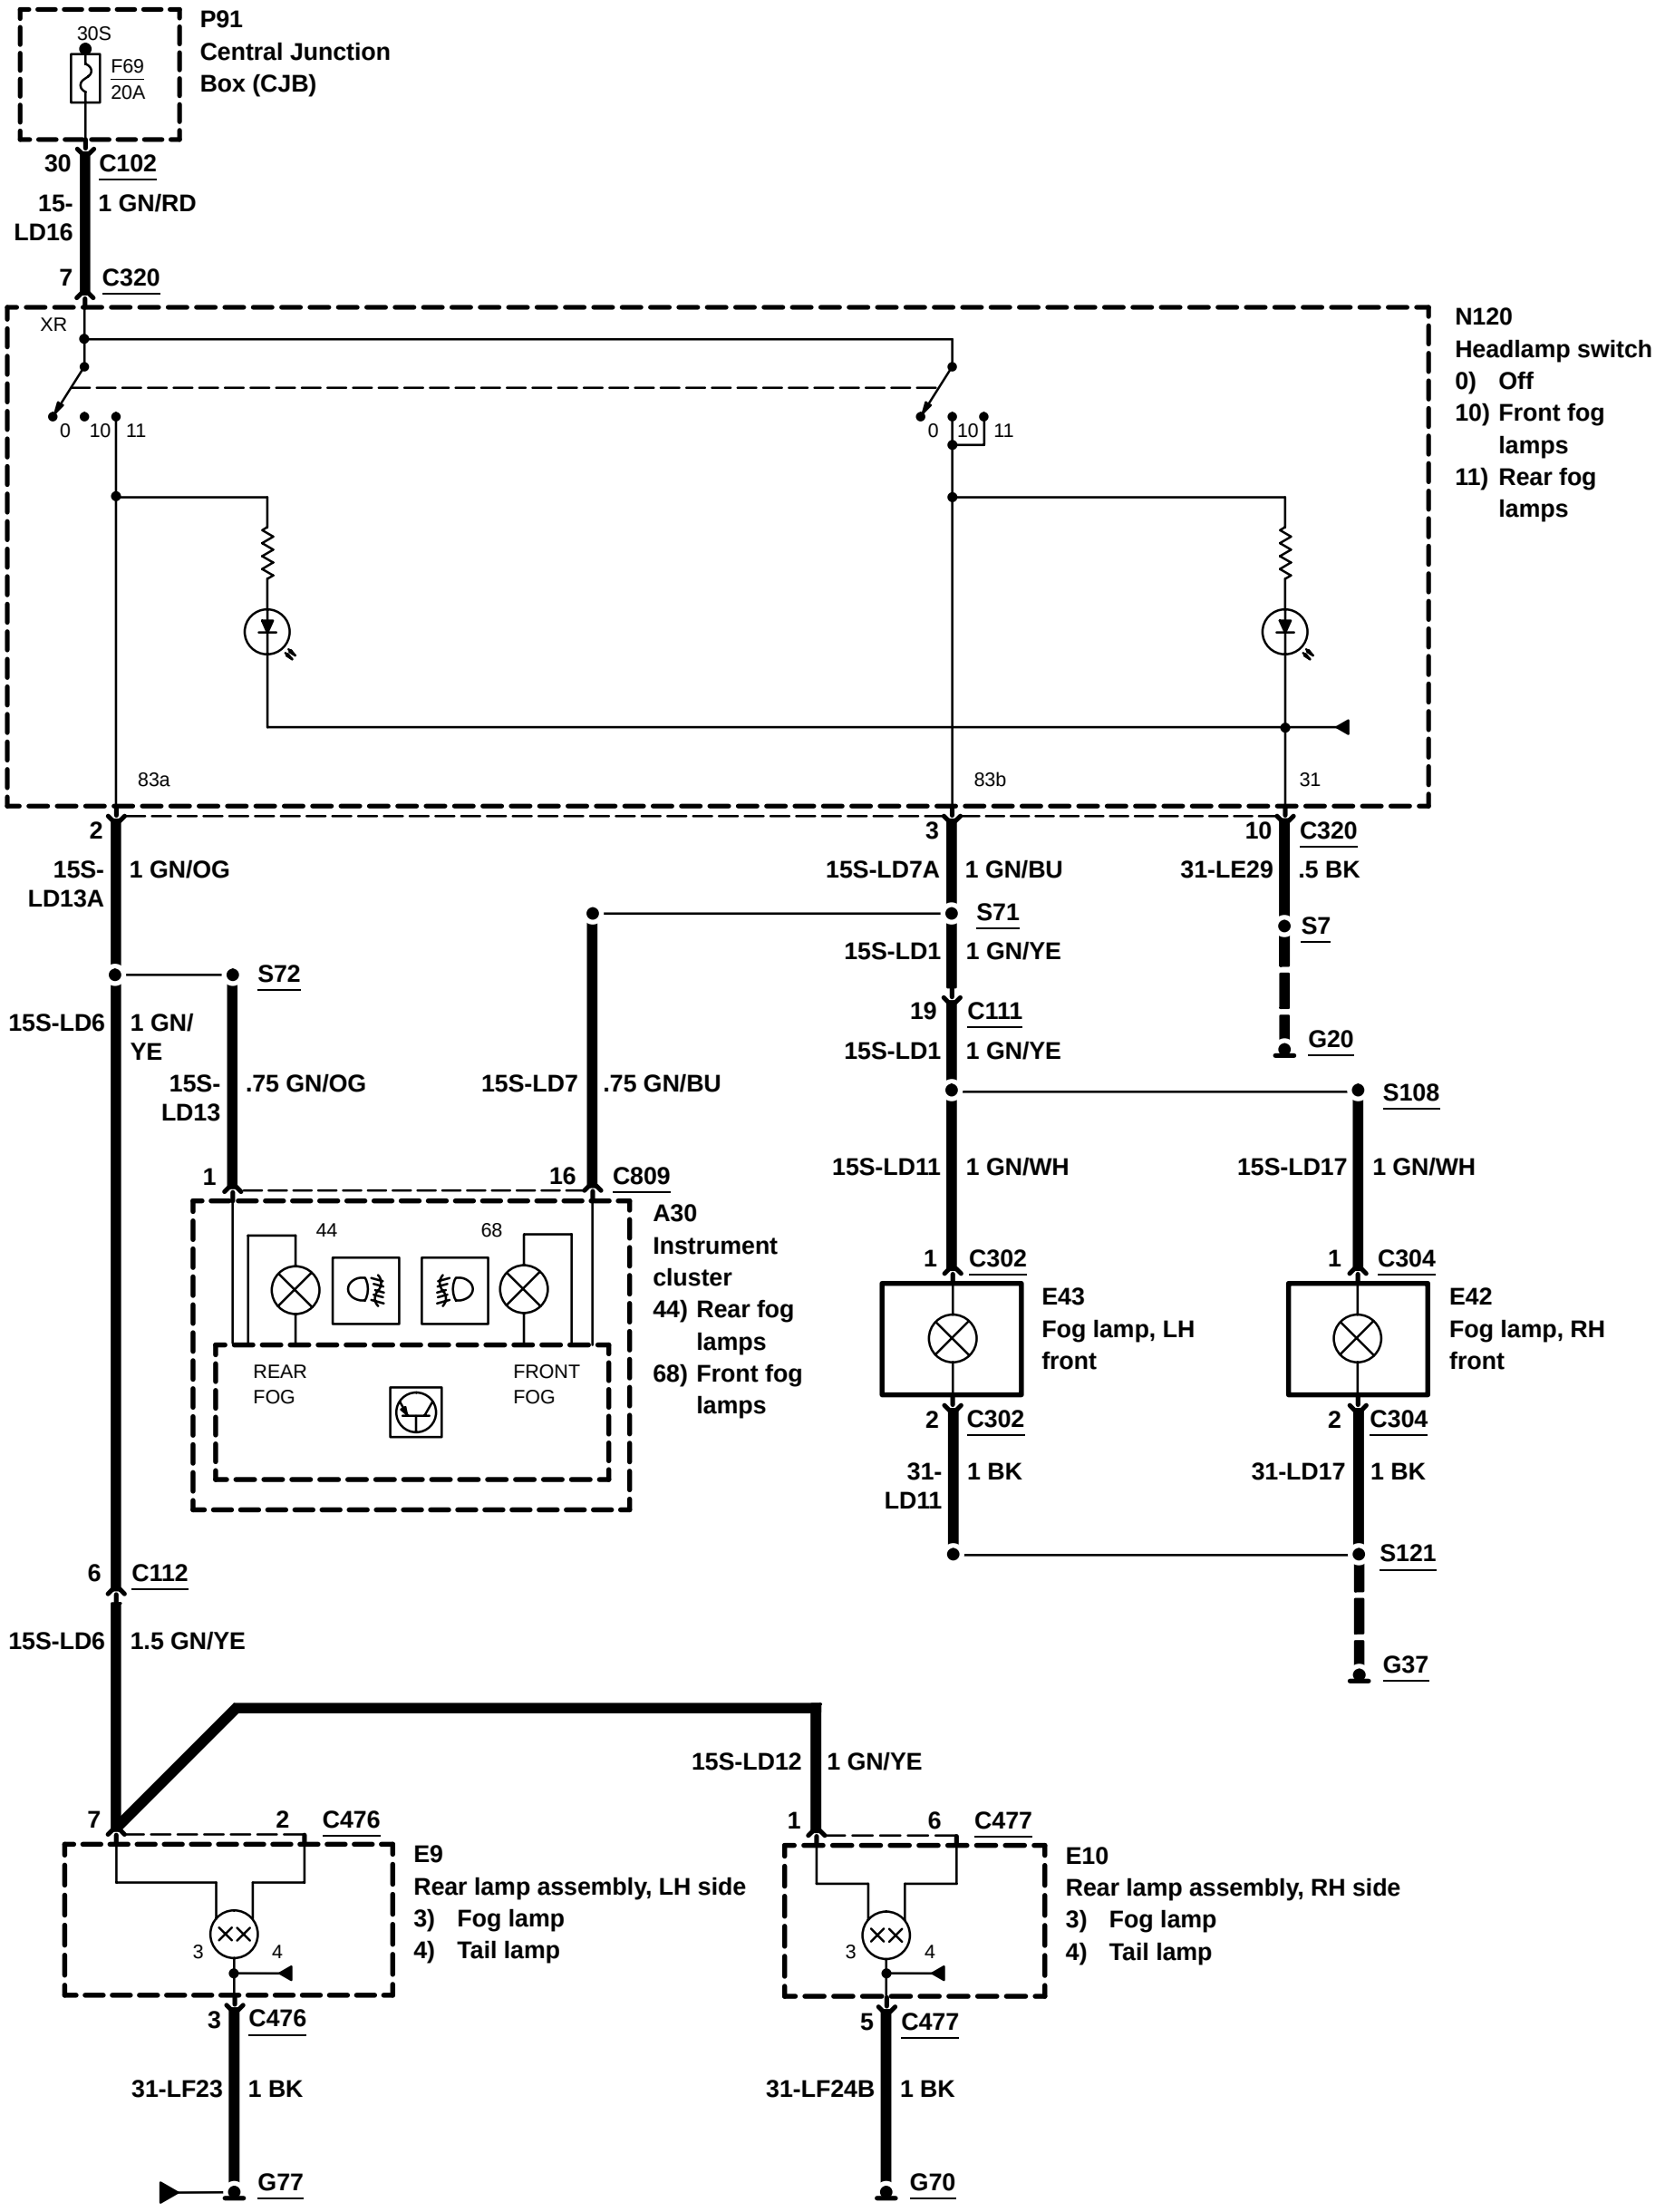


Exterior Lighting – Fog lamps, 5–door model

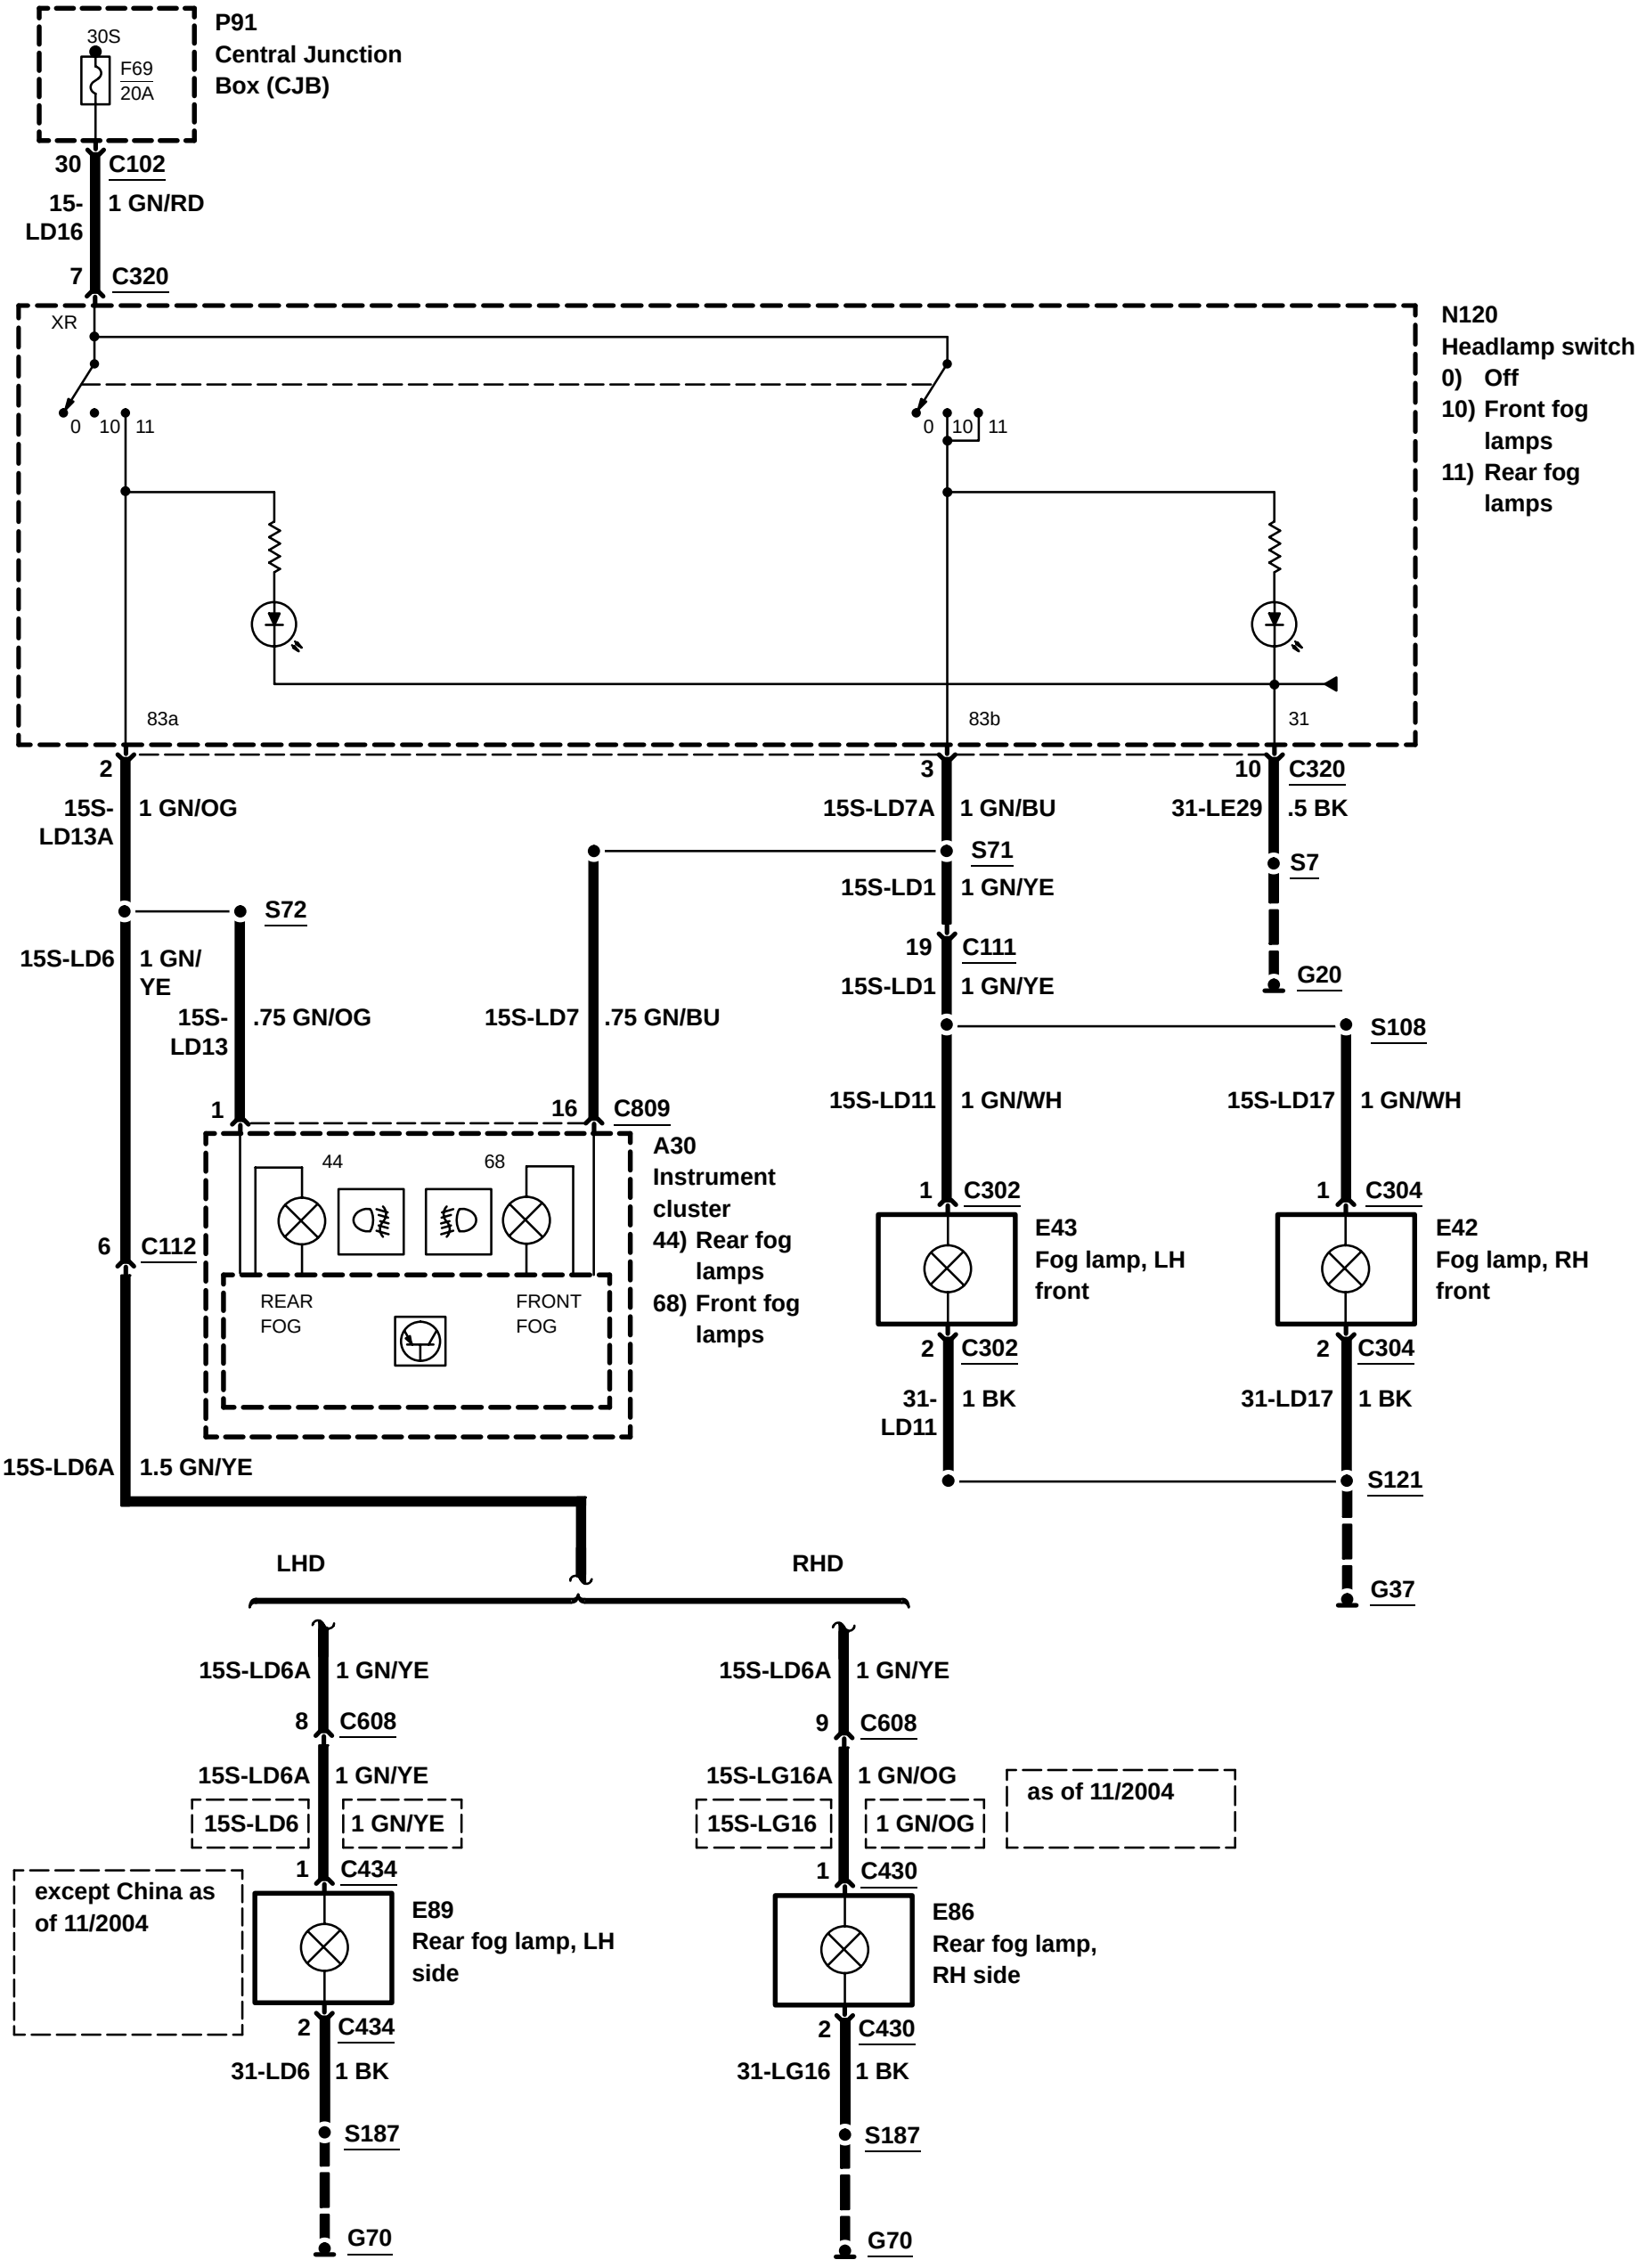


Exterior Lighting – Reversing lamps, 4–speed automatic transmission (4F27E), 4–door model

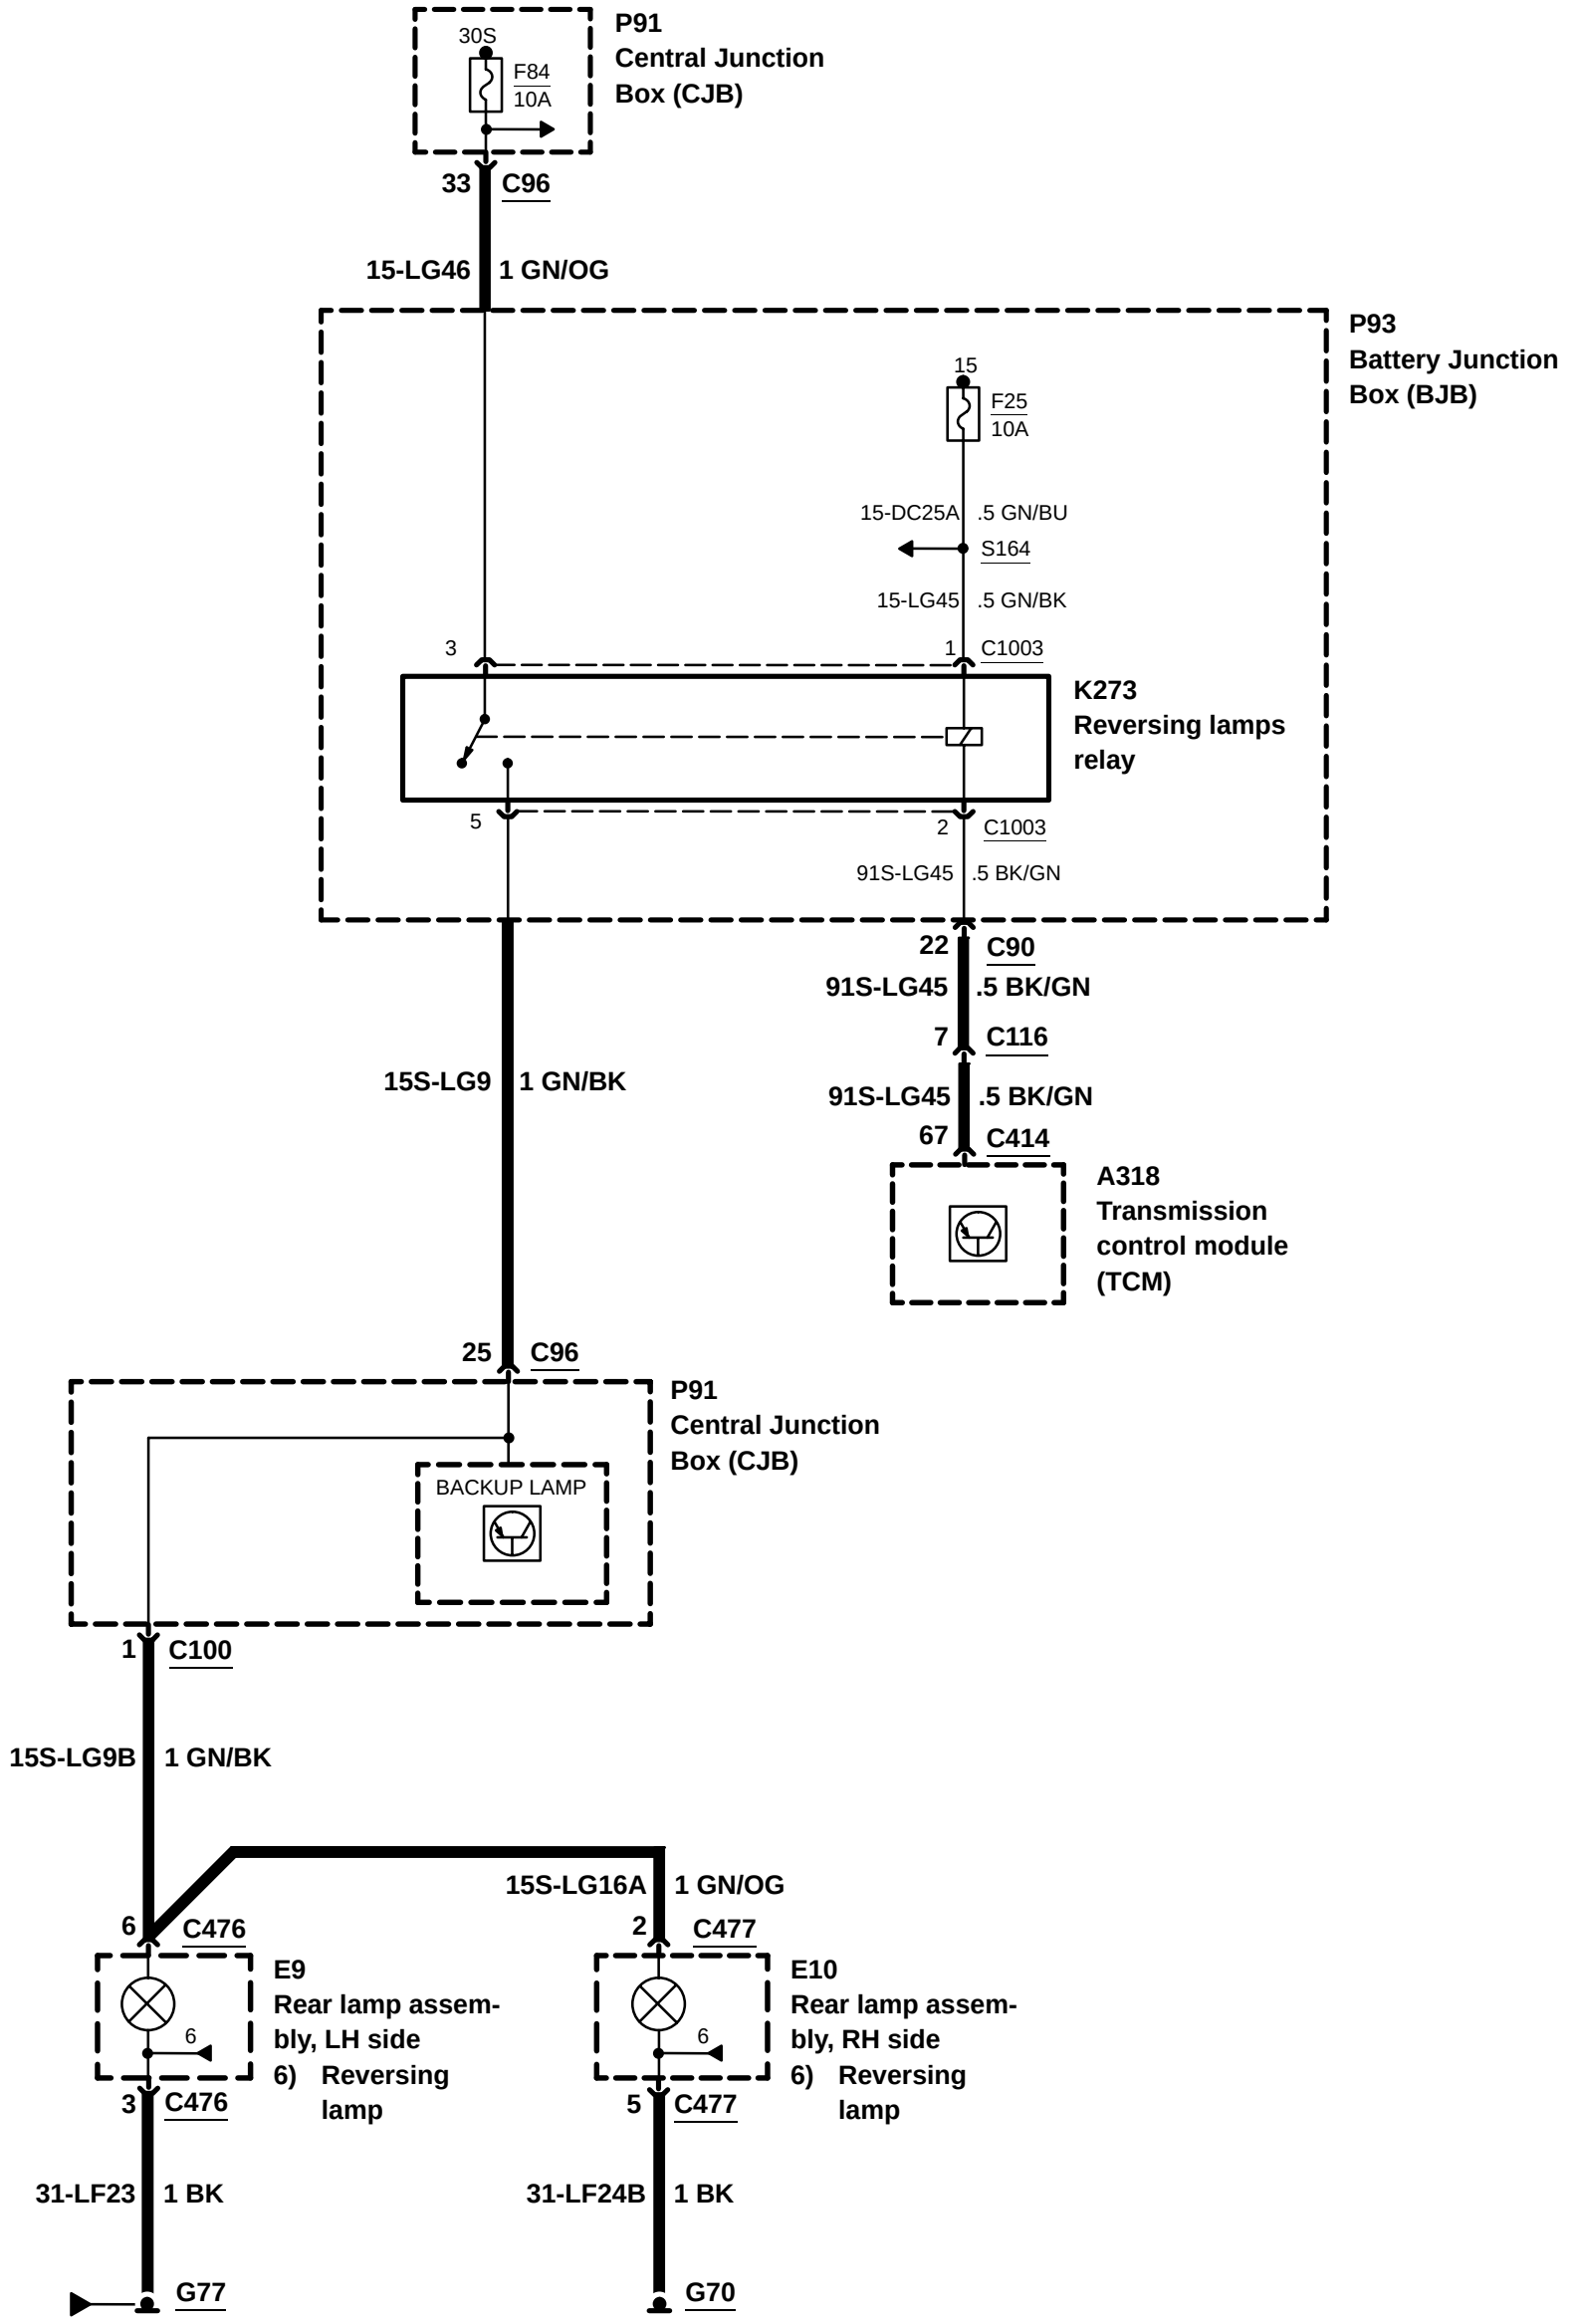


Exterior Lighting – Reversing lamps, 4–speed automatic transmission (4F27E), 5–door model

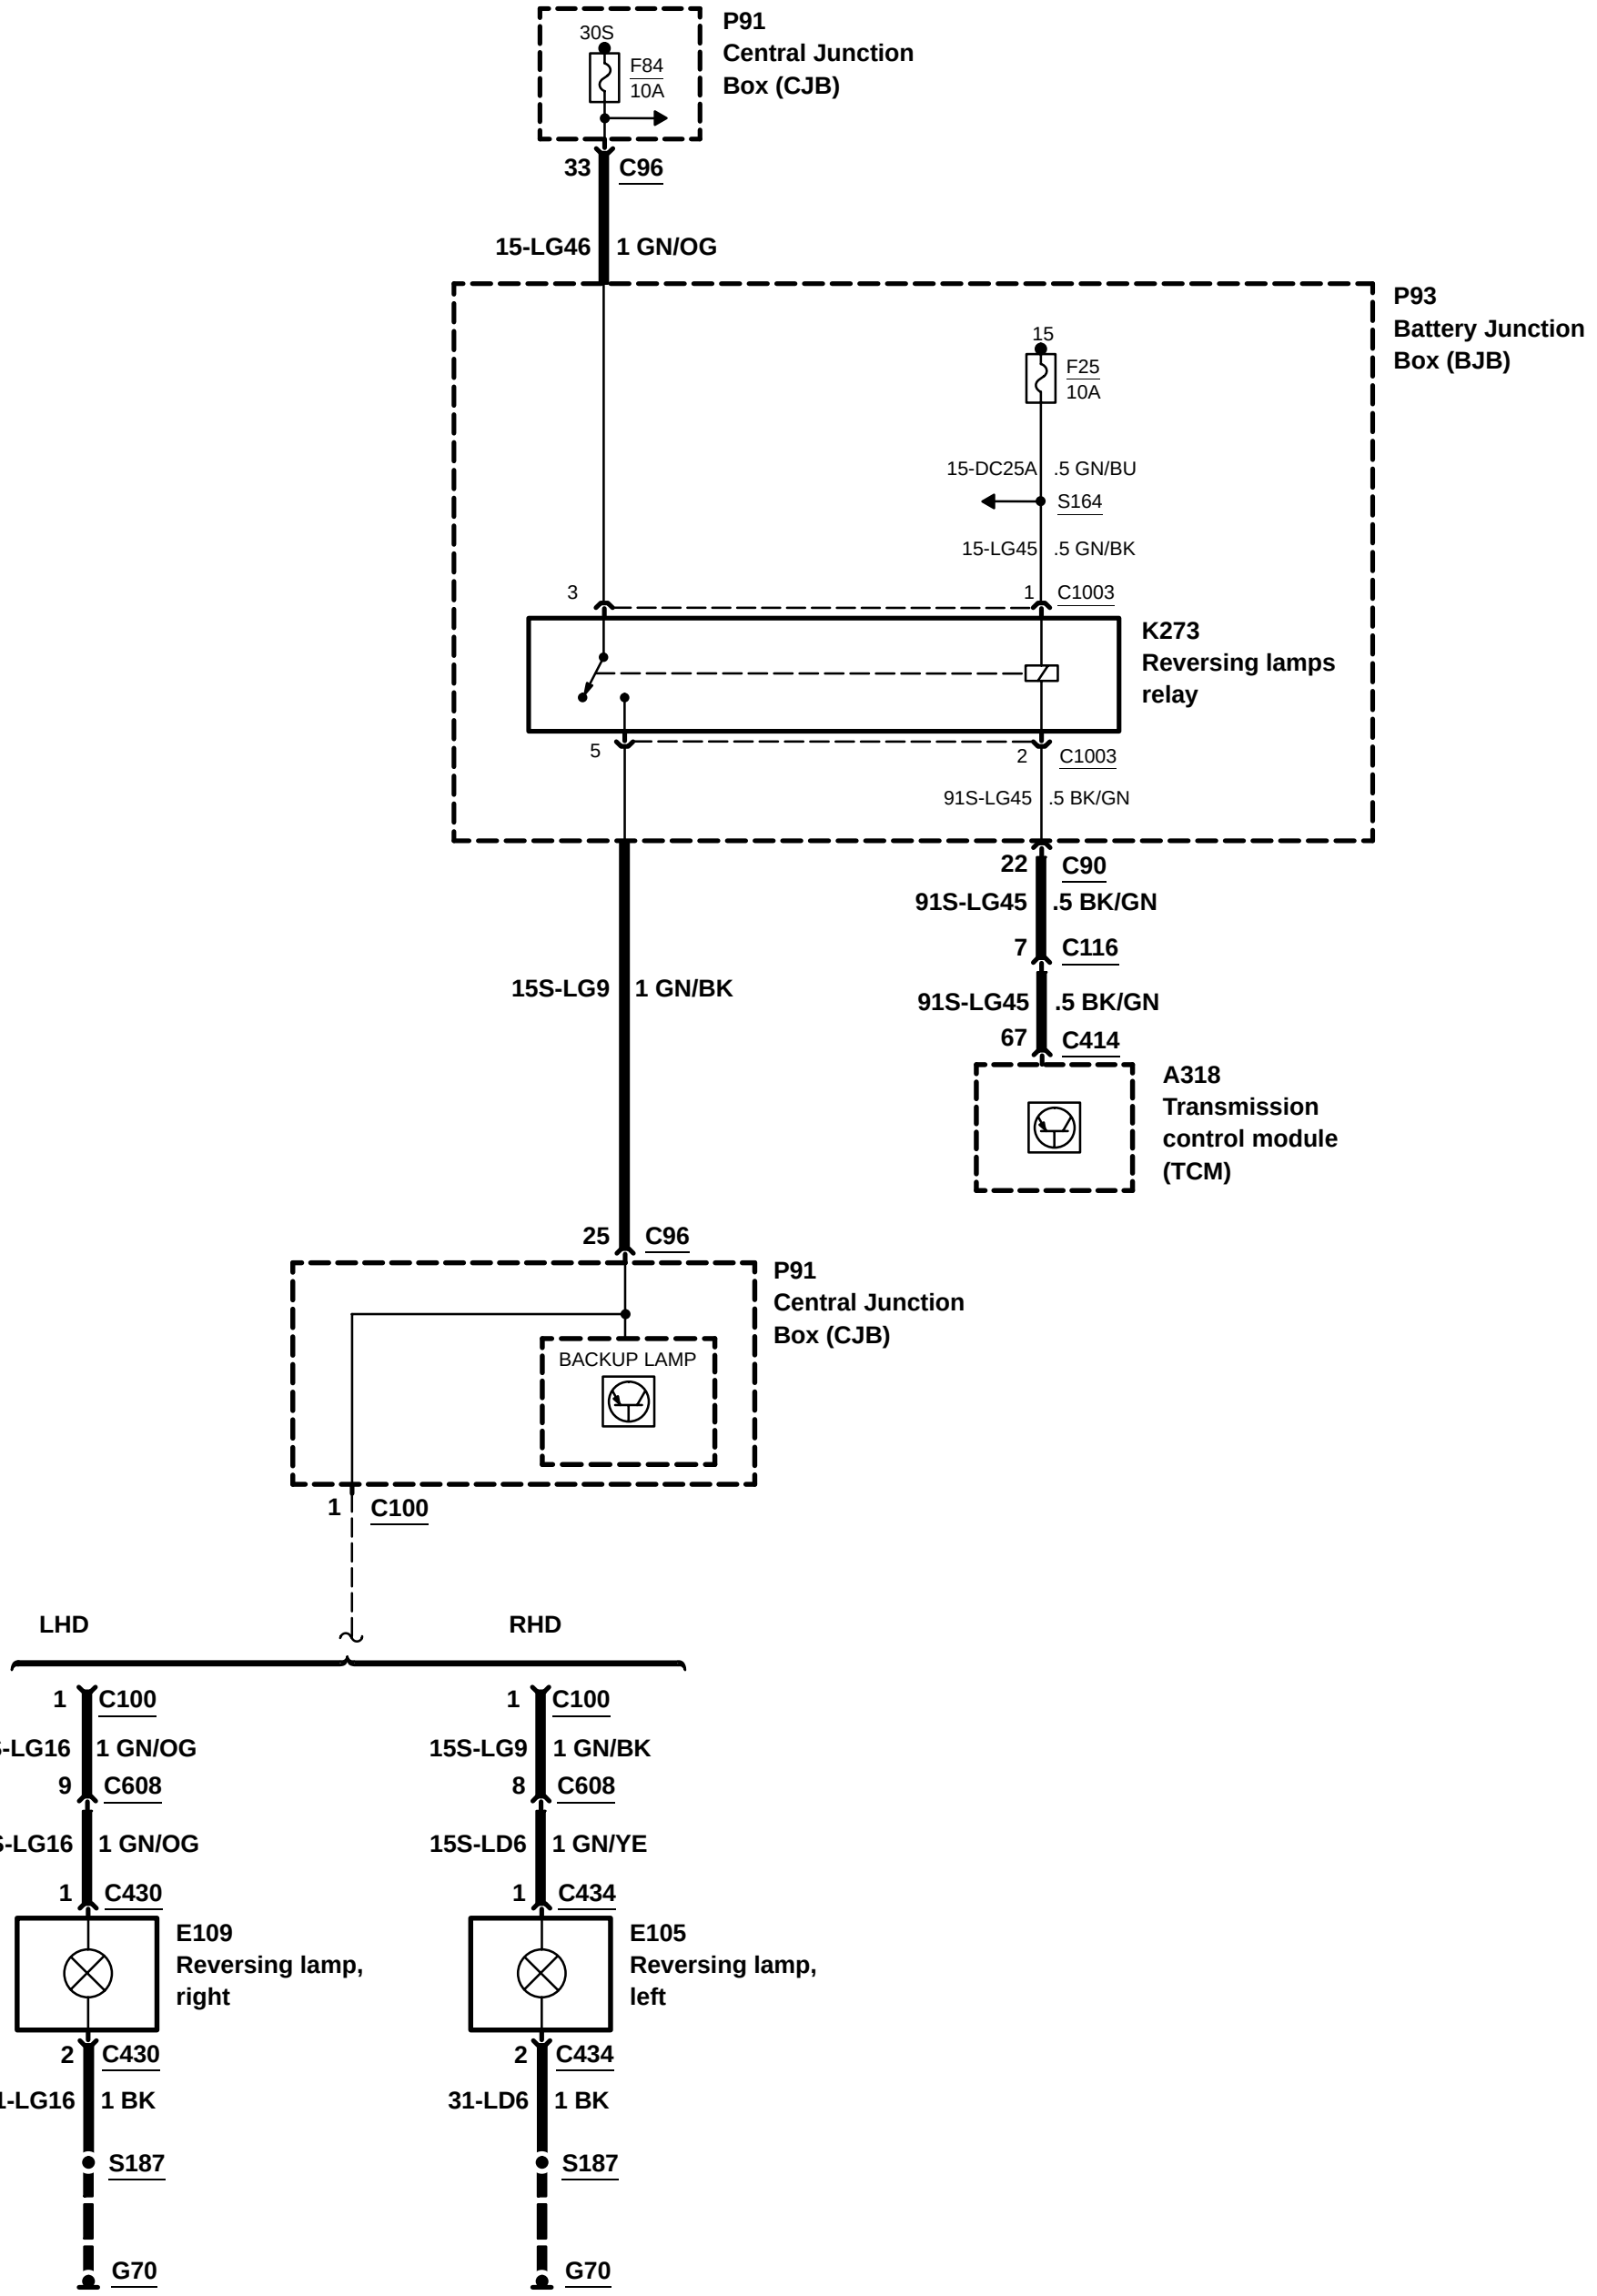


Exterior Lighting – Reversing lamps, 4–speed automatic transmission (FN4A–EL), 4–door model

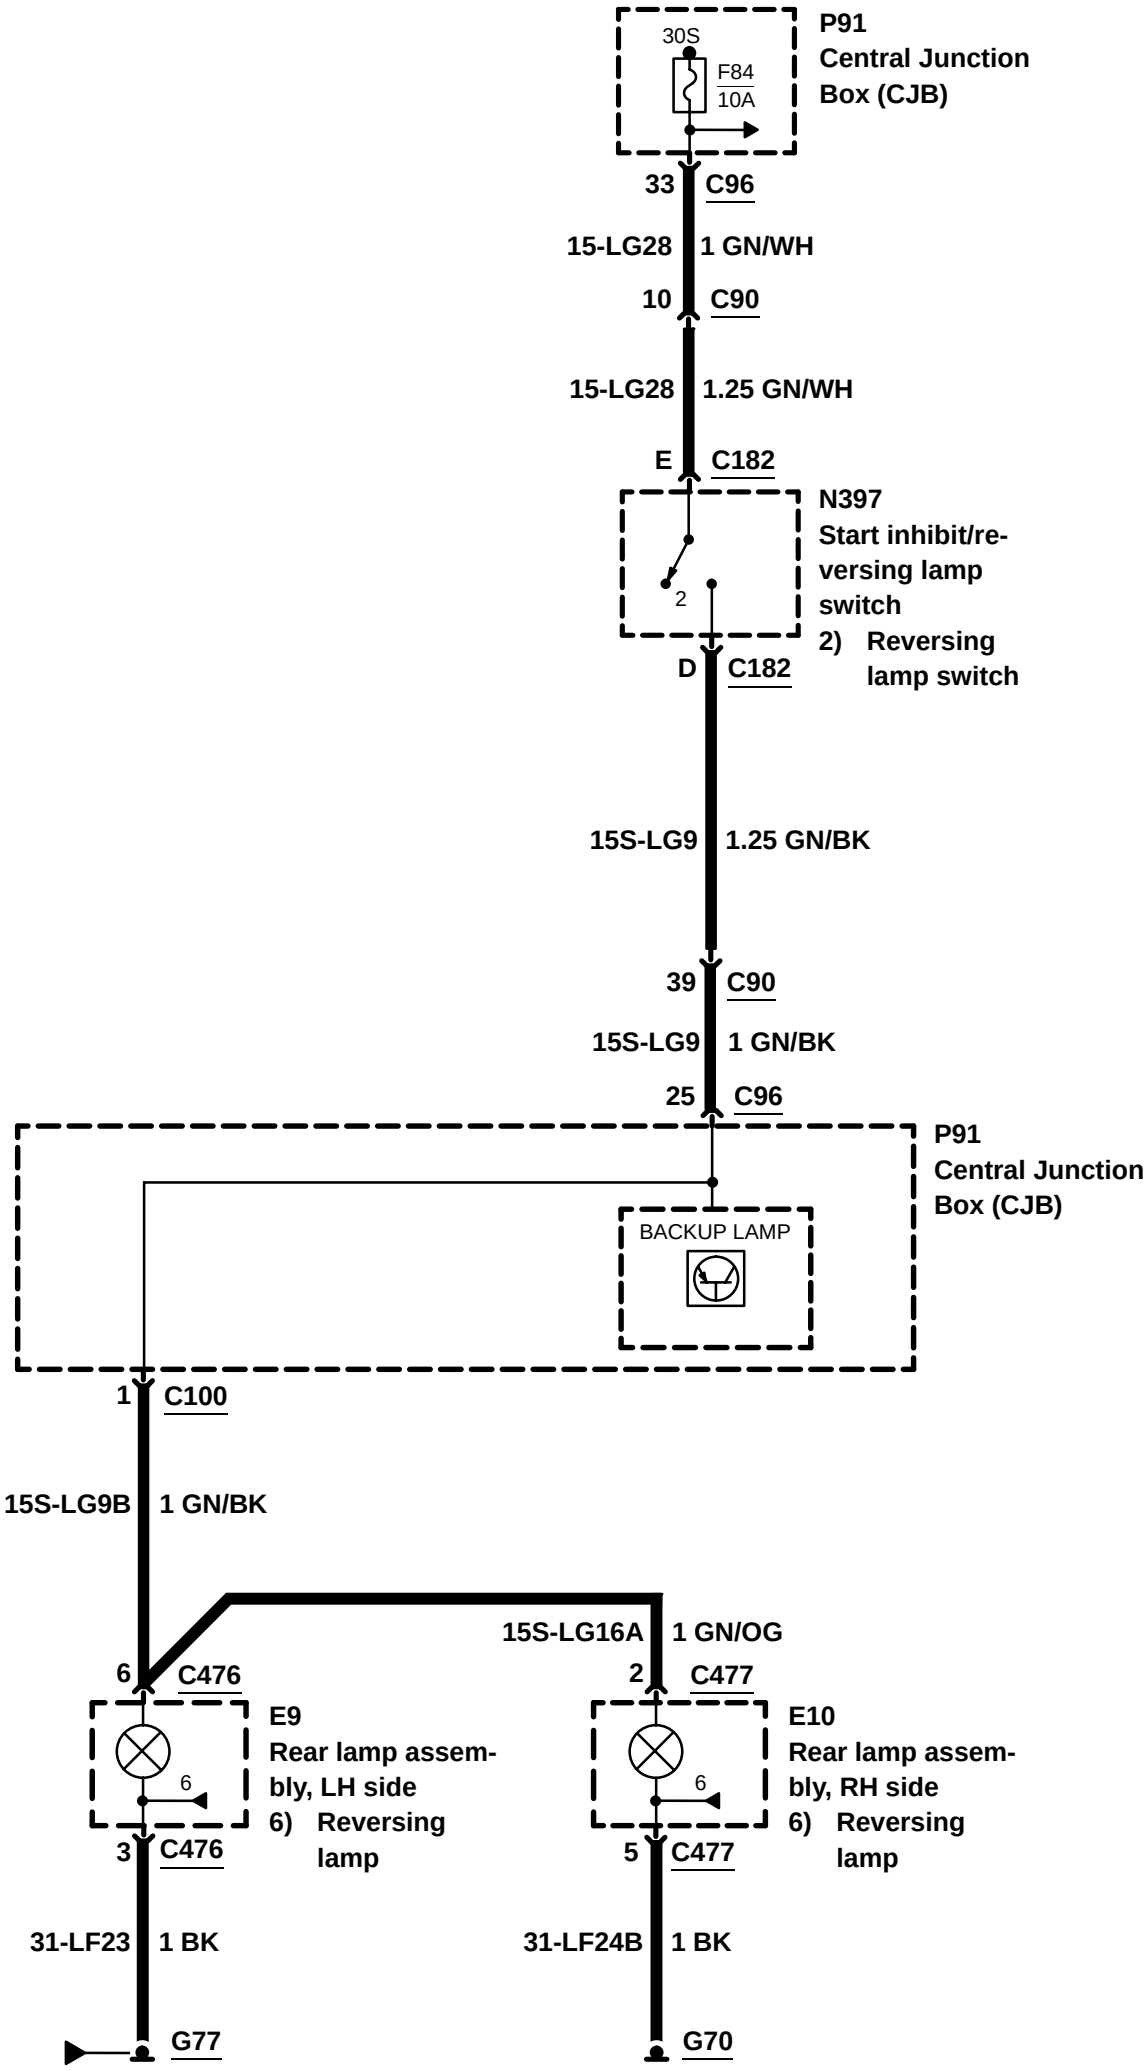


Exterior Lighting – Reversing lamps, 4–speed automatic transmission (FN4A–EL), 5–door model

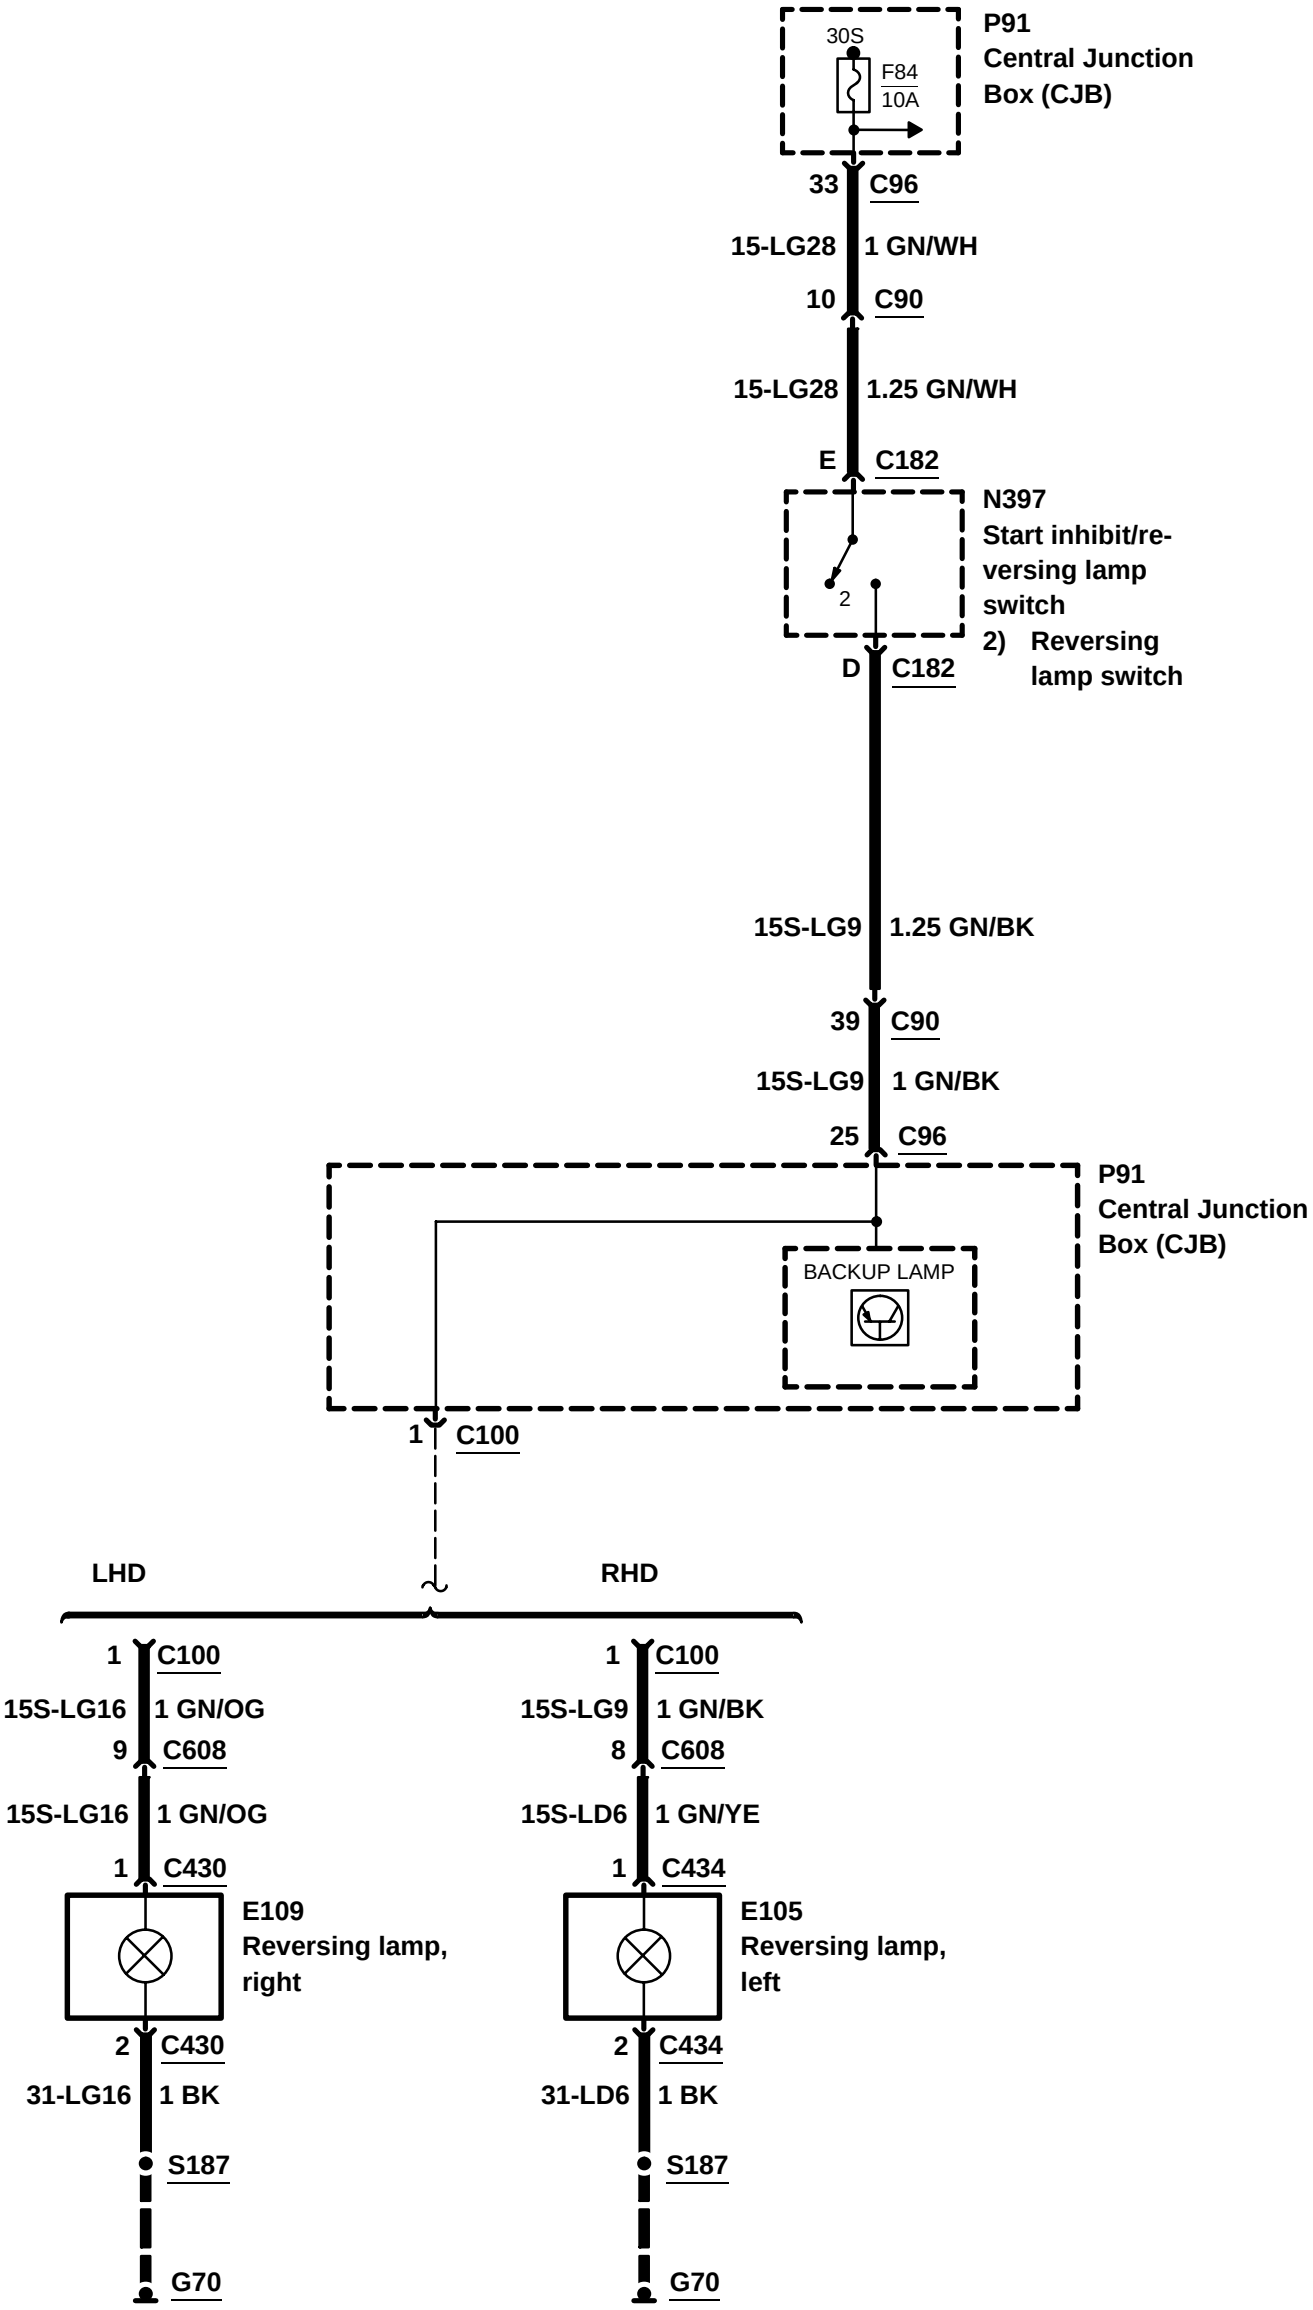


Exterior Lighting – Reversing lamps, manual transmission, 4–door model

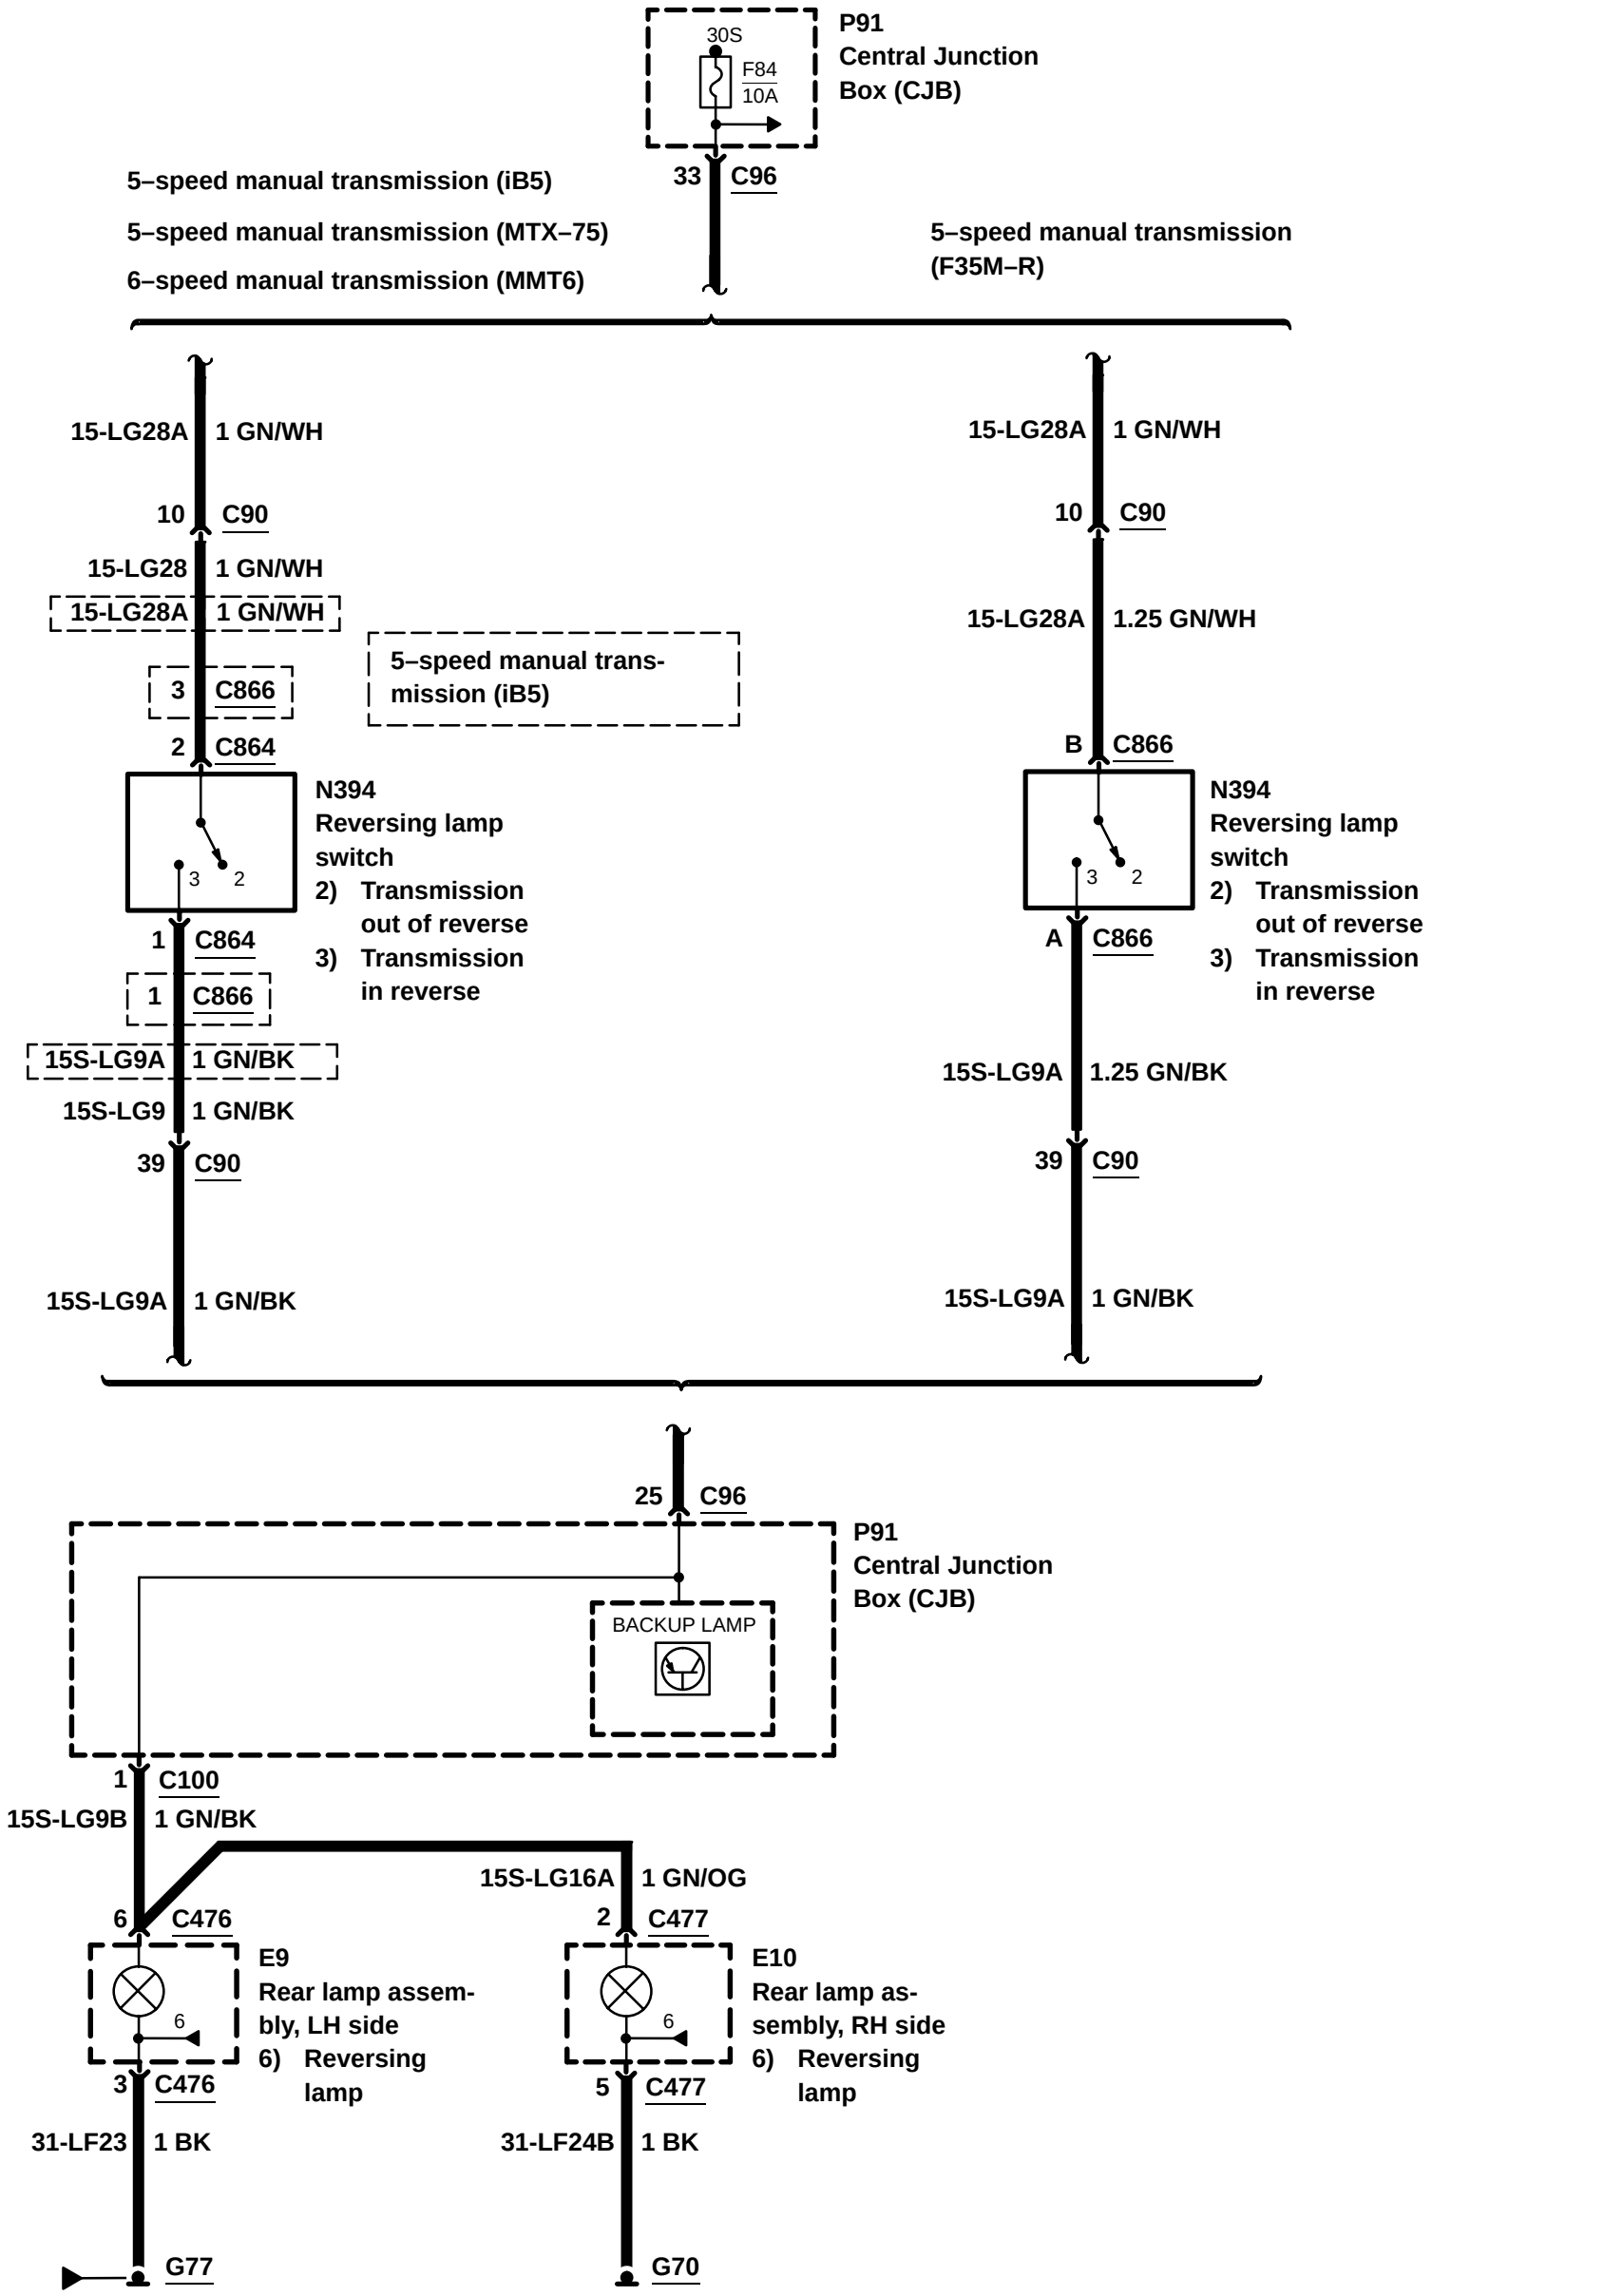


Exterior Lighting – Reversing lamps, manual transmission, 5–door model

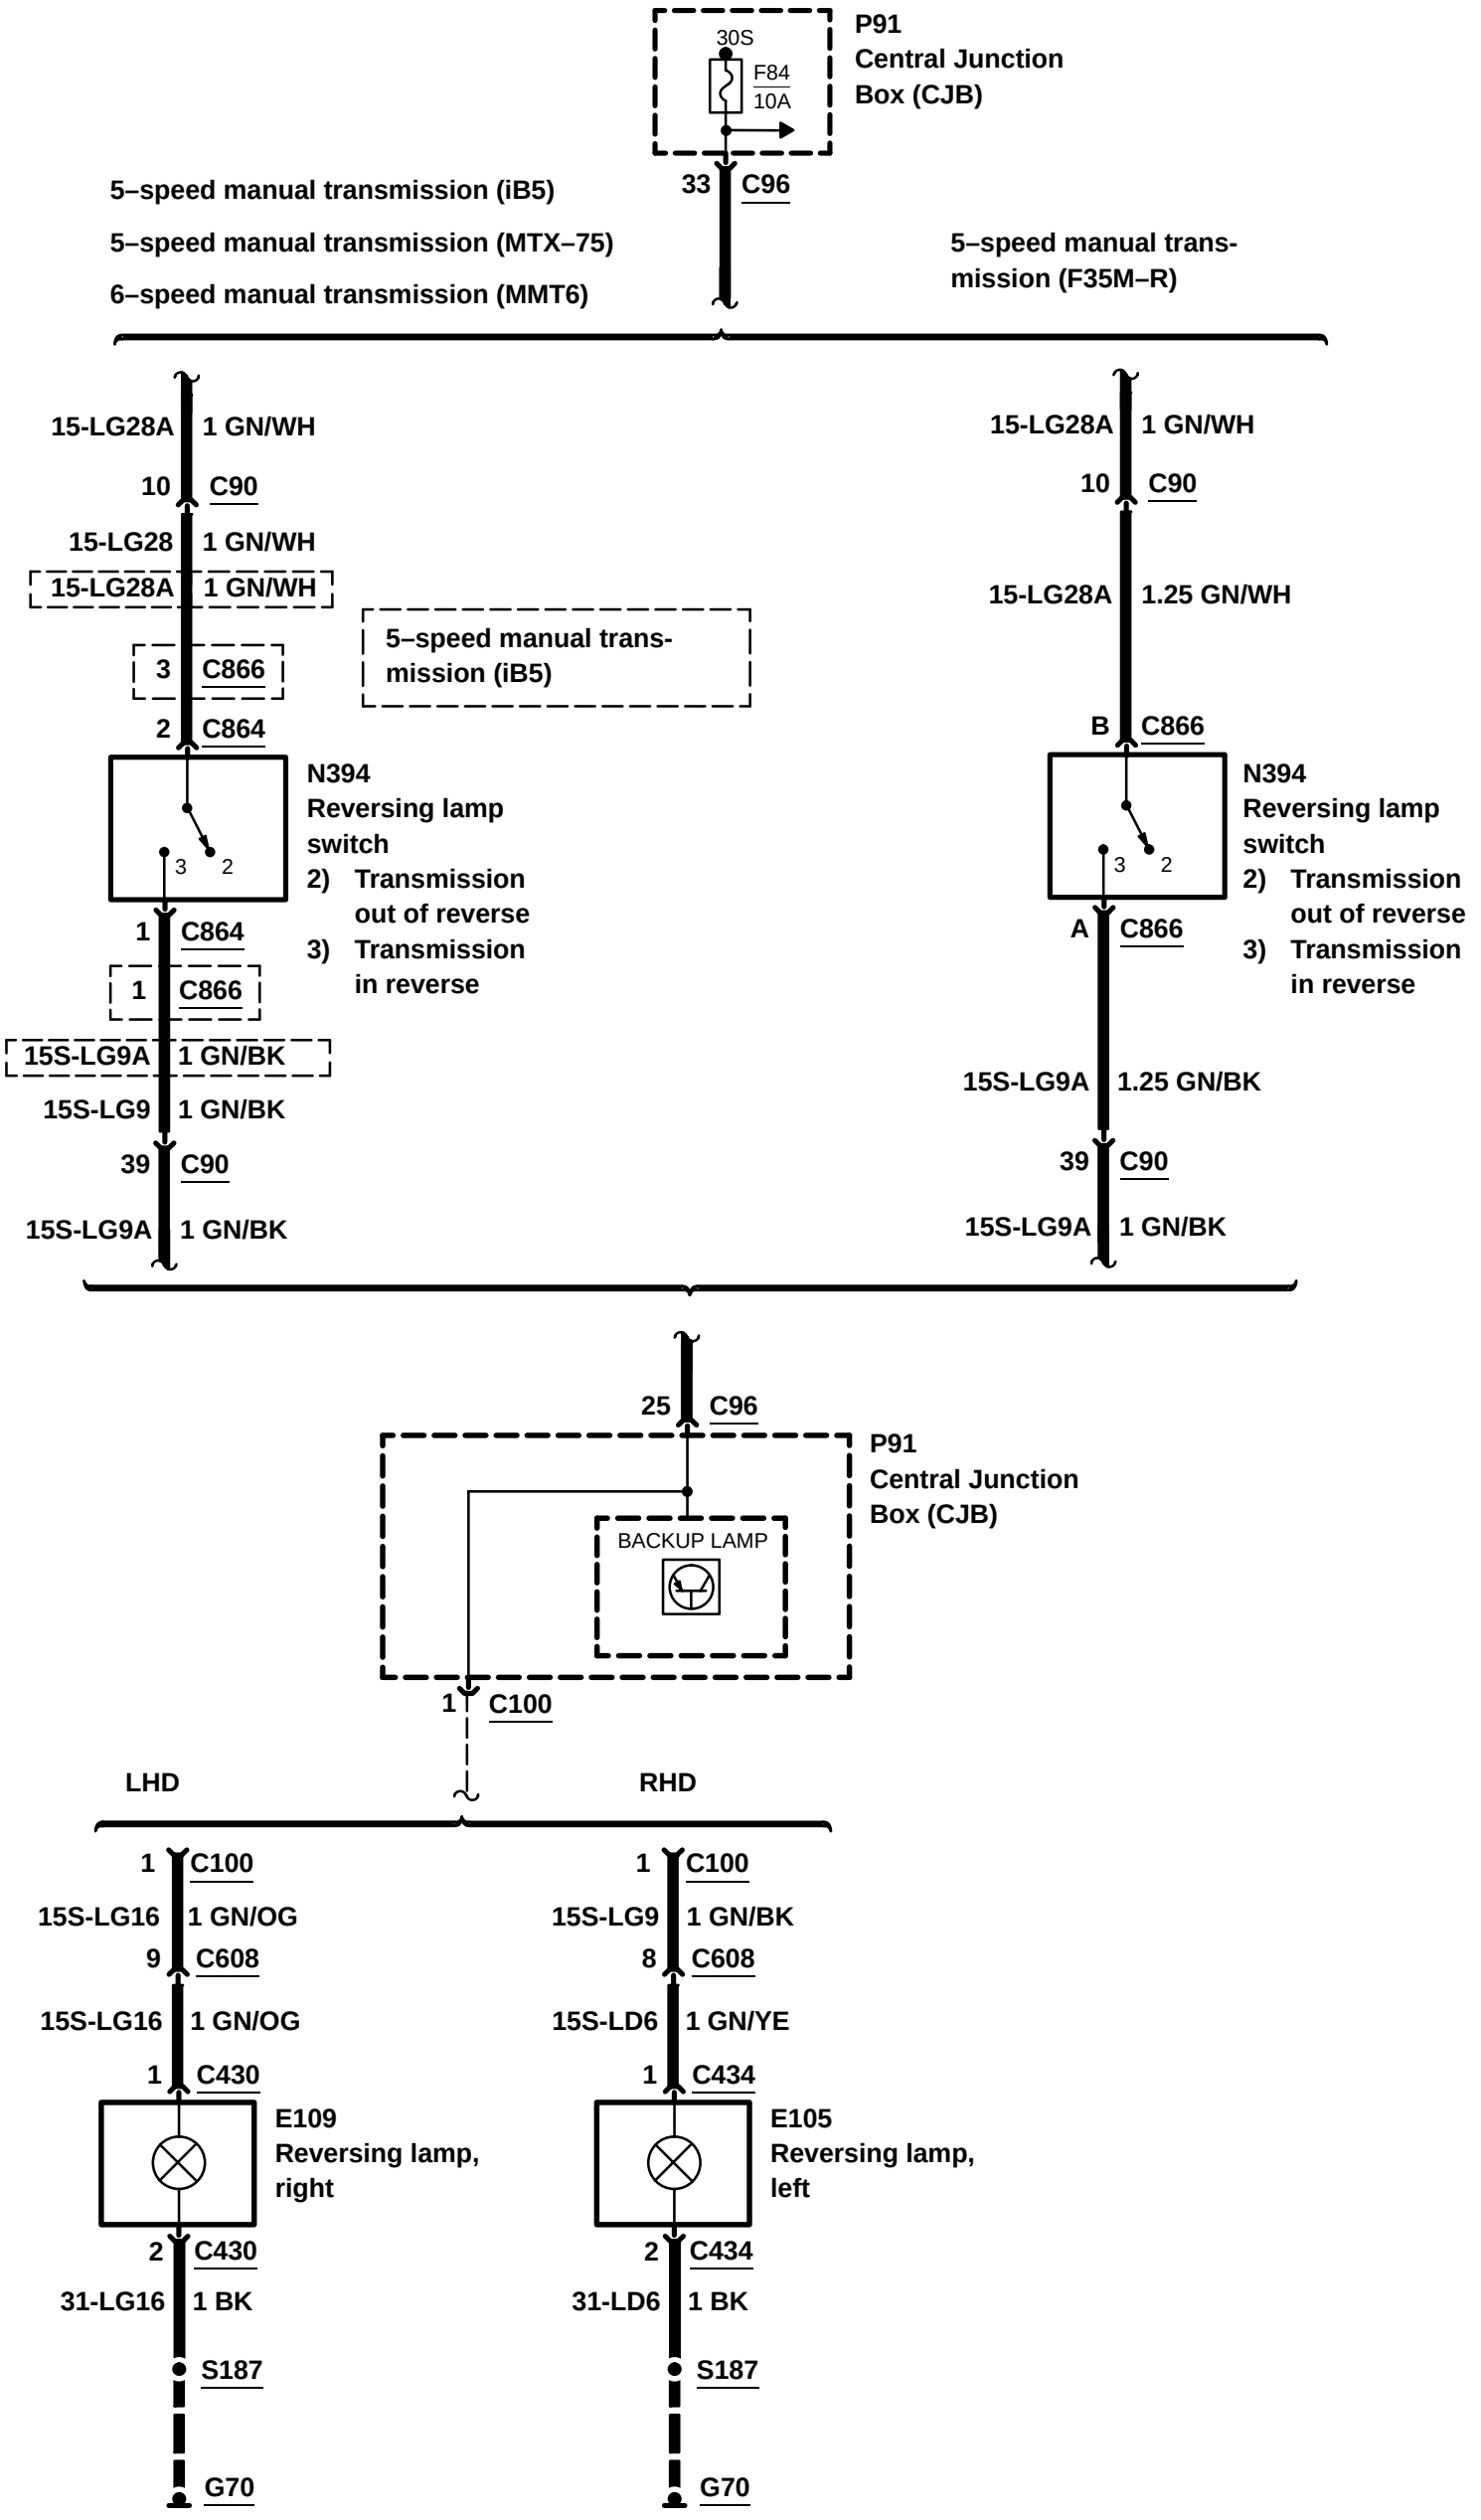


Interior Lighting

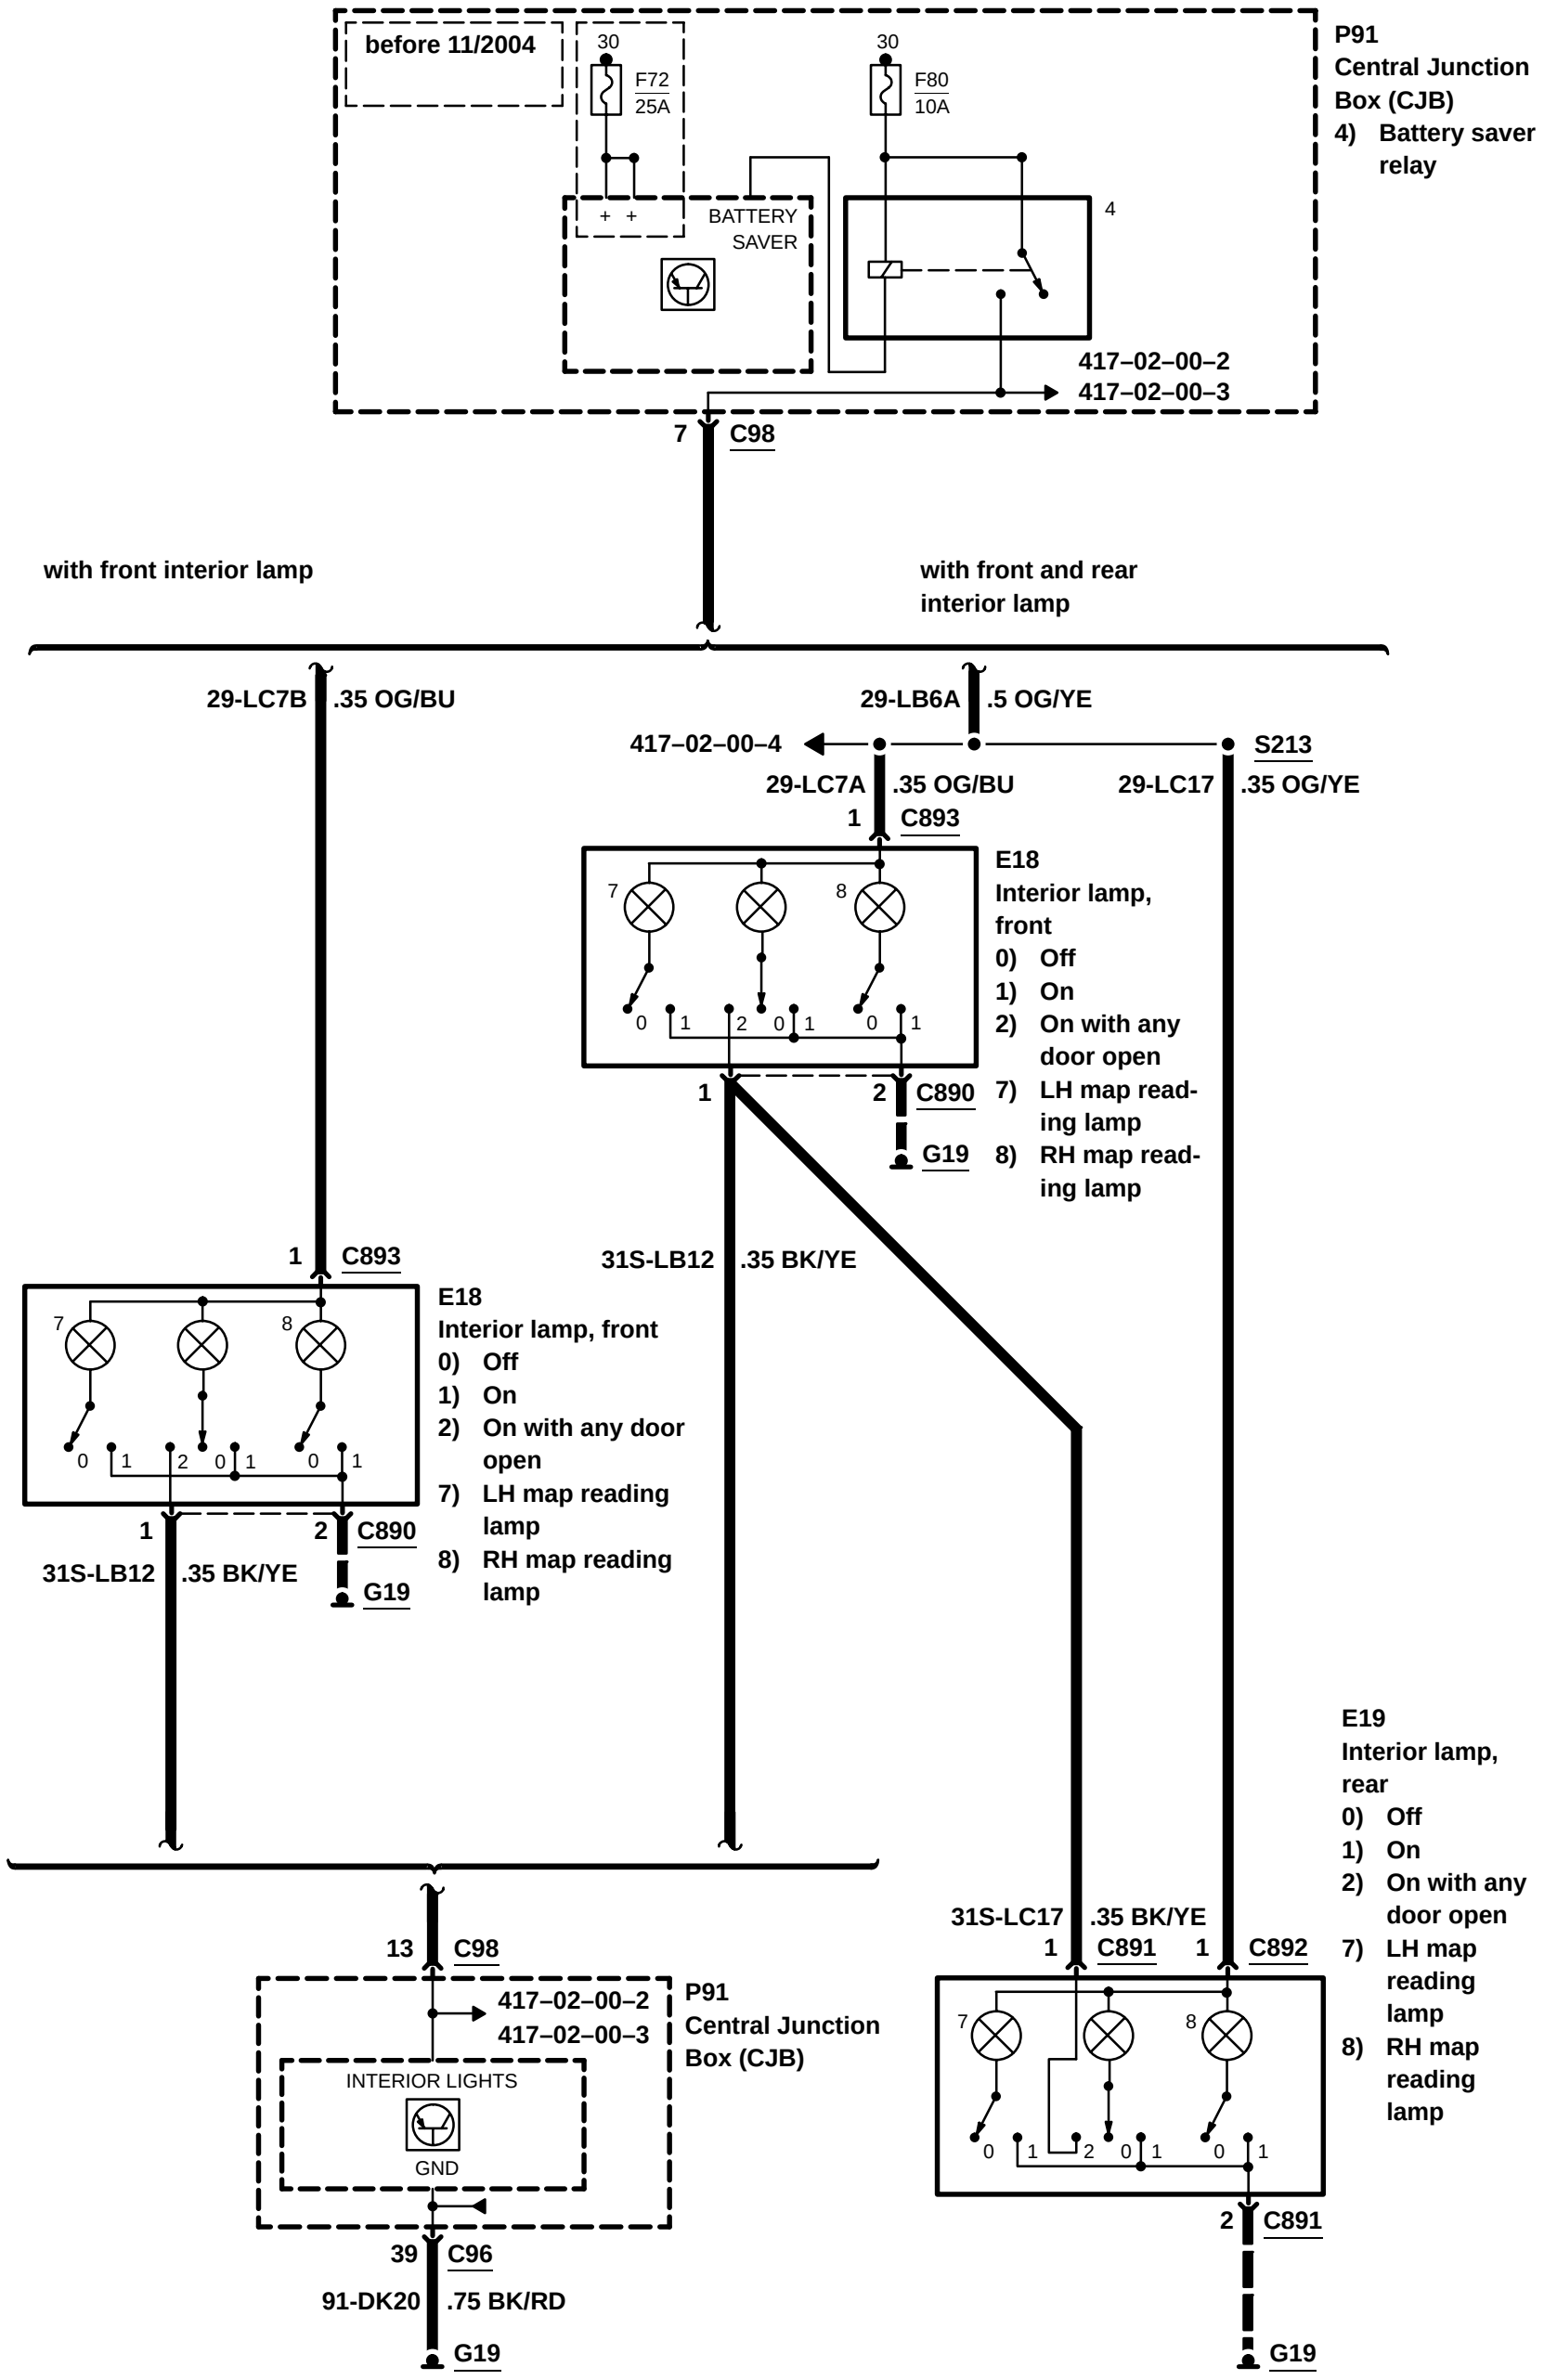

Interior Lighting

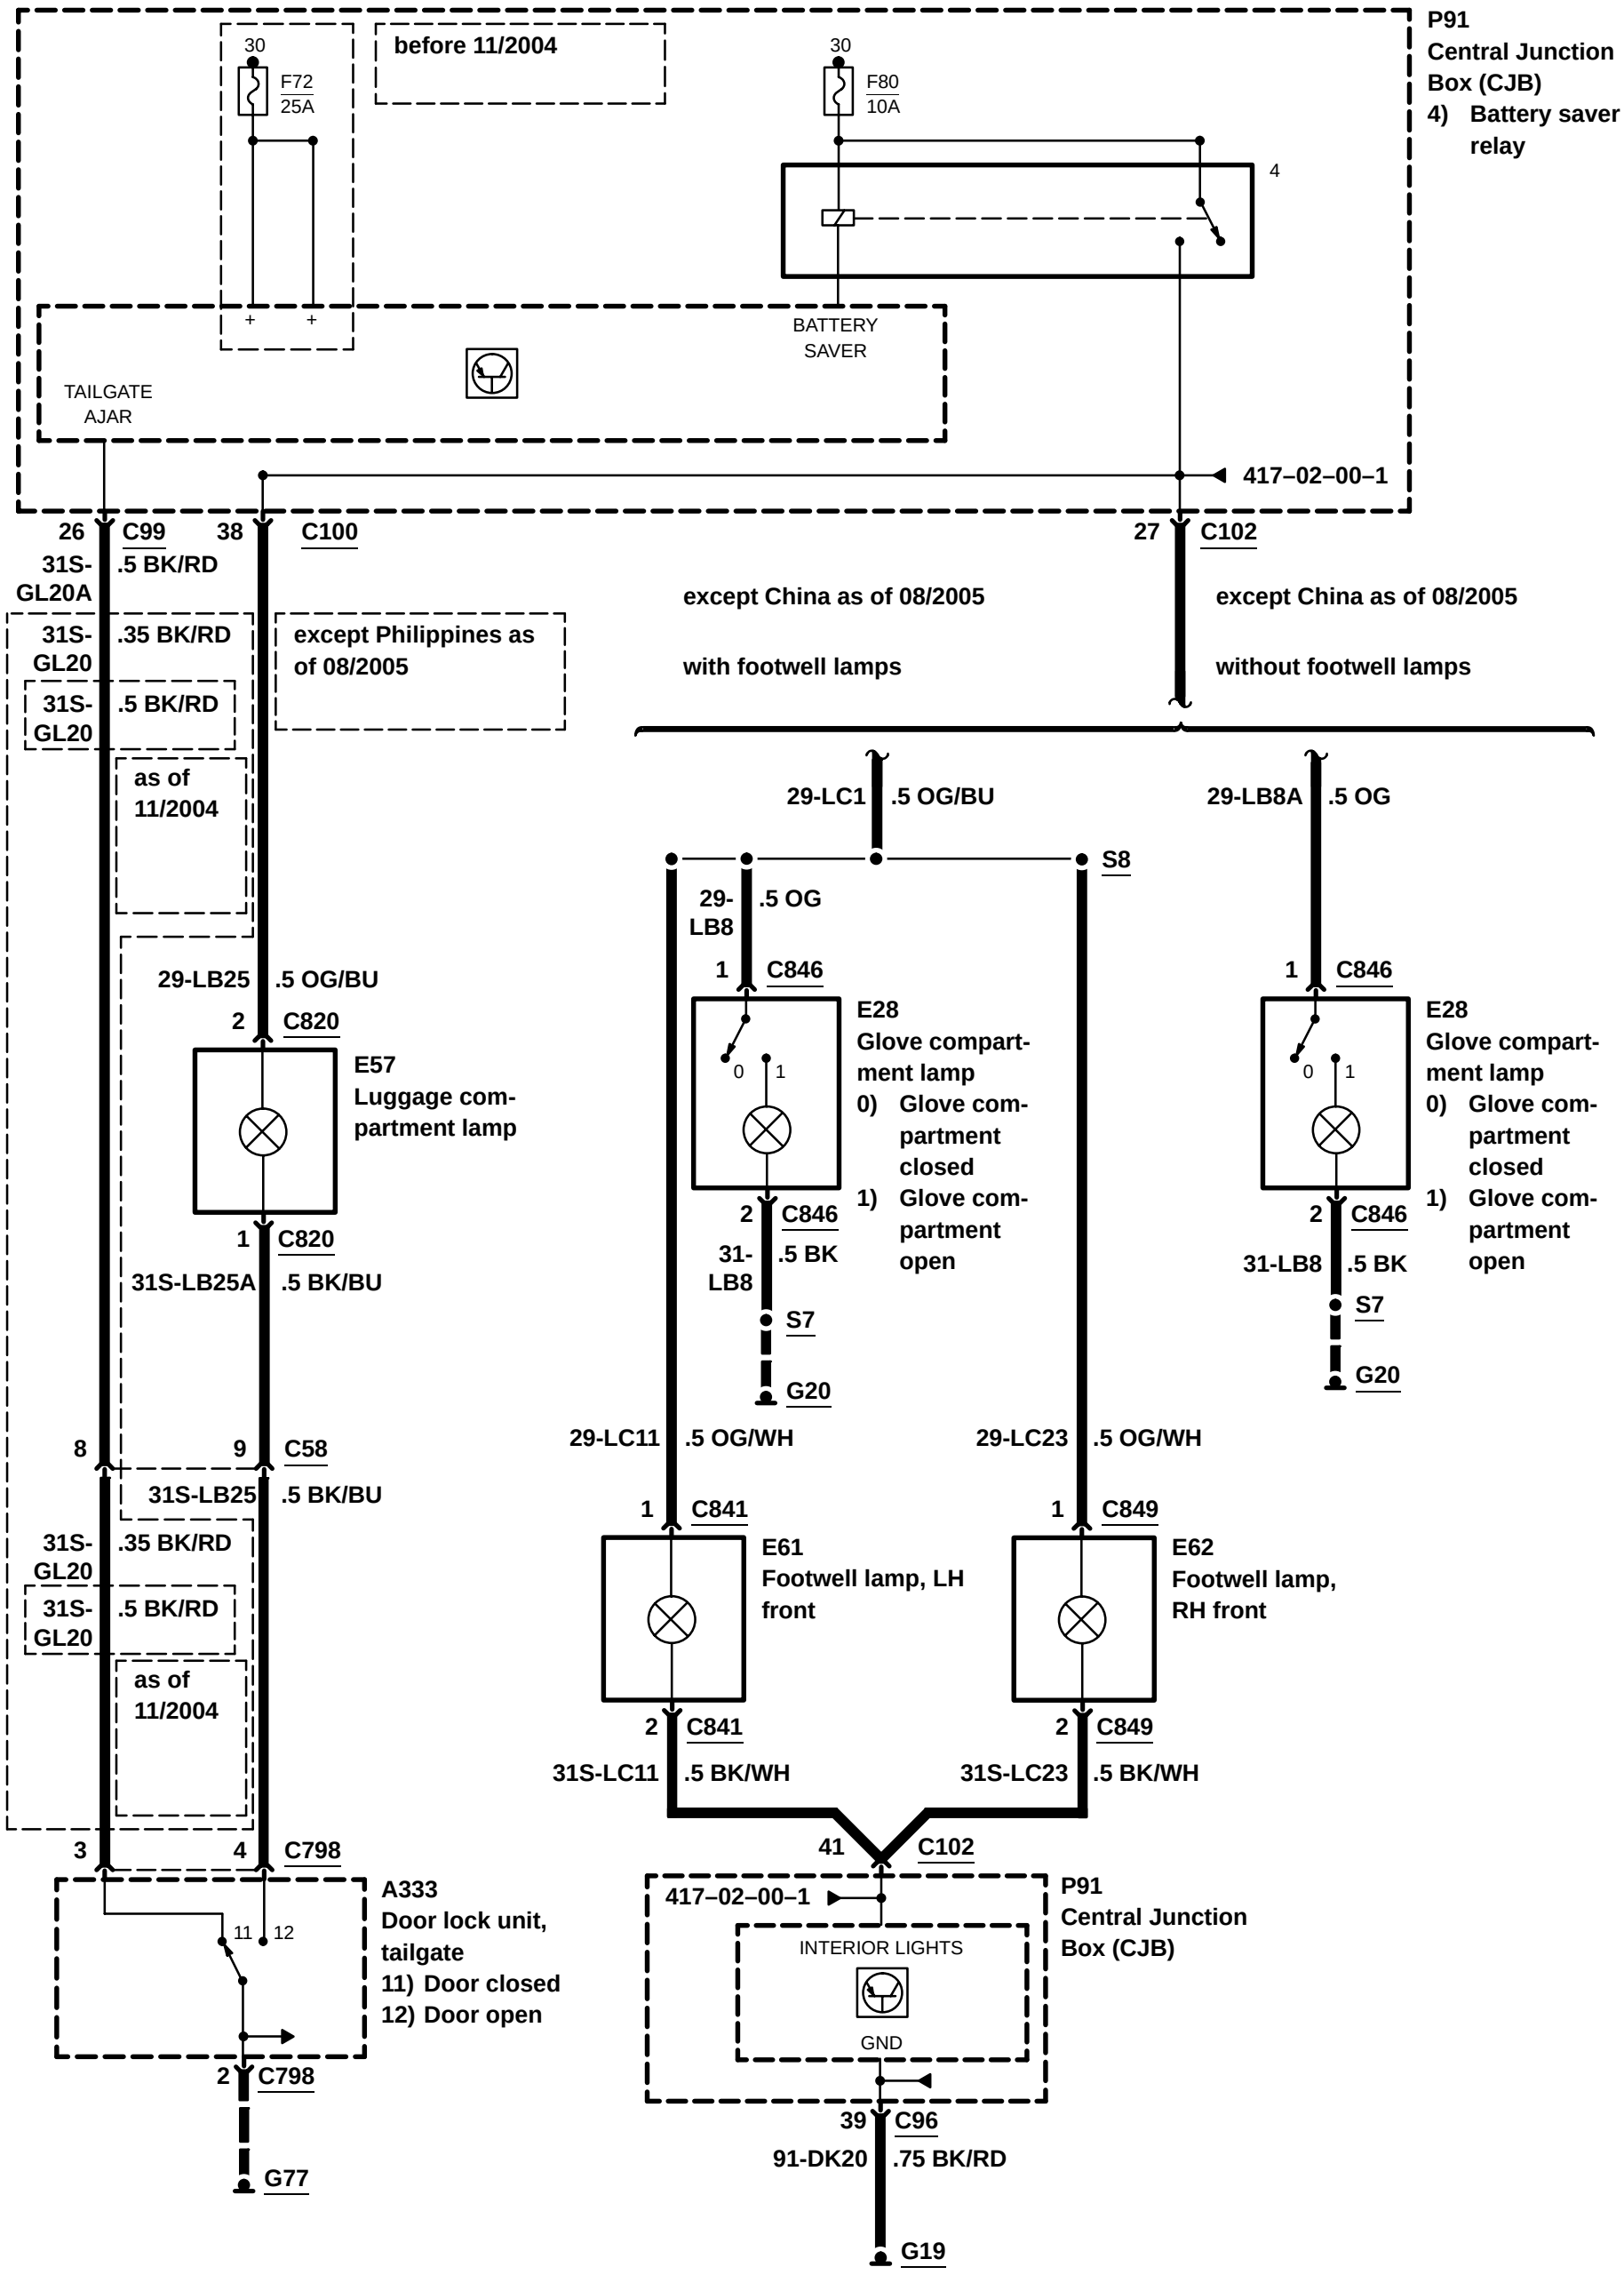


Interior Lighting – China as of 08/2005

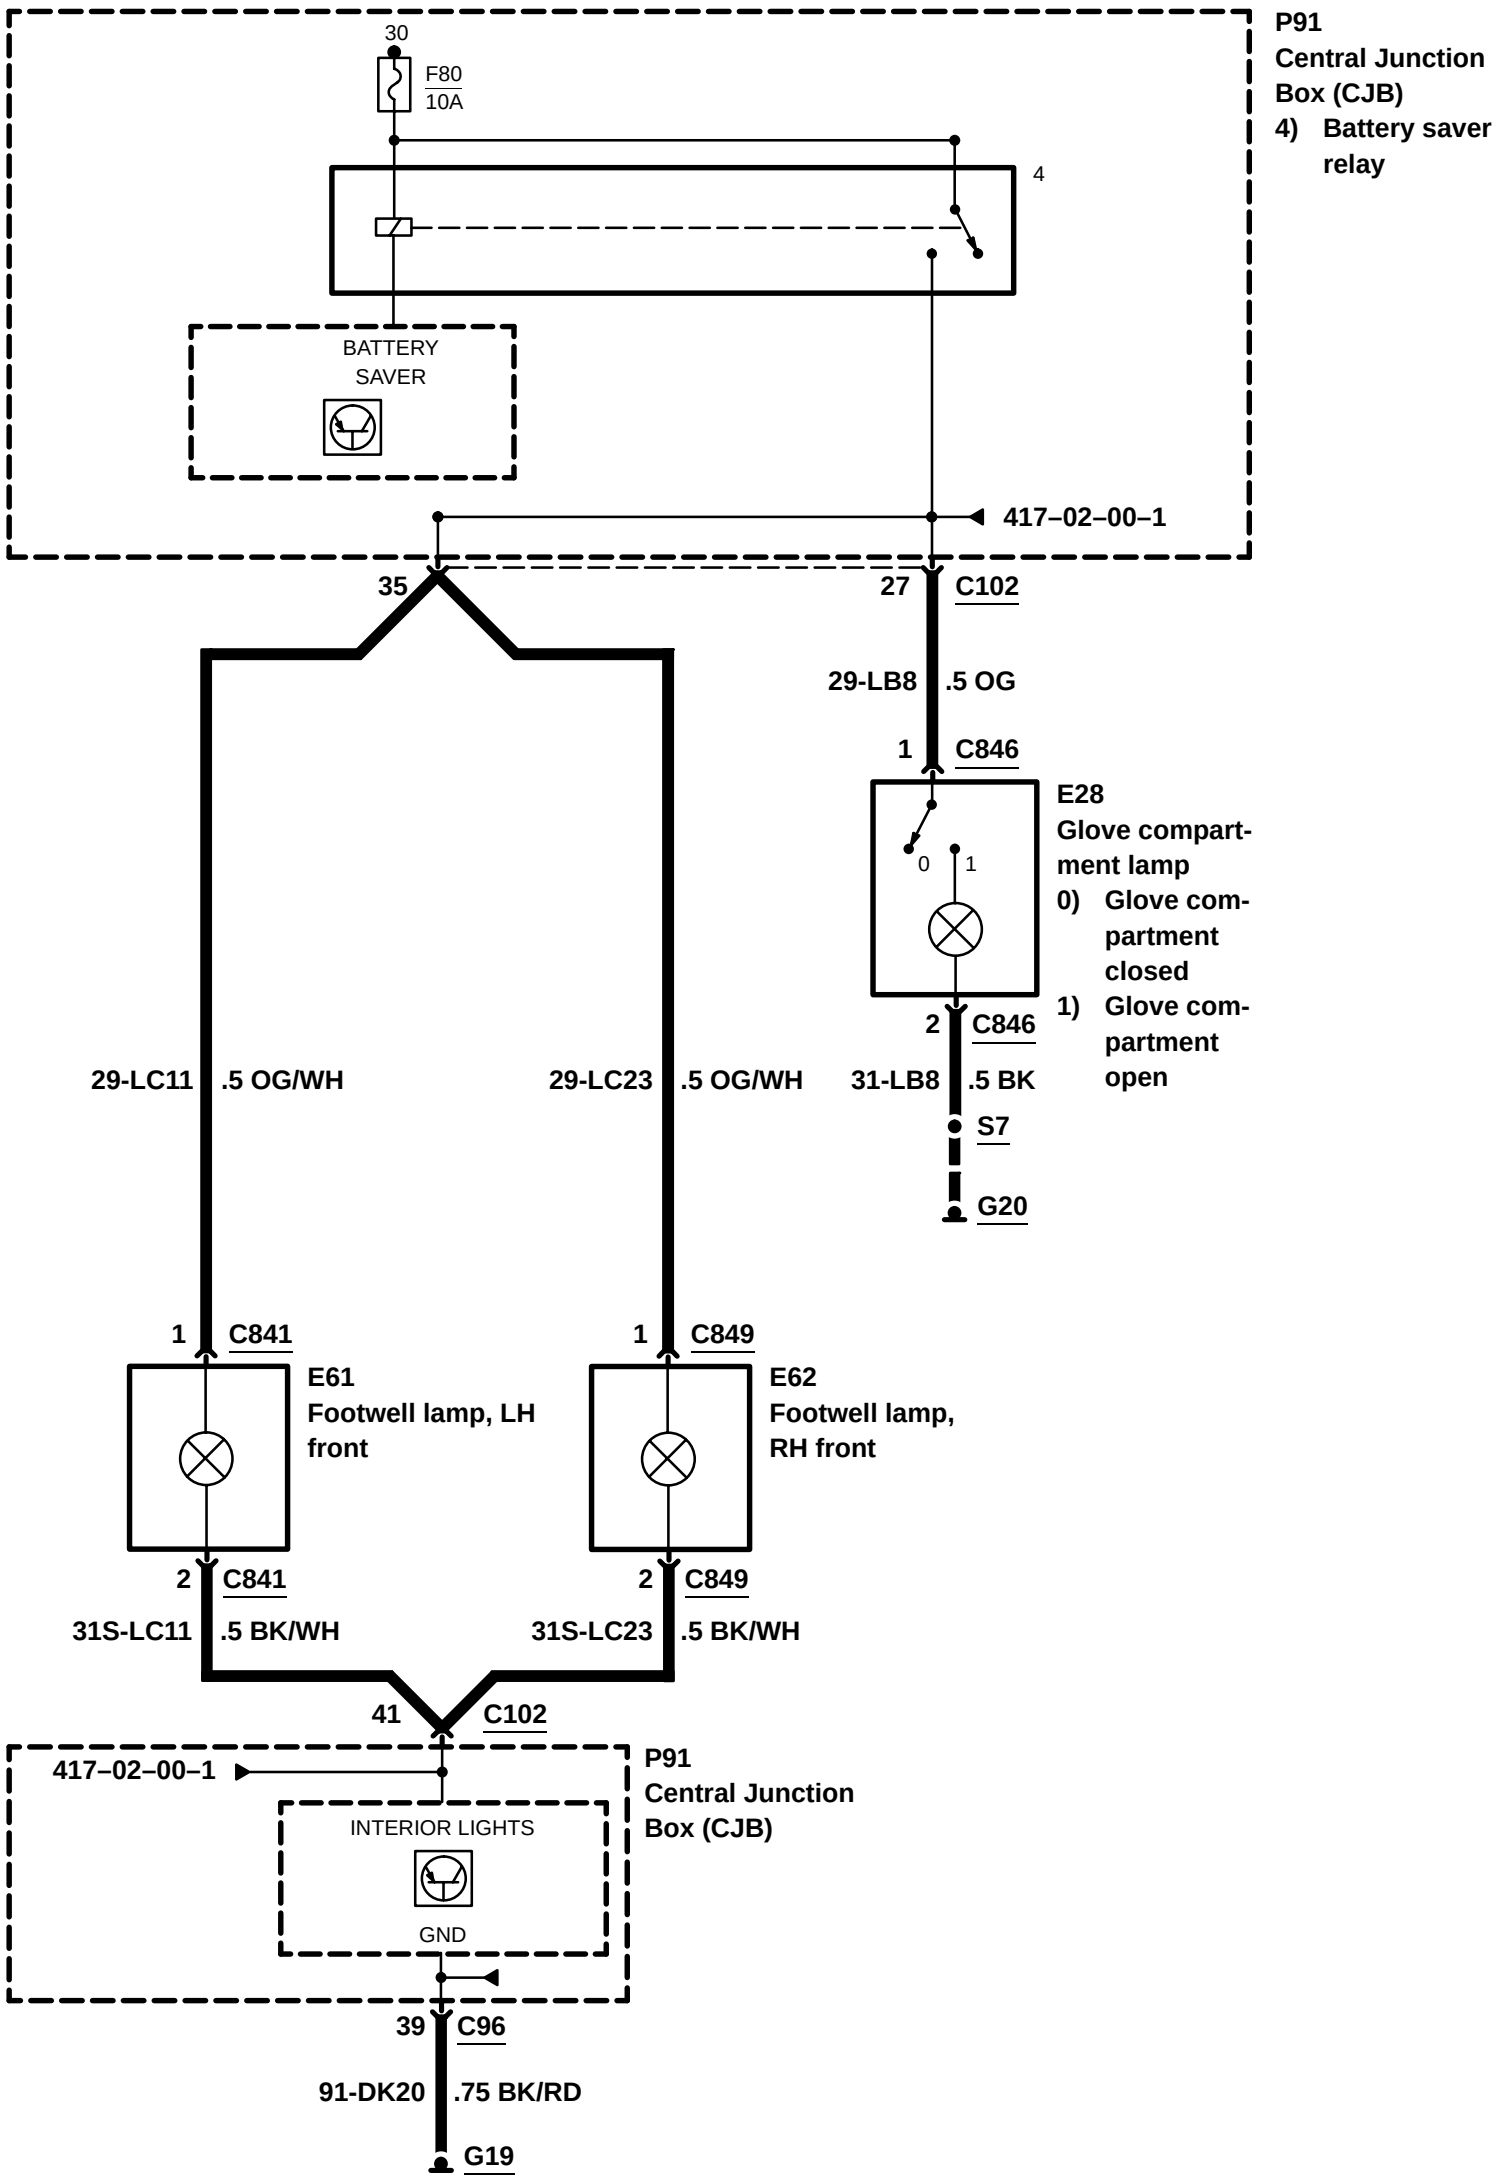


P91
Central Junction Box (CJB)
4) Battery saver relay


Interior Lighting

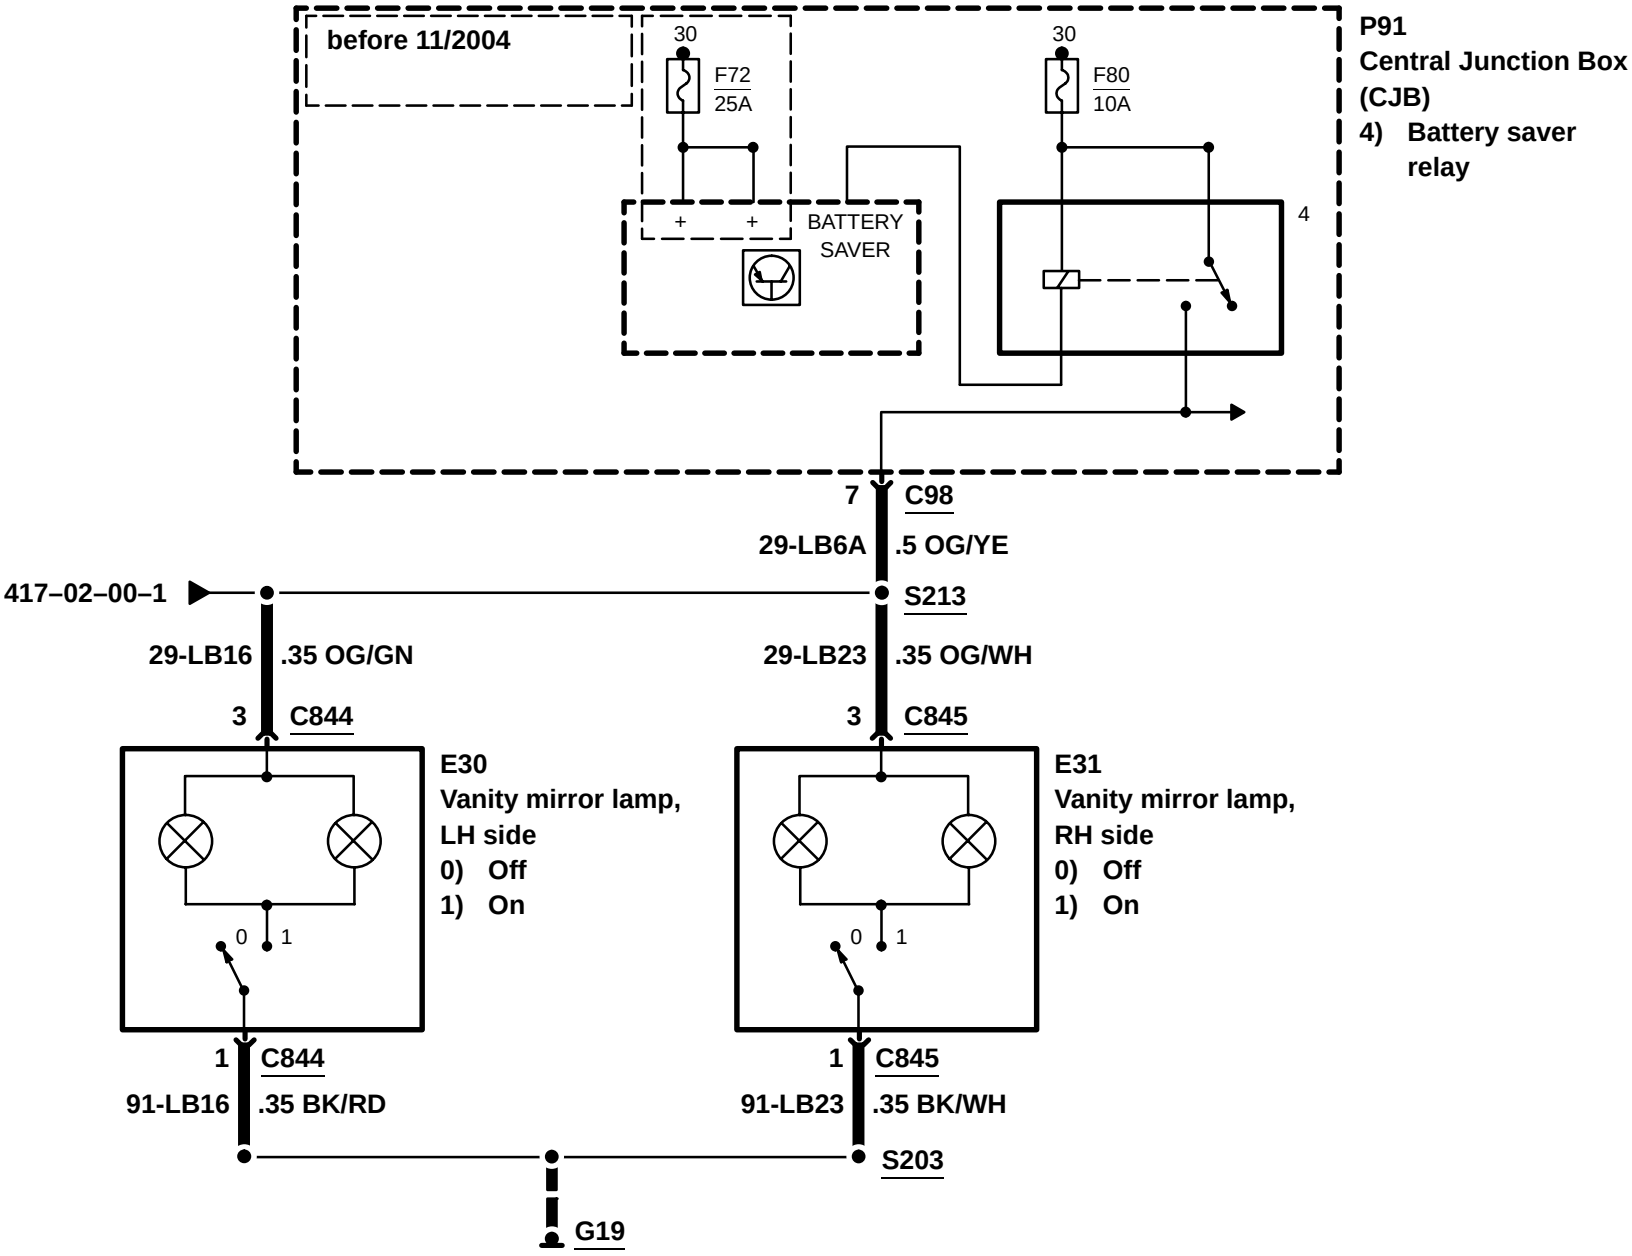


Interior Lighting – with front power windows

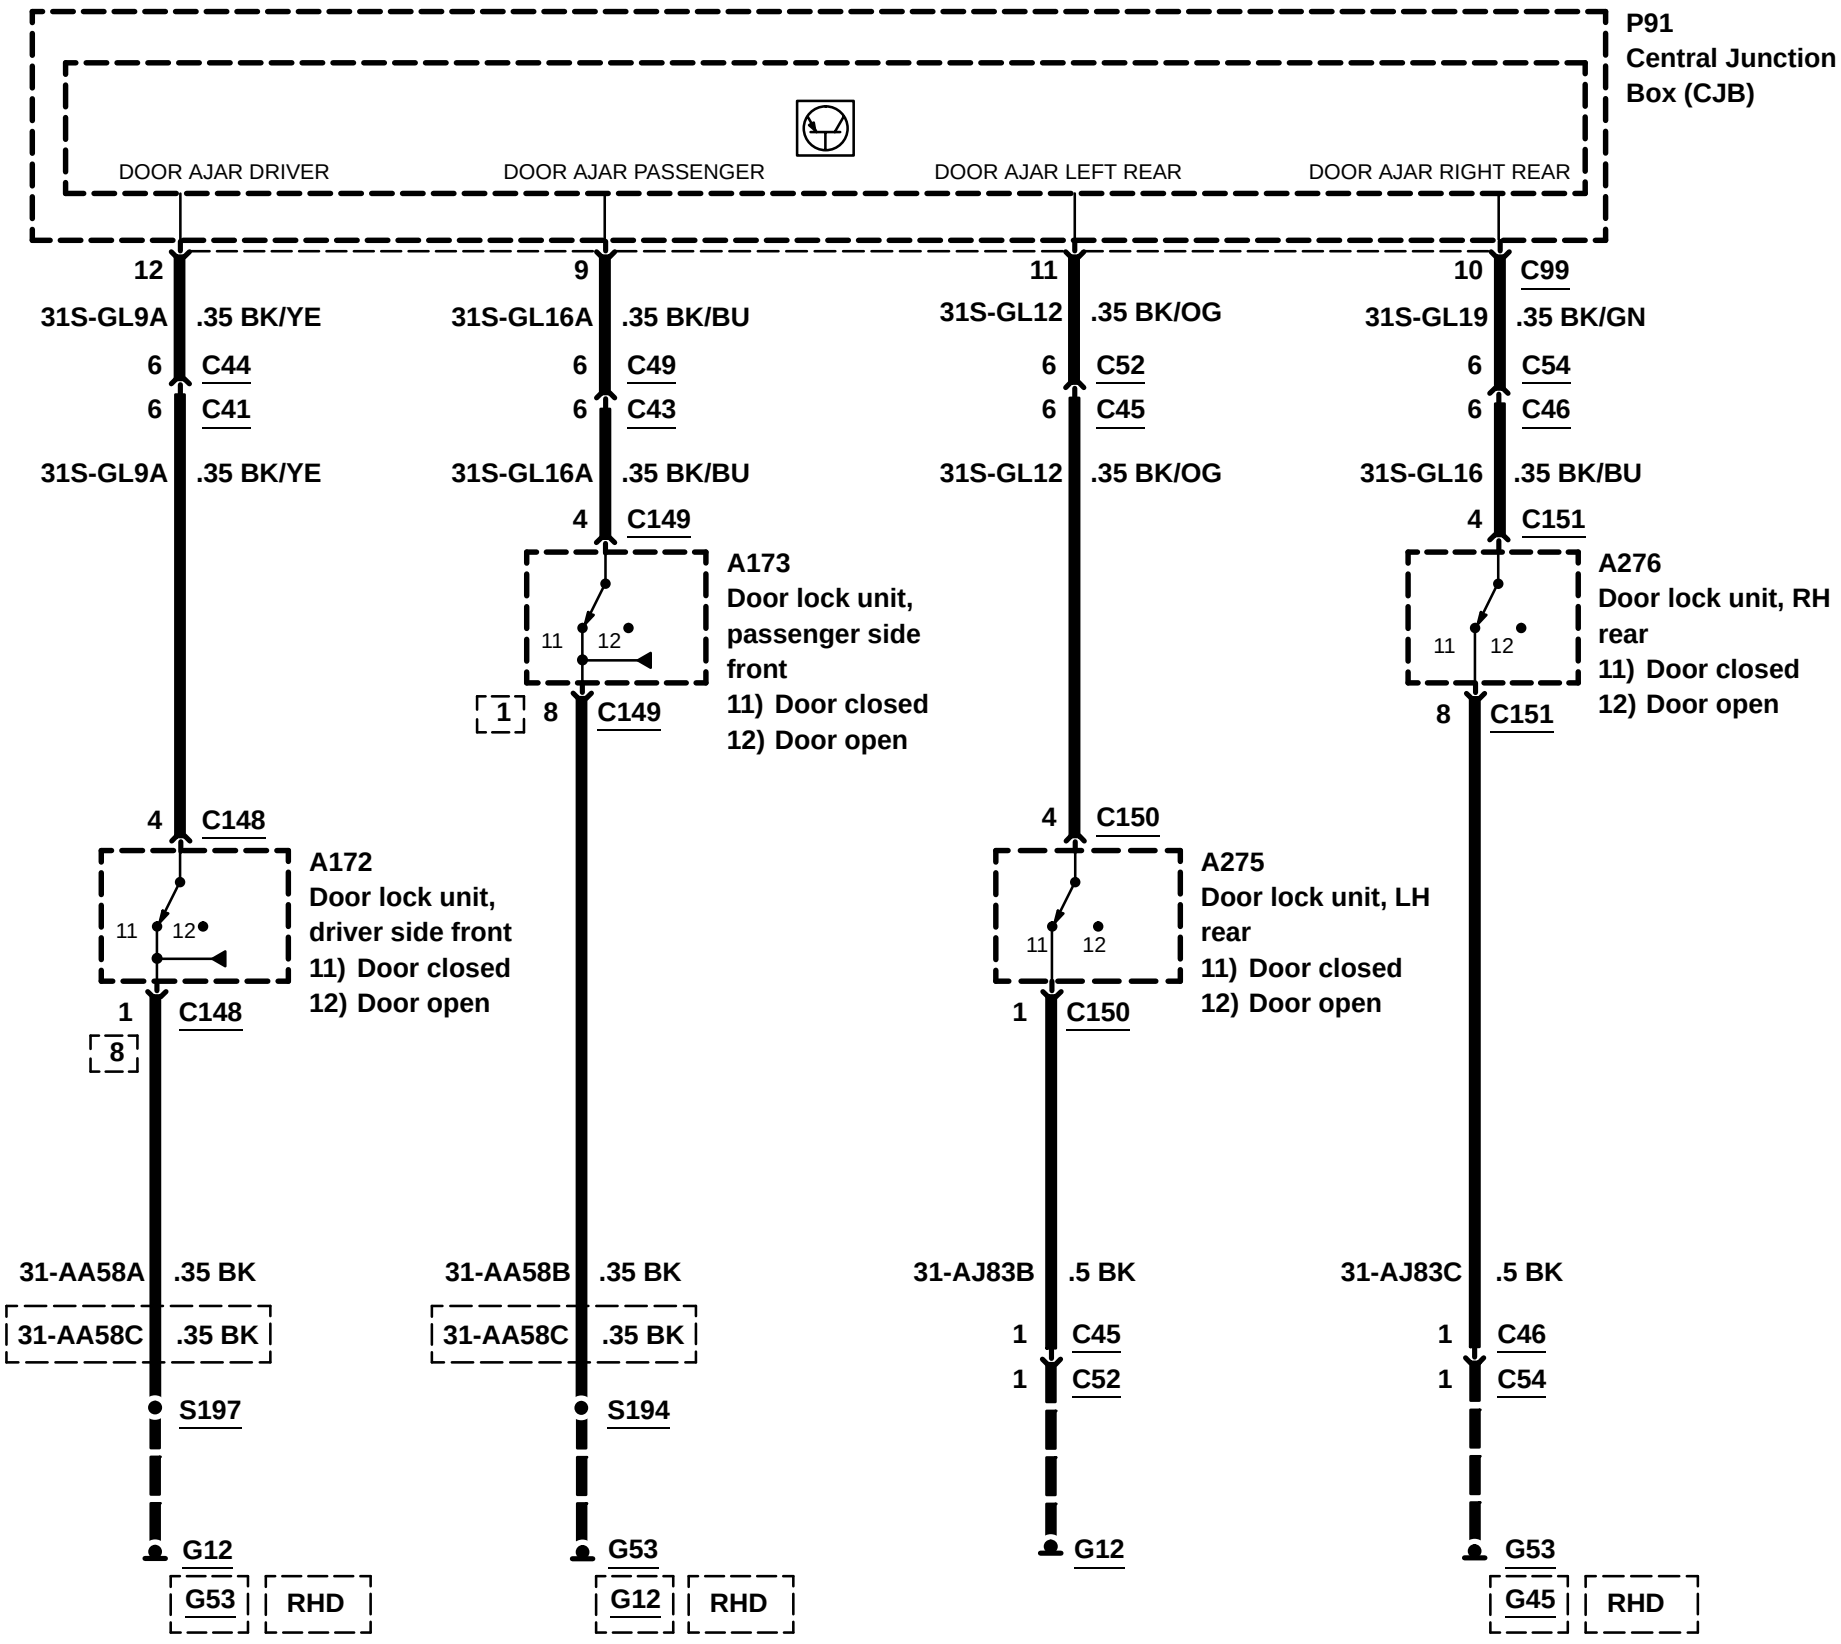


Interior Lighting – with front and rear power windows

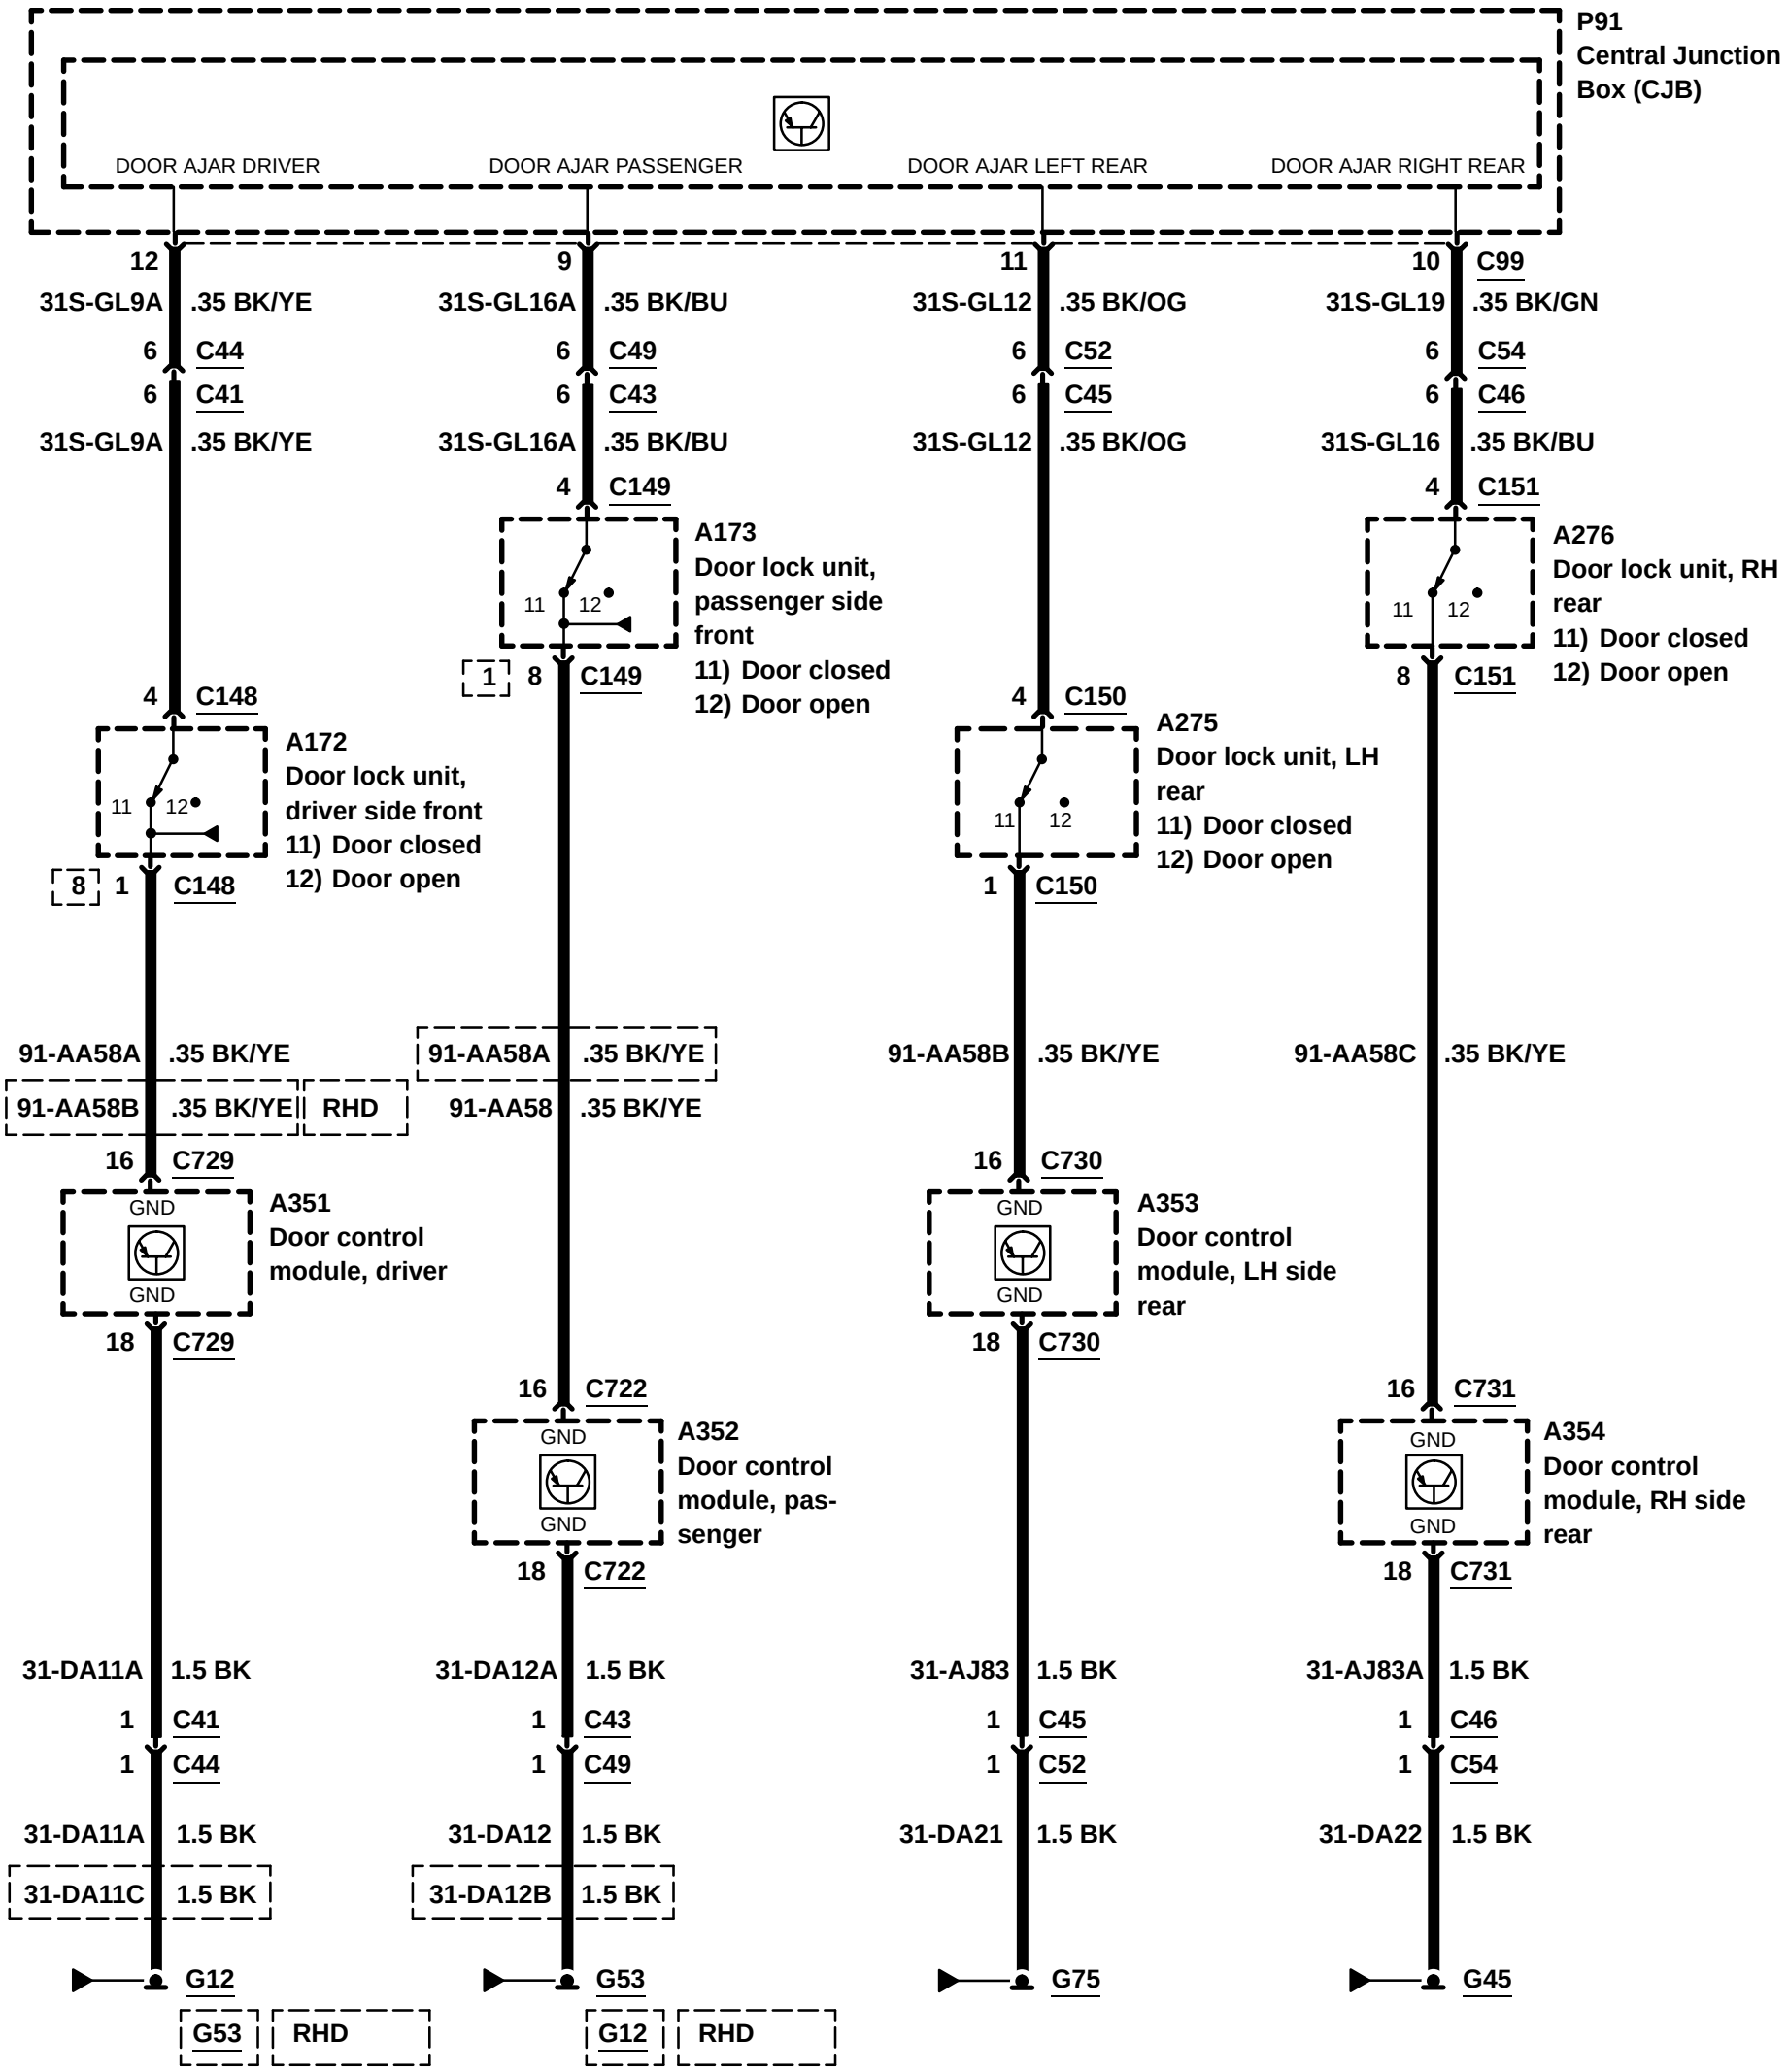

Module Communications Network – Data link connector, pins 4, 5 and 16

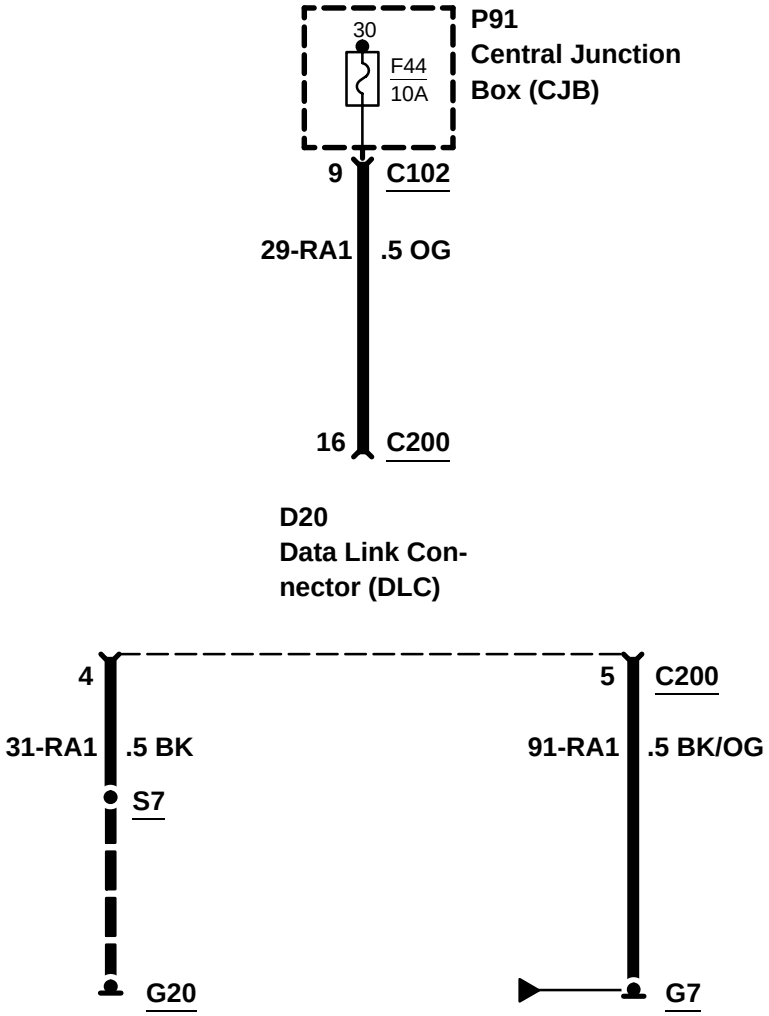


Module Communications Network – Data Link Connector (DLC)

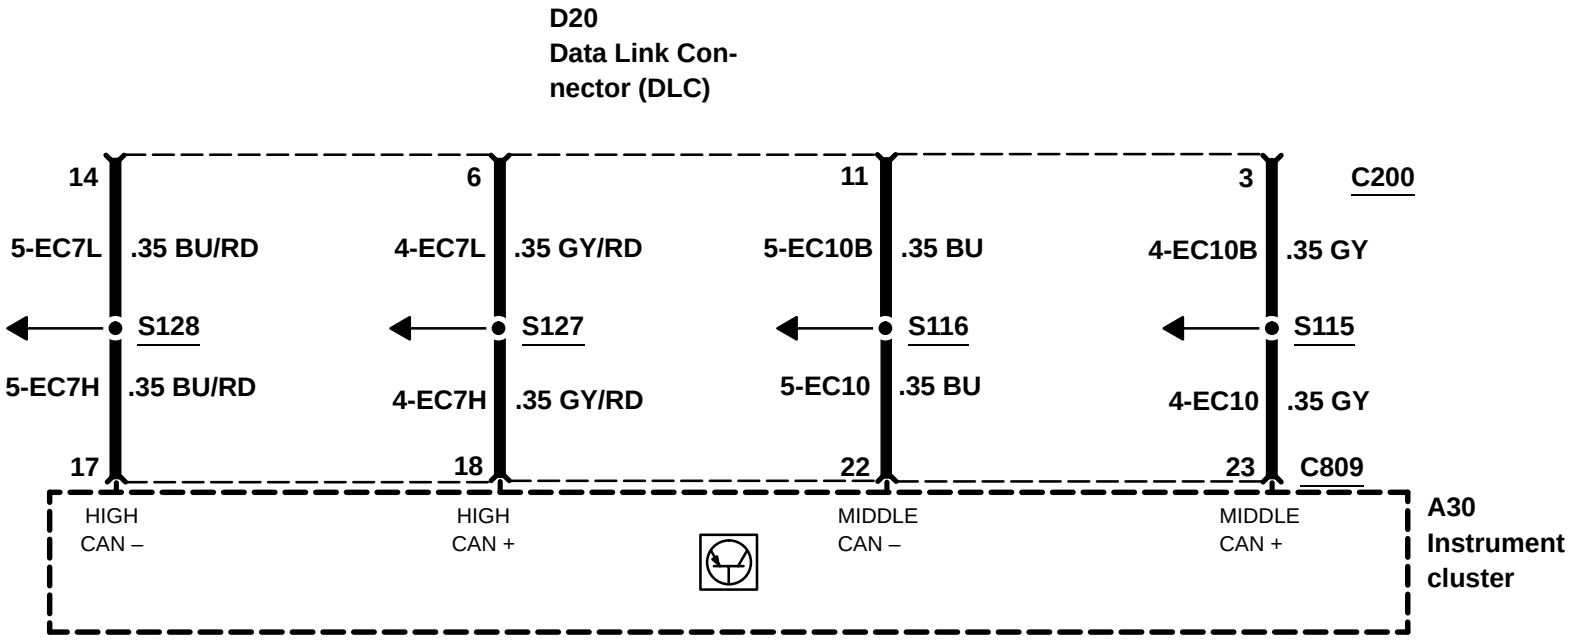


Module Communications Network – Data Link Connector (DLC), manual transmission


418–00–00–7
1.6L (Z6)
418–00–00–6
1.8/2.0L Duratec–HE (MI4)
418–00–00–5
2.0L Duratorq–TDCi (DW) Diesel

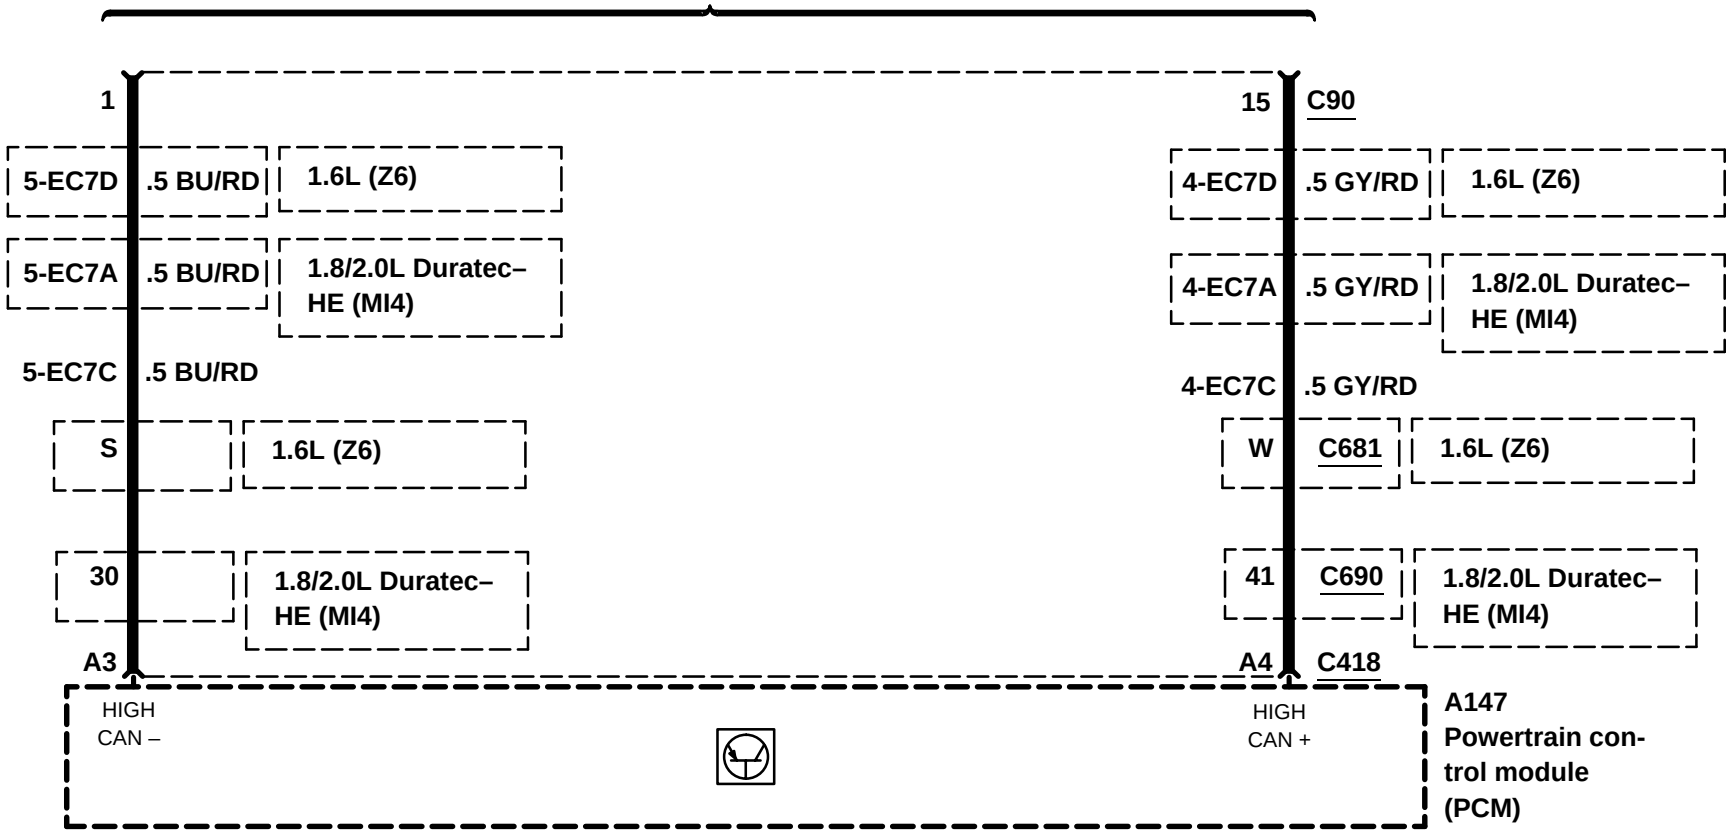


Module Communications Network – Data Link Connector (DLC), automatic transmission

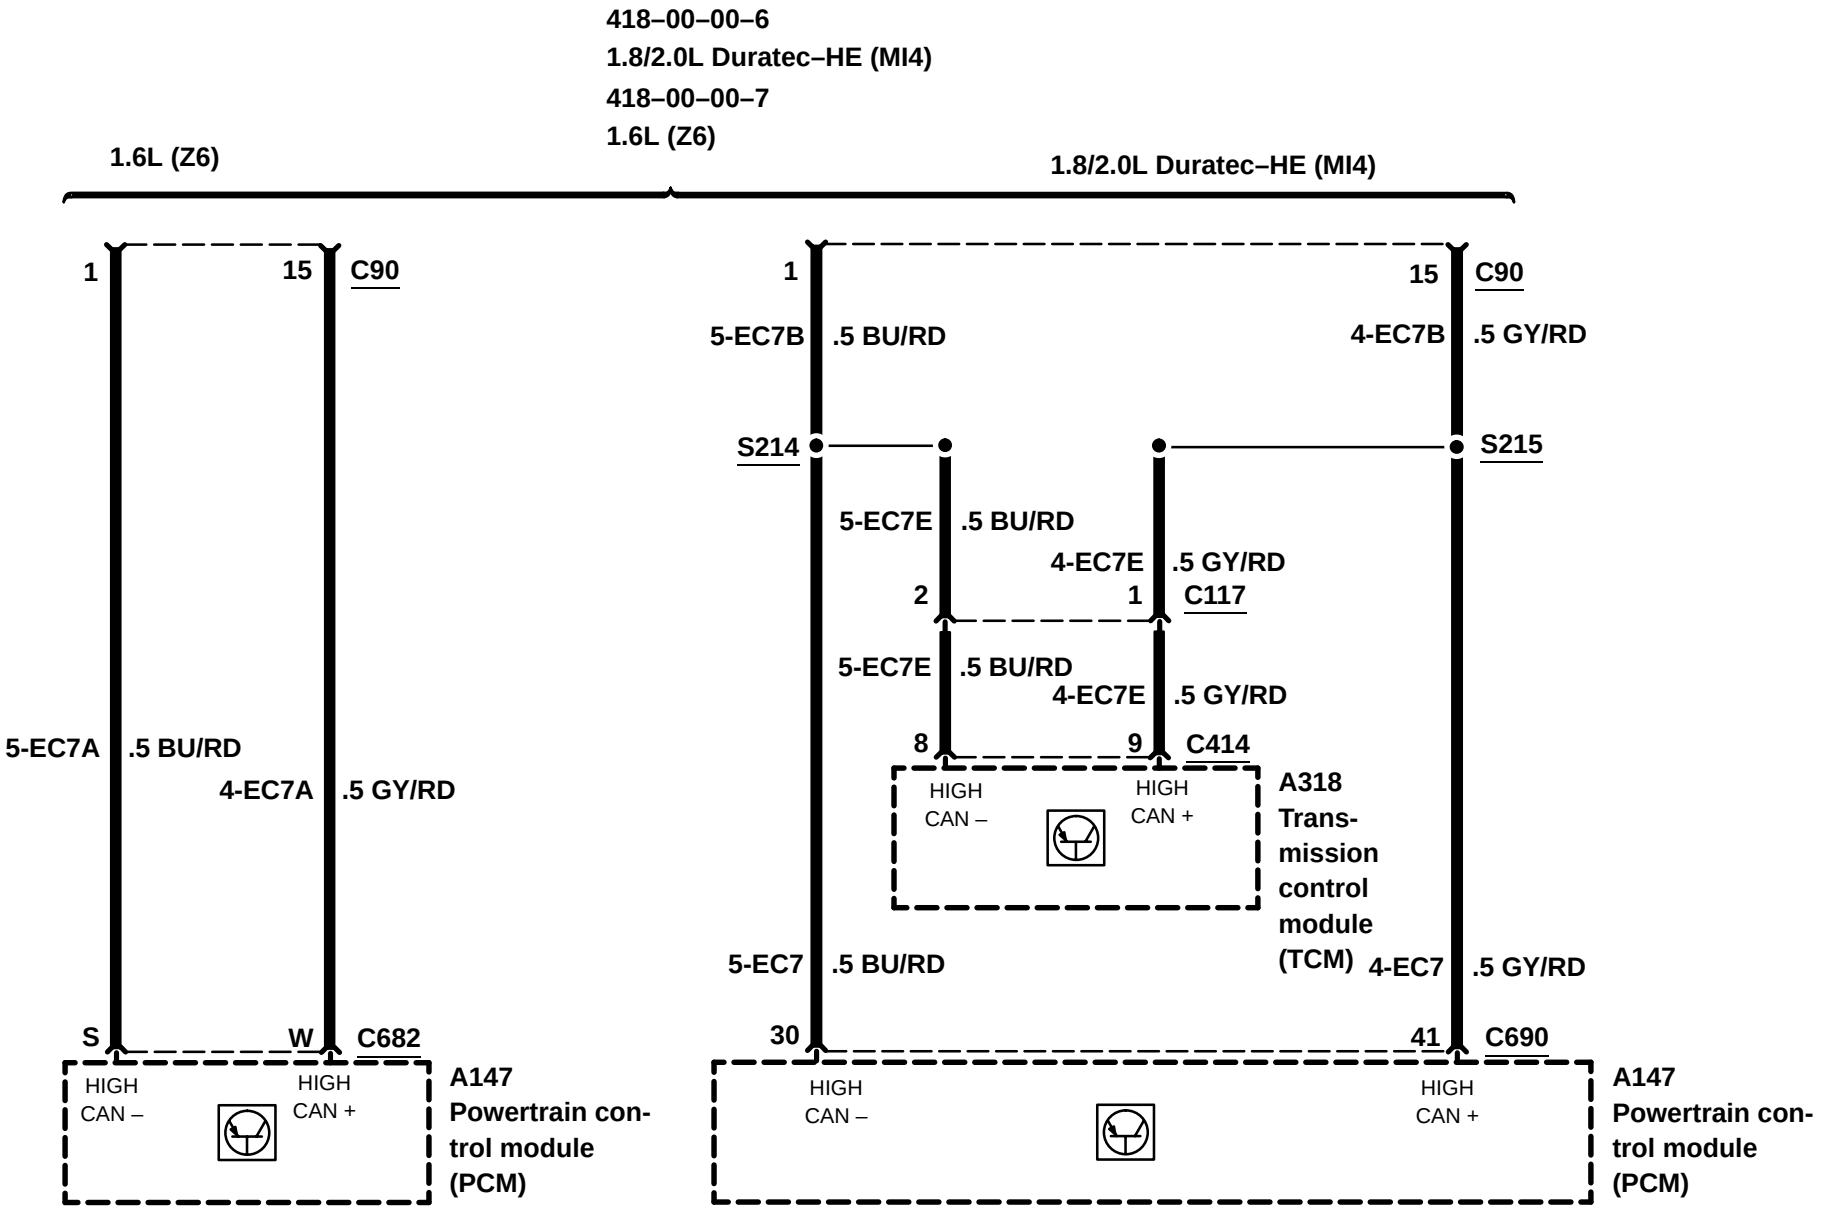

Module Communications Network – Data Link Connector (DLC), 2.0L Duratorq–TDCi (DW) Diesel

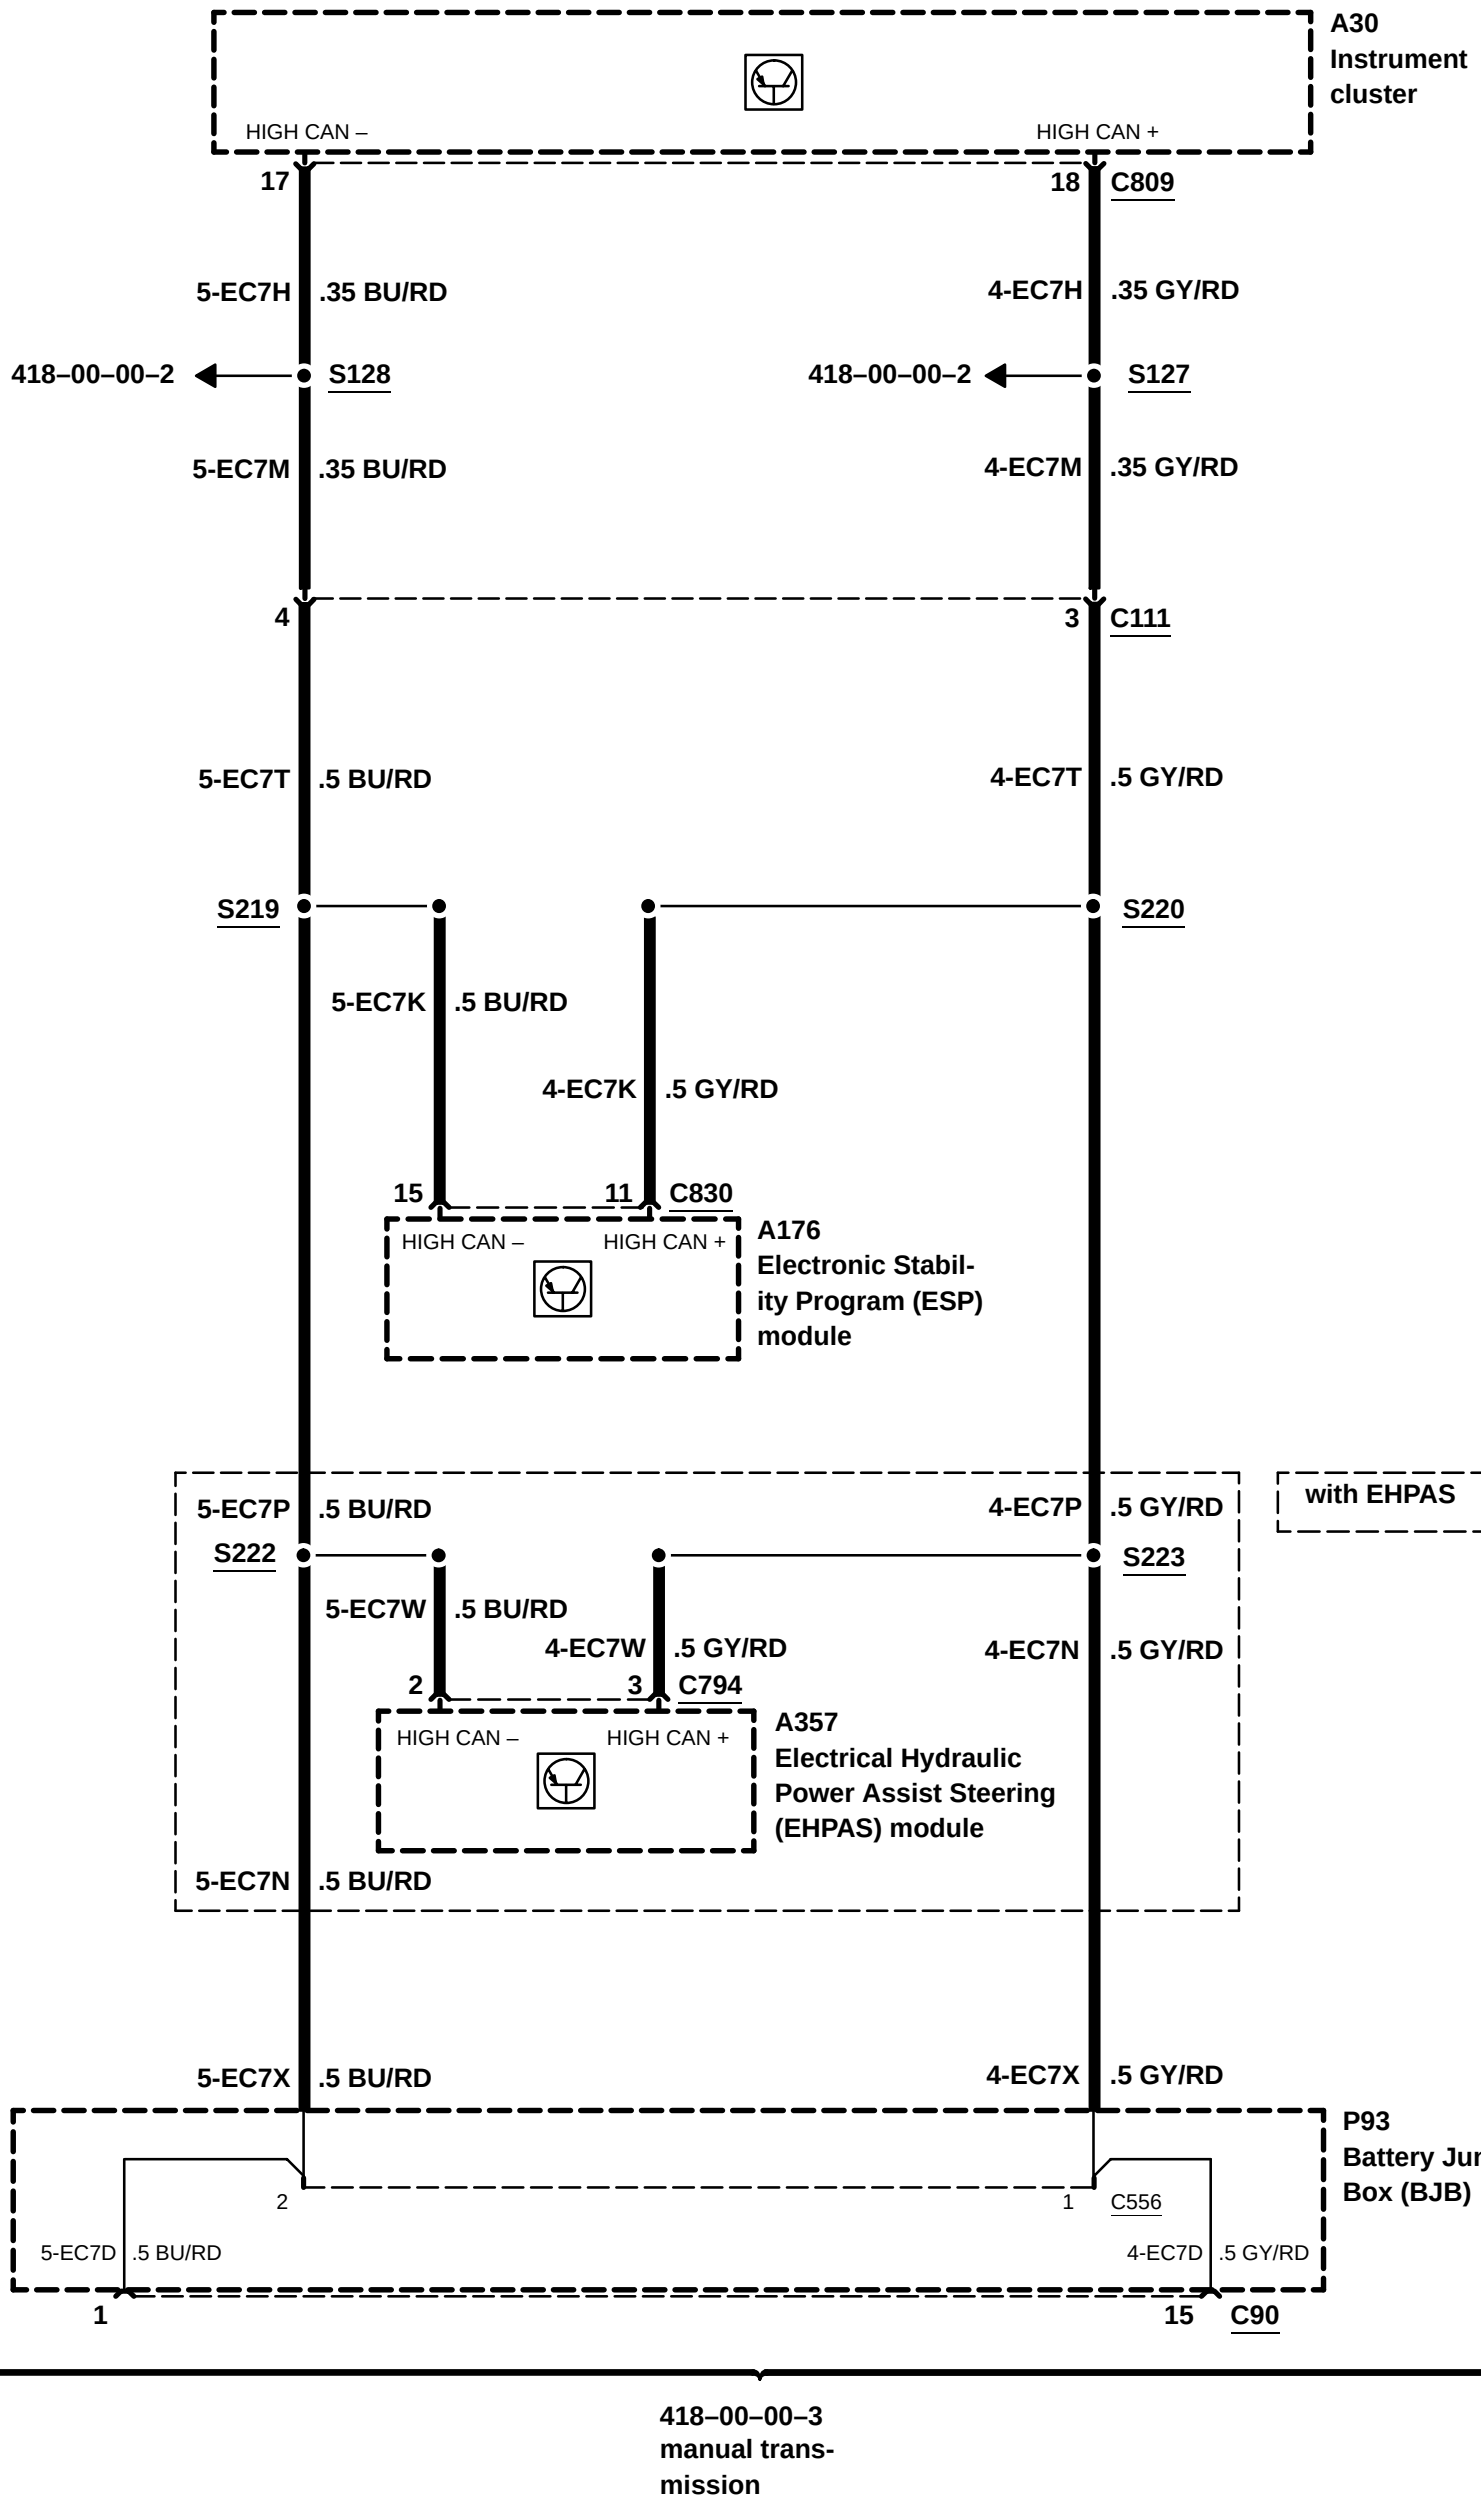


Module Communications Network – Data Link Connector (DLC), 1.8/2.0L Duratec–HE (MI4)

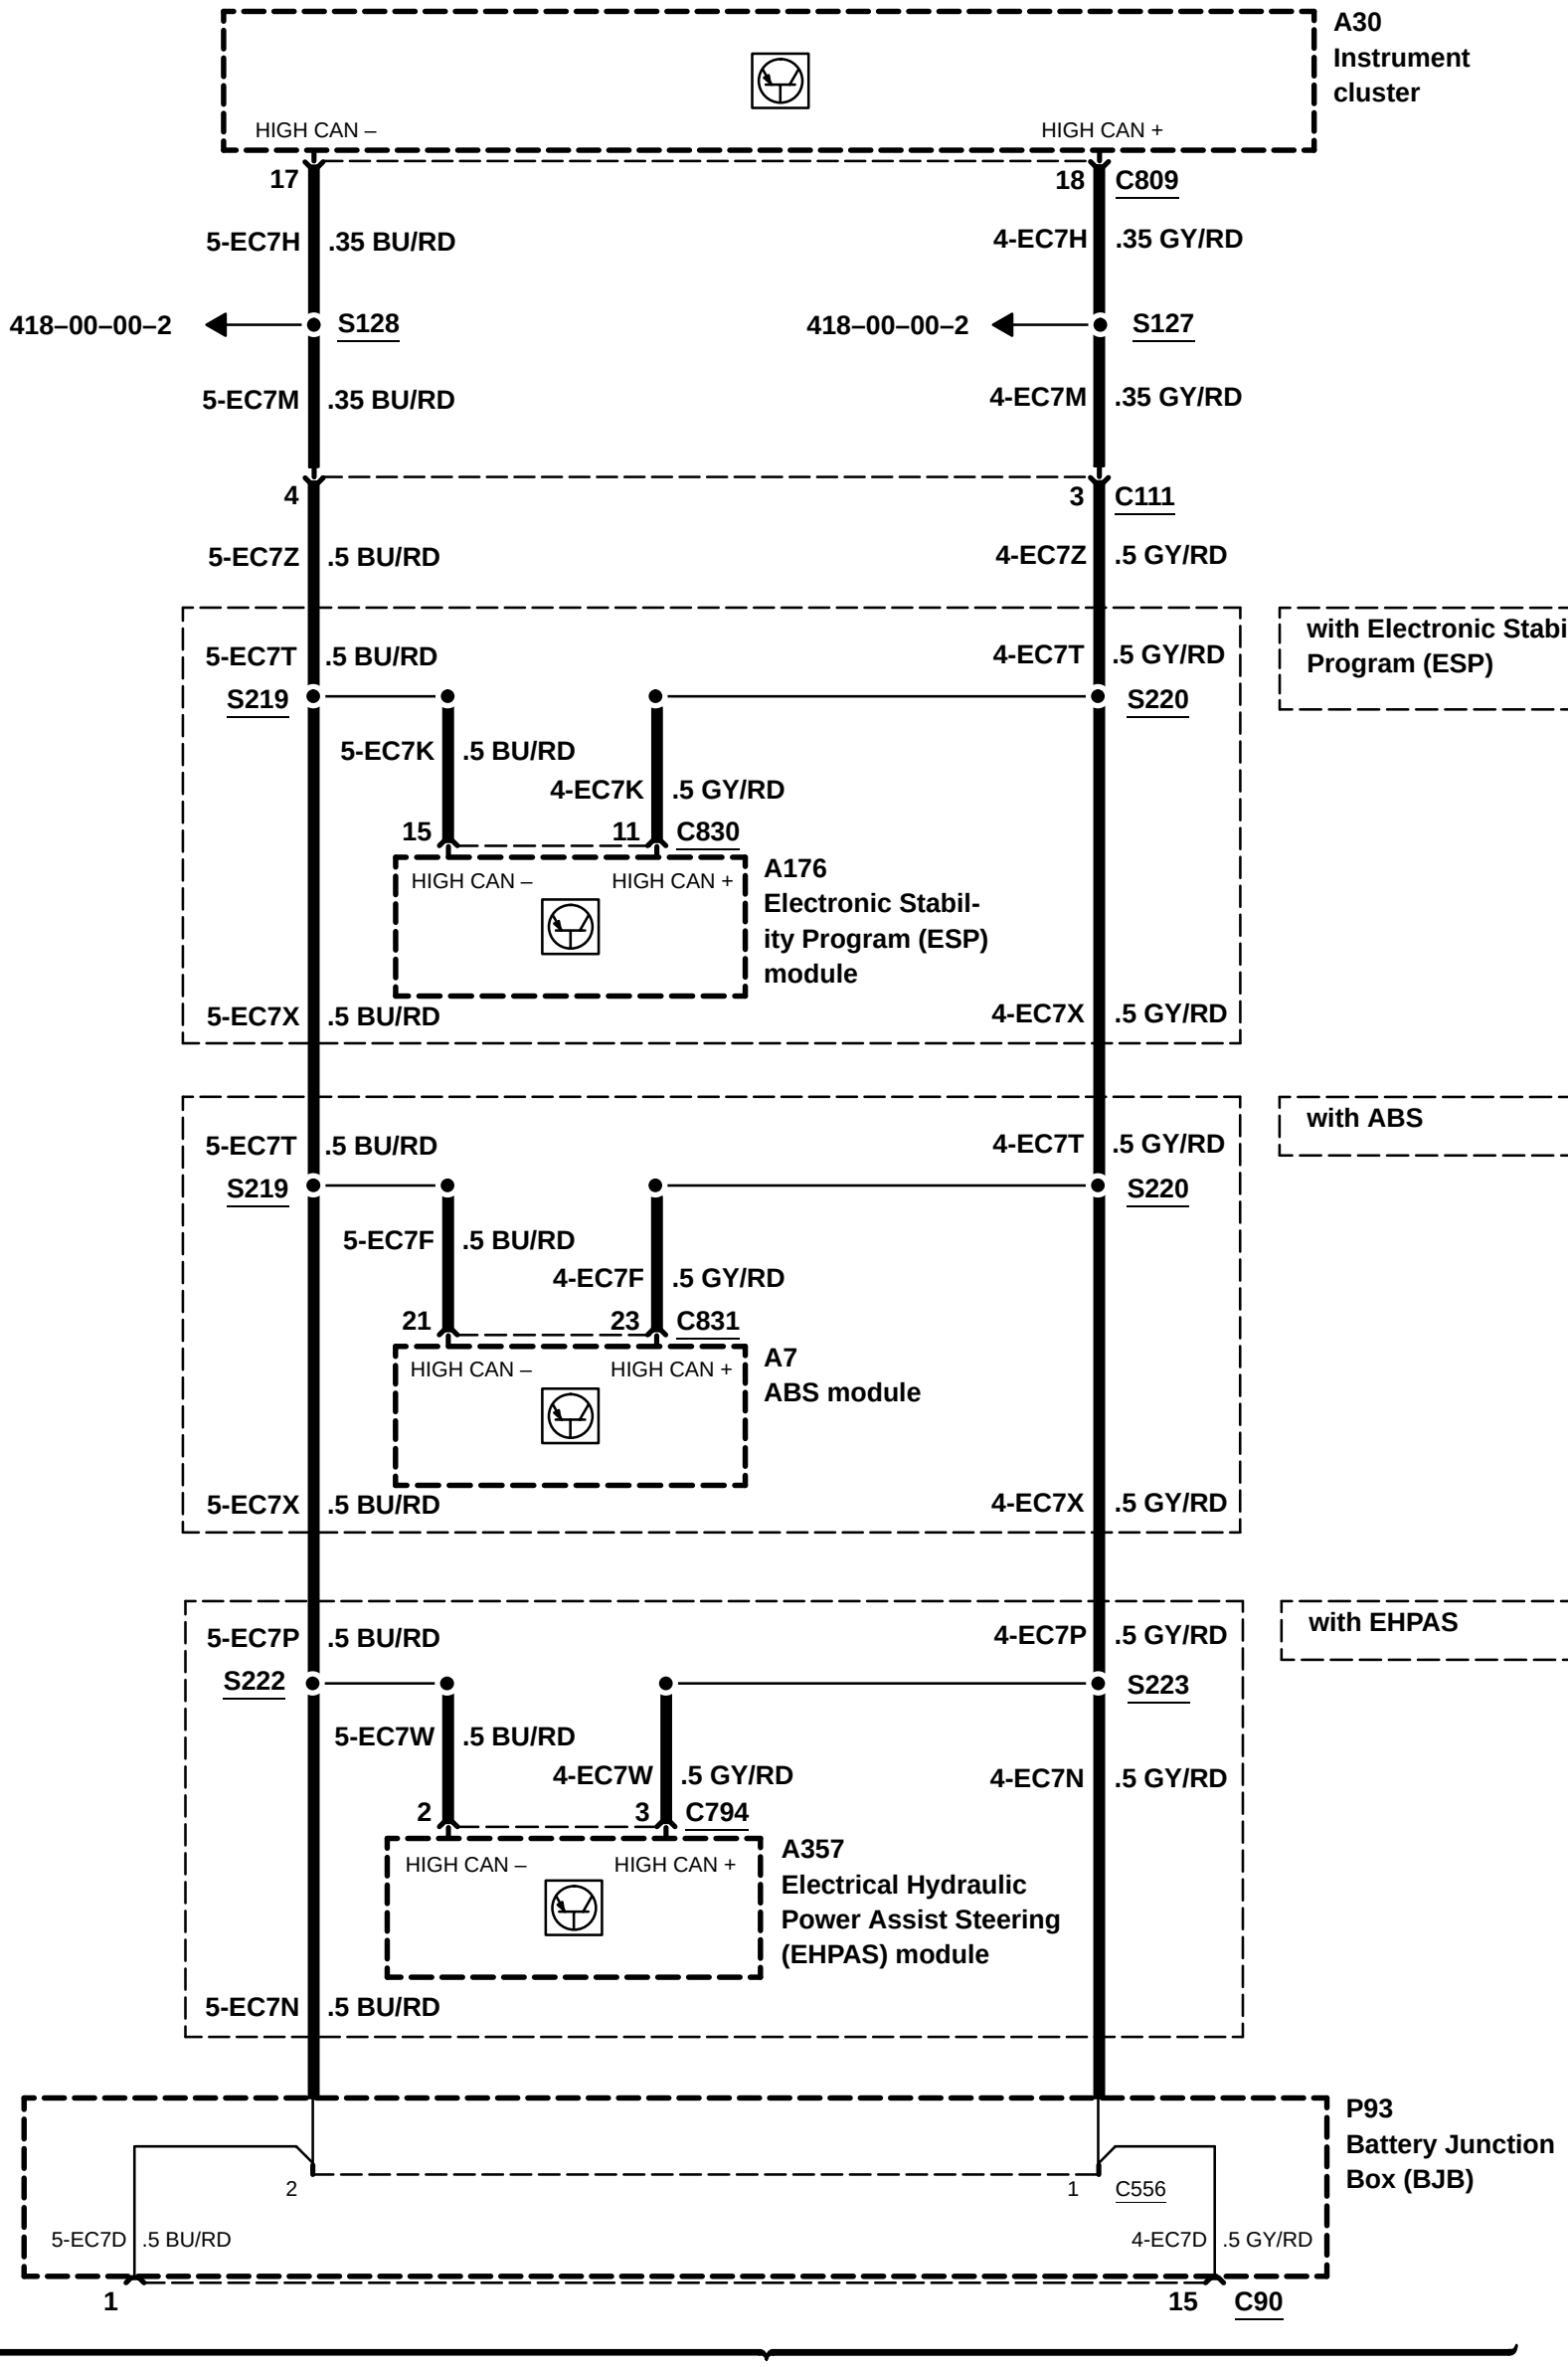

418–00–00–3 manual transmission


418–00–00–4 automatic transmission

Module Communications Network – Data Link Connector (DLC), 1.6L (Z6)

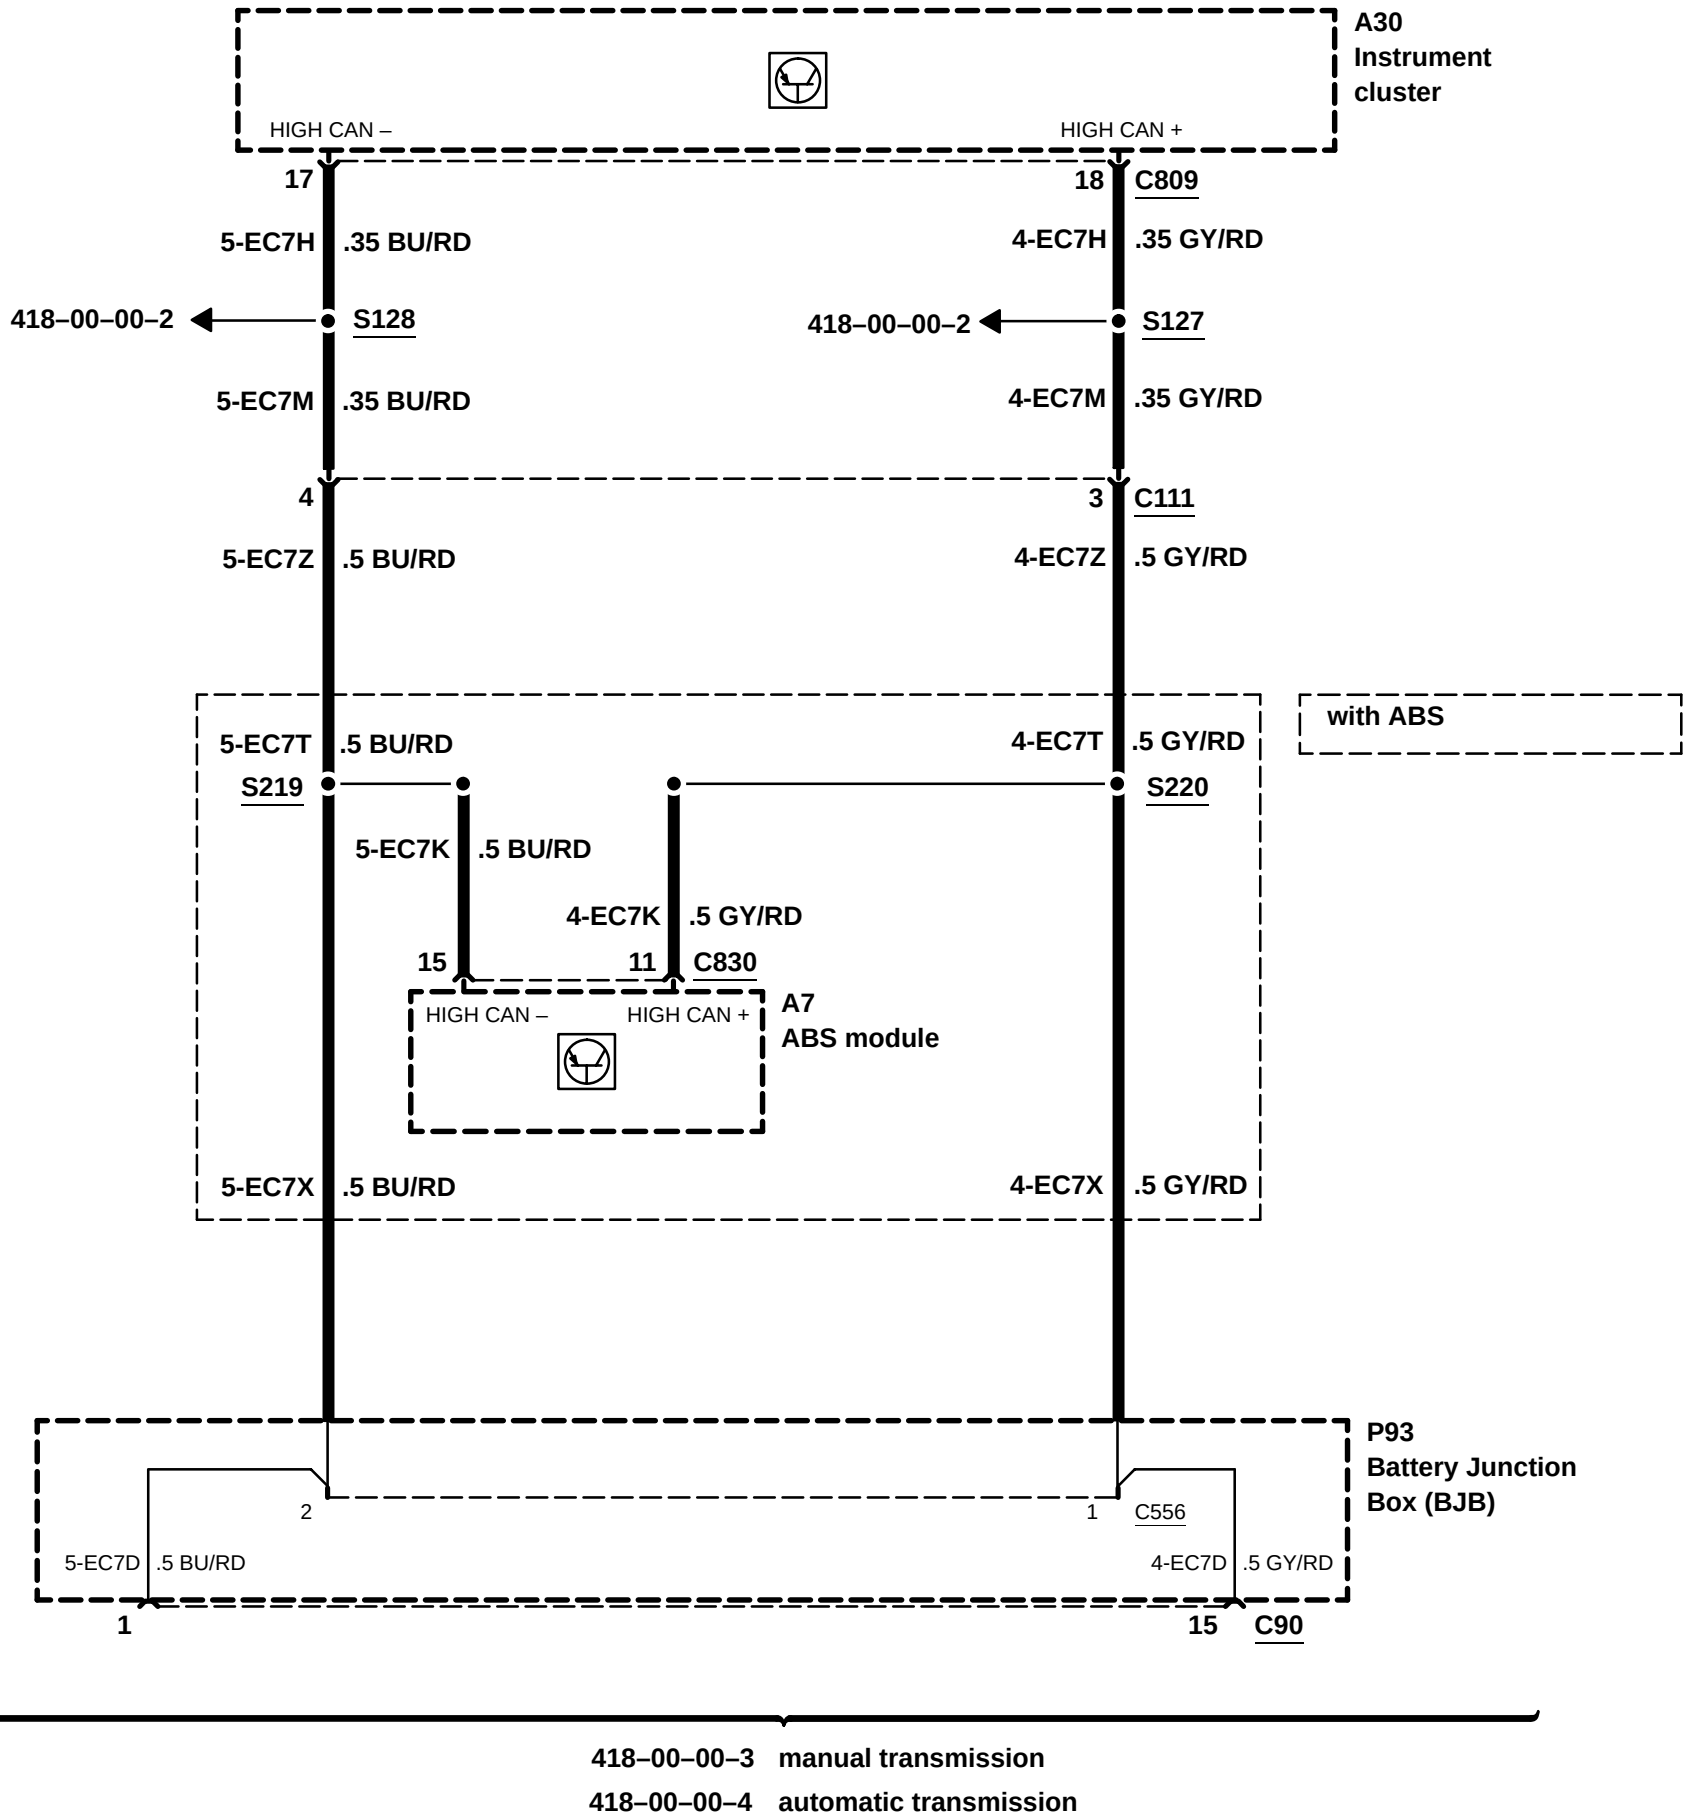

418–00–00–3 manual transmission
418–00–00–4 automatic transmission

Module Communications Network – Data link connector, pins 3 and 11, with EATC, with air bags

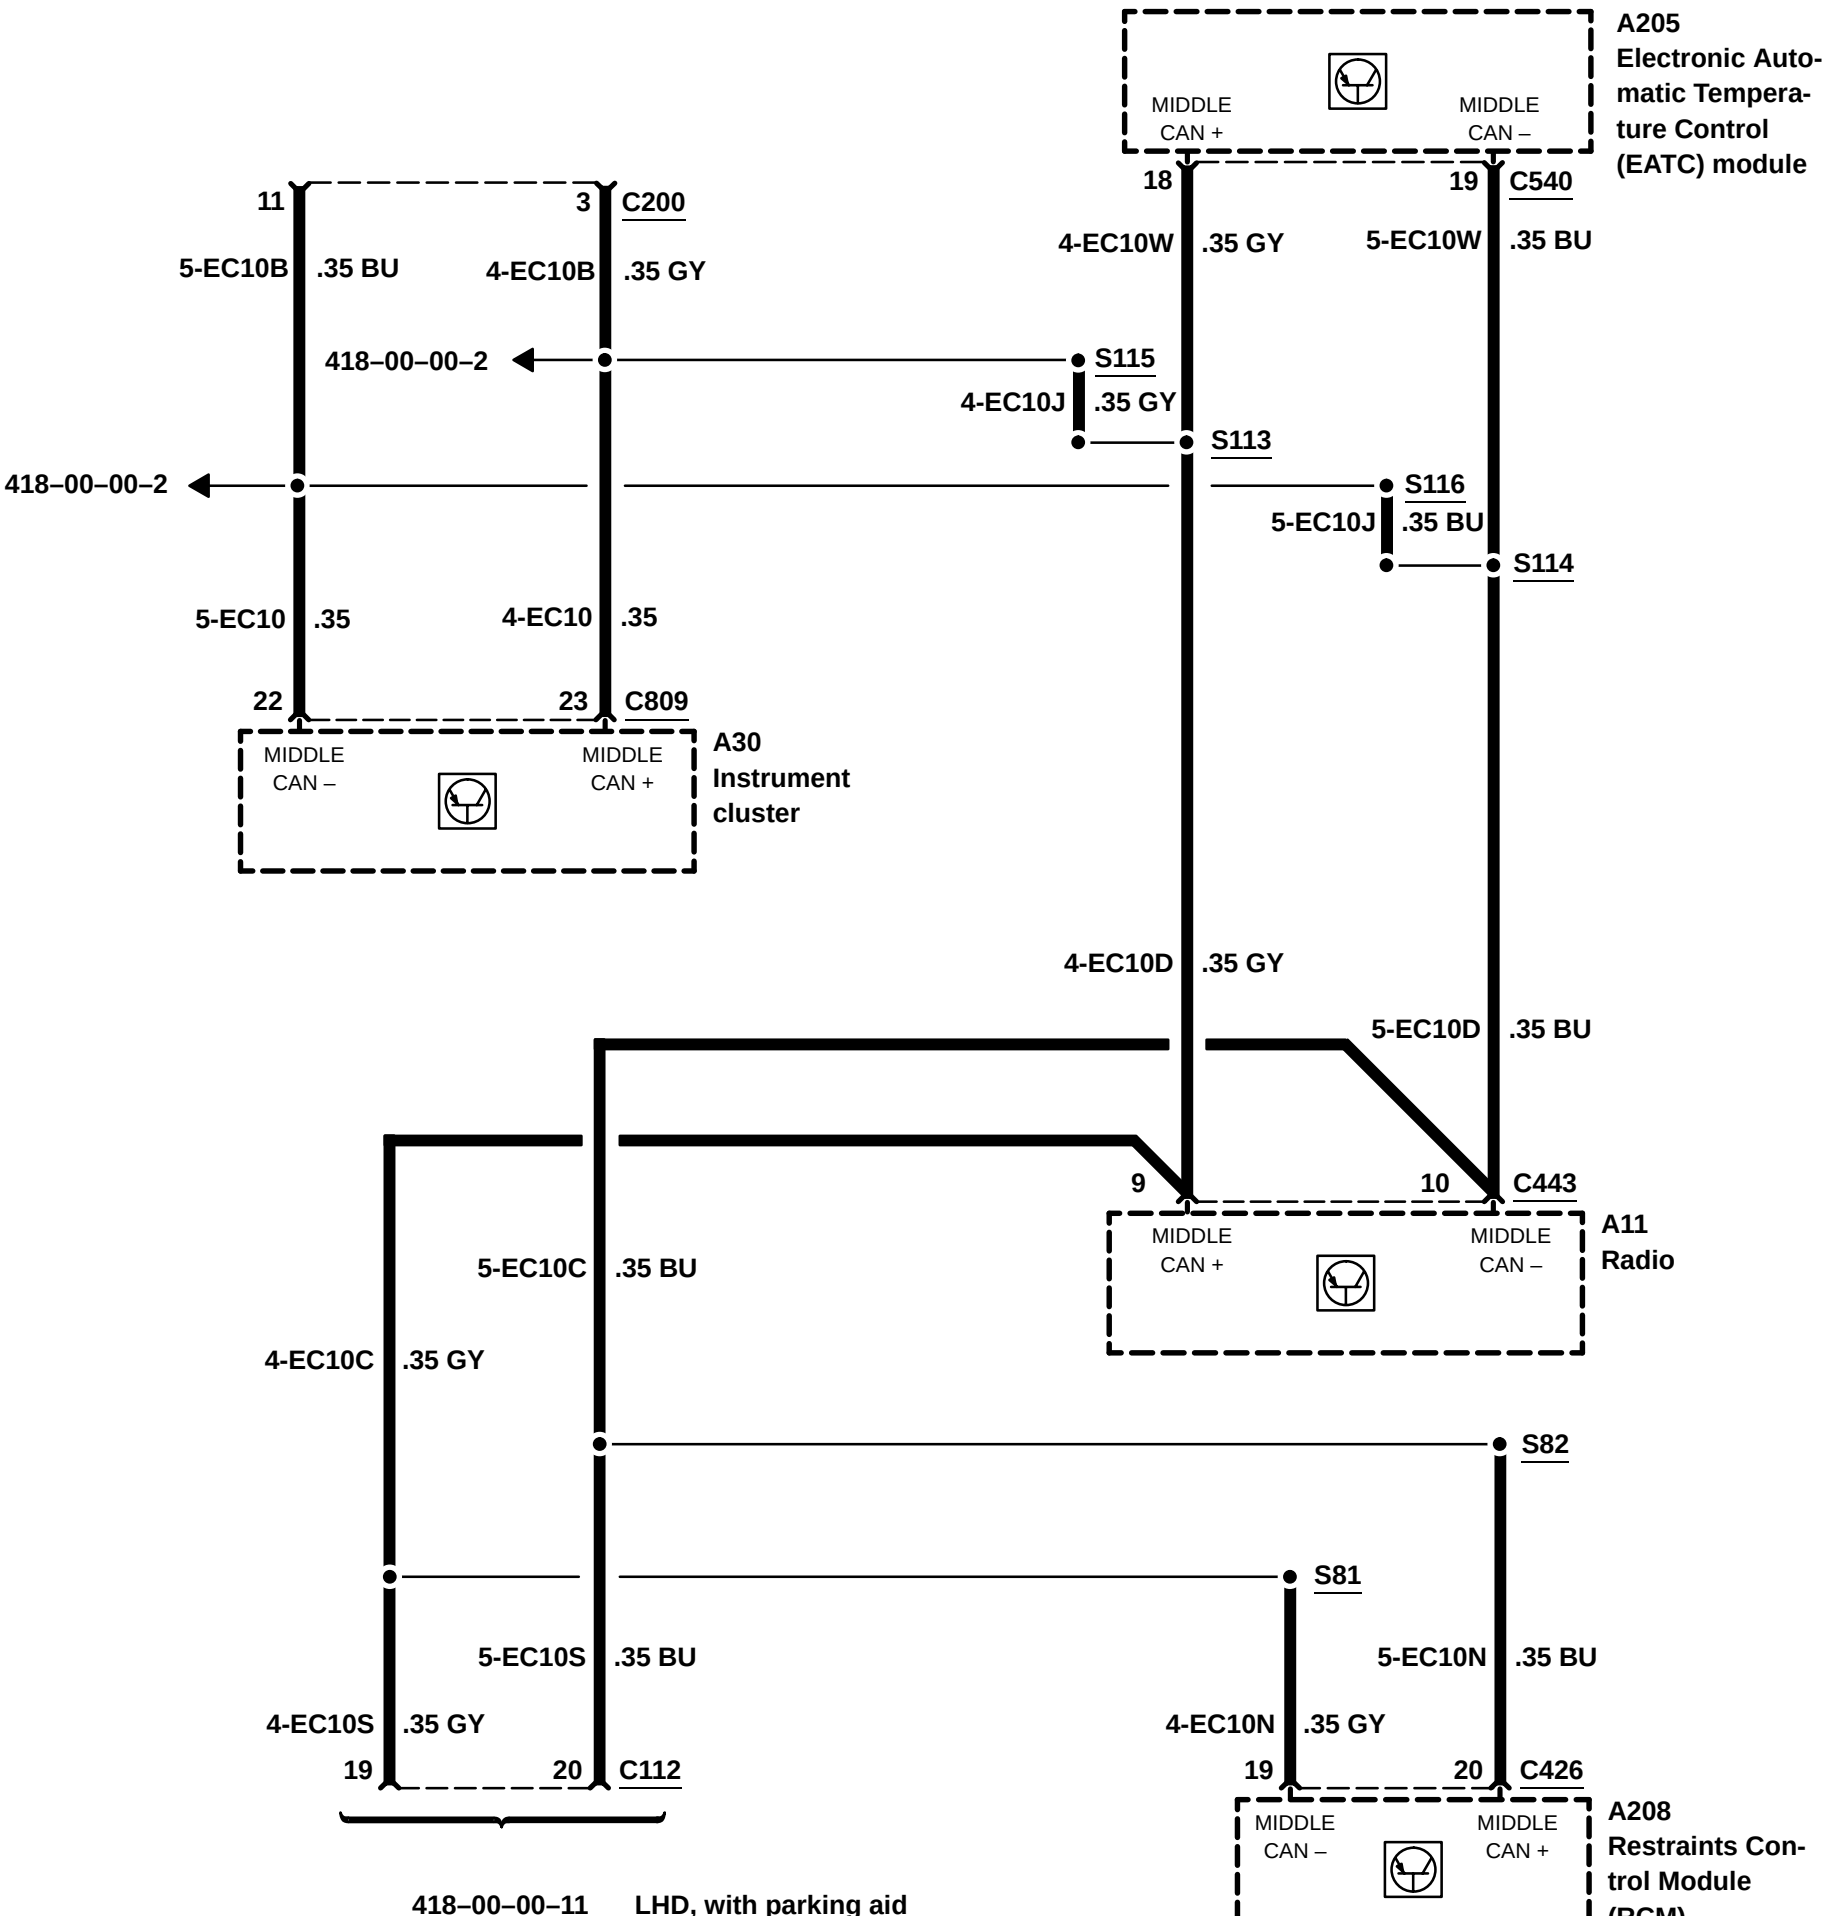

418–00–00–11 LHD, with parking aid


418–00–00–12 LHD, without parking aid

418–00–00–13 RHD, with parking aid

418–00–00–14 RHD, without parking aid

418–00–00–15 with front power windows

Module Communications Network – Data link connector, pins 3 and 11, with EATC, without air bags

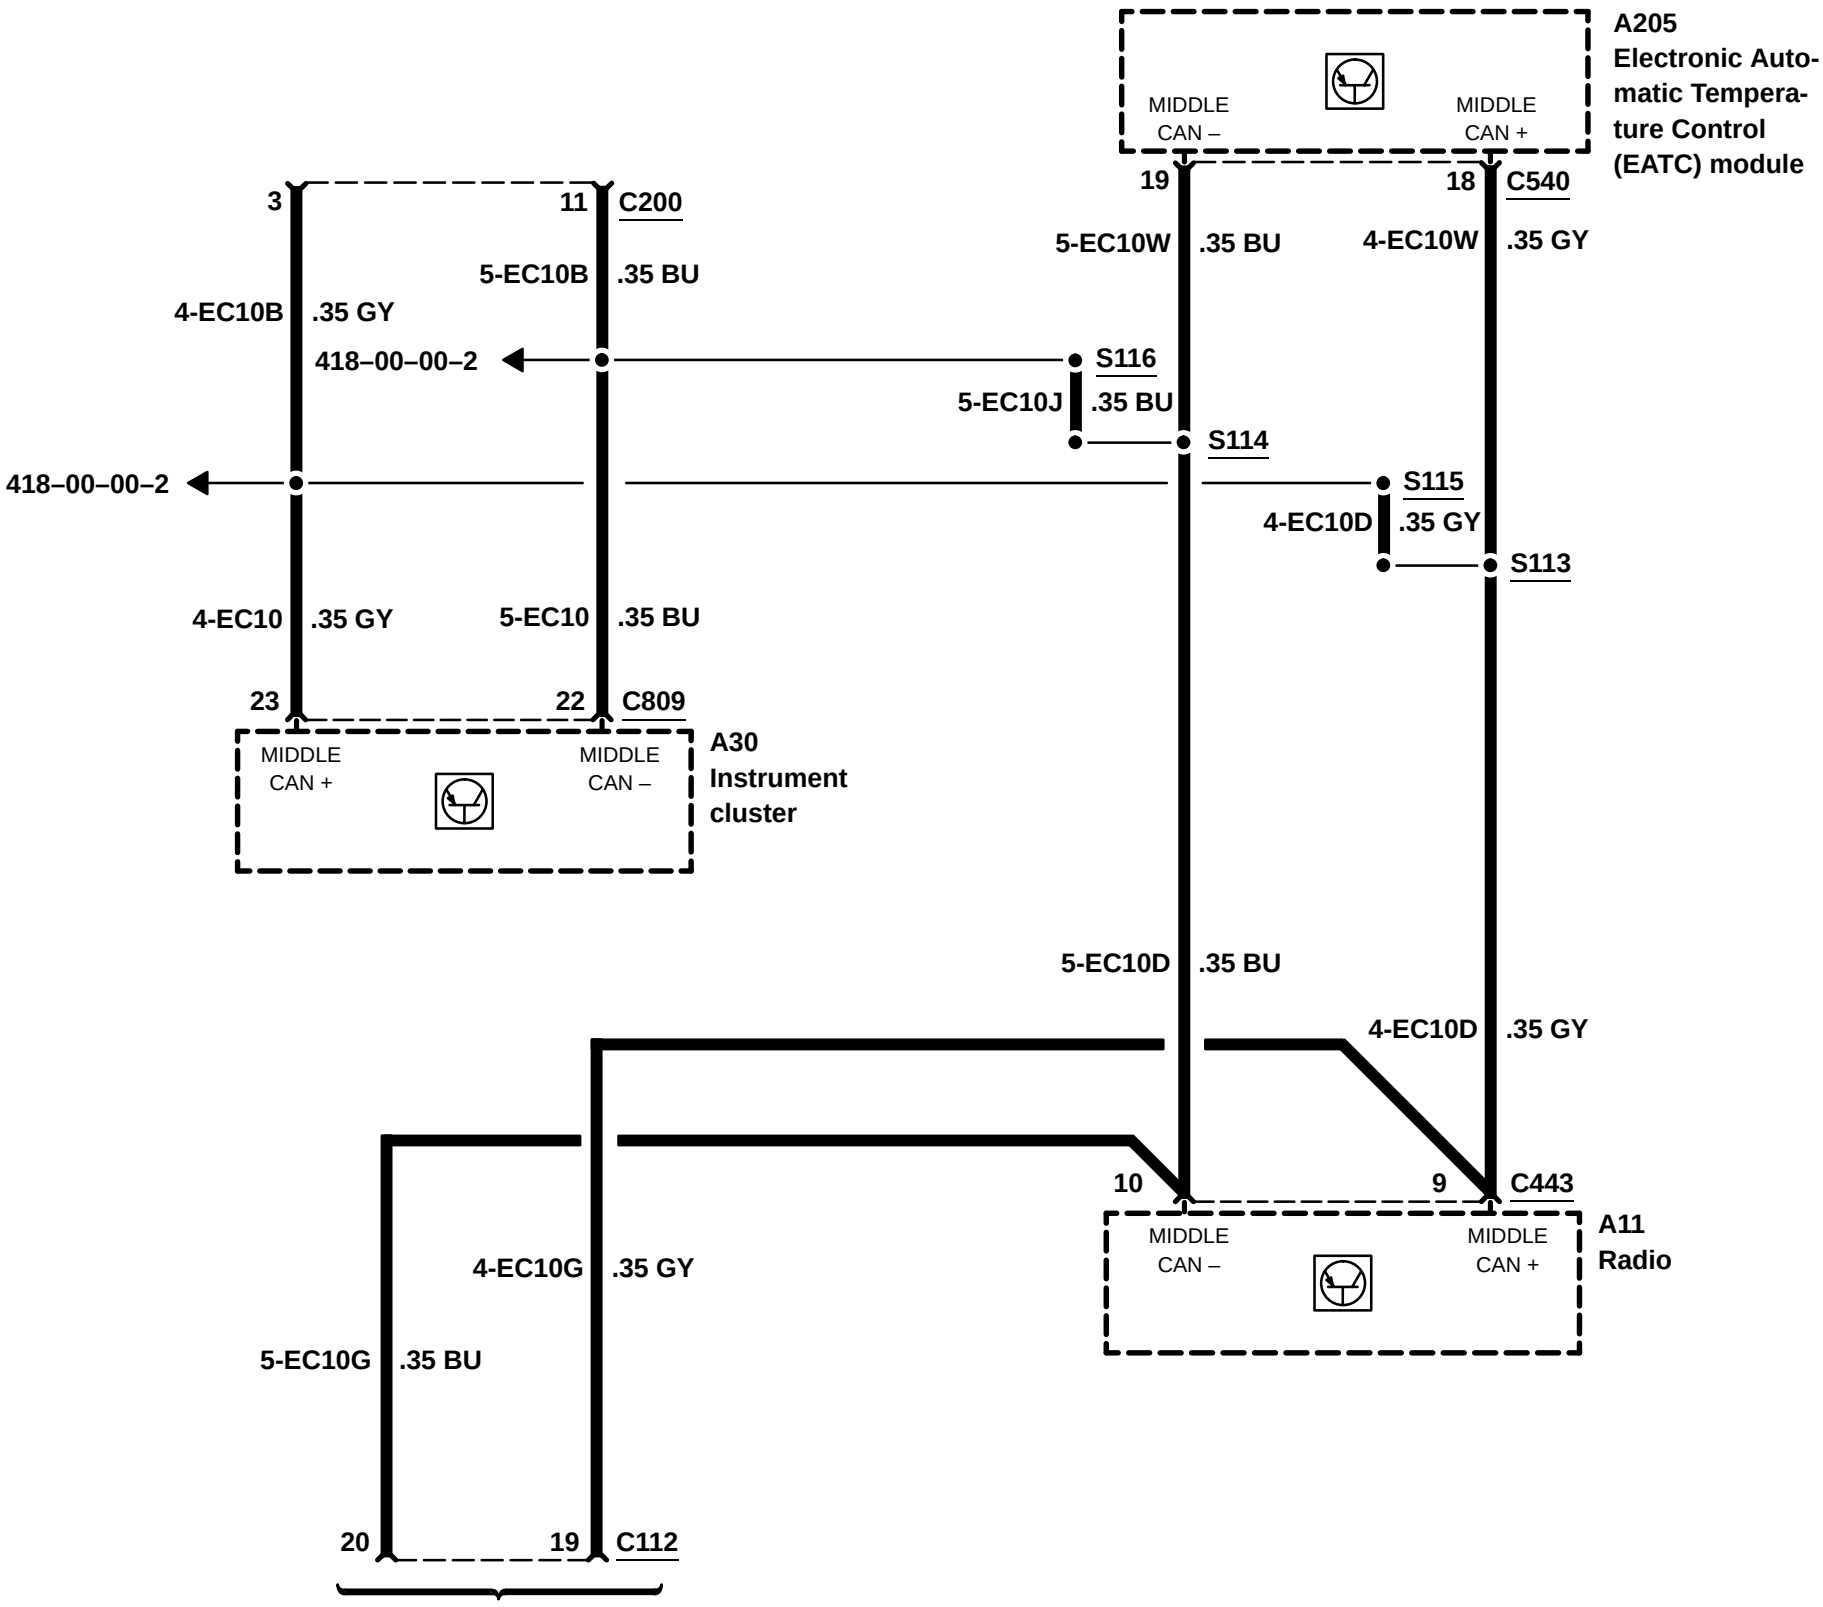

418–00–00–11 LHD, with parking aid


418–00–00–12 LHD, without parking aid

418–00–00–13 RHD, with parking aid

418–00–00–14 RHD, without parking aid

418–00–00–15 with front power windows


Module Communications Network – Data link connector, pins 3 and 11, without EATC

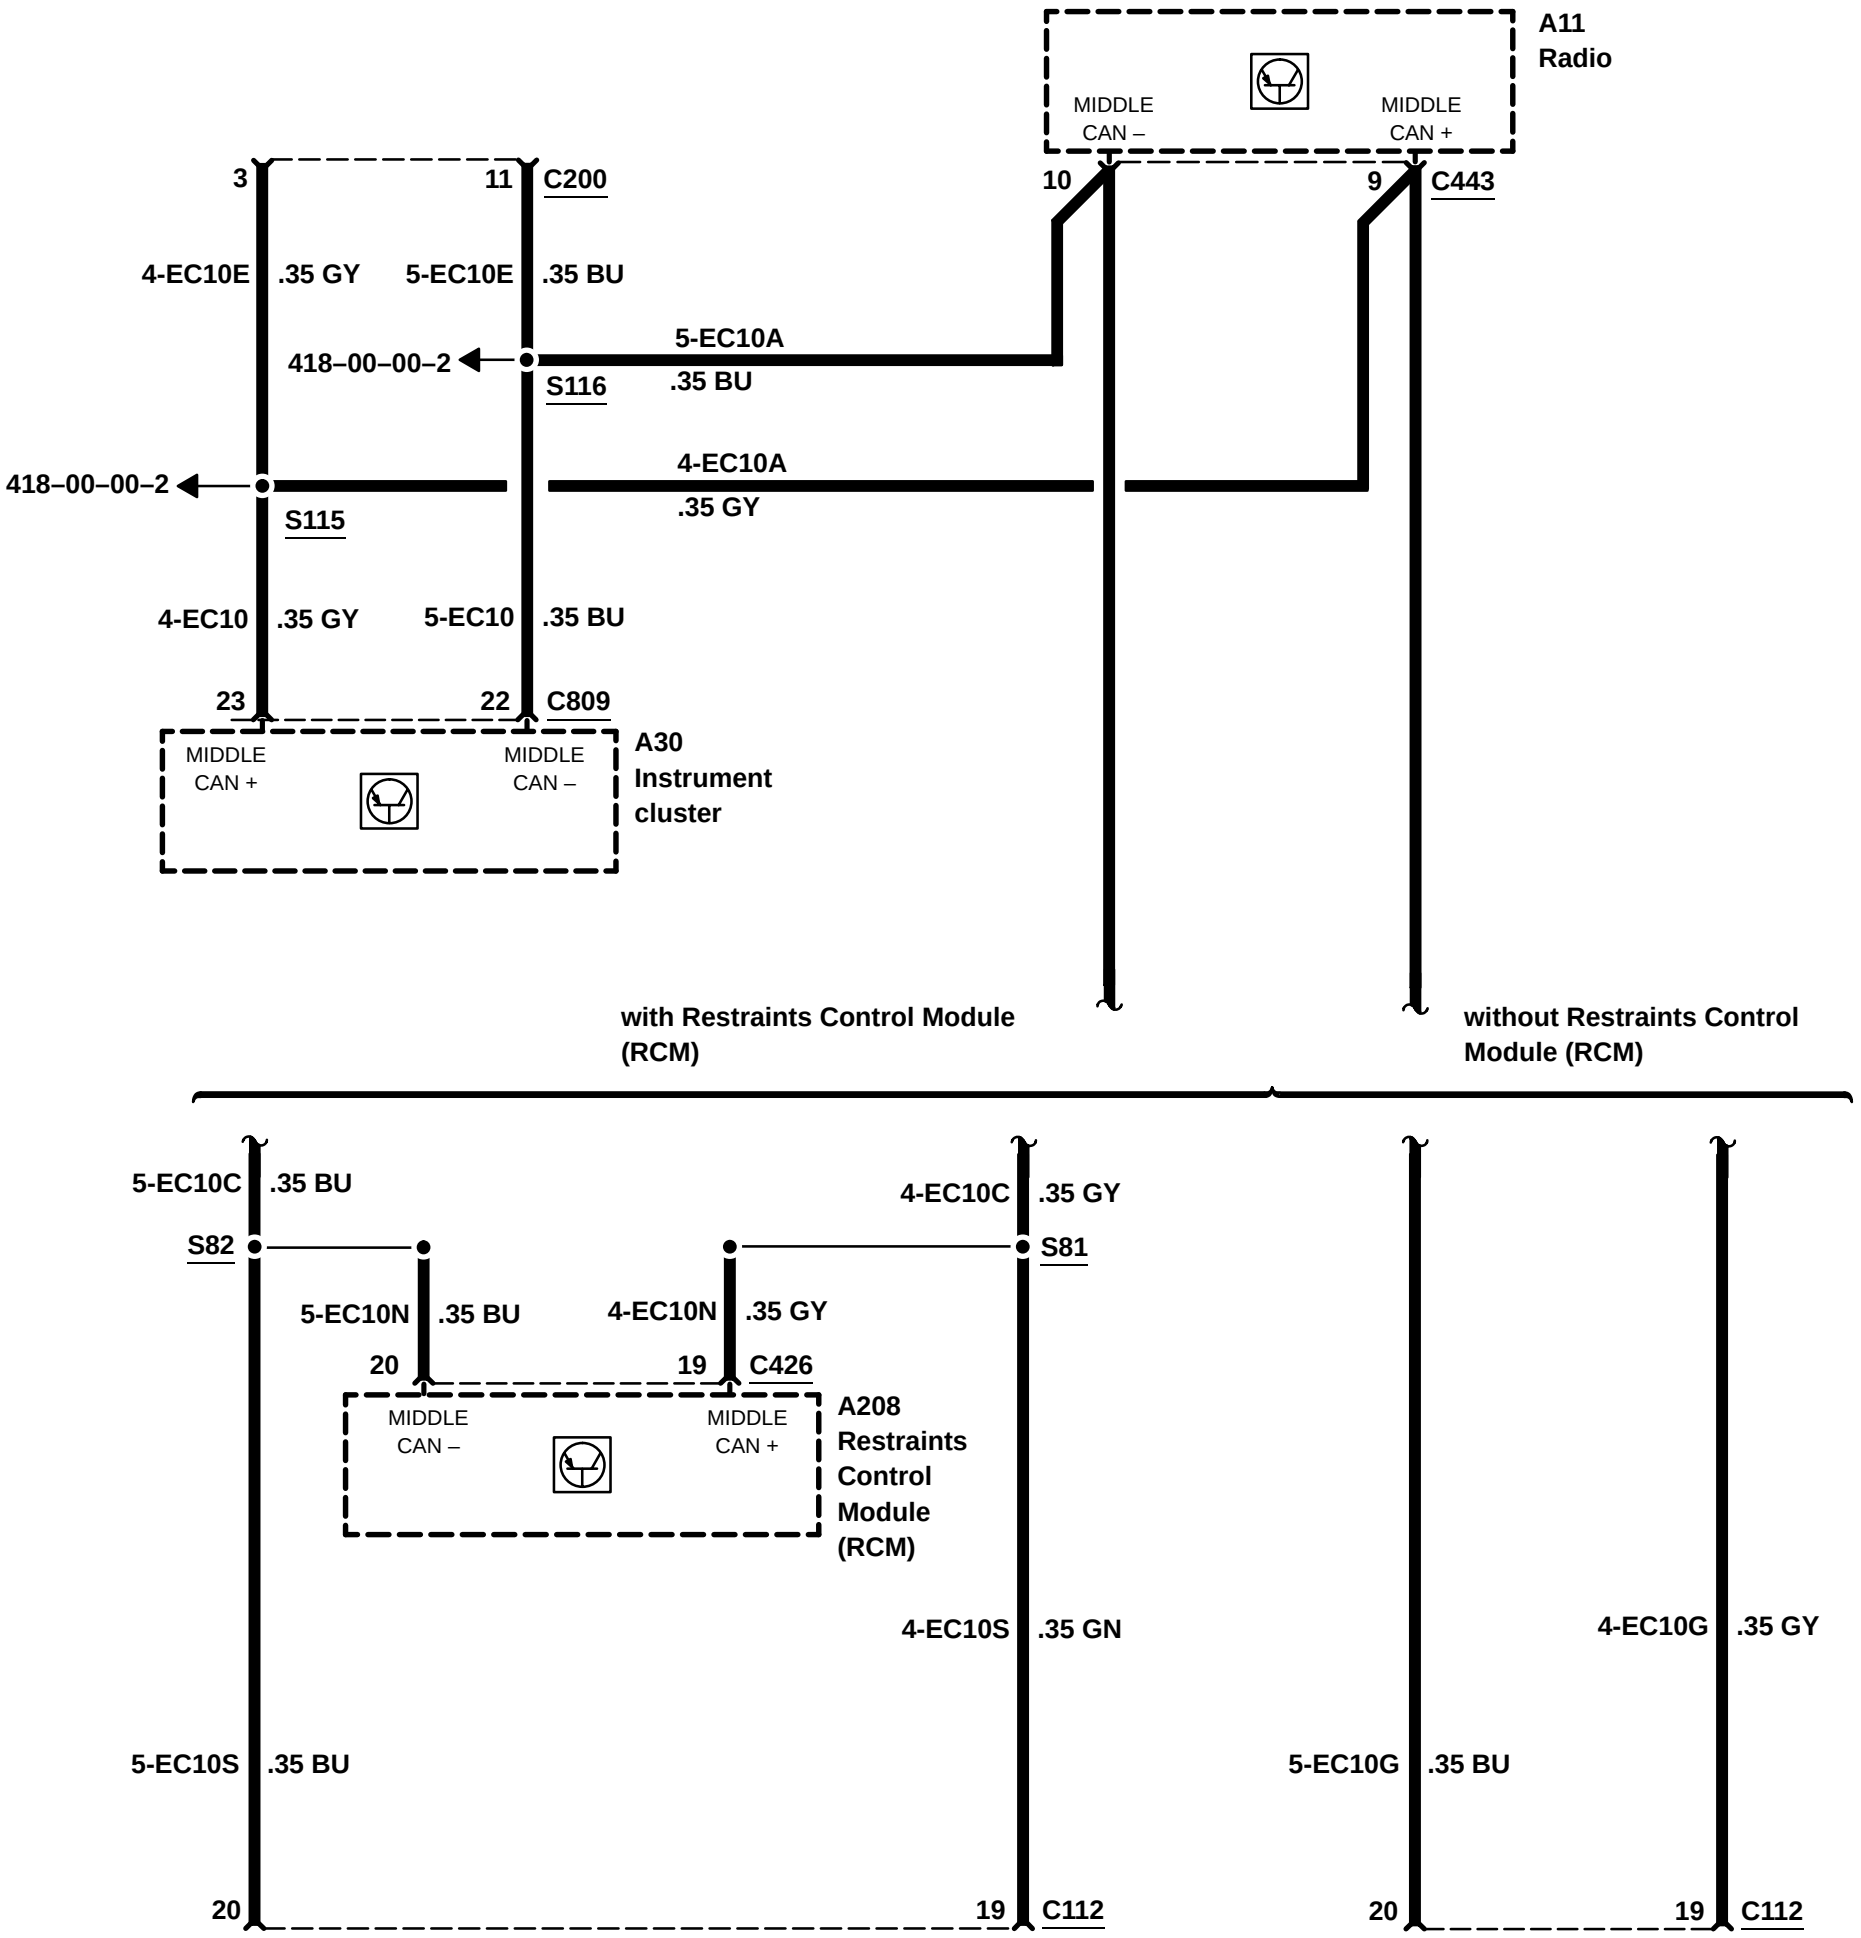

418–00–00–11	LHD, with parking aid
418–00–00–12	LHD, without parking aid
418–00–00–13	RHD, with parking aid
418–00–00–14	RHD, without parking aid
418–00–00–15	with front power windows


Module Communications Network – Data Link Connector (DLC), with front and rear power windows, with parking aid, LHD

418–00–00–8 with EATC, with air bags
418–00–00–9 with EATC, without air bags
418–00–00–10 with EATC, without EATC

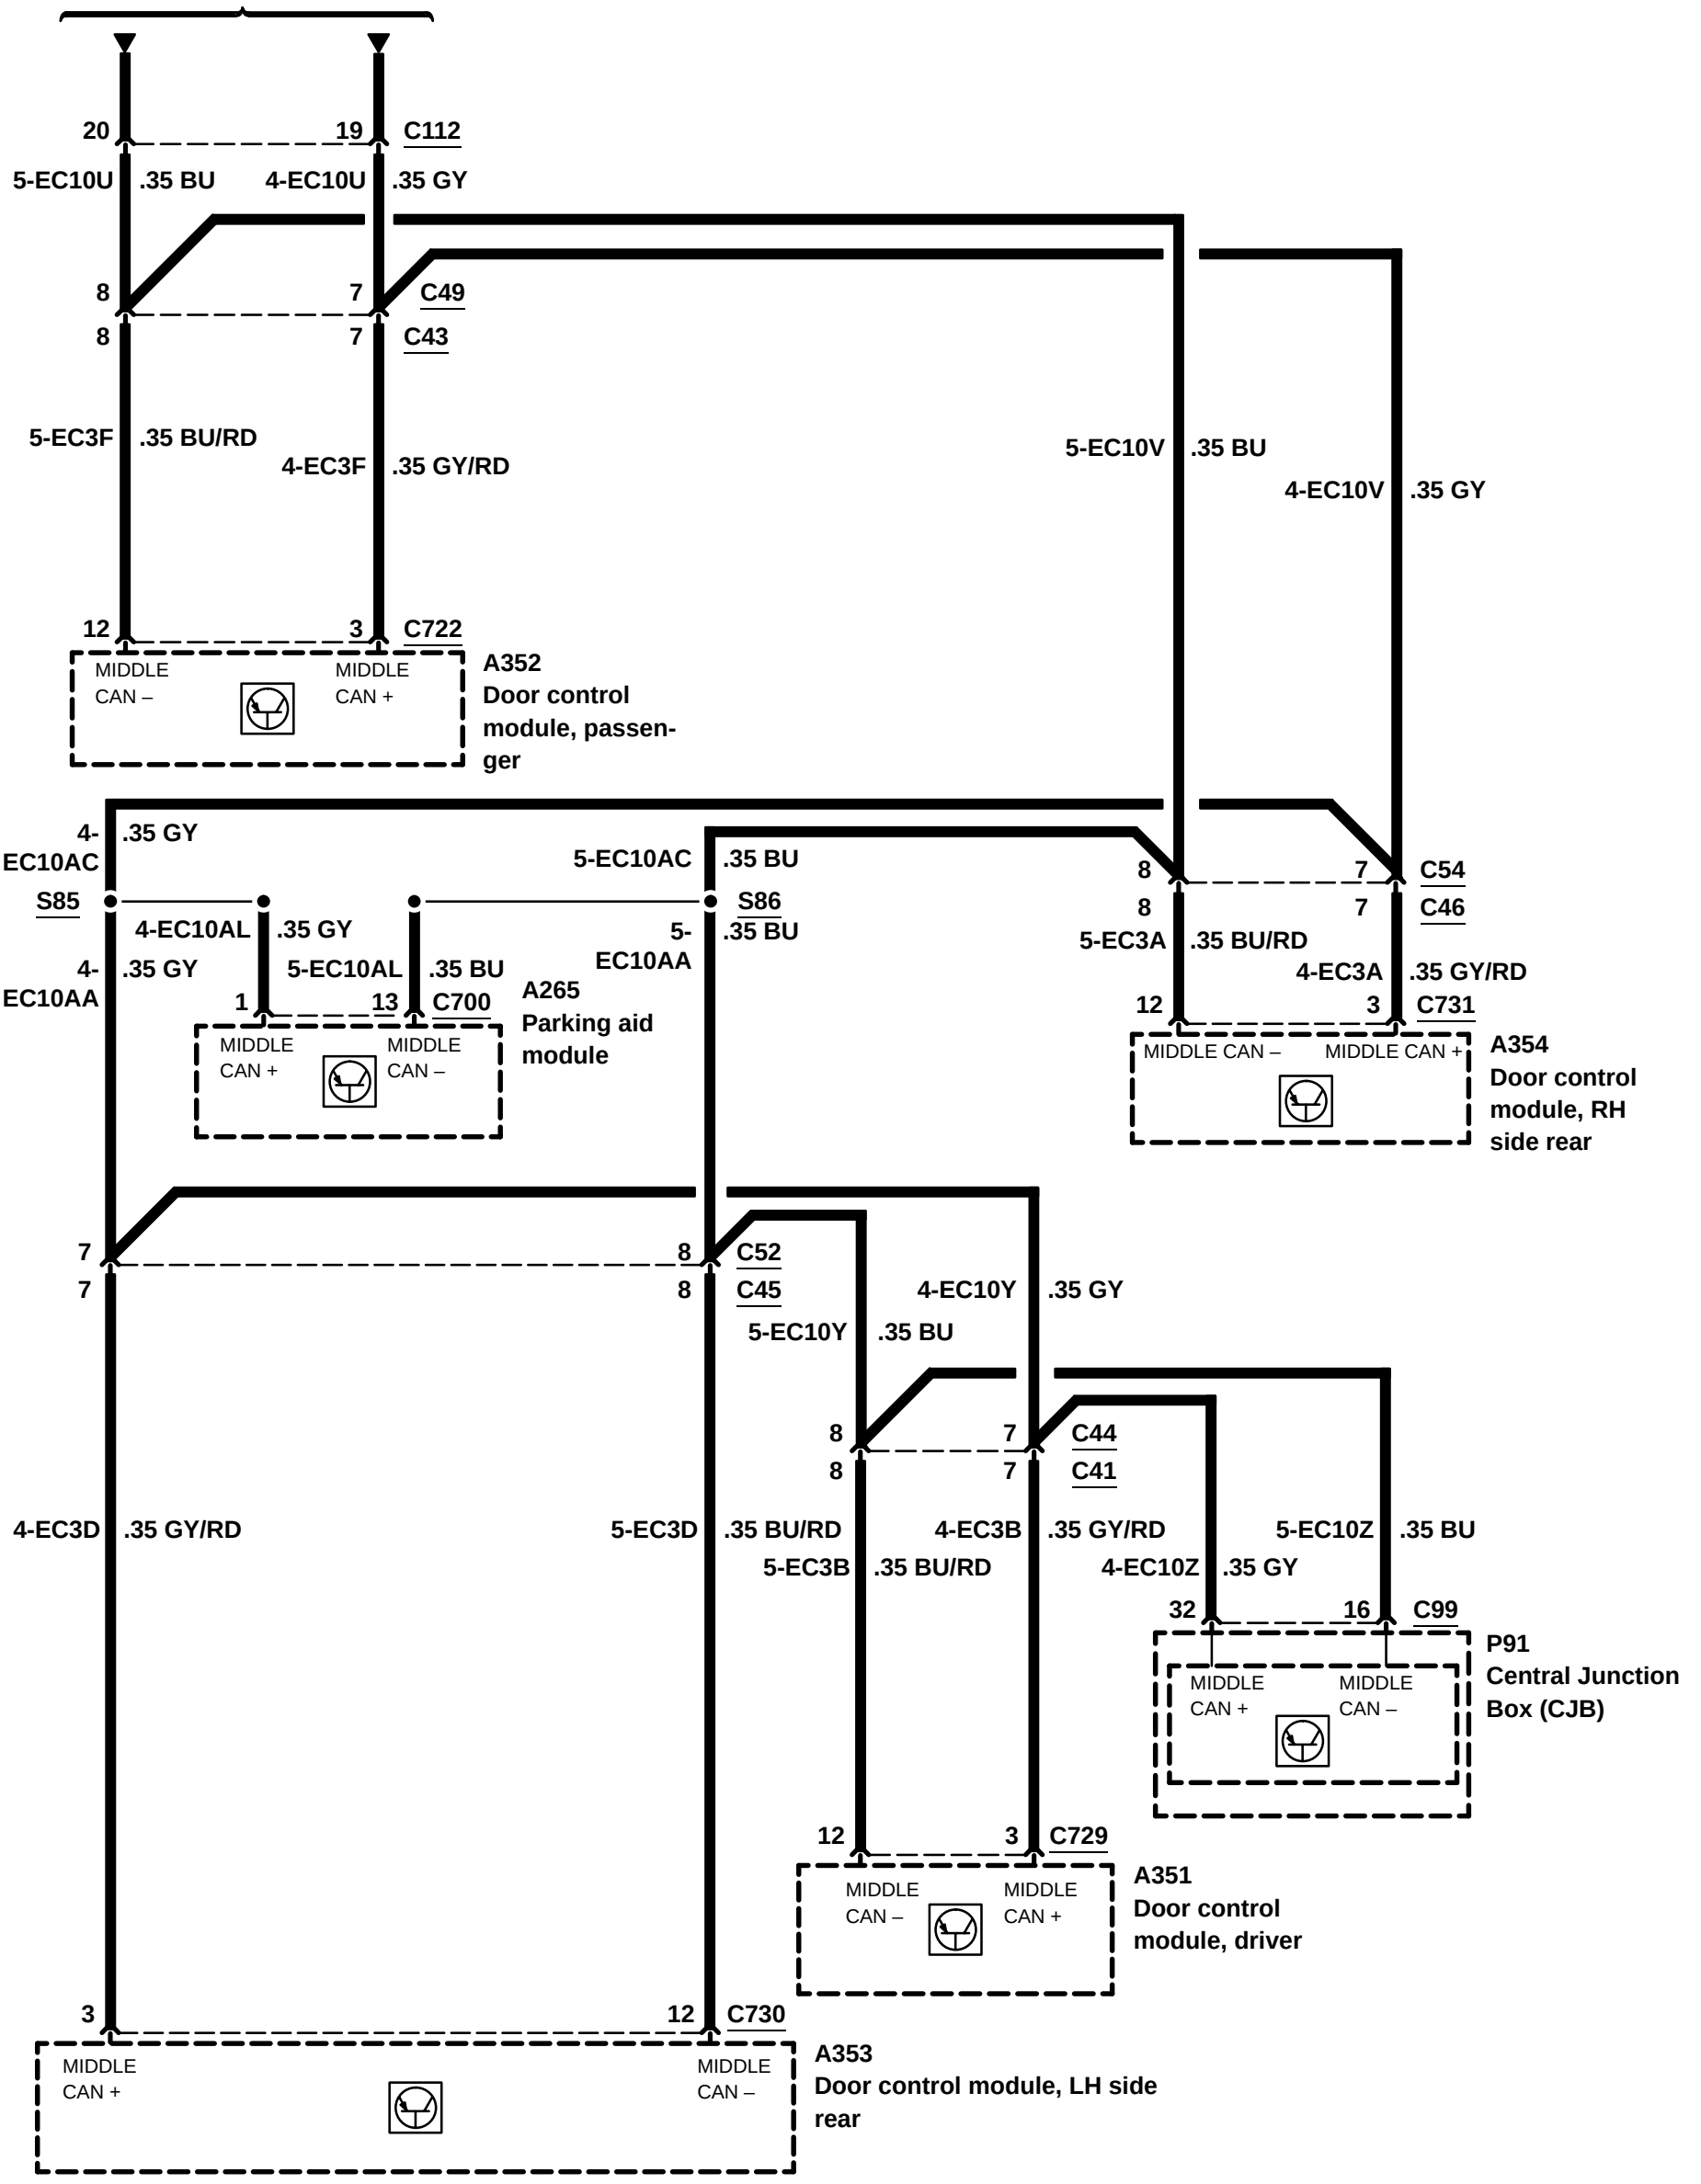


Module Communications Network – Data Link Connector (DLC), with front and rear power windows, without parking aid, LHD

418–00–00–8 with EATC, with air bags
418–00–00–9 with EATC, without air bags
418–00–00–10 without EATC

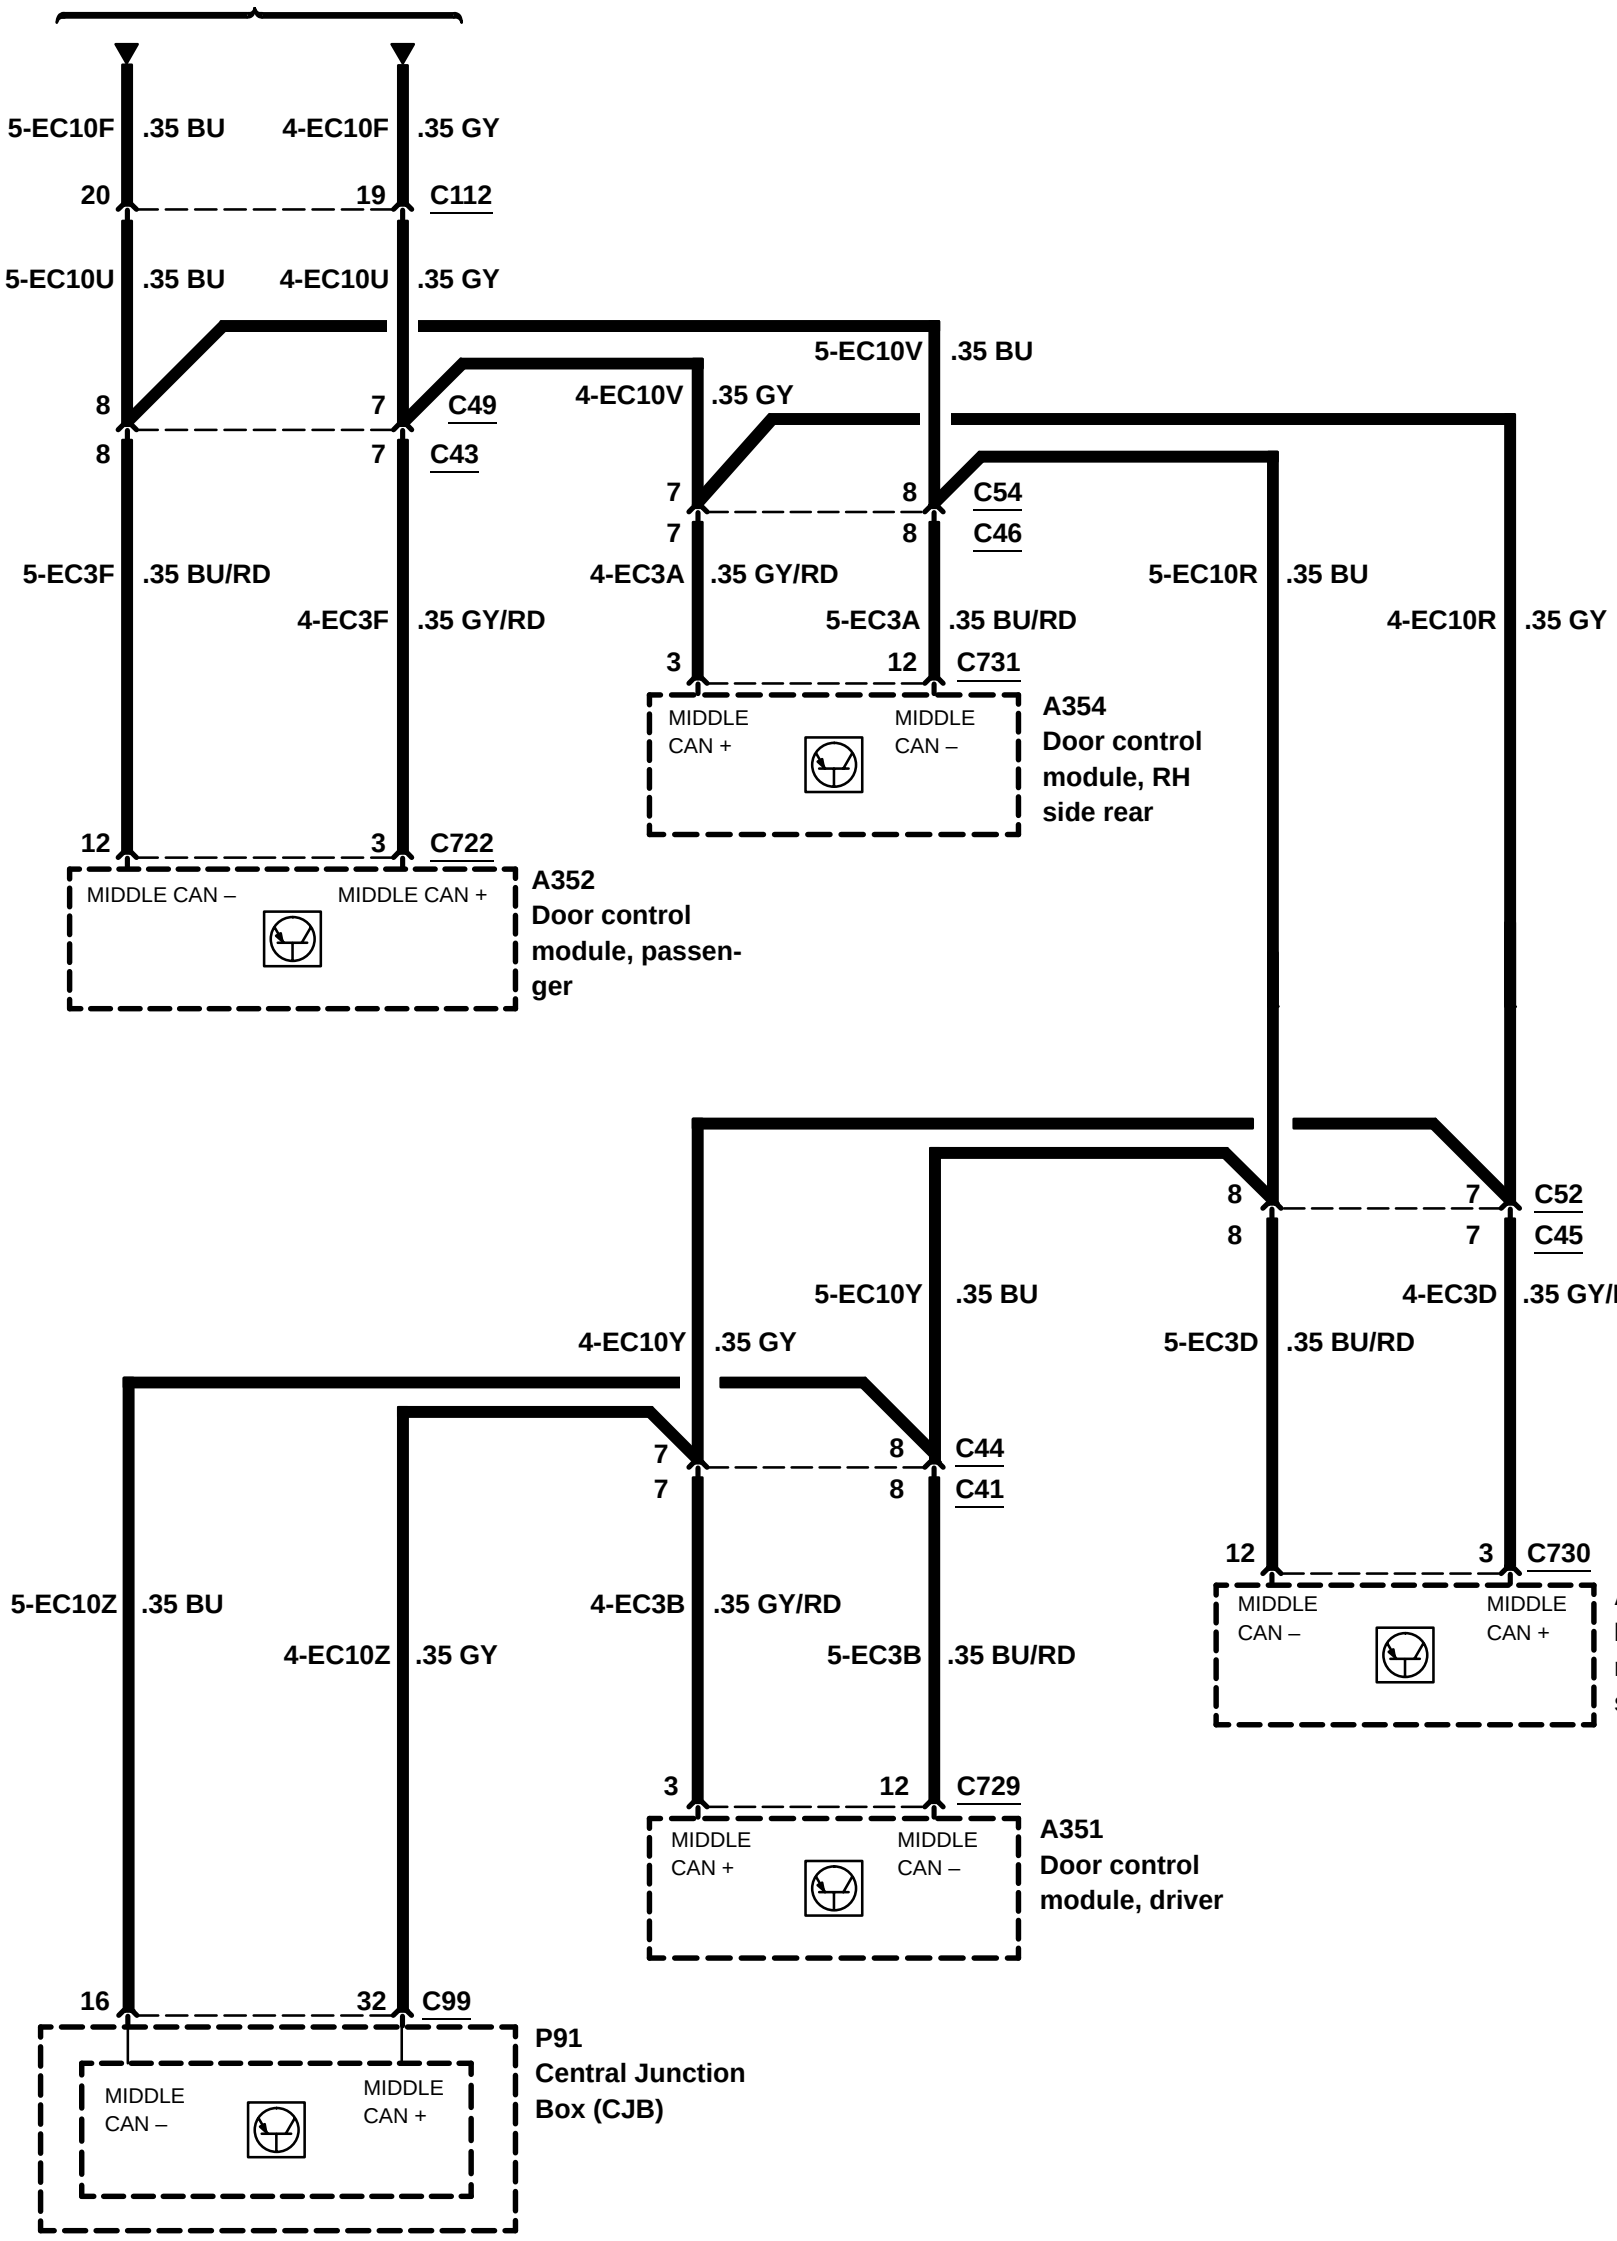


Module Communications Network – Data Link Connector (DLC), with front and rear power windows, with parking aid, RHD

418–00–00–8 with EATC, with air bags
418–00–00–9 with EATC, without air bags
418–00–00–10 without EATC

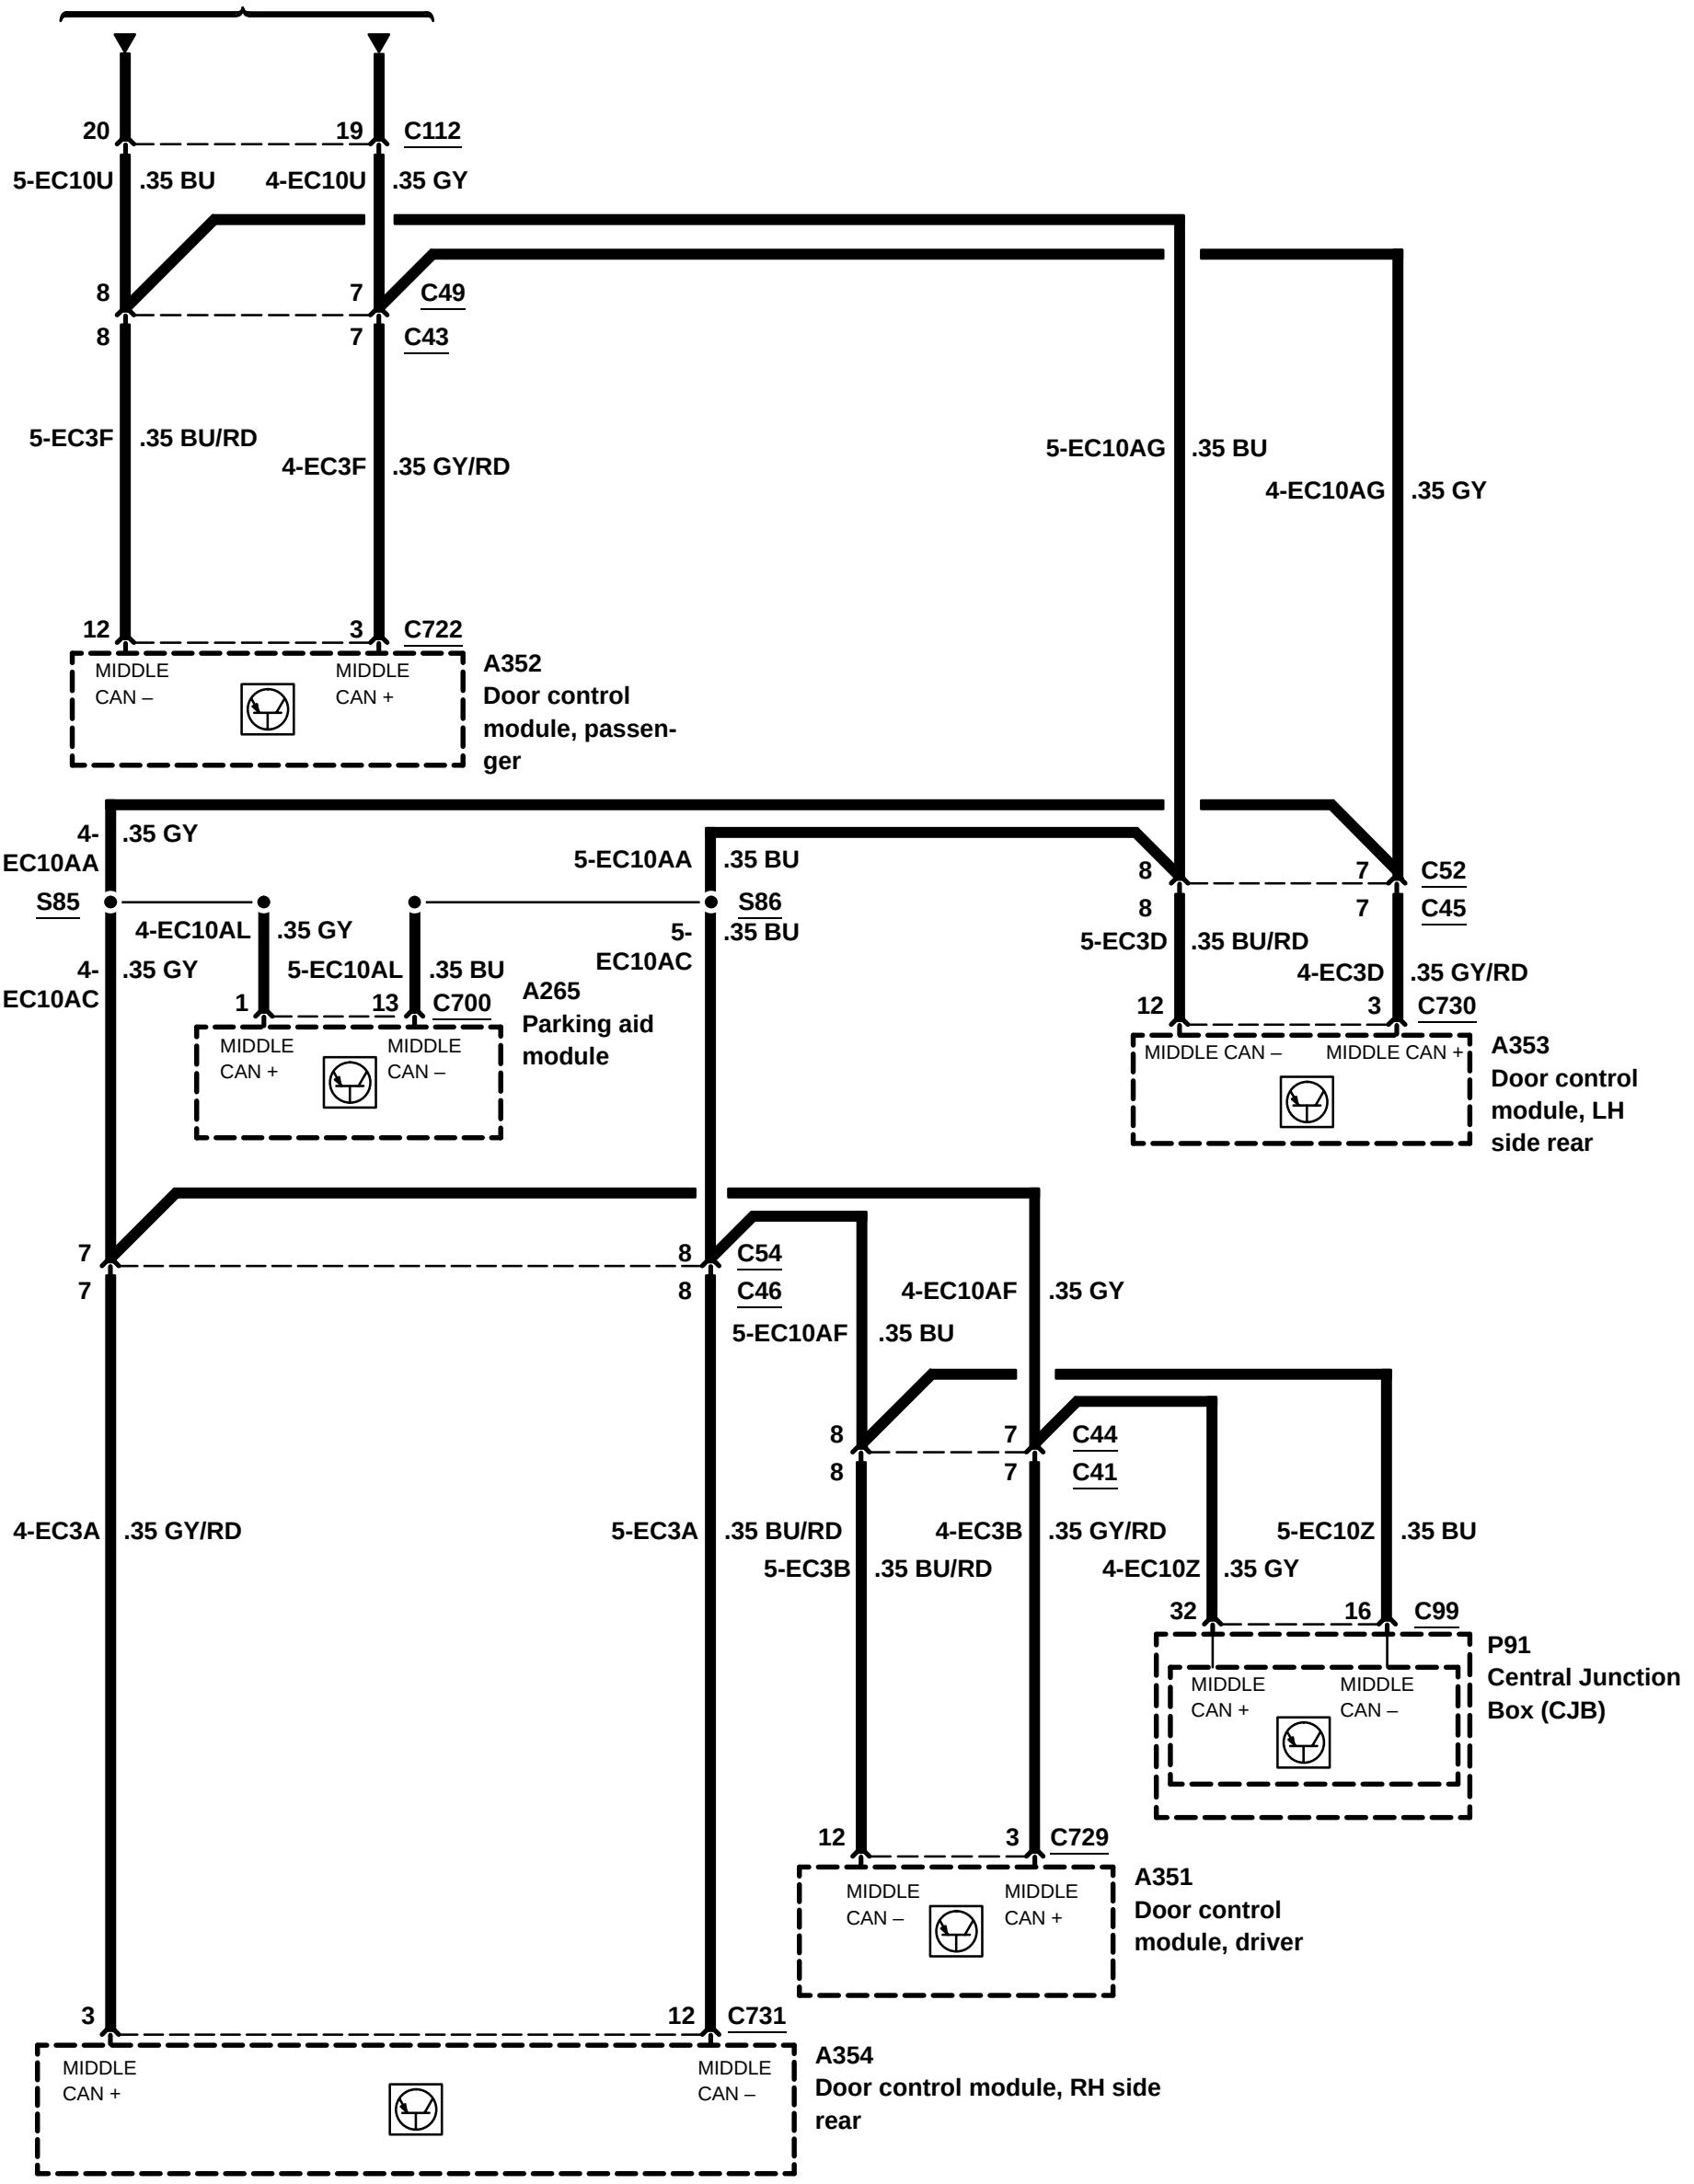


Module Communications Network – Data Link Connector (DLC), with front and rear power windows, without parking aid, RHD

418–00–00–8 with EATC, with air bags
418–00–00–9 with EATC, without air bags
418–00–00–10 without EATC

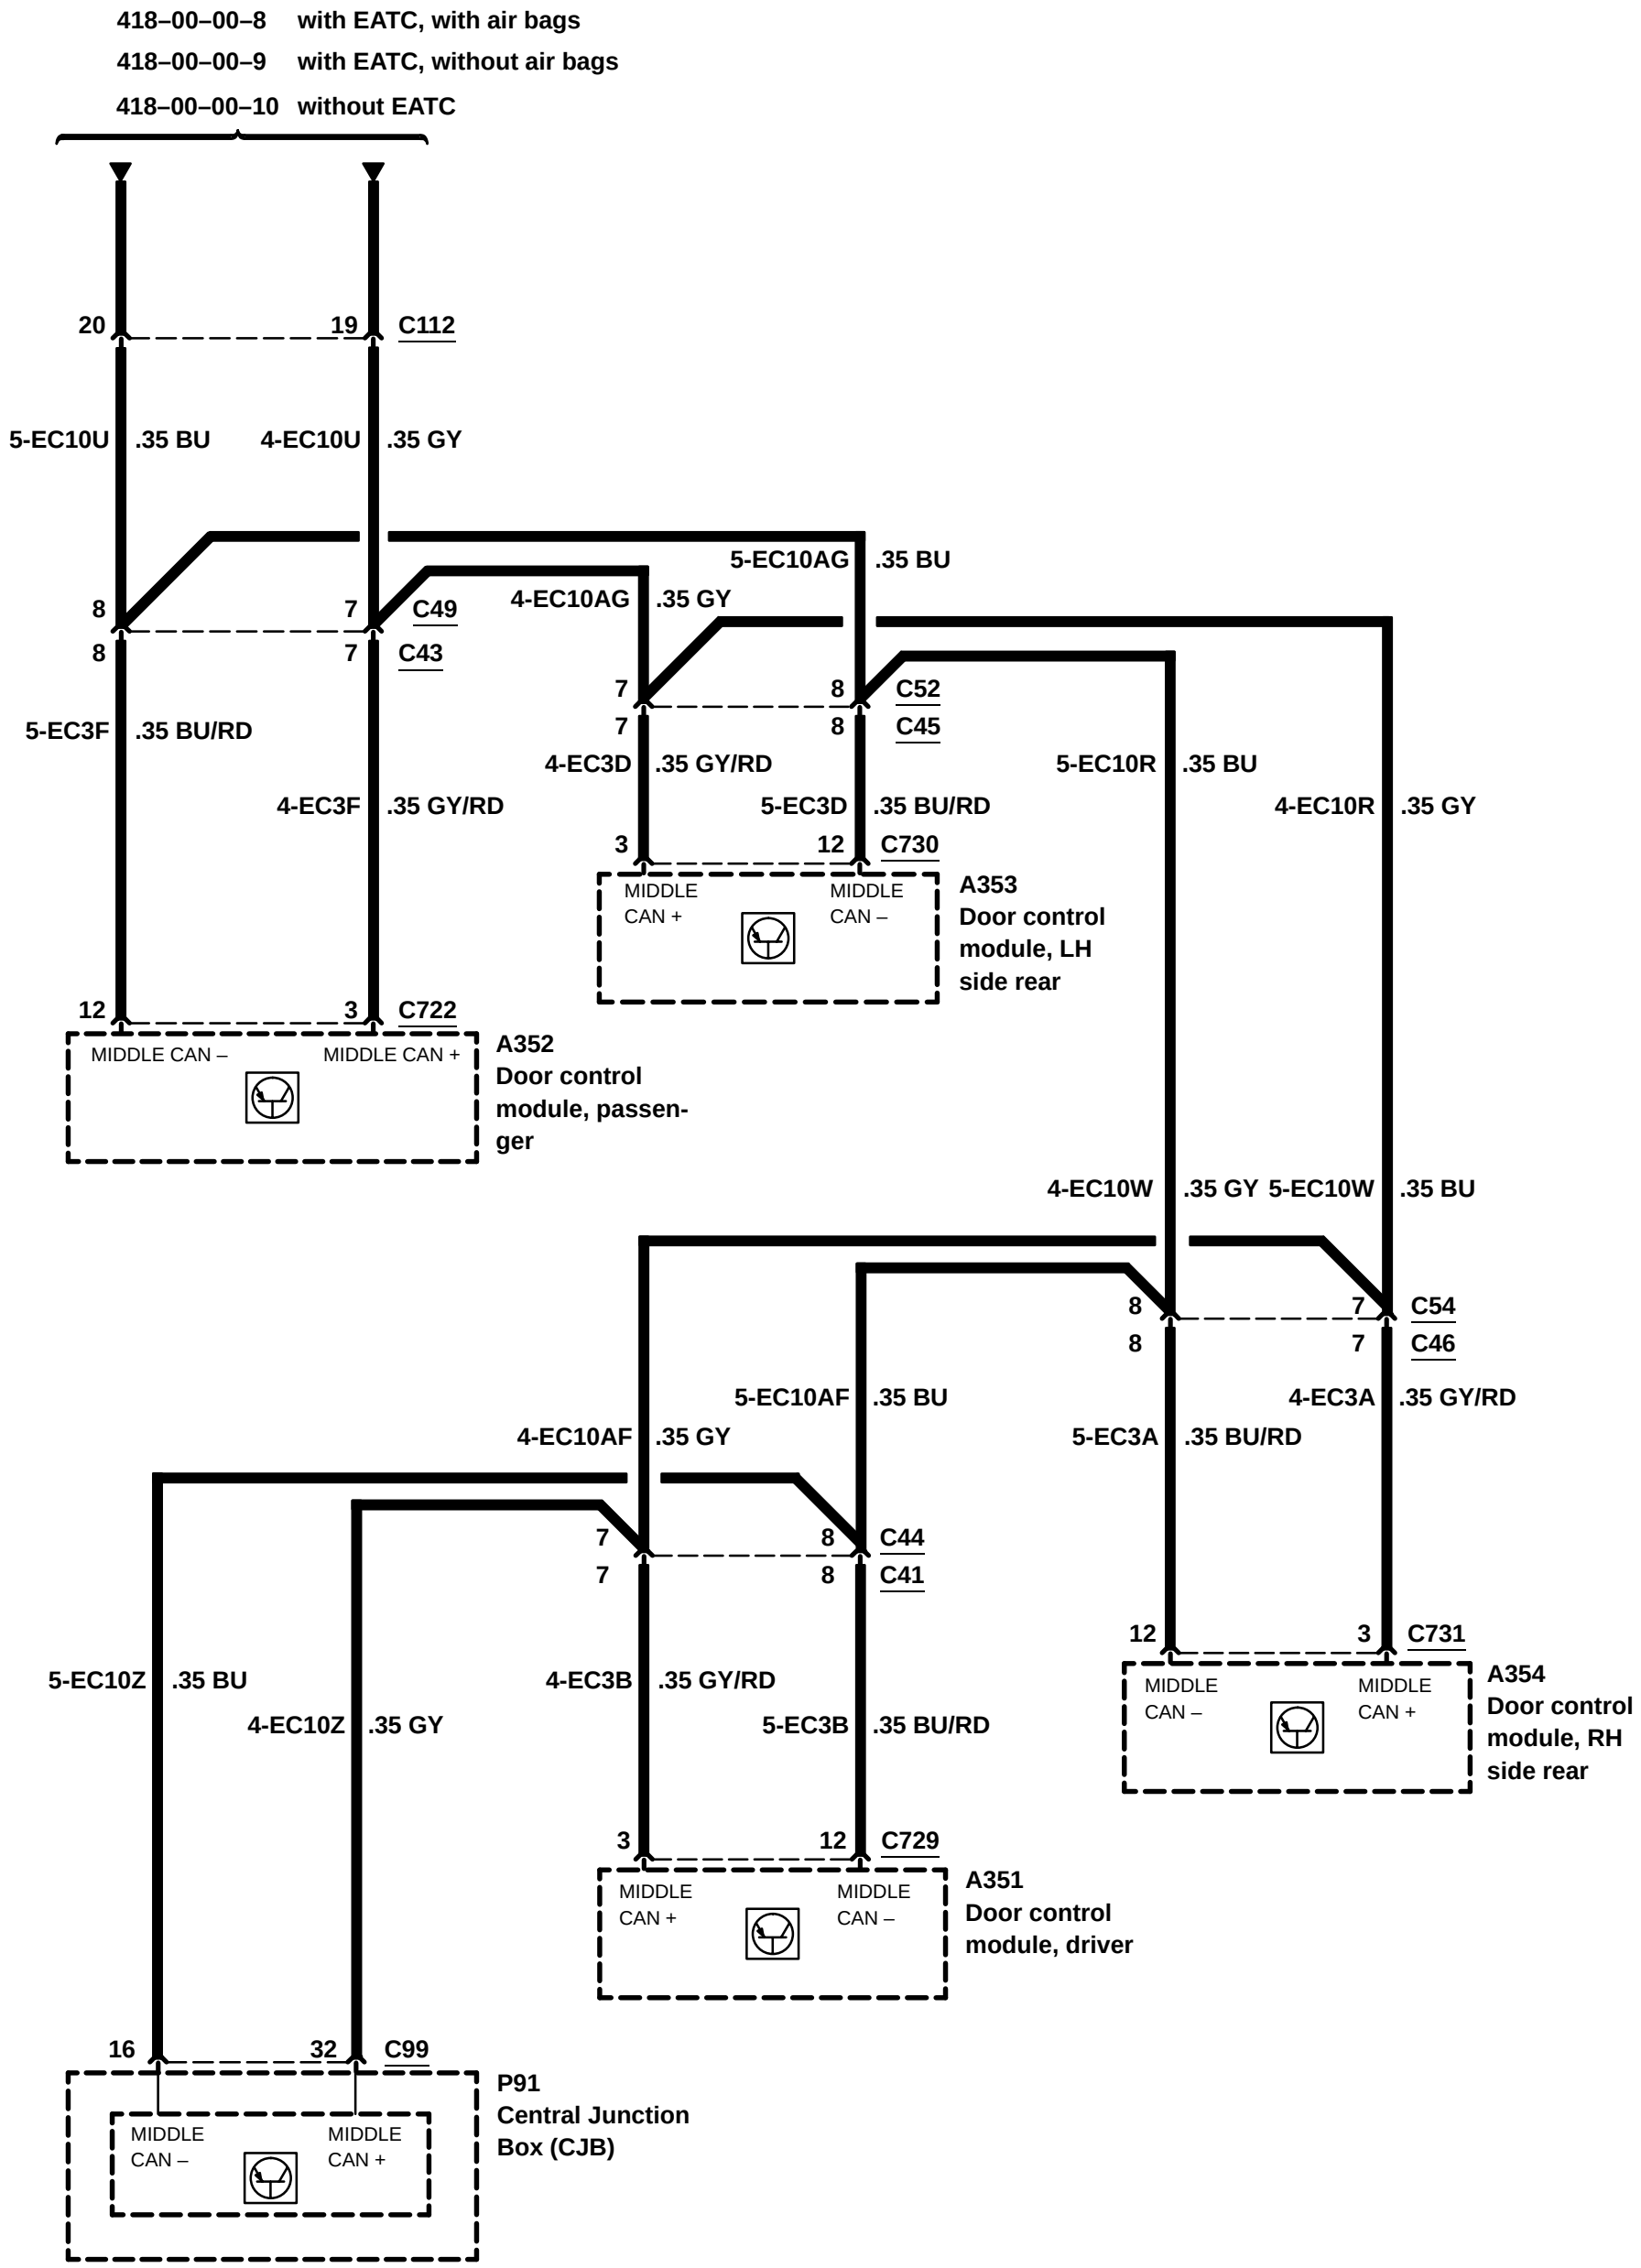

Module Communications Network – Data Link Connector (DLC), with front power windows


418–00–00–8 with EATC, with air bags
418–00–00–9 with EATC, without air bags
418–00–00–10 without EATC

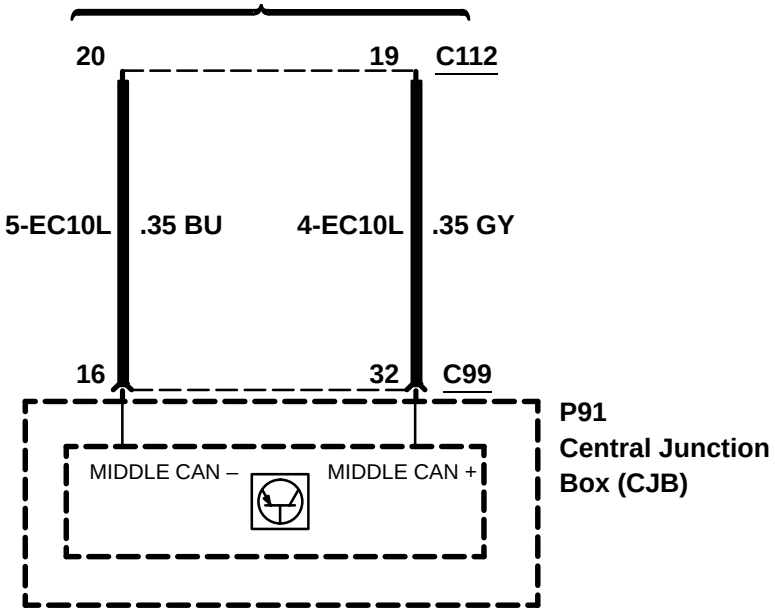

Module Communications Network – Data Link Connector (DLC)


C200

F16079

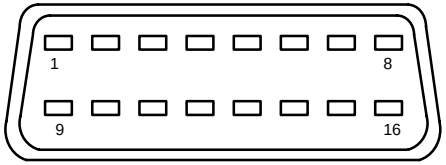


Pin number	Description	Wire colours
1		
2		
3	CAN Bus +	GY
4	Chassis Ground	BK
5	Signal Ground	BK/OG
6	CAN Bus +	GY/RD
7		
8		
9		
10		
11	CAN Bus –	BU
12		
13		
14	CAN Bus –	BU/RD
15		
16	Battery Power	OG


Anti–Theft – Active

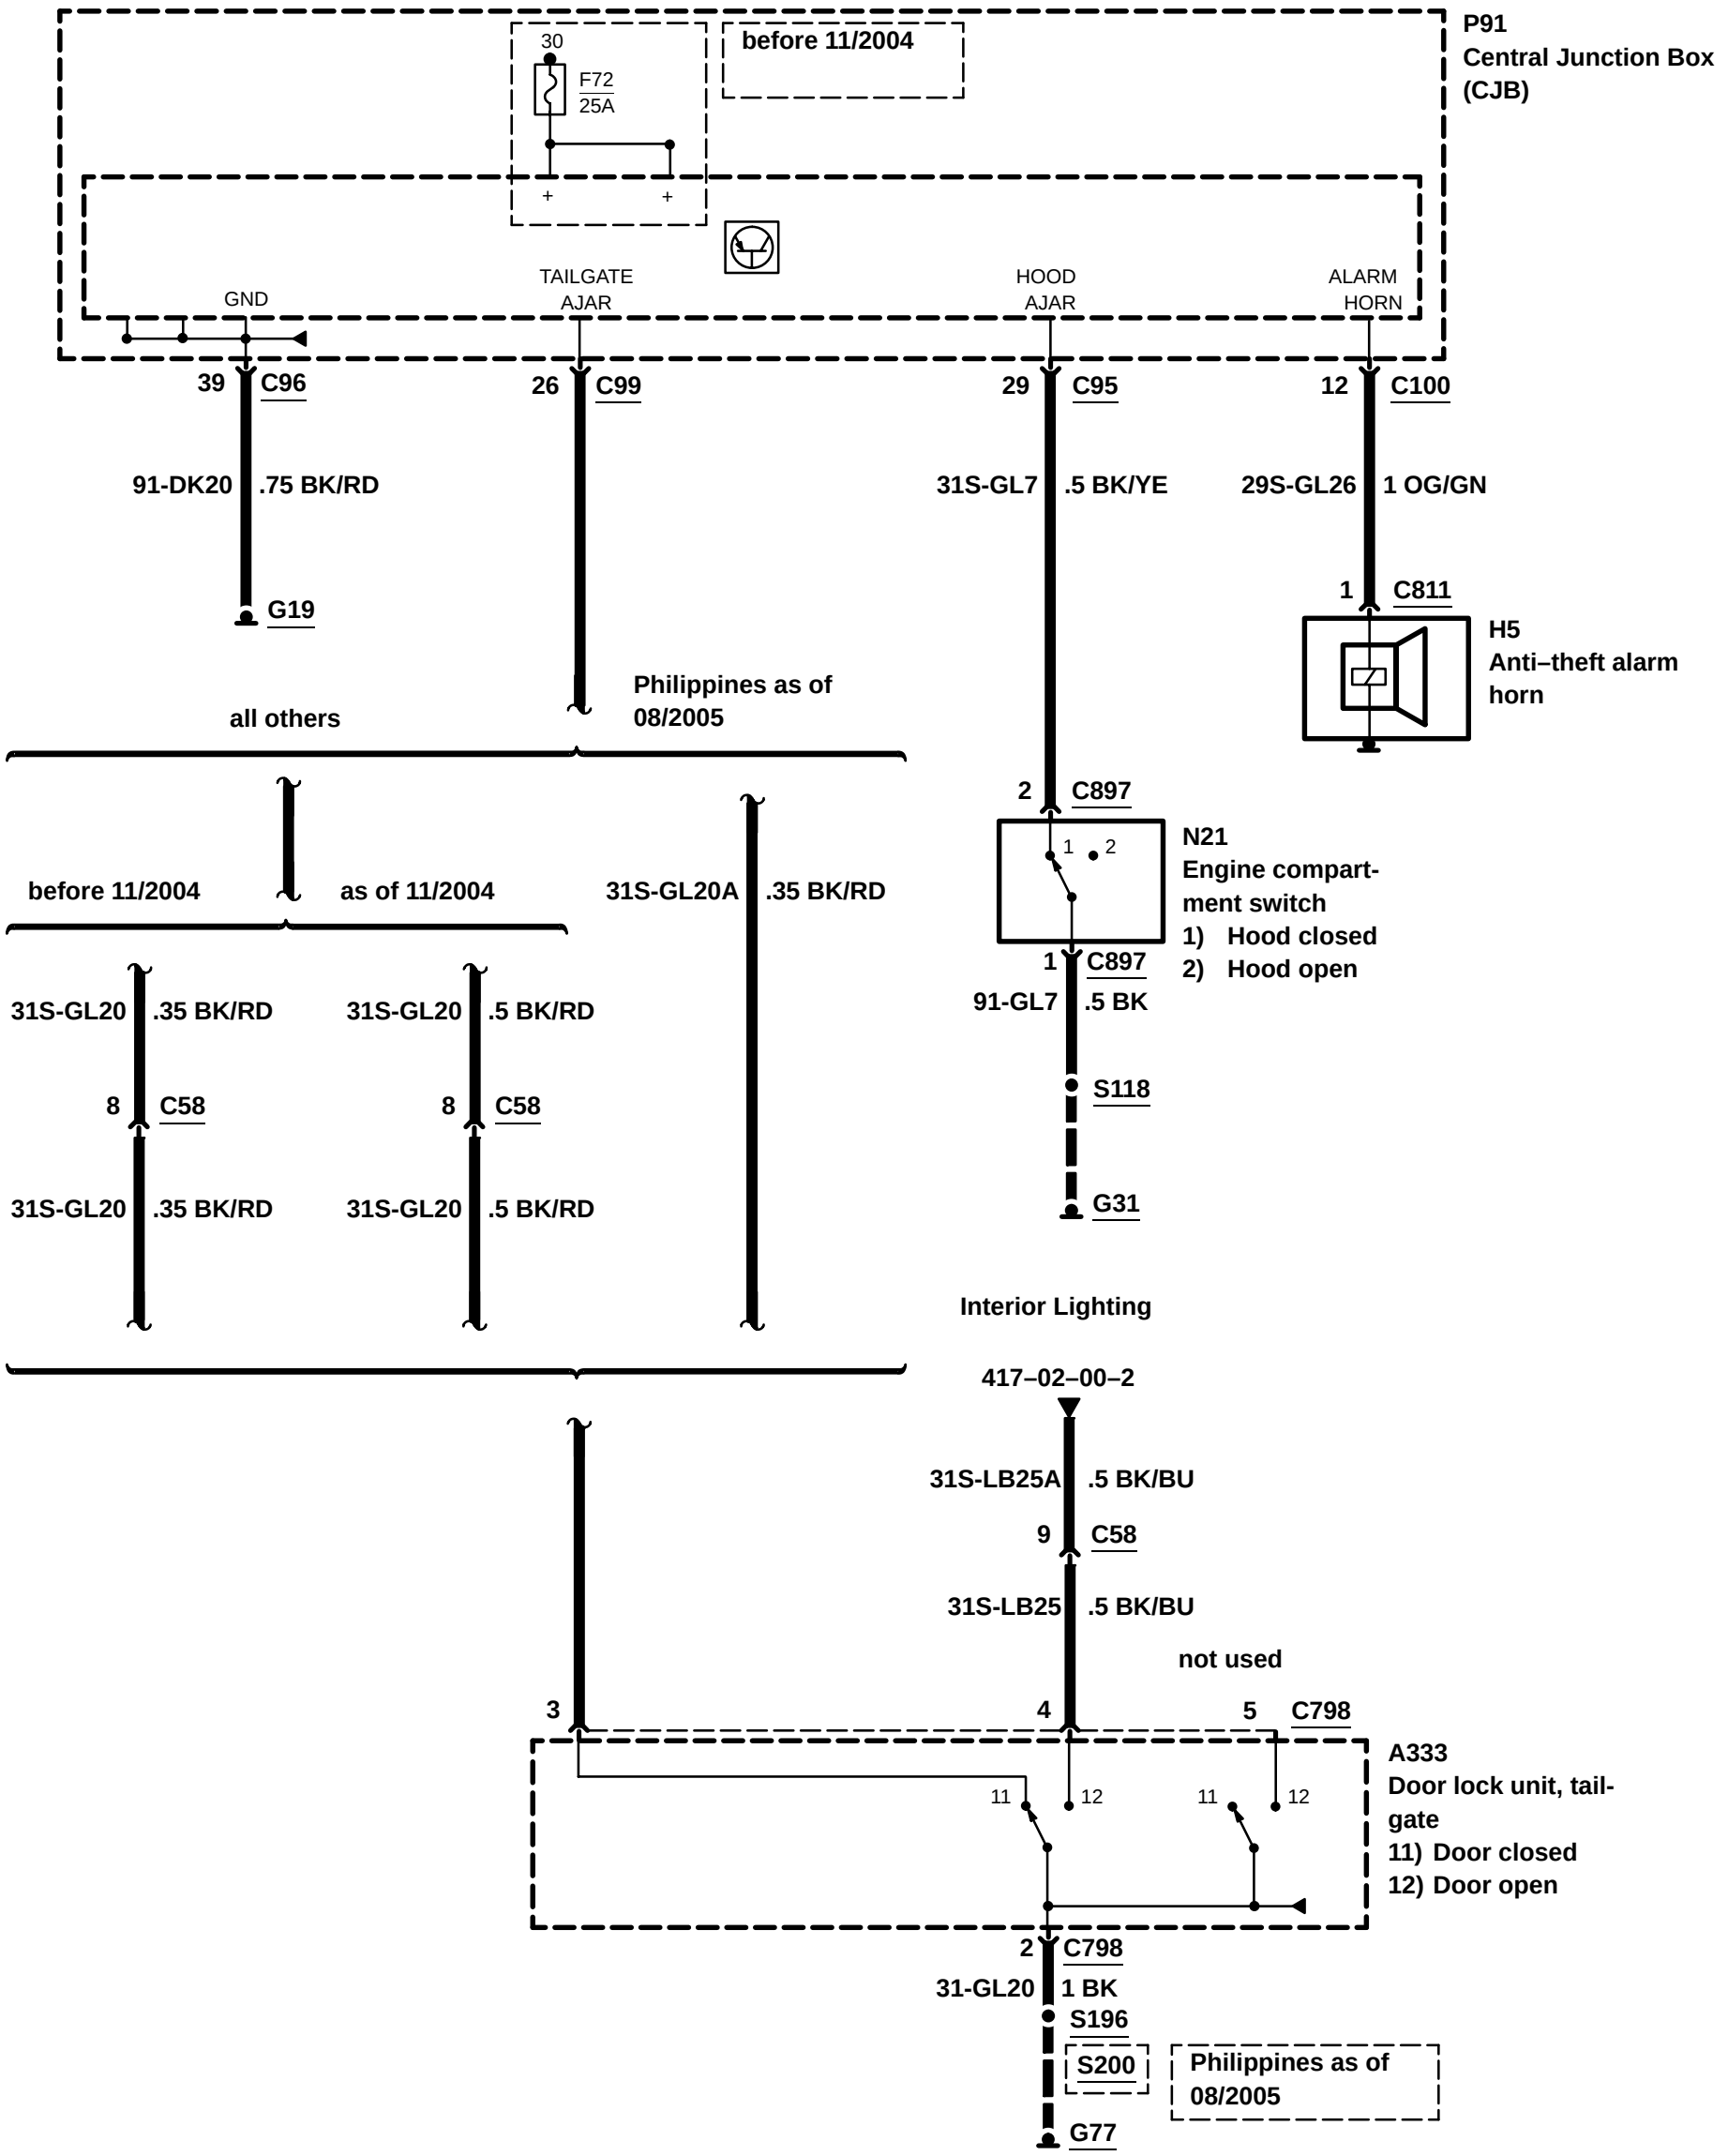


Anti–Theft – Active – with central locking, with front power windows

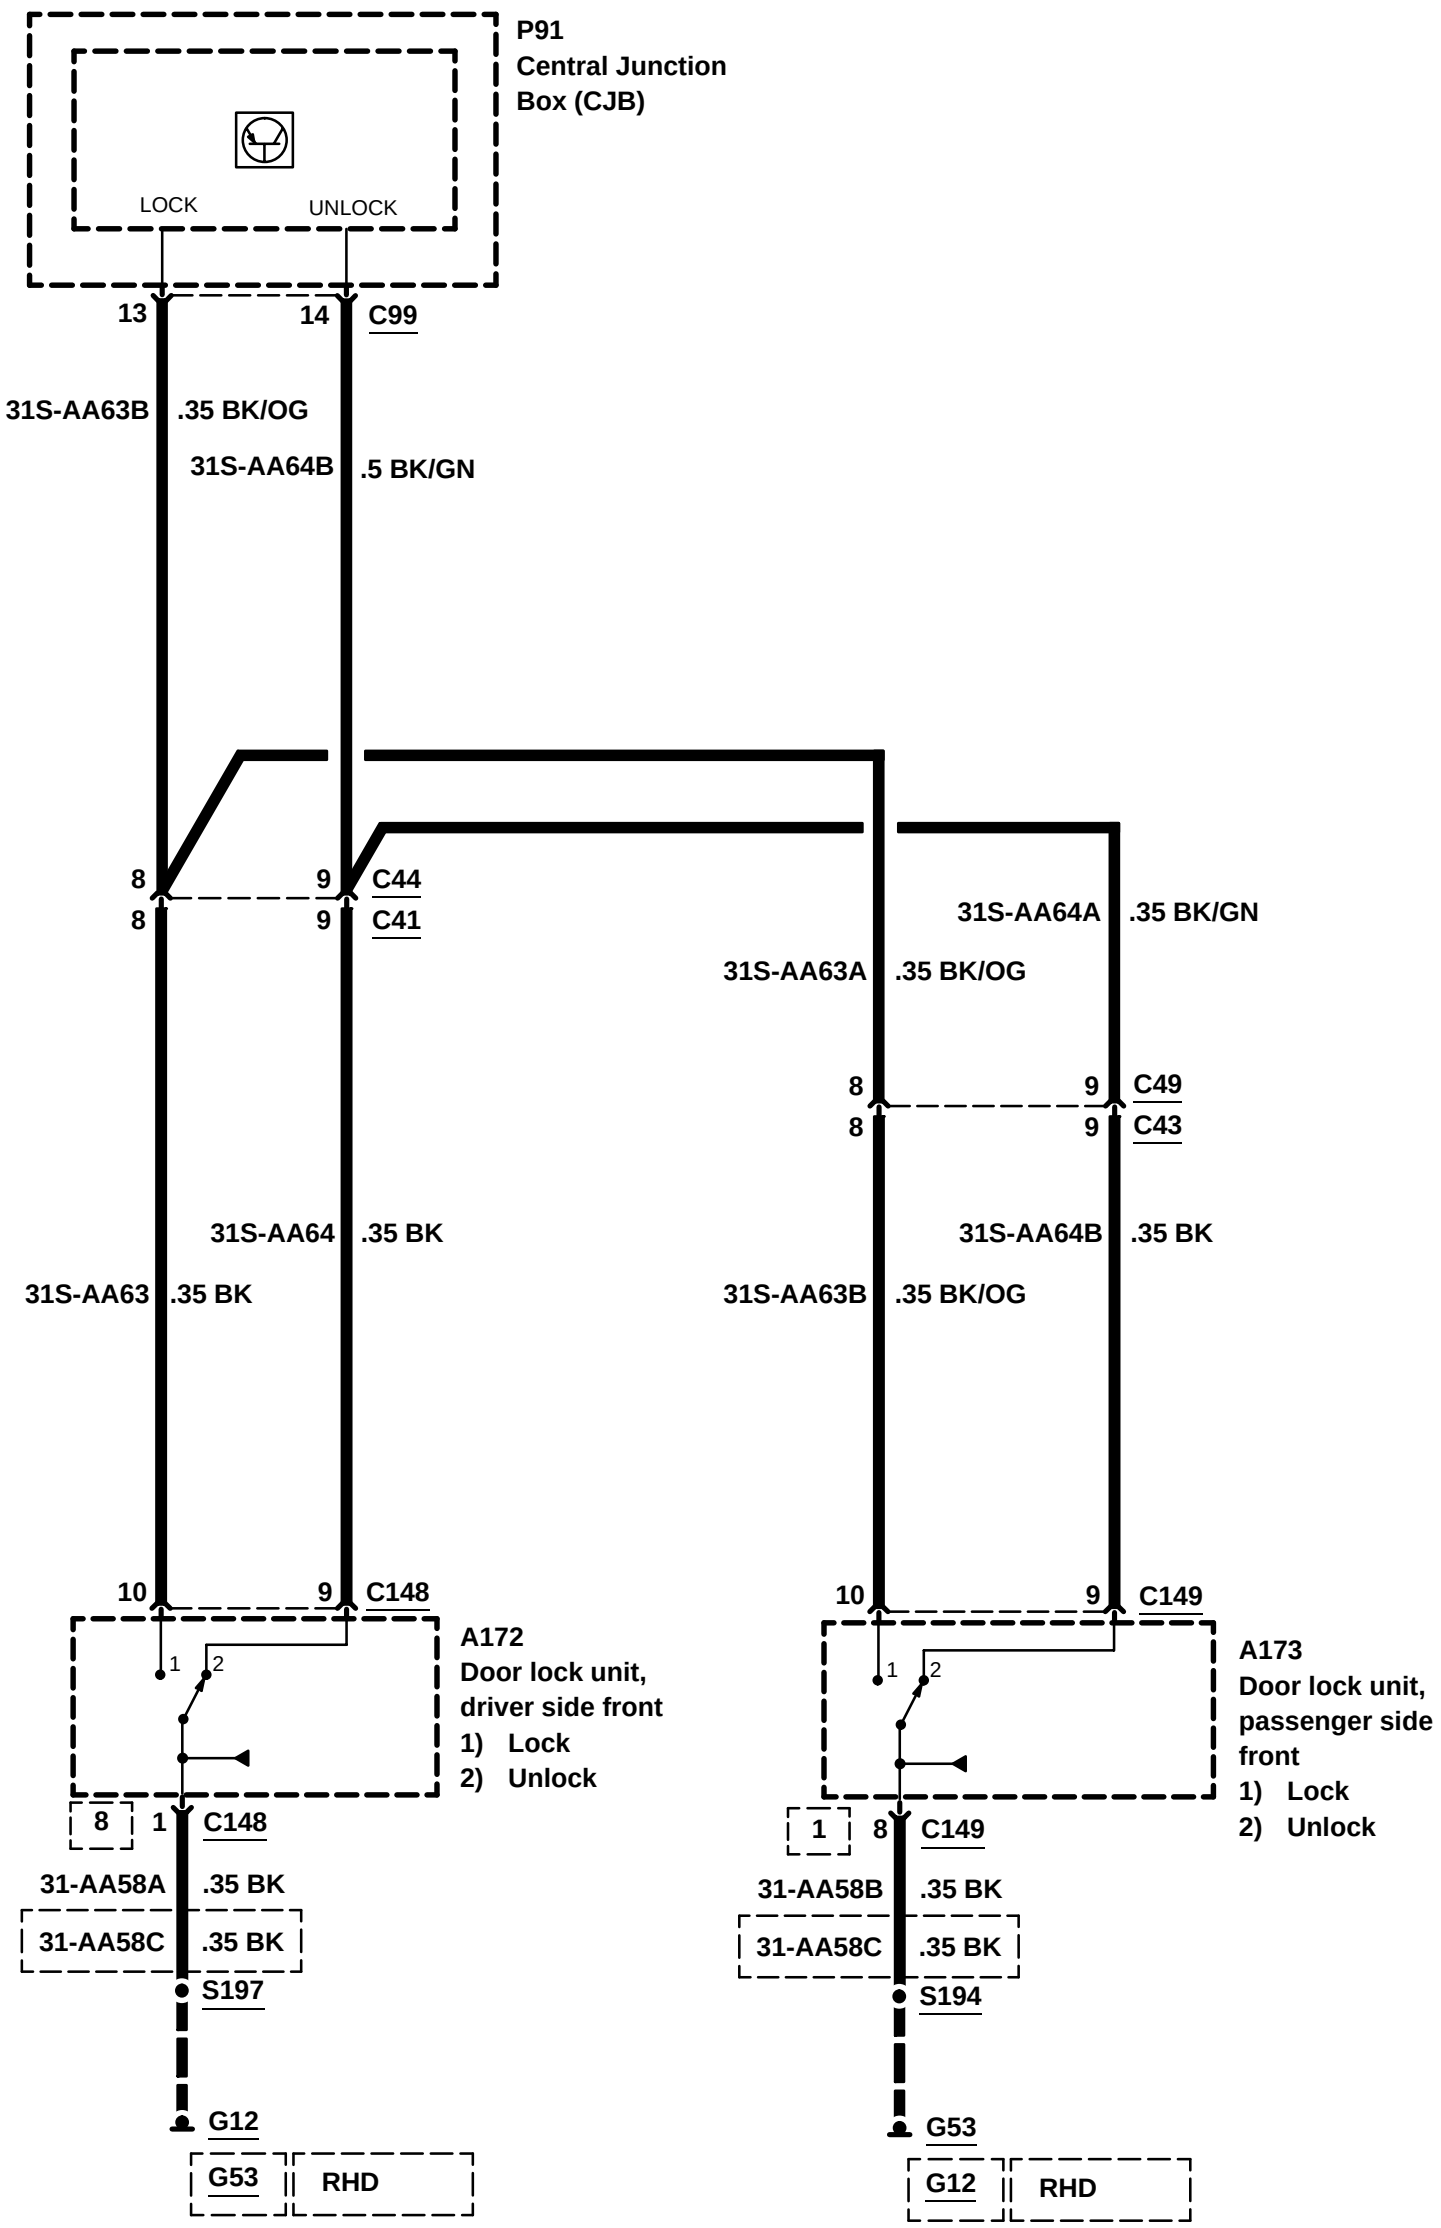


Anti–Theft – Active – with central locking, with front and rear power windows

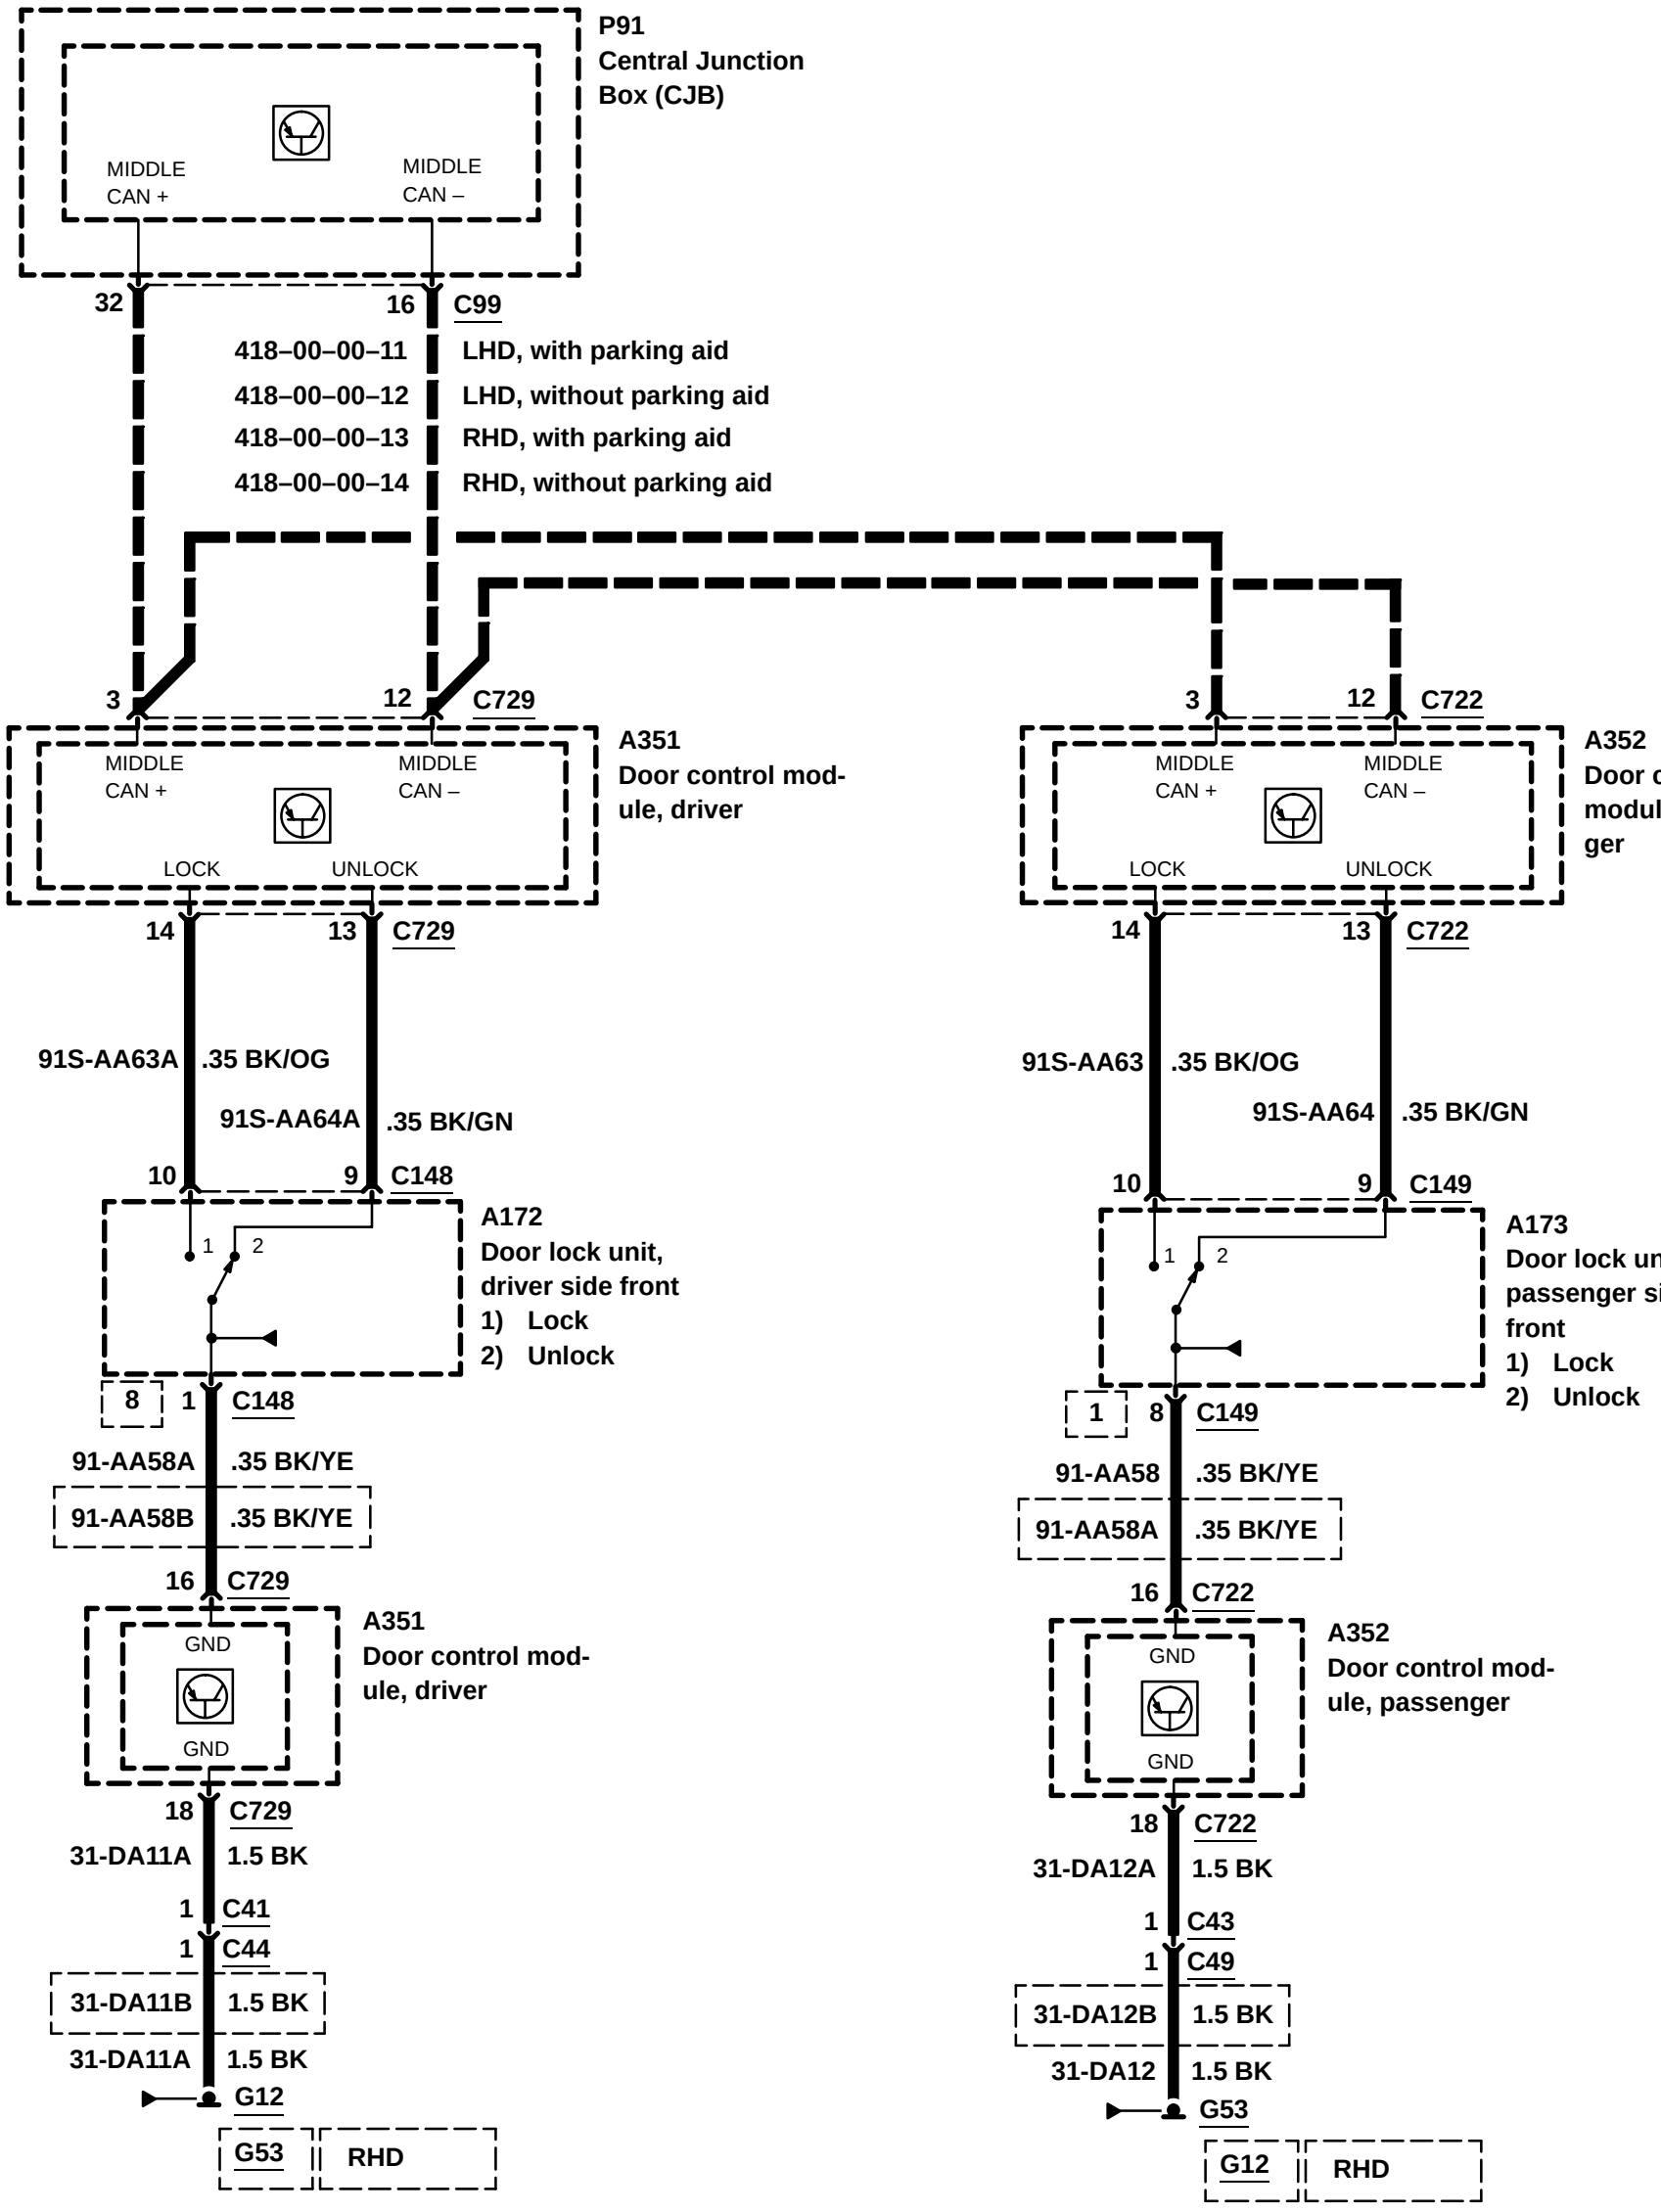


Anti–Theft – Active – with double locking, with front power windows

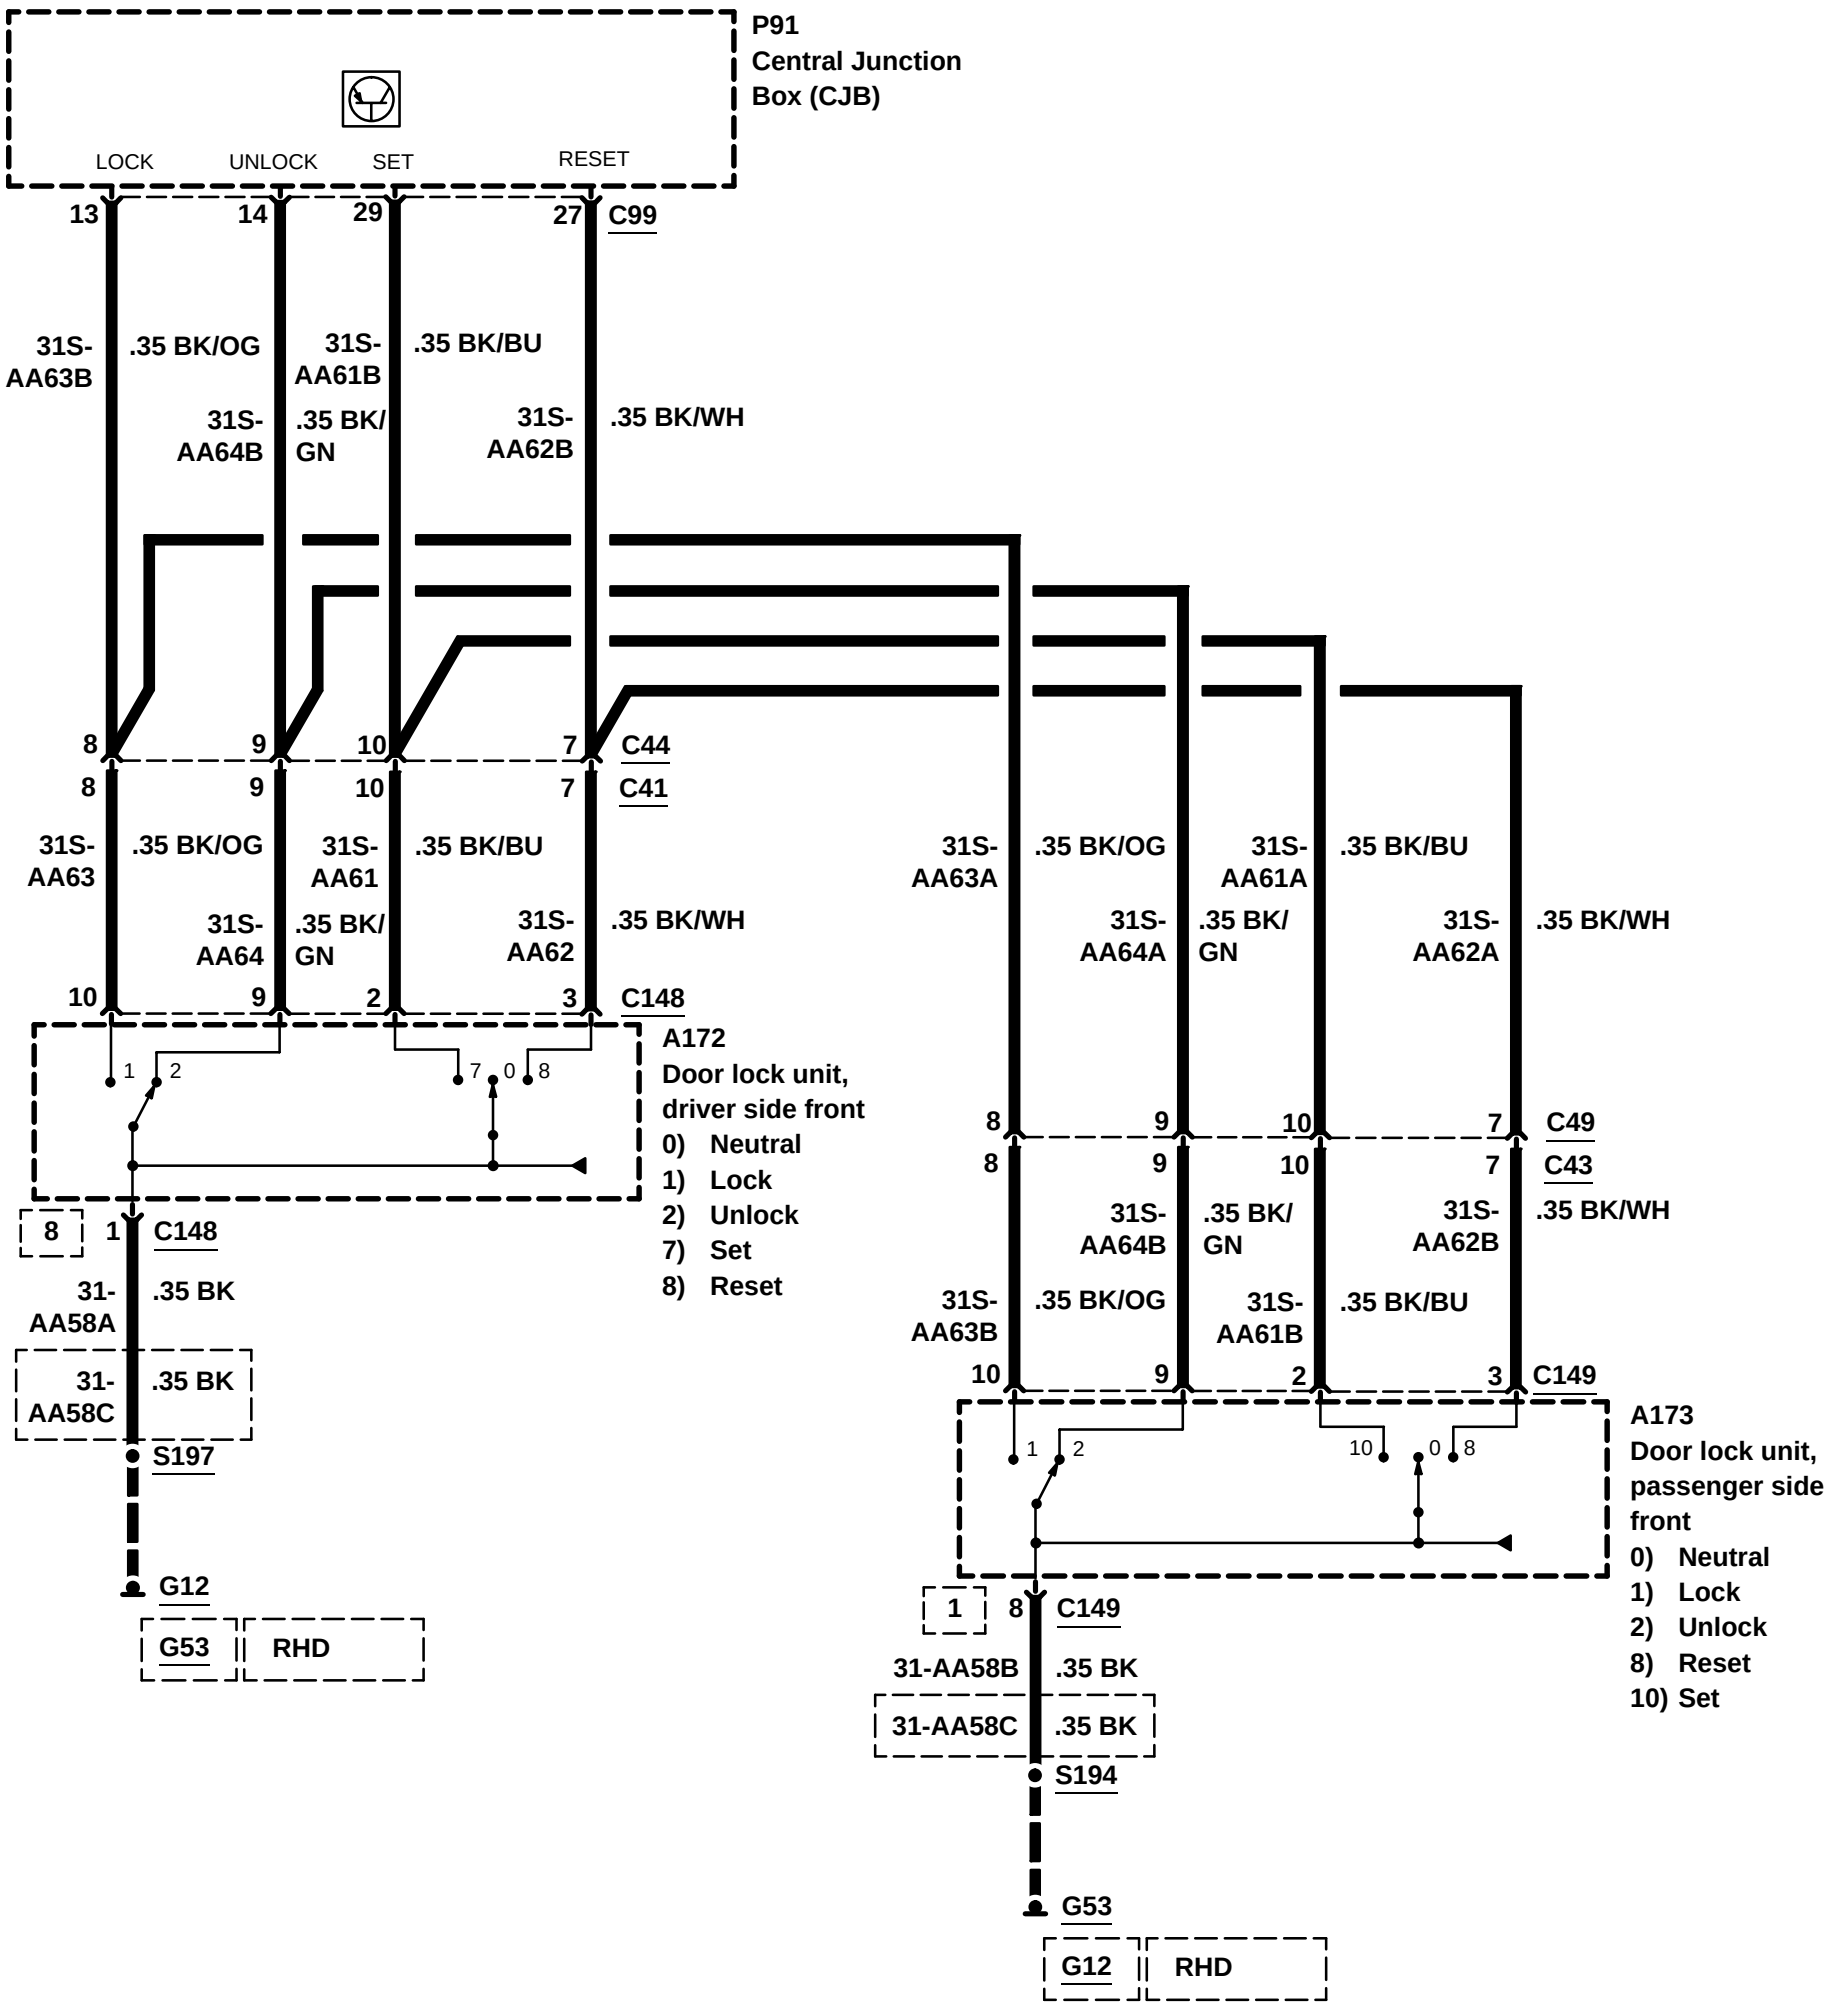


Anti–Theft – Active – with front and rear power windows

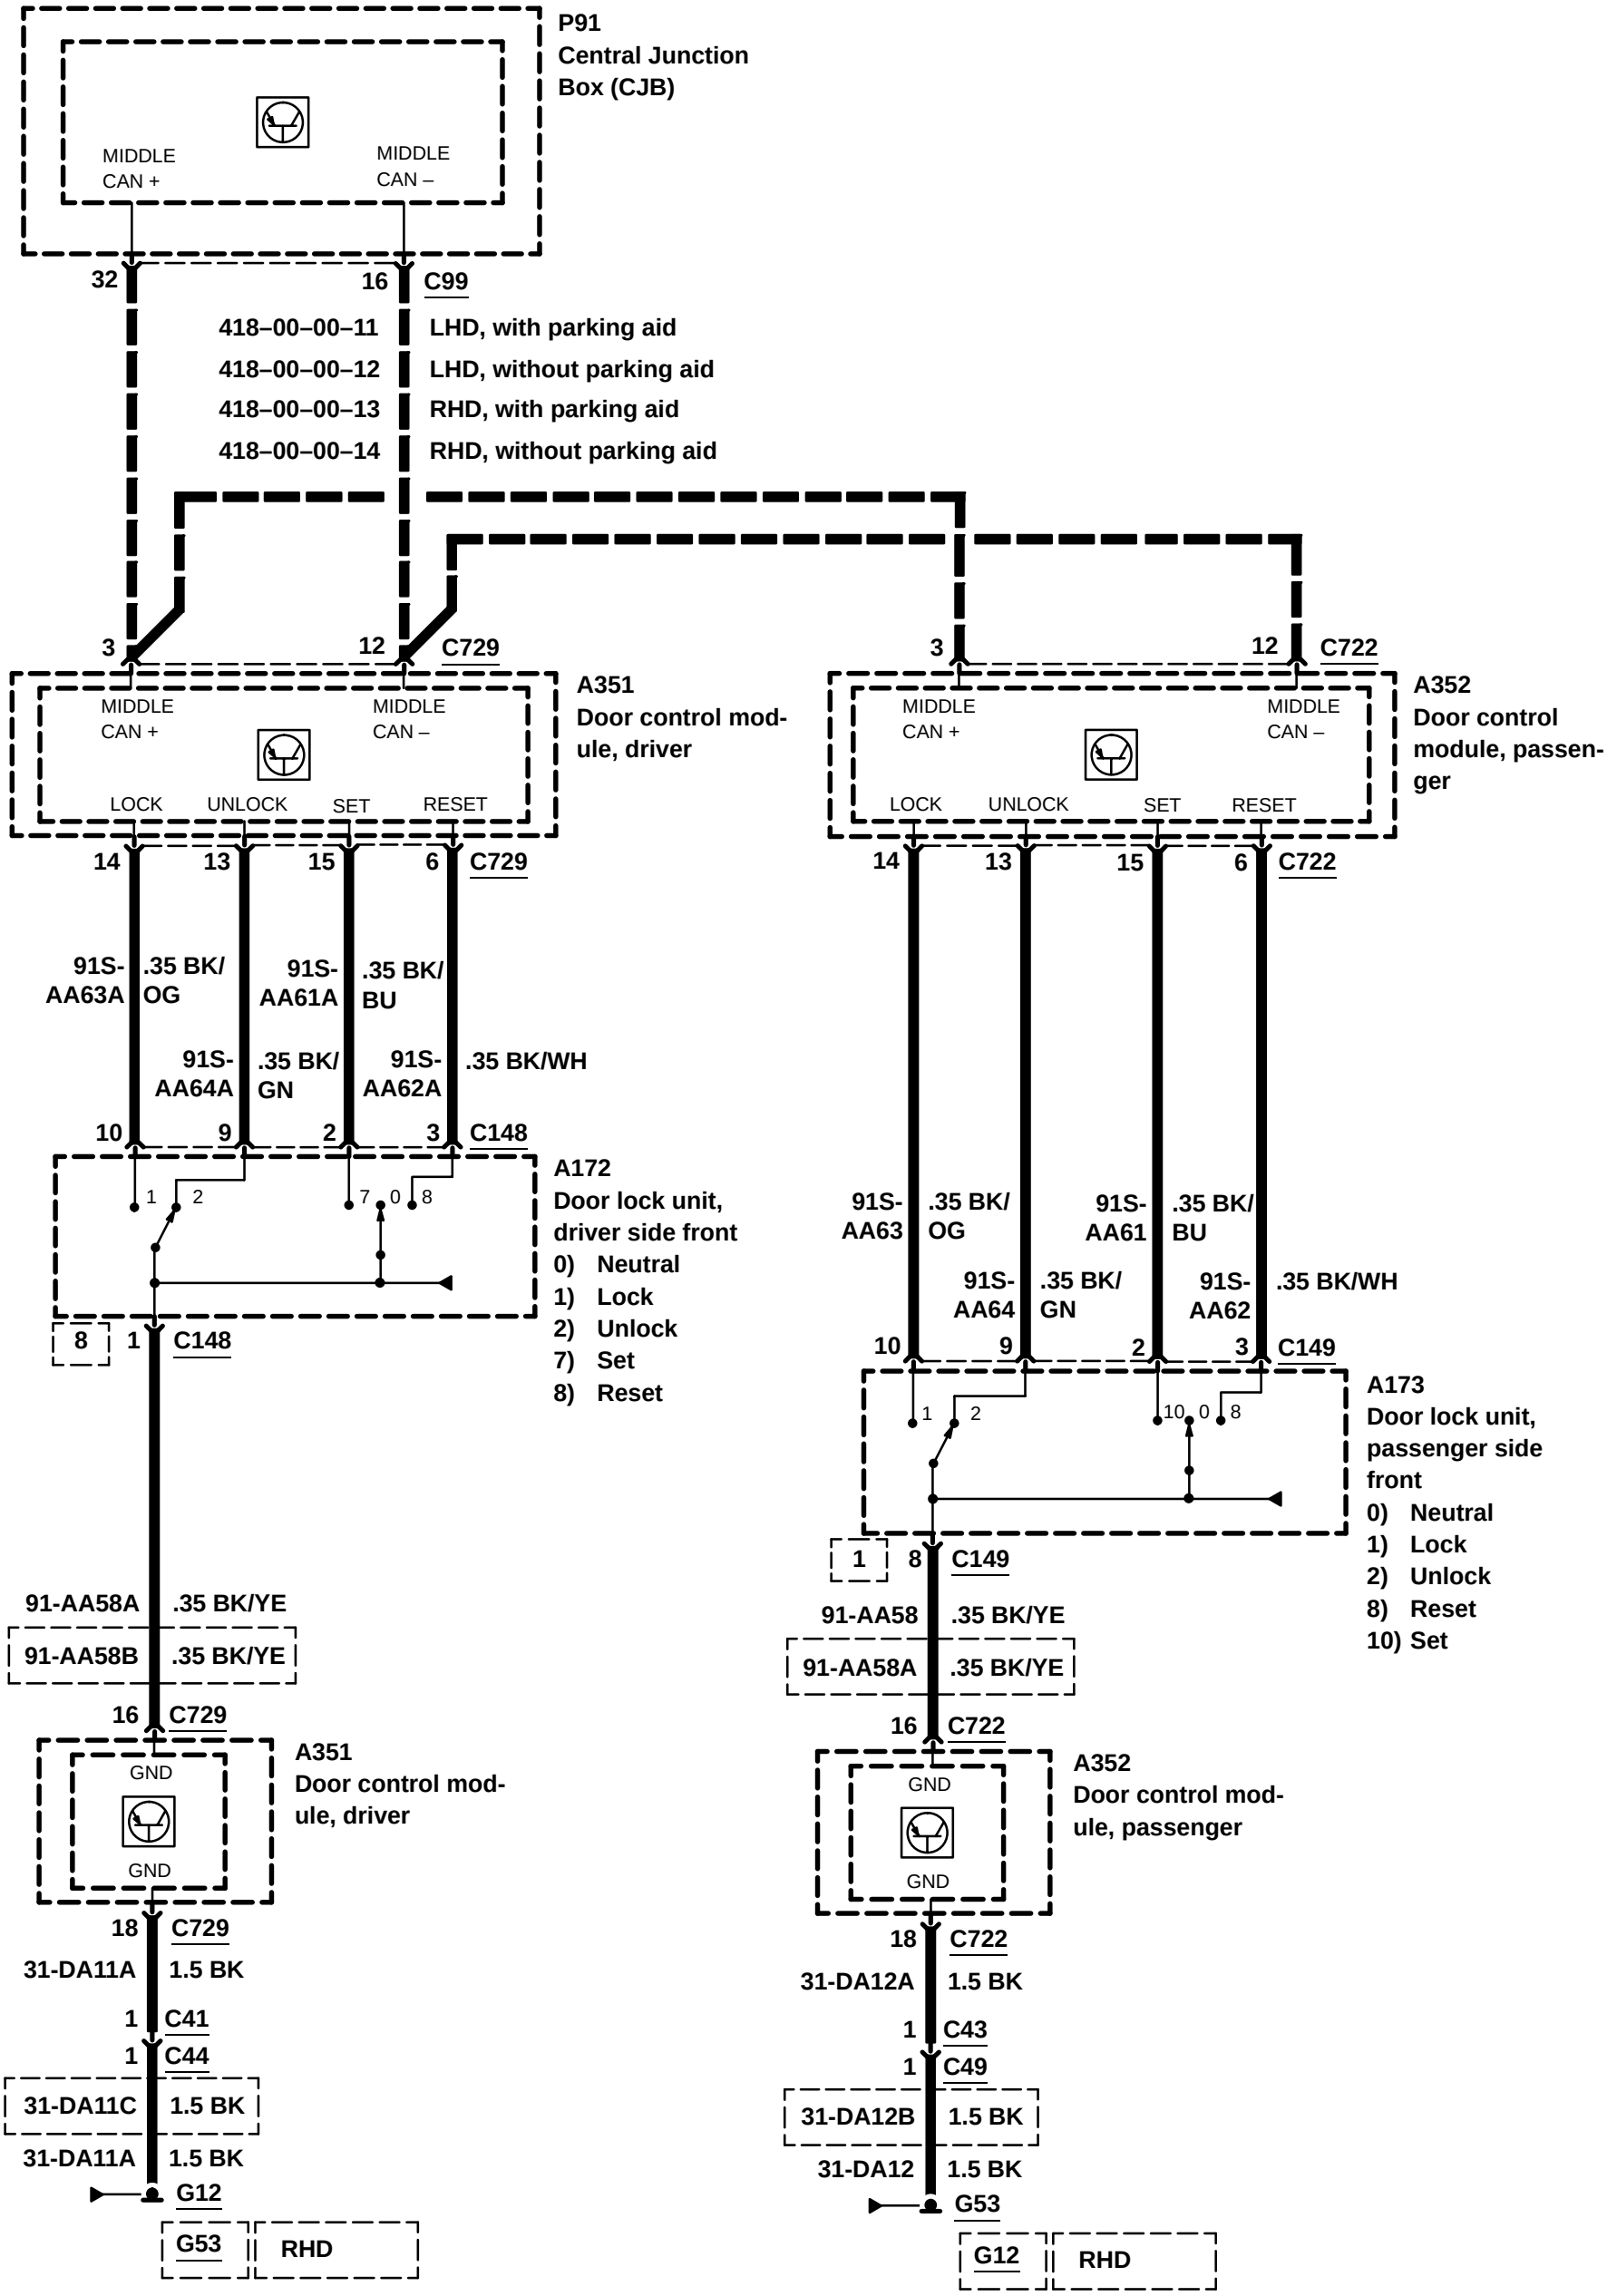


Anti–Theft – Active – with front power windows

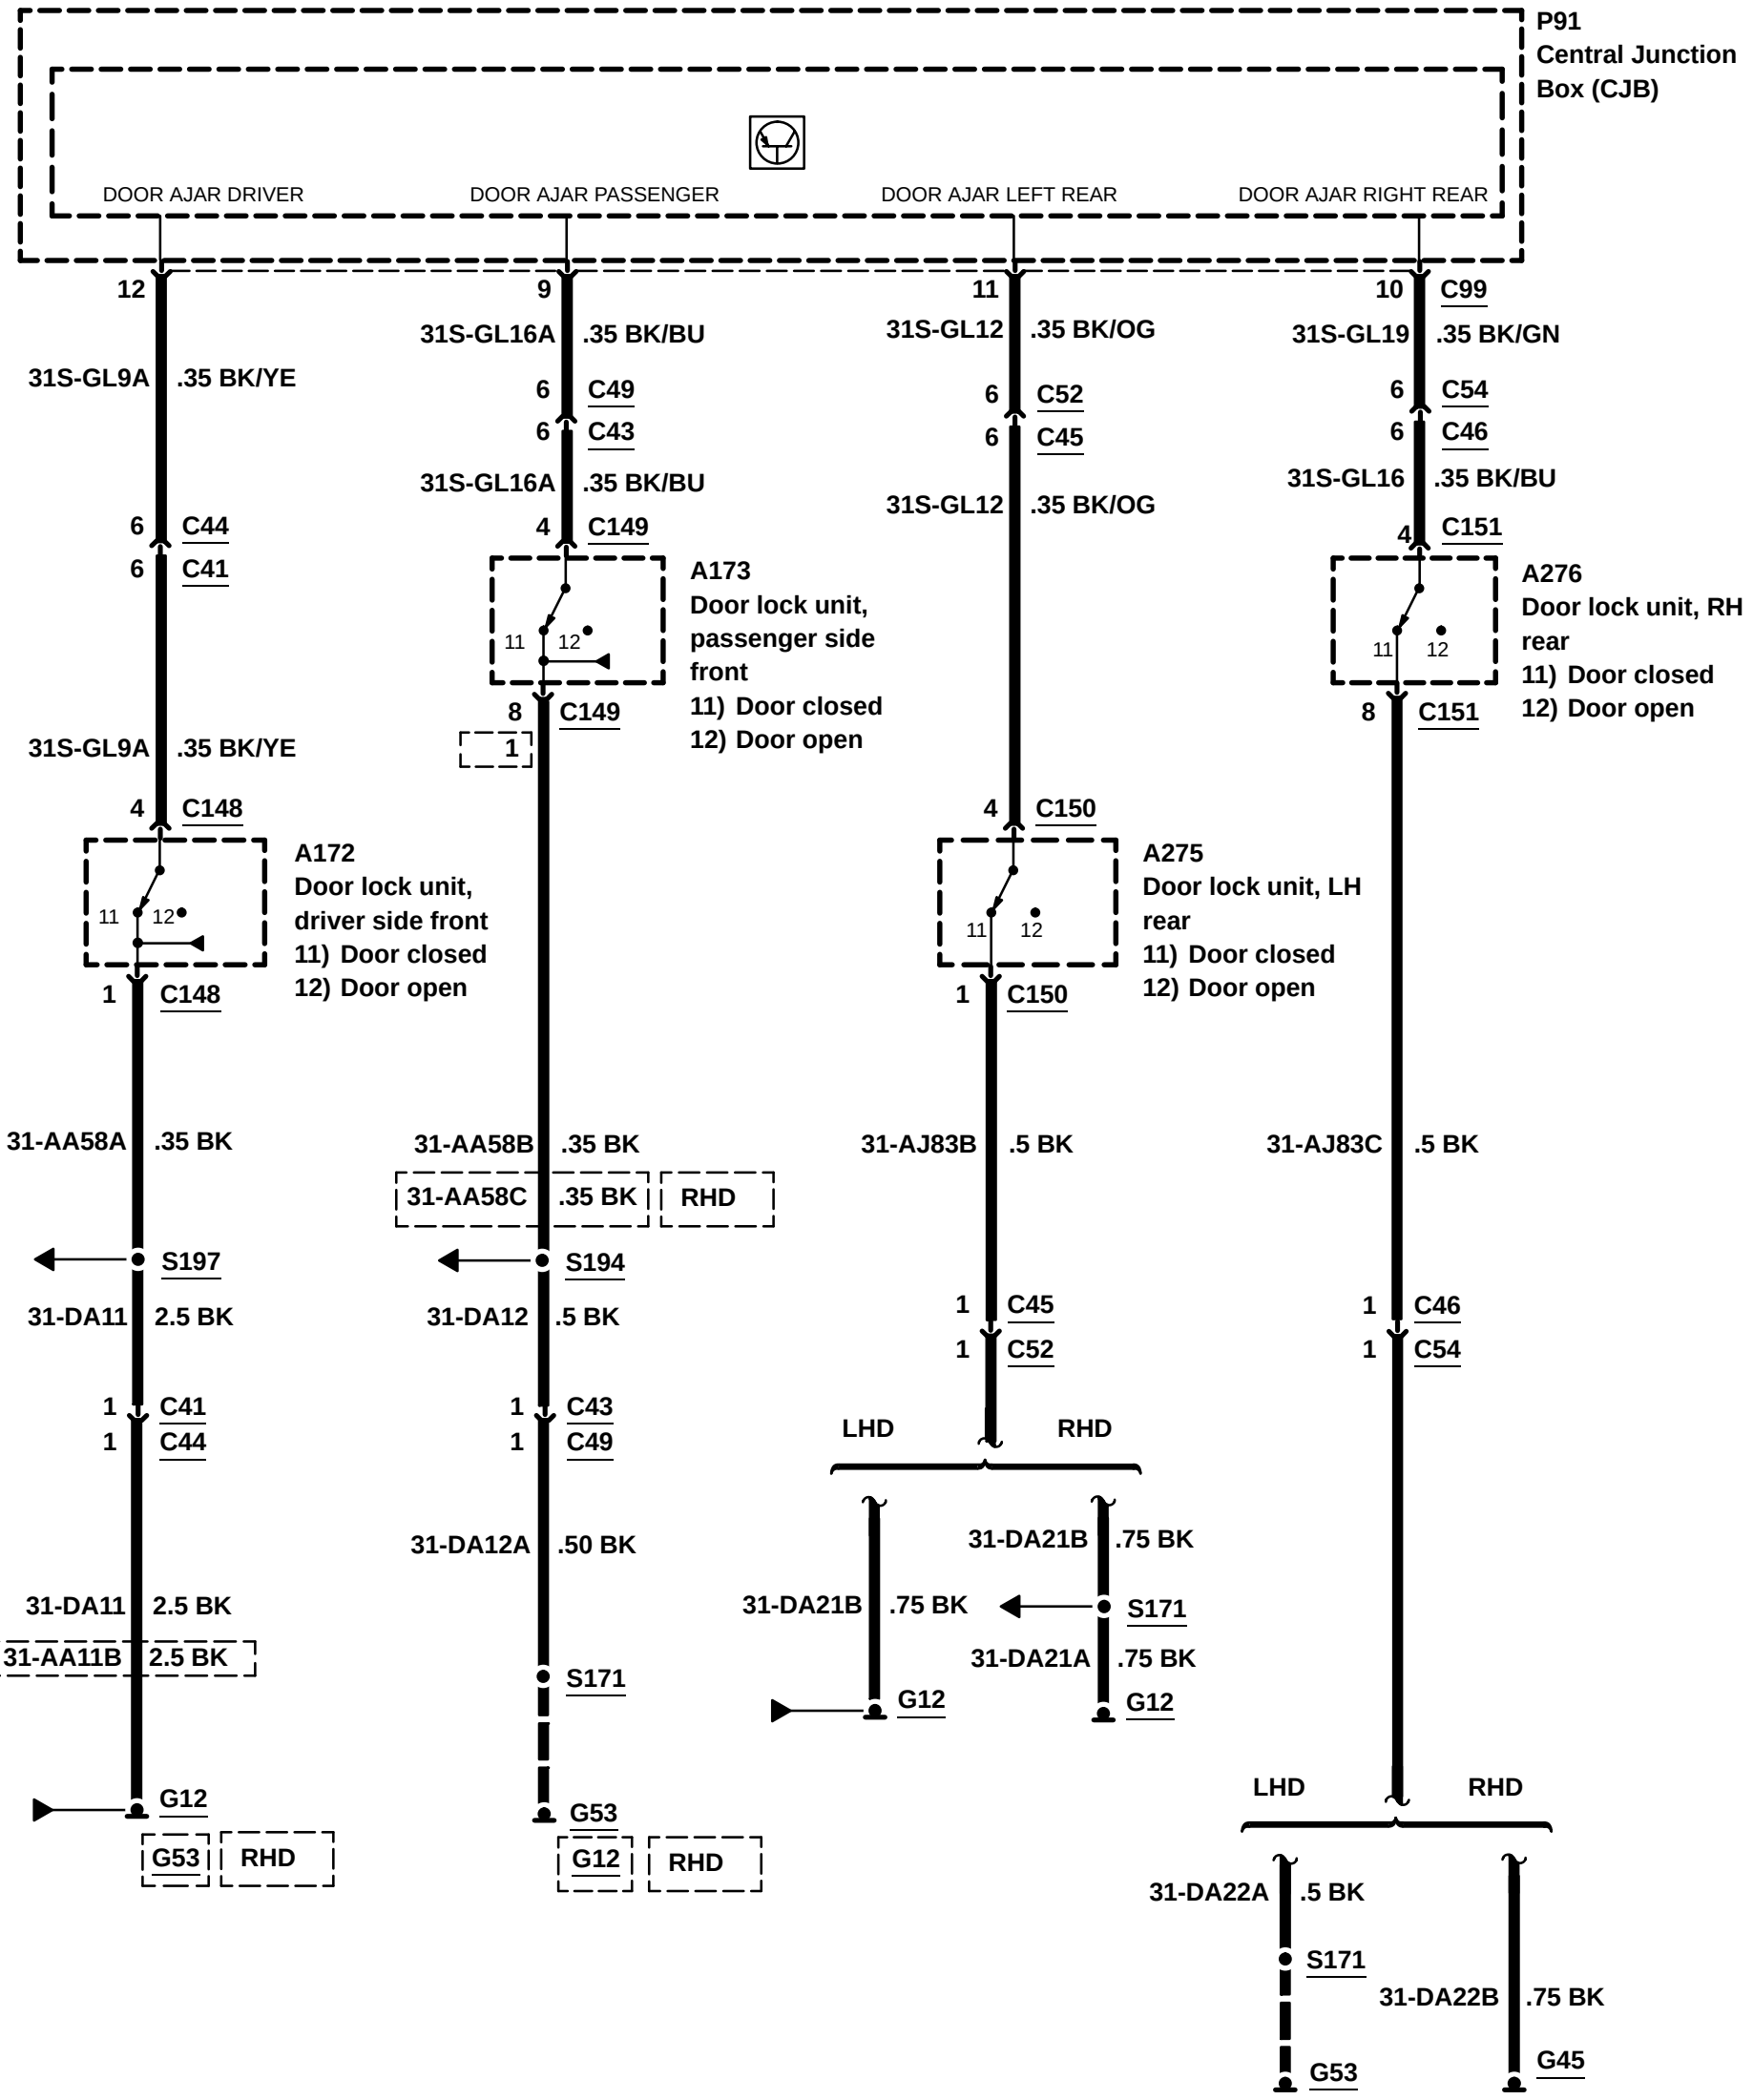


Anti–Theft – Active – with front and rear power windows

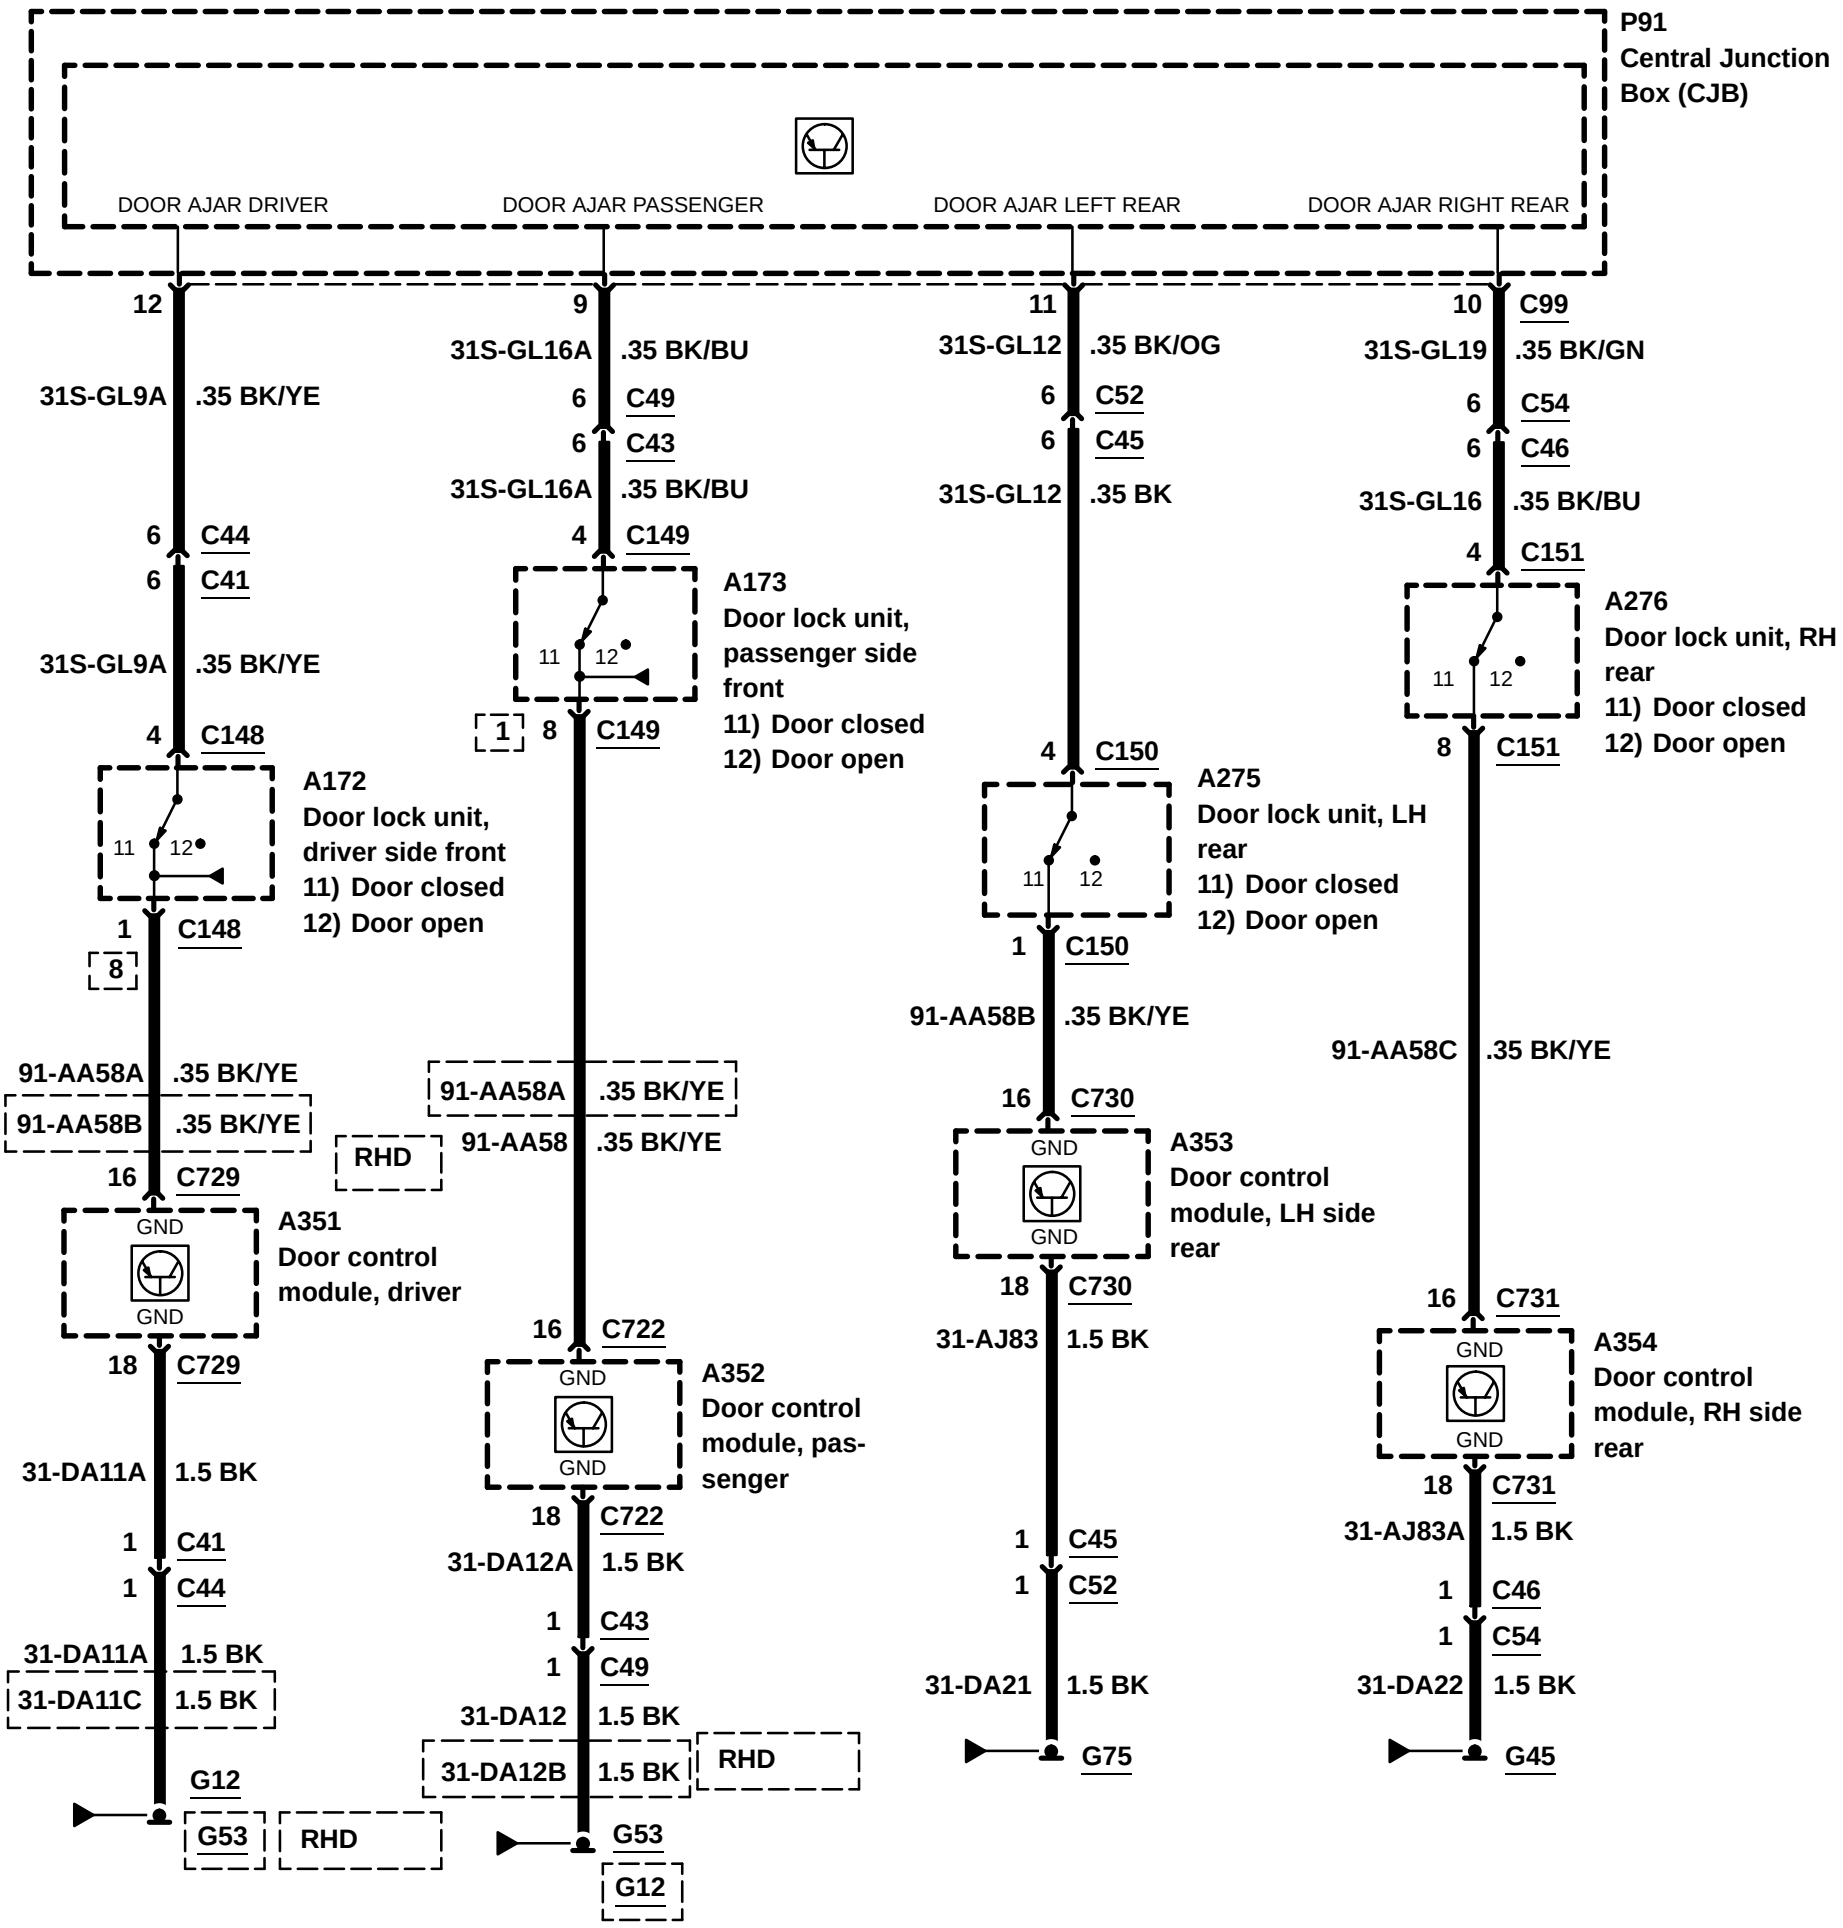


Anti–Theft – Passive

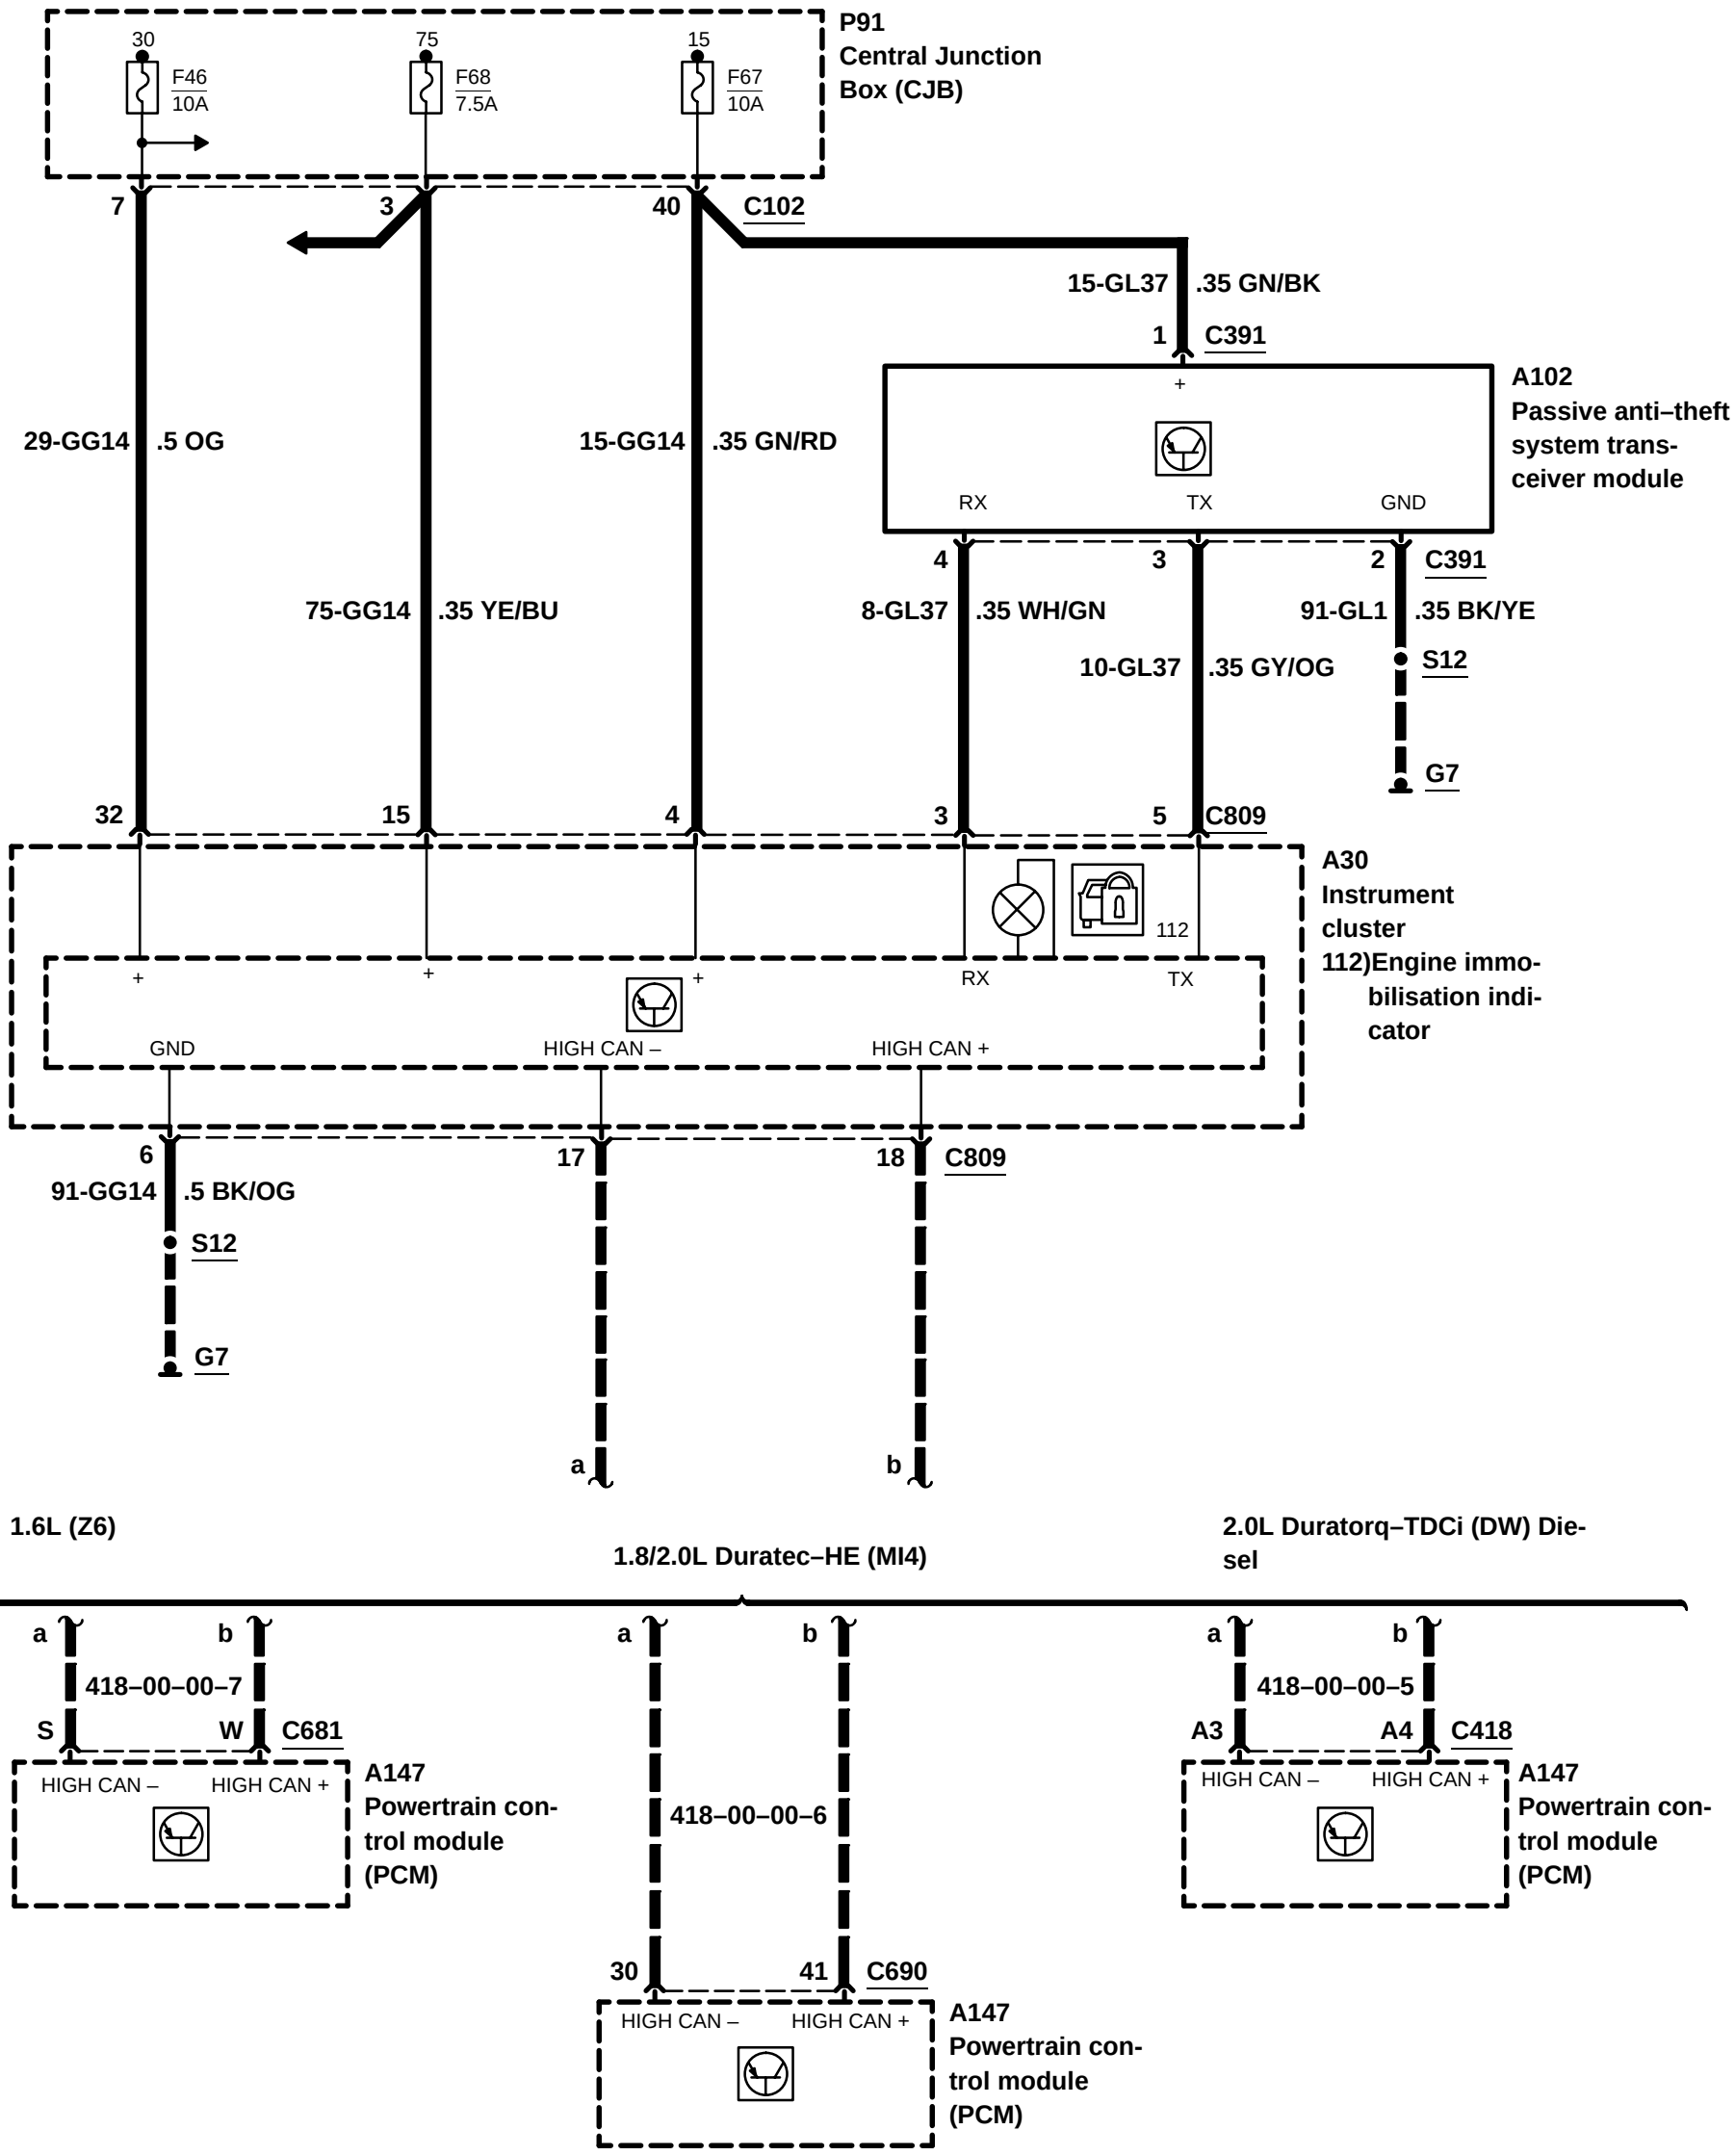

Multifunction Electronic Control Modules

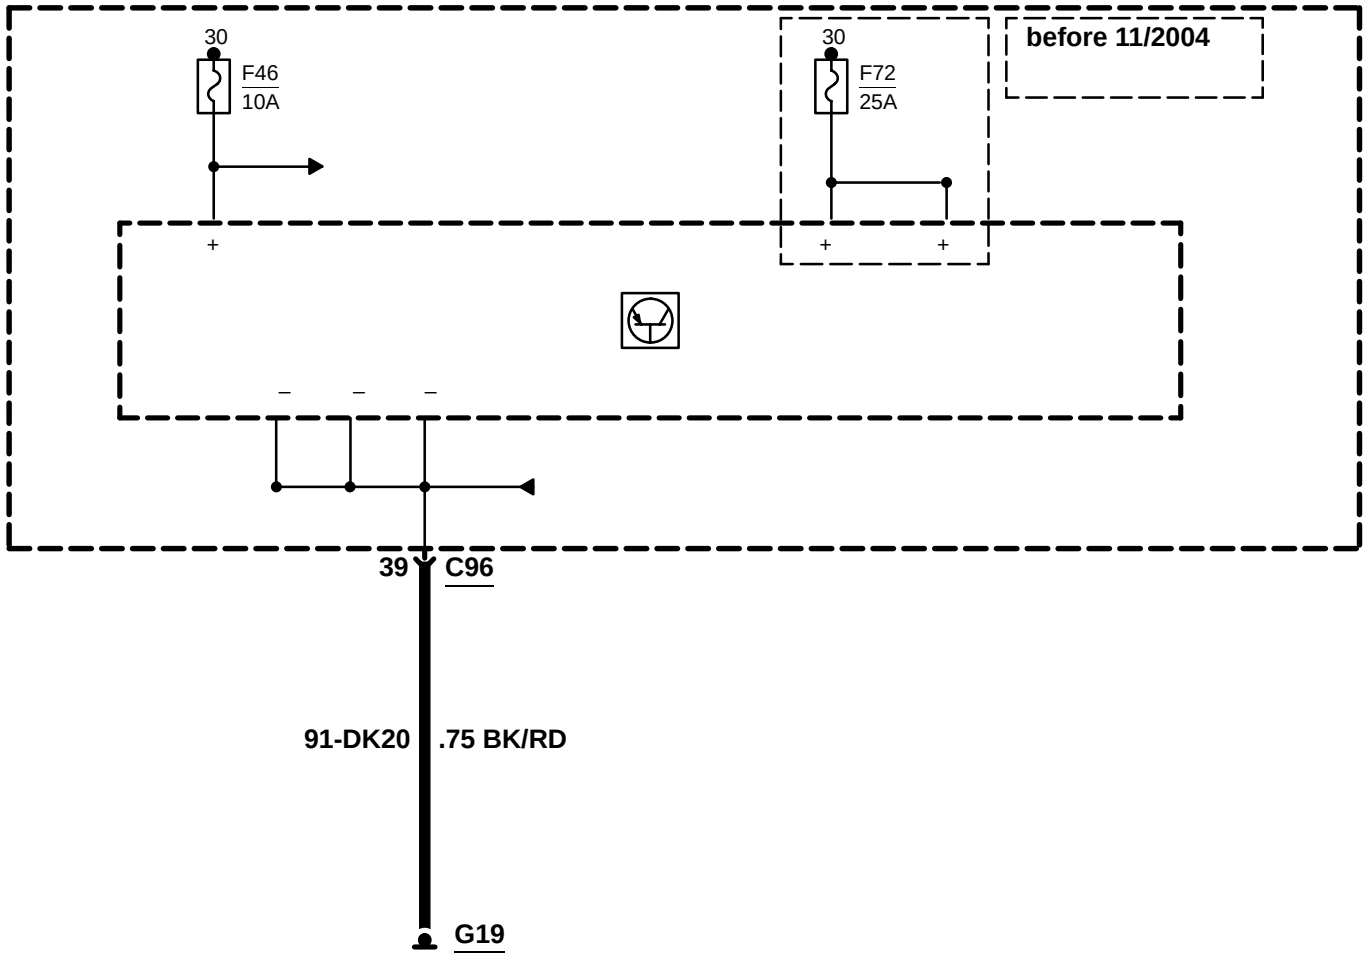


Multifunction Electronic Control Modules

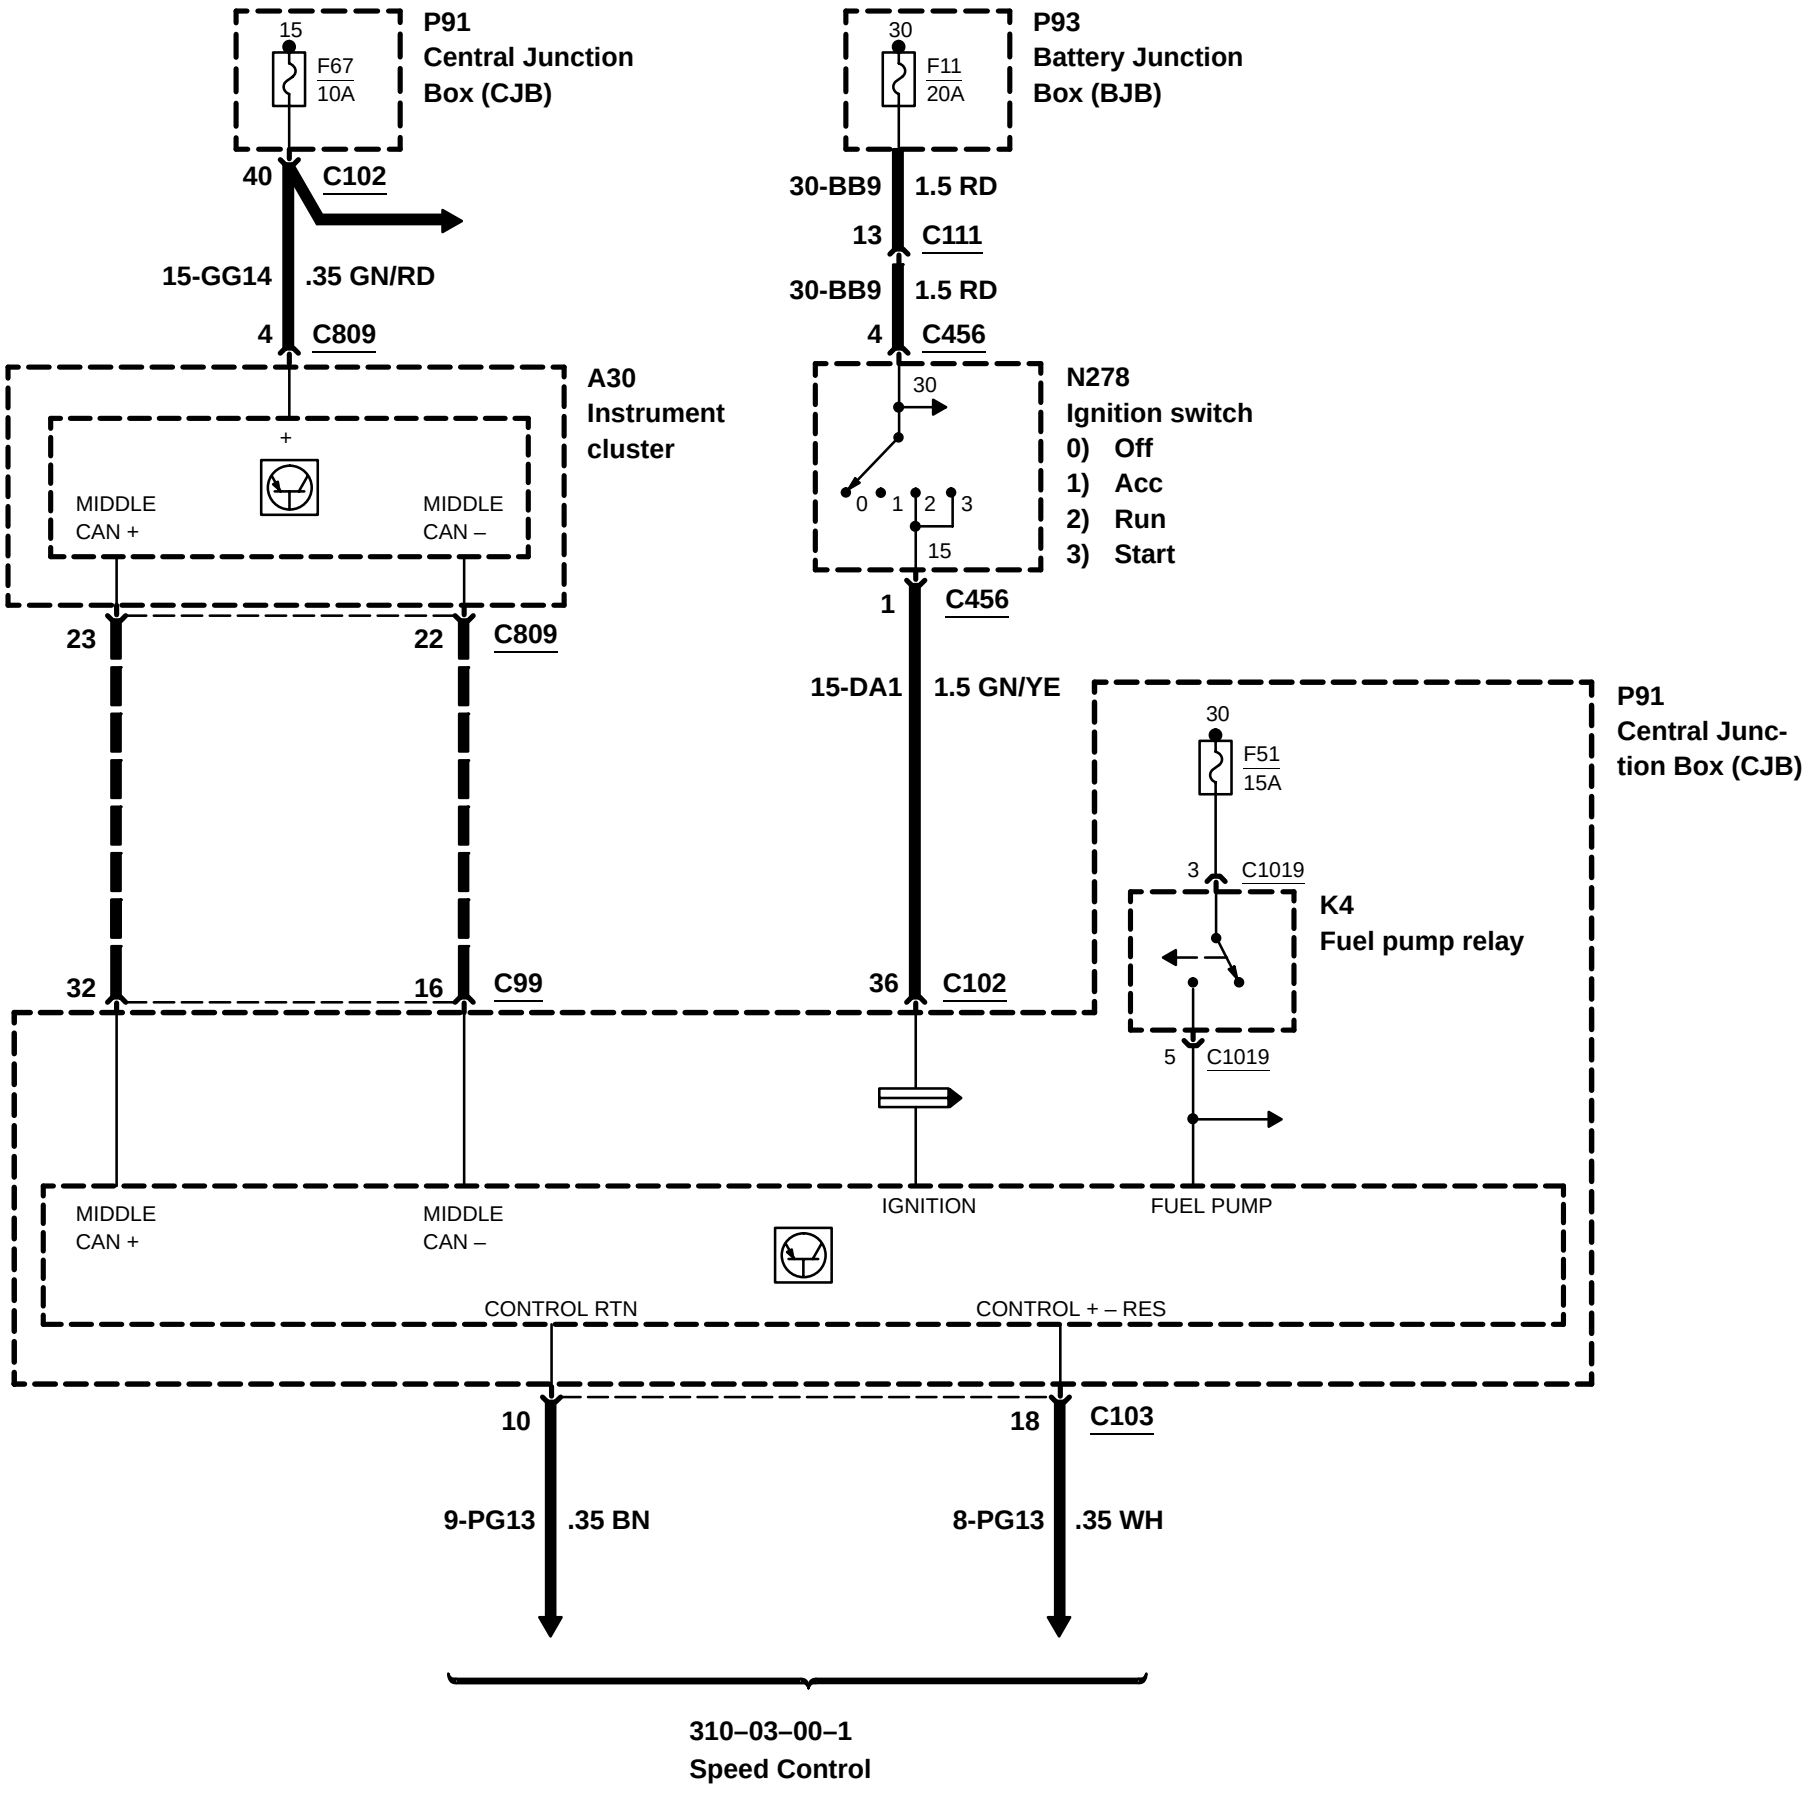


310–03–00–1
Speed Control


Multifunction Electronic Control Modules

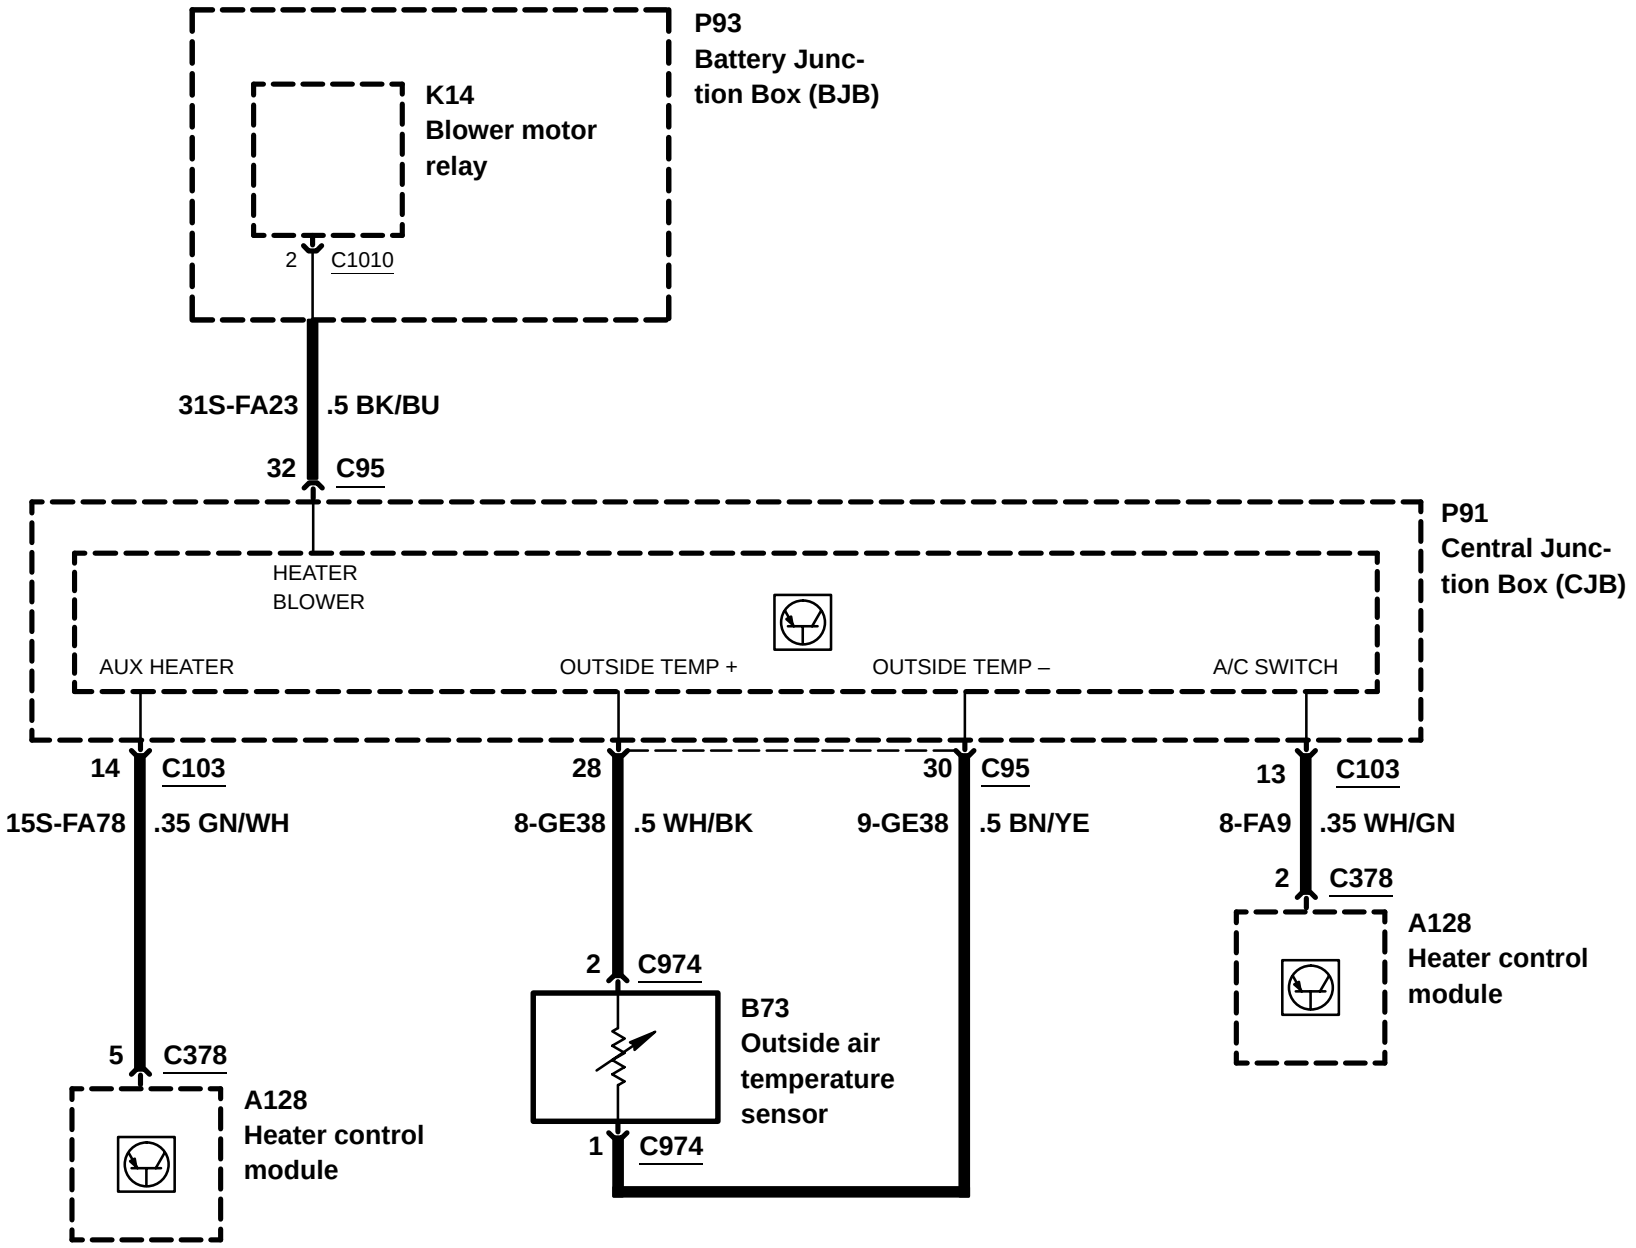


Multifunction Electronic Control Modules

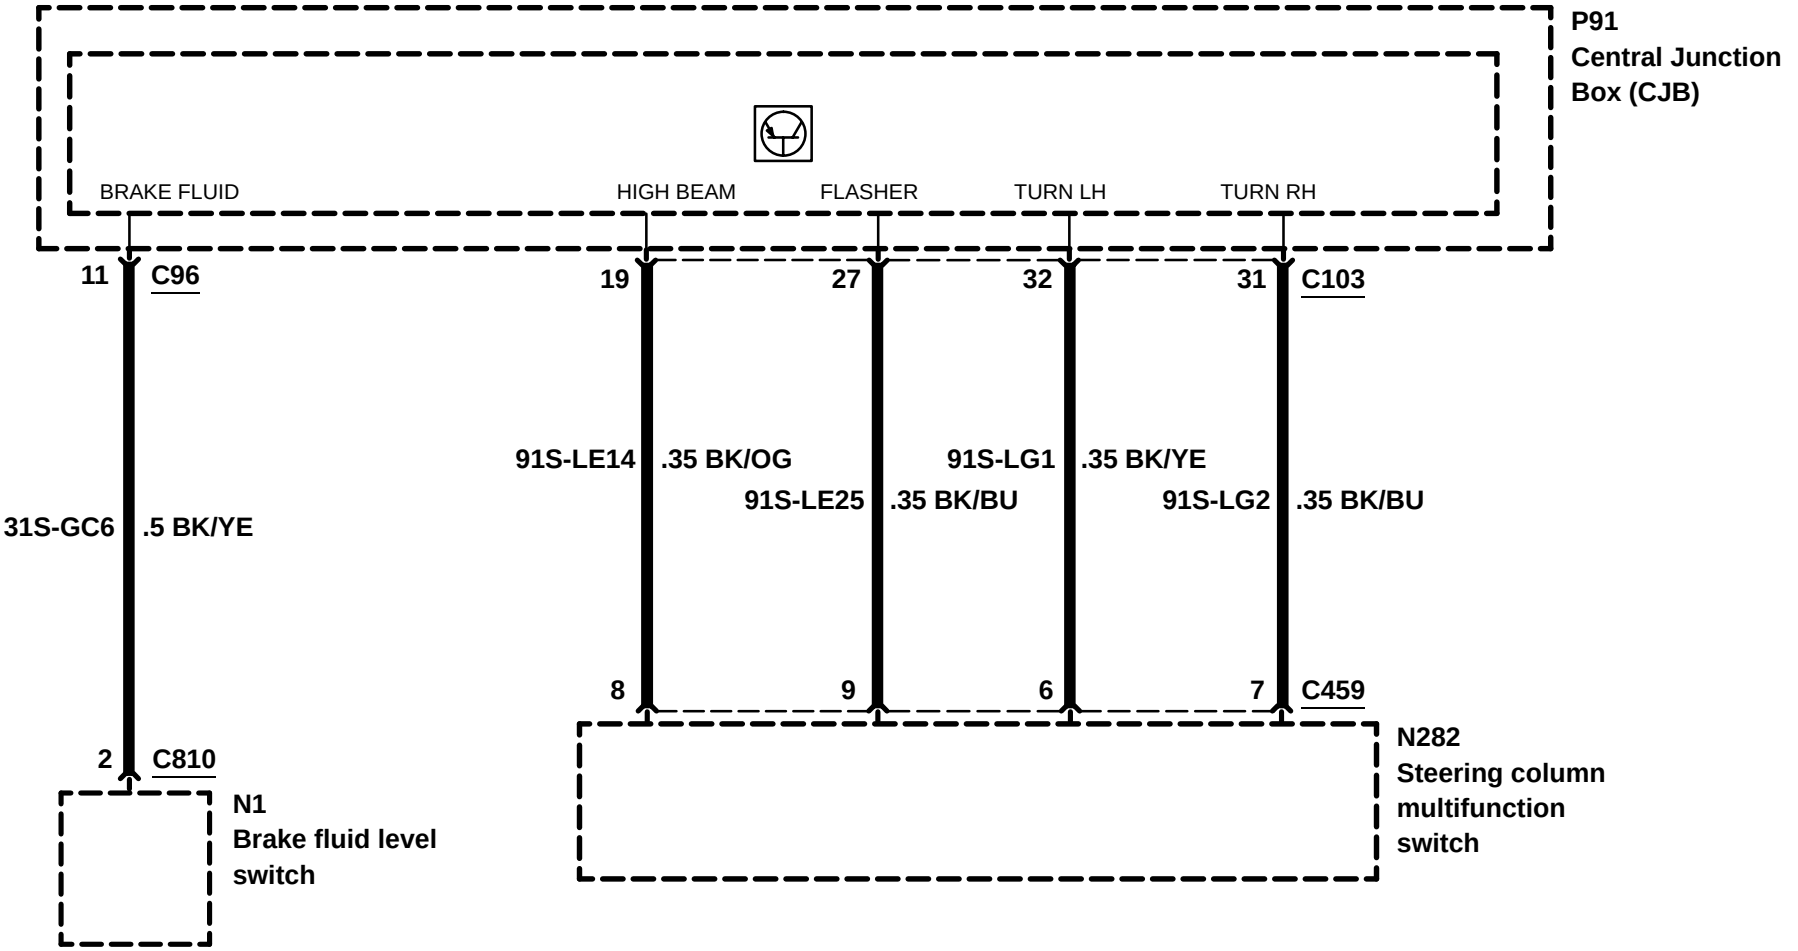


Multifunction Electronic Control Modules

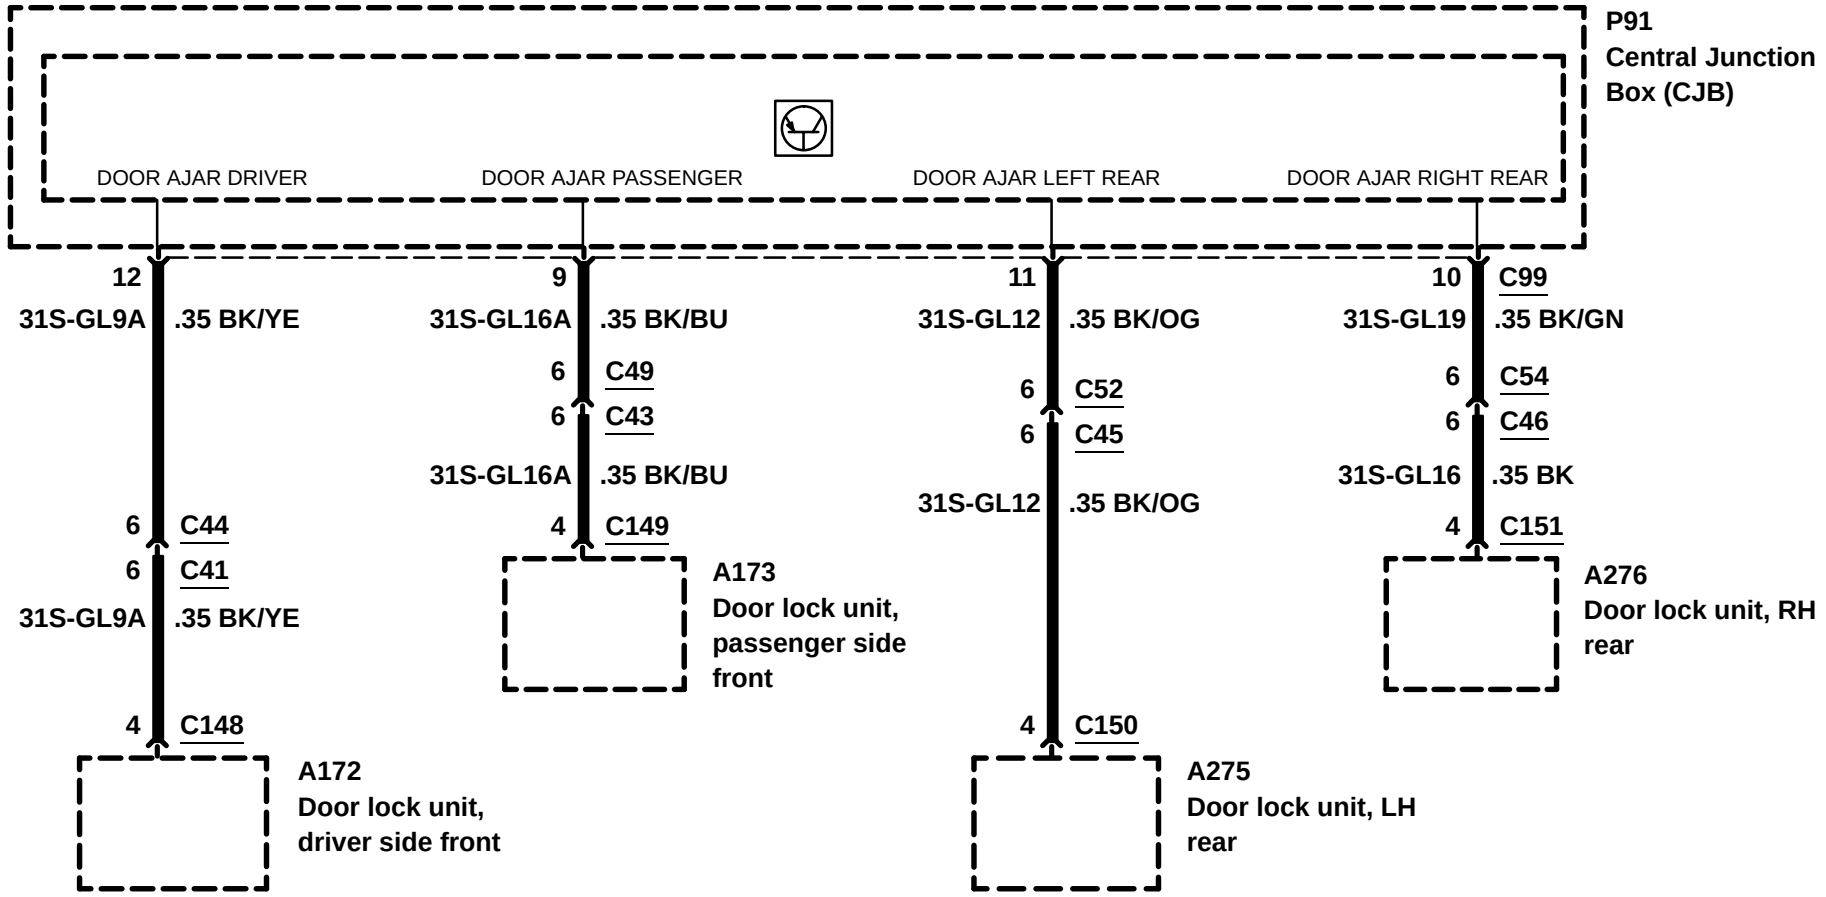


Multifunction Electronic Control Modules

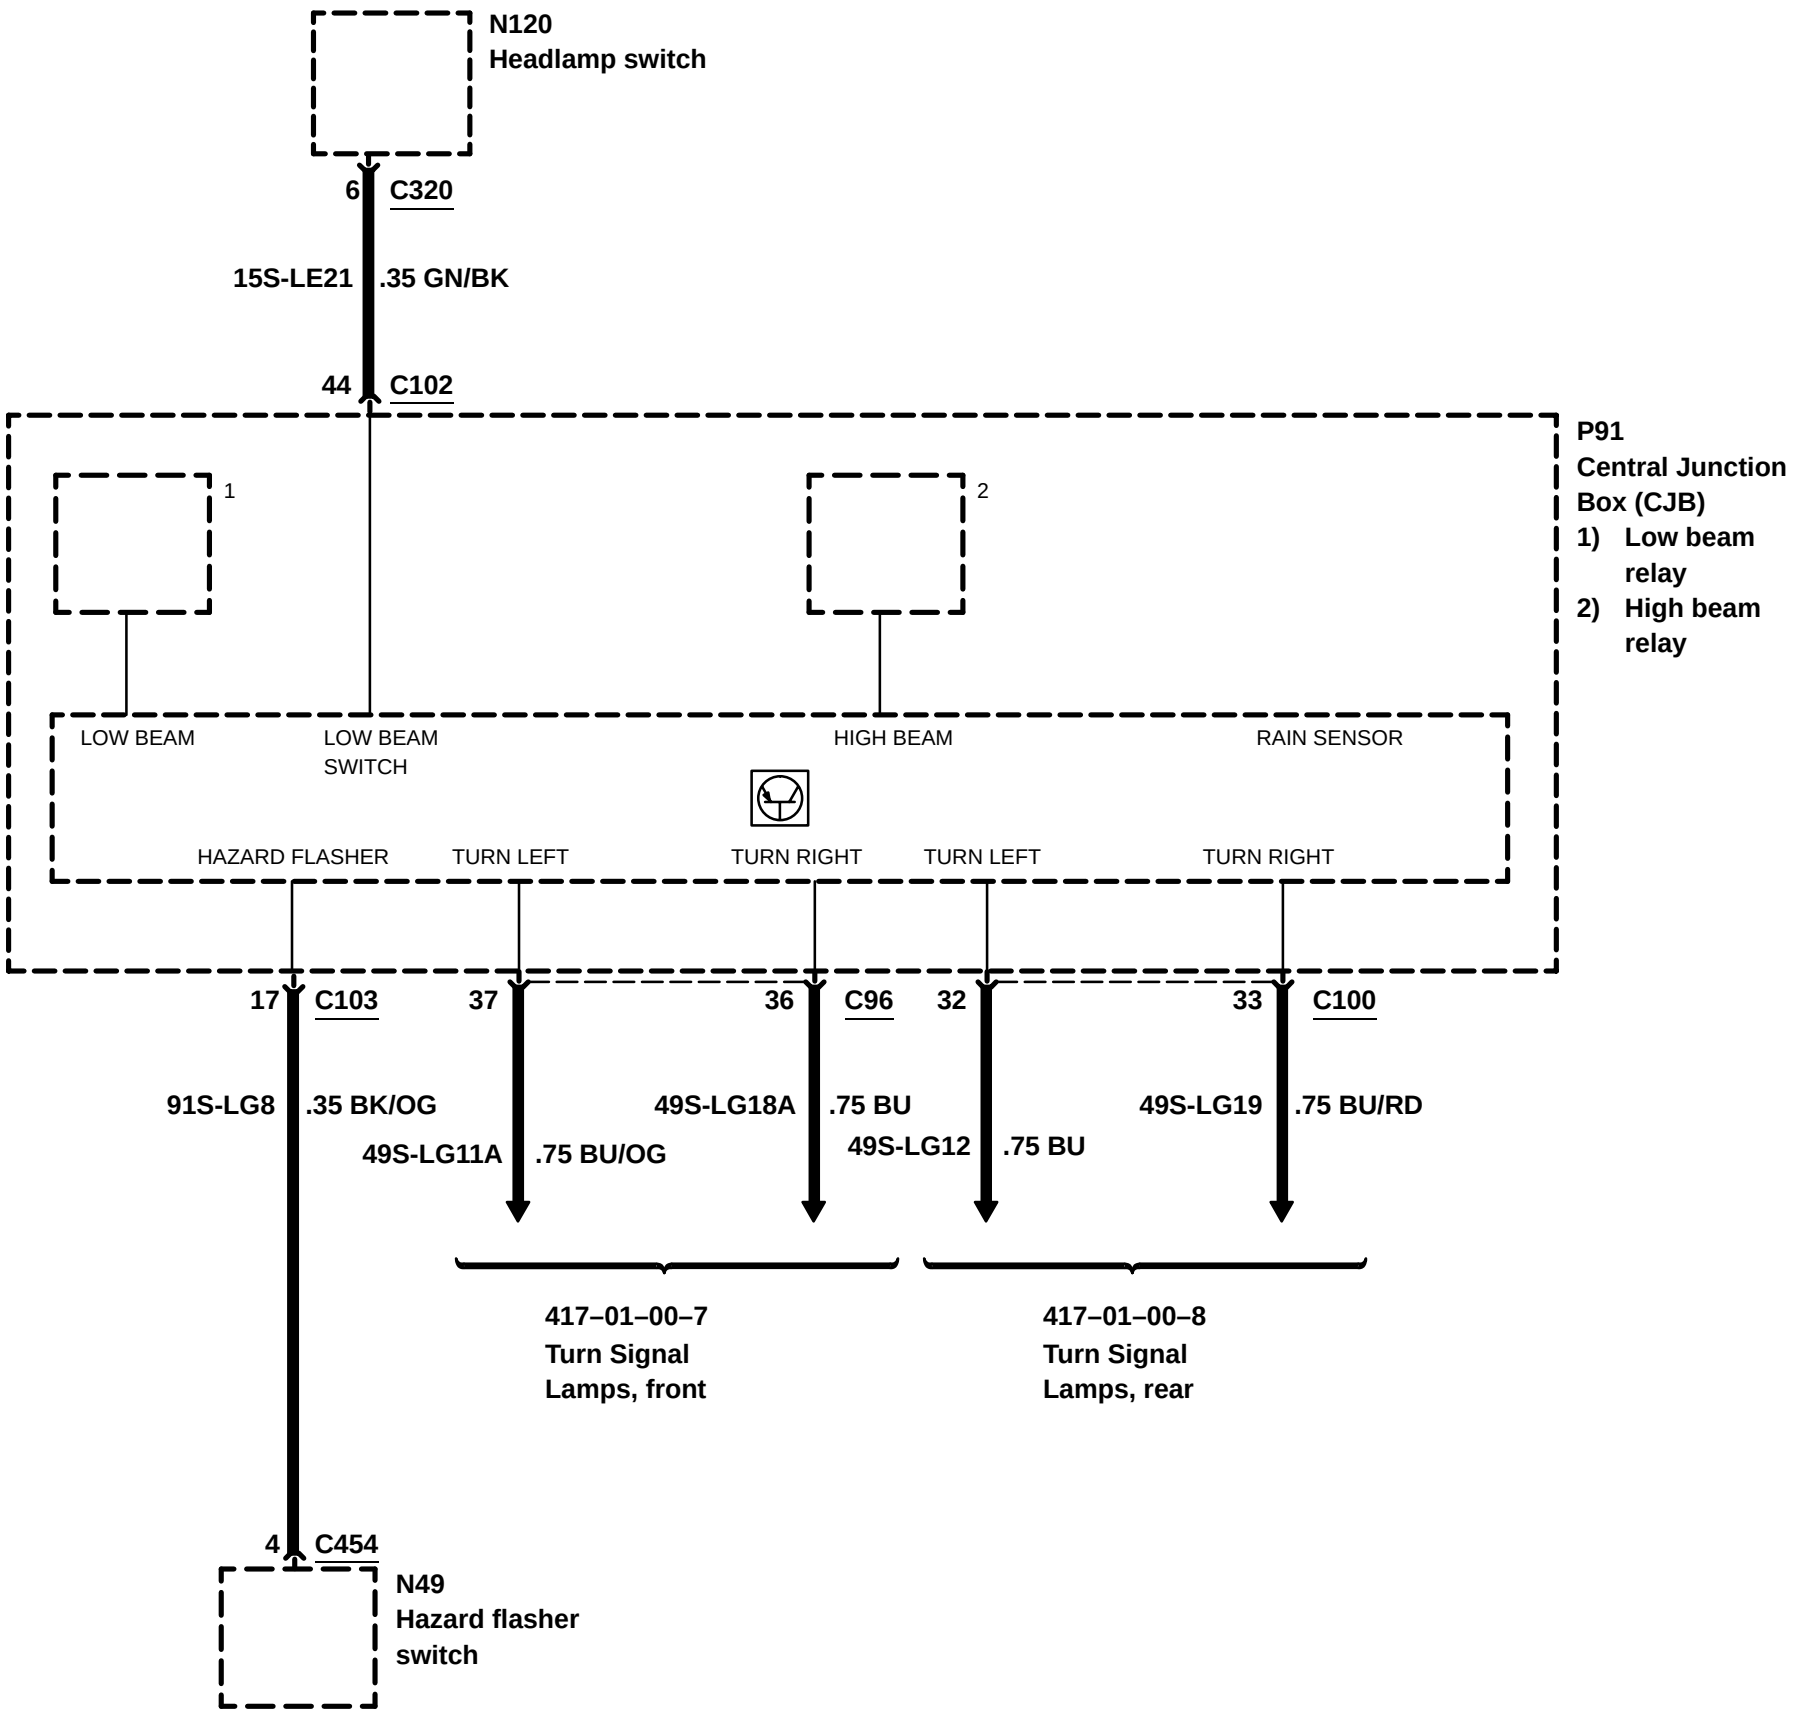


Multifunction Electronic Control Modules

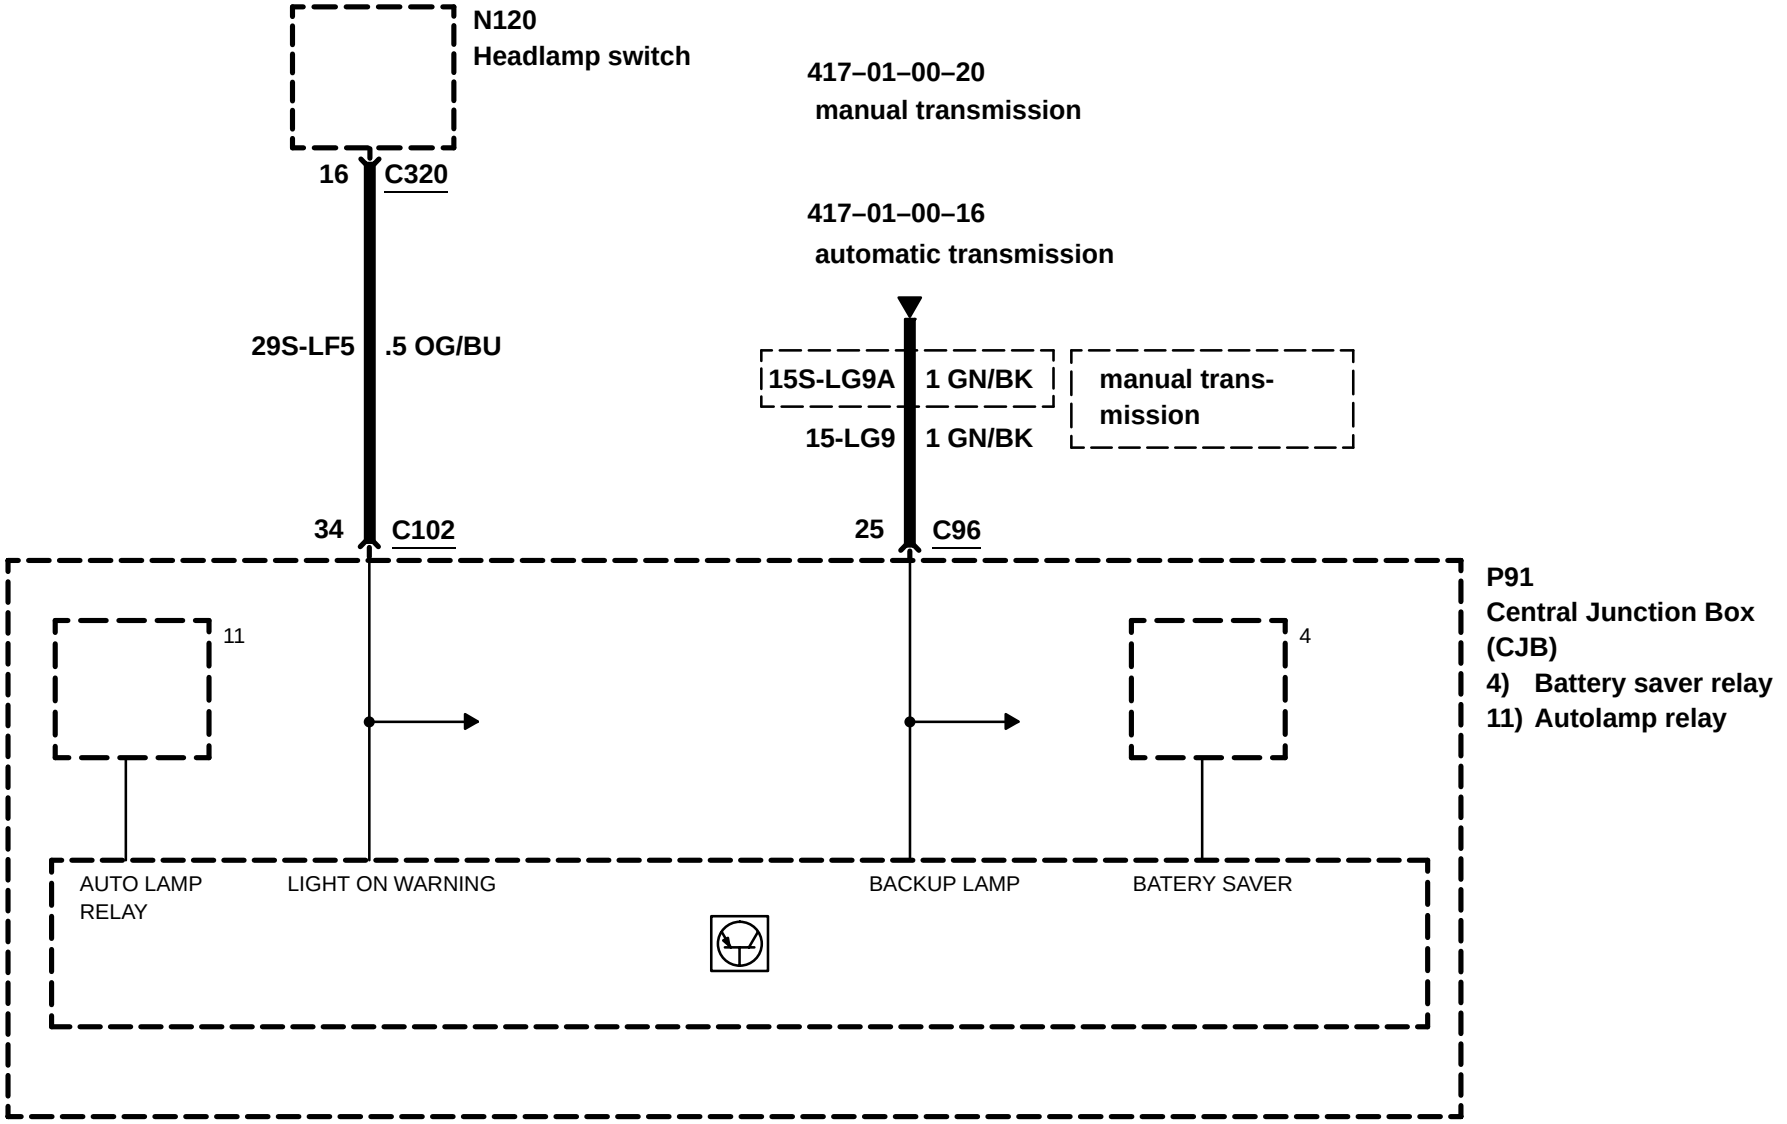


Multifunction Electronic Control Modules

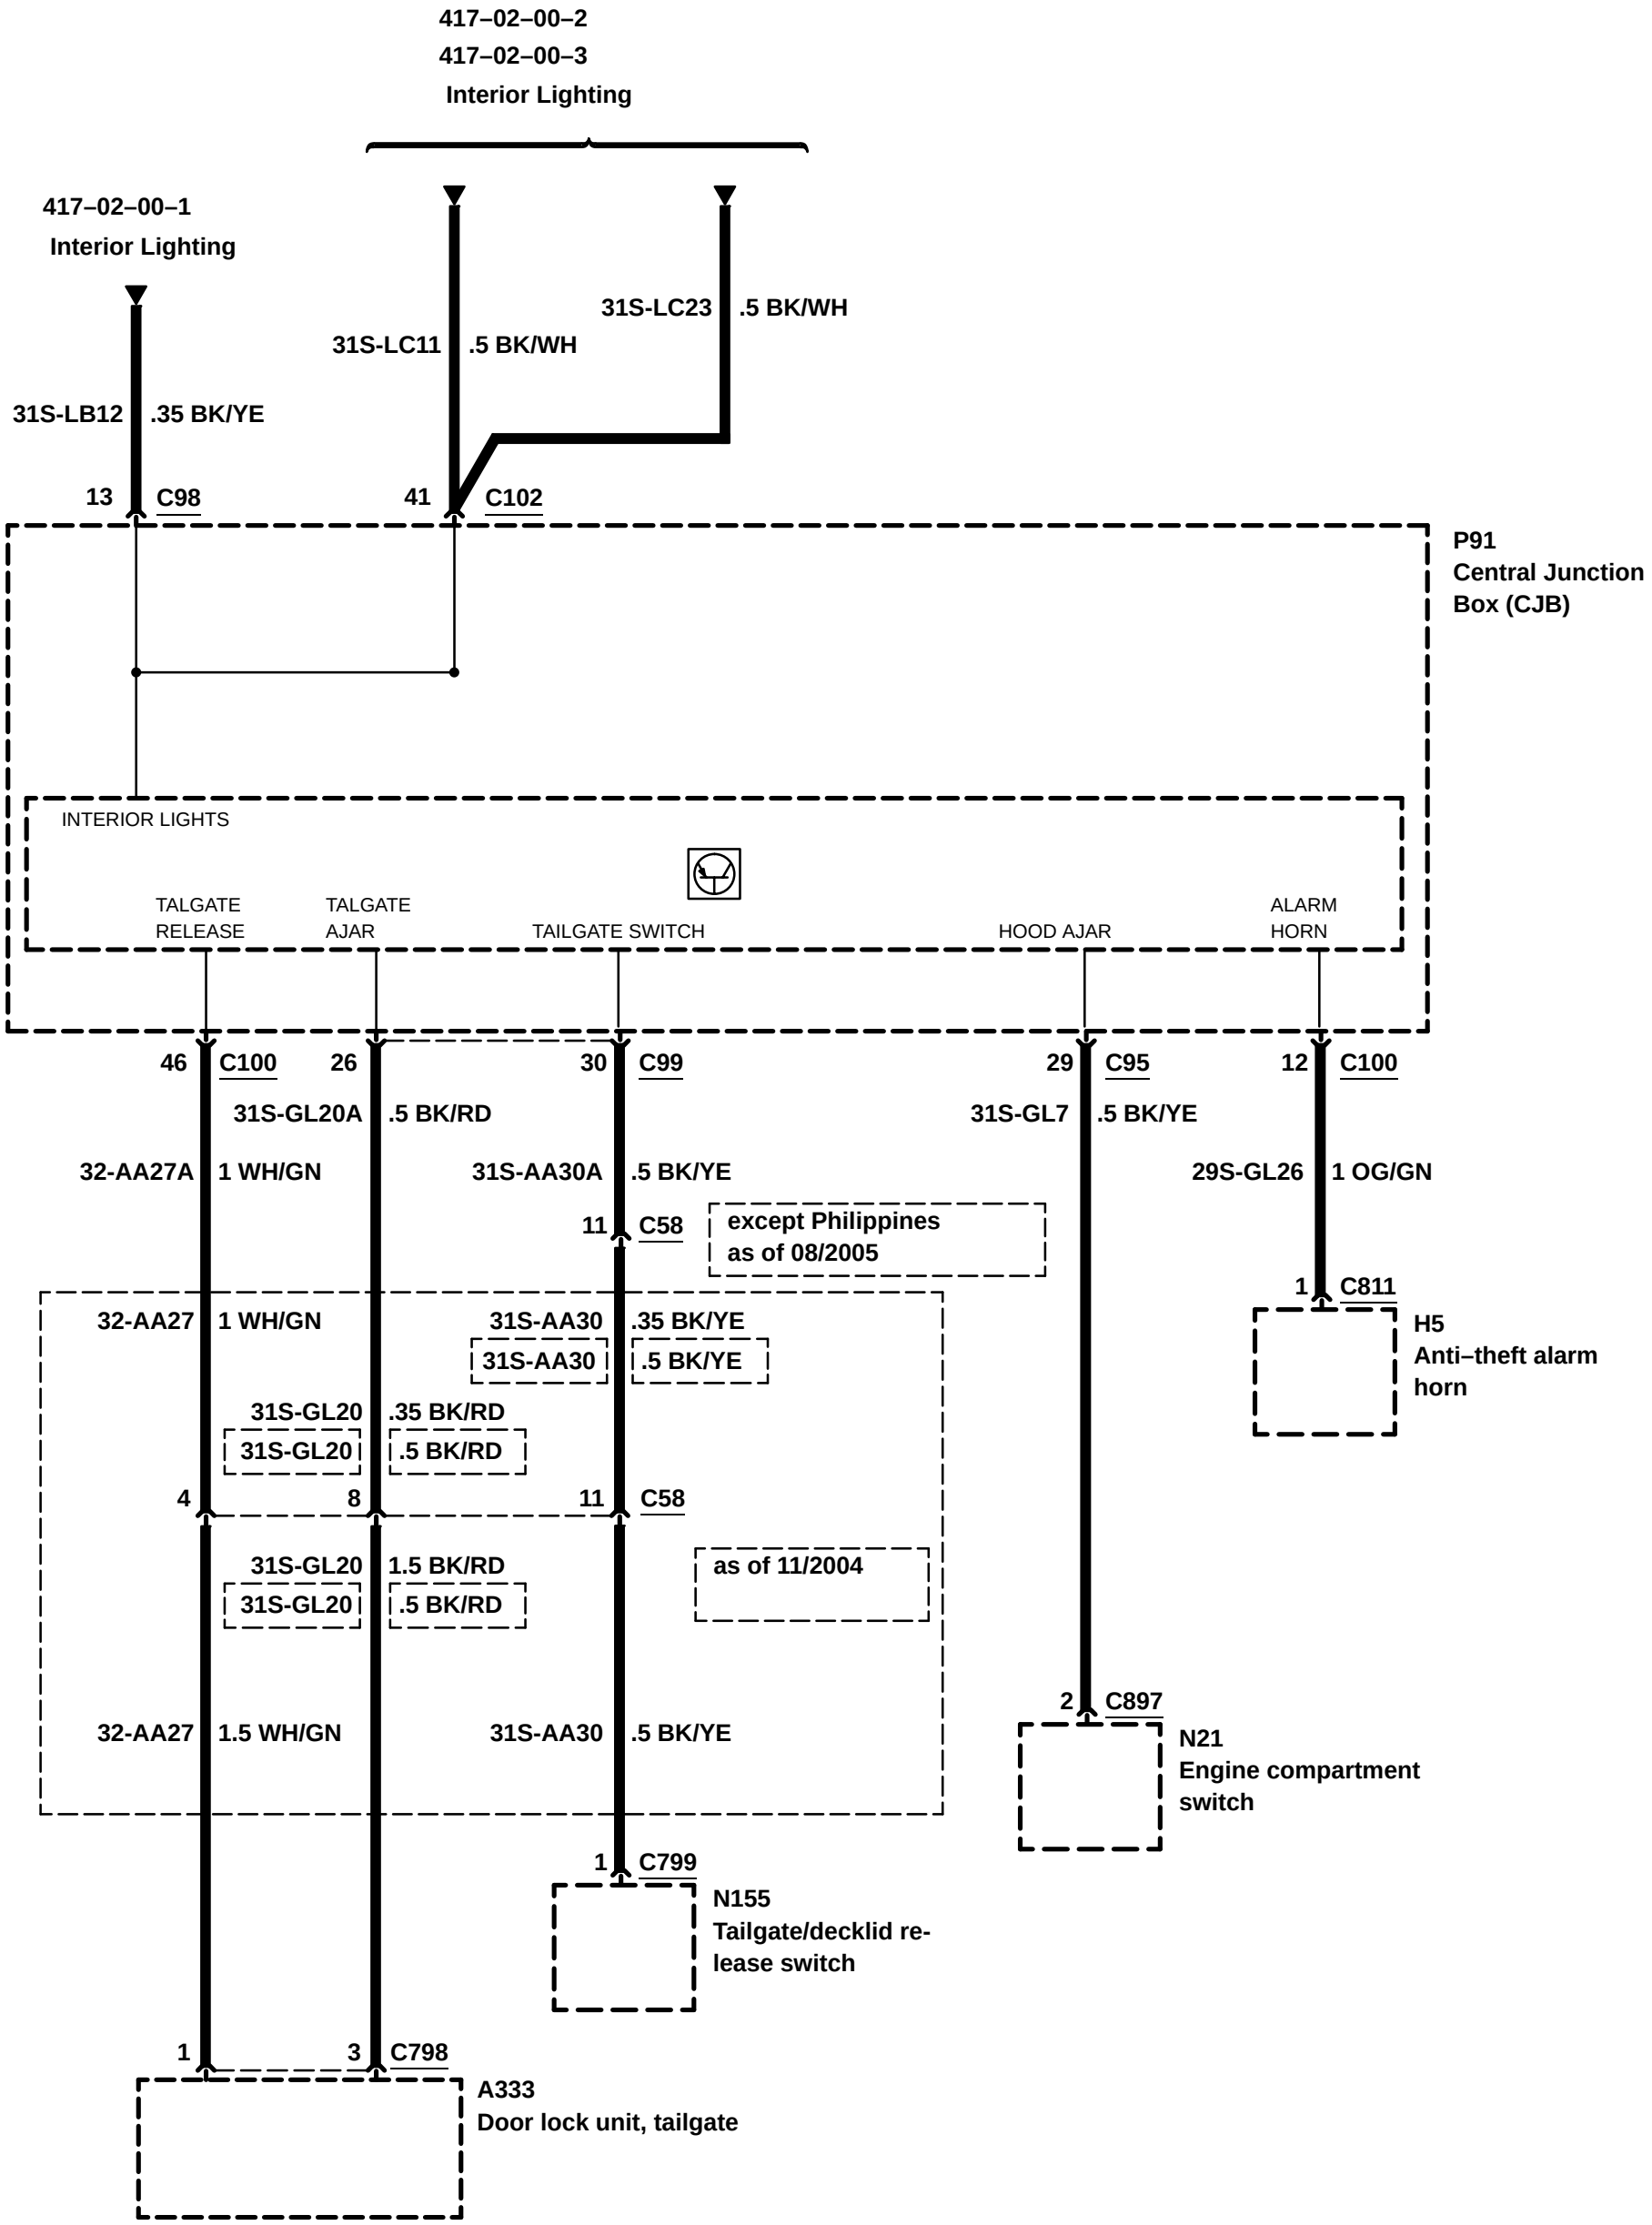

Multifunction Electronic Control Modules

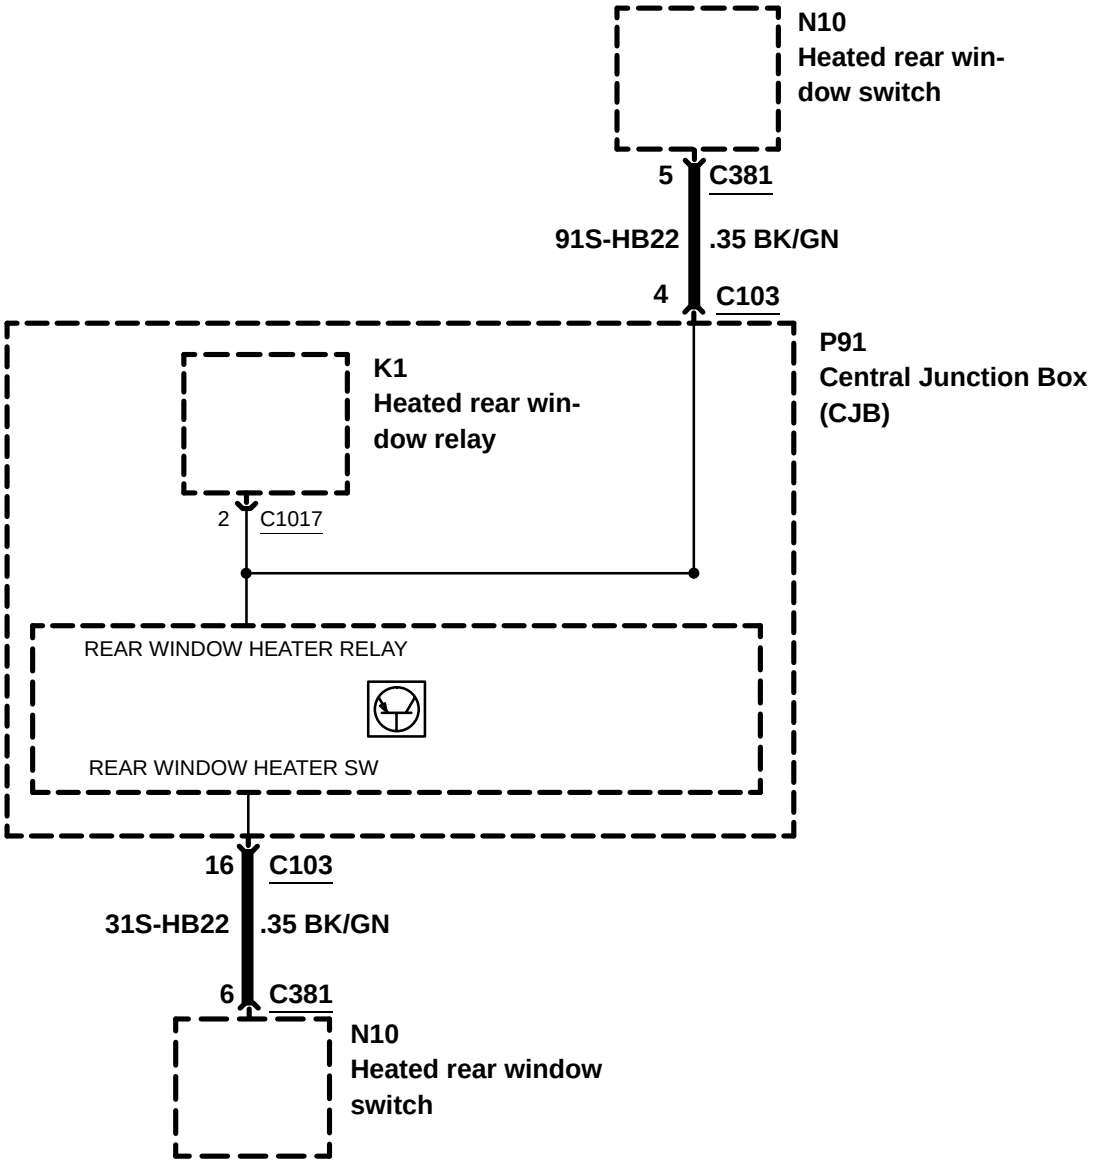


Multifunction Electronic Control Modules

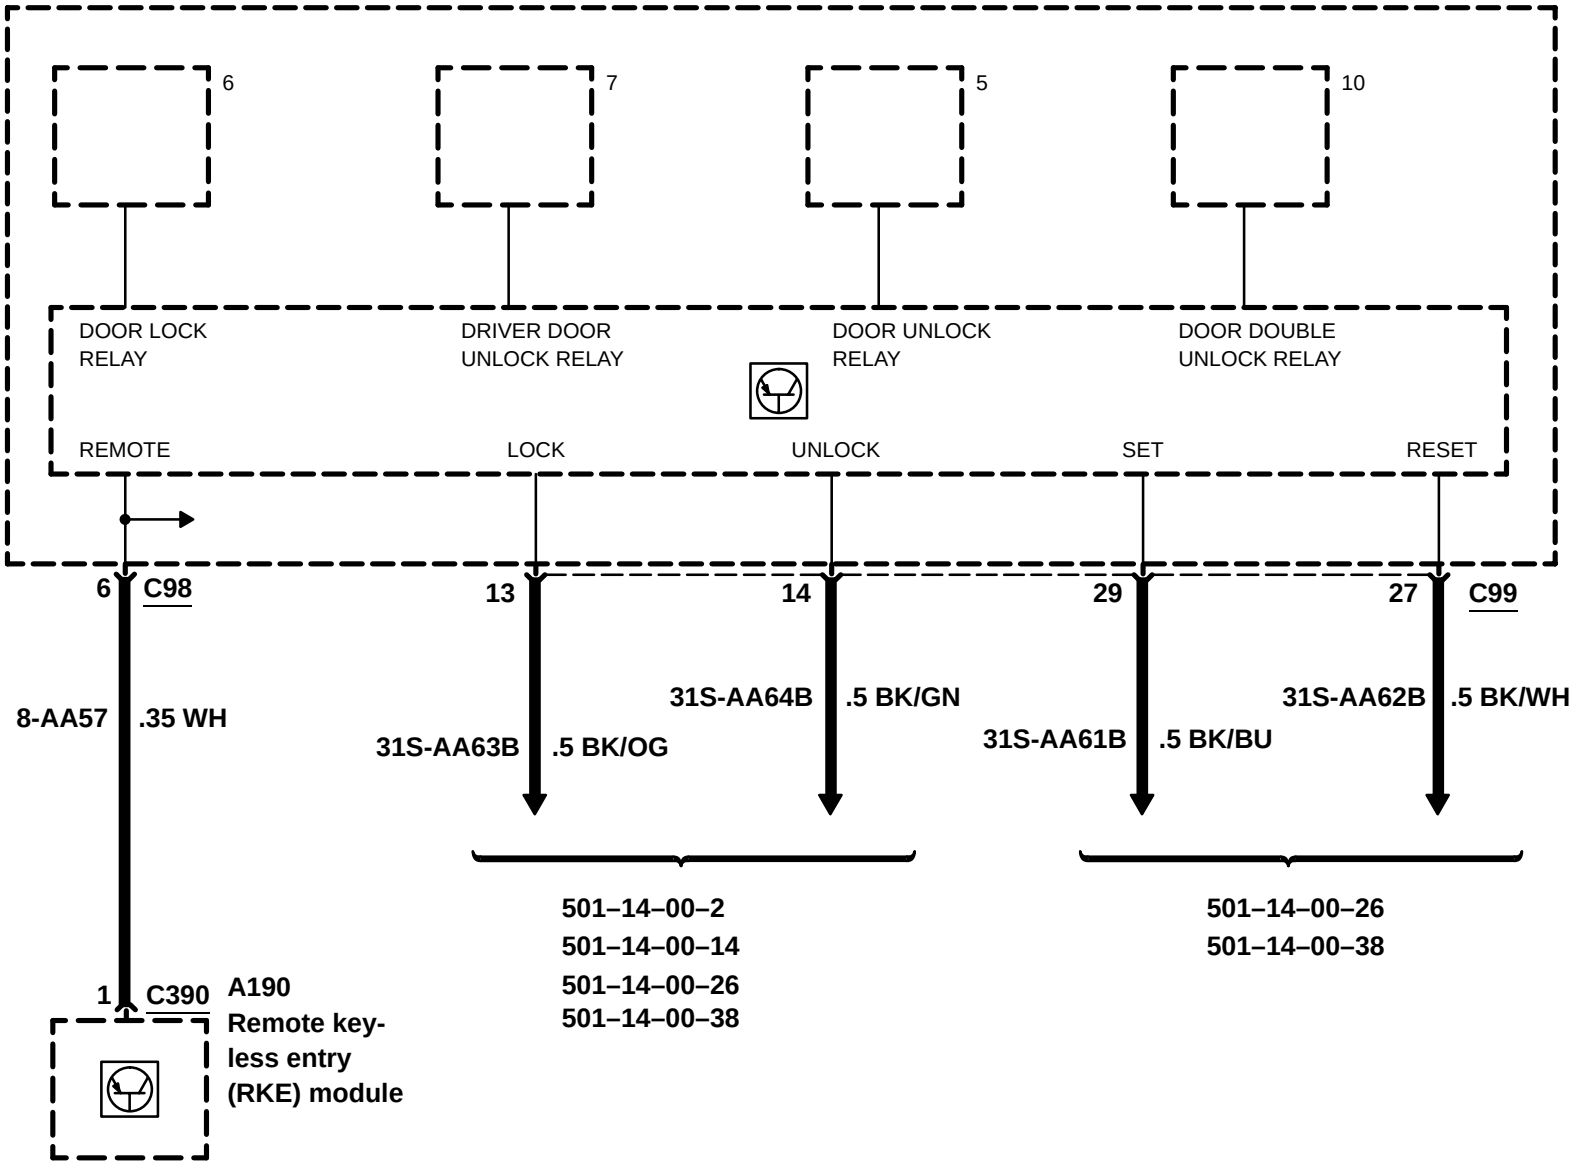


P91
Central Junction Box (CJB)

5) Door unlock relay
6) Door lock relay
7) Driver door unlock relay
10) Double locking relay


Multifunction Electronic Control Modules

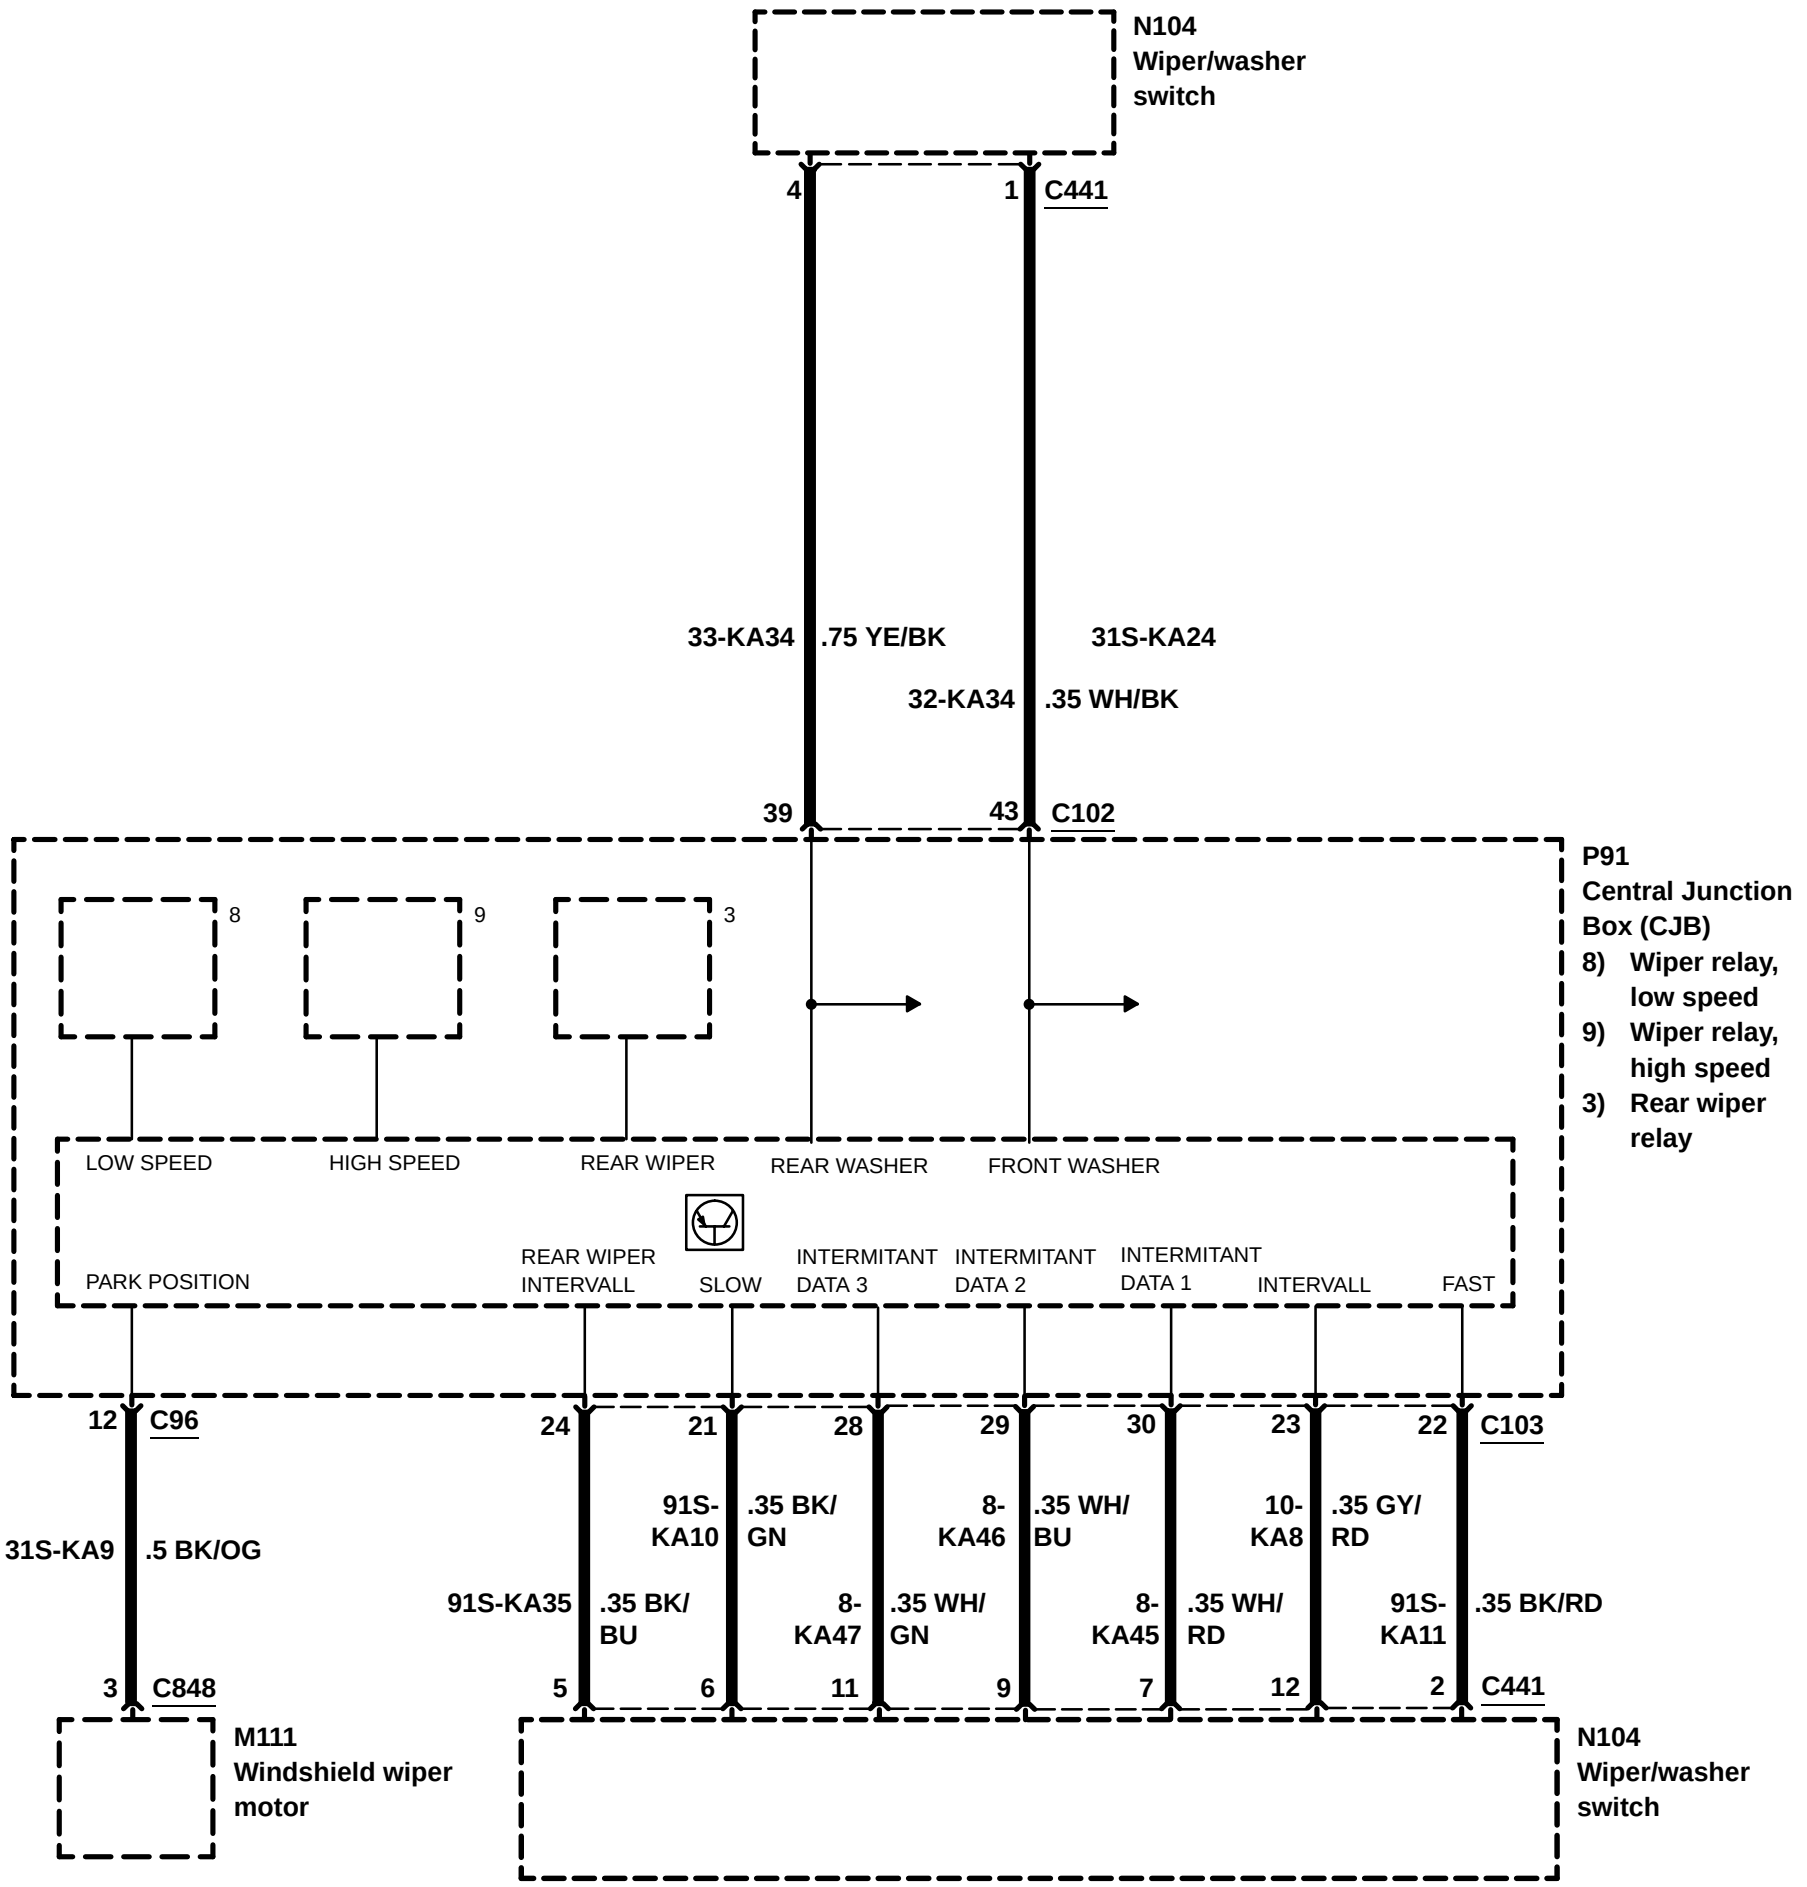


Multifunction Electronic Control Modules

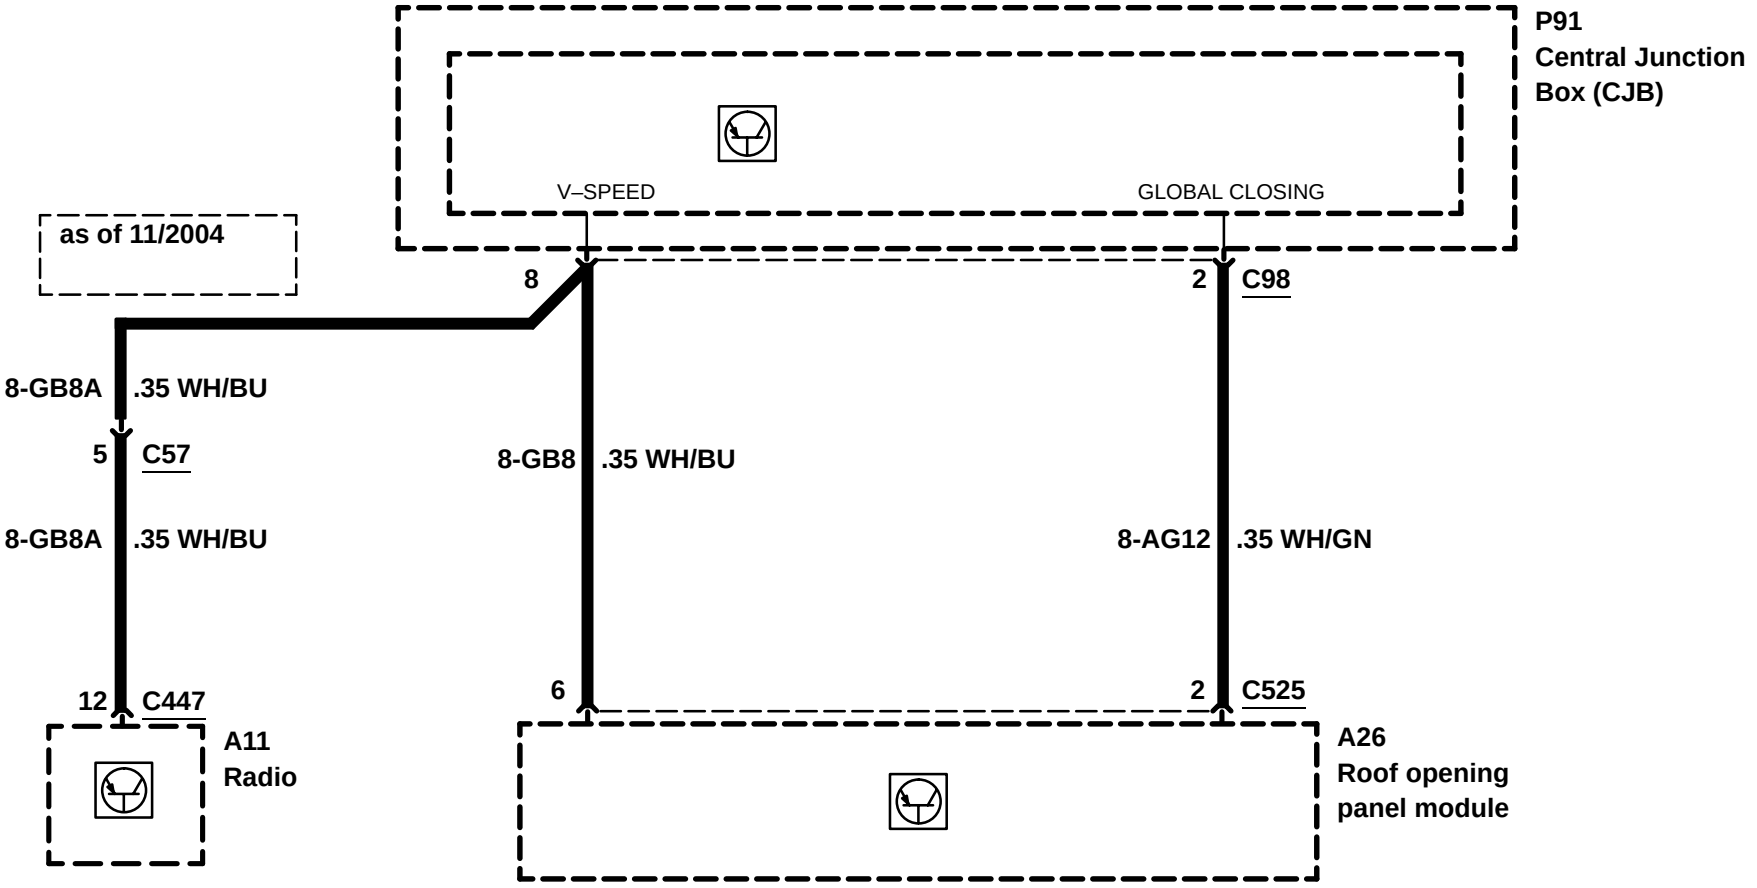


Rear View Mirrors – LHD, with front power windows

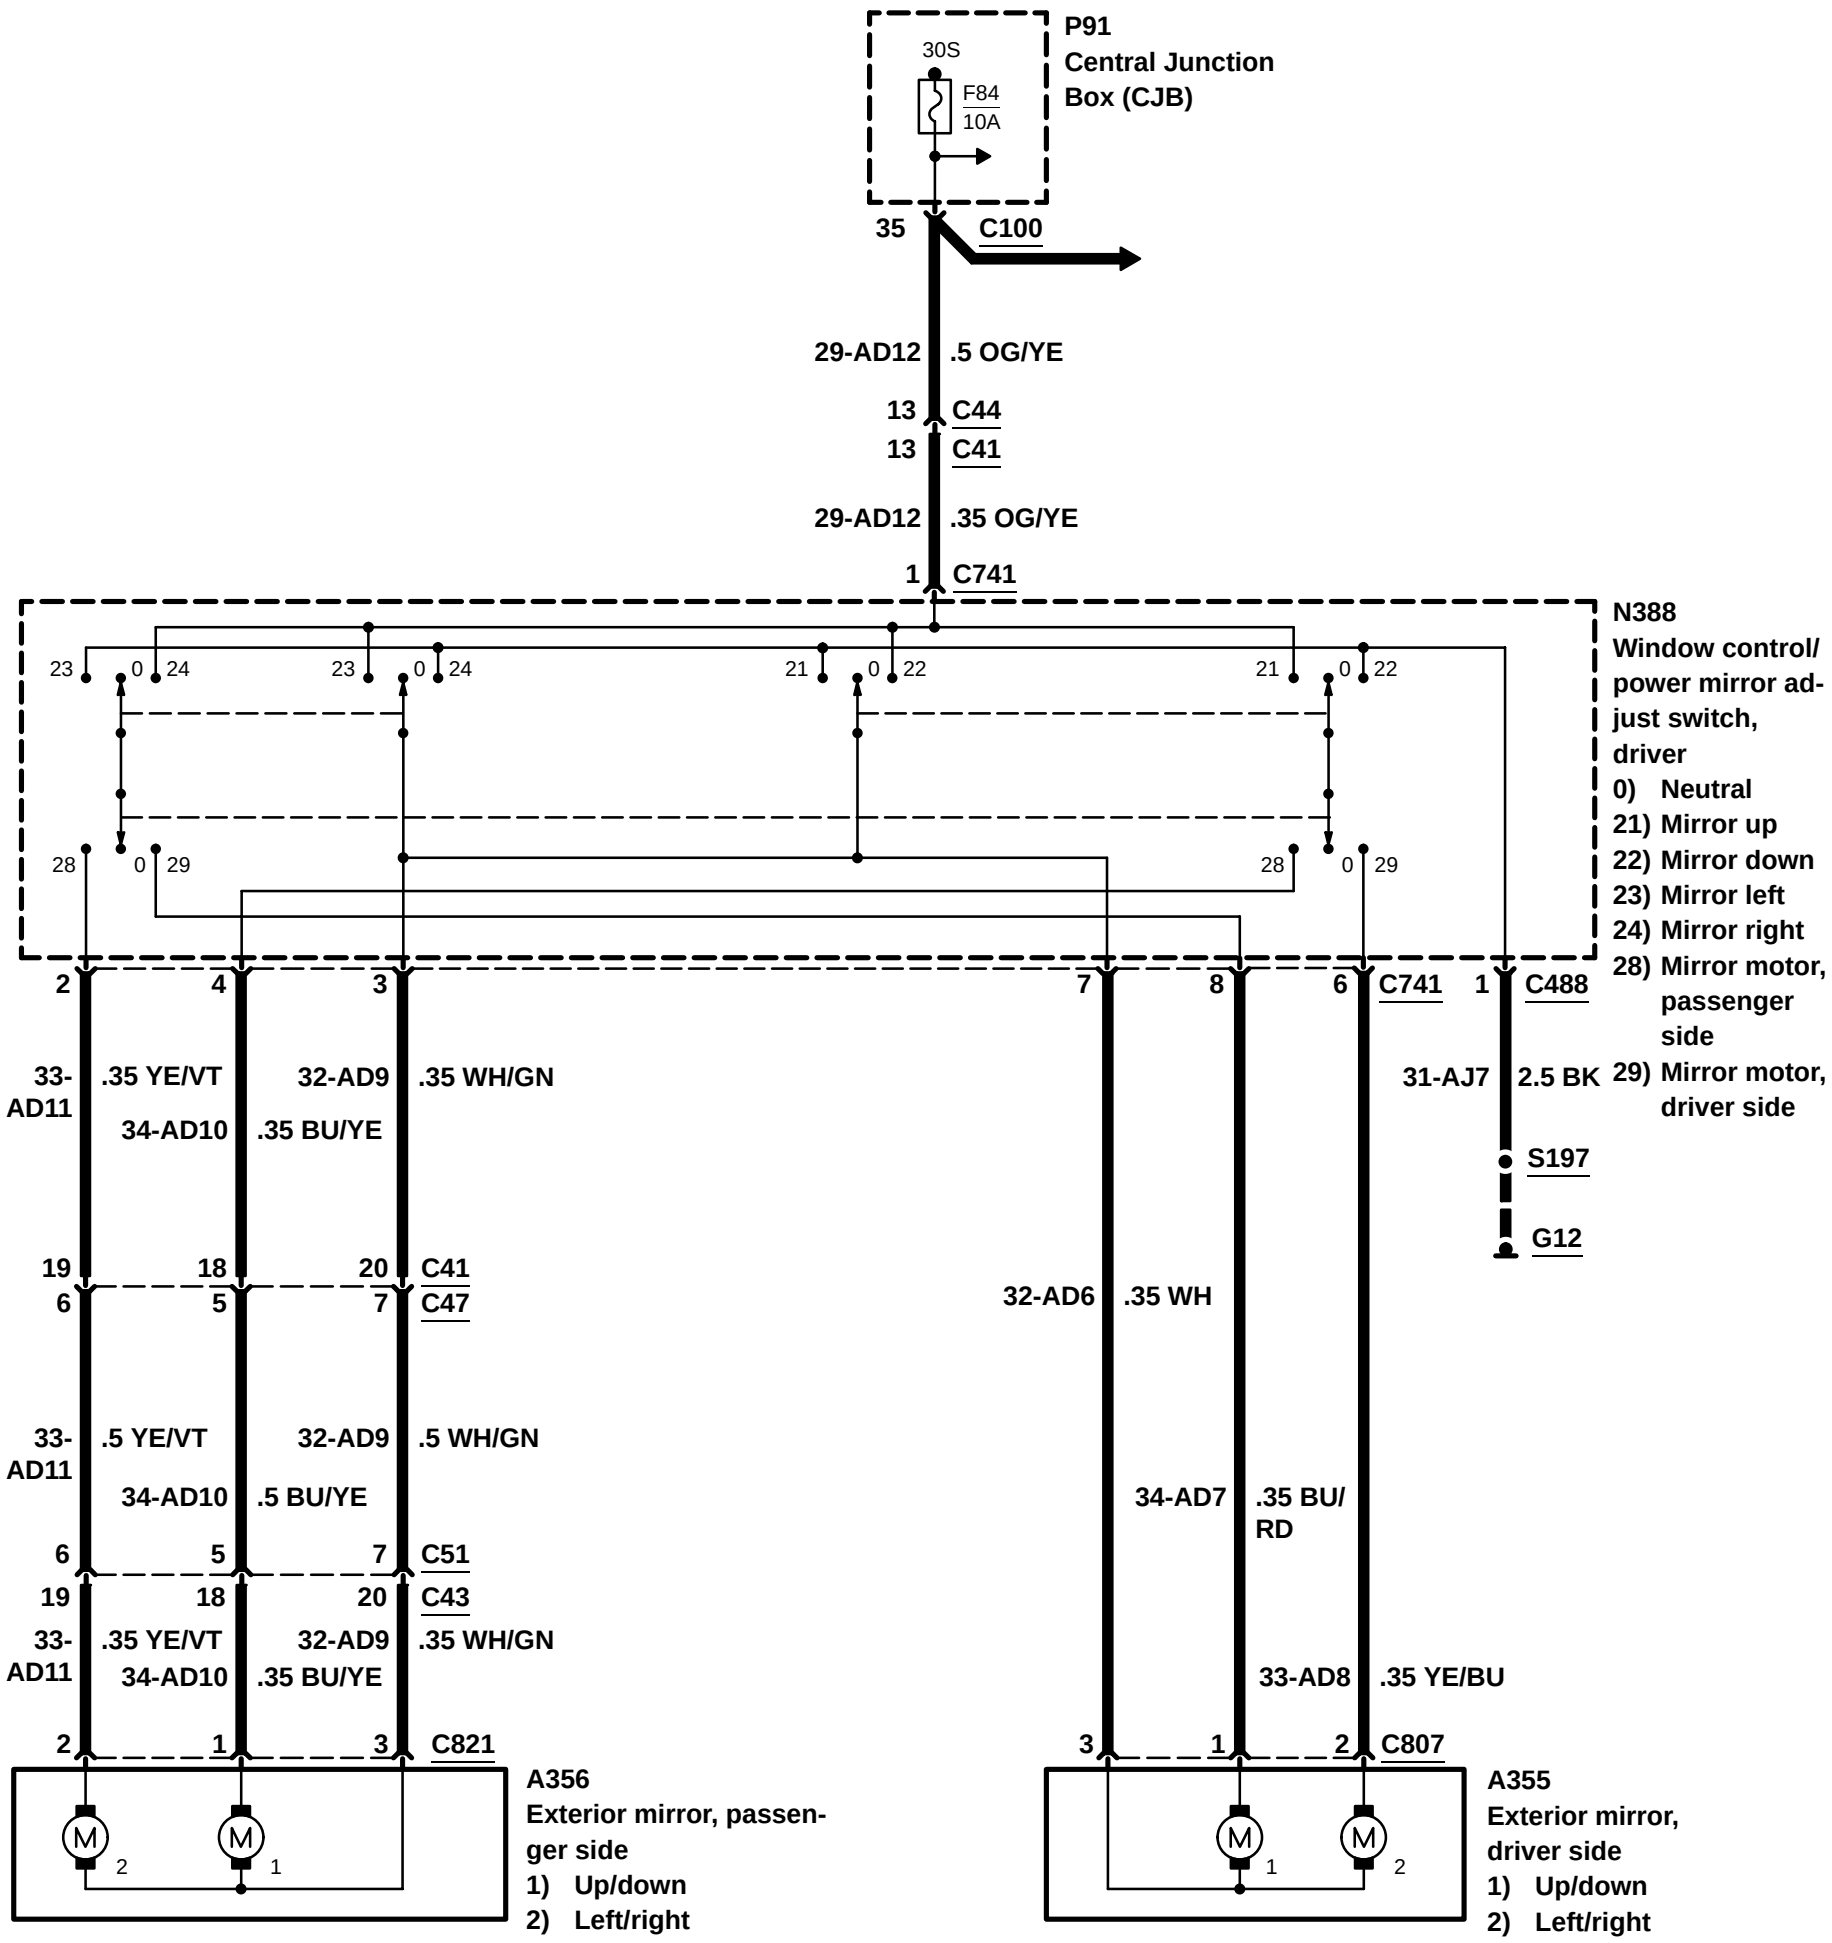


Rear View Mirrors – RHD, with front power windows

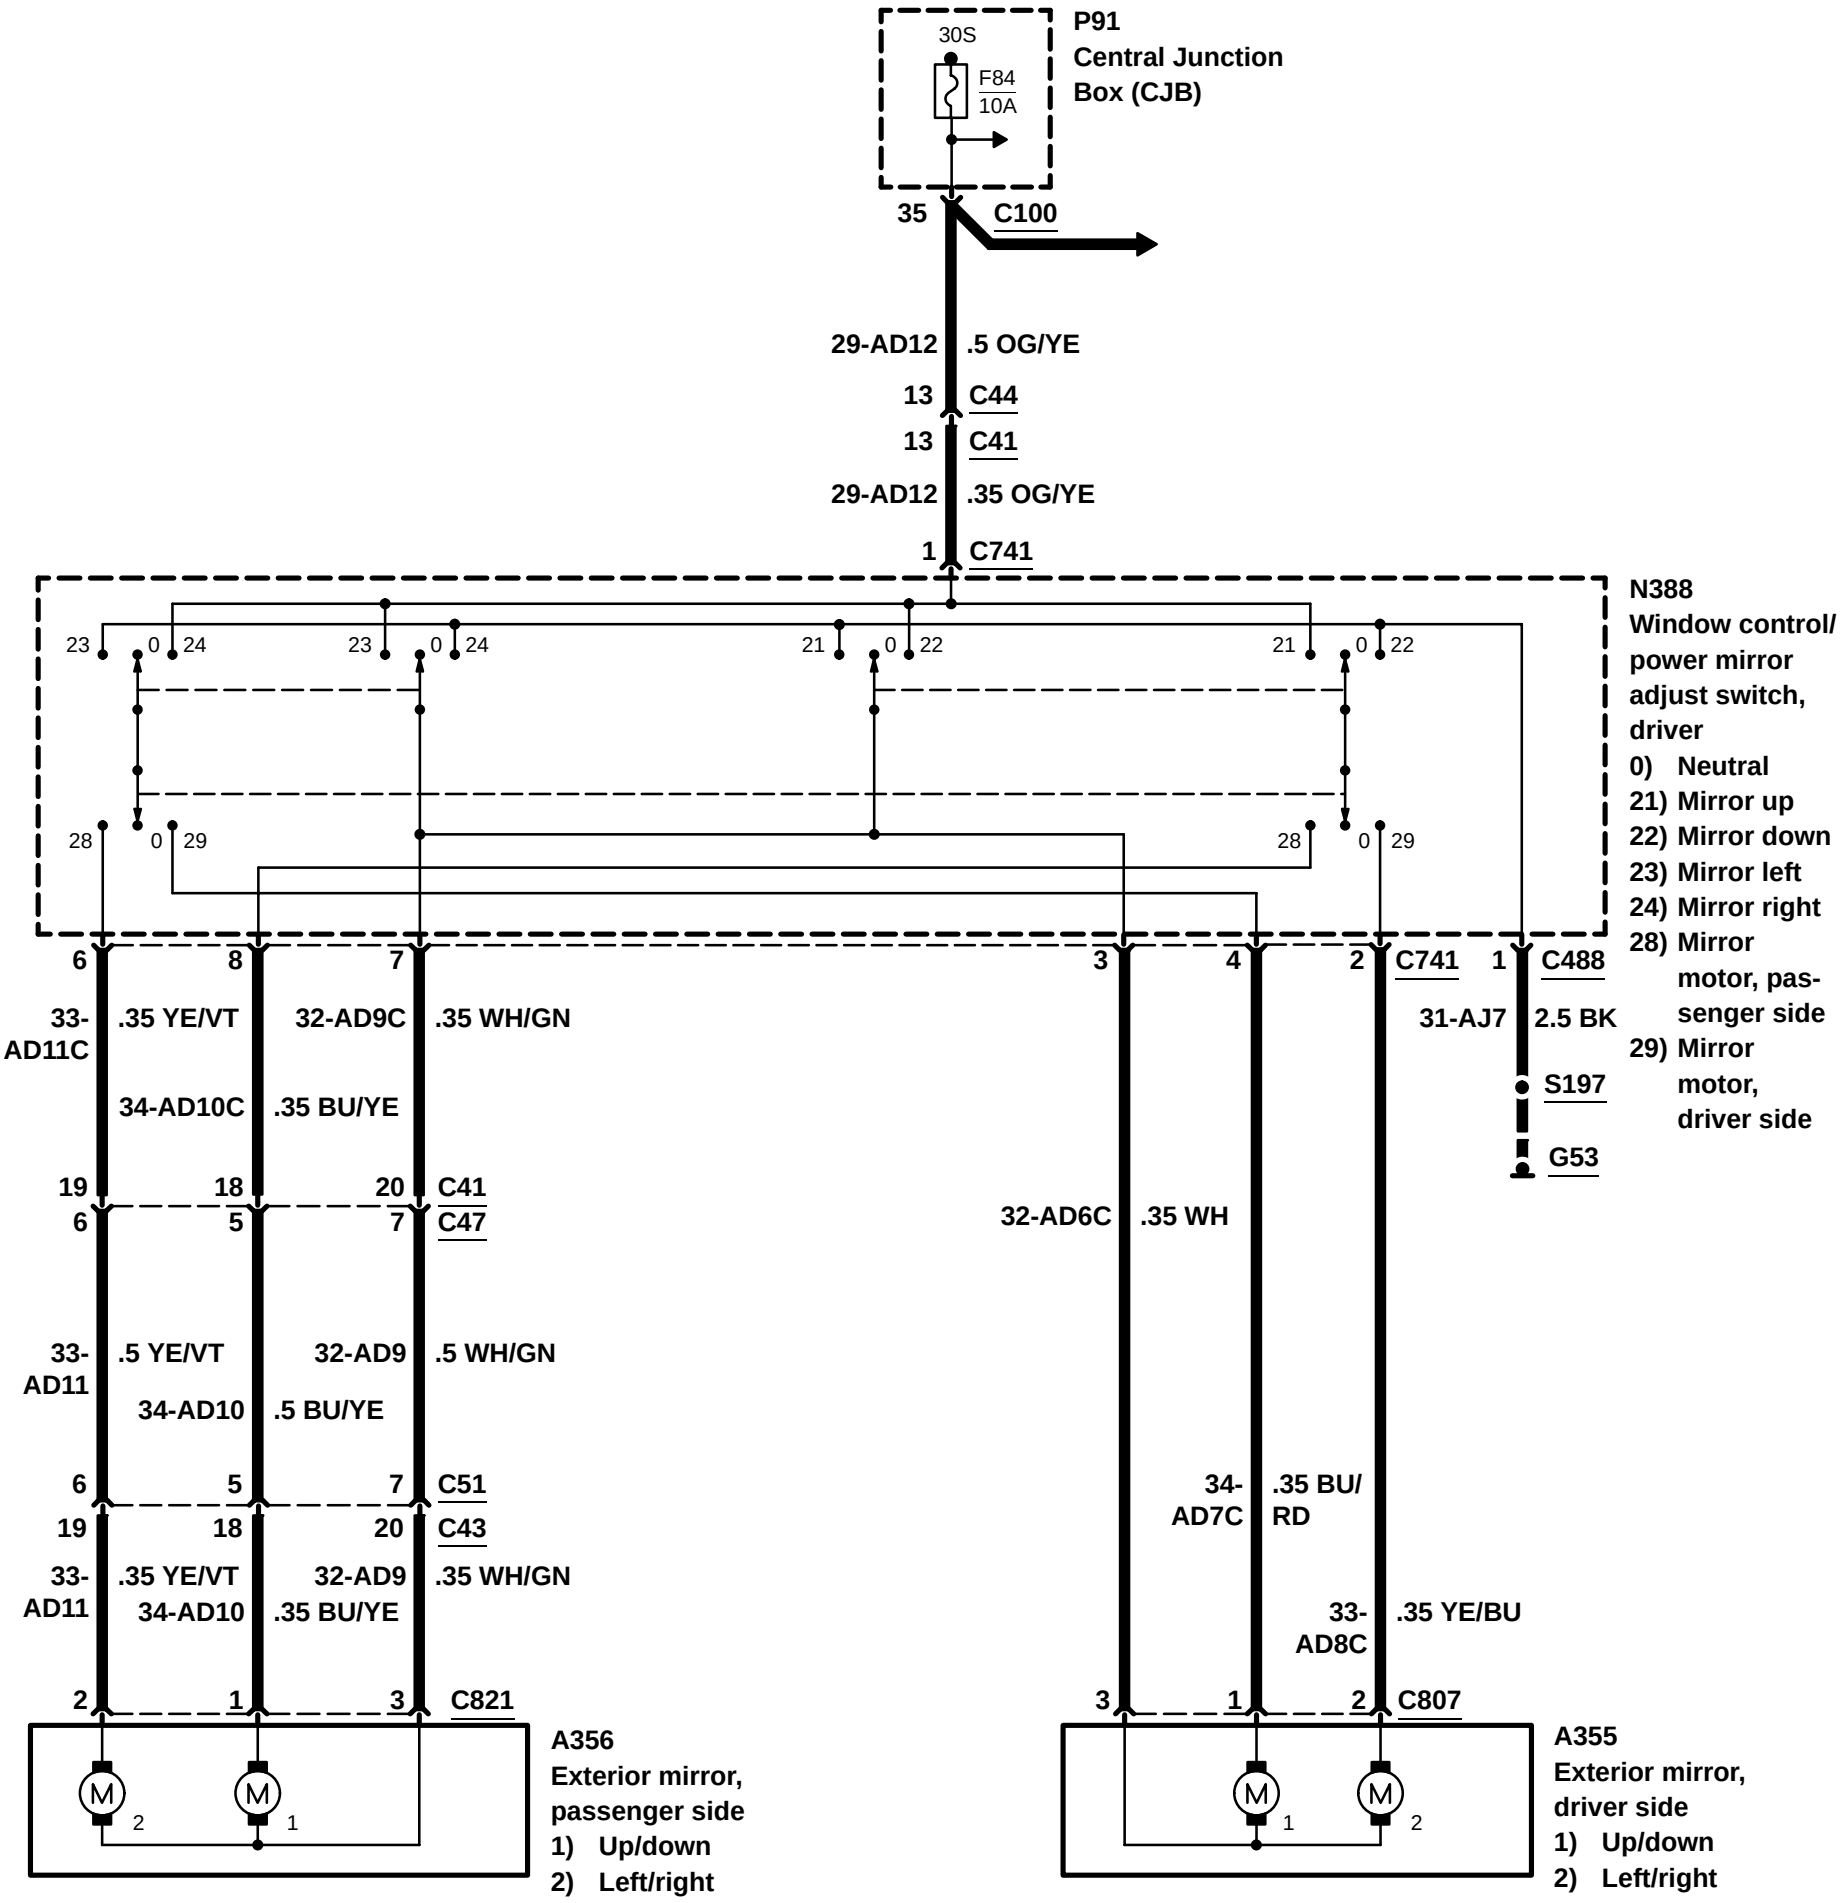


Rear View Mirrors – with front and rear power windows

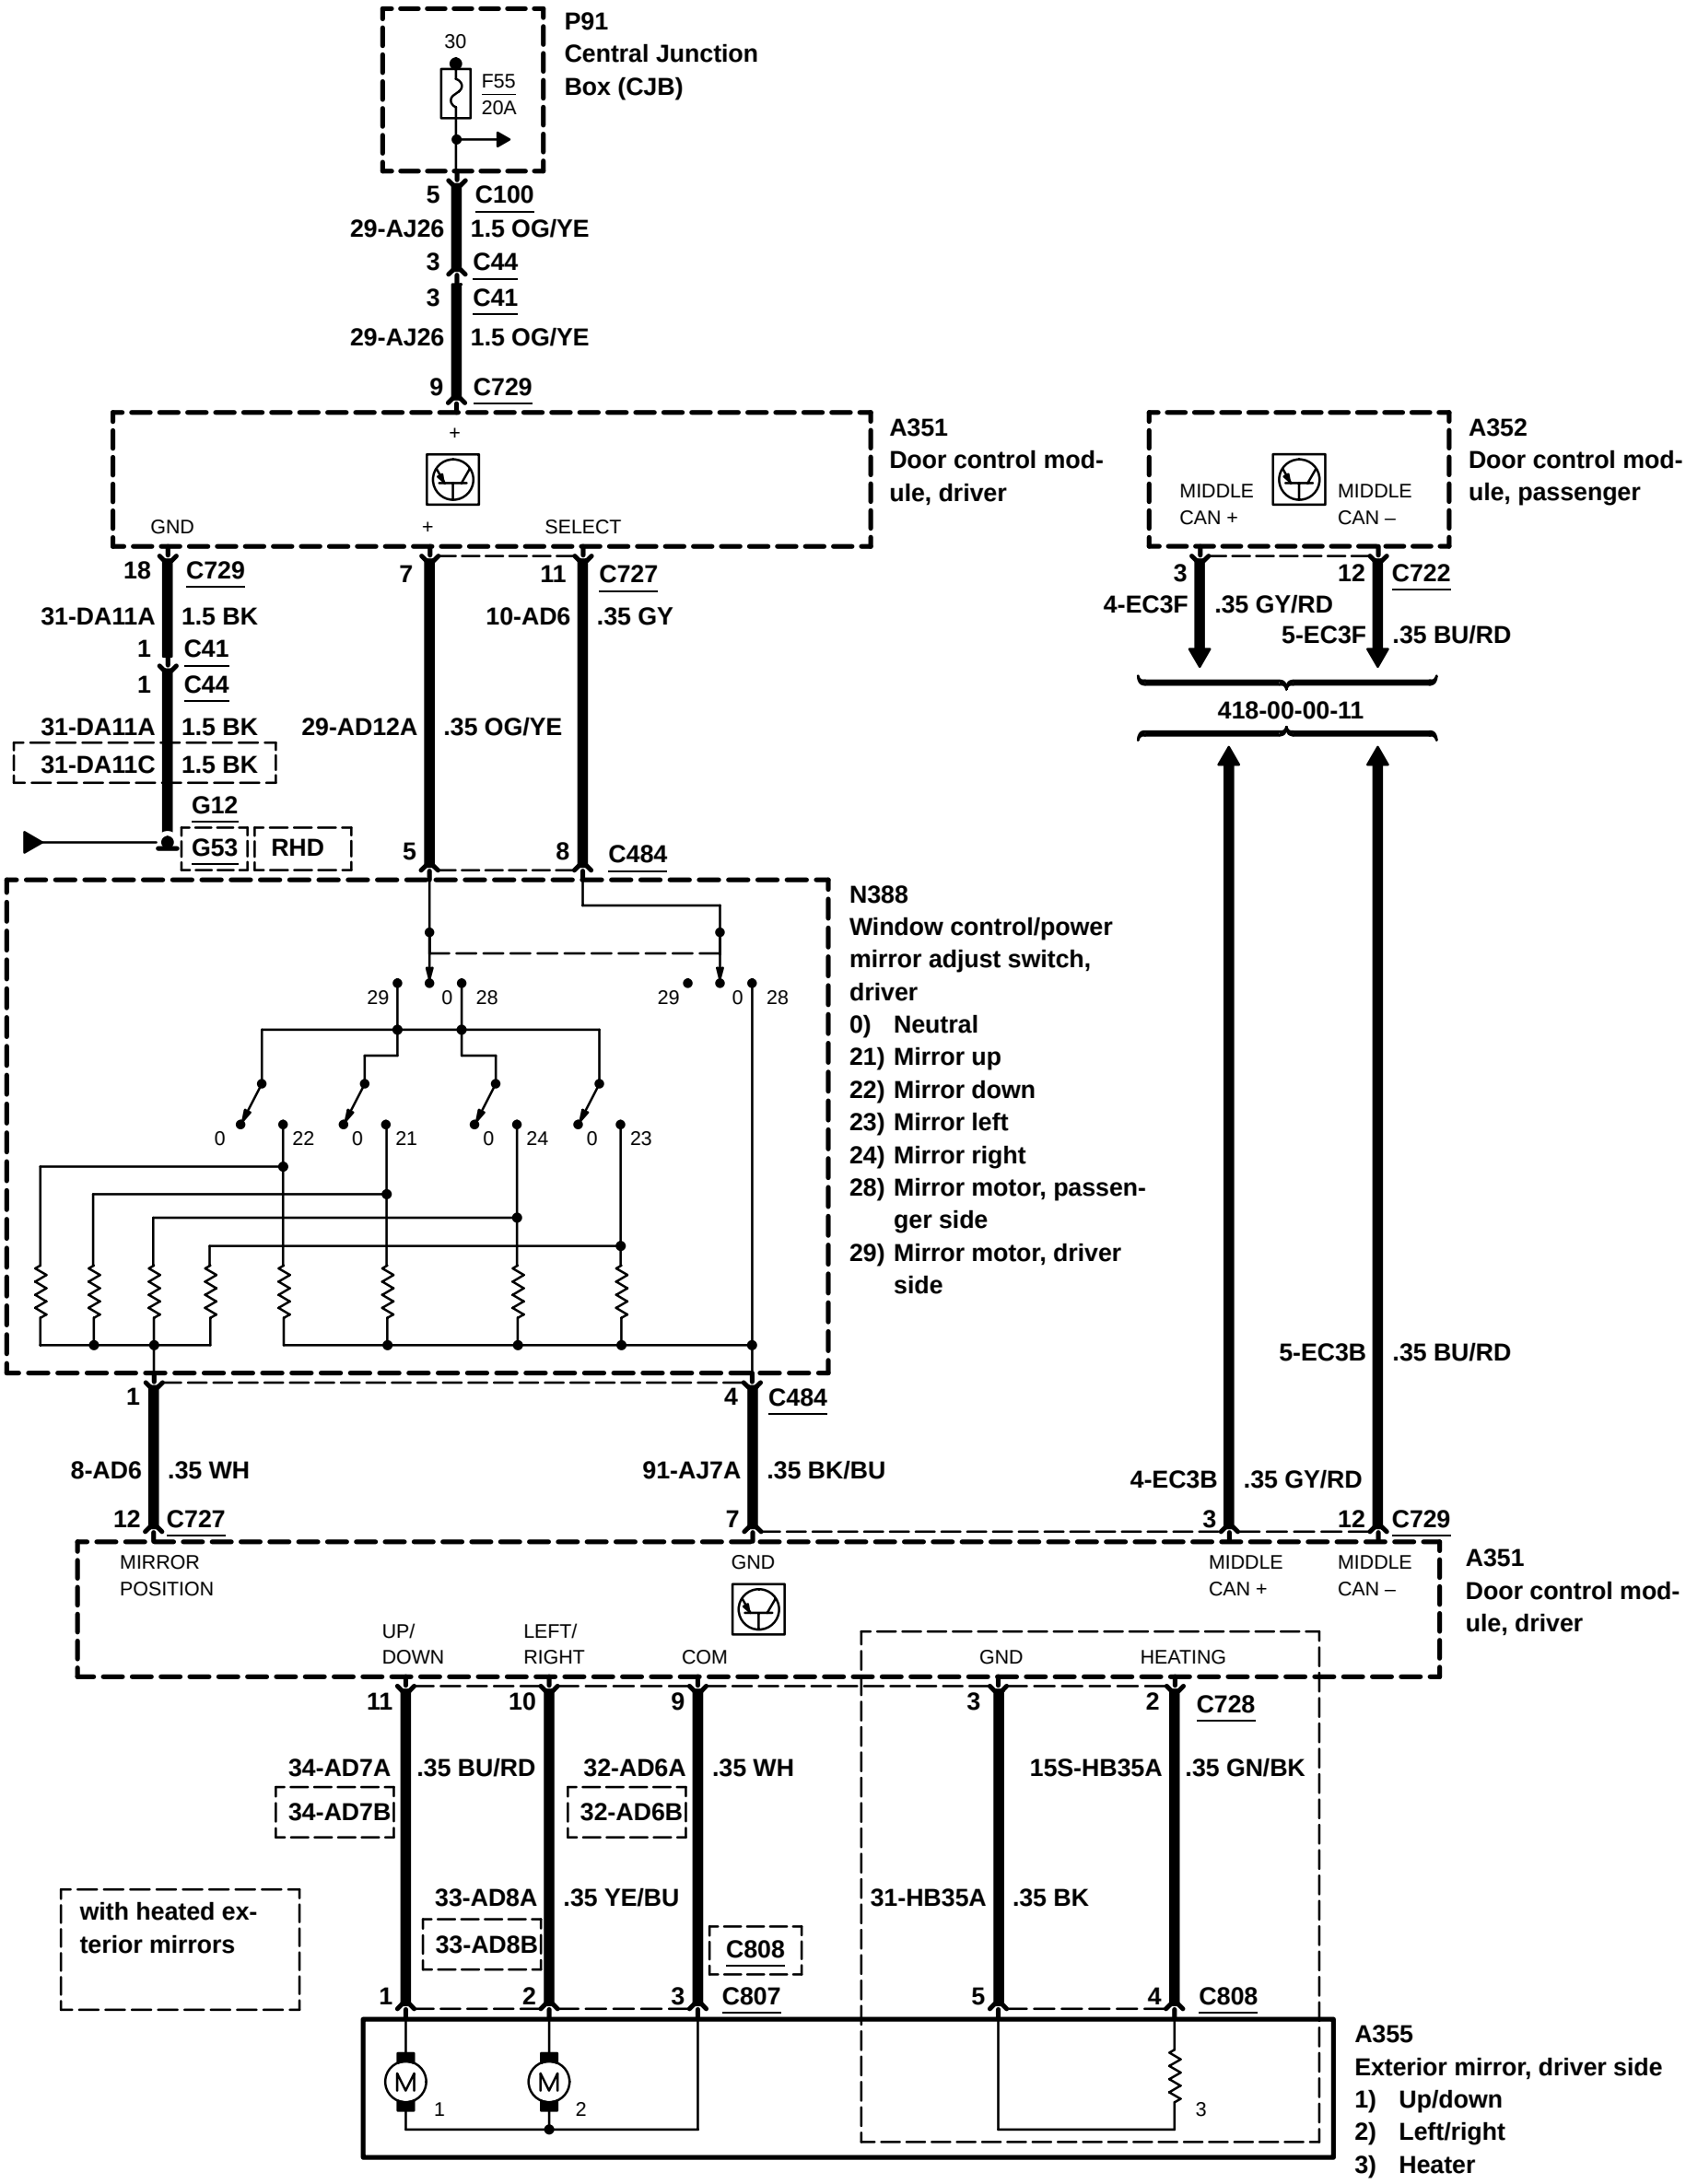


Rear View Mirrors – with front and rear power windows

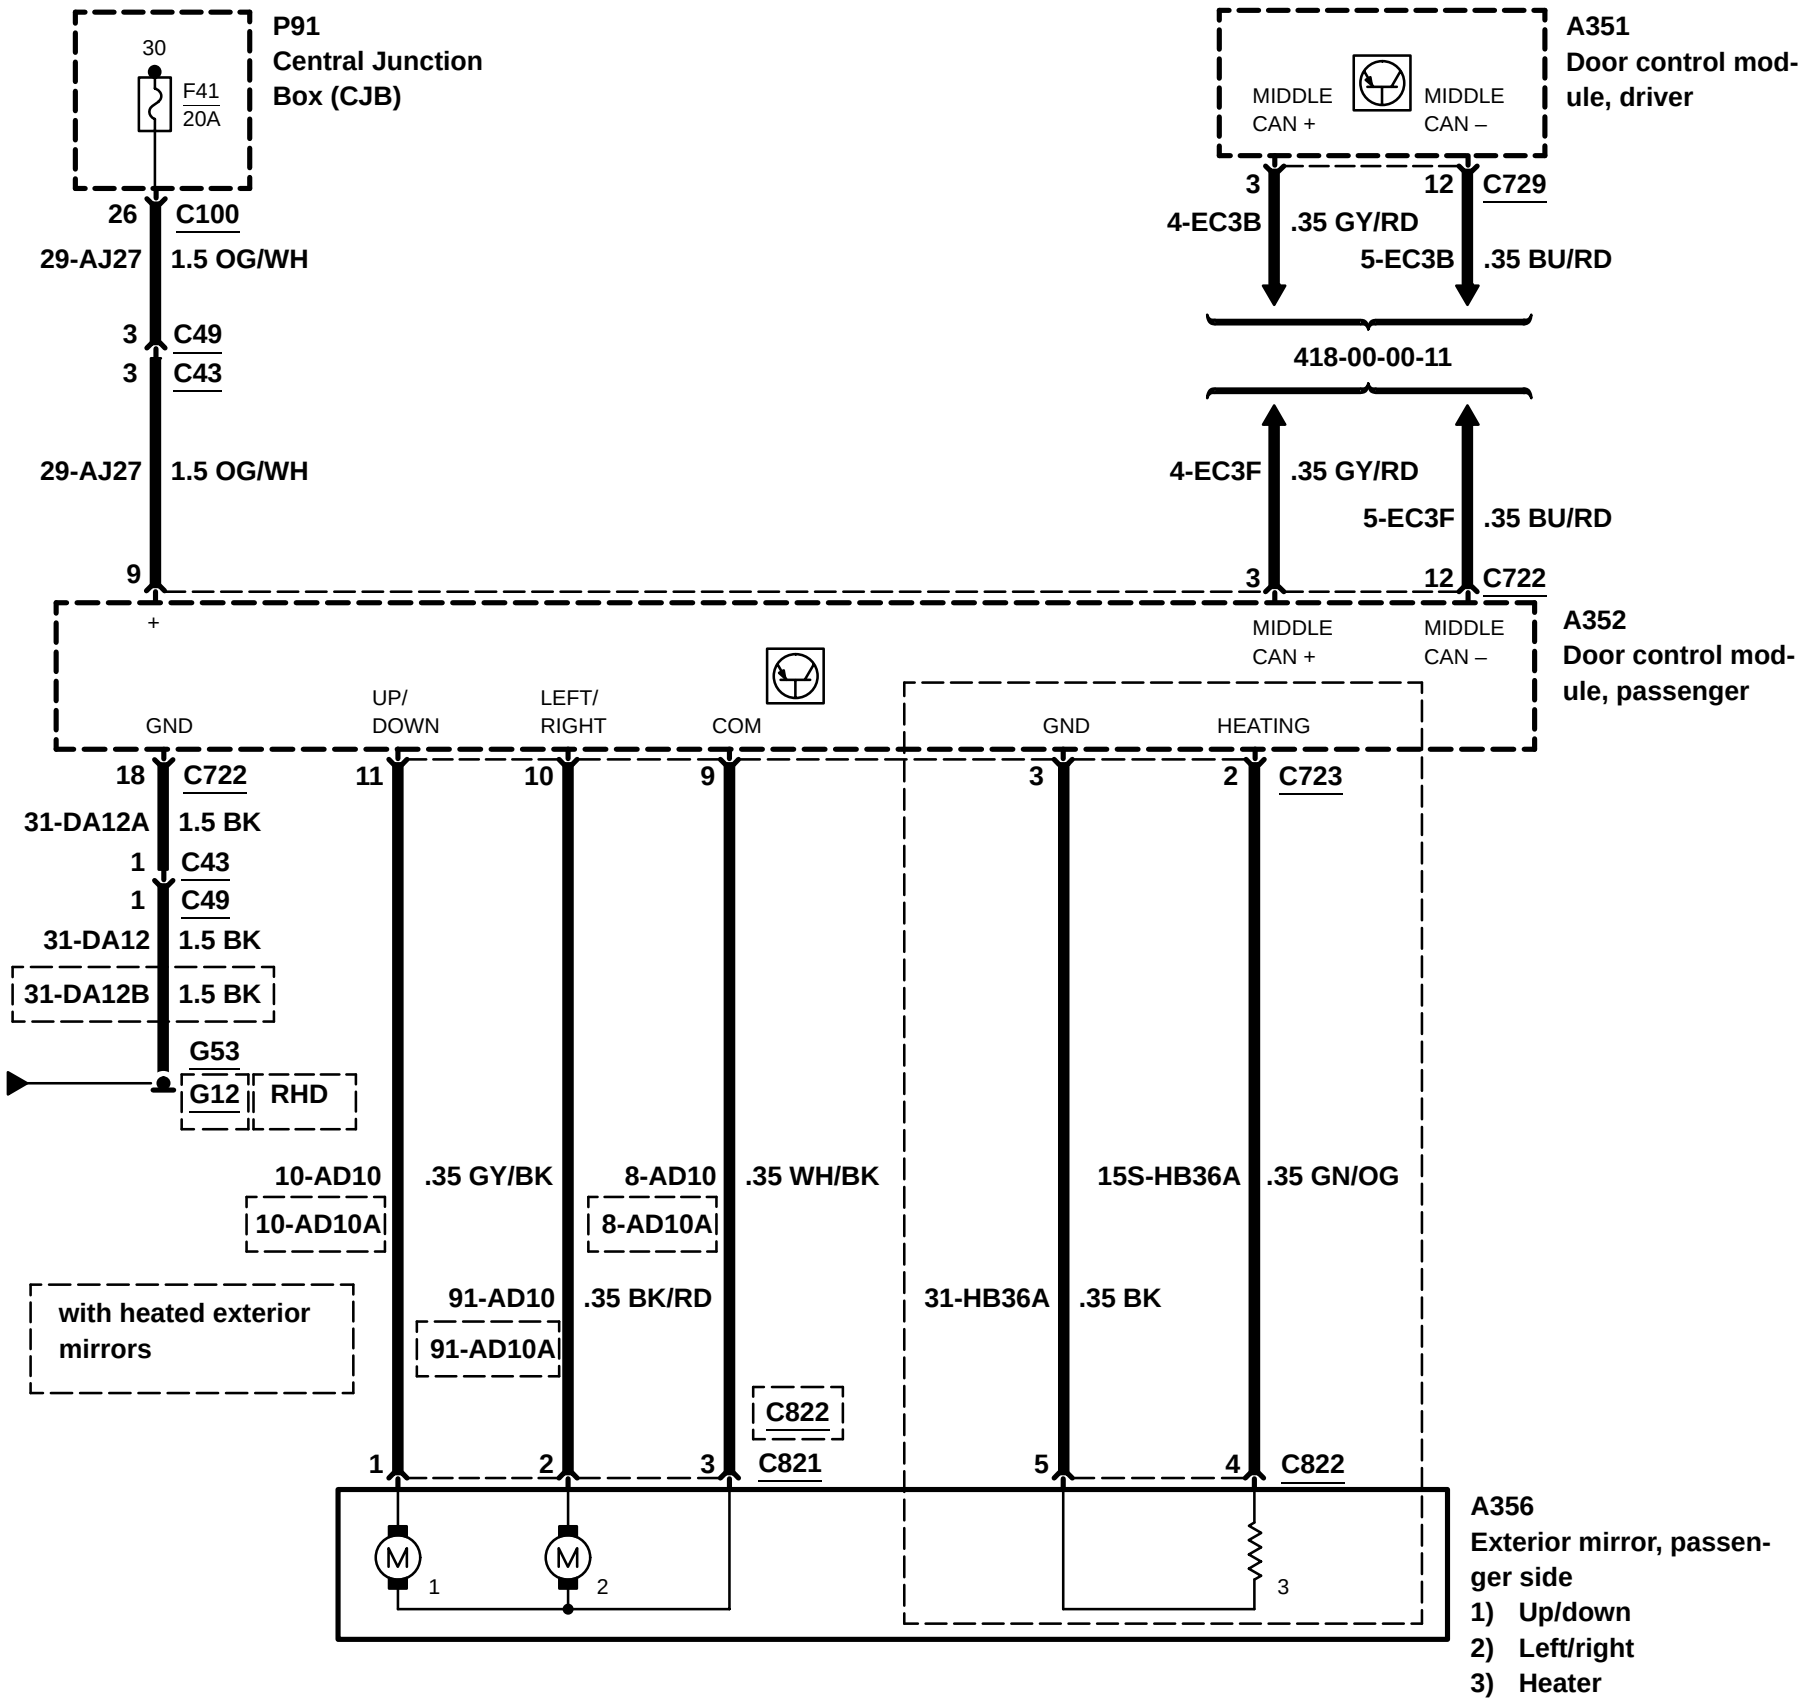


Rear View Mirrors – with power folding mirrors

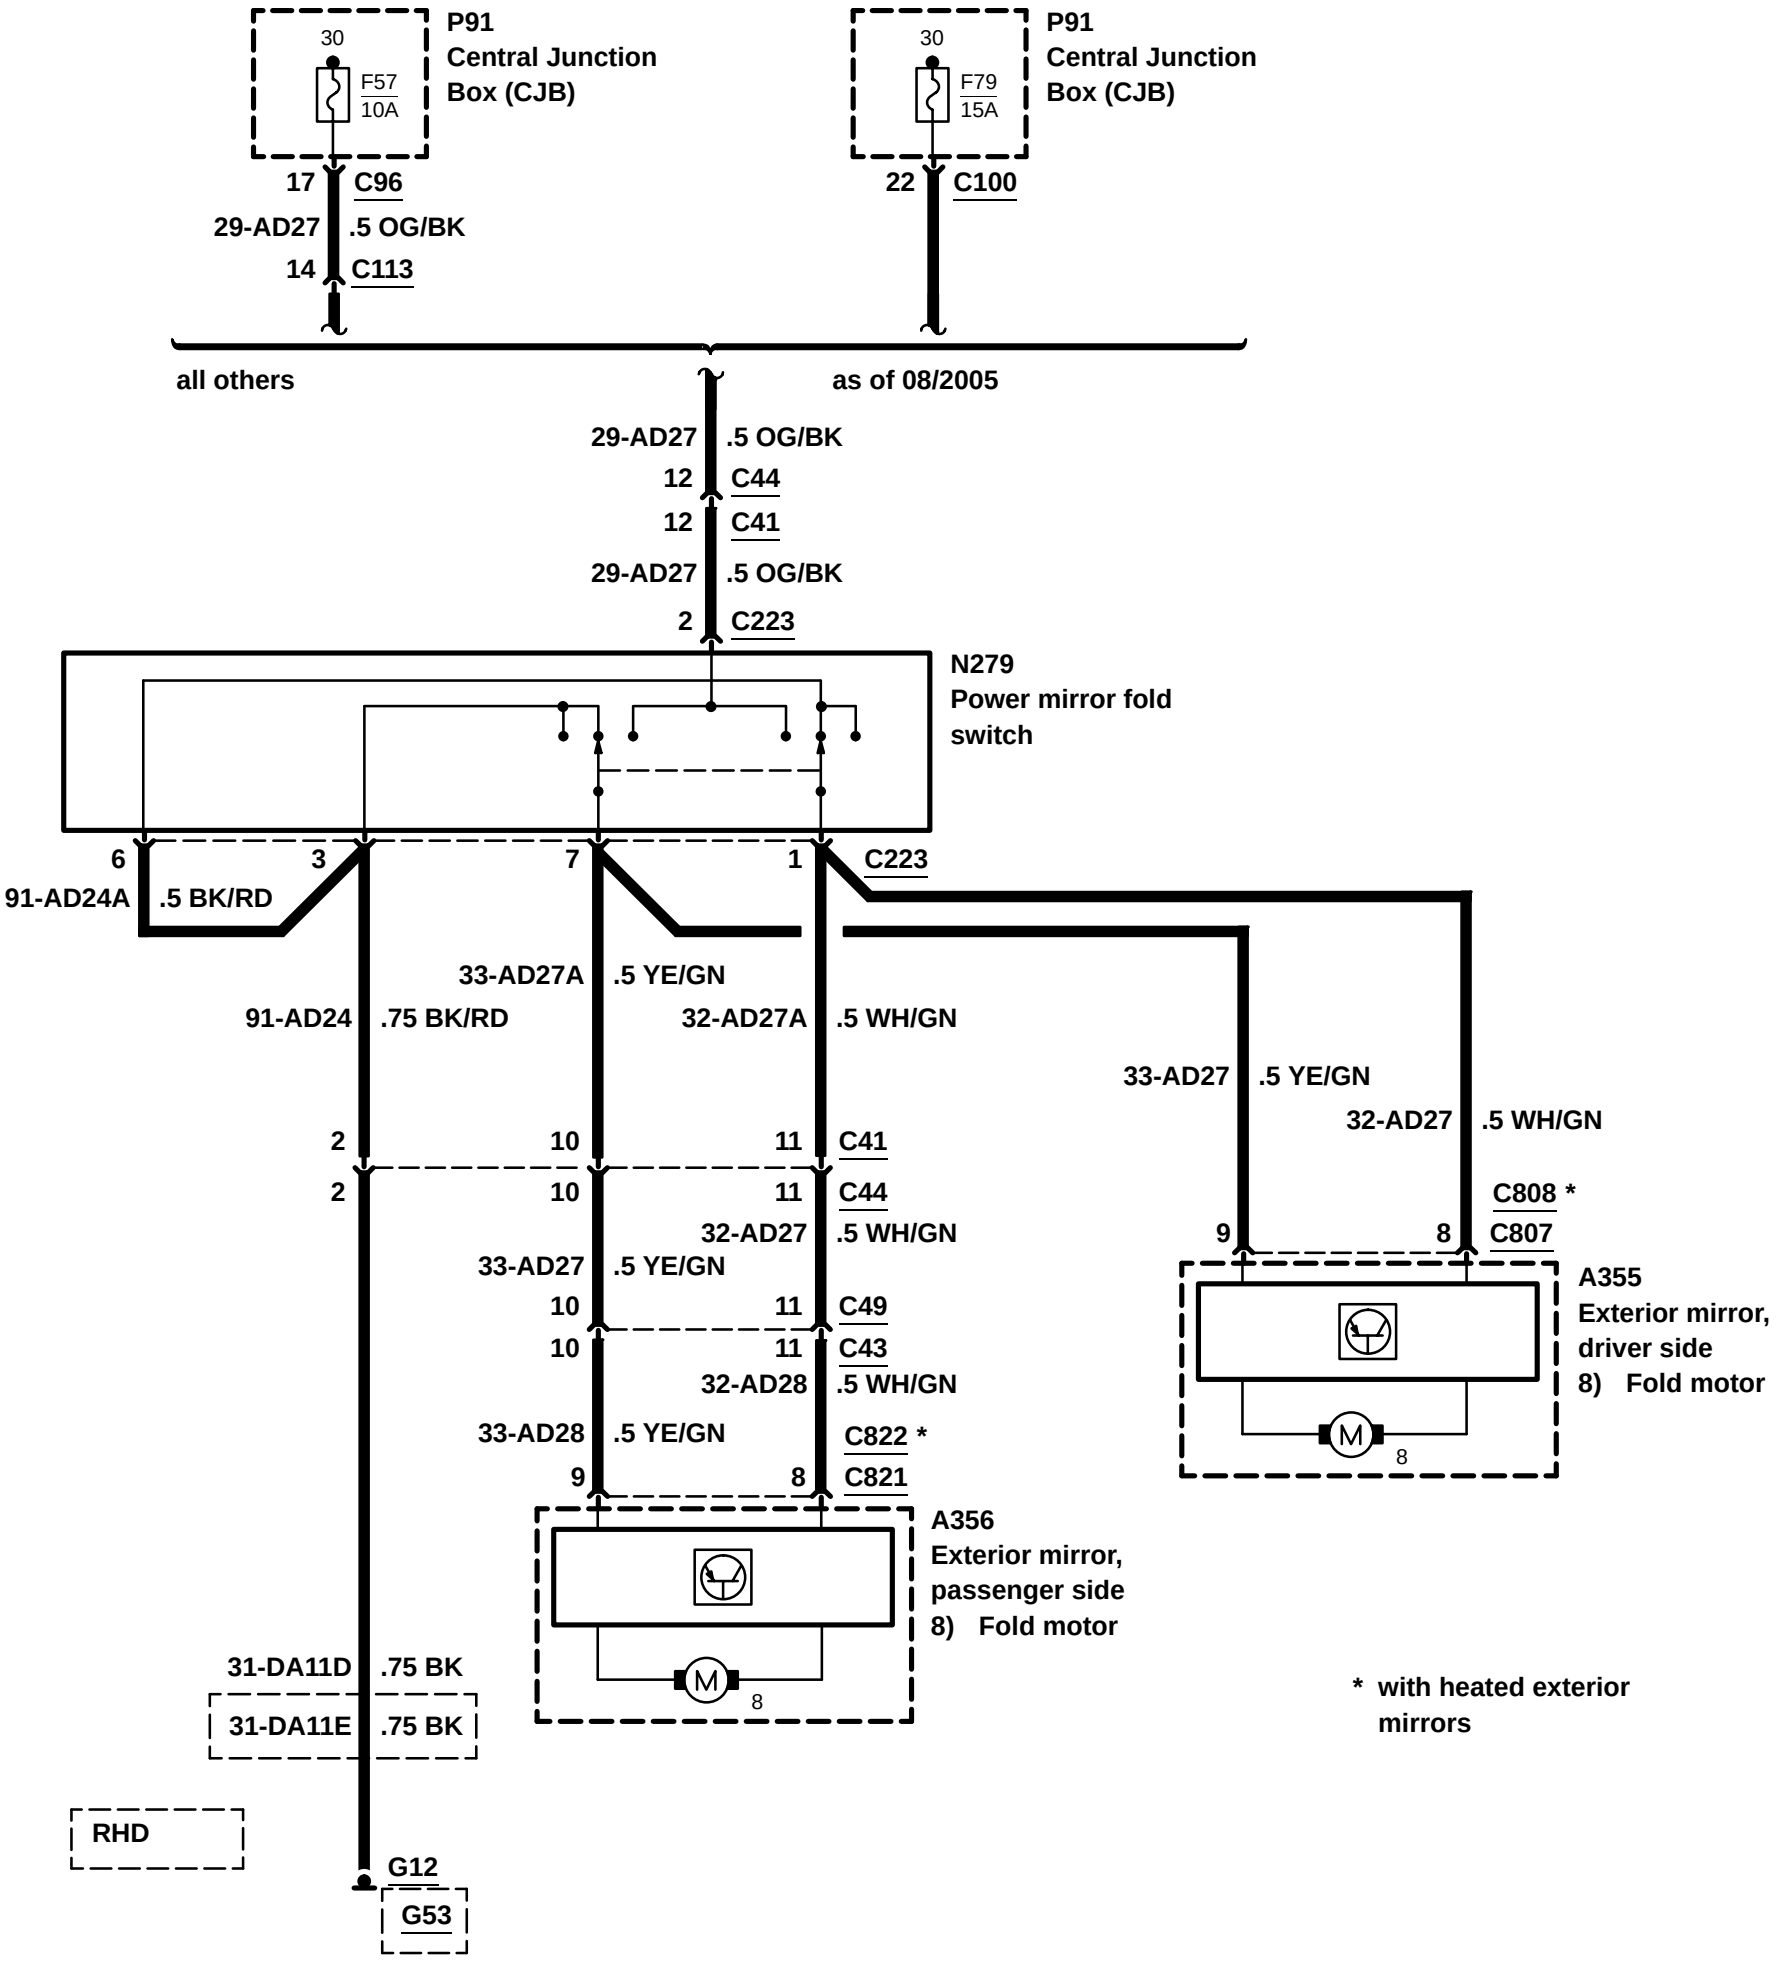


Seating – with power seat

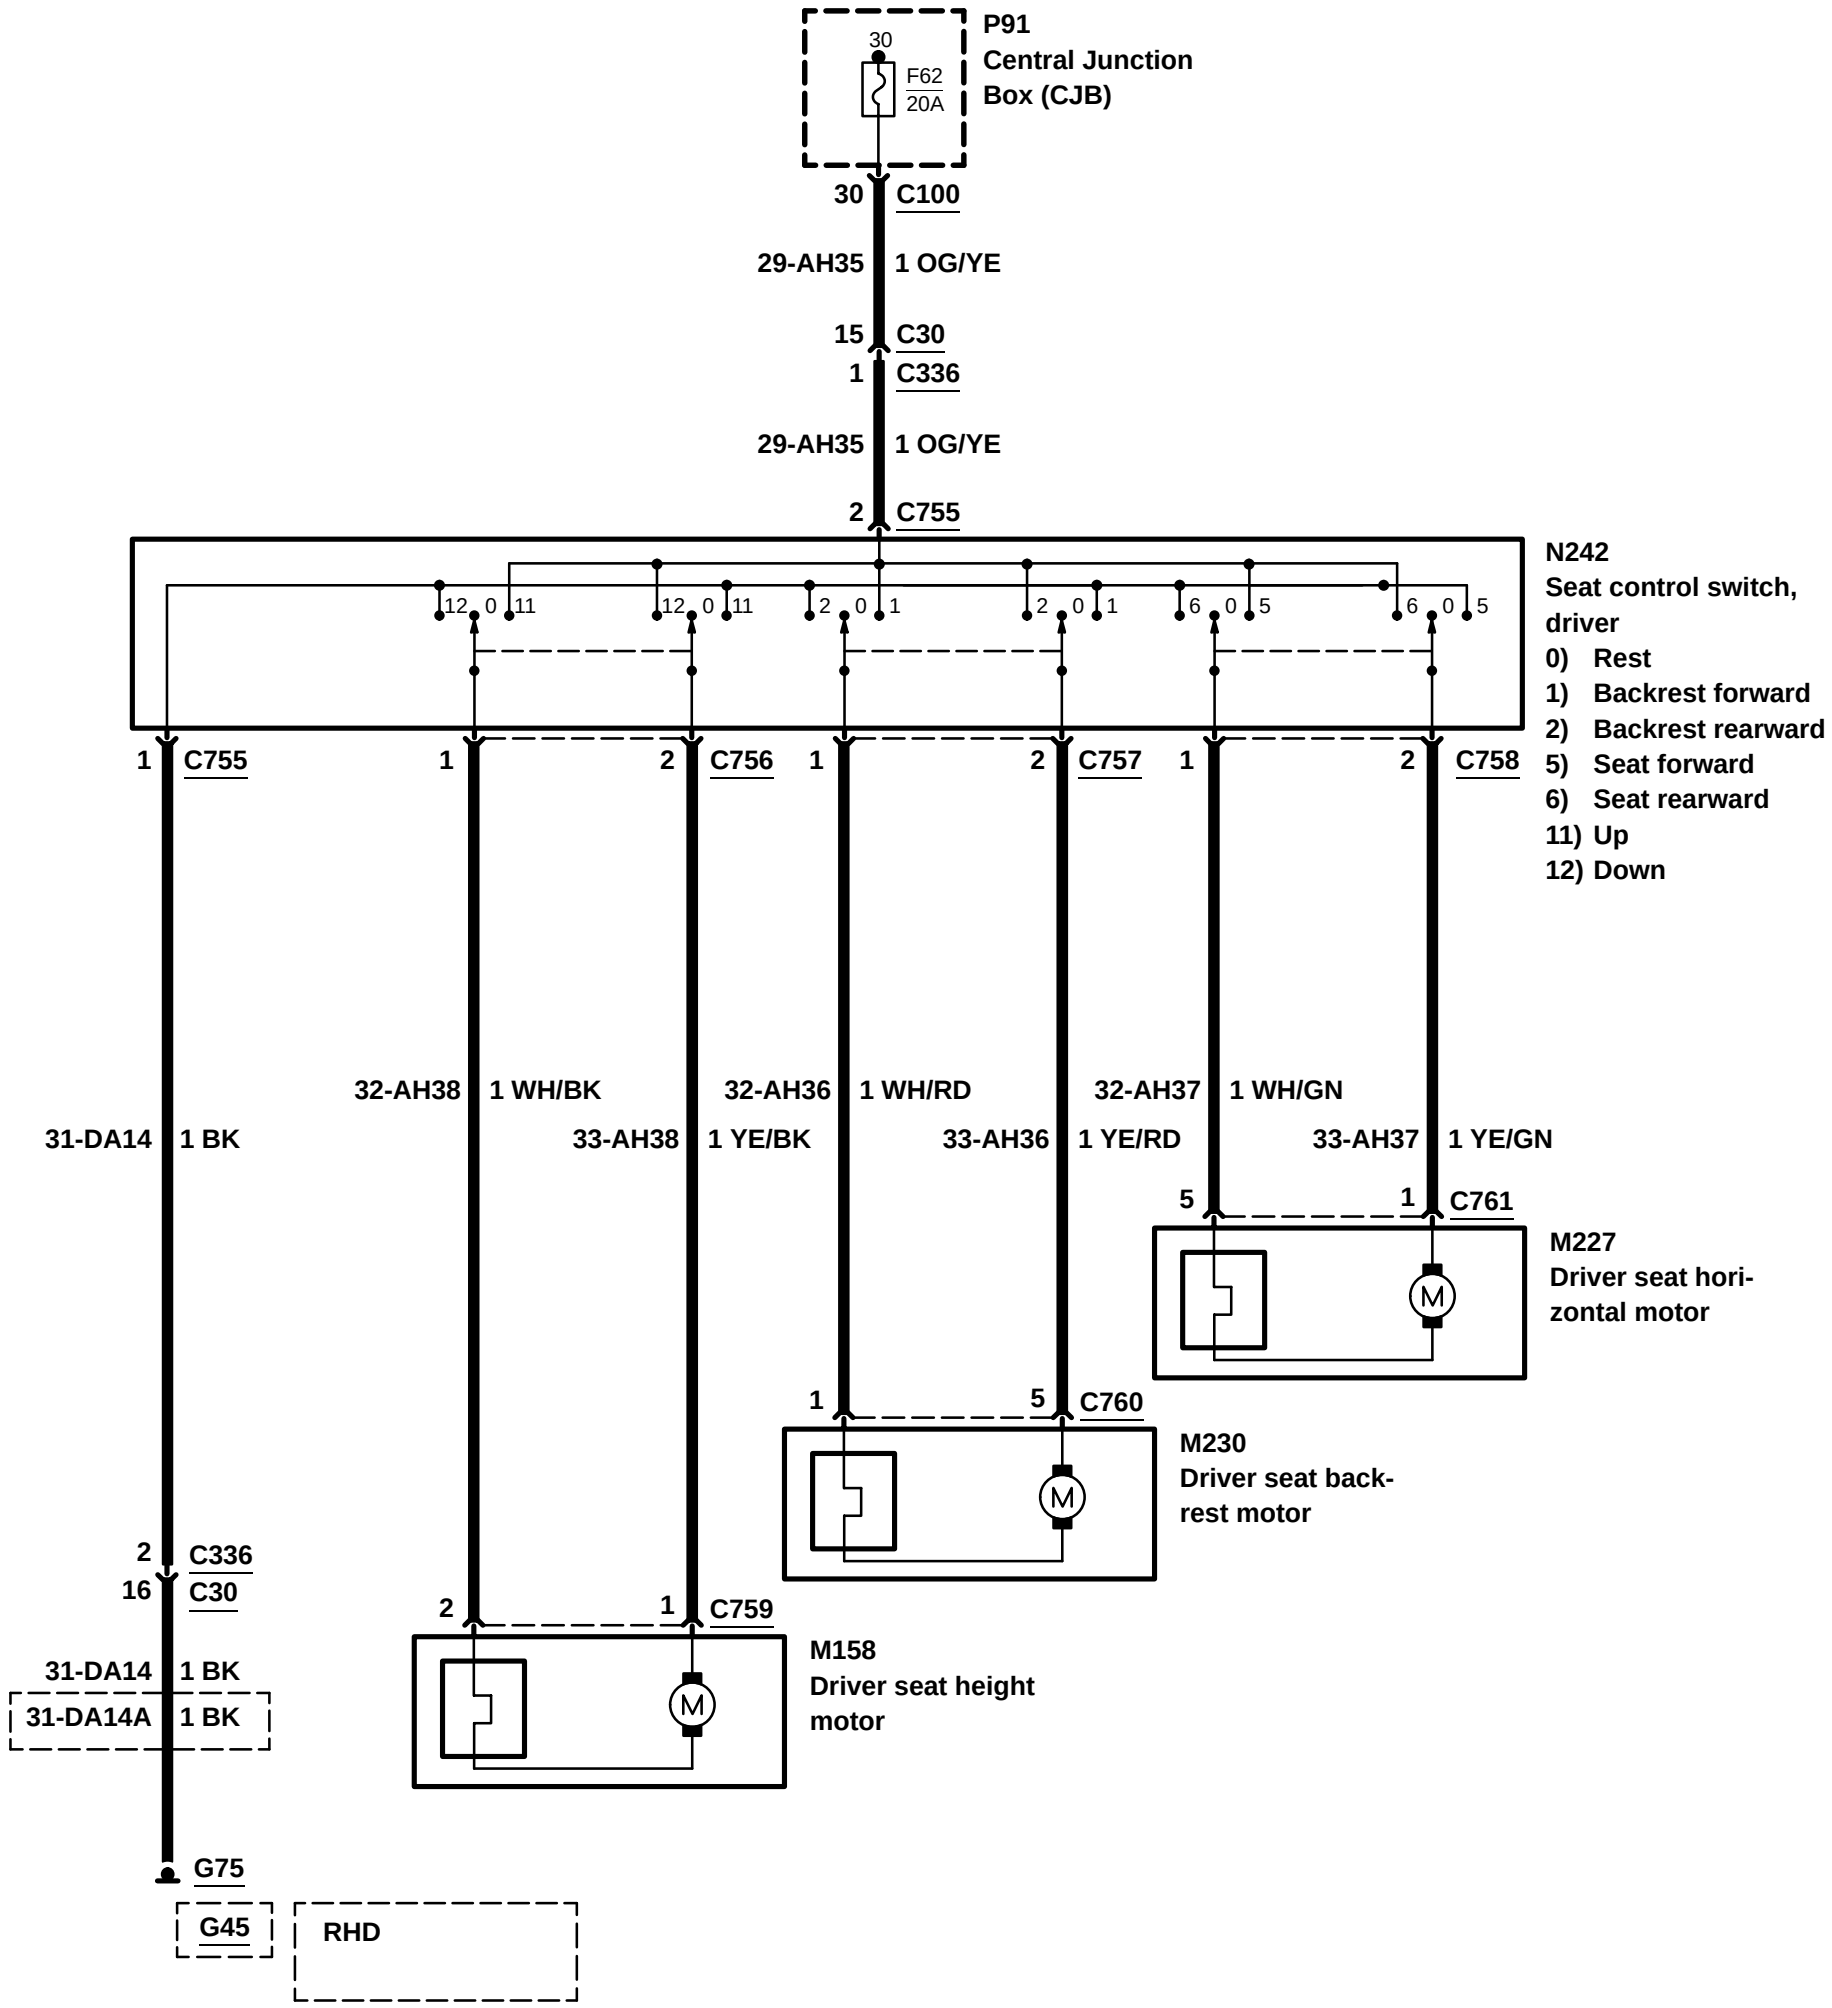


Glass, Frames and Mechanisms – LHD, with front power windows

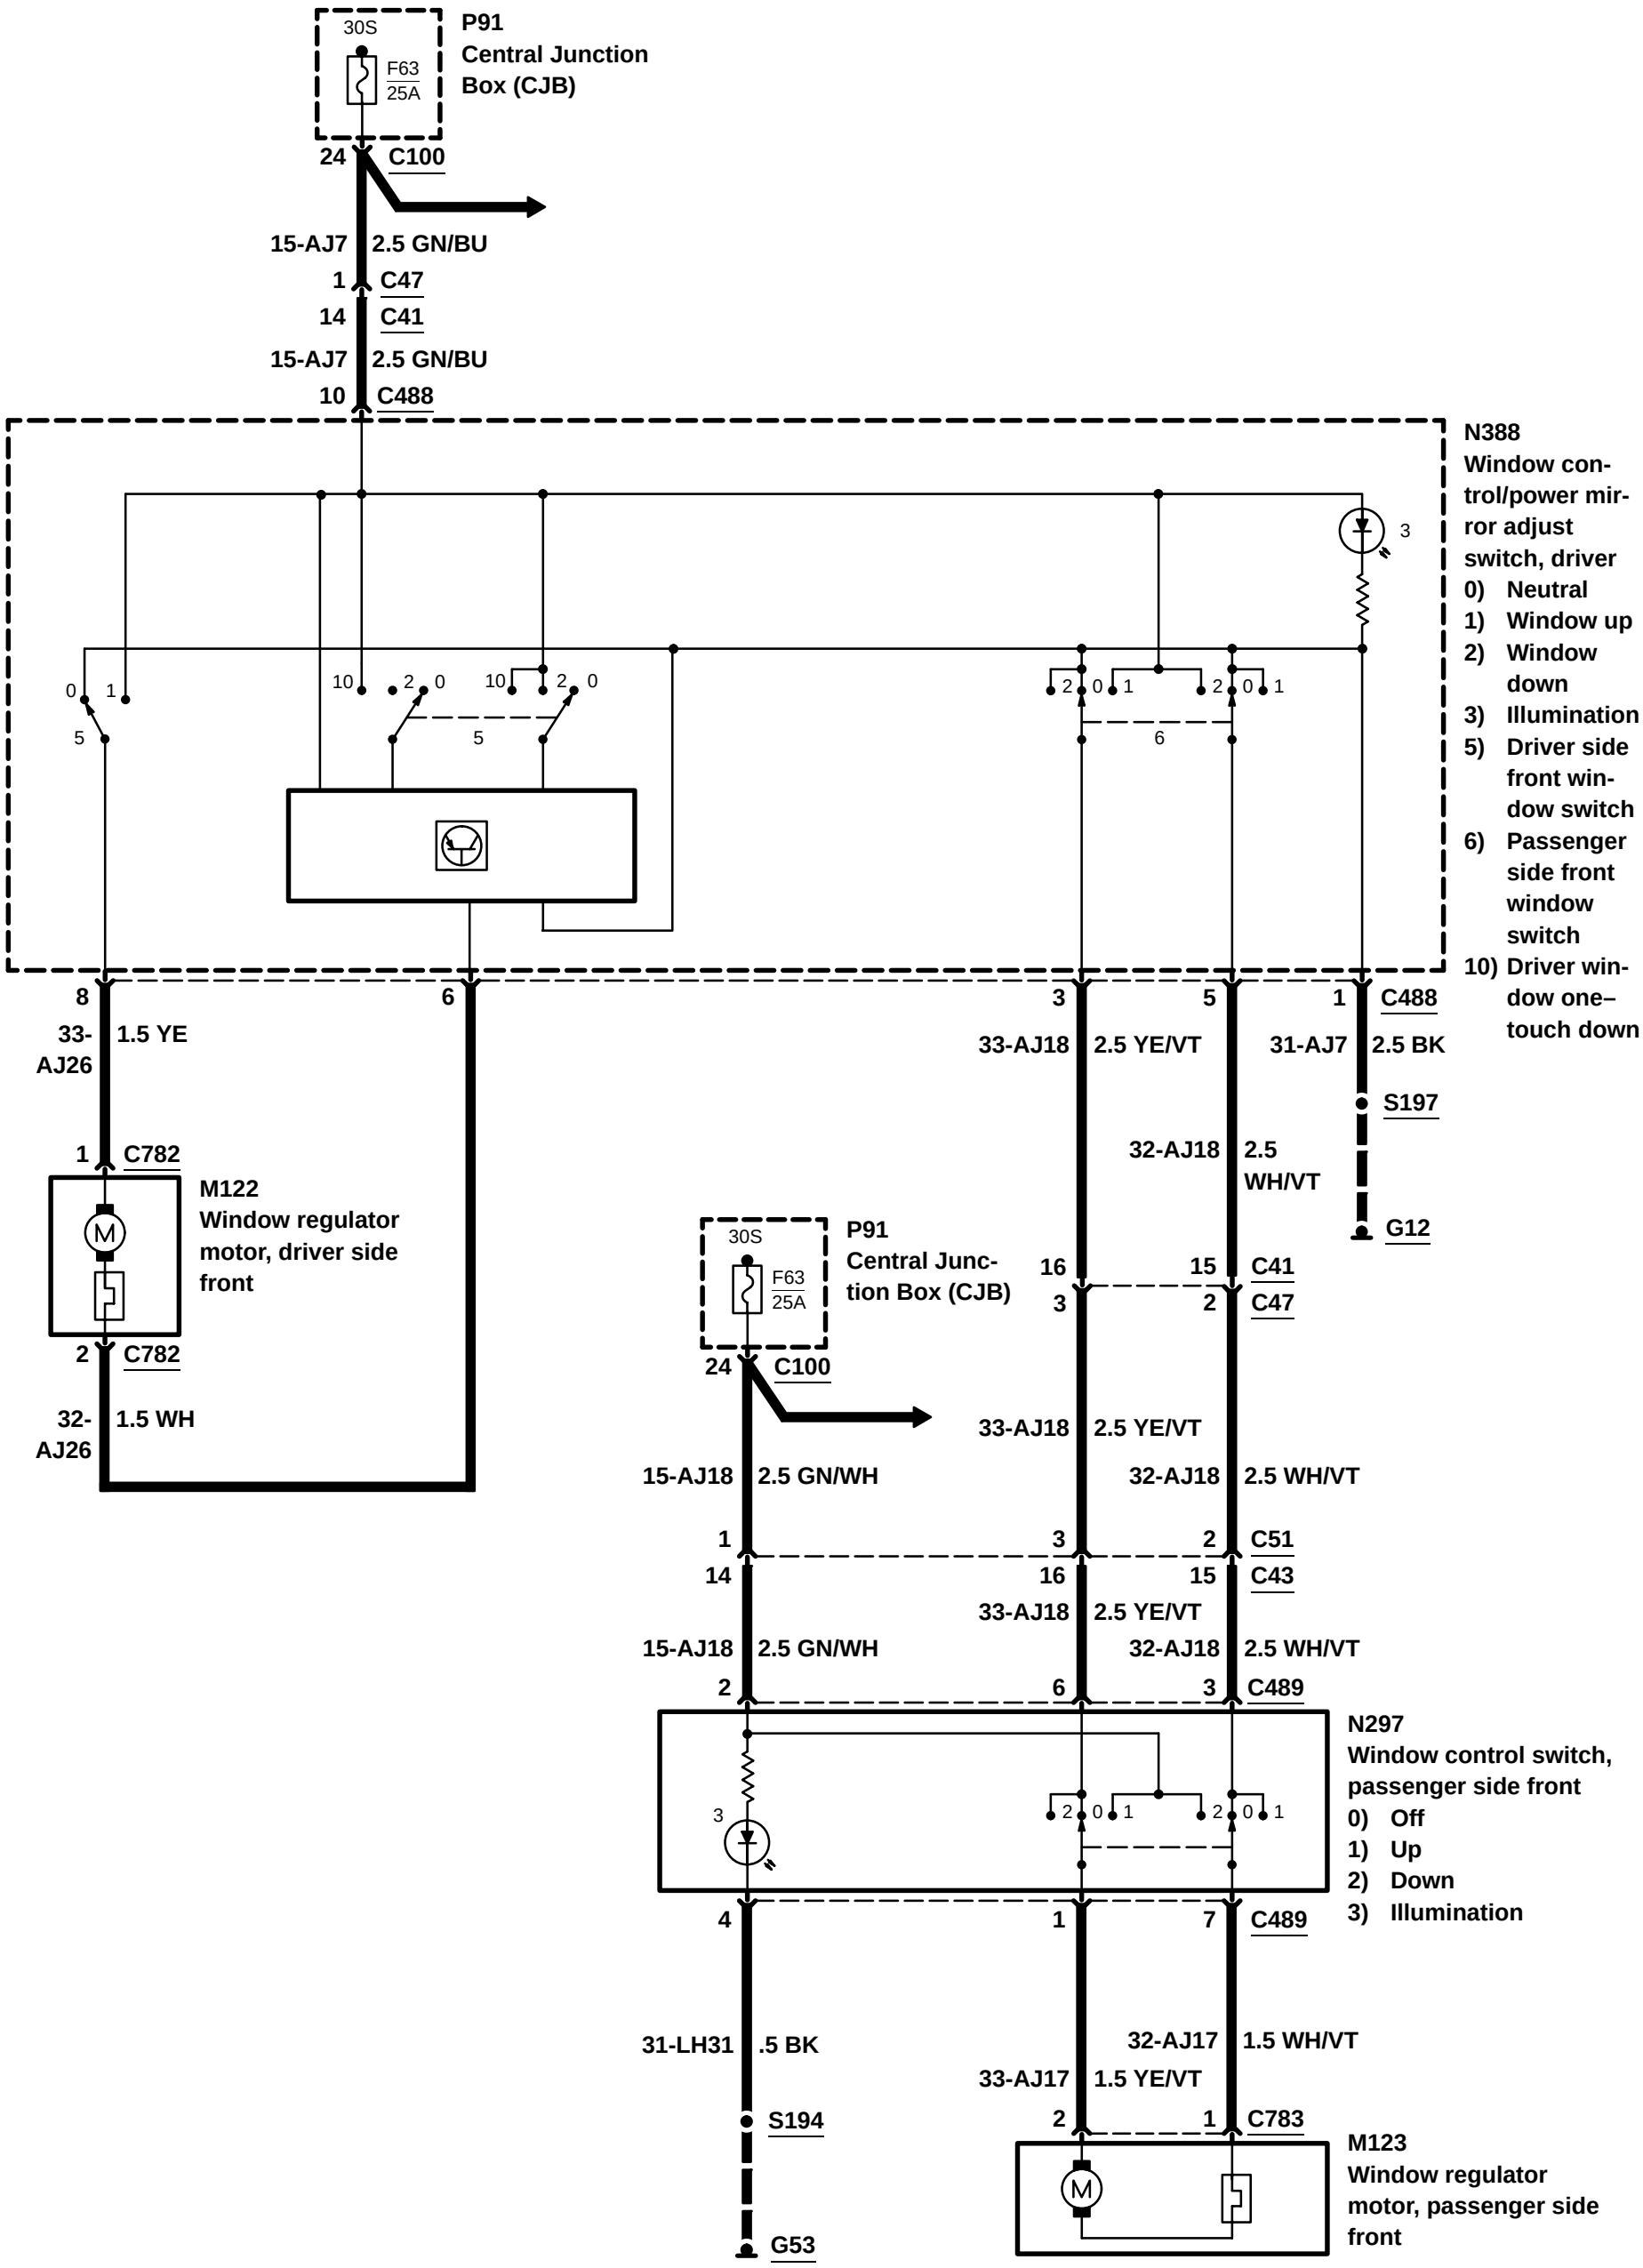


Glass, Frames and Mechanisms – RHD, with front power windows

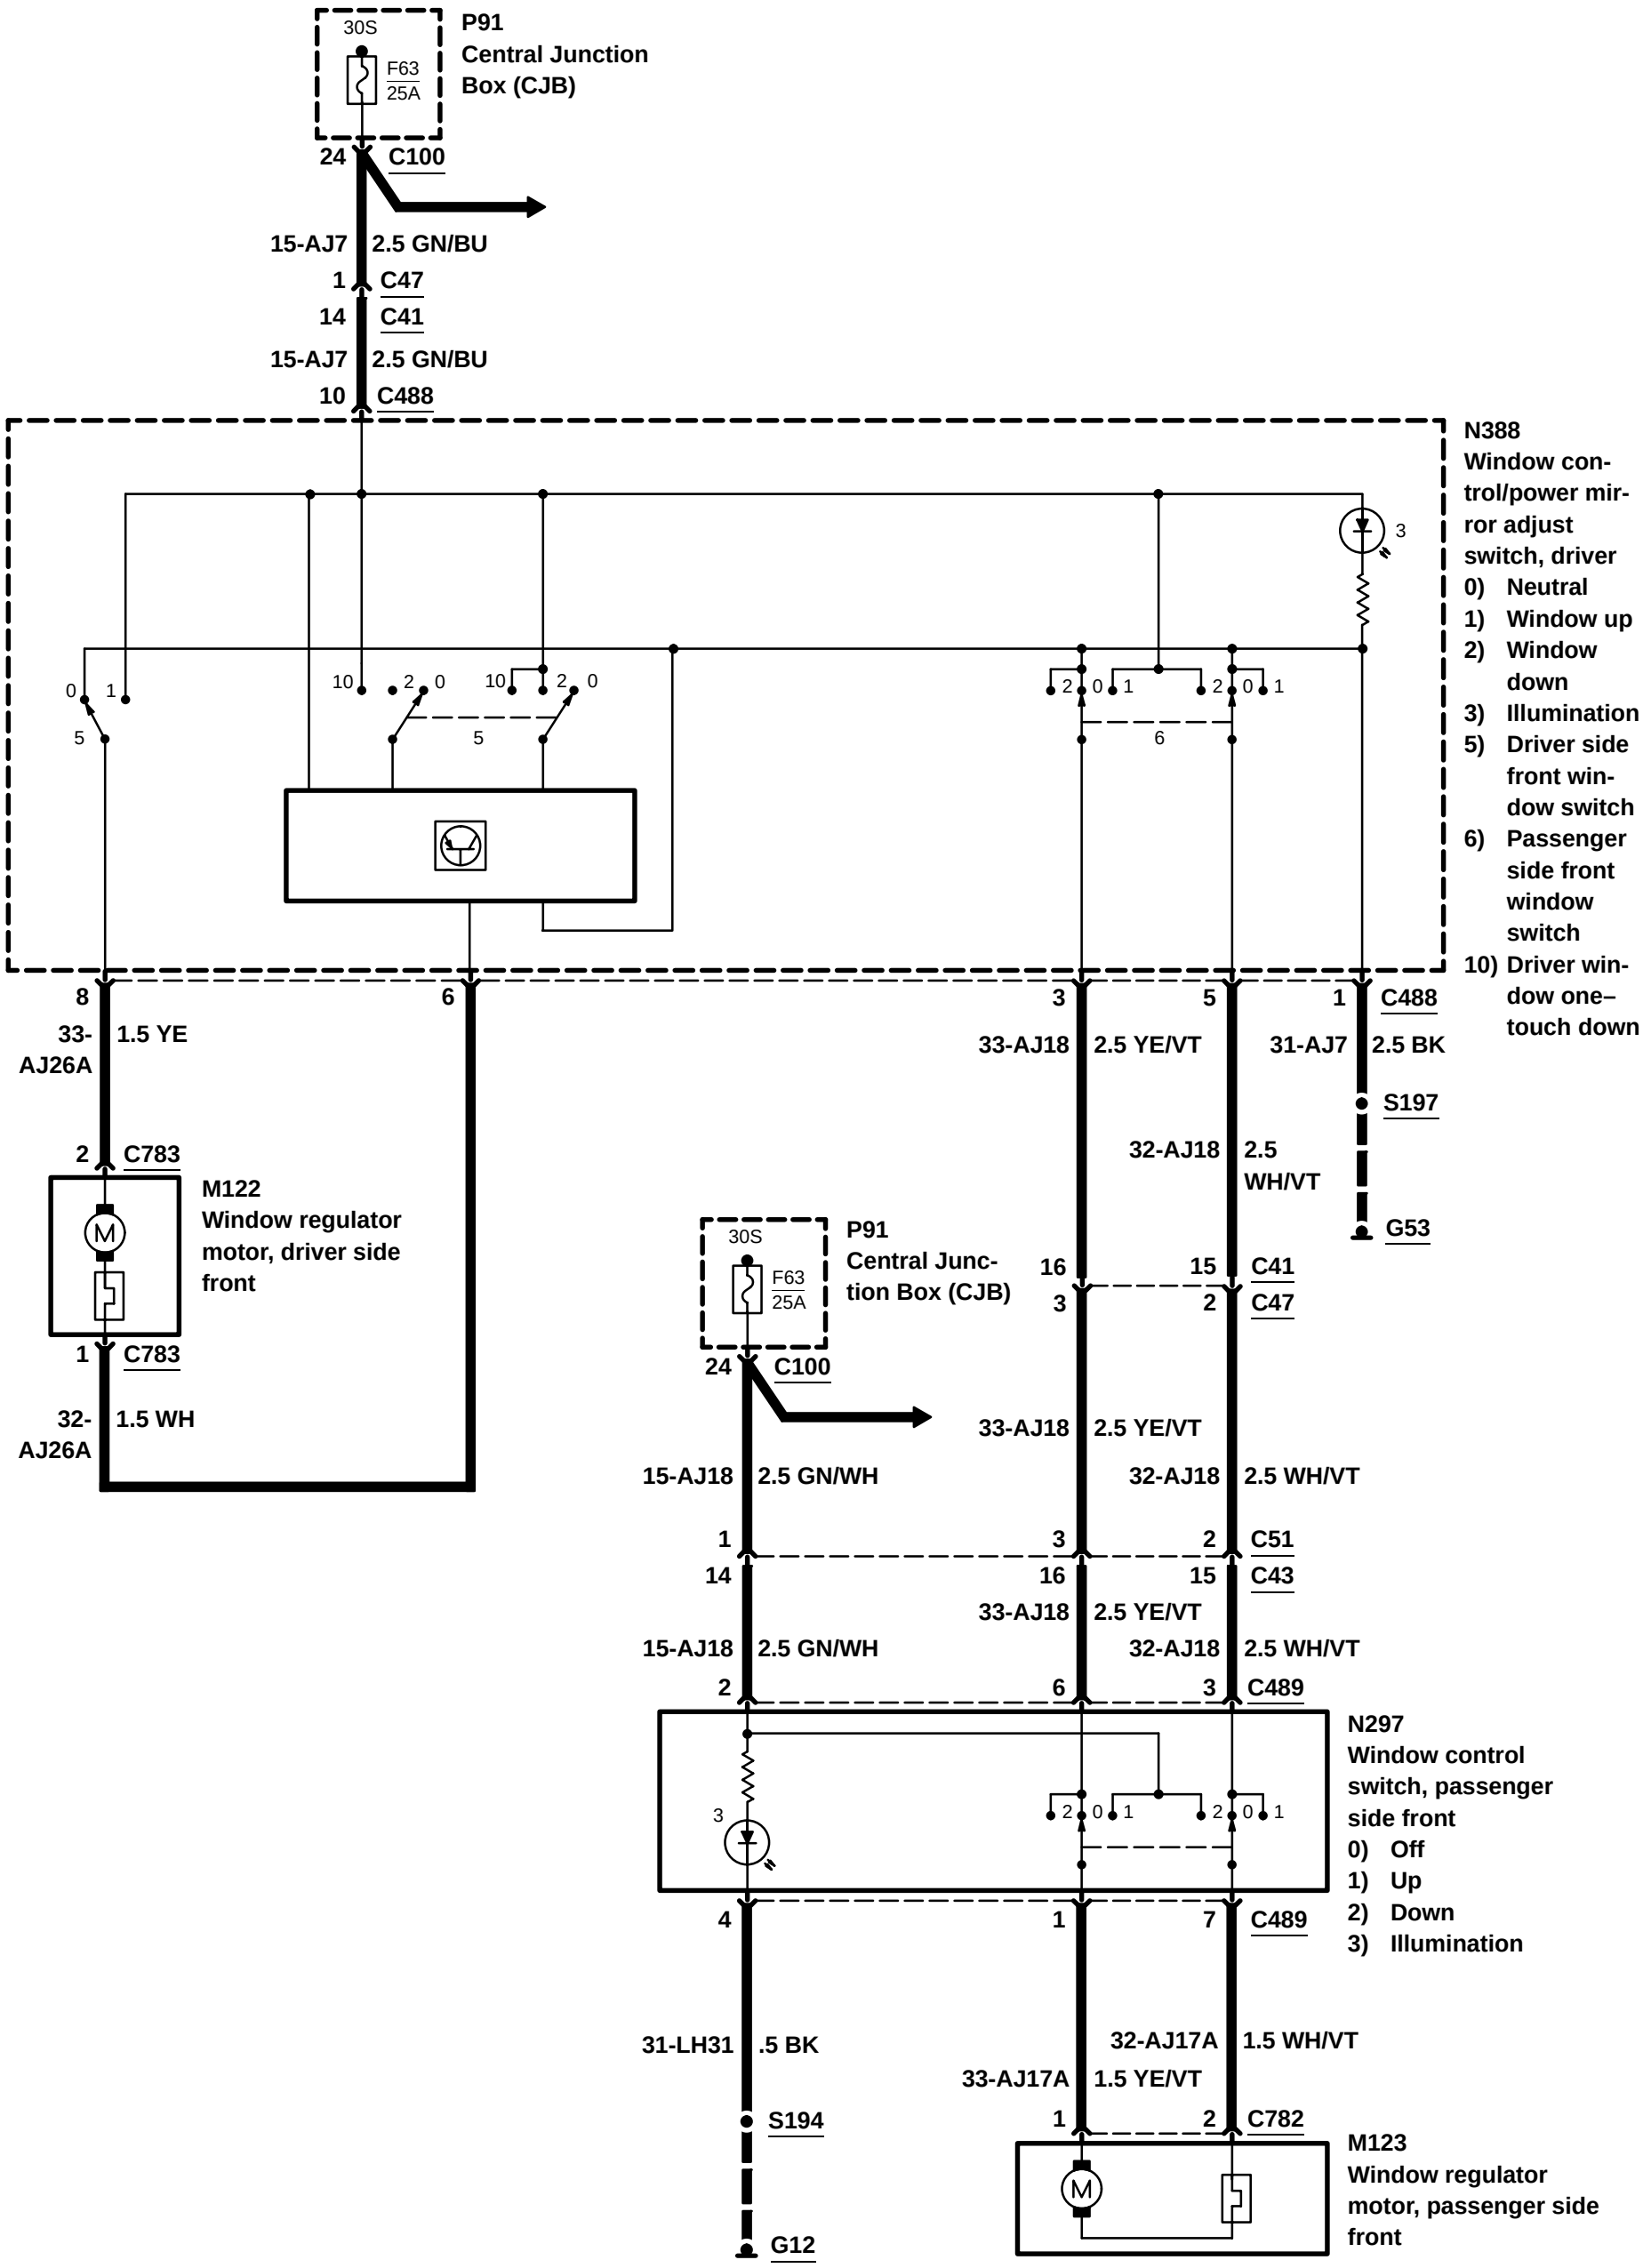


Glass, Frames and Mechanisms – LHD, with front and rear power windows

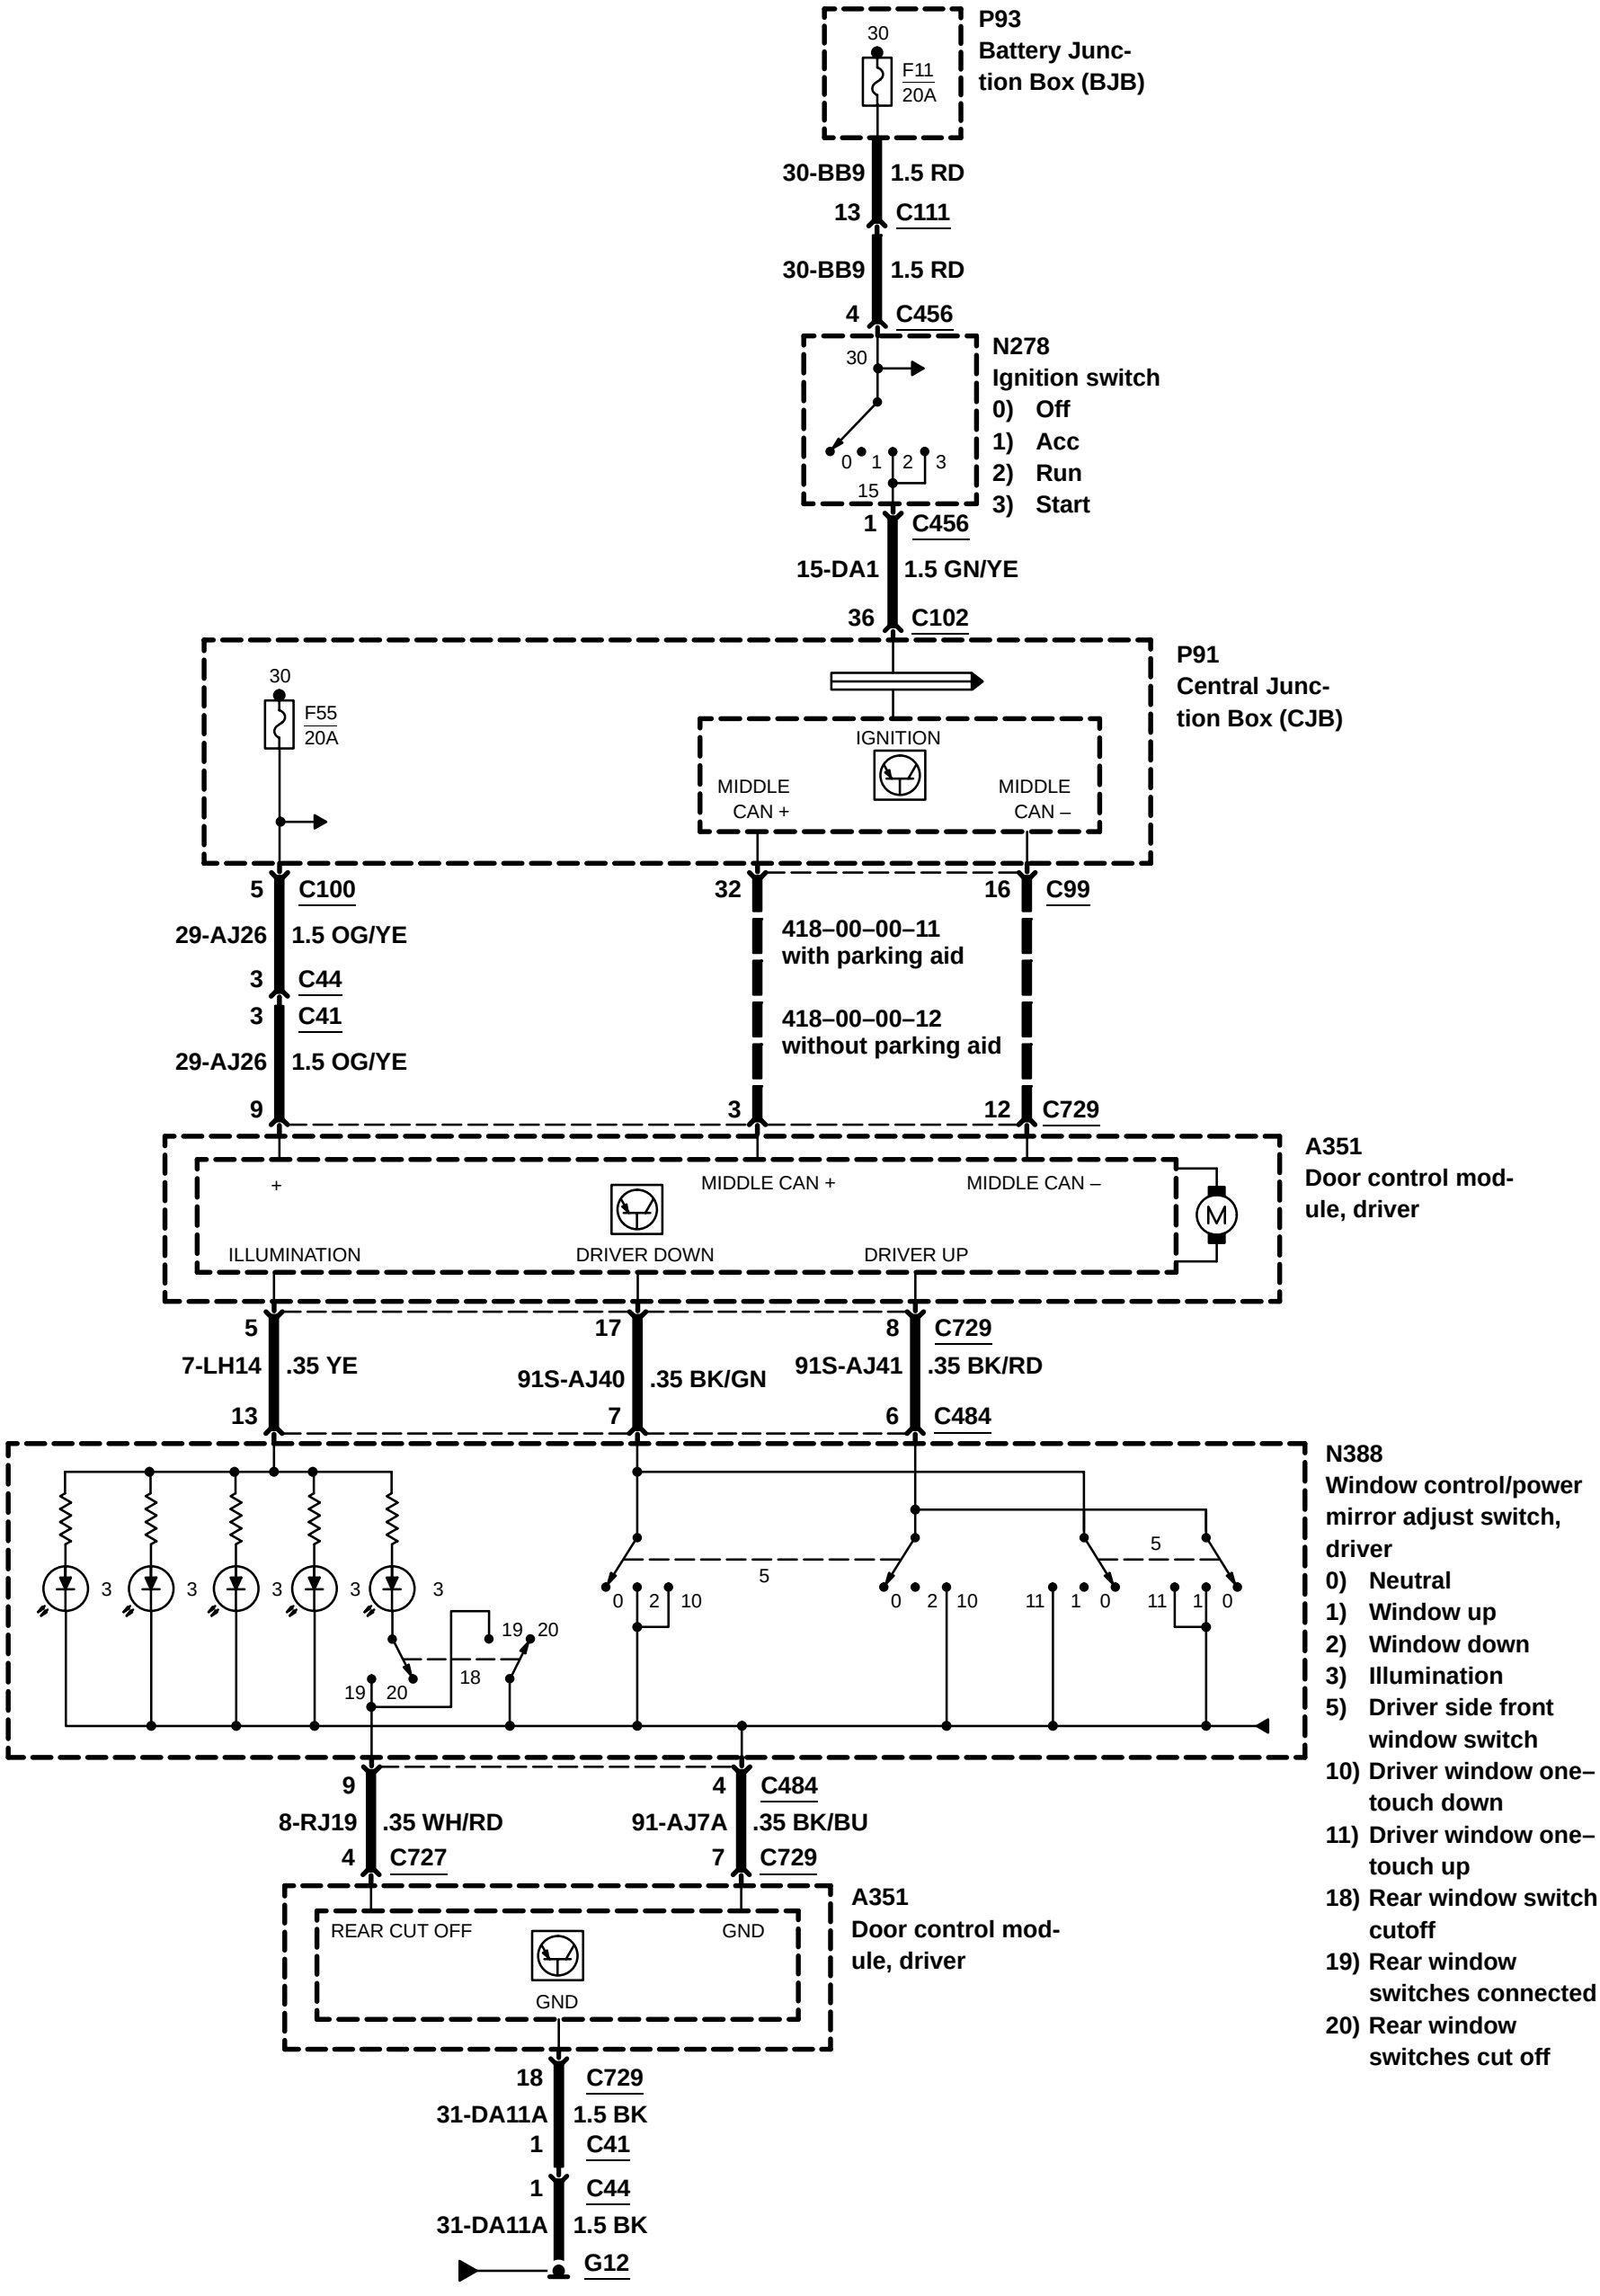


Glass, Frames and Mechanisms – LHD, with front and rear power windows

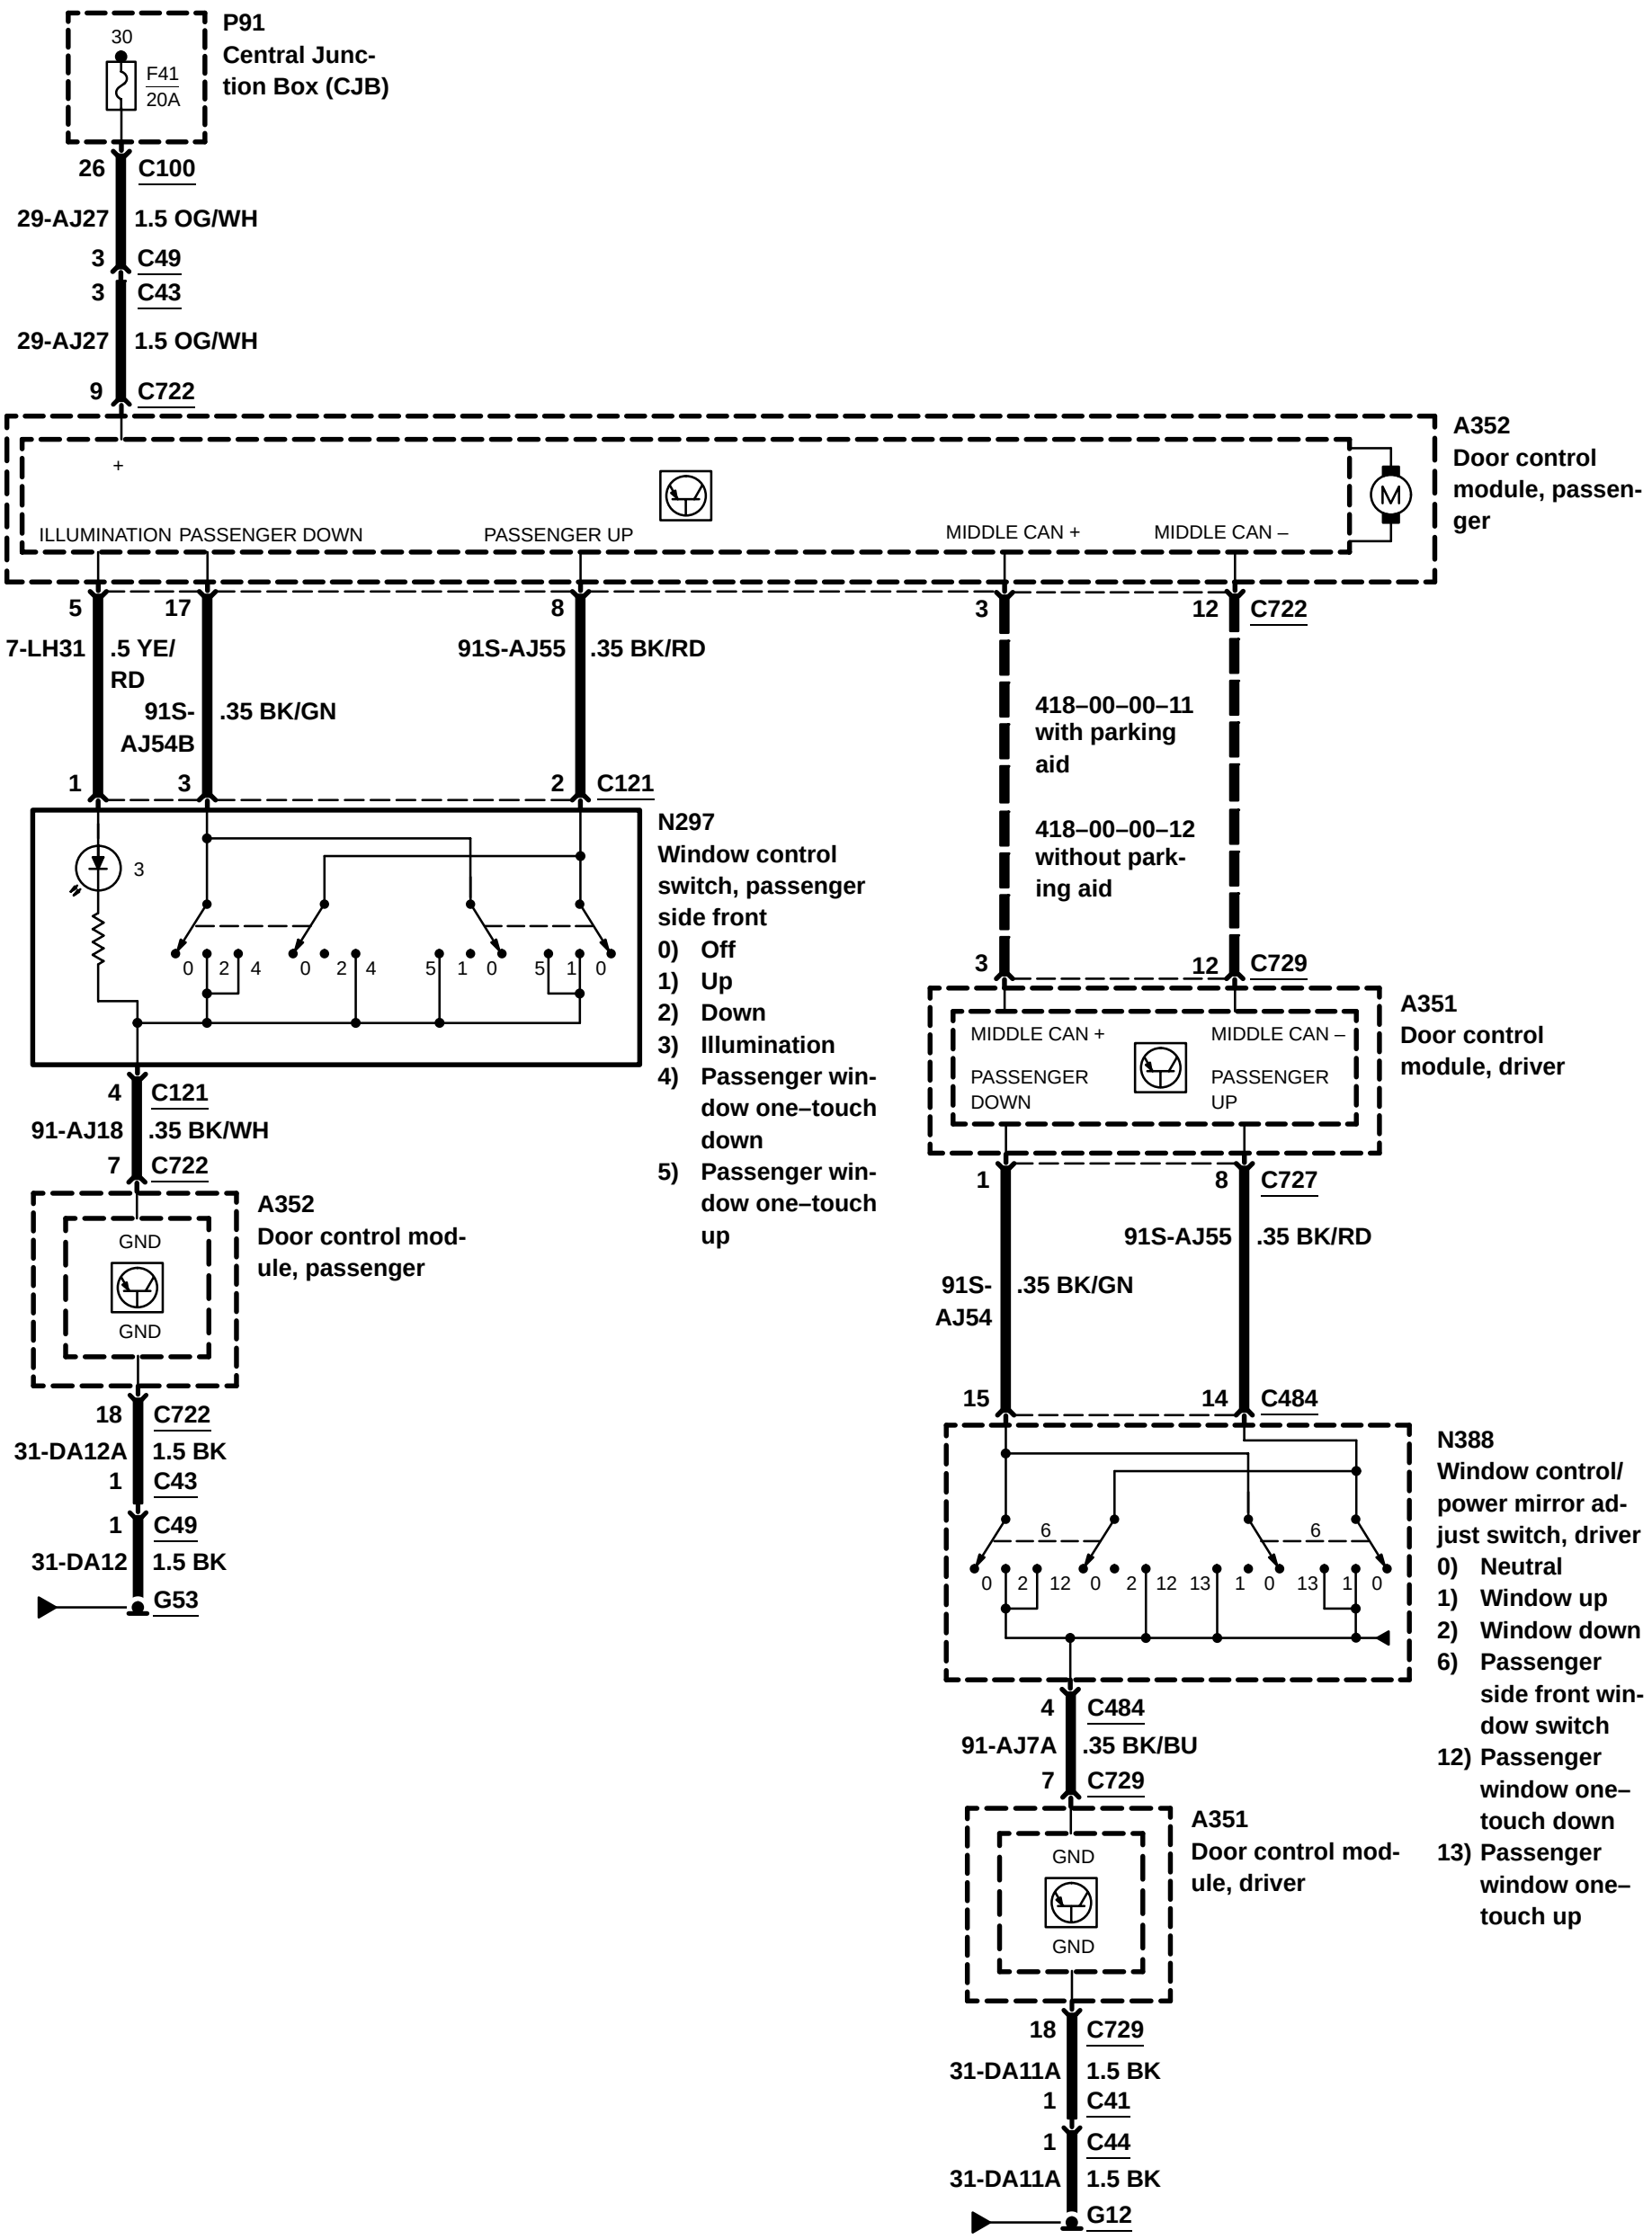


Glass, Frames and Mechanisms – LHD, with front and rear power windows

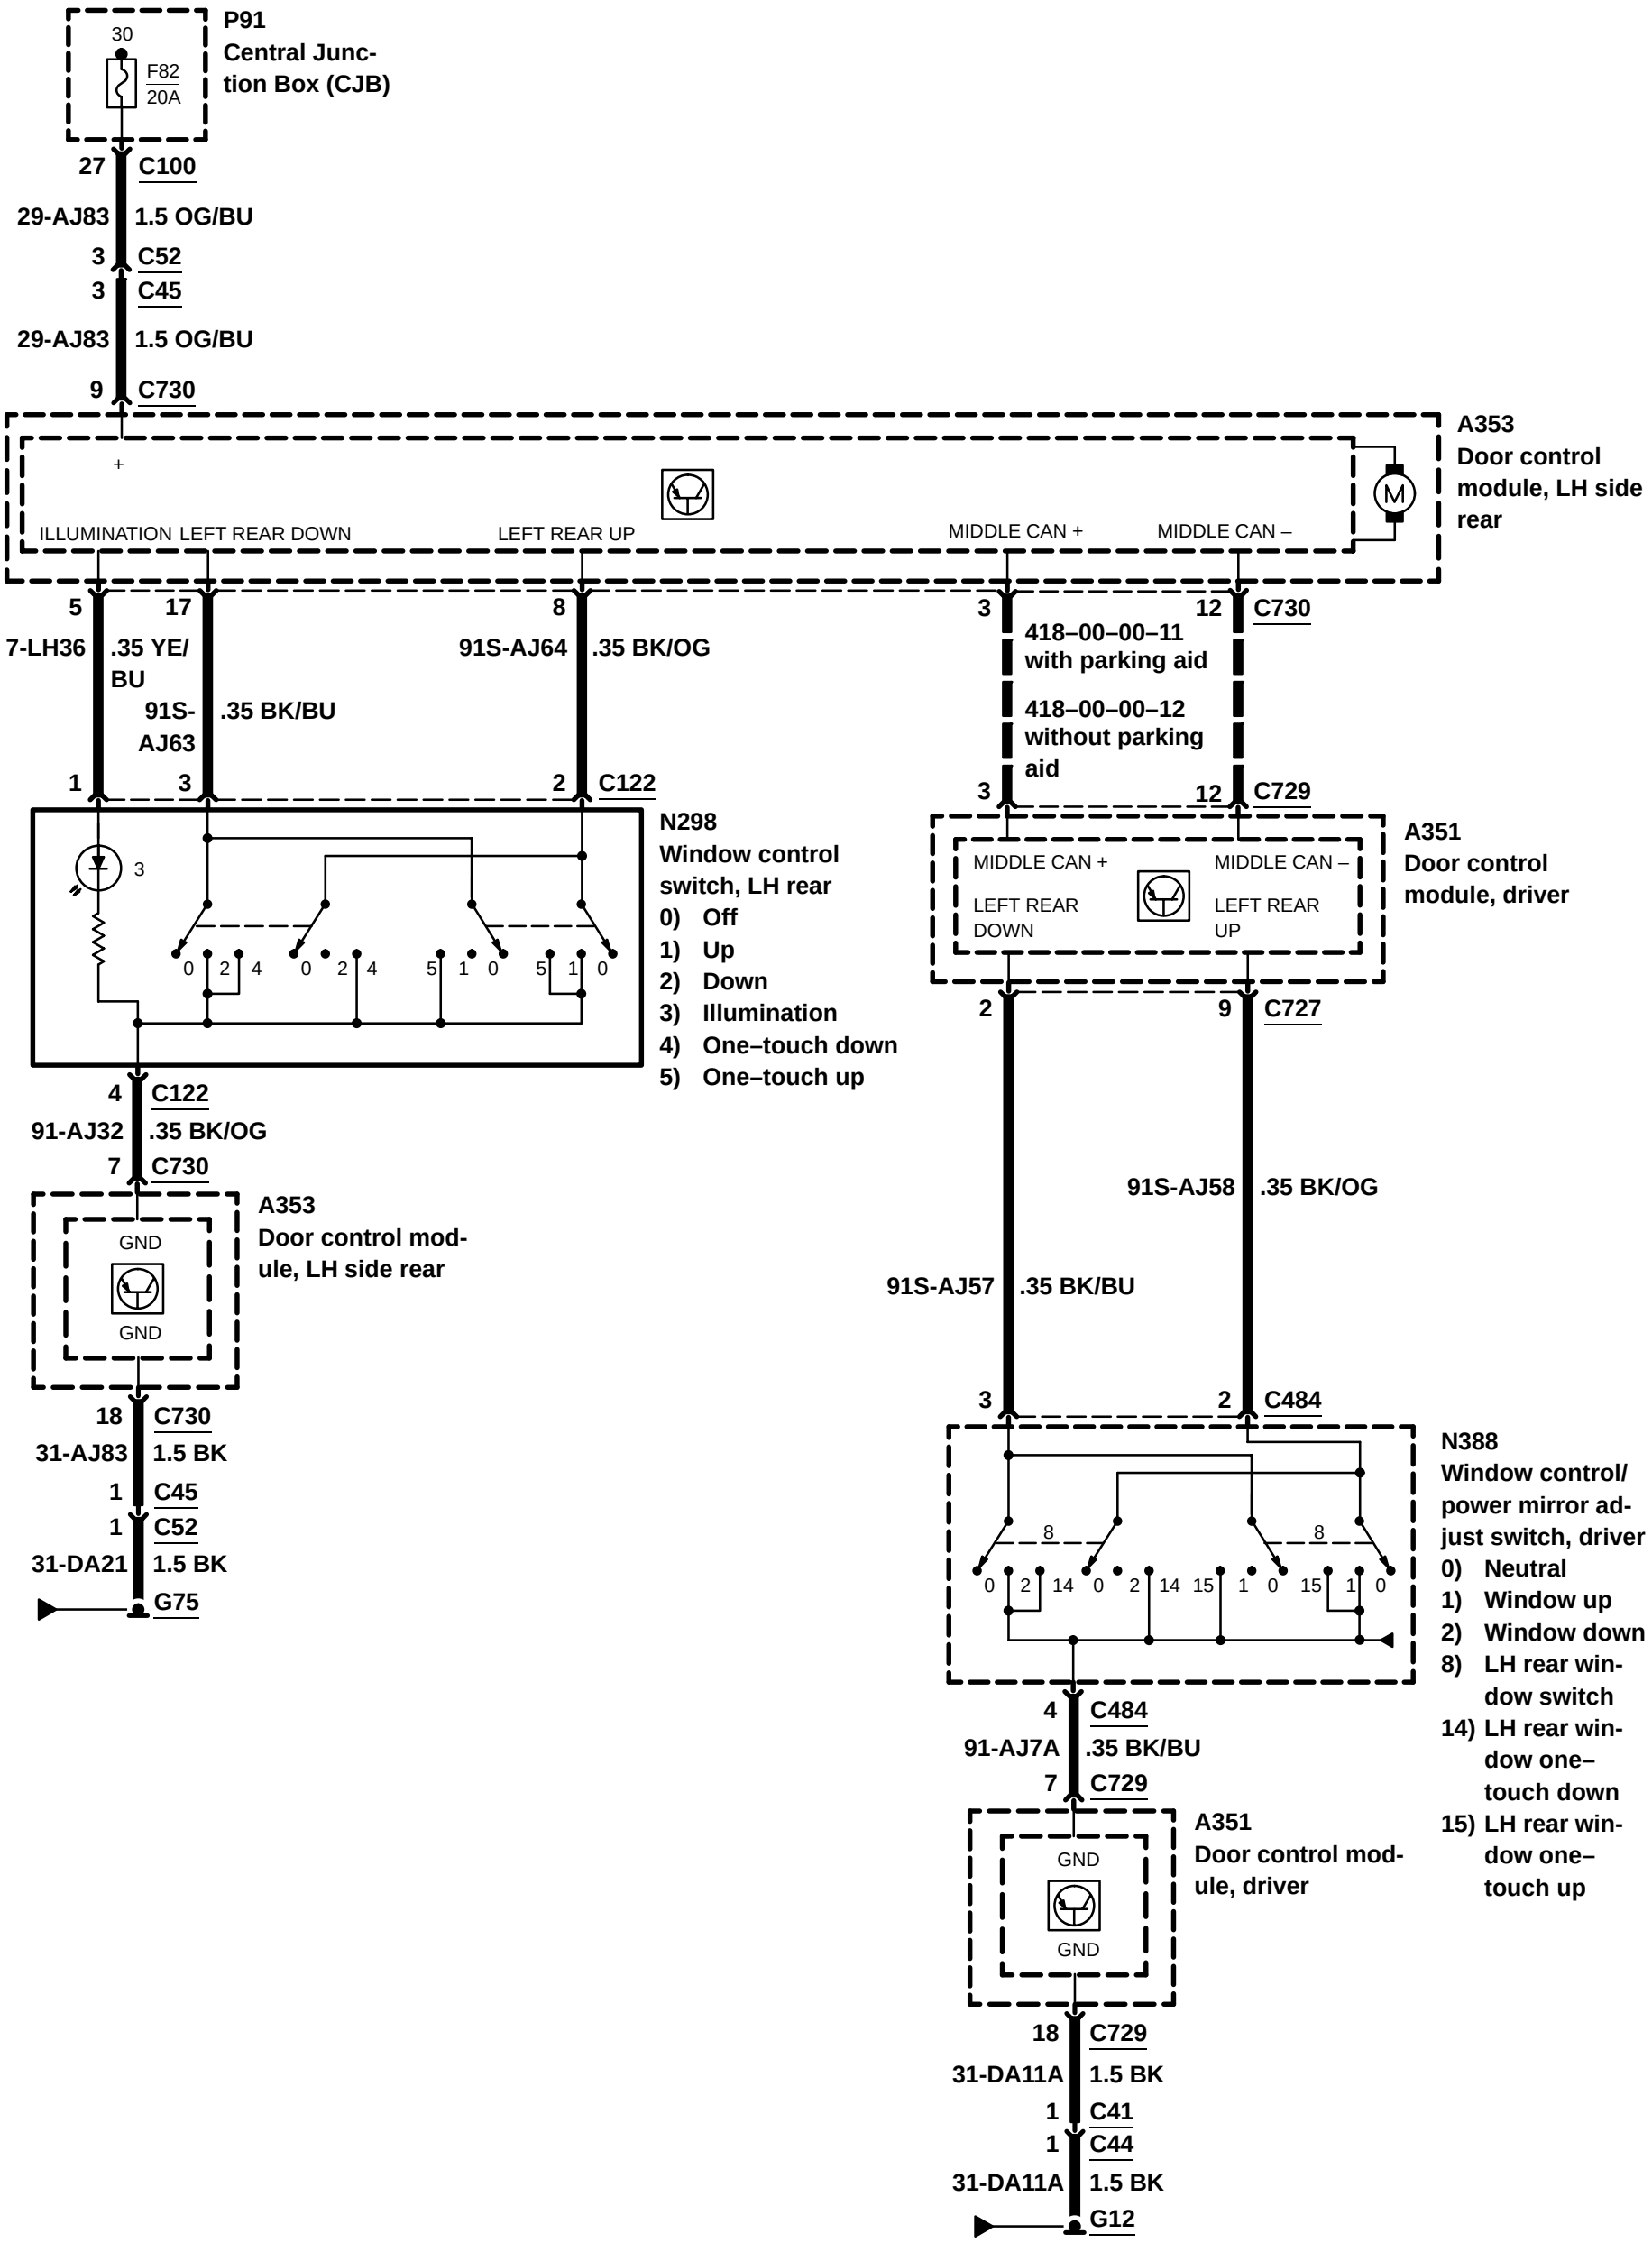


Glass, Frames and Mechanisms – LHD, with front and rear power windows

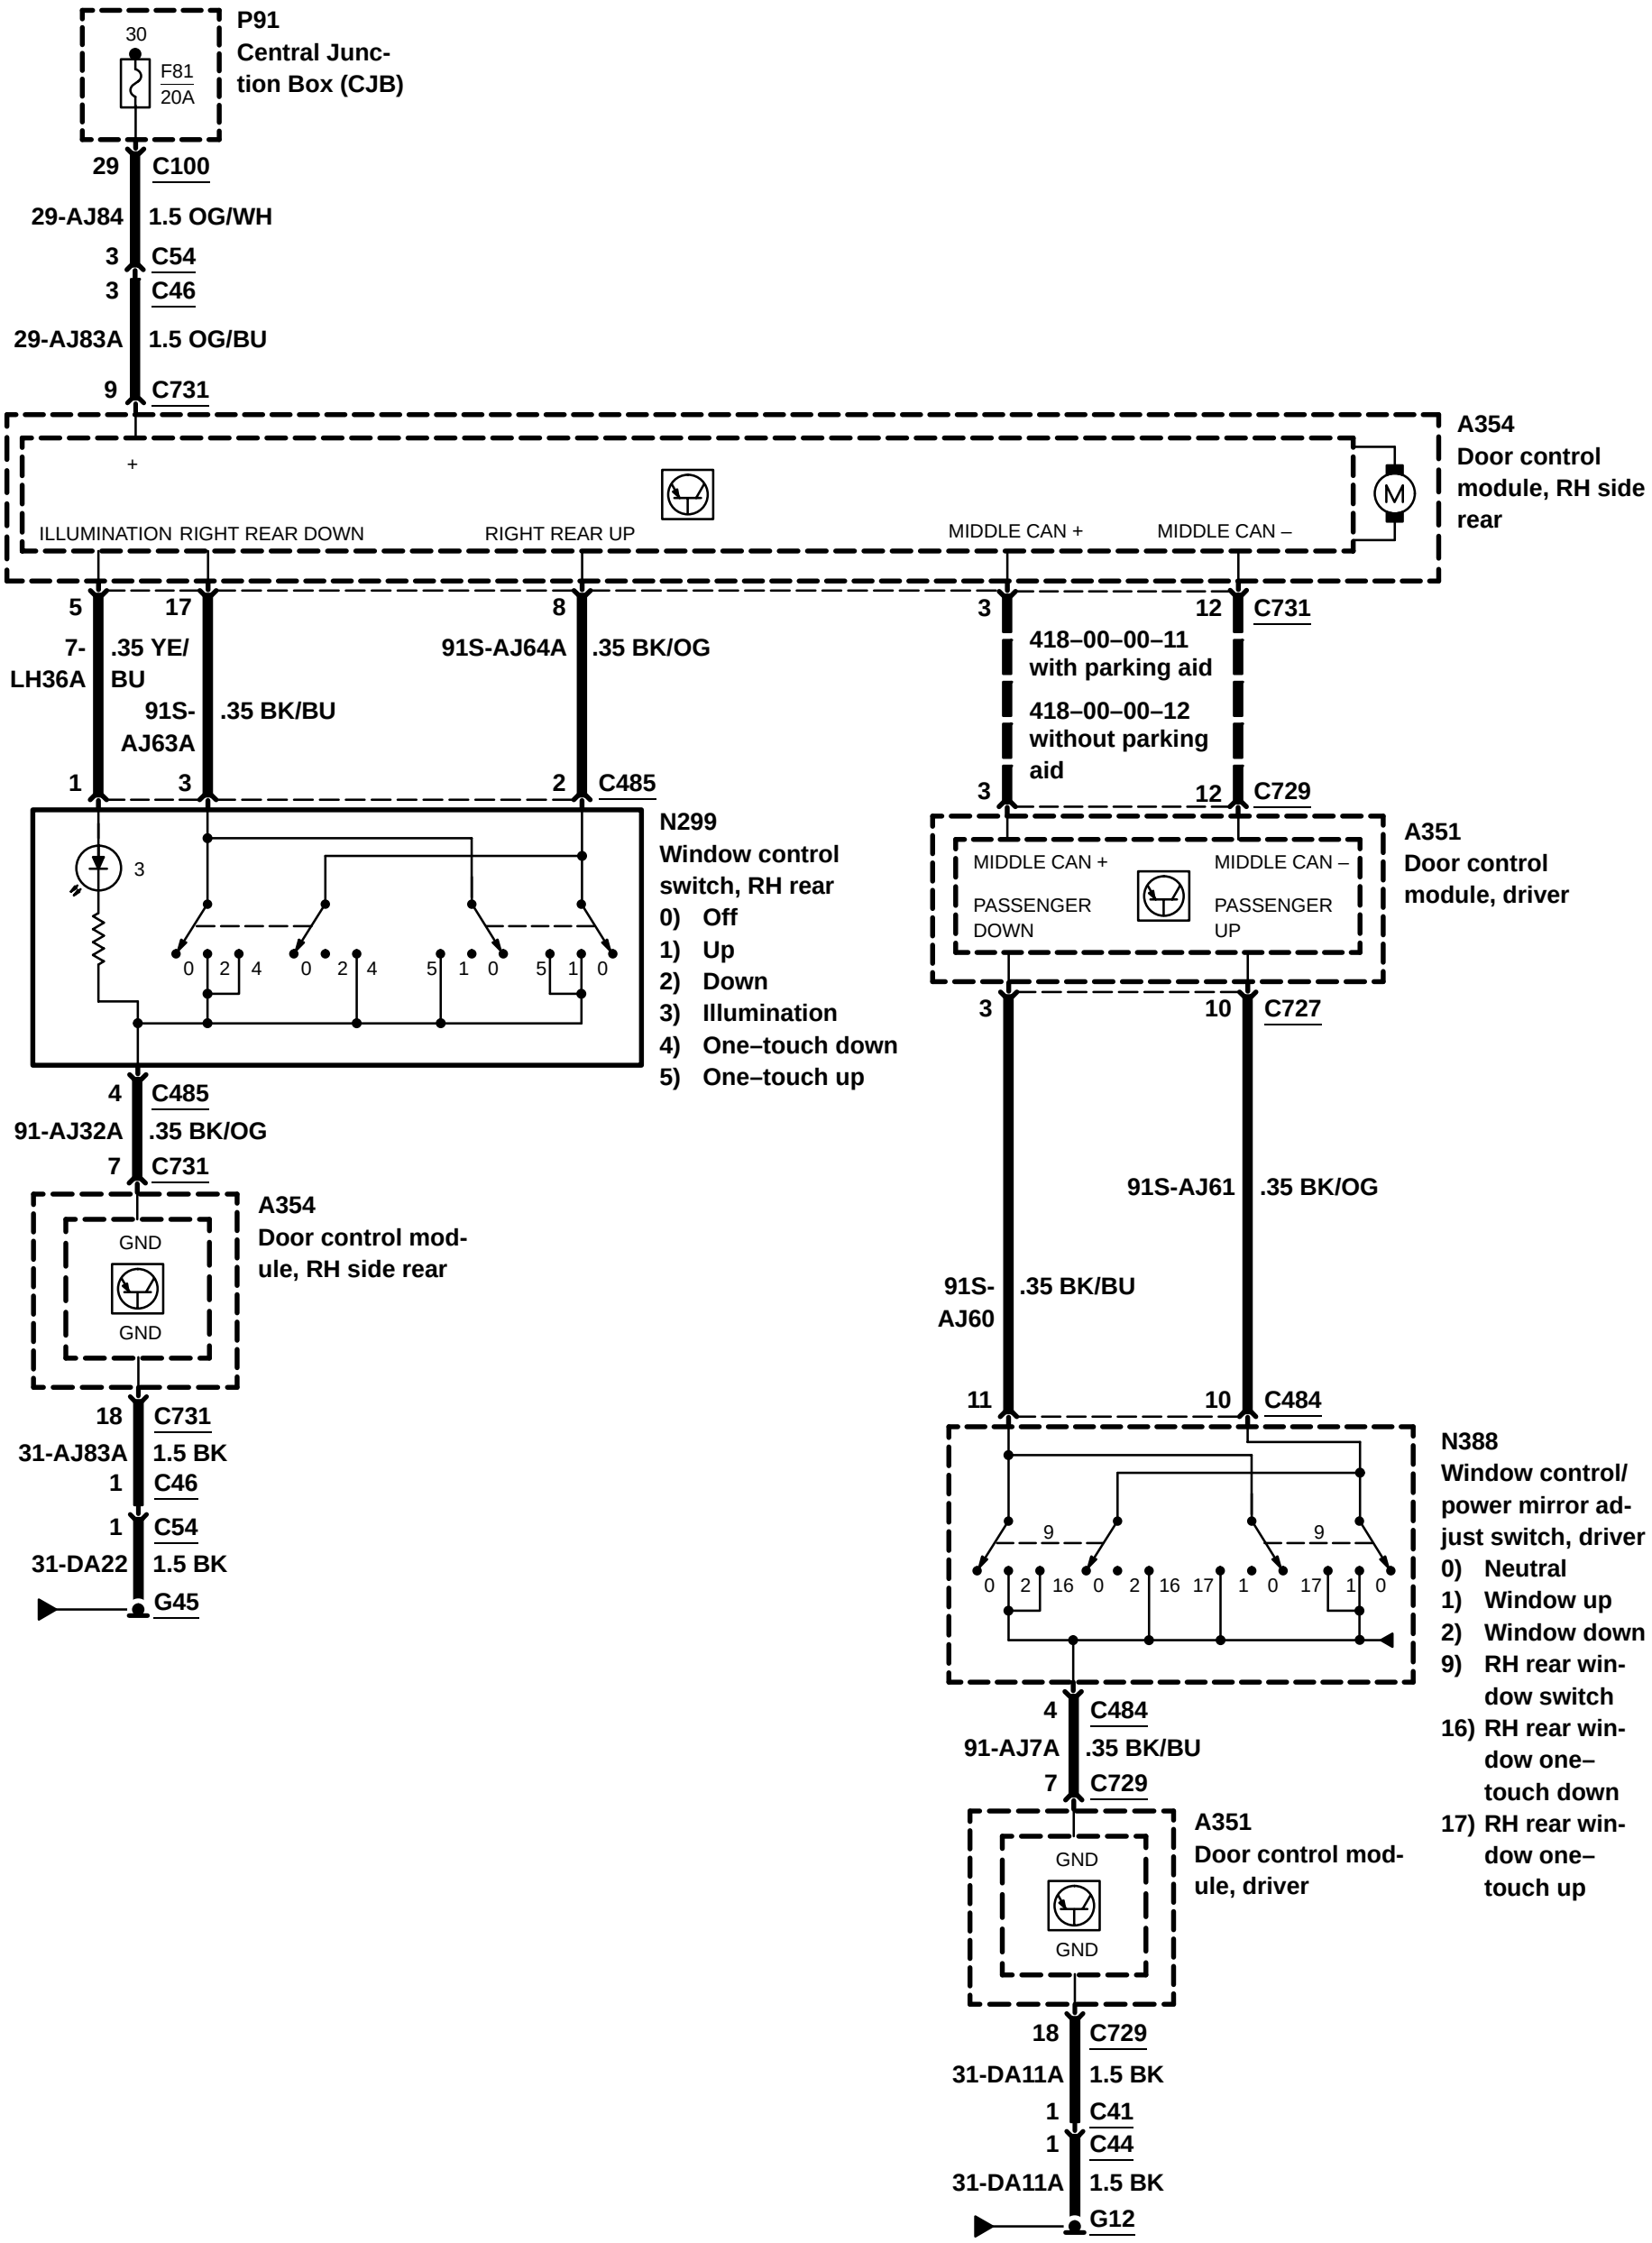


Glass, Frames and Mechanisms – RHD, with front and rear power windows

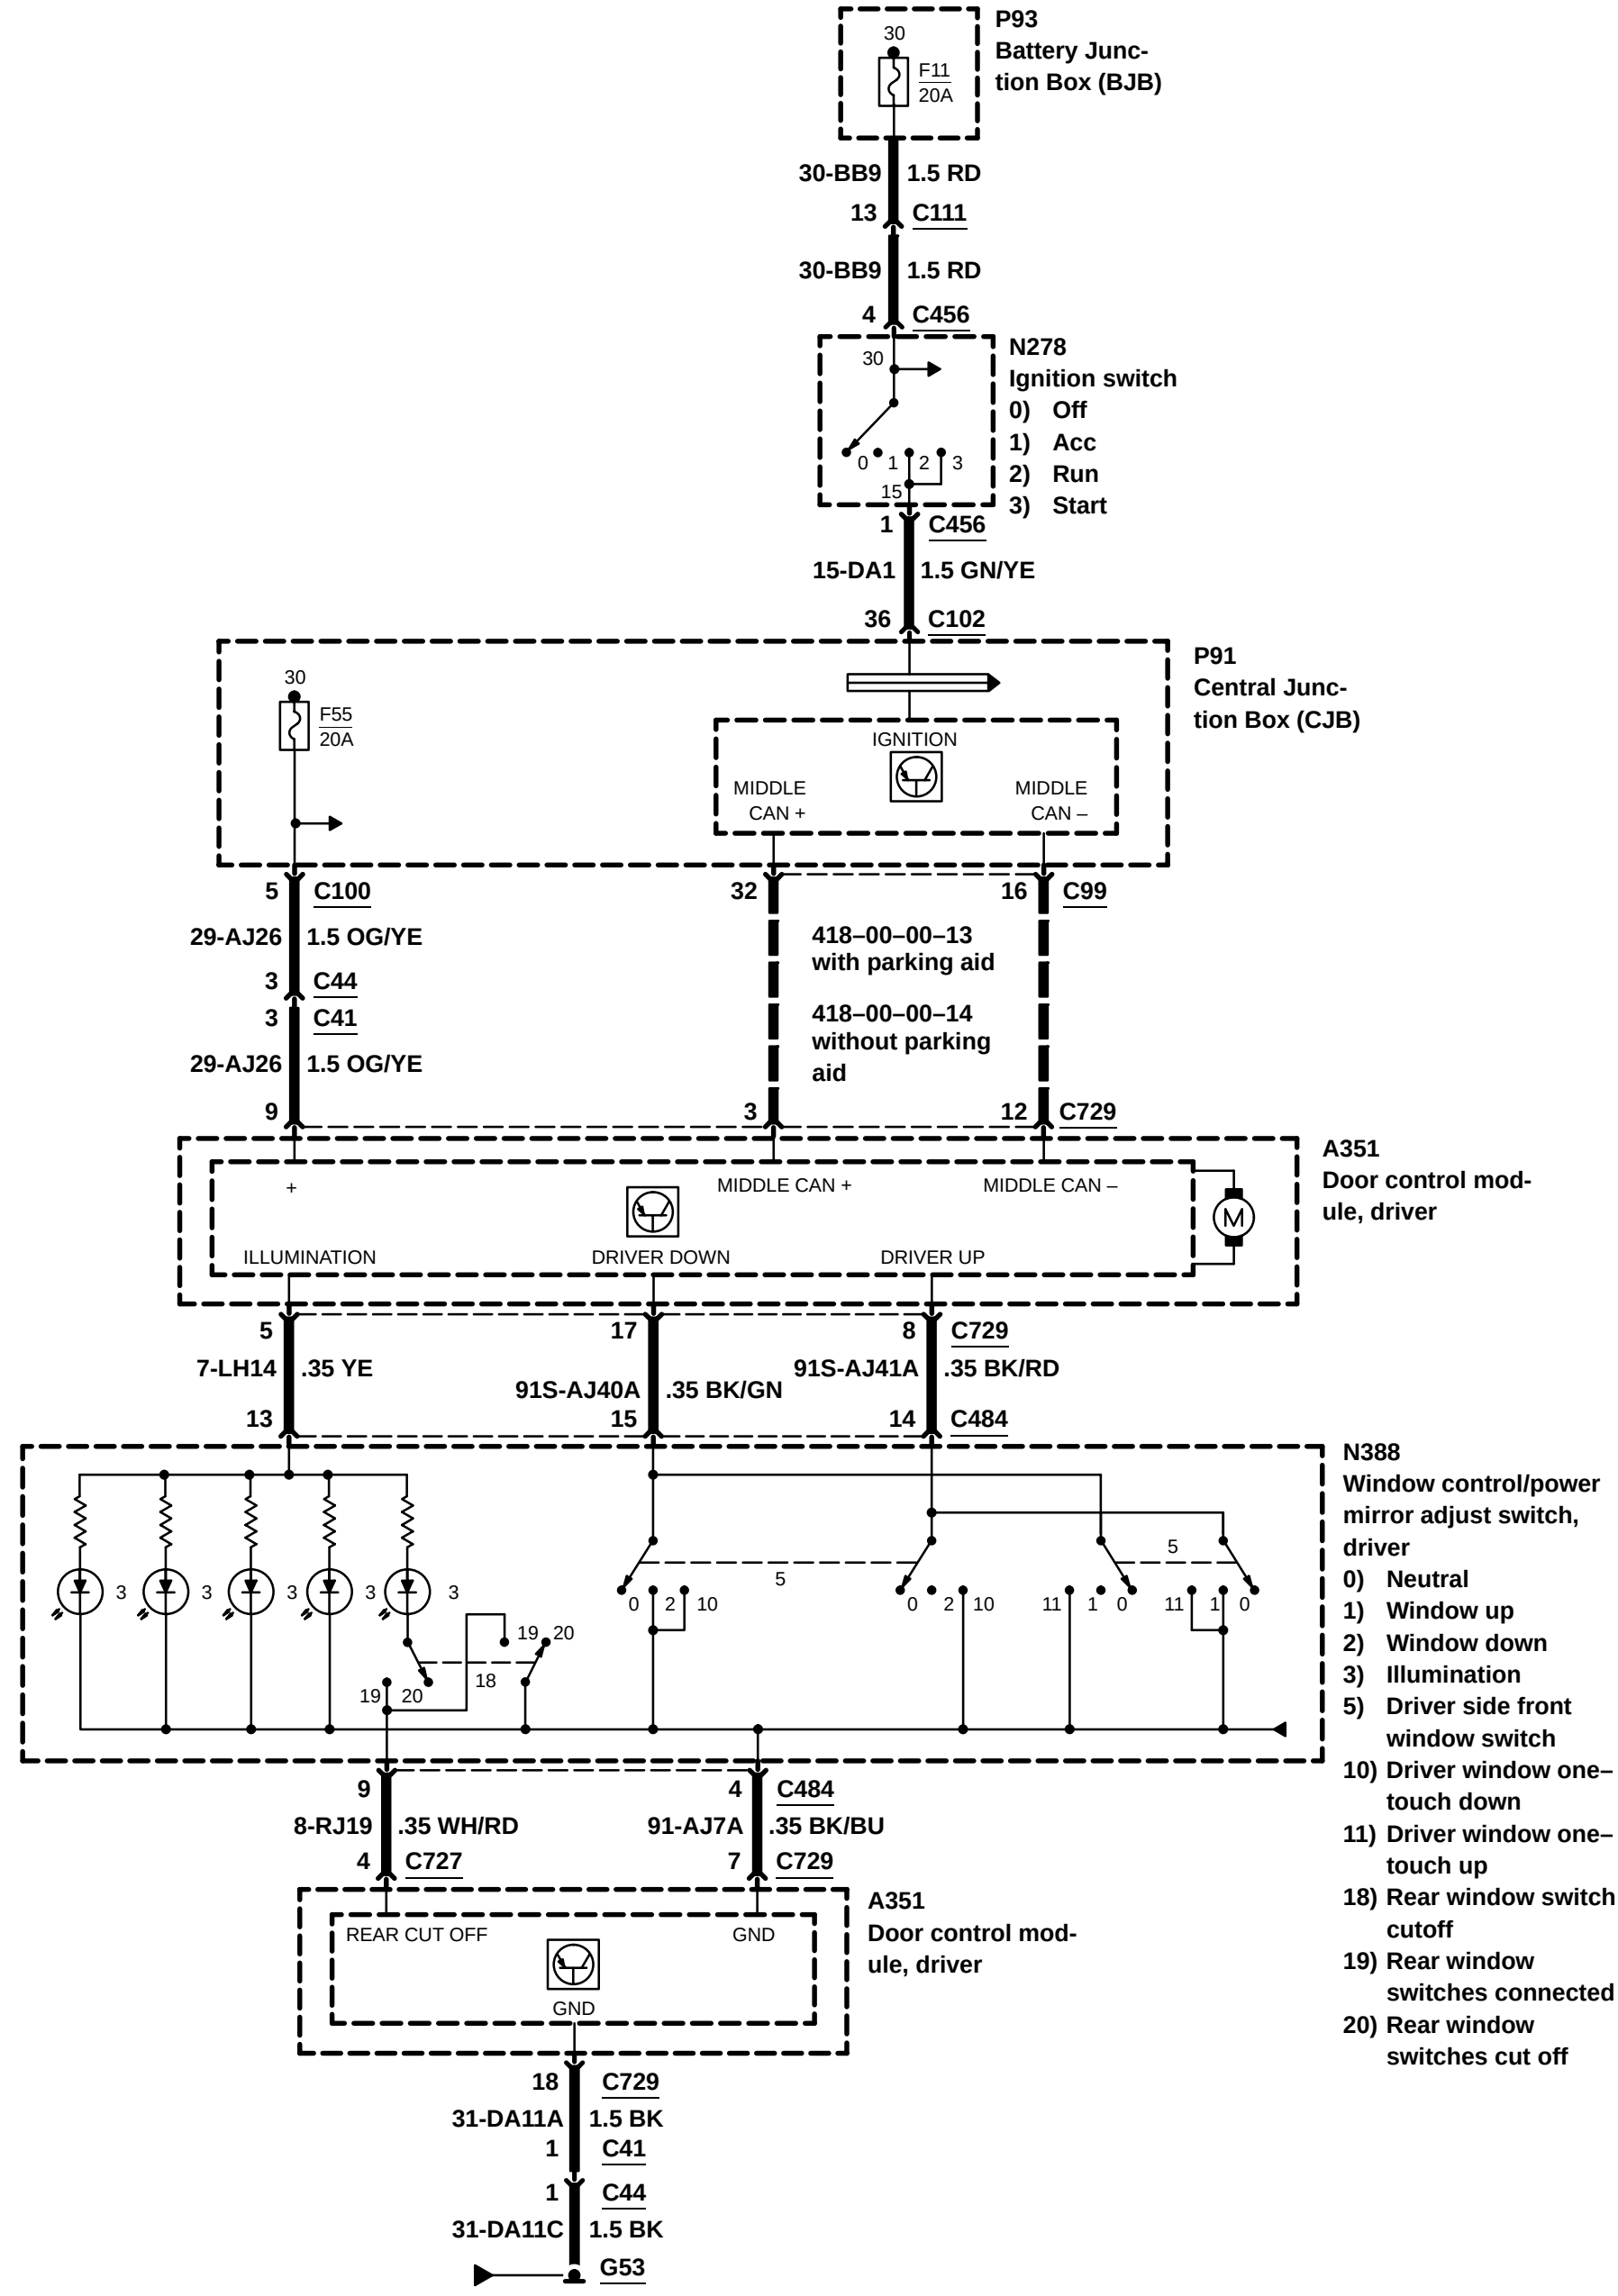


Glass, Frames and Mechanisms – RHD, with front and rear power windows

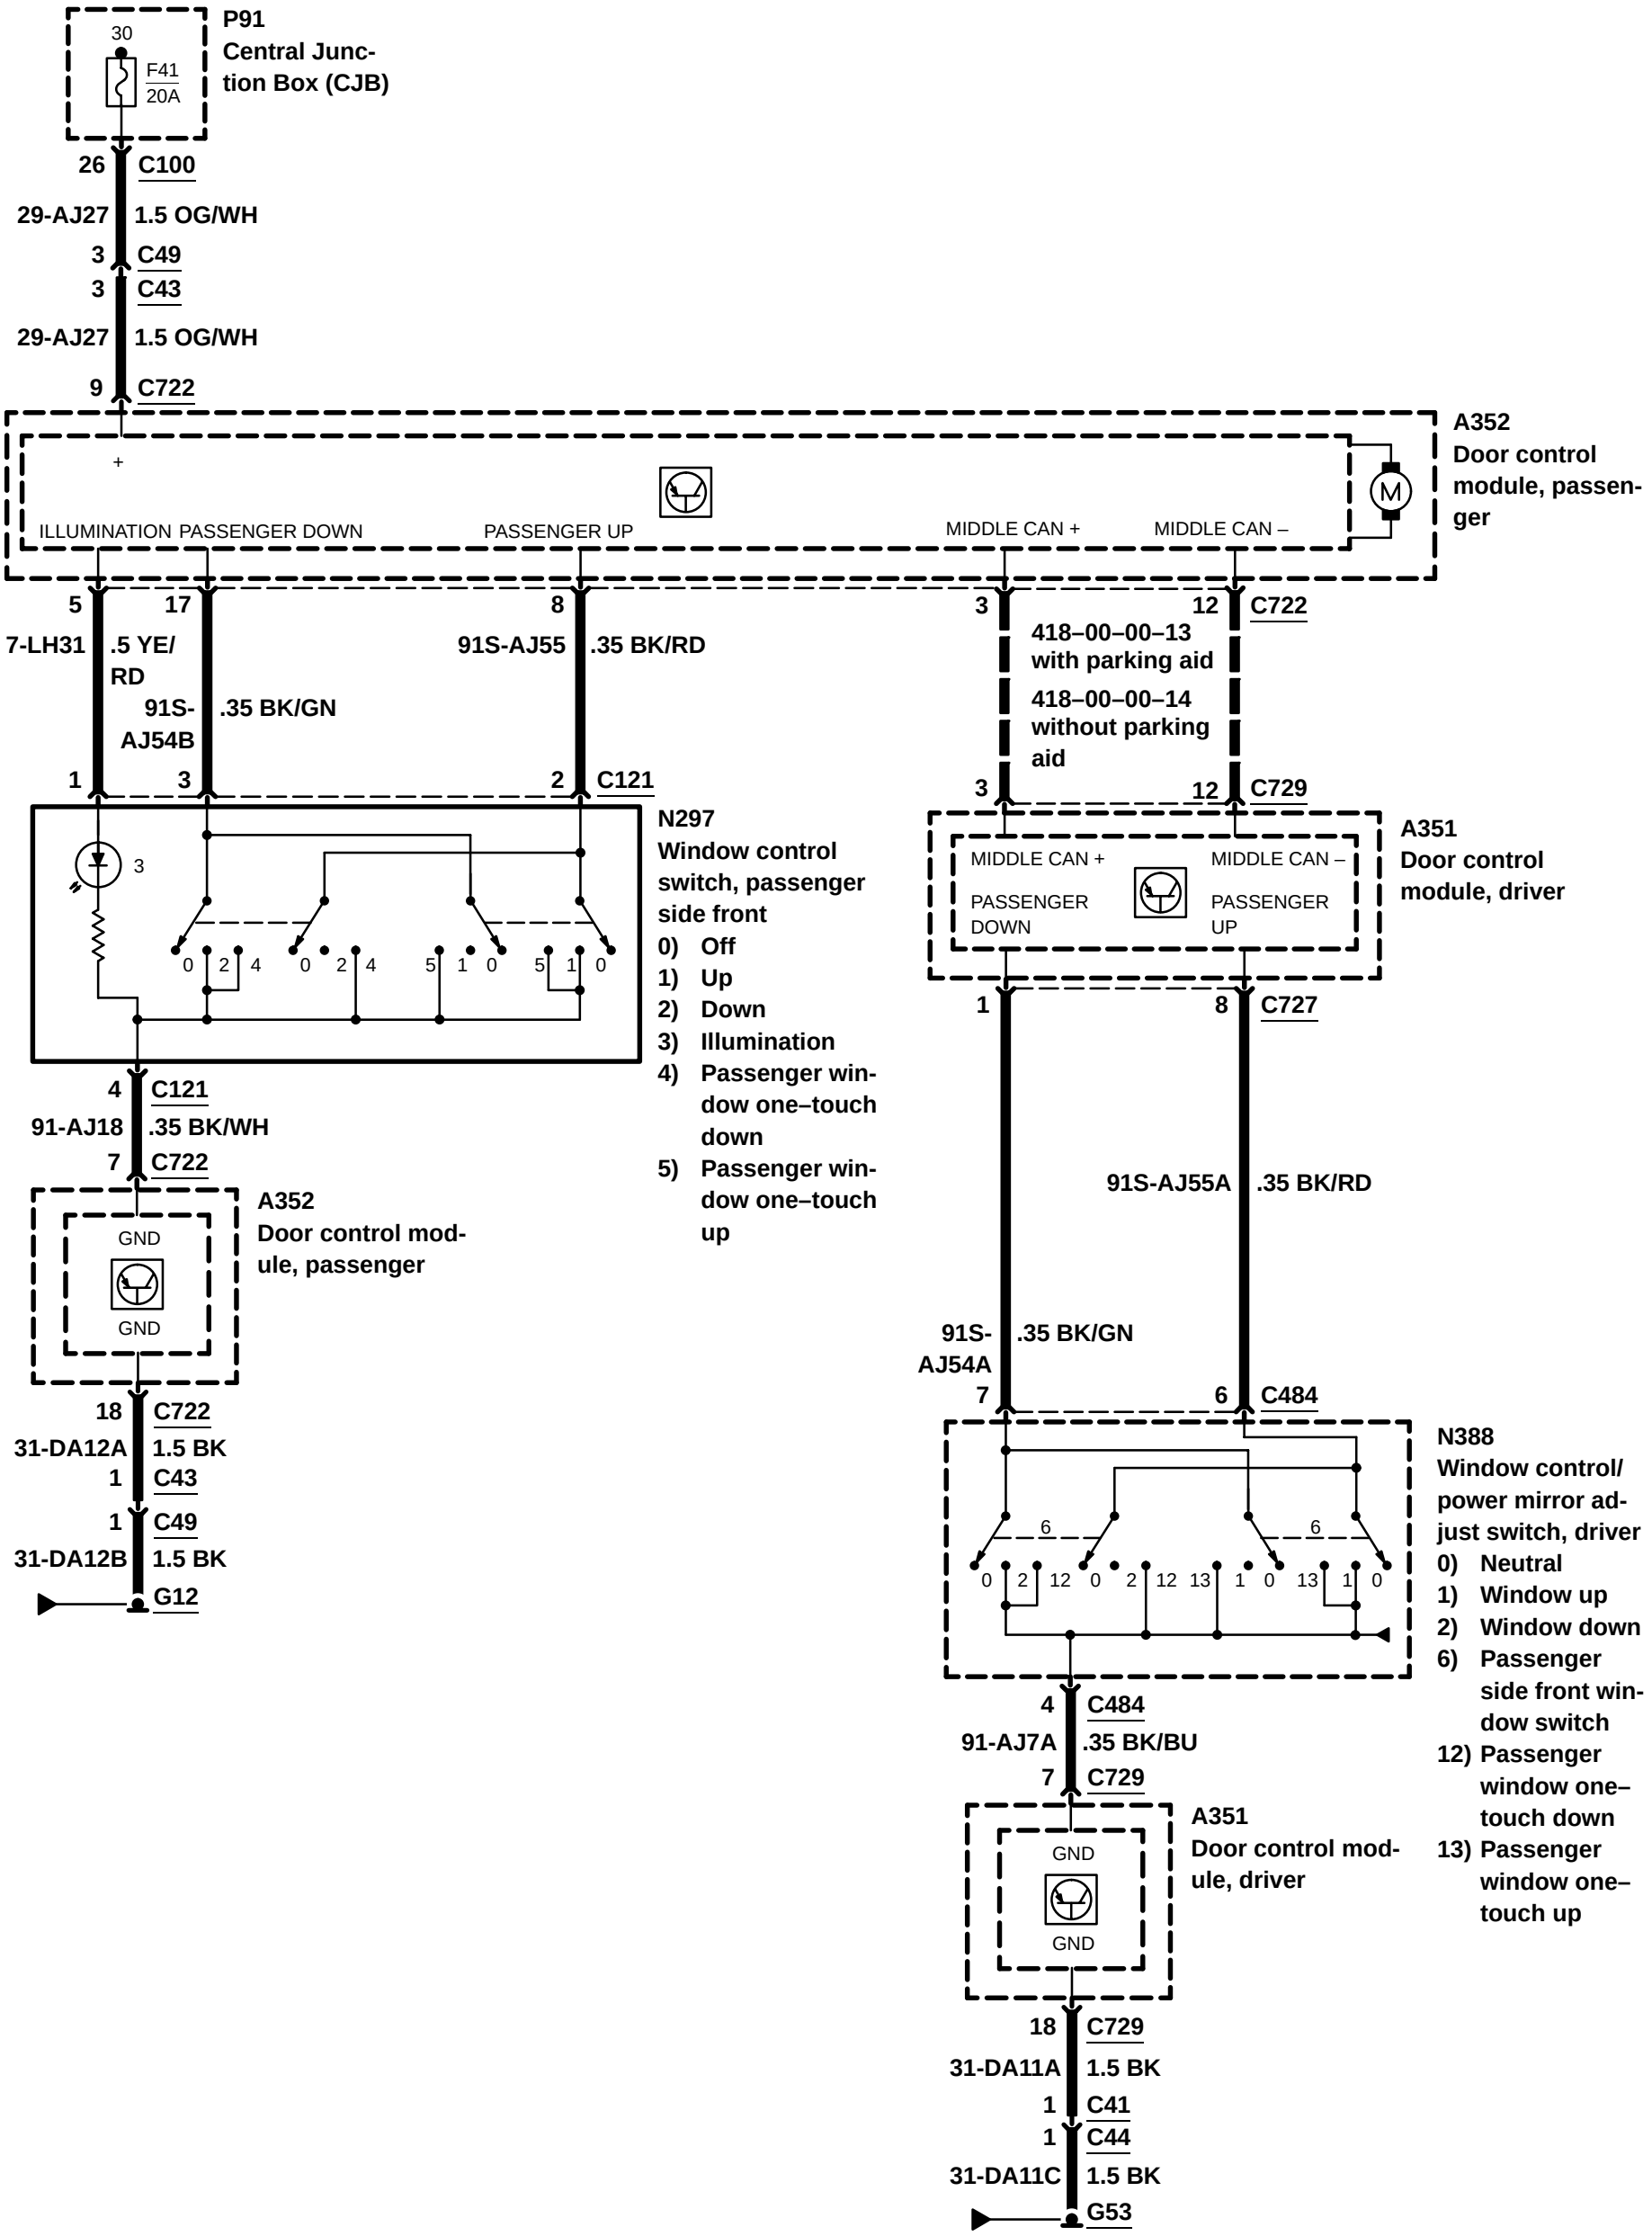


Glass, Frames and Mechanisms – RHD, with front and rear power windows

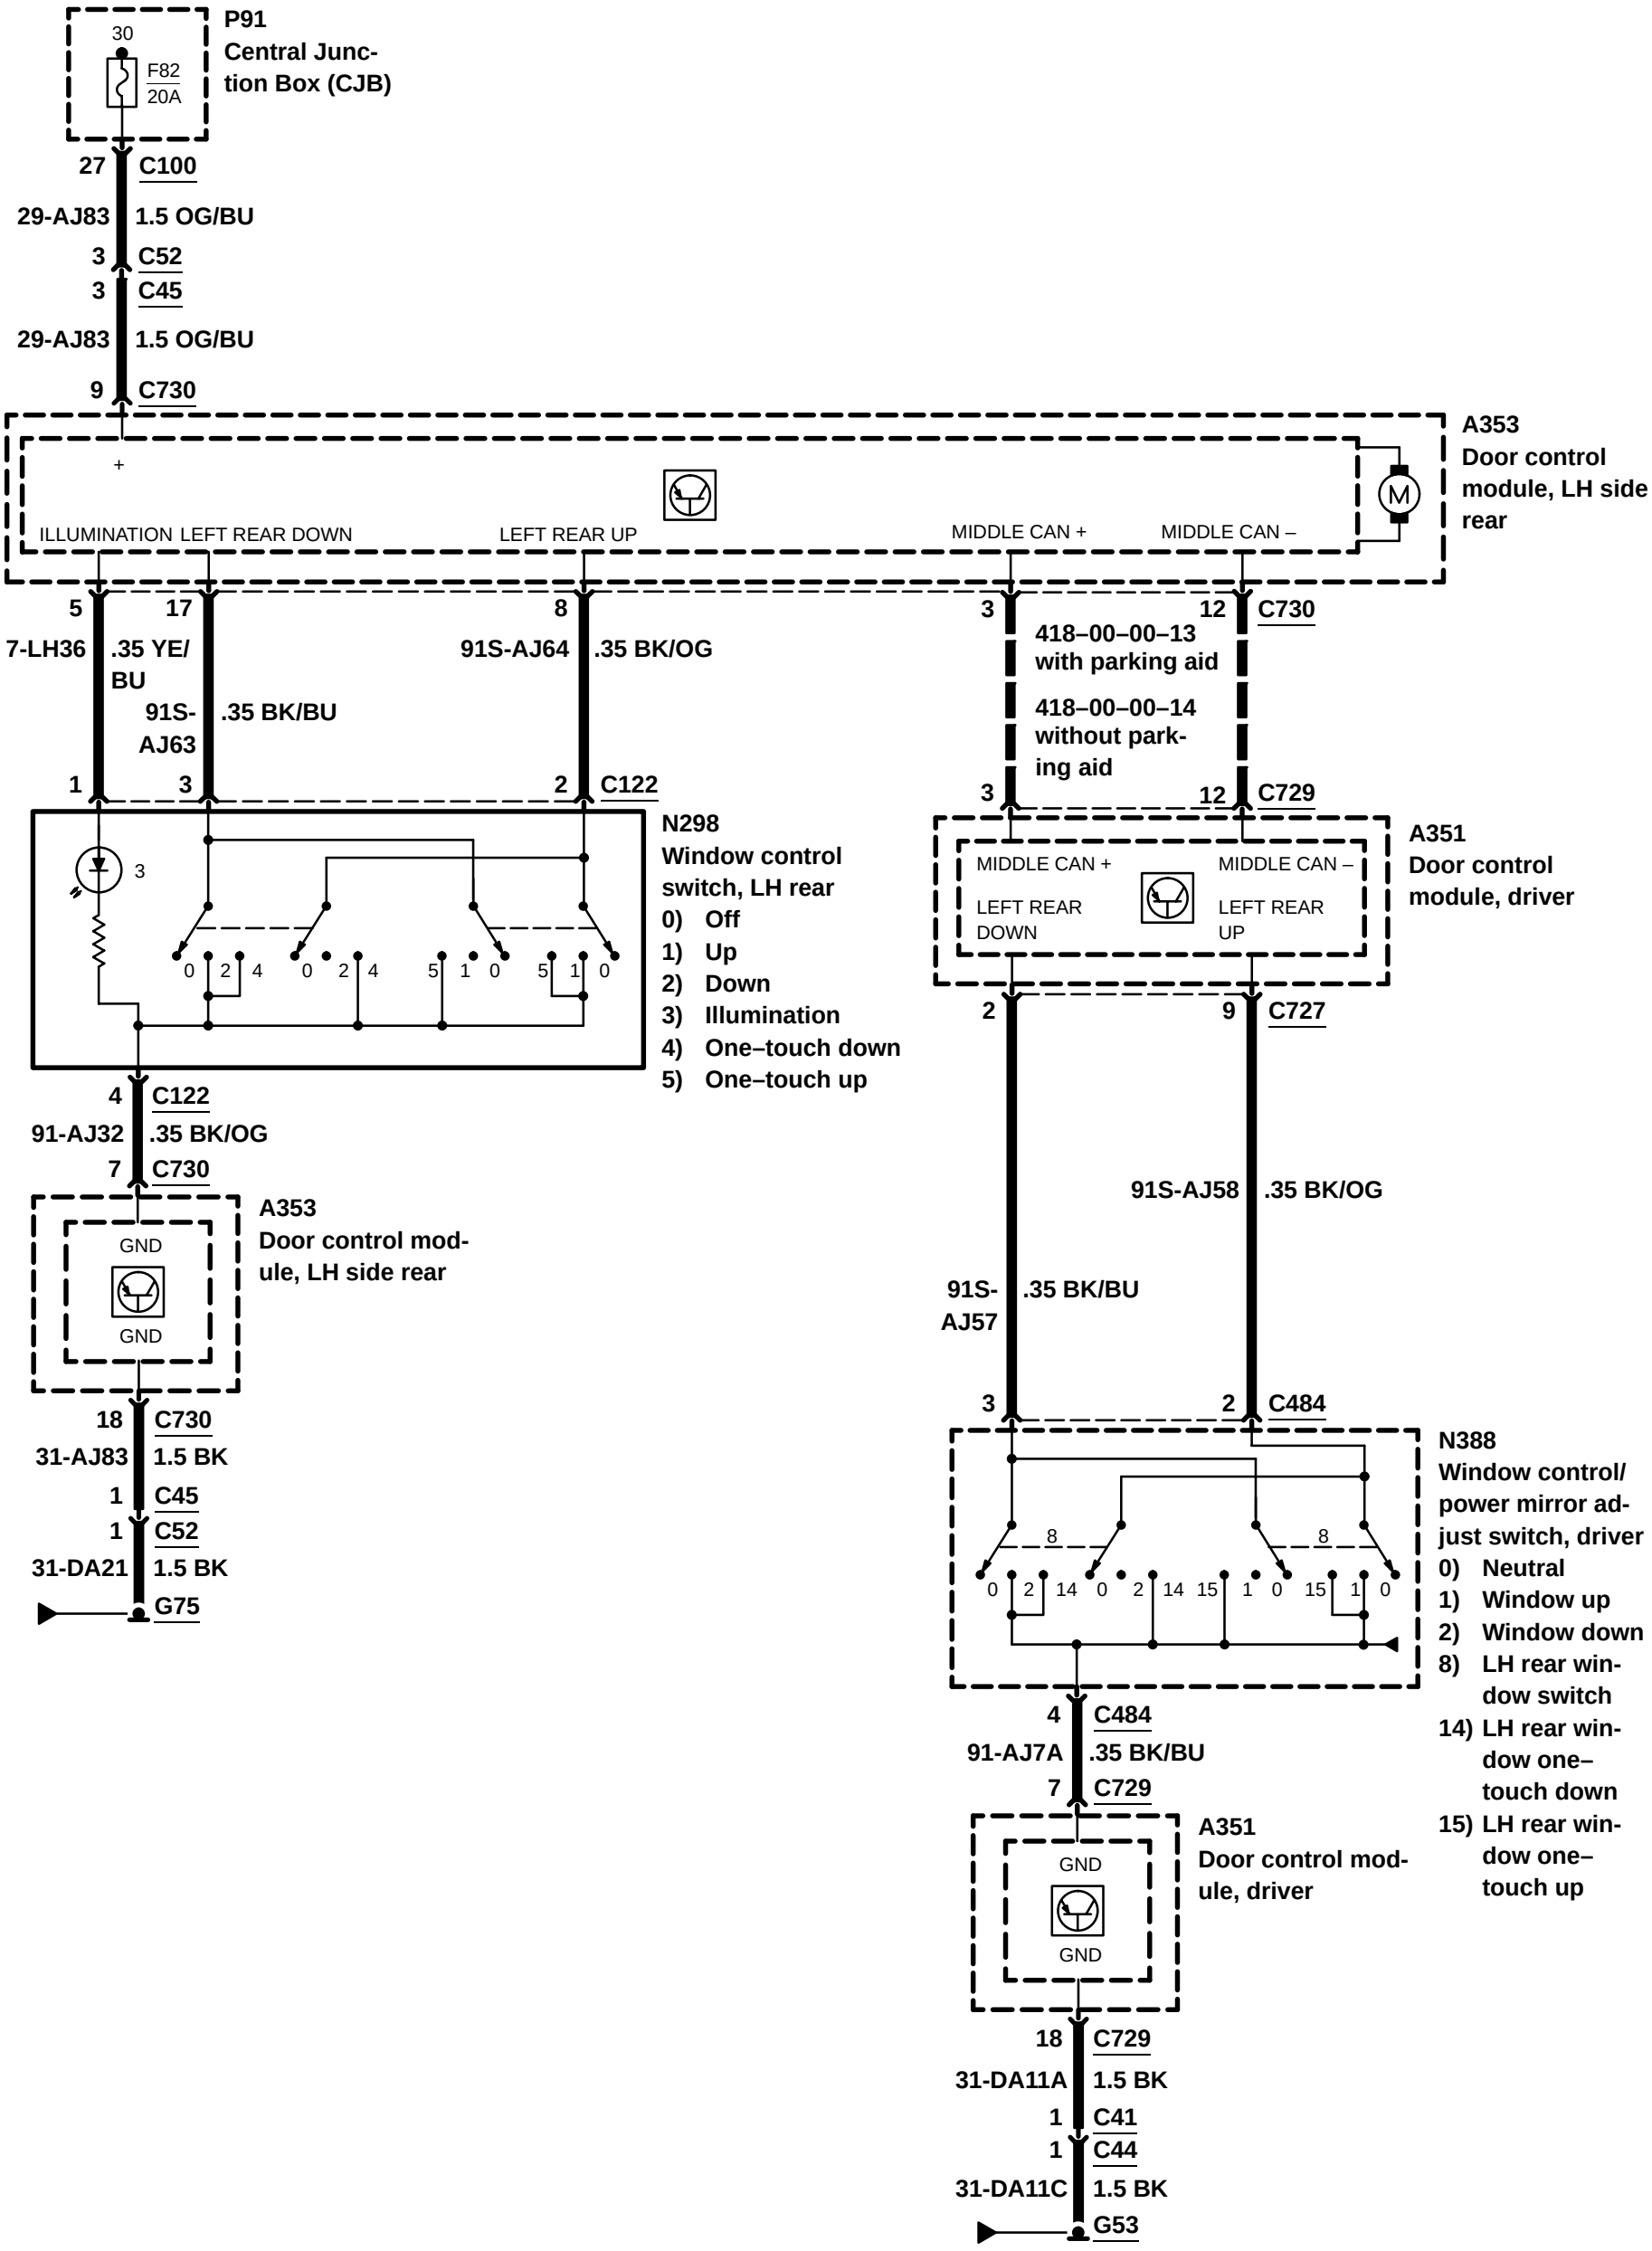


Glass, Frames and Mechanisms – RHD, with front and rear power windows

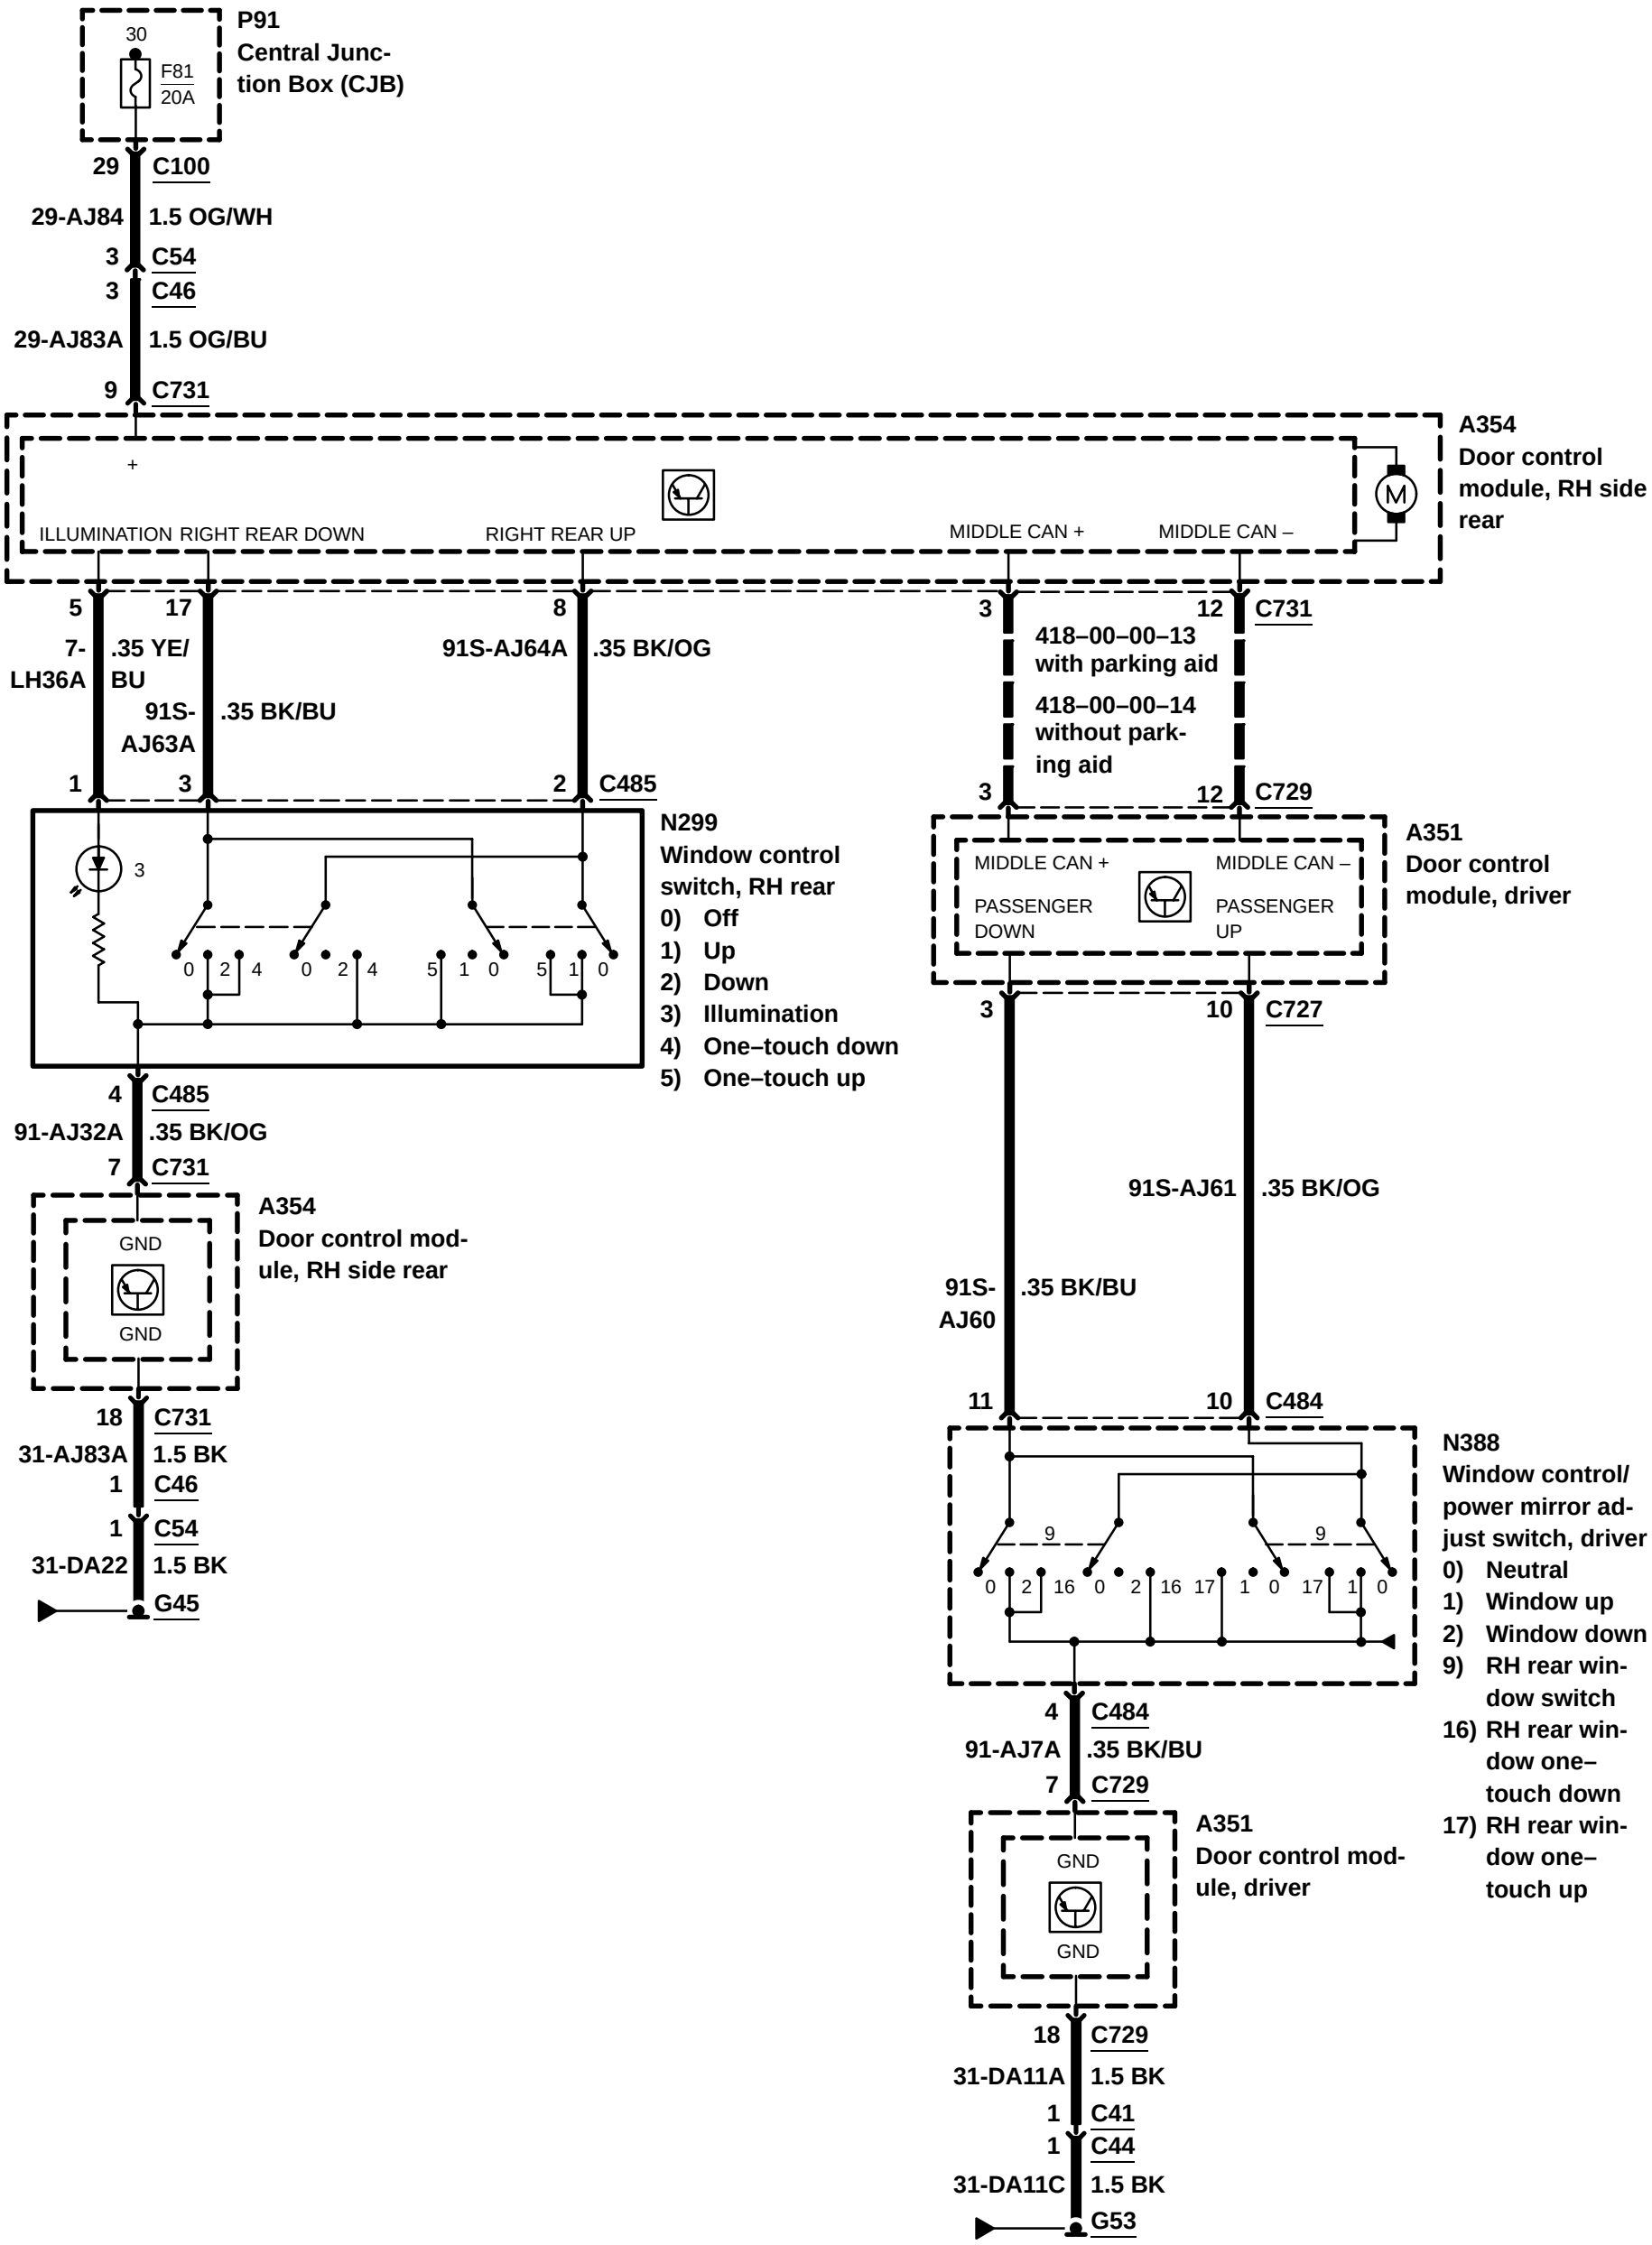


Glass, Frames and Mechanisms – Heated rear window, 4–door model

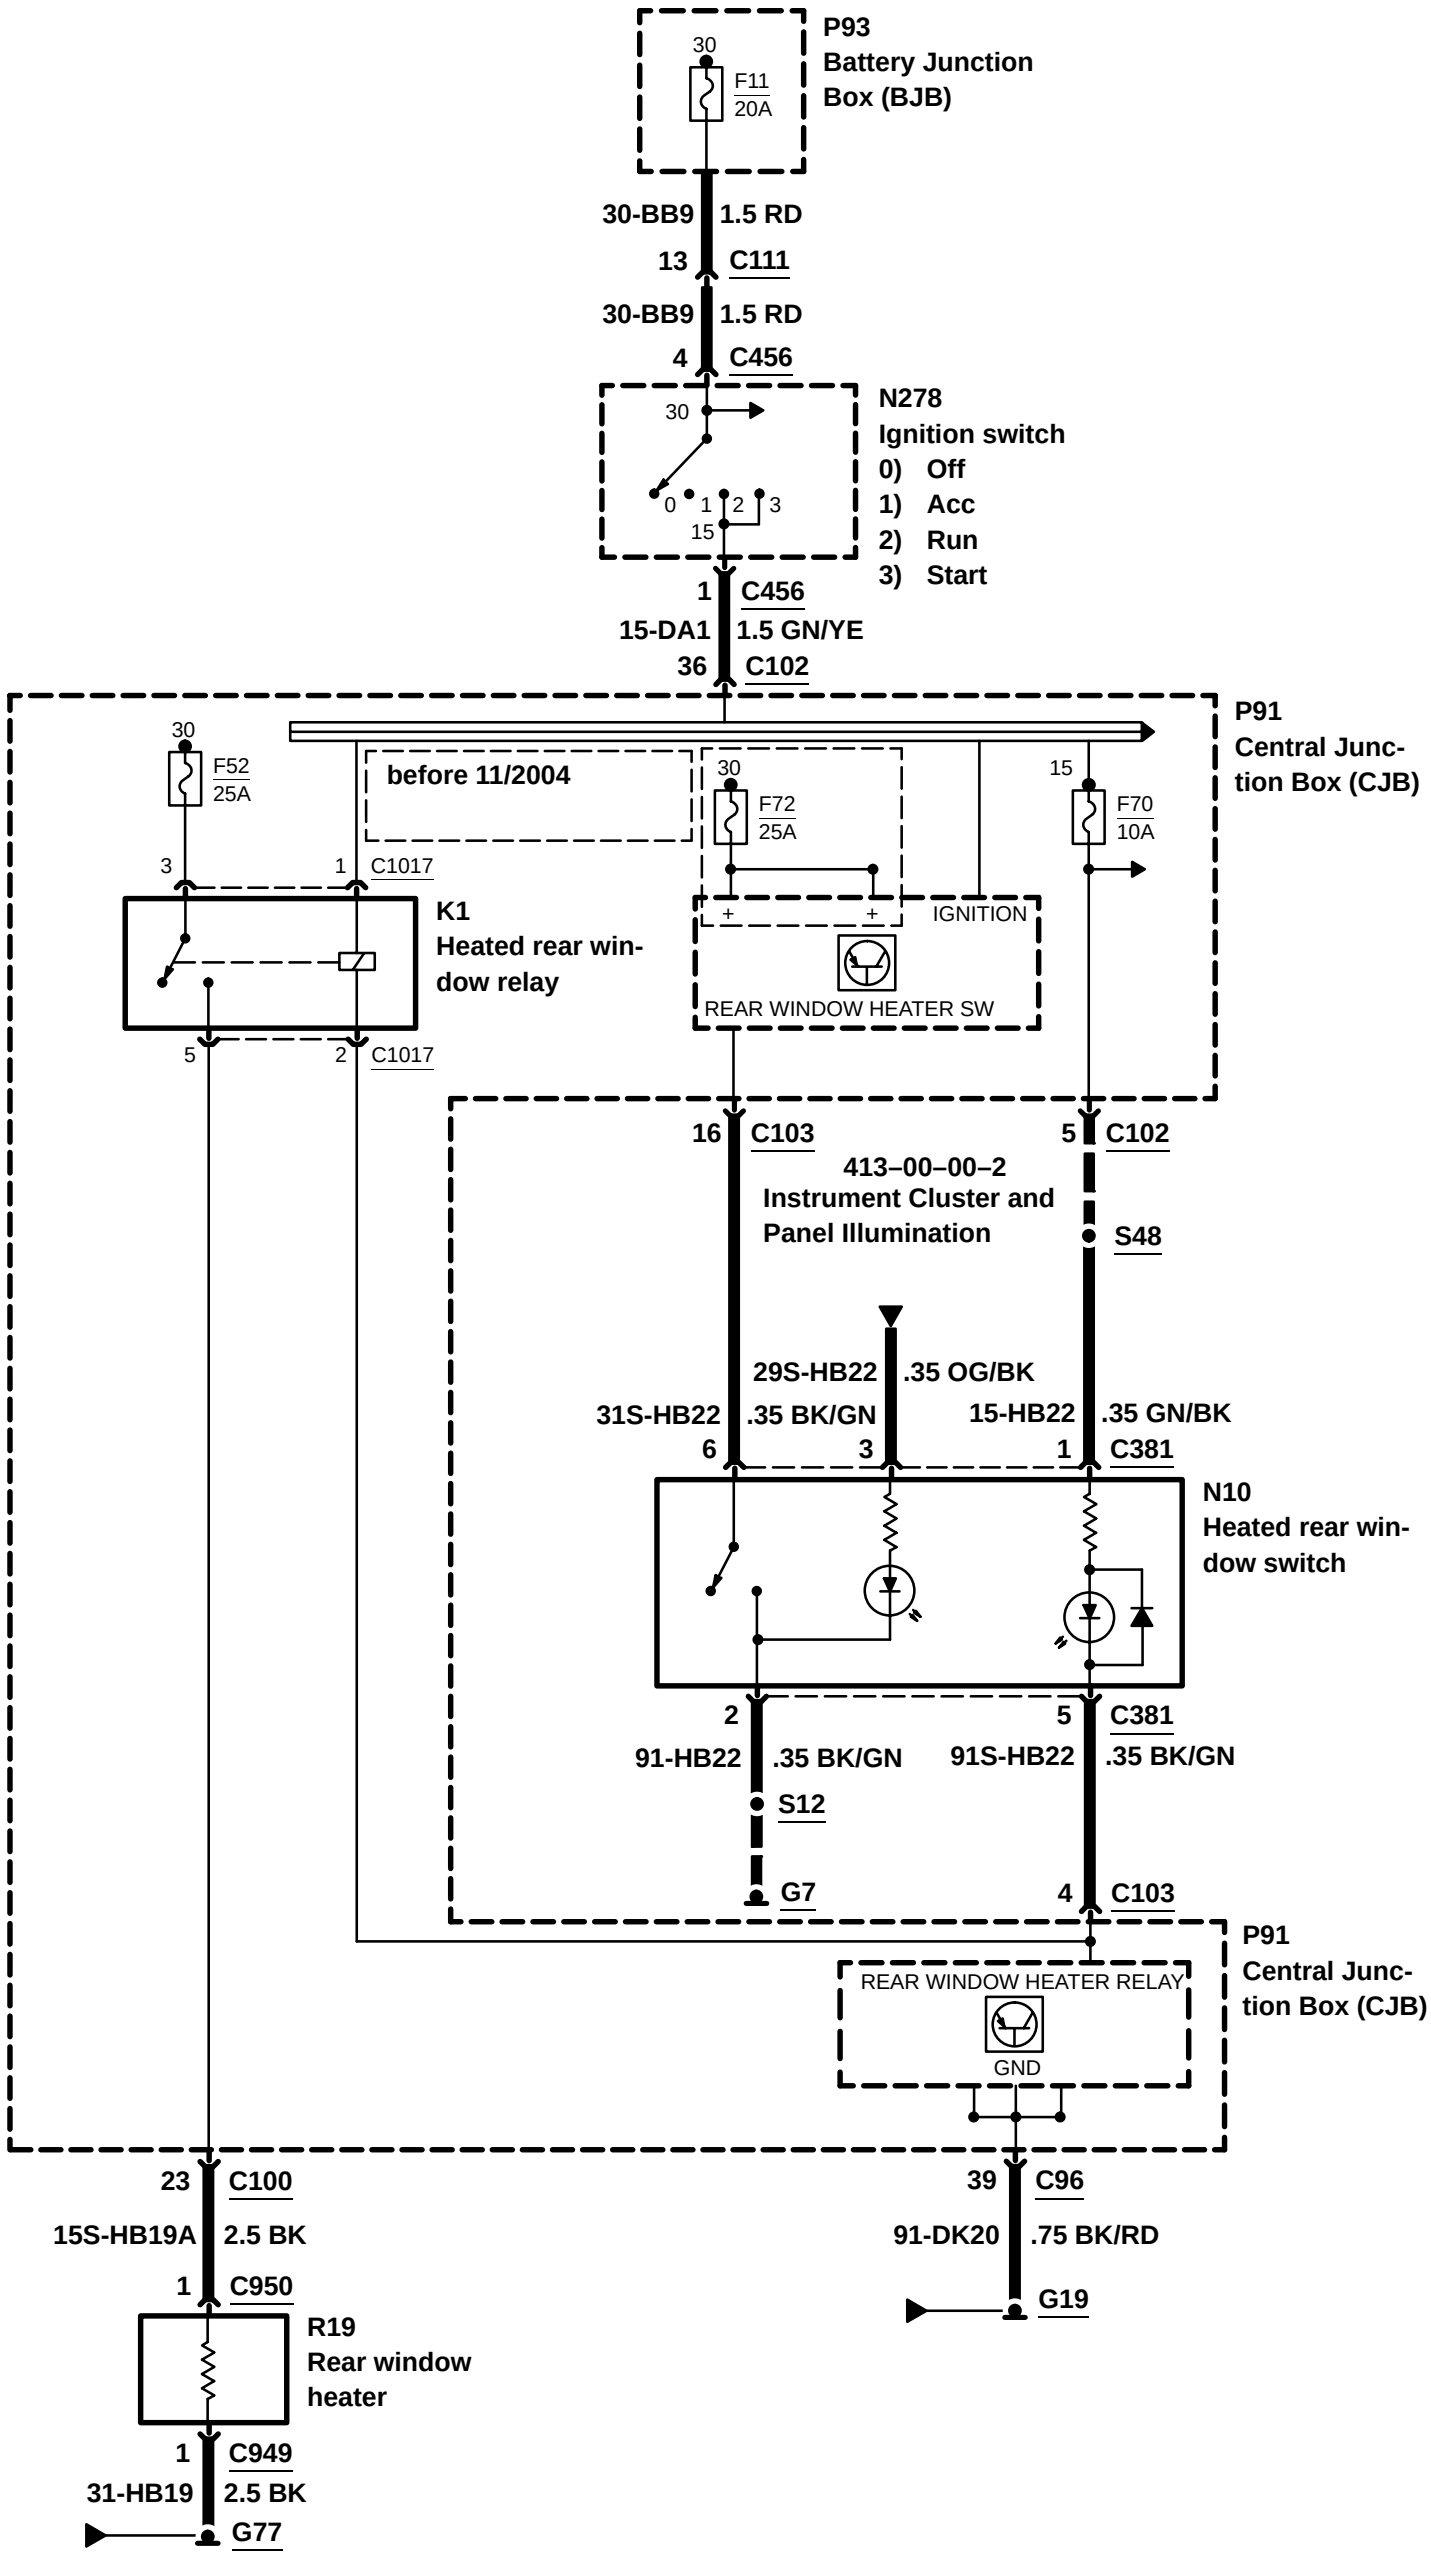


Glass, Frames and Mechanisms – Heated rear window, 5–door model

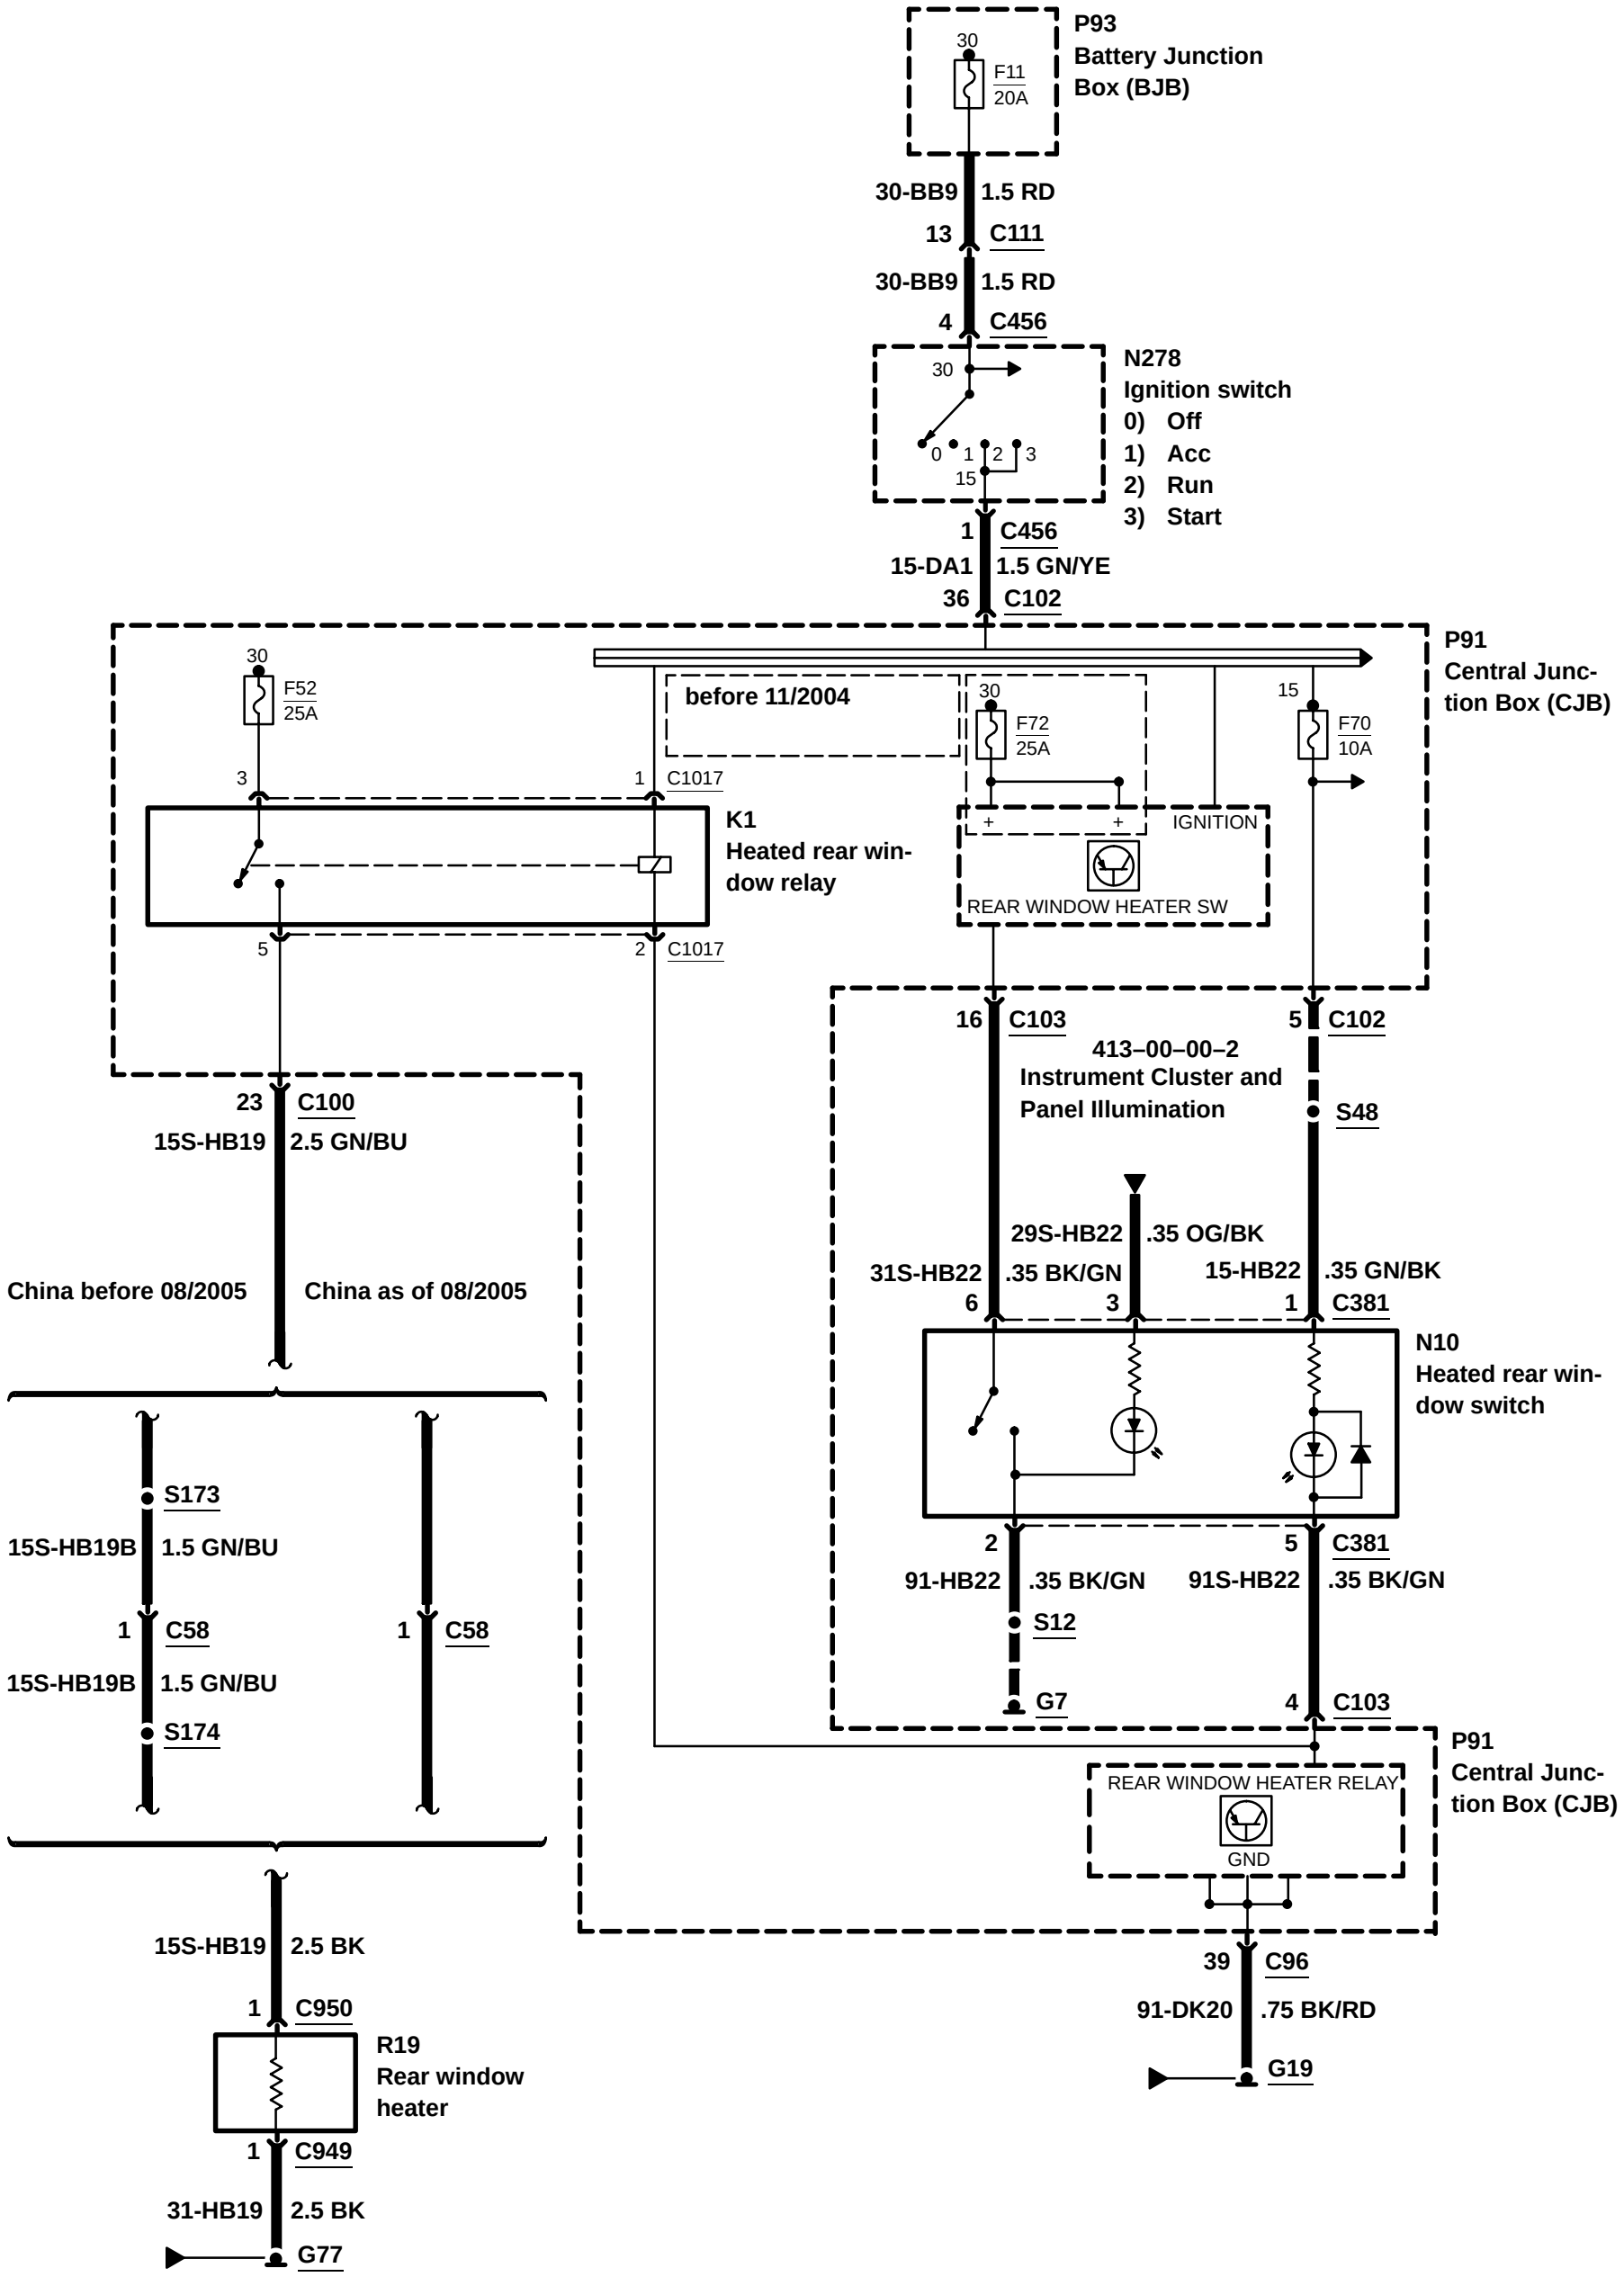


Glass, Frames and Mechanisms – Heated power mirrors, with front and rear power windows

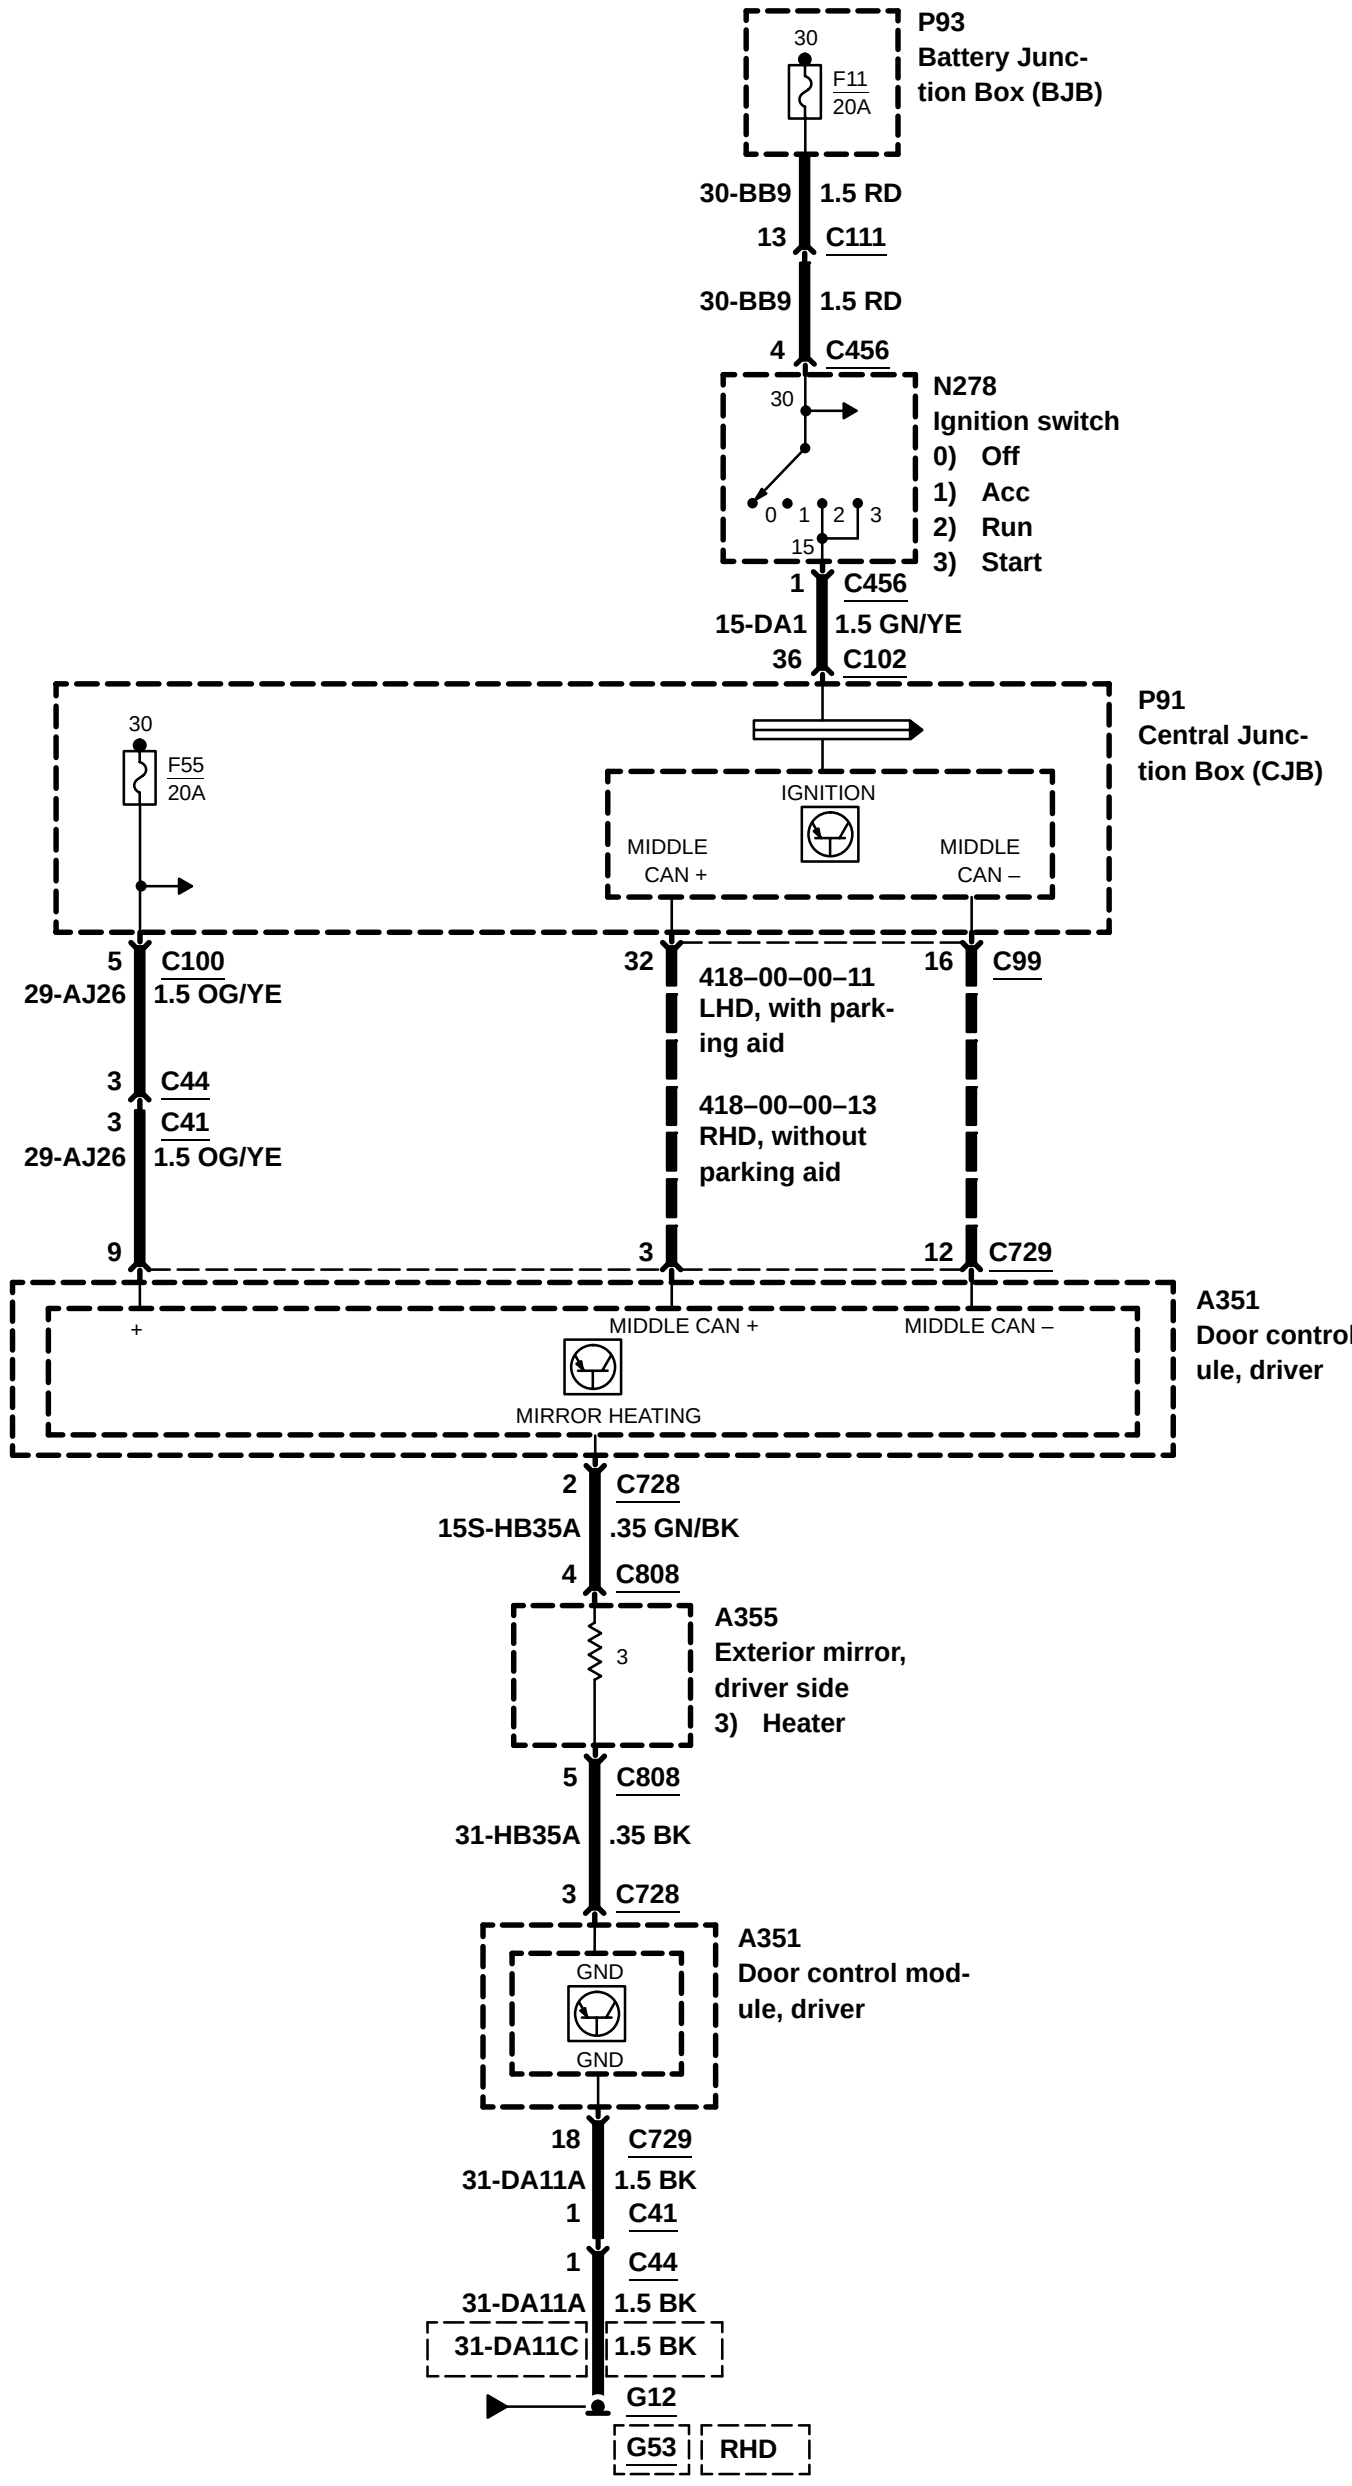


Glass, Frames and Mechanisms – Heated power mirrors, with front and rear power windows

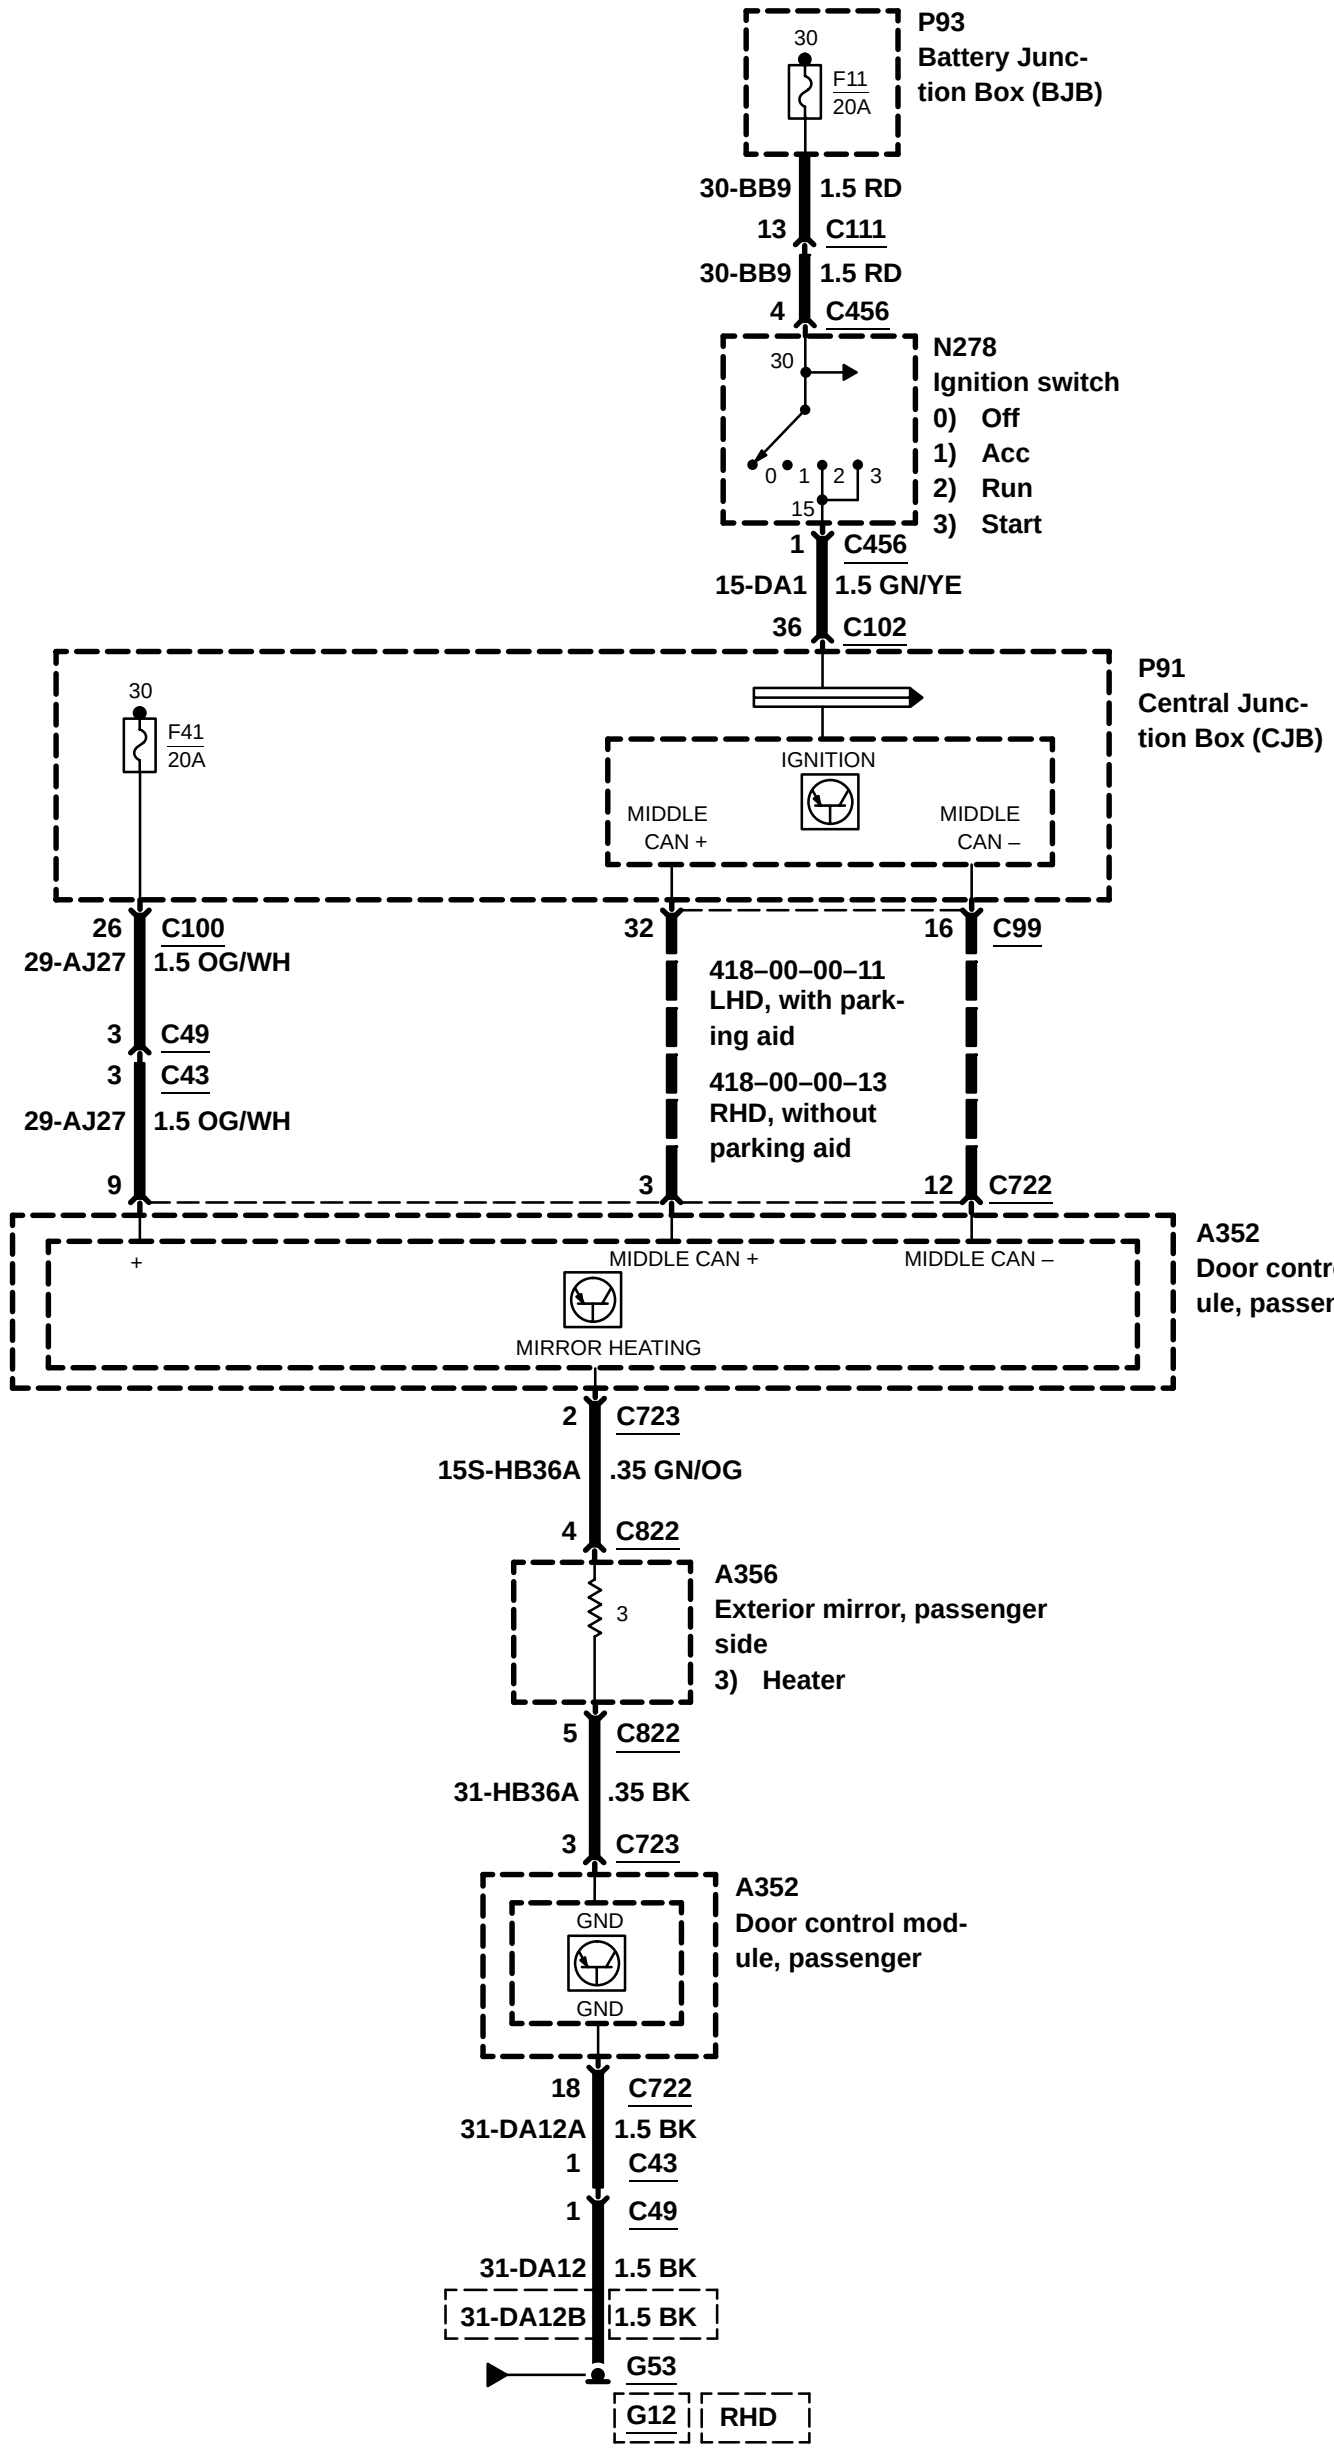


Instrument Panel and Console

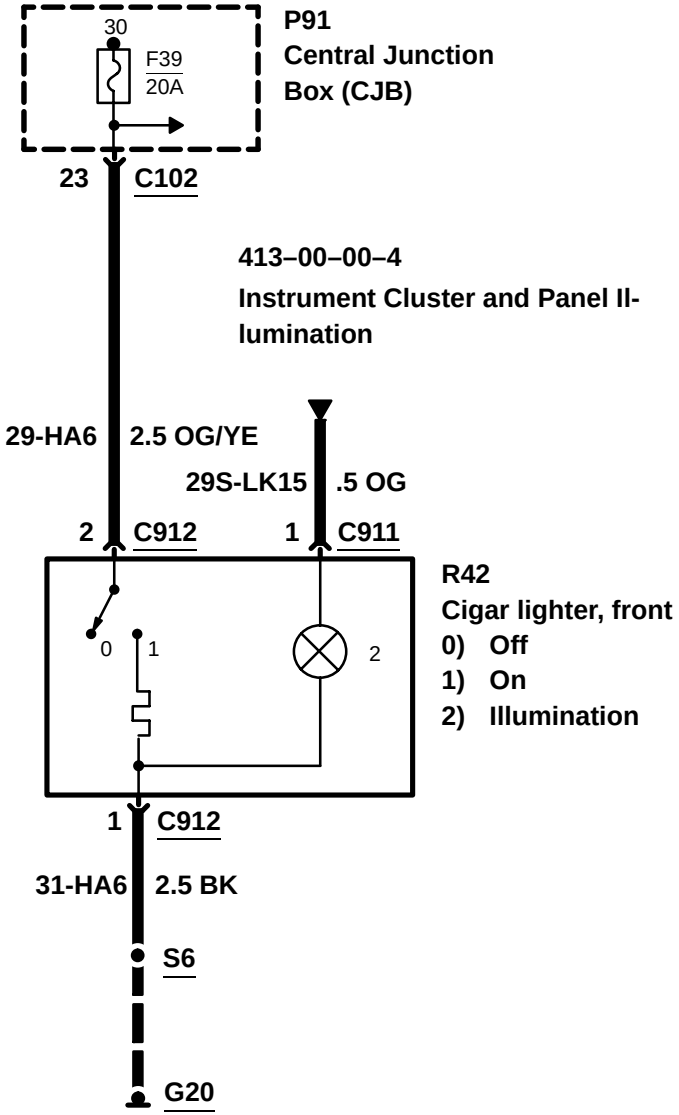

Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front power windows

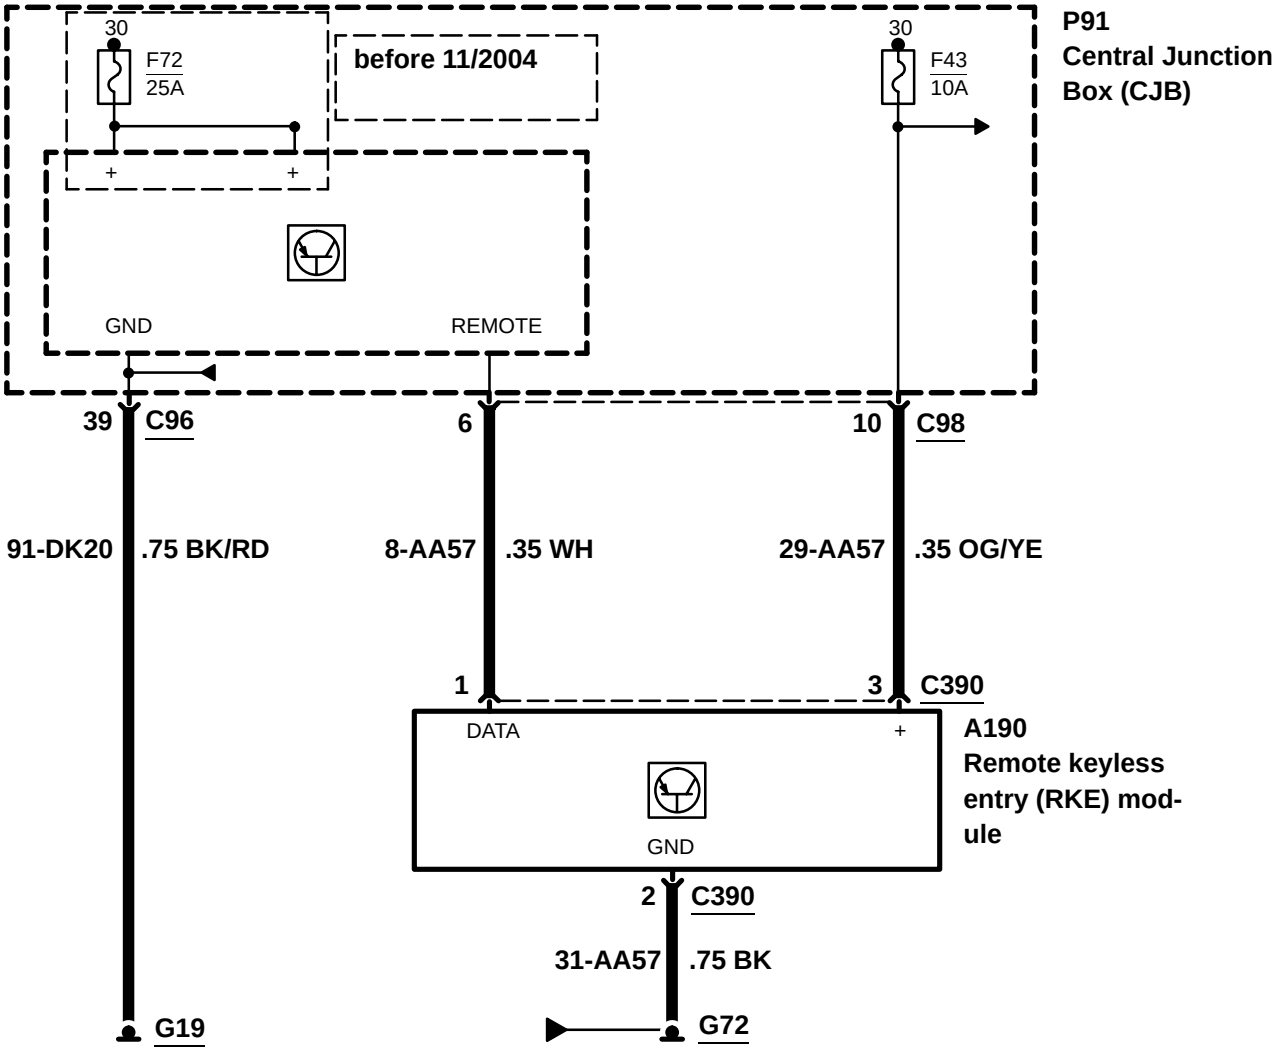


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front power windows

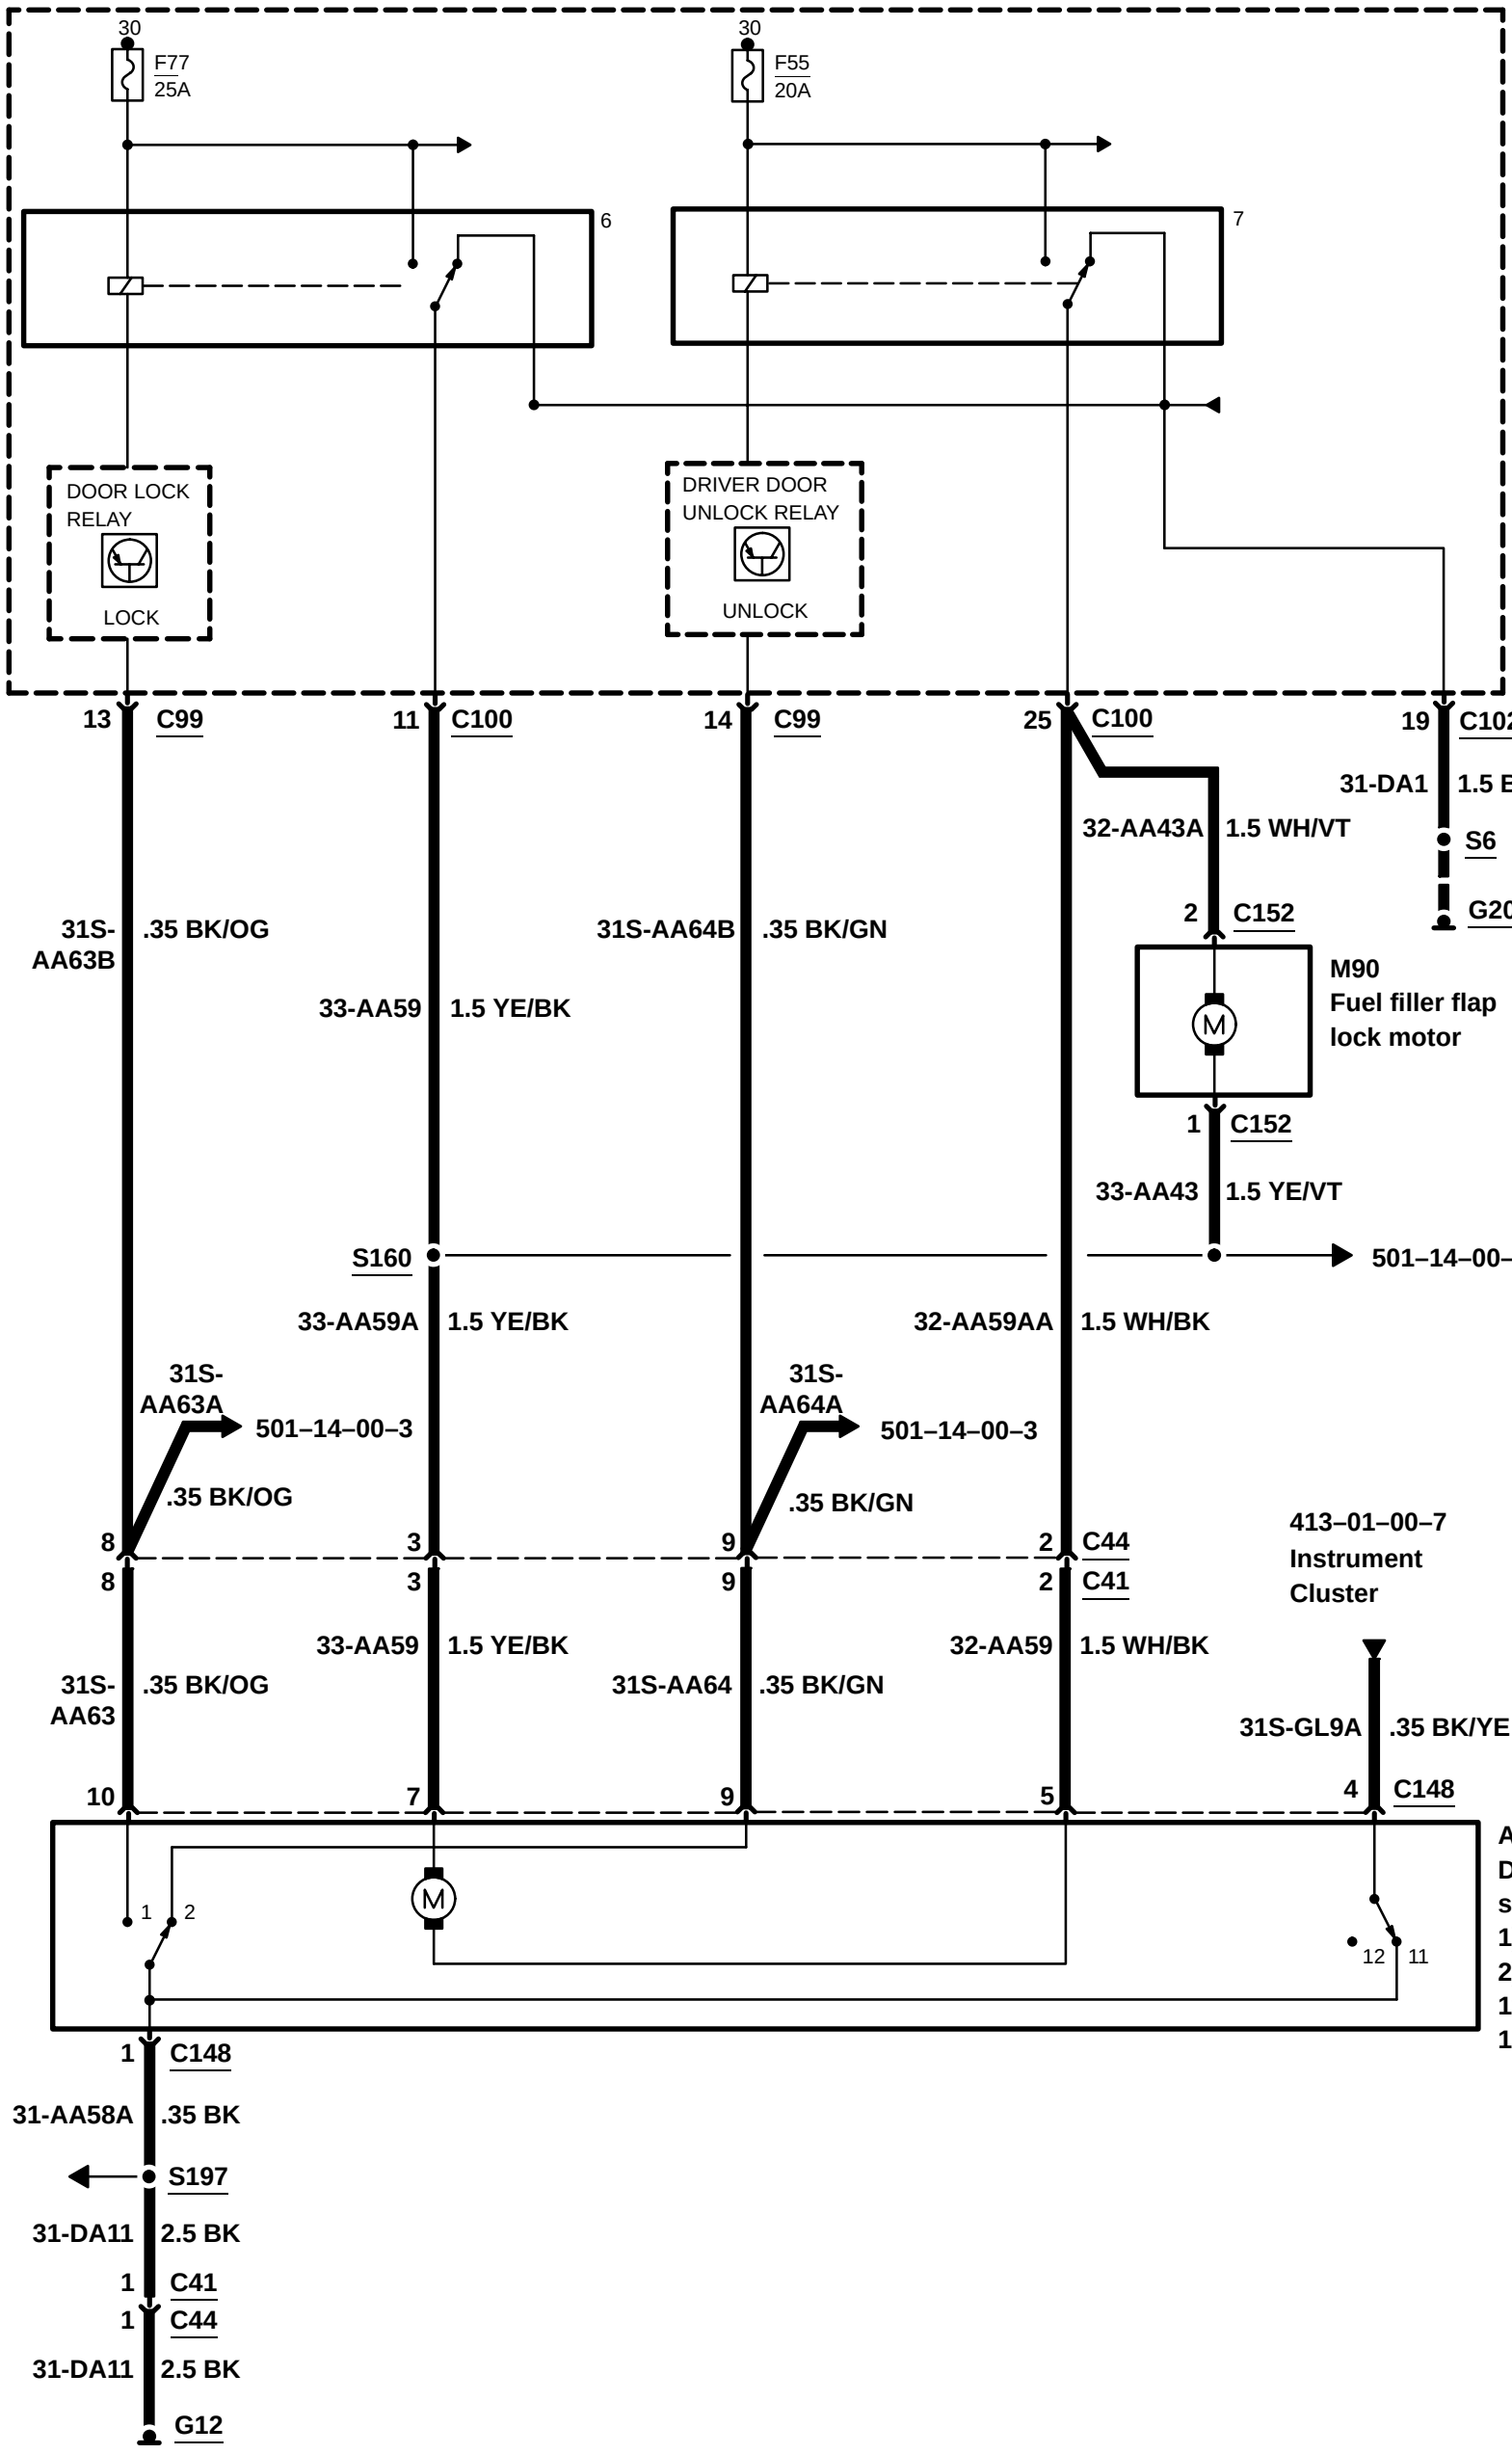


P91
Central Junction Box (CJB)
6) Door lock relay
7) Driver door unlock relay

A172
Door lock unit, driver side front
1) Lock
2) Unlock
11) Door closed
12) Door open

Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front power windows

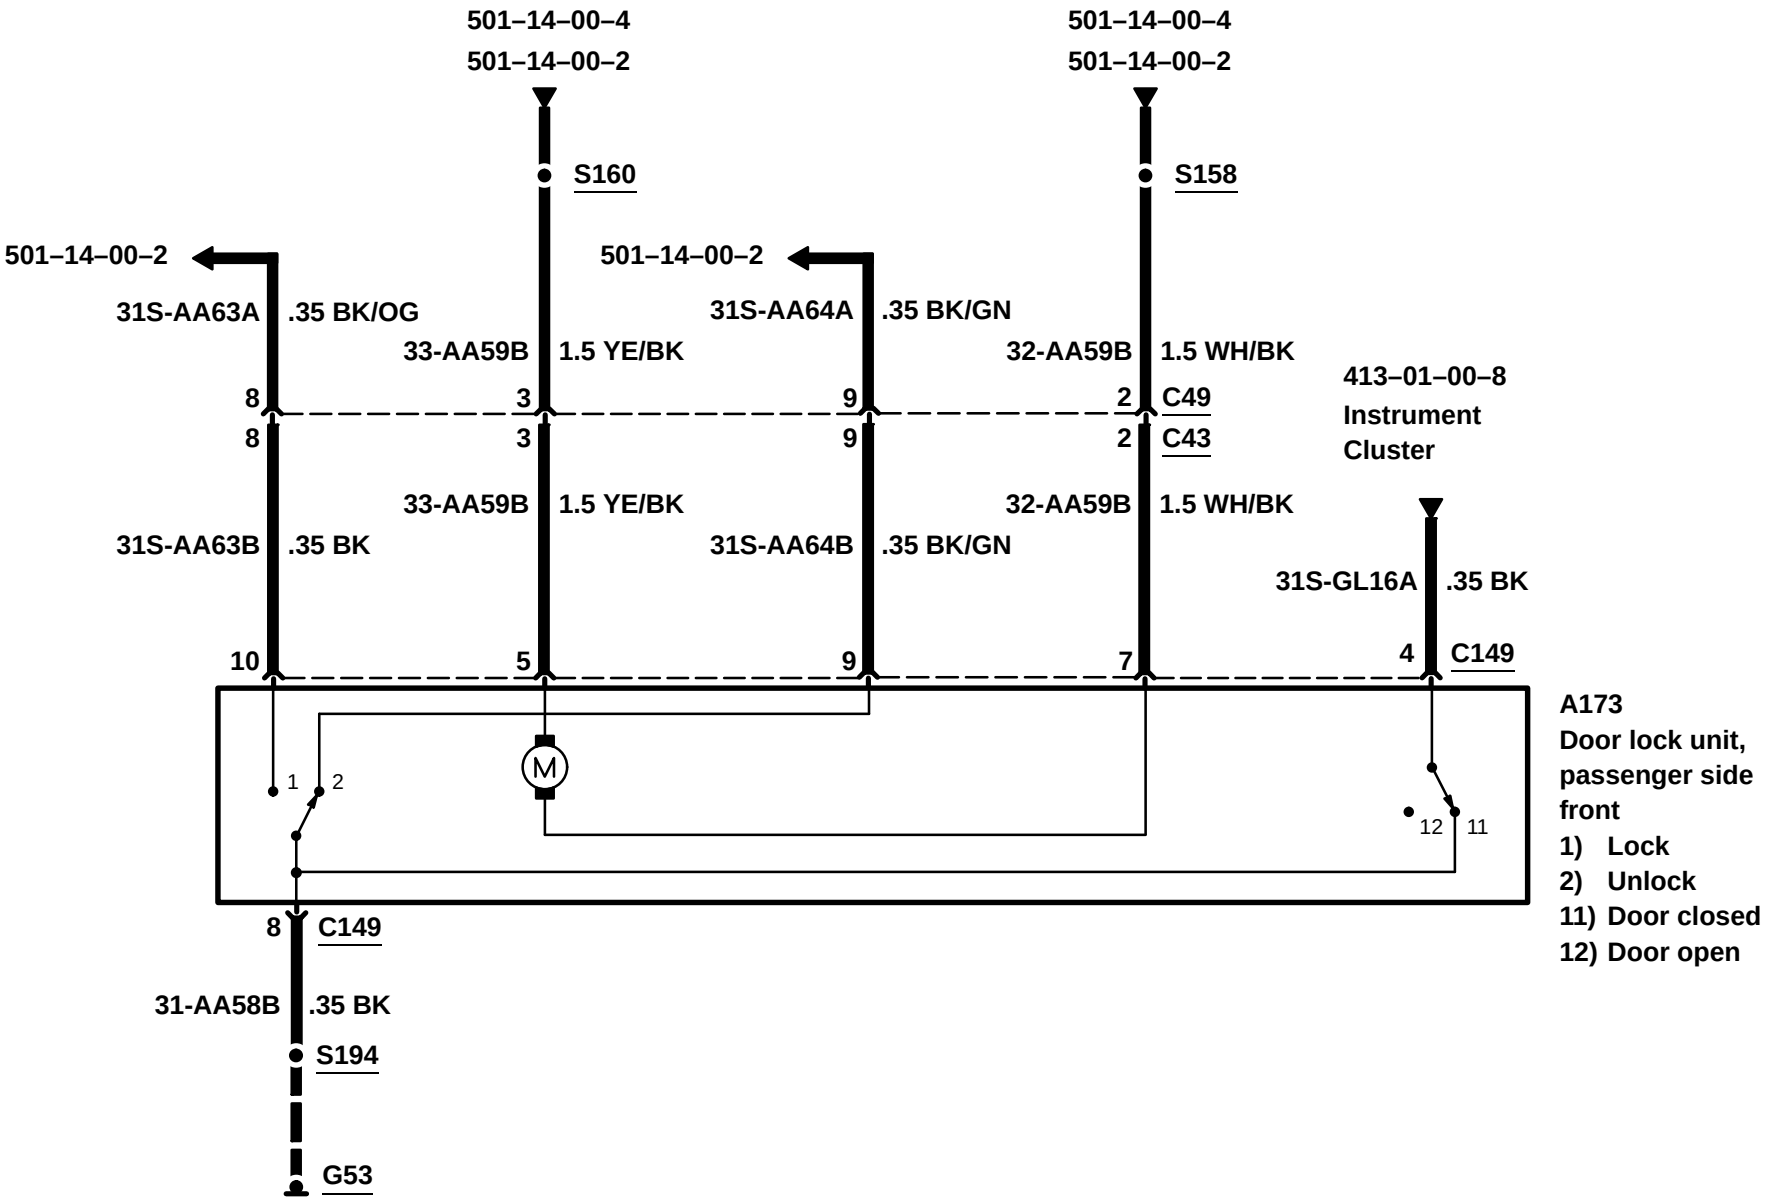


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front power windows

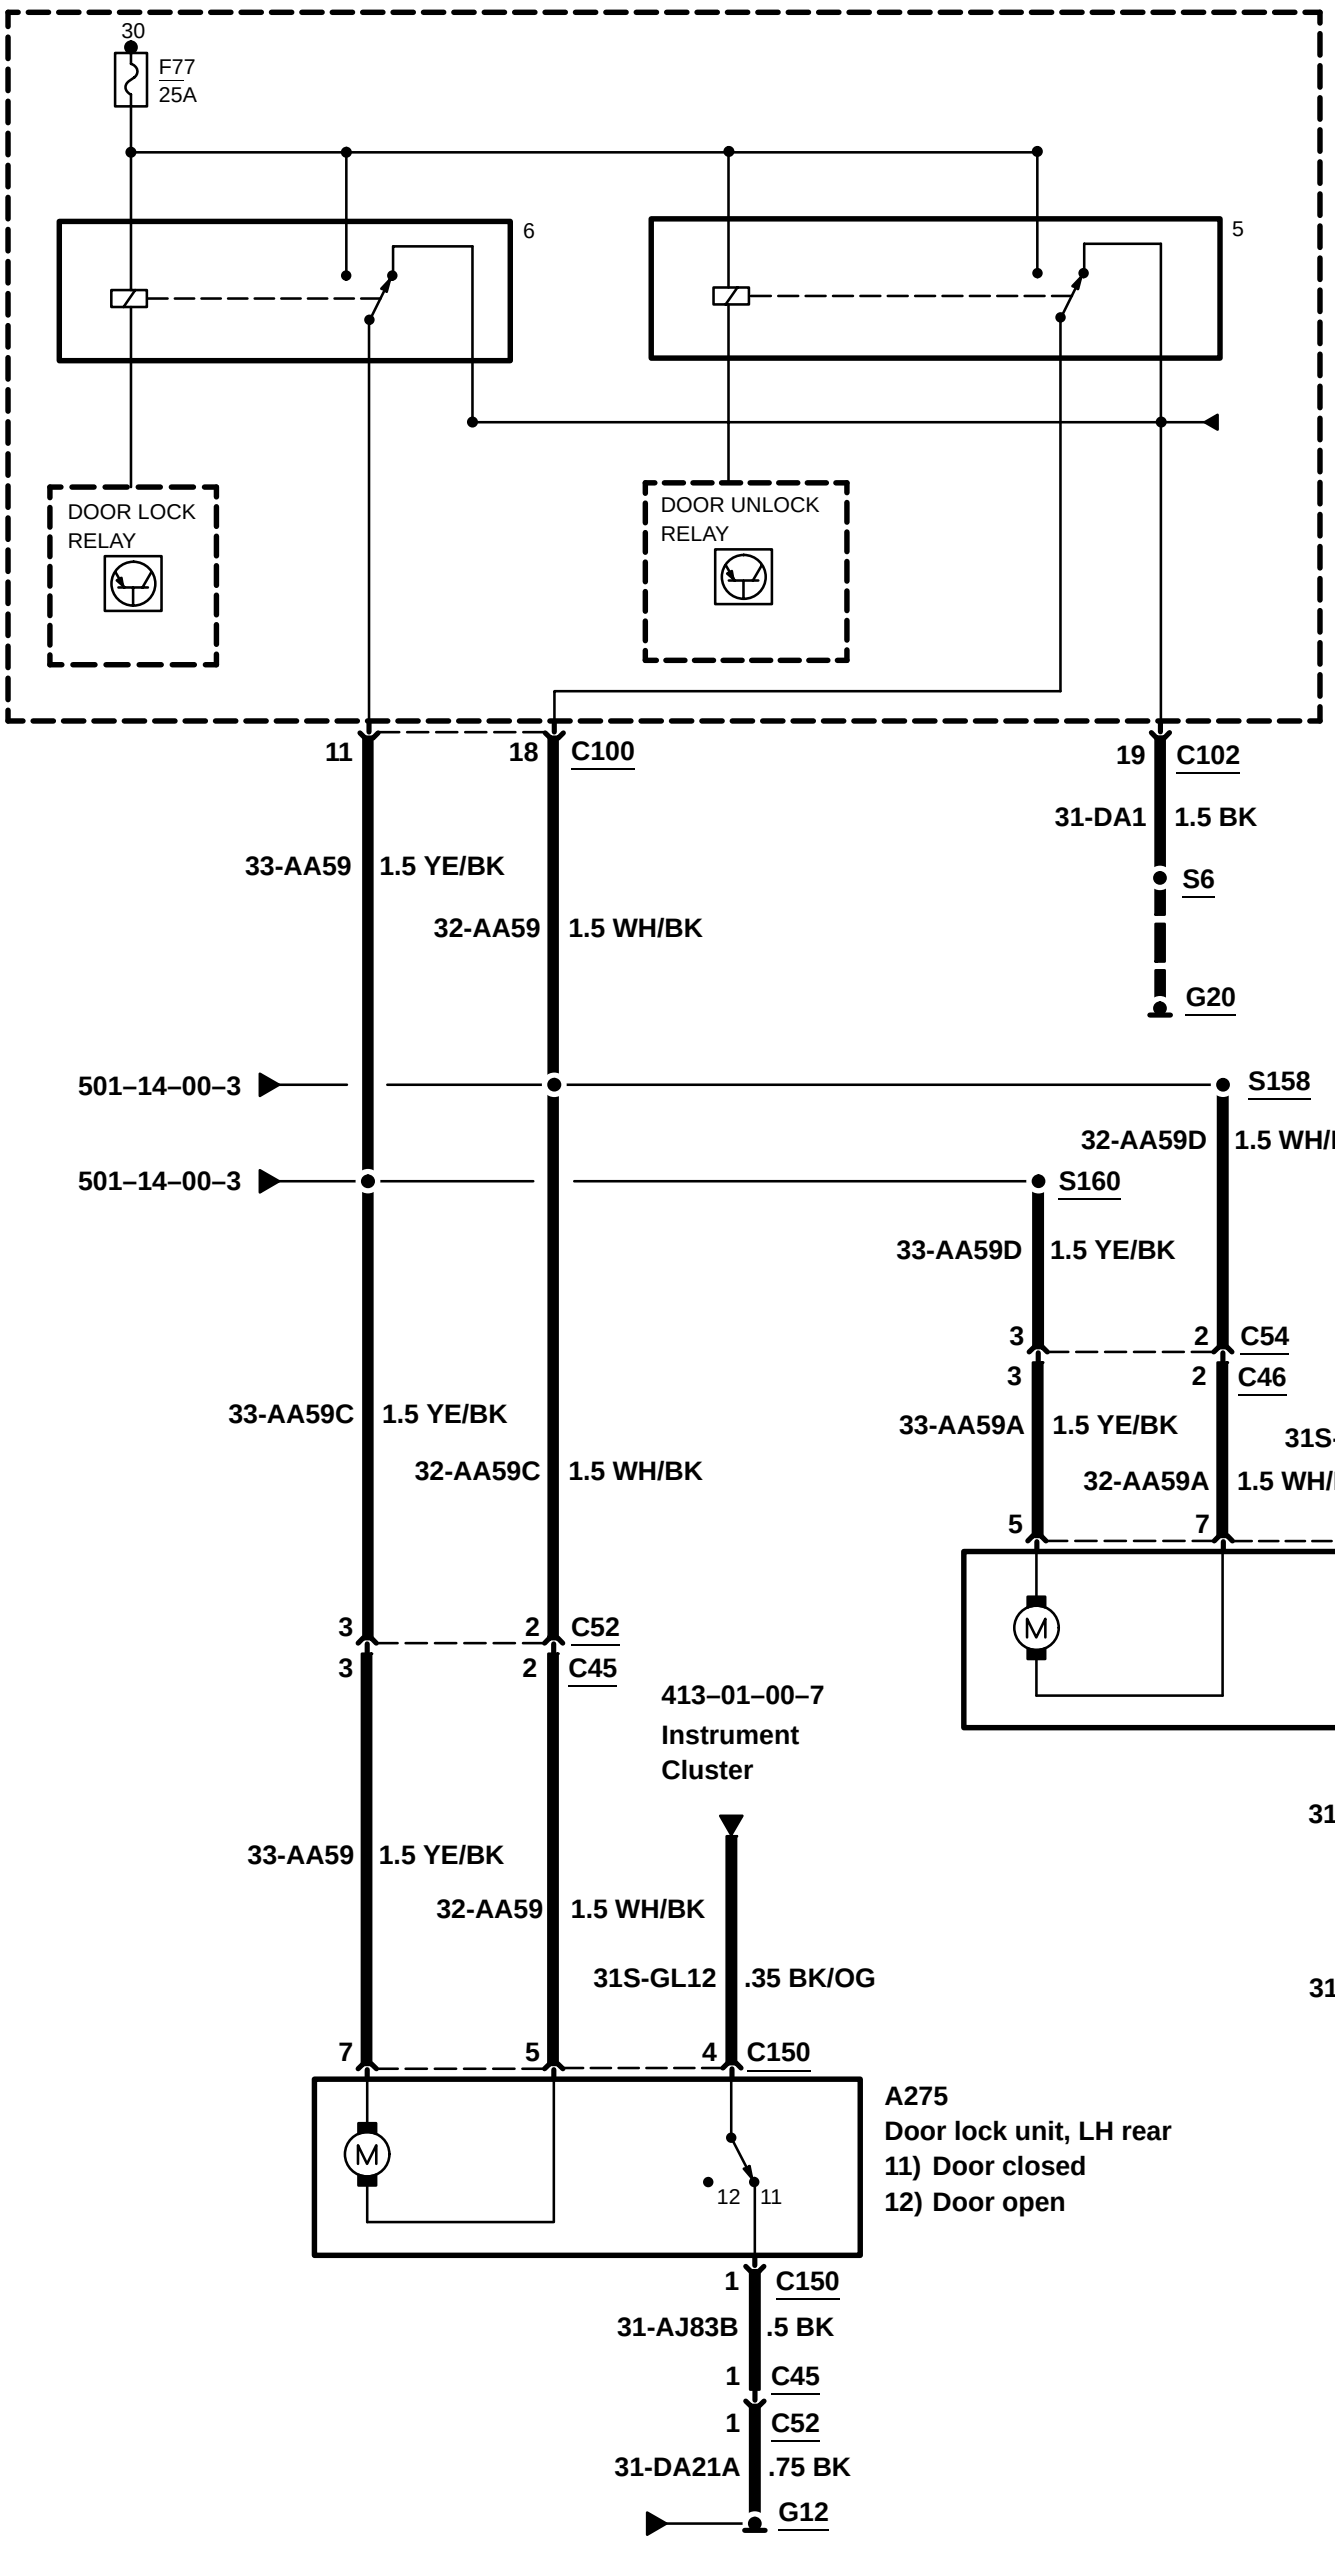


P91
Central Junction Box (CJB)
5) Door unlock relay
6) Door lock relay


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front power windows

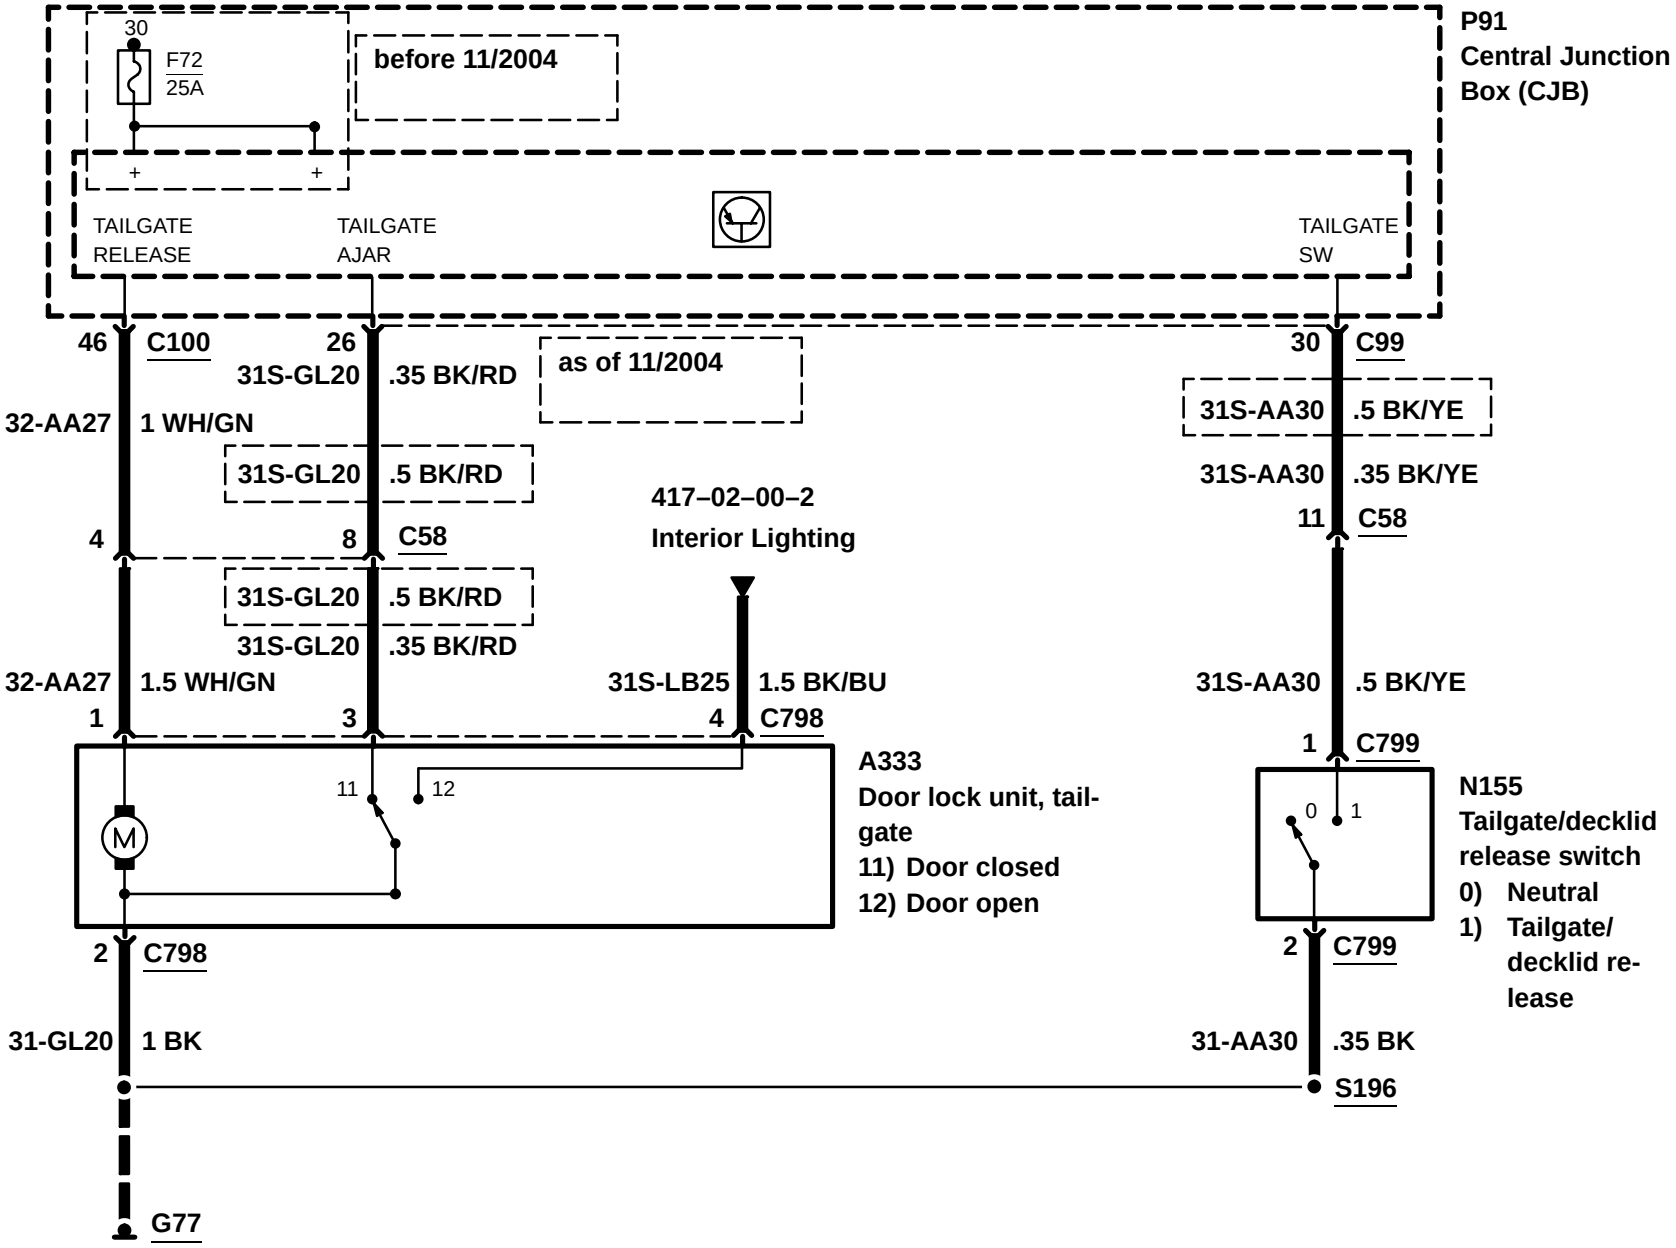

Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows

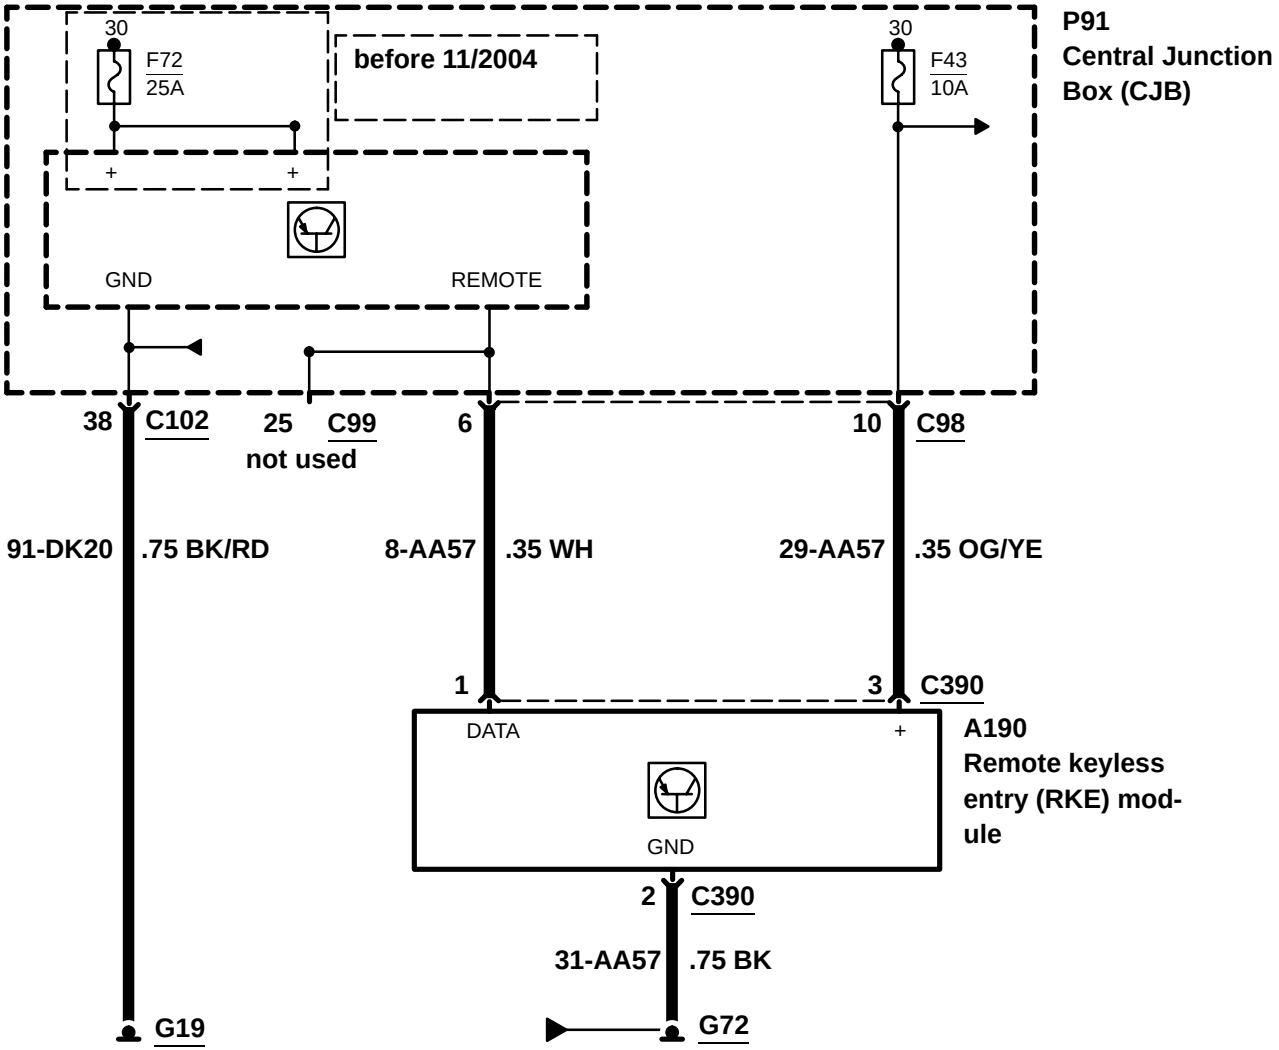


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows

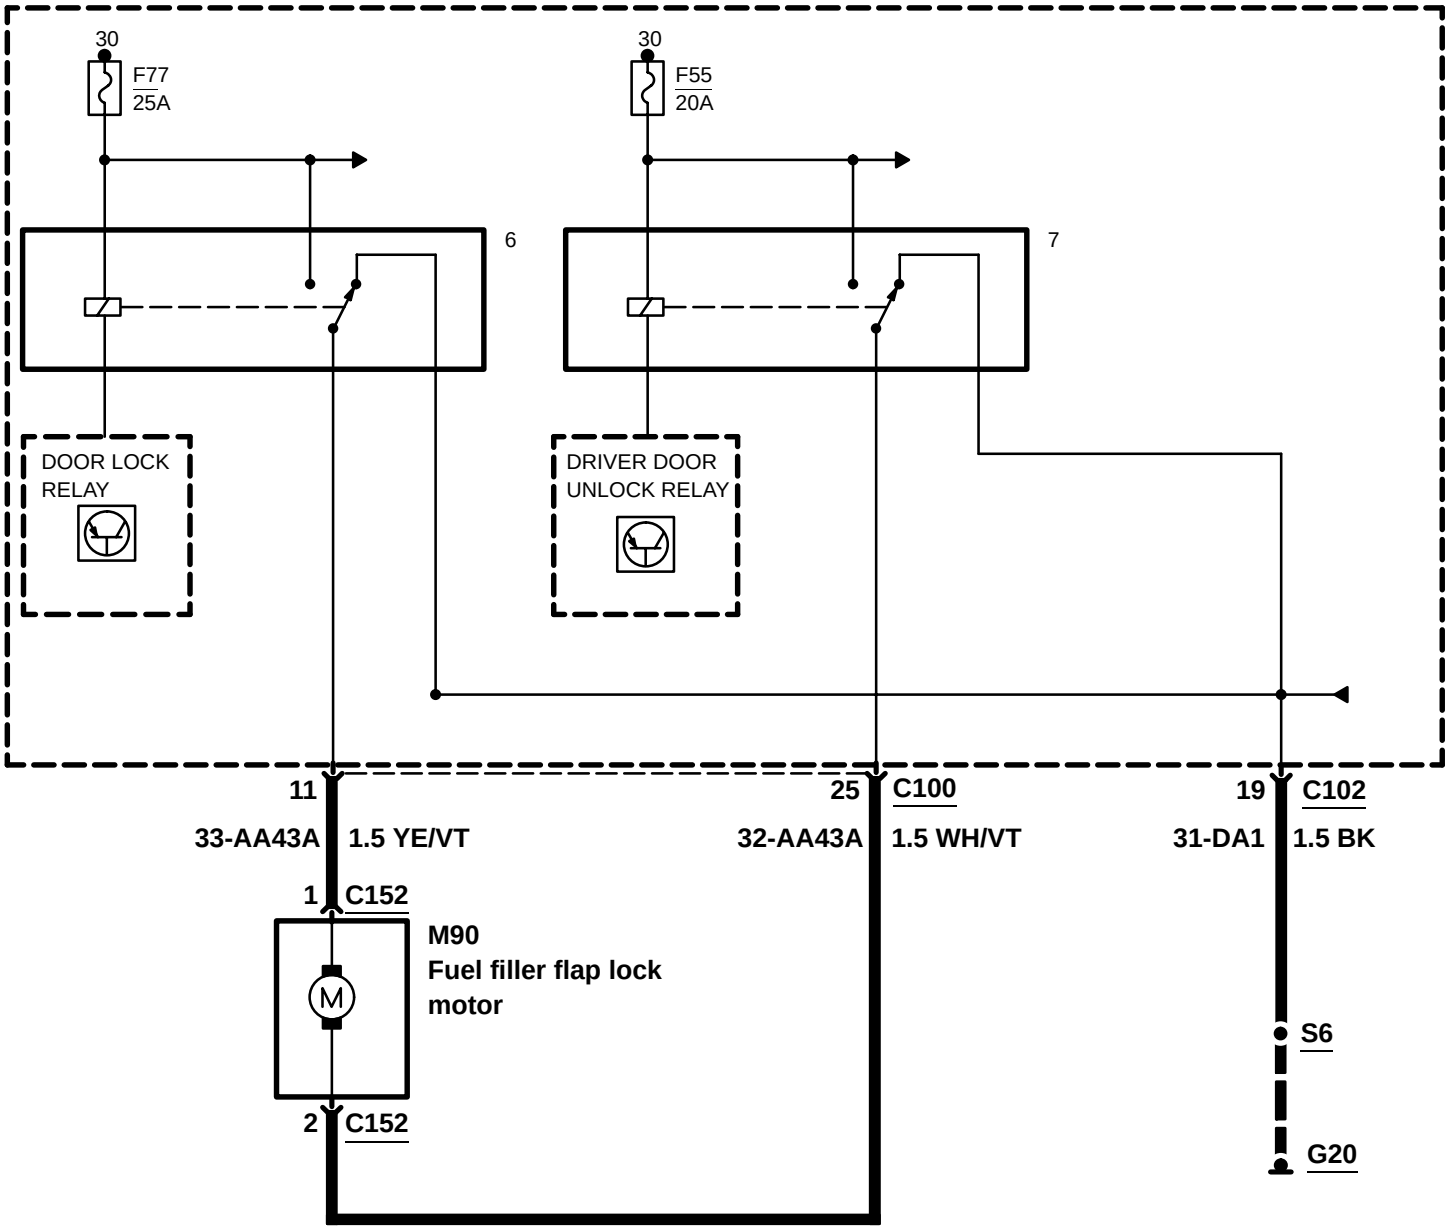


P91
Central Junction Box (CJB)
6) Door lock relay
7) Driver door unlock relay


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows

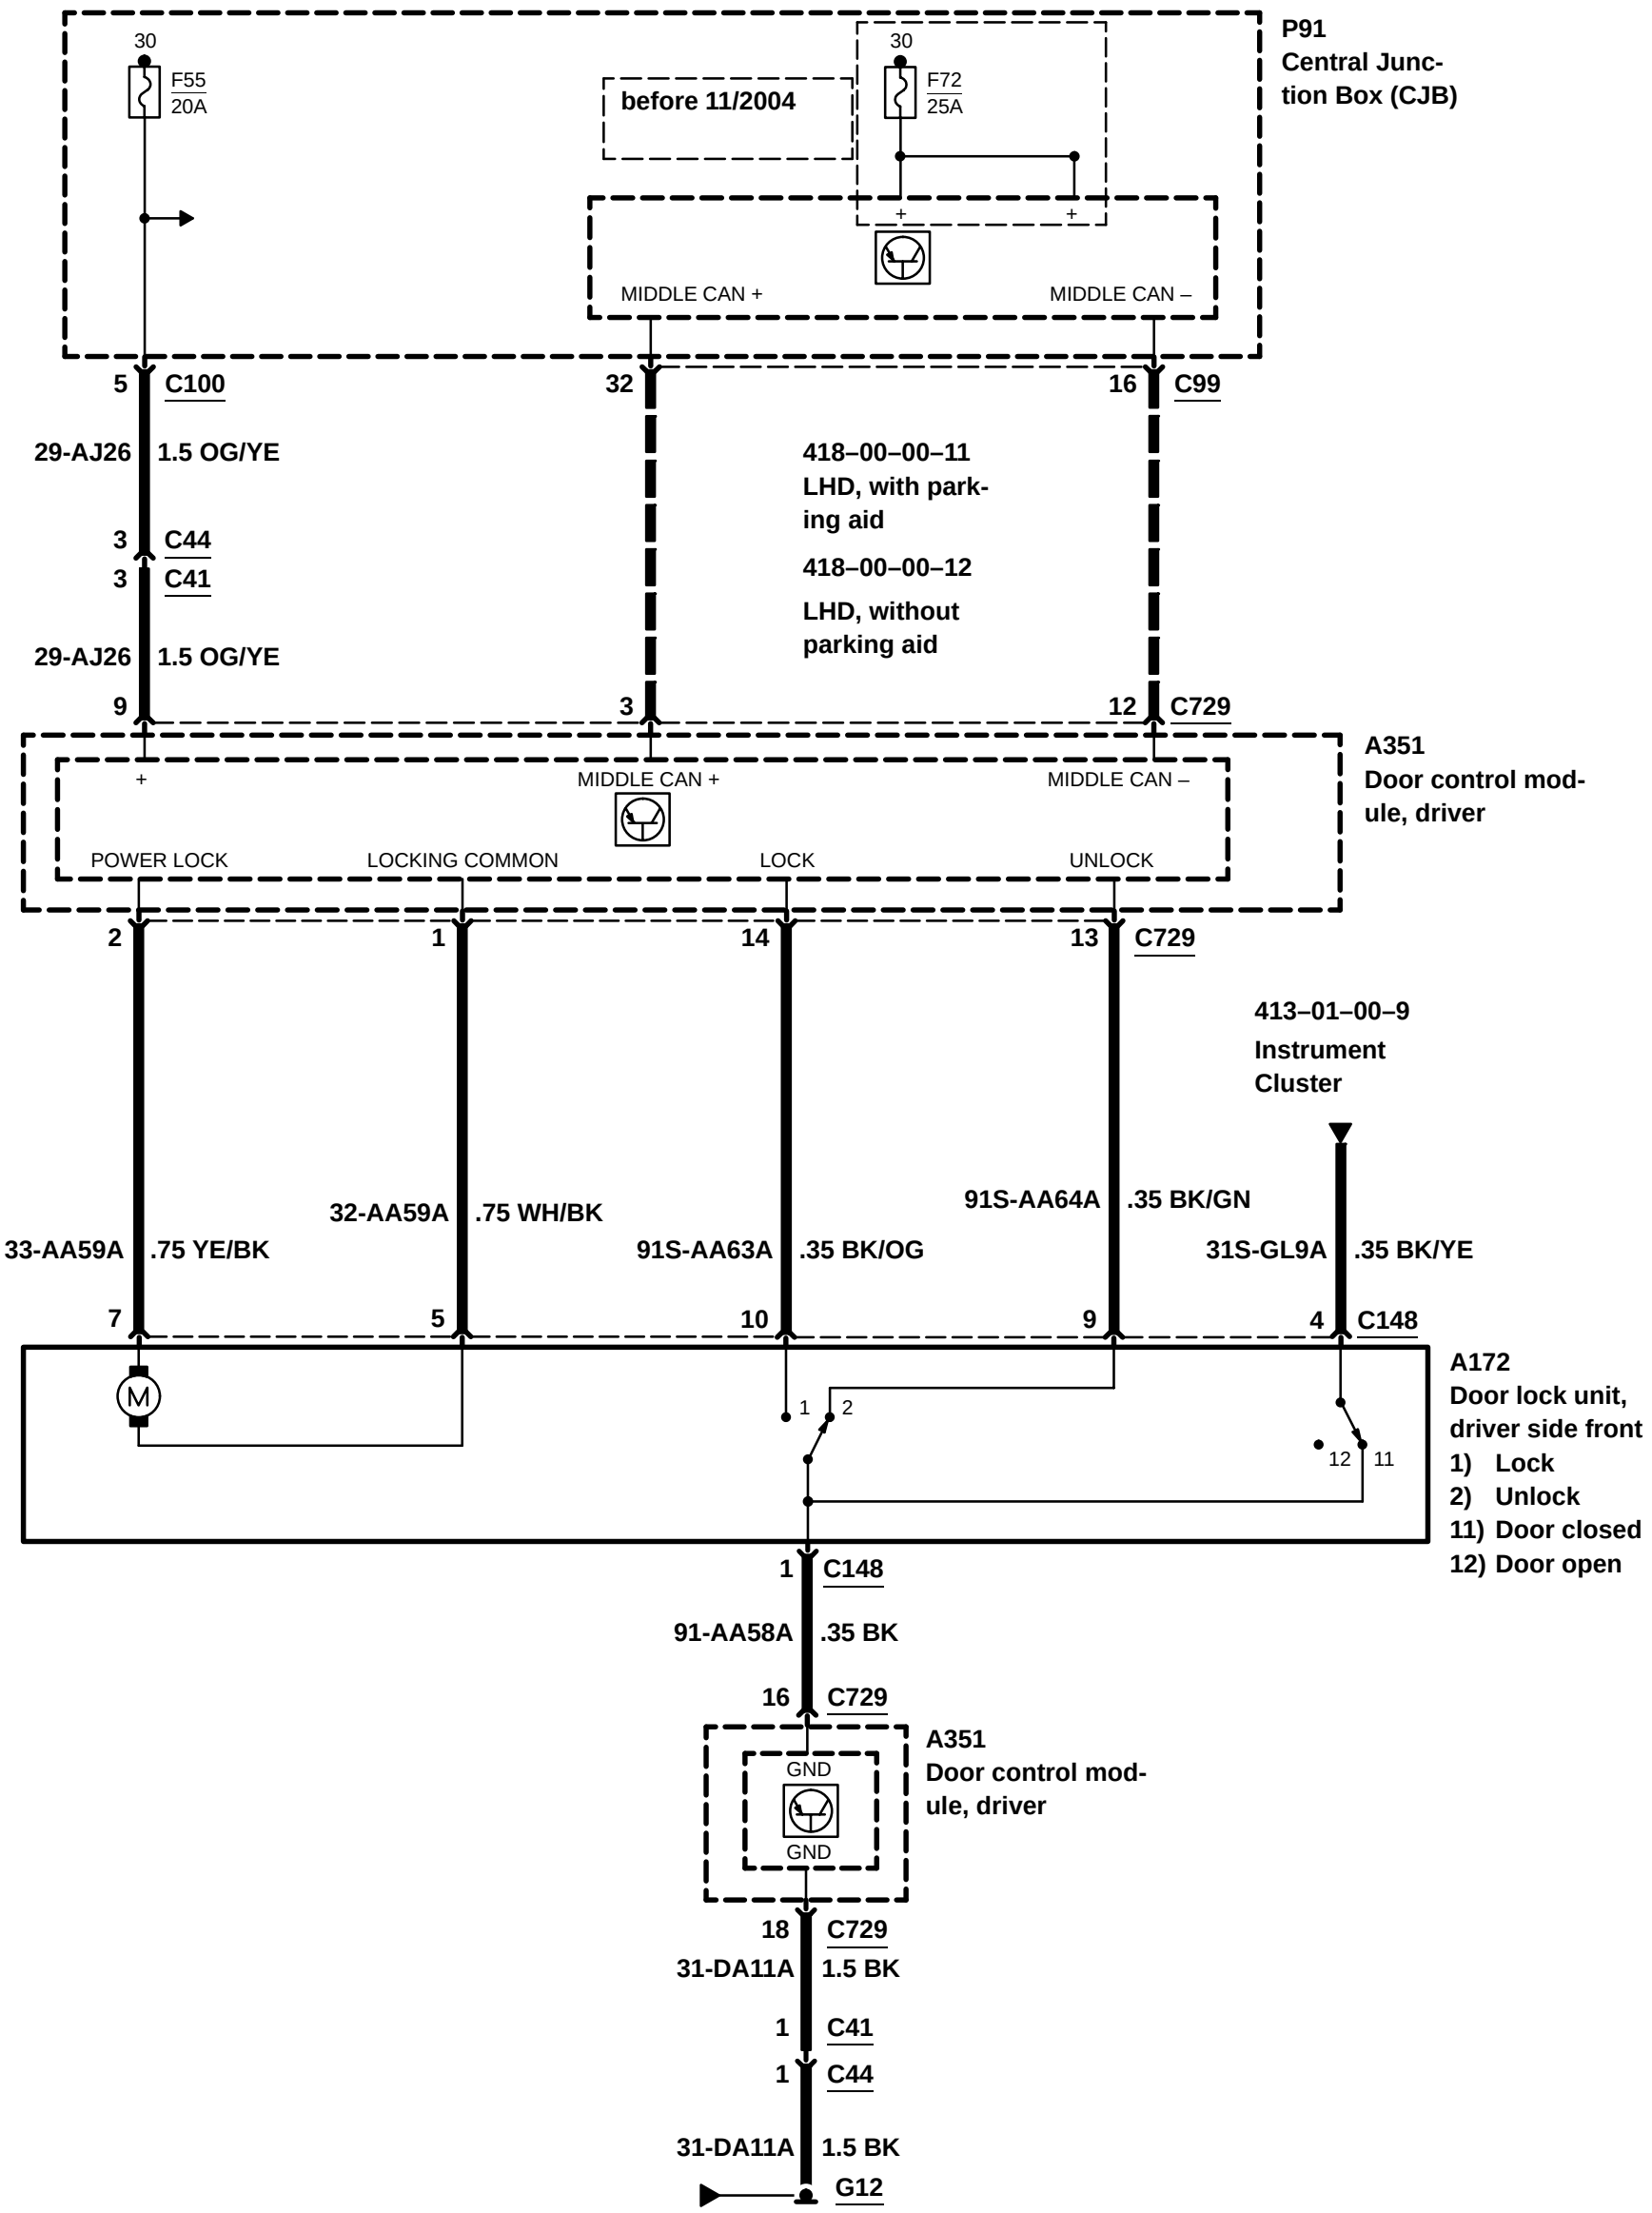


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows

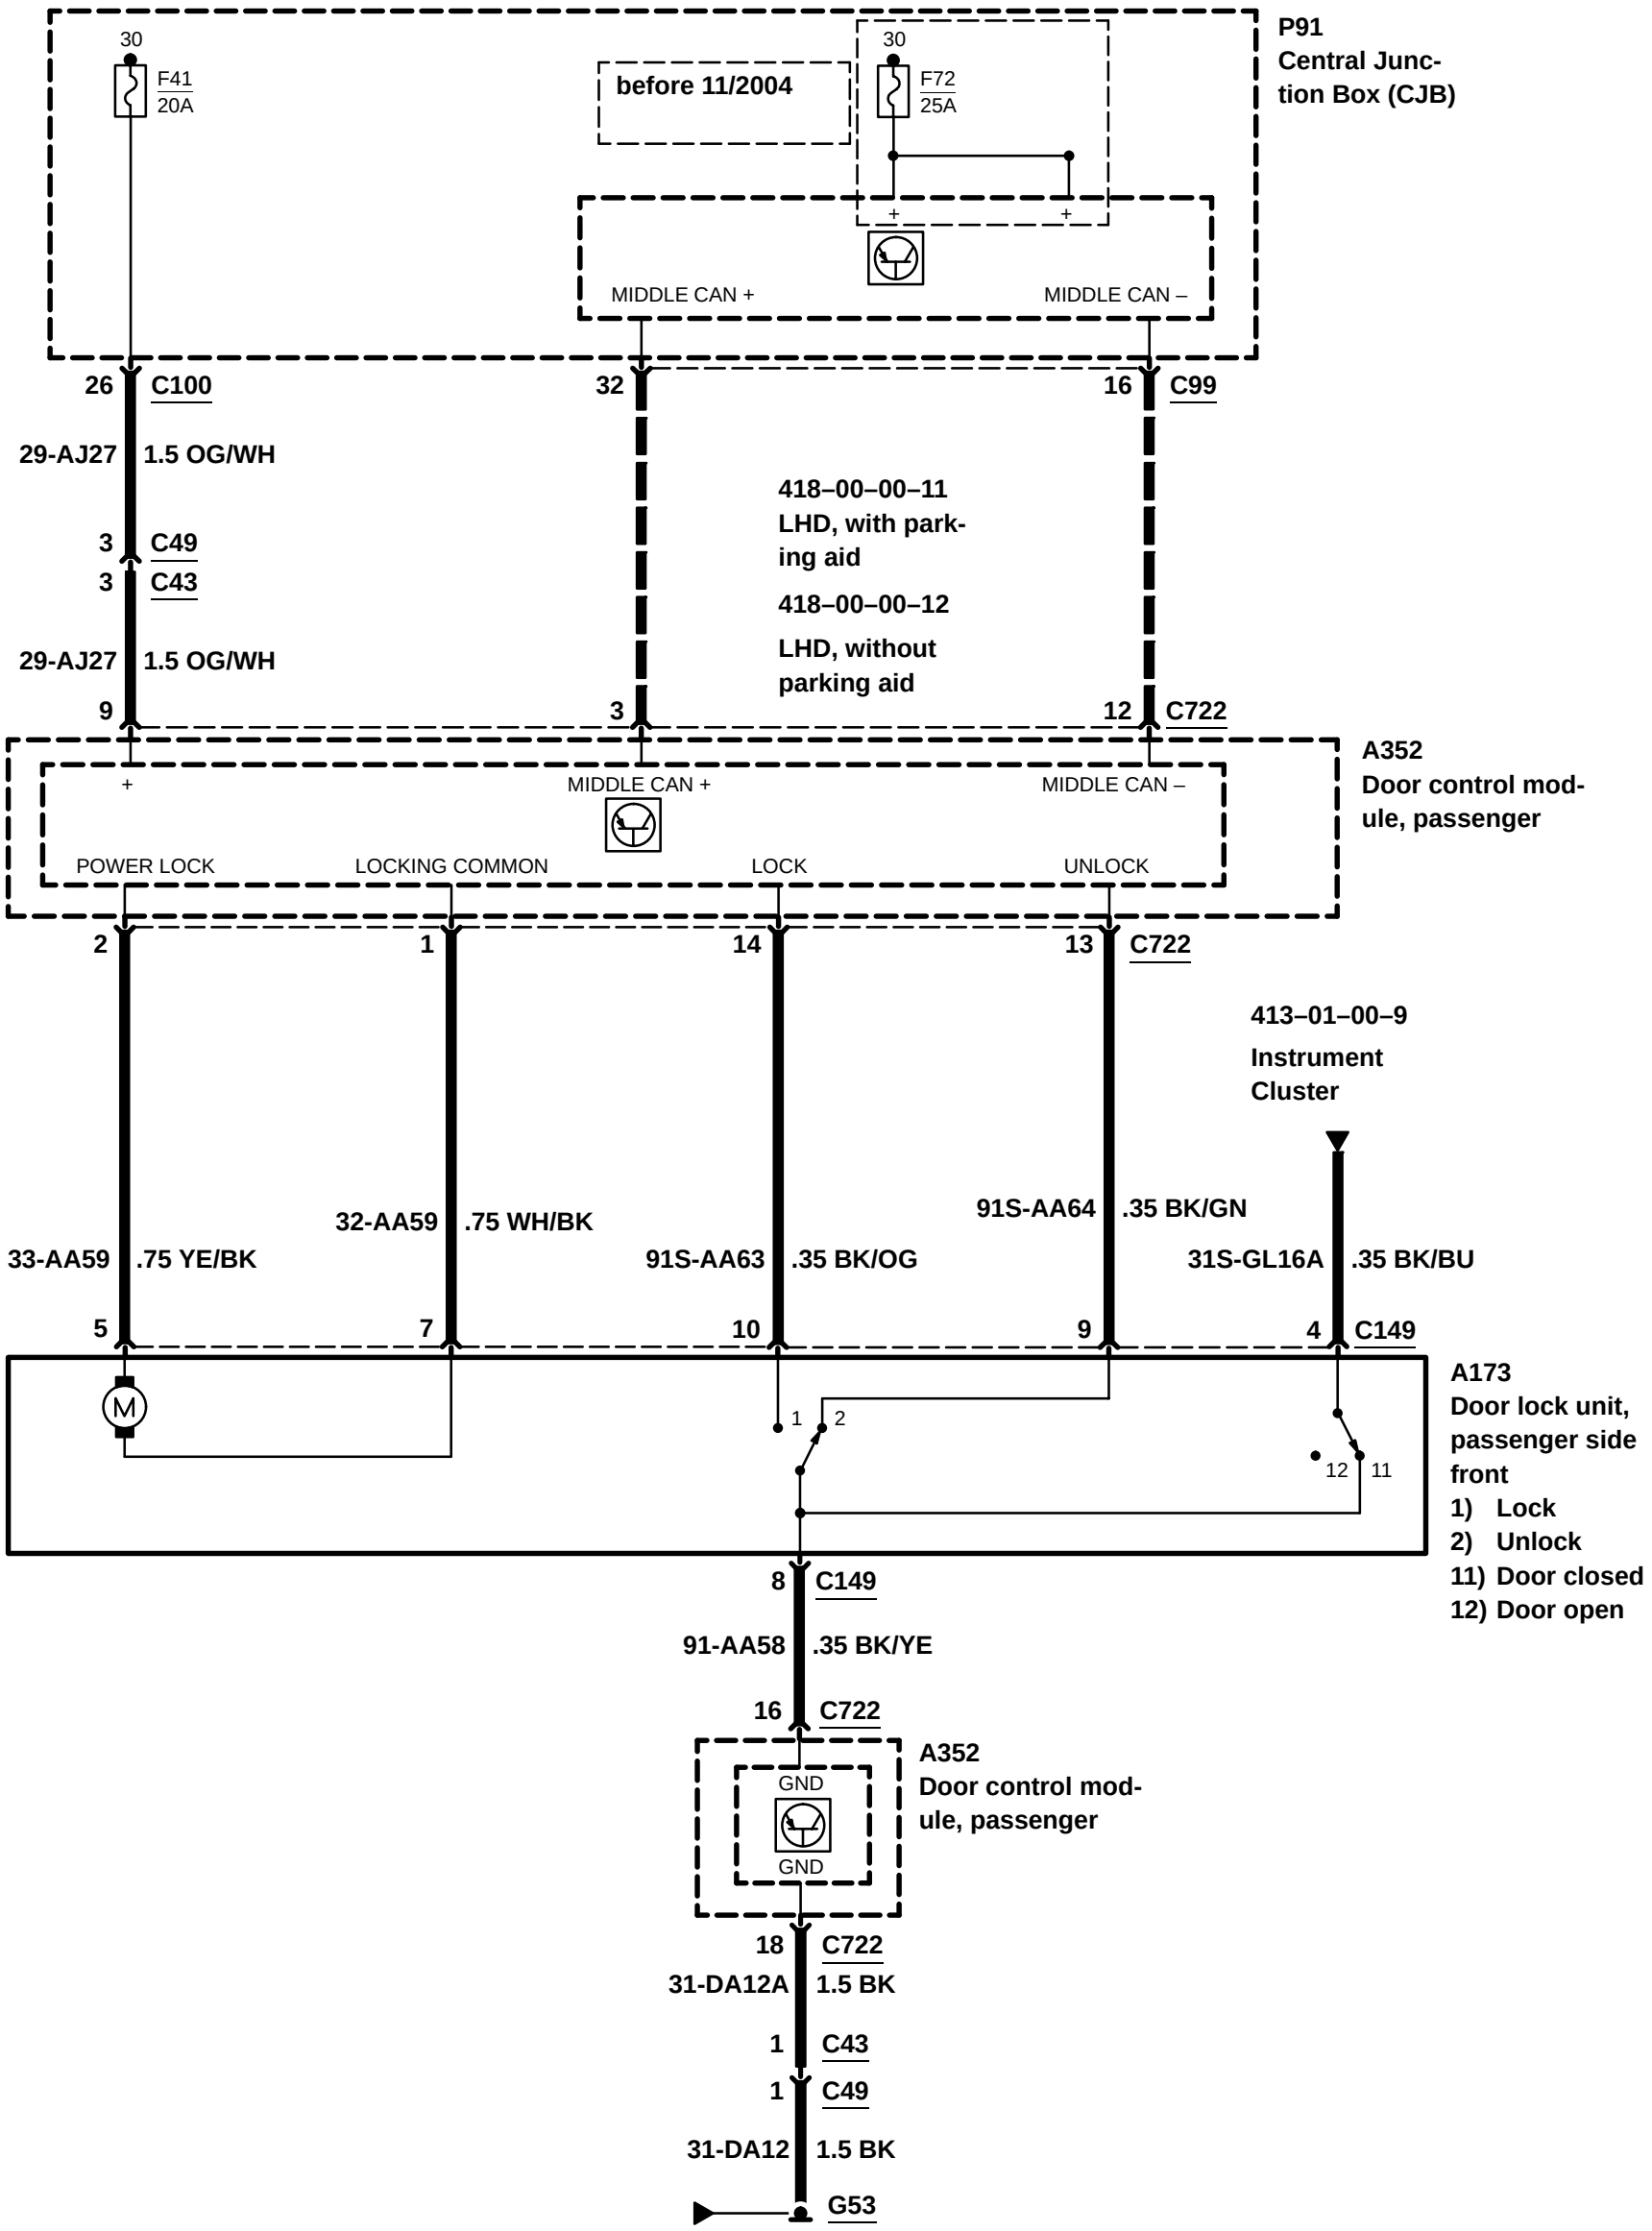


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows

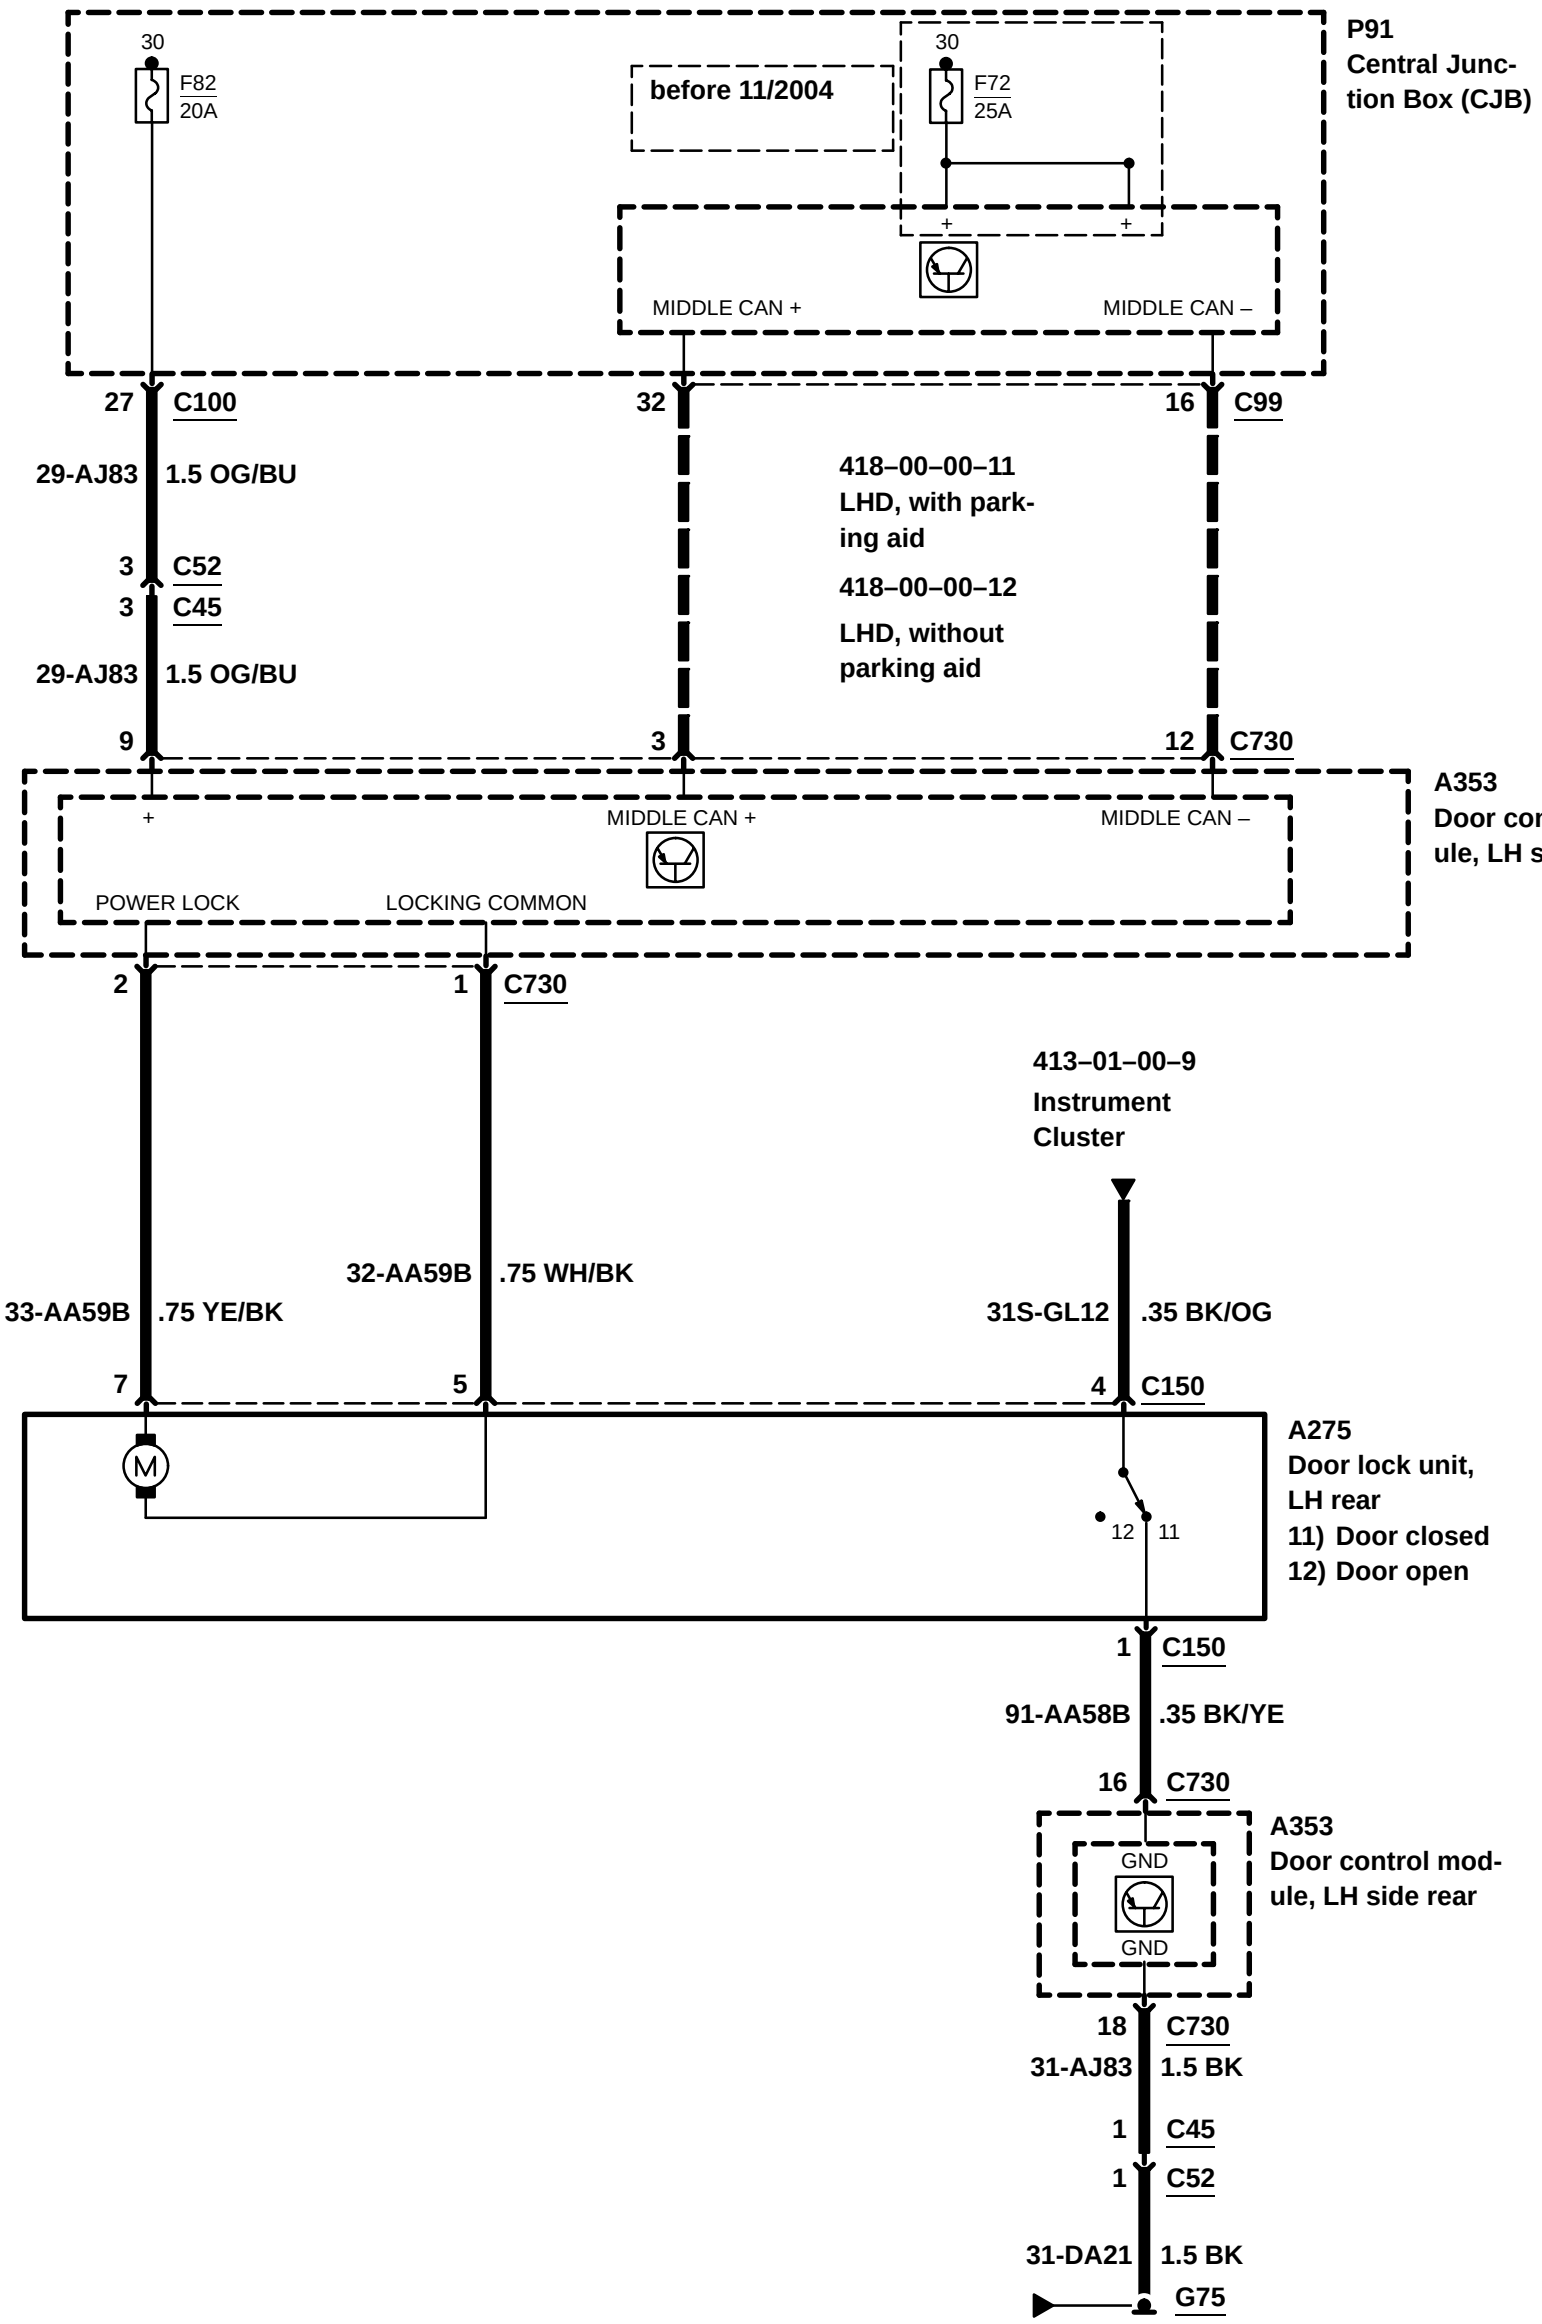


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows

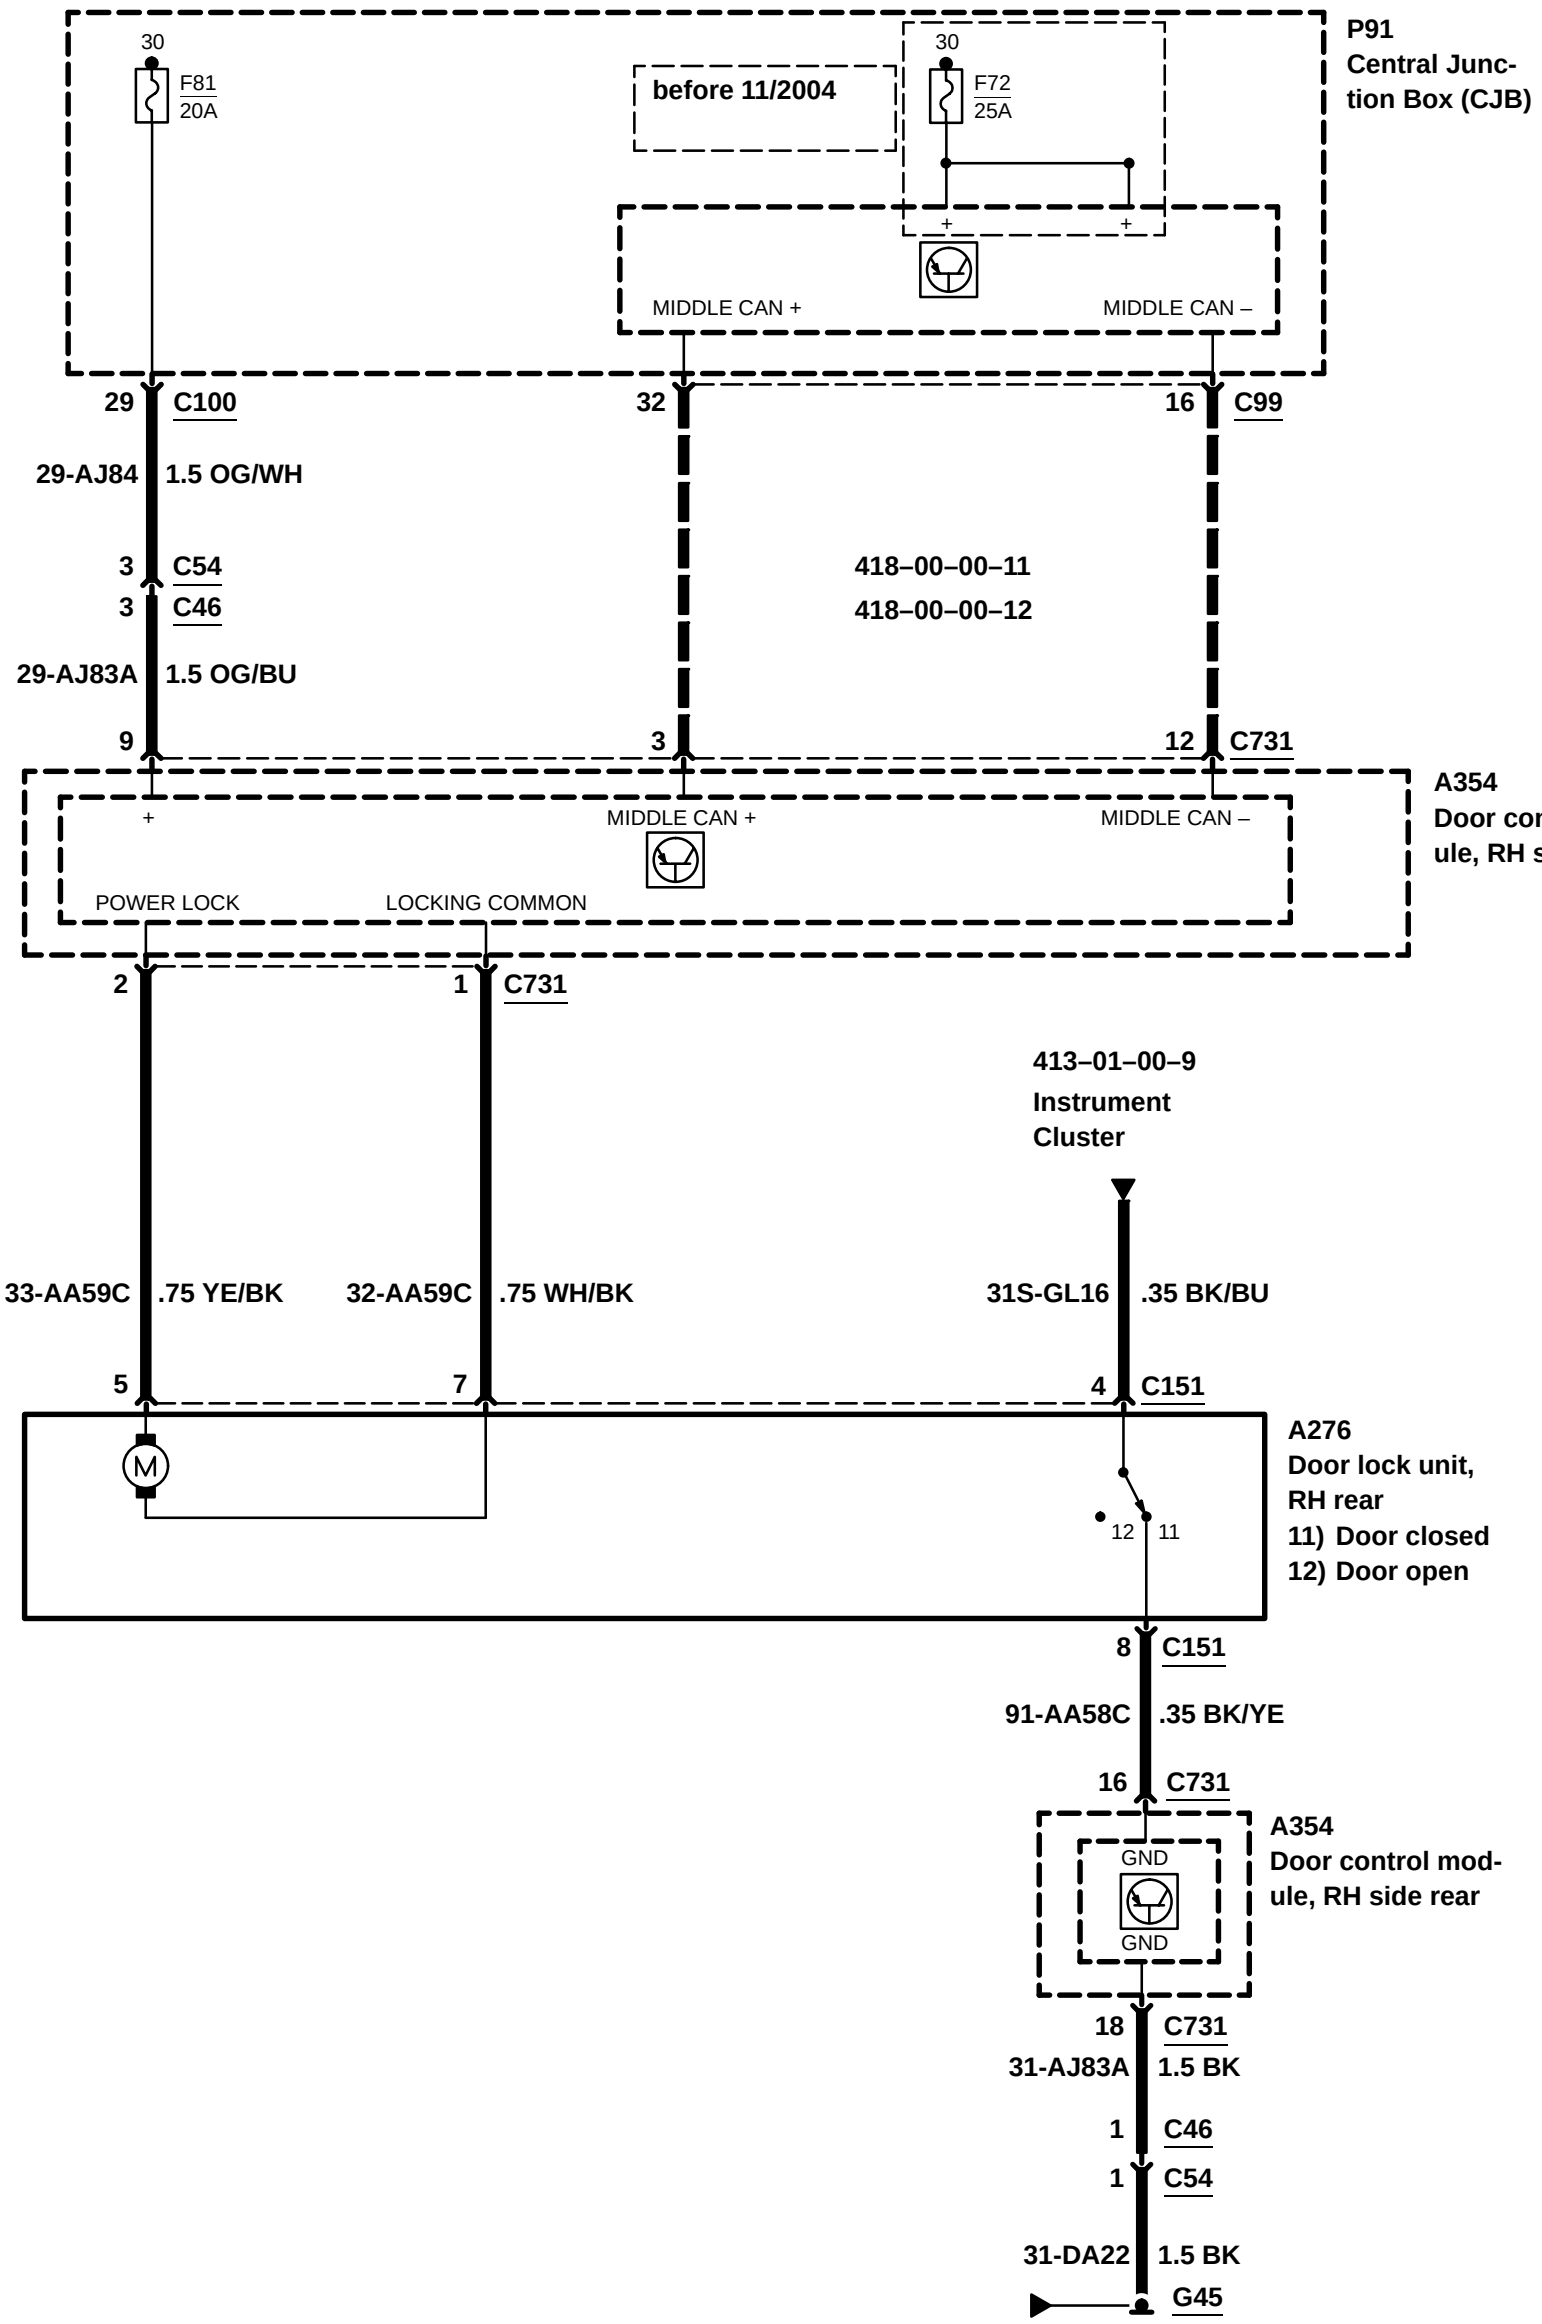


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front and rear power windows

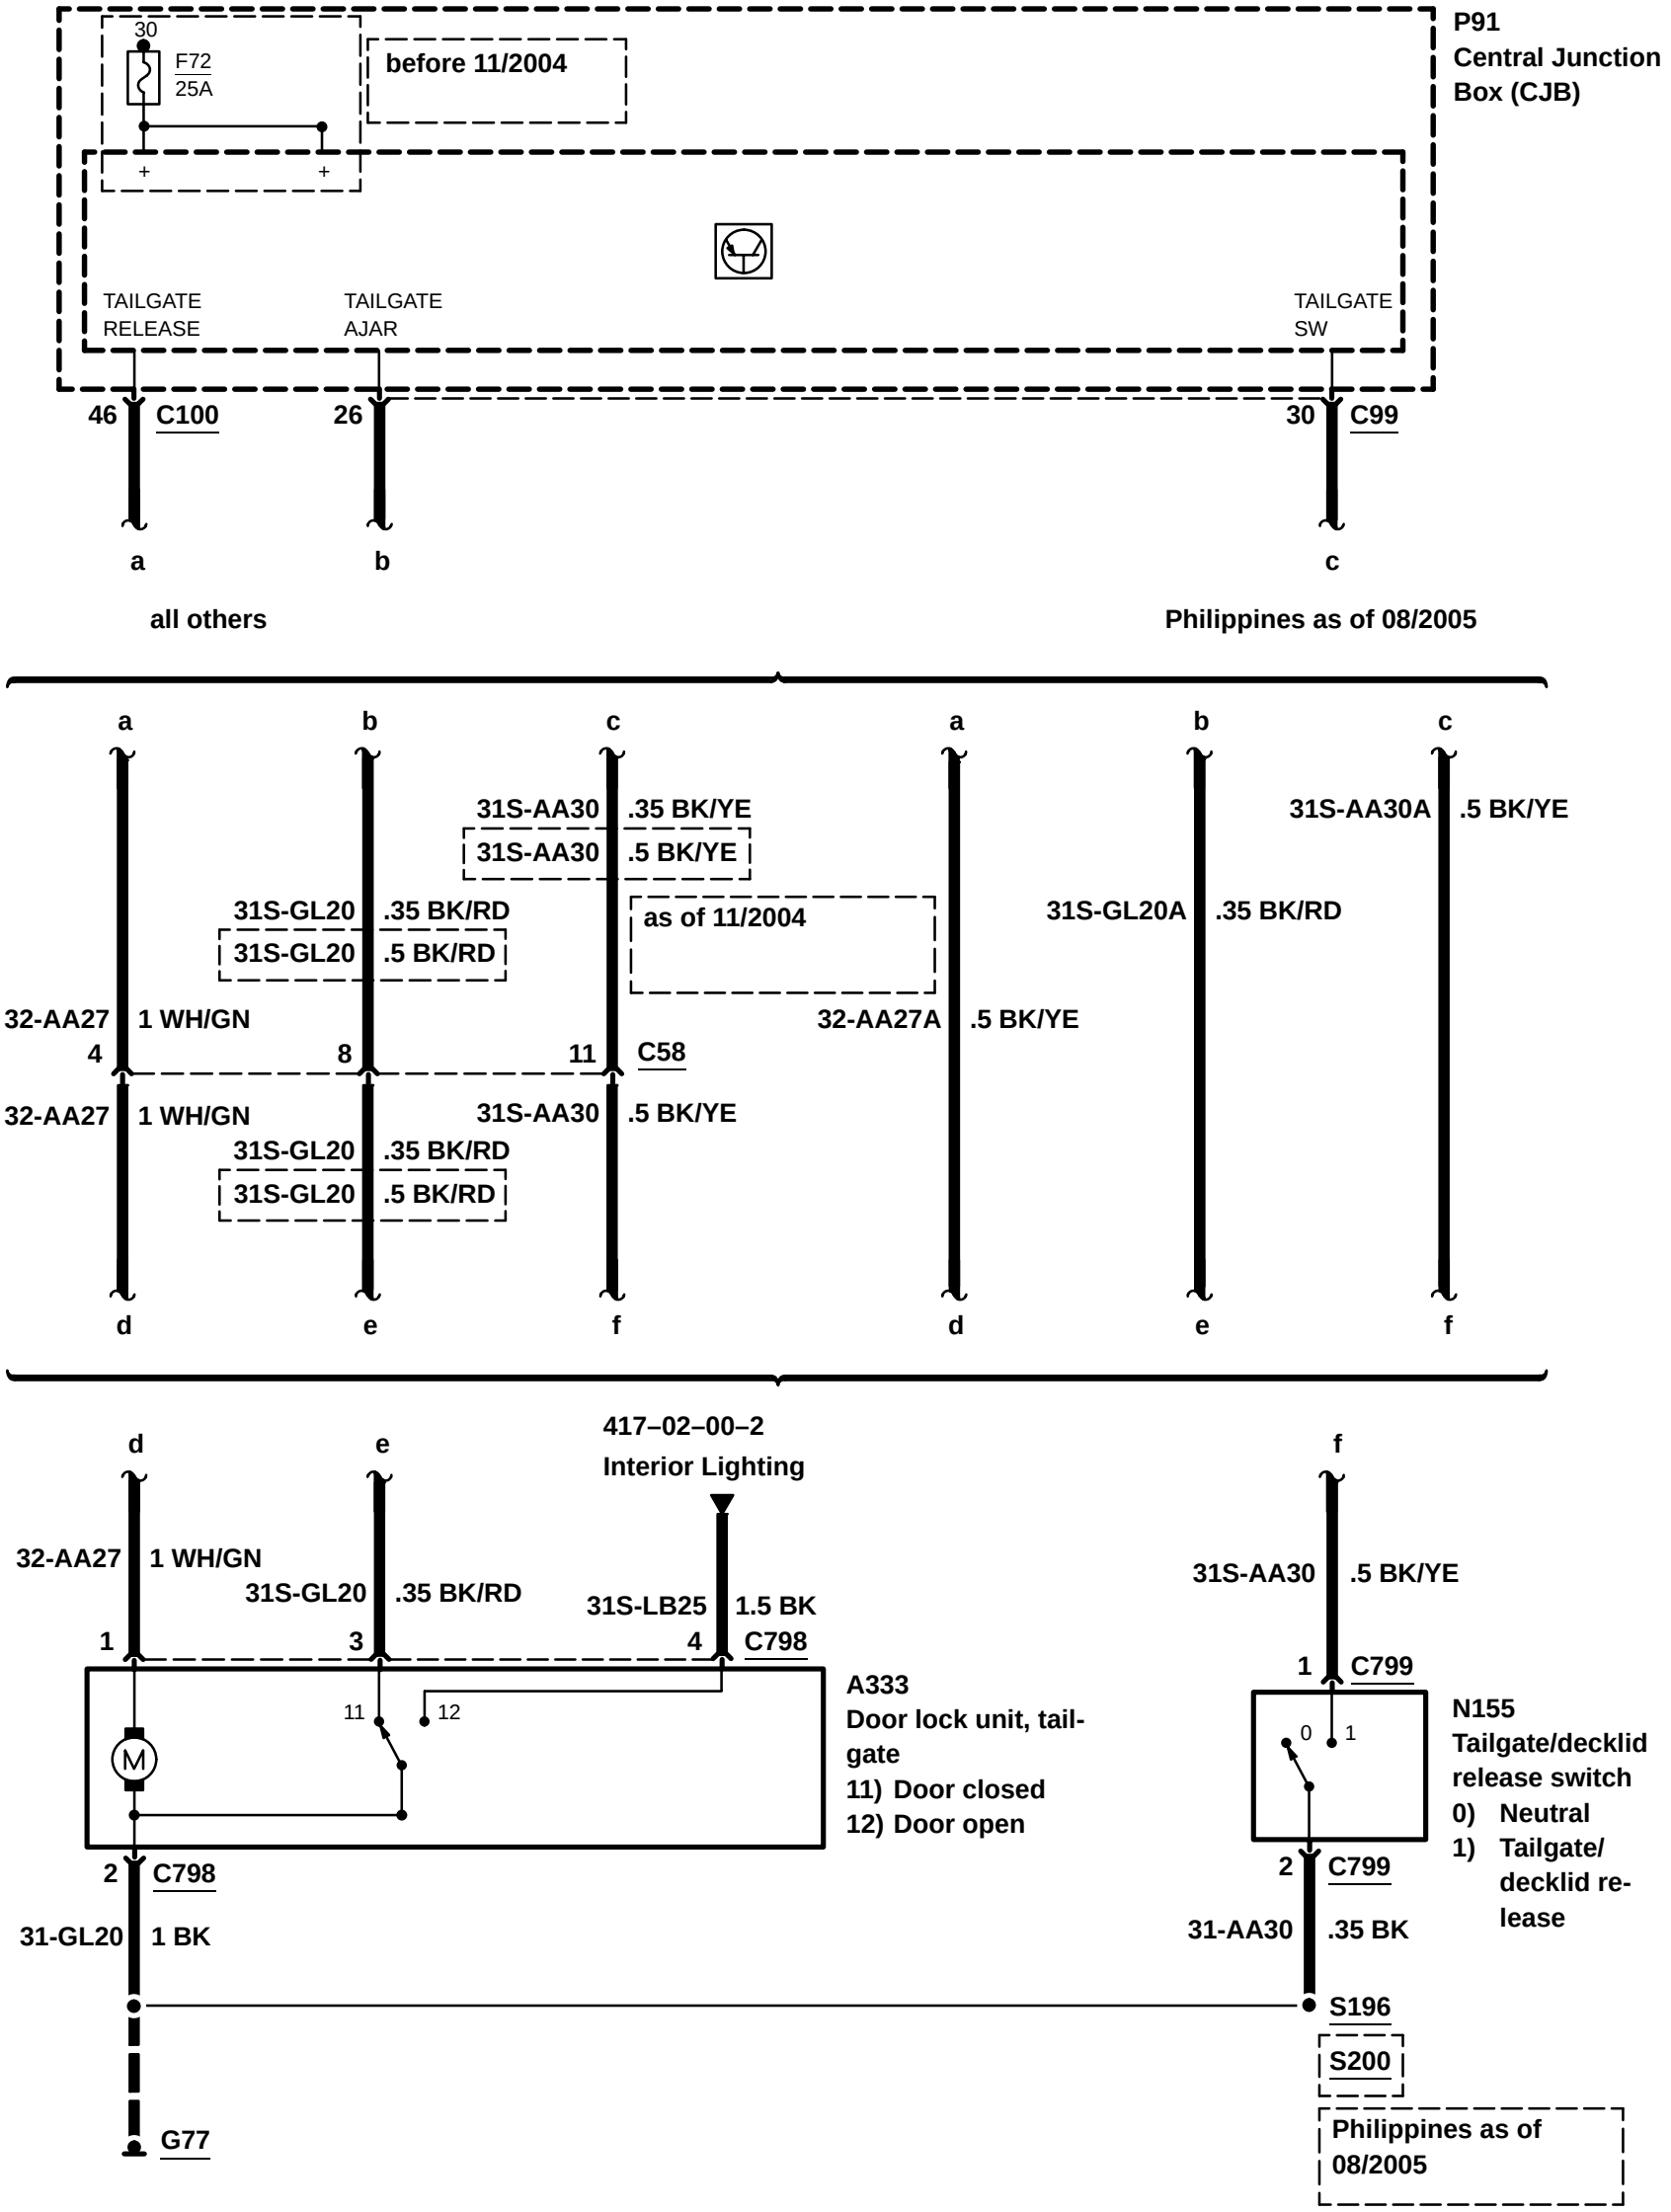

Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front power windows

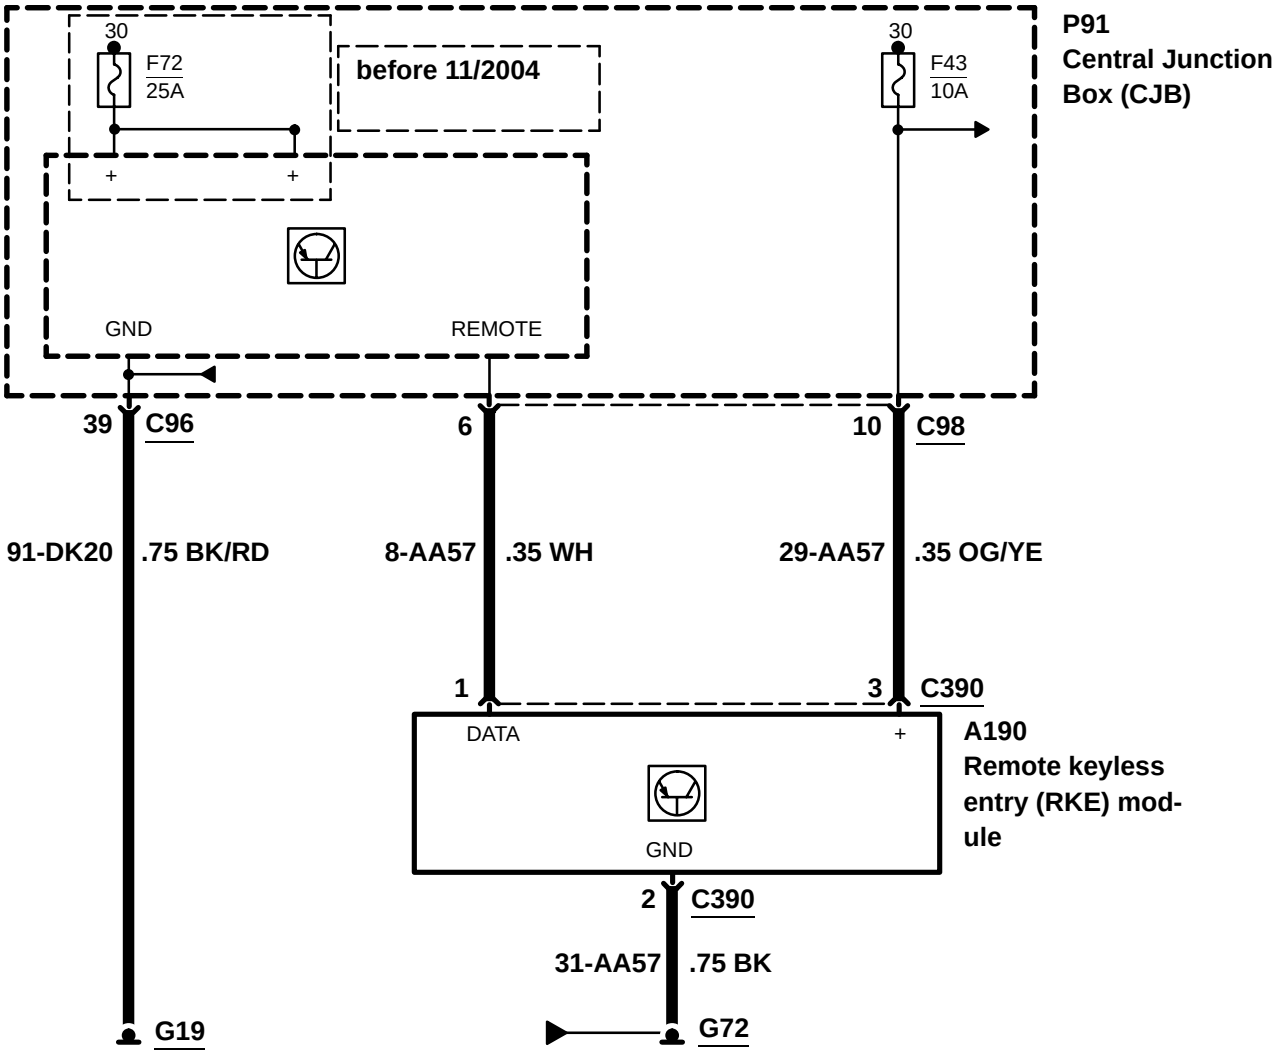


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front power windows

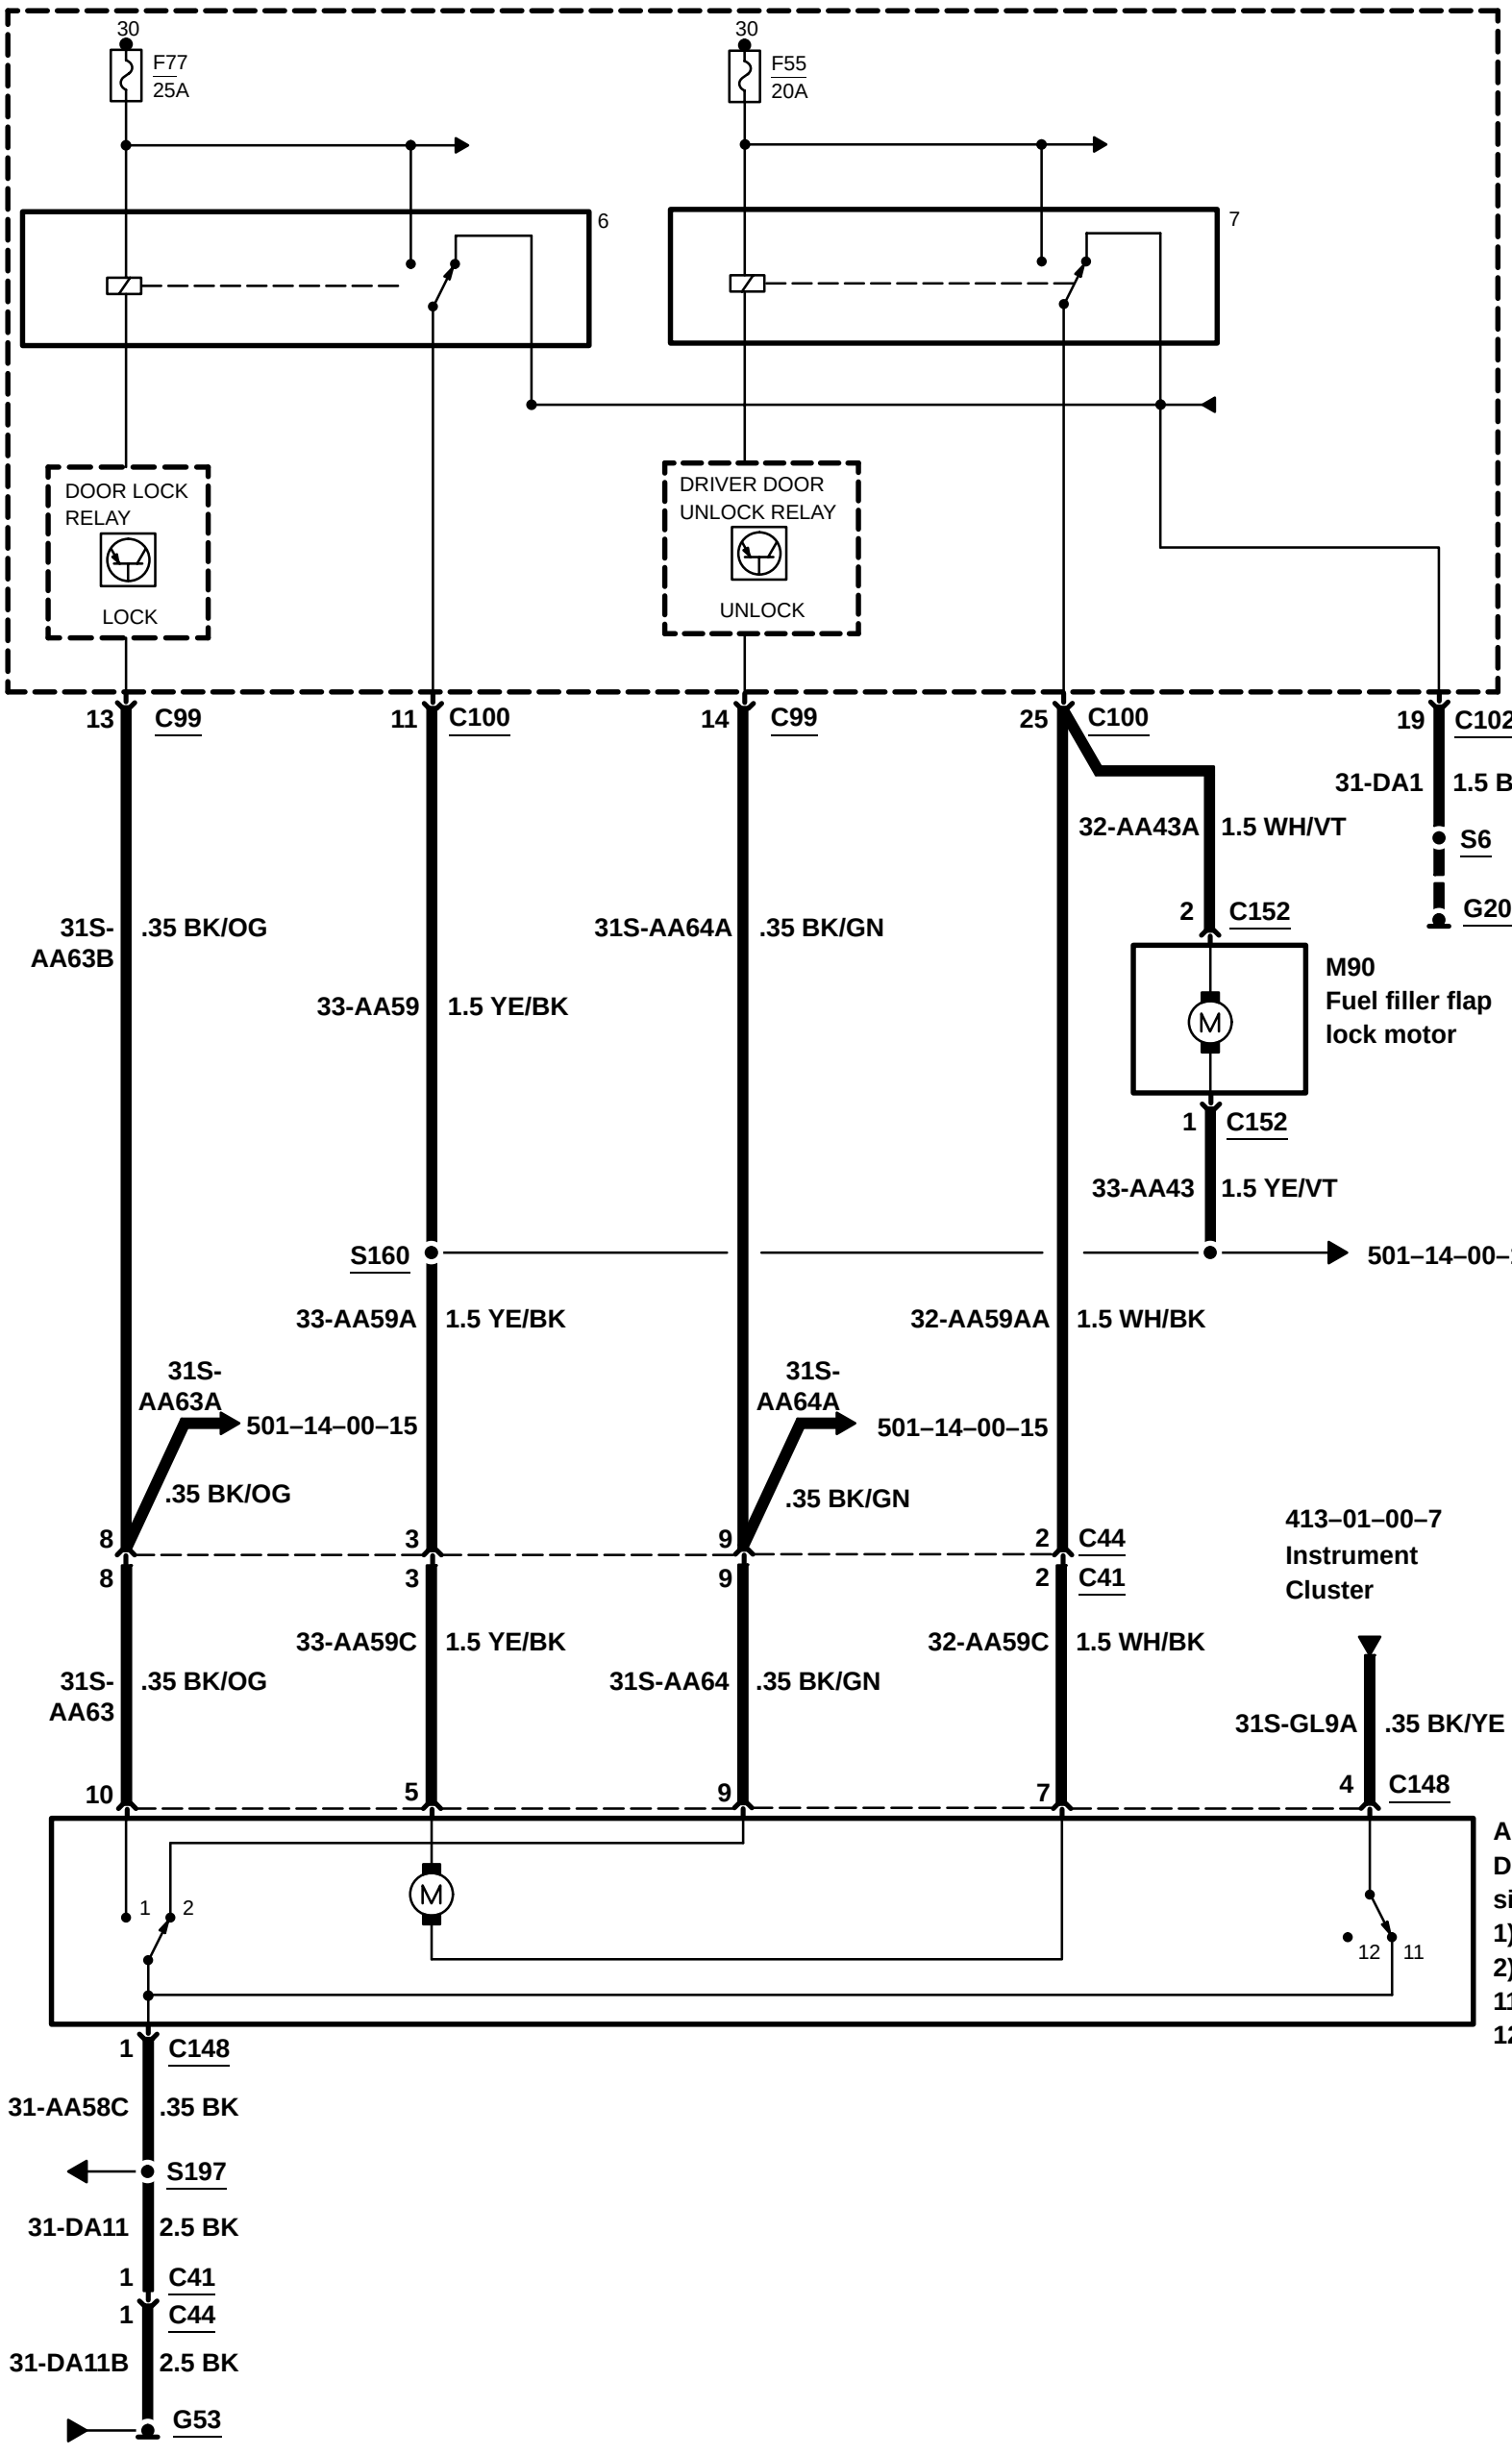


P91
Central Junction Box (CJB)
6) Door lock relay
7) Driver door unlock relay

A172
Door lock unit, driver side front
1) Lock
2) Unlock
11) Door closed
12) Door open

Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front power windows

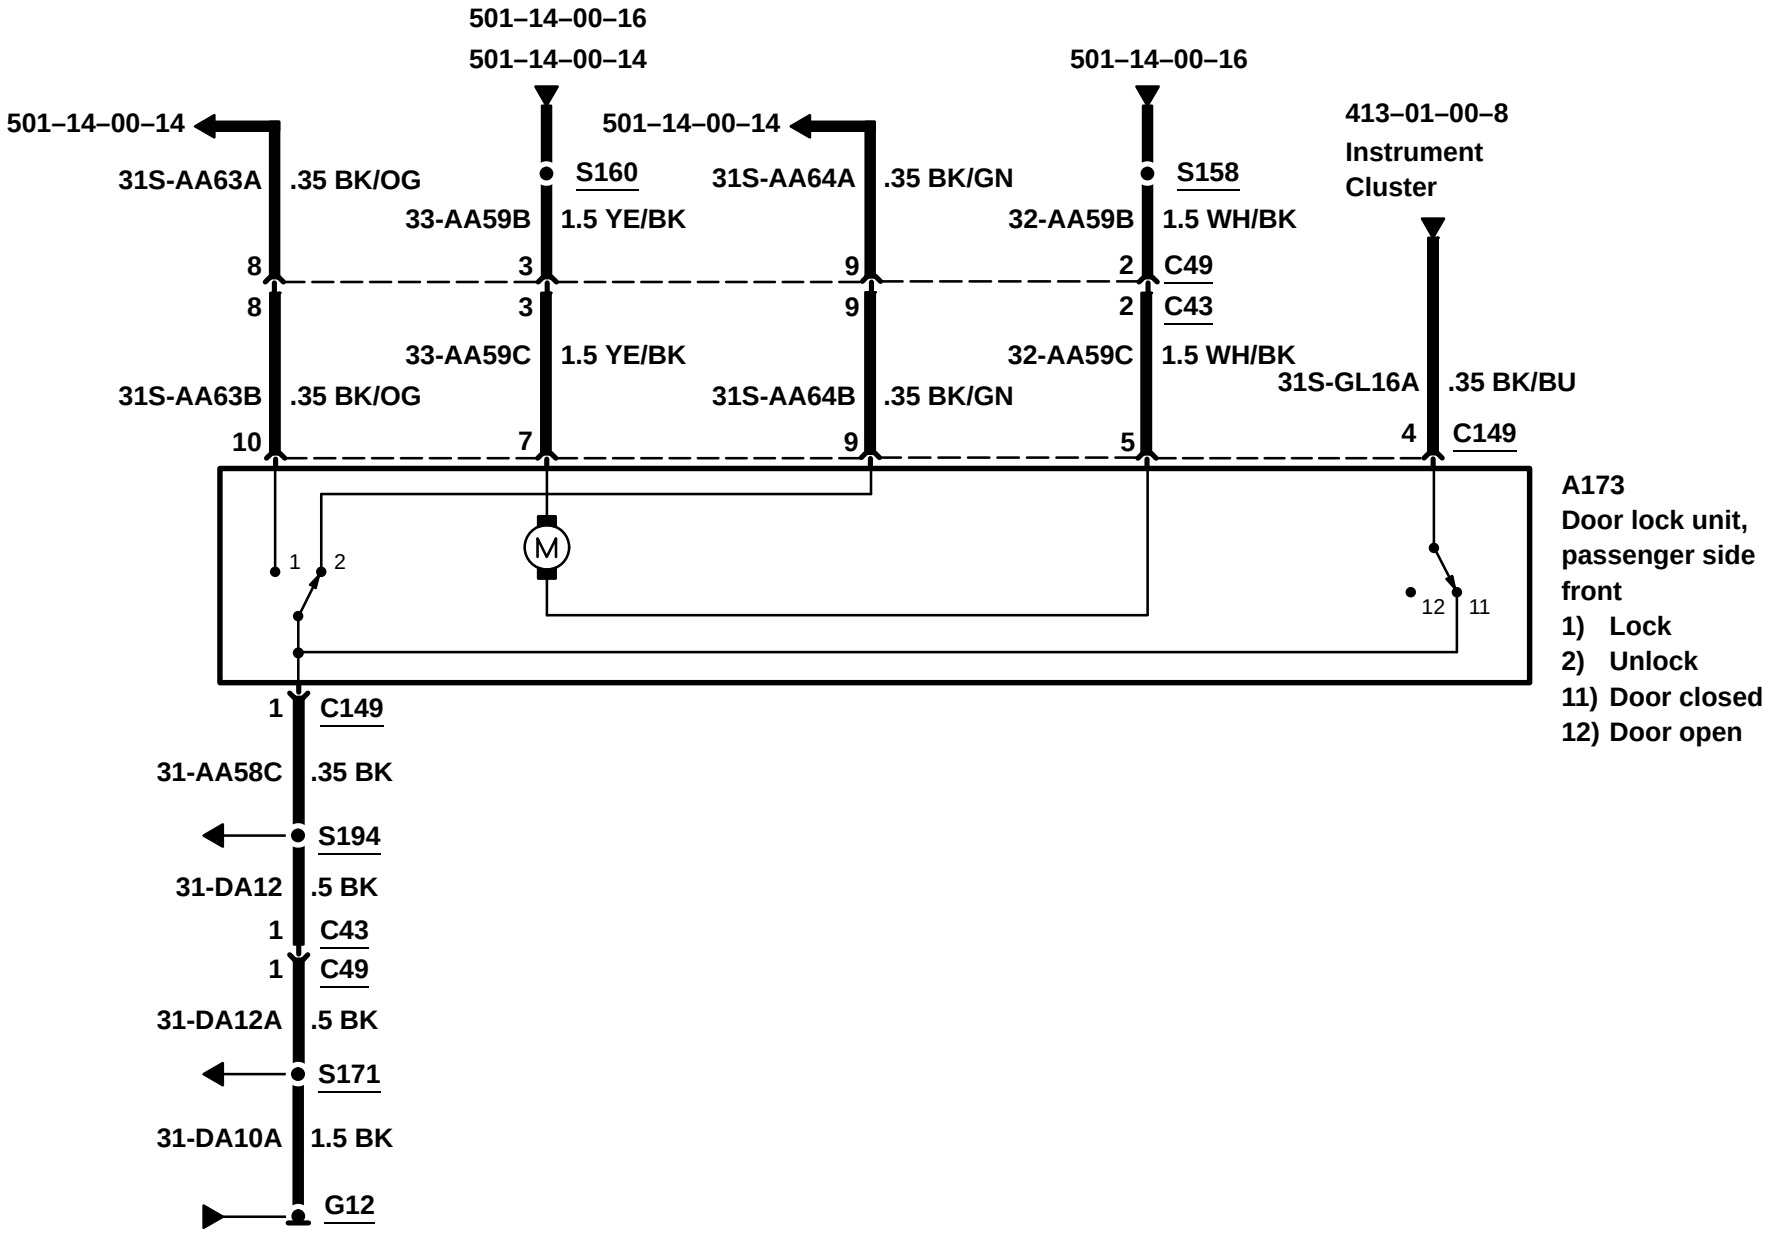


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front power windows

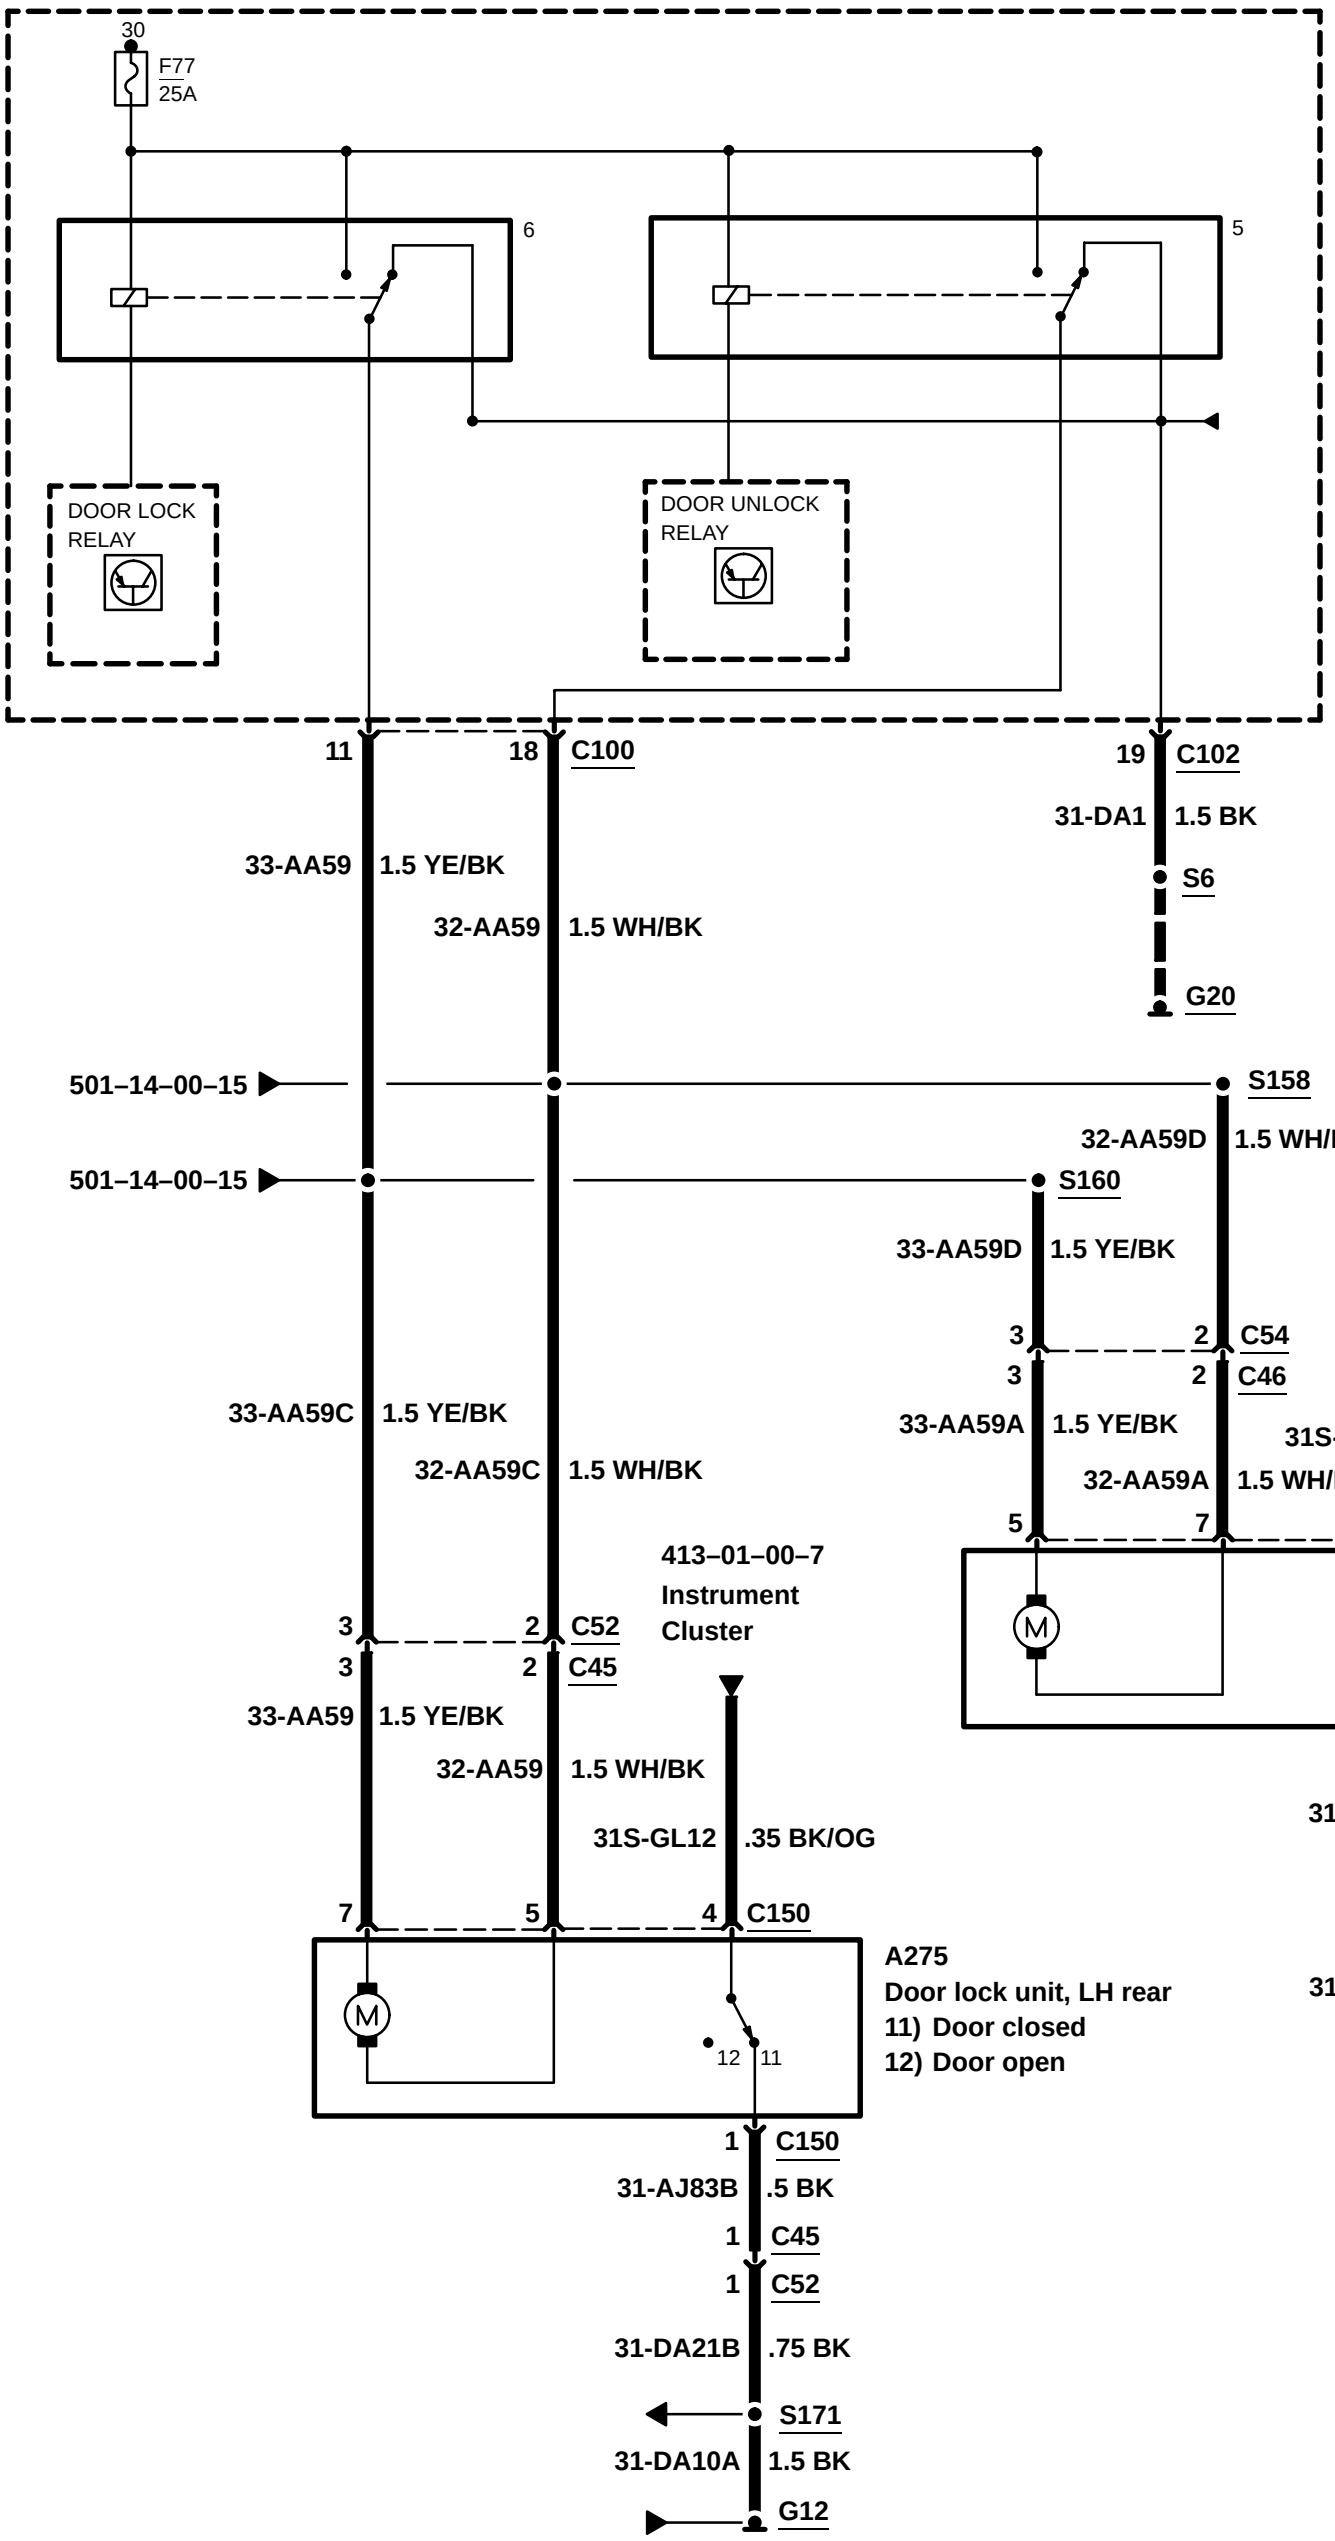


P91
Central Junction Box (CJB)
5) Door unlock relay
6) Door lock relay


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front power windows

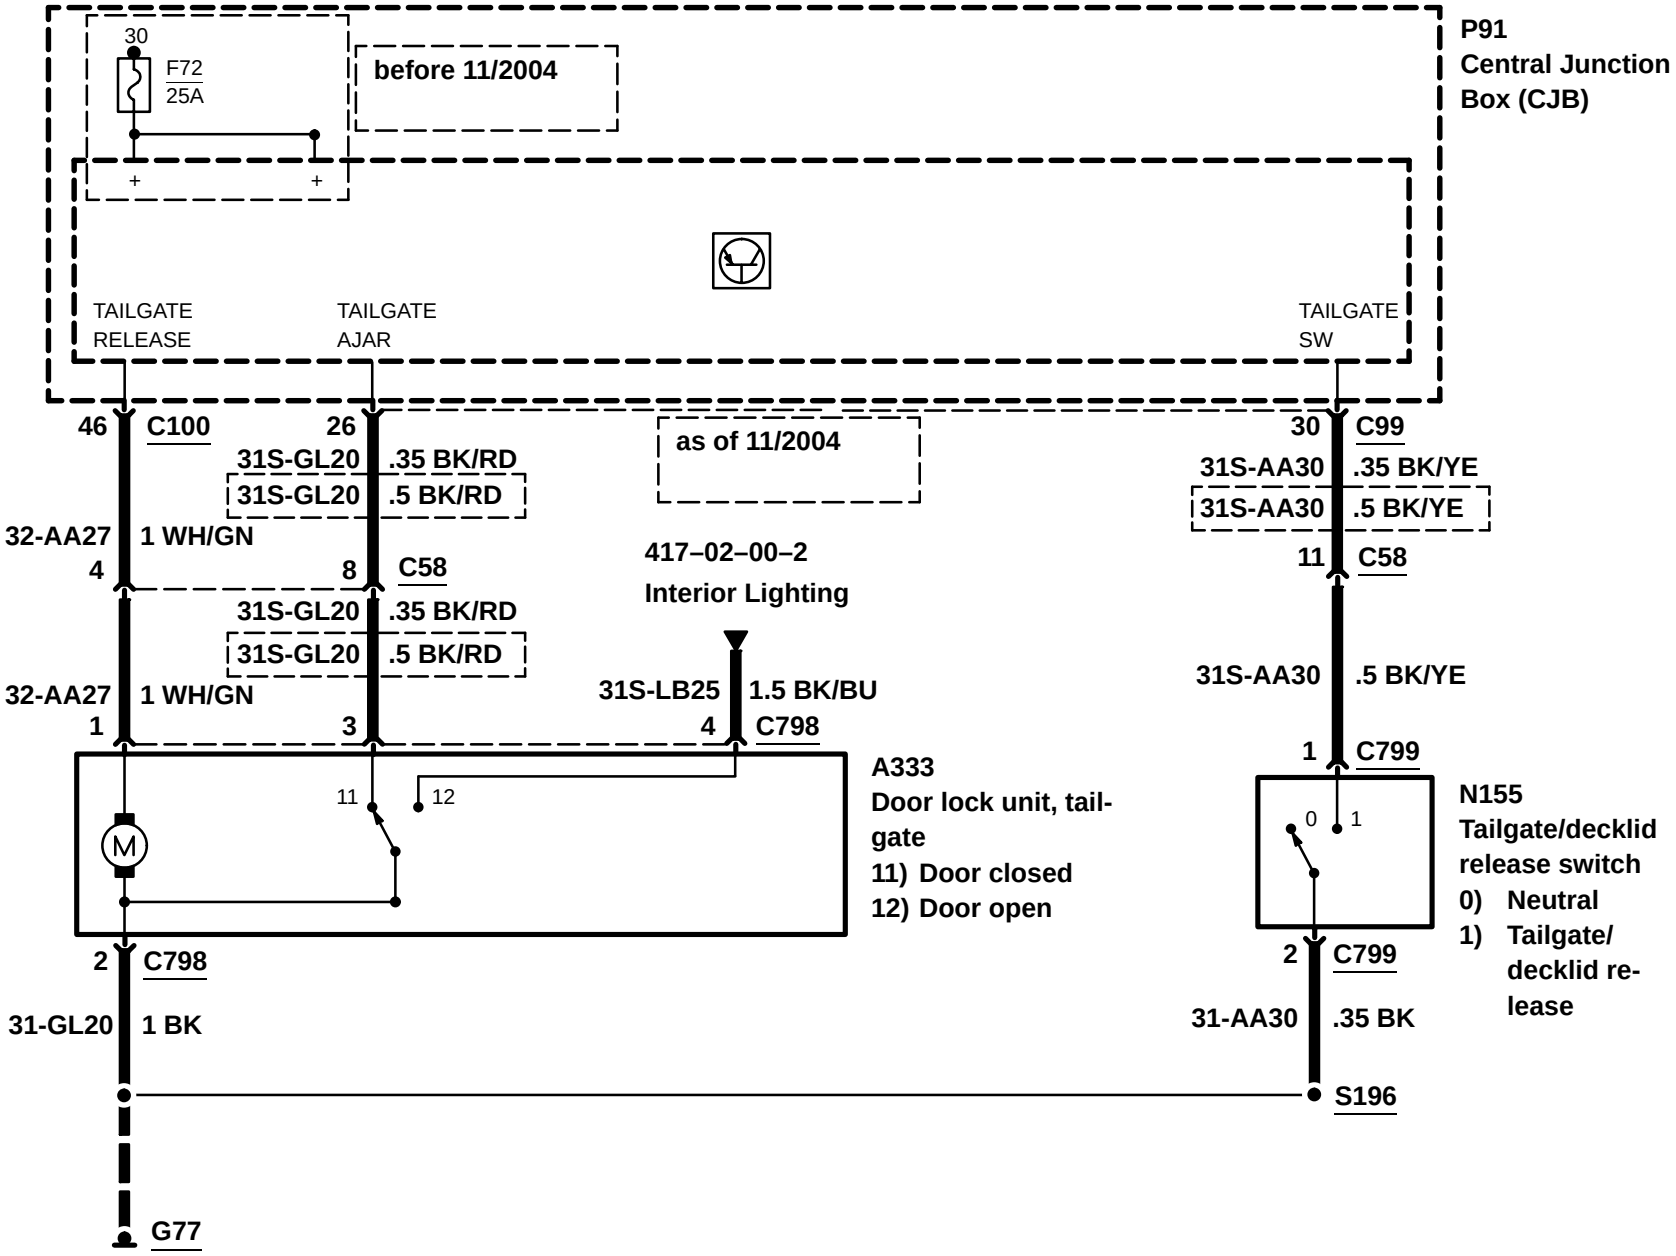

Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows

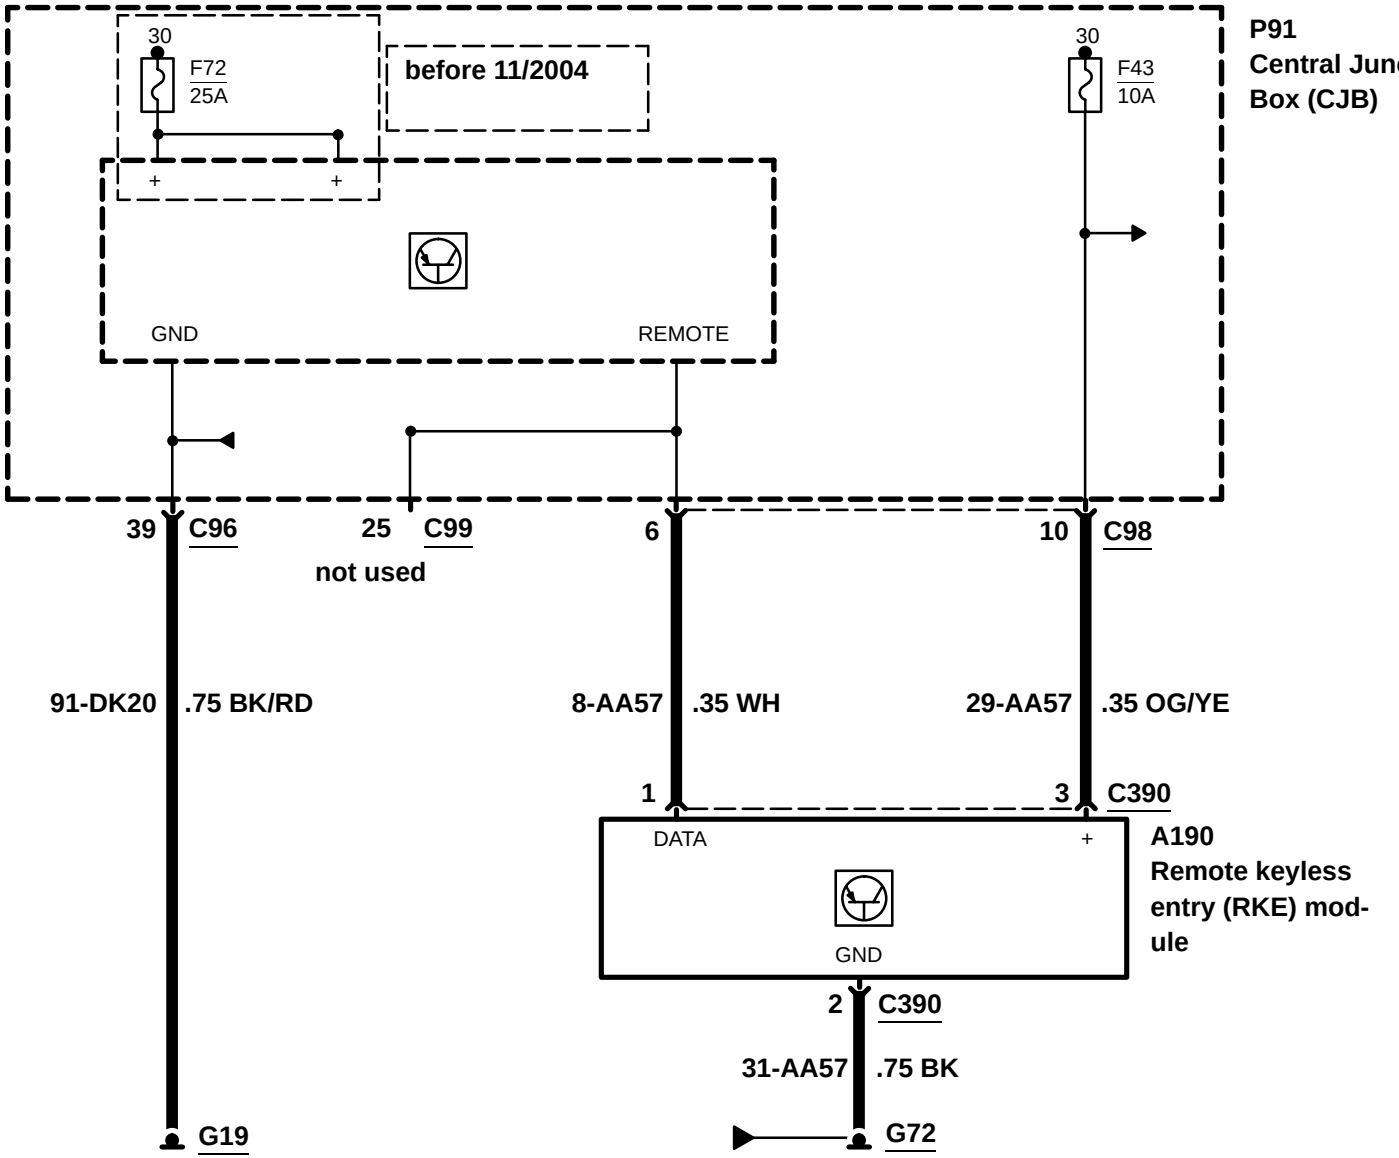


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows

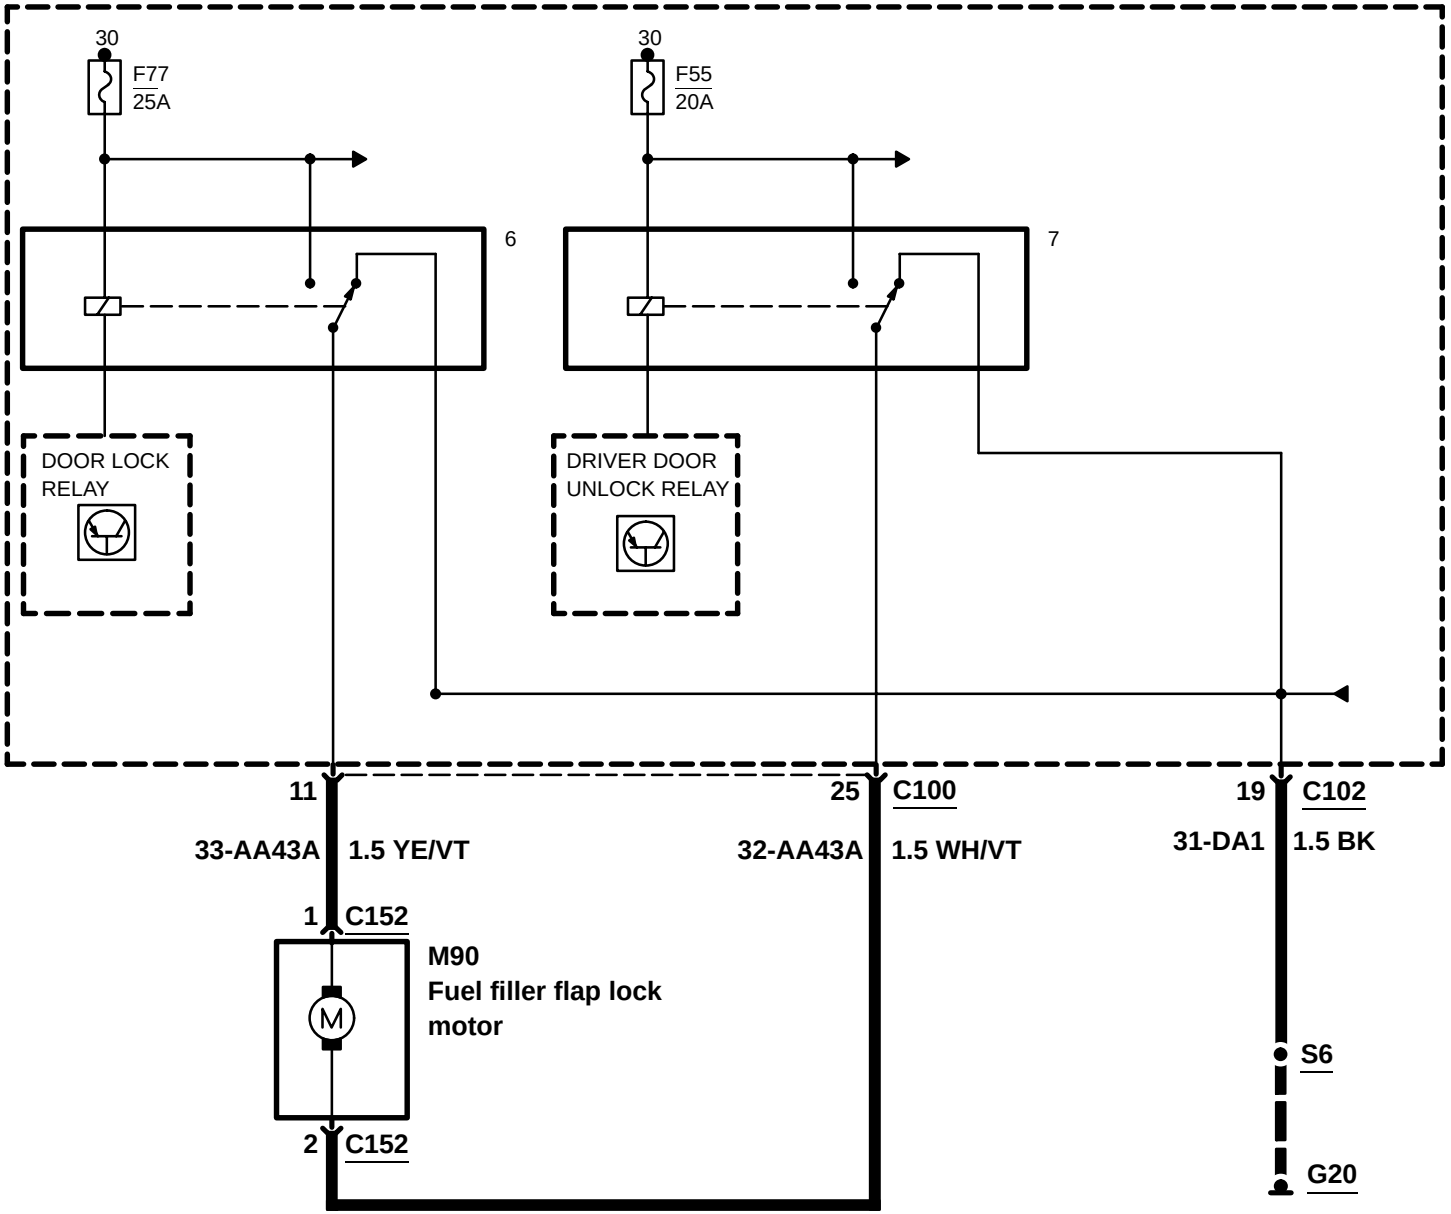


P91
Central Junction Box (CJB)
6) Door lock relay
7) Driver door unlock relay


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows

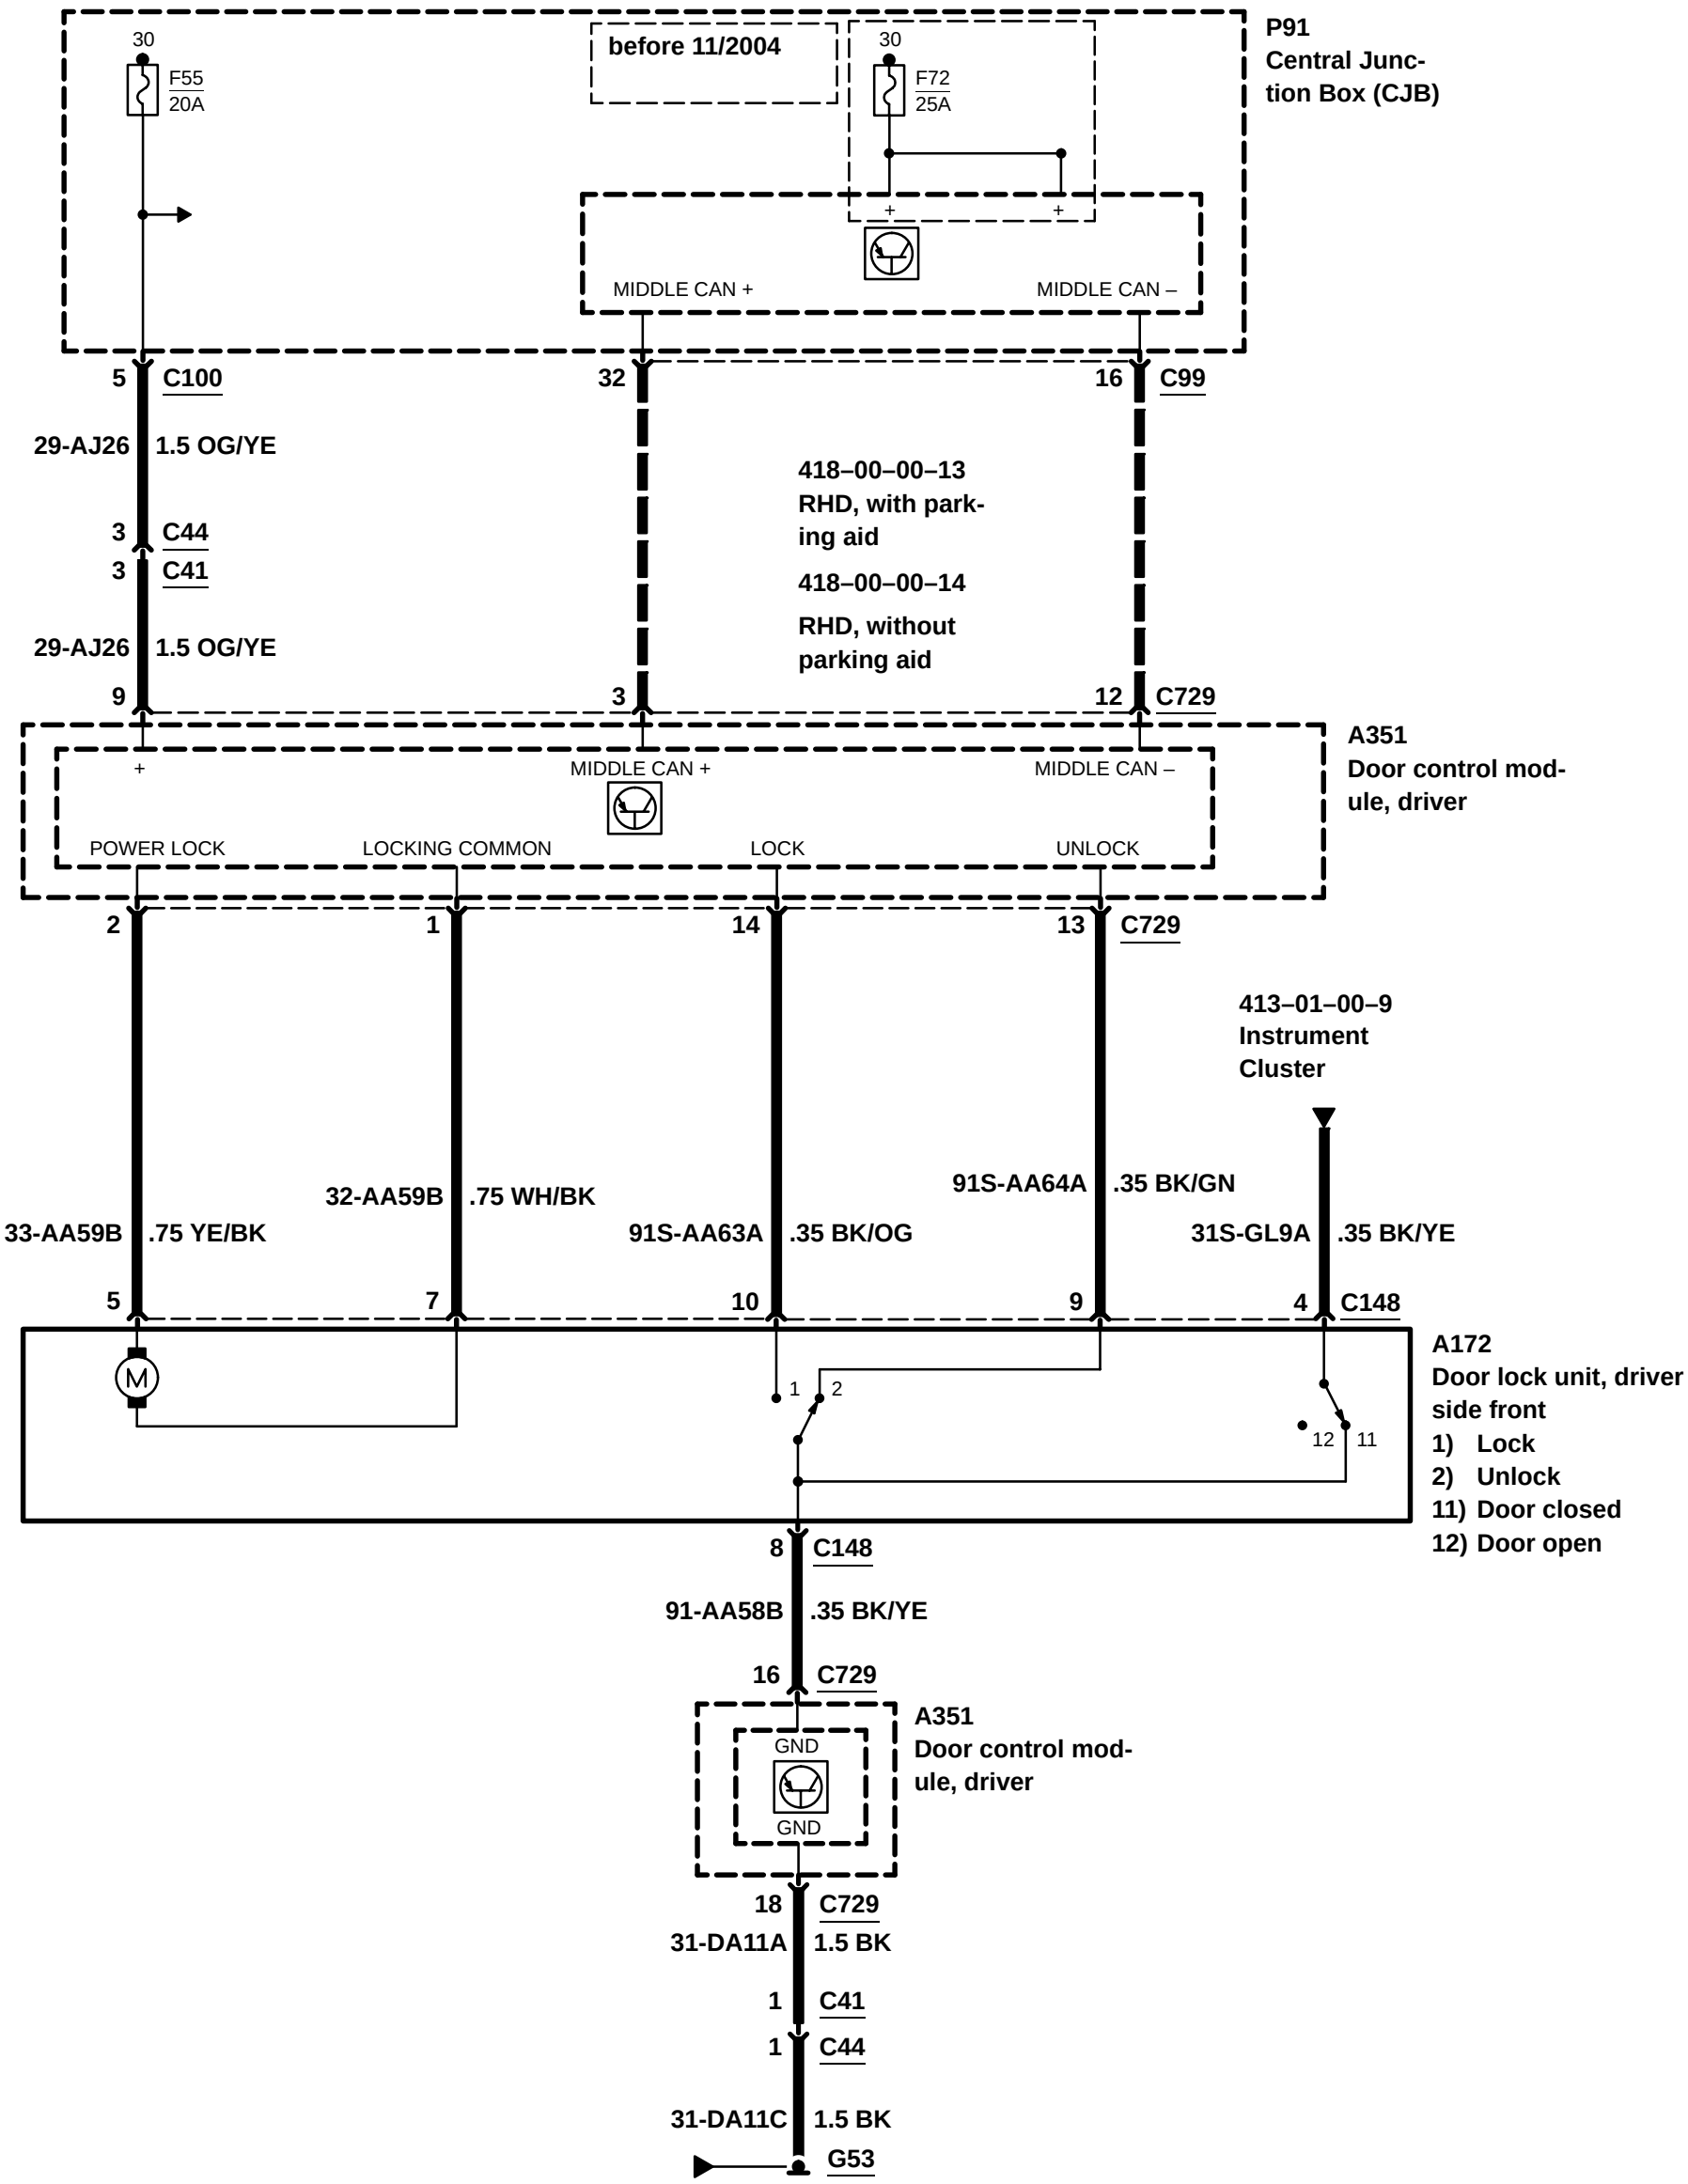


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows

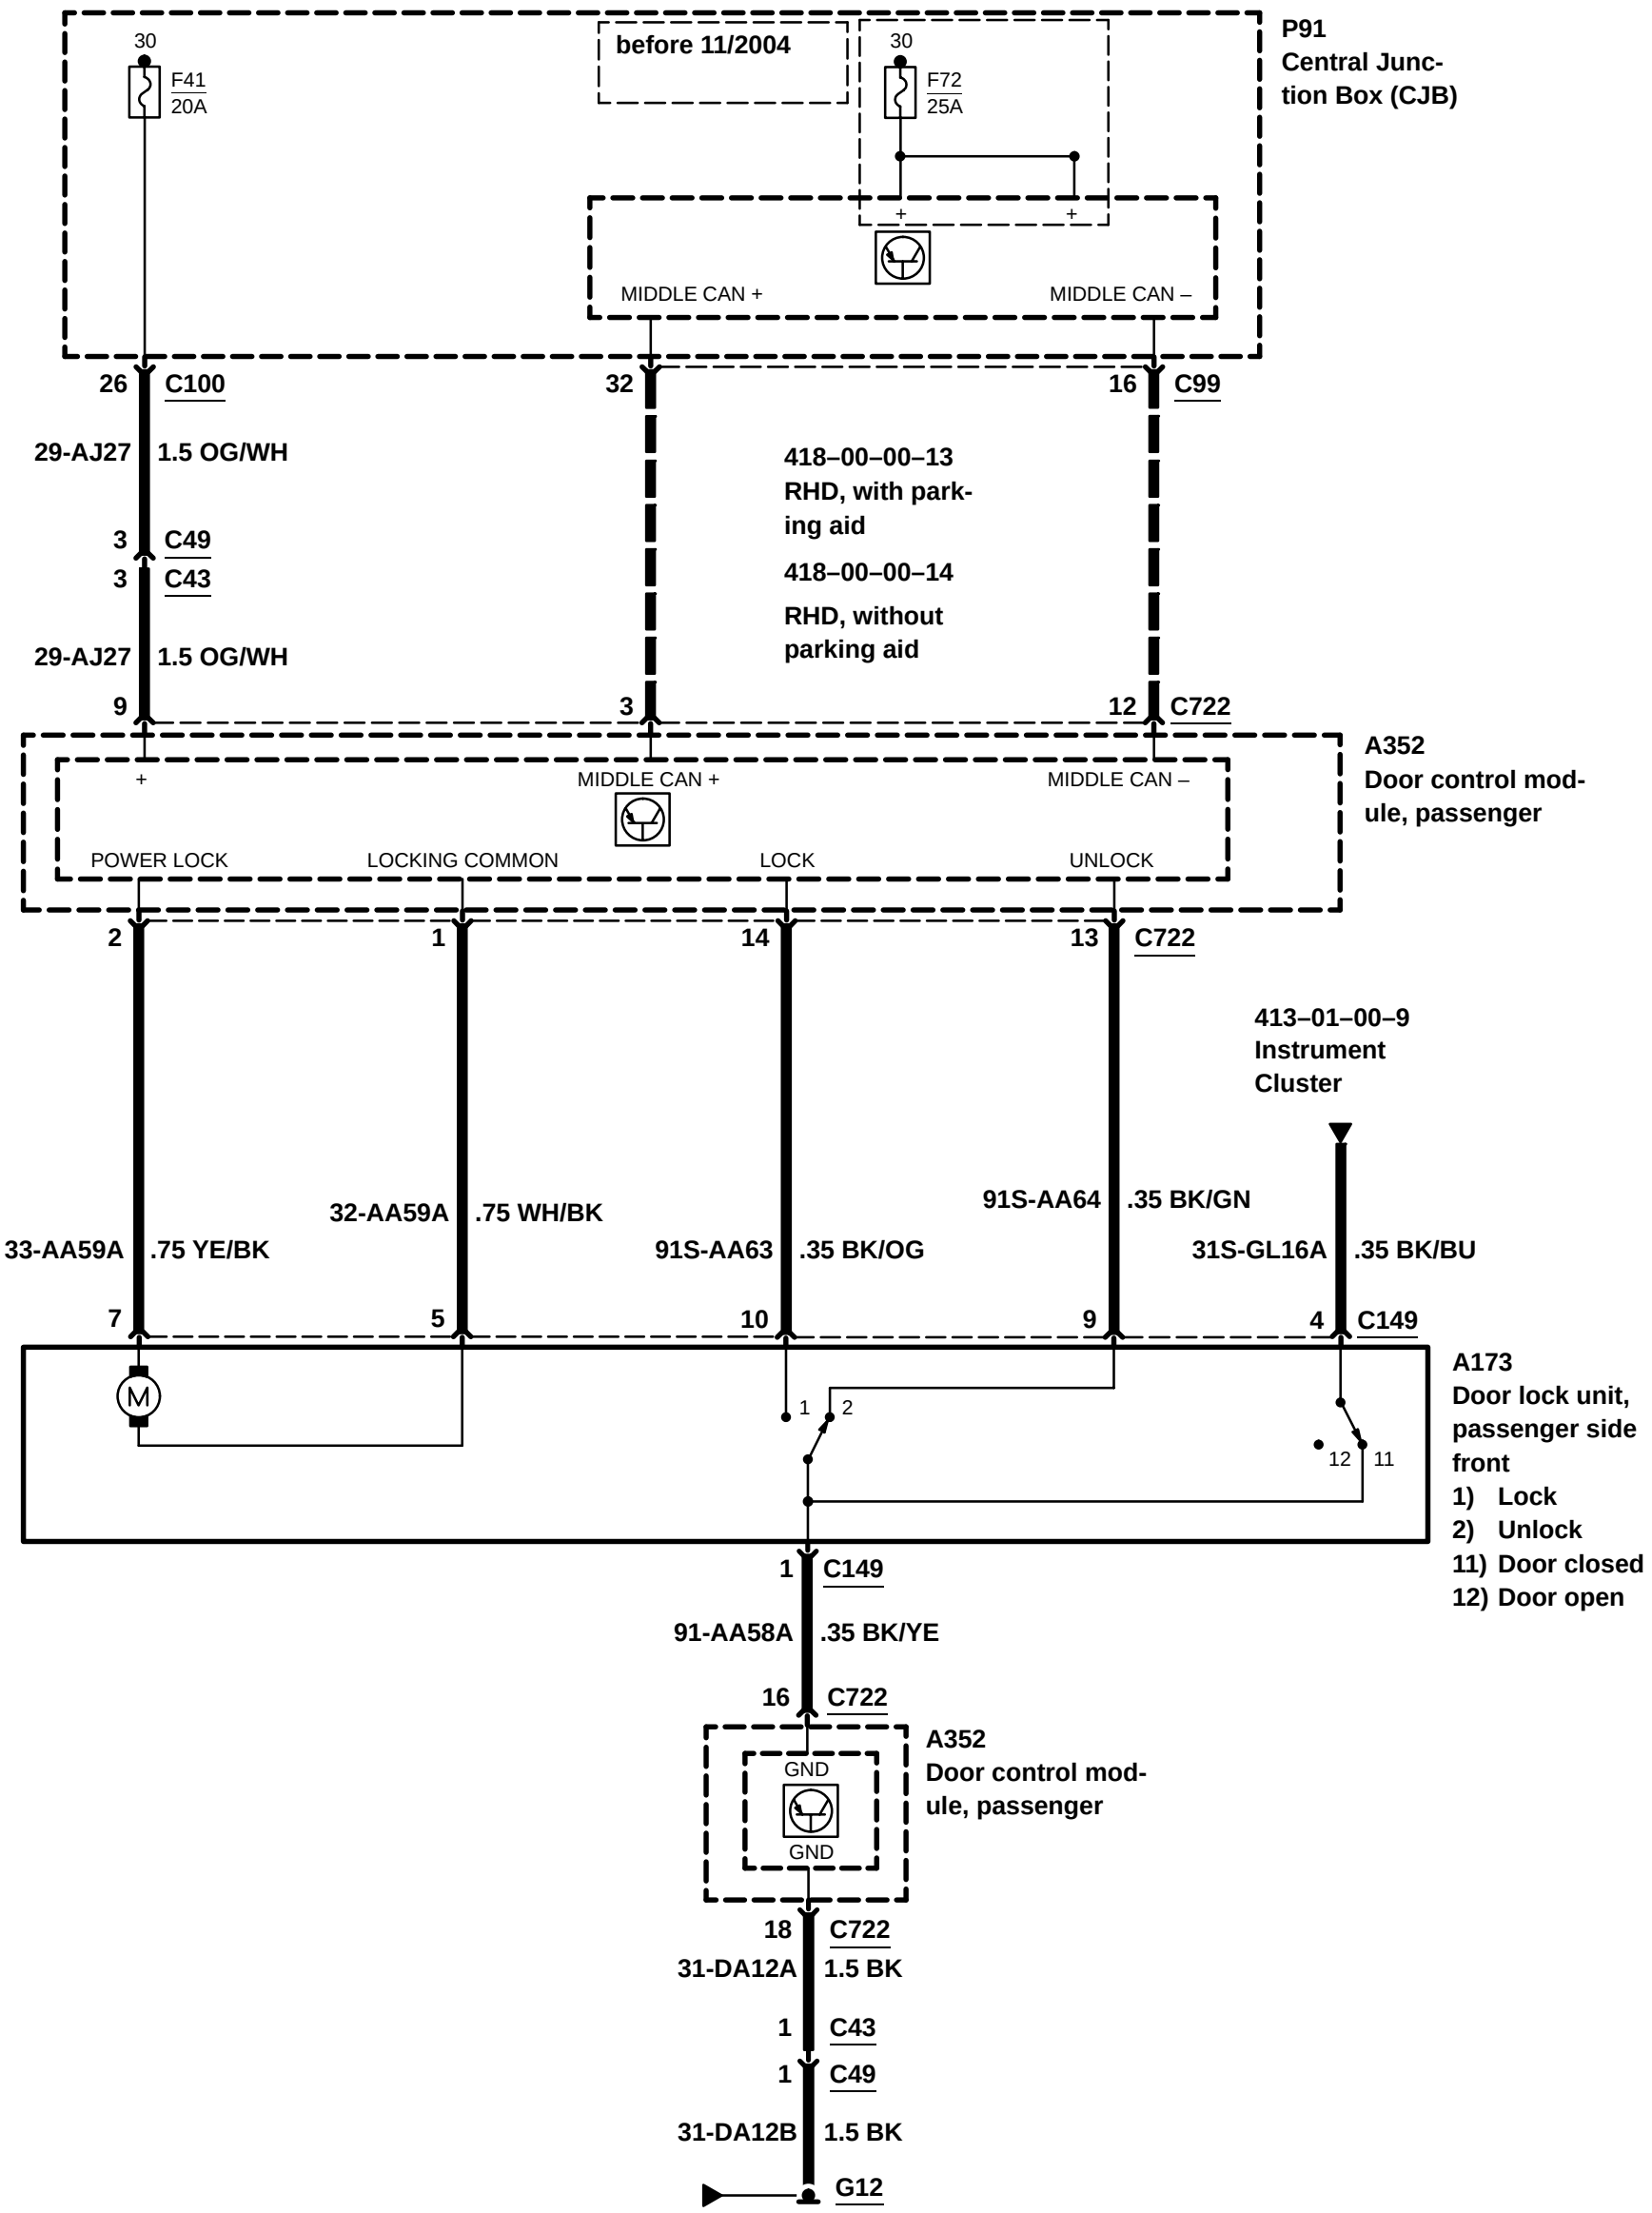


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows

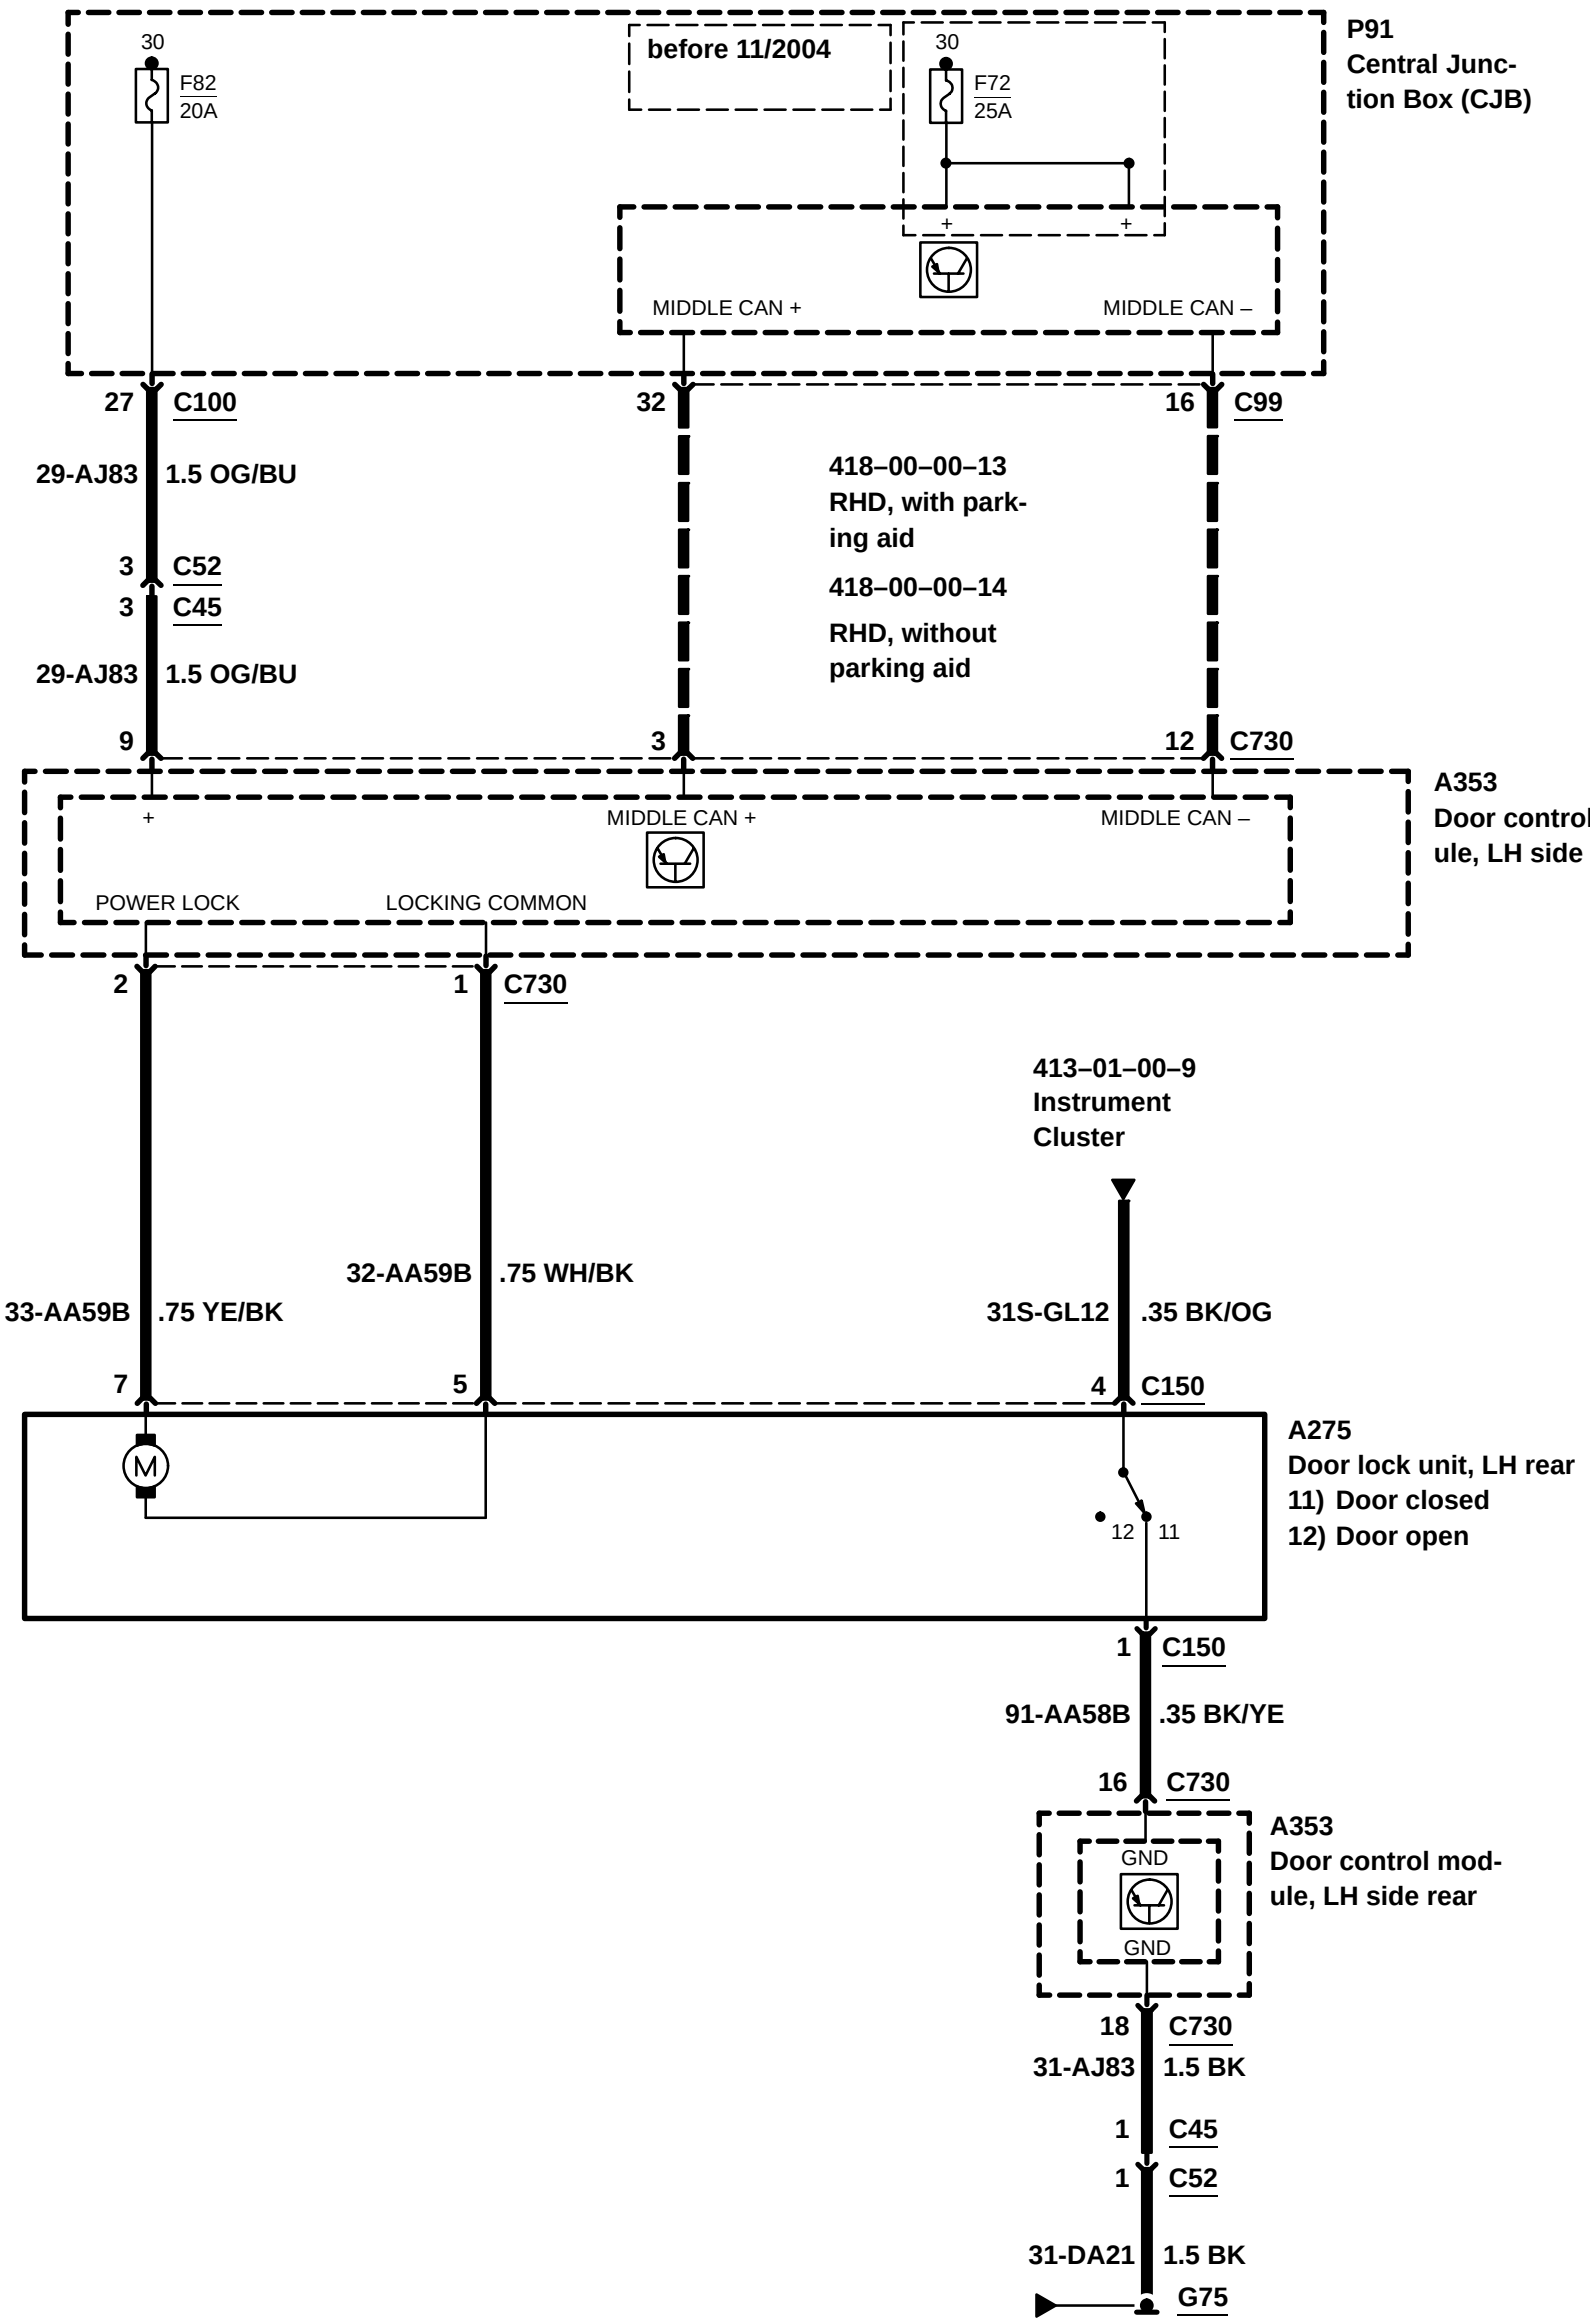


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows

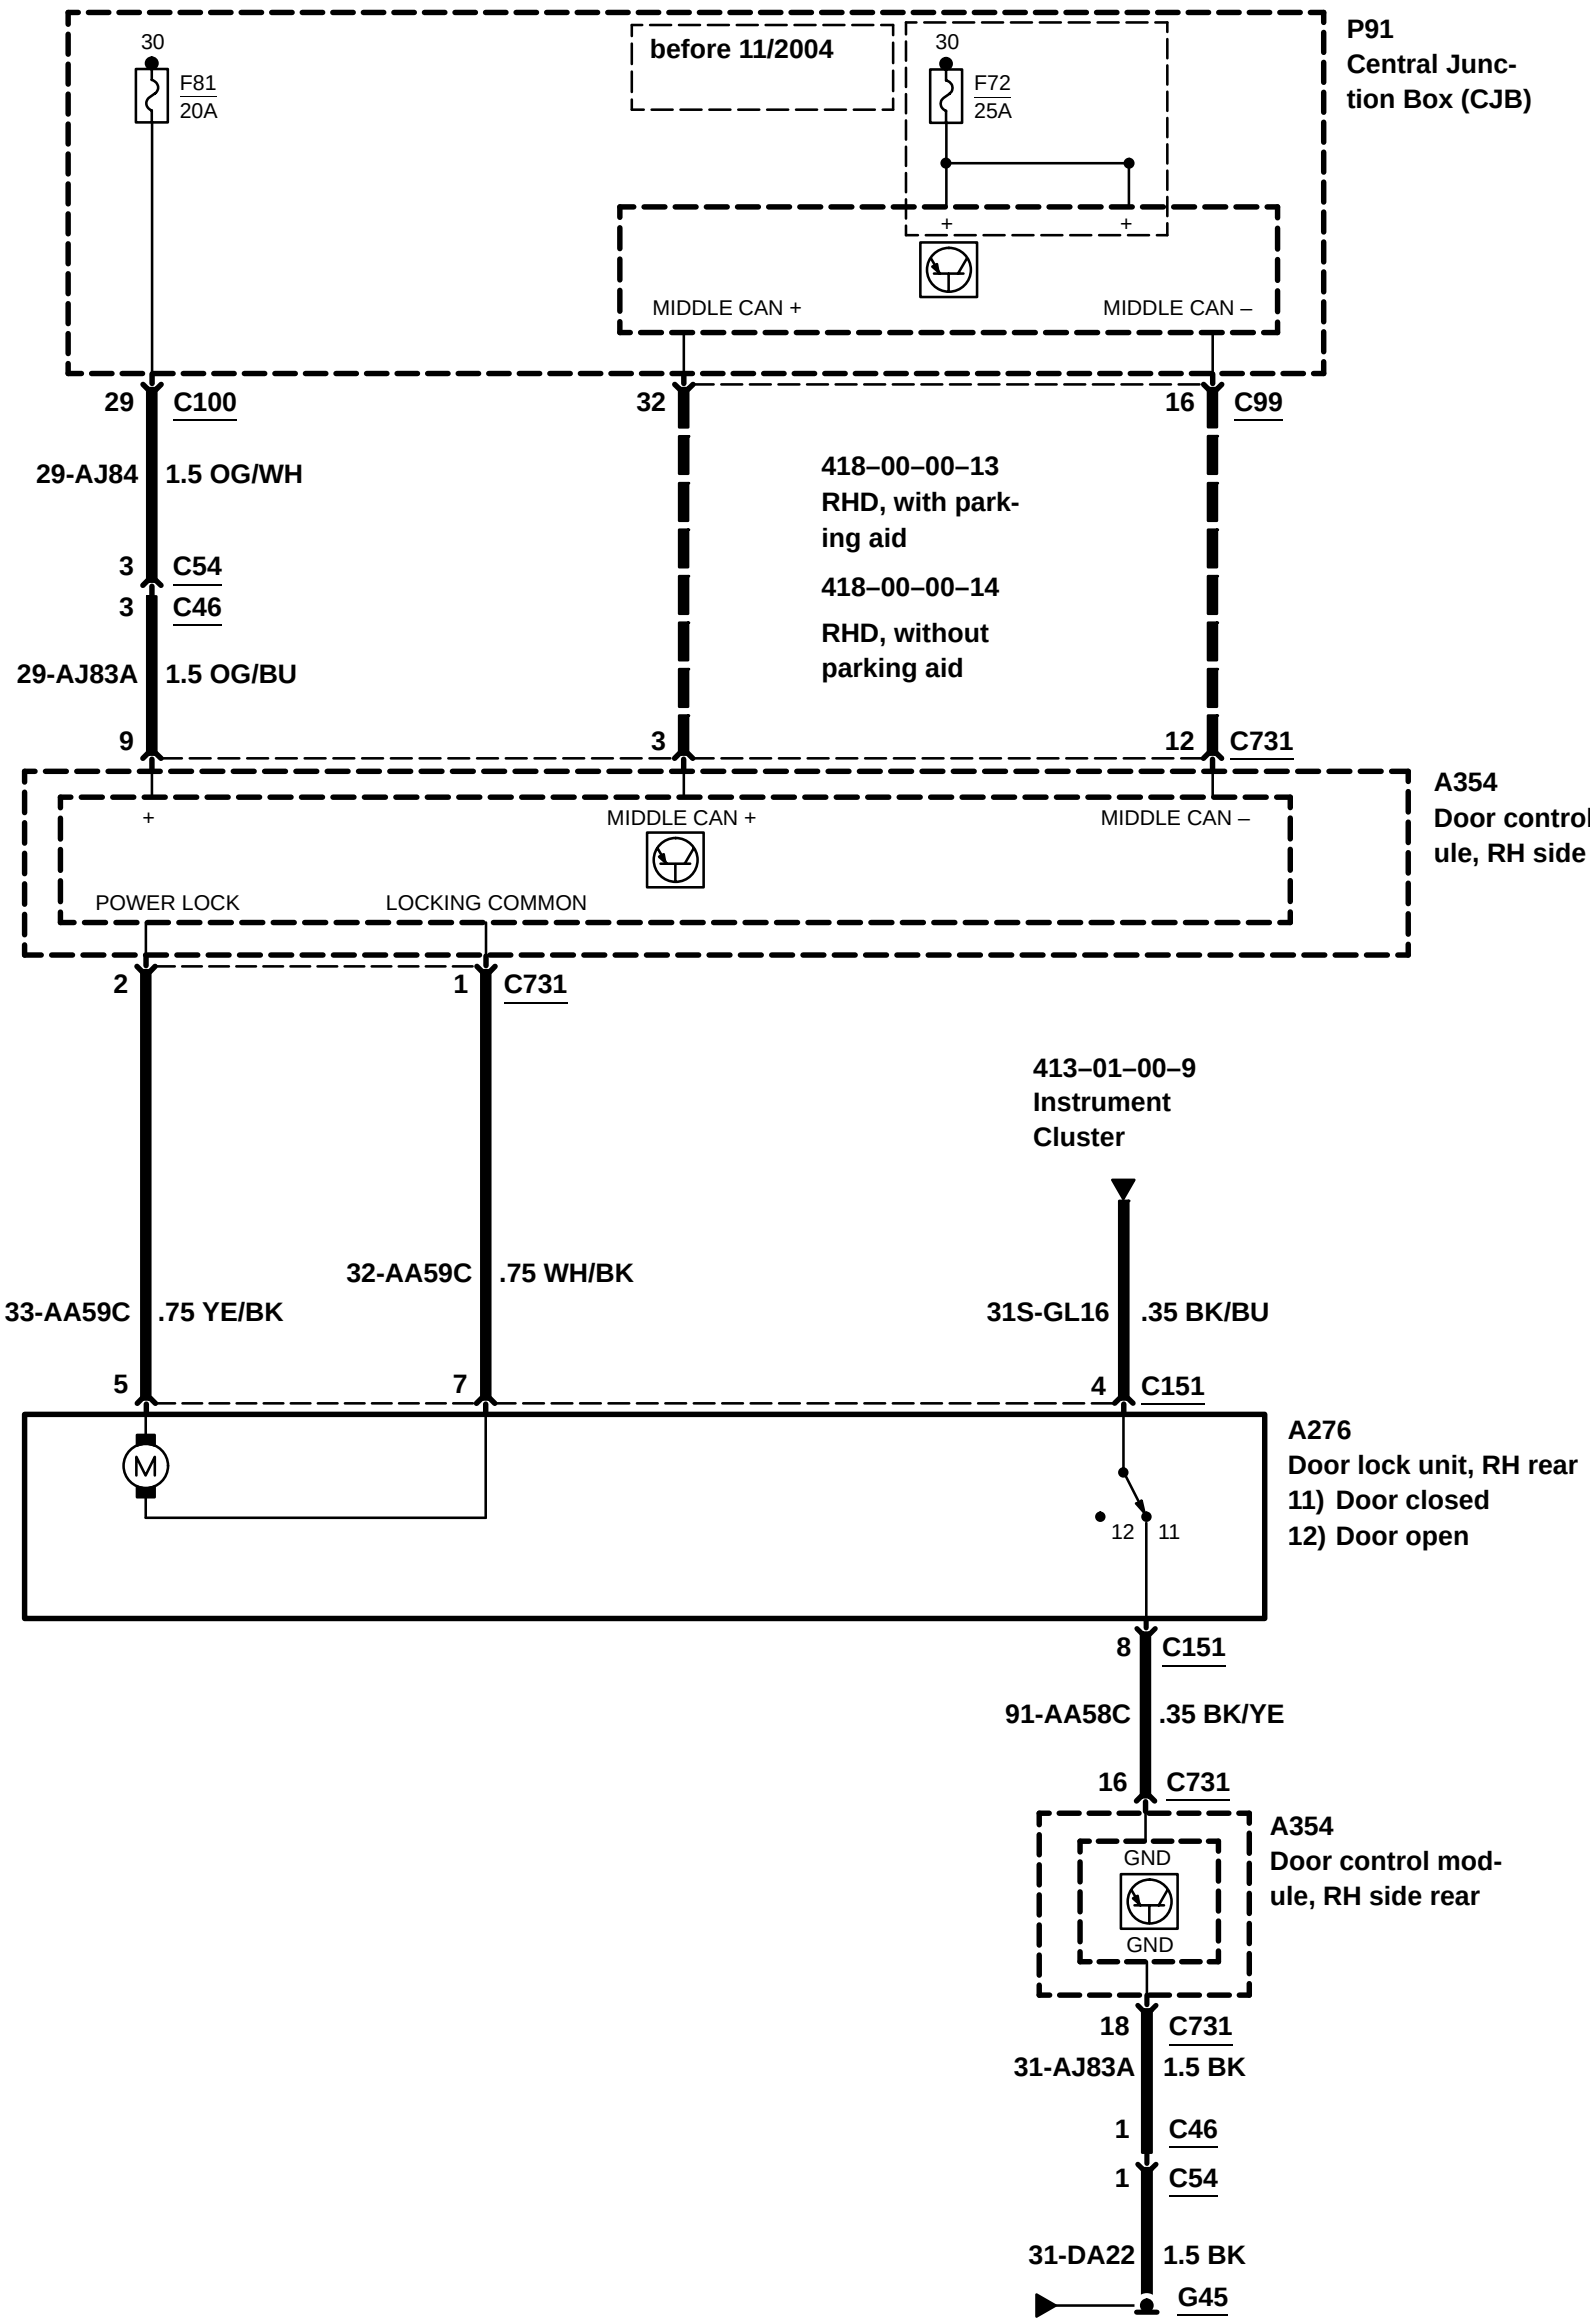


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front and rear power windows

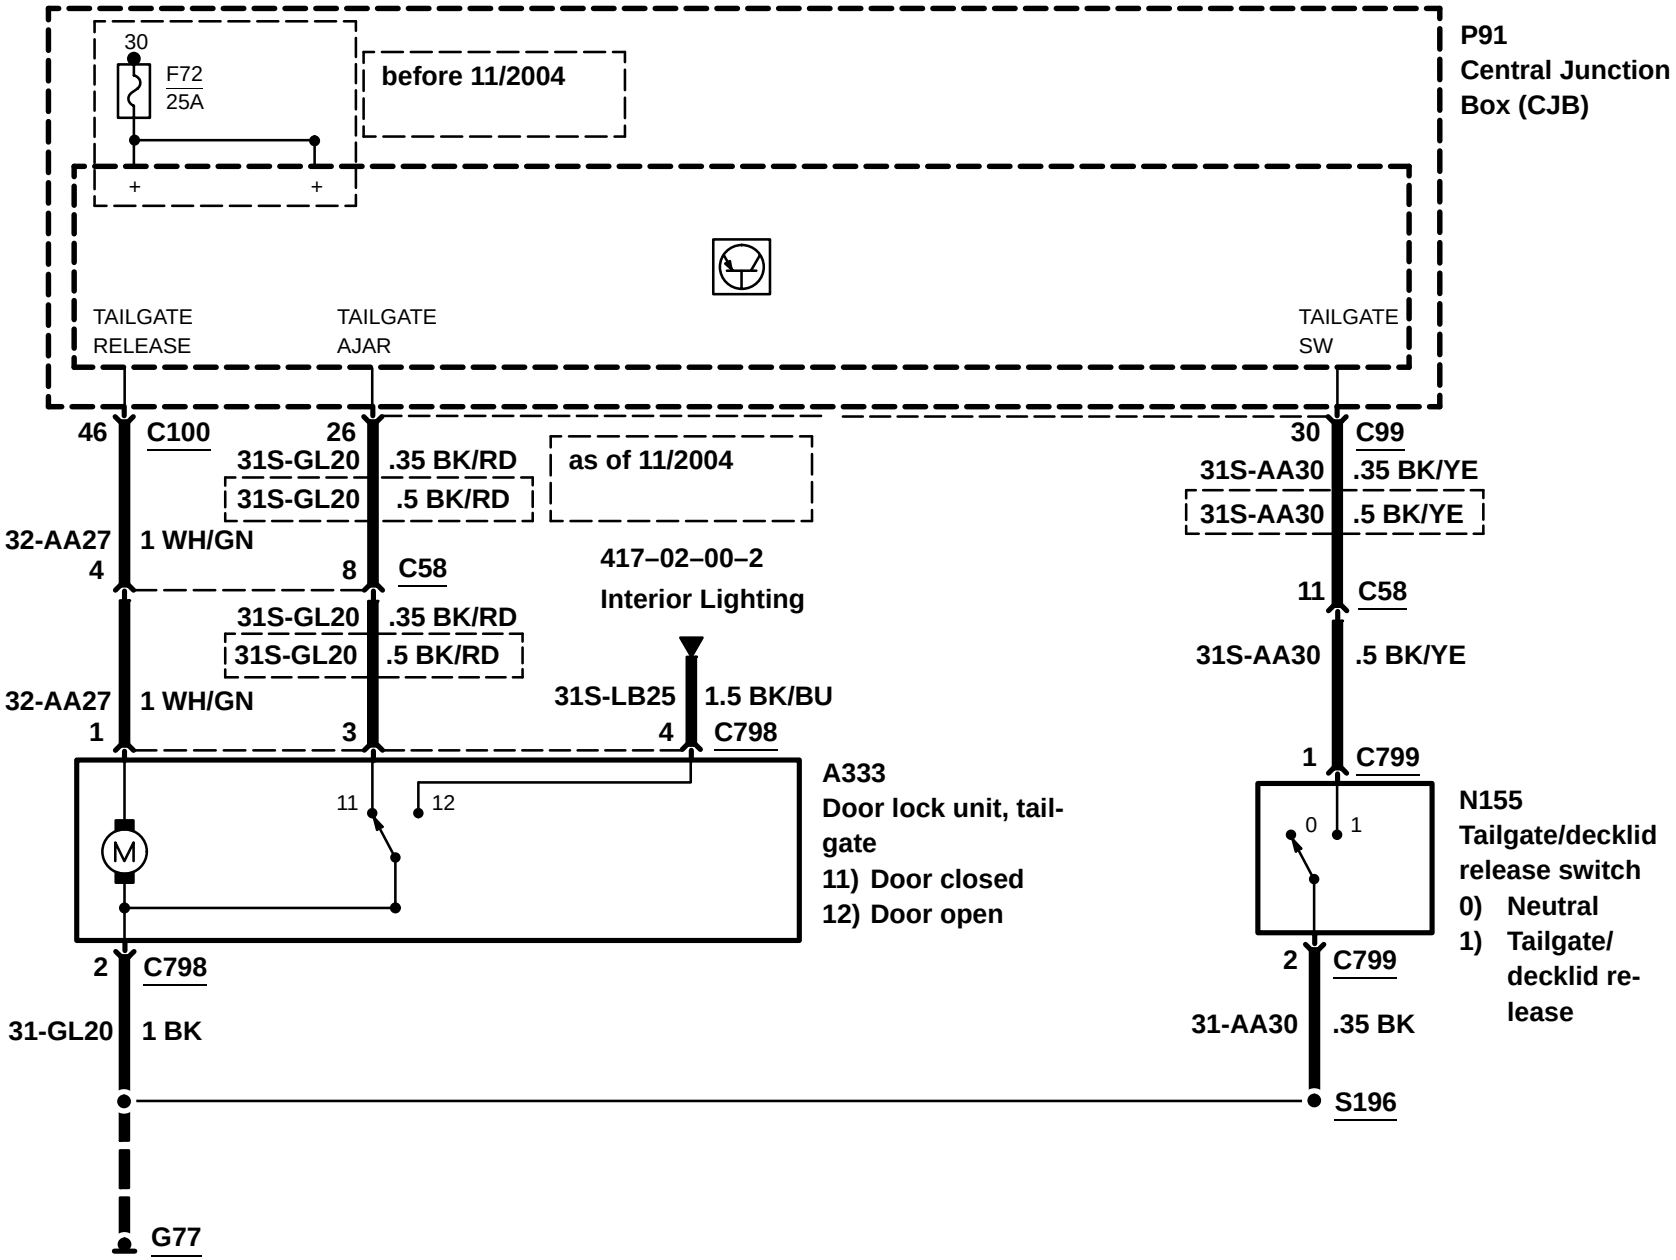

Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front power windows

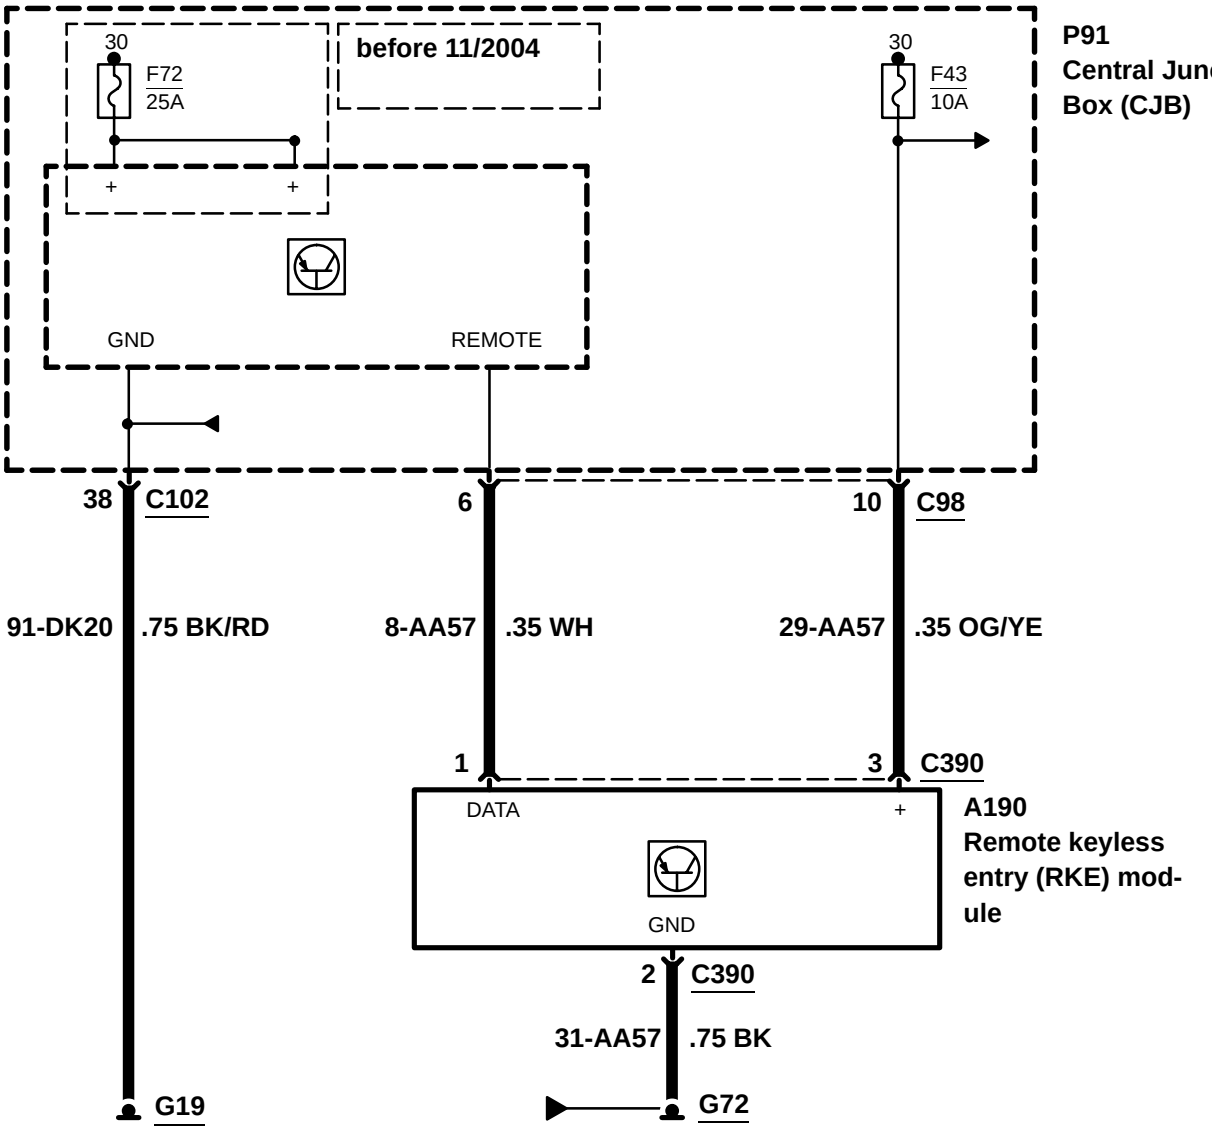


Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front power windows

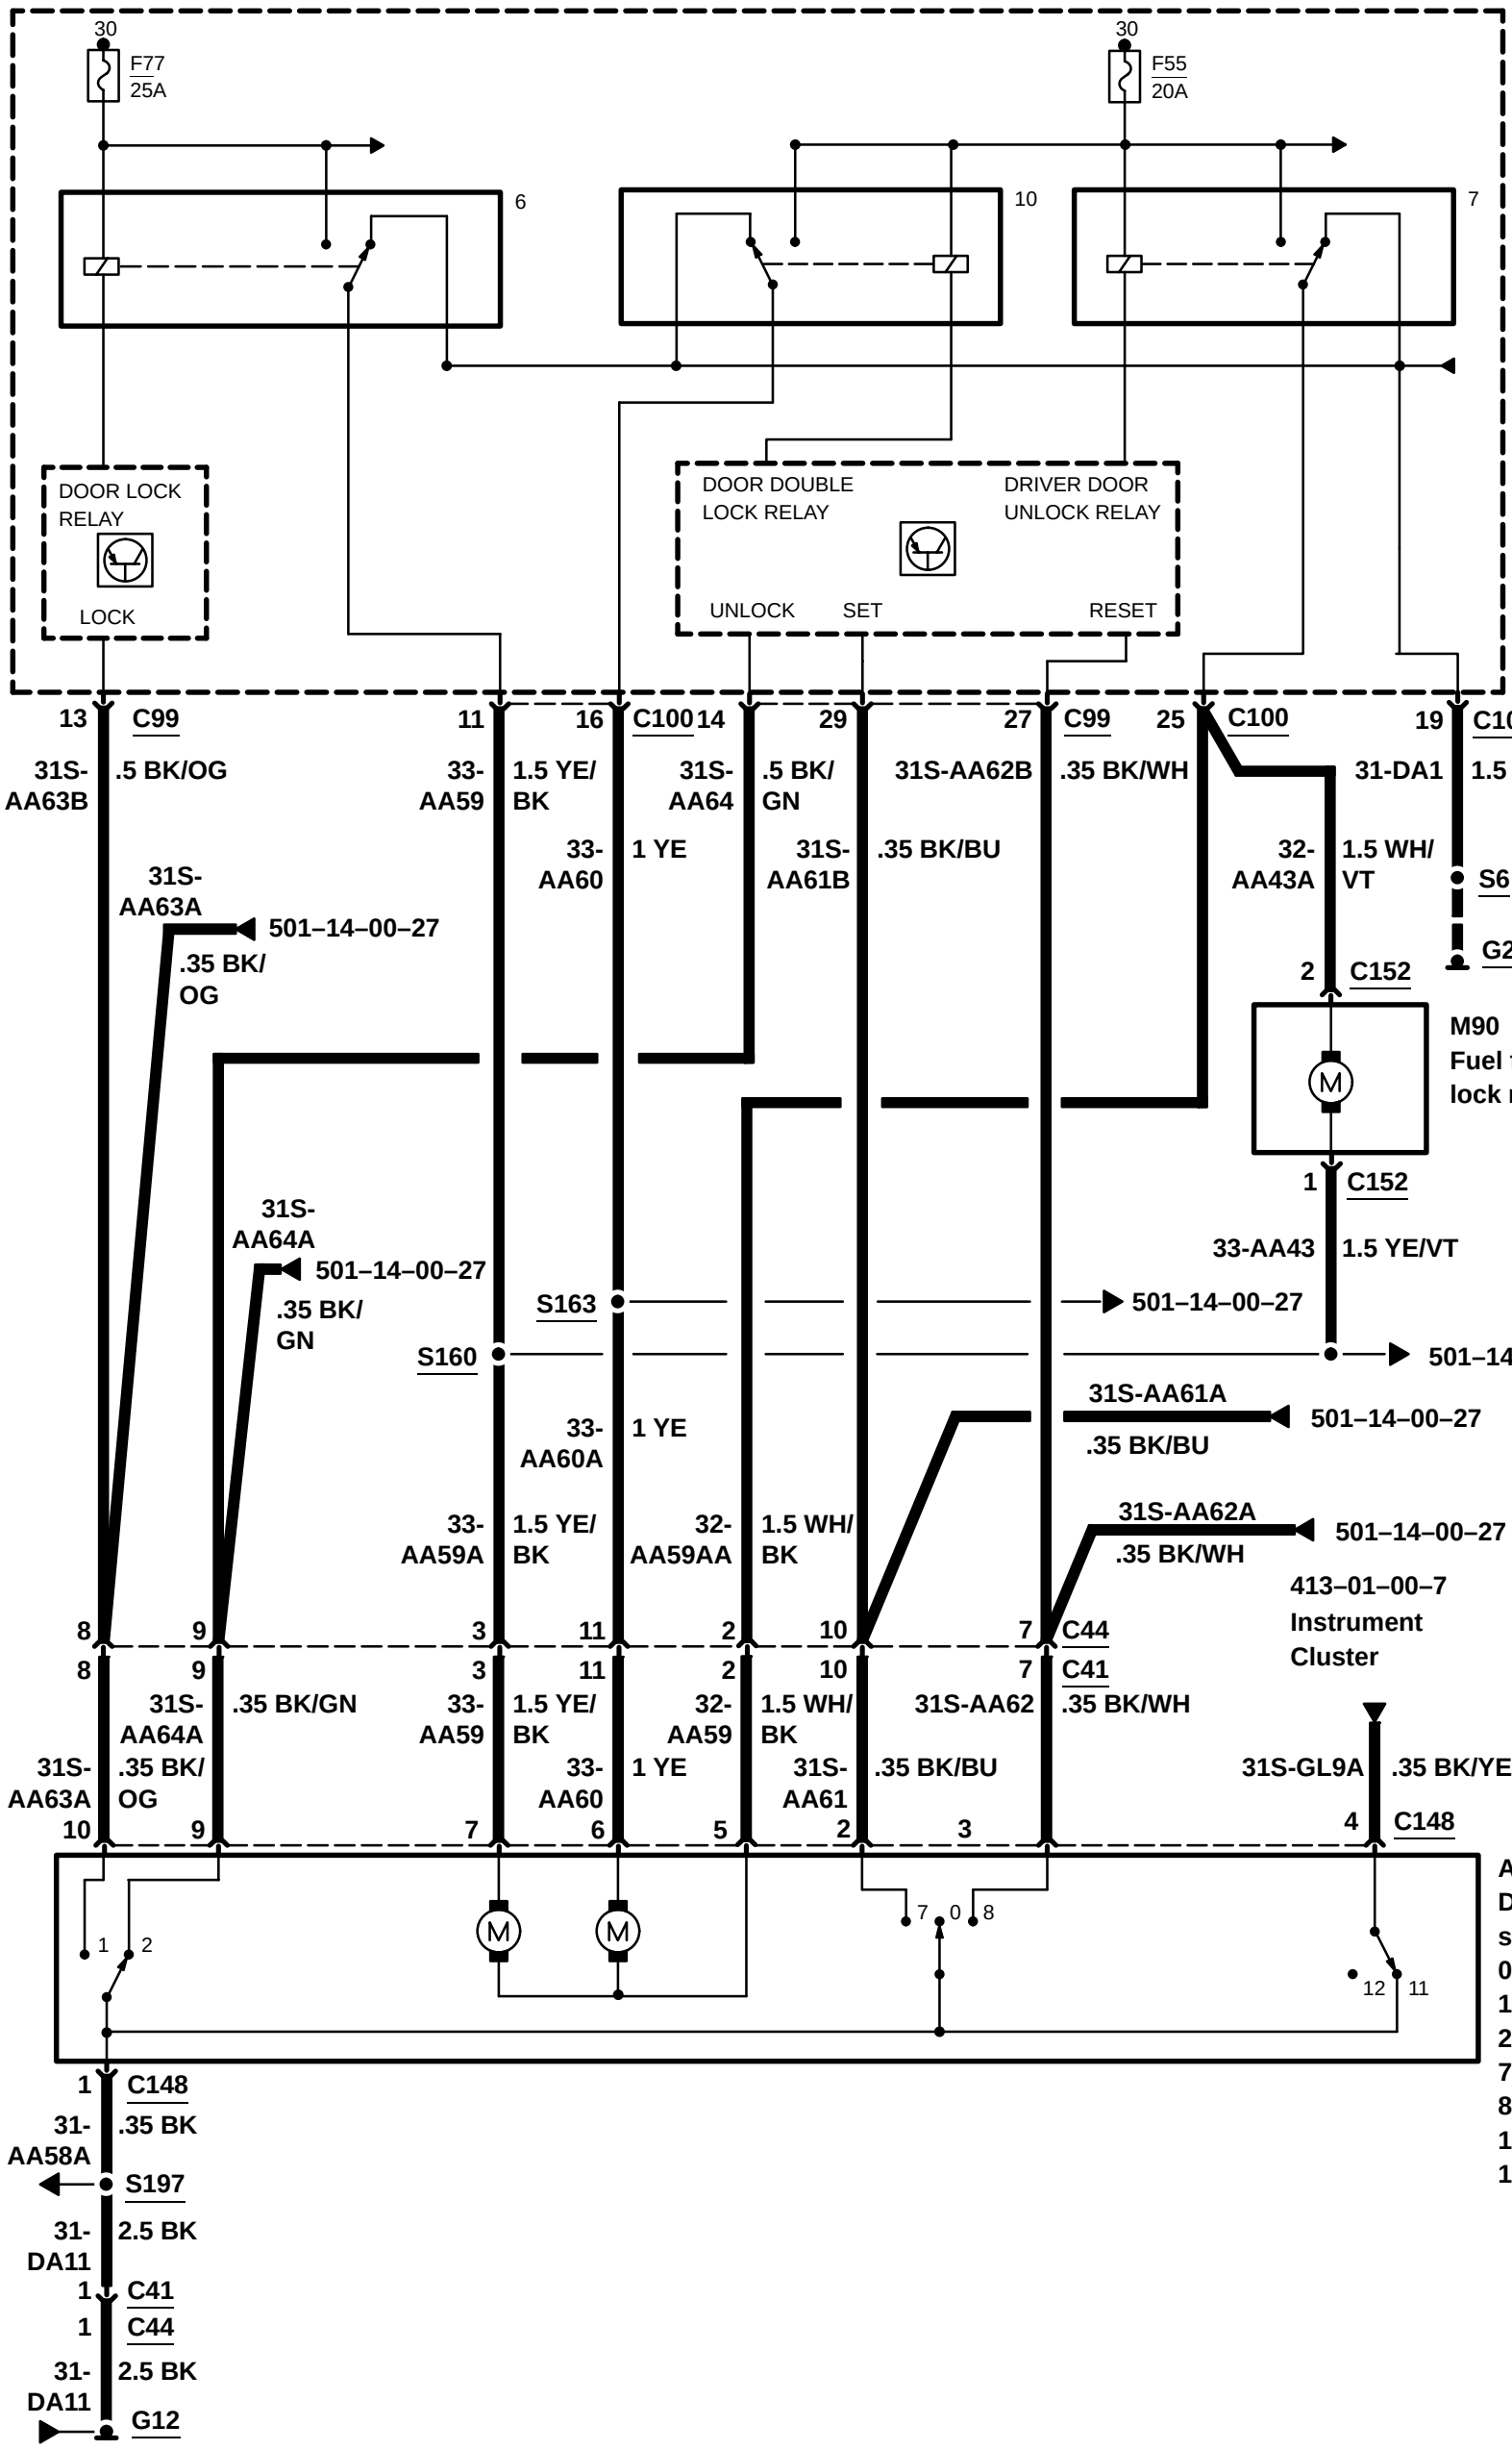

P91
Central Junction Box (CJB)
6) Door lock relay
7) Driver door unlock relay
10) Double locking relay

A172
Door lock unit, driver side front
0) Neutral
1) Lock
2) Unlock
7) Set
8) Reset
11) Door closed
12) Door open


Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front power windows

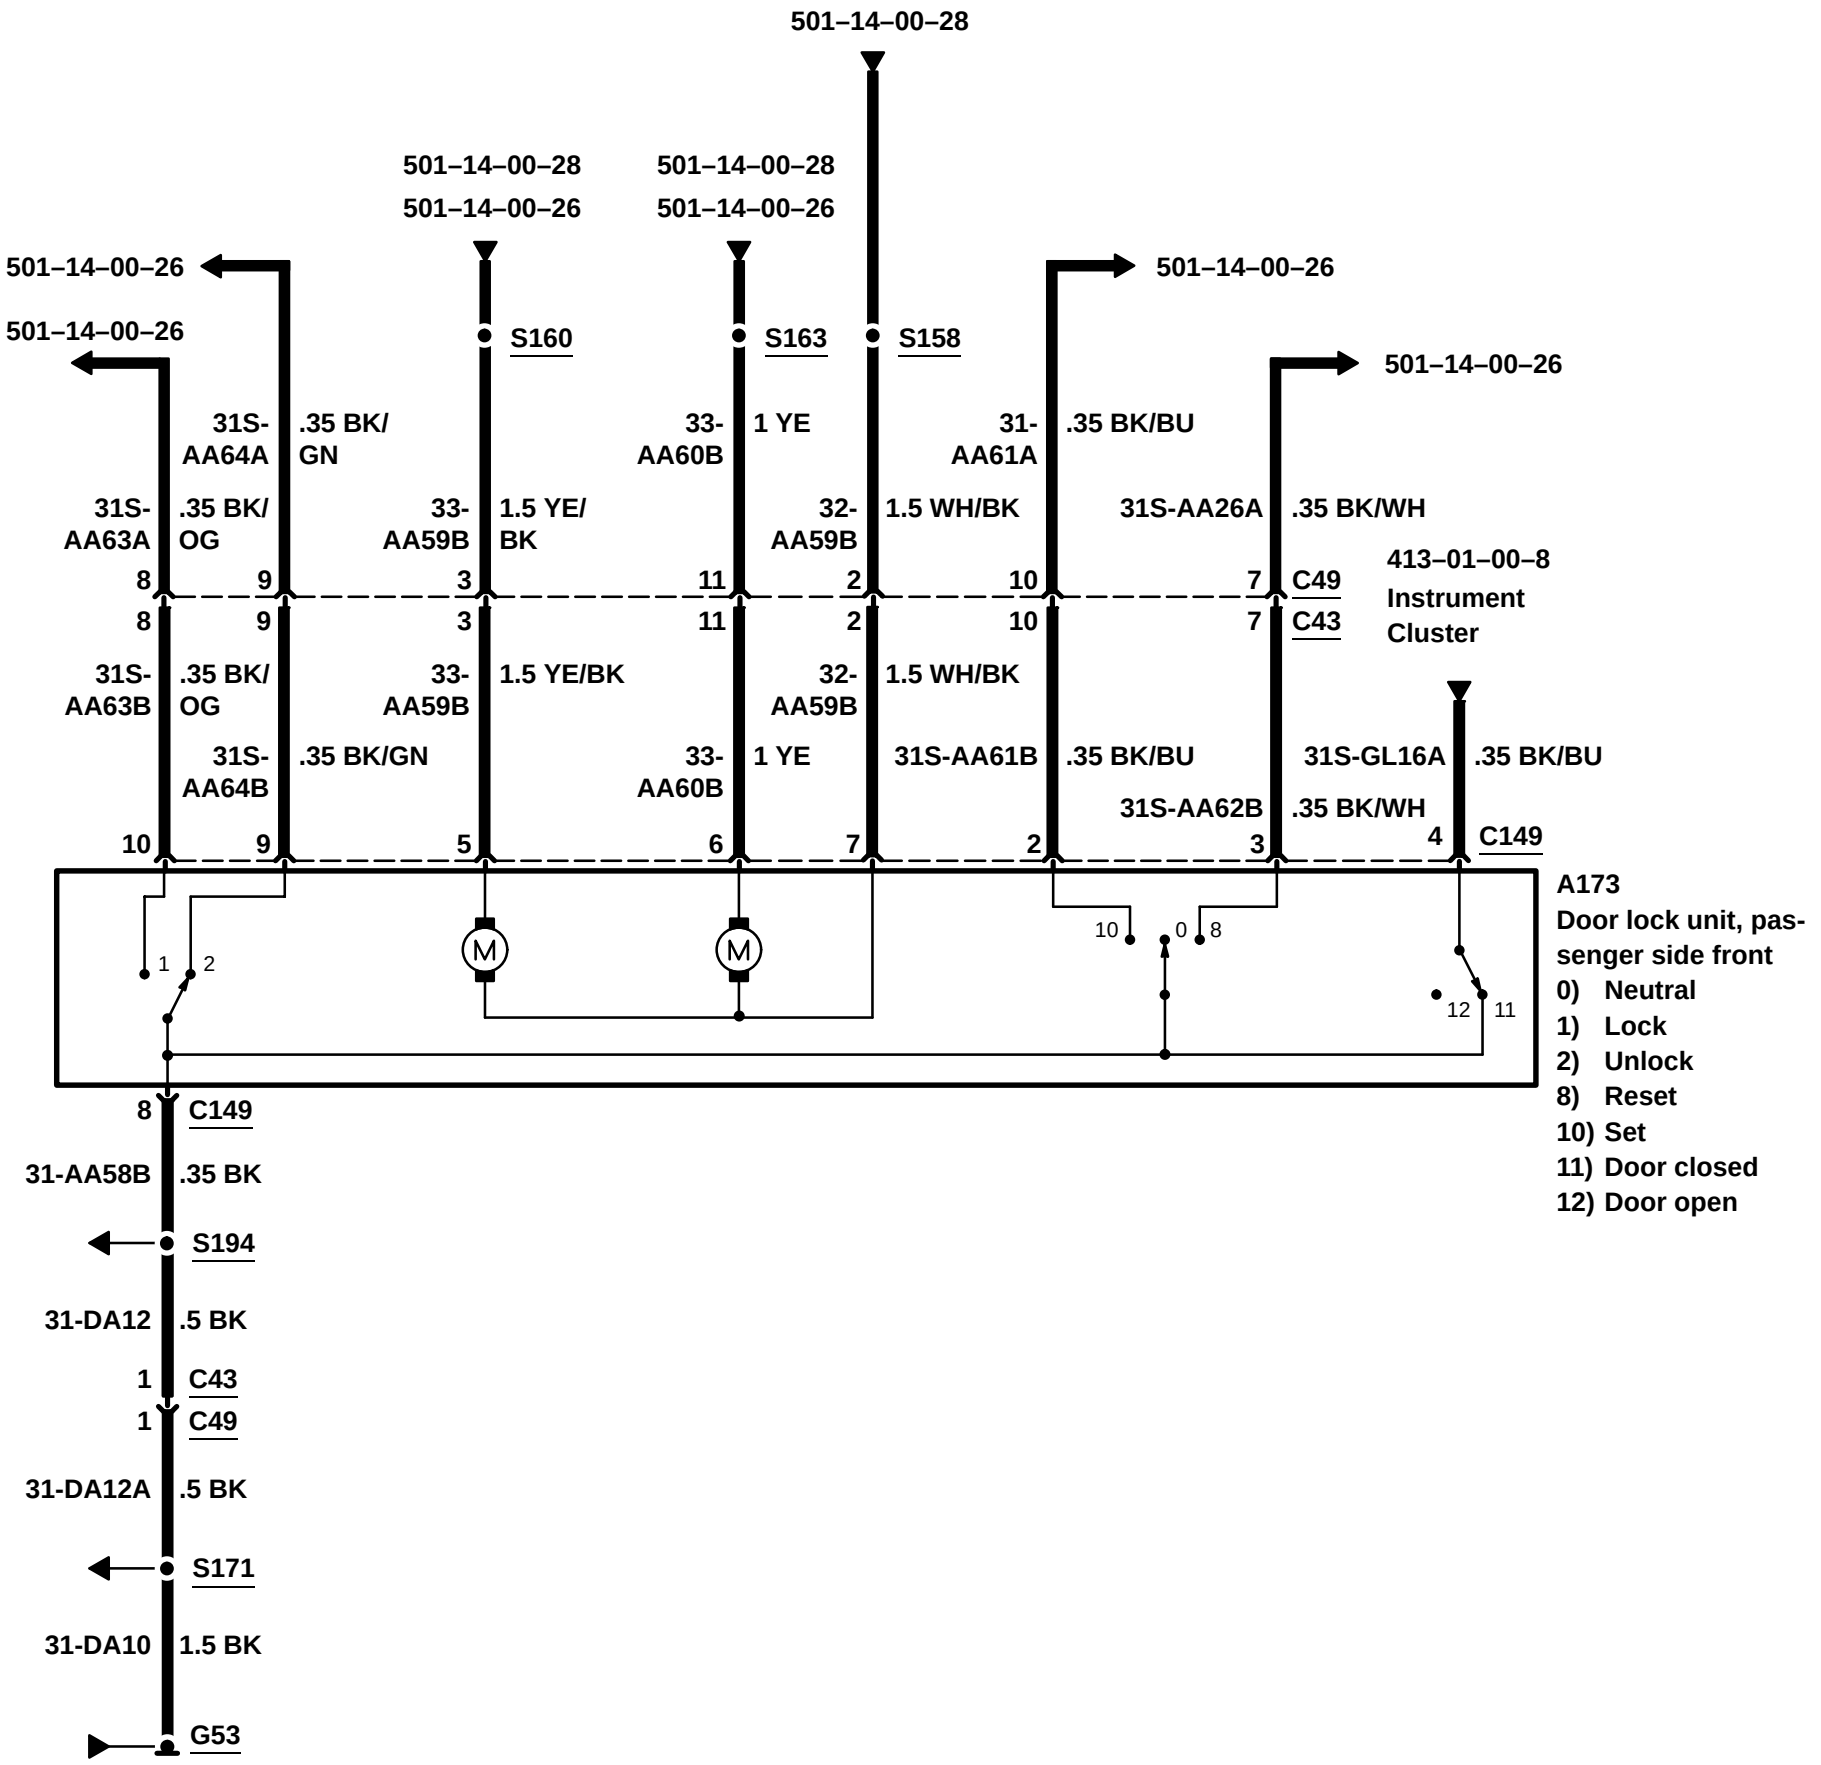

A173
Door lock unit, passenger side front


0) Neutral
1) Lock
2) Unlock
8) Reset
10) Set
11) Door closed
12) Door open

Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front power windows

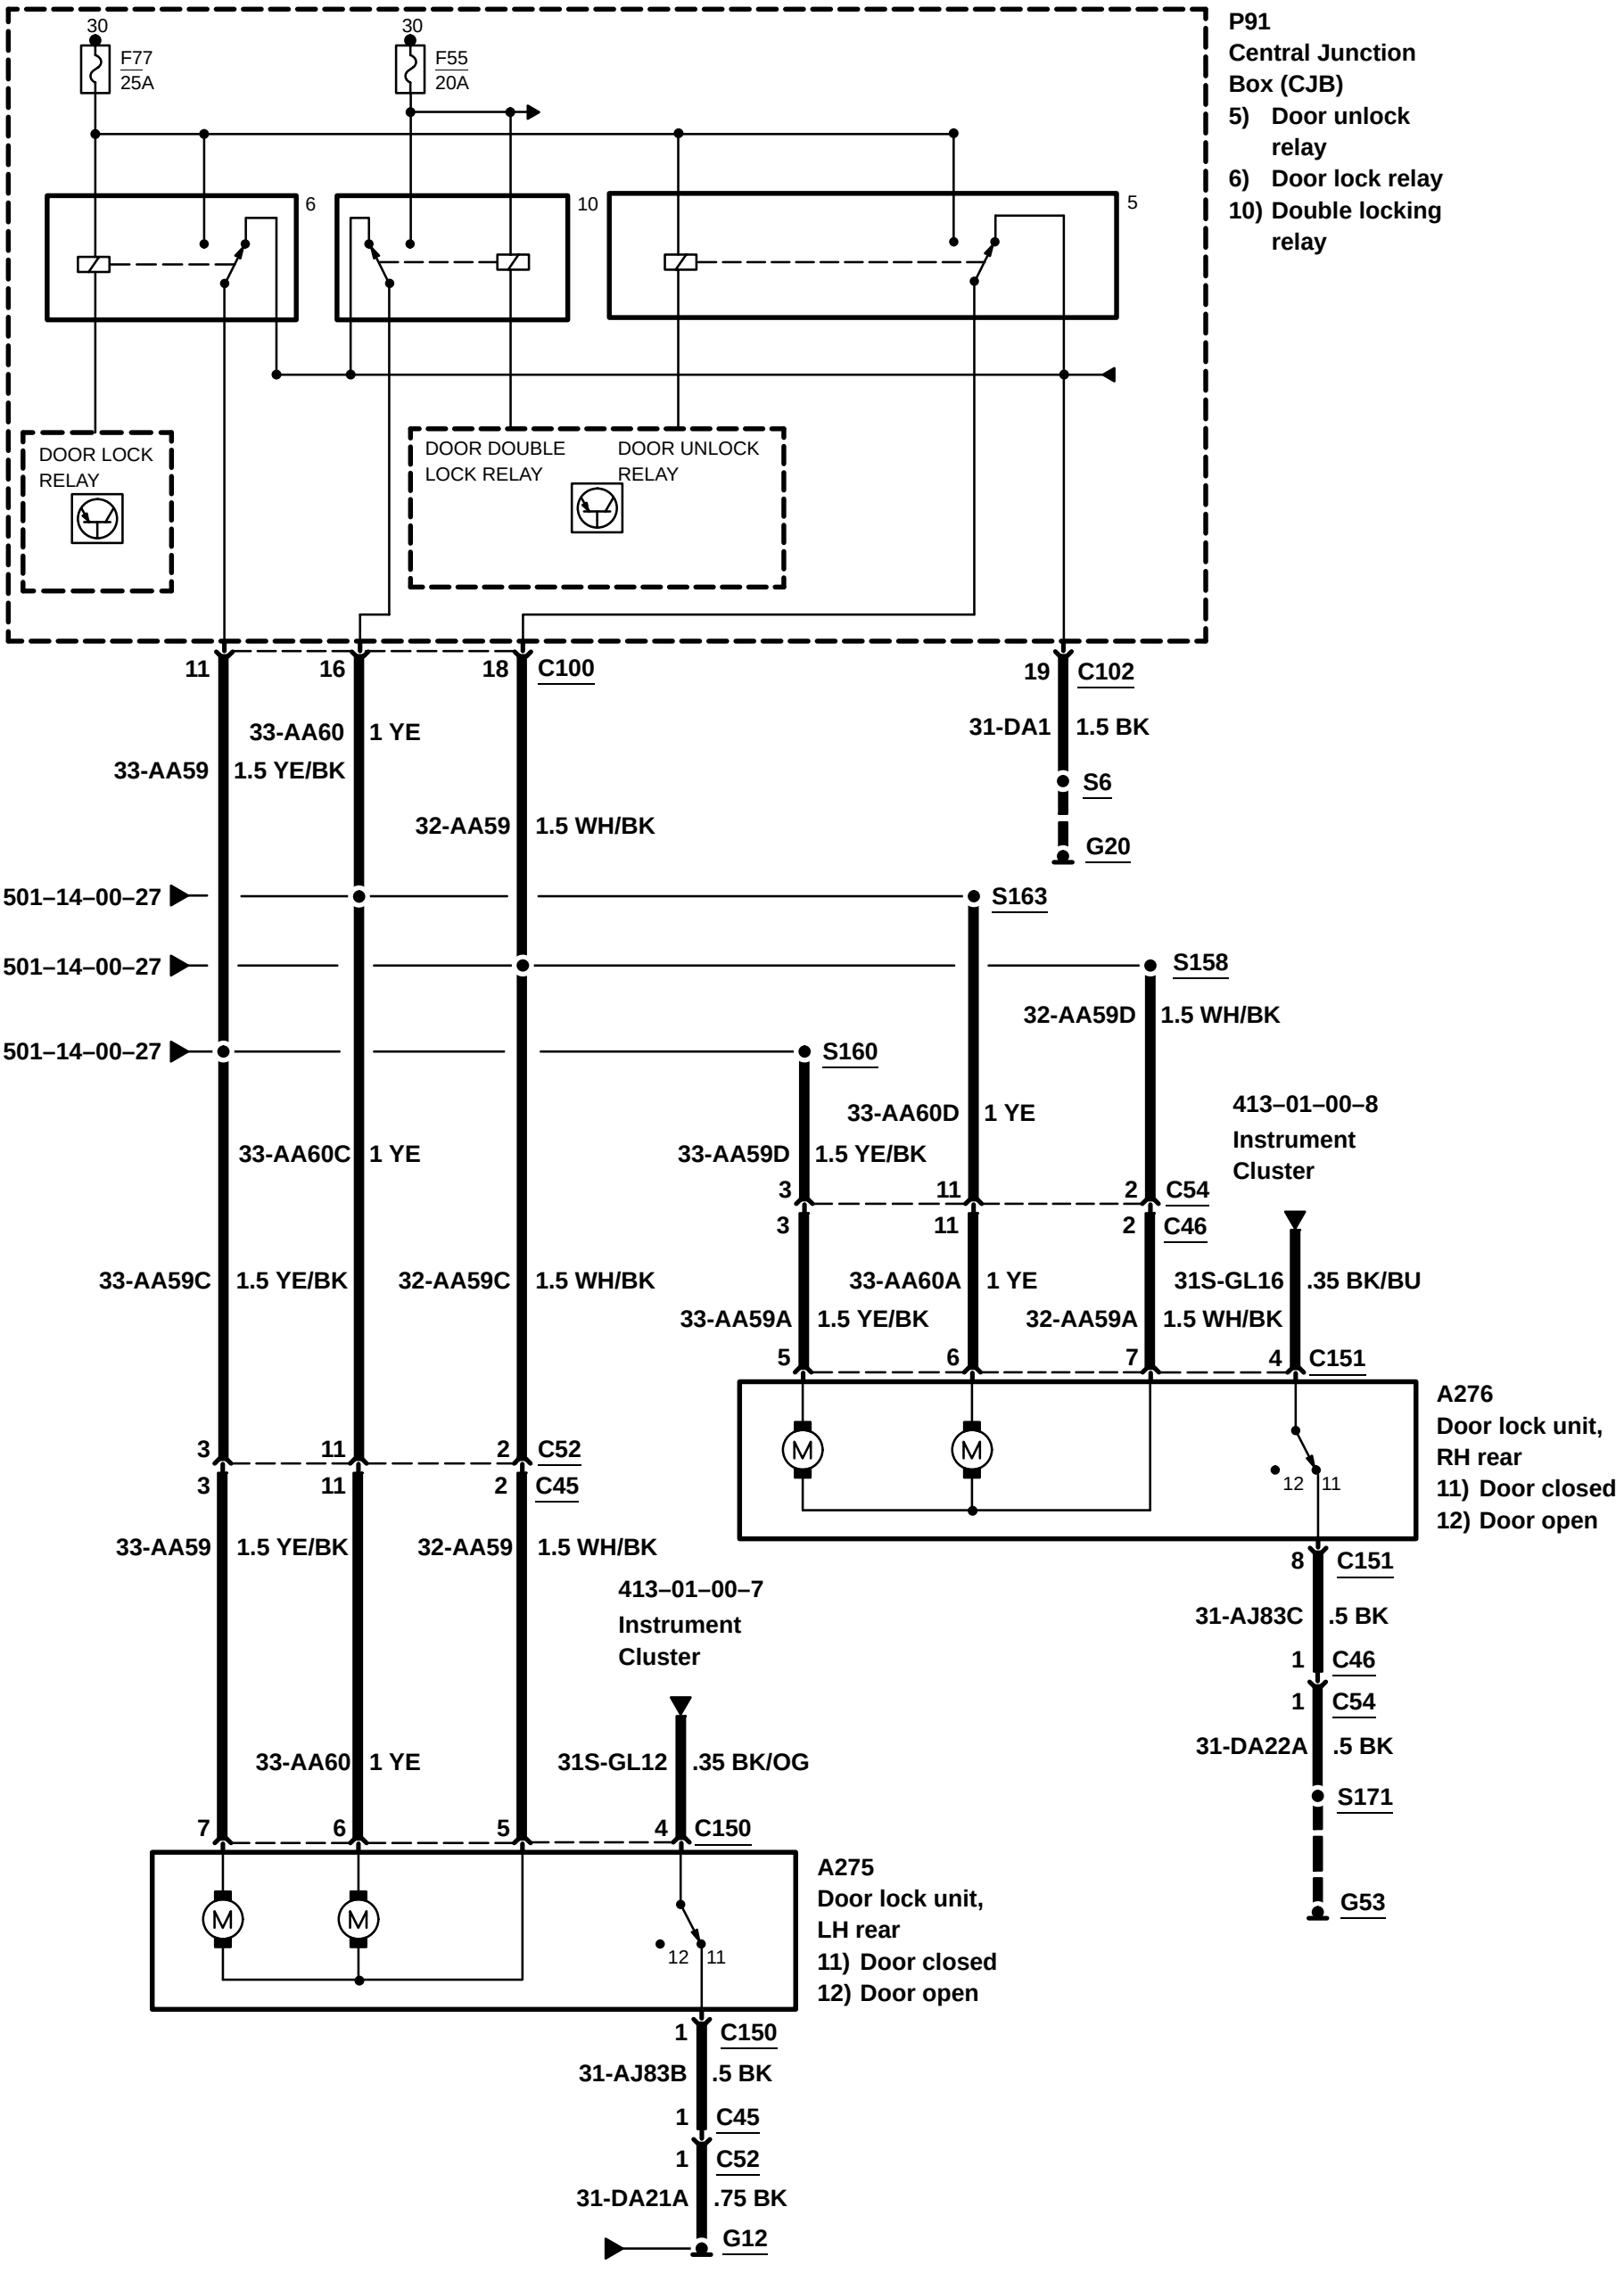


P91
Central Junction Box (CJB)
5) Door unlock relay
6) Door lock relay
10) Double locking relay


Handles, Locks, Latches and Entry Systems – LHD, with central locking, with front power windows

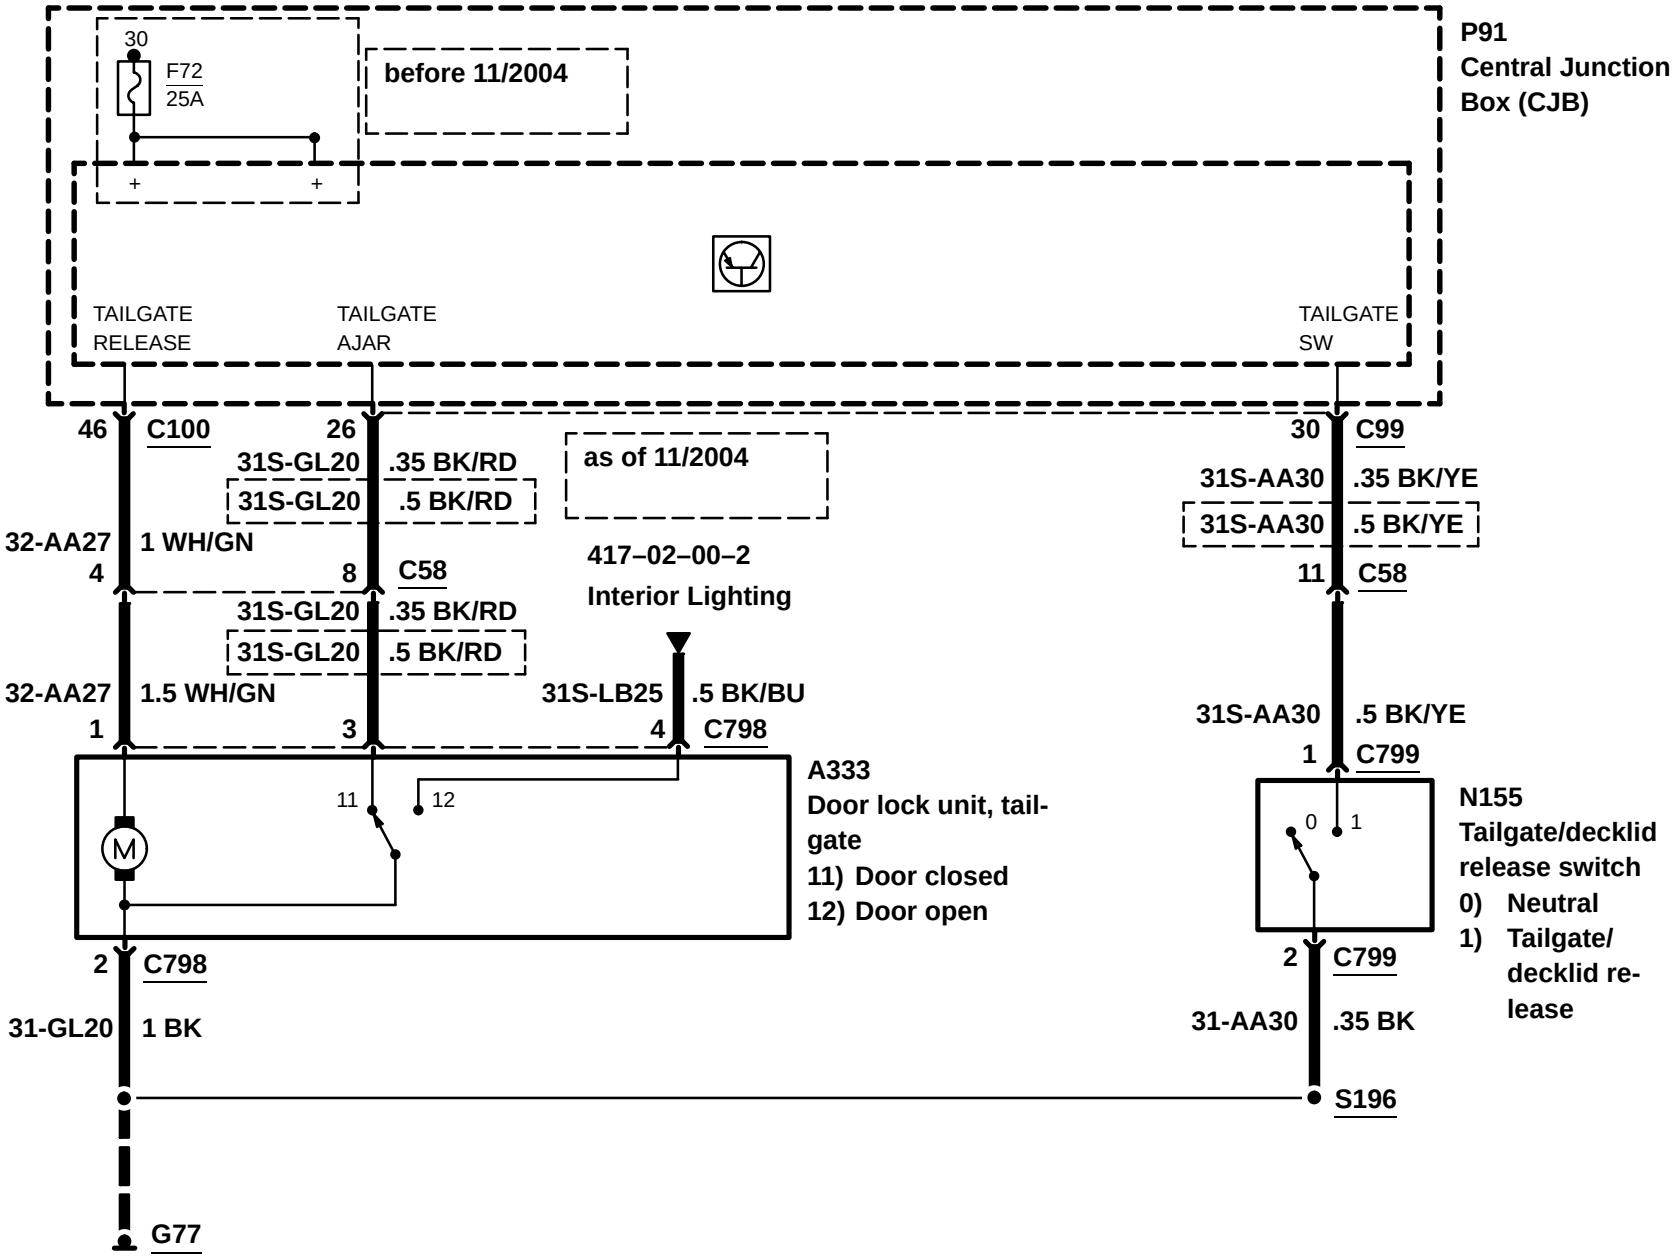

Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows

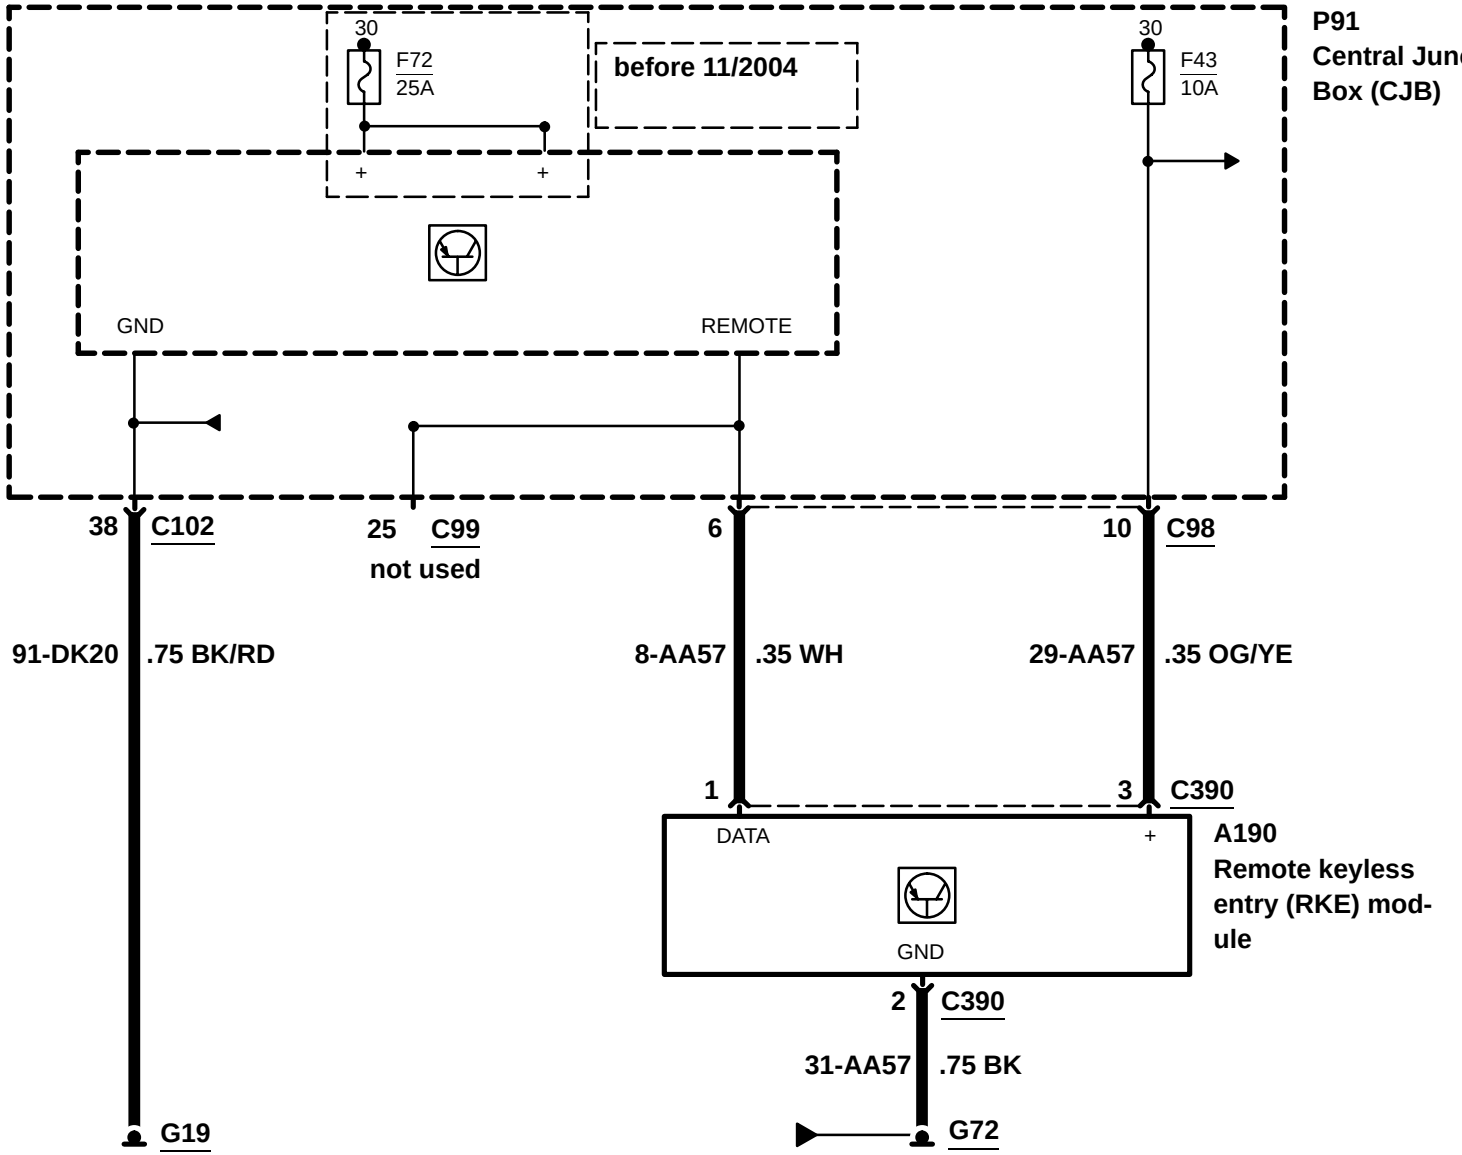


Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows

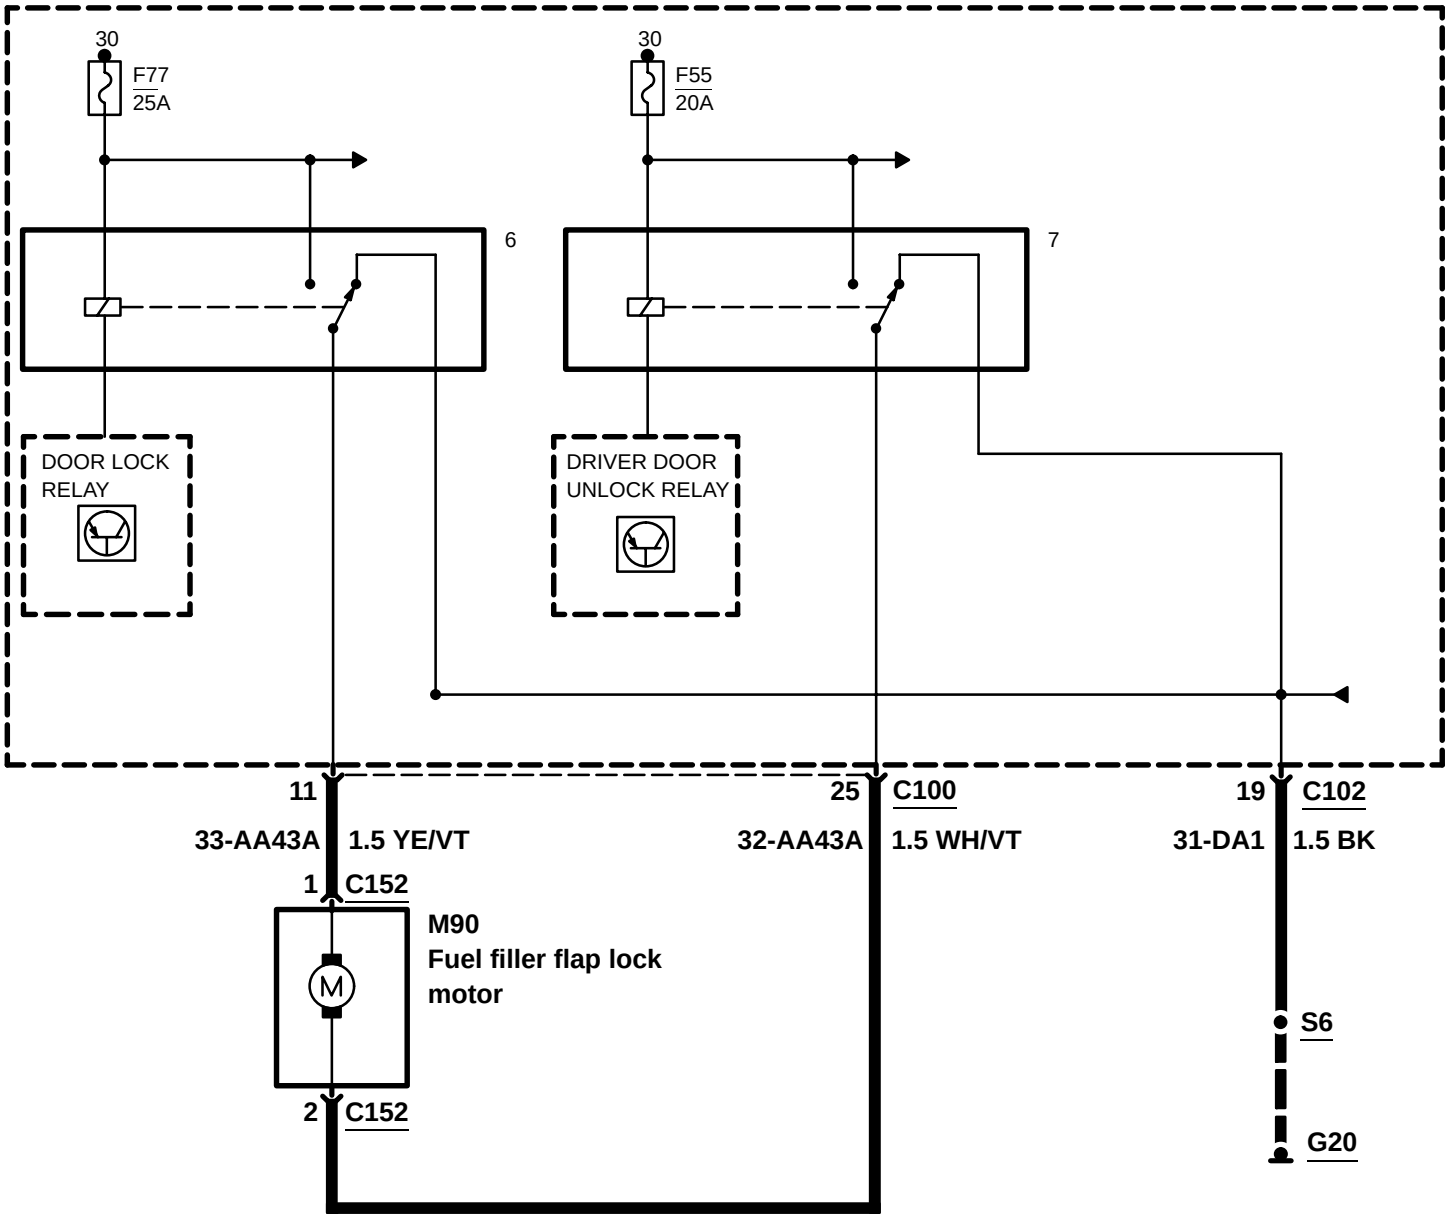


P91
Central Junction Box (CJB)
6) Door lock relay
7) Driver door unlock relay

M90
Fuel filler flap lock motor


Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows

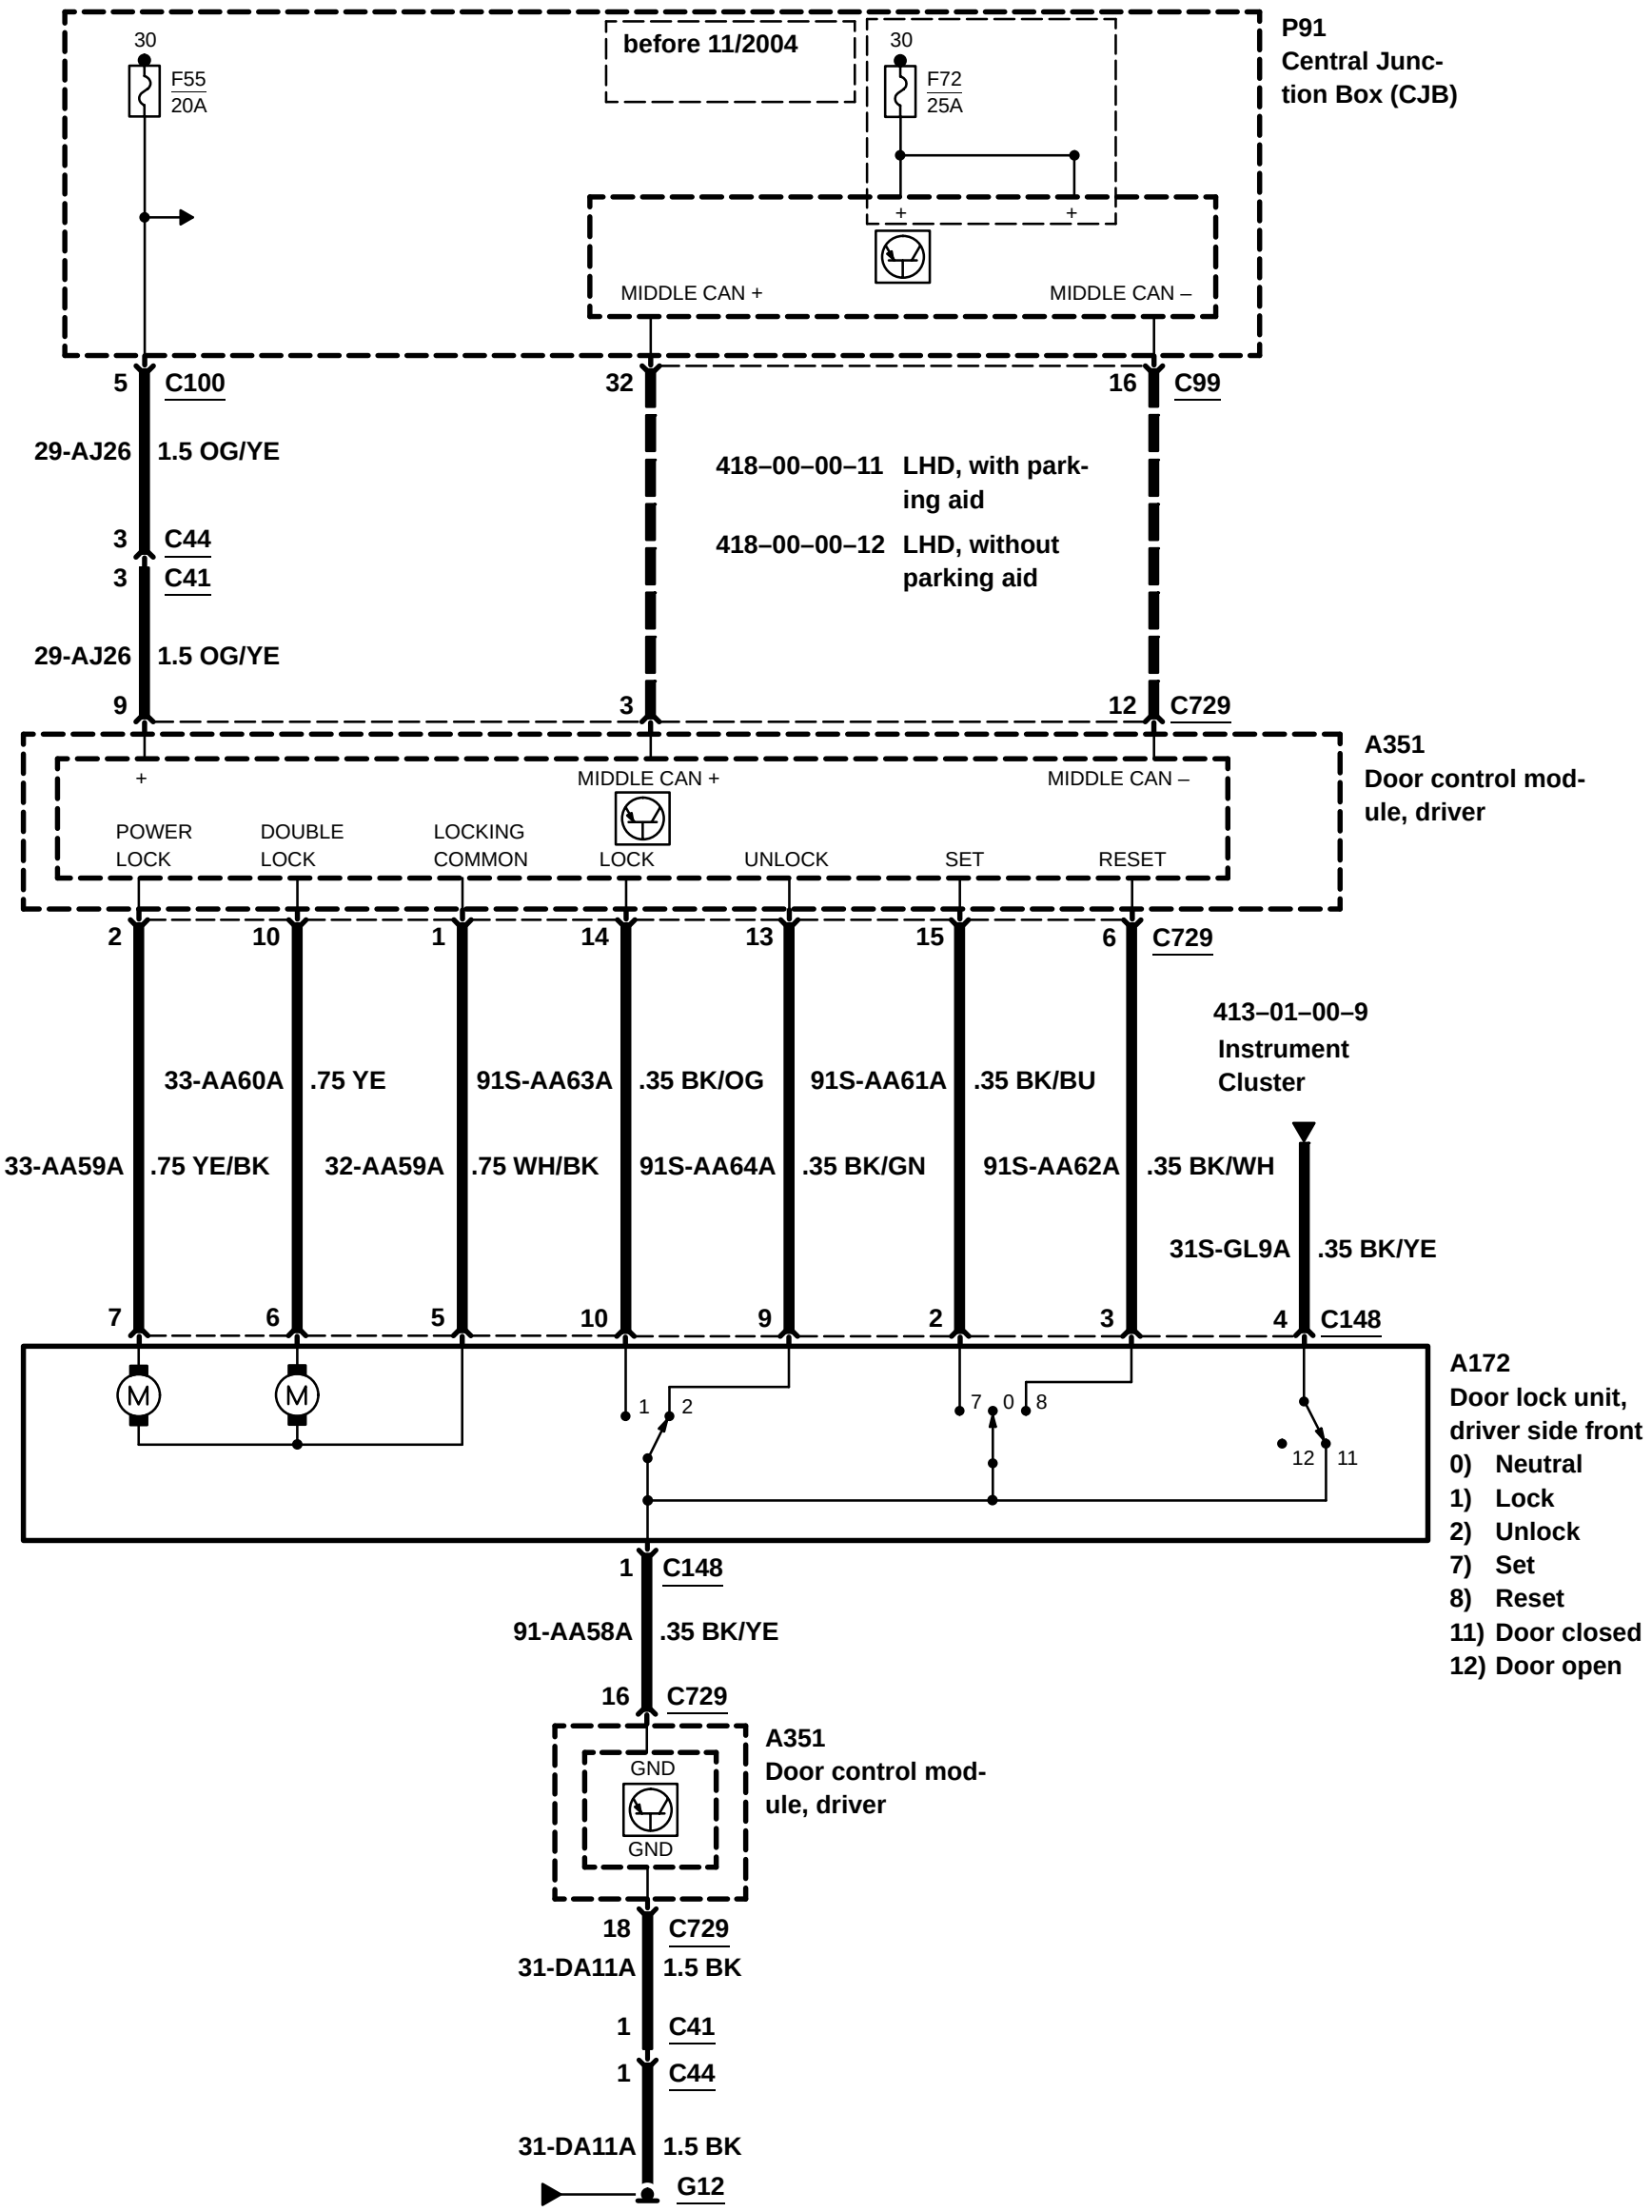


Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows

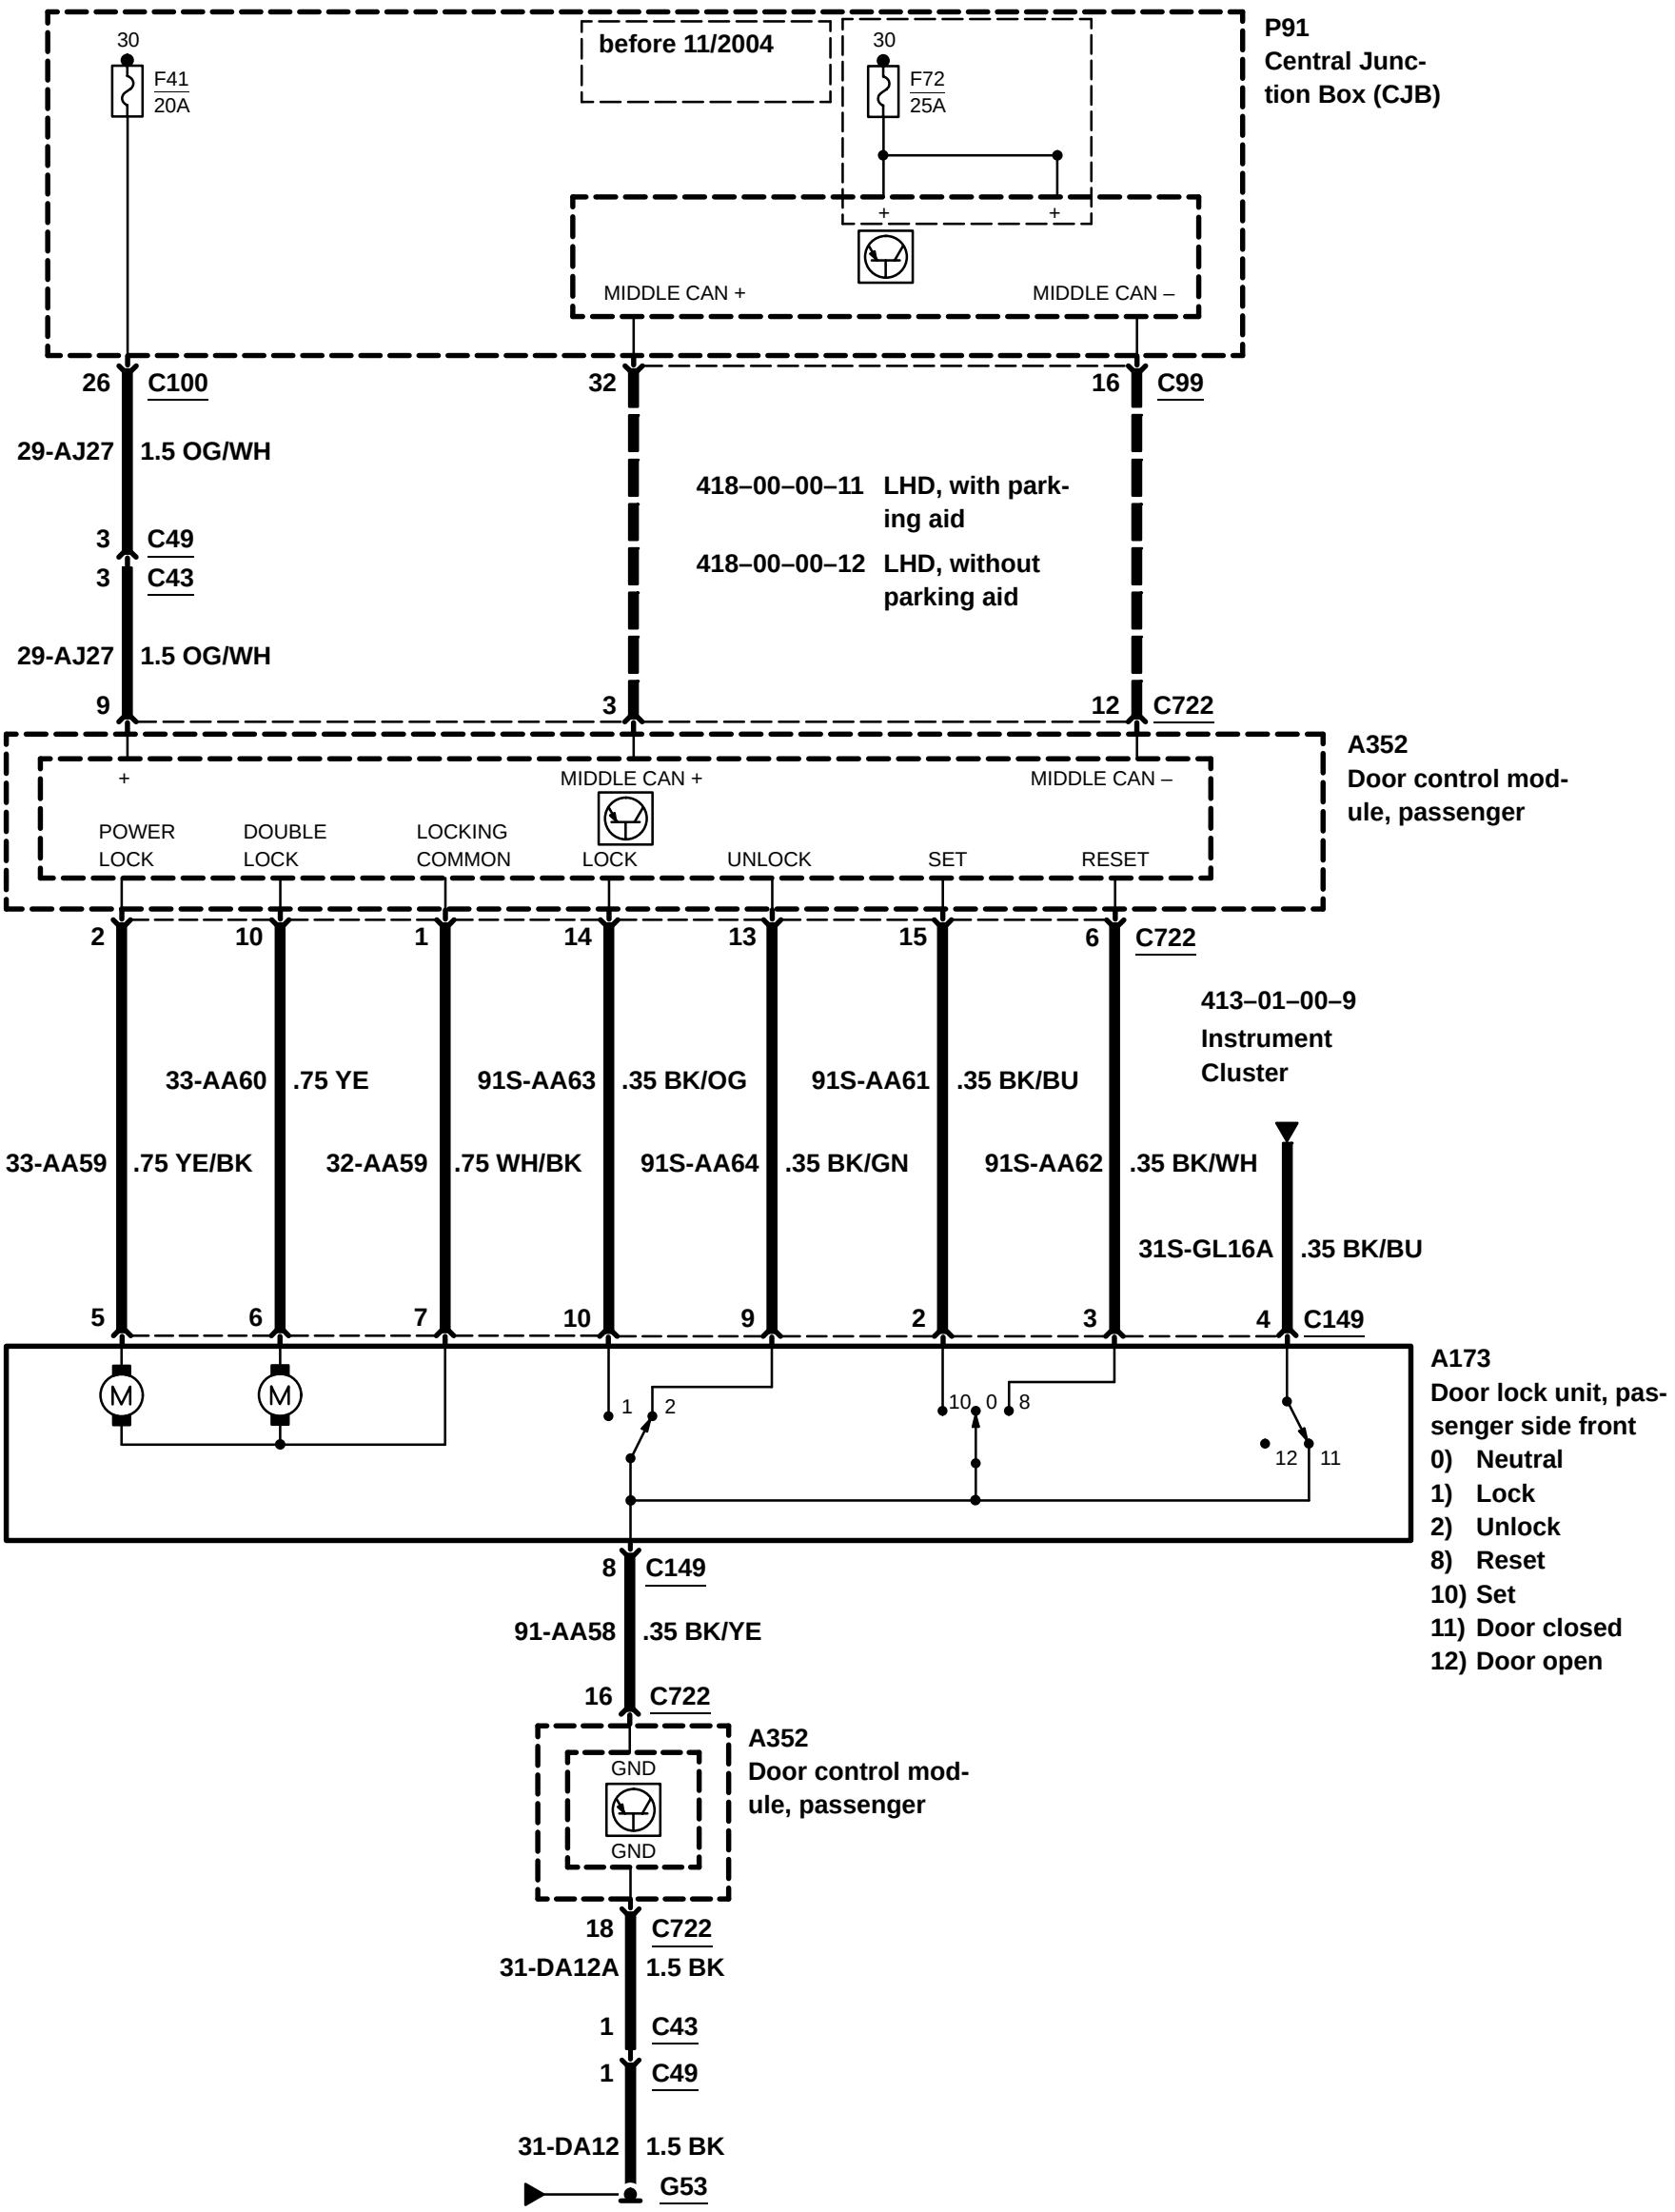


Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows

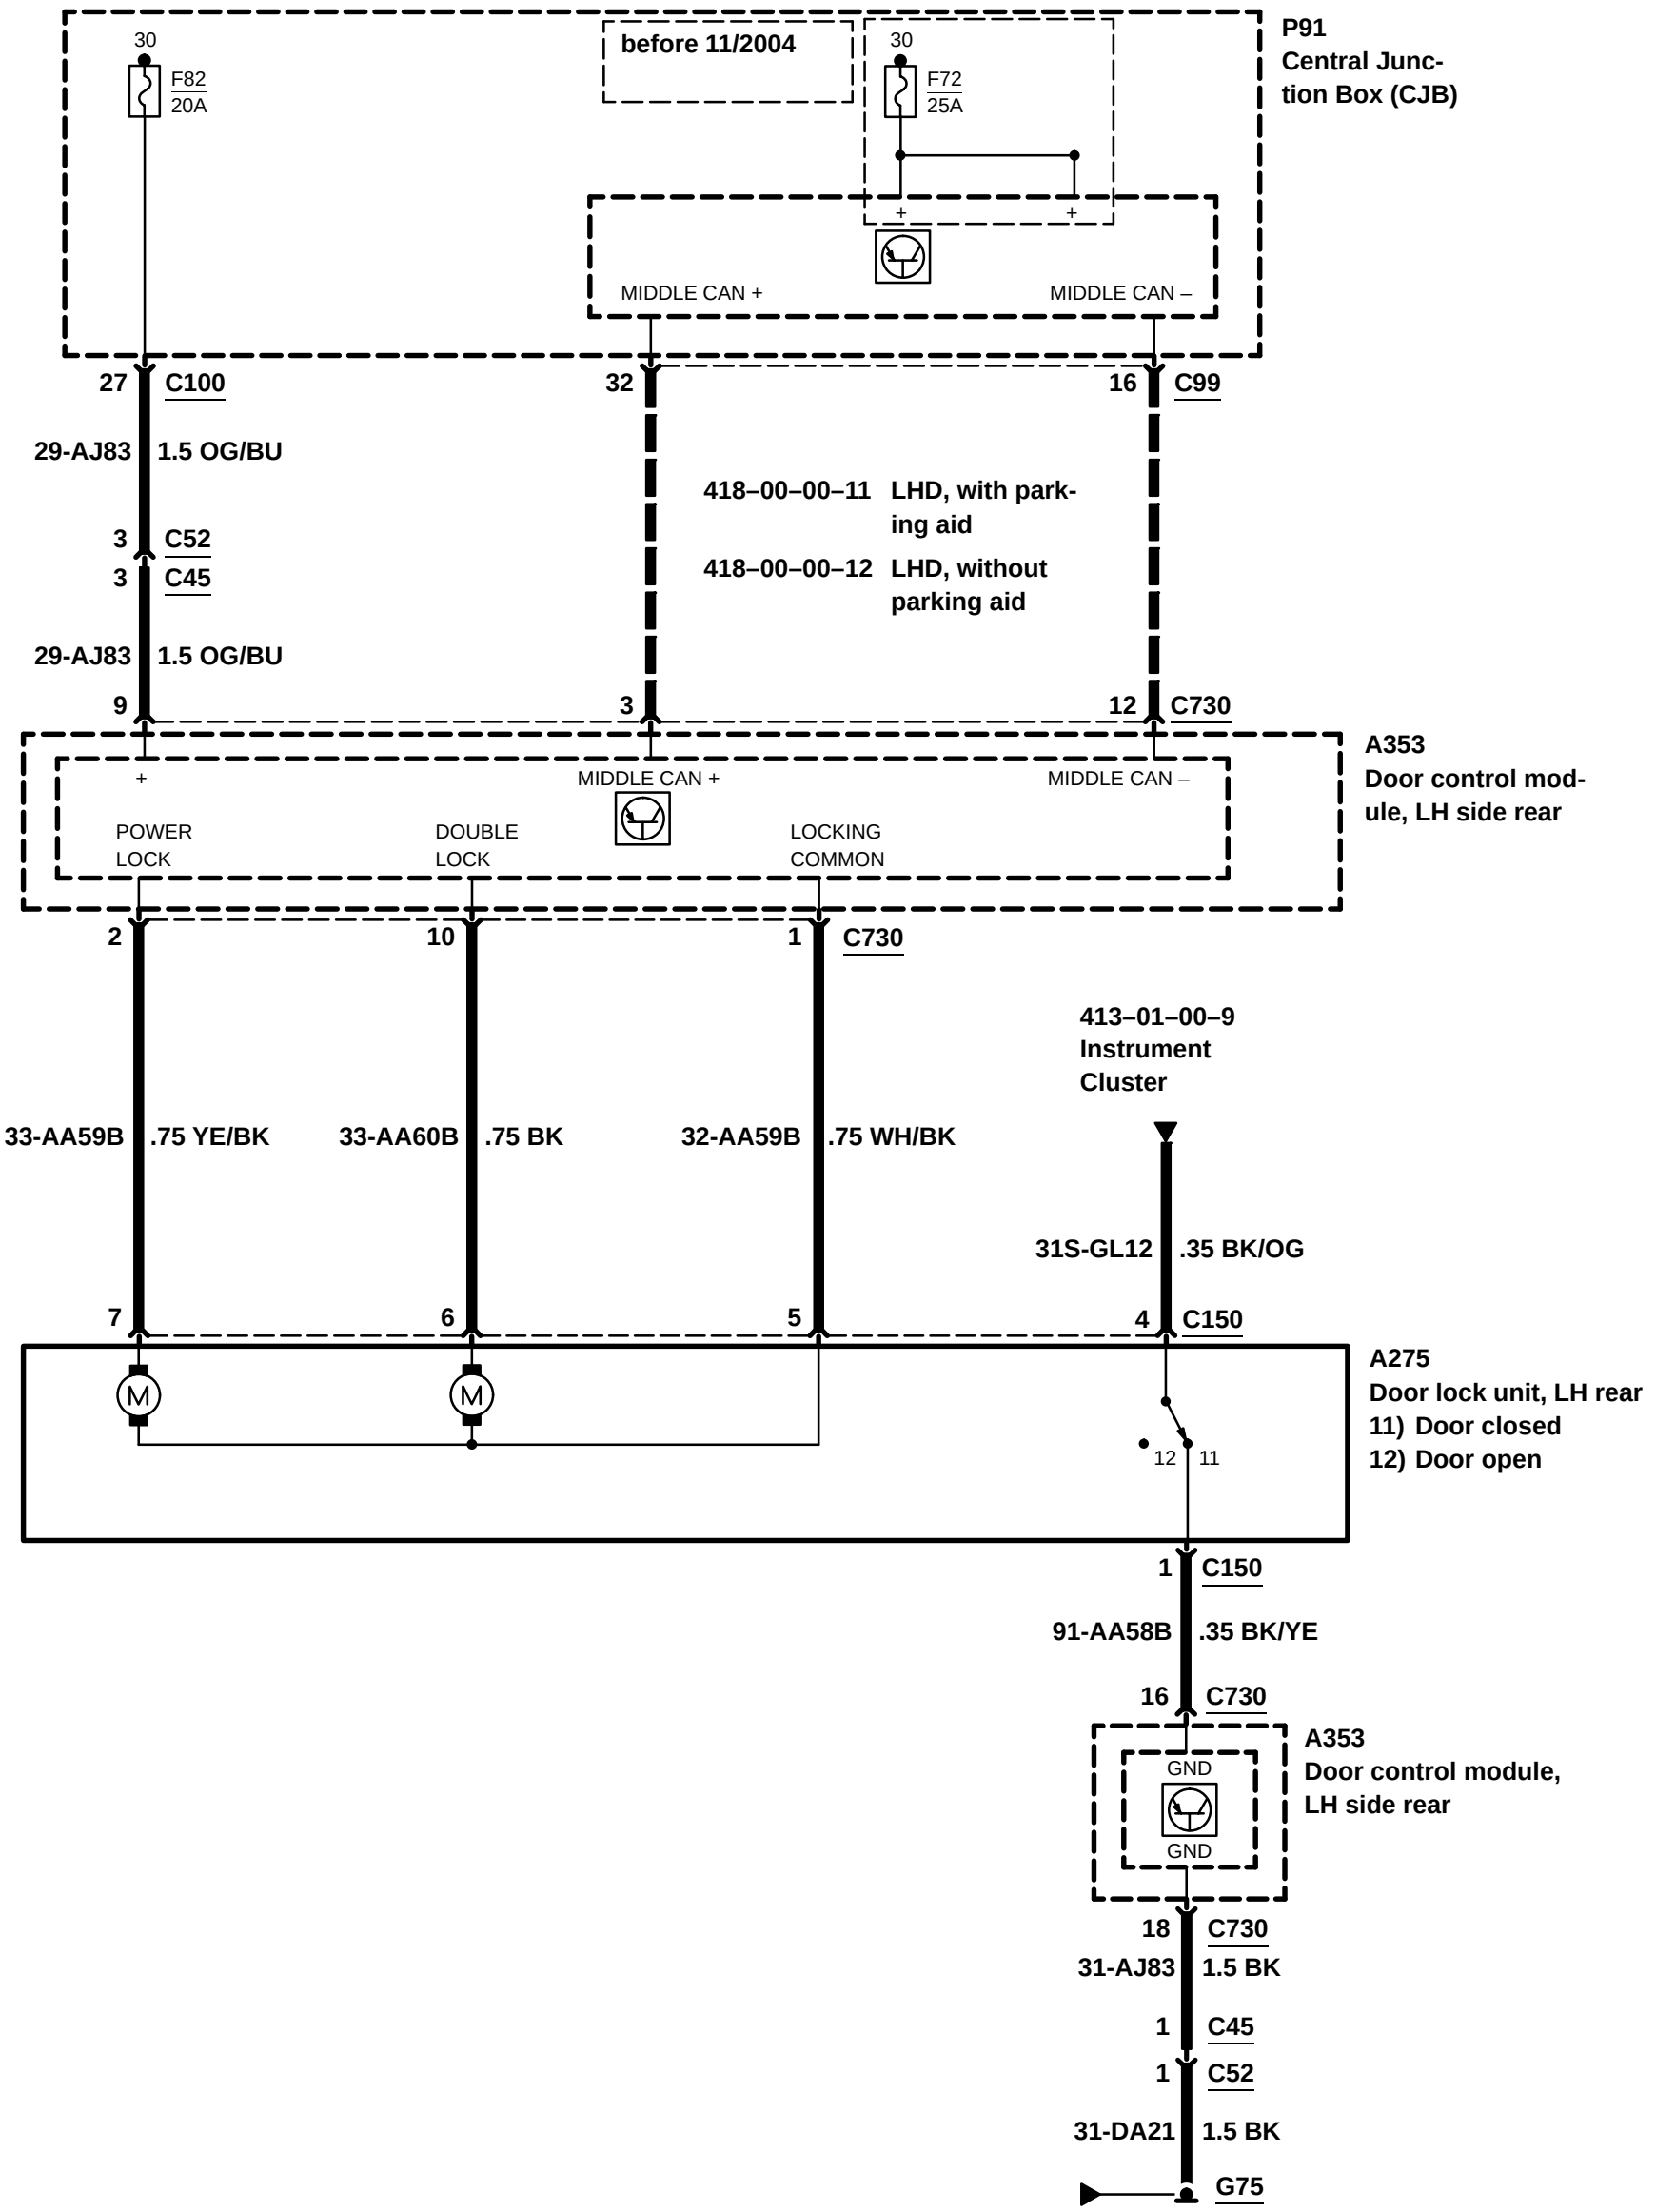


Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows

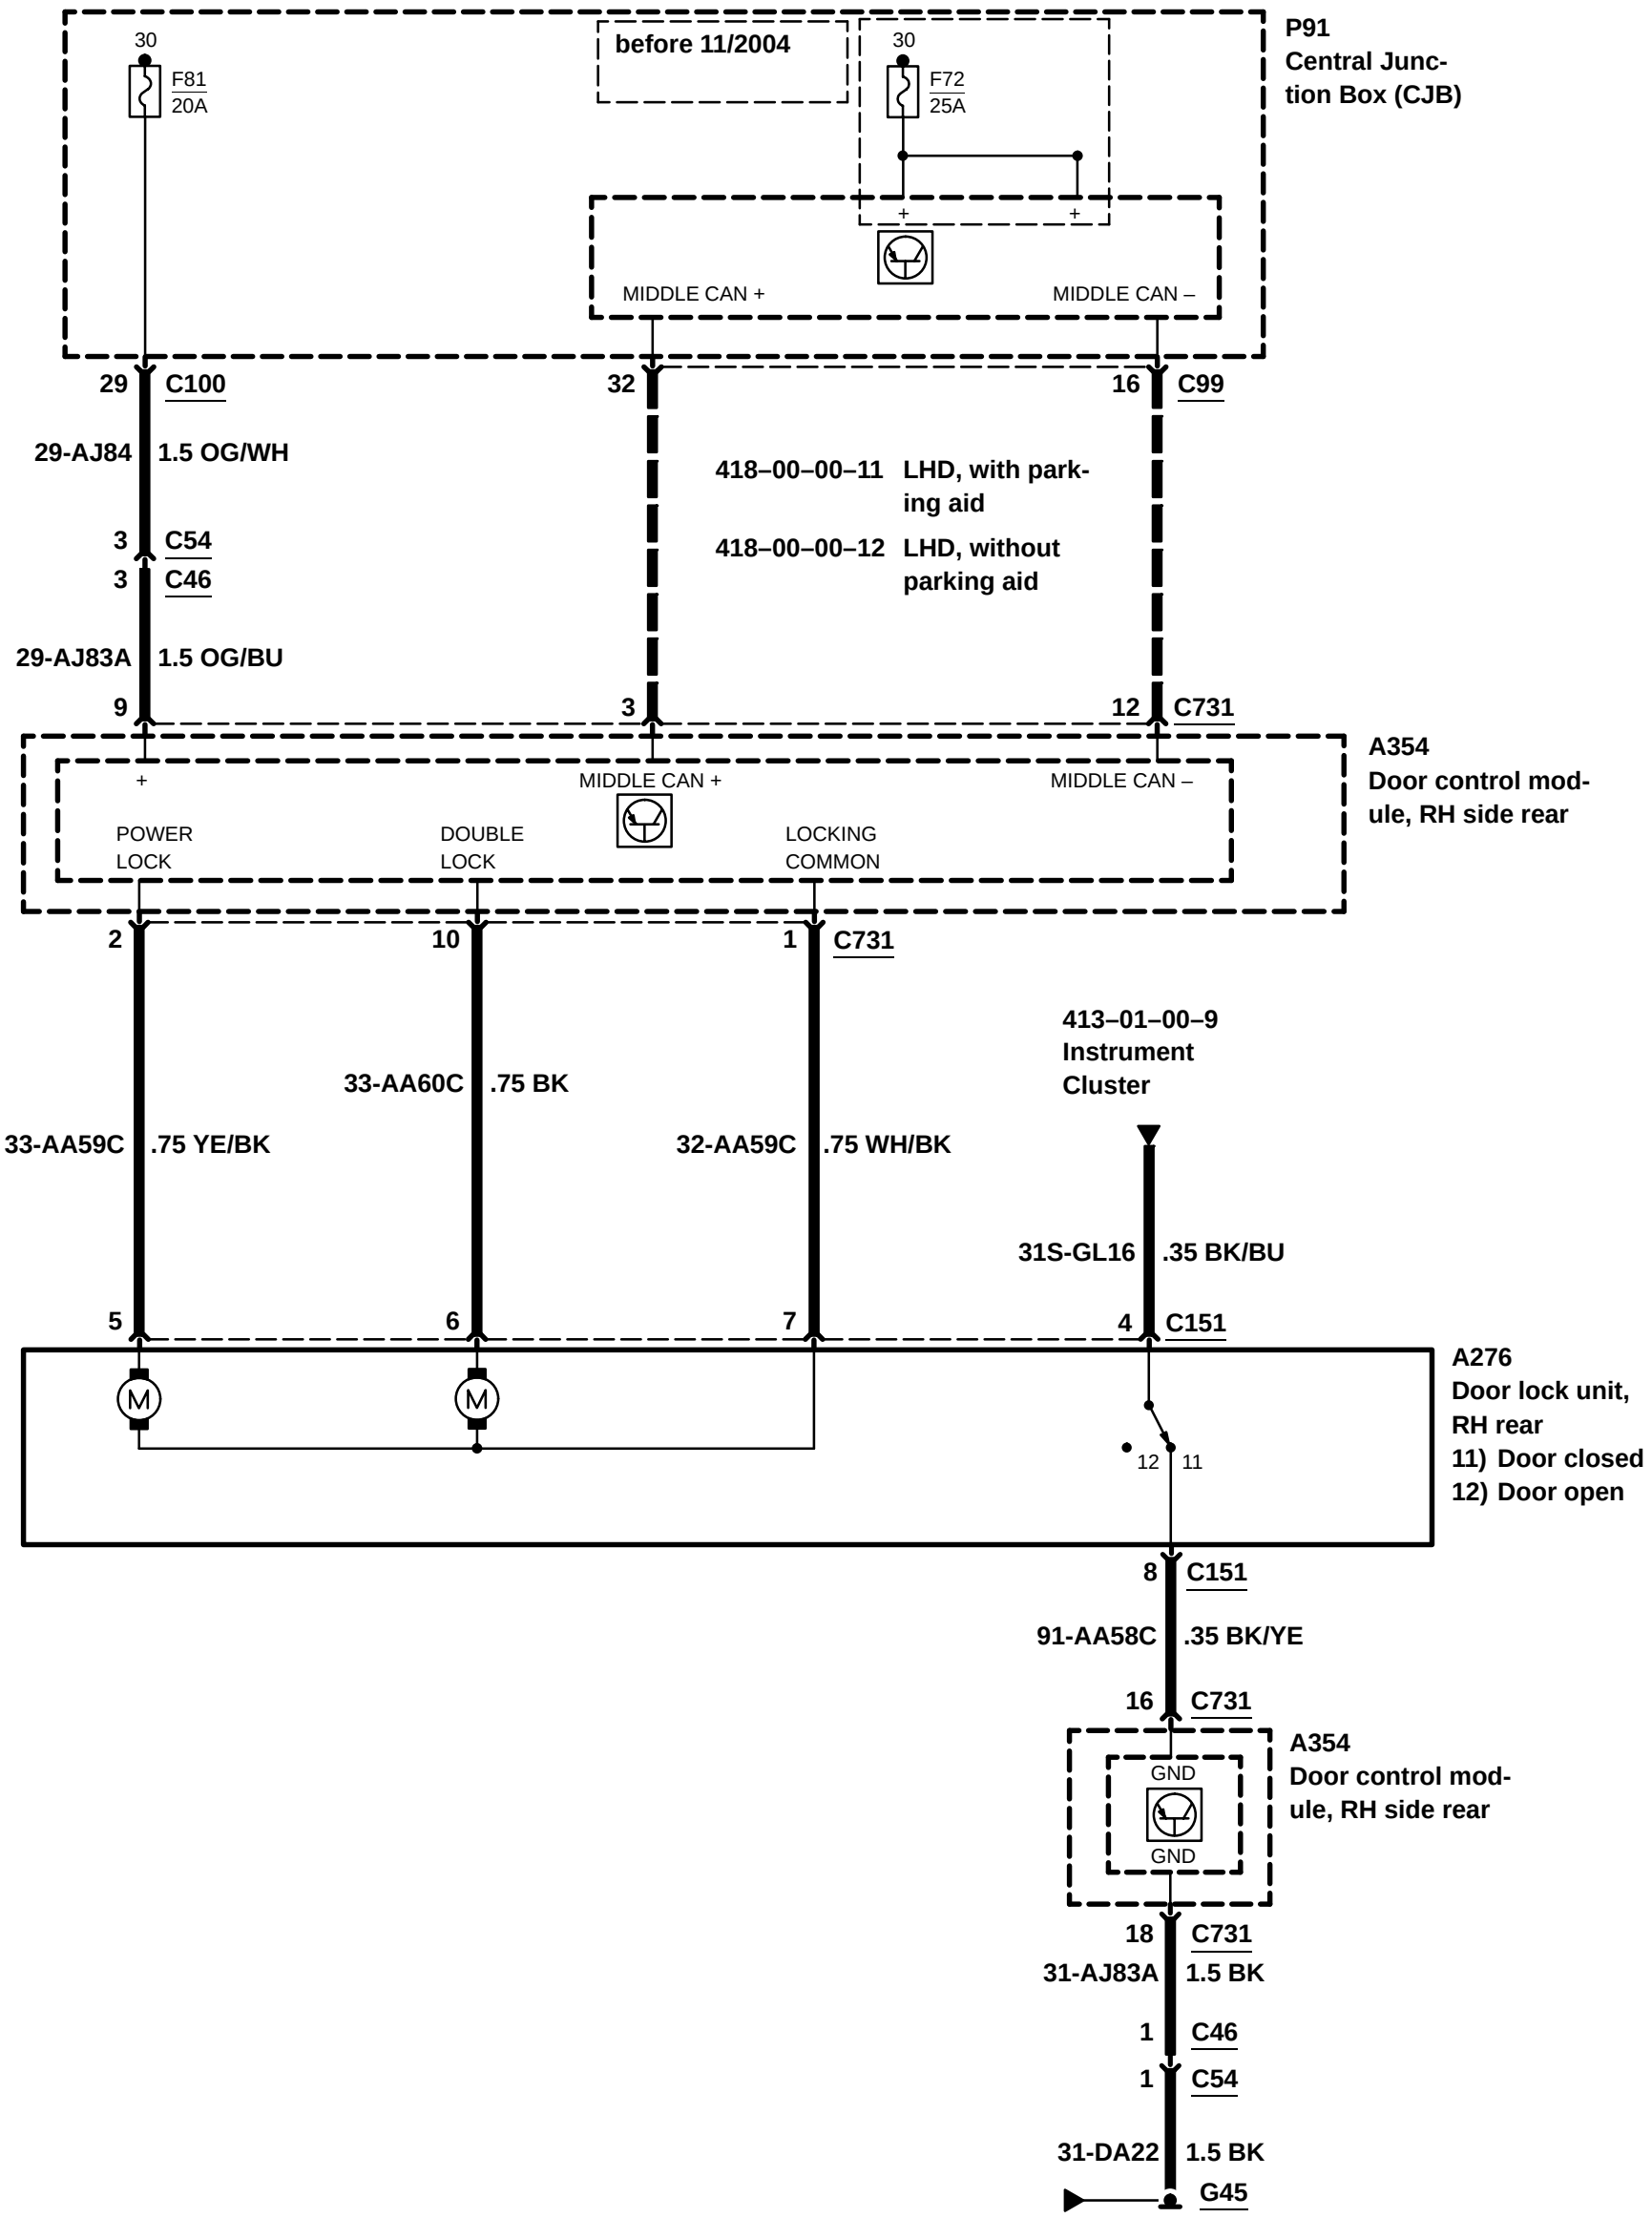


Handles, Locks, Latches and Entry Systems – LHD, with double locking, with front and rear power windows

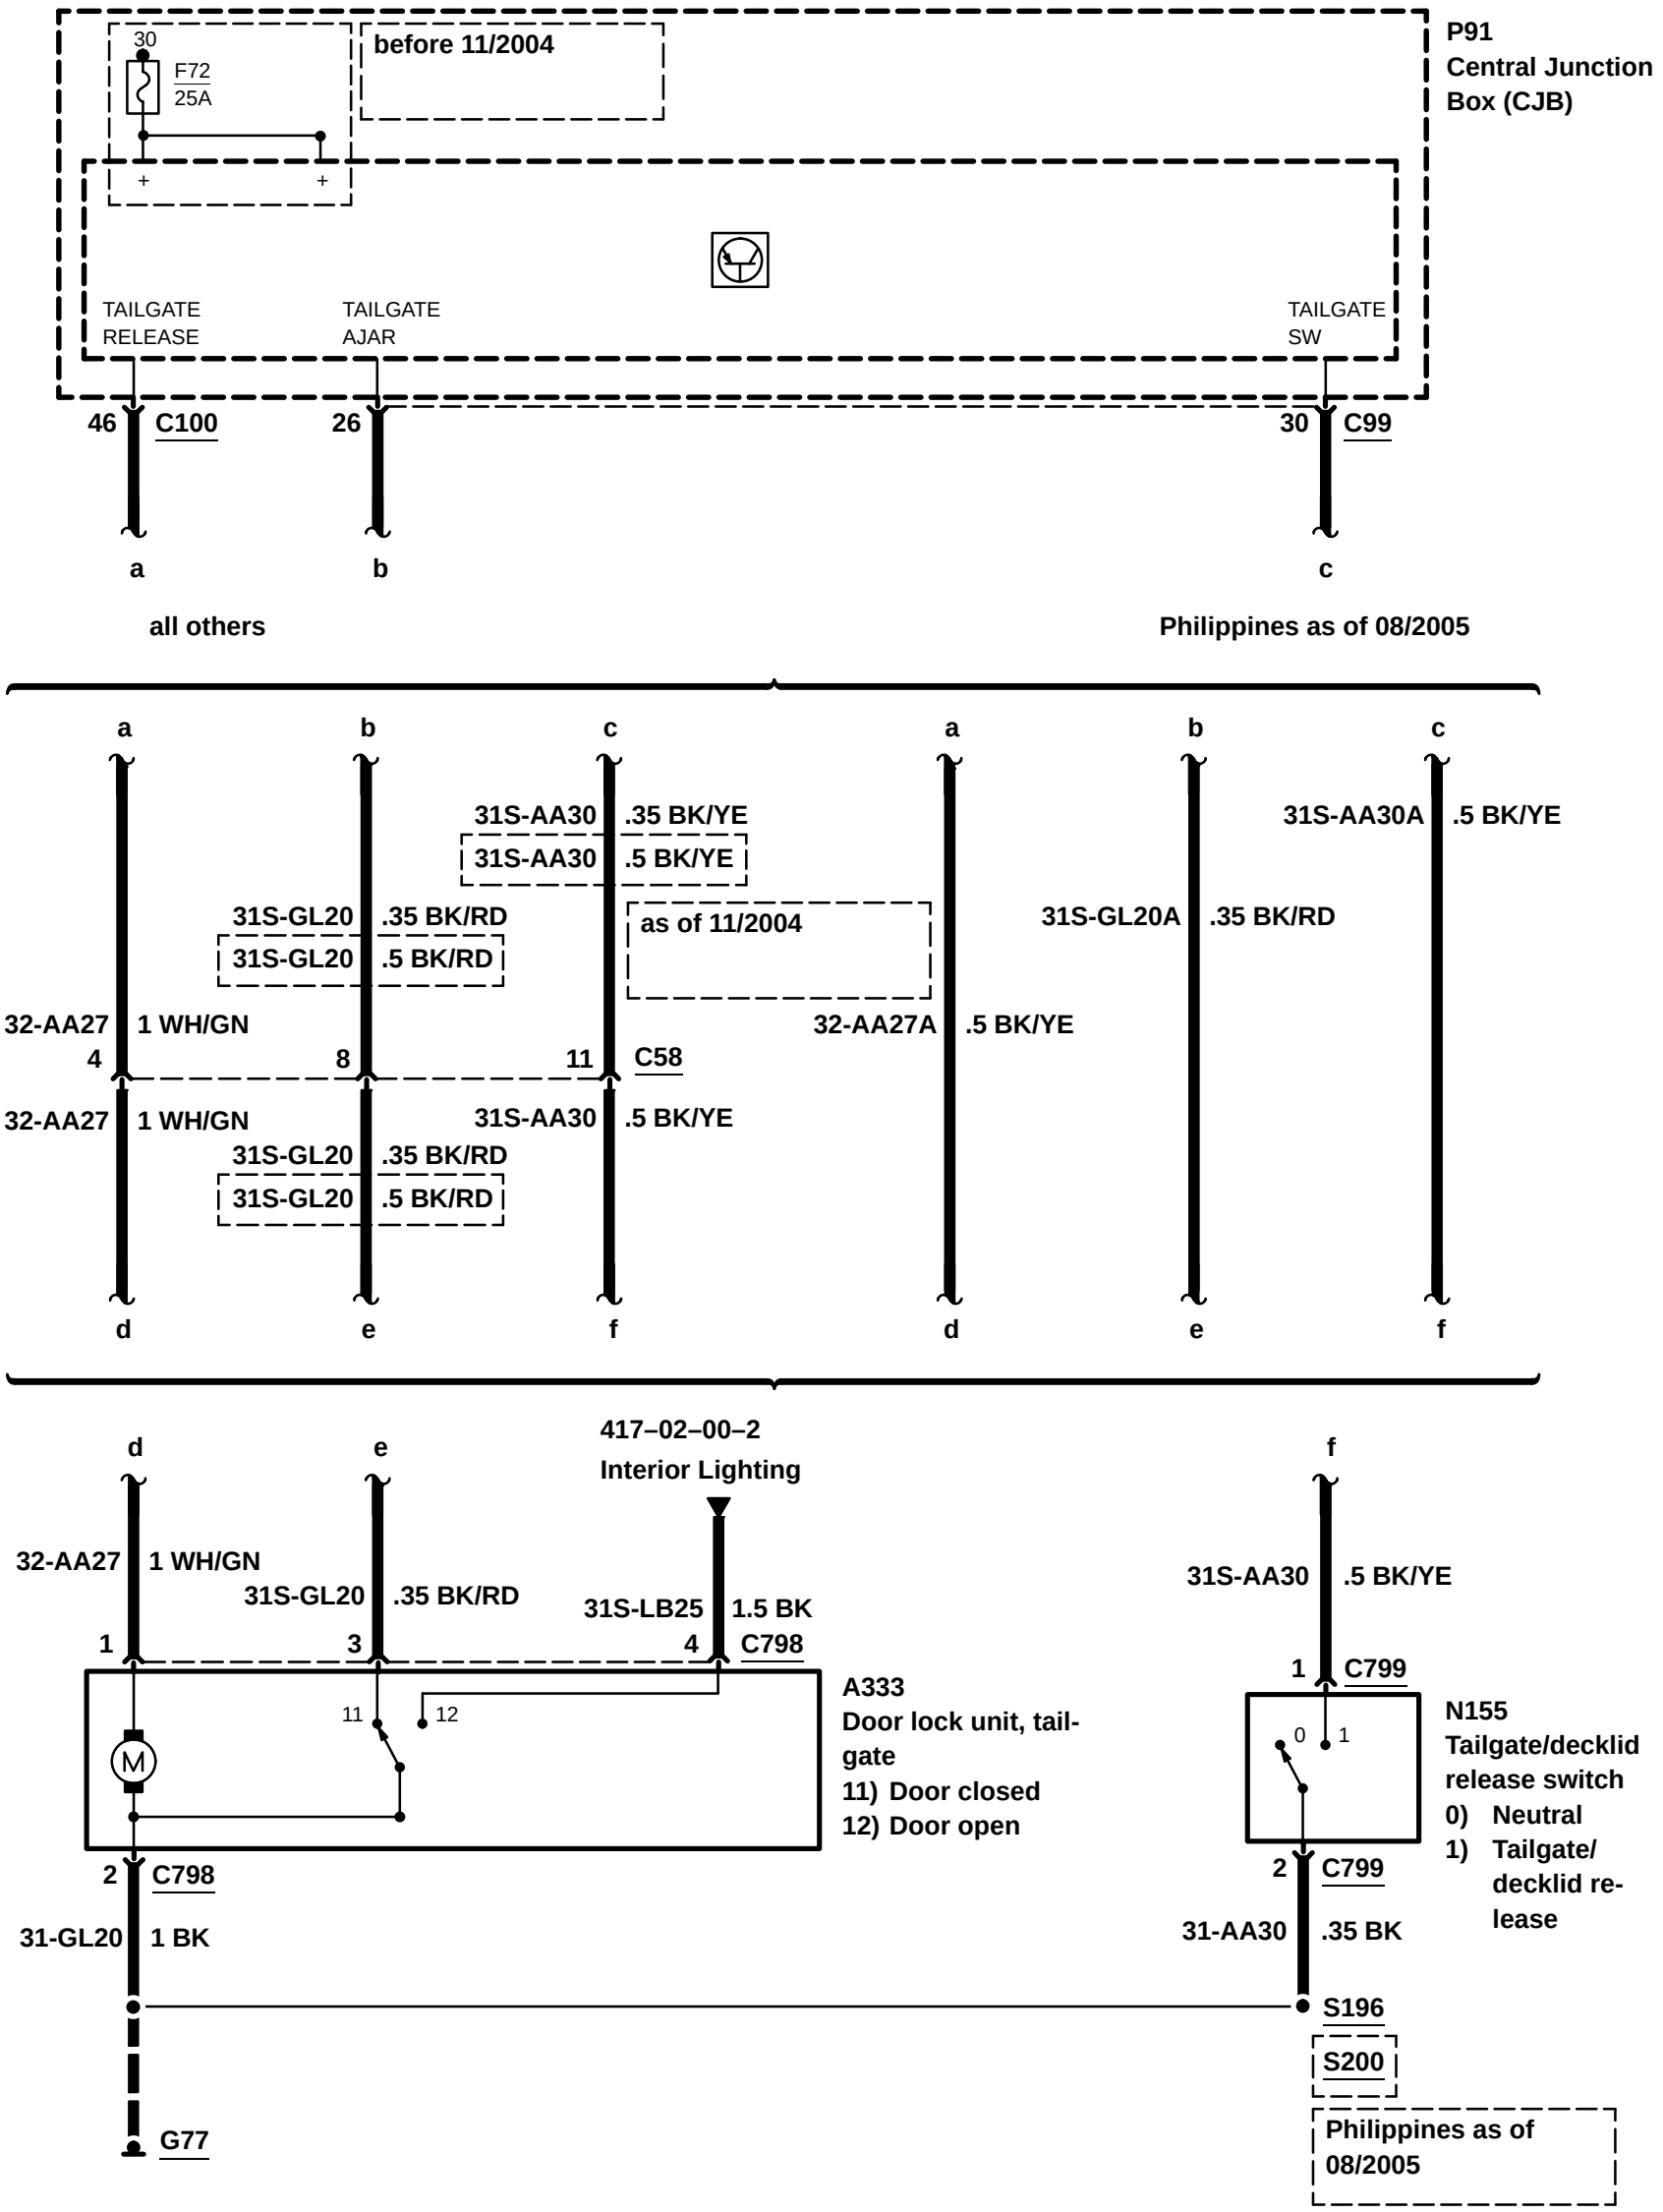

Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front power windows

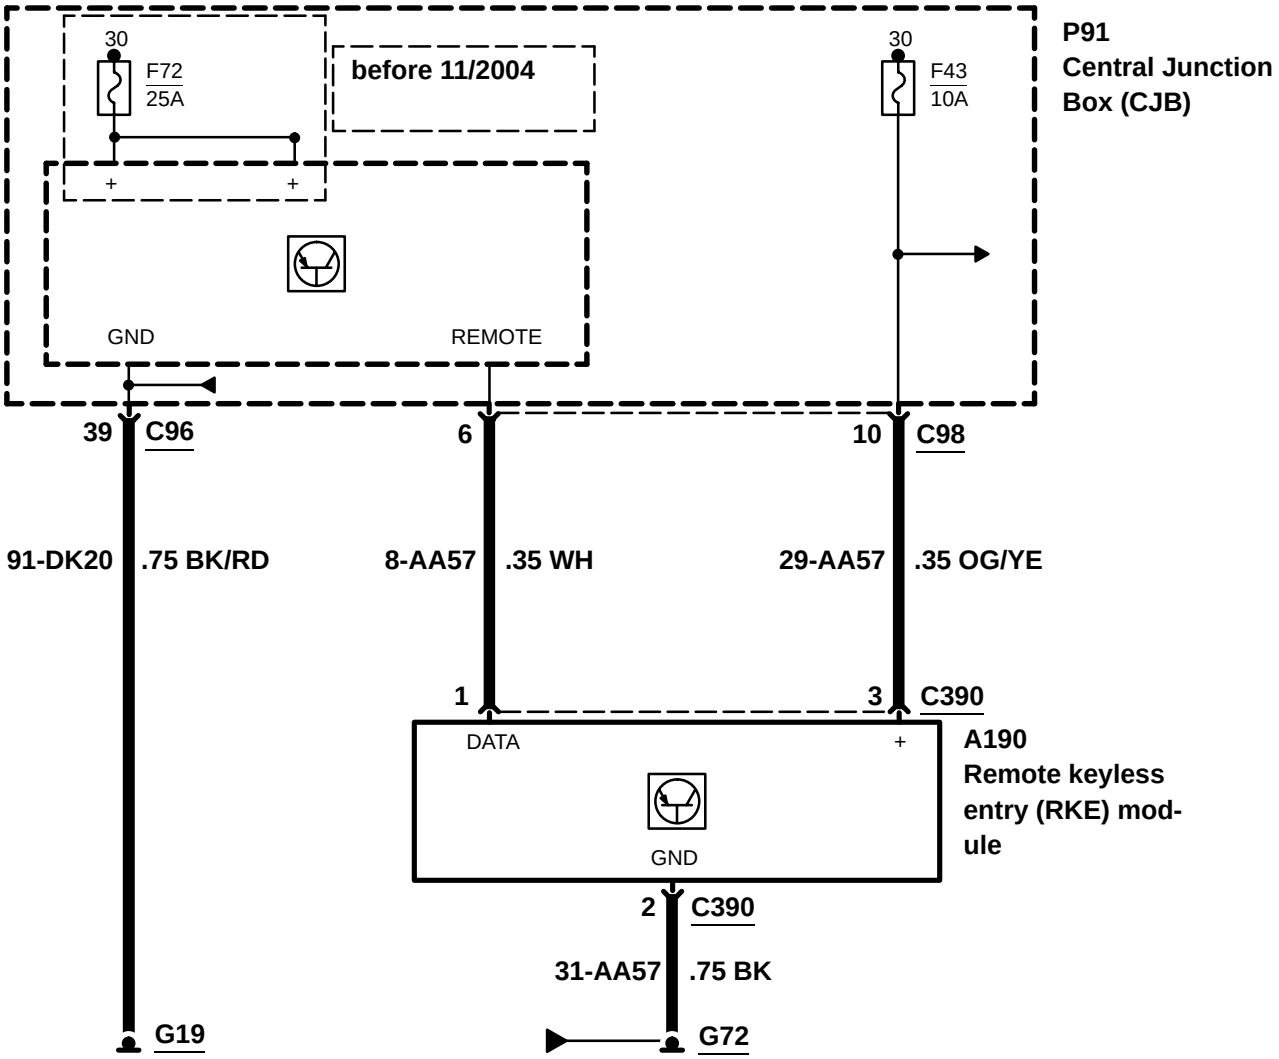


Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front power windows

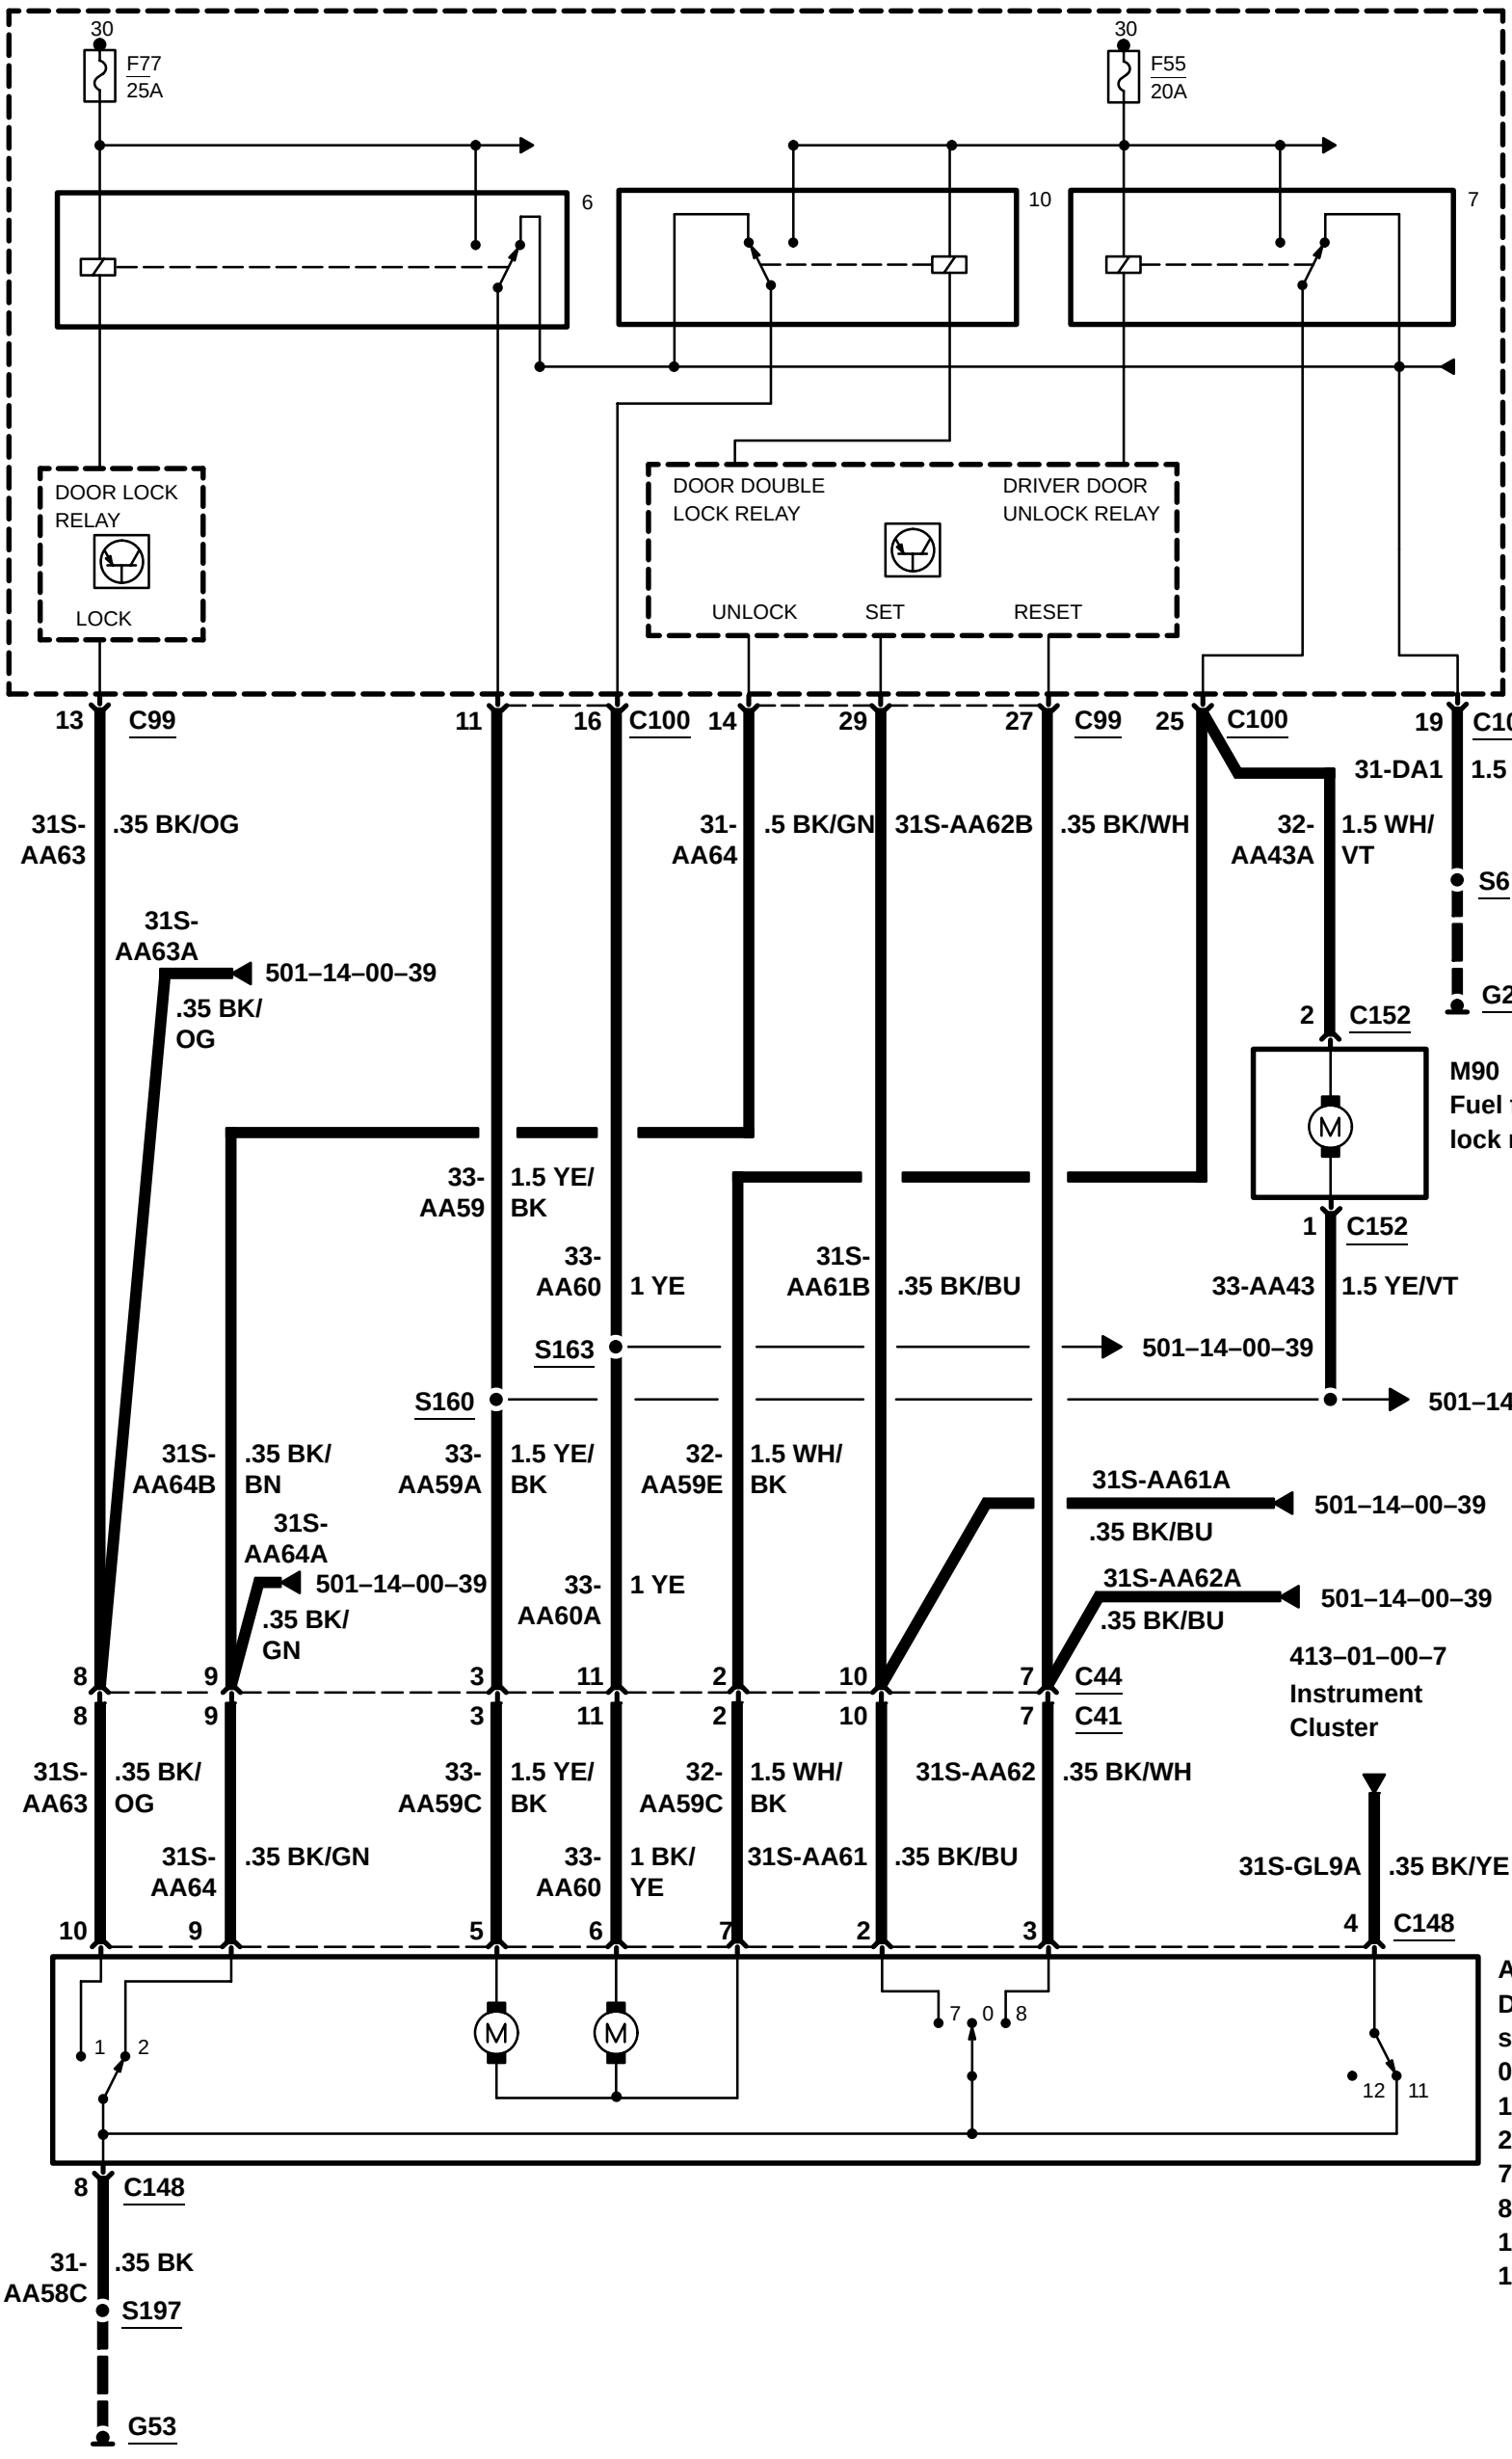


P91
Central Junction Box (CJB)
6) Door lock relay
7) Driver door unlock relay
10) Double locking relay

A172
Door lock unit, driver side front
0) Neutral
1) Lock
2) Unlock
7) Set
8) Reset
11) Door closed
12) Door open

Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front power windows

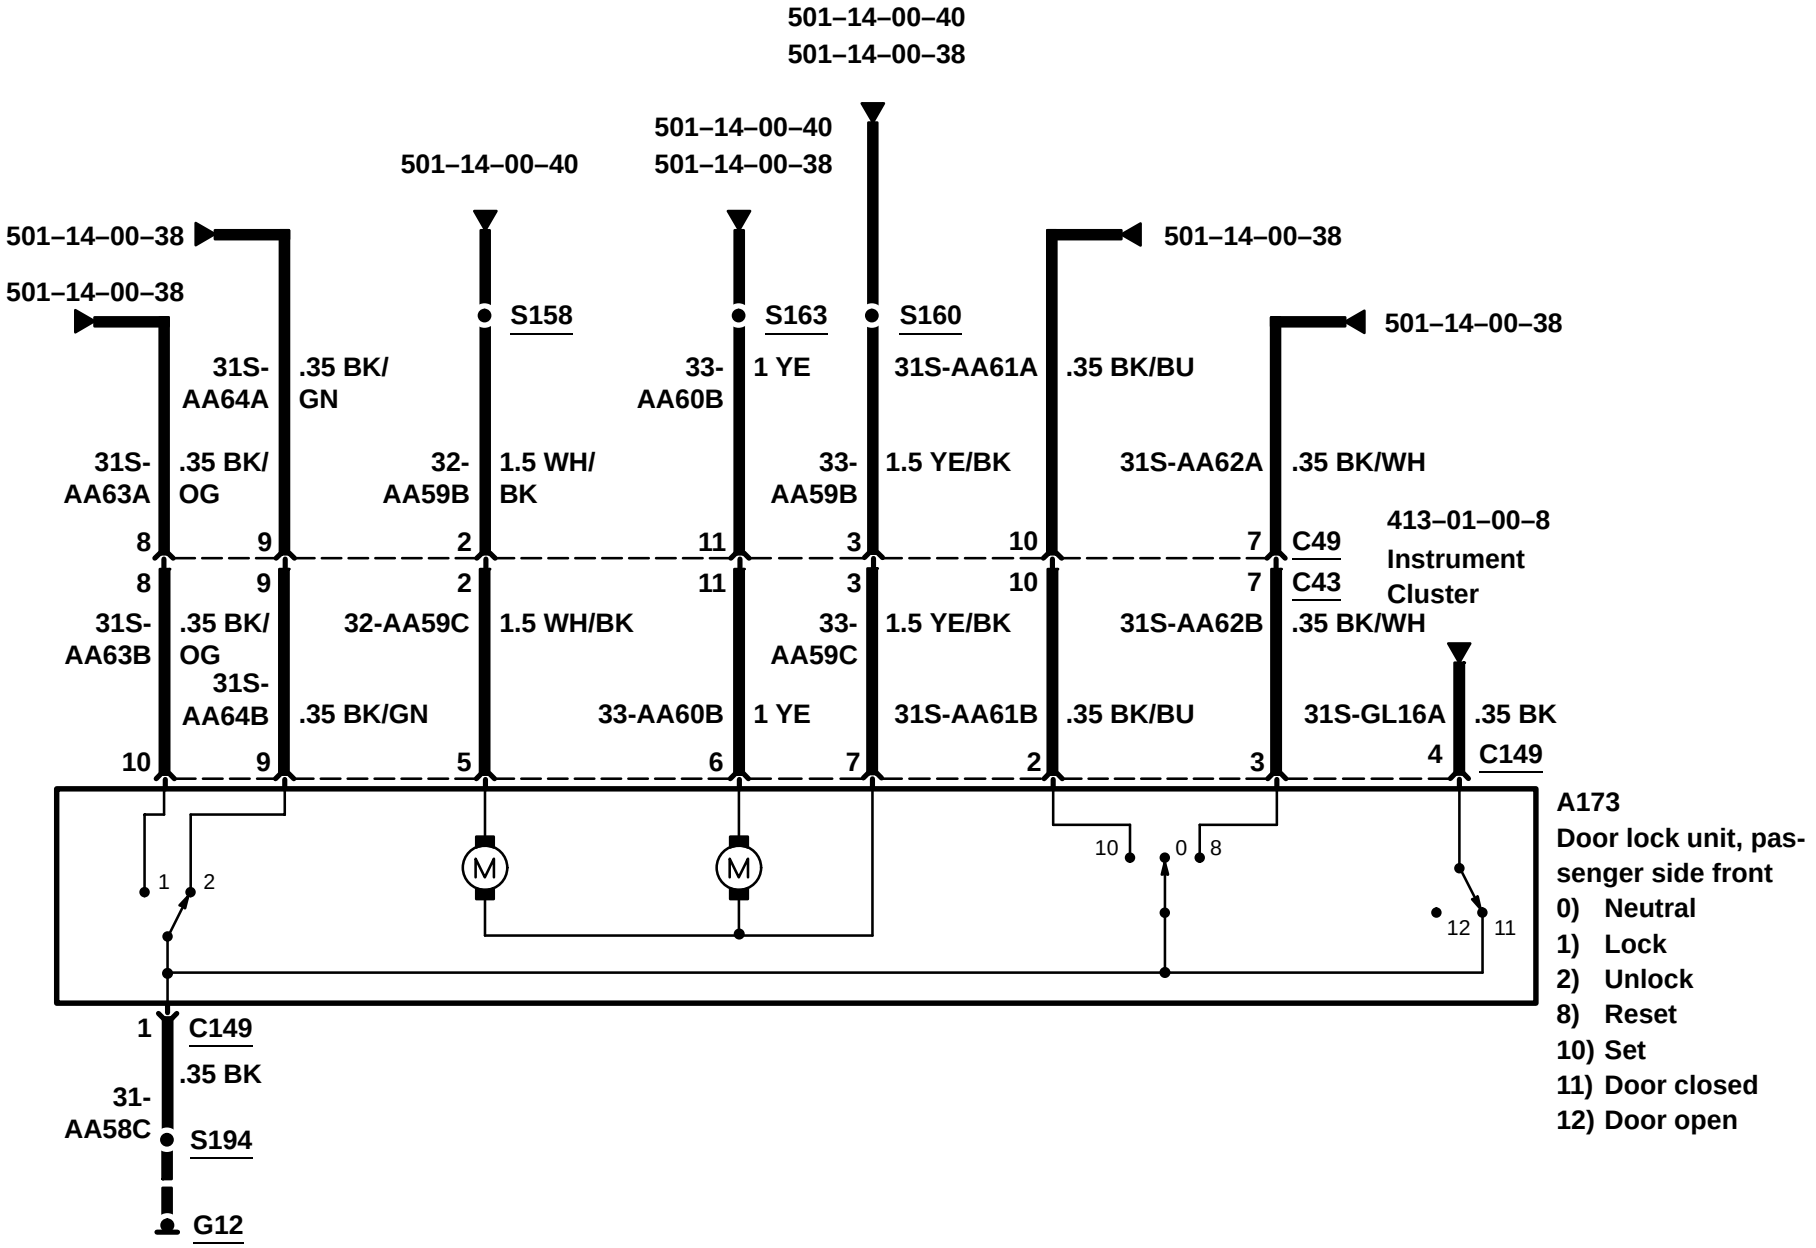


Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front power windows

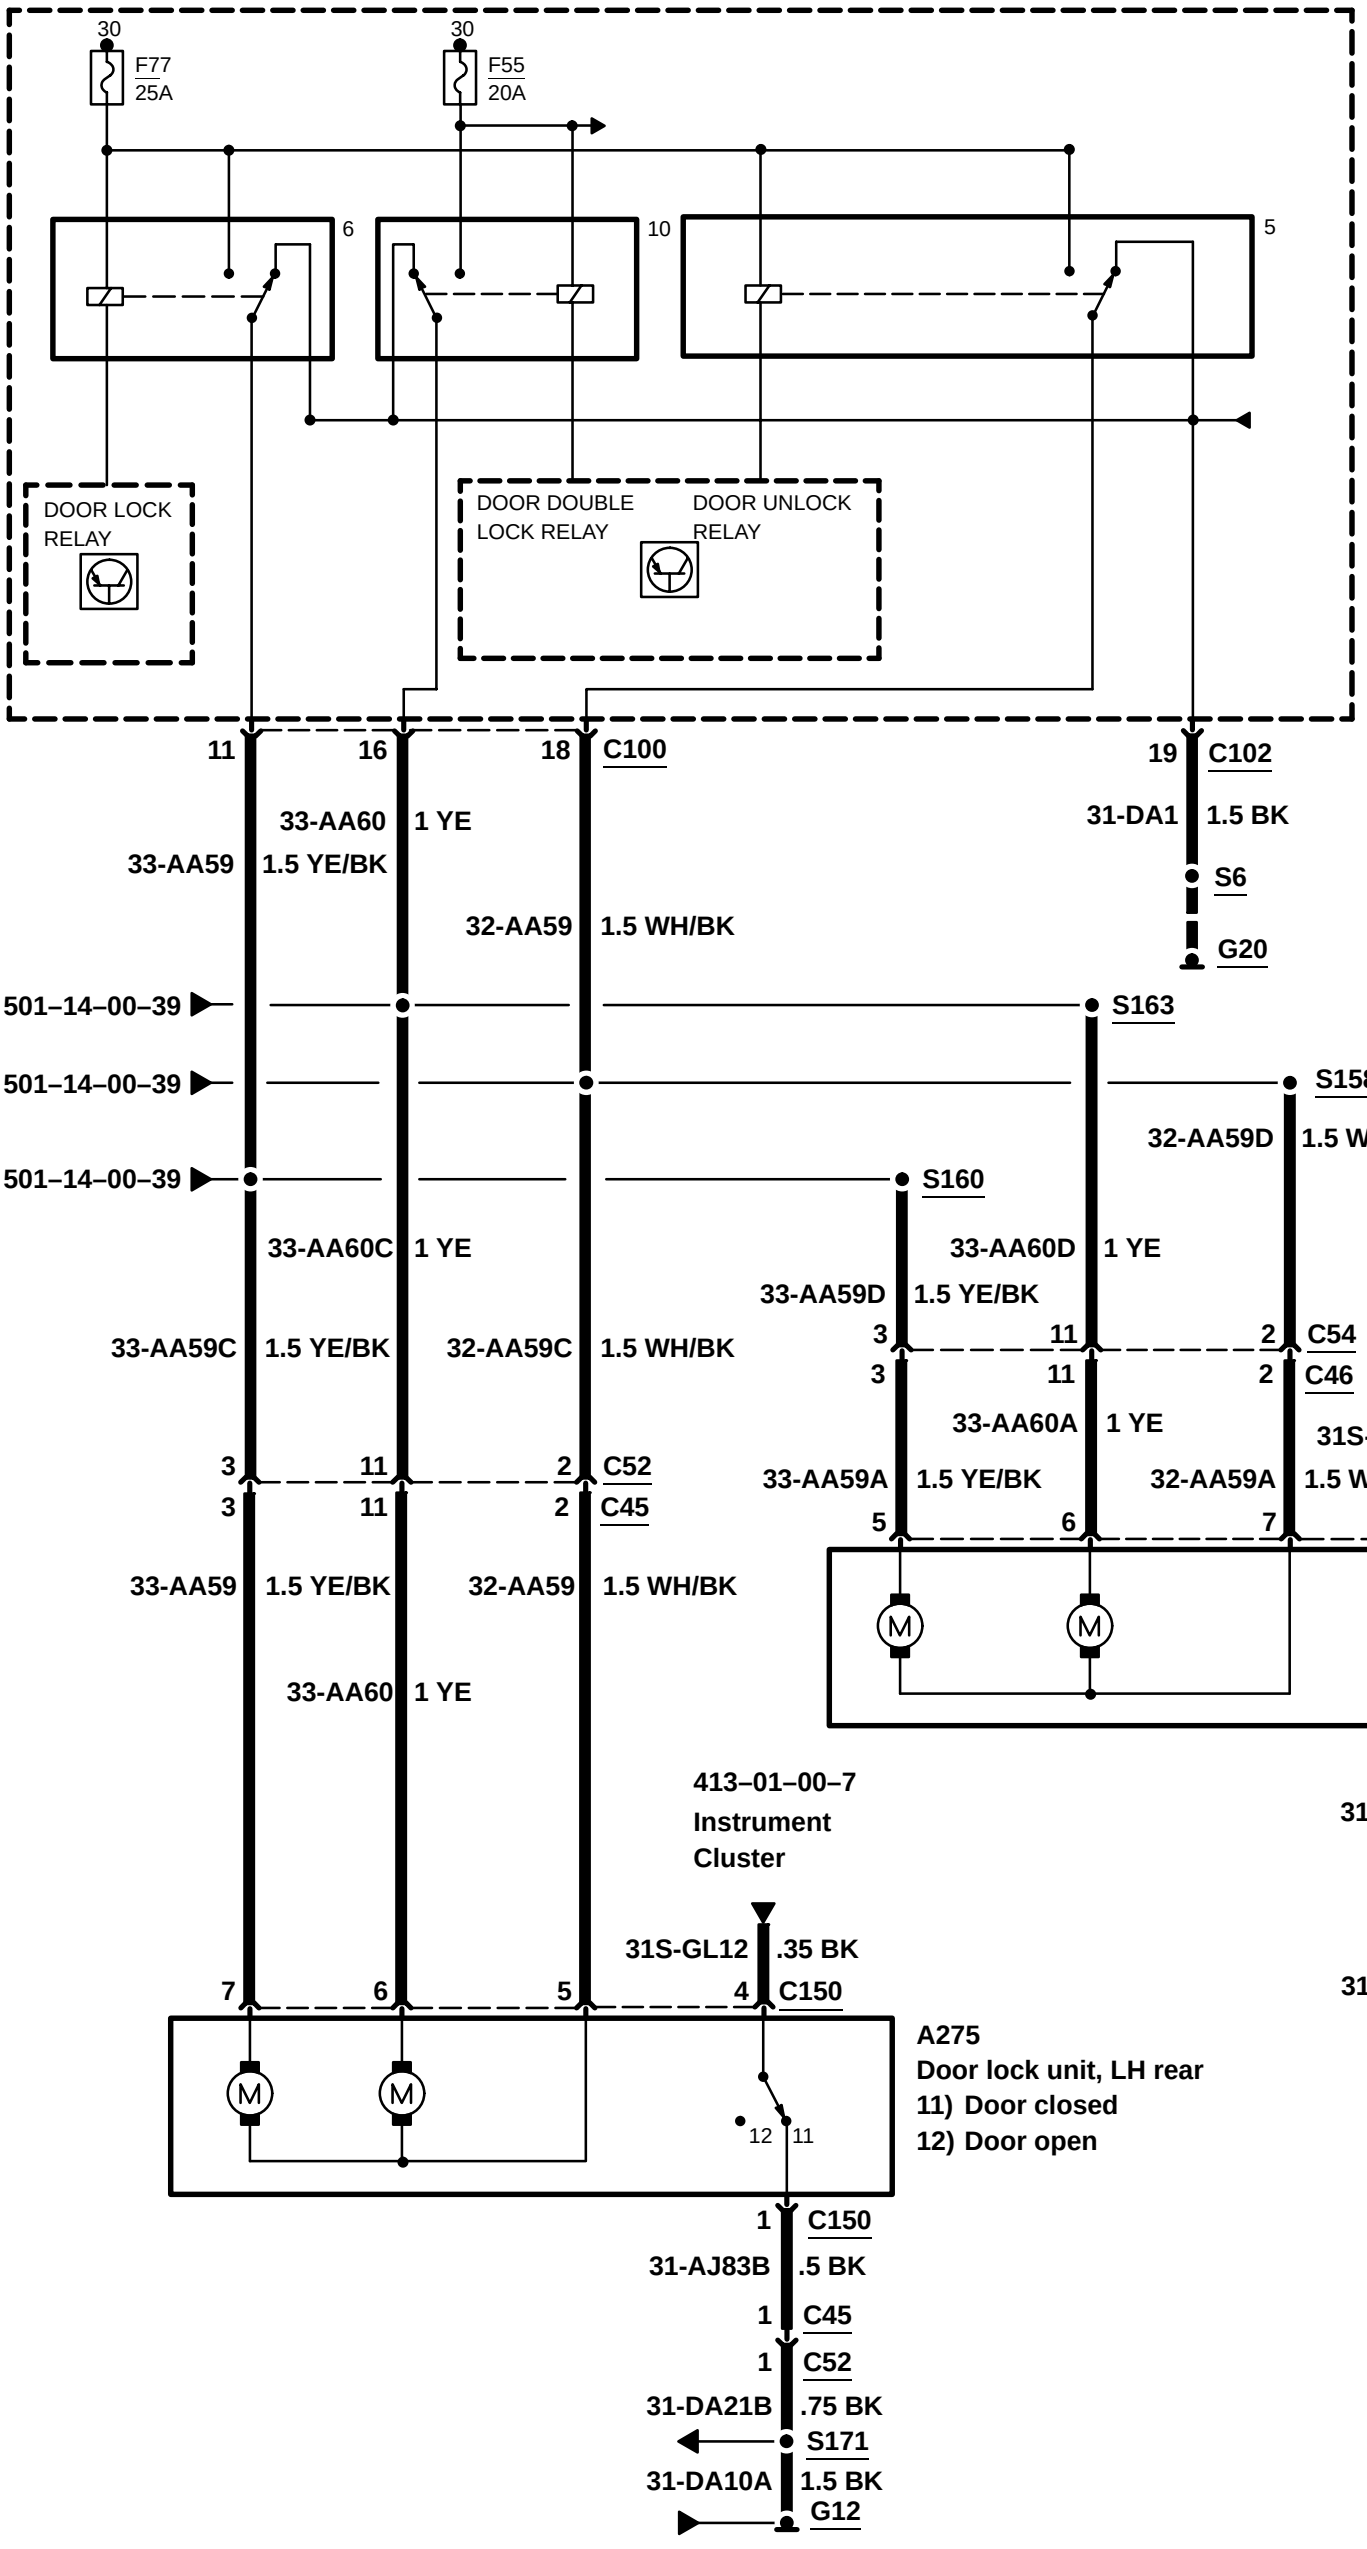


P91
Central Junction Box (CJB)
5) Door unlock relay
6) Door lock relay
10) Double locking relay


Handles, Locks, Latches and Entry Systems – RHD, with central locking, with front power windows

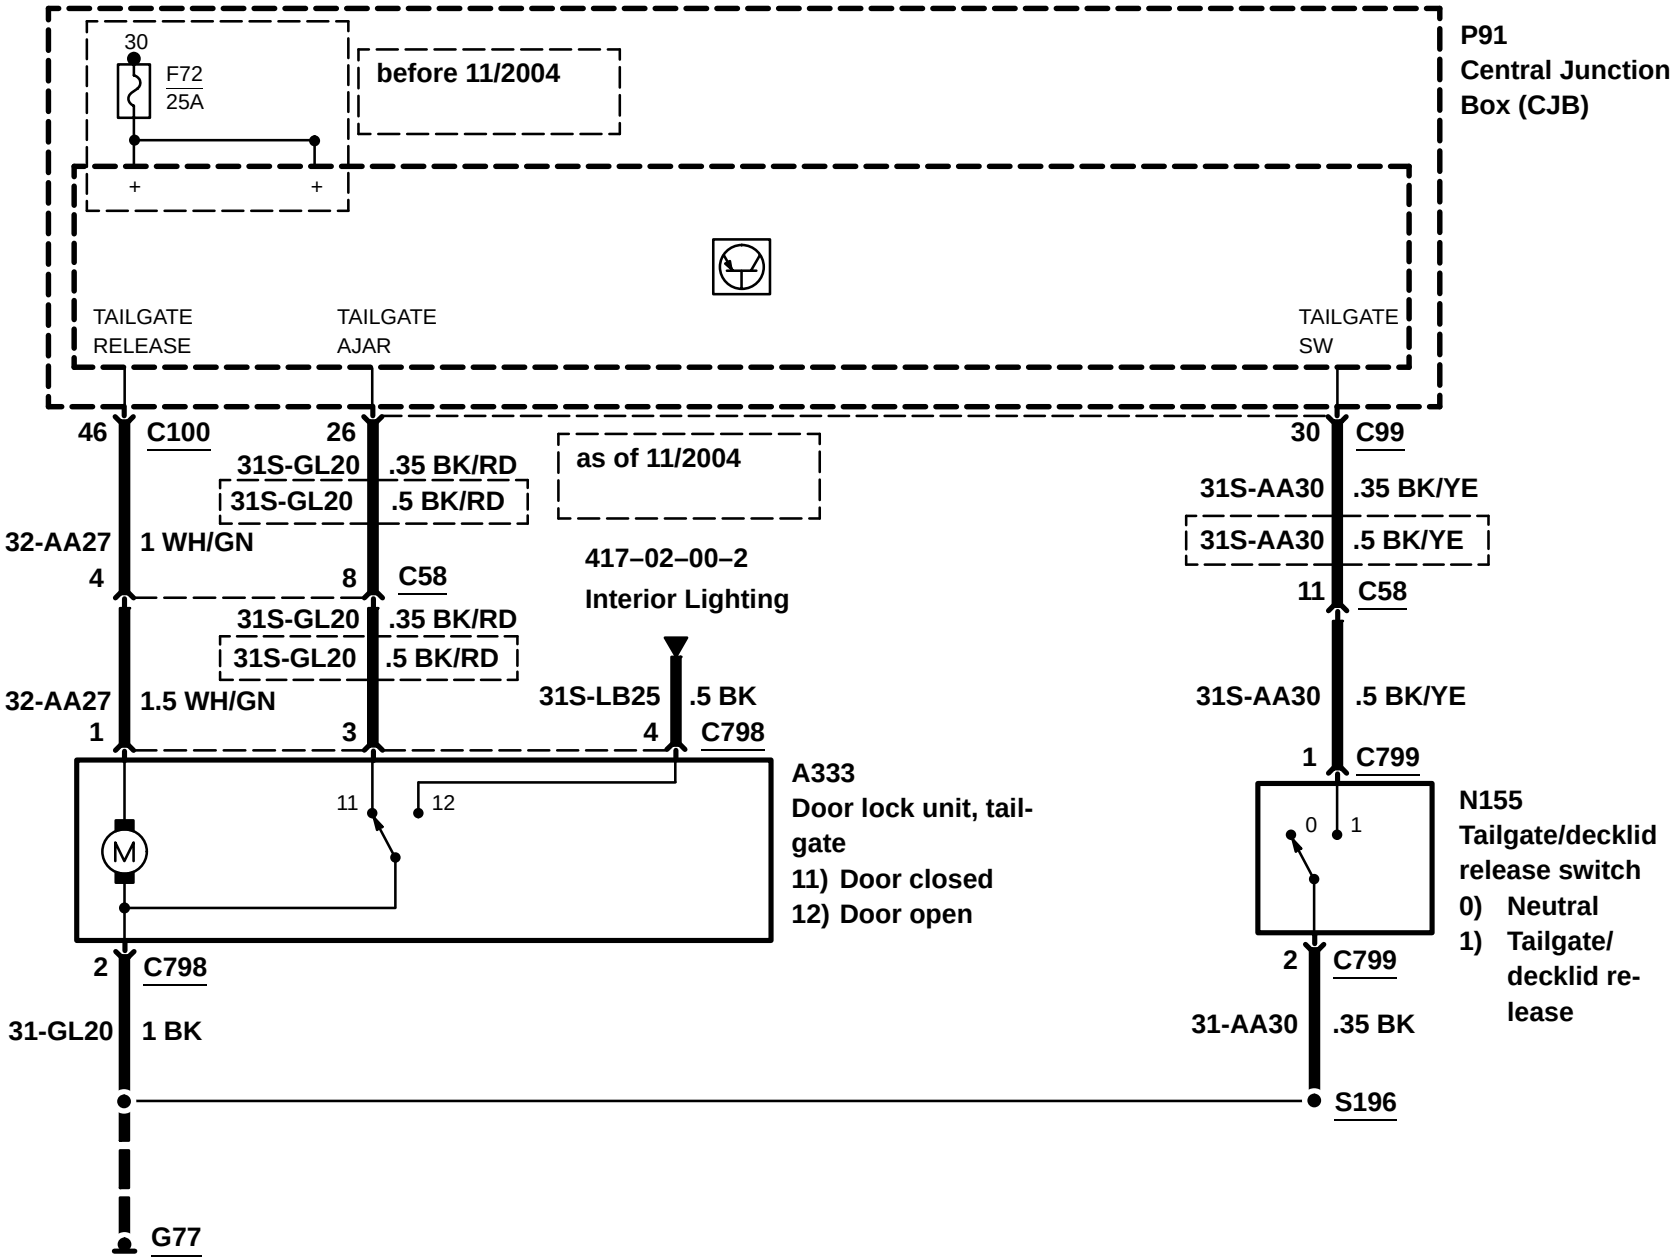

Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

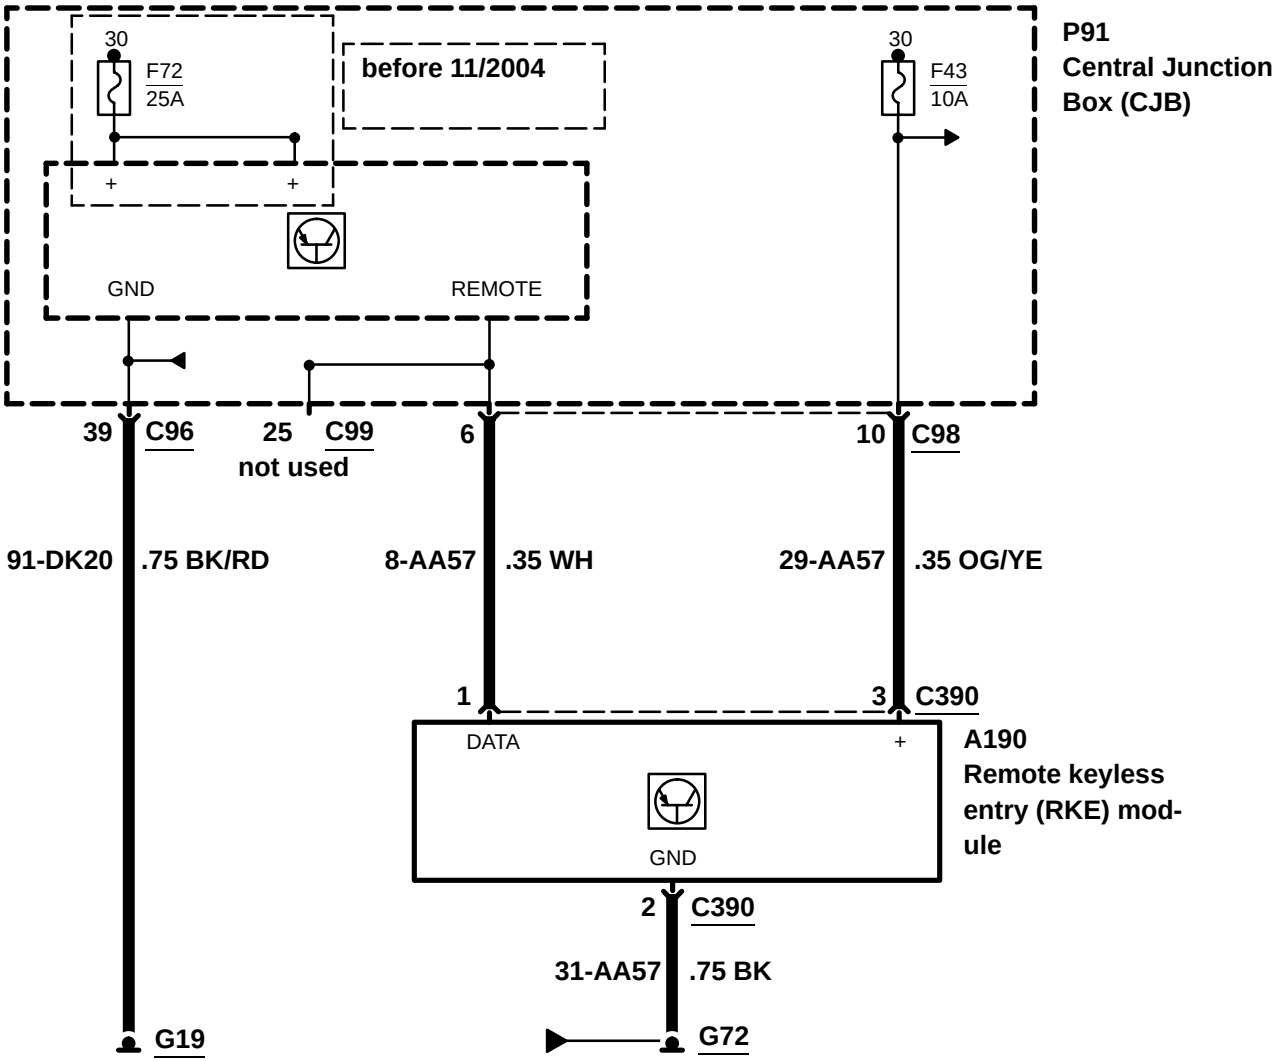


Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

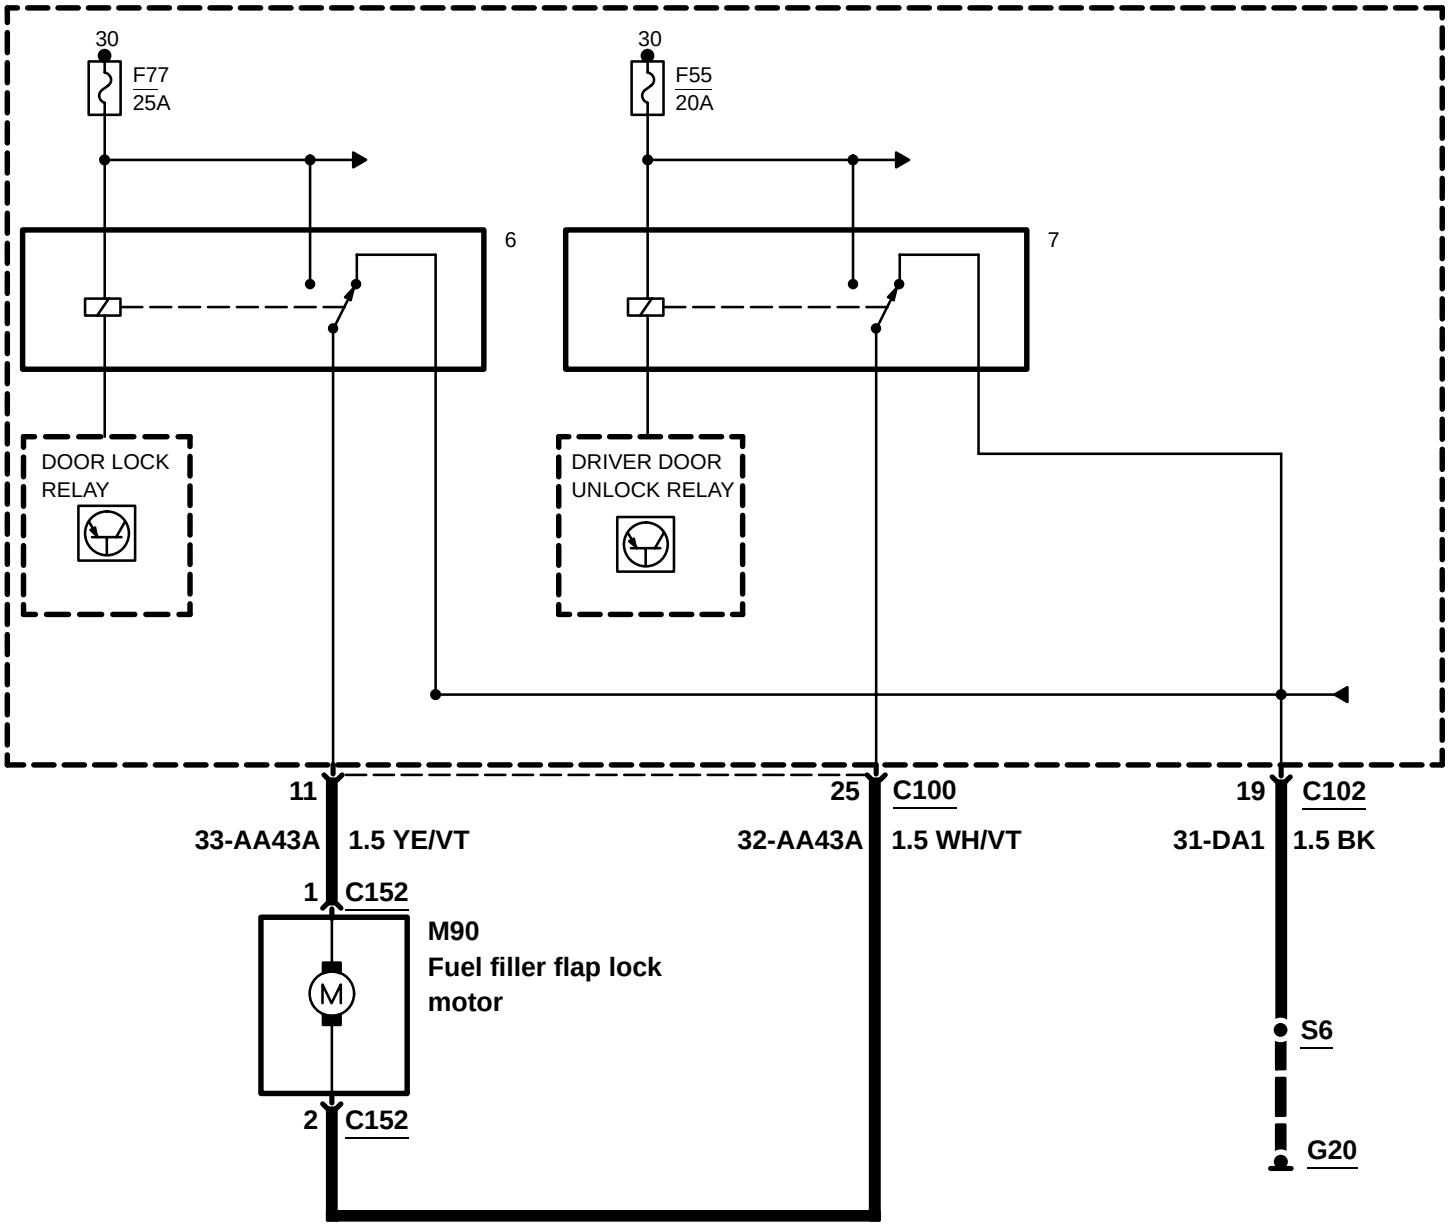


P91
Central Junction Box (CJB)
6) Door lock relay
7) Driver door unlock relay


Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

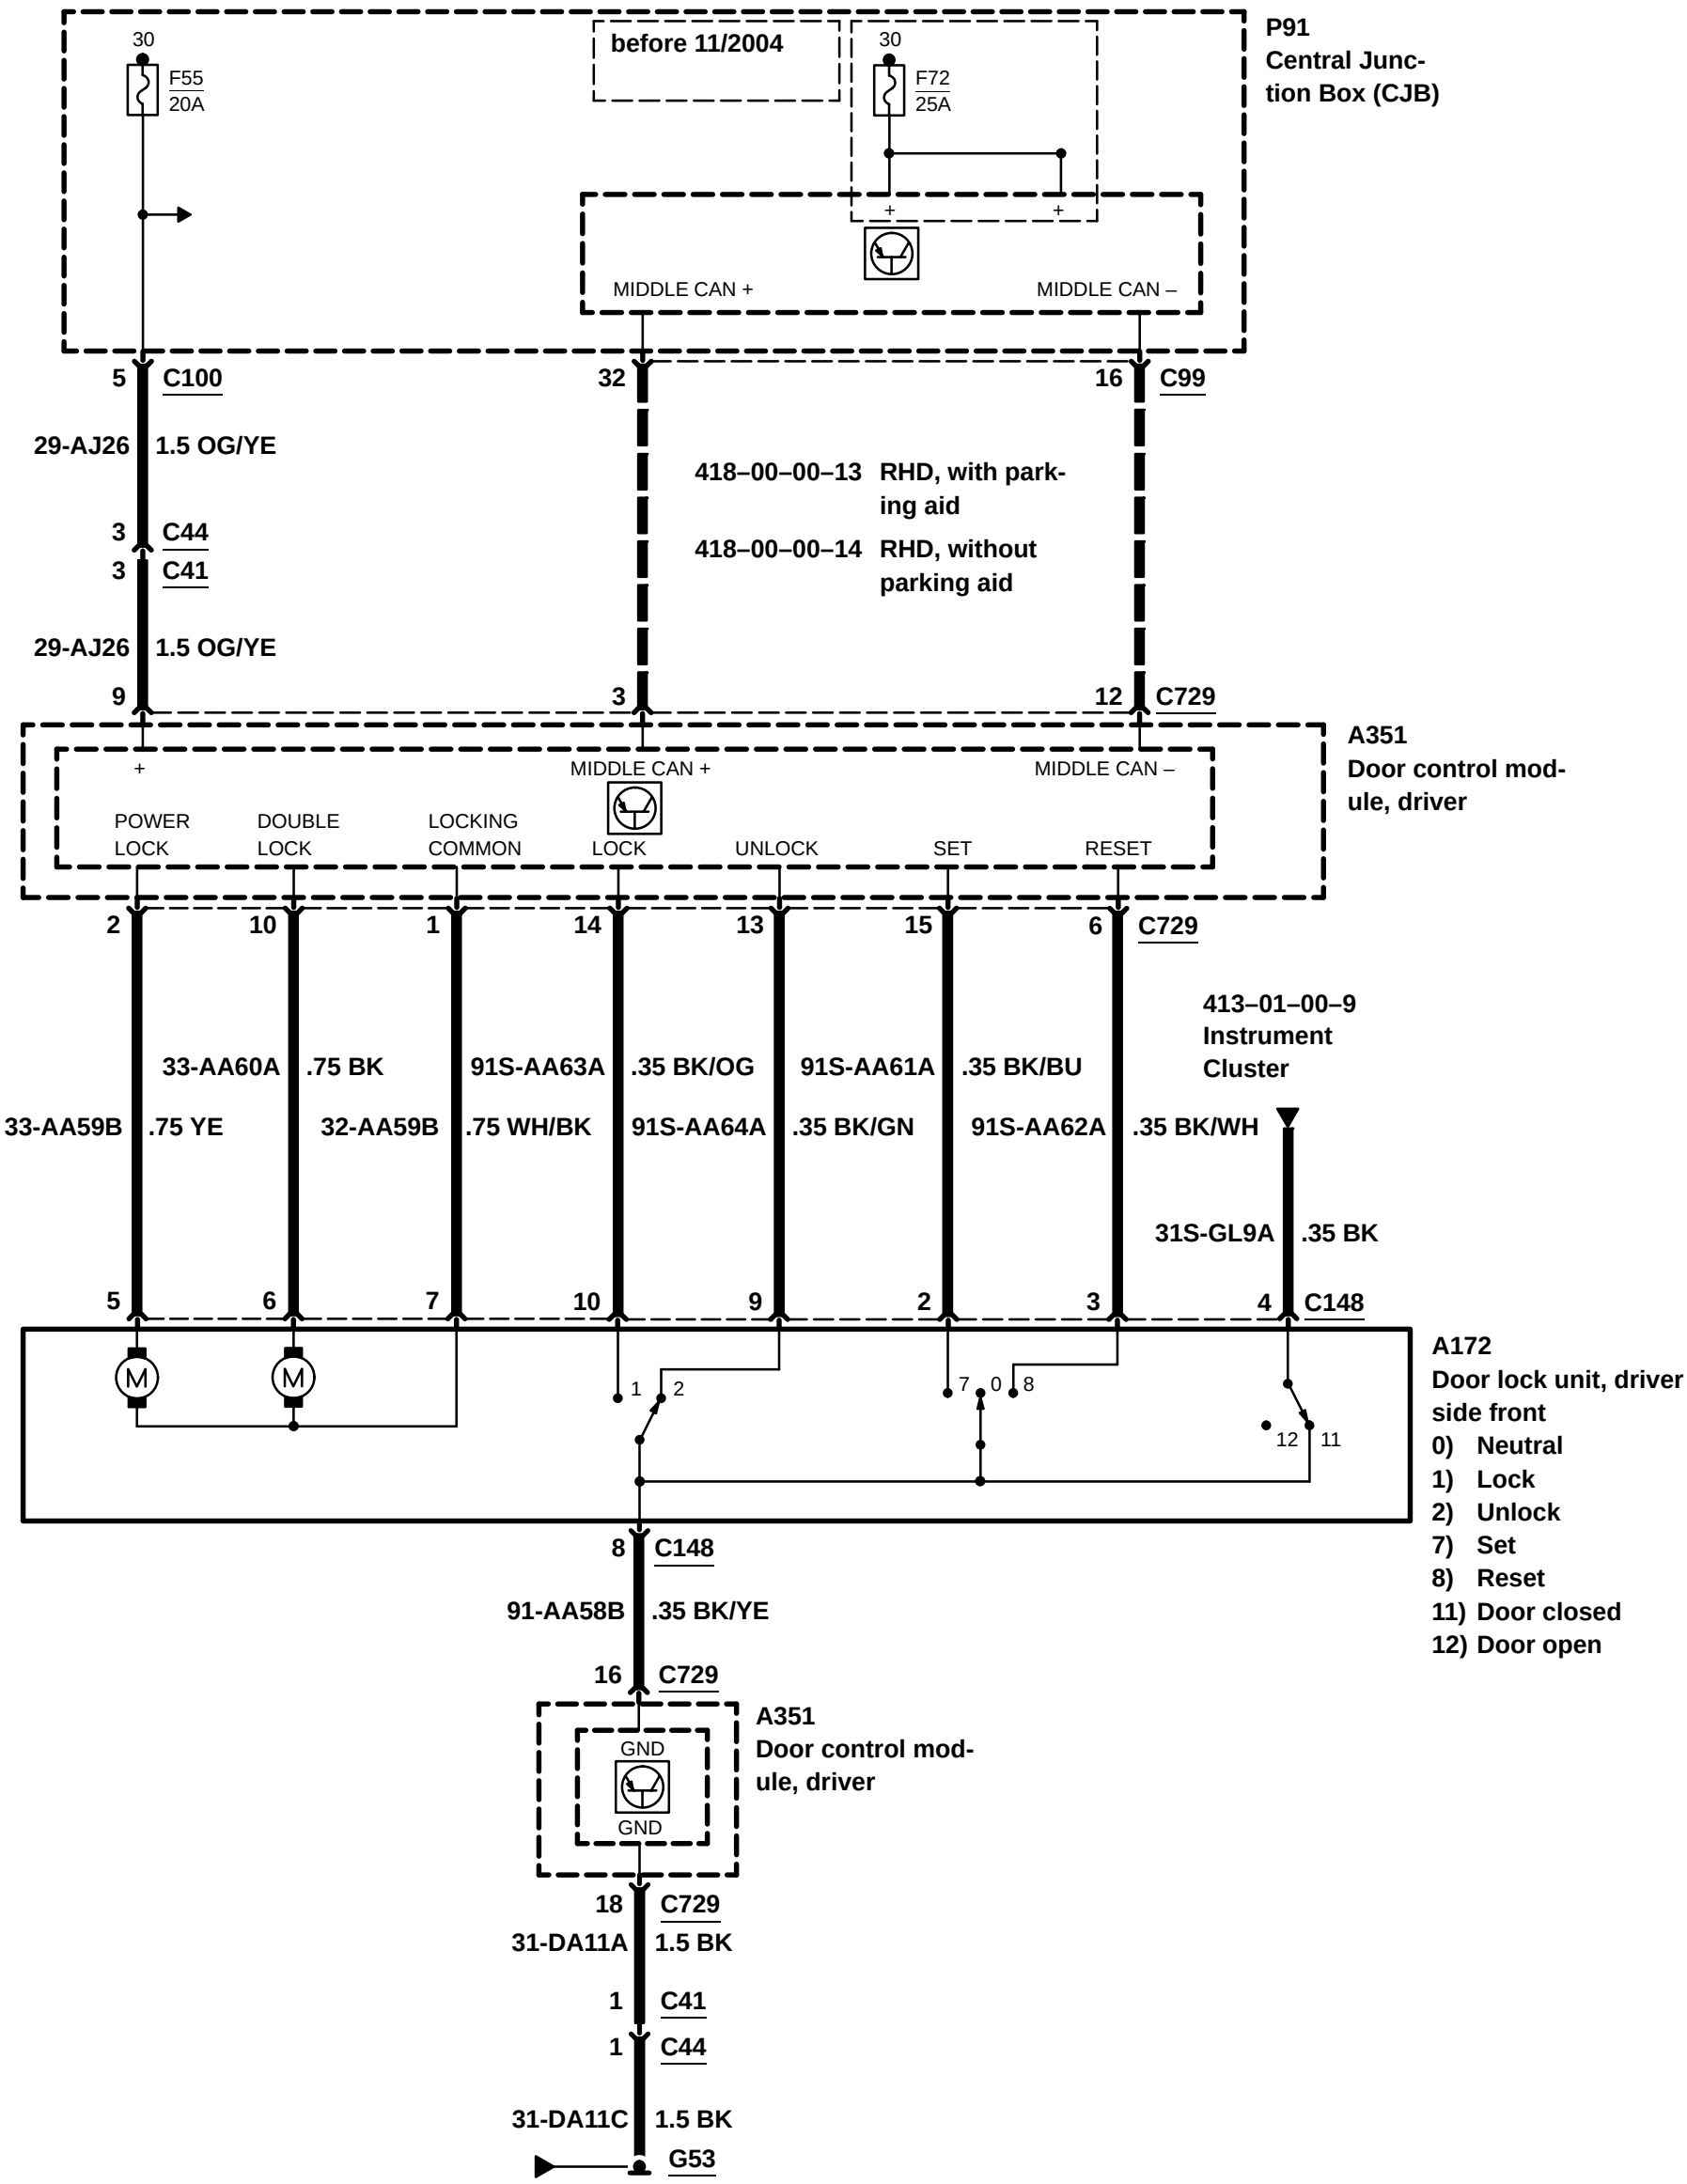


Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

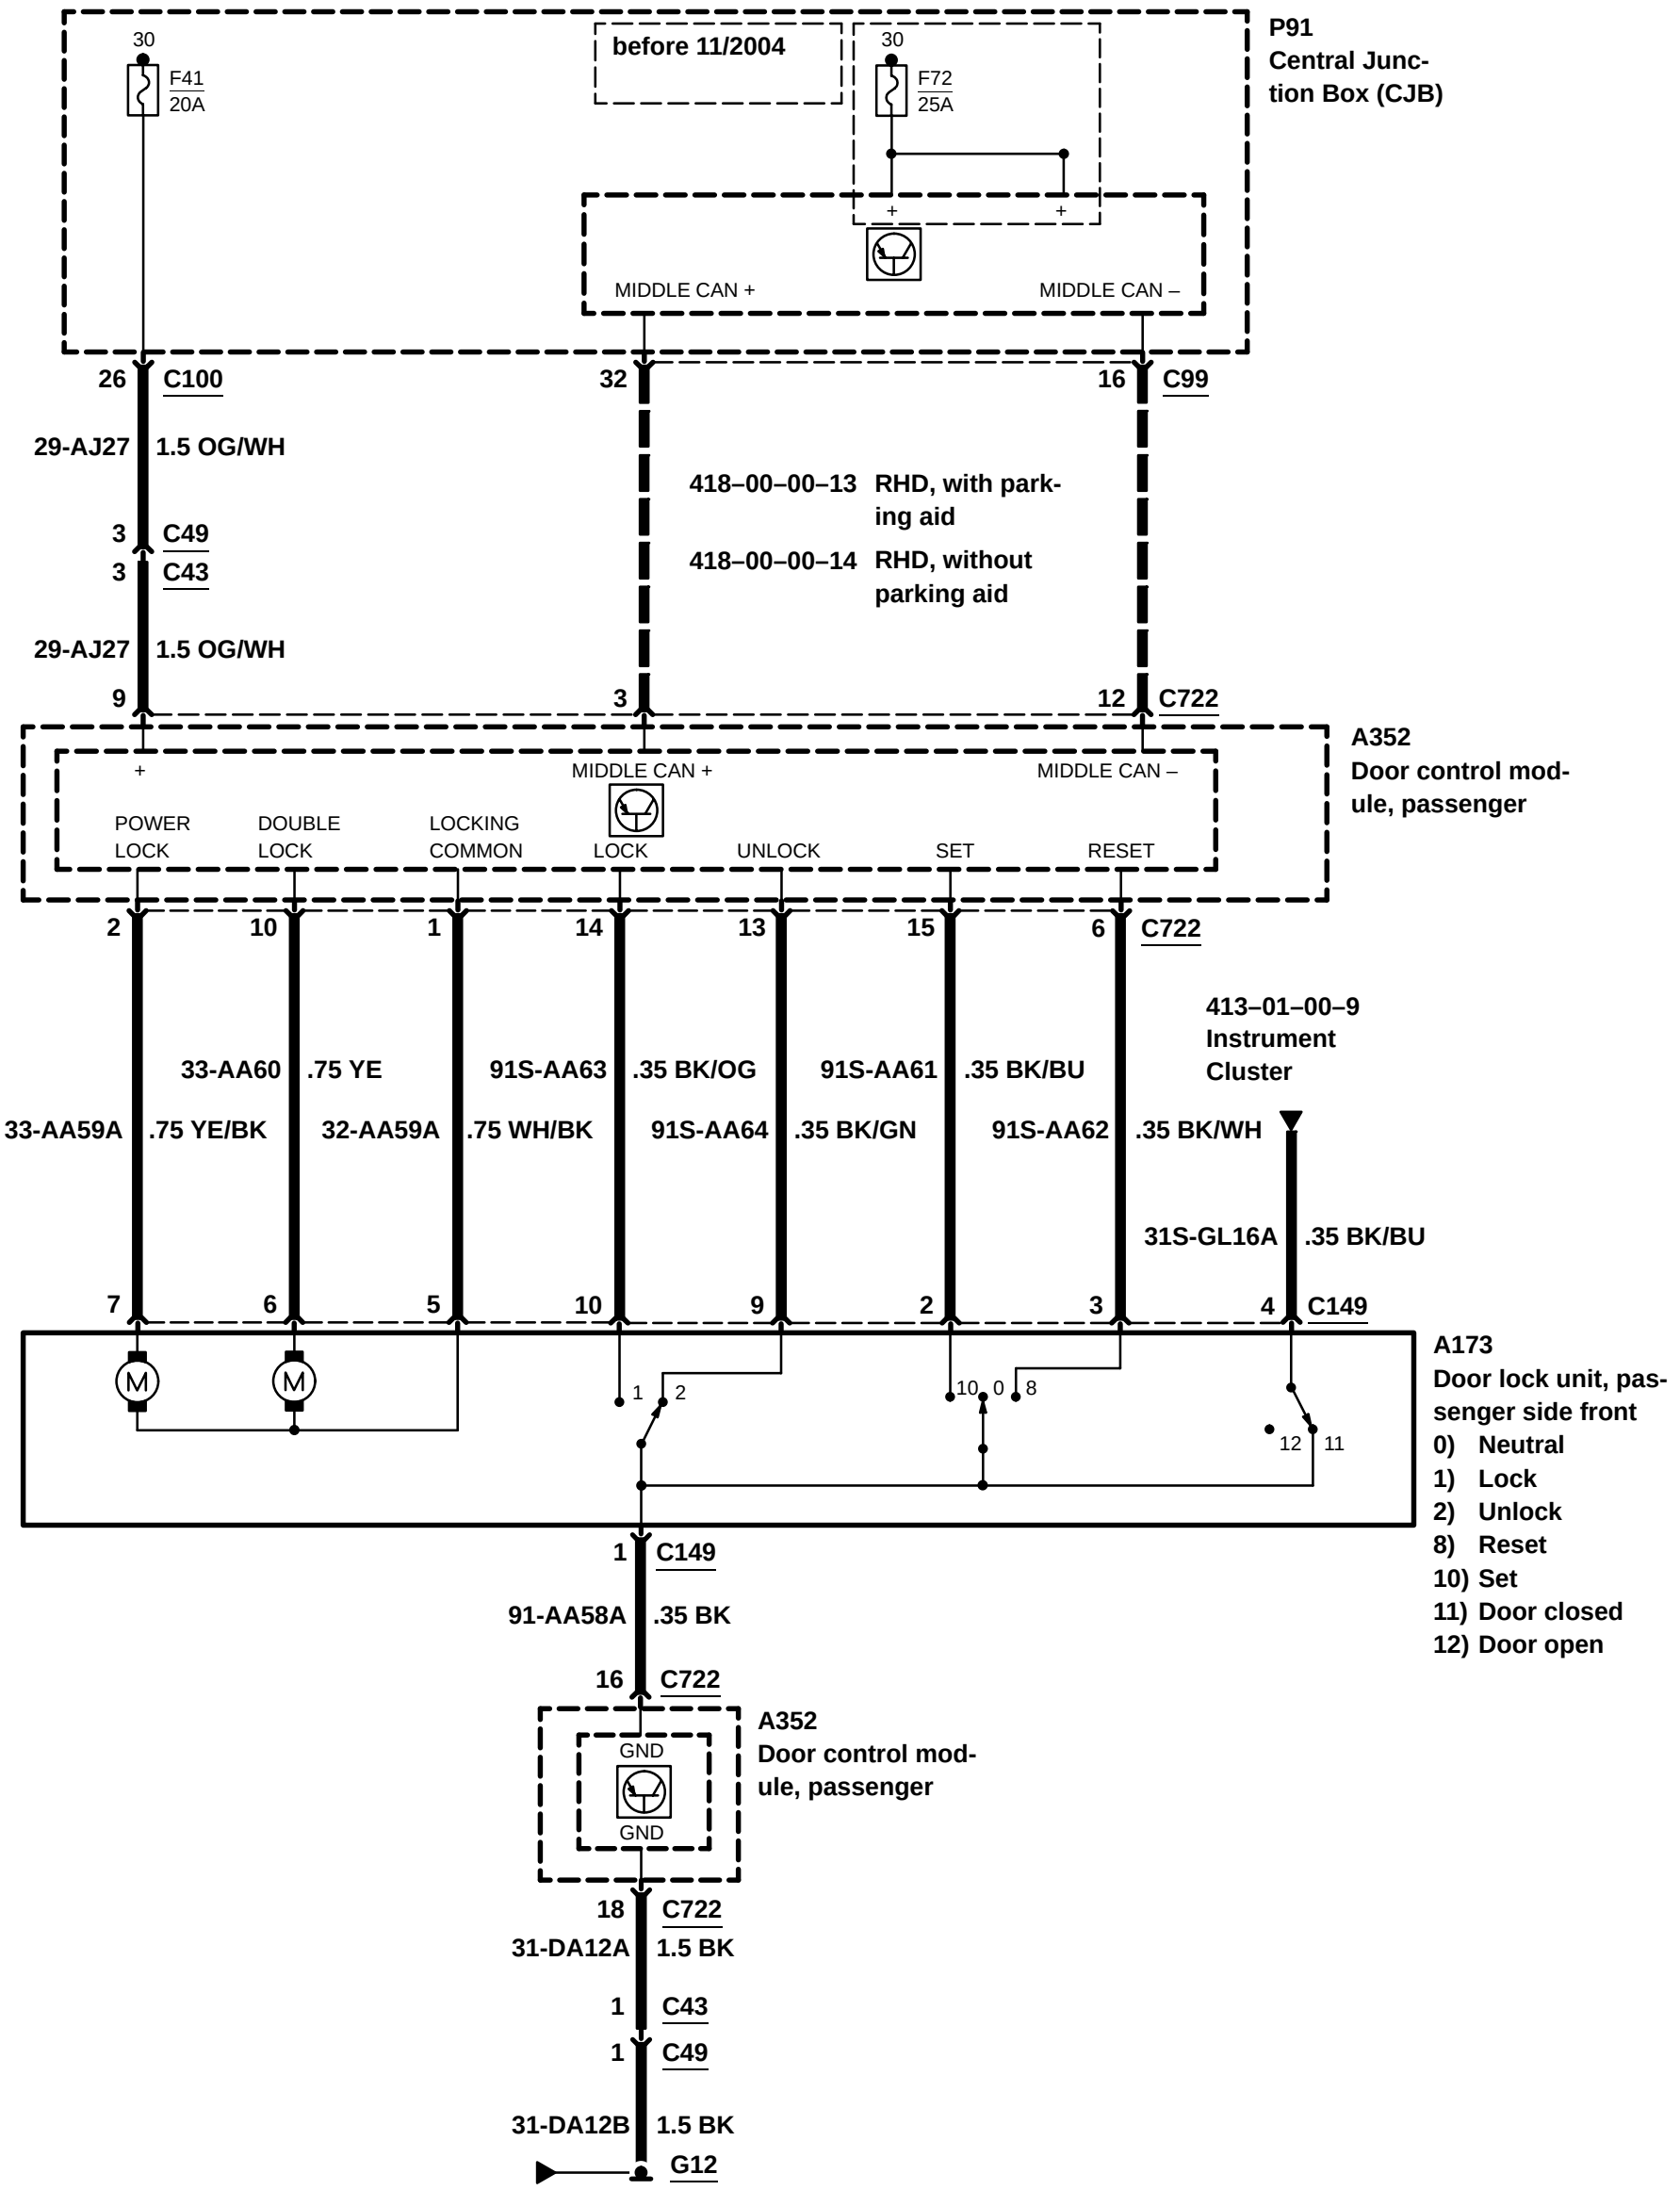


Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

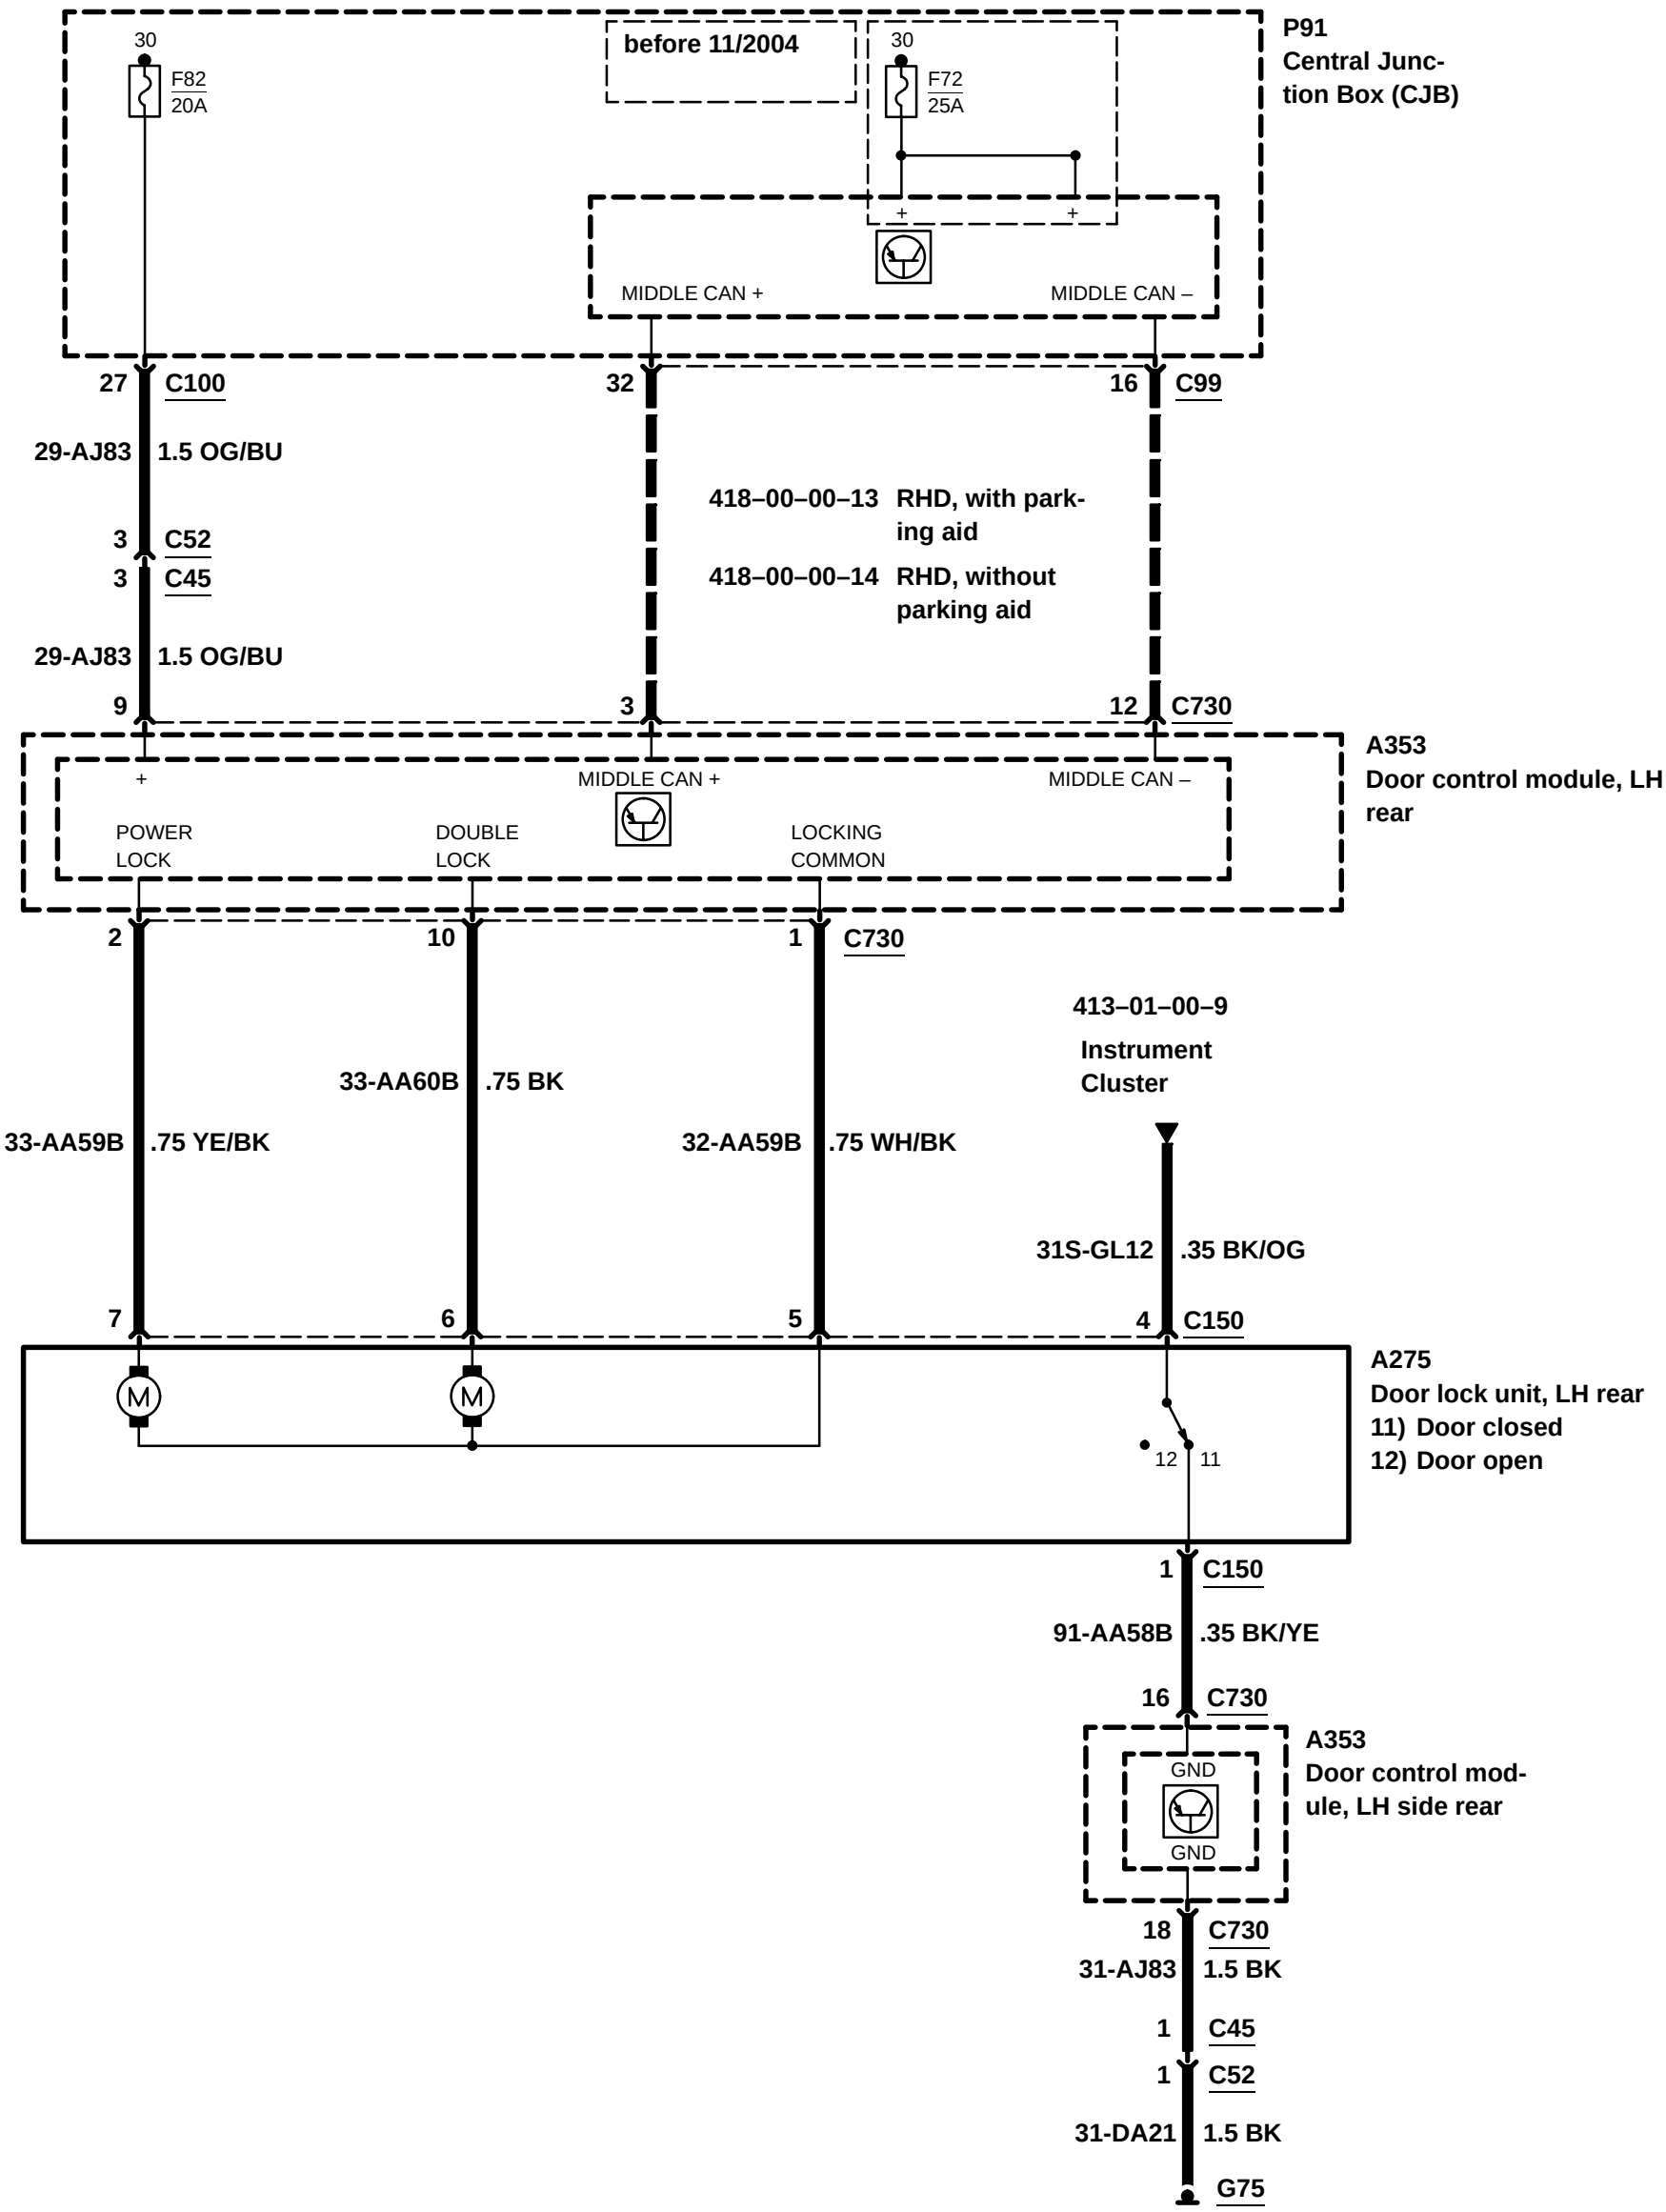


Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

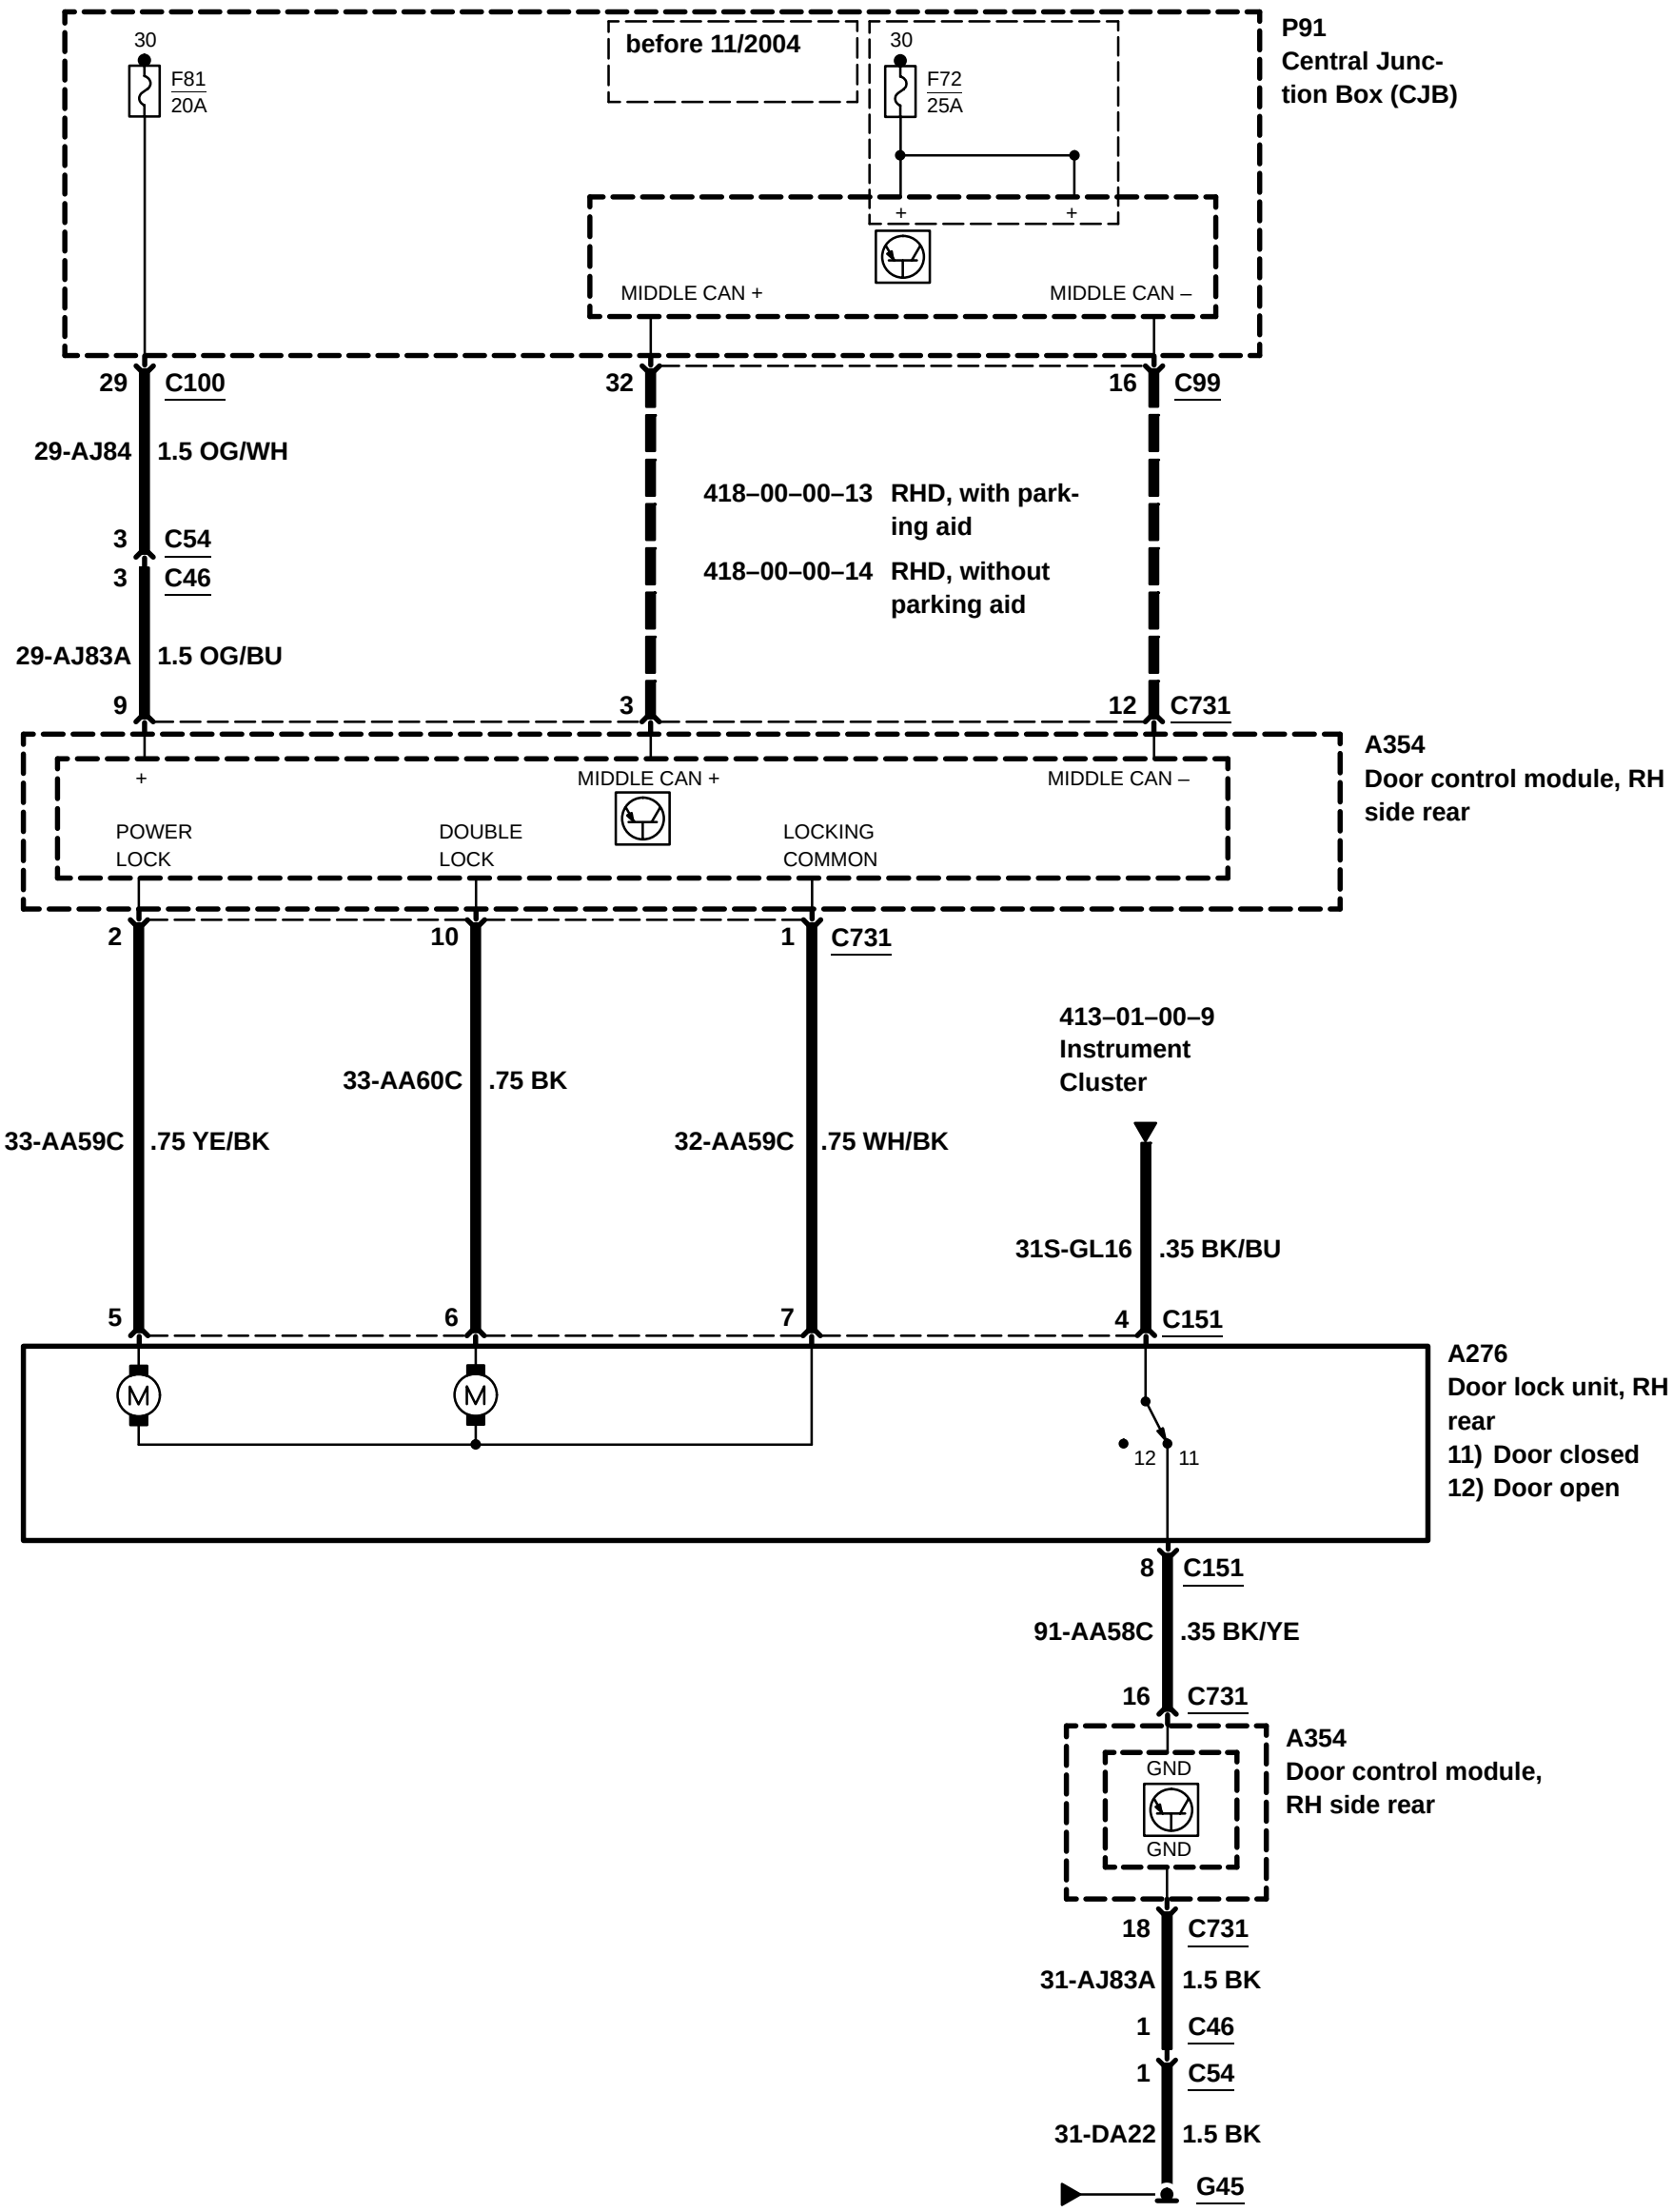


Handles, Locks, Latches and Entry Systems – RHD, with double locking, with front and rear power windows

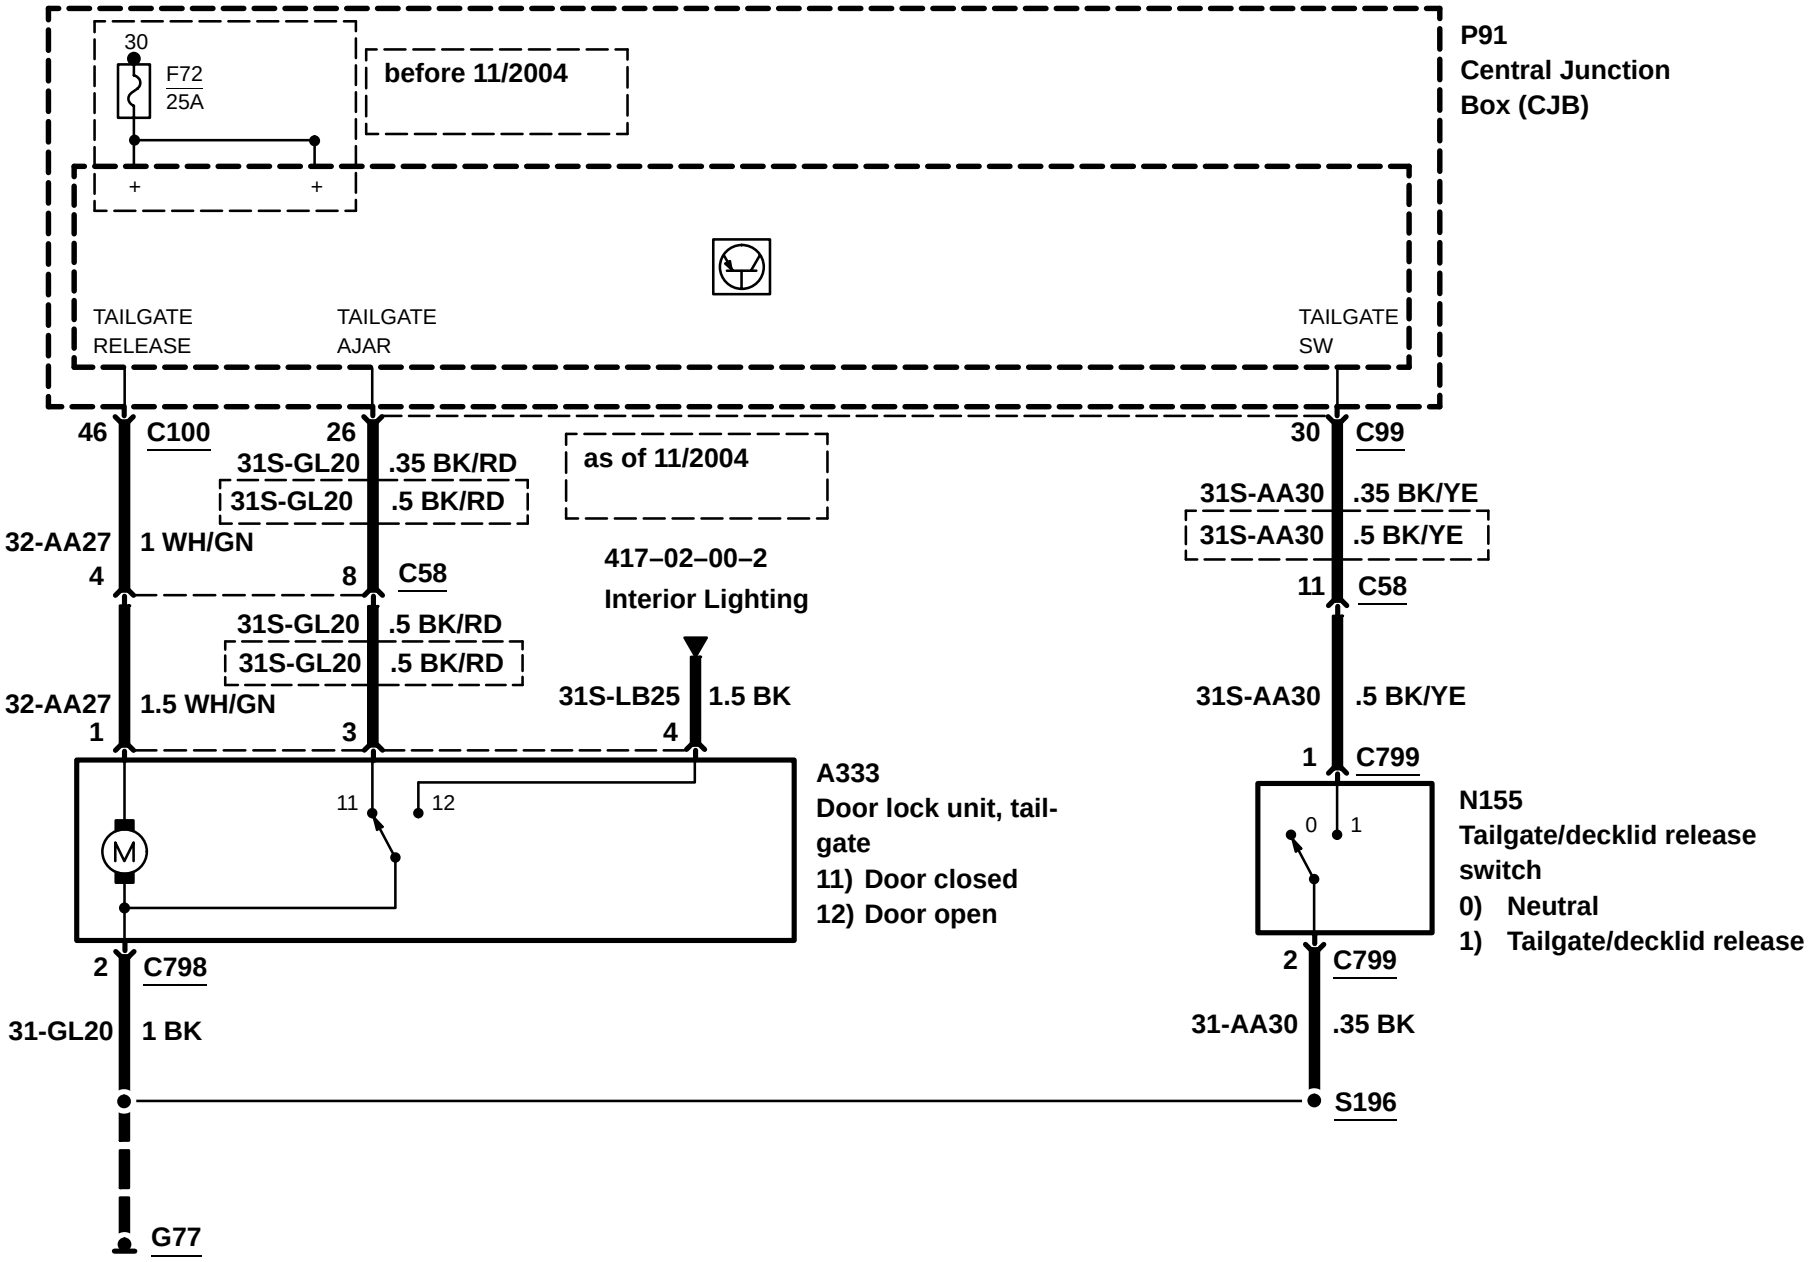


Wipers and Washers

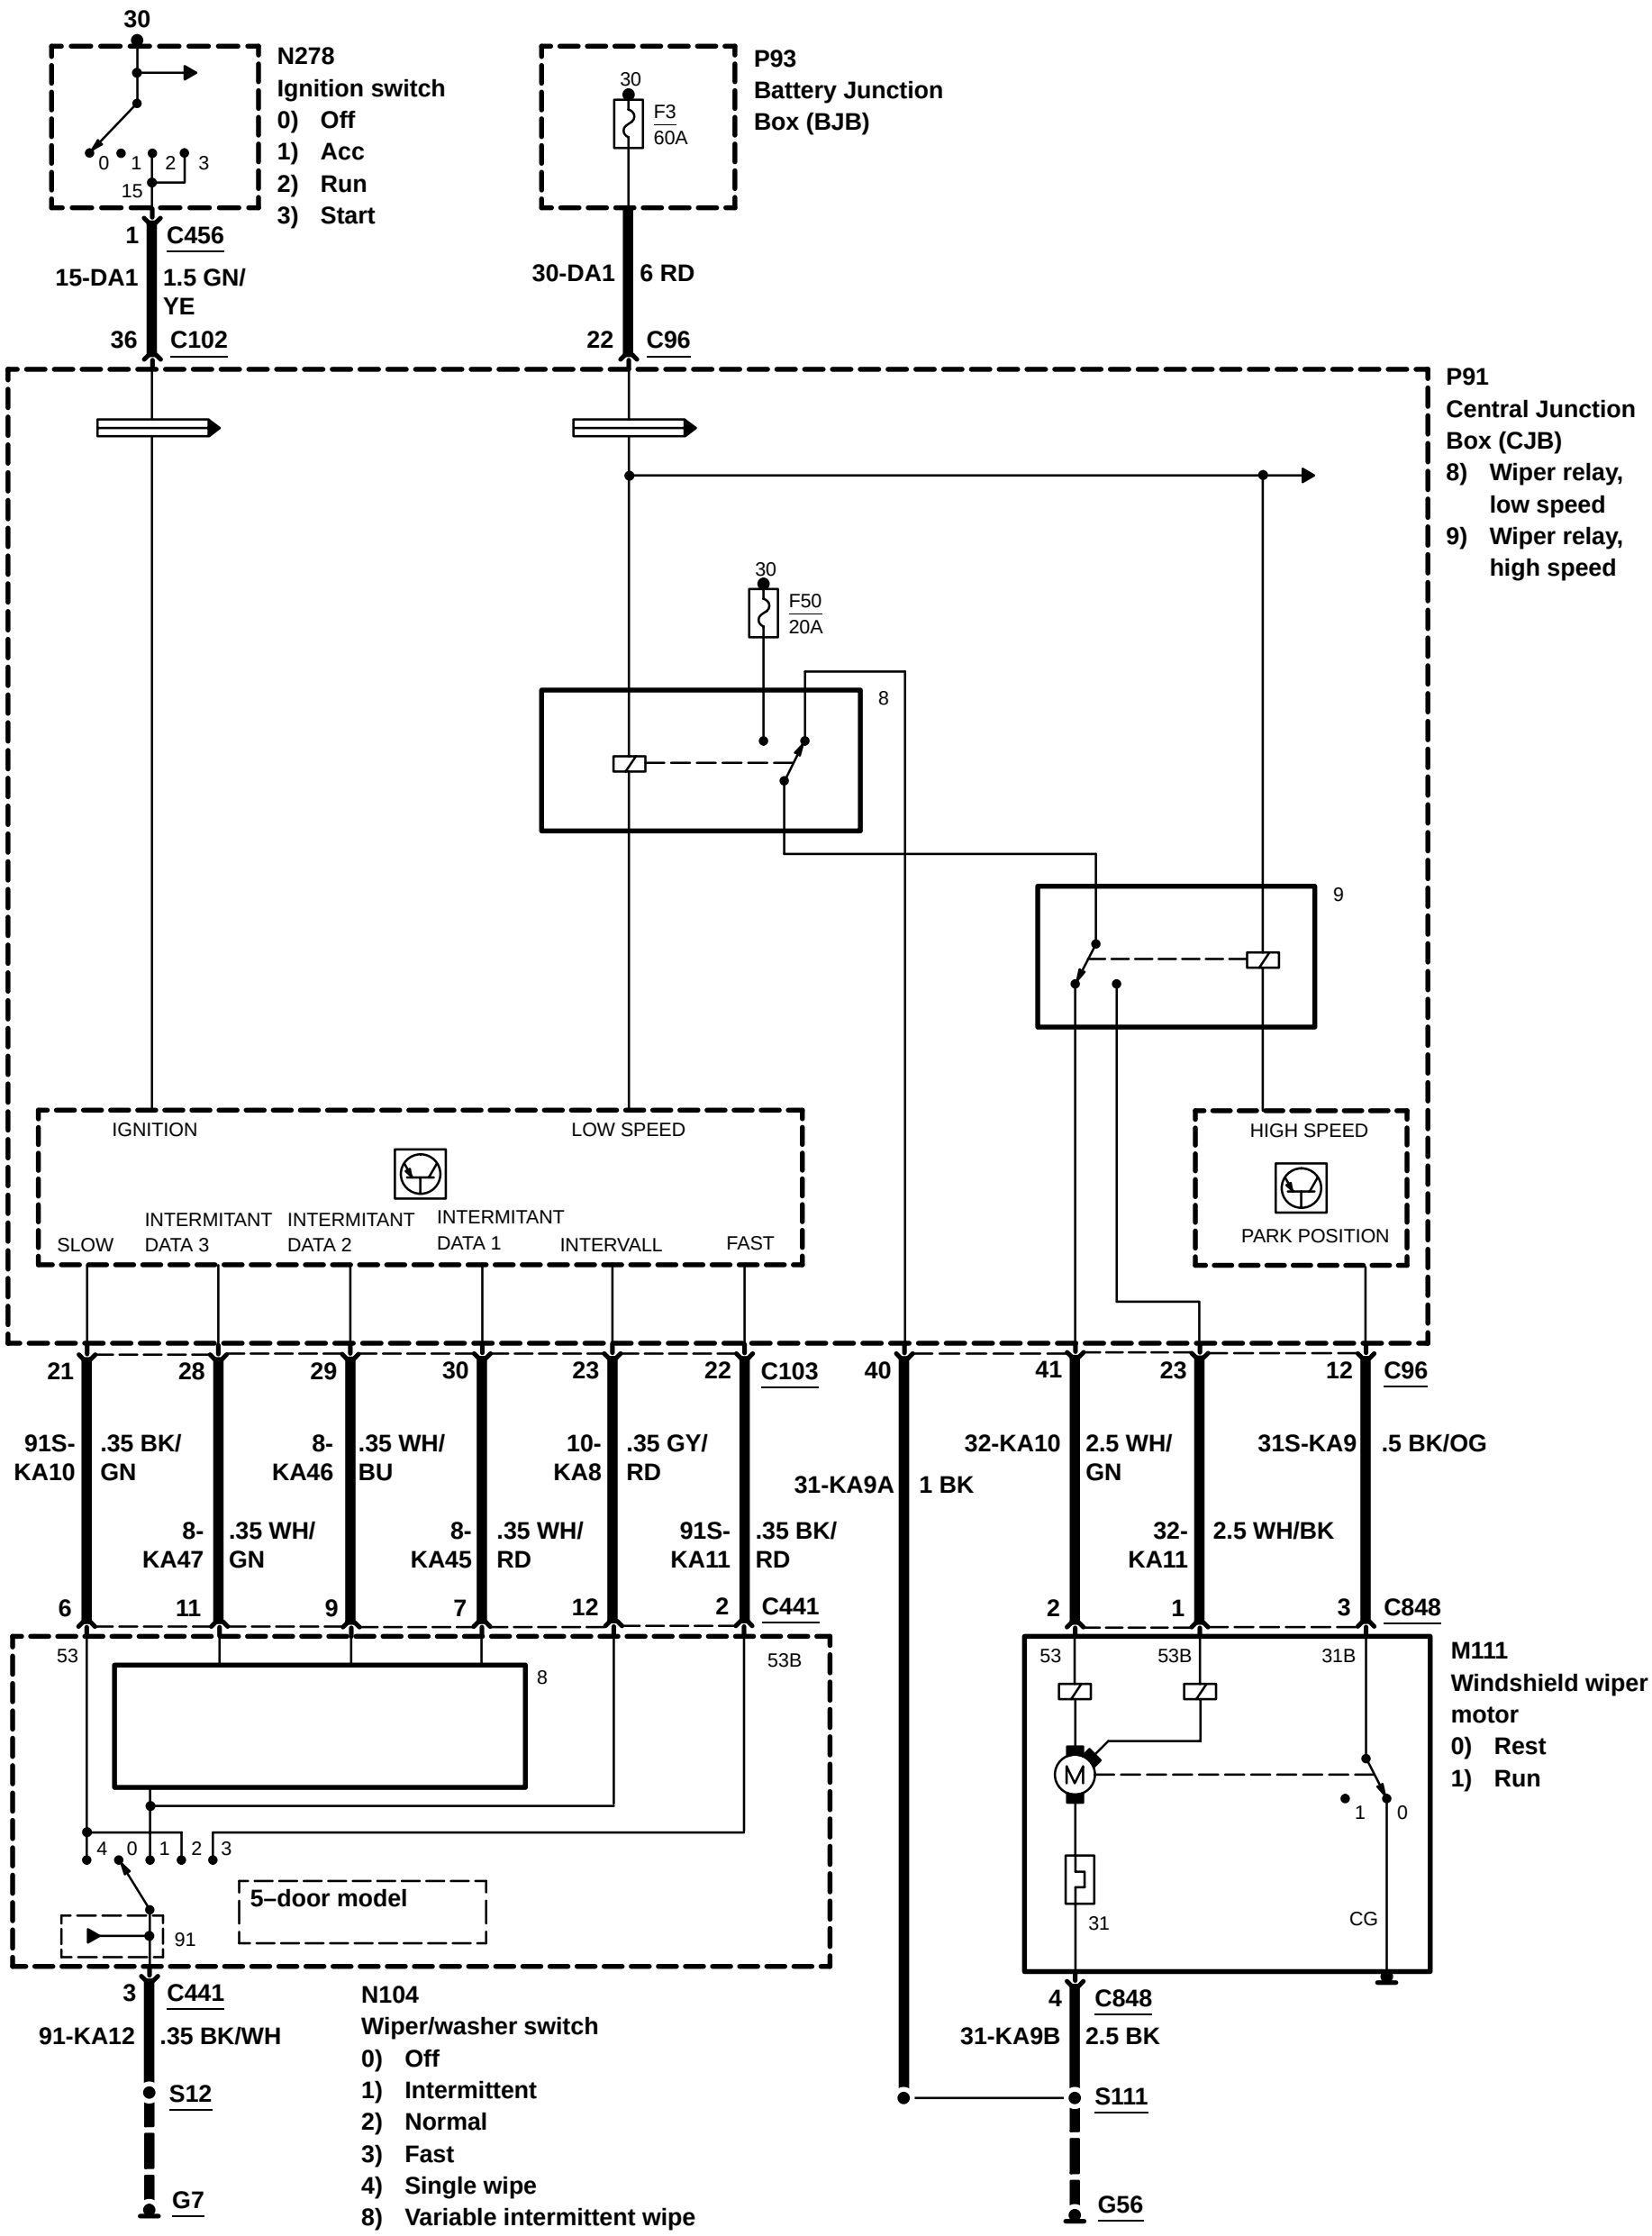


Wipers and Washers – 5–door model

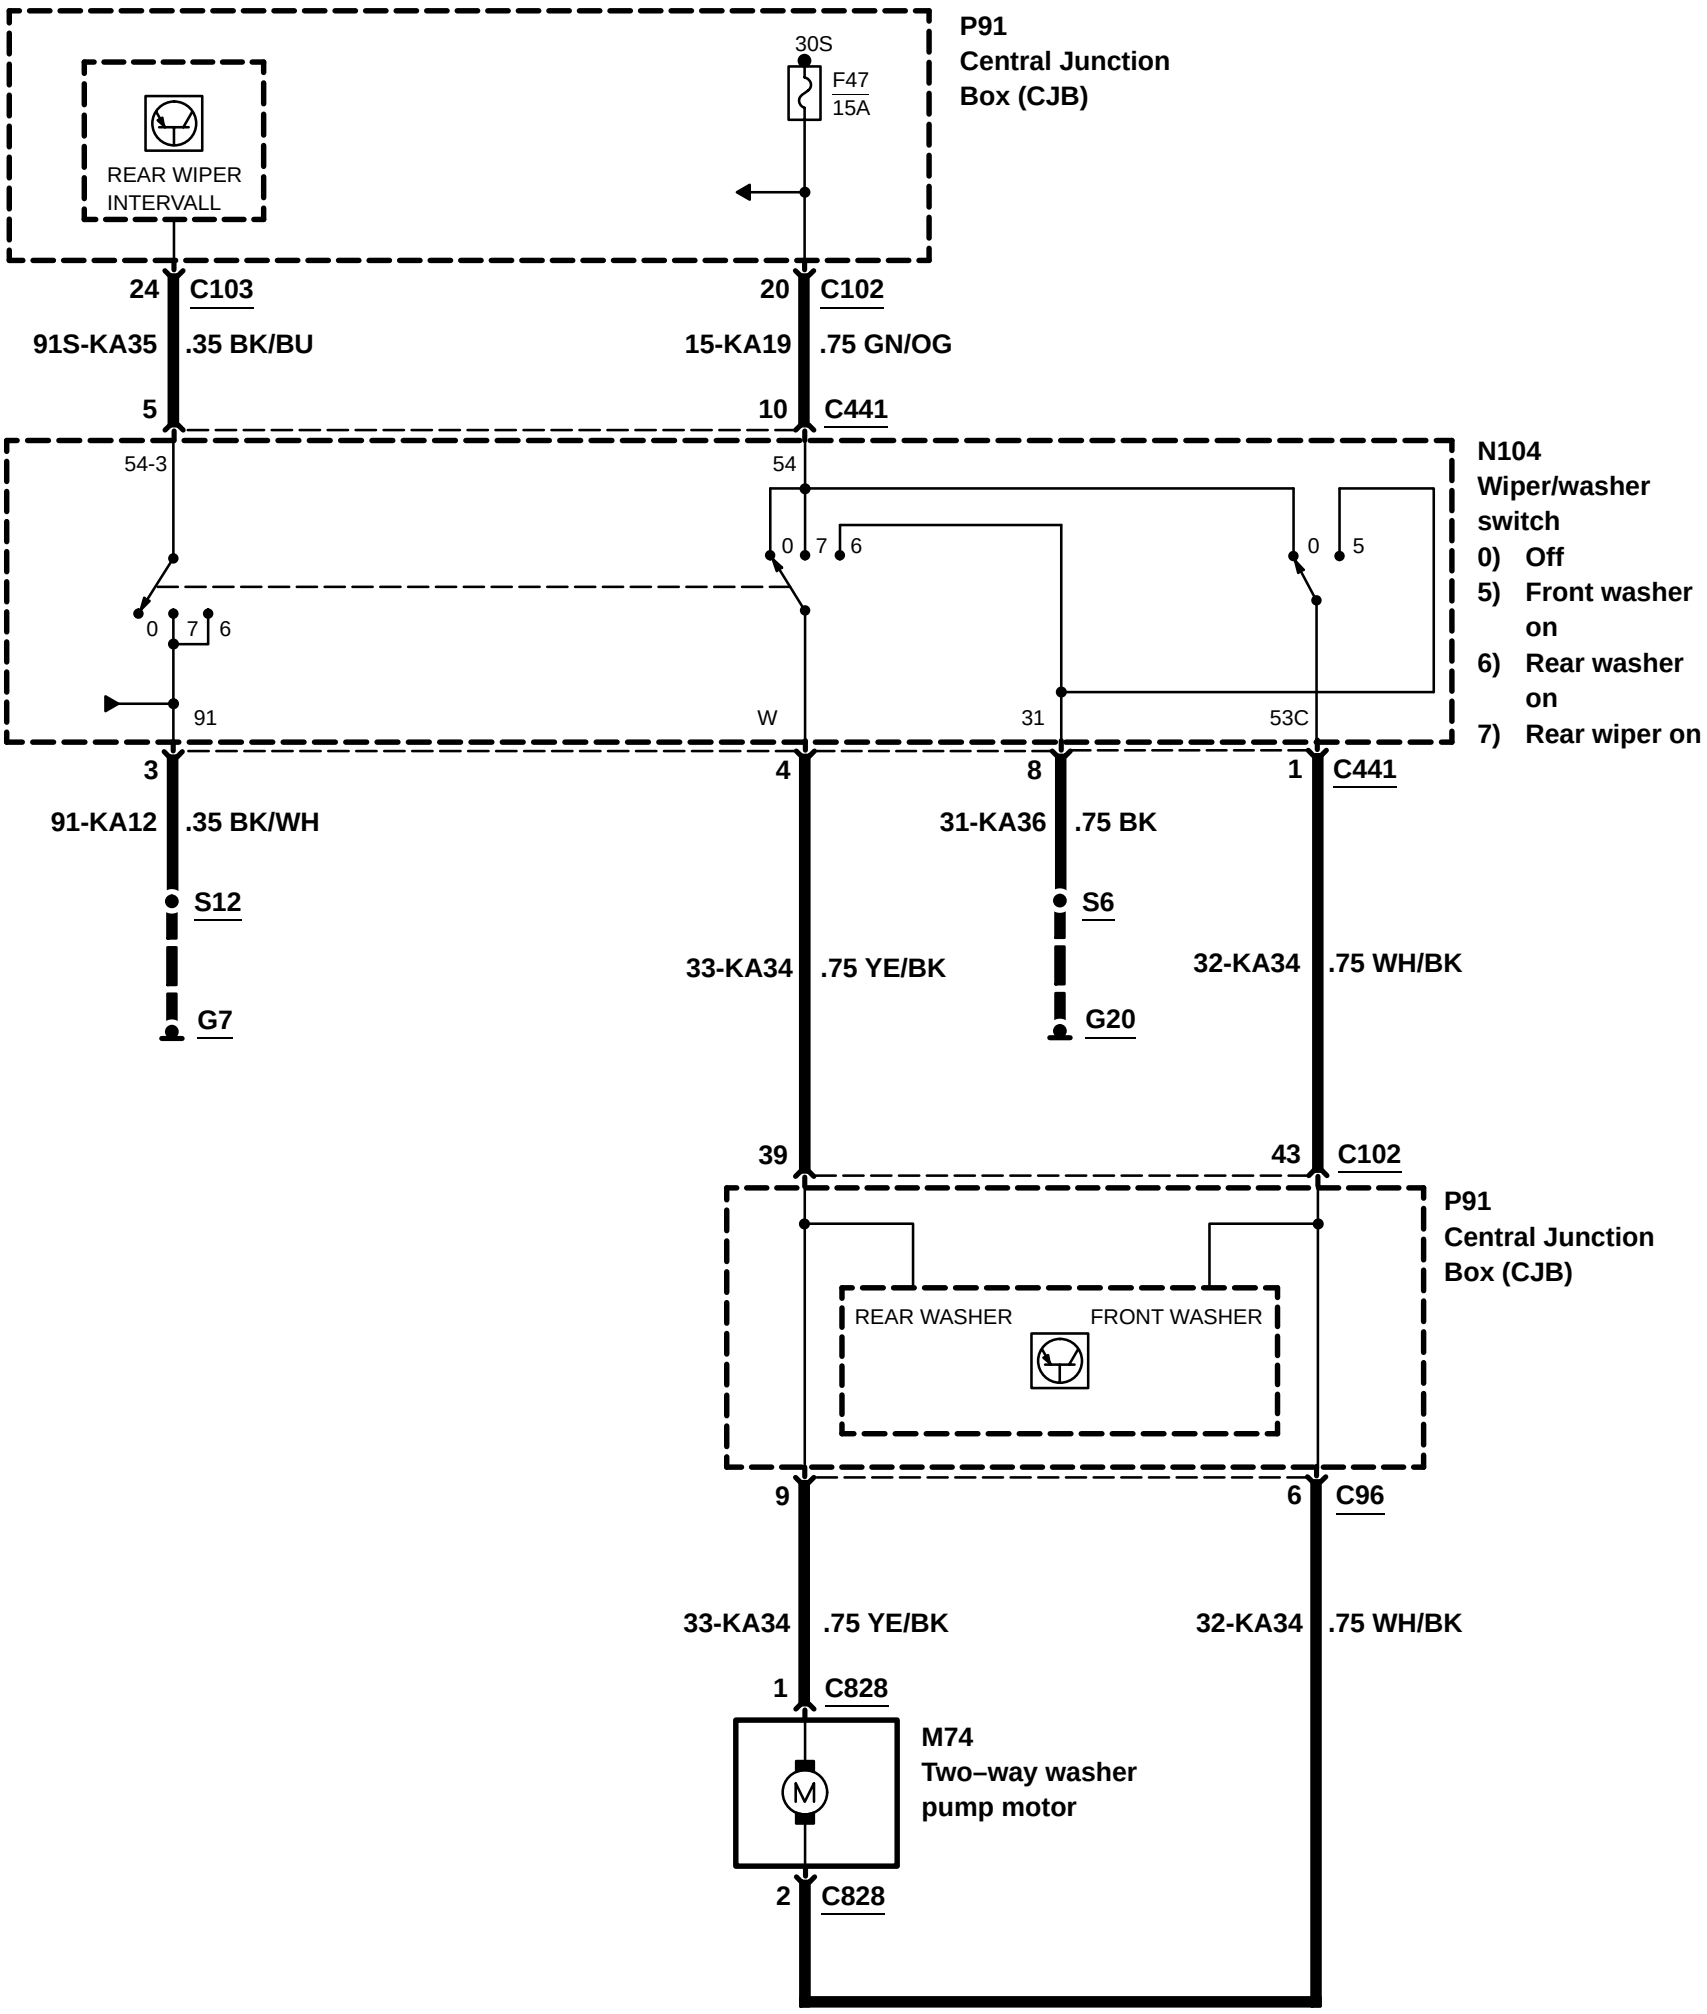


Wipers and Washers – 4–door model

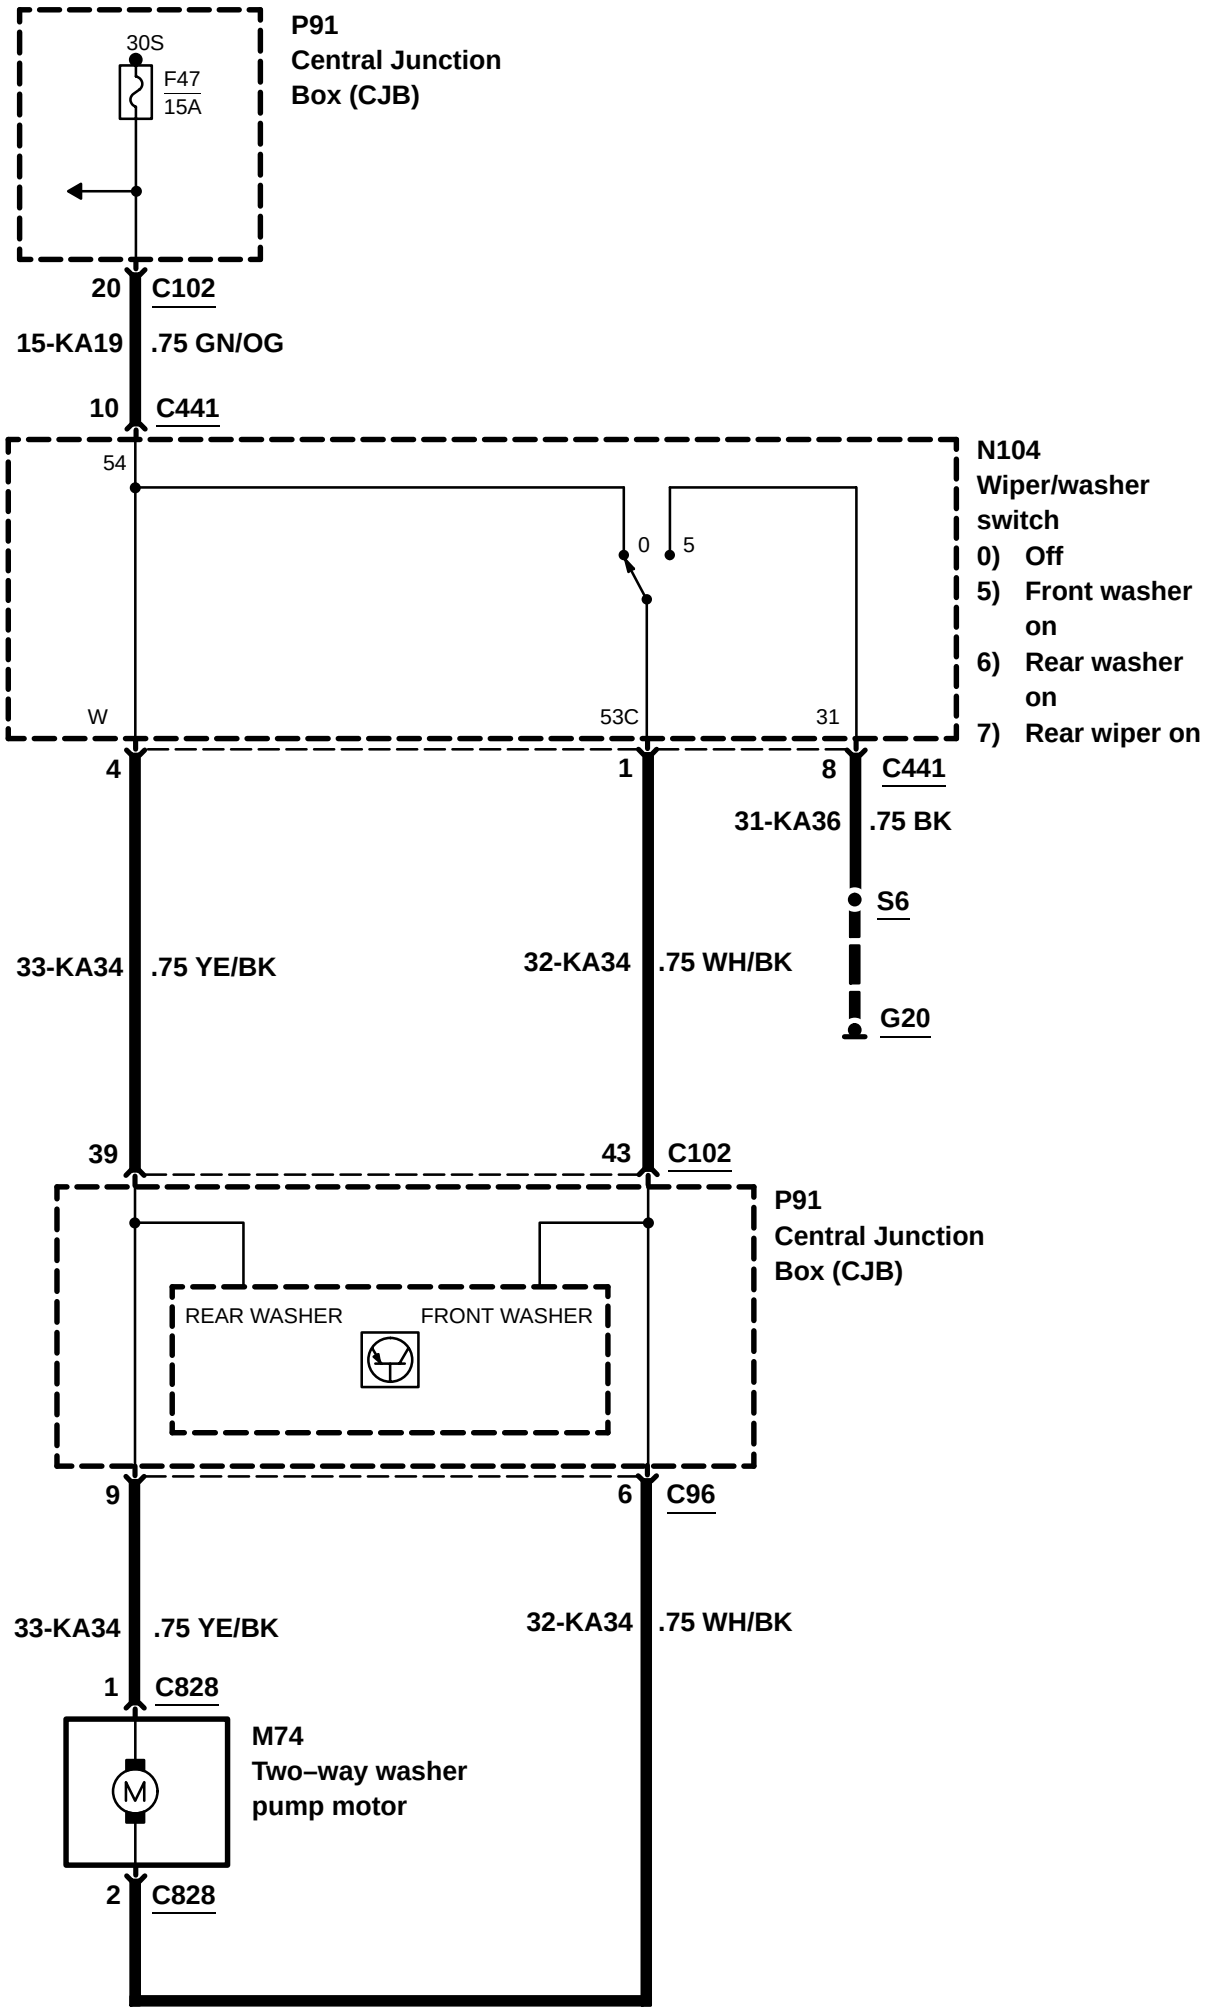


Wipers and Washers – except China as of 08/2005

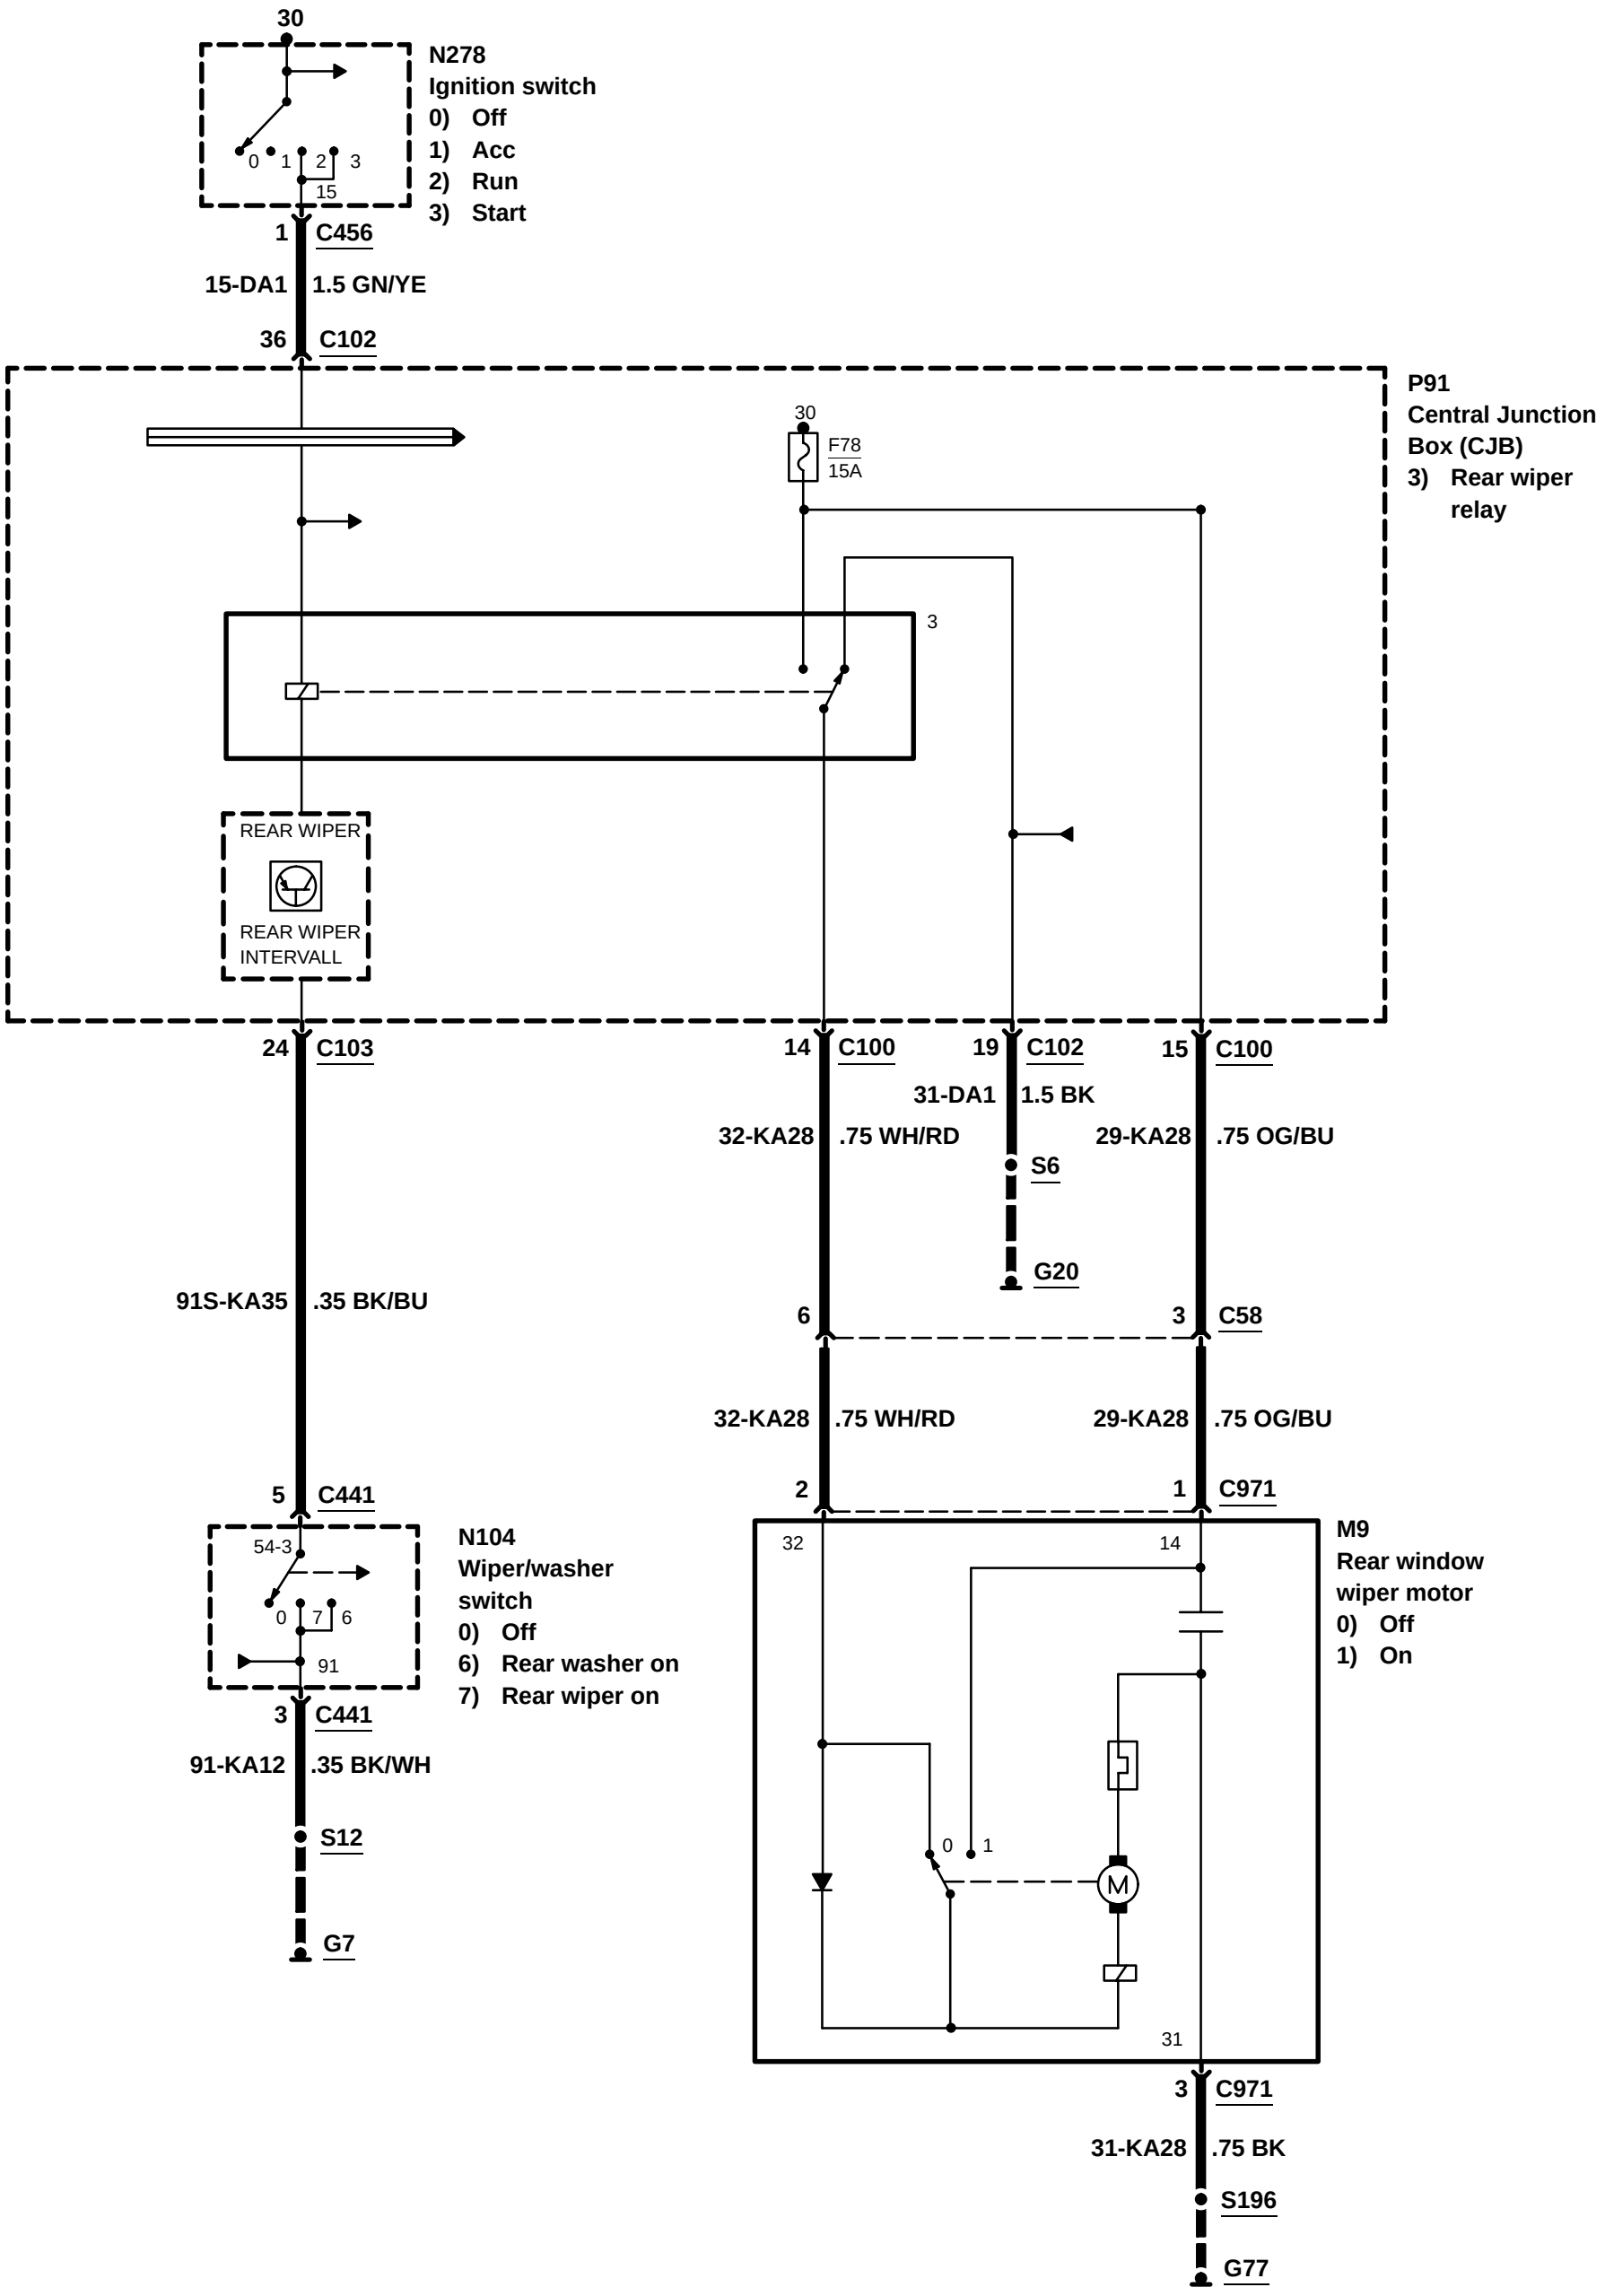


Wipers and Washers – China as of 08/2005

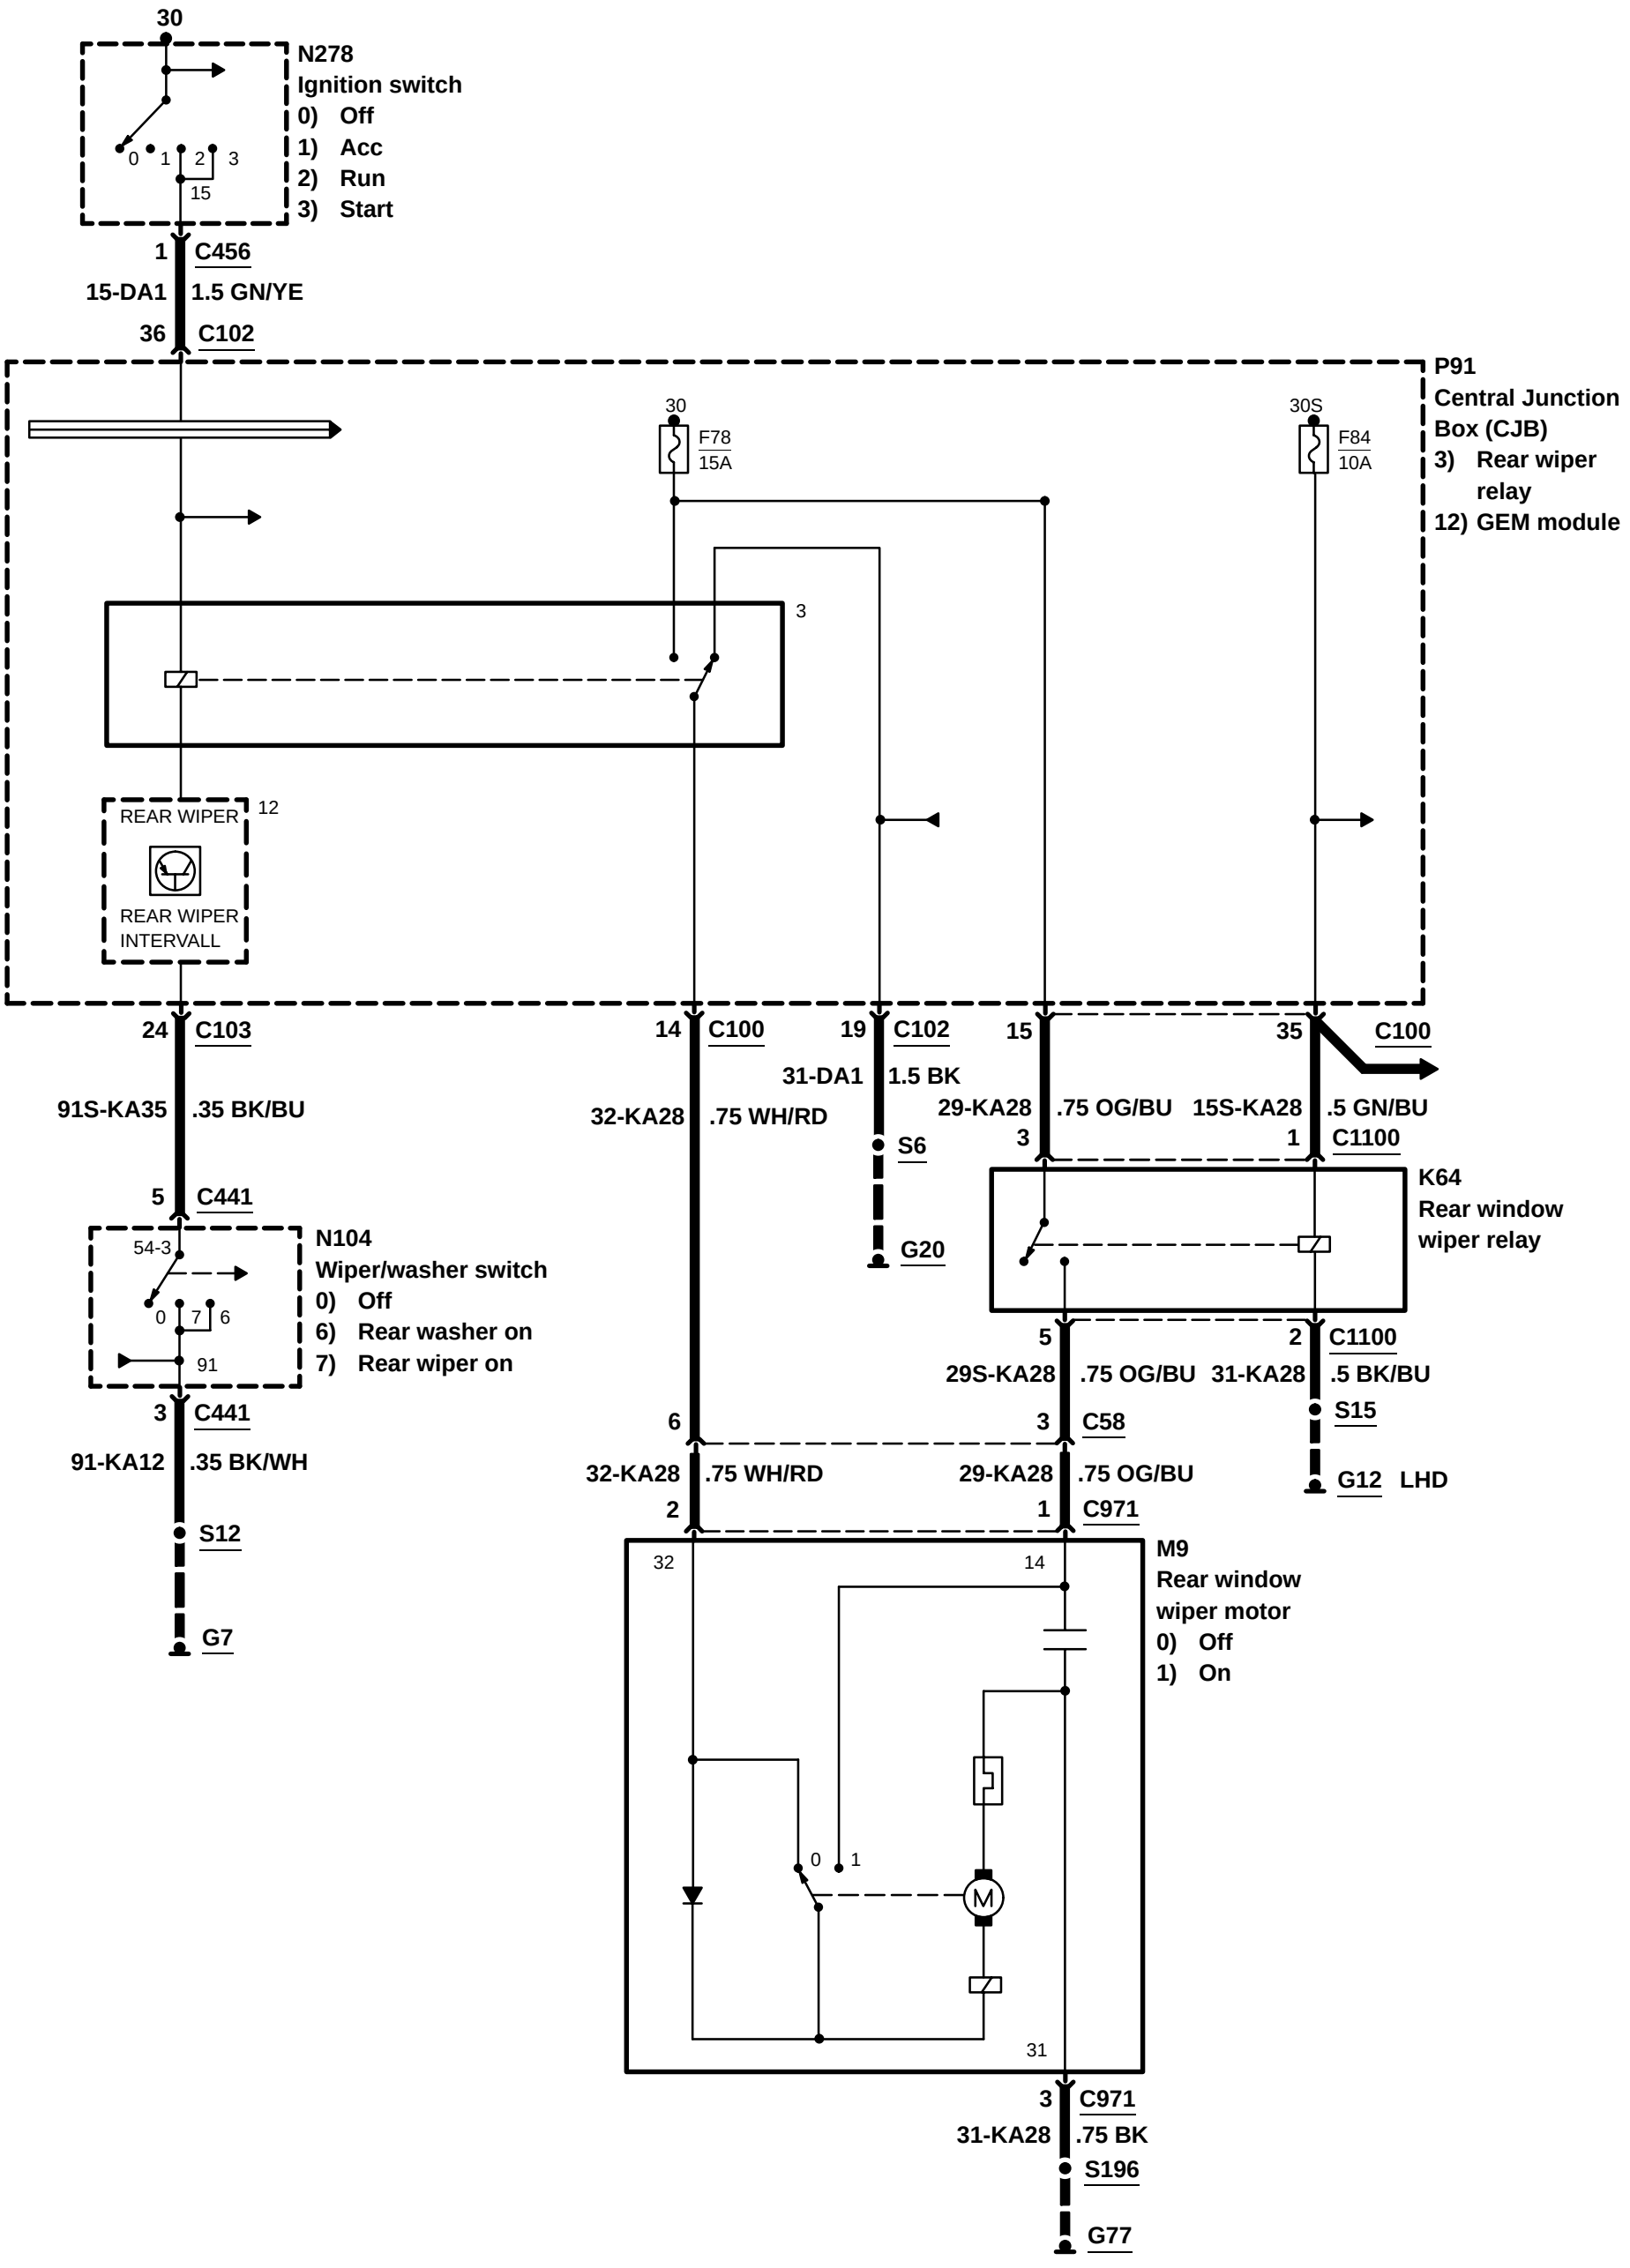


Roof Opening Panel

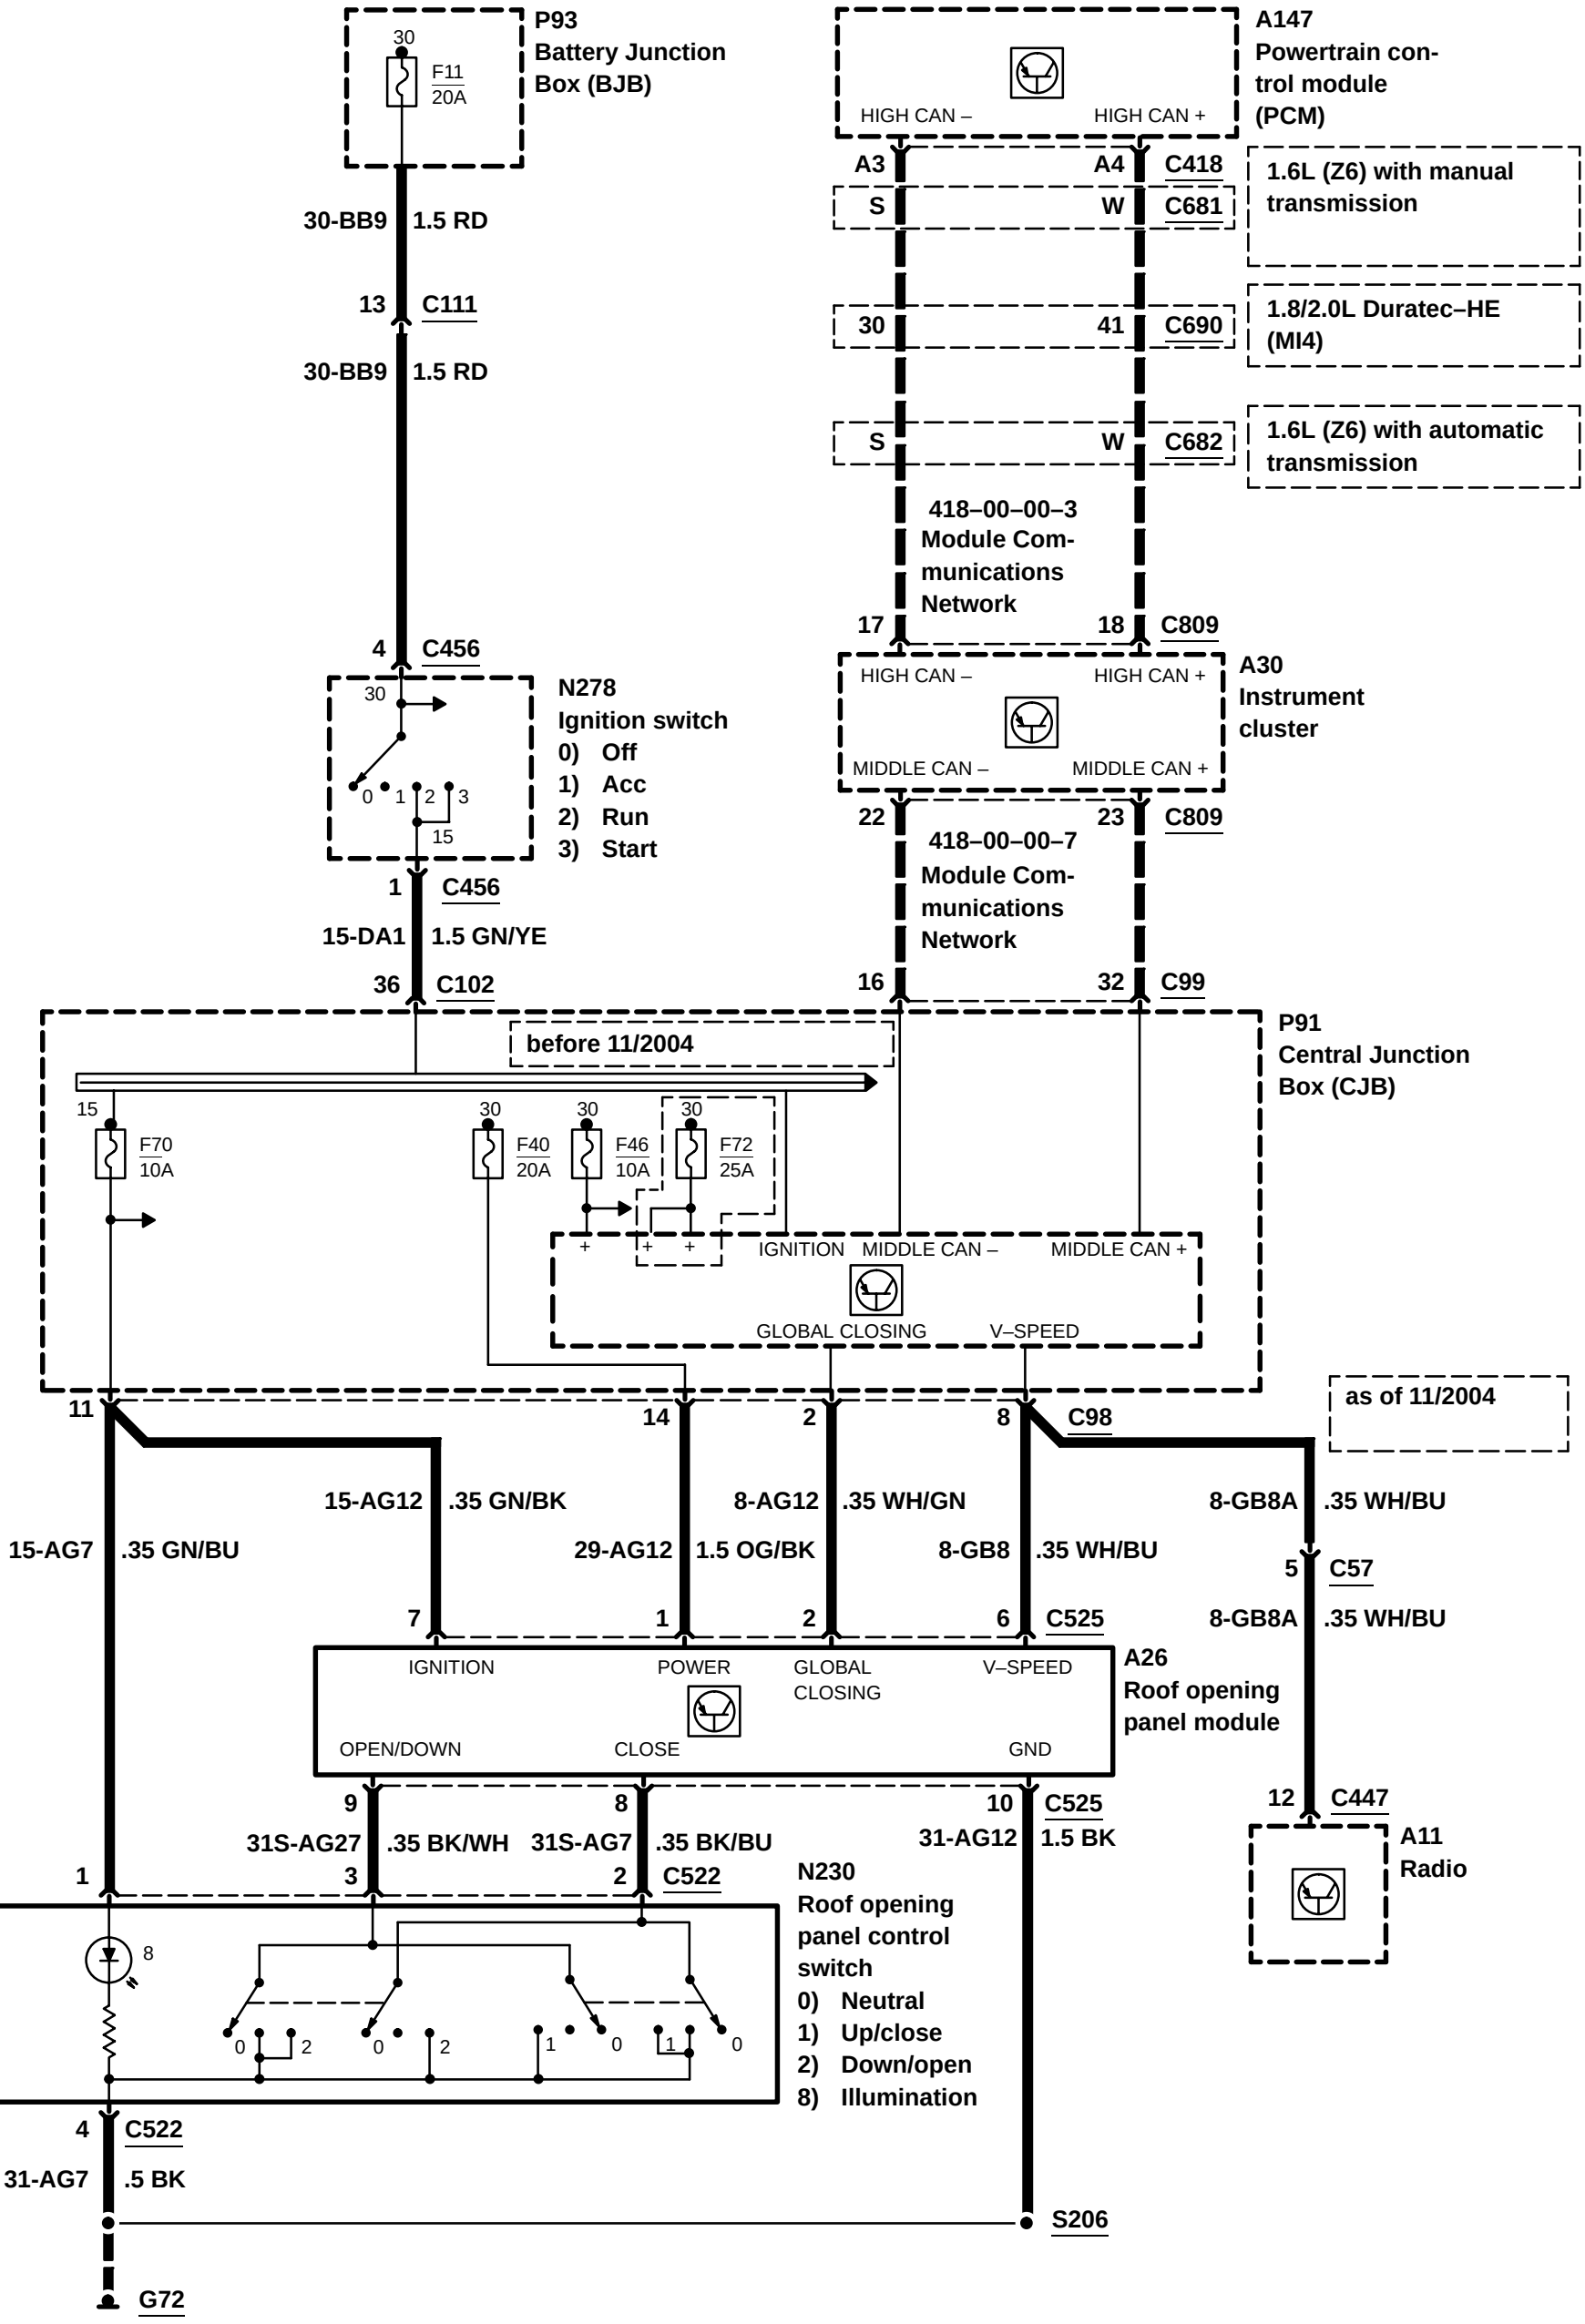


Safety Belt System

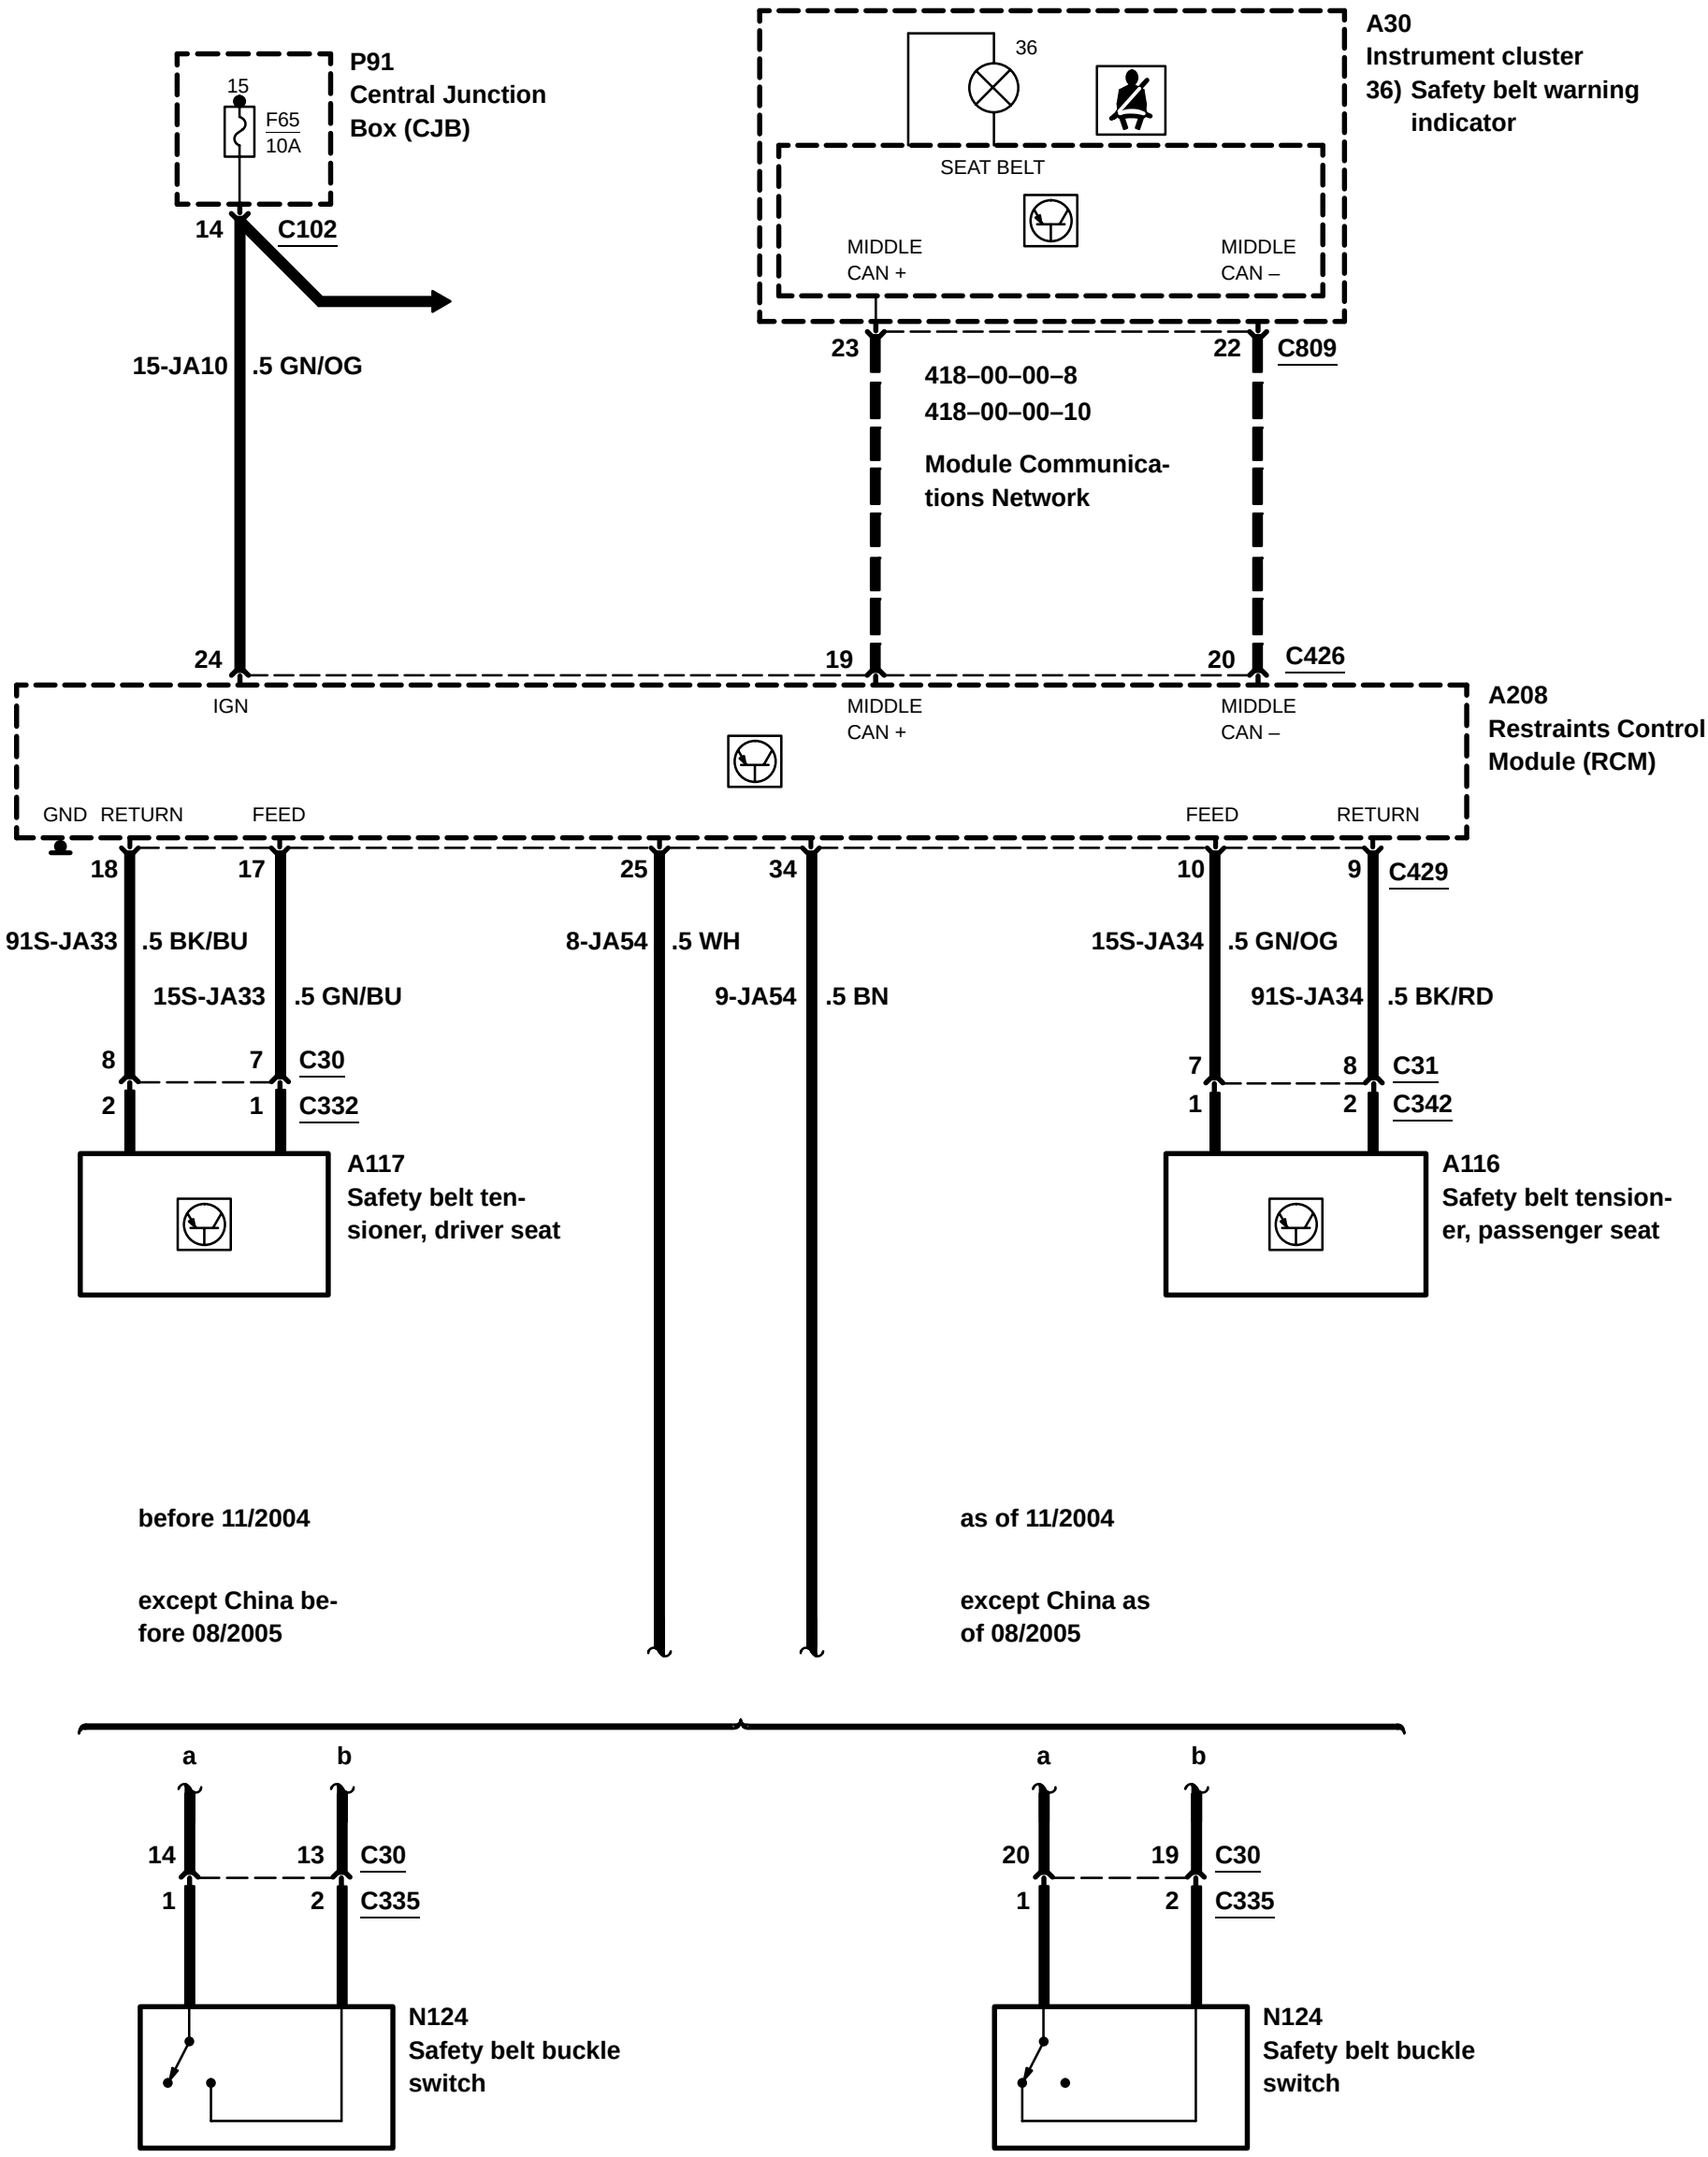


Supplemental Restraint System

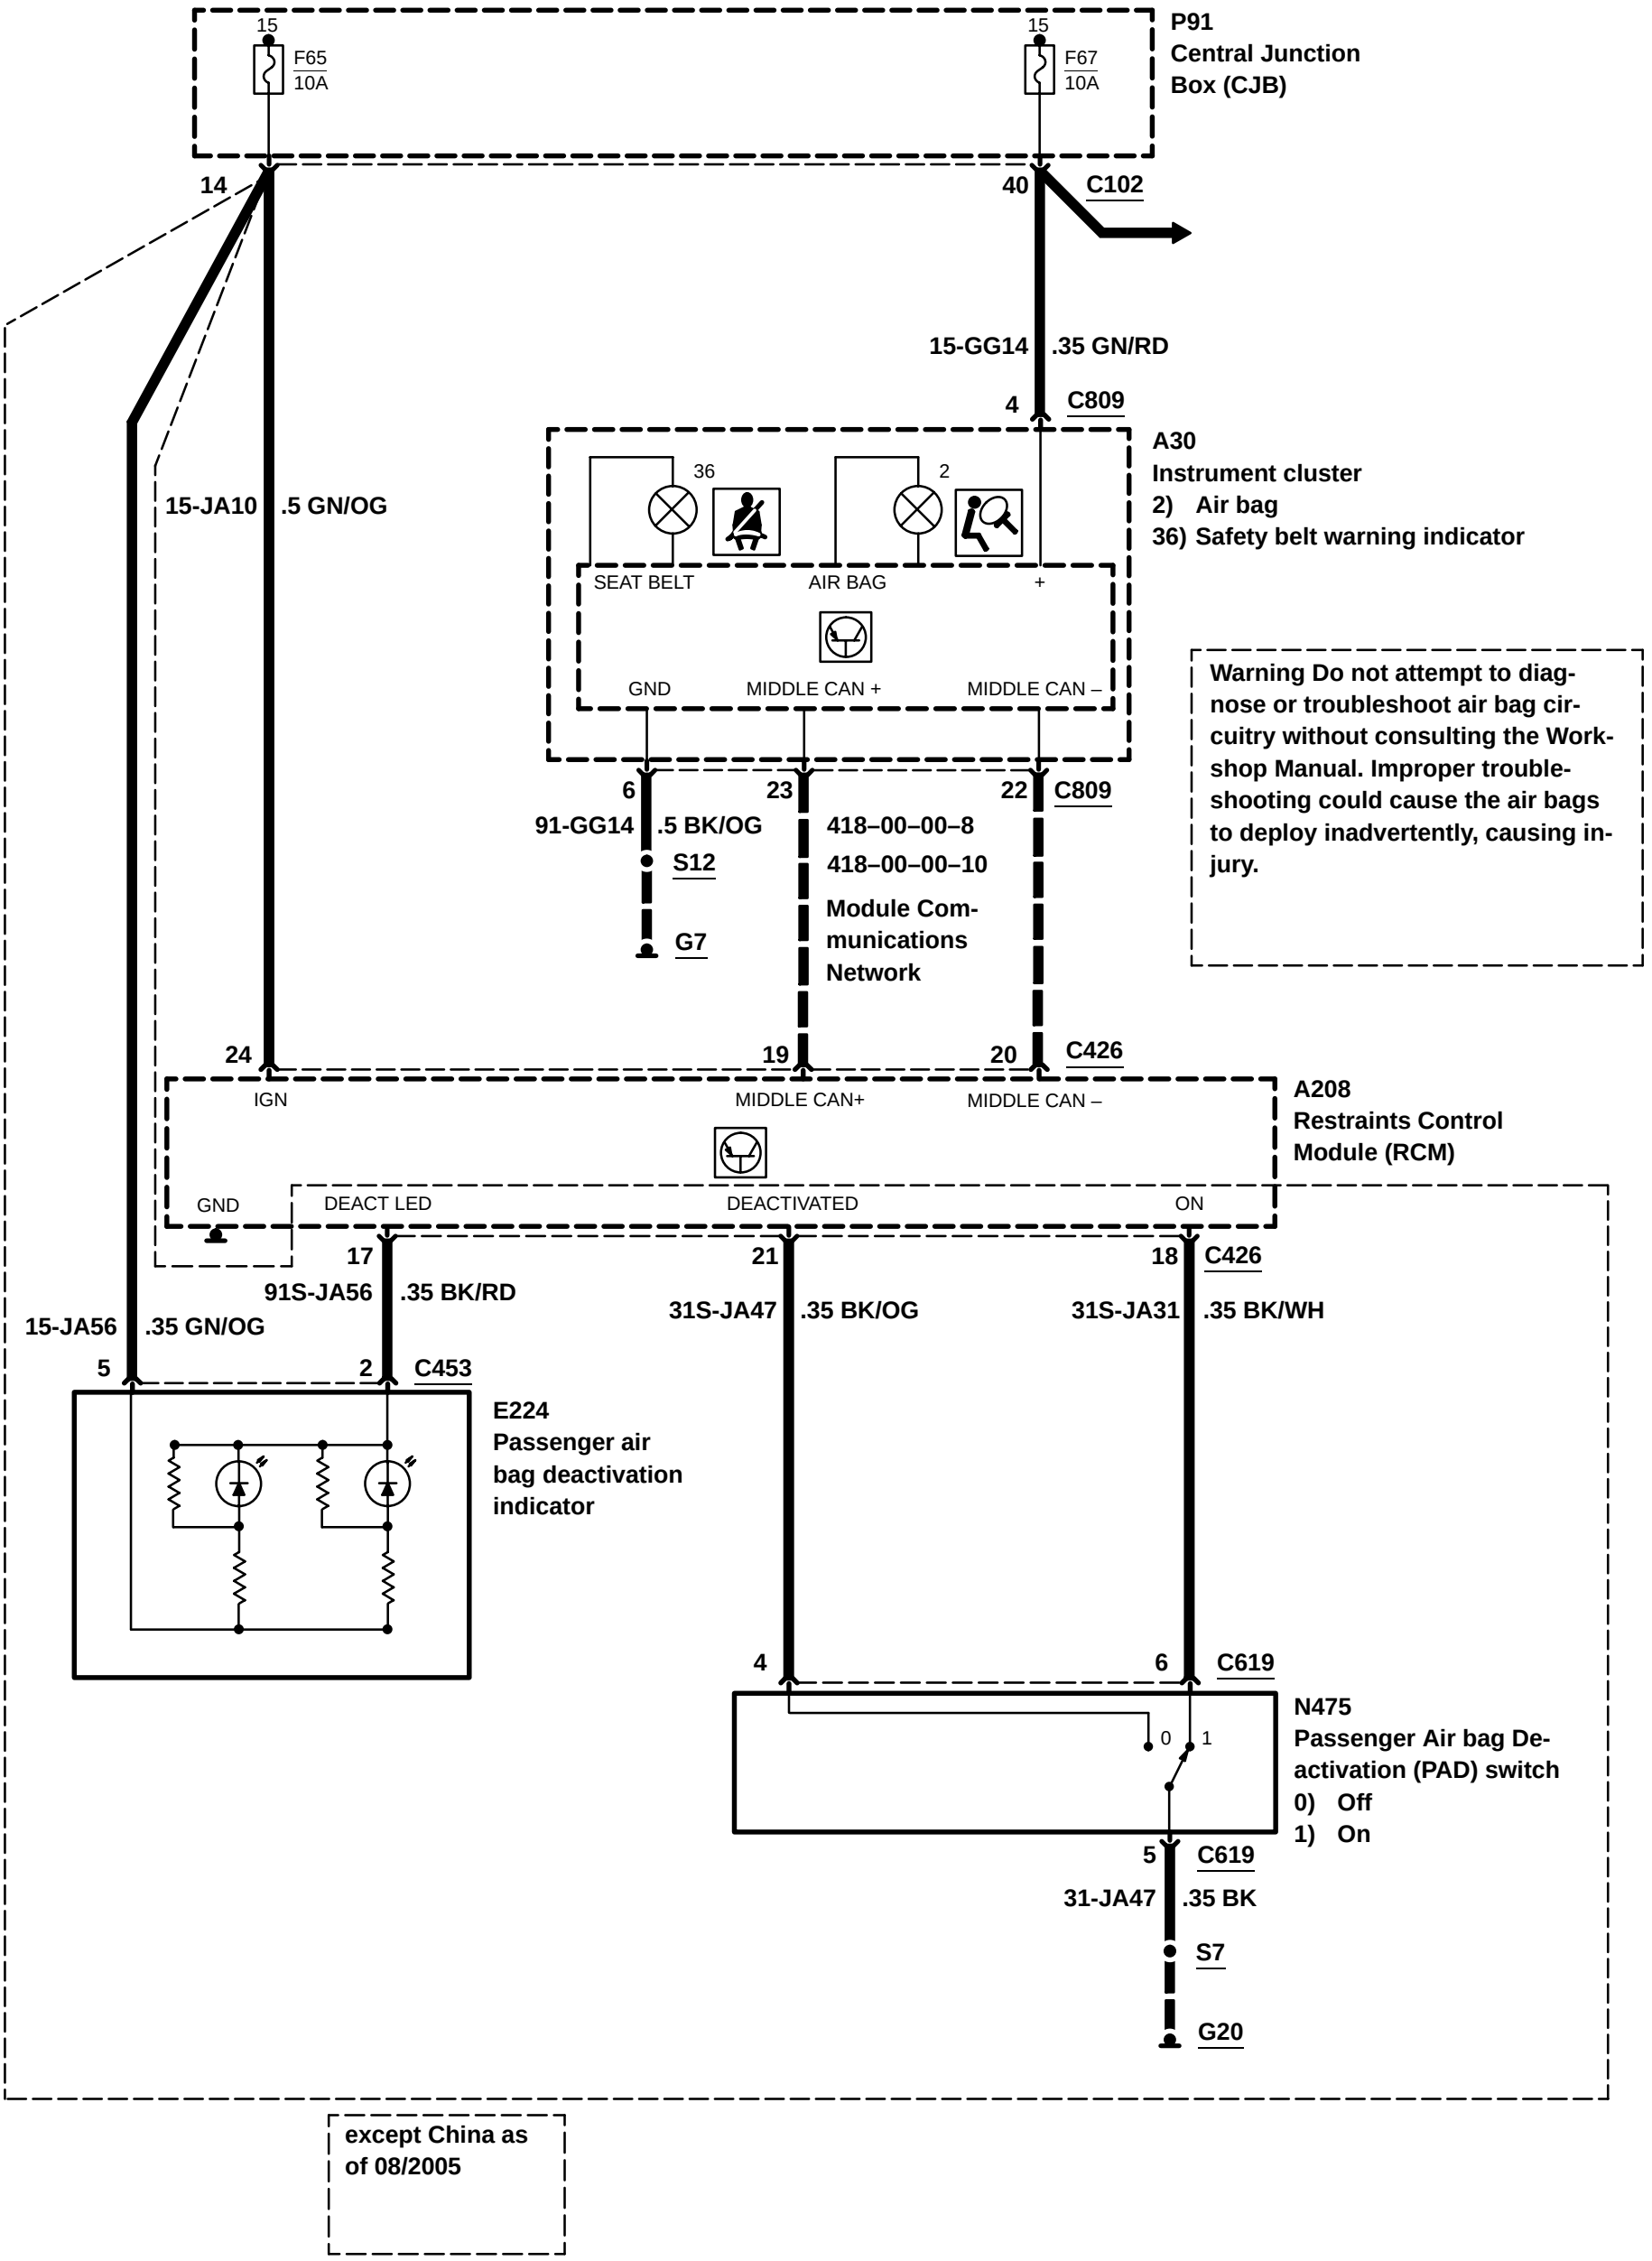


Supplemental Restraint System

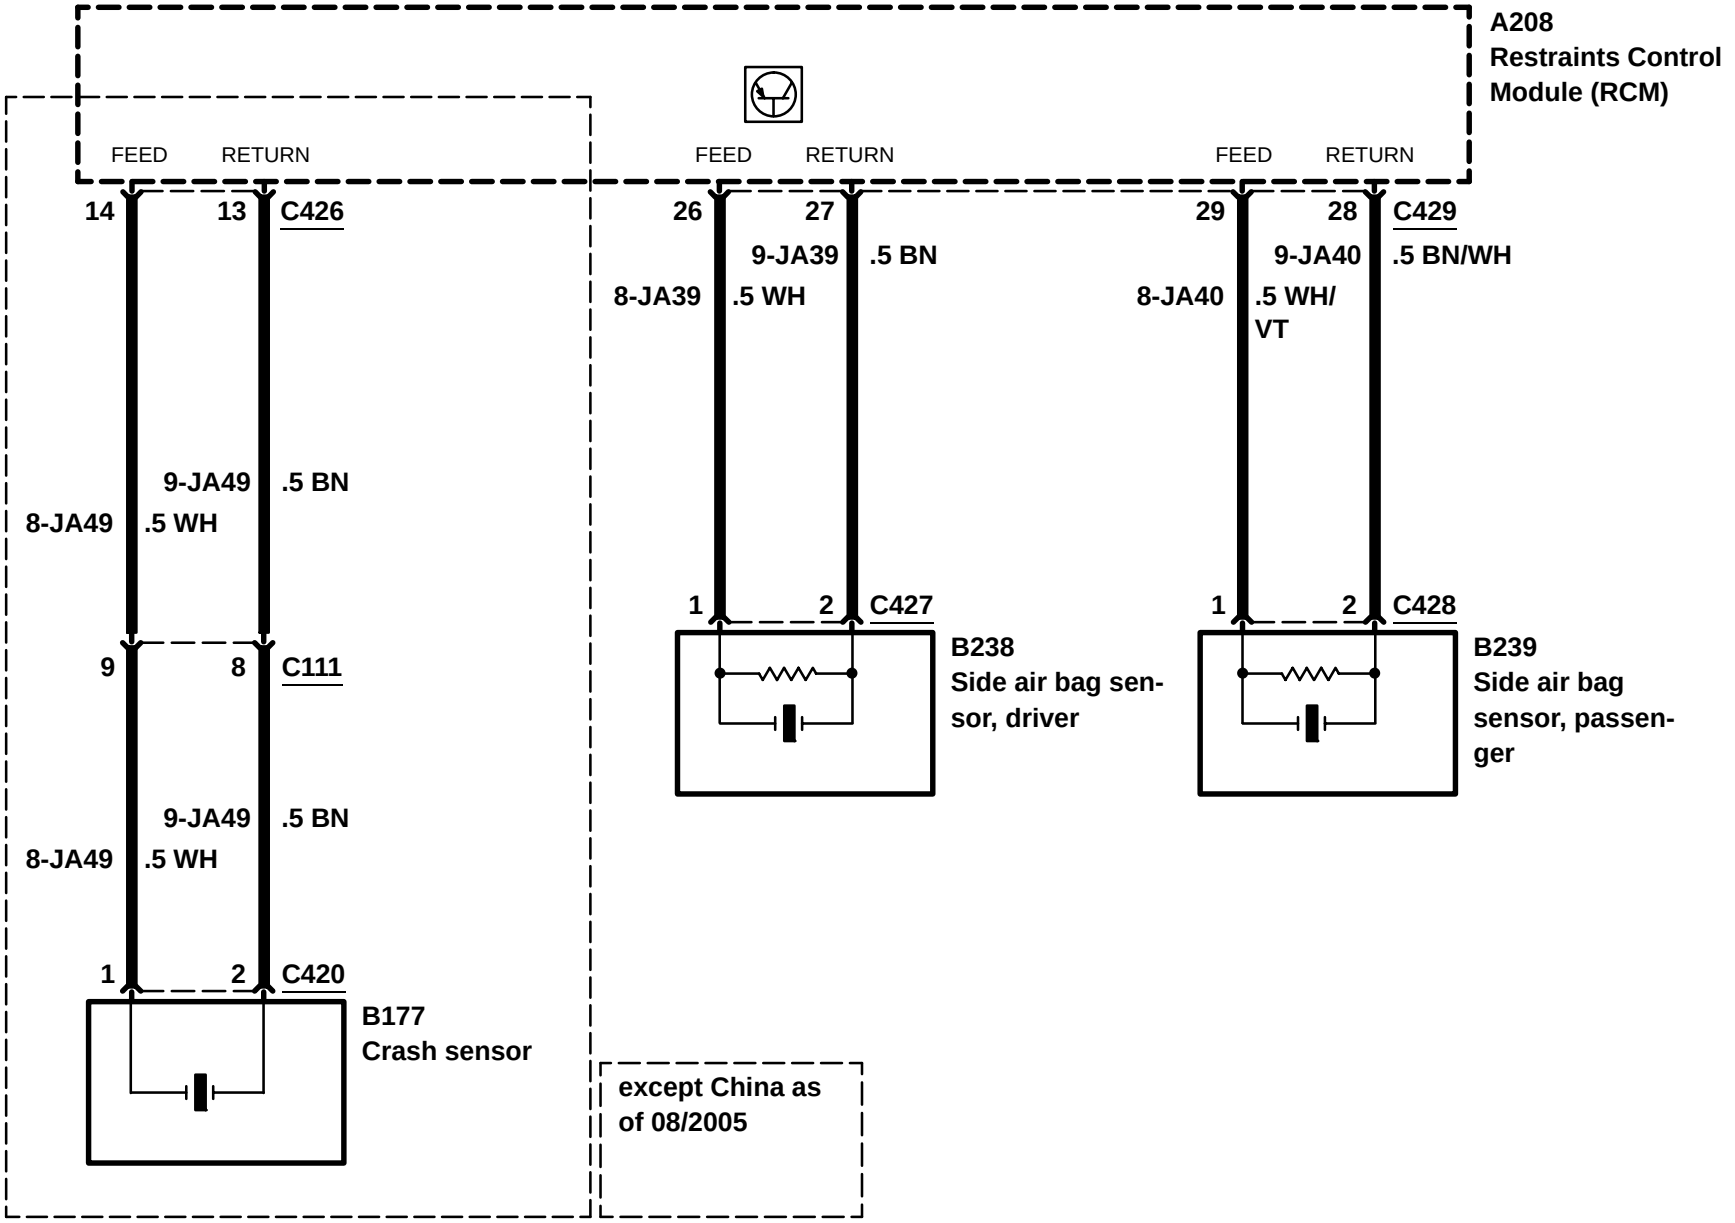


Supplemental Restraint System – Driver air bag

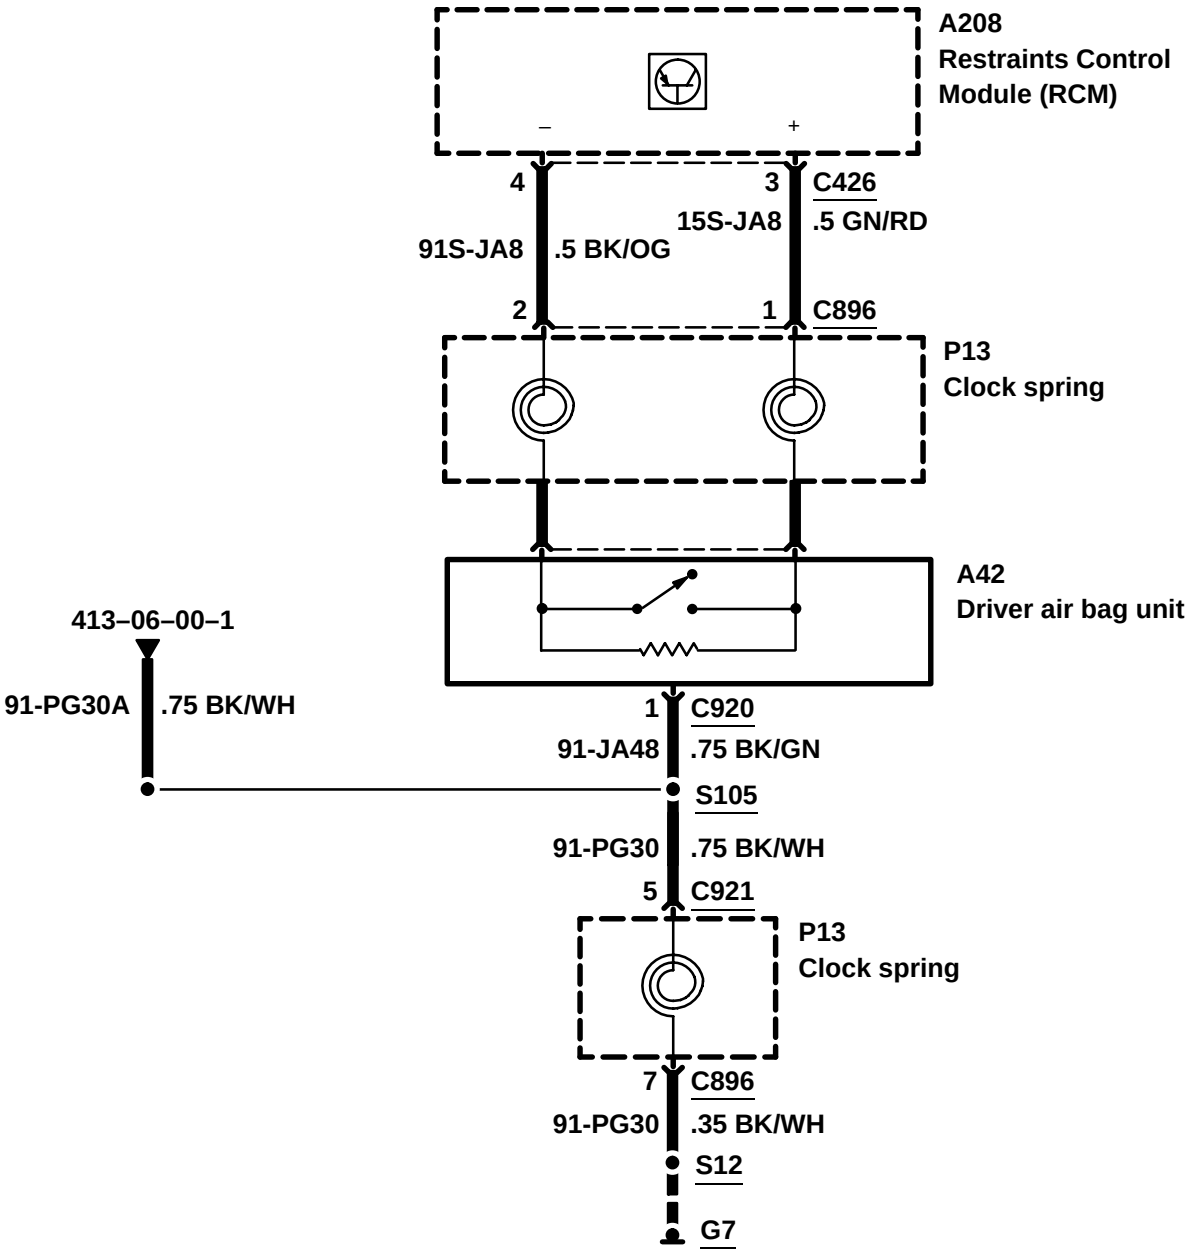


Supplemental Restraint System – Passenger air bag

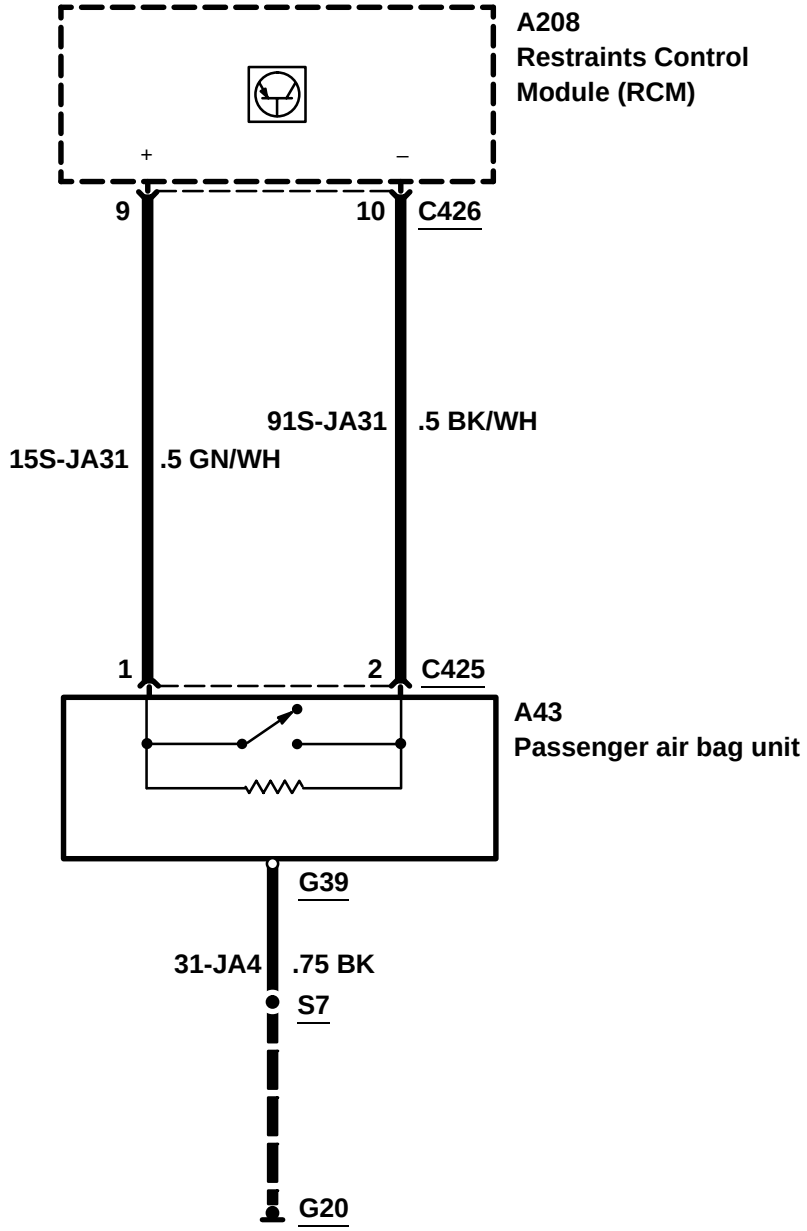


Supplemental Restraint System – with side air bags

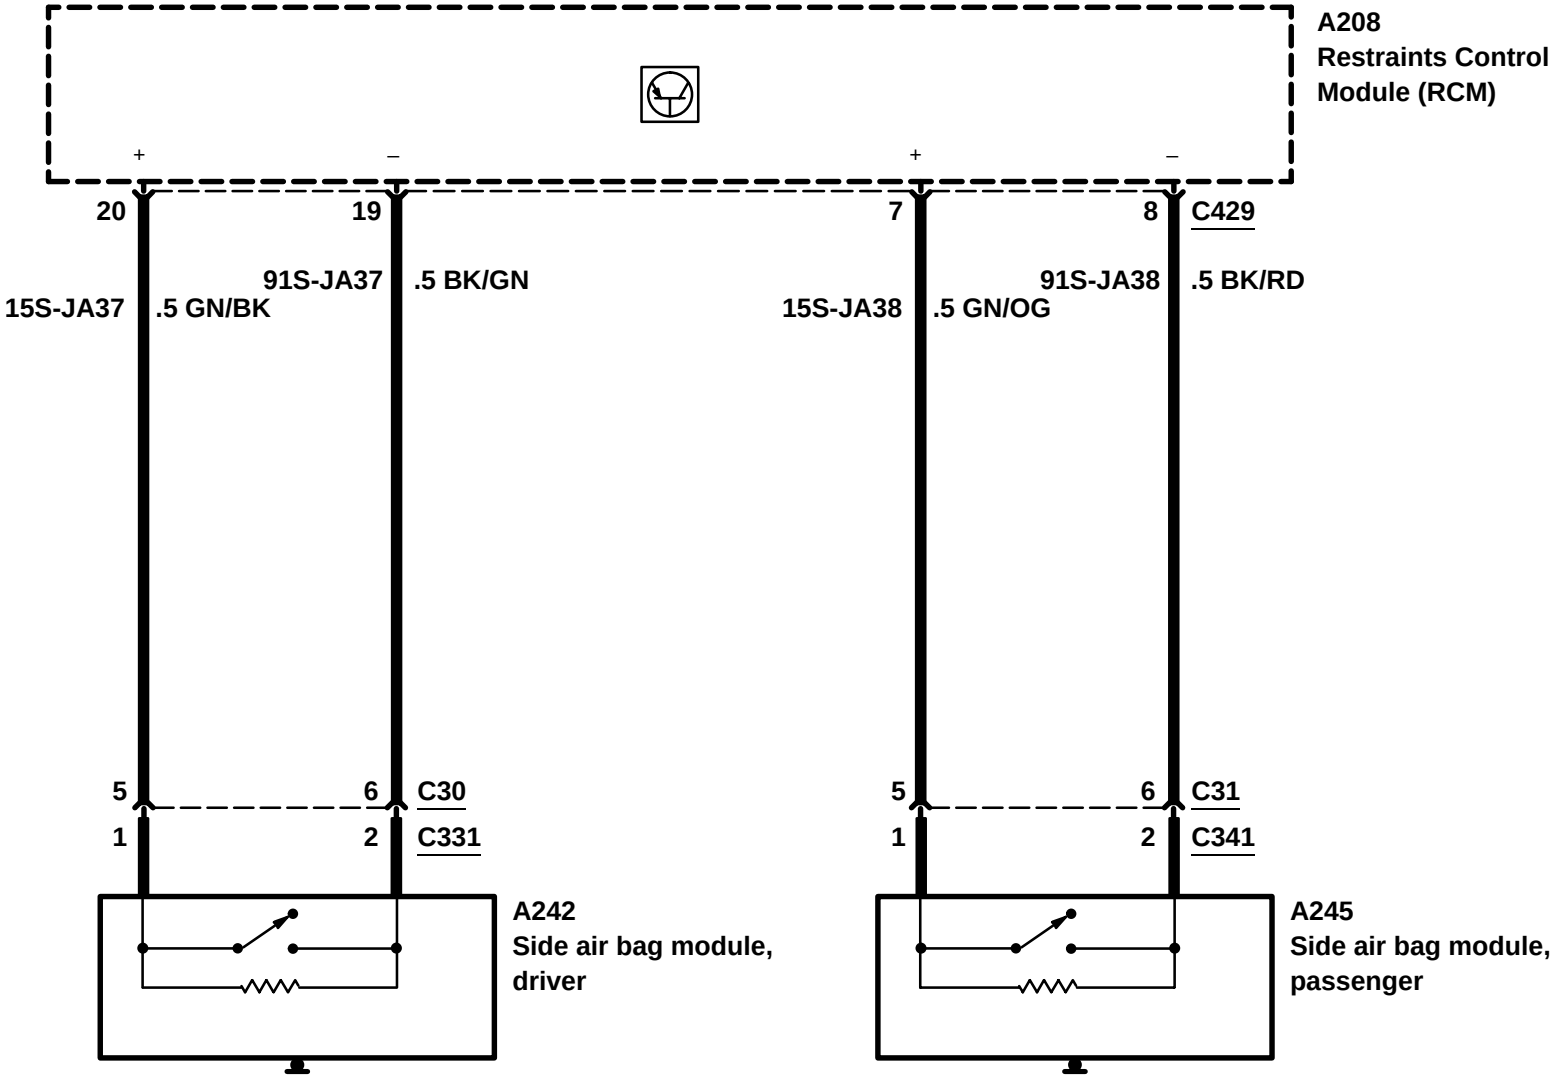

Fuse and Relay Information – Central Junction Box (CJB), front

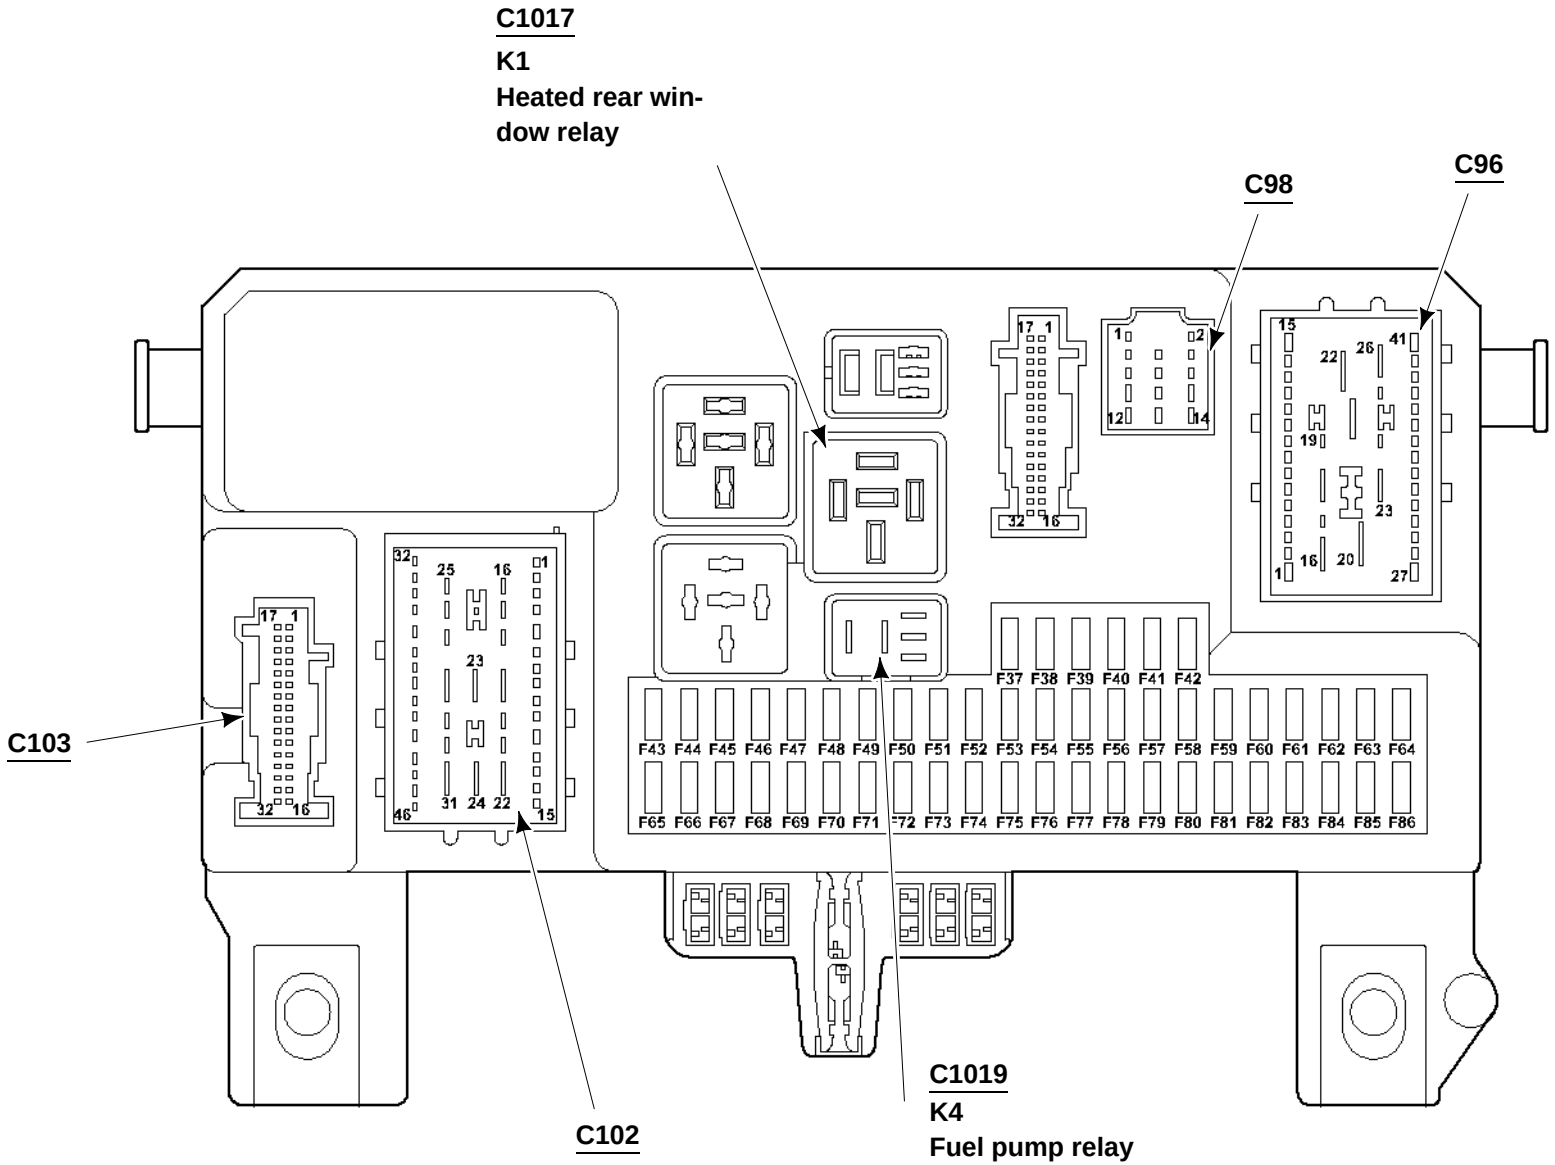

Fuse and Relay Information – Central Junction Box (CJB), rear

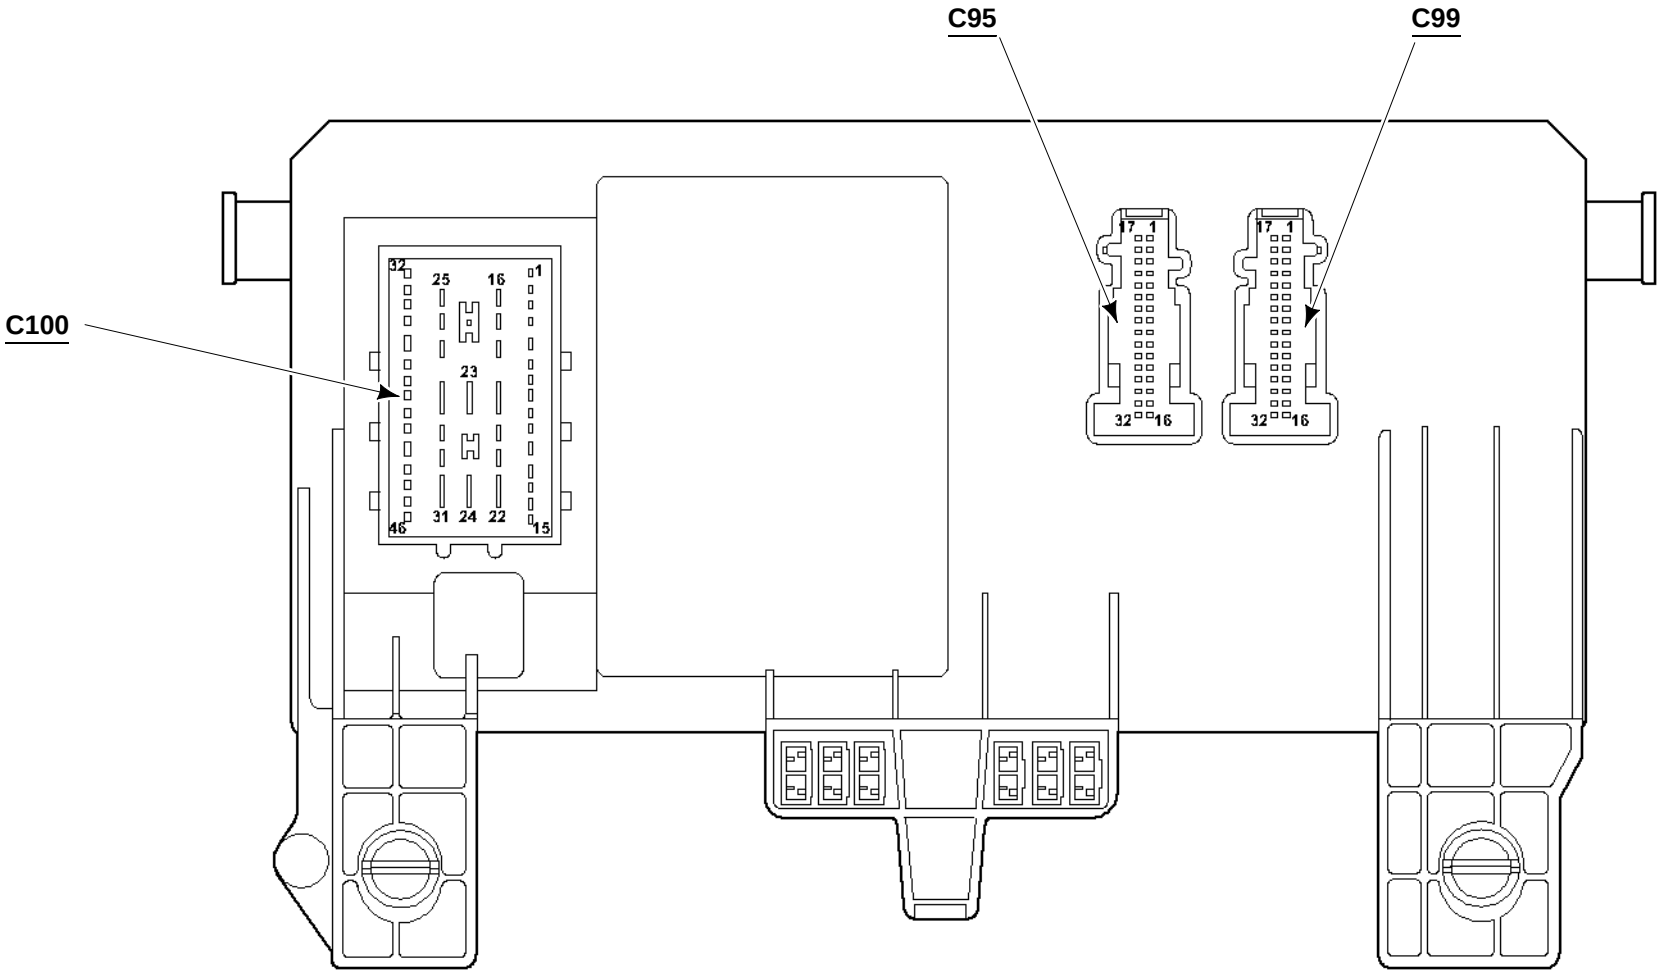

Fuse and Relay Information – Battery Junction Box (BJB)

C1003
K273
Reversing lamps relay

C1005
K69
Fuel heater relay

C1011
K32
A/C Wide Open Throttle (WOT) relay

C1013
K22
Starter relay

C1002
K33
Horn relay


C1008
K41
Ignition relay

C1010
K14
Blower motor relay

C1014
K13
Power hold relay

C1004
K403
Heat exchanger shutoff valve relay

C90

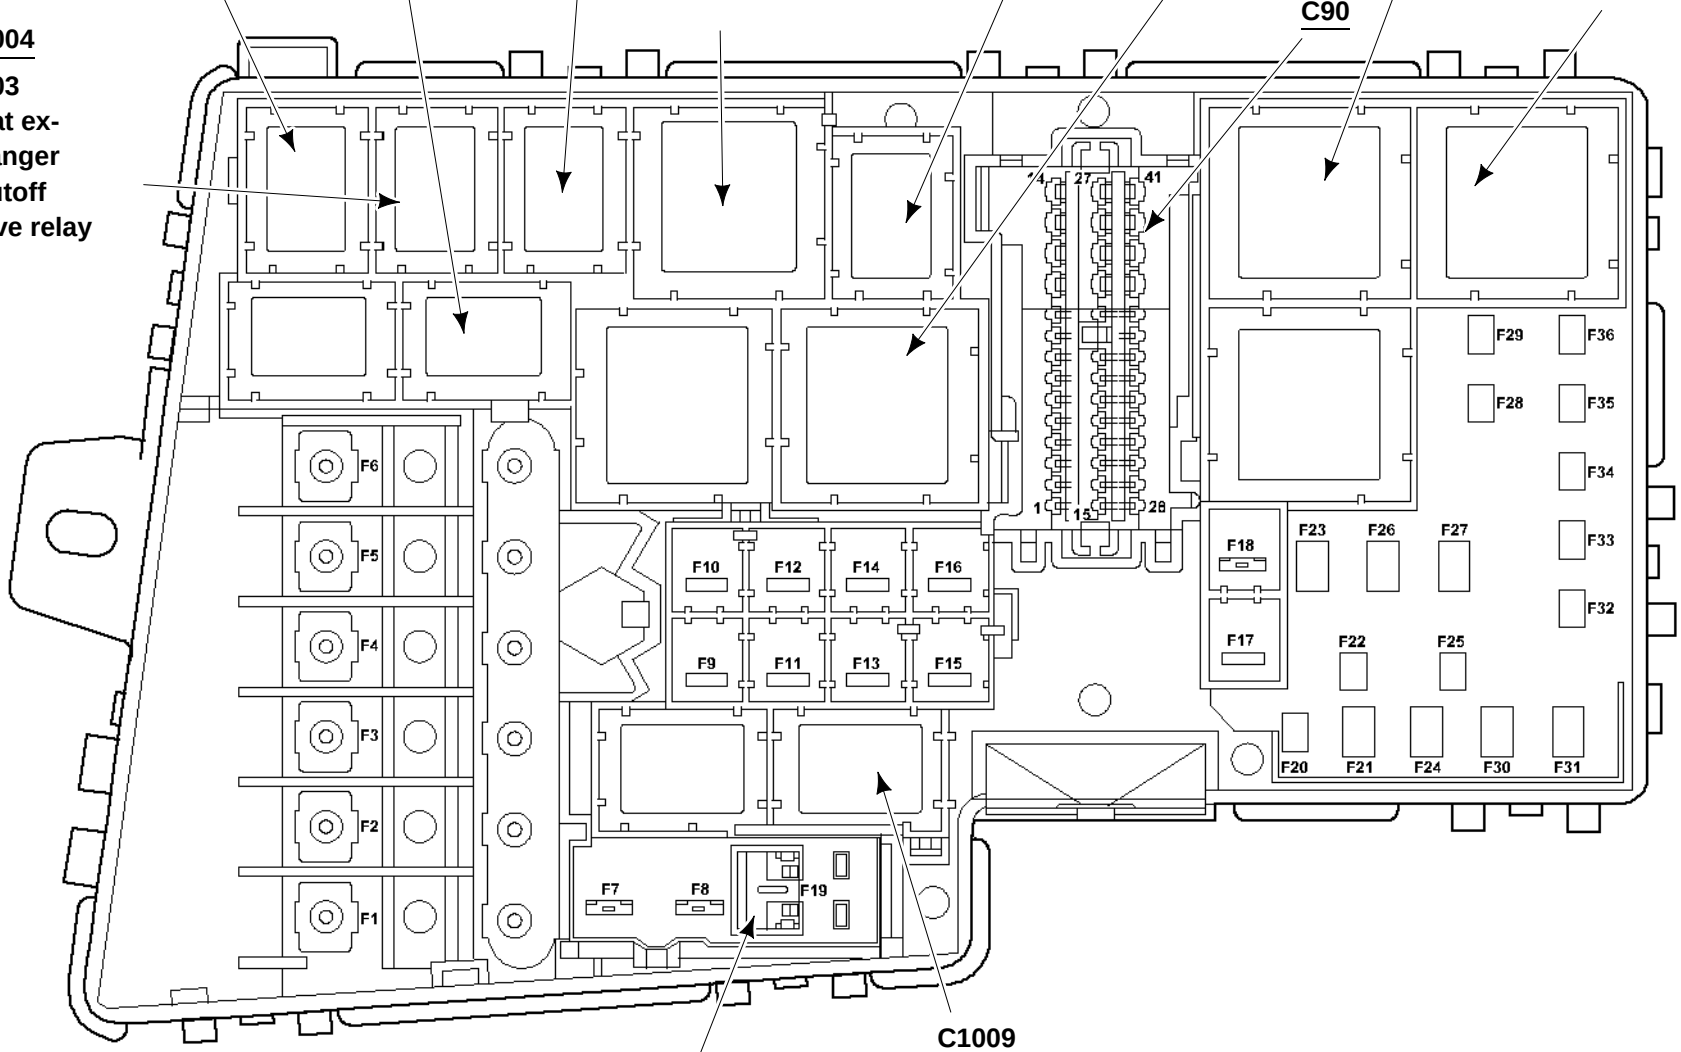

C1009

C556

Central Junction Box (CJB)

		Fuse number													
		37	38	39	40	41	42	43	44	45	46	47	48	49	50	51
Group	Description	10A	10A	20A	20A	20A		10A	10A		10A	15A	20A	15A	20A	15A
206-09A-00	Anti–Lock Control															
206-09C-00	Anti–Lock Control – Stability Assist															
211-02-00	Power Steering															
303-03A-00	Engine Cooling – 1.6L (Z6)															
303-03B-00	Engine Cooling – 1.8/2.0L Duratec–HE (MI4)															
303-03C-00	Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel															
303-04A-00	Fuel Charging and Controls – 1.6L (Z6)															
303-04B-00	Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)															
303-04C-00	Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel															
303-06-00	Starting System															
303-07A-00	Engine Ignition – 1.6L (Z6)															
303-07B-00	Engine Ignition – 1.8/2.0L Duratec–HE (MI4)															
303-07C-00	Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel															
303-14A-00	Electronic Engine Controls – 1.6L (Z6)															●
303-14B-00	Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)															
303-14C-00	Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel															
307-01-00	Automatic Transmission															
310-03-00	Speed Control										●					
412-03-00	Air Conditioning							●			●					
413-00-00	Instrument Cluster and Panel Illumination					●								●		
413-01-00	Instrument Cluster										●			●		
413-06-00	Horn															
		37	38	39	40	41	42	43	44	45	46	47	48	49	50	51
		10A	10A	20A	20A	20A		10A	10A		10A	15A	20A	15A	20A	15A

Central Junction Box (CJB)

Fuse number														
52	53	54	55	56	57	58	59	60	61	62	63	64	65	66
25A	7.5A	7.5A	20A		10A	15A		15A	15A	20A	25A		10A	7.5A
			●								●			●
52	53	54	55	56	57	58	59	60	61	62	63	64	65	66
25A	7.5A	7.5A	20A		10A	15A		15A	15A	20A	25A		10A	7.5A

Group
206-09A-00
206-09C-00
211-02-00
303-03A-00
303-03B-00
303-03C-00
303-04A-00
303-04B-00
303-04C-00
303-06-00
303-07A-00
303-07B-00
303-07C-00
303-14A-00
303-14B-00
303-14C-00
307-01-00
310-03-00
412-03-00
413-00-00
413-01-00
413-06-00

Central Junction Box (CJB)

Group	Description	Fuse number 67	68	69	70	71	72	73	74	75	76
		10A	7.5A	20A	10A		25A	7.5A	15A		7.5A
206-09A-00	Anti–Lock Control										
206-09C-00	Anti–Lock Control – Stability Assist										
211-02-00	Power Steering										
303-03A-00	Engine Cooling – 1.6L (Z6)										
303-03B-00	Engine Cooling – 1.8/2.0L Duratec–HE (MI4)										
303-03C-00	Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel										
303-04A-00	Fuel Charging and Controls – 1.6L (Z6)										
303-04B-00	Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)										
303-04C-00	Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel										
303-06-00	Starting System										
303-07A-00	Engine Ignition – 1.6L (Z6)										
303-07B-00	Engine Ignition – 1.8/2.0L Duratec–HE (MI4)										
303-07C-00	Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel										
303-14A-00	Electronic Engine Controls – 1.6L (Z6)										
303-14B-00	Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)										
303-14C-00	Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel										
307-01-00	Automatic Transmission				●						
310-03-00	Speed Control						●				
412-03-00	Air Conditioning				●		●				
413-00-00	Instrument Cluster and Panel Illumination				●						
413-01-00	Instrument Cluster	●	●				●				
413-06-00	Horn										
		67	68	69	70	71	72	73	74	75	76
		10A	7.5A	20A	10A		25A	7.5A	15A		7.5A

Central Junction Box (CJB)

Fuse number									
77	78	79	80	81	82	83	84	85	86
25A	15A	15A	10A	20A	20A		10A		

	Group
	206-09A-00
	206-09C-00
	211-02-00
	303-03A-00
	303-03B-00
	303-03C-00
	303-04A-00
	303-04B-00
	303-04C-00
	303-06-00
	303-07A-00
	303-07B-00
	303-07C-00
	303-14A-00
	303-14B-00
	303-14C-00
	307-01-00
	310-03-00
	412-03-00
●	413-00-00
	413-01-00
	413-06-00

77	78	79	80	81	82	83	84	85	86
25A	15A	15A	10A	20A	20A		10A		

Central Junction Box (CJB)

		Fuse number														
		37	38	39	40	41	42	43	44	45	46	47	48	49	50	51
Group	**Description**	10A	10A	20A	20A	20A		10A	10A		10A	15A	20A	15A	20A	15A
413-07-00	Clock															
413-13-00	Parking Aid							●								
414-02-00	Generator and Regulator															
415-01-00	Audio Unit															
415-03-00	Speakers															
417-01-00	Exterior Lighting	●	●										●	●		
417-02-00	Interior Lighting															
418-00-00	Module Communications Network								●							
419-01A-00	Anti–Theft – Active															
419-01B-00	Anti–Theft – Passive										●					
419-10-00	Multifunction Electronic Control Modules										●					●
501-09-00	Rear View Mirrors					●										
501-10-00	Seating															
501-11-00	Glass, Frames and Mechanisms					●										
501-12-00	Instrument Panel and Console			●												
501-14-00	Handles, Locks, Latches and Entry Systems					●		●								
501-16-00	Wipers and Washers											●			●	
501-17-00	Roof Opening Panel				●						●					
501-20A-00	Safety Belt System															
501-20B-00	Supplemental Restraint System															
		37	**38**	**39**	**40**	**41**	**42**	**43**	**44**	**45**	**46**	**47**	**48**	**49**	**50**	**51**
		10A	10A	20A	20A	20A		10A	10A		10A	15A	20A	15A	20A	15A

Central Junction Box (CJB)

Fuse number														
52	53	54	55	56	57	58	59	60	61	62	63	64	65	66
25A	7.5A	7.5A	20A		10A	15A		15A	15A	20A	25A		10A	7.5A

															Group
						●									413-07-00
															413-13-00
															414-02-00
						●									415-01-00
															415-03-00
	●	●						●	●					●	417-01-00
															417-02-00
															418-00-00
															419-01A-00
															419-01B-00
															419-10-00
			●		●										501-09-00
										●					501-10-00
●			●								●				501-11-00
															501-12-00
			●												501-14-00
															501-16-00
															501-17-00
													●		501-20A-00
													●		501-20B-00

52	53	54	55	56	57	58	59	60	61	62	63	64	65	66
25A	7.5A	7.5A	20A		10A	15A		15A	15A	20A	25A		10A	7.5A

Central Junction Box (CJB)

		Fuse number									
		67	68	69	70	71	72	73	74	75	76
Group	**Description**	10A	7.5A	20A	10A		25A	7.5A	15A		7.5A
413-07-00	Clock		●								
413-13-00	Parking Aid				●						
414-02-00	Generator and Regulator										
415-01-00	Audio Unit		●								●
415-03-00	Speakers										
417-01-00	Exterior Lighting	●		●			●	●	●		
417-02-00	Interior Lighting						●				
418-00-00	Module Communications Network										
419-01A-00	Anti–Theft – Active						●				
419-01B-00	Anti–Theft – Passive		●								
419-10-00	Multifunction Electronic Control Modules						●				
501-09-00	Rear View Mirrors										
501-10-00	Seating										
501-11-00	Glass, Frames and Mechanisms				●		●				
501-12-00	Instrument Panel and Console										
501-14-00	Handles, Locks, Latches and Entry Systems						●				
501-16-00	Wipers and Washers										
501-17-00	Roof Opening Panel				●		●				
501-20A-00	Safety Belt System										
501-20B-00	Supplemental Restraint System										
		67	**68**	**69**	**70**	**71**	**72**	**73**	**74**	**75**	**76**
		10A	7.5A	20A	10A		25A	7.5A	15A		7.5A

Central Junction Box (CJB)

Fuse number										
77	78	79	80	81	82	83	84	85	86	
25A	15A	15A	10A	20A	20A		10A			Group
										413-07-00
										413-13-00
										414-02-00
					●		●			415-01-00
										415-03-00
							●			417-01-00
			●							417-02-00
										418-00-00
										419-01A-00
										419-01B-00
										419-10-00
		●					●			501-09-00
										501-10-00
				●	●					501-11-00
										501-12-00
●				●	●					501-14-00
	●						●			501-16-00
										501-17-00
										501-20A-00
										501-20B-00
77	78	79	80	81	82	83	84	85	86	
25A	15A	15A	10A	20A	20A		10A			

Battery Junction Box (BJB)

Group	Description	Fuse number 1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		60A	80A	60A			60A			20A	30A	20A				
206-09A-00	Anti–Lock Control															
206-09C-00	Anti–Lock Control – Stability Assist															
211-02-00	Power Steering		●													
303-03A-00	Engine Cooling – 1.6L (Z6)	●														
303-03B-00	Engine Cooling – 1.8/2.0L Duratec–HE (MI4)	●														
303-03C-00	Engine Cooling – 2.0L Duratorq–TDCi (DW) Diesel	●														
303-04A-00	Fuel Charging and Controls – 1.6L (Z6)															
303-04B-00	Fuel Charging and Controls – 1.8/2.0L Duratec–HE (MI4)															
303-04C-00	Fuel Charging and Controls – 2.0L Duratorq–TDCi (DW) Diesel															
303-06-00	Starting System											●				
303-07A-00	Engine Ignition – 1.6L (Z6)															
303-07B-00	Engine Ignition – 1.8/2.0L Duratec–HE (MI4)															
303-07C-00	Glow Plug System – 2.0L Duratorq–TDCi (DW) Diesel						●									
303-14A-00	Electronic Engine Controls – 1.6L (Z6)									●		●				
303-14B-00	Electronic Engine Controls – 1.8/2.0L Duratec–HE (MI4)									●		●				
303-14C-00	Electronic Engine Controls – 2.0L Duratorq–TDCi (DW) Diesel									●		●				
307-01-00	Automatic Transmission											●				
310-03-00	Speed Control											●				
412-03-00	Air Conditioning										●	●				
413-00-00	Instrument Cluster and Panel Illumination											●				
413-01-00	Instrument Cluster											●				
413-06-00	Horn															
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		60A	80A	60A			60A			20A	30A	20A				

Battery Junction Box (BJB)

Fuse number																				
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	1000
				15A					10A		10A			3A	10A	10A			10A		
														●		●					
											●								●		
				●																	
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	1000
				15A					10A		10A			3A	10A	10A			10A		

Group
206-09A-00
206-09C-00
211-02-00
303-03A-00
303-03B-00
303-03C-00
303-04A-00
303-04B-00
303-04C-00
303-06-00
303-07A-00
303-07B-00
303-07C-00
303-14A-00
303-14B-00
303-14C-00
307-01-00
310-03-00
412-03-00
413-00-00
413-01-00
413-06-00

Battery Junction Box (BJB)


		Fuse number													
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Group	**Description**	60A	80A	60A			60A			20A	30A	20A				
413-07-00	Clock															
413-13-00	Parking Aid															
414-02-00	Generator and Regulator															
415-01-00	Audio Unit															
415-03-00	Speakers															
417-01-00	Exterior Lighting			●												
417-02-00	Interior Lighting															
418-00-00	Module Communications Network															
419-01A-00	Anti–Theft – Active															
419-01B-00	Anti–Theft – Passive															
419-10-00	Multifunction Electronic Control Modules											●				
501-09-00	Rear View Mirrors															
501-10-00	Seating															
501-11-00	Glass, Frames and Mechanisms											●				
501-12-00	Instrument Panel and Console															
501-14-00	Handles, Locks, Latches and Entry Systems															
501-16-00	Wipers and Washers			●												
501-17-00	Roof Opening Panel															
501-20A-00	Safety Belt System															
501-20B-00	Supplemental Restraint System															
		1	**2**	**3**	**4**	**5**	**6**	**7**	**8**	**9**	**10**	**11**	**12**	**13**	**14**	**15**
		60A	80A	60A			60A			20A	30A	20A				

Battery Junction Box (BJB)


Fuse number																				
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	1000
				15A					10A		10A			3A	10A	10A			10A		
															●						
									●												
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	1000
				15A					10A		10A			3A	10A	10A			10A		

	Group
	413-07-00
	413-13-00
	414-02-00
	415-01-00
	415-03-00
	417-01-00
	417-02-00
	418-00-00
	419-01A-00
	419-01B-00
	419-10-00
	501-09-00
	501-10-00
	501-11-00
	501-12-00
	501-14-00
	501-16-00
	501-17-00
	501-20A-00
	501-20B-00

Power Distribution

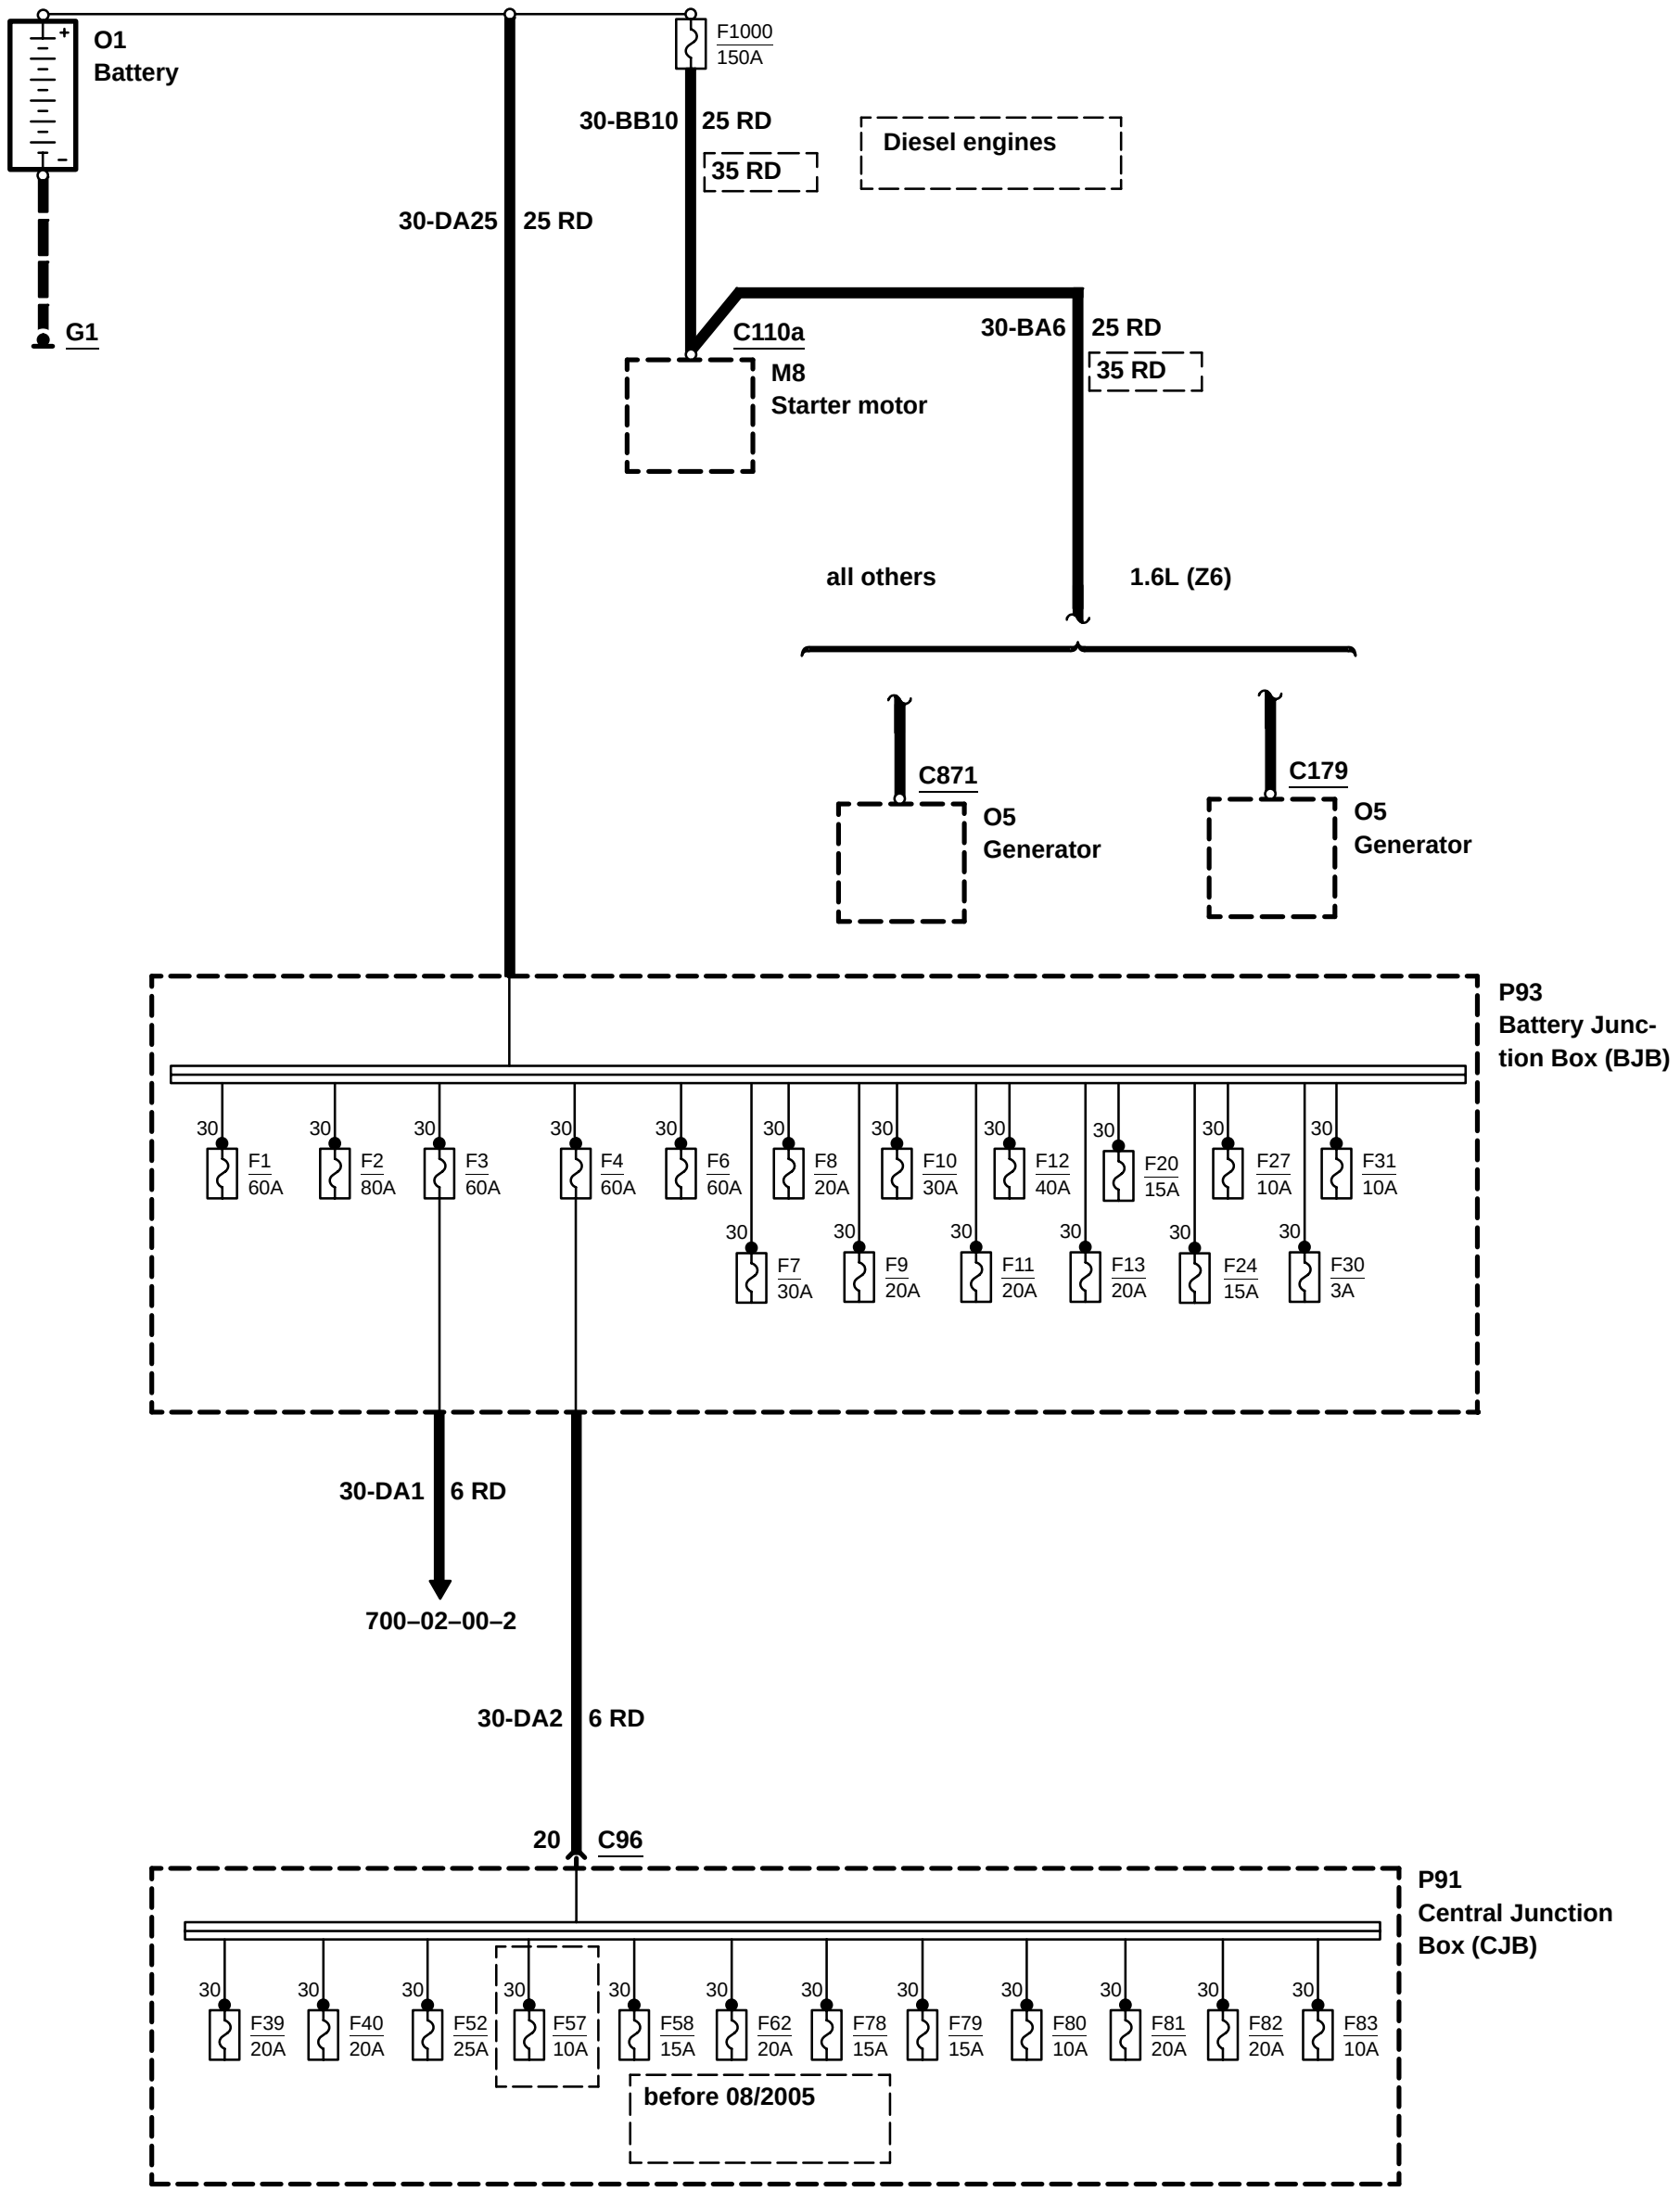


Power Distribution

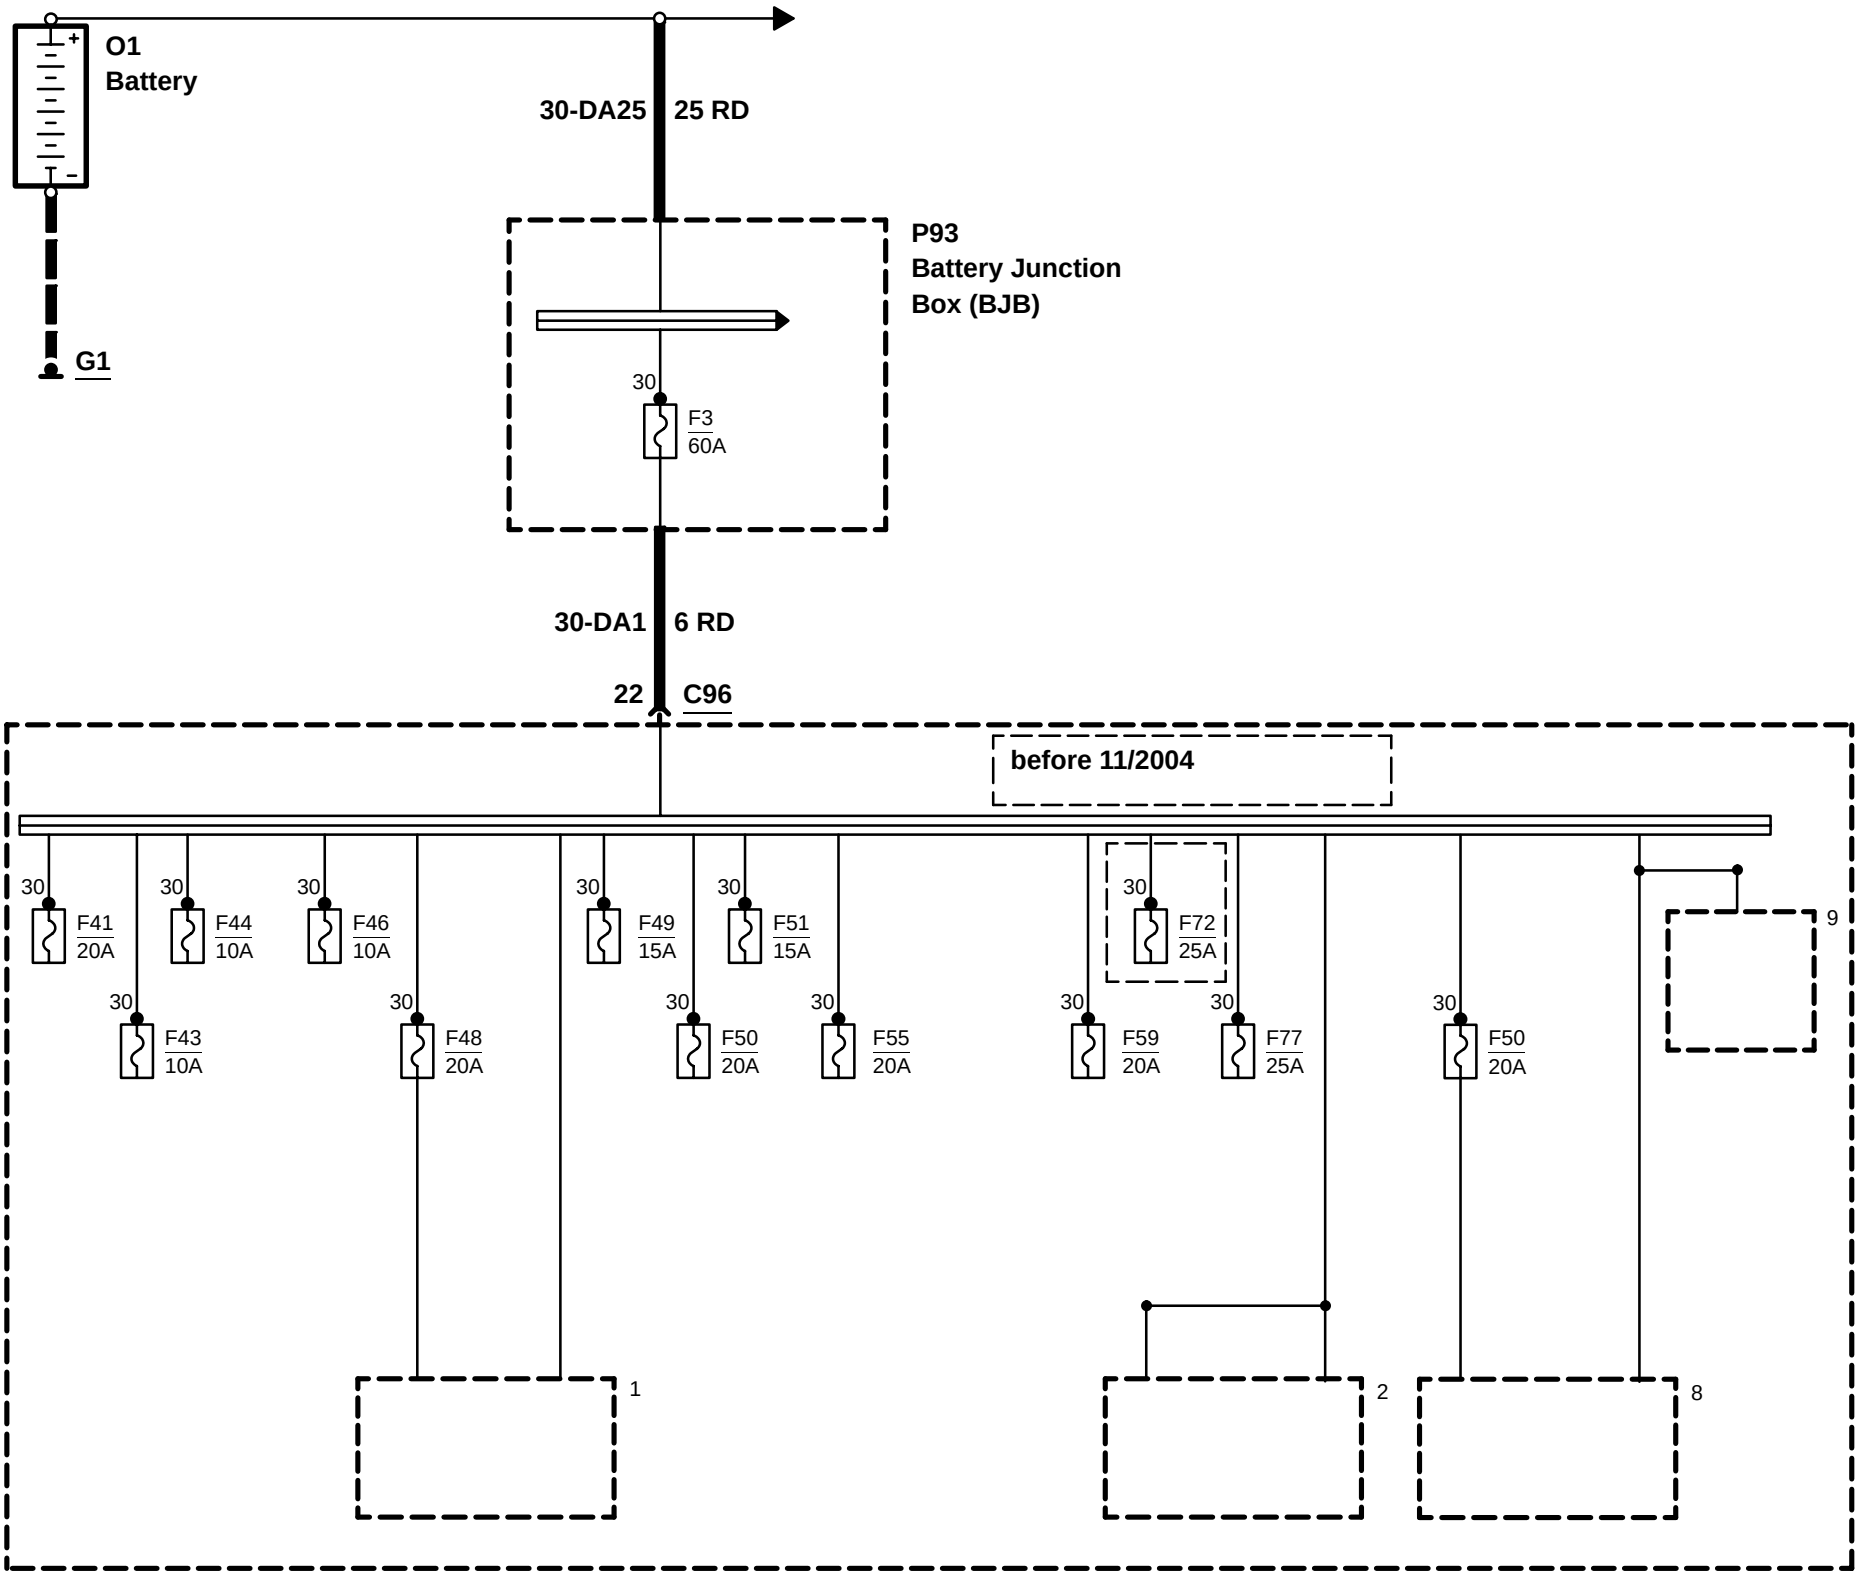


P91
Central Junction Box (CJB)
1) Low beam relay
2) High beam relay
8) Wiper relay, low speed
9) Wiper relay, high speed


Power Distribution – Ignition switch, manual transmission

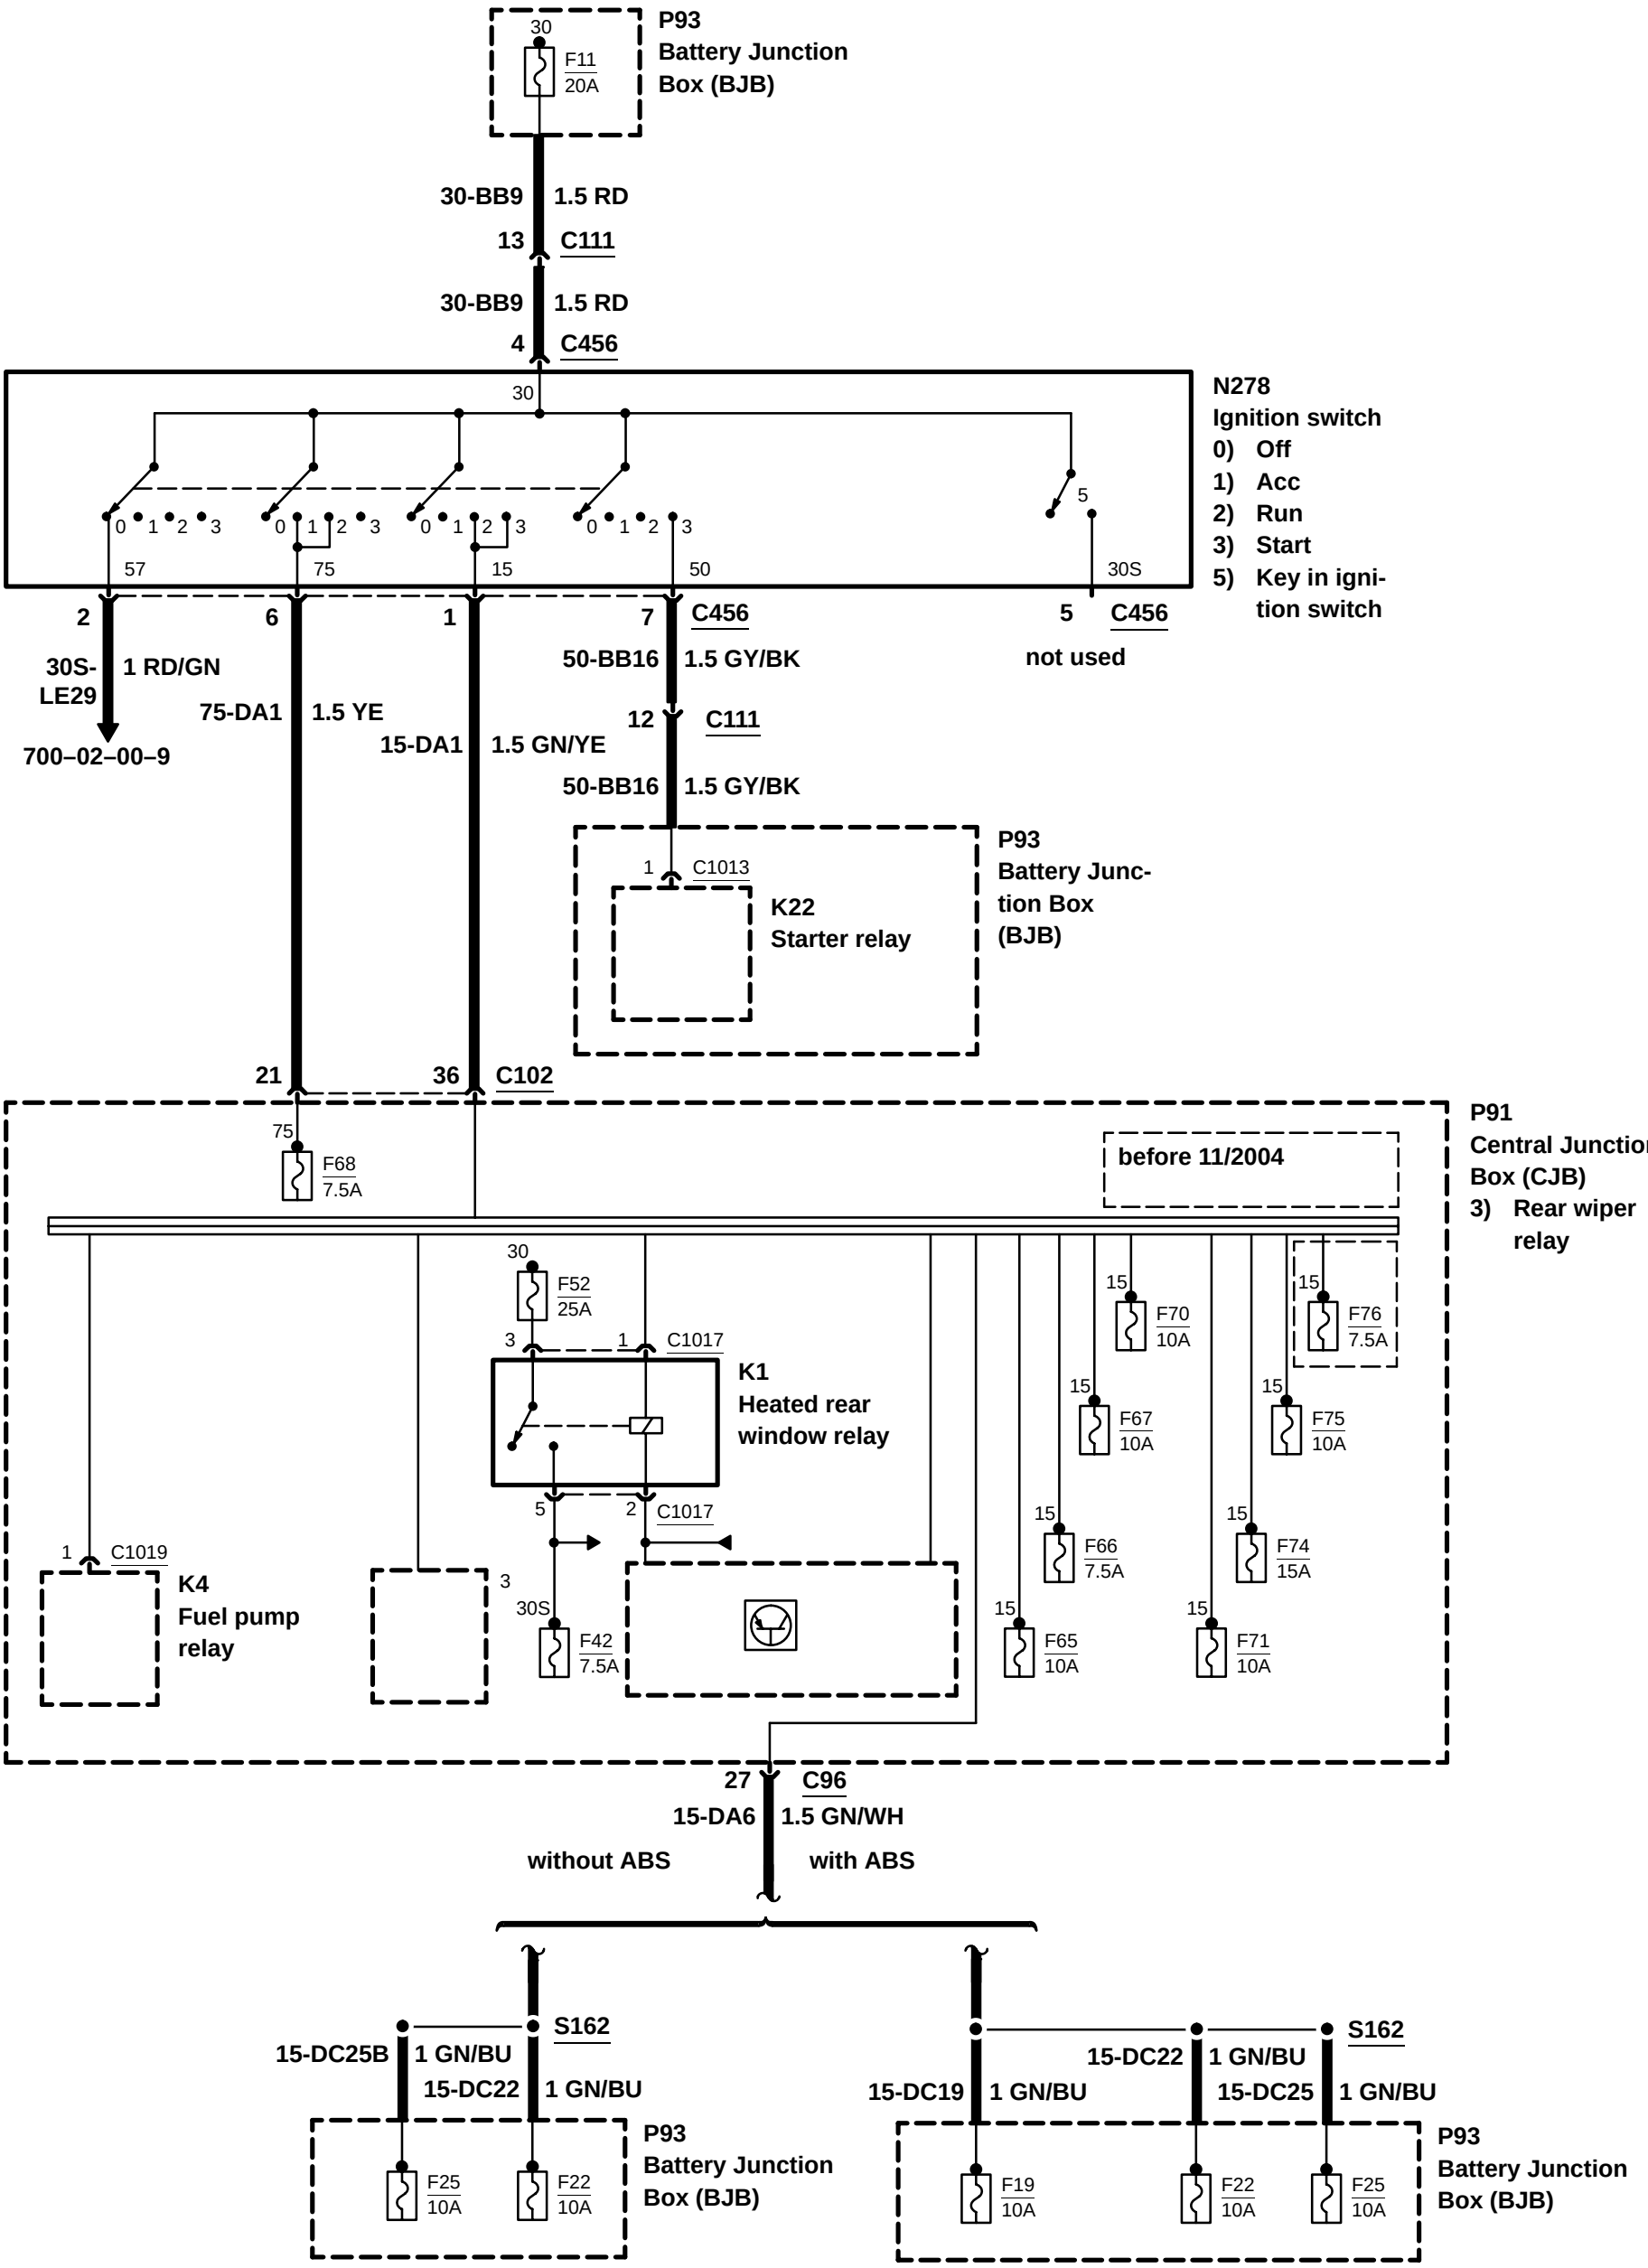


Power Distribution – Ignition switch, automatic transmission

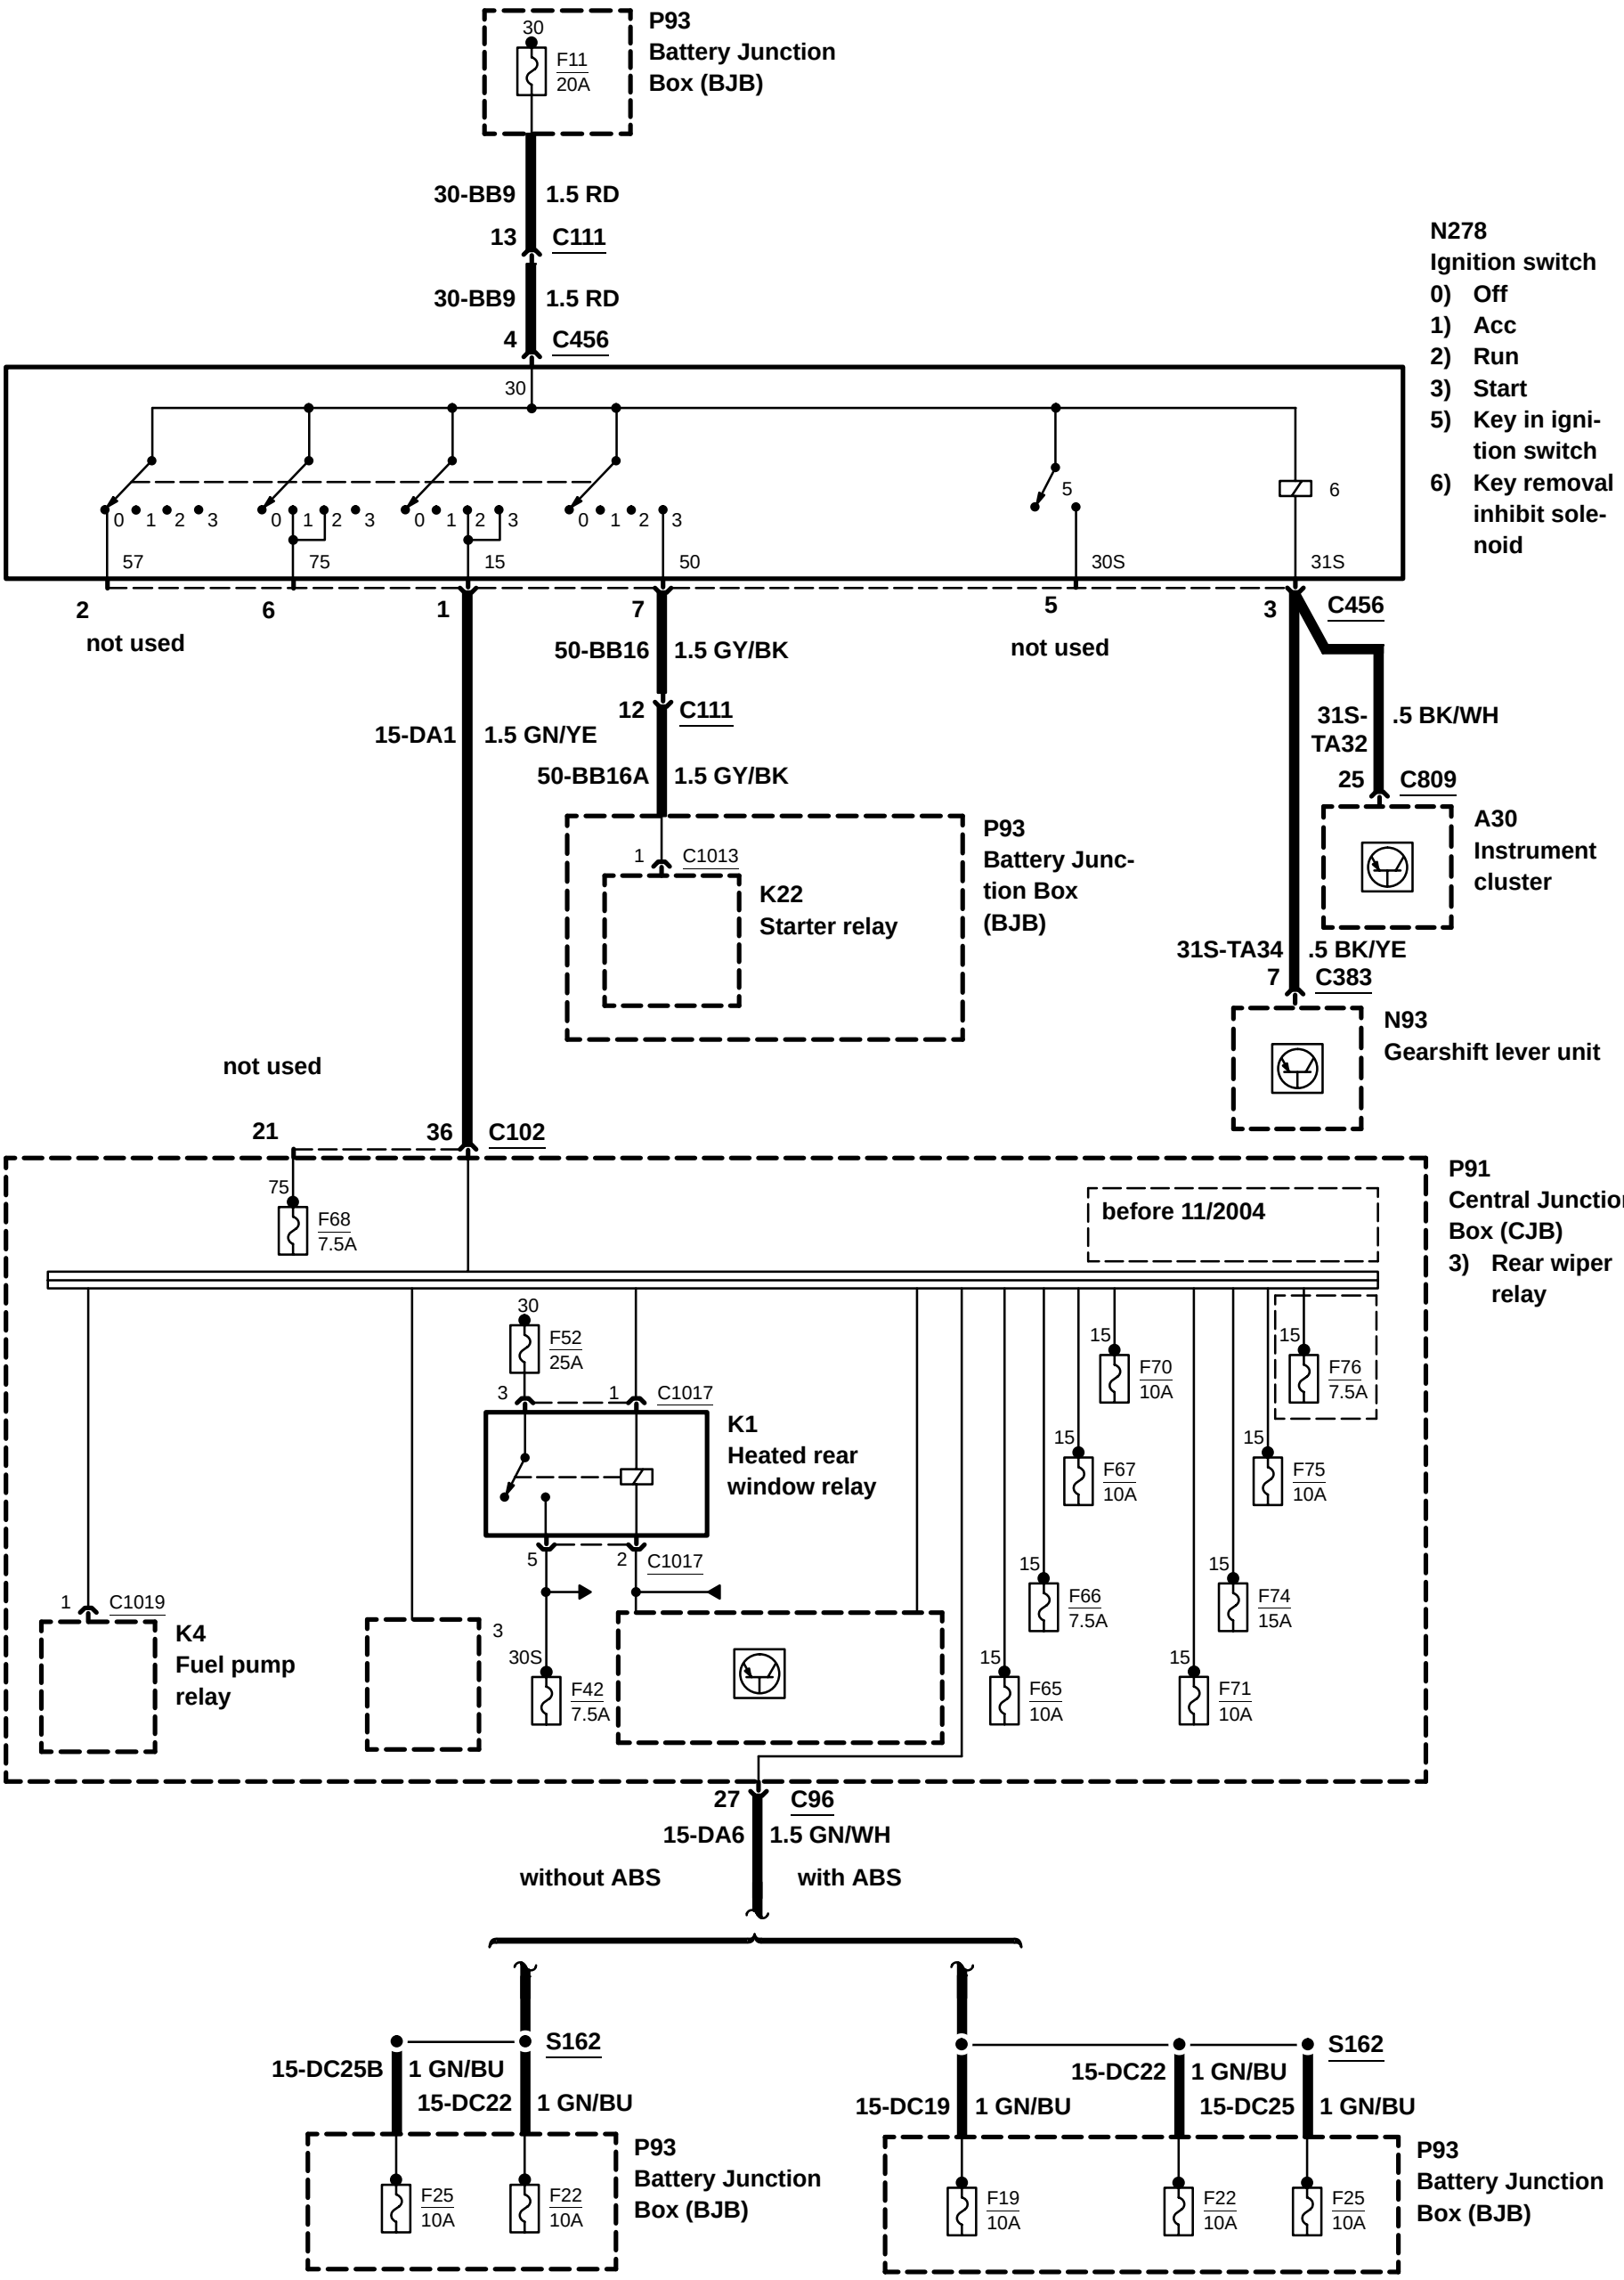


Power Distribution – 1.6L (Z6)

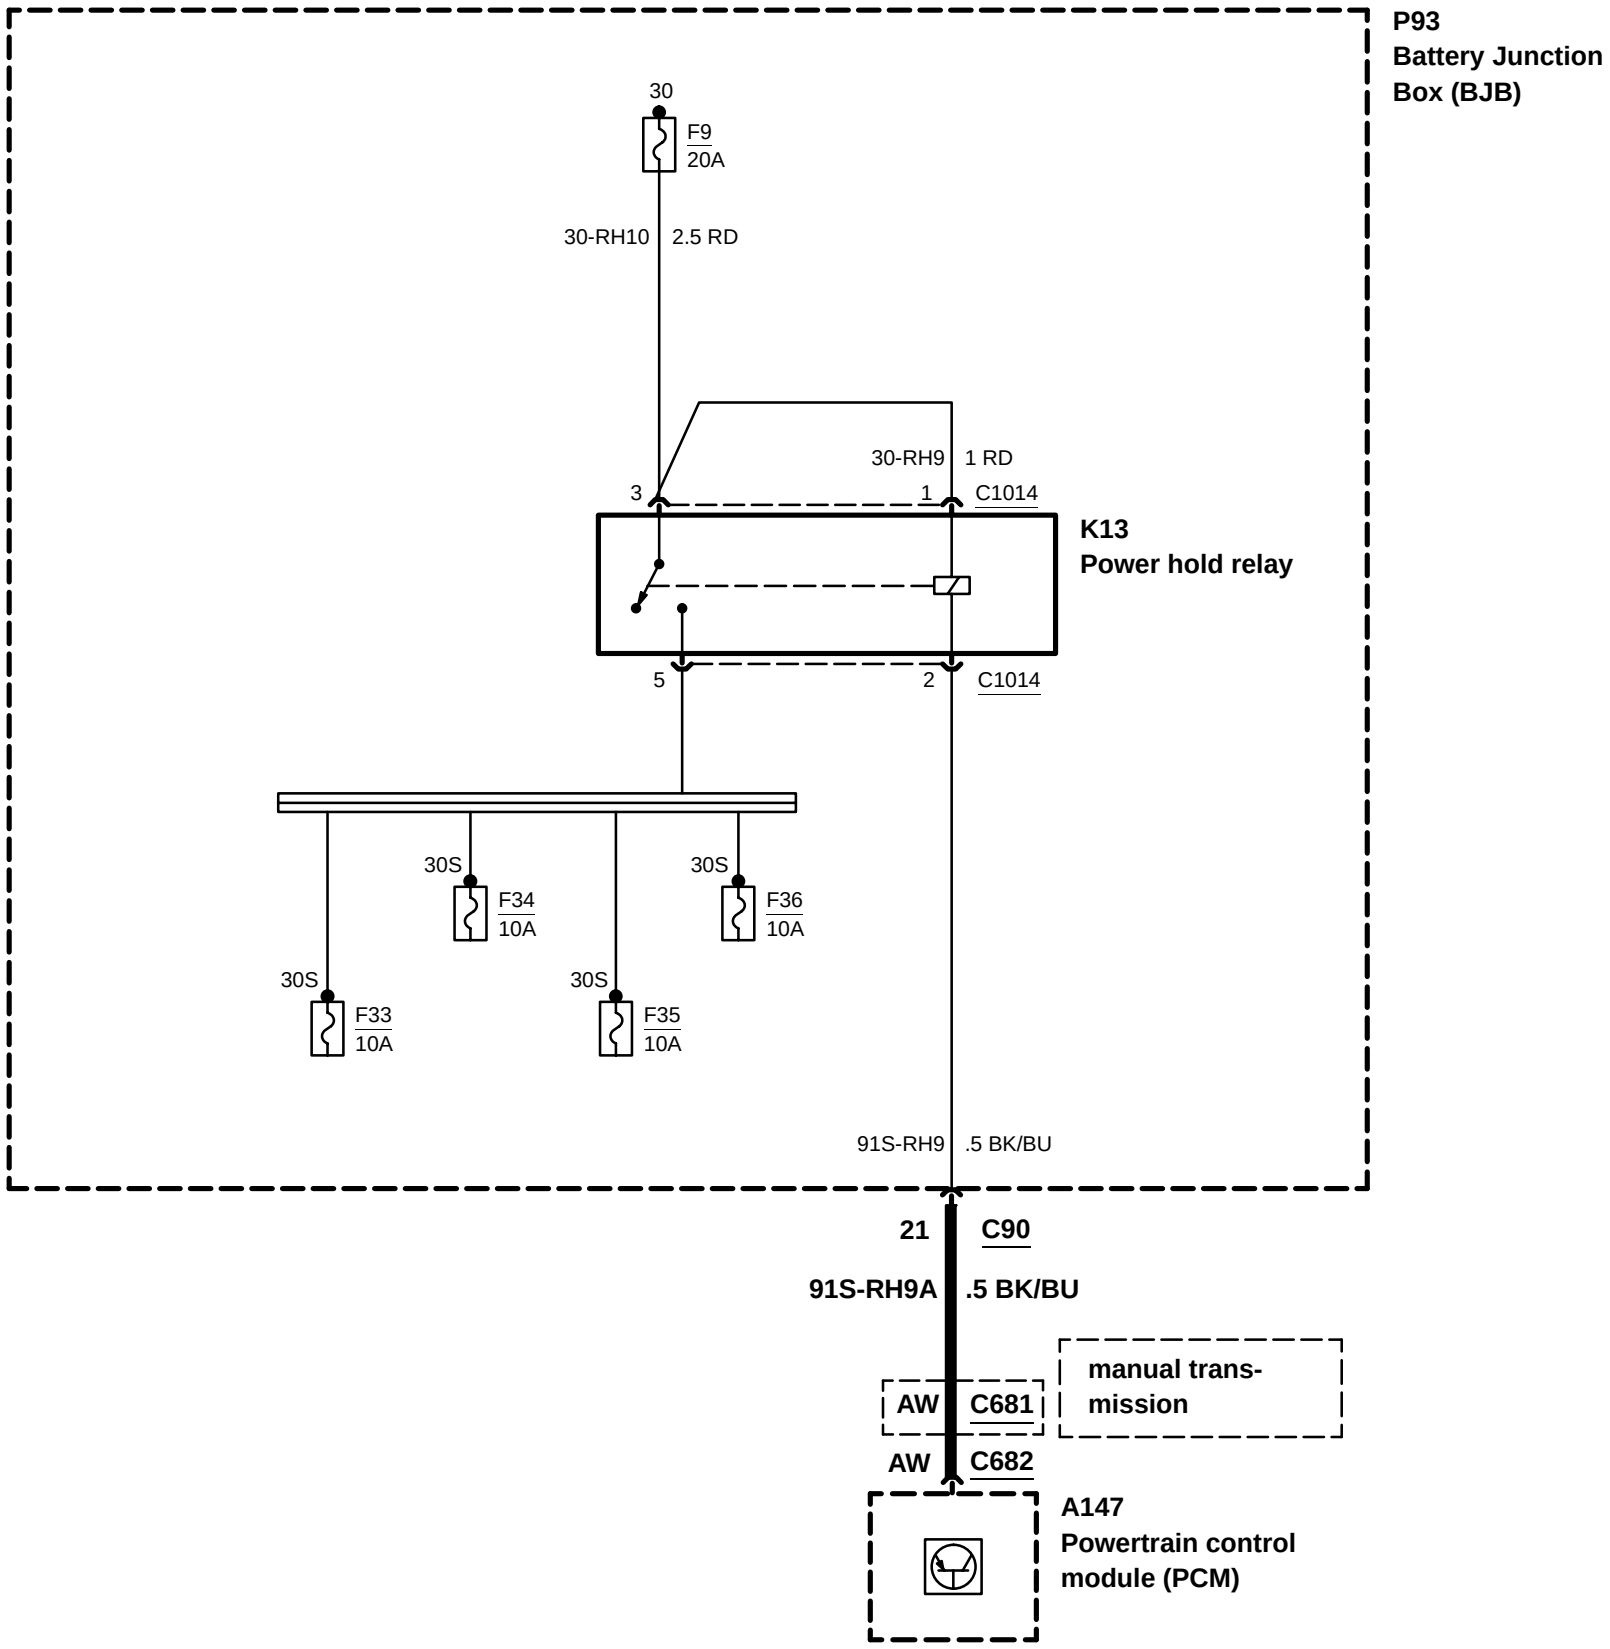


Power Distribution – 1.8/2.0L Duratec–HE (MI4)

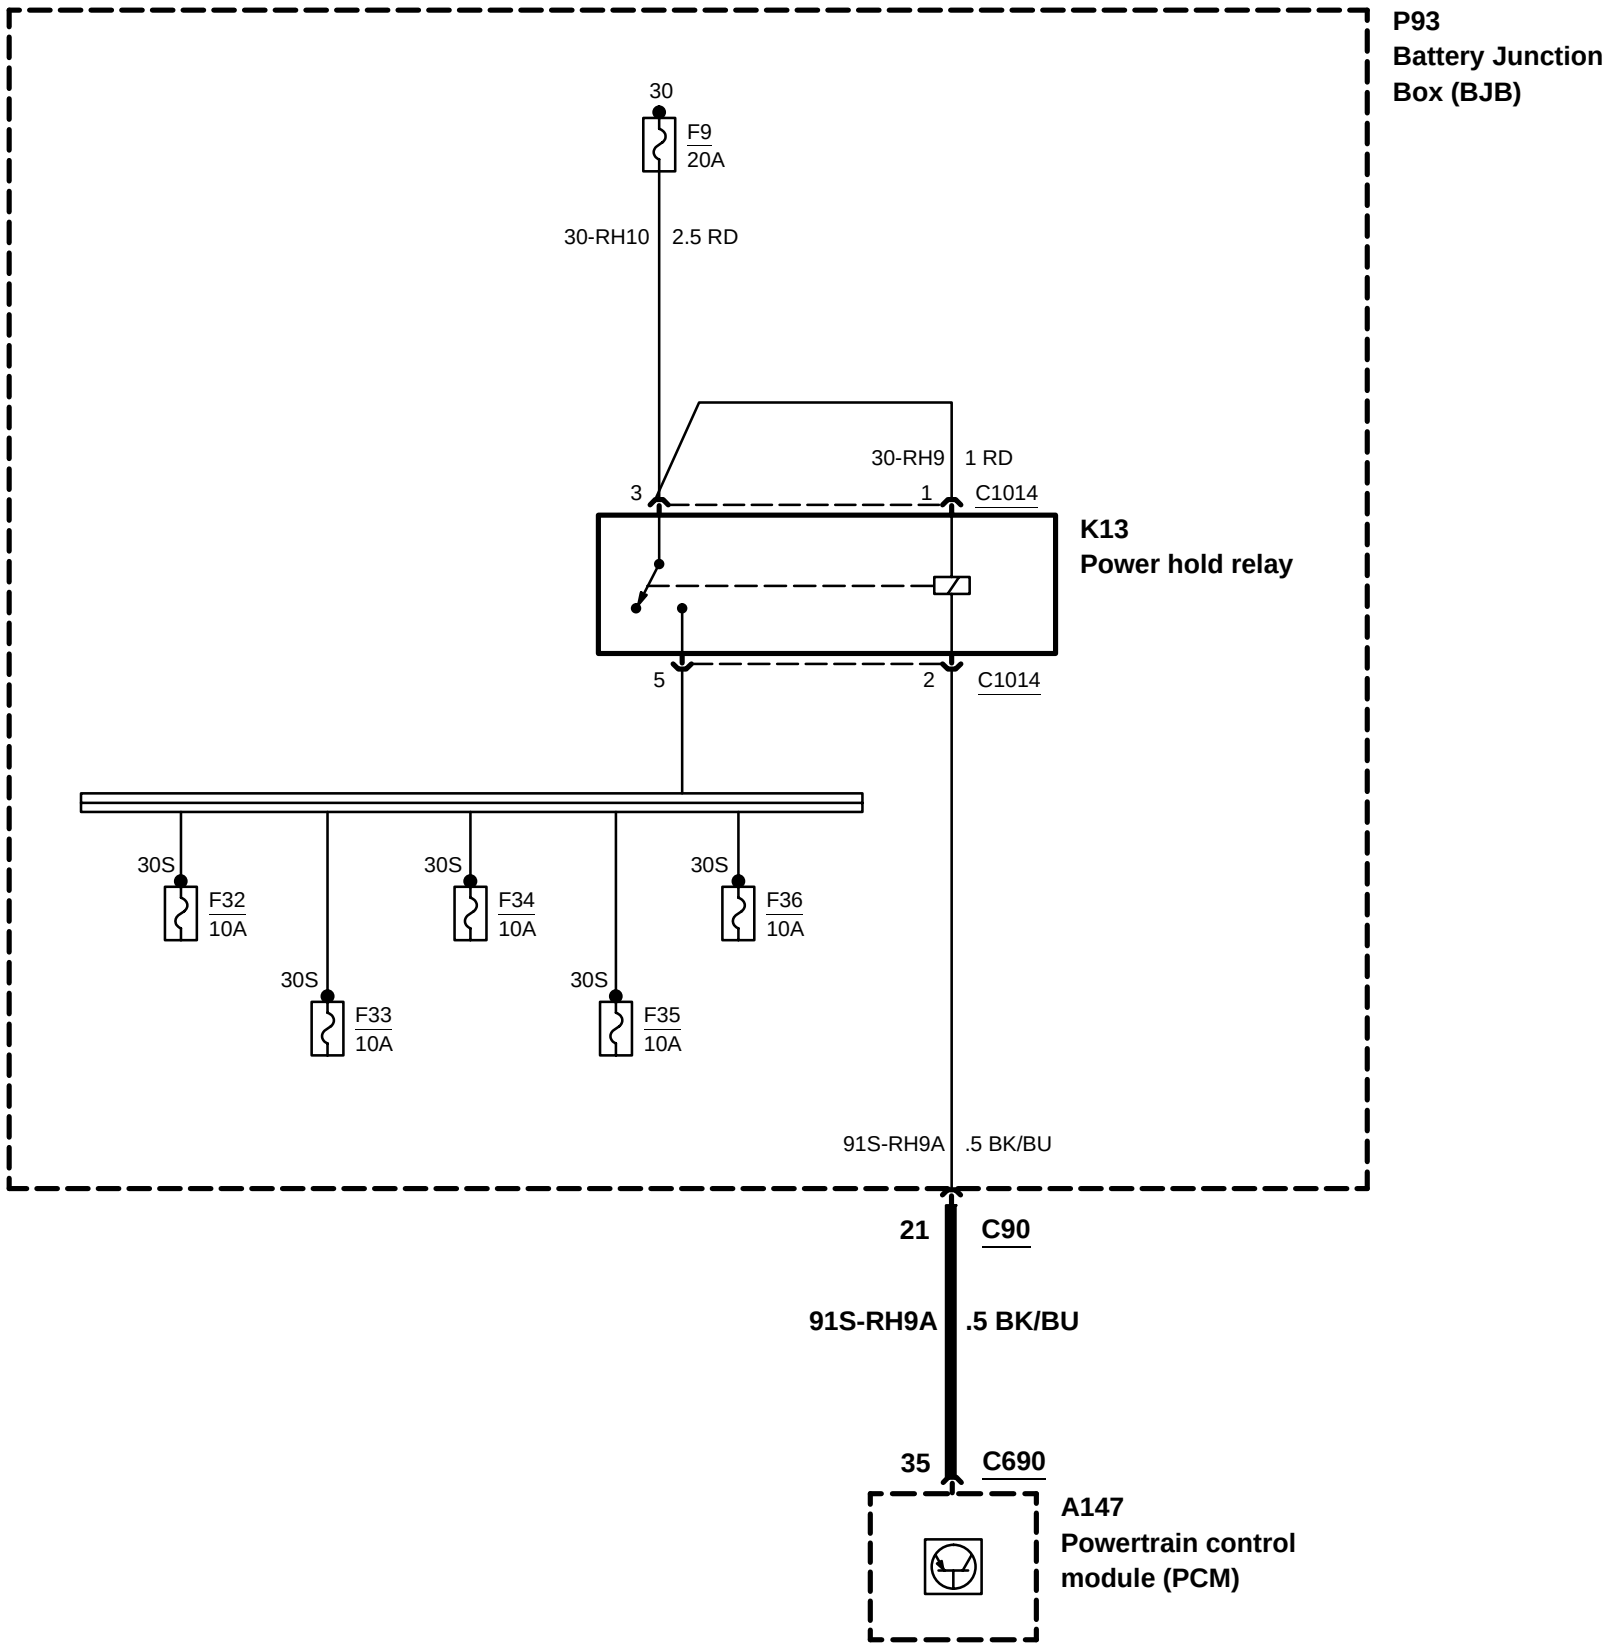


Power Distribution – 2.0L Duratorq–TDCi (DW) Diesel

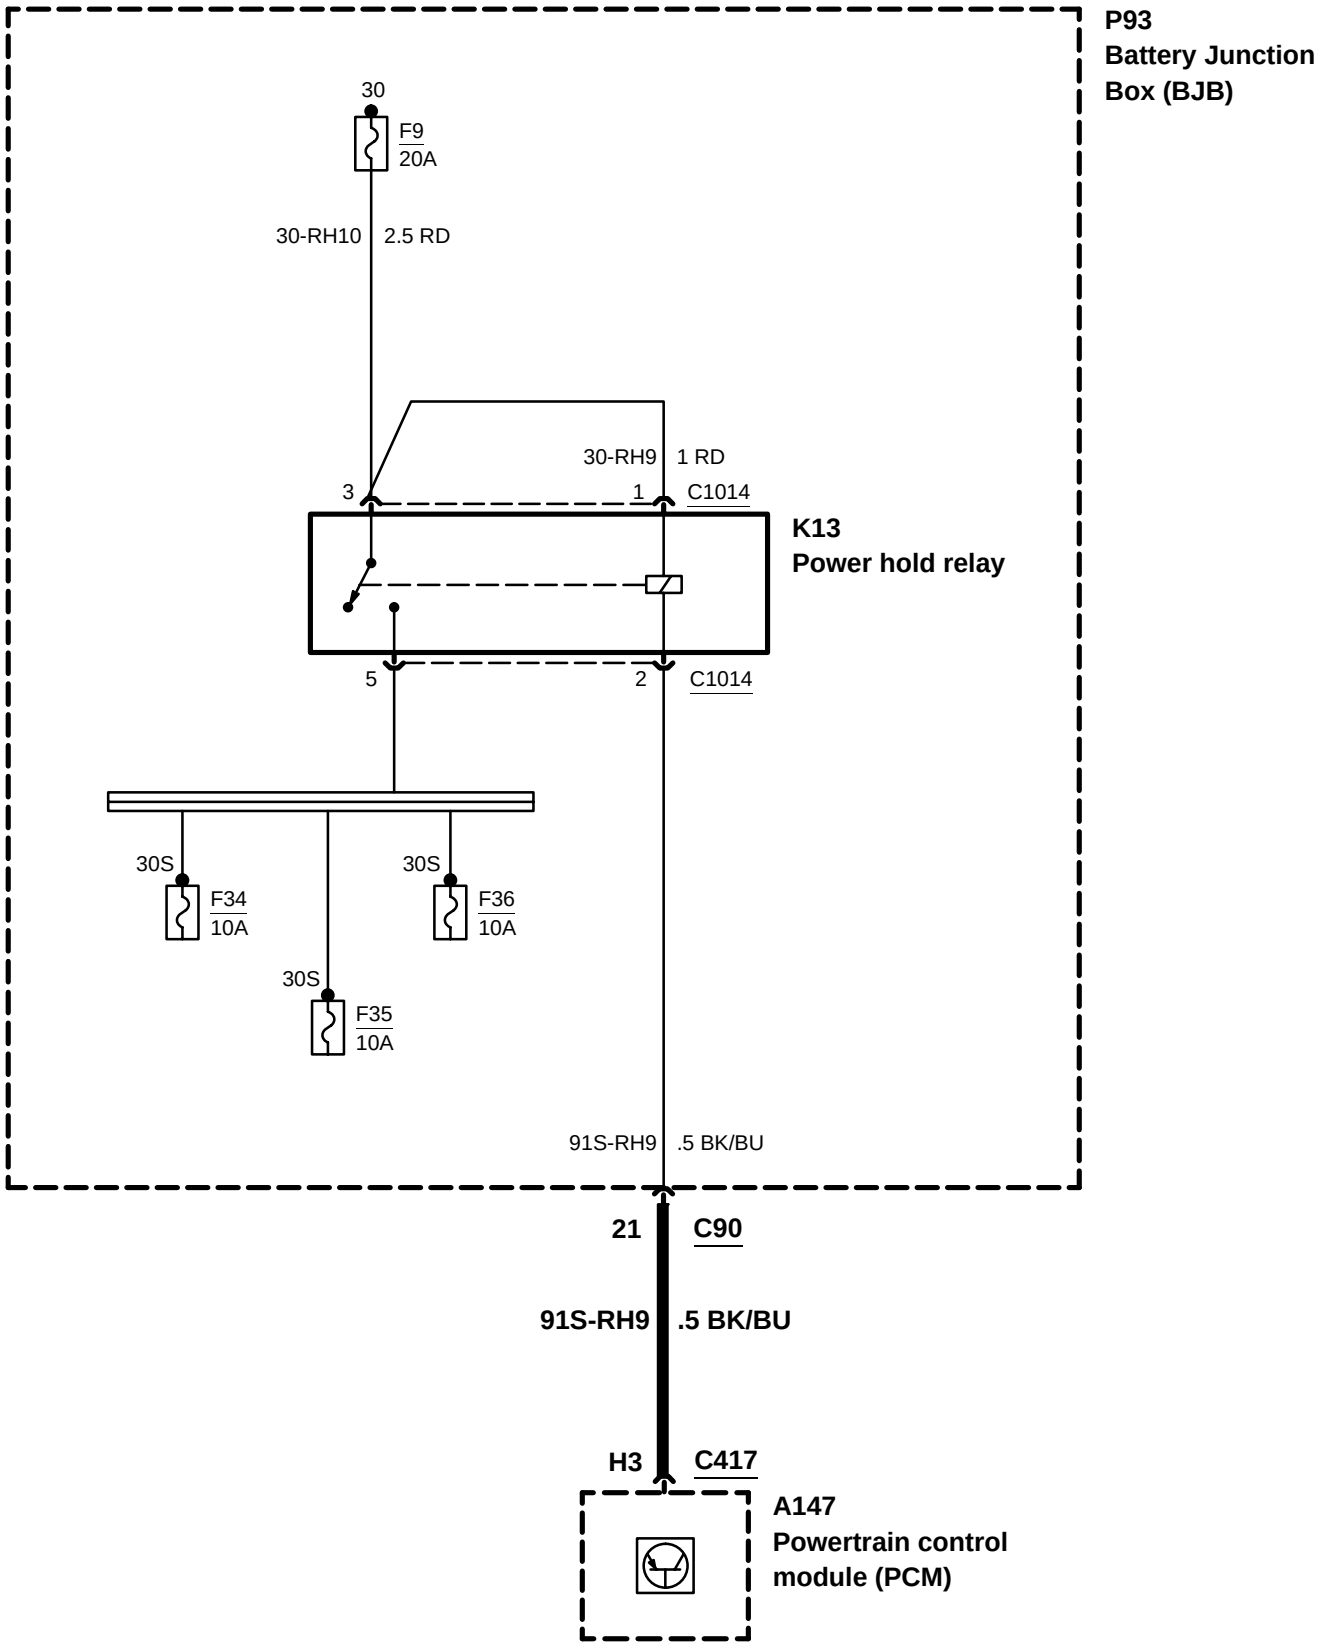


Power Distribution

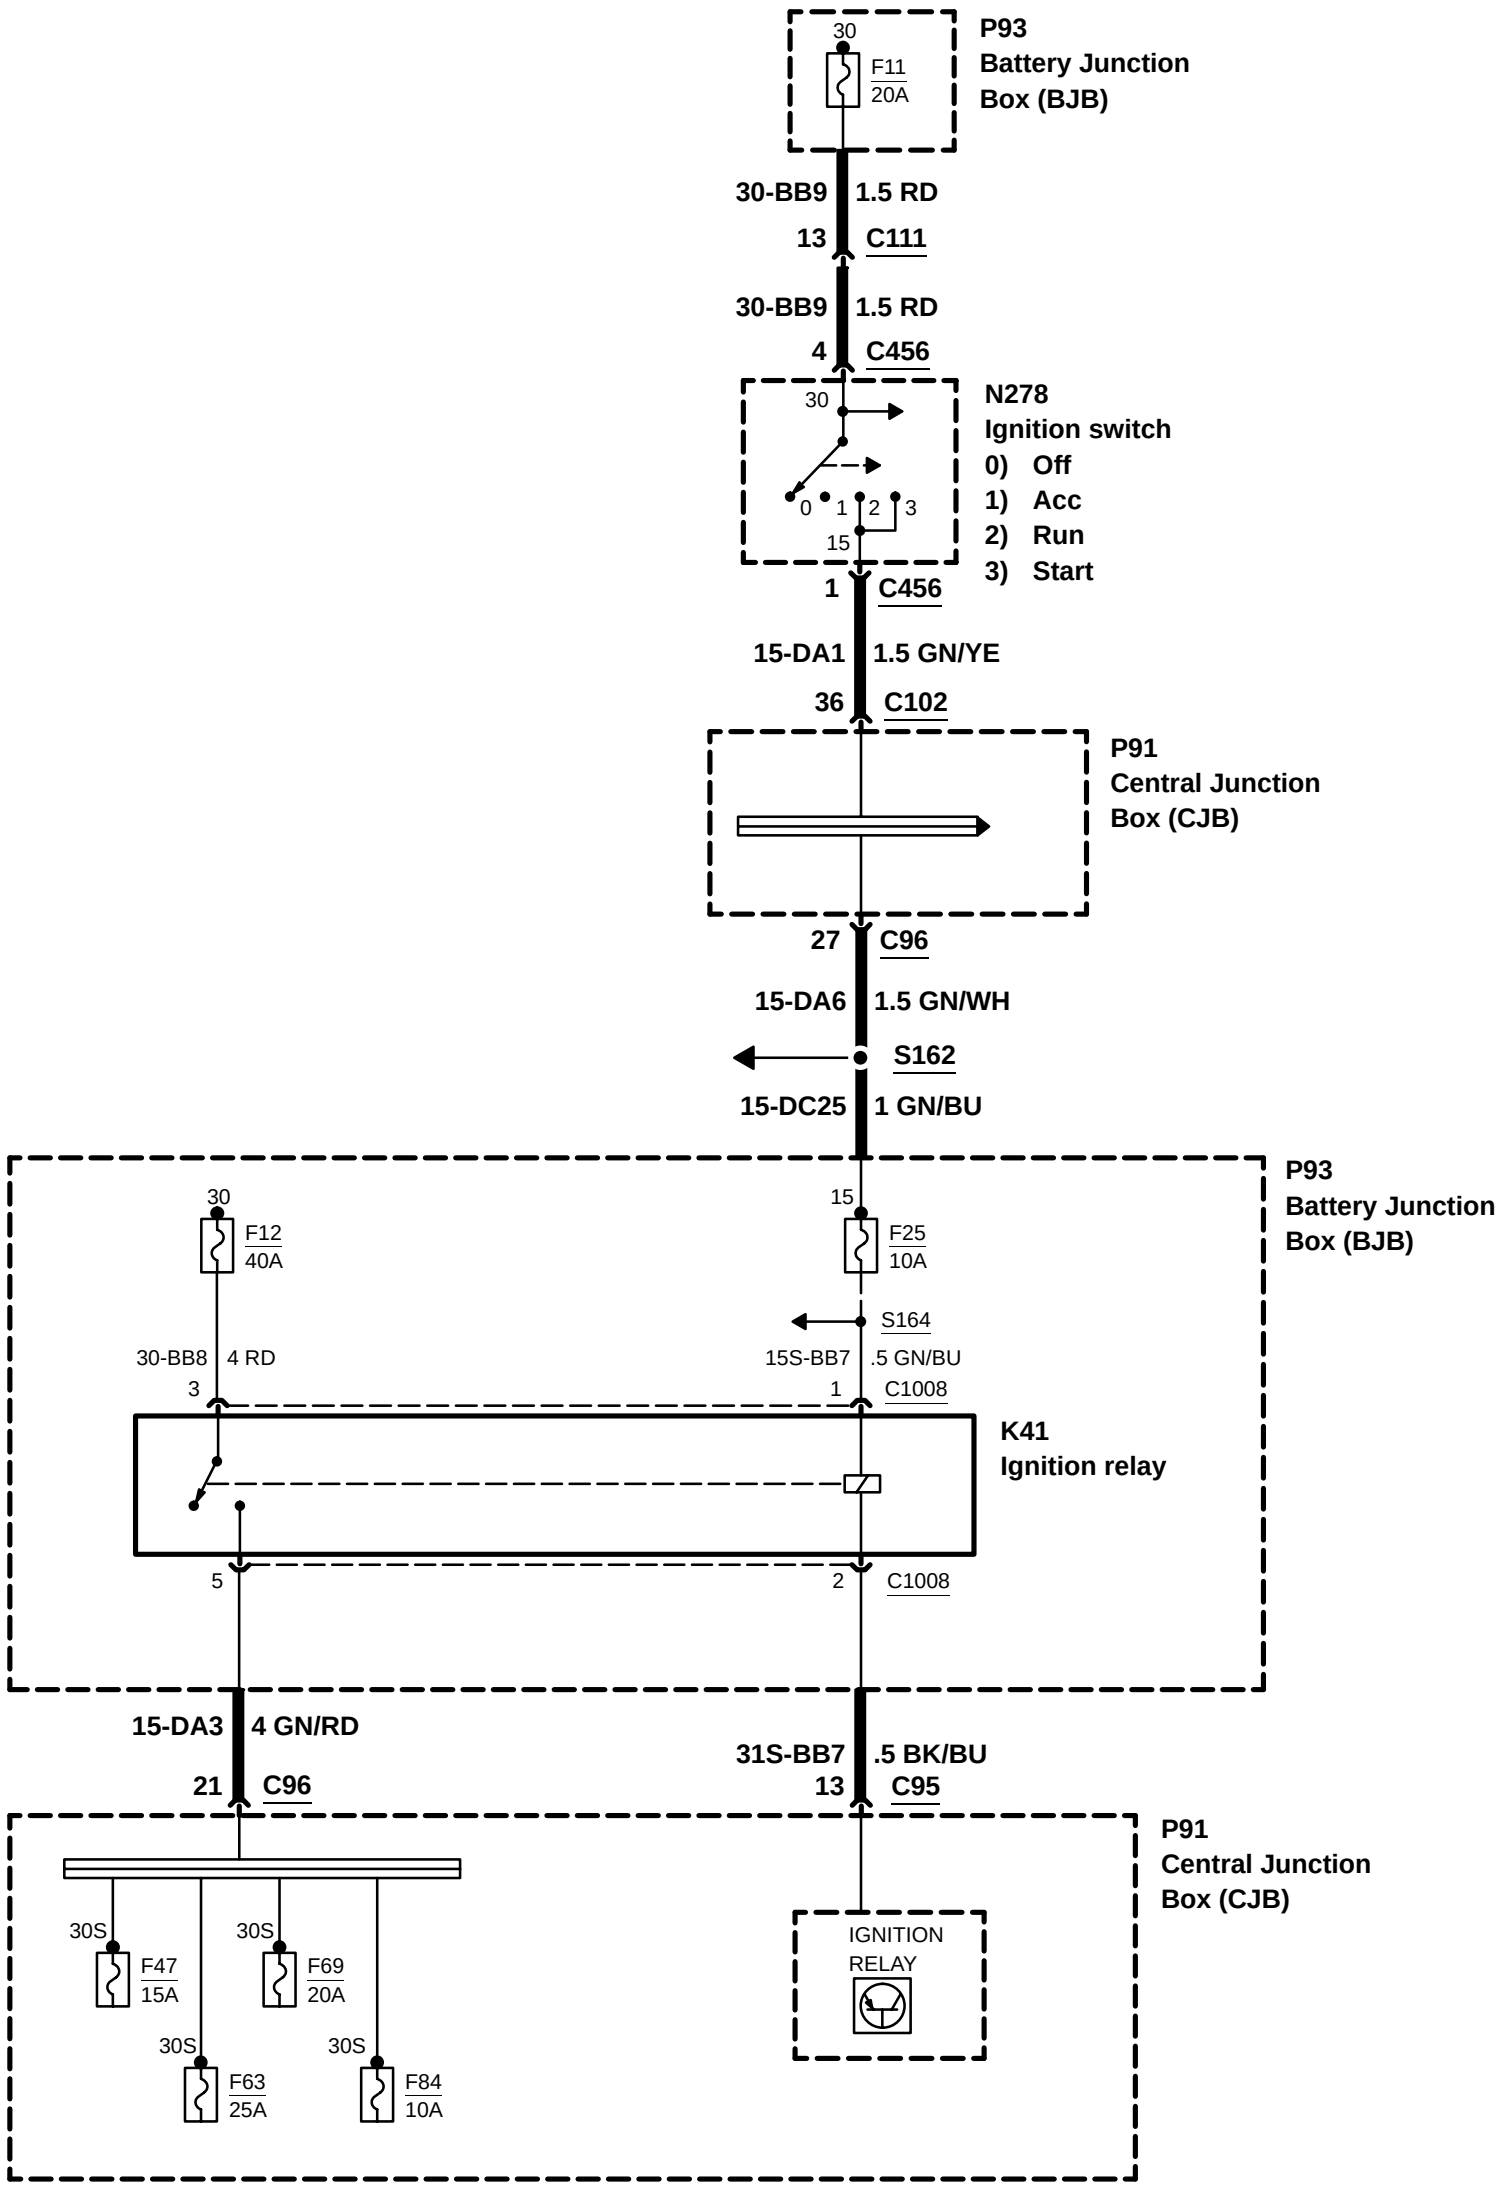


Power Distribution

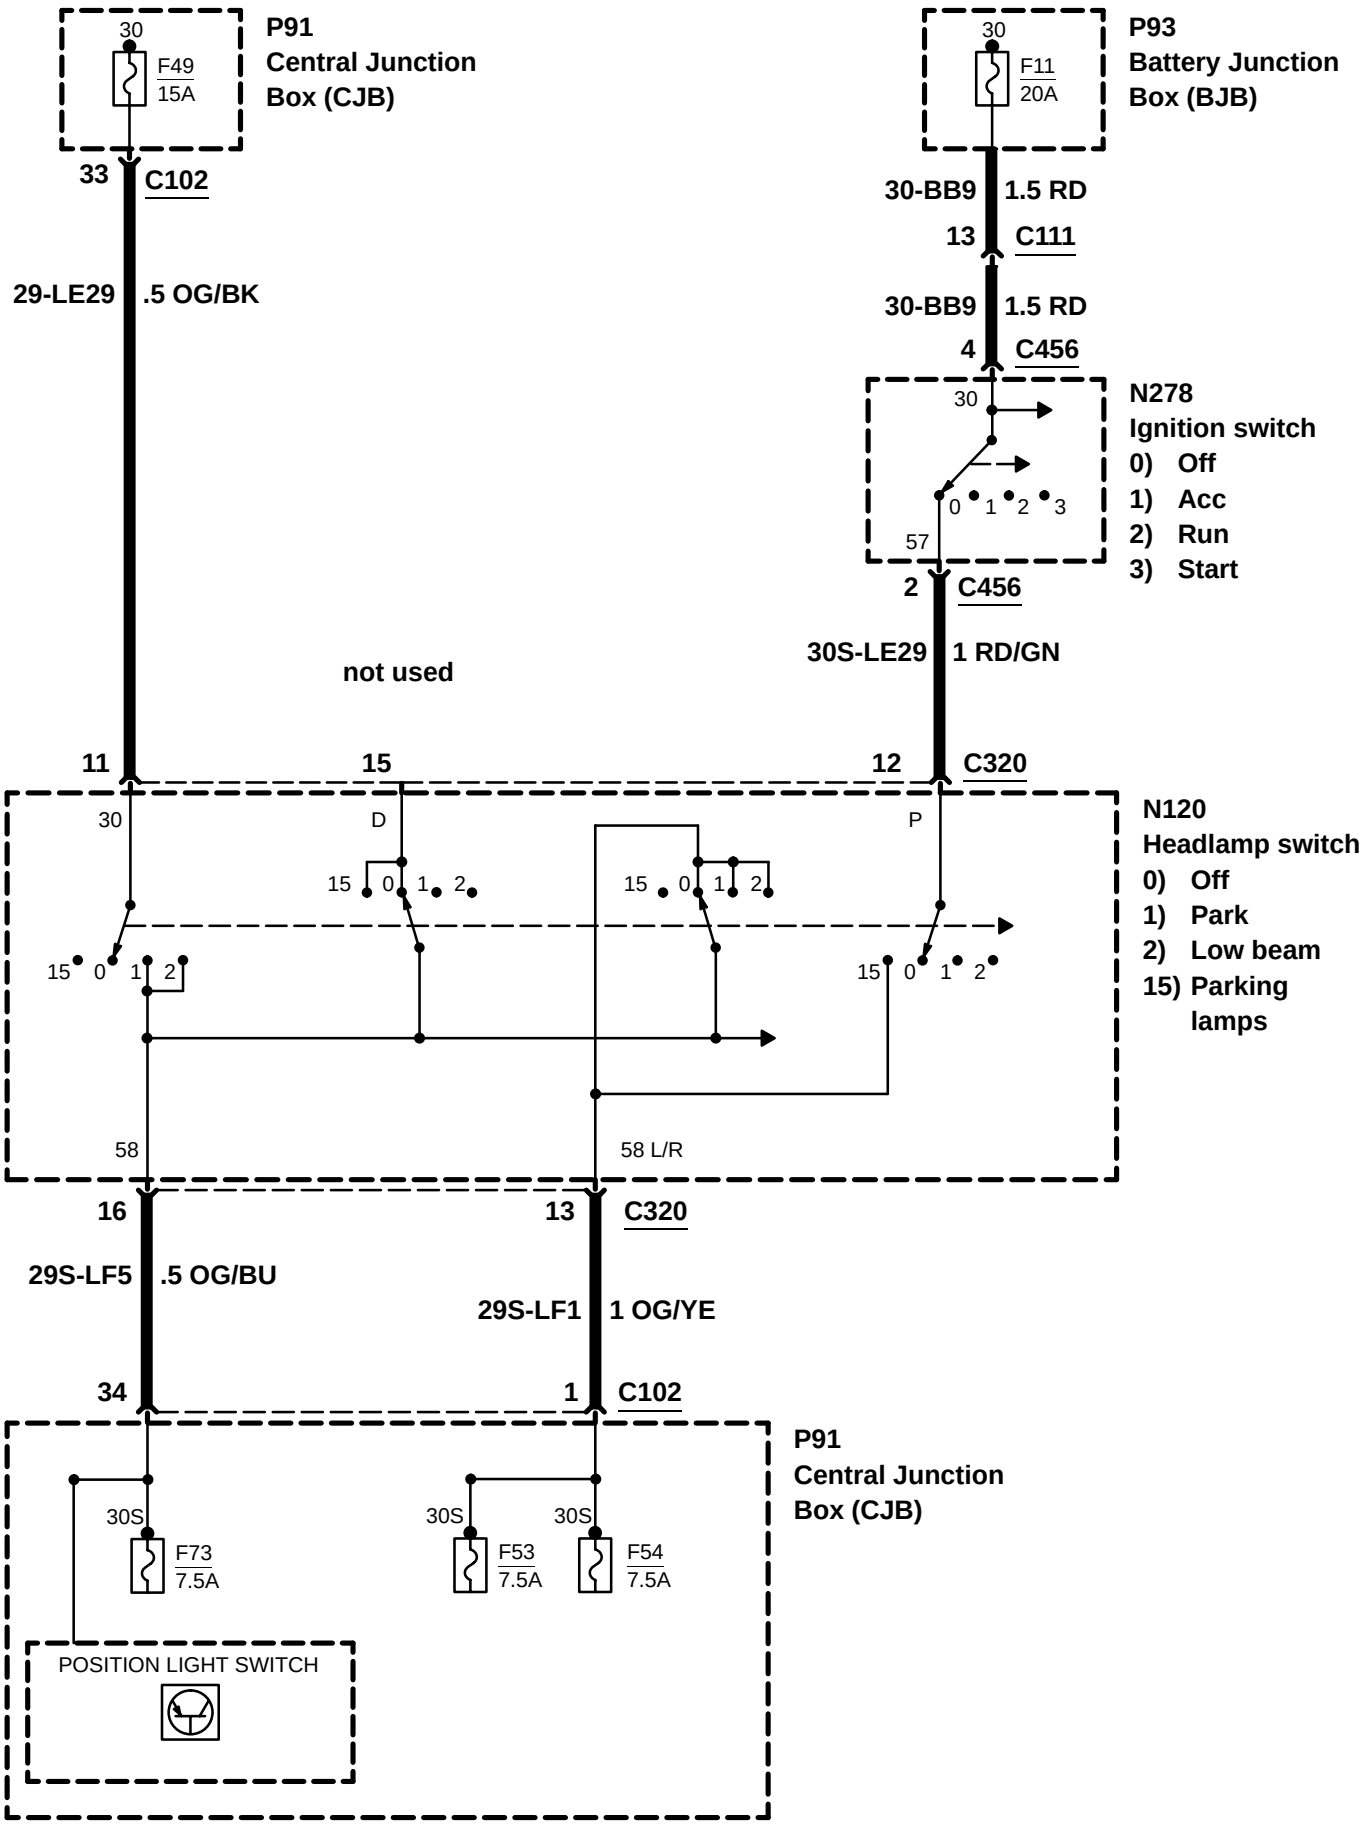

Fuse Details – F1, F2

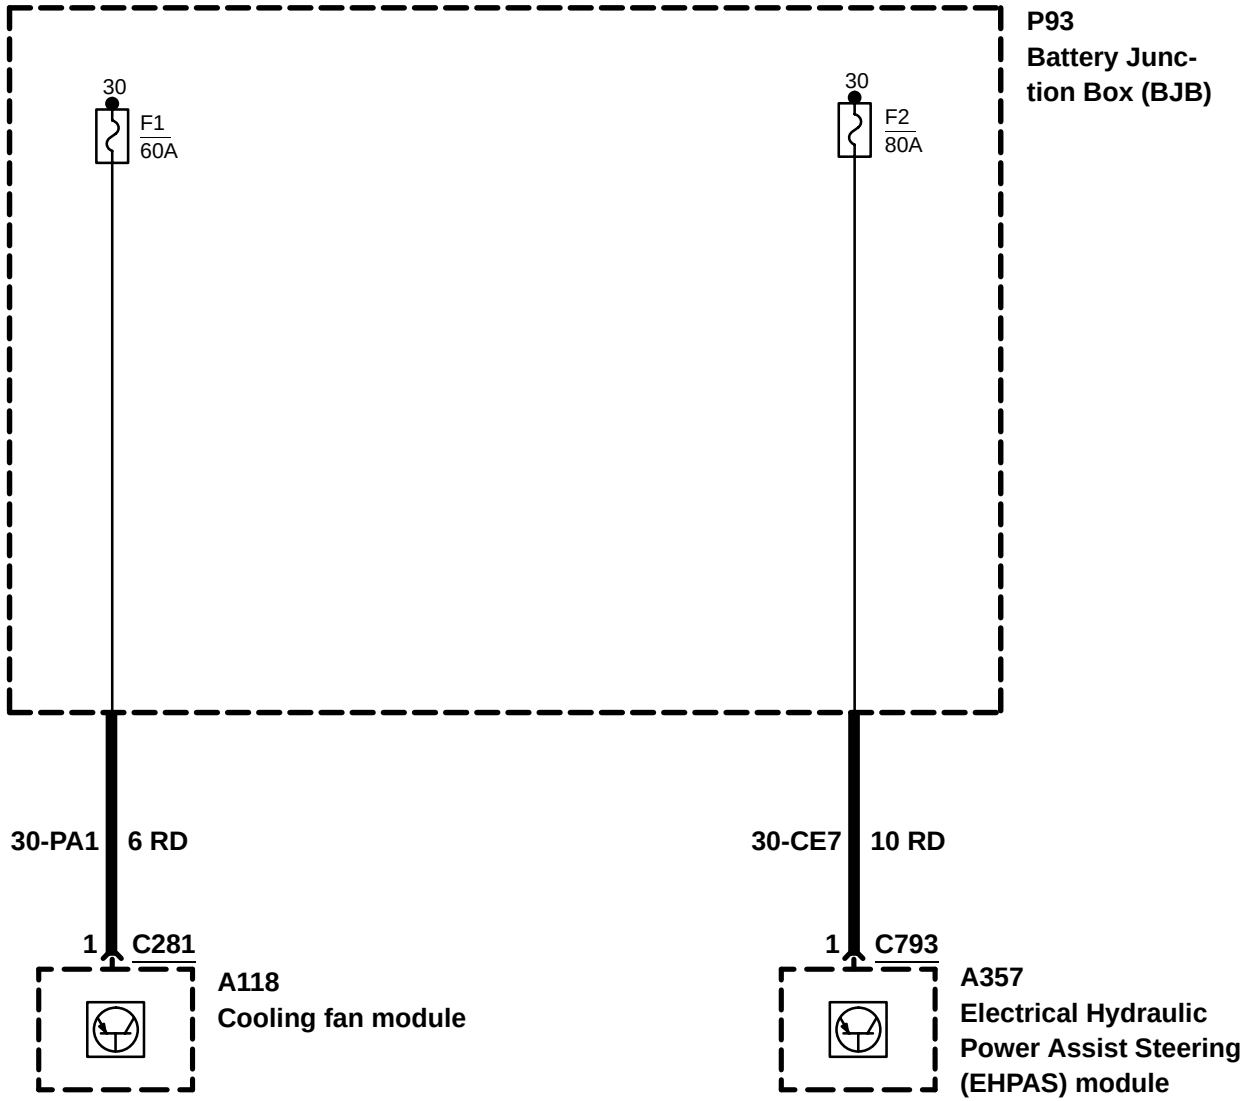


Fuse Details – F3

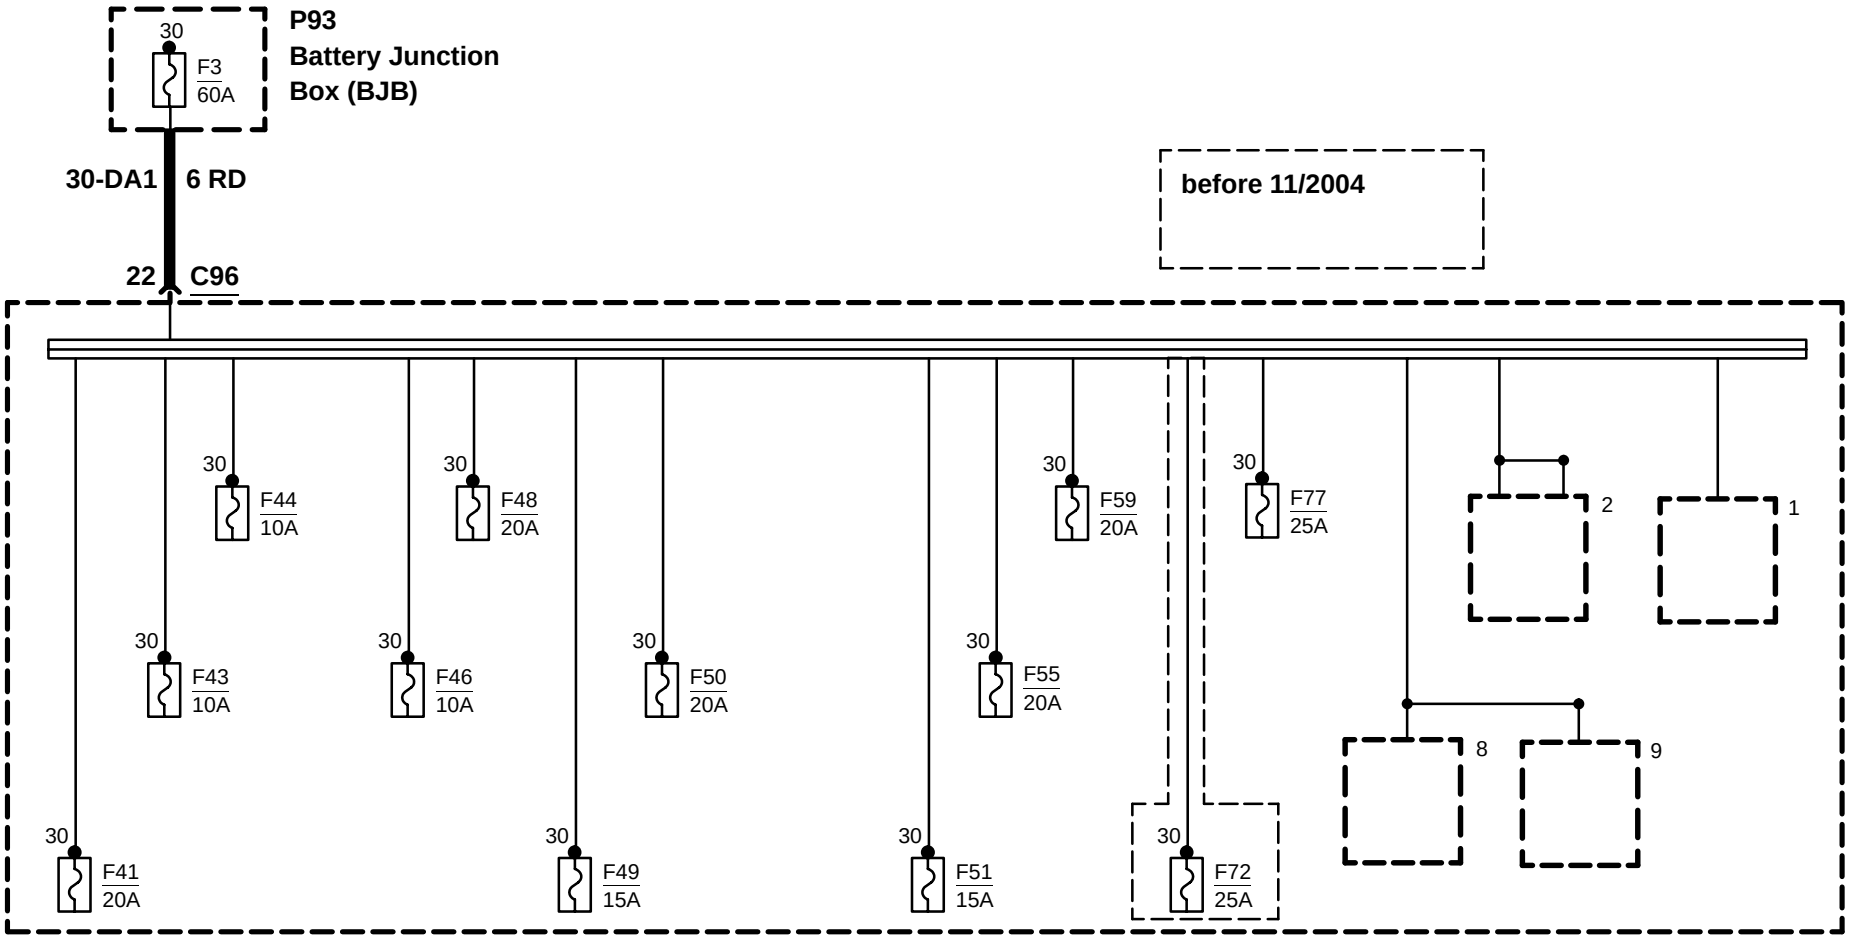


P91
Central Junction Box (CJB)

1) Low beam relay
2) High beam relay
8) Wiper relay, low speed
9) Wiper relay, high speed


Fuse Details – F4

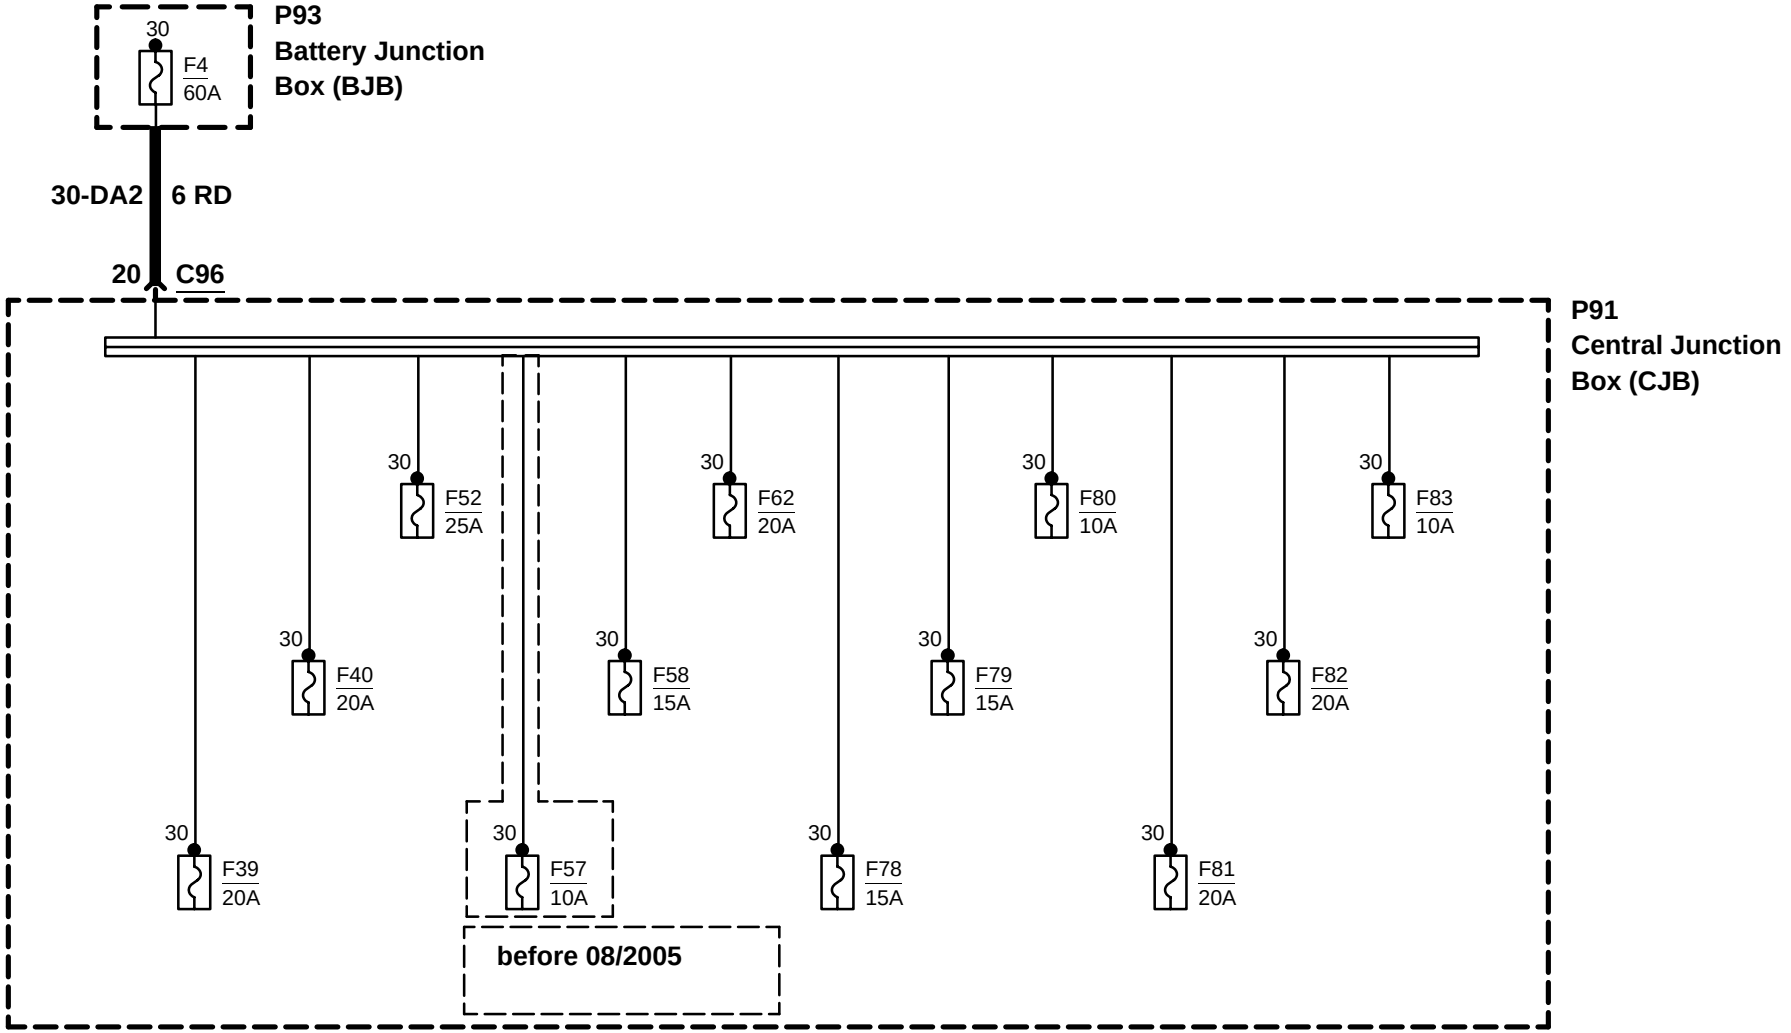


Fuse Details – F6, F7, F8

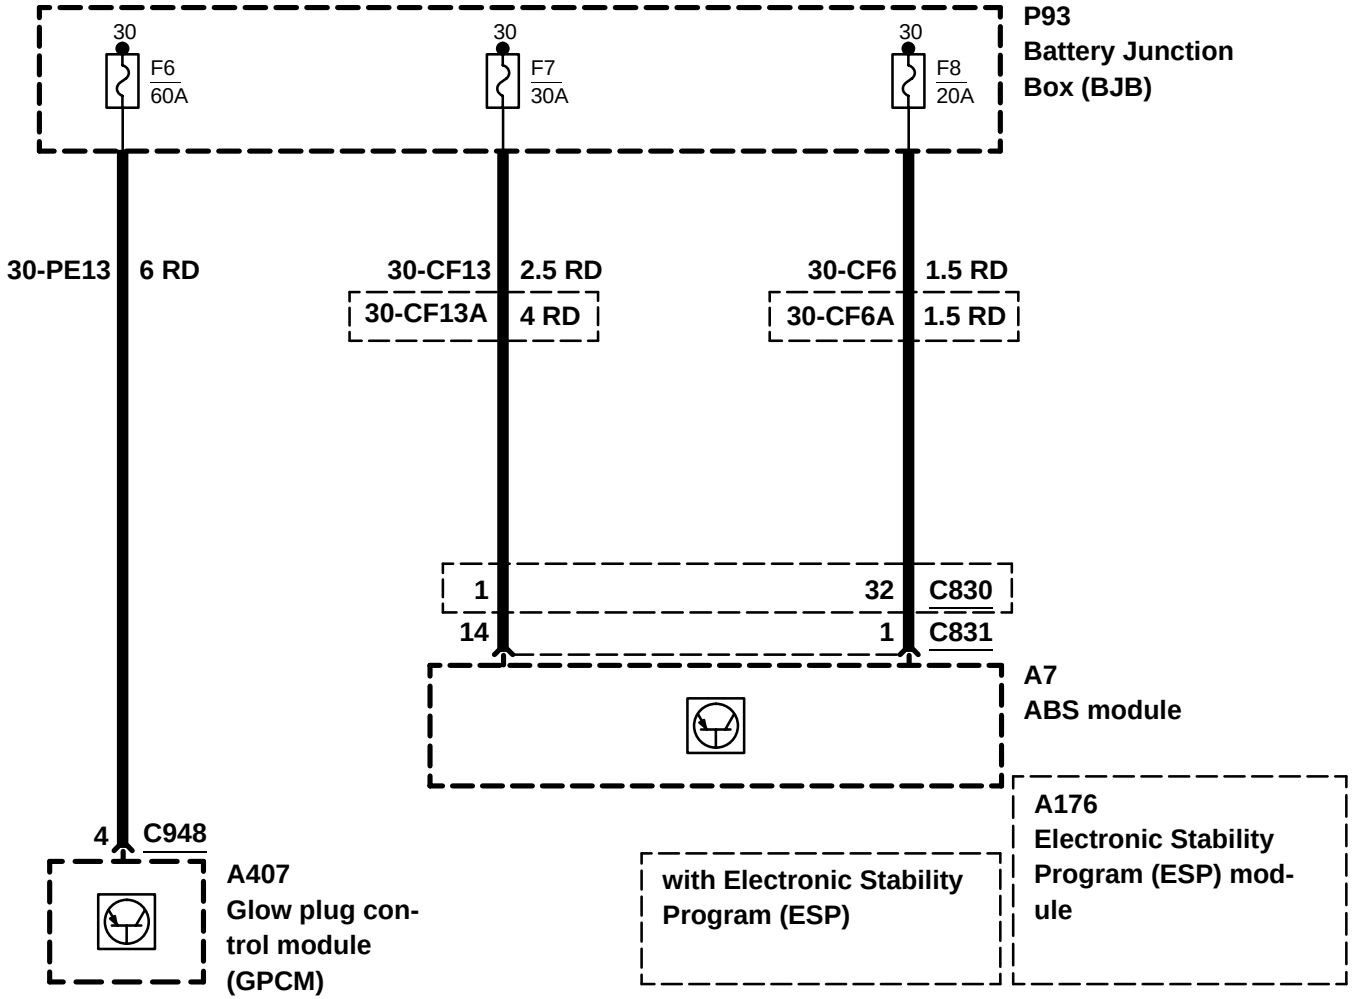


Fuse Details – F9

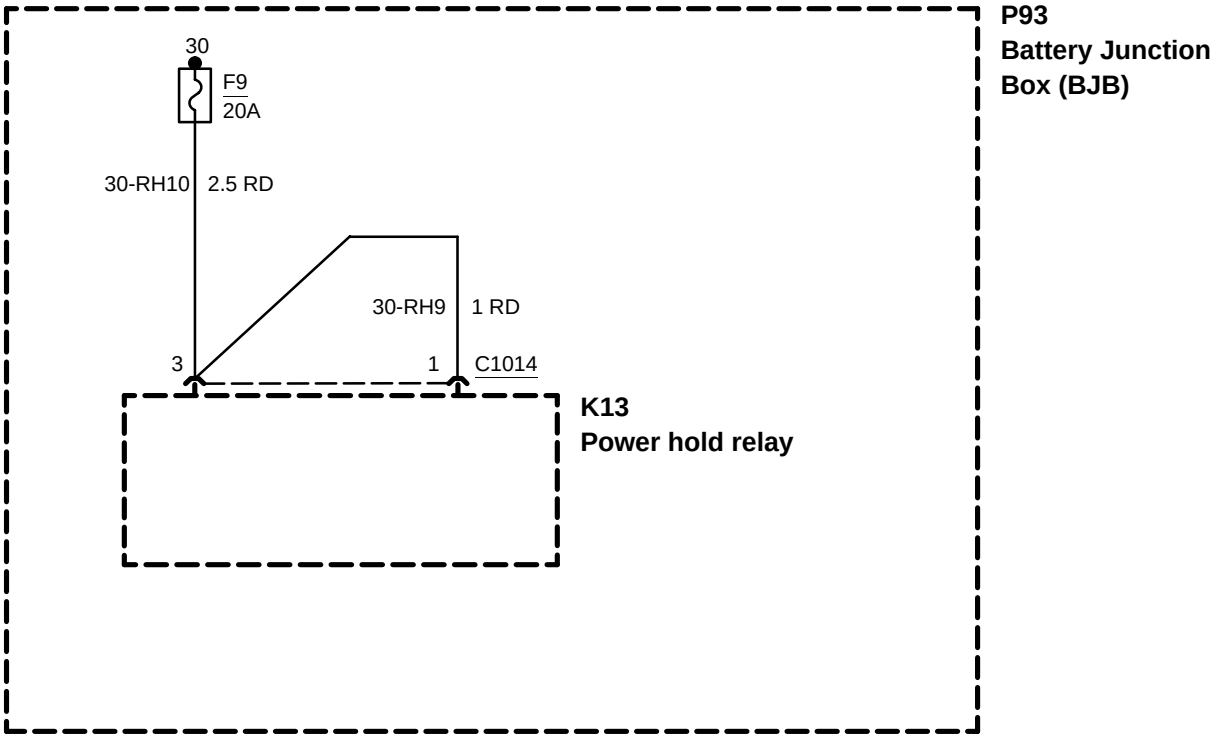


Fuse Details – F10

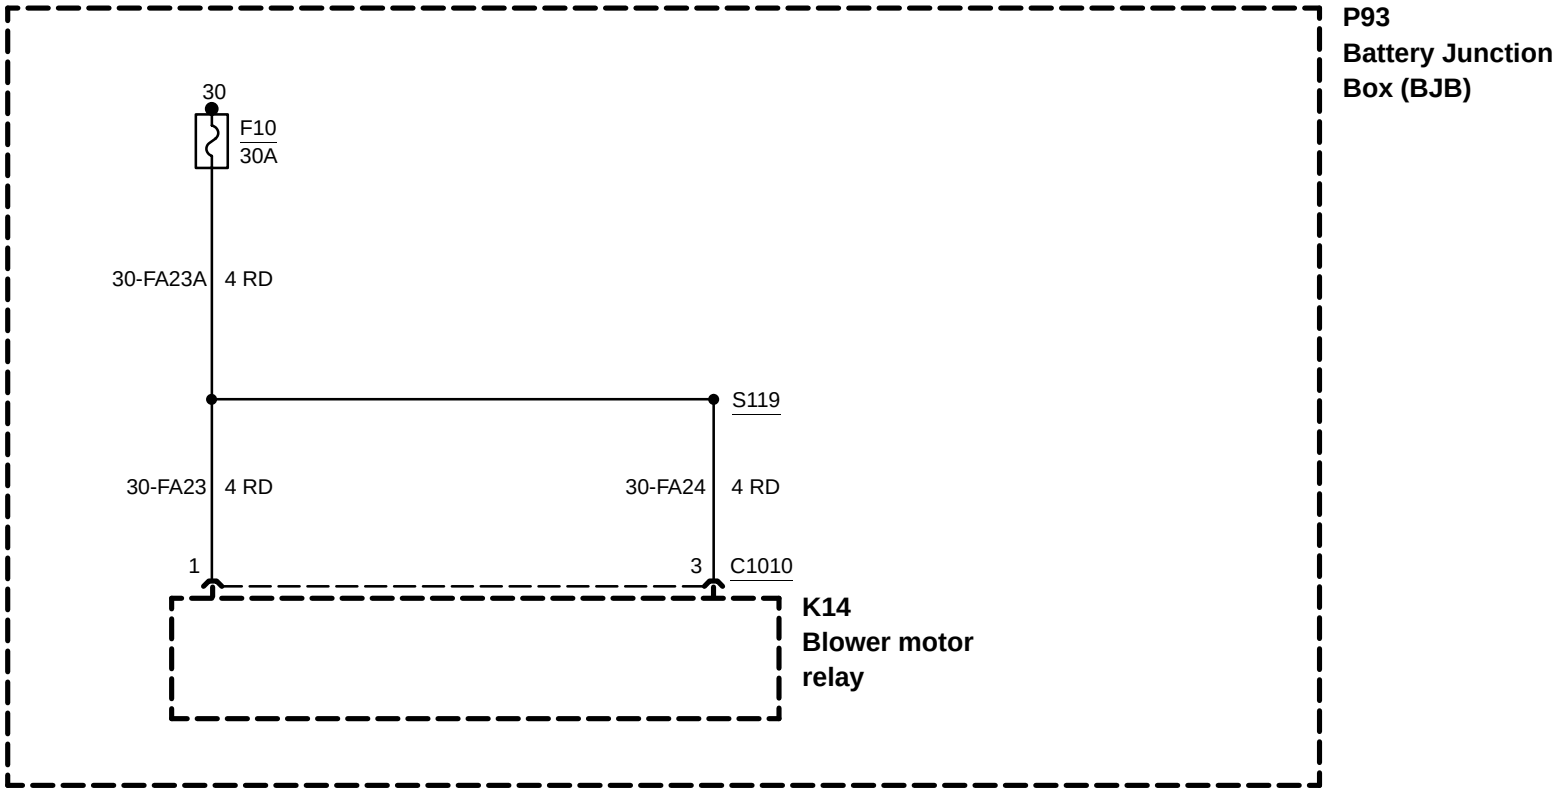


Fuse Details – F11

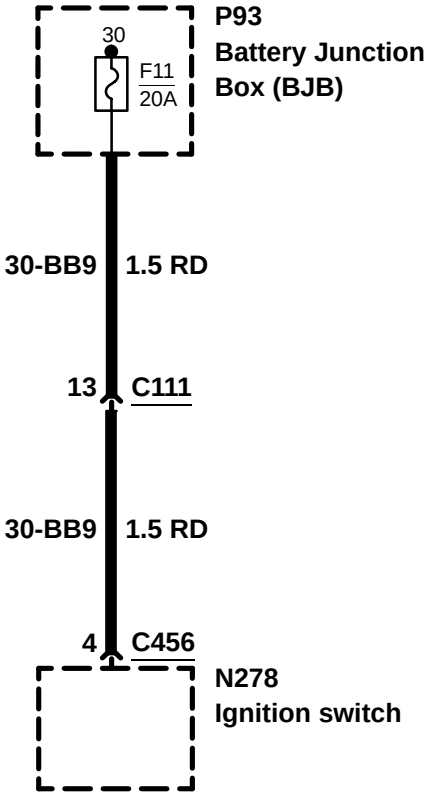


Fuse Details – F12

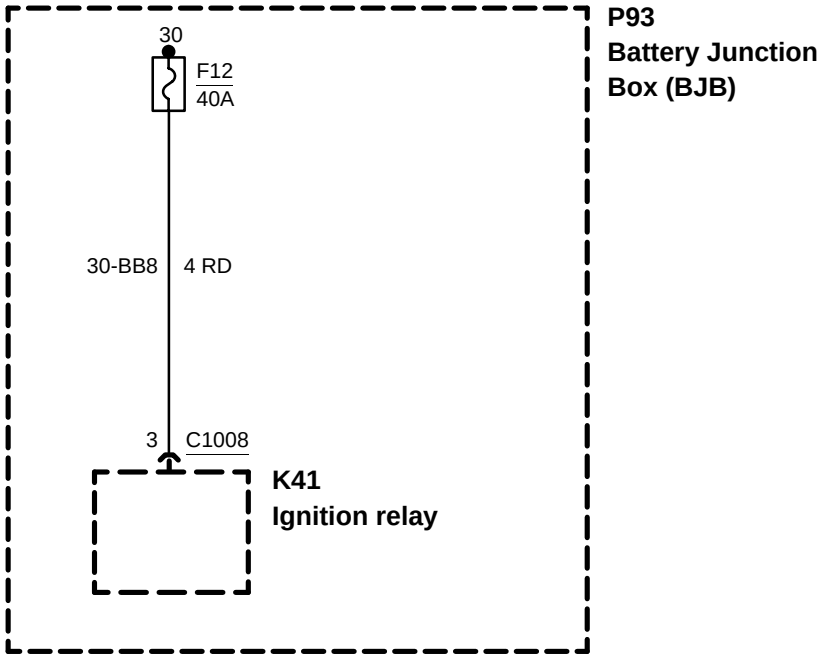


Fuse Details – F13

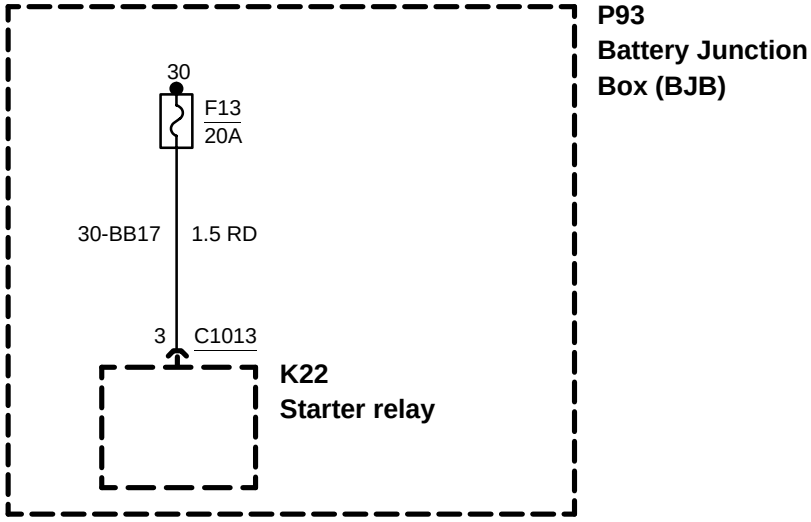


Fuse Details – F19

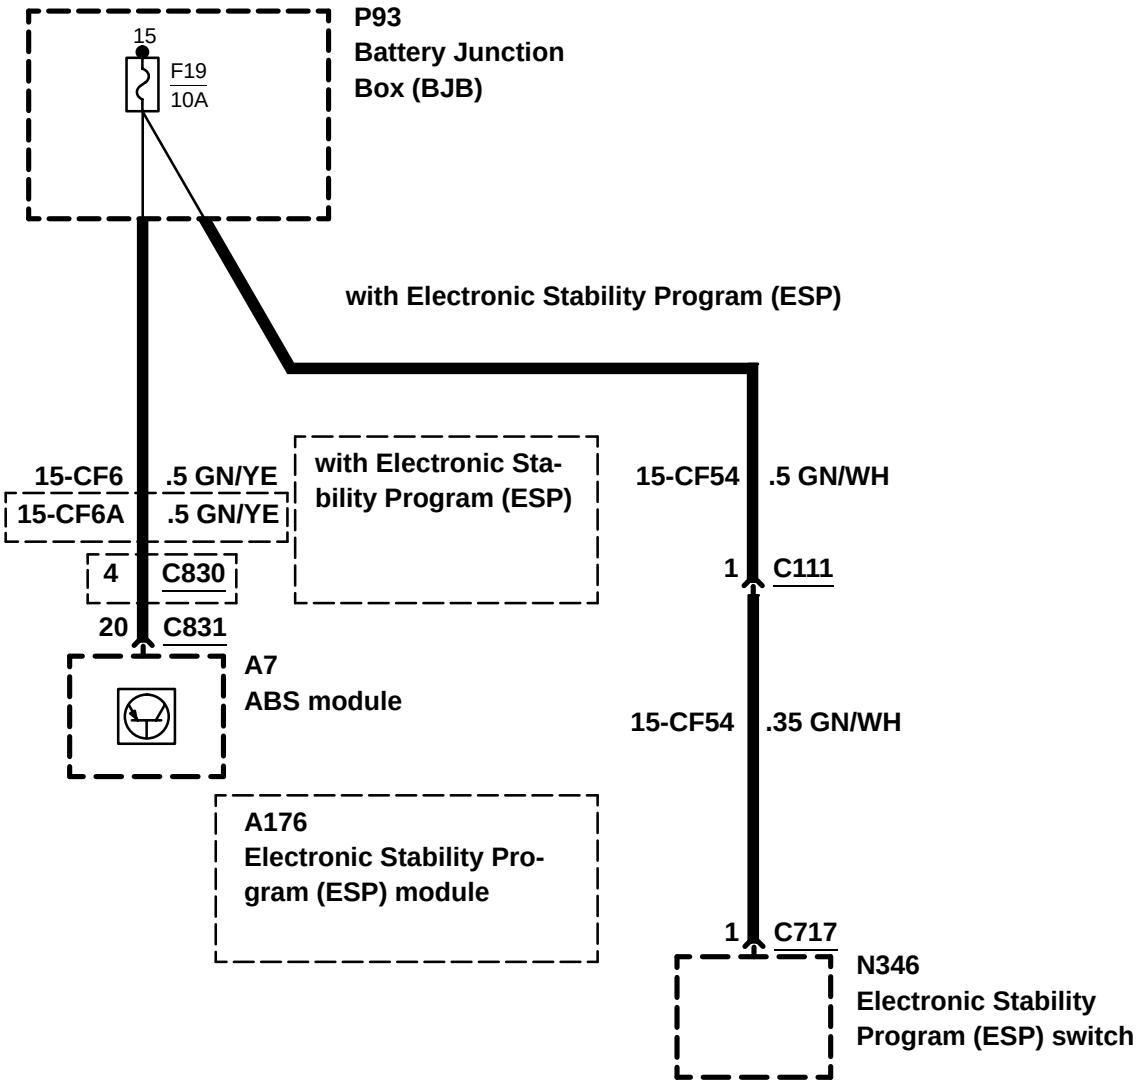


Fuse Details – F20, F22

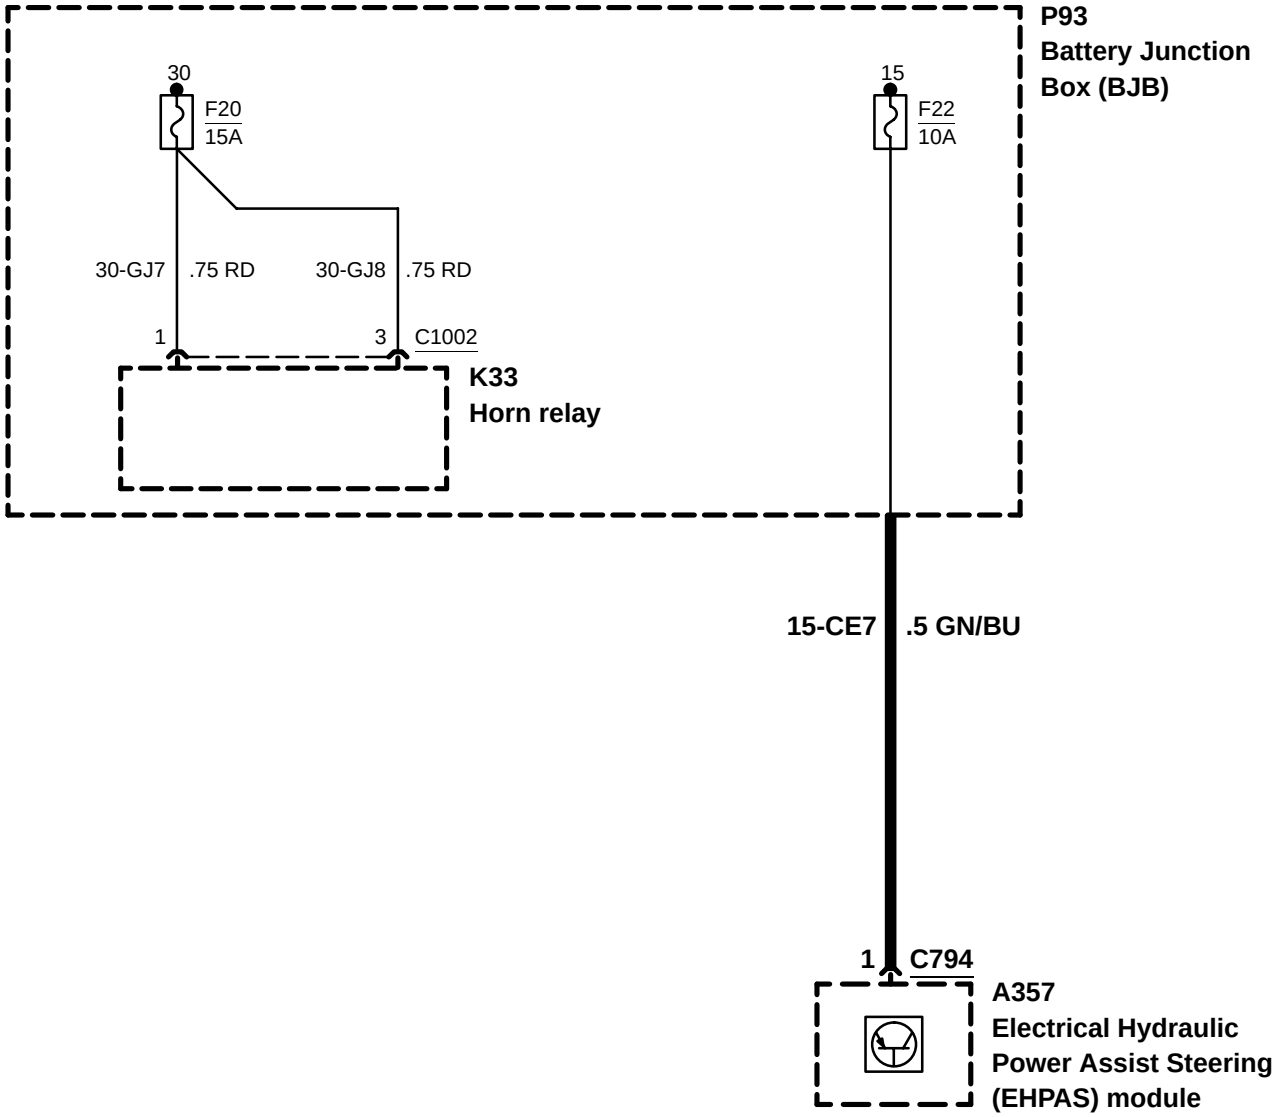


Fuse Details – F24

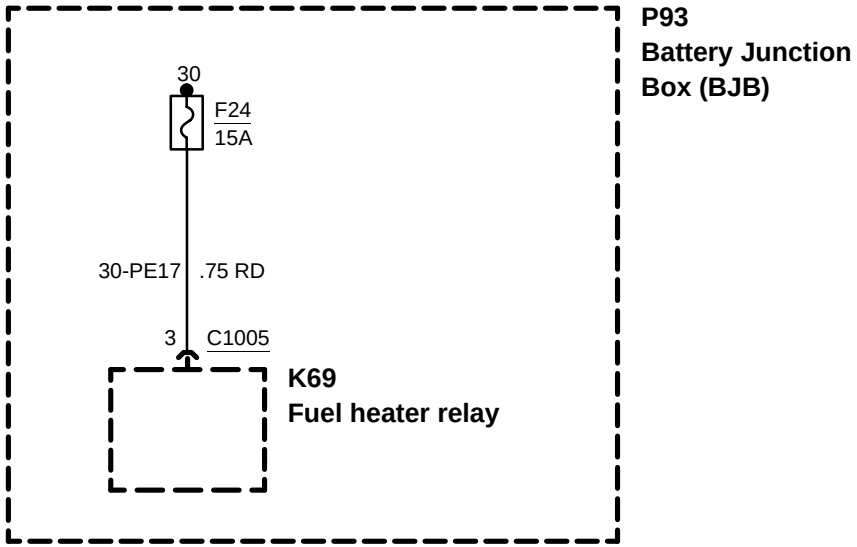


Fuse Details – F25, 1.6L (Z6), 1.8/2.0L Duratec–HE (MI4) manual transmission

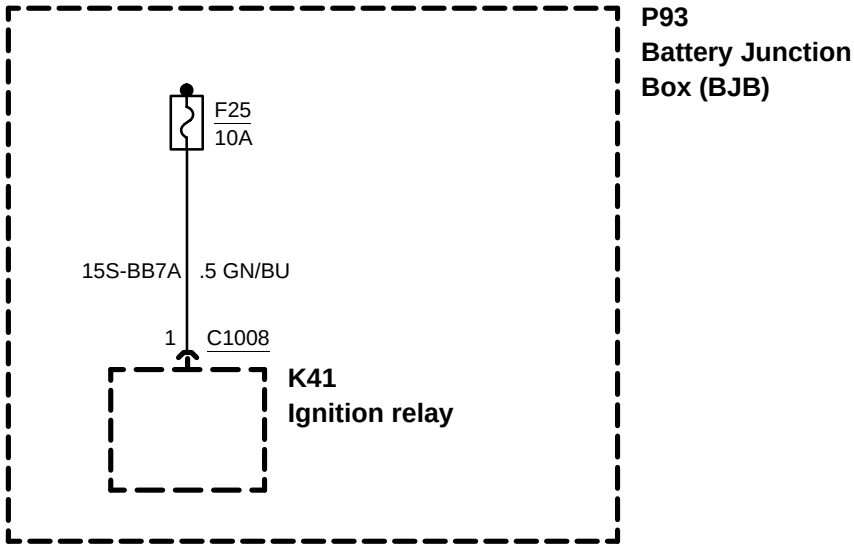


Fuse Details – F25, 1.8/2.0L Duratec–HE (MI4) automatic transmission

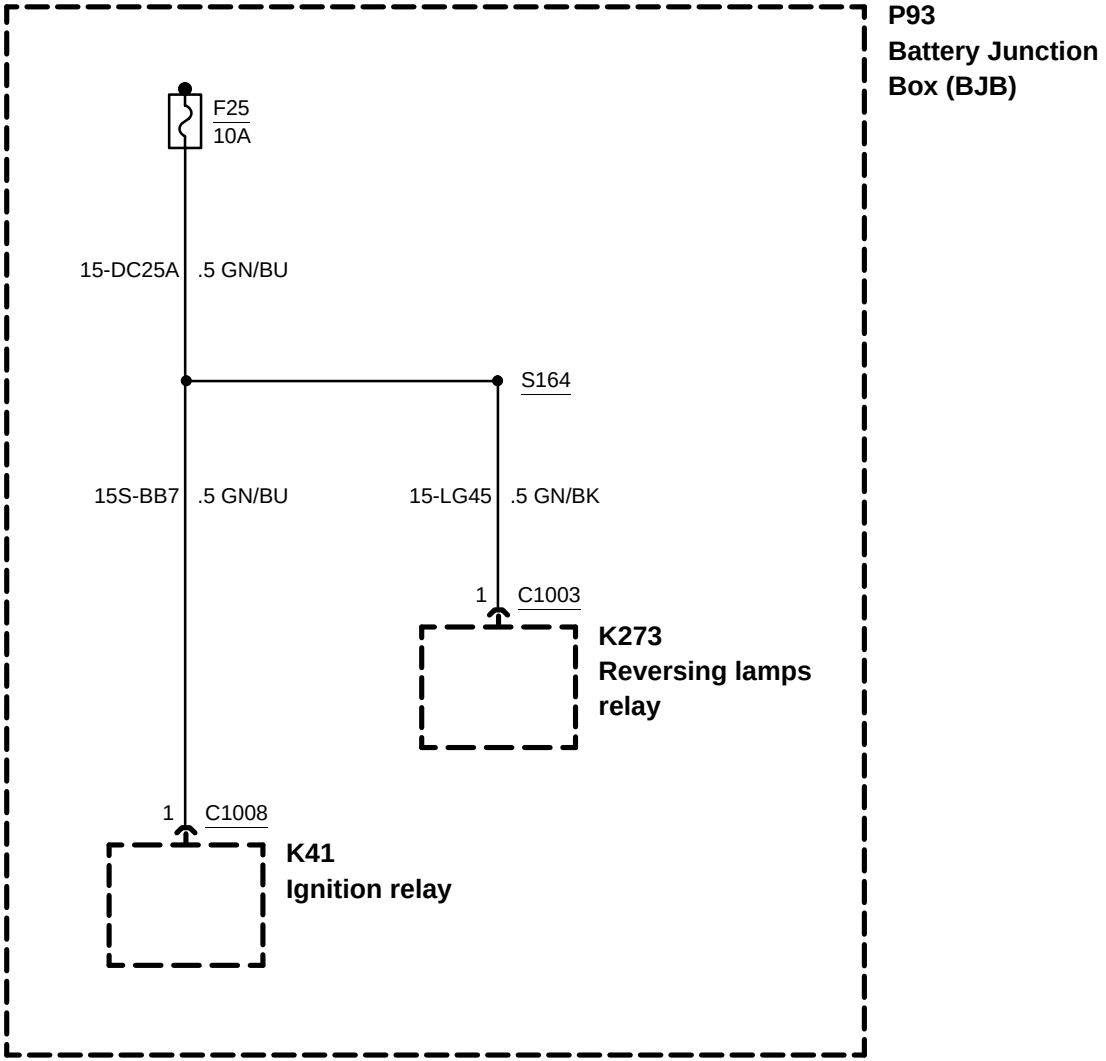


Fuse Details – F25, 2.0L Duratorq–TDCi (DW) Diesel

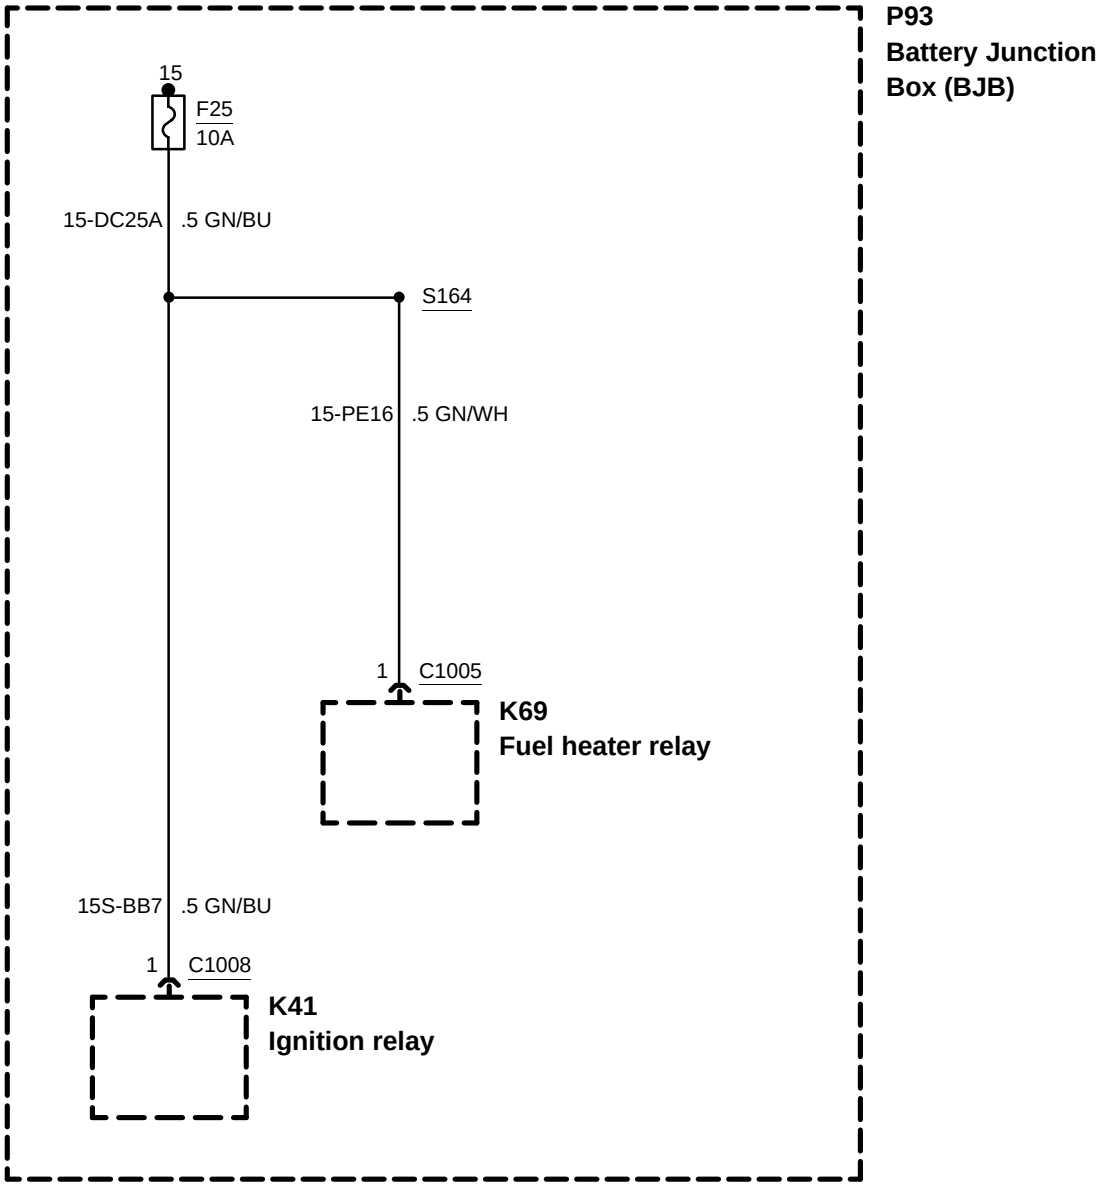


Fuse Details – F27

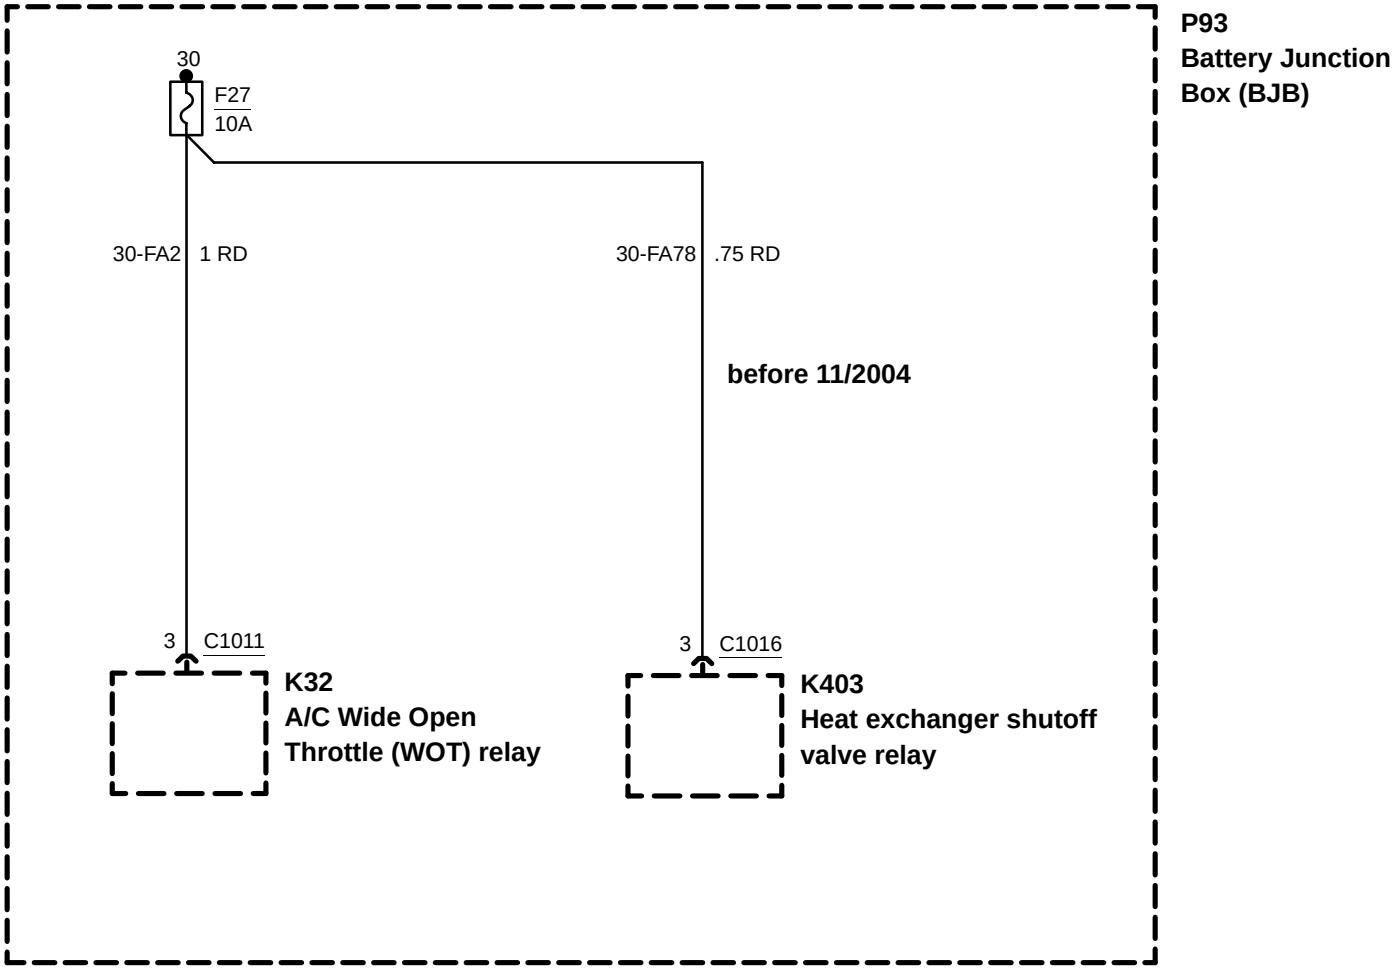


Fuse Details – F30, 1.6L (Z6), 1.8/2.0L Duratec–HE (MI4) automatic transmission

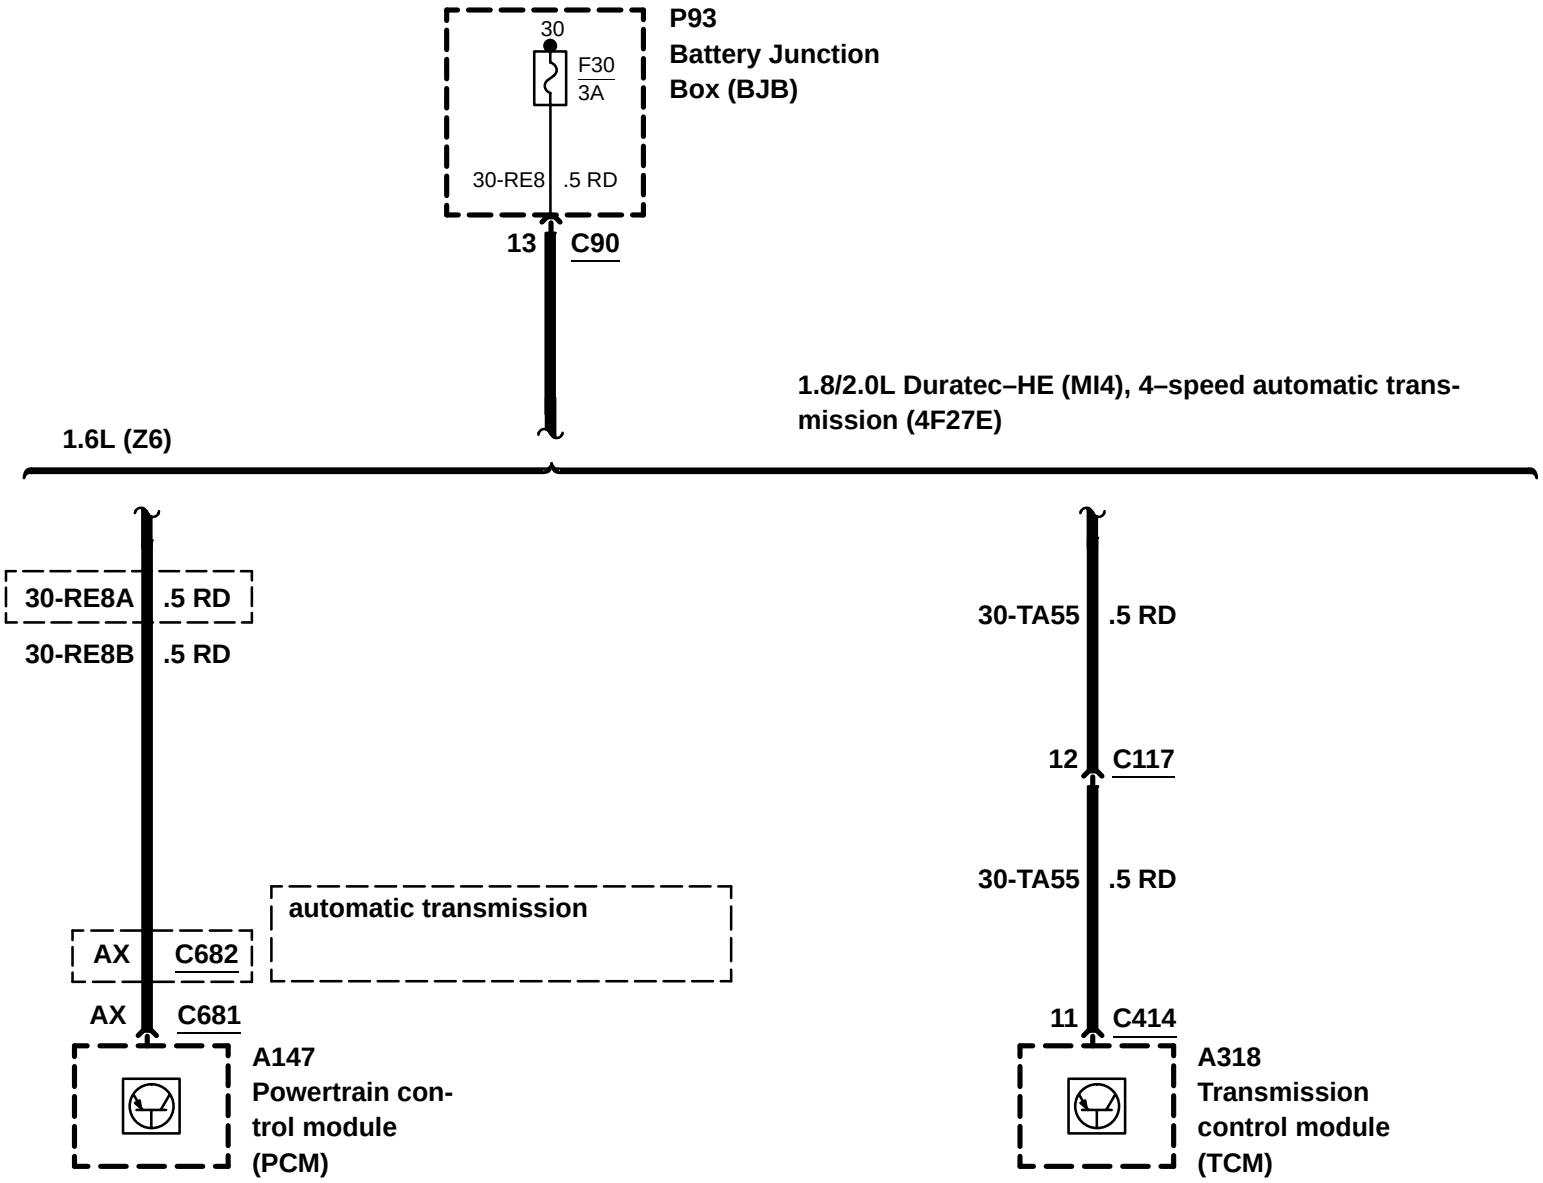


Fuse Details – F30, 2.0L Duratorq–TDCi (DW) Diesel

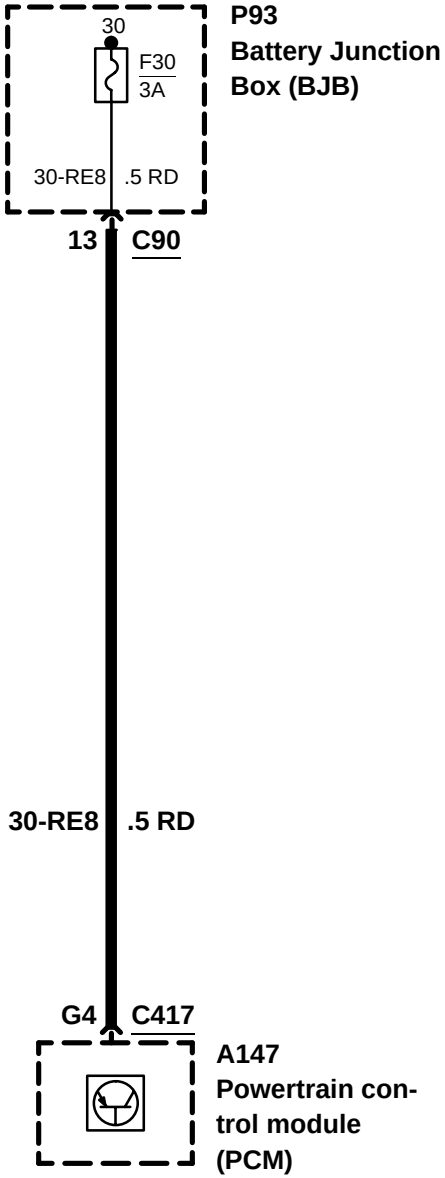


Fuse Details – F31, except 1.6L (Z6)

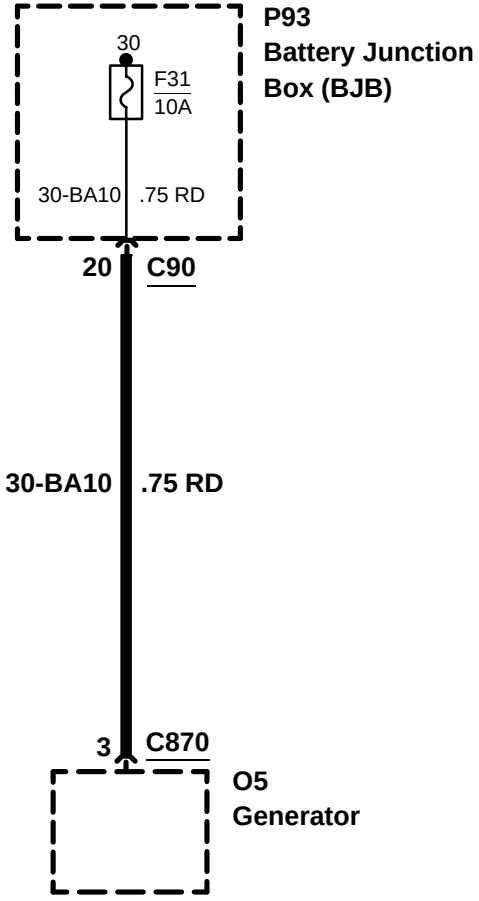


Fuse Details – F32, 4–speed automatic transmission (4F27E)

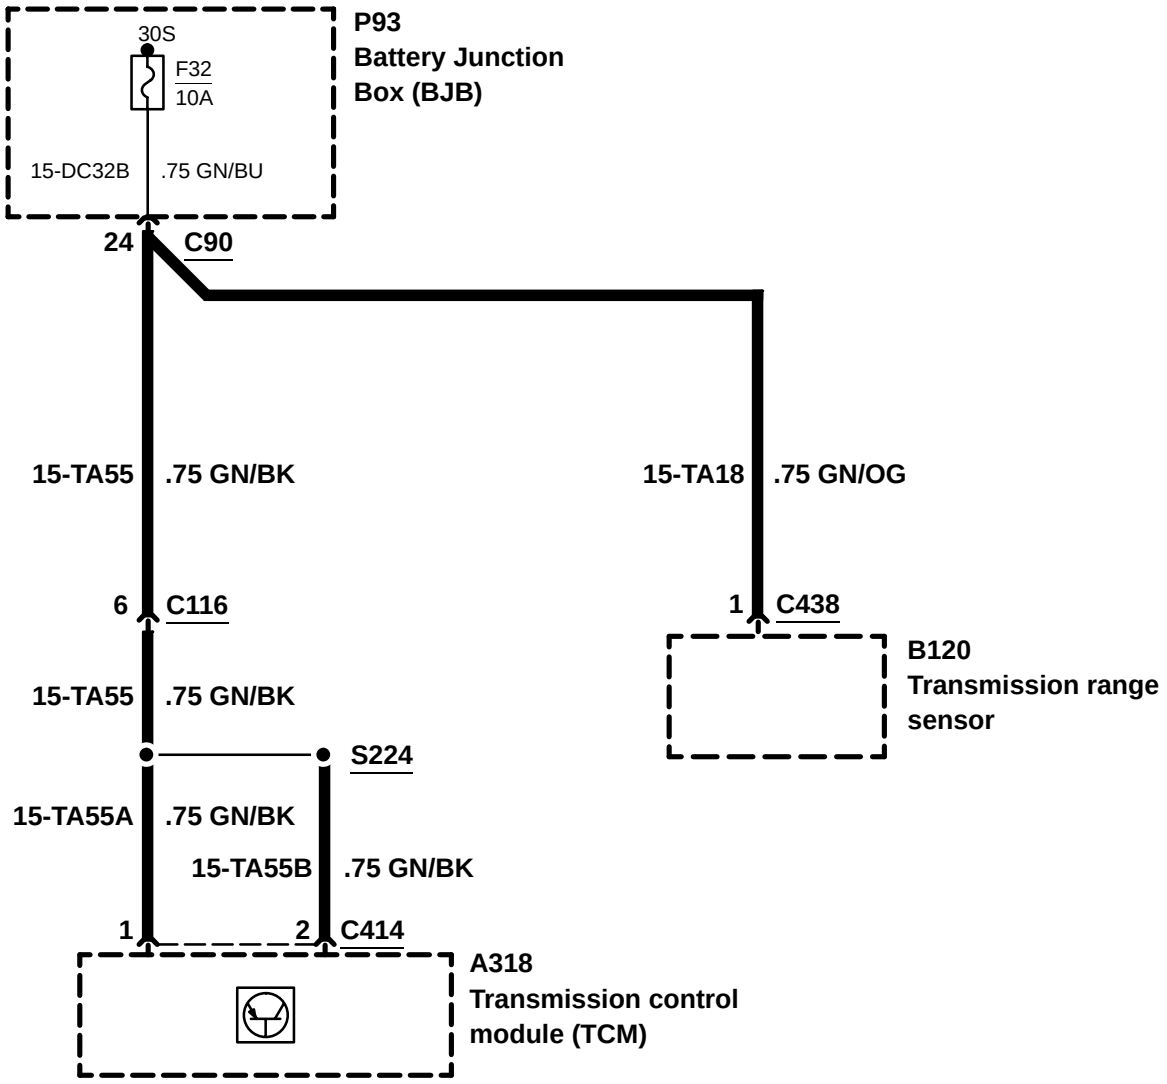


Fuse Details – F33, 1.6L (Z6)

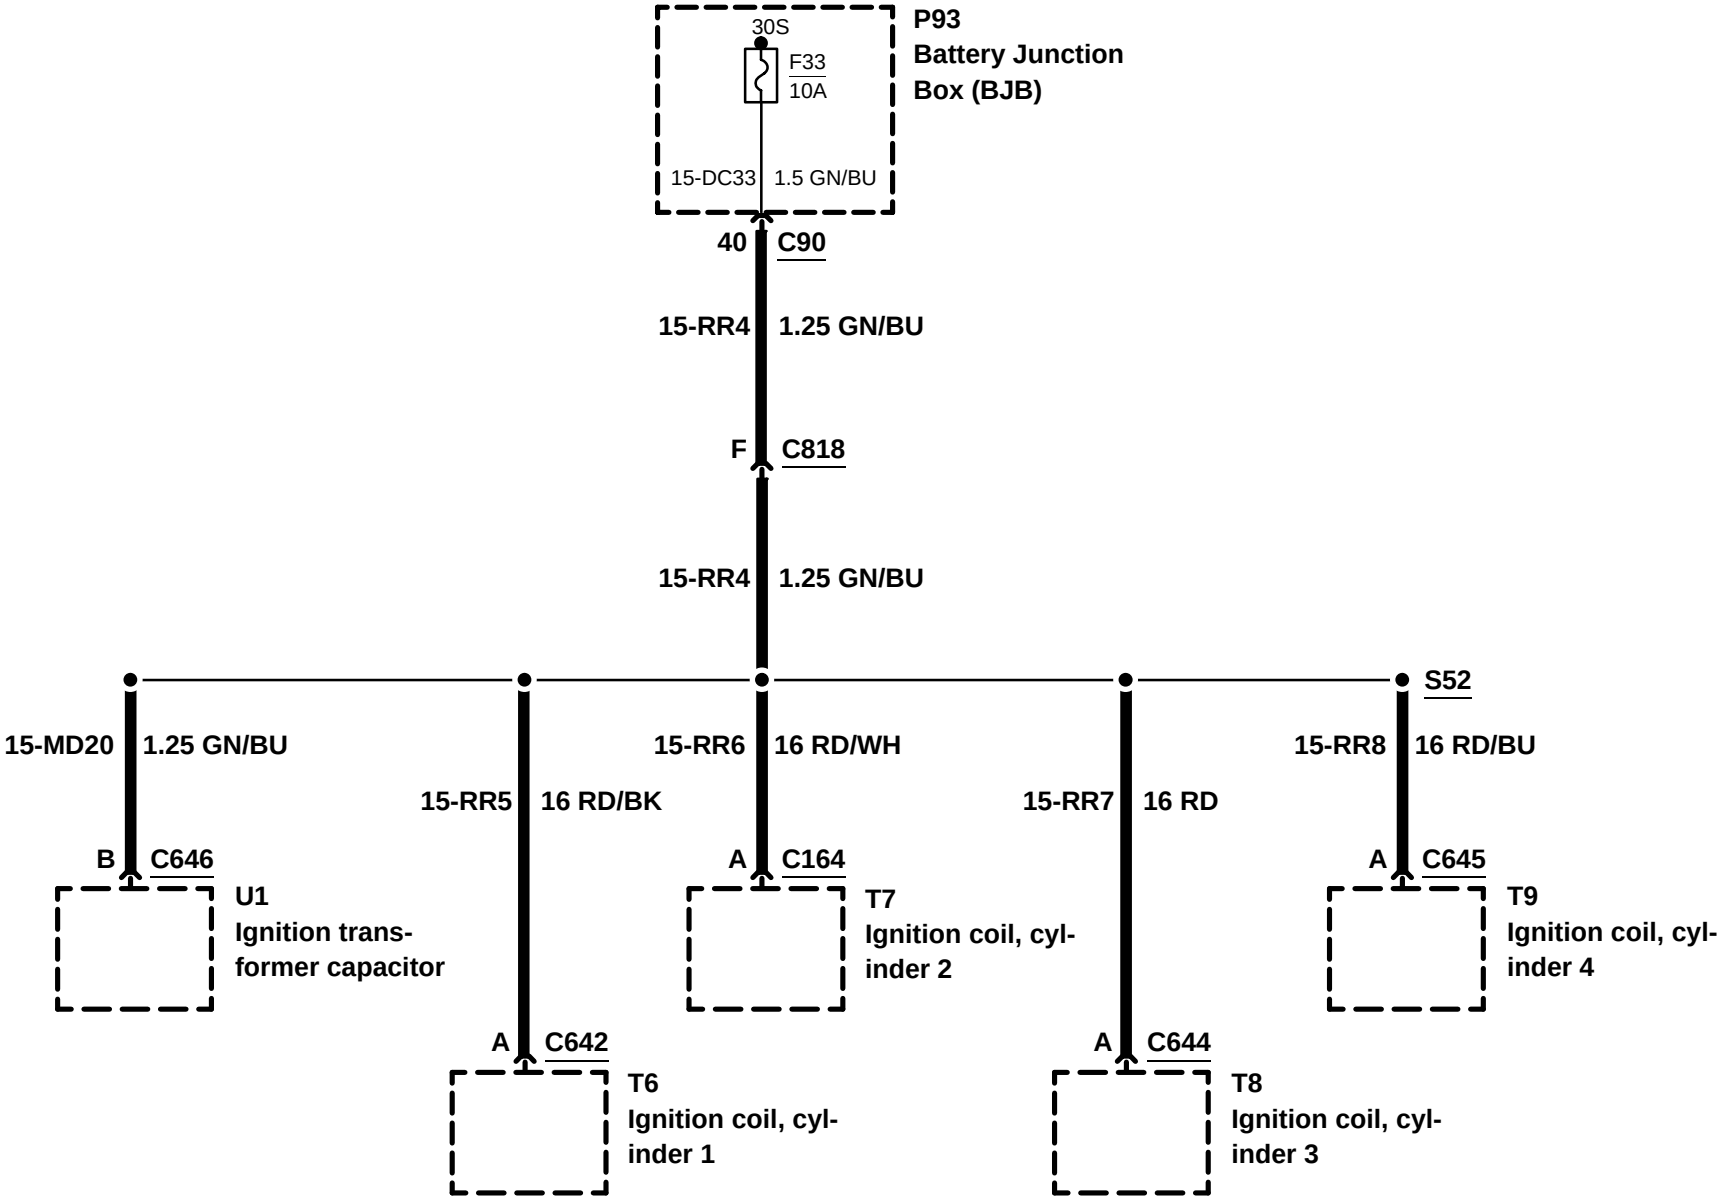


Fuse Details – F33, 1.8/2.0L Duratec–HE (MI4)

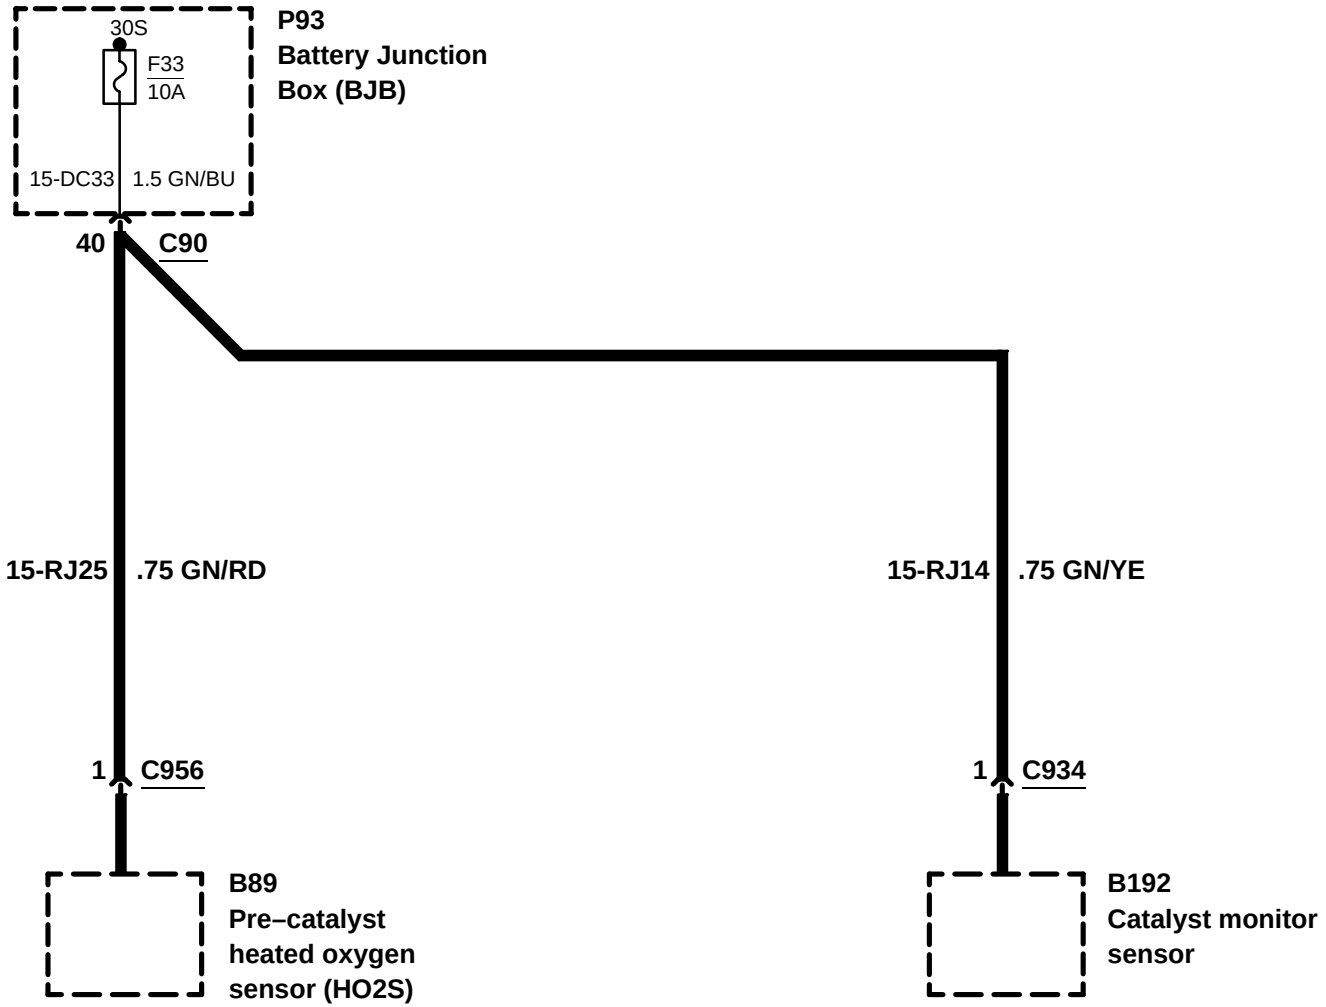


Fuse Details – F34, 1.6L (Z6)

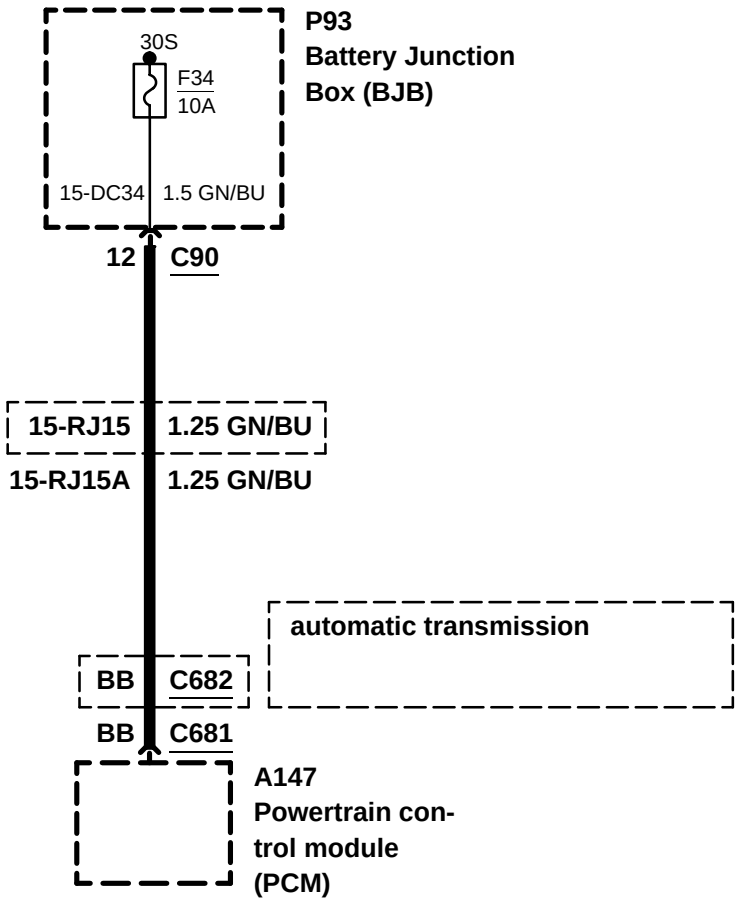


Fuse Details – F34, 1.8/2.0L Duratec–HE (MI4)

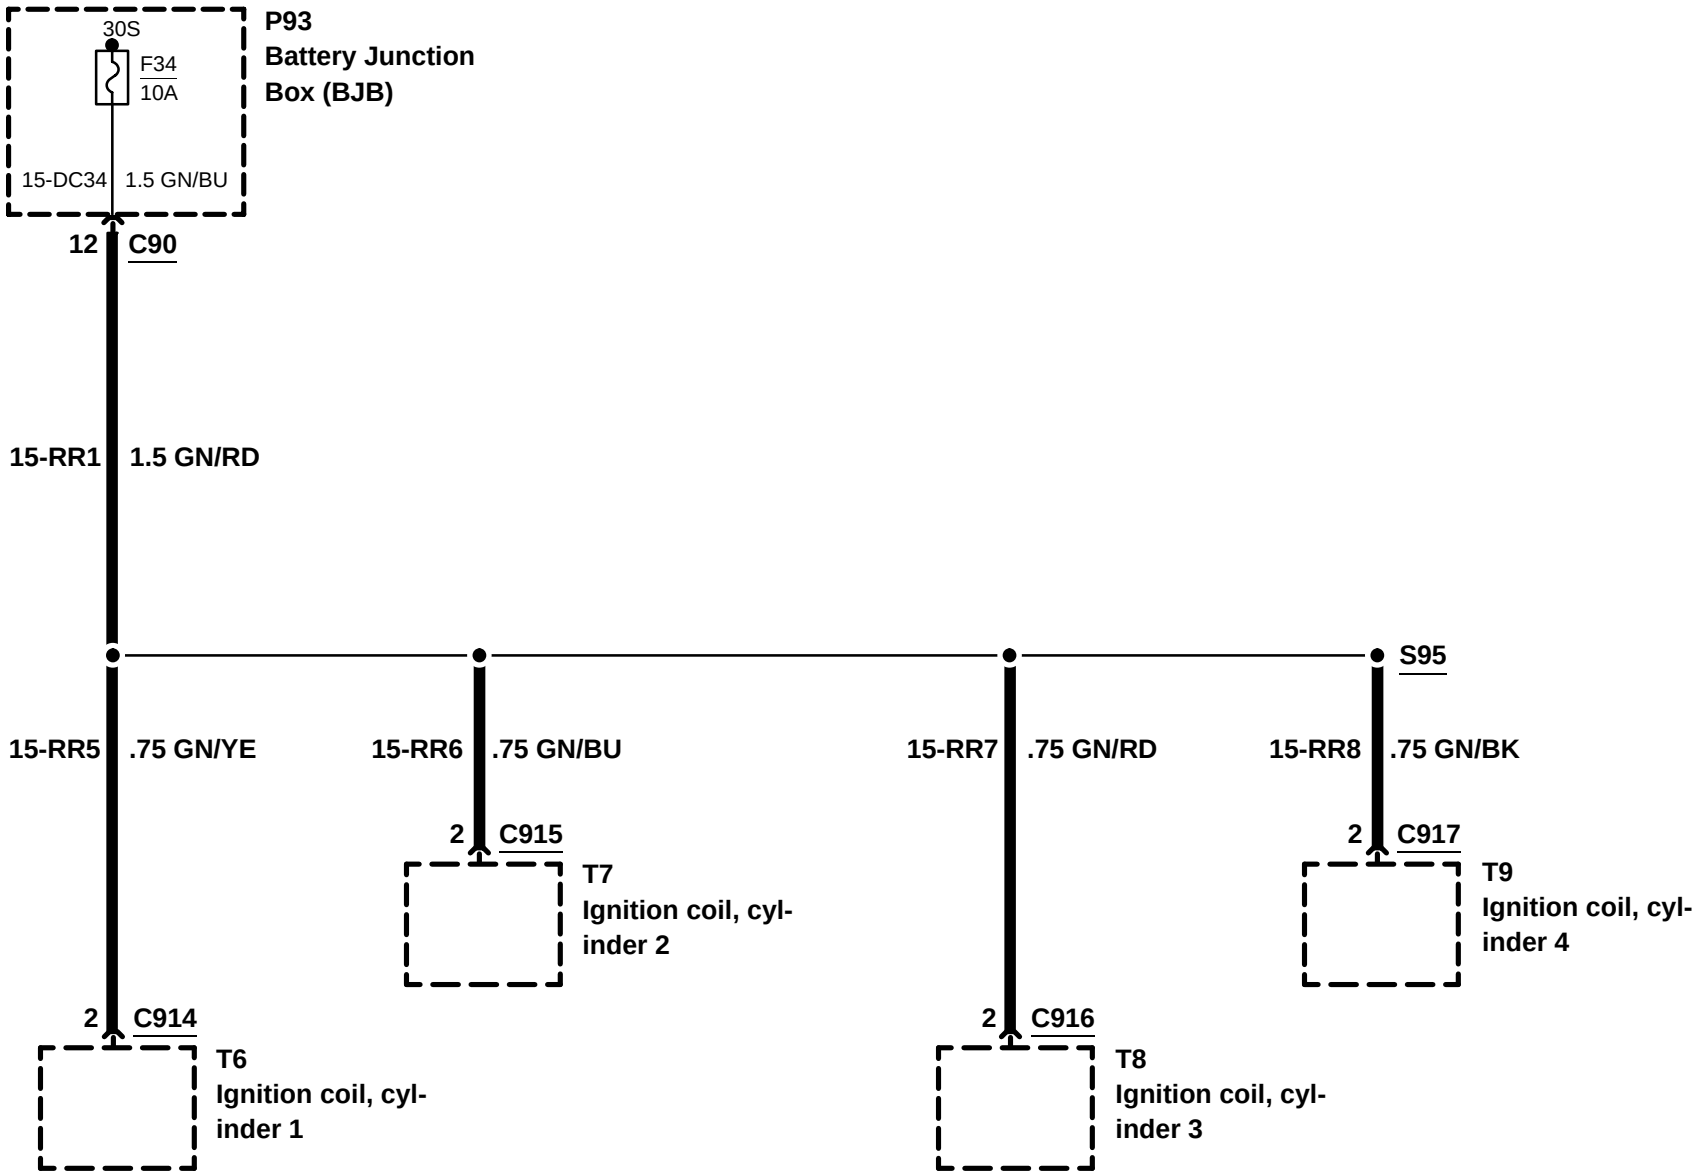


Fuse Details – F34, 2.0L Duratorq–TDCi (DW) Diesel

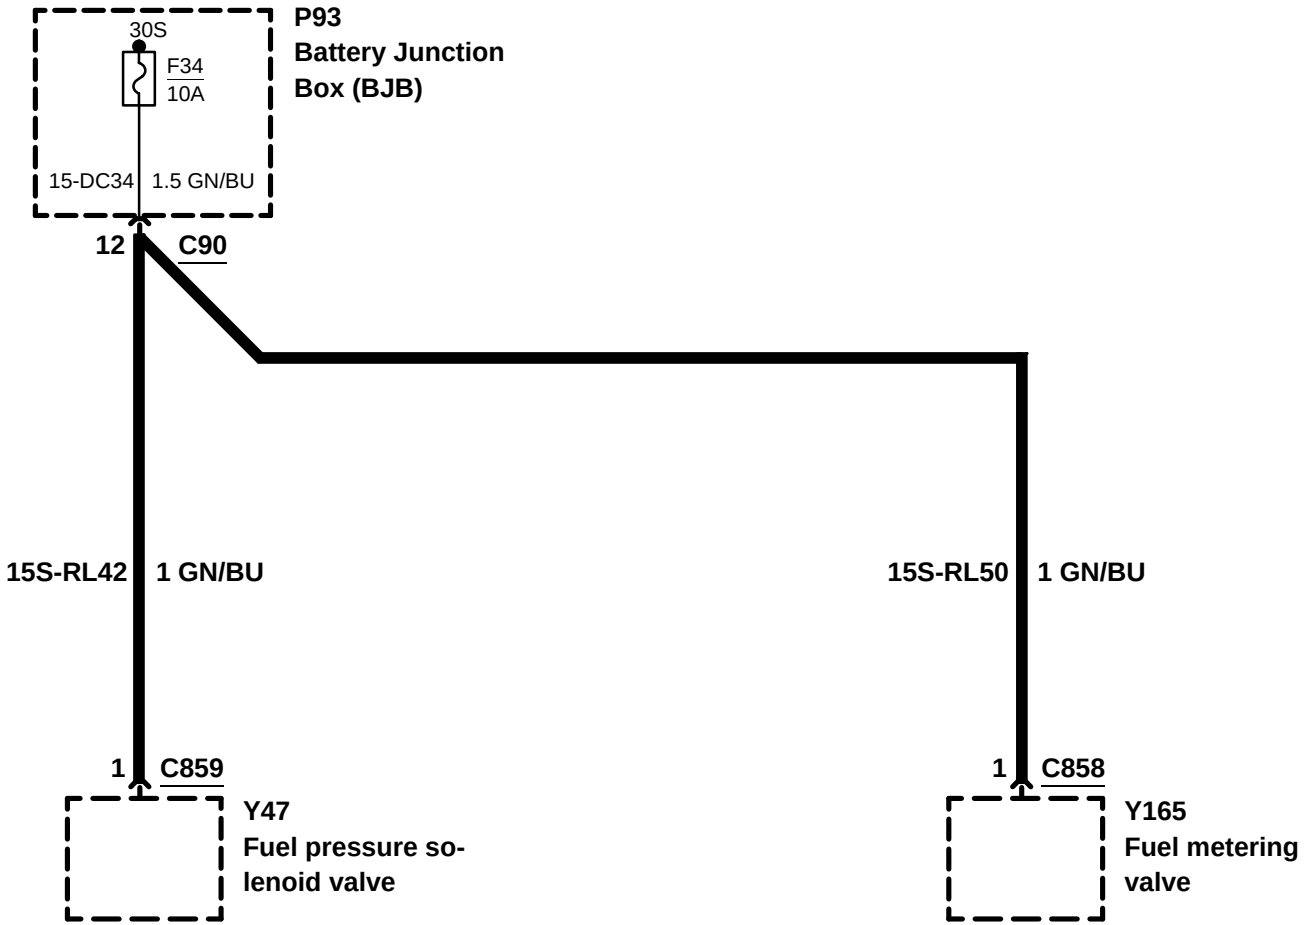


Fuse Details – F35, 1.6L (Z6)

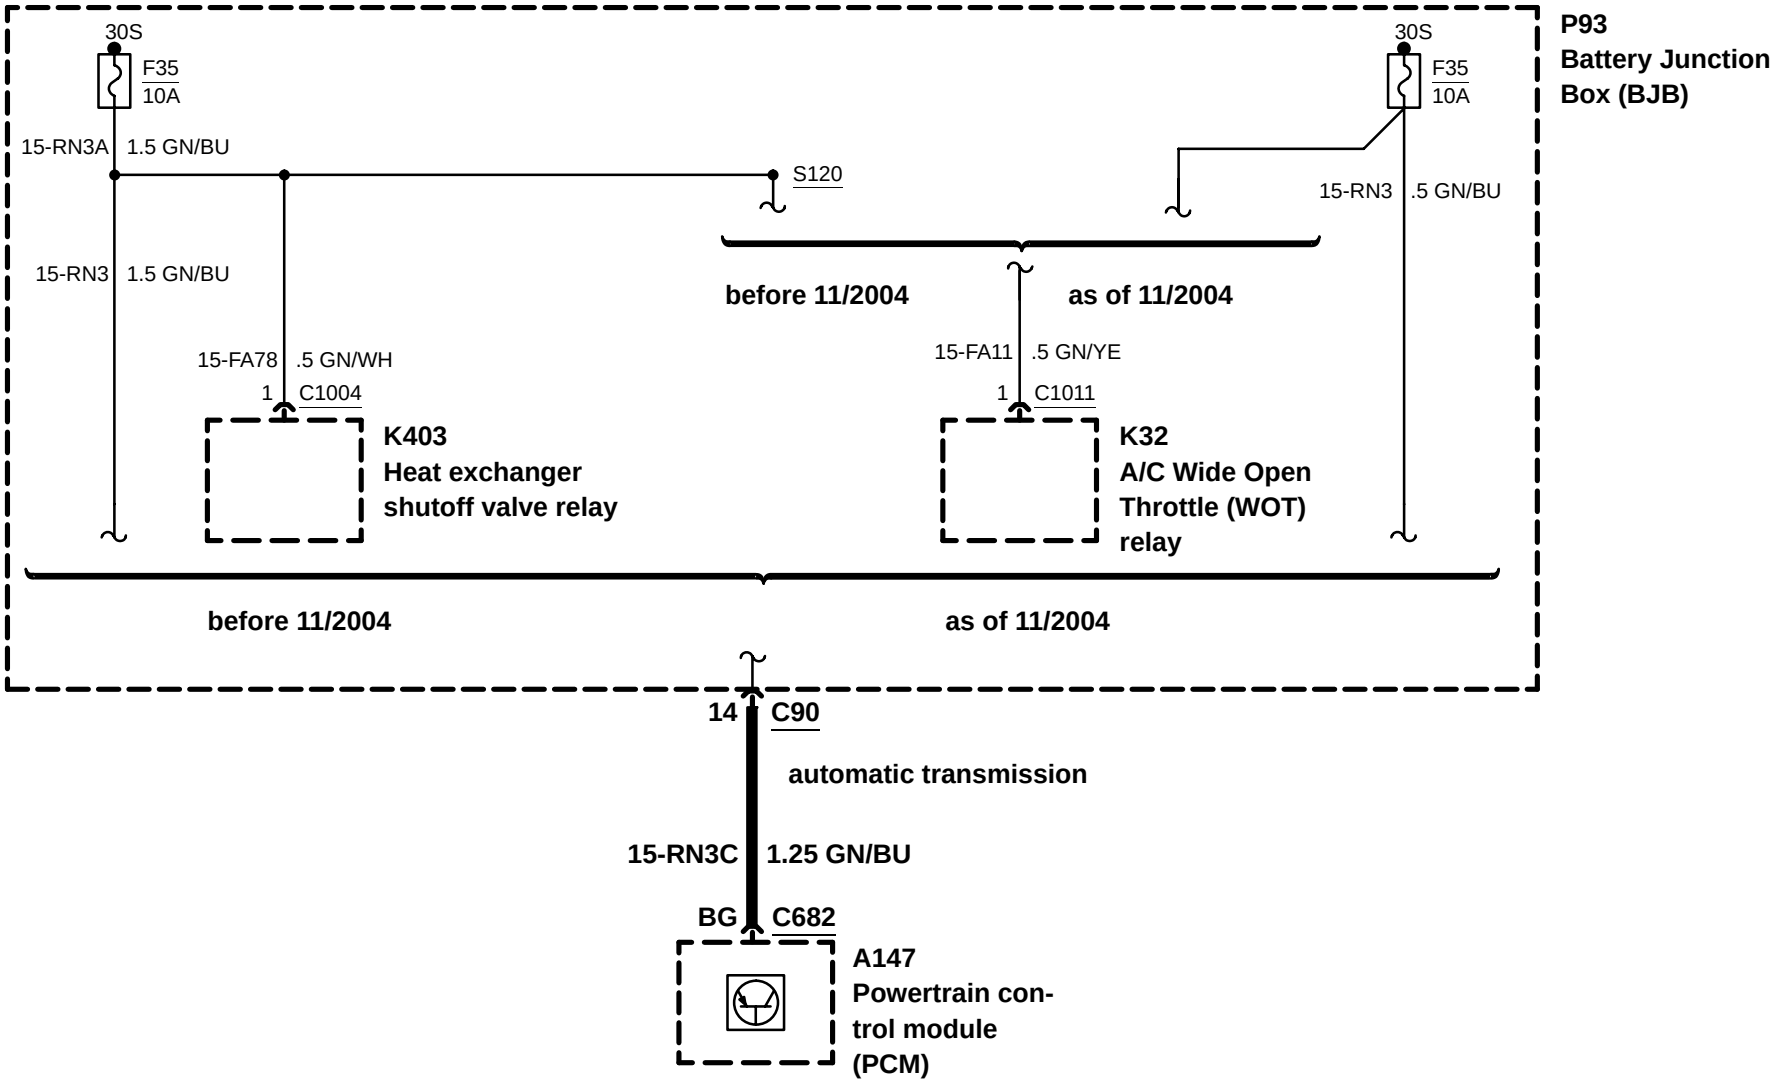

Fuse Details – F35, 1.8/2.0L Duratec–HE (MI4)

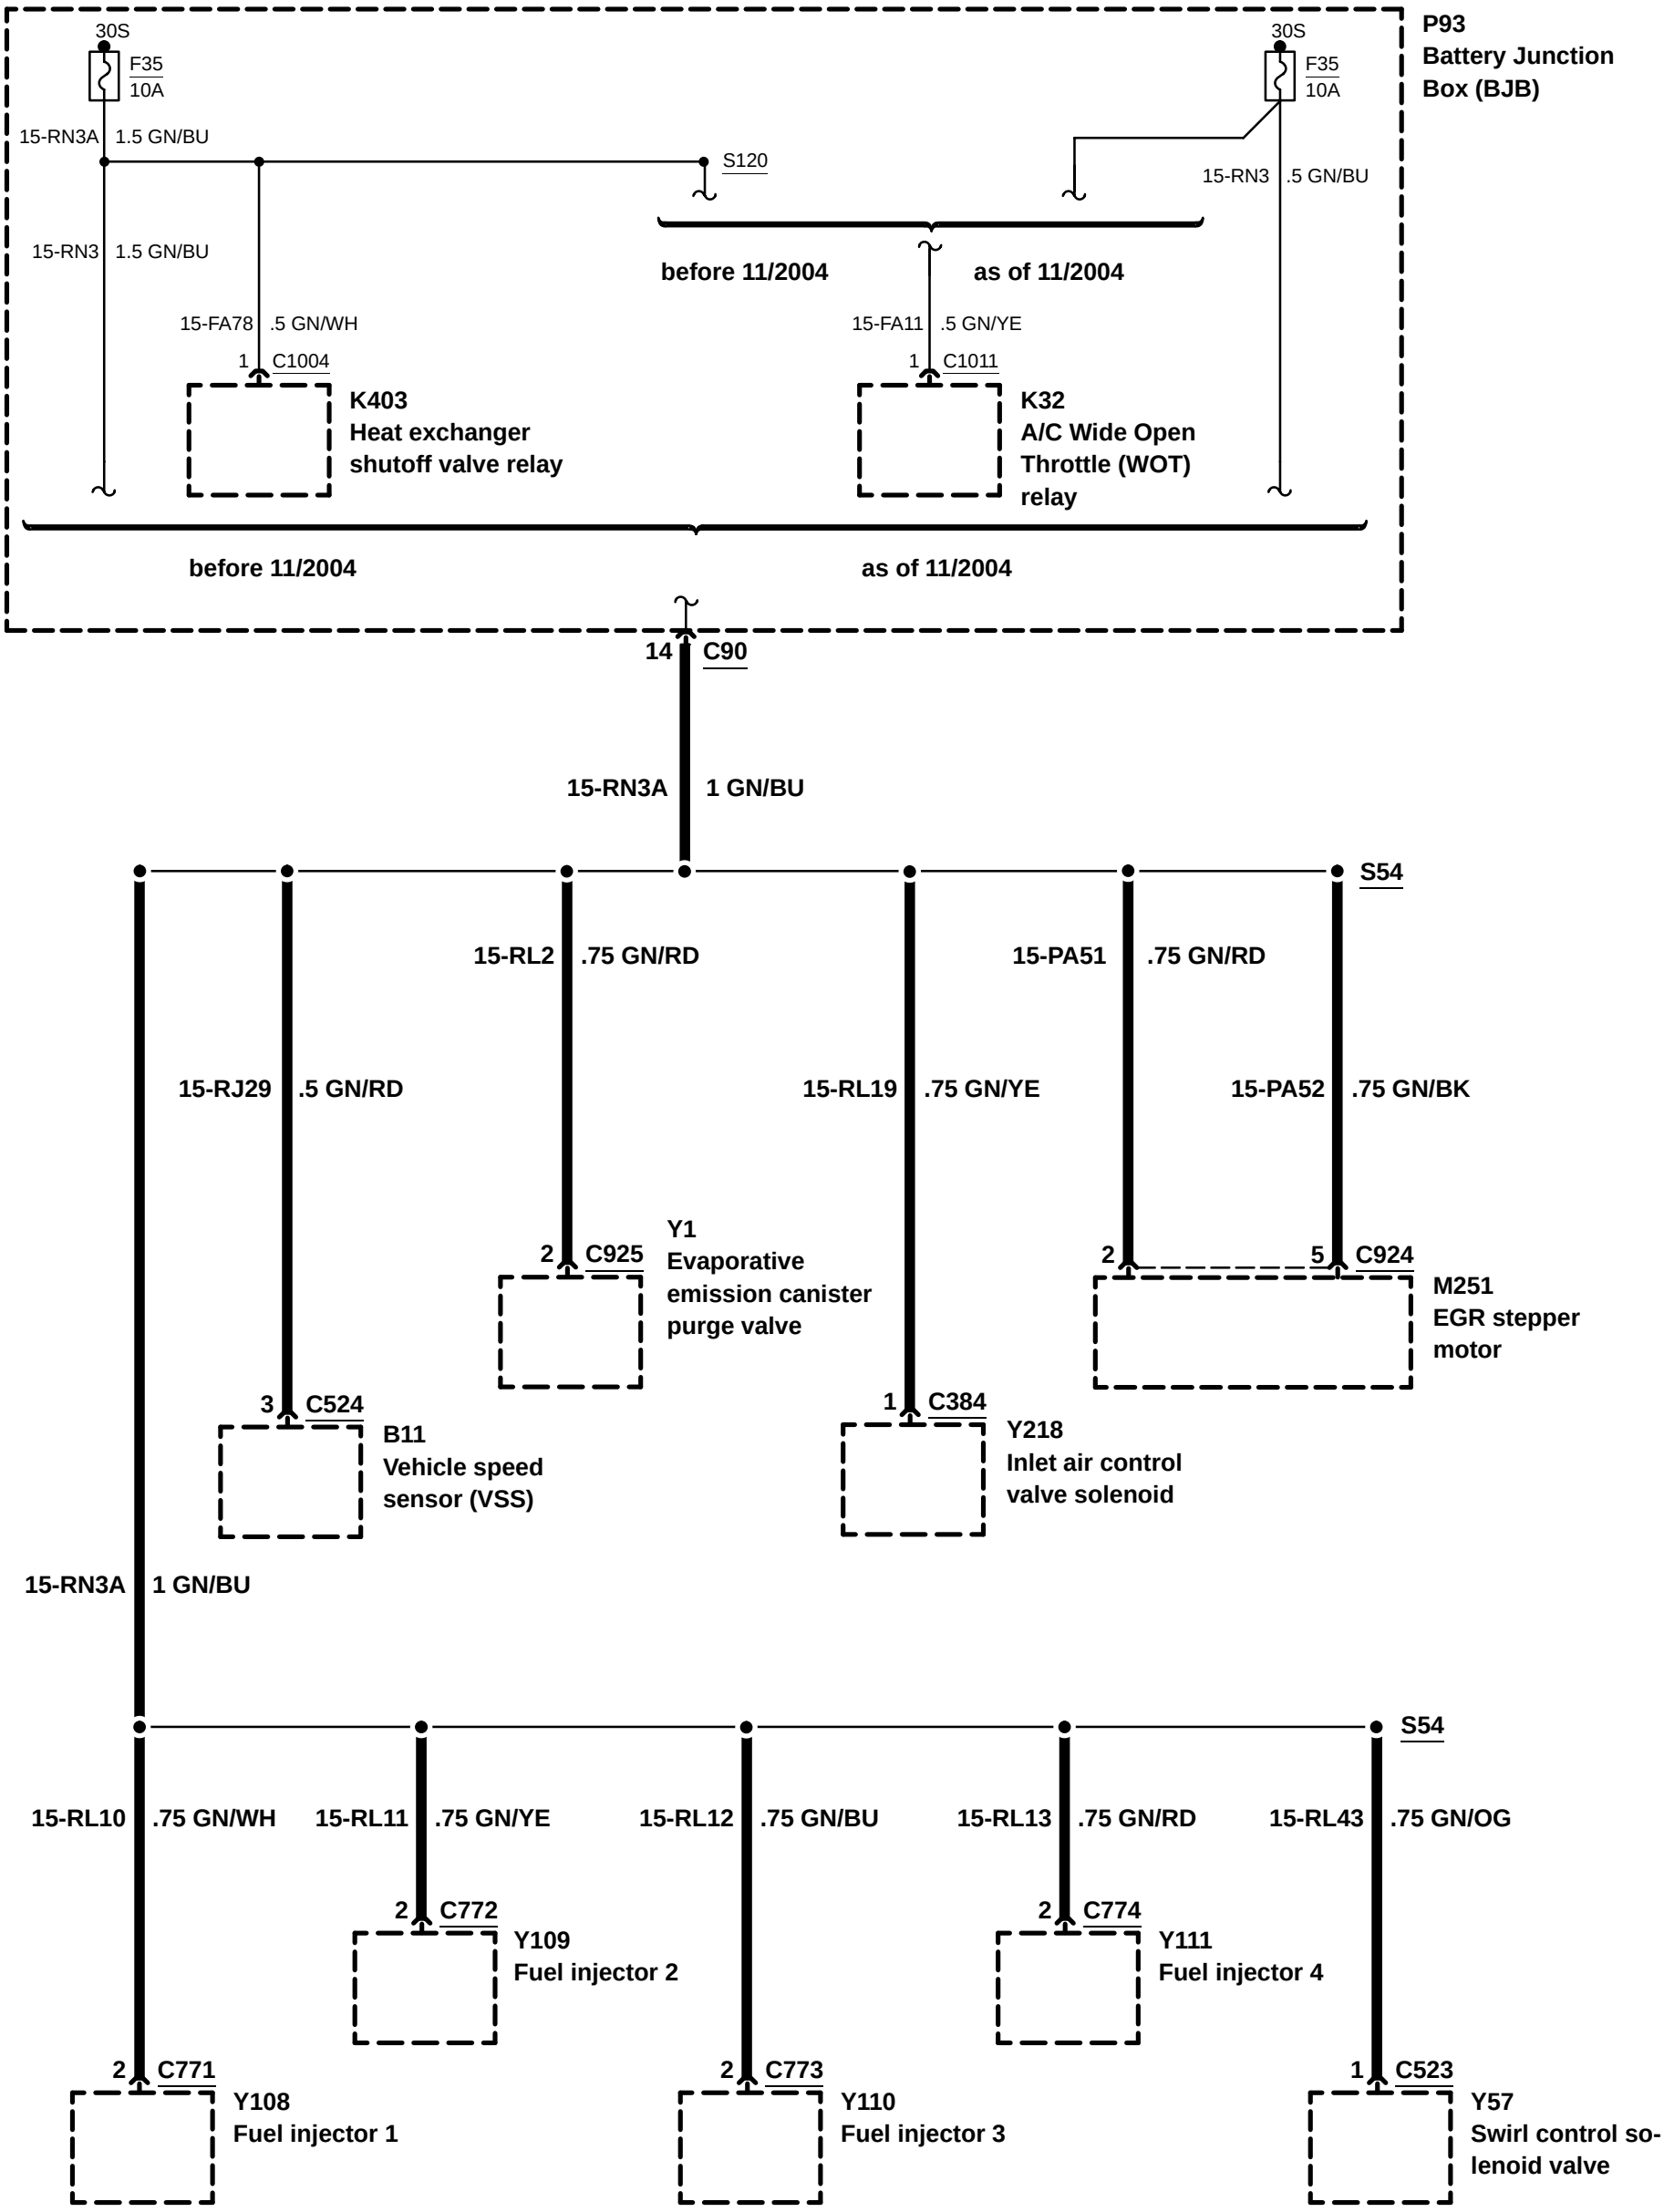


Fuse Details – F35, 2.0L Duratorq–TDCi (DW) Diesel

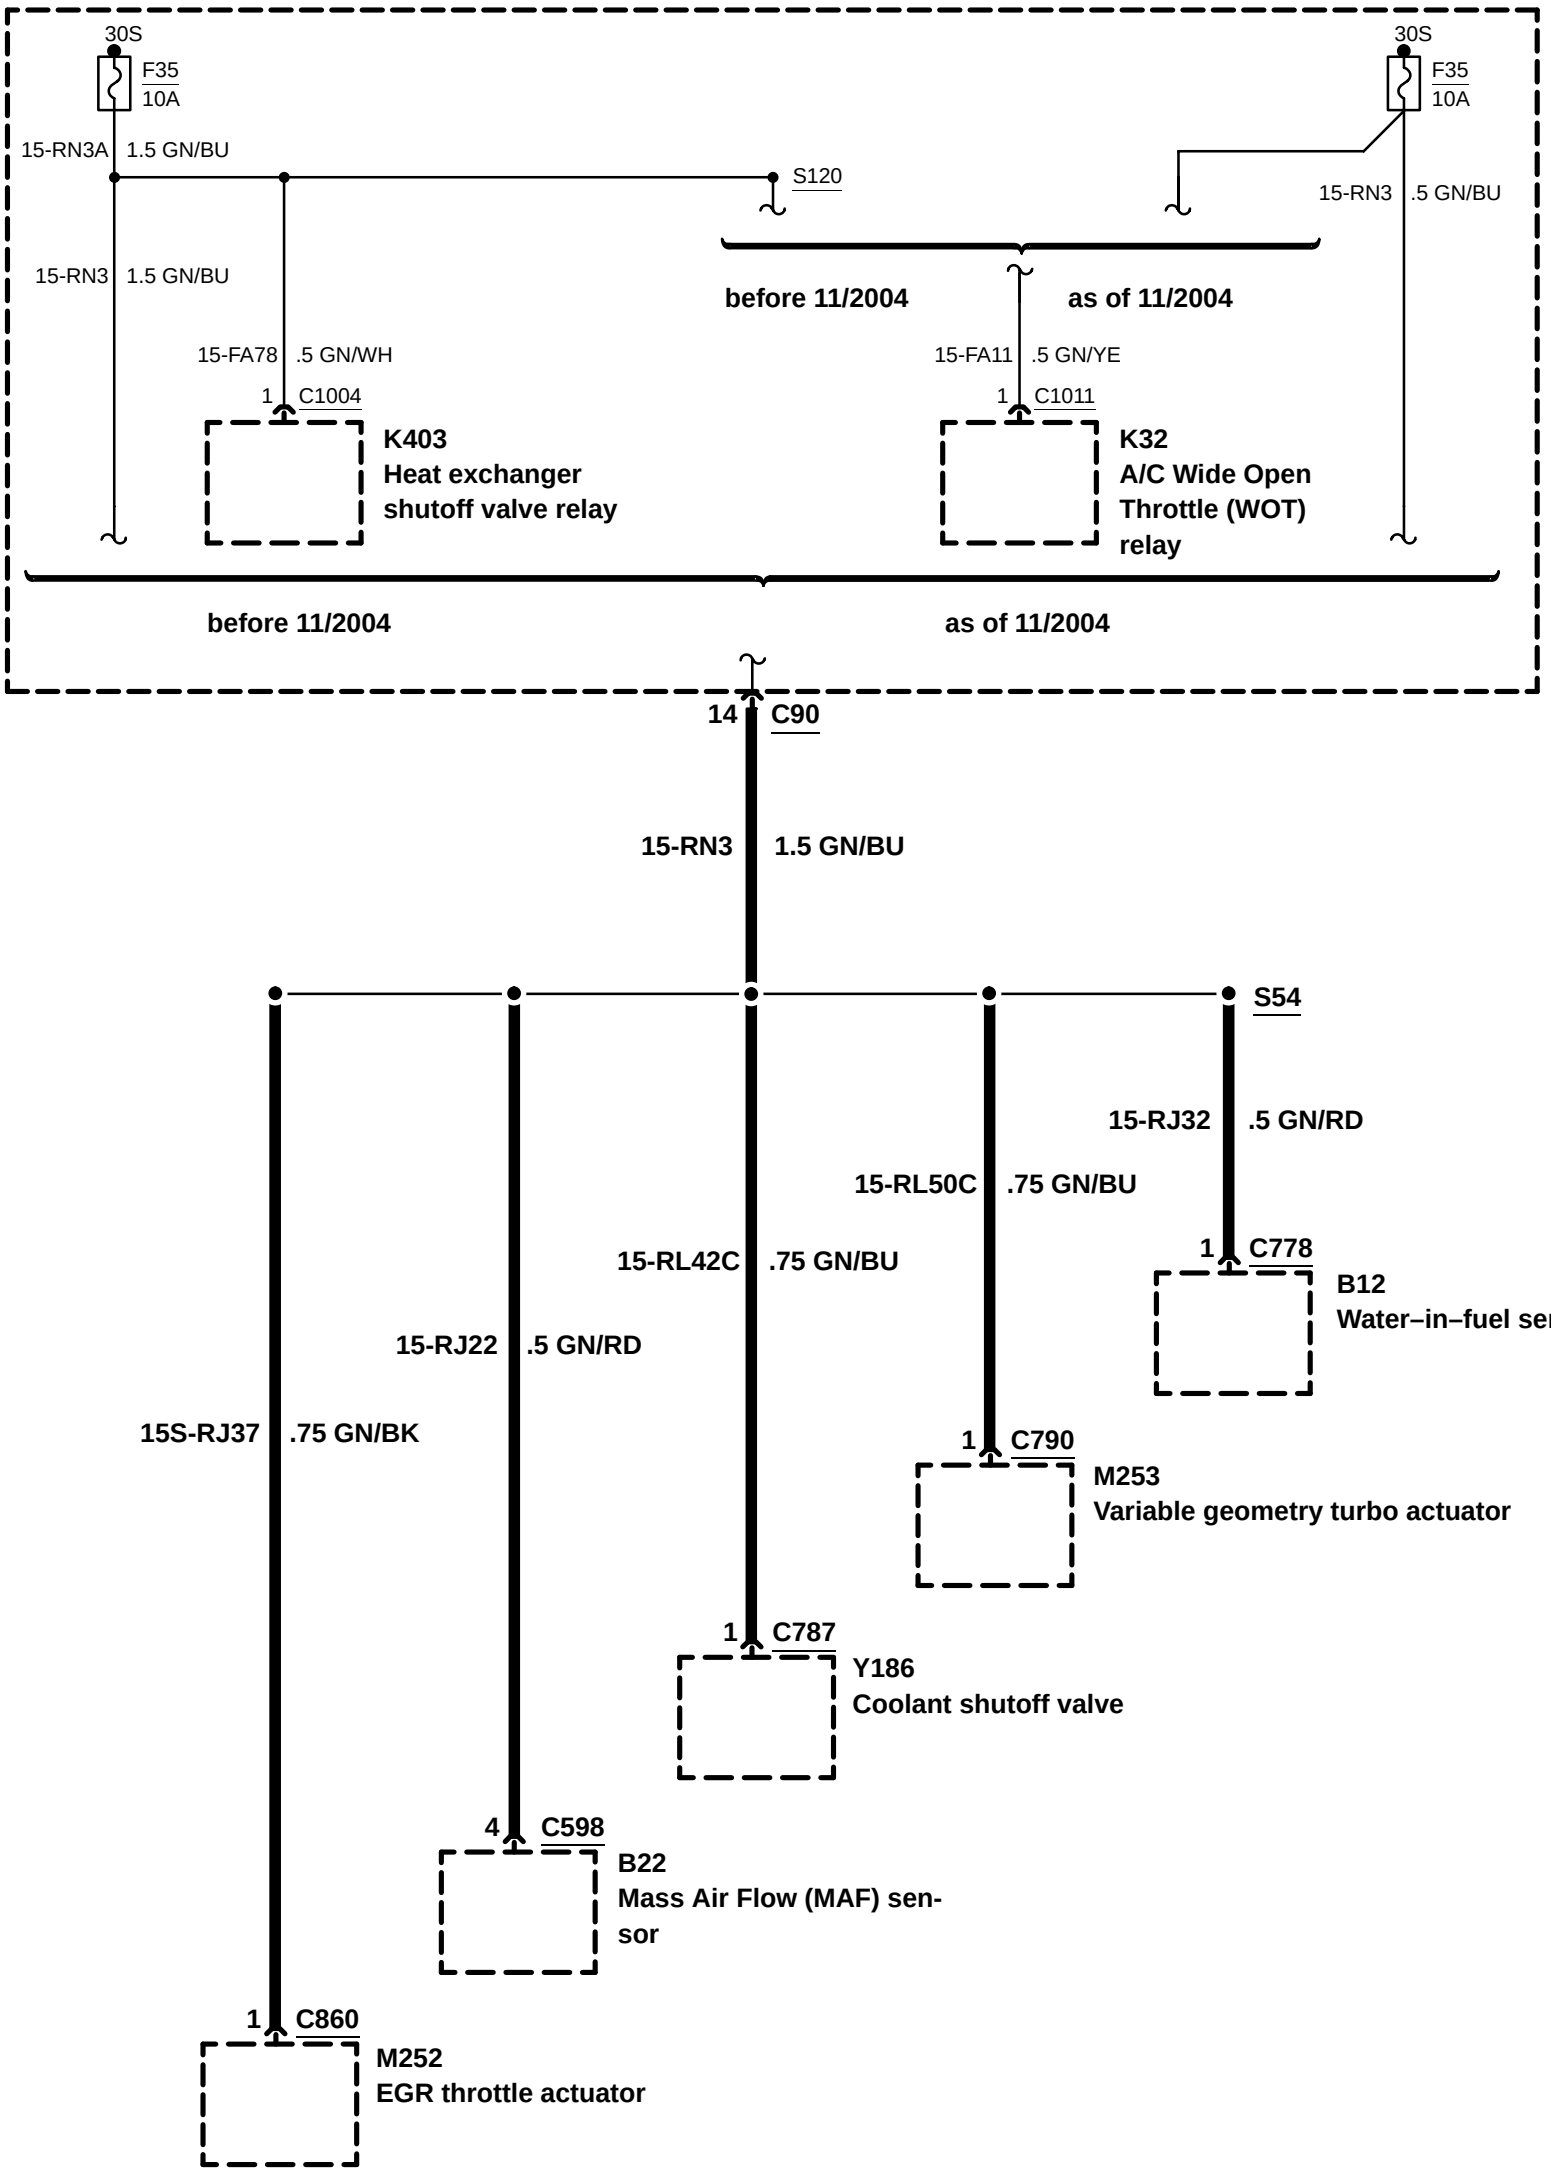


P93
Battery Junction Box (BJB)


Fuse Details – F36, 1.6L (Z6)

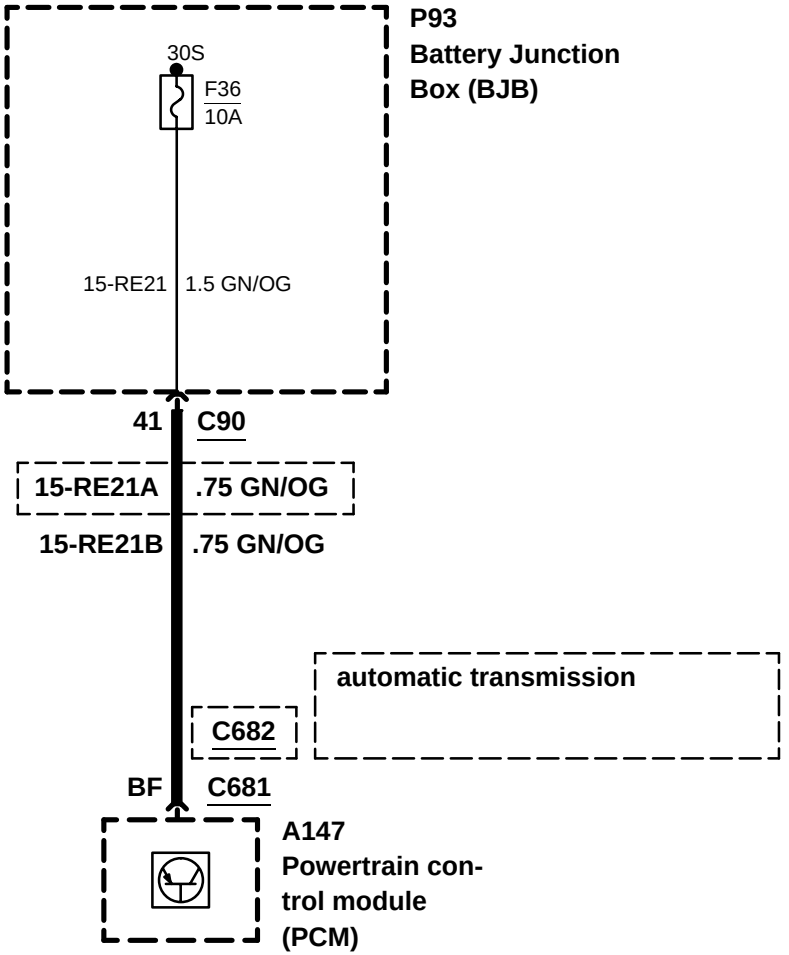


Fuse Details – F36, 1.8/2.0L Duratec–HE (MI4)

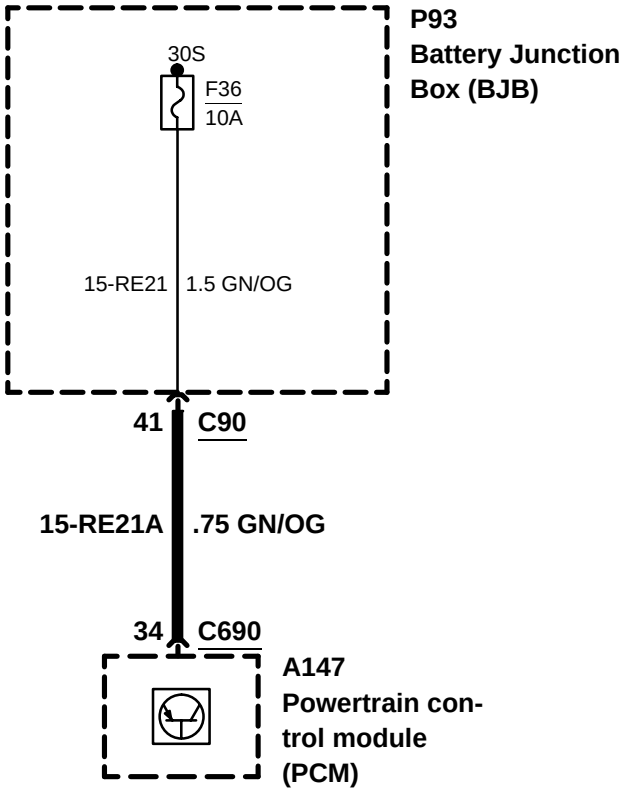


Fuse Details – F36, 2.0L Duratorq–TDCi (DW) Diesel

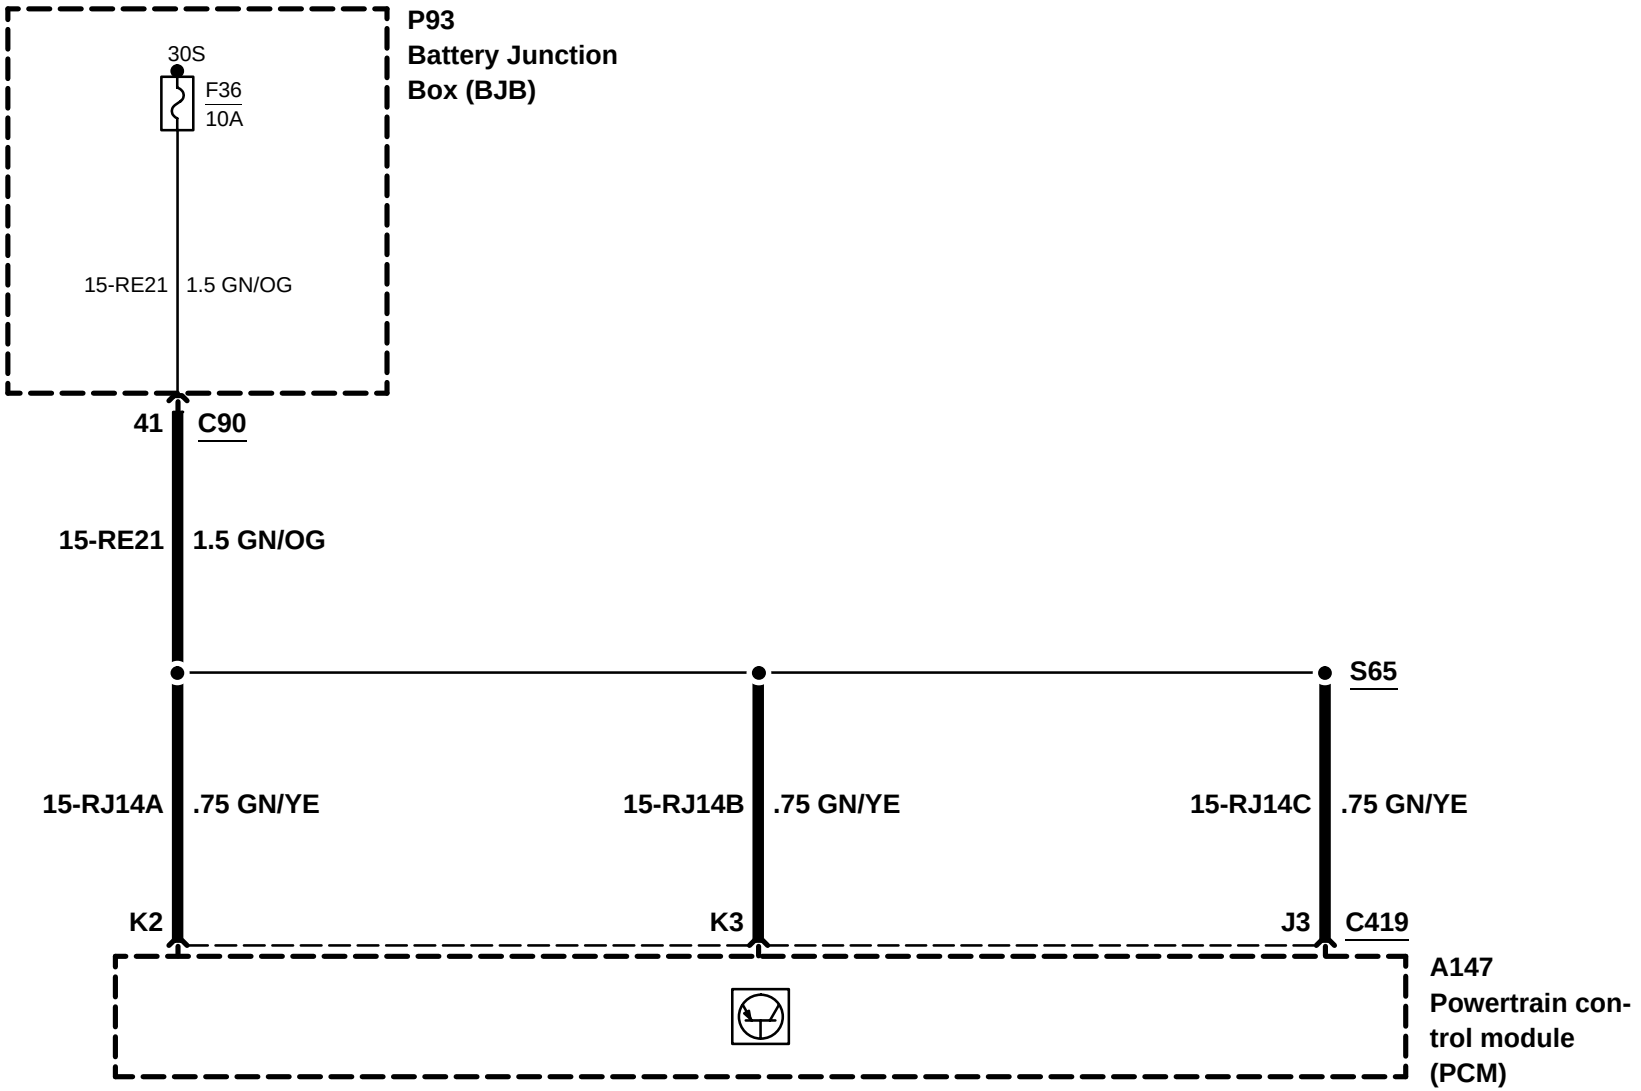


Fuse Details – F37, F38

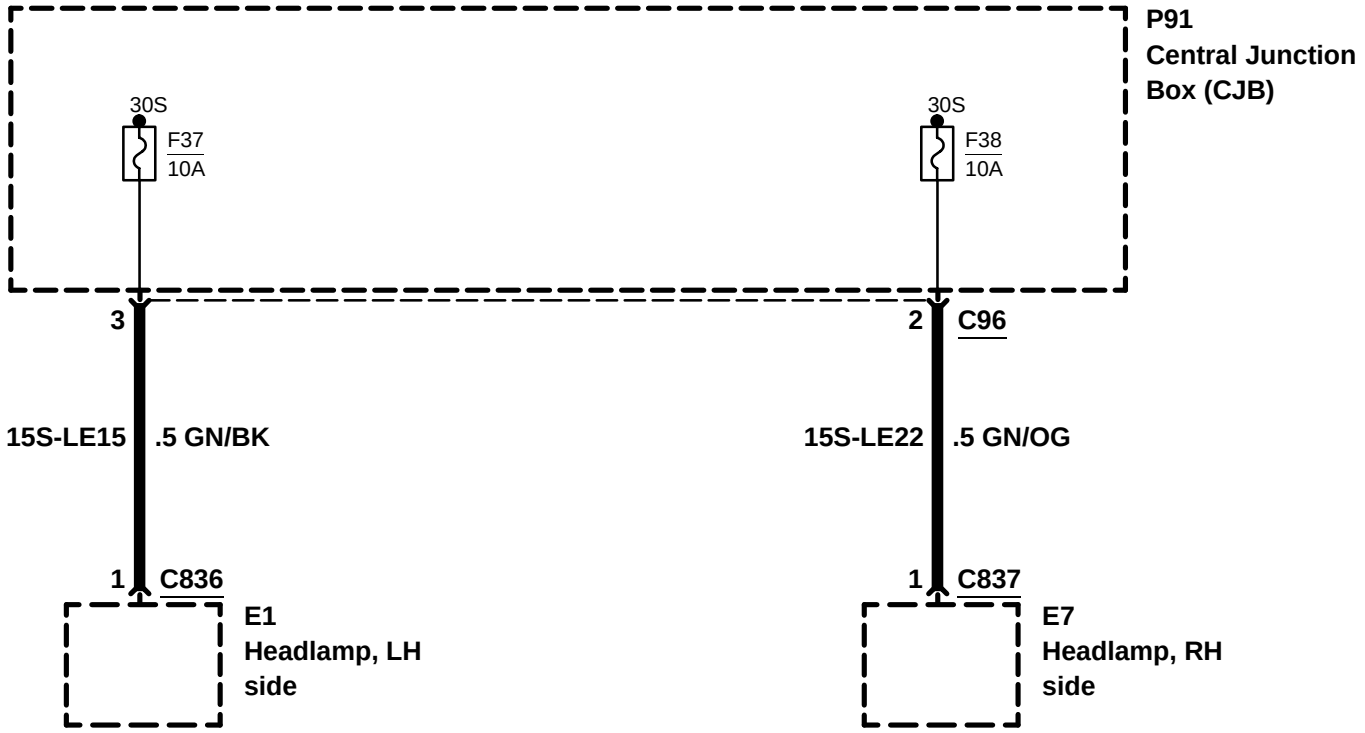


Fuse Details – F39

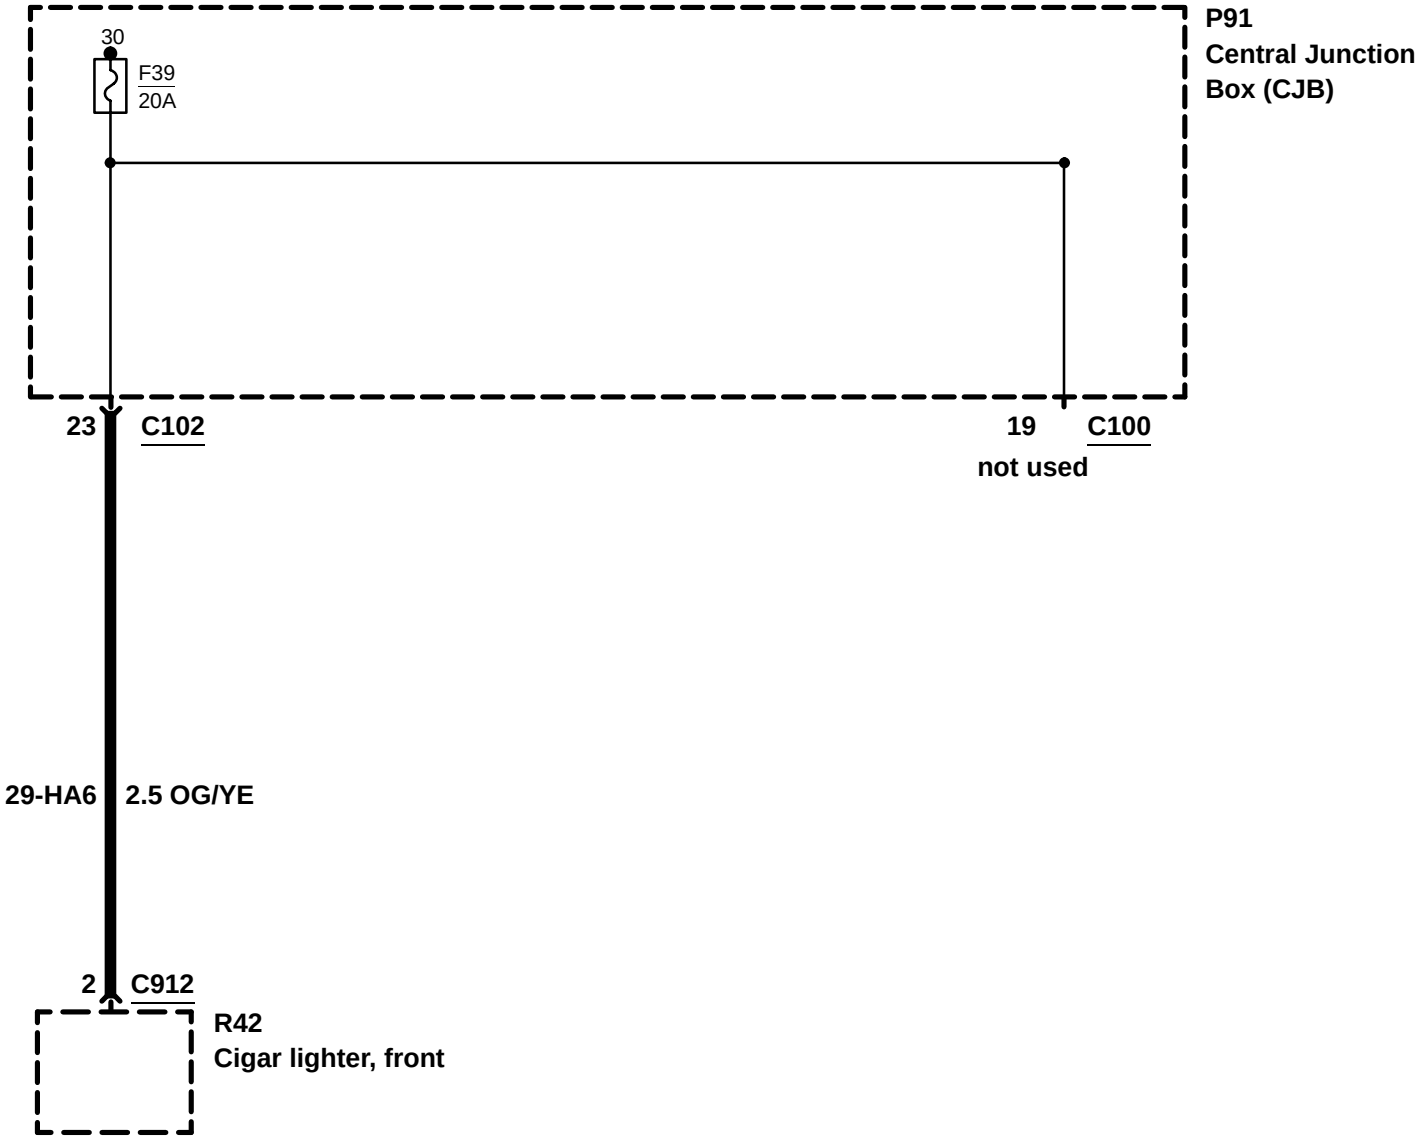


Fuse Details – F40, F41, F42

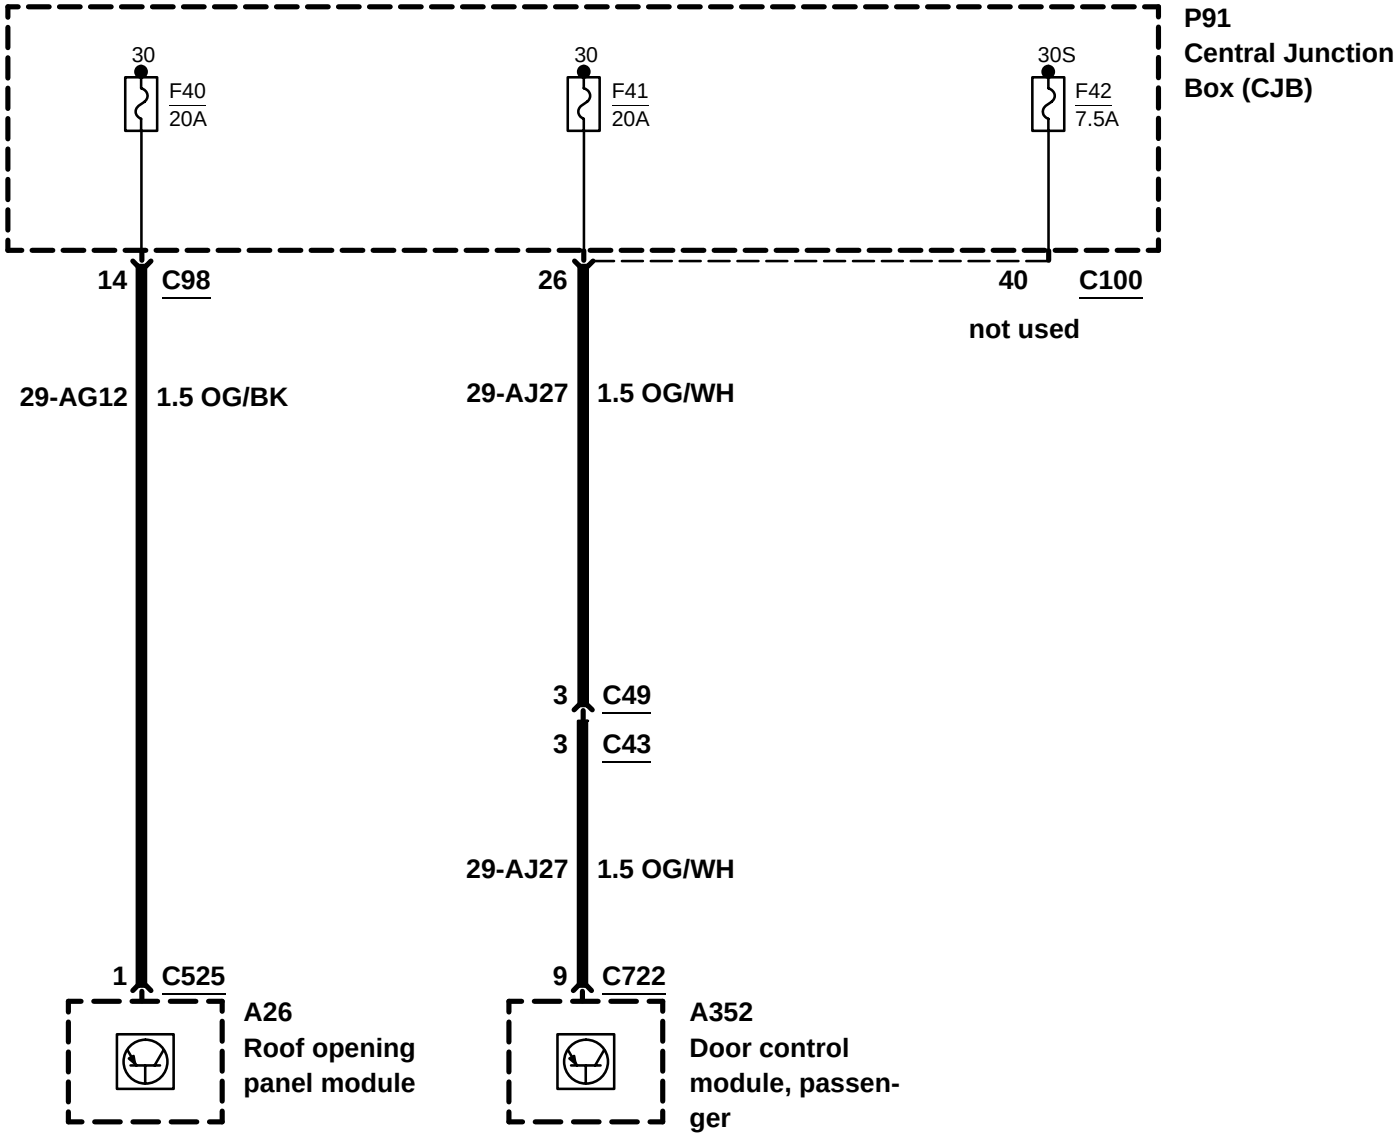


Fuse Details – F43

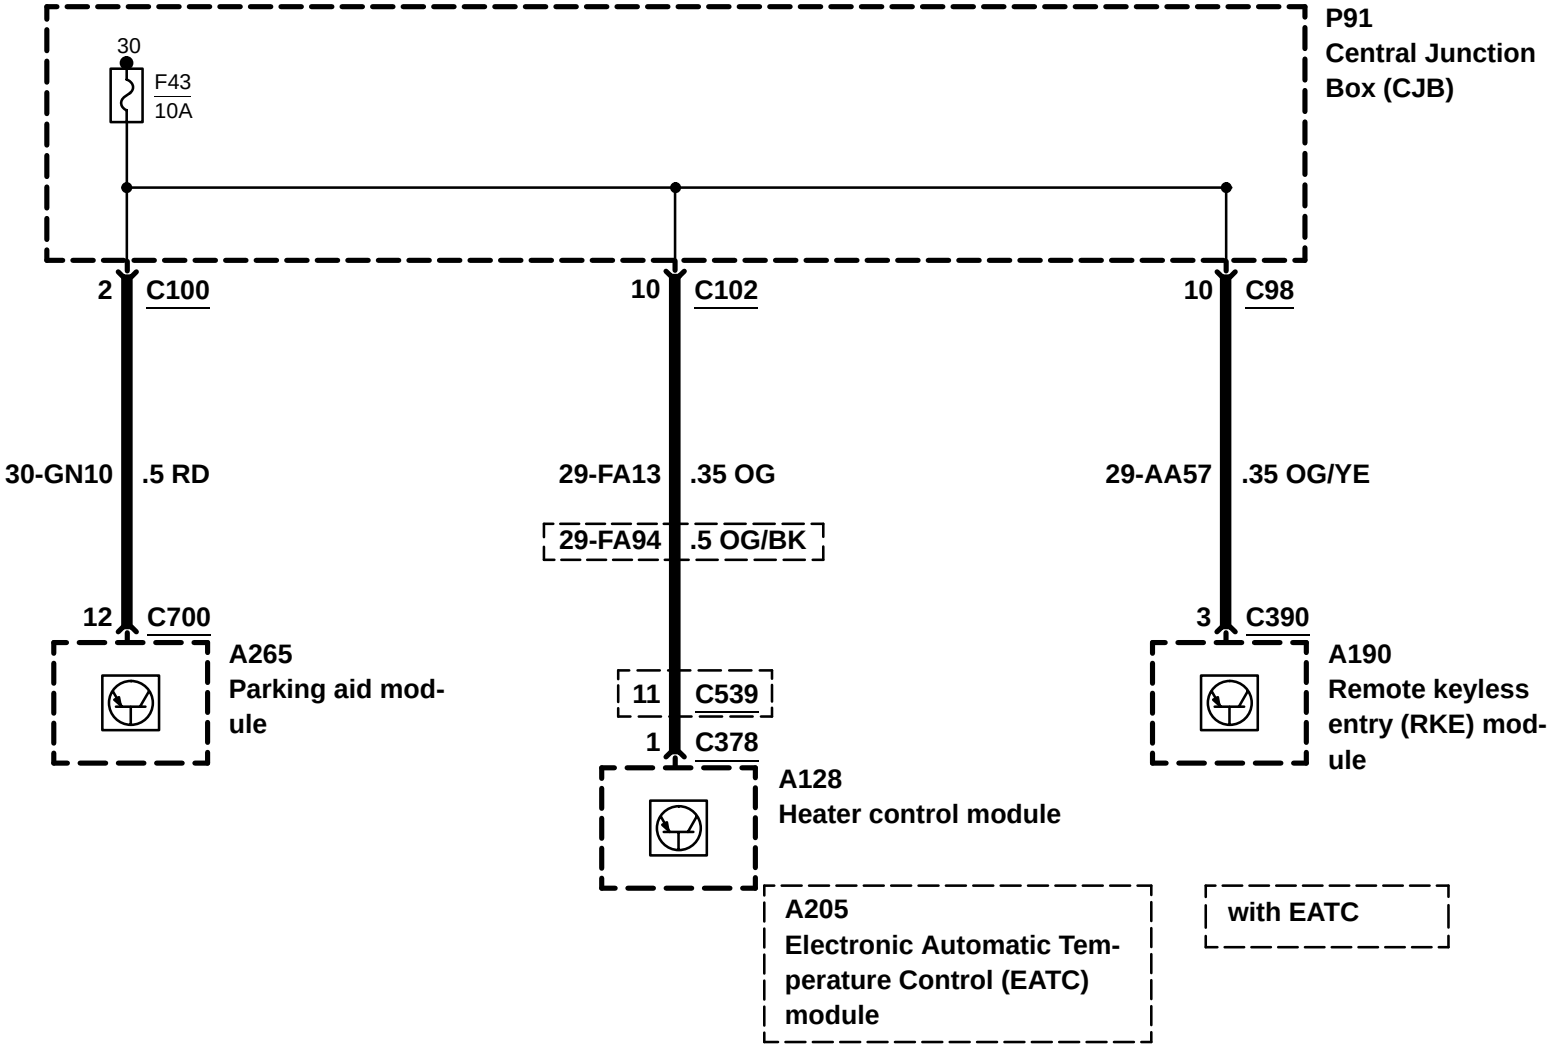


Fuse Details – F44, F46

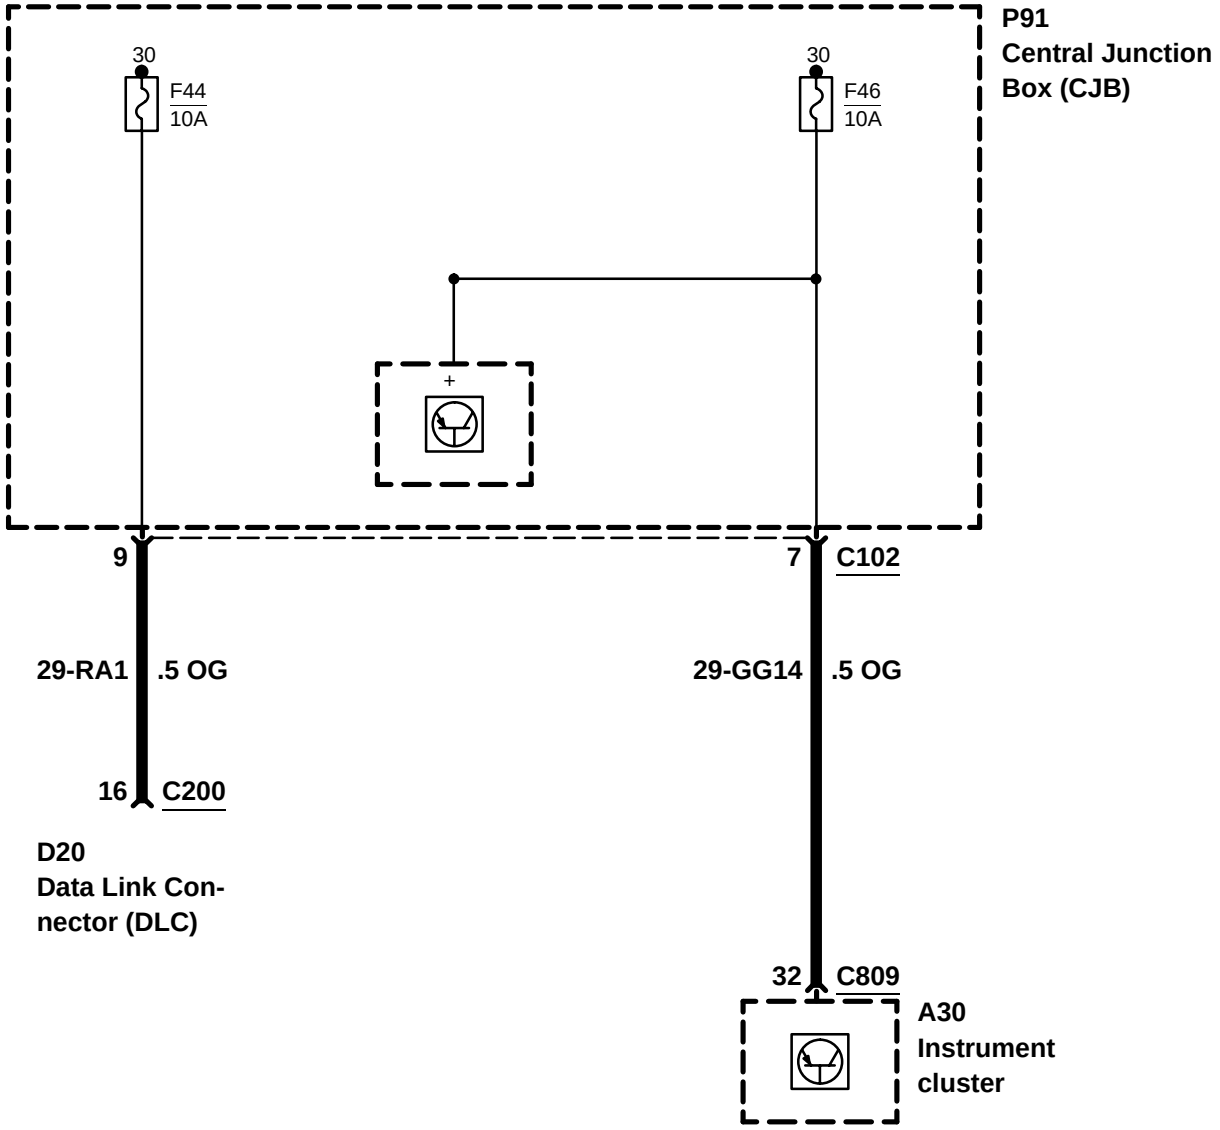


Fuse Details – F47, F48

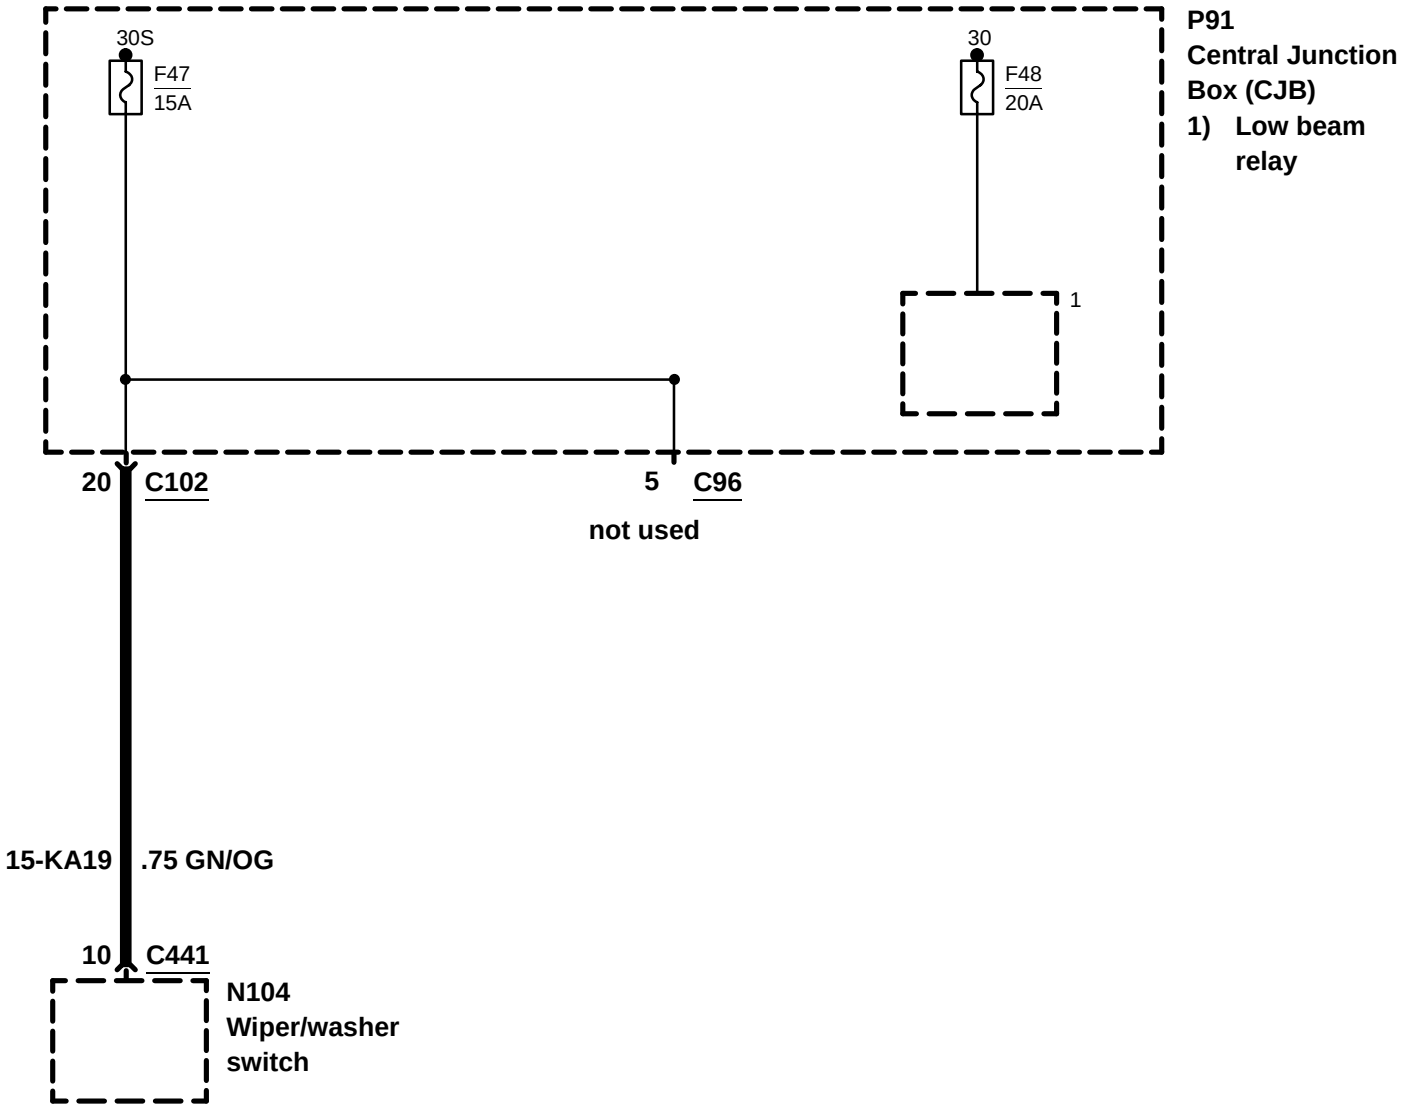


Fuse Details – F49, F50, F51

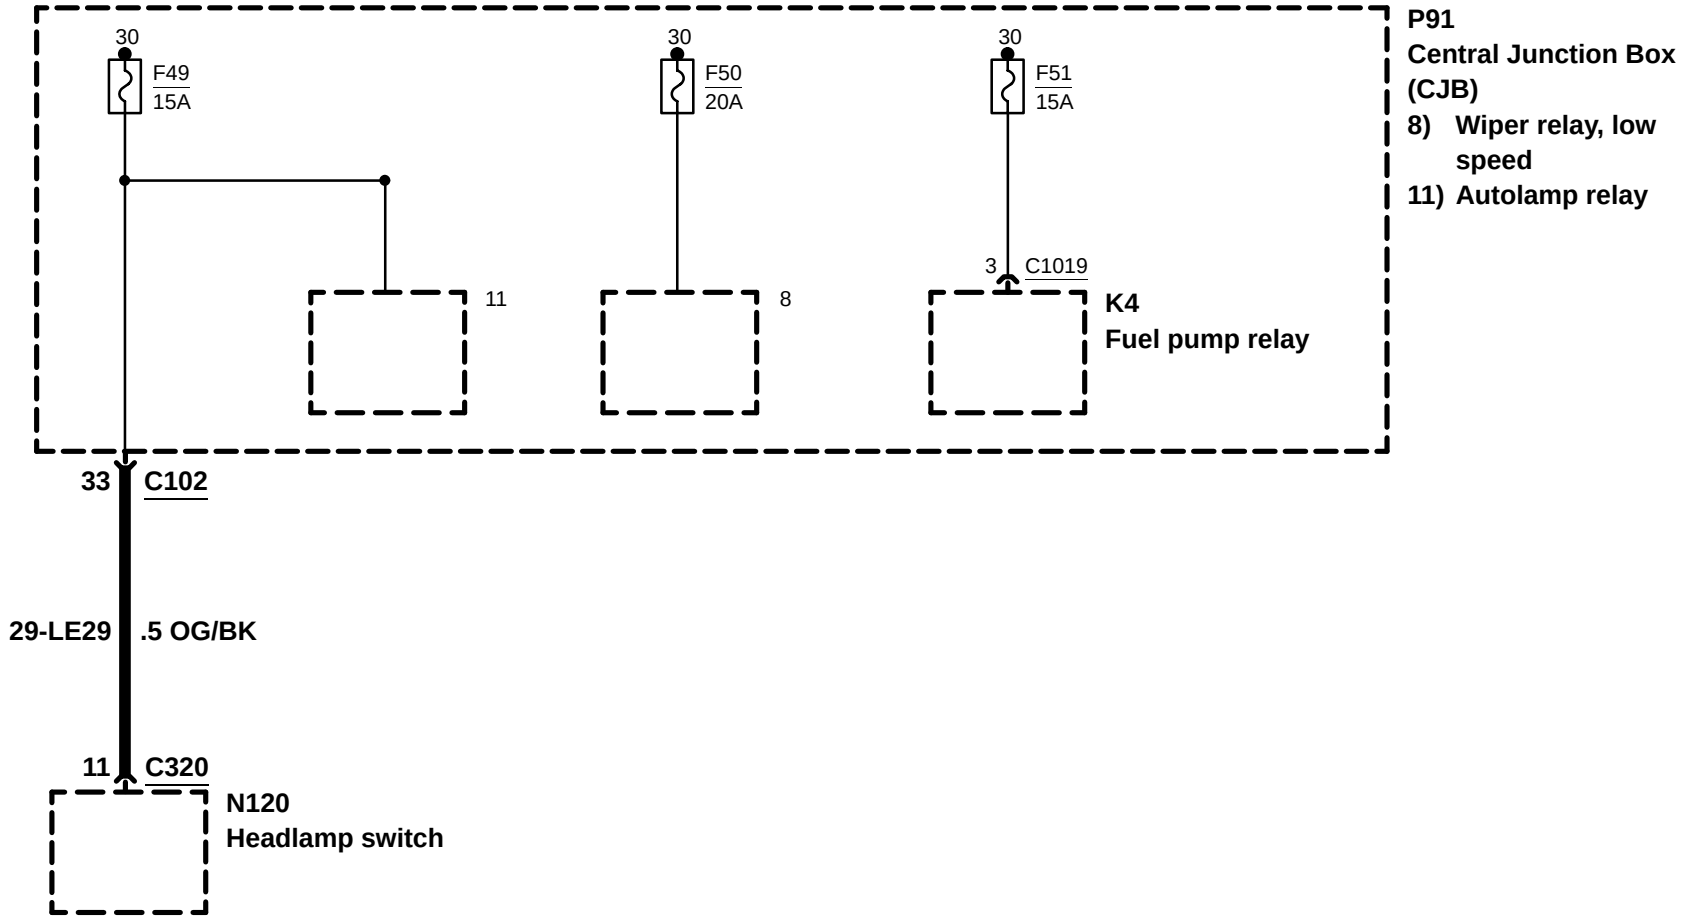

Fuse Details – F52

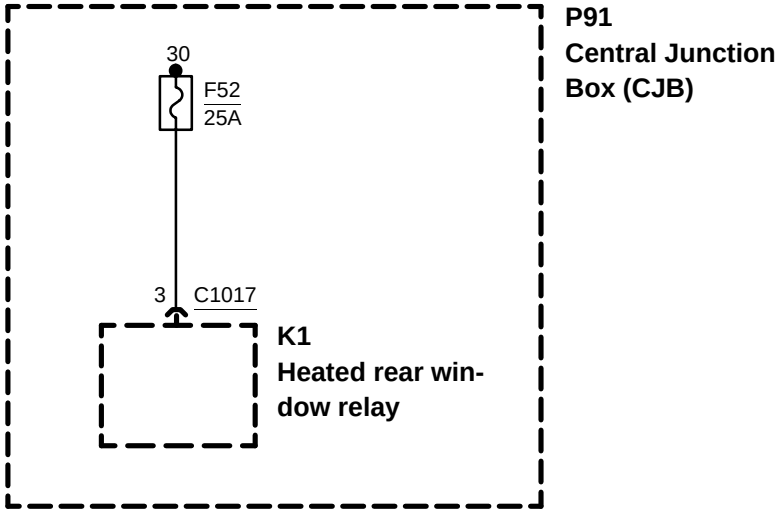


Fuse Details – F53

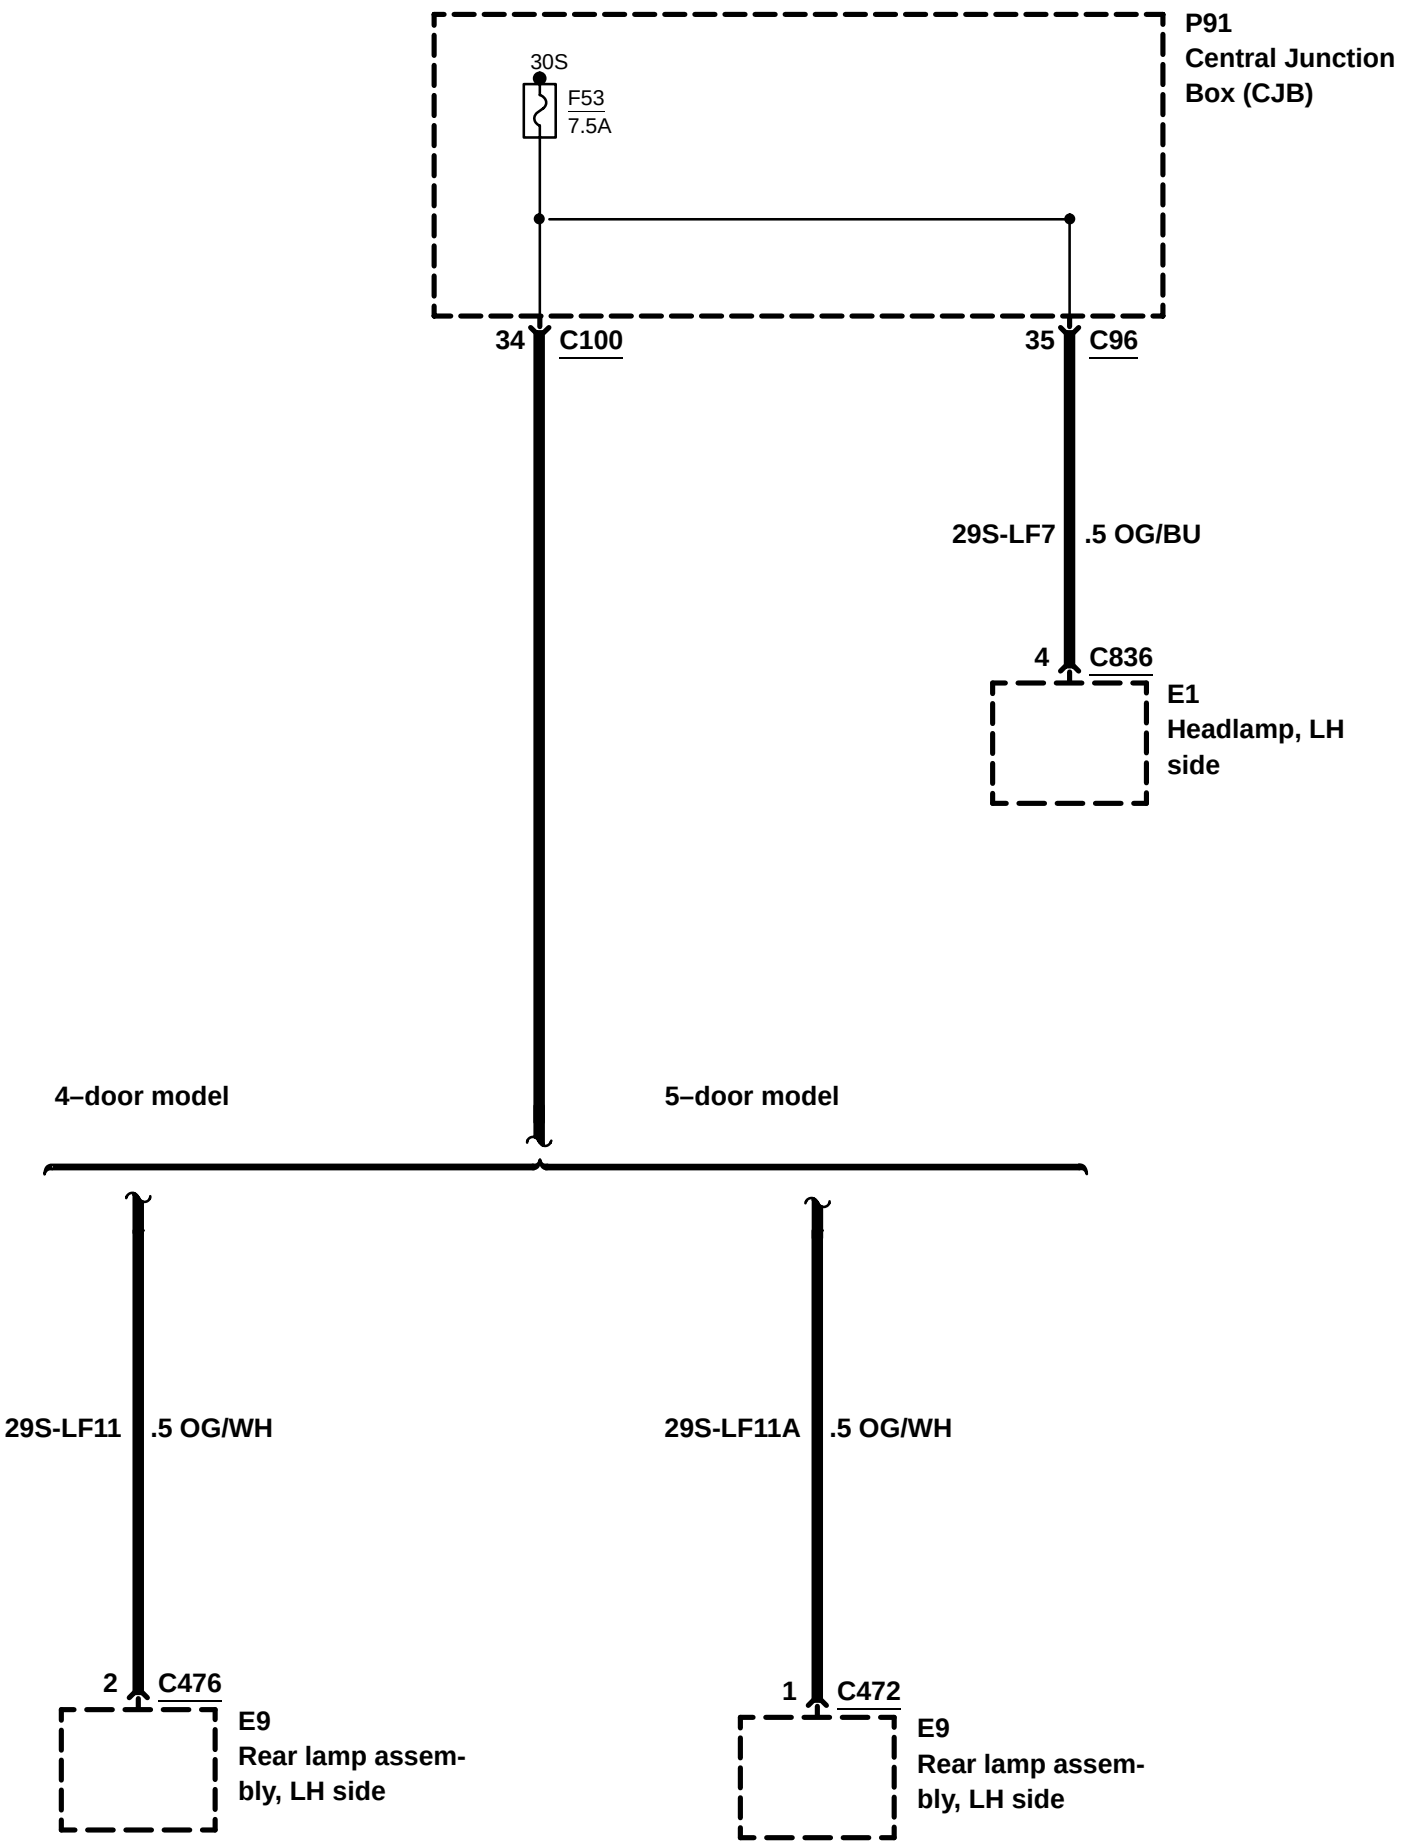


Fuse Details – F54


Fuse Details – F55, F57

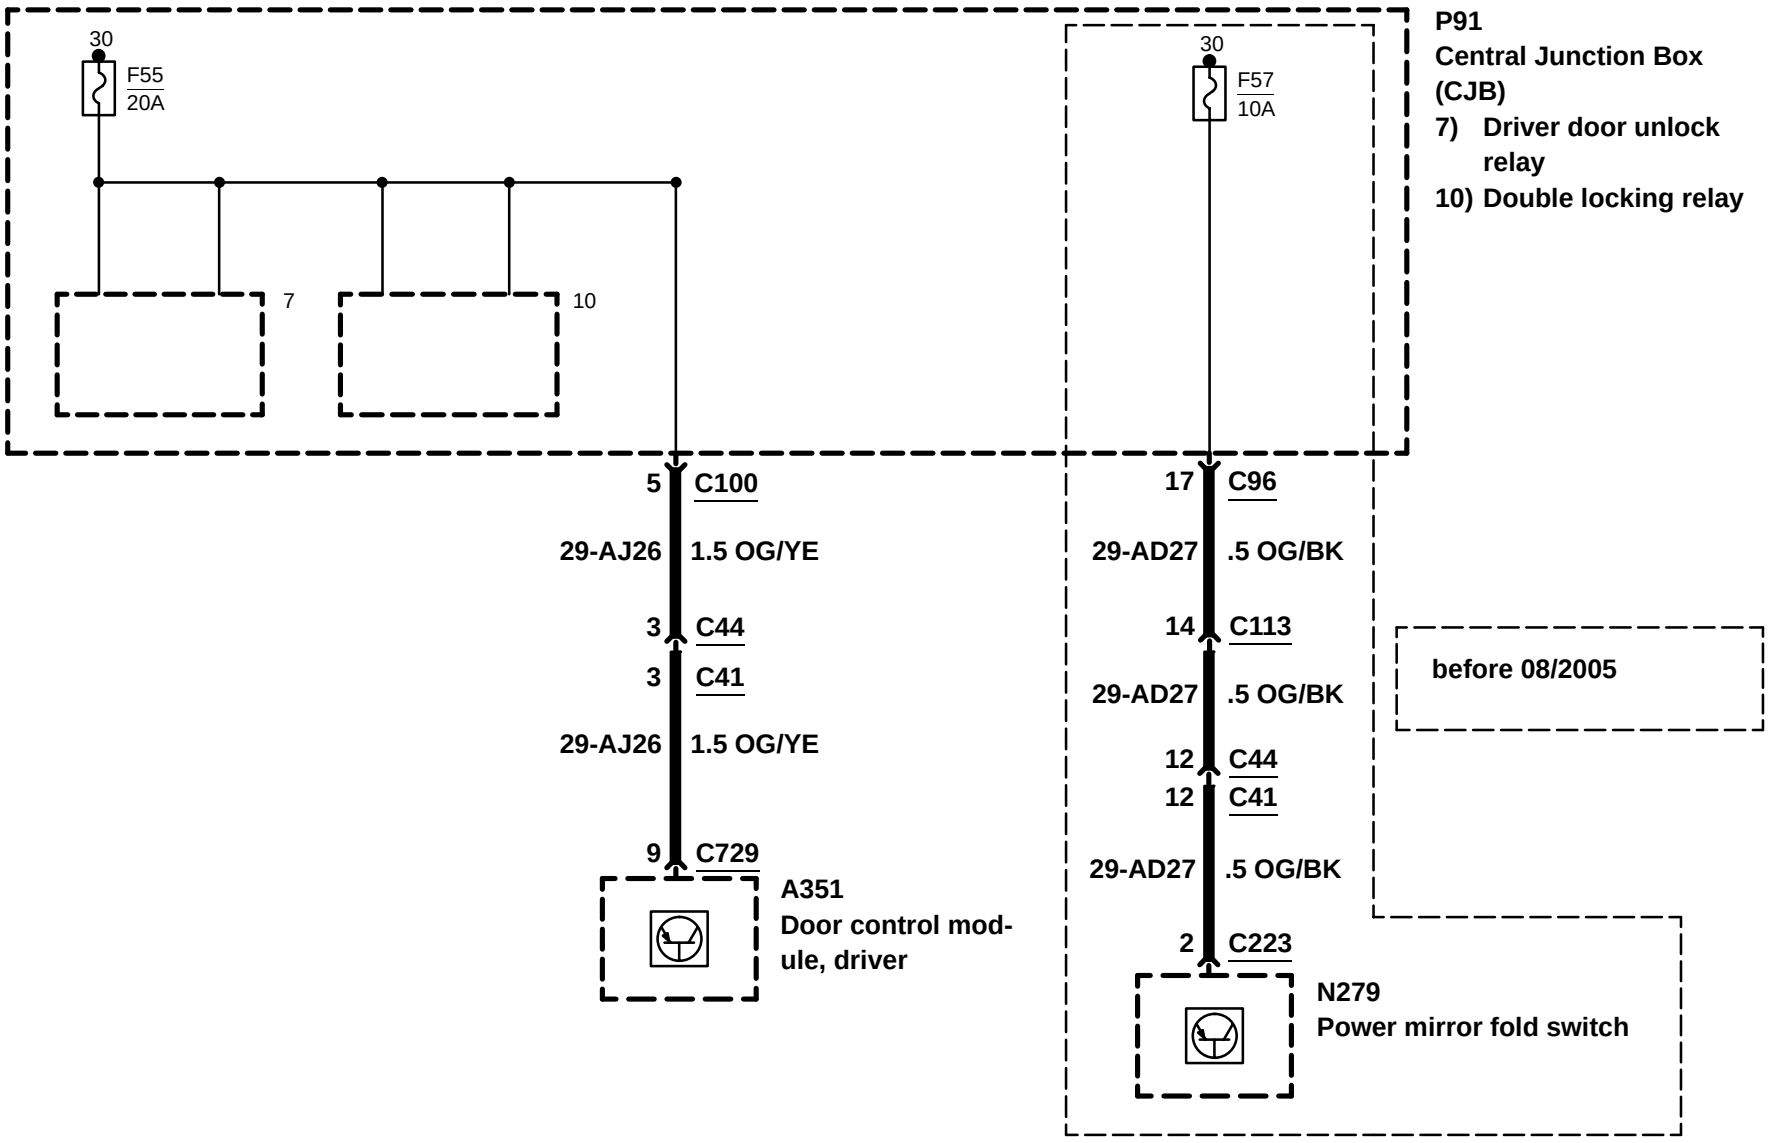


Fuse Details – F58, F59

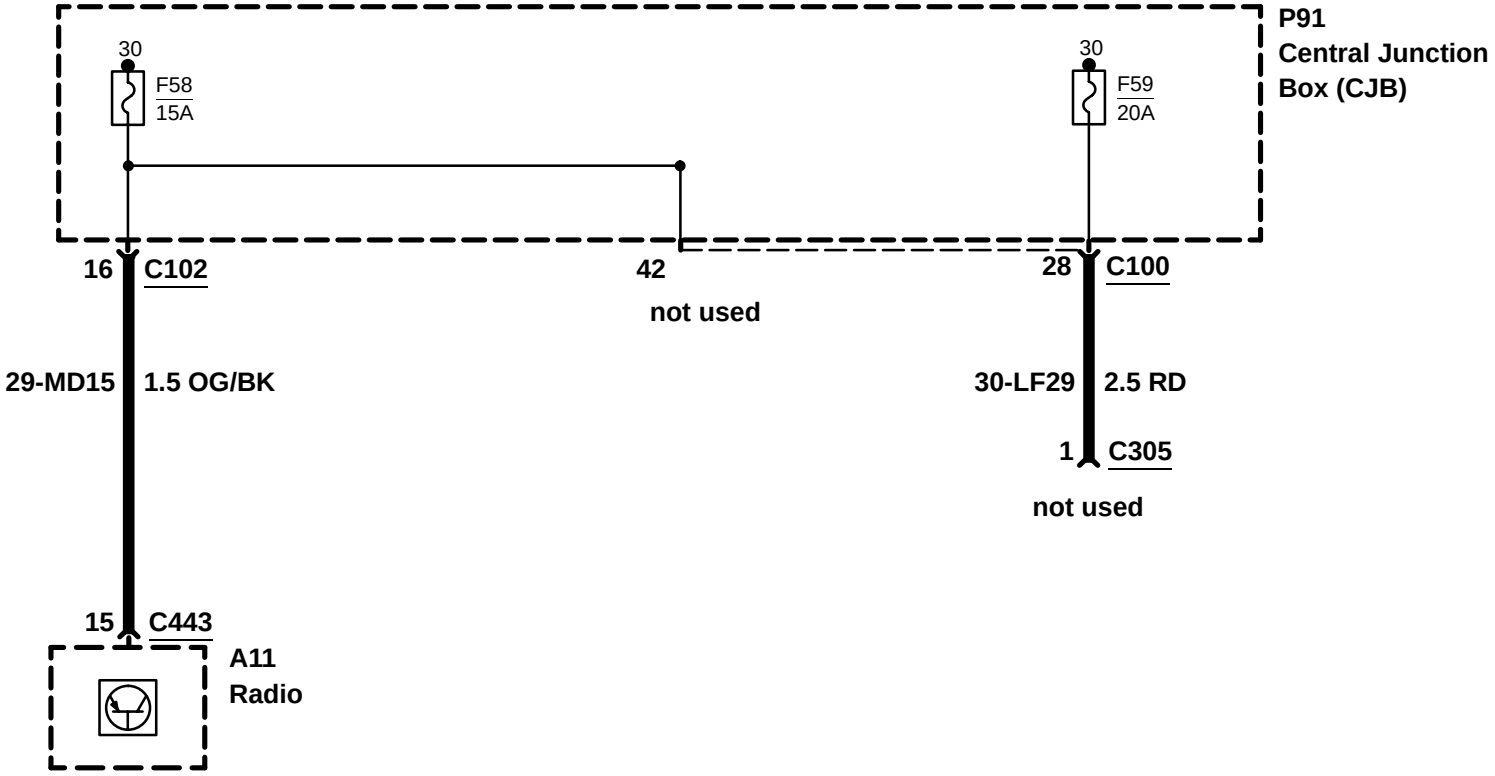


Fuse Details – F60, F61, F62

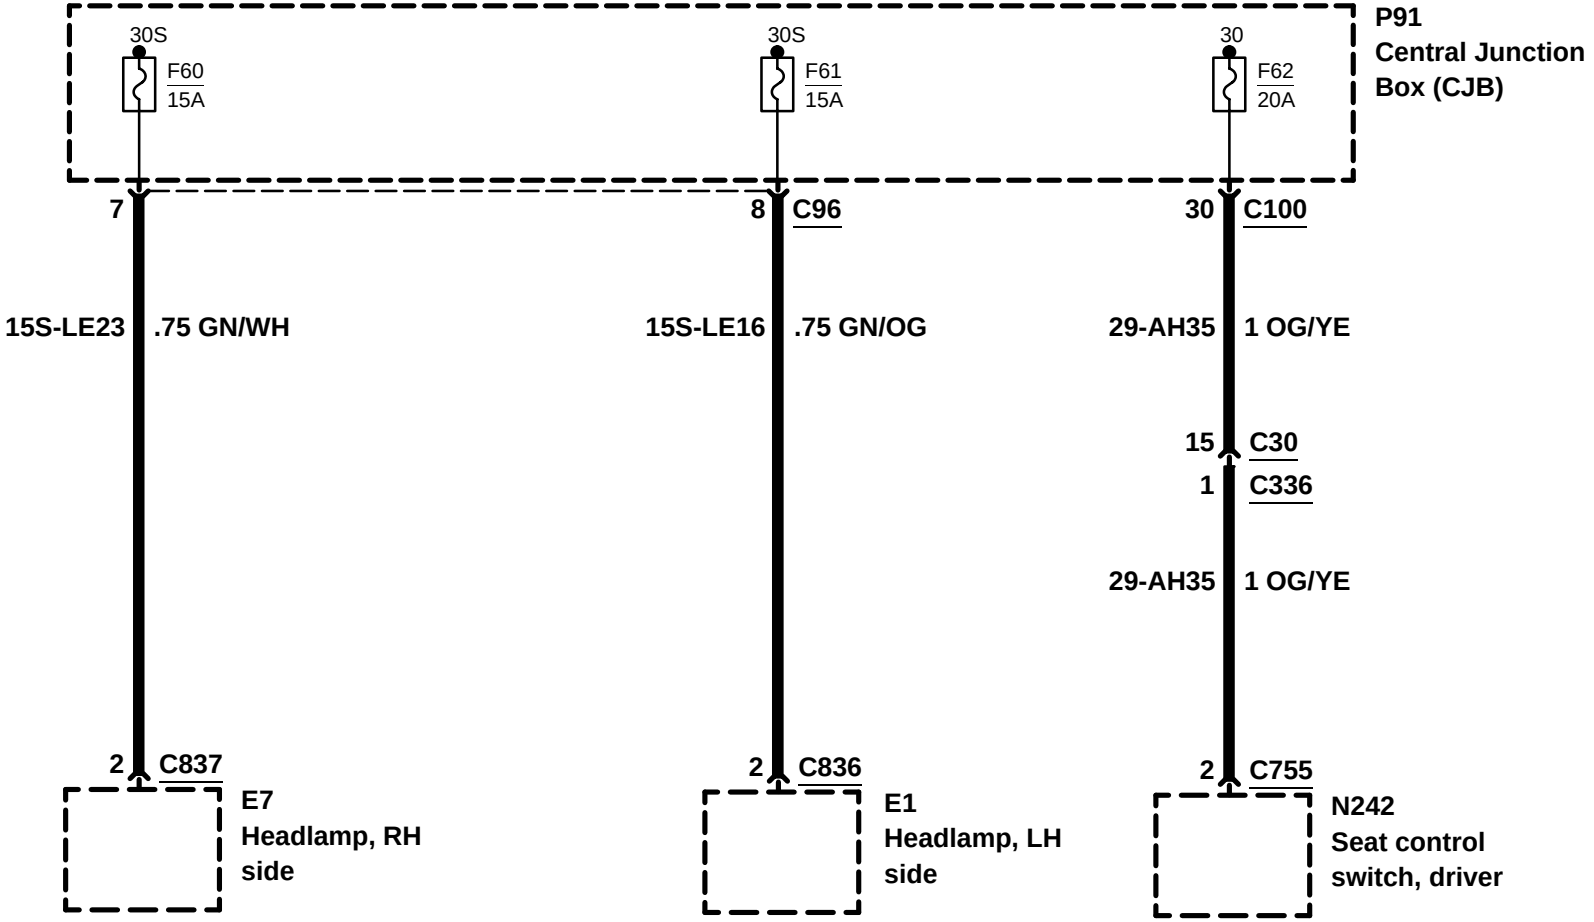


Fuse Details – F63, F65

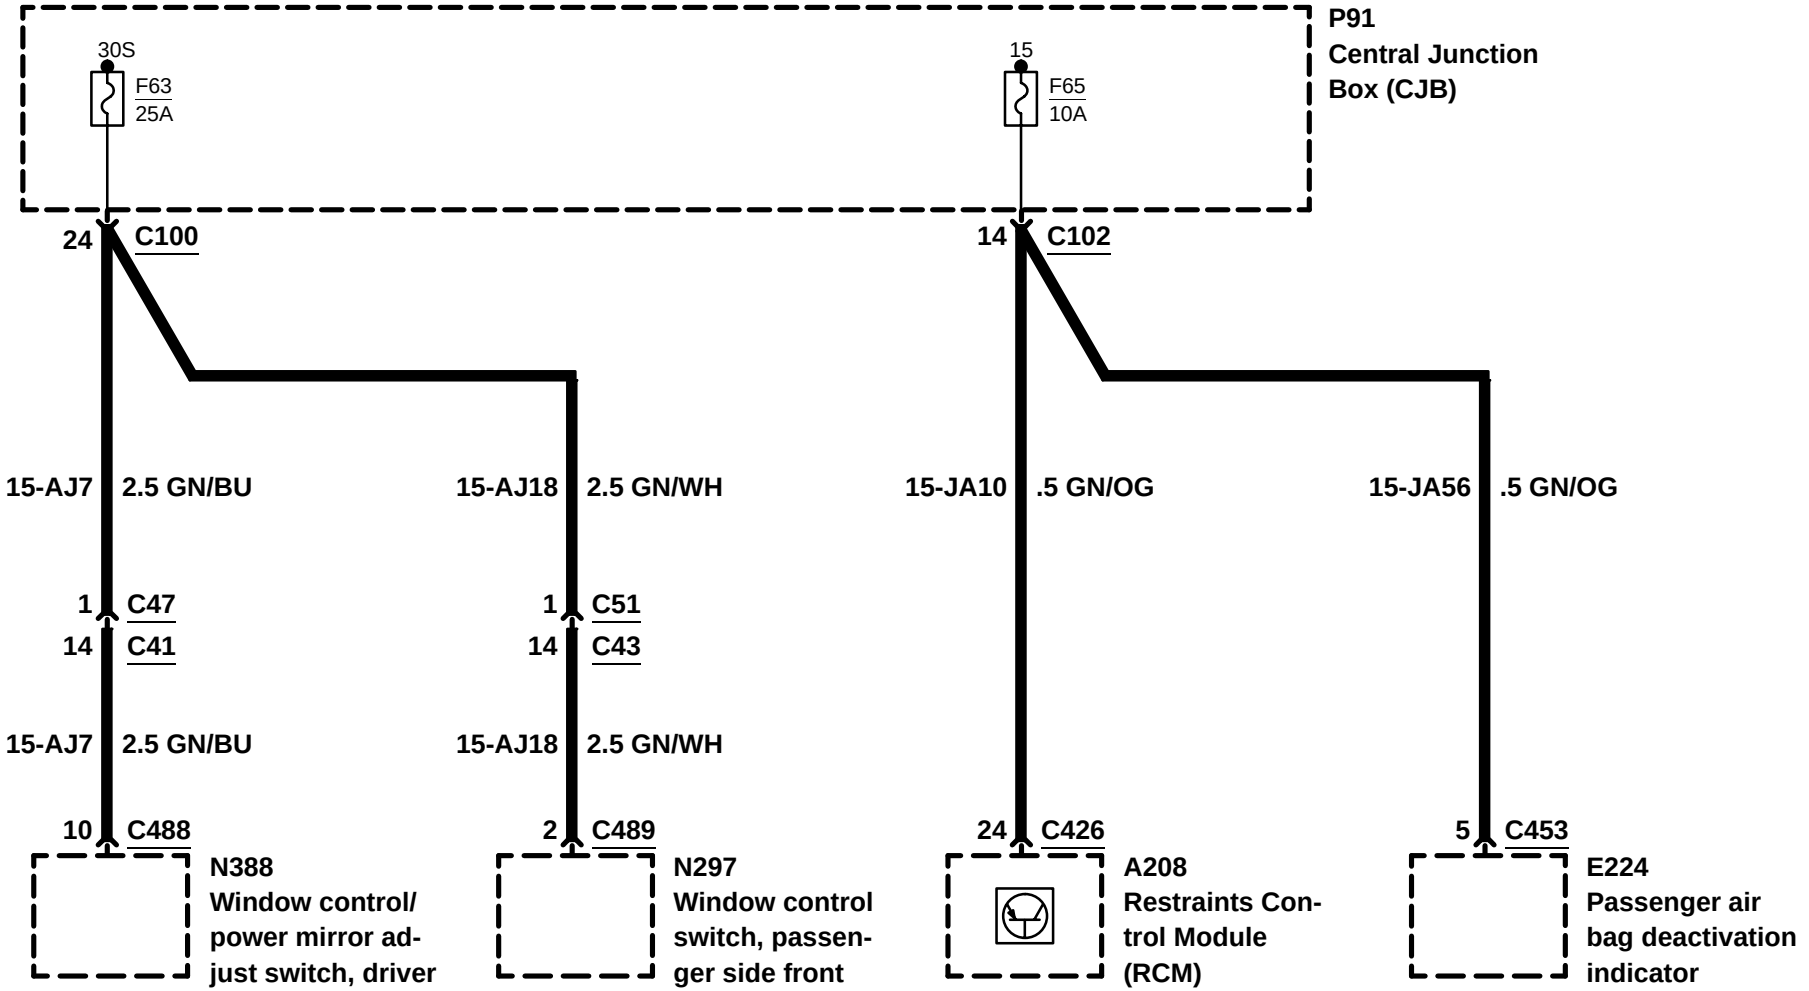


Fuse Details – F66, F67

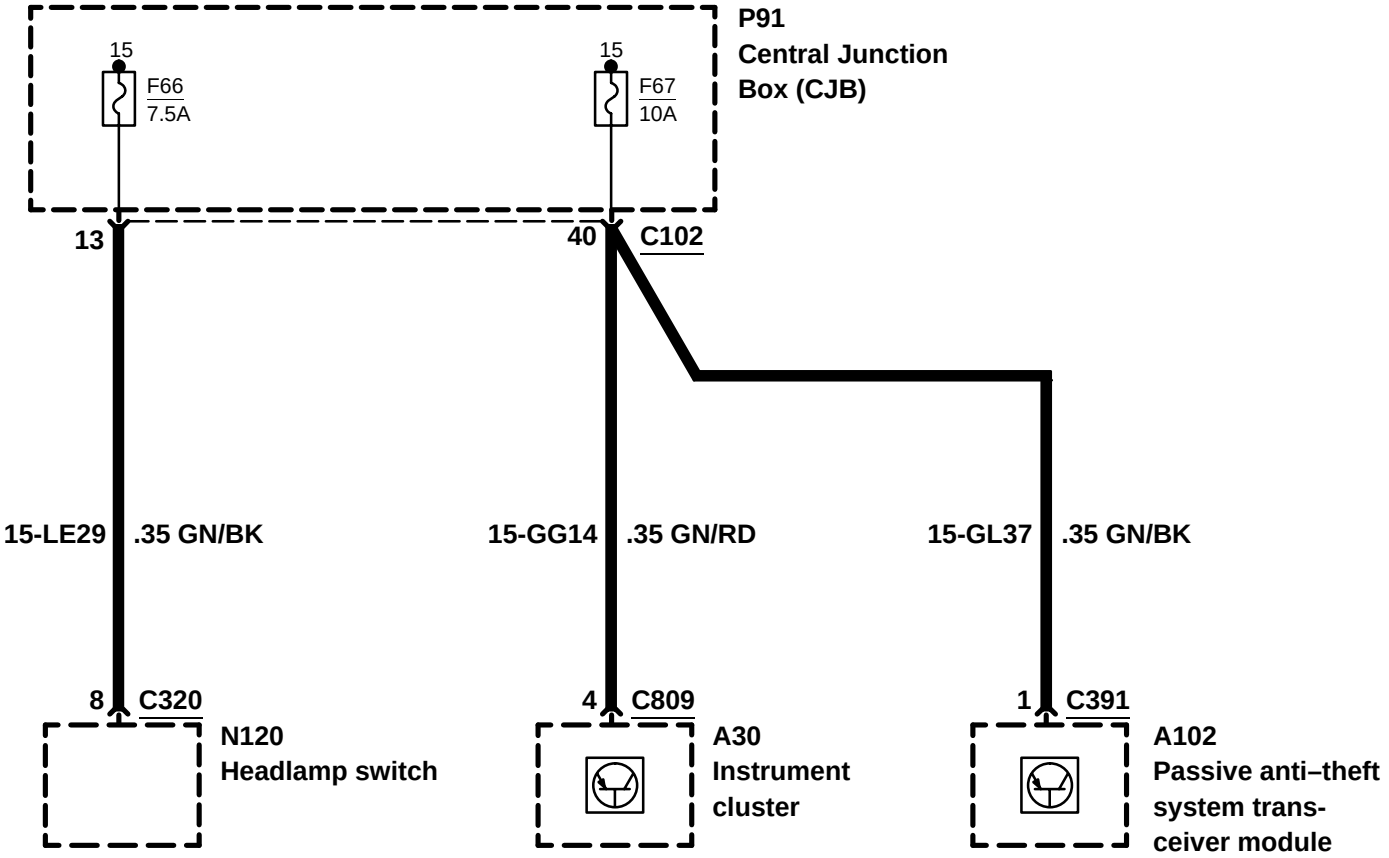


Fuse Details – F68

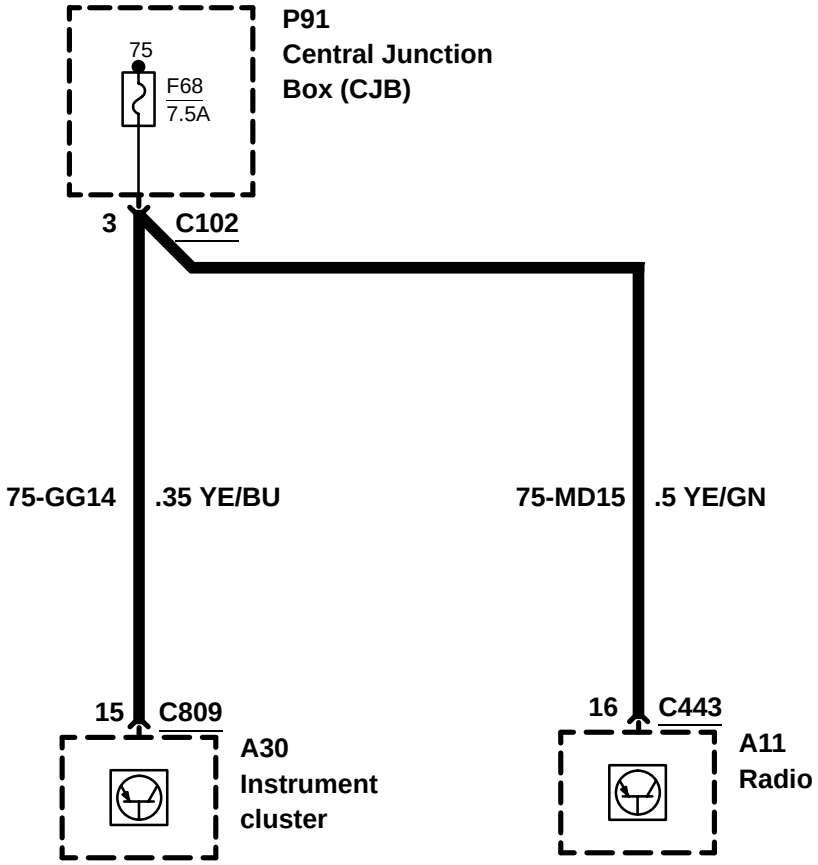


Fuse Details – F69

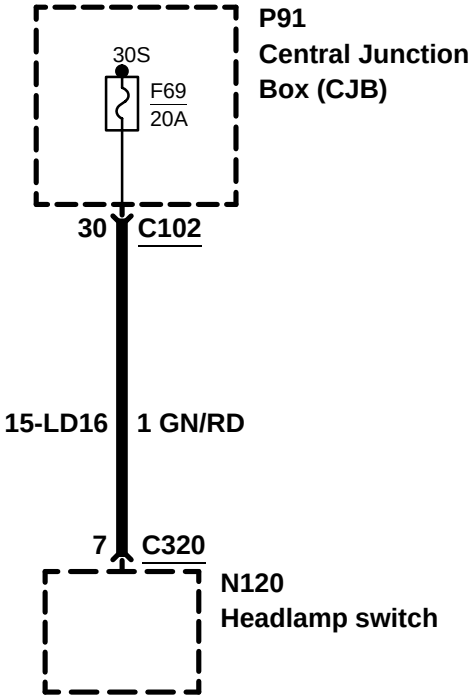


Fuse Details – F70

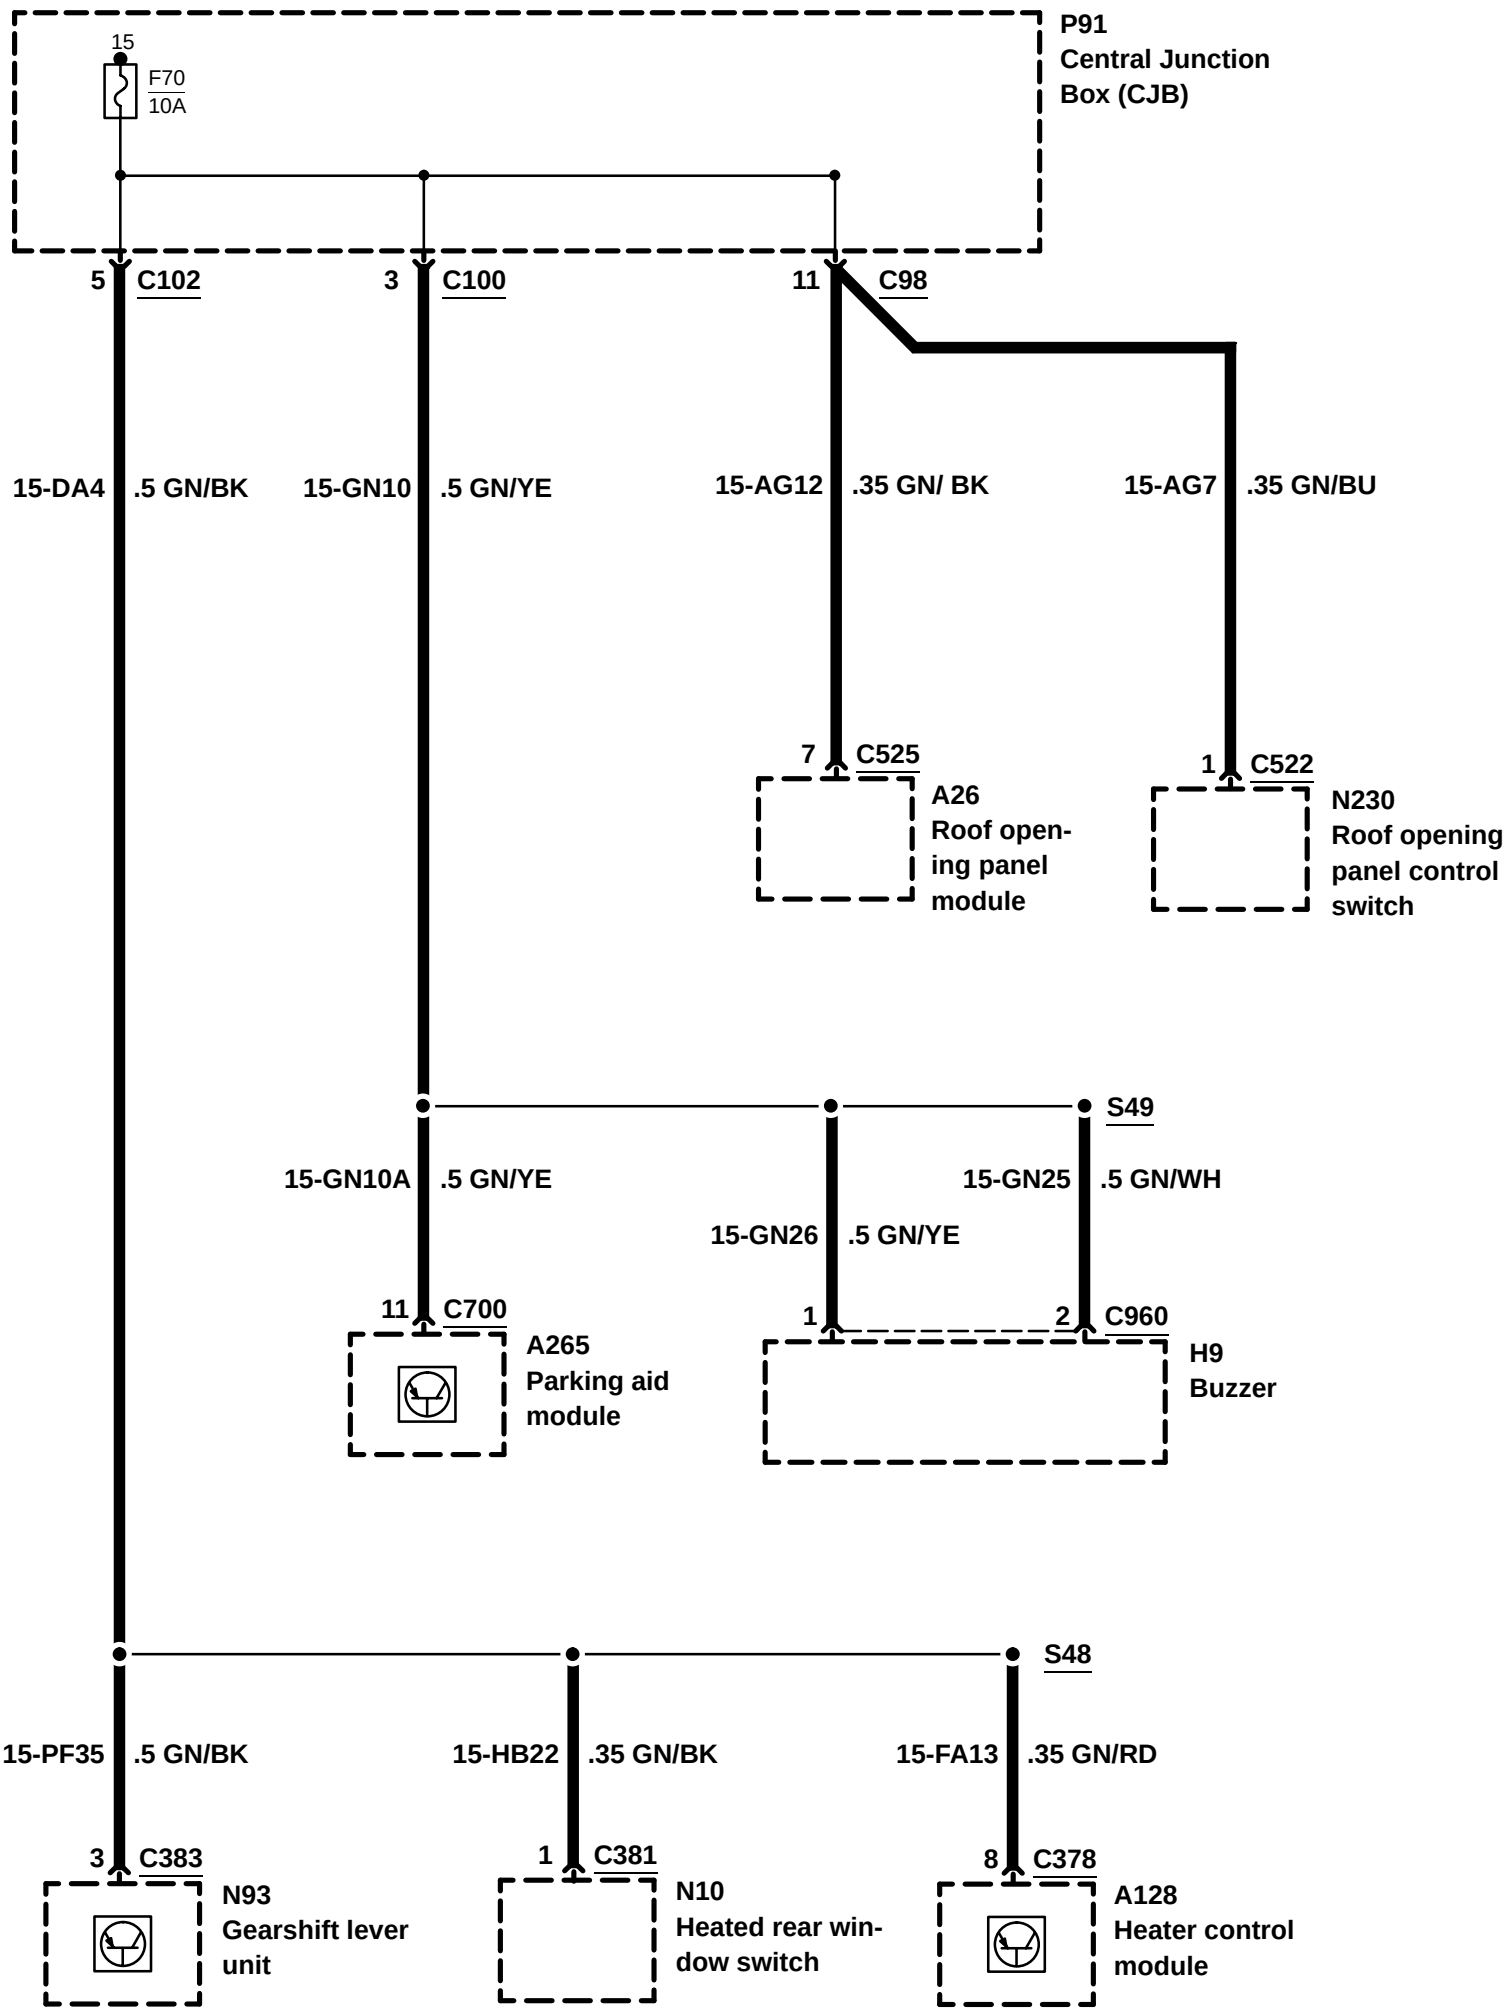


Fuse Details – F71, F72, F73

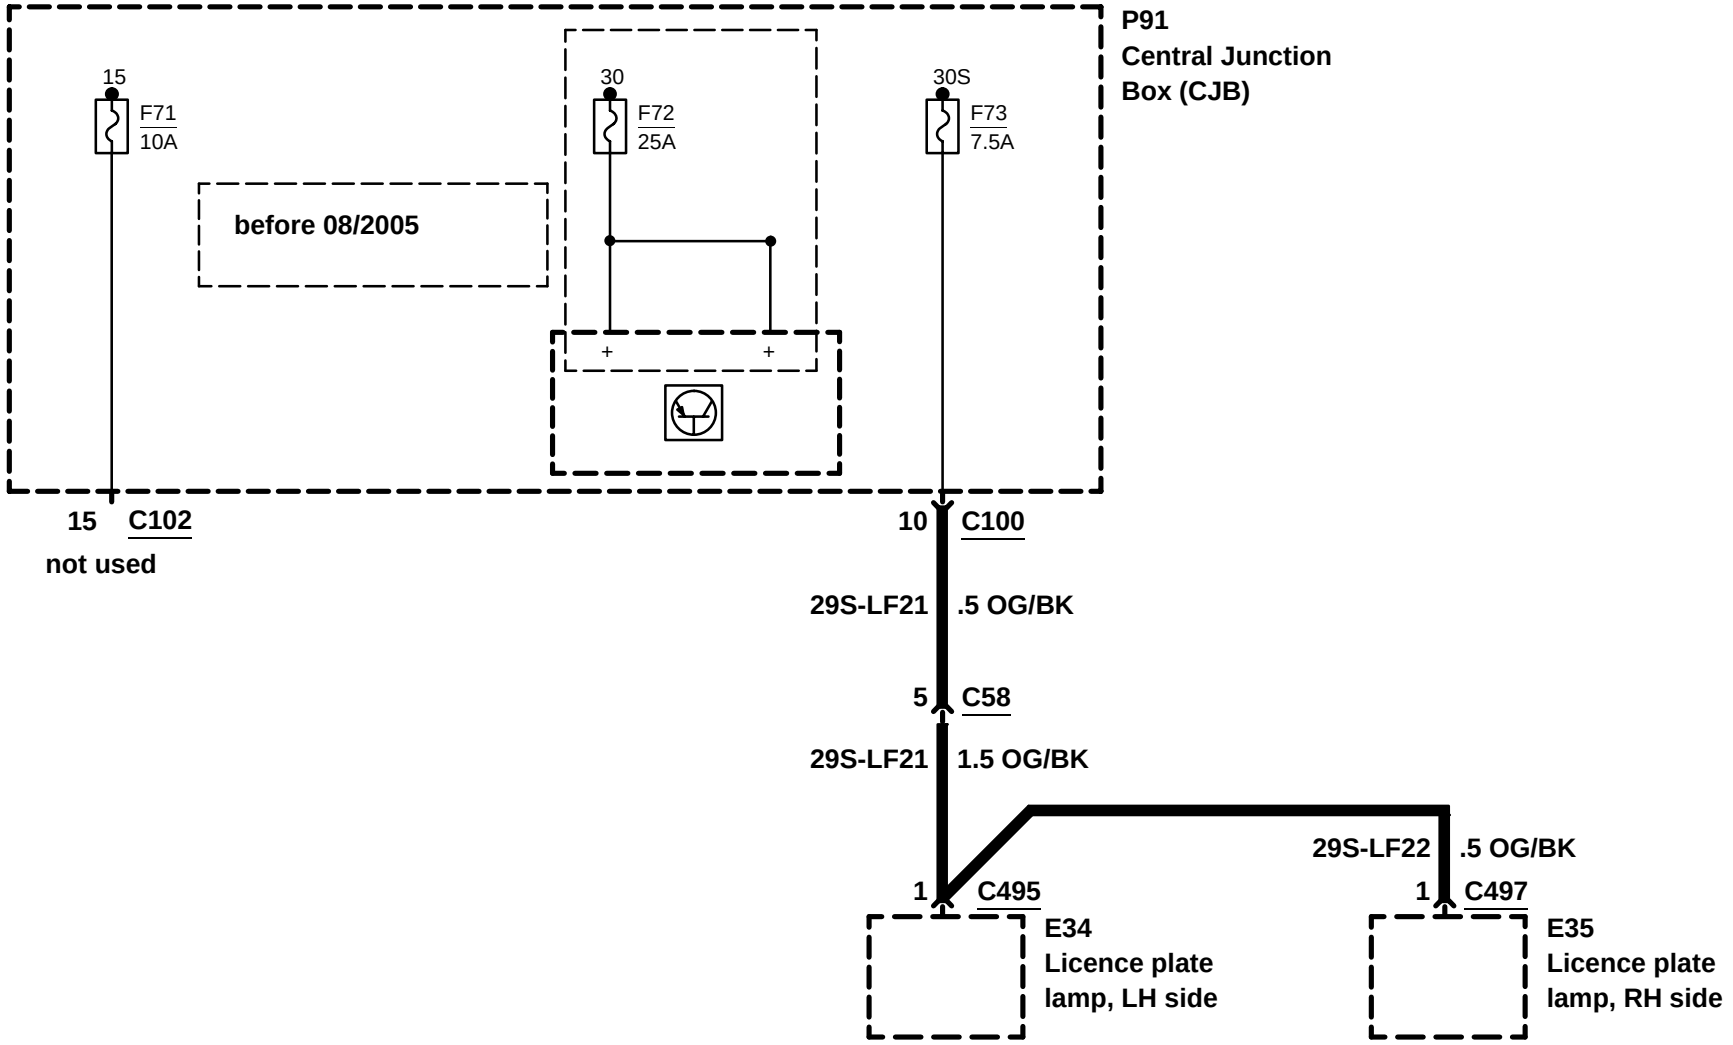


Fuse Details – F74

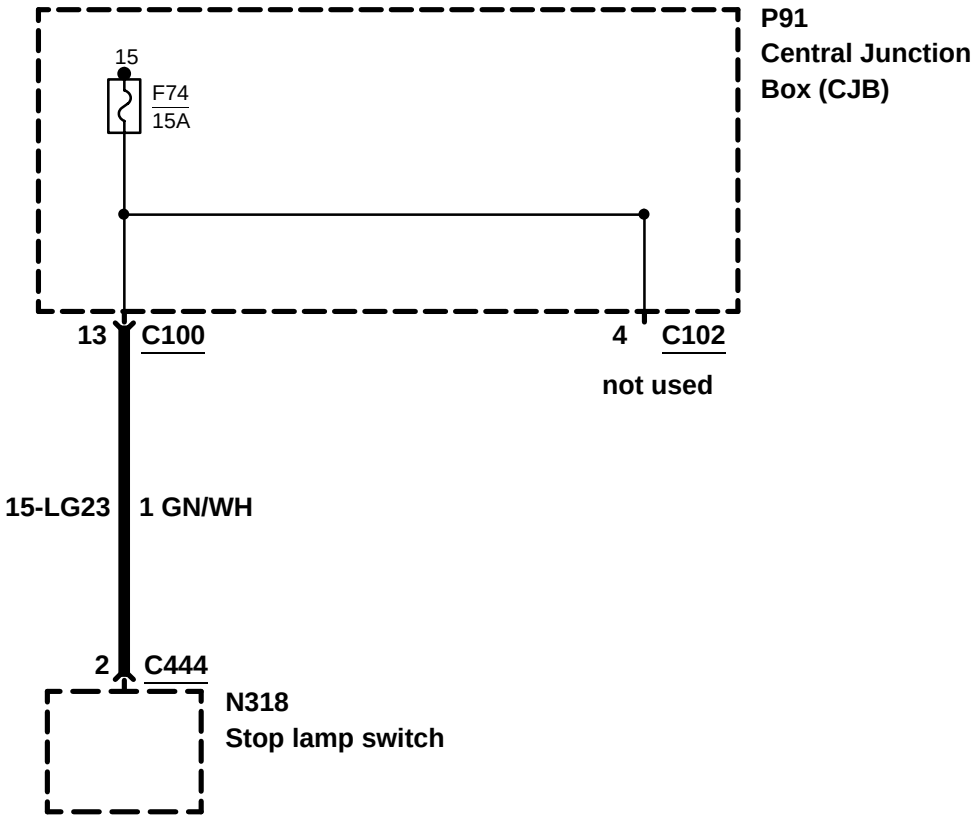


Fuse Details – F75, 1.6L (Z6)

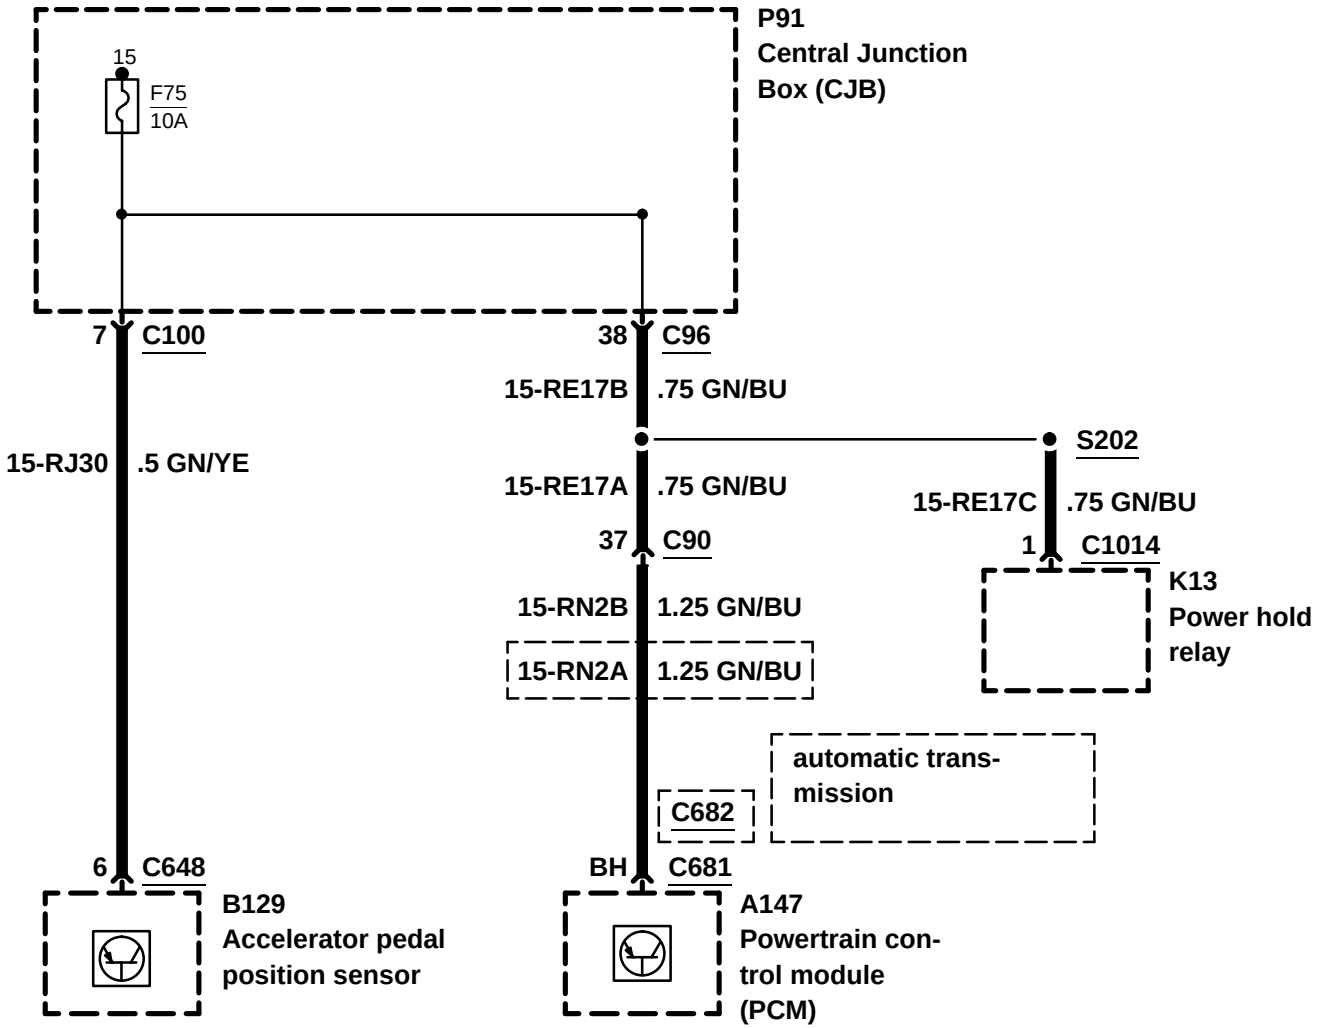


Fuse Details – F75, 1.8/2.0L Duratec–HE (MI4)

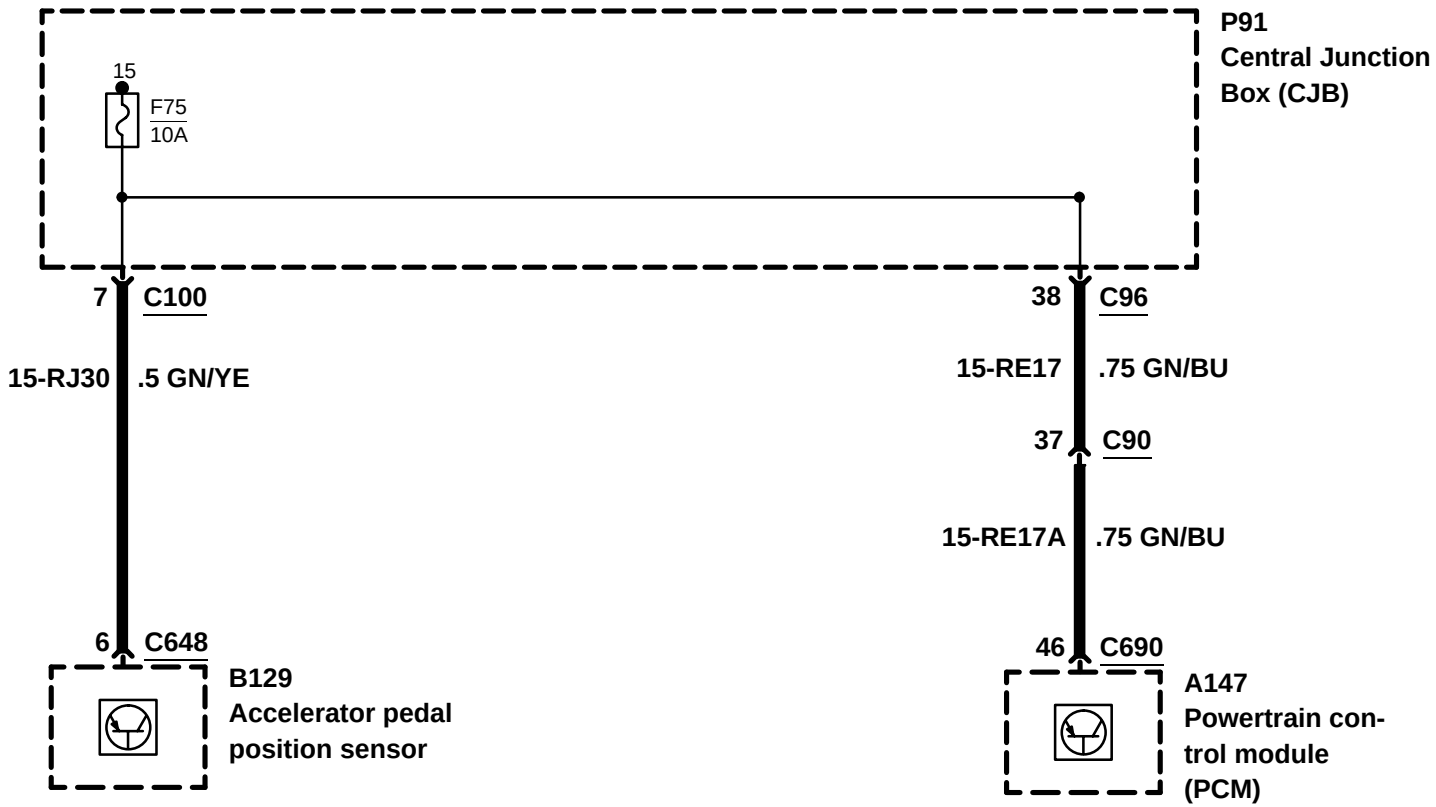

Fuse Details – F75, 2.0L Duratorq–TDCi (DW) Diesel

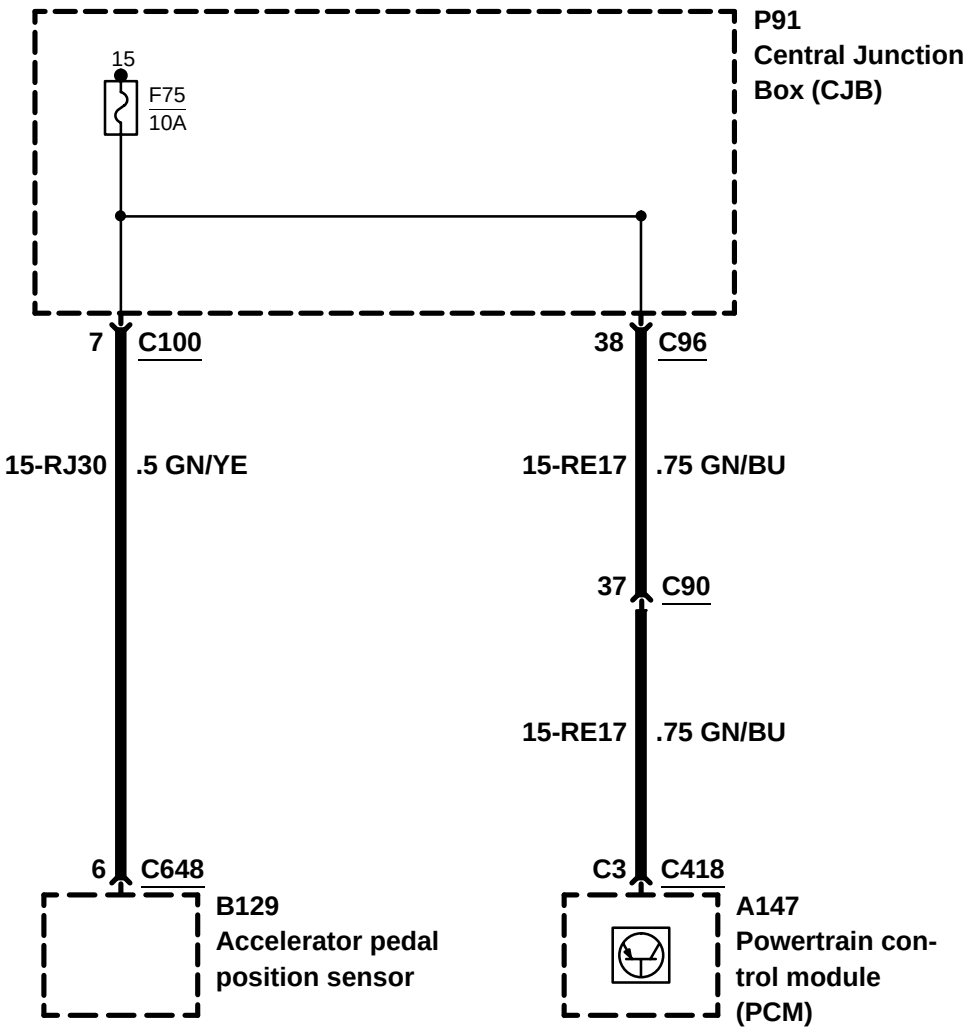


Fuse Details – F76, F77

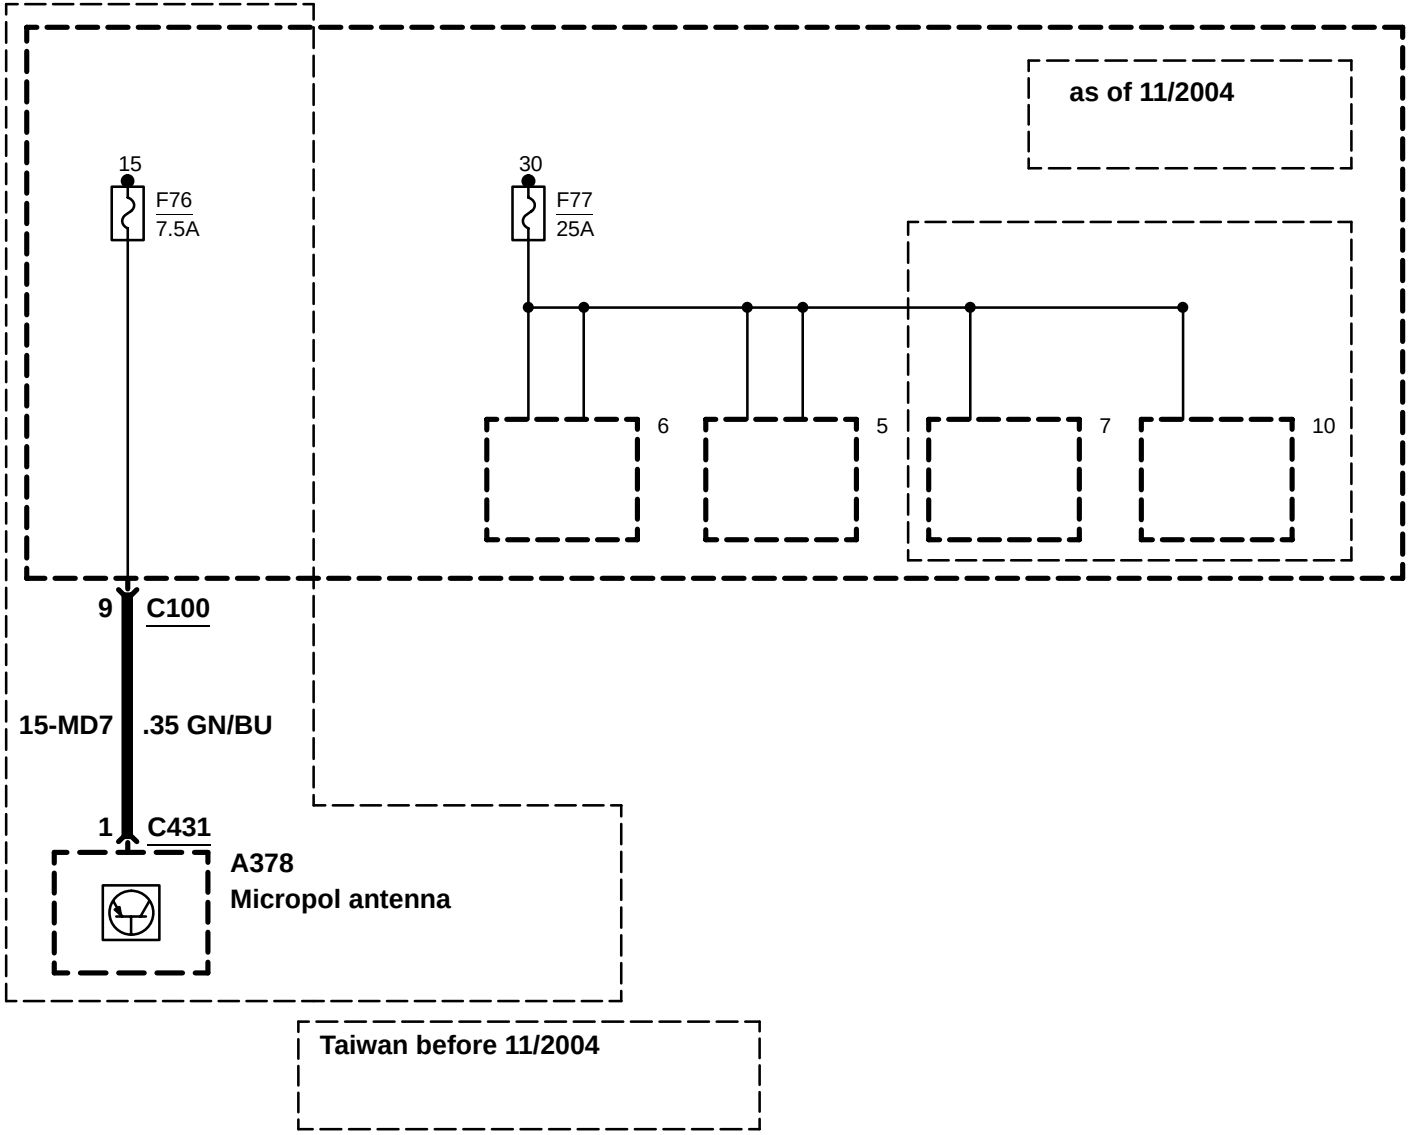


P91
Central Junction Box (CJB)
5) Door unlock relay
6) Door lock relay
7) Driver door unlock relay
10) Double locking relay

Fuse Details – F78, 5–door model

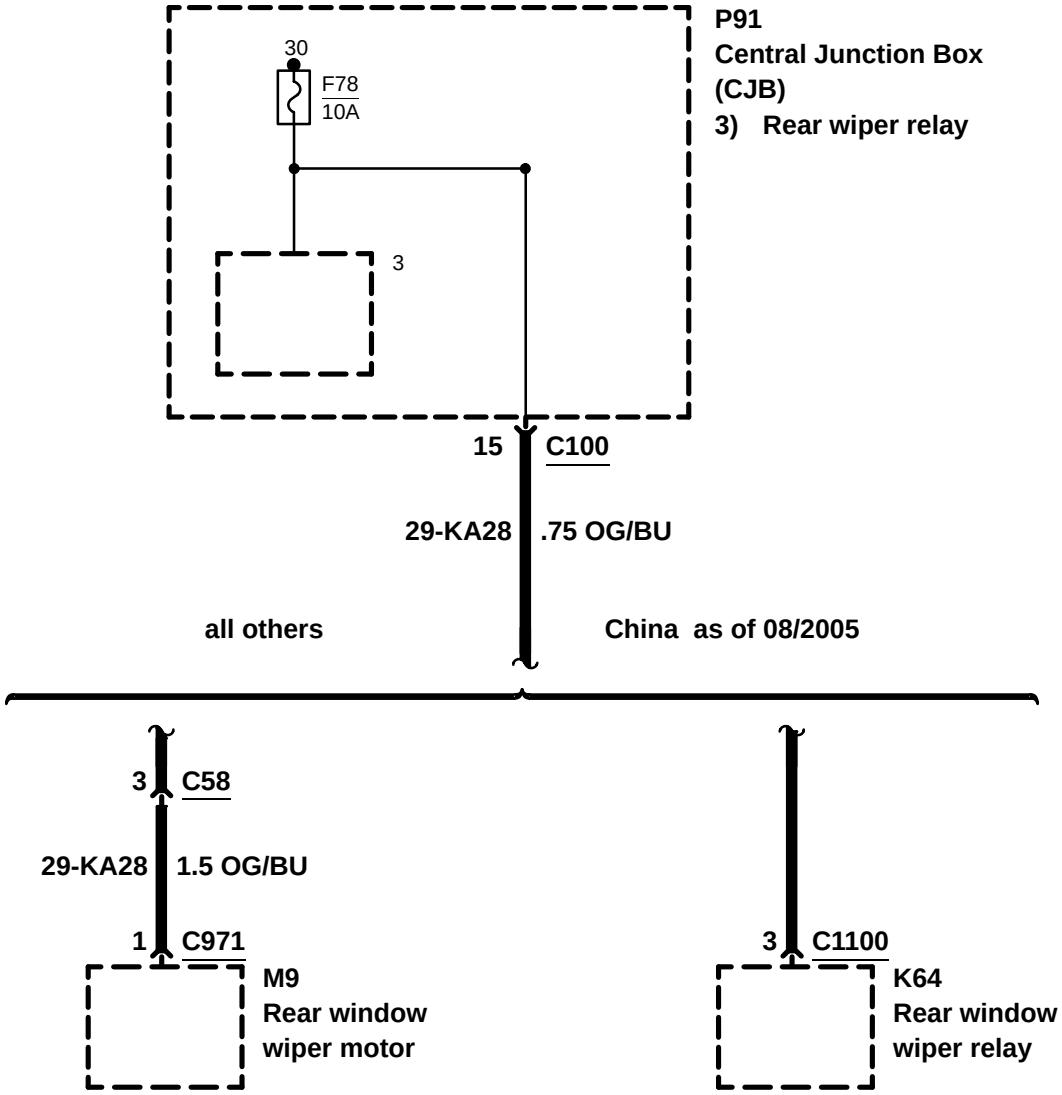

Fuse Details – F79, F80

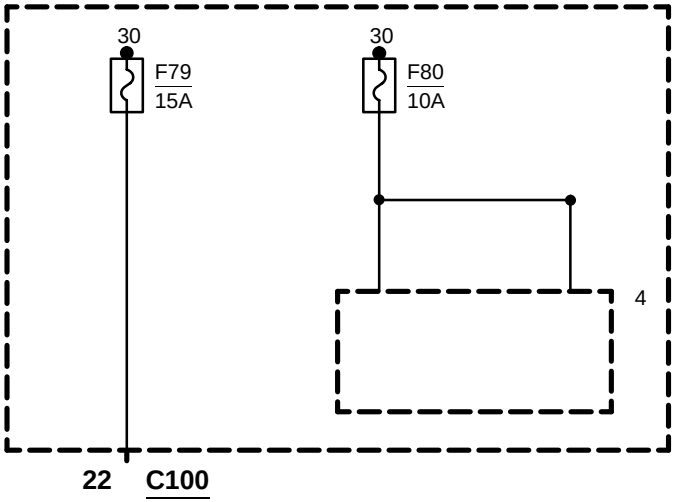

P91
Central Junction Box (CJB)
4) Battery saver relay

all others

22 C100

not used

as of 08/2005

22 C100

29-AD27 .5 OG/BK

12 C44


12 C41

29-AD27 .5 OG/BK


2 C223

N279
Power mirror fold switch

Fuse Details – F81, F82

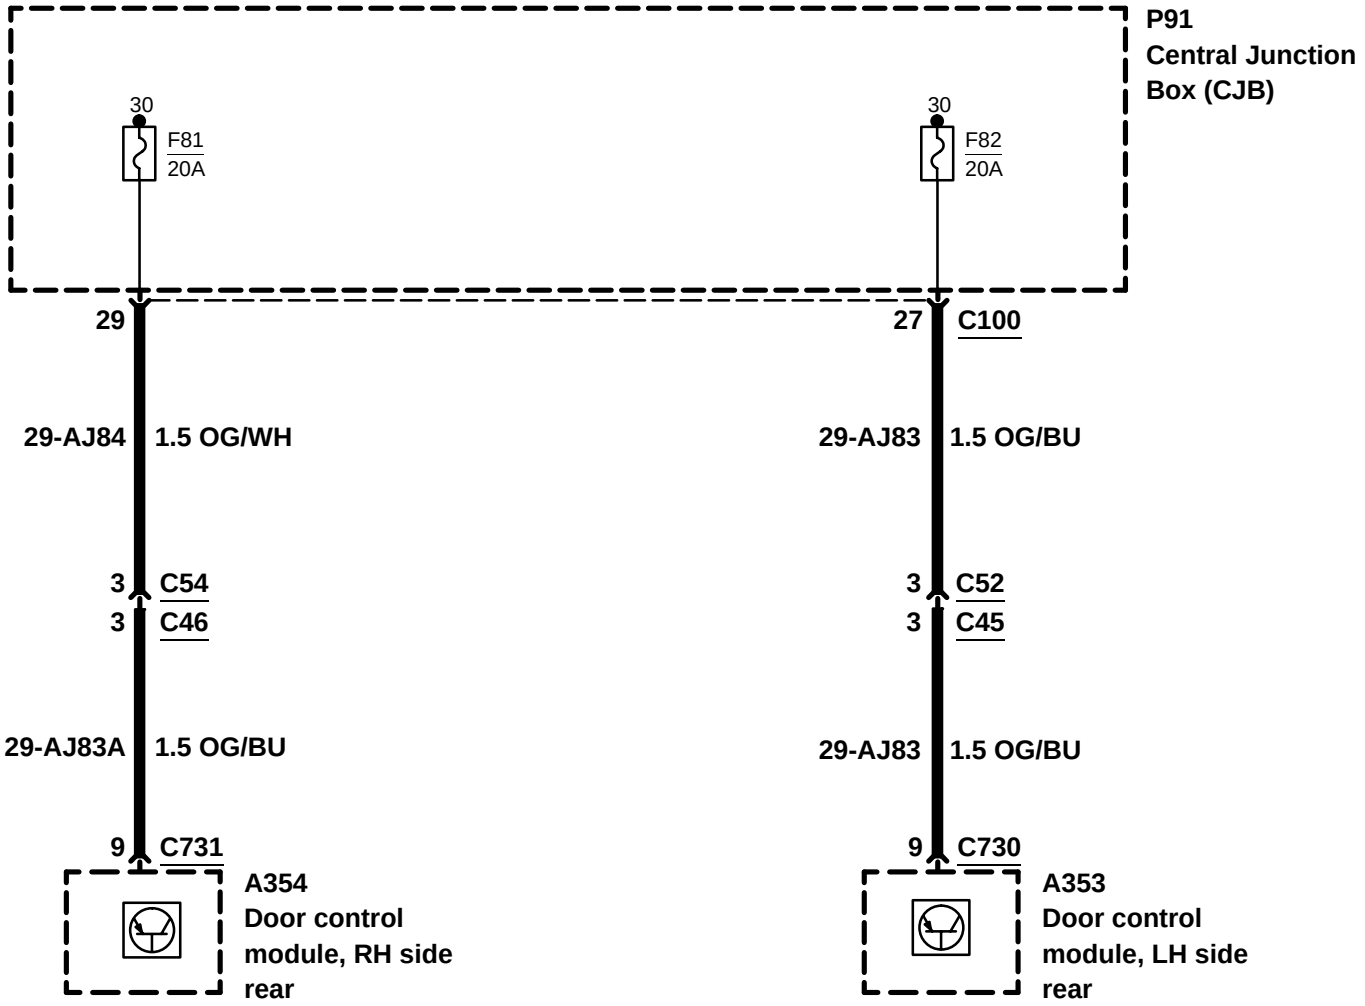


Fuse Details – F83, low level radio

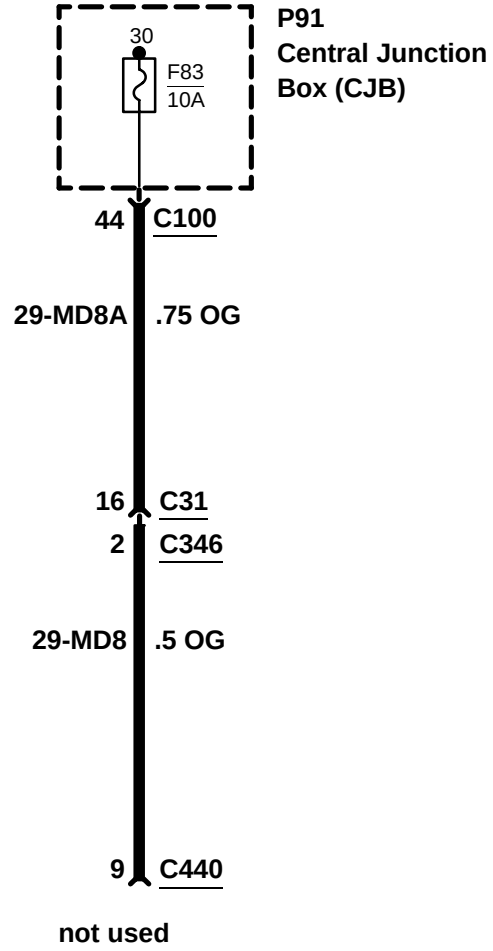


Fuse Details – F84, manual transmission


11/2006
700-03-00-60
2005
Focus

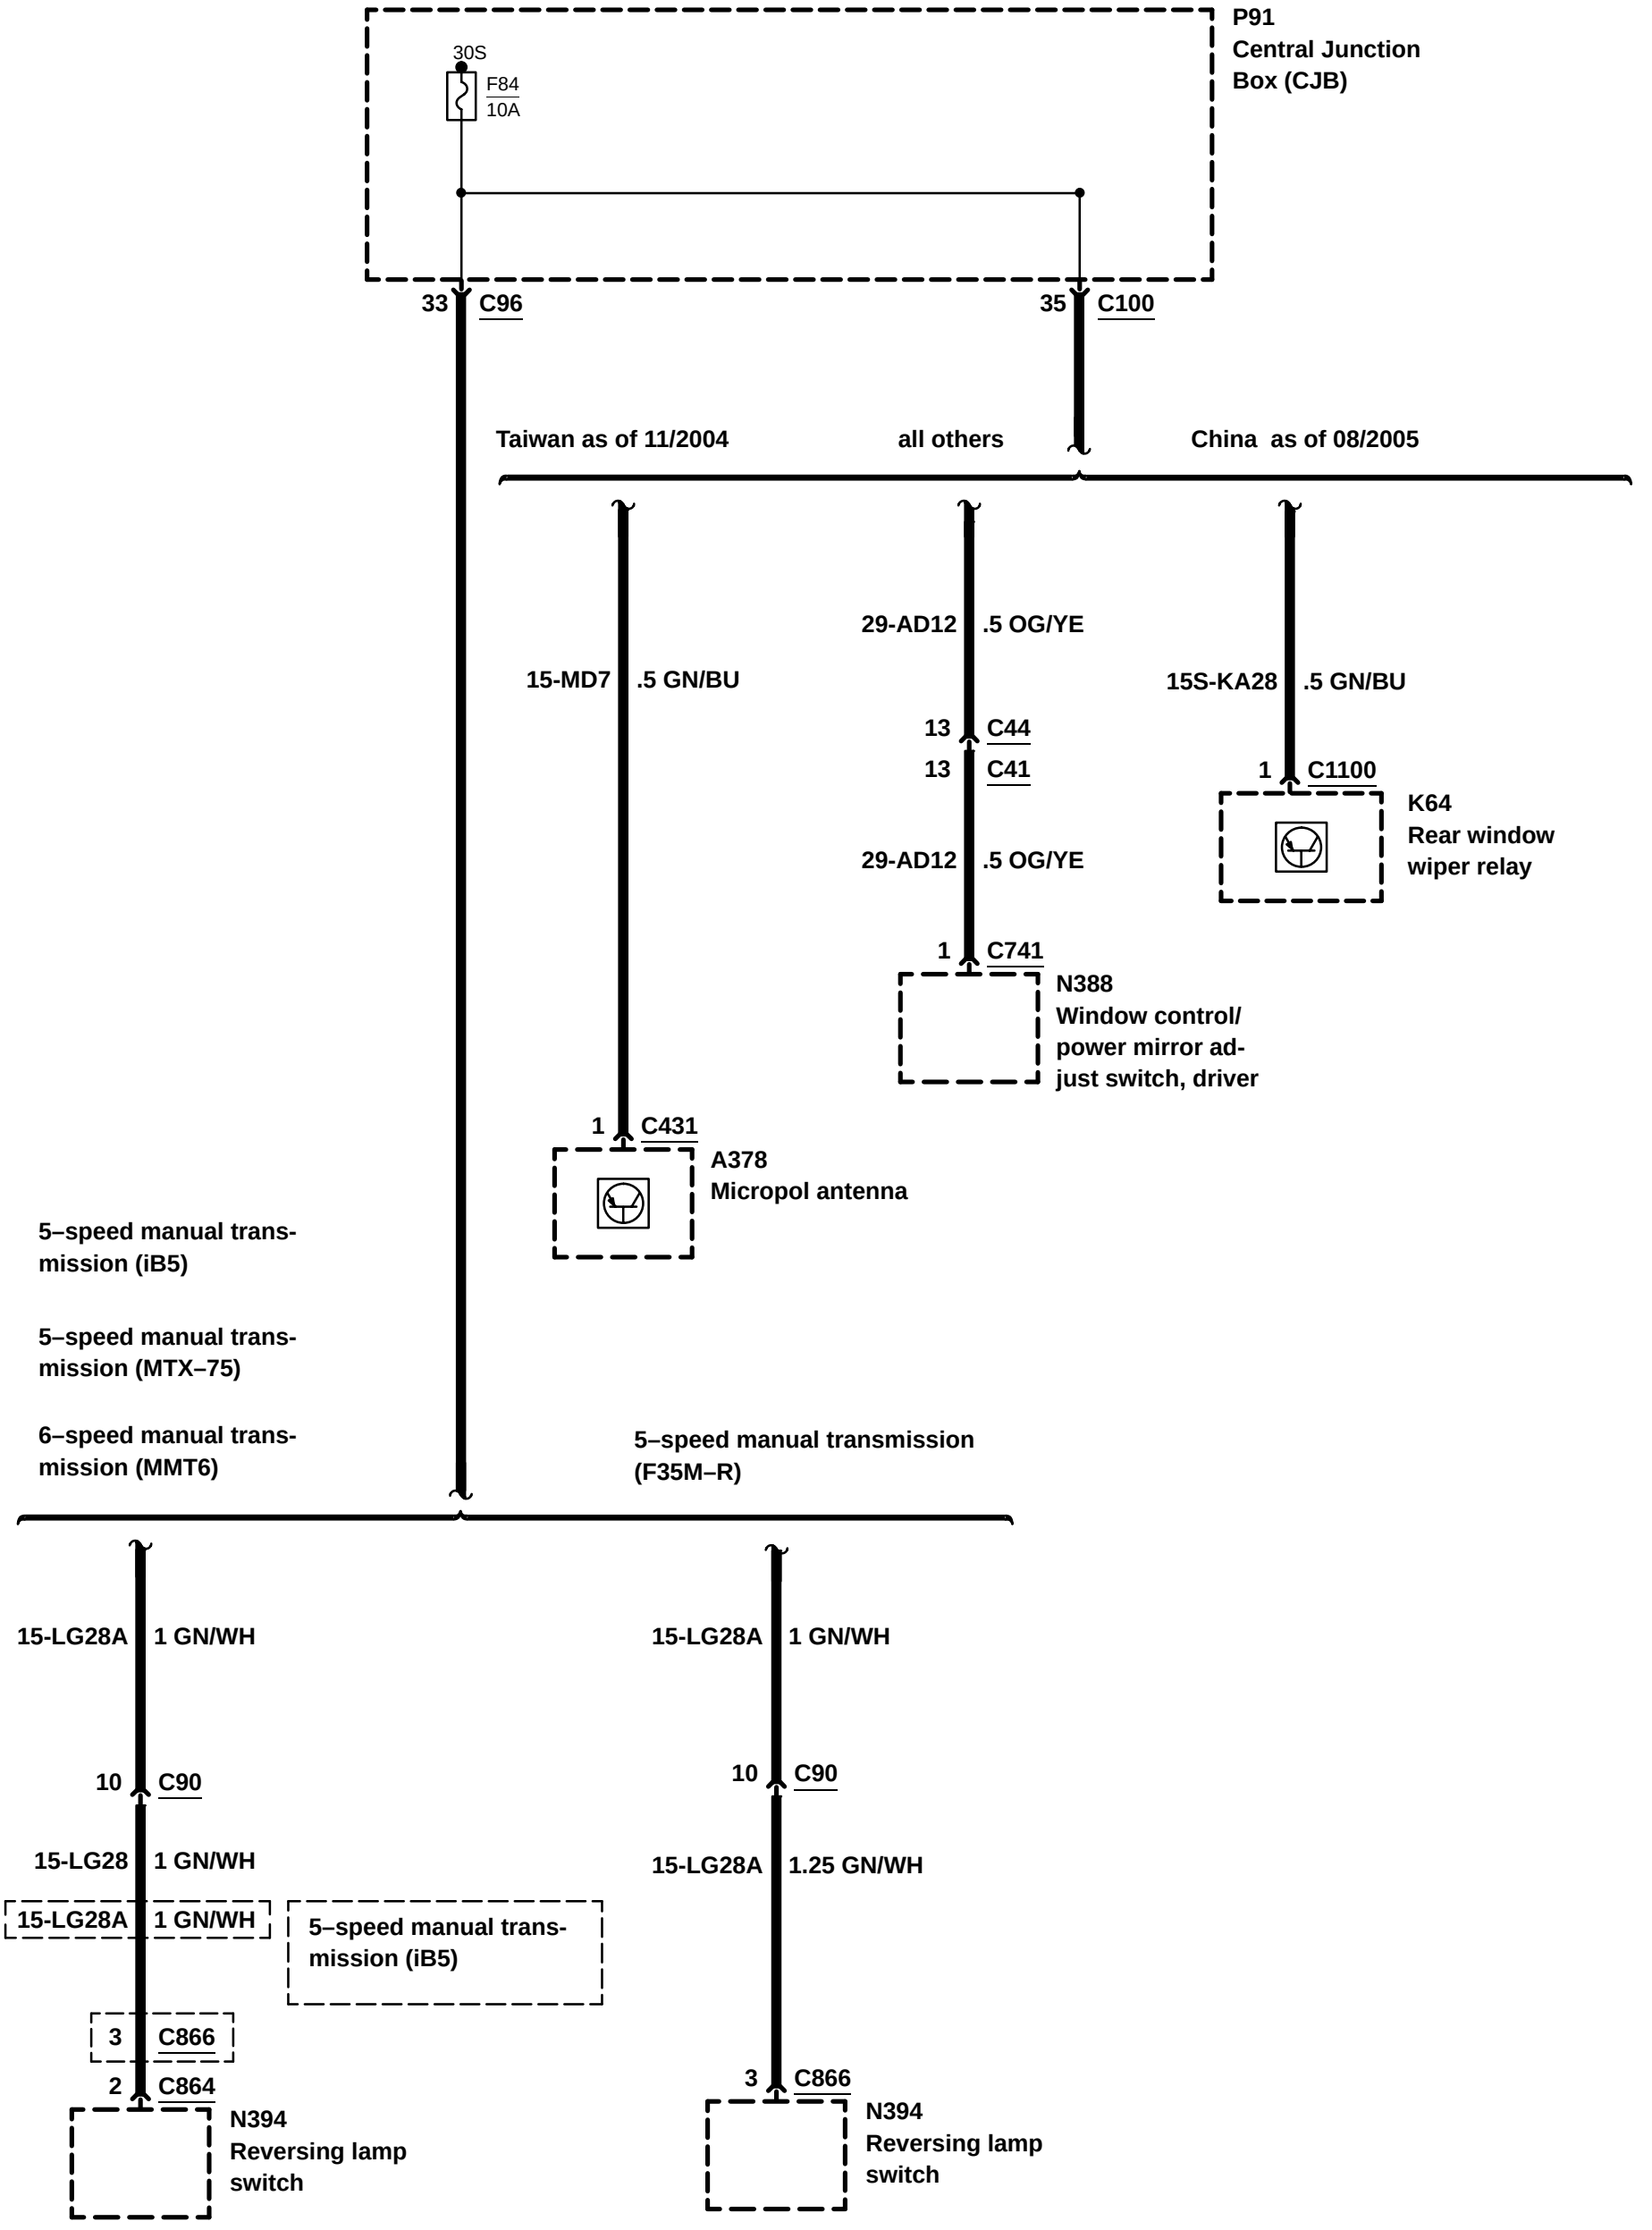


Fuse Details – F84, automatic transmission

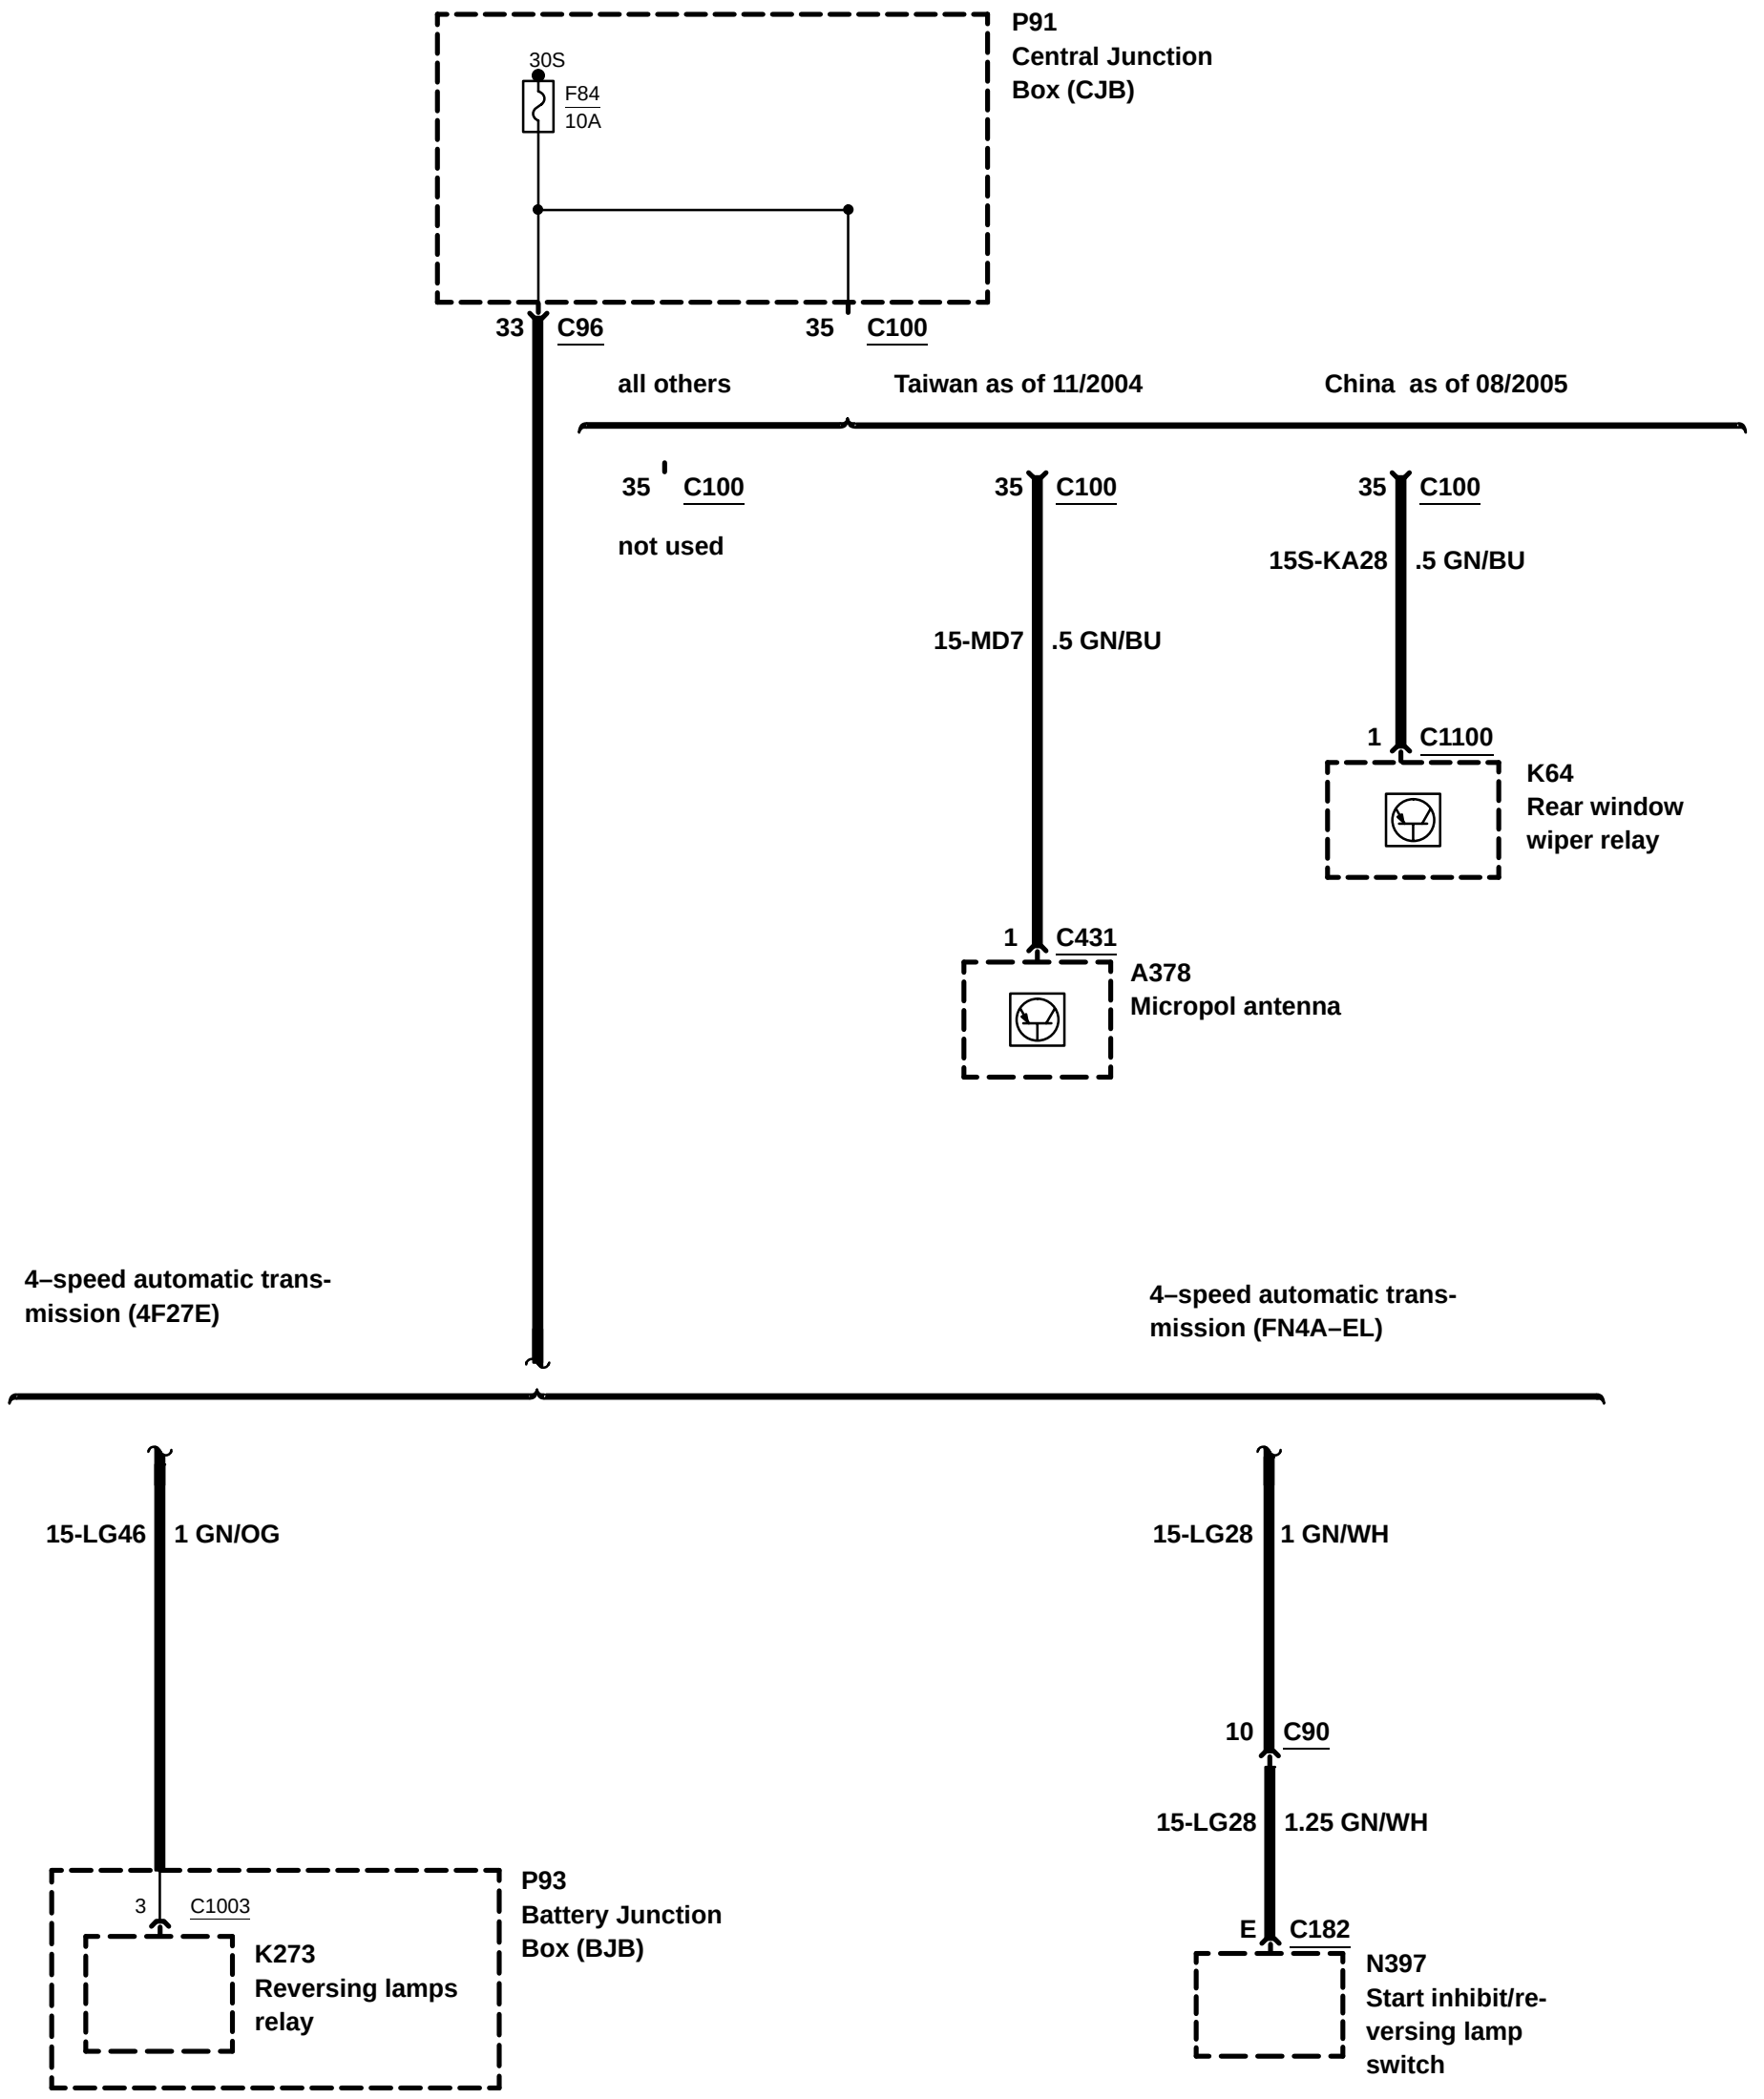


Fuse Details – F1000, 1.6L (Z6)

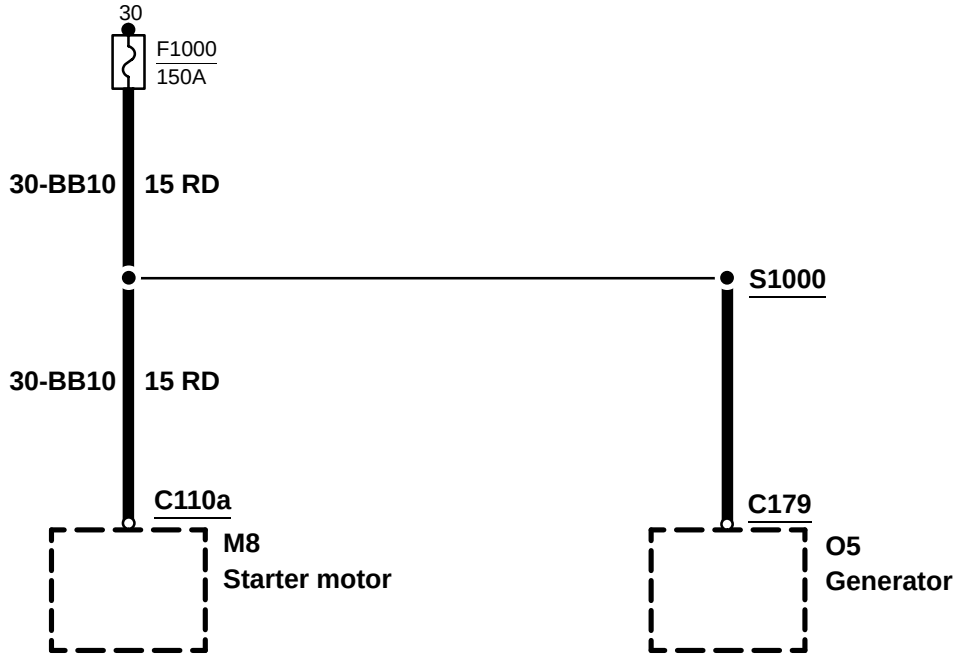


Fuse Details – F1000, except 1.6L (Z6)

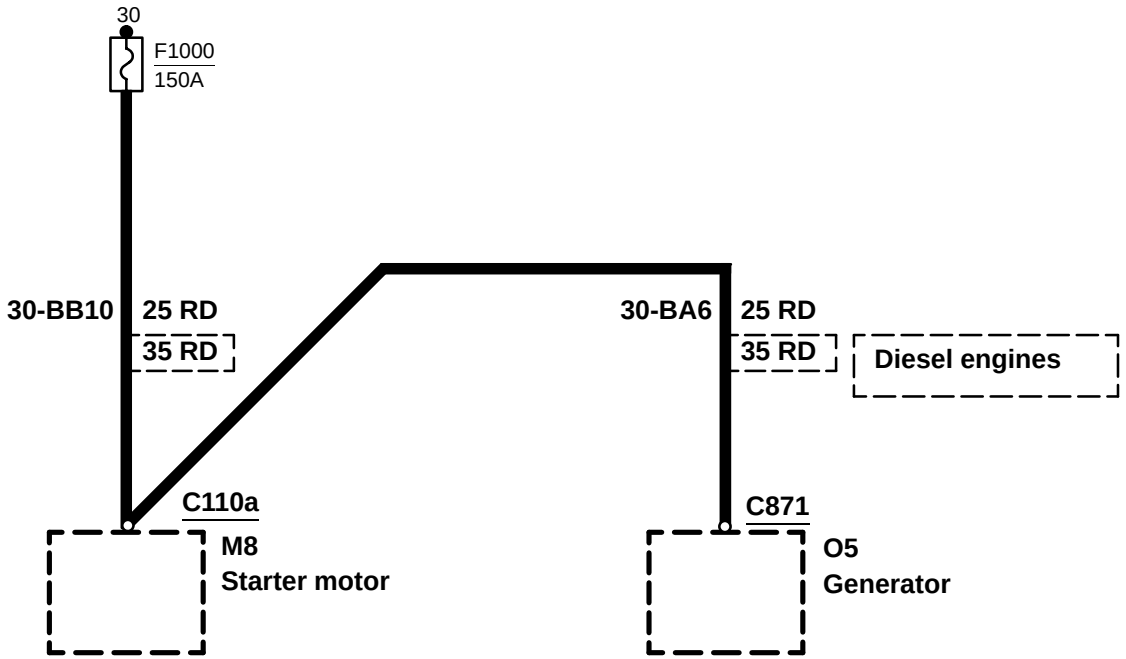


Ground Distribution – G1, G8

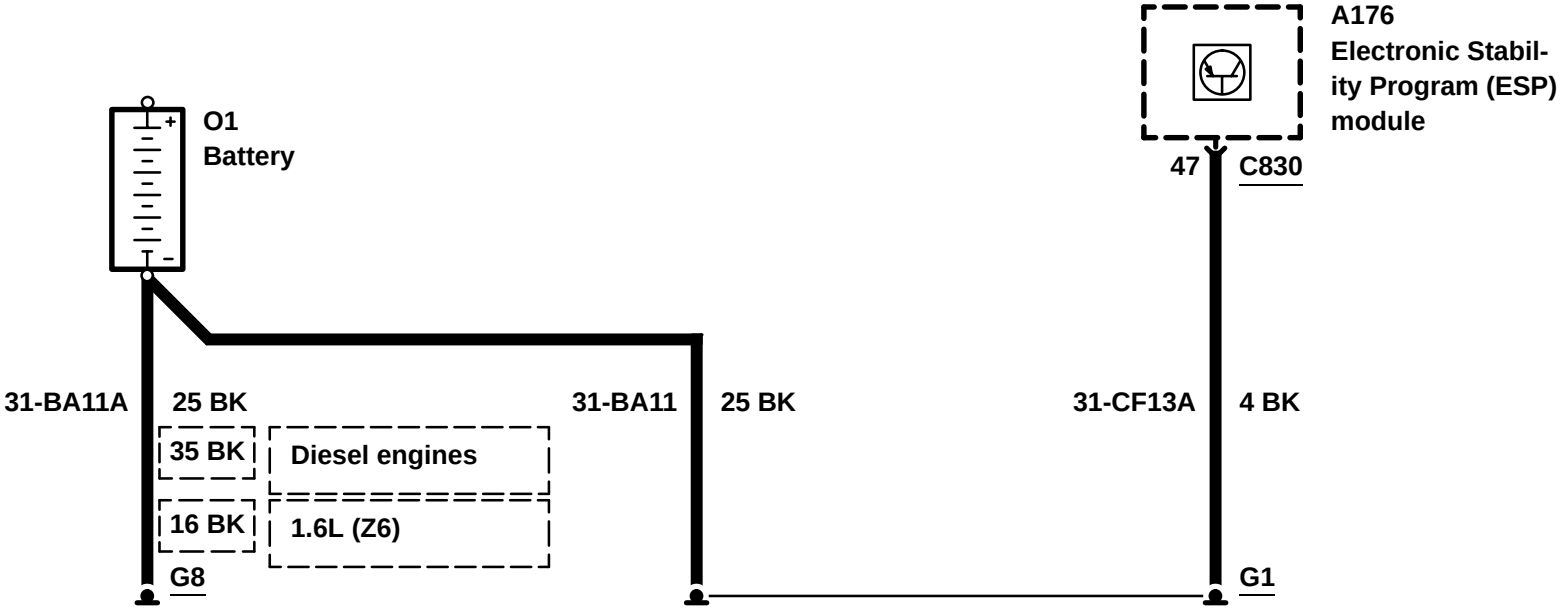


Ground Distribution – G7

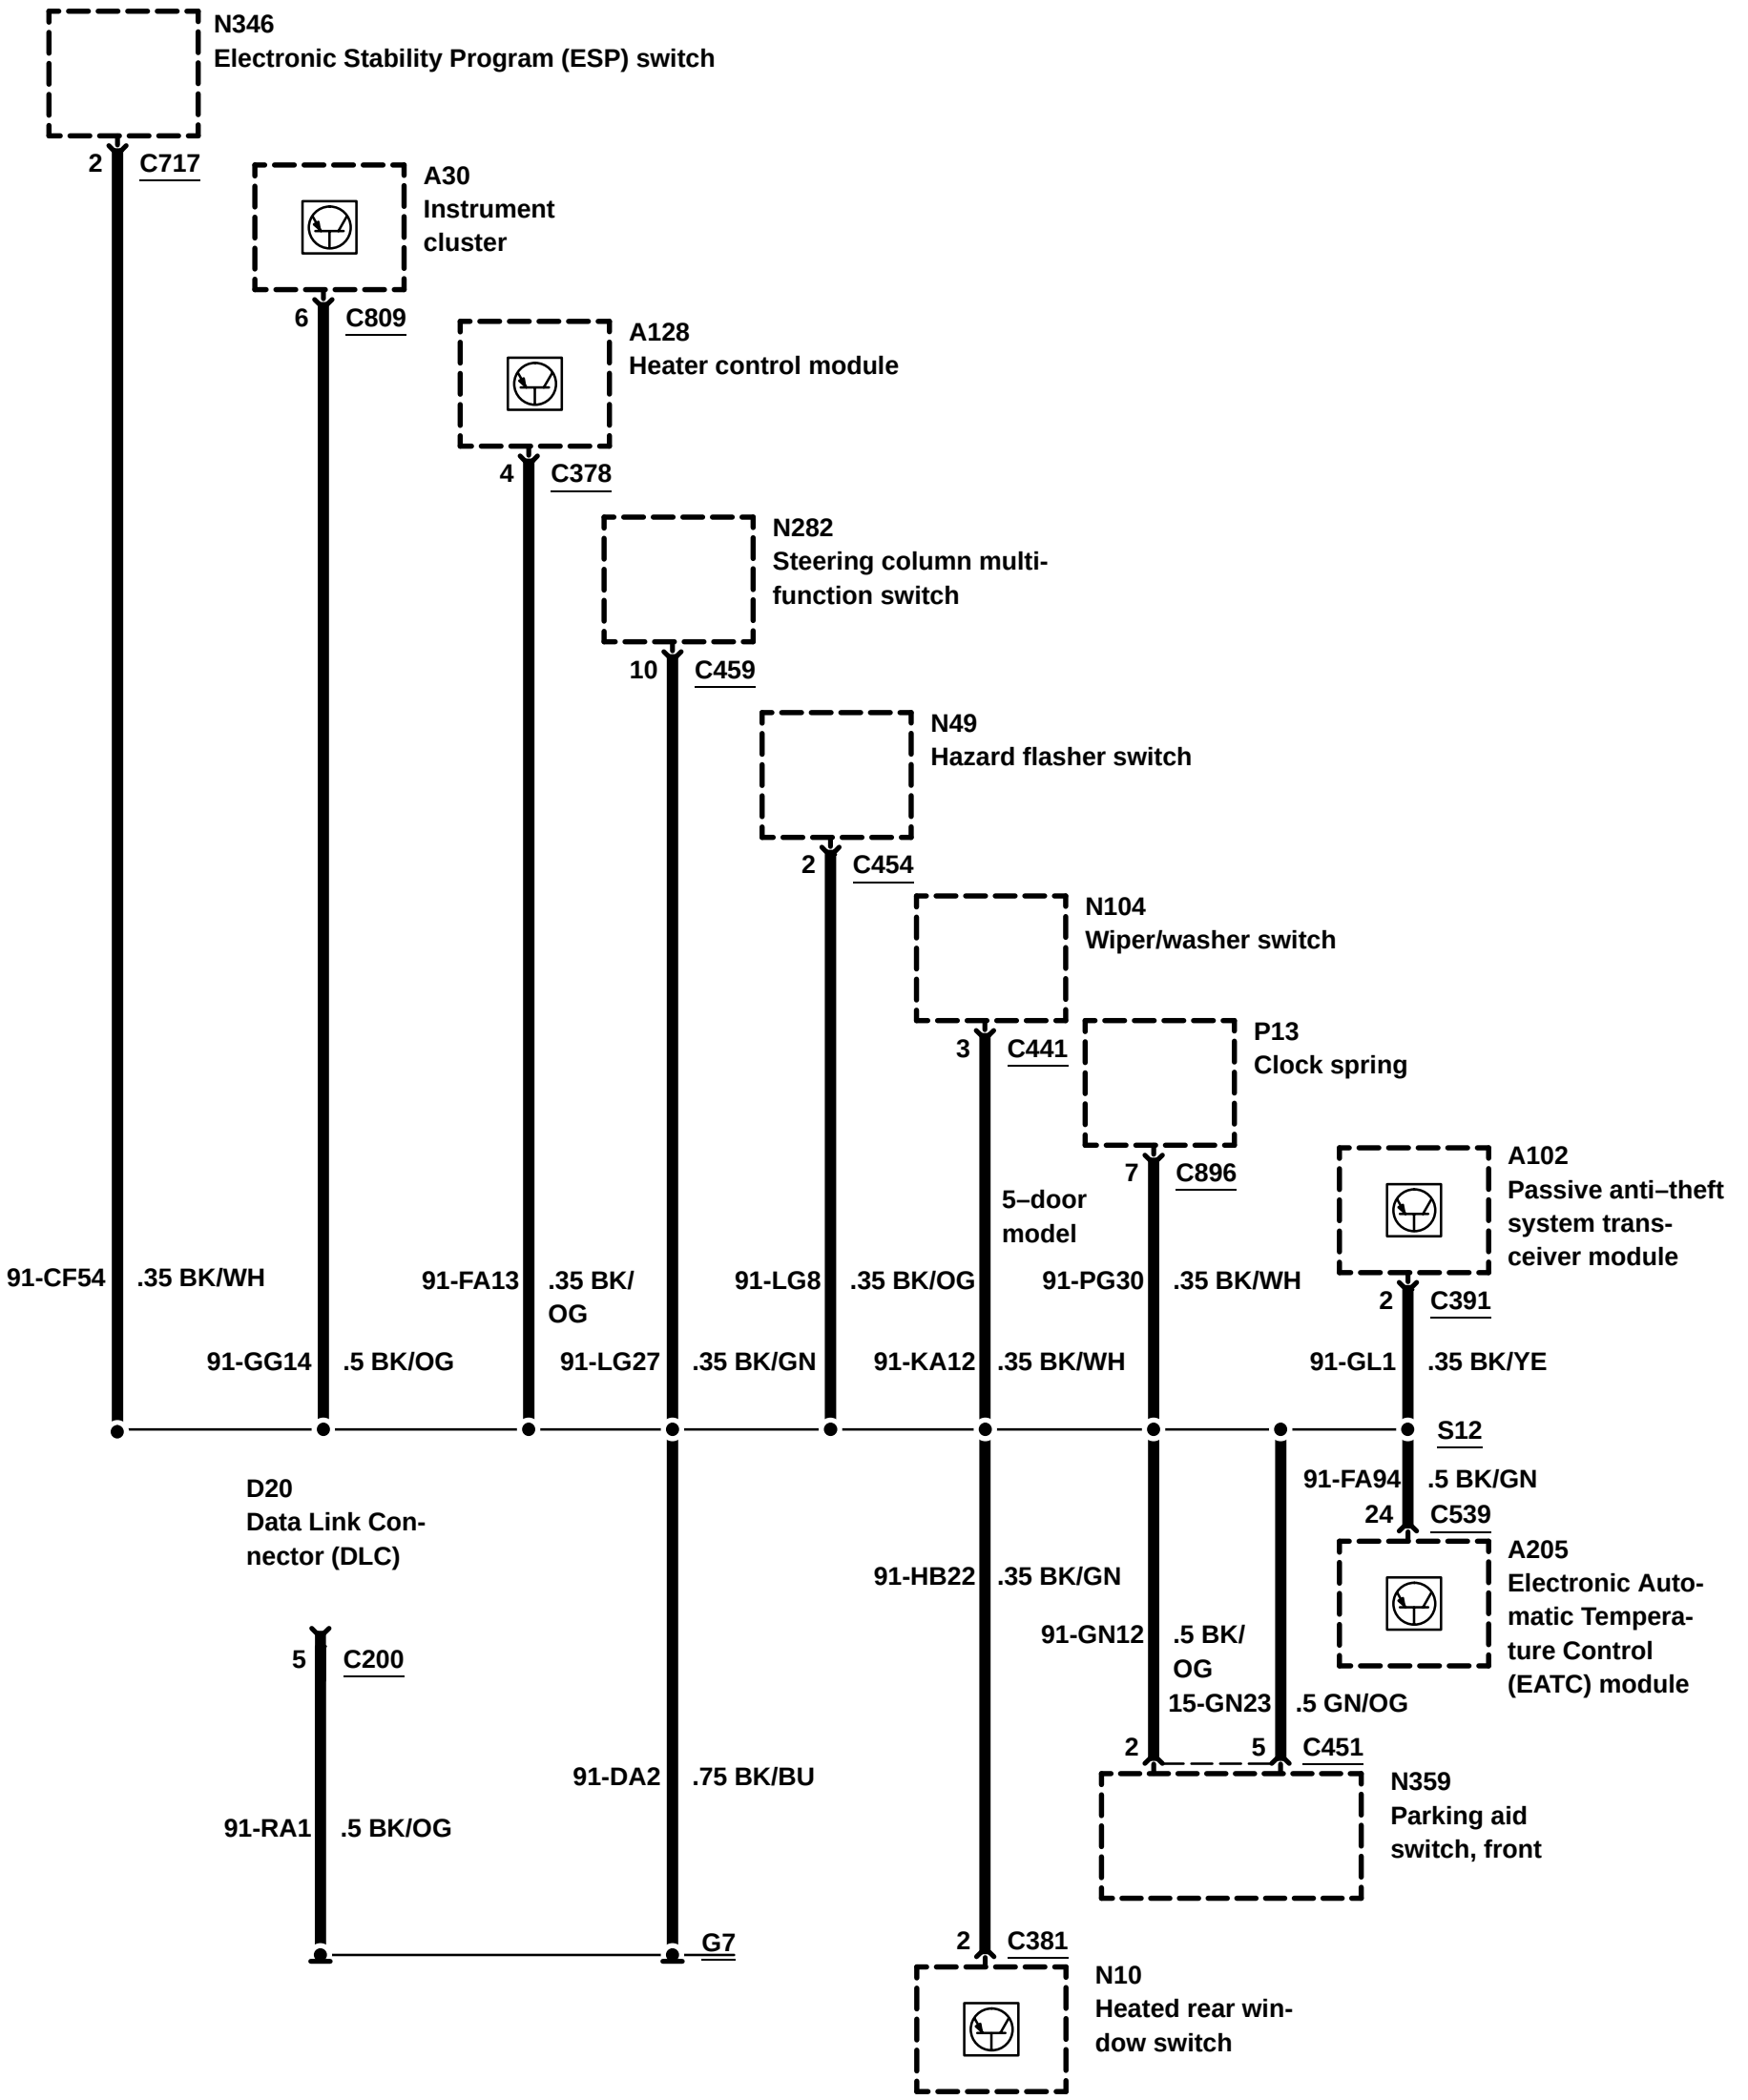


Ground Distribution – G12, LHD

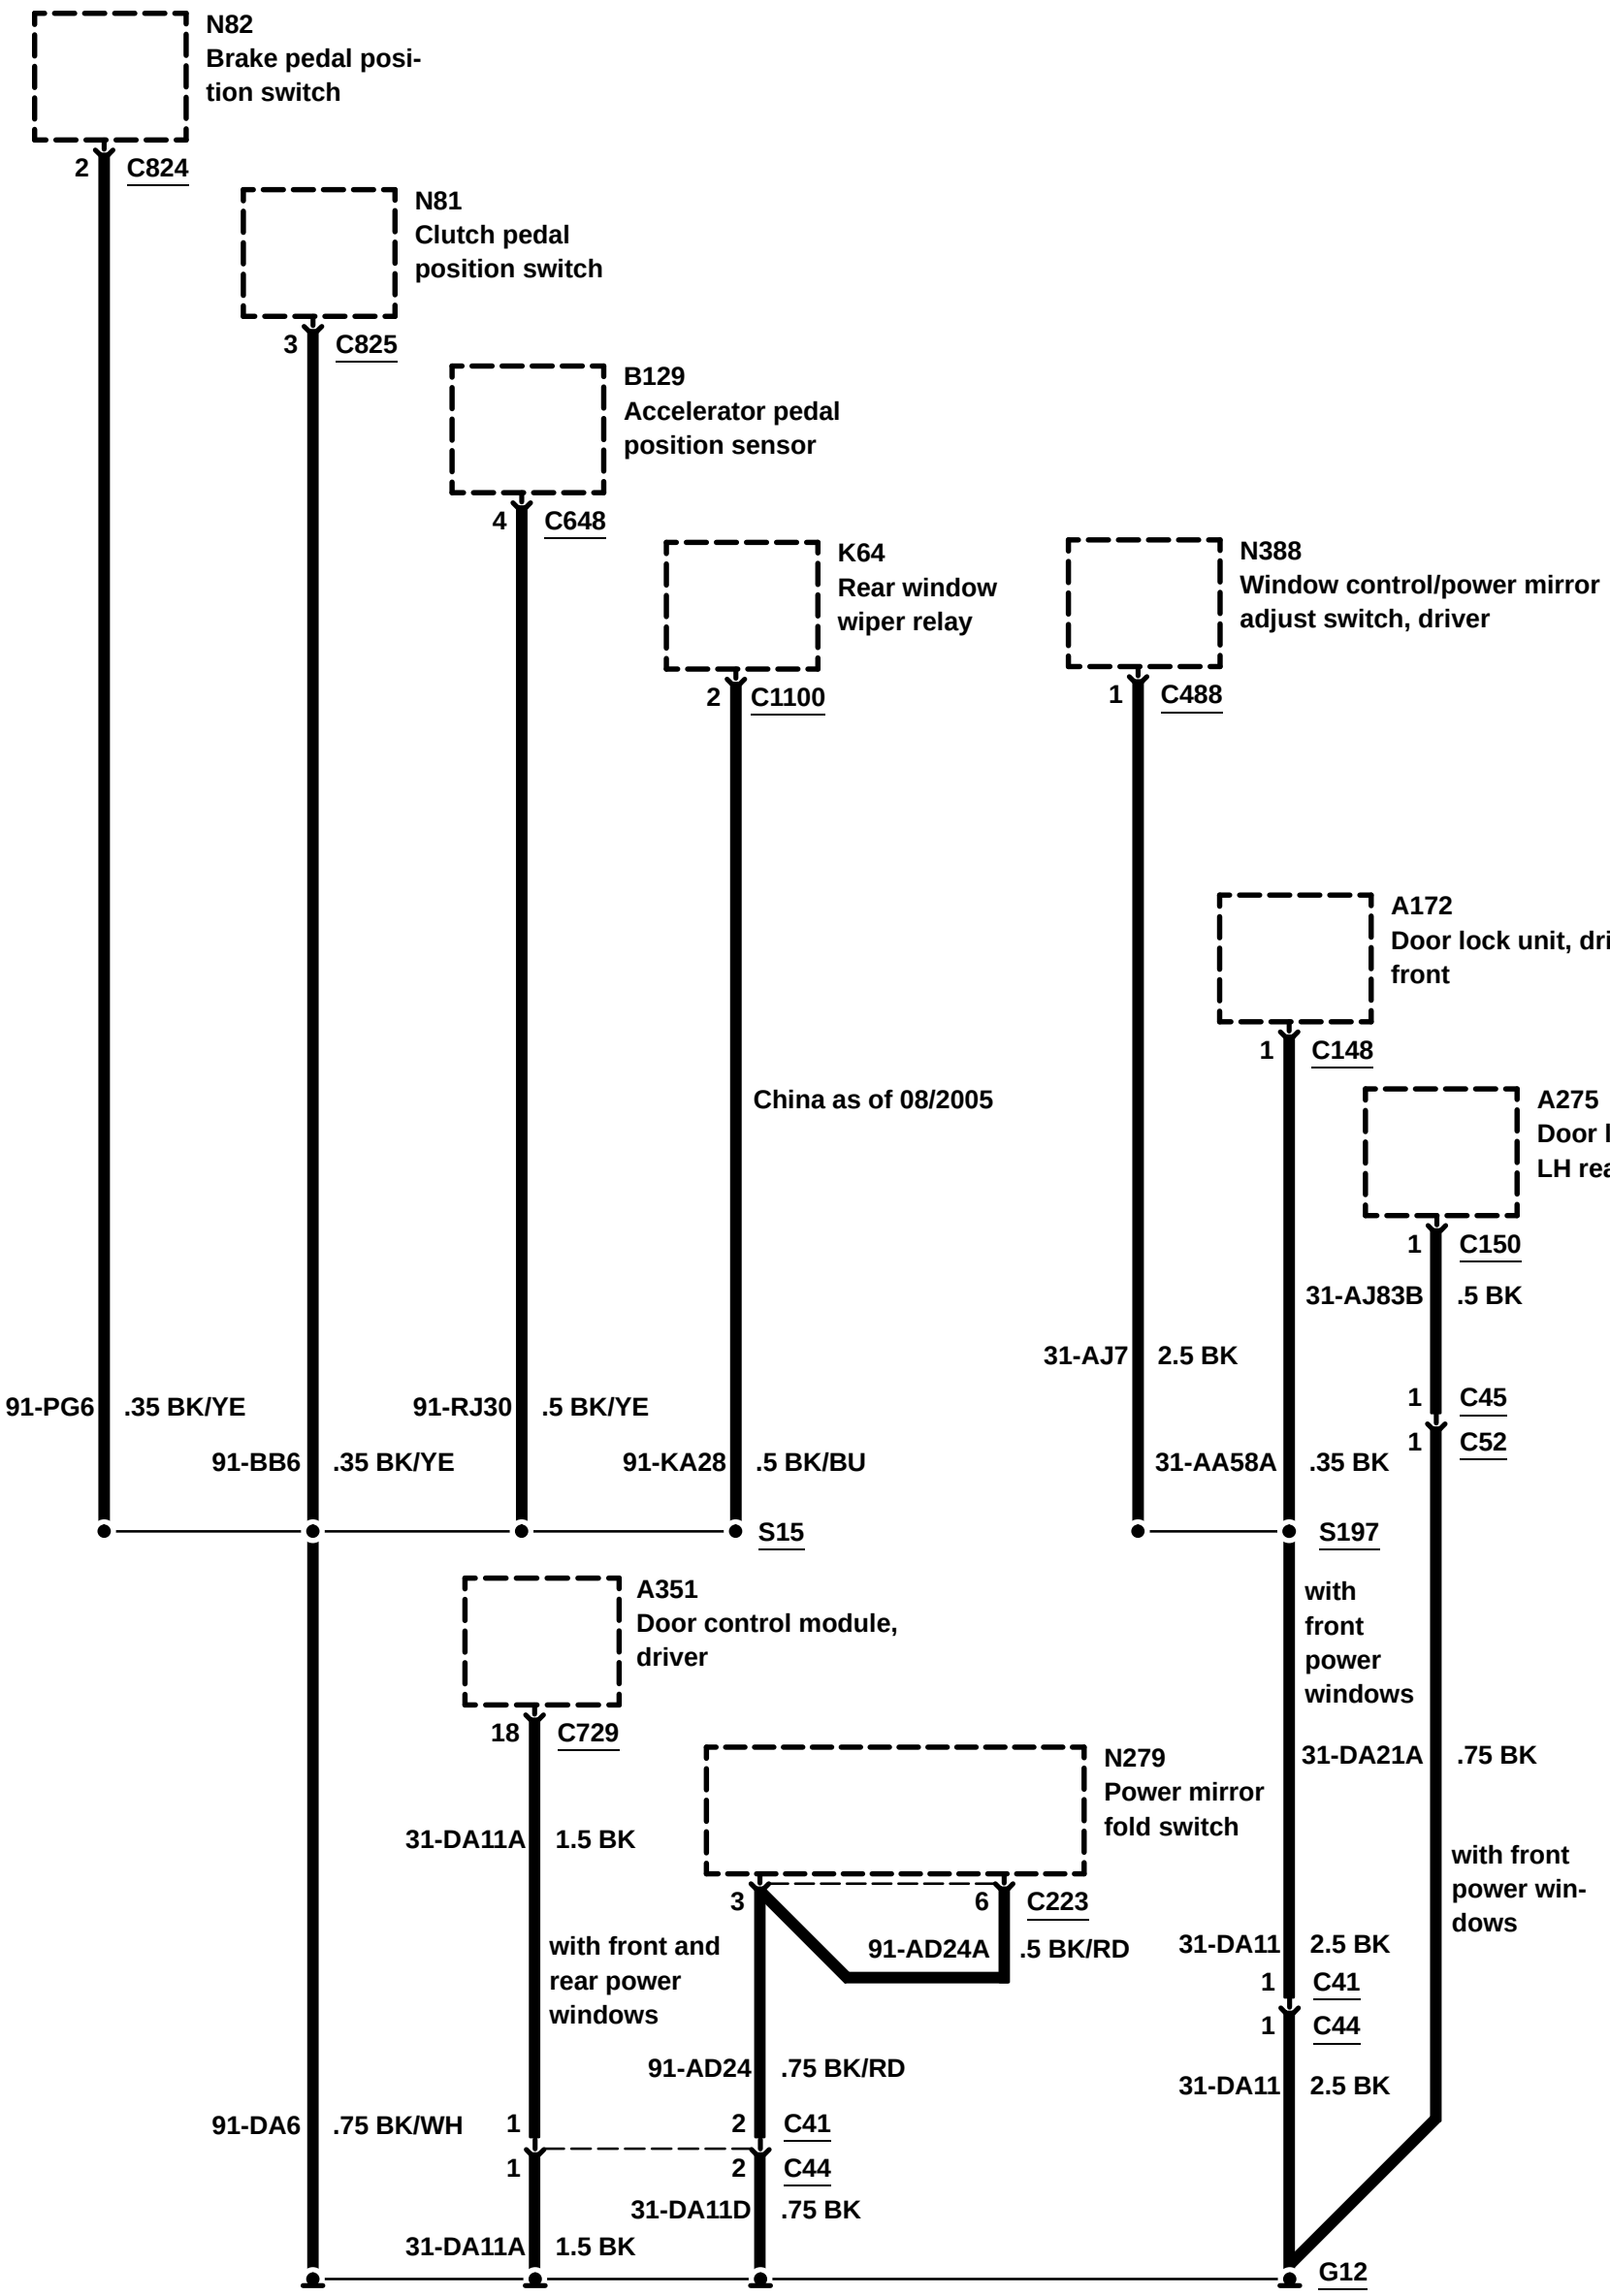


Ground Distribution – G12, RHD

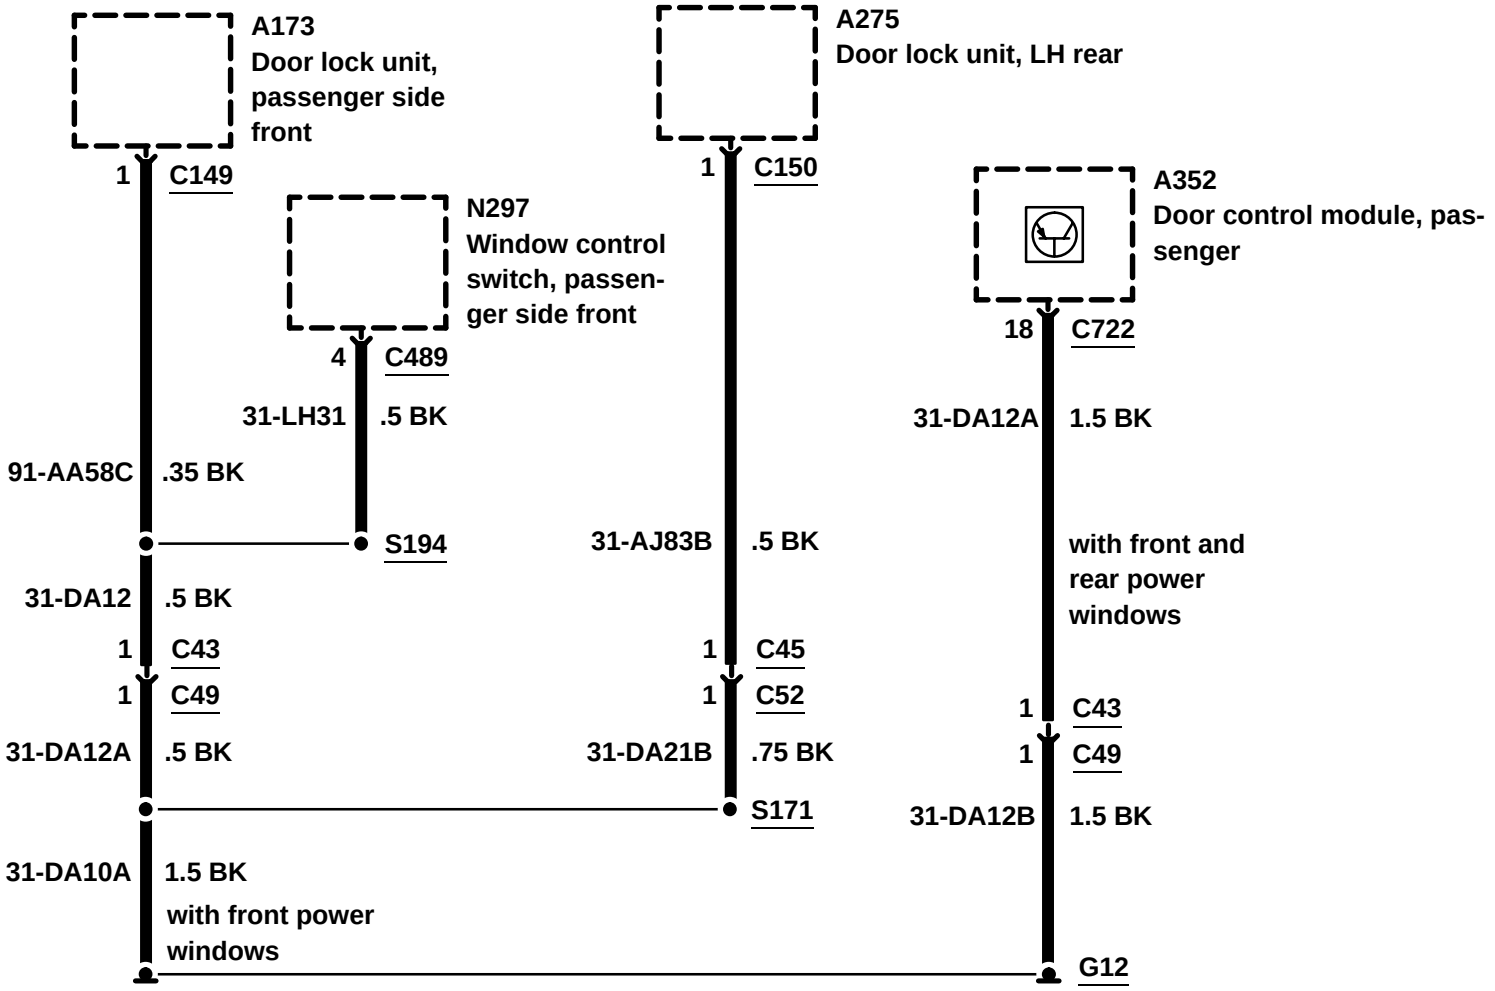


Ground Distribution – G19

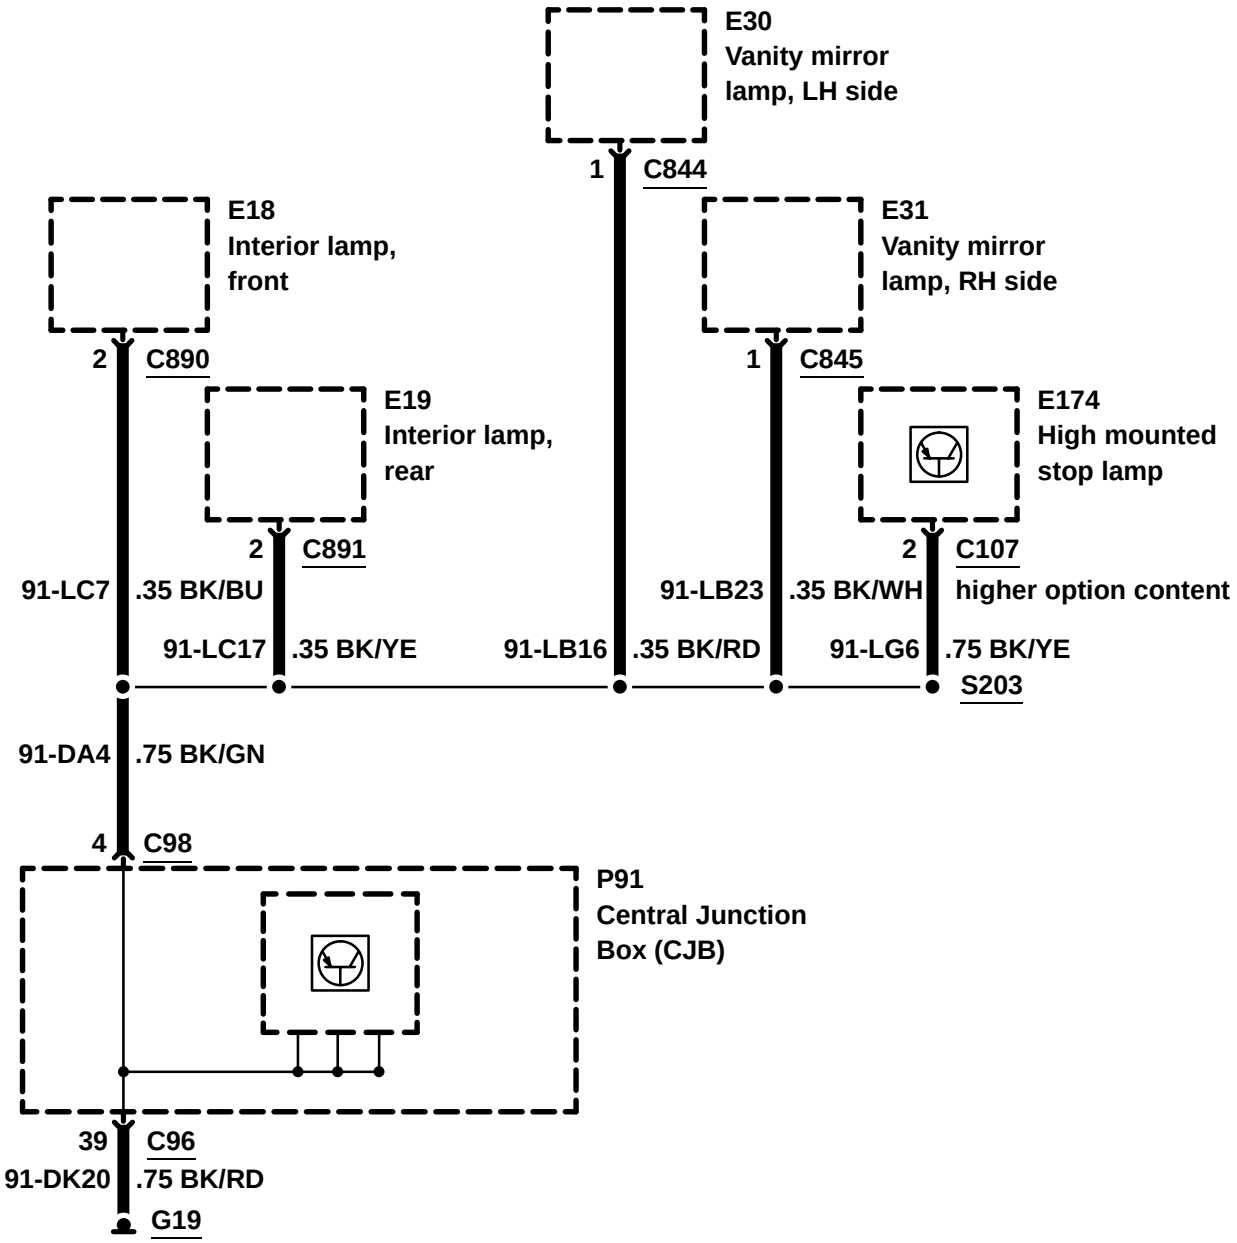


Ground Distribution – G20

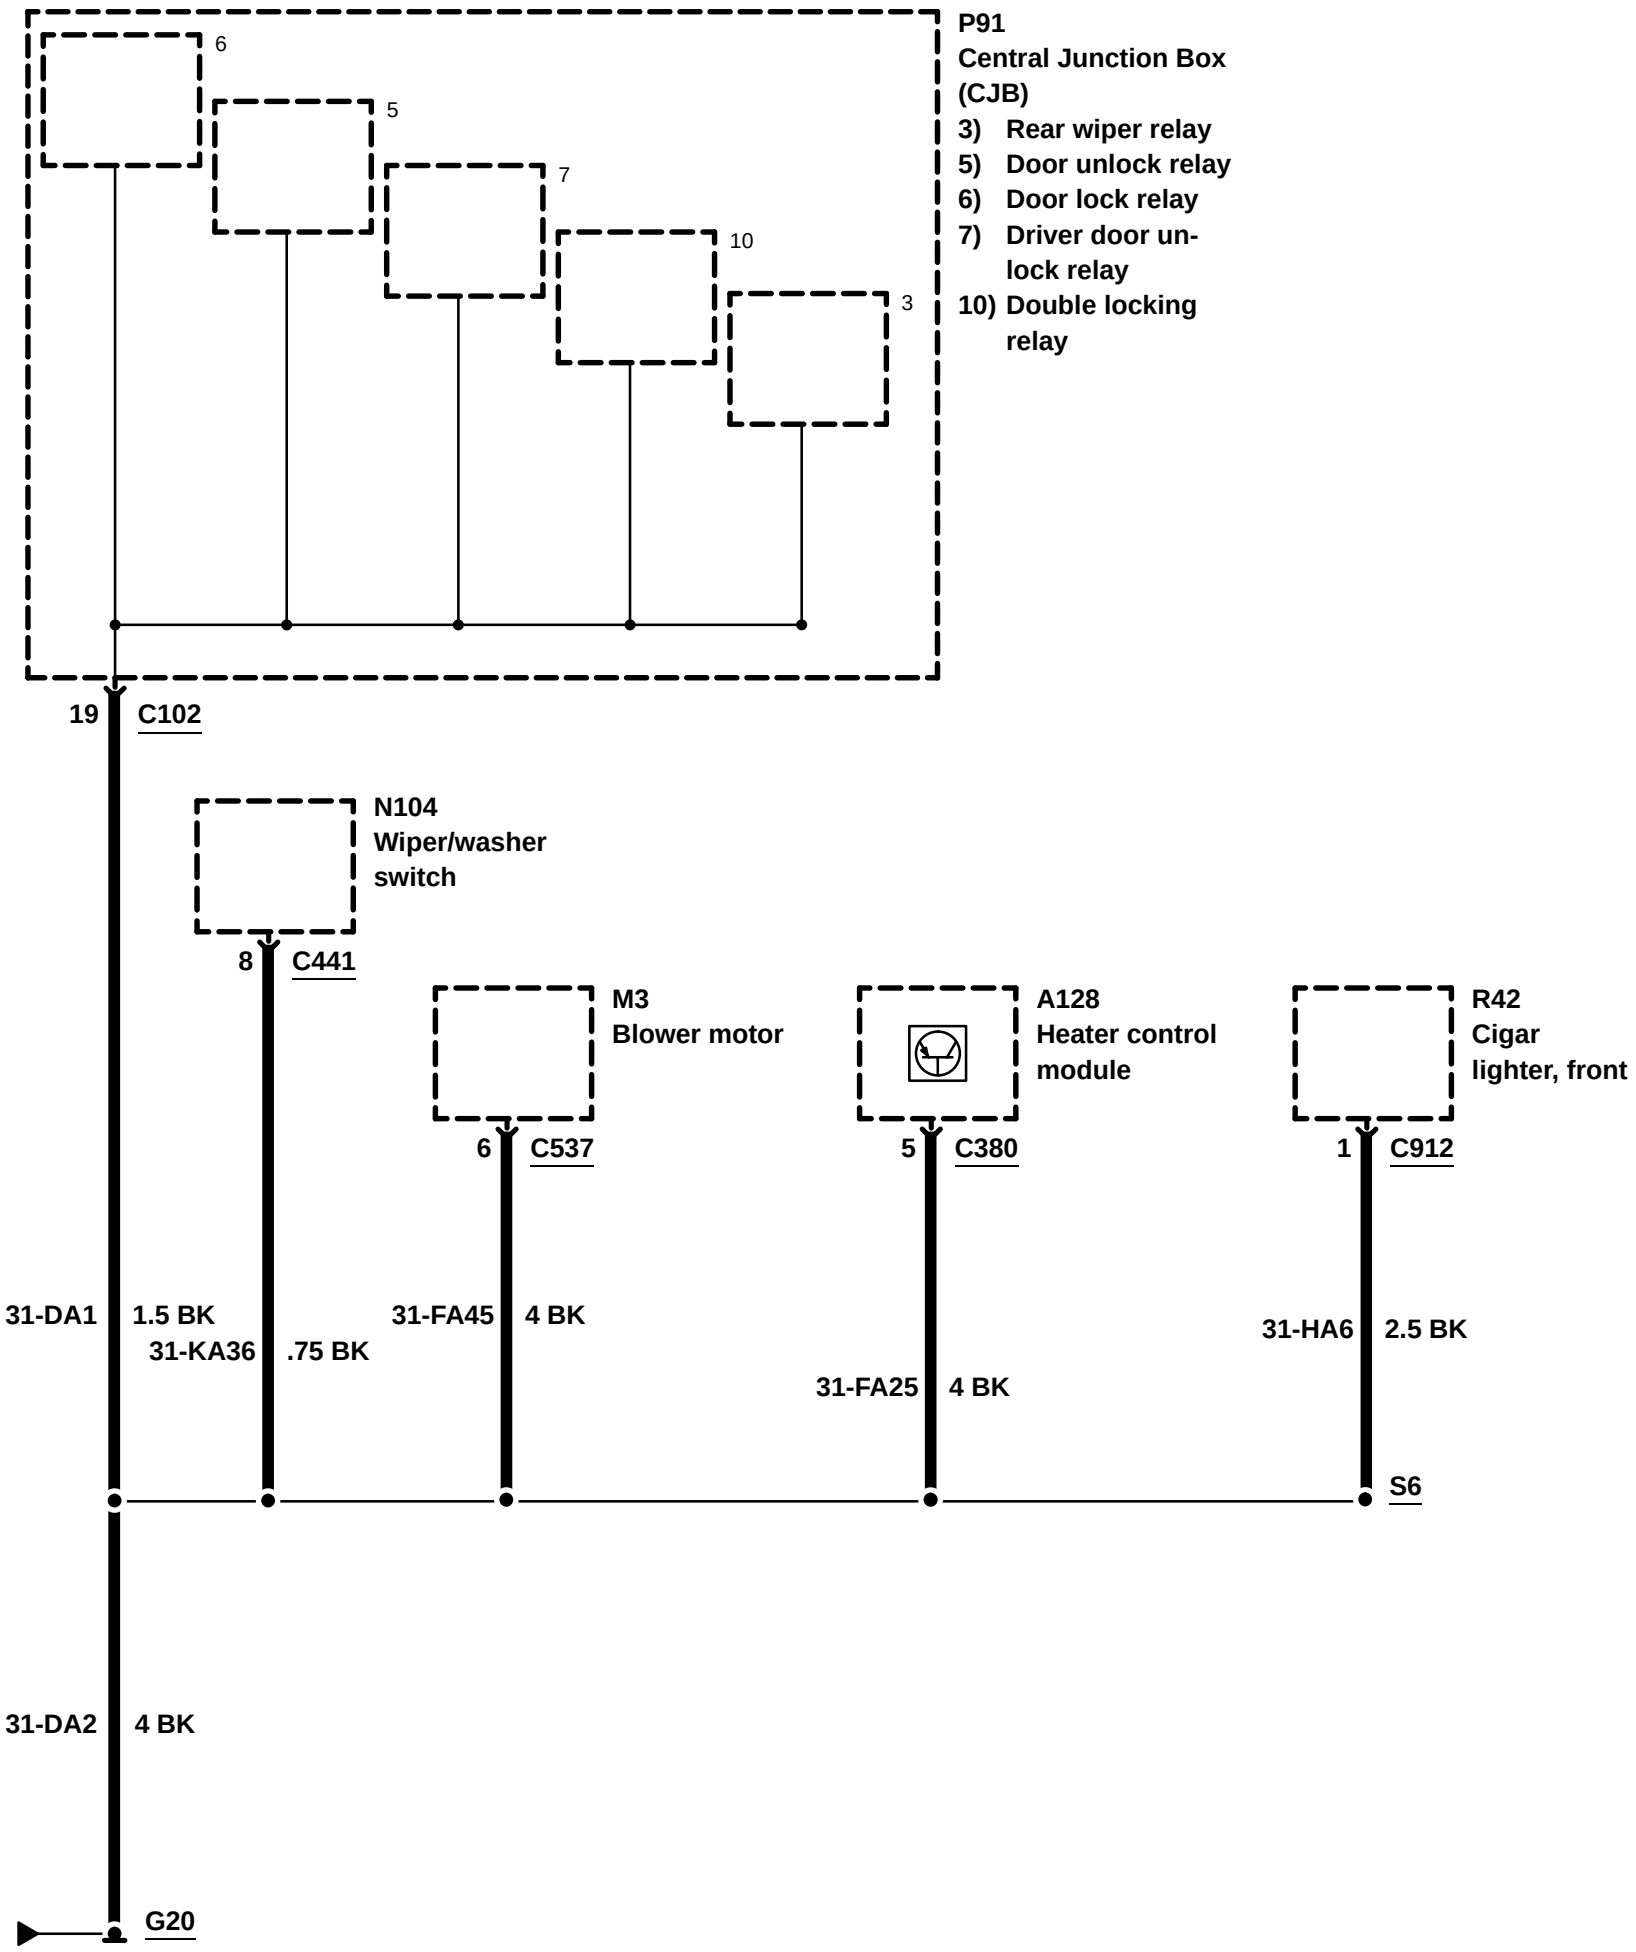


Ground Distribution – G20

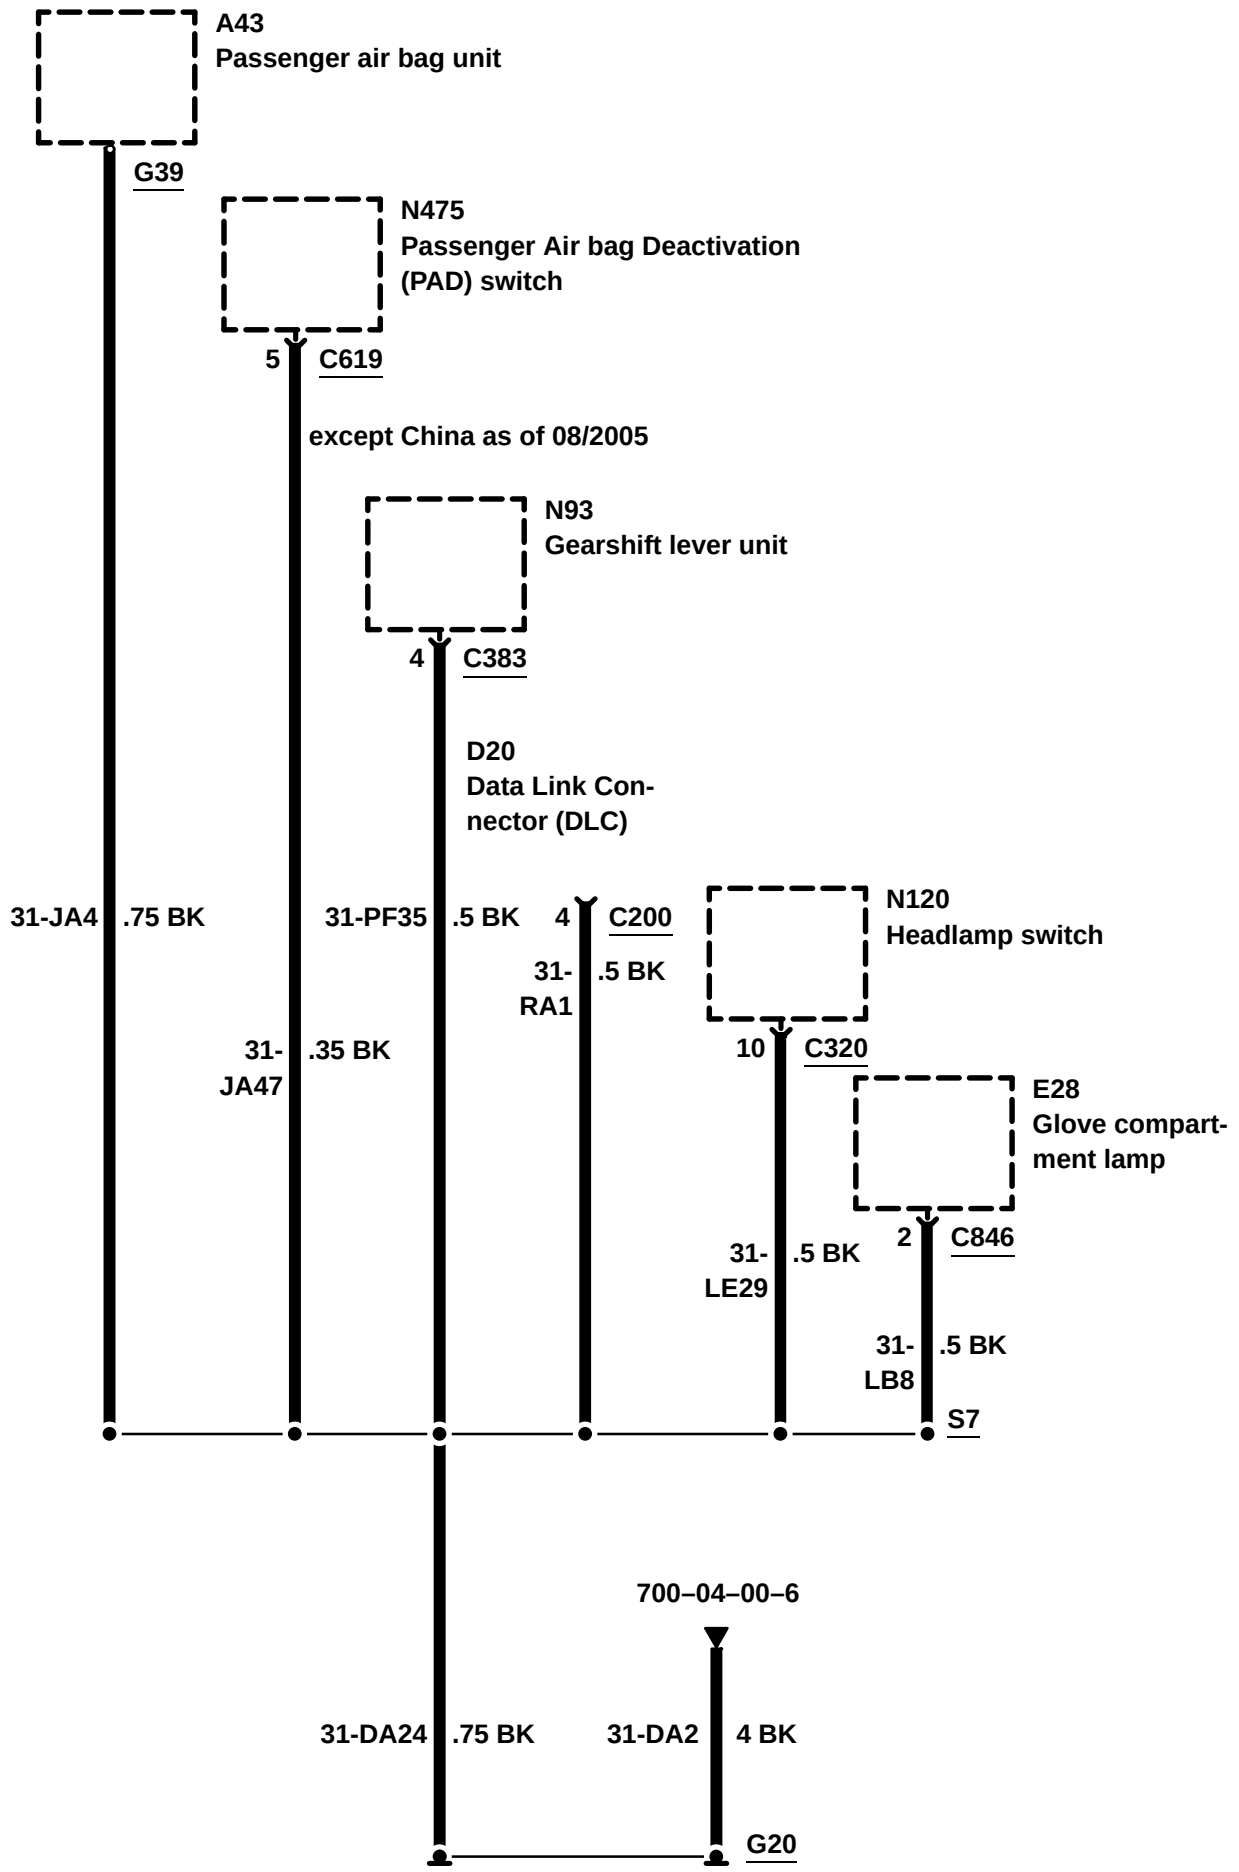


Ground Distribution – G31

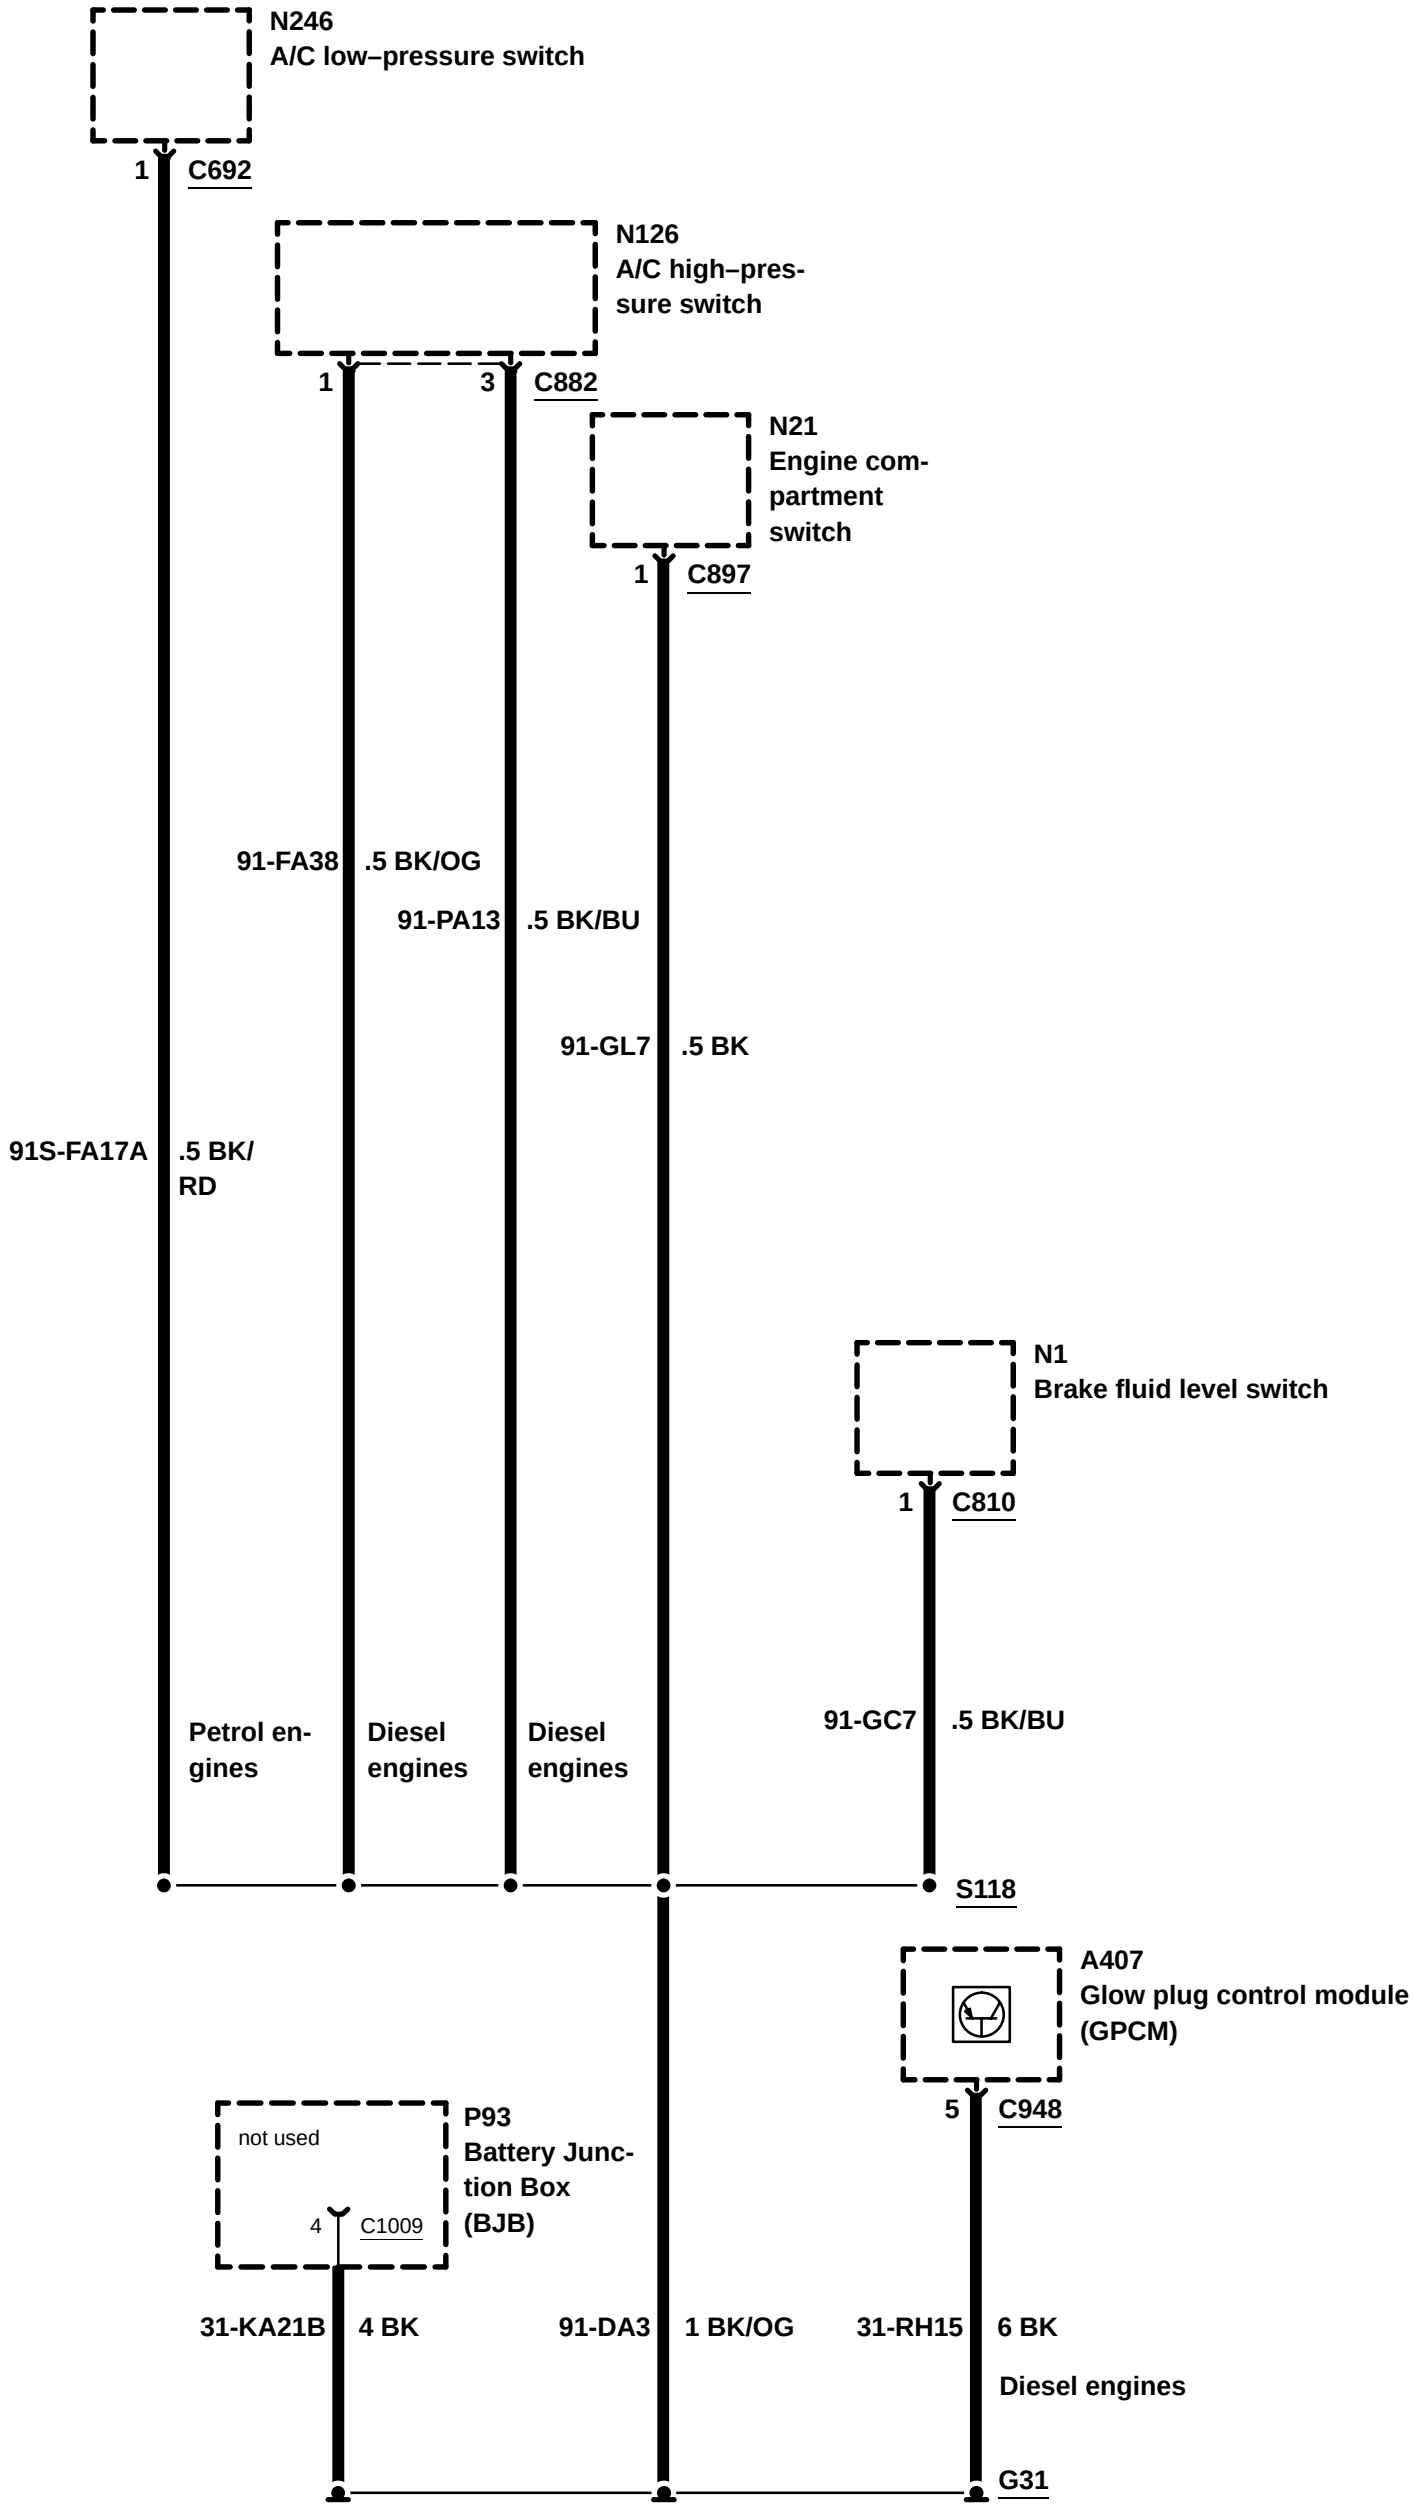


Ground Distribution – G37

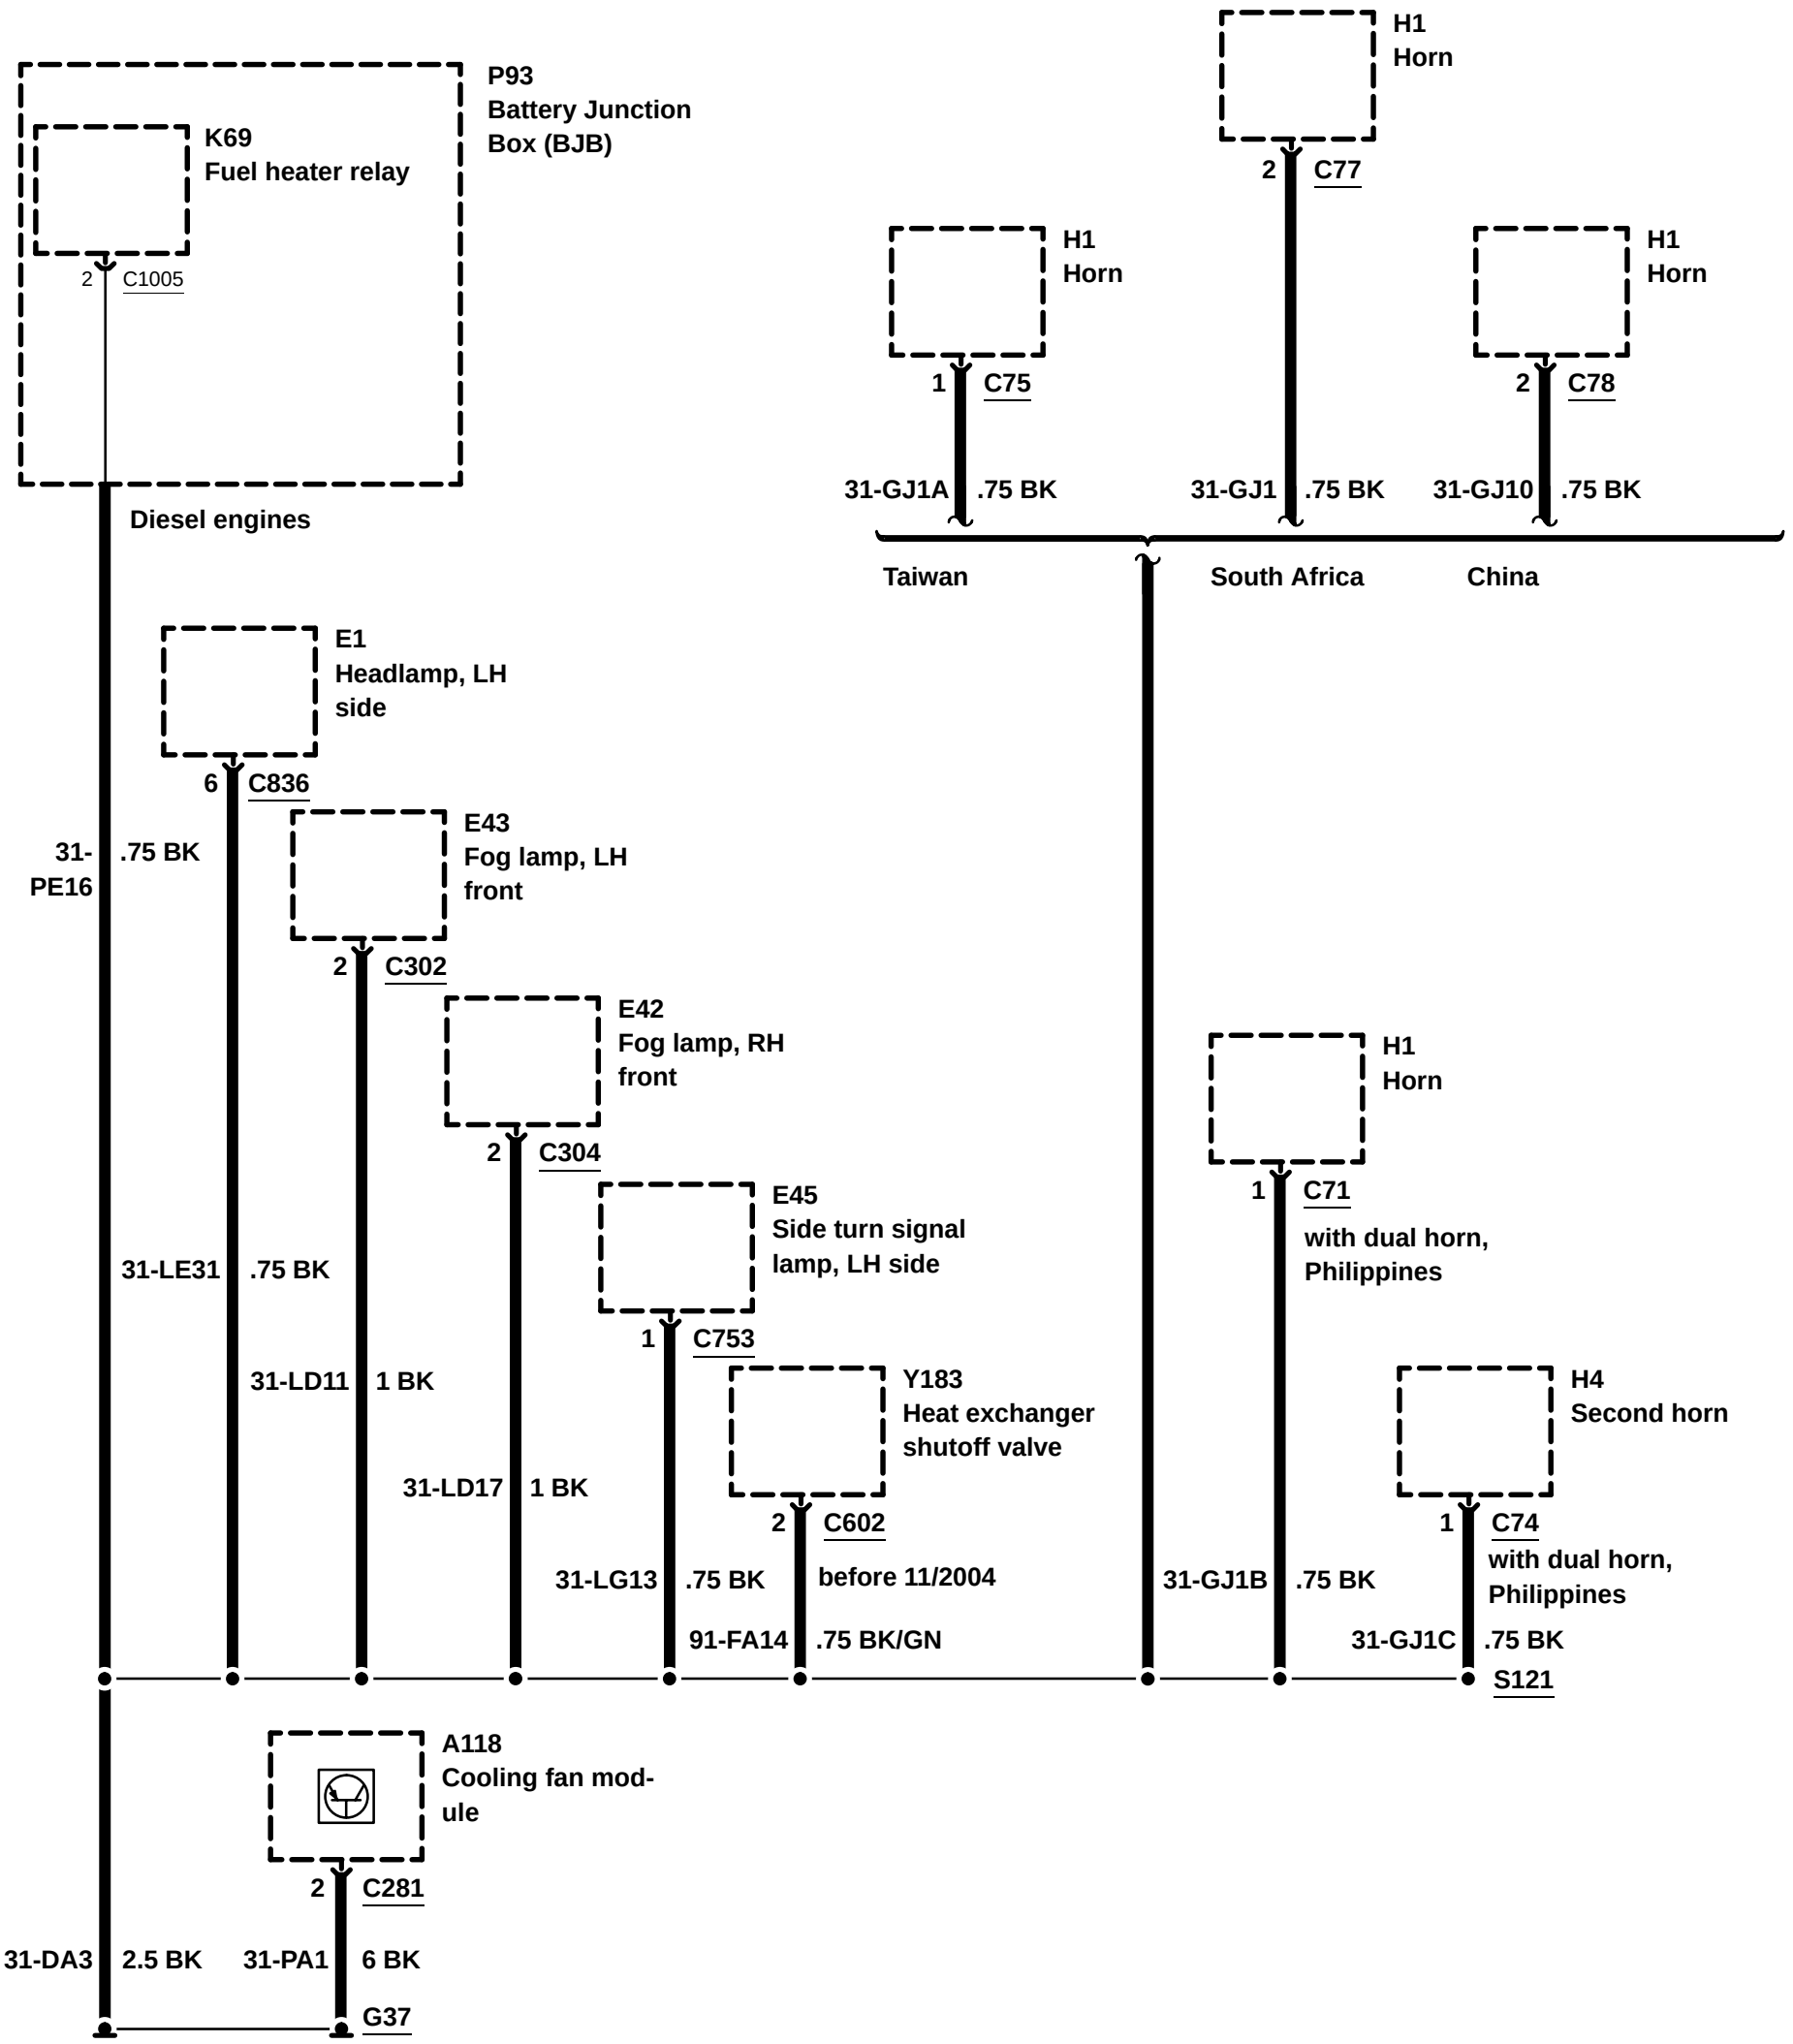


Ground Distribution – G45, LHD

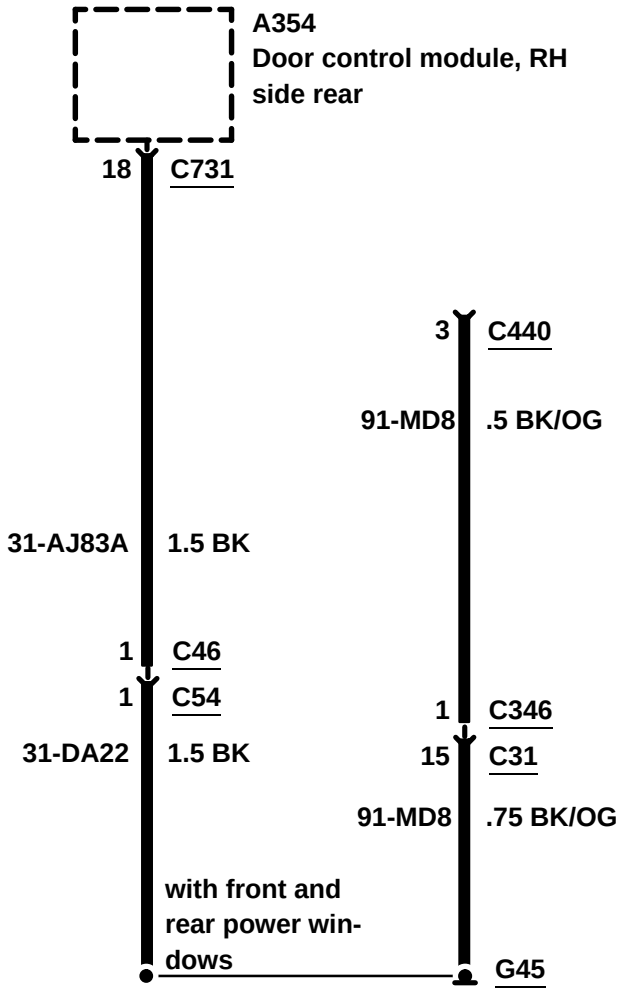


Ground Distribution – G45, RHD

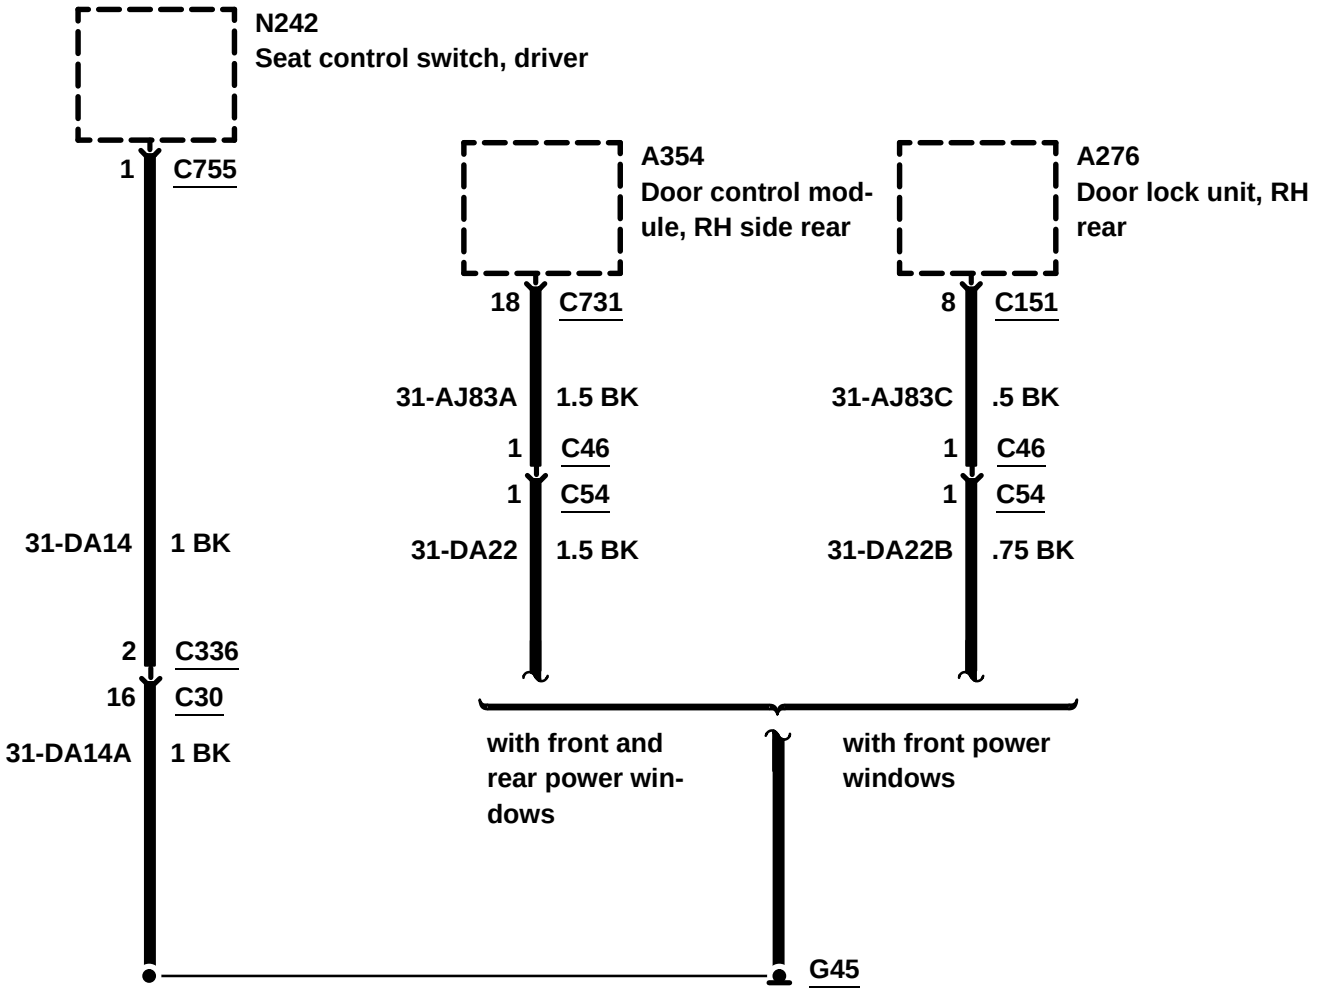


Ground Distribution – G53, LHD, with front power windows

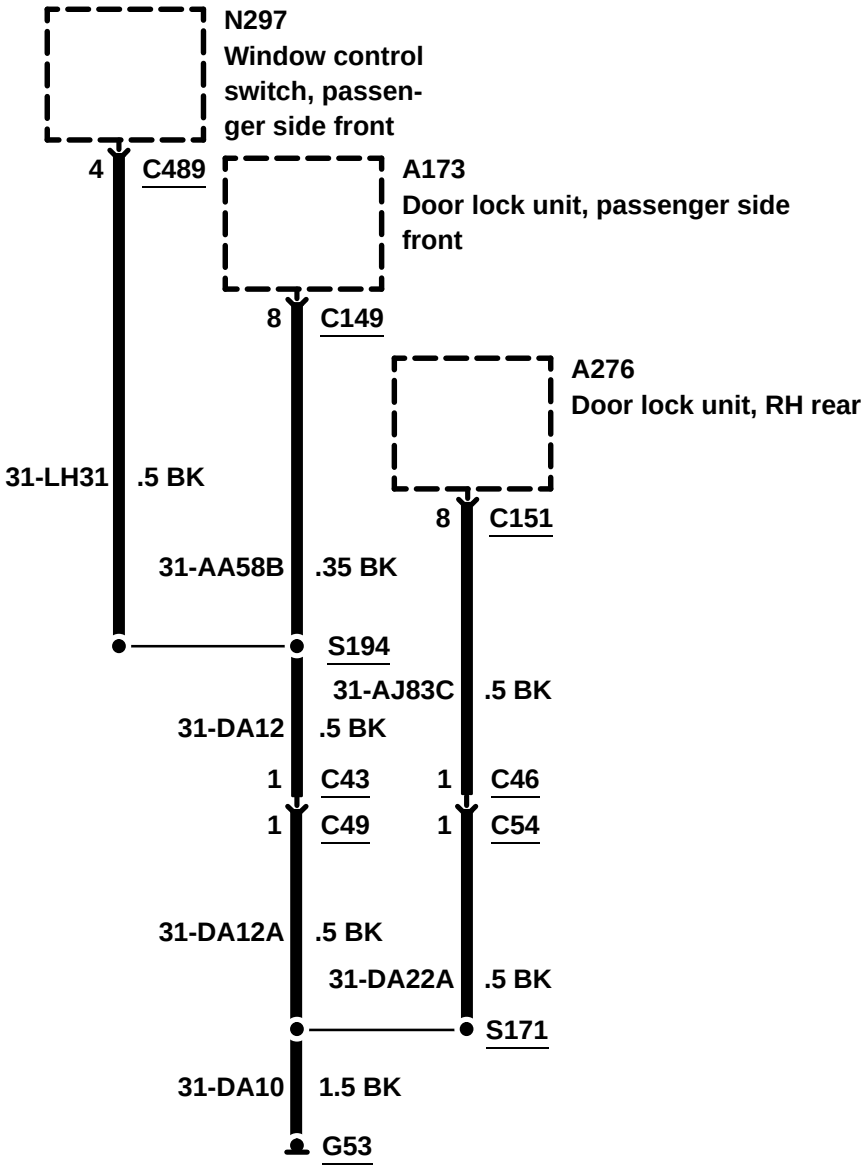


Ground Distribution – G53, RHD, with front power windows

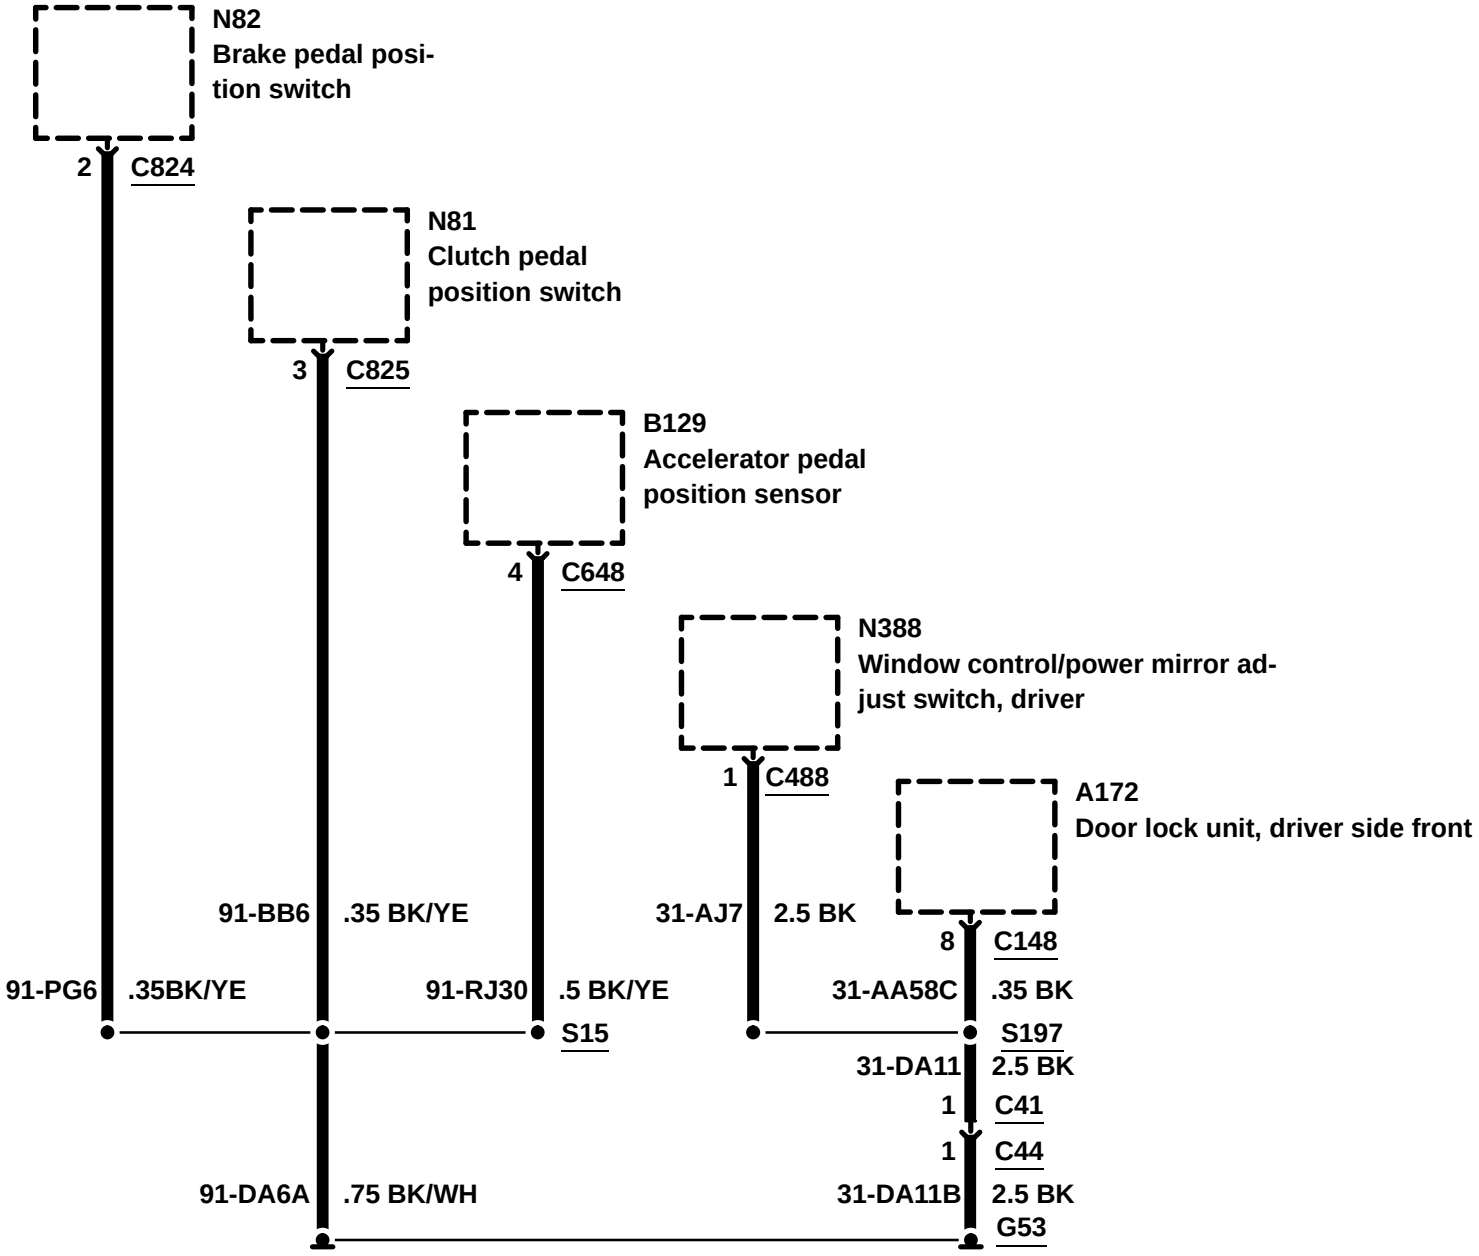


Ground Distribution – G53, LHD, with front and rear power windows

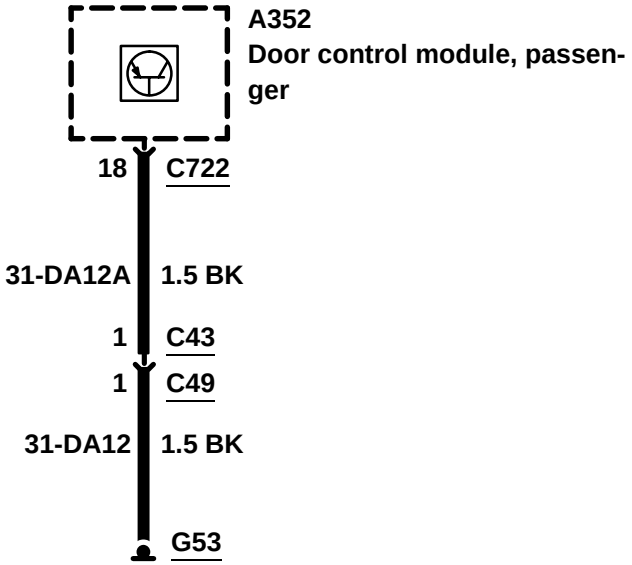


Ground Distribution – G53, RHD, with front and rear power windows

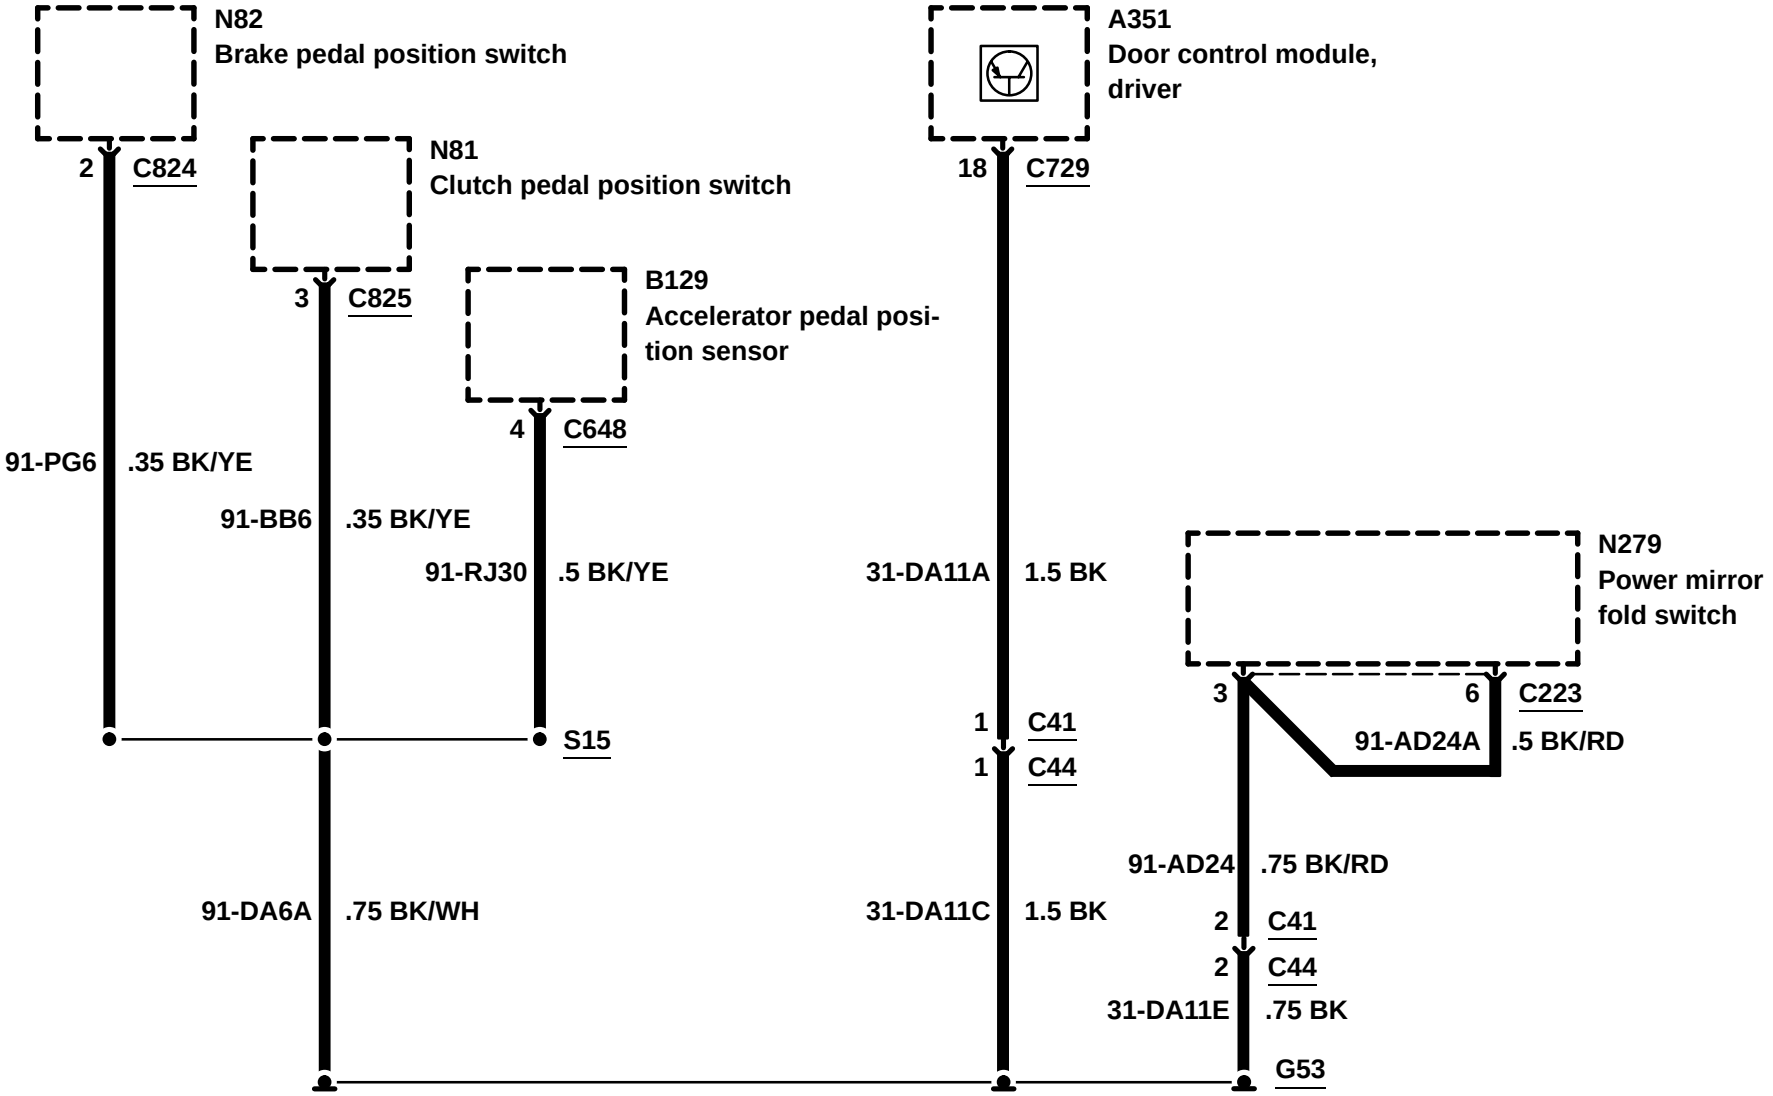


Ground Distribution – G55

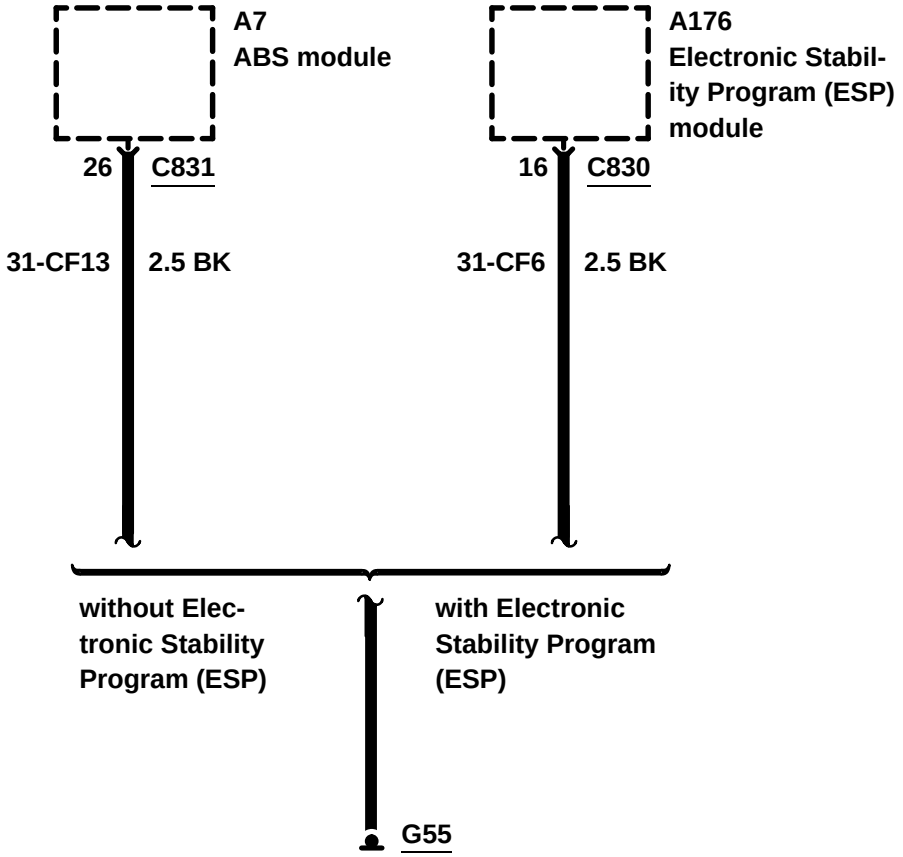

Ground Distribution – G56

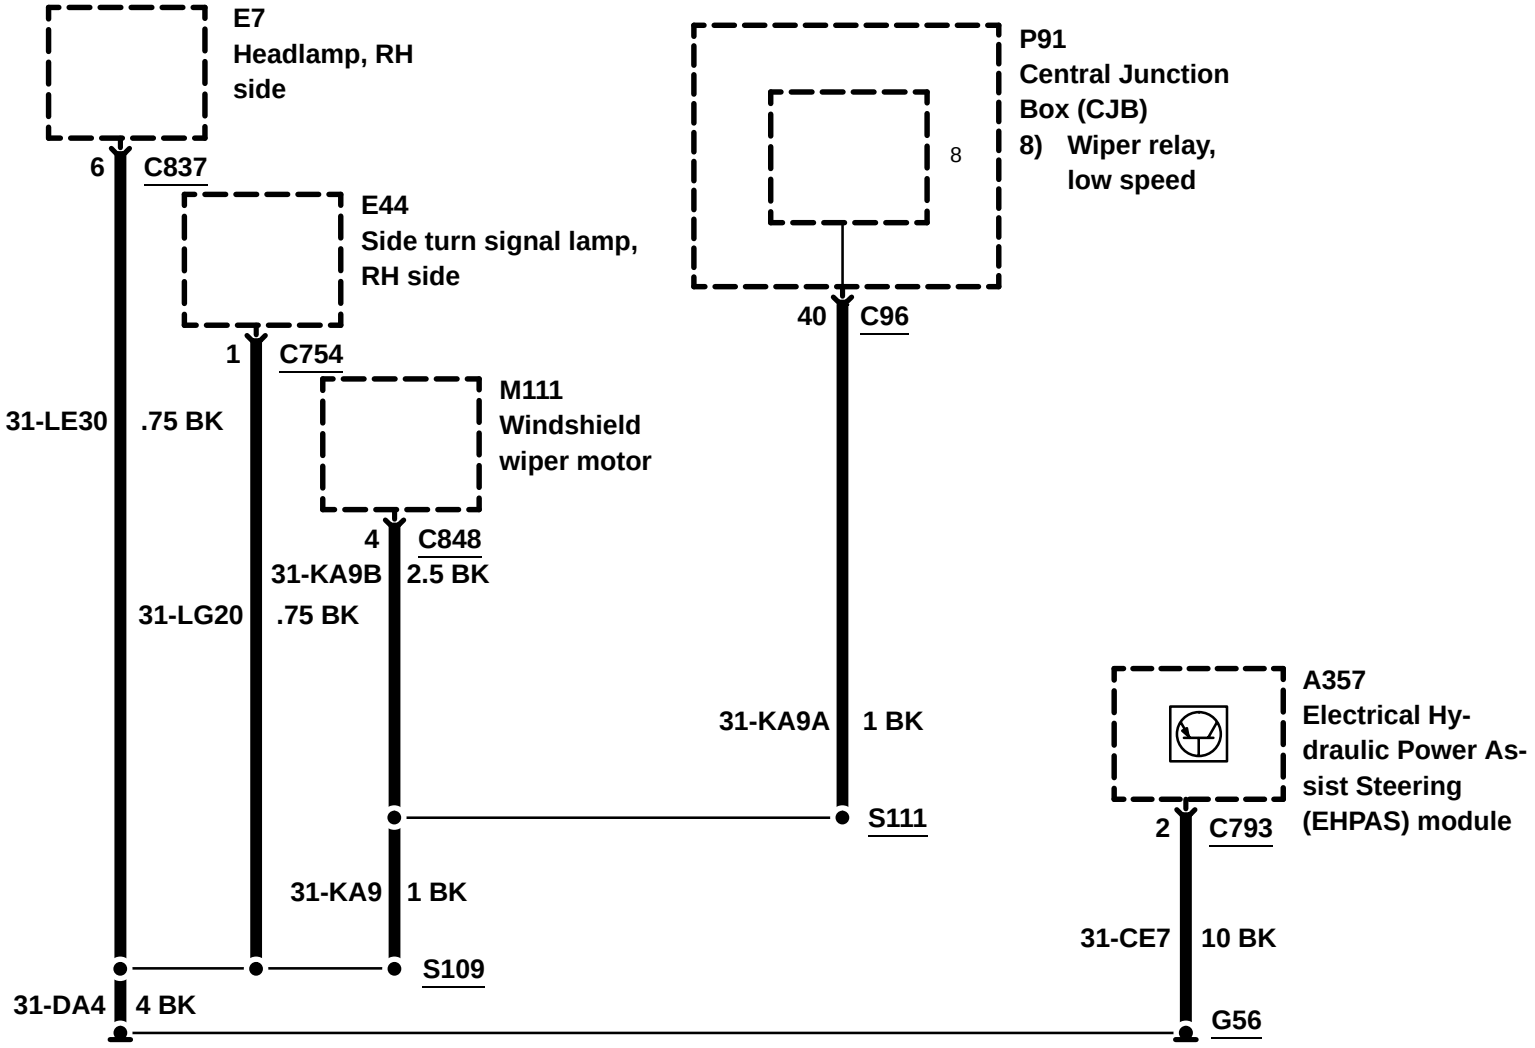


Ground Distribution – G57, 2.0L Duratorq–TDCi (DW) Diesel

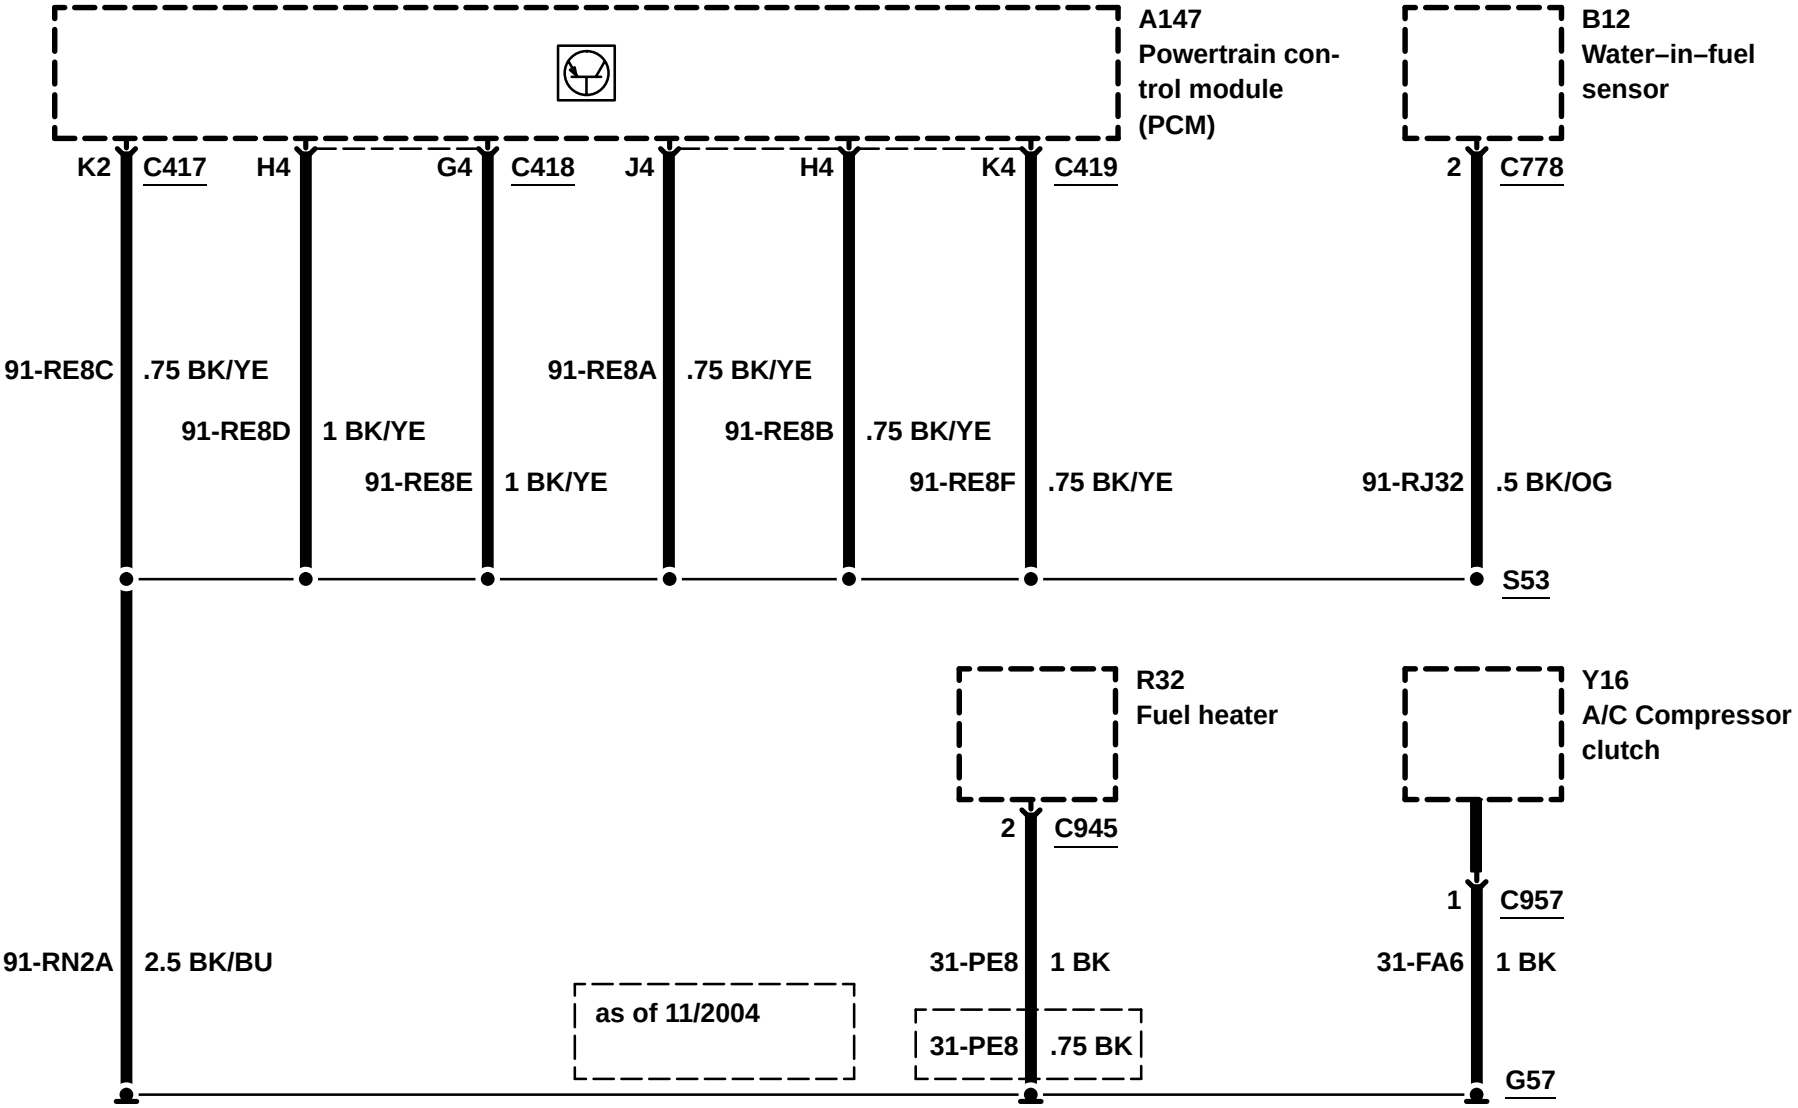


Ground Distribution – G58, 1.6L (Z6)




Ground Distribution – G60, 1.6L (Z6)

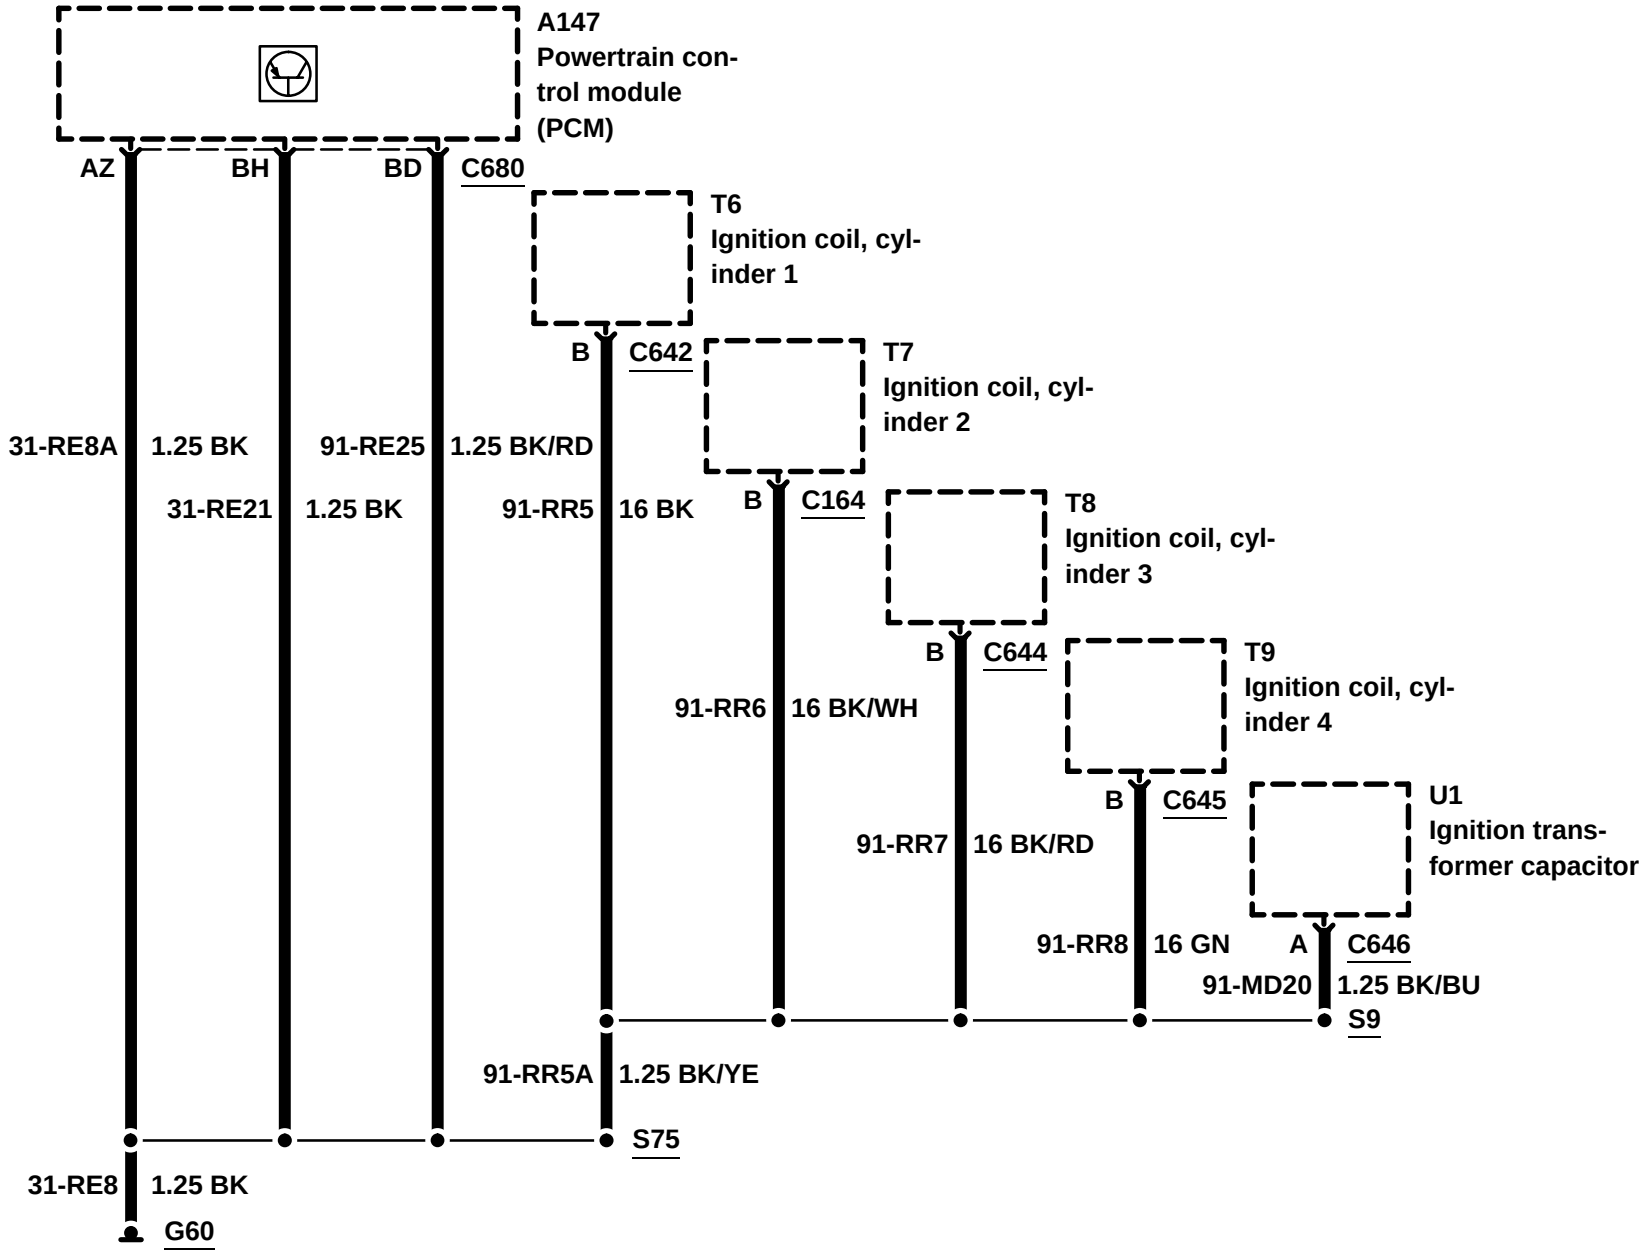


Ground Distribution – G63

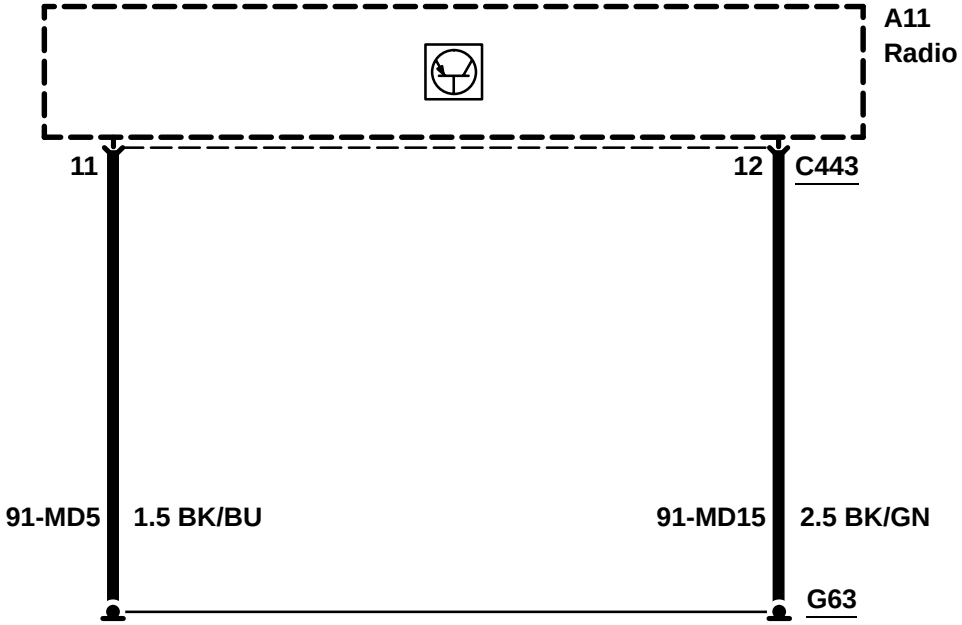


Ground Distribution – G64, 1.6L (Z6), manual transmission

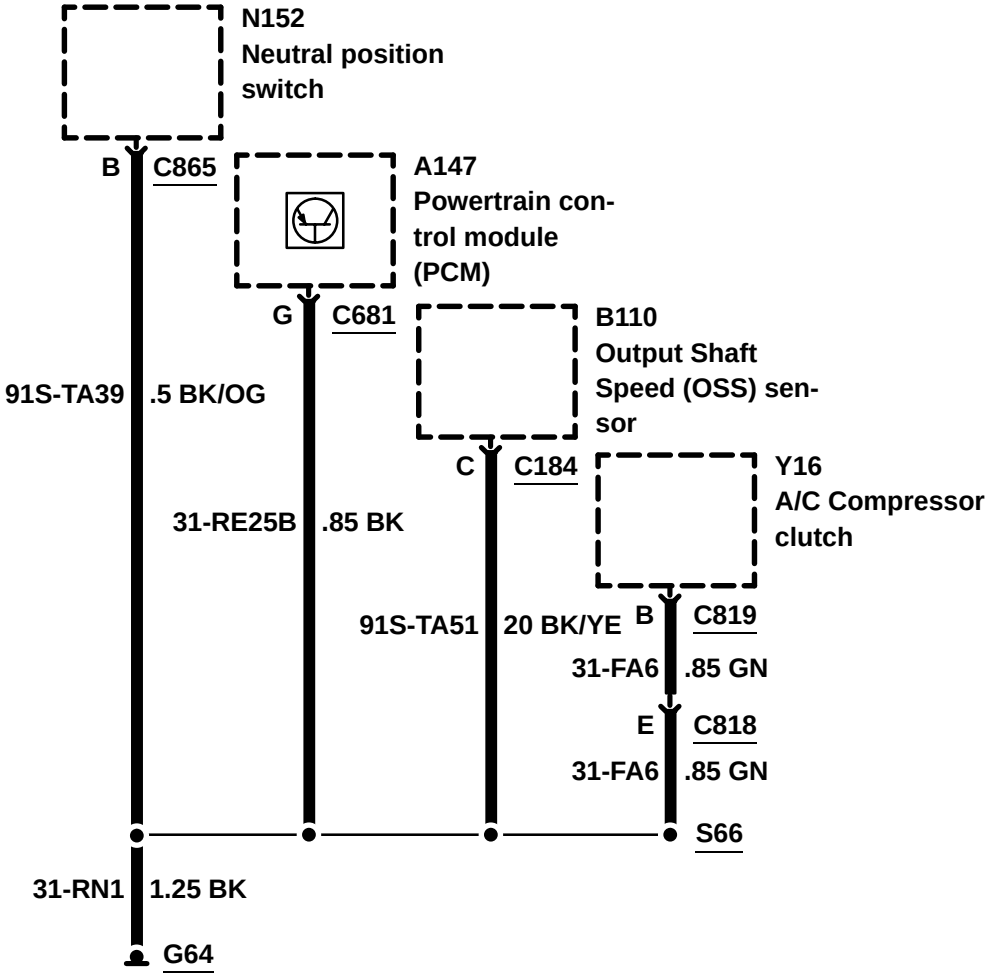


Ground Distribution – G64, 1.6L (Z6), automatic transmission

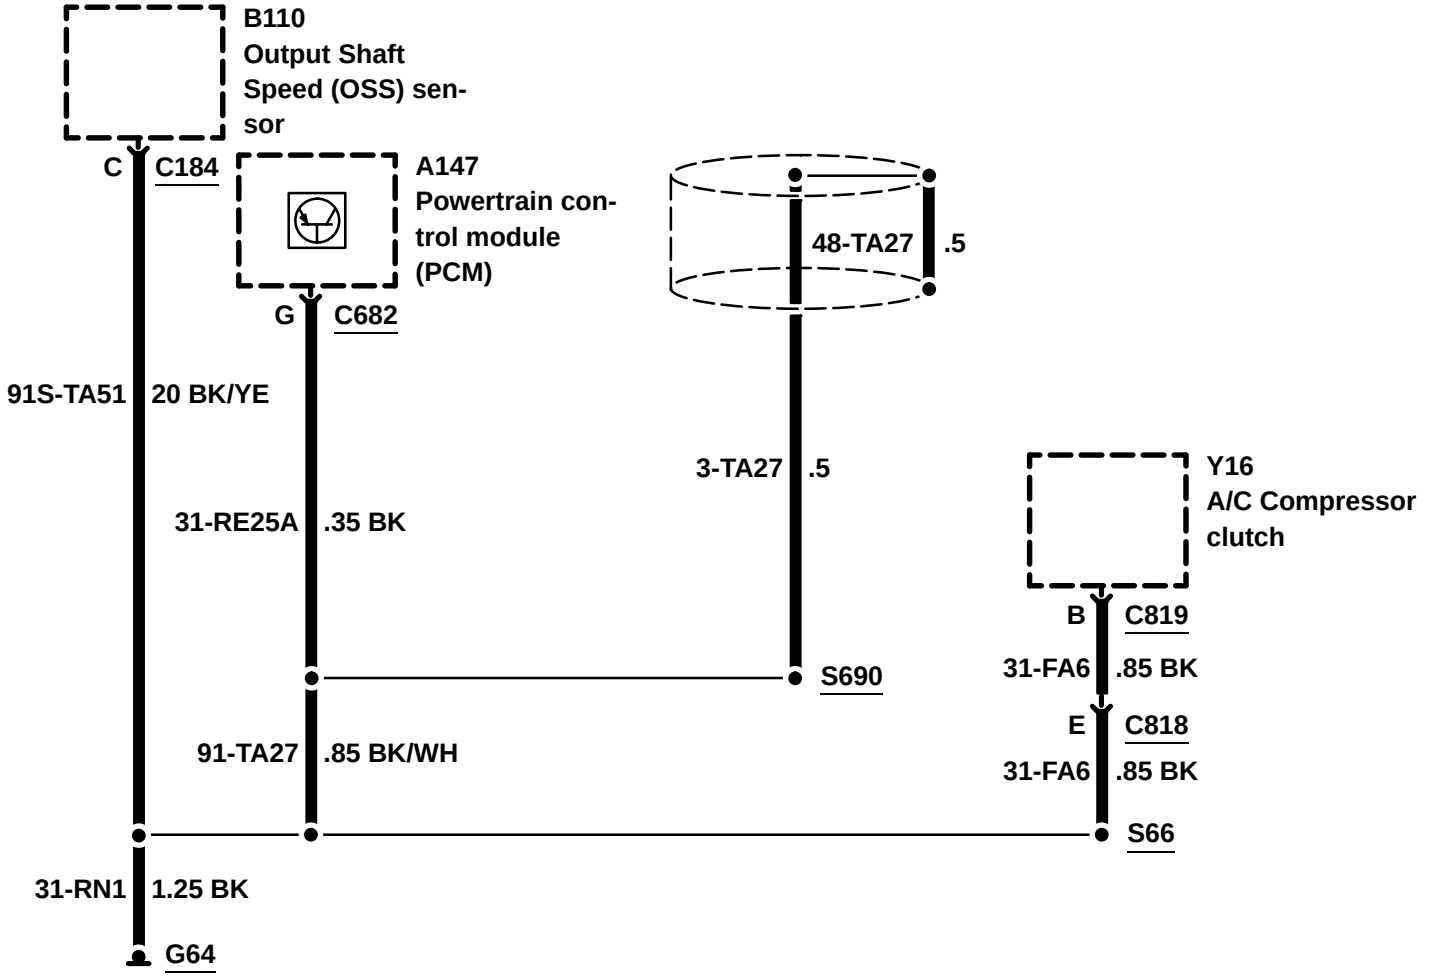


Ground Distribution – G68, 1.8/2.0L Duratec–HE (MI4), manual transmission

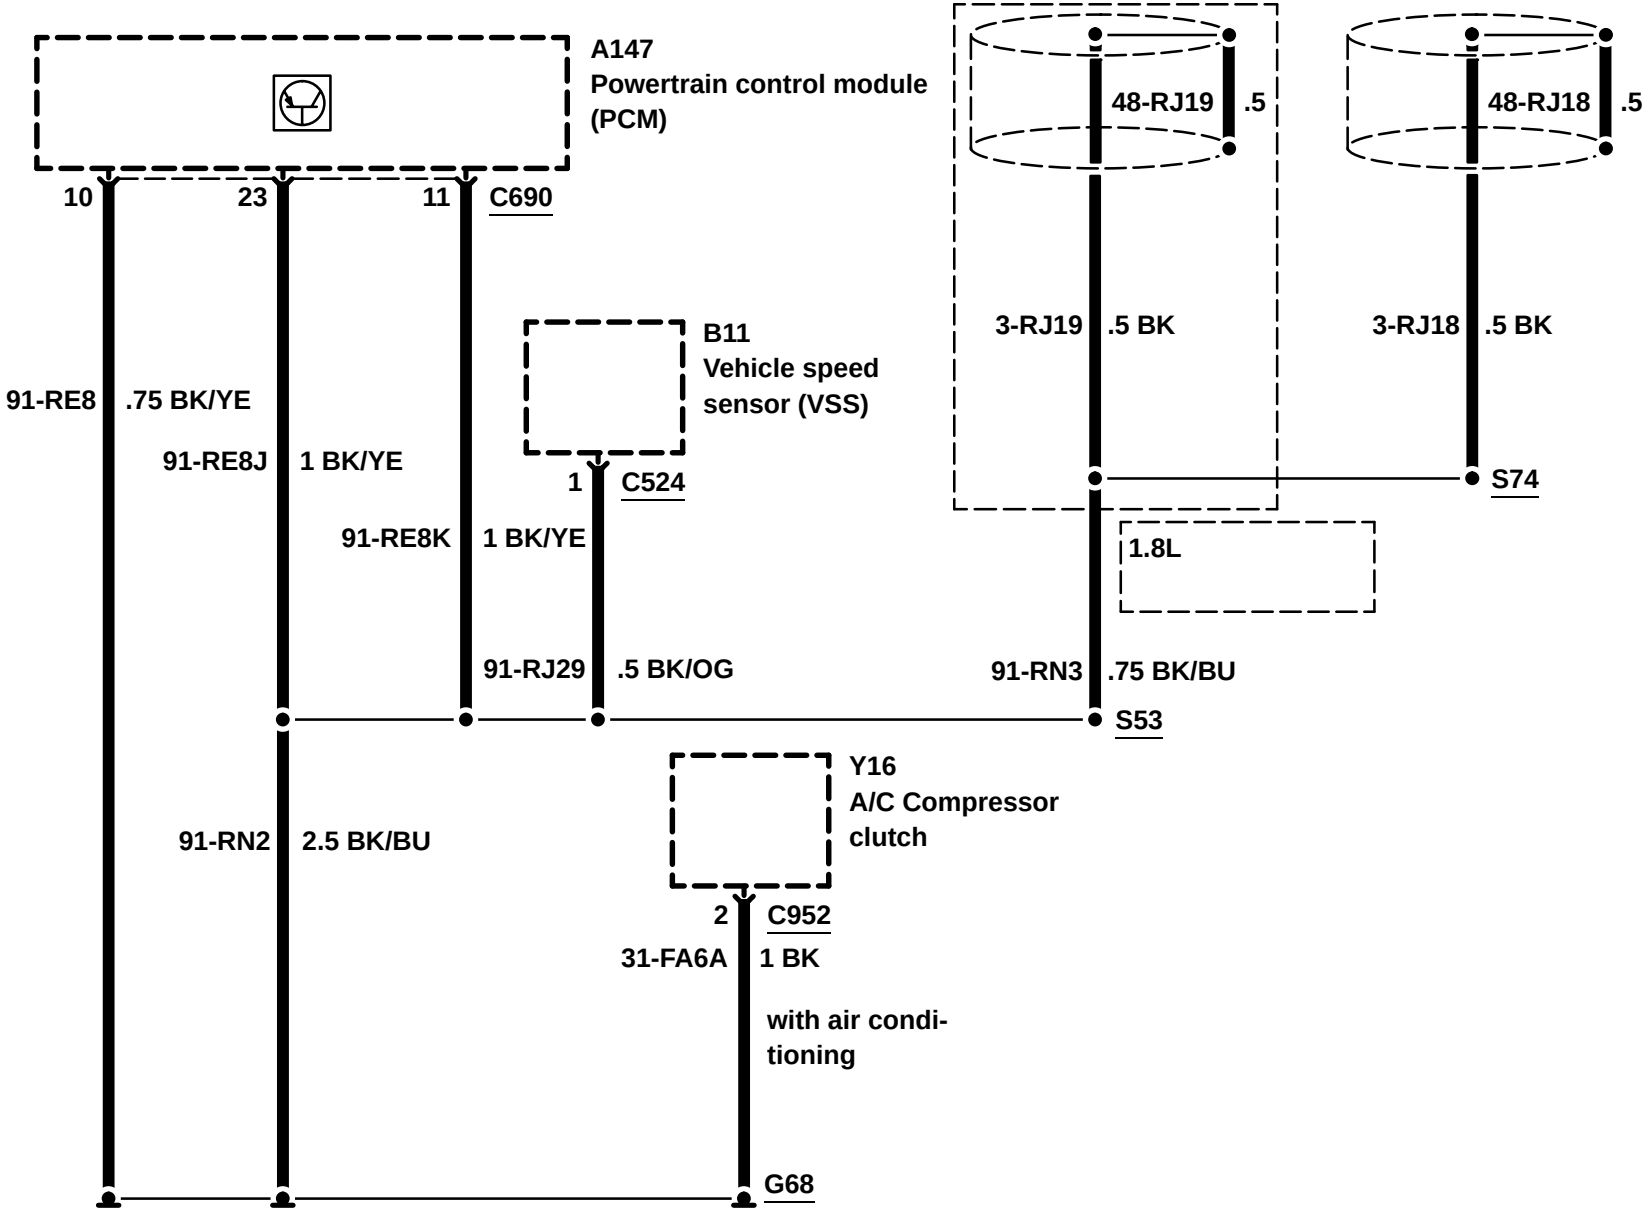


Ground Distribution – G68, 1.8/2.0L Duratec–HE (MI4), 4–speed automatic transmission (4F27E)

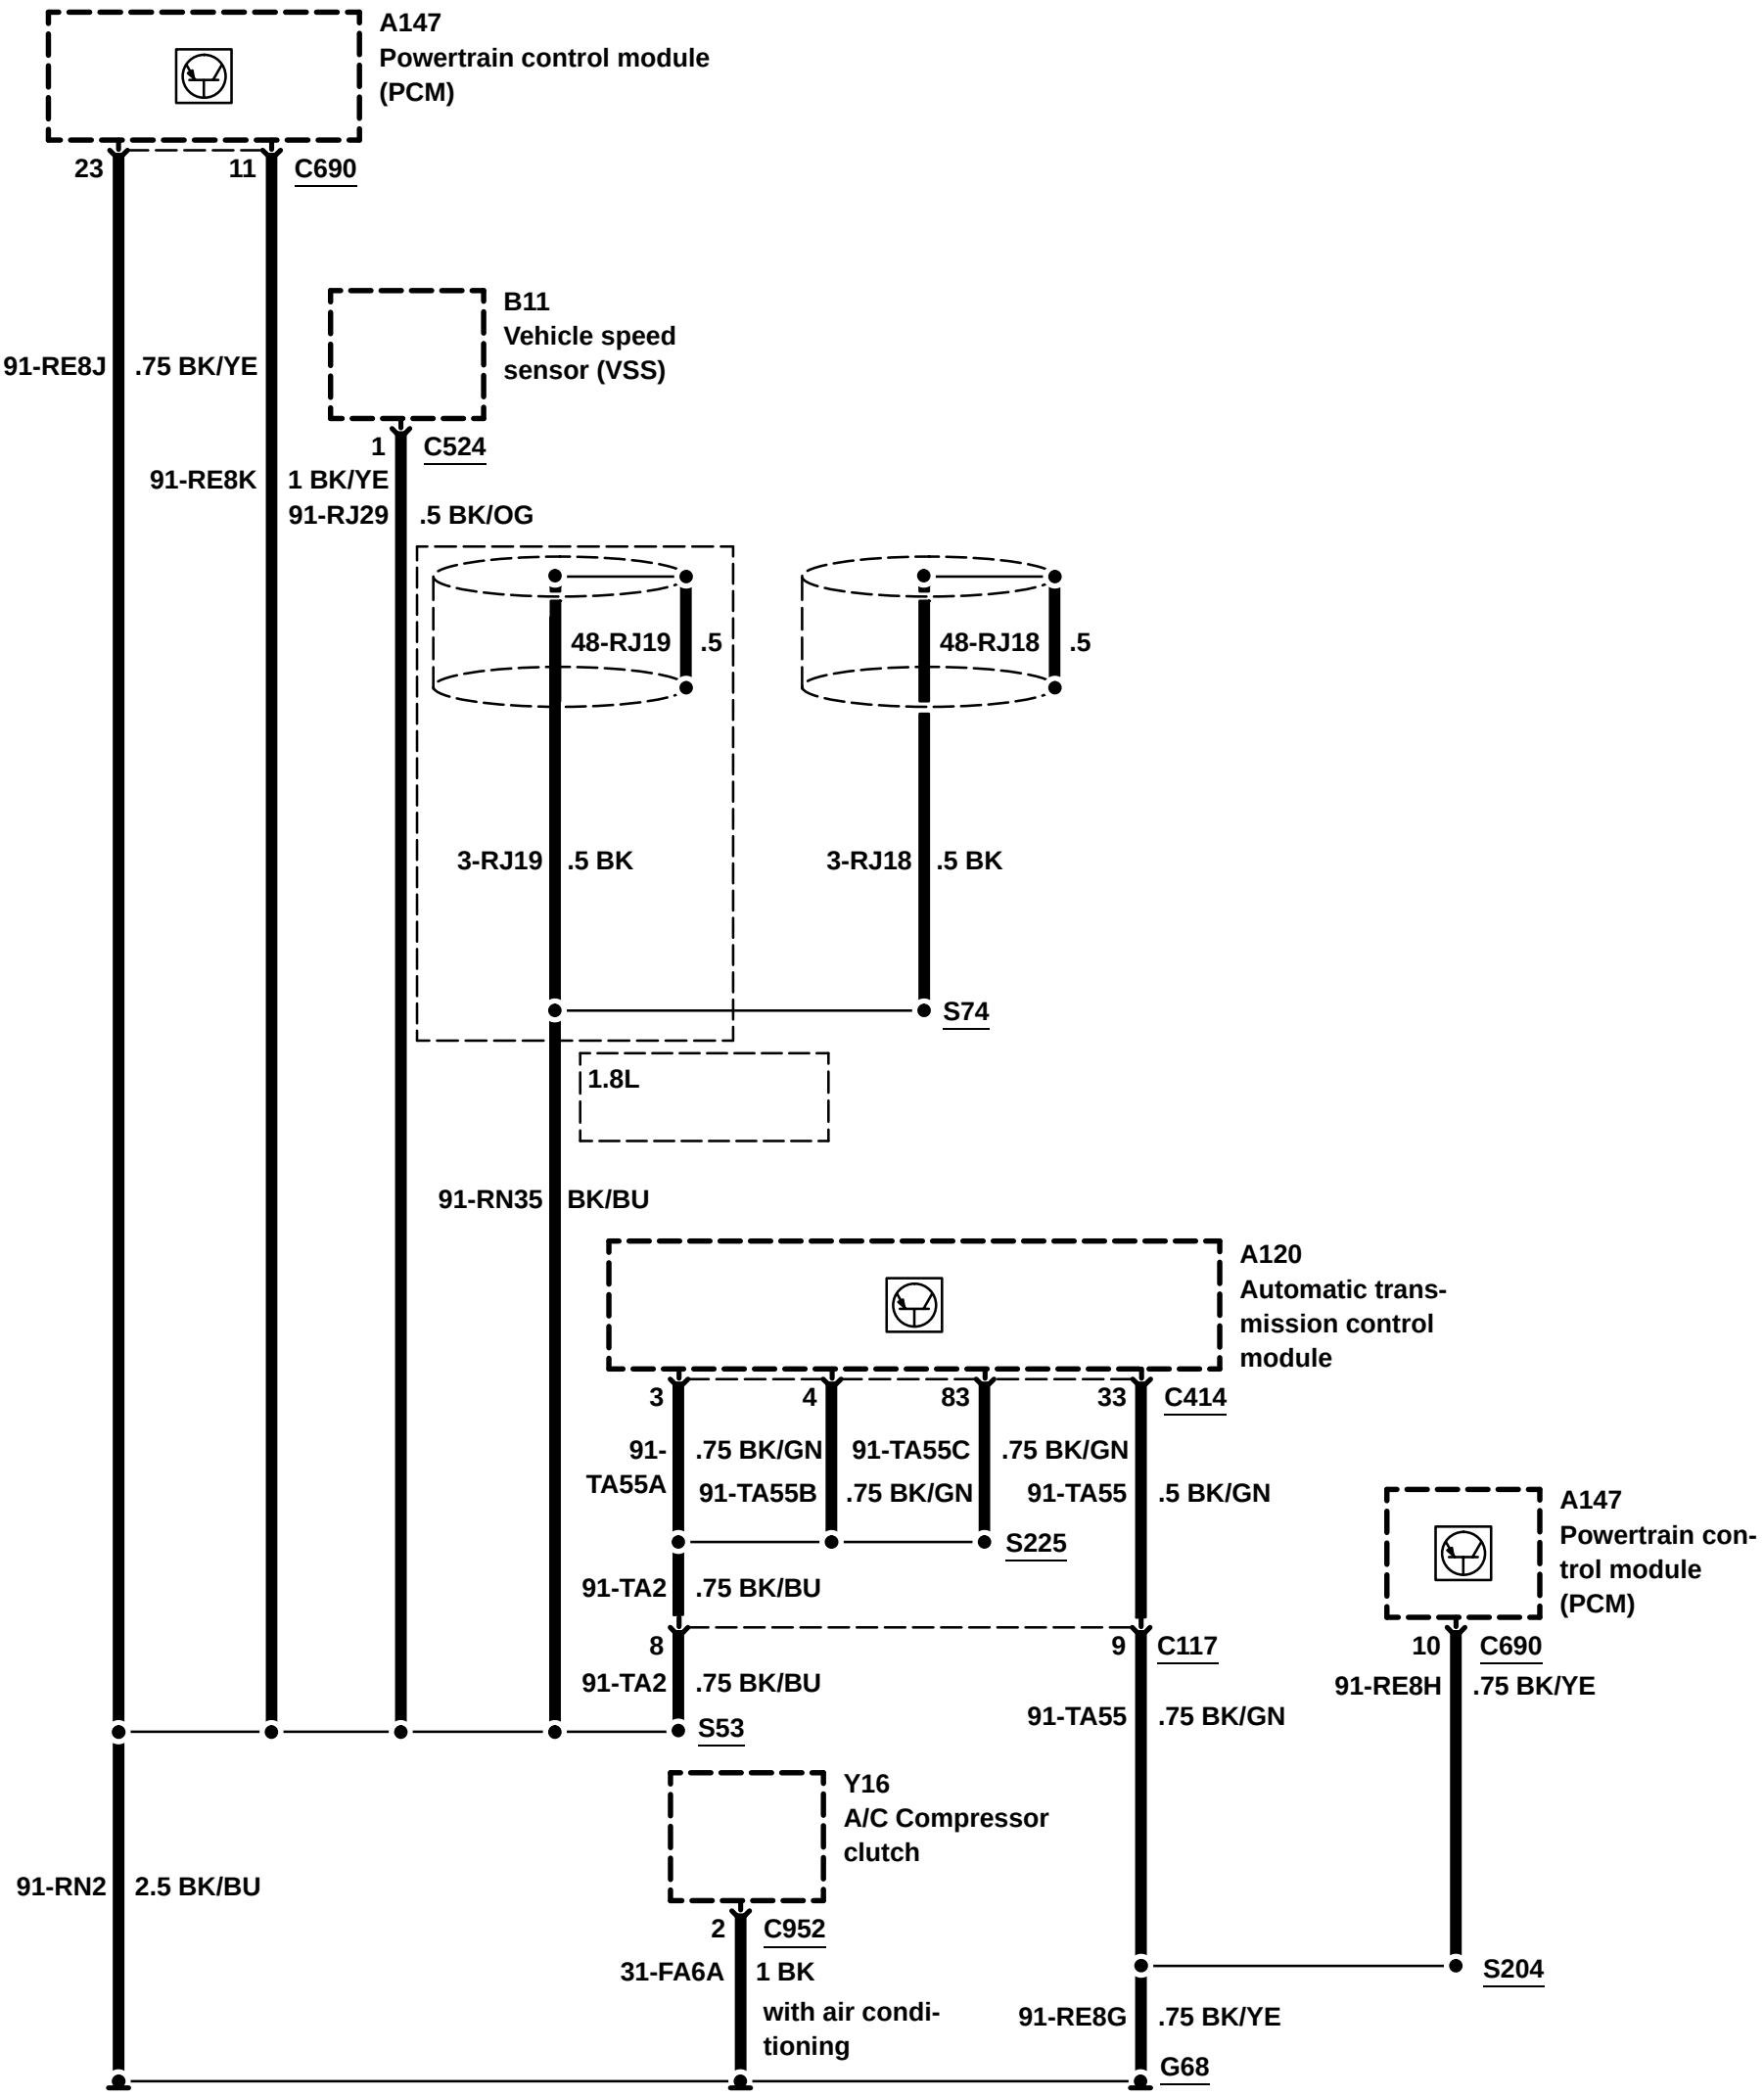


Ground Distribution – G70, 4–door model

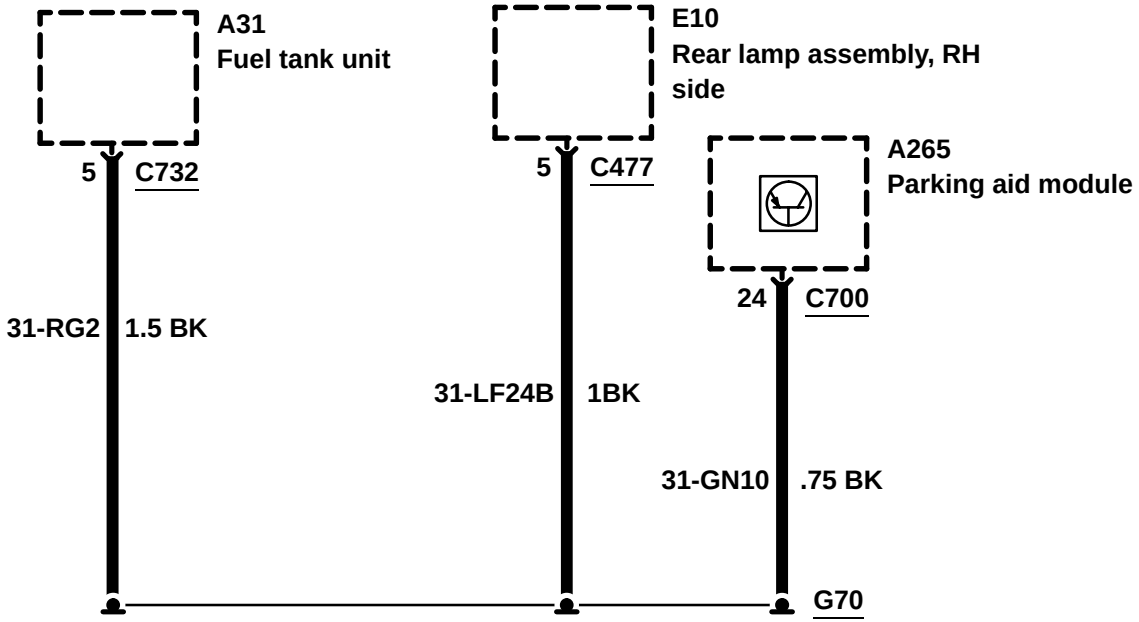


Ground Distribution – G70, 5–door model

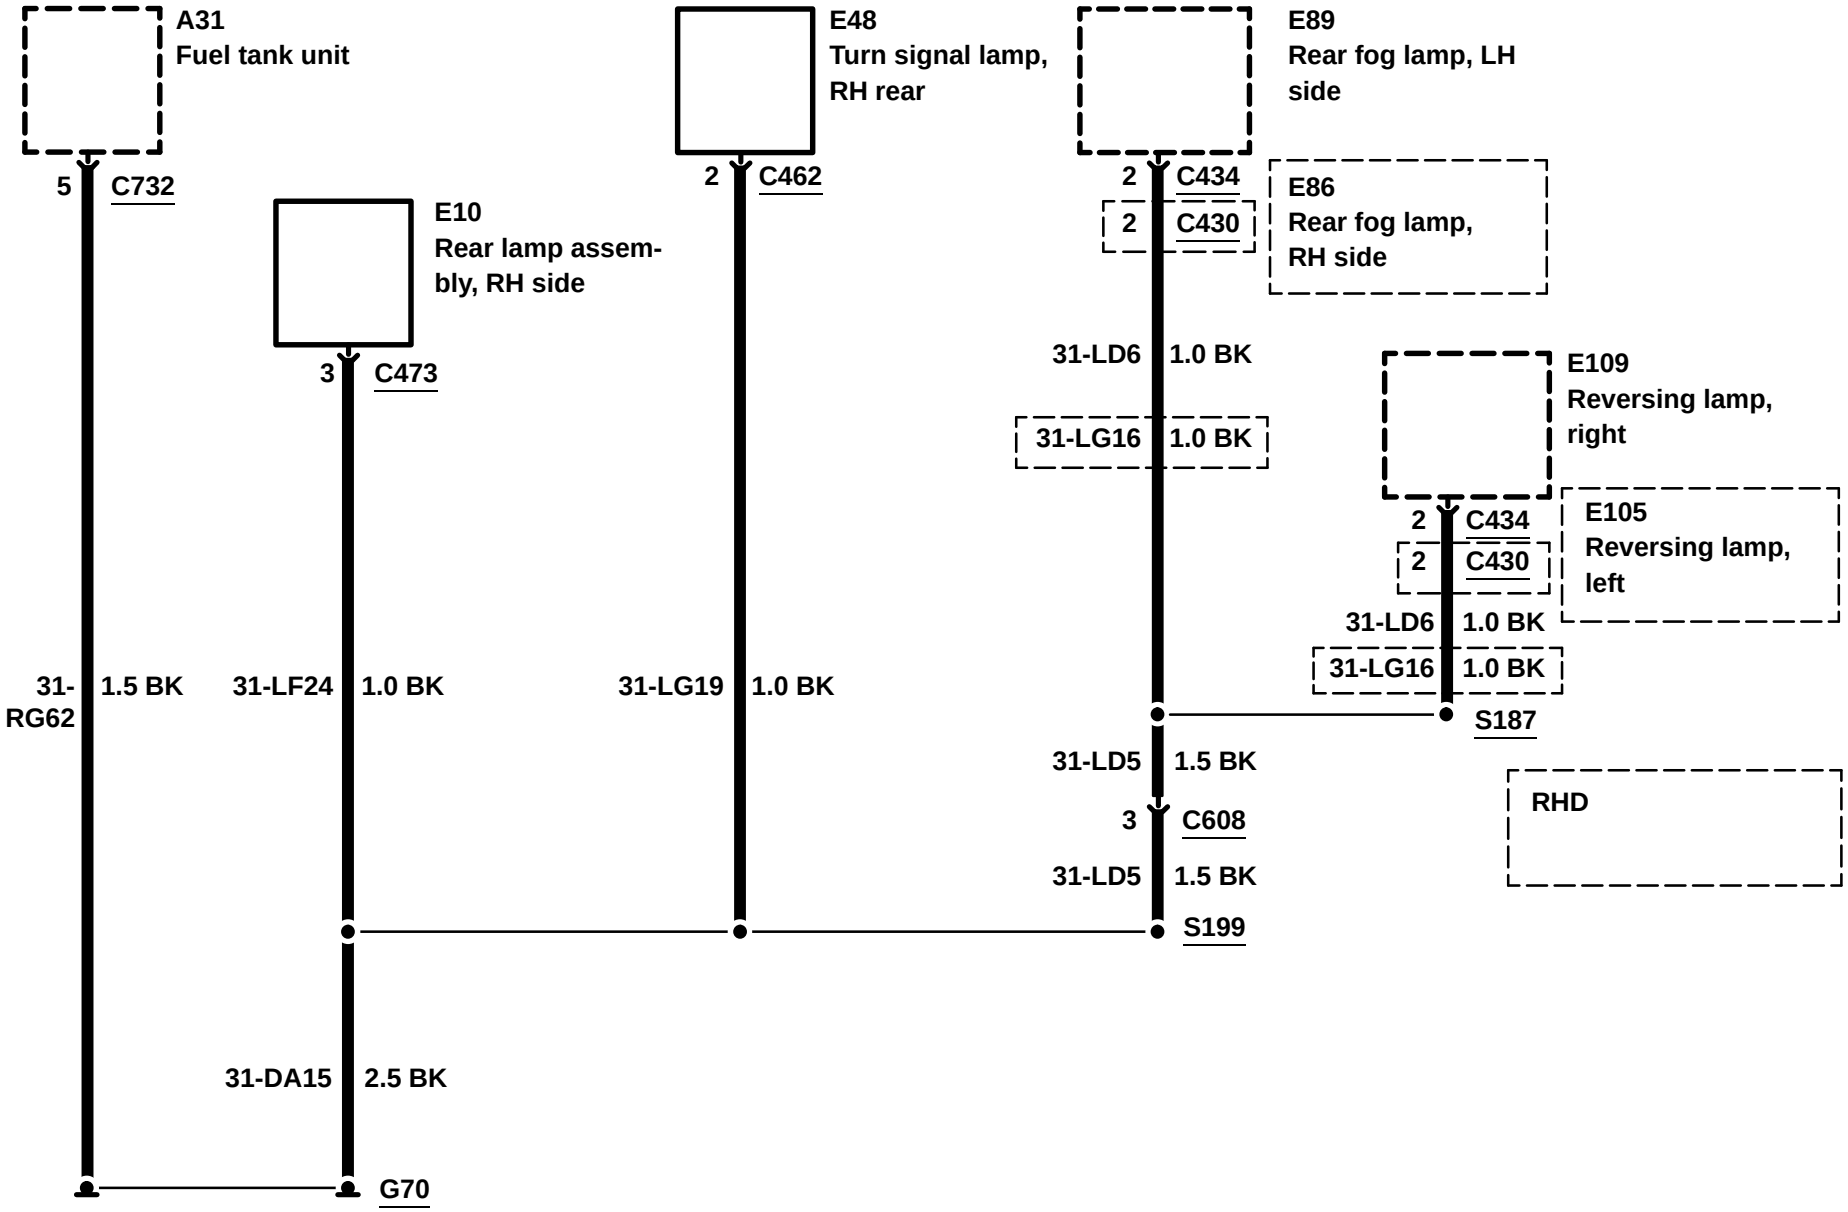

Ground Distribution – G72

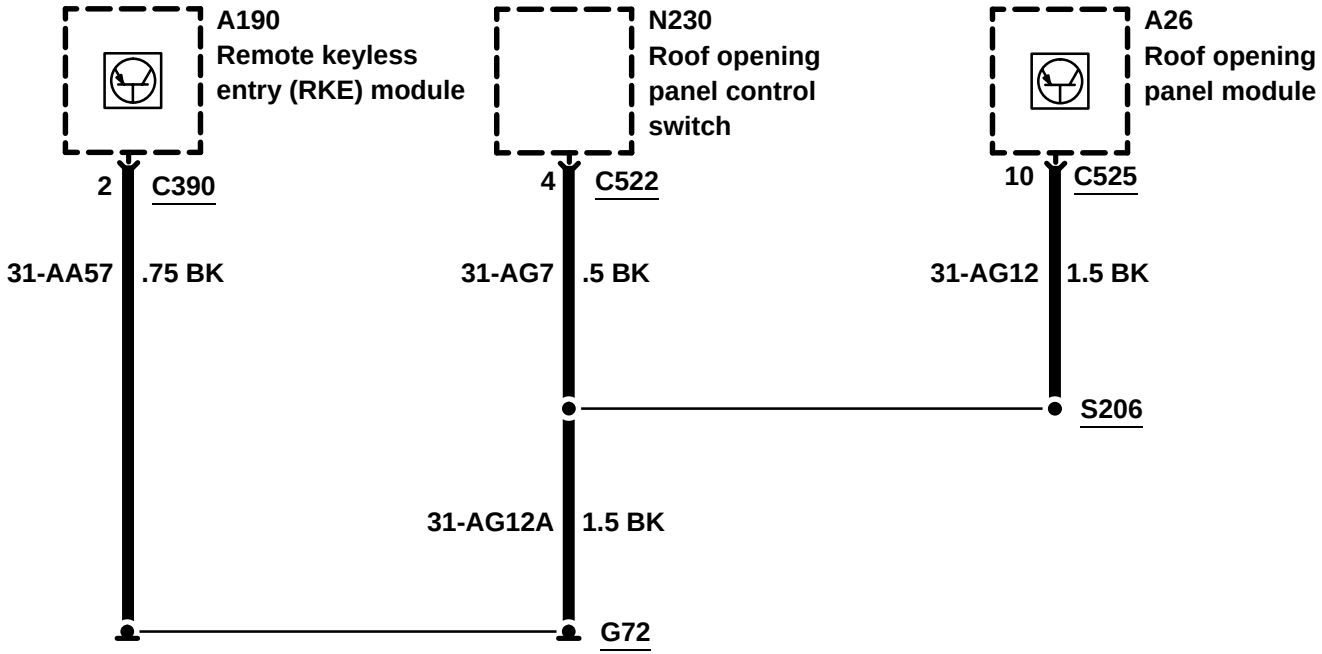


Ground Distribution – G74, 1.8/2.0L Duratec–HE (MI4)

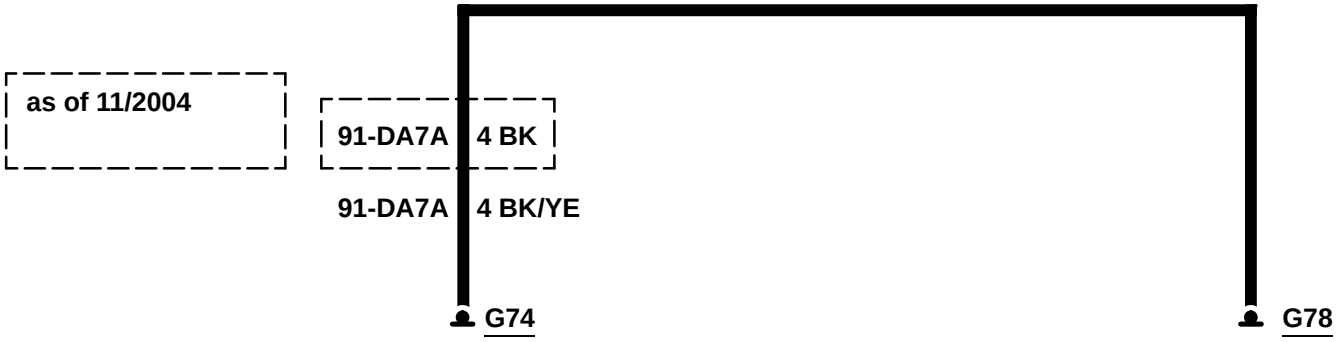

Ground Distribution – G74, 2.0L Duratorq–TDCi (DW) Diesel




Ground Distribution – G75, LHD

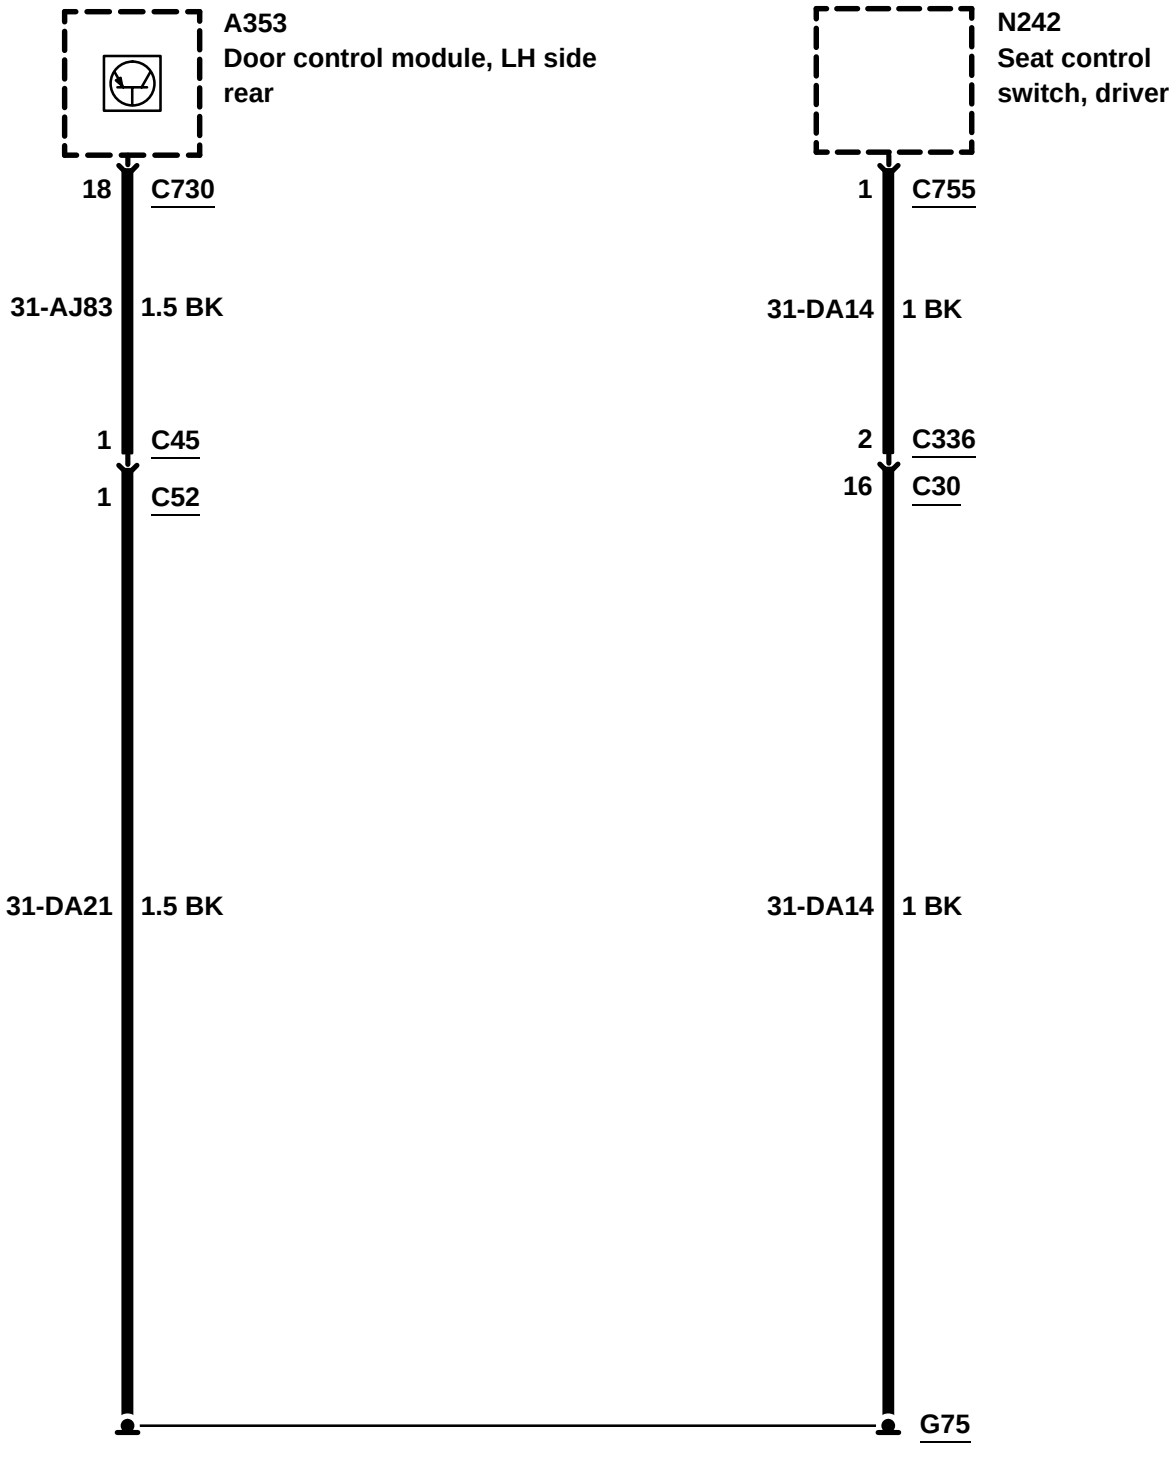


Ground Distribution – G75, RHD


03/2004
700-04-00-32
2005
Focus

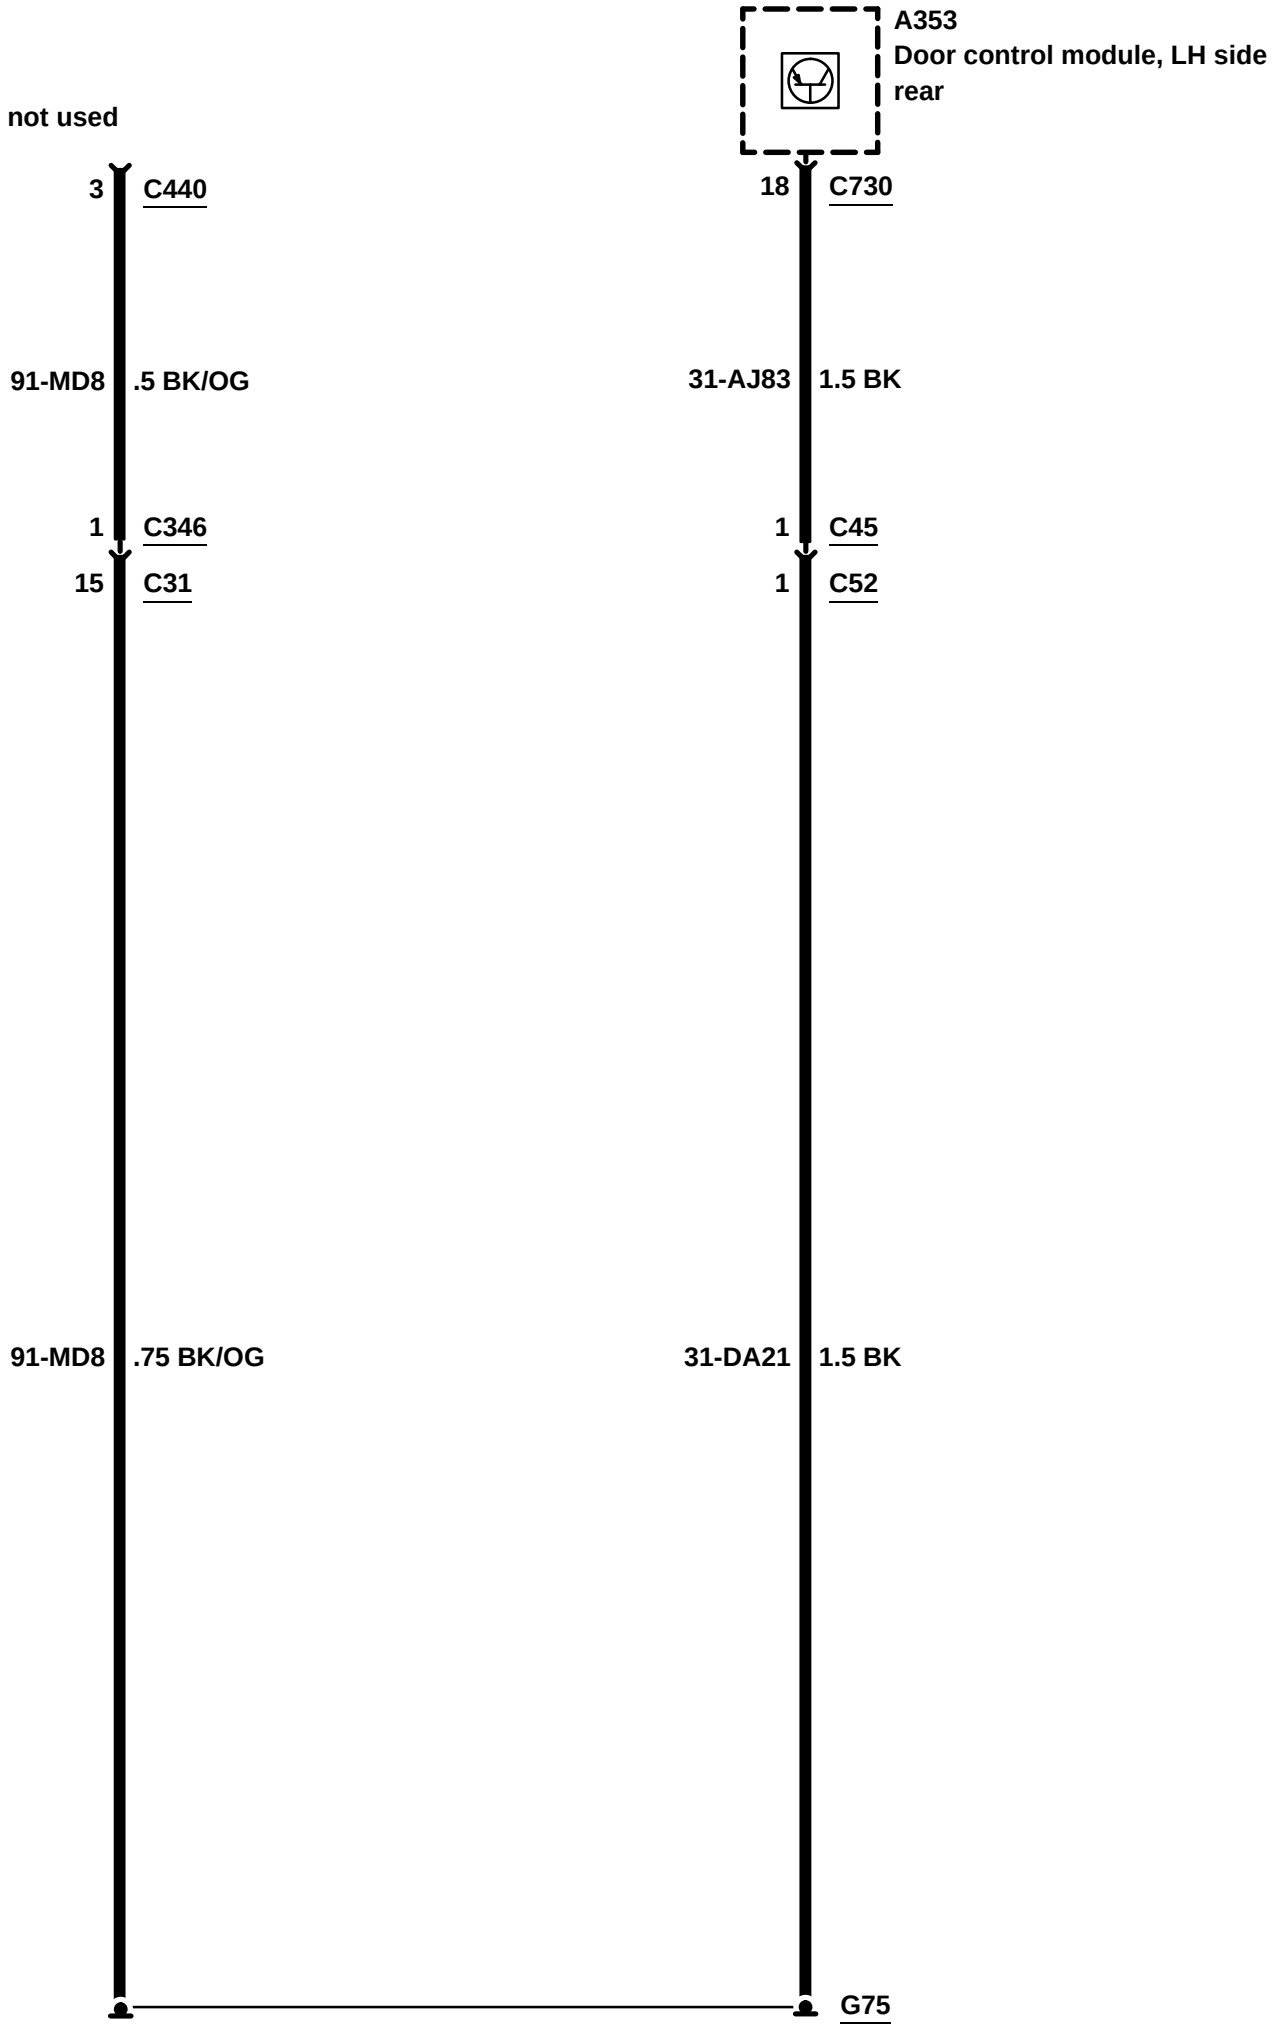


Ground Distribution – G77, 4–door model, except Philippines as of 08/2005

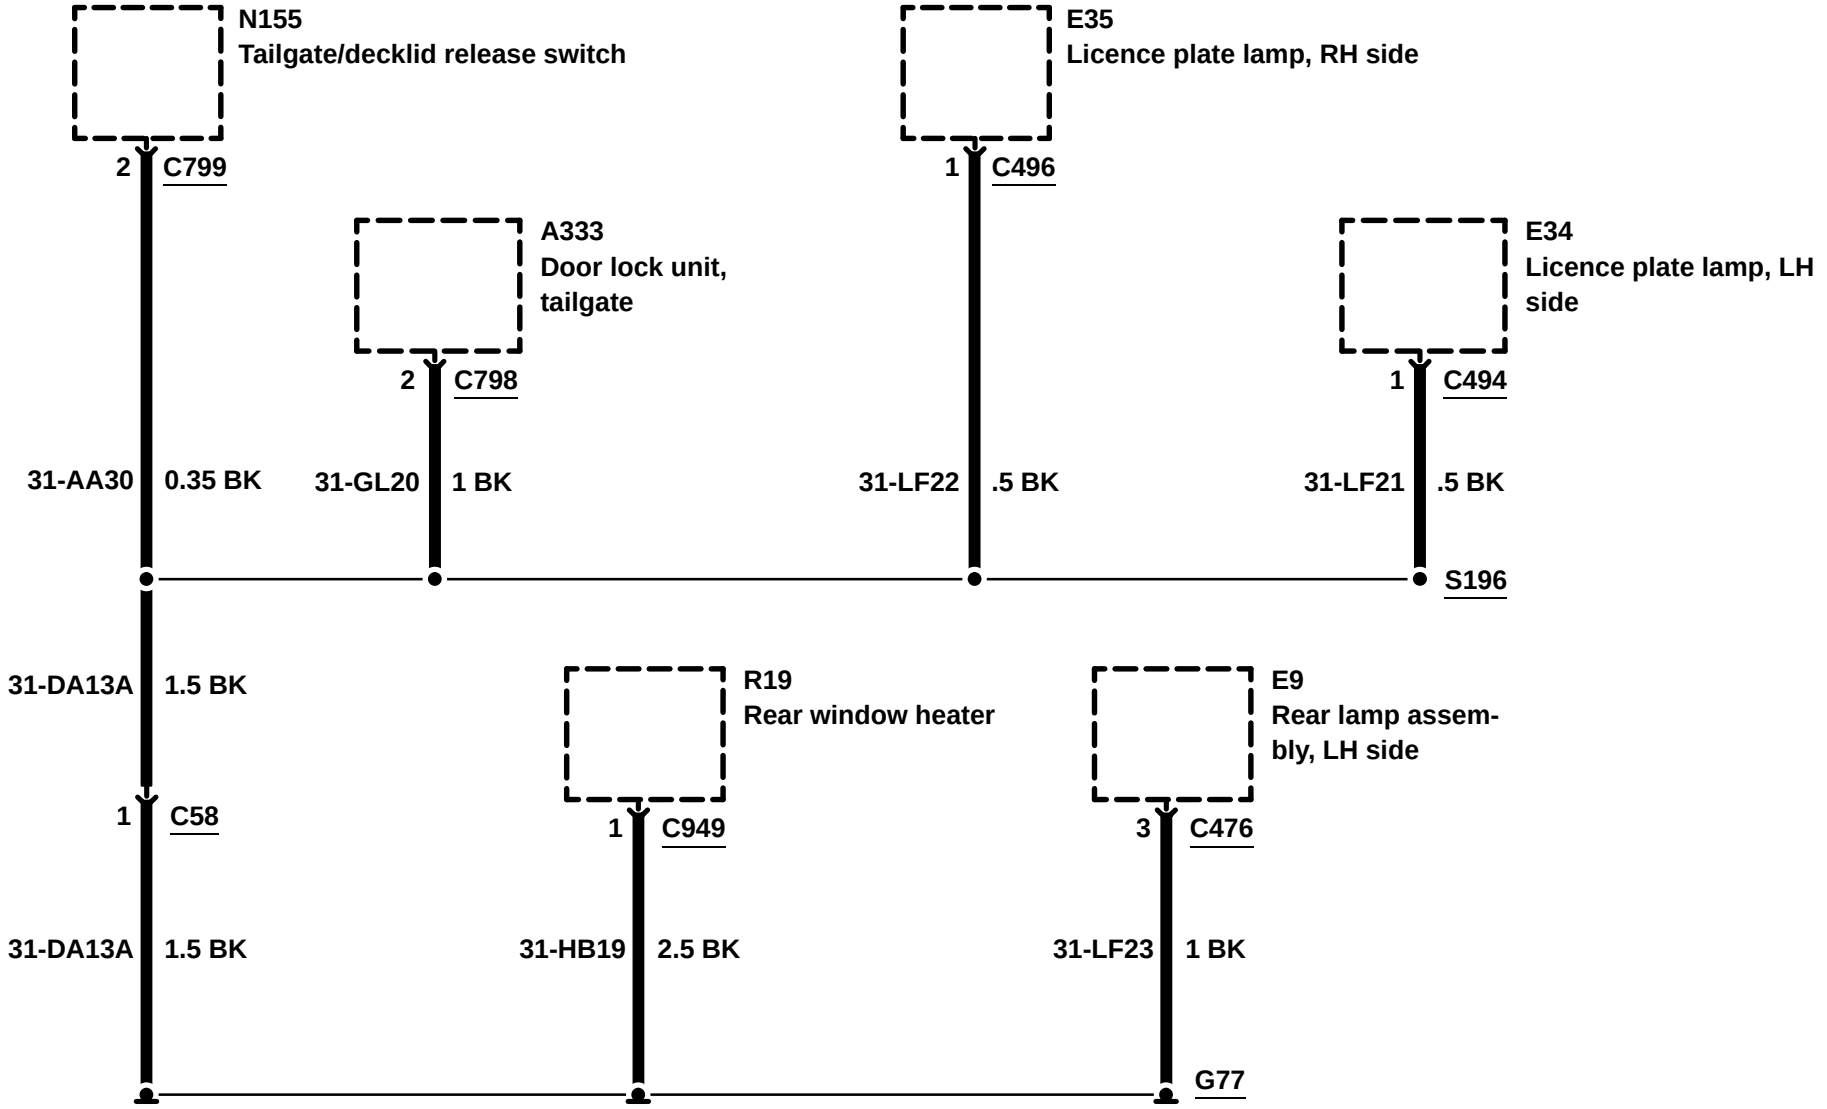


Ground Distribution – G77, 4–door model, Philippines as of 08/2005

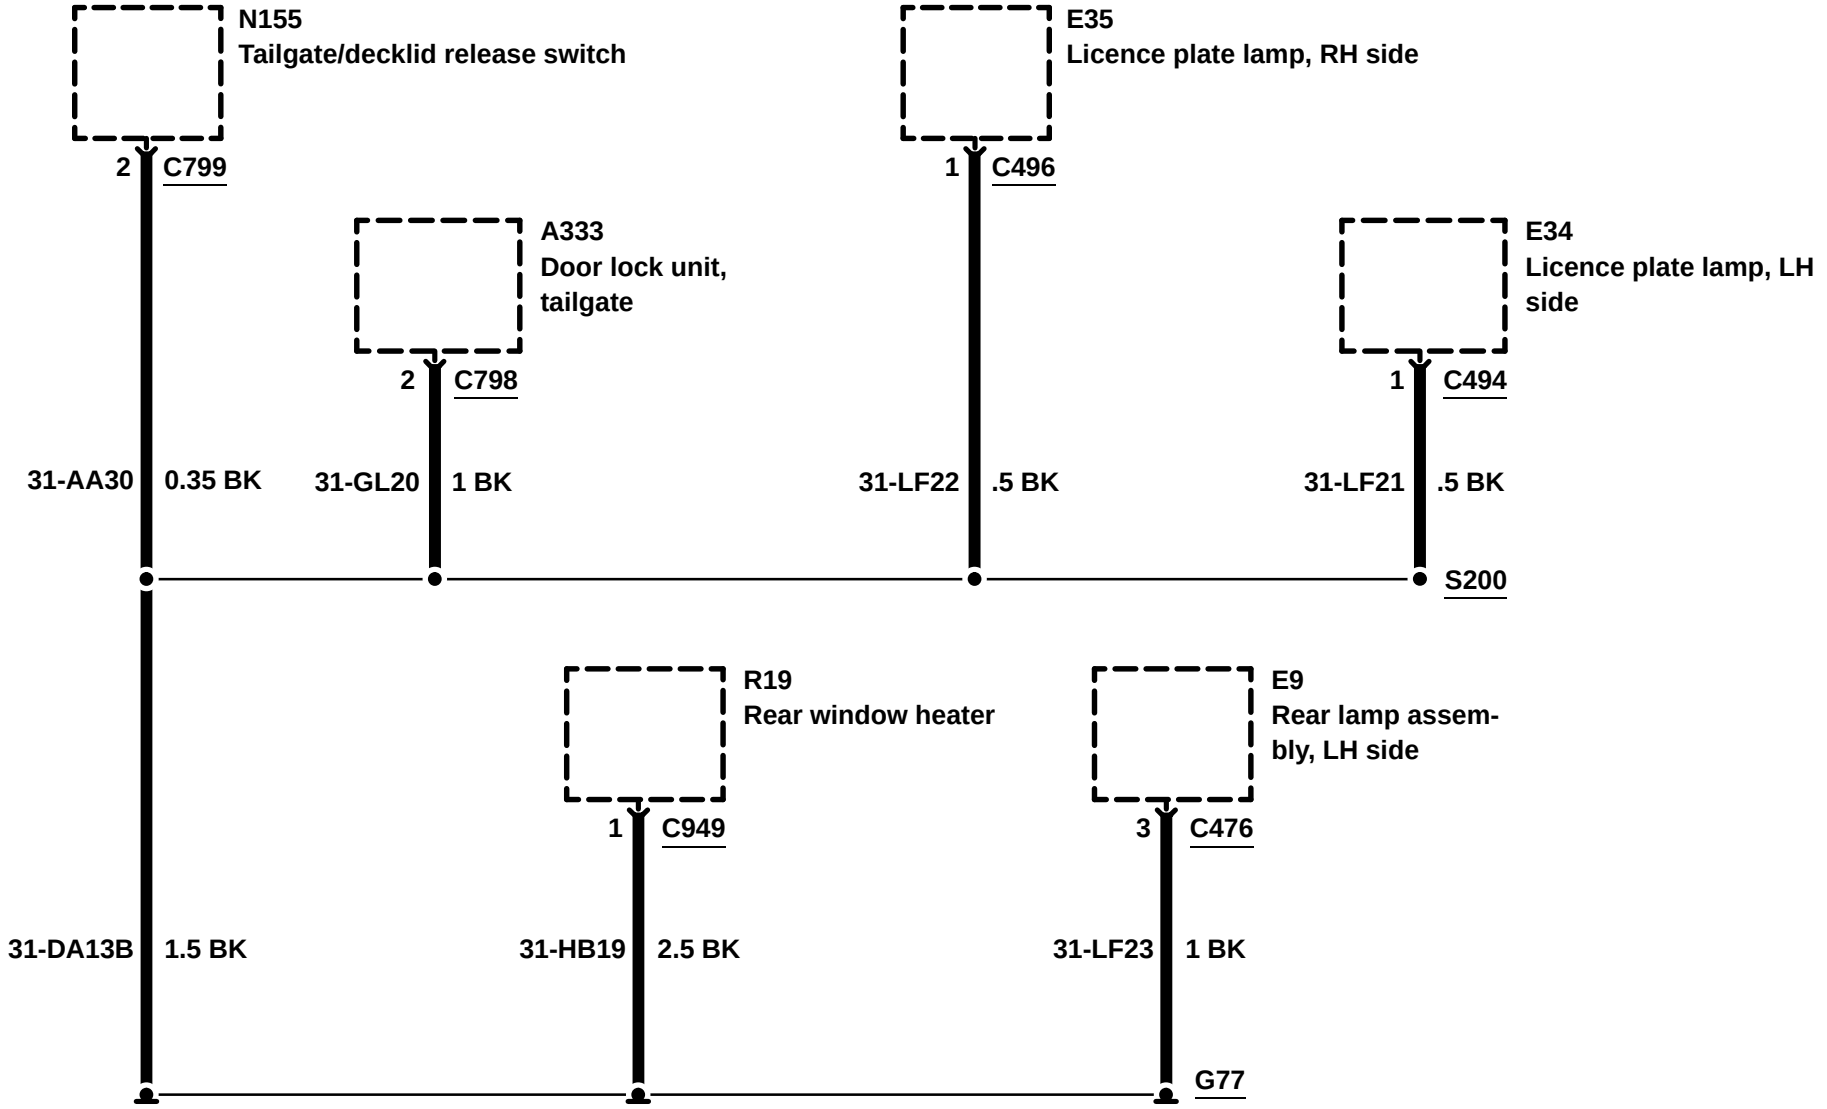

Ground Distribution – G77, 5–door model

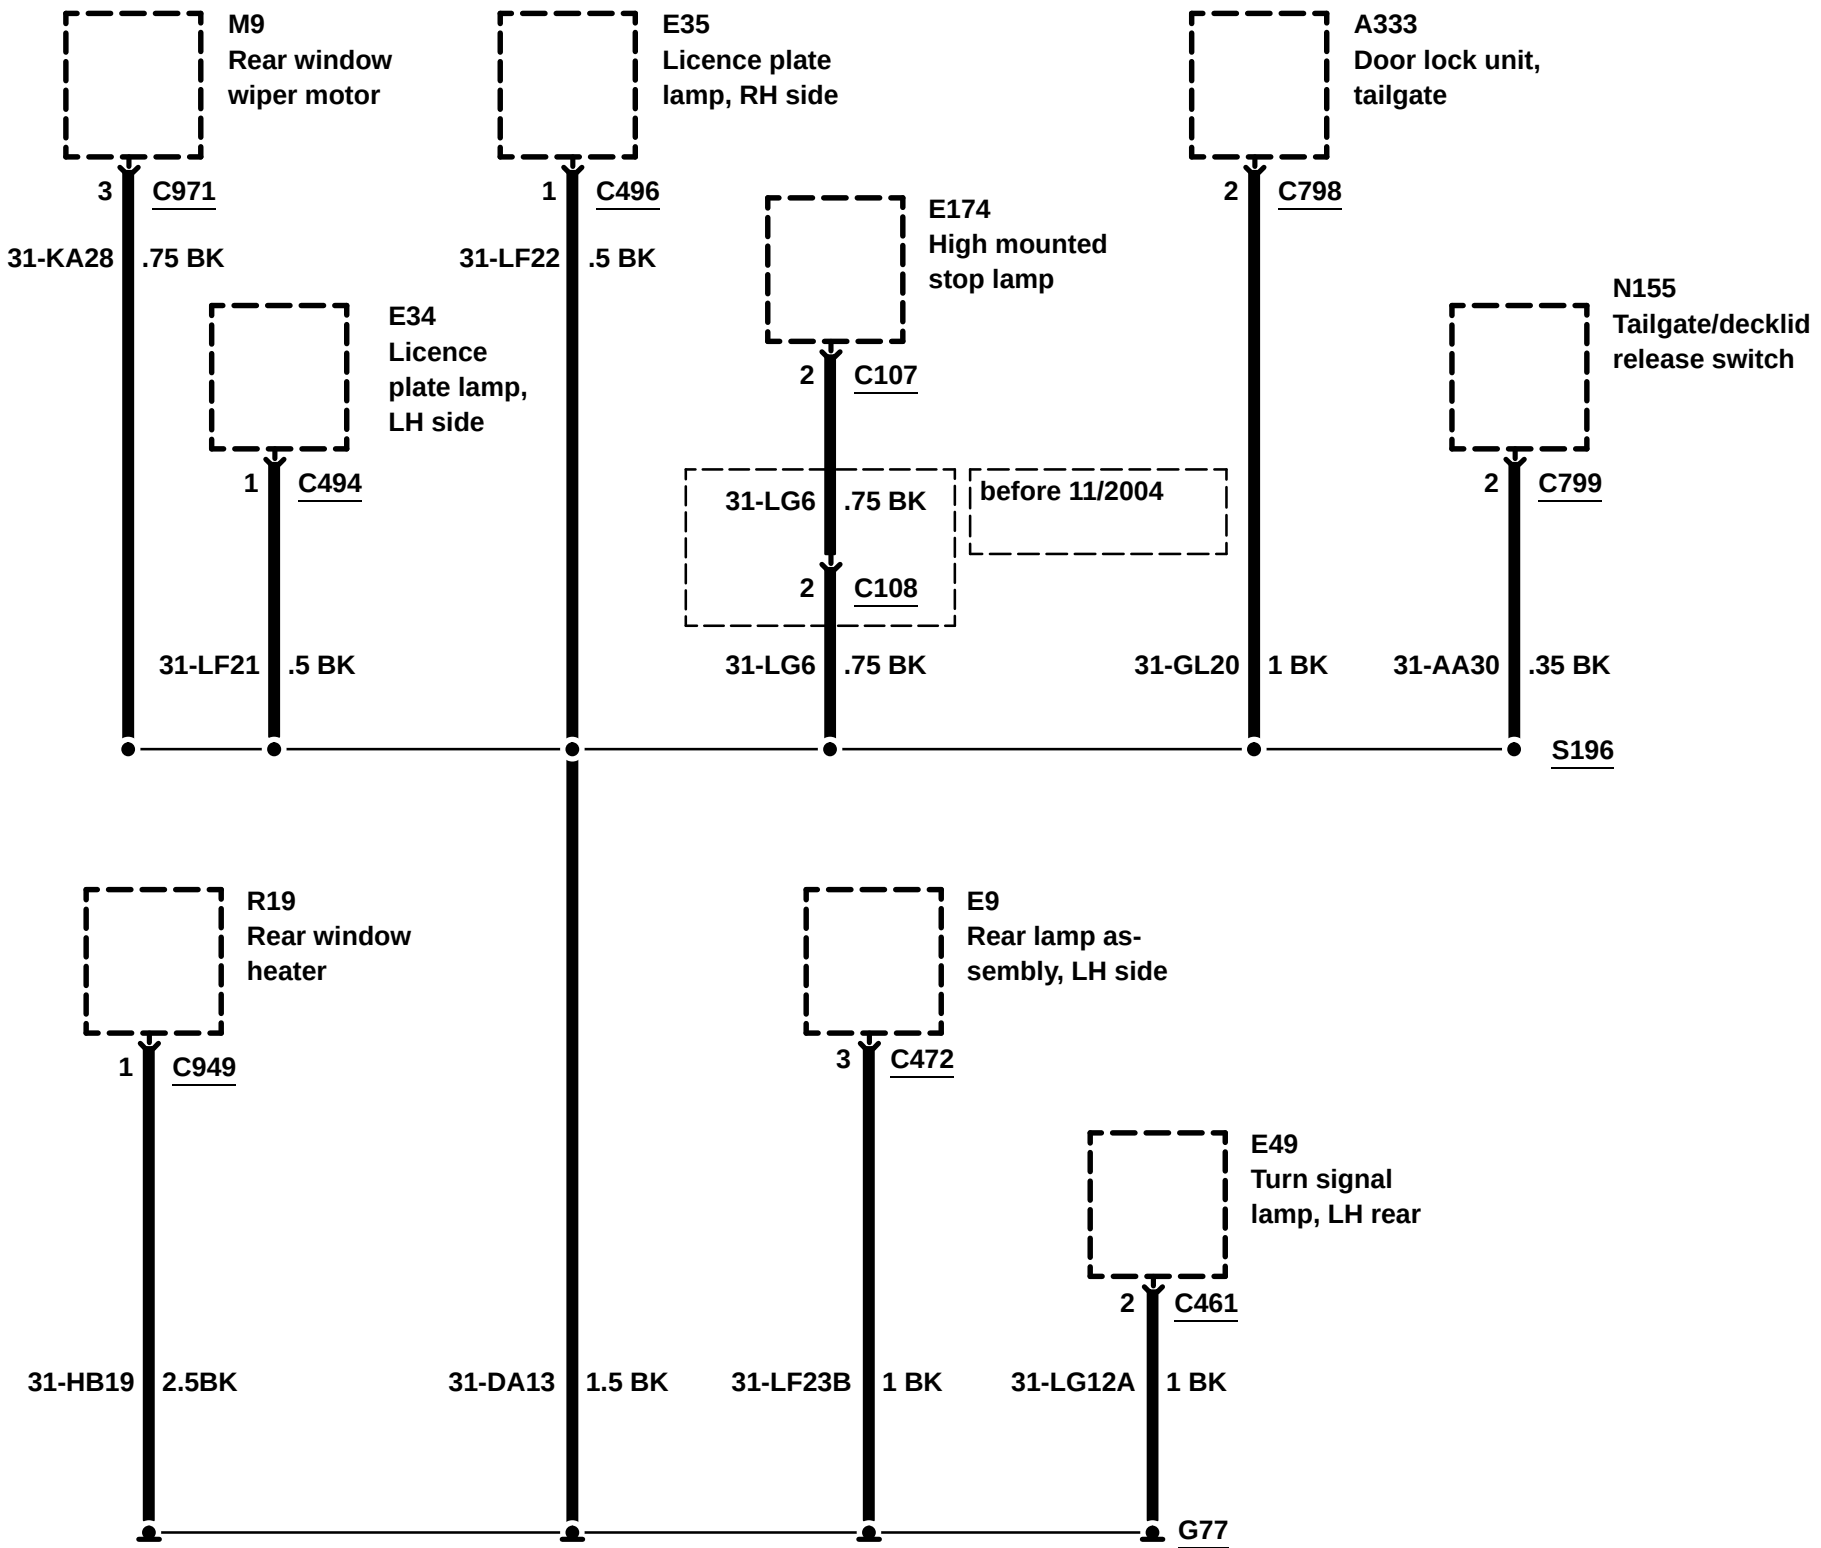

Ground Distribution – G78, 1.8/2.0L Duratec–HE (MI4)

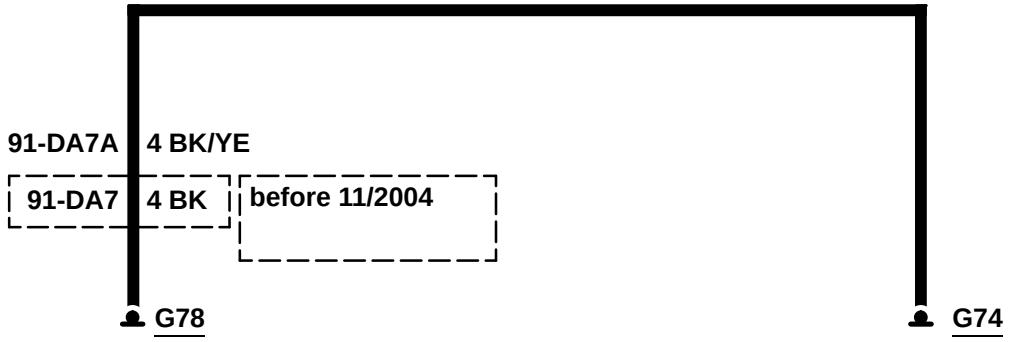

Ground Distribution – G78, 2.0L Duratorq–TDCi (DW) Diesel



Ground Distribution – G78, 1.6L (Z6)



Components — Section 700–06–00

	Location	Page/coordinates
A7	ABS module Refer to:	11 – B 2
A11	Radio dash panel, centre	
A26	Roof opening panel module LHD, 4–door model, Refer to:	25 – F 3
A26	Roof opening panel module RHD, 4–door model, Refer to:	26 – F 3
A26	Roof opening panel module LHD, 5–door model, Refer to:	27 – F 3
A26	Roof opening panel module RHD, 5–door model, Refer to:	28 – F 3
A30	Instrument cluster RHD, Refer to:	35 – E 5
A30	Instrument cluster LHD, Refer to:	36 – B 5
A31	Fuel tank unit Refer to:	33 – C 2
A40	Transmission hardware unit automatic transmission	
A42	Driver air bag unit in steering wheel	
A43	Passenger air bag unit LHD, Refer to:	36 – F 4
A102	Passive anti–theft system transceiver module Refer to:	43 – C 4
A116	Safety belt tensioner, passenger seat under passenger’s seat	
A117	Safety belt tensioner, driver seat under driver’s seat	
A118	Cooling fan module Petrol engines, Refer to:	3 – C 5
A118	Cooling fan module Diesel engines, Refer to:	4 – A 3
A120	Automatic transmission control module engine compartment	
A128	Heater control module dash panel, centre	
A147	Powertrain control module (PCM) 1.8/2.0L Duratec–HE (MI4), Refer to:	13 – A 5
A147	Powertrain control module (PCM) 1.8/2.0L Duratec–HE (MI4), Refer to:	13 – B 5
A147	Powertrain control module (PCM) 2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – E 2
A147	Powertrain control module (PCM) engine compartment	

Components **Section 700–06–00**

	Location	Page/coordinates
A151	Antenna roof	
A172	Door lock unit, driver side front Refer to:	44 – E 3
A173	Door lock unit, passenger side front Refer to:	44 – E 3
A176	Electronic Stability Program (ESP) module Refer to:	11 – B 2
A190	Remote keyless entry (RKE) module roof, front	
A205	Electronic Automatic Temperature Control (EATC) module RHD, Refer to:	35 – A 3
A205	Electronic Automatic Temperature Control (EATC) module LHD, Refer to:	36 – A 3
A208	Restraints Control Module (RCM) Refer to:	24 – E 5
A208	Restraints Control Module (RCM) Refer to:	24 – A 2
A242	Side air bag module, driver under driver’s seat	
A245	Side air bag module, passenger under passenger’s seat	
A265	Parking aid module Refer to:	29 – E 3
A275	Door lock unit, LH rear Refer to:	45 – E 3
A276	Door lock unit, RH rear Refer to:	45 – E 3
A318	Transmission control module (TCM) engine compartment	
A333	Door lock unit, tailgate 5–door model, Refer to:	46 – D 1
A333	Door lock unit, tailgate Refer to:	46 – D 1
A333	Door lock unit, tailgate 4–door model, Refer to:	47 – F 2
A333	Door lock unit, tailgate Refer to:	47 – F 2
A351	Door control module, driver Refer to:	44 – E 2
A352	Door control module, passenger Refer to:	44 – E 2
A353	Door control module, LH side rear Refer to:	45 – B 2
A354	Door control module, RH side rear Refer to:	45 – B 2

Components — Section 700–06–00

	Location	Page/coordinates
A355	Exterior mirror, driver side Refer to:	44 – B 4
A356	Exterior mirror, passenger side Refer to:	44 – B 4
A357	Electrical Hydraulic Power Assist Steering (EHPAS) module Refer to:	5 – A 2
A357	Electrical Hydraulic Power Assist Steering (EHPAS) module Refer to:	5 – B 2
A378	Micropol antenna Refer to:	42 – B 5
A407	Glow plug control module (GPCM) Refer to:	6 – C 1
A464	Electronic Throttle Control (ETC) module 1.8/2.0L Duratec–HE (MI4), Refer to:	12 – A 1
B8	Throttle Position Sensor (TPS) engine	
B10	Engine Coolant Temperature (ECT) sensor 1.8/2.0L Duratec–HE (MI4), Refer to:	13 – A 4
B10	Engine Coolant Temperature (ECT) sensor 2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – E 3
B10	Engine Coolant Temperature (ECT) sensor engine	
B11	Vehicle speed sensor (VSS) 1.8/2.0L Duratec–HE (MI4), Refer to:	13 – B 1
B12	Water–in–fuel sensor 2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – B 5
B14	Wheel speed sensor, RH side front Refer to:	16 – A 3
B15	Wheel speed sensor, LH side front Lumbar circuit	17 – F 3
B16	Wheel speed sensor, RH side rear Lumbar circuit	34 – D 2
B17	Wheel speed sensor, LH side rear Lumbar circuit	19 – A 4
B22	Mass Air Flow (MAF) sensor 2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – E 4
B36	Steering position sensor Lumbar circuit	43 – A 3
B41	Camshaft position sensor 1.8/2.0L Duratec–HE (MI4), Refer to:	12 – D 5
B41	Camshaft position sensor 2.0L Duratorq–TDCi (DW) Diesel, Refer to:	15 – D 5
B41	Camshaft position sensor engine	
B43	Crankshaft position sensor 1.8/2.0L Duratec–HE (MI4), Refer to:	13 – D 1

Components — Section 700–06–00

	Location	Page/coordinates
B43	Crankshaft position sensor 2.0L Duratorq–TDCi (DW) Diesel, Refer to:	15 – E 2
B43	Crankshaft position sensor engine	
B44	Turbine Shaft Speed (TSS) sensor automatic transmission	
B45	Knock sensor engine	
B70	Barometric Absolute Pressure (BAP) sensor engine	
B72	Sunload sensor dash panel	
B73	Outside air temperature sensor behind dash panel	
B80	Transmission speed sensor engine	
B89	Pre–catalyst heated oxygen sensor (HO2S) 1.8/2.0L Duratec–HE (MI4), Refer to:	13 – C 5
B89	Pre–catalyst heated oxygen sensor (HO2S) in exhaust system	
B105	Knock sensor 1 1.8/2.0L Duratec–HE (MI4), Refer to:	13 – E 4
B106	Knock sensor 2 1.8/2.0L Duratec–HE (MI4), Refer to:	12 – B 3
B108	Boost pressure sensor engine	
B109	Fuel temperature sensor 2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – C 5
B110	Output Shaft Speed (OSS) sensor automatic transmission	
B120	Transmission range sensor automatic transmission	
B129	Accelerator pedal position sensor RHD, Refer to:	41 – D 1
B129	Accelerator pedal position sensor Refer to:	41 – D 1
B129	Accelerator pedal position sensor LHD, Refer to:	42 – D 1
B129	Accelerator pedal position sensor Refer to:	42 – D 1
B142	Temperature manifold absolute pressure sensor 1.8/2.0L Duratec–HE (MI4), Refer to:	12 – B 1
B168	Parking aid sensor, rear, outer left behind luggage compartment lining	
B169	Parking aid sensor, rear, inner left behind luggage compartment lining	

Components — Section 700–06–00

	Location	Page/coordinates
B170	Parking aid sensor, rear, inner right behind luggage compartment lining	
B171	Parking aid sensor, rear, outer right behind luggage compartment lining	
B174	Yaw rate sensor	
	Refer to:	19 – E 1
B177	Crash sensor	
	Refer to:	6 – D 5
B192	Catalyst monitor sensor	
	1.8/2.0L Duratec–HE (MI4), Refer to:	13 – A 4
B192	Catalyst monitor sensor in exhaust system	
B196	Turbo geometry position sensor	
	2.0L Duratorq–TDCi (DW) Diesel, Refer to:	15 – C 1
B206	In–vehicle temperature sensor	
	LHD, Refer to:	36 – D 5
B213	Intake Air Temperature (IAT) sensor	
	2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – B 4
B218	Steering column position sensor engine	
B225	Fuel rail pressure transducer sensor	
	2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – C 5
B238	Side air bag sensor, driver	
	Refer to:	18 – D 5
B238	Side air bag sensor, driver	
	Refer to:	19 – C 5
B239	Side air bag sensor, passenger	
	Refer to:	18 – D 5
B239	Side air bag sensor, passenger	
	Refer to:	19 – C 5
B301	Parking aid sensor, RH front	
	Refer to:	1 – F 4
B304	Discharge temperature sensor, floor, LH side air conditioning housing	
B305	Discharge temperature sensor, floor, RH side air conditioning housing	
B306	Discharge temperature sensor, panel, LH side air conditioning housing	
B307	Discharge temperature sensor, panel, RH side	
	Refer to:	35 – D 5
B308	A/C pressure sensor engine compartment	
B309	Parking aid sensor, LH front	
	Refer to:	1 – B 5
B336	Parking aid sensor, centre rear behind luggage compartment lining	

Components — Section 700–06–00

	Location	Page/coordinates
B433	Mass Air Flow/Intake Air Temperature (MAF/IAT) sensor engine	
D20	Data Link Connector (DLC) RHD, Refer to:	35 – F 3
D20	Data Link Connector (DLC) LHD, Refer to:	36 – B 4
D20	Data Link Connector (DLC) Refer to:	36 – B 4
E1	Headlamp, LH side RHD, Refer to:	10 – F 3
E1	Headlamp, LH side LHD, Refer to:	8 – F 3
E7	Headlamp, RH side LHD, Refer to:	7 – A 3
E7	Headlamp, RH side RHD, Refer to:	9 – A 3
E9	Rear lamp assembly, LH side Refer to:	31 – B 5
E9	Rear lamp assembly, LH side 5–door model, Refer to:	31 – B 5
E9	Rear lamp assembly, LH side Refer to:	32 – A 4
E9	Rear lamp assembly, LH side 4–door model, Refer to:	32 – A 4
E10	Rear lamp assembly, RH side Refer to:	29 – D 5
E10	Rear lamp assembly, RH side 5–door model, Refer to:	29 – D 5
E10	Rear lamp assembly, RH side Refer to:	30 – F 5
E10	Rear lamp assembly, RH side 4–door model, Refer to:	30 – F 5
E18	Interior lamp, front LHD, 4–door model, Refer to:	25 – D 1
E18	Interior lamp, front RHD, 4–door model, Refer to:	26 – D 1
E18	Interior lamp, front LHD, 5–door model, Refer to:	27 – D 1
E18	Interior lamp, front RHD, 5–door model, Refer to:	28 – D 1
E19	Interior lamp, rear LHD, 4–door model, Refer to:	25 – E 5
E19	Interior lamp, rear RHD, 4–door model, Refer to:	26 – D 5
E19	Interior lamp, rear LHD, 5–door model, Refer to:	27 – D 5

Components — Section 700–06–00

	Location	Page/coordinates
E19	Interior lamp, rear RHD, 5–door model, Refer to:	28 – D 5
E28	Glove compartment lamp RHD, Refer to:	35 – A 5
E28	Glove compartment lamp LHD, Refer to:	36 – F 3
E30	Vanity mirror lamp, LH side LHD, 4–door model, Refer to:	25 – B 5
E30	Vanity mirror lamp, LH side RHD, 4–door model, Refer to:	26 – B 5
E30	Vanity mirror lamp, LH side LHD, 5–door model, Refer to:	27 – B 5
E30	Vanity mirror lamp, LH side RHD, 5–door model, Refer to:	28 – B 5
E30	Vanity mirror lamp, LH side LHD, 5–door model, Refer to:	28 – B 5
E31	Vanity mirror lamp, RH side LHD, 4–door model, Refer to:	25 – A 5
E31	Vanity mirror lamp, RH side RHD, 4–door model, Refer to:	26 – A 4
E31	Vanity mirror lamp, RH side LHD, 5–door model, Refer to:	27 – A 4
E31	Vanity mirror lamp, RH side RHD, 4–door model, Refer to:	27 – A 4
E31	Vanity mirror lamp, RH side RHD, 5–door model, Refer to:	28 – A 4
E34	Licence plate lamp, LH side 5–door model, Refer to:	46 – E 3
E34	Licence plate lamp, LH side in decklid	
E35	Licence plate lamp, RH side 5–door model, Refer to:	46 – C 1
E35	Licence plate lamp, RH side in decklid	
E42	Fog lamp, RH front front bumper	
E43	Fog lamp, LH front Refer to:	6 – C 2
E44	Side turn signal lamp, RH side LHD, Refer to:	7 – B 5
E44	Side turn signal lamp, RH side RHD, Refer to:	9 – B 5
E45	Side turn signal lamp, LH side RHD, Refer to:	10 – E 5
E45	Side turn signal lamp, LH side LHD, Refer to:	8 – E 5

Components **Section 700–06–00**

	Location	Page/coordinates
E48	Turn signal lamp, RH rear RH D–pillar	
E49	Turn signal lamp, LH rear Refer to:	31 – D 5
E57	Luggage compartment lamp 4–door model, Refer to:	29 – E 4
E57	Luggage compartment lamp 5–door model, Refer to:	30 – D 5
E61	Footwell lamp, LH front in LH front footwell	
E62	Footwell lamp, RH front RHD, Refer to:	35 – F 2
E62	Footwell lamp, RH front LHD, Refer to:	36 – A 4
E86	Rear fog lamp, RH side Refer to:	2 – B 2
E86	Rear fog lamp, RH side Refer to:	2 – B 3
E89	Rear fog lamp, LH side Refer to:	2 – E 3
E105	Reversing lamp, left rear bumper	
E109	Reversing lamp, right rear bumper	
E174	High mounted stop lamp Refer to:	46 – F 4
E174	High mounted stop lamp rear window	
E224	Passenger air bag deactivation indicator behind dash panel	
H1	Horn Refer to:	6 – E 2
H4	Second horn Refer to:	6 – E 2
H5	Anti–theft alarm horn Refer to:	29 – B 4
H9	Buzzer Refer to:	29 – B 5
K1	Heated rear window relay Refer to:	48 – C 5
K4	Fuel pump relay Refer to:	48 – B 5
K13	Power hold relay Refer to:	50 – F 5
K14	Blower motor relay Refer to:	50 – E 2

Components — Section 700–06–00

	Location	Page/coordinates
K22	Starter relay	
	Refer to:	50 – E 5
K32	A/C Wide Open Throttle (WOT) relay	
	Refer to:	50 – D 5
K33	Horn relay	
	Refer to:	50 – B 5
K41	Ignition relay	
	Refer to:	50 – C 5
K64	Rear window wiper relay	
	behind luggage compartment lining, LH side	
K69	Fuel heater relay	
	Refer to:	50 – C 5
K273	Reversing lamps relay	
	Refer to:	50 – B 5
K403	Heat exchanger shutoff valve relay	
	Refer to:	50 – A 3
M3	Blower motor	
	RHD, Refer to:	37 – F 1
M3	Blower motor	
	LHD, Refer to:	38 – C 4
M8	Starter motor	
	1.8/2.0L Duratec–HE (MI4), manual transmission, Refer to:	12 – D 1
M8	Starter motor	
	engine	
M9	Rear window wiper motor	
	Refer to:	46 – E 4
M69	Recirculated air actuator	
	air conditioning housing	
M74	Two–way washer pump motor	
	LHD, Refer to:	7 – E 4
M74	Two–way washer pump motor	
	RHD, Refer to:	7 – E 5
M74	Two–way washer pump motor	
	RHD, Refer to:	9 – E 5
M90	Fuel filler flap lock motor	
	5–door model, Refer to:	29 – A 3
M90	Fuel filler flap lock motor	
	4–door model, Refer to:	30 – B 3
M100	Air temperature door motor, LH side	
	RHD, Refer to:	37 – D 2
M100	Air temperature door motor, LH side	
	LHD, Refer to:	38 – D 2
M101	Air temperature door motor, RH side	
	RHD, Refer to:	37 – C 5
M101	Air temperature door motor, RH side	
	LHD, Refer to:	38 – C 5

Components **Section 700–06–00**

	Location	Page/coordinates
M111	Windshield wiper motor LHD, Refer to:	7 – F 3
M111	Windshield wiper motor RHD, Refer to:	9 – E 4
M122	Window regulator motor, driver side front Refer to:	44 – E 2
M123	Window regulator motor, passenger side front Refer to:	44 – E 2
M158	Driver seat height motor under driver's seat	
M210	Defrost mode actuator RHD, Refer to:	37 – D 5
M210	Defrost mode actuator LHD, Refer to:	38 – D 5
M227	Driver seat horizontal motor under driver's seat	
M230	Driver seat backrest motor under driver's seat	
M250	Panel/floor mode actuator LHD, Refer to:	38 – C 3
M251	EGR stepper motor engine	
M252	EGR throttle actuator engine	
M253	Variable geometry turbo actuator engine	
N1	Brake fluid level switch LHD, Refer to:	8 – B 5
N1	Brake fluid level switch Refer to:	8 – B 5
N1	Brake fluid level switch RHD, Refer to:	9 – F 5
N10	Heated rear window switch RHD, Refer to:	35 – C 2
N10	Heated rear window switch LHD, Refer to:	36 – C 2
N17	Oil pressure switch 1.8/2.0L Duratec–HE (MI4), Refer to:	12 – C 1
N17	Oil pressure switch 2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – B 1
N17	Oil pressure switch engine	
N21	Engine compartment switch Refer to:	6 – E 4
N49	Hazard flasher switch RHD, Refer to:	35 – A 4

Components — Section 700–06–00

	Location	Page/coordinates
N49	Hazard flasher switch LHD, Refer to:	36 – C 5
N54	Horn switch in steering wheel	
N63	Parking brake switch Refer to:	24 – E 2
N81	Clutch pedal position switch RHD, Refer to:	41 – B 5
N81	Clutch pedal position switch Refer to:	41 – B 5
N81	Clutch pedal position switch LHD, Refer to:	42 – B 4
N81	Clutch pedal position switch Refer to:	42 – B 4
N82	Brake pedal position switch Refer to:	41 – C 5
N82	Brake pedal position switch RHD, Refer to:	41 – C 5
N82	Brake pedal position switch LHD, Refer to:	42 – C 5
N82	Brake pedal position switch Refer to:	42 – C 5
N93	Gearshift lever unit RHD, Refer to:	35 – B 1
N93	Gearshift lever unit LHD, Refer to:	36 – B 1
N96	Power steering pressure switch engine compartment	
N104	Wiper/washer switch Refer to:	43 – C 5
N120	Headlamp switch RHD, Refer to:	35 – F 4
N120	Headlamp switch LHD, Refer to:	36 – A 5
N124	Safety belt buckle switch under driver’s seat	
N126	A/C high–pressure switch engine compartment	
N152	Neutral position switch manual transmission	
N155	Tailgate/decklid release switch 5–door model, Refer to:	46 – D 3
N155	Tailgate/decklid release switch dash panel, driver side	
N201	Speed control switch in steering wheel	

Components **Section 700–06–00**

	Location	Page/coordinates
N214	Radio remote control switch	
	Refer to:	43 – A 2
N230	Roof opening panel control switch	
	LHD, 4–door model, Refer to:	25 – E 3
N230	Roof opening panel control switch	
	RHD, 4–door model, Refer to:	26 – E 2
N230	Roof opening panel control switch	
	LHD, 5–door model, Refer to:	27 – E 2
N230	Roof opening panel control switch	
	RHD, 5–door model, Refer to:	28 – E 2
N242	Seat control switch, driver	
	under driver’s seat	
N246	A/C low–pressure switch	
	Refer to:	5 – D 2
N278	Ignition switch	
	Refer to:	43 – C 1
N279	Power mirror fold switch	
	in driver’s door	
N282	Steering column multifunction switch	
	Refer to:	43 – A 3
N297	Window control switch, passenger side front	
	Refer to:	44 – E 5
N298	Window control switch, LH rear	
	Refer to:	45 – C 5
N299	Window control switch, RH rear	
	Refer to:	45 – C 5
N316	Inertia Fuel Shutoff (IFS) switch	
	Refer to:	21 – B 3
N318	Stop lamp switch	
	RHD, Refer to:	41 – C 4
N346	Electronic Stability Program (ESP) switch	
	RHD, Refer to:	35 – C 1
N346	Electronic Stability Program (ESP) switch	
	LHD, Refer to:	36 – C 1
N359	Parking aid switch, front	
	behind dash panel	
N388	Window control/power mirror adjust switch, driver	
	Refer to:	44 – E 5
N394	Reversing lamp switch	
	1.8/2.0L Duratec–HE (MI4), manual transmission, Refer to:	12 – E 3
N397	Start inhibit/reversing lamp switch	
	automatic transmission	
N475	Passenger Air bag Deactivation (PAD) switch	
	RHD, Refer to:	35 – F 2
N475	Passenger Air bag Deactivation (PAD) switch	
	LHD, Refer to:	36 – B 4

Components — Section 700–06–00

	Location	Page/coordinates
O1	Battery RHD, Refer to:	10 – E 4
O1	Battery LHD, Refer to:	8 – E 4
O5	Generator Refer to:	12 – A 2
O5	Generator Refer to:	12 – A 3
O5	Generator Refer to:	14 – B 3
O5	Generator Refer to:	14 – A 3
O5	Generator engine	
P13	Clock spring Refer to:	43 – B 4
P16	Glow plug 1 engine	
P17	Glow plug 2 engine	
P18	Glow plug 3 engine	
P19	Glow plug 4 engine	
P91	Central Junction Box (CJB) LHD, Refer to:	39 – C 1
P91	Central Junction Box (CJB) RHD, Refer to:	40 – B 1
P93	Battery Junction Box (BJB) RHD, Refer to:	10 – F 4
P93	Battery Junction Box (BJB) LHD, Refer to:	8 – F 4
P136	Spark plugs engine	
R19	Rear window heater Refer to:	46 – D 5
R19	Rear window heater Refer to:	47 – C 5
R21	Blower motor resistor RHD, Refer to:	37 – A 4
R21	Blower motor resistor LHD, Refer to:	38 – A 4
R32	Fuel heater engine compartment	
R42	Cigar lighter, front dash panel, centre	

Components **Section 700–06–00**

	Location	Page/coordinates
T6	Ignition coil, cylinder 1 engine	
T7	Ignition coil, cylinder 2 engine	
T8	Ignition coil, cylinder 3 engine	
T9	Ignition coil, cylinder 4 engine	
U1	Ignition transformer capacitor engine	
Y1	Evaporative emission canister purge valve engine compartment	
Y2	Exhaust Gas Recirculation (EGR) valve Refer to:	14 – F 5
Y13	Idle speed control valve engine	
Y16	A/C Compressor clutch Refer to:	13 – E 1
Y16	A/C Compressor clutch Refer to:	14 – B 2
Y47	Fuel pressure solenoid valve Refer to:	14 – F 3
Y57	Swirl control solenoid valve Refer to:	12 – E 4
Y57	Swirl control solenoid valve engine	
Y70	Speaker 1, LH rear door LHD, Refer to:	45 – E 2
Y70	Speaker 1, LH rear door RHD, Refer to:	45 – E 2
Y72	Speaker 1, RH rear door LHD, Refer to:	45 – E 1
Y72	Speaker 1, RH rear door RHD, Refer to:	45 – E 1
Y101	Speaker 1, LH front LHD, Refer to:	44 – B 2
Y101	Speaker 1, LH front RHD, Refer to:	44 – B 2
Y102	Speaker 2, LH front LHD, Refer to:	44 – B 5
Y102	Speaker 2, LH front RHD, Refer to:	44 – B 5
Y103	Speaker 1, RH front LHD, Refer to:	44 – B 1
Y103	Speaker 1, RH front RHD, Refer to:	44 – B 1

Components **Section 700–06–00**

	Location	Page/coordinates
Y104	Speaker 2, RH front LHD, Refer to:	44 – B 4
Y104	Speaker 2, RH front RHD, Refer to:	44 – B 4
Y108	Fuel injector 1 Refer to:	12 – B 5
Y108	Fuel injector 1 Refer to:	14 – E 5
Y108	Fuel injector 1 engine	
Y109	Fuel injector 2 Refer to:	12 – C 5
Y109	Fuel injector 2 Refer to:	14 – D 5
Y109	Fuel injector 2 engine	
Y110	Fuel injector 3 Refer to:	12 – C 5
Y110	Fuel injector 3 Refer to:	14 – D 5
Y110	Fuel injector 3 engine	
Y111	Fuel injector 4 Refer to:	12 – D 5
Y111	Fuel injector 4 Refer to:	14 – C 5
Y111	Fuel injector 4 engine	
Y165	Fuel metering valve engine	
Y183	Heat exchanger shutoff valve air conditioning housing	
Y186	Coolant shutoff valve Refer to:	14 – D 1
Y218	Inlet air control valve solenoid Refer to:	12 – E 5
Y218	Inlet air control valve solenoid Refer to:	12 – E 5
Y218	Inlet air control valve solenoid engine	

Connectors Section 700–06–00

	Location	Page/coordinates
C30	right–hand–drive, Refer to:	18 – B 5
C30	left–hand–drive, Refer to:	19 – E 4
C31	left–hand–drive, Refer to:	18 – B 5
C31	right–hand–drive, Refer to:	19 – E 4
C41	left–hand–drive, Refer to:	21 – B 4
C41	right–hand–drive, Refer to:	22 – E 4
C43	left–hand–drive, Refer to:	20 – E 4
C43	right–hand–drive, Refer to:	23 – B 4
C44	left–hand–drive, Refer to:	21 – B 4
C44	right–hand–drive, Refer to:	22 – E 4
C45	Refer to:	19 – D 5
C46	Refer to:	18 – C 5
C47	left–hand–drive, Refer to:	21 – B 4
C47	right–hand–drive, Refer to:	22 – E 4
C49	left–hand–drive, Refer to:	20 – E 4
C49	right–hand–drive, Refer to:	23 – B 4
C51	left–hand–drive, Refer to:	20 – E 4
C51	right–hand–drive, Refer to:	23 – B 4
C52	Refer to:	19 – D 5
C54	Refer to:	18 – C 5
C57	under parcel shelf	
C58	4–door model, Refer to:	30 – E 5
C58	5–door model, Refer to:	31 – E 4
C71	Refer to:	6 – E 2
C72	Refer to:	6 – E 1
C73	Refer to:	6 – E 1
C74	Refer to:	6 – E 1
C75	engine compartment, front, LH side	
C76	engine compartment, front, LH side	
C77	Refer to:	6 – E 1
C78	engine compartment, front	
C90	manual transmission, Refer to:	12 – F 3
C90	1.8/2.0L Duratec–HE (MI4), manual transmission, Refer to:	12 – F 3
C90	Refer to:	14 – E 3
C90	2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – E 3
C90	Refer to:	50 – E 5
C90	in Battery Junction Box (BJB)	
C95	Refer to:	49 – D 5
C96	Refer to:	48 – E 5
C98	Refer to:	48 – D 5
C99	Refer to:	49 – E 5
C100	Refer to:	49 – B 5
C102	Refer to:	48 – C 1
C103	Refer to:	48 – A 2
C107	5–door model, Refer to:	46 – F 4
C107	rear window	

Connectors Section 700–06–00

	Location	Page/coordinates
C108	5–door model, Refer to:	46 – E 5
C110a	Refer to:	12 – D 1
C110a	manual transmission, Refer to:	12 – D 1
C110a	1.8/2.0L Duratec–HE (MI4), manual transmission, Refer to:	12 – D 1
C110a	on starter	
C110b	Refer to:	12 – D 1
C110b	on starter	
C111	left–hand–drive, Refer to:	20 – E 3
C111	right–hand–drive, Refer to:	23 – B 3
C112	left–hand–drive, Refer to:	20 – B 1
C112	right–hand–drive, Refer to:	23 – B 2
C112	under dash panel, Driver side	
C113	left–hand–drive, Refer to:	20 – D 5
C113	right–hand–drive, Refer to:	23 – D 5
C116	engine compartment	
C117	engine compartment	
C118	left–hand–drive, Refer to:	21 – B 3
C118	right–hand–drive, Refer to:	22 – E 3
C120	Refer to:	14 – C 2
C120	engine	
C121	Refer to:	44 – E 5
C122	Refer to:	45 – C 5
C148	Refer to:	44 – E 3
C149	Refer to:	44 – E 3
C150	Refer to:	45 – E 3
C151	Refer to:	45 – E 3
C152	5–door model, Refer to:	29 – A 3
C152	4–door model, Refer to:	30 – B 3
C161	engine	
C162	engine	
C163	engine	
C164	engine	
C169	engine	
C170	engine compartment	
C171	generator	
C173	engine	
C174	engine	
C175	engine	
C176	engine	
C177	in exhaust system	
C178	in exhaust system	
C179	generator	
C182	automatic transmission	
C183	automatic transmission	
C184	automatic transmission	
C185	automatic transmission	

Connectors — Section 700–06–00

	Location	Page/coordinates
C189	on starter	
C200	right–hand–drive, Refer to:	35 – F 3
C200	left–hand–drive, Refer to:	36 – B 4
C223	in driver's door	
C281	Refer to:	3 – C 5
C281	Petrol engines, Refer to:	3 – C 5
C281	Refer to:	4 – A 3
C281	Diesel engines, Refer to:	4 – A 3
C300	Refer to:	15 – E 5
C302	Refer to:	6 – C 2
C304	front bumper	
C305	behind dash panel	
C320	right–hand–drive, Refer to:	35 – F 4
C320	left–hand–drive, Refer to:	36 – A 5
C331	under driver's seat	
C332	under driver's seat	
C335	under driver's seat	
C336	under driver's seat	
C340	under passenger's seat	
C341	under passenger's seat	
C342	under passenger's seat	
C346	under passenger's seat	
C378	behind dash panel	
C380	behind dash panel	
C381	right–hand–drive, Refer to:	35 – C 2
C381	left–hand–drive, Refer to:	36 – C 2
C383	right–hand–drive, Refer to:	35 – B 1
C383	left–hand–drive, Refer to:	36 – B 1
C384	manual transmission, Refer to:	12 – E 5
C390	roof, front	
C391	Refer to:	43 – C 4
C414	engine compartment	
C417	Refer to:	14 – E 2
C418	Refer to:	14 – E 2
C419	Refer to:	14 – E 2
C420	Refer to:	6 – D 5
C425	right–hand–drive, Refer to:	35 – B 5
C425	left–hand–drive, Refer to:	36 – F 4
C426	Refer to:	24 – E 5
C426	Refer to:	24 – A 2
C427	right–hand–drive, Refer to:	18 – D 5
C427	left–hand–drive, Refer to:	19 – C 5
C428	left–hand–drive, Refer to:	18 – D 5
C428	right–hand–drive, Refer to:	19 – C 5
C429	Refer to:	24 – E 5
C429	Refer to:	24 – A 2

Connectors — Section 700–06–00

	Location	Page/coordinates
C430	Refer to:	2 – B 2
C431	Refer to:	42 – B 5
C434	Refer to:	2 – E 3
C437	Refer to:	43 – A 2
C438	automatic transmission	
C439	automatic transmission	
C440	under passenger’s seat	
C441	Refer to:	43 – C 5
C442	behind dash panel	
C443	behind dash panel	
C444	right–hand–drive, Refer to:	41 – C 3
C444	left–hand–drive, Refer to:	42 – C 4
C447	behind dash panel	
C448	behind dash panel	
C449	behind dash panel	
C451	behind dash panel	
C453	behind dash panel	
C454	right–hand–drive, Refer to:	35 – A 4
C454	left–hand–drive, Refer to:	36 – C 5
C456	Refer to:	43 – C 1
C459	Refer to:	43 – A 3
C461	Refer to:	31 – D 5
C462	Refer to:	29 – C 5
C470	right–hand–drive, Refer to:	37 – A 4
C470	left–hand–drive, Refer to:	38 – A 4
C472	LH C–pillar	
C473	Refer to:	29 – D 5
C476	Refer to:	32 – A 4
C477	Refer to:	30 – F 5
C478	in glove compartment	
C484	Refer to:	44 – E 5
C485	Refer to:	45 – C 5
C488	Refer to:	44 – E 5
C489	Refer to:	44 – E 5
C494	5–door model, Refer to:	46 – E 3
C494	4–door model, Refer to:	47 – E 5
C495	5–door model, Refer to:	46 – E 3
C495	4–door model, Refer to:	47 – E 5
C496	5–door model, Refer to:	46 – C 1
C496	4–door model, Refer to:	47 – D 5
C497	5–door model, Refer to:	46 – C 1
C497	4–door model, Refer to:	47 – D 5
C521	engine	
C522	left–hand–drive, 4–door model, Refer to:	25 – E 3
C522	right–hand–drive, 4–door model, Refer to:	26 – E 3
C522	left–hand–drive, 5–door model, Refer to:	27 – E 3

Connectors Section 700–06–00

	Location	Page/coordinates
C522	right–hand–drive, 5–door model, Refer to:	28 – E 3
C523	manual transmission, Refer to:	12 – E 4
C524	Refer to:	13 – B 1
C525	left–hand–drive, 4–door model, Refer to:	25 – F 3
C525	right–hand–drive, 4–door model, Refer to:	26 – F 3
C525	left–hand–drive, 5–door model, Refer to:	27 – F 3
C525	right–hand–drive, 5–door model, Refer to:	28 – F 3
C528	engine	
C529	engine	
C532	right–hand–drive, Refer to:	37 – D 5
C532	left–hand–drive, Refer to:	38 – D 5
C533	right–hand–drive, Refer to:	37 – B 4
C533	left–hand–drive, Refer to:	38 – C 3
C534	right–hand–drive, Refer to:	37 – C 5
C534	left–hand–drive, Refer to:	38 – C 5
C536	air conditioning housing	
C537	right–hand–drive, Refer to:	37 – F 1
C537	left–hand–drive, Refer to:	38 – C 4
C538	right–hand–drive, Refer to:	37 – C 4
C538	air conditioning housing	
C539	right–hand–drive, Refer to:	35 – A 3
C539	left–hand–drive, Refer to:	36 – A 3
C540	right–hand–drive, Refer to:	35 – A 3
C540	left–hand–drive, Refer to:	36 – A 3
C541	right–hand–drive, Refer to:	37 – C 3
C541	left–hand–drive, Refer to:	38 – F 2
C542	air conditioning housing	
C543	right–hand–drive, Refer to:	35 – D 5
C543	air conditioning housing	
C544	air conditioning housing	
C546	engine	
C547	engine	
C553	right–hand–drive, Refer to:	37 – D 2
C553	left–hand–drive, Refer to:	38 – D 2
C554	dash panel	
C556	Refer to:	50 – C 1
C586	Refer to:	14 – C 5
C589	Refer to:	13 – A 5
C593	manual transmission, Refer to:	12 – A 1
C598	Refer to:	14 – E 4
C602	air conditioning housing	
C608	Refer to:	2 – A 2
C619	right–hand–drive, Refer to:	35 – B 4
C619	left–hand–drive, Refer to:	36 – F 2
C629	Refer to:	6 – D 2
C630	front bumper	

Connectors Section 700–06–00

	Location	Page/coordinates
C632	Refer to:	2 – E 1
C633	Refer to:	2 – D 2
C634	Refer to:	2 – C 4
C635	Refer to:	2 – B 5
C642	engine	
C643	Refer to:	13 – D 1
C644	engine	
C645	engine	
C646	engine	
C648	right–hand–drive, Refer to:	41 – D 1
C648	left–hand–drive, Refer to:	42 – D 1
C655	Refer to:	14 – B 4
C680	engine compartment	
C681	engine compartment	
C682	engine compartment	
C690	Refer to:	13 – B 5
C692	Refer to:	5 – D 2
C700	5–door model, Refer to:	29 – E 3
C700	4–door model, in luggage compartment, RH side	
C717	right–hand–drive, Refer to:	35 – C 1
C717	left–hand–drive, Refer to:	36 – C 1
C722	Refer to:	44 – E 2
C723	Refer to:	44 – E 1
C727	Refer to:	44 – E 2
C728	Refer to:	44 – E 2
C729	Refer to:	44 – E 2
C730	Refer to:	45 – B 2
C731	Refer to:	45 – B 2
C732	Refer to:	33 – C 2
C741	in driver’s door	
C753	right–hand–drive, Refer to:	10 – E 5
C753	left–hand–drive, Refer to:	8 – E 5
C754	left–hand–drive, Refer to:	7 – B 5
C754	right–hand–drive, Refer to:	9 – B 5
C755	under driver’s seat	
C756	under driver’s seat	
C757	under driver’s seat	
C758	under driver’s seat	
C759	under driver’s seat	
C760	under driver’s seat	
C761	under driver’s seat	
C771	manual transmission, Refer to:	12 – B 5
C771	Refer to:	14 – E 5
C772	manual transmission, Refer to:	12 – C 5
C772	Refer to:	14 – D 5
C773	manual transmission, Refer to:	12 – C 5

Connectors — Section 700–06–00

	Location	Page/coordinates
C773	Refer to:	14 – D 5
C774	manual transmission, Refer to:	12 – D 5
C774	Refer to:	14 – C 5
C776	right–hand–drive, Refer to:	35 – B 2
C776	left–hand–drive, Refer to:	36 – B 2
C776	right–hand–drive, Refer to:	43 – E 4
C776	left–hand–drive, Refer to:	43 – E 4
C778	Refer to:	14 – B 5
C779	Refer to:	13 – A 4
C779	Refer to:	14 – E 3
C782	Refer to:	44 – E 2
C783	Refer to:	44 – E 2
C784	Refer to:	43 – A 3
C785	Refer to:	14 – C 5
C787	Refer to:	14 – D 1
C789	air conditioning housing	
C790	engine	
C792	Refer to:	5 – A 2
C793	Refer to:	5 – A 2
C794	Refer to:	5 – B 2
C795	engine	
C798	5–door model, Refer to:	46 – D 1
C798	4–door model, Refer to:	47 – F 2
C799	5–door model, Refer to:	46 – D 3
C799	4–door model, Refer to:	47 – E 3
C800	engine	
C802	engine	
C803	manual transmission, Refer to:	12 – D 5
C804	engine	
C805	engine	
C806	engine	
C807	Refer to:	44 – B 4
C808	Refer to:	44 – B 4
C809	right–hand–drive, Refer to:	35 – E 5
C809	left–hand–drive, Refer to:	36 – B 5
C810	left–hand–drive, Refer to:	8 – B 5
C810	right–hand–drive, Refer to:	9 – F 5
C811	5–door model, Refer to:	29 – B 4
C811	4–door model, in luggage compartment	
C814	Refer to:	17 – F 3
C815	Refer to:	16 – A 3
C816	Refer to:	19 – A 4
C817	Refer to:	34 – D 2
C818	Refer to:	16 – B 4
C819	Refer to:	17 – F 4
C820	5–door model, Refer to:	29 – E 4

Connectors — Section 700–06–00

	Location	Page/coordinates
C820	4–door model, Refer to:	30 – D 5
C821	Refer to:	44 – B 4
C822	Refer to:	44 – B 4
C823	automatic transmission	
C824	right–hand–drive, Refer to:	41 – C 5
C824	left–hand–drive, Refer to:	42 – C 5
C825	right–hand–drive, Refer to:	41 – B 5
C825	left–hand–drive, Refer to:	42 – B 4
C826	Refer to:	19 – E 1
C828	left–hand–drive, Refer to:	7 – E 4
C828	right–hand–drive, Refer to:	9 – E 5
C830	Refer to:	11 – B 2
C831	Refer to:	11 – B 2
C833	Refer to:	14 – F 5
C836	right–hand–drive, Refer to:	10 – F 3
C836	left–hand–drive, Refer to:	8 – F 3
C837	left–hand–drive, Refer to:	7 – A 3
C837	right–hand–drive, Refer to:	9 – A 3
C841	in LH front footwell	
C844	left–hand–drive, 4–door model, Refer to:	25 – B 5
C844	right–hand–drive, 4–door model, Refer to:	26 – B 4
C844	left–hand–drive, 5–door model, Refer to:	27 – B 5
C844	right–hand–drive, 5–door model, Refer to:	28 – B 5
C845	left–hand–drive, 4–door model, Refer to:	25 – A 5
C845	right–hand–drive, 4–door model, Refer to:	26 – A 4
C845	left–hand–drive, 5–door model, Refer to:	27 – A 4
C845	right–hand–drive, 5–door model, Refer to:	28 – A 4
C846	right–hand–drive, Refer to:	35 – A 5
C846	left–hand–drive, Refer to:	36 – F 3
C848	left–hand–drive, Refer to:	7 – F 3
C848	right–hand–drive, Refer to:	9 – E 4
C849	right–hand–drive, Refer to:	35 – F 2
C849	left–hand–drive, Refer to:	36 – A 4
C854	engine	
C855	engine	
C856	engine	
C857	engine	
C858	engine	
C859	Refer to:	14 – F 3
C860	engine	
C864	1.8/2.0L Duratec–HE (MI4), Refer to:	12 – E 3
C864	2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – F 3
C865	manual transmission	
C866	manual transmission	
C870	manual transmission, Refer to:	12 – A 2
C870	1.8/2.0L Duratec–HE (MI4), manual transmission, Refer to:	12 – A 2

Connectors Section 700–06–00

	Location	Page/coordinates
C870	Refer to:	14 – B 3
C870	2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – B 3
C870	generator	
C871	Refer to:	12 – A 3
C871	manual transmission, Refer to:	12 – A 3
C871	1.8/2.0L Duratec–HE (MI4), manual transmission, Refer to:	12 – A 3
C871	Refer to:	14 – A 3
C871	2.0L Duratorq–TDCi (DW) Diesel, Refer to:	14 – A 3
C871	generator	
C882	engine compartment	
C890	left–hand–drive, 4–door model, Refer to:	25 – E 4
C890	left–hand–drive, 4–door model, Refer to:	25 – D 2
C890	right–hand–drive, 4–door model, Refer to:	26 – D 1
C890	right–hand–drive, 4–door model, Refer to:	26 – D 5
C890	left–hand–drive, 5–door model, Refer to:	27 – D 1
C890	left–hand–drive, 5–door model, Refer to:	27 – D 5
C890	right–hand–drive, 5–door model, Refer to:	28 – D 1
C890	right–hand–drive, 5–door model, Refer to:	28 – D 5
C891	left–hand–drive, 4–door model, Refer to:	25 – E 4
C891	right–hand–drive, 4–door model, Refer to:	26 – D 5
C891	left–hand–drive, 5–door model, Refer to:	27 – D 5
C891	right–hand–drive, 5–door model, Refer to:	28 – D 5
C892	roof, rear	
C893	left–hand–drive, 4–door model, Refer to:	25 – D 1
C893	right–hand–drive, 4–door model, Refer to:	26 – D 1
C893	left–hand–drive, 5–door model, Refer to:	27 – D 1
C893	right–hand–drive, 5–door model, Refer to:	28 – D 1
C895	manual transmission, Refer to:	12 – B 1
C895	automatic transmission, engine	
C896	Refer to:	43 – B 5
C897	Refer to:	6 – E 4
C900	engine compartment	
C903	Refer to:	13 – E 4
C904	manual transmission, Refer to:	12 – B 3
C904	automatic transmission, engine	
C906	Refer to:	15 – D 5
C911	behind dash panel	
C912	behind dash panel	
C914	engine	
C915	engine	
C916	engine	
C917	engine	
C920	in steering wheel	
C921	in steering wheel	
C922	Refer to:	43 – B 4
C923	in steering wheel	

Connectors

Section 700–06–00

	Location	Page/coordinates
C924	engine	
C925	engine	
C926	Refer to:	15 – E 2
C928	automatic transmission	
C930	Refer to:	24 – E 2
C933	left–hand–drive, Refer to:	21 – B 3
C933	right–hand–drive, Refer to:	22 – E 3
C934	Refer to:	13 – A 4
C937	Refer to:	44 – B 2
C938	Refer to:	44 – B 1
C939	Refer to:	45 – E 1
C940	Refer to:	45 – E 1
C941	Refer to:	44 – B 5
C943	Refer to:	44 – B 4
C945	engine compartment	
C948	engine compartment, front, LH side	
C949	5–door model, Refer to:	46 – B 5
C949	4–door model, Refer to:	47 – A 4
C950	5–door model, Refer to:	46 – D 5
C950	4–door model, Refer to:	47 – C 5
C952	Refer to:	13 – E 1
C953	engine	
C954	Refer to:	14 – B 1
C956	Refer to:	13 – C 5
C957	Refer to:	14 – B 2
C960	5–door model, Refer to:	29 – B 5
C960	4–door model, in luggage compartment, RH side	
C965	engine compartment	
C971	5–door model, Refer to:	46 – E 4
C974	behind dash panel	
C978	1.8/2.0L Duratec–HE (MI4), manual transmission, Refer to:	12 – C 1
C984	Refer to:	15 – C 1
C1002	Refer to:	50 – B 5
C1003	Refer to:	50 – B 5
C1004	Refer to:	50 – A 3
C1005	Refer to:	50 – C 5
C1008	Refer to:	50 – C 5
C1009	Refer to:	50 – D 1
C1010	Refer to:	50 – E 2
C1011	Refer to:	50 – D 5
C1013	Refer to:	50 – E 5
C1014	Refer to:	50 – F 5
C1016	in Battery Junction Box (BJB)	
C1017	Refer to:	48 – C 5
C1019	Refer to:	48 – B 5
C1100	behind luggage compartment lining, LH side	

Ground points — Section 700–06–00

	Location	Page/coordinates
G1	engine compartment, LH side	
G7	left–hand–drive, Refer to:	21 – A 2
G7	right–hand–drive, Refer to:	22 – E 1
G8	engine	
G12	Refer to:	19 – E 3
G19	left–hand–drive, Refer to:	20 – E 3
G19	right–hand–drive, Refer to:	23 – B 1
G20	left–hand–drive, Refer to:	20 – E 3
G20	right–hand–drive, Refer to:	23 – B 1
G31	Refer to:	6 – B 2
G37	Refer to:	6 – C 5
G39	behind dash panel, passenger side	
G45	under rear seats, RH side	
G53	Refer to:	18 – B 4
G55	right–hand–drive, Refer to:	10 – C 5
G55	left–hand–drive, Refer to:	8 – C 5
G56	left–hand–drive, Refer to:	7 – A 1
G56	engine compartment, RH side, right–hand–drive	
G57	engine compartment, LH side	
G58	engine	
G60	engine	
G63	behind dash panel, centre	
G64	engine	
G68	engine compartment, LH side	
G70	5–door model, Refer to:	29 – E 3
G70	4–door model, Refer to:	30 – F 3
G72	left–hand–drive, 4–door model, Refer to:	25 – E 3
G72	right–hand–drive, 4–door model, Refer to:	26 – D 3
G72	left–hand–drive, 5–door model, Refer to:	27 – D 3
G72	right–hand–drive, 5–door model, Refer to:	28 – D 3
G74	engine compartment	
G75	Refer to:	19 – C 4
G77	5–door model, Refer to:	31 – B 4
G77	4–door model, in luggage compartment, LH side	
G78	engine	

Splices

	Location
S5	behind dash panel
S6	A–pillar, passenger side
S7	A–pillar, passenger side
S8	behind dash panel
S9	engine
S10	A–pillar, passenger side
S11	behind dash panel
S12	A–pillar, driver side
S15	LH A–pillar
S24	behind dash panel
S48	behind dash panel
S49	in luggage compartment
S51	engine
S52	engine
S53	engine compartment, LH side
S54	engine
S58	engine compartment, LH side
S63	engine
S65	engine
S66	engine
S67	engine
S71	behind dash panel
S72	behind dash panel
S74	engine
S75	engine
S77	engine
S80	engine
S81	under centre console
S82	under centre console
S85	vehicle floor
S86	vehicle floor
S95	engine
S105	on steering column
S108	engine compartment
S109	engine compartment, RH side
S111	engine bulkhead
S112	vehicle floor
S113	behind dash panel, centre
S114	behind dash panel, centre
S115	behind dash panel, centre
S116	behind dash panel, centre
S118	engine compartment, LH side
S119	engine compartment, LH side
S120	in Battery Junction Box (BJB)
S121	engine compartment, LH side
S125	engine compartment, LH side

Splices

	Location
S126	engine compartment, RH side
S127	behind dash panel, centre
S128	behind dash panel, centre
S145	rear bumper
S158	A–pillar, passenger side
S160	A–pillar, passenger side
S162	engine compartment, LH side
S163	A–pillar, passenger side
S164	engine compartment, LH side
S171	RH A–pillar
S173	tailgate
S174	tailgate
S175	front bumper
S179	behind dash panel
S180	behind dash panel
S187	rear bumper
S194	in passenger’s door
S196	in tailgate
S197	in driver’s door
S199	RH D–pillar
S200	in tailgate
S202	in Battery Junction Box (BJB)
S203	A–pillar, passenger side
S204	engine compartment, LH side
S206	roof
S213	A–pillar, passenger side
S214	engine
S215	engine
S219	engine compartment, LH side
S220	engine compartment, LH side
S222	engine compartment, LH side
S223	engine compartment, LH side
S224	engine compartment
S225	engine compartment
S230	wheelwell, front, LH side
S231	wheelwell, front, LH side
S232	wheelwell, front, RH side
S233	wheelwell, front, RH side
S234	vehicle underbody, LH side
S235	vehicle underbody, LH side
S236	vehicle underbody, LH side
S237	vehicle underbody, LH side
S690	engine
S1000	engine compartment

Fuses


Section 700–06–00

	Location	Page/coordinates
F1	Refer to:	50 – B 2
F2	Refer to:	50 – B 2
F3	Refer to:	50 – B 2
F4	Refer to:	50 – B 3
F6	Refer to:	50 – B 3
F7	Refer to:	50 – C 2
F8	Refer to:	50 – C 2
F9	Refer to:	50 – C 3
F10	Refer to:	50 – C 3
F11	Refer to:	50 – C 3
F12	Refer to:	50 – C 3
F13	Refer to:	50 – D 3
F19	Refer to:	50 – D 2
F20	Refer to:	50 – E 3
F22	Refer to:	50 – E 3
F24	Refer to:	50 – E 3
F25	Refer to:	50 – E 3
F27	Refer to:	50 – E 3
F30	Refer to:	50 – E 3
F31	Refer to:	50 – E 3
F32	Refer to:	50 – F 3
F33	Refer to:	50 – F 3
F34	Refer to:	50 – F 3
F35	Refer to:	50 – F 4
F36	Refer to:	50 – F 4
F37	Refer to:	48 – D 3
F38	Refer to:	48 – D 3
F39	Refer to:	48 – D 3
F40	Refer to:	48 – D 3
F41	Refer to:	48 – D 3
F42	Refer to:	48 – D 3
F43	Refer to:	48 – C 3
F44	Refer to:	48 – C 3
F46	Refer to:	48 – C 3
F47	Refer to:	48 – C 3
F48	Refer to:	48 – C 3
F49	Refer to:	48 – D 3
F50	Refer to:	48 – D 3
F51	Refer to:	48 – D 3
F52	Refer to:	48 – D 3
F53	Refer to:	48 – D 3
F54	Refer to:	48 – D 3
F55	Refer to:	48 – D 3
F57	Refer to:	48 – D 3
F58	Refer to:	48 – D 3
F59	Refer to:	48 – E 3

Fuses

Section 700–06–00


	Location	Page/coordinates
F60	Refer to:	48 – E 3
F61	Refer to:	48 – E 3
F62	Refer to:	48 – E 3
F63	Refer to:	48 – E 3
F65	Refer to:	48 – C 2
F66	Refer to:	48 – C 2
F67	Refer to:	48 – C 2
F68	Refer to:	48 – C 2
F69	Refer to:	48 – C 2
F70	Refer to:	48 – C 2
F71	Refer to:	48 – C 2
F72	Refer to:	48 – D 2
F73	Refer to:	48 – D 2
F74	Refer to:	48 – D 2
F75	Refer to:	48 – D 2
F76	Refer to:	48 – D 2
F77	Refer to:	48 – D 2
F78	Refer to:	48 – D 2
F79	Refer to:	48 – D 2
F80	Refer to:	48 – D 2
F81	Refer to:	48 – E 2
F82	Refer to:	48 – E 2
F83	Refer to:	48 – E 2
F84	Refer to:	48 – E 2
F1000	Battery	

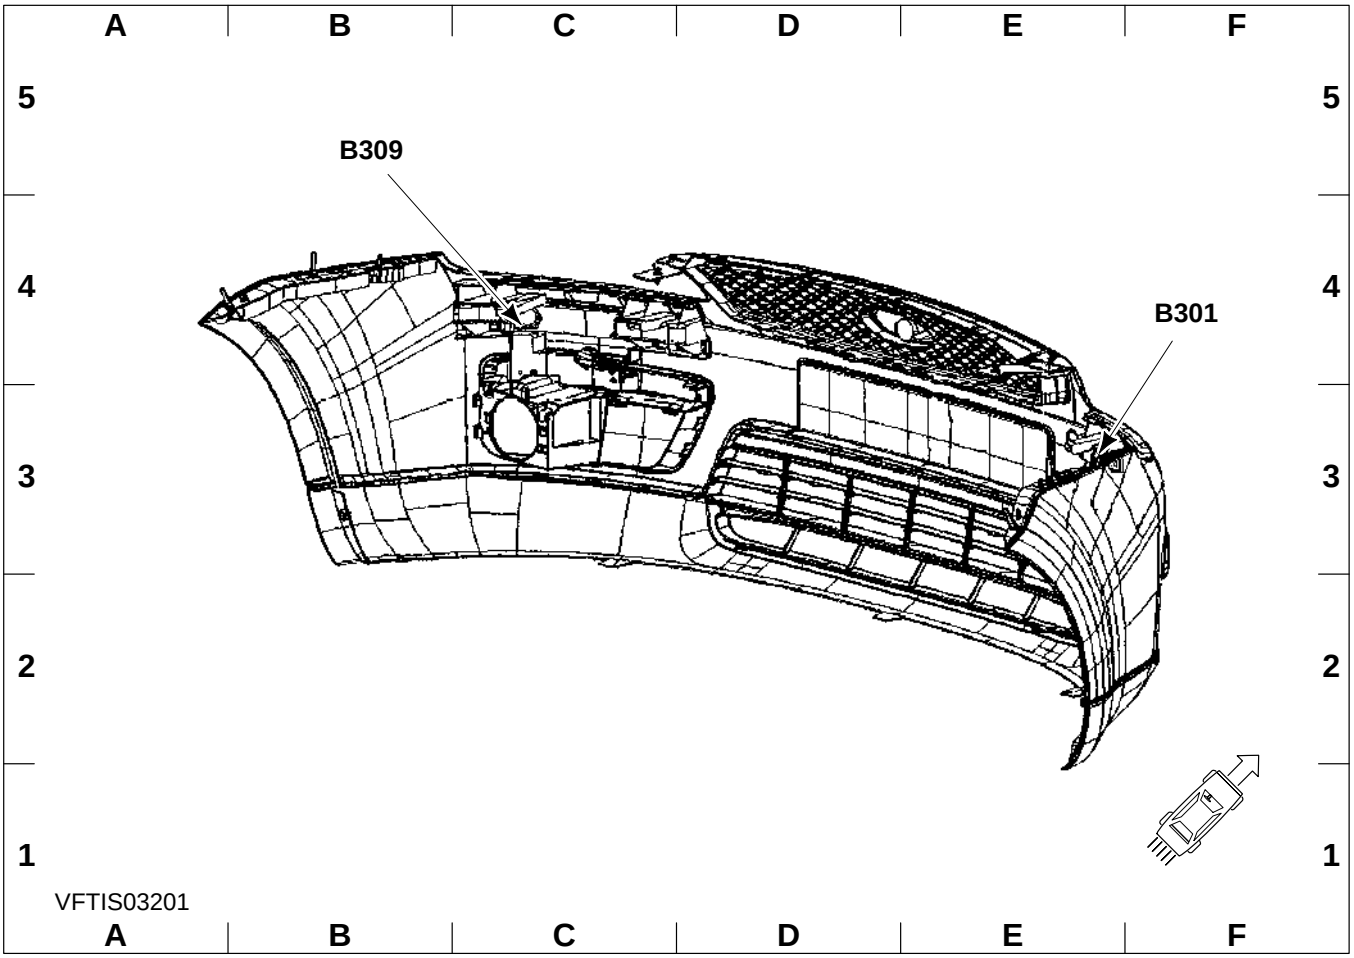

front bumper


B301 . Parking aid sensor, RH front . . . . . F 4

B309 . Parking aid sensor, LH front . . . . . B 5

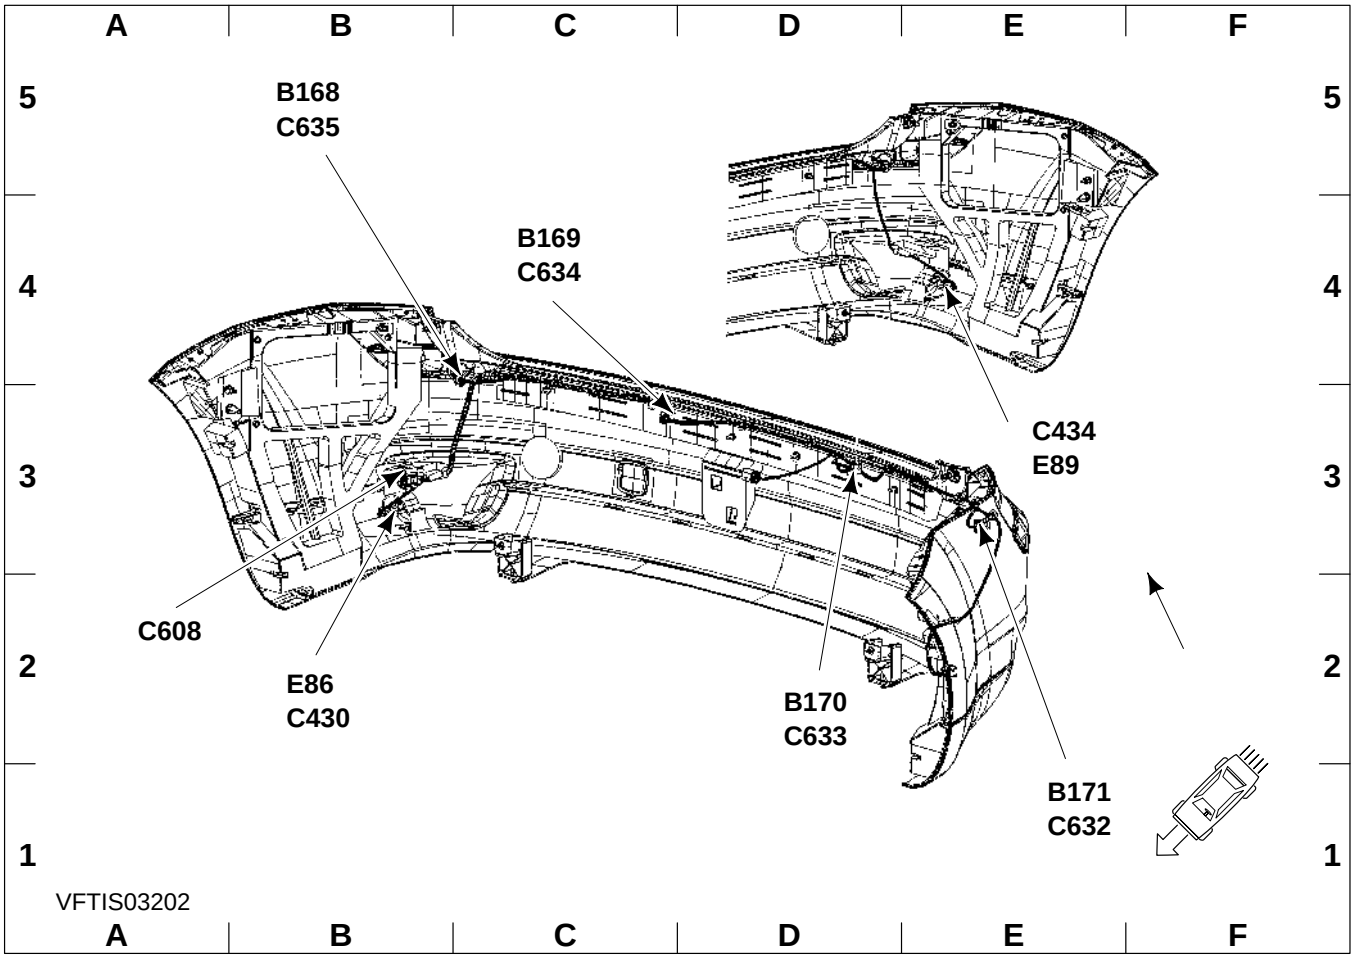


rear bumper

B168 . Parking aid sensor, rear, outer left ..... B 5
B169 . Parking aid sensor, rear, inner left ..... C 4
B170 . Parking aid sensor, rear, inner right .... D 2
B171 . Parking aid sensor, rear, outer right ..... E 1
C430 ..... B 2
C434 ..... E 3
C608 ..... A 2
C632 ..... E 1
C633 ..... D 2
C634 ..... C 4
C635 ..... B 5
E86 .. Rear fog lamp, RH side ..... B 2
E89 .. Rear fog lamp, LH side ..... E 3

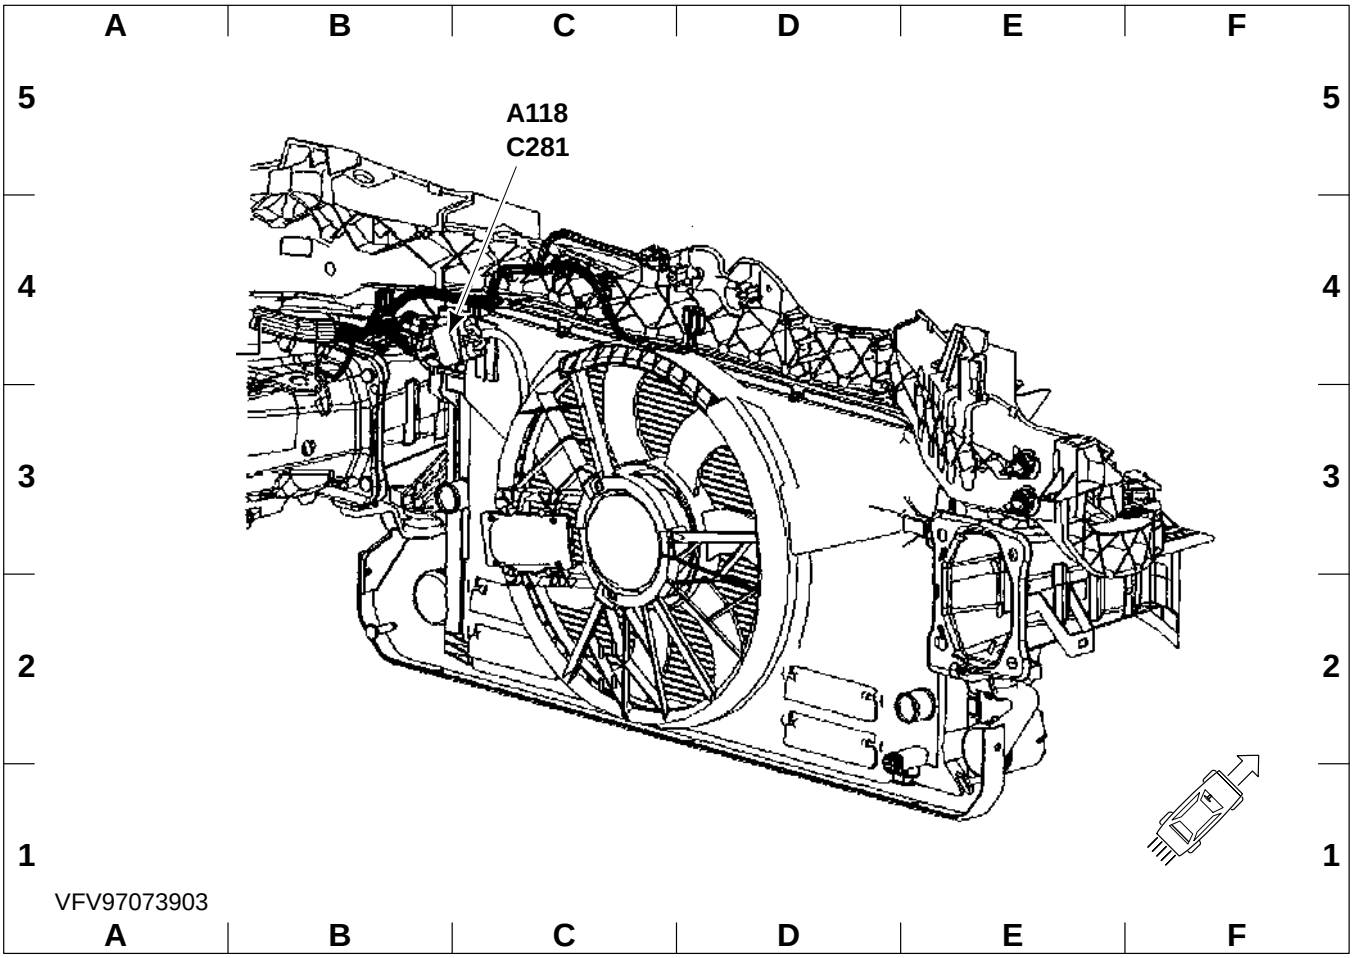


radiator, petrol engines

A118 . Cooling fan module . . . . . C 5 C281 . . . . . C 5

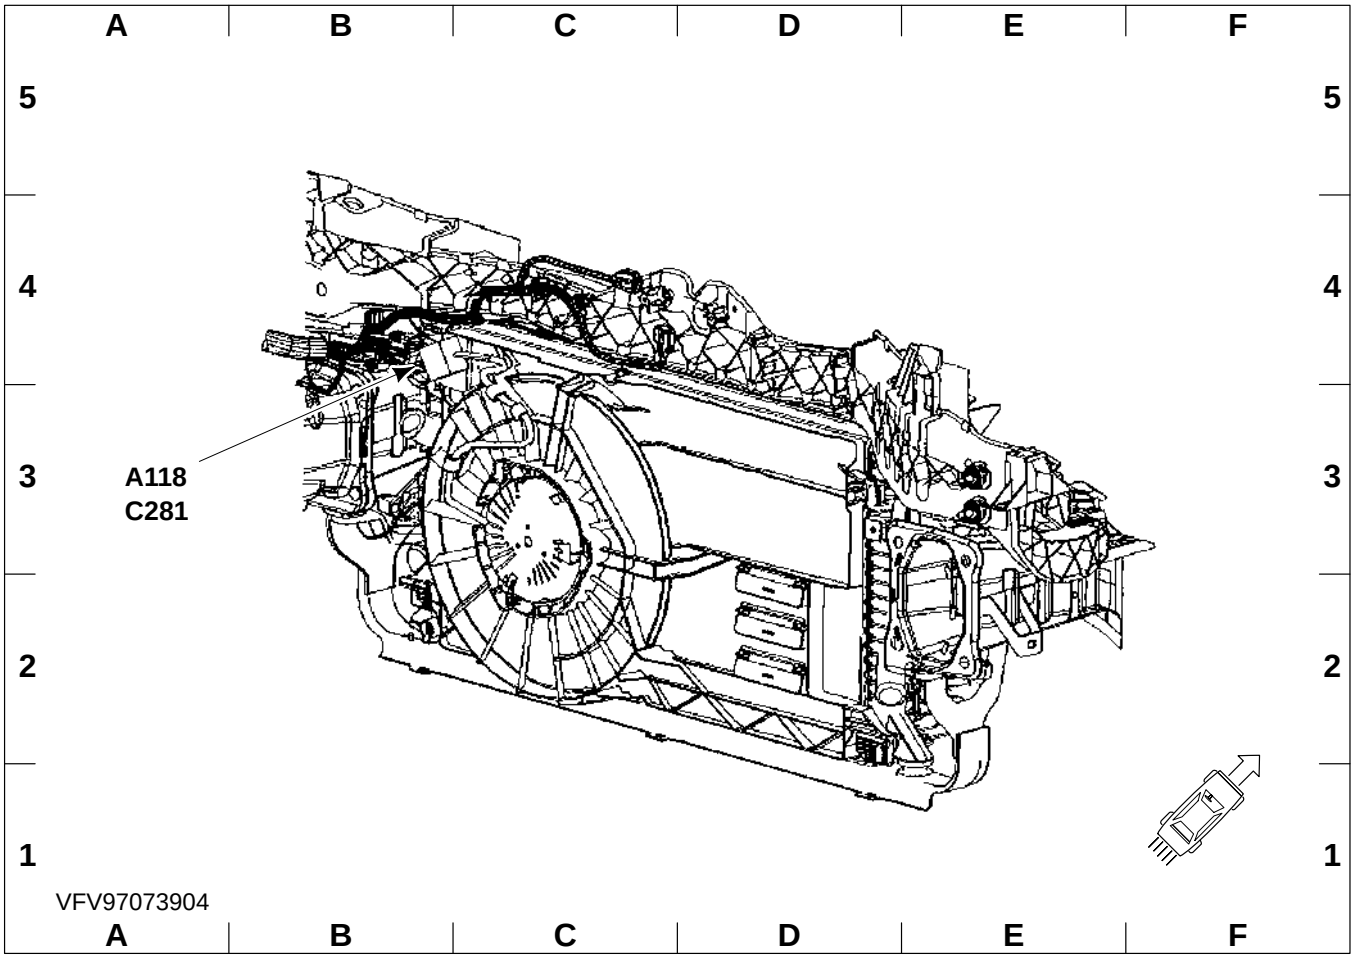


radiator, Diesel engines

A118 . Cooling fan module . . . . . A 3 C281 . . . . . A 3

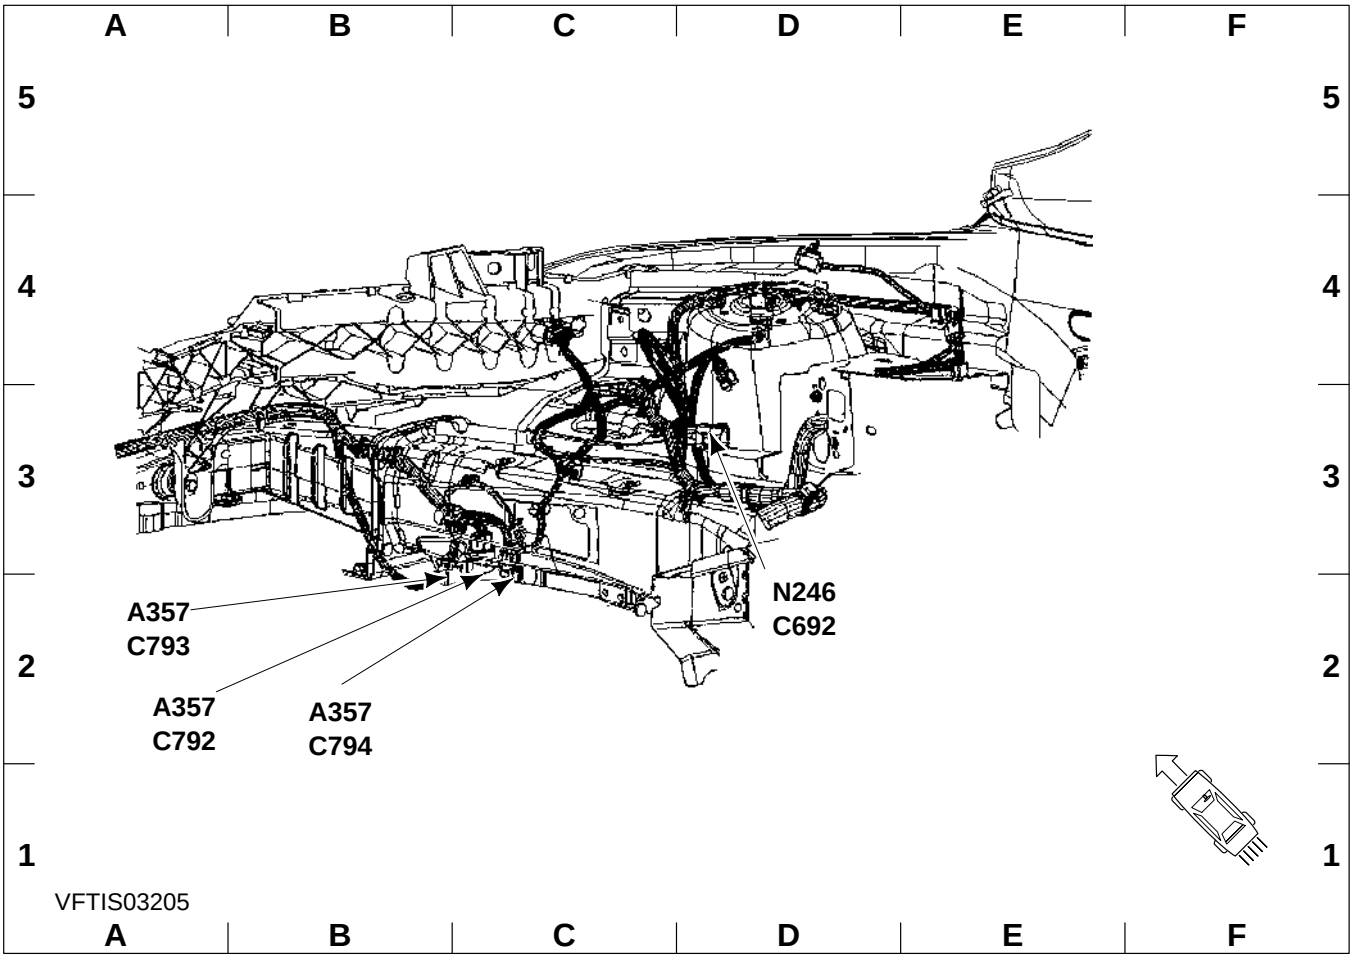


engine compartment, RH side, front

A357 . Electrical Hydraulic Power Assist Steering (EHPAS) module . . . . . A 2
A357 . Electrical Hydraulic Power Assist Steering (EHPAS) module . . . . . A 2
A357 . Electrical Hydraulic Power Assist Steering (EHPAS) module . . . . . B 2
C692 . . . . . D 2
C792 . . . . . A 2
C793 . . . . . A 2
C794 . . . . . B 2
N246 . A/C low–pressure switch . . . . . D 2

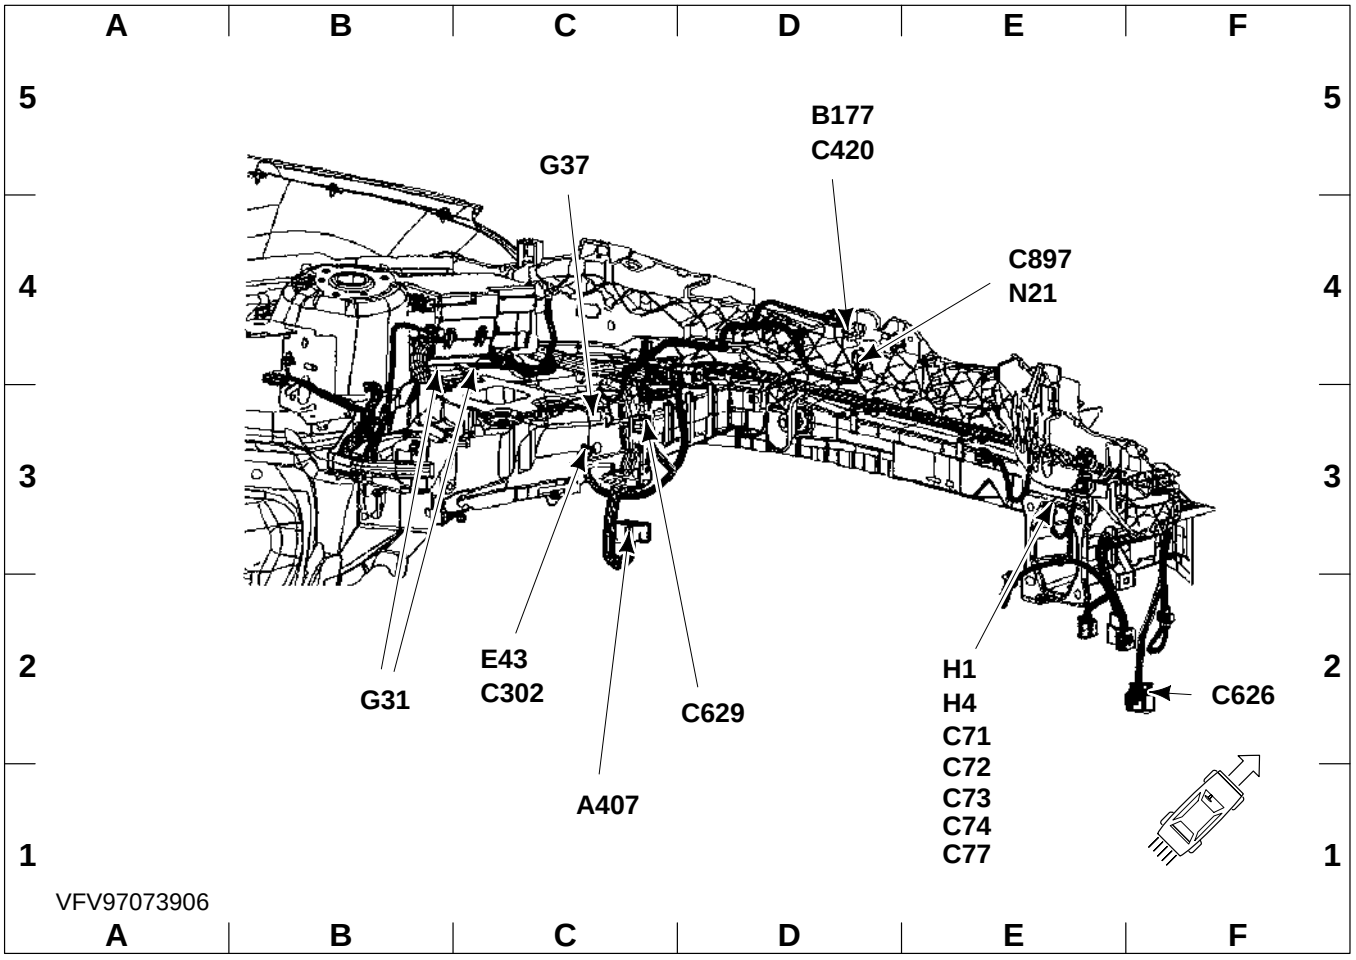


engine compartment, LH side, front

A407 . Glow plug control module (GPCM) . . . C 1
B177 . Crash sensor . . . . . D 5
C71 . . . . . E 2
C72 . . . . . E 1
C73 . . . . . E 1
C74 . . . . . E 1
C77 . . . . . E 1
C302 . . . . . C 2
C420 . . . . . D 5
C626 . . . . . F 2
C629 . . . . . D 2
C897 . . . . . E 4
E43 . . Fog lamp, LH front . . . . . C 2
G31 . . . . . B 2
G37 . . . . . C 5
H1 . . . Horn . . . . . E 2
H4 . . . Second horn . . . . . E 2
N21 . . Engine compartment switch . . . . . E 4

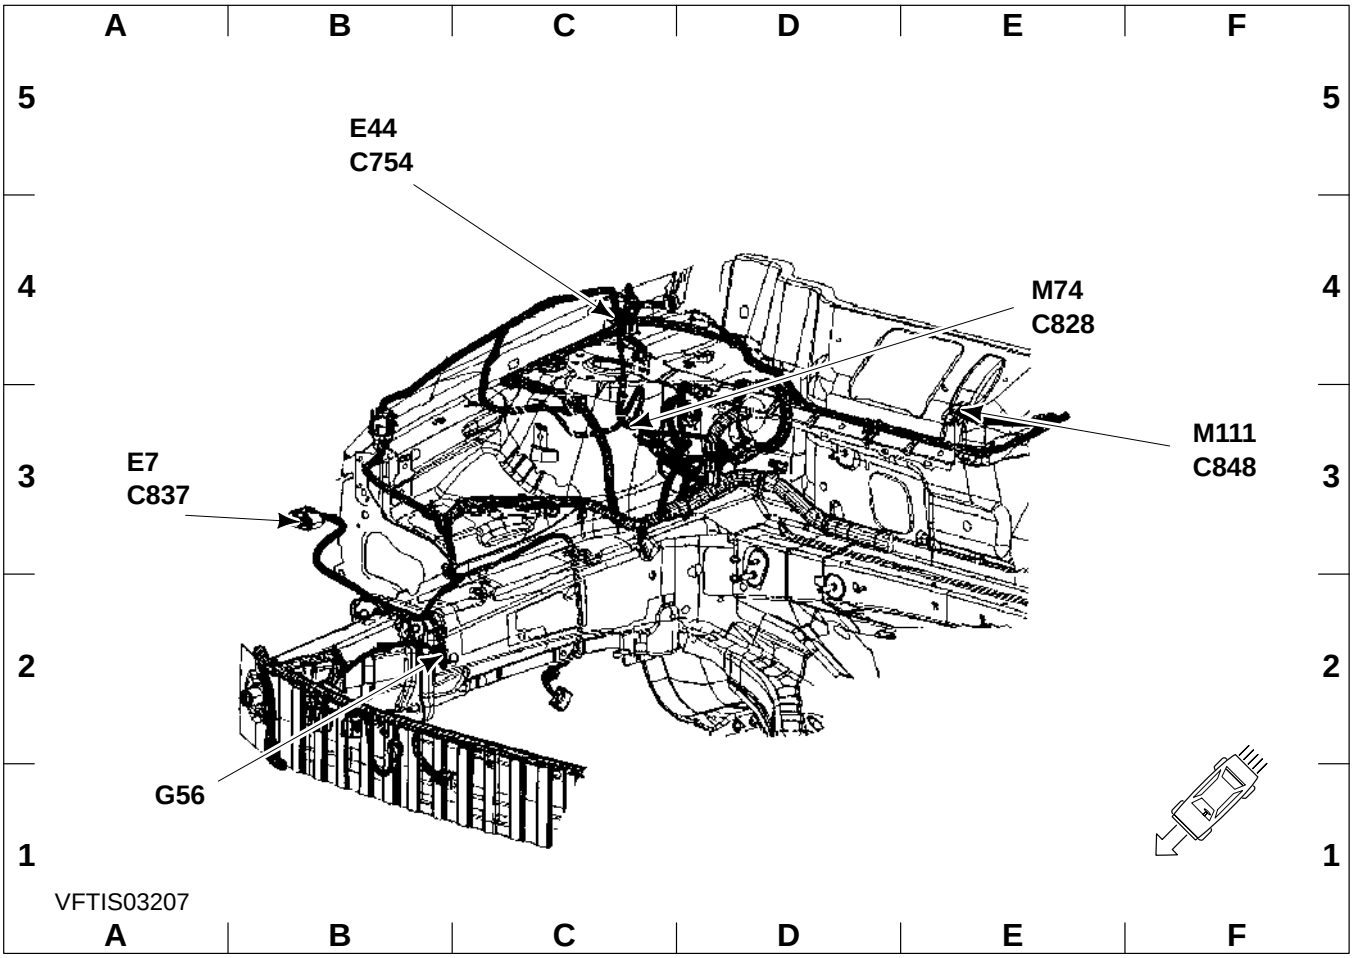


engine compartment, RH side, LHD

C754 . . . . . B 5
C828 . . . . . E 4
C837 . . . . . A 3
C848 . . . . . F 3
E7 . . . Headlamp, RH side . . . . . A 3
E44 . . Side turn signal lamp, RH side . . . . . B 5
G56 . . . . . A 1
M74 . Two–way washer pump motor . . . . . E 4
M111 Windshield wiper motor . . . . . F 3

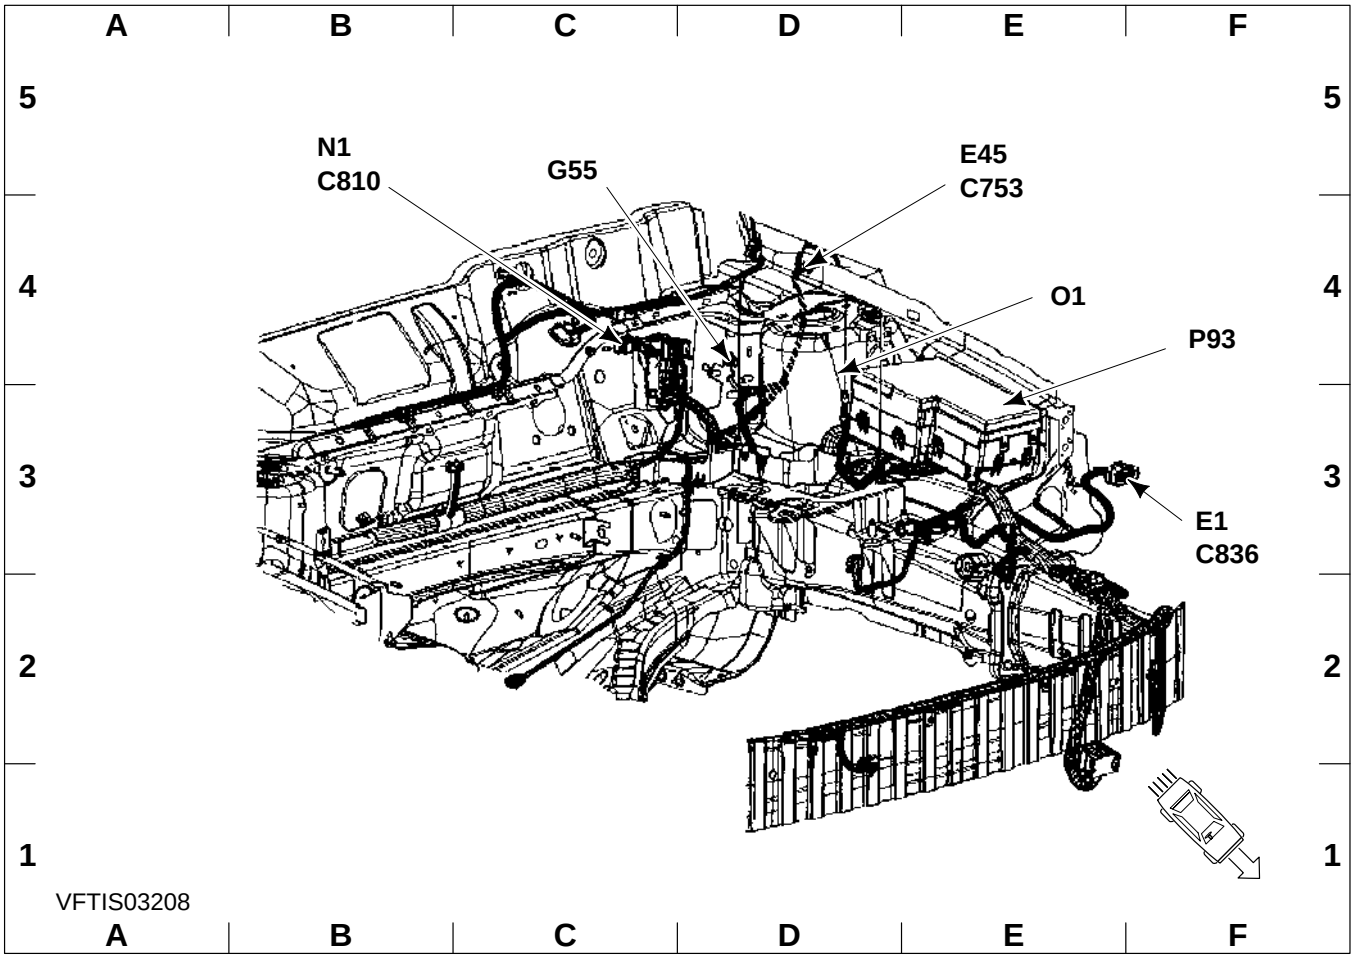

engine compartment, LH side, LHD


C753 . . . . . E 5
C810 . . . . . B 5
C836 . . . . . F 3
E1 . . . Headlamp, LH side . . . . . F 3
E45 . . Side turn signal lamp, LH side . . . . . E 5
G55 . . . . . C 5
N1 . . . Brake fluid level switch . . . . . B 5
O1 . . . Battery . . . . . E 4
P93 . . Battery Junction Box (BJB) . . . . . F 4

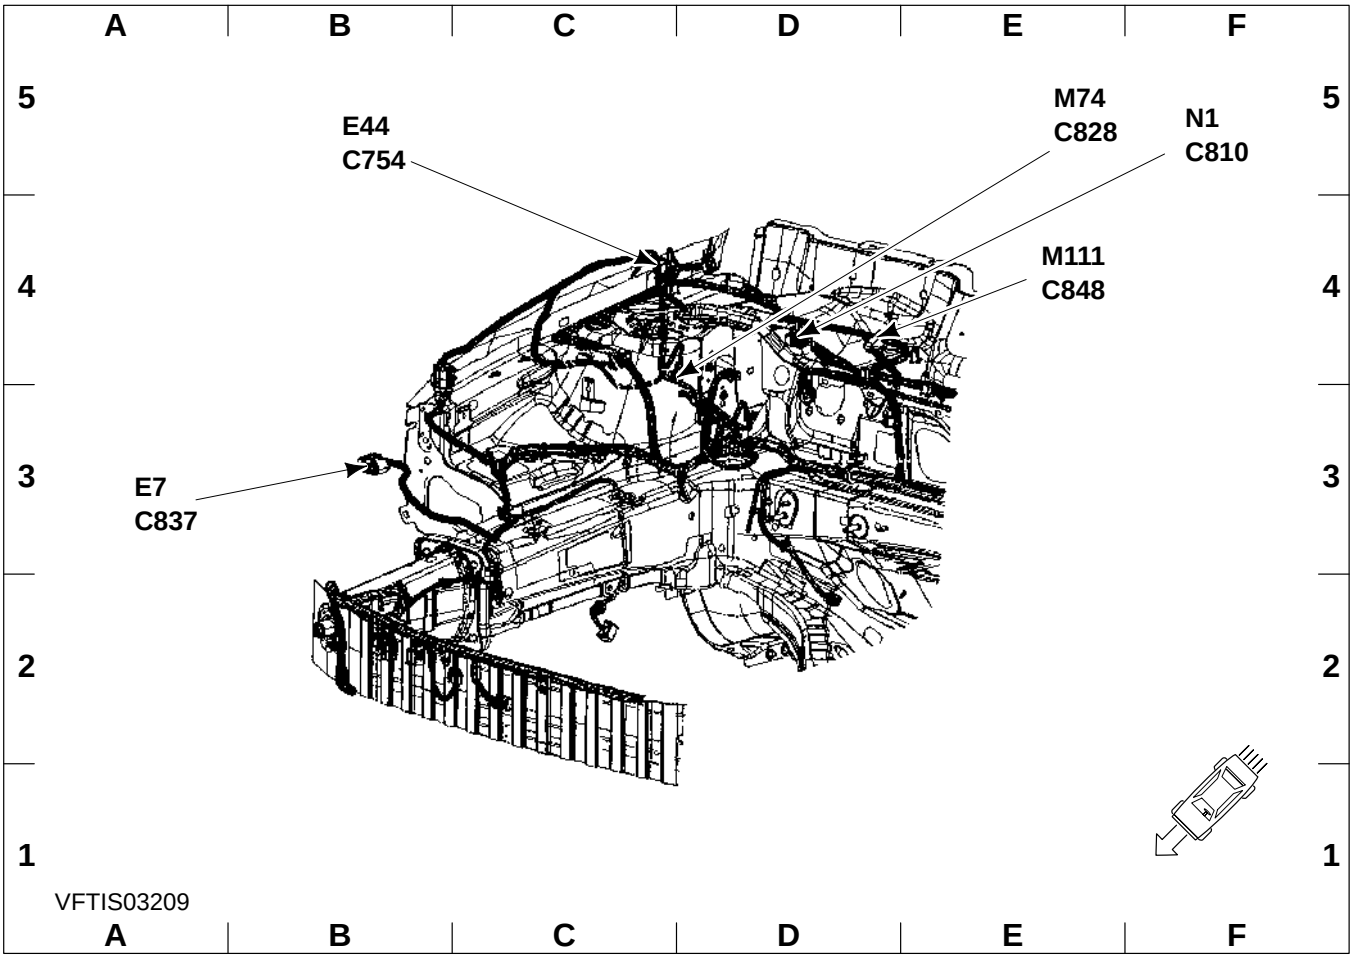

engine compartment, RH side, RHD


C754 . . . . . B 5
C810 . . . . . F 5
C828 . . . . . E 5
C837 . . . . . A 3
C848 . . . . . E 4

E7 . . . Headlamp, RH side . . . . . A 3
E44 . . Side turn signal lamp, RH side . . . . . B 5
M74 . . Two–way washer pump motor . . . . . E 5
M111 Windshield wiper motor . . . . . E 4
N1 . . . Brake fluid level switch . . . . . F 5

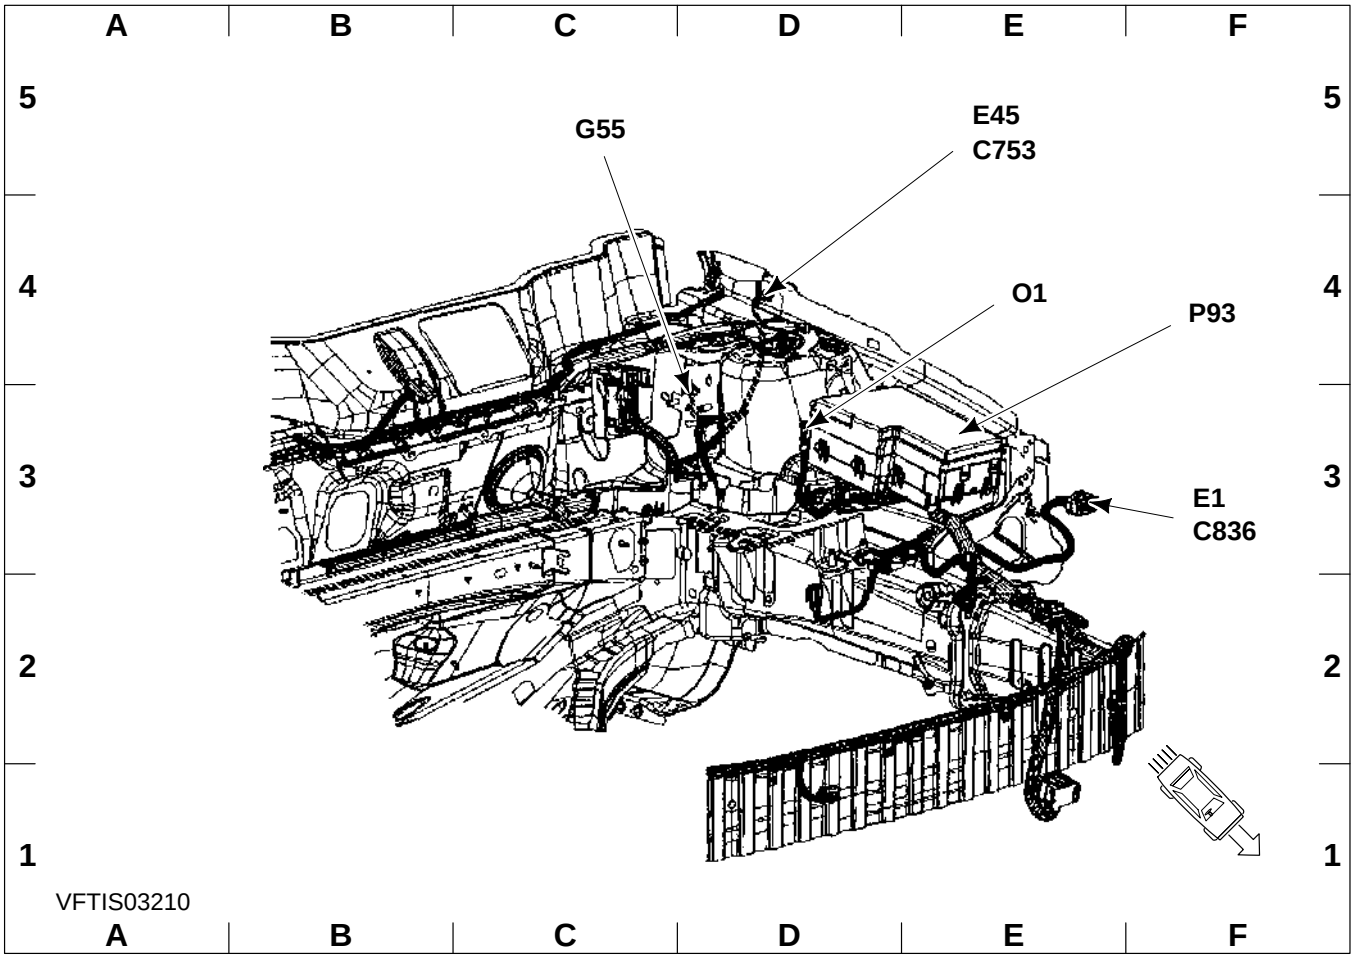


engine compartment, LH side, RHD

C753 . . . . . E 5
C836 . . . . . F 3
E1 . . . Headlamp, LH side . . . . . F 3
E45 . . Side turn signal lamp, LH side . . . . . E 5
G55 . . . . . C 5
O1 . . . Battery . . . . . E 4
P93 . . Battery Junction Box (BJB) . . . . . F 4

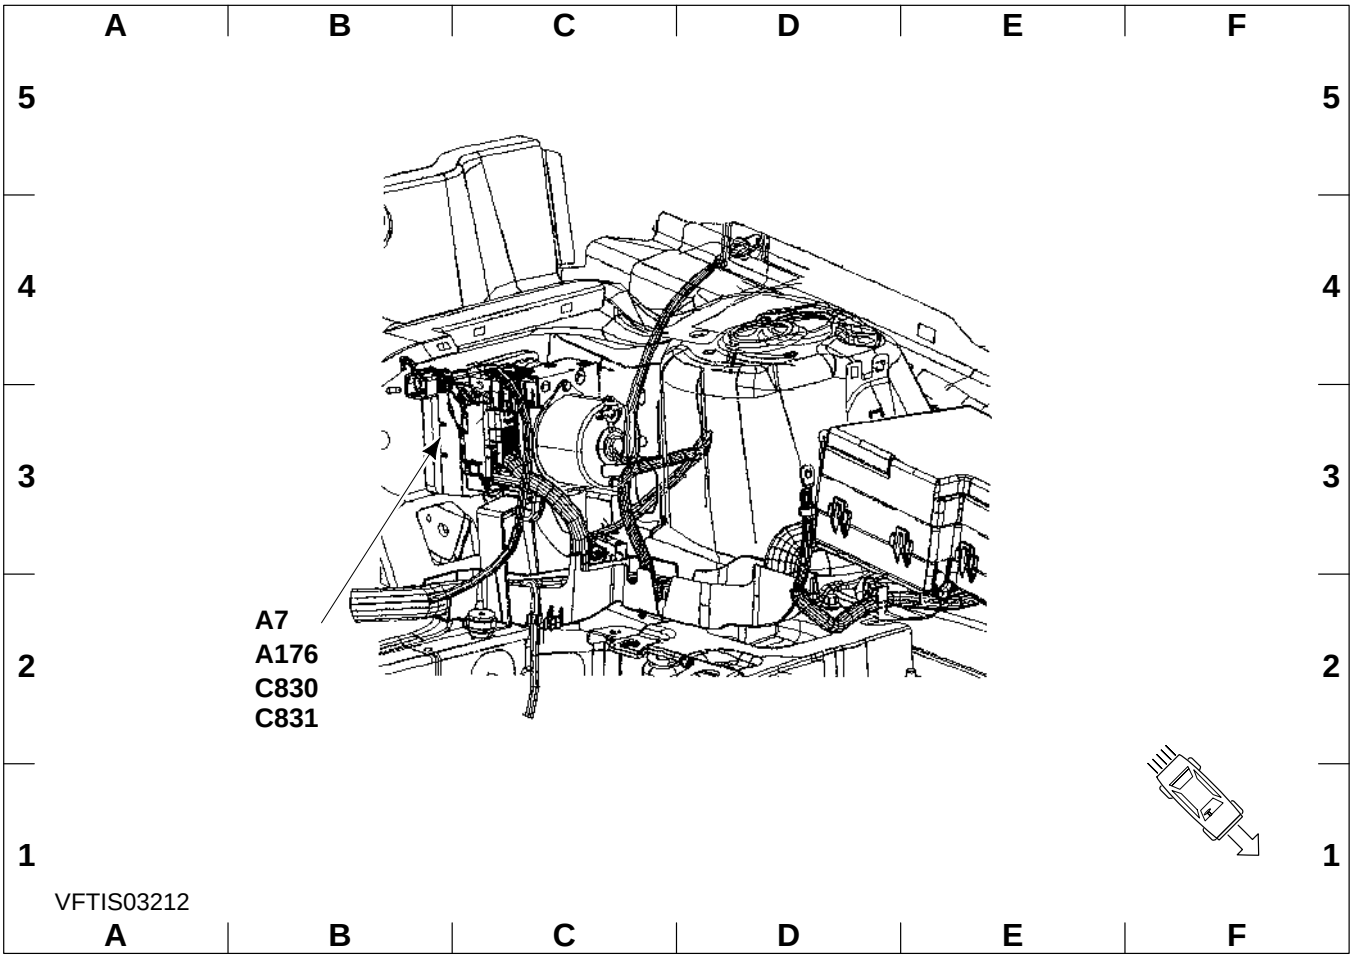


engine compartment, LH side, rear

A7 . . . ABS module . . . . . B 2
A176 . Electronic Stability Program (ESP) module . . . . . B 2
C753 . . . . . B 5
C830 . . . . . B 2
C831 . . . . . B 2

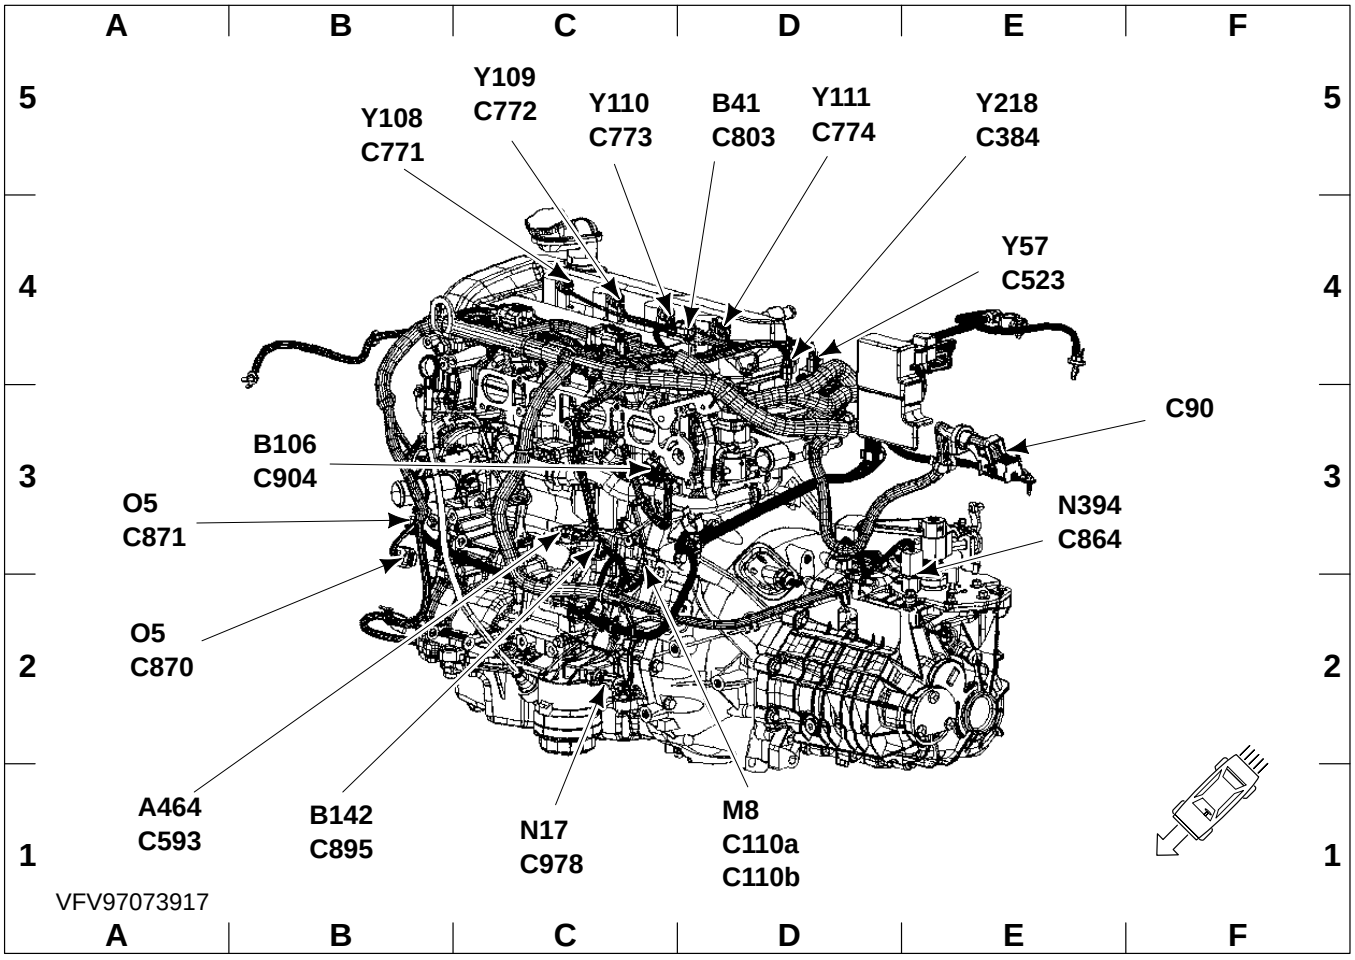


engine, front, 1.8/2.0L Duratec–HE (MI4), manual transmission

A464 . Electronic Throttle Control (ETC) module . . . . . A 1
B41 . . Camshaft position sensor . . . . . D 5
B106 . Knock sensor 2 . . . . . B 3
B142 . Temperature manifold absolute pressure sensor . . . . . B 1
C90 . . . . . F 3
C110a . . . . . D 1
C110b . . . . . D 1
C384 . . . . . E 5
C523 . . . . . E 4
C593 . . . . . A 1
C771 . . . . . B 5
C772 . . . . . C 5
C773 . . . . . C 5
C774 . . . . . D 5
C803 . . . . . D 5
C864 . . . . . E 3
C870 . . . . . A 2
C871 . . . . . A 3
C895 . . . . . B 1
C904 . . . . . B 3
C978 . . . . . C 1
M8 . . Starter motor . . . . . D 1
N17 . . Oil pressure switch . . . . . C 1
N394 . Reversing lamp switch . . . . . E 3
O5 . . . Generator . . . . . A 2
O5 . . . Generator . . . . . A 3
Y57 . . Swirl control solenoid valve . . . . . E 4
Y108 . Fuel injector 1 . . . . . B 5
Y109 . Fuel injector 2 . . . . . C 5
Y110 . Fuel injector 3 . . . . . C 5
Y111 . Fuel injector 4 . . . . . D 5
Y218 . Inlet air control valve solenoid . . . . . E 5

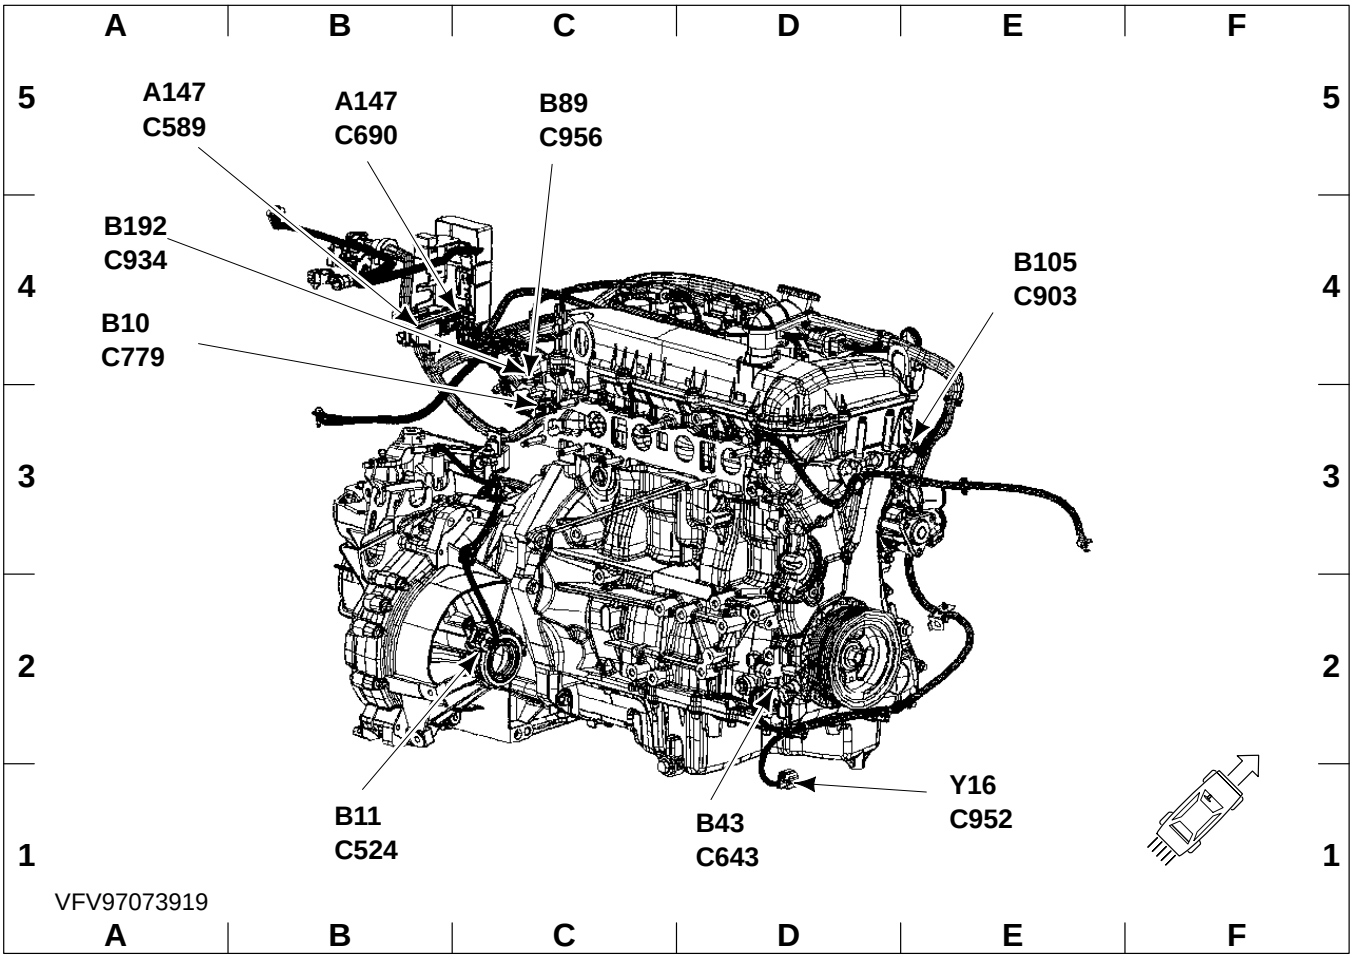


engine, rear, 1.8/2.0L Duratec–HE (MI4)

A147 . Powertrain control module (PCM) . . . . . B 5
A147 . Powertrain control module (PCM) . . . . . A 5
B10 . . Engine Coolant Temperature (ECT) sensor . . . . . A 4
B11 . . Vehicle speed sensor (VSS) . . . . . B 1
B43 . . Crankshaft position sensor . . . . . D 1
B89 . . Pre–catalyst heated oxygen sensor (HO2S) . . . . . C 5
B105 . Knock sensor 1 . . . . . E 4
B192 . Catalyst monitor sensor . . . . . A 4
C524 . . . . . B 1
C589 . . . . . A 5
C643 . . . . . D 1
C690 . . . . . B 5
C779 . . . . . A 4
C903 . . . . . E 4
C934 . . . . . A 4
C952 . . . . . E 1
C956 . . . . . C 5
Y16 . . A/C Compressor clutch . . . . . E 1

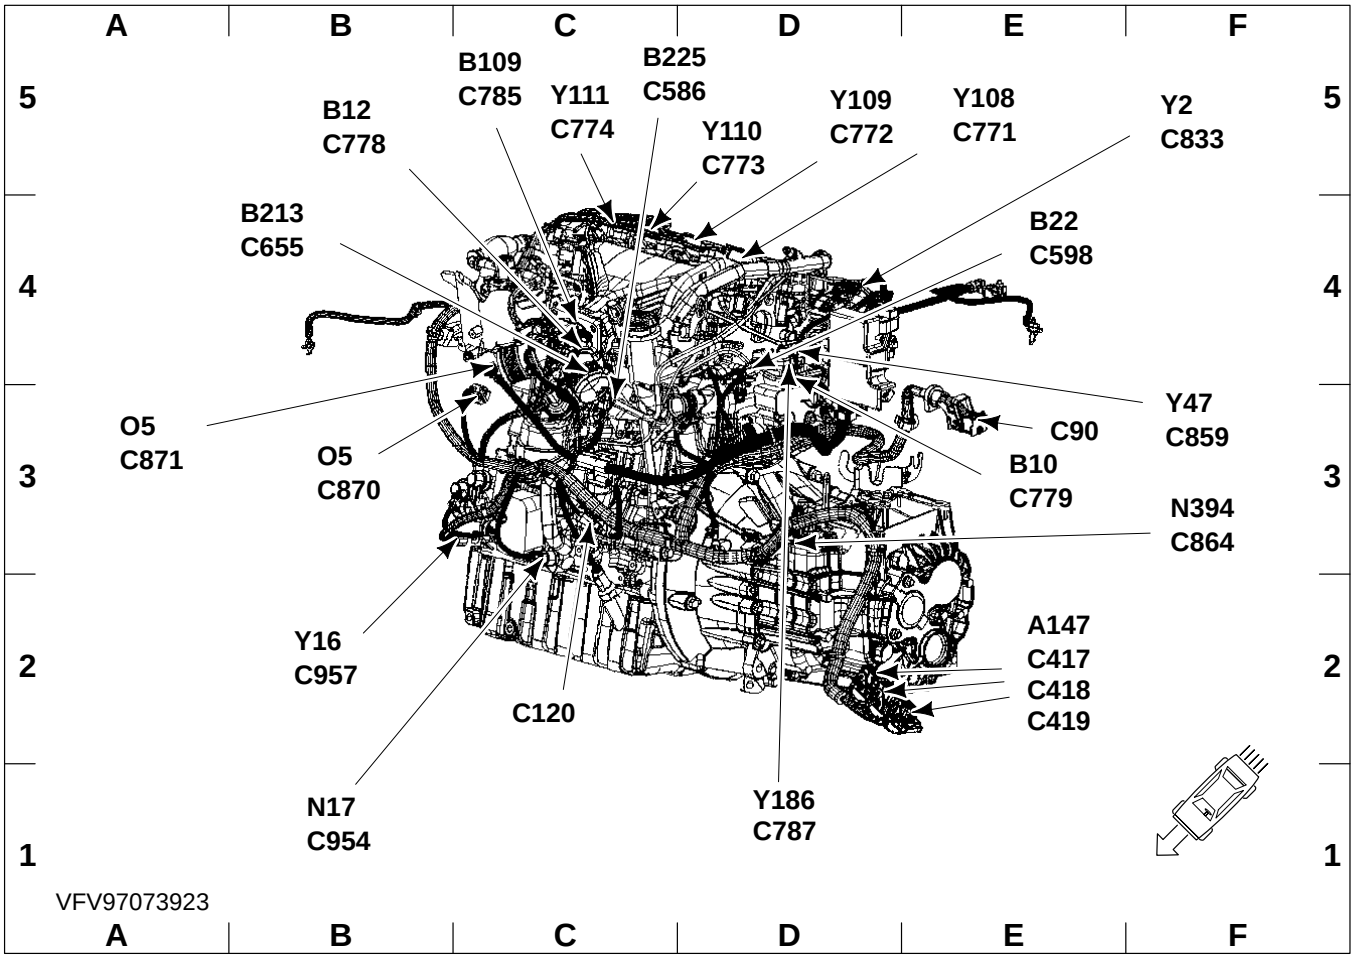


engine, front, 2.0L Duratorq–TDCi (DW) Diesel

A147 . Powertrain control module (PCM) . . . . . E 2
B10 . . Engine Coolant Temperature (ECT) sensor . . . . . E 3
B12 . . Water–in–fuel sensor . . . . . B 5
B22 . . Mass Air Flow (MAF) sensor . . . . . E 4
B109 . Fuel temperature sensor . . . . . C 5
B213 . Intake Air Temperature (IAT) sensor . . . B 4
B225 . Fuel rail pressure transducer sensor . . . . C 5
C90 . . . . . E 3
C120 . . . . . C 2
C417 . . . . . E 2
C418 . . . . . E 2
C419 . . . . . E 2
C586 . . . . . C 5
C598 . . . . . E 4
C655 . . . . . B 4
C771 . . . . . E 5
C772 . . . . . D 5
C773 . . . . . D 5
C774 . . . . . C 5
C778 . . . . . B 5
C779 . . . . . E 3
C785 . . . . . C 5
C787 . . . . . D 1
C833 . . . . . F 5
C859 . . . . . F 3
C864 . . . . . F 3
C870 . . . . . B 3
C871 . . . . . A 3
C954 . . . . . B 1
C957 . . . . . B 2
N17 . . Oil pressure switch . . . . . B 1
N394 . Reversing lamp switch . . . . . F 3
O5 . . . Generator . . . . . B 3
O5 . . . Generator . . . . . A 3
Y2 . . . Exhaust Gas Recirculation (EGR) valve . F 5
Y16 . . A/C Compressor clutch . . . . . B 2
Y47 . . Fuel pressure solenoid valve . . . . . F 3
Y108 . Fuel injector 1 . . . . . E 5
Y109 . Fuel injector 2 . . . . . D 5
Y110 . Fuel injector 3 . . . . . D 5
Y111 . Fuel injector 4 . . . . . C 5
Y186 . Coolant shutoff valve . . . . . D 1

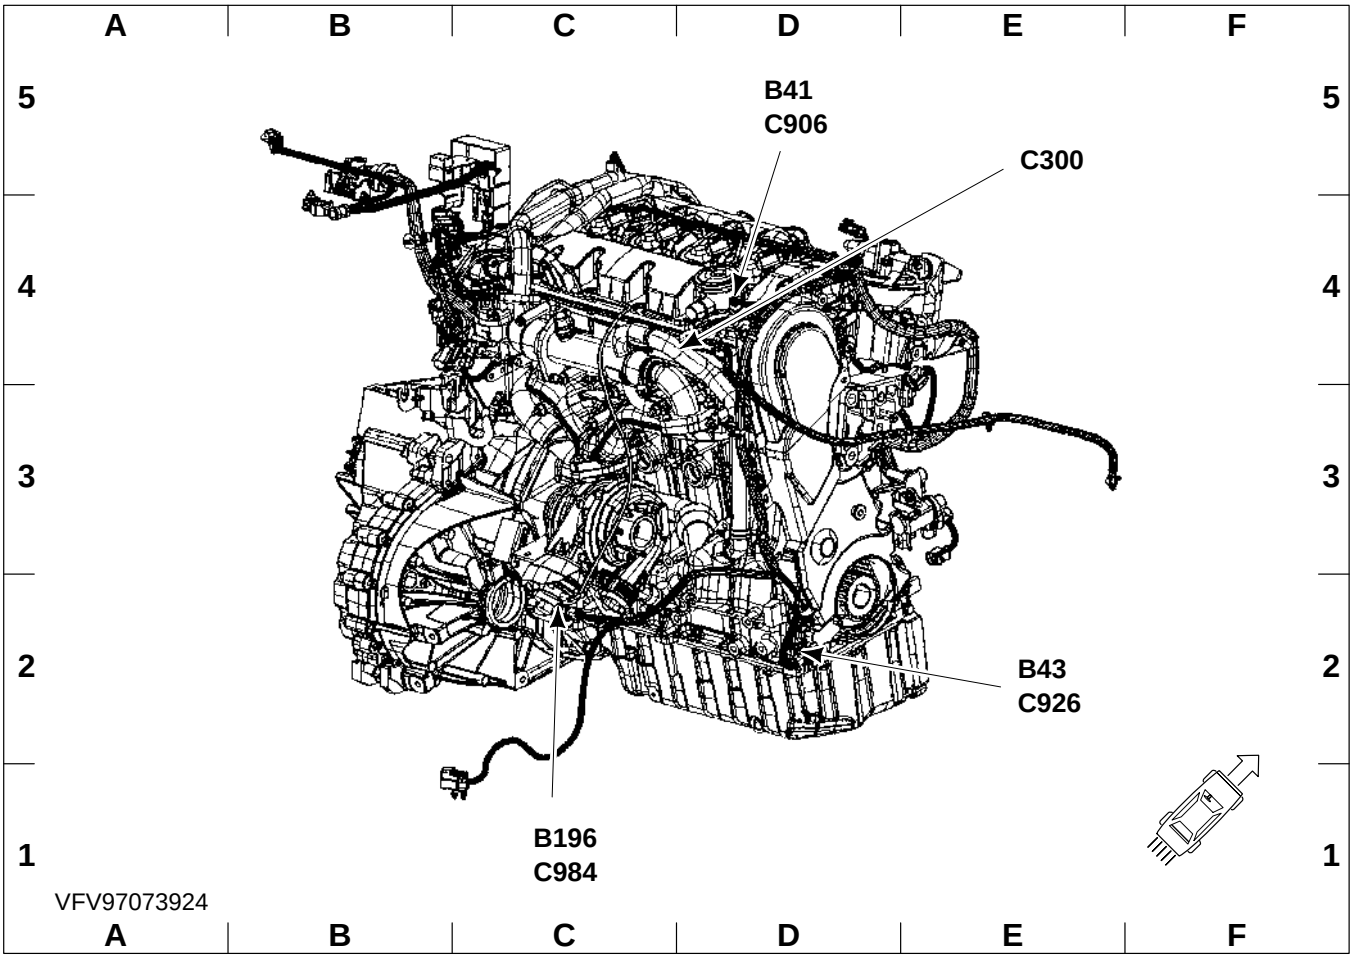


engine, rear, 2.0L Duratorq–TDCi (DW) Diesel

B41 . . Camshaft position sensor . . . . . D 5
B43 . . Crankshaft position sensor . . . . . E 2
B196 . Turbo geometry position sensor . . . . . C 1
C300 . . . . . E 5
C906 . . . . . D 5
C926 . . . . . E 2
C984 . . . . . C 1

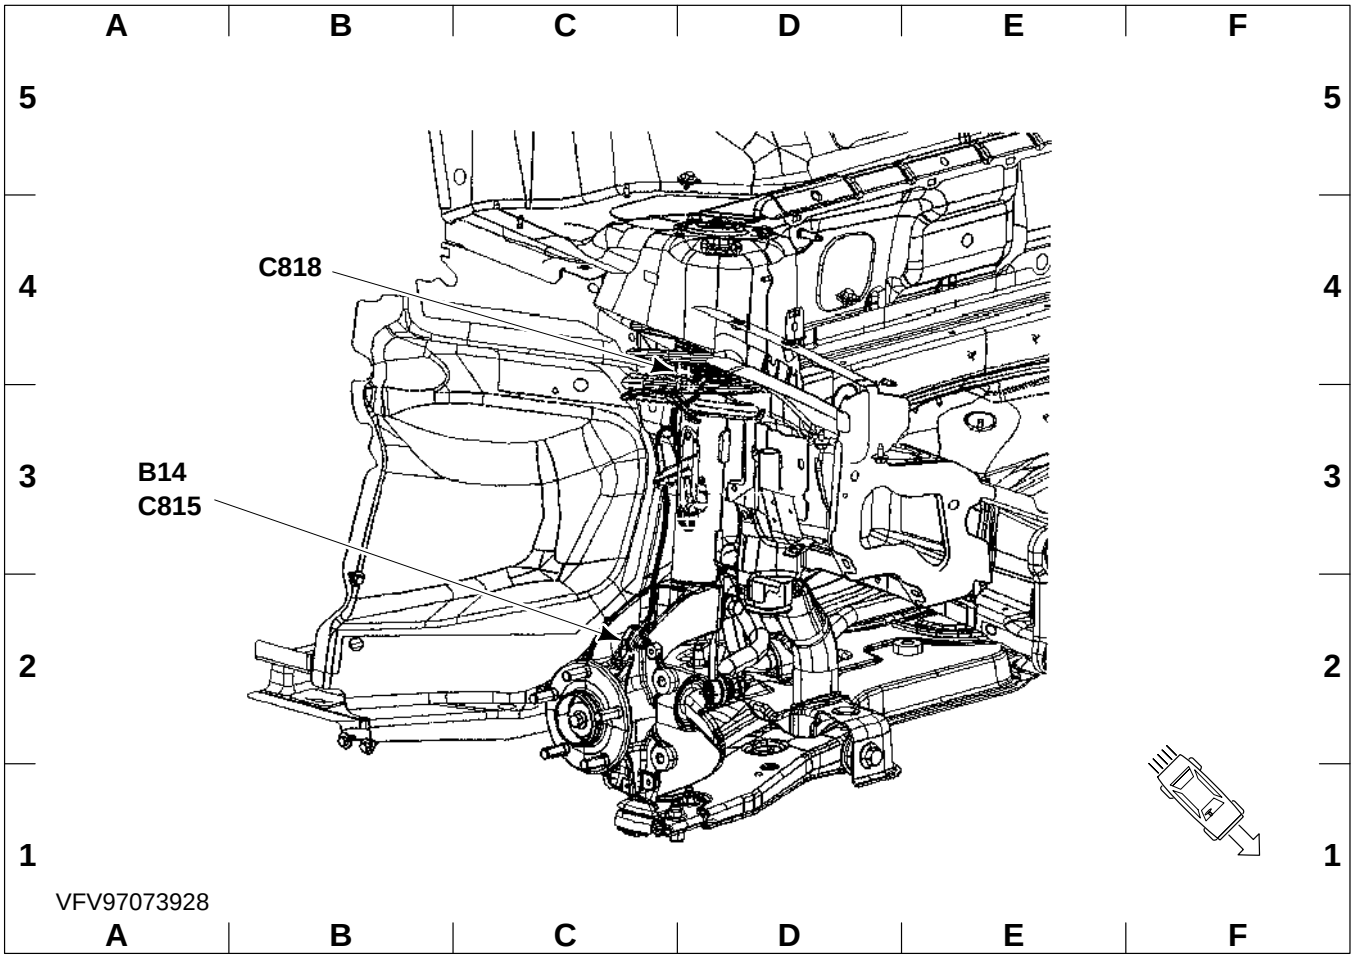


front axle, RH side

B14 . . Wheel speed sensor, RH side front . . . . A 3
C815 . . . . . A 3
C818 . . . . . B 4

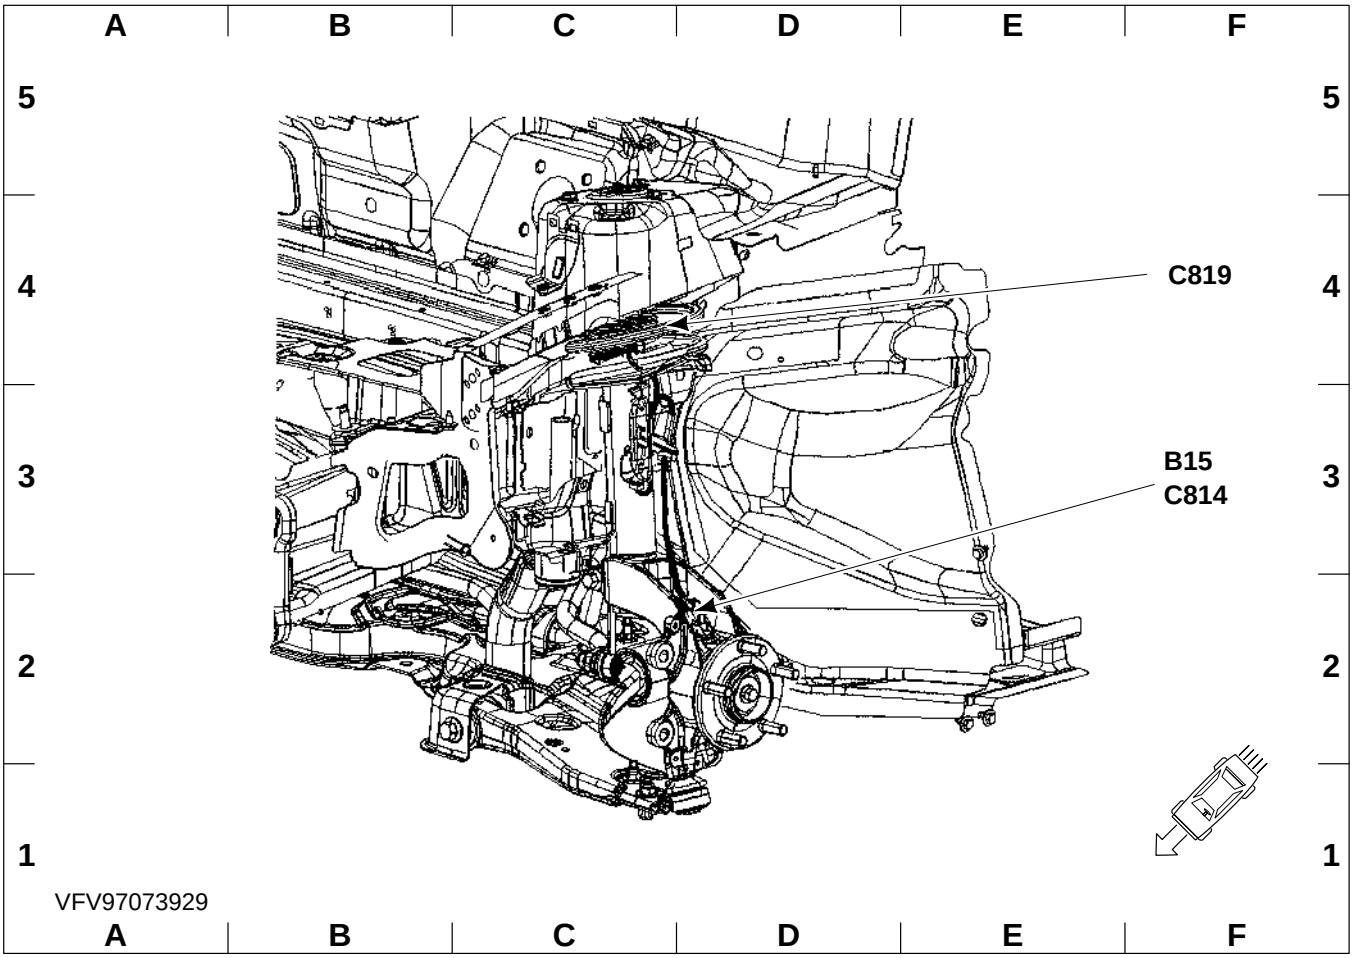


front axle, LH side

B15 . . Wheel speed sensor, LH side front . . . . . F 3
C814 . . . . . F 3
C819 . . . . . F 4

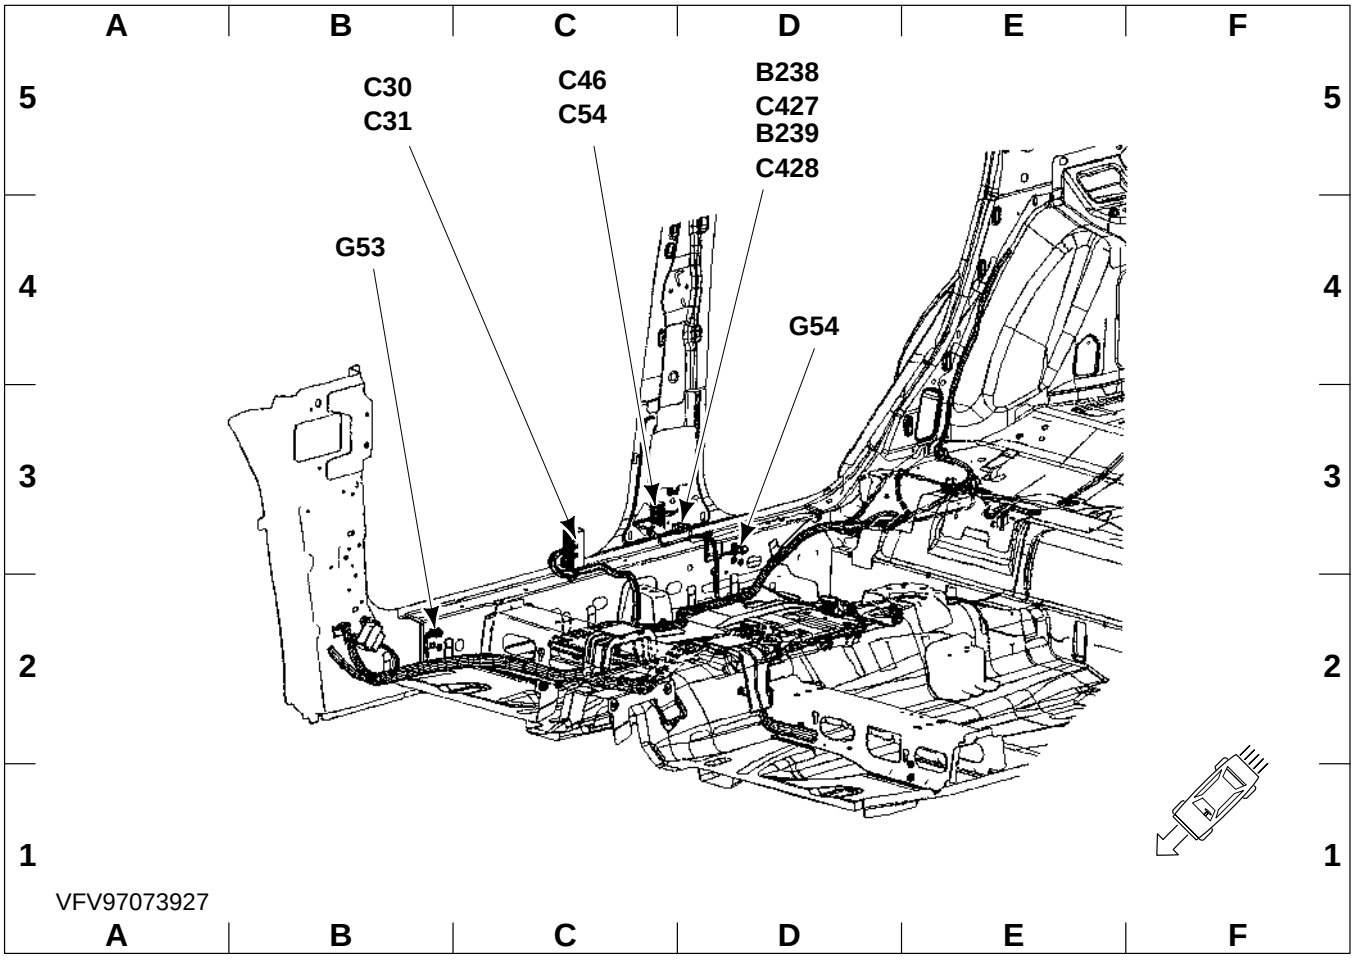


vehicle floor, RH side

B238 . Side air bag sensor, driver . . . . . D 5
B239 . Side air bag sensor, passenger . . . . . D 5
C30 . . . . . B 5
C31 . . . . . B 5
C46 . . . . . C 5
C54 . . . . . C 5
C427 . . . . . D 5
C428 . . . . . D 5
G53 . . . . . B 4
G54 . . . . . D 4

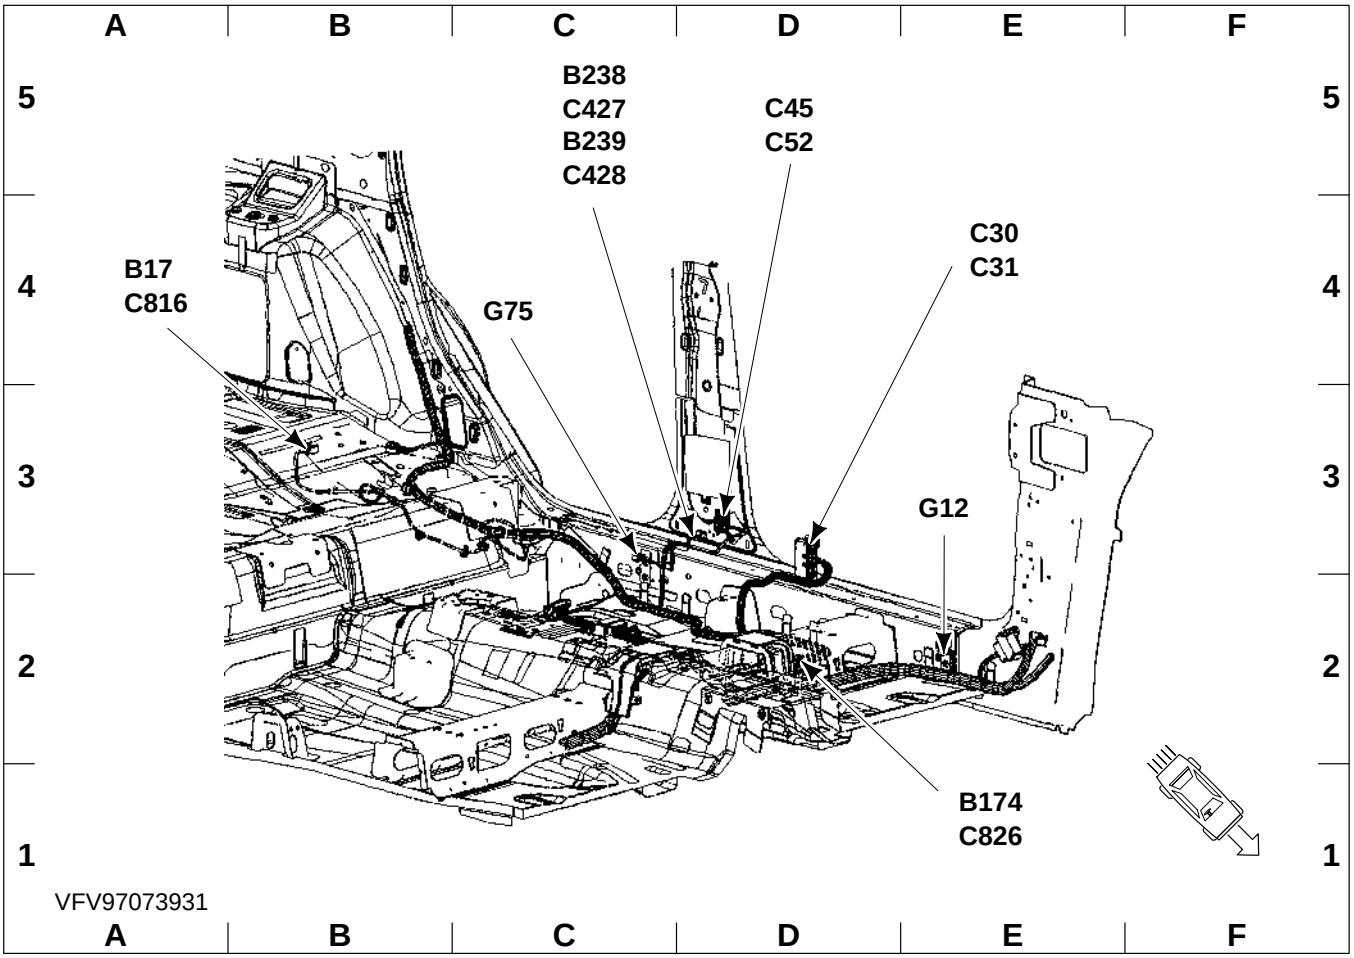


vehicle floor, LH side

B17 . . Wheel speed sensor, LH side rear . . . . . A 4
B174 . Yaw rate sensor . . . . . E 1
B238 . Side air bag sensor, driver . . . . . C 5
B239 . Side air bag sensor, passenger . . . . . C 5
C30 . . . . . E 4
C31 . . . . . E 4
C45 . . . . . D 5
C52 . . . . . D 5
C427 . . . . . C 5
C428 . . . . . C 5
C816 . . . . . A 4
C826 . . . . . E 1
G12 . . . . . E 3
G75 . . . . . C 4

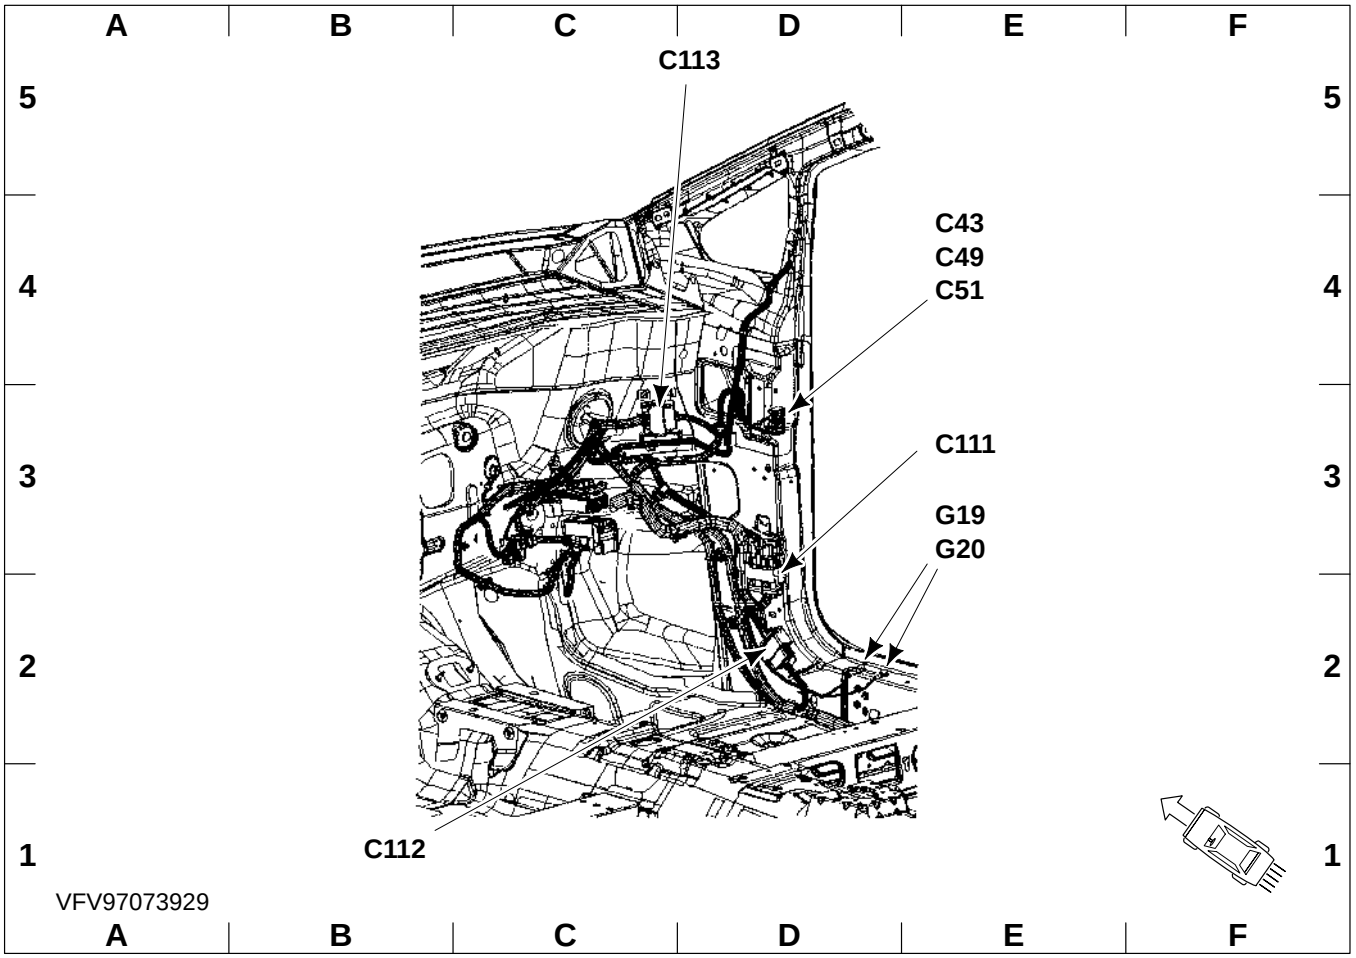


RH A–pillar, LHD

C43 . . . . . E 4
C49 . . . . . E 4
C51 . . . . . E 4
C111 . . . . . E 3
C112 . . . . . B 1
C113 . . . . . D 5
G19 . . . . . E 3
G20 . . . . . E 3

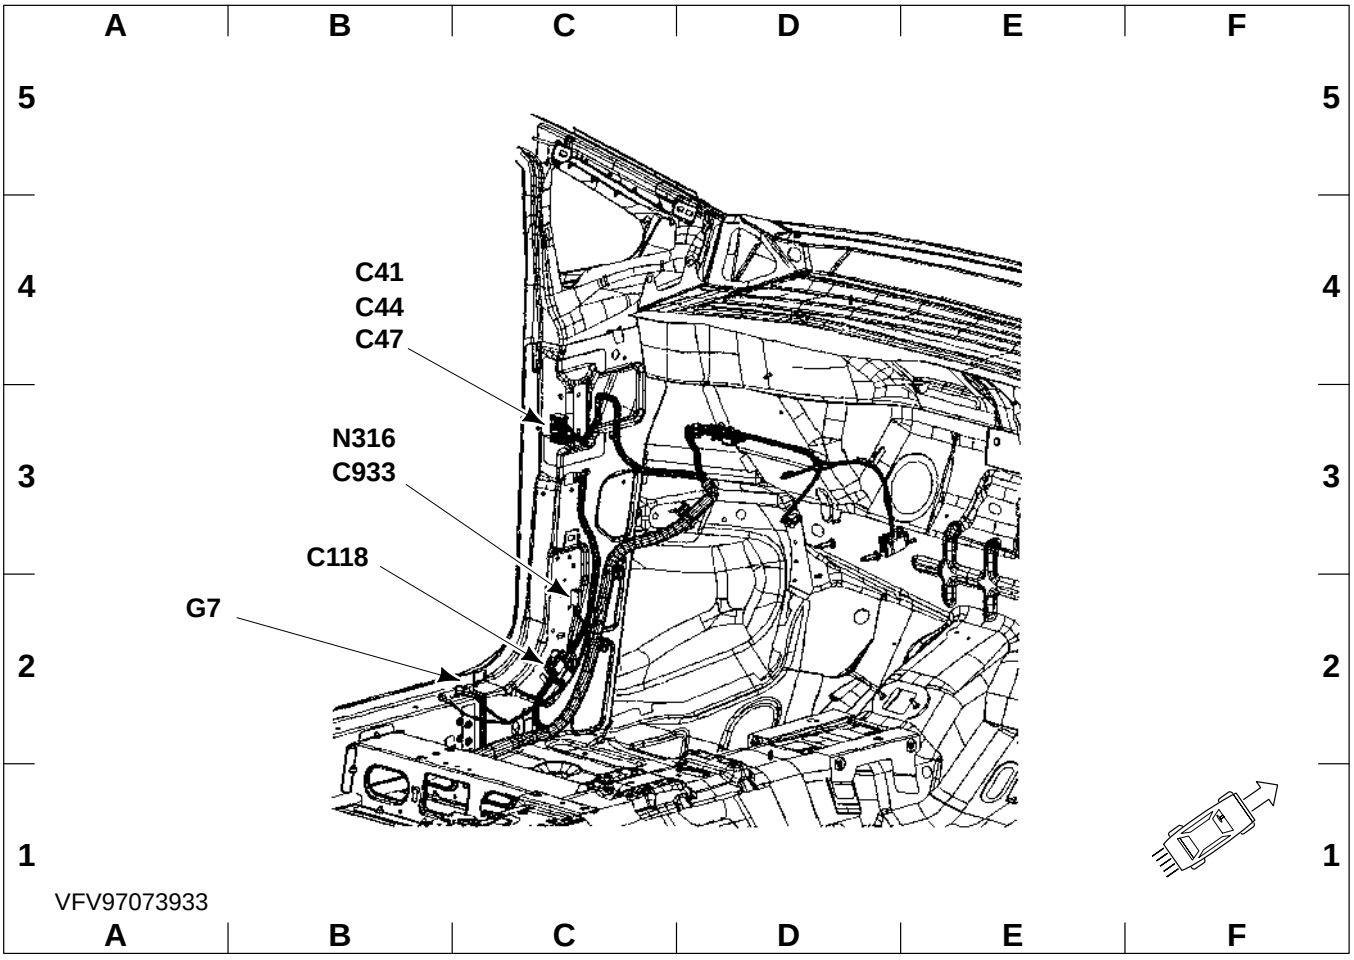


LH A–pillar, LHD

C41 . . . . . B 4
C44 . . . . . B 4
C47 . . . . . B 4
C118 . . . . . B 3
C933 . . . . . B 3
G7 . . . . . A 2
N316 . Inertia Fuel Shutoff (IFS) switch . . . . . B 3

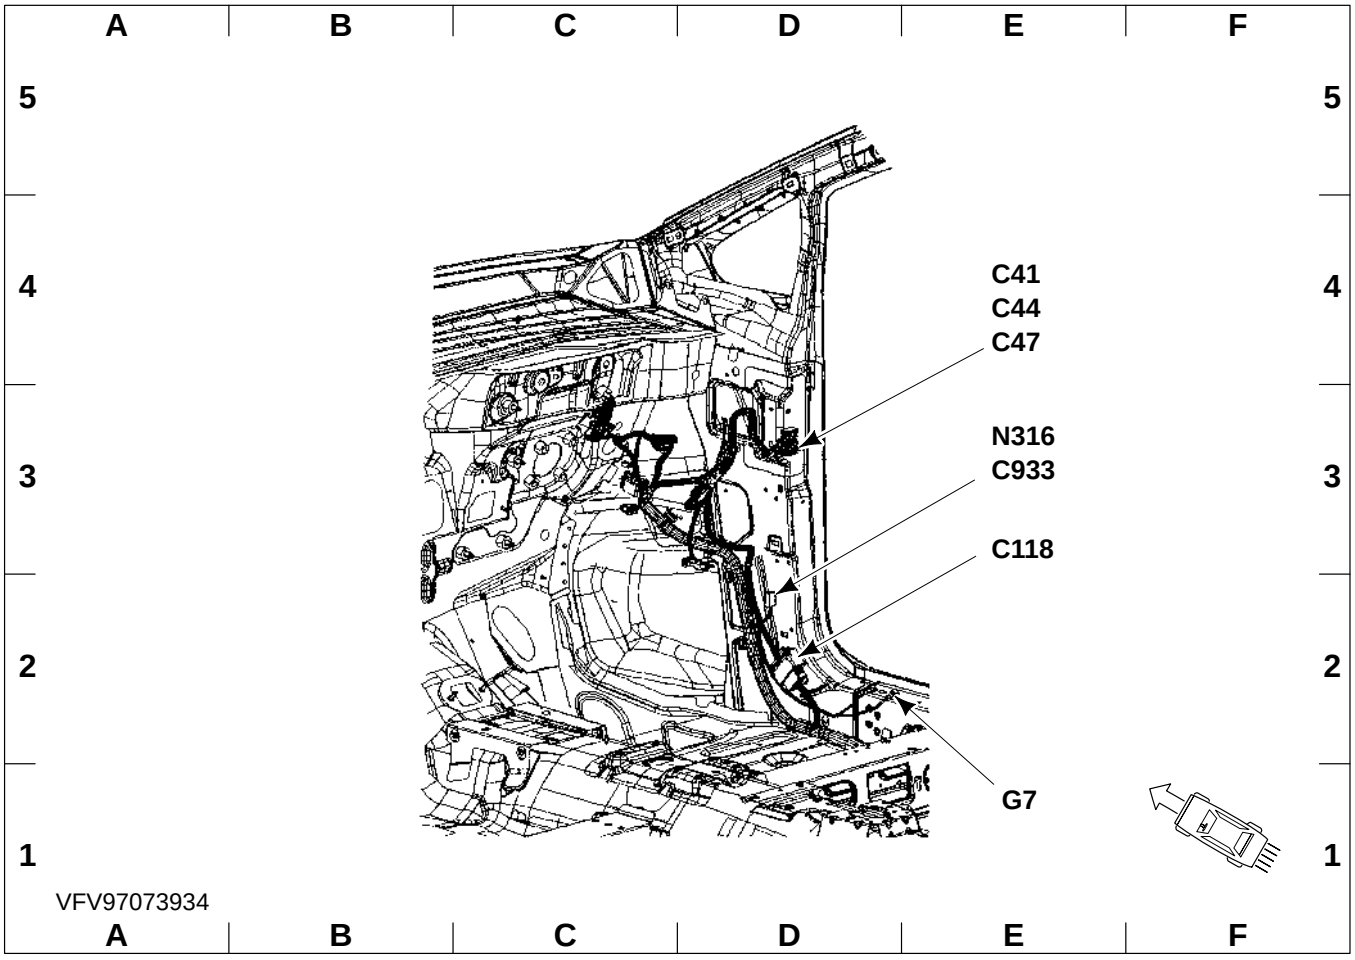


RH A–pillar, RHD

C41 . . . . . E 4
C44 . . . . . E 4
C47 . . . . . E 4
C118 . . . . . E 3
C933 . . . . . E 3
G7 . . . . . E 1
N316 . Inertia Fuel Shutoff (IFS) switch . . . . . E 3

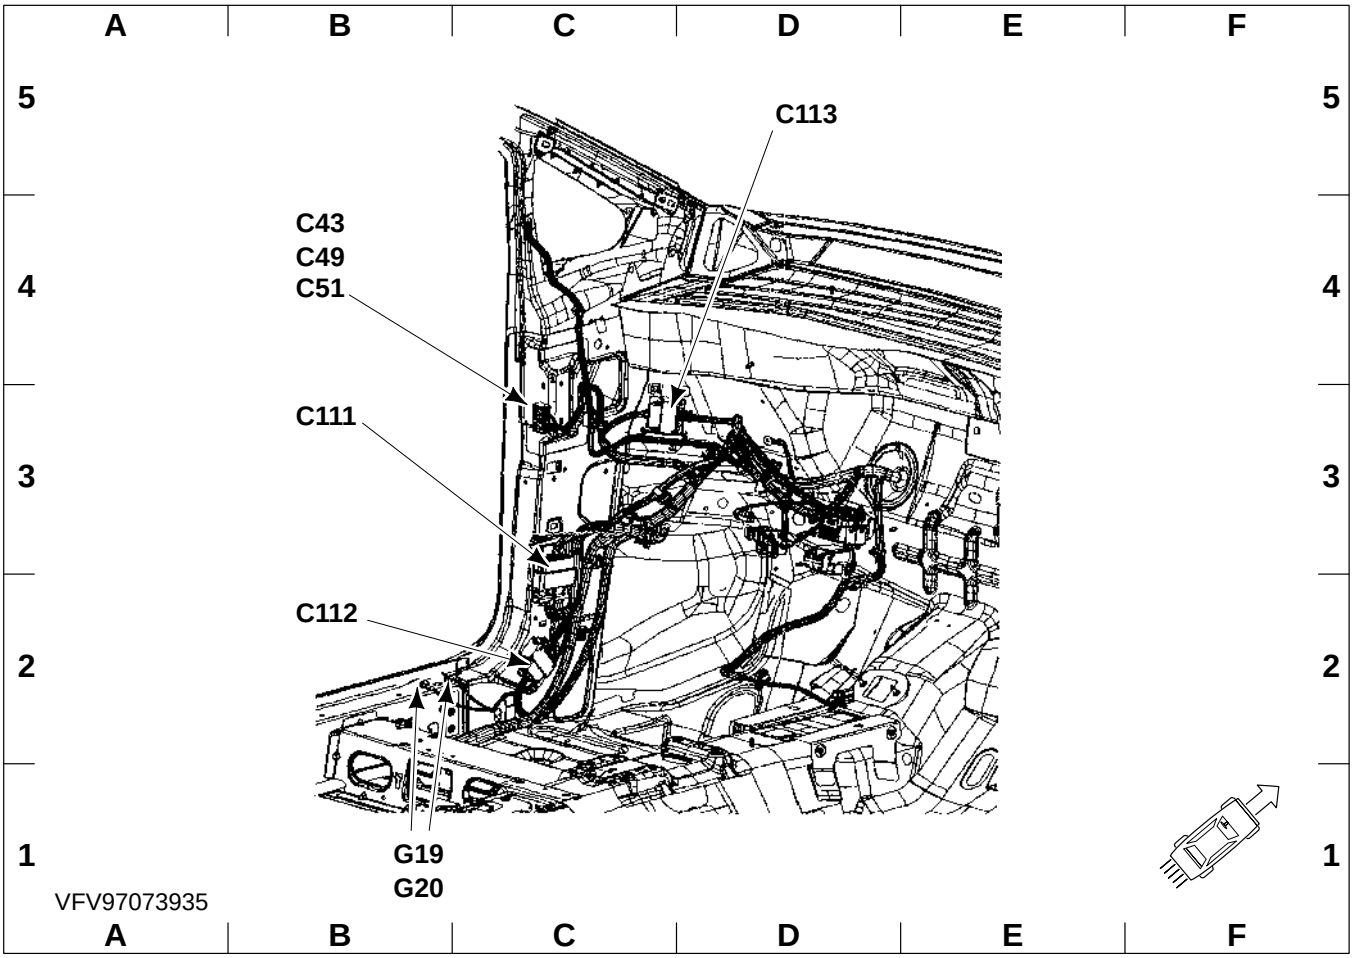


LH A–pillar, RHD

C43 . . . . . B 4
C49 . . . . . B 4
C51 . . . . . B 4
C111 . . . . . B 3
C112 . . . . . B 2
C113 . . . . . D 5
G19 . . . . . B 1
G20 . . . . . B 1

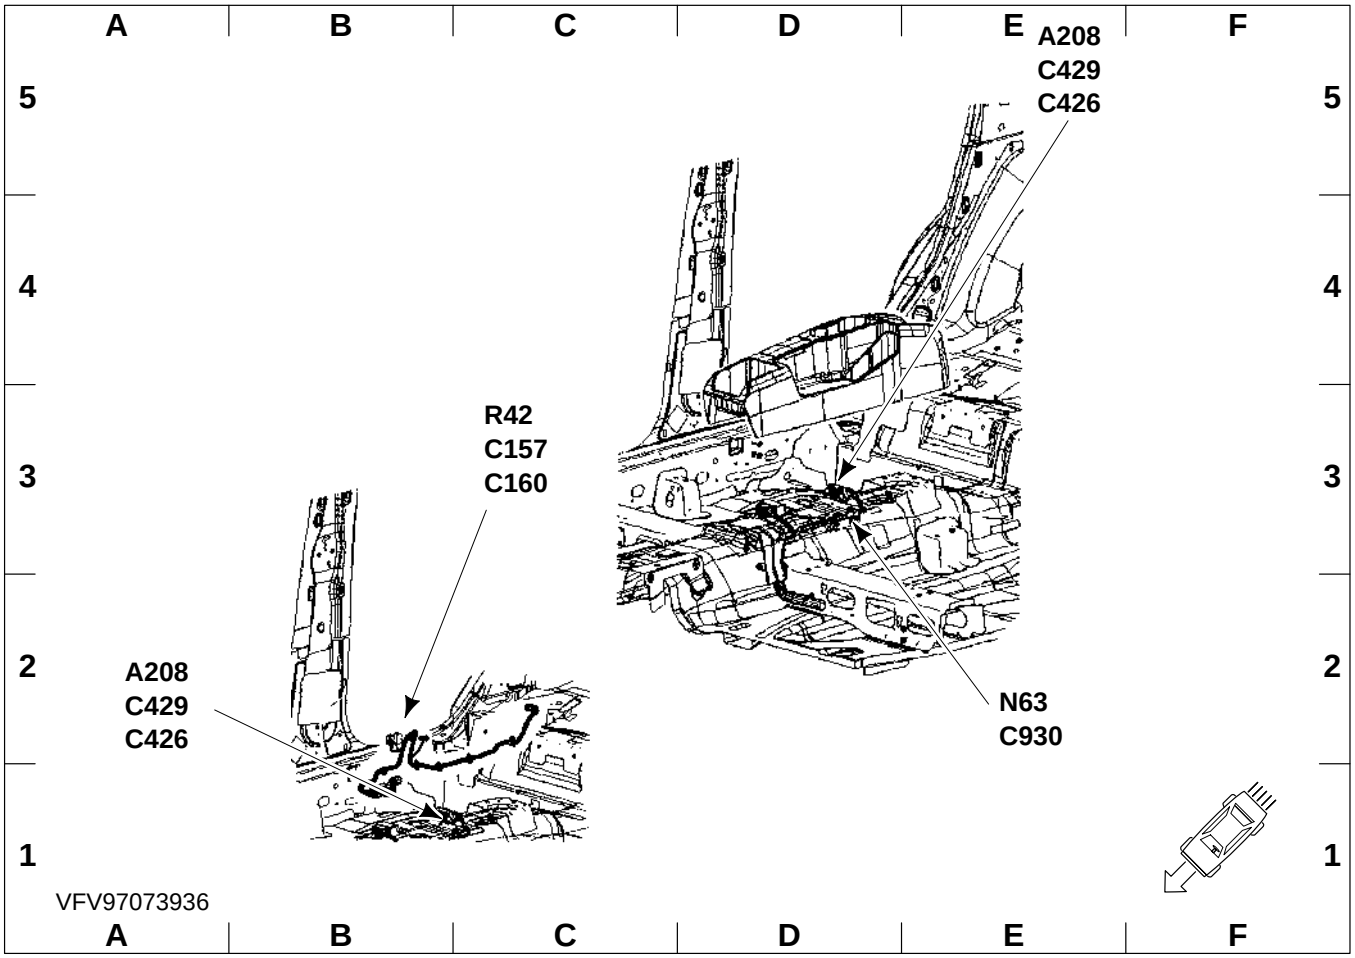


under centre console

A208 . Restraints Control Module (RCM) . . . . . E 5
A208 . Restraints Control Module (RCM) . . . . . A 2
C157 . . . . . C 3
C160 . . . . . C 3
C426 . . . . . E 5
C426 . . . . . A 2
C429 . . . . . E 5
C429 . . . . . A 2
C930 . . . . . E 2
N63 . . Parking brake switch . . . . . E 2
R42 . . Cigar lighter, front . . . . . C 3

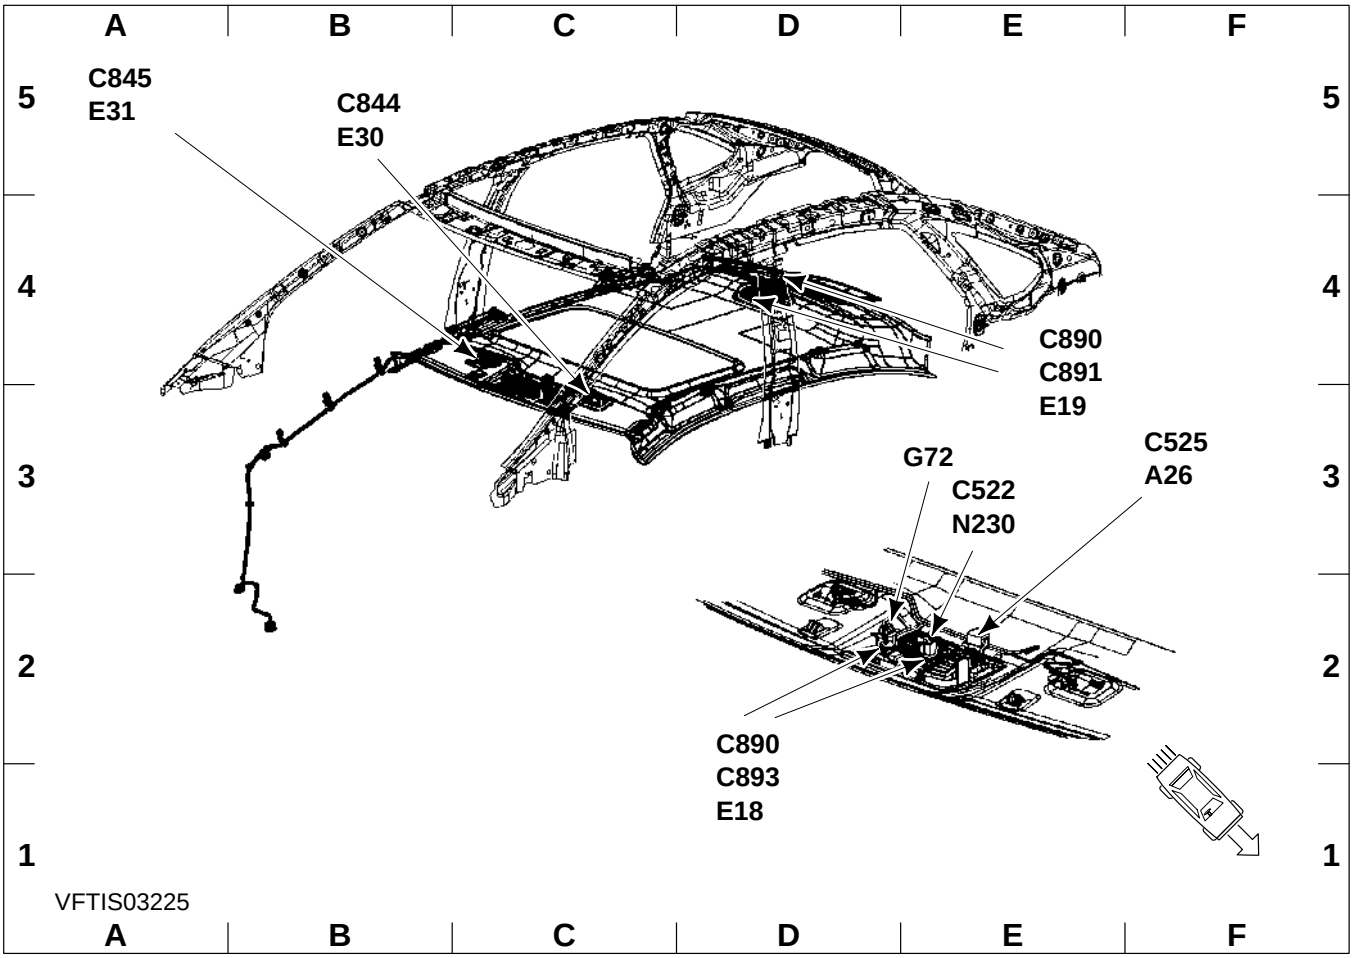


roof, LHD, 4–door model

A26 . . Roof opening panel module . . . . . F 3
C522 . . . . . E 3
C525 . . . . . F 3
C844 . . . . . B 5
C845 . . . . . A 5
C890 . . . . . E 4
C890 . . . . . D 2
C891 . . . . . E 4
C893 . . . . . D 1
E18 . . Interior lamp, front . . . . . D 1
E19 . . Interior lamp, rear . . . . . E 3
E30 . . Vanity mirror lamp, LH side . . . . . B 5
E31 . . Vanity mirror lamp, RH side . . . . . A 5
G72 . . . . . E 3
N230 . Roof opening panel control switch . . . . . E 3

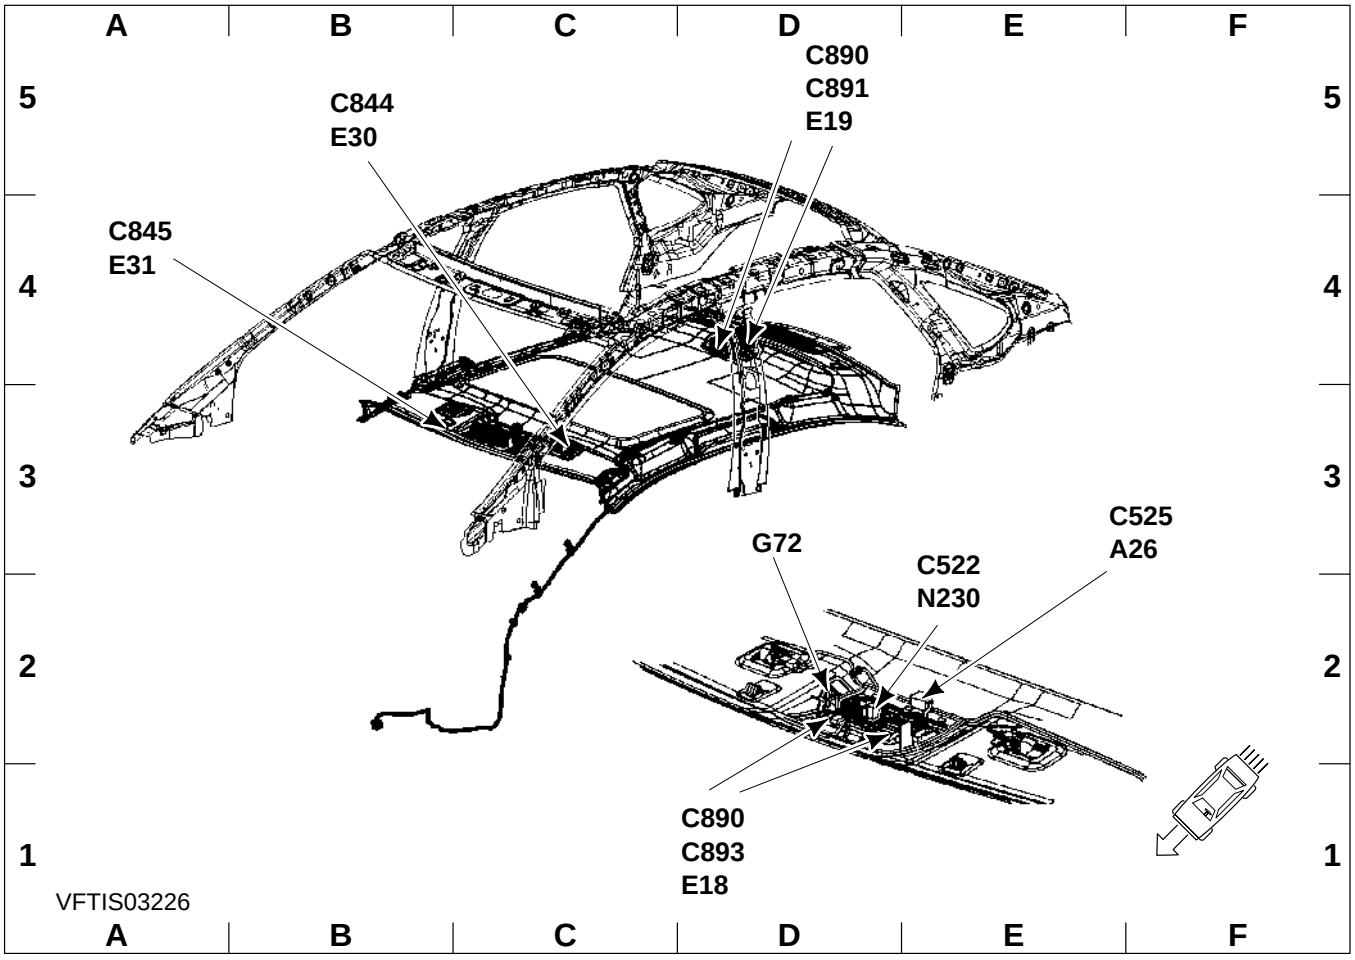


roof, RHD, 4–door model

A26 . . Roof opening panel module . . . . . F 3
C522 . . . . . E 3
C525 . . . . . F 3
C844 . . . . . B 5
C845 . . . . . A 4
C890 . . . . . D 1
C890 . . . . . D 5
C891 . . . . . D 5
C893 . . . . . D 1
E18 . . Interior lamp, front . . . . . D 1
E19 . . Interior lamp, rear . . . . . D 5
E30 . . Vanity mirror lamp, LH side . . . . . B 5
E31 . . Vanity mirror lamp, RH side . . . . . A 4
G72 . . . . . D 3
N230 . Roof opening panel control switch . . . . . E 2

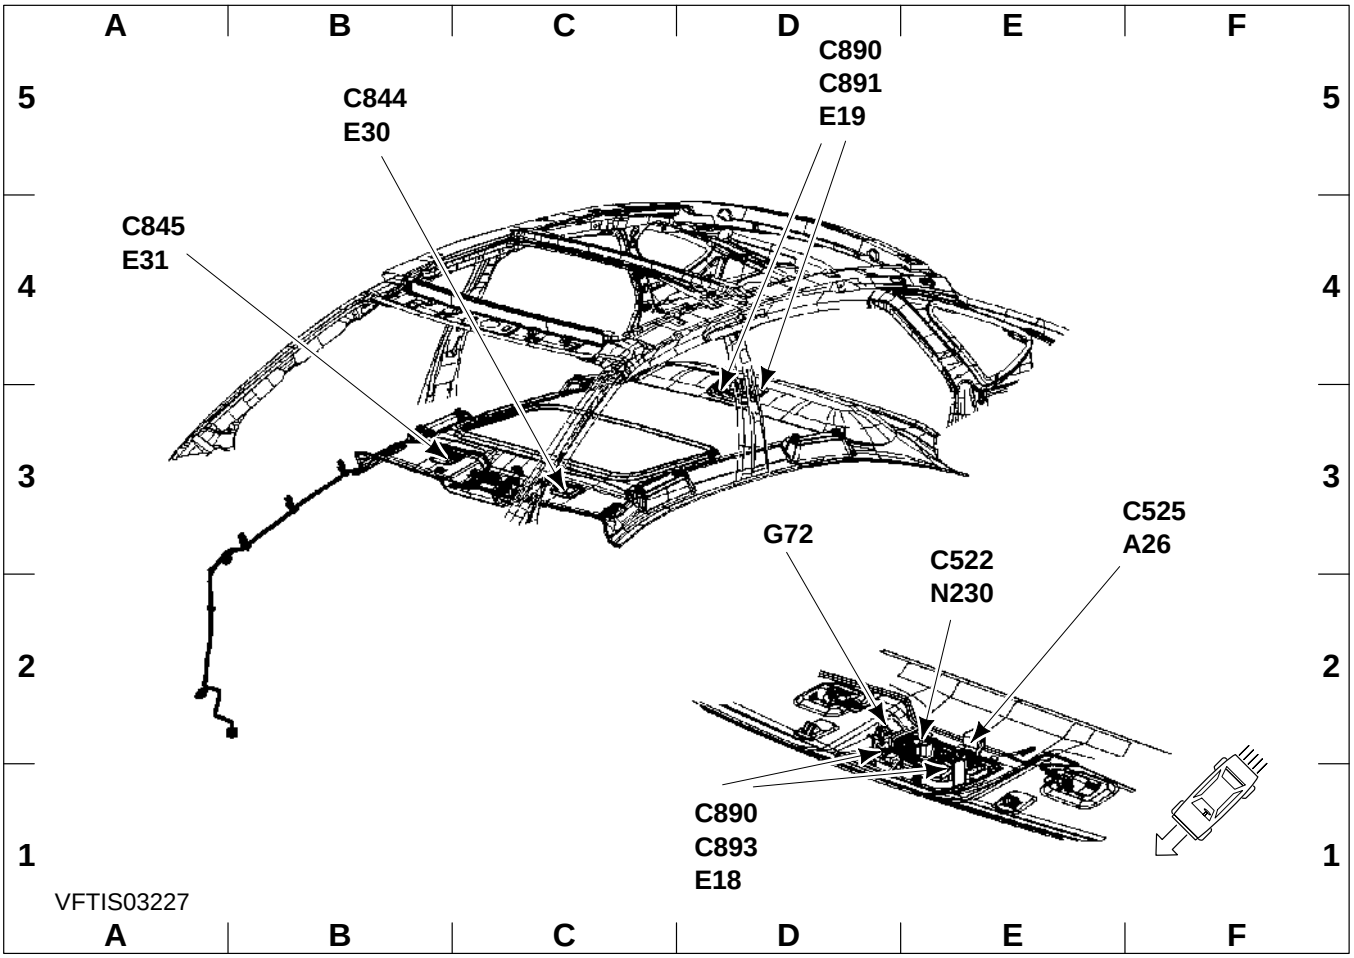


roof, LHD, 5–door model

A26 . . Roof opening panel module . . . . . F 3
C522 . . . . . E 3
C525 . . . . . F 3
C844 . . . . . B 5
C845 . . . . . A 4
C890 . . . . . D 1
C890 . . . . . D 5
C891 . . . . . D 5
C893 . . . . . D 1
E18 . . Interior lamp, front . . . . . D 1
E19 . . Interior lamp, rear . . . . . D 5
E30 . . Vanity mirror lamp, LH side . . . . . B 5
E31 . . Vanity mirror lamp, RH side . . . . . A 4
G72 . . . . . D 3
N230 . Roof opening panel control switch . . . . . E 2

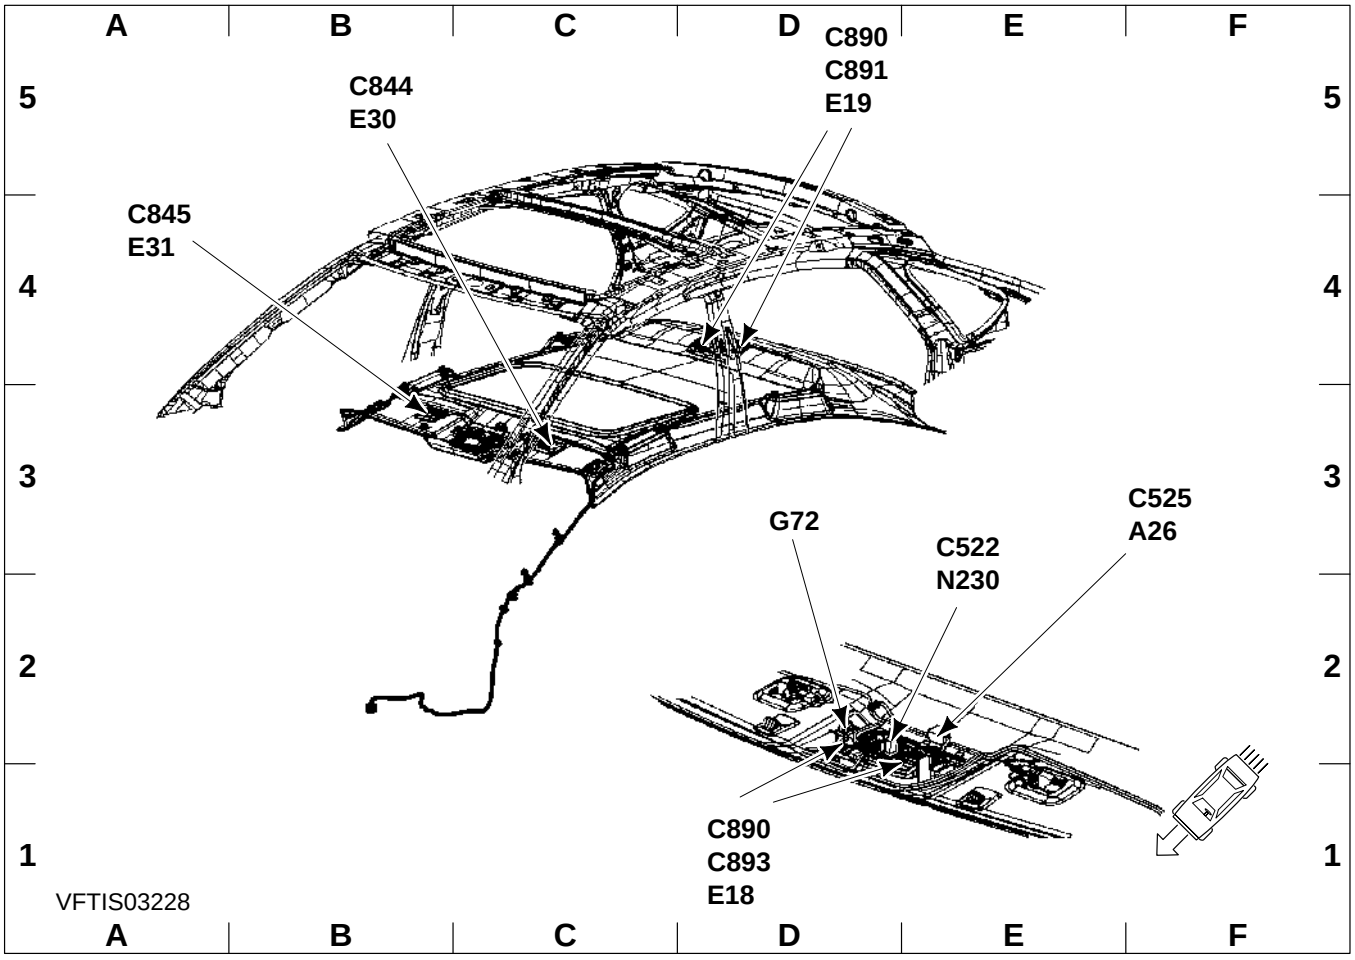


roof, RHD, 5–door model

A26 . . Roof opening panel module . . . . . F 3
C522 . . . . . E 3
C525 . . . . . F 3
C844 . . . . . B 5
C845 . . . . . A 4
C890 . . . . . D 1
C890 . . . . . D 5
C891 . . . . . D 5
C893 . . . . . D 1
E18 . . Interior lamp, front . . . . . D 1
E19 . . Interior lamp, rear . . . . . D 5
E30 . . Vanity mirror lamp, LH side . . . . . B 5
E31 . . Vanity mirror lamp, RH side . . . . . A 4
G72 . . . . . D 3
N230 . Roof opening panel control switch . . . . . E 2

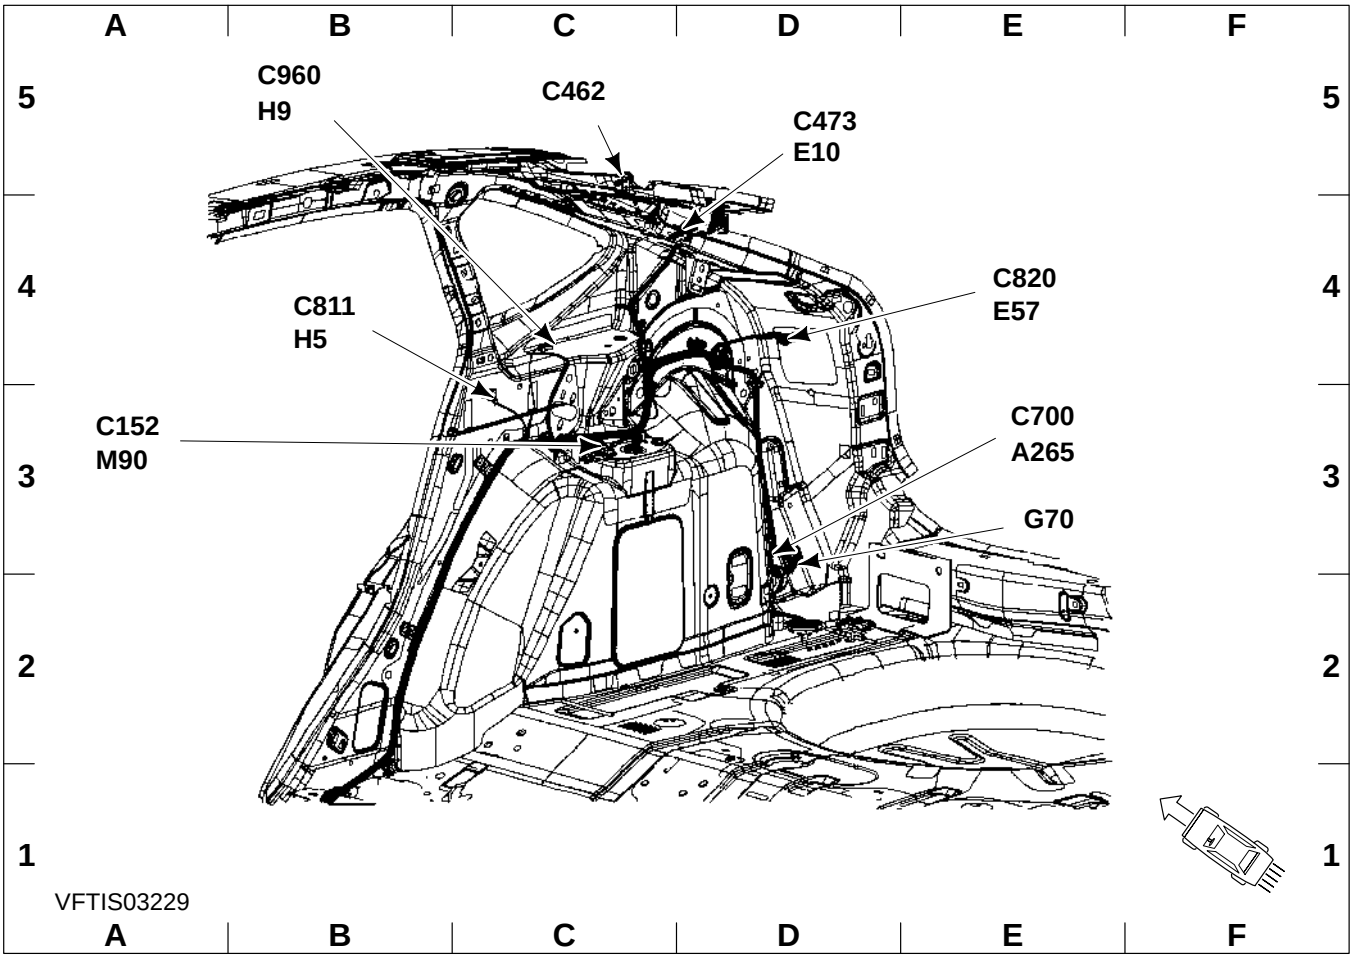


Luggage compartment, RH side, 5–door model

A265 . Parking aid module . . . . . E 3
C152 . . . . . A 3
C462 . . . . . C 5
C473 . . . . . D 5
C700 . . . . . E 3
C811 . . . . . B 4
C820 . . . . . E 4
C960 . . . . . B 5
E10 . . Rear lamp assembly, RH side . . . . . D 5
E57 . . Luggage compartment lamp . . . . . E 4
G70 . . . . . E 3
H5 . . . Anti–theft alarm horn . . . . . B 4
H9 . . . Buzzer . . . . . B 5
M90 . Fuel filler flap lock motor . . . . . A 3

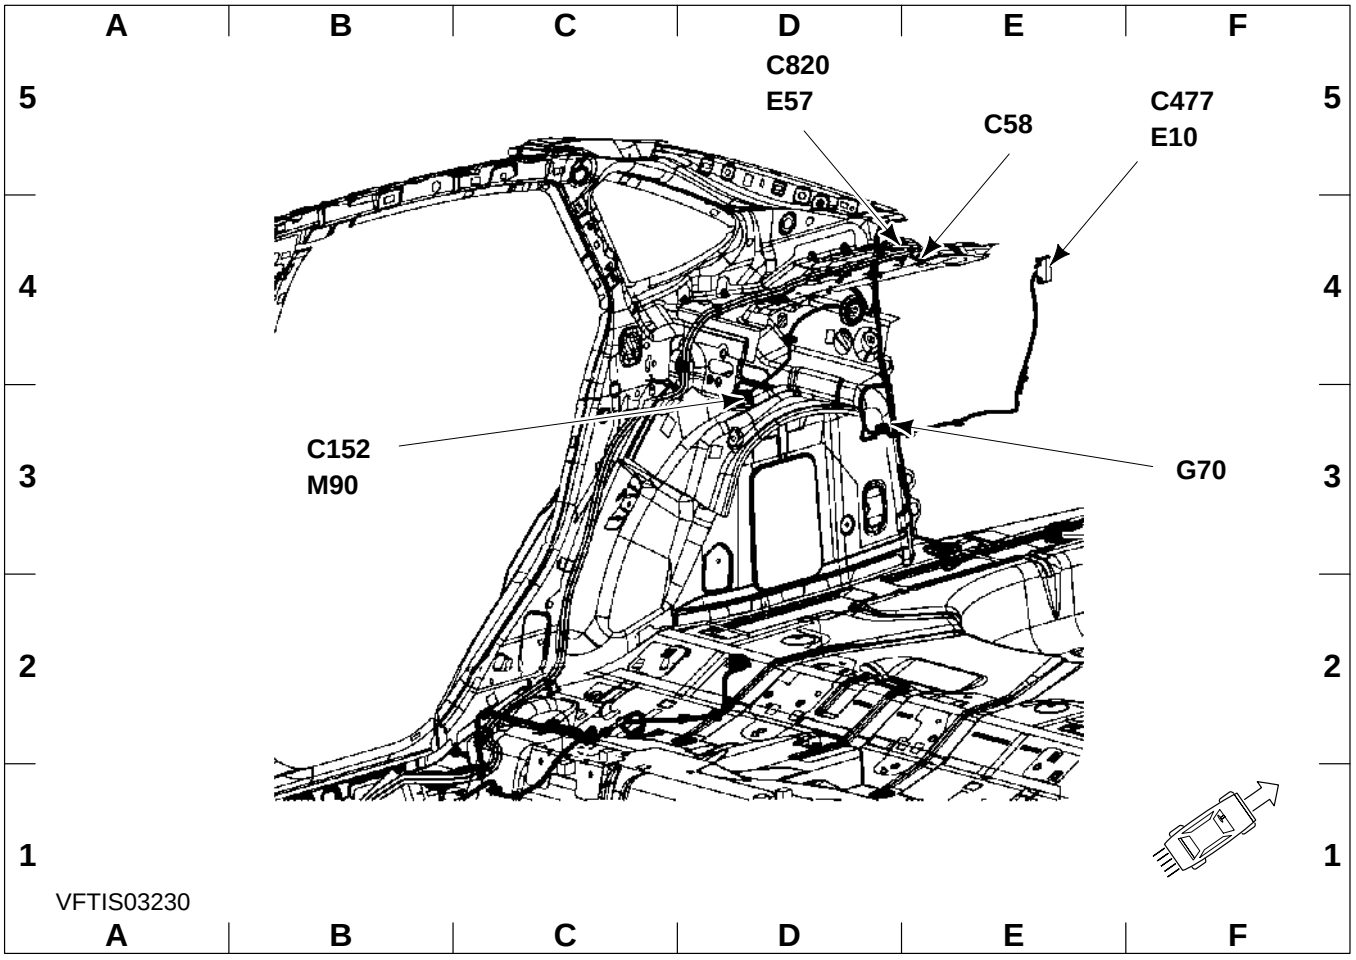


Luggage compartment, RH side, 4–door model

C58	E 5	E10	Rear lamp assembly, RH side F 5
C152	B 3	E57	Luggage compartment lamp D 5
C477	F 5	G70	F 3
C820	D 5	M90	Fuel filler flap lock motor B 3

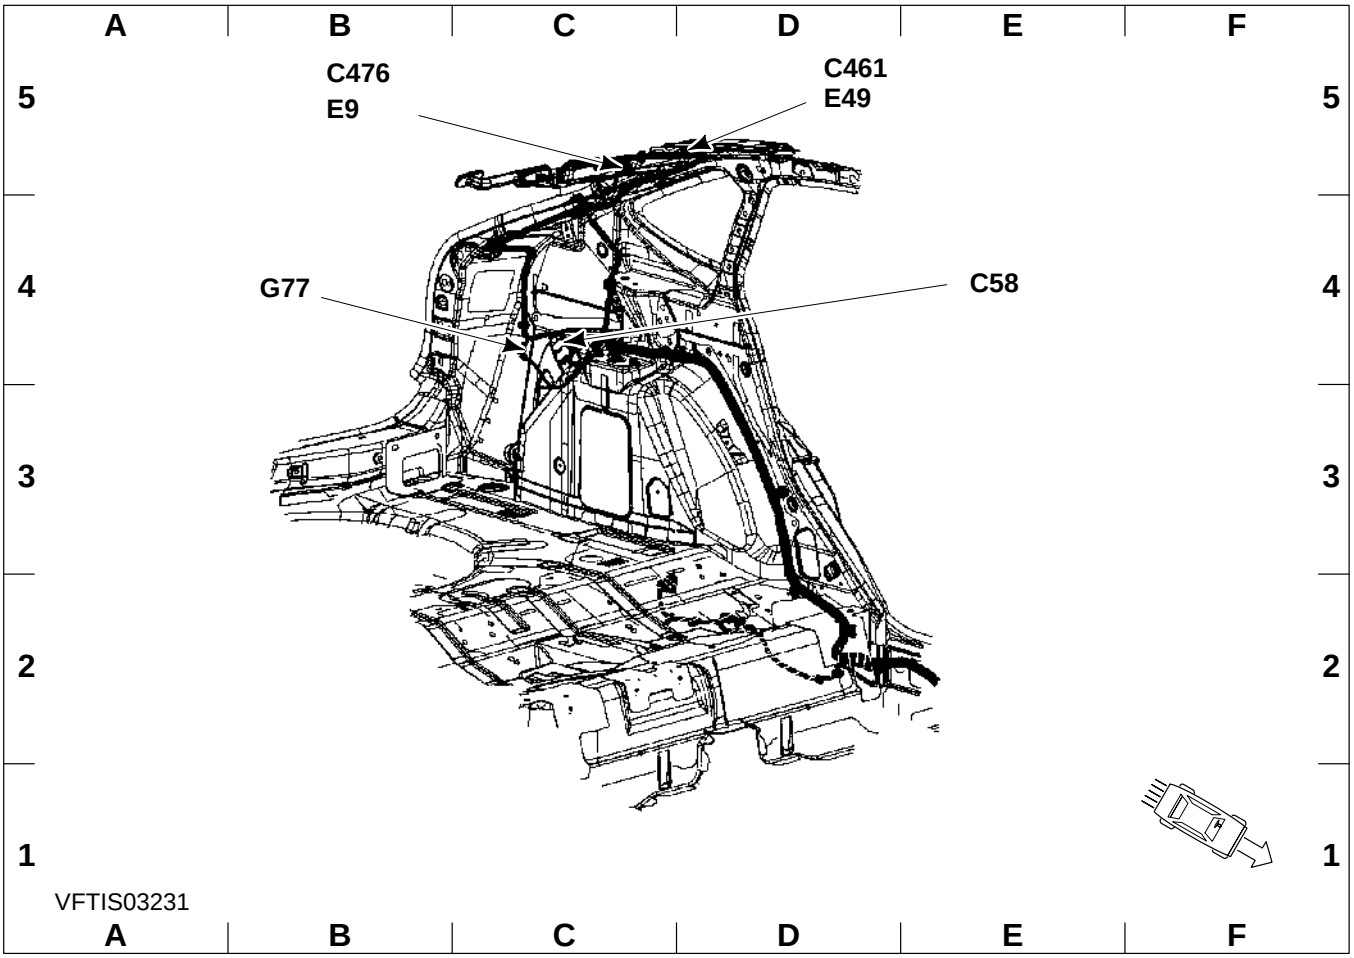


Luggage compartment, LH side, 5–door model

C58 . . . . . E 4
C461 . . . . . D 5
C476 . . . . . B 5
E9 . . . Rear lamp assembly, LH side . . . . . B 5
E49 . . Turn signal lamp, LH rear . . . . . D 5
G77 . . . . . B 4

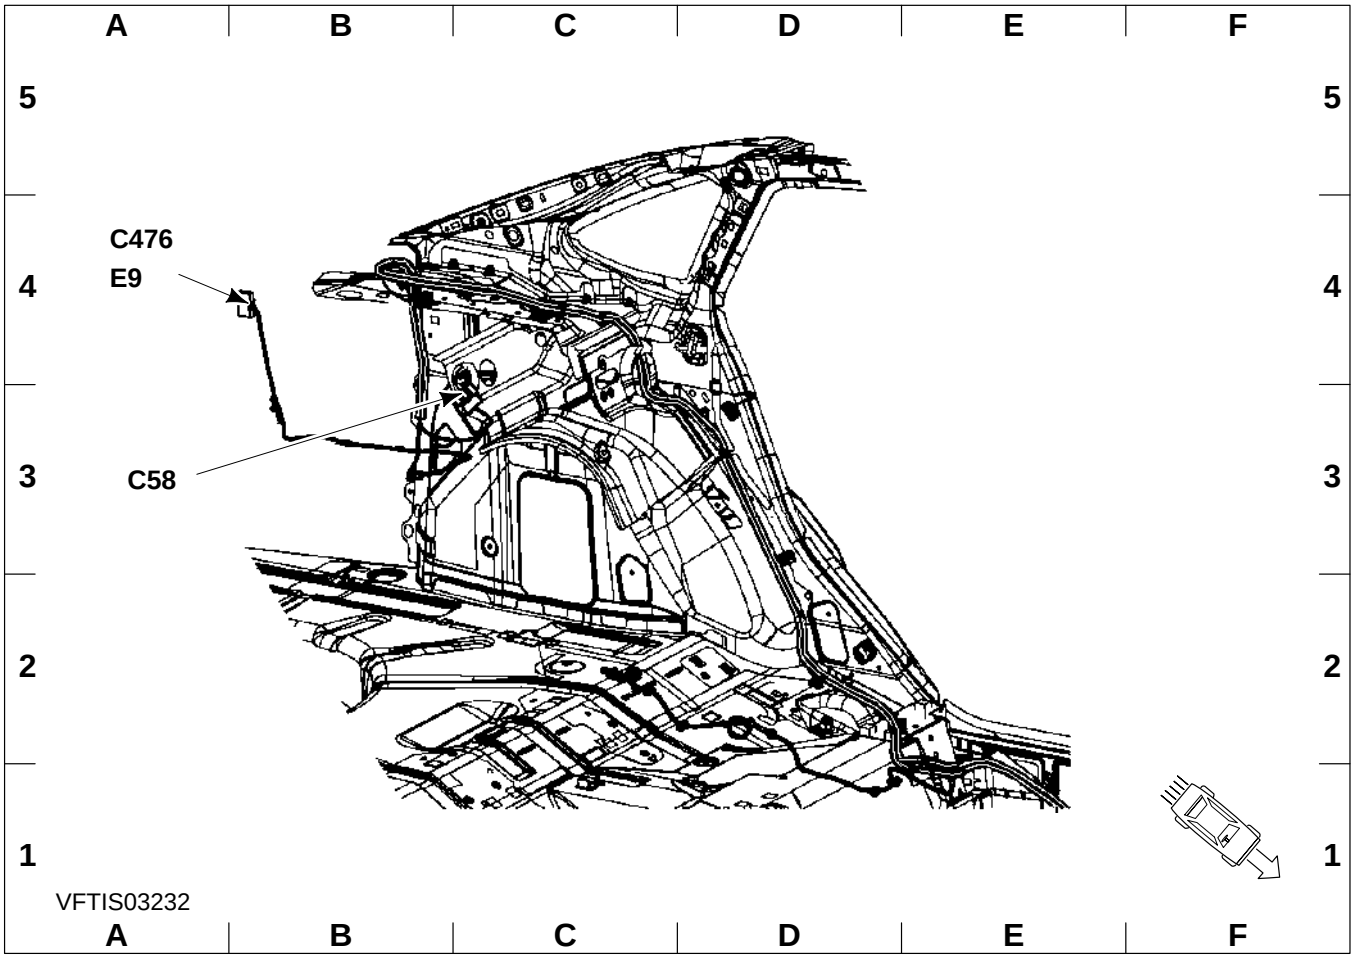


Luggage compartment, LH side, 4–door model

C58 . . . . . A 3
C476 . . . . . A 4
E9 . . . Rear lamp assembly, LH side . . . . . A 4

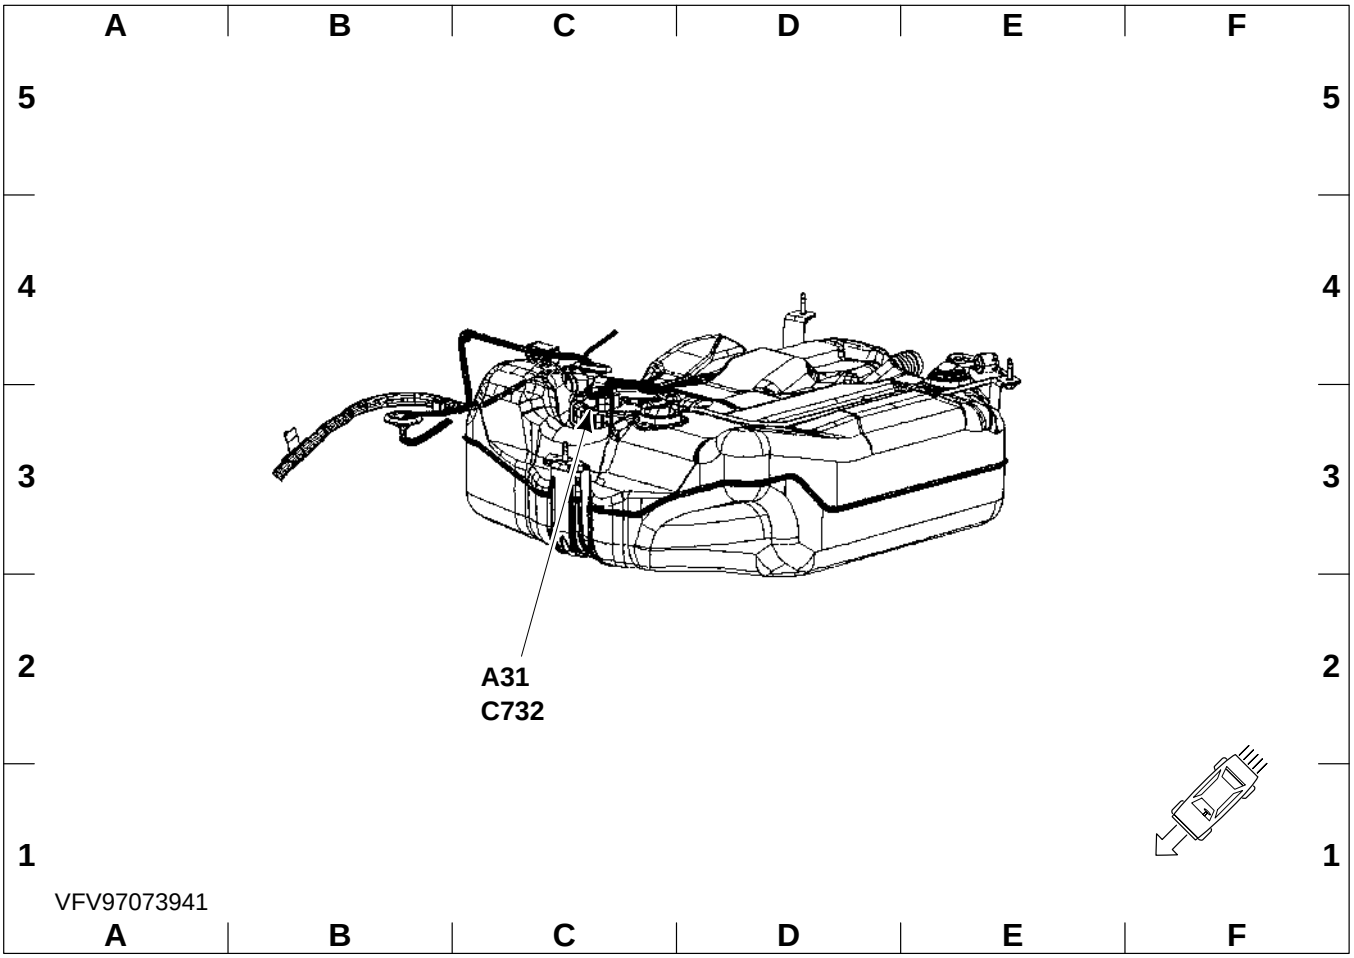


Fuel tank

A31 . . Fuel tank unit . . . . . C 2 C732 . . . . . C 2

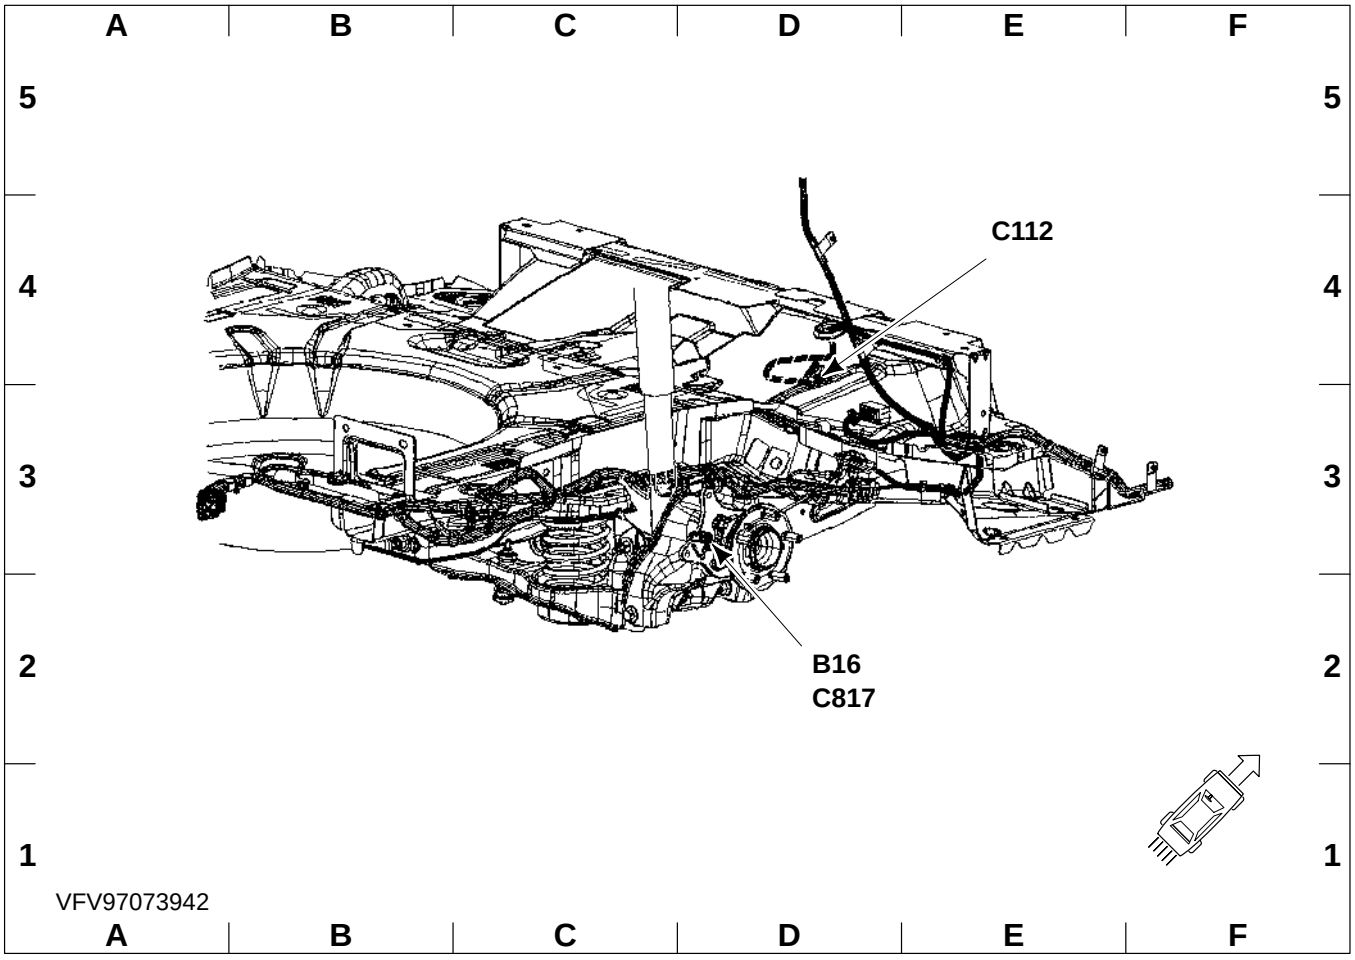


rear axle

B16 . . Wheel speed sensor, RH side rear . . . . . D 2
C112 . . . . . E 4
C817 . . . . . D 2

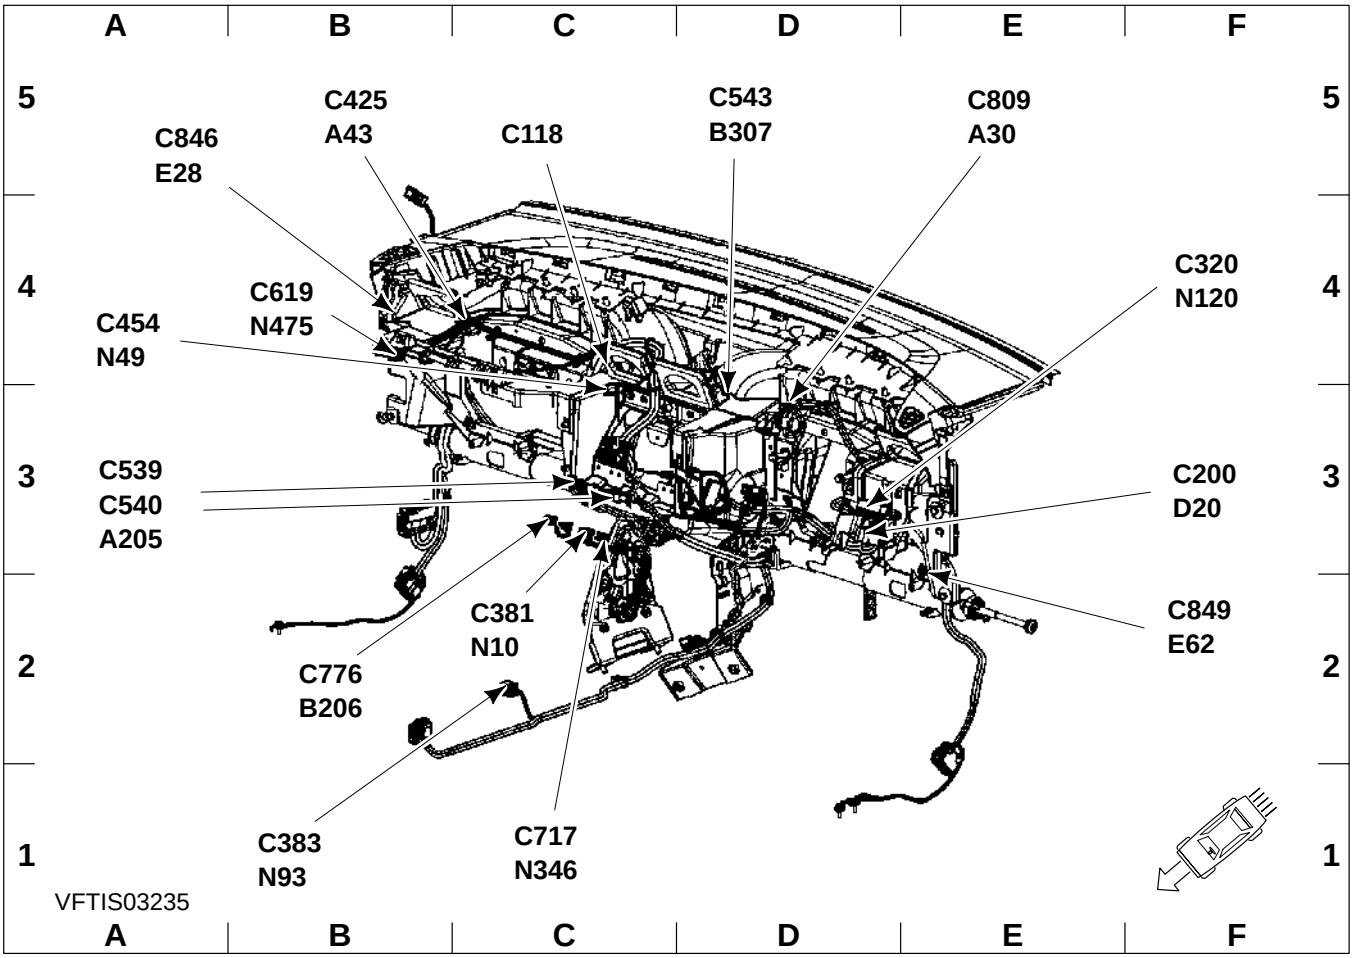


behind dash panel, RHD

A30 . . Instrument cluster . . . . . E 5
A43 . . Passenger air bag unit . . . . . B 5
A205 . Electronic Automatic Temperature Control (EATC) module . . . . . A 3
B206 . In–vehicle temperature sensor . . . . . B 2
B307 . Discharge temperature sensor, panel, RH side . . . . . D 5
C118 . . . . . C 5
C200 . . . . . F 3
C320 . . . . . F 4
C381 . . . . . C 2
C383 . . . . . B 1
C425 . . . . . B 5
C454 . . . . . A 4
C539 . . . . . A 3
C540 . . . . . A 3
C543 . . . . . D 5
C619 . . . . . B 4
C717 . . . . . C 1
C776 . . . . . B 2
C809 . . . . . E 5
C846 . . . . . A 5
C849 . . . . . F 2
D20 . . Data Link Connector (DLC) . . . . . F 3
E28 . . Glove compartment lamp . . . . . A 5
E62 . . Footwell lamp, RH front . . . . . F 2
N10 . . Heated rear window switch . . . . . C 2
N49 . . Hazard flasher switch . . . . . A 4
N93 . . Gearshift lever unit . . . . . B 1
N120 . Headlamp switch . . . . . F 4
N346 . Electronic Stability Program (ESP) switch . . . . . C 1
N475 . Passenger Air bag Deactivation (PAD) switch . . . . . B 4

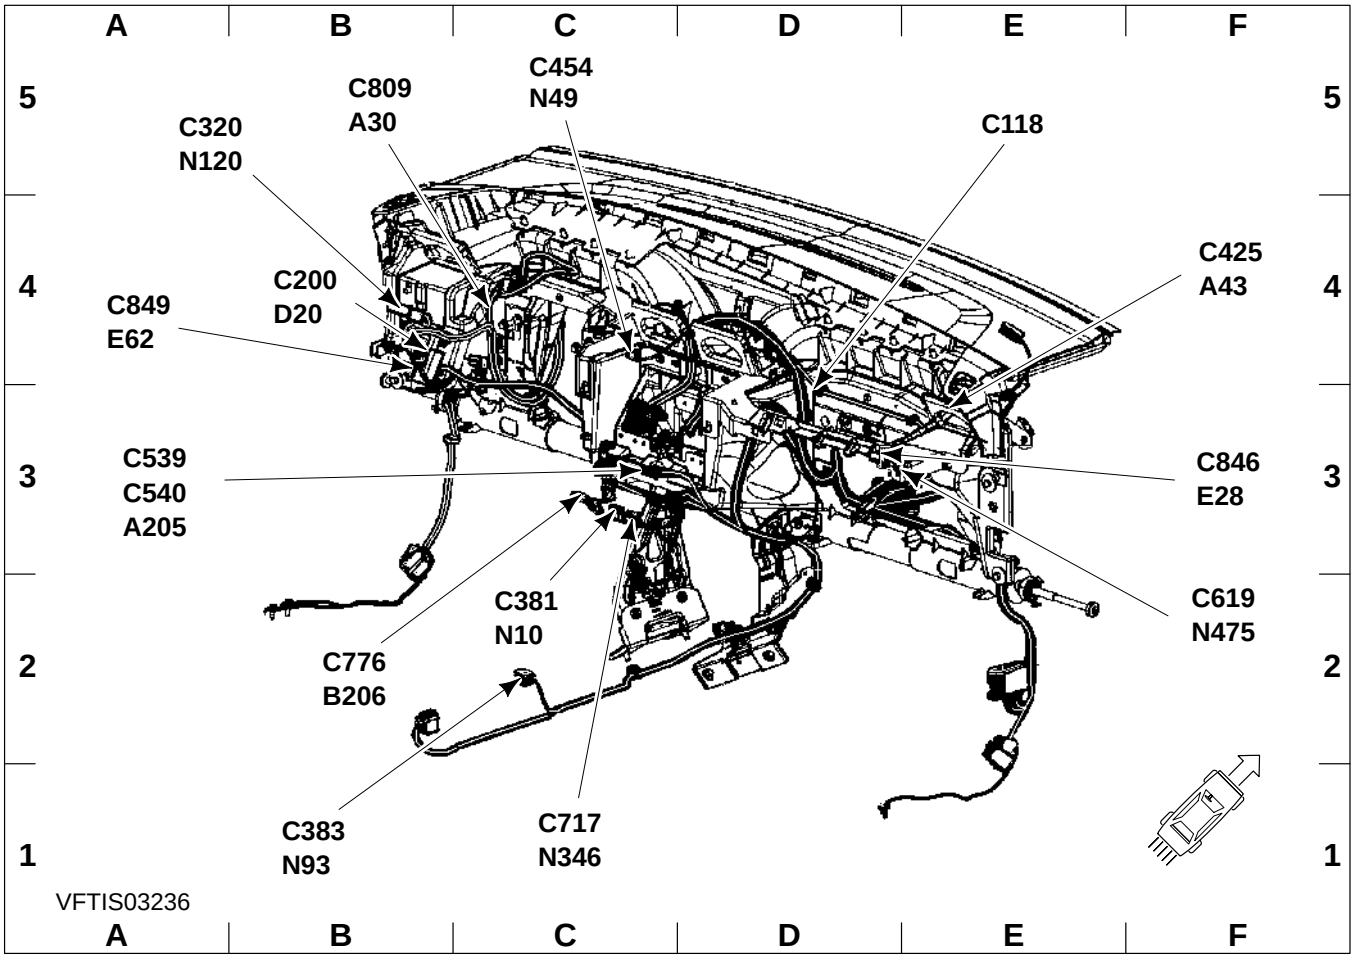


behind dash panel, LHD

A30 . . Instrument cluster . . . . . B 5
A43 . . Passenger air bag unit . . . . . F 4
A205 . Electronic Automatic Temperature Control (EATC) module . . . . . A 3
B206 . In–vehicle temperature sensor . . . . . B 2
C118 . . . . . E 5
C200 . . . . . B 4
C320 . . . . . A 5
C381 . . . . . C 2
C383 . . . . . B 1
C425 . . . . . F 4
C454 . . . . . C 5
C539 . . . . . A 3
C540 . . . . . A 3
C619 . . . . . F 2
C717 . . . . . C 1
C776 . . . . . B 2
C809 . . . . . B 5
C846 . . . . . F 3
C849 . . . . . A 4
D20 . . Data Link Connector (DLC) . . . . . B 4
E28 . . Glove compartment lamp . . . . . F 3
E62 . . Footwell lamp, RH front . . . . . A 4
N10 . . Heated rear window switch . . . . . C 2
N49 . . Hazard flasher switch . . . . . C 5
N93 . . Gearshift lever unit . . . . . B 1
N120 . Headlamp switch . . . . . A 5
N346 . Electronic Stability Program (ESP) switch . . . . . C 1
N475 . Passenger Air bag Deactivation (PAD) switch . . . . . F 2

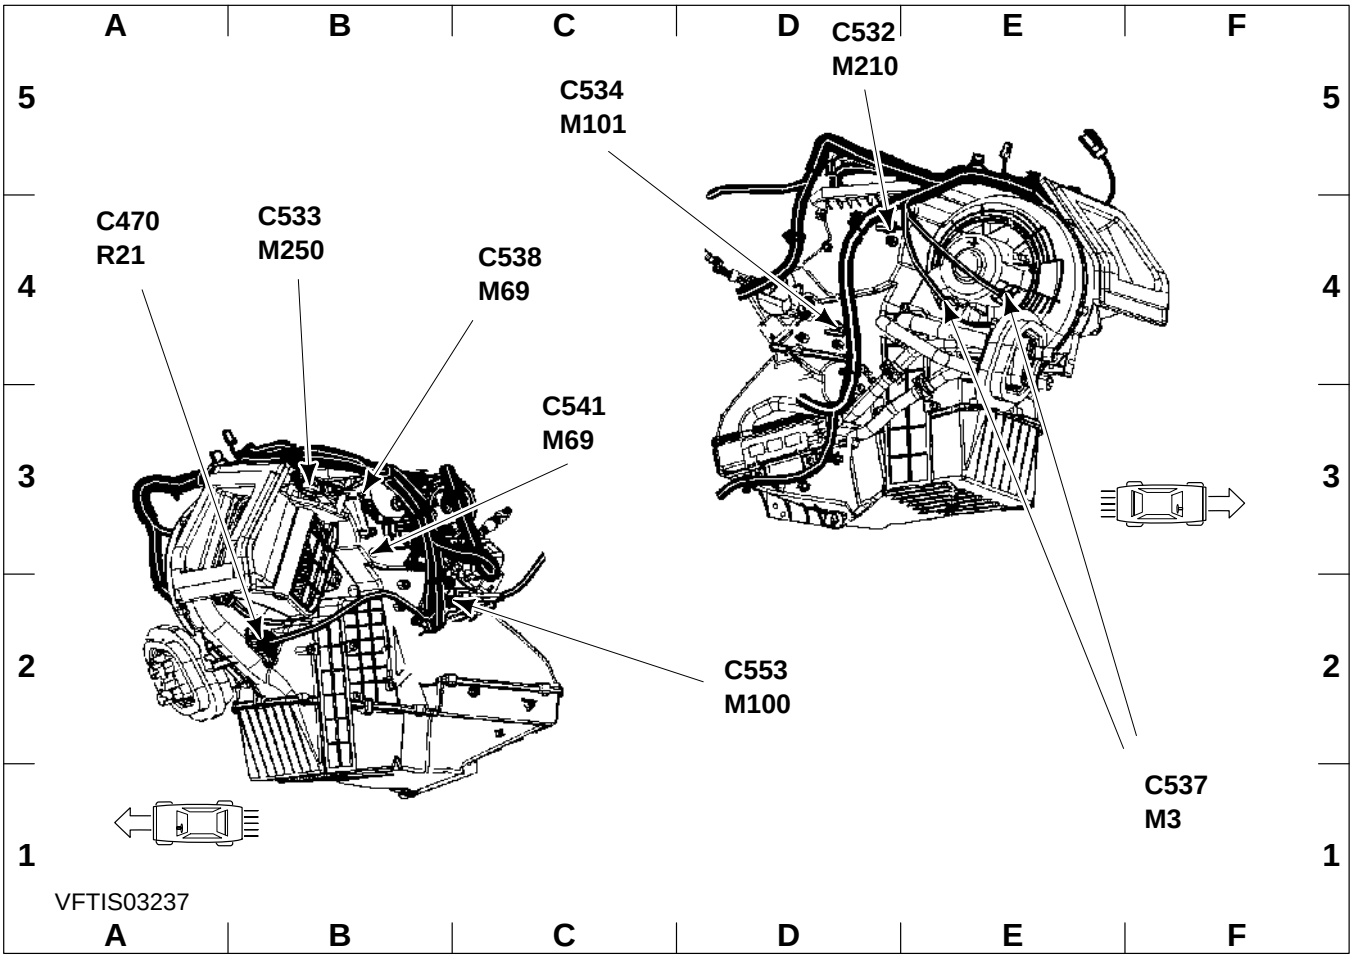


heating/air conditioning housing, RHD

C470	A 4		M3	Blower motor	F 1
C532	D 5		M69	Recirculated air actuator	C 4
C533	B 4		M69	Recirculated air actuator	C 3
C534	C 5		M100	Air temperature door motor, LH side	D 2
C537	F 1		M101	Air temperature door motor, RH side	C 5
C538	C 4		M210	Defrost mode actuator	D 5
C541	C 3		M250	Panel/floor mode actuator	B 4
C553	D 2		R21	Blower motor resistor	A 4

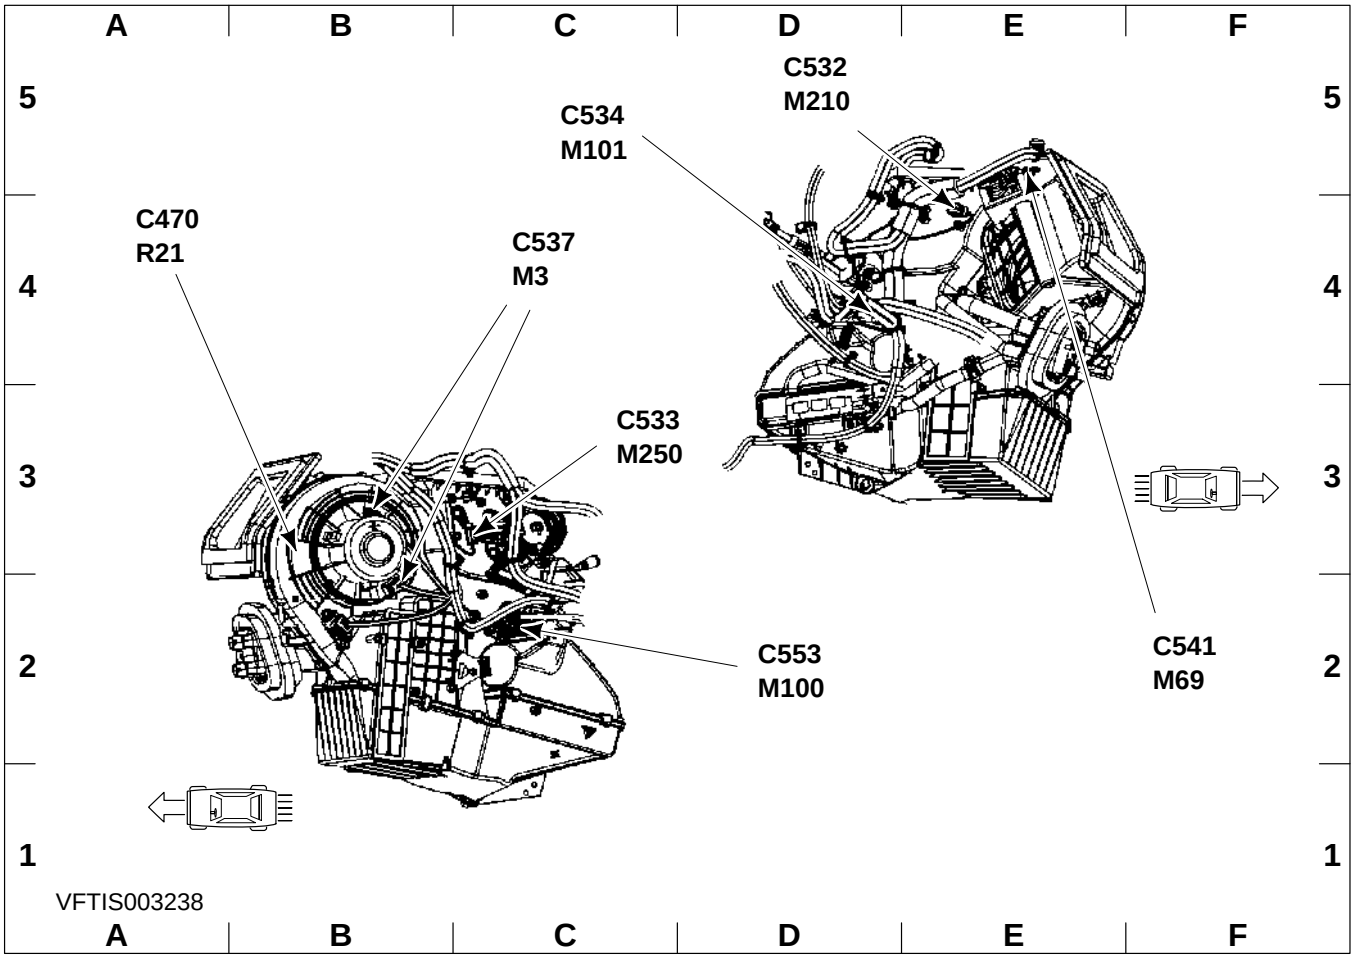


heating/air conditioning housing, LHD

C470	A 4		M3	Blower motor	C 4
C532	D 5		M69	Recirculated air actuator	F 2
C533	C 3		M100	Air temperature door motor, LH side	D 2
C534	C 5		M101	Air temperature door motor, RH side	C 5
C537	C 4		M210	Defrost mode actuator	D 5
C541	F 2		M250	Panel/floor mode actuator	C 3
C553	D 2		R21	Blower motor resistor	A 4

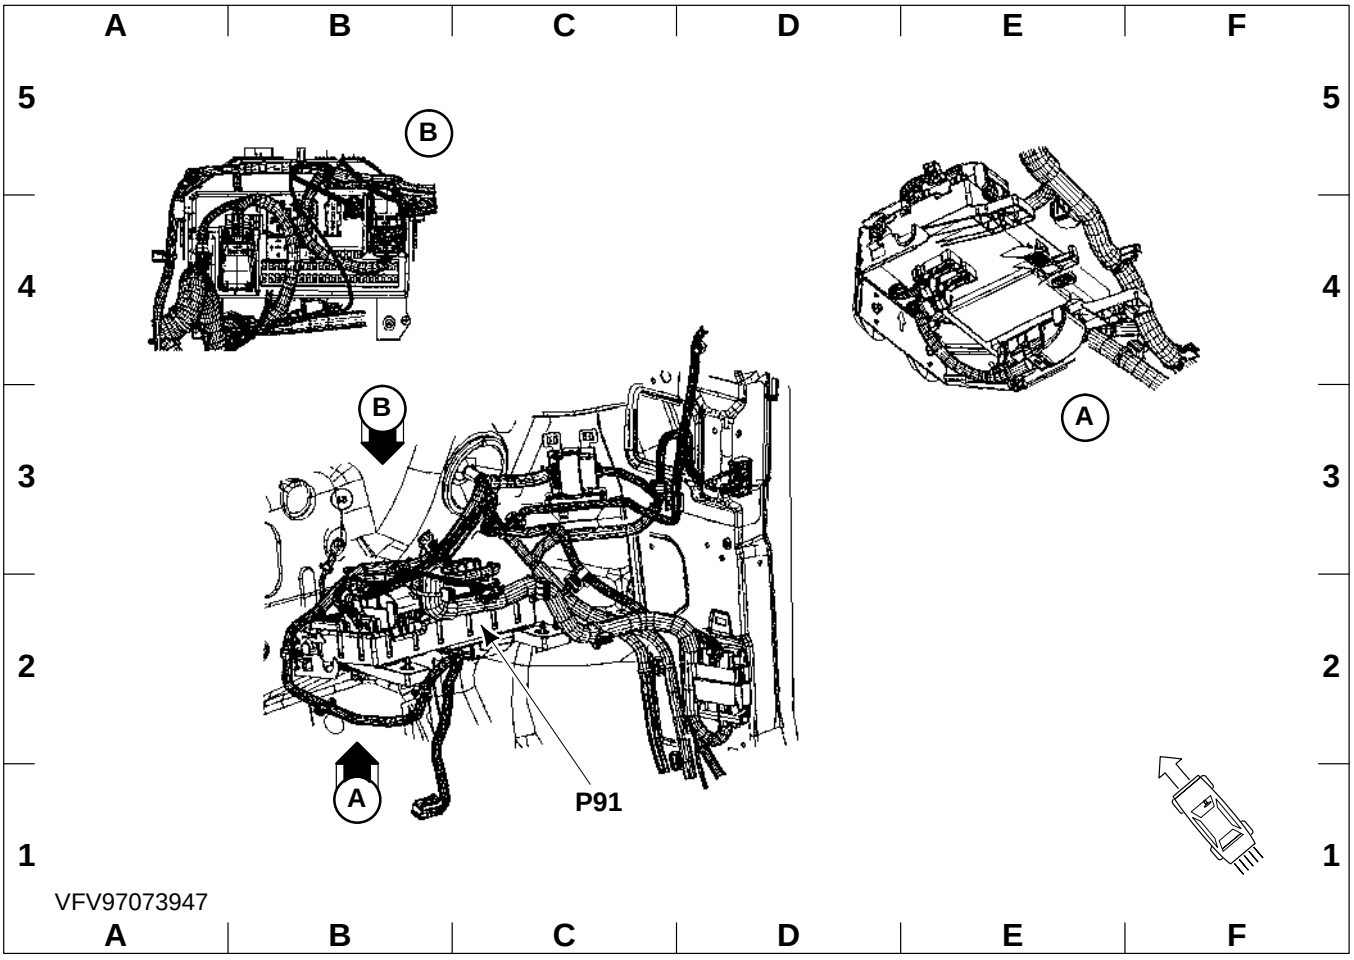


behind dash panel, RH side, LHD

P91 . . Central Junction Box (CJB) . . . . . C 1

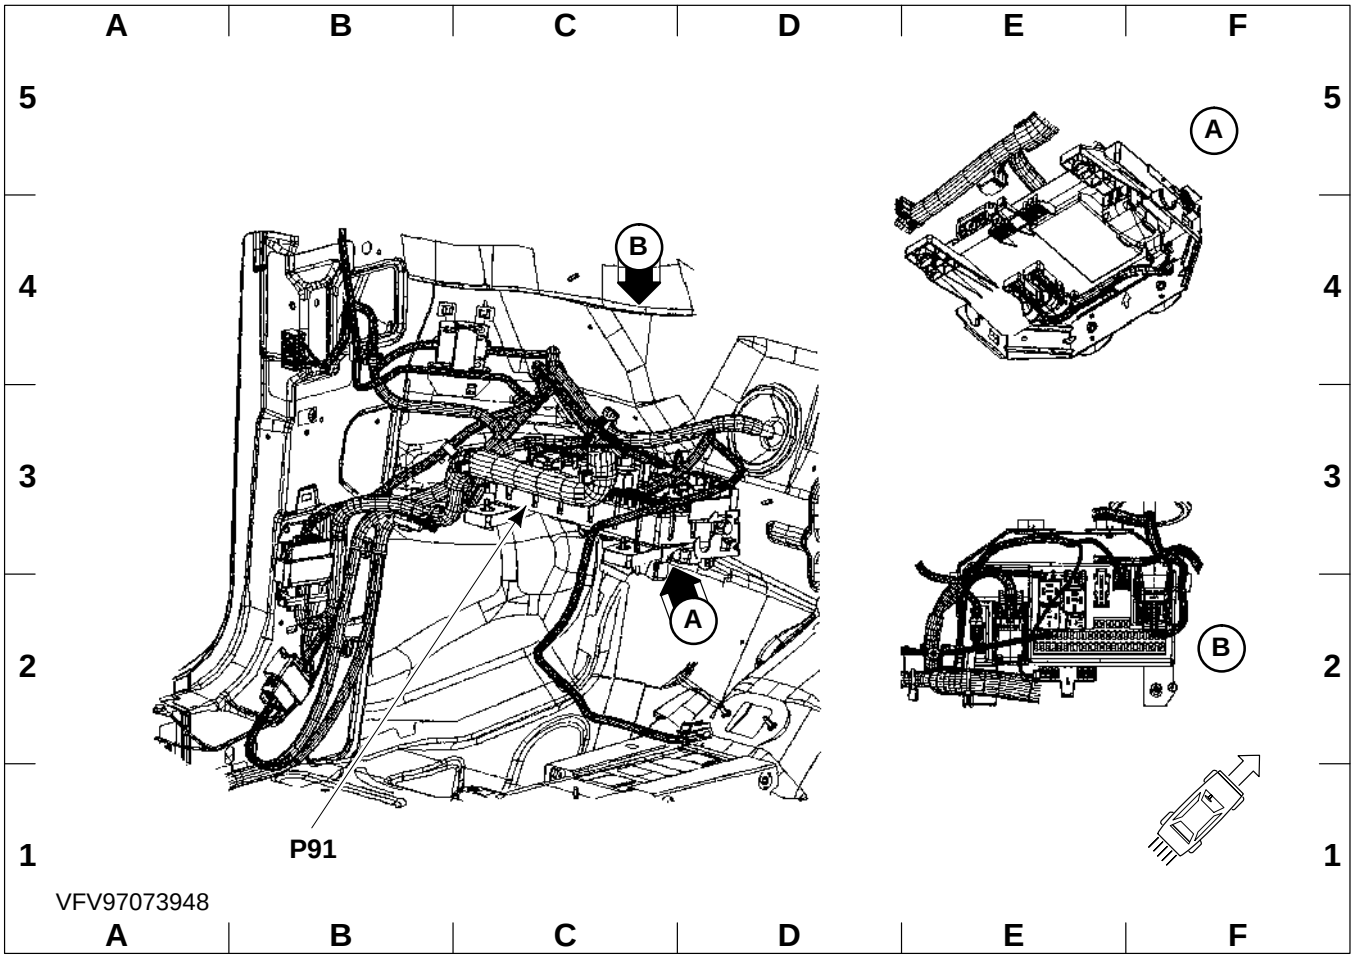


behind dash panel, LH side, RHD

P91 . . Central Junction Box (CJB) . . . . . B 1

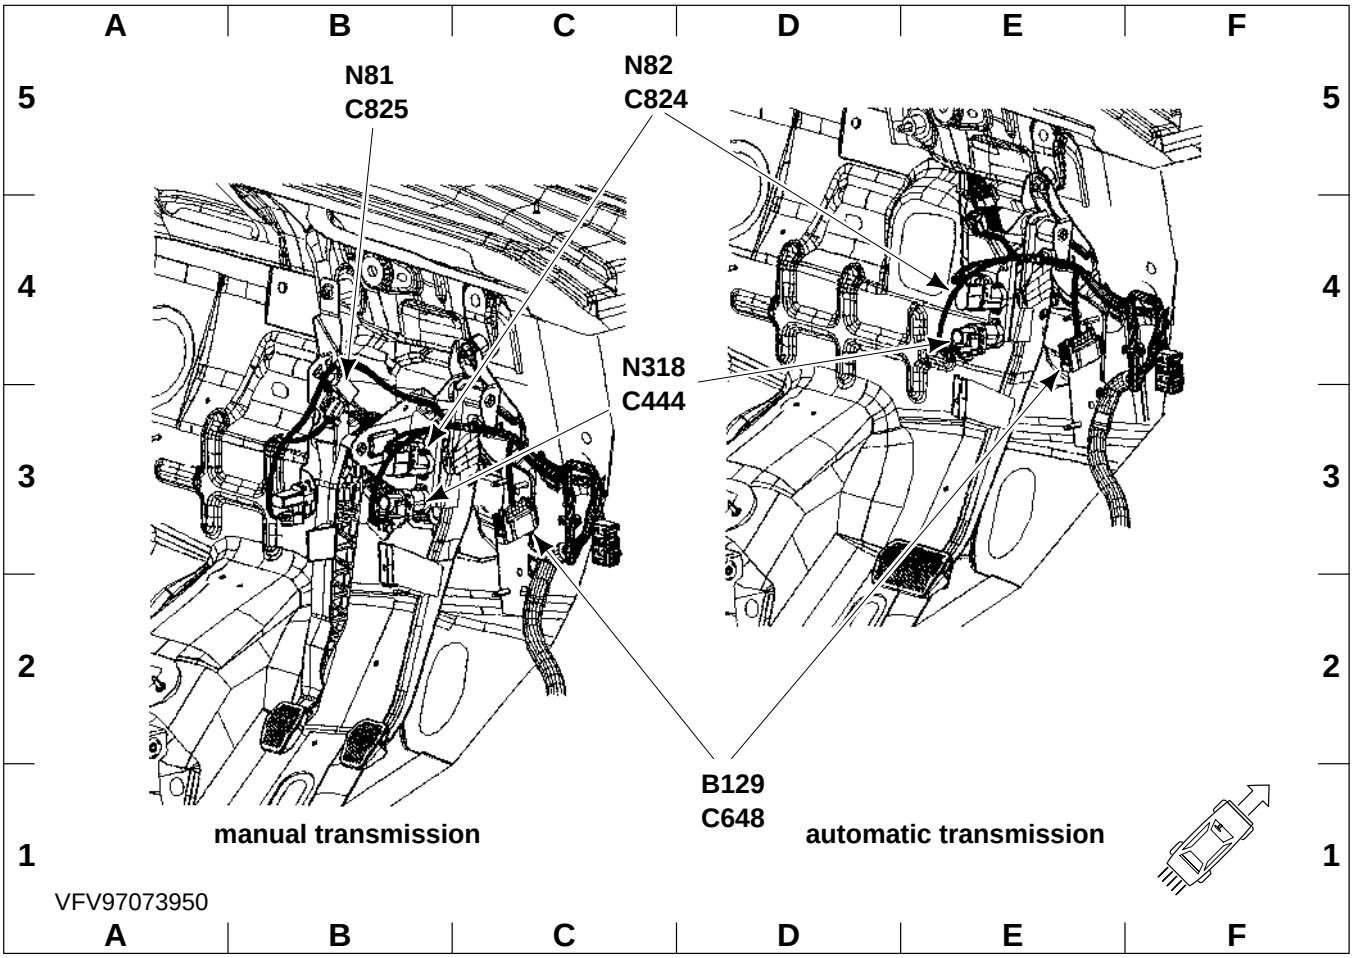


in footwell, RHD

B129	Accelerator pedal position sensor	D 1	C825		B 5
C444		C 3	N81	Clutch pedal position switch	B 5
C648		D 1	N82	Brake pedal position switch	C 5
C824		C 5	N318	Stop lamp switch	C 4

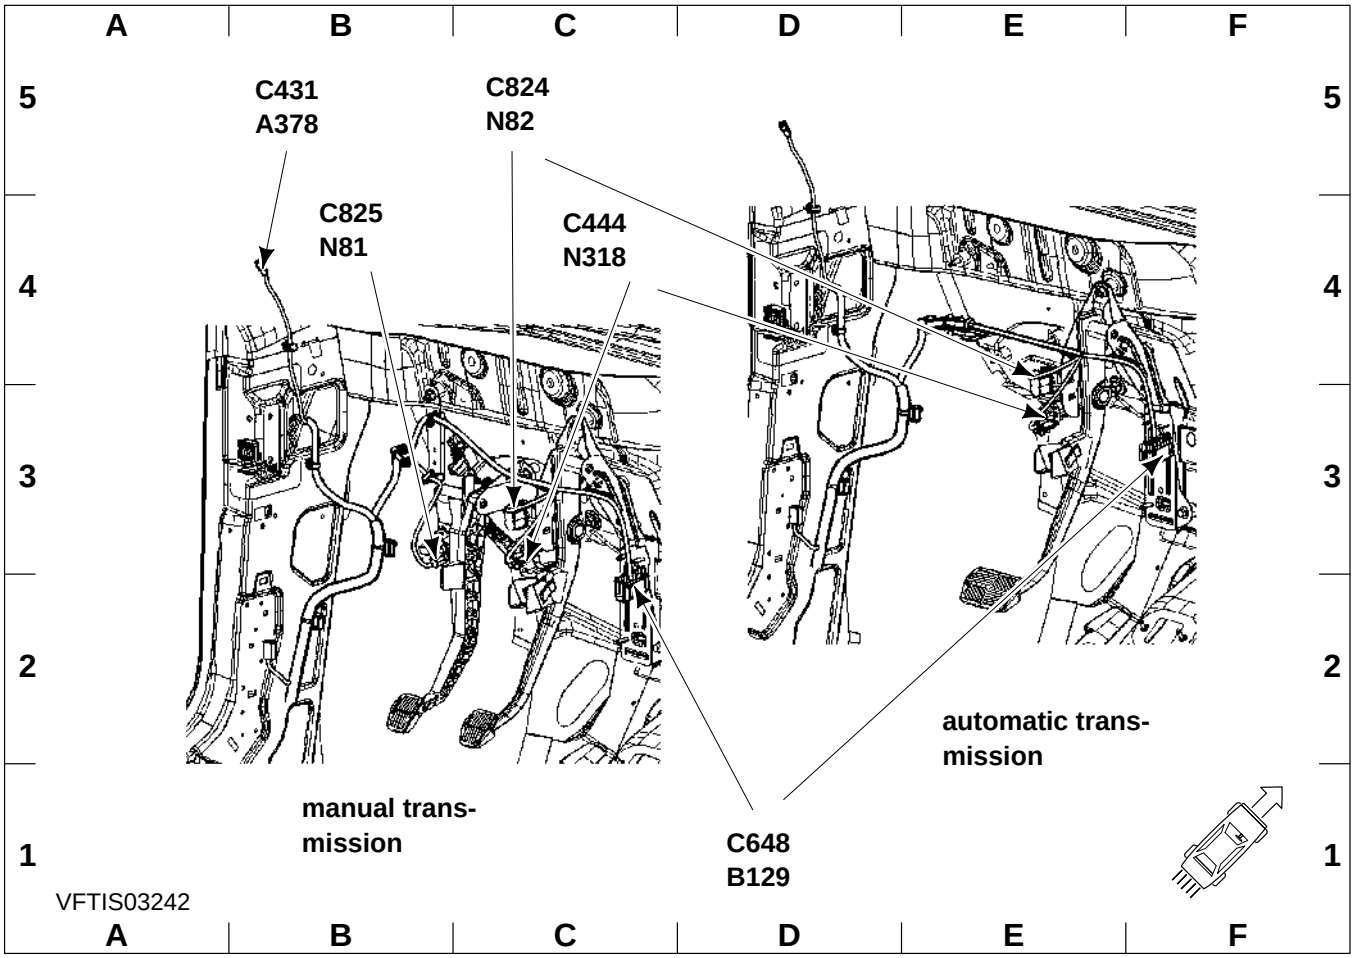


in footwell, LHD

A378 . Micropol antenna . . . . . B 5
B129 . Accelerator pedal position sensor . . . . . D 1
C431 . . . . . B 5
C444 . . . . . C 4
C648 . . . . . D 1
C824 . . . . . C 5
C825 . . . . . B 4
N81 . . Clutch pedal position switch . . . . . B 4
N82 . . Brake pedal position switch . . . . . C 5
N318 . Stop lamp switch . . . . . C 4

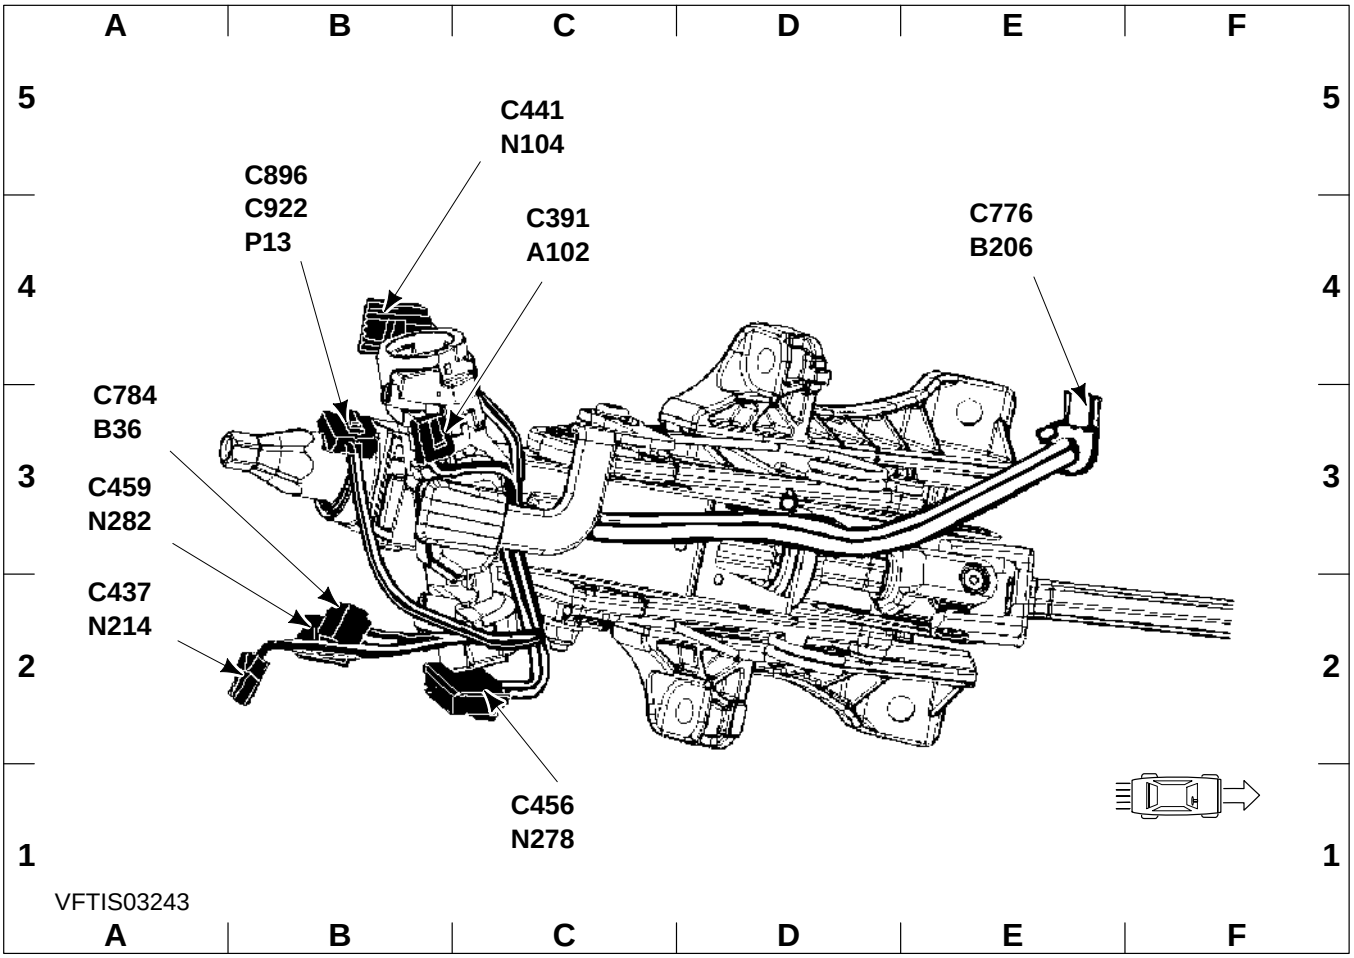


on steering column

A102 . Passive anti–theft system transceiver module . . . . . C 4
B36 . . Steering position sensor . . . . . A 3
B206 . In–vehicle temperature sensor . . . . . E 4
C391 . . . . . C 4
C437 . . . . . A 2
C441 . . . . . C 5
C456 . . . . . C 1
C459 . . . . . A 3
C776 . . . . . E 4
C784 . . . . . A 3
C896 . . . . . B 5
C922 . . . . . B 4
N104 . Wiper/washer switch . . . . . C 5
N214 . Radio remote control switch . . . . . A 2
N278 . Ignition switch . . . . . C 1
N282 . Steering column multifunction switch . . A 3
P13 . . Clock spring . . . . . B 4

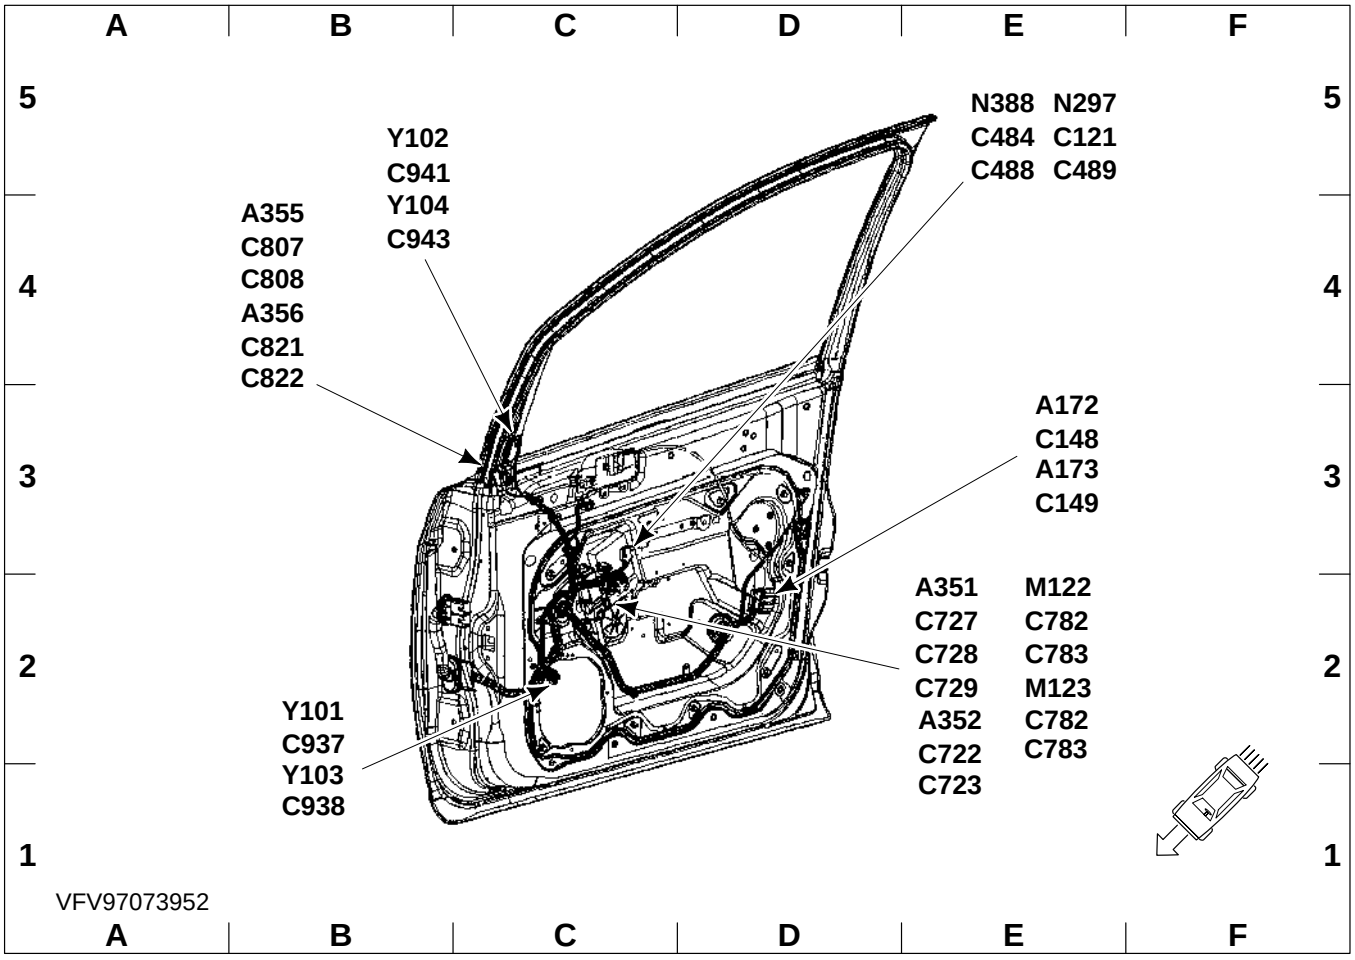


RH front door, LH similar

A172 . Door lock unit, driver side front . . . . . E 3
A173 . Door lock unit, passenger side front . . . . E 3
A351 . Door control module, driver . . . . . E 2
A352 . Door control module, passenger . . . . . E 2
A355 . Exterior mirror, driver side . . . . . B 4
A356 . Exterior mirror, passenger side . . . . . B 4
C121 . . . . . E 5
C148 . . . . . E 3
C149 . . . . . E 3
C484 . . . . . E 5
C488 . . . . . E 5
C489 . . . . . E 5
C722 . . . . . E 2
C723 . . . . . E 1
C727 . . . . . E 2
C728 . . . . . E 2
C729 . . . . . E 2
C782 . . . . . E 2
C782 . . . . . E 2
C783 . . . . . E 2
C783 . . . . . E 2
C807 . . . . . B 4
C808 . . . . . B 4
C821 . . . . . B 4
C822 . . . . . B 4
C937 . . . . . B 2
C938 . . . . . B 1
C941 . . . . . B 5
C943 . . . . . B 4
M122 Window regulator motor, driver side front . . . . . E 2
M123 Window regulator motor, passenger side front . . . . . E 2
N297 . Window control switch, passenger side front . . . . . E 5
N388 . Window control/power mirror adjust switch, driver . . . . . E 5
Y101 . Speaker 1, LH front . . . . . B 2
Y102 . Speaker 2, LH front . . . . . B 5
Y103 . Speaker 1, RH front . . . . . B 1
Y104 . Speaker 2, RH front . . . . . B 4

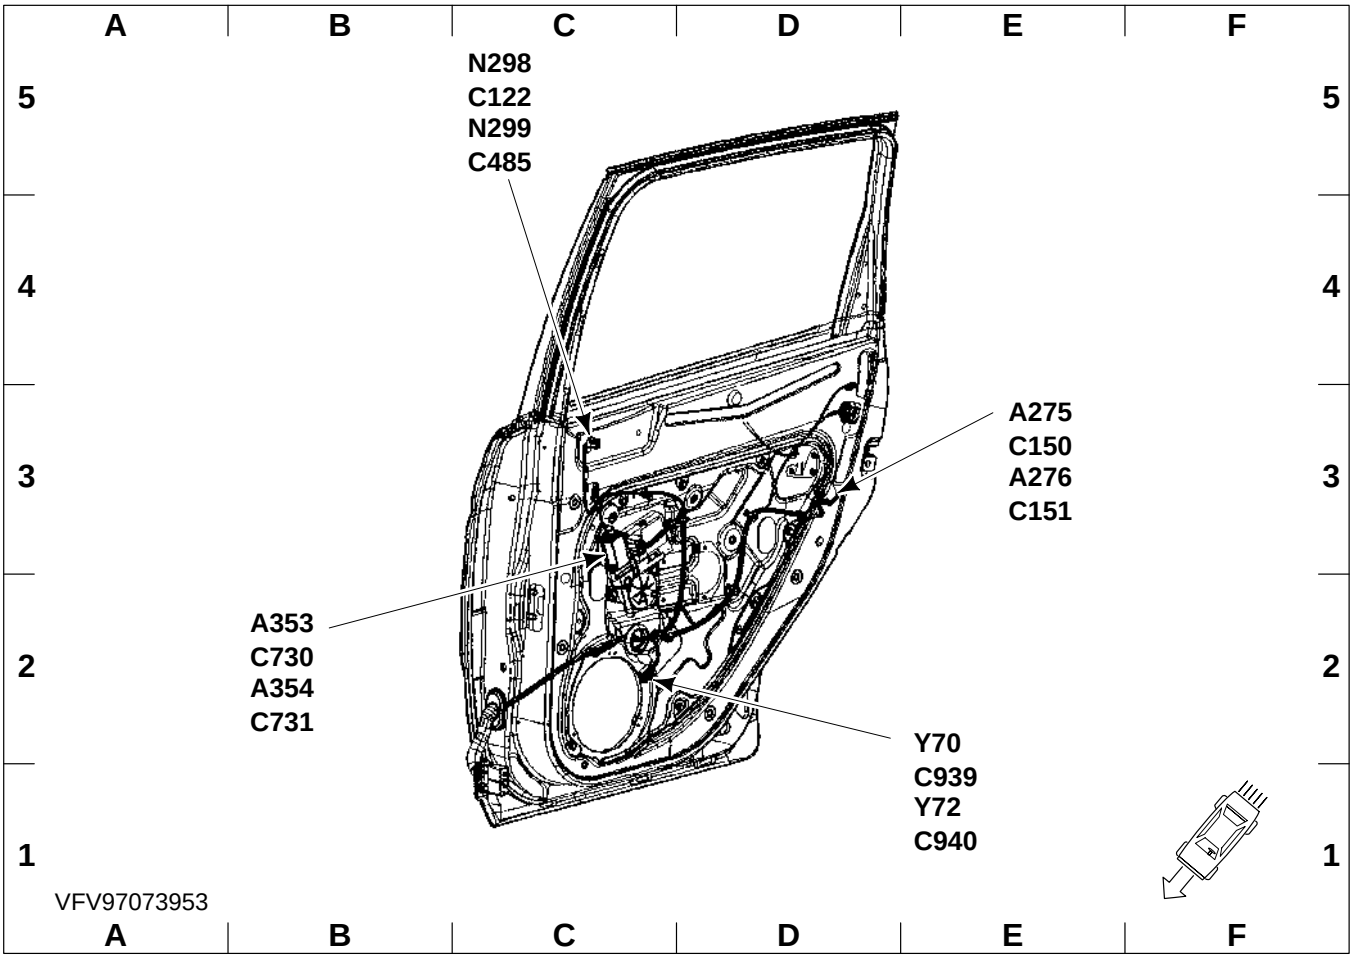


RH rear door, LH similar

A275 . Door lock unit, LH rear . . . . . E 3
A276 . Door lock unit, RH rear . . . . . E 3
A353 . Door control module, LH side rear . . . . B 2
A354 . Door control module, RH side rear . . . . B 2
C122 . . . . . C 5
C150 . . . . . E 3
C151 . . . . . E 3
C485 . . . . . C 5
C730 . . . . . B 2
C731 . . . . . B 2
C939 . . . . . E 1
C940 . . . . . E 1
N298 . Window control switch, LH rear . . . . . C 5
N299 . Window control switch, RH rear . . . . . C 5
Y70 . . Speaker 1, LH rear door . . . . . E 2
Y72 . . Speaker 1, RH rear door . . . . . E 1

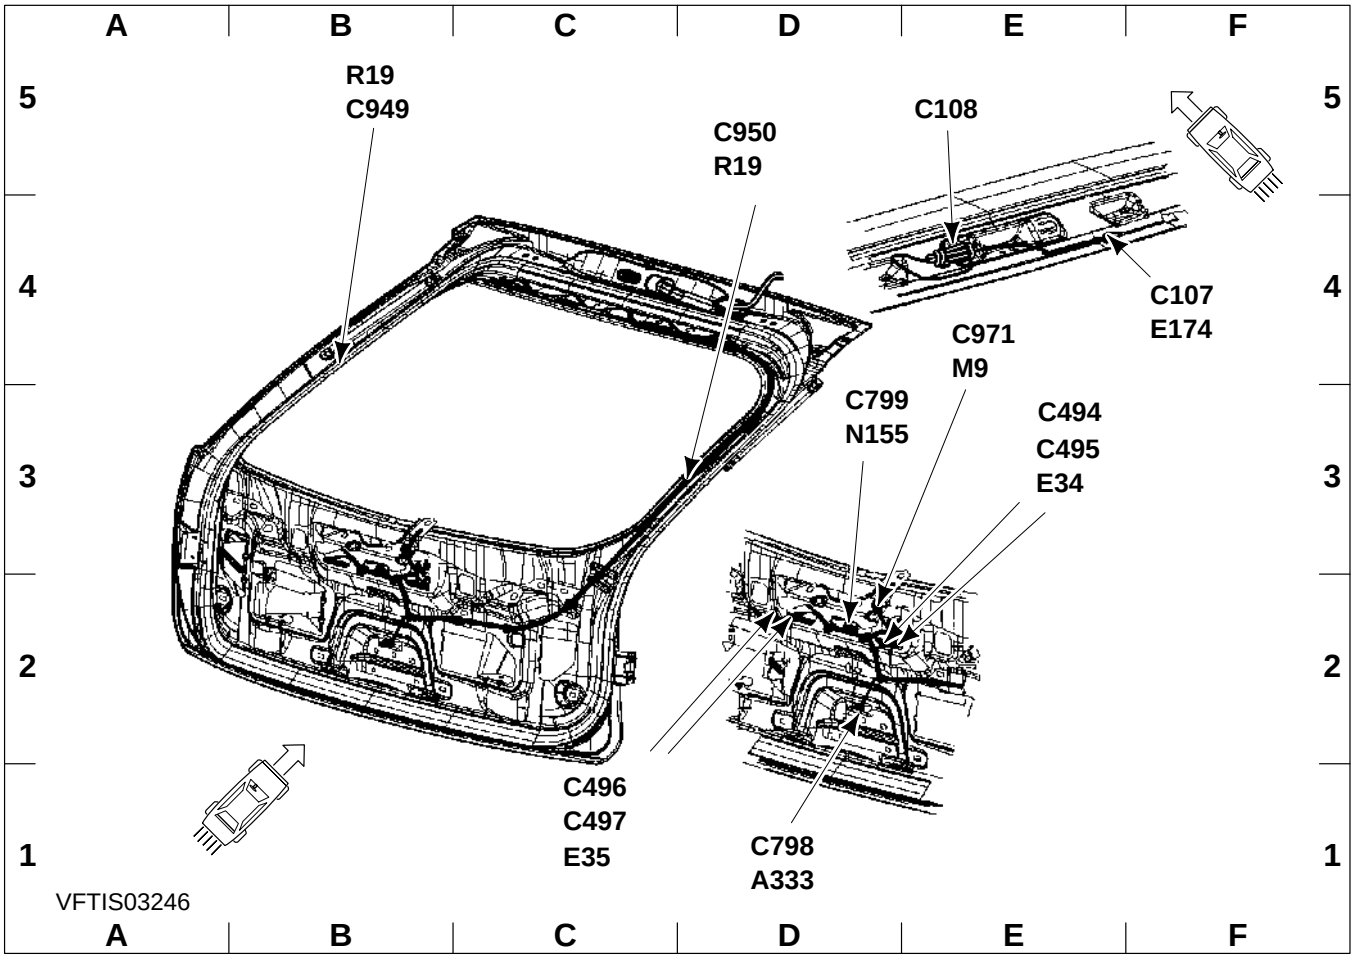


tailgate, 5–door model

A333 . Door lock unit, tailgate . . . . . D 1
C107 . . . . . F 4
C108 . . . . . E 5
C494 . . . . . E 3
C495 . . . . . E 3
C496 . . . . . C 1
C497 . . . . . C 1
C798 . . . . . D 1
C799 . . . . . D 3
C949 . . . . . B 5
C950 . . . . . D 5
C971 . . . . . E 4
E34 . . Licence plate lamp, LH side . . . . . E 3
E35 . . Licence plate lamp, RH side . . . . . C 1
E174 . High mounted stop lamp . . . . . F 4
M9 . . Rear window wiper motor . . . . . E 4
N155 . Tailgate/decklid release switch . . . . . D 3
R19 . . Rear window heater . . . . . B 5
R19 . . Rear window heater . . . . . D 5

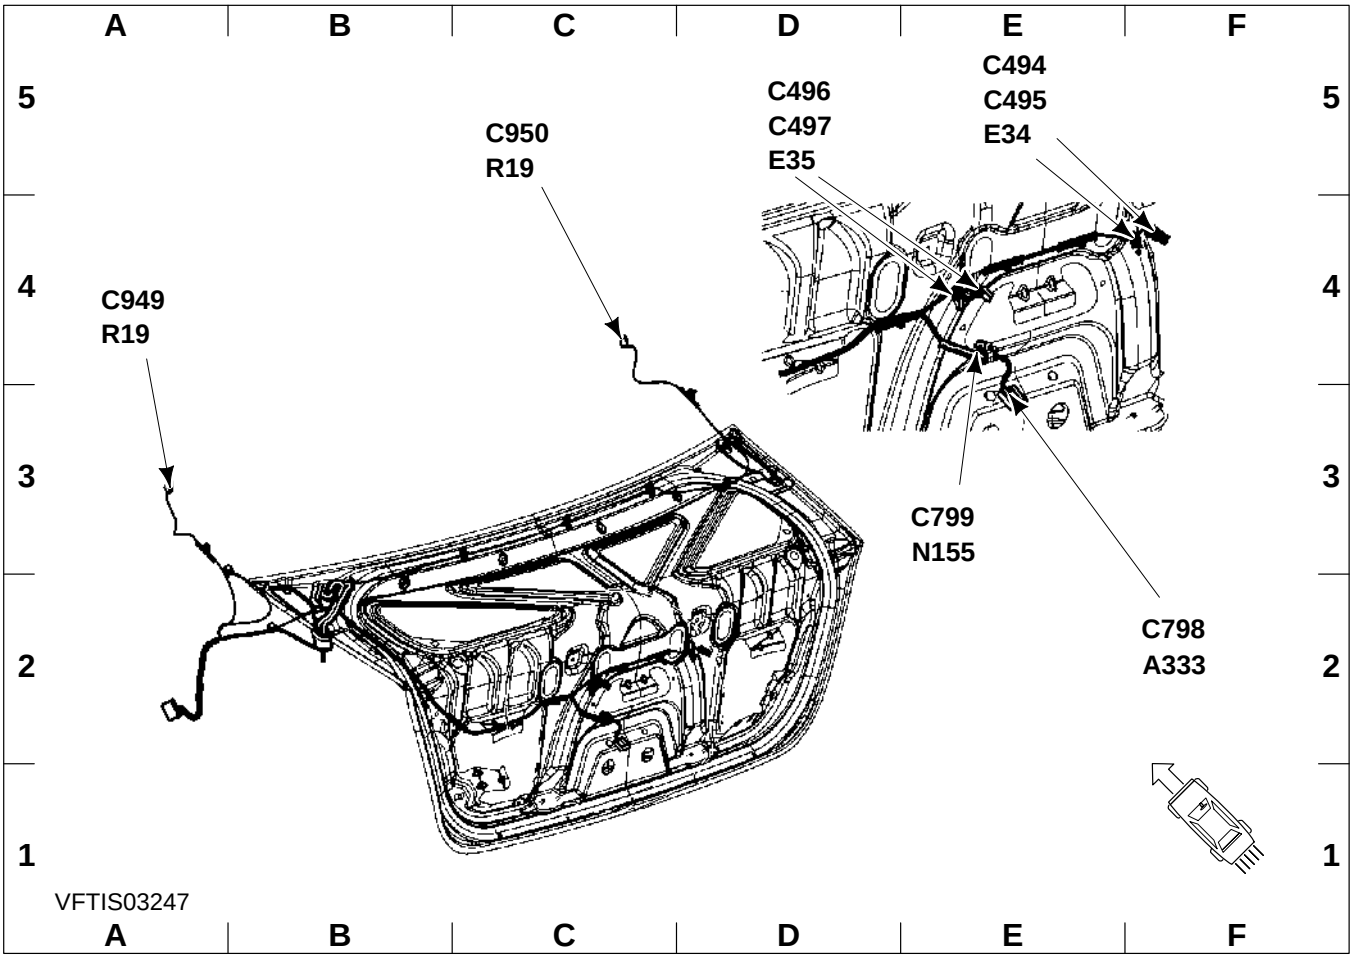


decklid, 4–door model

A333 . Door lock unit, tailgate . . . . . F 2
C494 . . . . . E 5
C496 . . . . . D 5
C497 . . . . . D 5
C495 . . . . . E 5
C798 . . . . . F 2
C799 . . . . . E 3
C949 . . . . . A 4
C950 . . . . . C 5
E34 . . Licence plate lamp, LH side . . . . . E 5
E35 . . Licence plate lamp, RH side . . . . . D 5
N155 . Tailgate/decklid release switch . . . . . E 3
R19 . . Rear window heater . . . . . A 4
R19 . . Rear window heater . . . . . C 5

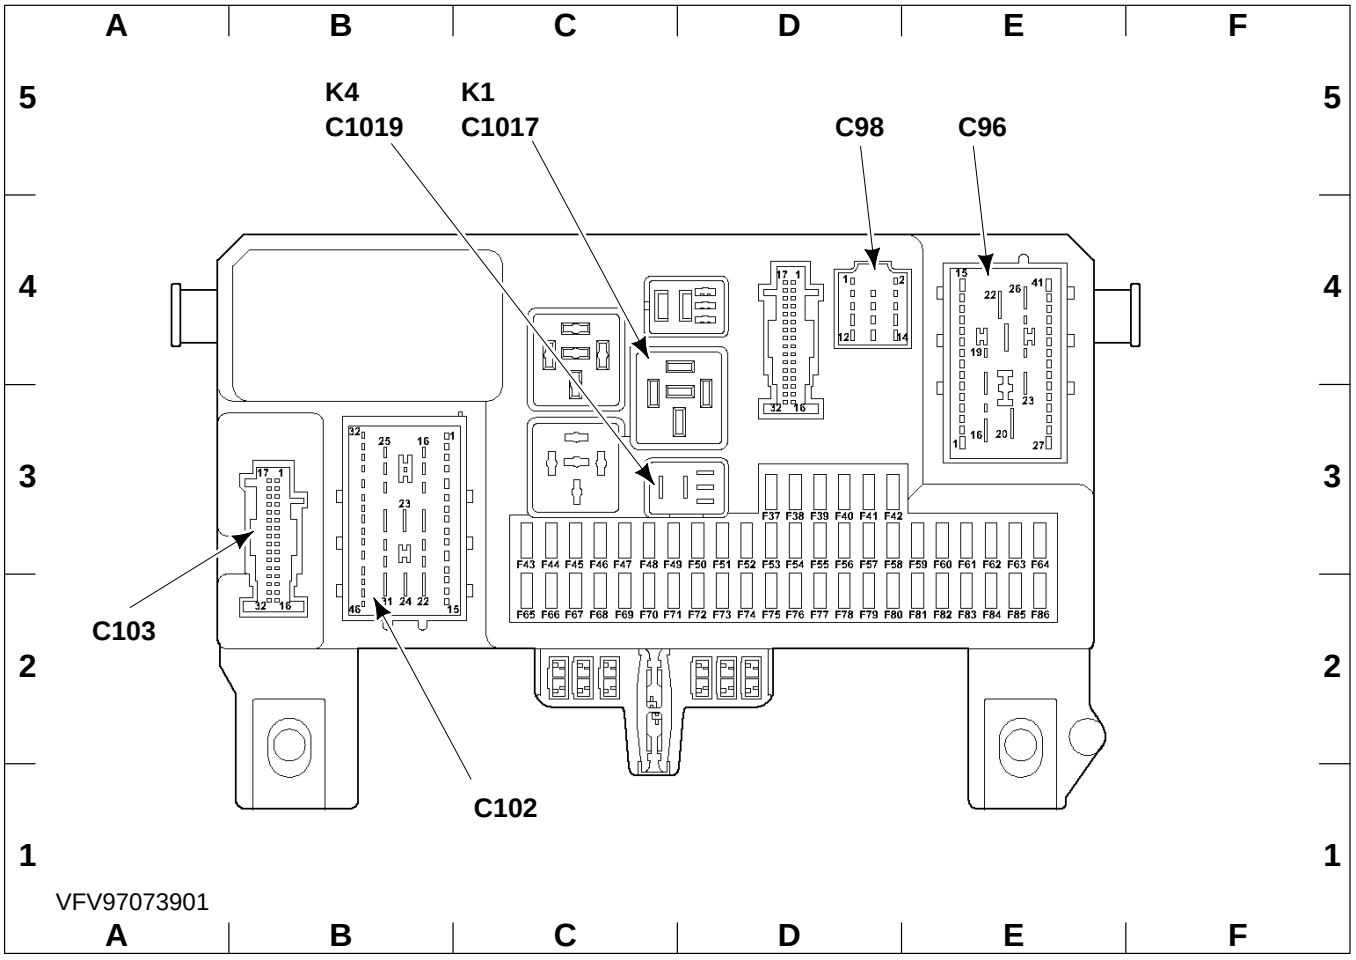


Central Junction Box (CJB), front

C96 . . . . . E 5
C98 . . . . . D 5
C102 . . . . . C 1
C103 . . . . . A 2
C1017 . . . . . C 5
C1019 . . . . . B 5
K1 . . . Heated rear window relay . . . . . C 5
K4 . . . Fuel pump relay . . . . . B 5

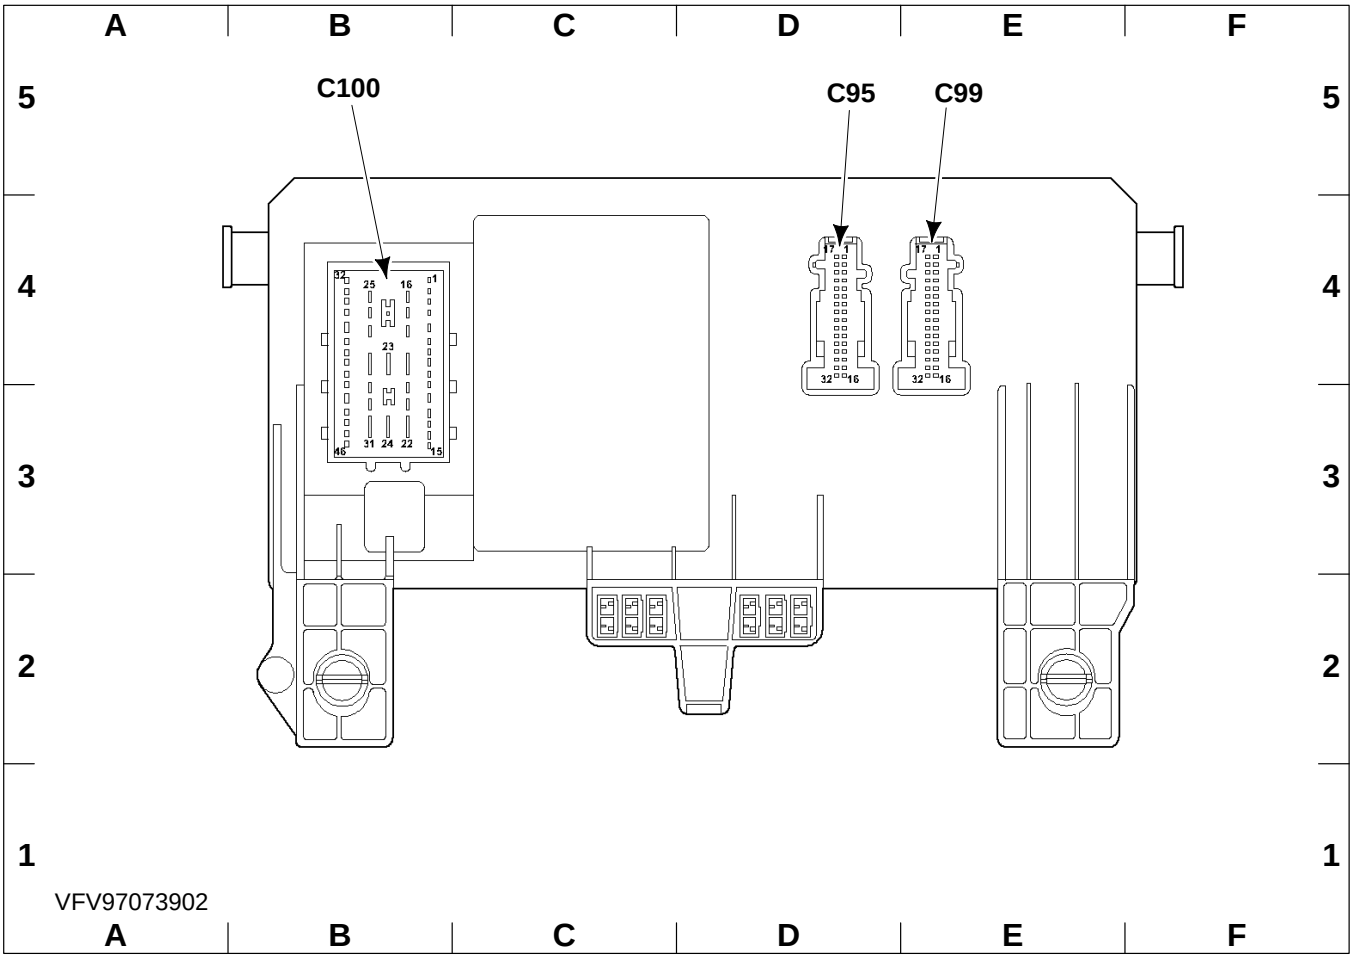

Central Junction Box (CJB), rear

C95 . . . . . D 5
C99 . . . . . E 5
C100 . . . . . B 5

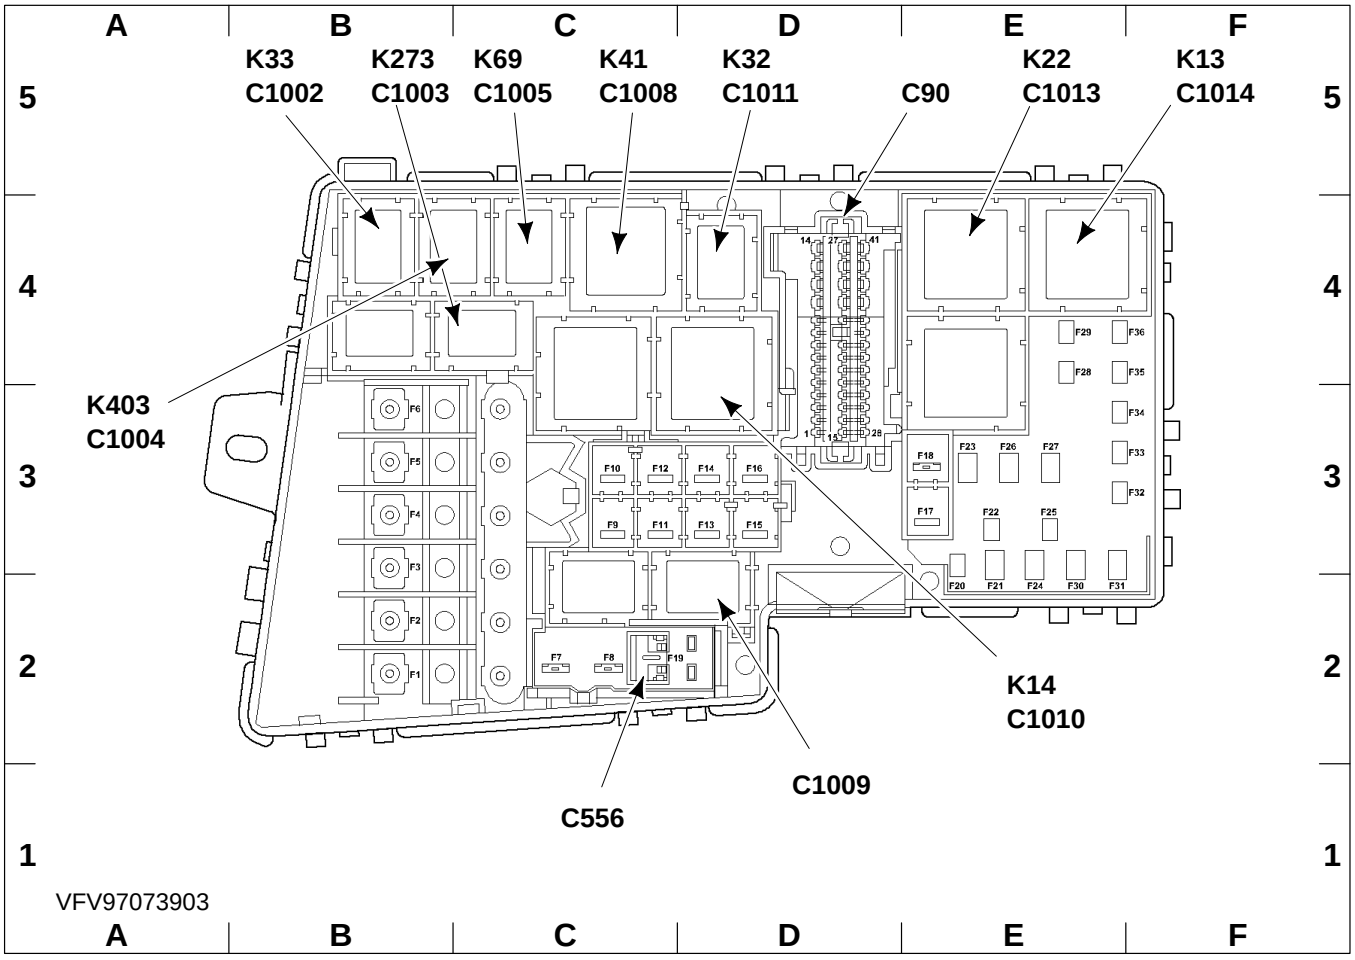


Battery Junction Box (BJB)

C90	E 5	C1014	F 5
C556	C 1	K13 . . Power hold relay	F 5
C1002	B 5	K14 . . Blower motor relay	E 2
C1003	B 5	K22 . . Starter relay	E 5
C1004	A 3	K32 . . A/C Wide Open Throttle (WOT) relay	D 5
C1005	C 5	K33 . . Horn relay	B 5
C1008	C 5	K41 . . Ignition relay	C 5
C1009	D 1	K69 . . Fuel heater relay	C 5
C1010	E 2	K273 . Reversing lamps relay	B 5
C1011	D 5	K403 . Heat exchanger shutoff valve relay	A 3
C1013	E 5		

C30

14014

F20044

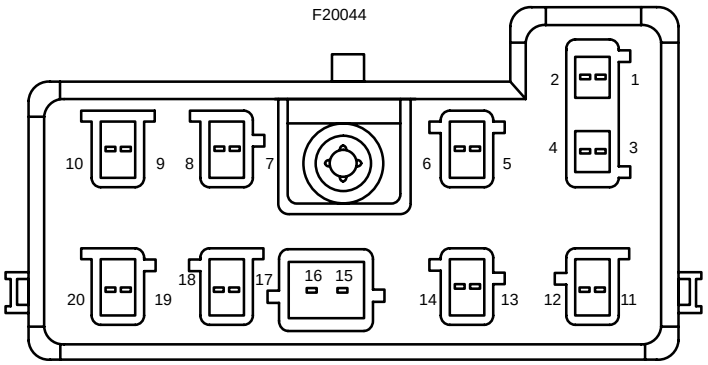


(1)		(11)	
(2)		(12)	
(3)		(13)	8-JA54(WH)
(4)		(14)	9-JA54 (BN)
(5)	15S-JA37 (GN/BK)	(15)	29-AH35 (OG/YE)
(6)	91S-JA37 (BK/GN)	(16)	31-DA14 (BK)
(7)	15S-JA33 (GN/BU)	(17)	31-DA14A (BK)
(8)	91S-JA33 (BK/BU)	(18)	
(9)		(19)	9-JA54 (BN)
(10)		(20)	8-JA54 (WH)

C31

14014

F20044

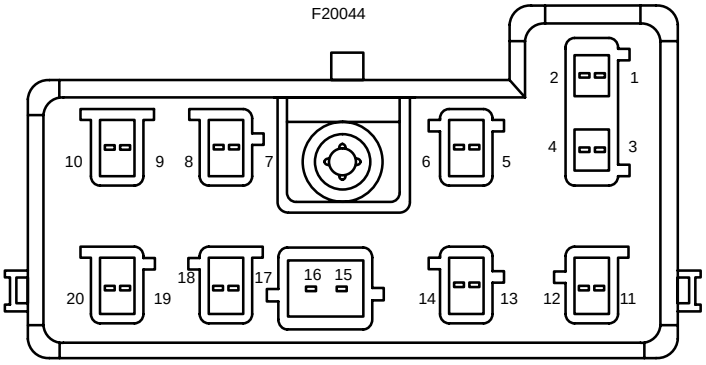


(1)	1-MD49 (WH/GN)	(8)	91S-JA34 (BK/RD)	(15)	91-MD8 (BK/OG)
(2)	2-MD49 (GY/OG)	(9)		(16)	29-MD8A (OG)
(3)	1-MD50 (WH/BK)	(10)		(17)	
(4)	2-MD50 (GY/BK)	(11)		(18)	
(5)	15S-JA38 (GN/OG)	(12)		(19)	
(6)	91S-JA38 (BK/RD)	(13)		(20)	
(7)	15S-JA34 (GN/OG)	(14)			

C41

14A584

F26034

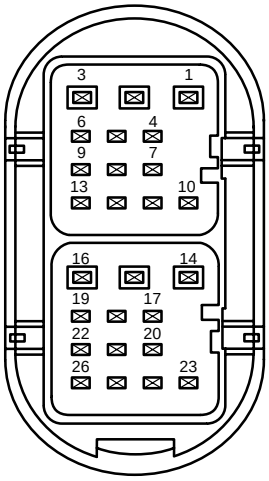

(1) 31-DA11 (BK)
31-DA11A (BK)

(2) 32-AA59 (WH/BK)
32-AA59C (WH/BK)
91-AD24 (BK/RD)

(3) 29-AJ26 (OG/YE)
33-AA59 (YE/BK)
33-AA59C (YE/BK)

(4) 10-MD28 (GY)

(5) 8-MD28 (WH)

(6) 31S-GL16A (BK/YE)
31S-AA63 (BK/OG)
31S-AA63A (BK/OG)
31S-GL9A (BK/YE)

(7) 4-EC3B (GY/RD)
31S-AA62 (BK/WH)

(8) 5-EC3B (BU/RD)
31S-AA63 (BK)

(9) 31S-AA64 (BK)
31S-AA64A (BK/GN)
31S-AA64 (BK/GN)

(10) 31S-AA61 (BK)
33-AD27A (YE/GN)

(11) 32-AD27A (WH/GN)
33-AA60 (YE)

(12) 29-AD27 (OG/BK)

(13) 29-AD12 (OG/YE)

(14) 15-AJ7 (GN/BU)

(15) 32-AJ18 (WH/VT)

(16) 33-AJ18 (YE/VT)

(17)

(18) 34-AD10 (BU/YE)
34-AD10C (BU/YE)

(19) 33-AD11 (YE/VT)
33-AD11C (YE/VT)

(20) 32-AD9 (WH/GN)
32-AD9C (WH/GN)

(21)

(22)

(23)

(24)


(25)

(26)

C43

14K138

F26034

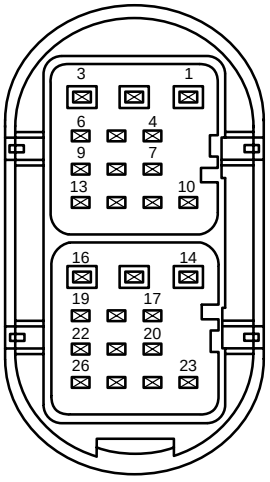

(1) 31-DA12 (BK)
31-DA12A (BK)

(2) 32-AA59B (WH/BK)
32-AA59C (WH/BK)

(3) 29-AJ27 (OG/WH)
33-AA59B (YE/BK)
33-AA59C (YE/BK)

(4) 10-MD28 (GY)

(5) 8-MD28 (WH)

(6) 31S-GL16A (BK/BU)

(7) 4-EC3F (GY/RD)
31S-AA62B (BK/WH)

(8) 5-EC3F (BU/RD)
31S-AA63B (BK/OG)

(9) 31S-AA64B (BK/GN)

(10) 31S-AA61B (BK/BU)
33-AD28 (YE/GN)

(11) 32-AD28 (WH/GN)
33-AA60B (BK/YE)

(12)

(13)

(14) 15-AJ18 (GN/WH)

(15) 32-AJ18 (WH/VT)

(16) 33-AJ18 (YE/VT)

(17)

(18) 34-AD10 (BU/YE)

(19) 33-AD11 (YE/VT)

(20) 32-AD9 (WH/GN)

(21)

(22)

(23)

(24)


(25)

(26)

C44

14014

F13028

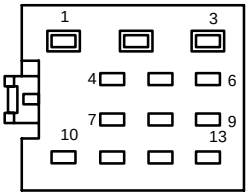

(1) 31-DA11 (BK)
31-DA11A (BK)
31-DA11B (BK)
31-DA11C (BK)

(2) 32-AA59AA (WH/BK)
31-JA11D (BK)

(3) 29-AJ26 (OG/YE)
33-AA59A (YE/BK)

(4) 10-MD10 (GY/BK)
10-MD10B (GY/BK)
10-MD10A (GY/BK)

(5) 8-MD10 (WH/BK)
8-MD10B (WH/BK)
8-MD10A (WH/BK)

(6) 31S-GL9A (BK/YE)

(7) 4-EC10Y (GY) + 4-EC10Z (GY)
4-EC10Z (GY) + 4 EC10AF (GY)
31S-AA62A (BK/WH)

(8) 5-EC10Y (BU) + 5 EC10Z (BU)
5-EC10Z (BU) + 5-EC10AF (BU)
31S-AA63A (BK/OG)

(9) 31S-AA64A (BK/GN)

(10) 31S-AA61A (BK/BU)
33-AD27 (YE/GN)

(11) 32-AD27 (WH/GN)
33-AA60A (YE)


(12) 15S-HB15 (GN/BK)
31S-AD24 (BK/RD)
29-AD27 (OG/BK)

(13) 29-AD12 (OG/YE)

C45

14240

F26034

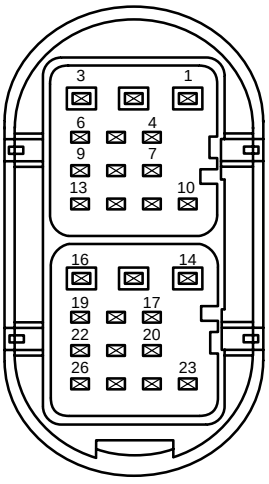

(1) 31-AJ83 (BK)
31-AJ83B (BK)

(2) 32-AA59 (WH/BK)

(3) 29-AJ83 (OG/BU)
33-AA59 (YE/BK)

(4) 10-MD29 (GY/WH)

(5) 8-MD29 (WH/VT)

(6) 31S-GL12 (BK/OG)

(7) 4-EC3D (GY/RD)


(8) 5-EC3D (BU/RD)

(9)
(10)
(11) 33-AA60 (YE)
(12)
(13)
(14)
(15)
(16)
(17)
(18)
(19)
(20)
(21)
(22)
(23)
(24)
(25)
(26)

C46

14240

F26034

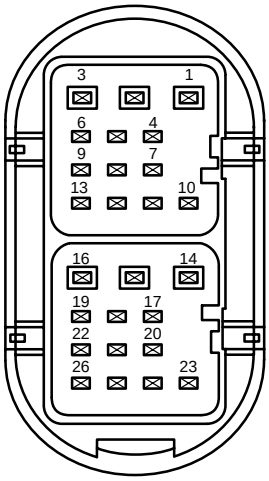


(1)	31-AJ83A (BK) 31-AJ83C (BK)	(9)		(18)	
(2)	32-AA59A (WH/BK)	(10)		(19)	
(3)	29-AJ83A (OG/BU) 33-AA59A (YE/BK)	(11)	33-AA60A (YE)	(20)	
(4)	10-MD29B (GY/WH)	(12)		(21)	
(5)	8-MD29B (WH/VT)	(13)		(22)	
(6)	31S-GL16 (BK/BU)	(14)		(23)	
(7)	4-EC3A (GY/RD)	(15)		(24)	
(8)	5-EC3A (BU/RD)	(16)		(25)	
		(17)		(26)	

C47

14014

F13026

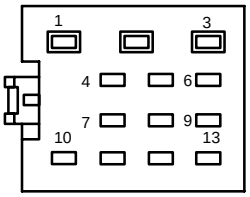


(1)	15-AJ7 (GN/BU)	(8)
(2)	32-AJ18 (WH/VT)	(9)
(3)	33-AJ18 (YE/VT)	(10)
(4)		(11)
(5)	34-AD10 (BU/YE)	(12)
(6)	33-AD11 (YE/VT)	(13)
(7)	32-AD9 (WH/GN)	

C49

14014

F13028

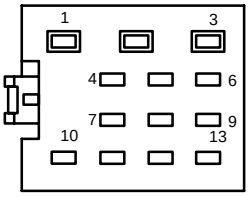

(1) 31-DA12 (BK)
31-DA12A (BK)
31-DA12B (BK)

(2) 32-AA59B (WH/BK)

(3) 29-AJ27 (OG/WH)
33-AA59B (YE/BK)

(4) 10-MD17 (GY/RD)
10-MD17A (GY/RD)

(5) 8-MD17 (WH/RD)
8-MD17A (WH/RD)

(6) 31S-GL16A (BK/BU)

(7) 4-EC10AB (GY) + 4-EC10U (GY)
4-EC10U (GY) + 4-EC10AG (GY)
31S-AA62B (BK/WH) +
31S-AA62A (BK/WH)

(8) 5-EC10AB (BU) + 5-EC10U (BU)
5-EC10U (BU) + 5-EC10AG (BU)
31S-AA63B (BK/OG) +
31S-AA63A (BK/OG)

(9) 31S-AA64B (BK/GN) +
31S-AA64A (BK/GN)

(10) 31S-AA61B (BK/BU) +
31S-AA61A (BK/BU)
33-AD27 (YE/GN)

(11) 32-AD27 (WH/GN)
33-AA60B (YE)


(12)

(13)

C51

14014

F13026

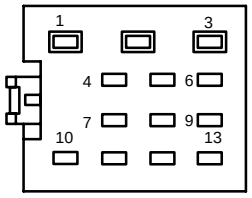

(1) 15-AJ18 (GN/WH)

(2) 32-AJ18 (WH/VT)

(3) 33-AJ18 (YE/VT)

(4)

(5) 34-AD10 (BU/YE)

(6) 33-AD11 (YE/VT)

(7) 32-AD9 (WH/GN)

(8)

(9)

(10)

(11)


(12)

(13)

C52

14014

F13028

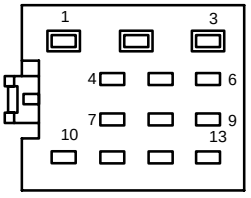

(1) 31-DA21 (BK)
31-DA21A (BK)
31-DA21B (BK)

(2) 32-AA59C (WH/BK)

(3) 29-AJ83 (OG/BU)
33-AA59C (YE/BK)

(4) 10-MD11 (GY/WH)
10-MD11A (GY/WH)

(5) 8-MD11 (WH/VT)
8-MD11A (WH/VT)

(6) 31S-GL12 (BK/OG)

(7) 4-EC10AG (GY) + 4-EC10AA (GY)
4-EC10R (GY) + 4-EC10Y (GY)
4-EC10AG (GY) + 4-EC10R (GY)

(8) 5-EC10R (BU) + 5-EC10Y (BU)
5-EC10AG (BU) + 5-EC10R (BU)
5-EC10AA (BU) + 5-EC10AG (BU)
5-EC10AR (BU) + 5-EC10Y (BU)

(9)

(10)

(11) 33-AC60C (YE)


(12)

(13)

C54

14014

F13028

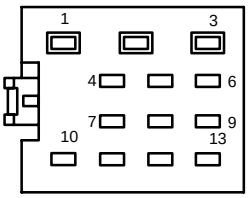

(1) 31-DA22 (BK)
31-DA22A (BK)
31-DA22B (BK)

(2) 32-AA59D (WH/BK)

(3) 29-AJ84 (OG/WH)
33-AA59D (YE/BK)

(4) 10-MD18 (GY)
10-MD18A (GY)

(5) 8-MD18 (WH)
8-MD18A (WH)

(6) 31S-GL19 (BK/GN)

(7) 4-EC10S (GY) + 4-EC10R (GY)
4-EC10R (GY) + 4-EC10V (GY)
4-EC10AC (GY) + 4-EC10S (GY)
4-EC10AF (GY) + 4-EC10AC (GY)
4-EC10AF (GY) + 4-EC10R (GY)

(8) 5-EC10AC (BU) + 5-EC10V (BU)
5-EC10R (BU) + 5-EC10V (BU)
5-EC10S (BU) + 5-EC10R (BU)
5-EC10AF (BU) + 5-EC10AC (BU)
5-EC10AF (BU) + 5-EC10R (BU)
5-EC10AC (BU) + 5-EC10S (BU)

(9)

(10)

(11) 33-AA60D (YE)


(12)

(13)

C57

14401

F06109

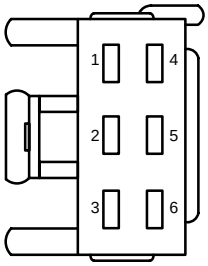

(1)

(2)

(3) 15S-LG6C (GN/YE)
34S-LG6 (BU)


(4)

(5) 8-GB8A (WH/BU)

(6)

14335

F06112

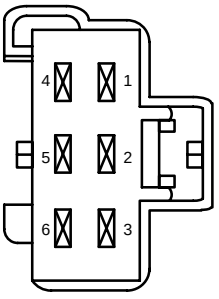


C58

14014

before 11/2004

F13020

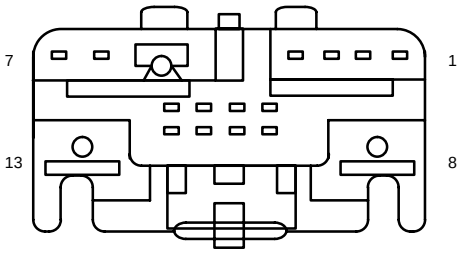


(1) 31-DA13A (BK)
15S-HB19B (GN/BU)
15S-HB19G (GN/BU)
15S-HB19 (GN/BU)
(2)
(3) 29-KA28 (OG/BU)
(4) 32-AA27 (WH/GN)
(5) 29S-LF21 (OG/BK)
(6) 32-KA28 (WH/RD)
(7)
(8) 31S-GL20 (BK/RD)
(9) 31S-LB25A (BK/BU)
(10) 15S-LG6 (GN/YE)
(11) 31S-AA30 (BK/YE)
(12)
(13)

17N400

before 11/2004


F13024

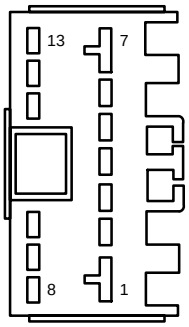

(1) 31-DA13A (BK)
15S-HB19B (GN/BU)
15S-HB19 (BK)
(2)
(3) 29-KA28 (OG/BU)
(4) 32-AA27 (WH/GN)
(5) 29S-LF21 (OG/BK)
(6) 32-KA28 (WH/RD)
(7)
(8) 31S-GL20 (BK/RD)
(9) 31S-LB25 (BK/BU)
(10) 15S-LG6 (GN/YE)
(11) 31S-AA30 (BK/YE)
(12)
(13)


as of 11/2004

F14002

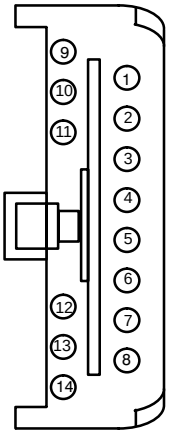

before 11/2004


F14008

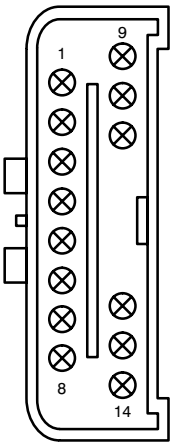

C71

14K733

F01015




(1) 31-GJ1B (BK)

H4
Second horn

C75

14K733

F01015




(1) 31-GJ1A (BK)

H1
Horn

C72

14K733

F01015




(1) 29S-GJ1C (OG/BU)

H4
Second horn

C76

14K733

F01015




(1) 29S-GJ1A (OG/BU)

H1
Horn

C73

14K733

F01015




(1) 29S-GJ1C (OG/BU) +
29S-GJ1B (OG/BU)

H1
Horn

C77

14K733

F02590

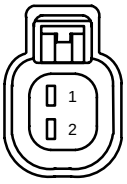


(1) 29S-GJ1 (OG/BU)
(2) 31-GJ1 (BK)

H1
Horn

C74

14K733

F01015




(1) 31-GJ1C (BK)

H1
Horn

C78

14K733

F02590

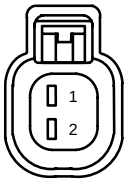


(1) 29S-GJ1D (OG/BU)
(2) 31-GJ1D (BK)

H1
Horn

C90 (BK)

12A690

F41004

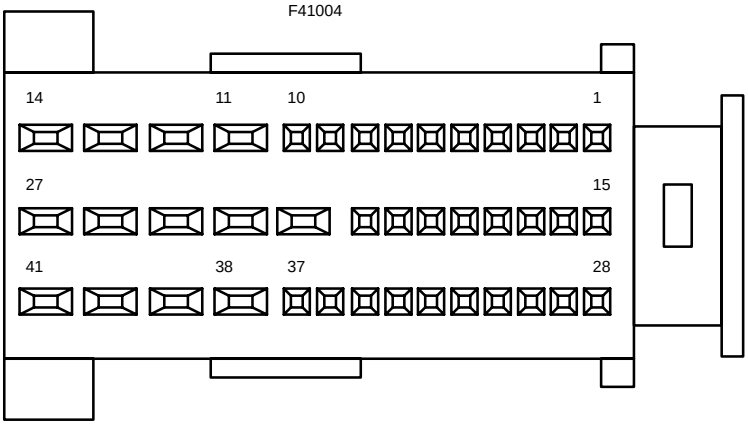

(1) 5-EC7D (BU/RD)
5-EC7C (BU/RD)
5-EC7A (BU/RD)

(2) 91S-RH15 (BK/YE)

(3)

(4) 31S-BB16 (BK/RD)
31S-BB16B (BK/RD)
31S-BB16A (BK/RD)

(5) 91S-RE8 (BK/YE)
31S-FA11A (BK/YE)

(6) 91S-RH5 (BK/BU)
91S-RH5A (BK/BU)
91S-RH5B (BK/BU)
15S-PE8 (GN/RD)

(7)

(8) 15S-LG23 (GN/WH)
15S-LG23B (GN/WH)
15S-LG23A (GN/WH)

(9)

(10) 15-LG28 (GN/WH)
15-LG28A (GN/WH)

(11) 50-BB12 (GY)
50-BB14A (GY/RD)

(12) 15-RJ15 (GN/BU)
15-RJ15A (GN/BU)
15-RR1 (GN/RD)
15S-RL42 (GN/BU) +
15S-RL50 (GN/BU)

(13) 30-RE8 (RD)
30-RE8A (RD)
30-RE8B (RD)
30-TA55 (RD)

(14) 15-RN3A (GN/BU)
15-RN3C (GN/BU)
15-RN3 (GN/BU)

(15) 4-EC7D (GY/RD)
4-EC7B (GY/RD)
4-EC7A (GY/RD)

(16) 8-EE14 (WH/BU)

(17) 31S-FA11 (BK/YE)
91S- RE8A (BK/YE)

(18) 15S-FA6 (GN/YE)
15S-FA6A (GN/YE)

(19) 8-FA88 (WH/VT)
91S-PA13 (BK/BU)
8-FA88A (WH/VT)
8-FA88B (WH/VT)

(20) 30-BA10 (RD)

(21) 91S-RH9 (BK/BU)
91S-RH9A (BK/BU)
91S-RH9B (BK/BU)

(22) 91S-LG45 (BK/GN)

(23)

(24) 15S-RD15D (GN/OG)
15-TA55 (GN/BK) +
15-TA18 (GN/OG)

(25) 15S-RD15C (GN/OG)
91S-BB6 (BK/YE)

(26) 15S-RD15B (GN/OG)

(27) 15S-RD15A (GN/OG)

(28) 10-RJ30 (GY)

(29) 7-FA88 (YE/VT)
7-FA88A (YE/VT)

(30) 8-PF36 (WH/GN)
8-PF36A (WH/GN)

(31)

(32) 9-FA88 (BN/WH)
9-FA88A (BN/WH)

(33) 10-PF36 (GY/OG)
10-PF36A (GY/OG)

(34)

(35)

(36)

(37) 15-RE17 (GN/BU)
15-RE17A (GN/BU)
15-RN2A (GN/BU)
15-RN2B (GN/BU)

(38)

(39) 15S-LG9 (GN/BK)
15S-LG9A (GN/BK)


(40) 15-RJ14 (GN/YE) +
15-RJ25 (GN/RD)
15-RR4 (GN/BU)

(41) 15-RE21 (GN/OG)
15-RE21A (GN/OG)
15-RE21B (GN/OG)

P93
Battery Junction
Box (BJB)

C95

14K733

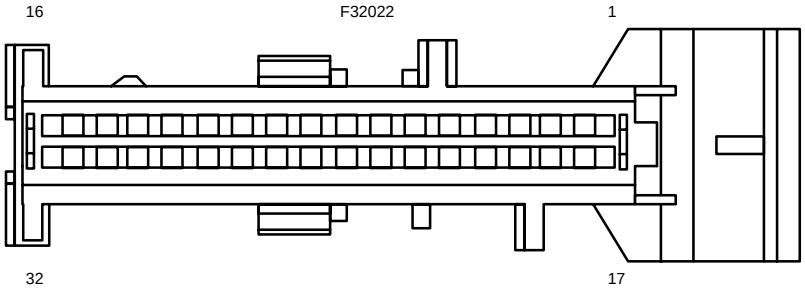


(1)		(12)		(23)	
(2)		(13)	31S-BB7 (BK/BU)	(24)	
(3)		(14)		(25)	
(4)		(15)		(26)	
(5)		(16)	31S-FA78 (BK/WH)	(27)	
(6)		(17)		(28)	8-GE38 (WH/BK)
(7)		(18)		(29)	31S-GL7 (BK/YE)
(8)		(19)		(30)	9-GE38 (BN/YE)
(9)		(20)		(31)	
(10)		(21)		(32)	31S-FA23 (BK/BU)
(11)		(22)			

P91
Central Junction
Box (CJB)

C96

14K733

F41002

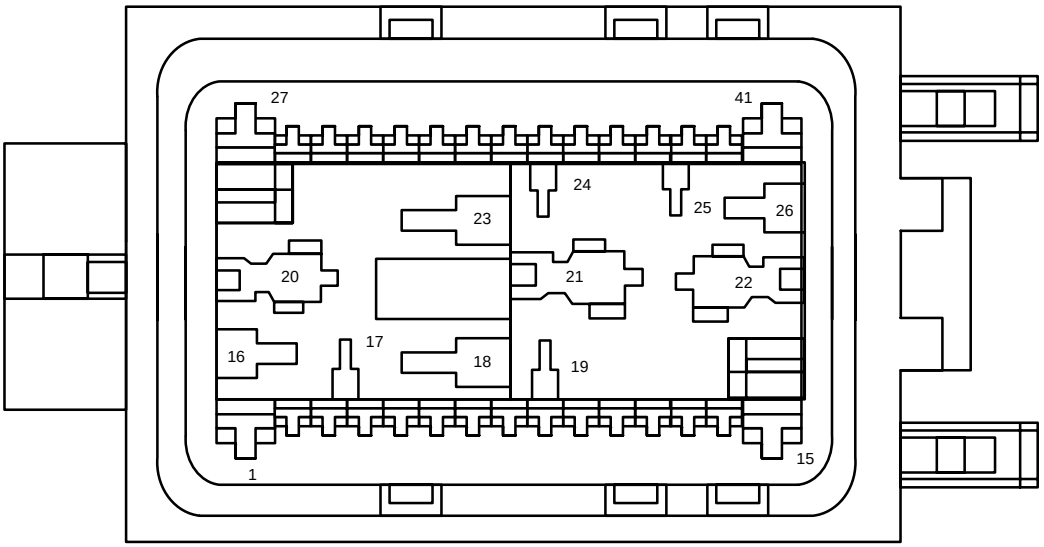


P91
Central Junction Box (CJB)

(1)		(17)	29-AD27 (OG/BK)	(31)	15S-LG23 (GN/WH)
(2)	15S-LE22 (GN/OG)	(18)		(32)	49S-LG13 (BU/RD)
(3)	15S-LE15 (GN/BK)	(19)		(33)	15-LG28A (GN/WH) 15-LG46 (GN/OG) 15-LG28 (GN/WH)
(4)		(20)	30-DA2 (RD)	(34)	49S-LG20 (BU/WH)
(5)		(21)	15-DA3 (GN/RD)	(35)	29S-LF7 (OG/BU)
(6)	32-KA34 (WH/BK)	(22)	30-DA1 (RD)	(36)	49S-LG18A (BU) 49S-LG18 (BU)
(7)	15S-LE23 (GN/WH)	(23)	32-KA11 (WH/BK)	(37)	49S-LG11A (BU/OG) 49S-LG11 (BU/OG)
(8)	15S-LE16 (GN/OG)	(24)		(38)	15-RE17 (GN/BU) 15-RE17B (GN/BU)
(9)	33-KA34 (YE/BK)	(25)	15S-LG9A (GN/BK) 15S-LG9 (GN/BK)	(39)	91-DK20 (BK/RD)
(10)		(26)		(40)	31-KA9A (BK)
(11)	31S-GC6 (BK/YE)	(27)	15-DA6 (GN/WH)	(41)	32-KA10 (WH/GN)
(12)	31S-KA9 (BK/OG)	(28)	29S-LF16 (OG/GN)		
(13)		(29)			
(14)		(30)			
(15)					
(16)					

C98

14335

F14018

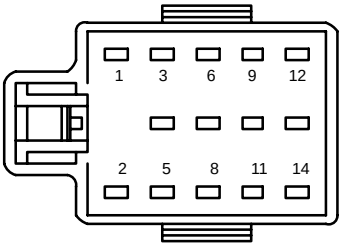


P91
Central Junction
Box (CJB)

(1)
(2) 8-AG12 (WH/GN)
(3)
(4) 91-DA4 (BK/GN)
91-LC7A (BK/BU)
(5)
(6) 8-AA57 (WH)
(7) 29-LB6A (OG/YE)
29-LC7B (OG/BU)
(8) 8-GB8 (WH/BU)
8-GB8 (WH/BU) +
8-GB8A (WH/BU)
(9)
(10) 29-AA57 (OG/YE)
(11) 15-AG12A (GN/BK)
(12)
(13) 31S-LB12 (BK/YE)
(14) 29-AG12 (OG/BK)

C99

14014

F32020

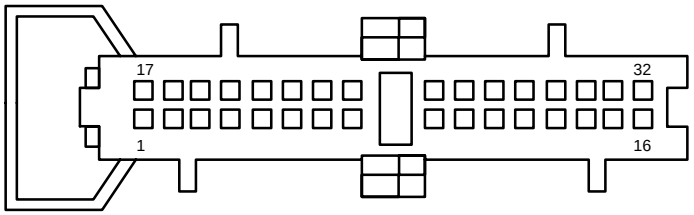


P91
Central Junction
Box (CJB)

(1)
(2)
(3)
(4)
(5)
(6)
(7)
(8)
(9) 31S-GL16A (BK/BU)
(10) 31S-GL19 (BK/GN)
(11) 31S-GL12 (BK/OG)
(12) 31S-GL19A (BK/YE)
31S-GL9A (BK/YE)
(13) 31S-AA63B (BK/OG)
(14) 31S-AA64B (BK/GN)
31S-AA64 (BK/GN)
(15)
(16) 5-EC10L (BU)
5-EC10Z (BU)
(17)
(18)
(19)
(20)
(21)
(22)
(23)
(24)
(25)
(26) 31S-GL20 (BK/RD)
31S-GL20A (BK/YE)
(27) 31S-AA62B (BK/WH)
(28)
(29) 31S-AA61B (BK/BU)
(30) 31S-AA30 (BK/YE)
31S-AA30A (BK/YE)
(31)
(32) 4-EC10L (GY)
4-EC10Z (GY)

C100

14014

F46006

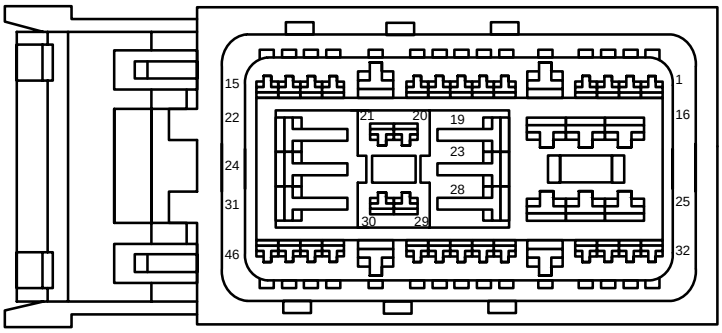

(1) 15S-LG9B (GN/BK)
15S-LG16 (GN/OG)
15S-LG9 (GN/BK)

(2) 30-GN10 (RD)

(3) 15-GN10 (GN/YE)

(4)

(5) 29-AJ26 (OG/YE)

(6)

(7) 15-RJ30 (GN/YE)

(8)

(9) 15-MD7 (GN/BU)

(10) 29S-LF21 (OG/BK)

(11) 33-AA43A (YE/VT)
33-AA59 (YE/BK)

(12) 29S-GL26 (OG/GN)

(13) 15-LG23 (GN/WH)

(14) 32-KA28 (WH/RD)

(15) 29-KA28 (OG/BU)

(16) 33-AA60 (YE)

(17) 15S-RG2 (GN/OG)

(18) 32-AA59 (WH/BK)

(19)

(20)

(21)

(22)

(23) 15S-HB19A (BK)
15S-HB19 (GN/BU)

(24) 15-AJ18 (GN/WH) +
15-AJ7 (GN/BU)

(25) 32-AA59AA (WH/BK) +
32-AA43A (WH/VT)
32-AA43A (WH/VT)
32-AA59E (WH/BK) +
32-AA43A (WH/VT)

(26) 29-AJ27 (OG/WH)

(27) 29-AJ83 (OG/BU)

(28) 30-LF29 (RD)

(29) 29-AJ84 (OG/WH)

(30) 29-AH35 (OG/YE)

(31)

(32) 49S-LG12 (BU)

(33) 49S-LG19 (BU/RD)

(34) 29S-LF11 (OG/WH)
29S-LF11A (OG/WH)

(35) 29-AD12 (OG/YE)
15-MD7 (GN/BU)
15S-KA28 (GN/BU)

(36) 15S-LG14 (GN/RD)

(37) 91S-RP3 (BK/RD)

(38) 29-LB25 (OG/BU)

(39) 29S-LF20(OG)
29S-LF20A (OG)

(40)

(41)

(42)

(43)

(44) 29-MD8A (OG)

(45)


(46) 32-AA27 (WH/GN)
32-AA27A (WH/GN)

P91
Central Junction
Box (CJB)

C102 (BU)

14401

F46006

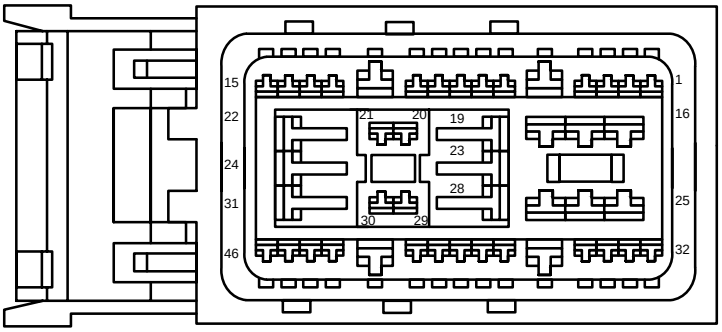


(1) 29S-LF1 (OG/YE)
(2)
(3) 75-GG14 (YE/BU) + 75-MD15 (YE/GN)
(4)
(5) 15-DA4 (GN/BK)
(6)
(7) 29-GG14 (OG)
(8)
(9) 29-RA1 (OG)
(10) 29-FA13 (OG) 29-FA94 (OG/BK)
(11)
(12)
(13) 15-LE29 (GN/BK)
(14) 15-JA10 (GN/OG) + 15-JA56 (GN/OG)
(15)
(16) 29-MD1 (OG/YE) 29-MD15 (OG/BK)
(17) 15S-LG23 (GN/WH) 15S-LG23 (GN/WH) + 34S-LG6 (BU)
(18)
(19) 31-DA1 (BK)
(20) 15-KA19 (GN/OG)
(21) 75-DA1 (YE)
(22)
(23) 29-HA6 (OG/YE)
(24)
(25)
(26)
(27) 29-LB8A (OG) 29-LC1 (OG/BU) 29-LB8 (OG)
(28)
(29)
(30) 15-LD16 (GN/RD)
(31)
(32)
(33) 29-LE29 (OG/BK)
(34) 29S-LF5 (OG/BU)
(35) 29-LC11 (OG/WH) + 29-LC23 (OG/WH)
(36) 15-DA1 (GN/YE)
(37)
(38) 91-DK20 (BK/RD)
(39) 33-KA34 (YE/BK)
(40) 15-GG14 (GN/RD) + 15-GL37 (GN/BK)
(41) 31S-LC11 (BK/WH) + 31S-LC23 (BK/WH)
(42)
(43) 32-KA34 (WH/BK)
(44) 15S-LE21 (GN/BK)
(45)
(46)

P91
Central Junction Box (CJB)

C103

14401

F32022

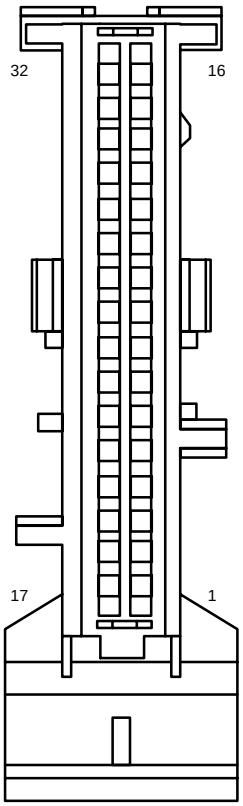


(1)		(12)		(23)	10-KA8 (GY/RD)
(2)		(13)	8-FA9 (WH/GN)	(24)	91S-KA35 (BK/BU)
(3)		(14)	15S-FA78 (GN/WH)	(25)	
(4)	91S-HB22 (BK/GN)	(15)		(26)	
(5)		(16)	31S-HB22 (BK/GN)	(27)	91S-LE25 (BK/BU)
(6)	31S-GE44 (BK/RD)	(17)	91S-LG8 (BK/OG)	(28)	8-KA47 (WH/GN)
(7)		(18)	8-PG13 (WH)	(29)	8-KA46 (WH/BU)
(8)		(19)	91S-LE14 (BK/OG)	(30)	8-KA45 (WH/RD)
(9)		(20)		(31)	91S-LG2 (BK/BU)
(10)	9-PG13 (BN)	(21)	91S-KA10 (BK/GN)	(32)	91S-LG1 (BK/YE)
(11)		(22)	91S-KA11 (BK/RD)		

P91
Central Junction
Box (CJB)

C107

13B551 **14335**

F02056




E174
High mounted
stop lamp

(1) 15S-LG6 (GN/YE)
15S-LG6C (GN/YE)
(2) 31-LG6 (BK)
91-LG6 (BK/YE)


C108

17N400 **13B551**

F02574

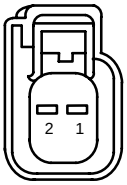

F02596




(1) 15S-LG6 (GN/YE)
(2) 31-LG6 (BK)

C110a

14A280

F01014




(1) 30-BA6 (RD) +
30-BB10 (RD)

M8
Starter motor

C110b

14A280

F01014




(1) 50-BB12 (GY)

M8
Starter motor


C111
14401

F45004

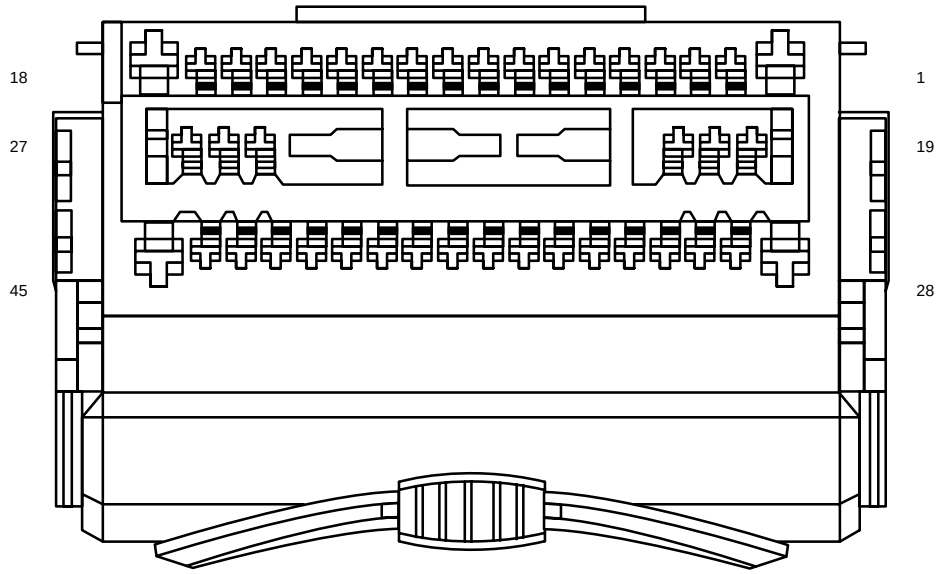

14K733

F45002

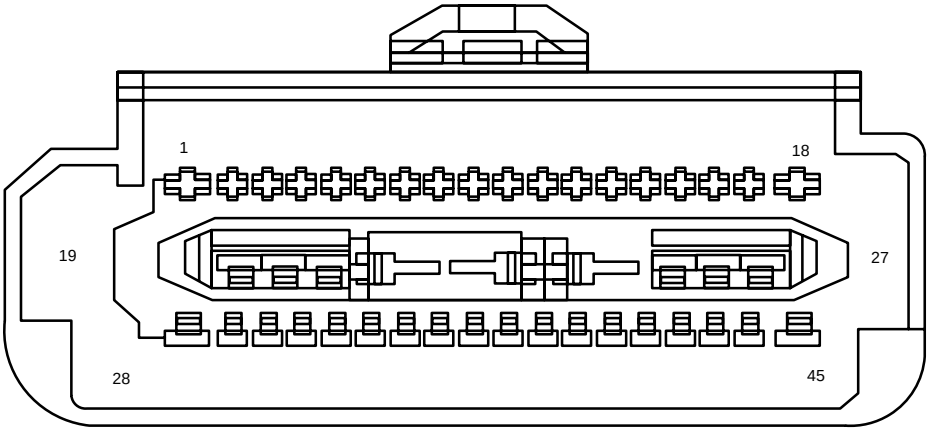


(1) 15-CF54 (GN/WH)
(2) 10-CE8 (GY/VT)
(3) 4-EC7T (GY/RD)
4-EC7M (GY/RD)
4-EC7Z (GY/RD)
(4) 5-EC7T (BU/RD)
5-EC7M (BU/RD)
5-EC7Z (BU/RD)
(5) 31S-CF54 (BK/WH)
(6) 91S-GJ7 (BK/BU)
(7)
(8) 9-JA49 (BN)
(9) 8-JA49 (WH)
(10) 91S-CF54 (BK/WH)
(11)
(12) 50-BB16 (GY/BK)
(13) 30-BB9 (RD)
(14) 8-CE8 (WH/BU)
(15) 9-CE8 (BN/BU)
9-CF1 (BN/RD) +
9-CF1A (BN/RD)
(16) 7-CE8 (YE/BU)
7-CF1 (YE/RD) +
7-CF1A (YE/RD)
(17)
(18)
(19) 15S-LD1 (GN/YE)
(20)
(21)
(22) 15-FA18 (GN/OG)
15-FA18A (GN/OG)
(23)
(24)
(25)
(26)
(27)
(28)
(29)
(30)
(31)
(32)
(33)
(34)
(35)
(36)
(37) 10-PF36 (GY/OG)
(38)
(39)
(40)
(41) 8-PF36 (WH/GN)
(42)
(43)
(44)
(45)

C112

14014


F29004

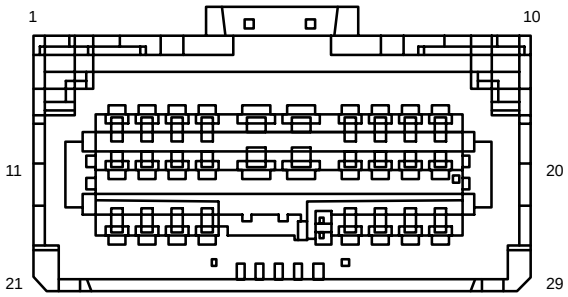

(1) 8-MD17 (WH/RD)
8-MD17A (WH/RD)
(2) 10-MD17 (GY/RD)
10-MD17A (GY/RD)
(3) 8-RJ30 (WH)
(4) 7-RJ30 (YE)
(5) 31S-GE44 (BK/RD)
(6) 15S-LD6 (GN/YE)
(7) 91S-BB6 (BK/YE) +
91S-BB6B (BK/YE)
91S-BB6 (BK/YE)
(8) 9-RJ30 (BN)
(9) 8-MD11A (WH/VT)
8-MD18 (WH)
(10) 10-MD11A (GY/WH)
10-MD18 (GY)
(11)
(12)
(13) 9-GA7 (BN/RD)
(14) 8-GA7 (WH/RD)
(15)
(16)
(17)
(18) 1-GN17 (WH/RD)
(19) 4-EC10S (GY)
4-EC10G (GY)
(20) 5-EC10S (BU)
5-EC10G (BU)
(21)
(22)
(23)
(24)
(25) 91S-PG6 (BK/YE)
(26)
(27)
(28)
(29)

14401

F29006

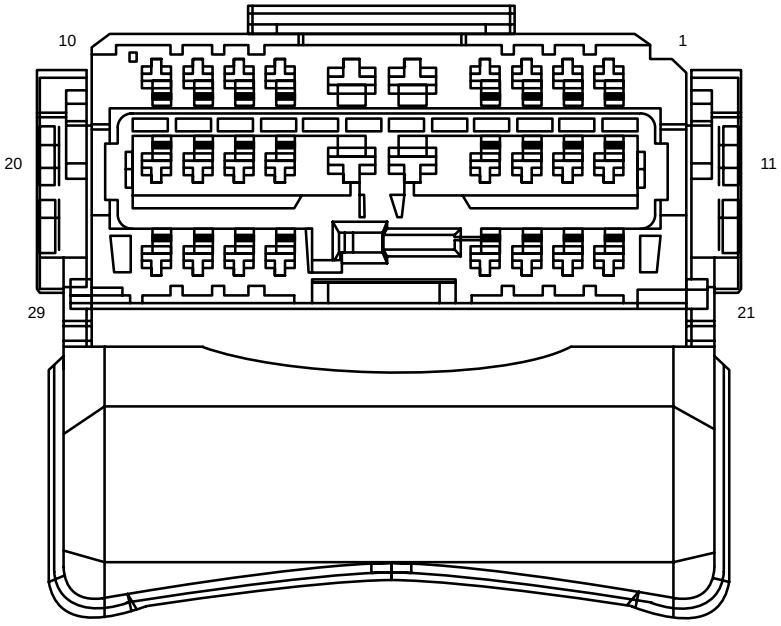


(1) 8-MD17 (WH/RD)
8-MD17A (WH/RD)
(2) 10-MD17 (GY/RD)
10-MD17A (GY/RD)
(3) 8-RJ30 (WH)
(4) 7-RJ30 (YE)
(5) 31S-GE44 (BK/RD)
(6) 15S-LD6 (GN/YE)
(7) 91S-BB6 (BK/YE)
(8) 9-RJ30 (BN)
(9) 8-MD11A (WH/VT)
8-MD18 (WH)
(10) 10-MD11A (GY/WH)
10-MD18 (GY)
(11)
(12)
(13) 9-GA7 (BN/RD)
(14) 8-GA7 (WH/RD)
(15)
(16)
(17)
(18) 1-GN17 (WH/RD)
(19) 4-EC10L (GY)
4-EC10U (GY)
(20) 5-EC10L (BU)
5-EC10U (BU)
(21)
(22)
(23)
(24)
(25) 91S-PG6B (BK/YE)
(26)
(27)
(28)
(29)

C113

14014


F29004

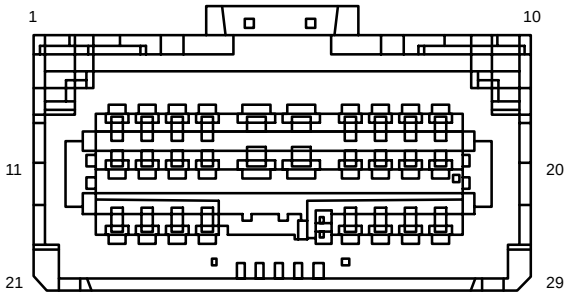

(1) 9-CF34B (BN/BU) 9-CF34A (BN/BU)	(6) 9-CF67 (BN/RD)	(14) 29-AD27 (OG/BK)	(22) 8-GN9 (WH/GN)
(2) 8-CF34 (WH/BU) 8-CF34A (WH/BU)	(7) 7-CF67 (YE/RD)	(15)	(23)
(3) 9-CF40A (BN/GN) 9-CF40 (BN/GN)	(8) 5-EC12 (BU/RD)	(16)	(24)
(4) 8-CF40A (WH/GN) 8-CF40A (WH/GN)	(9) 4-EC12 (GY/RD)	(17)	(25)
(5) 10-RJ30 (GY)	(10)	(18)	(26) 8-GN6 (WH)
	(11)	(19) 9-GN6 (BN)	(27) 91S-RH5 (BK/BU)
	(12)	(20)	(28)
	(13) 91S-BB6B (BK/YE)	(21)	(29)

14K733

F29006

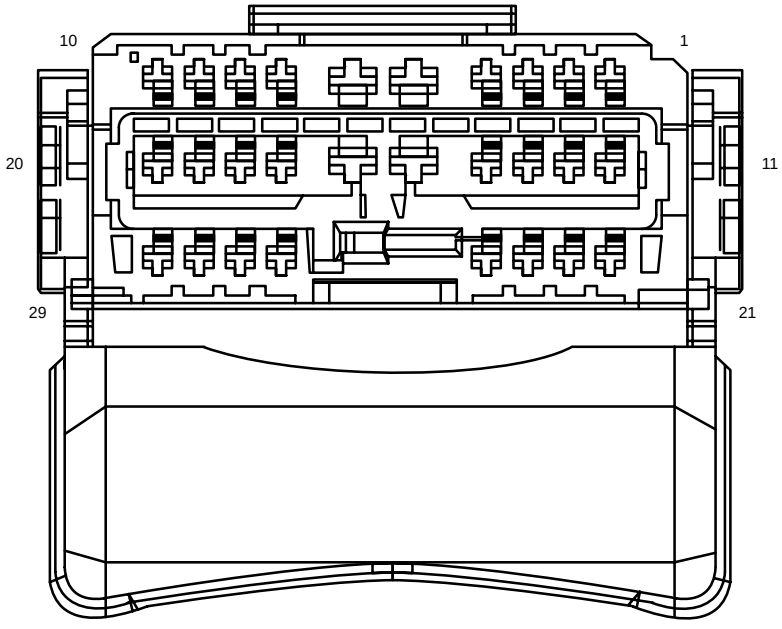


(1) 9-CF34 (BN/BU) 9-CF34A (BN/BU)	(6) 9-CF1A (BN/RD)	(14) 29-AD27 (OG/BK)	(22) 8-GN9 (WH/GN)
(2) 8-CF34 (WH/BU) 8-CF34A (WH/BU)	(7) 7-CF1A (YE/RD)	(15)	(23)
(3) 9-CF40 (BN/GN) 9-CF40A (BN/GN)	(8) 5-EC12 (BU/RD)	(16)	(24)
(4) 8-CF40 (WH/GN) 8-CF40A(WH/GN)	(9) 4-EC12 (GY/RD)	(17)	(25)
(5) 10-RJ30 (GY)	(10)	(18)	(26) 8-GN6 (WH)
	(11)	(19) 9-GN6 (BN)	(27) 91S-RH5 (BK/BU)
	(12)	(20)	(28)
	(13) 91S-BB6B (BK/YE)	(21)	(29)

C116

12A690


F16020

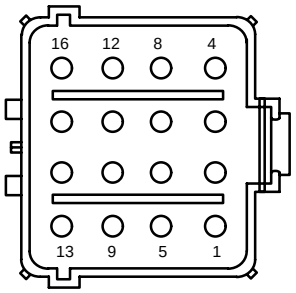

(1) 15S-TA37 (GN/YE)
(2) 15S-TA38 (GN/BU)
(3) 15S-TA40 (GN/BK)
(4) 15S-TA39 (GN/RD)
(5)
(6) 15-TA55 (GN/BK)
(7) 91S-LG45 (BK/GN)
(8) 15S-TA17 (GN/OG)

14K039

F16020.01

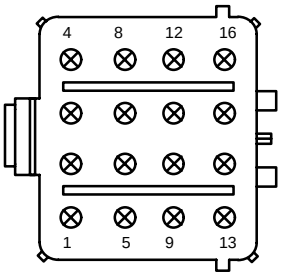


(9) 9-TA36 (BN/GN)
(10) 8-TA36 (WH/GN)
(11) 91S-TA17 (BK/RD)
(12) 15S-TA24 (GN/BU)
(13)
(14) 15S-TA65 (GN/WH)
(15) 15S-TA64 (GN/OG)
(16) 15S-TA63 (GN/BK)

C117

12A690


F16034

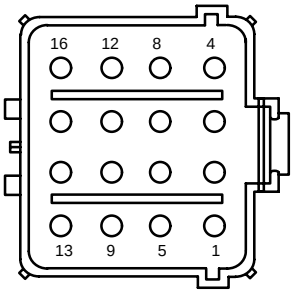

(1) 4-EC7E (GY/RD)
(2) 9-EC7E (BU/RD)
(3)
(4) 10-PF36 (GY/OG)
10-PF36A (GY/OG)
(5) 8-PF36 (WH/GN)
8-PF36A (WH/GN)
(6) 9-RJ29 (BN/BU)

14K039

F16036

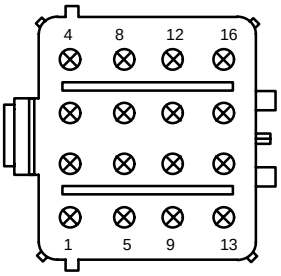


(7) 8-RJ29 (WH/BU)
(8) 91-TA2 (BK/BU)
(9) 91-TA55 (BK/GN)
(10) 8-TA27 (WH/VT)
(11) 9-TA27 (BN/WH)
(12) 30-TA55 (RD)
(13) 15S-TA23 (GN/YE)

C118

14014


F29004

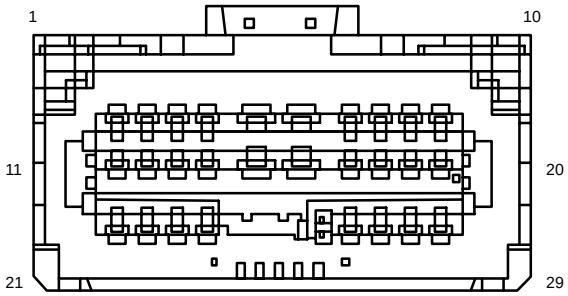

(1) 8-MD10 (WH/BK)
8-MD10B (WH/BK)
(2) 10-MD10 (GY/BK)
10-MD10B (GY/BK)
(3) 91S-GN12 (BK/OG)
(4)
(5)
(6)
(7) 15S-GN23 (GN/OG)
(8)
(9) 8-MD11 (WH/VT)
8-MD18A (WH)
(10) 10-MD11 (GY/WH)
10-MD18A (GY)
(11) 2-MD49 (GY/OG)
(12) 1-MD49 (WH/GN)
(13) 3-MD49 (BK)
(14)
(15)
(16)
(17)
(18)
(19)
(20)
(21) 2-MD50 (GY/BK)
(22) 1-MD50 (WH/BK)
(23)
(24)
(25)
(26)
(27)
(28)
(29)

14401

F29006

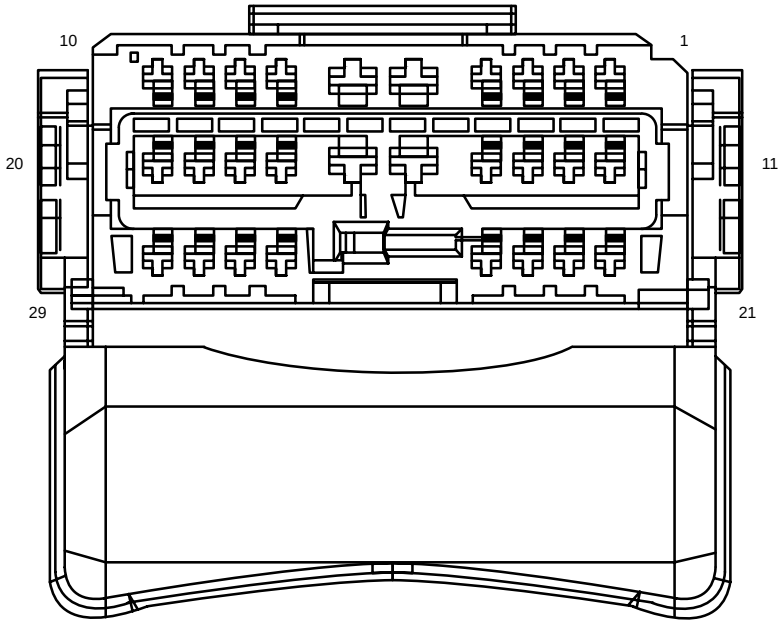


(1) 8-MD10 (WH/BK)
8-MD10B (WH/BK)
(2) 10-MD10 (GY/BK)
10-MD10B (GY/BK)
(3) 91S-GN12 (BK/OG)
(4)
(5)
(6)
(7) 15S-GN23 (GN/OG)
(8)
(9) 8-MD11 (WH/VT)
8-MD18A (WH)
(10) 10-MD11 (GY/WH)
10-MD18A (GY)
(11) 2-MD49 (GY/OG)
(12) 1-MD49 (WH/GN)
(13) 9-MO27 (BN/WH)
(14)
(15)
(16)
(17)
(18)
(19)
(20)
(21) 2-MD50 (GY/BK)
(22) 1-MD50 (WH/BK)
(23)
(24)
(25)
(26)
(27)
(28)
(29)

C120 (BK)


12A690

F01009

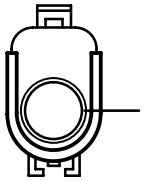

14A280

F01010




(1) 50-BB12 (GY)
50S-BB12A (GY)

C121

14K138


before 11/2004

F08210

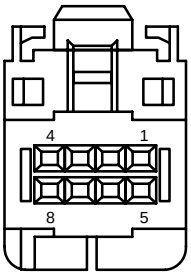

as of 11/2004

F08280

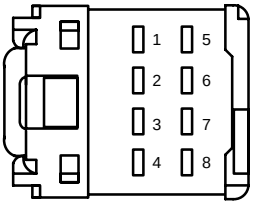

(1) 7-LH31 (YE/RD)
(2) 91S-AJ55 (BK/RD)
(3) 91S-AJ54B (BK/GN)
(4) 91-AJ18 (BK/WH)
(5)
(6)
(7)
(8)


N297
Window control
switch, passenger
side front

C122

14240


before 11/2004

F08210

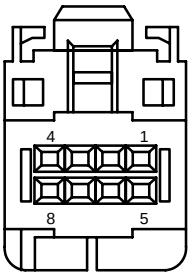

as of 11/2004

F08280

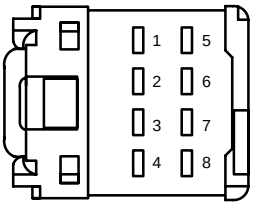


(1) 7-LH36 (YE/BU)
(2) 91S-AJ64 (BK/OG)
(3) 91S-AJ63 (BK/BU)
(4) 91-AJ32 (BK/OG)
(5)
(6)
(7)
(8)

N298
Window control
switch, LH rear

C148

14A584

F10146

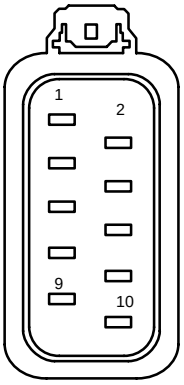


A172
Door lock unit,
driver side front

(1) 31-AA58A (BK)
91-AA58A (BK/YE)
(2) 31S-AA61 (BK/BU)
91S-AA61A (BK/BU)
(3) 31S-AA62 (BK/WH)
91S-AA62A (BK/WH)
(4) 31S-GL9A (BK/YE)
(5) 32-AA59 (WH/BK)
32-AA59A (WH/BK)
33-AA59B (YE/BK)
33-AA59C (YE/BK)
(6) 33-AA60 (YE)
33-AA60A (YE)
(7) 32-AA59B (WH/BK)
32-AA59C (WH/BK)
33-AA59 (YE/BK)
33-AA59A (YE/BK)
(8) 31-AA58C (BK)
91-AA58B (BK/YE)
(9) 31S-AA64 (BK/GN)
91S-AA64A (BK/GN)
(10) 31S-AA63 (BK/OG)
91S-AA63A (BK/OG)

C149

14K138

F10146

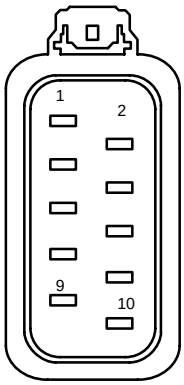

(1) 31-AA58C (BK)
91-AA58A (BK/YE)

(2) 31S-AA61B (BK/BU)
91S-AA61 (BK/BU)

(3) 31S-AA62B (BK/WH)
91S-AA62 (BK/WH)

(4) 31S-GL16A (BK/BU)

(5) 32-AA59A (WH/BK)
32-AA59C (WH/BK)
33-AA59 (YE/BK)
32-AA59B (YE/BK)

(6) 33-AA60 (YE)
33-AA60B (YE)

(7) 32-AA59 (WH/BK)
32-AA59B (WH/BK)
33-AA59A (YE/BK)
33-AA59C (YE/BK)

(8) 31-AA58B (BK)
91-AA58 (BK/YE)

(9) 31S-AA64B (BK/GN)
91S-AA64 (BK/GN)


(10) 31S-AA63B (BK/OG)
91S-AA63 (BK/OG)

A173
Door lock unit, passenger side front

C151

14240

F10146

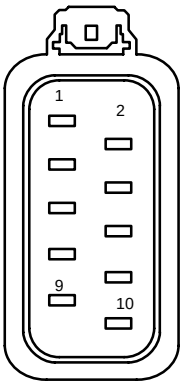

(1)

(2)

(3)

(4) 31S-GL16 (BK/BU)

(5) 33-AA59A (YE/BK)
33-AA59C (BK)

(6) 33-AA60A (YE)
33-AA60C (BK)

(7) 32-AA59A (WH/BK)
32-AA59C (BK)

(8) 31-AJ83C (BK)
91-AA58C (BK)

(9)


(10)

A276
Door lock unit, RH rear

C150

14240

F10146

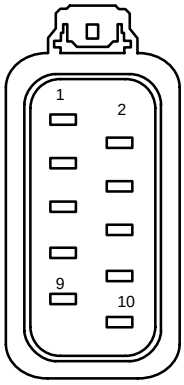

(1) 31-AJ83B (BK)
91-AA58B (BK)

(2)

(3)

(4) 31S-GL12 (BK/OG)

(5) 32-AA59 (WH/BK)
32-AA59B (BK)

(6) 33-AA60 (BK)
33-AA60B (BK)

(7) 33-AA59 (YE/BK)
33-AA59B (BK)

(8)

(9)


(10)

A275
Door lock unit, LH rear

C152 (GY)

14014

F02074

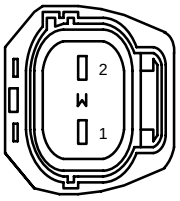

(1) 33-AA43 (YE/VT)
33-AA43A (YE/VT)


(2) 32-AA43A (WH/VT)

M90
Fuel filler flap lock motor

C161

67020

F05142



B433
Mass Air Flow/Intake Air Temperature (MAF/IAT) sensor

(A) 15-RN6 (GN/BU)
(B) 91S-RJ22 (BK/OG)
(C) 8-RJ21 (WH/RD)
(D) 8-RJ22 (WH/BU)
(E) 9-RJ22 (BN/BU)

C162

67020


(A) 15-RJ39 (GN/BU)
(B) 8-RJ39 (WH/RD)
(C) 91-RJ39 (BK/BU)

B41
Camshaft position sensor

C163

67020

F02624

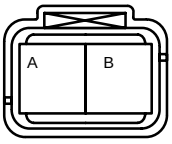


Y13
Idle speed control valve

(A) 8-RL9 (WH)
(B) 9-RL9 (BN)

C164

67020

F03328

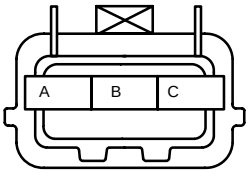


T7
Ignition coil, cylinder 2

(A) 15-RR6 (RD/WH)
(B) 91-RR6 (BK/WH)
(C) 8-RR6A (WH/RD)

C169

67020

F02624

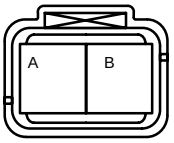


B10
Engine Coolant Temperature (ECT) sensor

(A) 8-RJ5 (WH)
(B) 9-RJ5 (BN)

C170

67020

F01042




N96
Power steering pressure switch

(A) 7-CE6 (YE)

C171

67020

F02618




(A) 4-EB6 (GY)
(B) 5-EB6 (BU)

O5
Generator

C173

67020

F01044




(A) 8-RJ18 (WH/BK)

B45
Knock sensor

C174

67020

F06294

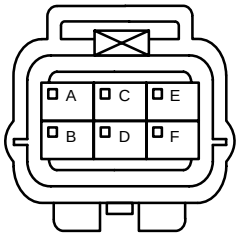


(A) 91S-PA53 (BK/RD)
(B) 91S-PA52 (BK/GN)
(C) 15S-PA53 (GN/BU)
(D) 15-PA51 (GN)
(E) 91S-PA54 (BK/WH)
(F) 91S-PA51 (BK/OG)

M251
EGR stepper motor

C177

67020

F04286

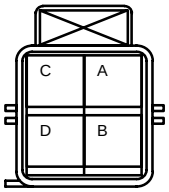


(A) 8-RJ25 (WH/BU)
(B) 9-RJ25 (BN/BU)
(C) 15-RJ25 (GN/RD)
(D) 91S-RJ25 (BK/OG)

B89
Pre–catalyst heated oxygen sensor (HO2S)

C178

67020

F04288

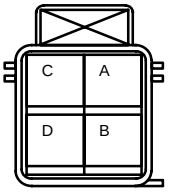


(A) 8-RJ26 (WH/GN)
(B) 9-RJ26 (BN/GN)
(C) 15-RJ26 (GN/BK)
(D) 91S-RJ26 (BK/GN)

B192
Catalyst monitor sensor

C175

67020

F02616

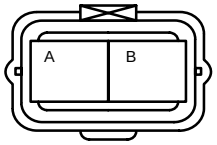


(A) 15-RN5 (GN/BU)
(B) 31S-RL2 (BK/OG)

Y1
Evaporative emission canister purge valve

C179

67070

F01014




O5
Generator

C176

67070

F01042




(A) 31S-GC20 (BK/OG)

N17
Oil pressure switch

C182

67070

F06296

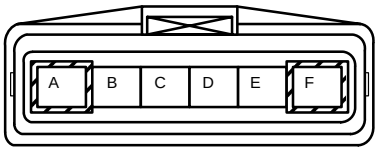


(A) 31S-BB14 (BK/BU)
(B) 15S-TA18A (GN/OG)
(C) 91S-TA18 (BK/RD)
(D) 15S-LG9 (GN/BK)
(E) 15-LG28 (GN/WH)
(F) 31S-BB16A (BK/RD)

N397
Start inhibit/reversing lamp switch

C185

67070

F09036

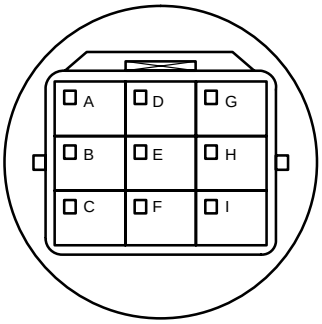


(A) 15S-TA65A (GN/WH)
(B) 15S-TA63A (GN/BK)
(C) 15S-TA23A (GN/YE)
(D) 91S-TA17A (BK/RD)
(E) 8-TA36A (WH/GN)
(F) 15S-TA64A (GN/OG)
(G) 15S-TA24A (GN/BU)
(H) 15S-TA11 (GN/WH)
(I) 15S-TA17A (GN/OG)

A40
Transmission hardware unit

C183

67070

F02622

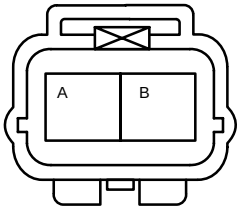


(A) 9-TA27A (BN/WH)
(B) 8-TA27A (WH/VT)

B44
Turbine Shaft Speed (TSS) sensor

C189

67070

F01042




(1) 50-BB12 (GY)

M8
Starter motor

C184

67070

F03334

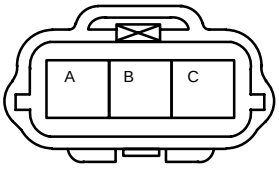


(A) 15-TA51A (GN)
(B) 8-TA51 (WH/RD)
(C) 91S-TA51 (BK/YE)

B110
Output Shaft Speed (OSS) sensor

C200 (BK)

14401

F16016

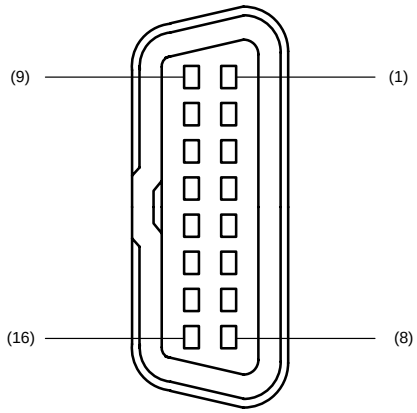


(1)
(2)
(3) 4-EC10B (GY)
(4) 31-RA1 (BK)
(5) 91-RA1 (BK/OG)
(6) 4-EC7L (GY/RD)
(7)
(8)
(9)
(10)
(11) 5-EC10B (BU)
(12)
(13)
(14) 5-EC7L (BU/RD)
(15)
(16) 29-RA1 (OG)

D20
Data Link Connector (DLC)

C223

14A584

F07056

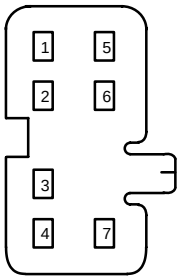

(1) 32-AD27 (WH/GN) + 32-AD27A (WH/GN)
(2) 29-AD27 (OG/BK)
(3) 91-AD27 (BK/RD) + 91-AD27A (BK/RD)
(4)
(5)
(6) 91-AD27A (BK/RD)
(7) 33-AD27A (YE/GN) + 33-AD27 (YE/GN)


N279
Power mirror fold switch

C281

14K733

F04270

A118
Cooling fan module

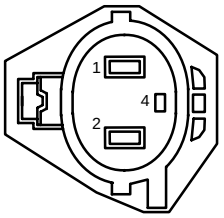


(1) 30-PA1 (RD)
(2) 31-PA1 (BK)
(3)
(4) 49-PA6 (BU)

C300


14K106

F04164

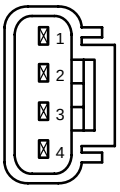

12A690

F04162

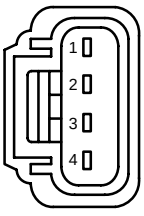


(1) 15S-RD15D (GN/OG)
(2) 15S-RD15C (GN/OG)
(3) 15S-RD15B (GN/OG)
(4) 15S-RD15A (GN/OG)

C302

14K733

F02584




E43
Fog lamp, LH front

(1) 15S-LD11 (GN/WH)
(2) 31-LD11 (BK)

C304

14K733

F02584




E42
Fog lamp, RH front

(1) 15S-LD17 (GN/WH)
(2) 31-LD17 (BK)

C305

14014

F02050

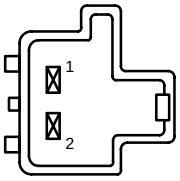


(1) 30-LF29 (RD)
(2)

C320 (BK)

14401

F16052

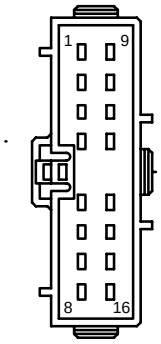


(1)
(2) 15S-LD13A (GN/OG)
(3) 15S-LD7A (GN/BU)
(4)
(5)
(6) 15S-LE21 (GN/BK)
(7) 15-LD16 (GN/RD)
(8) 15-LE29 (GN/BK)
(9) 29S-DA2 (OG/BU)
(10) 31-LE29 (BK)
(11) 29-LE29 (OG/BK)
(12) 30S-LE29 (RD/GN)
(13) 29S-LF1 (OG/YE)
(14)
(15)
(16) 29S-LF5 (OG/BU)

N120
Headlamp switch

C331

F02204

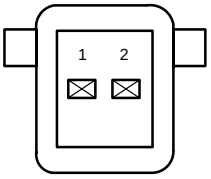


A242
Side air bag module, driver

(1)
(2)

C332

F02138

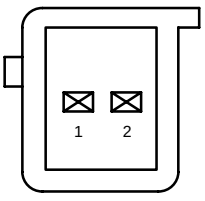


A117
Safety belt tensioner, driver seat

(1)
(2)

C335

F02142

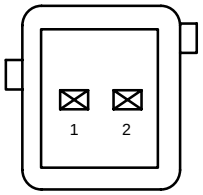


N124
Safety belt buckle switch

(1)
(2)

C341

F02204

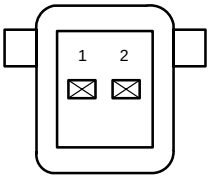


A245
Side air bag module, passenger

(1)
(2)

C336


F02140

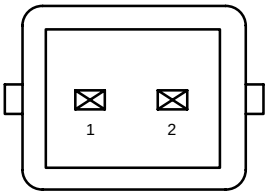

(1) 29-AH35 (OG/YE)
(2) 31-DA14 (BK)

C342

F02138

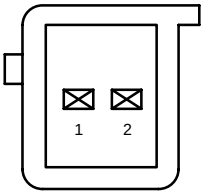


A116
Safety belt tensioner, passenger seat

(1)
(2)

C340

18K926

F04160

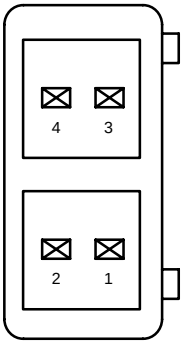


(1) 1-MD49 (WH/GN)
(2) 2-MD49 (GY/OG)
(3) 1-MD50 (WH/BK)
(4) 2-MD50 (GY/BK)

C346

18K926

F02140

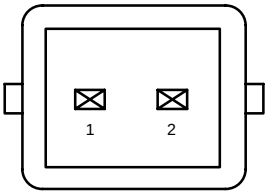


(1) 91-MD8 (BK/OG)
(2) 29-MD8 (OG)

C378

14401

F08278

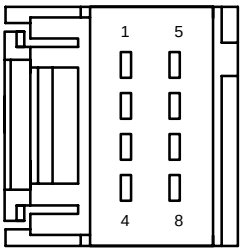


(1) 29-FA13 (OG)
(2) 8-FA9 (WH/GN)
(3) 29S-LE10A (OG/GN)
(4) 91-FA13 (BK/OG)
(5) 15S-FA78 (GN/WH)
(6) 33-FA76 (YE/BU)
(7) 32-FA76 (WH/BU)
(8) 15-FA13 (GN/RD)

A128
Heater control module

C381

14401

F06278

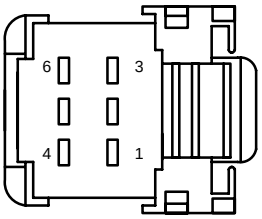


(1) 15-HB22 (GN/BK)
(2) 91-HB22 (BK/GN)
(3) 29S-HB22 (OG/BK)
(4)
(5) 91S-HB22 (BK/GN)
(6) 31S-HB22 (BK/GN)

N10
Heated rear window switch

C380

14401

F05138

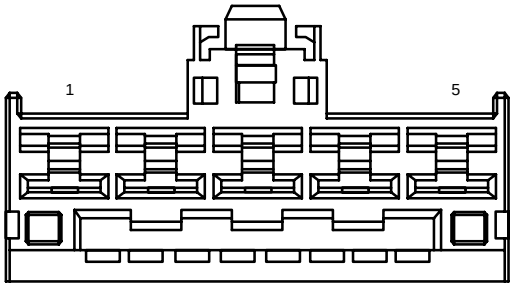


(1) 31S-FA30 (BK/WH)
(2) 31S-FA31 (BK/YE)
(3) 31S-FA32 (BK/BU)
(4) 31S-FA33 (BK/OG)
(5) 31-FA25 (BK)

A128
Heater control module

C383 (GY)

14401

F10042

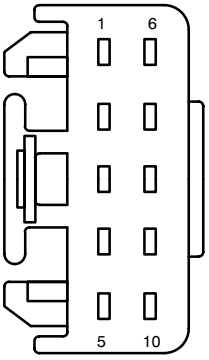


(1) 15S-LG23 (GN/WH)
(2) 29S-PF35 (OG/BK)
(3) 15-PF35 (GN/BK)
(4) 31-PF35 (BK)
(5) 8-PF36 (WH/GN)
(6) 10-PF36 (GY/OG)
(7) 31S-TA34 (BK/YE)
(8)
(9)
(10)

N93
Gearshift lever unit

C384

9H589

F02578

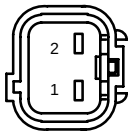


Y218
Inlet air control valve solenoid

(1) 15-RL19 (GN/YE)
(2) 91S-RL19 (BK/YE)

C390

14335

F03294

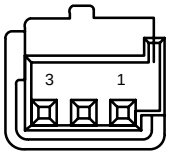


A190
Remote keyless entry (RKE) module

(1) 8-AA57 (WH)
(2) 31-AA57 (BK)
(3) 29-AA57 (OG/YE)

C391

14401


F04272

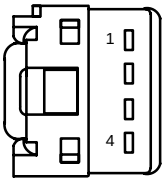

A102
Passive anti–theft system transceiver module

(1) 15-GL37 (GN/BK)
(2) 91-GL1 (BK/YE)
(3) 10-GL37 (GY/OG)
(4) 8-GL37 (WH/GN)

F94002

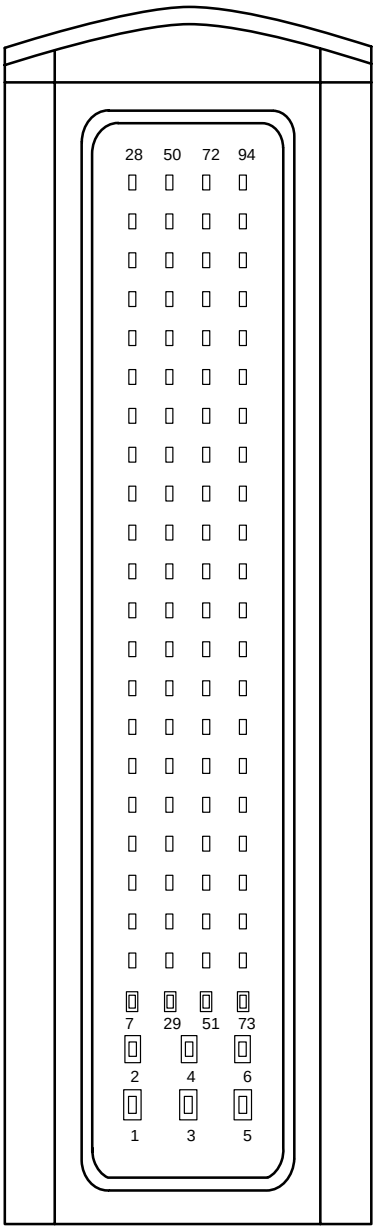

C414

14K039

(1)	15-TA55A (GN/BK)	(25)		(49)		(73)	
(2)	15-TA55B (GN/BK)	(26)		(50)		(74)	15S-TA37 (GN/YE)
(3)	91-TA55A (BK/GN)	(27)		(51)	15S-TA63 (GN/BK)	(75)	
(4)	91-TA55B (BK/GN)	(28)		(52)	15S-TA39 (GN/RD)	(76)	
(5)		(29)	15S-TA65 (GN/WH)	(53)	15S-TA38 (GN/BU)	(77)	
(6)	15S-TA17 (GN/OG)	(30)		(54)	15S-TA40 (GN/BK)	(78)	
(7)	15S-TA64 (GN/OG)	(31)		(55)		(79)	
(8)	5-EC7E (BU/RD)	(32)		(56)		(80)	
(9)	4-EC7E (GY/RD)	(33)	91-TA55 (BK/GN)	(57)		(81)	10-FF36A (GY/OG)
(10)		(34)		(58)		(82)	
(11)	30-TA55 (RD)	(35)		(59)	8-PF36A (WH/GN)	(83)	91-TA55C (BK/GN)
(12)	15S-TA23 (GN/YE)	(36)		(60)		(84)	
(13)	15S-TA24 (GN/BU)	(37)		(61)		(85)	
(14)	9-TA36 (BN/GN)	(38)	8-TA36 (WH/GN)	(62)	8-TA27 (WH/VT)	(86)	9-RJ29 (BN/BU)
(15)		(39)		(63)		(87)	
(16)		(40)		(64)	9-TA27 (BN/WH)	(88)	
(17)		(41)		(65)	8-RJ29 (WH/BU)	(89)	
(18)		(42)		(66)		(90)	
(19)		(43)		(67)	91S-LG45 (BK/GN)	(91)	
(20)		(44)		(68)		(92)	91S-TA17 (BK/RD)
(21)		(45)		(69)		(93)	
(22)		(46)		(70)		(94)	
(23)		(47)		(71)		(95)	
(24)		(48)		(72)			


A318
Transmission control module (TCM)

C417 (BN)

12A690

(A1)		(A3)	
(B1)		(B3)	
(C1)	8-RJ22 (WH/BU)	(C3)	9-RL7 (BN/GN)
(D1)	7-RL22 (YE/BK)	(D3)	
(E1)	91S-RH15 (BK/YE)	(E3)	
(F1)		(F3)	
(G1)	91S-RL42C (BK/BU)	(G3)	9-RJ17 (BN/WH)
(H1)		(H3)	91S-RH9 (BK/BU)
(J1)	91S-RL25C (BK/BU)	(J3)	
(K1)		(K3)	
(L1)		(L3)	
(M1)	91S-RL50C (BK/BU)	(M3)	91S-RJ37 (BK/GN)
(A2)	8-RJ17A (WH/VT)	(A4)	
(B2)		(B4)	
(C2)		(C4)	8-RL22 (WH/BK)
(D2)	8-RL7 (WH/GN)	(D4)	8-EE14 (WH/BU)
(E2)	7-RL7 (YE/GN)	(E4)	9-RL22 (BN/YE)
(F2)		(F4)	
(G2)	9-RJ22 (BN/BU)	(G4)	30-RE8 (RD)
(H2)		(H4)	4-EB6 (GY)
(J2)		(J4)	
(K2)	91-RE8C (BK/YE)	(K4)	
(L2)	91S-RL7 (BK/GN)	(L4)	91S-RL42 (BK/BU)
(M2)	15S-RL7 (GN/BK)	(M4)	91S-RL50 (BK/BU)

F48004

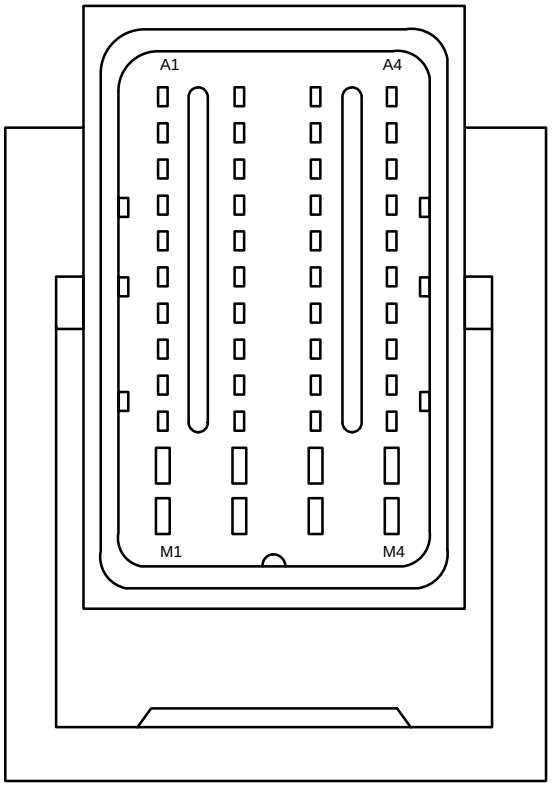


A147
Powertrain control
module (PCM)

C418 (BK)

12A690


before 11/2004

F32026

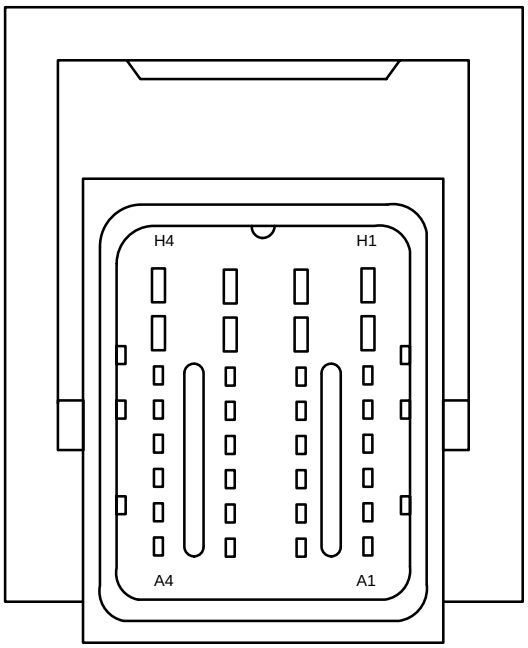

as of 11/2004

F32034

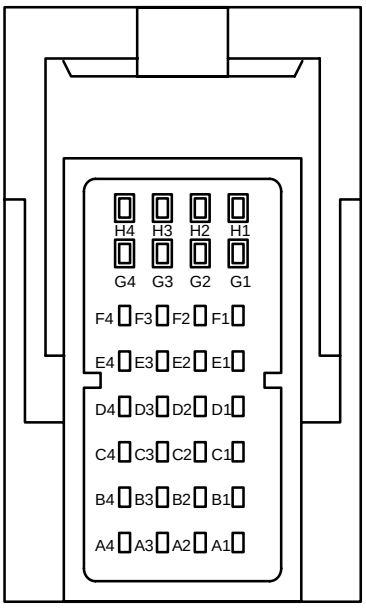

(A1) 5-EB6 (BU)
(B1)
(C1)
(D1) 31S-BB16A (BK/RD)
(E1)
(F1)
(G1)
(H1)
(A2)
(B2) 49-PA6A (BU)
(C2)
(D2) 91S-PA13 (BK/BU)
(E2)
(F2)
(G2)
(H2) 91S-RE8 (BK/YE)

(A3) 5–EC7 (BU/RD)
5–EC7C (BU/RD)
(B3)
(C3) 15-RE17 (GN/BU)
(D3)
(E3)
(F3) 10-RJ30A (GY)
(G3)
(H3)
(A4) 4-EC7 (GY/RD)
4-EC7C (GY/RD)
(B4)
(C4)
(D4) 31S-FA11 (BK/YE)
(E4) 15S-LG23A (GN/WH)
(F4)
(G4) 91-RE8E (BK/YE)
(H4) 91-RE8D (BK/YE)


A147
Powertrain control module (PCM)

C419 (GY)

12A690


before 11/2004

F48004

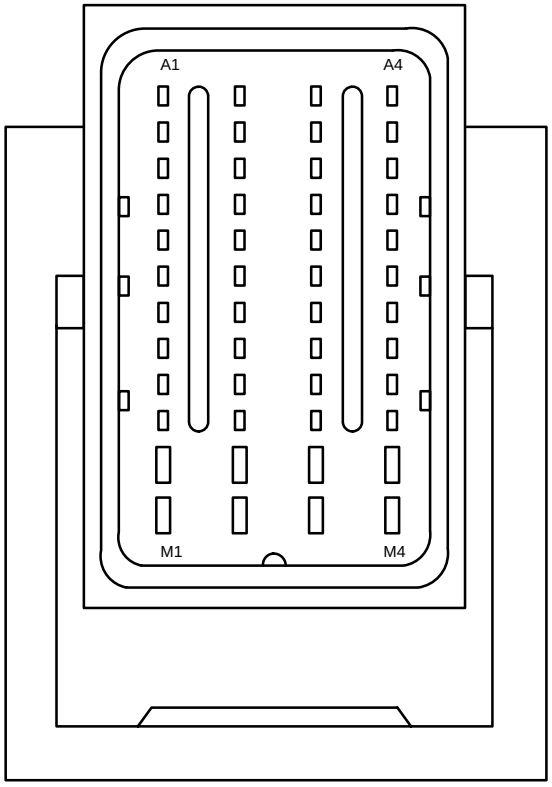

as of 11/2004

F48006

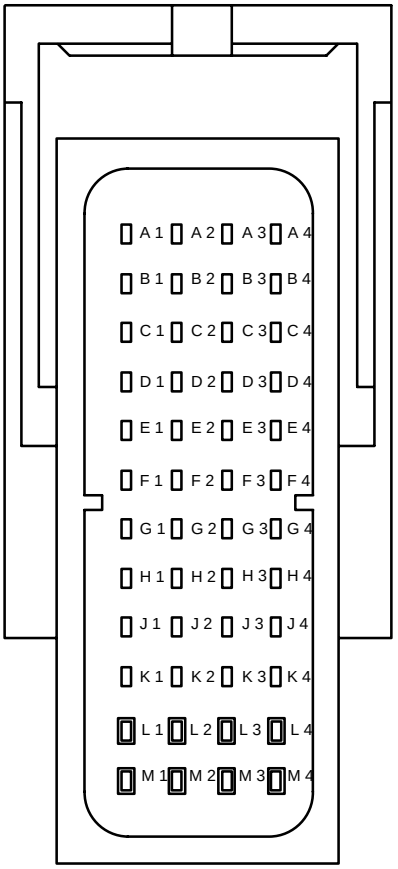


A147
Powertrain control module (PCM)

(A1)		(A3)	8-RJ12 (WH/BU)
(B1)	8-RJ37 (WH/GN)	(B3)	9-RJ11 (BN/GN)
(C1)	8-RJ3 (WH/VT)	(C3)	
(D1)	9-RJ37 (BN/GN)	(D3)	
(E1)		(E3)	7-RJ3 (YE/VT)
(F1)	9-RJ4 (BN/RD)	(F3)	31S-GC21 (BK/GN)
(G1)	9-RJ5B (BN)	(G3)	
(H1)		(H3)	49-RJ22 (BU/WH)
(J1)	9-RJ12 (BN/BU)	(J3)	15-RJ14C (GN/YE)
(K1)		(K3)	15-RJ14B (GN/YE)
(L1)	91S-RL11 (BK/YE)	(L3)	91S-RL10 (BK/WH)
(M1)	15-RL13 (GN/RD)	(M3)	15-RL10 (GN/WH)
(A2)	8-RJ5 (WH)	(A4)	7-RJ11 (YE/GN)
(B2)	8-RJ11 (WH/GN)	(B4)	8-RJ4 (WH/RD)
(C2)		(C4)	
(D2)		(D4)	9-RJ3 (BN/WH)
(E2)	7-RJ37 (YE/GN)	(E4)	
(F2)		(F4)	7-RJ4 (YE/RD)
(G2)		(G4)	
(H2)	8-RJ32 (WH/BU)	(H4)	91-RE8B (BK/YE)
(J2)		(J4)	91-RE8A (BK/YE)
(K2)	15-RJ14A (GN/YE)	(K4)	91-RE8F (BK/YE)
(L2)	91S-RL12 (BK/BU)	(L4)	91S-RL13 (BK/OG)
(M2)	15-RL11 (GN/YE)	(M4)	15-RL12 (GN/BU)

C420

14K733

F02132

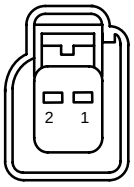


B177
Crash sensor

(1) 8-JA49 (WH)
(2) 9-JA49 (BN)

C425

14401

F02484

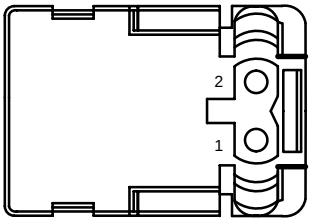

(1) 15S-JA31 (GN/WH)
(2) 91S-JA31 (BK/WH)


A43
Passenger air bag
unit

C426

14401

all others


F24020

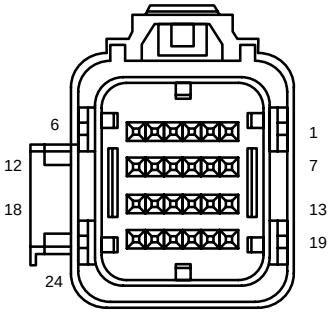

(1)
(2)
(3) 15S-JA8 (GN/RD)
(4) 91S-JA8 (BK/OG)
(5)
(6)
(7)
(8)
(9) 15S-JA31 (GN/WH)
(10) 91S-JA31 (BK/WH)
(11)
(12)

China as of 08/2005

F24017

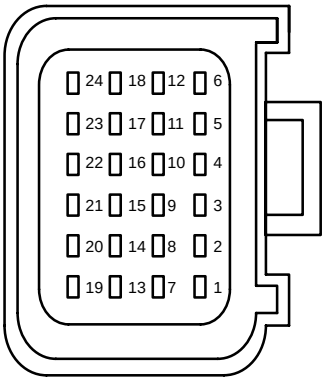


(13) 9-JA49 (BN)
(14) 8-JA49 (WH)
(15)
(16)
(17) 91S-JA56 (BK/RD)
(18) 31S-JA31 (BK/WH)
(19) 4-EC10N (GY)
(20) 5-EC10N (BU)
(21) 31S-JA47 (BK/OG)
(22)
(23)
(24) 15-JA10 (GN/OG)

A208
Restraints Control
Module (RCM)

C427

14014

F02574

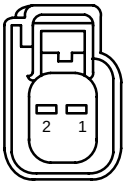


B238
Side air bag sensor, driver

(1) 8-JA39 (WH)
(2) 9-JA39 (BN)

C428

14014

F02574

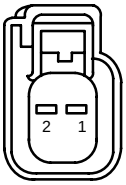


B239
Side air bag sensor, passenger

(1) 8-JA40 (WH/VT)
(2) 9-JA40 (BN/WH)

C429

14014

F40012

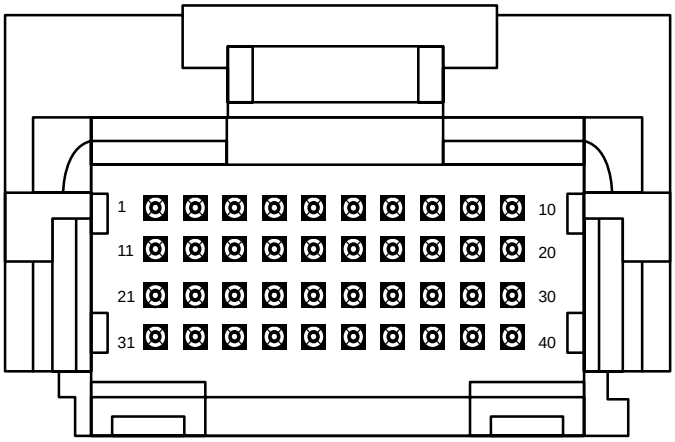


(1)	(11)	(21)	(31)
(2)	(12)	(22)	(32)
(3)	(13)	(23)	(33)
(4)	(14)	(24)	(34) 9-JA54 (BN)
(5)	(15)	(25) 8-JA54 (WH)	(35)
(6)	(16)	(26) 8-JA39 (WH)	(36)
(7) 15S-JA38 (GN/OG)	(17) 15S-JA33 (GN/BU)	(27) 9-JA39 (BN)	(37)
(8) 91S-JA38 (BK/RD)	(18) 91S-JA33 (BK/BU)	(28) 9-JA40 (BN/WH)	(38)
(9) 91S-JA34 (BK/RD)	(19) 91S-JA37 (BK/GN)	(29) 8-JA40 (WH/VT)	(39)
(10) 15S-JA34 (GN/OG)	(20) 15S-JA37 (GN/BK)	(30)	(40)

A208
Restraints Control Module (RCM)

C430
15K868

F02572

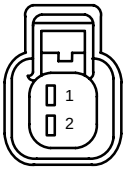

E86
Rear fog lamp, RH side

E109
Reversing lamp, right

(1) 15S-LG16A (GN/OG)
15S-LG16 (GN/OG)

(2) 31-LG16 (BK)


C431
14014

(1) 15-MD7 (GN/BU)

A378
Micropol antenna

C434
15K868

F02572

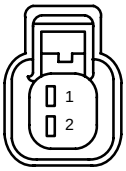

E89
Rear fog lamp, LH side


E105
Reversing lamp, left

(1) 15S-LD6 (GN/YE)
15S-LD6A (GN/YE)

(2) 31-LD6 (BK)

C437
14401

F03298

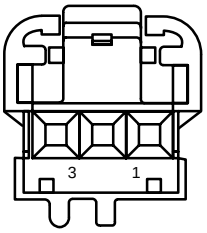

(1) 8-MD26 (WH/BK)

(2) 9-MD26 (BN/YE)


(3)

N214
Radio remote control switch

C438

12A690

F09018

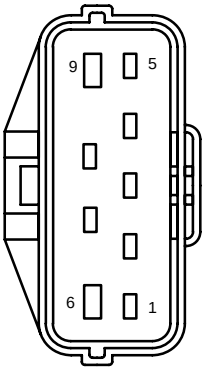


B120
Transmission
range sensor

(1) 15-TA18 (GN/OG)
(2) 15S-TA40 (GN/BK)
(3)
(4) 15S-TA38 (GN/BU)
(5) 15S-TA37 (GN/YE)
(6) 50-BB14A (GY/RD)
(7)
(8) 15S-TA39 (GN/RD)
(9) 50S-BB12A (GY)

C439

12A690

F09020

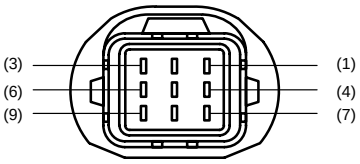


(1) 15-TA65 (GN/WH)
(2) 15S-TA17 (GN/OG)
(3) 15S-TA63 (GN/BK)
(4) 9-TA36 (BN/GN)
(5) 8-TA36 (WH/GN)
(6) 15S-TA23 (GN/YE)
(7) 91S-TA17 (BK/RD)
(8) 15S-TA24 (GN/BU)
(9) 15S-TA64 (GN/OG)

A40
Transmission
hardware unit

C440

14B723

F12110

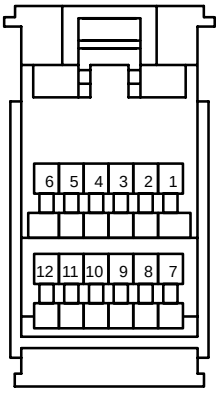


(1)
(2)
(3) 91-MD8 (BK/OG)
(4)
(5) 1-MD49 (WH/GN)
(6) 1-MD50 (WH/BK)
(7)
(8)
(9) 29-MD8 (OG)
(10)
(11) 2-MD49 (GY/OG)
(12) 2-MD50 (GY/BK)

C441 (GY)

14401

F12084

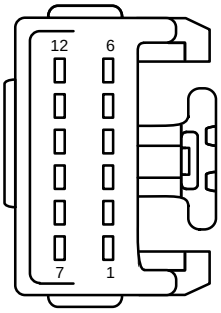


(1) 32-KA34 (WH/BK)
(2) 91S-KA11 (BK/RD)
(3) 91-KA12 (BK/WH)
(4) 33-KA34 (YE/BK)
(5) 91S-KA35 (BK/BU)
(6) 91S-KA10 (BK/GN)
(7) 8-KA45 (WH/RD)
(8) 31-KA36 (BK)
(9) 8-KA46 (WH/BU)
(10) 15-KA19 (GN/OG)
(11) 8-KA47 (WH/GN)
(12) 10-KA8 (GY/RD)

N104
Wiper/washer switch

C443

14401

F16066

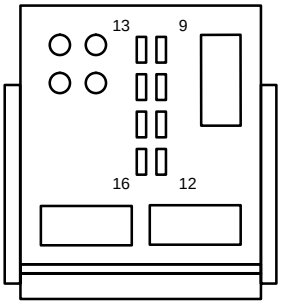


A11
Radio

(1)
(2)
(3)
(4)
(5)
(6)
(7)
(8)
(9) 4-EC10D (GY) + 4-EC10G (GY) 4-EC10C (GY) + 4-EC10D (GY) 4-EC10A (GY) + 4-EC10C (GY) 4-EC10A (GY) + 4-EC10G (GY)
(10) 5-EC10D (BU) + 5-EC10G (BU) 5-EC10C (BU) + 5-EC10D (BU) 5-EC10A (BU) + 5-EC10C (BU) 5-EC10A (BU) + 5-EC10G (BU)
(11) 91-MD5 (BK/BU) 91-MD5A (BK/BU)
(12) 91-MD15 (BK/GN)
(13)
(14) 29S-LK34 (OG/BK)
(15) 29-MD15 (OG/BK)
(16) 75-MD15 (YE/GN)

C442

14401

F08212




(1) 8-MD18 (WH) 8-MD18A (WH)
(2) 8-MD17 (WH/RD) 8-MD10B (WH/BK)
(3) 8-MD10 (WH/BK) 8-MD17A (WH/RD)
(4) 8-MD11 (WH/VT) 8-MD11A (WH/VT)
(5) 10-MD18 (GY) 10-MD18A (GY)
(6) 10-MD17 (GY/RD) 10-MD10B (GY/BK)
(7) 10-MD10 (GY/BK) 10-MD17A (GY/RD)
(8) 10-MD11 (GY/WH) 10-MD11A (GY/WH)

A11
Radio

C444 (GY)

14014

F02053

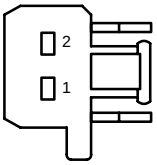


N318
Stop lamp switch

(1) 15S-LG14 (GN/RD) + 15S-LG23 (GN/WH)
(2) 15-LG23 (GN/WH)

C447
14401

F12102

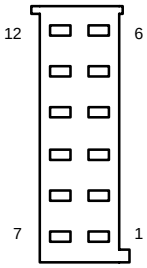


(1)		(7)	
(2)		(8)	9-MD26 (BN/YE)
(3)	1-MD49 (WH/GN)	(9)	2-MD49 (GY/OG)
(4)	1-MD50 (WH/BK)	(10)	2-MD50 (GY/BK)
(5)	1-GN17 (WH/RD)	(11)	
(6)	8-MD26 (WH/BK)	(12)	8-GB8A (WH/BU)

A11
Radio

C448
14401

F12102.1

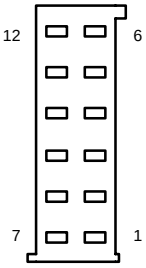

(1)		(7)	
(2)		(8)	
(3)	1-GK18 (WH/BU)	(9)	2-GK18 (GY/VT)
(4)		(10)	
(5)	8-MD27 (WH/VT)	(11)	10-MD27 (GY/WH)
(6)	3-MD27A (BN/WH) 9-MD27 (BN/WH) 3-MD27A (BK)	(12)	

A11
Radio

C449
14401

F01046




A11
Radio

C451
14401


before 11/2004

F04033

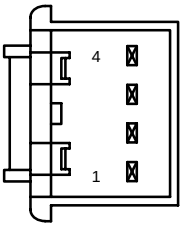

as of 11/2004

F06280

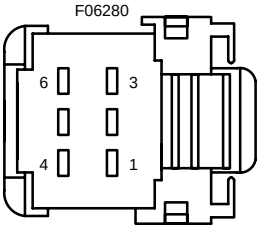


(1)	15S-GN23 (GN/OG)	(3)	29S-GN12 (OG)
(2)	91-GN12 (BK/OG)	(4)	

N359
Parking aid
switch, front

C453

14401

F06280

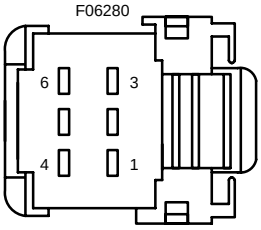


(1)
(2) 91S-JA56 (BK/RD)
(3)
(4)
(5) 15-JA56 (GN/OG)

E224
Passenger air bag deactivation indicator

C454

14401

F04260

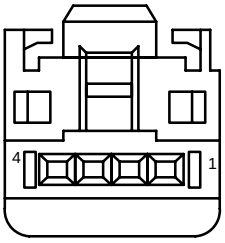


(1)
(2) 91-LG8 (BK/OG)
(3) 29S-LH54 (OG/GN)
(4) 91S-LG8 (BK/OG)
(5)
(6)

N49
Hazard flasher switch

C456 (BK)

14401

F07061

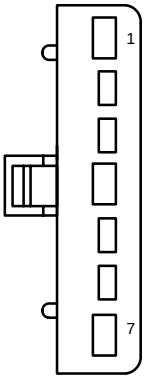


(1) 15-DA1 (GN/YE)
(2) 30S-LE29 (RD/GN)
(3) 31S-TA32 (BK/WH) + 31S-TA34 (BK/YE) 31S-TA34 (BK/YE)
(4) 30-BB9 (RD)
(5)
(6) 75-DA1 (YE)
(7) 50-BB16 (GY/BK)

N278
Ignition switch

C459

14401

F10148

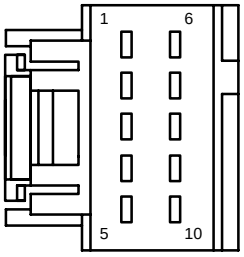


(1) 91S-GG9 (BK/RD)
(2)
(3) 91S-GE56 (BK/YE)
(4)
(5) 91S-GE56A (BK/YE)
(6) 91S-LG1 (BK/YE)
(7) 91S-LG2 (BK/BU)
(8) 91S-LE14 (BK/OG)
(9) 91S-LE25 (BK/BU)
(10) 91-LG27 (BK/GN)

N282
Steering column multifunction switch

C461

14014

F02572

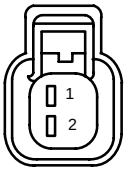


E49
Turn signal lamp, LH rear

(1) 49S-LG12 (BU)
(2) 31-LG12A (BK)

C462

14014

F02572

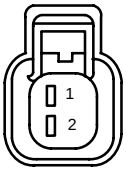


E48
Turn signal lamp, RH rear

(1) 49S-LG19 (BU/RD)
(2) 31-LG19 (BK)

C470

14401

F04278

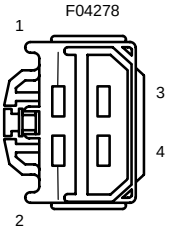


R21
Blower motor resistor

(1) 31S-FA31 (BK/YE)
(2) 31S-FA30 (BK/WH)
(3) 31S-FA32 (BK/BU)
(4) 31S-FA33A (BK/OG)

C472

14014

F03094

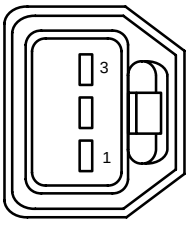


E9
Rear lamp assembly, LH side

(1) 29S-LF11A (OG/WH)
(2) 15S- LG14B (GN/RD)
(3) 31-LF23B (BK)

C473

14014

F03094

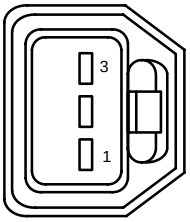


E10
Rear lamp assembly, RH side

(1) 29S-LF20A (OG)
(2) 15S- LG21A (GN/BK)
(3) 31-LF24 (BK)

C476

14014

F07065

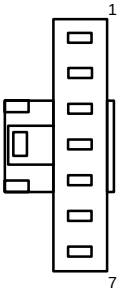


E9
Rear lamp assembly, LH side

(1) 15S-LG14A (GN/RD)
(2) 29S-LF11 (OG/WH)
(3) 31-LF23 (BK)
(4)
(5) 49S-LG12 (BU)
(6) 15S-LG9B (GN/BK) + 15S-LG16A (GN/OG)
(7) 15S-LD6 (GN/YE) + 15S-LD12 (GN/YE)

C477

14014

F07065

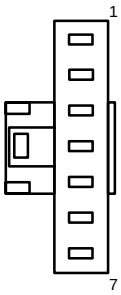


(1) 15S-LD12 (GN/YE)
(2) 15S-LG16A (GN/OG)
(3) 49S-LG19 (BU/RD)
(4)
(5) 31-LF24B (BK)
(6) 29S-LF20 (OG)
(7) 15S-LG21 (GN/BK)

E10
Rear lamp assembly, RH side

C484

14A584

F16008

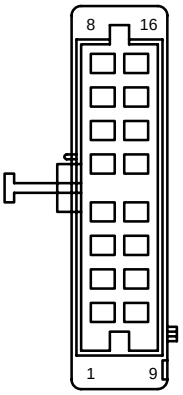


(1) 8-AD6 (WH)
(2) 91S-AJ58 (BK/OG)
(3) 91S-AJ57 (BK/BU)
(4) 91-AJ7A (BK/BU)
(5) 29-AD12A (OG/YE)
(6) 91S-AJ41 (BK/RD)
91S-AJ55A (BK/RD)
(7) 91S-AJ40 (BK/GN)
91S-AJ54A (BK/GN)
(8) 10-AD6 (GY)
(9) 8-AJ19 (WH/RD)
(10) 91S-AJ61 (BK/OG)
(11) 91S-AJ60 (BK/BU)
(12)
(13) 7-LH14 (YE)
(14) 91S-AJ41A (BK/RD)
91S-AJ55 (BK/RD)
(15) 91S-AJ40A (BK/GN)
91S-AJ54 (BK/GN)
(16)

N388
Window control/power mirror adjust switch, driver

C478

14401

F04260

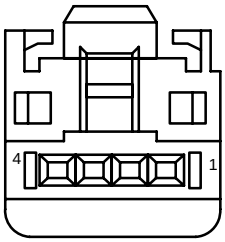


(1) 10-MD27 (GY/WH)
(2)
(3) 3-MD27 (BK)
3-MD27A (BN/WH)
3-MD27A (BK)
(4) 8-MD27 (WH/VT)

C485

14240

F08280

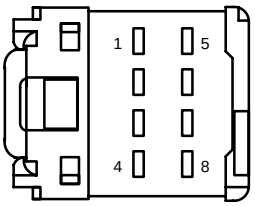


(1) 7-LH36A (YE/BU)
(2) 91S-AJ64A (BK/OG)
(3) 91S-AJ63A (BK/BU)
(4) 91-AJ32A (BK/OG)
(5)
(6)
(7)
(8)

N299
Window control switch, RH rear

C488 (GY)

14A584

F10140

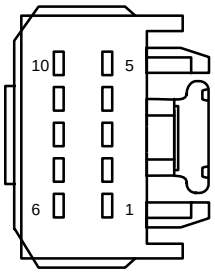


(1) 31-AJ7 (BK)
(2)
(3) 33-AJ18 (YE/VT)
(4)
(5) 32-AJ18 (WH/VT)
(6) 32-AJ26 (WH)
32-AJ26A (WH)
(7)
(8) 33-AJ26 (YE)
33-AJ26A (YE)
(9)
(10) 15-AJ7 (GN/BU)

N388
Window control/ power mirror adjust switch, driver

C489

14K138

F07056

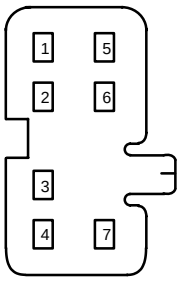


(1) 33-AJ17 (YE/VT)
33-AJ17A (YE/VT)
(2) 15-AJ18 (GN/WH)
(3) 32-AJ18 (WH/VT)
(4) 31-LH31 (BK)
(5)
(6) 33-AJ18 (YE/VT)
(7) 32-AJ17 (WH/VT)
32-AJ17A (WH/VT)
(8)

N297
Window control switch, passenger side front

C494

17N400

F01005




(1) 31-LF21 (BK)

E34
Licence plate lamp, LH side

C495

17N400

F01005




(1) 29S-LF21 (OG/BK) +
29S-LF22 (OG/BK)

E34
Licence plate lamp, LH side

C496

17N400

F01005




(1) 31-LF22 (BK)

E35
Licence plate lamp, RH side

C497

17N400

F01005




(1) 29S-LF22 (OG/BK)

E35
Licence plate lamp, RH side

C521

67020

F03326

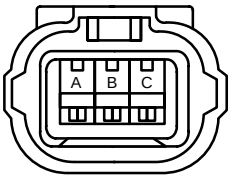


B43
Crankshaft position sensor

(A) 15S-RJ4 (GN/BU)
(B) 8-RJ4 (WH/RD)
(C) 91-RJ4 (BK/BU)

C524

F03312

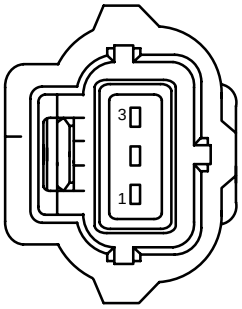


B11
Vehicle speed sensor (VSS)

(1) 91-RJ29 (BK/OG)
(2) 8-RJ29A (WH/BU)
(3) 15-RJ29 (GN/RD)

C522

14335

F08280

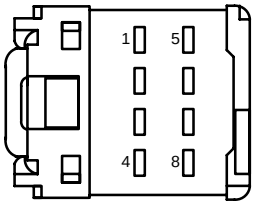


(1) 15-AG7 (GN/BU)
(2) 31S-AG7 (BK/BU)
(3) 31S-AG27 (BK/WH)
(4) 31-AG7 (BK)
(5)
(6)
(7)
(8)

N230
Roof opening panel control switch

C525 (GY)

14335

F10091

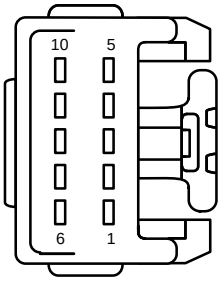


(1) 29-AG12 (OG/BK)
(2) 8-AG12 (WH/GN)
(3)
(4)
(5)
(6) 8-GB8 (WH/BU)
(7) 15-AG12 (GN/BK)
(8) 31S-AG7 (BK/BU)
(9) 31S-AG27 (BK/WH)
(10) 31-AG12 (BK)

A26
Roof opening panel module

C523 (BK)

9H589

F02578

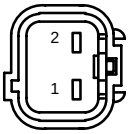

Y57
Swirl control solenoid valve

(1) 15-RL43 (GN/OG)
(2) 91S-RL43 (BK/RD)

C528

67020


(A) 91S-RL21 (BK/WH)
(B) 15-RL19 (GN/YE)

Y218
Inlet air control valve solenoid

C529

67020

F02618



(A) 91S-RL43 (BK/RD)


(B) 15-RL43 (GN/OG)

Y57
Swirl control solenoid valve

C532

14401

F06065

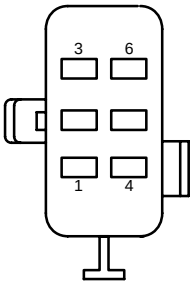

(1) 31S-FB15 (BK/OG)

(2) 15S-FB14 (GN/BU)

(3) 31S-FB16 (BK/GN)

(4) 31S-FB17 (BK/RD)

(5)


(6) 31S-FB18 (BK/WH)

M210
Defrost mode actuator

C533

14401

F06065

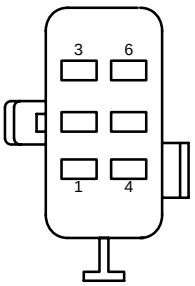

(1) 31S-FB20 (BK/BU)

(2) 15S-FB19 (GN/YE)

(3) 31S-FB21 (BK/OG)

(4) 31S-FB22 (BK/GN)

(5)


(6) 31S-FB23 (BK/RD)

M250
Panel/floor mode actuator

C534

14401

F06065

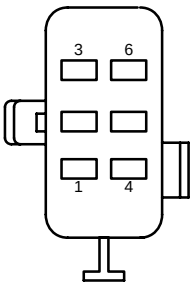

(1) 31S-FB10 (BK/GN)

(2) 15S-FB9 (GN/RD)

(3) 31S-FB11 (BK/RD)

(4) 31S-FB12 (BK/WH)

(5)


(6) 31S-FB13 (BK/YE)

M101
Air temperature door motor, RH side

C536

14401

F03298

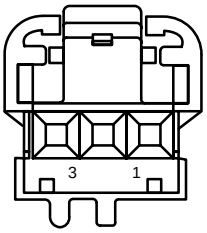


B305
Discharge temperature sensor, floor, RH side

(1) 8-FA51 (WH/BK)
(2)
(3) 9-FA51 (BN/YE)

C537

14401

F06282




(1) 15-FA18A (GN/OG)
(2) 49S-FA45 (BU/WH)
(3) 9-FA45 (BN/BU)
(4)
(5)
(6) 31-FA45 (BK)

M3
Blower motor

C538

14401

F04166

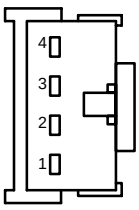


M69
Recirculated air actuator

(1)
(2) 32-FA76 (WH/BU)
(3)
(4) 33-FA76 (YE/BU)

C539 (BK)

14401

F26025

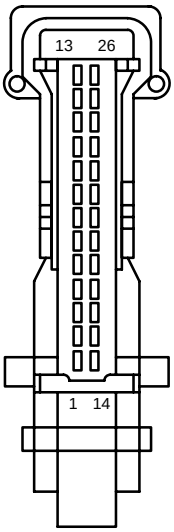


A205
Electronic Automatic Temperature Control (EATC) module

(1) 31S-FA54 (BK/BU)
31S-FA54A (BK/BU)
(2) 31S-FA55 (BK/OG)
31S-FA55A (BK/OG)
(3) 31S-FA58 (BK/OG)
(4) 31S-FA59 (BK/GN)
(5) 31S-FB20 (BK/BU)
(6) 31S-FB21 (BK/OG)
(7) 31S-FB15 (BK/OG)
(8) 31S-FB16 (BK/GN)
(9) 31S-FB10 (BK/GN)
(10) 31S-FB11 (BK/RD)
(11) 29-FA94 (OG/BK)
(12) 15S-FA46 (GN/BU)
(13) 15S-FB14 (GN/BU)
(14) 31S-FA56 (BK/GN)
31S-FA56A (BK/GN)
(15) 31S-FA57 (BK/RD)
31S-FA57A (BK/RD)
(16) 31S-FA60 (BK/RD)
(17) 31S-FA61 (BK/WH)
(18) 31S-FB22 (BK/GN)
(19) 31S-FB23 (BK/RD)
(20) 31S-FB17 (BK/RD)
(21) 31S-FB18 (BK/WH)
(22) 31S-FB12 (BK/WH)
(23) 31S-FB13 (BK/YE)
(24) 91-FA94 (BK/GN)
(25) 15S-FB9 (GN/RD)
(26) 15S-FB19 (GN/YE)

C540 (WH)

14401

F26025

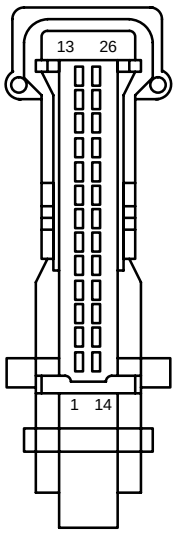


A205
Electronic Automatic Temperature Control (EATC) module

(1) 15S-FA95 (GN/BK)
(2) 31-FA95 (BK)
(3) 29S-LE10 (OG/GN)
(4)
(5)
(6)
(7) 8-FA51 (WH/BK)
(8) 8-FA52 (WH/BK)
(9) 8-FA48 (WH/GN)
(10) 8-FA47 (WH/GN)
(11)
(12)
(13)
(14) 15S-FA42 (GN/YE)
(15) 49S-FA45 (BU/WH)
(16) 9-FA45 (BN/BU)
(17) 9-FA1 (BN/RD)
(18) 4-EC10W (GY)
(19) 5-EC10W (BU)
(20) 9-FA47A (BN/GN)
(21) 8-FA95 (WH/GN)
(22) 8-FA53 (WH/BU)
(23) 10-FA53 (GY/VT)
(24)
(25)
(26)

C541

14401

F06065

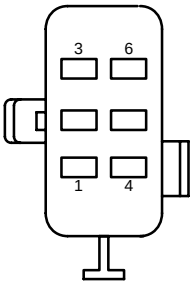


(1) 31S-FA54 (BK/BU)
31S-FA56A (BK/GN)
(2) 15S-FA42 (GN/YE)
(3) 31S-FA55 (BK/OG)
31S-FA57A (BK/RD)
(4) 31S-FA54A (BK/BU)
31S-FA56 (BK/GN)
(5)
(6) 31S-FA55A (BK/OG)
31S-FA57 (BK/RD)

M69
Recirculated air actuator

C542

14401

F03298

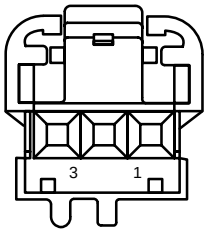


B306
Discharge temperature sensor, panel, LH side

(1) 8-FA47 (WH/GN)
(2)
(3) 9-FA47 (BN/GN)

C543

14401

F03298

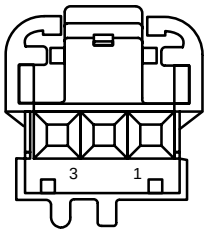


B307
Discharge temperature sensor, panel, RH side

(1) 8-FA52 (WH/BK)
(2)
(3) 9-FA52 (BN/YE)

C544

14401

F03298

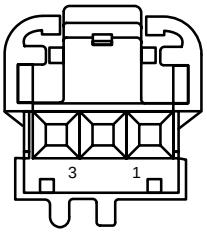

B304
Discharge temperature sensor, floor, LH side


(1) 8-FA48 (WH/GN)
(2)
(3) 9-FA48 (BN/GN)

C554

14401


before 11/2004

F04162

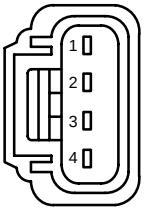

as of 11/2004

F04296

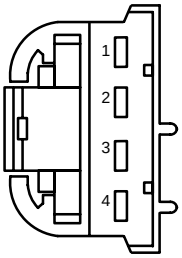


(1) 8-FA53 (WH/BU)
(2) 10-FA53 (GY/VT)
(3) 9-FA53 (BN/BU)
(4)

B72
Sunload sensor

C546

F03330

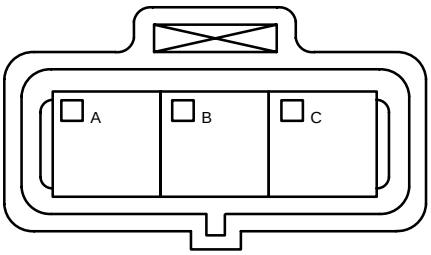


(A) 9-RJ17 (BN/WH)
(B) 8-RJ17 (WH/VT)
(C) 7-RJ17 (YE)

B70
Barometric Absolute Pressure (BAP) sensor

C553

14401

F06065

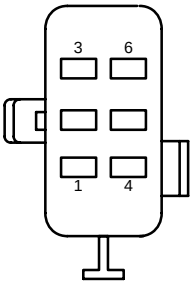


(1) 31S-FA58 (BK/OG)
(2) 15S-FA46 (GN/BU)
(3) 31S-FA59 (BK/GN)
(4) 31S-FA60 (BK/RD)
(5)
(6) 31S-FA61 (BK/WH)

M100
Air temperature door motor, LH side

C547

67020

F03324

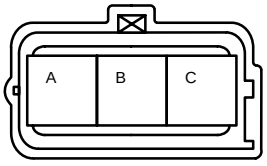

B8
Throttle Position Sensor (TPS)

(A) 7-RJ28A (YE)
15-RJ28A (GN/YE)
(B) 9-RJ28 (BN)
(C) 8-RJ28 (WH)

C556

14K733


(1) 4-EC7D (GY/RD) +
4-EC7X (GY/RD)
4-EC7D (GY/RD) +
4-EC7N (GY/RD)
(2) 5-EC7D (BU/RD) +
5-EC7X (BU/RD)
5-EC7D (BU/RD) +
5-EC7N (BU/RD)

C586 (RD)

12A690

before 11/2004

F03290

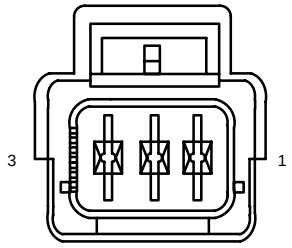


B225
Fuel rail pressure transducer sensor

(1) 8-RJ11 (WH/GN)
(2) 9-RJ11 (BN/GN)
(3) 7-RJ11 (YE/GN)

as of 11/2004


F03308

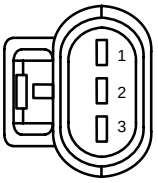

C589 (BK)

9H589

F46008

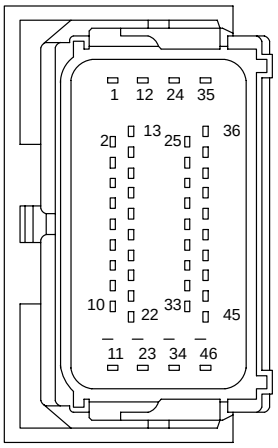

A147
Powertrain control module (PCM)


(1)
(2) 31S-RL10 (BK/WH)
(3) 31S-RL11 (BK/YE)
(4)
(5)
(6) 8-RJ4A (WH/RD)
(7) 9-RJ3 (BN/WH)
(8) 91S-RL19 (BK/YE)
(9) 91S-RL43 (BK/RD)
(10) 91S-RG3 (BK/OG)
(11) 8-RR5 (WH)
(12)
(13) 31S-RL12 (BK/BU)
(14) 31S-RL13 (BK/OG)
(15) 5-EB6A (BU)
(16) 8-RJ5A (WH)
(17) 9-RJ4A (BN/RD)
(18) 8-RJ3 (WH/VT)
(19)
(20) 4-EB6A (GY)
(21)
(22) 15S-RG3 (GN/RD)
(23) 8-RR7 (WH/BU)
(24)
(25) 32-RG3 (WH/BU)
(26) 33-RG3 (YE/BU)
(27) 8-RJ17 (WH/VT)
(28) 8-RJ19 (WH/RD)
(29) 8-RJ18 (WH/BK)
8-RJ18 (BK)
(30) 9-RJ5 (BN)
(31) 31S-GC20 (BK/OG)
(32) 91S-PA53 (BK/RD)
(33) 91S-PA51 (BK/OG)
(34) 8-RR8 (WH/GN)
(35)
(36) 7-RJ40 (YE/GN)
(37) 8-RG3 (WH/BU)
(38) 9-RG3 (BN/BU)
(39) 8-RJ40 (WH/GN)
(40) 9-RJ19 (BN/RD)
(41) 9-RJ18 (BN/YE)
9-RJ18 (YE)
(42)
(43)
(44) 91S-PA54 (BK/WH)
(45) 91S-PA52 (BK/GN)
(46) 8-RR6 (WH/RD)

C593

9H589


all others

F06126

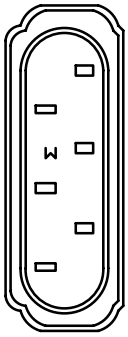

China as of 08/2005

F06202

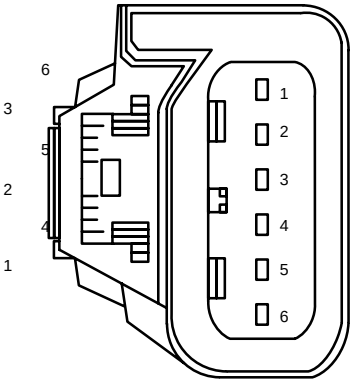


(1) 15S-RG3 (GN/RD)
(2) 91S-RG3 (BK/OG)
(3) 8-RG3 (WH/BU)
(4) 9-RG3 (BN/BU)
(5) 32-RG3 (WH/BU)
(6) 33-RG3 (YE/BU)

A464
Electronic Throttle Control (ETC) module

C598 (GY)

12A690

F04242

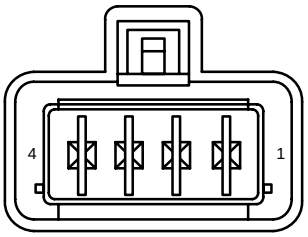


(1) 49-RJ22 (BU/WH)
(2) 8-RJ22 (WH/BU)
(3) 9-RJ22 (BN/BU)
(4) 15-RJ22 (GN/RD)

B22
Mass Air Flow (MAF) sensor

C602

14K733

F02570

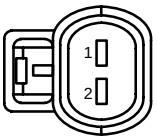

(1) 15S-FA78 (GN/WH)
(2) 91-FA14 (BK/GN)


Y183
Heat exchanger shutoff valve

C608

15K868


before 11/2004

F12126

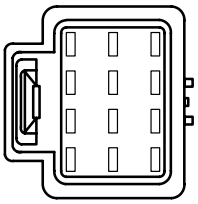

as of 11/2004


F12086

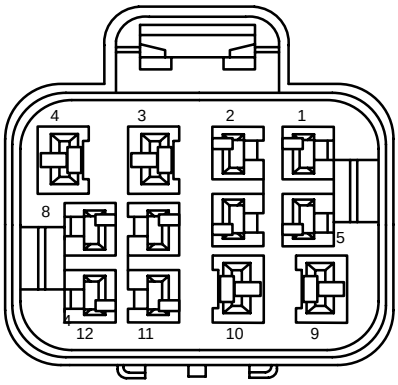

(1) 8-GN21 (WH/BU)
(2) 8-GN20 (WH/RD)
(3)
(4) 8-GN19 (WH)
(5) 8-GN22 (WH/GN)
(6)
(7)
(8) 15S-LD6A (GN/YE)
15S-LD6 (GN/YE)
(9) 15S-LG16A (GN/OG)
15S-LG16 (GN/OG)
(10)
(11) 7-GN19 (YE)
(12) 9-GN19 (BN)

14014

F12092

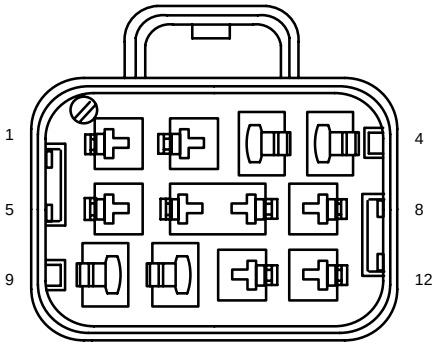


(1) 8-GN21 (WH/BU)
(2) 8-GN20 (WH/RD)
(3)
(4) 8-GN19 (WH)
(5) 8-GN22 (WH/GN)
(6)
(7)
(8) 15S-LD6A (GN/YE)
15S-LG9 (GN/BK)
(9) 15S-LD6A (GN/YE)
15S-LG16 (GN/OG)
(10)
(11) 7-GN19 (YE)
(12) 9-GN19 (BN)

C619

14401

F06278

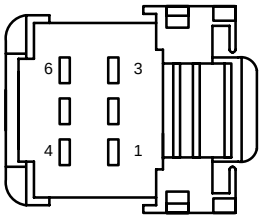

(1)
(2)
(3)
(4) 31S-JA47 (BK/OG)
(5) 31-JA47 (BK)
(6) 31S-JA31 (BK/WH)


N475
Passenger Air bag Deactivation (PAD) switch

C632

15K868


before 11/2004

F02610

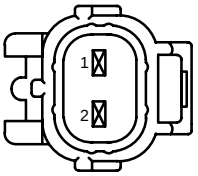

as of 11/2004

F02091

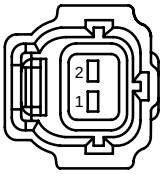

B171
Parking aid sensor, rear, outer right


(1) 8-GN19 (WH)
(2) 9-GN19A (BN)

C633

15K868


before 11/2004

F02610

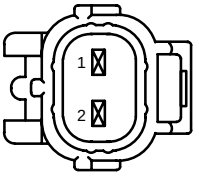

as of 11/2004

F02091

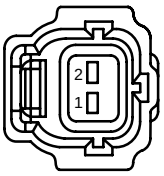

B170
Parking aid sensor, rear, inner right


(1) 8-GN20 (WH/RD)
(2) 9-GN20 (BN/RD)

C629

14K733


before 11/2004

F02610

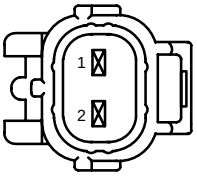

as of 11/2004

F02091

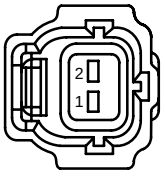

B309
Parking aid sensor, LH front


(1) 8-GN6 (WH)
(2) 9-GN6A (BN)

C634

15K868

before 11/2004

F02610

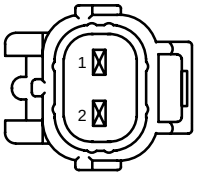

B169
Parking aid sensor, rear, inner left


(1) 8-GN21 (WH/BU)
(2) 9-GN21 (BN/BU)

C630

14K733


before 11/2004

F02610

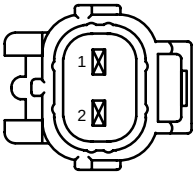

as of 11/2004

F02091

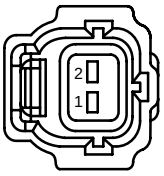

B301
Parking aid sensor, RH front


(1) 8-GN9 (WH/GN)
(2) 9-GN9 (BN/GN)

C635

15K868


before 11/2004

F02610

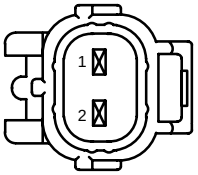

as of 11/2004

F02091

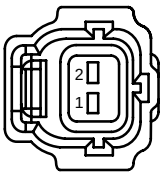


B168
Parking aid sensor, rear, outer left

(1) 8-GN22 (WH/GN)
(2) 9-GN22 (WH/GN)

C642
67020

F03328

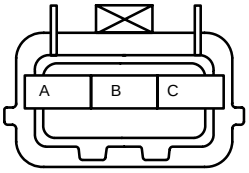


T6
Ignition coil, cylinder 1

(A) 15-RR5 (RD/BK)
(B) 91-RR5 (BK)
(C) 8-RR5A (WH)

C643 (BK)
12A690


before 11/2004

F02612

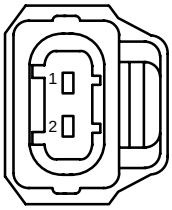

as of 11/2004

F02091

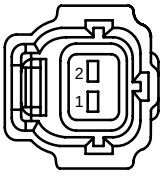


B43
Crankshaft position sensor

(1) 9-RJ4A (BN/RD)
(2) 8-RJ4A (WH/RD)

C644
67020

F03328

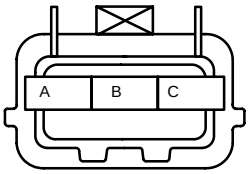


T8
Ignition coil, cylinder 3

(A) 15-RR7 (RD)
(B) 91-RR7 (BK/RD)
(C) 8-RR7A (WH/BU)

C645
67020

F03328

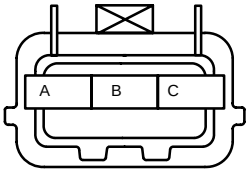


T9
Ignition coil, cylinder 4

(A) 15-RR8 (RD/BU)
(B) 91-RR8 (GN)
(C) 8-RR8A (WH/GN)

C646
67020

F02626

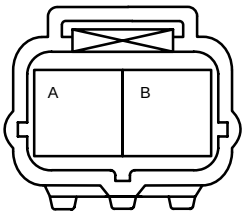


U1
Ignition transformer capacitor

(A) 91-MD20 (BK/BU)
(B) 15-MD20 (GN/BU)

C648
14014

F06276

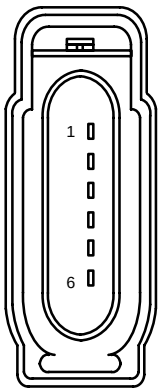


(1) 7-RJ30 (YE)
(2) 8-RJ30 (WH)
(3) 9-RJ30 (BN)
(4) 91-RJ30 (BK/YE)
(5) 10-RJ30 (GY)
(6) 15-RJ30 (GN/YE)

B129
Accelerator pedal position sensor

C655
12A690

F02580

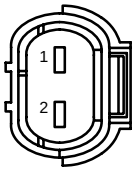


B213
Intake Air Temperature (IAT) sensor

(1) 8-RJ17A (WH/VT)
(2) 9-RJ17 (BN/WH)

C680
67020

F60006

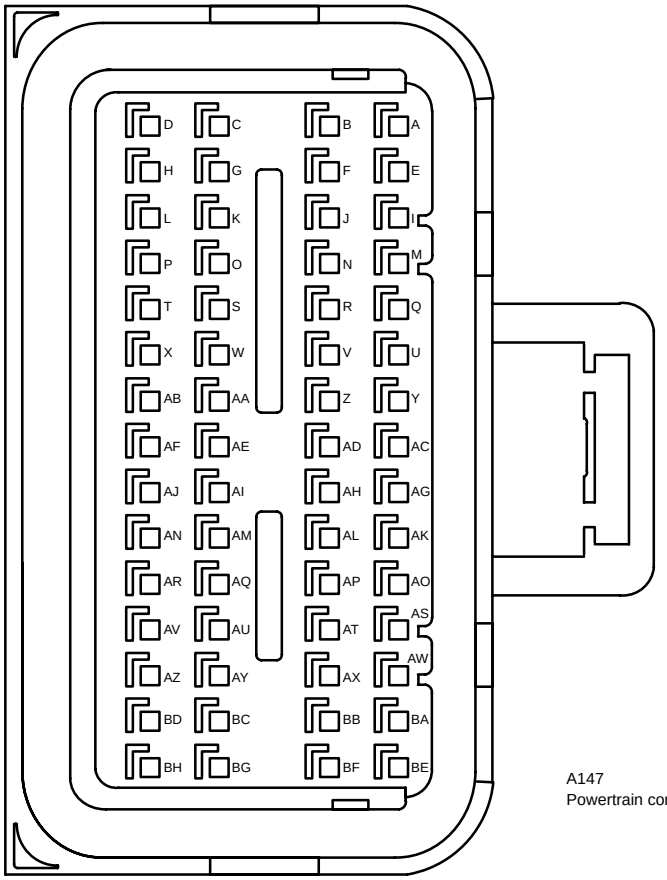


A147
Powertrain control module (PCM)

(A) 15-RL12 (GN/BU)
(B) 15-RL10 (GN/WH)
(C) 15-RL11 (GN/YE)
(D)
(E) 31S-RL10 (BK/WH)
(F) 31S-RL11 (BK/YE)
(G) 31S-RL12 (BK/BU)
(H) 15-RL13 (GN/RD)
(I) 8-RJ26 (WH/GN)
(J) 8-RJ5 (WH)
(K) 31S-GC20 (BK/OG)
(L) 31S-RL13 (BK/OG)
(M) 8-RR8A (WH/GN)
(N)
(O) 91S-PA51 (BK/OG)
(P) 8-RJ4 (WH/RD)
(Q) 8-RR7A (WH/BU)
(R) 8-RJ17 (WH/VT)
(S) 91S-PA52 (BK/GN)
(T) 15S-RJ15 (GN/BU)
(U) 8-RR6A (WH/RD)
(V) 7-RJ28 (YE)
(W) 91S-PA53 (BK/RD)
(X) 8-RL9 (WH)
(Y) 8-RR5A (WH)
(Z) 8-RJ28 (WH)
(AA) 91S-PA54 (BK/WH)
(AB) 9-RL9 (BN)
(AC)
(AD) 8-RJ21 (WH/RD)
(AE) 9-RJ28 (BN)
(AF) 15-RL43 (GN/OG)
(AG)
(AH) 8-RJ25 (WH/BU)
(AI)
(AJ) 91S-RL43 (BK/RD)
(AK)
(AL)
(AM) 91S-RJ25 (BK/OG)
(AN) 5-EB6 (BU)
(AO) 91S-RL21 (BK/WH)
(AP)
(AQ) 8-RJ22 (WH/BU)
(AR) 4-EB6 (GY)
(AS) 15-RL19 (GN/YE)
(AT) 91S-RJ26 (BK/GN)
(AU)
(AV) 31S-RL2 (BK/OG)
(AW)
(AX) 9-RE8 (BN)
(AY) 9-RJ22 (BN/BU)
(AZ) 31-RE8A (BK)
(BA) 8-RJ18 (WH/BK)
(BB) 8-RJ39 (WH/RD)
(BC) 91S-RJ22 (BK/OG)
(BD) 91-RE25 (BK/RD)
(BE)
(BF) 91-RE27 (BK/RD)
(BG) 15S-PA1 (GN/BU)
(BH) 31-RE21 (BK)

C681
67070

F60005

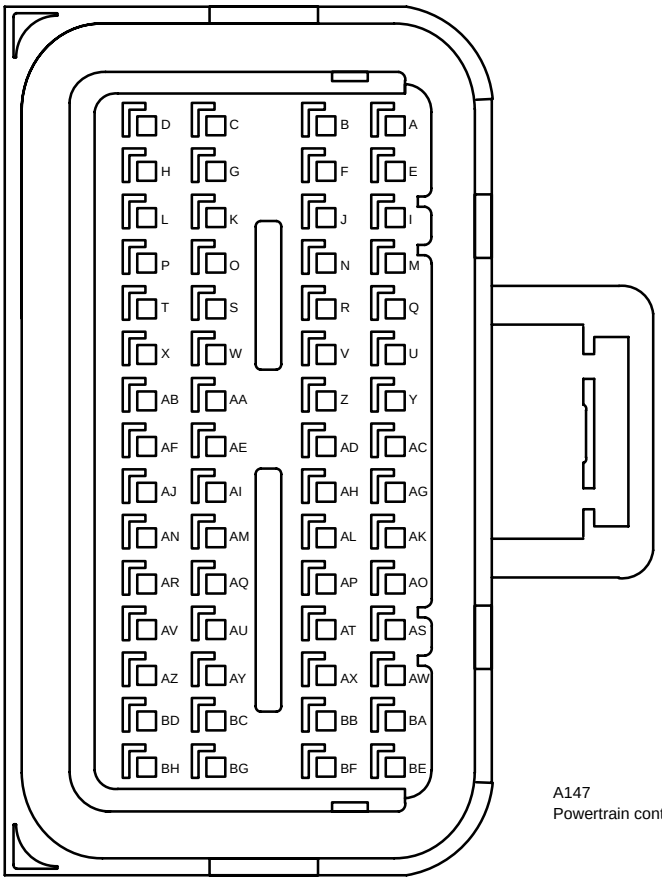


A147
Powertrain control module (PCM)

(A)
(B)
(C)
(D)
(E)
(F)
(G) 31-RE25B (BK)
(H)
(I)
(J)
(K)
(L)
(M)
(N)
(O)
(P) 91S-BB6 (BK/YE)
(Q)
(R) 31S-FA11A (BK/YE)
(S) 5-EC7D (BU/RD)
(T)
(U) 8-FA88B (WH/VT)
(V) 15S-LG23B (GN/WH)
(W) 4-EC7D (GY/RD)
(X)
(Y) 9-TA27B (BN/WH)
(Z)
(AA)
(AB) 91-TA39 (BK/OG)
(AC) 91S-RH5B (BK/BU)
(AD)
(AE)
(AF)
(AG) 8-TA27B (WH/VT)
(AH)
(AI)
(AJ)
(AK)
(AL) 91S-RE8A (BK/YE)
(AM) 31S-BB16 (BK/RD)
(AN)
(AO)
(AP) 49-PA6B (BU)
(AQ)
(AR)
(AS)
(AT)
(AU)
(AV)
(AW) 91S-RH9B (BK/BU)
(AX) 30-RE8B (RD)
(AY)
(AZ)
(BA)
(BB) 15-RJ15A (GN/BU)
(BC)
(BD)
(BE)
(BF) 15-RE21B (GN/OG)
(BG)
(BH) 15-RN2B (GN/BU)

C682
67070

F60006

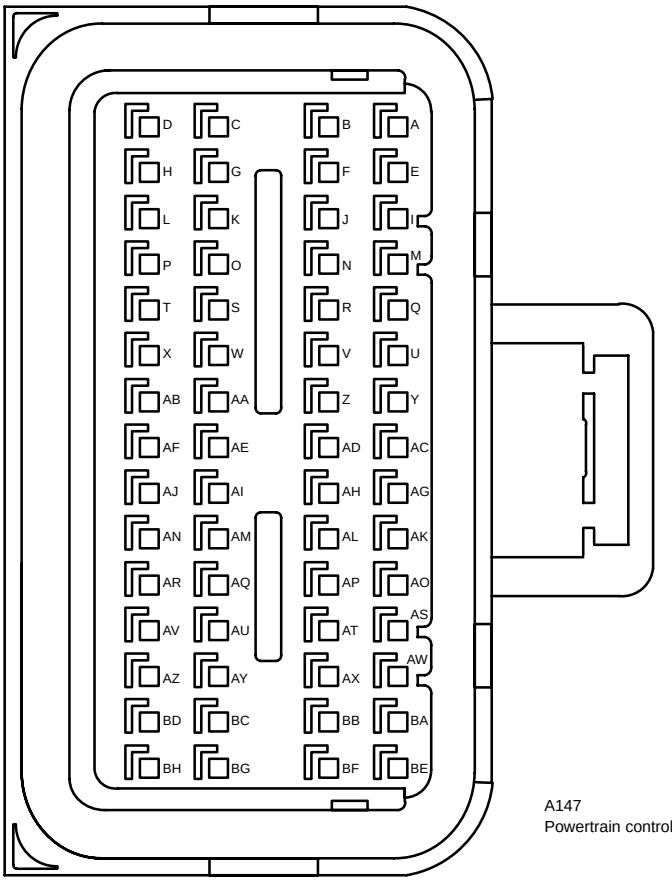


A147
Powertrain control module (PCM)

(A)
(B)
(C)
(D)
(E)
(F)
(G) 31-RE25A (BK)
(H)
(I)
(J)
(K)
(L)
(M) 9-TA27A (BN/WH)
(N)
(O)
(P) 8-PF36A (WH/GN)
(Q) 8-TA27A (WH/VT)
(R) 31S-FA11A (BK/YE)
(S) 5-EC7A (BU/RD)
(T)
(U) 8-FA88A (WH/VT)
(V) 15S-LG23A (GN/WH)
(W) 4-EC7A (GY/RD)
(X) 91S-TA18 (BK/RD)
(Y)
(Z)
(AA)
(AB) 10-PF36A (GY/OG)
(AC) 91S-RH5A (BK/BU)
(AD)
(AE)
(AF) 91S-TA17A (BK/RD)
(AG)
(AH)
(AI)
(AJ) 15S-TA63A (GN/BK)
(AK) 8-TA36A (WH/GN)
(AL) 91S-RE8A (BK/YE)
(AM) 31S-BB14 (BK/BU)
(AN) 9-RN2 (BN/RD)
(AO)
(AP) 49-PA6A (BU)
(AQ)
(AR) 15S-TA64A (GN/OG)
(AS)
(AT)
(AU)
(AV) 15S-TA17A (GN/OG)
(AW) 91S-RH9A (BK/BU)
(AX) 30-RE8A (RD)
(AY) 8-TA51 (WH/RD)
(AZ) 15S-TA65A (GN/WH)
(BA)
(BB) 15-RJ15 (GN/BU)
(BC) 15-TA51A (GN)
(BD) 15S-TA24A (GN/BU)
(BE) 15S-TA23A (GN/YE)
(BF) 15-RE21A (GN/OG)
(BG) 15-RN3C (GN/BU)
(BH) 15-RN2A (GN/BU)

C690 (BK)

12A690

F46004

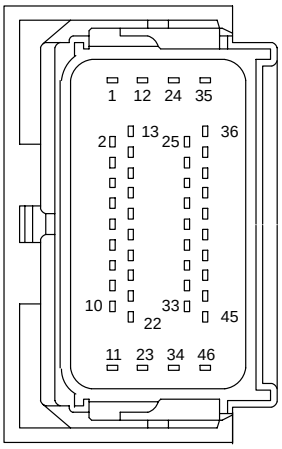


A147
Powertrain control module (PCM)

(1)	31S-FA11A (BK/YE)	(16)		(32)	10-RJ30 (GY)
(2)		(17)		(33)	
(3)	31S-RL2 (BK/OG)	(18)		(34)	15-RE21A (GN/OG)
(4)	31S-BB16A (BK/RD) 31S-BB16B (BK/RD)	(19)	91S-RH5 (BK/BU)	(35)	91S-RH9A (BK/BU)
(5)	91S-RJ26A (BK/GN)	(20)		(36)	
(6)		(21)		(37)	
(7)	91S-RJ26 (BK/GN)	(22)		(38)	
(8)		(23)	91-RE8J (BK/YE)	(39)	15S-LG23 (GN/WH)
(9)		(24)		(40)	
(10)	91-RE8 (BK/YE) 91-RE8H (BK/YE)	(25)	9-RE8 (BN)	(41)	4-EC7 (GY/RD) 4-EC7A (GY/RD)
(11)	91-RE8K (BK/YE)	(26)	8-RJ25A (WH/BU)	(42)	
(12)	49-PA6 (BU)	(27)	8-RJ26 (WH/GN)	(43)	
(13)	8-FA88 (WH/VT)	(28)	7-FA88 (YE/VT)	(44)	
(14)	91S-RE8A (BK/YE)	(29)	8-RJ29A (WH/BU)	(45)	
(15)		(30)	5-EC7 (BU/RD) 5-EC7A (BU/RD)	(46)	15-RE17A (GN/BU)
		(31)			

C692

14K733

F04083

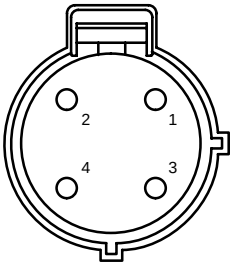


N246
A/C low–pressure switch

(1)	91S-FA17 (BK/RD) 91S-FA17A (BK/RD)
(2)	
(3)	
(4)	91S-RE8 (BK/YE)

C700
14014

F24022

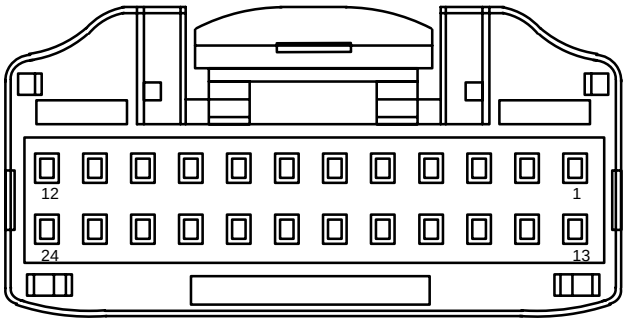


(1)	4-EC10AL (GY)	(13)	5-EC10AL (BU)
(2)	10-GN26 (GY)	(14)	
(3)		(15)	
(4)	9-GN6 (BN)	(16)	9-GN19 (BN)
(5)	8-GN9 (WH/GN)	(17)	8-GN21 (WH/BU)
(6)	8-GN6 (WH)	(18)	8-GN20 (WH/RD)
(7)	8-GN19 (WH)	(19)	8-GN22 (WH/GN)
(8)		(20)	
(9)	10-GN25 (GY/WH)	(21)	10-GN26 (GY)
(10)	91S-GN12 (BK/OG)	(22)	15S-GN23 (GN/OG)
(11)	15-GN10A (GN/YE)	(23)	1-GN17 (WH/RD)
(12)	30-GN10 (RD)	(24)	31-GN10 (BK)

A265
Parking aid module

C717
14401

F06278

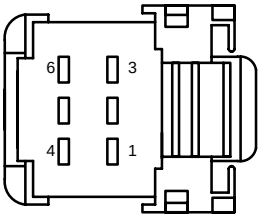


(1)	15-CF54 (GN/WH)
(2)	91-CF54 (BK/WH)
(3)	29S-LH45 (OG/WH)
(4)	
(5)	31S-CF54 (BK/WH)
(6)	91S-CF54 (BK/WH)

N346
Electronic Stability Program (ESP) switch

C722
14K138

F18018

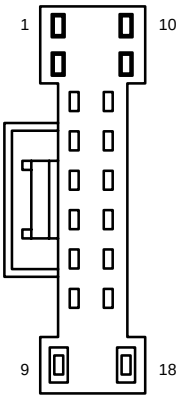


(1)	32-AA59 (WH/BK) 32-AA59A (WH/BK)	(10)	33-AA60 (YE)
(2)	33-AA59 (YE/BK) 33-AA59A (YE/BK)	(11)	
(3)	4-EC3F (GY/RD)	(12)	5-EC3F (BU/RD)
(4)		(13)	91S-AA64 (BK/GN)
(5)	7-LH31 (YE/RD)	(14)	91S-AA63 (BK/OG)
(6)	91S-AA62 (BK/WH)	(15)	91S-AA61 (BK/BU)
(7)	91-AJ18 (BK/WH)	(16)	91-AA58 (BK/YE) 91-AA58A (BK/YE)
(8)	91S-AJ55 (BK/RD)	(17)	91S-AJ54B (BK/GN)
(9)	29-AJ27 (OG/WH)	(18)	31-DA12A (BK)

A352
Door control module, passenger

C723

14K138

F14066

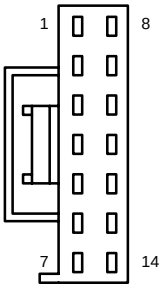


(1)		(8)	
(2)		(9)	8-AD10 (WH/BK)
(3)		(10)	91-AD10 (BK/RD)
(4)		(11)	10-AD10 (GY/BK)
(5)		(12)	
(6)		(13)	
(7)		(14)	

A352
Door control module, passenger

C727

14A584

F14066.01

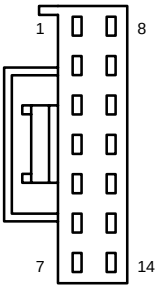


(1)	91S-AJ54 (BK/GN) 91S-AJ54A (BK/GN)	(8)	91S-AJ55 (BK/RD) 91S-AJ55A (BK/RD)
(2)	91S-AJ57 (BK/BU)	(9)	91S-AJ58 (BK/OG)
(3)	91S-AJ60 (BK/BU)	(10)	91S-AJ61 (BK/OG)
(4)	8-AJ19 (WH/RD)	(11)	10-AD6 (GY)
(5)		(12)	8-AD6 (WH)
(6)		(13)	
(7)	29-AD12A (OG/YE)	(14)	

A351
Door control module, driver

C728

14A584

F14066

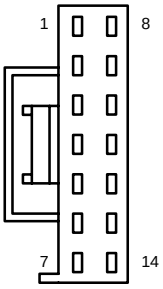


(1)		(8)	
(2)		(9)	32-AD6A (WH)
(3)		(10)	33-AD8A (YE/BU)
(4)		(11)	34-AD7A (BU/RD)
(5)		(12)	
(6)		(13)	
(7)		(14)	

A351
Door control module, driver

C729

14A584

F18018

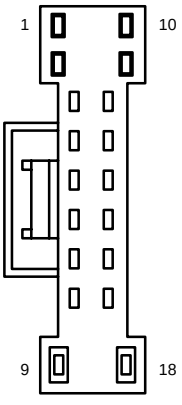


(1)	32-AA59A (WH/BK) 32-AA59B (WH/BK)	(10)	33-AA60A (YE)
(2)	33-AA59A (YE/BK) 33-AA59B (YE/BK)	(11)	
(3)	4-EC3B (GY/RD)	(12)	5-EC3B (BU/RD)
(4)		(13)	91S-AA64A (BK/GN)
(5)	7-LH14 (YE)	(14)	91S-AA63A (BK/OG)
(6)	91S-AA62A (BK/WH)	(15)	91S-AA61A (BK/BU)
(7)	91-AJ7A (BK/BU)	(16)	91-AA58A (BK/YE) 91-AA58B (BK/YE)
(8)	91S-AJ41 (BK/RD) 91S-AJ41A (BK/RD)	(17)	91S-AJ40 (BK/GN) 91S-AJ40A (BK/GN)
(9)	29-AJ26 (OG/YE)	(18)	31-DA11A (BK)

A351
Door control module, driver

C730

14240

F18018

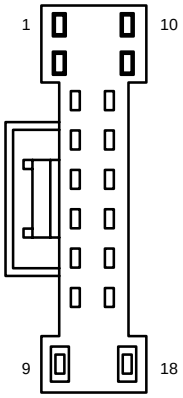


(1)	32-AA59B (BK)	(10)	33-AA60B (BK)
(2)	33-AA59B (BK)	(11)	
(3)	4-EC3D (GY/RD)	(12)	5-EC3D (BU/RD)
(4)		(13)	
(5)	7-LH36 (YE/BU)	(14)	
(6)		(15)	
(7)	91-AJ32 (BK/OG)	(16)	91-AA58B (BK)
(8)	91S-AJ64 (BK/OG)	(17)	91S-AJ63 (BK/BU)
(9)	29-AJ83 (OG/BU)	(18)	31-AJ83 (BK)

A353
Door control module, LH side rear

C731

14240

F18018

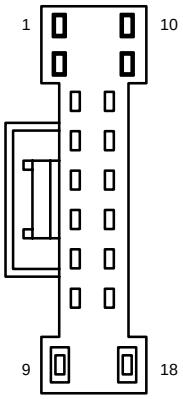


(1)	32-AA59C (BK)	(10)	33-AA60C (BK)
(2)	33-AA59C (BK)	(11)	
(3)	4-EC3A (GY/RD)	(12)	5-EC3A (BU/RD)
(4)		(13)	
(5)	7-LH36A (YE/BU)	(14)	
(6)		(15)	
(7)	91-AJ32A (BK/OG)	(16)	91-AA58C (BK)
(8)	91S-AJ64A (BK/OG)	(17)	91S-AJ63A (BK/BU)
(9)	29-AJ83A (OG/BU)	(18)	31-AJ83A (BK)

A354
Door control module, RH side rear

C732

14014

F06234

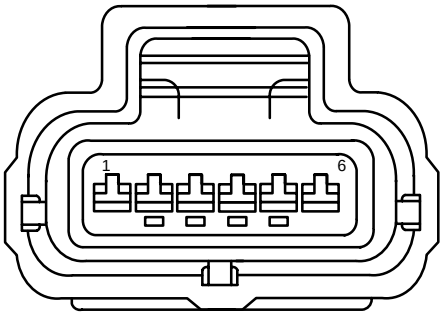

(1) 15S-RG2 (GN/OG)
(2) 8-GA7 (WH/RD)
(3)
(4) 9-GA7 (BN/RD)
(5) 31-RG2 (BK)
(6)


A31
Fuel tank unit

C753

14K733


before 11/2004

F02572

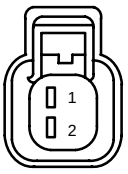

as of 11/2004

F02086

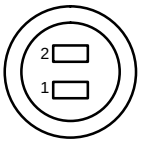

E45
Side turn signal lamp, LH side


(1) 31-LG13 (BK)
(2) 49S-LG13 (BU/RD)

C754

14K733


before 11/2004

F02572

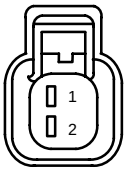

as of 11/2004

F02086

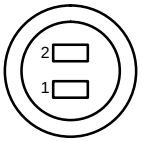


E44
Side turn signal lamp, RH side

(1) 31-LG20 (BK)
(2) 49S-LG20 (BU/WH)

C741

14A584

F08280

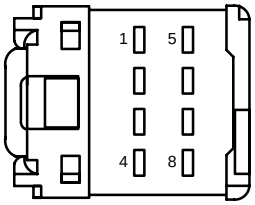


(1) 29-AD12 (OG/YE)
(2) 33-AD8C (YE/BU)
33-AD11 (YE/VT)
(3) 32-AD6C (WH)
32-AD9 (WH/GN)
(4) 34-AD7C (BU/RD)
34-AD10 (BU/YE)
(5)
(6) 33-AD8 (YE/BU)
33-AD11C (YE/VT)
(7) 32-AD6 (WH)
32-AD9C (WH/GN)
(8) 34-AD7 (BU/RD)
34-AD10C (BU/YE)

N388
Window control/power mirror adjust switch, driver

C755

14B723

F02636




N242
Seat control switch, driver

(1) 31-DA14 (BK)
(2) 29-AH35 (OG/YE)

C756

14B723

F02638




N242
Seat control switch, driver

(1) 32-AH38 (WH/BK)
(2) 33-AH38 (YE/BK)

C757
14B723

F02638




N242
Seat control switch, driver

(1) 32-AH36 (WH/RD)
(2) 33-AH36 (YE/RD)

C758
14B723

F02636




N242
Seat control switch, driver

(1) 32-AH37 (WH/GN)
(2) 33-AH37 (YE/GN)

C759
14B723

F02642

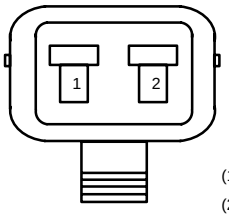


M158
Driver seat height motor

(1) 33-AH38 (YE/BK)
(2) 32-AH38 (WH/BK)

C760
14B723


all others

F05144

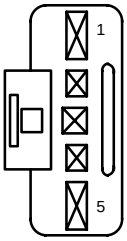

China as of 08/2005

F05146

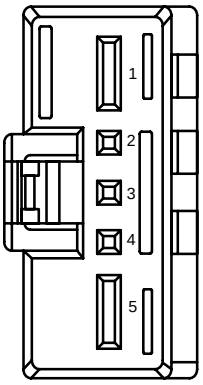


(1) 32-AH36 (WH/RD)
(2)
(3)
(4)
(5) 33-AH36 (YE/RD)

M230
Driver seat backrest motor

C761
14B723


all others

F05144

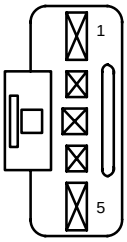

China as of 08/2005

F05146

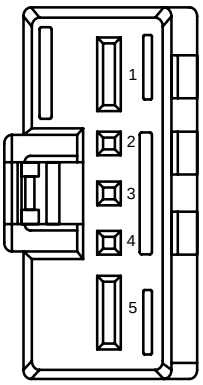


(1) 33-AH37 (YE/GN)
(2)
(3)
(4)
(5) 32-AH37 (WH/GN)

M227
Driver seat horizontal motor

C771
12A690


before 11/2004

F02612

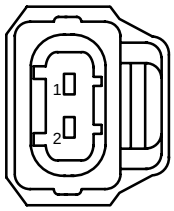

as of 11/2004

F02572

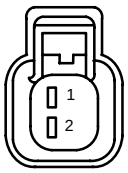


Y108
Fuel injector 1

(1) 31S-RL10 (BK/WH)
91S-RL10 (BK/WH)
(2) 15-RL10 (GN/WH)

C772


before 11/2004

F02612

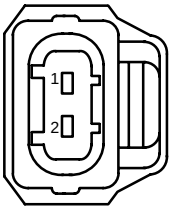

as of 11/2004

F02572

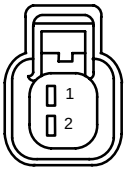


Y109
Fuel injector 2

(1) 31S-RL11 (BK/YE)
91S-RL11 (BK/YE)
(2) 15-RL11 (GN/YE)

C773


before 11/2004

F02612

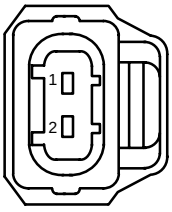

as of 11/2004

F02572

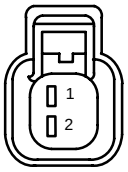


Y110
Fuel injector 3

(1) 31S-RL12 (BK/BU)
91S-RL12 (BK/BU)
(2) 15-RL12 (GN/BU)

C774


before 11/2004

F02612

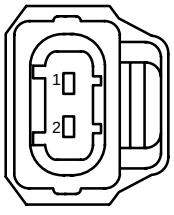

as of 11/2004

F02572

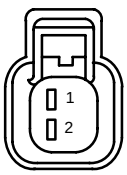


Y111
Fuel injector 4

(1) 31S-RL13 (BK/OG)
91S-RL13 (BK/OG)
(2) 15-RL13 (GN/RD)

C776
14401

F06284

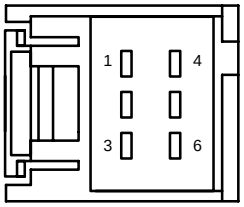


(1) 15S-FA95 (GN/BK)
(2)
(3) 31-FA95 (BK)
(4) 8-FA95 (WH/GN)
(5)
(6) 9-FA95 (BN/GN)

B206
In–vehicle temperature sensor

C778
12A690

F03308

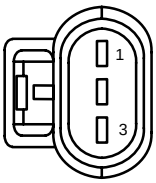


B12
Water–in–fuel sensor

(1) 15-RJ32 (GN/RD)
(2) 91-RJ32 (BK/OG)
(3) 8-RJ32 (WH/BU)

C779
9H589, 12A690


before 11/2004

F02580

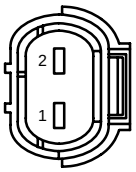

as of 11/2004

F02091

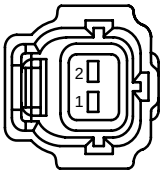


B10
Engine Coolant Temperature (ECT) sensor

(1) 8-RJ5 (WH)
8-RJ5A (WH)
(2) 9-RJ5A (BN)
9-RJ5B (BN)

C781 (BU)
12A690

F02570

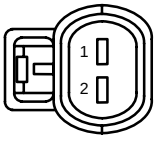

(1) 15-RL25C (GN/BU)
(2) 91S-RL25C (BK/BU)


Y187
De–gas valve

C782

14A584

before 11/2004

F02538

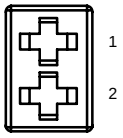


(1) 33-AJ26 (YE)
33-AJ17A (YE/VT)

(2) 32-AJ26 (WH)
32-AJ17A (WH/VT)

as of 11/2004

F02674



M123
Window regulator motor, passenger side front


M122
Window regulator motor, driver side front

C783

14K138

before 11/2004

F02538



(1) 32-AJ26A (WH)
32-AJ17 (WH/VT)

(2) 33-AJ26A (YE)
33-AJ17 (YE/VT)

as of 11/2004

F02674




M122
Window regulator motor, driver side front

M123
Window regulator motor, passenger side front

C784

14401

F04262

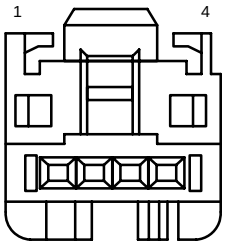


(1) 9-CE8 (BN/BU)
(2) 10-CE8 (GY/VT)
(3) 8-CE8 (WH/BU)
(4) 7-CE8 (YE/BU)

B36
Steering position sensor

C785

12A690

F02580

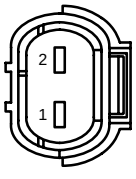


B109
Fuel temperature sensor

(1) 8-RJ12 (WH/BU)
(2) 9-RJ12 (BN/BU)

C787

12A690

F02570

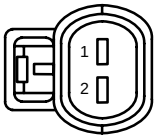


Y186
Coolant shutoff valve

(1) 15-RL42C (GN/BU)
(2) 91S-RL42C (BK/BU)

C789

14401

F02032

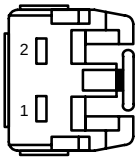


M3
Blower motor

(1) 15-FA18 (GN/OG)
(2) 31S-FA18 (BK/RD)

C790

12A690

F02570

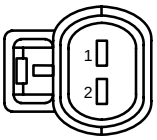


M253
Variable geometry turbo actuator

(1) 15-RL50C (GN/BU)
(2) 91S-RL50C (BK/BU)

C792

14K733

F03278

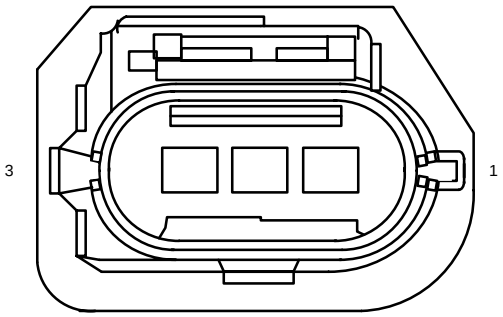


(1) 7-CE10 (YE/VT)
(2) 9-CE10 (BN/WH)
(3) 8-CE10 (WH/VT)

A357
Electrical Hydraulic Power Assist Steering (EHPAS) module

C794

14K733

F03278

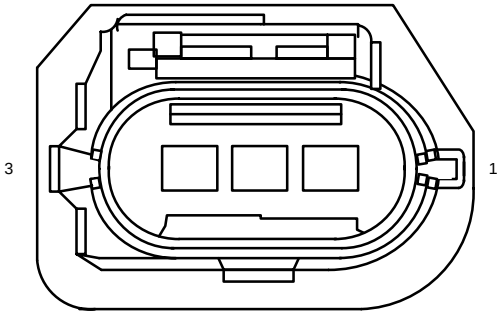


(1) 15-CE7 (GN/BU)
(2) 5-EC7W (BU/RD)
(3) 4-EC7W (GY/RD)

A357
Electrical Hydraulic Power Assist Steering (EHPAS) module

C793

14K733

F02150




A357
Electrical Hydraulic Power Assist Steering (EHPAS) module

(1) 30-CE7 (RD)
(2) 31-CE7 (BK)

C795

3C221

F03110

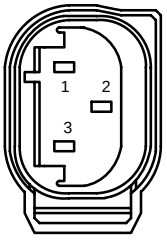


B218
Steering column position sensor

(1) 8-CE10 (WH/VT)
8-CE10A (WH/VT)
(2) 9-CE10 (BN/WH)
9-CE10A (BN/WH)
(3) 7-CE10 (YE/VT)
7-CE10A (YE/VT)

C798

17N400

F06230

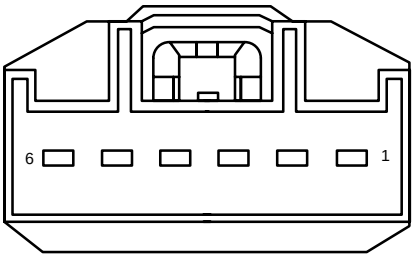


(1) 32-AA27A (BK)
2-AA27 (BK)
(2) 31-GL20 (BK)
(3) 31S-GL20 (BK)
31S-GL20A (BK)
(4) 31S-LB25 (BK)
(5)
(6)

A333
Door lock unit, tail-gate

C802

67020

F02628

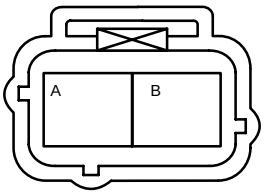

Y111
Fuel injector 4


(A) 31S-RL13 (BK/OG)
(B) 15-RL13 (GN/RD)

C803

9H589


before 11/2004

F03314

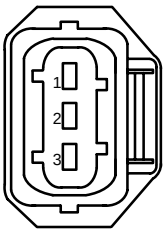

as of 11/2004

F02091

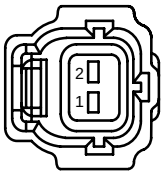


(1) 9-RJ3 (BN/WH)
(2) 8-RJ3 (WH/VT)
(3)

B41
Camshaft position sensor

C799

17N400

F02548

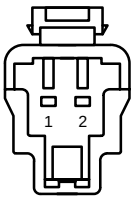


N155
Tailgate/decklid release switch

(1) 31S-AA30 (BK/YE)
31S-AA30A (BK/YE)
(2) 31-AA30 (BK)

C804

67020

F02628

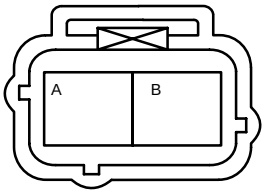


Y108
Fuel injector 1

(A) 31S-RL10 (BK/WH)
(B) 15-RL10 (GN/WH)

C800

67070

F02622

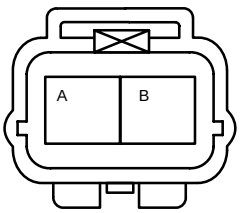


B80
Transmission speed sensor

(A) 9-TA27B (BN/WH)
(B) 8-TA27B (WH/VT)

C805

67020

F02628

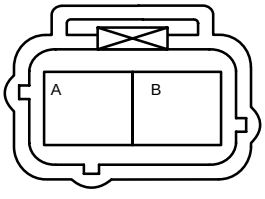


Y109
Fuel injector 2

(A) 31S-RL11 (BK/YE)
(B) 15-RL11 (GN/YE)

C806

67020

F02628

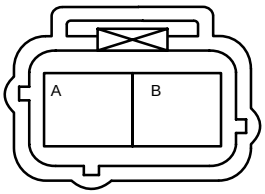

Y110
Fuel injector 3


(A) 31S-RL12 (BK/BU)
(B) 15-RL12 (GN/BU)

C807

14A584

before 11/2004


F07065

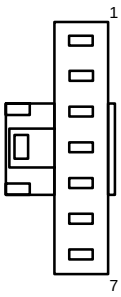

(1) 34-AD7A (BU/RD)
34-AD7B (BU/RD)
34-AD7C (BU/RD)
(2) 33-AD8A (YE/BU)
33-AD8B (YE/BU)
33-AD8C (YE/BU)
(3) 32-AD6A (WH)
32-AD6B (WH)
32-AD6C (WH)

as of 11/2004

F10096

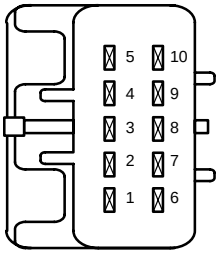


(4)
(5)
(6)
(7)

A355
Exterior mirror, driver side

C808

14A584

F06112

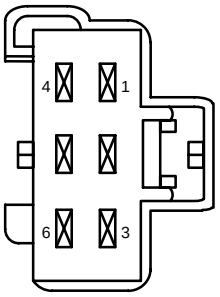


(1) 34-AD7B (BU/RD)
(2 33-AD8B (YE/BU)
(3) 32-AD6B (WH)
(4) 15S-HB35A (GN/BK)
(5) 31-HB35A (BK)
(6)
(7)
(8) 32-AD27 (WH/GN)
(9) 33-AD27 (YE/GN)

A355
Exterior mirror,
driver side

C809 (BK)

14401

F32006

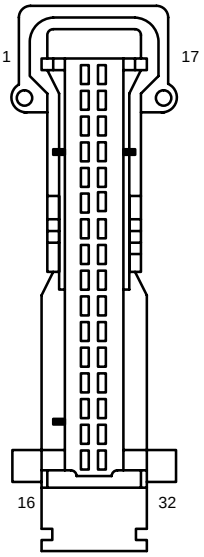

(1) 15S-LD13 (GN/OG)
(2) 91S-GE56A (BK/YE)
(3) 8-GL37 (WH/GN)
(4) 15-GG14 (GN/RD)
(5) 10-GL37 (GY/OG)
(6) 91-GG14 (BK/OG)
(7) 9-GA7 (BN/RD)
(8) 8-GA7 (WH/RD)
(9) 29S-GG14 (OG)
(10) 91S-BB6 (BK/YE)
(11)
(12)
(13) 9-RJ30 (BN)
(14) 8-RJ30 (WH)
(15) 75-GG14 (YE/BU)
75-GG14A (YE/BU)
(16) 15S-LD7 (GN/BU)
(17) 5-EC7H (BU/RD)
(18) 4-EC7H (GY/RD)
(19)
(20)
(21)
(22) 5-EC10 (BU)
(23) 4-EC10 (GY)
(24)
(25) 31S-TA32 (BK/WH)
(26)
(27) 91S-GG9 (BK/RD)
(28)
(29) 91S-PG6 (BK/YE)
(30) 91S-GE56 (BK/YE)
(31) 7-RJ30 (YE)
(32) 29-GG14 (OG)


A30
Instrument cluster

C810

14K733

before 11/2004


F02012

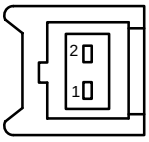

N1
Brake fluid level switch

as of 11/2004

F02058




(1) 91-GC7 (BK/BU)
(2) 31S-GC6 (BK/YE)

C811

14014

F01005




(1) 29S-GL26 (OG/GN)

H5
Anti–theft alarm horn

C814

14K733

F02058




(1) 8-CF32 (WH)
8-CF32A (WH)
8-CF32B (WH)
(2) 9-CF32 (BN)
9-CF32A (BN)
9-CF32B (BN)

B15
Wheel speed sensor, LH side front

C815

14K733

F02058




(1) 8-CF38 (WH/RD)
8-CF38A (WH/RD)
8-CF38B (WH)
(2) 9-CF38 (BN/RD)
9-CF38A (BN/RD)
9-CF38B (BN)

B14
Wheel speed sensor, RH side front

C816

14014

F02058



B17
Wheel speed sensor, LH side rear


(1) 8-CF34 (WH/BU)
8-CF34B (WH)

(2) 9-CF34 (BN/BU)
9-CF34B (BN)

C817

14014

F02058



B16
Wheel speed sensor, RH side rear


(1) 8-CF40 (WH/GN)
8-CF40B (WH)

(2) 9-CF40 (BN/GN)
9-CF40B (BN)

C818


67020

F06294

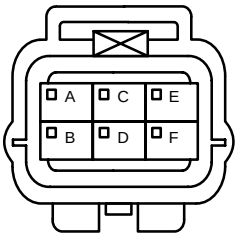

67070

F06298

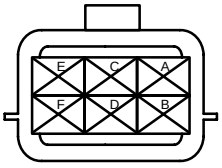

(A)

(B)

(C) 31S-GC20 (BK/OG)

(D) 15S-FA6A (GN/YE)


(E) 31-FA6 (BK)

(F) 15-RR4 (GN/BU)

C819

67020

F02634



(A) 15S-FA6A (GN/YE)


(B) 31-FA6 (BK)

Y16
A/C Compressor clutch

C820 (GY)

14014

F02518

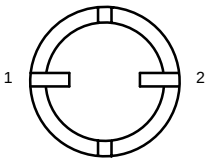

E57
Luggage compartment lamp

(1) 31S-LB25A (BK/BU)


(2) 29-LB25 (OG/BU)

C821

14K138


before 11/2004

F07065

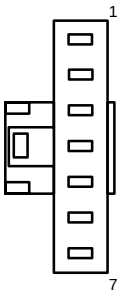

as of 11/2004

F10096

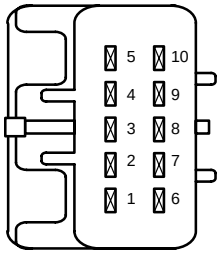

(1) 10-AD10 (GY/BK)
34-AD10 (BU/YE)

(2) 91-AD10 (BK/RD)
33-AD11 (YE/VT)

(3) 8-AD10 (WH/BK)
32-AD9 (WH/GN)

(4)

(5)

(6)


(7)

A356
Exterior mirror, passenger side

C822

14K138

F06112

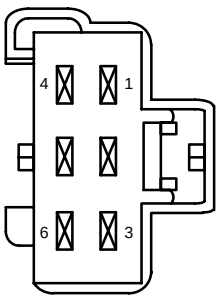

(1) 10-AD10A (GY/BK)

(2) 91-AD10A (BK/RD)

(3) 8-AD10A (WH/BK)

(4) 15S-HB36A (GN/OG)

(5) 31-HB36A (BK)

(6)

(7)

(8) 32-AD28 (WH/GN)


(9) 33-AD28 (YE/GN)

A356
Exterior mirror, passenger side

C823

12A690

F02070

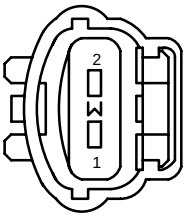

B110
Output Shaft Speed (OSS) sensor


(1) 8-RJ29 (WH/BU)

(2) 9-RJ29 (BN/BU)

C824

14014

F02588

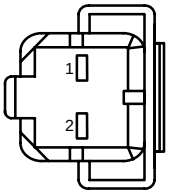

N82
Brake pedal position switch


(1) 91S-PG6B (BK/YE)

(2) 91-PG6 (BK/YE)

C825

14014

F04272

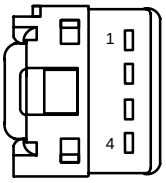

N81
Clutch pedal position switch

(1)

(2) 91S-BB6 (BK/YE)
91S-BB6A (BK/YE)


(3) 91-BB6 (BK/YE)

(4)

C826

14014

F06126

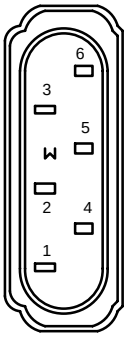

(1) 5-EC12 (BU/RD)
(2) 4-EC12 (GY/RD)
(3) 7-CF67 (YE/RD)
(4)
(5) 9-CF67 (BN/RD)
(6)


B174
Yaw rate sensor

C828

14K733

before 11/2004


F02566



M74
Two–way washer pump motor


as of 11/2004

F02154

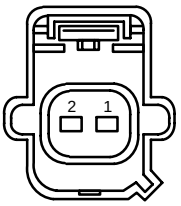

(1) 33-KA34 (YE/BK)
(2) 32-KA34 (WH/BK)

F47006

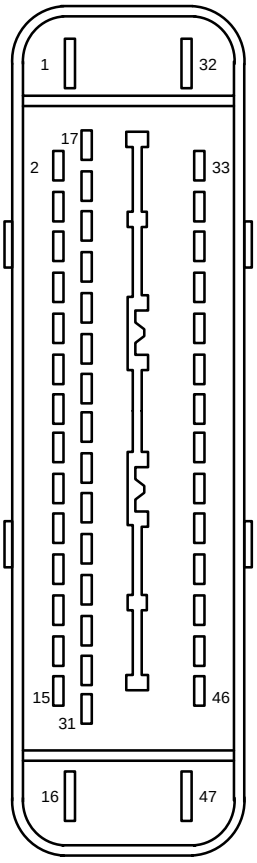

C830

14K733


(1) 30-CF13A (RD)
(2)
(3) 8-CE8 (WH/BU)
(4) 15-CF6A (GN/YE)
(5) 9-CF1 (BN/RD)
(6) 10-CE8 (GY/VT)
(7) 7-CF1 (YE/RD)
(8) 31S-CF54 (BK/WH)
(9)
(10)
(11) 4-EC7K (GY/RD)
(12)
(13)
(14)
(15) 5-EC7K (BU/RD)
(16) 31-CF6 (BK)
(17)
(18)
(19)
(20)
(21)
(22)
(23)
(24)
(25) 5-EC12 (BU/RD)
(26)
(27)
(28)
(29) 4-EC12 (GY/RD)
(30)
(31)
(32) 30-CF6A (RD)
(33) 9-CF38A (BN/RD)
(34) 8-CF38A (WH/RD)
(35)
(36) 8-CF34A (WH/BU)
(37) 9-CF34A (BN/BU)
(38) 91S-CF54 (BK/WH)
(39)
(40)
(41)
(42) 9-CF40A (BN/GN)
(43) 8-CF40A (WH/GN)
(44)
(45) 8-CF32A (WH)
(46) 9-CF32A (BN)
(47) 31-CF13A (BK)

A176
Electronic Stability Program (ESP) module

C831

14K733

F26036

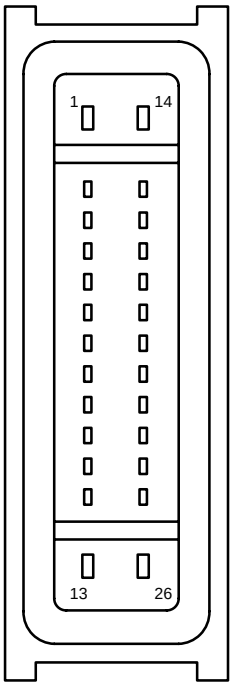


(1)	30-CF6 (RD)	(14)	30-CF13 (RD)
(2)	9-CF34 (BN/BU)	(15)	
(3)	8-CF34 (WH/BU)	(16)	
(4)		(17)	
(5)	8-CF38 (WH/RD)	(18)	
(6)	9-CF38 (BN/RD)	(19)	
(7)		(20)	15-CF6 (GN/YE)
(8)	9-CF32 (BN)	(21)	5-EC7F (BU/RD)
(9)	8-CF32 (WH)	(22)	
(10)		(23)	4-EC7F (GY/RD)
(11)	8-CF40 (WH/GN)	(24)	
(12)	9-CF40 (BN/GN)	(25)	
(13)		(26)	31-CF13 (BK)

A7
ABS module

C833

12A690

F06272

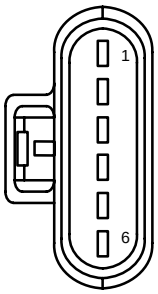


(1) 9-RL7 (BN/GN)
(2)
(3) 91S-RL7 (BK/GN)
(4) 15S-RL7 (GN/BK)
(5) 7-RL7 (YE/GN)
(6) 8-RL7 (WH/GN)

Y2
Exhaust Gas Re-circulation (EGR) valve

C836

14K733

F10080

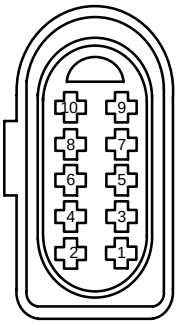


(1)	15S-LE15 (GN/BK)	(6)	31-LE31 (BK)
(2)	15S-LE16 (GN/OG)	(7)	
(3)	49S-LG11 (BU/OG)	(8)	
(4)	29S-LF7 (OG/BU)	(9)	
(5)		(10)	

E1
Headlamp, LH side

C837

14K733

F10080

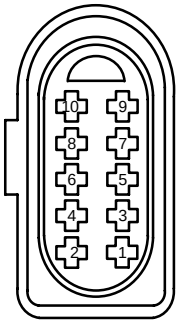


(1) 15S-LE22 (GN/OG)
(2) 15S-LE23 (GN/WH)
(3) 49S-LG18 (BU)
(4) 29S-LF16 (OG/GN)
(5)
(6) 31-LE30 (BK)
(7)
(8)
(9)
(10)

E7
Headlamp, RH side

C845 (BK)

14335

F03182

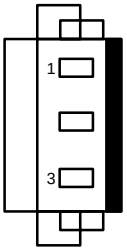


E31
Vanity mirror lamp, RH side

(1) 91-LB23 (BK/WH)
(2)
(3) 29-LB23 (OG/WH)

C846

14401

F02588

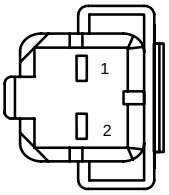


E28
Glove compartment lamp

(1) 29-LB8 (OG)
29-LB8A (OG)
(2) 31-LB8 (BK)

C841 (GY)

14401

F02019

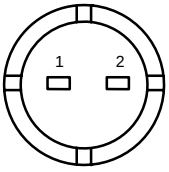


E61
Footwell lamp, LH front

(1) 29-LC11 (OG/WH)
(2) 31S-LC11 (BK/WH)

C844 (BK)

14335

F03182

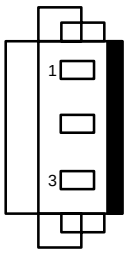


E30
Vanity mirror lamp, LH side

(1) 91-LB16 (BK/RD)
(2)
(3) 29-LB16 (OG/GN)

C848

14K733

F04190

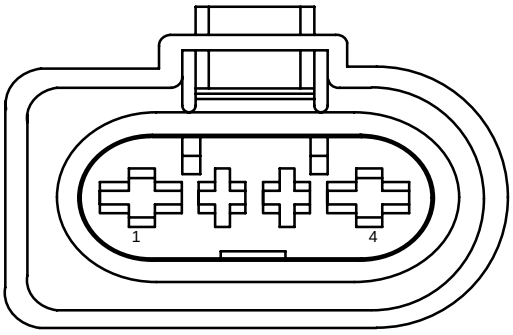


(1) 32-KA11 (WH/BK)
(2) 32-KA10 (WH/GN)
(3) 31S-KA9 (BK/OG)
(4) 31-KA9B (BK)

M111
Windshield wiper motor

C849 (GY)

14401

F02019

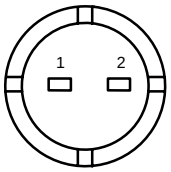


E62
Footwell lamp, RH front

(1) 29-LC23 (OG/WH)
(2) 31S-LC23 (BK/WH)

C857

F01002

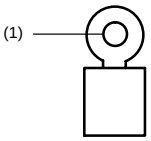


(1) 15S-RD15D (GN/OG)

P16
Glow plug 1

C854

F01002

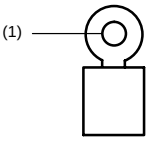


(1) 15S-RD15A (GN/OG)

P19
Glow plug 4

C858

12A690

F02570

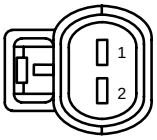


(1) 15S-RL50 (GN/BU)
(2) 91S-RL50 (BK/BU)

Y165
Fuel metering valve

C855

F01002

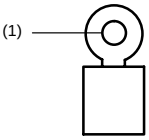


(1) 15S-RD15B (GN/OG)

P18
Glow plug 3

C859

12A690

F02570

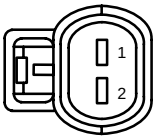


(1) 15S-RL42 (GN/BU)
(2) 91S-RL42 (BK/BU)

Y47
Fuel pressure solenoid valve

C856

F01002

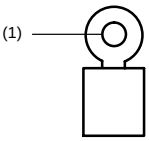

(1) 15S-RD15C (GN/OG)


P17
Glow plug 2

C860

12A690


before 11/2004

F03310

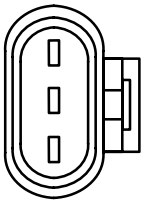

as of 11/2004

F02570

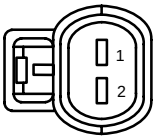

M252
EGR throttle actuator


(1) 15S-RJ37 (GN/BK)
(2) 15-RJ37 (GN/BK)

C864

12A690


before 11/2004

F03015

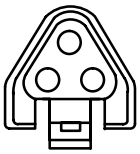

as of 11/2004

F02572

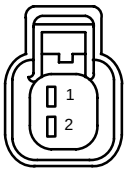


N394
Reversing lamp switch

(1) 15S-LG9 (GN/BK)
(2) 15-LG28 (GN/WH)
(3)

C865

67070

F02620

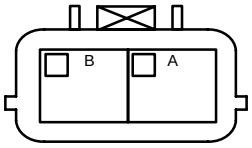


N152
Neutral position switch

(A) 91-TA39 (BK/OG)
(B) 91S-TA39 (BK/OG)

C866 (BK)

12A690


F03015

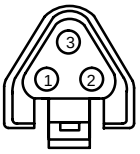

(1) 15S-LG9A (GN/BK)
(2)
(3) 15-LG28A (GN/WH)

67070

F02622

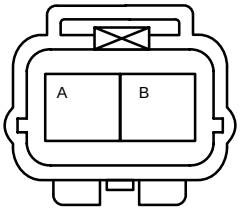


(A) 15S-LG9A (GN/BK)
(B) 15-LG28A (GN/WH)

N394
Reversing lamp switch

C870

12A690

F03312

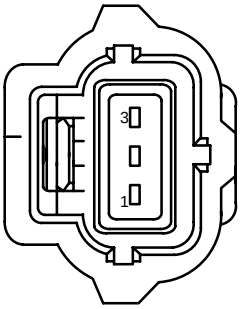


(1) 4-EB6 (GY)
4-EB6A (GY)
(2) 5-EB6 (BU)
5-EB6A (BU)
(3) 30-BA10 (RD)

O5
Generator

C871

14A280

F01014




O5
Generator

(1) 30-BA6 (RD)
30-BA6A (RD)

C882

14K733

F04170

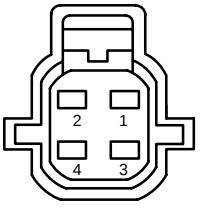


N126
A/C high–pressure switch

(1) 91-FA38 (BK/OG)
(2) 91S-PA13 (BK/BU)
(3) 91-PA13 (BK/BU)
(4) 91S-FA17 (BK/RD)

C890
14335

F02009




(1) 31S-LB12 (BK/YE) + 31S-LC17 (BK/YE)
(2) 91-LC7 (BK/BU) 91-LC7A (BK/BU)

E18
Interior lamp, front

C891
14335

F02009




(1) 31S-LC17 (BK/YE)
(2) 91-LC17 (BK/YE)

E19
Interior lamp, rear

C892
14335

F01005




(1) 29-LC17 (OG/YE)

E19
Interior lamp, rear

C893
14335

F01005




(1) 29-LC7A (OG/BU) 29-LC7B (OG/BU)

E18
Interior lamp, front

C895 (BK)
12A690

F04217

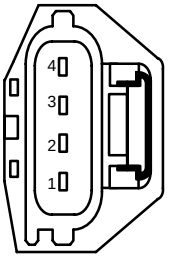


(1) 8-RJ40 (WH/GN)
(2) 7-RJ40 (YE/GN)
(3) 8-RJ17 (WH/VT)
(4) 9-RJ40 (BN/GN)

B142
Temperature manifold absolute pressure sensor

C896 (BK)
14401

F09024

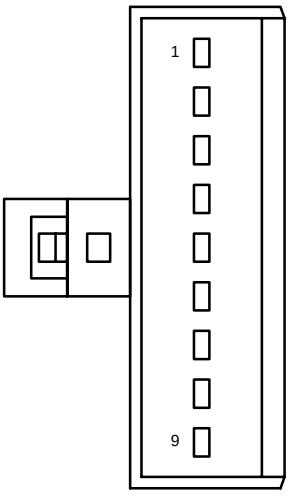


(1) 15S-JA8 (GN/RD)
(2) 91S-JA8 (BK/OG)
(3)
(4) 9-PG13 (BN)
(5) 8-PG13 (WH)
(6) 91S-GJ7 (BK/BU)
(7) 91-PG30 (BK/WH)
(8)
(9)

P13
Clock spring

C897

14K733

F02572

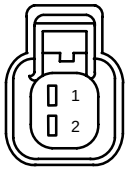


N21
Engine compartment switch

(1) 91-GL7 (BK)
(2) 31S-GL7 (BK/YE)

C904

12A690

F02066

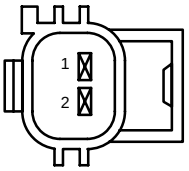

(1) 9-RJ19 (YE)
(2) 8-RJ19 (BK)

B106
Knock sensor 2

C900


67020 **67070**

(A) 7-FA88 (YE/VT)
7-FA88A (YE/VT)
(2) 9-FA88 (BN/WH)
9-FA88A (BN/WH)

C903

12A690

F02066

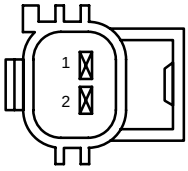


(1) 9-RJ18 (YE)
9-RJ18 (BN/YE)
(2) 8-RJ18 (WH/BK)
8-RJ18 (BK)

B105
Knock sensor 1

C906

12A690

F03308

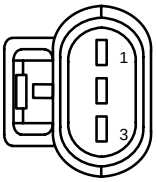


(1) 7-RJ3 (YE/VT)
(2) 8-RJ3 (WH/VT)
(3) 9-RJ3 (BN/WH)

B41
Camshaft position sensor

C911

14401

F01005




(1) 29S-LK15 (OG)

R42
Cigar lighter, front

C912

14401

F02009



(1) 31-HA6 (BK)
(2) 29-HA6 (OG/YE)

R42
Cigar lighter, front

C914 (BK)

9H589

F02109



(1) 8-RR5 (WH)
(2) 15-RR5 (GN/YE)

T6
Ignition coil, cylinder 1

C915 (BK)

9H589

F02109



(1) 8-RR6 (WH/RD)
(2) 15-RR6 (GN/BU)

T7
Ignition coil, cylinder 2

C916 (BK)

9H589

F02109



(1) 8-RR7 (WH/BU)
(2) 15-RR7 (GN/RD)

T8
Ignition coil, cylinder 3

C917 (BK)

9H589

F02109




(1) 8-RR8 (WH/GN)
(2) 15-RR8 (GN/BK)

T9
Ignition coil, cylinder 4

C920

13927

F01005




(1) 91-JA48 (BK/GN)

A42
Driver air bag unit

C921

F05113

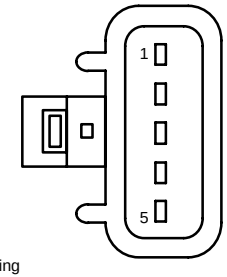


(1)
(2)
(3)
(4) 91S-GJ7 (BK/BU)
(5) 91-PG30 (BK/WH)

P13
Clock spring

C922

13927

F01014



(1) 91-PG30A (BK/WH)

N54
Horn switch

C923

13927

F01005




(1) 91S-GJ7 (BK/BU)

N54
Horn switch

C924

12A690

F06110

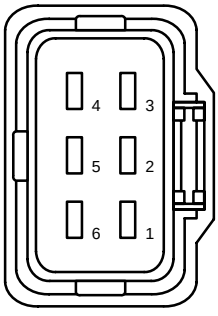


(1) 91S-PA51 (BK/OG)
(2) 15-PA51 (GN/RD)
(3) 91S-PA52 (BK/GN)
(4) 91S-PA53 (BK/RD)
(5) 15-PA52 (GN/BK)
(6) 91S-PA54 (BK/WH)

M251
EGR stepper motor

C925

12A690

F02586




(1) 31S-RL2 (BK/OG)
(2) 15-RL2 (GN/RD)

Y1
Evaporative emission canister purge valve

C926 (BK)

12A690

F03290

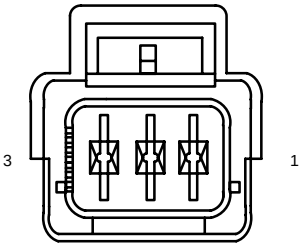


(1) 9-RJ4 (BN/RD)
(2) 8-RJ4 (WH/RD)
(3) 7-RJ4 (YE/RD)

B43
Crankshaft position sensor

C928

12A690

F02070

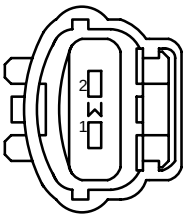


(1) 8-TA27 (WH/VT)
(2) 9-TA27 (BN/WH)

B44
Turbine Shaft Speed (TSS) sensor

C930

14401

F01005




(1) 31S-GE44 (BK/RD)

N63
Parking brake switch

C933 (GY)

14014

F03284

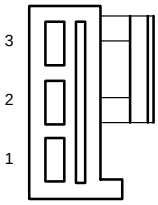


(1) 91S-RP3 (BK/RD)
(2) 91S-RH5 (BK/BU)
(3)

N316
Inertia Fuel Shut-off (IFS) switch

C934 (BU)

12A690

F04082

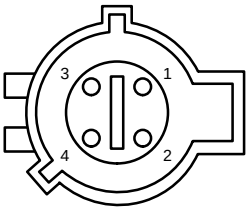

(1) 15-RJ14 (GN/YE)
(2) 91S-RJ26 (BK/GN)
(3) 9-RJ15 (BN/RD)
(4) 8-RJ26 (WH/GN)


B192
Catalyst monitor sensor

C937

14A584


before 11/2004

F04232

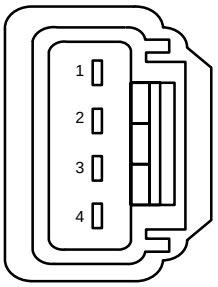

as of 11/2004

F04272

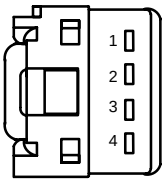

(1) 8-MD28 (WH)
(2) 8-MD28A (WH)
(3) 10-MD28A (GY)
(4) 10-MD28 (GY)

Y101
Speaker 1, LH front


Y103
Speaker 1, RH front

C938

14K138


before 11/2004

F04232

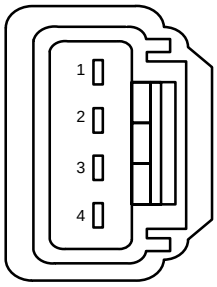

as of 11/2004

F04272

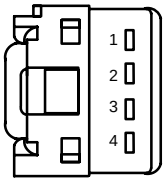

(1) 8-MD28 (WH)
(2) 8-MD28A (WH)
(3) 10-MD28A (GY)
(4) 10-MD28 (GY)

Y103
Speaker 1, RH front


Y101
Speaker 1, LH front

C940

14240


before 11/2004

F04232

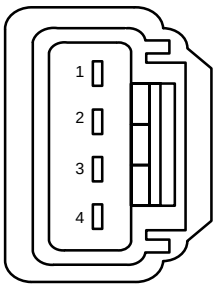

as of 11/2004

F04272

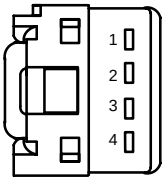

(1) 8-MD29B (WH/VT)
(2) 8-MD29C (WH/VT)
(3) 10-MD29C (GY/WH)
(4) 10-MD29B (GY/WH)


Y72
Speaker 1, RH rear door

C939

14240


before 11/2004

F04232

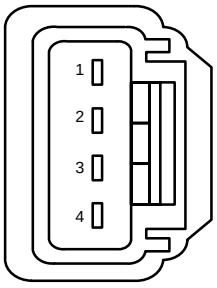

as of 11/2004

F04272

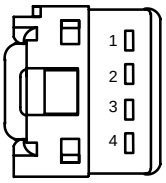


(1) 8-MD29 (WH/VT)
(2) 8-MD29A (WH/VT)
(3) 10-MD29A (GY/WH)
(4) 10-MD29 (GY/WH)

Y70
Speaker 1, LH rear door

C941

14A584

F03298

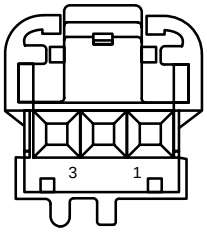

(1) 8-MD28A (WH)
(2)
(3) 10-MD28A (GY)


Y102
Speaker 2, LH front

Y104
Speaker 2, RH front

C943

14K138

F03298

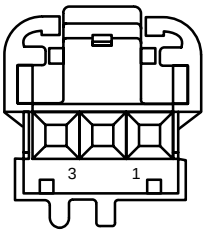

(1) 8-MD28A (WH)
(2)
(3) 10-MD28A (GY)


Y104
Speaker 2, RH front

Y102
Speaker 2, LH front

C948

14K733

F08274

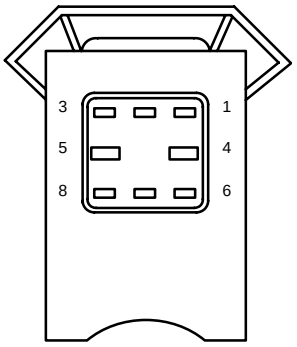


(1) 15S-RD15D (GN/OG)
(2) 15S-RD15C (GN/YE)
(3) 8-EE14 (WH/BU)
(4) 30-PE13 (RD)
(5) 31-RH15 (BK)
(6) 15S-RD15B (GN/BU)
(7) 15S-RD15A (GN/RD)
(8) 91S-RH15 (BK/YE)

A407
Glow plug control module (GPCM)

C945

12A690

F02580

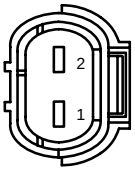


(1) 15S-PE8 (GN/RD)
(2) 31-PE8 (BK)

R32
Fuel heater

C949

17N400

F01005




(1) 31-HB19 (BK)

R19
Rear window heater

C950

17N400

F01005




(1) 15S-HB19 (BK)
15S-HB19A (BK)

R19
Rear window heater

C952

12A690

F02572

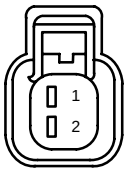


(1) 15S-FA6 (GN/YE)
(2) 31-FA6A (BK)

Y16
A/C Compressor clutch

C953

12A690

F03308

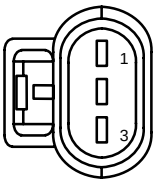


(1) 7-RJ37 (YE/GN)
(2) 9-RJ37 (BN/GN)
(3) 8-RJ37 (WH/GN)

B108
Boost pressure sensor

C954

12A690

F02570

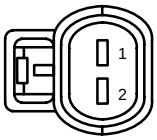

(1)
(2) 31S-GC21 (BK/GN)


N17
Oil pressure switch

C956 (GN)

12A690

F04124

B89
Pre–catalyst heated oxygen sensor (HO2S)

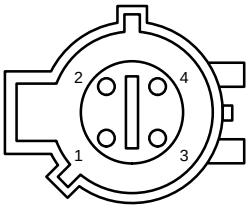


(1) 15-RJ25 (GN/RD)
(2) 91S-RJ26A (BK/GN)
(3) 9-RJ25A (BN/BU)
(4) 8-RJ25A (WH/BU)

C957

12A690

F02572

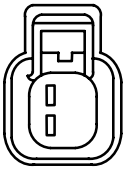


Y16
A/C Compressor clutch

(1) 31-FA6 (BK)
(2) 15S-FA6A (GN/YE)

C960

F04033

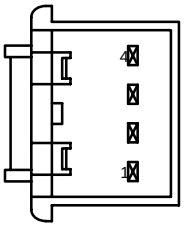


(1) 15-GN26 (GN/YE)
(2) 15-GN25 (GN/WH)
(3) 10-GN25 (GY/WH)
(4) 10-GN26 (GY)

H9
Buzzer

C965

14K733

F04195

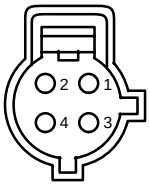


B308
A/C pressure sensor

(1) 9-FA88 (BN/WH)
(2) 7-FA88 (YE/VT)
(3) 8-FA88 (WH/VT)

C984

12A690

F03308

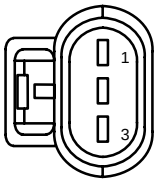


B196
Turbo geometry position sensor

(1) 9-RL22 (BN/YE)
(2) 7-RL22 (YE/BK)
(3) 8-RL22 (WH/BK)

C971 (GY)

17N400

F03196

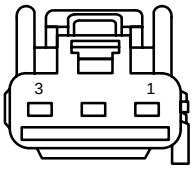


M9
Rear window wiper motor

(1) 29-KA28 (BK)
(2) 32-KA28 (BK)
(3) 31-KA28 (BK)

C1002

14K733

F05064

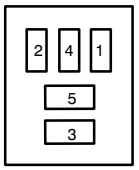

K33
Horn relay

(1) 30-GJ7 (RD)
(2) 91S-GJ7 (BK/BU)
(3) 30-GJ8 (RD)
(4)
(5) 29S-GJ1 (OG/BU)
29S-GJ1A (OG/BU)
29S-GJ1D (OG/BU)

C974

14K733

F02005




B73
Outside air temperature sensor

(1) 9-GE38 (BN/YE)
(2) 8-GE38 (WH/BK)

C1003

14K733

F05064

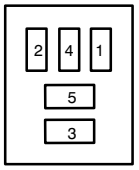


K273
Reversing lamps relay

(1) 15-LG45 (GN/BK)
(2) 91S-LG45 (BK/GN)
(3) 15-LG46 (GN/OG)
(4)
(5) 15-LG9 (GN/BK)

C978

12A690

F01016

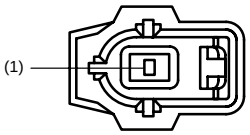


(1) 31S-GC20 (BK/OG)

N17
Oil pressure switch

C1004

14K733

F05064

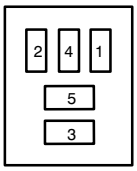


K403
Heat exchanger shutoff valve relay

(1) 15-FA78 (GN/WH)
(2) 31S-FA78 (BK/WH)
(3) 30-FA78 (RD)
(4)
(5) 15S-FA78 (GN/WH)

C1005

14K733

F05064

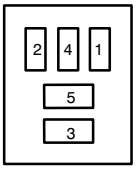


(1) 15-PE16 (GN/WH)
(2) 31-PE16 (BK)
(3) 30-PE17 (RD)
(4)
(5) 15S-PE8 (GN/RD)

K69
Fuel heater relay

C1011

14K733

F05064

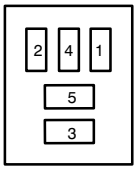


(1) 15-FA11 (GN/YE)
(2) 31S-FA11 (BK/YE)
(3) 30-FA2 (RD)
(4)
(5) 15S-FA6 (GN/YE)

K32
A/C Wide Open Throttle (WOT) relay

C1008

14K733

F05090

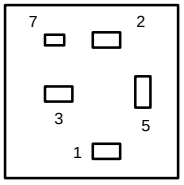


(1) 15S-BB7 (GN/BU)
(2) 31S-BB7 (BK/BU)
(3) 30-BB8 (RD)
(4)
(5) 15-DA3 (GN/RD)

K41
Ignition relay

C1013

14K733

F05051

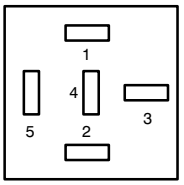


(1) 50-BB16 (GY/BK)
50-BB16C (GY/BK)
(2) 31S-BB16 (BK/RD)
(3) 30-BB17 (RD)
(4)
(5) 50-BB12 (GY)

K22
Starter relay

C1009

14K733

F05064

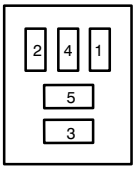


(1)
(2)
(3)
(4) 31-KA21B (BK)
(5)

C1014

14K733

F05051

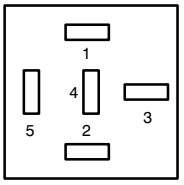


(1) 30-RH9 (RD)
(2) 91S-RH9 (BK/BU)
91S-RH9A (BK/BU)
(3) 30-RH10 (RD) +
30-RH9 (RD)
(4)
(5) 30S

K13
Power hold relay

C1010

14K733

F05051

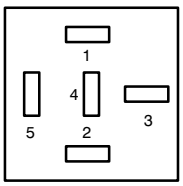


(1) 30-FA23 (RD)
(2) 31S-FA23 (BK/BU)
(3) 30-FA24 (RD)
(4)
(5) 15-FA18 (GN/OG)

K14
Blower motor relay

C1017

F05051

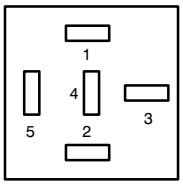


(1) 15
(2) 91S
(3) 30
(4)
(5) 15S

K1
Heated rear window relay

C1019

F05064

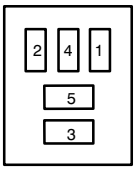


(1) 15
(2) 91S
(3) 30
(4)
(5) 15S

K4
Fuel pump relay

C1100

14014

F05064

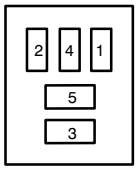

(1) 15S-KA28 (GN/BU)
(2) 31-KA28 (BK)
(3) 29-KA28 (OG/BU)
(4)
(5) 29S-KA28 (OG/BU)

K64
Rear window
wiper relay