FRAME AND BUMPERS

CONTENTS

page

FRAME 1

FRAME

INDEX

page

REMOVAL AND INSTALLATION
FRONT TOW HOOK BRACKET 1

page

REAR TOW HOOK BRACKET 1

REMOVAL AND INSTALLATION

FRONT TOW HOOK BRACKET

REMOVAL

(1) Hoist and support vehicle. Refer to Group 0, Lubrication and Maintenance, for proper lifting procedures.

(2) Remove screws holding the bottom of the front fascia to the lower radiator crossmember.

(3) Remove front tow hook eyelet from front tow hook bracket.

(4) Support engine and transaxle assembly using suitable support stand.

(5) Remove bolts holding front tow hook bracket to lower radiator crossmember.

(6) Separate front tow hook bracket from vehicle.

INSTALLATION

(1) Position front tow hook bracket to vehicle.

(2) Install bolts to hold front tow hook bracket to lower radiator crossmember.

(3) Remove support stand from under engine and transaxle assembly.

(4) Install front tow hook eyelet to front tow hook bracket.

(5) Install screws to hold the bottom of the front fascia to the lower radiator crossmember.

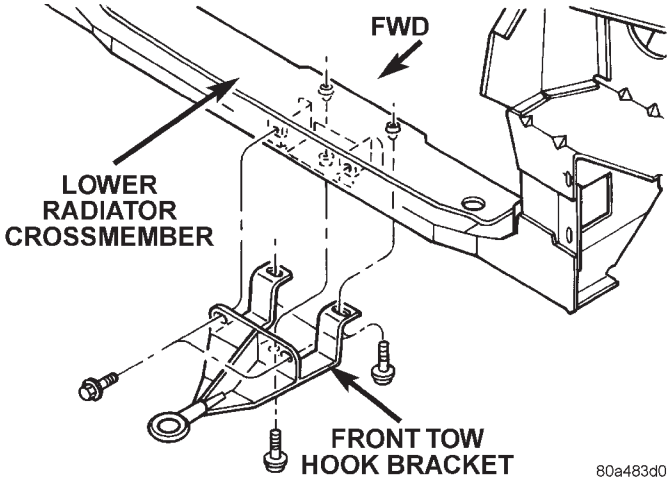

Fig. 1 Front Tow Hook Bracket

(6) Lower vehicle.

REAR TOW HOOK BRACKET

REMOVAL

(1) Hoist and support vehicle. Refer to Group 0, Lubrication and Maintenance, for proper lifting procedure.

(2) Remove bolts holding rear tow hook bracket to rear frame rail (Fig. 2).

REMOVAL AND INSTALLATION (Continued)

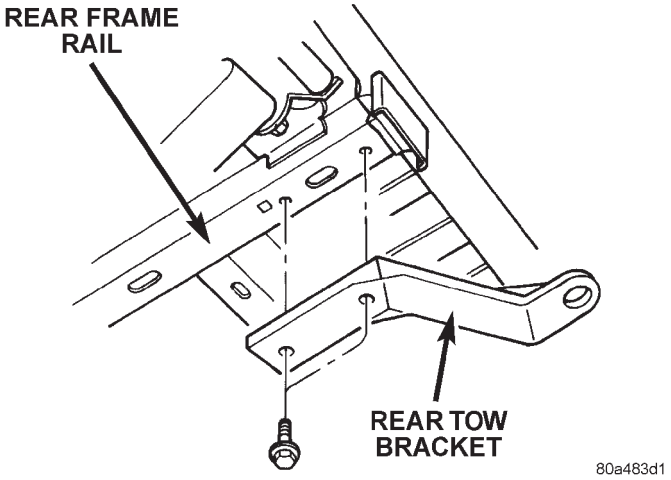

Fig. 2 Rear Tow Hook Bracket

(3) Separate rear tow hook bracket from vehicle.

INSTALLATION

(1) Position rear tow hook bracket on vehicle.

(2) Install bolts to hold rear tow hook bracket to rear frame rail.

(3) Lower vehicle.