BODY

CONTENTS

	page		page
BODY COMPONENT SERVICE	**3**	**SEATS**	**1**

SEATS

INDEX

page

REMOVAL AND INSTALLATION
BENCH SEAT BACK COVER 2
HEAD RESTRAINT ESCUTCHEON 1
HEAD RESTRAINT SLEEVE 2
HEAD RESTRAINT 1

REMOVAL AND INSTALLATION

HEAD RESTRAINT

REMOVAL

(1) Lift head restraint to top of travel.
(2) Depress lock button on side of sleeve at top of seat back (Fig. 1).
(3) Pull head restraint from top of seat back.

INSTALLATION

(1) Position head restraint to seat.
(2) Depress lock button on side of sleeve at top of seat back.
(3) Insert head restraint into sleeves at top of seat back.

HEAD RESTRAINT ESCUTCHEON

REMOVAL

(1) Remove head restraint from seat.
(2) Remove escutcheon from head restraint sleeve (Fig. 2).
(3) Remove head restraint retainer from sleeve.
(4) Separate escutcheon and retainer from vehicle.

INSTALLATION

(1) Position escutcheon and retainer to seat.
(2) Install retainer to sleeve.
(3) Install escutcheon to sleeve.
(4) Install head restraint to seat.

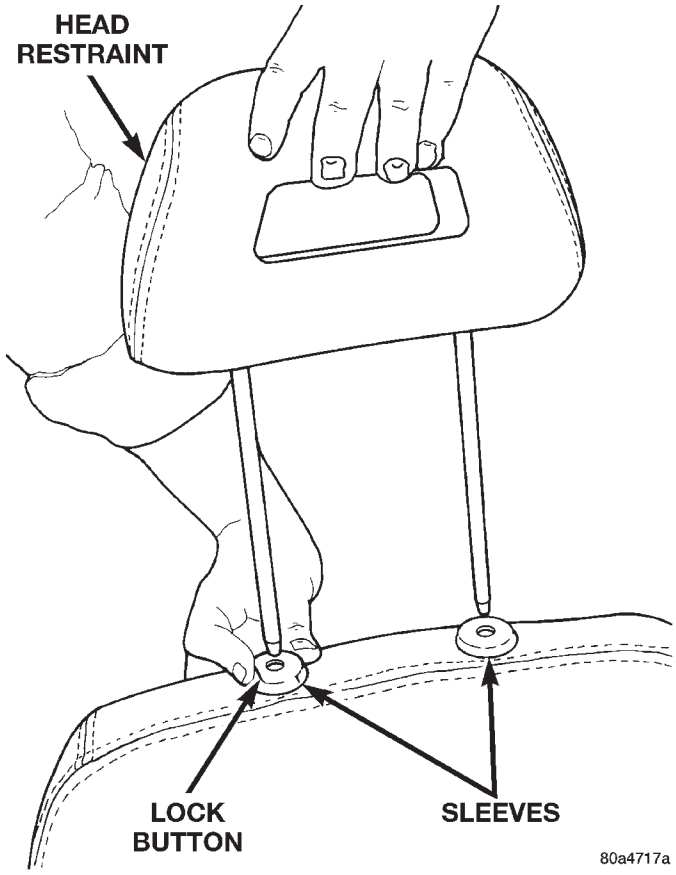

Fig. 1 Head Restraint—Bucket Seat

REMOVAL AND INSTALLATION (Continued)

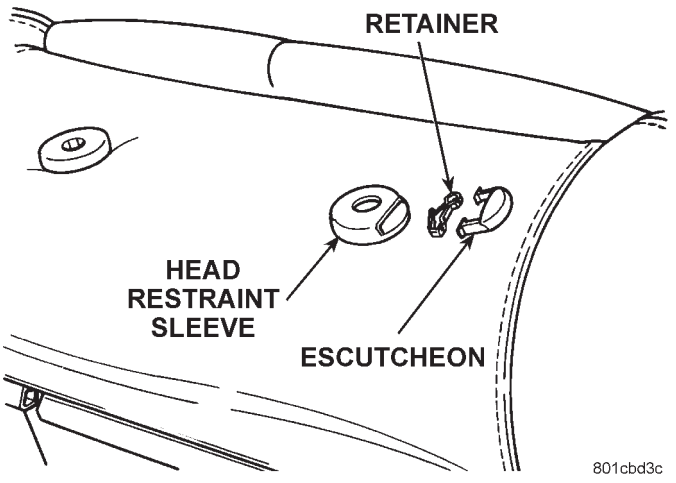

Fig. 2 Head Restraint Escutcheon and Retainer

HEAD RESTRAINT SLEEVE

REMOVAL

(1) Remove head restraint.

(2) Disengage closure holding bottom of trim cover together.

(3) Reach under trim cover through opening at bottom of seat back.

(4) Pinch retainer barbs on middle of head restraint sleeve together (Fig. 3).

(5) Pull head restraint sleeve upward and out the top of the seat back frame guide tube.

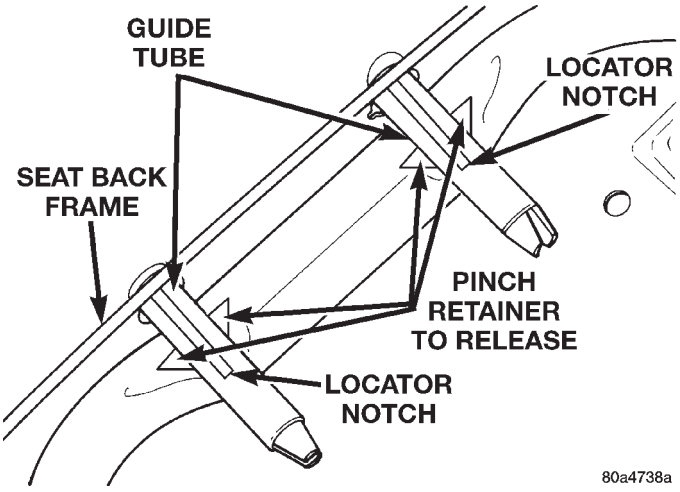

Fig. 3 Head Restraint Sleeve Removal

INSTALLATION

(1) Insert head restraint sleeve into guide tube at top of seat back.

(2) Align locator rib to locator rib notch in guide tube (Fig. 4).

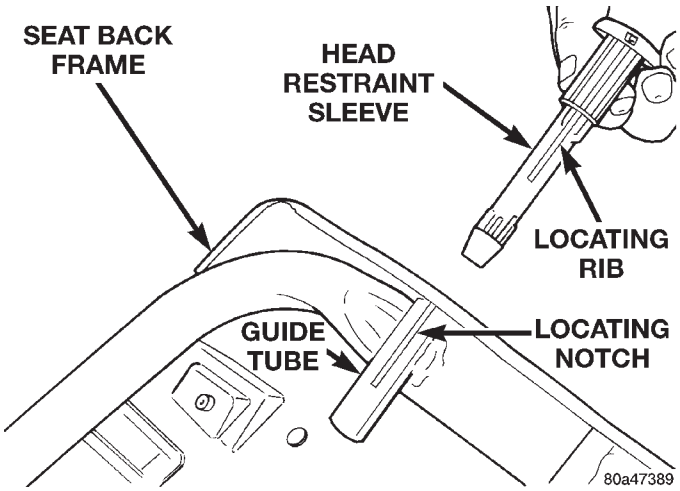

Fig. 4 Head Restraint Sleeve Installation

(3) Push head restraint sleeve downward until retainer clicks into lock position.

(4) Engage closure to hold bottom of trim cover together.

(5) Install head restraint.

BENCH SEAT BACK COVER

REMOVAL

(1) Remove screws holding the bottom of the bench seat back cover to the seat frame (Fig. 5).

(2) Disengage hooks holding top of seat back cover to seat back frame.

(3) Separate seat back cover from seat.

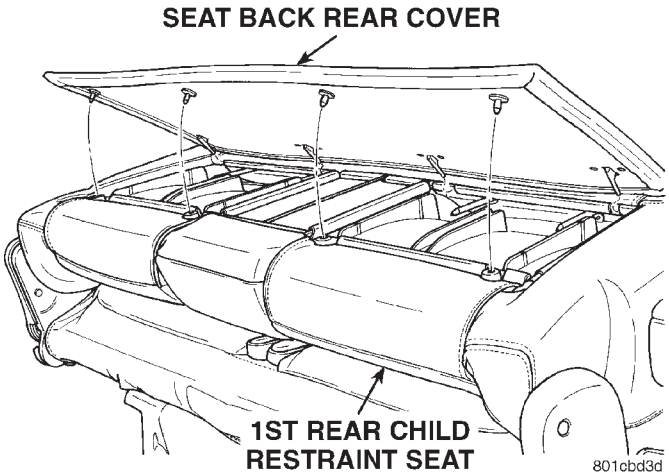

Fig. 5 Bench Seat Back Cover

INSTALLATION

(1) Place seat back cover in position on seat.

(2) Engage hooks to hold top of seat back cover to seat back frame.

(3) Install screws to hold bottom of bench seat back cover to seat frame.

BODY COMPONENT SERVICE

INDEX

page

REMOVAL AND INSTALLATION
GEARSHIFT CONSOLE 3
LIFTGATE CHMSL ACCESS PANEL 3

REMOVAL AND INSTALLATION

GEARSHIFT CONSOLE

REMOVAL

(1) Lift the parking brake lever to the full up position (Fig. 1).

(2) Carefully pull the base of the gearshift boot off the top of the gearshift console.

(3) Remove the four (4) screws from the top of the gearshift console (Fig. 2).

(4) Tilt the gearshift boot and carefully push the boot through the opening in the gearshift console.

(5) Separate console from vehicle.

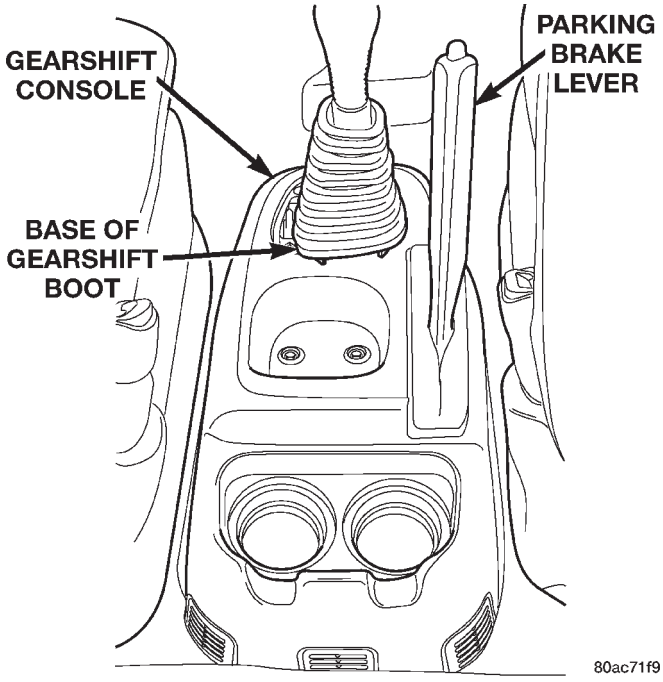

Fig. 1 Console, Parking Brake Lever, and Gearshift Boot

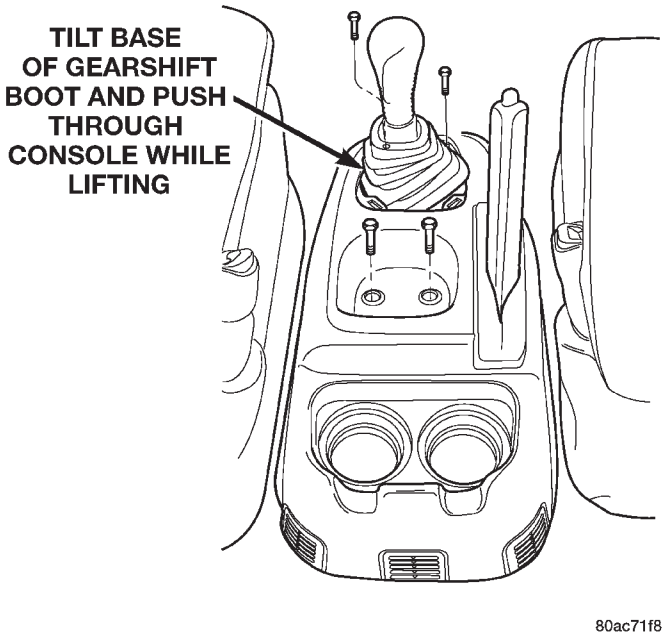

Fig. 2 Gearshift Console and Boot Removal

INSTALLATION

(1) Tilt the gearshift boot and carefully push the boot through the gearshift console.

(2) Install screws to hold gearshift console to gearshift mechanism.

(3) Install gearshift boot and carefully push the clips into the three (3) slots in the gearshift console.

LIFTGATE CHMSL ACCESS PANEL

REMOVAL

(1) Using a trim stick (C-4755), disengage clip holding CHMSL access panel to liftgate trim panel (Fig. 3).

(2) Disengage hooks on CHMSL access cover from liftgate trim panel.

(3) Separate access panel from vehicle.

REMOVAL AND INSTALLATION (Continued)

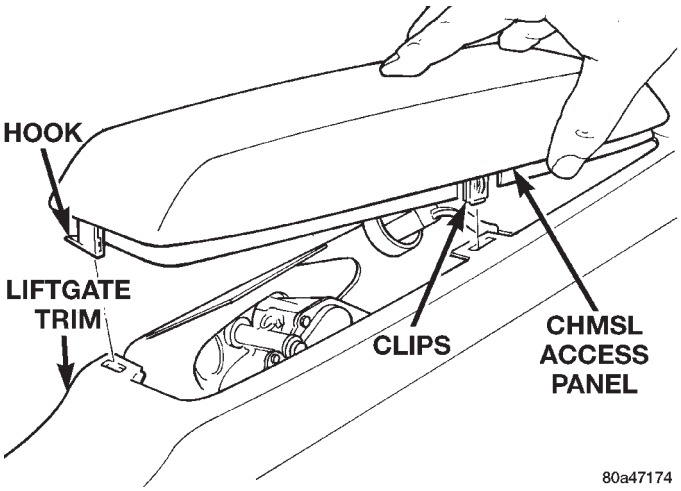

Fig. 3 CHMSL Access Panel

INSTALLATION

(1) Place access panel in position on vehicle.

(2) Engage hooks on CHMSL access cover to liftgate trim panel.

(3) Engage clip to hold CHMSL access panel to liftgate trim panel.