DAY-NIGHT MIRROR

Component Index

Ambient Air Temperature Sensor
Fuse Block-Rear
Fuse Block-Underhood
Inside Rearview Mirror

Preliminary

DAY-NIGHT MIRROR

Circuit Schematic

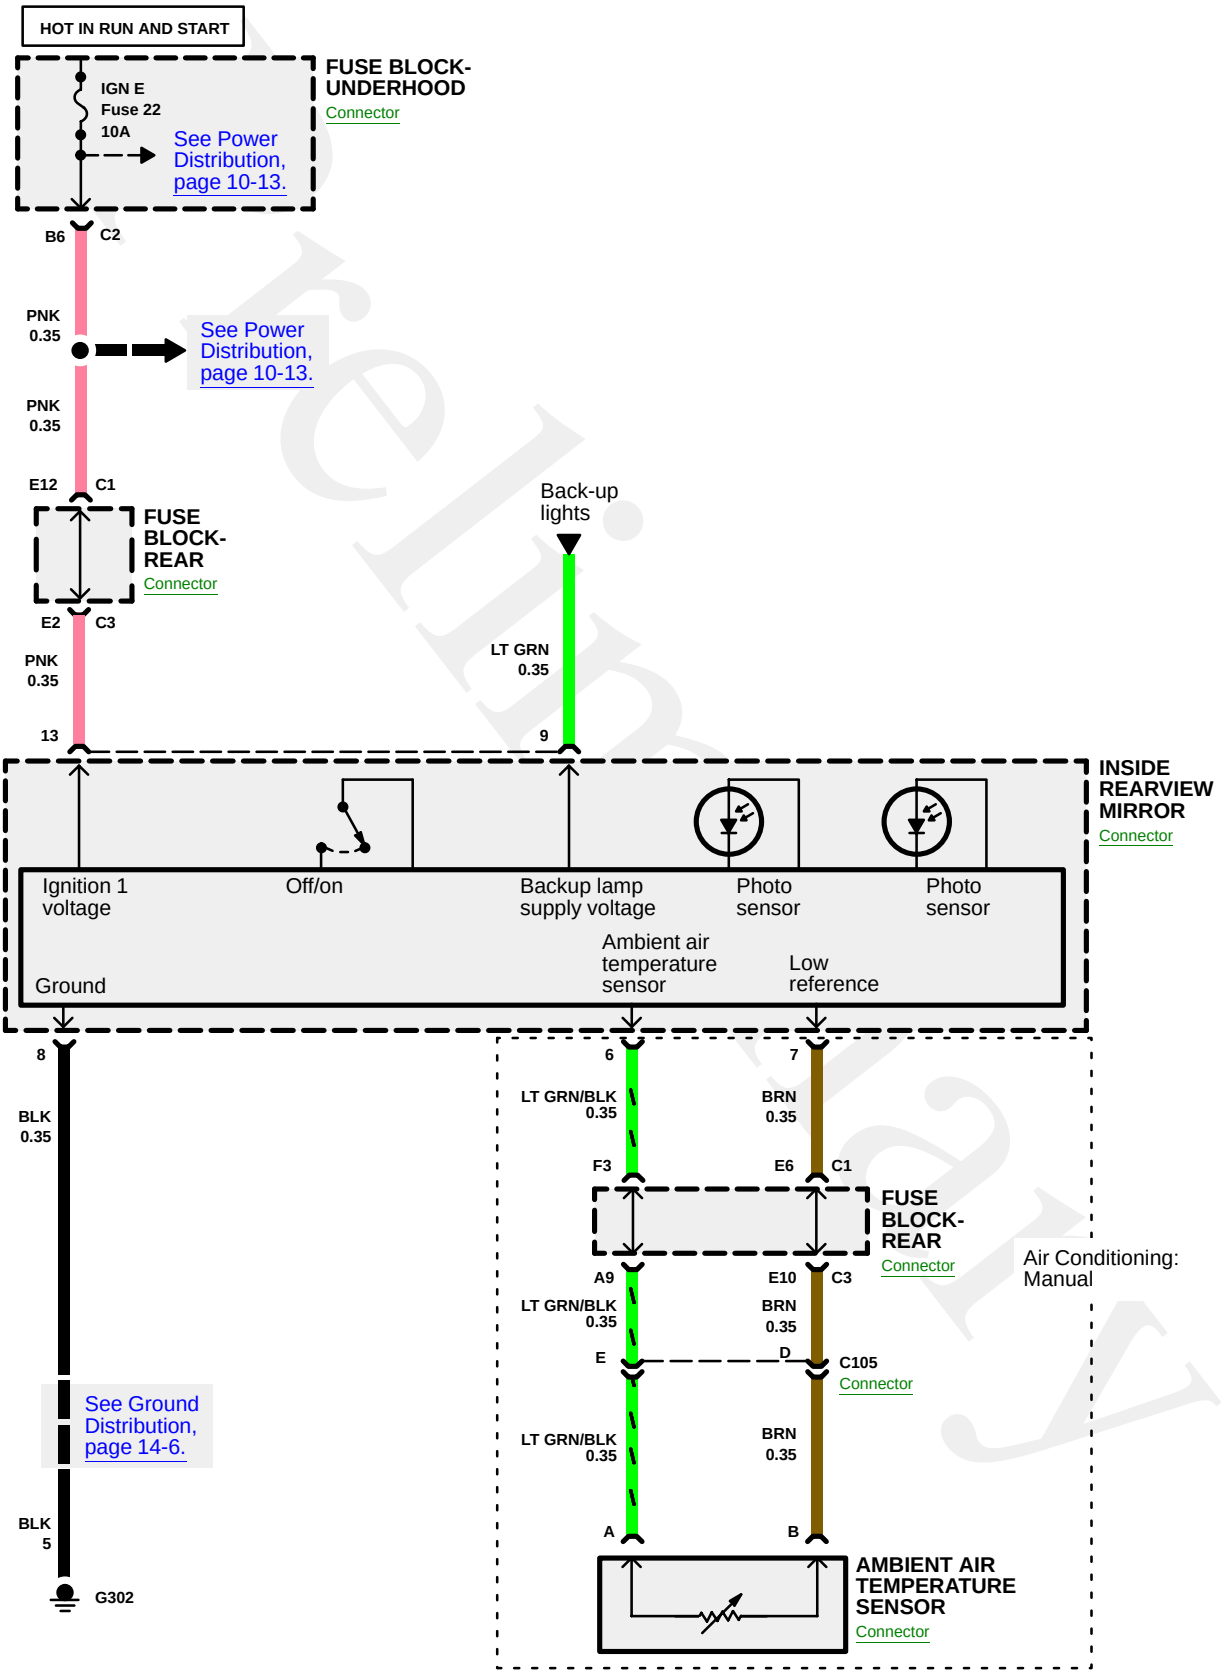

DAY-NIGHT MIRROR

Circuit Operation

With the ignition ON, ignition voltage is supplied to the mirror from the IGN E fuse in the underhood fuse block. Ground for the mirror is provided by G302.

The inside rearview mirror with the automatic day-night feature system consist of the following components:

- Inside rearview mirror
- Ambient air temperature sensor

Preliminary

DAY-NIGHT MIRROR

Component Location Index

(Refer to Section 201 for photographs.)

Component		Photo No.
Ambient Air Temperature Sensor	Above the left side of the grille	1
Fuse Block-Rear	Under the left rear seat	52
Fuse Block-Underhood	Left side of engine compartment	3
Inside Rearview Mirror	Upper center of windshield	88
Connector		
C105 (10-BLK)	Left side of engine compartment	4
Ground		
G302	On the lower left B-pillar	105

Preliminary