AUXILIARY POWER OUTLETS

Component Index

Auxiliary Power Outlet-Console
Auxiliary Power Outlet-Front
Auxiliary Power Outlet-Rear
Fuse Block-Rear
SP201

AUXILIARY POWER OUTLETS

Circuit Schematic

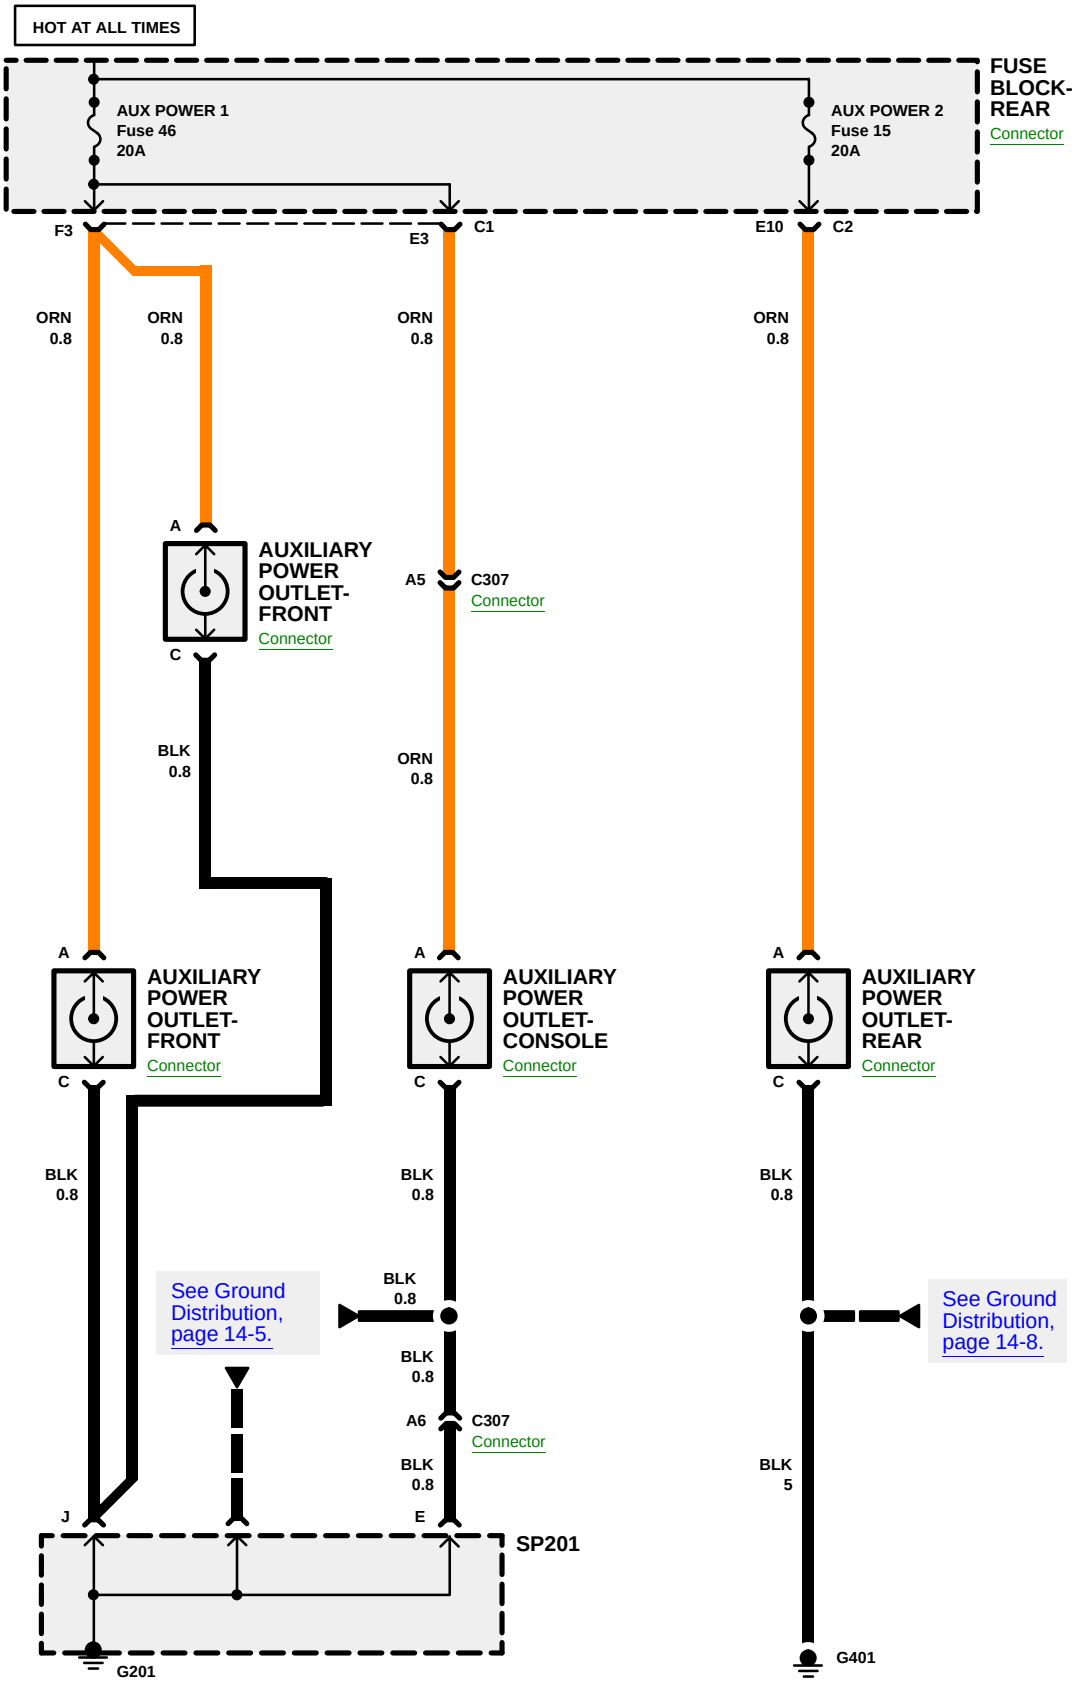

AUXILIARY POWER OUTLETS

Circuit Operation

Battery voltage is applied to the accessory socket through the AUX POWER 1 fuse 46 and AUX POWER 2 fuse 15.

AUXILIARY POWER OUTLETS

Component Location Index

(Refer to Section 201 for photographs.)

Component		Photo No.
Auxiliary Power Outlet-Console	At the rear of the lower console	85
Auxiliary Power Outlet-Front	In the center of the I/P, beside the cigar lighter	73
Auxiliary Power Outlet-Rear	Lower part of right D-Pillar	109
Fuse Block-Rear	Under the left rear seat	52
SP201	Near right front of lower console	80
Connector		
C307 (18-MD GRY)	Beneath rear of lower console	86
Ground		
G201	Near right front of lower console	80
G401	On lower left D-pillar	109