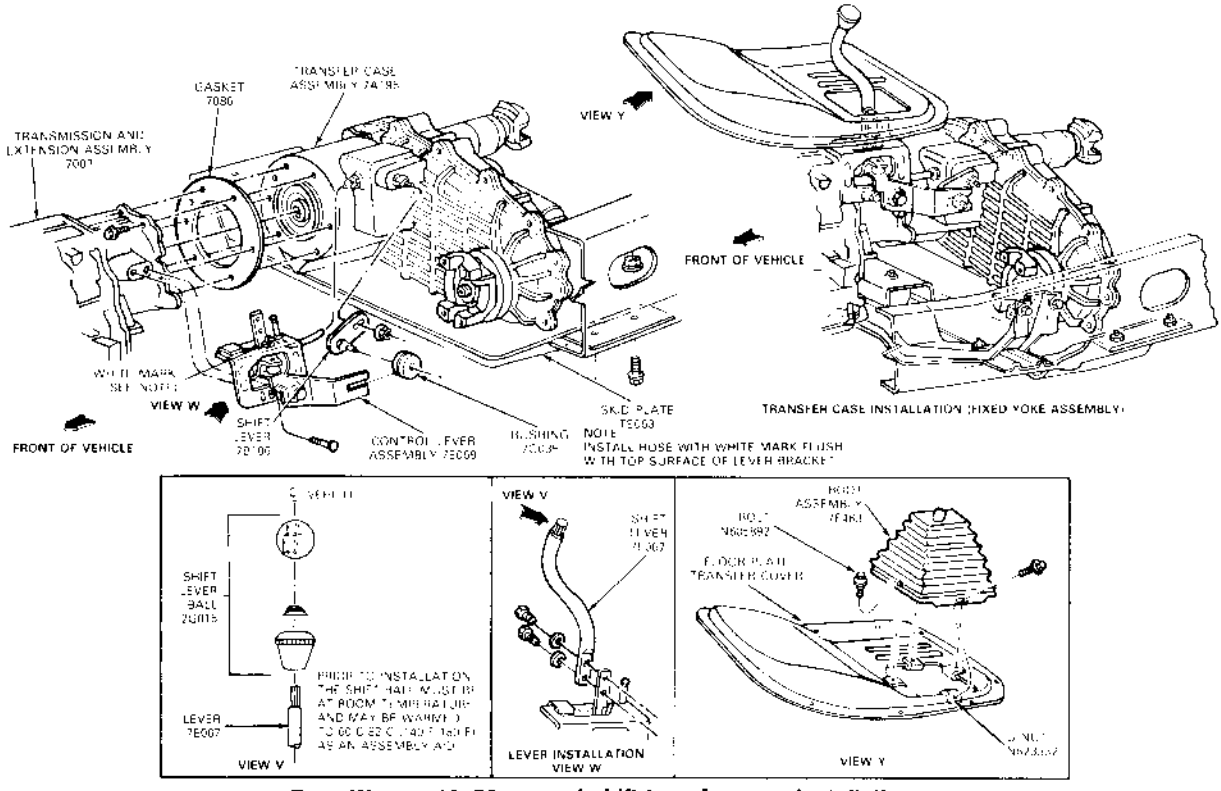

Borg-Warner 13–56 manual shift transfer case installation