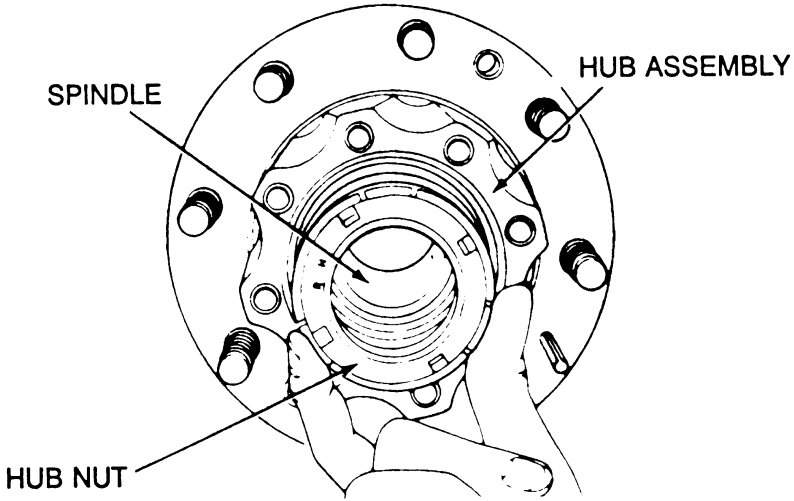

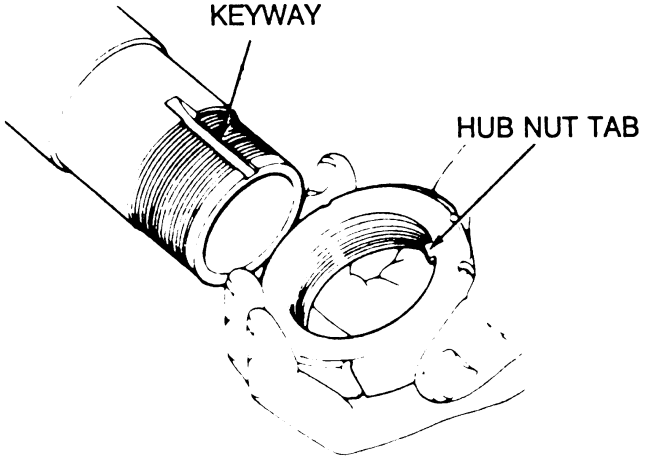

RIGHT HAND THREADS – INSTALL CLOCKWISE

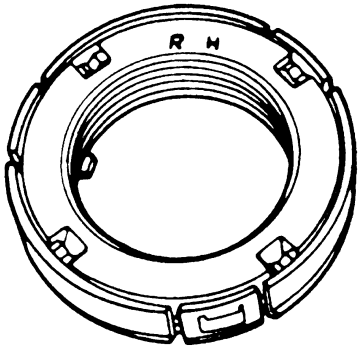

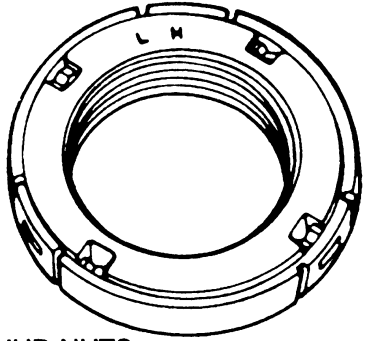

LEFT HAND THREADS – INSTALL COUNTERCLOCKWISE

FULL FLOATING AXLE HUB NUTS