

[2009 Chevrolet Aveo](#) | [Aveo, Wave, G3, Barina \(VIN S/T\) Service Manual](#) | [Body Systems](#) | [Horns](#) | [Specifications](#) |

Document ID: 1542967

Fastener Tightening Specifications


Application	Specification	
	Metric	English
Horn Bolt	21 N·m	16 lb ft

Horn Replacement (Notchback)

Removal Procedure


Warning: Refer to [Battery Disconnect Warning](#) in the Preface section.

1. Disconnect the negative battery cable.
2. Remove the left headlamp assembly. Refer to [Headlamp Replacement](#).

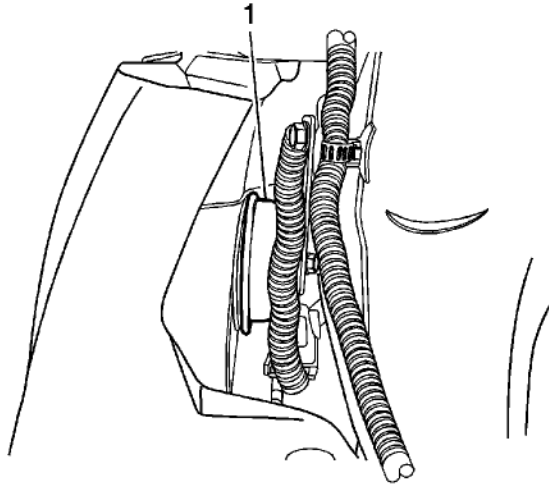

3. Remove the bolt from the horn.
4. Disconnect the electrical connector.
5. Remove the horn (1).

Installation Procedure

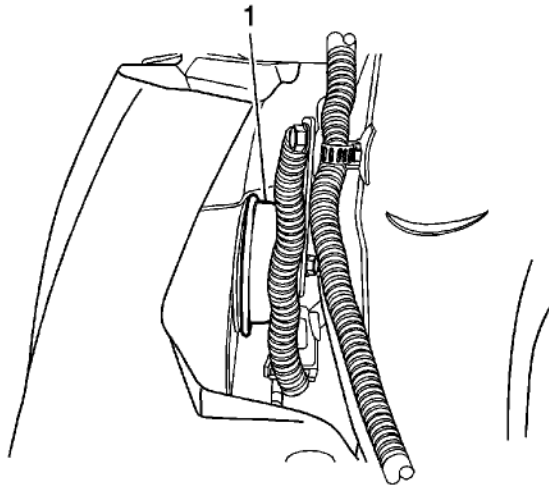

1. Connect the electrical connector.


Caution: Refer to [Fastener Caution](#) in the Preface section.

2. Install the horn (1) with the bolt and tighten to **21 N·m (16 lb ft)**.
3. Install the left headlamp assembly. Refer to [Headlamp Replacement](#).
4. Connect the negative battery cable.

Horn Replacement (Hatchback)


Removal Procedure

Warning: Refer to [Battery Disconnect Warning](#) in the Preface section.

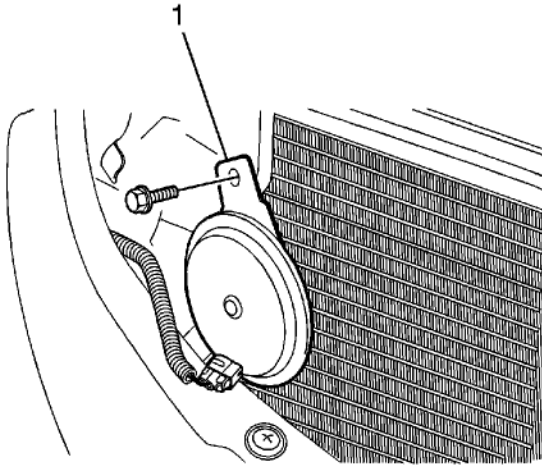

1. Disconnect the negative battery cable.
2. Remove the fascia grille. Refer to [Fascia Grille Replacement](#).
3. Remove the bolt from the horn.
4. Disconnect the electrical connector.
5. Remove the horn (1).

Installation Procedure

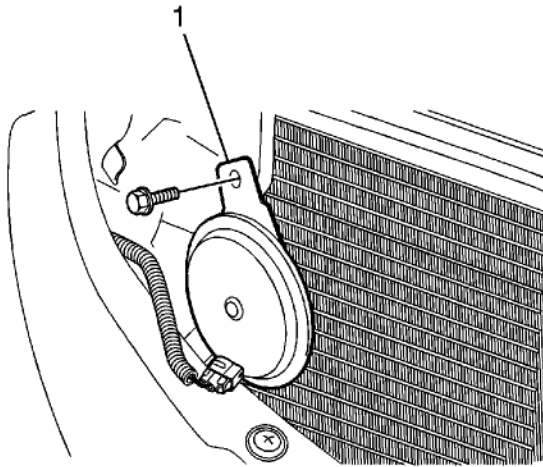

1. Connect the electrical connector.

Caution: Refer to [Fastener Caution](#) in the Preface section.

2. Install the horn (1) with the bolt and tighten to **21 N·m (16 lb ft)**.
3. Install the fascia grille. Refer to [Fascia Grille Replacement](#).
4. Connect the negative battery cable.