


Window wash/wipe system, heated washer jets, headlight washer system

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

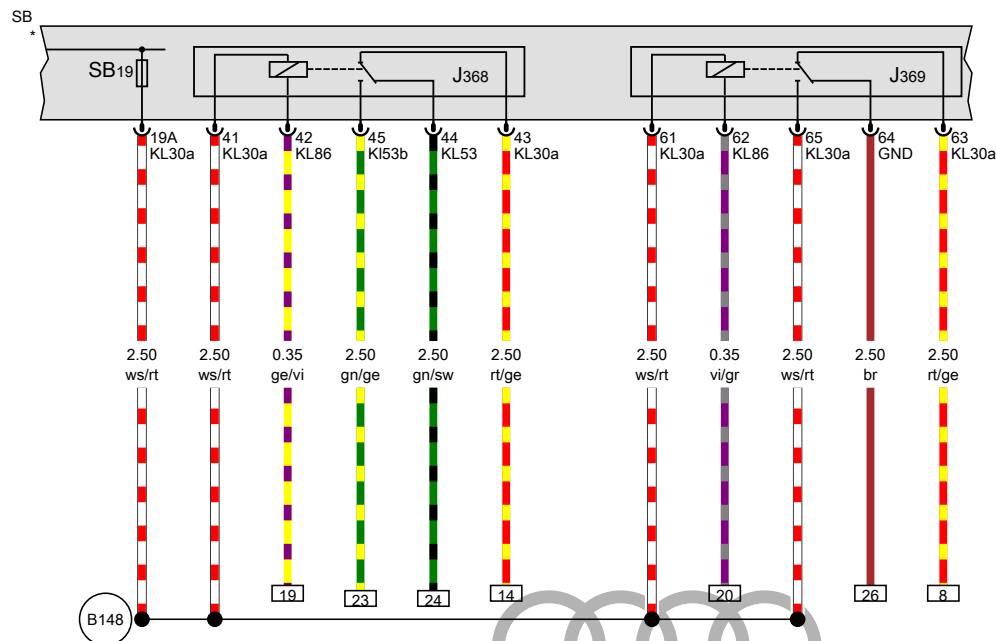


Wiper motor relay 1, Wiper motor relay 2, Fuse holder B

J368 Wiper motor relay 1
J369 Wiper motor relay 2
SB Fuse holder B
SB19 Fuse 19 on fuse holder B

B148 Positive connection 3 (87), in interior wiring harness
* see applicable current flow diagram for fuses in engine compartment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

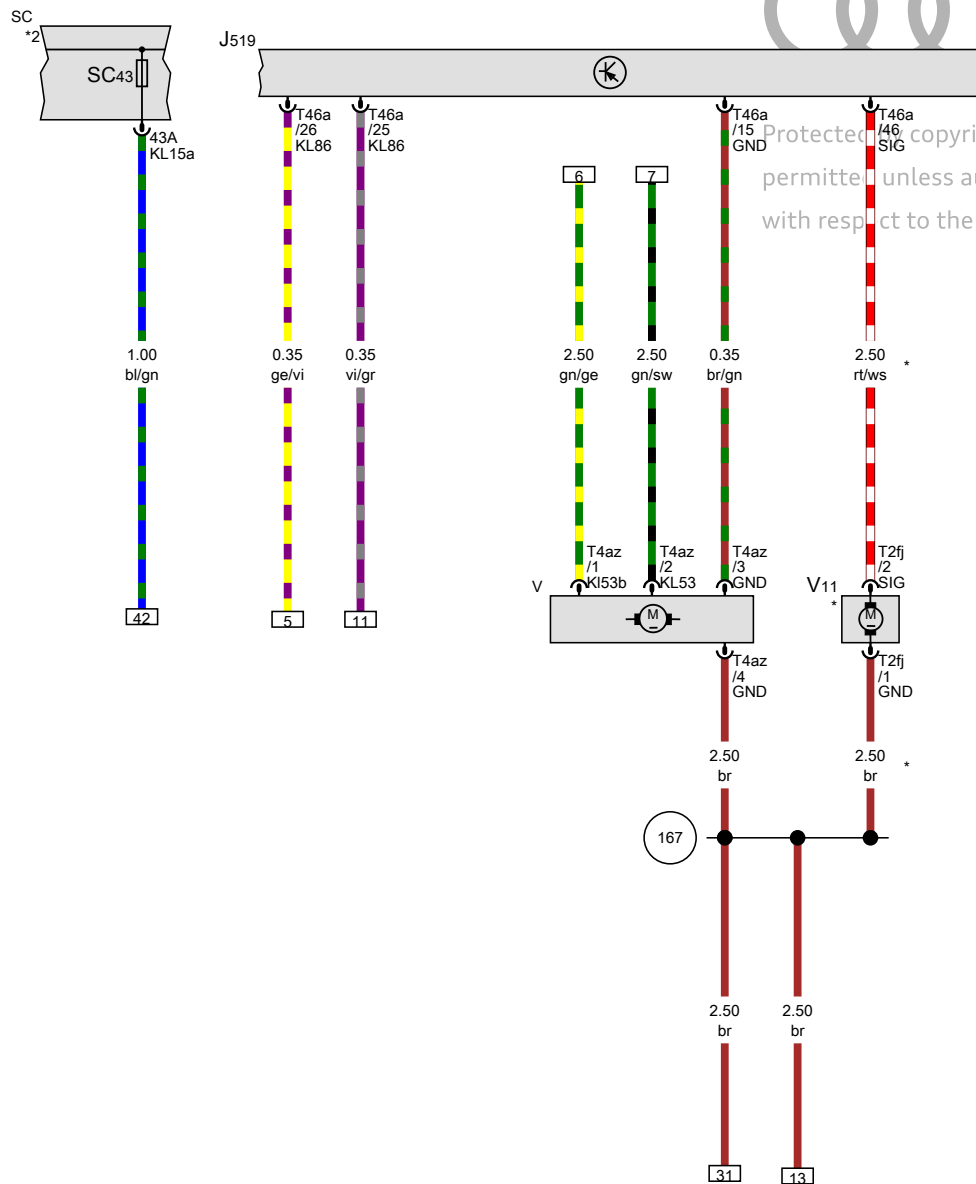

Onboard supply control unit, Fuse holder C, Windscreen wiper motor, Headlight washer system pump

- J519 Onboard supply control unit
- SC Fuse holder C
- SC43 Fuse 43 on fuse holder C
- T2fj 2-pin connector, black
- T4az 4-pin connector, black
- T46a 46-pin connector, black
- V Windscreen wiper motor
- V11 Headlight washer system pump
- 167 Earth connection 4, in engine compartment wiring harness
- * For models with headlight washer system
- *2 see applicable current flow diagram for fuses in interior

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

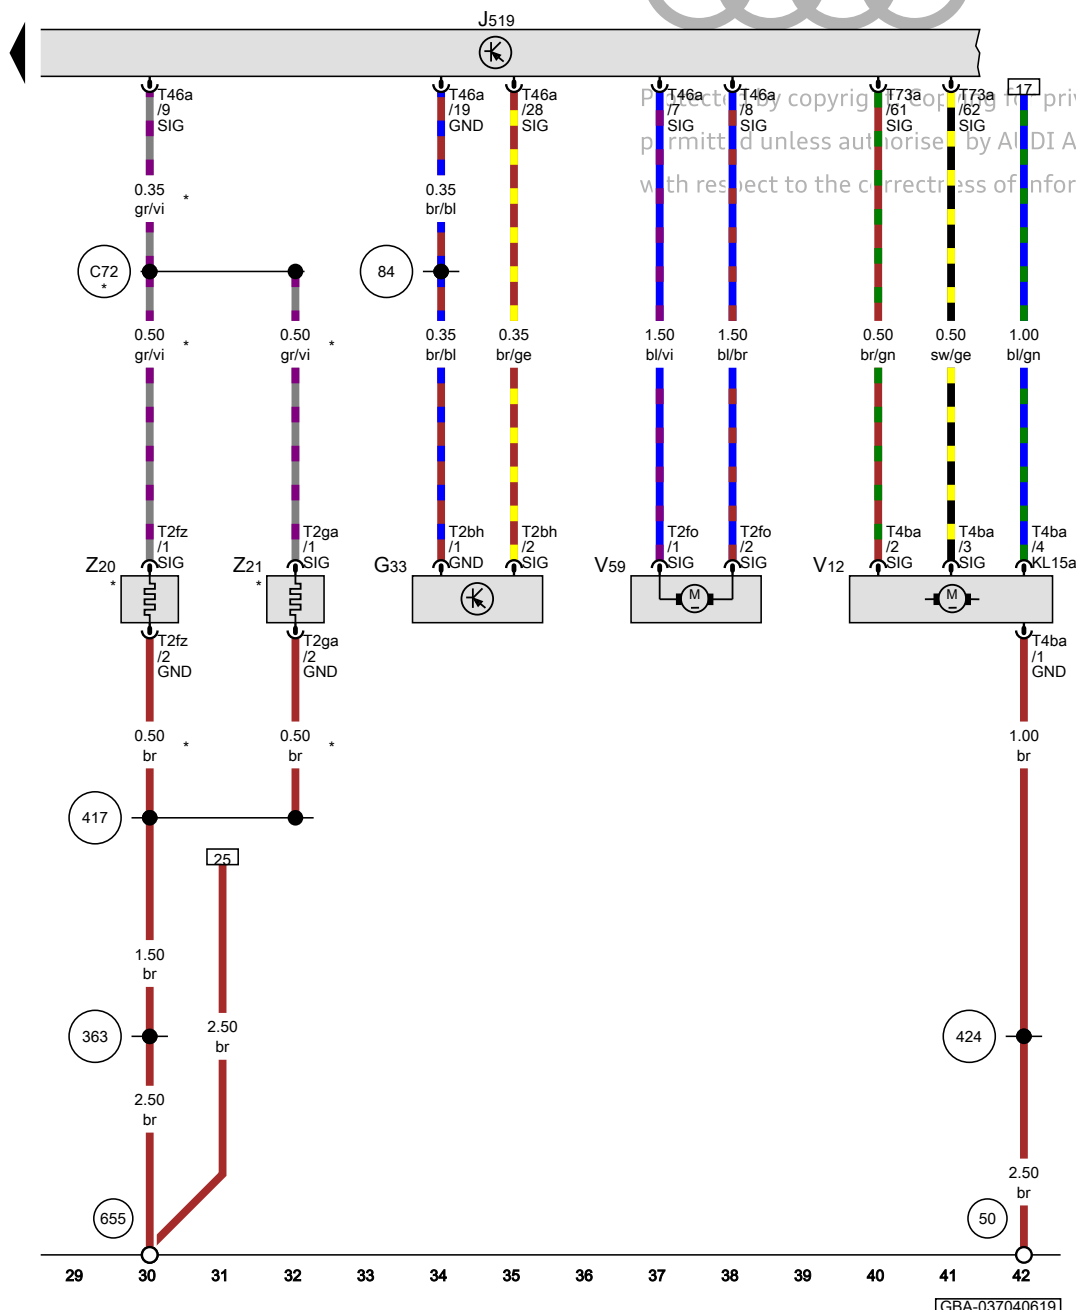

Windscreen washer fluid level sender, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump, Left washer jet heater element, Right washer jet heater element

- G33 Windscreen washer fluid level sender
- J519 Onboard supply control unit
- T2bh 2-pin connector, black
- T2fo 2-pin connector, black
- T2fz 2-pin connector, black
- T2ga 2-pin connector, black
- T4ba 4-pin connector, black
- T46a 46-pin connector, black
- T73a 73-pin connector, black
- V12 Rear window wiper motor
- V59 Windscreen and rear window washer pump
- Z20 Left washer jet heater element
- Z21 Right washer jet heater element
- 50 Earth point, on left in luggage compartment
- 84 Earth connection, engine block, in front right wiring harness
- 363 Earth connection 8, in engine compartment wiring harness
- 417 Earth connection 9, in engine compartment wiring harness
- 424 Earth connection 2, in left rear end wiring harness
- 655 Earth point, on left headlight
- C72 Positive connection in heated washer jet wiring harness
- * For models with heated washer jets

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink