


Video Camera


Expedition

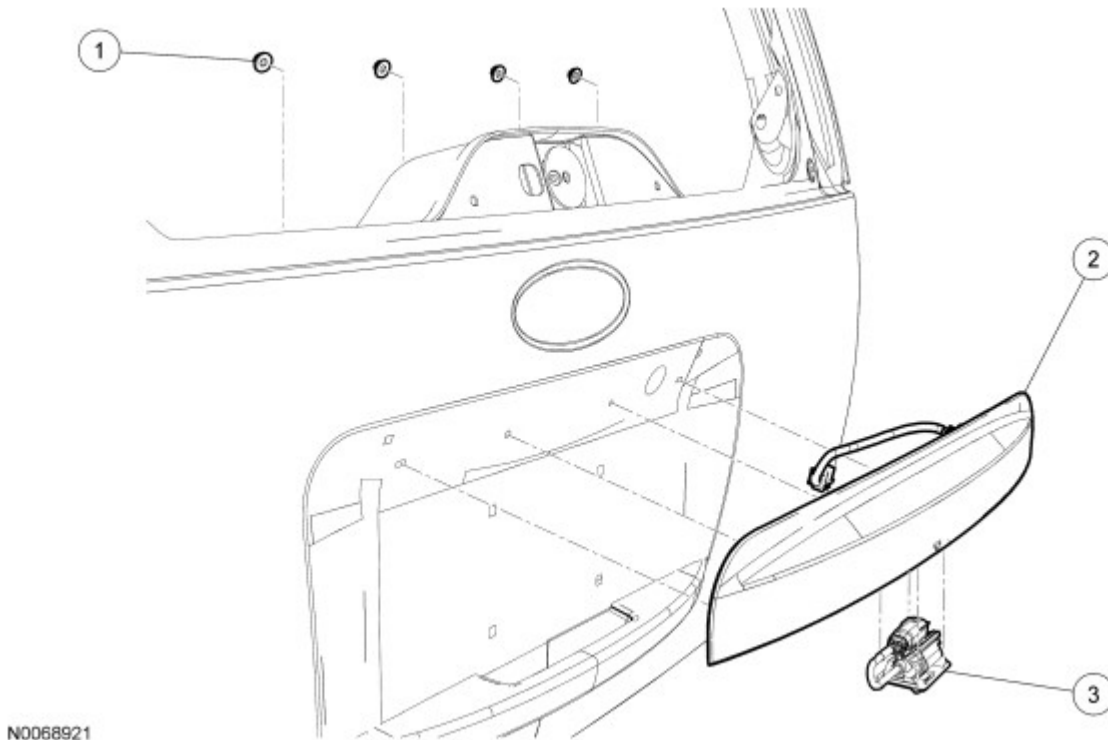

N0068921

Item	Part Number	Description
1	—	License lamp housing nuts (4 required)
2	—	License lamp housing
3	19G490	Video camera

Navigator

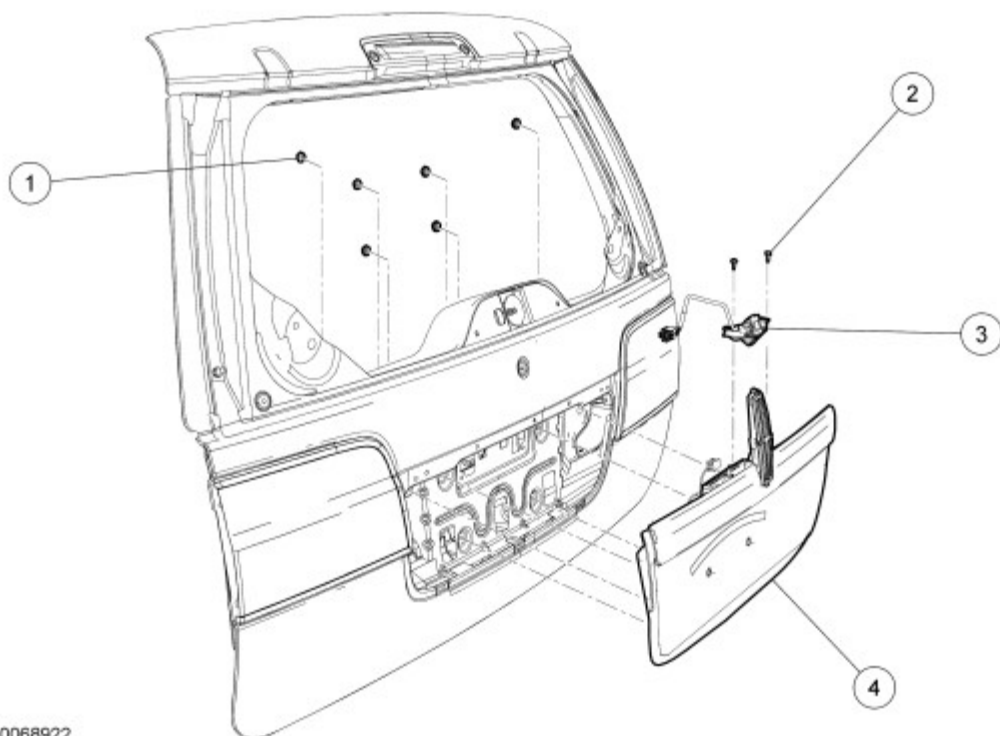

N0068922

Item	Part Number	Description
1	—	License plate housing nuts (6 required)
2	W506842	Video camera mounting screws (2 required)
3	19G490	Video camera
4	—	License plate housing

Removal and Installation

All vehicles

1. Remove the liftgate trim panel. For additional information, refer to [Section 501-05](#).
 - Position the water shield aside.

Expedition

2. Remove the 4 nuts and the license lamp housing.
 - Disconnect the electrical connector.
3. Squeeze the release tabs and remove the video camera and bracket from the license lamp housing.

Navigator

4. Remove the liftgate parking lamps. For additional information, refer to [Section 417-01](#).
5. Remove the 6 nuts and the license plate housing.

- Disconnect the electrical connector.


6. Remove the 2 screws and the video camera bracket.

All vehicles

7. To install, reverse the removal procedure.

Liftgate Trim Panel

NOTE: Non-power liftgate shown, power liftgate similar.

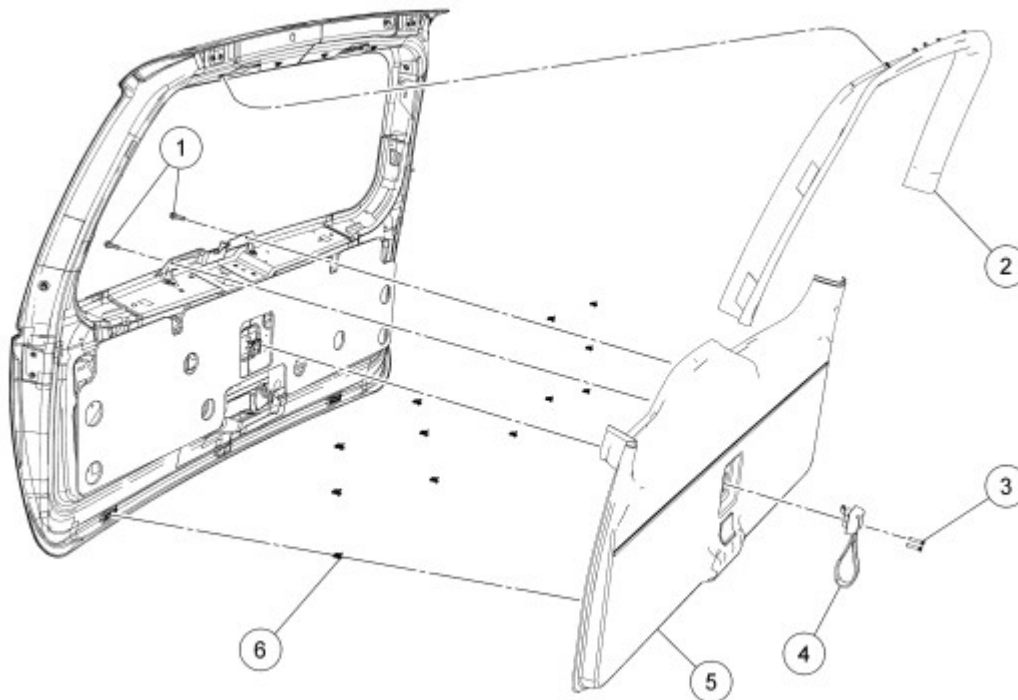


N0076290

Item	Part Number	Description
1	W706264	Scrivenets (2 required)
2	42410	Upper liftgate trim panel
3	N807378	Liftgate assist handle screw (2 required)
4	434A14	Liftgate assist handle
5	46404	Lower liftgate trim panel
6	W701882	Retaining clip (12 required)


All vehicles

1. Open the liftgate glass and remove the 2 scrivenets.

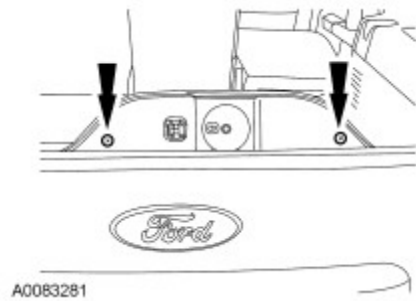

Vehicles with power liftgate


2. Remove the power liftgate rod-to-liftgate cover and nut.
 - To install, tighten to 11 Nm (97 lb-in).

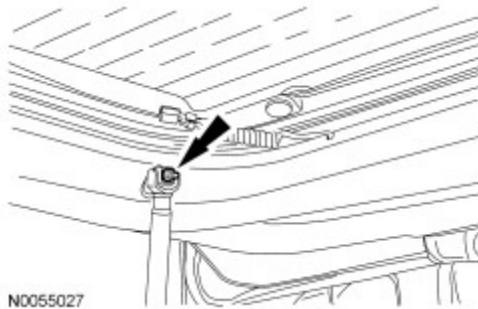

3. Remove the power liftgate rod from the liftgate.

All vehicles

4. Remove the upper liftgate trim panel.
 - Pull the lower corners toward the center on both sides and pull down along the top.
5. Remove the liftgate assist handle.
 1. Remove the 2 liftgate assist handle screws.
 2. Remove the liftgate assist handle.

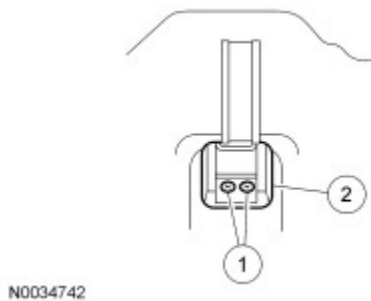


6. **NOTICE:** To avoid damage to the liftgate trim panel, remove any retaining clips from the body and attach them to the liftgate trim panel before installing.

NOTE: The back of the liftgate trim panel shown, with the location of the liftgate trim panel retainers indicated.

Remove the lower liftgate trim panel.

- Pull the lower liftgate trim panel at the center to release the center retaining clips.
- Release the remaining retaining clips 2 to 3 at a time, starting from the right side and working to the left side.
- When all of the retaining clips are released, slide the liftgate trim panel forward and down, away from the liftgate.

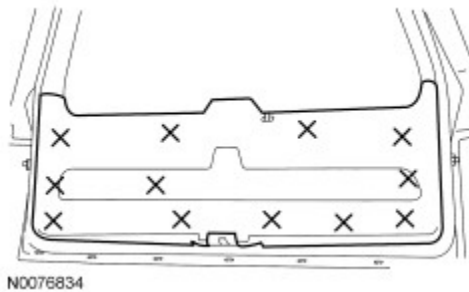

7. To install, reverse the removal procedure.