

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------

INTELLIGENT SUSPENSION SYSTEM


Component Index

- Brake Switch
- Dash Fuse Box
- Data Link Connector (DLC)
- Engine or Powertrain Control Module (ECM or PCM)
- Fuse/Relay Box
- G-3 G Sensor
- Intelligent Suspension Control Unit
- Left Front Actuator Assembly
- Left Rear Actuator Assembly
- Option Fuse Box
- Right Front Actuator Assembly
- Right Rear Actuator Assembly
- Vehicle Speed Sensor (VSS)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------


INTELLIGENT SUSPENSION SYSTEM

Circuit Schematic

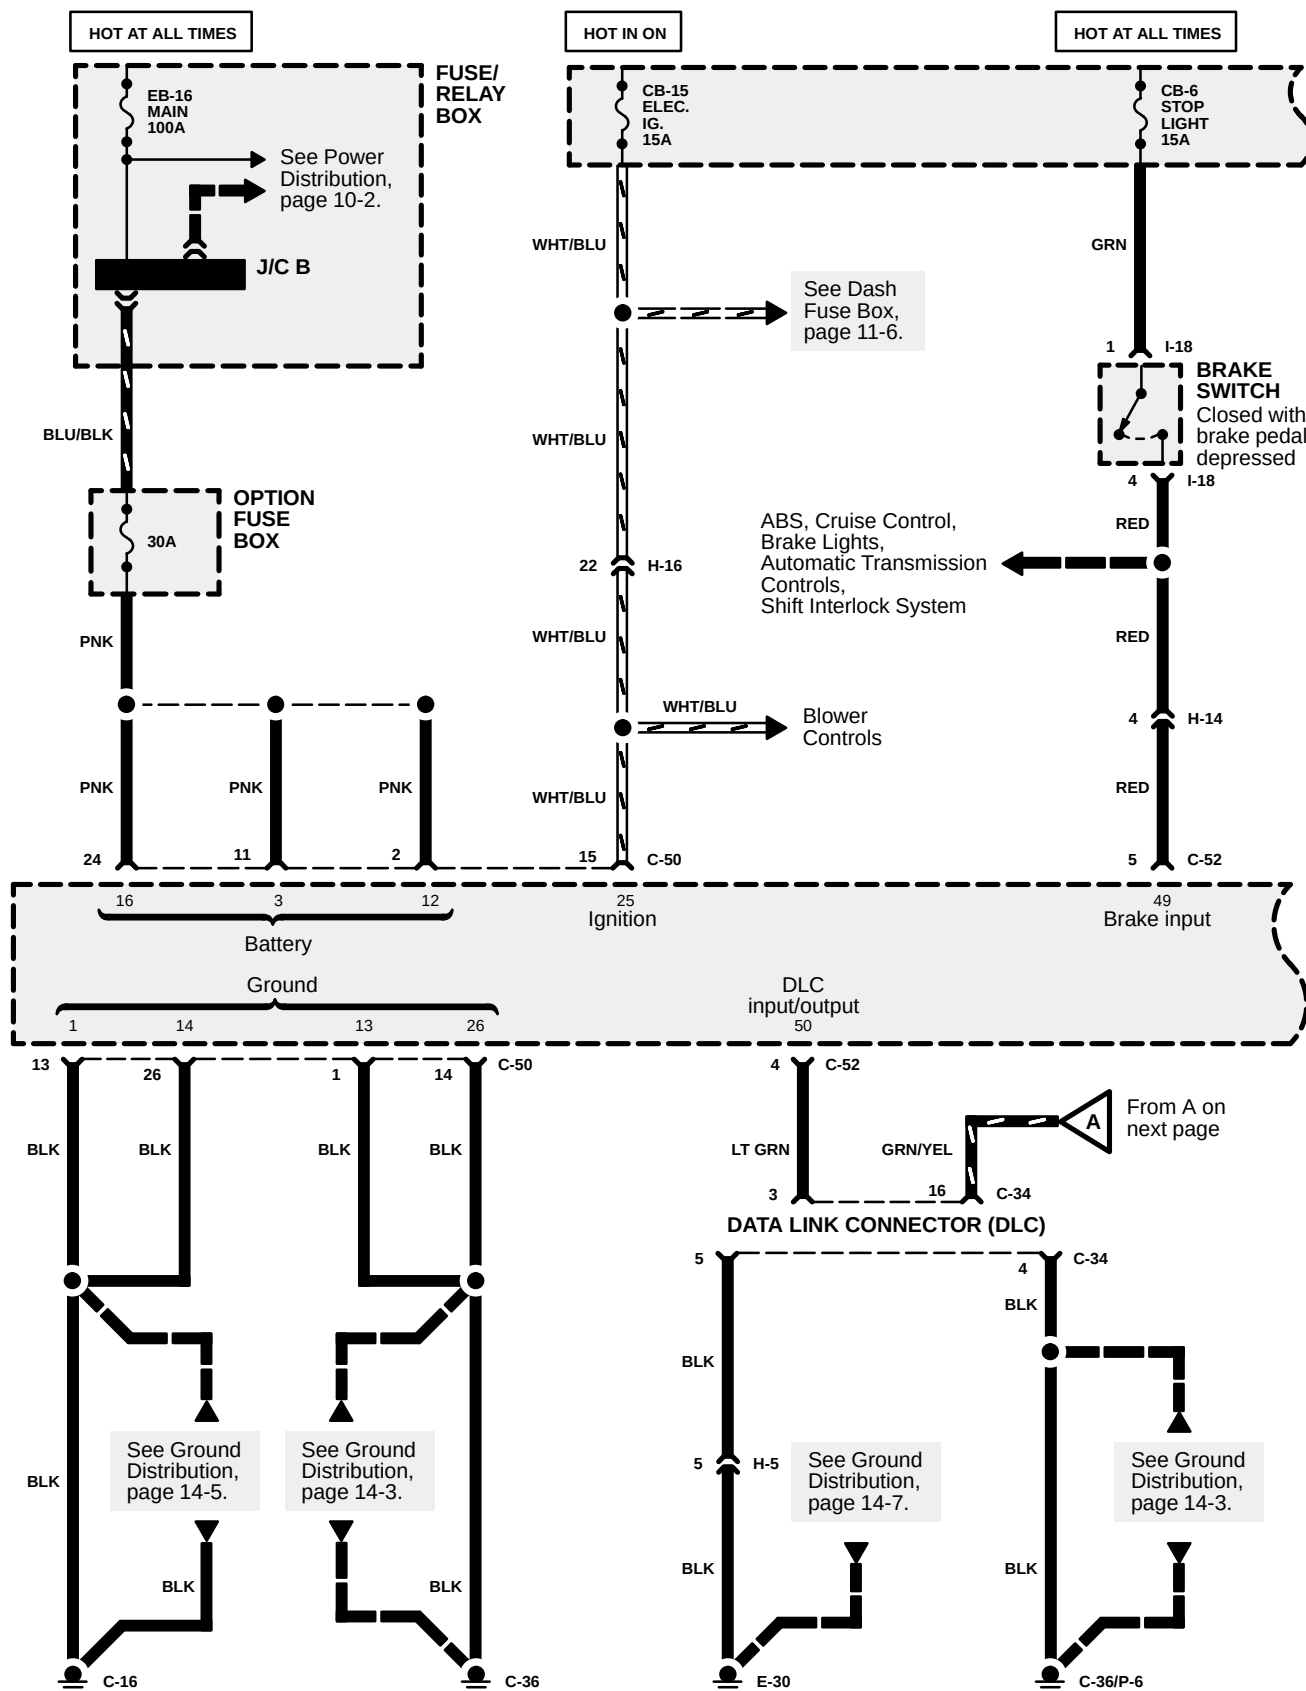


INTELLIGENT SUSPENSION SYSTEM

Circuit Schematic

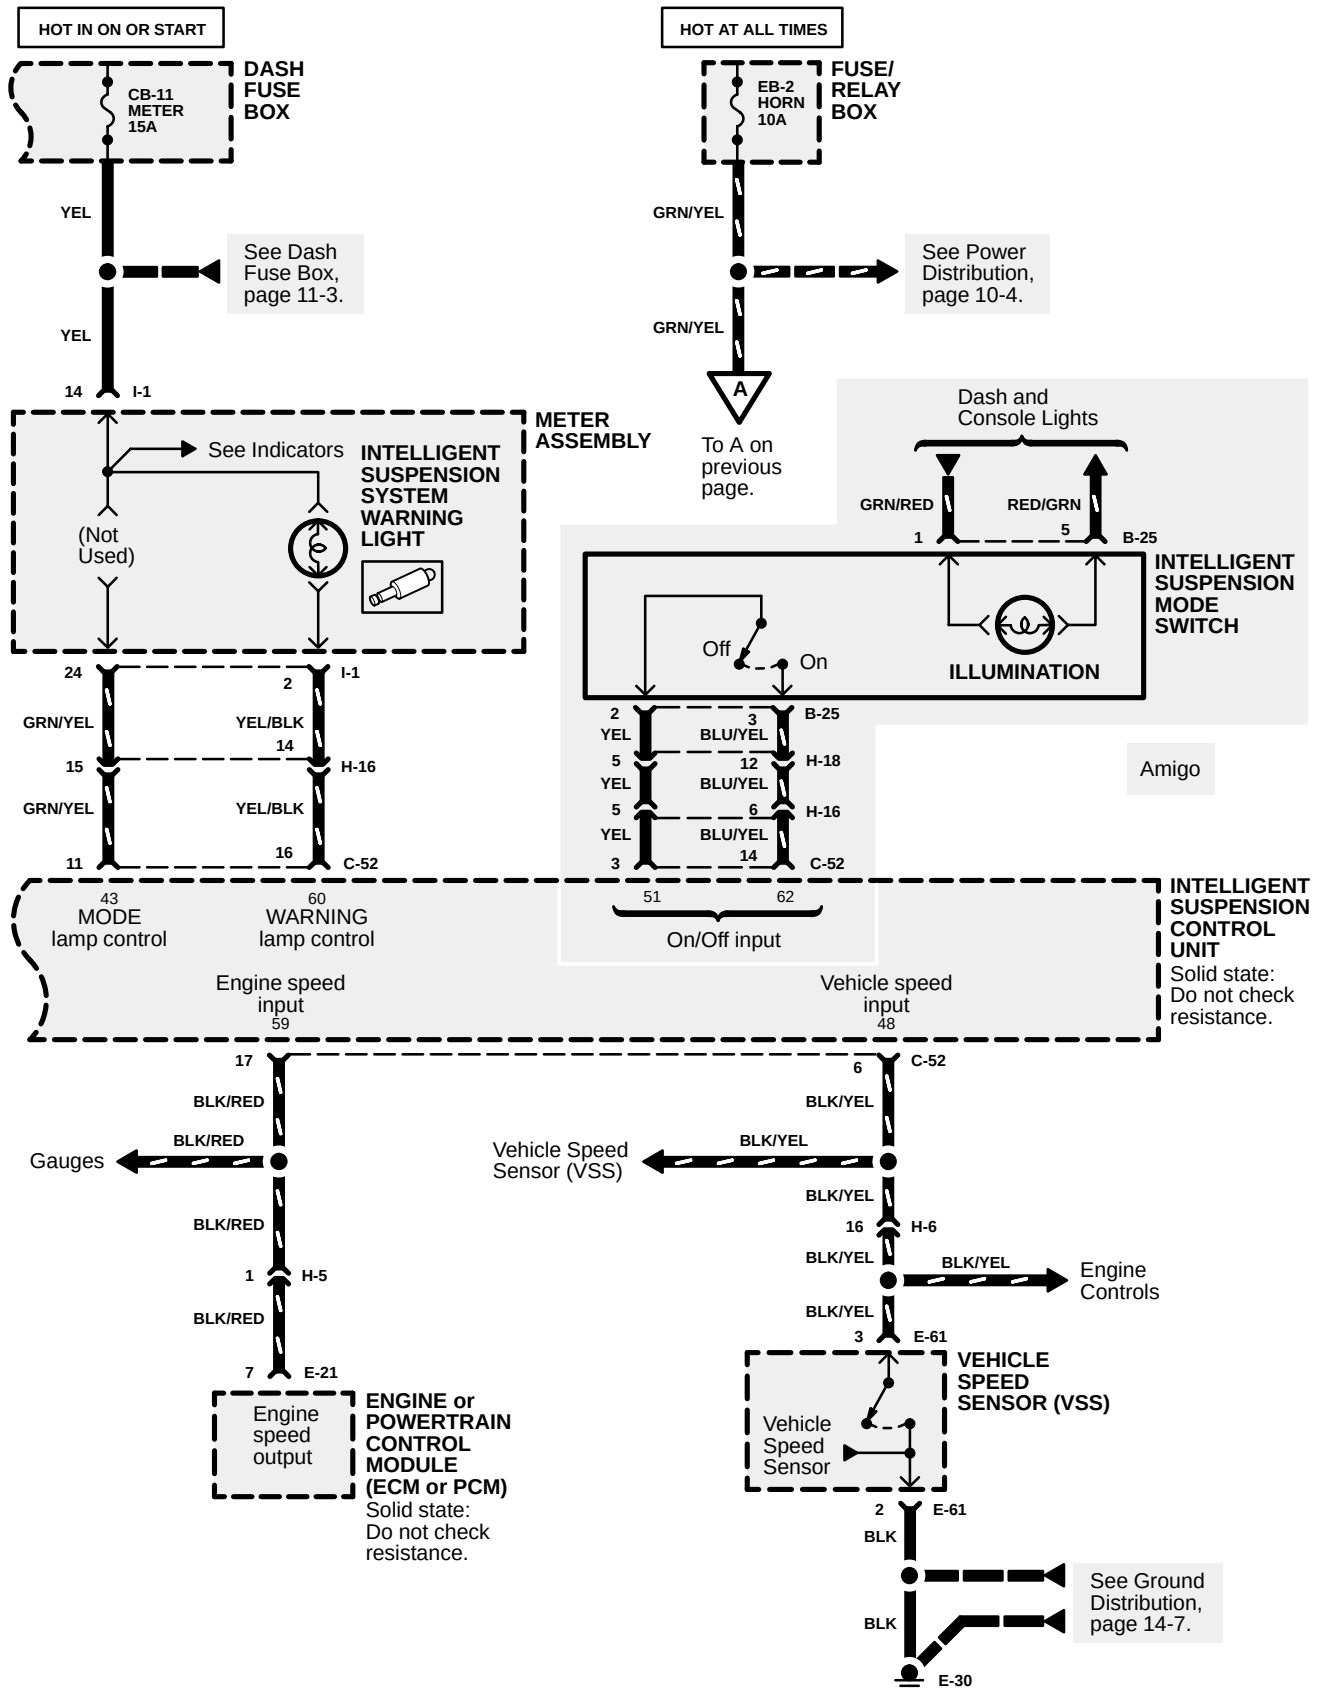


INTELLIGENT SUSPENSION SYSTEM

Circuit Schematic

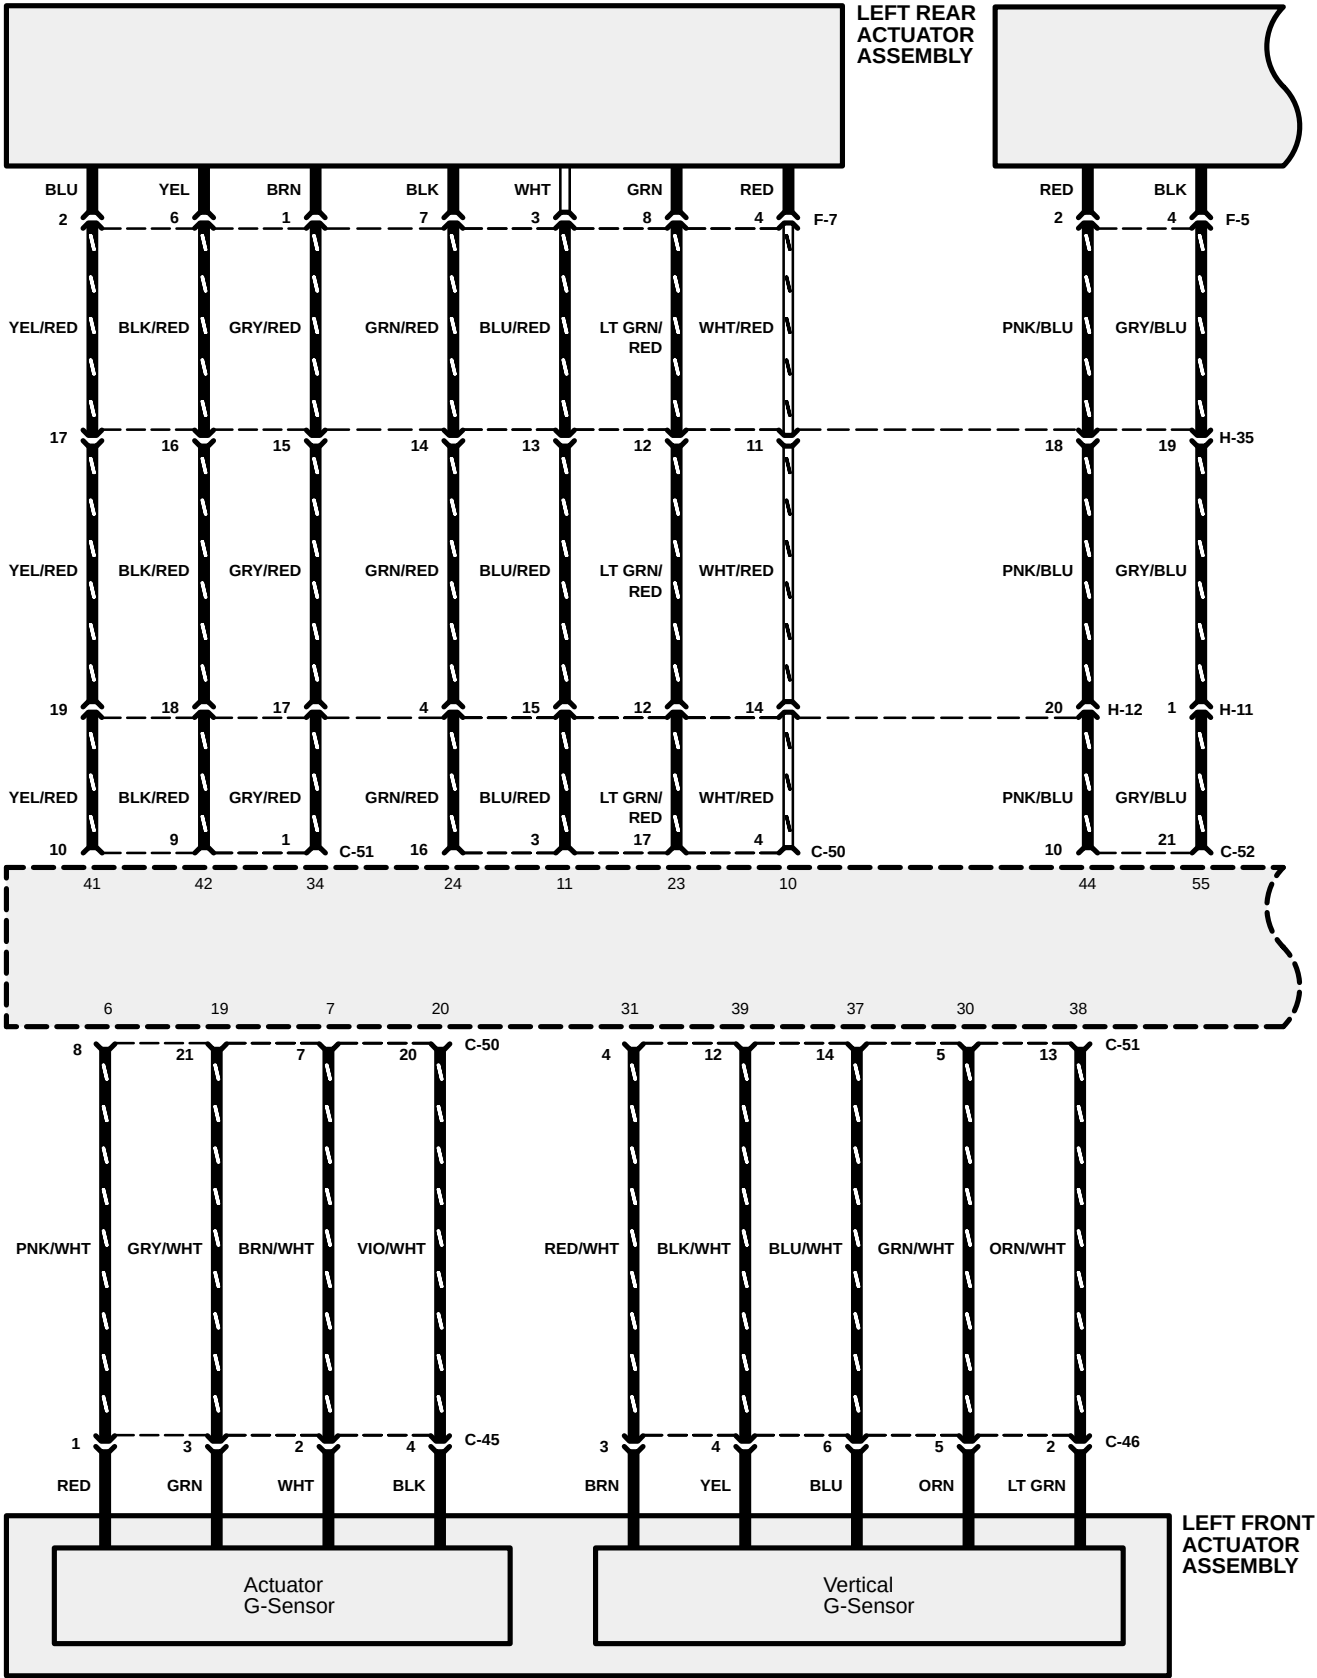

INTELLIGENT SUSPENSION SYSTEM

Circuit Schematic

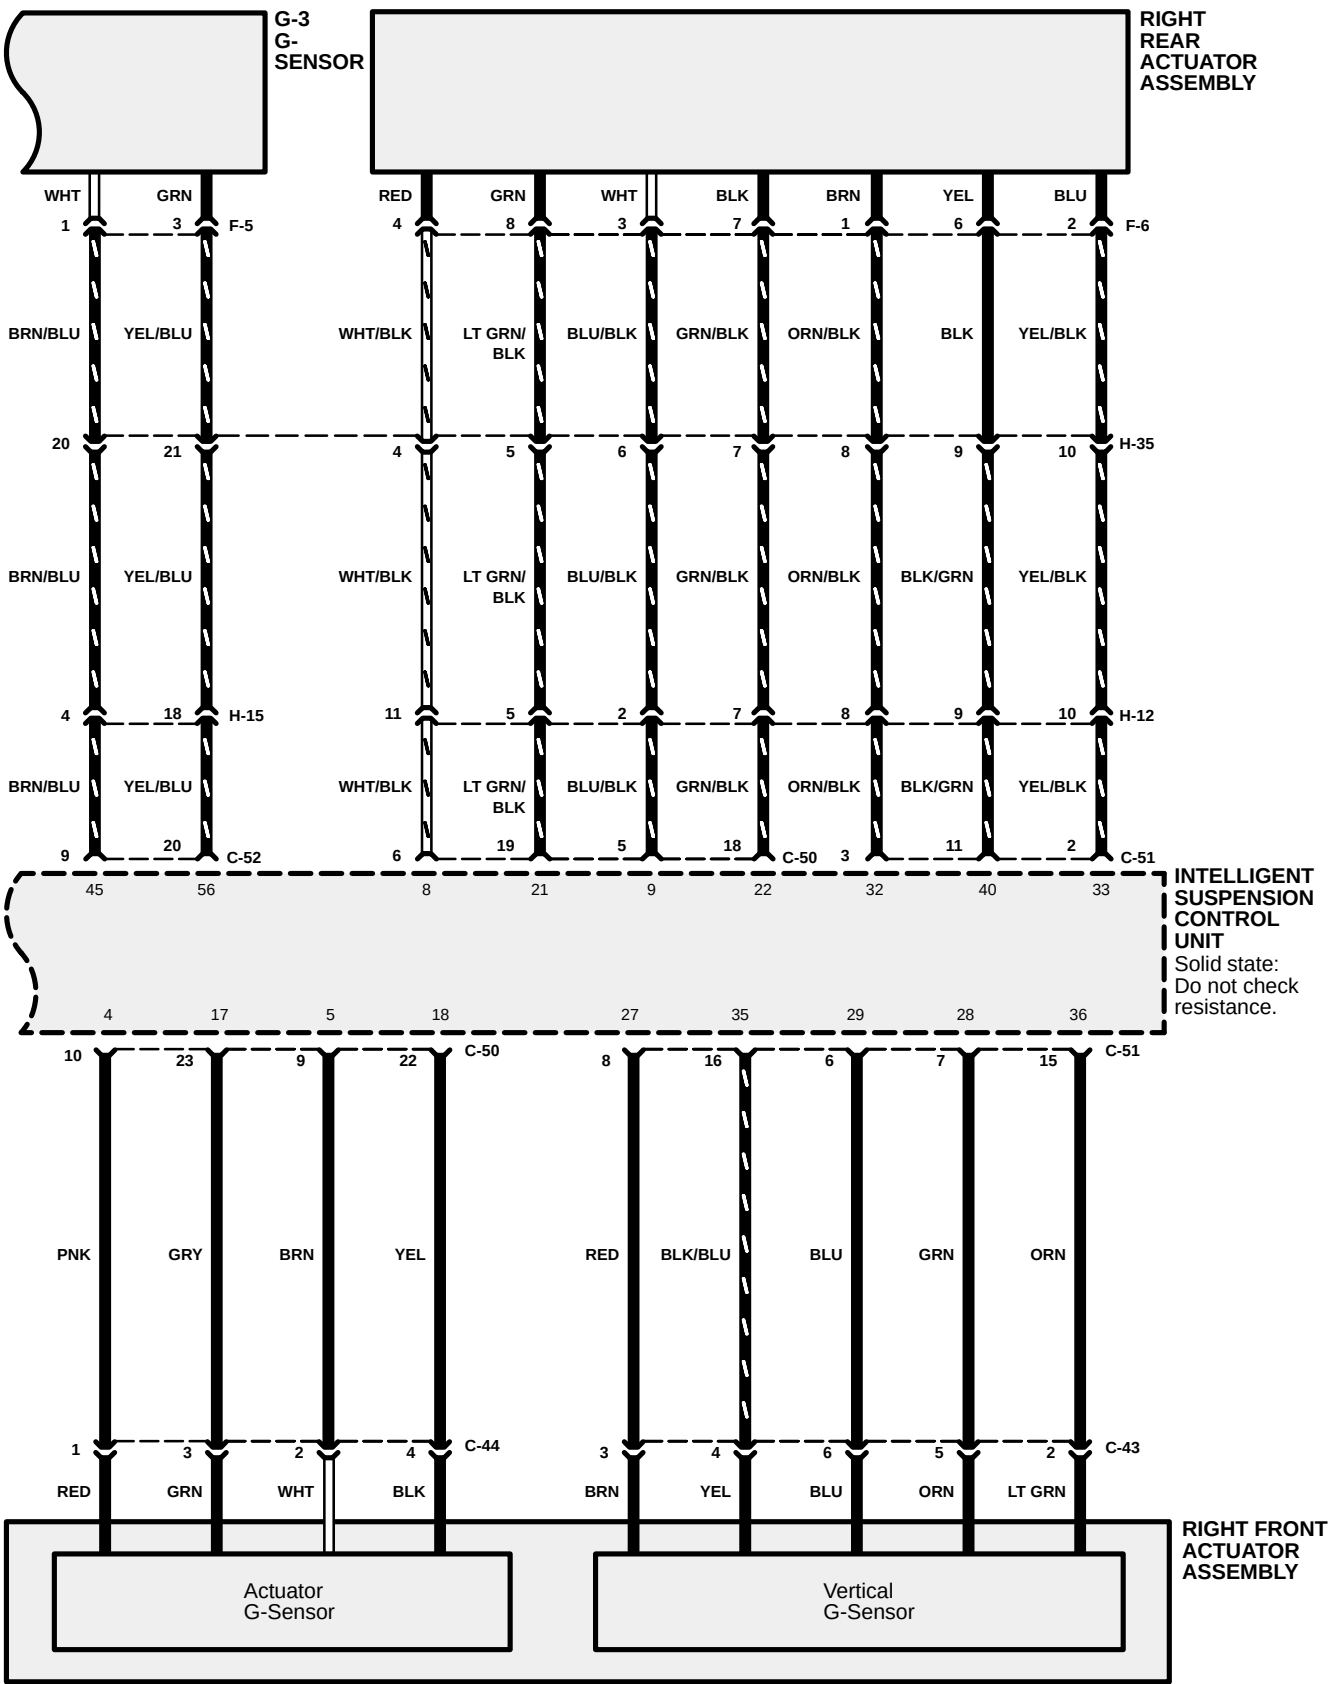

INTELLIGENT SUSPENSION SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Brake Switch	Behind left side of I/P, on brake pedal support 68
Dash Fuse Box	Left side of I/P, behind panel 58
Data Link Connector (DLC)	Below left side of I/P, near engine hood release 61
Engine or Powertrain Control	
Module (ECM or PCM)	Left side of engine compartment 44
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 14
G-3 G Sensor	Inside of frame, forward of left rear wheel 76
Intelligent Suspension Control	
Unit	Below center of I/P 75
Left Front Actuator Assembly ...	Top of left front shock absorber 57
Left Rear Actuator Assembly ...	Top of left rear shock absorber 76
Option Fuse Box	Right side of engine compartment 55
Right Front Actuator Assembly ..	Top of right front shock absorber 57
Right Rear Actuator Assembly ..	Top of right rear shock absorber 76
Vehicle Speed Sensor (VSS) ...	Beneath center of vehicle, rear of transmission 120
Connector	
C-43 (6-GRY)	Right side of engine compartment 55
C-44 (4-BLK)	Right side of engine compartment 55
C-45 (4-BLK)	Left side of engine compartment 64
C-46 (6-GRY)	Left side of engine compartment 64
F-5 (4-BLK)	Underneath vehicle, near left rear shock absorber
F-6 (8-GRY)	Underneath vehicle, near right rear shock absorber 76
F-7 (8-GRY)	Underneath vehicle, near left rear shock absorber 76
H-5 (16-GRN)	Left side of engine compartment 27
H-6 (16-BLU)	Left side of engine compartment 27
H-11 (6-GRY)	Behind right kick panel 82
H-14 (19-BLK)	Below right side of I/P, behind kick panel 82
H-16 (22-BLK)	Behind left kick panel 62
H-18 (22-WHT)	Behind right kick panel 80
H-35 (22-WHT)	Under driver's seat, below carpet 72
I-1 (30-GRN)	Behind left side of I/P, on top of meter assembly 86
Ground	
C-16	Left rear corner of engine compartment, on inner fender panel 43
C-36	Right side of engine compartment, behind battery 13
E-30	Right side of intake manifold 21