

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------

MULTI-PLEXED INDICATOR CONTROL UNIT (3.2L)


Component Index

- Clutch Switch
- Dash Fuse Box
- Data Link Connector (DLC) C-34 (16-BLK)
- Engine or Powertrain Control Module (ECM or PCM)
- Multi-plexed Indicator Control Unit
- Taillight Relay

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------


MULTI-PLEXED INDICATOR CONTROL UNIT (3.2L)

Circuit Schematic

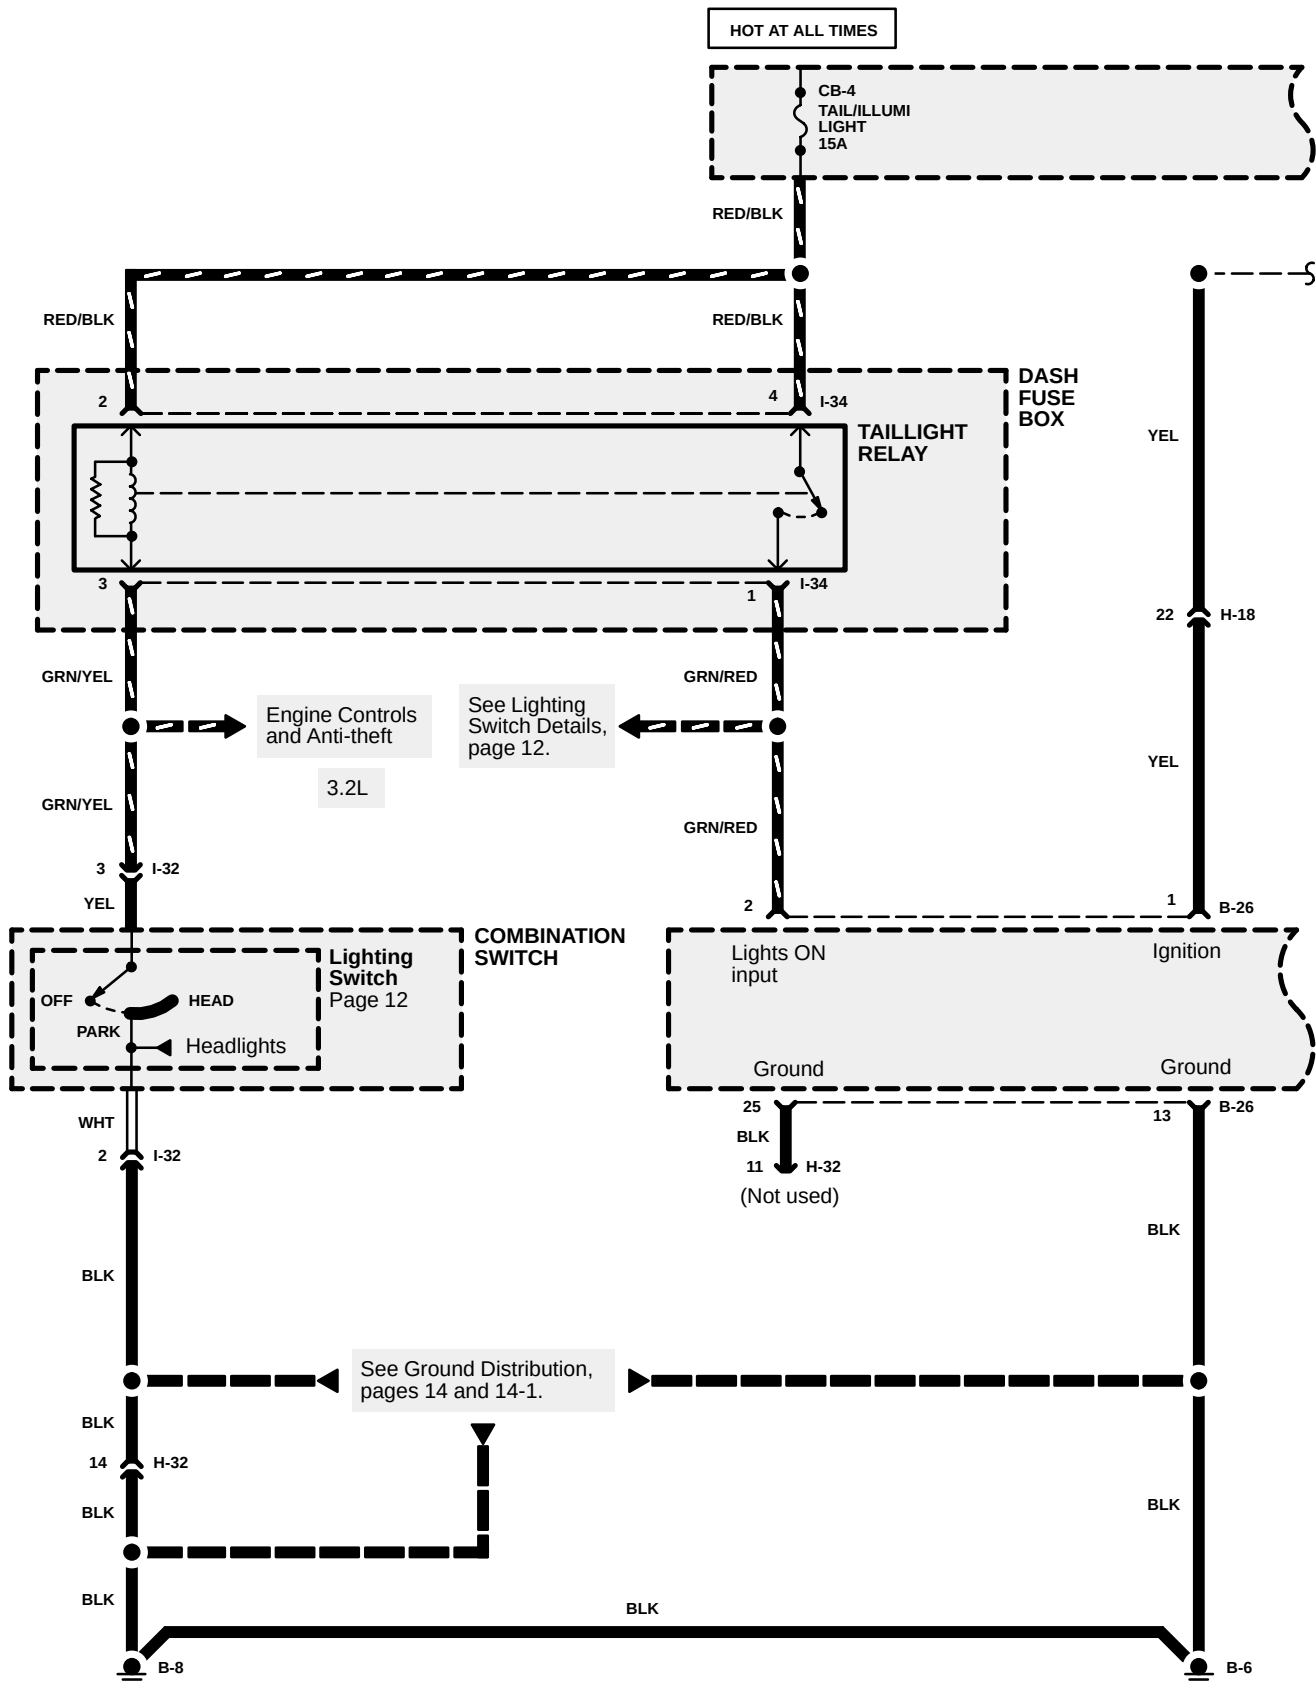


MULTI-PLEXED INDICATOR CONTROL UNIT (3.2L)

Circuit Schematic

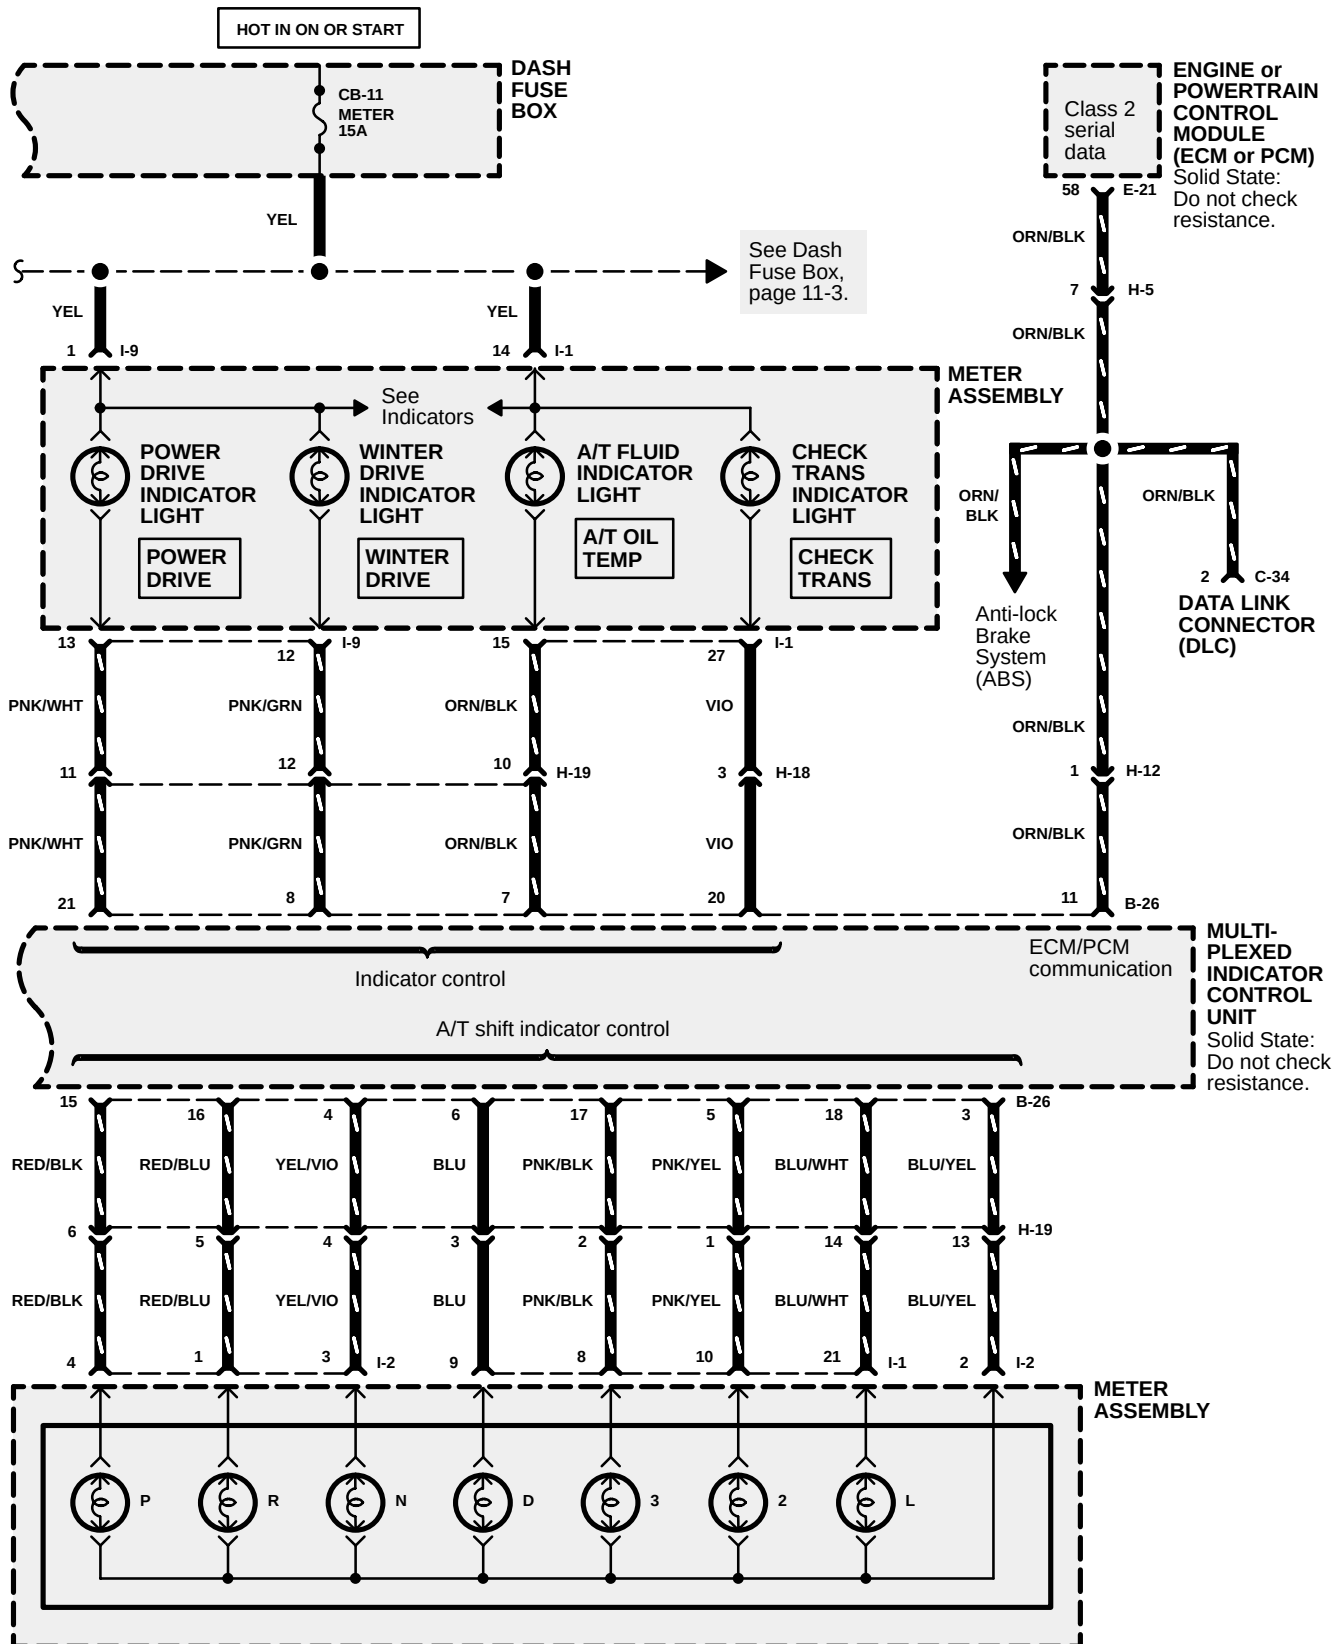

MULTI-PLEXED INDICATOR CONTROL UNIT (3.2L)

Circuit Schematic

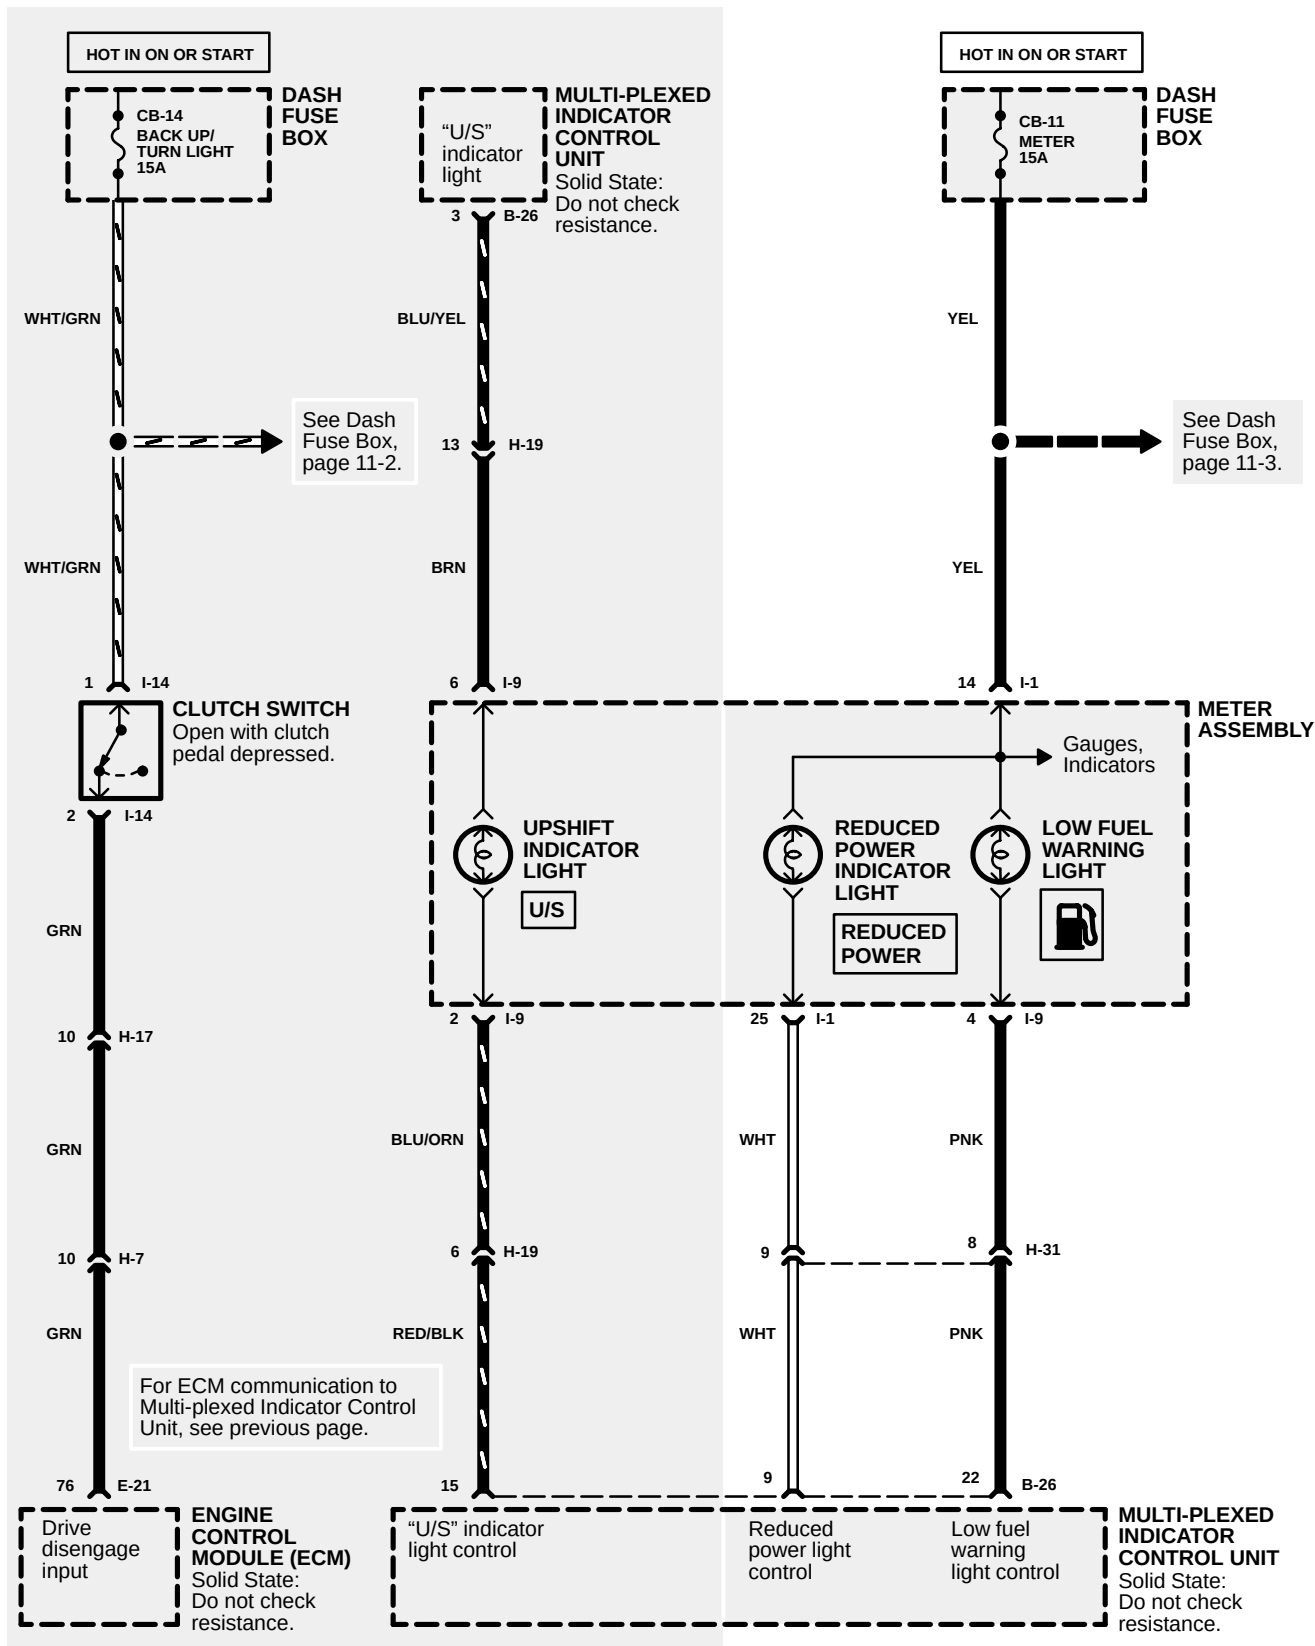

M/T

MULTI-PLEXED INDICATOR CONTROL UNIT (3.2L)

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Clutch Switch	Behind left side of I/P, on clutch pedal support 65
Dash Fuse Box	Left side of I/P, behind trim 58
Data Link Connector (DLC)	
C-34 (16-BLK)	Below left side of I/P, near engine hood release 61
Engine or Powertrain Control	
Module (ECM or PCM)	Left side of engine compartment 44
Multi-plexed Indicator	
Control Unit	Below rear of center console 79
Taillight Relay	Left side of I/P, in dash fuse box 60
Connector	
H-5 (16-GRN)	Left side of engine compartment 27
H-7 (16-WHT)	Left side of engine compartment 27
H-12 (20-BLU)	Below right side of I/P, behind kick panel 80
H-17 (19-BLK)	Behind left kick panel 62
H-18 (22-WHT)	Behind right kick panel 80
H-19 (22-WHT)	Below right side of I/P, behind kick panel 80
H-31 (22-WHT)	Behind left kick panel 63
H-32 (16-WHT)	Behind left kick panel 62
I-1 (30-GRN)	Behind left side of I/P, on top of meter assembly 86
I-2 (16-GRN)	Behind left side of I/P, on top of meter assembly 86
I-9 (14-GRN)	Behind left side of I/P, on top of meter assembly 86
I-32 (13-BLK)	Behind left side of I/P, on connector bracket 66
Ground	
B-6	Below center console 81
B-8	Below center console 81