

--- : RHD

30 () W/FR.RR FOG LAMP 30

BAT+

Ef1 80A

R

C203 1

R

F2 10A

Or

C206 11

Or

S201 5 6

Or

(3) 2 1 (2)

OFF	OFF			
1STEP	ON	○	○	
2STEP	ON	○	○	

HEAD LAMP SWITCH

4 (6)

W

Illumination Relay Circuit

GB

RY

HEAD LAMP RELAY

86 30 85 87

C201 L 6

C201 L 7

Dimmer S/W

PASSING S/W

DIMMER & PASSING S/W

LOW HI

5 4

Lg Sb

C202 7 8

C202 11 13

S202

Cluster High beam Indicator

Ef11 10A

Ef12 10A

Ef10 20A

GW

BY

LgB

Y

HEAD LAMP (LH)

HEAD LAMP (RH)

LOW HI

5 4

6

B

G102

G103

31

GND

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C201(7PIN. GRAY)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
S101 (9PIN. BLACK)	Splice Pack	Engine Room Relay And Fuse Box
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S202 (20PIN. ORANGE)	Splice Pack	Next to Passenger Room Relay Box
G102	Ground	Fender Below Engine Room Fuse Box
G103	Ground	Fender Next to Air Cleaner Mousing

C201
W/H INSTRUMENT PANEL

C202
W/H IP

C203
W/H IP


S101 (BLACK)

S201 (BLUE)

S202 (ORANGE)

The diagram illustrates the wiring for six modules: C201, C202, C203, S101, S201, and S202. Each module is represented by a grid of pins (1-11) with specific connections indicated by lines and labels. The connections are as follows:


- C201:** 1-2, 3-4, 5-6, 7-8, 9-10, 11-12, 13-14, 15-16, 17-18, 19-20, 21-22, 23-24, 25-26, 27-28, 29-30, 31-32, 33-34, 35-36, 37-38, 39-40, 41-42, 43-44, 45-46, 47-48, 49-50, 51-52, 53-54, 55-56, 57-58, 59-60, 61-62, 63-64, 65-66, 67-68, 69-70, 71-72, 73-74, 75-76, 77-78, 79-80, 81-82, 83-84, 85-86, 87-88, 89-90, 91-92, 93-94, 95-96, 97-98, 99-100, 101-102, 103-104, 105-106, 107-108, 109-110, 111-112, 113-114, 115-116, 117-118, 119-120, 121-122, 123-124, 125-126, 127-128, 129-130, 131-132, 133-134, 135-136, 137-138, 139-140, 141-142, 143-144, 145-146, 147-148, 149-150, 151-152, 153-154, 155-156, 157-158, 159-160, 161-162, 163-164, 165-166, 167-168, 169-170, 171-172, 173-174, 175-176, 177-178, 179-180, 181-182, 183-184, 185-186, 187-188, 189-190, 191-192, 193-194, 195-196, 197-198, 199-200, 201-202, 203-204, 205-206, 207-208, 209-210, 211-212, 213-214, 215-216, 217-218, 219-220, 221-222, 223-224, 225-226, 227-228, 229-230, 231-232, 233-234, 235-236, 237-238, 239-240, 241-242, 243-244, 245-246, 247-248, 249-250, 251-252, 253-254, 255-256, 257-258, 259-260, 261-262, 263-264, 265-266, 267-268, 269-270, 271-272, 273-274, 275-276, 277-278, 279-280, 281-282, 283-284, 285-286, 287-288, 289-290, 291-292, 293-294, 295-296, 297-298, 299-300, 301-302, 303-304, 305-306, 307-308, 309-310, 311-312, 313-314, 315-316, 317-318, 319-320, 321-322, 323-324, 325-326, 327-328, 329-330, 331-332, 333-334, 335-336, 337-338, 339-340, 341-342, 343-344, 345-346, 347-348, 349-350, 351-352, 353-354, 355-356, 357-358, 359-360, 361-362, 363-364, 365-366, 367-368, 369-370, 371-372, 373-374, 375-376, 377-378, 379-380, 381-382, 383-384, 385-386, 387-388, 389-390, 391-392, 393-394, 395-396, 397-398, 399-400, 401-402, 403-404, 405-406, 407-408, 409-410, 411-412, 413-414, 415-416, 417-418, 419-420, 421-422, 423-424, 425-426, 427-428, 429-430, 431-432, 433-434, 435-436, 437-438, 439-440, 441-442, 443-444, 445-446, 447-448, 449-450, 451-452, 453-454, 455-456, 457-458, 459-460, 461-462, 463-464, 465-466, 467-468, 469-470, 471-472, 473-474, 475-476, 477-478, 479-480, 481-482, 483-484, 485-486, 487-488, 489-490, 491-492, 493-494, 495-496, 497-498, 499-500, 501-502, 503-504, 505-506, 507-508, 509-510, 511-512, 513-514, 515-516, 517-518, 519-520, 521-522, 523-524, 525-526, 527-528, 529-530, 531-532, 533-534, 535-536, 537-538, 539-540, 541-542, 543-544, 545-546, 547-548, 549-550, 551-552, 553-554, 555-556, 557-558, 559-560, 561-562, 563-564, 565-566, 567-568, 569-570, 571-572, 573-574, 575-576, 577-578, 579-580, 581-582, 583-584, 585-586, 587-588, 589-590, 591-592, 593-594, 595-596, 597-598, 599-600, 601-602, 603-604, 605-606, 607-608, 609-610, 611-612, 613-614, 615-616, 617-618, 619-620, 621-622, 623-624, 625-626, 627-628, 629-630, 631-632, 633-634, 635-636, 637-638, 639-640, 641-642, 643-644, 645-646, 647-648, 649-650, 651-652, 653-654, 655-656, 657-658, 659-660, 661-662, 663-664, 665-666, 667-668, 669-670, 671-672, 673-674, 675-676, 677-678, 679-680, 681-682, 683-684, 685-686, 687-688, 689-690, 691-692, 693-694, 695-696, 697-698, 699-700, 701-702, 703-704, 705-706, 707-708, 709-710, 711-712, 713-714, 715-716, 717-718, 719-720, 721-722, 723-724, 725-726, 727-728, 729-730, 731-732, 733-734, 735-736, 737-738, 739-740, 741-742, 743-744, 745-746, 747-748, 749-750, 751-752, 753-754, 755-756, 757-758, 759-760, 761-762, 763-764, 765-766, 767-768, 769-770, 771-772, 773-774, 775-776, 777-778, 779-780, 781-782, 783-784, 785-786, 787-788, 789-790, 791-792, 793-794, 795-796, 797-798, 799-800, 801-802, 803-804, 805-806, 807-808, 809-810, 811-812, 813-814, 815-816, 817-818, 819-820, 821-822, 823-824, 825-826, 827-828, 829-830, 831-832, 833-834, 835-836, 837-838, 839-840, 841-842, 843-844, 845-846, 847-848, 849-850, 851-852, 853-854, 855-856, 857-858, 859-860, 861-862, 863-864, 865-866, 867-868, 869-870, 871-872

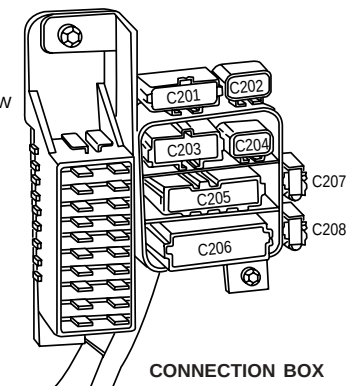

ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

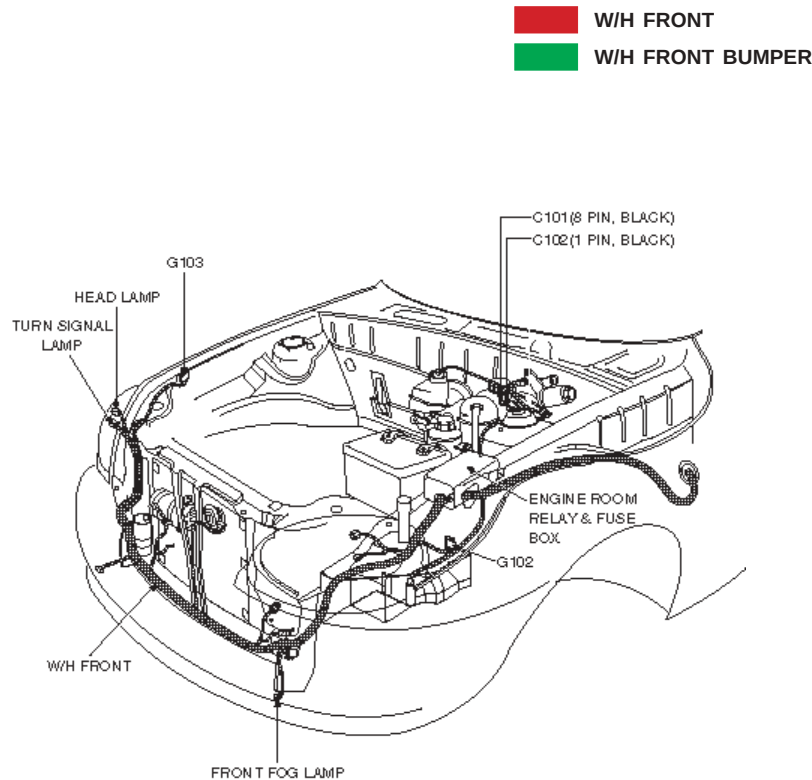

d. SPLICE PACK


S101(BLACK)

3 (RW)	6 (R)	9 (B)
2 (RW)	5 (R)	8 (B)
1 (RW)	4 (R)	7 (B)


- C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
- COOLING FAN RELAY A : "86" Ter
B : "86" Ter
- REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
- BATTERY POWER SUPPLY(E4)
- COOLING FAN RELAY A : "30" Ter
- COOLING FAN RELAY B : "30" Ter
- DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
- GROUND(G102)
POWER WINDOW RELAY "85" Ter
- HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter

() : WITHOUT A/C


S201(BLUE) - LHD

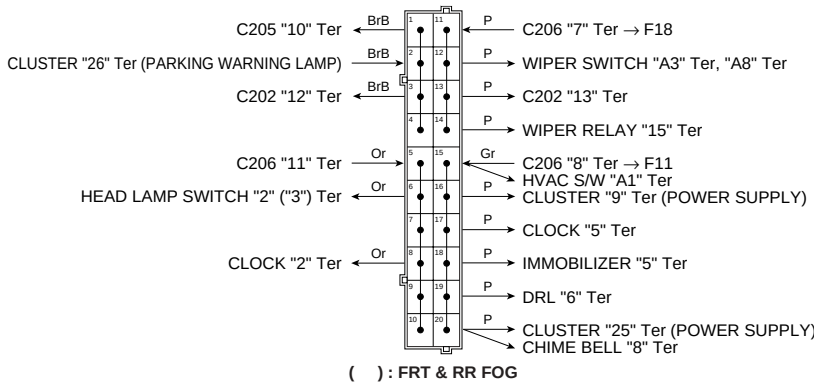

S202(ORANGE)

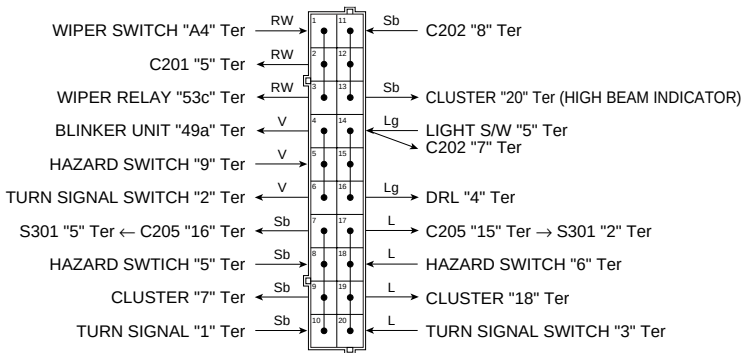


2) HEAD LAMP & DRL (DAYTIME RUNNING LIGHT) CIRCUIT - LHD

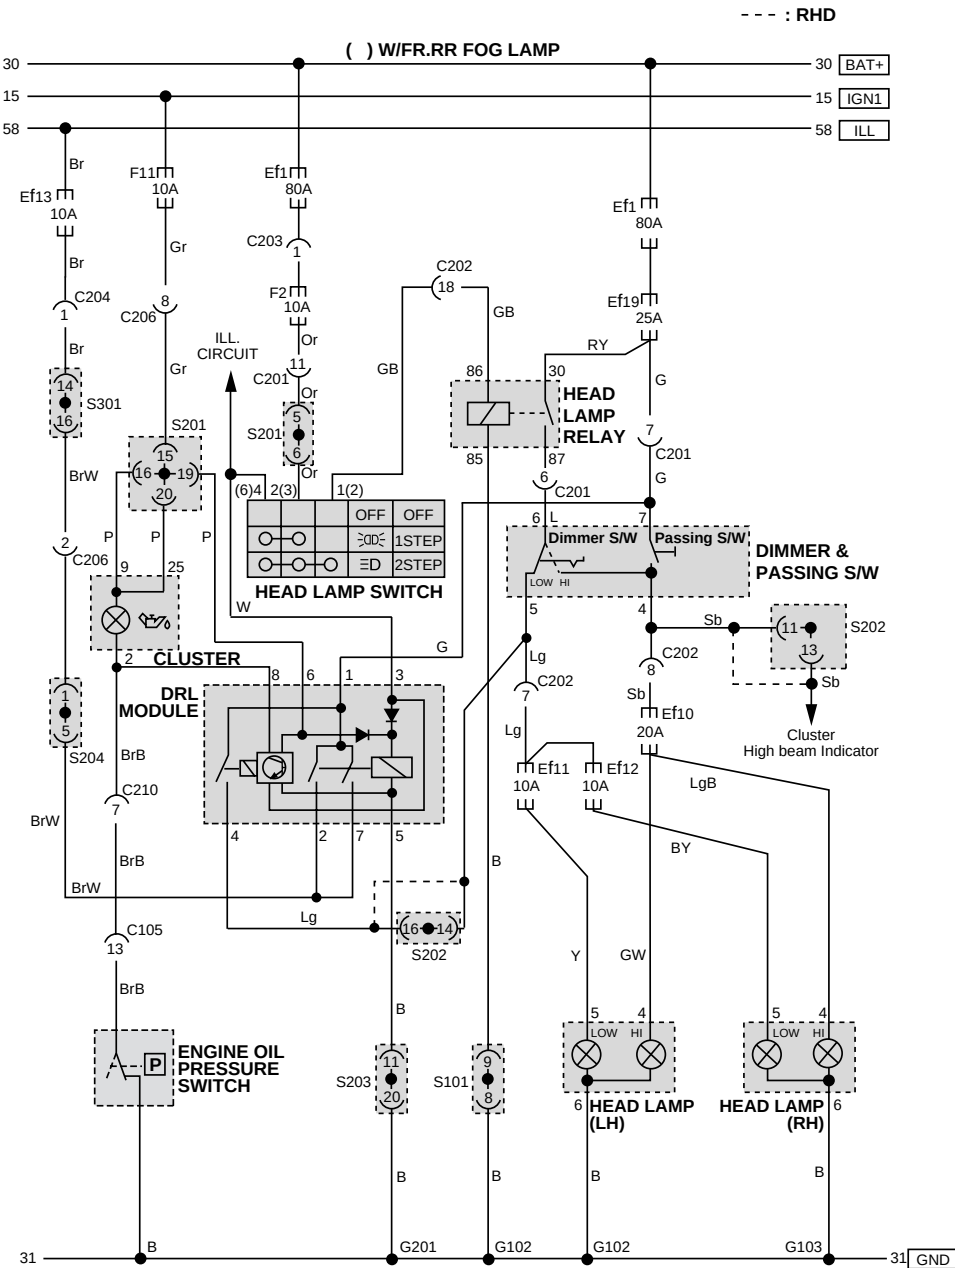

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C105 (16PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C201 (7PIN. GRAY)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C210 (20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)
S101 (9PIN. BLACK)	Splice Pack	Engine Room Relay And Fuse Box
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S202 (20PIN. ORANGE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORANGE)	Splice Pack	Below Driver Seat
G102	Ground	Fender Below Engine Room Fuse Box
G103	Ground	Fender Next to Air Cleaner Mousing
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

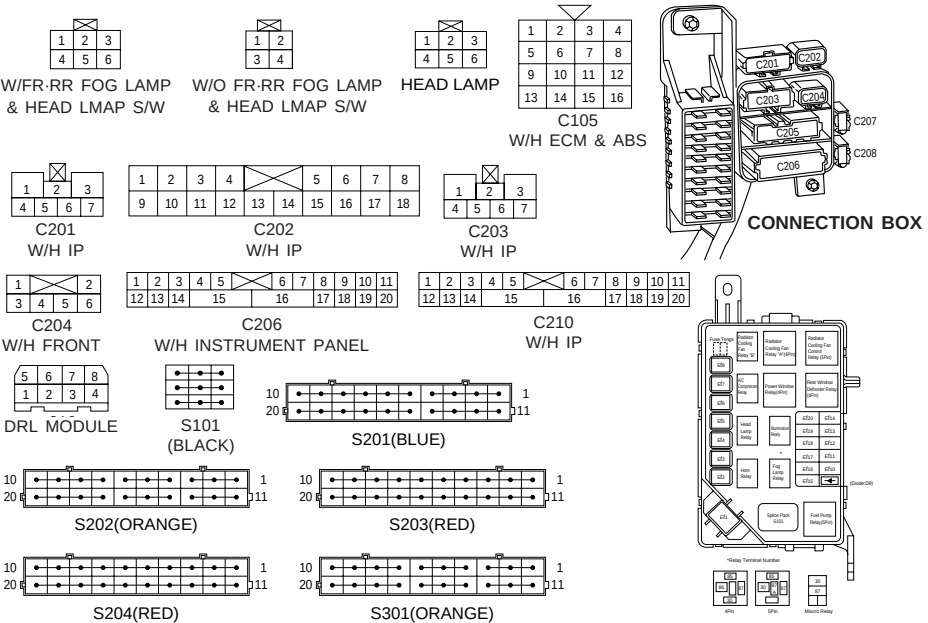


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

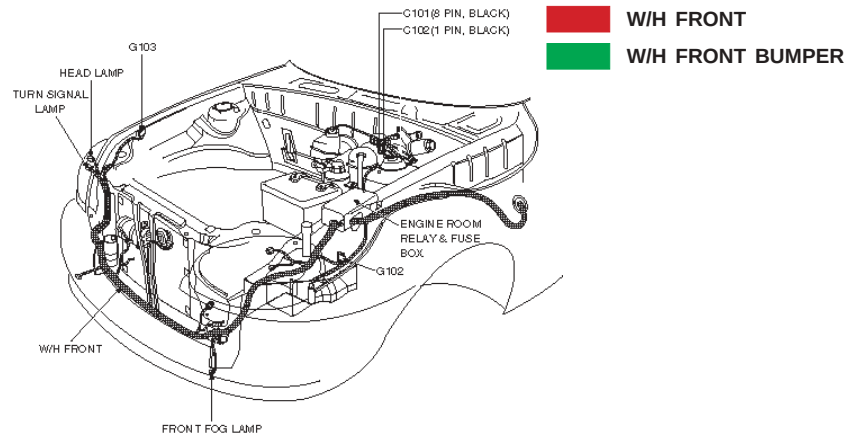

d. SPLICE PACK


S101(BLACK)

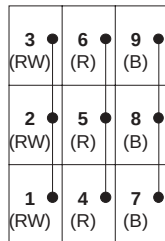

(): WITHOUT A/C


- C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
- COOLING FAN RELAY A : "86" Ter
B : "86" Ter
- REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
- BATTERY POWER SUPPLY(Ef4)
- COOLING FAN RELAY A : "30" Ter
- COOLING FAN RELAY B : "30" Ter
- DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
- GROUND(G102)
POWER WINDOW RELAY "85" Ter
- HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter

S201(BLUE) - LHD

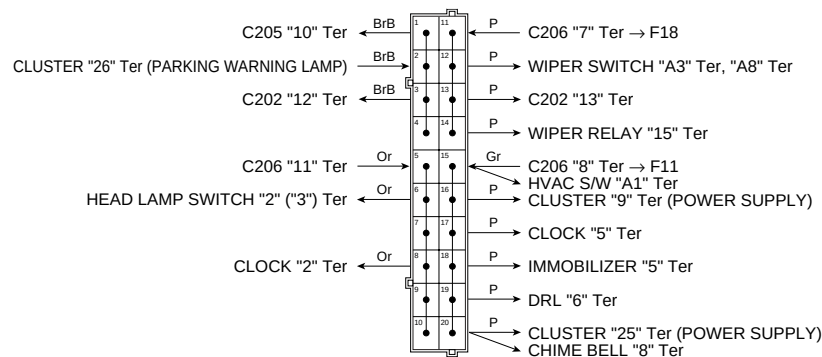


(): FRT & RR FOG


S203(RED) - LHD

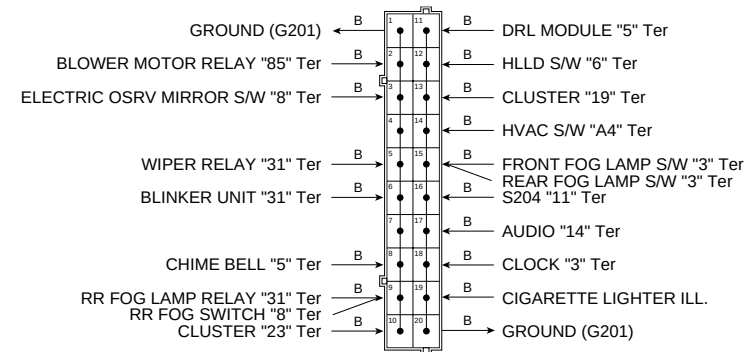


S204(RED) - LHD

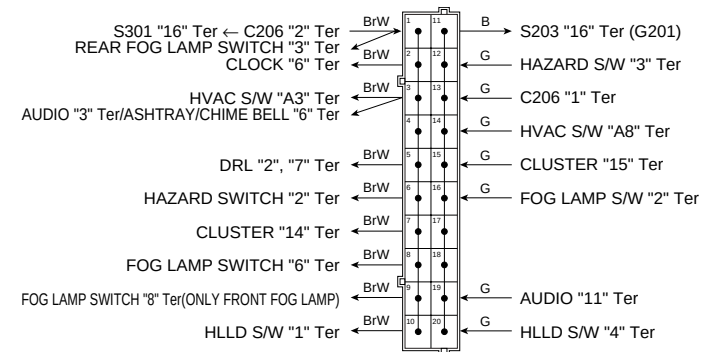

S301(ORANGE) - NOTCH BACK

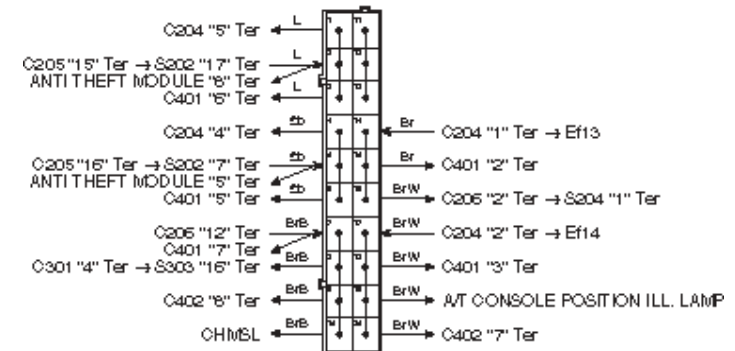


3) HEAD LAMP LEVELING DEVICE (HLLD) CIRCUIT

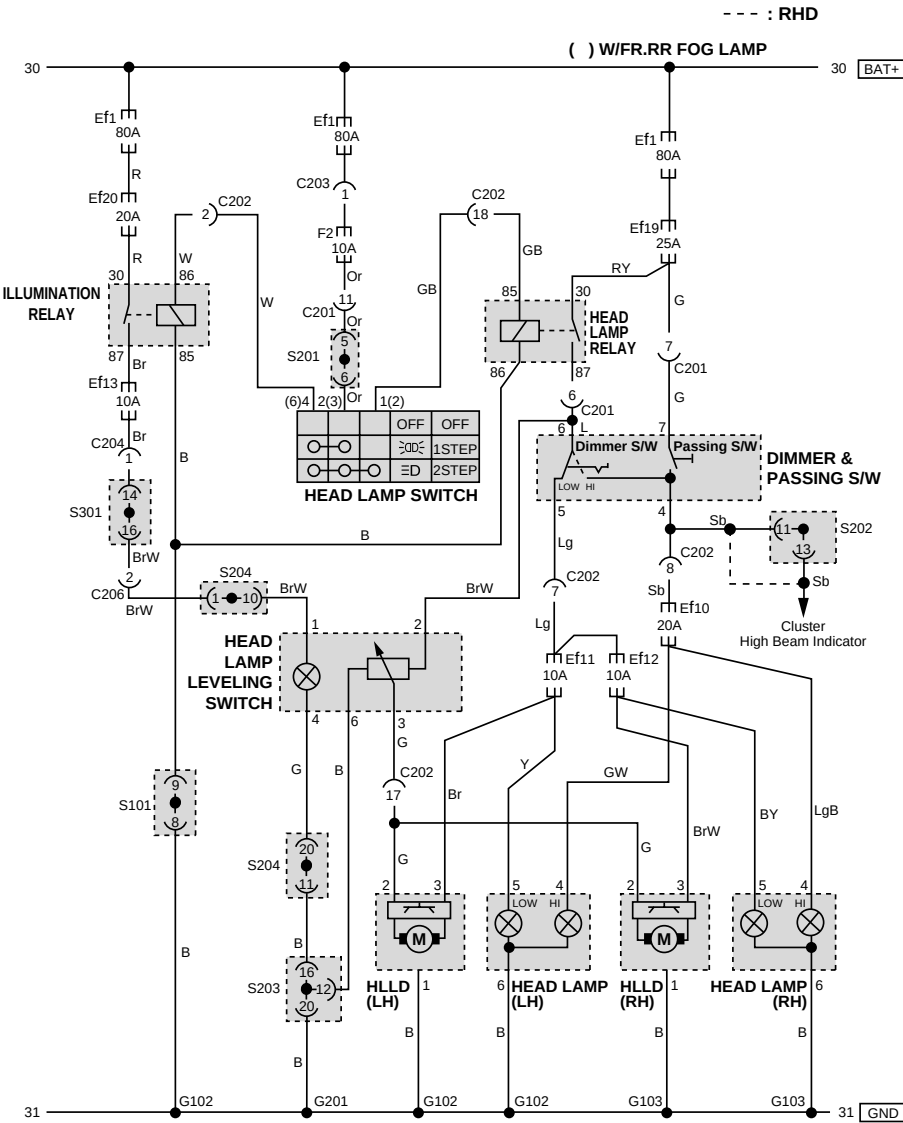

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C201 (7PIN. GRAY)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
S101 (9PIN. BLACK)	Splice Pack	Engine Room Relay And Fuse Box
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORANGE)	Splice Pack	Below Driver Seat
G102	Ground	Fender Below Engine Room Fuse Box
G103	Ground	Fender Next to Air Cleaner Mousing
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

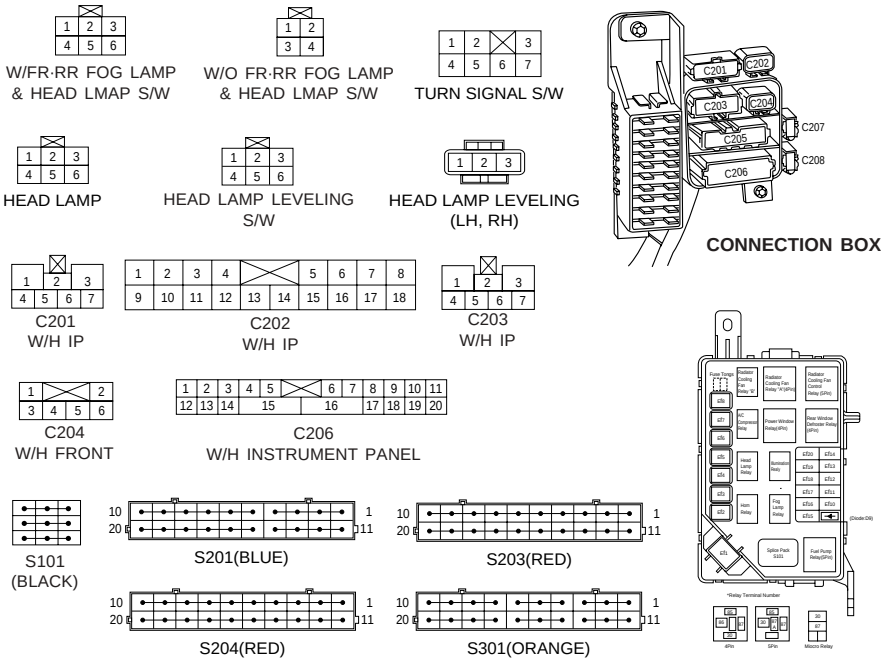


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

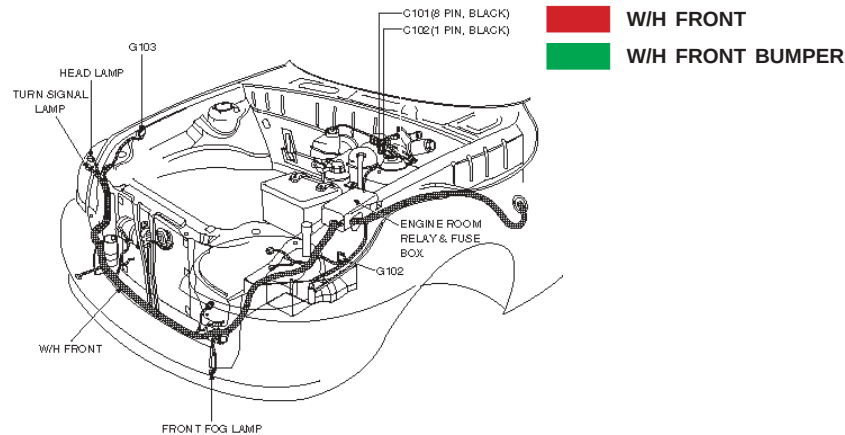

d. SPLICE PACK


S101(BLACK)

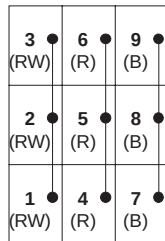

(): WITHOUT A/C


- C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
- COOLING FAN RELAY A : "86" Ter
B : "86" Ter
- REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
- BATTERY POWER SUPPLY(Ef4)
- COOLING FAN RELAY A : "30" Ter
- COOLING FAN RELAY B : "30" Ter
- DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
- GROUND(G102)
POWER WINDOW RELAY "85" Ter
- HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter

S201(BLUE) - LHD

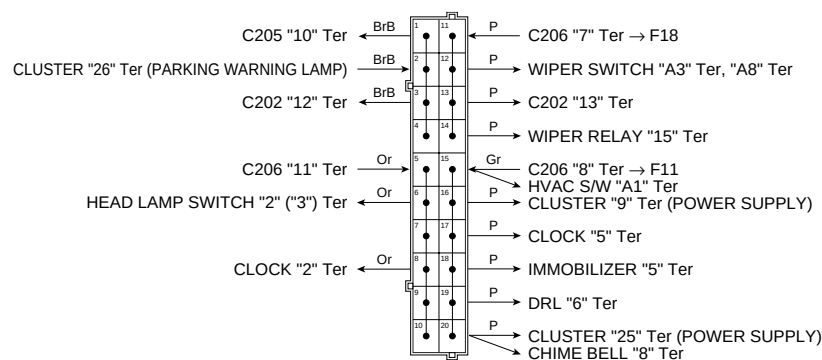


(): FRT & RR FOG


S203(RED) - LHD

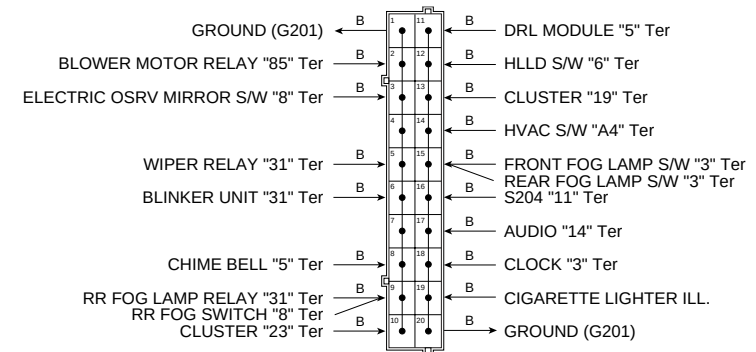

S204(RED) - LHD

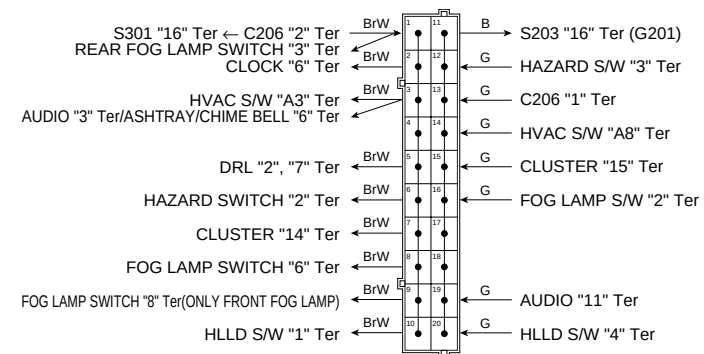


S301(ORANGE) - NOTCH BACK

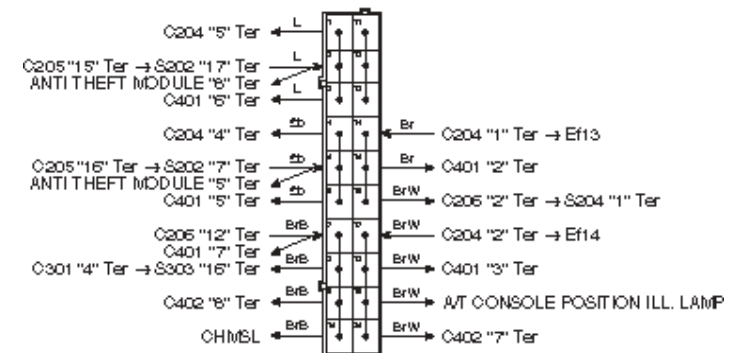

10. PARKING LAMP







1) HEAD LAMP SWITCH, ILLUMINATION RELAY CIRCUIT

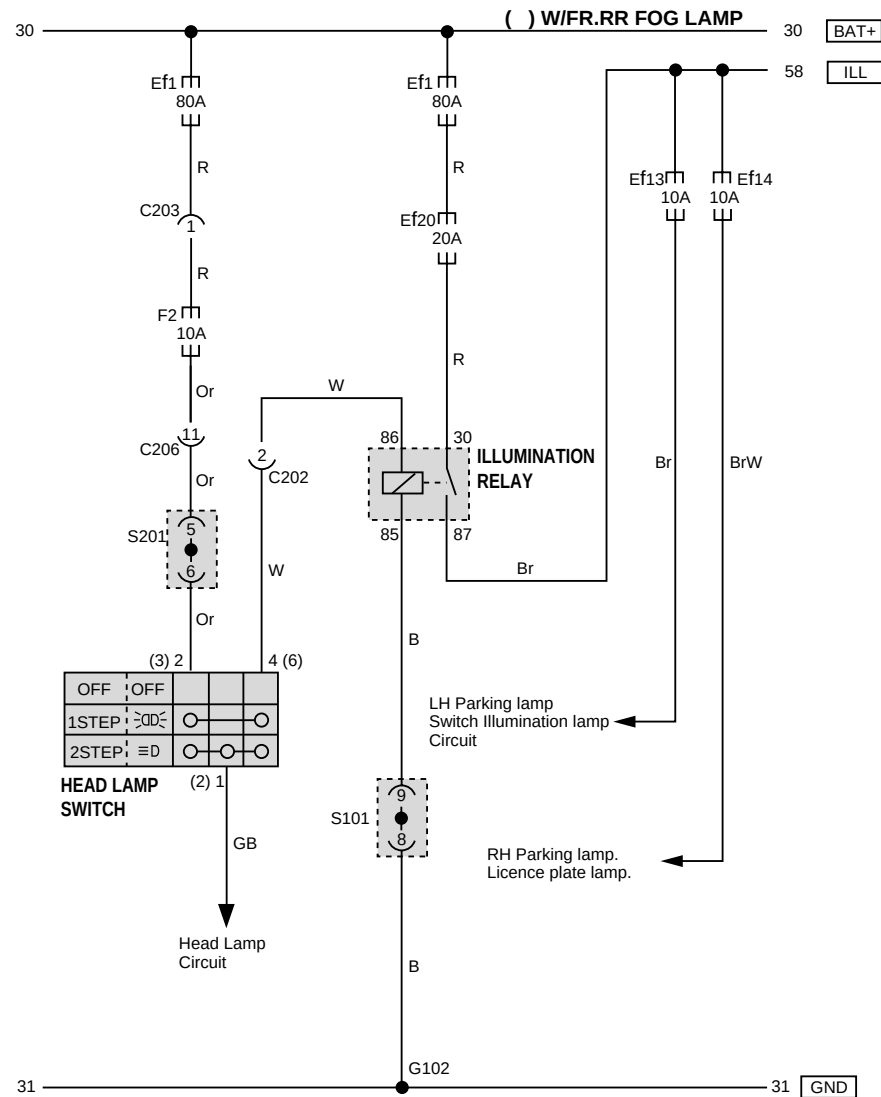

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C202(18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
S101(9PIN. BLACK)	Splice Pack	Engine Room Relay And Fuse Box
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
G102	Ground	Fender Below Engine Room Fuse Box


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

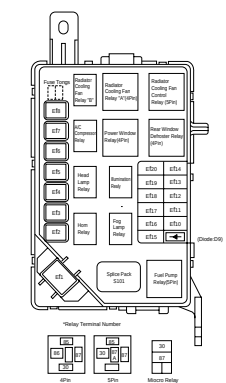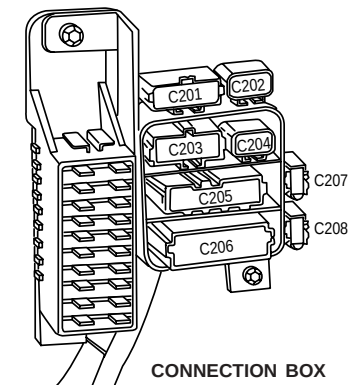

ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

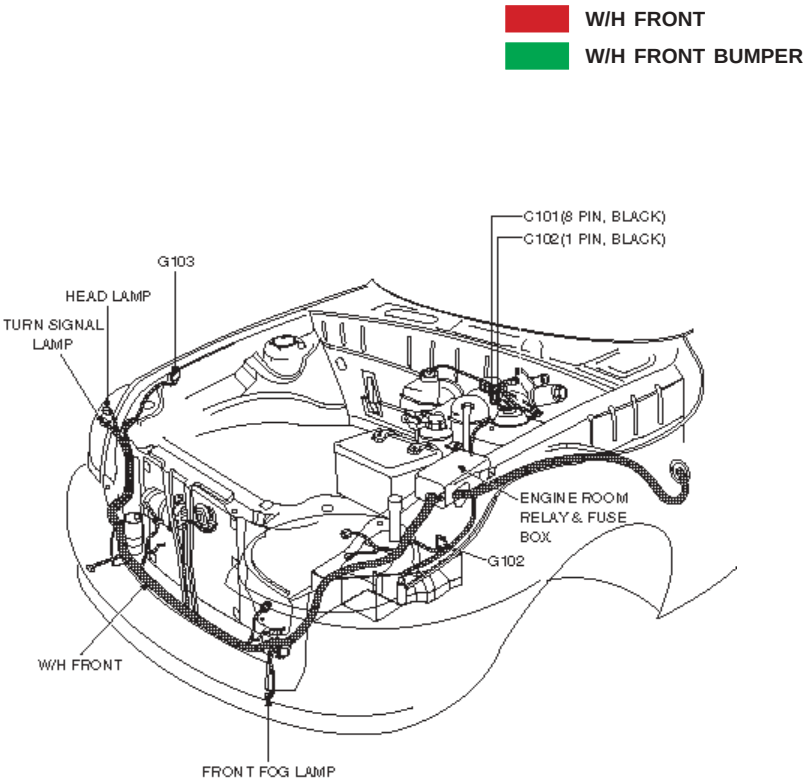

d. SPLICE PACK


S101(BLACK)

3 (RW)	6 (R)	9 (B)
2 (RW)	5 (R)	8 (B)
1 (RW)	4 (R)	7 (B)

- C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
- COOLING FAN RELAY A : "86" Ter
B : "86" Ter
- REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
- BATTERY POWER SUPPLY(E4)
- COOLING FAN RELAY A : "30" Ter
- COOLING FAN RELAY B : "30" Ter
- DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
- GROUND(G102)
POWER WINDOW RELAY "85" Ter
- HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter


() : WITHOUT A/C

S201(BLUE) - LHD

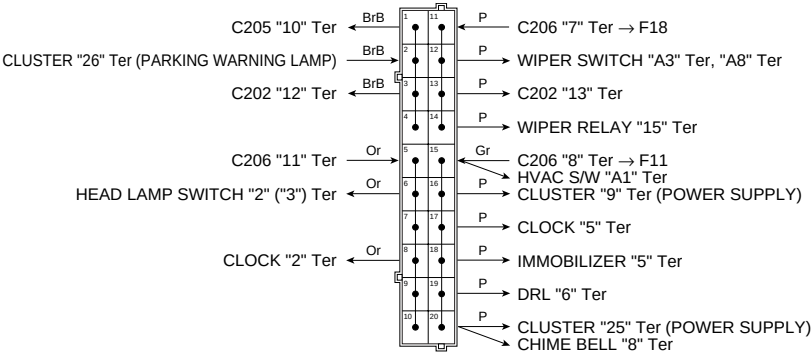

() : FRT & RR FOG


2) PARKING LAMP (LH) & SWITCH POSITION ILLUMINATION CIRCUIT
2-1) NOTCH BACK

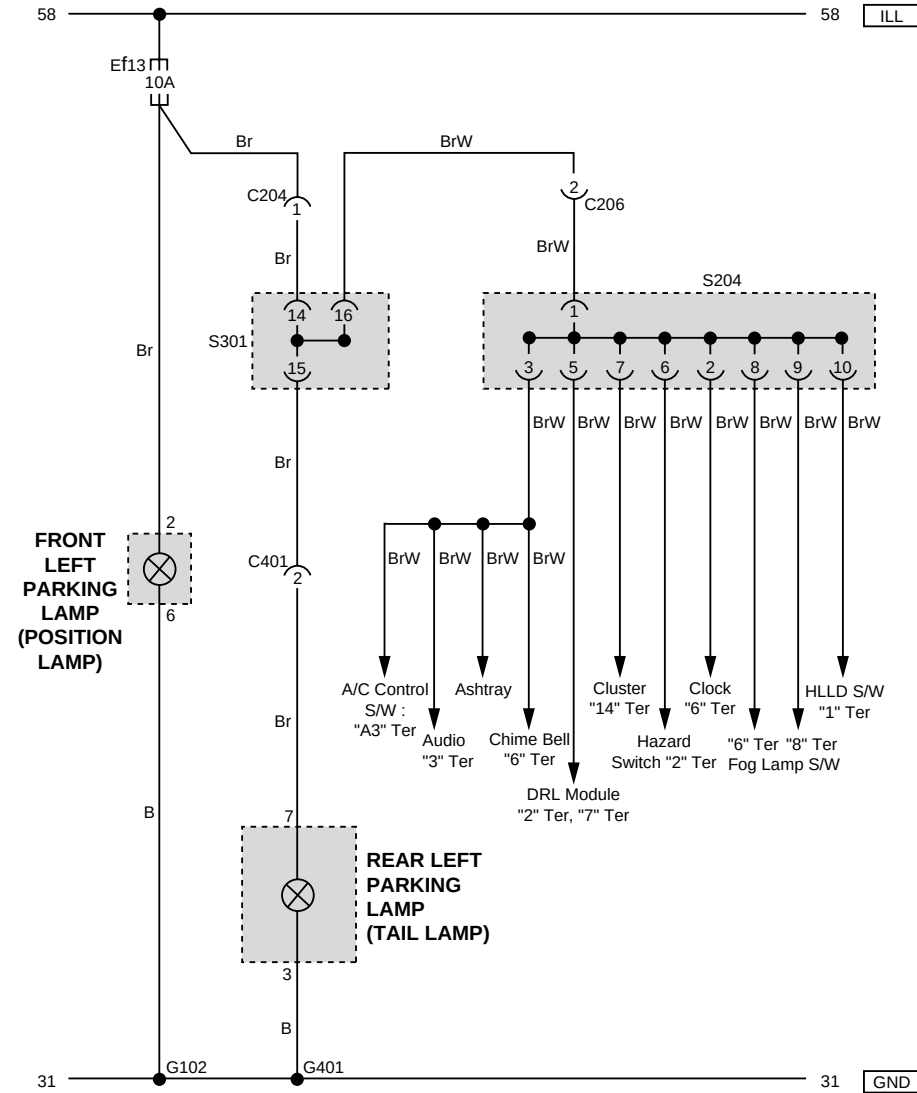

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C204(6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C401(10PIN. WHITE)	W/H Floor - Trunk	Above Left Seat Belt Retractor In Trunk
S204(20PIN. RED)	Splice Pack	Above Glove Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G102	Ground	Fender Below Engine Room Fuse Box
G401	Ground	Center Of Rear End Panel In Trunk

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

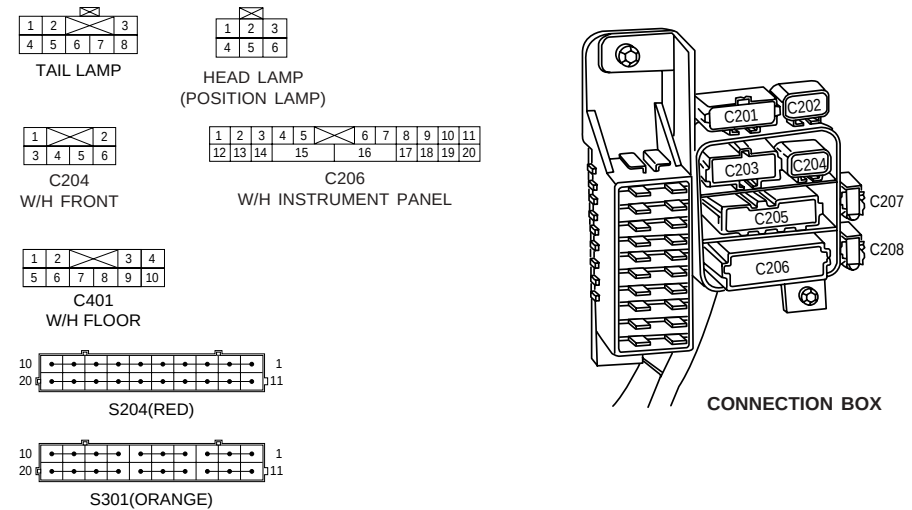


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

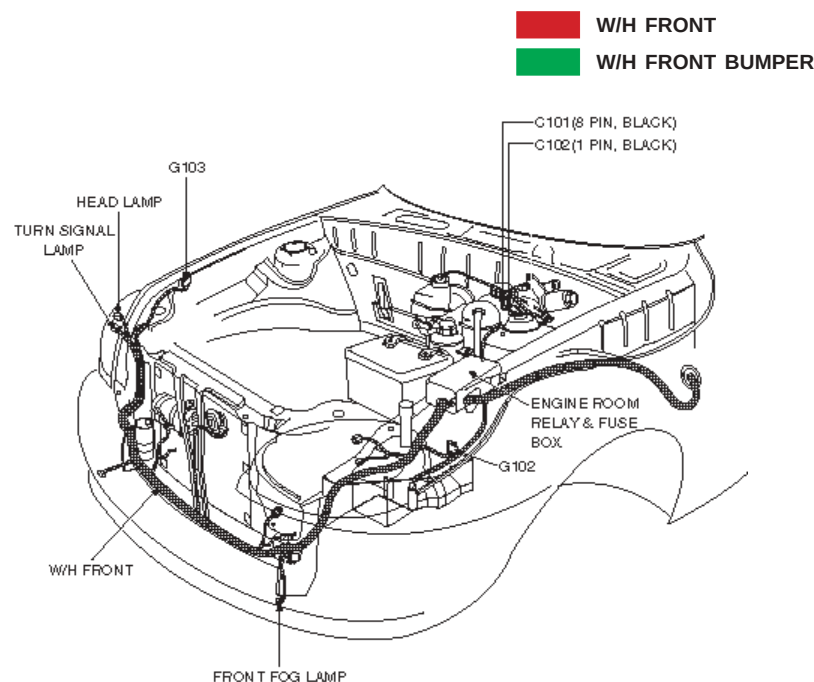


- W/H TRUNK

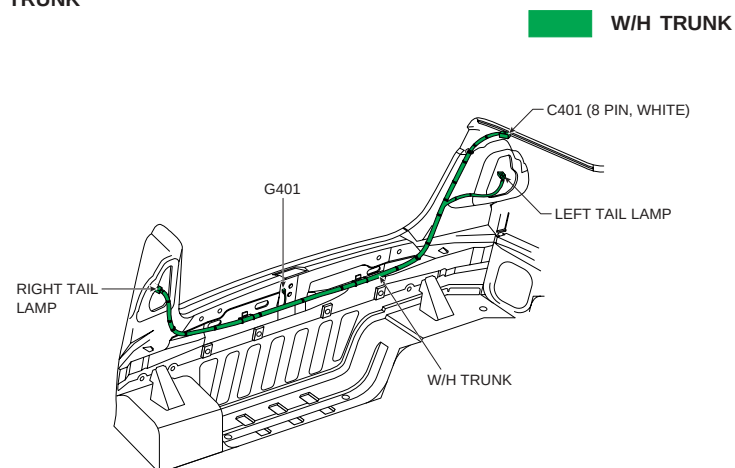

d. SPLICE PACK

S204(RED) - LHD

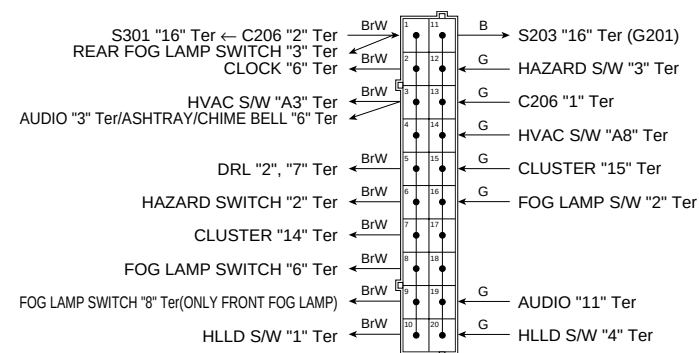

S301(ORANGE) - NOTCH BACK

