


2-2) HATCH BACK

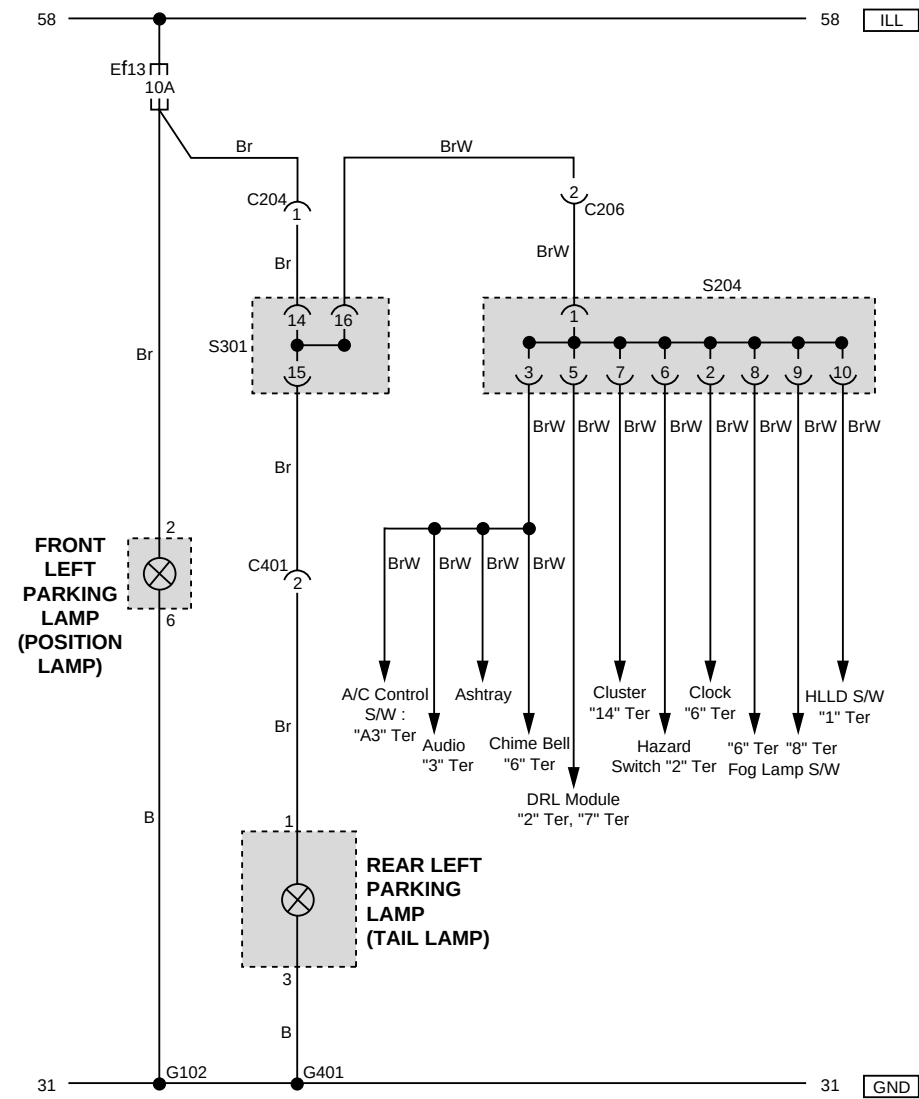

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C204(6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C401(8PIN. WHITE)	W/H Floor - Trunk	Above Left Seat Belt Retractor In Trunk
S204(20PIN. RED)	Splice Pack	Above Glove Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G102	Ground	Fender Below Engine Room Fuse Box
G401	Ground	Center Of Rear End Panel In Trunk

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




TAIL LAMP




HEAD LAMP
(POSITION LAMP)




C204
W/H FRONT



C206
W/H INSTRUMENT PANEL




C401
W/H FLOOR



S204(RED)




S301(ORANGE)

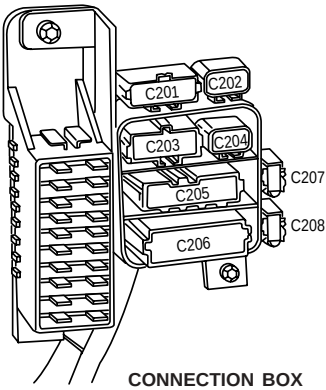


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

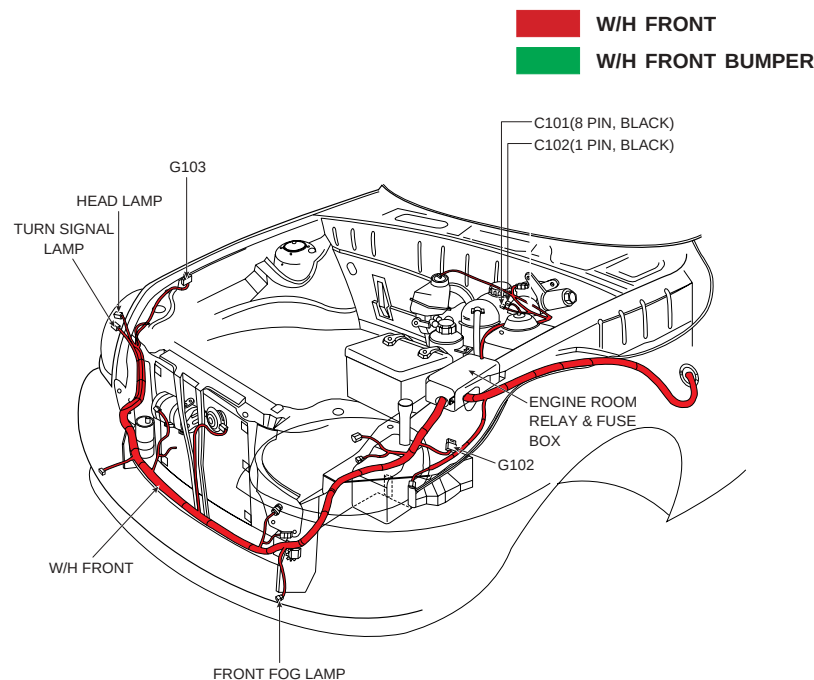


- W/H TRUNK

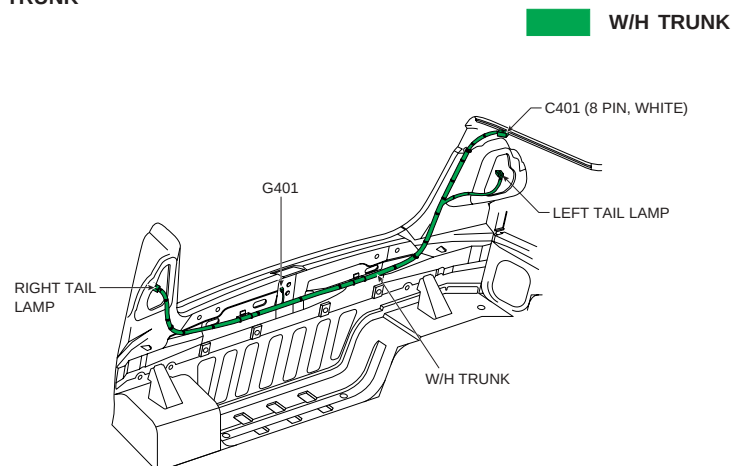


d. SPLICE PACK


S204(RED) - LHD

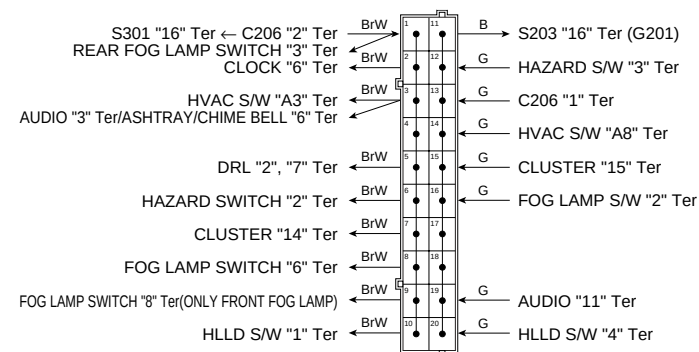

S301(ORANGE) - HATCH BACK

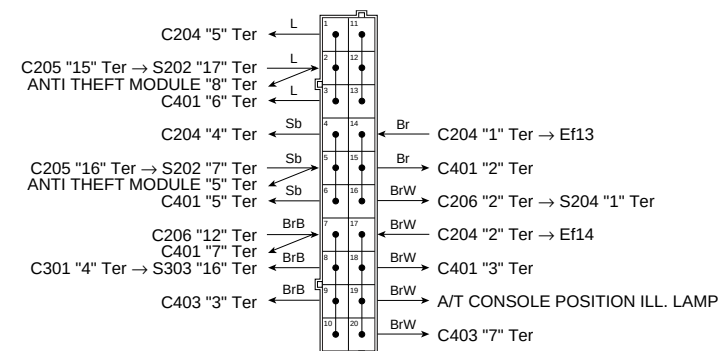




3) ILLUMINATION DIMMER CONTROL CIRCUIT - RHD

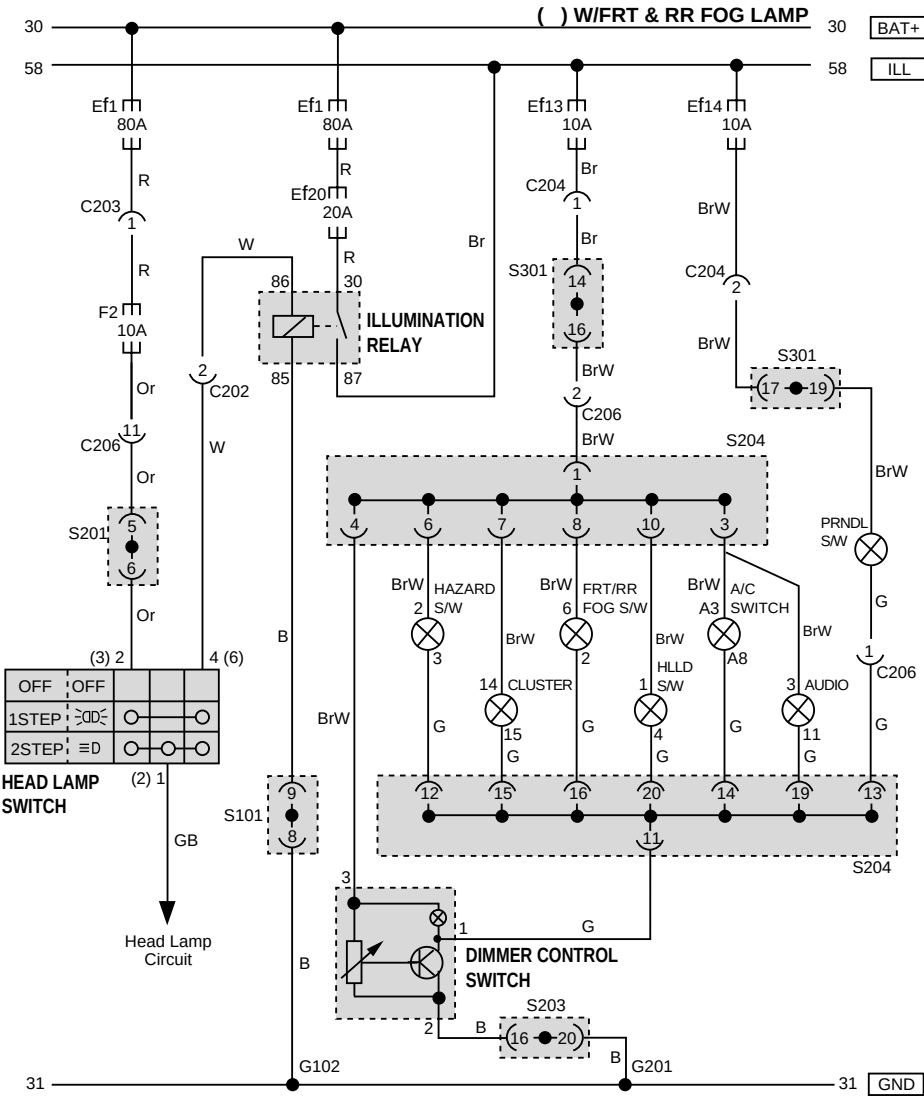

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
S101 (9PIN. BLACK)	Splice Pack	Engine Room Relay And Fuse Box
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORANGE)	Splice Pack	Below Driver Seat
G102	Ground	Fender Below Engine Room Fuse Box
G201	Ground	Below Right Front Console Box


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

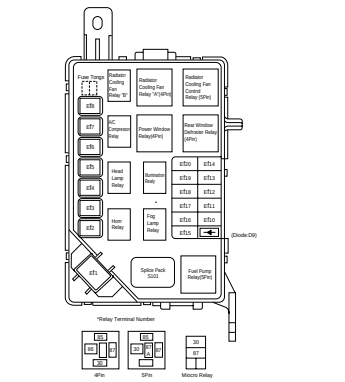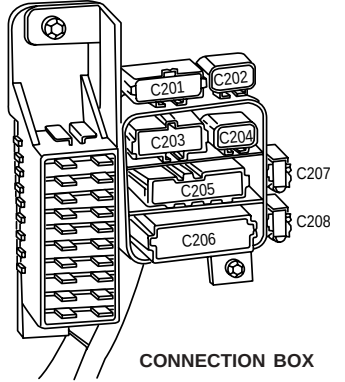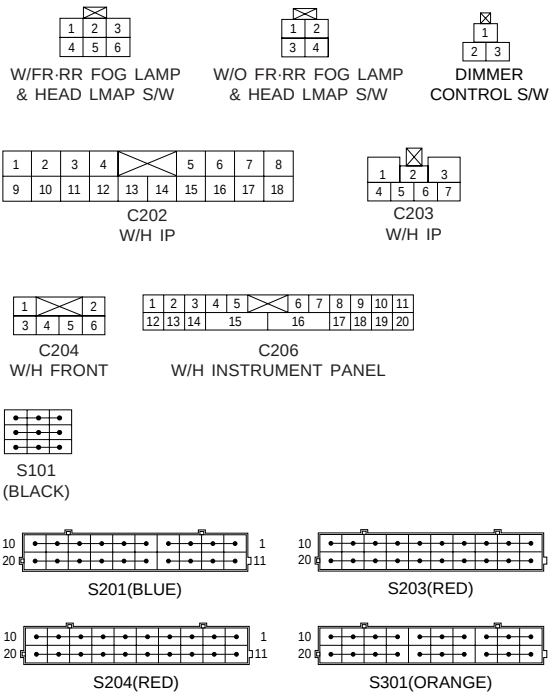

ENGINE ROOM FUSE BOX


c. POSITION OF CONNECTORS AND GROUNDS

- W/H INSTRUMENT PANEL

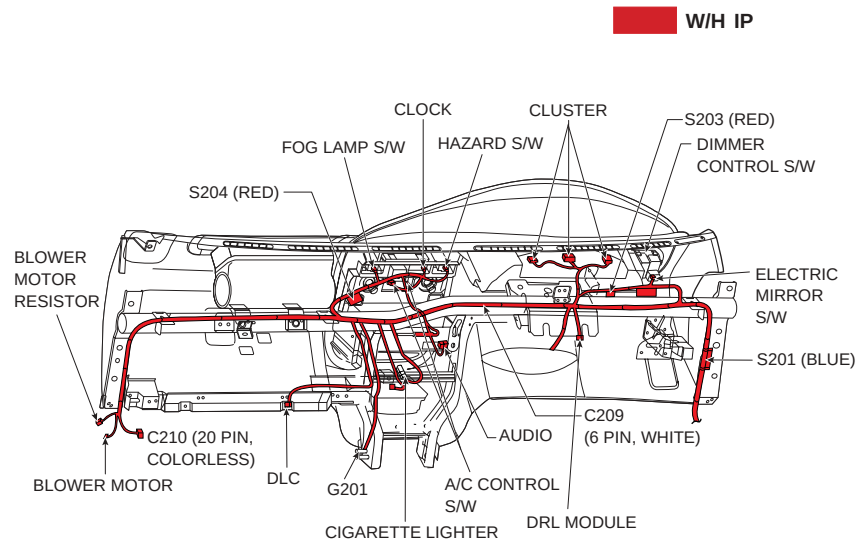


d. SPLICE PACK


S201(BLUE) - RHD

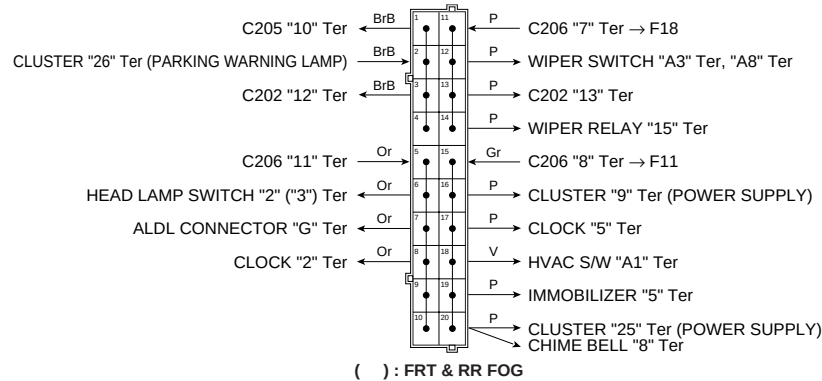


S203(RED) - RHD

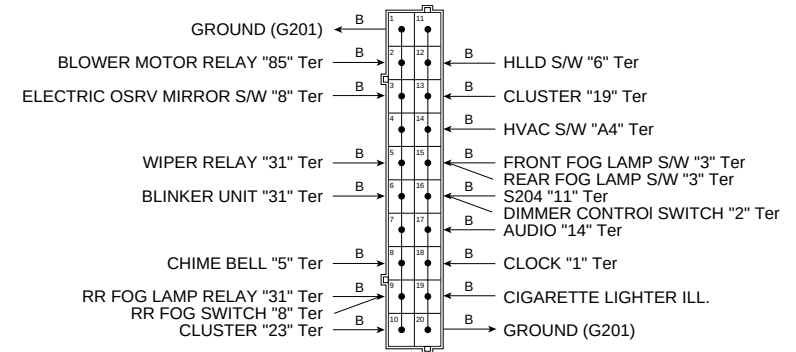

S204(RED) - RHD

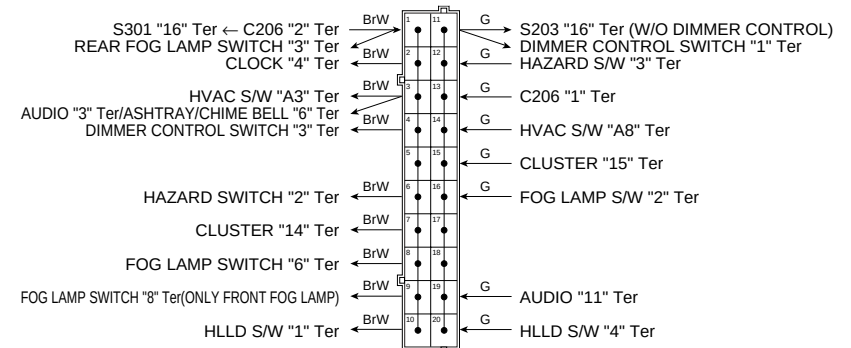


S301(ORANGE) - NOTCH BACK

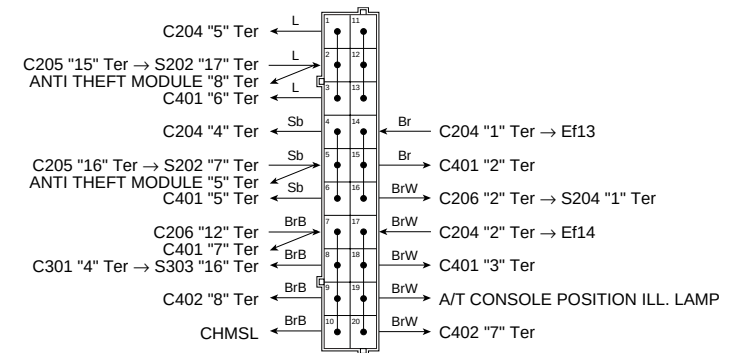




b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

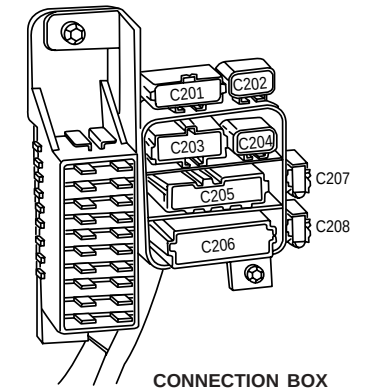


c. POSITION OF CONNECTORS AND GROUNDS

• W/H TRUNK

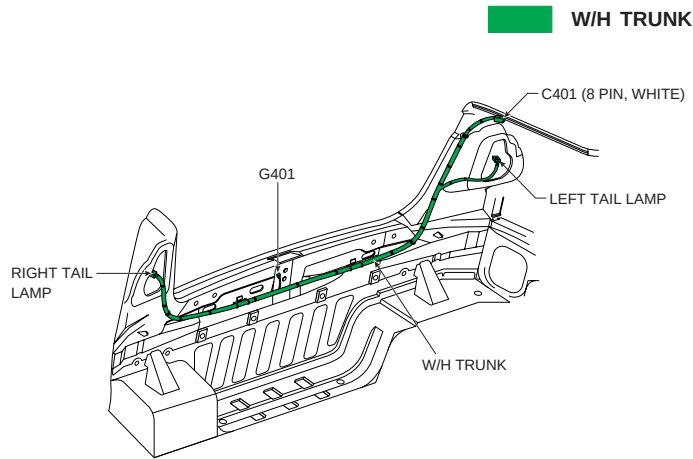


• TRUNK INSIDE LEFT

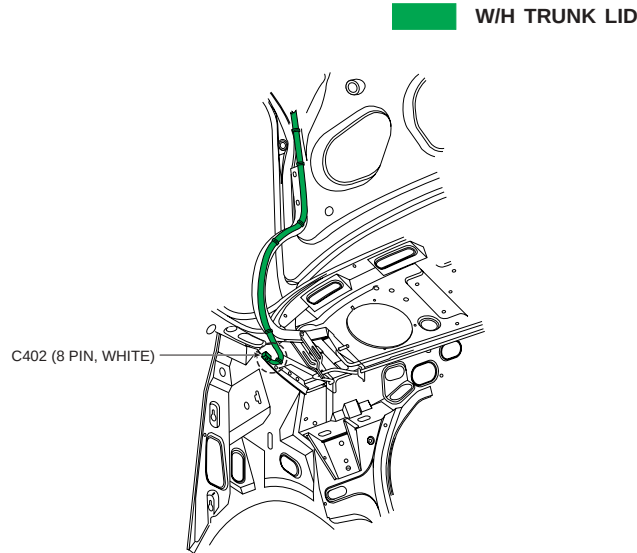


d. SPLICE PACK


S203(RED) - LHD

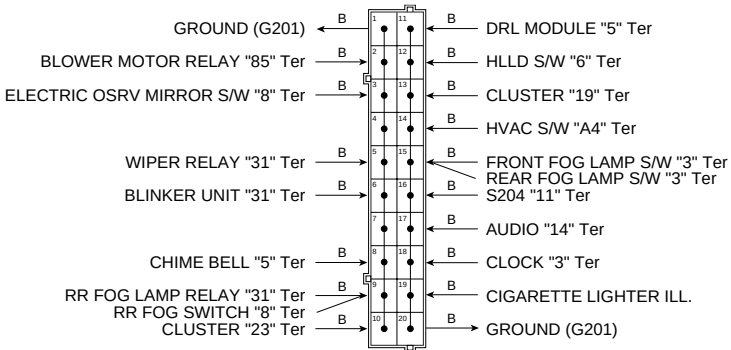

S204(RED) - LHD

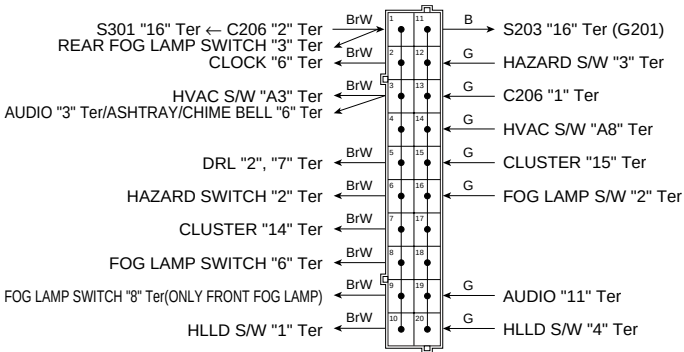

S301(ORANGE) - NOTCH BACK

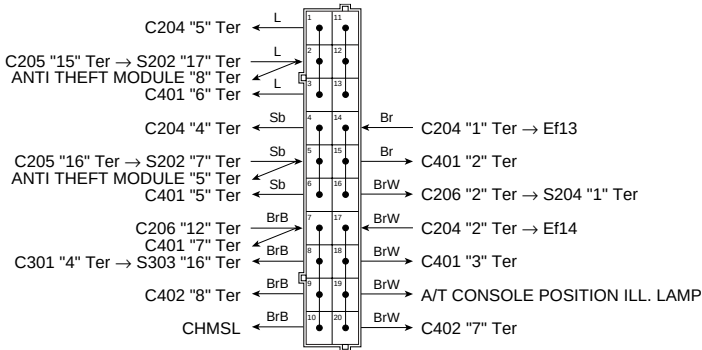




CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C204(6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C401(8PIN. WHITE)	W/H Floor -Trunk	Above Left Seat Belt Retractor In Trunk
C403(8PIN. WHITE)	W/H Floor - Tail Gate Extension	Inside Tunk
C404(5PIN. WHITE)	W/H Floor - Tail Gate Extension	Inside Trunk
C451(8PIN. WHITE)	W/H Tail Gate Extension - Tail Gate	Inside Tail Gate
C452(4PIN. WHITE)	W/H Tail Gate Extension -Tail Gate	Inside Tail Gate
S203(20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204(20PIN. RED)	Splice Pack	Above Glove Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G103	Ground	Fender Next to Air Cleaner Housing
G201	Ground	Below Right Front Consile Box
G301	Ground	Below Driver Seat
G401	Ground	Center of Rear End Panel In Trunk

The diagram illustrates various wiring configurations for the tailgate lamp assembly, categorized by the number of tailgate tail lamps and the presence of a Sporty Pack. The configurations are as follows:


- C201:** HEAD LAMP (POSITION LAMP). Configuration: 1 2 3 / 4 5 6.
- C202:** TAILGATE TAIL LAMP (W/O SPORTY PACK). Configuration: 1 2 3 / 3 4 5 6.
- C203:** TAILGATE TAIL LAMP (W/ SPORTY PACK). Configuration: 1 2 3 4.
- C204:** C204 W/H FRONT. Configuration: 1 2 3 4 / 3 4 5 6.
- C205:** W/H INSTRUMENT PANEL. Configuration: 1 2 3 4 5 6 7 8 9 10 11 / 12 13 14 15 16 17 18 19 20.
- C206:** C206 W/H EXT. A/T. Configuration: 1 2 3 4.
- C207:** W/H FLOOR. Configuration: 1 2 3 / 4 5 6 7 8.
- C208:** W/H TAIL GATE EXTENSION. Configuration: 1 2 3 / 4 5 6 7 8.
- C209:** W/H GATE EXTENSION. Configuration: 1 2 / 3 4 5.
- C210:** W/H TAIL GATE EXTENSION. Configuration: 1 2 3 / 4 5 6 7 8.
- C211:** W/H TAIL GATE EXTENSION. Configuration: 1 2 / 3 4.
- C212:** W/H TAIL GATE EXTENSION. Configuration: 1 2 / 3 4.

A large diagram on the right shows the physical wiring harness with components C201 through C206 labeled.

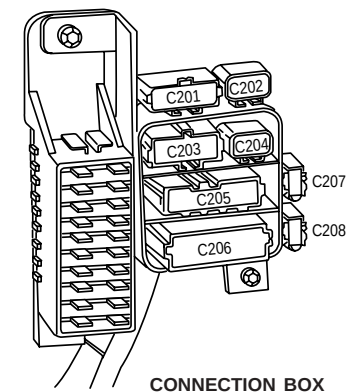


c. POSITION OF CONNECTORS AND GROUNDS

• W/H TRUNK

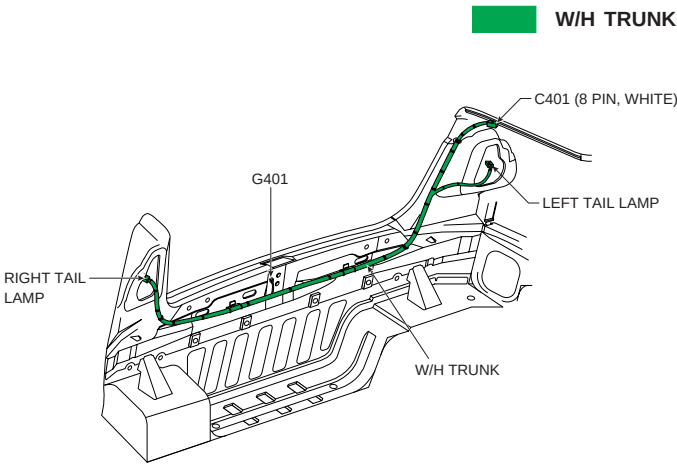


• W/H FRONT, FRONT BUMPER

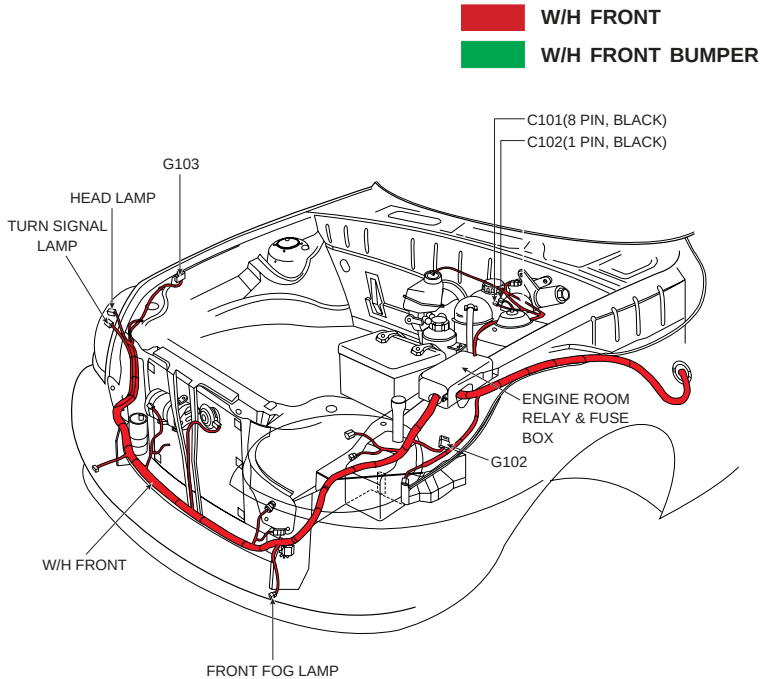


d. SPLICE PACK


S203(RED) - LHD

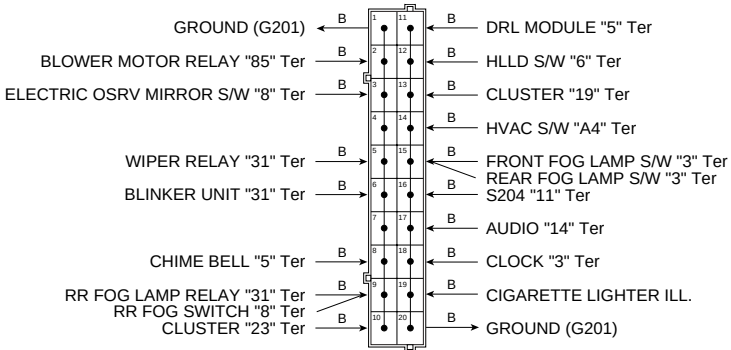

S204(RED) - LHD

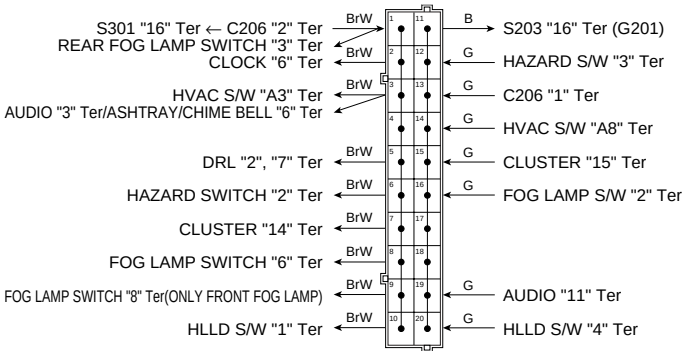


S301(ORANGE) - HATCH BACK

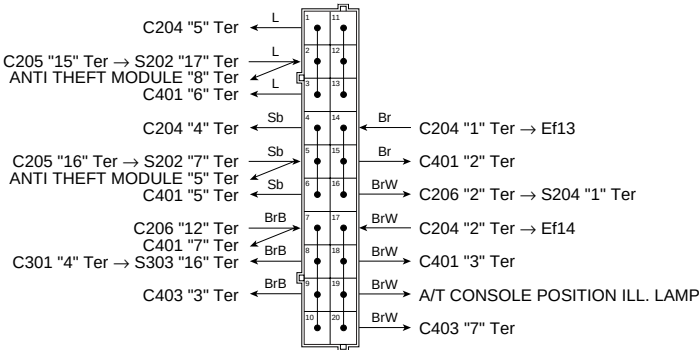

11. FOG LAMP CIRCUIT



1) FRONT & REAR FOG LAMP CIRCUIT(N/B)

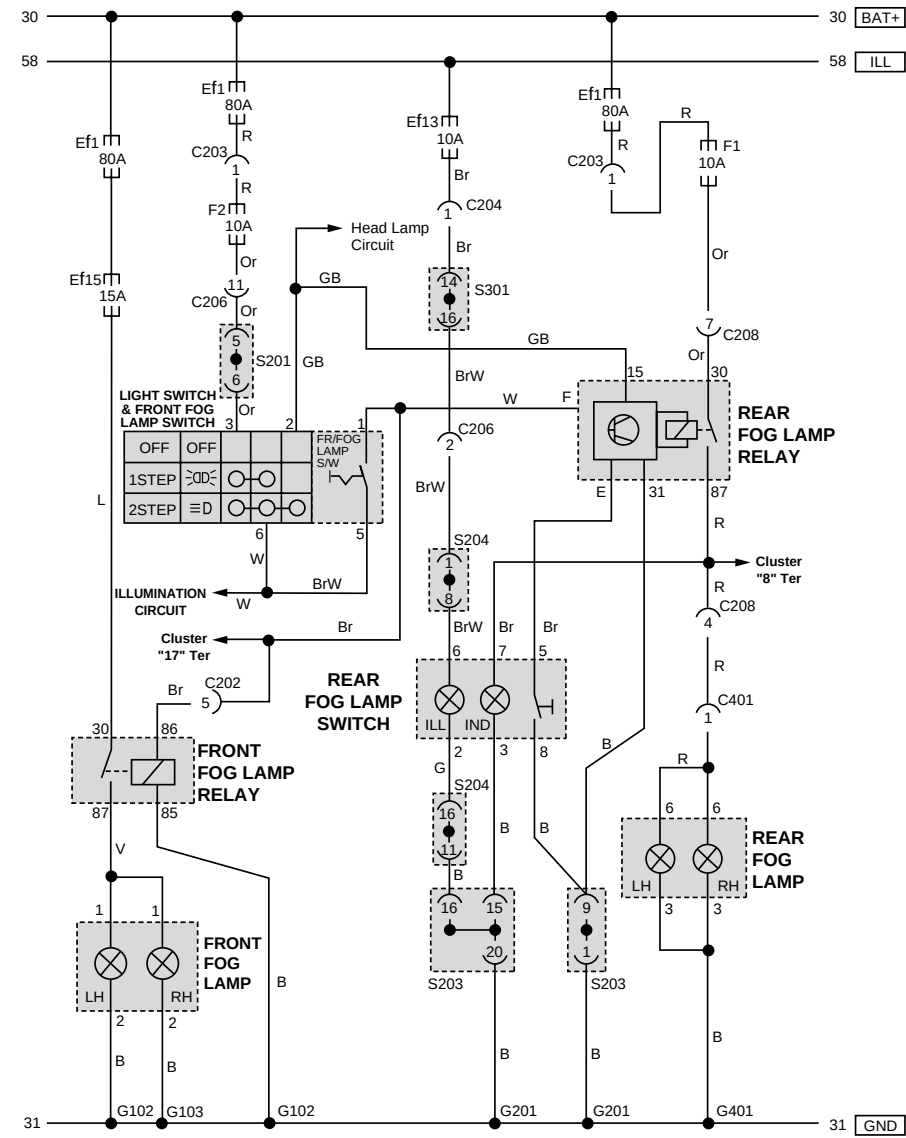

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C202(18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Tuse Box
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Tuse Box
C204(6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Tuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Tuse Box
C208(8PIN. WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Tuse Box
C401(10PIN. WHITE)	W/H Floor- Trunk	Above Left Seat Belt Retractor In Trunk
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203(20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204(20PIN. RED)	Splice Pack	Above Glove Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G102	Ground	Fender Below Engine Room Fuse Box
G103	Ground	Fender Next to Air Dleaner Housing
G201	Ground	Below Right Front Console Box
G301	Ground	Below Driver Seat
G401	Ground	Center of Rear End Panel In Trunk

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

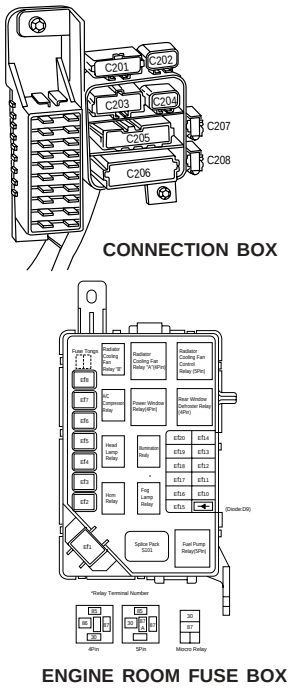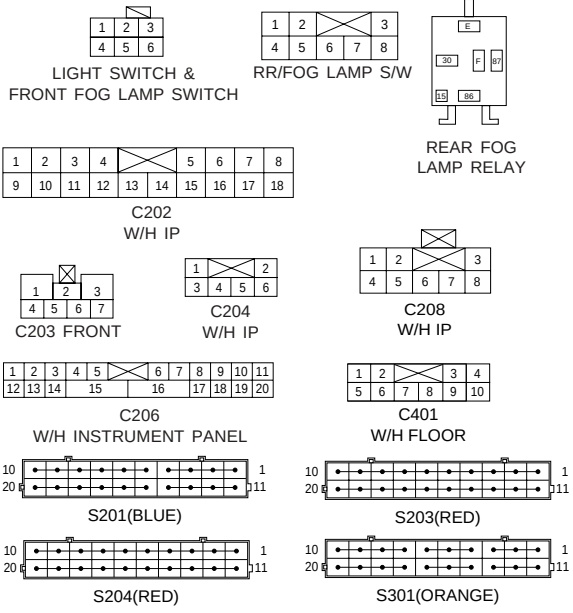


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

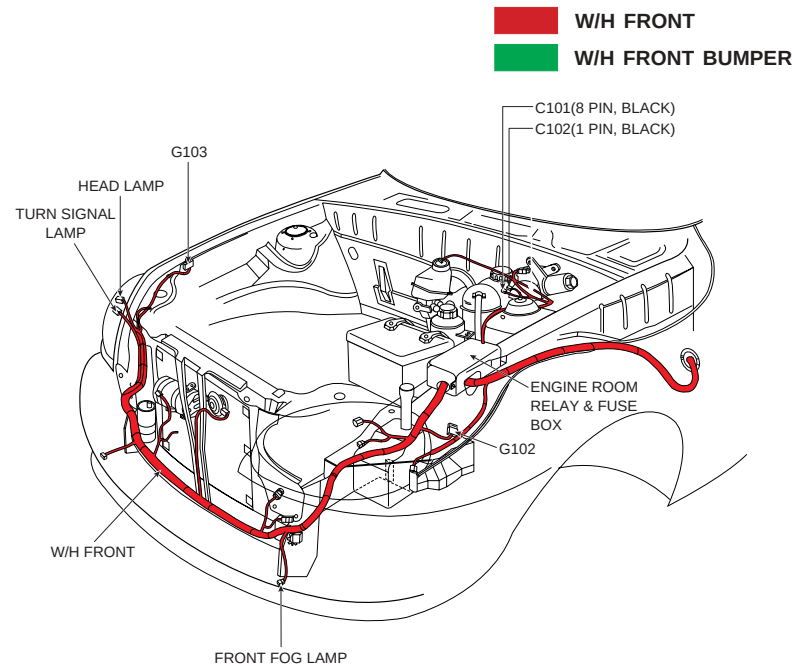


- TRUNK INSIDE LEFT

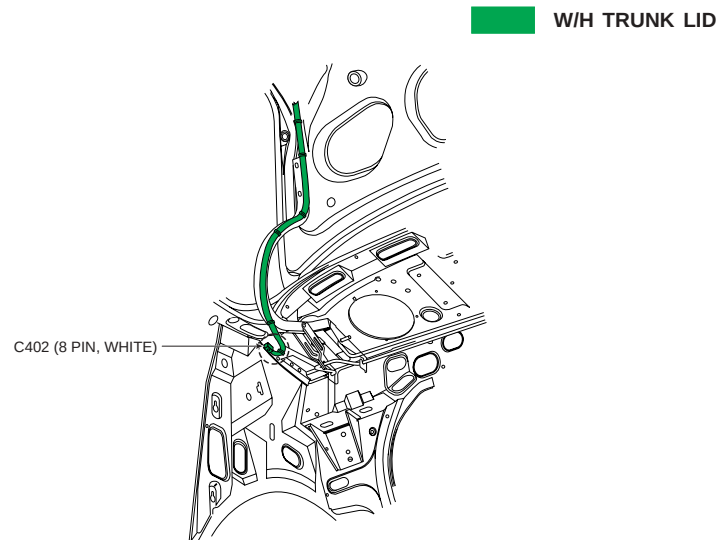


d. SPLICE PACK

S203(RED) - LHD

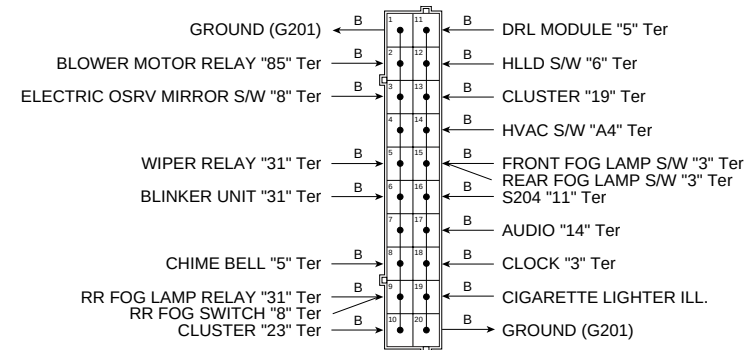

S204(RED) - LHD

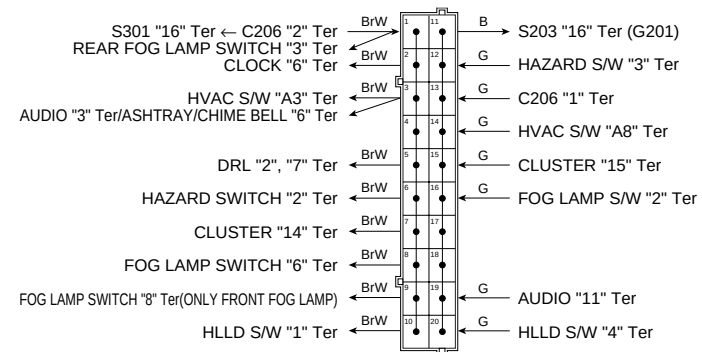

S301(ORANGE) - NOTCH BACK

