



2) FRONT & REAR FOG LAMP CIRCUIT(H/B)

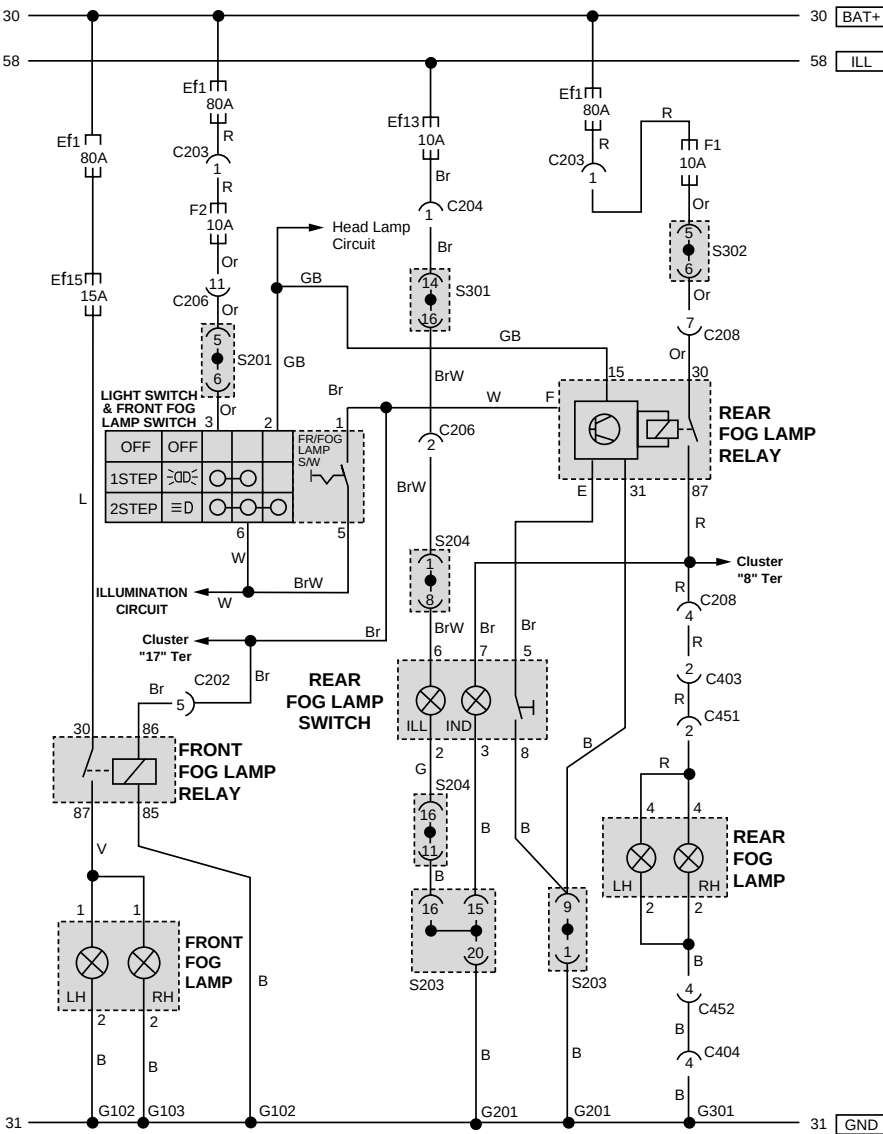

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C202(18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204(6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C208(8PIN. WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C403 (8PIN. WHITE)	W/H Floor- Tail Gate Extension	Inside Trunk
C404(5PIN. WHITE)	W/H Floor- Tail Gate Extension	Inside Tail Gate
C451 (8PIN. WHITE)	Tail Gate Extension -Tail Gate	Inside Tail Gate
C452(4PIN. WHITE)	Tail Gate Extension -Tail Gate	Inside Tail Gate
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203(20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204(20PIN. RED)	Splice Pack	Above Glove Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G102	Ground	Fender Below Engine Room Fuse Box
G103	Ground	Fender Next to Air Cleaner Housing
G201	Ground	Below Right Front Console Box
G301	Ground	Below Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

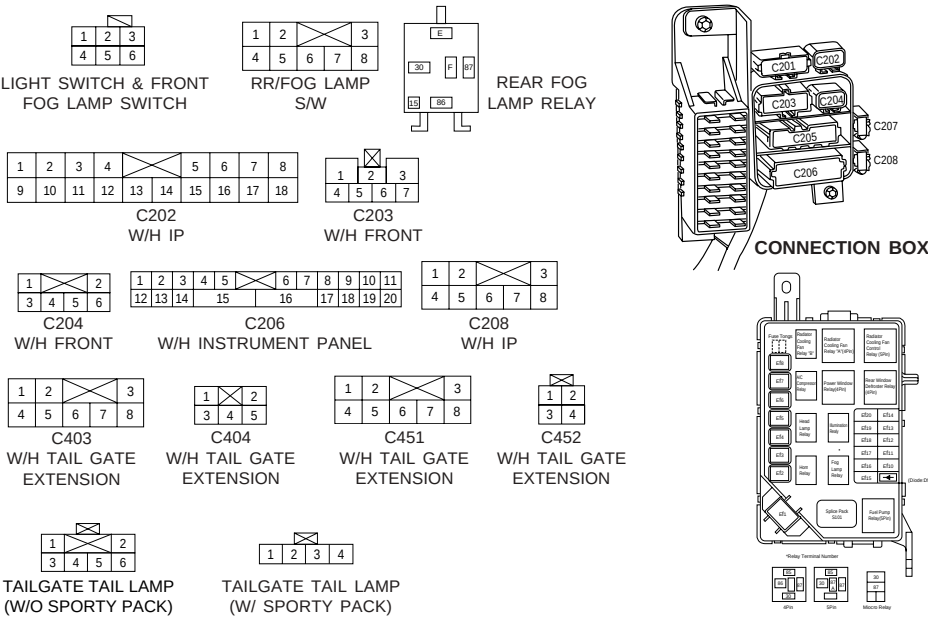


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

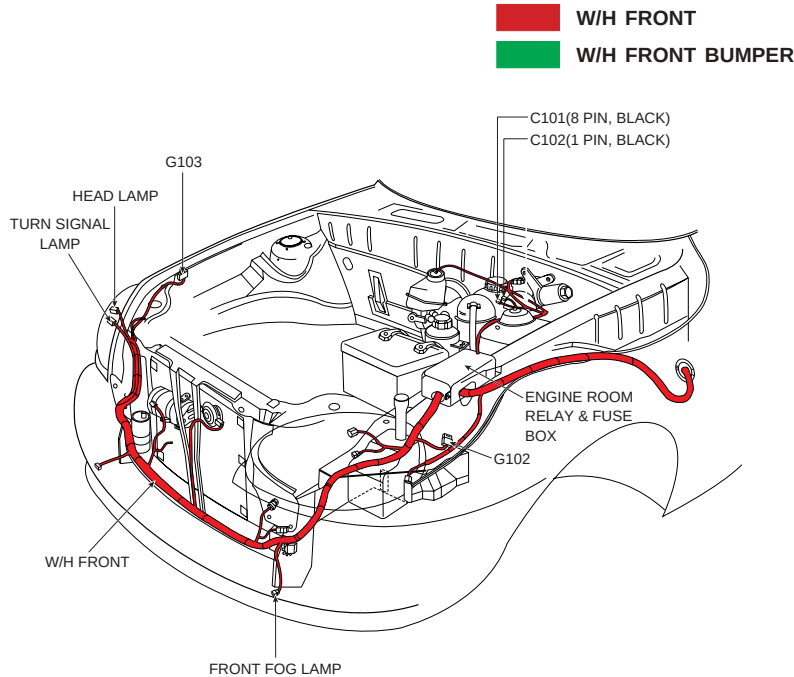


d. SPLICE PACK


S201(BLUE) - LHD

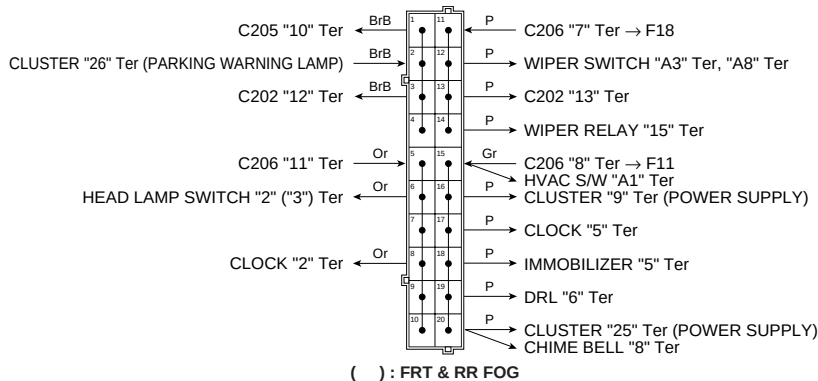


S203(RED) - LHD

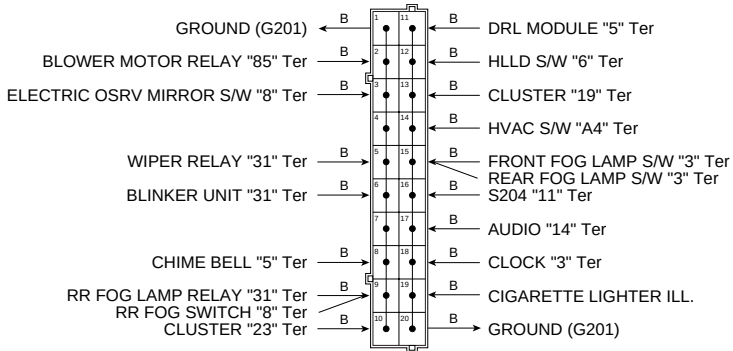


S204(RED) - LHD

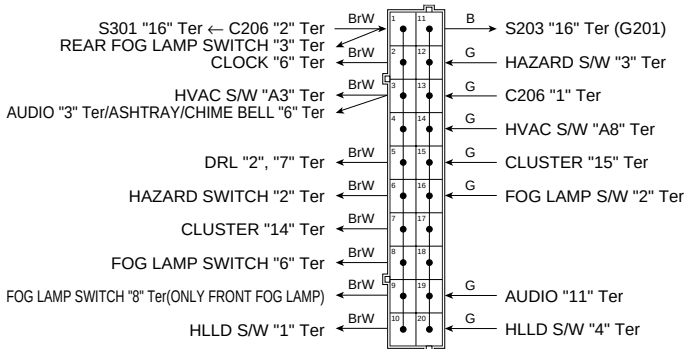

S301(ORANGE) - HATCH BACK

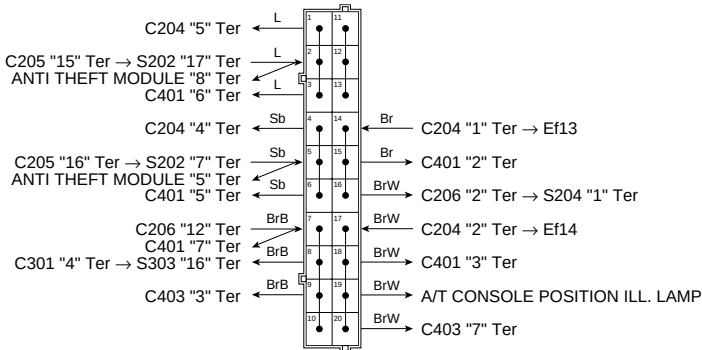


3) ONLY FRONT FOG LAMP CIRCUIT

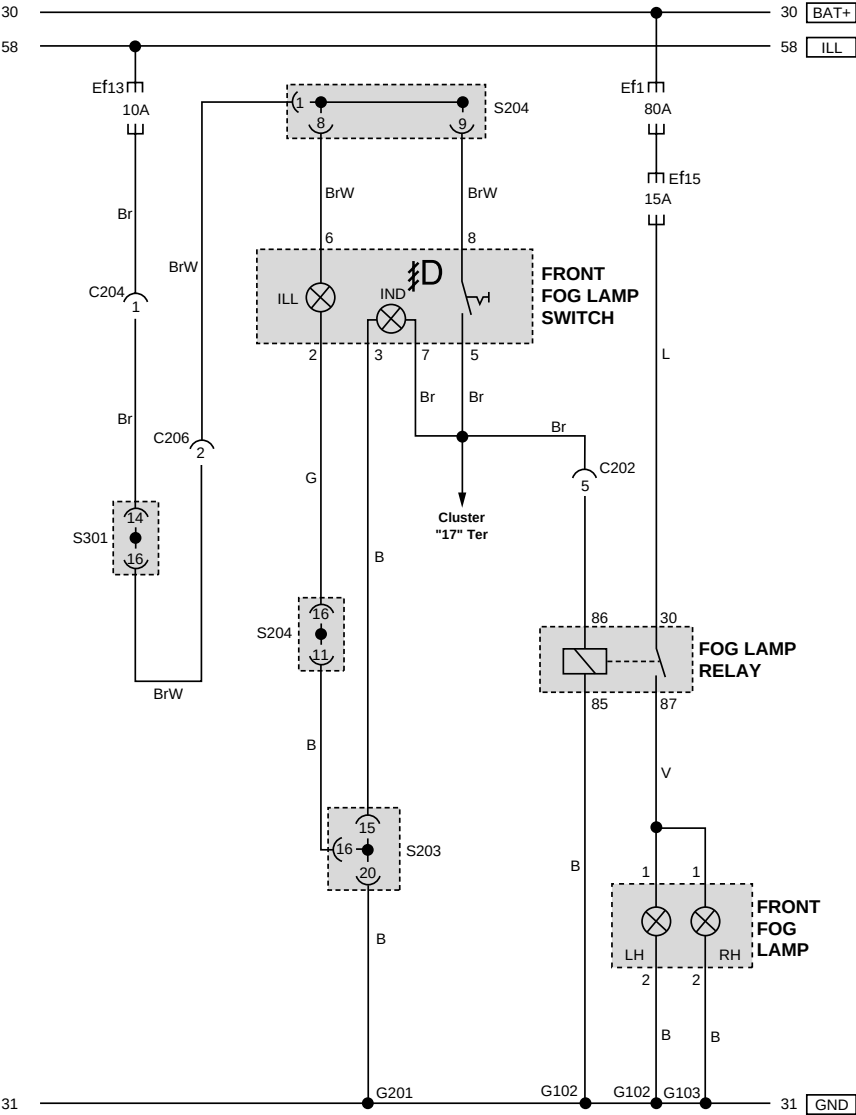

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C202(18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C204(6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
S203(20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204(20PIN. RED)	Splice Pack	Above Glove Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G102	Ground	Fender Below Engine Room Fuse Box
G103	Ground	Fender Next to Air Cleaner Housing
G201	Ground	Below Right Front Console Box


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




FRT/FOG LAMP S/W




C202
W/H IP



C204
W/H FRONT



C206
W/H INSTRUMENT PANEL





S203(RED)



S204(RED)




S301(ORANGE)

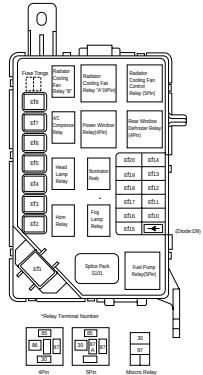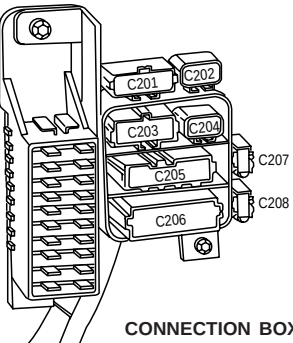


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

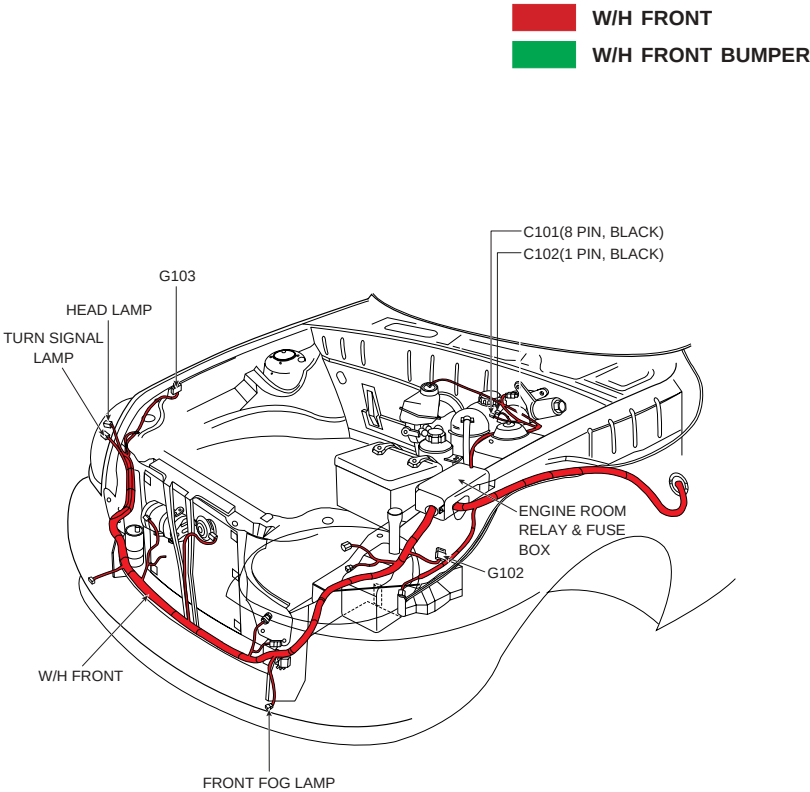


d. SPLICE PACK


S203(RED) - LHD

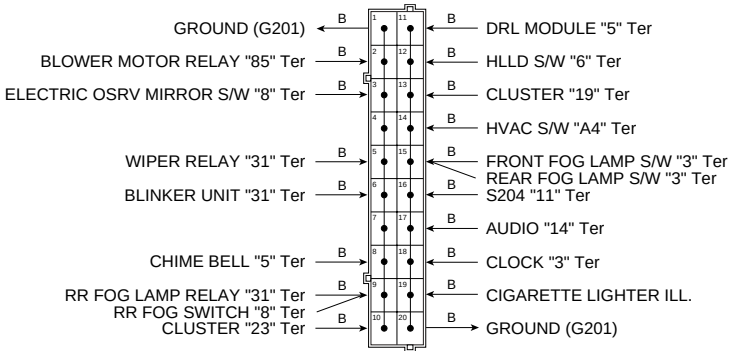


S204(RED) - LHD

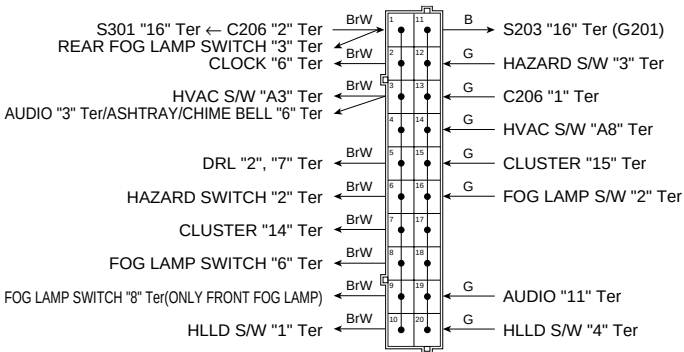

S301(ORANGE) - NOTCH BACK

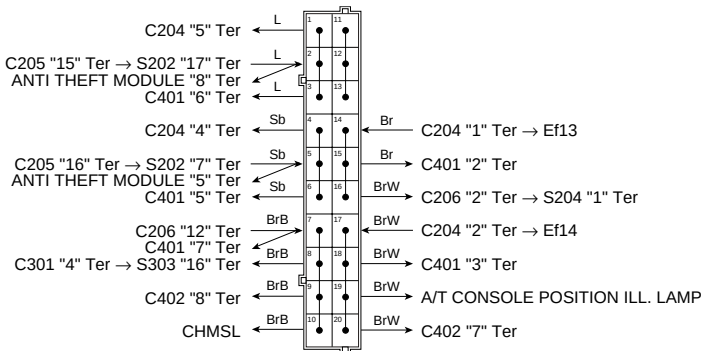


4) ONLY REAR FOG LAMP CIRCUIT(N/B)

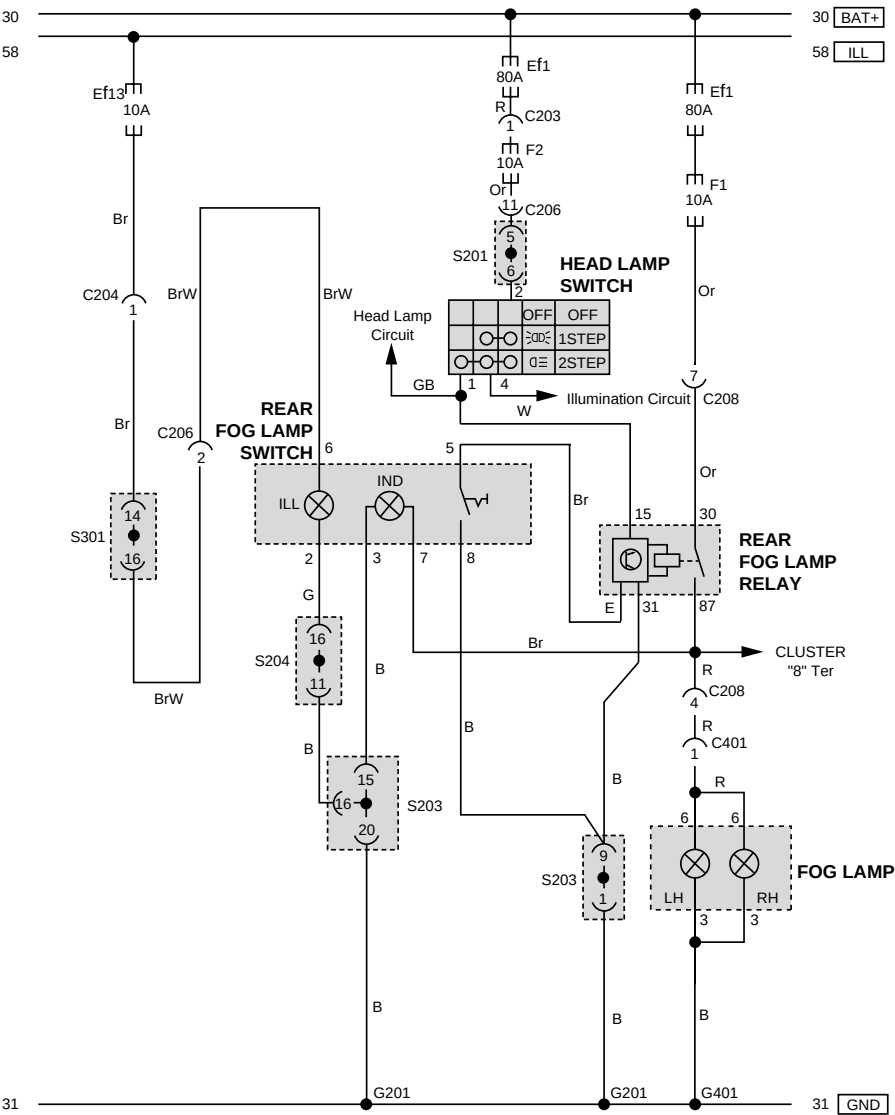

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204(6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C208(8PIN. WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C401(10PIN. WHITE)	W/H Floor - Trunk	Above Left Seat Belt Retractor in Trunk
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203(20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204(20PIN. RED)	Splice Pack	Above Glove Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G201	Ground	Below Right Front Console Box
G301	Ground	Below Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

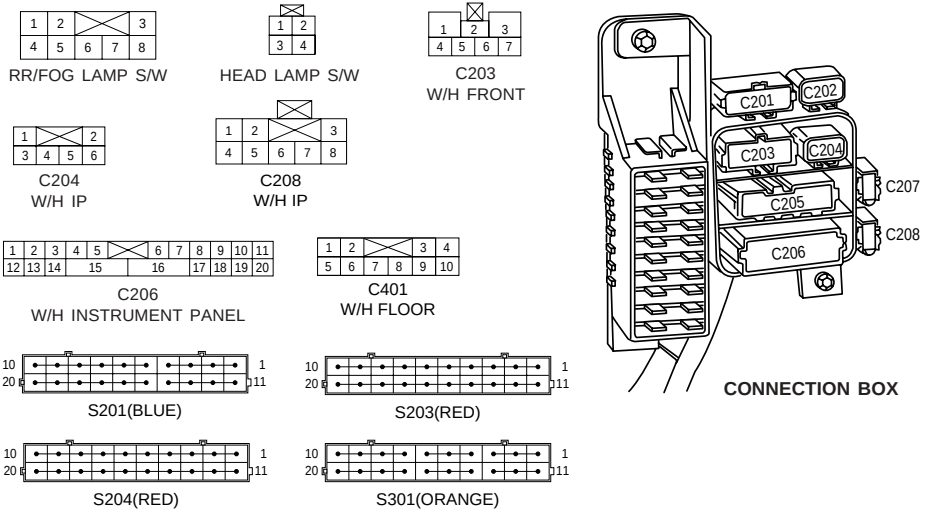


c. POSITION OF CONNECTORS AND GROUNDS

- TRUNK INSIDE LEFT

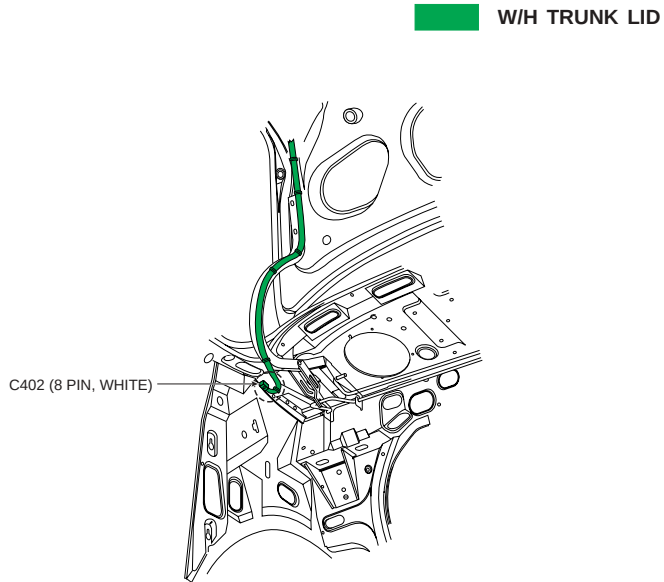


d. SPLICE PACK


S201(BLUE) - LHD

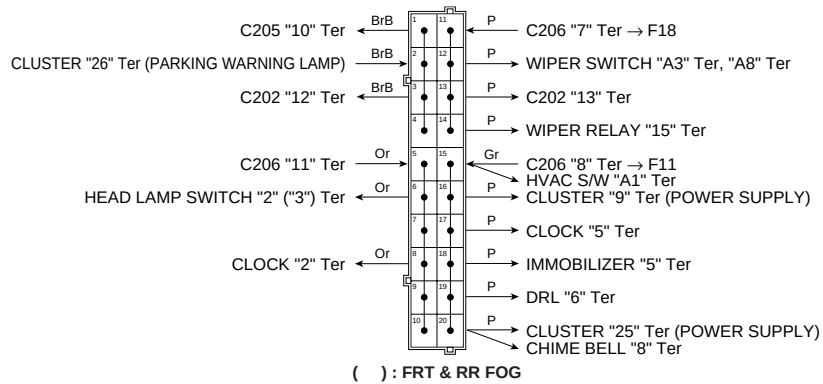


S203(RED) - LHD

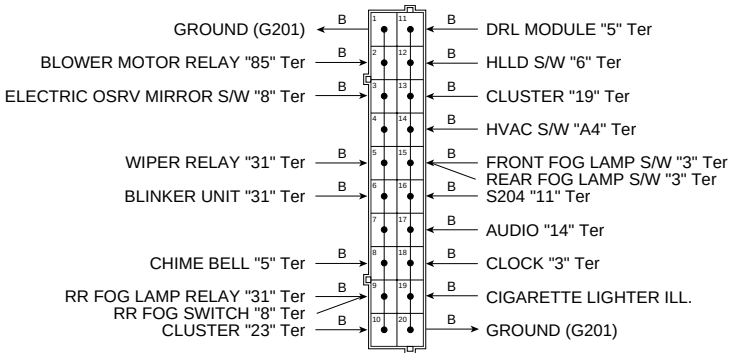

S204(RED) - LHD

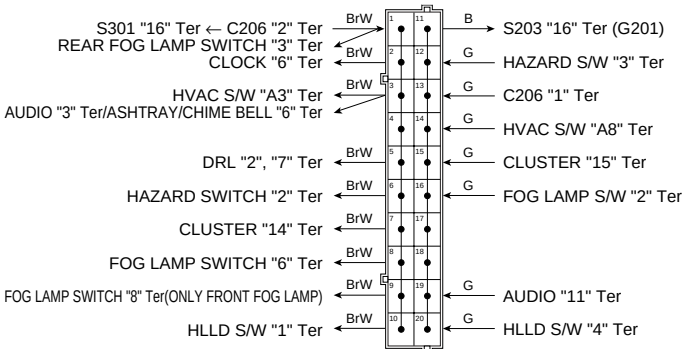


S301(ORANGE) - NOTCH BACK

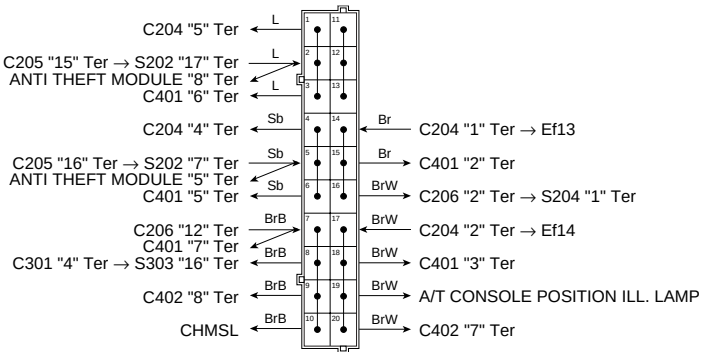




CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204(6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C208(8PIN. WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C403(8PIN. WHITE)	W/H Floor- Tail Gate Extension	Inside Trunk
C404(5PIN. WHITE)	W/H Floor- Tail Gate Extension	Inside Tail Gate
C451(8PIN. WHITE)	Tail Gate Extension -Tail Gate	Inside Tail Gate
C452(4PIN. WHITE)	Tail Gate Extension -Tail Gate	Inside Tail Gate
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203(20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204(20PIN. RED)	Splice Pack	Above Glove Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G201	Ground	Below Right Front Console Box
G301	Ground	Below Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

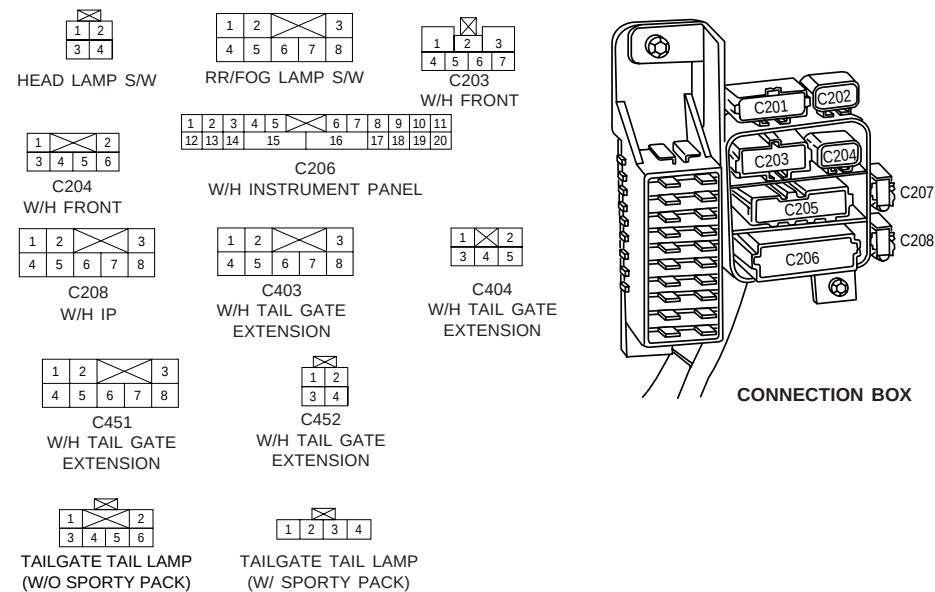


C. SPLICE PACK


S201(BLUE) - LHD

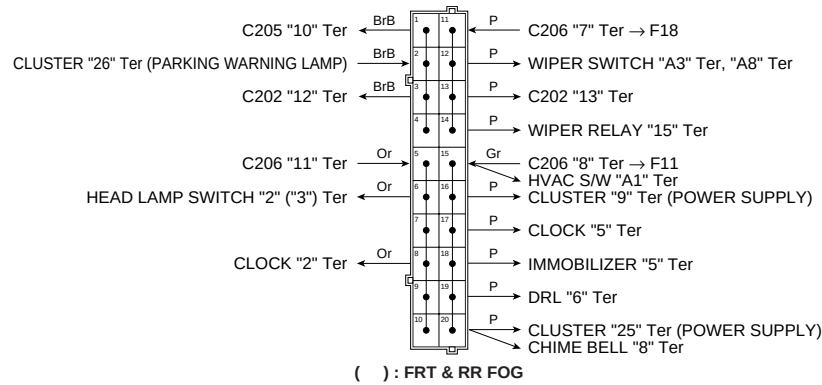


S203(RED) - LHD

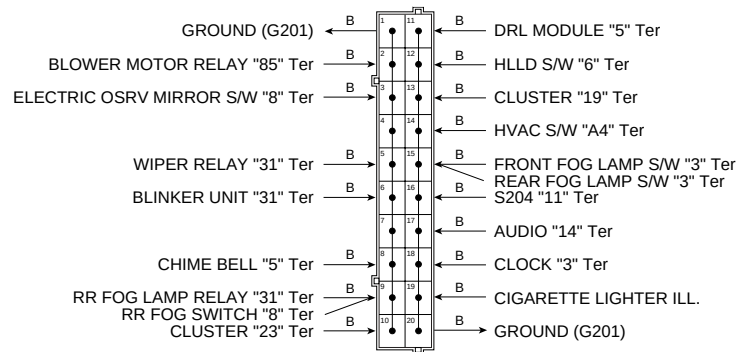

S204(RED) - LHD

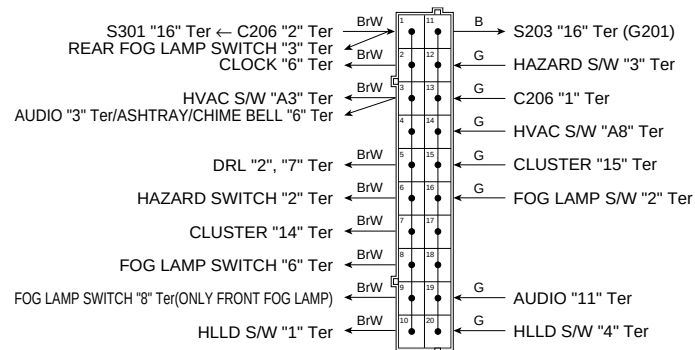


S301(ORANGE) - HATCH BACK

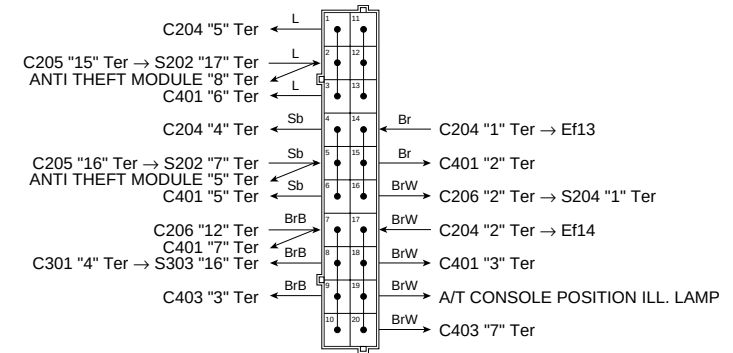

12. TURN SIGNAL LAMP, HAZARD LAMP CIRCUIT


1) NOTCH BACK - LHD

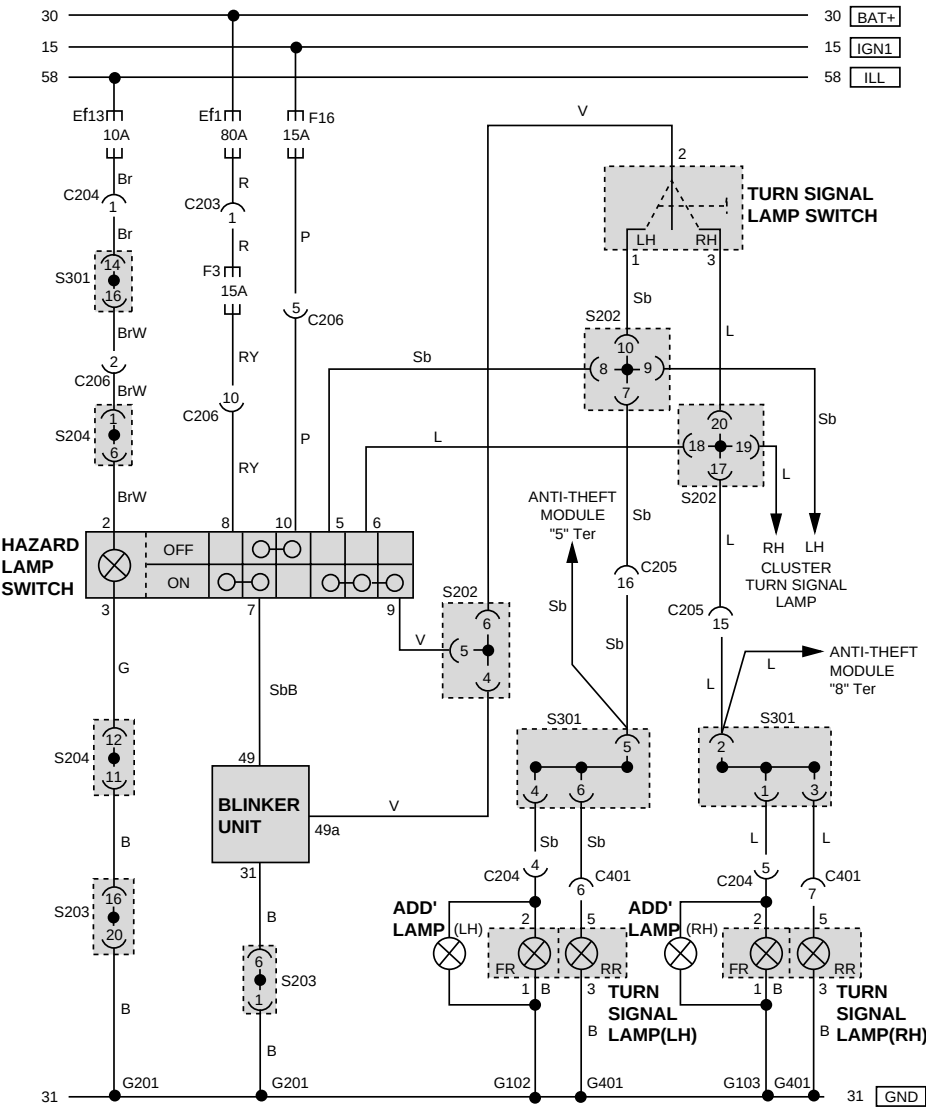

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. YELLOW)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C401 (10PIN. WHITE)	W/H Floor - Trunk	Above Left Seat Belt Retractor In Trunk
S202 (20PIN. ORANGE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORNAGE)	Splice Pack	Below Driver Seat
G102	Ground	Fender Below Engine Room Fuse Box
G103	Ground	Fender Next to Air Cleaner Housing
G201	Ground	Below Right Front Console Box
G401	Ground	Center of Rear End Panel In Trunk

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

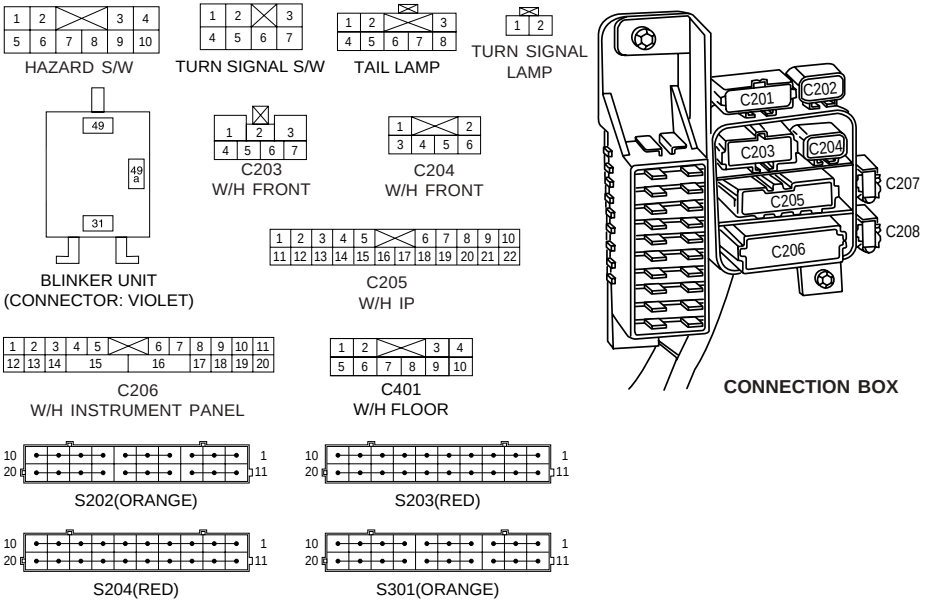


c. POSITION OF CONNECTORS AND GROUNDS

• W/H TRUNK

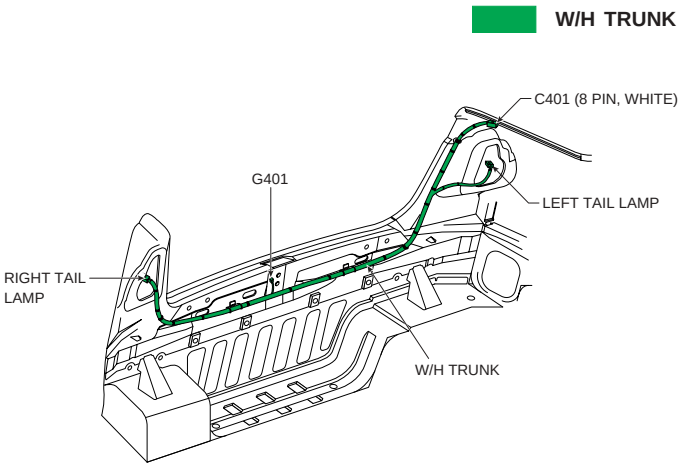


• W/H FRONT, FRONT BUMPER

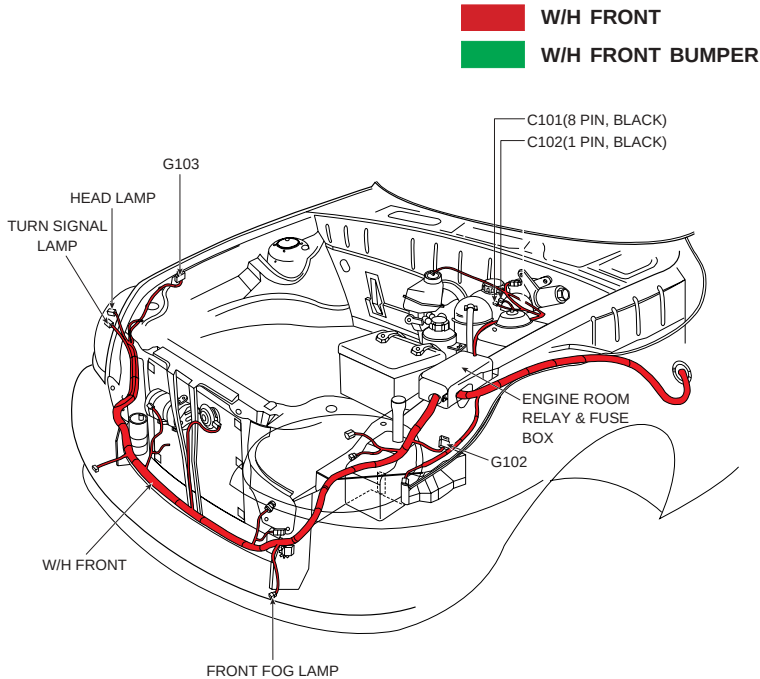


d. SPLICE PACK

S203(RED) - LHD

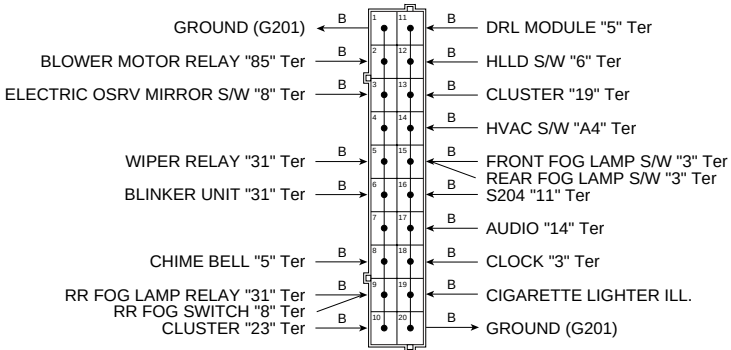

S204(RED) - LHD

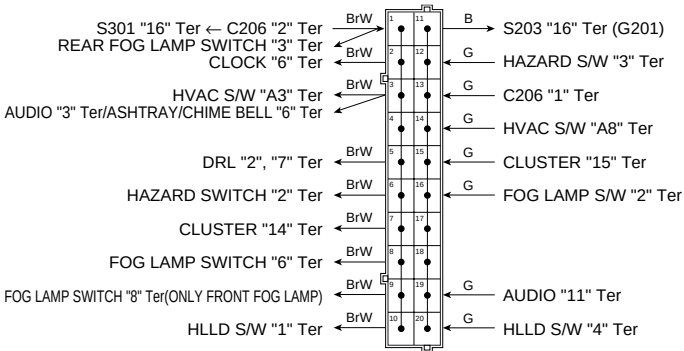

S301(ORANGE) - NOTCH BACK

