


14. CIGARETTE LIGHTER



1) CIGARETTE LIGHTER, ASHTRAY ILLUMINATION LAMP CIRCUIT

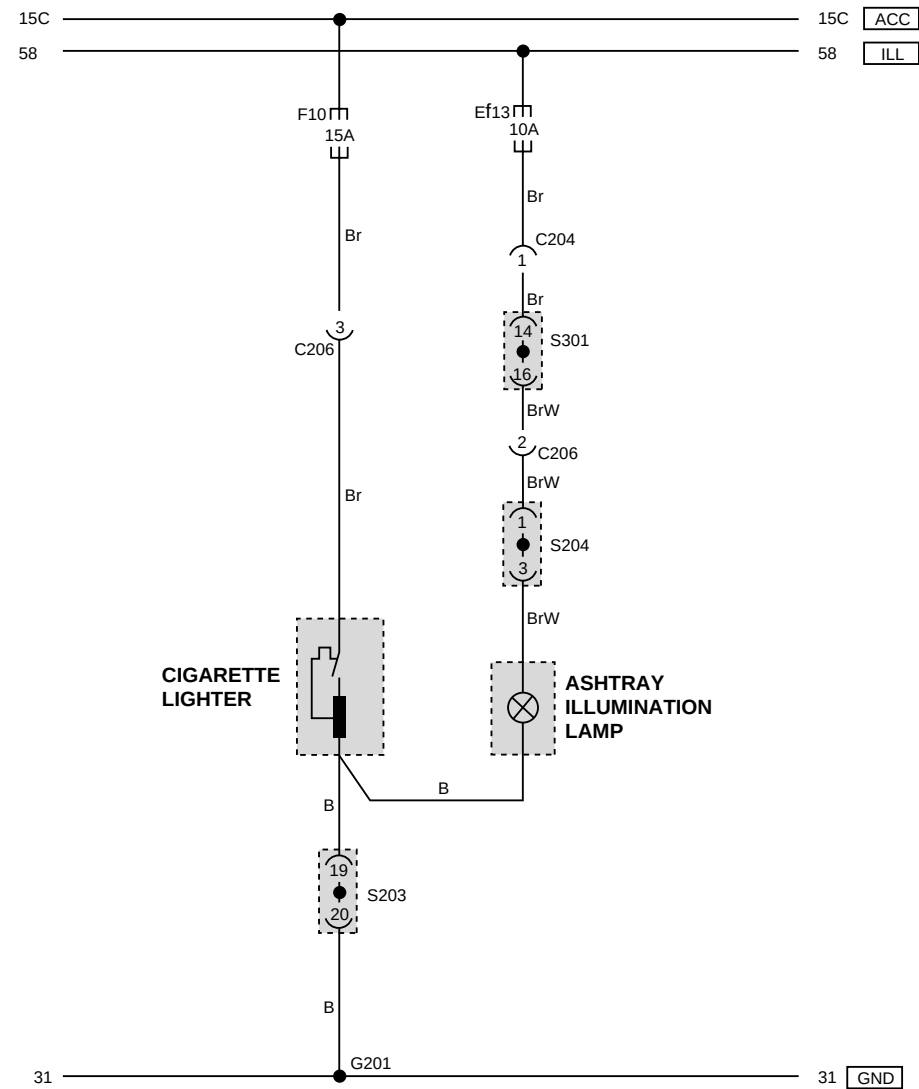

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORANGE)	Splice Pack	Below Driver Seat
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

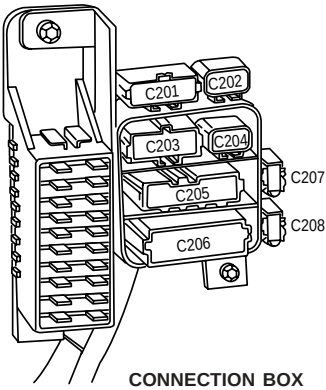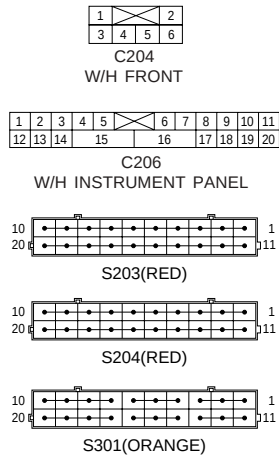


c. POSITION OF CONNECTORS AND GROUNDS

- INSTRUMENT PANEL INSIDE

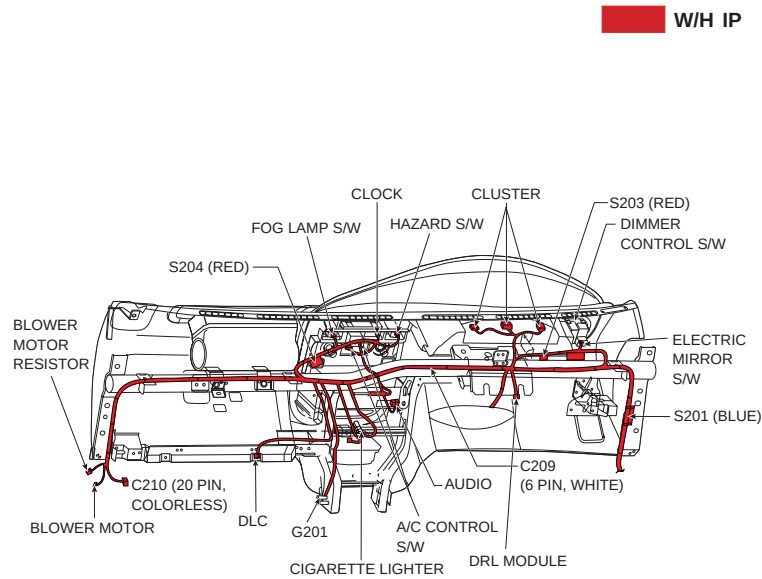


d. SPLICE PACK


S203(RED) - LHD

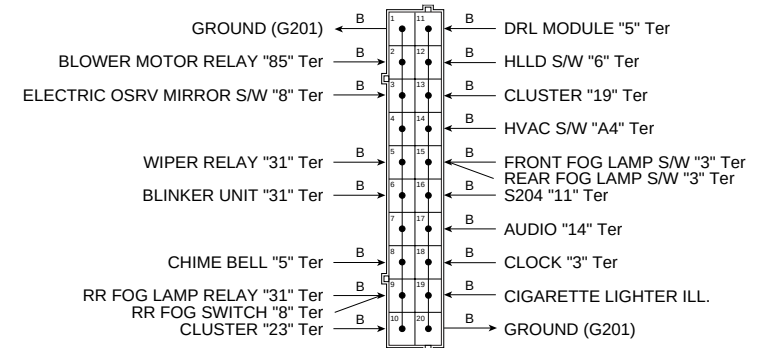

S204(RED) - LHD

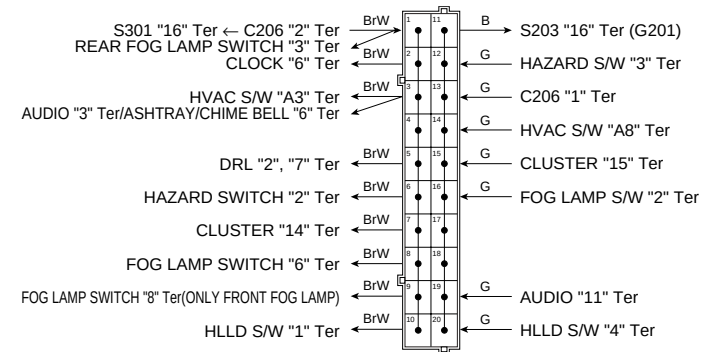


S301(ORANGE) - NOTCH BACK

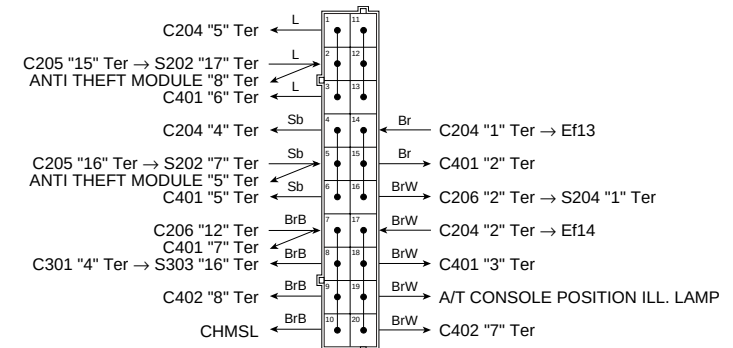

15. TRUNK LAMP, ROOM LAMP, DOOR OPENING WARNING LAMP CIRCUIT


1) NOTCH BACK

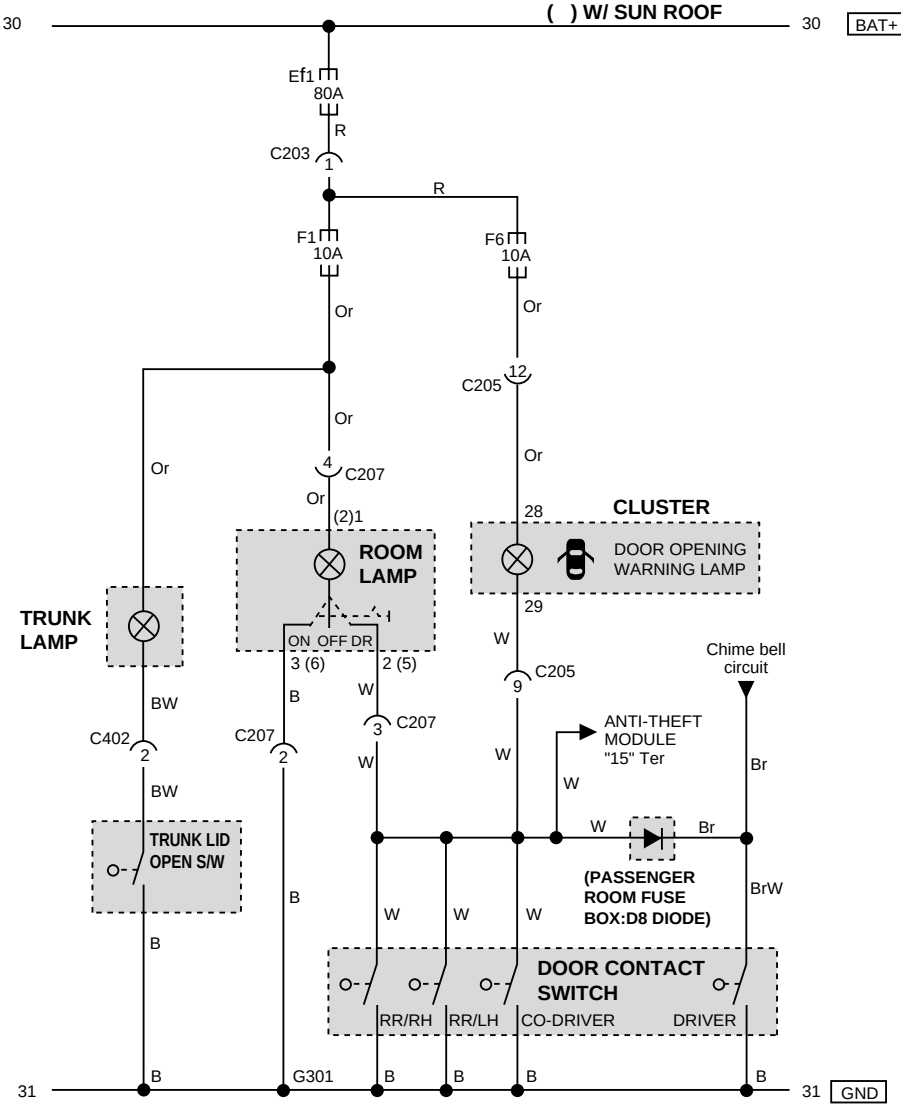

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. YELLOW)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C207 (4PIN. WHITE)	W/H Floor - Roof	Connection Box Next to Passenger Room Fuse Box
C402 (4PIN. WHITE)	W/H Floor - Trunk Lid	Above Left Tail Lamp In Trunk
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
G301	Ground	Below Driver Seat

B.CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

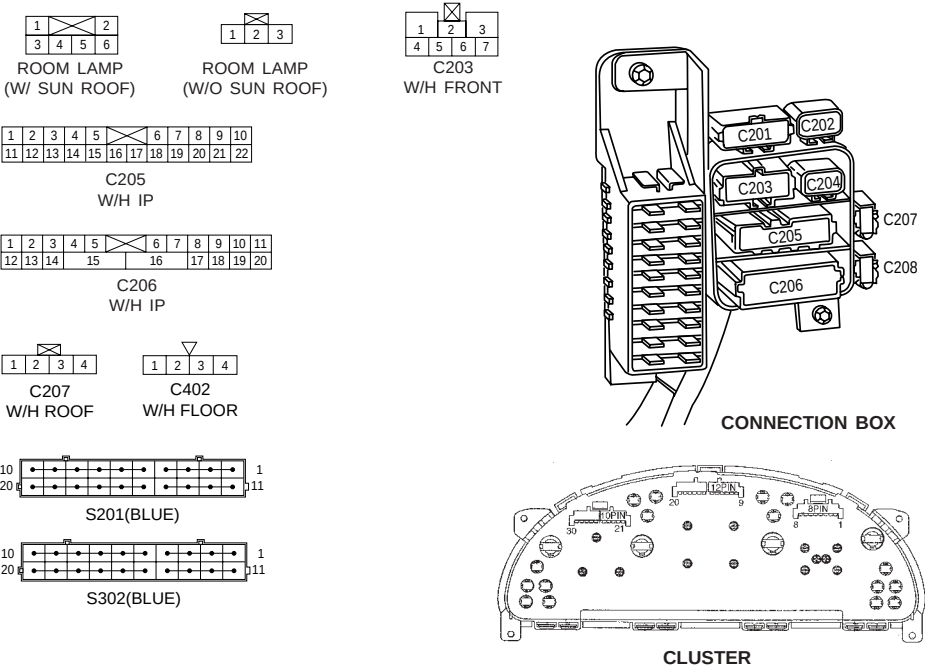


c. POSITION OF CONNECTORS AND GROUNDS

• TRUNK INSIDE LEFT

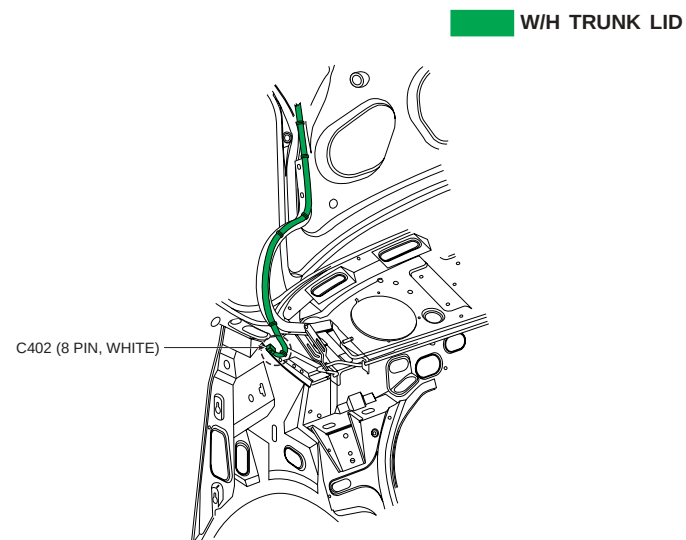


• FLOOR PANEL LEFT

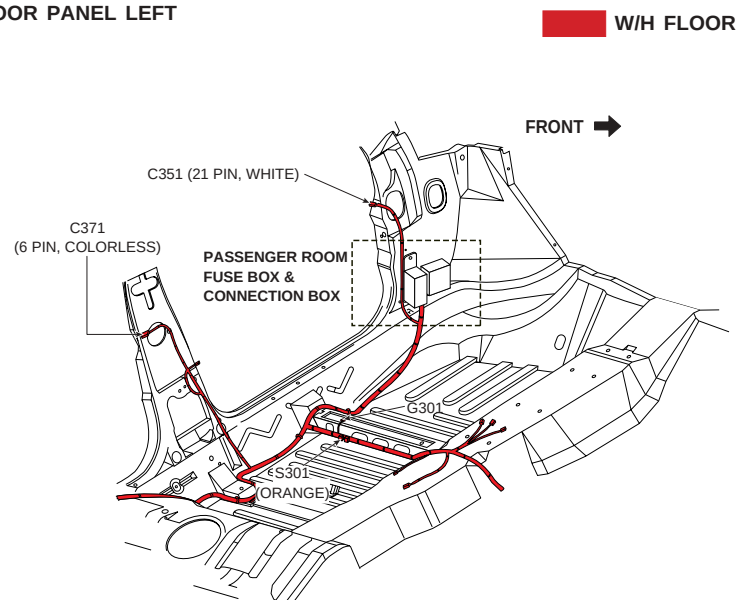


d. SPLICE PACK

S201(BLUE) - LHD

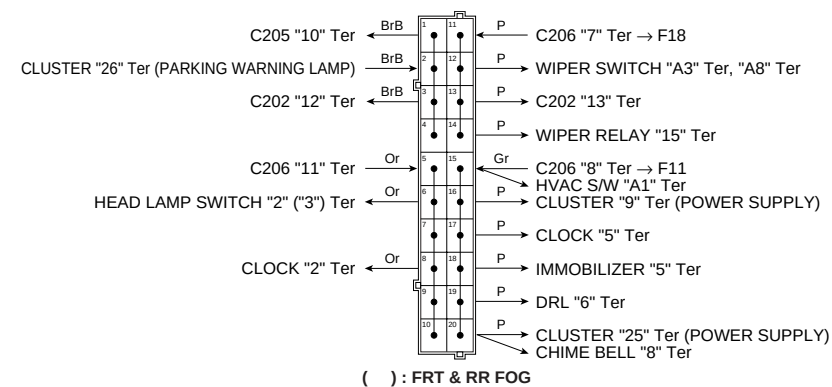


2) HATCH BACK (3 DOOR, 5 DOOR)

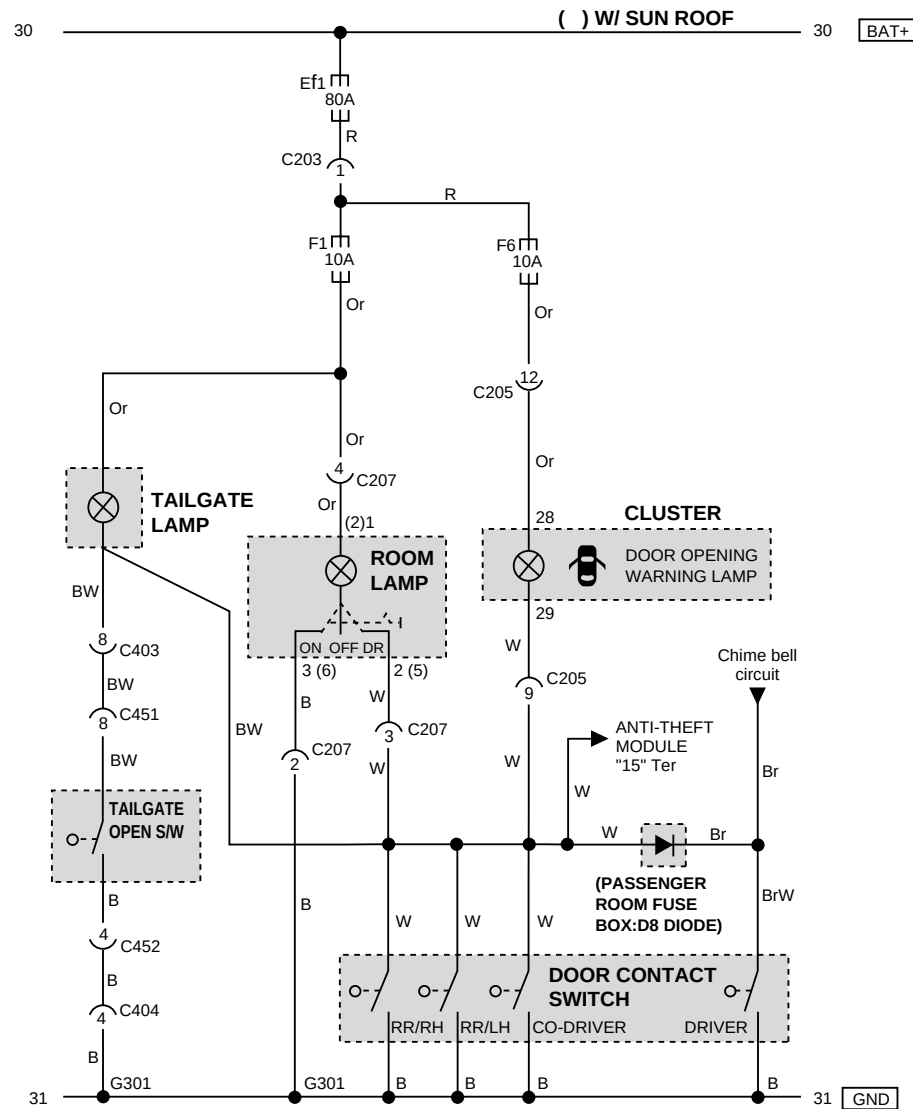

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. YELLOW)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C207 (4PIN. WHITE)	W/H Floor - Roof	Connection Box Next to Passenger Room Fuse Box
C403 (8PIN. WHITE)	W/H Floor - Tail Gate Extension	Inside Trunk
C404 (5PIN WHITE)	W/H Floor - Tail Gate Extension	Inside Trunk
C451 (8PIN WHITE)	W/H Tail Gate Extension - Tail Gate	Inside Tail Gate
C452 (4PIN WHITE)	W/H Tail Gate Extension - Tail Gate	Inside Tail Gate
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
G301	Ground	Below Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

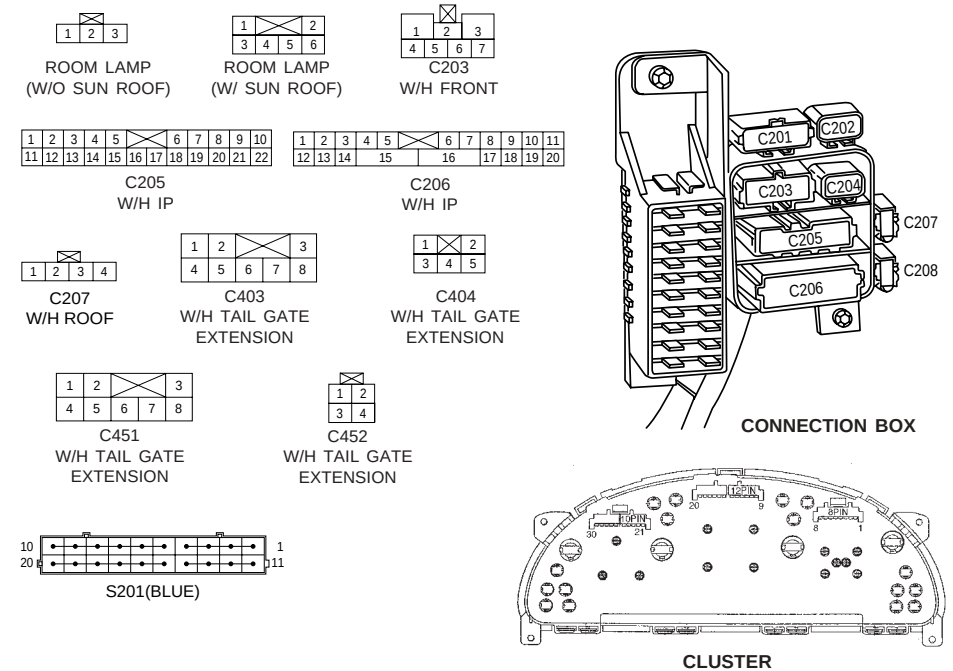


c. POSITION OF CONNECTORS AND GROUNDS

- FLOOR PANEL LEFT

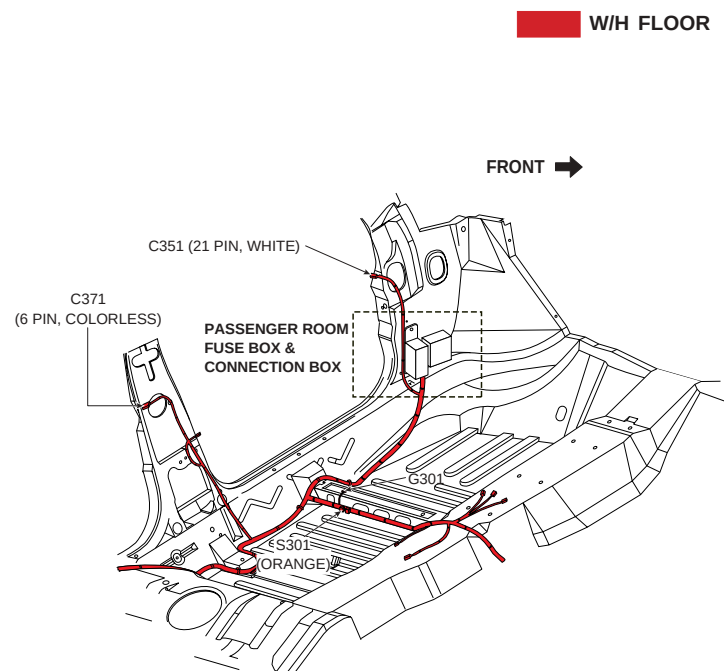


d. SPLICE PACK

S201(BLUE) - LHD

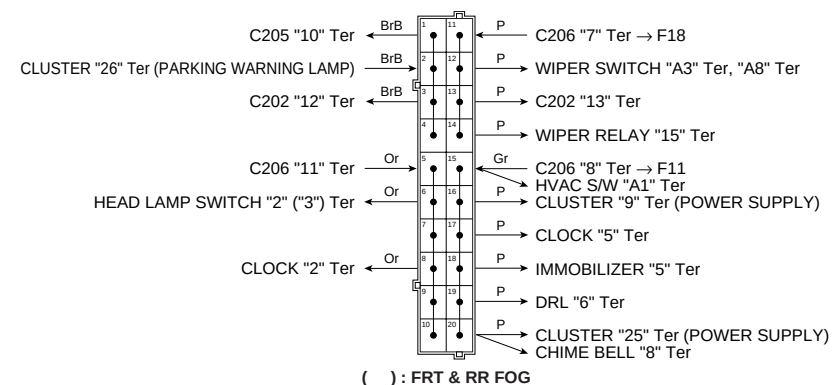

16. REVERSE LAMP CIRCUIT


1) NOTCH BACK

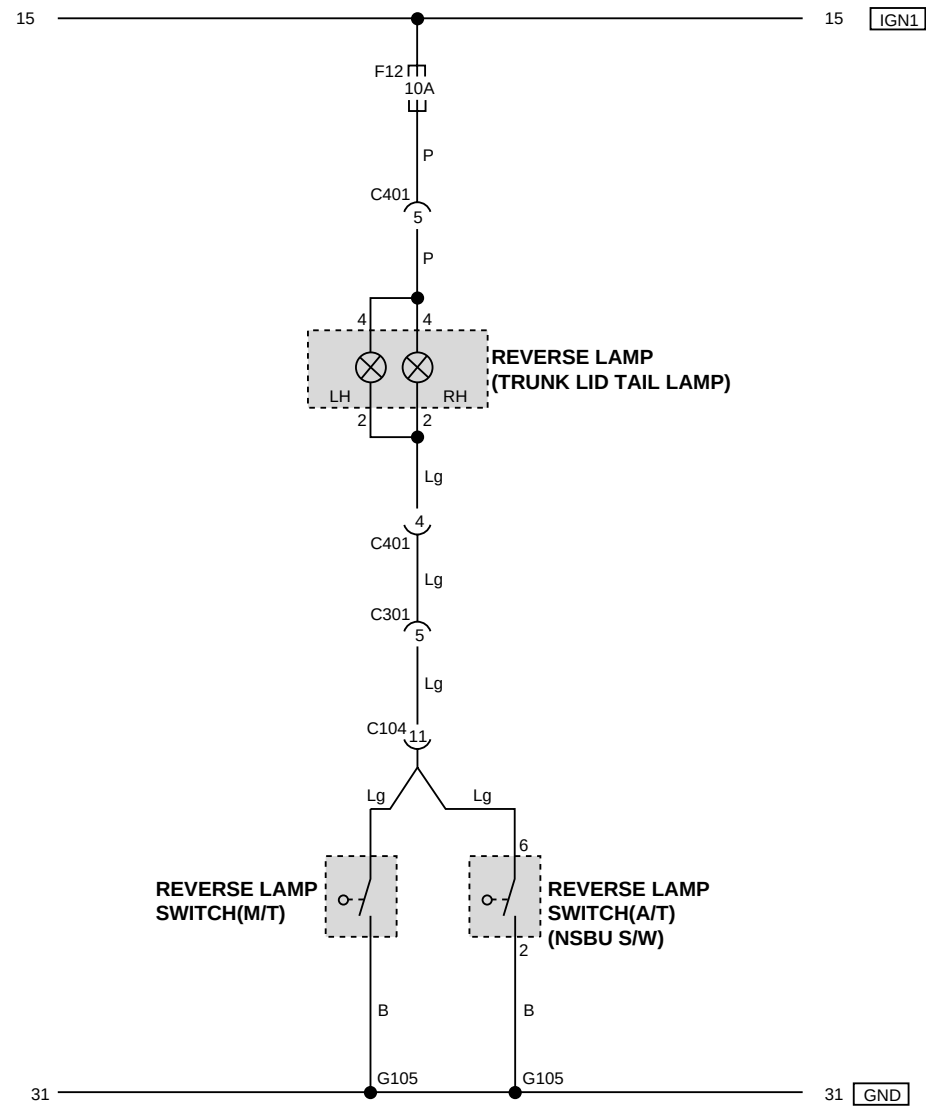


a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C301 (10PIN. WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C401 (10PIN. WHITE)	W/H Floor - Trunk	Above Left Seat Belt Retractor Intrunk
G105	Ground	Above Flywheel Housing


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



NSBU SWITCH



TAIL LAMP




C104
W/H ENGINE CONTROL



C301
W/H FLOOR




C401
W/H FLOOR

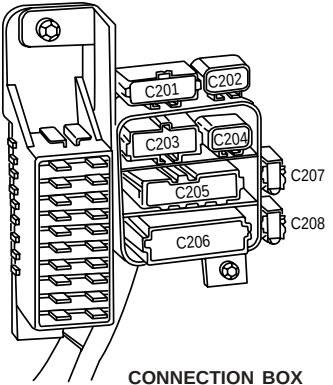

CONNECTION BOX


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

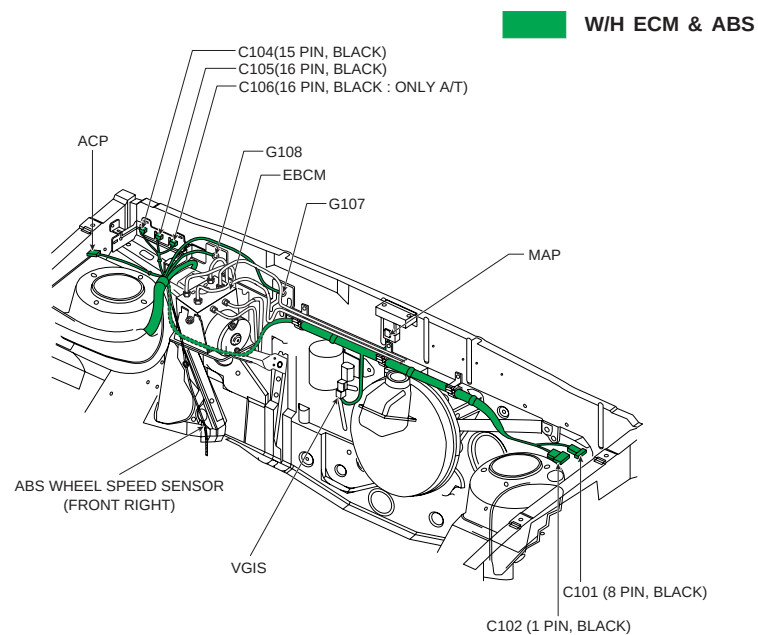


• PASSENGER ROOM RIGHT SIDE PANEL

• TRUNK INSIDE LEFT

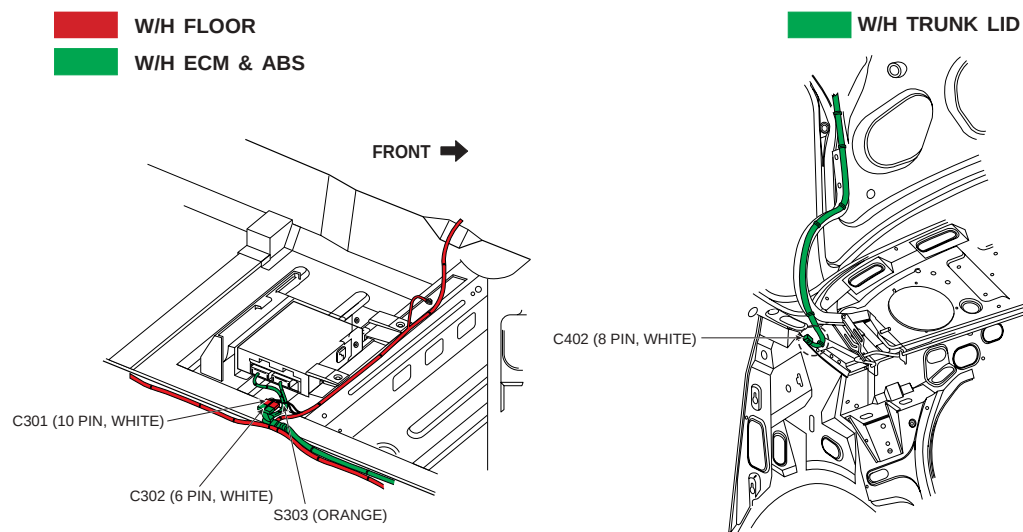

2) HATCH BACK

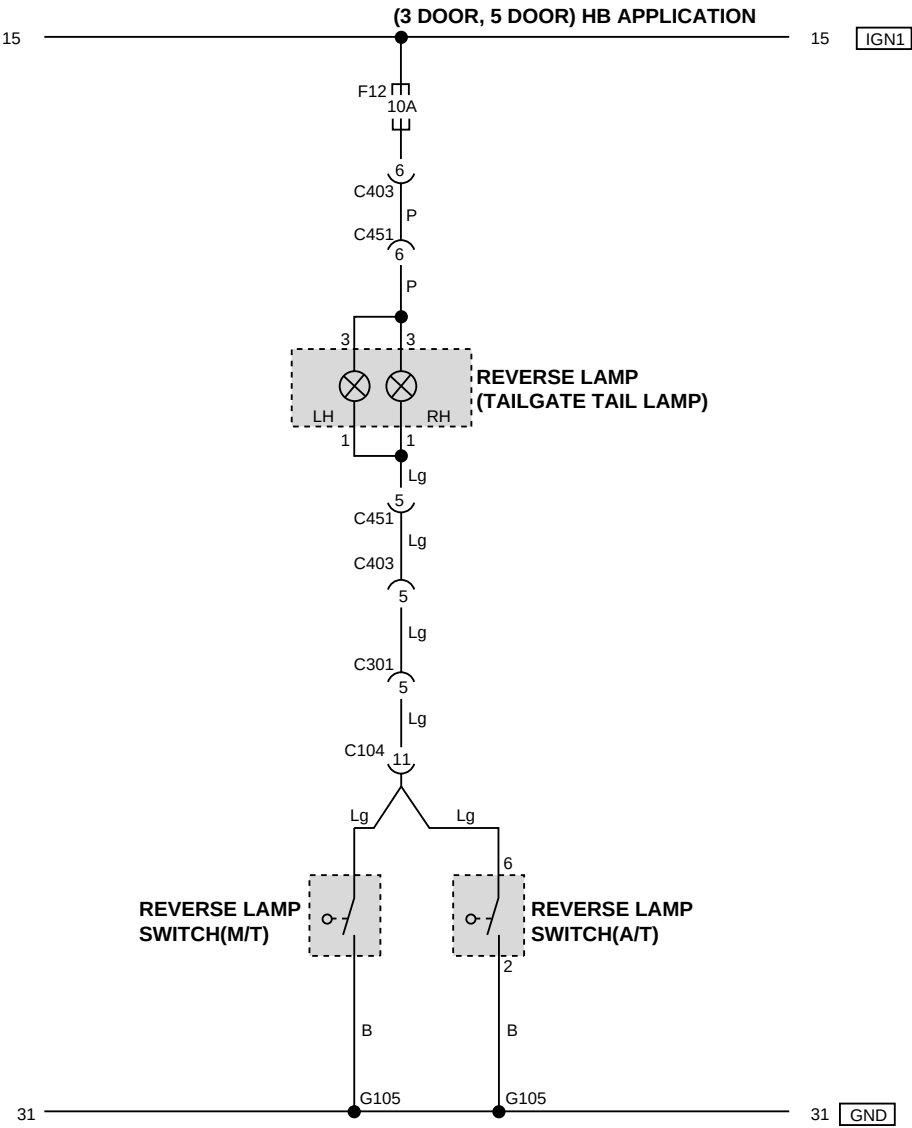


a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C301 (10PIN. WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C403 (8PIN. WHITE)	W/H Floor - Tail Gate Extension	Inside Trunk
C451 (8PIN. WHITE)	W/H Tail Gate Floor Extension - Tail	Inside Tail Gate
G105	Splice Pack	Above Flywheel Housing


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




NSBU SWITCH




TAILGATE TAIL LAMP
(W/O SPORTY PACK)




TAILGATE TAIL LAMP
(W/ SPORTY PACK)




C104
W/H ENGINE CONTROL




C301
W/H FLOOR



C403
W/H TAIL GATE
EXTENSION




C451
W/H TAIL GATE
EXTENSION

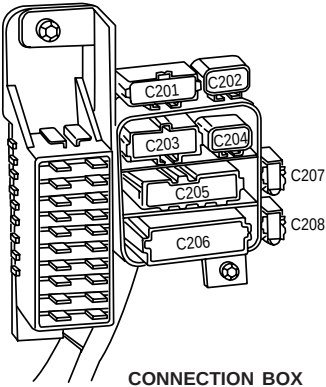

c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

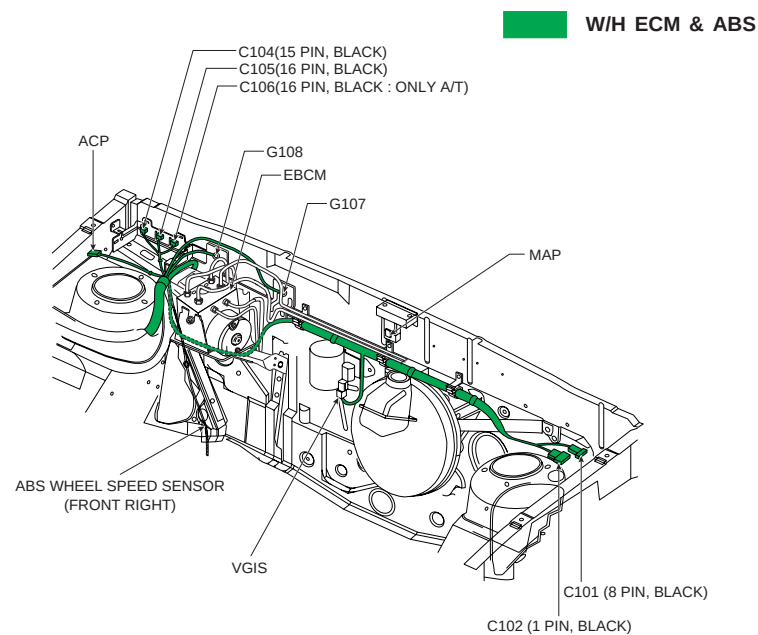

• PASSENGER ROOM RIGHT SIDE PANEL

• TRUNK INSIDE LEFT

