



4) HATCH BACK(5 DOOR) - RHD

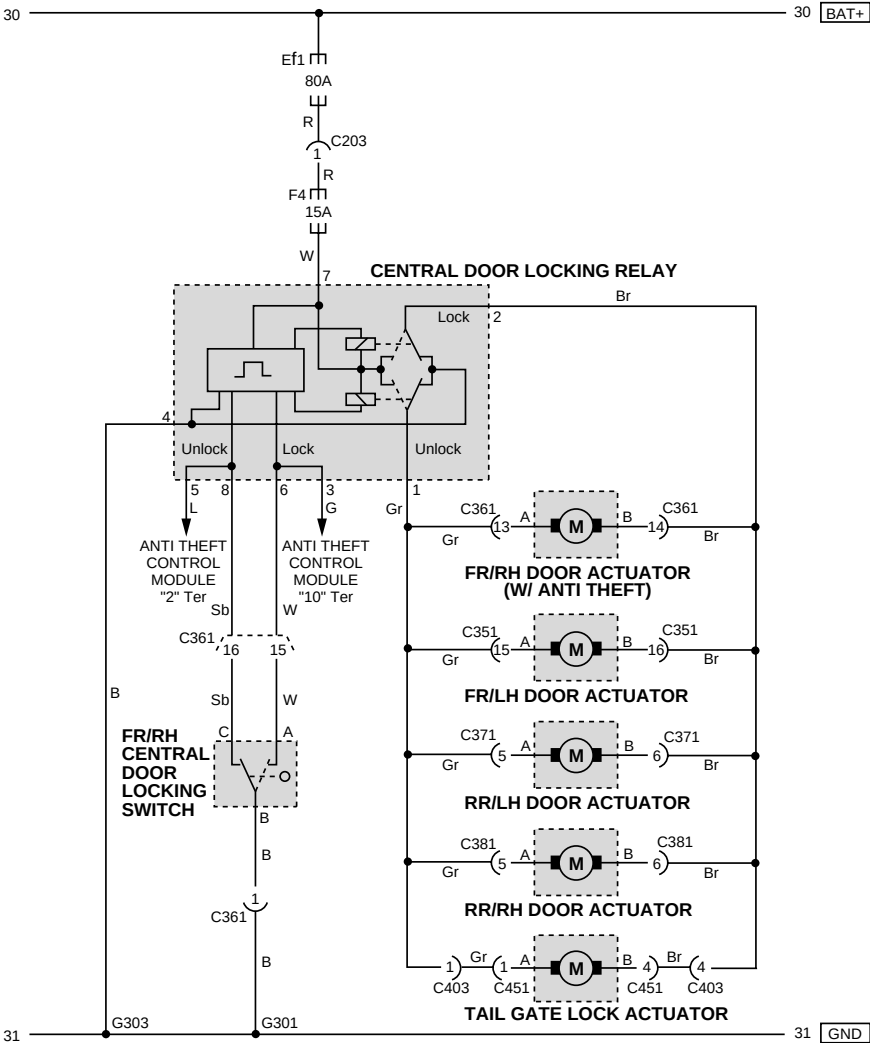

a. CONNECTOR INFORMATION



CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN. WHITE)	W/H Floor - Front Left Door	Below Front Left Door Upper Hinge
C361 (21PIN. WHITE)	W/H Floor - Front Right Door	Below Front Right Door Upper Hinge
C371 (6PIN. COLORLESS)	W/H Floor - Rear Left Door	InsideLeft Center Pillar
C381 (6PIN. COLORLESS)	W/H Floor - Rear Right Door	InsideRight Center Pillar
C403 (8PIN. WHITE)	W/H Floor -Tail Gate Extension	InsideTrunk
C451 (8PIN. WHITE)	W/H Tail Gate Extension -Tail Gate	InsideTail Gate
G301	Ground	Below Driver Seat
G303	Ground	Below Co-Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

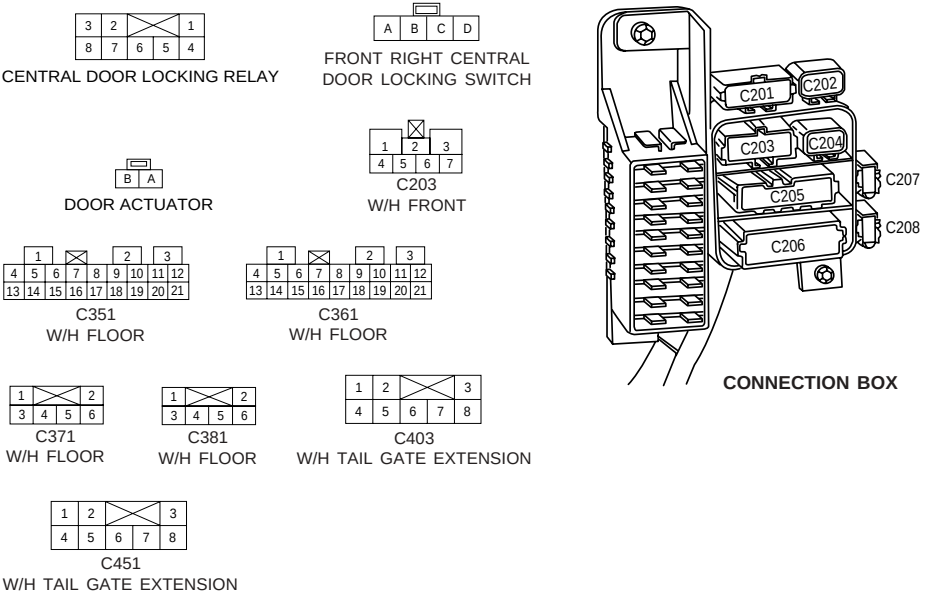


c. POSITION OF CONNECTORS AND GROUNDS


• FRONT DOOR

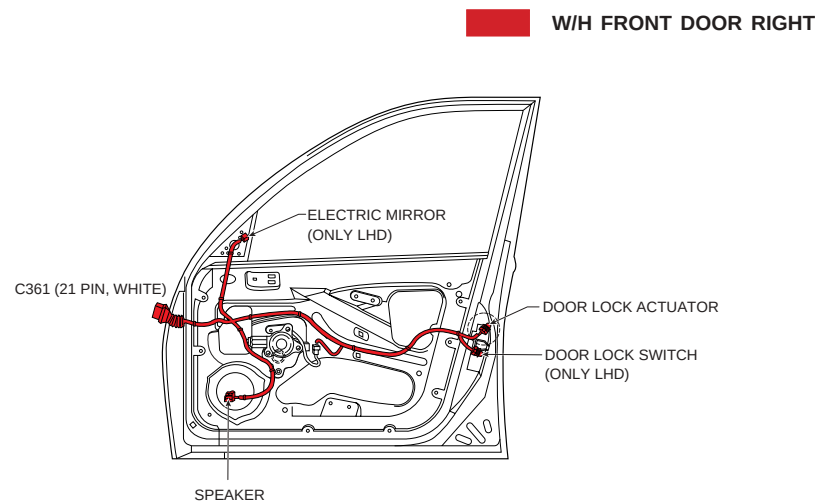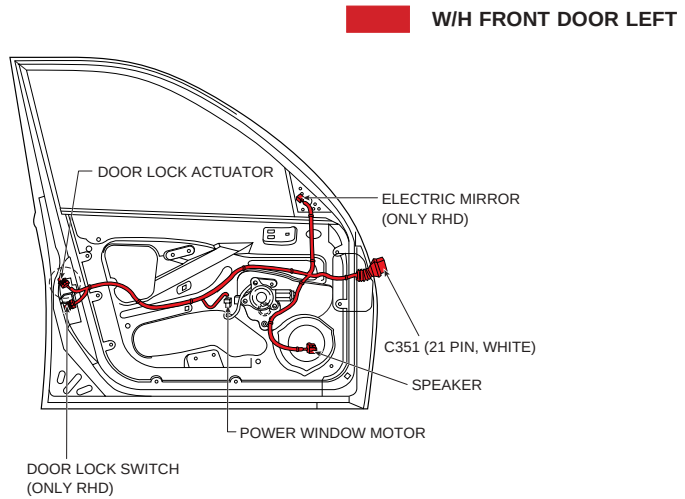

• REAR DOOR

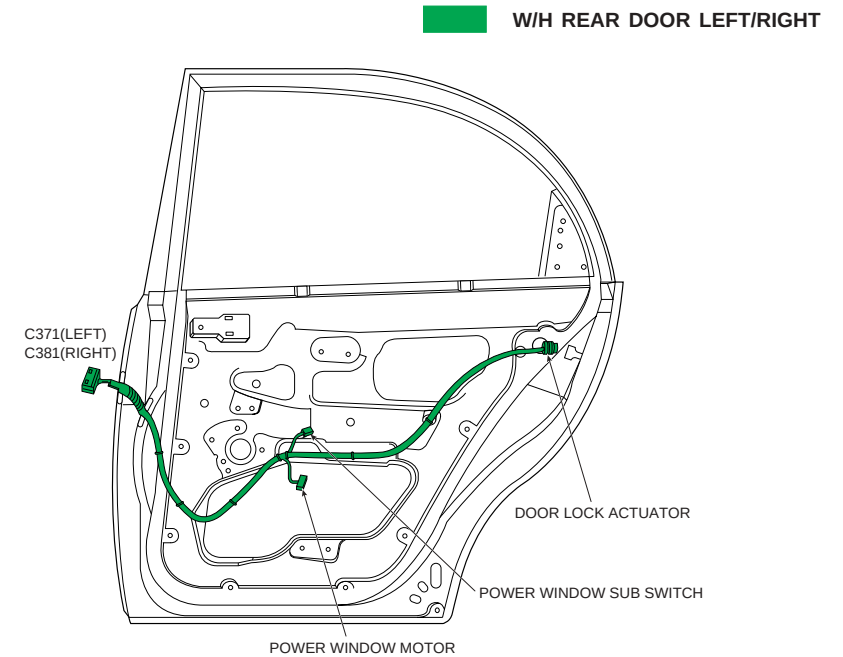


5) HATCH BACK(3 DOOR) - LHD

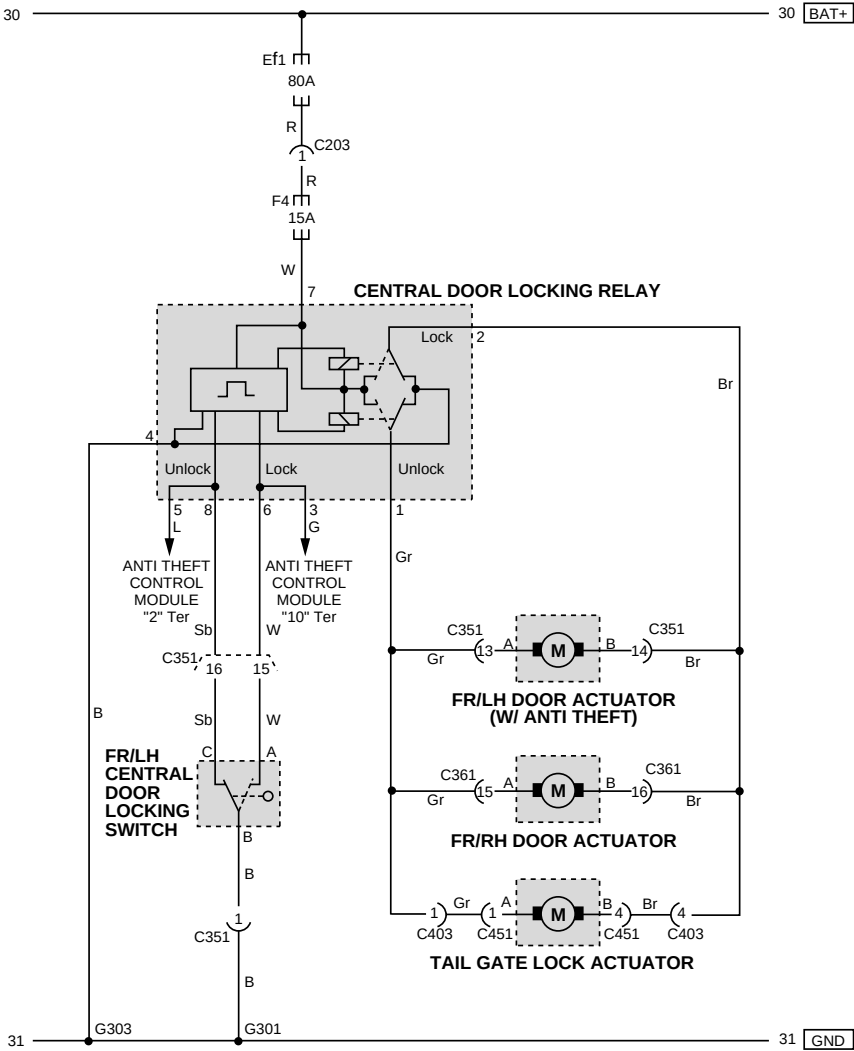

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN. WHITE)	W/H Floor - Front Left Door	Below Front Left Door Upper Hinge
C361 (21PIN. WHITE)	W/H Floor - Front Right Door	Below Front Right Door Upper Hinge
C403 (8PIN. WHITE)	W/H Floo-tail gate extension	Inside Trunk
C451 (8PIN. WHITE)	W/H Tail Gate Extension-tail Gate	Inside Tail Gate
G301	Ground	Below Driver Seat
G303	Ground	Below Co-Driver Seat


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

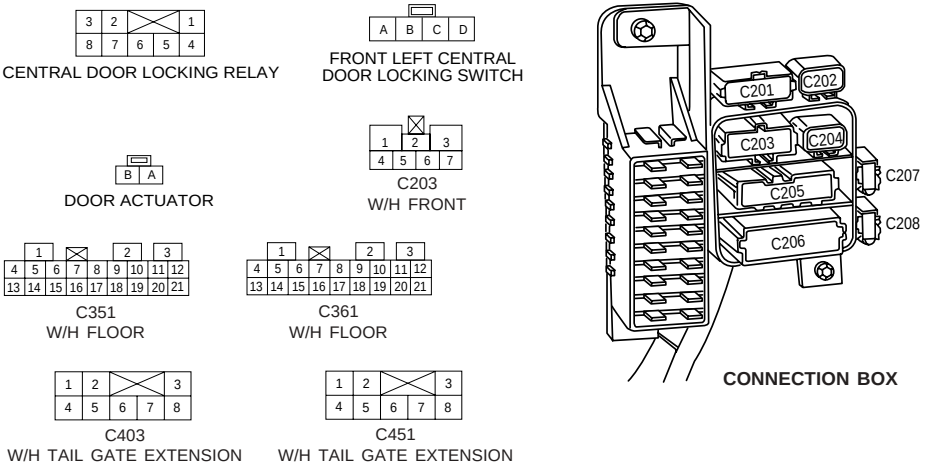


c. POSITION OF CONNECTORS AND GROUNDS

• FRONT DOOR


W/H FRONT DOOR LEFT

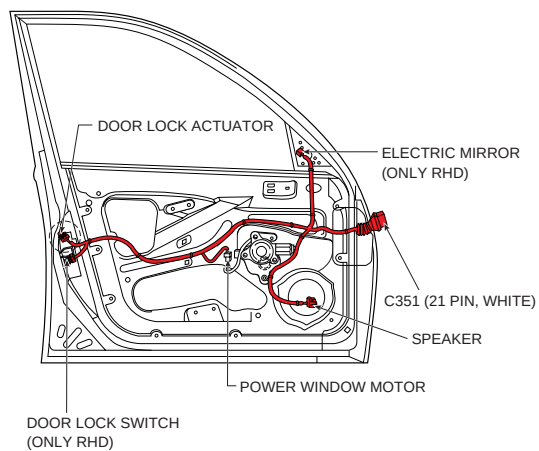

W/H FRONT DOOR RIGHT

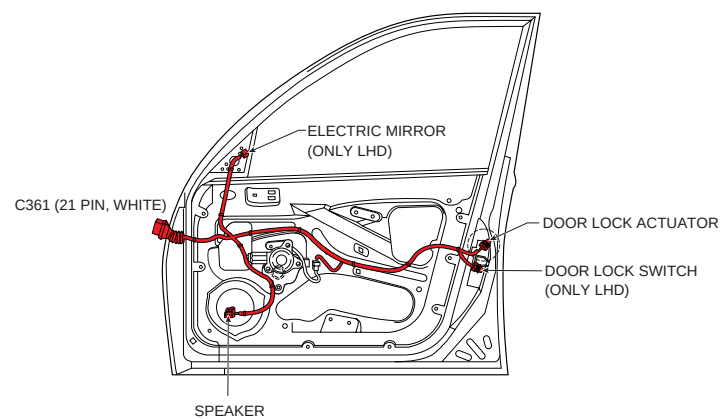


6) HATCH BACK(3 DOOR) - RHD

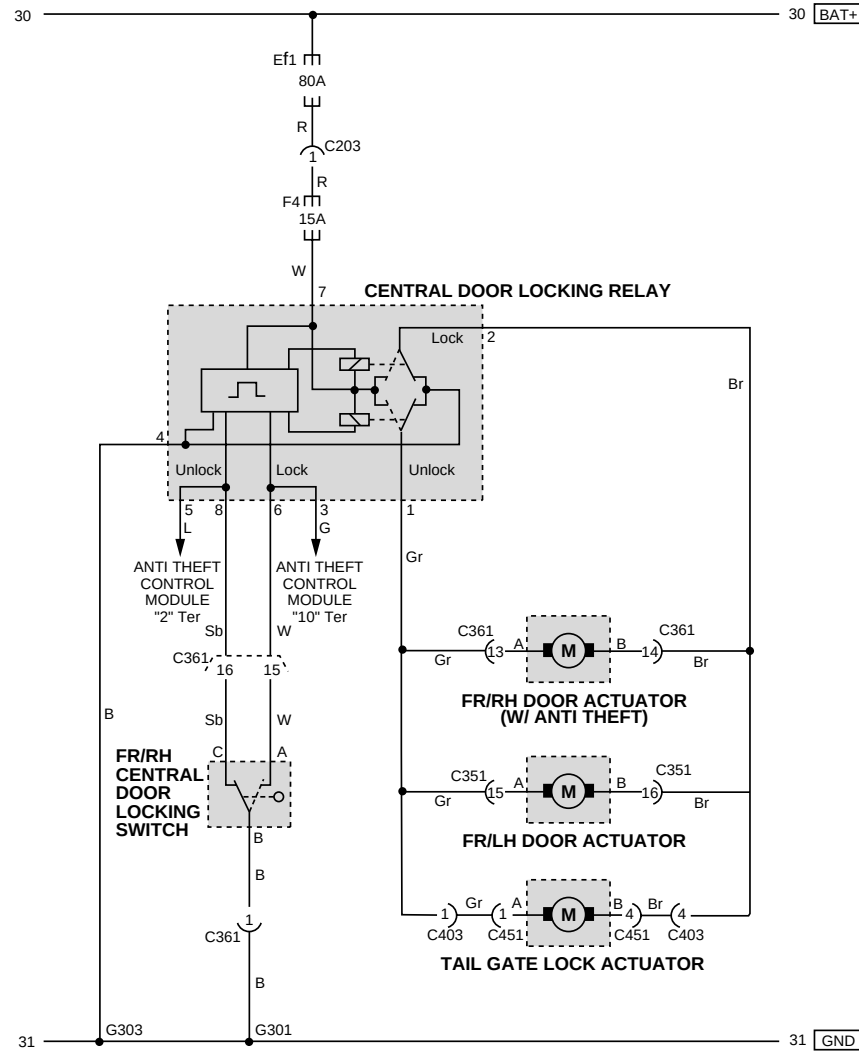

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN. WHITE)	W/H Floor - Front Left Door	Below Front Left Door Upper Hinge
C361 (21PIN. WHITE)	W/H Floor - Front Right Door	Below Front Right Door Upper Hinge
C403 (8PIN. WHITE)	W/H Floo-tail gate extension	Inside Trunk
C451 (8PIN. WHITE)	W/H Tail Gate Extension-tail Gate	Inside Tail Gate
G301	Ground	Below Driver Seat
G303	Ground	Below Co-Driver Seat


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

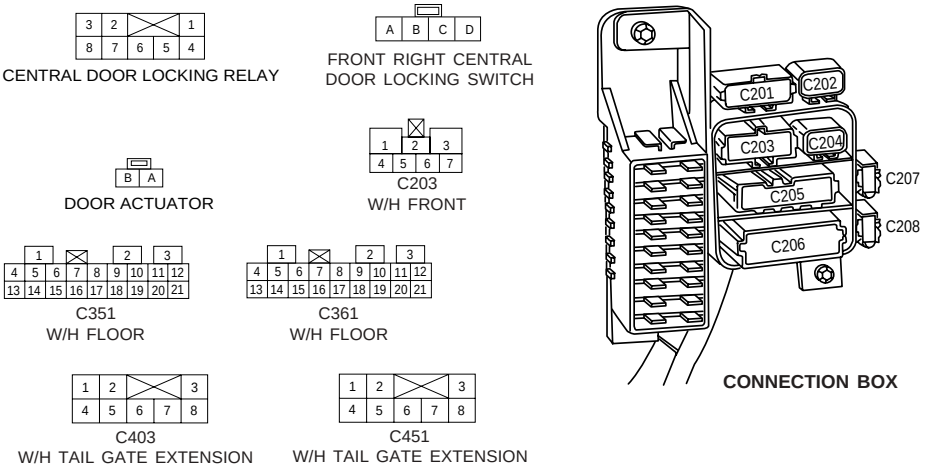


c. POSITION OF CONNECTORS AND GROUNDS

• FRONT DOOR

■ W/H FRONT DOOR LEFT

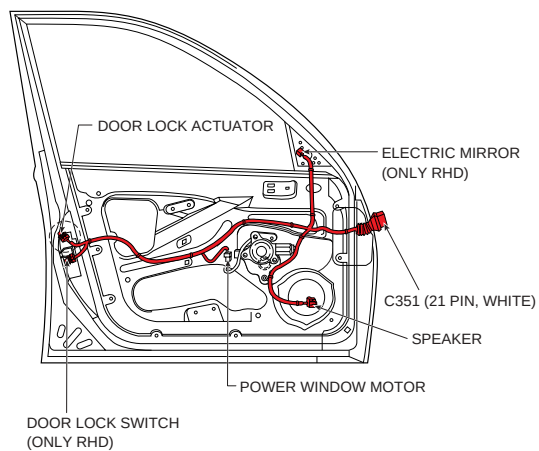


■ W/H FRONT DOOR RIGHT

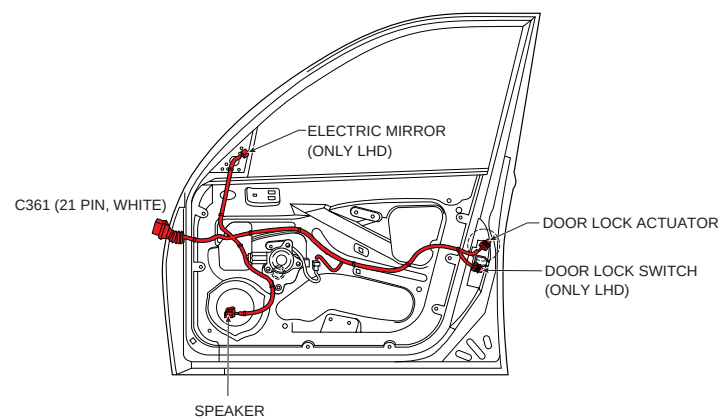

24. AUDIO, AUTO ANTENNA CIRCUIT


1) NOTCH BACK

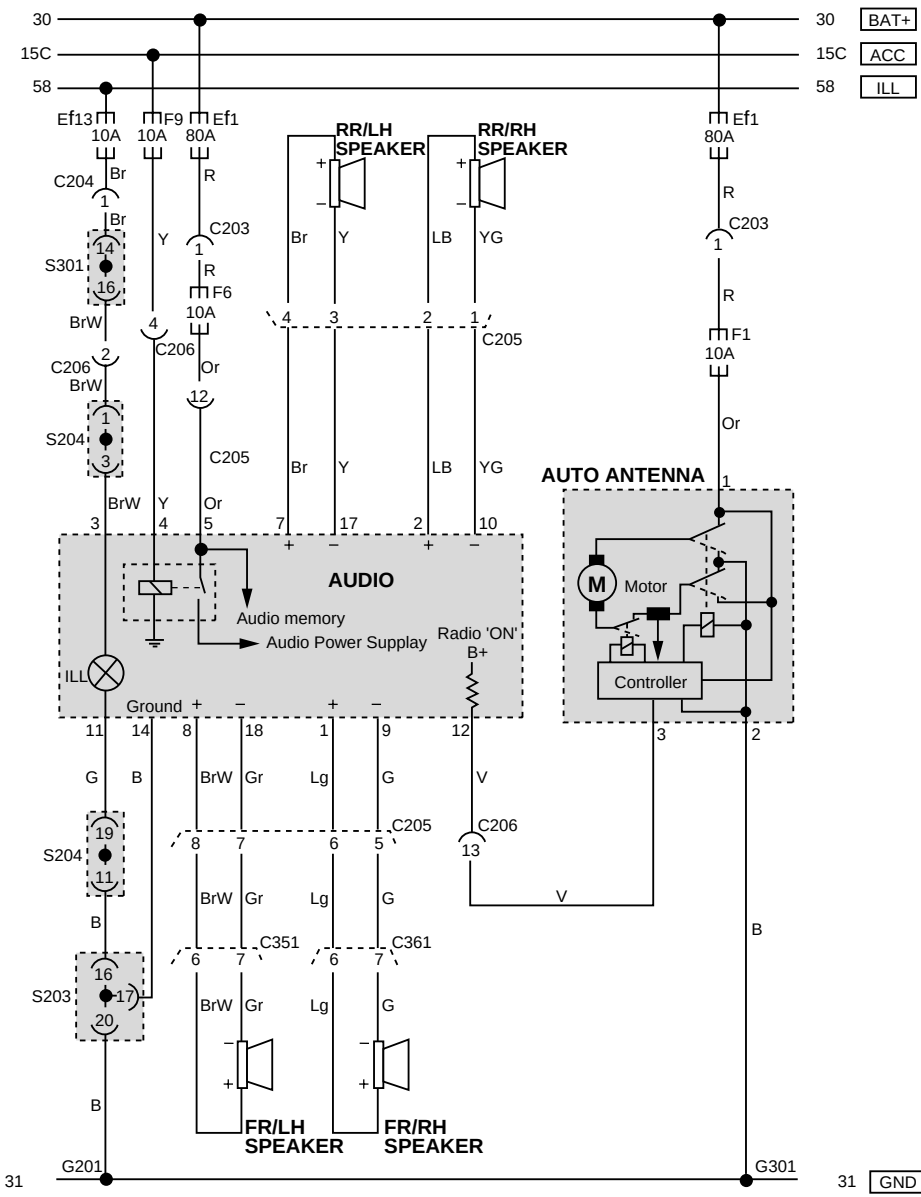

a. CONNECTOR INFORMATION



CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box next to PassengerRoom Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to PassengerRoom Fuse Box
C205 (22PIN. YELLOW)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN. WHITE)	W/H Floor - Front Left Door	Below Front Left Door Upper Hinge
C361 (21PIN. WHITE)	W/H Floor - Front Right Door	Below Front Right Door Upper Hinge
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORANGE)	Splice Pack	Below Driver Seat
G201	Ground	Below Right Front Console Box
G301	Ground	Below Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

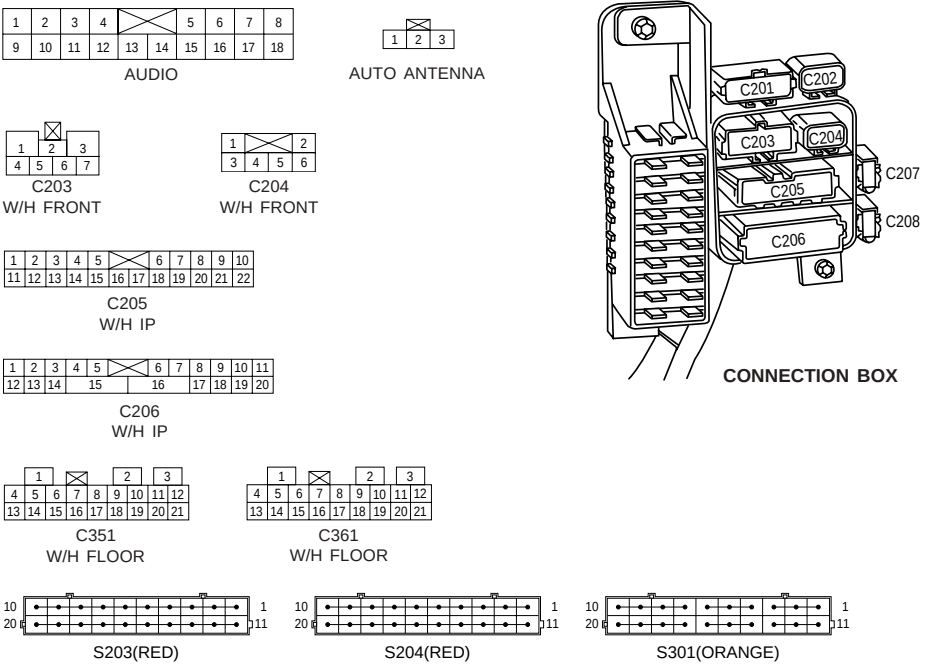


c. POSITION OF CONNECTORS AND GROUNDS

• FRONT DOOR

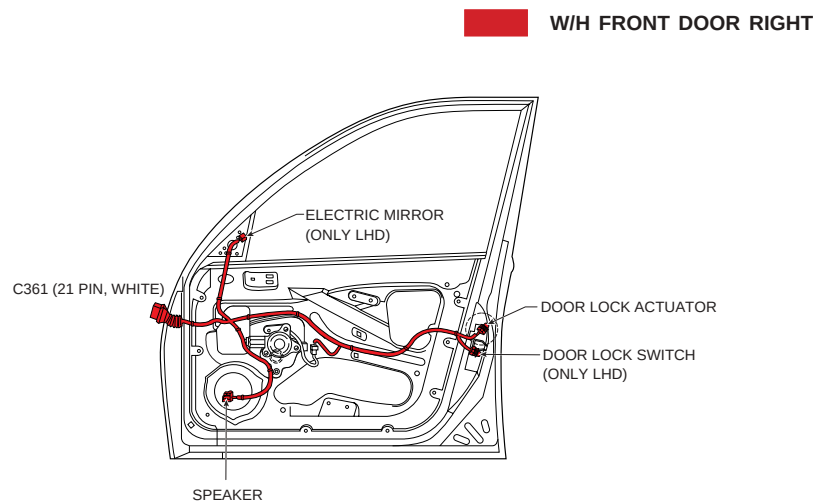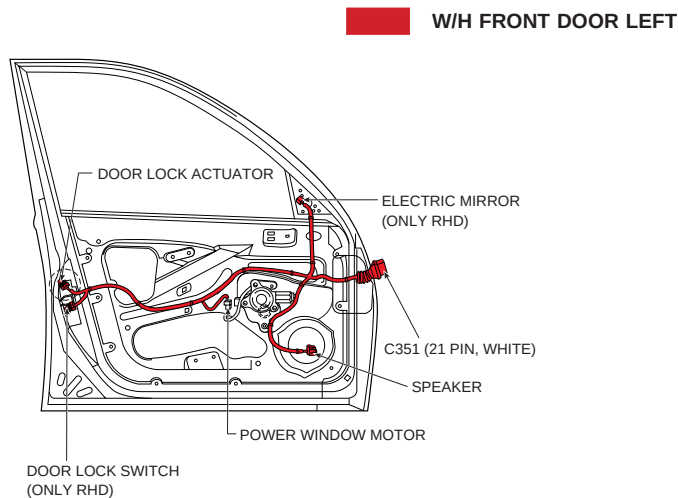


d. SPLICE PACK


S203(RED) - LHD

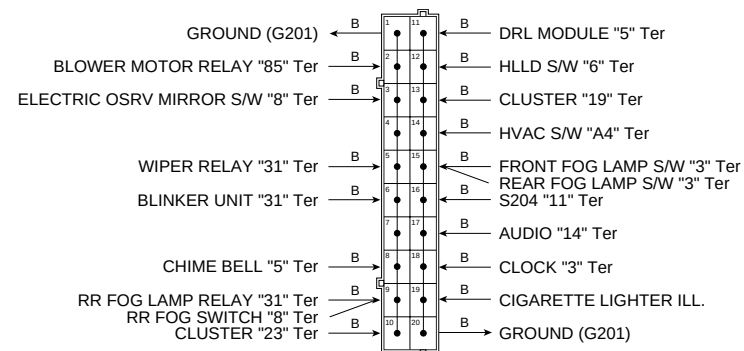


S204(RED) - LHD

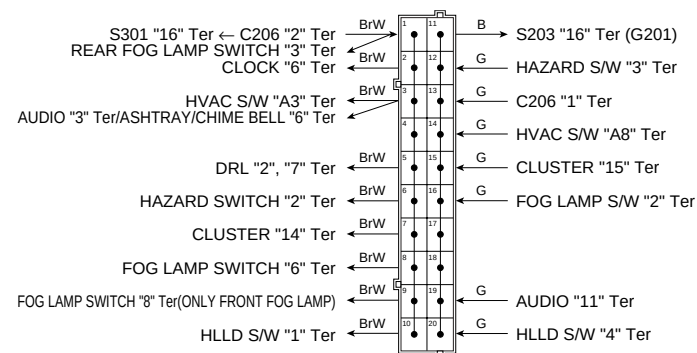

S301(ORANGE) - NOTCH BACK

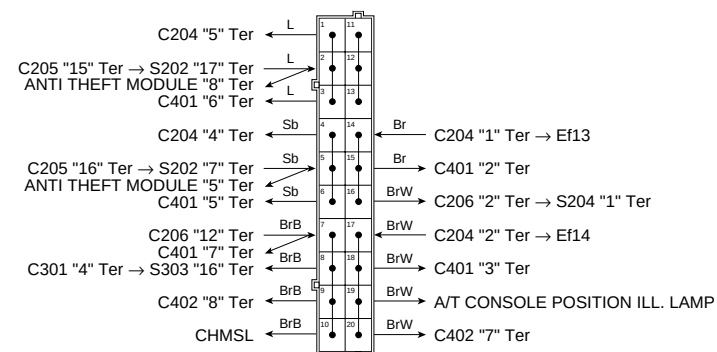


2) HATCH BACK

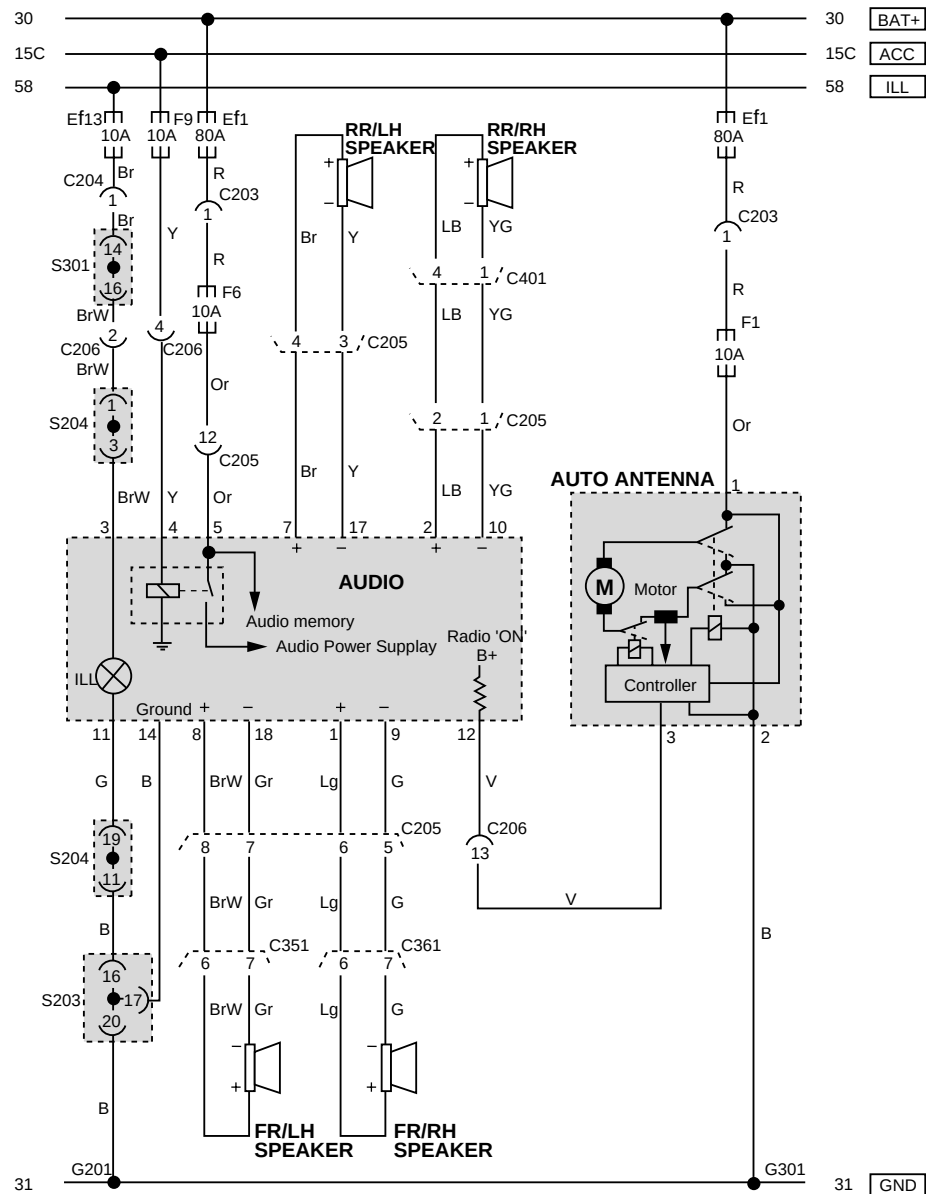

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. YELLOW)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN. WHITE)	W/H Floor - Front Left Door	Below Front Left Door Upper Hinge
C361 (21PIN. WHITE)	W/H Floor - Front Right Door	Below Front Right Door Upper Hinge
C401 (8PIN. WHITE)	W/H Floor - Trunk	Above Left Seat Belt Retractor In Trunk
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORANGE)	Splice Pack	Below Driver Seat
G201	Ground	Below Right Front Console Box
G301	Ground	Below Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

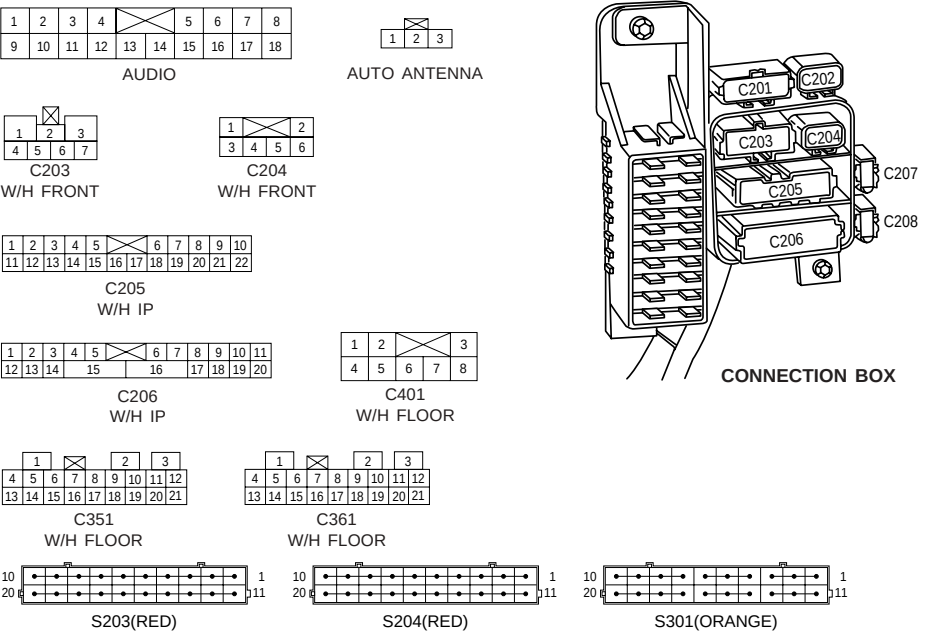


c. POSITION OF CONNECTORS AND GROUNDS

• FRONT DOOR

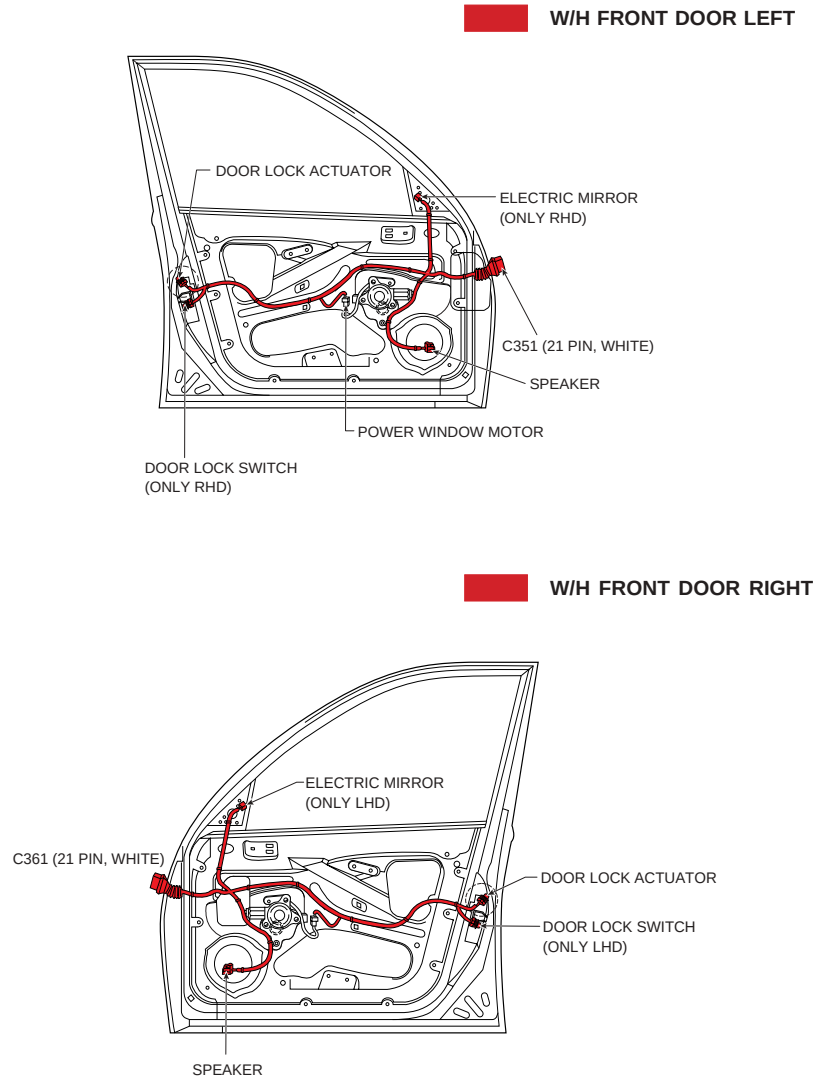


d. SPLICE PACK

S203(RED) - LHD

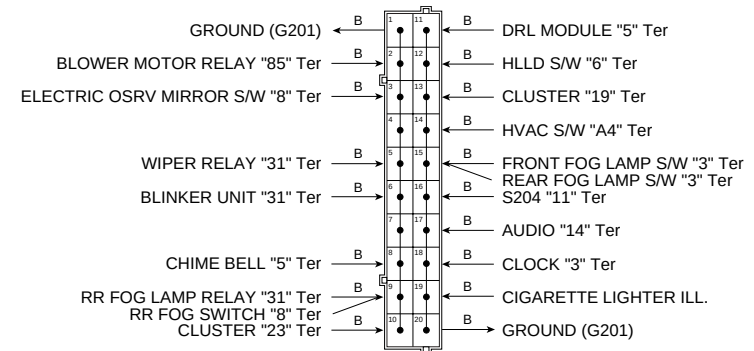

S204(RED) - LHD

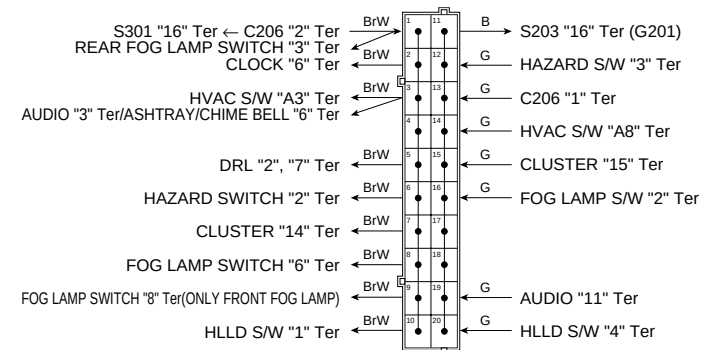

S301(ORANGE) - HATCH BACK

