



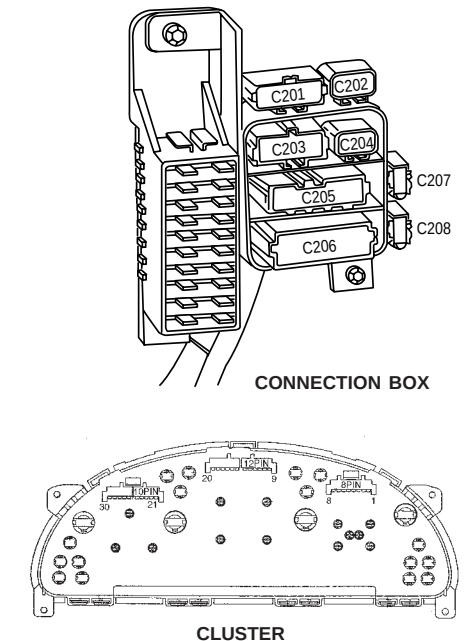


## c. POSITION OF CONNECTORS AND GROUNDS


## • ENGINE ROOM INSIDE

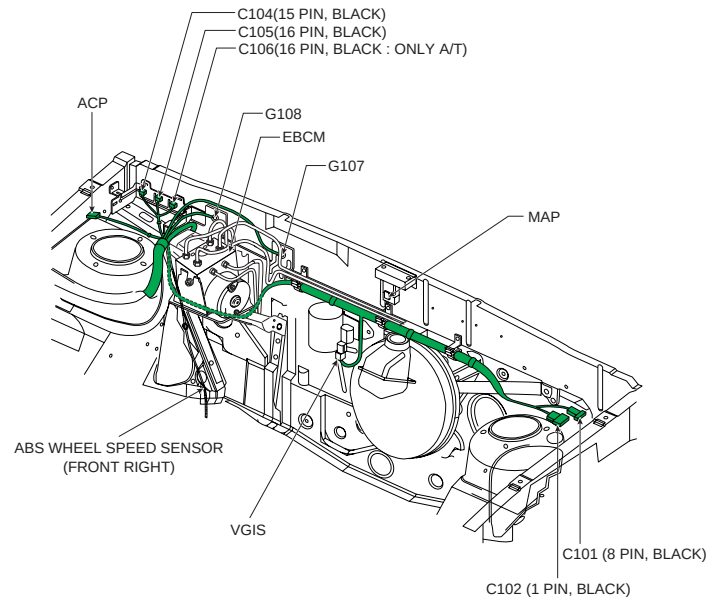

## • UNDER BODY

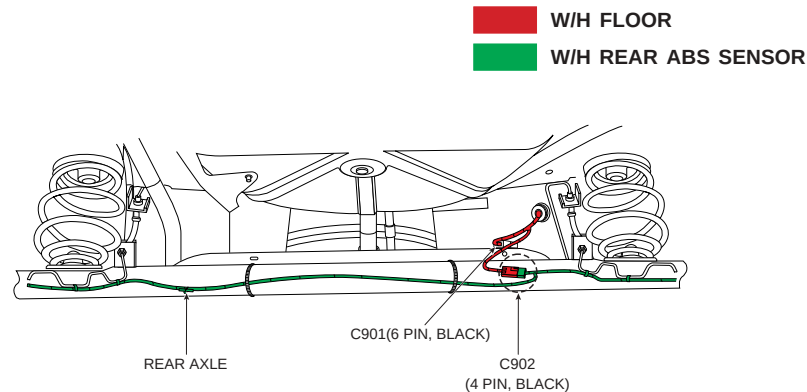


## • PASSENGER ROOM RIGHT SIDE PANEL

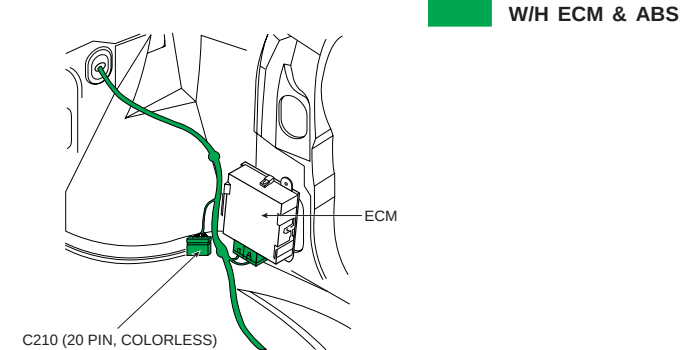


## d. SPLICE PACK

## S201(BLUE) - LHD

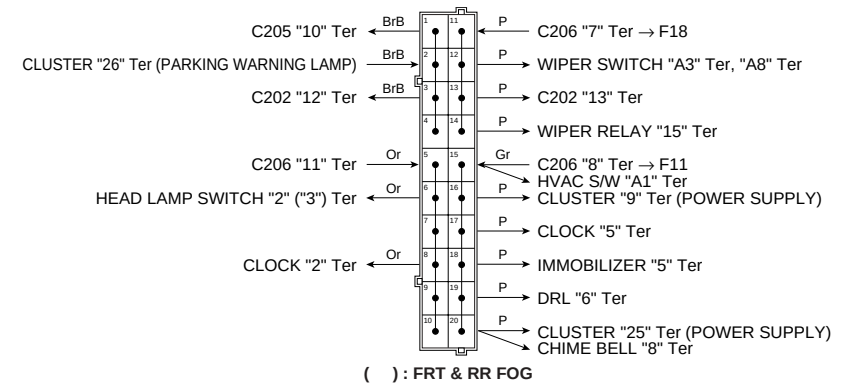

## S203(RED) - LHD

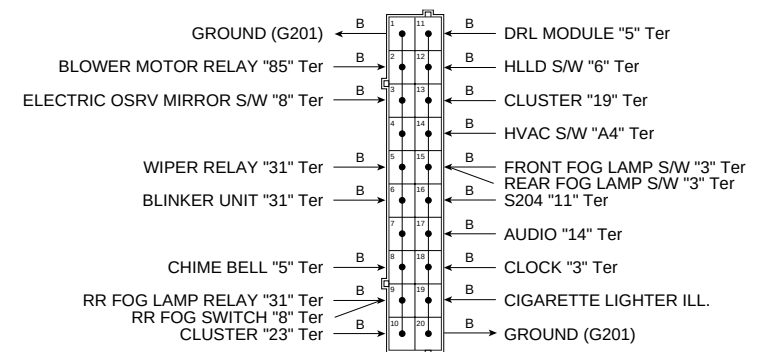



| CONNECTOR(NO)<br>(PIN NO. COLOR) | CONNECTING. WIRING HARNESS     | CONNECTOR POSITION                             |
|----------------------------------|--------------------------------|------------------------------------------------|
| C105 (16PIN. BLACK)              | W/H ECM & ABS - Engine Control | Behind Right Strut Mounting                    |
| C107(10PIN, BLACK)               | W/H Engine Control - Injector  | Behind Right Strut Mounting                    |
| C206 (20PIN. COLORLESS)          | W/H Floor - IP                 | Connection Box Next to Passenger Room Fuse Box |
| C210 (20PIN. COLORLESS)          | W/H ECM & ABS - IP             | Below Glovs Box (Right Side Panel)             |
| C901 (6PIN. BLACK)               | W/H Floor - Fuel Tank          | Behind Fuel Tank                               |
| S201 (20PIN. BLUE)               | Splice Pack                    | Next to Passenger Room Relay Box               |
| S203 (20PIN. RED)                | Splice Pack                    | Next to Passenger Room Relay Box               |
| G201                             | Ground                         | Below Right Front Console Box                  |
| G303                             | Ground                         | Below Co-Driver Seat                           |

| M(BLACK) |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|----------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 64       | 63 | 62 | 61 | 60 | 59 | 58 | 57 | 56 | 55 | 54 | 53 | 52 | 51 | 50 | 49 |
| 48       | 47 | 46 | 45 | 44 | 43 | 42 | 41 | 40 | 39 | 38 | 37 | 36 | 35 | 34 | 33 |
| 32       | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 |
| 16       | 15 | 14 | 13 | 12 | 11 | 10 | 9  | 8  | 7  | 6  | 5  | 4  | 3  | 2  | 1  |

| K(RED) |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|--------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1      | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| 17     | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 |
| 33     | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 |
| 49     | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 |

ECM(MR-140)

|   |   |                                                                                     |   |    |
|---|---|-------------------------------------------------------------------------------------|---|----|
|   |   |  |   |    |
| 1 | 2 | 3                                                                                   | 4 | 5  |
| 6 | 7 | 8                                                                                   | 9 | 10 |

C107  
W/H ENGINE CONTROL

|    |    |    |    |
|----|----|----|----|
| 1  | 2  | 3  | 4  |
| 5  | 6  | 7  | 8  |
| 9  | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 |

W/H ECM & ABS

|    |    |    |    |   |                                                                                       |   |   |    |    |    |    |
|----|----|----|----|---|---------------------------------------------------------------------------------------|---|---|----|----|----|----|
| 1  | 2  | 3  | 4  | 5 |  | 6 | 7 | 8  | 9  | 10 | 11 |
| 12 | 13 | 14 | 15 |   | 16                                                                                    |   |   | 17 | 18 | 19 | 20 |




C206  
W/H IP

|    |    |    |    |   |                                                                                       |   |    |    |    |    |    |
|----|----|----|----|---|---------------------------------------------------------------------------------------|---|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5 |  | 6 | 7  | 8  | 9  | 10 | 11 |
| 12 | 13 | 14 | 15 |   | 16                                                                                    |   | 17 | 18 | 19 | 20 |    |

C210  
W/H IP


|   |              |   |
|---|--------------|---|
|   | <del>2</del> |   |
| 1 | 2            | 3 |
| 4 | 5            | 6 |

C901  
W/H FLOOR

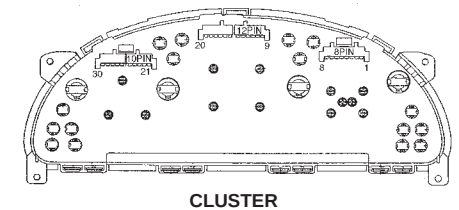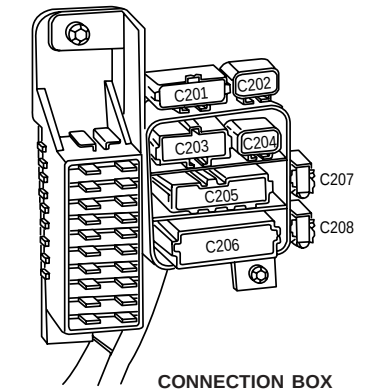


## c. POSITION OF CONNECTORS AND GROUNDS


## • ENGINE ROOM INSIDE

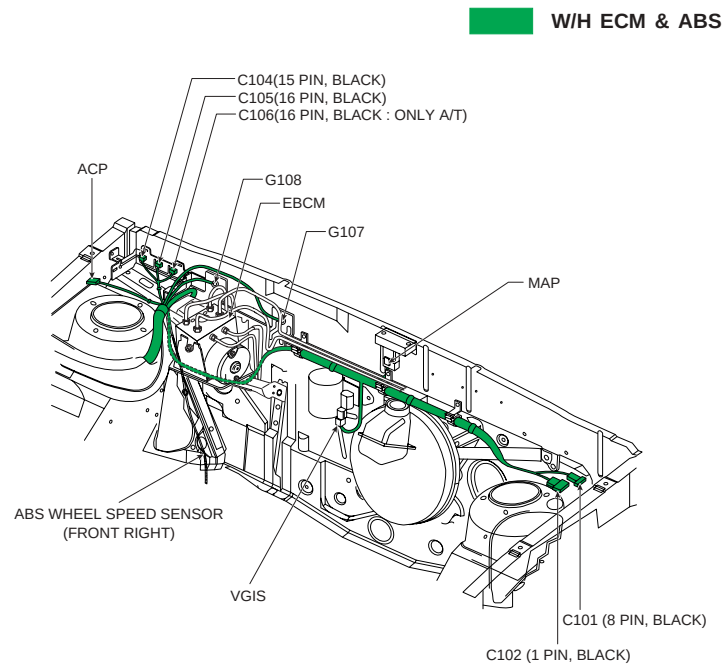

## • UNDER BODY

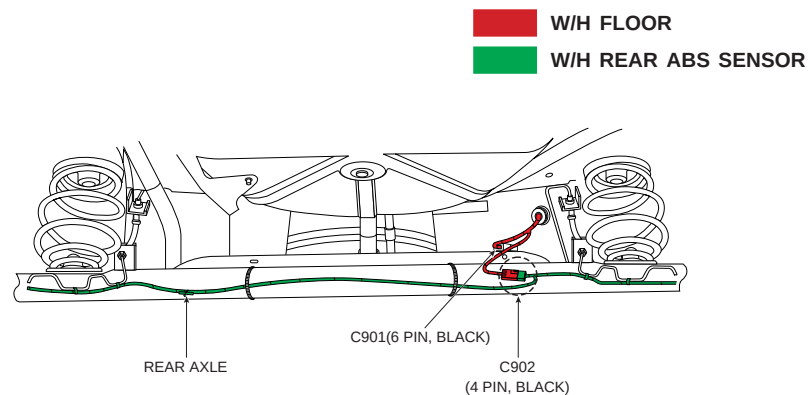


## • PASSENGER ROOM RIGHT SIDE PANEL

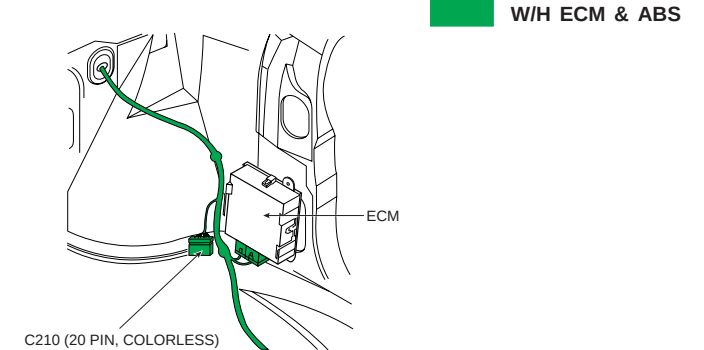


## d. SPLICE PACK


## S201(BLUE) - LHD

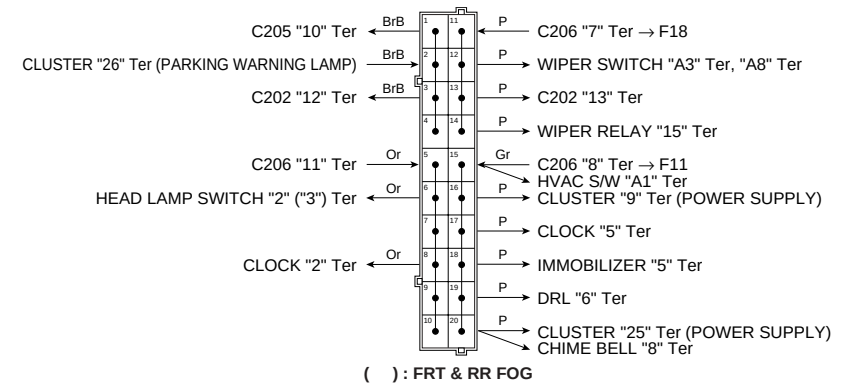

## S203(RED) - LHD

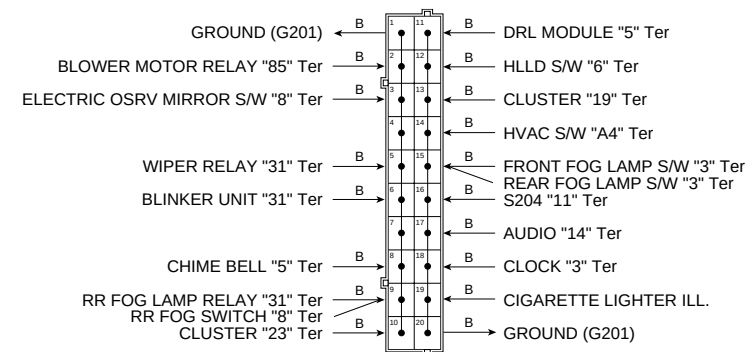



### 1-3) IPCM-6KT

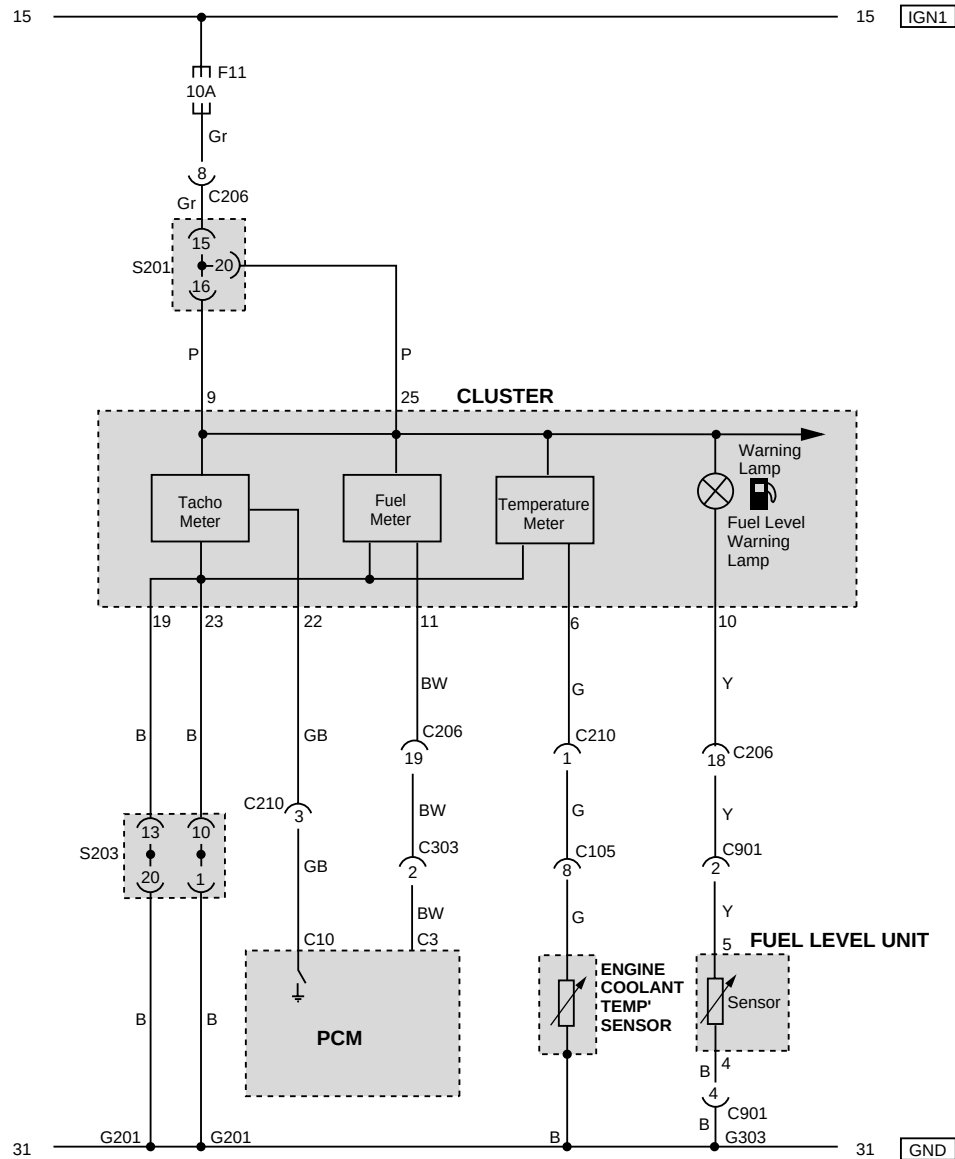

### a. CONNECTOR INFORMATION


| CONNECTOR(NO)<br>(PIN NO. COLOR) | CONNECTING. WIRING HARNESS     | CONNECTOR POSITION                             |
|----------------------------------|--------------------------------|------------------------------------------------|
| C105 (16PIN, BLACK)              | W/H PCM & ABS - Engine Control | Behind Right Strut Mounting                    |
| C206 (20PIN, COLORLESS)          | W/H Floor - IP                 | Connection Box Next to Passenger Room Fuse Box |
| C210 (20PIN, COLORLESS)          | W/H PCM & ABS - IP             | Below Glovs Box (Right Side Panel)             |
| C303 (8PIN, WHITE)               | W/H PCM & ABS - Floor          | Below Co-driver Seat                           |
| C901 (8PIN, BLACK)               | W/H Floor - Fuel Tank          | Behind Fuel Tank                               |
| S201 (20PIN, BLUE)               | W/H IP                         | Next to Passenger Room Relay Box               |
| S203 (20PIN. RED)                | Splice pack                    | Next to Passenger Room Relay Box               |
| G201                             | W/H IP                         | Below Right Front Console Box                  |
| G303                             | W/H Floor                      | Below Co-Driver Seat                           |

### b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

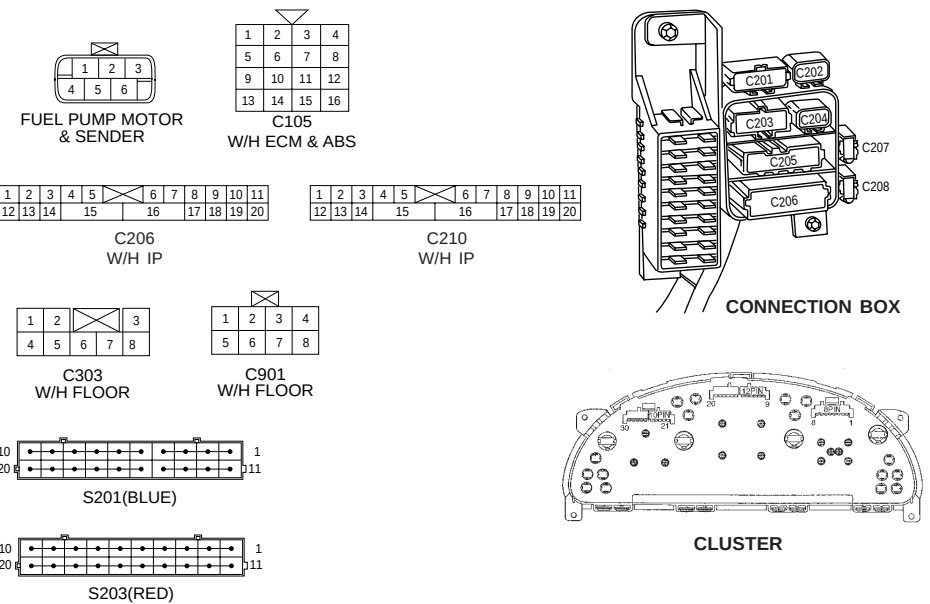


## c. POSITION OF CONNECTORS AND GROUNDS

## • ENGINE ROOM INSIDE

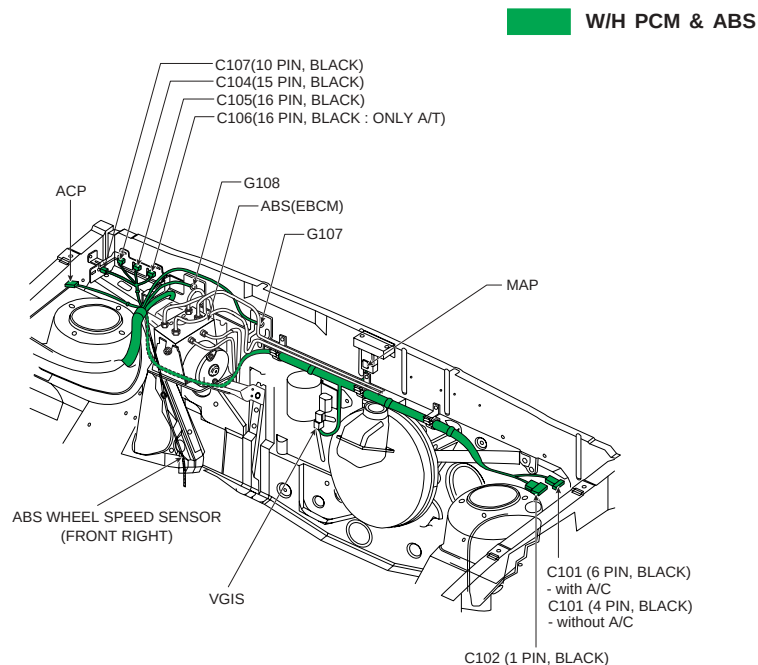


## • W/H FLOOR, FUEL TANK

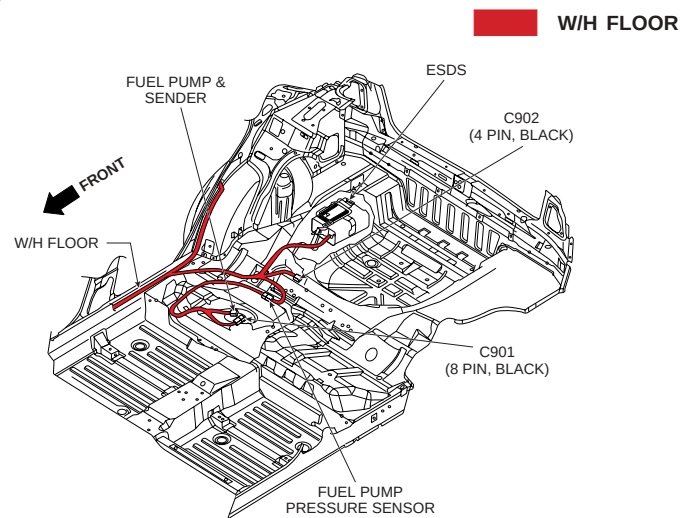



## d. SPLICE PACK

## S201 (BLUE)

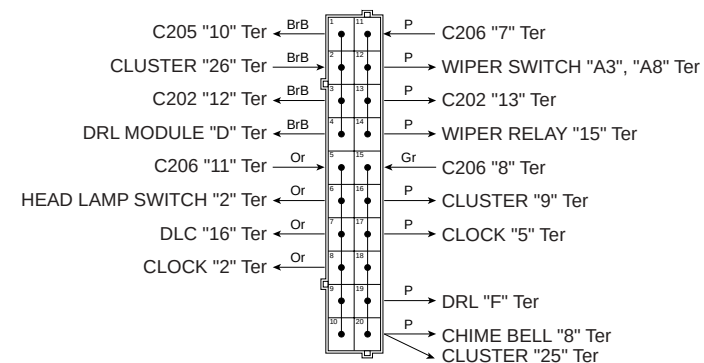


## S203 (RED)

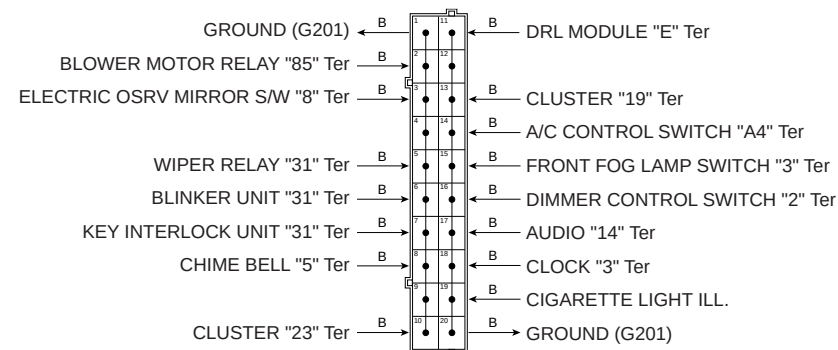




## c. POSITION OF CONNECTORS AND GROUNDS


- ENGINE ROOM INSIDE

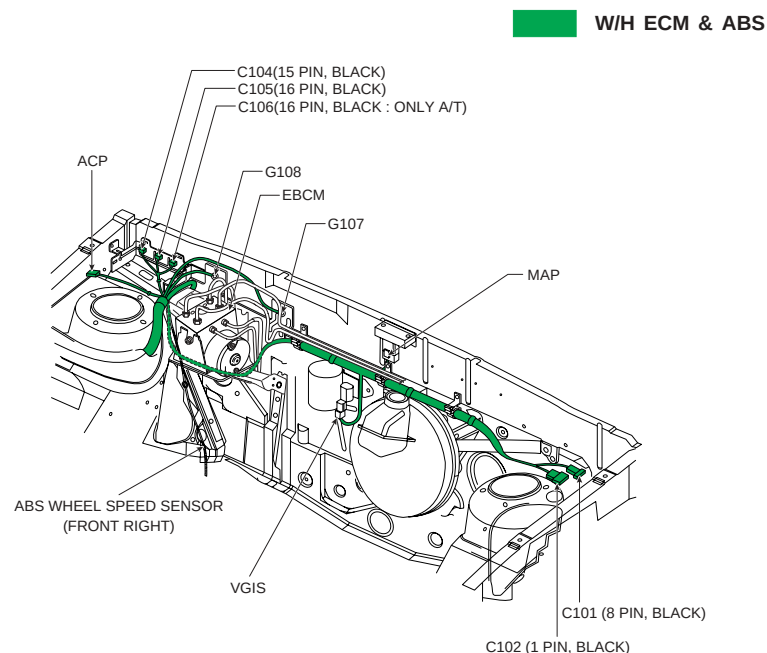

- PASSENGER ROOM RIGHT SIDE PANEL

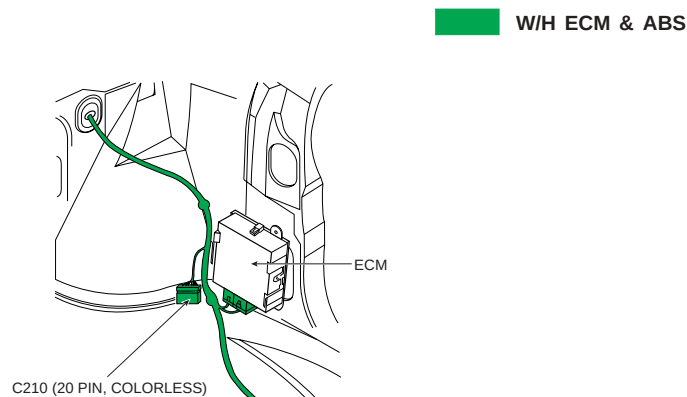


- FLOOR PANEL

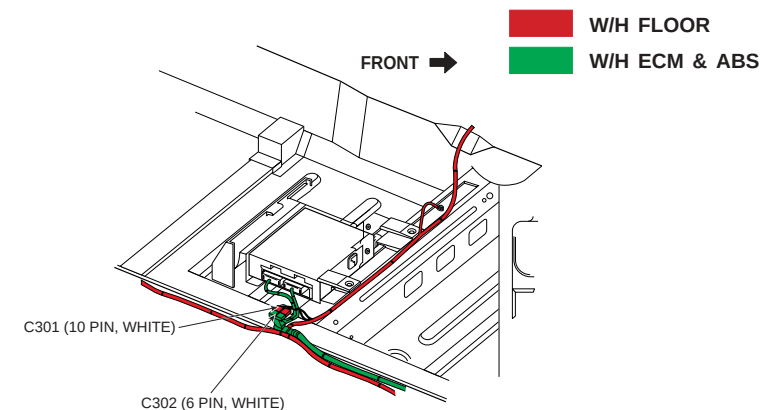


## d. SPLICE PACK

## S201(BLUE) - LHD

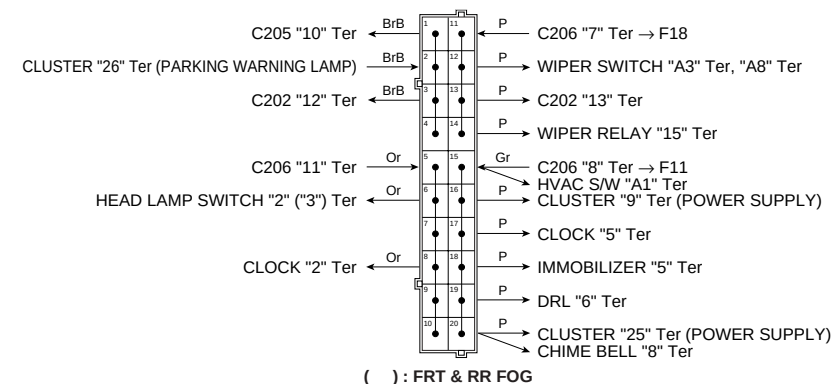

## S203(RED) - LHD

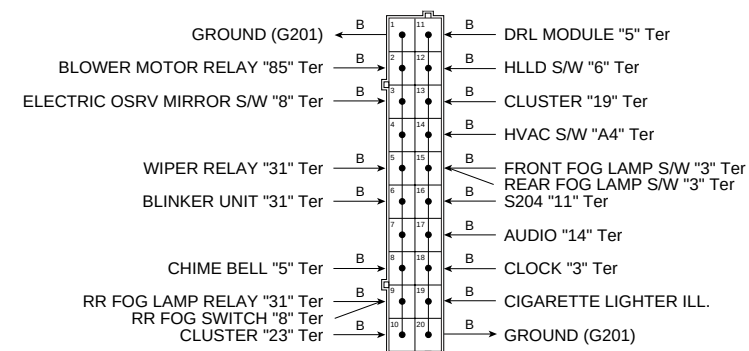




| CONNECTOR(NO)<br>(PIN NO. COLOR) | CONNECTING. WIRING HARNESS     | CONNECTOR POSITION                             |
|----------------------------------|--------------------------------|------------------------------------------------|
| C104 (15PIN, BLACK)              | W/H PCM & ABS - Engine Control | Behind Right Strut Mounting                    |
| C106 (16PIN, BLACK)              | W/H PCM & ABS - Engine Control | Behind Right Strut Mounting                    |
| C206 (20PIN, COLORLESS)          | W/H Floor - IP                 | Connection Box Next to Passenger Room Fuse Box |
| C210 (20PIN, COLORLESS)          | W/H PCM & ABS - IP             | Below Glove Box (Right Side Panel)             |
| C301 (10PIN, WHITE)              | W/H PCM & ABS - Floor          | Below Co-Driver Seat                           |
| S201 (20PIN, BLUE)               | W/H IP                         | Next to Passenge Room Relay Box                |
| S203 (20PIN, RED)                | W/H IP                         | Next to Passenger Room Relay Box               |
| G104                             | W/H Engine Control             | Intake Manifold '#4' Cylinder                  |
| G201                             | W/H IP                         | Below Right Front Console Box                  |


[illegible]

## c. POSITION OF CONNECTORS AND GROUNDS

## • ENGINE ROOM INSIDE

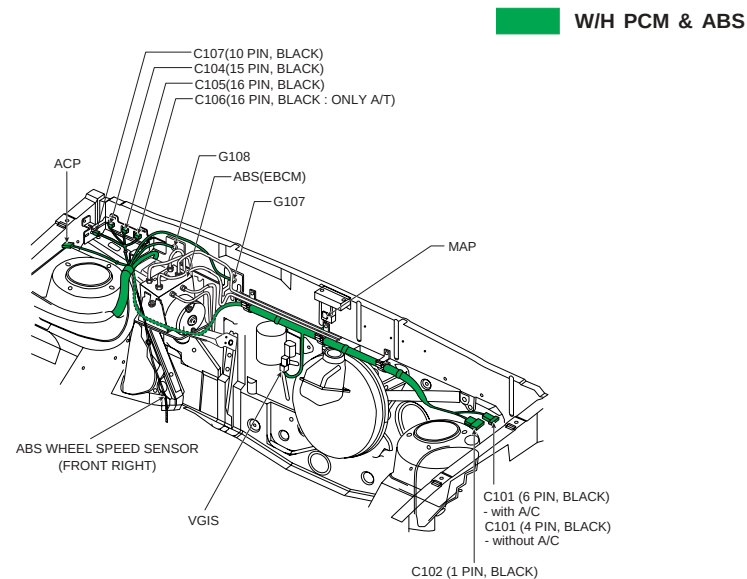


## • DOHC ENGINE

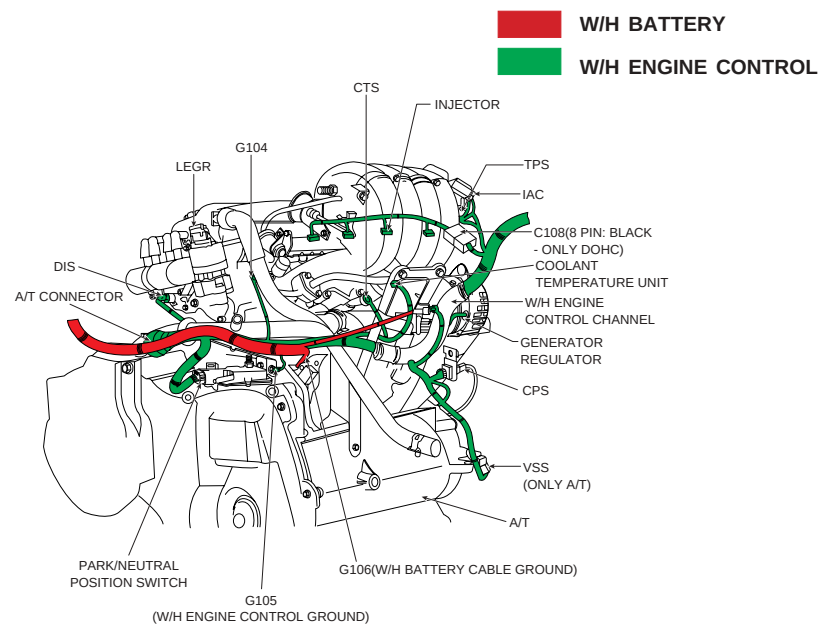

## d. SPLICE PACK

## S201 (BLUE)

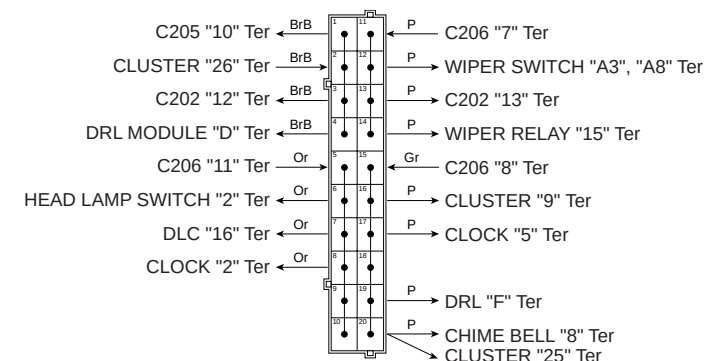

## S203 (RED)

