

CABIN AIR FILTERS

Passenger Compartment Air Filter - SRX

REMOVAL & INSTALLATION


NOTE: Manufacturer's terminology for this filter is passenger compartment air filter or ventilation filter.

NOTE: Numbers in parenthesis refer to numbers in figures.

CABIN AIR FILTER

Removal & Installation


1. Remove the air inlet grille access panel. See **AIR INLET GRILLE PANEL**.
2. With both hands release the tabs on each side of the access cover. Lift up and remove the filter access cover (1). See **Fig. 1**. Remove the filter (1) from the filter housing. See **Fig. 2**.

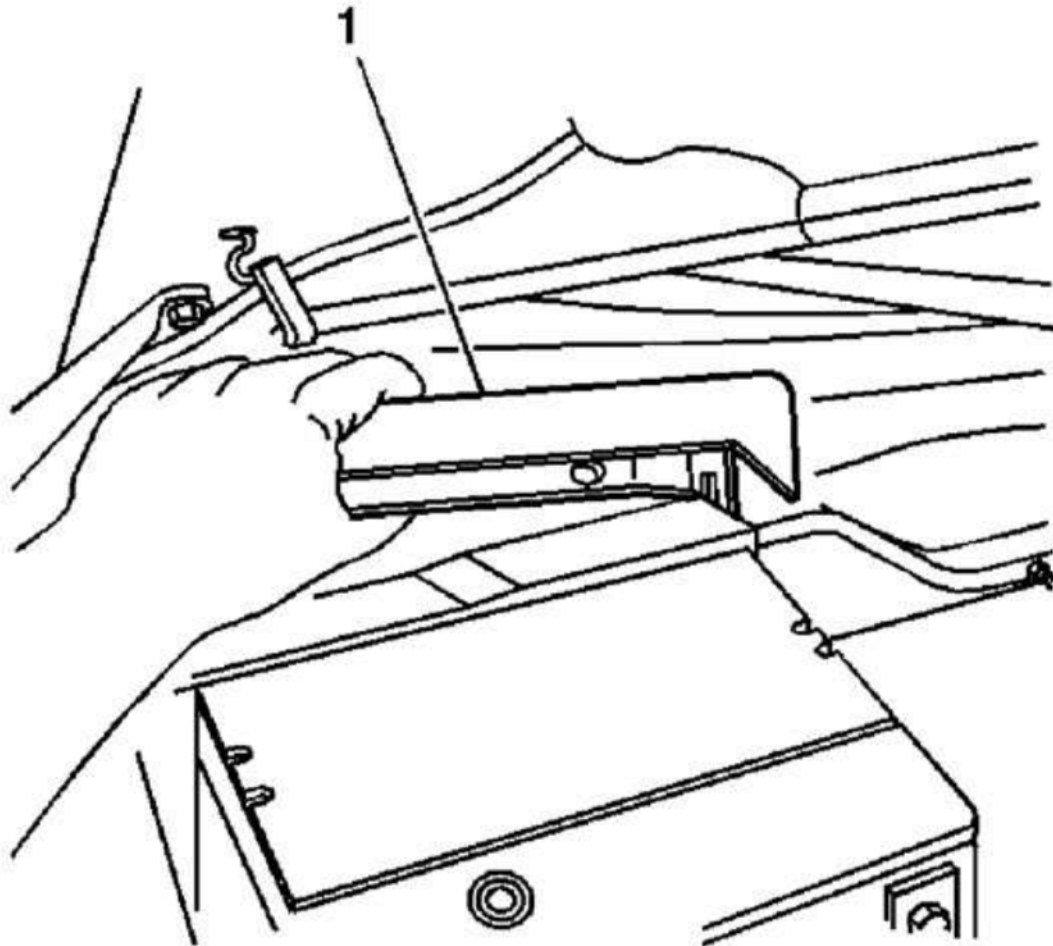

G00255870

Fig. 1: Removing/Installing Filter Access Cover
Courtesy of GENERAL MOTORS CORP.

3. To install, reverse removal procedure.

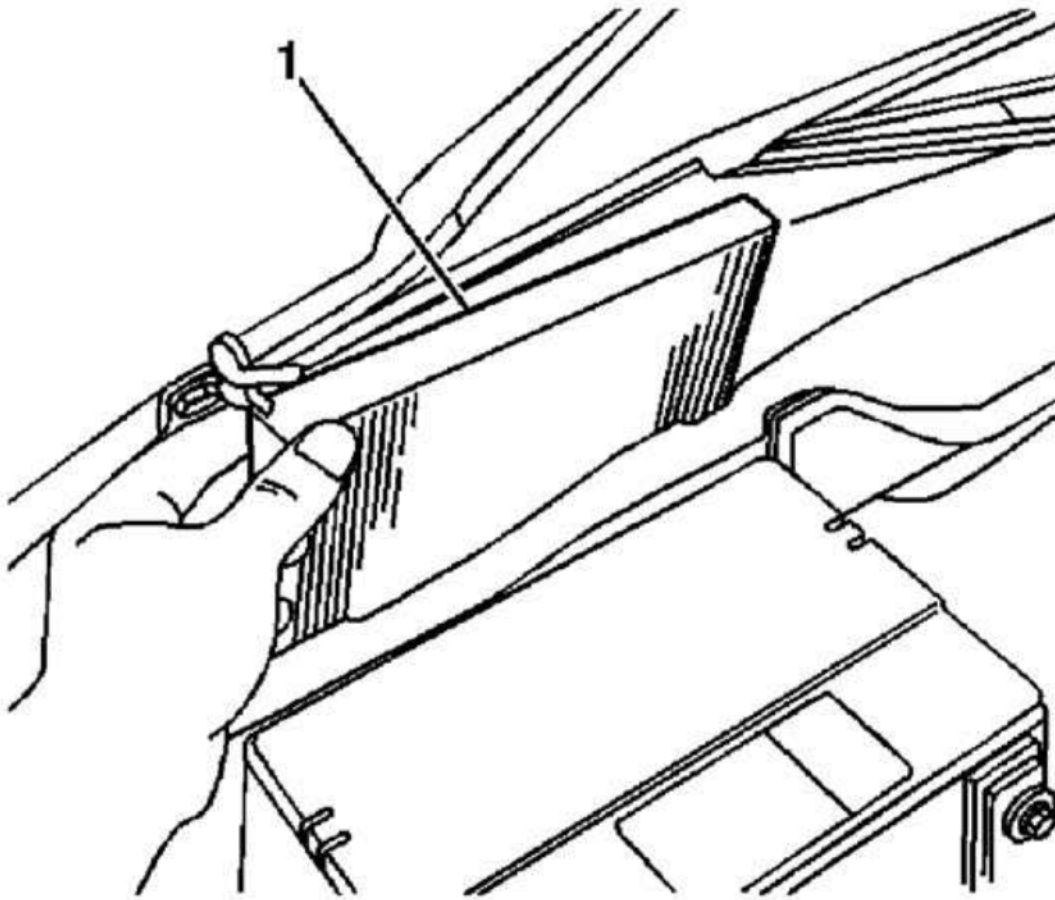


G00255871

Fig. 2: Removing/Installing Cabin Air Filter
Courtesy of GENERAL MOTORS CORP.

AIR INLET GRILLE PANEL

Removal & Installation


1. Remove the windshield wiper arms. See **WINDSHIELD WIPER ARMS**.
2. Remove the upper air inlet panel fasteners. See **Fig. 3**. Remove the upper air inlet panel.

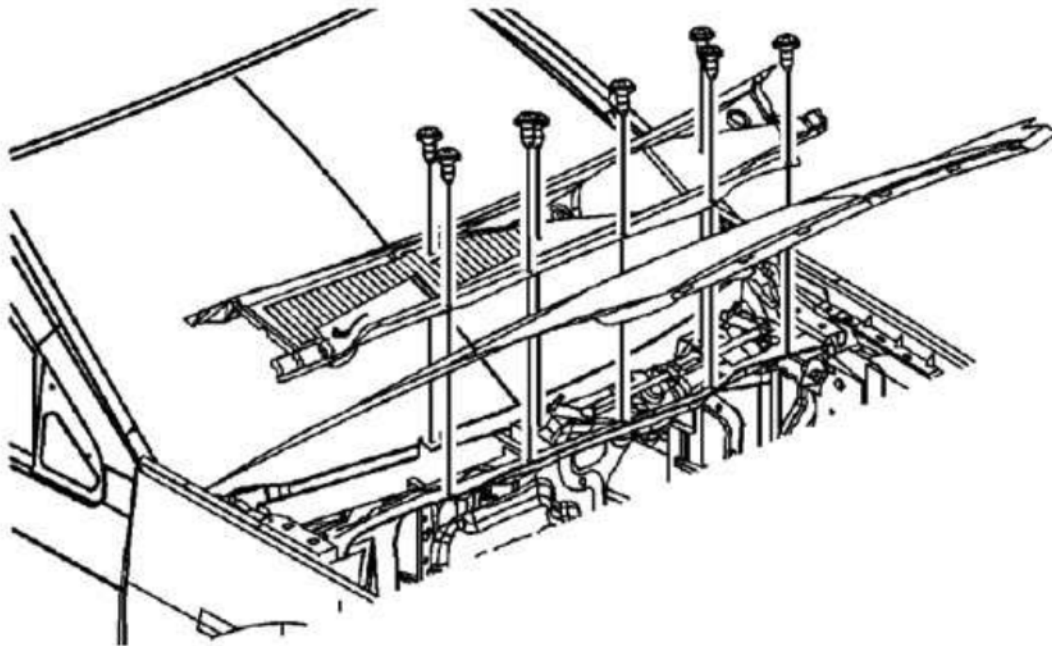

G00255872

Fig. 3: Removing/Installing Upper Air Inlet Panel Fasteners
Courtesy of GENERAL MOTORS CORP.

3. Remove the lower air inlet panel fasteners. See **Fig. 4**. Remove the lower air inlet panel support bracket retainer from the master cylinder mounting stud. Remove the lower air inlet panel.
4. To install, reverse removal procedure.

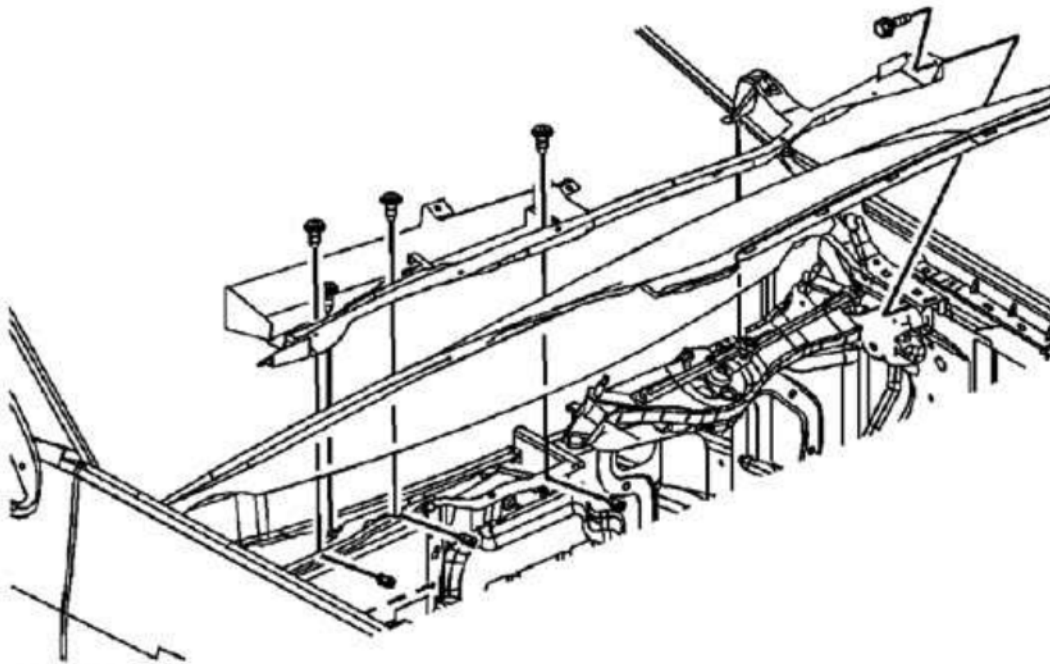


G00255873

Fig. 4: Removing/Installing Lower Air Inlet Panel Fasteners
Courtesy of GENERAL MOTORS CORP.

WINDSHIELD WIPER ARMS

Removal

1. Set the wipers in the Park position. Open the hood assembly.
2. The driver side wiper (4) aligns with an orange line at the tip of the wiper blade located at the center lower windshield. See **Fig. 5**. The passenger side wiper (1) aligns with an orange dot at the tip of the wiper blade located on the right lower side of the windshield.

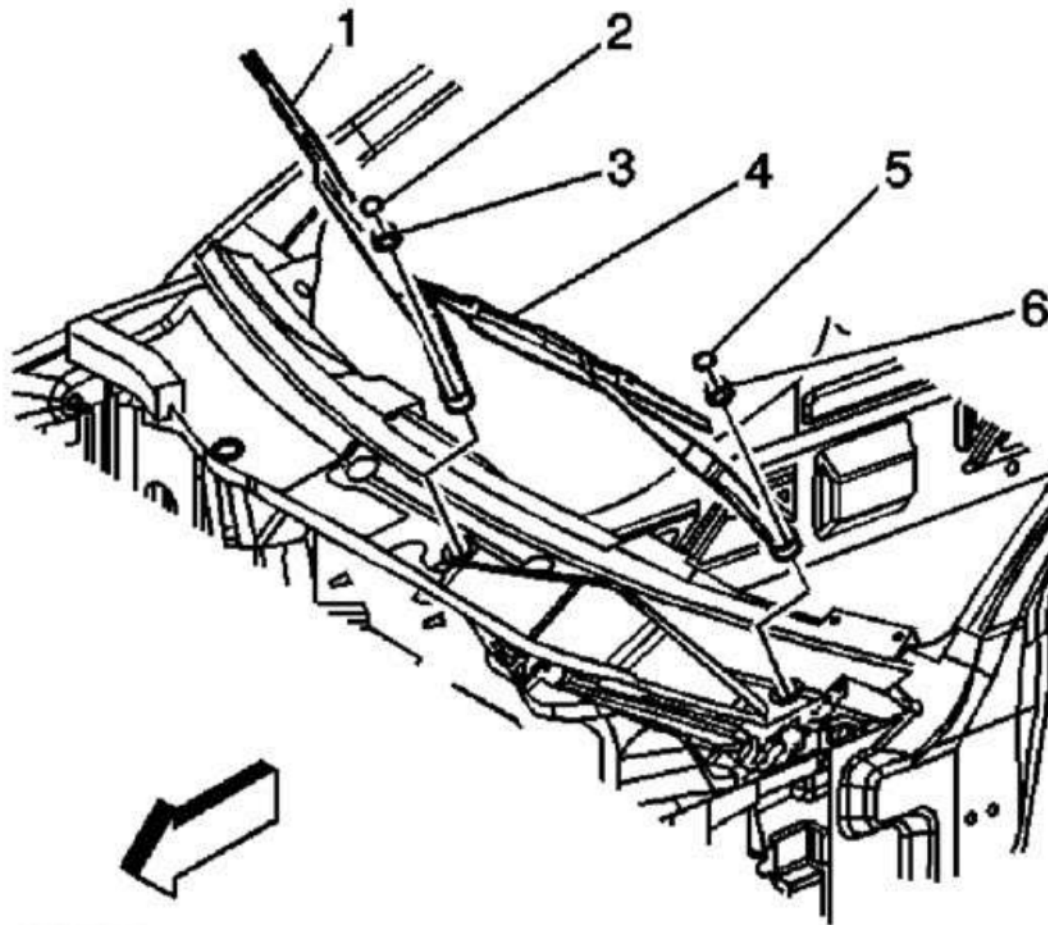

G00255874

Fig. 5: Removing/Installing Wiper Arms
Courtesy of GENERAL MOTORS CORP.

3. Remove the covers (2 & 5) from the wiper arm nuts (3 & 6). Remove the nut (3 & 6) from the wiper arm drive spindle.


NOTE: Apply pressure only at the end of the liftgate/hood assist rod that you are removing or attaching. DO NOT apply pressure to the middle of the rod because damage or bending will result.

4. Remove the upper hood assist rods from the assist rod ball studs (1) if removing the driver side wiper arm. See **Fig. 6**. Tilt the hood rearward to the air inlet grille panel. Support the hood assembly.

NOTE: Use the Wiper Arm Puller (J-39822) in order to remove the

wiper arm if the wiper arm fails to loosen from the wiper arm drive spindle.

5. Remove the wiper arm from the wiper arm drive spindle.

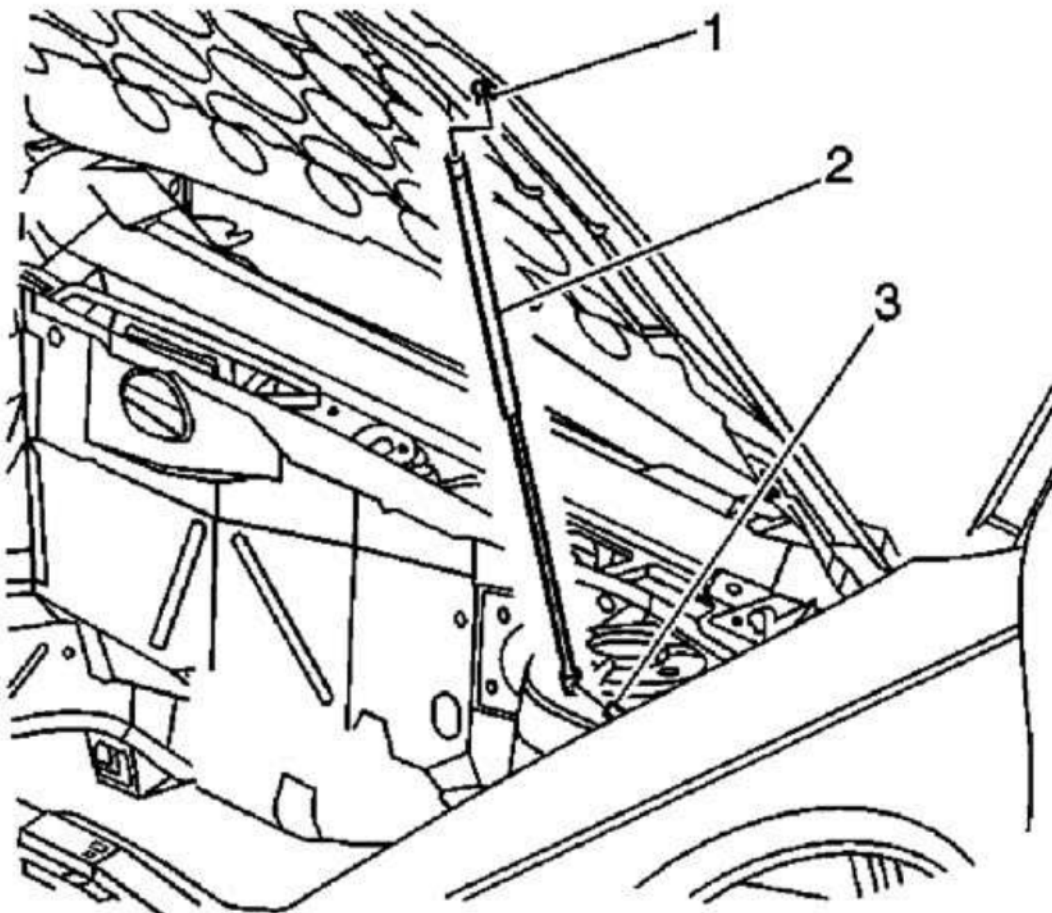

G00255875

Fig. 6: Removing/Installing Upper Hood Assist Rods
Courtesy of GENERAL MOTORS CORP.

Installation

1. Position the passenger side wiper arm so the wiper blade tip (1) aligns with the orange dot on the lower outer edge of the windshield.
2. Position the driver side wiper arm so that the wiper blade tip (4) aligns with the orange line on the lower center of the windshield. Install the wiper arm onto the wiper arm drive spindle.

NOTE: Hold the wiper arm into position while tightening the nut.

2004 Cadillac SRX

CABIN AIR FILTERS Passenger Compartment Air Filter - SRX

3. Install the nut (3 and 6) on the wiper arm. Tighten the nut to 26 Ft. Lbs. (35 N.m). Secure the upper hood assist rods onto the assist rod ball studs (1) located on the hood assembly. Install the wiper arm nut covers. Close the hood assembly.