


Rear right door , (L0L)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

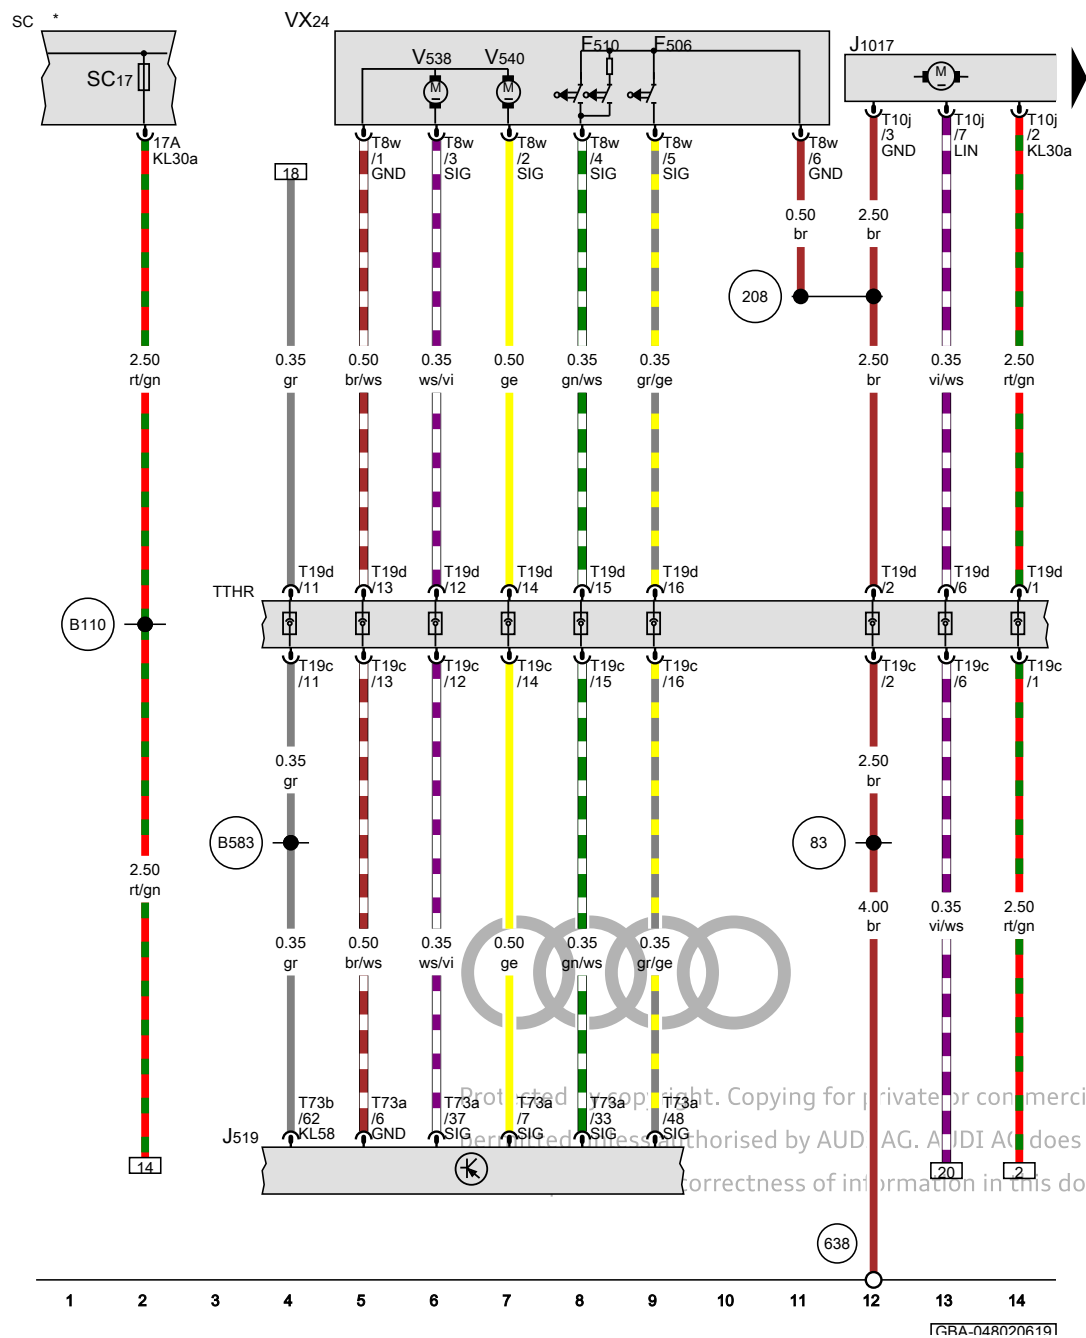


Onboard supply control unit, Control unit with rear passenger side window regulator motor, Fuse holder C, Rear right door lock unit

- | | |
|-------|--|
| F506 | Rear door contact switch, passenger side |
| F510 | Rear central locking actuator, passenger side |
| J519 | Onboard supply control unit |
| J1017 | Control unit with rear passenger side window regulator motor |
| SC | Fuse holder C |
| SC17 | Fuse 17 on fuse holder C |
| T8w | 8-pin connector, black |
| T10j | 10-pin connector, black |
| T19c | 19-pin connector, black |
| T19d | 19-pin connector, black |
| T73a | 73-pin connector, black |
| T73b | 73-pin connector, black |
| TTHR | Coupling point for rear right door |
| VX24 | Rear right door lock unit |
| V538 | Rear central locking SAFELOCK function motor, passenger side |
| V540 | Rear central locking motor, passenger side |

- 83 Earth connection 1, in front right wiring harness
- 208 Earth connection, in rear right door wiring harness
- 638 Earth point, on right A-pillar
- B110 Connection (30, window regulators), in interior wiring harness
- B583 Positive connection (58), in interior wiring harness
- * see applicable current flow diagram for fuses in interior

ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	purple
vi	=	purple
ge	=	yellow
or	=	orange
rs	=	pink

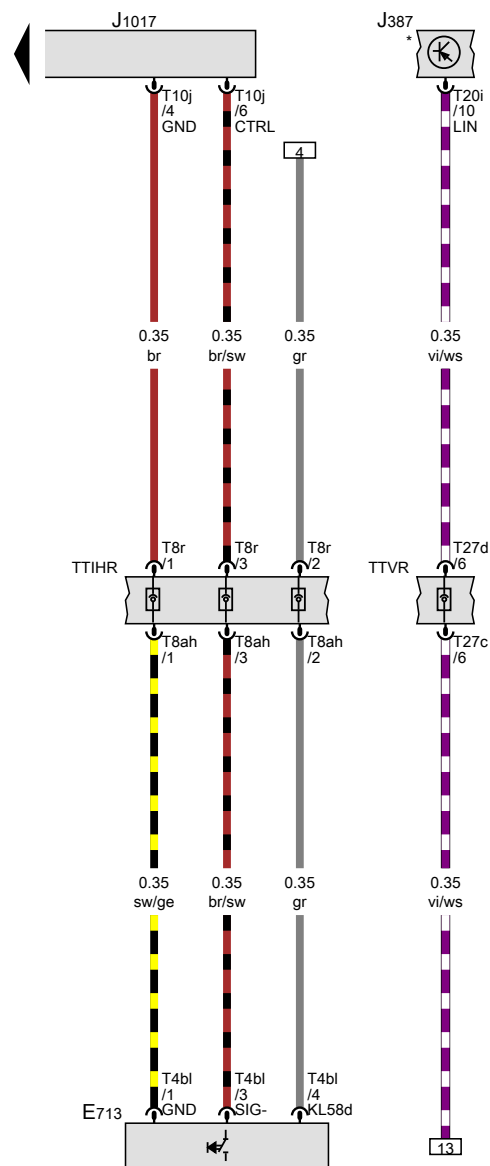

Front passenger door control unit, Control unit with rear passenger side window regulator motor

- E713 Rear passenger side window regulator button
- J387 Front passenger door control unit
- J1017 Control unit with rear passenger side window regulator motor
- T4bl 4-pin connector, black
- T8ah 8-pin connector, black
- T8r 8-pin connector, black
- T10j 10-pin connector, black
- T20i 20-pin connector, white
- T27c 27-pin connector, black
- T27d 27-pin connector, black
- TTIHR Coupling point in rear right door
- TTVR Coupling point for front right door
- * see applicable current flow diagram



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink