

## 2010 Cadillac SRX

2010 ACCESSORIES & EQUIPMENT Instrument Panel and Console Trim - SRX

### 2010 ACCESSORIES & EQUIPMENT INSTRUMENT

#### Instrument Panel and Console Trim - SRX


## SPECIFICATIONS

### FASTENER TIGHTENING SPECIFICATIONS

| Application                                                            | Specification |          |
|------------------------------------------------------------------------|---------------|----------|
|                                                                        | Metric        | English  |
| Brake Pedal Assembly to the Instrument Panel Tie Bar Bolts             | 21 N.m        | 15 lb ft |
| Front Floor Console Armrest Fasteners                                  | 2.5 N.m       | 22 lb in |
| Front Floor Console Compartment Upper Fastener                         | 2.5 N.m       | 22 lb in |
| Front Floor Console Compartment Door Lock Fasteners                    | 2.5 N.m       | 22 lb in |
| Front Floor Console Compartment Fastener                               | 2.5 N.m       | 22 lb in |
| Front Floor Console Cover Trim Plate Fasteners                         | 2.5 N.m       | 22 lb in |
| Front Floor Console Fastener                                           | 2.5 N.m       | 22 lb in |
| Front Floor Console Front Fasteners                                    | 9.5 N.m       | 84 lb in |
| Front Floor Console Lower Rear Trim Panel Fasteners                    | 2.5 N.m       | 22 lb in |
| Front Floor Console Rear Compartment Fasteners                         | 2.5 N.m       | 22 lb in |
| Front Floor Console Rear Fasteners                                     | N.m           | 53 lb in |
| Front Floor Console Trim Panel Fastener                                | 2.5 N.m       | 22 lb in |
| Front Floor Console Trim Plate Fastener                                | 2.5 N.m       | 22 lb in |
| Instrument Panel Center Compartment Fasteners                          | 2.5 N.m       | 22 lb in |
| Instrument Panel Cluster Trim Plate Fasteners                          | 2.5 N.m       | 22 lb in |
| Instrument Panel Compartment Door Compartment Fasteners                | 2.5 N.m       | 22 lb in |
| Instrument Panel Compartment Fasteners                                 | 2.5 N.m       | 22 lb in |
| Instrument Panel Drivers Knee Bolster Panel Fasteners                  | 2.5 N.m       | 22 lb in |
| Instrument Panel Drivers Knee Bolster Reinforcement Fasteners          | 9 N.m         | 80 lb in |
| Instrument Panel Inflatable Restraint to the Instrument Panel Assembly | 9 N.m         | 80 lb in |
| Instrument Panel Lower Trim Panel Fasteners                            | 2.5 N.m       | 22 lb in |
| Instrument Panel Lower Trim Panel Outer Filler Fastener                | 2.5 N.m       | 22 lb in |
| Instrument Panel Tie Bar to the Air Module Bolts                       | N.m           | 53 lb in |
| Instrument Panel Tie Bar to the Vehicle Bolts                          | 22 N.m        | 1 lb ft  |
| Instrument Panel Tie Bar to the Vehicle Nuts                           | 22 N.m        | 1 lb ft  |
| Instrument Panel to the Vehicle Bolt                                   | 2.5 N.m       | 22 lb in |
| Instrument Panel to the Vehicle Nuts                                   | 9 N.m         | 80 lb in |
| Instrument Panel Upper Trim Panel Fasteners                            | 2.5 N.m       | 22 lb in |

## R AIR INSTRUCTIONS

### INSTRUMENT PANEL INSULATOR PANEL REPLACEMENT - RIGHT SIDE

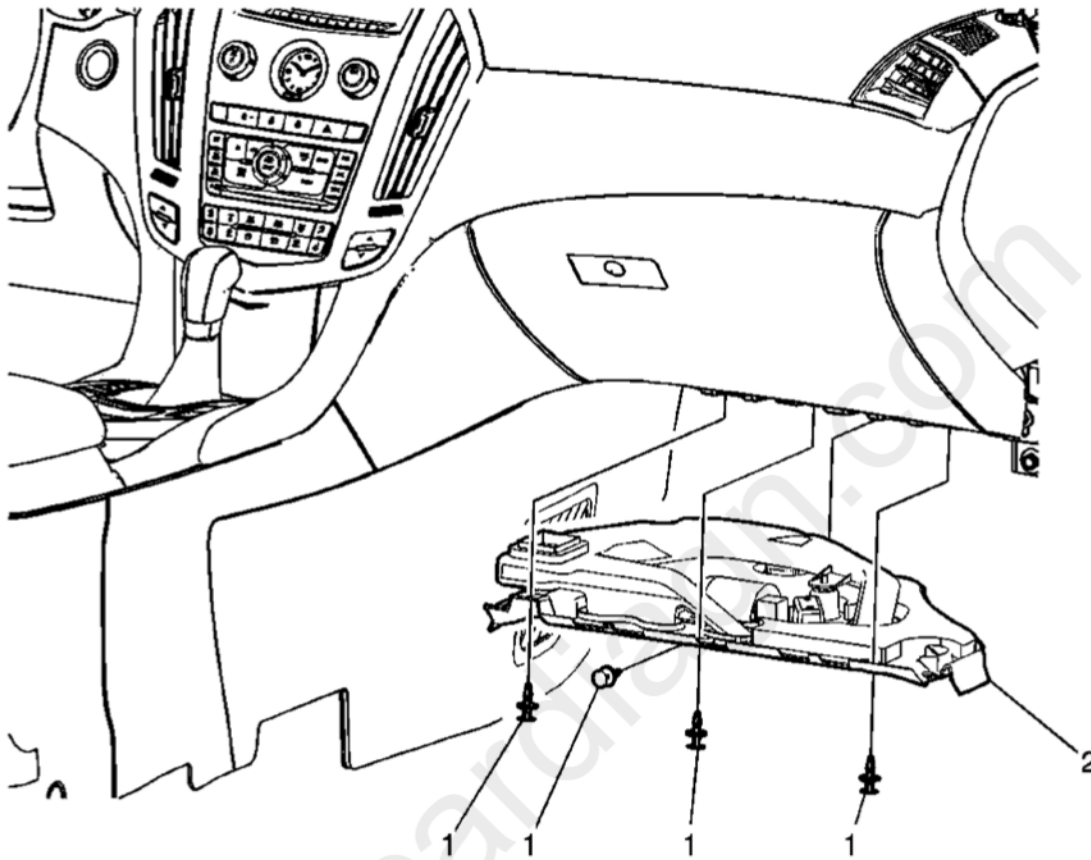


**Fig. : Identifying Instrument Panel Insulator Panel Fasteners - Right Side**  
Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Instrument Panel Insulator Panel Retainers (Qty: 4)                                                                                                                                                                                                                                                                                                                                                                                                   |
| 2       | Instrument Panel Insulator Panel Assembly<br><br><b>Procedure</b> <ol style="list-style-type: none"><li>1. Disconnect the electrical connections.</li><li>2. When replacing the instrument panel insulator panel, transfer all necessary components.</li><li>3. When reinstalling the instrument panel right insulator, ensure the tab located on the right edge of the insulator is engaged behind the right body hinge pillar trim panel.</li></ol> |

### INSTRUMENT PANEL INSULATOR PANEL REPLACEMENT - LEFT SIDE




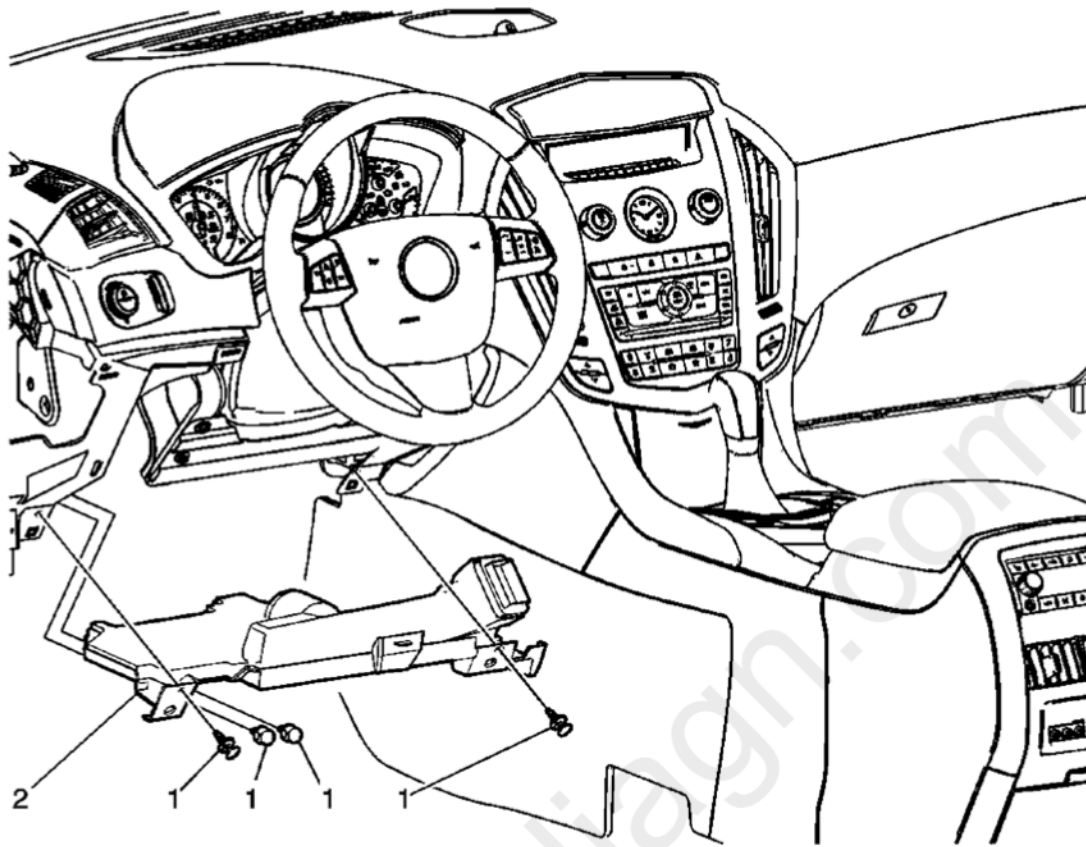

**Fig. : Identifying Instrument Panel Insulator Panel - Left Side**  
Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                         | Component Name                                                                                                                                                                                                   |
|---------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the drivers knee bolster panel. Refer to <b>Driver Knee Bolster Panel Replacement</b> . |                                                                                                                                                                                                                  |
| 1                                                                                                                               | Instrument Panel Insulator Panel Retainers (Qty: 4)                                                                                                                                                              |
| 2                                                                                                                               | Instrument Panel Insulator Panel Assembly<br><br><b>Procedure</b><br><br>1. Disconnect the electrical connections.<br>2. When replacing the instrument panel insulator panel, transfer all necessary components. |


## INSTRUMENT PANEL TRIM PANEL REPLACEMENT

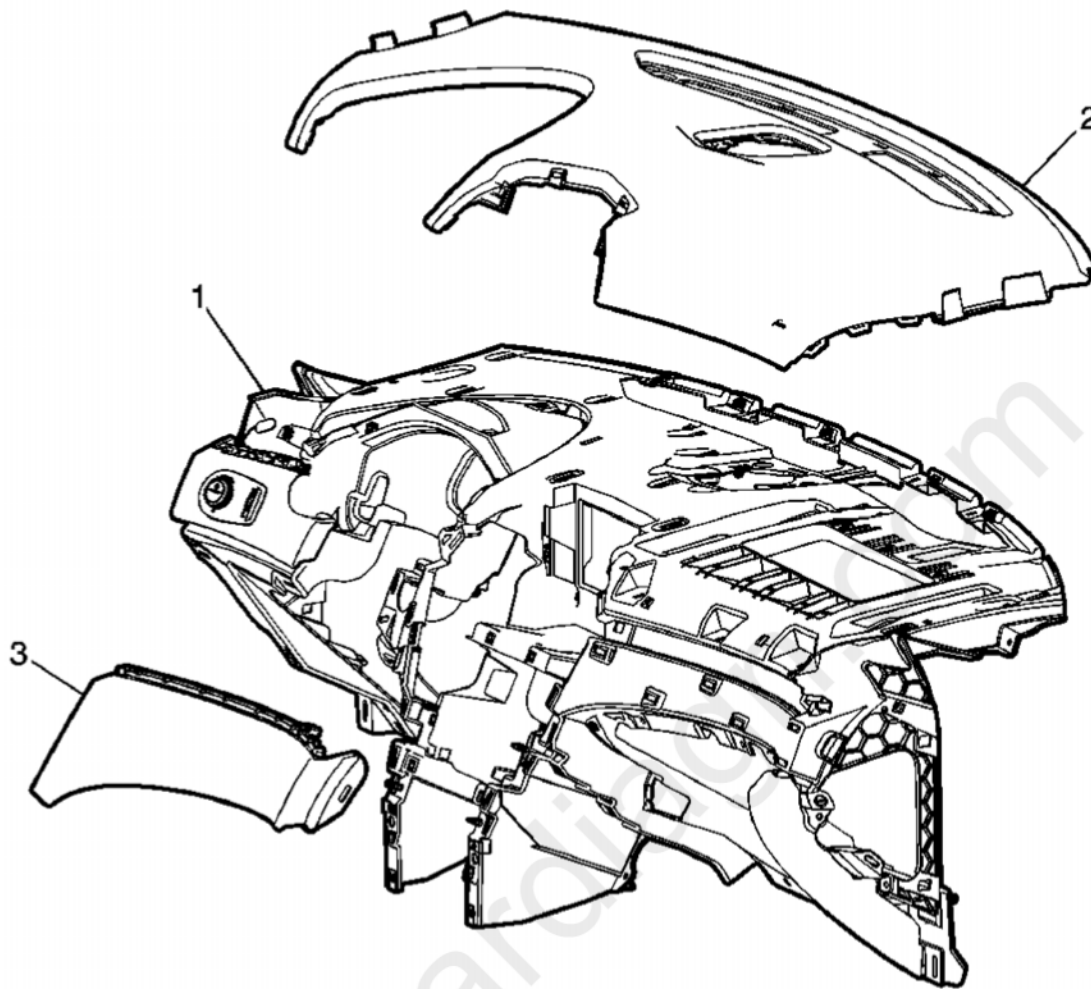

**Fig. : View Of Instrument Panel Trim Panel**  
 Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                                                                                                                                                                                                     |
|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Instrument Panel Assembly<br>Refer to <b><u>Instrument Panel Assembly Removal.</u></b>                                                                                                                                                                                                                                                                                             |
| 2       | Instrument Panel Upper Trim Panel<br>Refer to <b><u>Instrument Panel Upper Trim Panel Replacement.</u></b>                                                                                                                                                                                                                                                                         |
| 3       | Instrument Panel Trim Panel<br><br><b>Procedures</b> <ol style="list-style-type: none"> <li>1. Note location and routing of the instrument panel flood lamp electrical wires in order to ensure proper reinstallation.</li> <li>2. Disconnect the electrical connection.</li> <li>3. When replacing the instrument panel trim panel, transfer all necessary components.</li> </ol> |

## INSTRUMENT PANEL ACCESSORY SWITCH TRIM PANEL REPLACEMENT - LEFT SIDE

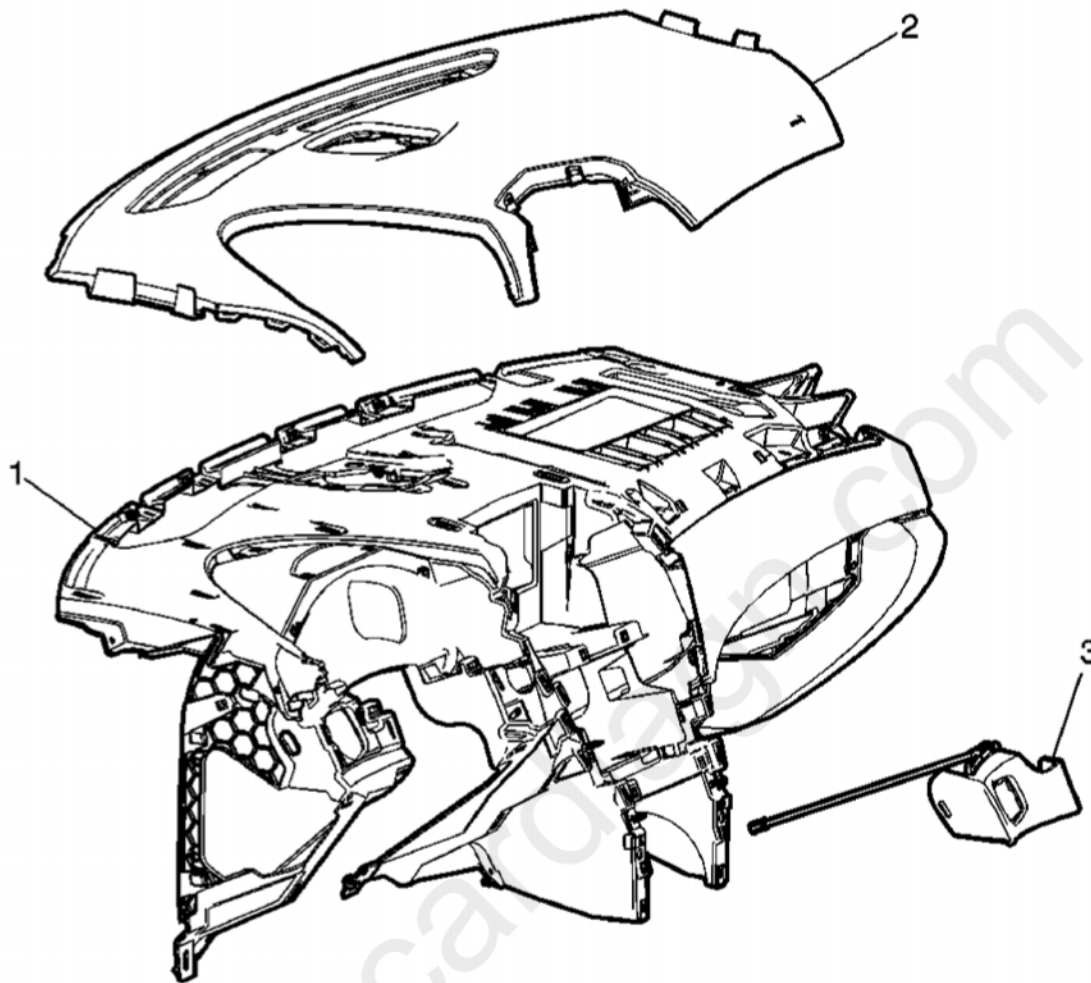


**Fig. : View Of Instrument Panel Accessory Switch Trim Panel - Left Side**  
Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                                                                      |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Instrument Panel Assembly<br>Refer to <b><u>Instrument Panel Assembly Removal</u></b> .                                                                                                                                                             |
| 2       | Instrument Panel Upper Trim Panel<br>Refer to <b><u>Instrument Panel Upper Trim Panel Replacement</u></b> .                                                                                                                                         |
| 3       | Instrument Panel Accessory Switch Trim Panel<br><br><b>Procedures</b><br><br>1. Note location and routing of the instrument panel flood lamp electrical wires in order to ensure proper reinstallation.<br>2. Disconnect the electrical connection. |

3. When replacing the instrument panel accessory switch panel, transfer all necessary components.


## INSTRUMENT PANEL ACCESSORY SWITCH TRIM PANEL REPLACEMENT - CENTER

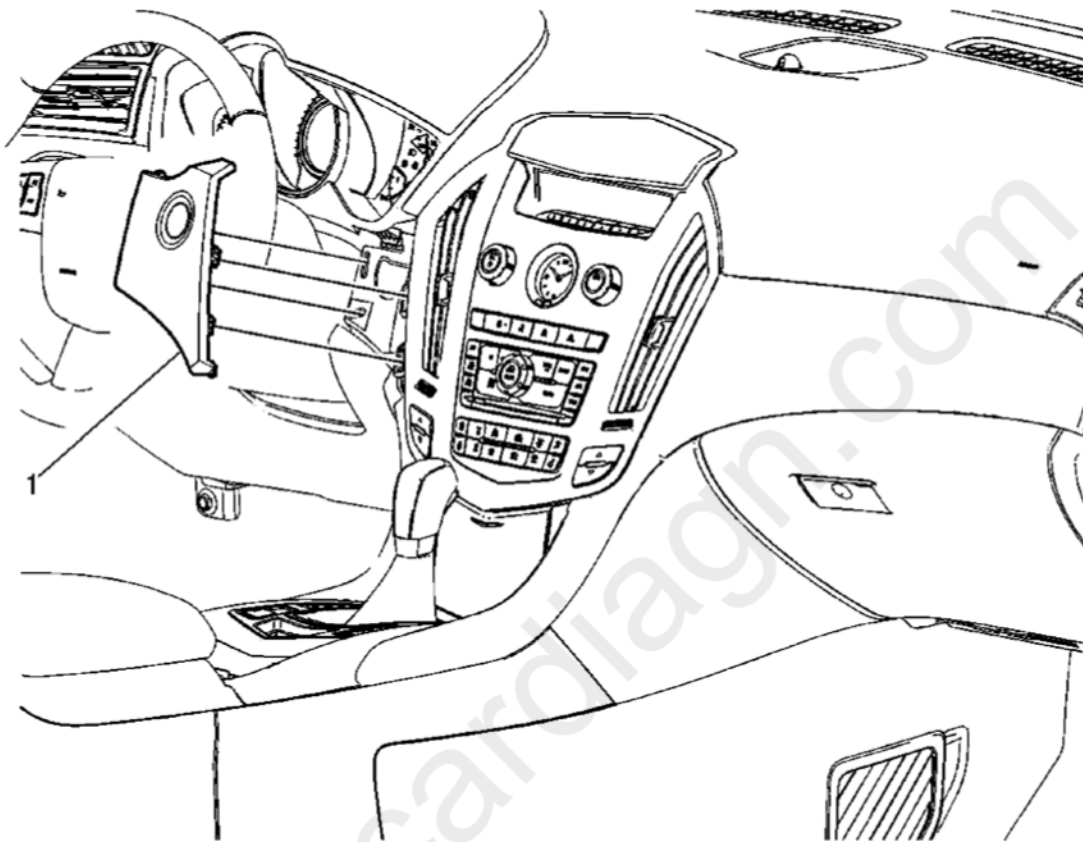

**Fig. 5: View Of Instrument Panel Accessory Switch Trim Panel - Center**  
Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | <p>Instrument Panel Accessory Trim Panel Assembly</p> <p><b>Procedures</b></p> <ol style="list-style-type: none"><li>1. Use a flat bladed plastic trim tool in order to release the retainer clips securing the accessory trim panel to the instrument panel assembly.</li><li>2. Disconnect the electrical connections.</li><li>3. When replacing the instrument panel accessory trim plate, transfer all necessary components.</li></ol> |


## DRIVER KNEE BOLSTER PANEL REPLACEMENT

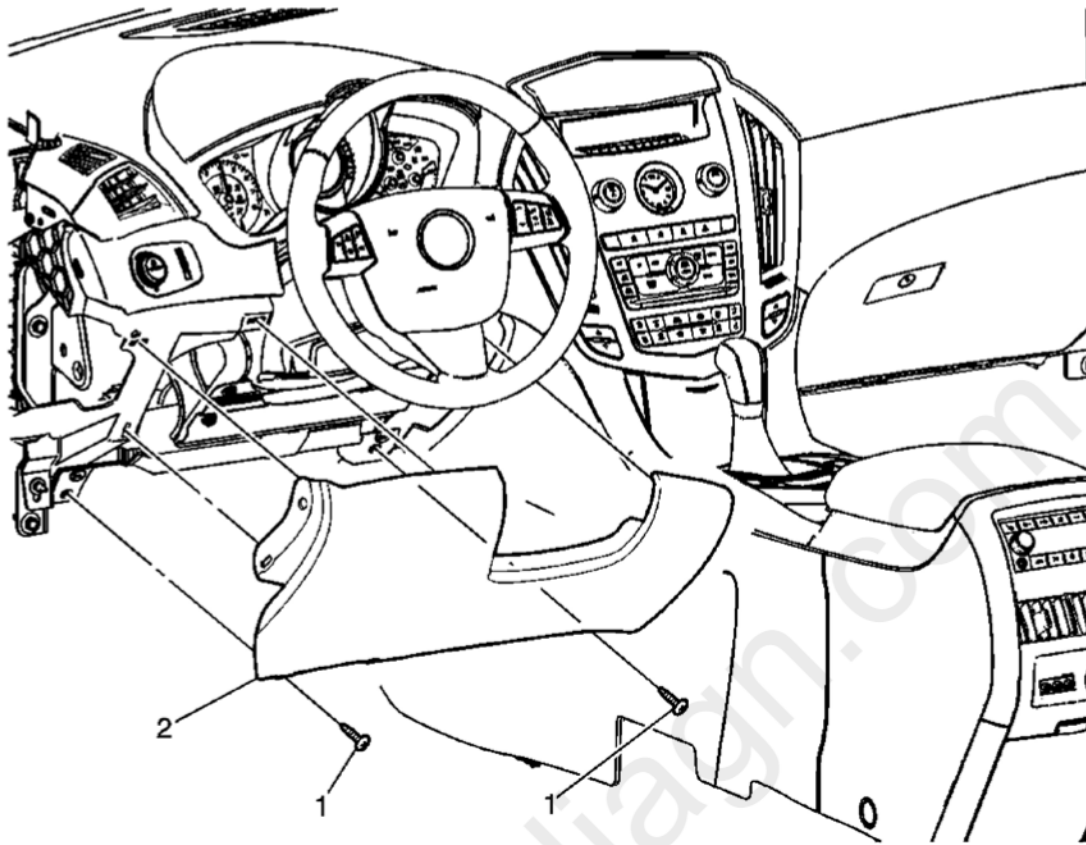

**Fig. 6: Identifying Driver Knee Bolster Panel**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                  | Component Name                                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the left instrument panel side trim panel. Refer to <u><b>Instrument Panel Side Trim Panel Replacement</b></u> . |                                                                                                                                                                                                                                                        |
| 1                                                                                                                                                        | Instrument Panel Drivers Knee Bolster Panel Fasteners (Qty: 2)<br><br><b>CAUTION:</b><br>Refer to <u><b>Fastener Caution</b></u> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in)                                                                           |
| 2                                                                                                                                                        | Instrument Panel Drivers Knee Bolster Panel Assembly<br><b>Procedure:</b><br>Grasp the instrument panel knee bolster panel and pull rearward releasing the retainer clips securing the instrument panel knee bolster to the instrument panel assembly. |

## DRIVER KNEE BOLSTER REINFORCEMENT REPLACEMENT

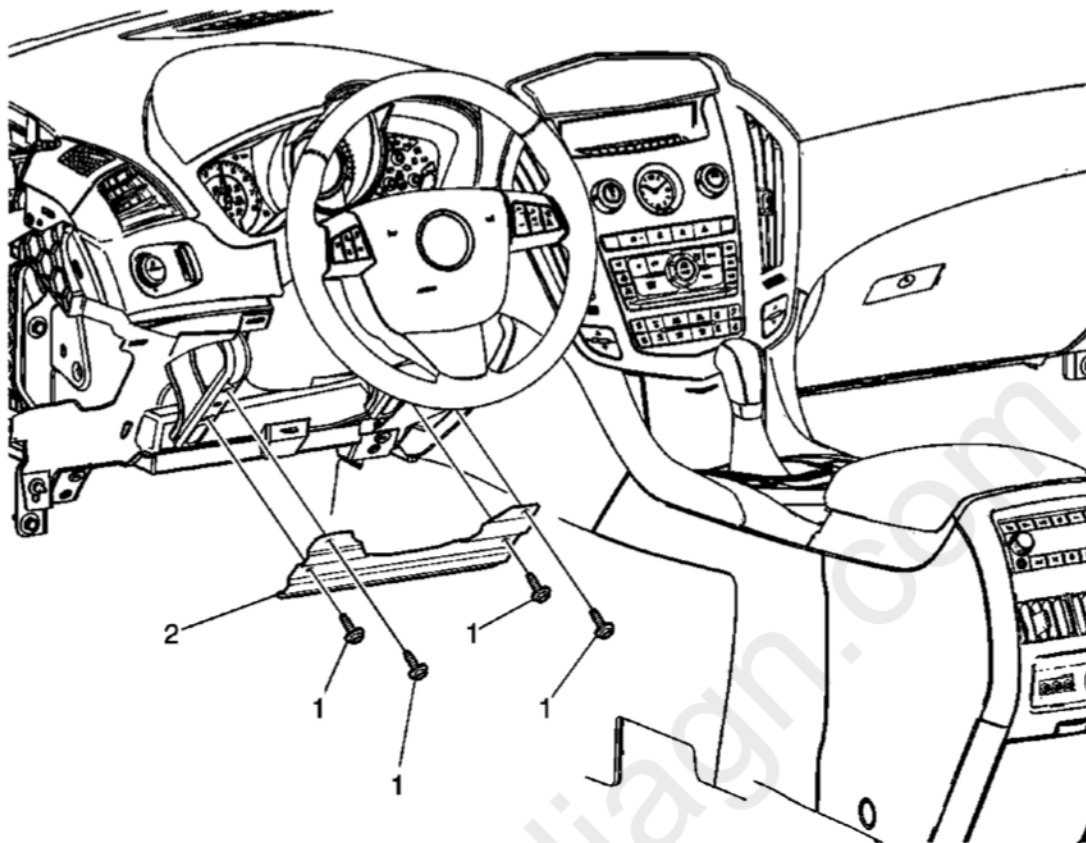


**Fig. 7: Identifying Driver Knee Bolster Reinforcement**  
Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                    | Component Name                                                                                                                                                                     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the instrument panel drivers knee bolster assembly. Refer to <b><u>Driver Knee Bolster Panel Replacement</u></b> . |                                                                                                                                                                                    |
| 1                                                                                                                                                          | Instrument Panel Drivers Knee Bolster Reinforcement Fasteners (Qty: 4)<br><br><b>CAUTION:</b><br>Refer to <b><u>Fastener Caution</u></b> .<br><br><b>Tighten:</b> 9 N.m (80 lb in) |
| 2                                                                                                                                                          | Instrument Panel Drivers Knee Bolster Reinforcement                                                                                                                                |

## INSTRUMENT PANEL SIDE TRIM PANEL REPLACEMENT

## 2010 Cadillac SRX

### 2010 ACCESSORIES & EQUIPMENT Instrument Panel and Console Trim - SRX

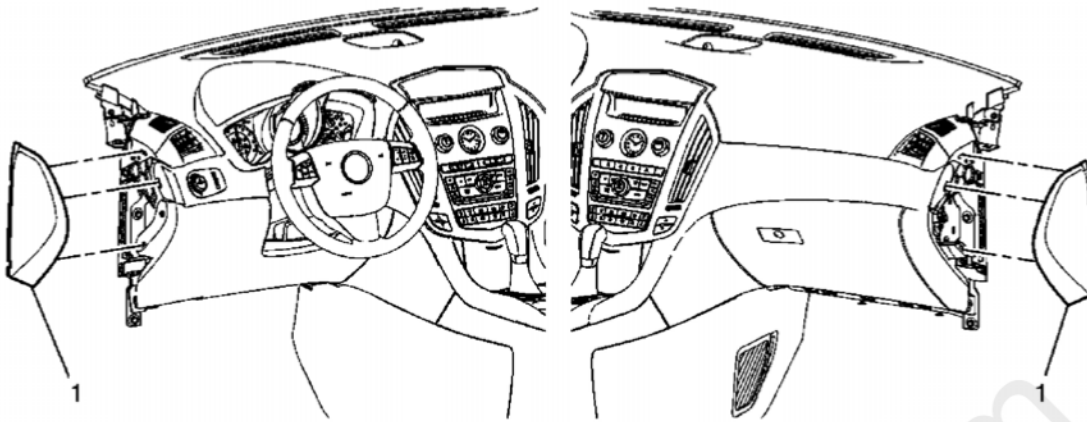


**Fig. 8: View Of Instrument Panel Side Trim Panel**

Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                                                               |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Instrument Panel Side Trim Panel Assembly (Right or Left)<br><b>Procedure:</b><br>Use a flat bladed plastic trim tool in order to release the retainer clips securing the instrument panel side trim panel to the instrument panel assembly. |


### INSTRUMENT PANEL UPPER TRIM PANEL REPLACEMENT

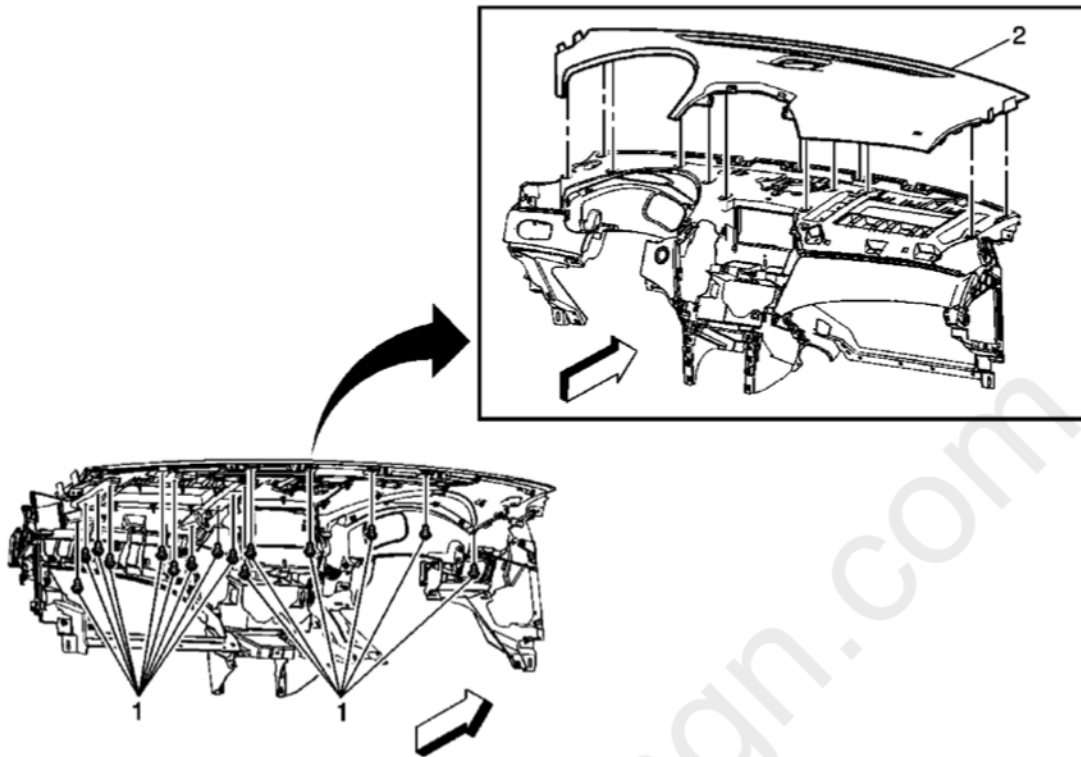

**Fig. 9: Identifying Instrument Panel Upper Trim Panel**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                                                                                                                                                                                                               | Component Name                                                                                                                                                                                                             |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure</b>                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                            |
| <ol style="list-style-type: none"> <li>1. Remove the instrument panel assembly from the vehicle. Refer to <b><u>Instrument Panel Assembly Removal</u></b>.</li> <li>2. Remove the windshield defroster nozzle duct. Refer to <b><u>Windshield Defroster Nozzle Duct Replacement</u></b>.</li> <li>3. Remove the instrument panel sound deadening material.</li> </ol> |                                                                                                                                                                                                                            |
| 1                                                                                                                                                                                                                                                                                                                                                                     | Instrument Panel Upper Trim Panel Fasteners (Qty: 17)<br><br><b>CAUTION:</b><br>Refer to <b><u>Fastener Caution</u></b> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in)                                                        |
| 2                                                                                                                                                                                                                                                                                                                                                                     | Instrument Panel Upper Trim Panel<br><b>Procedure:</b><br>Grasp the instrument panel upper trim panel and pull upward releasing the retainer clips securing the instrument panel upper trim panel to the carrier assembly. |




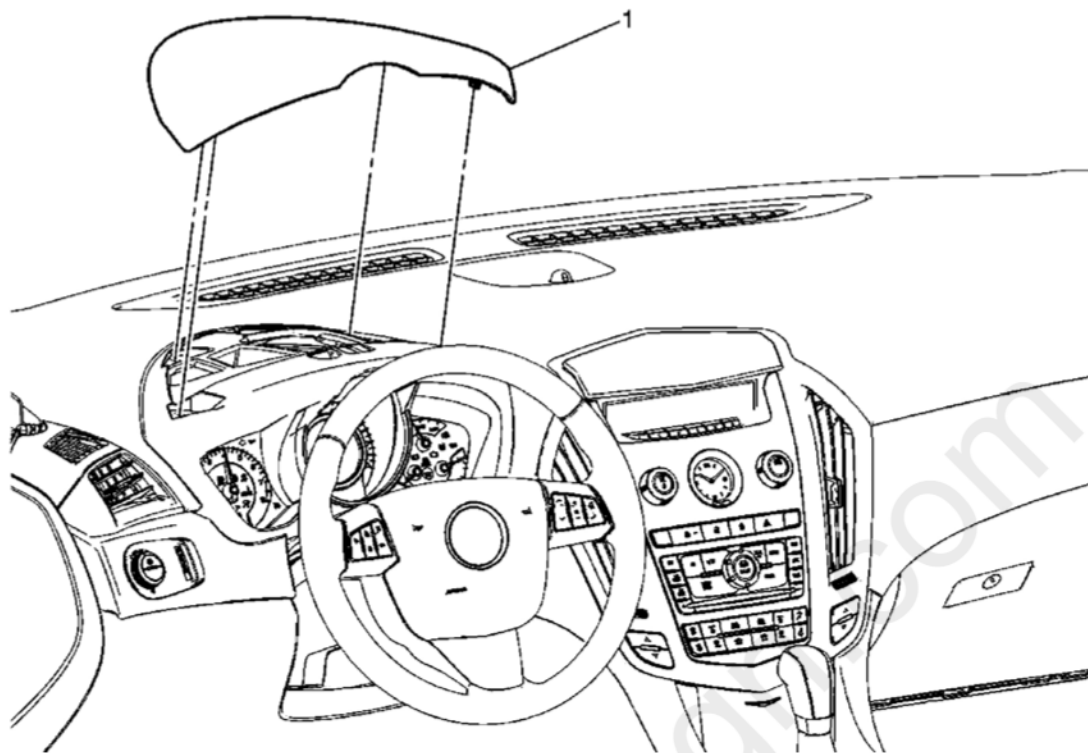

**Fig. 1 : View Of Instrument Panel Cluster Trim Plate Cover**  
Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                                    |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Instrument Panel Cluster Trim Plate Cover Assembly<br><b>Procedure:</b><br>Use a flat bladed plastic trim tool in order to release the retainer clips securing the cluster trim plate cover to the cluster bezel. |


## INSTRUMENT PANEL CLUSTER TRIM PLATE REPLACEMENT

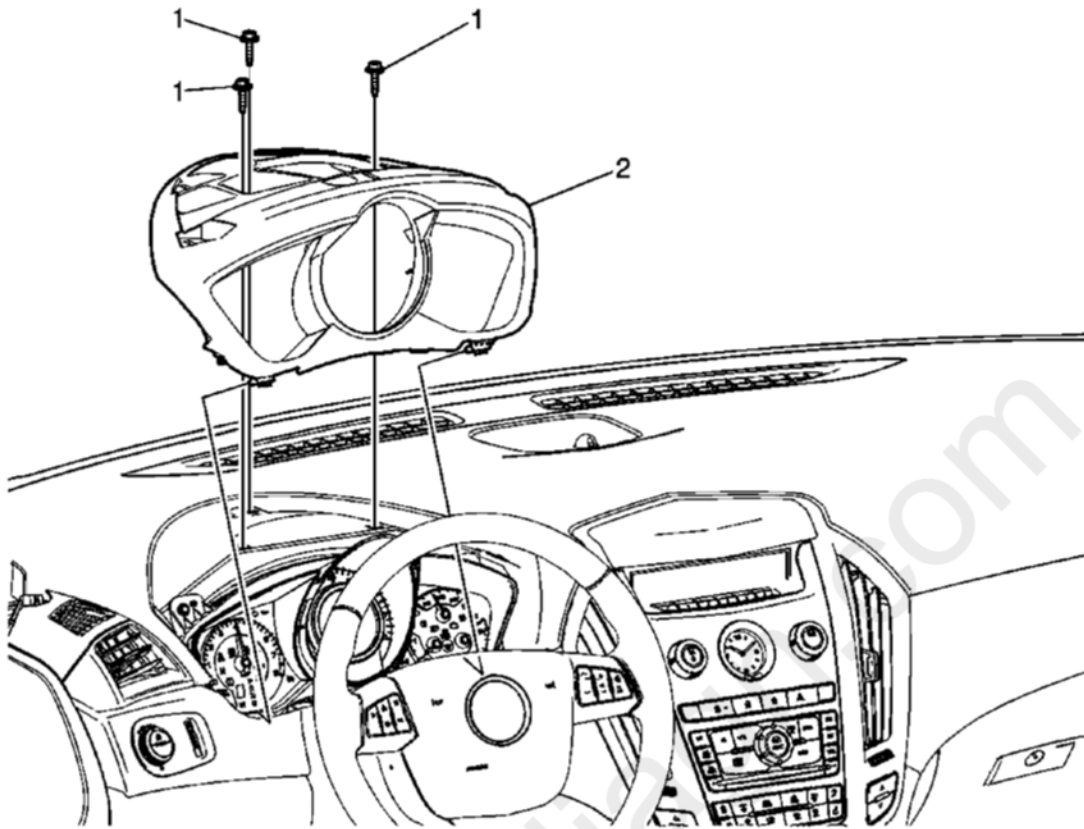

**Fig. 11: View Of Instrument Panel Cluster Trim Plate Fasteners**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                  | Component Name                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the instrument cluster trim plate cover. Refer to <u>Instrument Panel Cluster Trim Plate Cover Replacement</u> . |                                                                                                                                                                                                                                                                                                                                                                                                              |
| 1                                                                                                                                                        | Instrument Panel Cluster Trim Plate Fasteners (Qty: 3)<br><br><b>CAUTION:</b><br>Refer to <u>Fastener Caution</u> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in)                                                                                                                                                                                                                                                |
| 2                                                                                                                                                        | Instrument Panel Cluster Trim Plate Assembly<br><br><b>Procedure</b> <ol style="list-style-type: none"> <li>1. Use a flat bladed plastic trim tool in order to release the steering column upper trim panel seal retainers.</li> <li>2. Grasp the instrument panel cluster trim plate and pull rearward releasing the retainer clips securing the cluster panel to the instrument panel assembly.</li> </ol> |


## INSTRUMENT PANEL LOWER TRIM PANEL OUTER FILLER REPLACEMENT

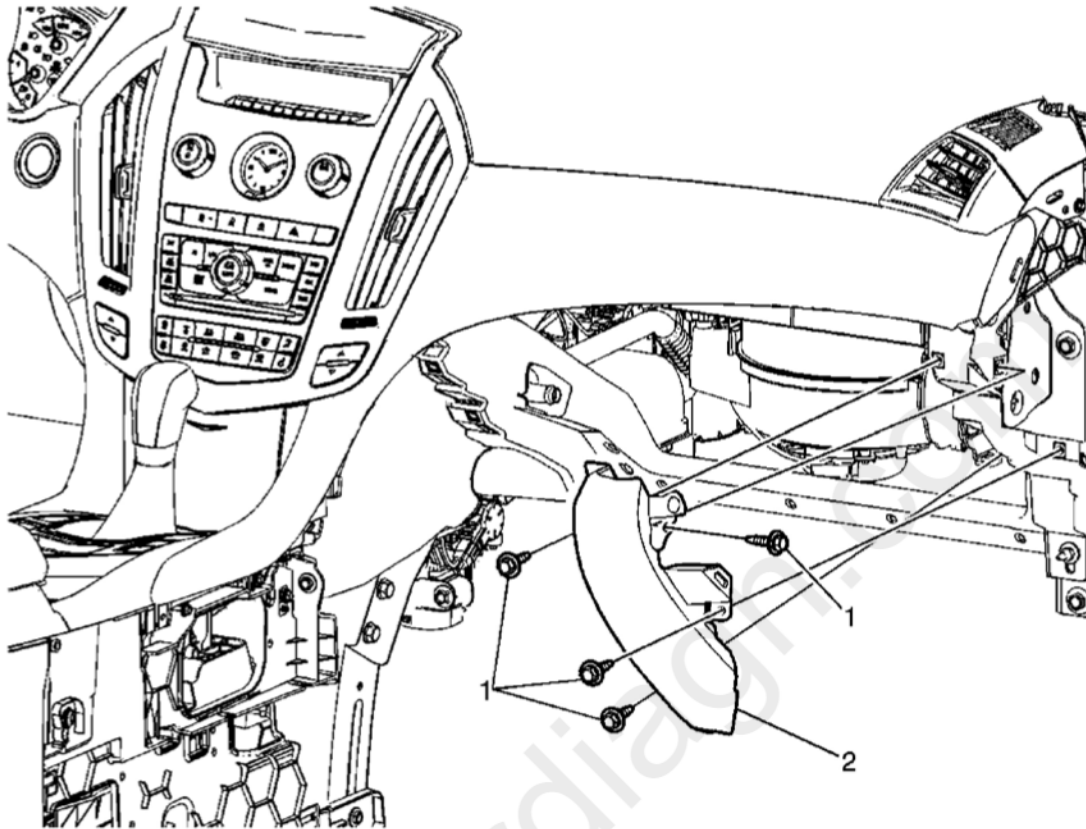

**Fig. 1 : Locating Instrument Panel Lower Trim Panel Outer Filler**  
Courtesy of GENERAL MOTORS CORP.


| Callout                                                                                                                     | Component Name                                                                                                                                                                 |
|-----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedures</b>                                                                                               |                                                                                                                                                                                |
| 1. Remove the right instrument panel side trim panel. Refer to <b><u>Instrument Panel Side Trim Panel Replacement</u></b> . |                                                                                                                                                                                |
| 2. Remove the instrument panel compartment assembly. Refer to <b><u>Instrument Panel Compartment Replacement</u></b> .      |                                                                                                                                                                                |
| 1                                                                                                                           | Instrument Panel Lower Trim Panel Outer Filler Fastener (Qty: 4)<br><br><b>CAUTION:</b><br>Refer to <b><u>Fastener Caution</u></b> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in) |
| 2                                                                                                                           | Instrument Panel Lower Trim Panel Outer Filler Assembly                                                                                                                        |

## INSTRUMENT PANEL LOWER TRIM PANEL REPLACEMENT - LEFT SIDE

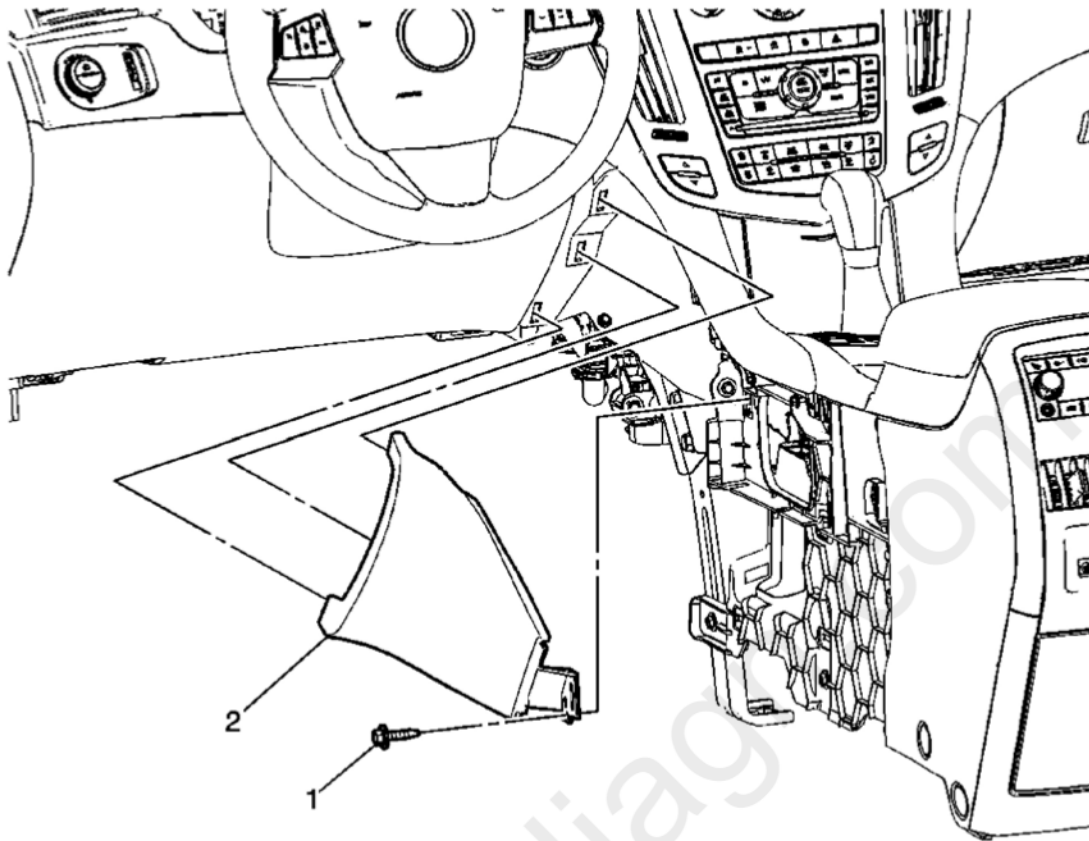


**Fig. 1 : View Of Instrument Panel Lower Trim Panel - Left Side**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                                                                                                                                                                                                                  | Component Name                                                                                                                                                                                                       |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Use a flat bladed plastic trim tool and release the retainer clips securing the front forward edge of the left front floor console e tension enough to access the instrument panel lower trim panel fastener. Do NO remove the complete front floor console e tension panel, only release the retainer clips securing the forward edge. |                                                                                                                                                                                                                      |
| 1                                                                                                                                                                                                                                                                                                                                                                        | Instrument Panel Lower Trim Panel Fastener<br><br><b>CAUTION:</b><br><b>Refer to <u>Fastener Caution</u> .</b><br><br><b>Tighten:</b> 2.5 N.m (22 lb in)                                                             |
| 2                                                                                                                                                                                                                                                                                                                                                                        | Instrument Panel Lower Trim Panel Assembly<br><b>Procedure:</b><br>Grasp the instrument panel lower trim panel and pull rearward disengaging the retainer clips securing the panel to the instrument panel assembly. |

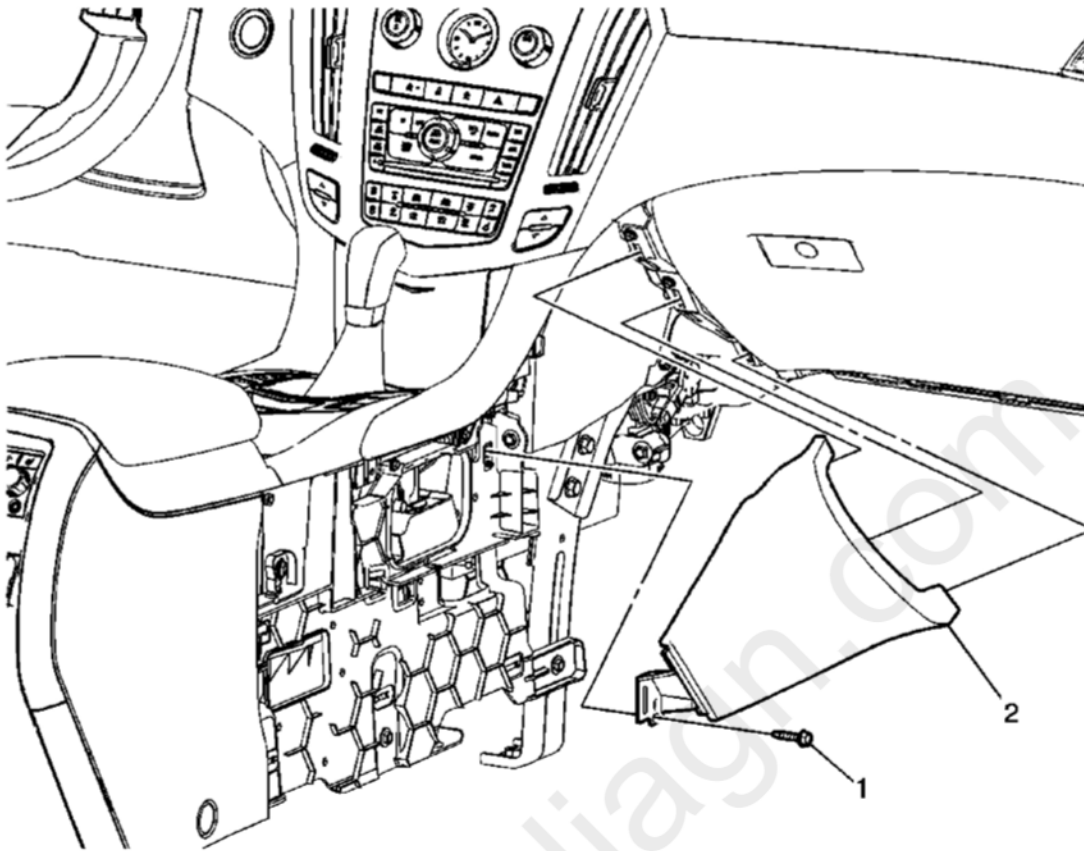

**Fig. 1 : Identifying Instrument Panel Lower Trim Panel - Right Side**  
 Courtesy of GENERAL MOTORS CORP.


| Callout                                                                                                                                                                                                                                                                                                                                                                  | Component Name                                                                                                                                                                                                     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Use a flat bladed plastic trim tool and release the retainer clips securing the front forward edge of the left front floor console e tension enough to access the instrument panel lower trim panel fastener. Do NO remove the complete front floor console e tension panel, only release the retainer clips securing the forward edge. |                                                                                                                                                                                                                    |
| 1                                                                                                                                                                                                                                                                                                                                                                        | Instrument Panel ower rim Panel Fasteners (Qty: 2)<br><br><b>CAUTION:</b><br>Refer to <u>Fastener Caution</u> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in)                                                          |
| 2                                                                                                                                                                                                                                                                                                                                                                        | Instrument Panel ower rim Panel Assembly<br><b>Procedure:</b><br>Grasp the instrument panel lower trim panel and pull rearward disengaging the retainer clips securing the panel to the instrument panel assembly. |

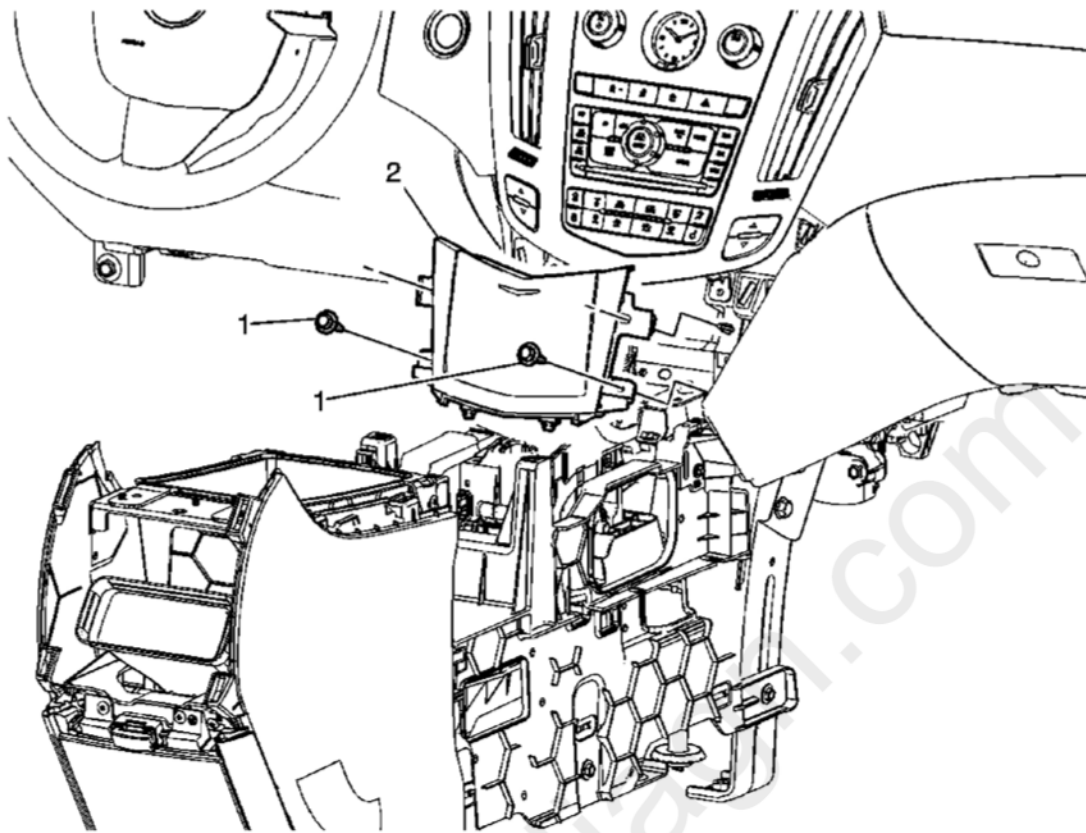

**Fig. 15: View Of Instrument Panel Center Compartment**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                  | Component Name                                                                                                                                                                                                                                                                                                                                       |
|------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the front floor console trim plate. Refer to <b>Front Floor Console Trim Plate Replacement</b> . |                                                                                                                                                                                                                                                                                                                                                      |
| 1                                                                                                                                        | Instrument Panel Center Compartment Fasteners (Qty: 2)<br><br><b>CAUTION:</b><br>Refer to <b>Fastener Caution</b> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in)                                                                                                                                                                                        |
| 2                                                                                                                                        | Instrument Panel Center Compartment Assembly<br><br><b>Procedures</b> <ol style="list-style-type: none"> <li>1. Grasp the instrument panel center compartment and pull rearward releasing the retainer clips securing the compartment to the instrument panel assembly.</li> <li>2. Disconnect the electrical connections, if applicable.</li> </ol> |

## INSTRUMENT PANEL COMPARTMENT REPLACEMENT

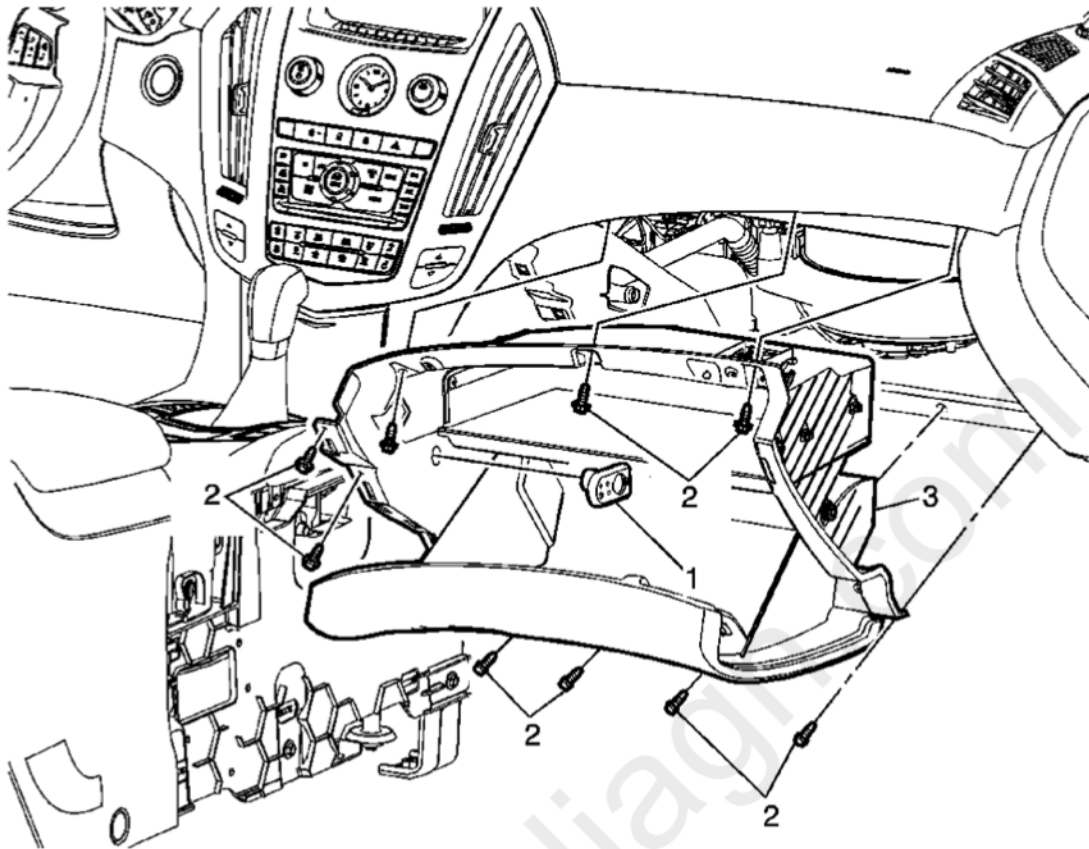


**Fig. 16: View Of Instrument Panel Compartment**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                                                                                                                                                                                                                                                            | Component Name                                                                                                                                                               |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedures</b>                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                                                                                              |
| 1. Remove the right instrument panel insulator panel. Refer to <u><b>Instrument Panel Insulator Panel Replacement - Right Side.</b></u><br>2. Remove the right instrument panel side trim panel. Refer to <u><b>Instrument Panel Side Trim Panel Replacement.</b></u><br>3. Remove the right instrument panel lower trim panel. Refer to <u><b>Instrument Panel Lower Trim Panel Replacement - Right Side.</b></u> |                                                                                                                                                                              |
| 1                                                                                                                                                                                                                                                                                                                                                                                                                  | Instrument Panel Compartment Air Outlet<br><b>Procedure:</b><br>Use a flat bladed plastic trim tool in order to release the outlet assembly from the instrument compartment. |
| 2                                                                                                                                                                                                                                                                                                                                                                                                                  | Instrument Panel Compartment Fasteners (Qty: 9)<br><b>CAUTION:</b><br>Refer to <u><b>Fastener Caution .</b></u>                                                              |

|   |                                                                                                                                                                                                                                                                         |
|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <b>Tighten:</b> 2.5 N.m (22 lb in)                                                                                                                                                                                                                                      |
| 3 | <b>Instrument Panel Compartment Assembly</b><br><br><b>Procedures</b> <ol style="list-style-type: none"><li>1. Disconnect the electrical connections.</li><li>2. When replacing the instrument panel compartment assembly, transfer all necessary components.</li></ol> |

## INSTRUMENT PANEL COMPARTMENT DOOR REPLACEMENT

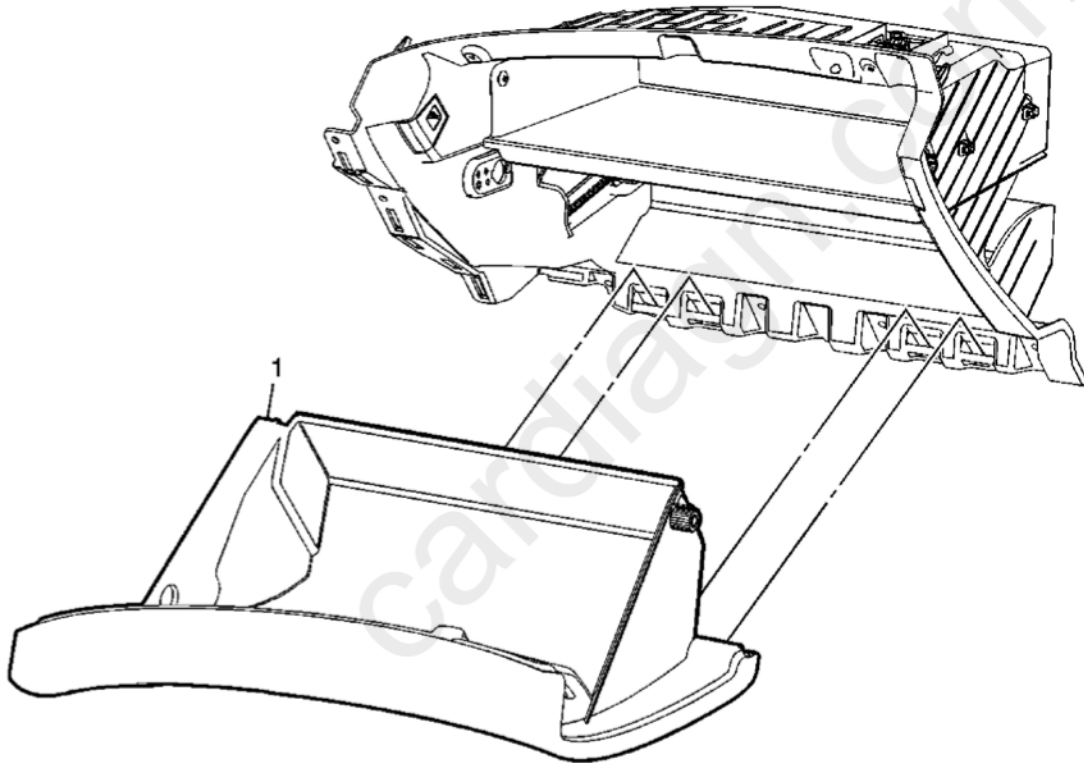

**Fig. 17: View Of Instrument Panel Compartment Door**  
Courtesy of GENERAL MOTORS CORP.

| Callout                       | Component Name                                                                                                                                                                                                                                                   |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedures</b> |                                                                                                                                                                                                                                                                  |
| 1.                            | Remove the instrument panel compartment assembly. Refer to <b><u>Instrument Panel Compartment Replacement</u></b> .                                                                                                                                              |
| 2.                            | Remove the instrument panel compartment door dampener assembly. Refer to <b><u>Instrument Panel Compartment Door Dampener Replacement (Lower Compartment)</u></b> or <b><u>Instrument Panel Compartment Door Dampener Replacement (Center Compartment)</u></b> . |




1

Instrument Panel Compartment Door Assembly

**Procedure:**

Unsnap the instrument panel compartment door assembly from the instrument compartment door opening frame assembly.

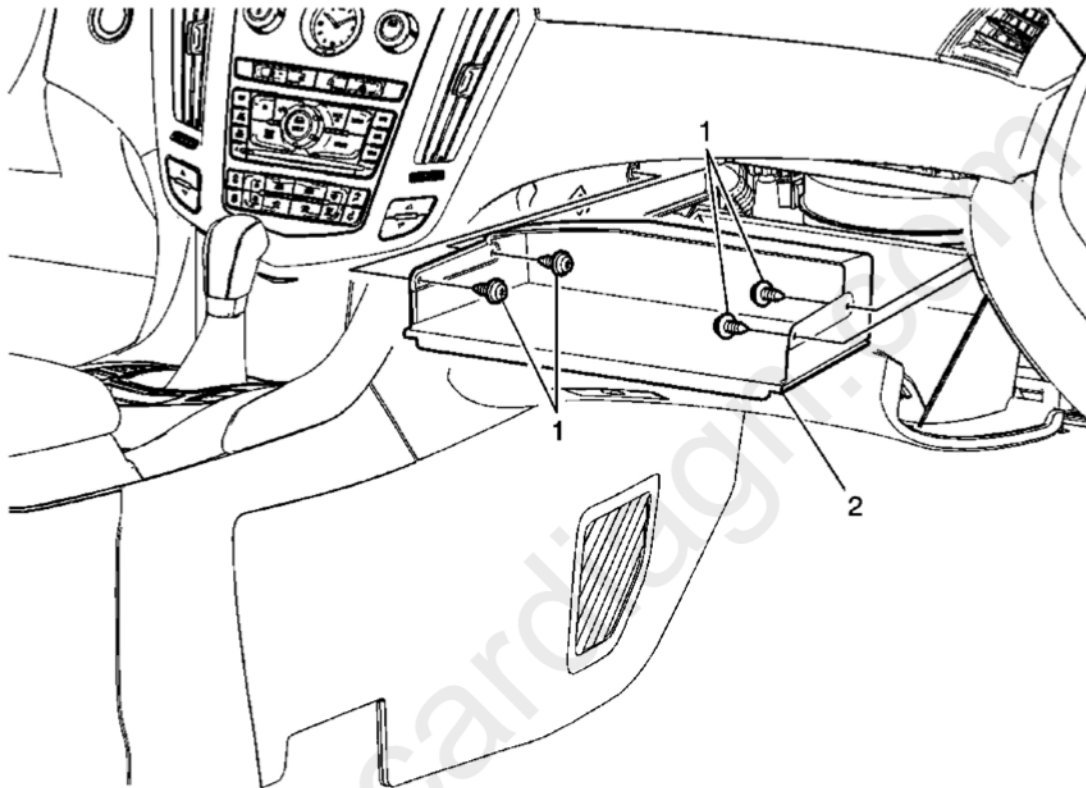**INSTRUMENT PANEL COMPARTMENT DOOR COMPARTMENT REPLACEMENT**


**Fig. 18: View Of Instrument Panel Compartment Door Compartment**  
Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                 |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Instrument Panel Compartment Door Compartment Fasteners (Qty: 4)<br><br><b>CAUTION:</b><br><b>Refer to <u>Fastener Caution</u> .</b><br><br><b>Tighten:</b> 2.5 N.m (22 lb in) |
| 2       | Instrument Panel Compartment Door Compartment Assembly                                                                                                                         |

**INSTRUMENT PANEL COMPARTMENT DOOR OPENING FRAME (LOWER COMPARTMENT)**

## 2010 Cadillac SRX

### 2010 ACCESSORIES & EQUIPMENT Instrument Panel and Console Trim - SRX

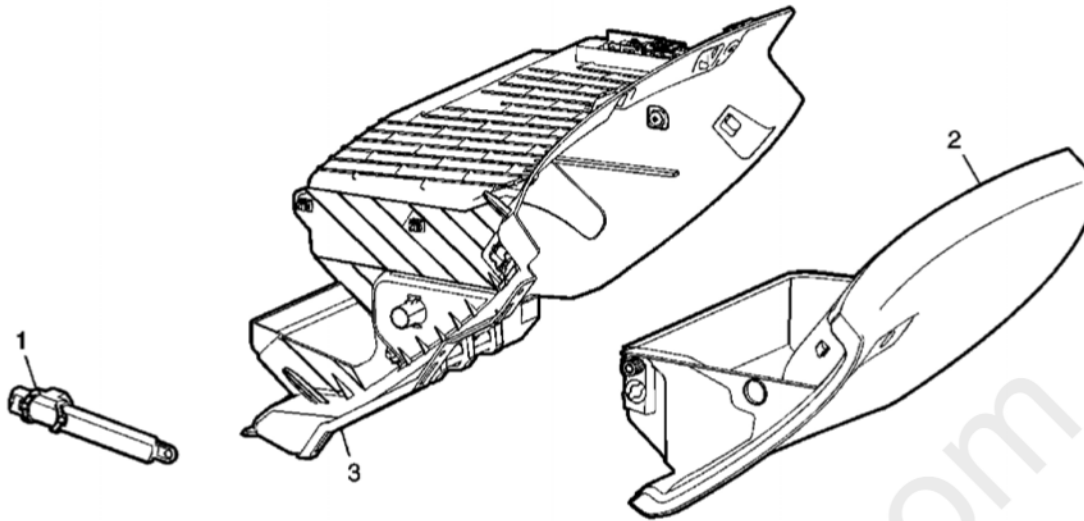


**Fig. 19: View Of Instrument Panel Compartment Door Opening Frame Replacement (Lower Compartment)**

Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                                                                          |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Instrument Panel Compartment Door Dampener Assembly<br>Refer to <b><u>Instrument Panel Compartment Door Dampener Replacement (Lower Compartment)</u></b> or <b><u>Instrument Panel Compartment Door Dampener Replacement (Center Compartment)</u></b> . |
| 2       | Instrument Panel Compartment Door Assembly<br>Refer to <b><u>Instrument Panel Compartment Door Replacement</u></b> .                                                                                                                                    |
| 3       | Instrument Panel Compartment Door Opening Frame<br><b>Procedure:</b><br>When replacing the instrument panel compartment door opening frame assembly, transfer all necessary components.                                                                 |


### INSTRUMENT PANEL COMPARTMENT DOOR OPENING FRAME REPLACEMENT (CENTER COMPARTMENT)

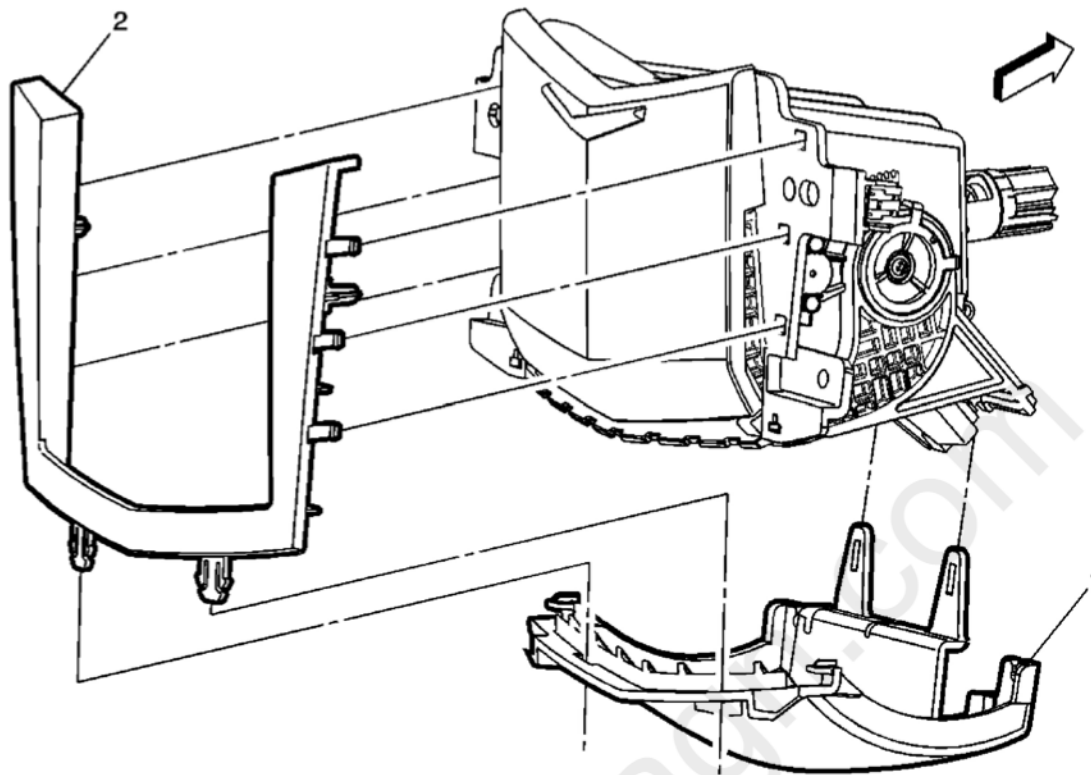

**Fig. 2 : Identifying Instrument Panel Center Compartment Door Opening Frame (Center Compartment)**  
Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                             | Component Name                                                                                                                                                                     |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedures:</b><br>Remove the instrument panel center compartment assembly. Refer to <b><u>Instrument Panel Center Compartment Replacement</u></b> . |                                                                                                                                                                                    |
| 1                                                                                                                                                                   | Coin Catcher cover in                                                                                                                                                              |
| 2                                                                                                                                                                   | Instrument Panel Center Compartment Door opening Frame<br><b>Procedure:</b><br>ently release the si securing tabs securing the compartment door frame to the compartment assembly. |

## INSTRUMENT PANEL COMPARTMENT DOOR LATCH REPLACEMENT

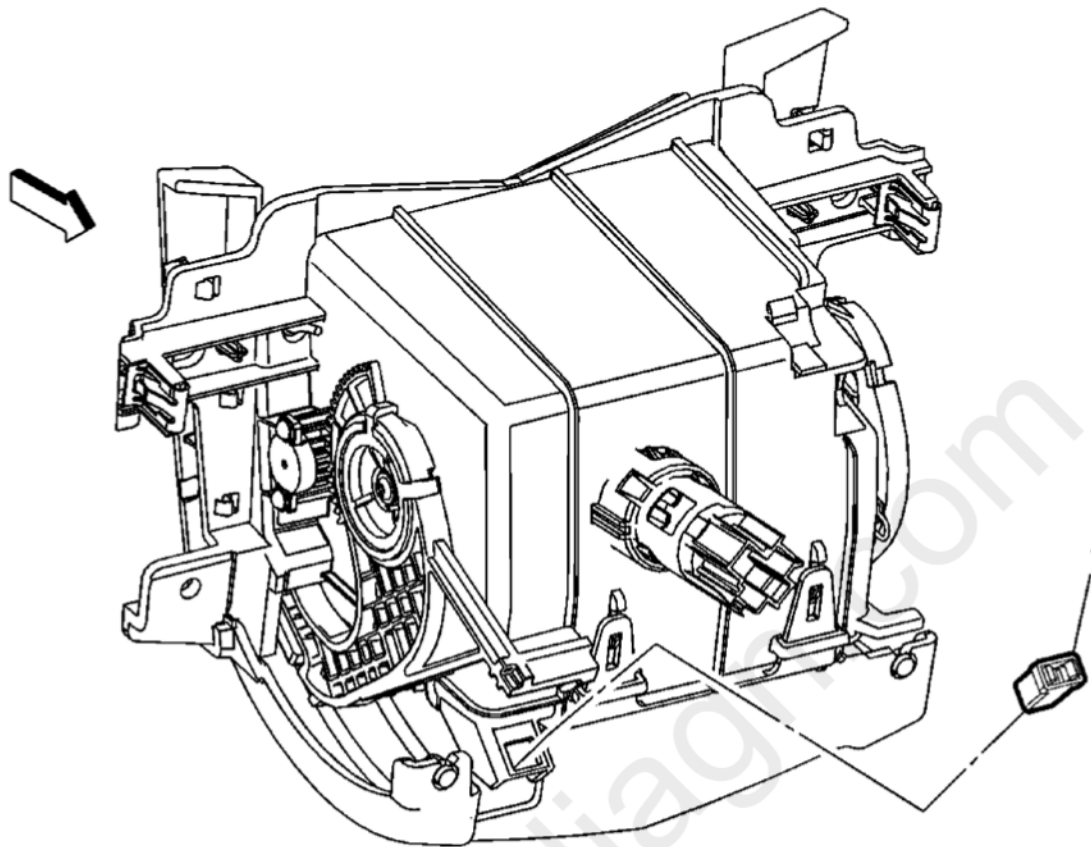


**Fig. 2 : Locating Instrument Panel Compartment Door Latch**  
Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                             | Component Name                                                                                                                                                                                                                                          |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedures:</b><br>Remove the instrument panel center compartment assembly. Refer to <b><u>Instrument Panel Center Compartment Replacement</u></b> . |                                                                                                                                                                                                                                                         |
| 1                                                                                                                                                                   | Instrument Panel Center Compartment Door Latch<br><br><b>Procedure</b><br><br>1. Open the compartment door assembly.<br>2. Squeeze the tabs securing the latch to the compartment assembly and push the latch outward removing it from the compartment. |

## INSTRUMENT PANEL COMPARTMENT DOOR LOCK CYLINDER REPLACEMENT


### Removal Procedure

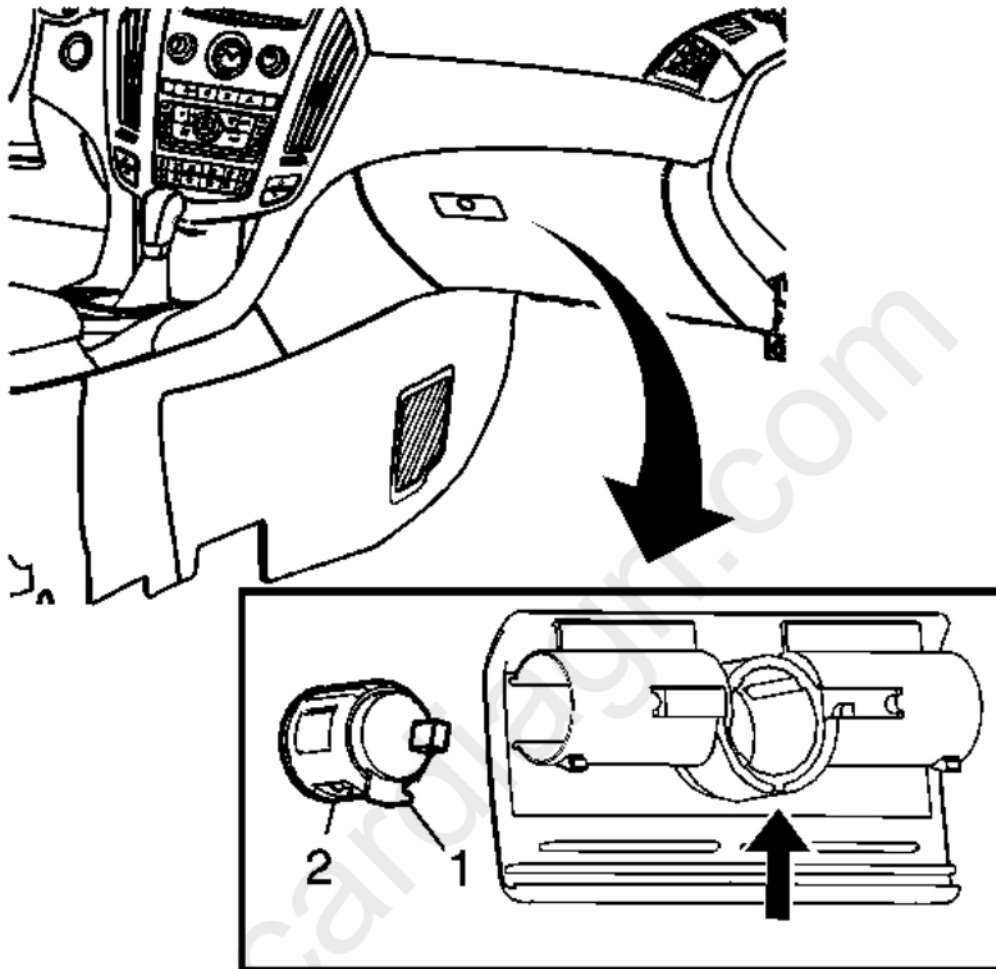

**Fig. 22: Identifying Instrument Panel Compartment Door Lock Cylinder**  
 Courtesy of GENERAL MOTORS CORP.

1. Lift up on the instrument panel compartment door latch.
2. Use a suitable tool and depress the retaining tumbler (1) through the access hole indicated.
3. With the retaining tumbler (1) depressed, remove the instrument panel compartment door lock cylinder (2) from the instrument panel compartment door latch assembly.


#### Installation Procedure

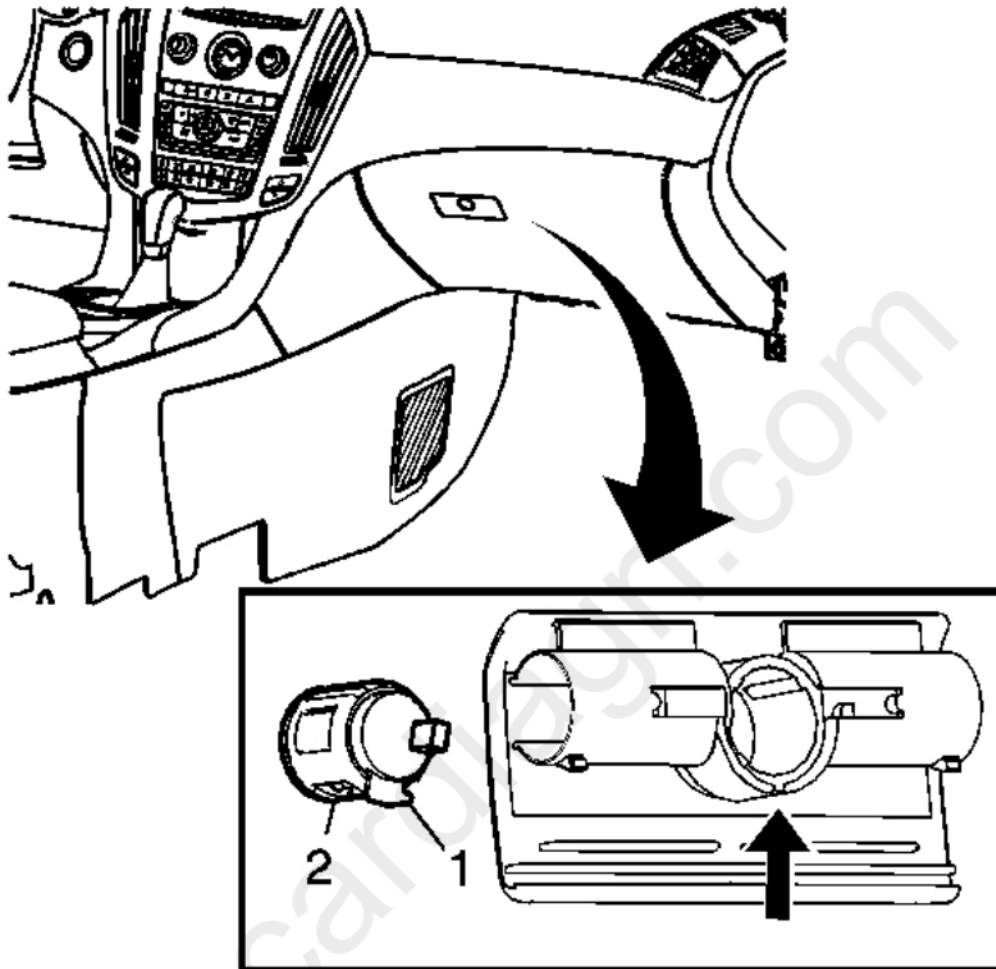

**Fig. 23: Identifying Instrument Panel Compartment Door Loc Cylinder**  
 Courtesy of GENERAL MOTORS CORP.

1. Position the instrument panel compartment door loc cylinder (2) to the opening in the compartment door latch while depressing the retainer tumbler (1).
2. Insert the instrument panel door loc cylinder (2) fully into the latch assembly.
3. An audible clic should be heard when the door loc cylinder (2) is fully seated into the latch assembly.
4. Ensure proper operation of the instrument panel compartment door loc .


#### **INSTRUMENT PANEL COMPARTMENT DOOR DAMPENER REPLACEMENT (LOWER COMPARTMENT)**

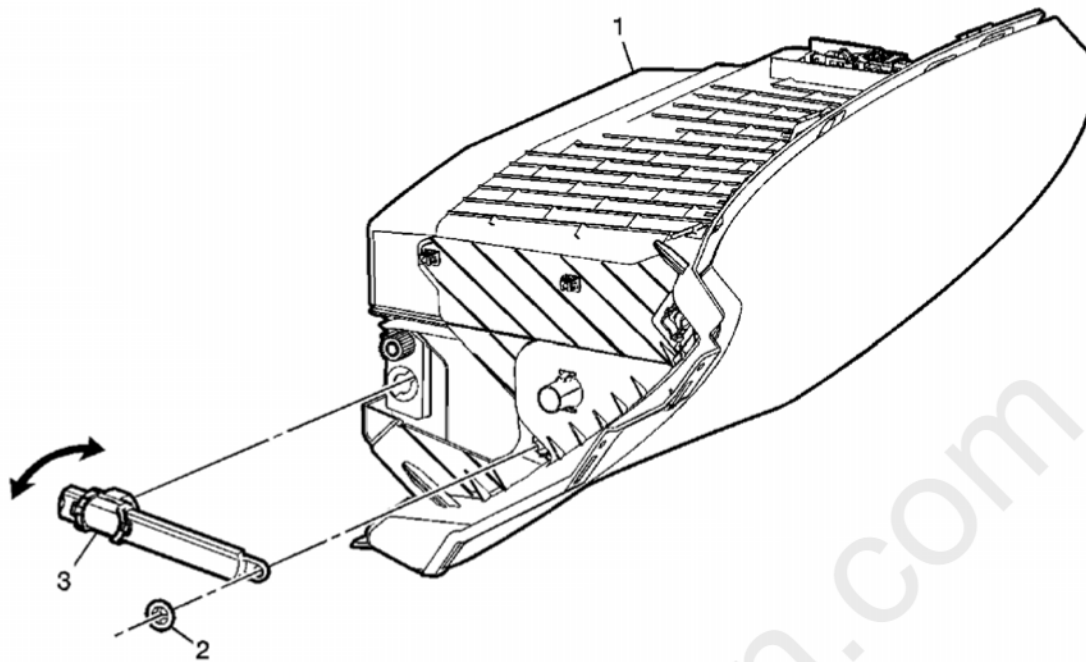

**Fig. 24: Identifying Instrument Panel Compartment Door Dampener (Lower Compartment)**  
Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                               |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Instrument Panel Compartment Assembly<br>Refer to <b><u>Instrument Panel Compartment Replacement</u></b> .                                                                                                   |
| 2       | Instrument Panel Compartment Door Dampener Fastener                                                                                                                                                          |
| 3       | Instrument Panel Compartment Door Dampener<br><b>Procedure:</b><br>Rotate the compartment door dampener assembly while pulling outward to remove the dampener from the instrument panel compartment assembly |

### **INSTRUMENT PANEL COMPARTMENT DOOR DAMPENER REPLACEMENT (CENTER COMPARTMENT)**

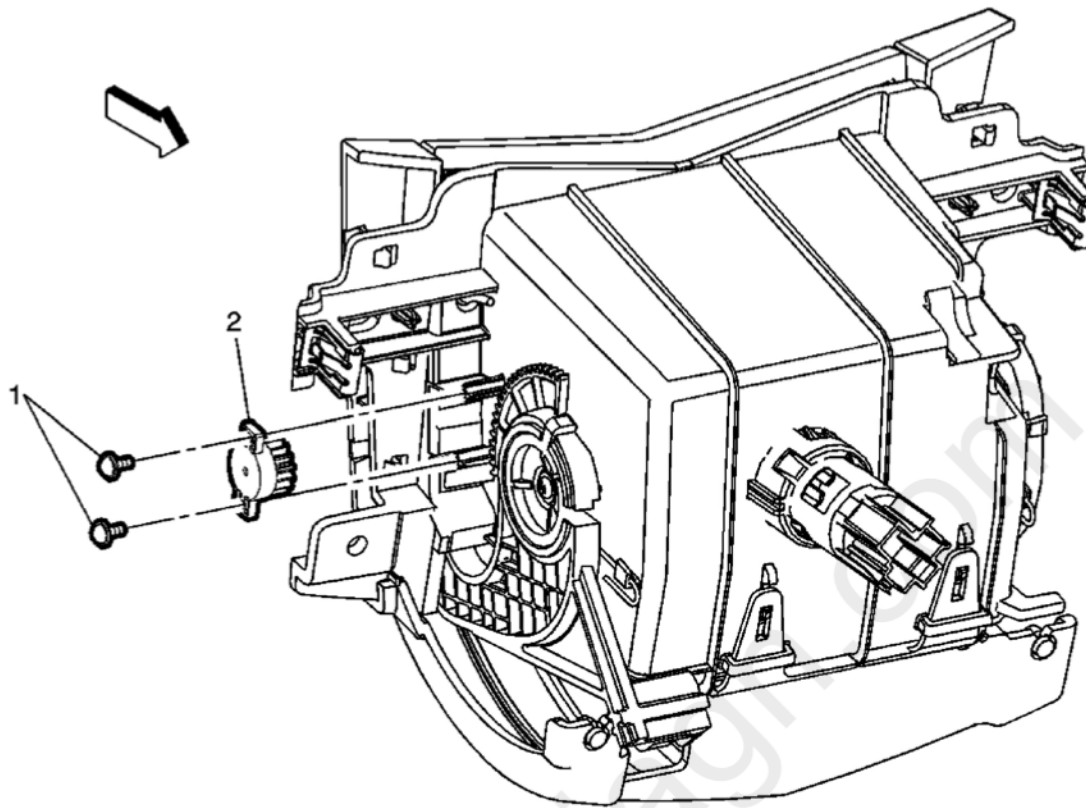


**Fig. 25: Identifying Instrument Panel Compartment Door Dampener (Center Compartment)**  
Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                             | Component Name                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedures:</b><br>Remove the instrument panel center compartment assembly. Refer to <b><u>Instrument Panel Center Compartment Replacement</u></b> . |                                                                                                                                          |
| 1                                                                                                                                                                   | Instrument Panel Center Compartment Door Dampener Fasteners (Qty: 2)<br><br><b>CAUTION:</b><br><b>Refer to <u>Fastener Caution</u> .</b> |
| 2                                                                                                                                                                   | Instrument Panel Center Compartment Door Dampener                                                                                        |

#### INSTRUMENT PANEL UPPER TRIM COVER REPLACEMENT (WITHOUT U43 OR U44)



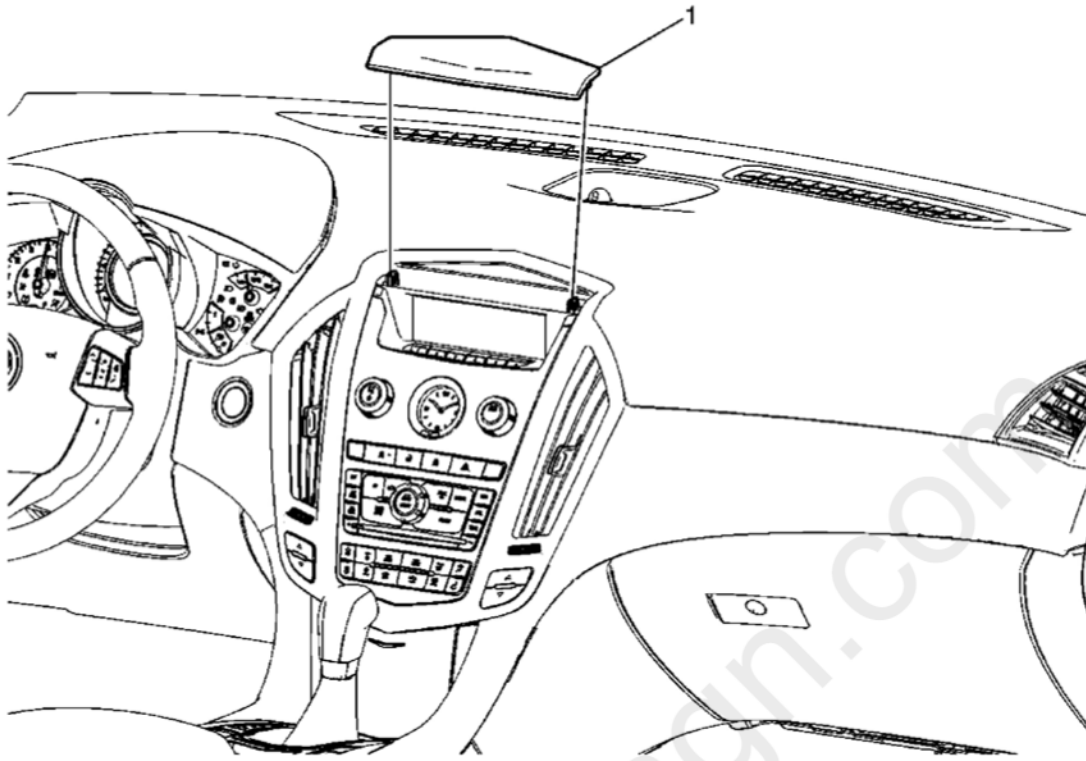

**Fig. 26: View Of Instrument Panel Upper Trim Cover (Without U43 Or U44)**  
 Courtesy of GENERAL MOTORS CORP.


| Callout | Component Name                                                                                                                                             |
|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Instrument Panel Upper Trim Cover<br><b>Procedure:</b><br>Use a flat bladed plastic trim tool in order to remove the trim plate from the instrument panel. |

## INSTRUMENT PANEL ASSEMBLY REMOVAL

### Removal Procedure


1. Remove the front seats. Refer to [Driver or Passenger Seat Replacement](#) .
2. Remove the front floor console. Refer to [Front Floor Console Replacement](#).
3. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
4. Remove the right and left instrument panel side trim panels. Refer to [Instrument Panel Side Trim Panel Replacement](#).
5. Remove the right and left body hinge pillar trim panel. Refer to [Body Hinge Pillar Trim Panel Replacement](#) .
6. Remove the steering column assembly. Refer to [Steering Column Replacement](#) .

7. Remove the instrument cluster. Refer to **Instrument Cluster Replacement** .
8. Remove the radio. Refer to **Radio Replacement** .
9. Remove the instrument panel compartment assembly. Refer to **Instrument Panel Compartment Replacement**.
10. Remove the windshield defroster nozzle grille. Refer to **Windshield Defroster Nozzle Grille Replacement** .
11. Remove the right and left windshield garnish moldings. Refer to **Windshield Garnish Molding Replacement** .
12. Note location and routing of the instrument panel wiring harness prior to removal in order to ensure proper installation.
13. Disconnect the electrical connections.

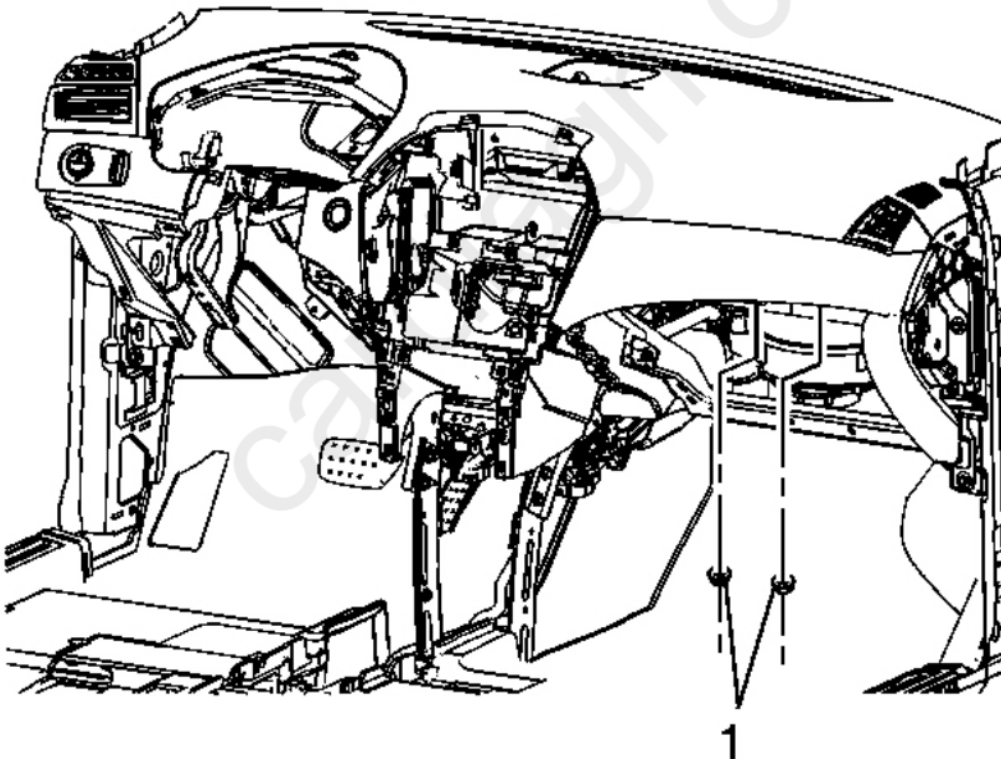


**Fig. 27: Identifying Instrument Panel Inflatable Restraint Retaining Nuts**  
Courtesy of GENERAL MOTORS CORP.

14. Remove the 2 nuts (1) securing the instrument panel inflatable restraint to the instrument panel assembly.

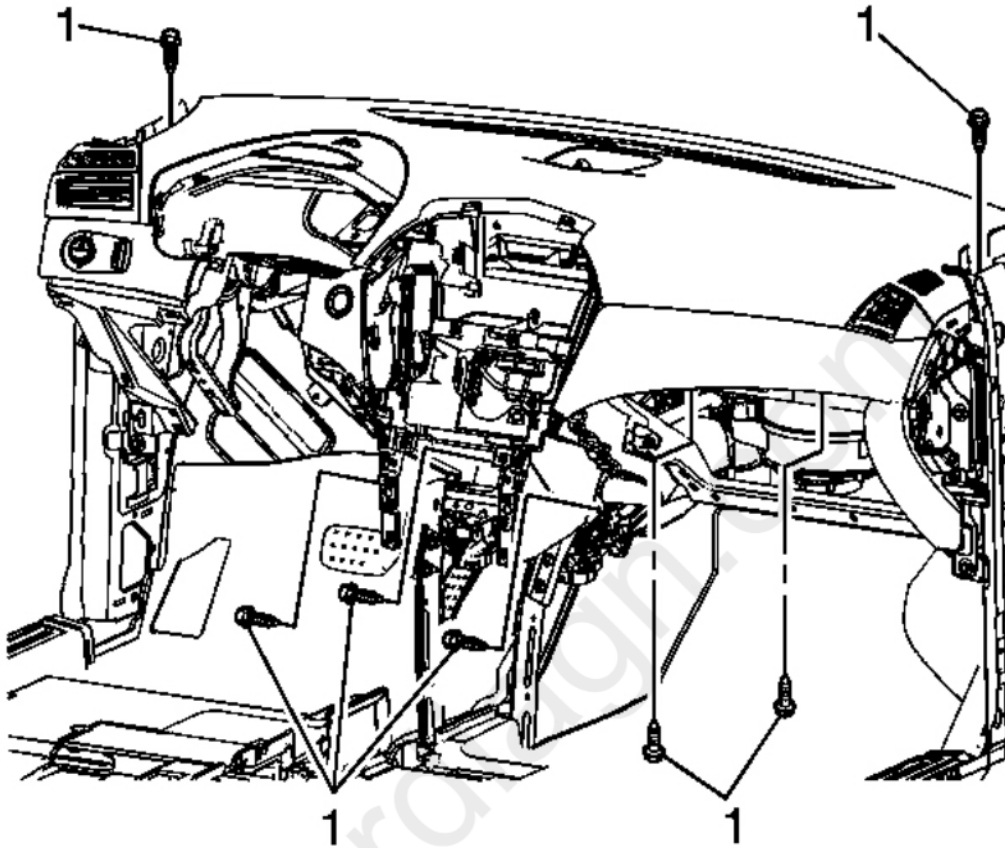


**Fig. 28: Identifying Instrument Panel Bolts & Screws**  
**Courtesy of GENERAL MOTORS CORP.**

15. Remove the 7 bolts/screws (1) securing the instrument panel assembly to the vehicle.

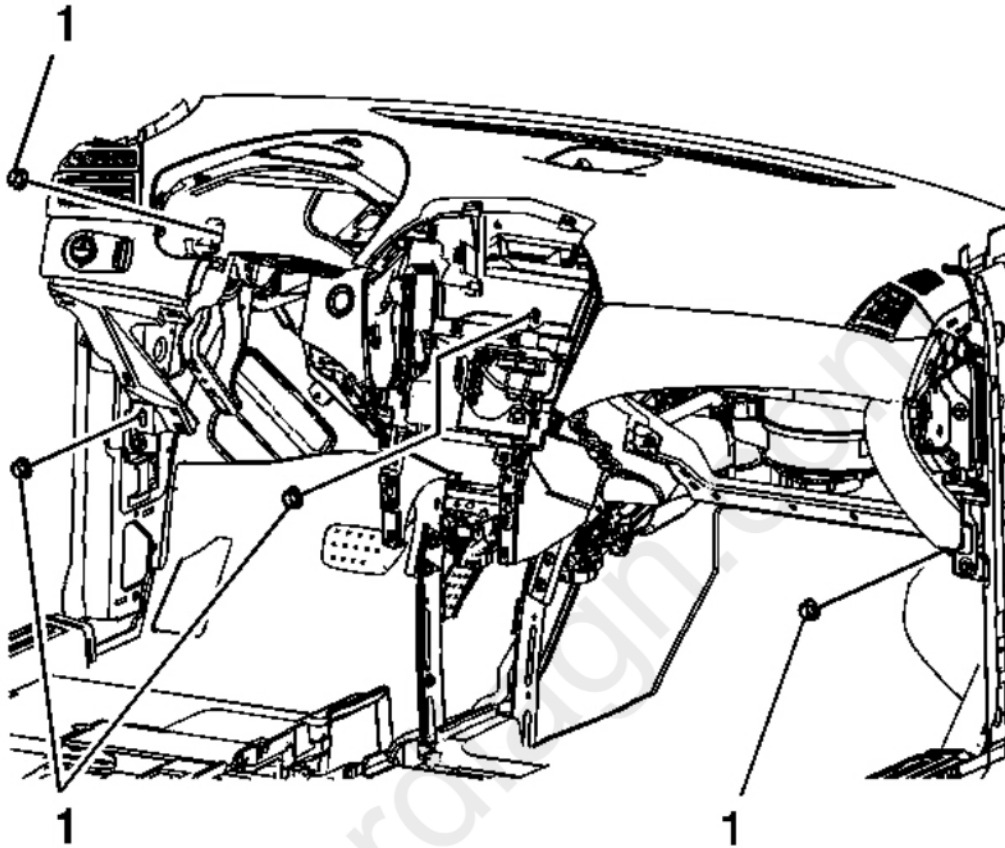

**Fig. 29: Identifying Instrument Panel Assembly Retaining Screws**  
Courtesy of GENERAL MOTORS CORP.


16. Remove the 4 nuts (1) securing the instrument panel assembly to the vehicle.

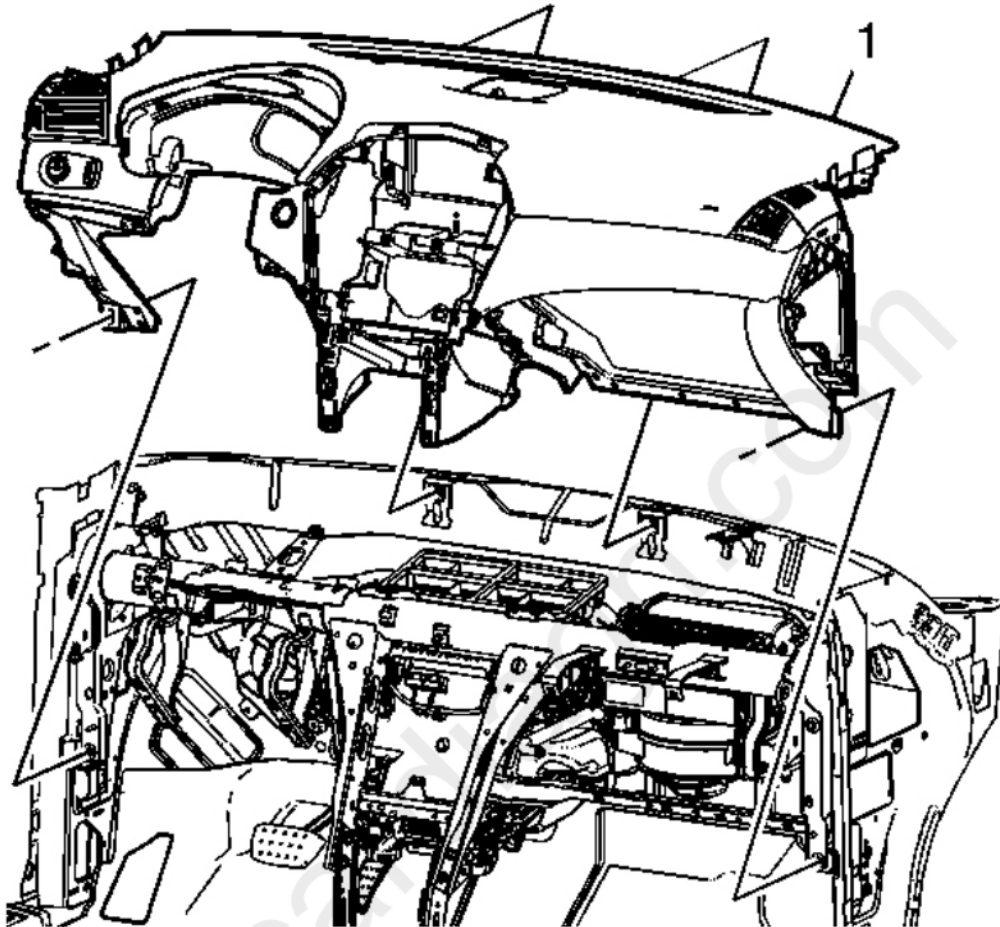

**Fig. 3 : View Of Instrument Panel Assembly**  
Courtesy of GENERAL MOTORS CORP.


17. With the aid of an assistant, remove the instrument panel assembly (1) from the vehicle.
18. Set the instrument panel assembly down and adequately support it in order to prevent any damage.

#### **Installation Procedure**

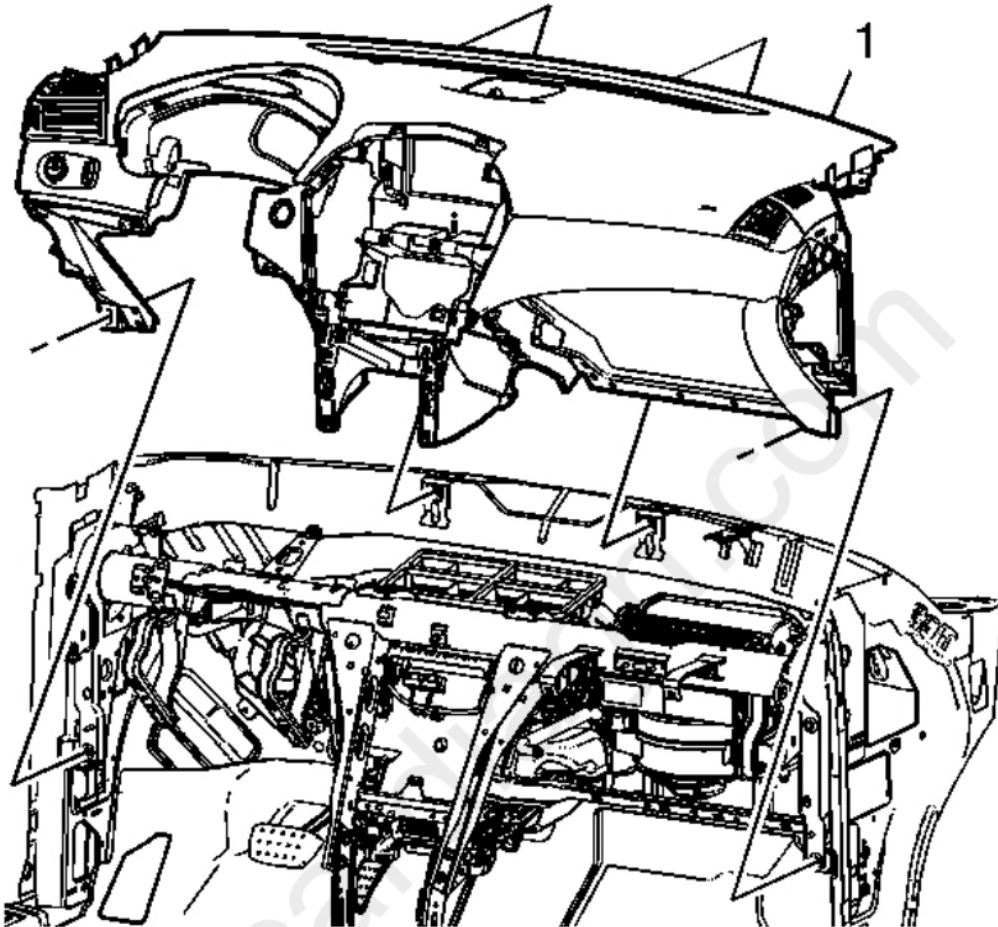


**Fig. 31: View Of Instrument Panel Assembly**  
Courtesy of GENERAL MOTORS CORP.

1. With the aid of an assistant, align the instrument panel assembly (1) to the vehicle.

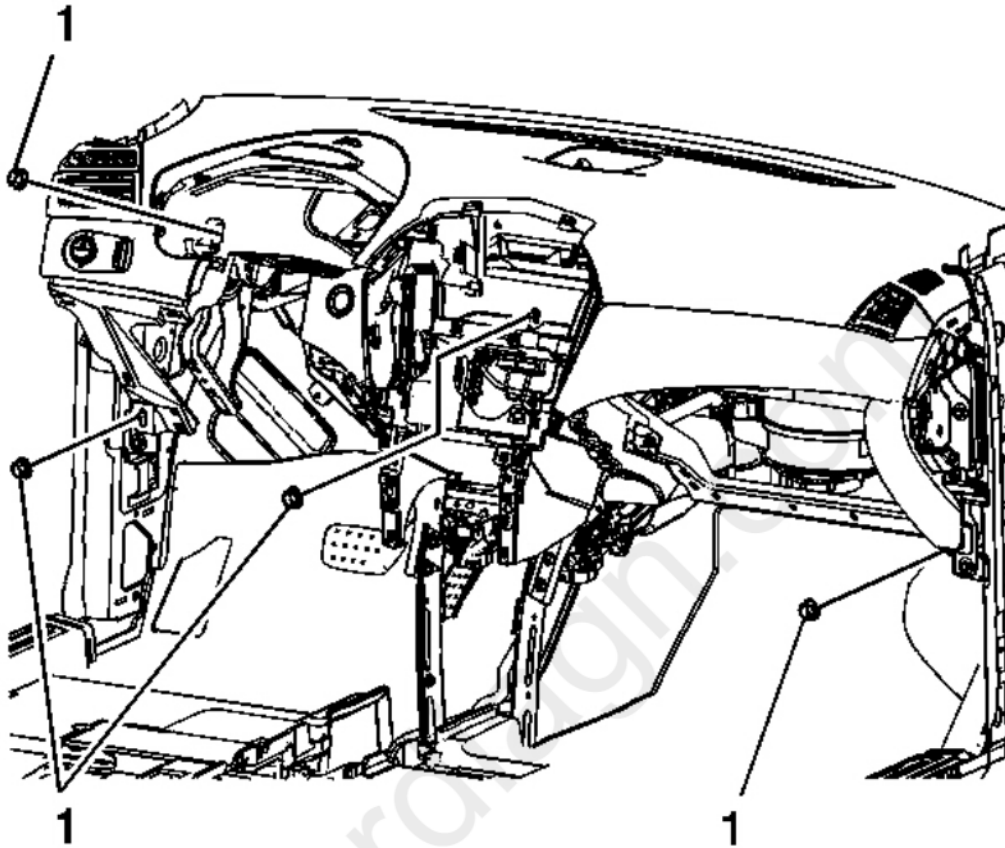

**Fig. 3 : Identifying Instrument Panel Assembly Retaining Screws**  
Courtesy of GENERAL MOTORS CORP.

2. Loosely install the 4 nuts (1).

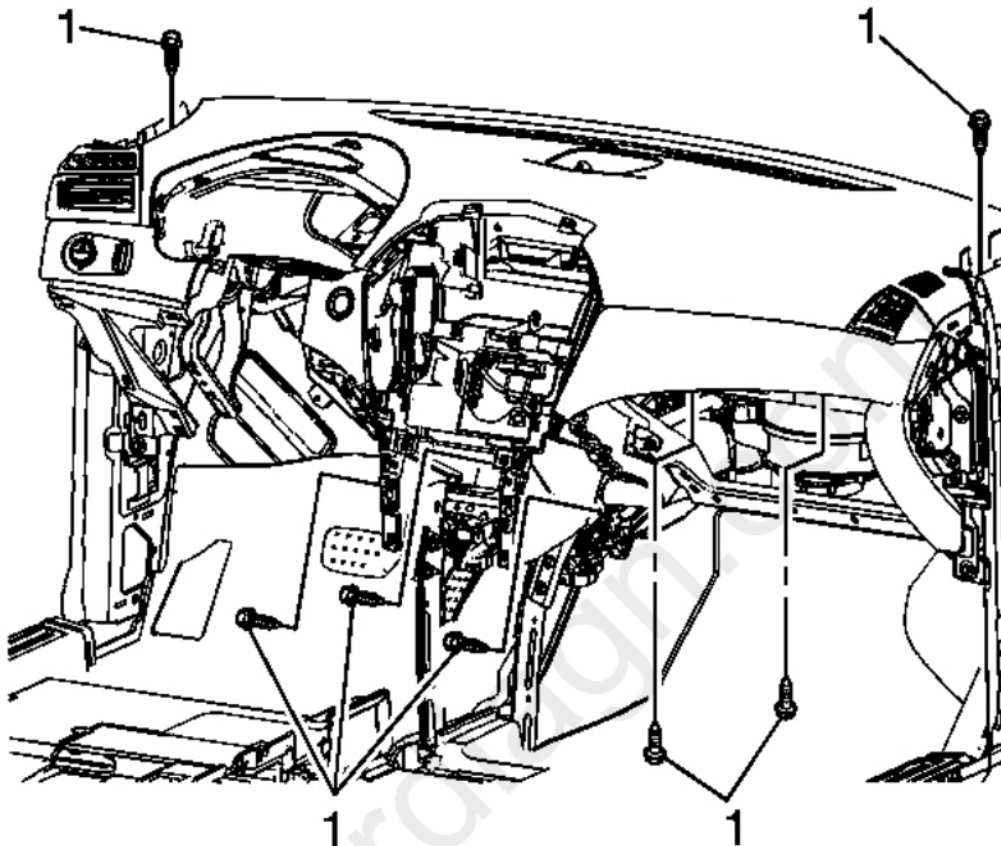


**Fig. 33: Identifying Instrument Panel Bolts & Screws**  
Courtesy of GENERAL MOTORS CORP.

3. Loosely install the 7 bolts screws (1).

**CAUTION:** Refer to Fastener Caution .

4. Tighten the 7 bolt screws securing the instrument panel to the vehicle 2.5 N.m (22 lb in).
5. Tighten the 4 nuts securing the instrument panel assembly to the vehicle 9 N.m (80 lb in).



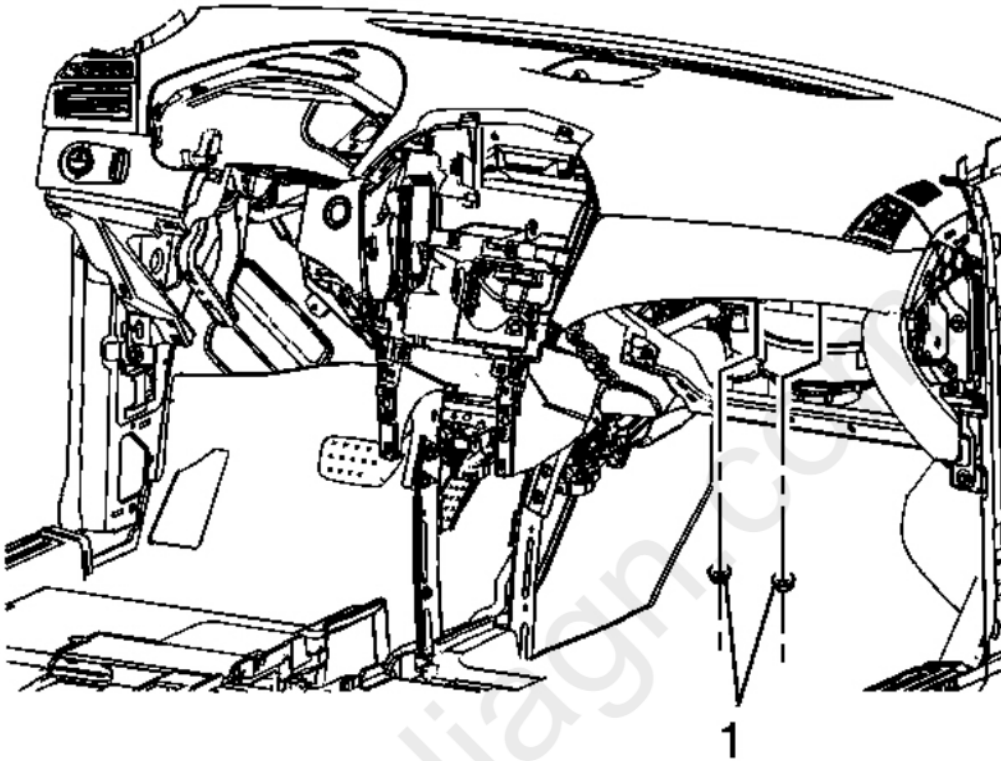

**Fig. 34: Identifying Instrument Panel Inflatable Restraint Retaining Nuts**  
Courtesy of GENERAL MOTORS CORP.


6. Install the 2 nuts (1) securing the instrument panel inflatable restraint to the instrument panel assembly, tighten to 9 N.m (80 lb in).
7. Ensure the wiring harness is routed properly as was noted in the removal procedures.
8. Connect the electrical connections.
9. Install the right and left windshield garnish moldings. Refer to **Windshield Garnish Molding Replacement**.
10. Install the windshield defroster nozzle grille. Refer to **Windshield Defroster Nozzle Grille Replacement**.
11. Install the instrument panel compartment assembly. Refer to **Instrument Panel Compartment Replacement**.
12. Install the radio. Refer to **Radio Replacement**.
13. Install the instrument cluster. Refer to **Instrument Cluster Replacement**.
14. Install the steering column assembly. Refer to **Steering Column Replacement**.
15. Install the right and left body hinge pillar trim panel. Refer to **Body Hinge Pillar Trim Panel**.

**Replacement** .

- 1 . Install the right and left instrument panel side trim panels. Refer to **Instrument Panel Side Trim Panel Replacement**.
- 1 . Connect the negative battery cable. Refer to **Battery Negative Cable Disconnection and Connection** .
- 1 . Install the front floor console. Refer to **Front Floor Console Replacement**.
- 1 . Install the front seats. Refer to **Driver or Passenger Seat Replacement** .


**INSTRUMENT PANEL TIE BAR REPLACEMENT****Removal Procedure**

1. Recover the air conditioning refrigerant. Refer to **Refrigerant Recovery and Recharging**
2. Drain the engine cooling system. Refer to **Cooling System Draining and Filling (Static Fill LF1)** or **Cooling System Draining and Filling - Vac-N-Fill(GE 47716)** or **Cooling System Draining and Filling (Static Fill LAU)**
3. Remove the heater inlet hose from the heater core tube. Refer to **Heater Inlet Hose Replacement (LF1)** or **Heater Inlet Hose Replacement (LAU)**
4. Remove the heater outlet hose from the heater core tube. Refer to **Heater Outlet Hose Replacement (LF1)** or **Heater Outlet Hose Replacement (LAU)**
5. Remove the evaporator hose assembly from the thermal expansion valve. Refer to **Air Conditioning Condenser and Air Conditioning Evaporator Tube Replacement**

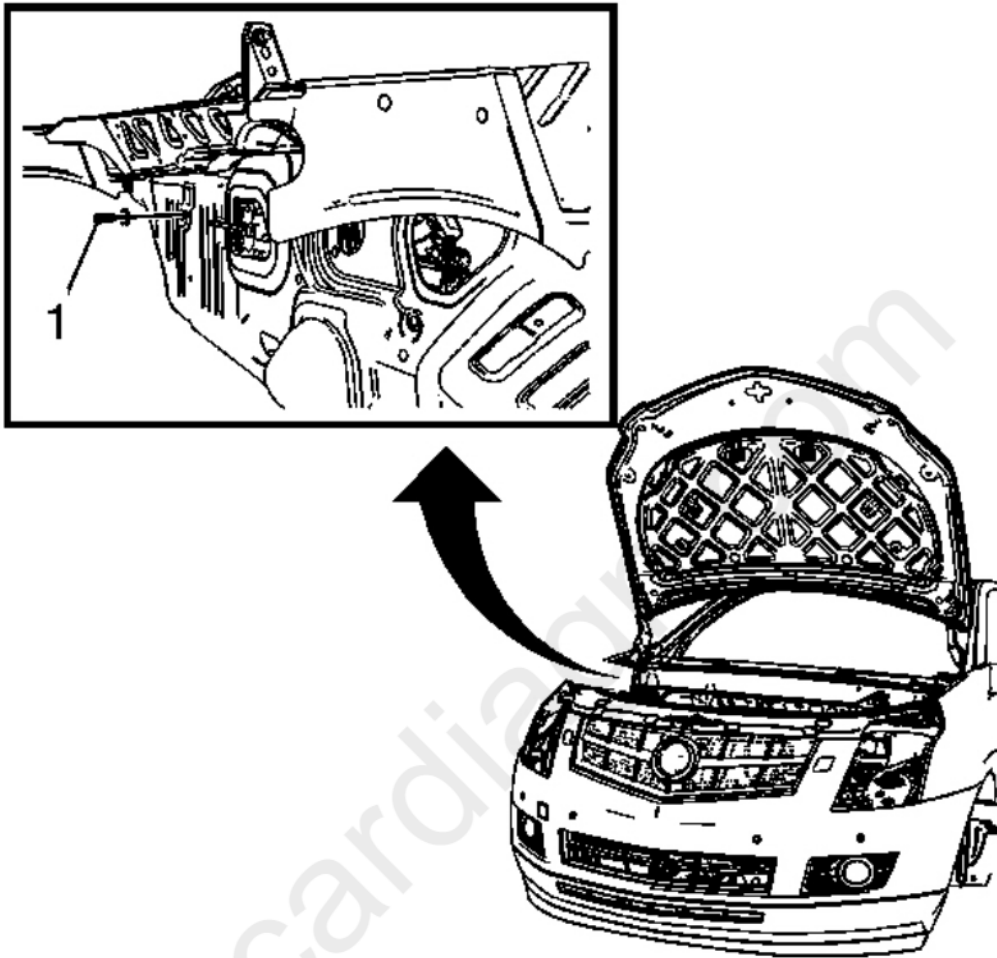


**Fig. 35: Identifying HVAC Module Assembly Screws**  
Courtesy of GENERAL MOTORS CORP.

- . Within the engine compartment area remove the fastener (1) securing the AC module assembly to the vehicle body.
- . Remove the instrument panel assembly from the vehicle. Refer to **Instrument Panel Assembly Removal**
- . Remove the communication interface module and bracket assembly. Refer to **Communication Interface Module Bracket Replacement**
- . Remove the body control module and bracket. Refer to **Body Control Module Bracket Replacement**

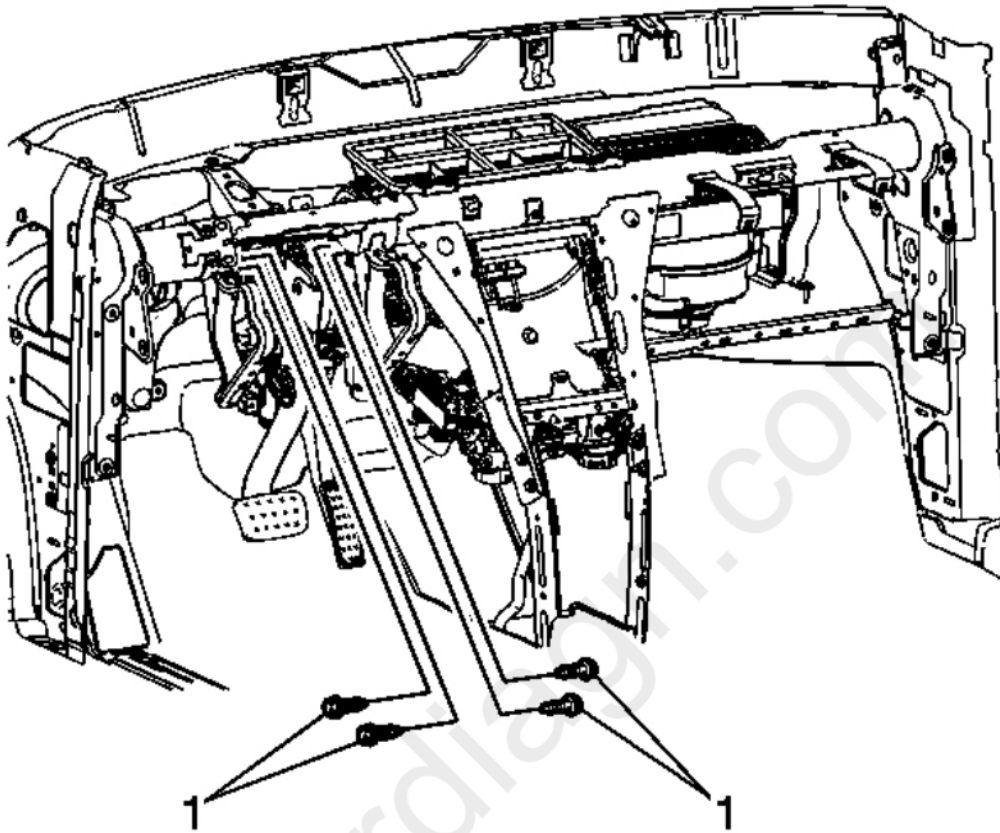


**Fig. 36: Identifying Brake Pedal Assembly-To-Instrument Panel Tie Bar Bolts**  
Courtesy of GENERAL MOTORS CORP.

- 1 . Remove the four bolts (1) securing the brake pedal assembly to the instrument panel tie bar.

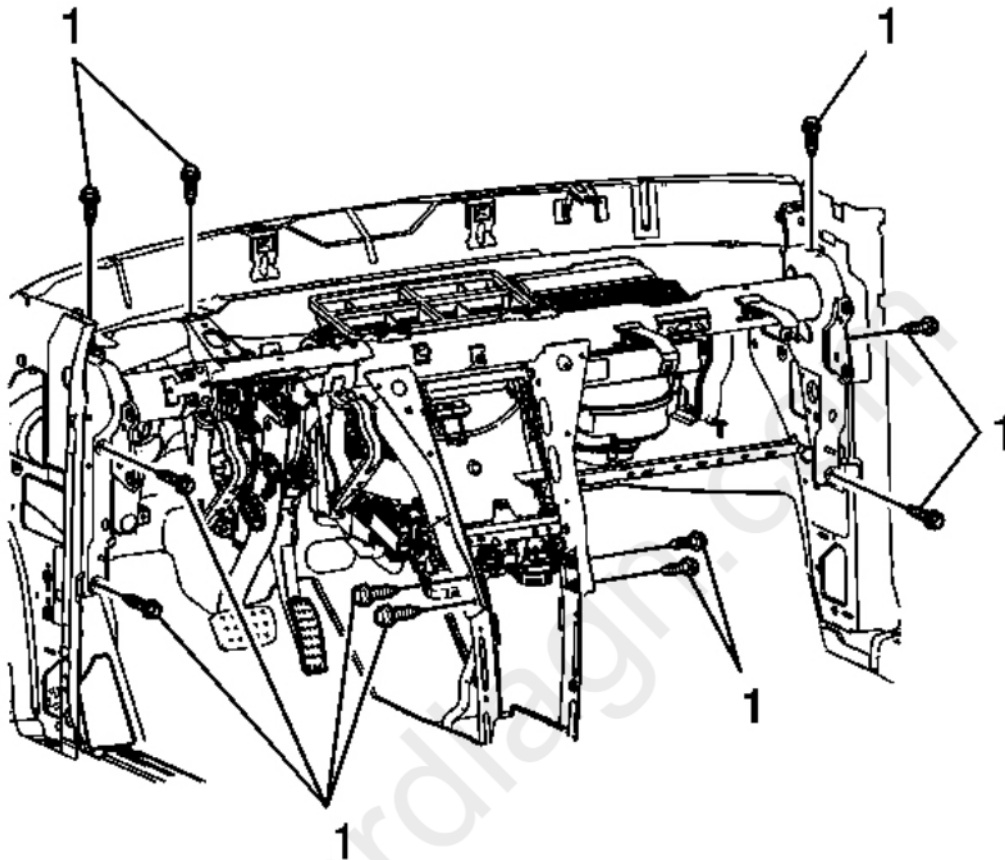


**Fig. 37: Identifying Instrument Panel Tie Bar Bolts**  
Courtesy of GENERAL MOTORS CORP.

11. Remove the eleven bolts (1) securing the instrument panel tie bar to the vehicle.
12. Note location and routing of the instrument panel wiring harness around the instrument panel tie bar prior to removal to ensure proper reinstallation.
13. Disconnect any retainers securing the instrument panel wiring harness to the tie bar assembly and position the wiring harness out of the way.

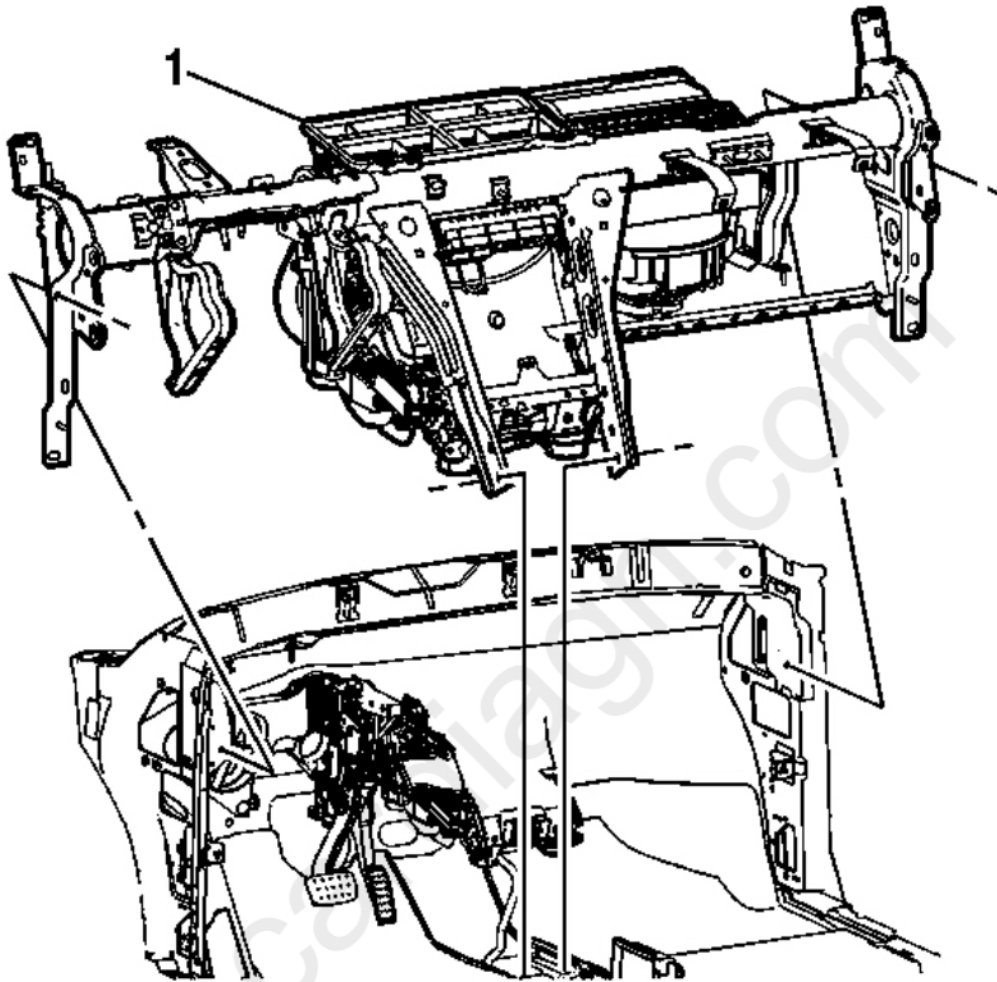

**Fig. 38: View Of Instrument Panel Tie Bar & HVAC Module Assembly**  
Courtesy of GENERAL MOTORS CORP.

14. With the aid of an assistant remove the instrument panel tie bar and AC module assembly as a unit (1) from the vehicle.

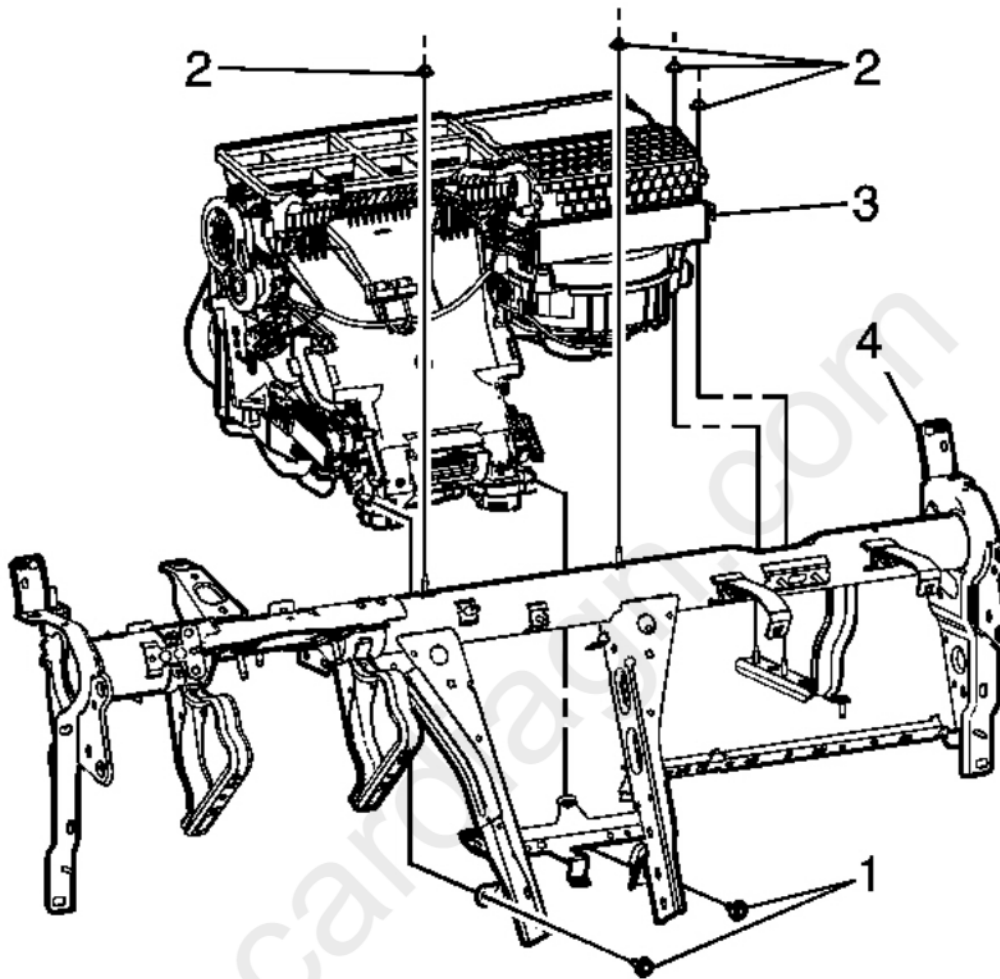


**Fig. : View Of HVAC Module Instrument Panel Tie Bar Assembly**  
**Courtesy of GENERAL MOTORS CORP.**

15. Remove the two bolts (1) securing the HVAC module (3) to the instrument panel tie bar assembly (4).
16. Remove the four nuts (2) securing the HVAC module (3) to the instrument panel tie bar assembly (4).
17. Separate the HVAC module (3) from the instrument panel tie bar assembly (4).

#### **Installation Procedure**

1. When replacing the instrument panel tie bar assembly, transfer all necessary components.

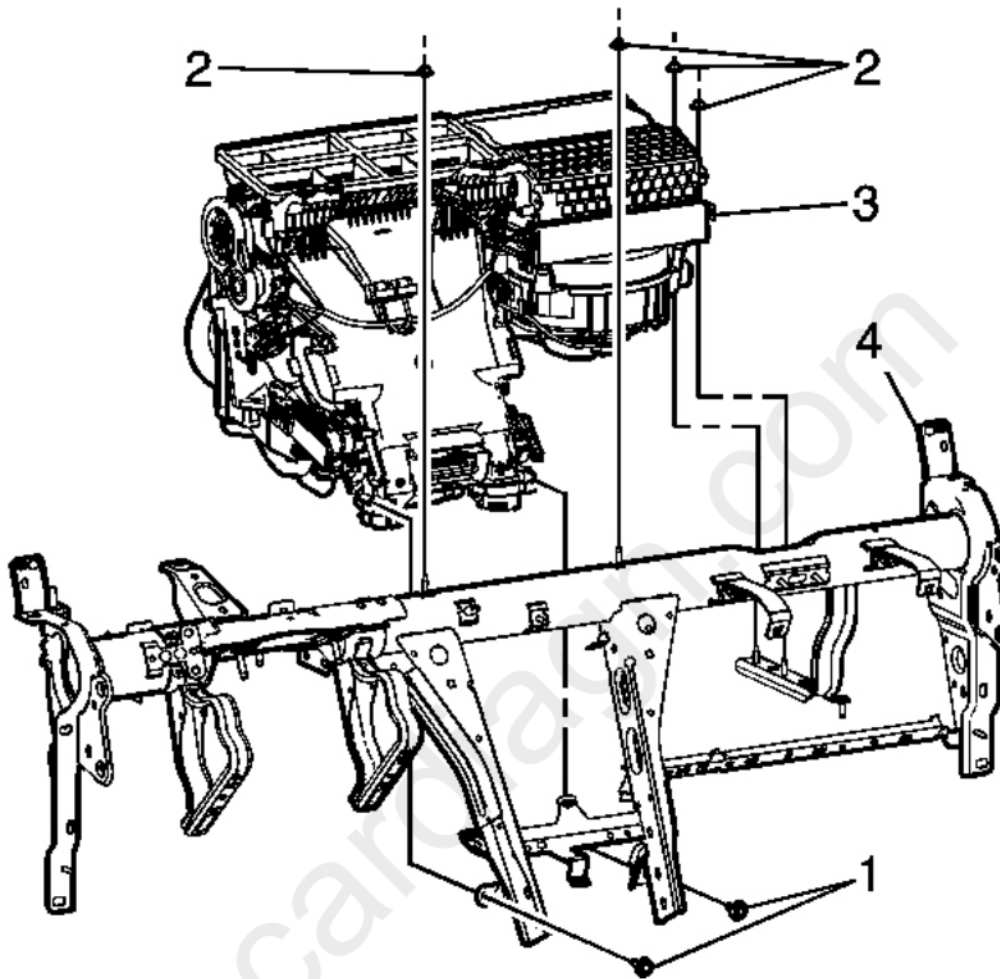


**Fig. 4 : View Of HVAC Module    Instrument Panel Tie    ar Assembly**  
**Courtesy of GENERAL MOTORS CORP.**

2. Align the HVAC module (3) to the instrument panel tie bar assembly (4).
3. Loosely install the four nuts (2) securing the HVAC module (3) to the instrument panel tie bar assembly (4).
4. Loosely install the two bolts (1) securing the HVAC module (3) to the instrument panel tie bar assembly (4).

**CAUTION: Refer to Fastener Caution**




5. Tighten the four nuts and the two bolts securing the HVAC module (3) to the instrument panel tie bar assembly (4) to 6 N.m (53 lb in).

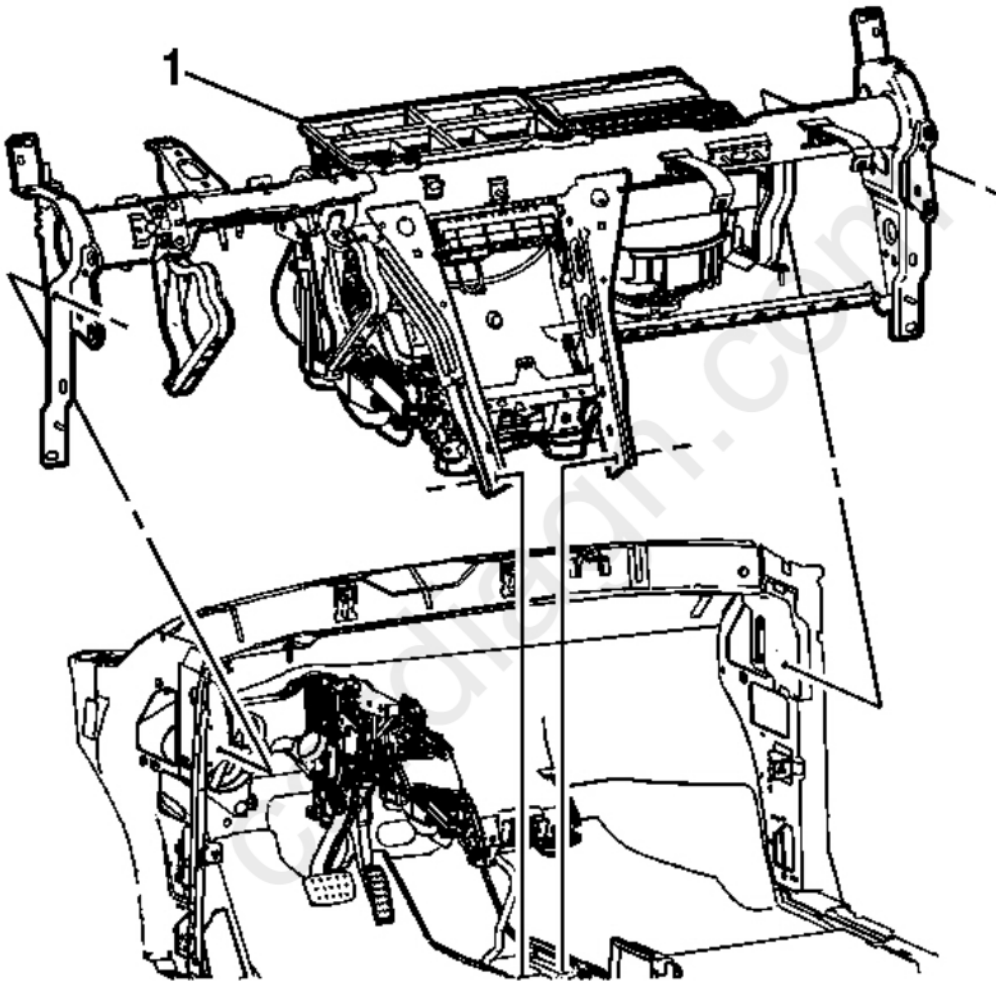


**Fig. 41: View Of Instrument Panel Tie Bar HVAC Module Assembly**  
Courtesy of GENERAL MOTORS CORP.

6. With the aid of an assistant position the instrument panel tie bar and HVAC module assembly as a unit (1) into the vehicle.
7. Reposition the wiring harness as was noted in the removal procedure and re-secure any retainers removed in order to secure the instrument panel wiring harness to the tie bar assembly.

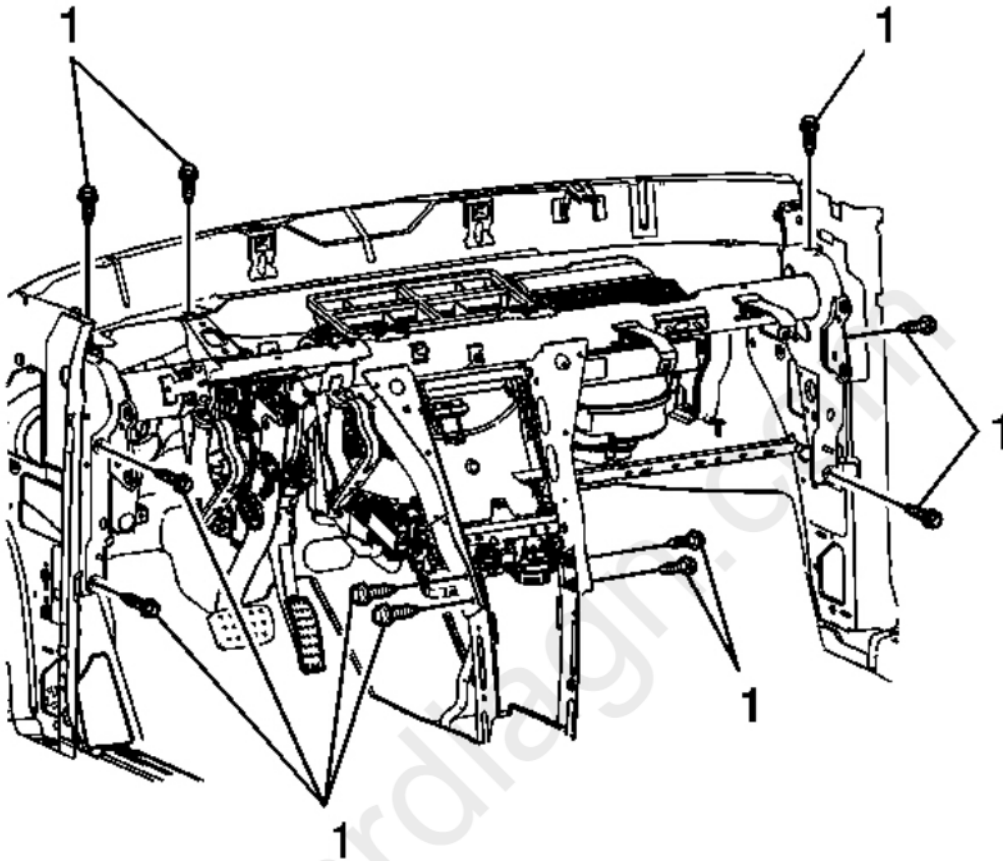


**Fig. 4 : Identifying Instrument Panel Tie Bar Bolts**  
Courtesy of GENERAL MOTORS CORP.

8. Loosely install the eleven bolts (1) securing the instrument panel tie bar to the vehicle.
9. Once all eleven bolts (1) are loosely installed, tighten the bolts to 22 N.m (16 lb ft).

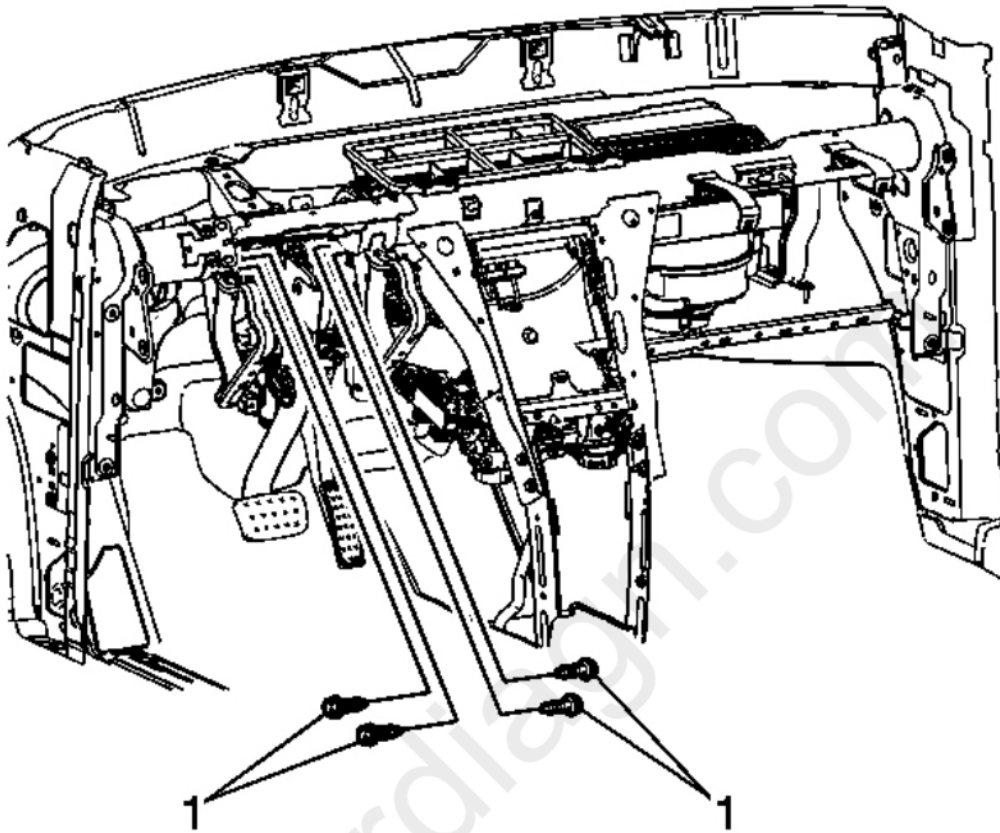

**Fig. 4 : Identifying Brake Pedal Assembly-To-Instrument Panel Tie Bar Bolts**  
Courtesy of GENERAL MOTORS CORP.

10. Loosely install the four bolts (1) securing the brake pedal assembly to the instrument panel tie bar.
11. Once all four bolts (1) are loosely installed, tighten the bolts to 21 N.m (15 lb ft)
12. Install the body control module and bracket. Refer to **Body Control Module Bracket Replacement**
13. Install the communication interface module and bracket assembly. Refer to **Communication Interface Module Bracket Replacement**
14. Install the instrument panel assembly from the vehicle. Refer to **Instrument Panel Assembly Removal**

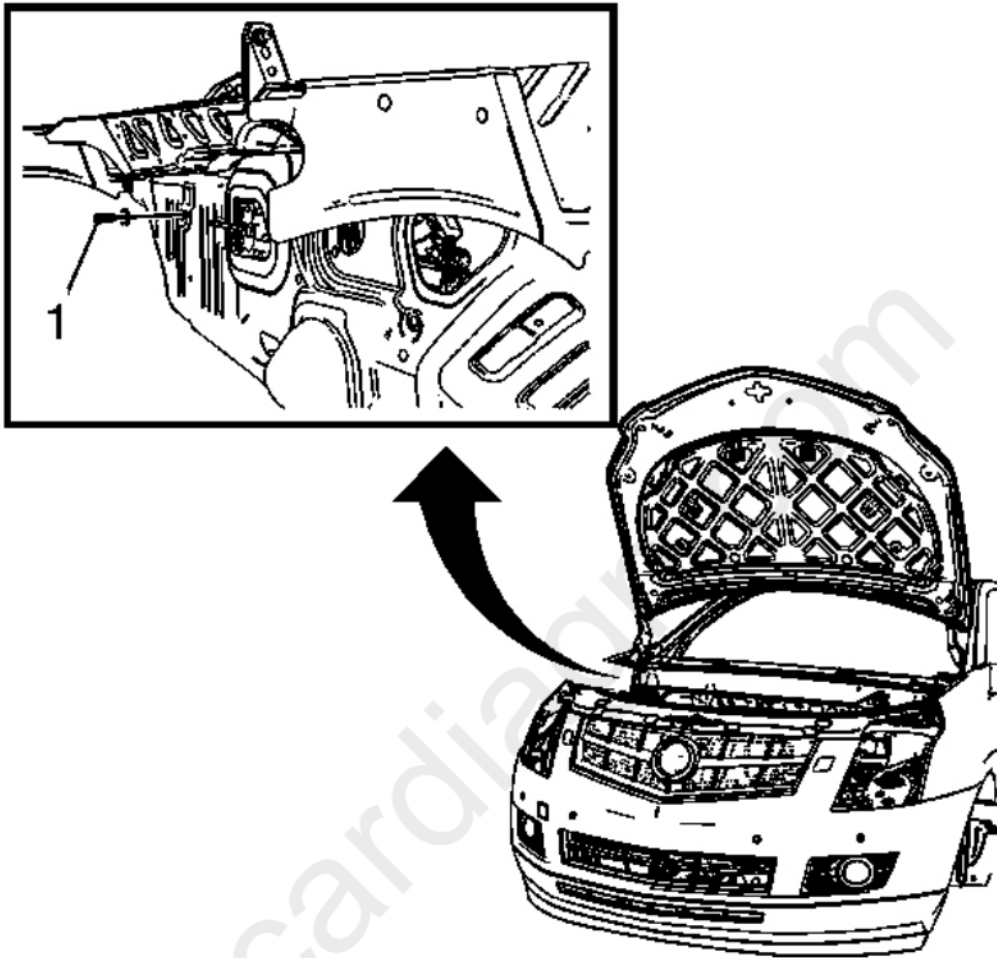


**Fig. 44: Identifying HVAC Module Assembly Screws**  
Courtesy of GENERAL MOTORS CORP.

15. Within the engine compartment area install the fastener (1) securing the AC module assembly to the vehicle body, tighten the fastener (1) to 1.4 N.m (12 lb in).
1. Install the evaporator hose assembly to the thermal expansion valve. Refer to **Air Conditioning Condenser and Air Conditioning Evaporator Tube Replacement**
1. Install the heater outlet hose to the heater core tube. Refer to **Heater Outlet Hose Replacement (LF1)** or **Heater Outlet Hose Replacement (LAU)**
1. Install the heater inlet hose to the heater core tube. Refer to **Heater Inlet Hose Replacement (LF1)** or **Heater Inlet Hose Replacement (LAU)**
1. Refill the engine cooling system. Refer to **Cooling System Draining and Filling (Static Fill LF1)** or **Cooling System Draining and Filling - Vac-N-Fill(GE 47716)** or **Cooling System Draining and**

**Filling (Static Fill LAU)**


- 2 . Recharge the air conditioning refrigerant system. Refer to **Refrigerant Recovery and Recharging**

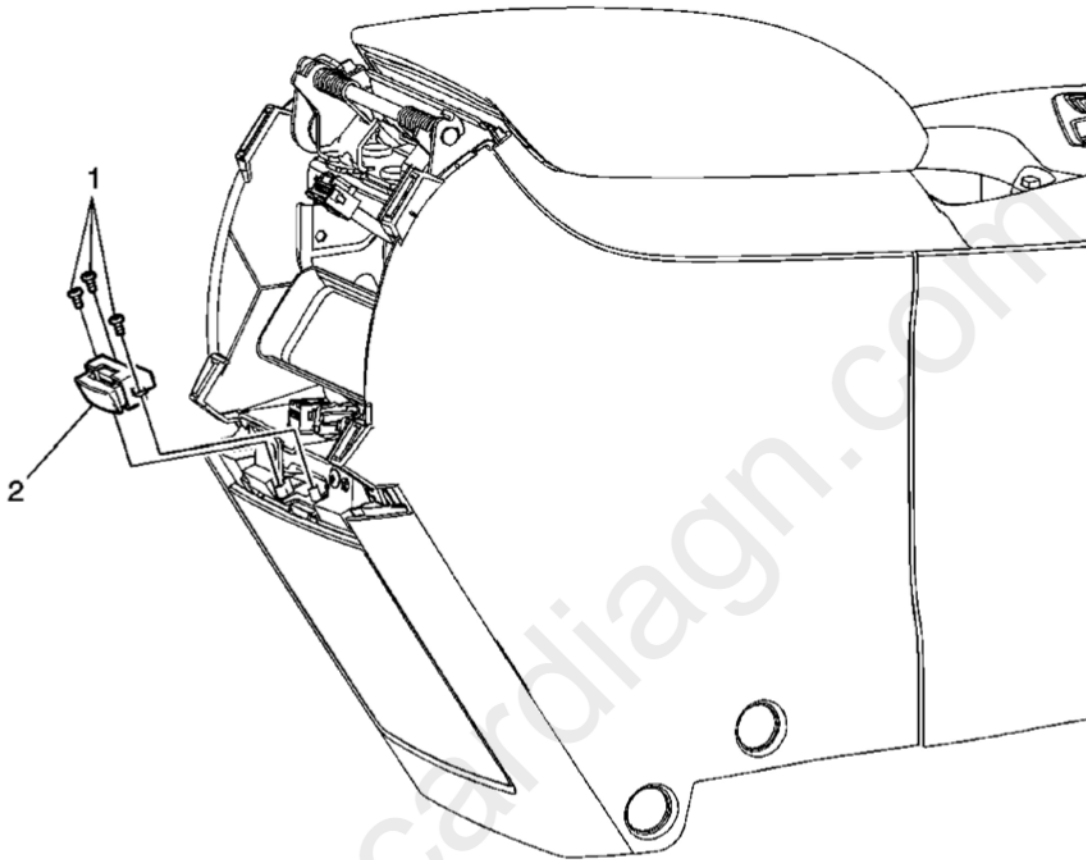**FRONT FLOOR CONSOLE COMPARTMENT DOOR LOCK REPLACEMENT**

**Fig. 45: Identifying Front Floor Console Compartment Door Lock**  
Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                 | Component Name                                                                                                                                                            |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the front floor console upper rear trim panel. Refer to <b><u>Front Floor Console Rear Trim Panel Replacement - Upper</u></b> . |                                                                                                                                                                           |
| 1                                                                                                                                                                       | Front Floor Console Compartment Door Loc Fasteners (Qty: 3)<br><br><b>CAUTION:</b><br>Refer to <b><u>Fastener Caution</u></b> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in) |
| 2                                                                                                                                                                       | Front Floor Console Compartment Door Loc Assembly                                                                                                                         |


## FRONT FLOOR COMPARTMENT CUP HOLDER REPLACEMENT

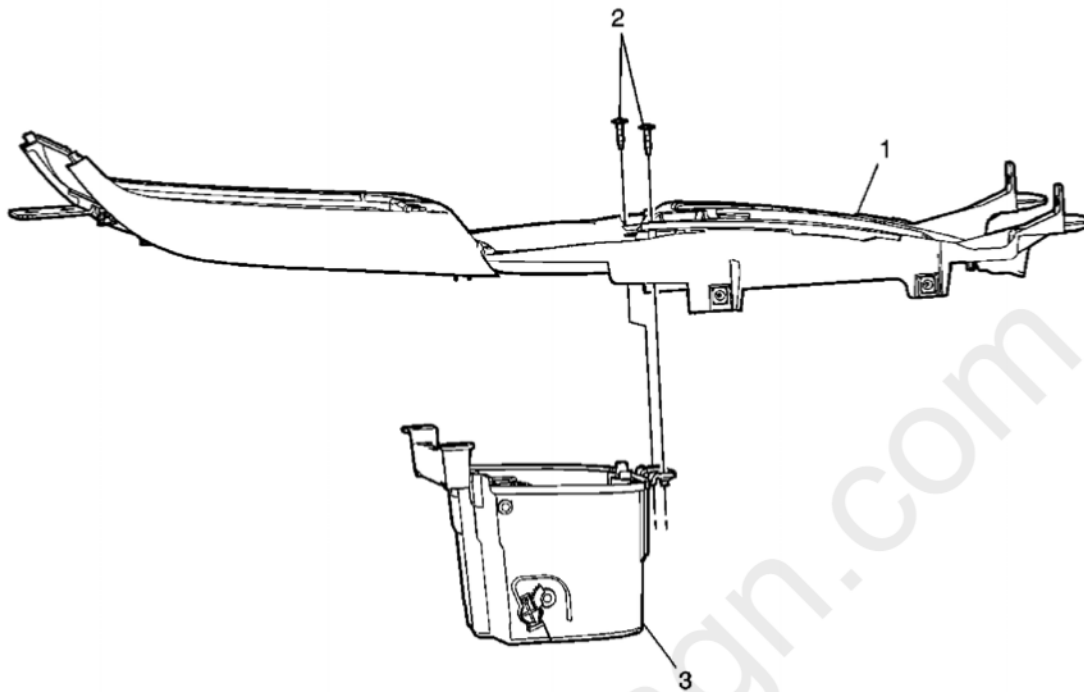

**Fig. 46: Identifying Front Floor Compartment Cup Holder**  
Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                       |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Front Floor Console Trim Plate Assembly<br>Refer to <b>Front Floor Console Trim Plate Replacement</b> .                                                              |
| 2       | Front Floor Console Compartment Cup   older Fastener (Qty: 2)<br><br><b>CAUTION:</b><br>Refer to <b>Fastener Caution</b> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in) |
| 3       | Front Floor Console Compartment Cup   older Assembly                                                                                                                 |

## FRONT FLOOR CONSOLE COMPARTMENT REPLACEMENT

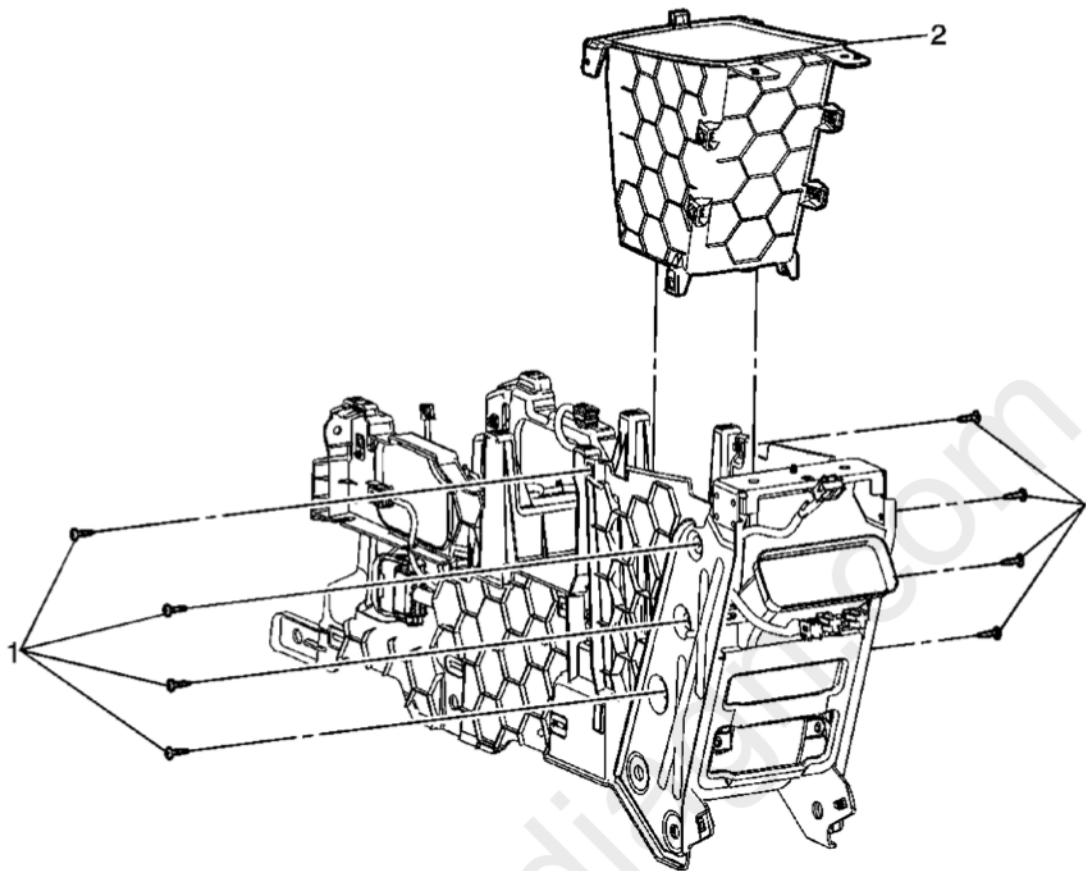


**Fig. 47: Identifying Front Floor Console Compartment**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Component Name                                                                                                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedures</b> <ol style="list-style-type: none"> <li>1. Remove the driver and passenger front seats. Refer to <b><u>Driver or Passenger Seat Replacement</u></b>.</li> <li>2. Remove the front floor console upper rear trim panel. Refer to <b><u>Front Floor Console Rear Trim Panel Replacement - Upper</u></b>.</li> <li>3. Remove the front floor console lower rear trim panel. Refer to <b><u>Front Floor Console Rear Trim Panel Replacement - Lower</u></b>.</li> <li>4. Remove the front floor console trim plate. Refer to <b><u>Front Floor Console Trim Plate Replacement</u></b>.</li> <li>5. Remove the front floor console right and left trim panels. Refer to <b><u>Front Floor Console Trim Panel Replacement</u></b>.</li> </ol> |                                                                                                                      |
| 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Front Floor Console Compartment Fastener (Qty: )<br><br><b>CAUTION:</b><br>Refer to <b><u>Fastener Caution</u></b> . |

|   |                                                                                                                                                                                                                                                                        |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <b>Tighten:</b> 2.5 N.m (22 lb in)                                                                                                                                                                                                                                     |
| 2 | <p>Front Floor Console Compartment Assembly</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the electrical connections.</li> <li>2. When replacing the front floor console compartment, transfer all necessary components.</li> </ol> |

## FRONT FLOOR CONSOLE TRIM PANEL REPLACEMENT

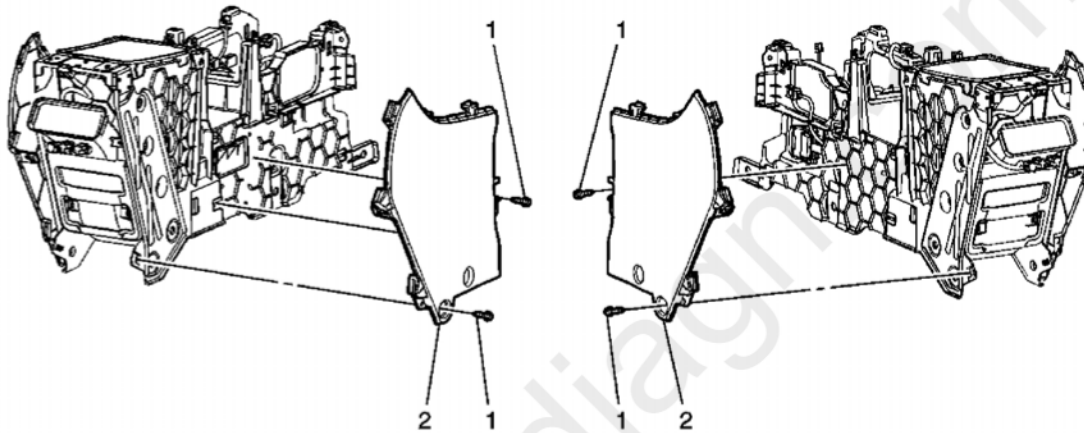


**Fig. 48: Identifying Front Floor Console Trim Panel**  
Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Component Name                                                                                                                                                                    |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedures</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                                                                                                                                                   |
| <ol style="list-style-type: none"> <li>1. Remove the driver or passenger front seat. Refer to <b><u>Driver or Passenger Seat Replacement</u></b>.</li> <li>2. Remove the front floor console upper rear trim panel. Refer to <b><u>Front Floor Console Rear Trim Panel Replacement - Upper</u></b>.</li> <li>3. Remove the front floor console lower rear trim panel. Refer to <b><u>Front Floor Console Rear Trim Panel Replacement - Lower</u></b>.</li> <li>4. Remove the front floor console trim plate. Refer to <b><u>Front Floor Console Trim Plate Replacement</u></b>.</li> </ol> |                                                                                                                                                                                   |
| 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <p>Front Floor Console Trim Panel Fastener (Qty: 4) 2 per panel</p> <p><b>CAUTION:</b><br/>Refer to <b><u>Fastener Caution</u></b>.</p> <p><b>Tighten:</b> 2.5 N.m (22 lb in)</p> |



## FRONT FLOOR CONSOLE COVER TRIM PLATE REPLACEMENT - RIGHT SIDE

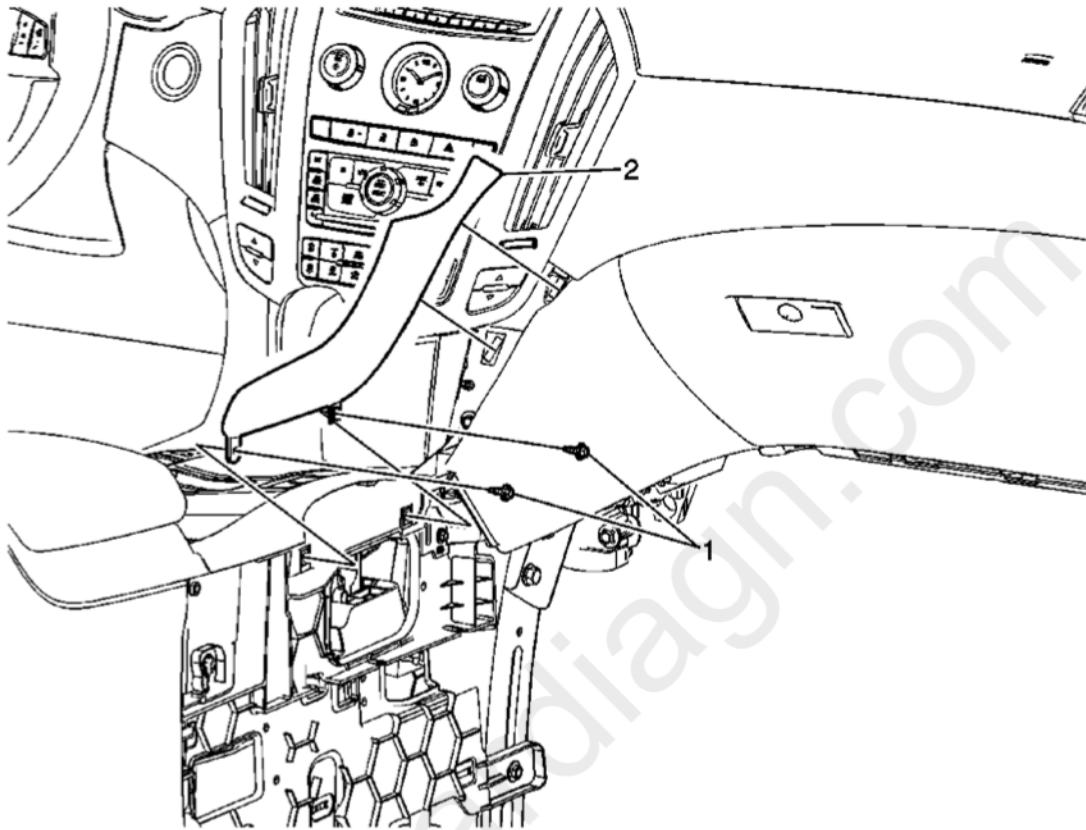


**Fig. 4 : Identifying Front Floor Console Cover Trim Plate - Right Side**  
Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                                                                                                                                                                                                                   | Component Name                                                                                                                                                        |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Use a flat bladed plastic trim tool and release the retainer clips securing the front forward edge of the left front floor console extension enough to access the instrument panel lower trim panel fastener. Do NOT remove the complete front floor console extension panel, only release the retainer clips securing the forward edge. |                                                                                                                                                                       |
| 1                                                                                                                                                                                                                                                                                                                                                                         | Front Floor Console Cover Trim Plate Fasteners (Qty: 2)<br><br><b>CAUTION:</b><br><b>Refer to <u>Fastener Caution</u> .</b><br><br><b>Tighten:</b> 2.5 N.m (22 lb in) |
|                                                                                                                                                                                                                                                                                                                                                                           | Front Floor Console Cover Trim Plate Assembly<br><b>Procedure:</b>                                                                                                    |

2

Use a flat bladed plastic trim tool in order to release the retainer clips securing the front half of the front floor console cover trim plate to the instrument panel assembly.

## FRONT FLOOR CONSOLE COVER TRIM PLATE REPLACEMENT - LEFT SIDE

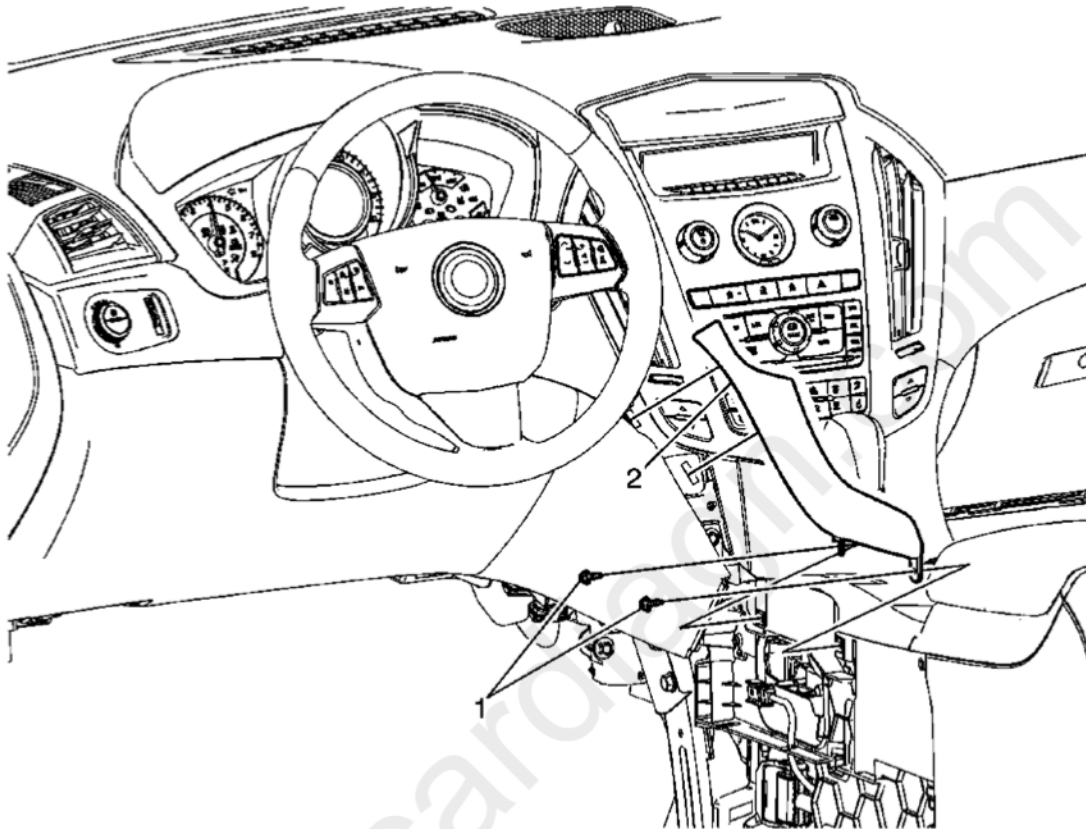


**Fig. 5 : Identifying Front Floor Console Cover Trim Plate - Left Side**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                                                                                                                                                                                                                   | Component Name                                                                                                                                                 |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Use a flat bladed plastic trim tool and release the retainer clips securing the front forward edge of the left front floor console extension enough to access the instrument panel lower trim panel fastener. Do NOT remove the complete front floor console extension panel, only release the retainer clips securing the forward edge. |                                                                                                                                                                |
| 1                                                                                                                                                                                                                                                                                                                                                                         | Front Floor Console Cover Trim Plate Fasteners (Qty: 2)<br><br><b>CAUTION:</b><br>Refer to <u>Fastener Caution</u> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in) |
|                                                                                                                                                                                                                                                                                                                                                                           | Front Floor Console Cover Trim Plate Assembly                                                                                                                  |

2

**Procedure:**


Use a flat bladed plastic trim tool in order to release the retainer clips securing the front half of the front floor console cover trim plate to the instrument panel assembly.

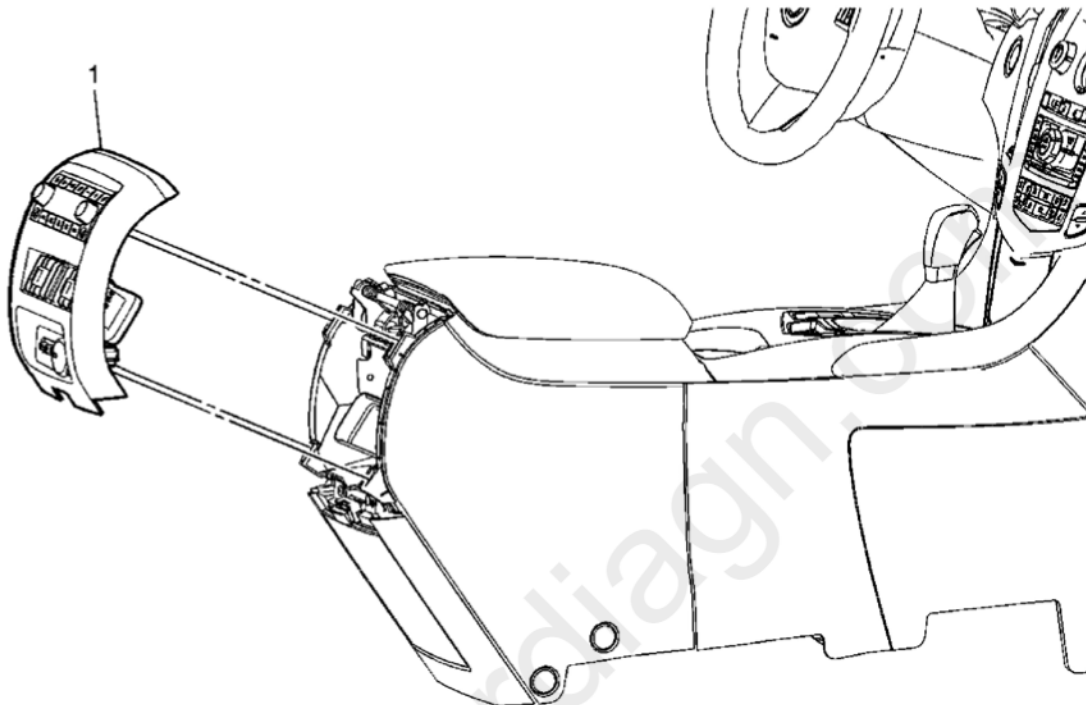**FRONT FLOOR CONSOLE REAR TRIM PANEL REPLACEMENT - UPPER**

**Fig. 5 : View Of Front Floor Console Rear Trim Panel - Upper**  
Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Front Floor Console Upper Rear Trim Panel Assembly<br><br><b>Procedure</b> <ol style="list-style-type: none"><li>1. Grasp the lower edge of the front floor console upper rear trim panel and pull outward just enough to release the lower retainer clips.</li><li>2. While holding the lower edge outward lift upward releasing the upper retainer clips securing the front floor console upper trim panel to the console assembly.</li><li>3. Disconnect the electrical connections.</li><li>4. When replacing the front floor console upper rear trim panel, transfer all necessary components.</li></ol> |


**FRONT FLOOR CONSOLE REAR TRIM PANEL REPLACEMENT - LO ER**

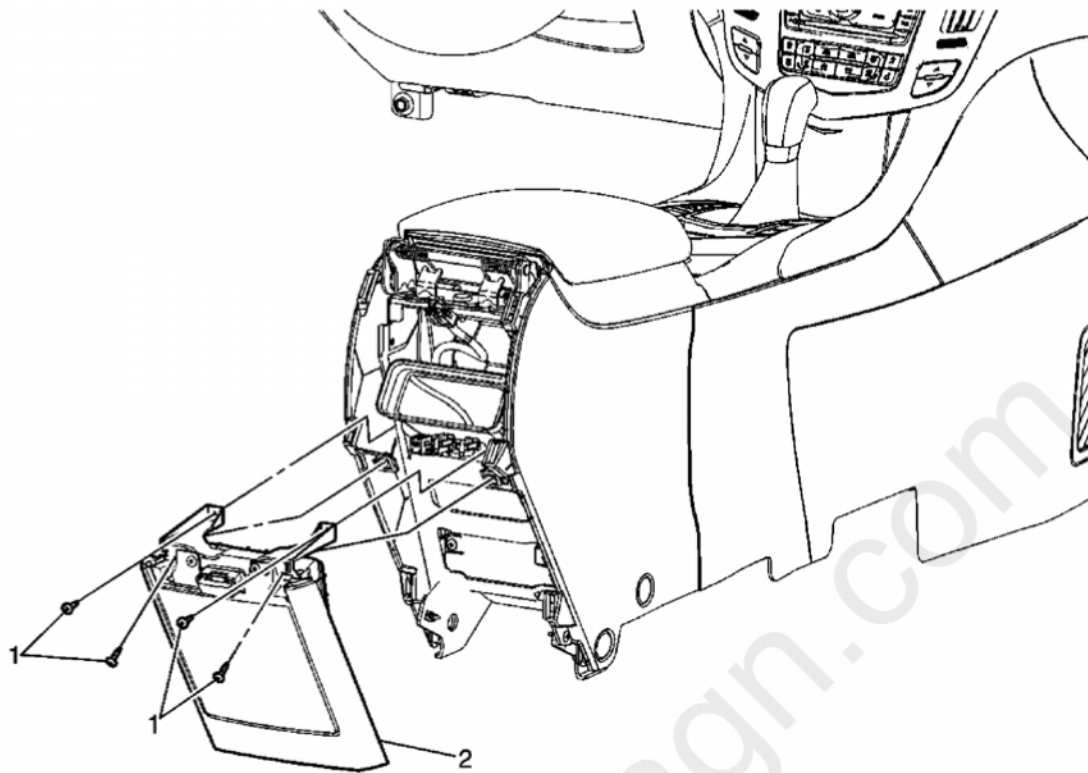

**Fig. 5 : Identifying Front Floor Console Rear Trim Panel - Lower**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                          | Component Name                                                                                                                                                              |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the front floor console upper rear trim panel. Refer to <b>Front Floor Console Rear Trim Panel Replacement - Upper</b> . |                                                                                                                                                                             |
| 1                                                                                                                                                                | Front Floor Console Lower Rear Trim Panel Fasteners (Qty: 4)<br><br><b>CAUTION:</b><br>Refer to <b>Fastener Caution</b> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in)         |
| 2                                                                                                                                                                | Front Floor Console Lower Rear Trim Panel Assembly<br><b>Procedure:</b><br>When replacing the front floor console lower rear trim panel, transfer all necessary components. |


## FRONT FLOOR CONSOLE E TENSION REPLACEMENT

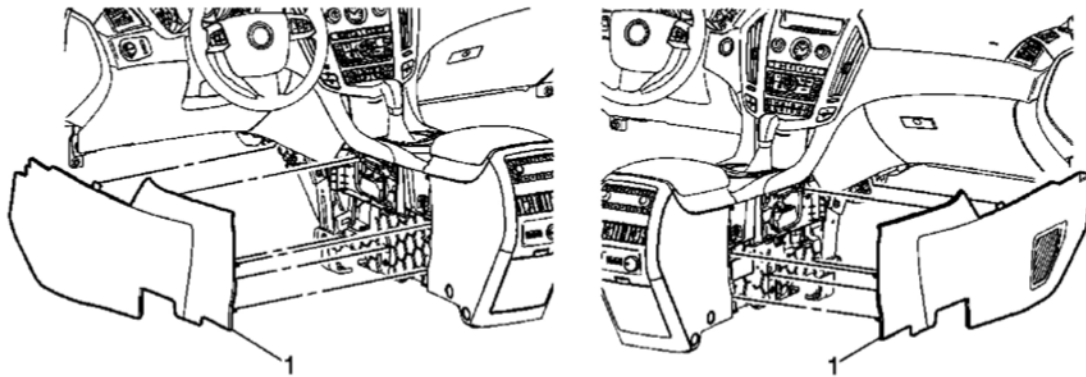**Fig. 5 : Identifying Front Floor Console Extension**

Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                      | Component Name                                                                                                                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the right or left front seat assembly. Refer to <u><b>Driver or Passenger Seat Replacement</b></u> . |                                                                                                                                                                                                                                            |
| 1                                                                                                                                            | Front Floor Console Extension Assembly (Right or Left)<br><b>Procedure:</b><br>Use a flat bladed plastic trim tool in order to release the retainer clips securing the front floor console extensions to the front floor console assembly. |


#### FRONT FLOOR CONSOLE REAR COMPARTMENT REPLACEMENT

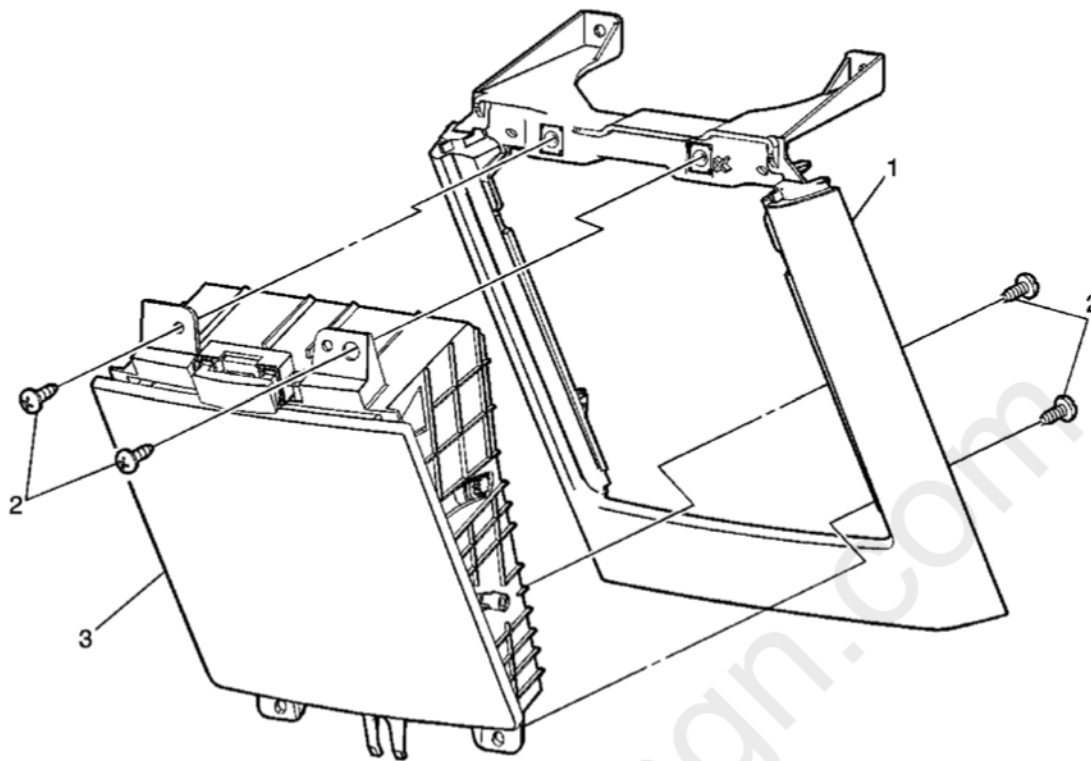

**Fig. 54: View Of Front Floor Console Rear Compartment**  
 Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                    |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Front Floor Console Lower Rear Trim Panel<br>Refer to <b>Front Floor Console Rear Trim Panel Replacement - Lower</b> .                                            |
| 2       | Front Floor Console Rear Compartment Fastener (Qty: 4)<br><br><b>CAUTION:</b><br>Refer to <b>Fastener Caution</b> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in)     |
| 3       | Front Floor Console Rear Compartment Assembly<br><b>Procedure:</b><br>When replacing the front floor console rear compartment, transfer all necessary components. |

## FRONT FLOOR CONSOLE REPLACEMENT

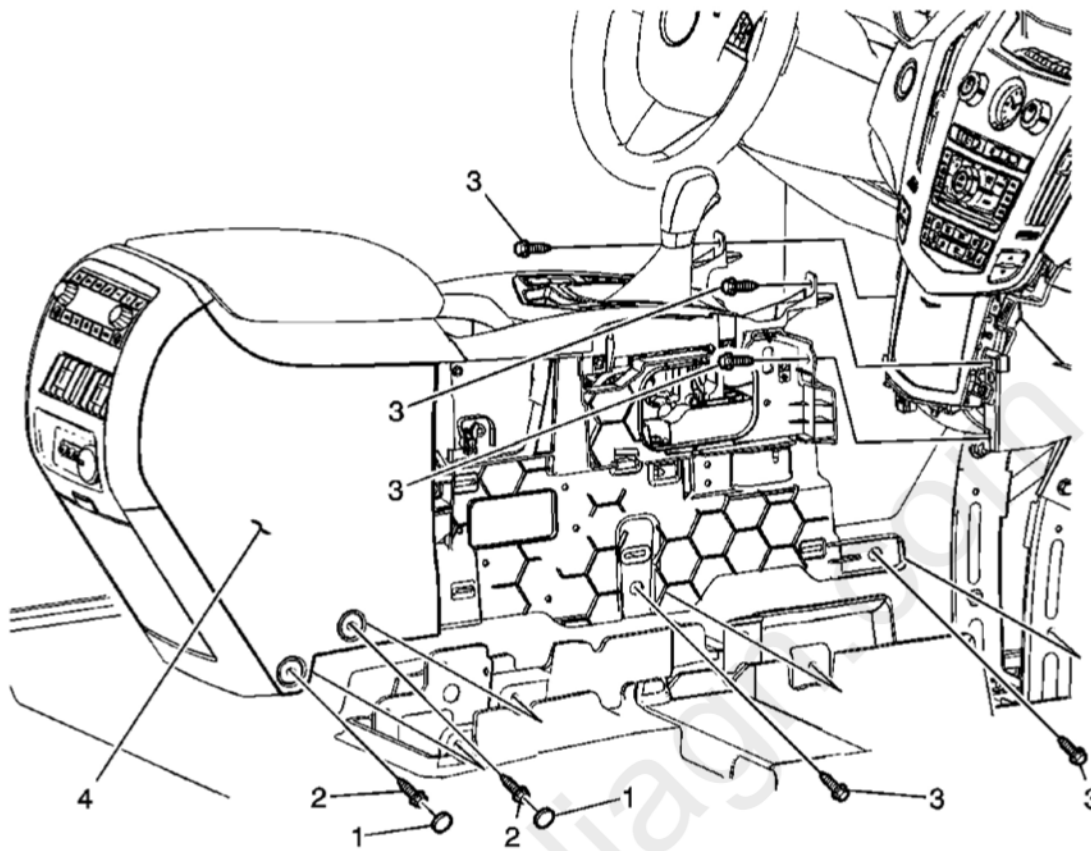


**Fig. 55: Identifying Front Floor Console**  
 Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Component Name                                                                                                                                                             |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                            |
| <ol style="list-style-type: none"> <li>1. Remove the front floor console right and left extensions. Refer to <b><u>Front Floor Console Extension Replacement</u></b>.</li> <li>2. Remove the right and left front floor console cover trim plate assemblies. Refer to <b><u>Front Floor Console Cover Trim Plate Replacement - Right Side</u></b> and <b><u>Front Floor Console Cover Trim Plate Replacement - Left Side</u></b>.</li> <li>3. Remove the left and right instrument panel lower trim panels. Refer to <b><u>Instrument Panel Lower Trim Panel Replacement - Left Side</u></b> and <b><u>Instrument Panel Lower Trim Panel Replacement - Right Side</u></b>.</li> <li>4. Disconnect the automatic transmission control cable. Refer to <b><u>Range Selector Lever Cable Replacement</u></b>.</li> </ol> |                                                                                                                                                                            |
| 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Front Floor Console Fastener Covers (Qty: 4)<br><b>Procedure:</b><br>Use a flat bladed plastic trim tool in order to remove the fastener covers from the console assembly. |

|   |                                                                                                                                                                                                                                                      |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | Front Floor Console Rear Fasteners (Qty: 4)<br><br><b>CAUTION:</b><br><b>Refer to <u>Fastener Caution</u> .</b><br><br><b>Tighten:</b> 6 N.m (53 lb in)                                                                                              |
| 3 | Front Floor Console Front Fasteners (Qty: 8)<br><br><b>Tighten:</b> 9.5 N.m (7 lb ft)                                                                                                                                                                |
| 4 | Front Floor Console Assembly<br><br><b>Procedure</b><br><br><ol style="list-style-type: none"><li>1. Disconnect the electrical connections.</li><li>2. When replacing the front floor console assembly, transfer all necessary components.</li></ol> |

## FRONT FLOOR CONSOLE ARMREST REPLACEMENT

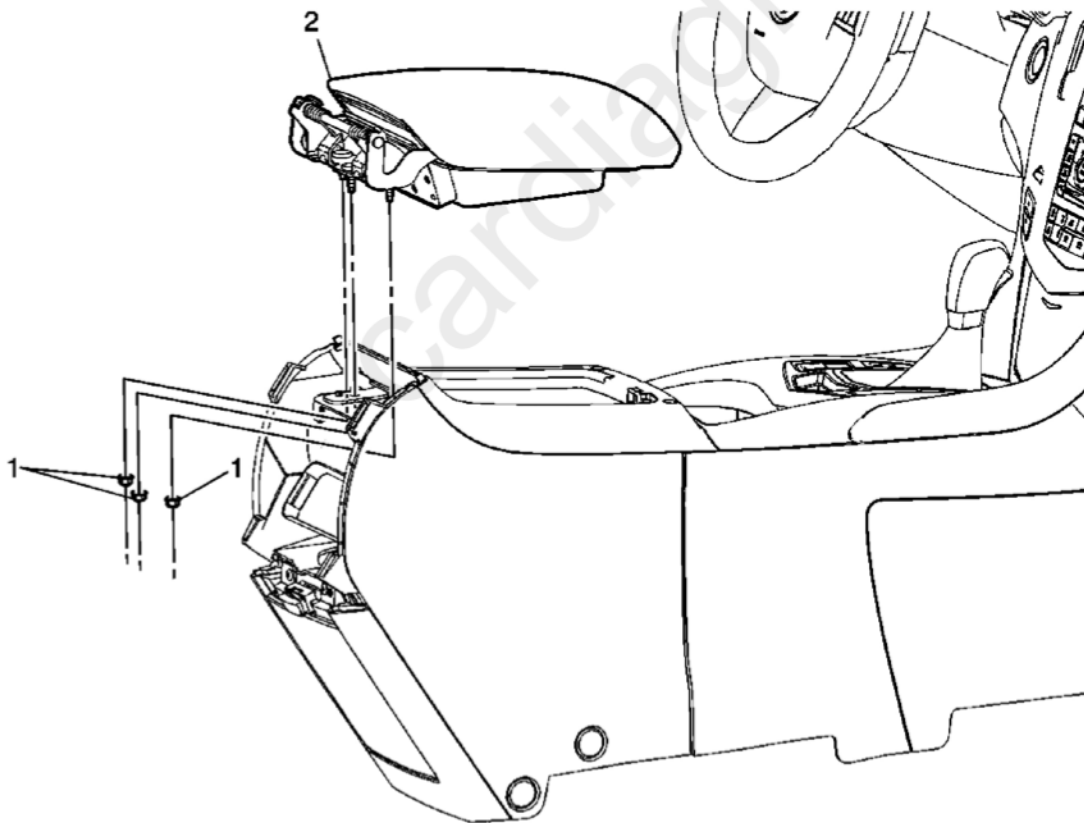

**Fig. 56: View Of Front Floor Console Armrest**  
Courtesy of GENERAL MOTORS CORP.




## 2010 Cadillac SRX

### 2010 ACCESSORIES & EQUIPMENT Instrument Panel and Console Trim - SRX

| Callout                                                                                                                                                                   | Component Name                                                                                                                                        |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the front floor console upper rear trim panel assembly. Refer to <b>Front Floor Console Rear Trim Panel Replacement - Upper</b> . |                                                                                                                                                       |
| 1                                                                                                                                                                         | Front Floor Console Armrest Fasteners (Qty: 3)<br><br><b>CAUTION:</b><br>Refer to <b>Fastener Caution</b> .<br><br><b>Tighten:</b> 2.5 N.m (22 lb in) |
| 2                                                                                                                                                                         | Front Floor Console Armrest Assembly                                                                                                                  |

### FRONT FLOOR CONSOLE TRIM PLATE REPLACEMENT

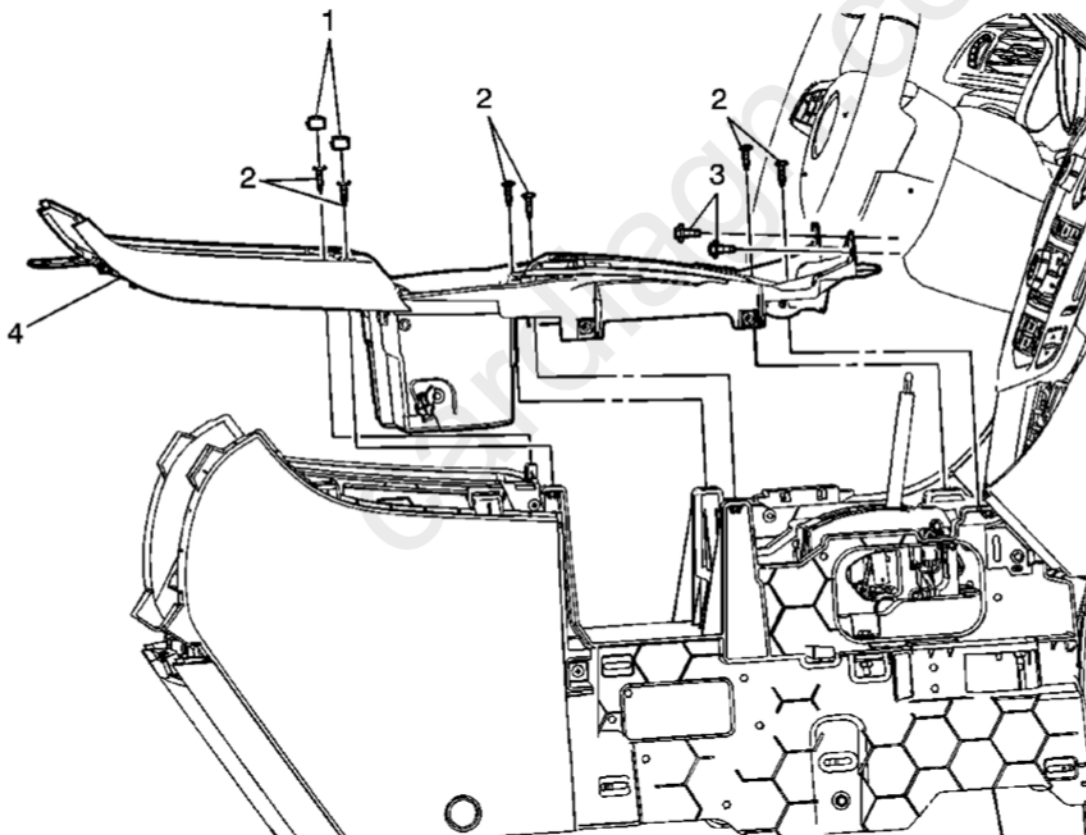

**Fig. 57: Identifying Front Floor Console Trim Plate & Fasteners**  
Courtesy of GENERAL MOTORS CORP.

| Callout                       | Component Name |
|-------------------------------|----------------|
| <b>Preliminary Procedures</b> |                |


## 2010 Cadillac SRX

### 2010 ACCESSORIES & EQUIPMENT Instrument Panel and Console Trim - SRX

1. Remove the right and left front floor console cover trim plate assemblies. Refer to **Front Floor Console Cover Trim Plate Replacement - Right Side** and **Front Floor Console Cover Trim Plate Replacement - Left Side**.
2. Remove the automatic transmission control boot assembly. Refer to **Transmission Control Lever Boot Replacement**.
3. Remove the front floor console upper rear trim panel assembly. Refer to **Front Floor Console Rear Trim Panel Replacement - Upper**.
4. Remove the front floor console armrest assembly. Refer to **Front Floor Console Armrest Replacement**.

|   |                                                                                                                                                                                                                                                            |
|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Front Floor Console Trim Plate Fastener Cover (Qty: 2)                                                                                                                                                                                                     |
| 2 | Front Floor Console Trim Plate Fastener (Qty: 6)<br><br><b>CAUTION:</b><br><b>Refer to <u>Fastener Caution</u> .</b><br><br><b>Tighten:</b> 2.5 N.m (22 lb in)                                                                                             |
| 3 | Front Floor Console Fastener (Qty: 2)<br><br><b>Tighten:</b> 2.5 N.m (22 lb in)                                                                                                                                                                            |
| 4 | Front Floor Console Trim Plate Assembly<br><br><b>Procedure</b> <ol style="list-style-type: none"><li>1. Disconnect the electrical connections.</li><li>2. When replacing the front floor console trim plate, transfer all necessary components.</li></ol> |


## FRONT FLOOR CONSOLE APPLIQUE REPLACEMENT

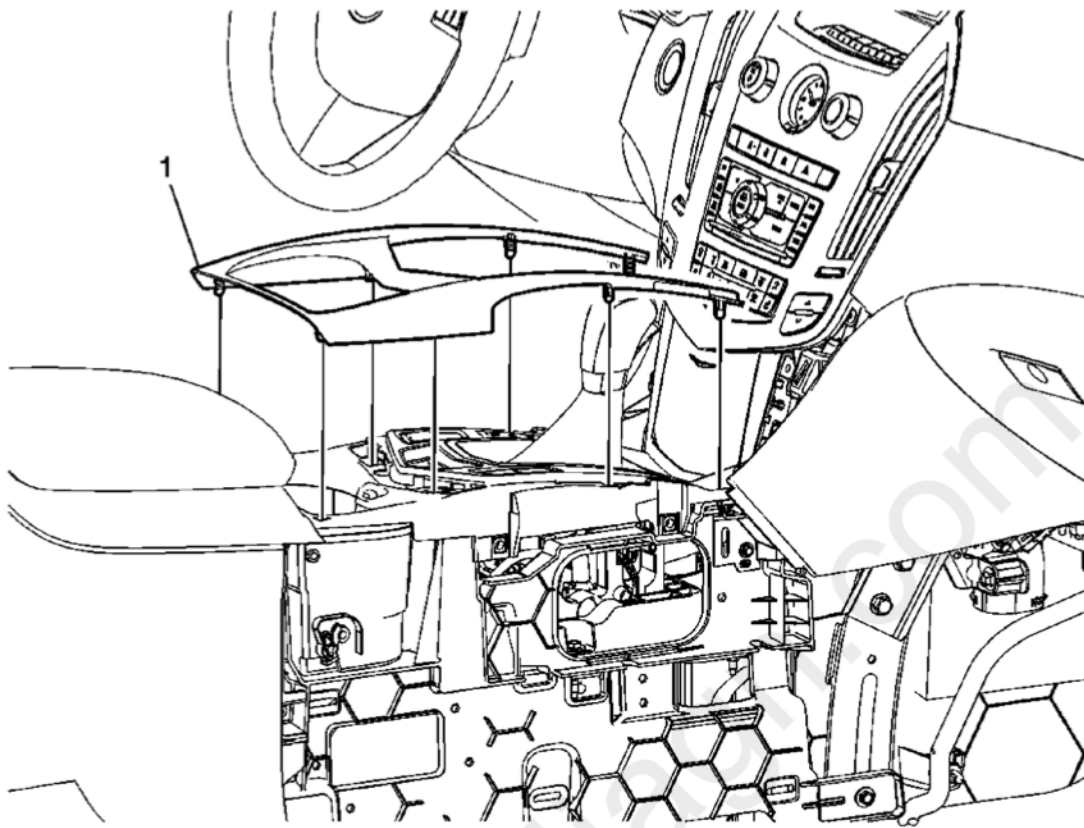

**Fig. 58: Identifying Front Floor Console Applique**  
Courtesy of GENERAL MOTORS CORP.

| Callout                                                                                                                                                                                                                                                             | Component Name                                                                                                                                                                                                         |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Preliminary Procedure:</b><br>Remove the right and left front floor console cover trim plate assemblies. Refer to <b>Front Floor Console Cover Trim Plate Replacement - Right Side</b> and <b>Front Floor Console Cover Trim Plate Replacement - Left Side</b> . |                                                                                                                                                                                                                        |
| 1                                                                                                                                                                                                                                                                   | Front Floor Console Applique<br><b>Procedure:</b><br>Rasp the front floor console applique and pull upward releasing the retainer clips securing the front floor console applique to the front floor console assembly. |

## ROOF CONSOLE REPLACEMENT

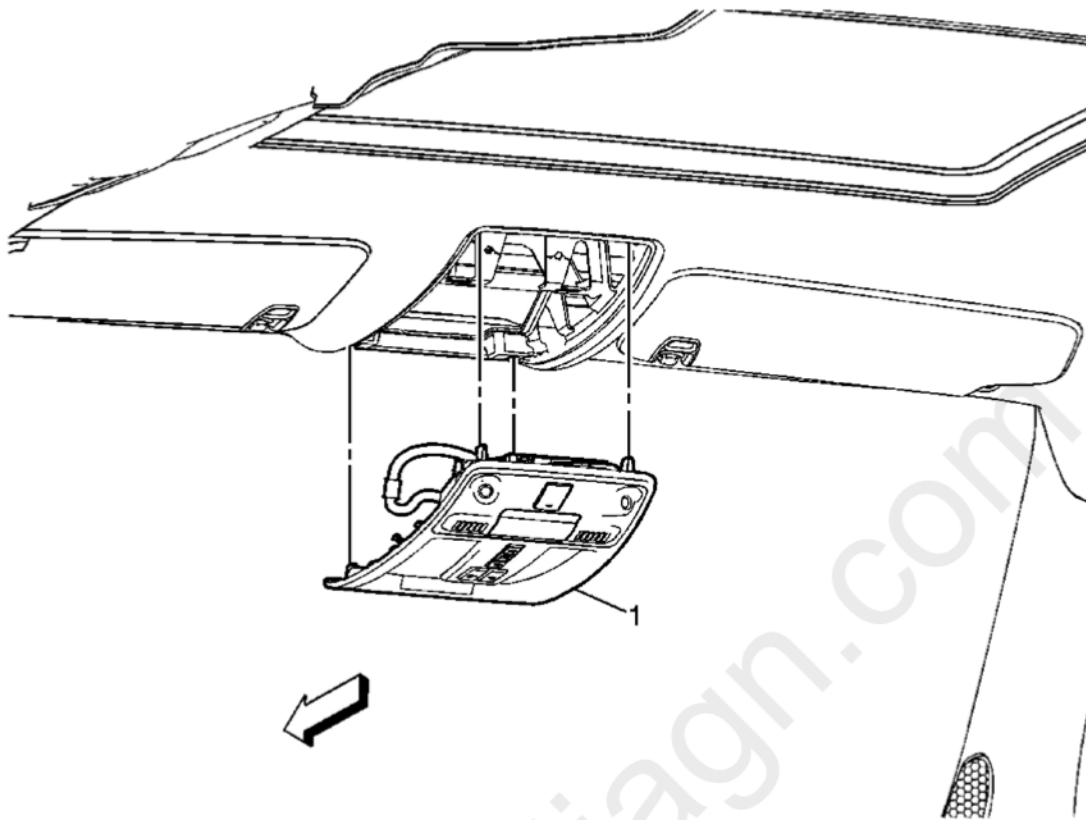**Fig. 59: View Of Roof Console**

Courtesy of GENERAL MOTORS CORP.

| Callout | Component Name                                                                                                                                                                                                                                                                                                                                                                |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Roof Console assembly<br><b>Procedures</b><br><ol style="list-style-type: none"><li>1. Prasp the roof console assembly and pull downward to release the retainer clips securing the roof console assembly to the headliner.</li><li>2. Disconnect the electrical connections.</li><li>3. hen replacing the roof console assembly transfer all necessary components.</li></ol> |

