


Driver door , (L0R)

From September 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Driver door control unit, Data bus diagnostic interface, Fuse holder C

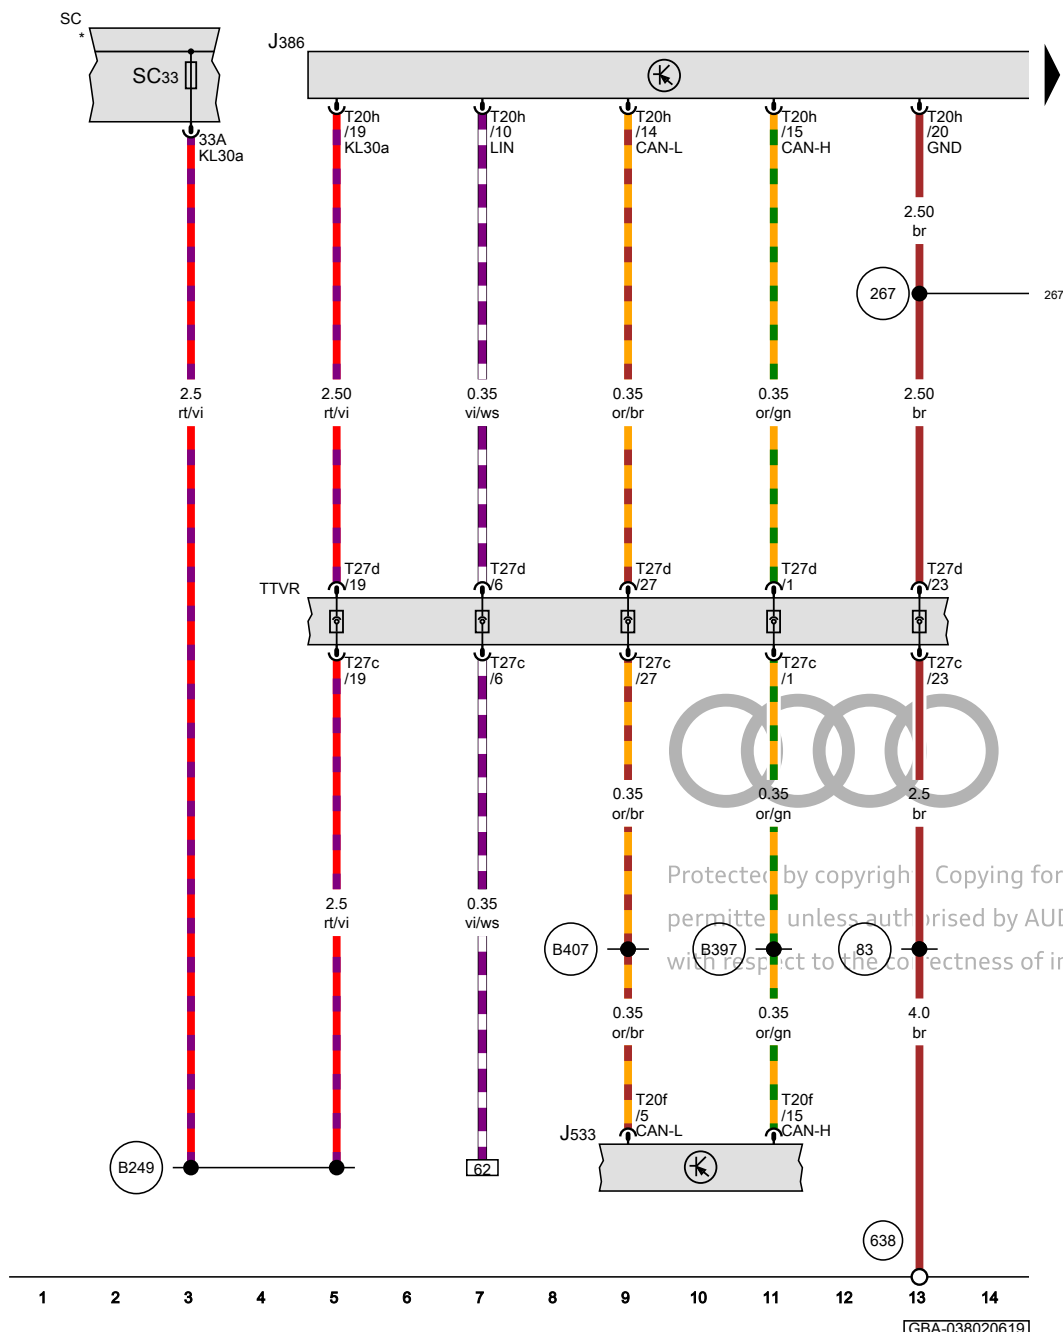

- J386 Driver door control unit
- J533 Data bus diagnostic interface
- SC Fuse holder C
- SC33 Fuse 33 on fuse holder C
- T20f 20-pin connector, red
- T20h 20-pin connector, white
- T27c 27-pin connector, black
- T27d 27-pin connector, black
- TTVR Coupling point for front right door

- 83 Earth connection 1, in front right wiring harness
- 267 Earth connection 2, in drive side door wiring harness
- 638 Earth point, on right A-pillar
- B249 Connection 2 (30, window regulator), in interior wiring harness
- B397 Connection 1 (convenience CAN bus, high), in main wiring harness
- B407 Connection 2 (convenience CAN bus, low), in main wiring harness
- * see applicable current flow diagram for fuses in interior

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

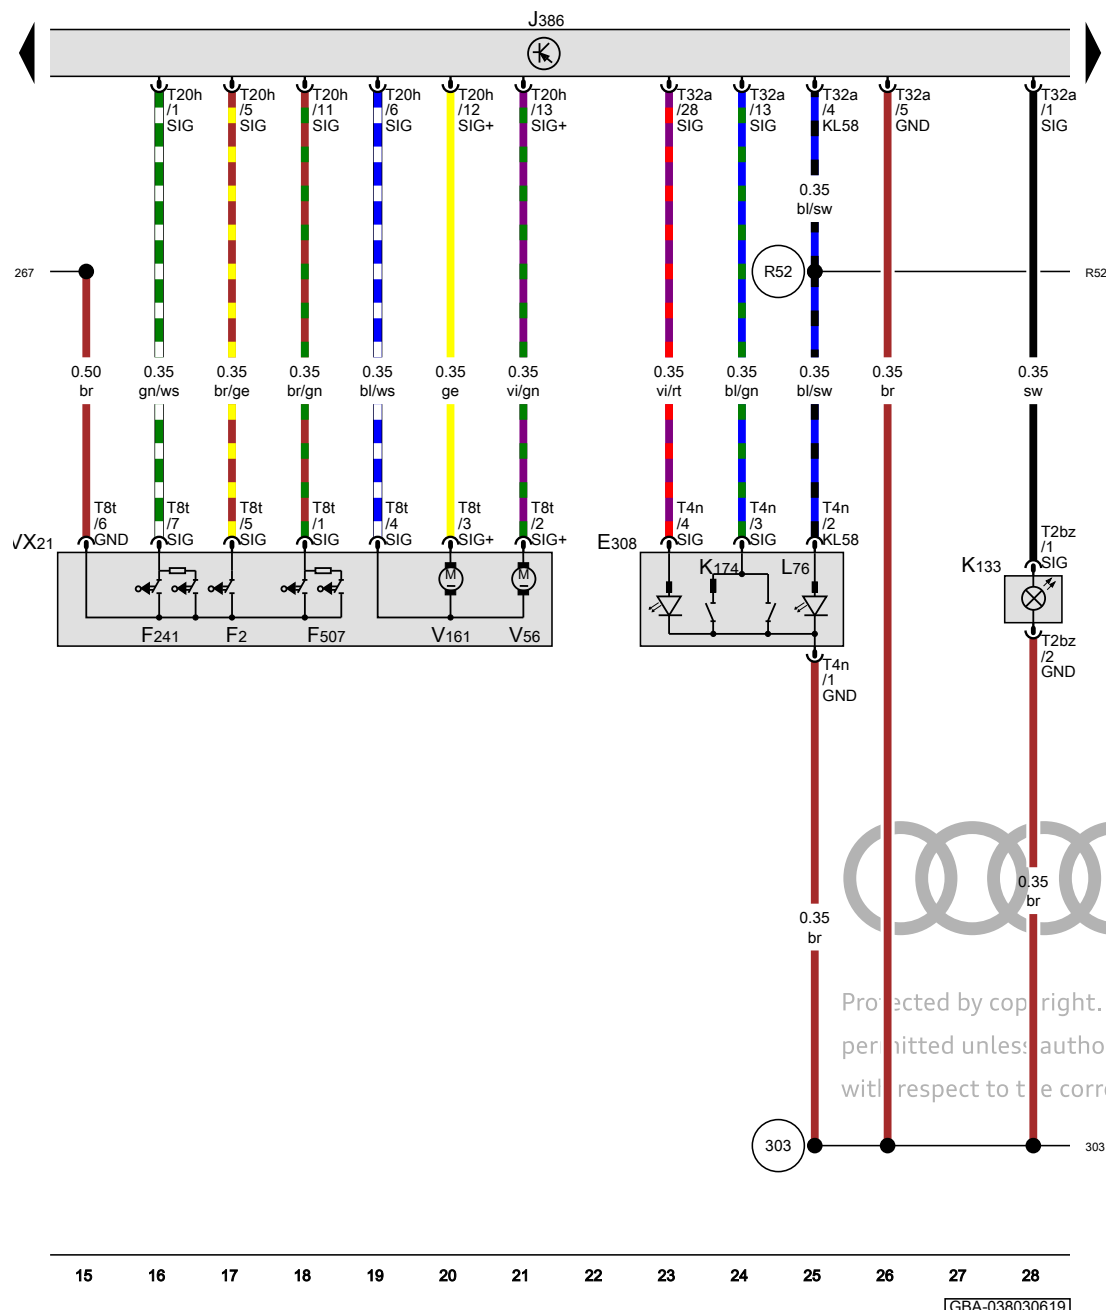


Driver side interior locking button for central locking system, Driver door control unit, Driver door lock unit

- E308 Driver side interior locking button for central locking system
- F2 Driver door contact switch
- F241 Driver side contact switch in lock cylinder
- F507 Driver side central locking actuator
- J386 Driver door control unit
- K133 Central locking SAFELOCK function warning lamp
- K174 Driver side interior locking warning lamp
- L76 Button illumination bulb
- T2bz 2-pin connector, black
- T4n 4-pin connector, blue
- T8t 8-pin connector, black
- T20h 20-pin connector, white
- T32a 32-pin connector, blue
- VX21 Driver door lock unit
- V56 Driver door central locking motor
- V161 Driver door central locking SAFELOCK function motor


- 267 Earth connection 2, in drive side door wiring harness
- 303 Earth connection 3, in drive side door wiring harness
- R52 Connection (58s), in driver side door wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

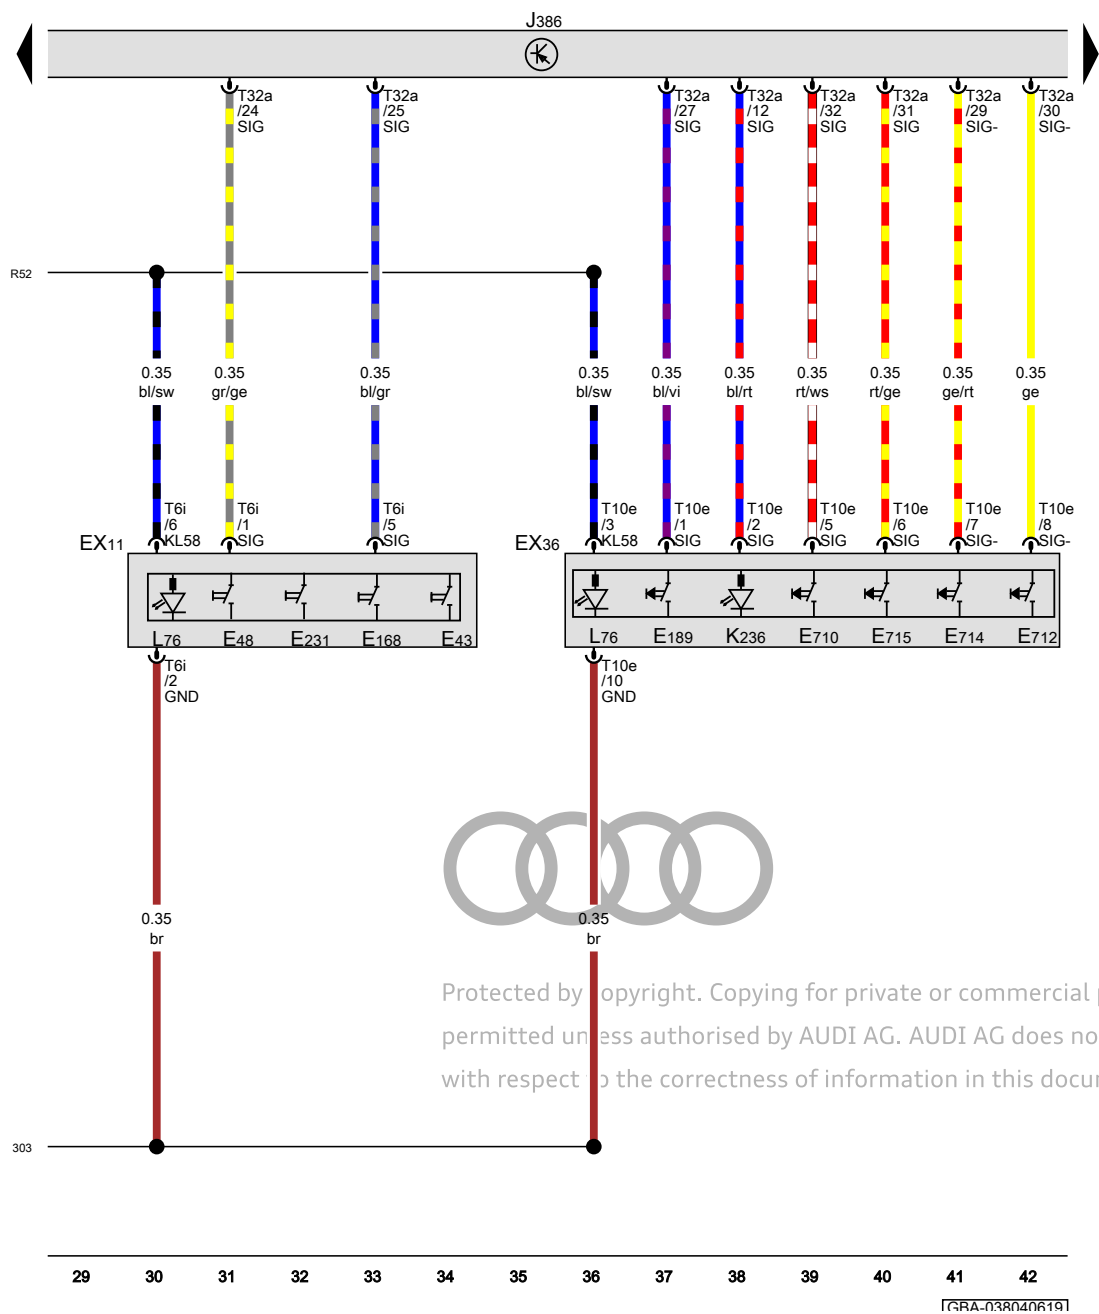

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

16BA-0380406101

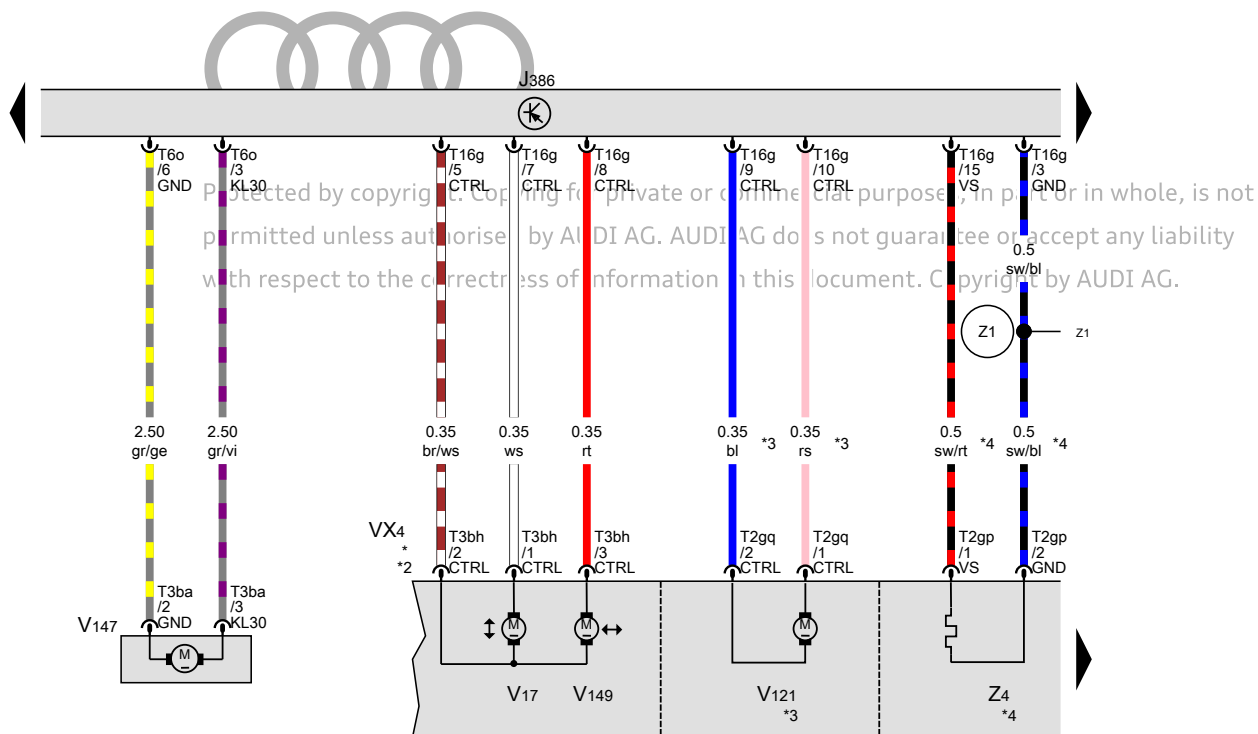


Driver door control unit, Driver side exterior mirror, Driver side window regulator motor

- J386 Driver door control unit
- T2gp 2-pin connector, black
- T2gq 2-pin connector, black
- T3ba 3-pin connector, blue
- T3bh 3-pin connector, black
- T6o 6-pin connector, black
- T16g 16-pin connector, black
- VX4 Driver side exterior mirror
- V17 Driver side mirror adjustment motor 2
- V121 Driver side fold-in mirror motor
- V147 Driver side window regulator motor
- V149 Driver side mirror adjustment motor
- Z4 Heated exterior mirror on driver side

Z1 Connection 1, in mirror adjustment/heating wiring harness

- * Pre-wired component
- *2 see applicable current flow diagram for lane change assist
- *3 For models with electric folding exterior mirrors
- *4 For models with heated exterior mirrors

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

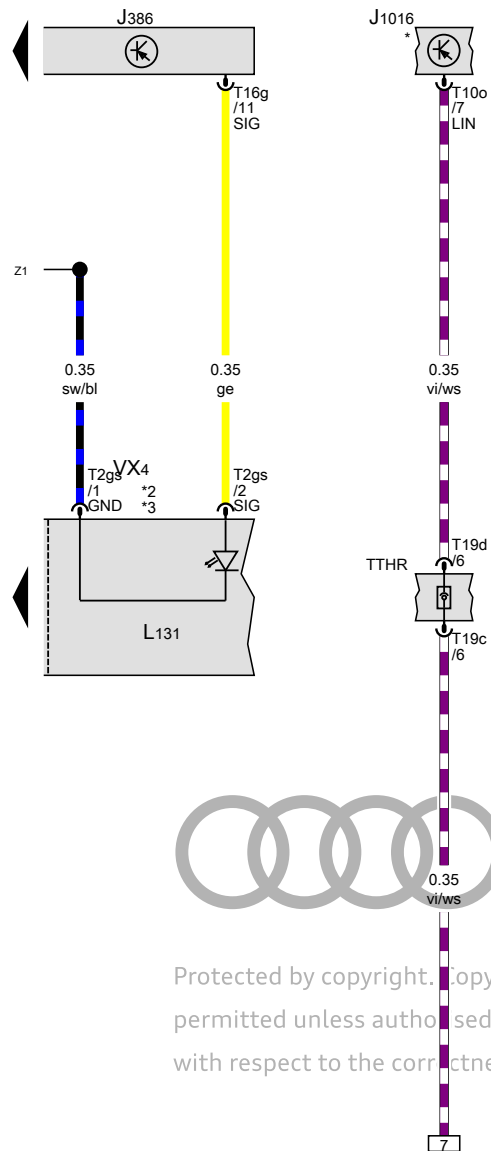

Driver door control unit, Control unit with rear driver side window regulator motor, Driver side exterior mirror

- J386 Driver door control unit
- J1016 Control unit with rear driver side window regulator motor
- L131 Driver side turn signal repeater bulb
- T2gs 2-pin connector, black
- T10o 10-pin connector, black
- T16g 16-pin connector, black
- T19c 19-pin connector, black
- T19d 19-pin connector, black
- TTHR Coupling point for rear right door
- VX4 Driver side exterior mirror

Z1 Connection 1, in mirror adjustment/heating wiring harness

- * see applicable current flow diagram
- *2 Pre-wired component
- *3 see applicable current flow diagram for lane change assist



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink