

ARTICLE BEGINNING 

DEFOGGERS 

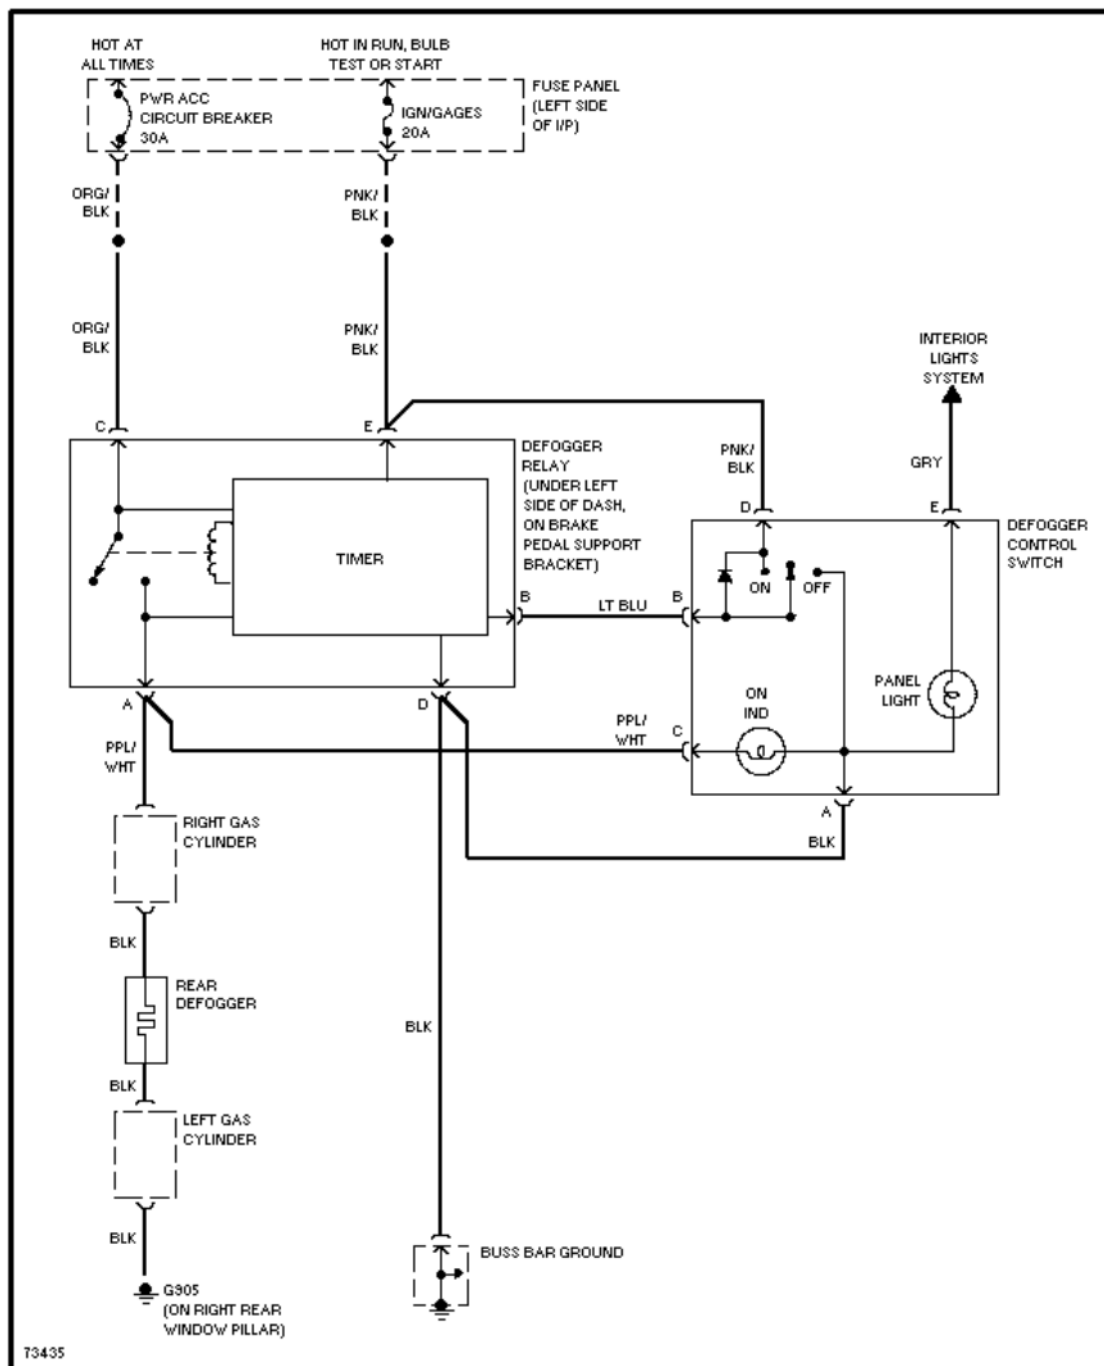


Fig. 1: Defogger Circuit

HORN

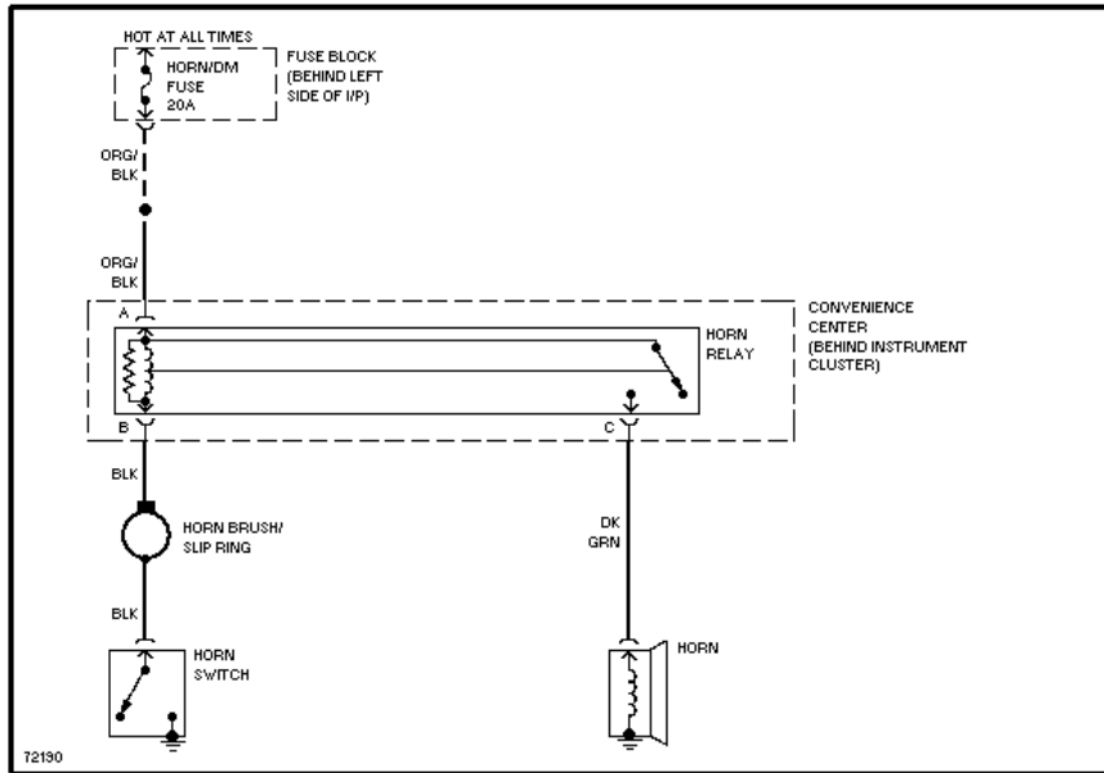


Fig. 2: Horn Circuit

POWER DOOR LOCKS

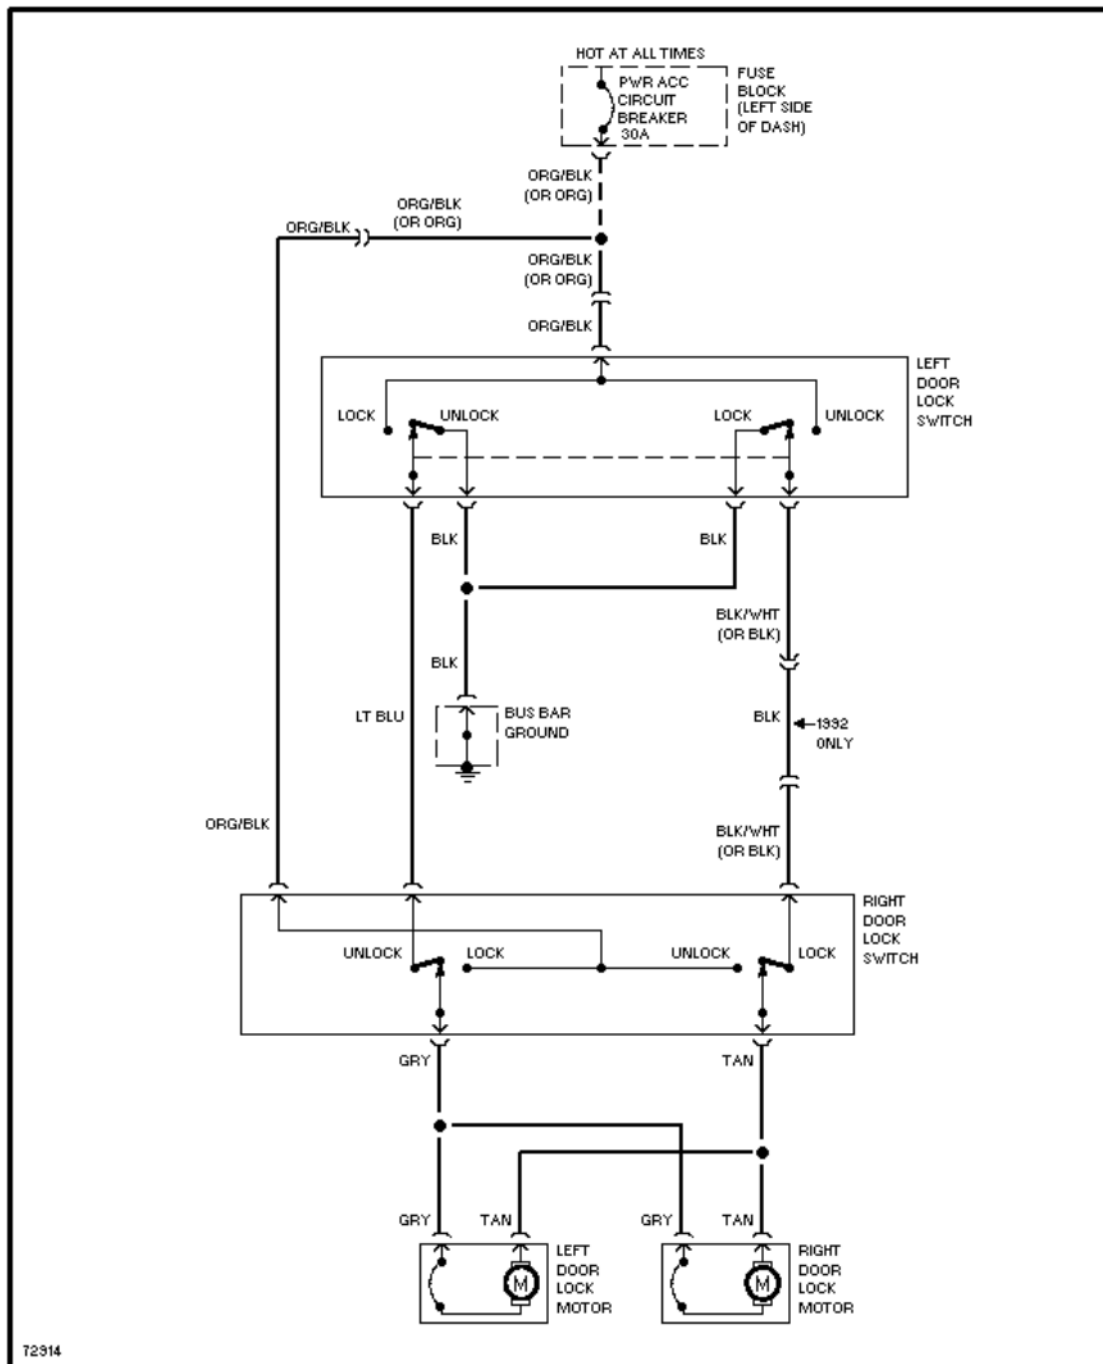


Fig. 3: Power Door Lock Circuit, 2 Door

POWER WINDOWS

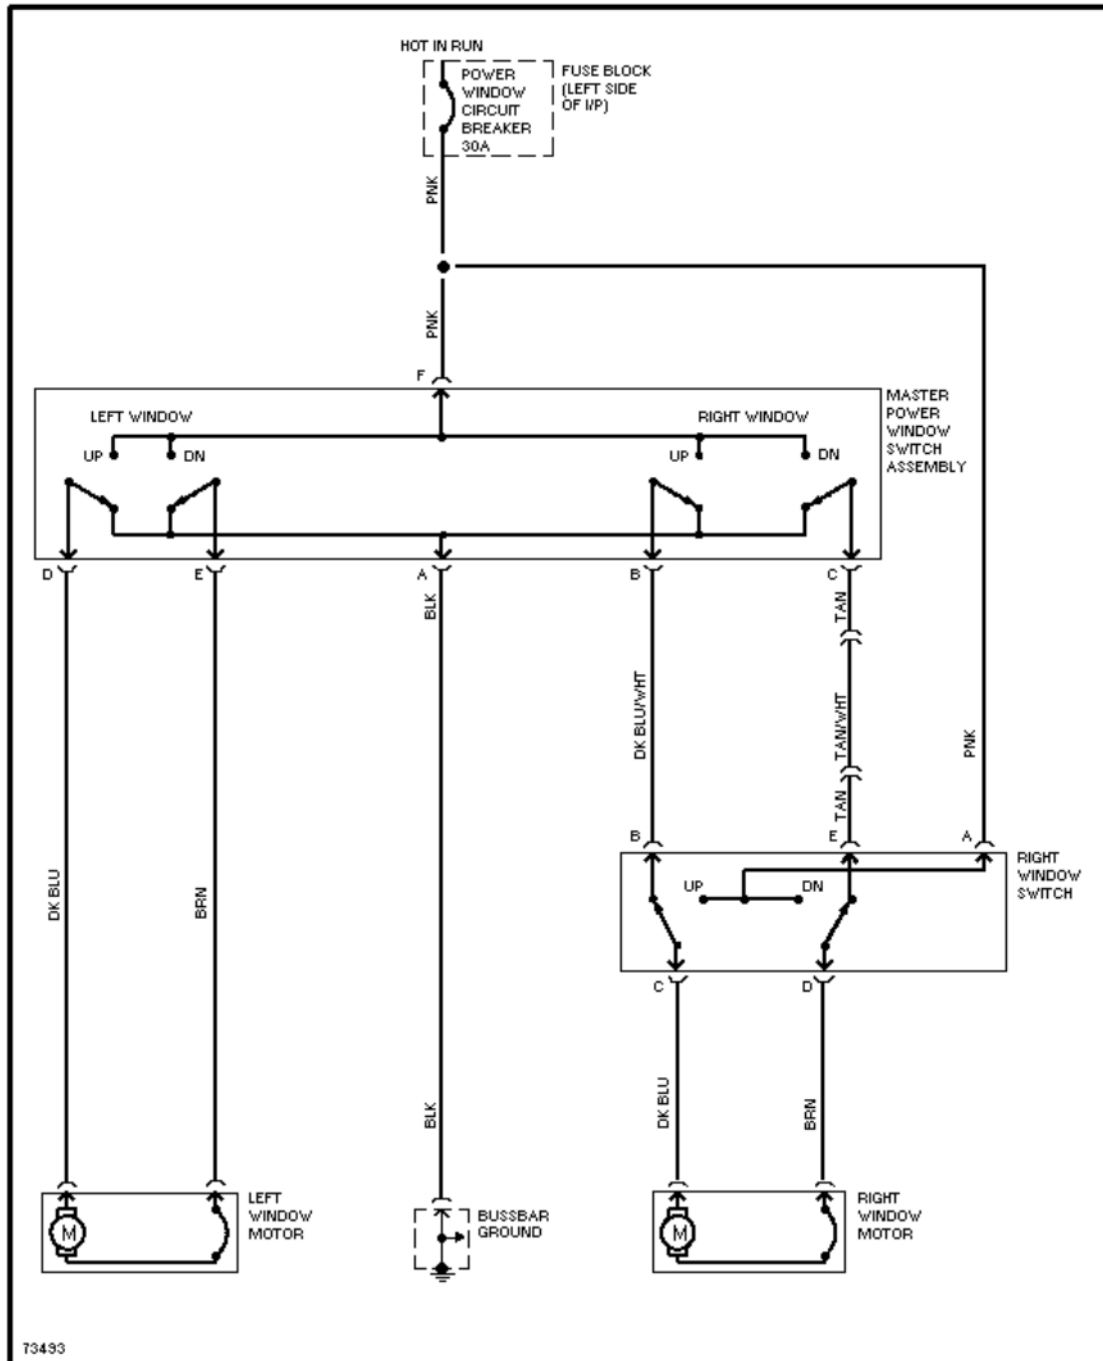
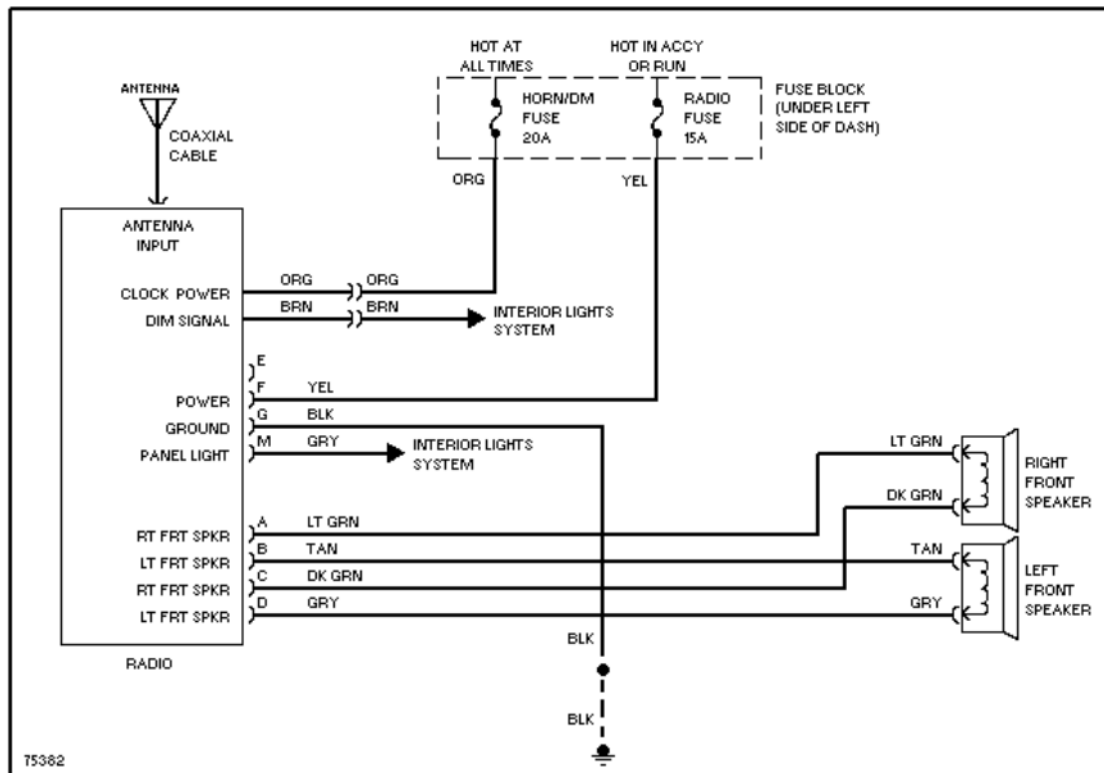


Fig. 4: Power Window Circuit**RADIO** **Fig. 5: 2-Speaker System Circuit**

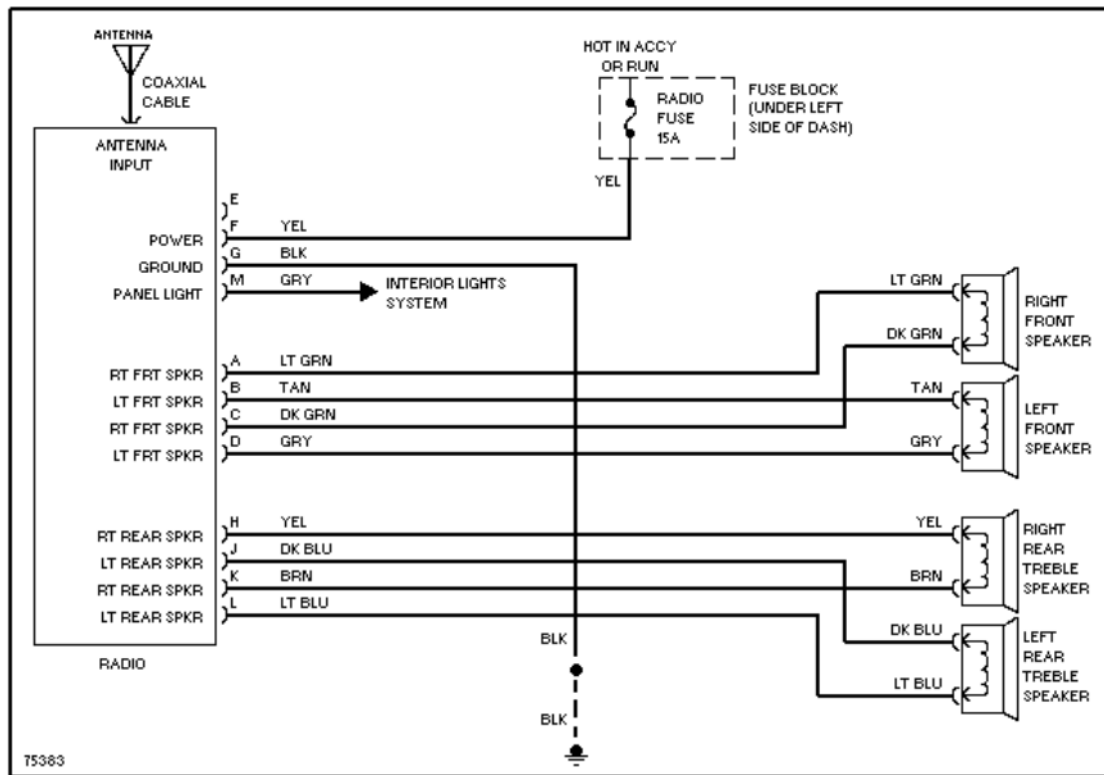


Fig. 6: 4-Speaker System Circuit

STARTING/CHARGING 

cardiagn.com

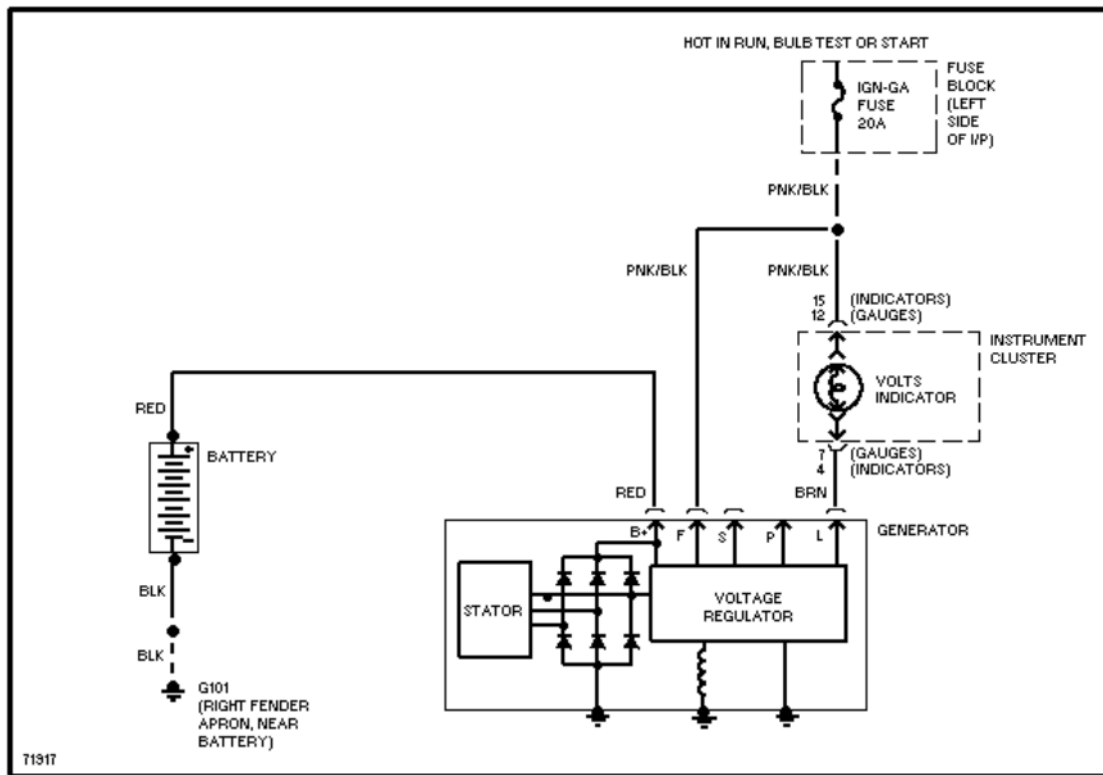


Fig. 7: Charging Circuit

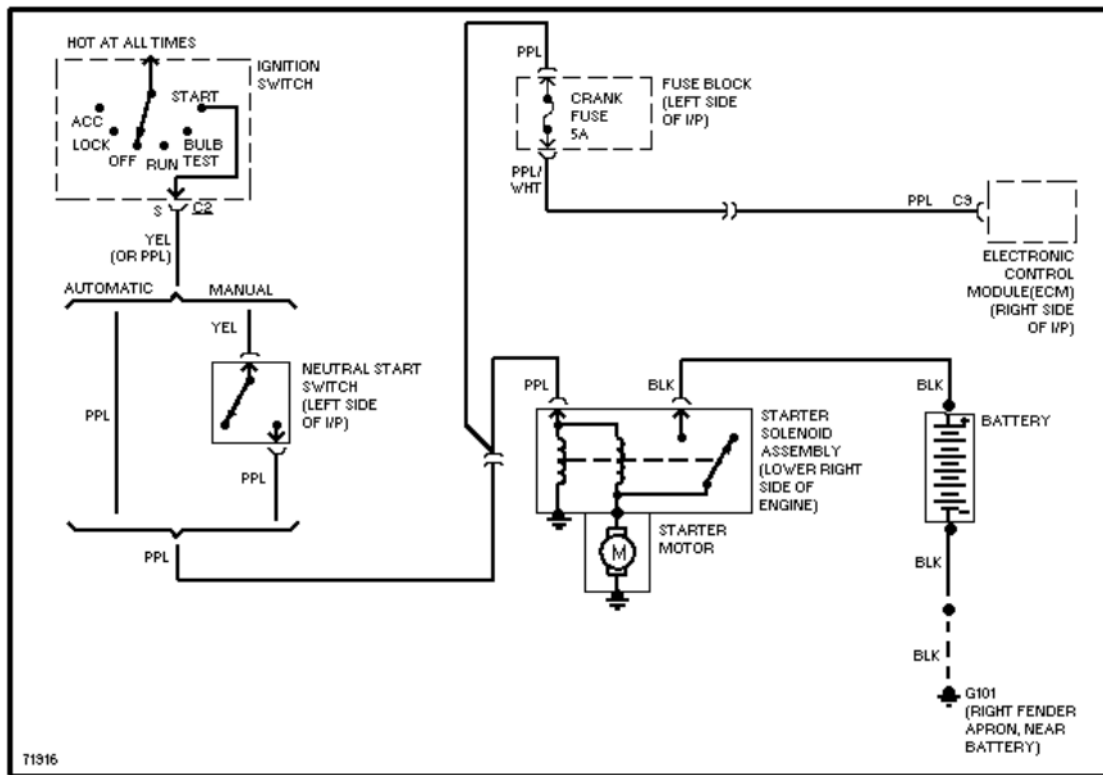


Fig. 8: Starting Circuit

TRUNK, TAILGATE, FUEL DOOR 

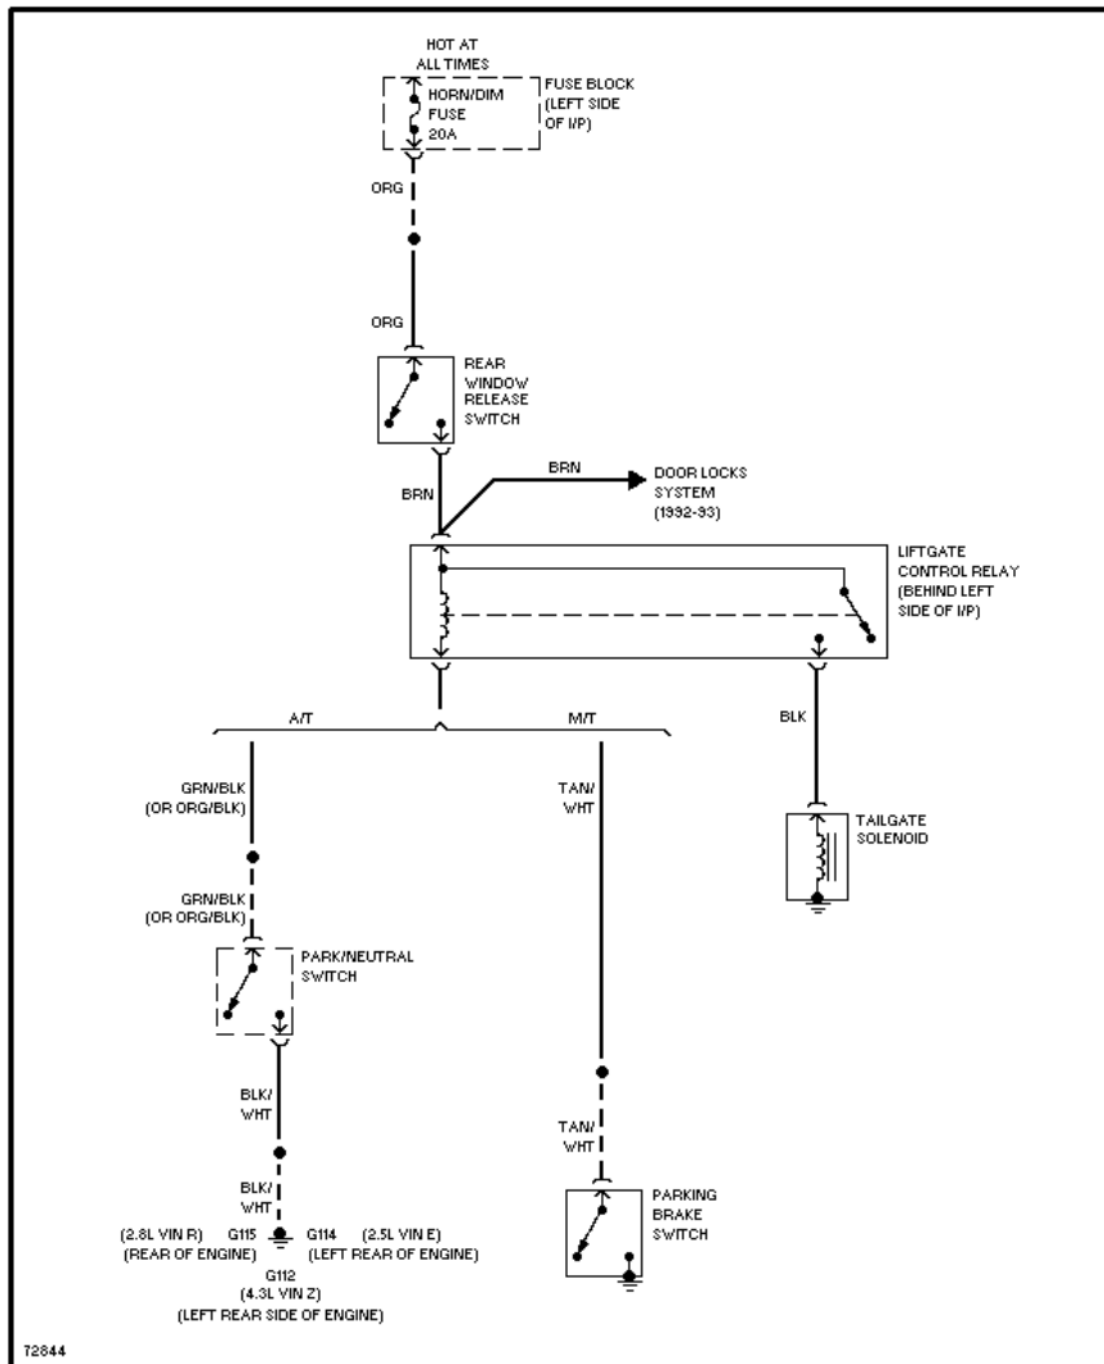


Fig. 9: Trunk, Tailgate, Fuel Door Circuits

WIPER/WASHER

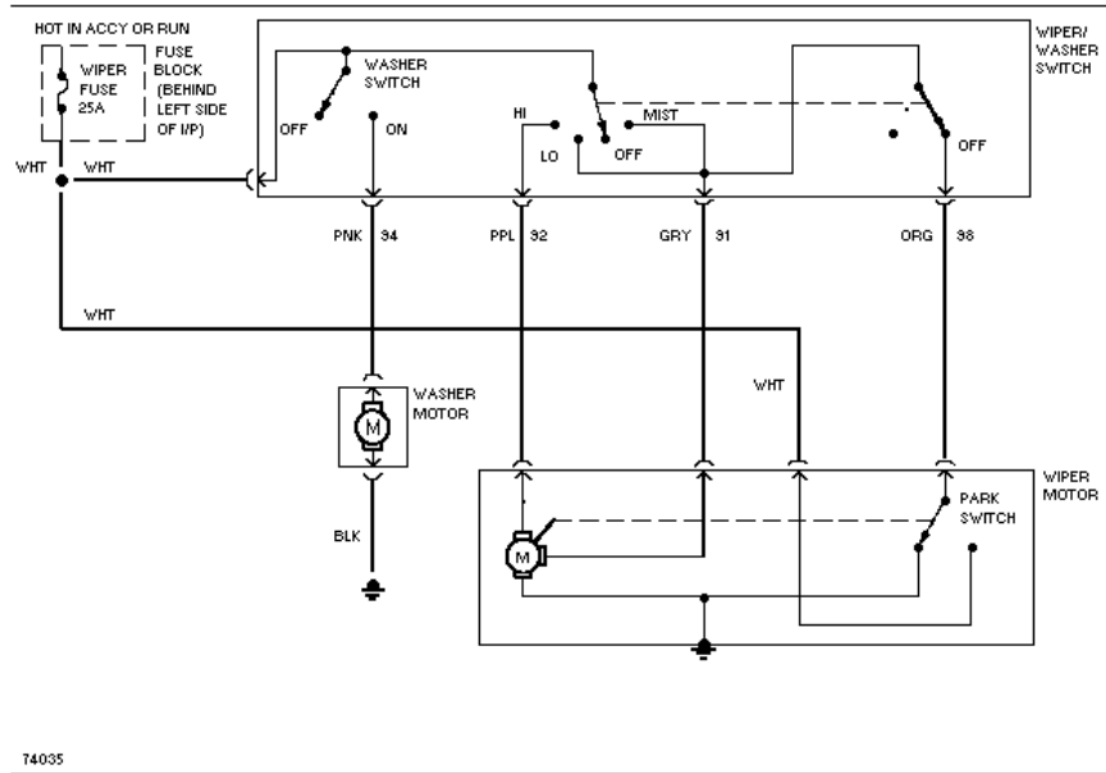


Fig. 10: 2-Speed Wiper/Washer Circuit



12/3/2009

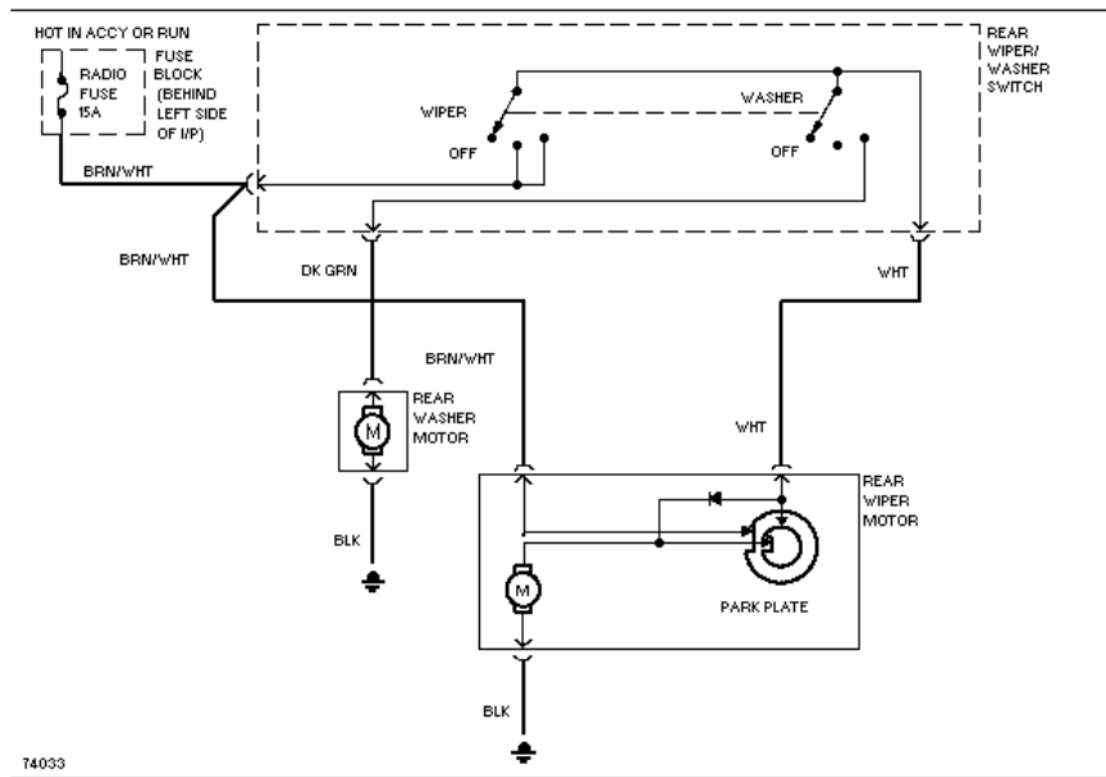


Fig. 12: Rear Wiper/Washer Circuit

© 2008 Mitchell Repair Information Co., LLC.

ARTICLE BEGINNING

IDENTIFICATION

COMPONENT LOCATION MENU

Tips

[Click a link to view tip](#)



Tech1

Question: component location menu

Tech1

Question: figure number (location) ?

COMPONENT LOCATIONS


Component	Figure No. (Location)
A/C Comp Relay	2 (E 7)
Alternator	1 (B 3)
Back-Up Light Switch	7 (C 25)
Battery	1 (A,1-2)
Beam Select Switch	6 (E 23)
Blower Switch (W/O A/C)	5 (E 16)
Brake Switch	3 (E 10)
Cargo Lt Switch	6 (A 21)
Cigarette Lighter	7 (E 25)
Clutch Switch	1 (B 1)
Control Relay	7 (C 25)
Convenience Center	7 (D 25-26)
Courtesy Light	6 (A 22)
Cruise Control Module	3 (E 8)
Cruise Control Switch	3 (E 11)
Defog Control Switch	7 (C 24)
Defog Relay	7 (B 24)
DIR Light Switch	6 (C-D 20)
Dome Light	6 (A 20, B-C 20)
Electronic Control Module (ECM) (2.5L)	2 (A 4-7)
Electronic Control Module (ECM) (2.8L, 4.3L)	3 (A 8-11)
Est Distributor (2.5L)	2 (C-D 5-7)
Est Distributor (2.8L, 4.3L)	3 (D-E 9-11)
Fuel Pump Relay (2.5L)	2 (B 4)
Fuel Pump & Sender	7 (C 27)
Fuse Block	4 (B-D 13-14)
4WD Indicator	7 (C-E 24)
Glove Box Light	7 (E 25)

Component	Figure No. (Location)
Hazard Flasher	7 (D 26)
Headlight Switch	6 (E 20)
High Blower Relay	2 (E 4)
Horn Relay	7 (D 26)
Horn Switch	6 (D 20)
I/P Compt Lt	6 (B 20)
Ign Key Switch	7 (E 27)
Ignition Switch	4 (A 12)
Inside Rear View Mirror Light	6 (E 21)
Instrument Cluster (Gauges)	5 (C-D 18-19)
Instrument Cluster (STD)	5 (A-C 18-19)
Left Door Lock Sw	7 (A 25-26)
Left Door Switch	6 (A-B 21-22, A 23)
Left Window Switch	7 (A-B 25-26)
Liftgate Switch	7 (C 25)
Oil Pres Rly	5 (D-E 19)
Oil Pres Sens/Sw	5 (D 17)
Panel Dimmer Sw	6 (D-E 23)
Park/Neutral Switch	7 (C 26)
Redundant Fuel Pump Rly	3 (B-C 8)
Selector Switch	2 (C-D 4)
Starter	1 (A-B 3)
Stop Light Switch	6 (D 21)
Trailer Connection	7 (E 24)
Vehicle Speed Sens (VSS)	5 (B 16)
Washer Motor (W/Delay)	6 (C 22)
Washer Motor (W/O Delay)	1 (E 2)
Water Temp Switch	5 (E 19)
Wiper Motor (w/Delay)	1 (C-D 2-3)
Wiper Motor (w/o Delay)	1 (E 2)
Wiper/Washer Switch (W/ Delay)	6 (B-C 23)
Wiper/Washer Switch (W/O Delay)	6 (D 23)

WIRING DIAGRAMS

COMPONENT LOCATOR:

A/C COMP RLY	E 7
ALTERNATOR	B 3
BACK-UP LT SW	C 25
BEAM SELECT SW	E 23
BLOWER SW (W/O A/C)	E 16
BRAKE SWITCH	E 10
CARGO LT SWITCH	A 21
CIG LIGHTER	E 25
CLUTCH SWITCH	B 1
CONTROL RELAY	C 25
CONVENIENCE CENTER	D 25-26
COURTESY LIGHT	A 22
CRUISE CONTROL MODULE	E 8
CRUISE CONTROL SWITCH	E 11
DEFOG CONTROL SWITCH	C 24
DEFOG RELAY	B 24
DIR LIGHT SW	C-D 20
DOME LIGHT	A 20, B-C 20
ECM (2.5L)	A 4-7
ECM (2.8L/4.3L)	A 8-11
EST DISTR (2.5L)	C-D 5-7
EST DISTR (2.8L/4.3L)	D-E 9-11
FUEL PUMP RLY (2.5L)	B 4
FUEL PUMP RLY (2.8L/4.3L)	B 8
FUEL PUMP & SENDER	C 27
FUSE BLOCK	B-D 13-14
4WD INDICATOR	C-E 24
GLOVE BOX LIGHT	E 25
HAZ FLASHER	D 26
HEADLT SWITCH	E 20
HI BLOWER RELAY	E 4
HORN RELAY	D 26
HORN SWITCH	D 20
I/P COMPT LT	B 20
IGN KEY SWITCH	E 27
IGNITION SWITCH	A 12
INSIDE REAR VIEW MIRROR LT	E 21
INST CLSTR (GA)	C-D 18-19
INST CLSTR (IND)	A-C 18-19
LEFT DOOR LOCK SW	A 25-26
LEFT DOOR SW	A-B 21-22/A 23
LEFT WINDOW SWITCH	A-B 25-26
LIFTGATE SWITCH	C 25
OIL PRES RLY	D-E 19
OIL PRES SENS/SW	D 17
PANEL DIMMER SW	D-E 23
PARK/NEUTRAL SW	C 26
REDUNDANT FUEL PUMP RLY	B-C 8
SELECTOR SW	C-D 4
STARTER	A-B 3
STOP LIGHT SW	D 21
TRAILER CONN	E 24
VEHICLE SPEED SENS (VSS)	B 16
WASHER MTR (W/O DELAY)	C 22
WASHER MTR (W/ DELAY)	E 19
WIPER MTR (W/ DELAY)	C-D 2-3
WIPER MTR (W/O DELAY)	E 2
WIPER/WASHER SWITCH	B-C 23
WIPER/WASHER SWITCH (W/O DELAY)	D 23

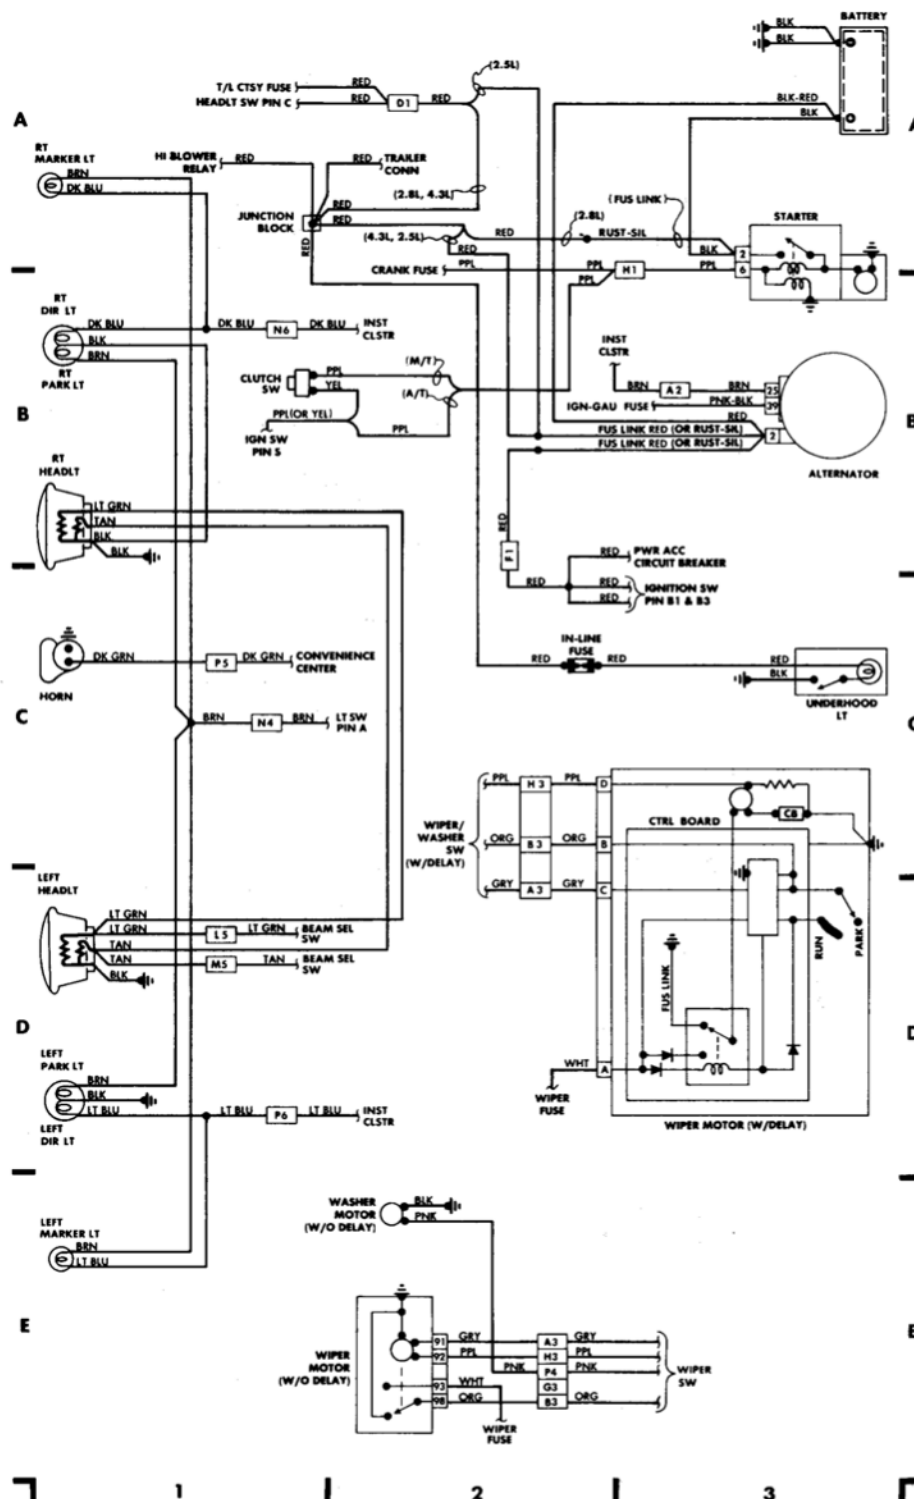

96593

Fig. 1: Engine Compartment & Headlights



12/3/2009



12/3/2009

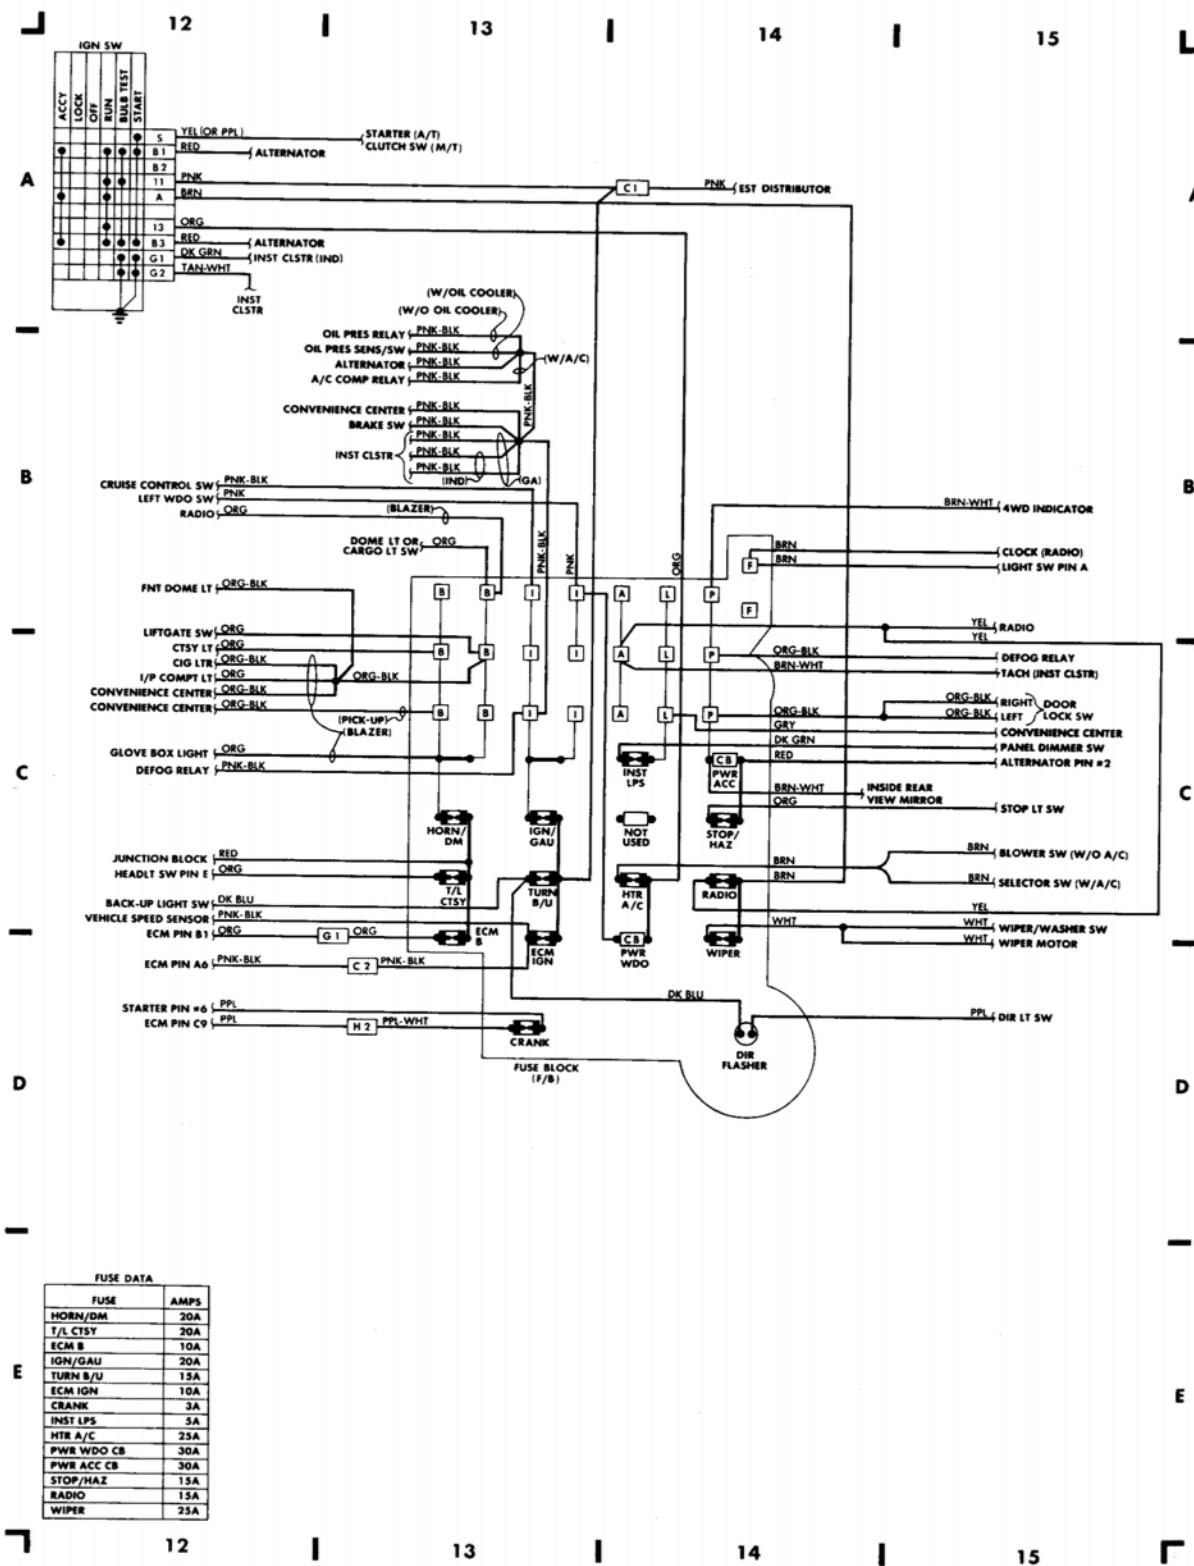


Fig. 4: Fuse Block



12/3/2009



12/3/2009

© 2008 Mitchell Repair Information Co., LLC.