

Instrument Panel and Console Trim

cardiagn.com

Repair Instructions

cardiagn.com

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Steering Column Opening Filler Replacement





cardiagn.com

[Click here for full size](#)


Callout	Component Name
1	Steering Column Opening Filler Screw (Qty:â€%02)
2	Steering Column Opening Filler Assembly

Related Part Information

Part Name	Catalog Name	Part Code
Instrument Panel Steering Column Opening Filler FILLER,I/P STRG COL OPG 2850A		
Instrument Panel Steering Column Opening Filler FILLER,I/P STRG COL OPG 2875A		

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Steering Column Upper Trim Cover Replacement

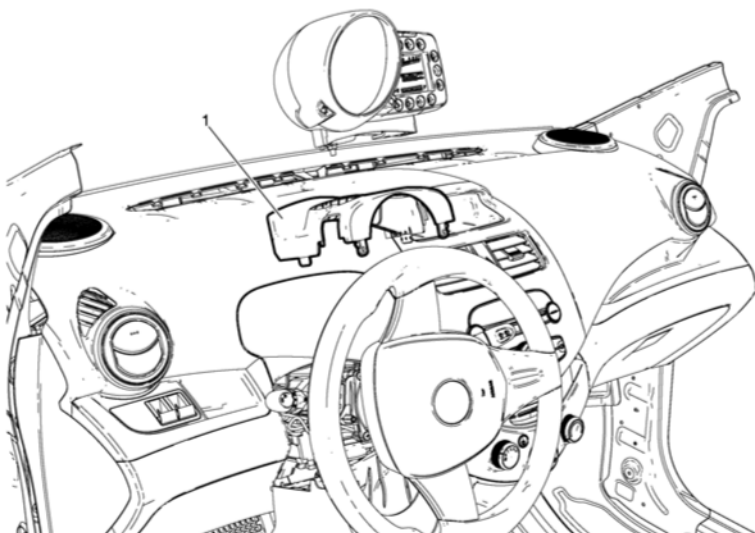




cardiagn.com

[Click here for full size](#)

Callout	Component Name
Preliminary Procedures	
1. Remove the steering column lower cover. Refer to Steering Column Lower Trim Cover Replacement .	
2. Remove the cluster. Refer to Instrument Cluster Replacement .	
1	Steering Column Upper Trim Cover Procedure Unclip the steering column upper trim cover from the steering column lower trim cover.

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Steering Column Lower Trim Cover Replacement

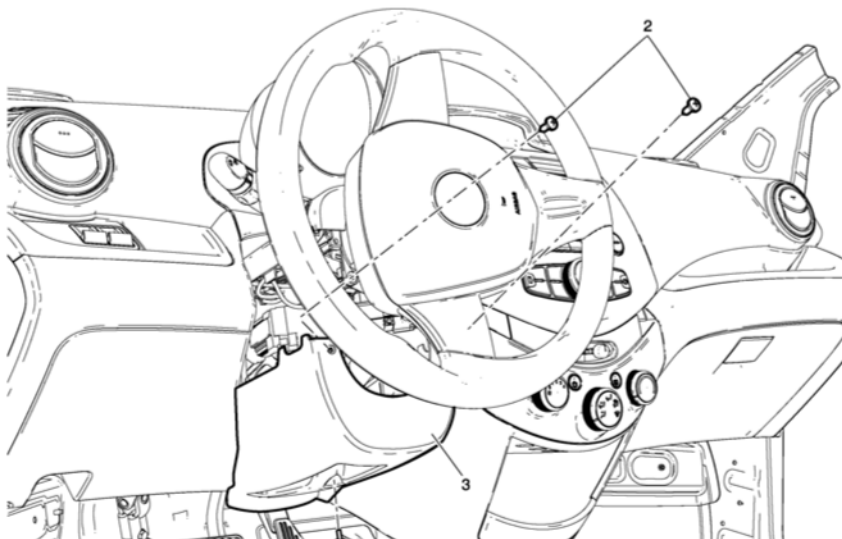



cardiagn.com

[Click here for full size](#)


Callout	Component Name
1	Steering Column Lower Trim Cover Screw (Qty:â€™%01)
2	Steering Column Lower Trim Cover Screw (Qty:â€™%02) Procedure Turn the steering wheel until the bolts are reachable.
3	Steering Column Lower Trim Cover

Related Part Information

Part Name	Catalog Name	Part Code
Instrument Panel Steering Column Lower Trim Cover	COVER,I/P STRG COL LWR TR	2509A
Instrument Panel Steering Column Lower Trim Cover	COVER,I/P STRG COL LWR TR	2509B
Steering Column Lower Trim Cover	COVER,STRG COL LWR TR	3789A
Steering Column Lower Trim Cover	COVER,STRG COL LWR TR	3790A

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Instrument Panel Outer Trim Cover Replacement

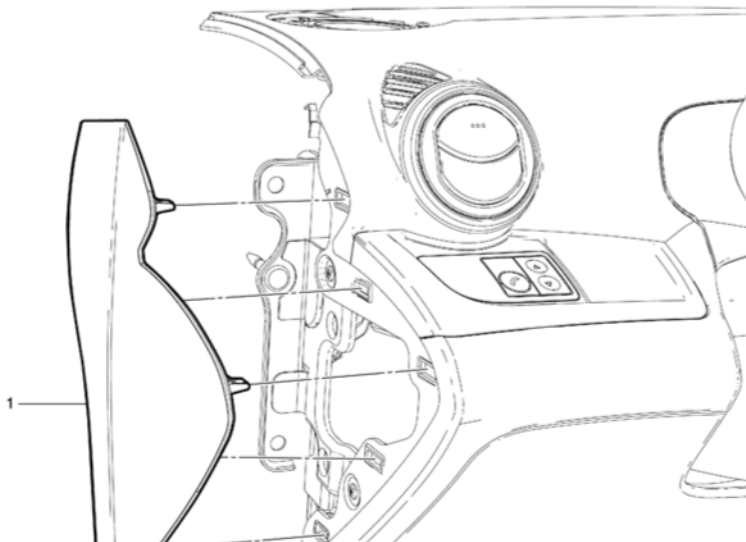




cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Instrument Panel Outer Trim Cover Procedure If the instrument panel airbag switch is equipped, disconnect the electrical connector. Danger: Verify the proper installation of the airbag disable switch. Ensure the airbag disable switch is functioning properly by activating and deactivating the switch. If the airbag disable switch is not properly installed, and its function is not verified, the airbag may discharge improperly and cause personal injury or death.

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Instrument Panel Compartment Replacement

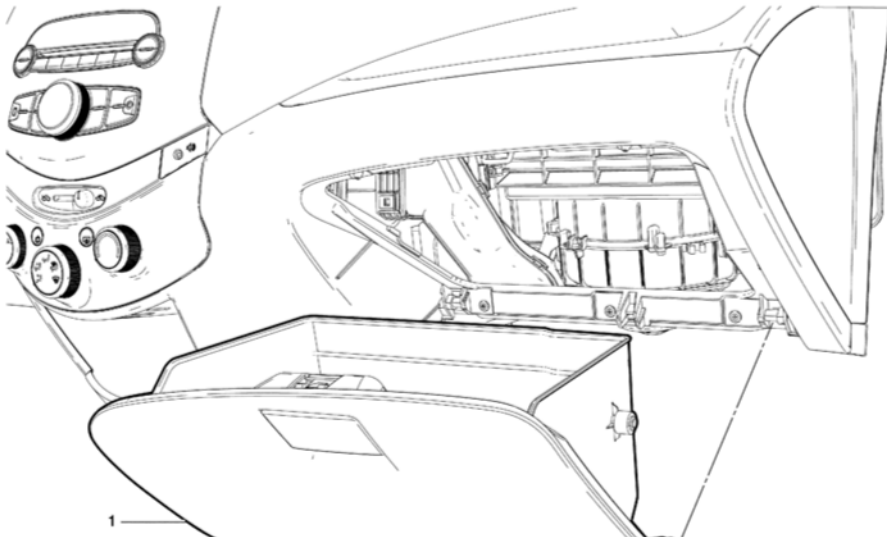




cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Instrument Panel Compartment Assembly Procedure Pull out the instrument panel compartment to disconnect the hinge.

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Instrument Panel Center Molding Replacement

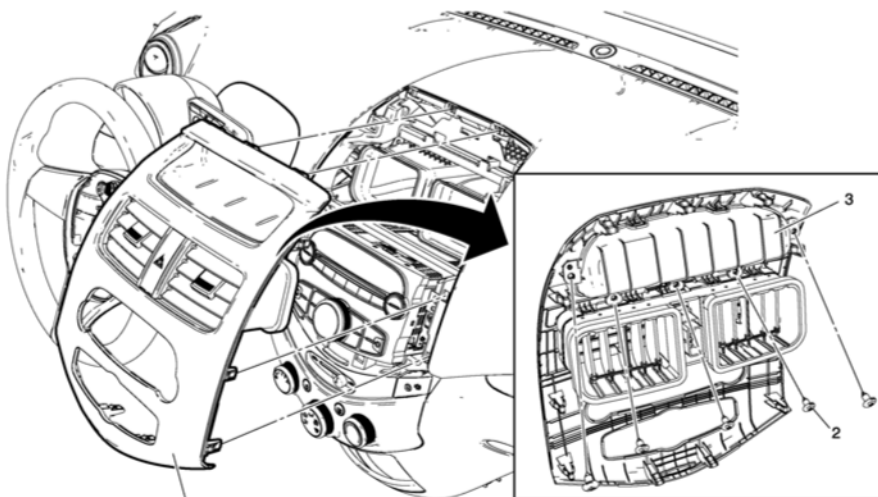

[Click here for full size](#)


Callout	Component Name
1	Instrument Panel Center Molding Assembly Procedure 1. Carefully pry off the bottom of trim panel using the trim remover. 2. Disconnect the hazard lamp switch electrical connector.
2	Instrument Panel Tray Screw (Qty:â€%5)
3	Instrument Panel Tray

Related Part Information

Part Name	Catalog Name	Part Code
Instrument Panel Center Molding	MOLDING,I/P CTR 1979A	
Instrument Panel Center Molding	MOLDING,I/P CTR 1979B	

- 1. BODY HARDWARE AND TRIM
- 2. INSTRUMENT PANEL AND CONSOLE TRIM
- 3. REPAIR INSTRUCTIONS
- 4.

Instrument Panel Center Molding Replacement (PMC)

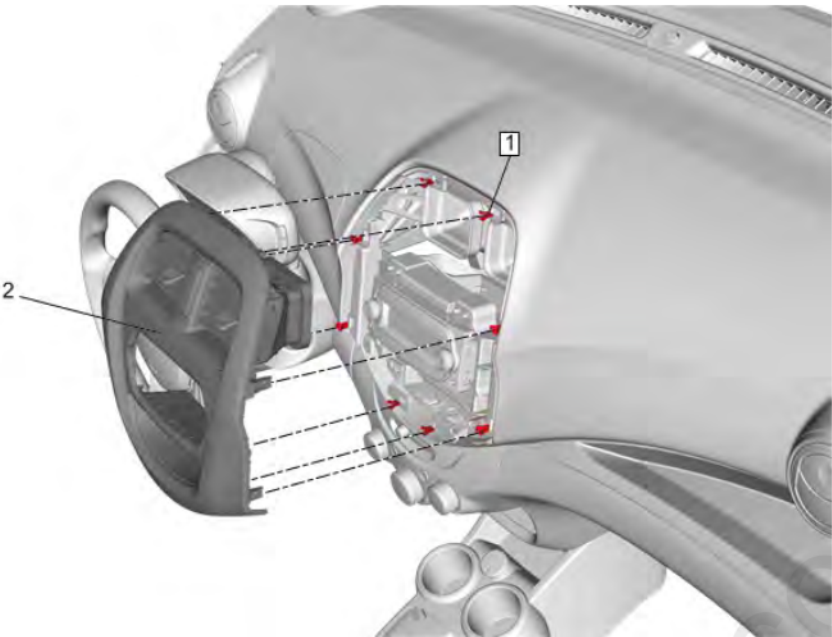


[Click here for full size](#)

Callout	Component Name
1	Instrument Panel Center Molding Clip [8>x]
2	Instrument Panel Center Molding Assembly
	Procedure
	1. Carefully pry off the bottom of trim panel using the trim remover.
	2. Disconnect the hazard lamp switch electrical connector.

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Instrument Panel Lower Trim Panel Replacement

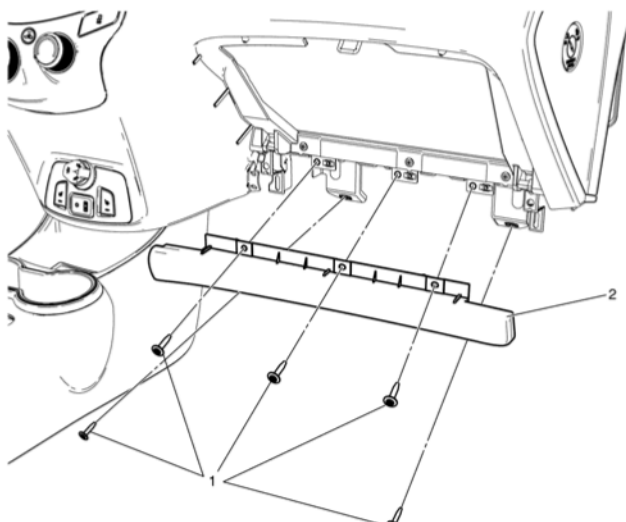

cardiagn.com

[Click here for full size](#)


Callout	Component Name
Preliminary Procedure	
Remove the instrument panel compartment. Refer to Instrument Panel Compartment Replacement .	
1	Instrument Panel Lower Trim Panel Screw (Qty:â€%5)
2	Instrument Panel Lower Trim Panel

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Instrument Panel Assembly Replacement

Removal Procedure


1. Disable the SIR system. Refer to [SIR Disabling and Enabling](#).
2. Remove the floor console assembly. Refer to [Front Floor Console Replacement](#).
3. Remove the radio assembly. Refer to [Radio Replacement](#).
4. Remove the heater and air conditioning control. Refer to [Heater and Air Conditioning Control with Cable Control Replacement](#).
5. Remove the steering column lower trim cover. Refer to [Steering Column Lower Trim Cover Replacement](#).
6. Remove the instrument cluster. Refer to [Instrument Cluster Replacement](#).
7. Remove both instrument panel outer trim covers. Refer to [Instrument Panel Outer Trim Cover Replacement](#).
8. Remove the instrument panel compartment. Refer to [Instrument Panel Compartment Replacement](#).
9. Remove the windshield garnish molding. Refer to [Windshield Garnish Molding Replacement](#).
10. Remove the instrument panel multifunction switch. Refer to [Instrument Panel Multifunction Switch Replacement](#).
11. Remove the steering column opening filler. Refer to [Steering Column Opening Filler Replacement](#).

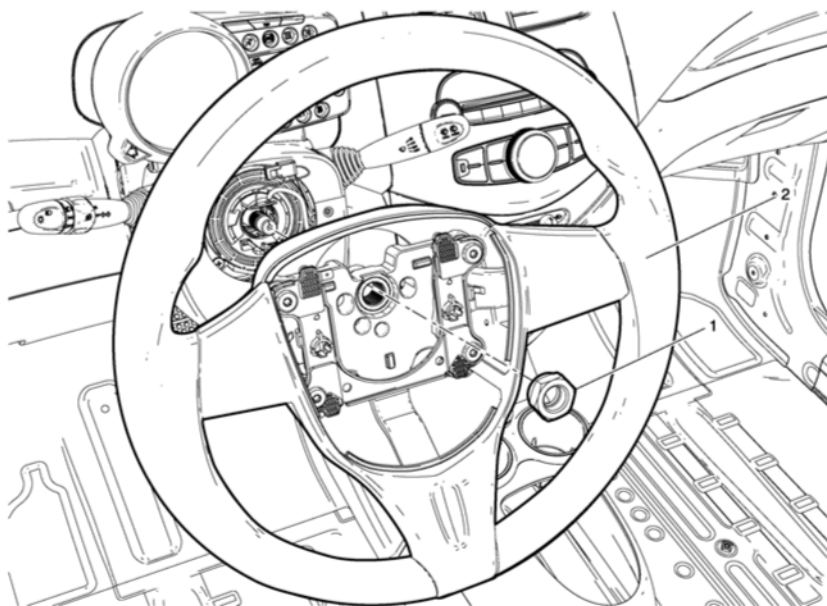

cardiagn.com

[Click here for full size](#)


13. Remove the steering wheel. Refer to [Steering Wheel Replacement](#).

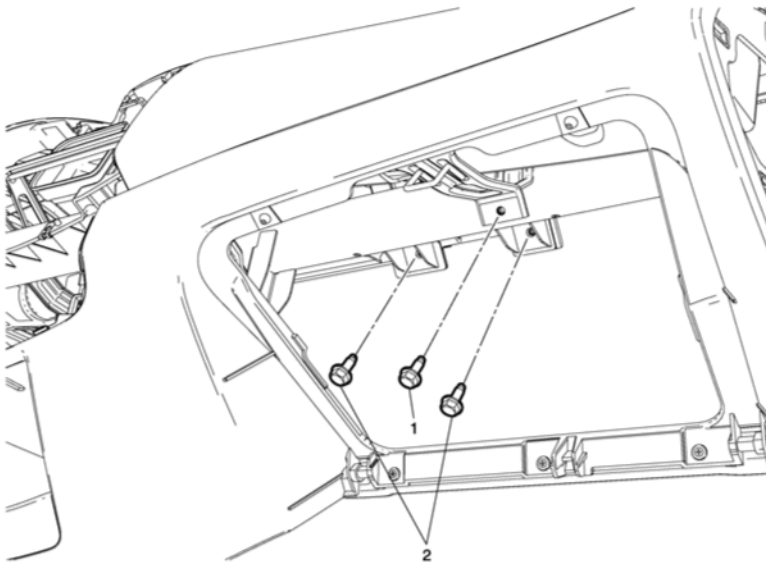

14.

[Click here for full size](#)

15. Remove the instrument panel bolts (1) and the passenger airbag module bracket bolts (2).

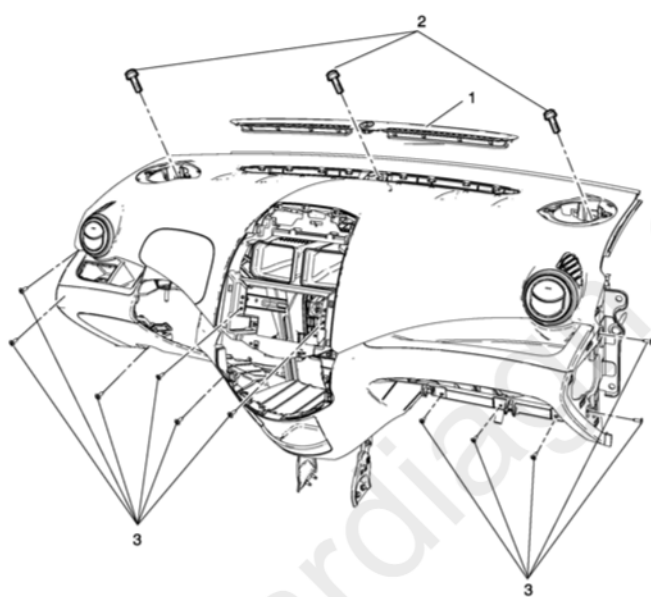

16.

[Click here for full size](#)

17. Disconnect the passenger airbag module electrical connector.


18. Remove both front speakers. Refer to [Radio Front Speaker Replacement](#).

19. Remove the instrument panel defroster grille(1).

20. Remove the instrument panel bolts(2).

21. Remove the instrument panel screws(3).


cardiagn.com

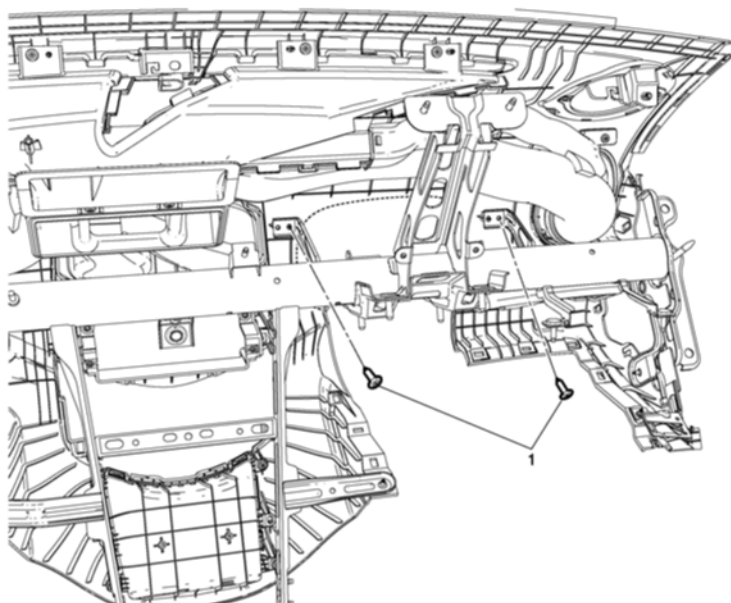


cardiagn.com

23. Remove the instrument panel screw (1) behind the instrument panel of driver side.
24. Remove the instrument panel assembly from the vehicle.
25. Transfer all necessary components from the instrument panel assembly.


Installation Procedure

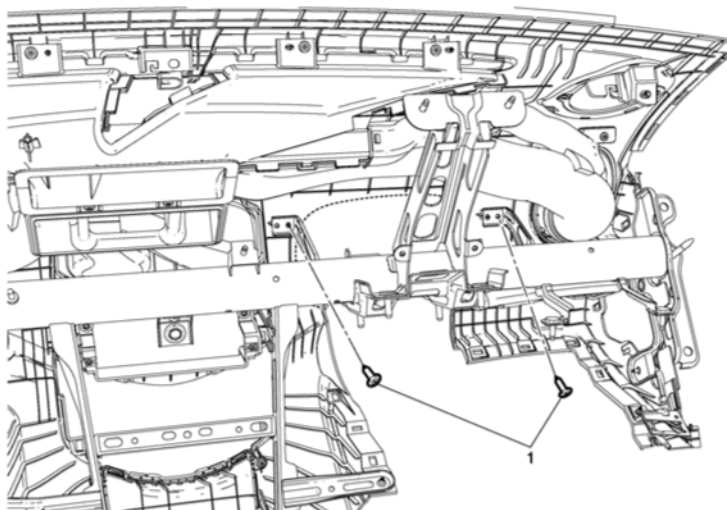




cardiagn.com

1. [Click here for full size](#)
2. Install all necessary components on the instrument panel assembly.
3. Install the instrument panel assembly on the vehicle.
4. Caution:
Refer to [Fastener Caution](#).
5. Install the instrument panel screw (1) behind the I/P of the driver side and tighten to 2.5 N-m (22 lb-in).

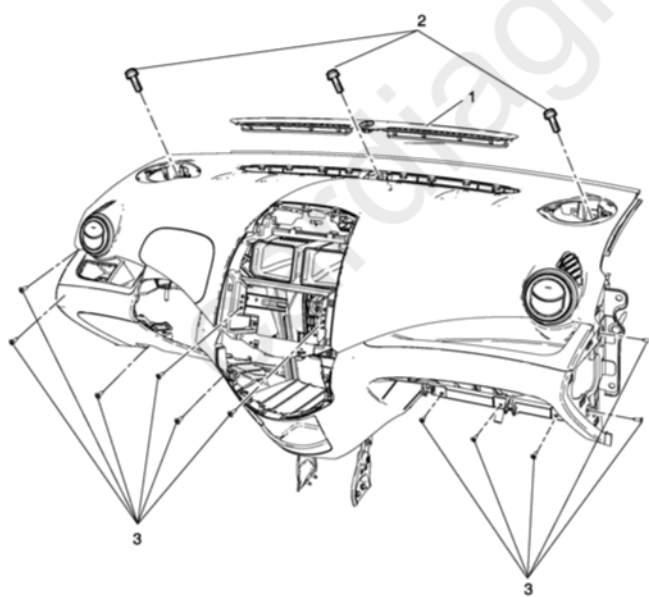

6. [Click here for full size](#)
7. Install the instrument panel screws (3) and tighten to 2.5 N-m (22 lb-in).
8. Install the instrument panel bolts (2) and tighten to 5 N-m (44 lb-in).
9. Install the instrument panel defroster grille (1).
10. Install both front speakers. Refer to [Radio Front Speaker Replacement](#).

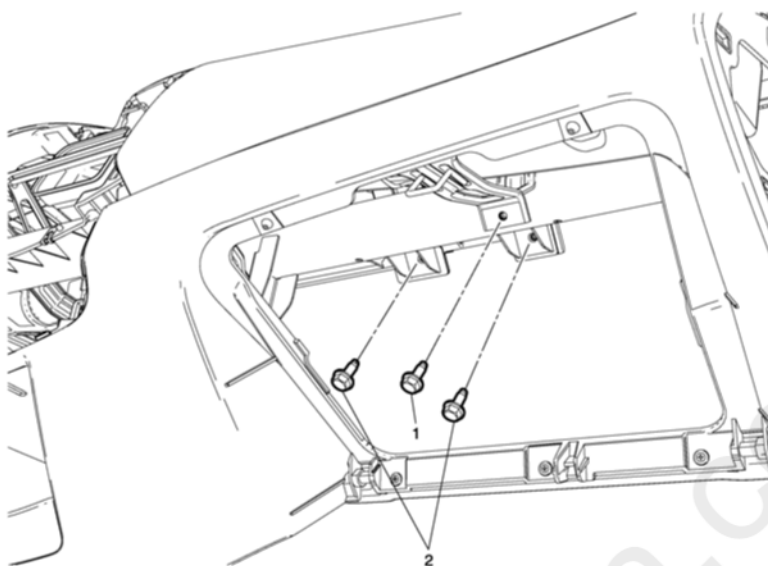


11.


[Click here for full size](#)

12. Connect the passenger airbag module electrical connector.

13. Install the instrument panel bolts (1) and tighten to 2.5 N-m (22 lb-in).

14. Install the passenger airbag module bracket bolts (2) and tighten to 11.5 N-m (8 lb-ft).

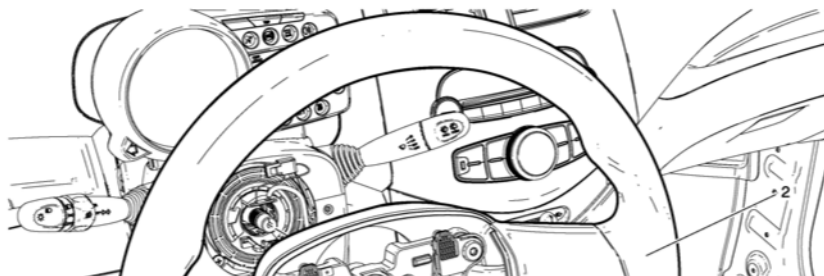

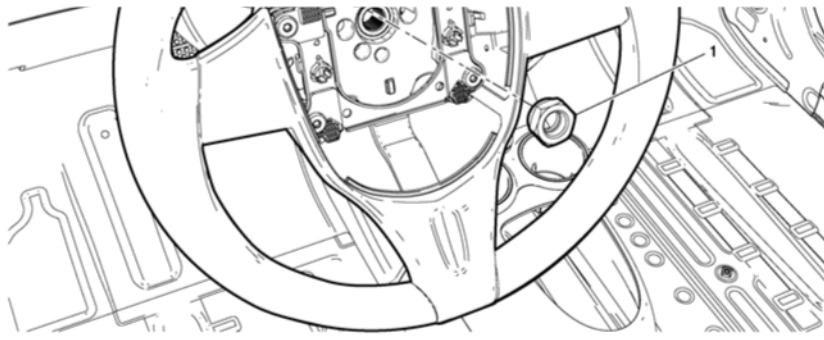

15.

[Click here for full size](#)

16. Install the steering wheel. Refer to [Steering Wheel Replacement](#).
17. Install the steering column opening filler. Refer to [Steering Column Opening Filler Replacement](#).
18. Install the instrument panel multifunction switch. Refer to [Instrument Panel Multifunction Switch Replacement](#).
19. Install the windshield garnish molding. Refer to [Windshield Garnish Molding Replacement](#).
20. Install the instrument panel compartment. Refer to [Instrument Panel Compartment Replacement](#).
21. Install both instrument panel outer trim covers. Refer to [Instrument Panel Outer Trim Cover Replacement](#).

22. Install the instrument cluster. Refer to [Instrument Cluster Replacement](#).
23. Install the steering column lower trim cover. Refer to [Steering Column Lower Trim Cover Replacement](#).
24. Install the heater and air conditioning control. Refer to [Heater and Air Conditioning Control with Cable Control Replacement](#).
25. Install the radio assembly. Refer to [Radio Replacement](#).
26. Install the floor console assembly. Refer to [Front Floor Console Replacement](#).
27. Enable the SIR system. Refer to [SIR Disabling and Enabling](#).


cardiagn.com


1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Instrument Panel Tie Bar Replacement

Removal Procedure


1. Remove the windshield wiper motor. Refer to [Windshield Wiper Motor Replacement](#).

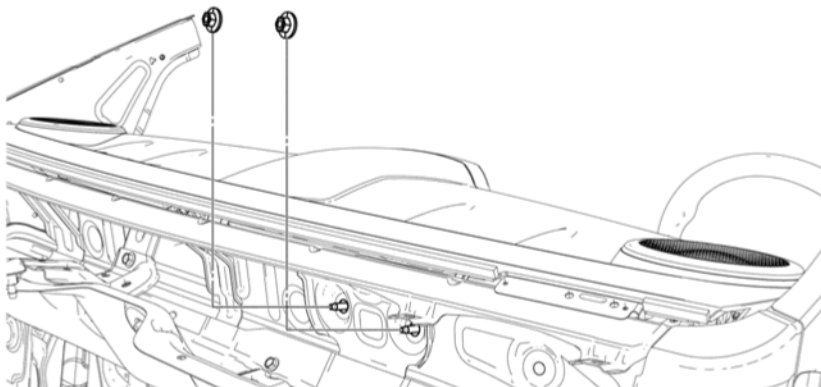

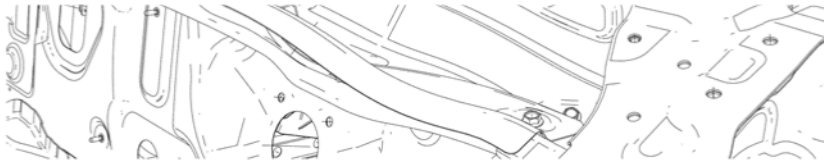

cardiagn.com

2. [Click here for full size](#)
3. Remove the instrument panel tie bar to dash panel nuts.
4. Remove the instrument panel assembly. Refer to [Instrument Panel Assembly Replacement](#).

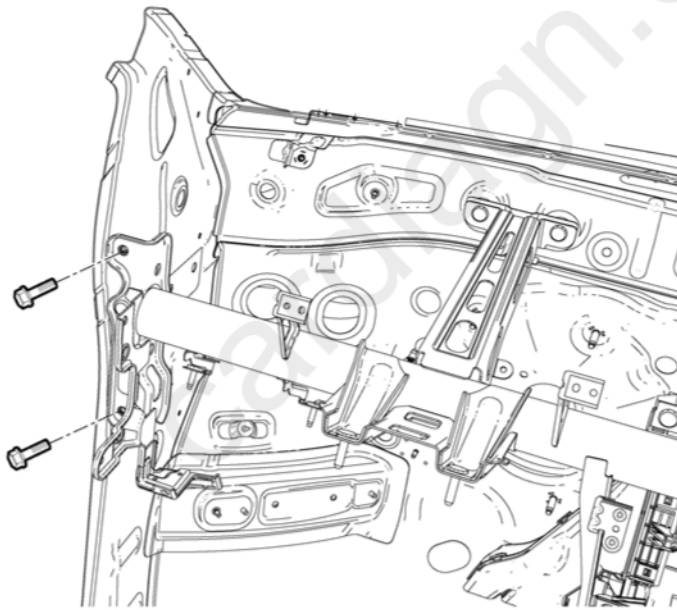


5.

[Click here for full size](#)

6. Remove the instrument panel wiring harness from the instrument panel tie bar.

7. Remove the instrument panel tie bar to side body panel bolts.

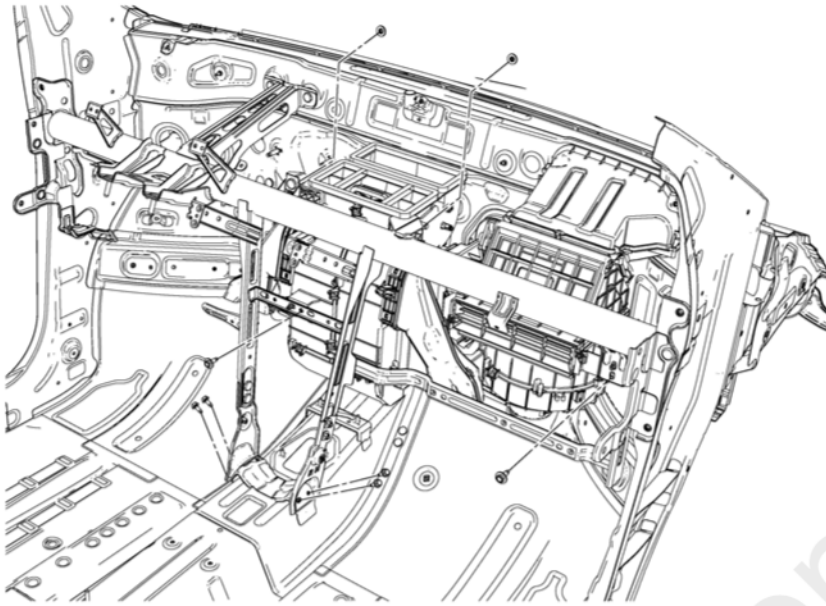

8.


[Click here for full size](#)


9. Remove the instrument panel tie bar to air conditioning evaporator and blower module assembly bolts and nuts.

10. Remove the instrument panel tie bar to floor panel bolts.

11. Remove the instrument panel tie bar assembly from the vehicle.


Installation Procedure

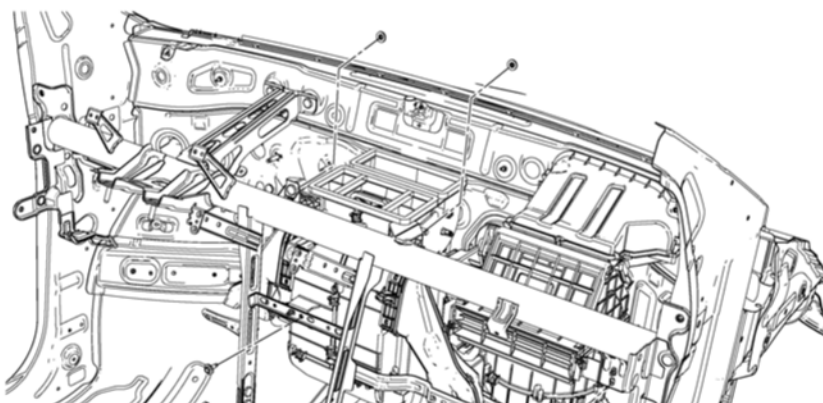

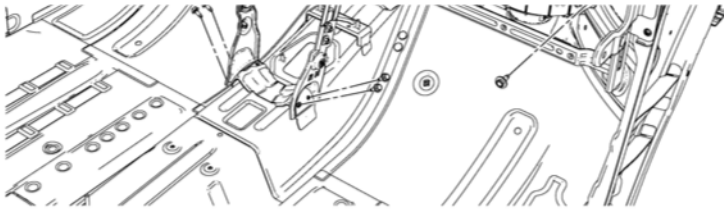

cardiagn.com


1. [Click here for full size](#)
2. Install the instrument panel tie bar assembly on the vehicle.
3. Caution:
Refer to [Fastener Caution](#).
4. Install the instrument panel tie bar to air conditioning evaporator and blower module assembly bolts and nuts and tighten to 6â€%N-m (53â€%lbâ€%in).
5. Install the instrument panel tie bar to floor panel bolts and tighten to 8â€%N-m (71â€%lbâ€%in).

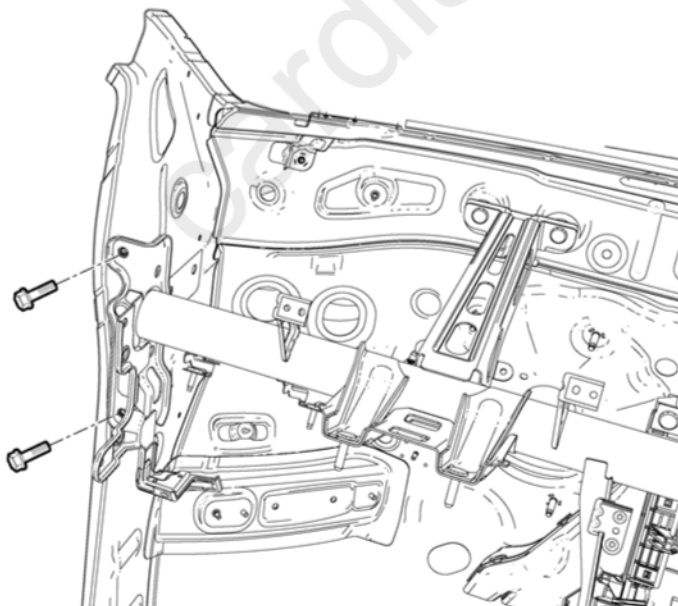

6.

[Click here for full size](#)

7. Install the instrument panel tie bar to side body panel bolts and tighten to 22â€%N-m (16â€%lbâ€%ft).
8. Install the instrument panel wiring harness on the instrument panel tie bar.

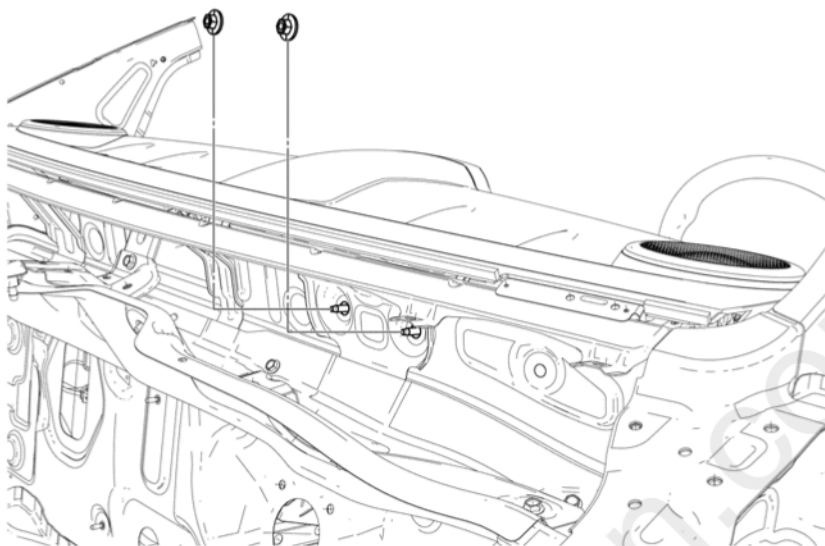

9.


[Click here for full size](#)

10. Install the instrument panel tie bar to dash panel nuts and tighten to 8â€%N-m (71â€%lbâ€%in).
11. Install the windshield wiper motor. Refer to [Windshield Wiper Motor Replacement](#).
12. Install the instrument panel assembly. Refer to [Instrument Panel Assembly Replacement](#).

cardiagn.com

- 1. BODY HARDWARE AND TRIM
- 2. INSTRUMENT PANEL AND CONSOLE TRIM
- 3. REPAIR INSTRUCTIONS
- 4.

Instrument Panel Tie Bar Brace Replacement

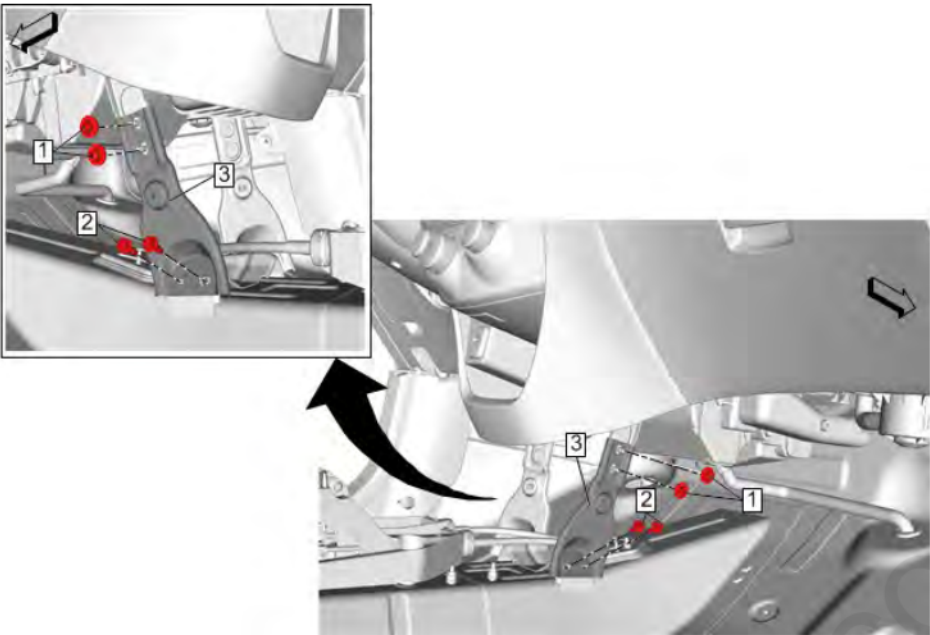

[Click here for full size](#)


Callout	Component Name
Preliminary Procedure	
Front Floor Console Replacement	
1	Instrument Panel Tie Bar Brace Nut[4x] Caution: Refer to Fastener Caution . Tighten 8>N-m (71 lb in)
2	Instrument Panel Tie Bar Brace Bolt[4x] Tighten 8>N-m (71 lb in)
3	Instrument Panel Tie Bar Brace Assembly

Related Part Information

Part Name	Catalog Name	Part Code
Instrument Panel Tiebar Brace	BRACE,I/P TIEBAR	0848A
Instrument Panel Tie Bar Brace	BRACE,I/P TIE BAR	0848B

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. REPAIR INSTRUCTIONS
- 4.

Front Floor Console Replacement

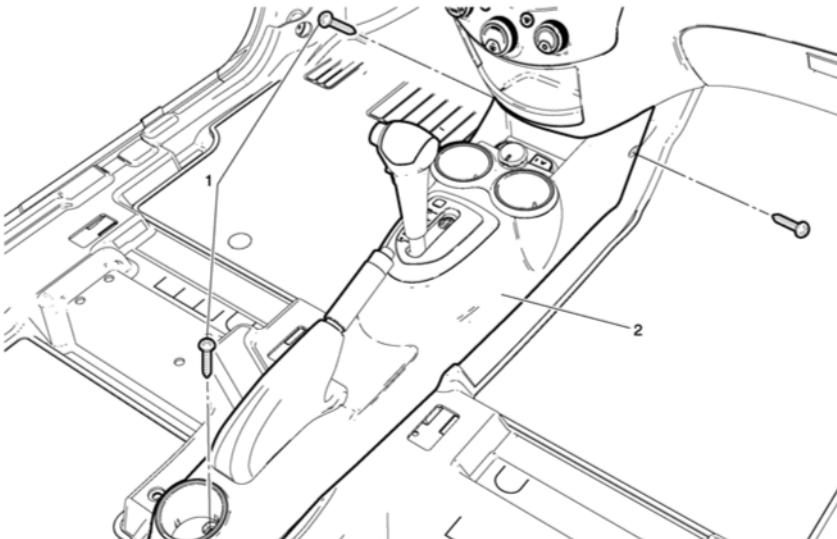



cardiagn.com

[Click here for full size](#)

Callout	Component Name
1	Floor Console Screw (Qty:â€%3) Caution: Refer to Fastener Caution Tighten 2.5â€%N-m (23â€%lbâ€%in)
2	Floor Console Assembly Procedure Disconnect the electrical connections.

Related Part Information

Part Name	Catalog Name	Part Code
-----------	--------------	-----------

Part Name	Catalog Name	Part Code
Front Floor Console	CONSOLE,F/FLR	1795A
Front Floor Console	CONSOLE,F/FLR	1798A
Front Floor Console	CONSOLE,F/FLR(W/A/RST & IND DIAL)	1799A
Front Floor Console	CONSOLE,F/FLR(W/O IND DIAL)	1800A
Front Floor Console	CONSOLE,F/FLR(W/IND DIAL)	1800B
Front Floor Console	CONSOLE,F/FLR	1800C
Front Floor Console	CONSOLE,F/FLR	1825A
Front Floor Console	CONSOLE PKG,F/FLR	3950A
Front Floor Console	CONSOLE,F/FLR	3950B
Front Floor Console	CONSOLE,F/FLR(W/A/RST & IND DIAL)	3951A
Front Floor Console	CONSOLE,F/FLR(W/IND DIAL)	3951B
Front Floor Console	CONSOLE,F/FLR	3951C
Front Floor Console	CONSOLE,F/FLR	3951D

cardiagn.com

Specifications

cardiagn.com

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. SPECIFICATIONS
- 4.

Fastener Specifications

Reusable Threaded Fastener Tightening Specifications

Application	Specification
	Metric (English)
Note:	
All fasteners listed in this table can be reused after removal.	
Instrument Panel Bolts to Tie Bar	2.5N-m (22 lb in)
Instrument Panel Bolts to Passenger Airbag Module Bracket	11.5N-m (102 lb in)
Instrument Panel Bolts to Dash Panel	5N-m (44 lb in)
Instrument Panel Screws	2.5N-m (22 lb in)
Instrument Panel Tie Bar Bolts and Nuts to Air Conditioning Evaporator and Blower Module	6N-m (53 lb in)
Instrument Panel Tie Bar Bolts to Floor Panel	8N-m (71 lb in)
Instrument Panel Tie Bar Bolts to Side Body Panel	22N-m (16 lb ft)
Steering Column Nuts	25N-m (18 lb ft)

Special Tools and Equipment

cardiagn.com

1. BODY HARDWARE AND TRIM
2. INSTRUMENT PANEL AND CONSOLE TRIM
3. SPECIAL TOOLS AND EQUIPMENT
- 4.

Special Tools

Illustration	Tool Number/ Description
 Click here for full size	BO-569-A KM-569-A Plug Lifter
 Click here for full size	DT-6459-B DW-240-090 MKM-J-6459-B Torque Wrench
 Click here for full size	GE-604-D MKM-604-D Torx Bit and Socket Set