


Sound system , (8RE),(8RL),(9VD)

From July 2018




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

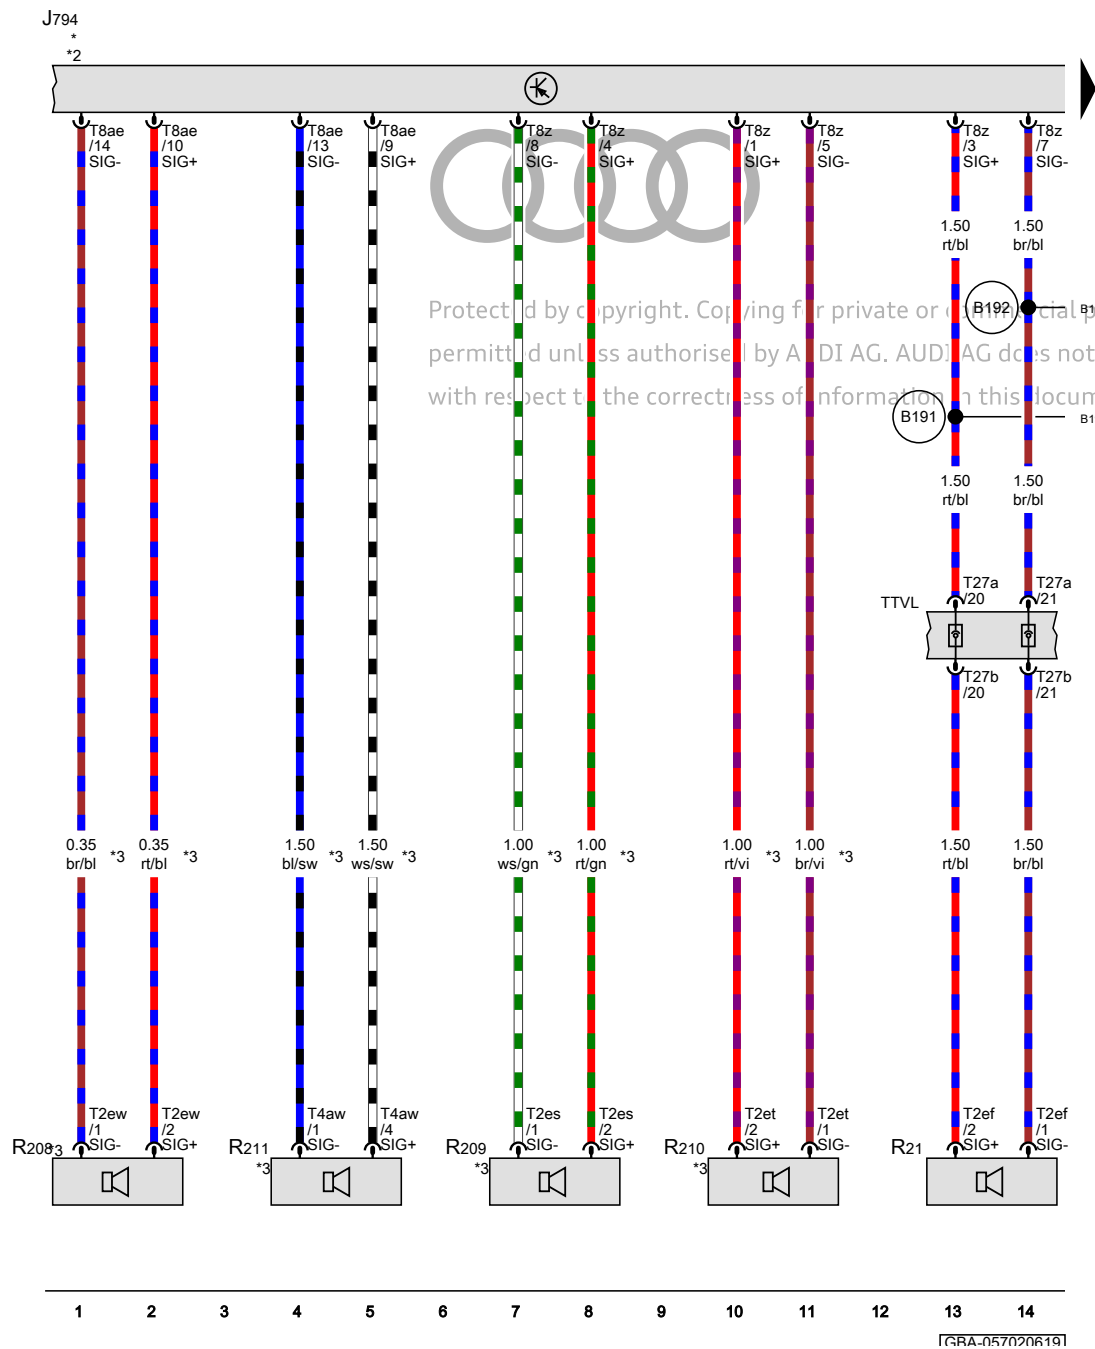

**Control unit 1 for information electronics, Front left bass
loudspeaker, Centre loudspeaker, Left effect loudspeaker,
Right effect loudspeaker, Subwoofer**

- | | |
|------|---|
| J794 | Control unit 1 for information electronics |
| R21 | Front left bass loudspeaker |
| R208 | Centre loudspeaker |
| R209 | Left effect loudspeaker |
| R210 | Right effect loudspeaker |
| R211 | Subwoofer |
| T2ef | 2-pin connector, black |
| T2es | 2-pin connector, black |
| T2et | 2-pin connector, black |
| T2ew | 2-pin connector, black |
| T4aw | 4-pin connector, black |
| T8ae | 8-pin connector, black |
| T8z | 8-pin connector, brown |
| T27a | 27-pin connector, black |
| T27b | 27-pin connector, black |
| TTVL | Coupling point for front left door |
| B191 | Connection (positive, front left loudspeaker), in interior wiring harness |
| B192 | Connection (negative, front left loudspeaker), in interior wiring harness |
| * | see applicable current flow diagram for radio/navigation system |
| *2 | see applicable current flow diagram for aerials |
| *3 | According to equipment |

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

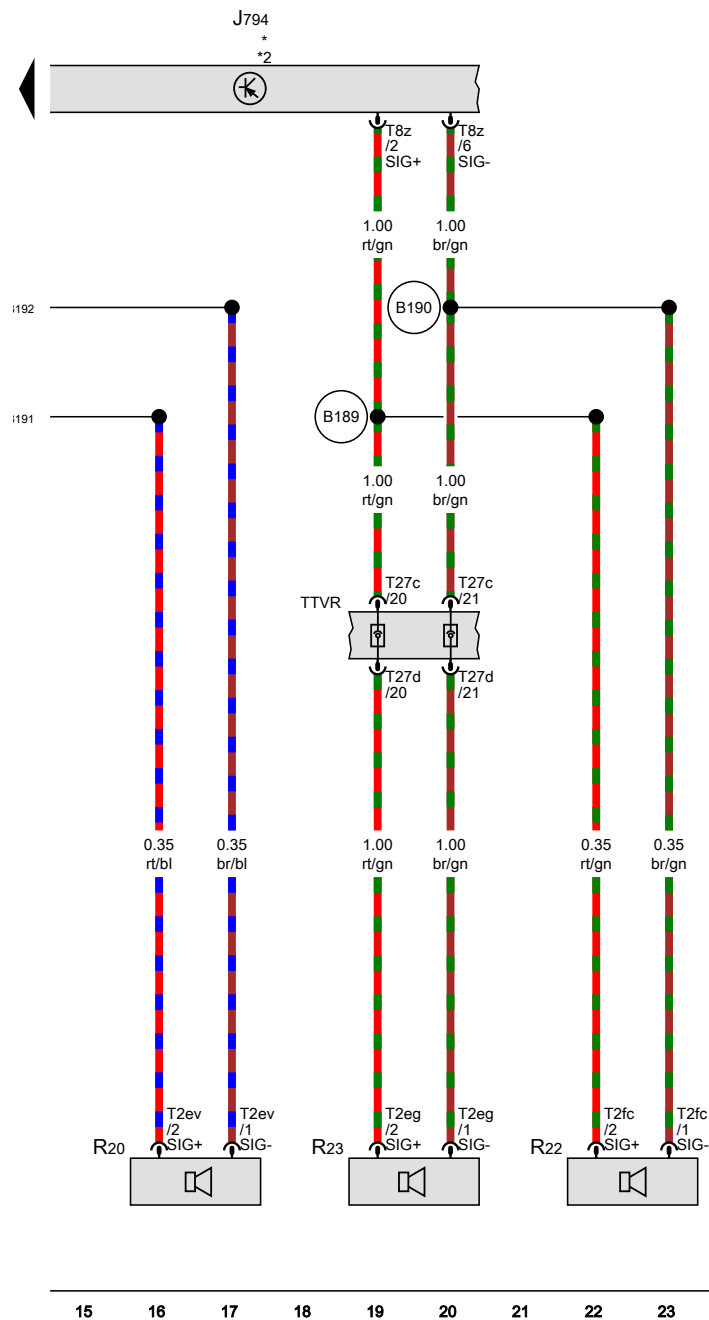

Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker

- J794 Control unit 1 for information electronics
- R20 Front left treble loudspeaker
- R22 Front right treble loudspeaker
- R23 Front right bass loudspeaker
- T2eg 2-pin connector, black
- T2ev 2-pin connector, black
- T2fc 2-pin connector, black
- T8z 8-pin connector, brown
- T27c 27-pin connector, black
- T27d 27-pin connector, black
- TTVR Coupling point for front right door

- B189 Connection (positive, front right loudspeaker), in interior wiring harness
- B190 Connection (negative, front right loudspeaker), in interior wiring harness
- B191 Connection (positive, front left loudspeaker), in interior wiring harness
- B192 Connection (negative, front left loudspeaker), in interior wiring harness

- * see applicable current flow diagram for radio/navigation system
- *2 see applicable current flow diagram for aerials



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink