


Speedometer/Trip Meter/Odometer

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected	Blown No. 5 (15 A) fuse (In the under-dash fuse box)	Speedometer	Odometer	Trip meter	Printed circuit board A	Printed circuit board B	Vehicle speed sensor (VSS) input test	Vehicle speed sensor (VSS) is not installed correctly	Disconnected board-to-board connector	Poor ground	Open circuit, loose or disconnected terminals
Symptom											
Speedometer works, but deflection error is great.					2			1			
Odometer and trip meter work, but speedometer does not.		1			2						
Speedometer and trip meter work, but odometer does not.			2		4	3			1		
Speedometer and odometer work, but trip meter does not.				1	2						
Speedometer works, but odometer and trip meter do not.					1						
Speedometer, odometer and trip meter do not work.	1				3		2			G401 G402 G403	YEL

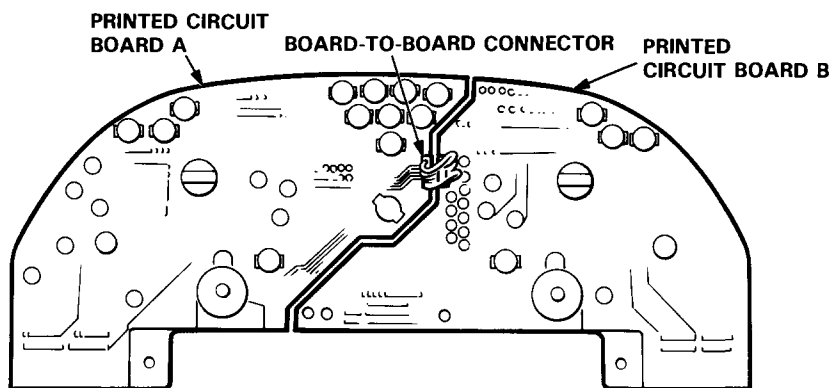

View from the back of the gauge assembly