




Climate Control Unit Input/Output Signals

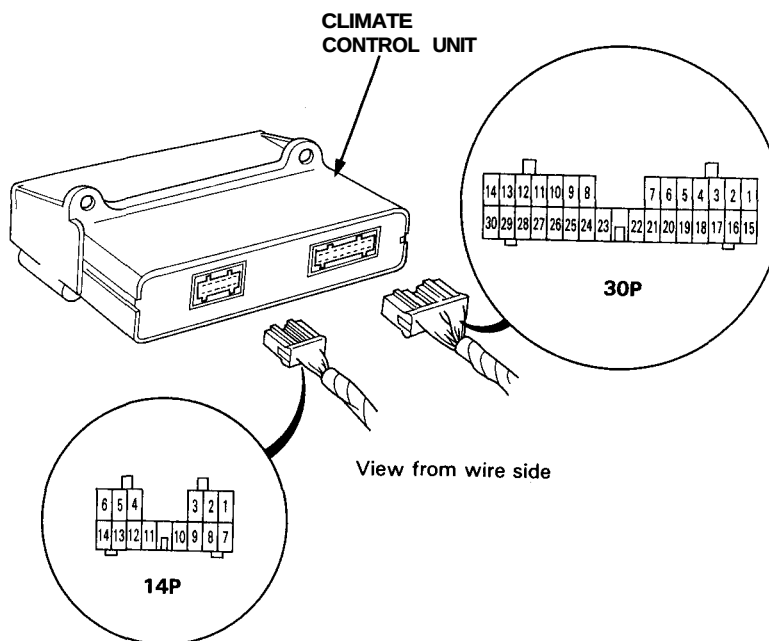

30P:

No.	Wire Color	Signal	No.	Wire Color	Signal
1	GRN/BLU	Air Mix Control Motor (COOL ⊕)	16	RED/BLU	Mode DEF
2	RED/YEL	Mode VENT	17	LT GRN/YEL	Recirc. (⊕)
3	BLU/ORN	Fresh (⊕)	18		
4			19	YEL/BLU	Vent Motor (OPEN ⊕)
5	YEL/BLK	Vent Motor (CLOSE ⊕)	20	GRY	MODE 1
6	GRN/WHT	MODE 3	21	PNK/BLK	MODE 2
7	BLU	MODE 4	22	BLK/BLU	Blower Feedback
8	LT GRN/BLK	Power Transistor Base	23		
9	LT GRN/RED	RECIRC. Position Signal	24	BLK	GND
10	BLU/GRN	FRESH Position Signal	25	BLK	GND
11	RED/BLK	Light Switch	26		
12	ORN/WHT	Blower High Relay	27	YEL/BLK	IG2
13	GRY/BLK	A/C Signal	28	YEL/BLK	IG2
14	BRN/YEL	Asperator Fan	29		
15	GRN/BLK	Air Mix Control Motor (HOT ⊕)	30	WHT/YEL	+B

14P:

No.	Wire Color	Signal	No.	Wire Color	Signal
1			8	BRN	Outside Air Temperature Sensor
2	ORN/BLU	Sunlight Sensor	9	RED/GRN	In-car Temperature Sensor
3	LT GRN	Evaporator Temperature Sensor	10		
4	GRN	Air Mix Control Motor Potential	11	GRN/RED	+5 V
5			12	RED	Illumination Control
6	YEL/WHT	Vent Motor Potential	13	GRN	Engine Revolution Pulse
7	LT BLU	Heater Core Temperature Sensor	14	BLK/GRN	Sensor GND