

2006 Acura MDX
2003-06 ACCESSORIES & EQUIPMENT Consoles - MDX

2003-06 ACCESSORIES & EQUIPMENT

Consoles - MDX



CD STORAGE BOX REMOVAL AND INSTALLATION

NOTE: **Take care not to scratch the console.**

1. Wrap the front divider (A) with a shop towel, then grip it with a pair of pliers. Pull the CD storage box (B) up to detach the clips, then remove it.

Fastener Locations

▷ : Clip, 4

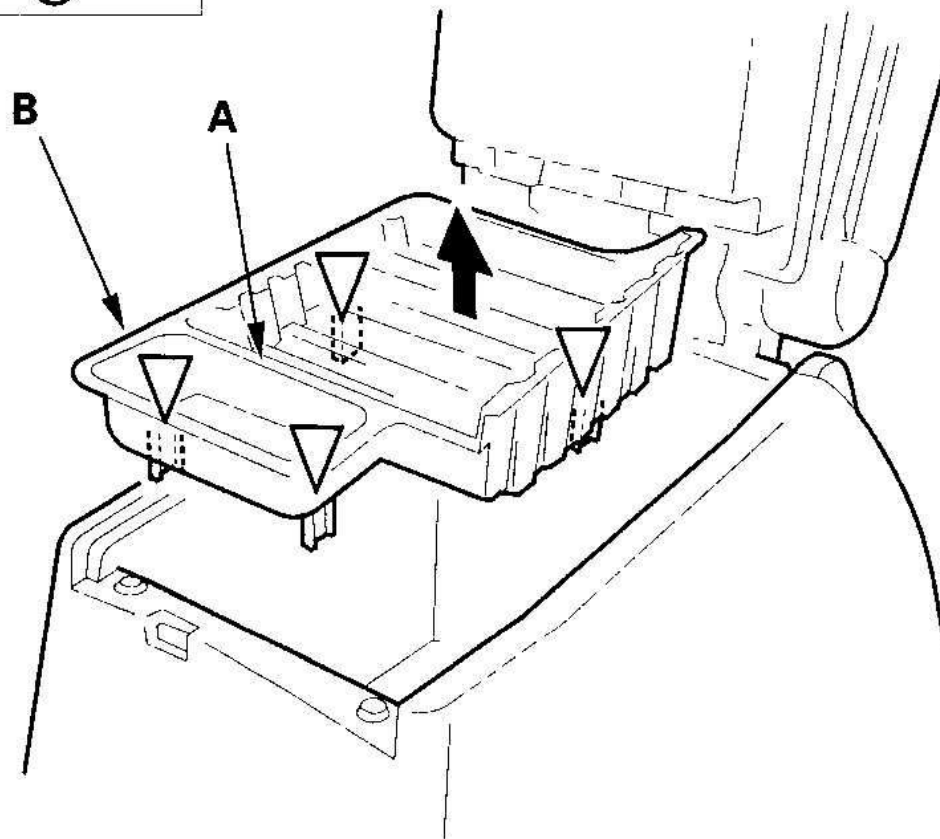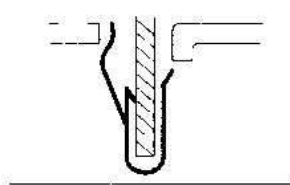

G03641646

Fig. 1: Pulling CD Storage Box

Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Install the CD storage box in the reverse order of removal, and push down on the clip portions of the box securely.




CONSOLE ARMREST REMOVAL/ INSTALLATION

NOTE: Take care not to scratch the console and armrest.

1. Remove the console rear trim (see step 6 in CENTER CONSOLE REMOVAL/INSTALLATION).
2. Remove the screws (A), then remove the rear hinge cover (B). Remove the hinge mounting screws (C).

Fastener Locations

A ► : Screw, 2 **C ► : Screw, 2**

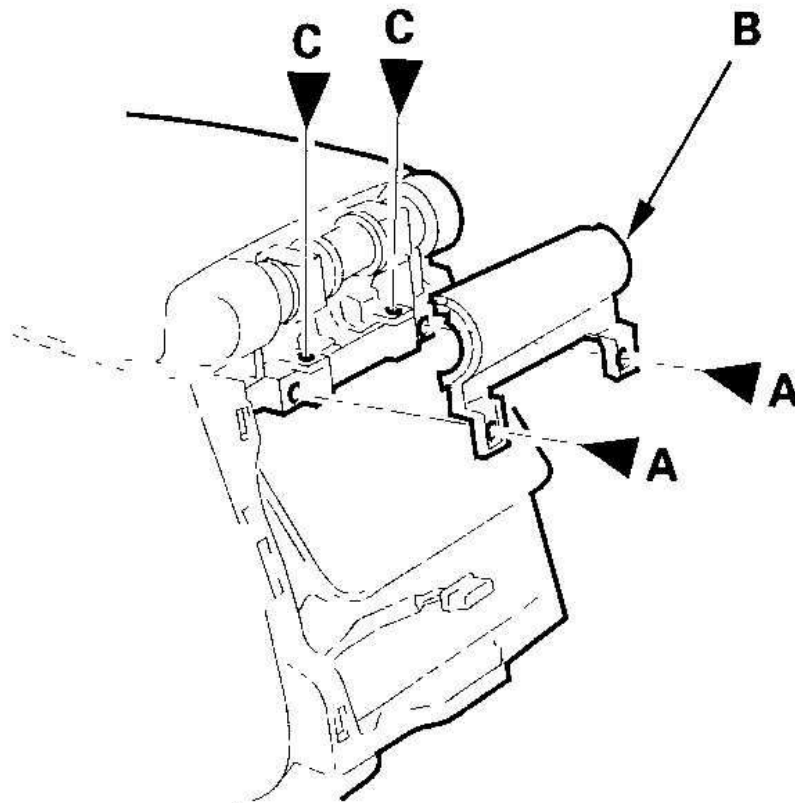

2006 Acura MDX

2003-06 ACCESSORIES & EQUIPMENT Consoles - MDX


Fig. 2: Removing Rear Hinge Cover

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Open the armrest (A) and remove the hinge mounting screws, then remove the armrest.

Fastener Locations

► : Screw, 2

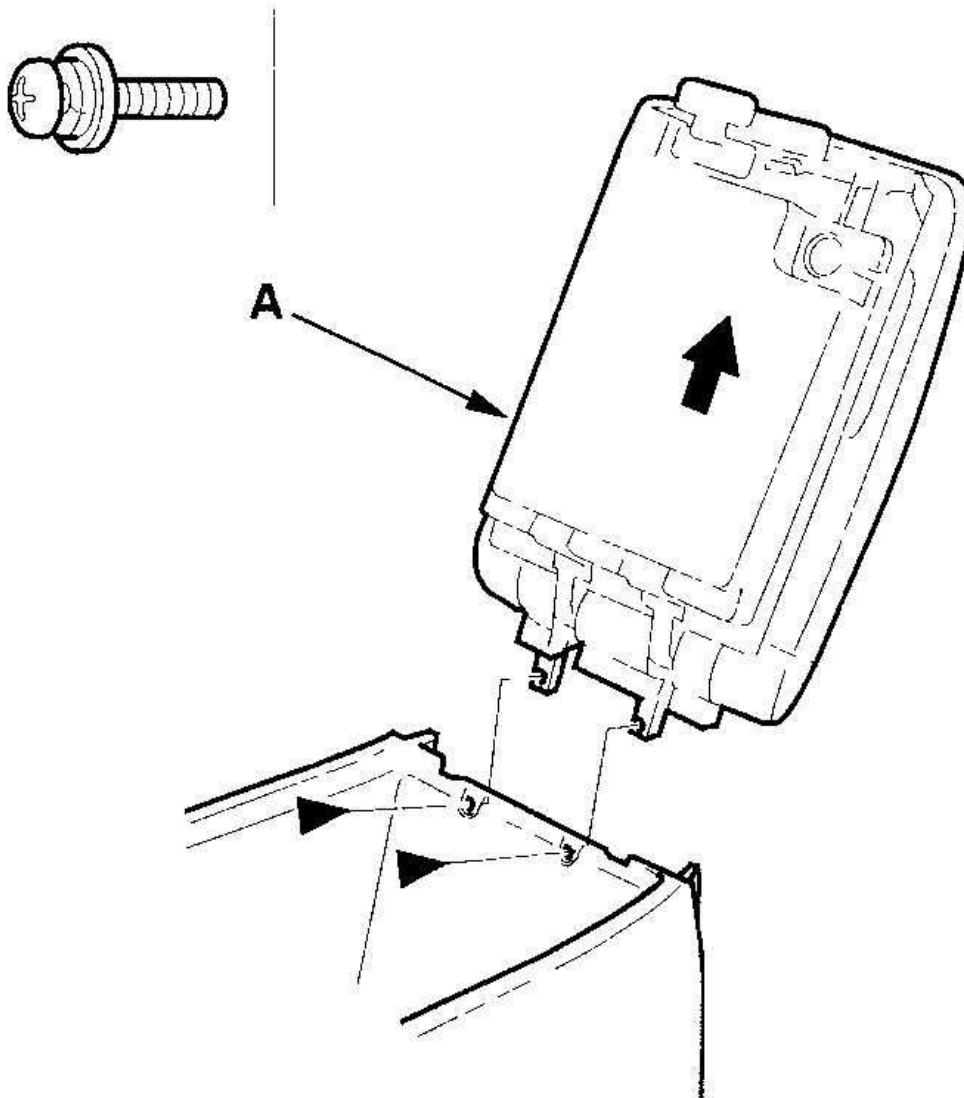

G03641648

Fig. 3: Opening And Removing Armrest
Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Install the armrest in the reverse order of removal.

CONSOLE ARMREST DISASSEMBLY/REASSEMBLY

NOTE: Apply multipurpose grease to the spring of the armrest hinge.

Fig. 4: Disassembly/Reassembly Of Console Armrest
Courtesy of AMERICAN HONDA MOTOR CO., INC.

CENTER CONSOLE REMOVAL/INSTALLATION

Special Tools Required

2006 Acura MDX

2003-06 ACCESSORIES & EQUIPMENT Consoles - MDX

KTC trim tool set SOJATP2014

NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.
- Take care not to scratch the front seat, dashboard, and related parts.

1. Remove the console panel (A).

-1 Detach the clips (B) by pulling the beverage holder (C) up, then remove it.

-2 Remove the shift indicator trim ring (D).

-3 Gently detach the clips (E), then remove the console panel.

-4 '04-06 models disconnect the footwell light connector (F) and ambient light connector (G).

2006 Acura MDX

2003-06 ACCESSORIES & EQUIPMENT Consoles - MDX

cardiagn.com



Fig. 5: Removing Console Panel

Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Without rear entertainment system: Detach the clips by hand, and remove the center panel lower trim (A).

Fastener Locations

▷ : Clip, 4

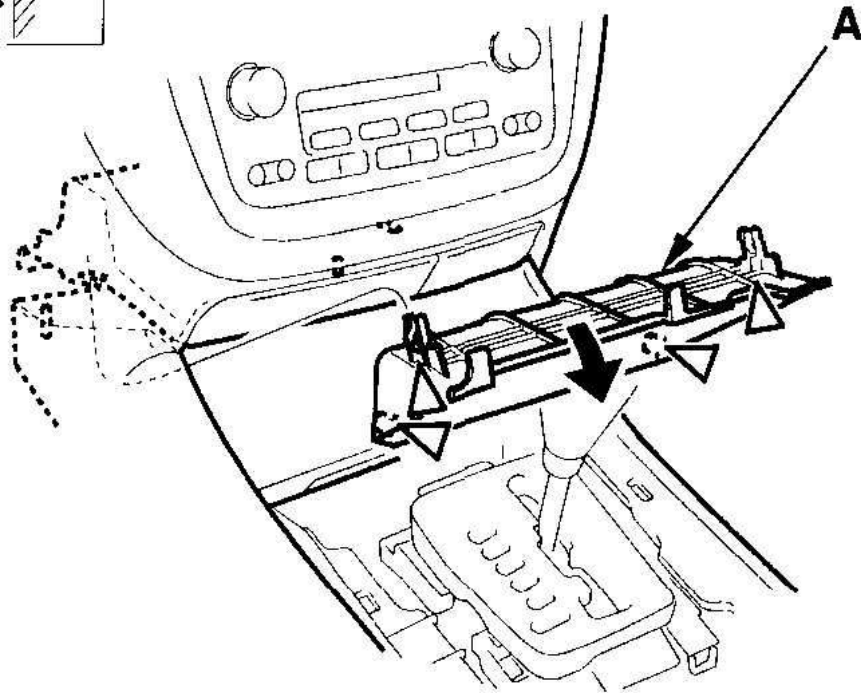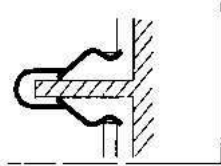

G03641651



Fig. 6: Removing Center Panel Lower Trim

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. With rear entertainment system: Remove the coin pocket (A). Pull the DVD panel (B) out to detach the clips, then remove the panel.

Fastener Locations

▷ : Clip, 4

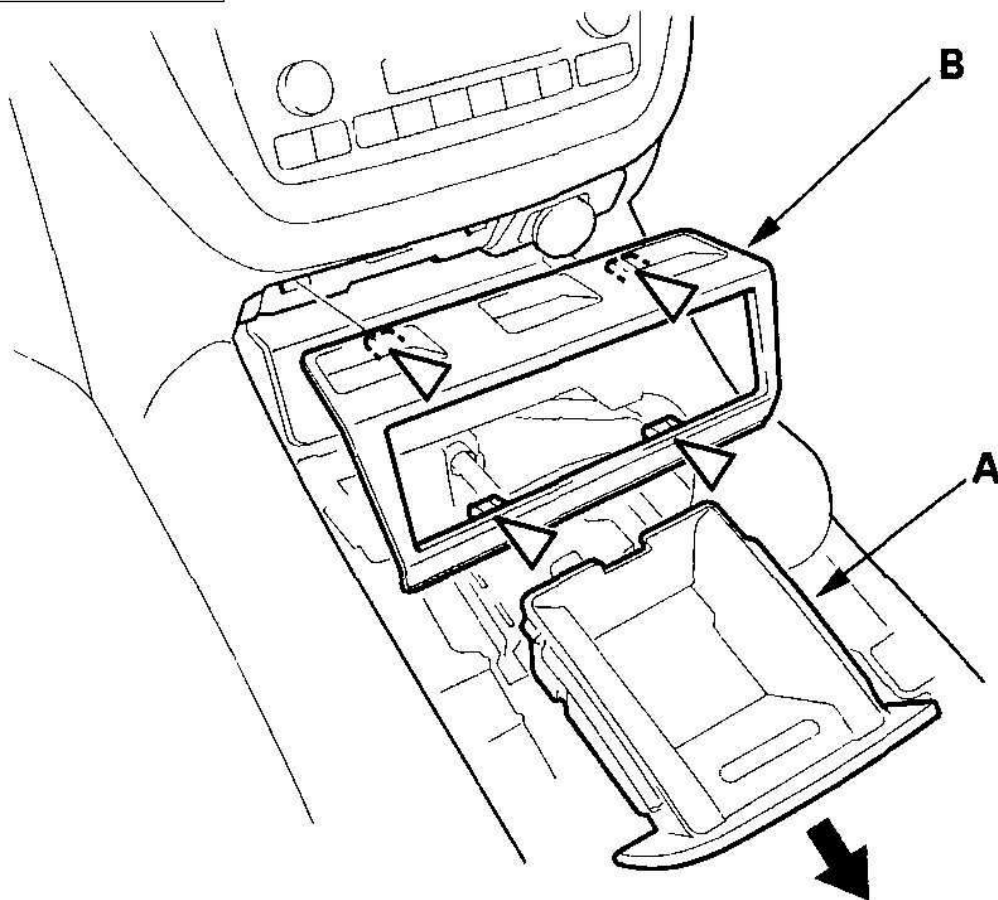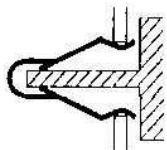

G03641652



Fig. 7: Removing Coin Pocket

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Remove both front seat riser covers (see **FRONT SEAT REMOVAL/INSTALLATION**).
5. Detach the clips and release the hooks (A), then remove the driver's console side trim (B) and passenger's console side trim (C).

Fastener Locations

▷ : Clip, 15

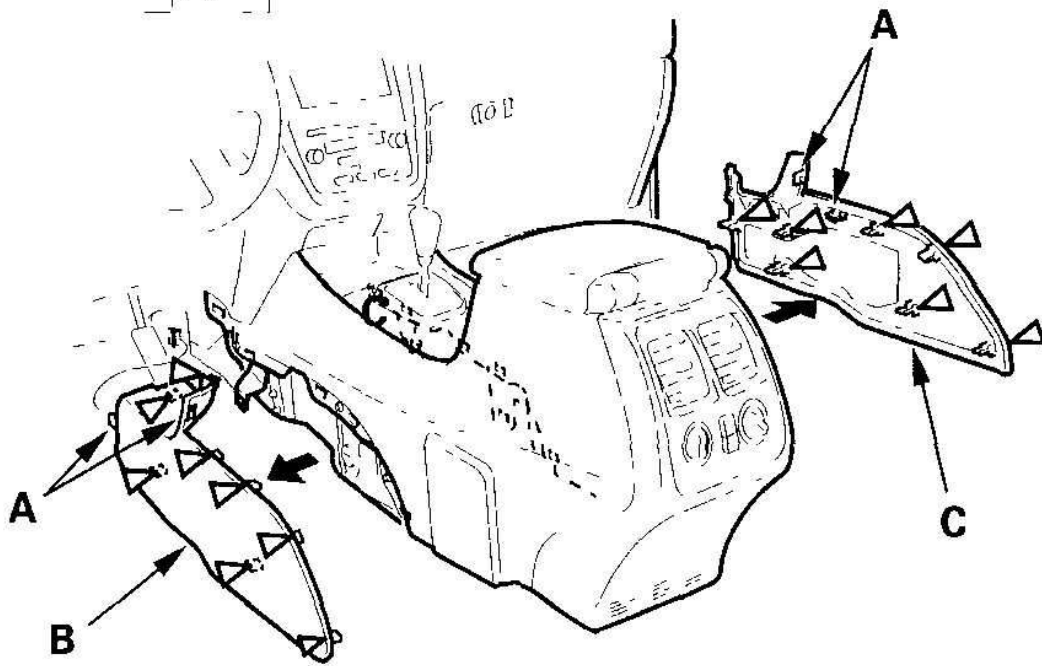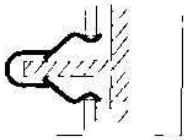

G03641653



Fig. 8: Detaching Clips And Release Hooks

Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. Remove both vents (A). Reach into the air vents holes as shown, grab the console rear trim (B) and pull it out. Then disconnect the rear heater-A/C passenger's control panel-unit connector (C).

Fastener Locations

▷ : Clip, 6

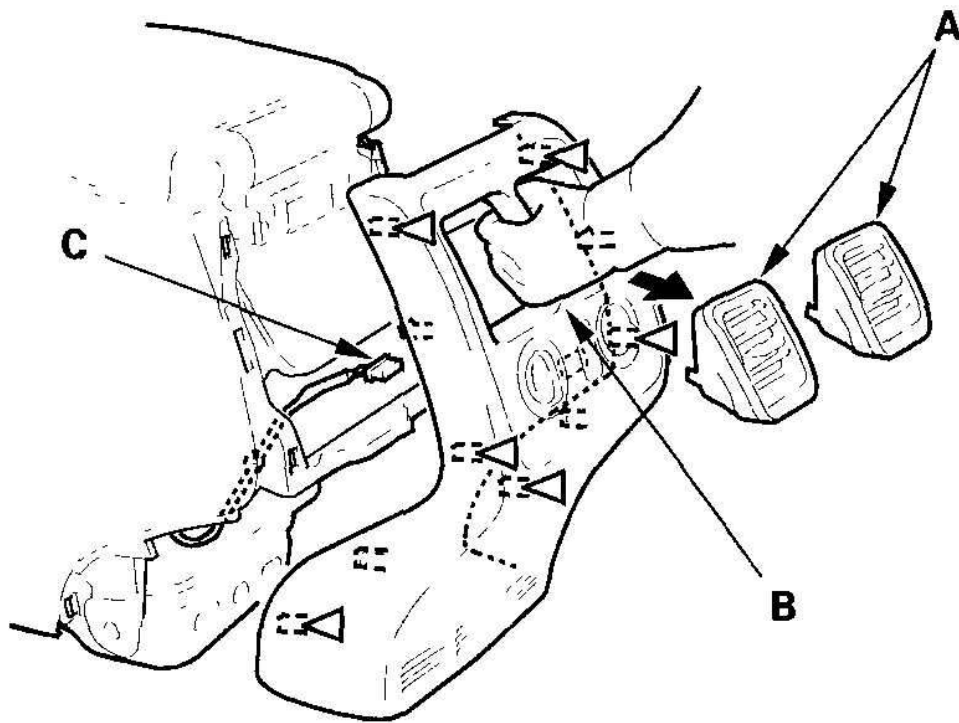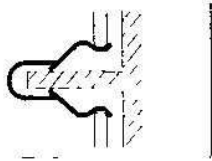

G03641654

Fig. 9: Removing Vents





Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Remove the center console (A).
 - 1 On both sides, remove the bolts (B) and screws (C).
 - 2 Detach the harness clip (D).
 - 3 Pull the center console back to detach the clips (E).
 - 4 While lifting up on the console, disconnect the accessory socket subharness connector (F), and remove

the console.

Fastener Locations

B ► : Bolt, 2 **C** ► : Screw, 6 **E** ► : Clip, 2

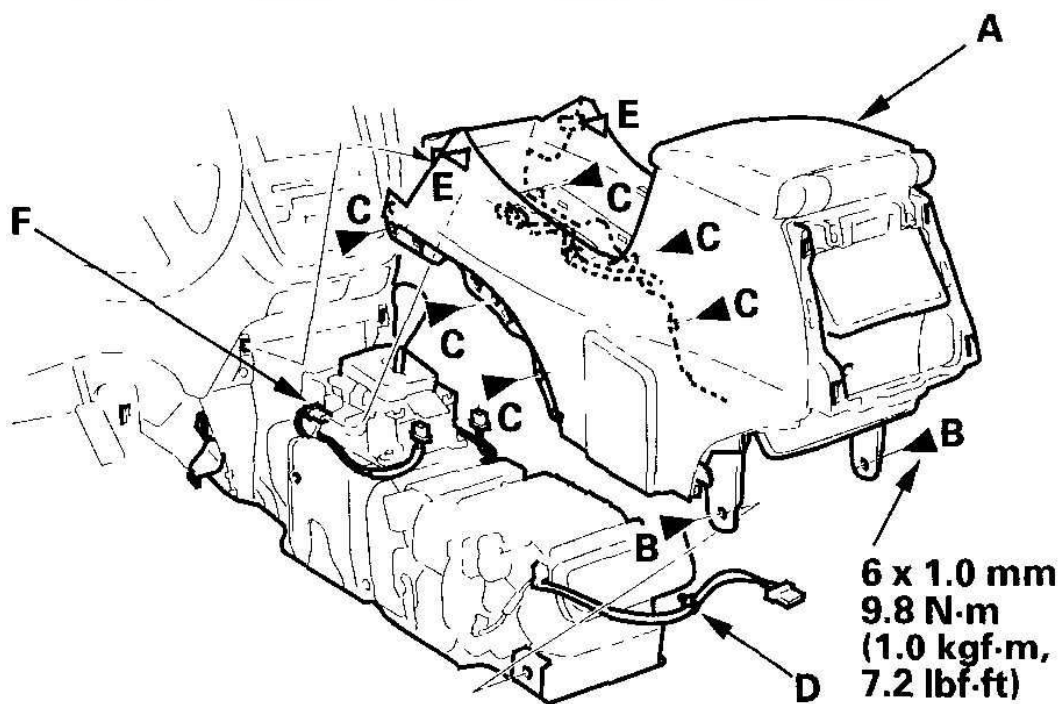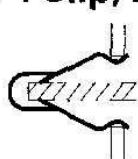

G03641655

Fig. 10: Removing Center Console

Courtesy of AMERICAN HONDA MOTOR CO., INC.

8. Install the center console in the reverse order of removal, and note these items:
 - Replace any damaged clips.
 - Make sure all the connectors are plugged in properly.
 - Push the clips into place securely.